

CHAPTER

56

WINDOWS



737-600/700/800/900
FAULT ISOLATION MANUAL

CHAPTER 56
WINDOWS

Page	Date	COC	Page	Date	COC	Page	Date	COC
EFFECTIVE PAGES								
1	Jun 15/2009							
2	BLANK							
56-HOW TO USE THE FIM								
1	Feb 10/2005							
2	Feb 10/2005							
3	Jun 10/2006							
4	Oct 10/2006							
5	Feb 10/2005							
6	Feb 10/2005							
56-FAULT CODE INDEX								
R 101	Jun 15/2009							
102	BLANK							
56-11 TASKS								
R 201	Jun 15/2009							
202	BLANK							


A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated

56-EFFECTIVE PAGES



737-600/700/800/900

FAULT ISOLATION MANUAL

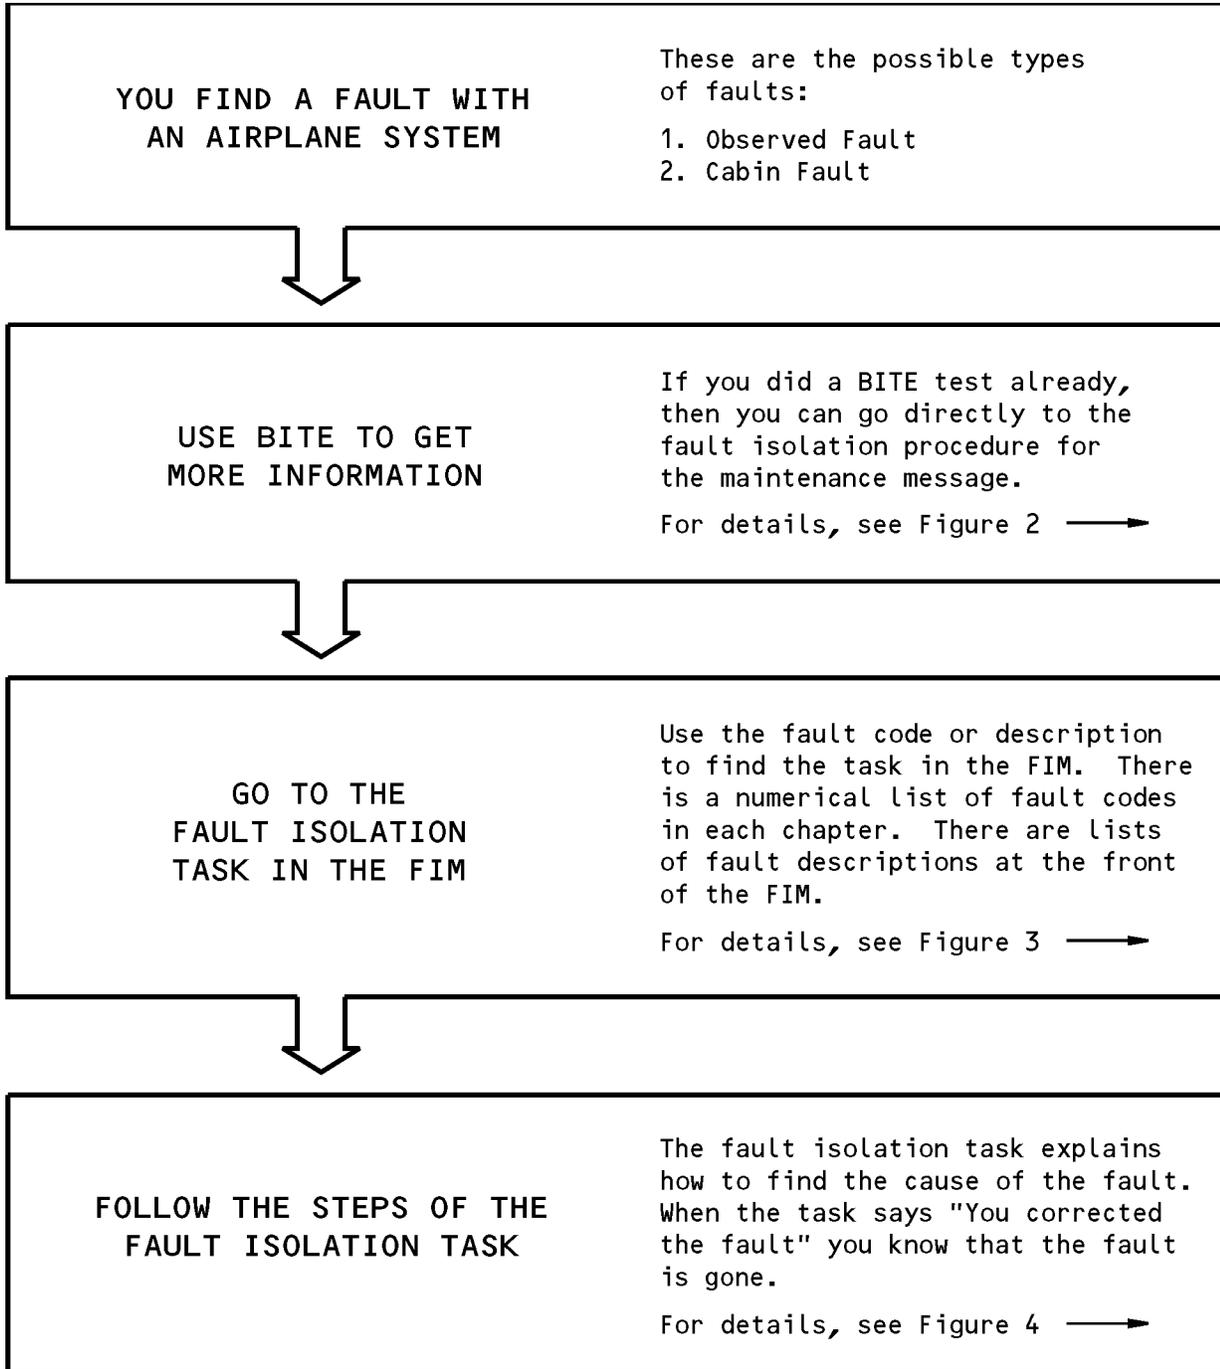

Basic Fault Isolation Process
Figure 1

EFFECTIVITY
HAP ALL

56-HOW TO USE THE FIM

D633A103-HAP



737-600/700/800/900

FAULT ISOLATION MANUAL

Some airplane systems have built-in test equipment (BITE). IF the system finds a fault when you do a BITE test, it will give you a maintenance message.

A maintenance message can be any of these:

- a code
- a text message
- a light
- an indication.

To find the fault isolation task for a maintenance message, go to the Maintenance Message Index in the chapter for the applicable system.

If you do not know which chapter is the correct one, look at the list at the front of any Maintenance Message Index. For each system or component (LRU) that has BITE, this list gives the chapter number where you can find the Index that you need.

Find the maintenance message for the applicable LRU or system in the Index. Then find the task number on the same line as the maintenance message. Go to the task in the FIM and do the steps of the task (see Figure 4).

Getting Fault Information from BITE
Figure 2

EFFECTIVITY
HAP ALL

56-HOW TO USE THE FIM

D633A103-HAP

Page 2
Feb 10/2005

FAULT ISOLATION MANUAL**IF YOU HAVE:****THEN DO THIS TO FIND THE TASK IN THE FIM:****FAULT CODE**

1. The first two digits of the fault code are the FIM chapter that you need. Go to the Fault Code Index in that chapter and find the fault code. If the fault code starts with a letter, then go to the Cabin Fault Code Index at the front of the FIM.
2. Find the task number on the same line as the fault code. Go to the task in the FIM and do the steps in the task (see Figure 4).

OBSERVED FAULT DESCRIPTION

1. Go to the Observed Fault List at the front of the FIM and find the best description for the fault.
2. Find the task number on the same line as the fault description. Go to the task in the FIM and do the steps of the task (see Figure 4).

CABIN FAULT DESCRIPTION

1. Go to the Cabin Fault List at the front of the FIM and find the best description for the fault.
2. Find the task number on the same line as the fault description. Go to the task in the FIM and do the steps of the task (see Figure 4).

MAINTENANCE MESSAGE (FROM BITE)

1. Go to the Maintenance Message Index in the chapter for the LRU (the front of each Index gives you the chapter number for all LRUs). Find the maintenance message in the Index.
2. Find the task number on the same line as the maintenance message. Go to the task in the FIM and do the steps in the task (see Figure 4).

Finding the Fault Isolation Task in the FIM
Figure 3

**EFFECTIVITY
HAP ALL****56-HOW TO USE THE FIM**



737-600/700/800/900

FAULT ISOLATION MANUAL

ASSUMED CONDITIONS AT START OF TASK

- External electrical power is ON
- Hydraulic power and pneumatic power are OFF
- Engines are shut down

- No equipment in the system is deactivated

POSSIBLE CAUSES

- The list of possible causes has the most likely cause first and the least likely cause last.
- You can use the maintenance records of your airline to determine if the fault occurred before. Compare the list of possible causes to the past maintenance actions. This will help prevent repetition of the same maintenance actions.

INITIAL EVALUATION PARAGRAPH

- The primary purpose of the Initial Evaluation paragraph at the start of the task is to help you find out if you can detect the fault right now:
 - If you cannot detect the fault right now, then the task cannot isolate the fault and the Initial Evaluation paragraph will say that there was an intermittent fault.
 - If you have an intermittent fault, you must use your judgement (and follow your airline's policy) to decide which maintenance action to take. Then monitor the airplane to see if the fault happens again on subsequent flights.
- The Initial Evaluation paragraph can also help you find out which Fault Isolation Procedure to use to isolate and correct the fault.

FAULT ISOLATION STEPS

- Do the steps of the task in the specified order. The "If ... then" statements that you see will guide you along the correct path.
- When you are at the endpoint of the path, the step says "...you corrected the fault." Complete the step and exit the procedure.

Doing the Fault Isolation Task
Figure 4


EFFECTIVITY
HAP ALL

56-HOW TO USE THE FIM

D633A103-HAP

Page 4
Oct 10/2006

BOEING®
737-600/700/800/900
FAULT ISOLATION MANUAL

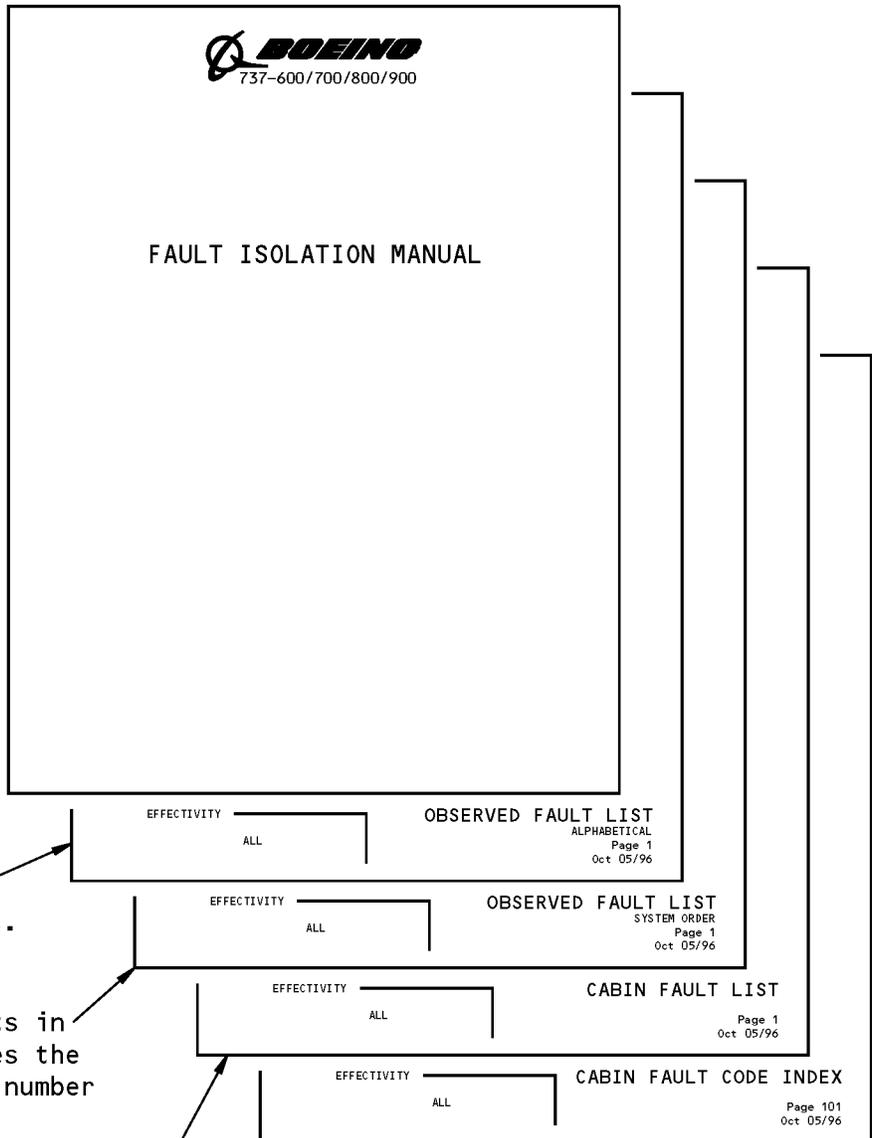

Alphabetical list of all observed faults. Gives the fault code and a FIM task number for each fault.

List of all observed faults in order by ATA system. Gives the fault code and a FIM task number for each fault.

List of all cabin faults arranged in order by cabin function. Gives the fault code and a FIM task number for each fault.

Numerical list of all cabin faults in order by fault code. Gives a FIM task reference for each fault.

Subjects at Front of FIM
 Figure 5

EFFECTIVITY
HAP ALL


56-HOW TO USE THE FIM

D633A103-HAP



737-600/700/800/900

FAULT ISOLATION MANUAL

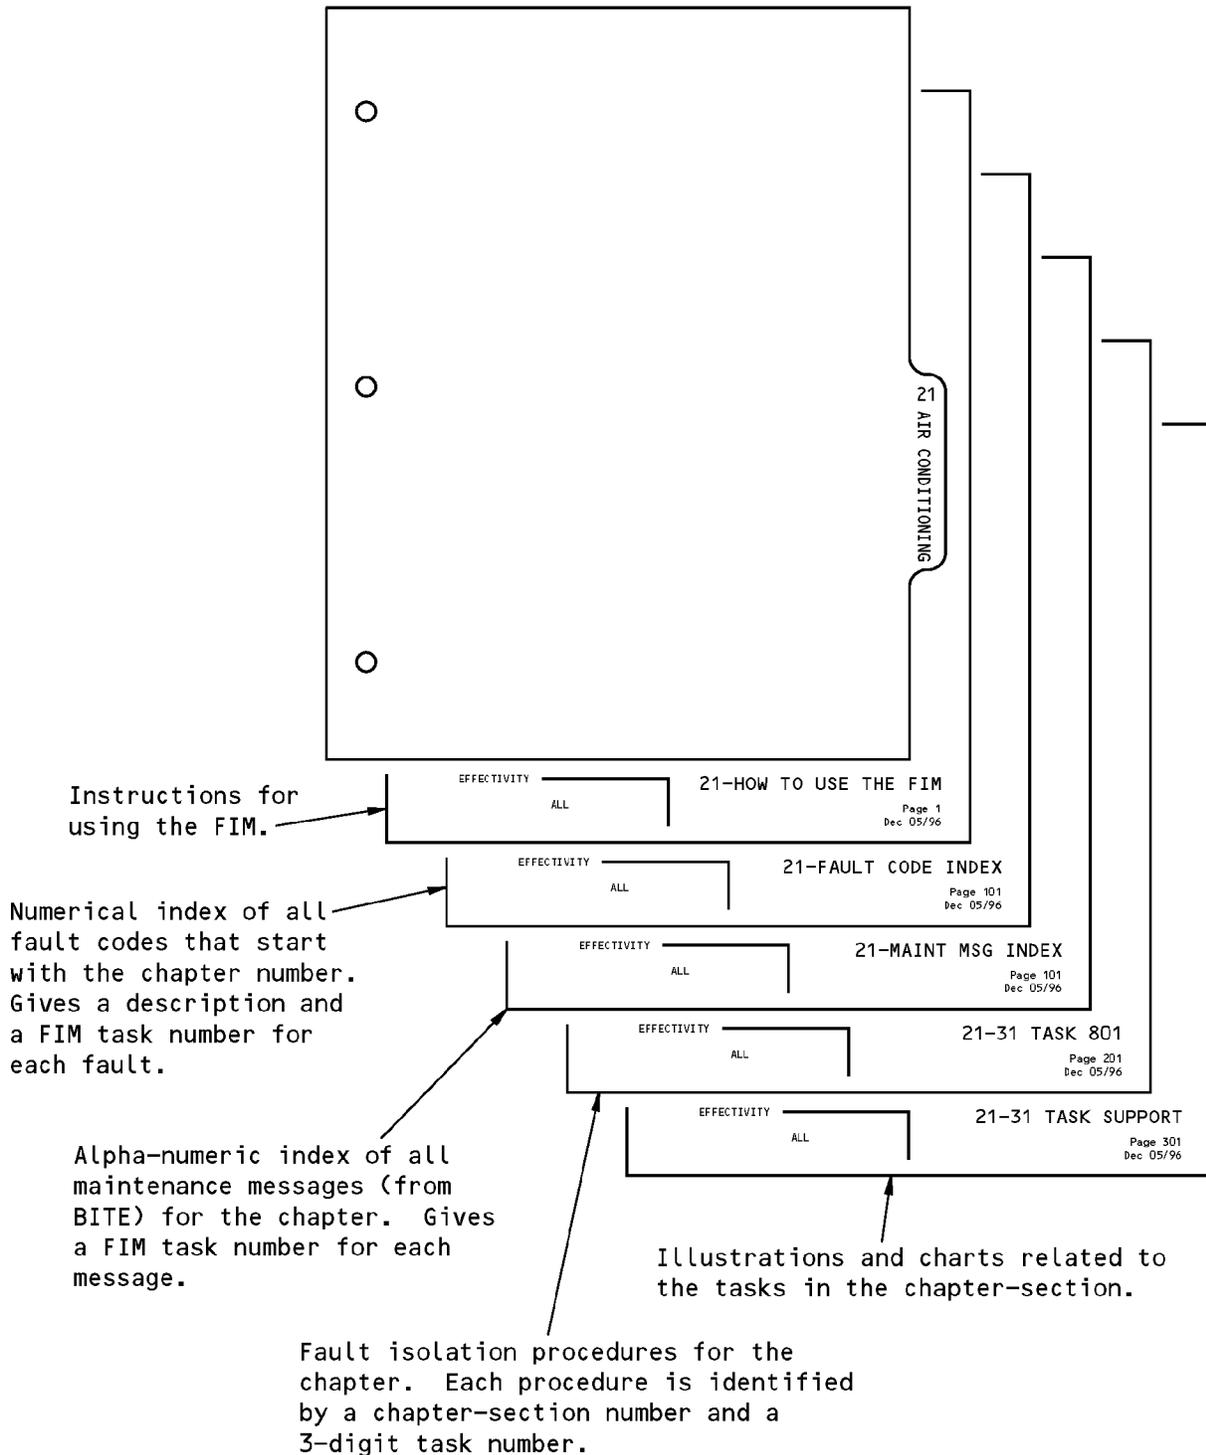

Subjects in Each FIM Chapter
Figure 6

EFFECTIVITY
HAP ALL

56-HOW TO USE THE FIM

D633A103-HAP



737-600/700/800/900

FAULT ISOLATION MANUAL

FAULT CODE	FAULT DESCRIPTION	GO TO FIM TASK
561 010 41	Window, flight compartment: delaminated, cracked, chipped, crazed, scratched, or has bubbles - no. 1 left.	56-11 TASK 802
561 010 42	Window, flight compartment: delaminated, cracked, chipped, crazed, scratched, or has bubbles - no. 1 right.	56-11 TASK 802
561 020 41	Window, flight compartment: delaminated, cracked, chipped, crazed, scratched, or has bubbles - no. 2 left.	56-11 TASK 802
561 020 42	Window, flight compartment: delaminated, cracked, chipped, crazed, scratched, or has bubbles - no. 2 right.	56-11 TASK 802
561 030 41	Window, flight compartment: delaminated, cracked, chipped, crazed, scratched, or has bubbles - no. 3 left.	56-11 TASK 802
561 030 42	Window, flight compartment: delaminated, cracked, chipped, crazed, scratched, or has bubbles - no. 3 right.	56-11 TASK 802
561 060 00	Window, flight compartment: windows need cleaning.	56-11 TASK 805
561 070 41	Window, flight compartment: sliding difficult to operate - no. 2 left.	56-11 TASK 801
561 070 42	Window, flight compartment: sliding difficult to operate - no. 2 right.	56-11 TASK 801
561 080 41	Window, flight compartment: sliding has air leak - no. 2 left.	56-11 TASK 801
561 080 42	Window, flight compartment: sliding has air leak - no. 2 right.	56-11 TASK 801

EFFECTIVITY
HAP ALL

56-FAULT CODE INDEX

D633A103-HAP



737-600/700/800/900

FAULT ISOLATION MANUAL

801. Flight Compartment Window No. 2 Problems - Fault Isolation

A. Fault Isolation Procedure

- (1) For the applicable No. 2 window, do this task: No. 2 Openable Window Inspection, AMM TASK 56-12-11-200-801.

————— END OF TASK —————

802. Flight Compartment Window Damaged - Fault Isolation

A. Fault Isolation Procedure

- (1) If a No. 1 or a No. 3 window shows signs of damage, then, do this task: AMM TASK 56-11-00-200-803.
- (2) If a No. 2 window shows signs of damage, then, do this task: AMM TASK 56-12-11-200-801.

————— END OF TASK —————

I 805. Flight Compartment Window Dirty - Fault Isolation

A. Fault Isolation Procedure

- (1) For the applicable window, do this task: Clean the Flight Compartment Windows, AMM TASK 12-16-02-100-801.

————— END OF TASK —————

EFFECTIVITY
HAP ALL

56-11 TASKS 801-805

D633A103-HAP

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 201
Jun 15/2009