

SADDLE FINISHER-G1 SERVICE MANUAL

REVISION 0

Canon

MAR.2001

FY8-13HB-000

Application

This manual has been issued by Canon Inc. for qualified persons to learn technical theory, installation, maintenance, and repair of products. This manual covers all localities where the products are sold. For this reason, there may be information in this manual that does not apply to your locality.

Corrections

This manual may contain technical inaccuracies or typographical errors due to improvements or changes in products. When changes occur in applicable products or in the contents of this manual, Canon will release technical information as the need arises. In the event of major changes in the contents of this manual over a long or short period, Canon will issue a new edition of this manual.

The following paragraph does not apply to any countries where such provisions are inconsistent with local law.

Trademarks

The product names and company names used in this manual are the registered trademarks of the individual companies.

Copyright

This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied, reproduced or translated into another language, in whole or in part, without the written consent of Canon Inc.

COPYRIGHT © 2001 CANON INC.

Printed in Japan











Imprimé au Japon

Caution

Use of this manual should be strictly supervised to avoid disclosure of confidential information.

1 Symbols Used

This documentation uses the following symbols to indicate special information:

| Symbol | Description |
|---|---|
|  | Indicates an item of a non-specific nature, possibly classified as Note, Caution, or Warning. |
|  | Indicates an item requiring care to avoid electric shocks. |
|  | Indicates an item requiring care to avoid combustion (fire). |
|  | Indicates an item prohibiting disassembly to avoid electric shocks or problems. |
|  | Indicates an item requiring disconnection of the power plug from the electric outlet. |
|  Memo | Indicates an item intended to provide notes assisting the understanding of the topic in question. |
|  REF. | Indicates an item of reference assisting the understanding of the topic in question. |
|  | Provides a description of a service mode. |
|  | Provides a description of the nature of an error indication. |
|  | Refers to the Copier Basics Series for a better understanding of the contents. |

2 Outline of the Manual



This Service Manual contains basic facts and figures needed to service the Saddle Finisher-G1 in the field, and it consists of the following chapters:

| | | |
|-----------|-----------------------------|---|
| Chapter 1 | General Description: | features, specifications |
| Chapter 2 | Outline of Operation: | mechanical systems by function, electrical systems in reference to principles of operation, timing of operation; construction and outline of electrical circuitry |
| Chapter 3 | Mechanical Systems | construction of mechanical systems; disassembly, assembly, and adjustments |
| Chapter 4 | Maintenance and Inspection: | periodically replacement parts, durables and consumables; scheduled servicing chart |
| Chapter 5 | Troubleshooting | standards, adjustments, troubleshooting tables |
| Appendix: | | general timing chart, list of signals/abbreviations, general circuit diagrams, etc |

For installation, refer to the Installation Procedure found in the shipping box; this manual omits descriptions of the installation work.

The descriptions in this Service Manual are based on the following rules:

1. In each chapter, the uses of the function in question and its relationship to electrical and mechanical systems are discussed and the timing of operation of its associated parts is explained by means of outlines and diagrams.

In the diagrams, the symbol  represents a mechanical path, while the symbol  with a name next to it indicates the flow of an electric signal.

The expression “turn on the power” means turning on the power switch, closing the front door, and closing the delivery door so that the machine will be supplied with power.

2. In circuit diagrams (digital), a signal whose level is High is expressed as being ‘1’, while a signal whose level is Low is expressed as being ‘0’; the level of voltage, however, varies from circuit to circuit.

The machine uses CPUs, whose internal mechanisms cannot be checked in the field, and, therefore, are not explained. In addition, the machine’s PCBs are not intended for repairs at the user’s and, therefore, are explained by means of block diagrams: two types are used, i.e., between sensors and inputs of PCBs equipped with a control or drive function and between outputs equipped with a control or drive function and loads; in addition, functional block diagrams are used at times.

Changes made to the machine for product improvement are communicated in the form of a Service Information bulletin as needed. All service persons are expected to go through all service documentation including the bulletins and be equipped to respond to the needs of the field (as by being able to identify possible causes of problems).

Contents

CHAPTER 1 GENERAL DESCRIPTION

| | | | |
|------------------------------------|-----|--|------|
| 1 Features | 1-1 | 3.1 Cross Section | 1-8 |
| 2 Specifications | 1-2 | 3.1.1 Finisher Unit | 1-8 |
| 2.1 Specifications | 1-2 | 3.1.2 Saddle Unit | 1-9 |
| 2.1.1 Finisher/Saddle Assembly ... | 1-2 | 3.1.3 Puncher Unit (option) | 1-10 |
| 2.1.2 Puncher unit (option) | 1-6 | 4 Routine Maintenance by the User | 1-11 |
| 3 Names of Parts | 1-8 | | |

CHAPTER 2 OUTLINE OF OPERATION

| | | | |
|------------------------------------|------|------------------------------------|------|
| 1 Basic Operations | 2-1 | 2.3.2 Processing Tray Paper | |
| 1.1 Specifications | 2-1 | Stacking Operation | 2-20 |
| 1.2 Outline of the Electrical | | 2.3.3 Offset Operation | 2-21 |
| Circuitry | 2-2 | 2.3.4 Stack Delivery Operation ... | 2-22 |
| 1.3 Inputs to and Outputs from the | | 3 Stapling Operation | 2-23 |
| Finisher Controller PCB | 2-3 | 3.1 Outline | 2-23 |
| 1.3.1 Inputs to the Finisher | | 3.2 Stapling Operation | 2-25 |
| Controller PCB (1/2) | 2-3 | 3.3 Delivery Operation after | |
| 1.3.2 Inputs to the Finisher | | Stapling | 2-27 |
| Controller PCB (2/2) | 2-4 | 3.4 Stapler Unit | 2-29 |
| 1.3.3 Outputs from the Finisher | | 3.4.1 Stapler Movement | |
| Controller PCB (1/2) | 2-5 | Controller | 2-31 |
| 1.3.4 Outputs from the Finisher | | 4 Delivery Tray Operation | 2-35 |
| Controller PCB (2/2) | 2-6 | 4.1 Outline | 2-35 |
| 1.3.5 Inputs to and Outputs from | | 5 Saddle Unit | 2-37 |
| the Finisher Controller | 2-7 | 5.1 Basic Operations | 2-37 |
| 1.4 Inputs to and Outputs from the | | 5.1.1 Outline | 2-37 |
| Punch Controller PCB (option) . | 2-8 | 5.2 Feed/Drive System | 2-38 |
| 1.4.1 Inputs to and Outputs from | | 5.2.1 Outline | 2-38 |
| the Punch Controller PCB | 2-8 | 5.3 Paper Feed System | 2-43 |
| 1.4.2 Outputs from the Punch | | 5.3.1 Outline | 2-43 |
| Controller PCB | 2-9 | 5.4 Stack Feed System | 2-44 |
| 2 Feed/Drive System | 2-10 | 5.4.1 Outline | 2-44 |
| 2.1 Outline | 2-10 | 5.5 Fold/Delivery System | 2-45 |
| 2.1.1 Normal Delivery | 2-11 | 5.5.1 Outline | 2-45 |
| 2.2 Feed/Delivery | 2-15 | 5.5.2 Paper Folding | 2-46 |
| 2.2.1 Outline | 2-15 | 6 Puncher Unit (option) | 2-49 |
| 2.3 Job Offset | 2-18 | 6.1 Basic Operations | 2-49 |
| 2.3.1 Outline | 2-18 | 6.1.1 Outline | 2-49 |

| | | | | | |
|-------|--------------------------|------|-------|--------------------------------|------|
| 6.2 | Punching Operation | 2-50 | 7.1.4 | Folding Position Sensor | |
| 6.2.1 | Outline | 2-50 | | Stationary Jam (1022) | 2-62 |
| 6.2.2 | Punching Operation | 2-52 | 7.1.5 | Power-On Jam (1007) | 2-62 |
| 6.2.3 | Horizontal Registration | | 7.1.6 | Door Open Jam (paper | |
| | Operation | 2-57 | | present) (1008) | 2-62 |
| 7 | Detecting Jams | 2-60 | 7.1.7 | Staple Jam (1006) | 2-62 |
| 7.1 | Outline | 2-60 | 8 | Power Supply System | 2-63 |
| 7.1.1 | Inlet Sensor Delay Jam | | 8.1 | Finisher/Saddle Assembly | 2-63 |
| | (1011) | 2-61 | 8.1.1 | Outline | 2-63 |
| 7.1.2 | Inlet Sensor Stationary | | 8.1.2 | Protective Mechanisms | 2-63 |
| | Jam (1021) | 2-61 | 8.2 | Puncher Unit (option) | 2-64 |
| 7.1.3 | Folding Position Sensor | | 8.2.1 | Outline | 2-64 |
| | Delay Jam (1012) | 2-61 | 8.2.2 | Protective Mechanisms | 2-64 |

CHAPTER 3 MECHANICAL SYSTEMS

| | | | | | |
|-------|-------------------------------|------|--------|-------------------------------|------|
| 1 | Finisher/Saddle Unit | 3-1 | 1.2.10 | Removing the Stack | |
| 1.1 | Externals and Controls | 3-1 | | delivery roller (upper) | 3-26 |
| 1.1.1 | Removing the Delivery Tray | 3-1 | 1.2.11 | Removing the Paddle | 3-28 |
| 1.1.2 | Removing the Front Cover .. | 3-2 | 1.2.12 | Removing the Stack delivery | |
| 1.1.3 | Removing the Rear Cover ... | 3-3 | | roller (lower)/Delivery Belt | 3-30 |
| 1.1.4 | Removing the Upper Cover . | 3-3 | 1.3 | PCBs | 3-32 |
| 1.1.5 | Removing the Processing | | 1.3.1 | Removing the Finisher | |
| | Tray Upper Cover | 3-4 | | Controller PCB | 3-32 |
| 1.1.6 | Removing the Upper Right | | 1.3.2 | Removing the Slide Home | |
| | Cover Assembly | 3-5 | | Position PCB | 3-33 |
| 1.1.7 | Removing the Saddle Guide | 3-6 | 2 | Puncher Unit (option) | 3-35 |
| 1.2 | Feeding System | 3-7 | 2.1 | Puncher Driving System | 3-35 |
| 1.2.1 | Removing the Stapler Unit .. | 3-7 | 2.1.1 | Removing the Punch Motor | 3-35 |
| 1.2.2 | Adjusting the Stapler Phase . | 3-8 | 2.1.2 | Removing the Horizontal | |
| 1.2.3 | Adjusting the Phase of the | | | Registration Motor | 3-35 |
| | Gear in the Saddle Unit | 3-13 | 2.1.3 | Removing the Punch Unit . | 3-36 |
| 1.2.4 | Removing the Saddle Unit . | 3-14 | 2.2 | PCBs | 3-38 |
| 1.2.5 | Removing the Processing | | 2.2.1 | Removing the Punch | |
| | Tray Assembly | 3-16 | | Controller PCB | 3-38 |
| 1.2.6 | Removing the Paddle | | 2.2.2 | Removing the Photosensor | |
| | Assembly | 3-18 | | PCB | 3-39 |
| 1.2.7 | Removing the Staple/Fold | | 2.2.3 | Removing the LED PCB ... | 3-40 |
| | Drive Unit | 3-20 | 2.2.4 | Removing the Waste-Full | |
| 1.2.8 | Removing the Feed Motor | | | Photosensor PCB | 3-41 |
| | Unit | 3-24 | 2.2.5 | Removing the Waste Full | |
| 1.2.9 | Removing the Feed Roller . | 3-24 | | LED PCB | 3-42 |

CHAPTER 4 MAINTENANCE AND INSPECTION

| | | | |
|-------------------------------------|-----|----------------------------------|-----|
| 1 Periodically Replaced Parts | 4-1 | 2 Consumables and Durables | 4-2 |
| 1.1 Finisher/Saddle Unit | 4-1 | 2.1 Saddle/Finisher Unit | 4-2 |
| 1.2 Puncher Unit (option) | 4-1 | 3 Scheduled Maintenance | 4-2 |

CHAPTER 5 TROUBLESHOOTING

| | | | |
|--|------|--|------|
| 1 Standards and Adjustments | 5-1 | 4.1.3 E510, Feed Motor Fault (detail code: 01/02) | 5-18 |
| 1.1 Electrical System (finisher/saddle unit) | 5-1 | 4.1.4 E514, Delivery Motor Fault (detail code: 01/02) | 5-18 |
| 1.1.1 Adjusting the Folding Position | 5-1 | 4.1.5 E530, Alignment Motor (Rear) Fault (detail code: 01/02) ... | 5-19 |
| 1.1.2 Adjusting the Middle 2-Point Stapling Position | 5-3 | 4.1.6 E531, Staple/fold Motor Fault (detail code: 01/02) | 5-19 |
| 1.2 Electrical System (puncher unit; option) | 5-4 | 4.1.7 E531, Staple/Fold Motor Fault (detail code: 03) | 5-20 |
| 1.2.1 Adjusting the Punch Hole Position | 5-4 | 4.1.8 E5F1, Staple/Fold Motor Fault (detail code: 01/02) | 5-20 |
| 1.2.2 Adjusting the Sensor Output | 5-4 | 4.1.9 E5F1, Staple/Fold Motor Fault (detail code: 03) | 5-21 |
| 1.2.3 Registering the Number of Punch Hole | 5-5 | 4.1.10 E532, Slide Motor Fault (detail code: 01/02) | 5-21 |
| 1.2.4 After Replacing the EEP-ROM (IC1002) | 5-6 | 4.1.11 E537, Alignment Motor (front) Fault (detail code: 01/02) ... | 5-22 |
| 2 Arrangement of Electric Components .. | 5-8 | 4.1.12 E540, Shift Motor Fault (detail code: 01) | 5-22 |
| 2.1 Finisher/Saddle Unit | 5-8 | 4.1.13 E540, Shift Motor Fault (detail code: 02) | 5-23 |
| 2.1.1 Sensors, Microswitches, and Clutch | 5-8 | 4.1.14 E540, Shift Motor Fault (detail code: 03) | 5-23 |
| 2.1.2 Motor PCBs | 5-10 | 4.1.15 E550, Finisher Unit Power Sup- ply Fault (detail code: 10) . | 5-24 |
| 2.2 Puncher Unit (option) | 5-12 | 4.1.16 E577, Paddle Motor Fault (detail code: 01/02/03/04) . | 5-24 |
| 2.2.1 Sensors | 5-12 | 4.2 Troubleshooting (puncher unit, option) | 5-25 |
| 2.2.2 Motors | 5-13 | 4.2.1 E501, Communication Faulty | 5-25 |
| 2.2.3 PCBs | 5-14 | 4.2.2 E505, Puncher Back-UP Memory Fault (detail code: 20) | 5-25 |
| 3 LEDs and Check Pins by PCB | 5-15 | | |
| 3.1 Finisher Controller PCB | 5-15 | | |
| 3.2 Punch Controller PCB | 5-16 | | |
| 4 Troubleshooting | 5-17 | | |
| 4.1 Troubleshooting (finisher/saddle unit) | 5-17 | | |
| 4.1.1 E713, communication error | 5-17 | | |
| 4.1.2 E505, Finisher Unit Back-Up Memory Fault (detail code: 10) | 5-17 | | |

| | | | | | |
|-------|---|------|-------|--------------------------------|------|
| 4.2.3 | E550, Puncher Unit Power Supply Fault (detail code:20)... | 5-25 | 5 | Self Diagnosis | 5-28 |
| 4.2.4 | E590, Punch Motor Fault (detail code: 01/02) | 5-26 | 5.1 | Outline | 5-28 |
| 4.2.5 | E592, Punch Sensor (horizontal registration) Fault (detail code: 01 through 05) | 5-26 | 5.2 | Errors | 5-28 |
| 4.2.6 | E592, Punch sensor (waste full) Fault (detail code: 06) | 5-27 | 5.2.1 | Finisher/Saddle Unit | 5-28 |
| 4.2.7 | E593, Horizontal Registration Motor Fault (detail code: 01/02) | 5-27 | 5.2.2 | Puncher Unit (option) | 5-31 |
| | | | 5.3 | Alarm | 5-32 |
| | | | 5.3.1 | Finisher/Saddle Unit | 5-32 |
| | | | 5.3.2 | Puncher Unit (option) | 5-33 |
| | | | 5.4 | Host Machine I/O Display | 5-34 |
| | | | 5.4.1 | Finisher/Saddle Unit | 5-34 |
| | | | 5.4.2 | Puncher Unit (option) | 5-38 |

APPENDIX

| | | | | | |
|-----|--|------|-----|--|------|
| 1 | General Timing Chart | A-1 | 3.4 | Finisher Controller PCB (4/8) . | A-13 |
| 1.1 | Finisher Unit | A-1 | 3.5 | Finisher Controller PCB (5/8) . | A-14 |
| 1.2 | Saddle Unit | A-2 | 3.6 | Finisher Controller PCB (6/8) . | A-15 |
| 1.3 | Puncher Unit (option) | A-3 | 3.7 | Finisher Controller PCB (7/8) . | A-16 |
| 2 | Signals and Abbreviations | A-5 | 3.8 | Finisher Controller PCB (8/8) . | A-17 |
| 2.1 | Finisher Saddle Unit | A-5 | 4 | Puncher Unit General Circuit Diagram | A-18 |
| 2.2 | Puncher Unit (option) | A-7 | 4.1 | Punch Controller PCB | A-19 |
| 3 | Finisher/Saddle Unit General Circuit Diagram | A-9 | 4.2 | LED PCB | A-20 |
| 3.1 | Finisher Controller PCB (1/8) . | A-10 | 4.3 | Photosensor PCB | A-21 |
| 3.2 | Finisher Controller PCB (2/8) . | A-11 | 5 | Jam Code | A-23 |
| 3.3 | Finisher Controller PCB (3/8) . | A-12 | 6 | Solvents and Oils | A-24 |

CHAPTER 1

GENERAL DESCRIPTION

1 Features

a. Through-type stapler

Adoption of a through-type stapler allows a stapler to carry out saddle stitching.

b. Three different auto stapling positions

Three different stapling positions (front 1-point stapling, rear 1-point stapling, and middle 2-point stapling) are supported.

c. Saddle stitching

A maximum of ten sheets of paper can be delivered with them stapled and folded in the middle.

d. Punch mechanism (option).

Installation of a puncher unit enables punching holes in sheets before delivery (64 to 90 g/m² paper; no transparency).

2 Specifications

2.1 Specifications

2.1.1 Finisher/Saddle Assembly

| Item | Specifications | Remarks |
|-----------------------|--|--|
| Stacking | 2 locations (1) Delivery Tray (descending type; 1 tray) Face-down (2) Bind Tray (fixed type) | |
| Feed reference | Center reference | |
| Stack paper size | A3, A4, A4R, A5, A5R, B4, B5, B5R, 297mm × 432mm (11" × 17"), LGL, LTR, LTRR, STMT, STMTR | Large-size: A3, B4, 279mm × 432mm (11" × 17"), LGL |
| Paper weight | Finisher assembly: 64 to 90 g/m ² Saddle Assembly: 64 to 90 g/m ² | |
| Mode | Non-sort stack Sort stack Staple stack Bind stack | |
| Stack height (Note 1) | Non-Sort Staple Large-size: 500 sheets Small-size: 1000 sheets (Note 2) Staple Sort Large-size: 30 sets or 500 sheets Small-size: 30 sets or 1000 sheets Folded stack Stack of 6 to 10 sheets: 10 sets Stack of 1 to 5 sheets: 20 sheets | |
| Mixed stack | Size mix: 500 sheets (Note 3) Staple mix: 30 sheets (same paper configuration) | |
| Paper detection | Delivery tray: No Bind tray: Yes | |
| Control panel | No | |

Note 1:

The number of sheets is computed based on 80 g/m² paper.

Note 2:

Alignment is not guaranteed if the stack consists of 750 sheets or more.

Note 3:


Alignment is not guaranteed if the stack consists of sheets of different sizes.

| Item | Specifications | Remarks |
|---------------------------|--|---|
| Display | No | |
| Size | 665 (W) × 615 (D) × 555 (H) mm / 26.18(W) × 24.21(D) × 21.85(H) in | (excl. installing kit) |
| Weight | 27 kg / 59.40 lb (approx.) | |
| Power supply | 24 VDC from host machine | |
| Maximum power consumption | At standby: 13 W In operation: 84 W (staple sort) | |
| Stapling | Rotary cam type | |
| Stapling position | See F01-201-01. | |
| Stapling thickness | Finisher Large-size: 25 sheets Small-size: 50 sheets Saddle: 10 sheets | (80 g/m ² paper) (80 g/m ² paper) (80 g/m ² paper) |
| Staple supply | Cartridge of special staples (5000 staples) | |
| Staples | Special staples | |
| Staple detection | Yes (nearly empty: 40 remaining staples) | |
| Stapling size | Front 1-Point Stapling: A3, A4R, B4, 279 mm × 432 mm (11" × 17"), LGL, LTRR Rear 1-Point Stapling: A3, A4, A4R, B4, B5, 279 mm × 432 mm (11" × 17"), LGL, LTR, LTRR Middle 2-Point Stapling: A3, A4, A4R, B4, B5, 279 mm × 432 mm (11" × 17"), LGL, LTR, LTRR Middle 2-Point Stapling: A3, A4R, B4, 279 mm × 432 mm (11" × 17"), LTRR | With the saddle in use. |
| Manual stapling | None | |
| Folding method | Roller contact | |
| Folding mode | Double-folding (single-sheet non-stapling available) | |
| Folding position | Middle of sheet | Requires a margin of ±5mm / ±0.2in from the middle of the sheet as a middle margin. |
| Saddling size | A3, A4R, B4, 279 mm × 432 mm (11" × 17"), LTRR | No special paper. |
| Serial number | XEHxxxxx | |


T01-201-01

Staple Position






Front 1-point stapling

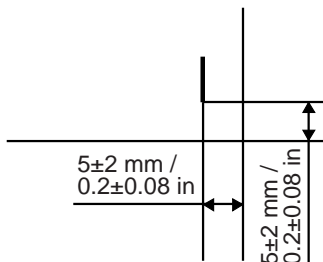






Rear 1-point stapling

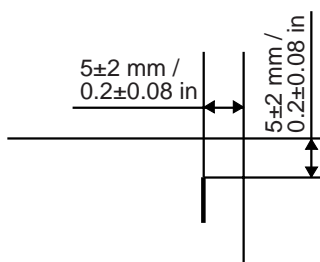

Middle 2-point stapling

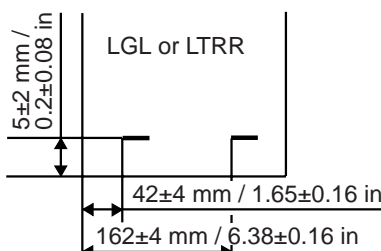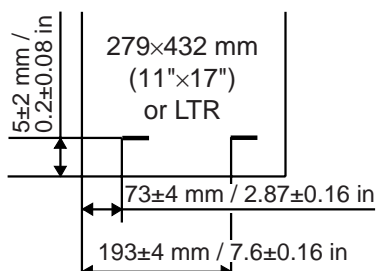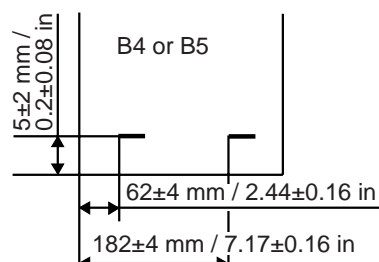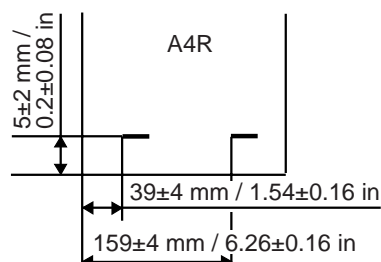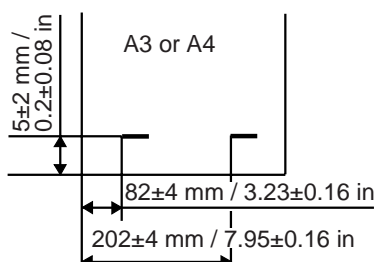


Middle 2-point stapling (w/ saddle in use)

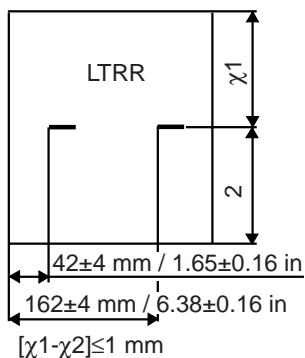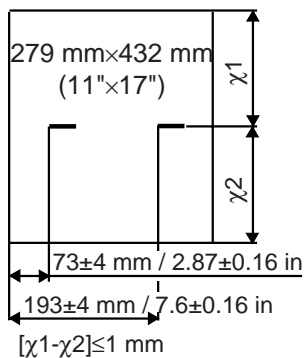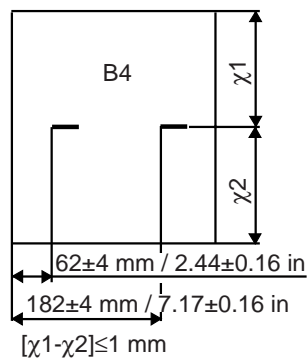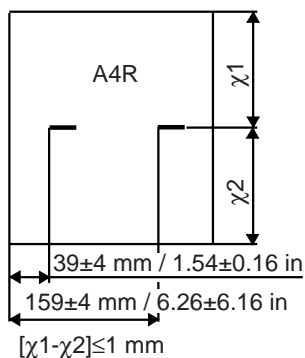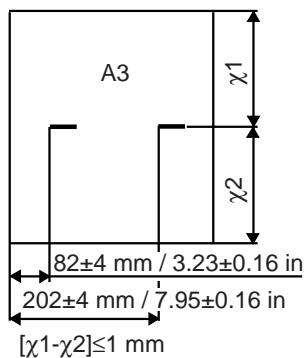

F01-201-01

Stacked Paper Alignment

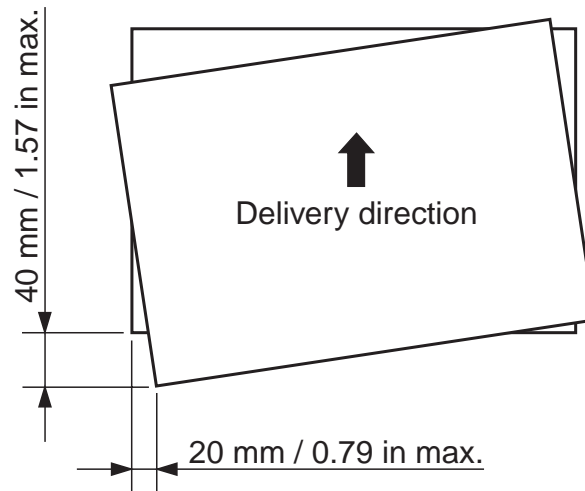

F01-201-02


2.1.2 Puncher unit (option)

| Item | Specifications | Remarks |
|---------------------|--|---------------------------|
| Punching method | Reciprocating method (sequential processing method) | |
| Paper size | 2-hole (Puncher Unit-J1): A3, A4, A4R, B4, B5, B5R 2-/3-hole (Puncher Unit-K1): 2-hole/LGL, LTRR 3-hole/279 × 432 mm (11"×17"), LTR 4-hole (Puncher Unit-G1/-H1): A3, A4 | |
| Paper weight | 64 g/m ² ~ 90 g/m ² | No transparencies. |
| Punch hole diameter | 2-hole (Puncher Unit-J1): 6.5 mm / 0.26 in 2-/3-hole (Puncher Unit-K1): 2-hole 8.0 mm / 0.31 in 3-hole 8.0 mm / 0.31 in 4-hole (Puncher Unit-G1/-H1): 6.5 mm / 0.26 in | |
| Punch waste | 2-hole (Puncher Unit-J1): 10,000 sheets 2-/3-hole (Puncher Unit-K1): 2-hole/3000 sheets 3-hole/3000 sheets 4-hole (Puncher Unit-G1/H1) : 5000 sheets | 80 g/m ² paper |
| Size | 90 (W) × 560 (D) × 170 (H) mm / 3.54 (W) × 22.05 (D) × 6.69 (H) in | |
| Weight | 2.5 kg / 5.5 lb (approx.) | |
| Power supply | 24 VDC from finisher unit. | |
| Power consumption | Standby: 2 W max. Operating: 21 W max (punching) | |
| Serial number | XEJxxxxx (Puncher Unit-J1) XEKxxxxx (Puncher Unit-K1) XELxxxxx (Puncher Unit-G1) XEMxxxxx (Puncher Unit-H1) | |

T01-201-02


Hole position

[1] 2-Hole (Puncher Unit-J1)

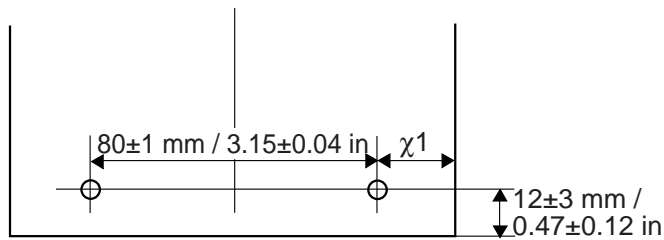


| | |
|----------|---------------------------|
| χ^1 | |
| A3/A4 | 108.5±3 mm / 4.27±0.12 in |
| B5/B4 | 88.5±3 mm / 3.48±0.12 in |
| A4R | 65±3 mm / 2.56±0.12 in |
| B5R | 51±3 mm / 2.01±0.12 in |

[2] 2-/3-Hole (Puncher Unit-K1)

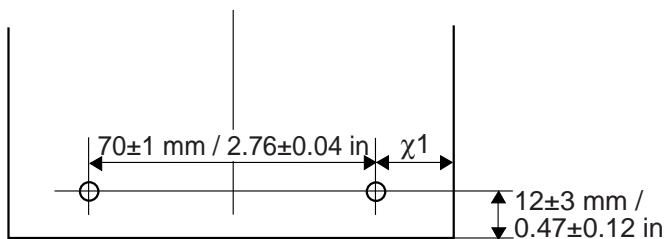


| | |
|----------|------------------------|
| χ^1 | |
| LGL/LTRR | 73±3 mm / 2.87±0.12 in |

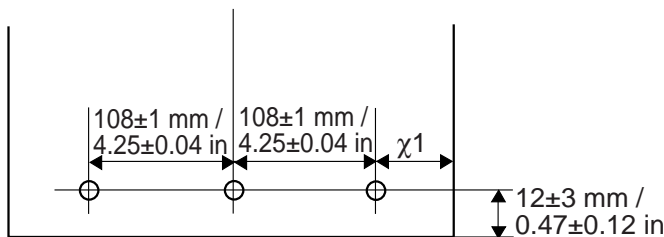


| | |
|--------------------------------|-----------------------------|
| χ^1 | |
| 279 mm×432 mm (11"×17")/LTR | 31.5±3 mm / 1.24±0.12 in |

[3] 4-Hole (Puncher Unit-G1)

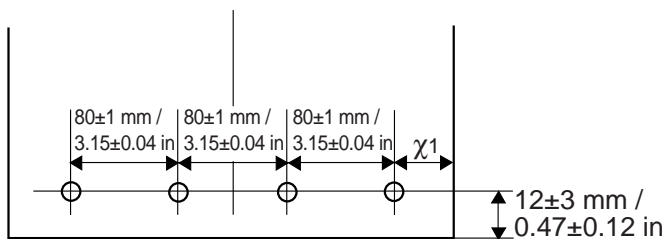

| | |
|----------|--------------------------|
| χ^1 | |
| A3/A4 | 28.5±3 mm / 1.12±0.12 in |

[4] 4-Hole (Puncher Unit-H1)

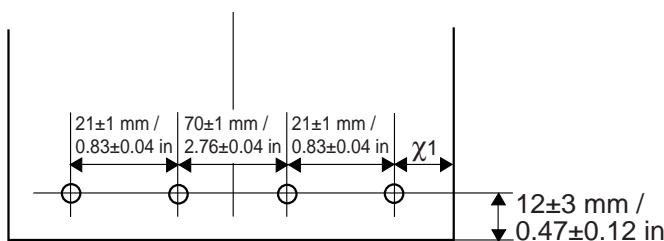

| | |
|----------|--------------------------|
| χ^1 | |
| A3/A4 | 92.5±3 mm / 3.64±0.12 in |


F01-201-03

The above specifications are subject to change for product improvement.

3 Names of Parts

3.1 Cross Section


3.1.1 Finisher Unit

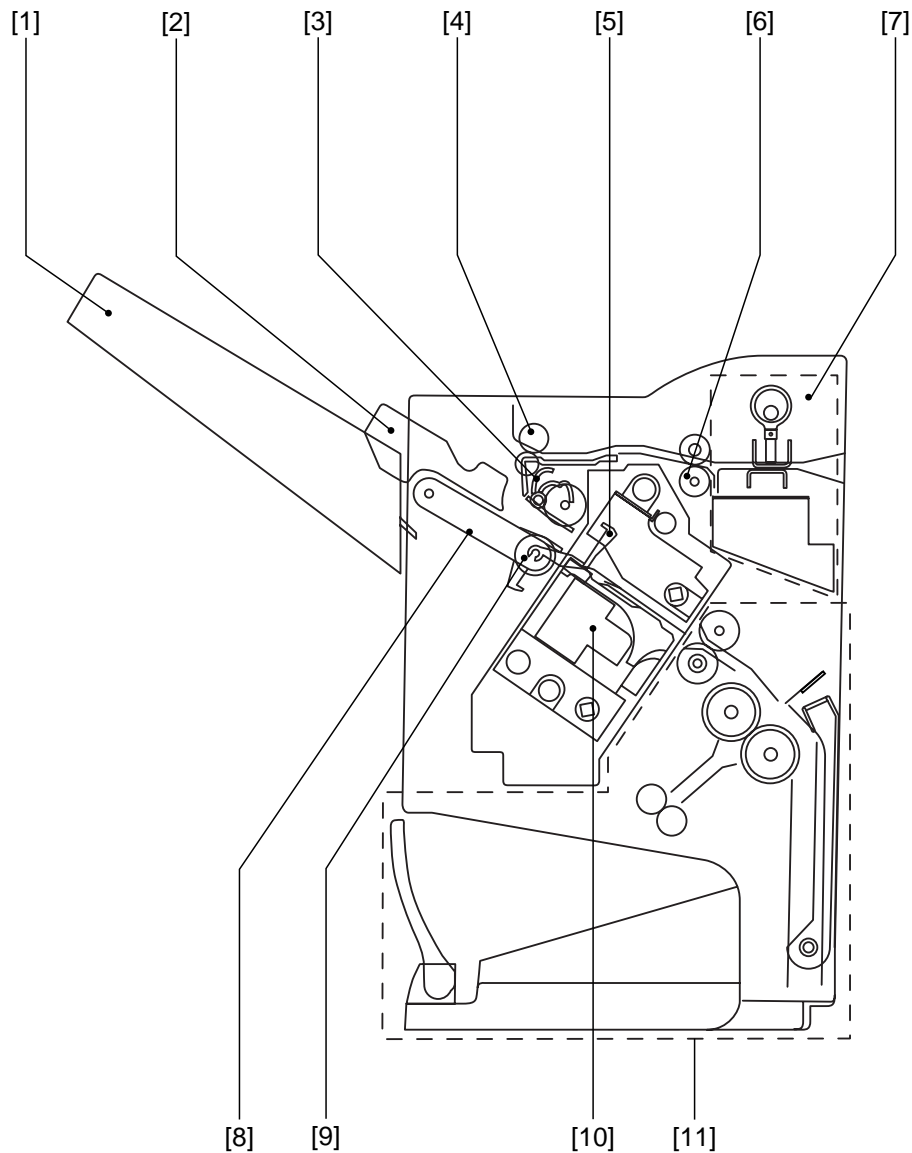

- | | |
|----------------------------------|---------------------------|
| [1] Delivery tray | [6] Feed roller |
| [2] Aligning plate (front, rear) | [7] Puncher unit (option) |
| [3] Paddle | [8] Delivery belt |
| [4] Delivery roller | [9] Stack delivery roller |
| [5] Processing tray stopper | [10] Stapler |
| | [11] Saddle unit |


F01-301-01

3.1.2 Saddle Unit

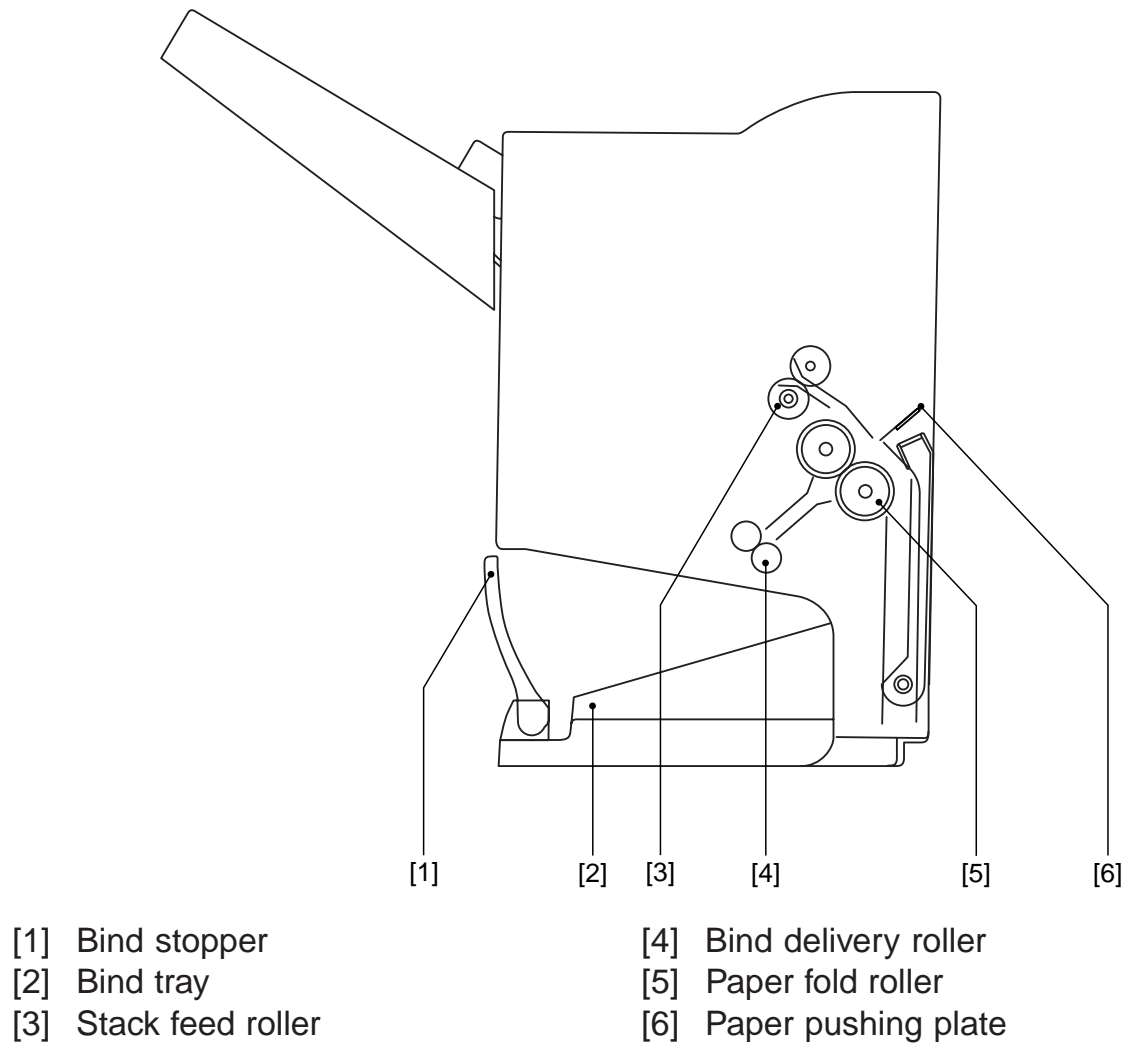

F01-301-02

3.1.3 Puncher Unit (option)

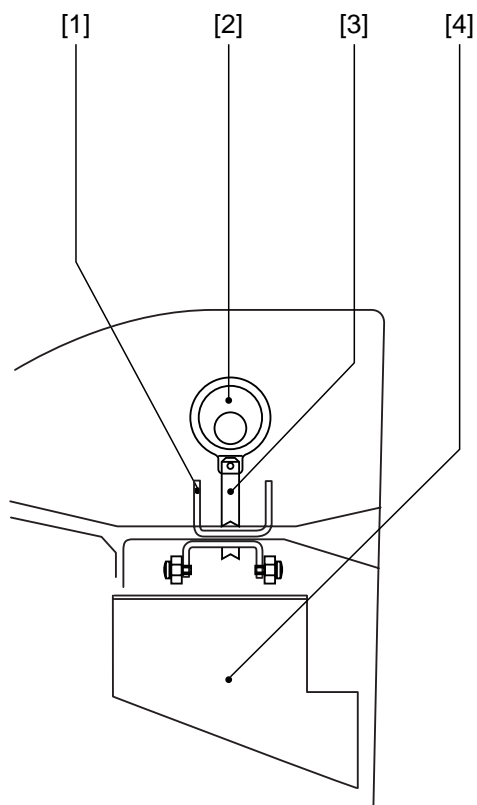

[1] Die
[2] Cam

[3] Hole puncher (Punch blade)
[4] Punch waste case

F01-301-03

4 Routine Maintenance by the User

| As of February, 2001 | | |
|----------------------|--------------------------------|---|
| No. | Item | Timing |
| 1 | Staple cartridge (replacement) | When prompted (indicator on host machine control panel) |
| 2 | Punch waste removal (optional) | When prompted (indicator on host machine control panel) |

T01-400-01

CHAPTER 2

OUTLINE OF OPERATION

1 Basic Operations

1.1 Specifications


The finisher serves to deliver sheets coming from its host machine. The mode of delivery may be non-sort stack, job offset*, or staple delivery.

The saddle unit built into the finisher is used to fold a stack of sheets coming from the finisher unit in half for delivery.

All these operations are controlled by various commands sent by the host machine in addition to the commands from the finisher controller PCB.

The puncher unit (option) is designed for installation to the pickup assembly of the finisher, and is used to punch holes in sheets coming from the host machine.

The above operations are controlled with various commands from the finisher controller PCB as well as the commands from the punch controller PCB.

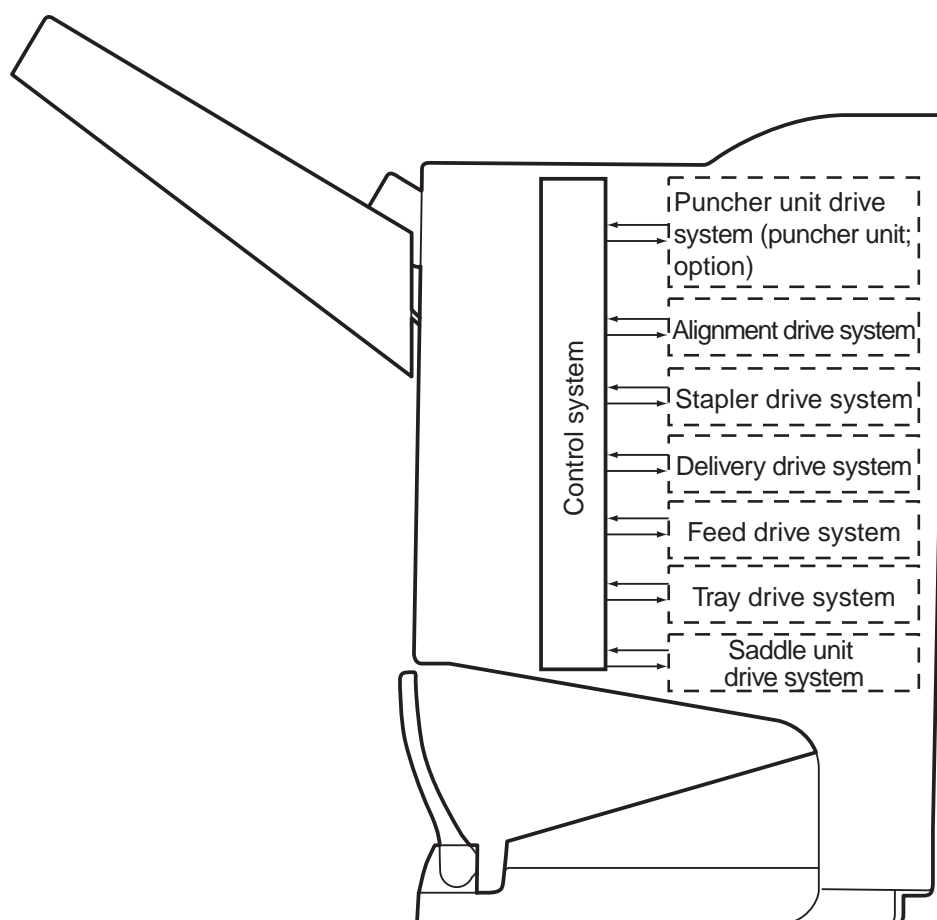

F02-101-01



The position of delivery is shifted to the front/rear for each stack to assist sorting.

1.2 Outline of the Electrical Circuitry


The sequence of finisher operations is controlled by the finisher controller PCB. The finisher controller PCB is a 16-bit microprocessor (CPU), and is also used for combination with the host machine (serial).

The finisher controller PCB drive motors and other loads in response to the various commands from the host machine. It also communicates such data as on the states of various sensors and switches to the host machine by way of the serial communication line.

The ICs mounted to the finisher controller PCB have the following functions:

- IC13 (CPU)
Controls sequence of operations.
- IC12 (EEP-ROM)
Backs up adjustment settings.
- IC6 (EP-ROM)
Stores sequence programs.
- IC11 (communication IC)
Communicates with the host machine.
- IC1 (regulator IC)
Generates 5 V.

F02-102-01 shows the flow of signals between finisher and options controller:

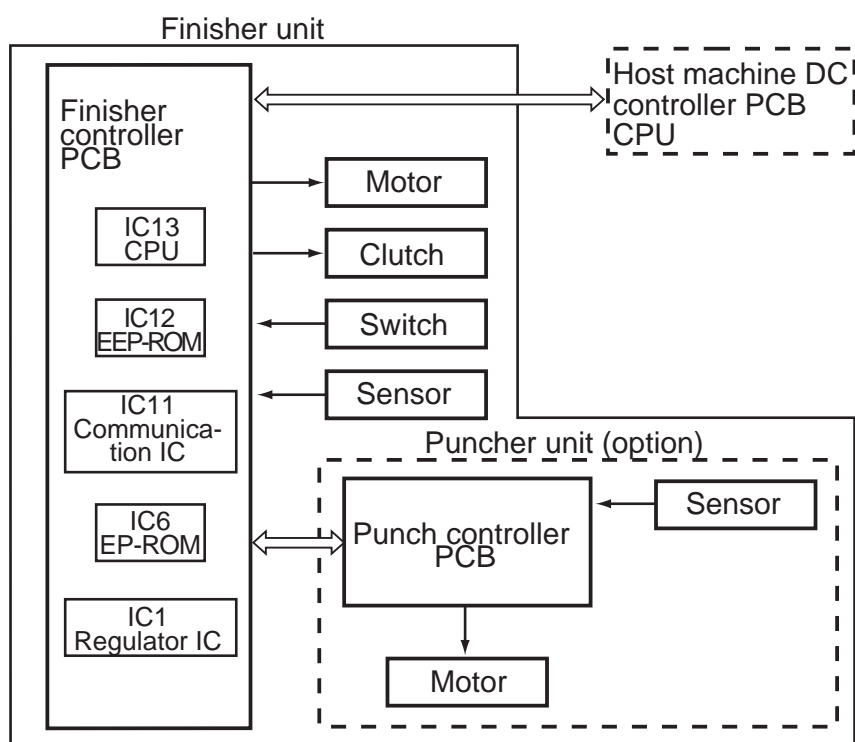

F02-102-01


1.3 Inputs to and Outputs from the Finisher Controller PCB

1.3.1 Inputs to the Finisher Controller PCB (1/2)

| Finisher controller PCB | | | | | | | | | |
|---|------|--------|--------|--------|---------|------|-------------|---|--|
| Inlet sensor | PI1 | CN44-3 | CN43-1 | CN42-3 | CN16-10 | +5 V | ENT_S | When the sensor detects paper, '1'. | |
| | | -1 | -3 | -1 | -12 | | | | |
| | | -2 | -2 | -2 | -11 | | | | |
| Paddle home position sensor | PI2 | CN51-1 | | | CN9-1 | +5 V | PDL_HP | When the paddle is at home position, '1'. | |
| | | -3 | | | -3 | | | | |
| | | -2 | | | -2 | | | | |
| Swing guide home position sensor | PI3 | CN55-3 | CN54-1 | CN53-3 | CN9-7 | +5 V | BDL_ROL_HP | When the swing guide is at home position, '1'. | |
| | | -1 | -3 | -1 | -9 | | | | |
| | | -2 | -2 | -2 | -8 | | | | |
| Aligning plate home position sensor (front) | PI4 | CN23-3 | | | CN4 | +5 V | F JOG_HP | When the aligning plate (front) is at home position, '1'. | |
| | | -1 | | | -3 | | | | |
| | | -2 | | | -2 | | | | |
| Aligning plate home position sensor (rear) | PI5 | CN36-3 | | | CN5-13 | +5 V | R JOG_HP | When the aligning plate (rear) is at home position, '1'. | |
| | | -1 | | | -15 | | | | |
| | | -2 | | | -14 | | | | |
| Processing tray sensor | PI6 | CN30-3 | CN29-1 | CN28-9 | CN5-1 | +5 V | ADJ_TRAY_S | When the sensor detects paper, '1'. | |
| | | -1 | -3 | -7 | -3 | | | | |
| | | -2 | -2 | -8 | -2 | | | | |
| Delivery belt home position sensor | PI7 | CN31-3 | -4 | -6 | -4 | +5 V | EJCT_BLT_HP | When the delivery belt is at home position, '1'. | |
| | | -1 | -6 | -4 | -6 | | | | |
| | | -2 | -5 | -5 | -5 | | | | |
| Tray paper sensor | PI8 | CN32-3 | -7 | -3 | -7 | +5 V | TRY_EMPS | When paper is present on the tray, '1'. | |
| | | -1 | -9 | -1 | -9 | | | | |
| | | -2 | -8 | -2 | -8 | | | | |
| Paper surface sensor | PI9 | CN35-3 | CN34-1 | CN33-3 | CN5-10 | +5 V | LVL_S | When the paper surface is detected, '1'. | |
| | | -1 | -3 | -1 | -12 | | | | |
| | | -2 | -2 | -2 | -11 | | | | |
| Folding position sensor | PI10 | CN39-3 | CN38-1 | CN37-9 | CN16-1 | +5 V | BIND_P | When paper is detected, '0'. | |
| | | -2 | -2 | -8 | -2 | | BIND_L | When LED is lit, '1'. | |
| | | -1 | -3 | -7 | -3 | | | | |


F02-103-01

1.3.2 Inputs to the Finisher Controller PCB (2/2)

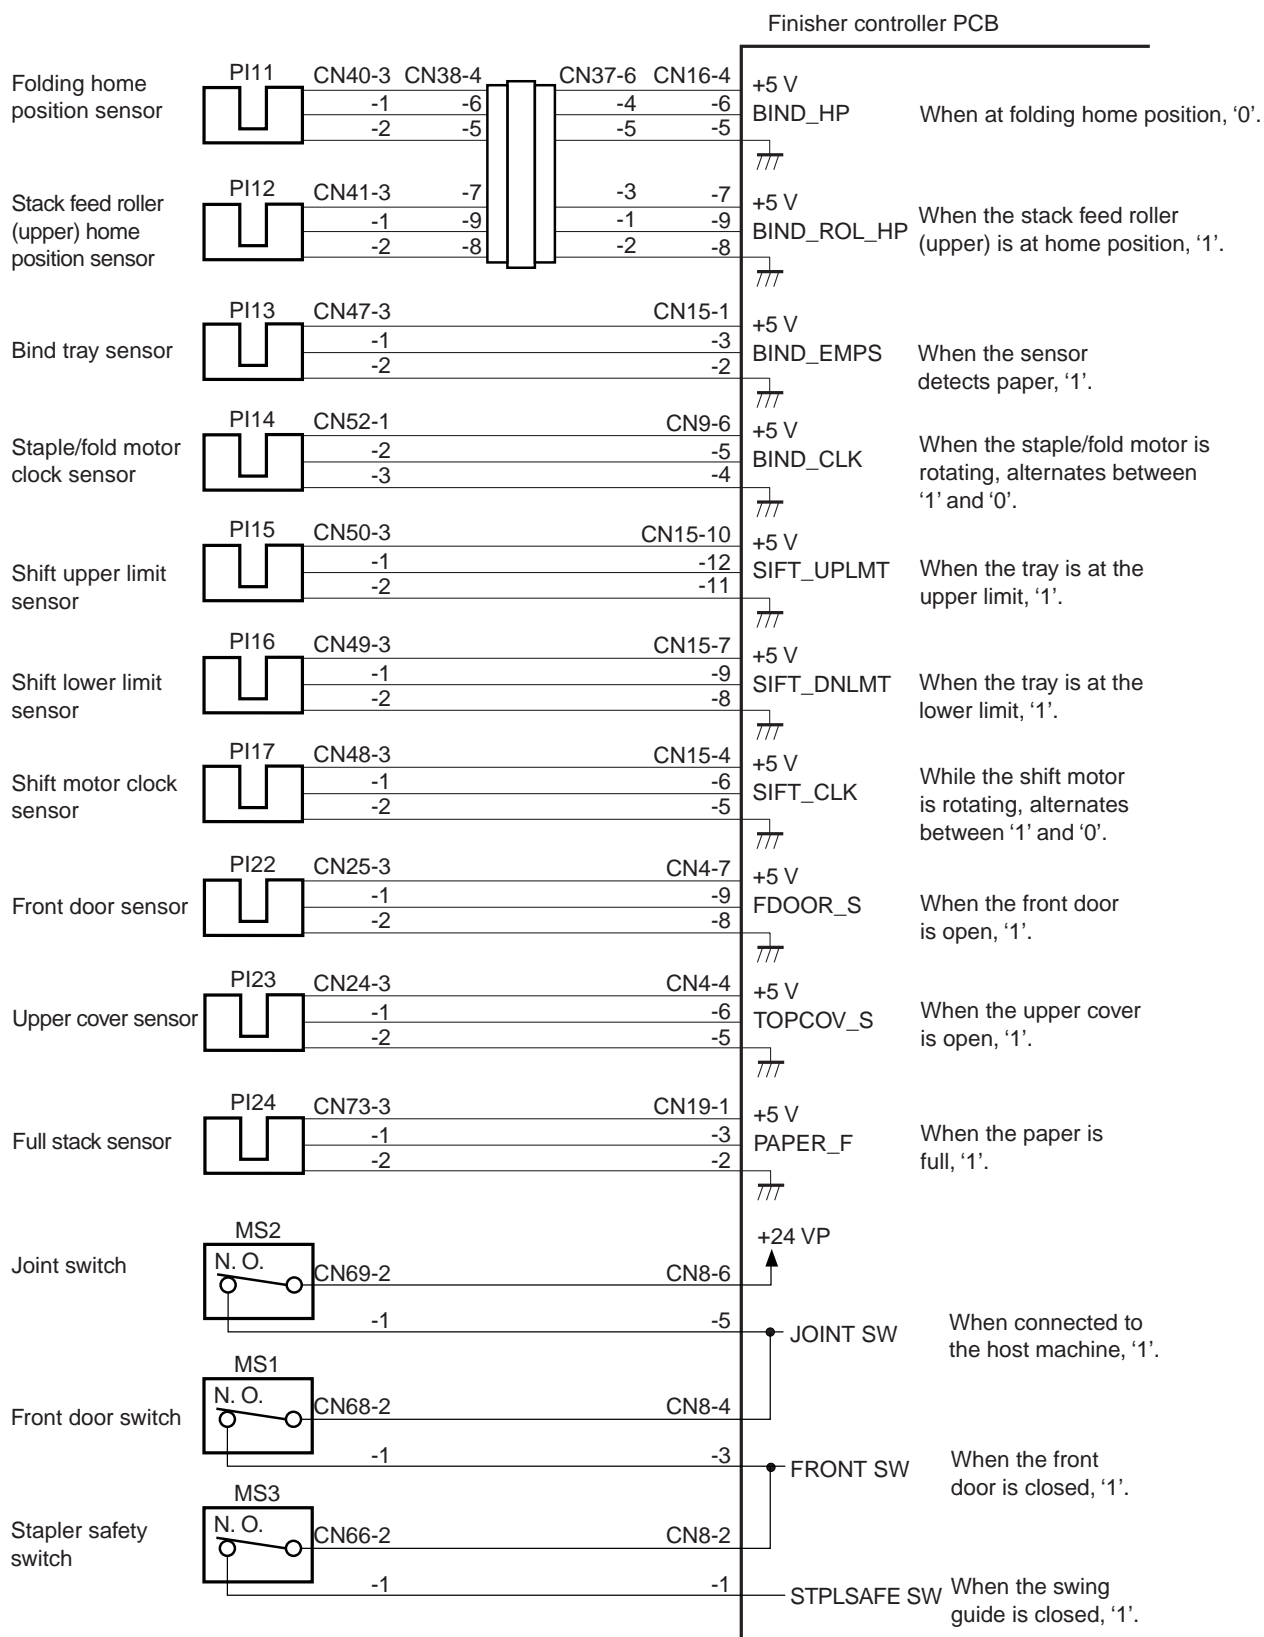


F02-103-02

1.3.3 Outputs from the Finisher Controller PCB (1/2)

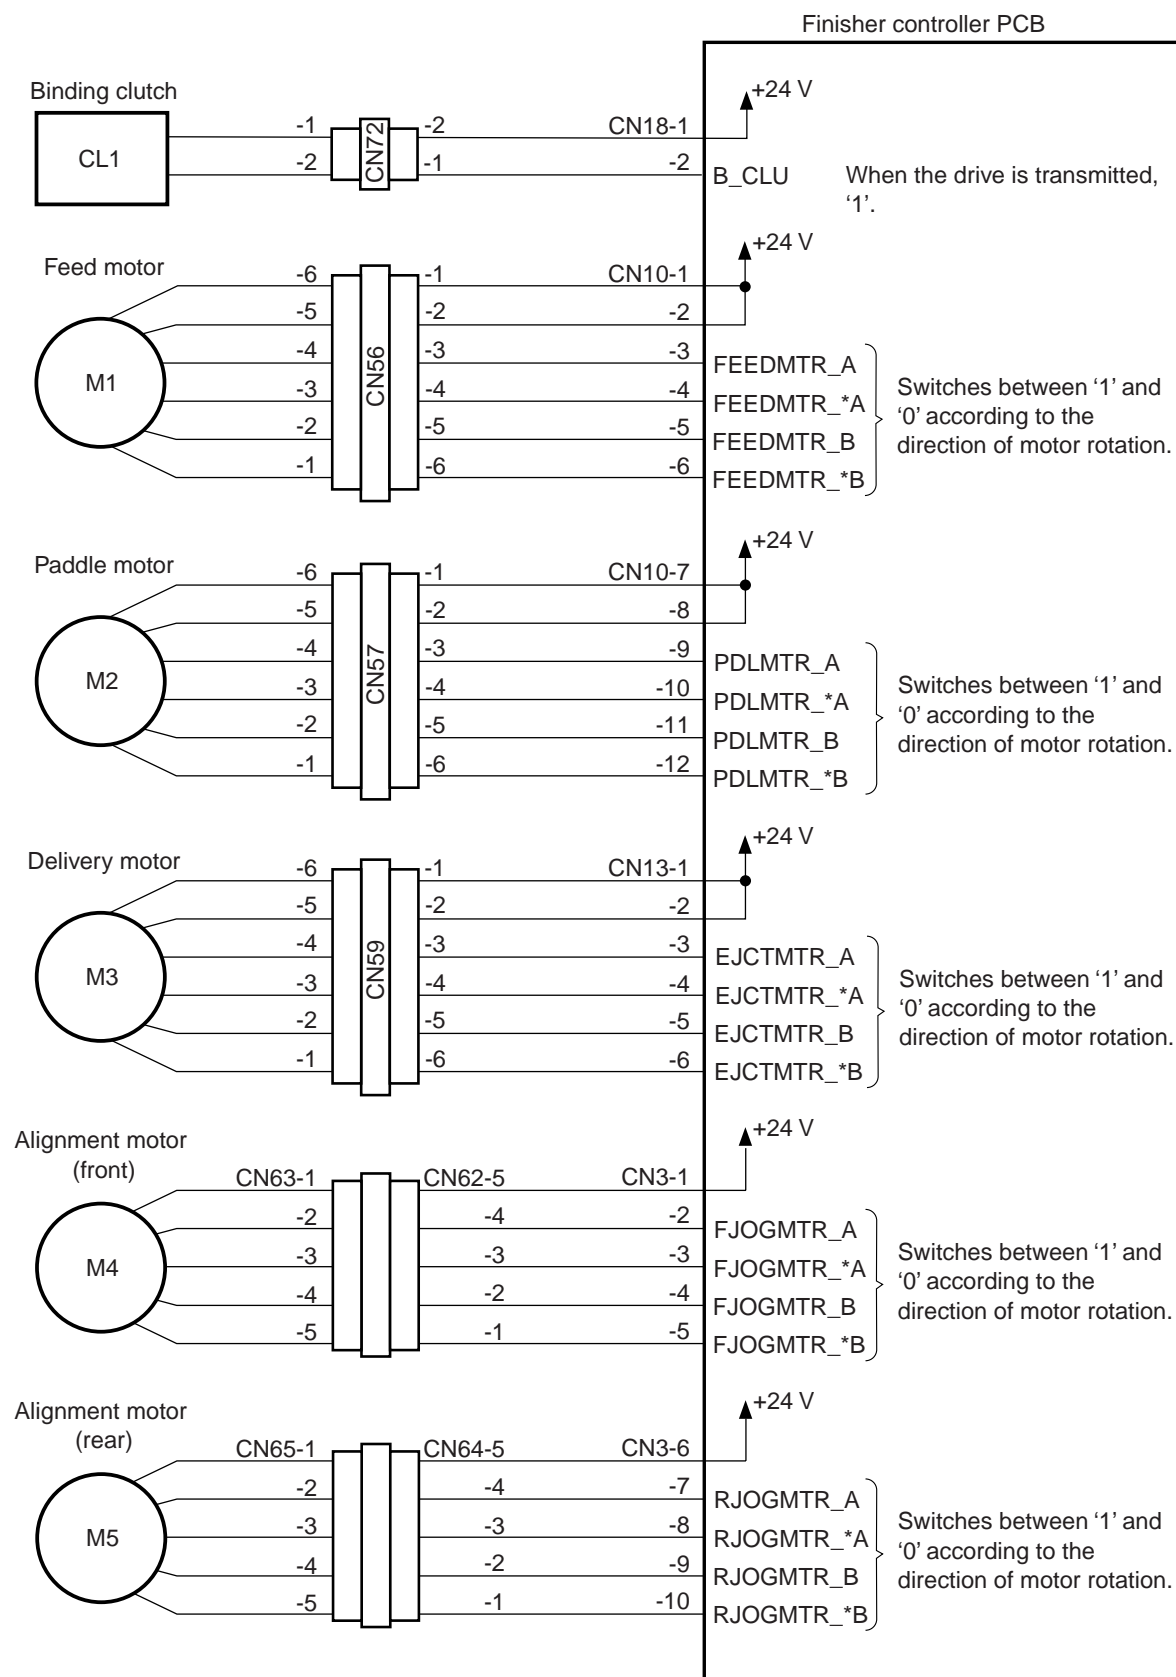


F02-103-03

1.3.4 Outputs from the Finisher Controller PCB (2/2)

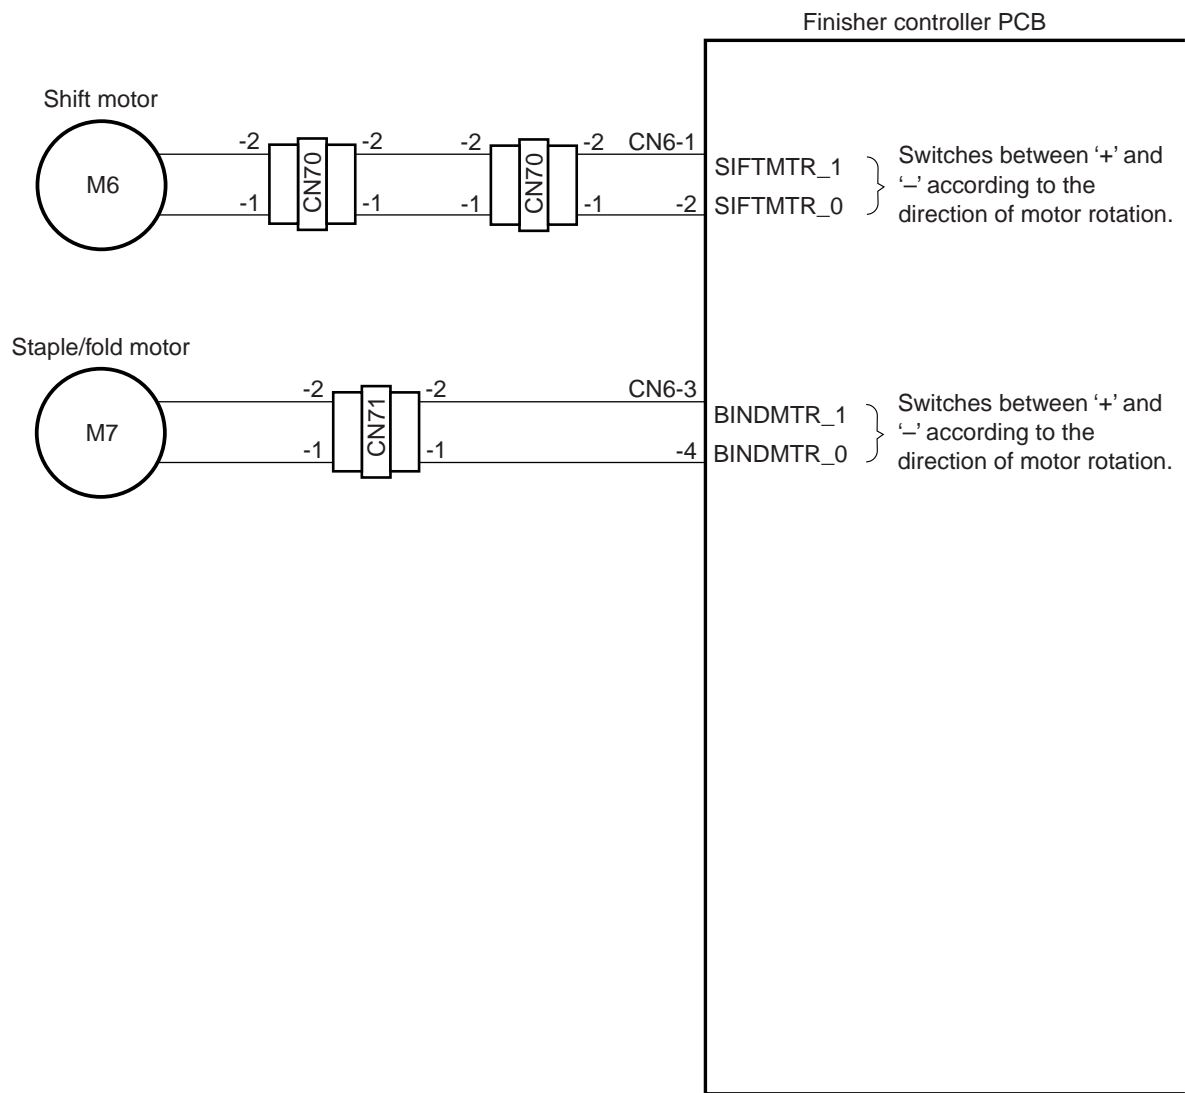

F02-103-04


1.3.5 Inputs to and Outputs from the Finisher Controller

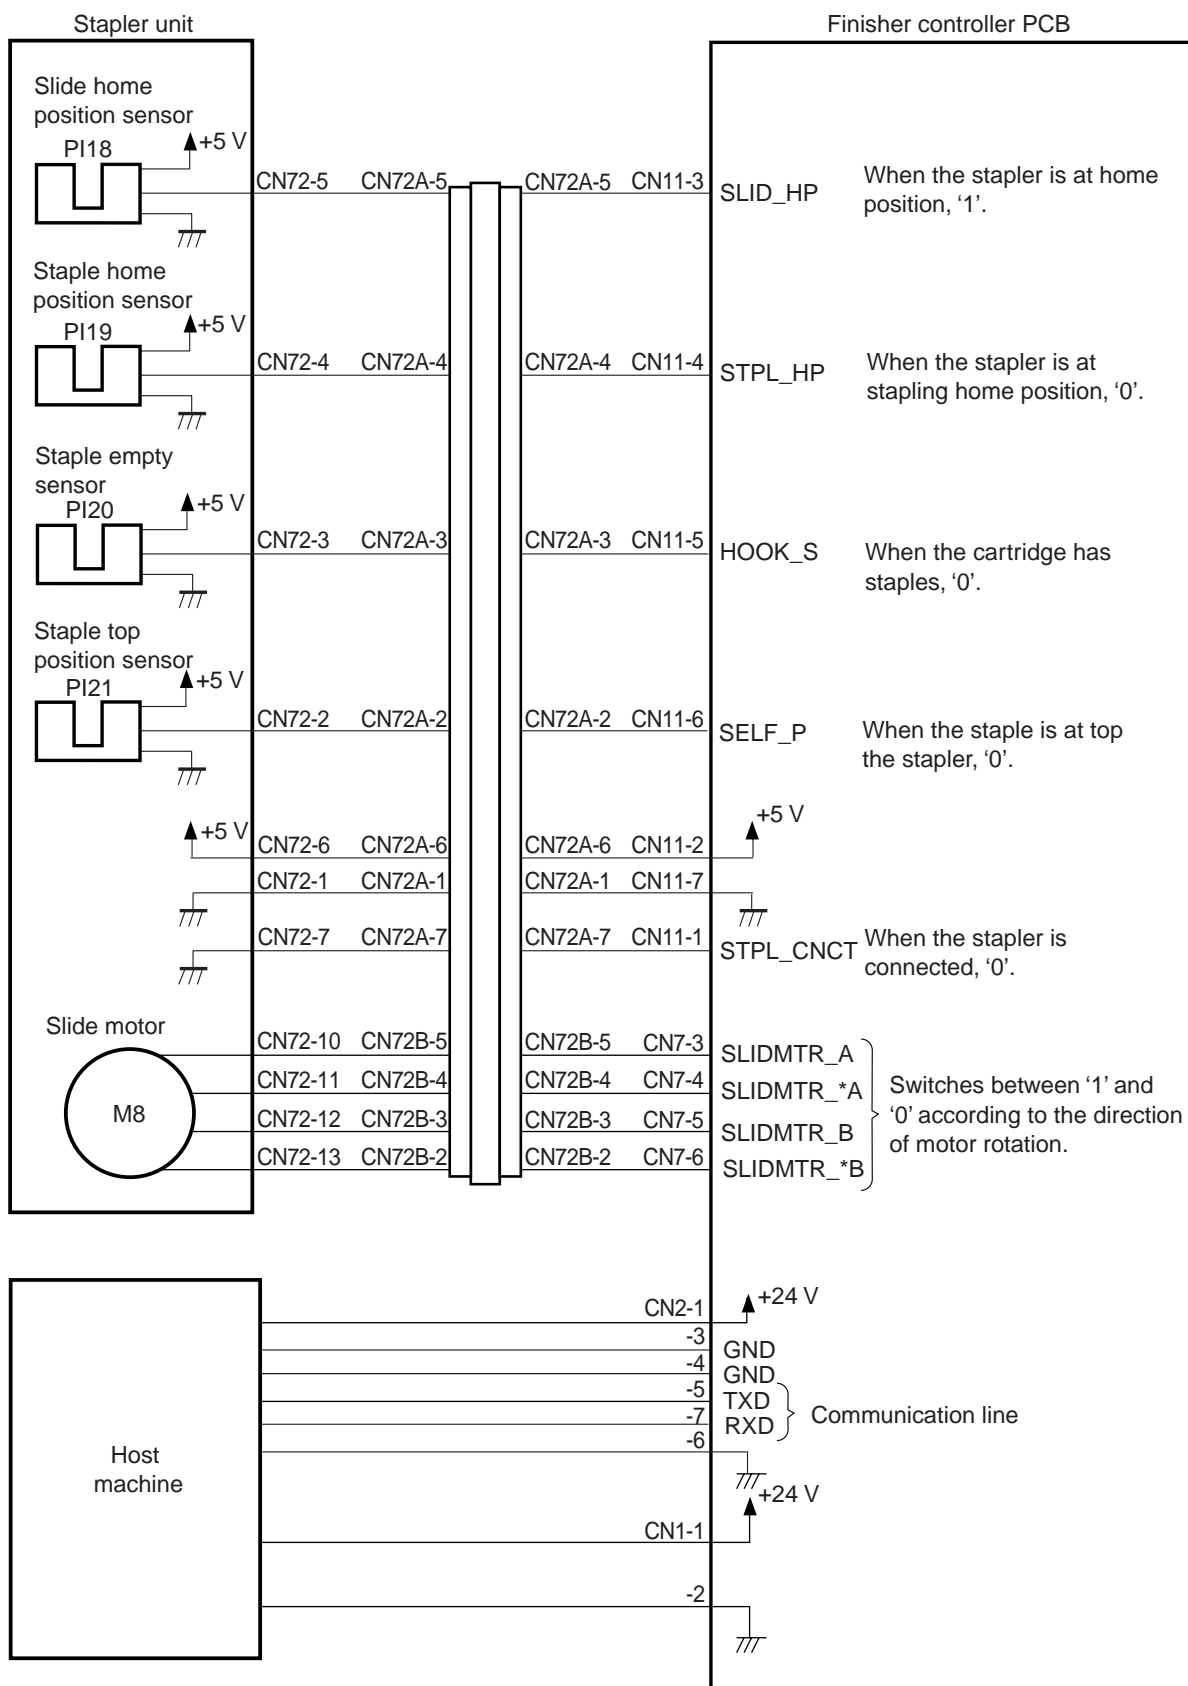

F02-103-05


1.4 Inputs to and Outputs from the Punch Controller PCB (option)

1.4.1 Inputs to and Outputs from the Punch Controller PCB

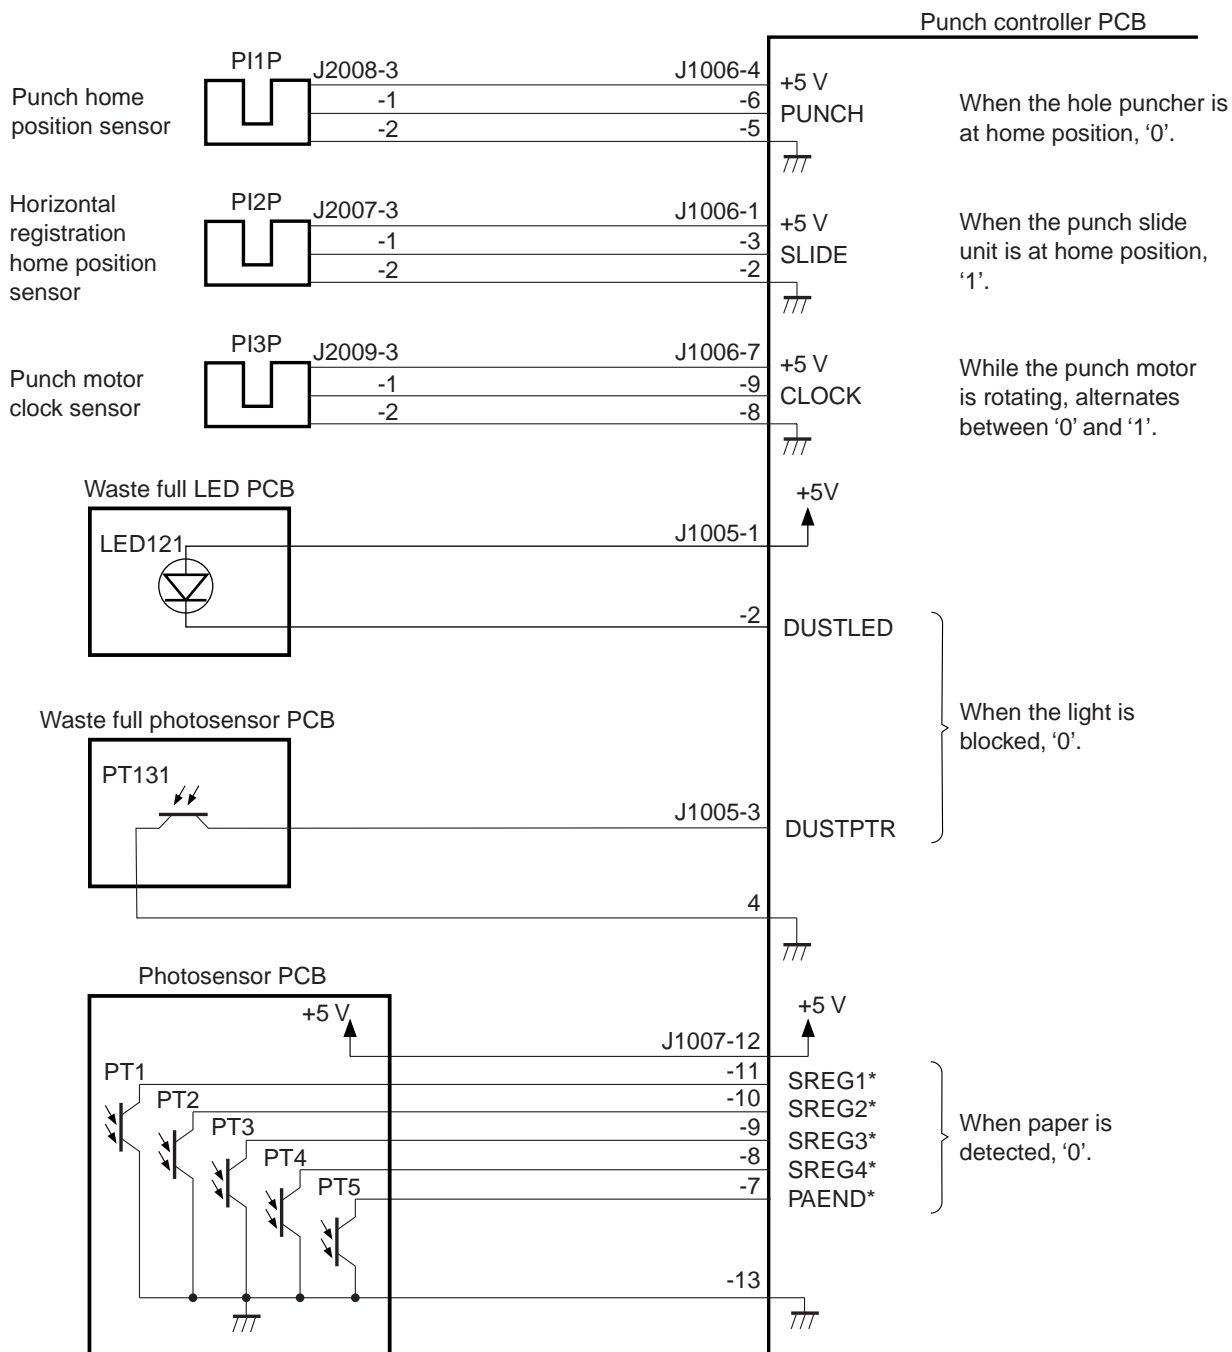

F02-104-01

1.4.2 Outputs from the Punch Controller PCB

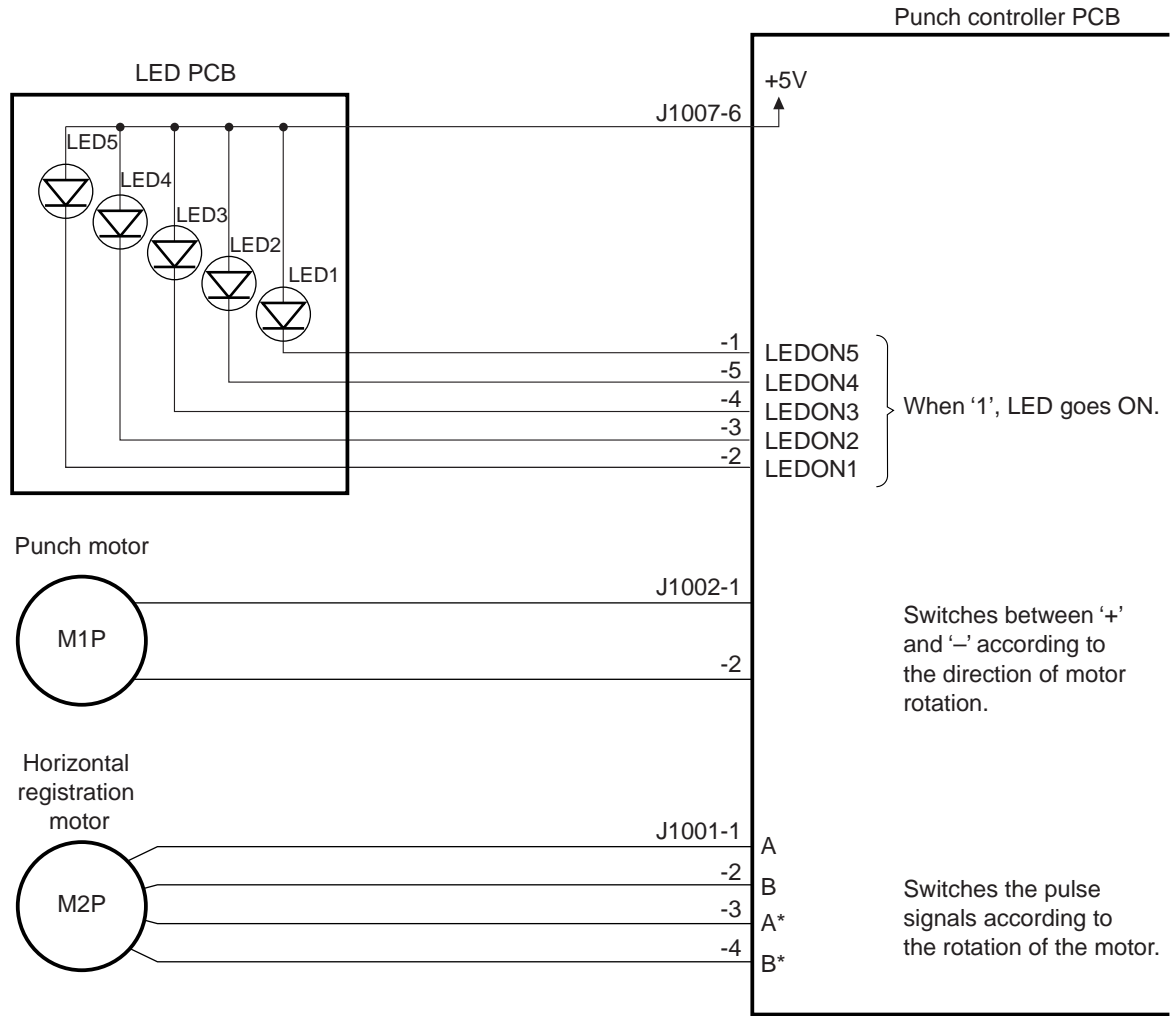

F02-104-02


2 Feed/Drive System

2.1 Outline

The machine performs the following in response to the commands coming from its host machine on the sheets arriving from the host machine for delivery: simple stacking, job off-set, and stapling or folding (in two).

If a punch unit (option) is installed, the sheets are pouched and delivered to the delivery tray.

Sheets may be delivered in either of five ways (including one for the puncher unit):



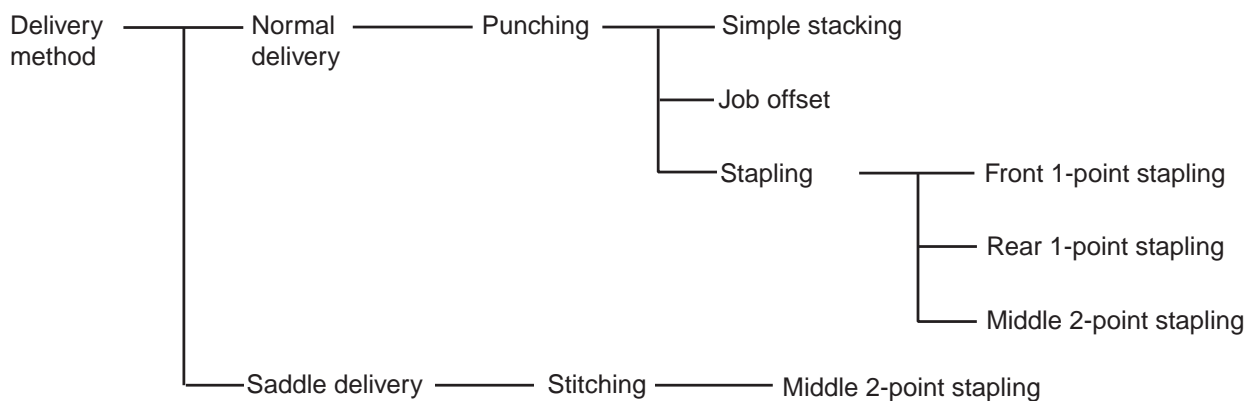


F02-201-01

2.1.1 Normal Delivery

a. Simple Stacking



The machine pulls in the sheet once to the processing tray and then delivers it to the delivery tray.

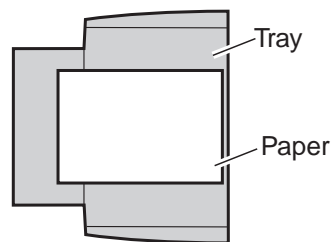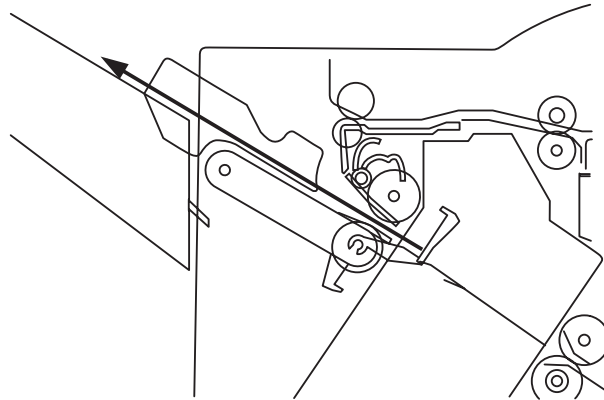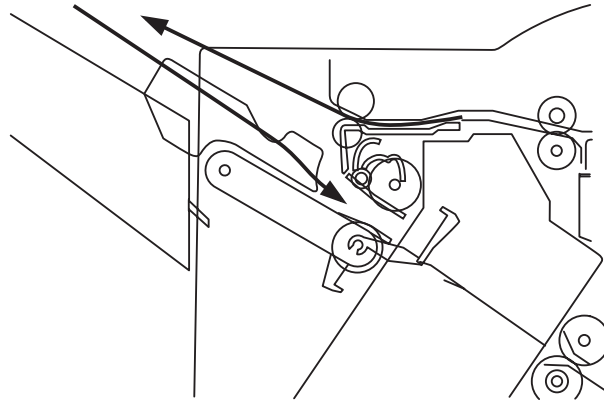


F02-201-02

b. Job Offset

The machine pulls the sheet once to the processing tray. It then moves the sheet to the front or the rear using the aligning plate. When it has deposited a specific number of sheets, it delivers them in the form of an aligning plane. When the number of sheets stacked on the processing tray reaches a specified value, the sheets are delivered in a form of a stack. Even if the specified value is not reached, stacked sheets are temporarily delivered when 10 sheets of large-size paper (300 mm or longer) or 30 sheets of small-size paper (299 mm or shorter) have been stacked. (5- and STMT-sizes: 10 sheets)

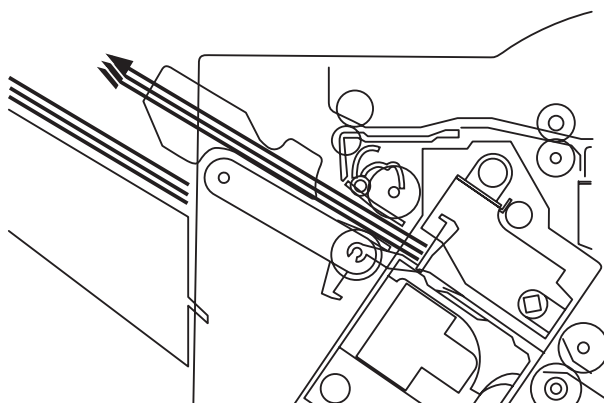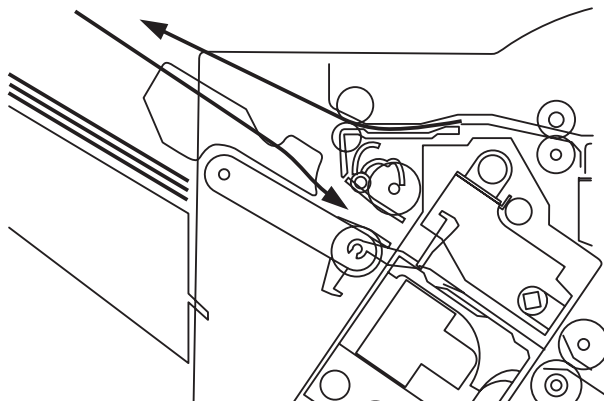



Results of offset delivery (4 jobs)

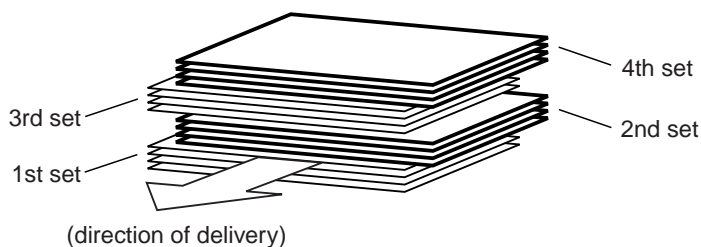

F02-201-03

c. Stapling



The machine stacks sheets coming from its host machine on the processing tray. When the number of sheets stacked on the processing tray reaches a specified value, the finisher staples them and delivers the stapled stack to the delivery tray.

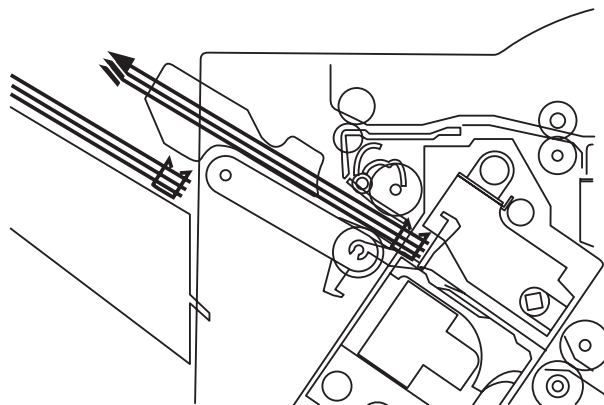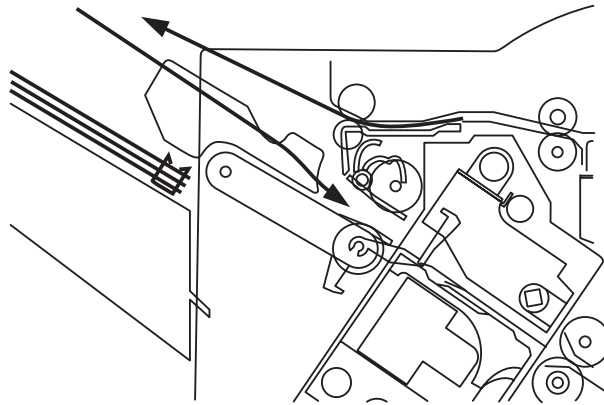

F02-201-04

d. Saddle Delivery

The machine deposits a stack of sheets on the processing tray, staples it (middle 2-point), and then moves it to the saddle unit. The saddle unit folds the stack in two, and delivers it to the bind tray.

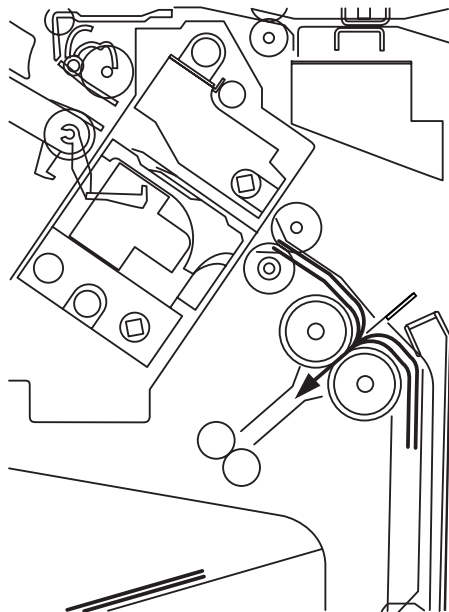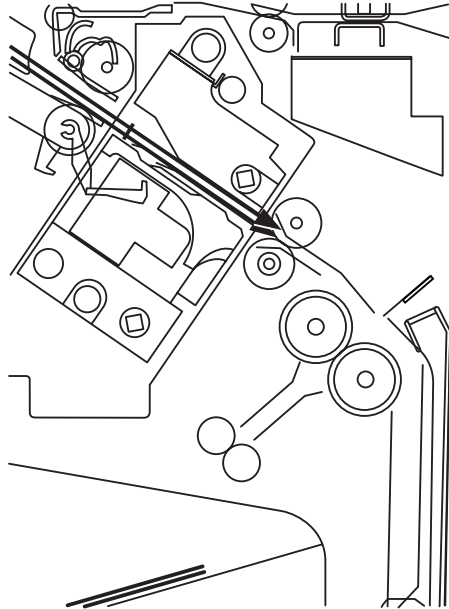

F02-201-05

2.2 Feed/Delivery

2.2.1 Outline

The machine forwards the sheets coming from its host machine to the delivery tray, processing tray, or saddle unit according to the type of delivery used. The sheets forwarded to the processing tray or the saddle unit are offset, stapled, or folded.


F02-202-01 shows the motors that are associated with moving and aligning sheets. These motors are controlled (rotated clockwise or counterclockwise) by the microprocessor (CPU) on the finisher controller PCB.

The paper path is equipped with the sensors shown in T02-202-02 used to monitor the arrival or passage of sheets.


If a sheet fails to arrive at or move past a specific sensor within a specific period of time, the finisher controller will assume a jam, and stops the ongoing operation and, at the same time, communicates the presence of a jam to the host machine.

| Notation | Name | Description | Connector on finisher controller PCB |
|----------|-------------------------------|----------------|--------------------------------------|
| M1 | Feed motor | Stepping motor | CN10 |
| M2 | Paddle motor | Stepping motor | CN10 |
| M3 | Delivery motor | Stepping motor | CN13 |
| M4 | Alignment plate motor (front) | Stepping motor | CN3 |
| M5 | Alignment plate motor (rear) | Stepping motor | CN3 |
| M7 | Staple/fold motor | Brush DC motor | CN6 |

T02-202-01

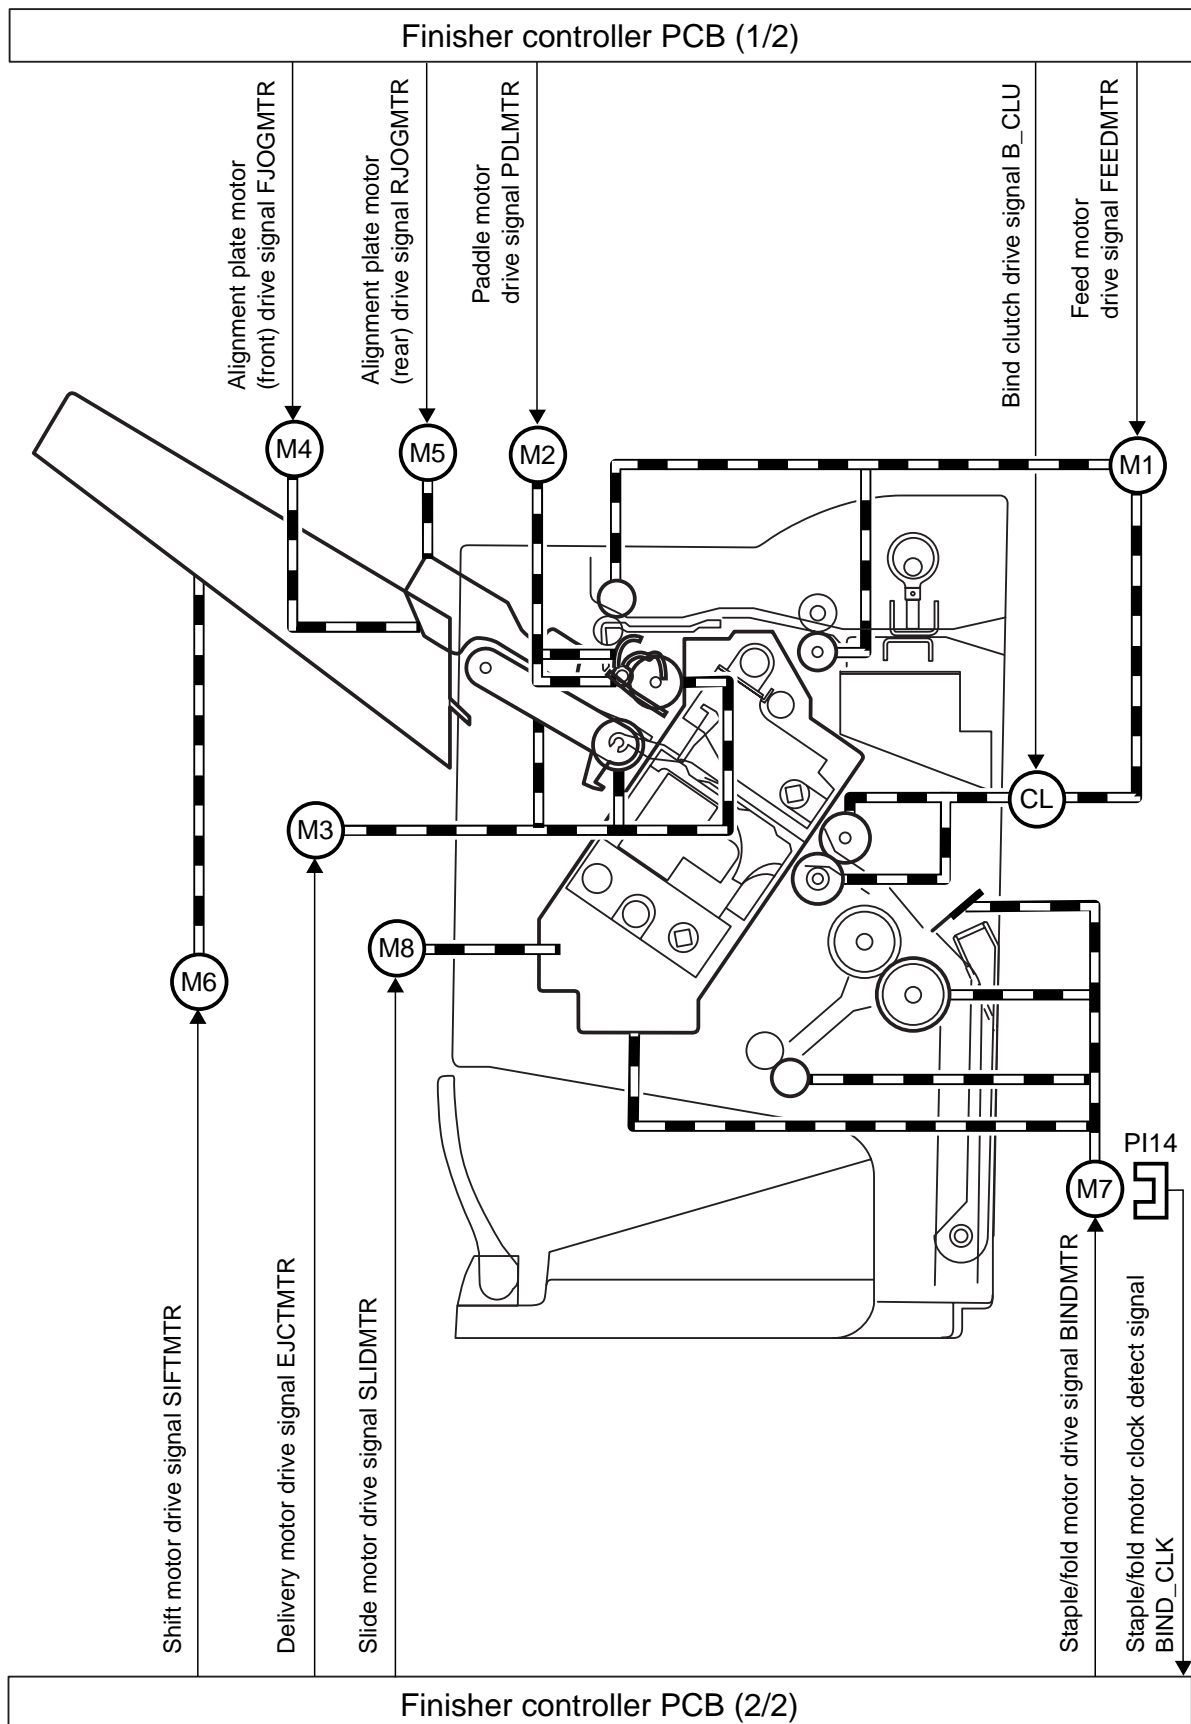

F02-202-01

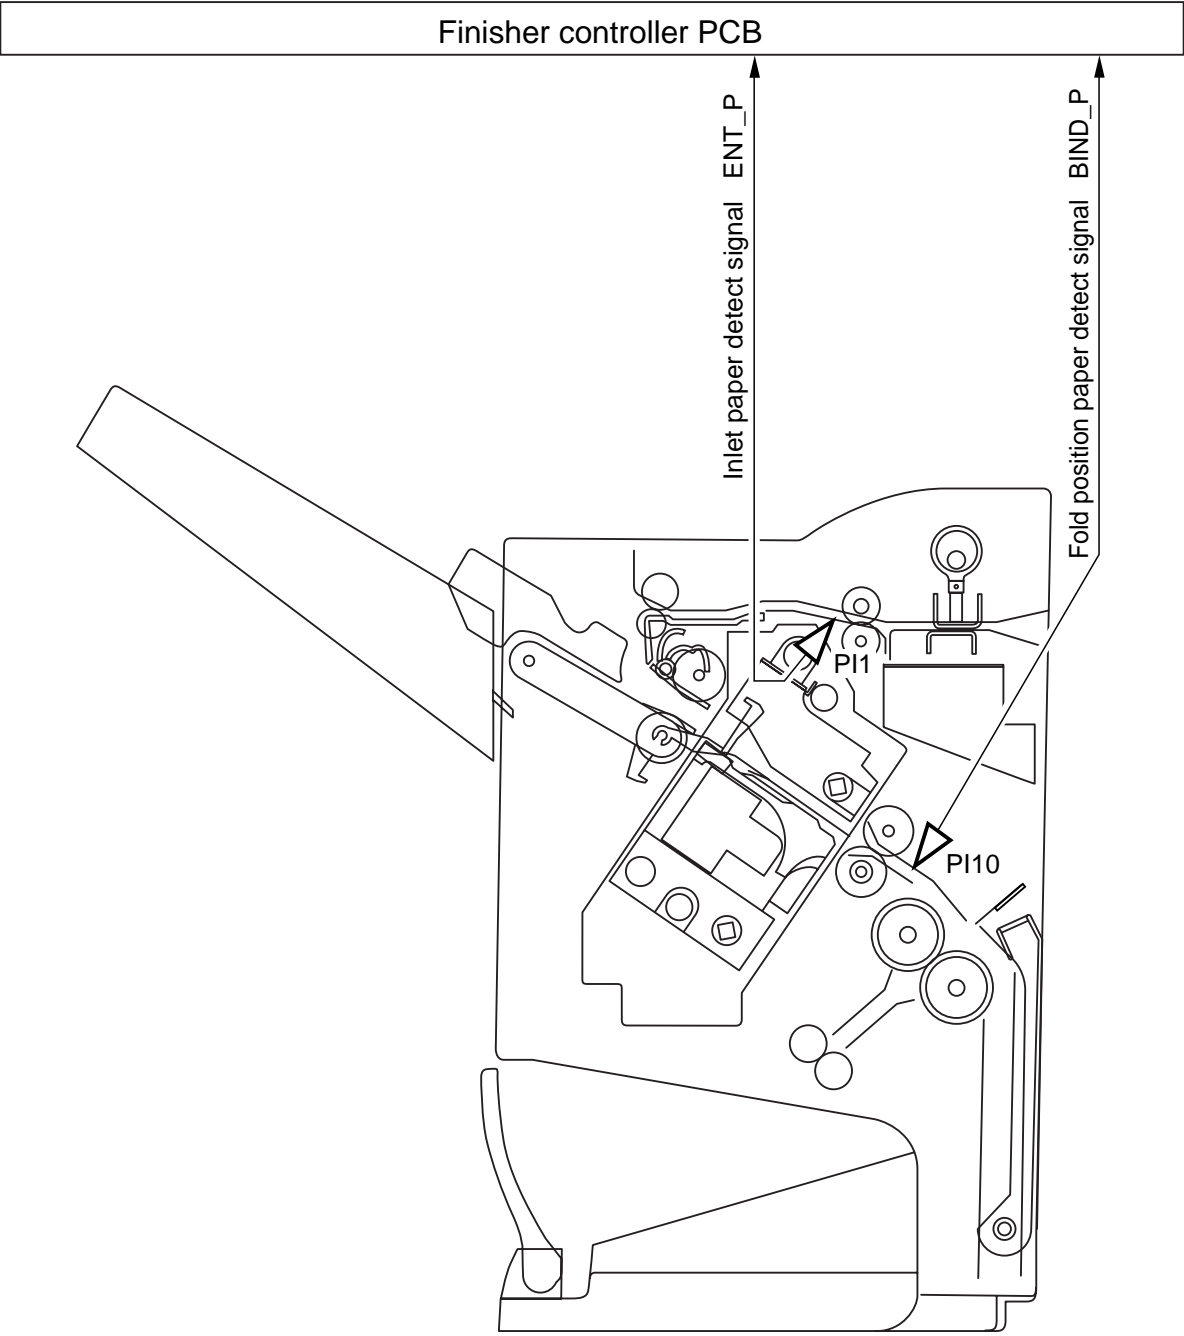

F02-202-02

| Notation | Name | Description | Connector on finisher controller PCB |
|----------|----------------------|------------------|--------------------------------------|
| PI1 | Inlet sensor | Photointerrupter | CN16 |
| PI10 | Fold position sensor | Photointerrupter | CN16 |

T02-202-02

2.3 Job Offset

2.3.1 Outline

"Job offset" refers to the operation by which the machine delivers a set of sheets with them pulled forward or backward for sorting.

Switching between the forward and backward directions is made using an aligning plate (front) and an aligning plate (rear).


The sheet coming between the delivery rollers is fed onto the processing tray and then fed toward the stopper by the paddle.

A swing guide is at the up position while a sheet is being pulled onto the processing tray or during alignment. It is at the down position during stack feeding, stack delivery, or stapling.

At power-on, the finisher controller PCB drives the aligning plate (front) motor (M4) and the aligning plate (rear) motor (M5) to return the two aligning plates to their home positions.

| Sensor | Symbol | Connector | Function | Motor | Simbol |
|---|--------|-----------|-----------------------------------|------------------------------|--------|
| Aligning plate (front) home position sensor | PI4 | CN4-3 | Drives the aligning plate (front) | Aligning plate (front) motor | M4 |
| Aligning plate (rear) home position sensor | PI5 | CN5-15 | Drives the aligning plate (rear) | Aligning plate (rear) motor | M5 |
| Swing guide home position sensor | PI3 | CN9-9 | Drives the swing guide drive. | Paddle motor | M2 |
| Paddle home position sensor | PI2 | CN9-3 | Drives the paddle (feeds paper). | Paddle motor | M2 |


T02-203-01

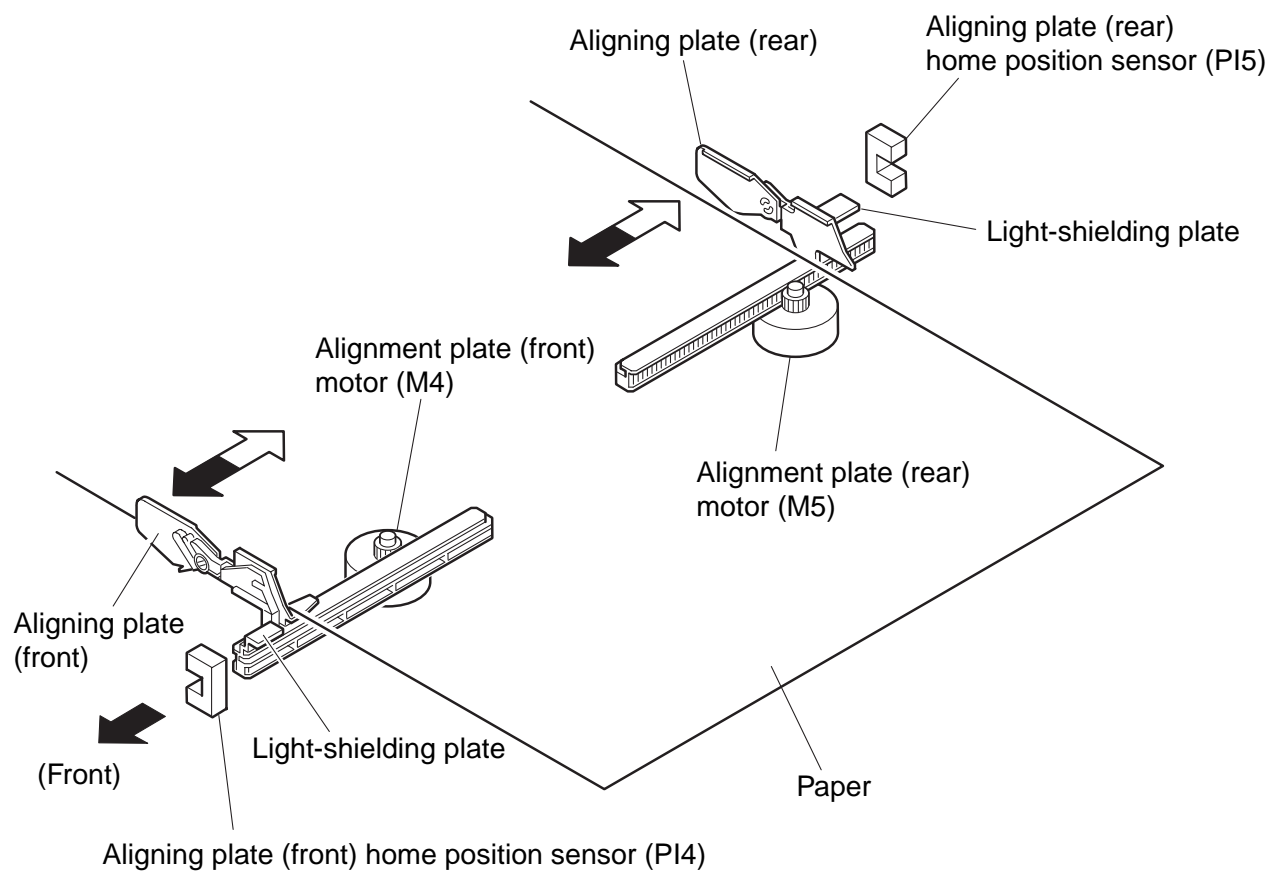

F02-203-01

2.3.2 Processing Tray Paper Stacking Operation

A sheet coming between the delivery rollers is fed onto the processing tray. Then, the paddle taps on the sheet surface twice (once for the second and subsequent sheets) to locate the sheet against the processing tray stopper.

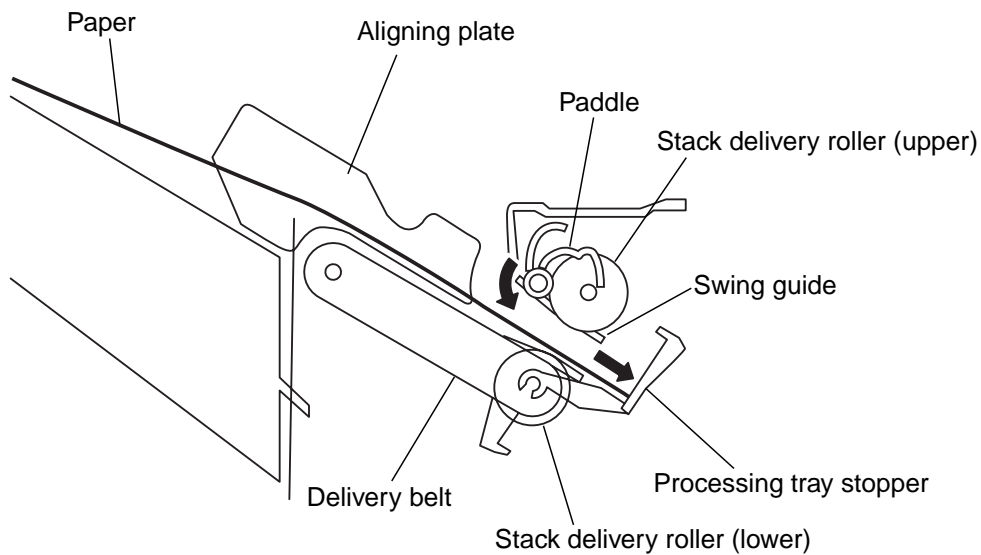


T02-203-02


2.3.3 Offset Operation

Each sheet is pulled forward or backward using the aligning plate (front) and the aligning plate (rear).

The offset operation is performed each time a sheet is pulled onto the processing tray.

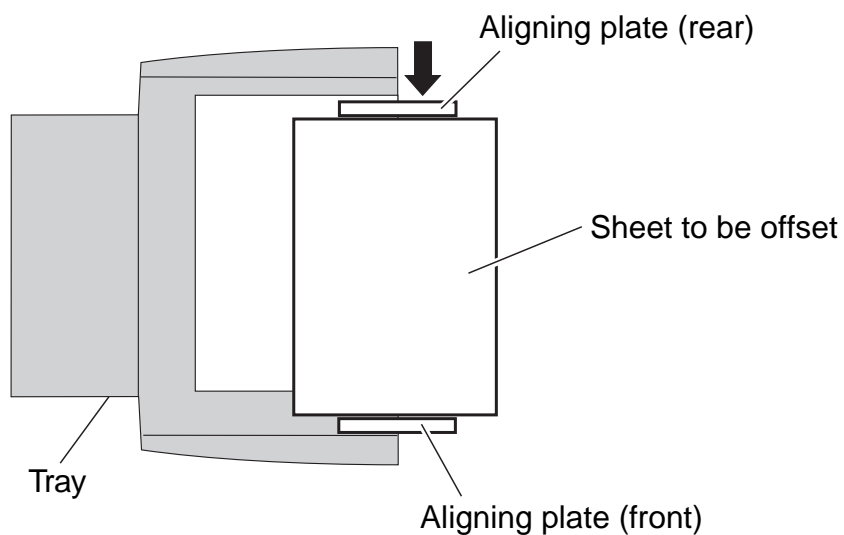

F02-203-03 Offsetting in the forward direction

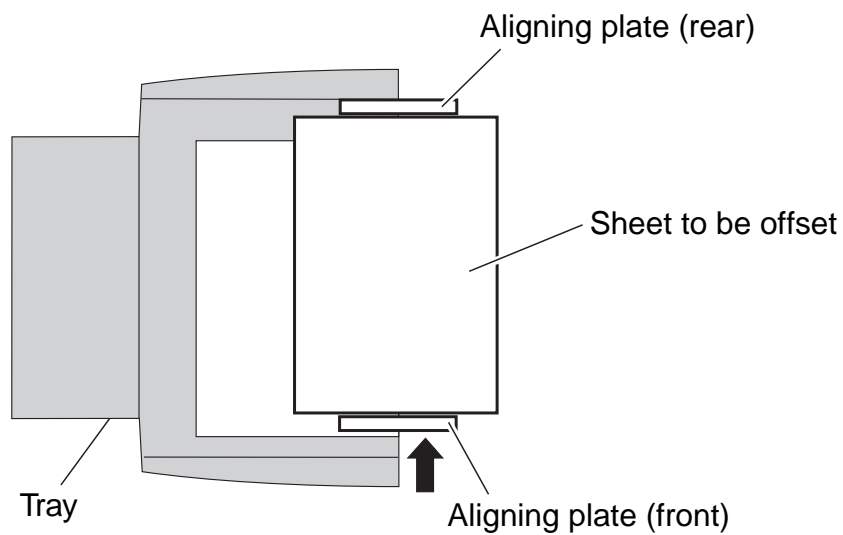


F02-203-04 Offsetting in the backward direction

2.3.4 Stack Delivery Operation


Stack delivery takes place when 10 sheets of large-size paper or 30 sheets of small-size paper (A5- and STMT-sizes: 10 sheets) have been stacked on the processing tray with them offset in either direction.

The paddle motor rotates and the swing guide descends to hold the paper stack between the upper and lower stack delivery rollers. The delivery motor rotates in the forward direction to rotate the delivery rollers, feeding the paper stack in the delivery direction. The delivery belt home position sensor is turned OFF. The delivery motor is driven a specified number of pulses, causing the swing guide to ascend. Next, the paper delivery motor is driven. Next, the delivery motor is driven to deliver the paper stack with the nails of the delivery belt that rotates in sync with the stack delivery rollers.

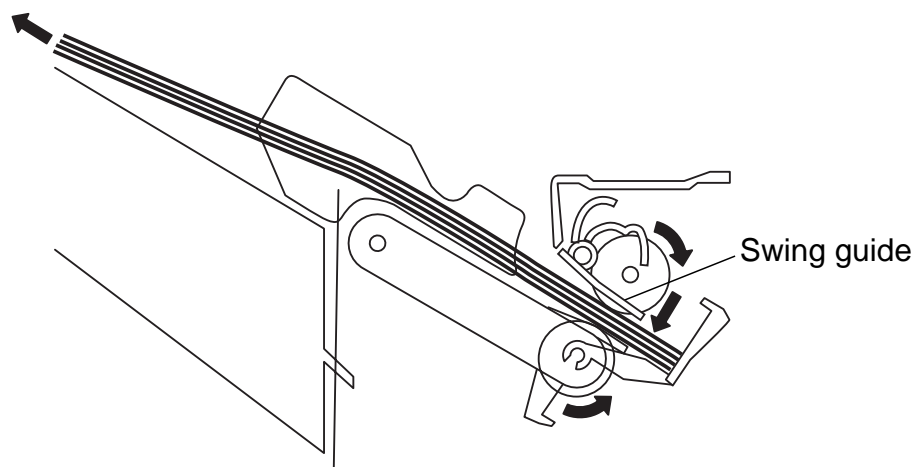

F02-203-05

Job offset sequence

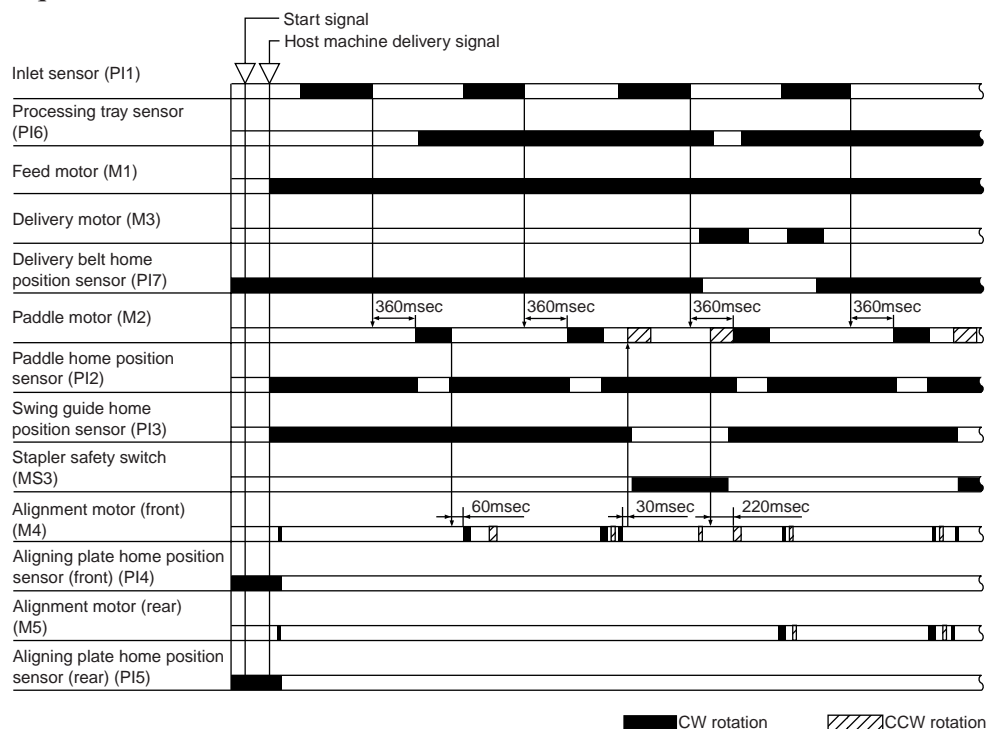

F02-203-06

3. Stapling Operation

3.1 Outline

Staple operation is performed to staple a specified sheets of paper using a stapler unit.


The stapling position depends on the staple mode and paper size.

When the machine starts immediately after power-on, the finisher controller PCB drives the slide motor (M8) to return the stapler unit to the home position. The stapler unit starts moving toward the front of the stapler frame. It stops when the slide home position sensor (PI18) on the slide PCB located under the stapler unit. Next, the slide motor is driven a specified number of pulses. The stapler unit moves to rear standby position at the back of the machine, entering the standby state.

| Sensor | Simbol | Connector | Function | Remarks |
|-----------------------------|--------|-----------|--|----------------|
| Slide home position sensor | PI18 | CN11-3 | Detects the home position for the stapler moving back and forth. | – |
| Staple home position sensor | PI19 | CN11-4 | Detects the home position for the stapling operation | In the stapler |
| Staple empty sensor | PI20 | CN11-5 | Detects presence or absence of staples in the cartridge. | In the stapler |
| Staple top position sensor | PI21 | CN11-6 | Detects the staple top position. | In the stapler |

| Function | Motor | Symbol | Remarks |
|------------------------------|-------------------|--------|---------|
| Moves the stapler. | Slide motor | M8 | – |
| Performs stapling operation. | Staple/fold motor | M7 | – |

T02-301-01

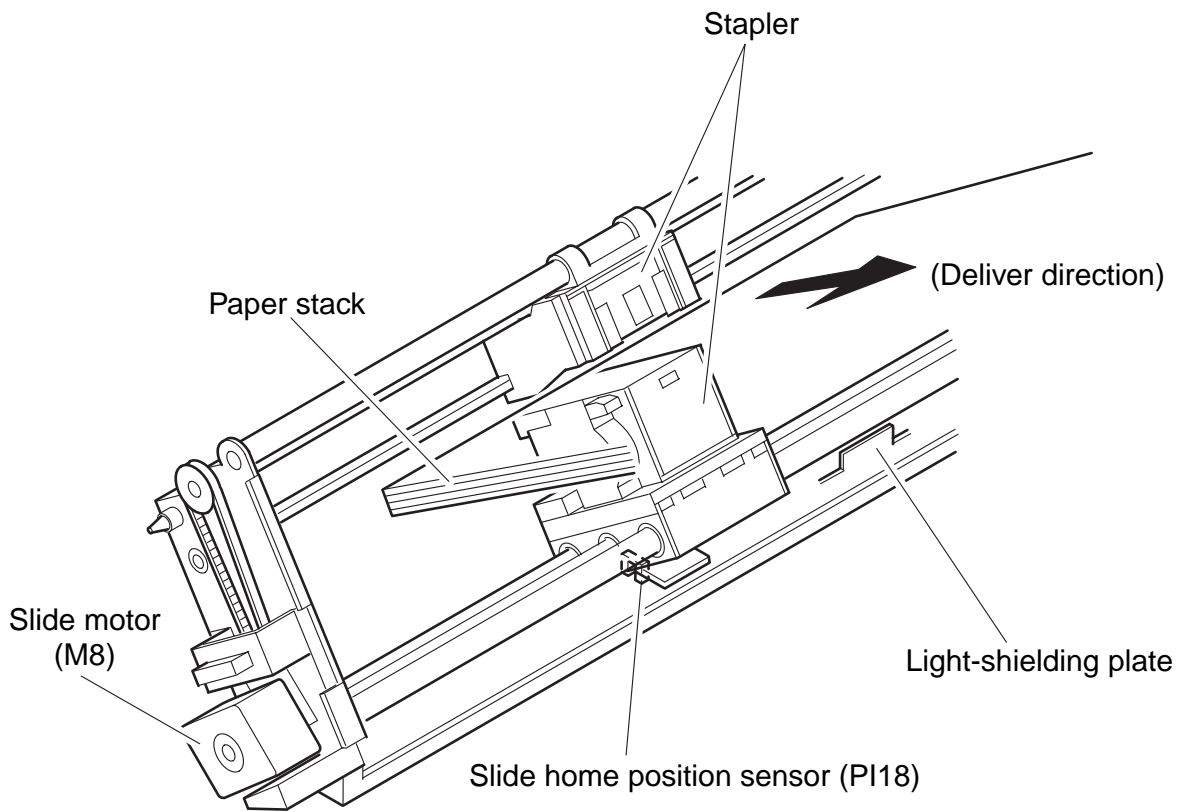


F02-301-01


3.2 Stapling Operation

When stacking and alignment of paper on the processing tray are complete, the finisher controller PCB drives the paddle motor (M2) in the reverse direction and lowers the swing guide. When the swing guide descends, the paper stack is sandwiched between the upper and lower stack delivery rollers.

The finisher controller PCB moves the stapler for stapling according to the specified stapling position (when rear 1-point stapling is specified, the stapler does not move but it staples at the standby position). As the stapler moves forward, the processing tray stopper is folded forward.

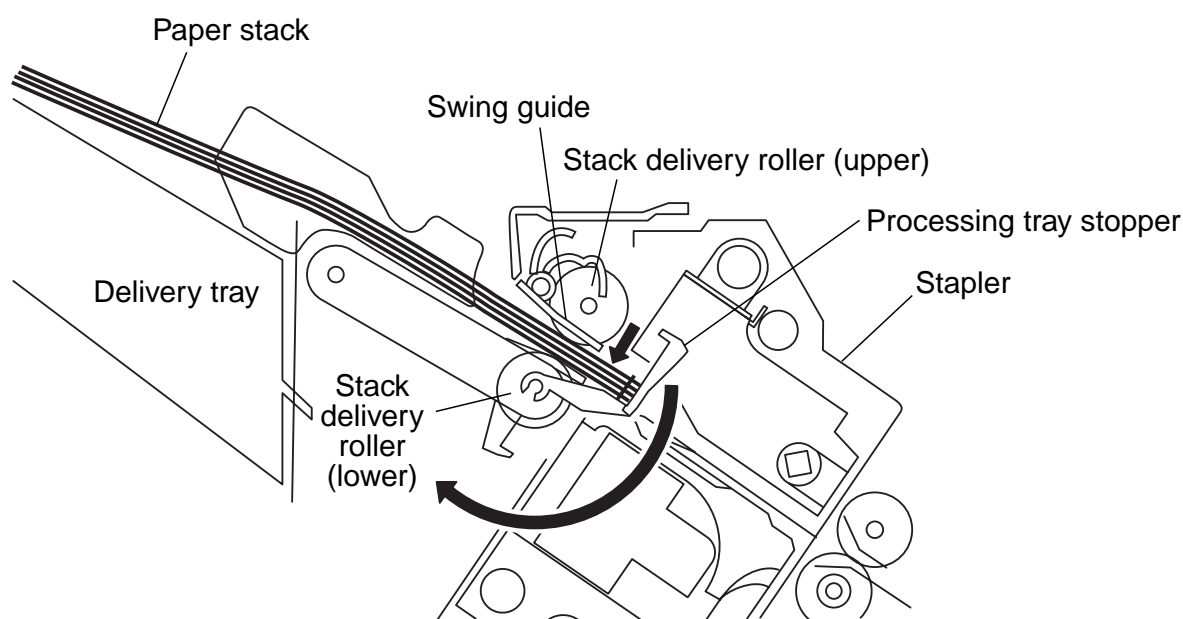


F02-302-01

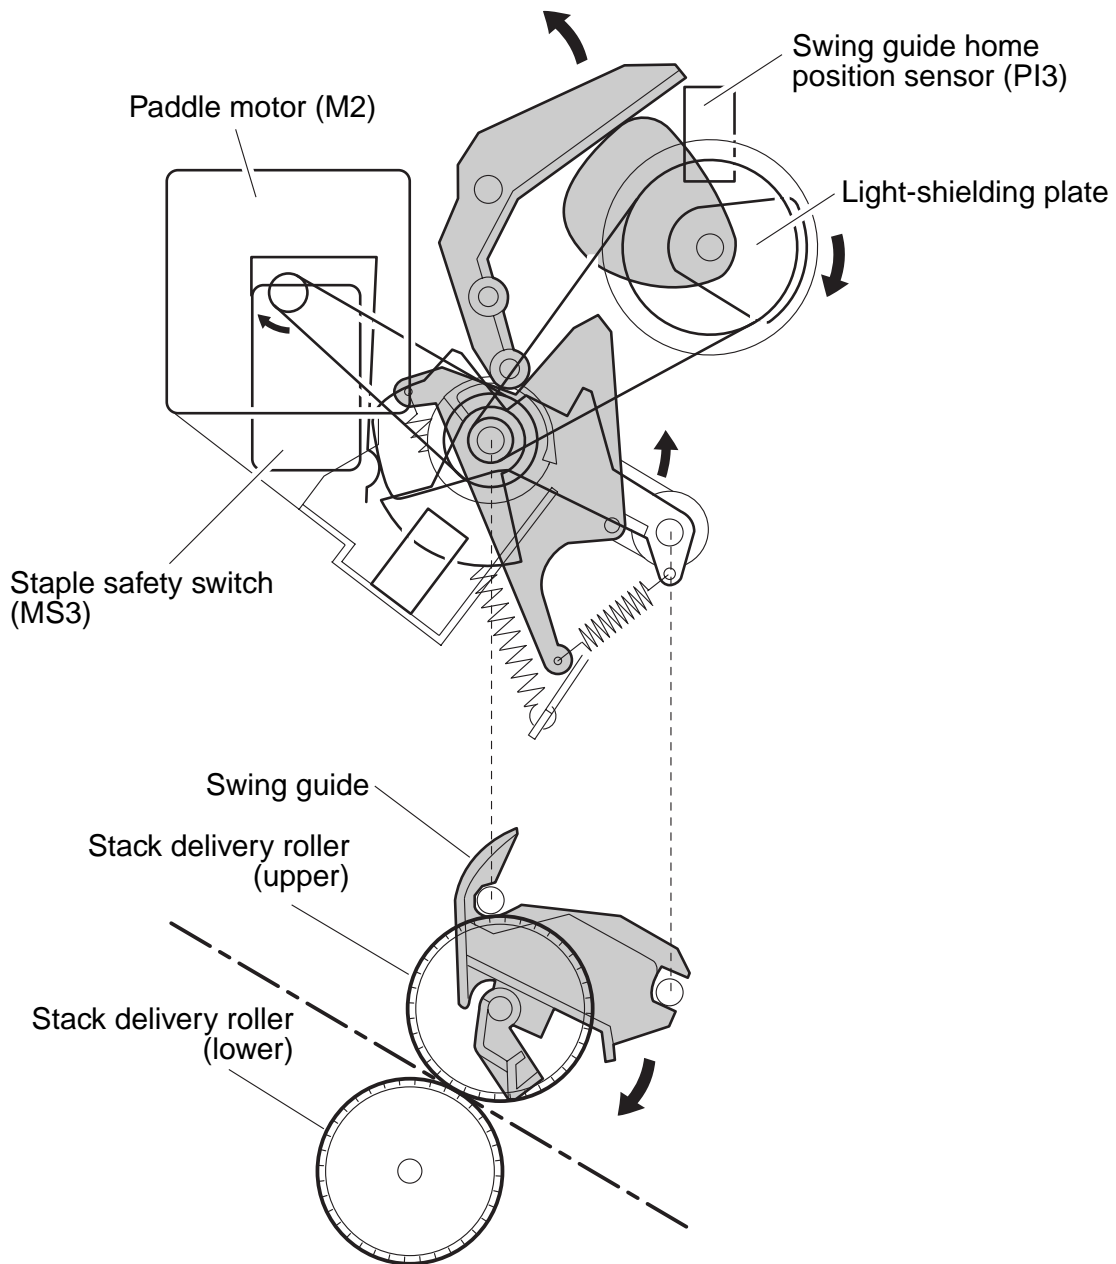


F02-302-02

3.3 Delivery Operation after Stapling

When stapling is complete, the finisher controller PCB drives the deliver motor in the forward direction to feed the paper stack (sandwiched between the stack delivery rollers) in the delivery direction. The delivery belt home position sensor is turned OFF. The delivery motor is driven a specified number of pulses, causing the swing guide to ascend. At the same time, the slide motor is driven to return the stapler back to the standby position, followed by driving of the delivery motor. Then, the paper stack is delivered with the nails of the delivery belt that rotates in sync with the stack delivery rollers.

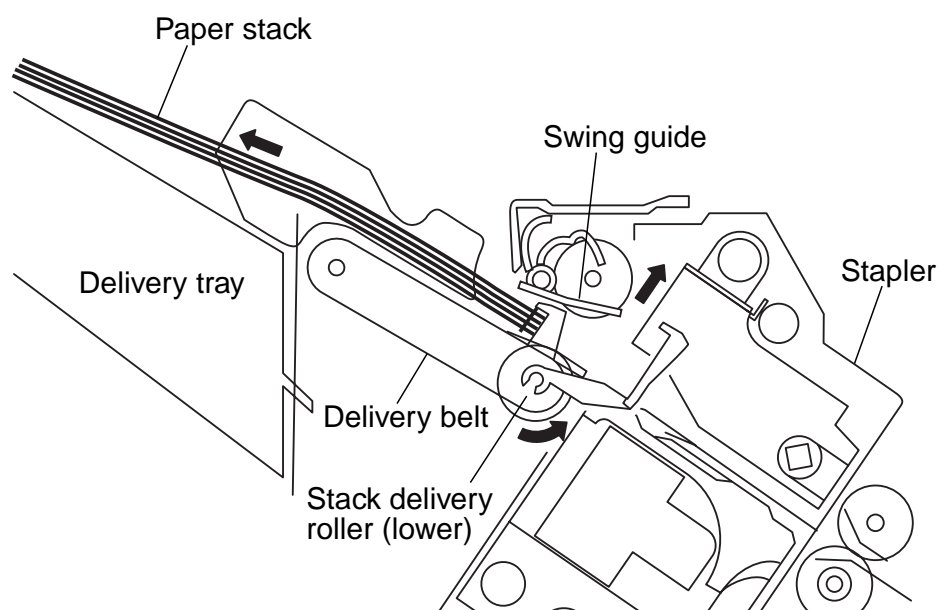

F02-303-01

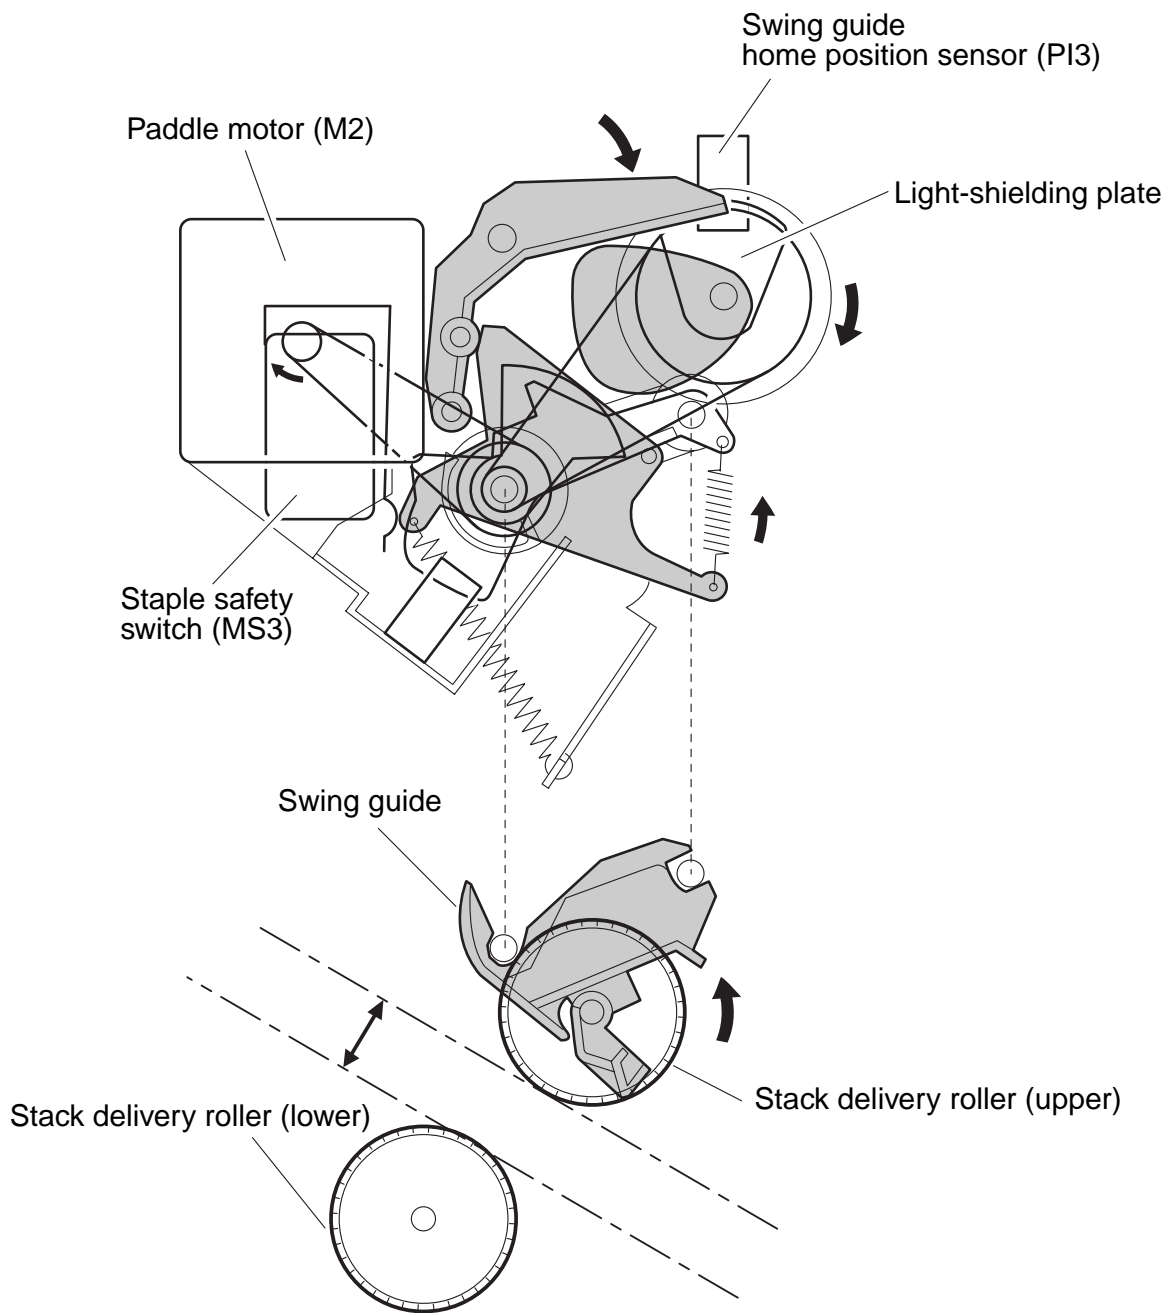

F02-303-02

3.4 Stapler Unit

The staple/fold motor (M7) is used to perform stapling operation. This motor rotates the cam one turn for stapling. The home position of this cam is detected by the staple home position sensor (PI19).


The staple/fold motor is rotated in the forward or reverse direction under the control of the macro computer (IC13) on the finisher controller PCB.

When the staple home position sensor is OFF, the finisher controller PCB rotates the staple/fold motor in the forward direction until the sensor turns ON, allowing the staple cam to the original position.


The staple empty sensor (PI20) is used to detect presence/absence of a staple cartridge in the machine and presence/absence of staples in the cartridge.

The staple top position sensor (PI21) is used to determine whether staples are pushed up to the top of the staple cartridge.

The finisher controller circuit does not drive the staple/fold motor (M7) unless the staple safety switch (MS3) is ON (the swing guide is close). This assures safety in case where you happen to put your finger in the stapler.

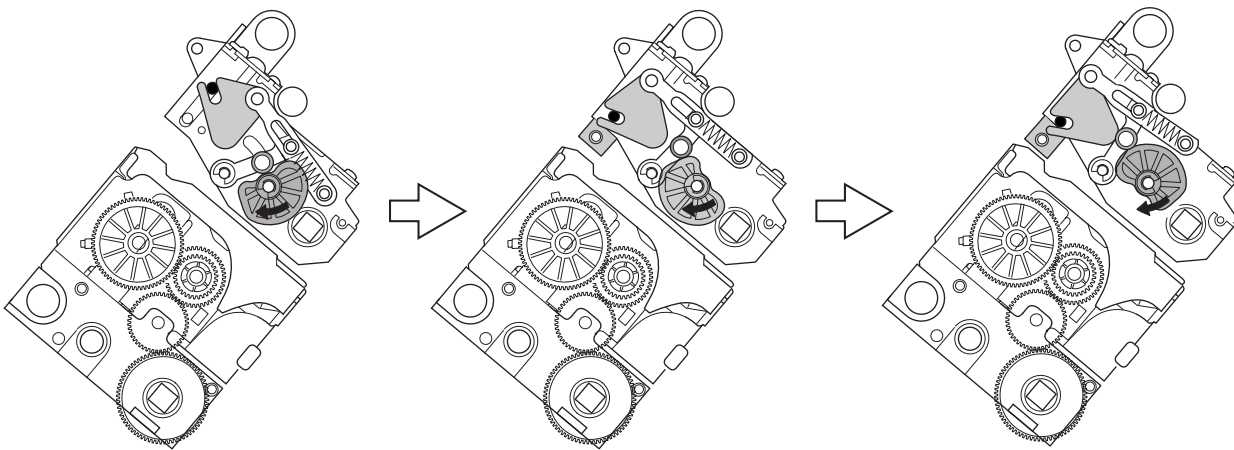

F02-304-01

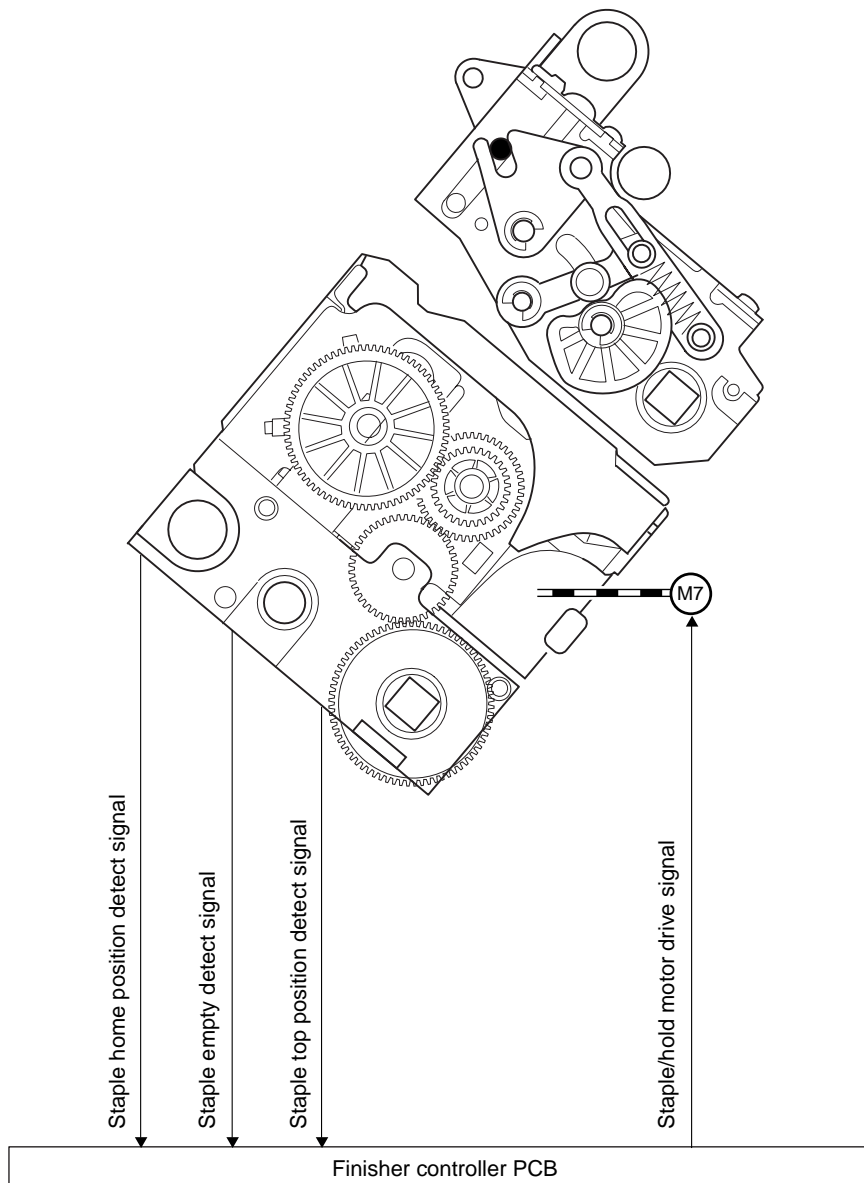

F02-304-02


3.4.1 Stapler Movement Controller

The stapler unit is moved by the slide motor (M8). Its home position is detected by the slide home position sensor (PI18). The stapler waits at the back irrespective of the staple mode and paper size. After paper has been stacked on the processing tray, the stapler is moved to the specified stapling position in response to the stapling command from the host machine.

F02-304-03 shows the standby position of the stapler and the stapling position depending on the staple mode.

a. Front 1-point stapling


The stapler waits at the back. The stapler moves to and returns from the stapling position for each stapling operation.

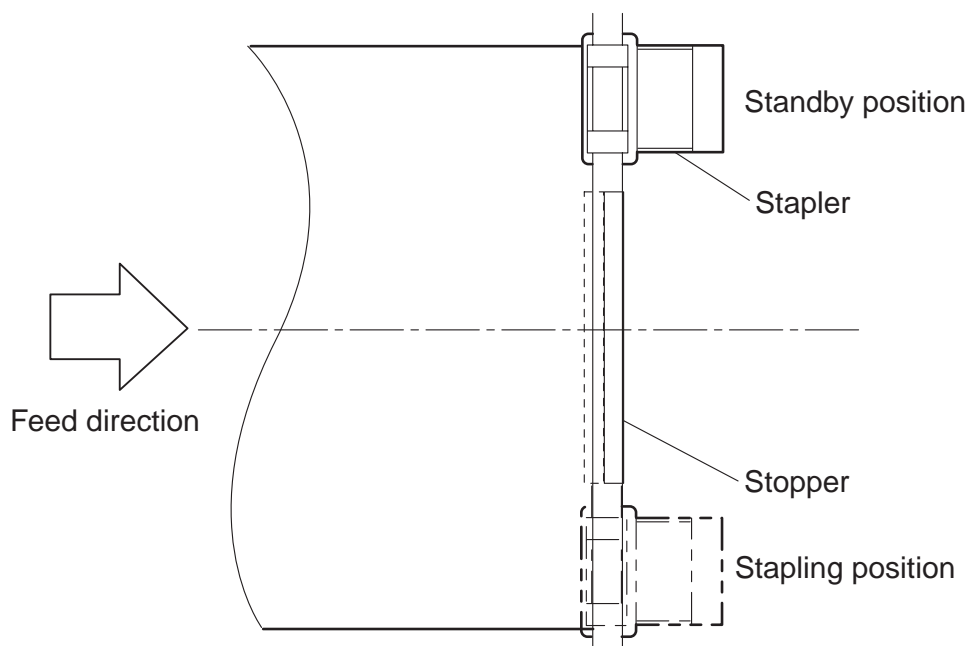

F02-304-03

b. Rear 1-point stapling


The stapler waits at the back. The stapling position is the same as the standby position.

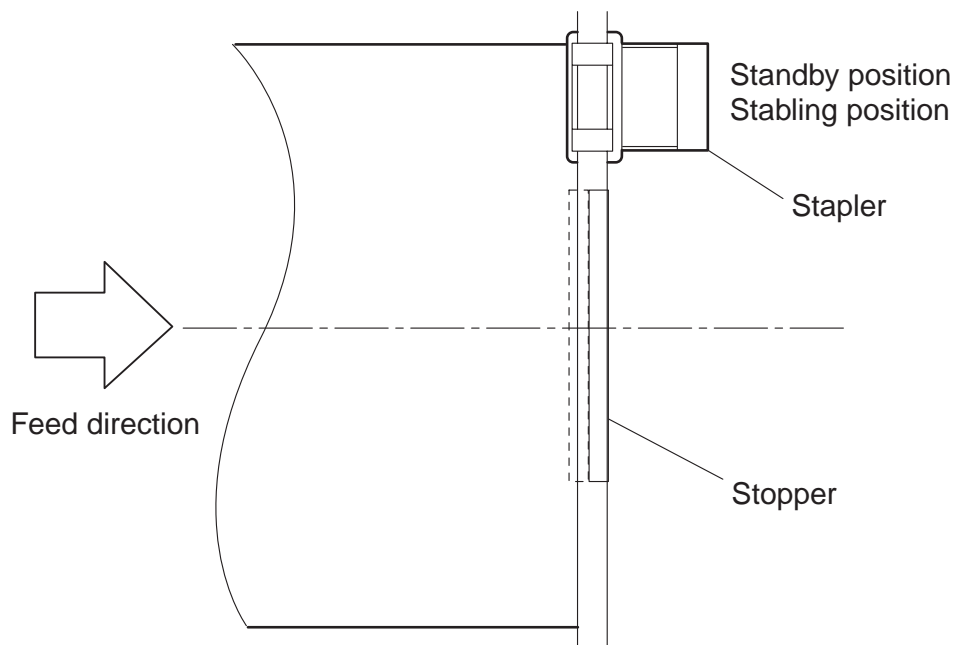

F02-304-04

c. Middle 2-point stapling


The stapler waits at the back. The stapler moves to and returns from the stapling position for each stapling operation. The stapler first staples a paper stack at the rear stapling position and then staples it at the front stapling position.

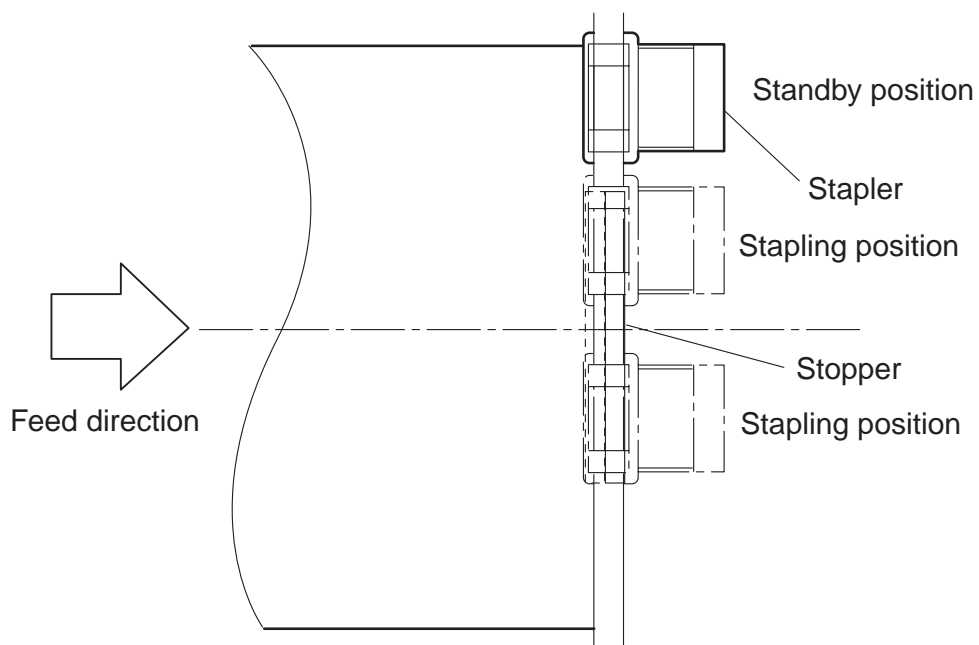

F02-304-05


d. Middle 2-point stapling (bind mode)

The stapler waits at the back. The stapler moves to and returns from the stapling position for each stapling operation. The stapler first staples a paper stack at the rear stapling position and then staples it at the front stapling position.

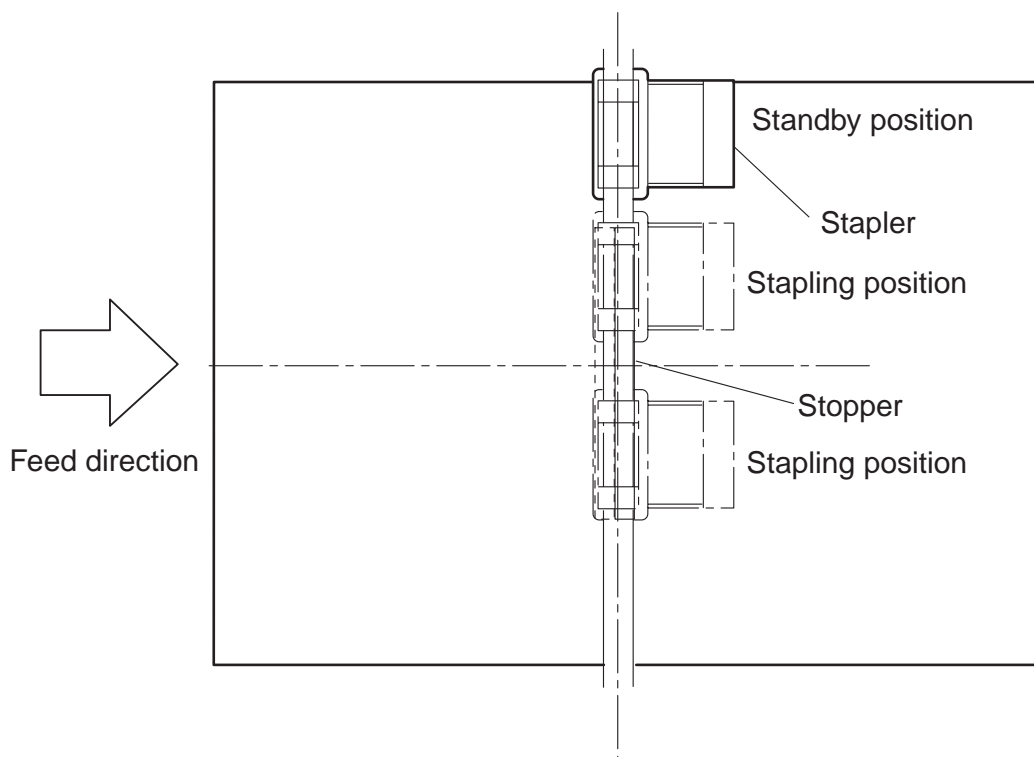

F02-304-06

Stapling Operation Sequence Rear 1-point Stapling of 2 Sheets

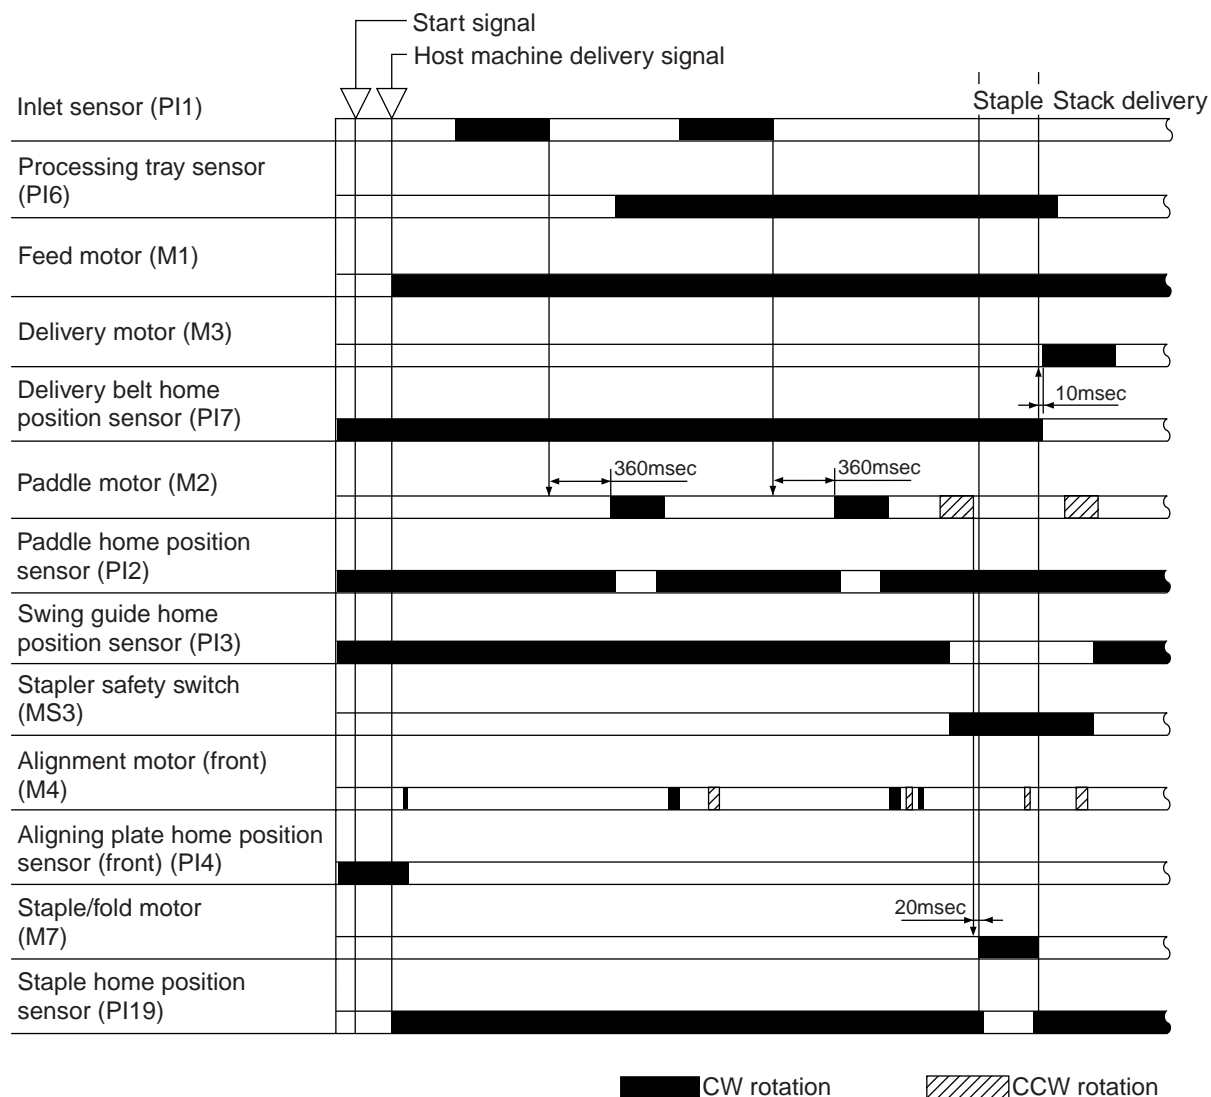

F02-304-07

4 Delivery Tray Operation

4.1 Outline

The machine has a delivery tray in the finisher unit and a bind tray in the saddle unit.

The bind tray in the saddle unit is of the fixed type and all the folded paper stacks are delivered to this tray. This tray has a bind tray sensor (PI13) to detect presence/absence of paper.

The delivery tray in the finisher unit is moved up and down using a shift motor (M6).

The finisher has a tray paper sensor (PI8) to detect presence/absence of paper on the stack tray.


The home position sensor of the delivery tray is detected by the paper surface sensor (PI19). When paper has already been stacked on the delivery tray, the home position is on the top surface of the stacked paper. When paper has not yet been stacked on the delivery tray, the home position is at the position where the edge of the delivery tray is detected. At power-on, the finisher controller PCB drives the shift motor (M6) to return the delivery tray to the home position.

When the paper coming from the processing tray is stacked on the delivery tray, the shift motor is driven a specified number of pulses, causing the delivery tray to descend. Clock pulses are detected by the shift motor clock sensor (PI17). Then, the delivery tray returns to the home position for the next stacking operation.

The upper limit of the delivery tray is detected by the shift upper limit sensor (PI15). When the shift upper limit sensor (PI15) is turned ON, the finisher controller PCB stops the shift motor (M6) that is ascending.

The lower limit of the delivery tray is detected by the shift lower limit sensor (PI16). When the shift lower limit sensor (PI16) is turned ON, the finisher controller PCB stops the shift motor (M6) that is descending.

The finisher unit has a full stack sensor (PI24) to detect overstacking of large-size or mixed paper according to the stack height.

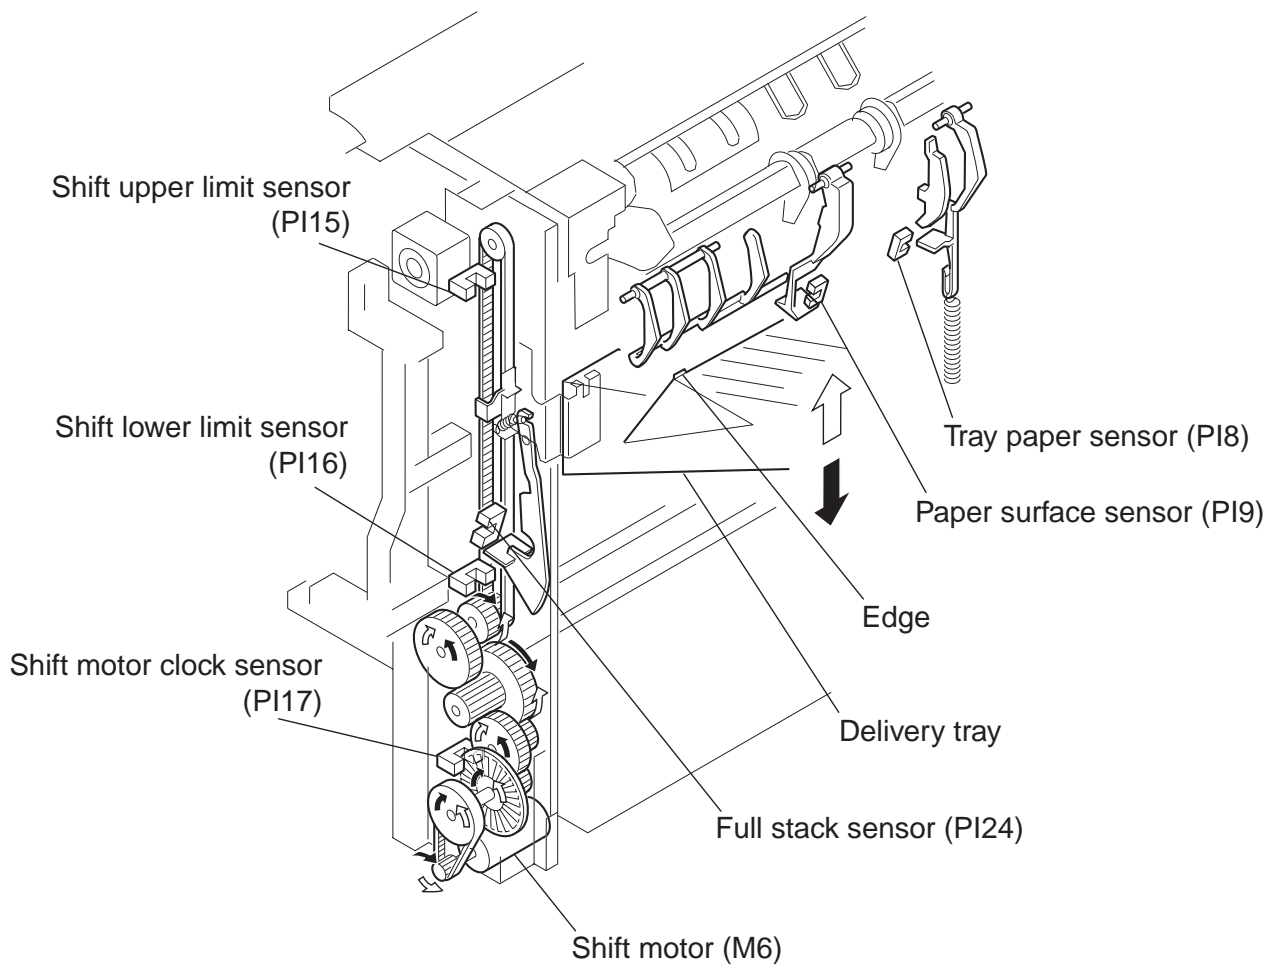

F02-401-01

5 Saddle Unit

5.1 Basic Operations

5.1.1 Outline

The machine stitches a stack of sheets (middle 2-point), then folds the stack in two in the finisher. These operations are controlled by the finisher controller PCB.

The finisher controller PCB is controlled by the commands from the host machine.


5.2 Feed/Drive System

5.2.1 Outline

This machine stitches the paper stack coming from the finisher, folds it, and delivers it to the bind tray in the saddle unit in response to the commands from the host machine.

That is, the machine performs the following operations:


- 1) Paper feed-in
- 2) Stitching
- 3) Stack feed
- 4) Folding/delivery

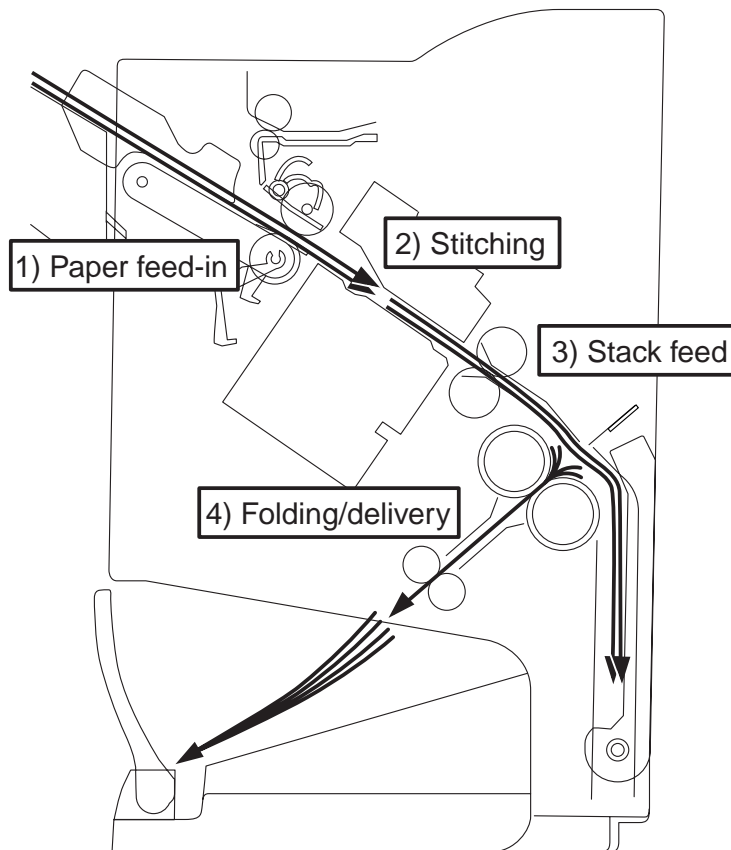

F02-502-01

a. Paper feed-in

After being aligned on the processing tray, a stack of sheets is sandwiched between the stack delivery rollers. As the stack delivery rollers rotate, the stack is fed toward the saddle unit.

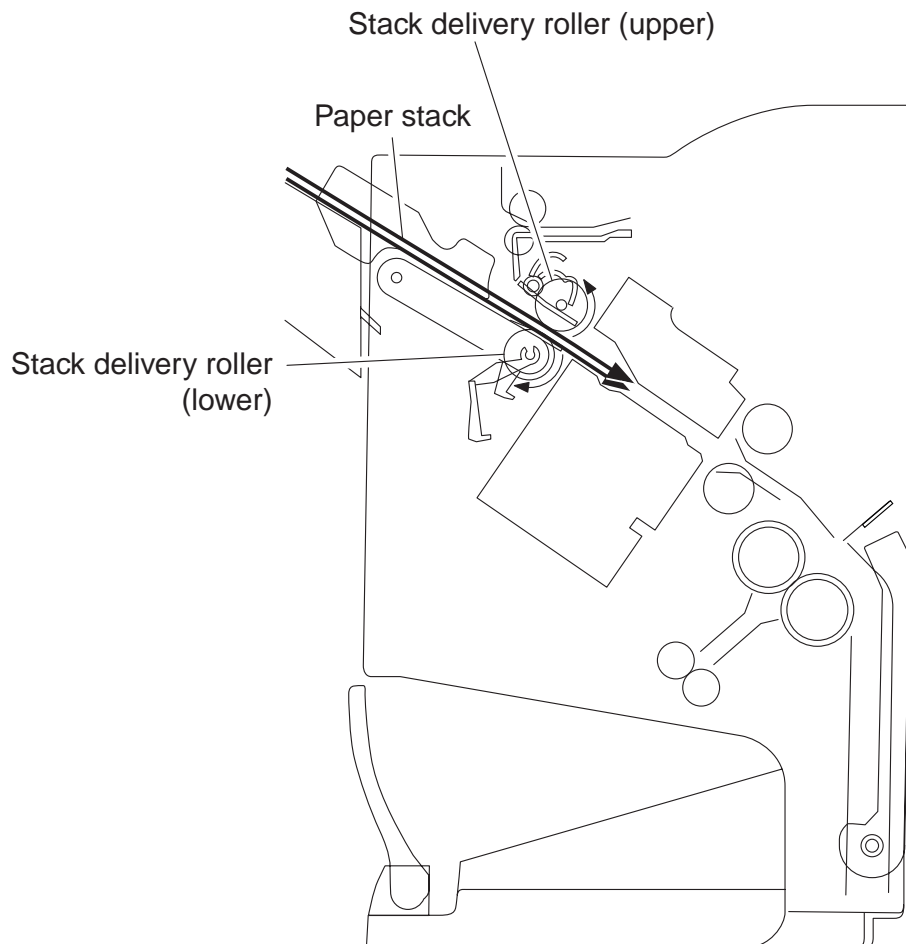


F02-502-02

b. Stitching

When the center of the paper stack (stitching position) reaches the stapler's staple position, the stapler stitches the paper stack.


When only one sheet is fed from the host machine, the next step (stack feed) is performed without performing the stitching operation.

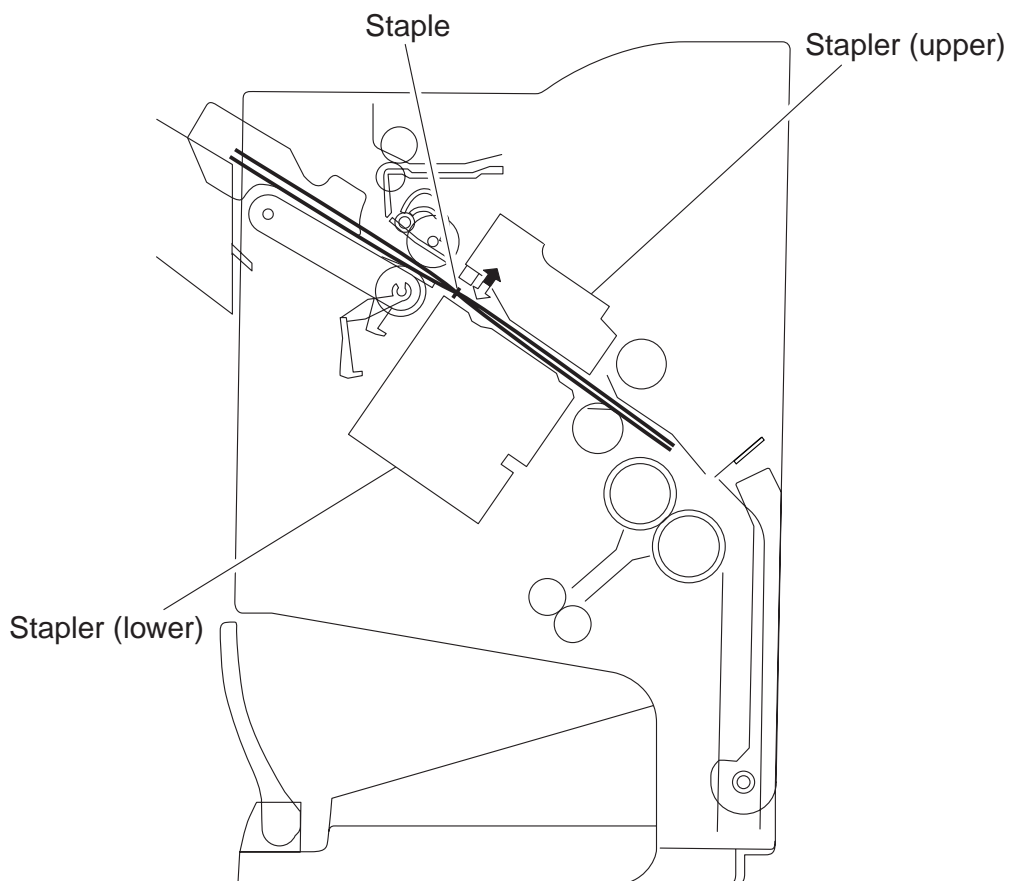

F02-502-03

c. Stack feed


The stack feed rollers feed the paper stack to the stack folding/delivery position where the center of the stack (stitched position) is level with the paper pushing plate and paper folding roller's nip part.

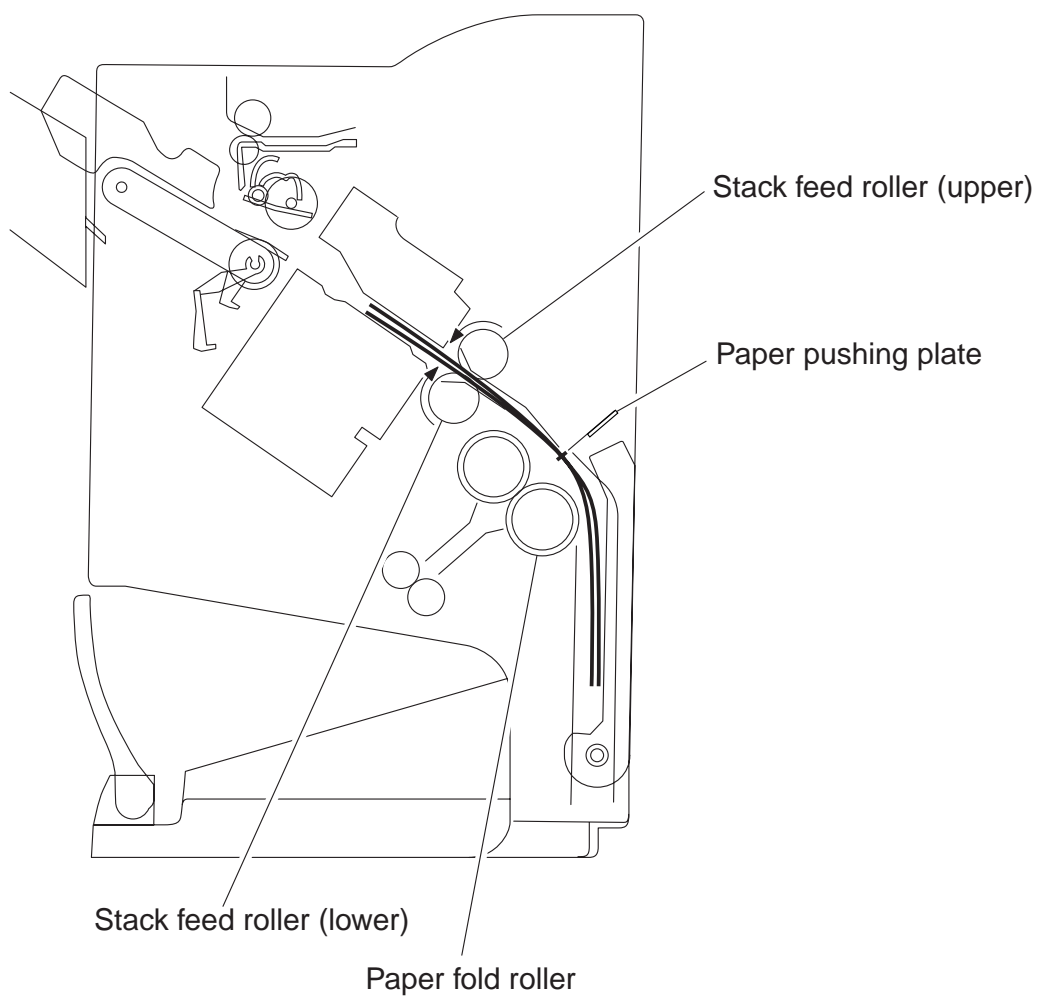

F02-502-04

d. Folding/delivery

The paper pushing plate pushes in the center of the paper stack to feed it toward the paper fold rollers. Then, the paper fold rollers and bind delivery rollers deliver the paper stack to the bind tray.

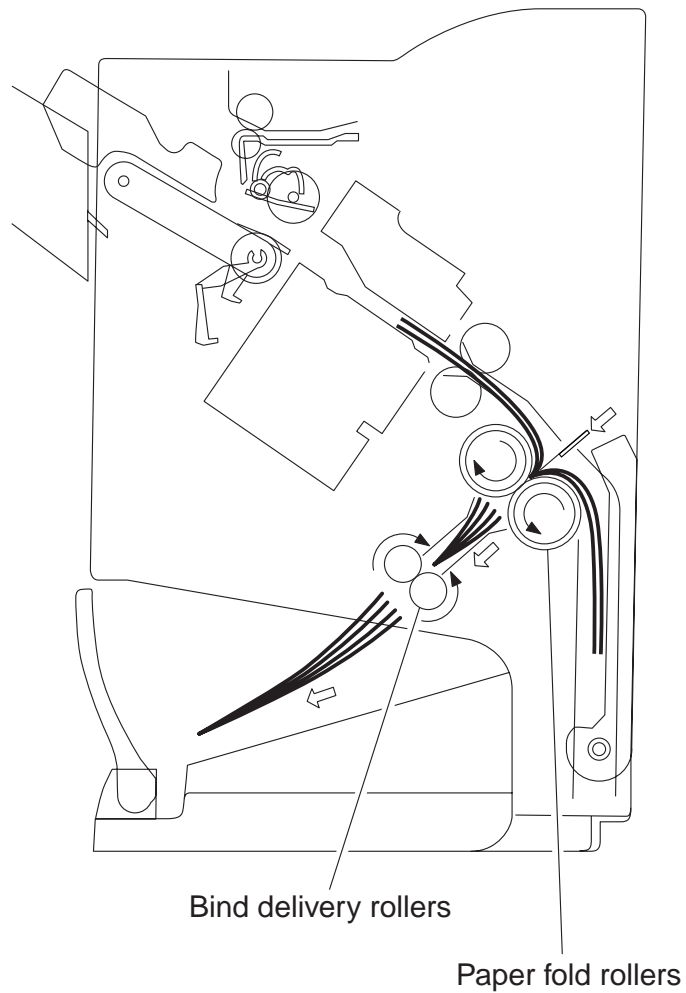


F02-502-05

5.3 Paper Feed System

5.3.1 Outline

The paper feed system feeds a stack of sheets (coming from the finisher) to the position where the center of the paper stack (stitching position) is aligned to the stapler's staple, allowing the next step (stitching and folding) to be performed.

When sheets of paper have been stacked and aligned on the processing tray, the paddle motor (M2) rotates in the reverse direction, causing the swing guide to descend. As the swing guide descends, the paper stack is sandwiched between the upper and lower stack delivery rollers. The delivery motor (M3) rotates in the reverse direction, feeding the paper stack toward the saddle unit. When the leading edge of the paper stack reaches the folding position sensor (PI10), the finisher controller PCB drives the delivery motor a specified number of motor pulses to stop the center of the paper stack (stitching position) at the stapler's staple position. Before the paper stack passes through the stack feed rollers, the feed motor (M1) is driven to rotate the stack feed roller (lower) so that the leading edge of the paper stack is not bent.

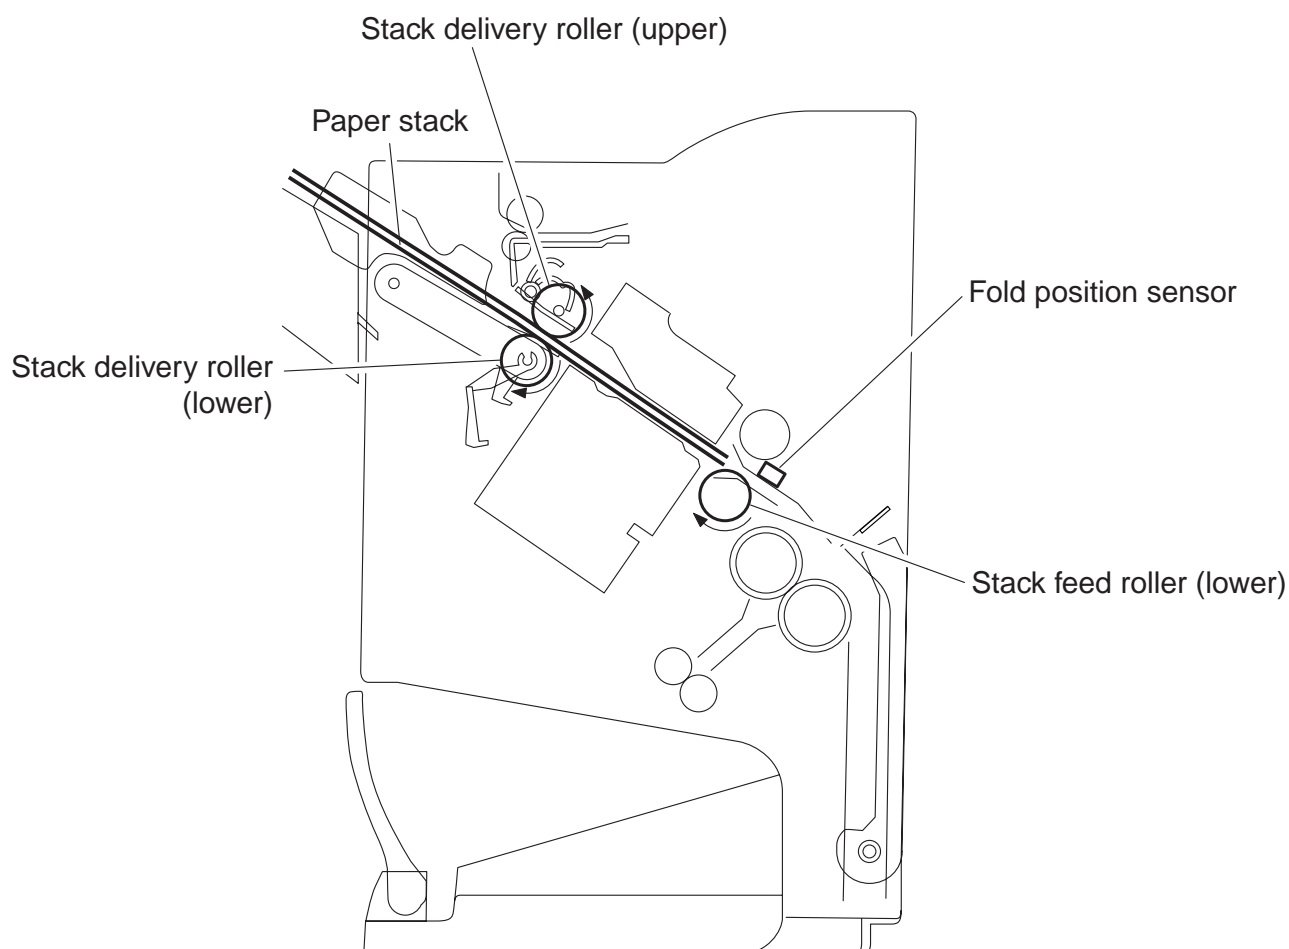


F02-503-01

5.4 Stack Feed System

5.4.1 Outline

The stack feed system feeds the stitched paper stack to the folding position.

When stitching is complete, the feed motor (M1) rotates, causing the stack feed roller (upper) to descend. The paper stack is sandwiched between the stack feed rollers. Then, the bind clutch (CL1) is turned ON to rotate the feed motor (M1) in the forward direction, thus feeding the paper stack to the folding position. The feed amount is equivalent to the number of pulses used to drive the feed motor (M1) until the paper stack reaches the folding position.

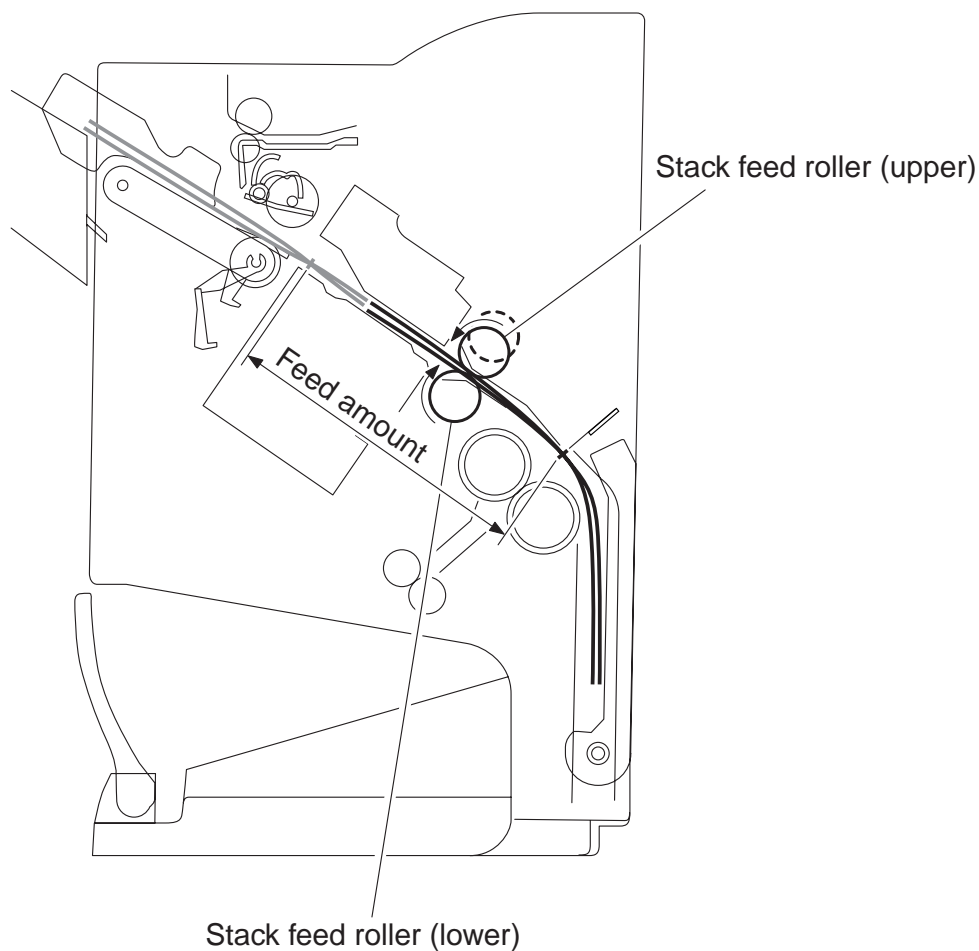

F02-504-01

5.5 Fold/Delivery System

5.5.1 Outline

The paper fold mechanism consists of a guide plate, paper fold rollers, and a paper pushing plate.

The guide plate, paper fold rollers, and paper pushing plate are driven by the staple/fold motor (M7). The drive force is transferred with a combination of gears and cams. Motor operation is monitored by the staple/fold motor lock sensor (PI14).

Until the paper stack reaches the folding position, the guide plate covers the paper fold rollers to act as a paper path through which a paper stack is fed to the saddle unit and to prevent a paper stack from touching the rollers.

A folding home position sensor (PI11) is provided to detect the positions of the paper fold rollers and paper pushing plate.

The paper stack folded in two by the paper fold rollers is delivered by bind delivery rollers.

The bind delivery rollers are also driven by the staple/fold motor (M7).


A bind tray sensor (PI13) is provided on the bind tray to detect presence/absence of a paper stack; however, it is not used to detect a jam.

5.5.2 Paper Folding


Paper is folded using paper fold rollers and a paper pushing plate.

Almost concurrently with the start of roller rotation, the paper pushing plate starts operating to push the paper stack into the gap between the paper fold rollers. When the paper stack is fed about 10 mm with the rotation of the paper fold rollers, the paper pushing plate returns to the home position. Then, the paper stack is delivered to the bind tray using the paper fold rollers and bind delivery rollers.

Half the entire surface of each paper fold roller is uncovered excluding the central area and the area at the left and right ends. The uncovered surface of the upper paper fold roller comes in touch with the uncovered surface of the lower paper fold roller only at the center and left and right ends, allowing a paper stack to be fed without causing creases. The other half of the upper paper fold roller that is covered comes in touch with the other half of the lower paper fold roller that is also covered, allowing a paper stack to be folded while being fed.

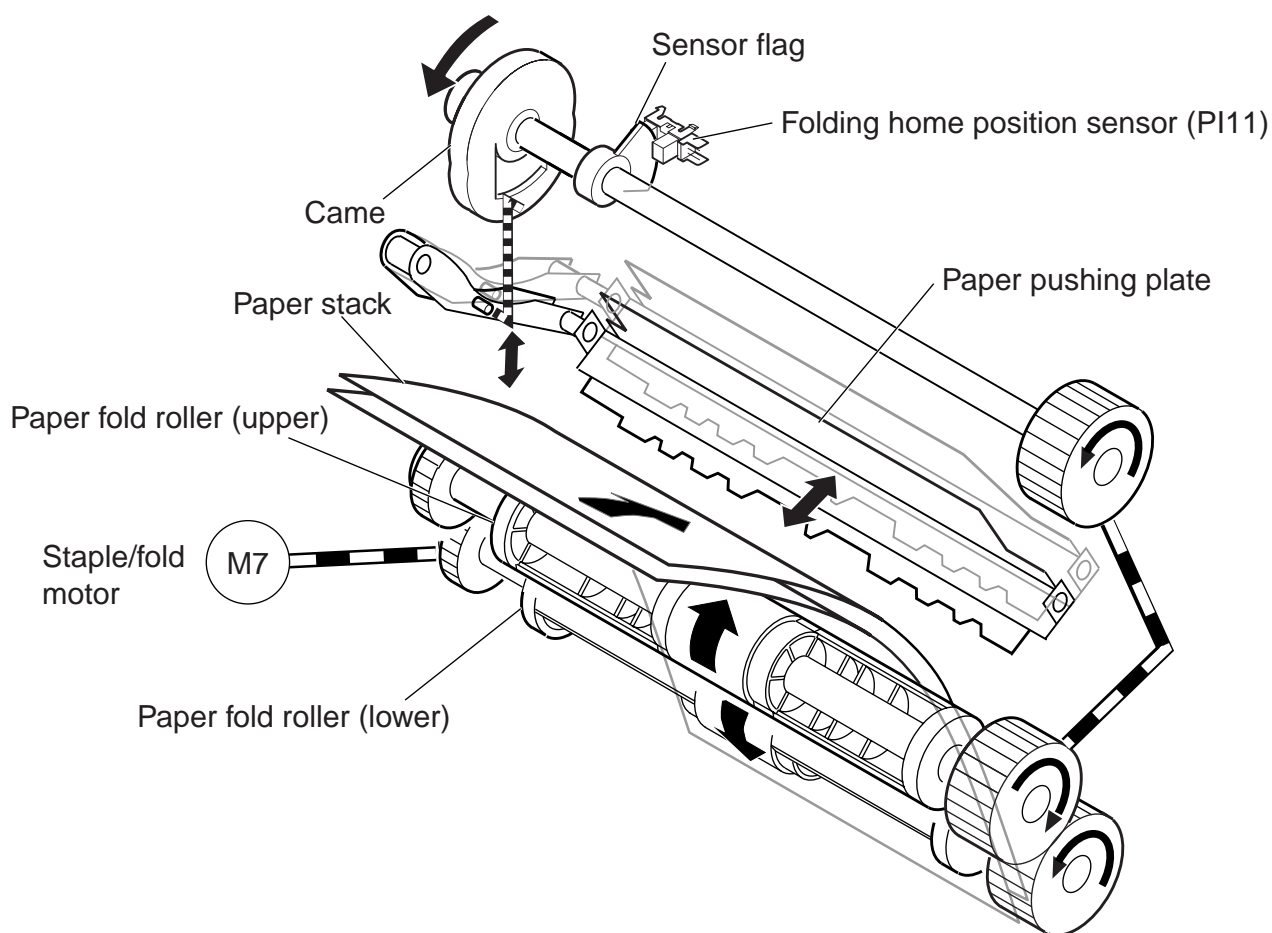


F02-505-01

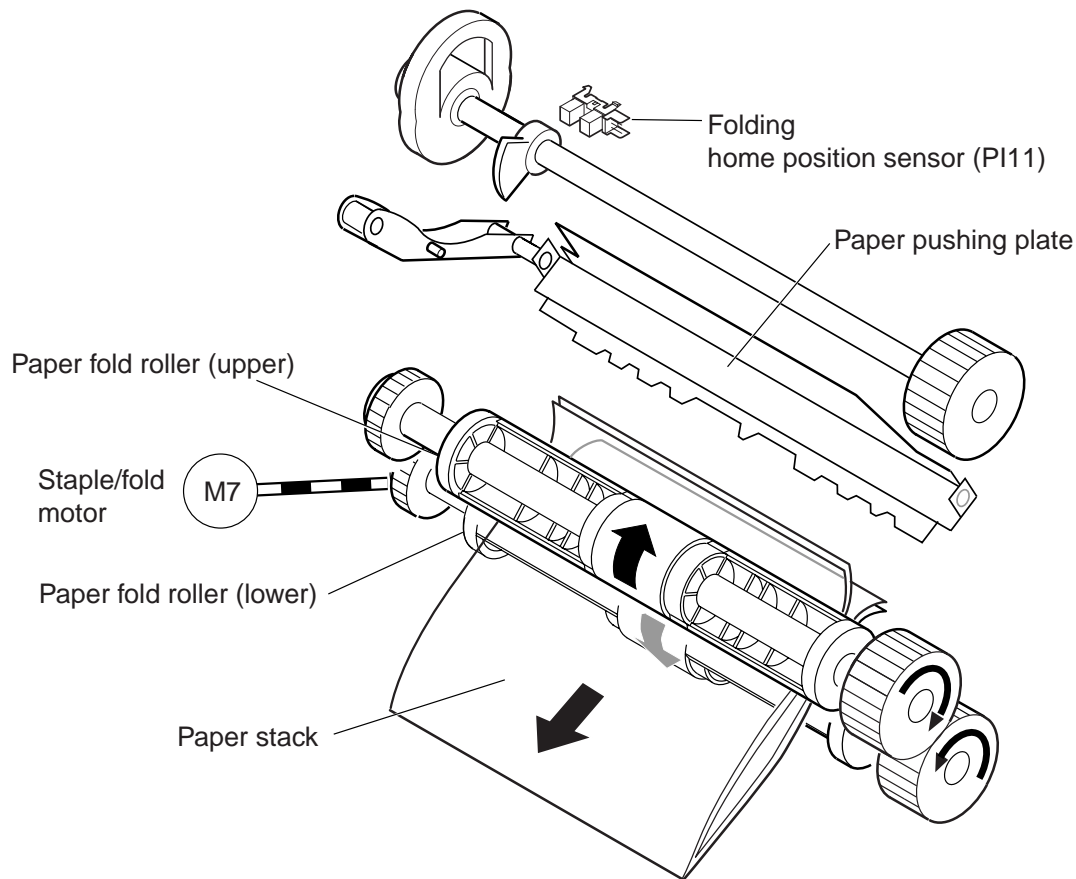


F02-505-02

[Paper folding start position]

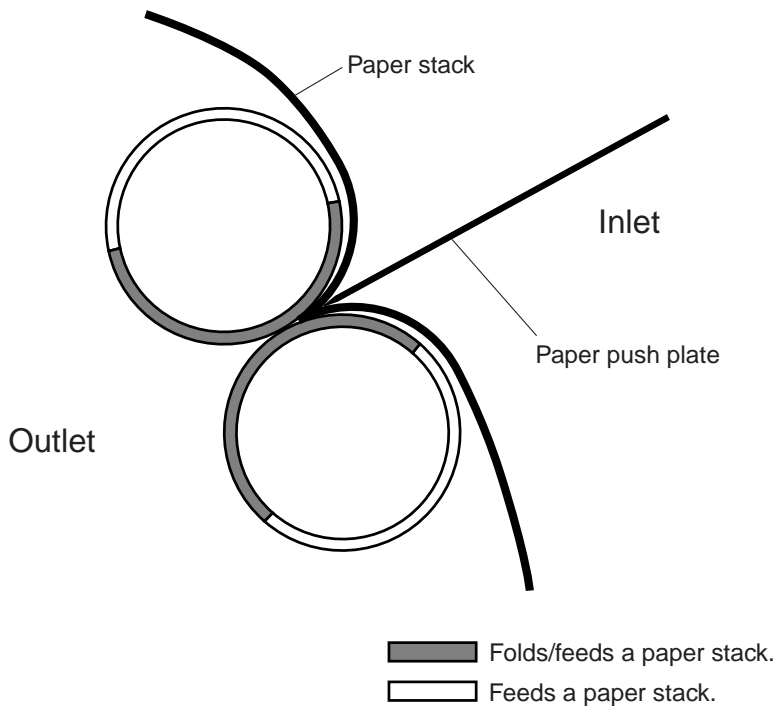

F02-505-03

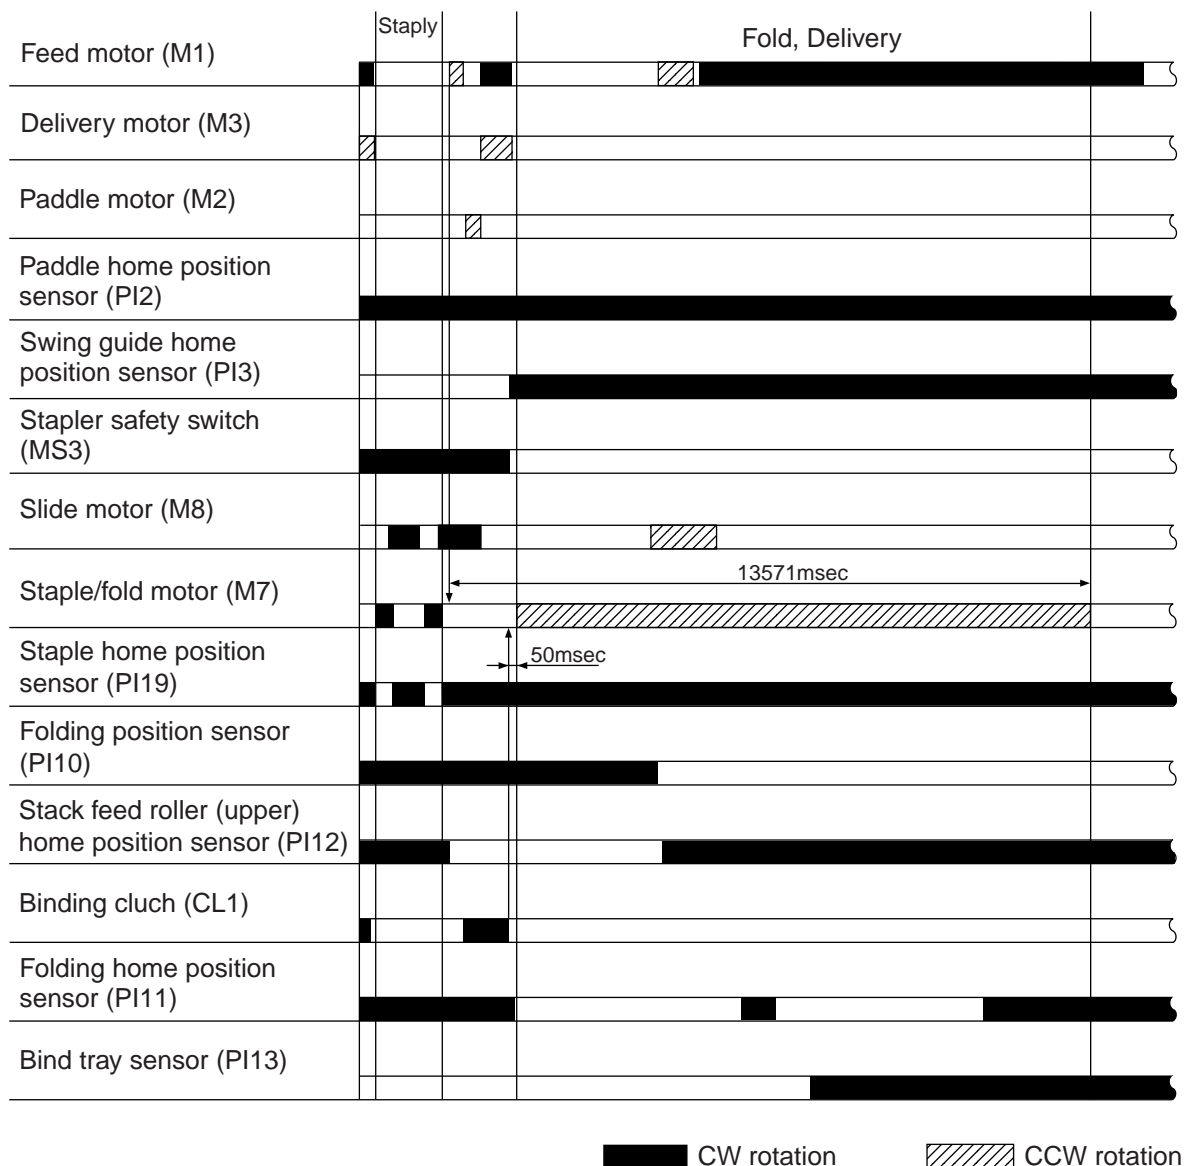

F02-505-04


6 Puncher Unit (option)

6.1 Basic Operations

6.1.1 Outline

The puncher unit is an option, and is designed for installation to the pickup assembly of the finisher. The puncher unit is not equipped with a paper feeding mechanism, and the sheets from the host machine move through the puncher unit and then the feed system of the finisher.

When the trailing edge of a sheet from the host machine reaches the puncher unit, the sheet is stopped once, and the punch shaft is rotated to punch a hole along the trailing edge. These operations are controlled with various commands from the finisher controller PCB as well as the commands from the punch controller PCB.

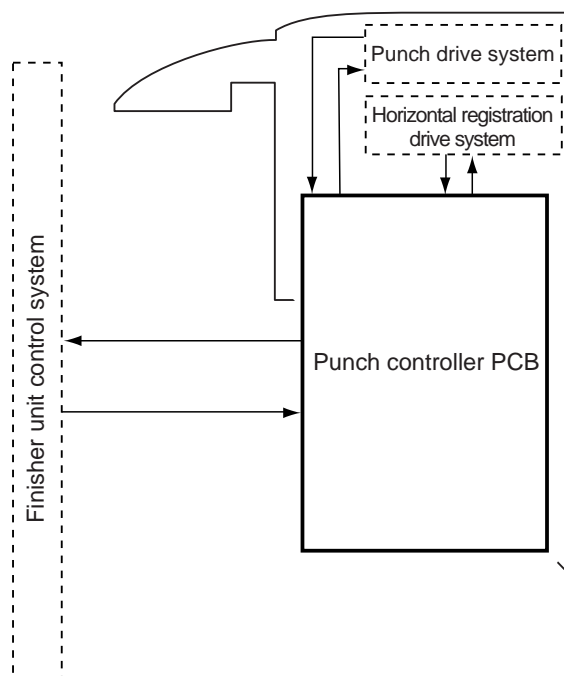

F02-601-01

6.2 Punching Operation

6.2.1 Outline

The puncher unit is located in the pickup assembly of the finisher, and is used to punch holes in sheets that have been sent from the host machine and stopped inside it. When the trailing edge of a sheet reaches the puncher unit, the inlet roller of the finisher assembly stops the sheet to punch a hole along the trailing edge of the sheet.

The punch unit consists of a die and hole puncher (punch blade).

The hole puncher is driven by the punch motor (M1P). It is attached to the eccentric cam of the punch shaft, and the rotation of the punch shaft is converted into reciprocating motion for punching operation.

The punch motor (M1P) is a DC motor. The home position of the punch shaft is detected by the punch home position sensor (PI1P). To make sure that the punch motor, which is a DC motor, stops exactly at its home position, the punch motor is stopped in relation to the count of the clock pulses kept by the punch motor clock sensor (PI3P).


A single punching operation is executed by rotating the punch shaft 180° from its home position.

As many as five light-receiving transistors (photosensor PCB) are mounted over the inlet paper path of the puncher unit; on the other hand, as many as five LEDs (LED PCB) are mounted under the path, together serving as five sensors. The frontmost sensor (LED5, PT5) is used to detect the training edge of sheets, and the remaining four (LED1 through LED4, PT1 through PT4) are used as horizontal registration sensors to detect the rear position of sheets when punching holes.

The punch motor, punch unit, and sensors make up the punch slide unit, which moves to the front/rear to suit the selected paper size. The movement to the front/rear is driven by the horizontal registration motor (M2P). The home position of the punch slide unit is detected by the horizontal registration home position sensor (PI2P), and the horizontal registration motor (M2P) is a stepping motor.

The punch motor and horizontal registration motor are controlled with various commands from the finisher controller PCB as well as the commands from the punch controller PCB.

The waste paper occurring as the result of punching is collected in the waste paper case. The case is monitored by the LED121 on the waste full LED PCB and PT131 on the waste full photosensor PCB.

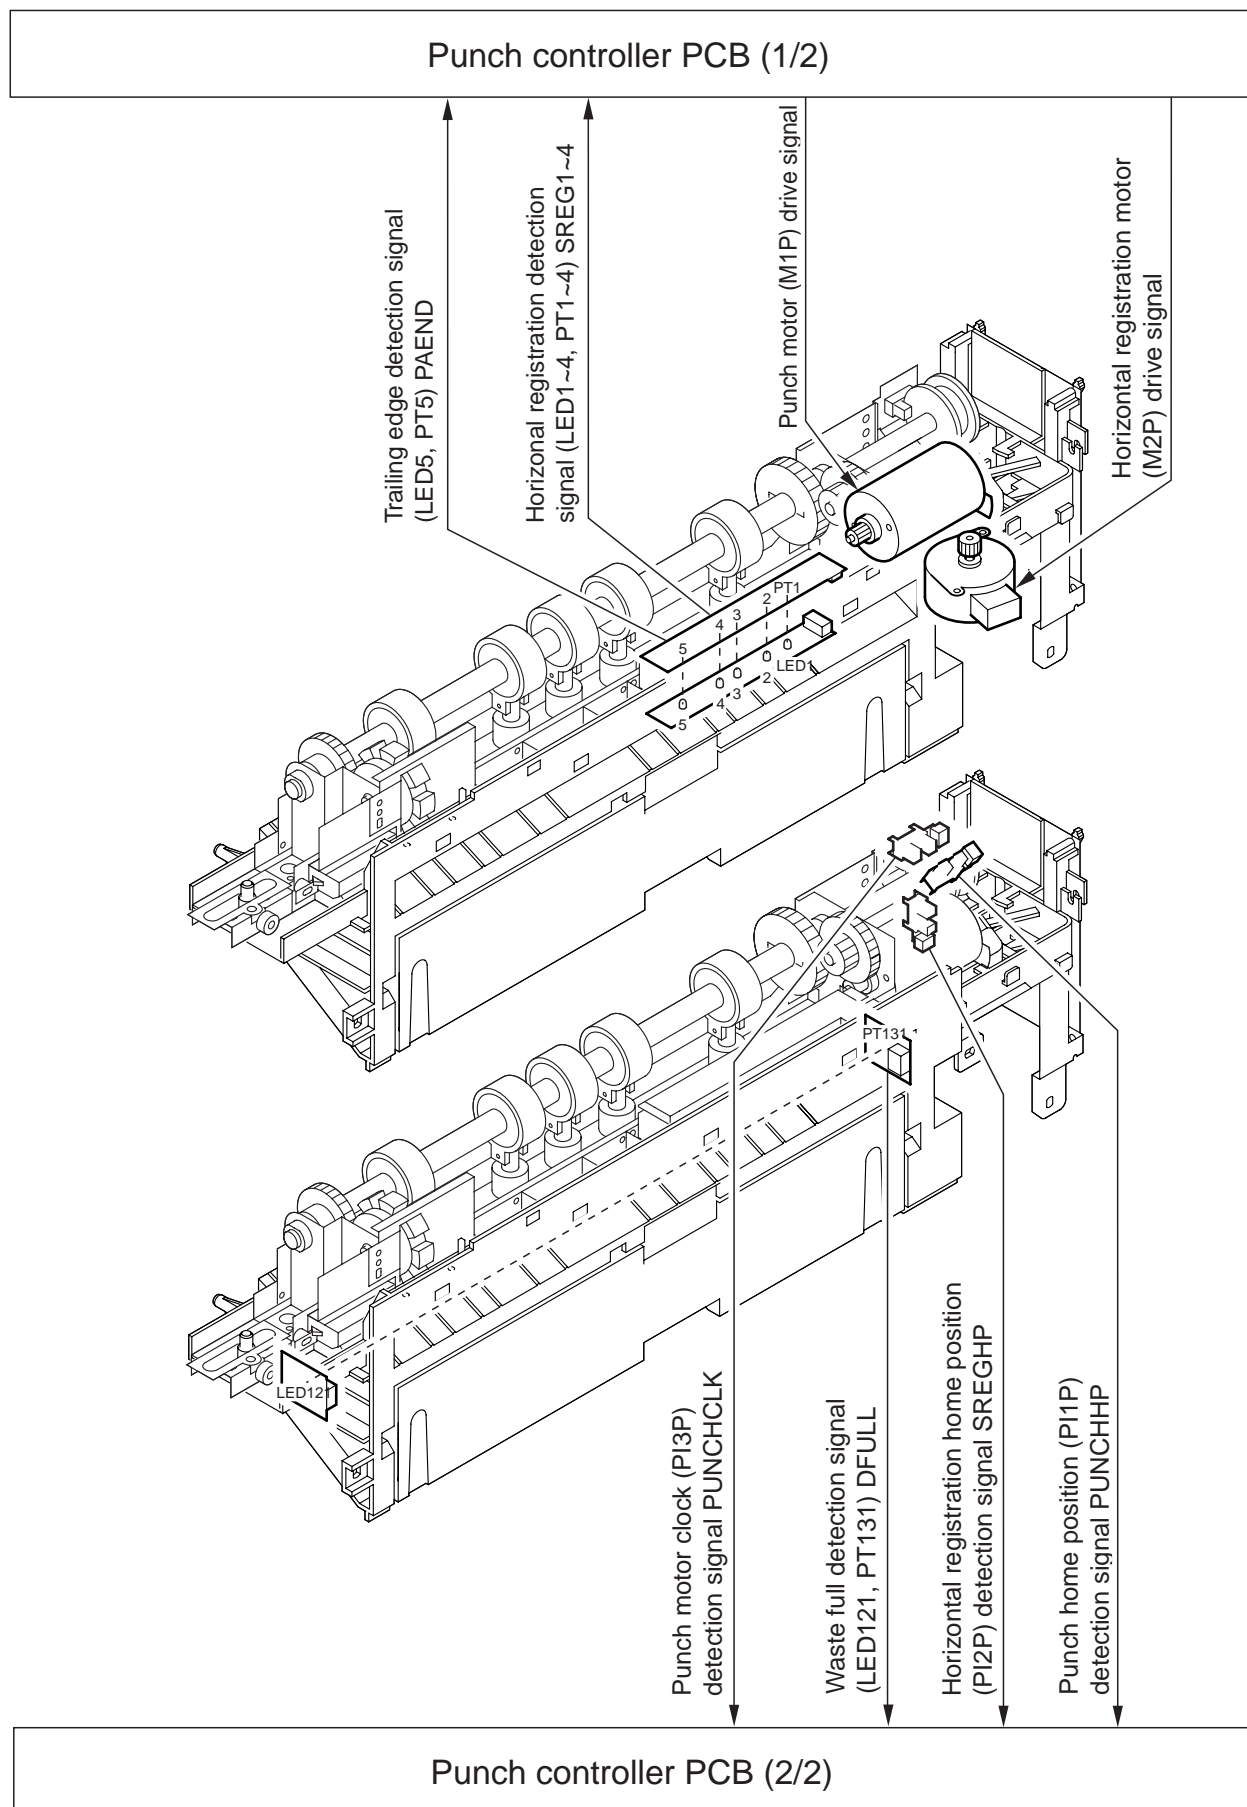

F02-602-01

6.2.2 Punching Operation

The hole puncher is driven by the punch motor (M1P). The home position for the hole puncher is detected by the punch home position sensor (PI1P).

The punch unit comes in four types, selected to suit the country of installation: 2-hole (Puncher Unit-J1), 2- and 3-hole (Puncher Unit-K1), or two types of 4-hole (Puncher Unit-G1, Puncher Unit-H1).


The 2-hole and 4-hole types punch a hole when the punch shaft is rotated 180° from the home position, causing the punch to make a single round trip. The 2-/3-hole type punches a hole, but the circumference of the punch shaft is divided into two (half for 2-hole and the other half for 3-hole).

a. 2-Hole, 4-Hole Type

The home position is identified when the punch home position is ON. The punching operation for the first sheet ends when the punch shaft has rotated 180° and the punch home position sensor goes ON; the punching operation for the second sheet ends when the punch shaft has rotated 180° in reverse and the punch home position sensor goes ON.


The punching operation takes place as follows when making a hole in two sheets of paper.

- 1) A hole is punched along the trailing edge of the 1st sheet.

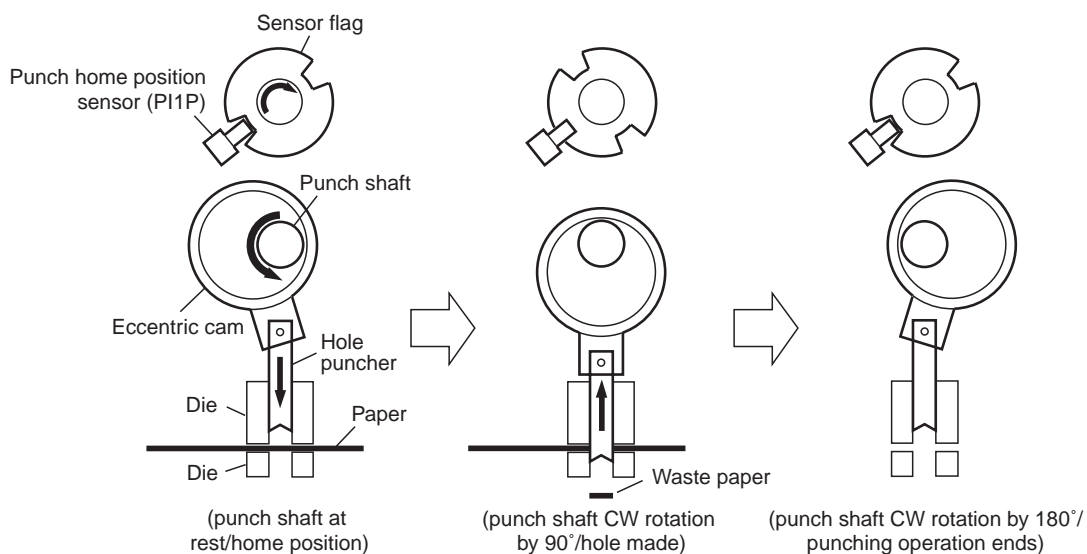

F02-602-02

- 2) A hole is made along the trailing edge of the 2nd sheet.

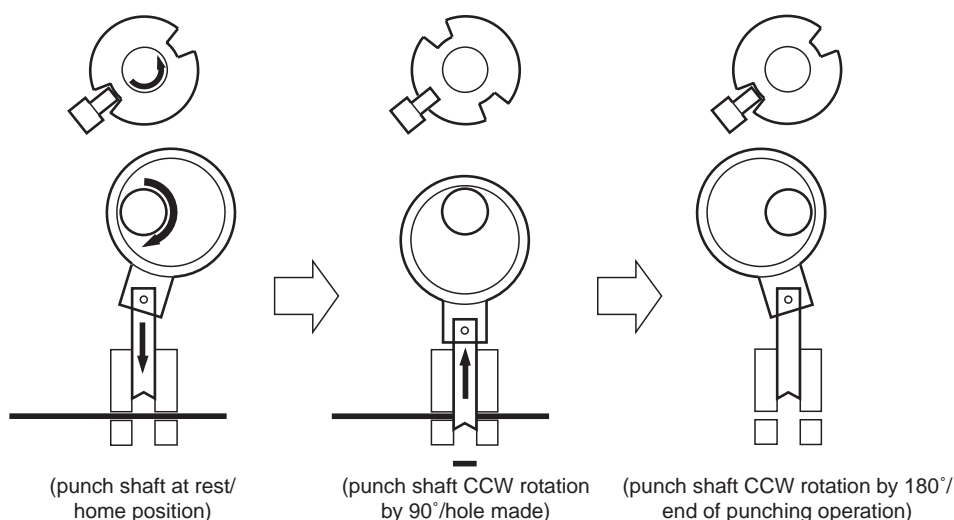

F02-602-03


b. 2- /3-Hole Type

The home position is identified when the punch home position sensor is ON. To make two holes, the punching operation for the first sheet ends when the punch shaft rotates 180° (half circumference) and the punch home position sensor goes ON. At this time, the 3-hole puncher makes a single round trip in escape direction (moving up the hole puncher) on a half circumference of the punch shaft.

The punching operation for the second sheet ends when the Punch shaft has rotated 180° counterclockwise and the punch home position sensor goes ON (half circumference). At this time, the 3-hole puncher makes a single round trip in escape direction (moving up the hole puncher) on the other half circumference of the punch shaft.


The punching operation takes place as follows when making two holes in two sheets of paper:

- 1) A hole is made along the trailing edge of the 1st sheet.

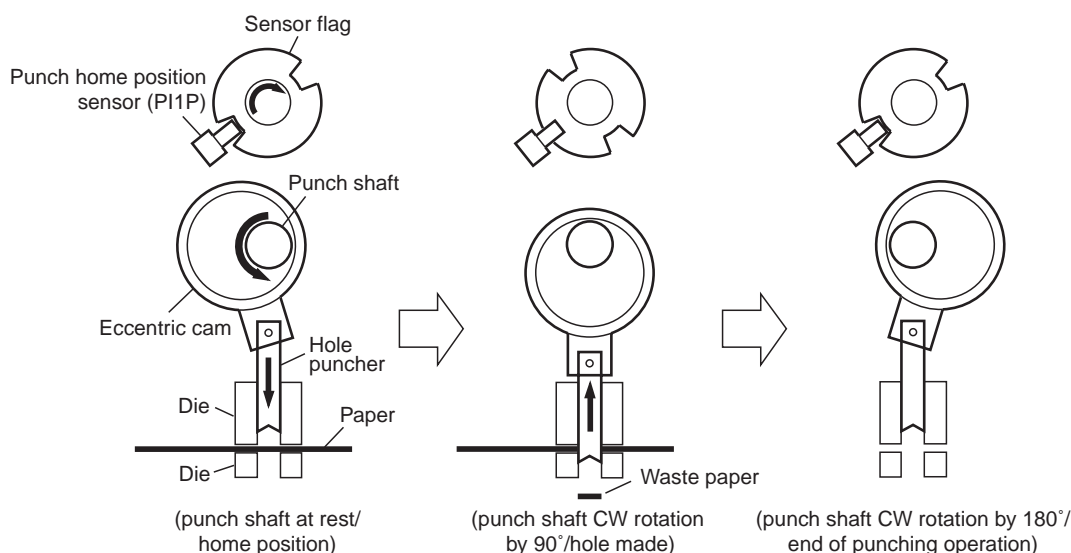


F02-602-04

While two holes are being made, the 3-hole puncher makes a single round trip in escape direction.

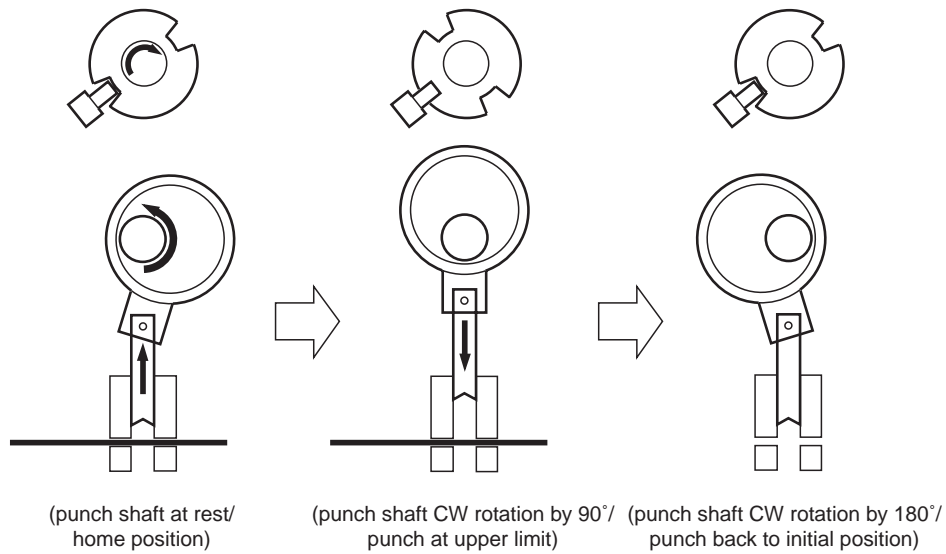


F02-602-05

2) Holes are made along the trailing edge of the 2nd sheet.

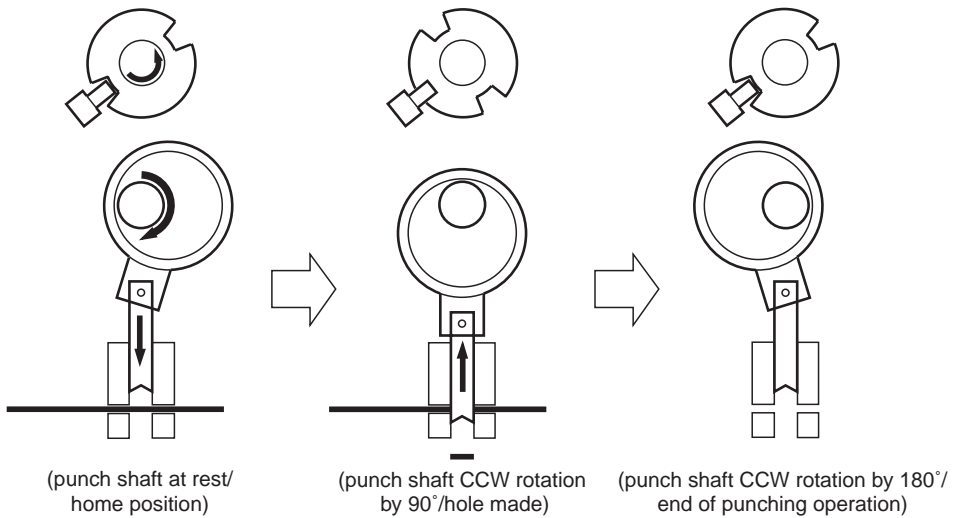

F02-602-06

While two hole are being made, the 3-hole puncher makes a single round trip in escape direction (moving up the hole puncher).

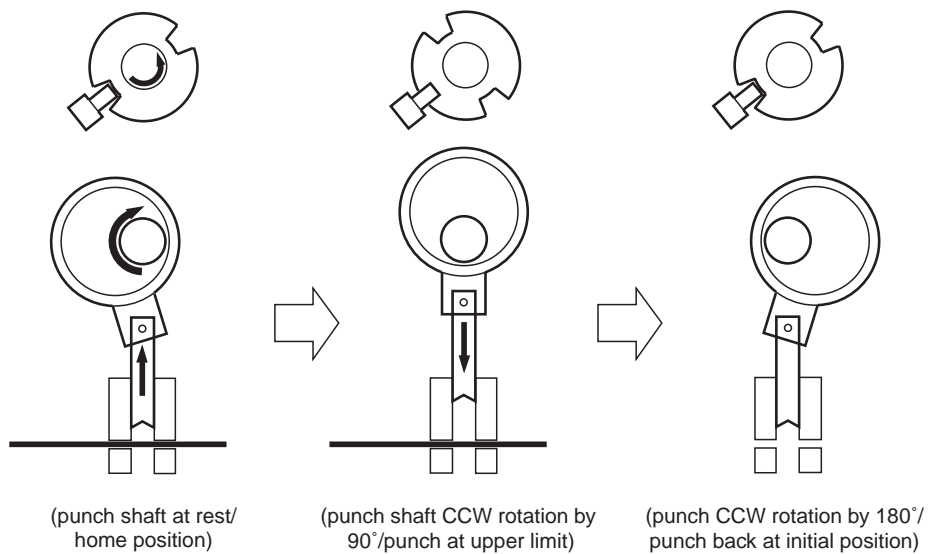


F02-602-07

6.2.3 Horizontal Registration Operation

The horizontal registration drive for the punch slide unit is provided by the horizontal registration motor (M2P). The home position of the punch slide unit is detected by the horizontal registration home position sensor (PI2P). The punch slide unit detects the trailing edge of sheets using the trailing edge sensor (LED5, PT5) and the horizontal registration sensors (LED1 through 4, SREG1 through 4), and causes a move to a specific position matching the trailing edge of each sheet (in relation to the size of the sheet).


The horizontal registration operation takes place as follows:

- 1) When the leading edge of a sheet from the host machine is detected by the trailing edge sensor (LED5, PT5), the horizontal registration motor (M2P) starts to move the punch slide unit toward the front.

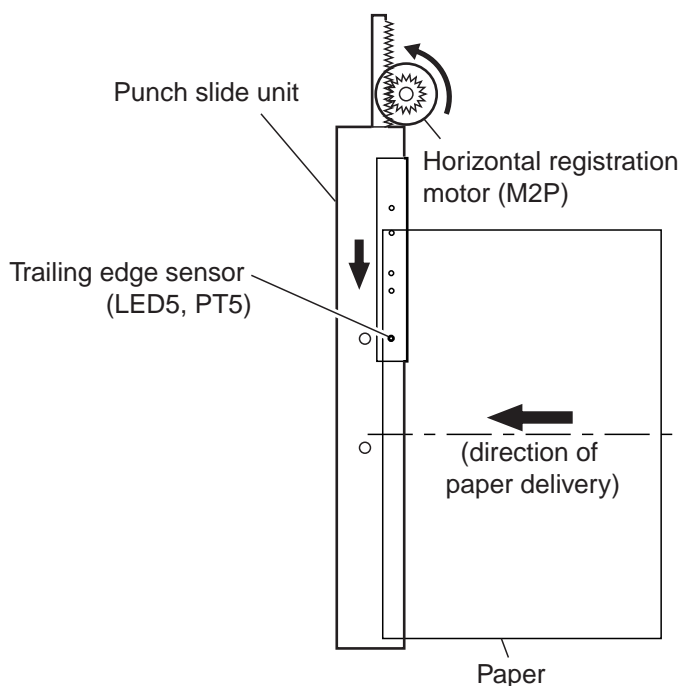


F02-602-08

- 2) When the horizontal registration sensor (LED1 through 4, PT1 through) suited to the paper size signal from the host machine detects the rear edge of the sheet, the horizontal registration motor (M2P) causes a farther move to a specific position, and stops the punch slide unit.

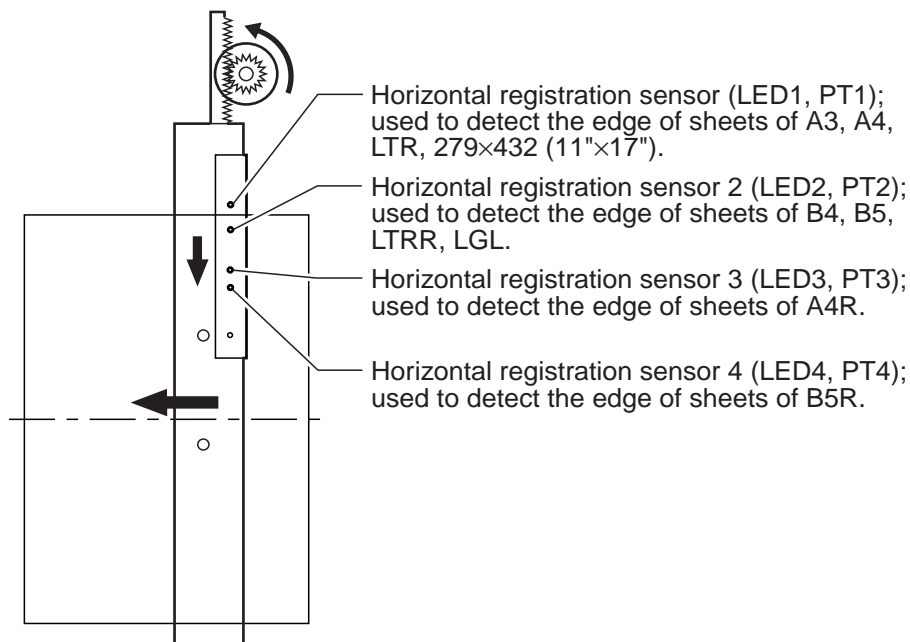


F02-602-09

- 3) When the trailing edge sensor (LED5, PT5) detects the trailing edge of the sheet, the drive of the feed motor (M1) is stopped, thereby stopping the sheet. Then, the punch motor (M1P) is driven to punch holes in the sheet.

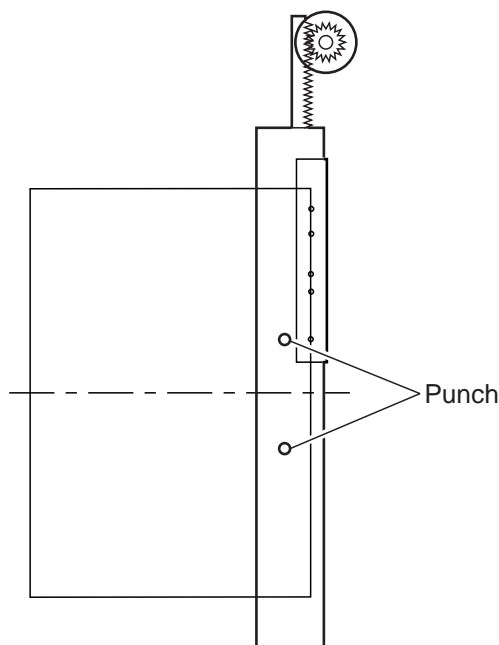

F02-602-10

- 4) When the punching operation ends, the feed motor (M1) of the fisher unit is driven and, at the same time, the horizontal registration motor (M2P) is rotated in reverse to return the punch slide unit to its home position.
- 5) For each sheet that arrives in succession, the punch slide unit is returned to its home position, and is caused to repeat steps 1 through 4 .

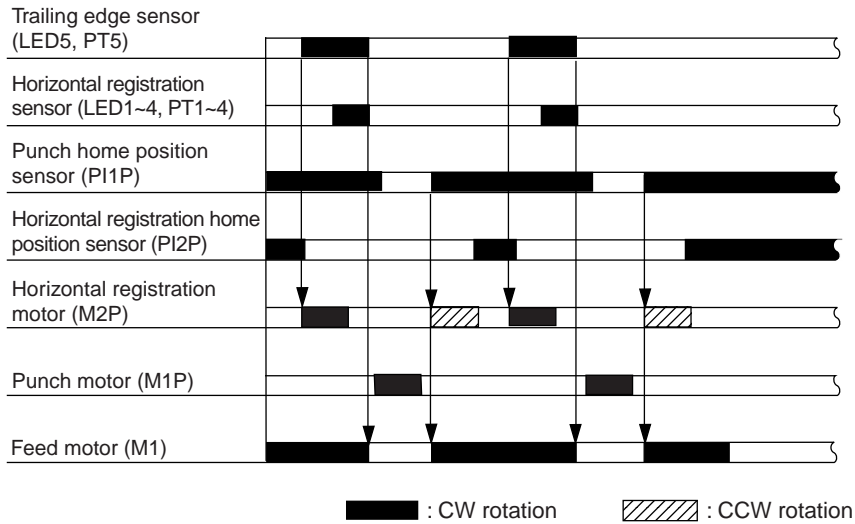


F02-602-11

7 Detecting Jams

7.1 Outline

The microprocessor (CPU) on the finisher controller PCB is programmed to check for jams in the finisher/saddle/puncher (option) at such times as set in advance. It identifies a jam in reference to the presence/absence of paper at a specific sensor. If a jam is found, the finisher controller PCB communicates the nature of the jam to the host machine in the form of a code (which may be checked in service mode of the host machine).

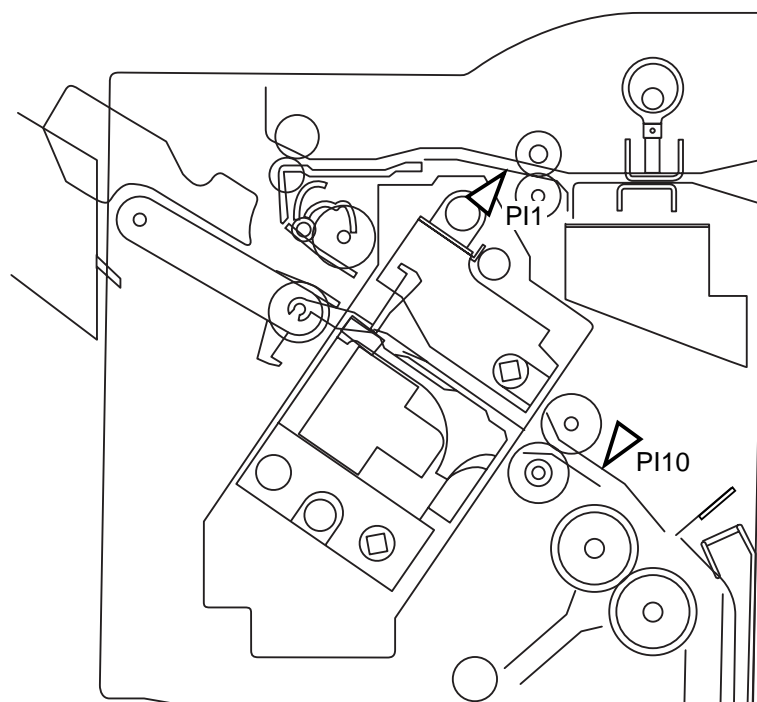


PI1: inlet sensor.
PI10 Folding position sensor

F02-701-01

7.1.1 Inlet Sensor Delay Jam (1011)


The inlet sensor does not detect paper approximately 1.5 sec after the host machine generates the delivery signal.

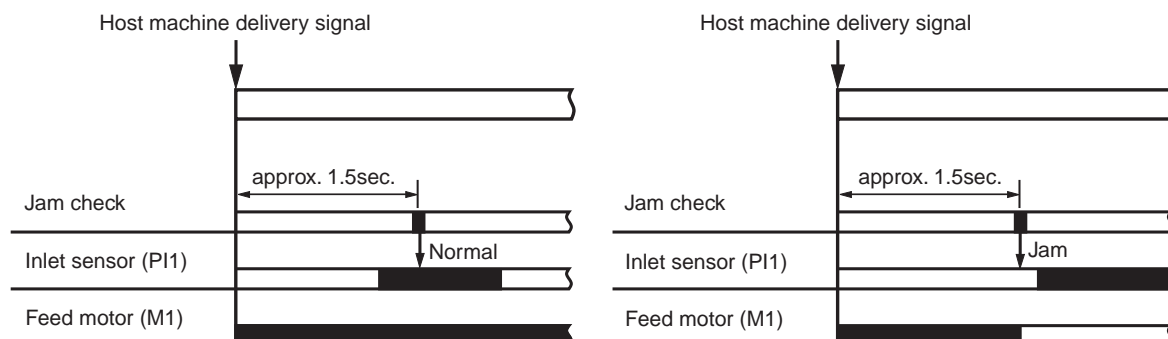

F02-701-02

7.1.2 Inlet Sensor Stationary Jam (1021)


The paper does not leave the inlet sensor approximately 2 sec after the inlet sensor has detected its leading edge.

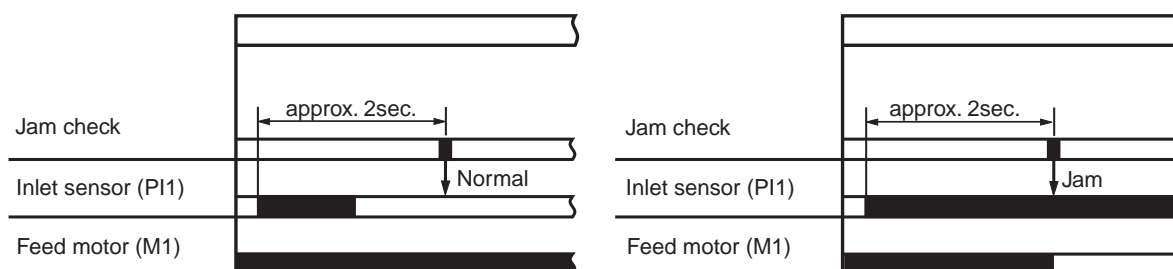

F02-701-03

7.1.3 Folding Position Sensor Delay Jam (1012)


In bind mode, the folding position sensor does not detect paper 1200 msec after the intermediate processing tray starts to send paper to the stapling position.

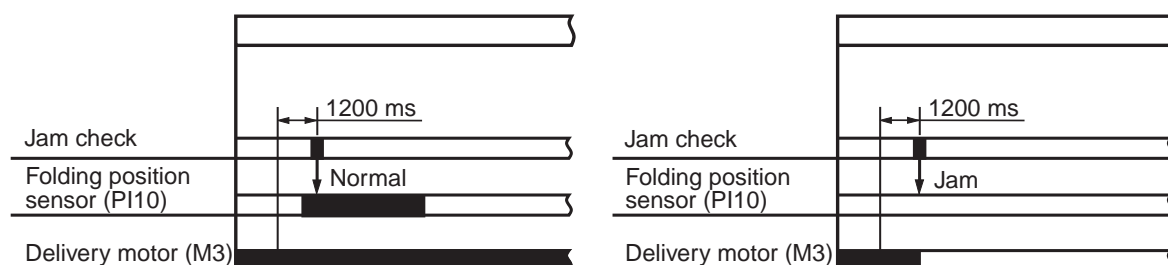

F02-701-04

7.1.4 Folding Position Sensor Stationary Jam (1022)

In bind mode, paper does not leave the holding position sensor approximately 10.5 sec after the staple/fold motor is driven.

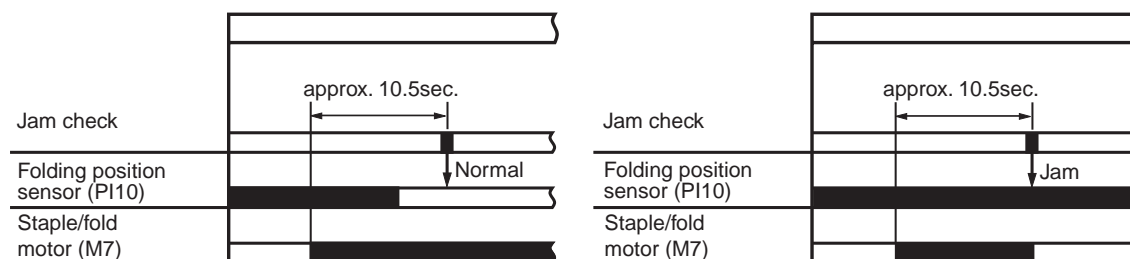

F02-701-05

7.1.5 Power-On Jam (1007)

Paper is detected inside the finisher at power-on or when the door is closed.

7.1.6 Door Open Jam (paper present) (1008)

The finisher is disconnected from its host machine or the front door, or the upper cover is opened while the system is in operation (paper on the move).

7.1.7 Staple Jam (1006)

The staple home position sensor (PI19) does not go OFF 600 msec after the stapler is driven. Or, it does not return to its home position (where the sensor goes ON).

8 Power Supply System

8.1 Finisher/Saddle Assembly


8.1.1 Outline

When the host machine is turned on, it supplies the finisher controller PCB with two channels of 24 VDC; one is for the motors and clutches, and the other is turned into 5 VDC by the regulator IC (IC1) of the finisher controller PCB for use by the sensors and ICs on PCBs.

If a punch unit (option) is installed, power is also supplied to the punch controller PCB.

Some of 24 VDC used to drive motors is cut off when the joint switch (MS2), front door switch (MS1), or stapler safety switch (MS3) is open.

F02-801-01 is a block diagram of the power supply system:

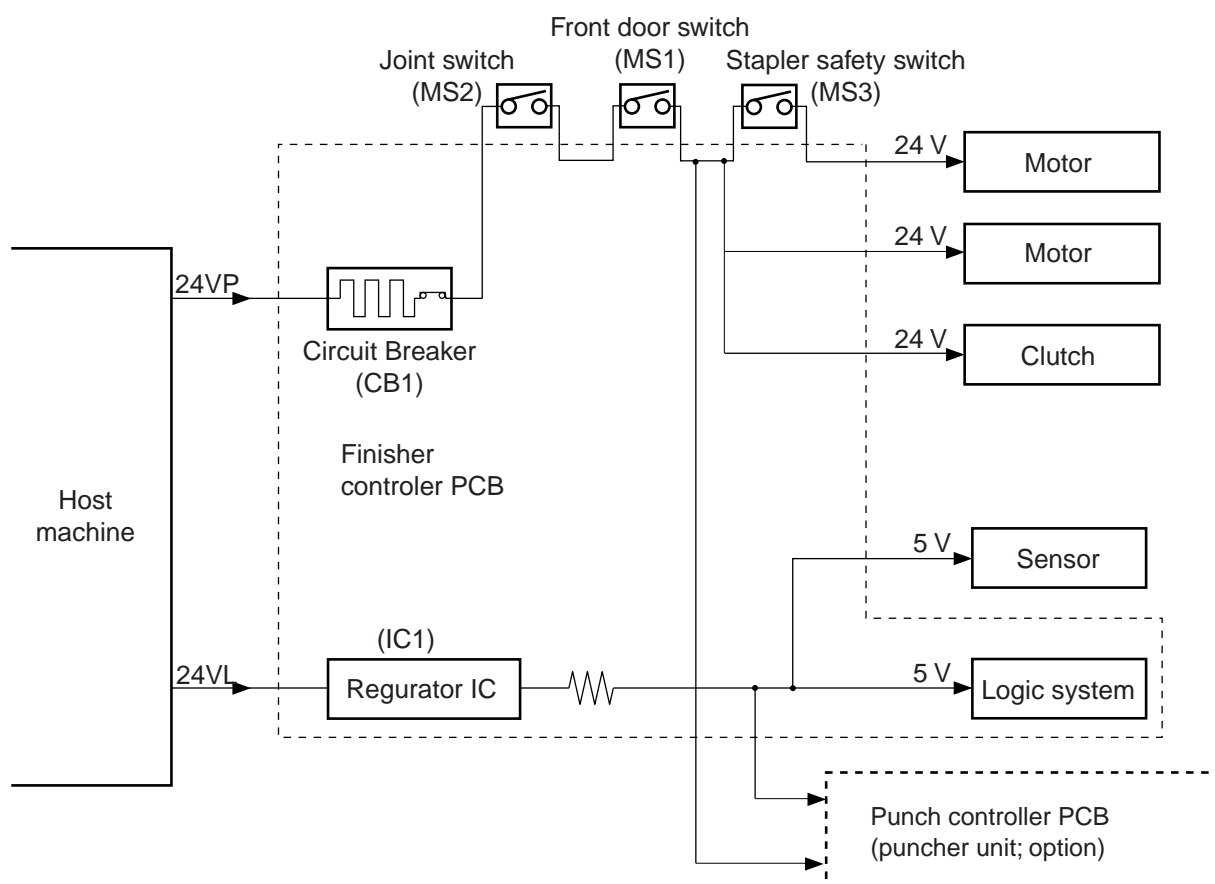

F02-801-01

8.1.2 Protective Mechanisms

A circuit breaker (CB1) is monitored to protect the 24 VDC system used to drive the motors against overcurrent. The 24-V system used to drive the feed motor (M1), paddle motor (M2), and delivery motor (M3) is equipped with a fuse which melts in the presence of overcurrent.

8.2 Puncher Unit (option)


8.2.1 Outline

When the host machine is turned on, the puncher unit is supplied by the finisher controller PCB with 24-V and 5-V power.

The 24-V power is used to drive the motors, while the 5-V power is used by sensors and the ICs on the punch controller PCB.

The 24-V power to the motors will be cut off when the joint switch (MS2) or the front door switch (MS1) of the finisher unit is open.

F02-802-01 is a block diagram for the power supply system:

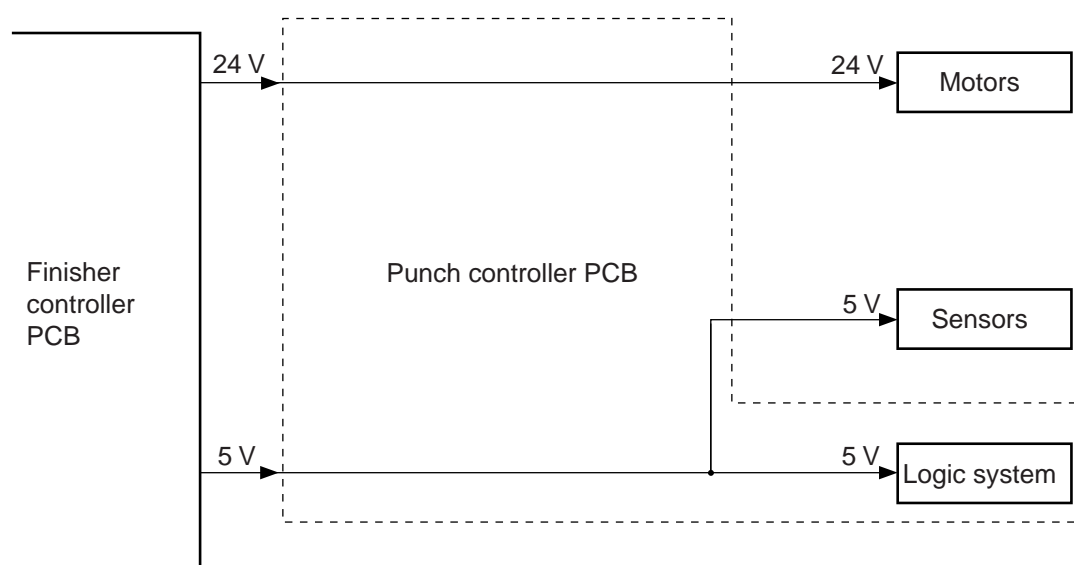

F02-802-01

8.2.2 Protective Mechanisms

The 24-V system used to drive the punch motor (M1P) and the horizontal registration motor (M2P) is equipped with a built-in fuse which melts in the presence of overcurrent.

CHAPTER 3


MECHANICAL SYSTEMS

1 Finisher Saddle Unit

1.1 Externals and Controls

- [1] Tray (2)
- [2] Rear cover (3)
- [3] Front cover (5)
- [4] Front door
- [5] Upper door
- [6] Upper right cover assembly (4)
- [7] Jam removal cover


The number in parentheses indicates the number of mounting screws used.

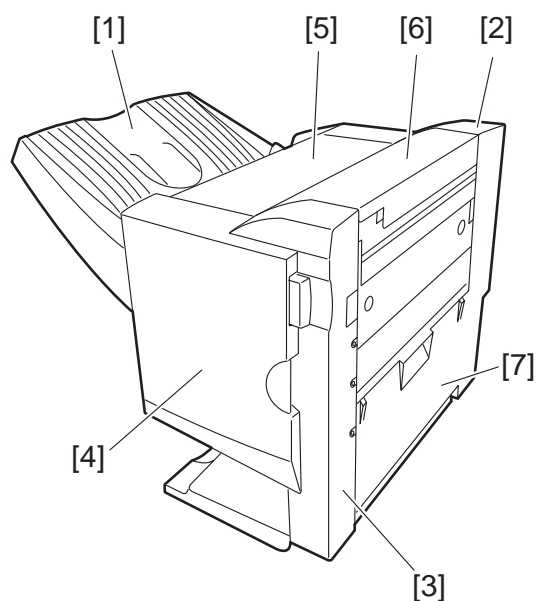

F03-101-01

1.1.1 Removing the Delivery Tray


- 1) Remove the four screw [1], and detach the delivery tray [2].

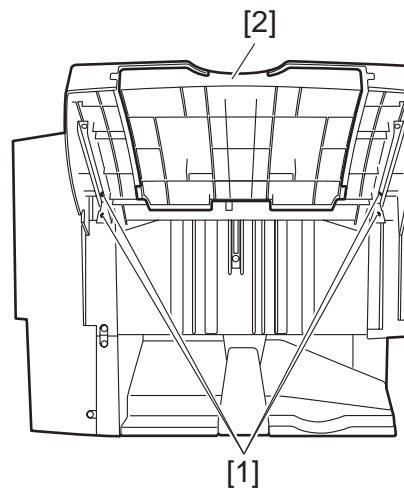

F03-101-02


1.1.2 Removing the Front Cover

- 1) Open the front door [1].
- 2) While picking the claw [2], detach the fold jam releasing dial [3].
- 3) Remove the two screws [4].

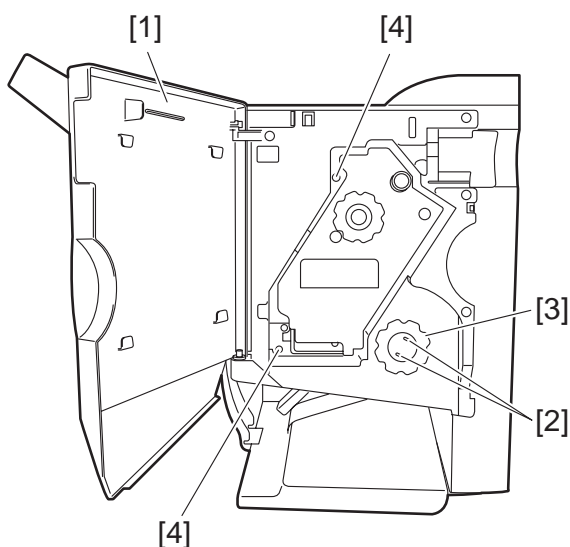

F03-101-03


- 4) Remove the three screws [5], and detach the front cover [6].

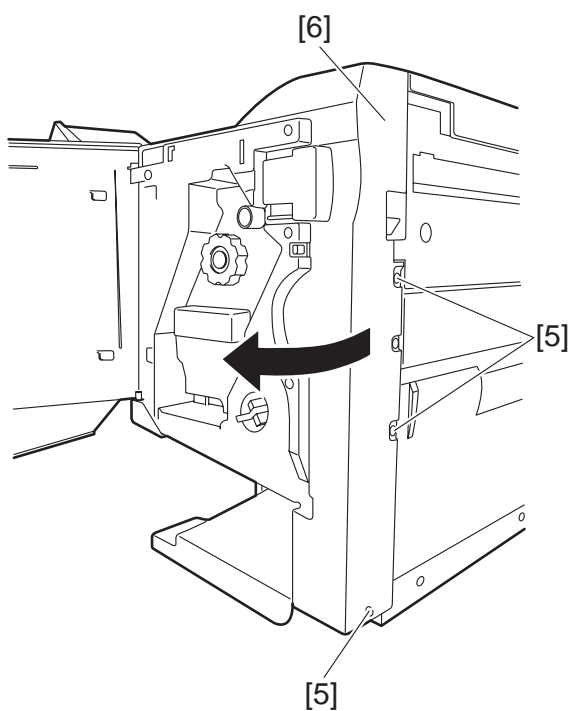


F03-101-04

1.1.3 Removing the Rear Cover

- 1) Remove the two screws [1] on the pickup side, and remove the screw [2] on the delivery side; then, detach the rear cover [3].

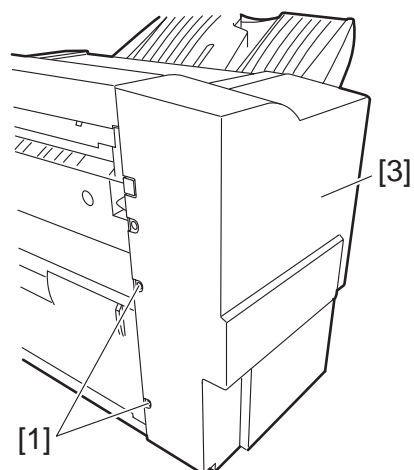


F03-101-05

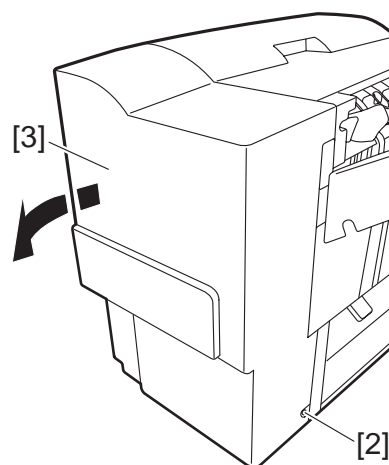

F03-101-06


1.1.4 Removing the Upper Cover

- 1) Open the upper cover [1], and turn the cover band retainer [2] to the left to remove it.
- 2) Remove the cover band [3].

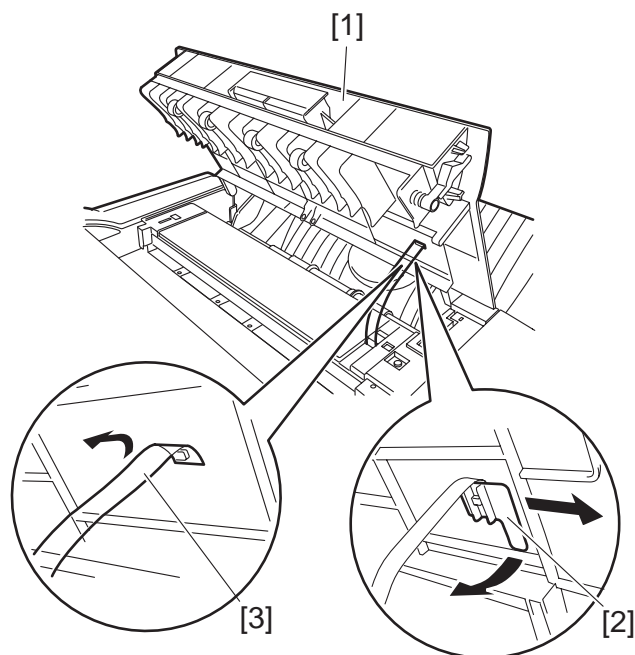

F03-101-07


- 3) Remove the screw [4], and detach the processing tray rear cover [5]; then, detach the upper cover [6].

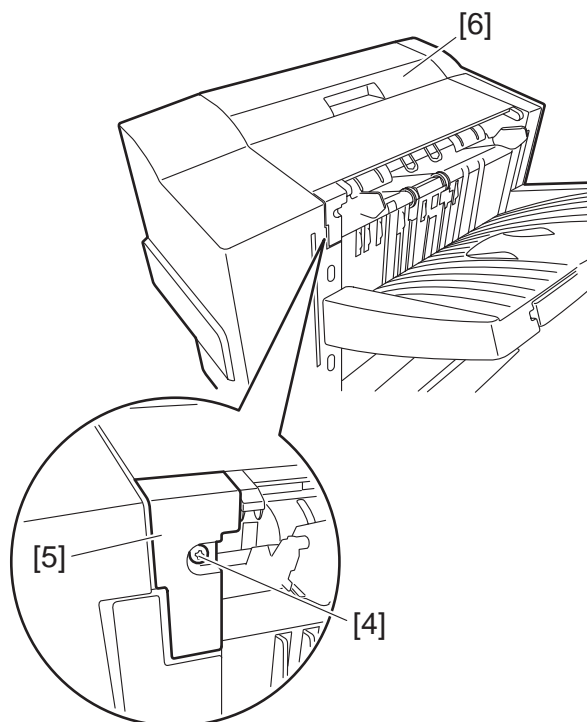

F03-101-08


1.1.5 Removing the Processing Tray Upper Cover

- 1) Remove the front cover. (See 1.1.2.)
- 2) Remove the rear cover. (See 1.1.3.)
- 3) Remove the upper cover. (See 1.1.4.)
- 4) Disconnect the connector [1], and remove the screw [2].

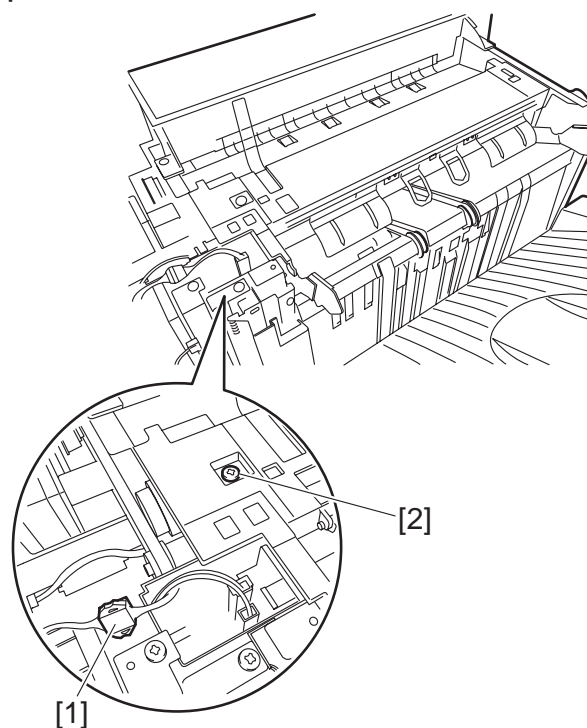

F03-101-09


- 5) While lifting the processing tray upper cover [3], disconnect the connector [4]; then, detach the processing tray upper cover [3].

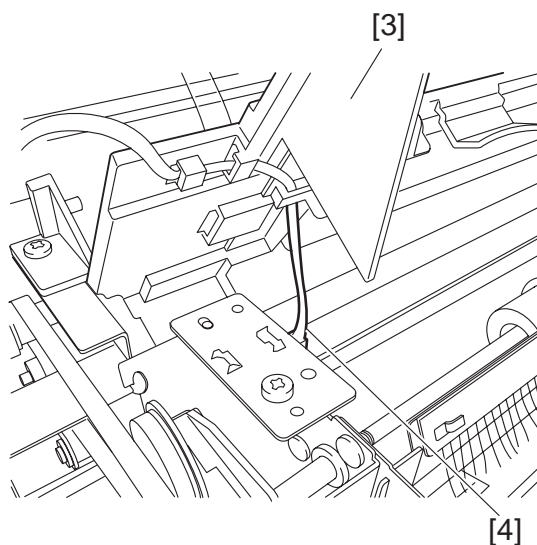


F03-101-10

1.1.6 Removing the Upper Right Cover Assembly

- 1) Remove the front cover. (See 1.1.2.)
- 2) Remove the rear cover. (See 1.1.3.)
- 3) Remove the two screws [1] at the front and the two screws [2] at the rear; then, detach the upper right cover assembly [3].

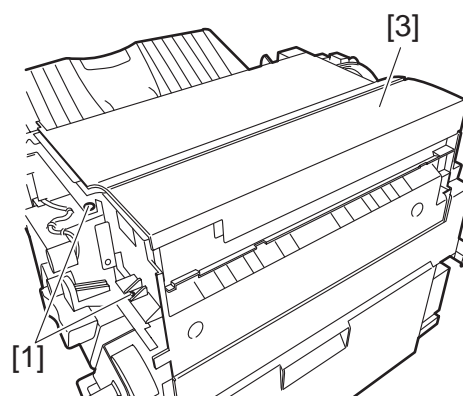


F03-101-11

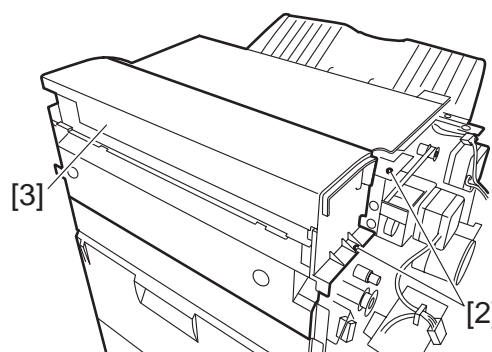

F03-101-12


1.1.7 Removing the Saddle Guide

- 1) Remove the delivery tray. (See 1.1.1.)
- 2) Remove the front cover. (See 1.1.2.)
- 3) Remove the rear cover. (See 1.1.3.)
- 4) Free the delivery tray support plate (front) [1] and the delivery tray support plate (rear) [2] to the outside from the rail grooves.
- 5) Remove the four screws [3].

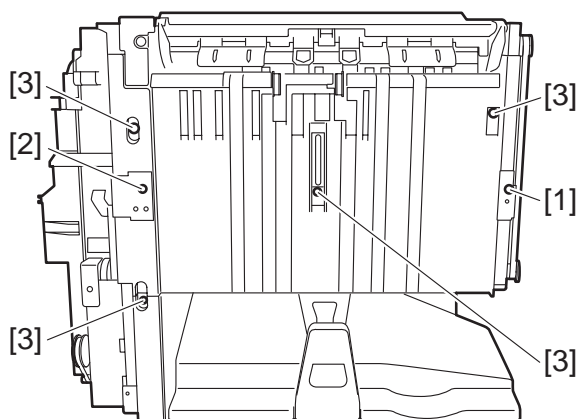

F03-101-13

- 6) Shift the side guide [4] lightly to the front, and free the engagement of the paper surface detecting lever (rear) [5]; then, detach the side guide [4].

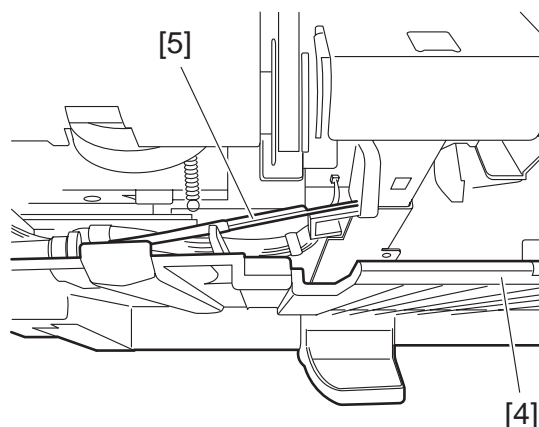


F03-101-14



Be sure to mount the side guide after securely fitting the paper surface detecting lever (rear) [5] in the groove of the paper surface detecting lever (middle) [6].

After completion of mounting, push the paper surface detecting lever several times to make sure that side guide is mounted securely.

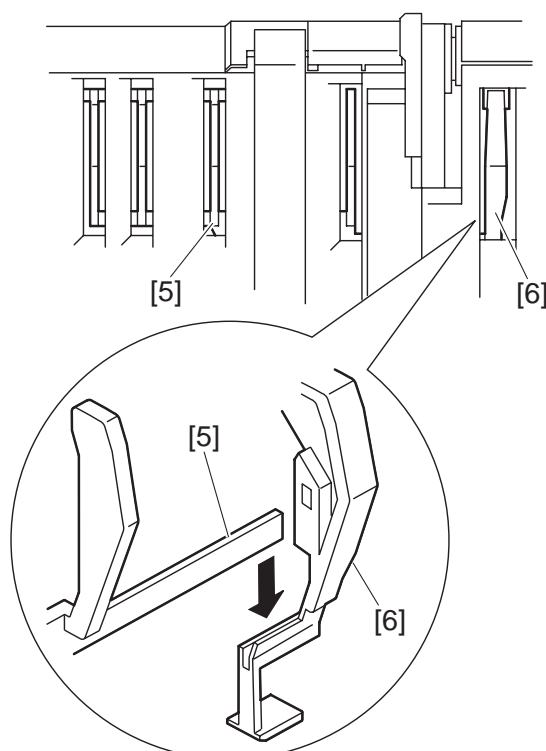


F03-101-15

1.2 Feeding System

1.2.1 Removing the Stapler Unit


- 1) Open the front door [1].
- 2) Slide out the stapler unit [3] while pressing the stopper lever [2].

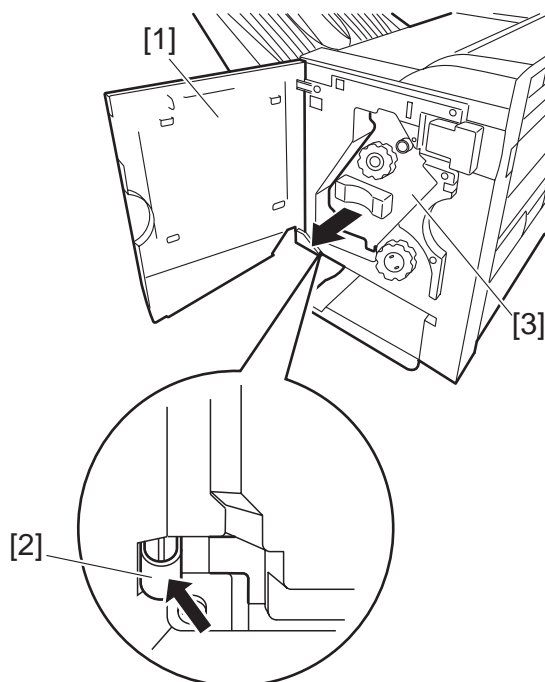

F03-102-01




Do not remove the stapler from the stapler frame shaft. If removed, the position where the staple driver (lower unit of the stapler) [4] shoots staples will shift from the position where the staple clincher (upper unit of the stapler) [5] receives staples.

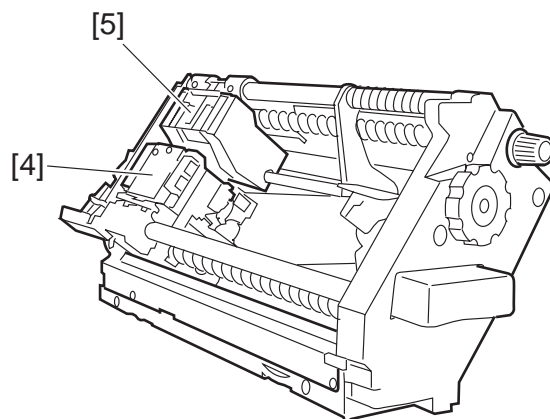

F03-102-02


1.2.2 Adjusting the Stapler Phase

When the gears or timing belt at the front of the stapler is replaced or removed for some reason, the staple shooting timing of the staple driver (lower unit of the stapler) does not match the staple bending timing of the staple clincher (upper unit of the stapler). Adjust the stapler phase following the procedure described below.

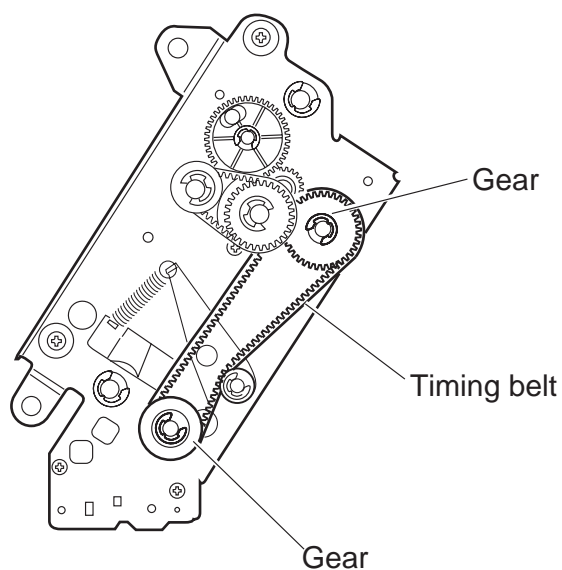


F03-102-03

- 1) Detach the gear cover [2] from the staple driver [1].
- 2) Remove the E-ring [3] to detach the side cover [5] of the staple clincher [4].

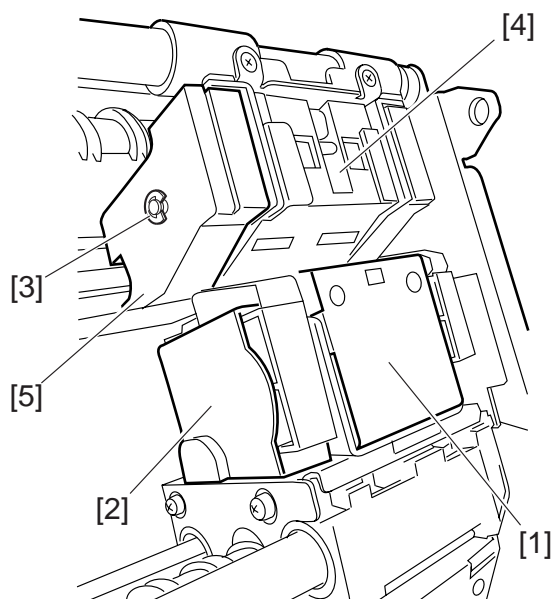


F03-102-04

- 3) Remove the two E-rings [6] to remove the staple jam releasing gear [7], timing belt [8], and relay gear 1 [9]. Remove the spacer and spring at the back of the staple jam relasing gear.
- 4) Remove the screw [10] and spring [11] to remove the belt tentioner [12].

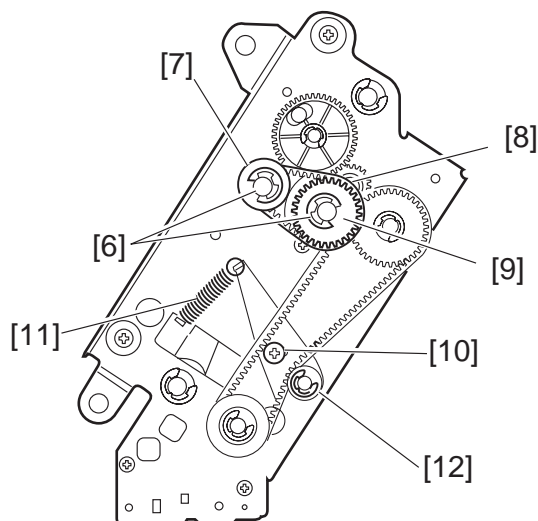


F03-102-05

- 5) Remove the timing belt [13].
- 6) Remove the E-ring [14] to remove the staple position check gear [15].

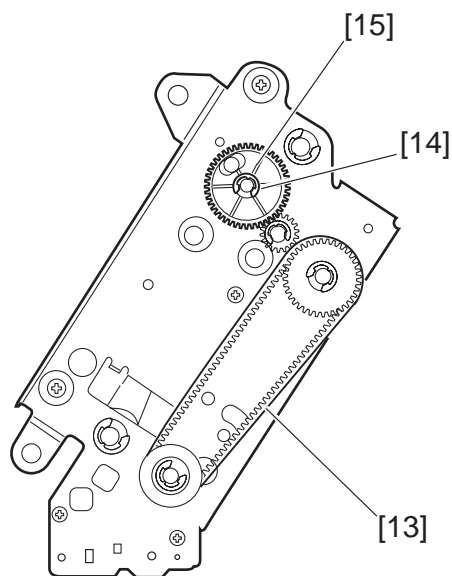


F03-102-06

- 7) Turn the gear [16] to align the round hole in the staple driver gear with the round hole [17] at the back.

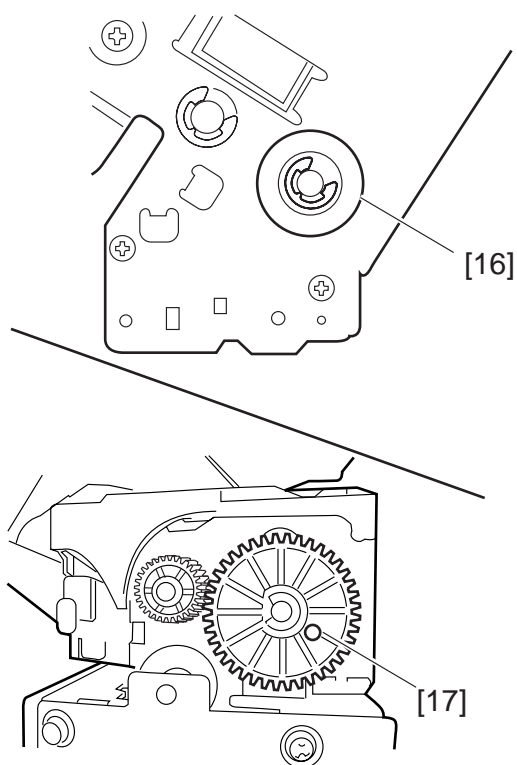


F03-102-07

- 8) Insert a pin [18] with a diameter of approximately 2 mm (use of a 2 mm Allen wrench is recommended) in the round hole to secure the gear.

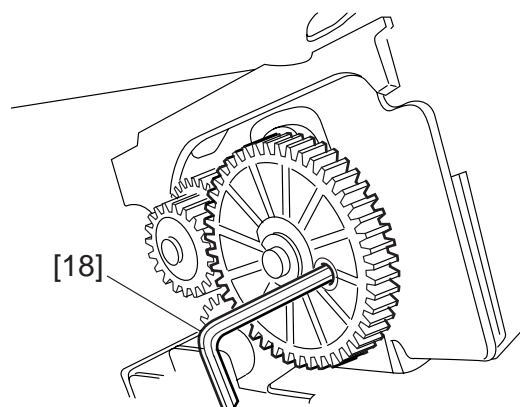


F03-102-08

- 9) Turn the gear [19] to align the round hole in the staple clincher cam with the round hole [20] at the back.

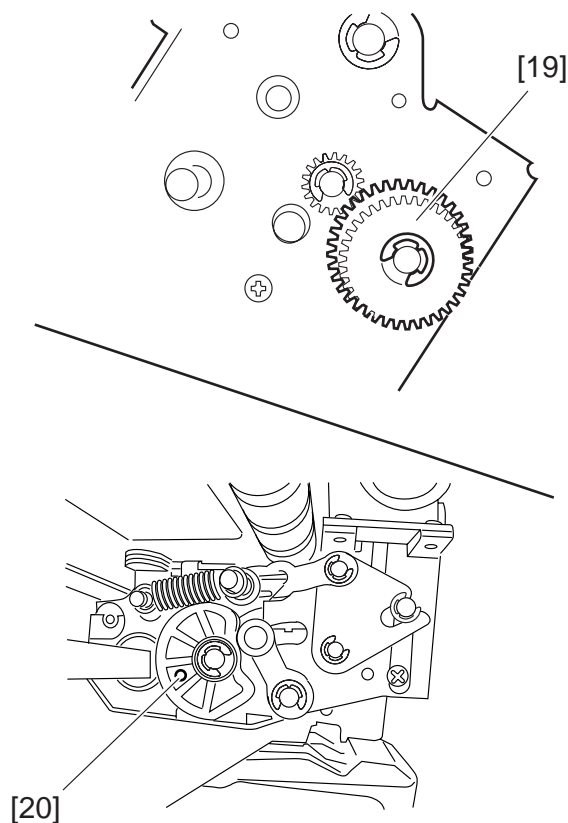


F03-102-09

- 10) Insert a pin [21] with a diameter of approximately 2 mm (use of a 2 mm Allen wrench is recommended) in the round hole to secure the gear.

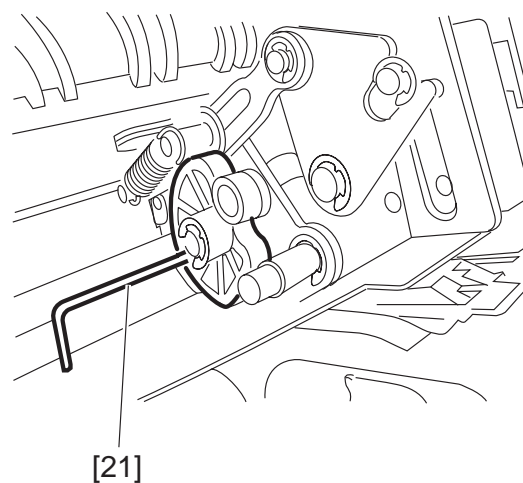


F03-102-10

- 11) With the gears and cam fixed, install the timing belt [22] on gears [23] and [24].

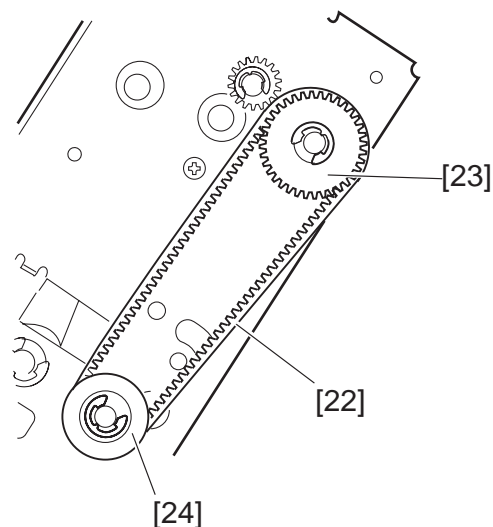

F03-102-11

- 12) Mount the staple position check gear [27] so that the blue mark [25] on the staple position check gear is aligned with the round hole [26] in the frame.

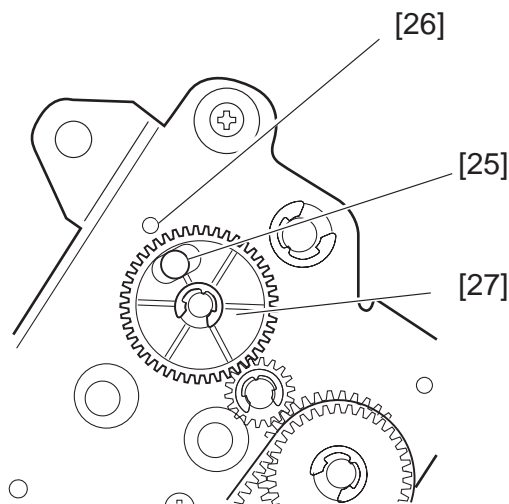


F03-102-12



The position where the blue mark is aligned with the round hole is the home position for stapling. If the staple jam cancel dial is turned for some reason, the home position deviates, making it impossible to remove the stapler cartridge. If such a case, the gear can be returned to the home position by checking blue mark position. Therefore, it is necessary to mount the gear at the correct position.

- 13) Remove the pin securing the gear to the cam.
- 14) Assemble the spring [28], spacer [29], staple jam releasing gear [30], timing belt [31], and relay gear [32] and secure them with the E-ring [33].

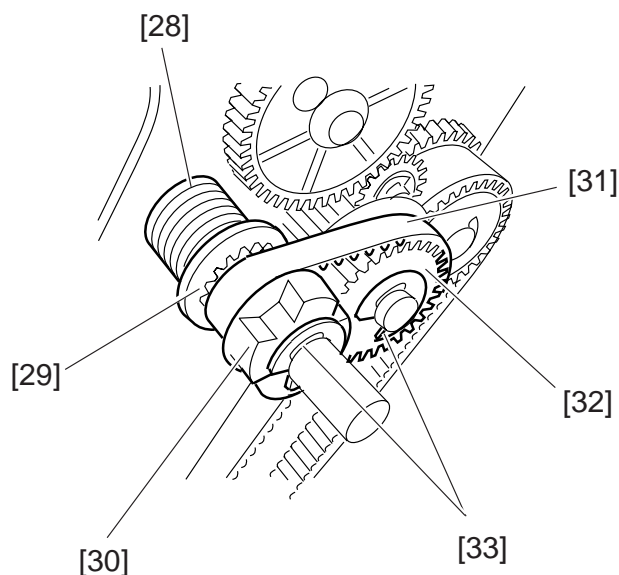


F03-102-13

1.2.3 Adjusting the Phase of the Gear in the Saddle Unit

If the gears at the front of the saddle unit or the paper fold rollers in the saddle unit are replaced or removed for some reason, adjust the gear phase following the procedure described below.


- 1) The paper fold rollers [1] and saddle cam [2] must be positioned as shown below.

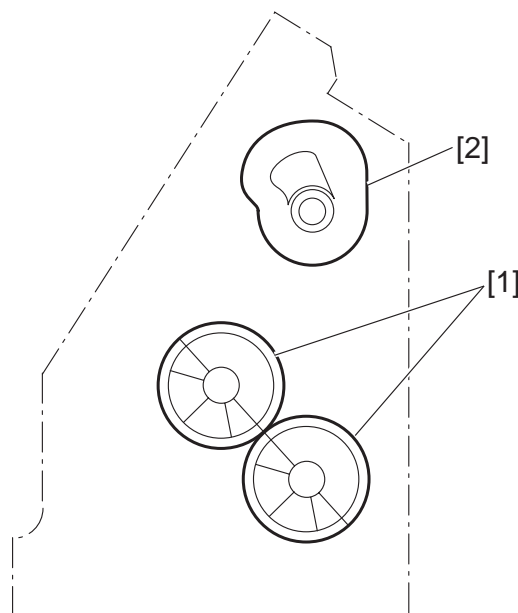

F03-102-14

2) With the paper fold rollers and saddle cam positioned as shown in Figure F03-102-14, mount gears as shown in figure F03-102-15.


- Align the ▲ mark (either of two ▲ marks) on the saddle cam drive gear [3] with the ▲ mark on the relay gear [4] (on the half of the periphery where gears with a smaller face width are arranged).
- With the ▲ mark on the saddle cam drive gear [3] aligned with the ▲ mark on the relay gear [4], align the other ▲ mark on the relay gear with the rib of the paper folding roller drive gear [5].

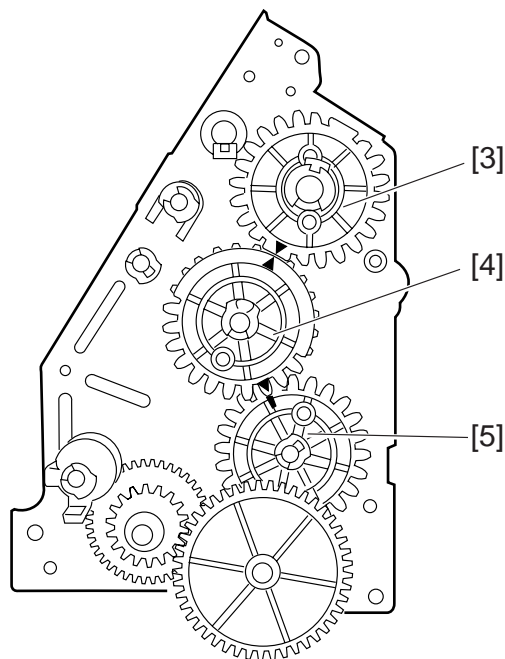

F03-102-15


1.2.4 Removing the Saddle Unit

- 1) Remove the front cover. (See 1.1.2.)
- 2) Remove the rear cover. (See 1.1.3.)
- 3) Open the jam removal cover [1]; then, remove the two screws [2] and the right stay [3].

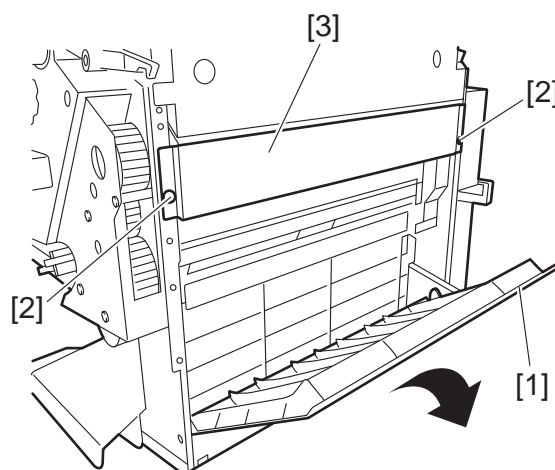


F03-102-16

- 4) Turn the fold jam releasing dial assembly [4] to move the paper retaining plate assembly [5] to the inside.

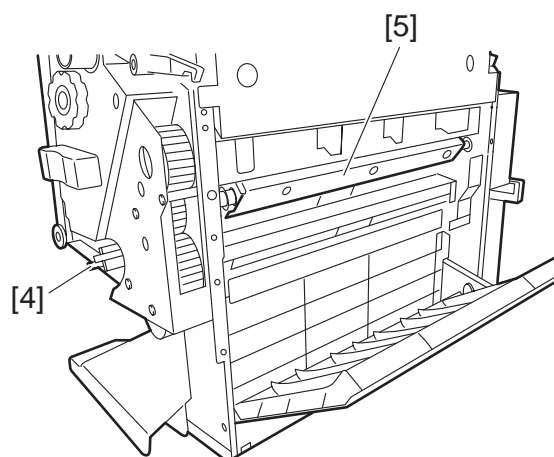


F03-102-17

- 5) Remove the stop ring [6], and detach the timing belt [7].
- 6) Disconnect the two connectors [8].

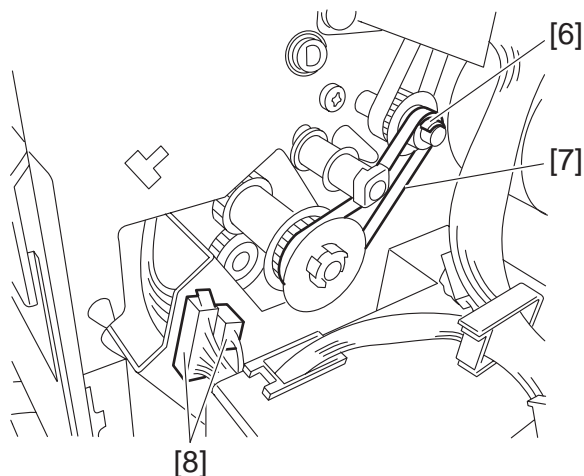

F03-102-18


- 7) Remove the three screws [9], and slide out the stapler unit [10] slightly to the front.
- 8) Slide out the saddle unit [11] to the front.

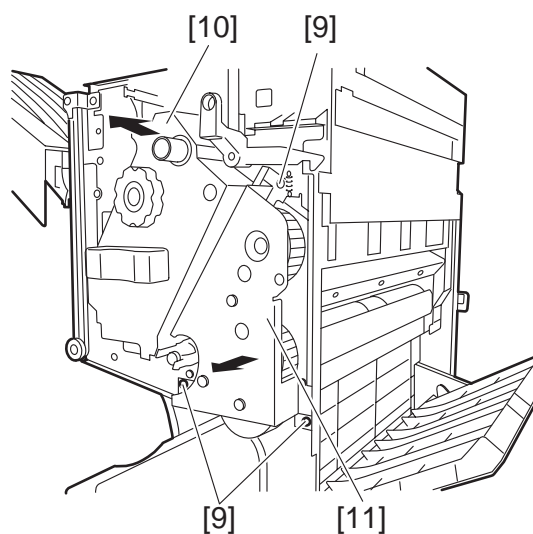

F03-102-19


1.2.5 Removing the Processing Tray Assembly

- 1) Remove the processing tray upper cover. (See 1.1.5.)
- 2) Remove the side guide. (See 1.1.7.)
- 3) Remove the two screws [1], and disconnect the five connectors [2].

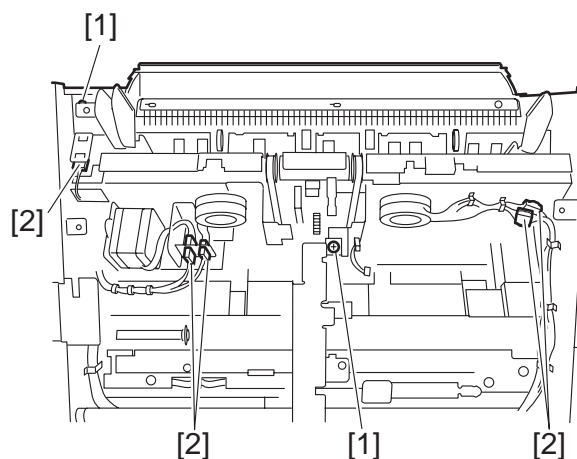


F03-102-20

- 4) Pull the processing stopper base [3] to the front, and free the claw [5] at the front and the claw [6] at the rear of the processing stopper [4].

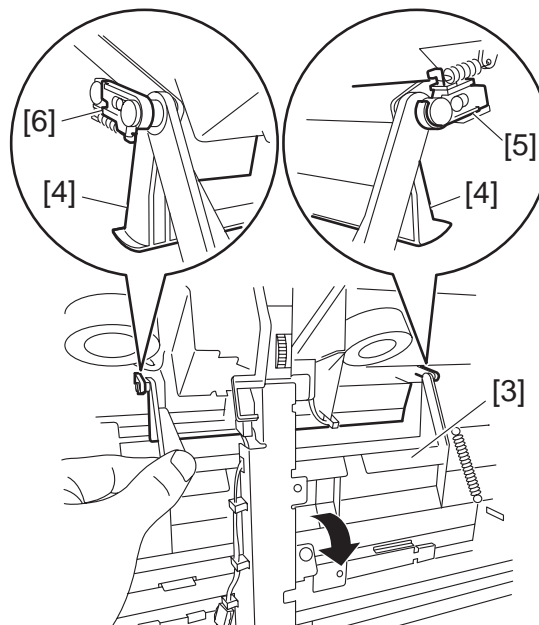


F03-102-21

- 5) Disconnect the three connectors [7].
- 6) Release the two claws [8] of the harness retainer, and detach the motor harness [9].

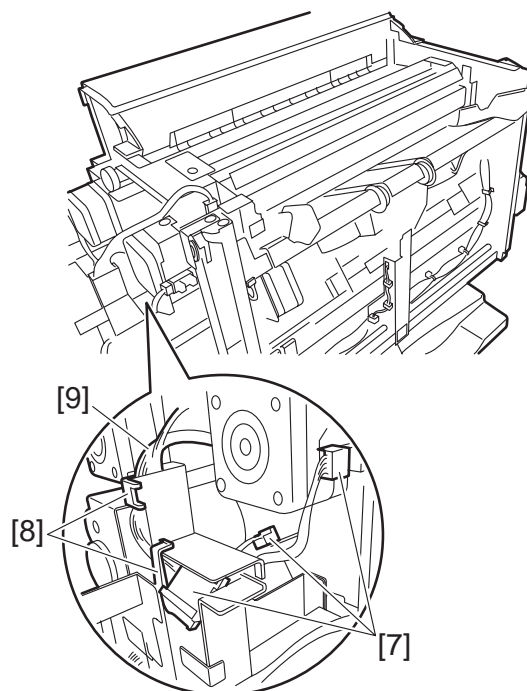


F03-102-22

- 7) Remove the stop ring [10], and detach the timing belt [11].
- 8) Disconnect the connector [12], and free the harness [14] from the edge saddle [13].

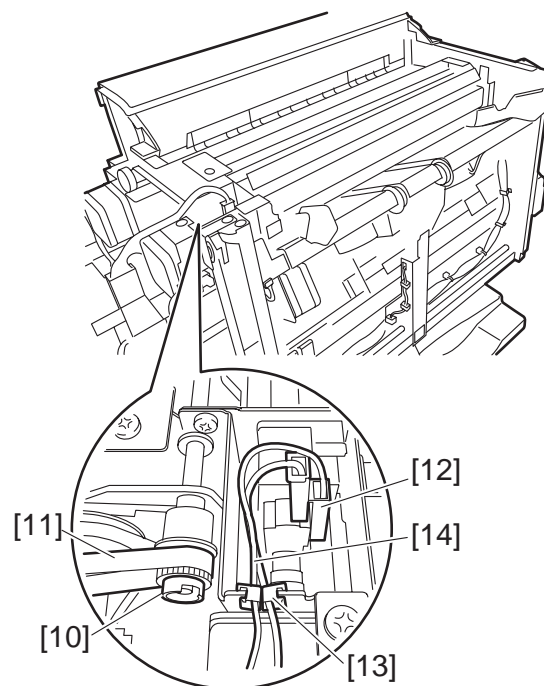

F03-102-23

- 9) Remove the two screws [15], and slide the processing tray assembly [16] to the rear; then, lift it to detach.

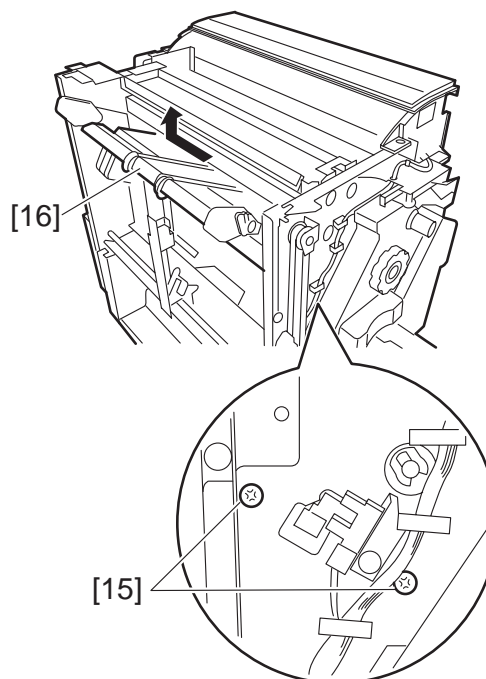


F03-102-24

1.2.6 Removing the Paddle Assembly

- 1) Remove the processing tray assembly.
(See 1.2.3.)
- 2) Place the processing tray assembly [1] as shown.




Be sure to take care not to damage the aligning plate [2].

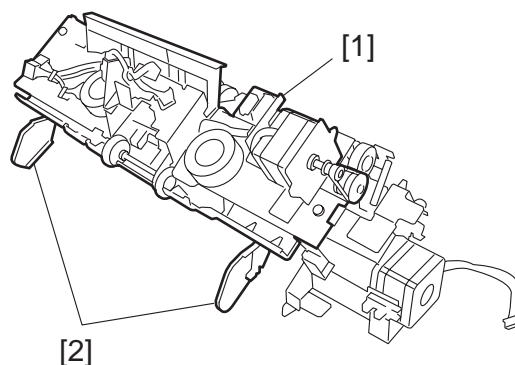


F03-102-25

- 3) Detach the timing belt [3], and remove the two screws [4].

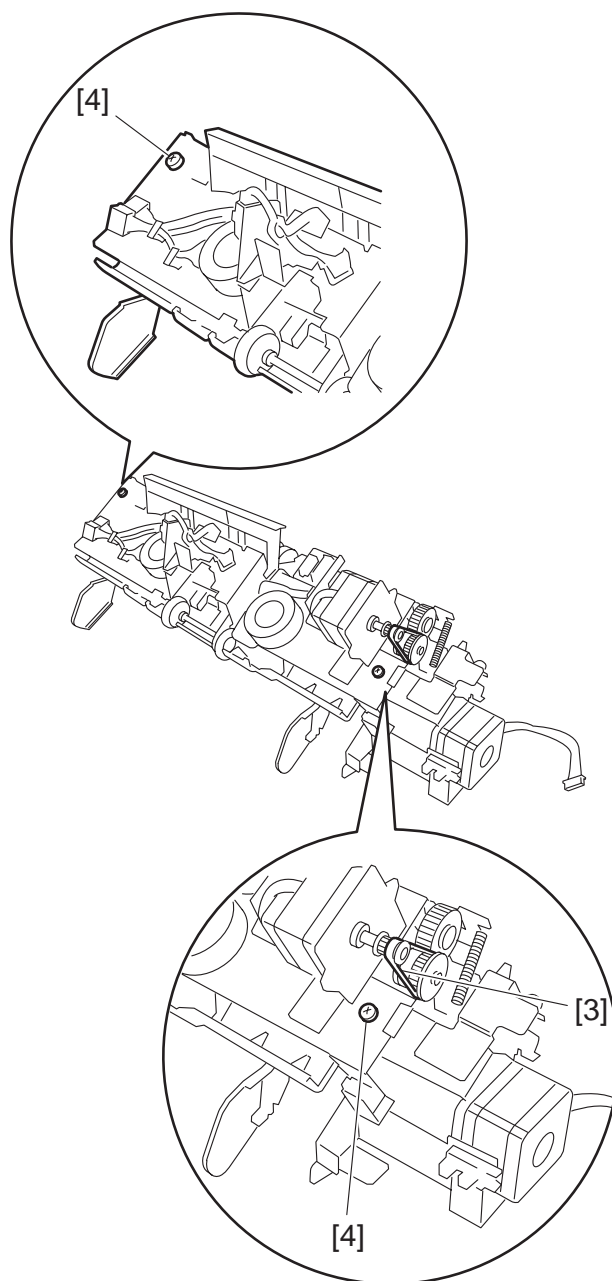

F03-102-26


- 4) Separate the processing tray assembly [5] and the paddle assembly [6] as shown.

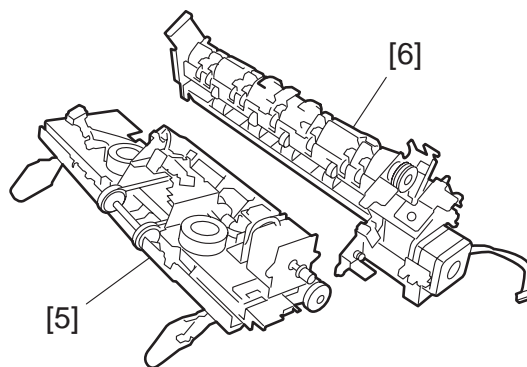

F03-102-27


1.2.7 Removing the Staple/Fold Drive Unit

- 1) Open the front door [1], and slide out the stapler unit [2] slightly to the front.

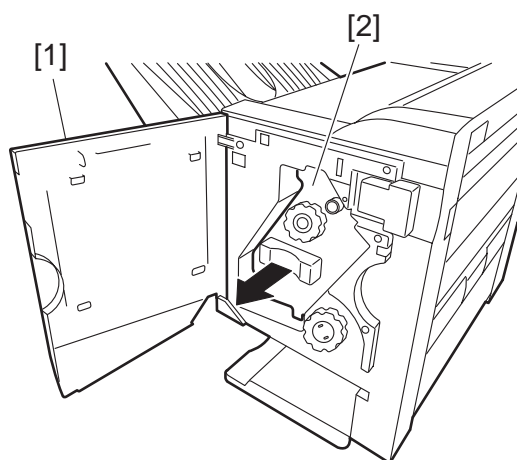


F03-102-28

- 2) Remove the screw [3], and detach the interface retainer [4].
- 3) Free the six harness retainers [5], and disconnect the connector [6].
- 4) Free the harness [7] from the harness retainer [5].
- 5) Free the harness [7] from the edge saddle [8]; then, disconnect the two connectors [9].

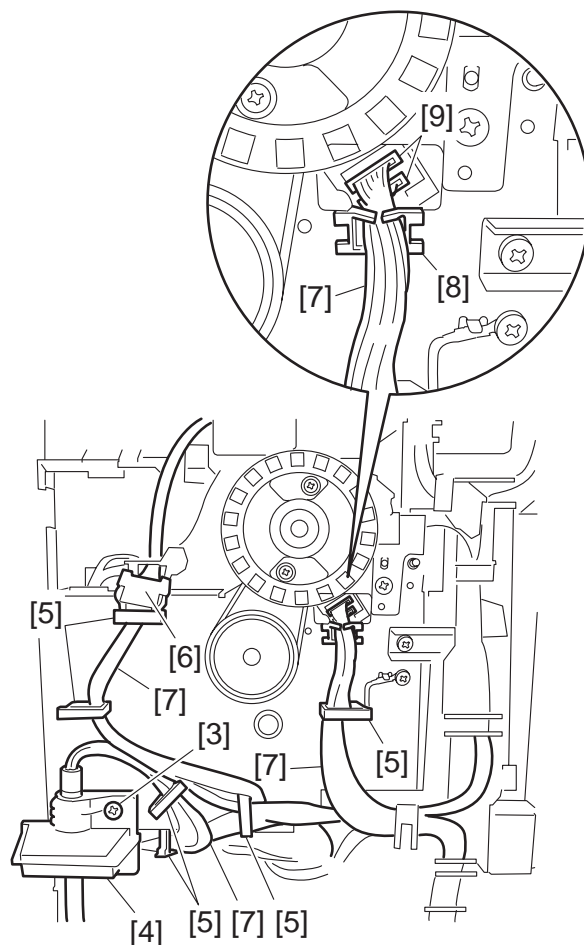


F03-102-29

- 6) Release the harness retainer [10], and disconnect the connector [11].
- 7) Free the harness [12] from the harness retainer [10].
- 8) Free the harness [12] for the edge saddle [13]; and disconnect the two connectors [14].

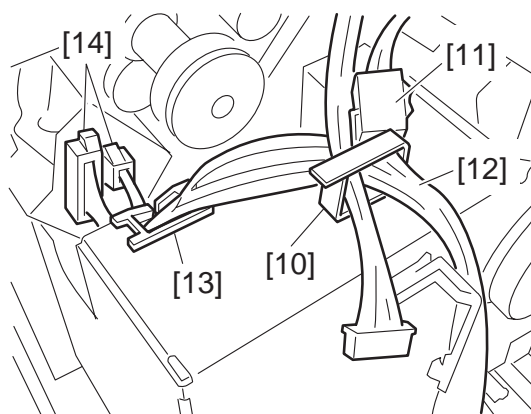


F03-102-30

- 9) Remove the screw [15], and free the claw [17] of the harness guide from the long angle [16] of the base plate.

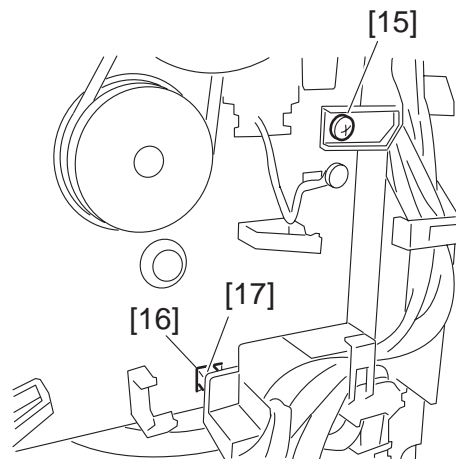


F03-102-31

- 10) Disconnect the two connectors [18], and free the harness [20] from the edge saddle [19].

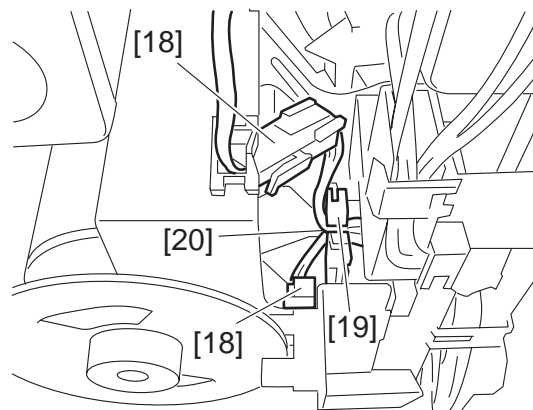


F03-102-32

11) Remove the three screws [21].

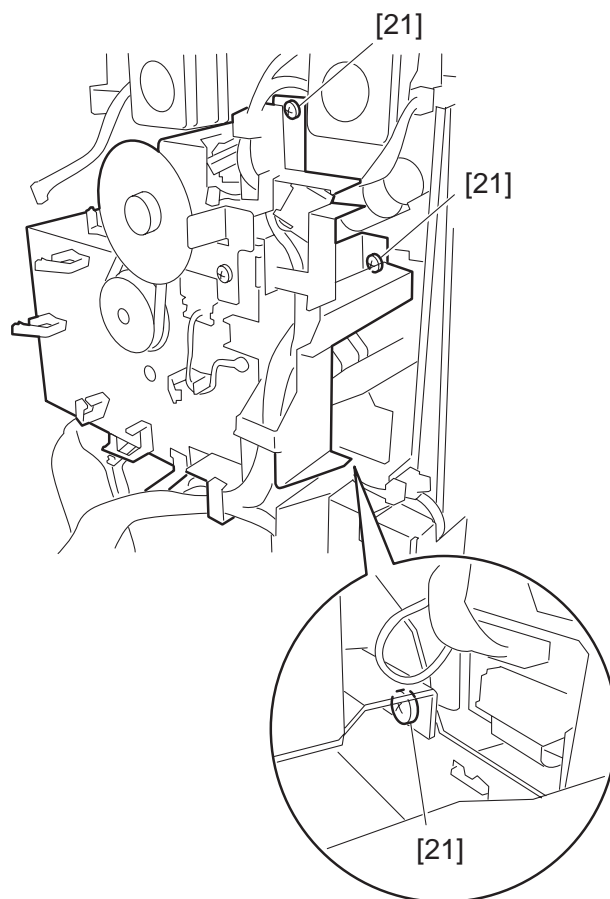

F03-102-33


12) Remove the screw [22], and detach the staple/fold drive unit [23].

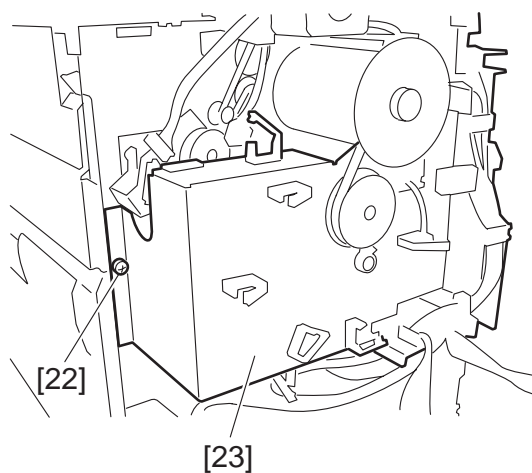

F03-102-34

1.2.8 Removing the Feed Motor Unit


- 1) Remove the rear cover. (See 1.1.3.)
- 2) Open the harness retainer [1], and disconnect the two connectors [2].
- 3) Remove the screw [3], and detach the harness guide [4].
- 4) Remove the three screws [5], and detach the feed motor unit [6].

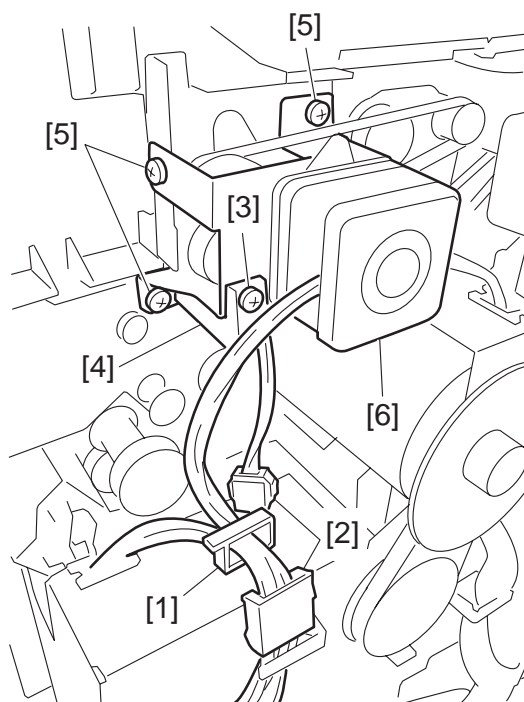

F03-102-35


1.2.9 Removing the Feed Roller

- 1) Remove the upper cover. (See 1.1.4.)
- 2) Remove the upper right cover assembly. (See 1.1.6.)
- 3) Remove the feed motor unit. (See 1.2.6.)
- 4) Remove the screw [1].
- 5) Remove the stop ring [2], and detach the bushing [3].

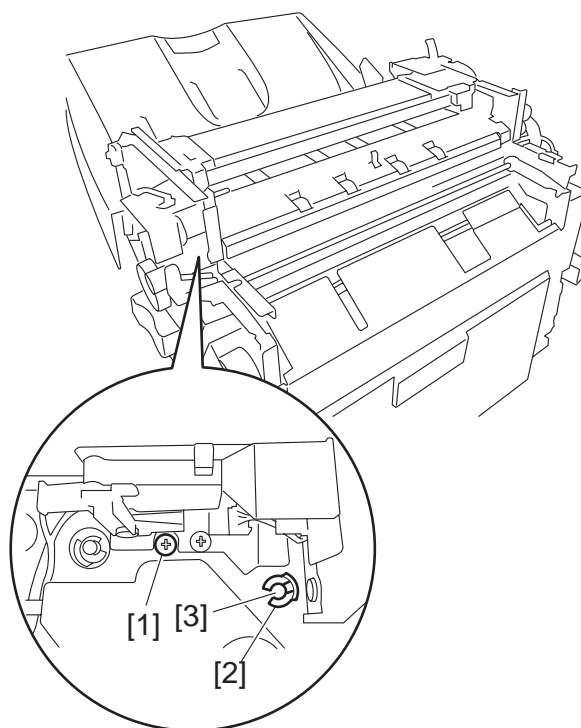


F03-102-36

- 6) Remove the two screws [4].

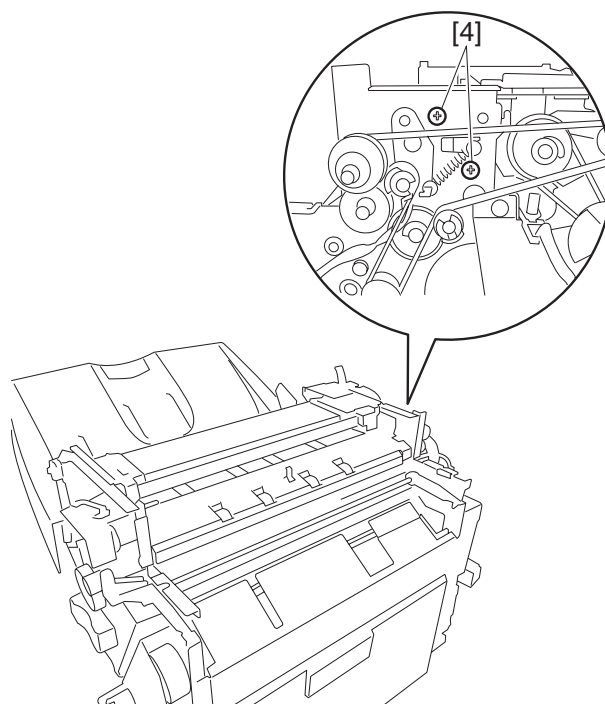


F03-102-37

- 7) Remove the gear [5], and detach the gear [6] while spreading the claw.
8) Remove the stop ring [7], and detach the bushing [8].
9) Remove the screw [9], and detach the inlet sensor [10].
10) Remove the lower paper guide [11].

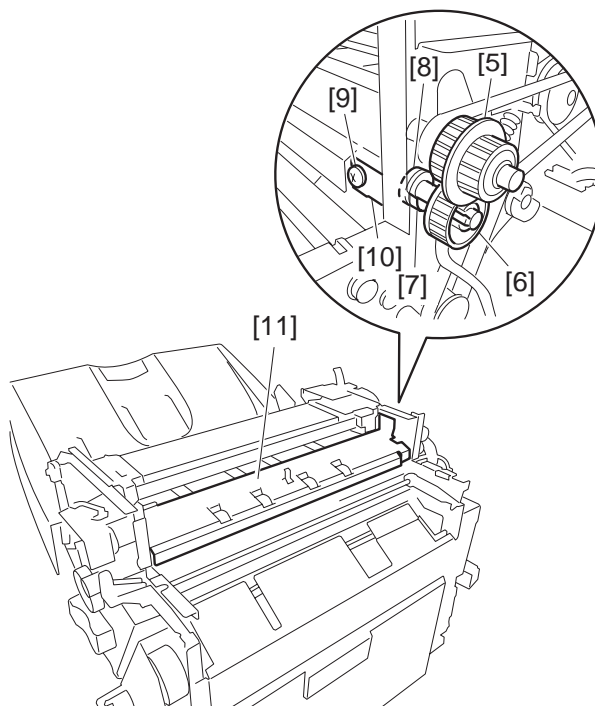

F03-102-38


- 11) Remove the feed roller [12].

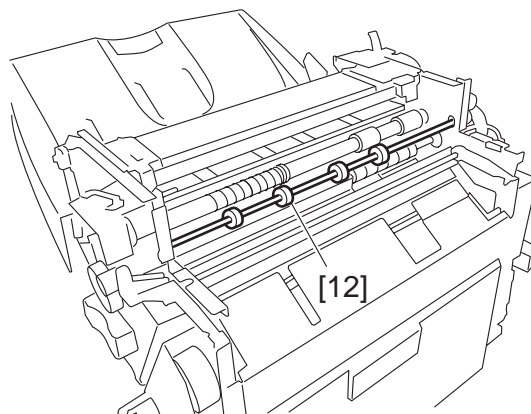

F03-102-39


1.2.10 Removing the Stack delivery roller (upper)

- 1) Remove the paddle assembly. (See 1.2.4.)
- 2) Place the paddle assembly [1] as shown.

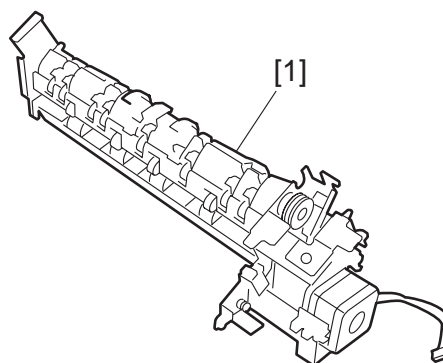


F03-102-40

- 3) Turn the gear [2] in the direction of the arrow to move up the stack delivery roller assembly (upper) [3].

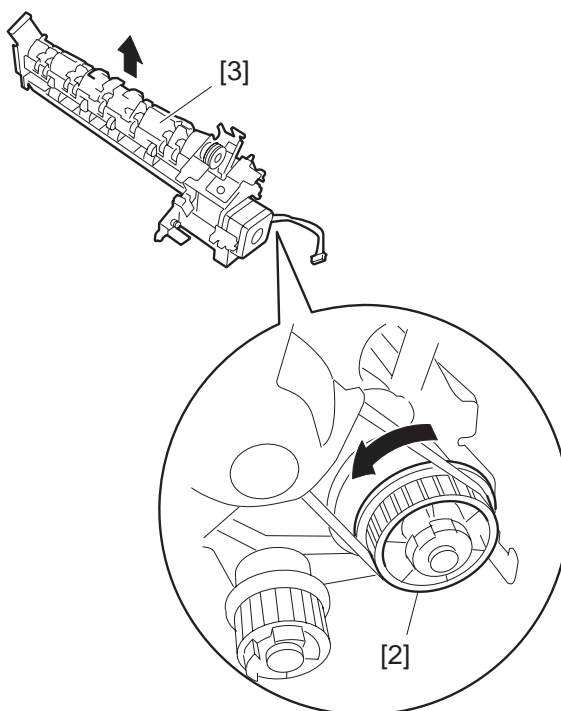


F03-102-41

- 4) Push up the stack delivery roller (upper) [4] from below to free the stack deliver roller (upper) [4] from the shaft [5].

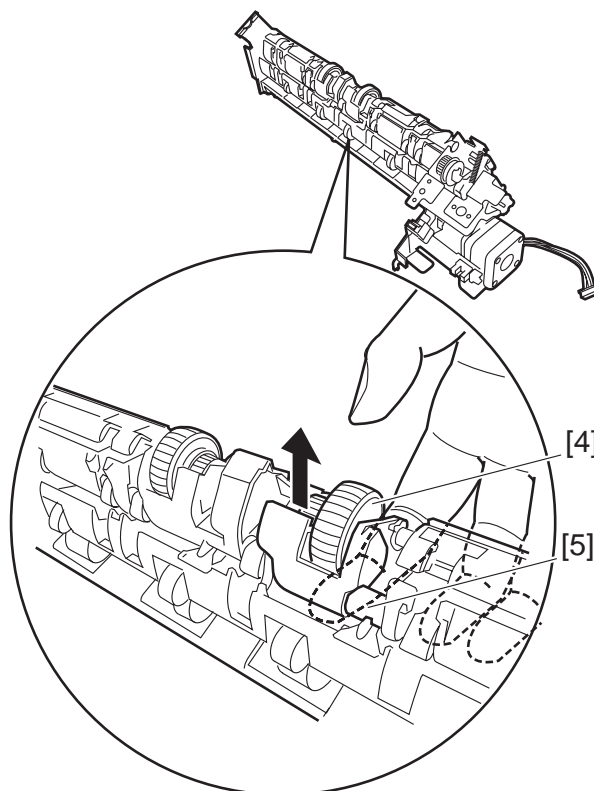

F03-102-42

- 5) Shift up the stack delivery roller (upper) [4], and then push it down to detach the stack deliver roller (upper) [4].

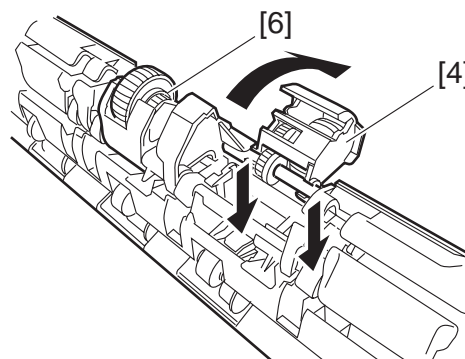


F03-102-43

- 6) Likewise, remove the stack delivery roller (upper) [6] at the front.


1.2.11 Removing the Paddle

- 1) Remove the paddle assembly. (See 1.2.4.)
- 2) Place the paddle assembly [1] as shown.

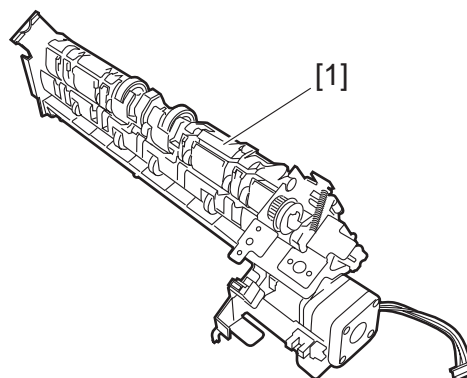


F03-102-44

- 3) Turn the gear [2] in the direction of the arrow to move up the stack delivery roller assembly (upper) [3].

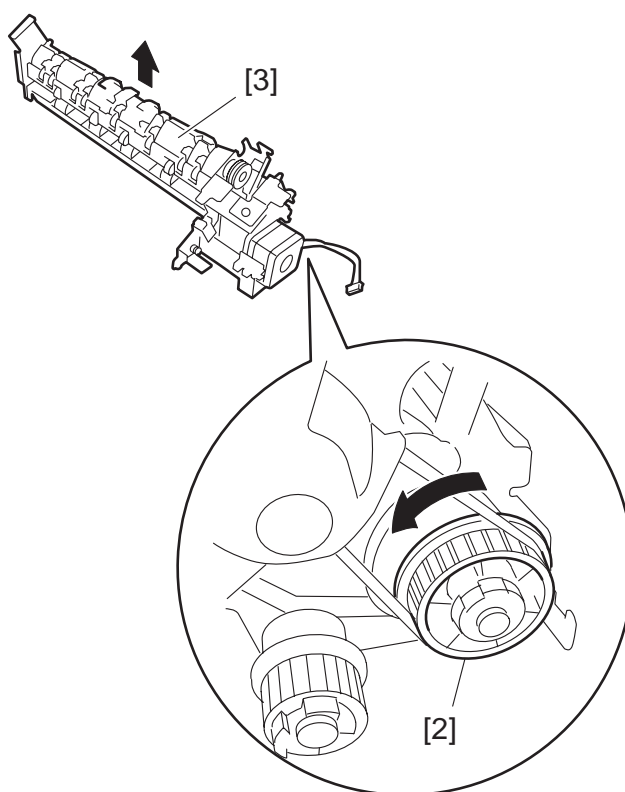


F03-102-45

- 4) Push up the safety guide [4] from below to free one side of the safety guide [4] from the shaft [5].

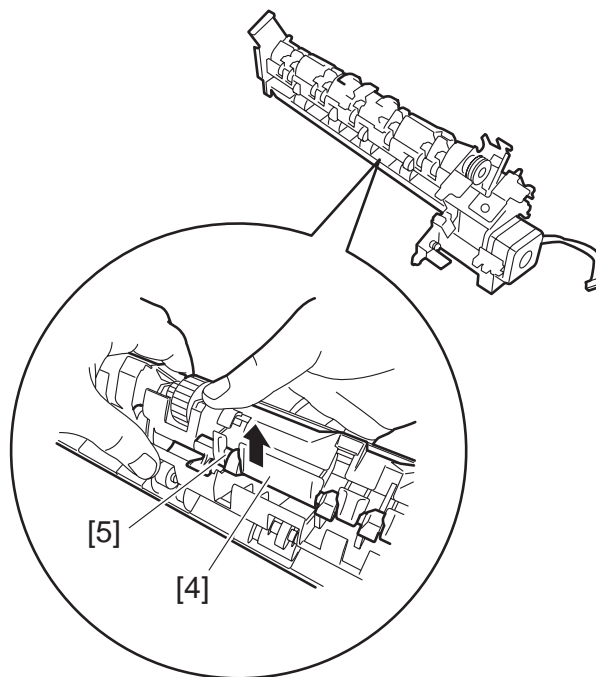


F03-102-46

- 5) Push up the safety guide [4] from below to free the safety guide [4] from the shaft [5].

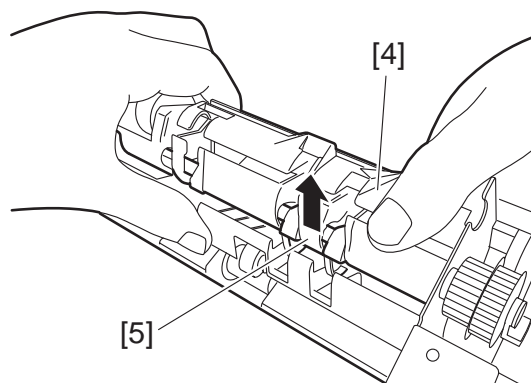

F03-102-47


- 6) Remove the paddle [6] in the direction of the arrow.
7) Likewise, remove the other paddle.

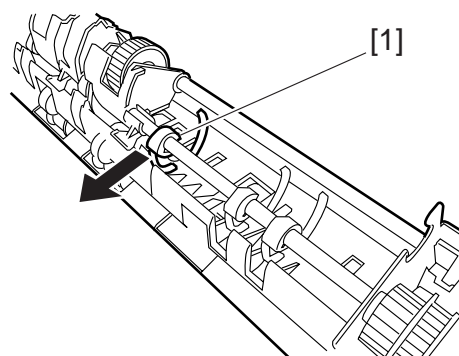

F03-102-48


1.2.12 Removing the Stack delivery roller (lower)/Delivery Belt

- 1) Remove paddle assembly, and separate it from the processing tray assembly.
(See 1.2.4.)
- 2) Slide the aligning plate (front) [2] and the aligning plate (rear) [3] of the processing tray assembly [1] by sliding them to the outside.

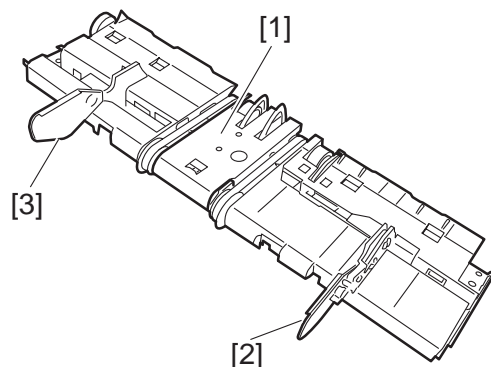


F03-102-49

- 3) Remove the processing tray stopper [4].

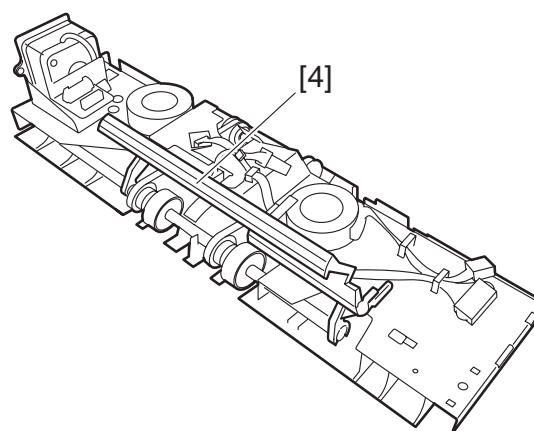


F03-102-50

- 4) Remove the screw [5], and detach the paper guide (front) [7] while freeing the two claws [6].

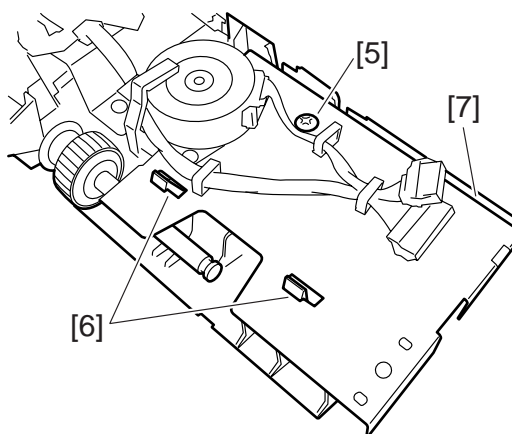


F03-102-51

- 5) Remove the screw [8]; then, while freeing the claw [9], detach the paper guide (rear) [10].

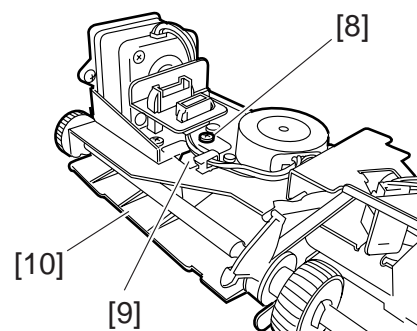


F03-102-52

- 6) Remove the two stop rings [11]; then, move the two bushings [12] to the inside.

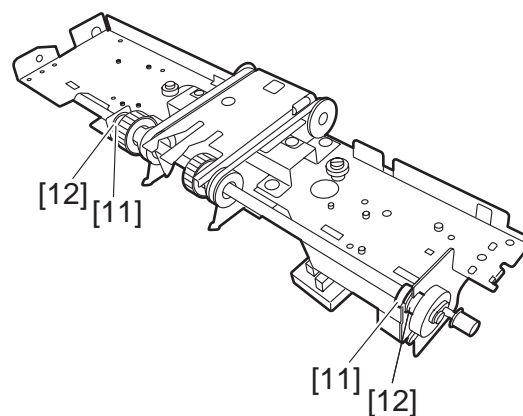


F03-102-53

- 7) Remove the four screws [13]; then, lift the stack delivery roller assembly (lower) [14] to detach.

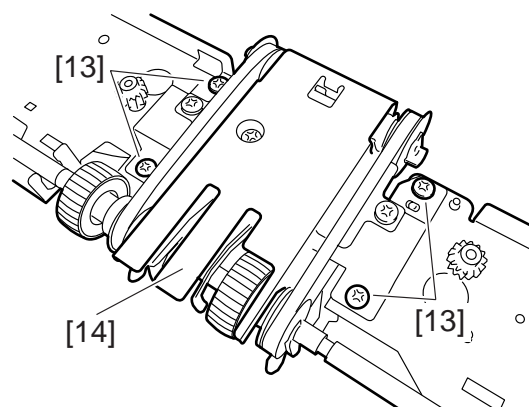

F03-102-54


- 8) Remove the stack delivery roller (lower) [15] and the two delivery belts [16].

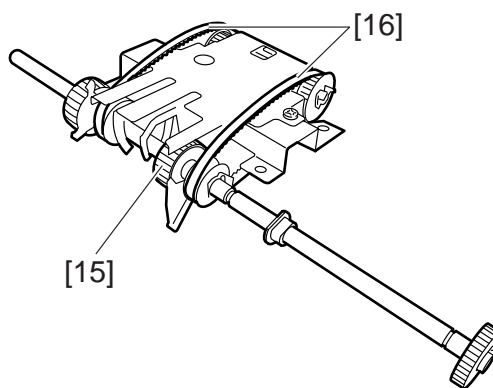

F03-102-55



Be sure to mount them so that the edges [17] of the claws of the delivery belts are flush.

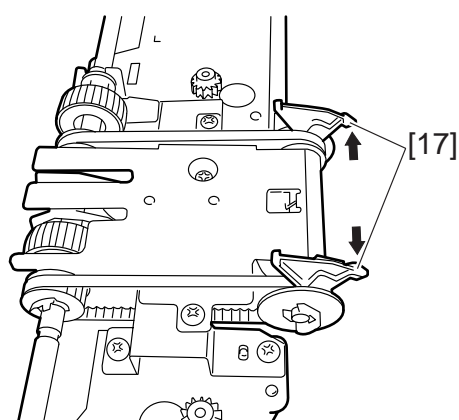


F03-102-56

1.3 PCBs

1.3.1 Removing the Finisher Controller PCB


- 1) Remove the rear cover. (See 1.1.3.)
- 2) Disconnect the 17 connectors [1], and remove the screw [2].
- 3) Free the PCB retainer [3], and detach the finisher controller PCB [4].

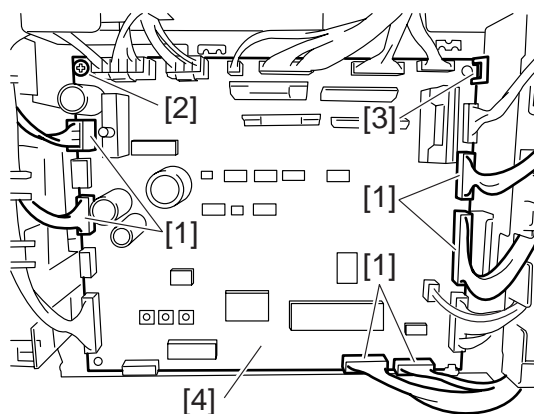

F03-103-01


1.3.2 Removing the Slide Home Position PCB

- 1) Open the front door [1], and turn the tab [2] on the stapler slide in the direction of the arrow to slide the stapler to the frontmost point.
- 2) Remove the stapler unit. (See 1.2.1.)

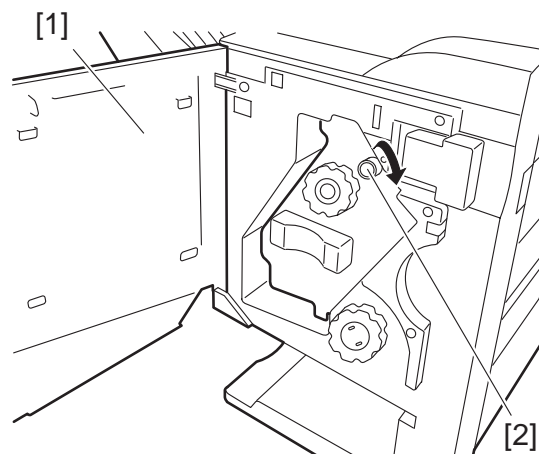


F03-103-02

- 3) Place the stapler unit [3] as shown.
- 4) Remove the two screws [4], and detach the guide [5].

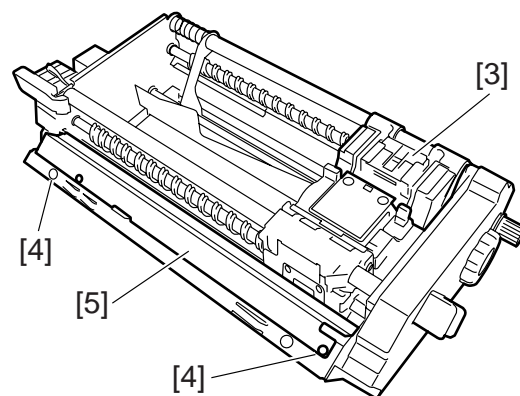


F03-103-03

- 5) Turn the tab [2] on the stapler side in the direction of the arrow so that the fixing screw [7] of the slide home position PCB [6] is in view through the round hole.
- 6) Remove the fixing screw [7].

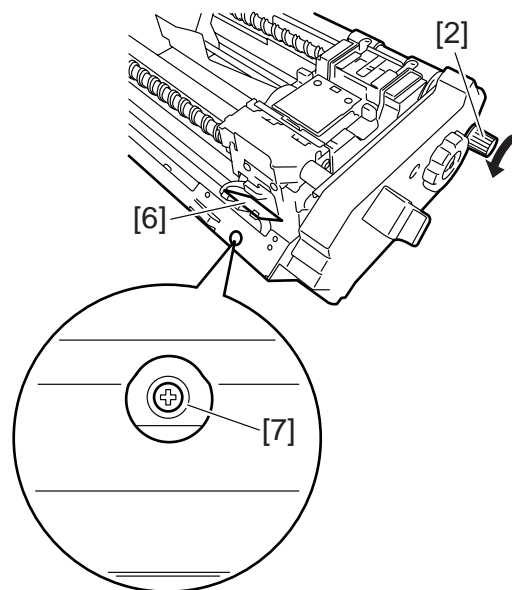

F03-103-04

- 7) Disconnect the connector [8].
- 8) Remove the flexible cable retainer [9].
- 9) Free the lock [10] of the connector in the direction of the arrow; then, detach the flexible cable [11], and then detach the side home position PCB [12].

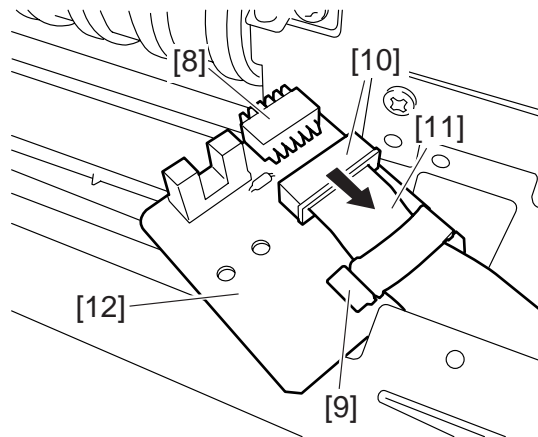


F03-103-05

2. Puncher Unit (option)

2.1 Puncher Driving System

2.1.1 Removing the Punch Motor


- 1) Remove the two screws [1].
- 2) Disconnect the connector [2] to remove the punch motor [3].

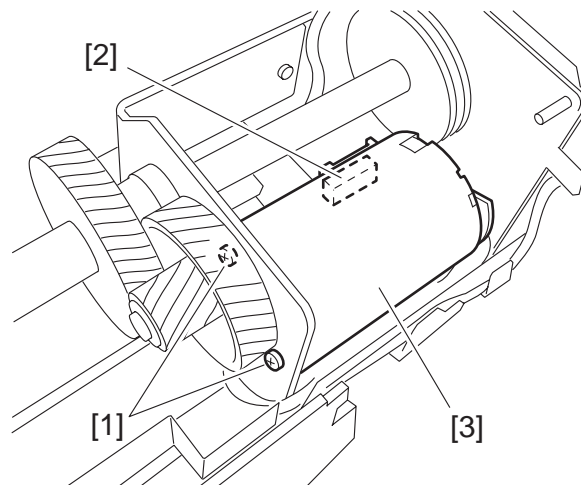

F03-201-01

2.1.2 Removing the Horizontal Registration Motor


- 1) Disconnect connector J1001 [1].
- 2) Remove the harness [3] from the harness guide [2].
- 3) Remove the two screws [4] to remove the horizontal registration motor [5].

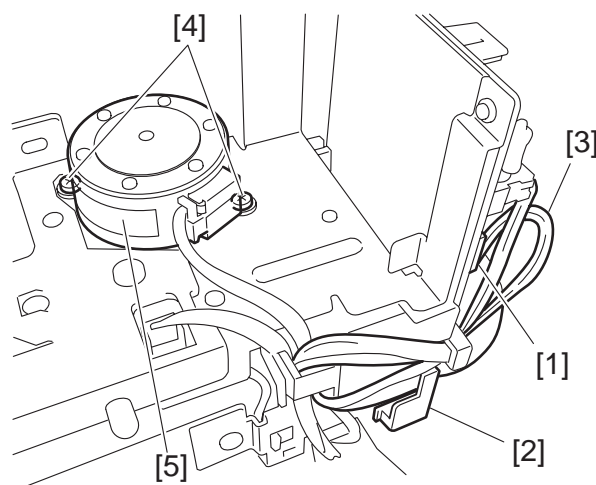

F03-201-02


2.1.3 Removing the Punch Unit

- 1) Remove the waste case.
- 2) Remove the screw [1] to detach the jam processing cover [2].

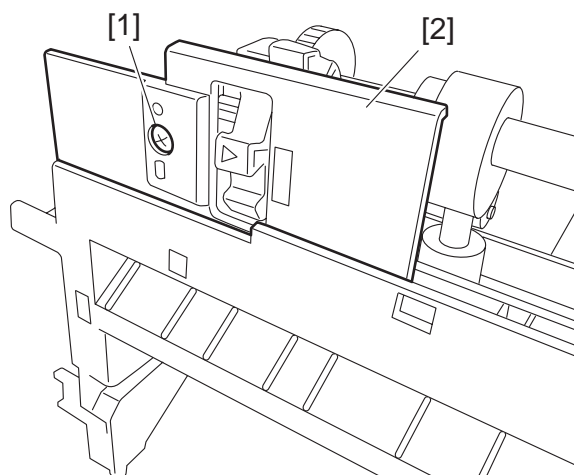


F03-201-03

- 3) Disconnect the connector J1005 [3]
- 4) Remove the harness [5] from the harness guide [4].

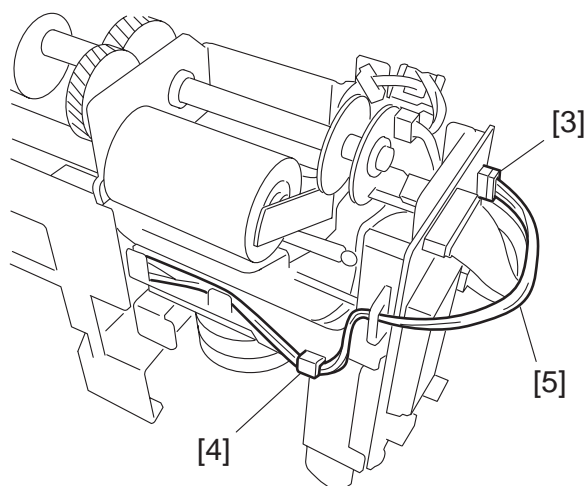


F03-201-04

- 5) Disconnect the connector [6].
- 6) Remove the screw [7] and sensor support plate [8].

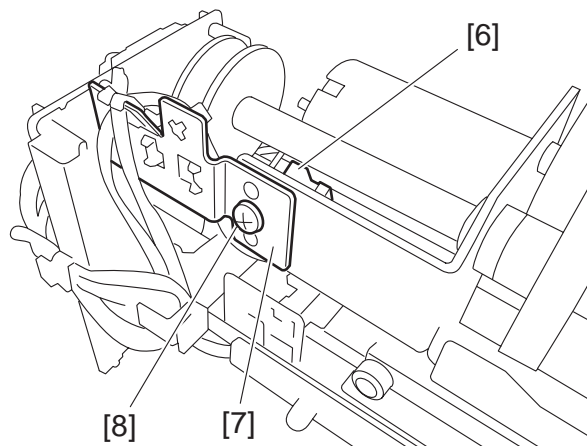


F03-201-05

- 7) Remove the screw [9] and washer [10].
- 8) Disconnect the connector [11].
- 9) Remove the two screws [12] to detach the base cover [13].

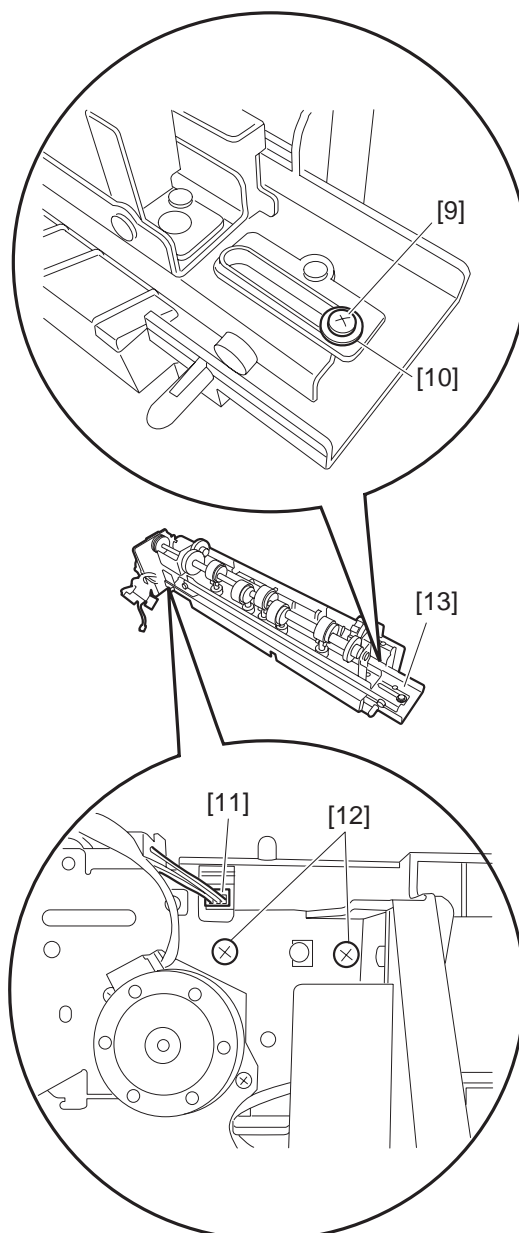


F03-201-06

- 10) Remove the four screws [14] to remove the upper transmission sensor unit [15] and lower transmission sensor [16].

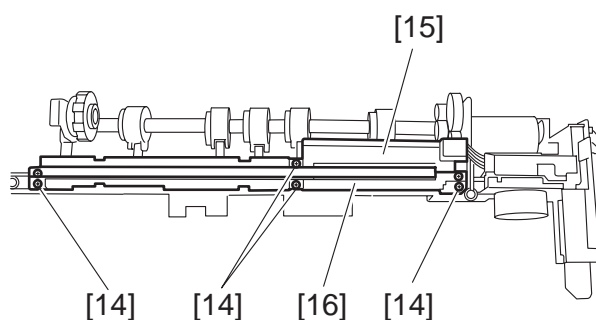

F03-201-07

- 11) Remove the punch unit [18] from the horizontal registration motor assembly [17].

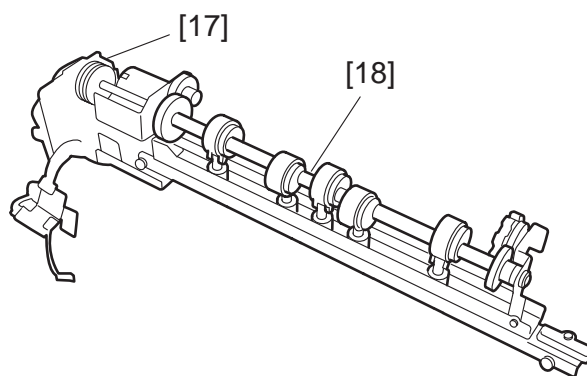


Ff03-201-08

2.2 PCBs

2.2.1 Removing the Punch Controller PCB


- 1) Remove the two screws [1].
- 2) Disconnect the five connectors [2] to remove the punch controller PCB [3].

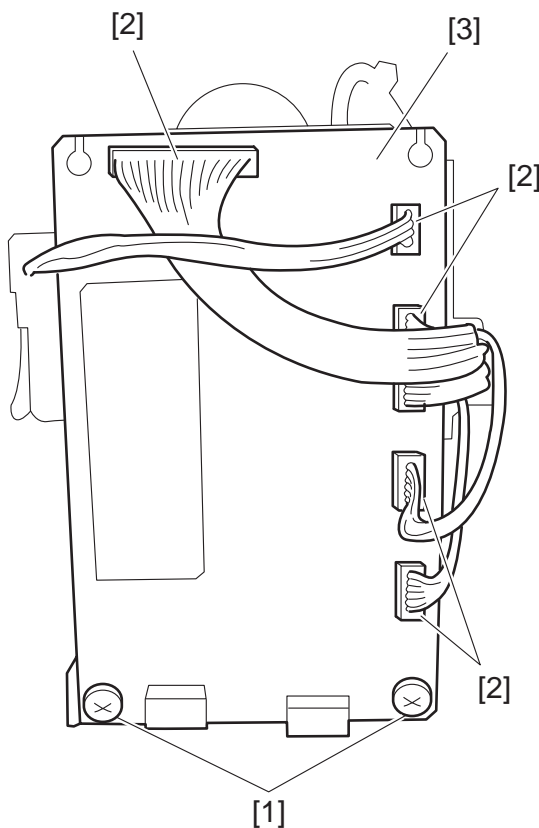

F03-202-01


2.2.2 Removing the Photosensor PCB

- 1) Remove the punch motor. (See 2.1.1.)
- 2) Remove the screw [1].
- 3) Remove the harness [3] from the harness guide [2] on the PCB, then detach the PCB cover [4].

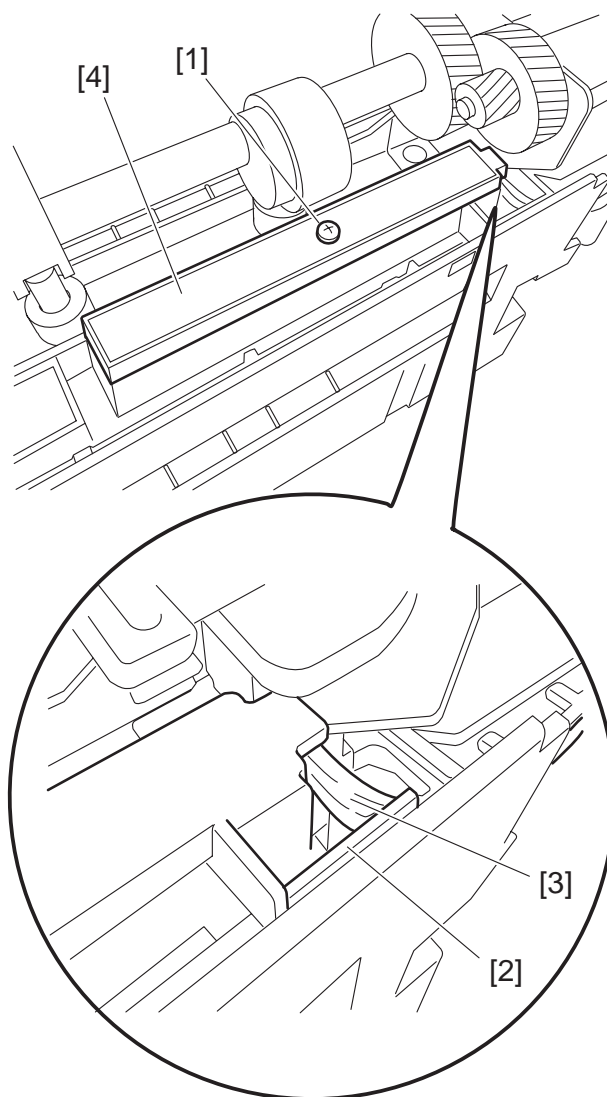

F03-202-02


- 4) Disconnect the connector [5] to remove the photosensor PCB [6].

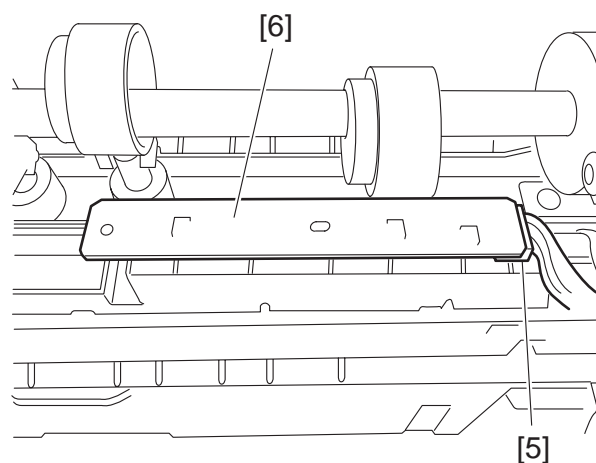

F03-202-03


2.2.3 Removing the LED PCB

- 1) Remove the waste case.
- 2) Disconnect connector J1005 [1].
- 3) Remove the harness [3] from the harness guide [2].

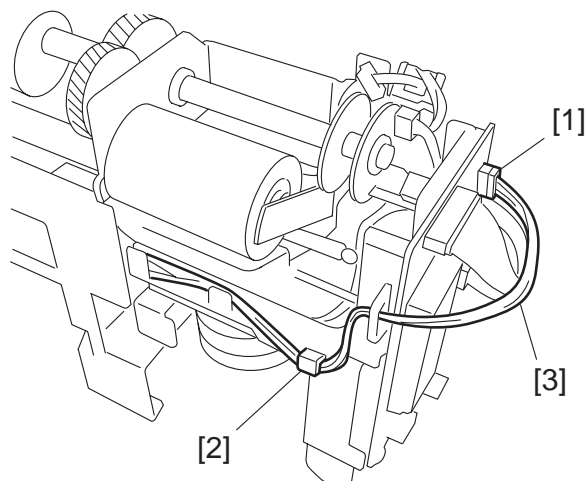


F03-202-04

- 4) Remove the screw [4] and washer [5].
- 5) Disconnect the connector [6].
- 6) Remove the screw [7] to detach the base cover [8].

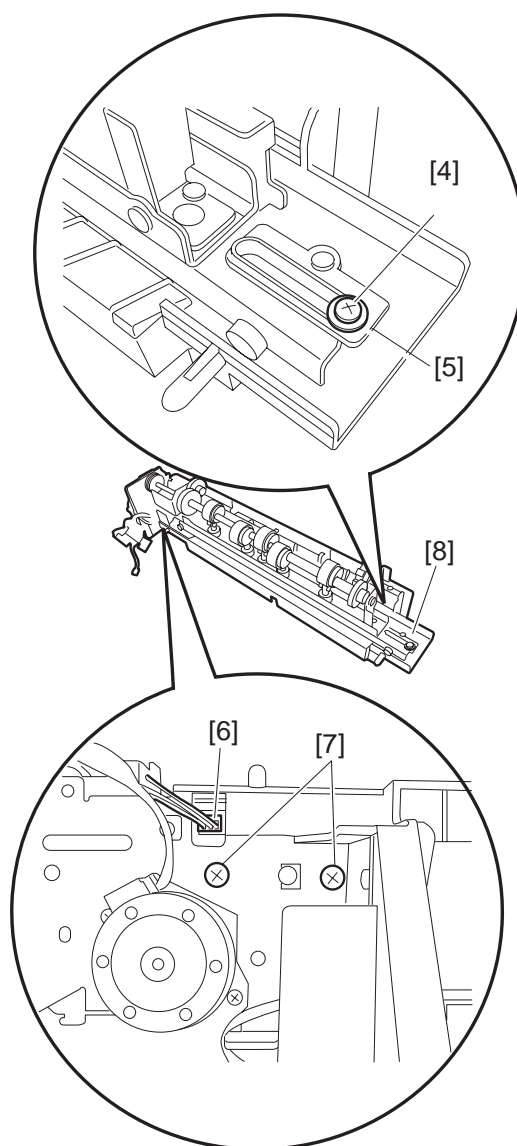

F03-202-05


- 7) Remove the screw [9].
- 8) Disconnect the connector [10] to remove the LED PCB [11].

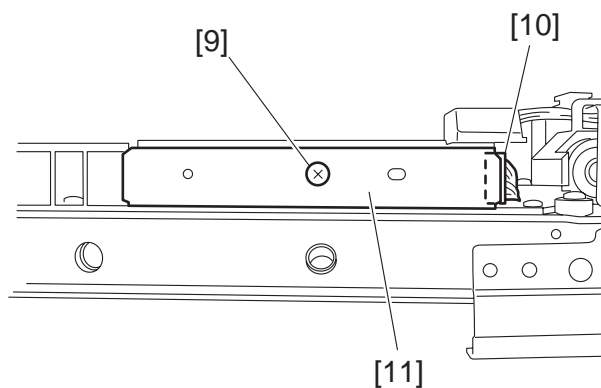

F03-202-06


2.2.4 Removing the Waste-Full Photosensor PCB

- 1) Remove the punch controller PCB. (See 2.2.1.)
- 2) Remove the two screws [1] to remove the PCB film [2].

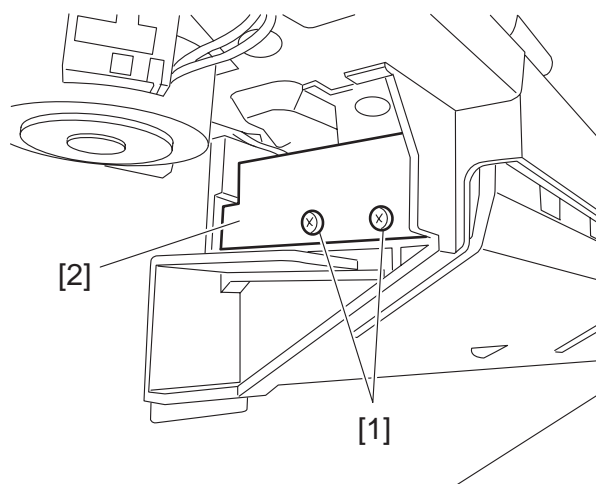

F03-202-07


- 3) Disconnect the connector [3] to remove the waste-full photosensor PCB [4].

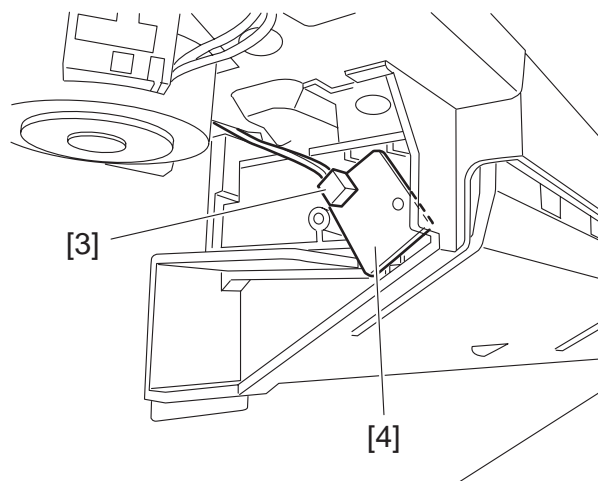

F03-202-08

2.2.5 Removing the Waste Full LED PCB

- 1) Remove the screw [1].
2) Disconnect the connector [2] to remove the waste-full LED PCB [3].

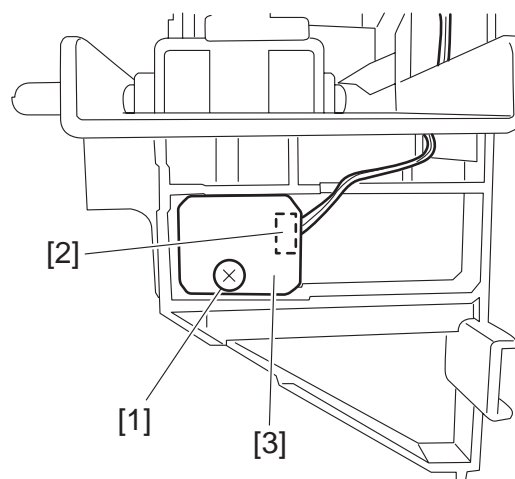

F03-202-09

CHAPTER 4

MAINTENANCE AND INSPECTION

1 Periodically Replaced Parts

1.1 Finisher/Saddle Unit

The unit does not have components that require periodical replacement.

1.2 Puncher Unit (option)

The unit does not have components that require periodical replacement.

2 Consumables and Durables

Some components of the machine may require replacement once or more over the period of machine warranty because of deterioration or damage. Replace them as needed.

2.1 Saddle/Finisher Unit

As of February, 2001

| No. | Part name | Part No. | Qty | Expected life | Remarks |
|-----|-----------|--------------|-----|--------------------|---|
| 1 | Stapler | 4G1-4268-000 | 1 | 300,000 operations | A single cartridge is good for about 5000 operations. |

T04-201-01

3 Scheduled Maintenance

As of February, 2001

| Item | Interval | Description | Remarks |
|--|---|-------------|--------------------|
| Feeding assembly roller | Minimum maintenance intervals of host machine | Cleaning | Wiping with water. |
| Feeding assembly member | | | |
| Paper path guide | | | |
| Transmission type sensor (optional puncher unit) | | | Dry wiping. |

T04-300-01

CHAPTER 5

TROUBLESHOOTING

1 Standards and Adjustments

1.1 Electrical System (finisher/saddle unit)

1.1.1 Adjusting the Folding Position


The folding position is adjusted by matching it with the stapling position.

If you have replaced the finisher controller PCB, you must transfer the existing settings to the new PCB. Perform the following if the folding position must be adjusted for some reason.




Both the folding and stapling positions may deviate for some type of paper. In such a case, change the “middle stapling position” in the user mode of the host machine.

- 1) Set SW1 on the finisher controller PCB as follows:

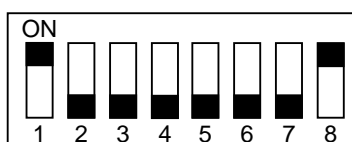

F05-101-02

- 2) Adjust the folding position by pressing the PSW1 or PSW2 on the finisher controller PCB a required number of times. Pressing the switch once moves the folding position about 0.16 mm.
- To move the folding position in the “-” direction, press the PSW1.
 - To move the folding position in the “+” direction, press the PSW2.
 - Pressing the PSW1 and PSW2 at the same time clears the adjustment value.

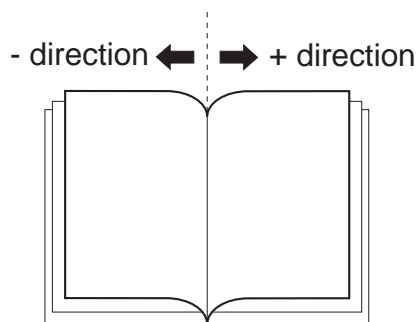

F05-101-03

- 3) When adjustment of the folding position is complete, set all bits of the SW1 on the finisher controller PCB to OFF.
- 4) Enter the bind mode of the host machine and check whether the folding position is adjusted properly. If adjusted improperly, adjust the folding position again.

1.1.2 Adjusting the Middle 2-Point Stapling Position


The stapling position is adjusted by matching it with the folding position.

If you have replaced the finisher controller PCB, you must transfer the existing settings to the new PCB. Perform the following if the stapling position must be adjusted for some reason.




Both the folding and stapling positions may deviate for some type of paper. In such a case, change the “middle stapling position” in the user mode of the host machine.

- 1) Set SW1 on the finisher controller PCB as follows:

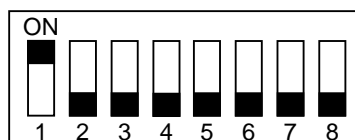

F05-101-04

- 2) Adjust the stapling position by pressing the PSW1 or PSW2 on the finisher controller PCB a required number of times. Pressing the switch once moves the stapling position about 0.14 mm.
 - To move the stapling position in the “-” direction, press the PSW1.
 - To move the stapling position in the “+” direction, press the PSW2.
 - Pressing the PSW1 and PSW2 at the same time clears the adjustment value.

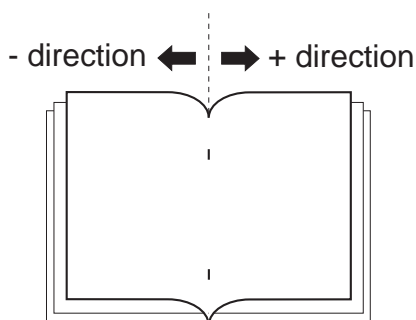

F05-101-05

- 3) When adjustment of the stapling position is complete, set all bits of the SW1 on the finisher controller PCB to OFF.
- 4) Enter the bind mode of the host machine and check whether the stapling position is adjusted properly. If adjusted improperly, adjust the stapling position again.

1.2 Electrical System (puncher unit; option)


1.2.1 Adjusting the Punch Hole Position

This mode requires operation in service mode. The range of hole displacement is between 3 and -3 in 1-mm increments. A higher setting will move the hole toward the leading edge of sheet. (See the Service Manual of the host machine.)

1.2.2 Adjusting the Sensor Output

Perform the following when the punch controller PCB, horizontal registration sensor (photosensor PCB/LED PCB), or waste full sensor (waste full photosensor PCB/waste full LED PCB) has been replaced.

- 1) Shift bits 1 through 4 on the punch controller PCB as follows:

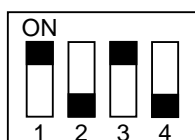


F05-102-01

- 2) Press SW1002 or SW1003 on the punch controller PCB. A press will automatically adjust the sensor output.
 - The adjustment is over when all LEDs on the punch controller PCB are ON: LED1001, LED1002, LED1003.
- 3) Shift all bits of DIPSW1001 to OFF.

1.2.3 Registering the Number of Punch Hole

Perform the following to register the type of puncher unit (number of holes) used to the IC on the punch controller PCB for identification by the finisher. Be sure to register the type whenever you have replaced the punch controller PCB.

- 1) Set bits 1 through 4 on the DIPSW1001 on the punch controller PCB as follows:

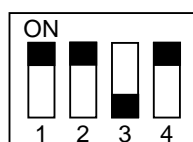

F05-102-02

- 2) Press SW1002 on the punch controller PCB to select the appropriate number of punch holes.
 - Each press on SW1002 moves the selection through the following (repeatedly from top to bottom).


| Number of punch holes | LED1001 | LED1002 | LED1003 |
|-----------------------------|---------|---------|---------|
| 2 holes (Puncher Unit-J1) | ON | OFF | OFF |
| 2/3 holes (Puncher Unit-K1) | ON | ON | OFF |
| 4 holes (Puncher Unit-G1) | OFF | OFF | OFF |
| 4 holes (Puncher Unit-H1) | OFF | OFF | ON |

T05-102-01

- 3) Press SW1003 on the punch controller PCB twice. The presses will store the selected number of punch holes on the punch controller PCB.
 - A single press on SW1003 will cause the LED indication to flash; another press on SW1003 will cause the indication to remain ON to indicate the end of registration.
- 4) Shift all bits of DIPSW1001 to OFF.

1.2.4 After Replacing the EEP-ROM (IC1002)

- 1) Turn off the host machine.
- 2) Set bits 1 through 4 on the punch controller PCB as follows:

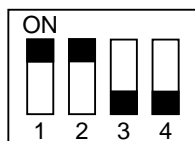


F05-102-03

- 3) Press SW1002 and SW1003 on the punch controller PCB at the same time.
 - The presses will initialize the EEP-ROM. At the end, all LEDs (LED1001, LED1002, LED1003) will go ON.
- 4) Adjust the sensor output, and store the number of punch holes.

2 Arrangement of Electric Components

2.1 Finisher/Saddle Unit

2.1.1 Sensors, Microswitches, and Clutch

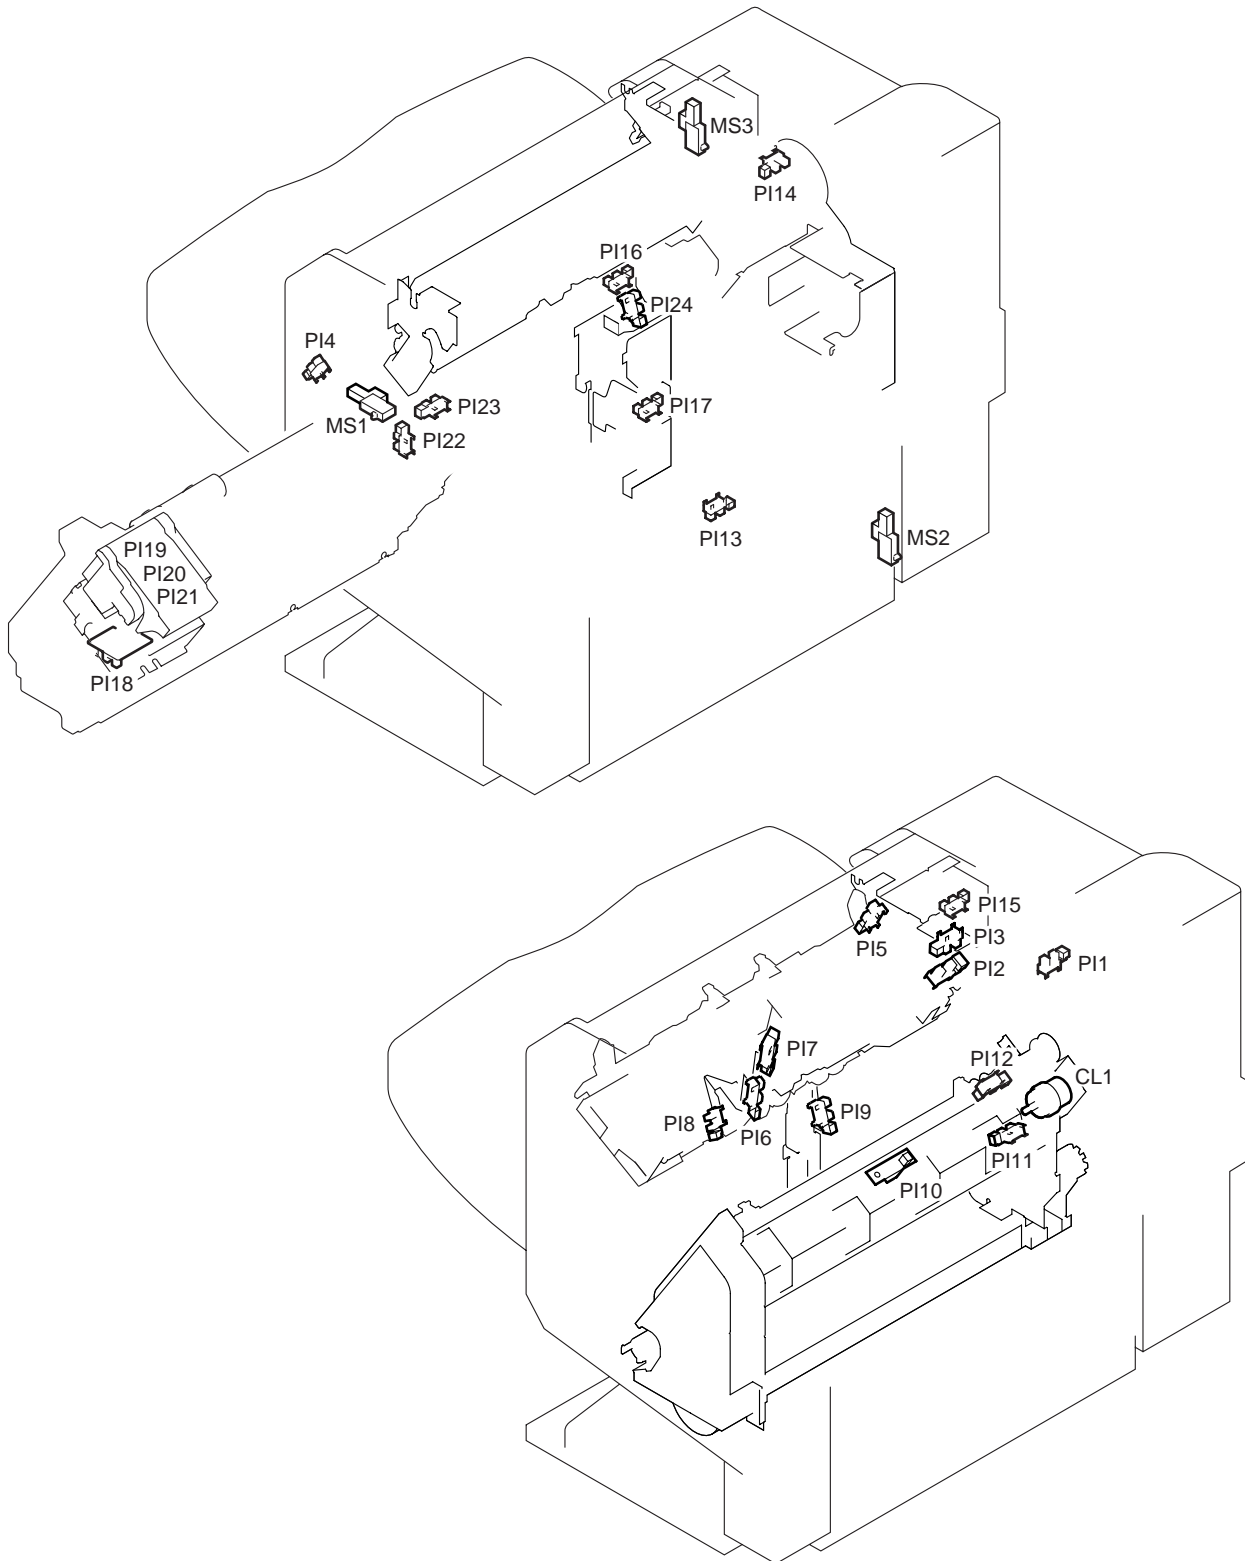


F05-201-01

| Name | Notation | Description |
|-------------------|----------|--|
| Photointerrupters | PI1 | Inlet paper detention |
| | PI2 | Paddle home position detection |
| | PI3 | Stack roller home position detection |
| | PI4 | Aligning plate home position (front) detection |
| | PI5 | Aligning plate home position (rear) detection |
| | PI6 | Processing tray paper detection |
| | PI7 | Delivery belt home position detection |
| | PI8 | Tray paper detection |
| | PI9 | Paper surface detection |
| | PI10 | Folding position detection |
| | PI11 | Folding home position detection |
| | PI12 | Folding roller home position detection |
| | PI13 | Bind tray paper detection |
| | PI14 | Stapler/fold motor clock detection |
| | PI15 | Shift upper limit detention |
| | PI16 | Shift lower limit detection |
| | PI17 | Shift motor clock detection |
| | PI18 | Slide home position detection (inside stapler) |
| | PI19 | Stapler drive home position detection (inside stapler) |
| | PI20 | Staple detection (inside stapler) |
| | PI21 | Staple top position detection (in stapler) |
| | PI22 | Front door open detection |
| | PI23 | Upper cover open detection |
| | PI24 | Paper full detection |
| Micro switch | MS1 | Front door open detection |
| | MS2 | Joint open detection |
| | MS3 | Staple safety detection |
| Clutch | CL1 | Bind clutch |

T05-201-01

2.1.2 Motor PCBs

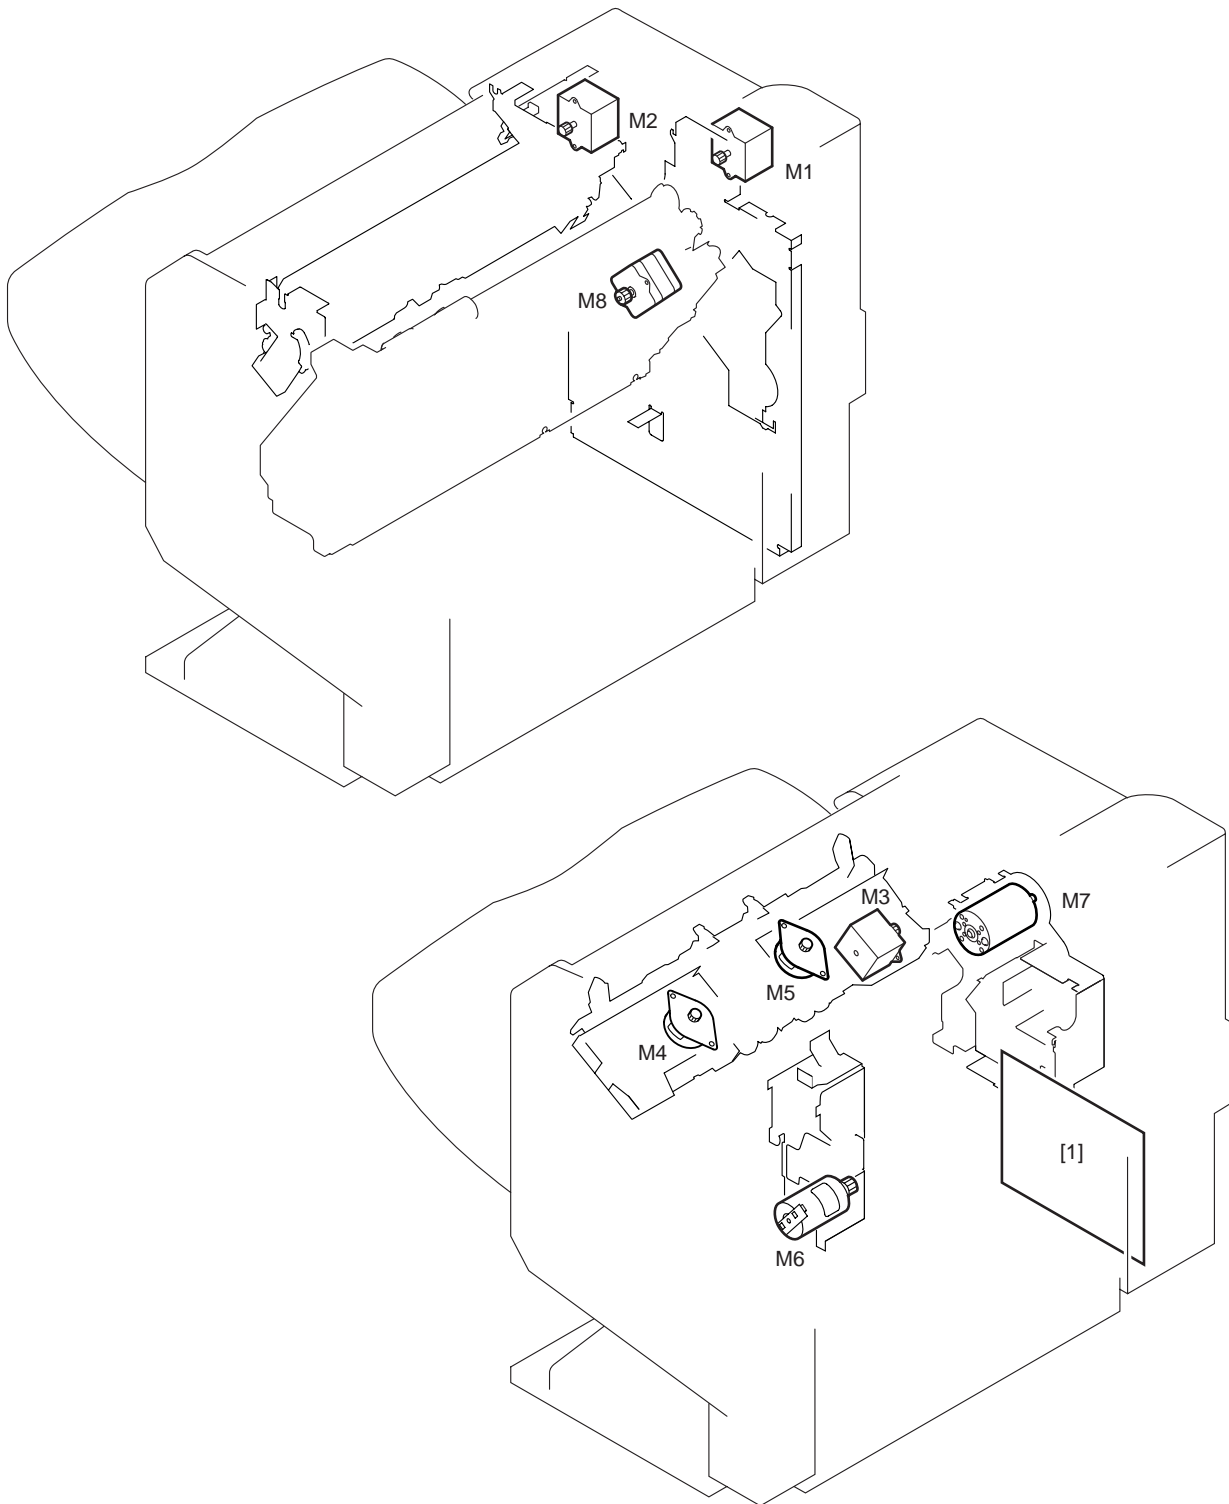


F05-201-02

| Name | Notation | Description |
|-------------------------|----------|-------------------------|
| Motor | M1 | Feed motor |
| | M2 | Paddle motor |
| | M3 | Delivery motor |
| | M4 | Alignment motor (front) |
| | M5 | Alignment motor (rear) |
| | M6 | Shift motor |
| | M7 | Staple/fold motor |
| | M8 | Slide motor |
| Finisher controller PCB | [1] | Finisher control |

T05-201-02

2.2 Puncher Unit (option)
2.2.1 Sensors

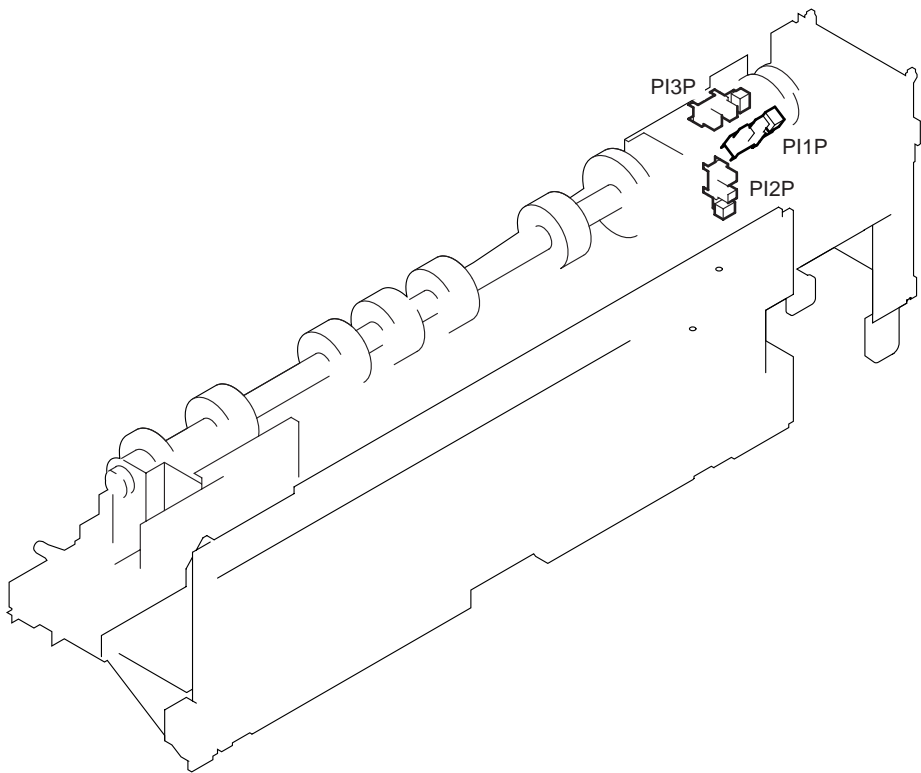


F05-202-01

| Name | Notation | Description |
|-------------------|----------|---|
| Photointerrupters | PI1P | Puncher home position detection |
| | PI2P | Horizontal registration home position detection |
| | PI3P | Punch motor clock detection |

T05-202-01

2.2.2 Motors

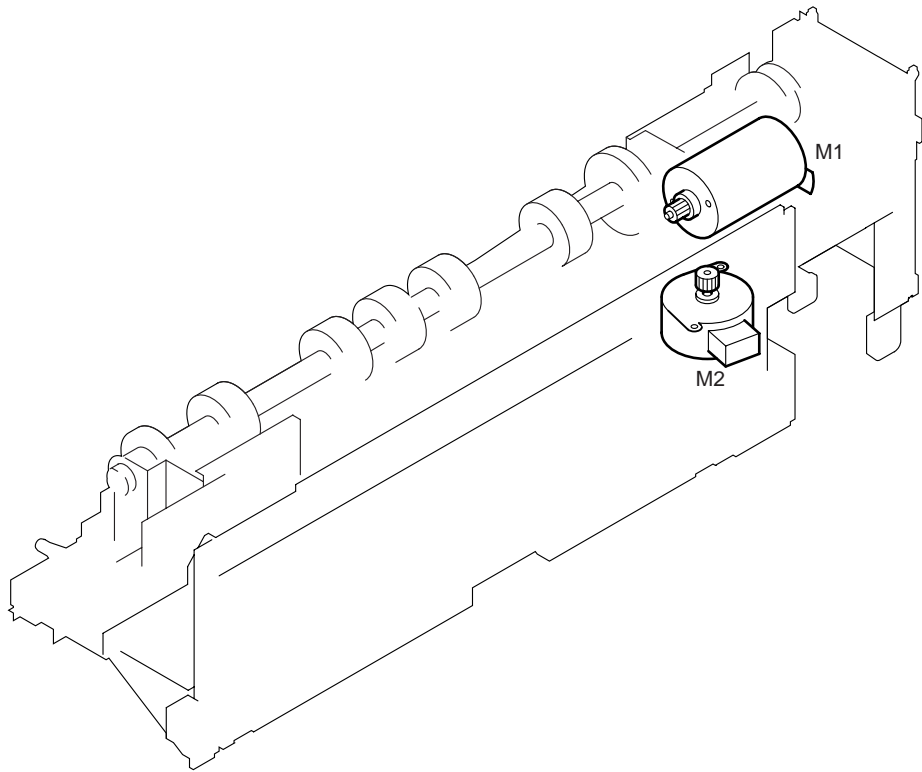


F05-202-02

| Name | Notation | Description |
|-------|----------|-------------------------------|
| Motor | M1P | Punch motor |
| | M2P | Horizontal registration motor |

T05-202-02

2.2.3 PCBs

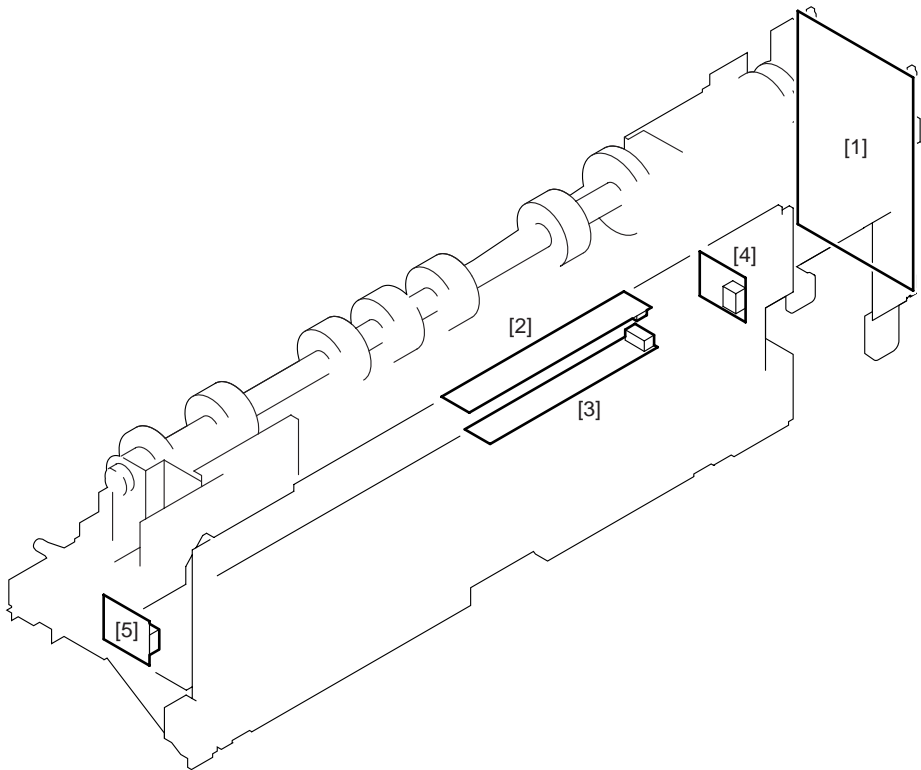

F05-202-03

| Ref. | Name |
|------|----------------------------|
| [1] | Punch controller PCB |
| [2] | Photosensor PCB |
| [3] | LED PCB |
| [4] | Waste full photosensor PCB |
| [5] | Waste full LED PCB |

T05-202-03


3 LEDs and Check Pins by PCB

Of the LEDs and check pins used in the machine, those needed during servicing in the field are discussed.



Do not touch the check pins not found in the list herein. They are exclusively for factory use, and require special tools and a high degree of accuracy.

3.1 Finisher Controller PCB

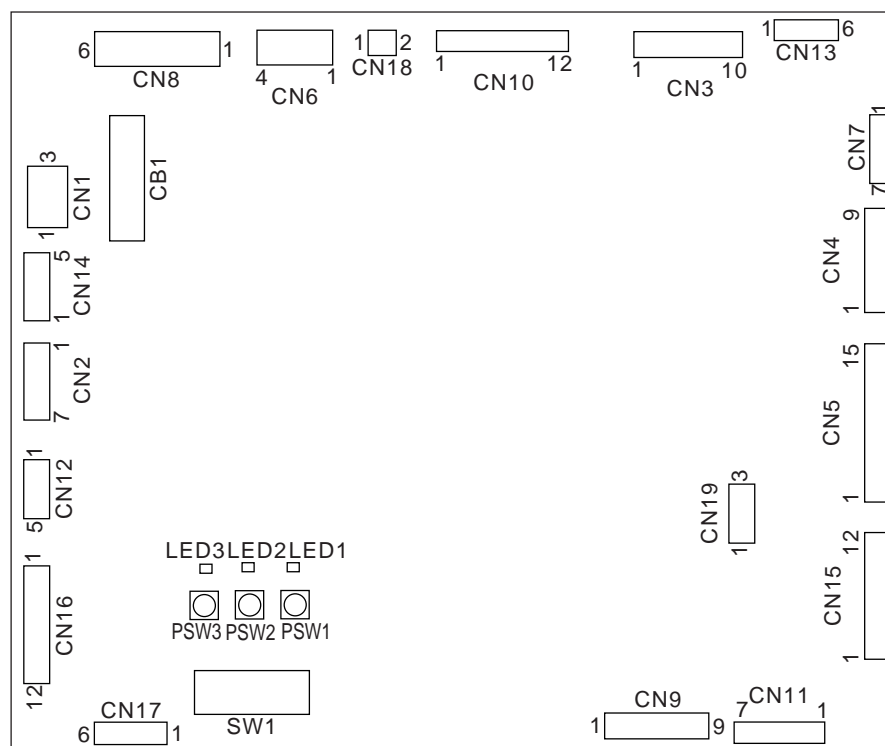


F05-301-01

| Switch | Description |
|--------|--|
| SW1 | Folding position adjustment, middle 2-point stapling adjustment etc. |
| PSW1 | folding position adjustment, middle 2-point stapling adjustment etc. |
| PSW2 | folding position adjustment, middle 2-point stapling adjustment etc. |
| PSW3 | factory mode |

T05-301-01

3.2 Punch Controller PCB

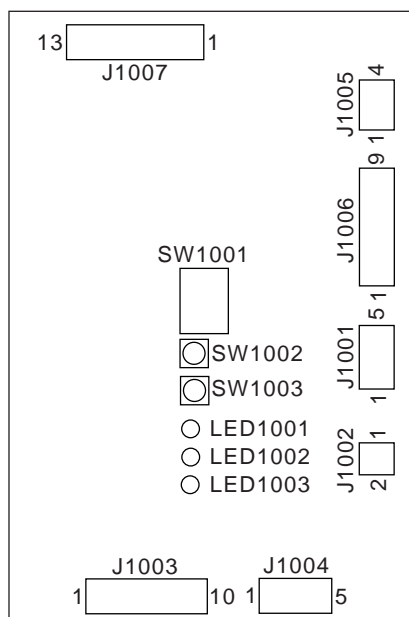

F05-302-01

| Switch | Description |
|--------|---|
| SW1001 | Punch hole count registration/sensor output adjustment etc. |
| SW1002 | Punch hole count registration/sensor output adjustment etc. |
| SW1003 | Punch hole count registration/sensor output adjustment etc. |

T05-302-01

4 Troubleshooting

4.1 Troubleshooting (finisher/saddle unit)

4.1.1 E713, communication error

Finisher controller PCB, Host machine DC controller PCB

- 1) **Turn off and then on the host machine. Is the problem corrected?**

YES: End.

Wiring

- 2) **Is the wiring between the finisher controller PCB and the DC controller PCB of the host machine normal?**

NO: Correct the wiring.

Finisher controller PCB, Host machine DC controller PCB

- 3) **Try replacing the finisher controller PCB and the host machine DC controller PCB. Is the problem corrected?**

YES: End.

T05-401-01

4.1.2 E505, Finisher Unit Back-Up Memory Fault (detail code: 10)

Finisher controller PCB

- 1) **Turn off and then on the host machine. Is the problem corrected?**

YES: End.

NO: Replace the finisher controller PCB.

T05-401-02

4.1.3 E510, Feed Motor Fault (detail code: 01/02)

Stack feed roller (upper) home position sensor (PI12)

- 1) **Check the stack feed roller (upper) home position sensor. Is it normal?**

NO: Replace the sensor.

Wiring

- 2) **Is the wiring between the finisher controller PCB and the feed motor normal?**

NO: Correct the wiring.

Feed roller

- 3) **Try turning the stack feed roller (upper) shaft by hand. Does the stack feed roller (upper) move up/down normally?**

NO: Correct the mechanical system.

Feed motor (M1), Finisher controller PCB

- 4) **Try replacing the feed motor. Is the problem corrected?**

YES: End.

NO: Replace the finisher controller PCB.

T05-401-03

4.1.4 E514, Delivery Motor Fault (detail code: 01/02)

Delivery belt home position sensor (PI7)

- 1) **Check the delivery belt home position sensor. Is the sensor normal?**

NO: Replace the sensor.

Wiring

- 2) **Is the wiring between the finisher controller PCB and the delivery motor normal?**

NO: Correct the wiring.

Stack delivery roller

- 3) **Try turning the stack delivery roller by hand. Is the rotation smooth?**

NO: Correct the mechanical system.

Delivery motor (M3), Finisher controller PCB

- 4) **Try replacing the delivery motor. Is the problem corrected?**

YES: End.

NO: Replace the finisher controller PCB.

T05-401-04

4.1.5 E530, Alignment Motor (Rear) Fault (detail code: 01/02)

Aligning plate home position sensor (rear; PI5)

- 1) **Check the aligning plate home position sensor (rear). Is the sensor normal?**

NO: Replace the sensor.

Wiring

- 2) **Is the wiring between the finisher controller PCB and the rear alignment motor (rear) normal?**

NO: Correct the wiring.

Aligning plate (rear)

- 3) **Is there mechanical trapping in the path of the aligning plate?**

YES: Correct the mechanical mechanism.

Alignment motor (rear; M5), Finisher controller PCB

- 4) **Try replacing the alignment motor (rear). Is the problem corrected?**

YES: End.

NO: Replace the finisher controller PCB.

T05-401-05

4.1.6 E531, Staple/fold Motor Fault (detail code: 01/02)

Wiring

- 1) **Is the wiring between the finisher controller PCB and the staple/fold motor normal?**

NO: Correct the wiring.

Stapler unit

- 2) **Try turning the staple jam releasing dial. Is there mechanical trapping?**

YES: Correct the mechanical system.

Staple/fold motor (M7), Finisher controller PCB

- 3) **Try replacing the staple/fold motor. Is the problem corrected?**

YES: End.

NO: Replace the finisher controller PCB.

T05-401-06

4.1.7 E531, Staple/Fold Motor Fault (detail code: 03)

Staple/fold clock sensor (PI14)

- 1) **Check the staple/fold clock sensor. Is the sensor normal?**

NO: Replace the sensor.

Finisher controller PCB, Stapler unit

- 2) **Does the staple/fold motor operate at the appropriate timing?**

YES: Replace the finisher controller PCB.

NO: Check the stapler unit drive mechanism: if faulty, correct it; if normal, go to step 3.

Staple/fold motor (M7), Finisher controller PCB

- 3) **Try replacing the staple/fold motor. Is the problem corrected?**

YES: End.

NO: Try replacing the finisher controller PCB.

T05-401-07

4.1.8 E5F1, Staple/Fold Motor Fault (detail code: 01/02)

Folding home position sensor (PI11)

- 1) **Check the folding home position sensor. Is the sensor normal?**

NO: Replace the sensor.

Wiring

- 2) **Is the wiring between the finisher controller PCB and the staple/fold motor normal?**

NO: Correct the wiring.

Saddle unit

- 3) **Try turning the fold jam releasing dial. Is there mechanical trapping?**

YES: Correct the mechanical mechanism.

Staple/fold motor (M7), Finisher controller PCB

- 4) **Try replacing the staple/fold motor. Is the problem corrected?**

YES: End.

NO: Replace the finisher controller PCB.

T05-401-08

4.1.9 E5F1, Staple/Fold Motor Fault (detail code: 03)

Staple/fold clock sensor (PI4)

- 1) Check the staple/fold clock sensor. Is the sensor normal?**

NO: Replace the sensor.

Finisher controller PCB, Saddle unit

- 2) Does the staple/fold motor operate at the appropriate timing?**

YES: Replace the finisher controller PCB.

NO: Check the saddle unit drive mechanism: if faulty, correct it; otherwise, go to step 3.

Staple/fold motor (M7), Finisher controller PCB

- 3) Try replacing the staple/fold motor. Is the problem corrected?**

YES: End.

NO: Replace the finisher controller PCB.

T05-401-09

4.1.10 E532, Slide Motor Fault (detail code: 01/02)

Slide home position sensor (PI18)

- 1) Check the slide home position sensor. Is the sensor normal?**

NO: Replace the sensor PCB.

Wiring

- 2) Is the wiring between the finisher controller PCB and the slide motor normal?**

NO: Correct the wiring.

Stapler unit

- 3) Is there mechanical trapping in the stapler path?**

YES: Correct the mechanical system.

Slide motor (M8), Finisher controller PCB

- 4) Try replacing the slide motor. Is the problem corrected?**

YES: End.

NO: Replace the finisher controller PCB.

T05-401-10

4.1.11 E537, Alignment Motor (front) Fault (detail code: 01/02)

Aligning plate home position sensor (front; PI4)

- 1) **Check the aligning plate home position sensor (front). Is the sensor normal?**

NO: Replace the sensor.

Wiring

- 2) **Is the wiring between the finisher controller PCB and the front alignment plate motor (front) normal?**

NO: Correct the wiring.

Aligning plate (front)

- 3) **Is there mechanical trapping in the aligning plate path?**

YES: Correct the mechanical system.

Alignment motor (front; M4), Finisher controller PCB

- 4) **Try replacing the Alignment motor (front). Is the problem corrected?**

YES: End.

NO: Replace the finisher controller PCB.

T05-401-11

4.1.12 E540, Shift Motor Fault (detail code: 01)

Paper surface sensor (PI9)

- 1) **Check the paper surface sensor. Is the sensor normal?**

NO: Replace the sensor.

Tray up/down mechanism

- 2) **Check the tray up/down mechanism. Is the mechanism normal?**

NO: Correct the mechanism.

Finisher controller PCB

- 3) **Is 24 VDC supplied from the finisher controller PCB to the shift motor as soon as the tray is driven?**

NO: Replace the finisher controller PCB.

Shift motor (M6), Wiring

- 4) **Is the wiring between the finisher controller PCB and the shift motor normal?**

YES: Replace the shift motor.

NO: Correct the wiring.

T05-401-12

4.1.13 E540, Shift Motor Fault (detail code: 02)

Tray position

- 1) Is the tray as far as the shift upper limit sensor?**

YES: Lower the position of the tray.

Shift upper limit sensor (PI15)

- 2) Check the shift upper limit sensor. Is the sensor normal?**

NO: Replace the sensor.

Finisher controller PCB, Wiring

- 3) Check the wiring from the finisher controller PCB to the shift upper limit sensor; is it normal?**

YES: Replace the finisher controller PCB.

NO: Correct the wiring.

T05-401-13

4.1.14 E540, Shift Motor Fault (detail code: 03)

- 1) Is the tray in UP position?**

YES: Go to step 4.

NO: Go to step 2.

Finisher controller PCB

- 2) Is power supplied to the finisher controller PCB as soon as the tray is driven?**

YES: Go to step 3.

NO: Replace the finisher controller PCB.

Tray up/down mechanism, Shift motor (M6)

- 3) Is there a fault in the tray up/down mechanism?**

YES: Correct the tray up/down mechanism.

NO: Replace the shift motor.

Shift motor clock (PI17), Finisher controller PCB

- 4) Check the shift motor clock sensor.**

YES: Replace the finisher controller PCB.

NO: Replace the sensor.

T05-401-14

4.1.15 E550, Finisher Unit Power Supply Fault (detail code: 10)

Finisher controller PCB, Host machine DC controller PCB

- 1) **Turn off and then on the host machine. Is the problem corrected?**

YES: End.

Wiring

- 2) **Is the wiring between the finisher controller PCB and the host machine DC controller PCB normal?**

NO: Correct the wiring.

Power supply

- 3) **Measure the voltage between CN1-1 (+) and CN1-3 (-)/CN2-1 (+) and CN2-3 (-) on the finisher controller PCB. Is it 24 VDC?**

YES: Replace the finisher controller PCB.

NO: Replace the host machine DC controller PCB.

T05-401-15

4.1.16 E577, Paddle Motor Fault (detail code: 01/02/03/04)

Paddle home position sensor (PI2)

- 1) **Check the paddle home position sensor. Is the sensor normal?**

NO: Replace the sensor

Swing guide home position sensor (PI3)

- 2) **Check the swing guide home position sensor. Is the sensor normal?**

NO: Replace the sensor.

Wiring

- 3) **Is the wiring between the finisher controller PCB and the paddle motor normal?**

NO: Correct the wiring.

Paddle, Swing guide assembly

- 4) **Try turning the paddle motor clockwise and counterclockwise by hands. Is there mechanical tapping in the rotation of the paddle or the up/down movement of the swing guide?**

YES: Correct the mechanical mechanism.

Paddle motor (M2), finisher controller PCB

- 5) **Try replacing the paddle motor. Is the problem corrected?**

YES: End.

NO: Replace the finisher controller PCB.

T05-401-16

4.2 Troubleshooting (puncher unit, option)

4.2.1 E501, Communication Faulty

Finisher controller PCB, Punch controller PCB

- 1) Turn off and the on the host machine. Is the problem corrected?**

YES: End.

Wiring

- 2) Is the wiring between the finisher controller PCB and the punch controller PCB normal?**

NO: Correct the wiring.

Power supply

- 3) Measure the voltage between CN14-5 (+) and CN14-3 (-) on the finisher controller PCB. Is it 24 VDC?**

NO: Replace the finisher controller PCB.

YES: Replace the punch controller PCB.

T05-402-01

4.2.2 E505, Puncher Back-UP Memory Fault (detail code: 20)

EEP-ROM (IC1002)

- 1) Is the problem corrected by initializing the EEP-ROM on the punch controller PCB?**

YES: End.

Punch controller PCB

- 2) Turn off and the on the host machine. Is the problem corrected?**

YES: End.

NO: Replace the punch controller PCB.

T05-402-02

4.2.3 E550, Puncher Unit Power Supply Fault (detail code:20)

Finisher controller PCB, Host machine DC controller PCB

- 1) Turn off and then off the host machine. Is the problem corrected?**

YES: End.

Wiring

- 2) Is the wiring between the finisher controller PCB and the punch controller PCB normal?**

NO: Correct the wiring.

Power supply

- 3) Measure the voltage between CN14-5 (+) and CN4-3 (-) on the finisher controller PCB. Is it 24 VDC?**

YES: Replace the punch controller PCB.

NO: Replace the finisher controller PCB.

T05-402-03

4.2.4 E590, Punch Motor Fault (detail code: 01/02)

Punch motor home position sensor (PI1P)

- 1) **Check the punch home position sensor. Is the sensor normal?**

NO: Replace the sensor.

Punch motor clock sensor (PI3P)

- 2) **Check the punch motor clock sensor. Is the sensor normal?**

NO: Replace the sensor.

Wiring

- 3) **Is the wiring between the finisher controller PCB and the sensor normal?**

NO: Correct the wiring.

Punch mechanism, Punch motor (M1P)

- 4) **Is there a fault in the punch mechanism?**

YES: Correct the punch mechanism.

NO: Replace the punch motor.

Punch controller PCB, Finisher controller PCB

- 5) **Try replacing the punch controller PCB. Is the problem corrected?**

YES: End.

NO: Replace the fisher controller PCB.

T05-402-04

4.2.5 E592, Punch Sensor (horizontal registration) Fault (detail code: 01 through 05)

Horizontal registration sensor (photosensor PCB/LED PCB)

- 1) **Check the horizontal registration sensor. Is the sensor normal?**

NO: Replace the sensor.

Wiring

- 2) **Is the wiring between the punch controller PCB and the horizontal registration sensor normal?**

NO: Correct the wiring.

Punch controller PCB, Finisher controller PCB

- 3) **Try replacing the punch controller PCB. Is the problem correct?**

YES: End.

NO: Replace the finisher controller PCB.

T05-402-05

4.2.6 E592, Punch sensor (waste full) Fault (detail code: 06)

Waste full Sensor (waste full photosensor PCB/waste full LED PCB)

- 1) **Check the waste full sensor. Is the sensor normal?**

NO: Replace the sensor.

Wiring

- 2) **Is the wiring between the punch controller PCB and the waste full sensor normal?**

NO: Correct the wiring.

Punch controller PCB, Finisher controller PCB

- 3) **Try replacing the punch controller PCB. Is the problem corrected?**

YES: End.

NO: Replace the finisher controller PCB.

T05-402-06

4.2.7 E593, Horizontal Registration Motor Fault (detail code: 01/02)

Horizontal registration home position sensor (PI2P)

- 1) **Check the horizontal registration home position sensor. Is the sensor normal?**

NO: Replace the sensor.

Wiring

- 2) **Is the wiring between the finisher controller PCB and the horizontal registration home position sensor normal?**

NO: Correct the wiring.

Horizontal registration mechanism, horizontal registration motor (M2P)

- 3) **Is there a fault in the horizontal registration mechanism?**

YES: Correct the horizontal registration mechanism.

NO: Replace the horizontal registration motor.

Punch controller PCB, Finisher controller PCB

- 4) **Try replacing the punch controller PCB. Is the problem corrected?**

YES: End.

NO: Replace the finisher controller PCB.

T05-402-07

5 Self Diagnosis

5.1 Outline

The CPU on the machine's finisher controller PCB is equipped with a mechanism to check the machine condition as needed; when it detects a fault, the machine communicates the fact to the host machine in the form of a code and a detail code.

The host machine indicates the code on its control panel. (The detail code may be checked in the host machine's service mode.)

5.2 Errors

5.2.1 Finisher/Saddle Unit

| Code | Detail | Error | Timing of detection |
|------|--------|---|--|
| E713 | — | <ul style="list-style-type: none"> Data communication error | <ul style="list-style-type: none"> The communication between the host machine and the finisher is interrupted. This error is detected by the host machine. |
| E505 | 01 | <ul style="list-style-type: none"> Back-up memory | <ul style="list-style-type: none"> The checksum for the finisher controller PCB has an error when the power is turned on. |
| E510 | 01 | <ul style="list-style-type: none"> Feed motor (M1) Stack feed roller (upper) home position sensor (PI12) | <ul style="list-style-type: none"> The stack feed roller (upper) does not leave the stack feed roller (upper) home position sensor when the feed motor has been driven for 2 sec. |
| | 02 | | <ul style="list-style-type: none"> The stack feed roller (upper) does not return to the stack feed roller (upper) home position sensor when the feed motor has been driven for 2 sec. |
| E514 | 01 | <ul style="list-style-type: none"> Delivery motor (M3) Delivery belt home position sensor (PI7) | <ul style="list-style-type: none"> The delivery belt does not leave the delivery belt home position sensor when the stack delivery motor has been driven for 3 sec. |
| | 02 | | <ul style="list-style-type: none"> The delivery belt does not return to the delivery belt home position sensor when the stack delivery motor has been driven for 3 sec. |
| E530 | 01 | <ul style="list-style-type: none"> Alignment motor (rear; M5) Aligning plate home position sensor (rear; PI5) | <ul style="list-style-type: none"> The aligning plate (rear) does not leave the aligning plate home position sensor (rear) when the alignment motor has been driven for 3 sec. |
| | 02 | | <ul style="list-style-type: none"> The aligning plate (rear) does not return to the aligning plate home position sensor (rear) when the alignment motor (rear) has been driven for 3 sec. |

T05-502-01

| Code | Detail | Error | Timing of detection |
|------|--------|---|---|
| E531 | 01 | <ul style="list-style-type: none"> Staple/fold motor (M7) Staple home position sensor (PI19) | <ul style="list-style-type: none"> The stapler does not leave the staple home position sensor when the staple/fold motor has been driven for 0.6 sec. |
| | 02 | | <ul style="list-style-type: none"> The stapler does not return to the staple home position sensor when the staple/fold motor has been driven for 0.6 sec. |
| | 03 | <ul style="list-style-type: none"> Staple/fold motor (M7) Staple/fold clock sensor (PI14) | <ul style="list-style-type: none"> No clock is detected for 0.1 sec or more while the staple/fold motor is in operation. |
| E5F1 | 01 | <ul style="list-style-type: none"> Staple/fold motor (M7) Folding home position sensor (PI11) | <ul style="list-style-type: none"> The folding roller does not leave the folding home position sensor when the staple/fold motor has been driven for 0.6 sec. |
| | 02 | | <ul style="list-style-type: none"> The folding roller does not return to the folding home position sensor when the staple/fold motor has been driven for 19 sec. |
| | 03 | <ul style="list-style-type: none"> Staple/fold motor (M7) Staple/fold motor clock sensor (PI14) | <ul style="list-style-type: none"> No clock is detected for 1 sec or more while the staple/fold motor is in operation. |
| E532 | 01 | <ul style="list-style-type: none"> Slide motor (M8) Slide home position sensor (PI18) | <ul style="list-style-type: none"> The stapler unit does not leave the slide home position sensor when the slide motor has been driven for 1 sec. |
| | 02 | | <ul style="list-style-type: none"> The stapler unit does not return to the slide home position when the slide motor has been driven for 6 msec. |
| E537 | 01 | <ul style="list-style-type: none"> Alignment motor (front; M4) Aligning plate home position sensor (front; PI4) | <ul style="list-style-type: none"> The aligning plate (front) does not leave the aligning plate home position sensor (front) when the alignment motor (front) has been driven for 3 sec. |
| | 02 | | <ul style="list-style-type: none"> The aligning plate (front) does not return to the aligning plate home position sensor (front) when the alignment motor (front) has been driven for 3 sec. |
| E540 | 01 | <ul style="list-style-type: none"> Shift motor (M6) Paper surface sensor (PI9) | <ul style="list-style-type: none"> The state of the paper surface sensor does not change when the shift motor has been driven for 10 sec or more. |

T05-502-02

| Code | Detail | Error | Timing of detection |
|------|--------|--|--|
| E540 | 02 | <ul style="list-style-type: none"> Shift upper sensor (PI15) | <ul style="list-style-type: none"> The shift upper sensor has gone ON while the tray is moving up. |
| | 03 | <ul style="list-style-type: none"> Shift motor (M6) Shift motor clock sensor (PI17) | <ul style="list-style-type: none"> No clock is detected for 50 msec or more from the shift motor clock sensor when the shift motor has been driven. |
| E550 | 10 | <ul style="list-style-type: none"> Power supply error | <ul style="list-style-type: none"> A Start signal has been received although 24 VDC is not supplied from the host machine. |
| E577 | 01 | <ul style="list-style-type: none"> Paddle motor (M2) Paddle home position sensor (PI2) | <ul style="list-style-type: none"> The paddle does not leave the paddle home position sensor when the paddle motor has been driven for 2 sec. |
| | 02 | <ul style="list-style-type: none"> Swing guide home position sensor (PI3) | <ul style="list-style-type: none"> The paddle does not return to the paddle home position sensor when the paddle motor has been driven for 2 sec. |
| | 03 | | <ul style="list-style-type: none"> The swing guide does not leave the swing guide home position sensor when the paddle motor has been driven for 2 sec. |
| | 04 | | <ul style="list-style-type: none"> The swing guide does not return to the swing guide home position sensor when the paddle motor has been driven for 2 sec. |

T05-502-03

5.2.2 Puncher Unit (option)

| Code | Detail | Error | Timing of detection |
|------|----------------------------|--|---|
| E501 | FF | <ul style="list-style-type: none"> Communication error | <ul style="list-style-type: none"> The communication with the puncher unit is disrupted. |
| E505 | 20 | <ul style="list-style-type: none"> Back-up memory | <ul style="list-style-type: none"> The checksum for the puncher controller PCB has an error when the power is turned on. |
| E550 | 20 | <ul style="list-style-type: none"> Power supply error | <ul style="list-style-type: none"> A Start signal has been received although 24 VDC is not supplied from the finisher. |
| E590 | 01 | <ul style="list-style-type: none"> Punch motor (M1P) Punch motor home position sensor (PI1P) | <ul style="list-style-type: none"> The puncher does not return to the punch motor home position sensor when the punch motor has been driven for 250 msec. |
| | 02 | <ul style="list-style-type: none"> Punch motor (M1P) Punch motor clock sensor (PI3P) | <ul style="list-style-type: none"> No clock is detected from the punch motor clock sensor for 60 msec when the punch motor has been driven. |
| E592 | 01 02 03 04 05 | <ul style="list-style-type: none"> Horizontal registration sensor | <ul style="list-style-type: none"> The light-receiving voltage is 2.5 V or less when the light-emitting voltage is set to 4.4 V while sensor output auto adjustment is under way. The light-receiving voltage is 2.5 V or more when the light-emitting voltage is set to 0 while sensor output auto adjustment is under way. The light-emitting voltage is set to 4.4 V or more after sensor output auto adjustment. |
| | 06 | <ul style="list-style-type: none"> Waste full sensor | <ul style="list-style-type: none"> The light-receiving voltage is 2.5 V or less when the light-emitting voltage is set to 4.4 V while sensor output auto adjustment is under way. The light-receiving voltage is 2.5 V or more when the light-emitting voltage is set to 0 V while sensor output auto adjustment is under way. The light-emitting voltage is 4.4 V or more after sensor output auto adjustment. |
| E593 | 01 | <ul style="list-style-type: none"> Horizontal registration motor (M2P) Horizontal registration home position sensor (PI2P) | <ul style="list-style-type: none"> The puncher does not leave the horizontal registration home position sensor when the horizontal registration motor has been driven for 1000 msec. |
| | 02 | <ul style="list-style-type: none"> Horizontal registration home position sensor (PI2P) | <ul style="list-style-type: none"> The puncher does not return to the horizontal registration home position sensor when the horizontal registration motor has been driven for 1000 msec. |

T05-502-04

5.3 Alarm

5.3.1 Finisher/Saddle Unit

| Error | Condition | Timing of detection | Operation | Resetting |
|---------------------------|--|---|--|---|
| Stapler absent | The stapler is not set. | Monitoring at all times | The staple/fold motor (M7) and the slide motor (M8) will stop. | Set the stapler. |
| Staple absent | The staple cartridge has run out of staples. | Monitoring at all times | Normal operation will continue; however, operation is subject to instructions from the host machine. | Replace the staple cartridge; or, set it correctly. |
| Mixed sheets | Sheets of different sizes are deposited in the compartment. | When a sheet of a different size is placed. | The sheet will be aligned based on maximum size width and delivered as a stack. | — |
| Overstacking for stapling | The number of sheets in the compartment has exceeded the limit imposed on stapling. | When an extra sheet is placed. | The sheets will be delivered with stapling. | — |
| Stack tray overstacking | The number of sheets deposited on the delivery tray has exceeded the limit imposed on the tray (sheets, sets). | When an extra sheet is placed. | Normal operation will continue. | Remove the sheets from the delivery tray. |
| Saddle overstacking | Remove the stack from the bind tray. More than 10 stacks are deposited on the folded stack tray. | When an extra sheet is placed. | Normal operation will continue. | Remove the stack from the bind tray. |

T05-503-01

5.3.2 Puncher Unit (option)

| Error | Condition | Timing of detection | Operation | Resetting |
|-----------------|---|---------------------|---------------------------------|---|
| Waste case full | The amount of waste paper in the waste case has reached the limit. | During punching. | Normal operation will continue. | Remove the waste paper from the waste case. |
| Excess water | The amount of waste paper in the waste case has exceeded the limit. | During punching. | Punching will be disabled. | Remove the waste paper from the water case. |

T05-503-02

5.4 Host Machine I/O Display

5.4.1 Finisher/Saddle Unit

| Address | bit | Indication | Signal | Connector | Remarks |
|------------------|------|--|--------------|-----------|---------|
| P001 (output) | bit0 | Alignment motor (front) phase A output | FJOGMTR_A | CN3-2 | L: ON |
| | bit1 | Alignment motor (front) phase B output | FJOGMTR_B | CN3-4 | L: ON |
| | bit2 | Slide motor phase A output | SLIDMTR_A | CN7-3 | L: ON |
| | bit3 | Slide motor phase B output | SLIDMTR_B | CN7-5 | L: ON |
| | bit4 | Delivery motor phase A output | EJCTMTR_A | CN13-3 | L: ON |
| | bit5 | Delivery motor phase A* output | EJCTMTR_*A | CN13-4 | H: ON |
| | bit6 | Delivery motor phase B output | EJCTMTR_B | CN13-5 | L: ON |
| | bit7 | Delivery motor phase B* output | EJCTMTR_*B | CN13-6 | H: ON |
| P002 (output) | bit0 | Paddle motor phase A output | PDLMTR_A | CN10-9 | L: ON |
| | bit1 | Paddle motor phase A* output | PDLMTR_*A | CN10-10 | H: ON |
| | bit2 | Paddle motor phase B output | PDLMTR_B | CN10-11 | L: ON |
| | bit3 | Paddle motor phase B* output | PDLMTR_*B | CN10-12 | H: ON |
| | bit4 | Shift motor up drive output | SIFTMTR_UP | — | |
| | bit5 | Shift motor down drive output | SIFTMTR_DN | — | |
| | bit6 | Staple/fold motor PWM | BINDMTR_PWM | — | L:ON |
| | bit7 | Staple/fold clock sensor (input) | BIND_CLK | CN9-5 | |
| P003 | bit0 | Puncher unit transmission signal (output) | PNCH_TXD | — | |
| | bit1 | TDX (output) | TXD2 | — | |
| | bit2 | Puncher unit reception signal (input) | PNCH_RXD | — | |
| | bit3 | RXD (input) | RXD2 | — | |
| | bit4 | Full stack intermediate sensor (full detection: input) | STACK_FULL_S | — | H:FULL |
| | bit5 | Bind clutch (output) | SDL_CL | — | H:ON |
| | bit6 | — | — | — | |
| | bit7 | — | — | — | |
| P004 (input) | bit0 | — | — | — | |
| | bit1 | Push switch 1, 2 | PSW_1_2 | — | |
| | bit2 | DIP switch 7, 8 | DIPSW7,8 | — | |
| | bit3 | DIP switch 5, 6 | DIPSW5,6 | — | |
| | bit4 | DIP switch 3,4 | DIPSW3,4 | — | |
| | bit5 | DIP switch 1, 2 | DIPSW1,2 | — | |
| | bit6 | Folding position sensor (emitted light quantity)(output) | BIND_POS_DA | — | |
| | bit7 | Folding position sensor (analog) | BIND_POS_AD | — | |

T05-504-01

| Address | bit | Indication | Signal | Connector | Remarks |
|------------------|------|--|--------------|-----------|---------------------|
| P005 (output) | bit0 | EEPROM chip select | EEPROM_CS | — | H: select |
| | bit1 | EEPROM/DA clock output (used in common) | EEPROM_DA_CK | — | |
| | bit2 | EEPROM/DA data output (used in common) | EEPROM_DA_DO | — | |
| | bit3 | DA load signal output | DA_LD | — | H: load |
| | bit4 | — | — | — | |
| | bit5 | — | — | — | |
| | bit6 | — | — | — | |
| | bit7 | — | — | — | |
| P006 (input) | bit0 | Staple top position sensor | SELF_PRIME | CN11-6 | H: READY |
| | bit1 | Staple empty sensor | HOOK_S | CN11-5 | H: staple absent |
| | bit2 | Alignment motor (rear) phase A (output) | RJOGMTR_A | CN3-7 | L: ON |
| | bit3 | Alignment motor (rear) phase B (output) | RJOGMTR_B | CN3-9 | L: ON |
| | bit4 | Staple home position sensor | STPL_HP | CN11-4 | L: HP |
| | bit5 | Slide home position sensor | SLID_HP | CN11-3 | L: HP |
| | bit6 | Delivery belt home position sensor | EJCT_BLT_HP | CN5-6 | H: HP |
| | bit7 | REQ | REQ2 | — | |
| P007 (input) | bit0 | — | — | — | |
| | bit1 | — | — | — | |
| | bit2 | — | — | — | |
| | bit3 | — | — | — | |
| | bit4 | — | — | — | |
| | bit5 | Folding position sensor | BIND_POS | CN16-2 | H: paper present |
| | bit6 | Shift motor clock sensor | SIFT_CLK | CN15-6 | |
| | bit7 | Punch home position sensor | PNCH_TIM_S | CN12-5 | L: paper present |
| P008 (output) | bit0 | Feed motor phase A output | FEEDMTR_A | CN10-3 | L: ON |
| | bit1 | Feed motor phase A* output | FEEDMTR_*A | CN10-4 | H: ON |
| | bit2 | Feed motor phase B output | FEEDMTR_B | CN10-5 | L: ON |
| | bit3 | Feed motor phase B* output | FEEDMTR_*B | CN10-6 | H: ON |
| | bit4 | Slide/alignment motor current cutting | — | — | |
| | bit5 | — | — | — | |
| | bit6 | — | — | — | |
| | bit7 | Tray paper sensor (input) | TRAY_EMPS | CN5-9 | H: paper present |
| P009 (output) | bit0 | Staple/fold motor (CW) | STPLMTR_FWD | — | |
| | bit1 | Staple/fold motor (CCW) | STPLMTR_REV | — | |
| | bit2 | Shift motor enable signal | SIFTMTR_EN | — | |
| | bit3 | — | — | — | |
| | bit4 | — | — | — | |
| | bit5 | — | — | — | |
| | bit6 | — | — | — | |
| | bit7 | — | — | — | |

T05-504-02

| Address | bit | Indication | Signal | Connector | Remarks |
|------------------|------|--|-------------|-----------|-------------------|
| P010 (input) | bit0 | Paper surface sensor (input) | LVL_S | CN5-12 | H: paper detected |
| | bit1 | Aligning plate home position sensor (front; input) | FJOG_HP | CN9-3 | L: HP |
| | bit2 | EEPROM data input | EEPROM_DI | — | |
| | bit3 | — | — | — | |
| | bit4 | — | — | — | |
| | bit5 | — | — | — | |
| | bit6 | — | — | — | |
| | bit7 | — | — | — | |
| P011 (input) | bit0 | Shift lower limit sensor | SIFT_DNLMT | CN15-9 | H: LMT |
| | bit1 | Shift upper limit sensor | SIFT_UPLMT | CN15-12 | H: LMT |
| | bit2 | Power supply monitor | PWR_S | — | L: ON |
| | bit3 | Alignment tray paper sensor | ADJ_TRAY_S | CN5-3 | H: paper present |
| | bit4 | Push switch P3 | PUSH_SW3 | — | L: ON |
| | bit5 | Stapler safety switch | STPLSAFE_SW | CN8-1 | H: open |
| | bit6 | Front door switch | FDOOR_SW | CN8-3 | H: open |
| | bit7 | Joint switch | JOINT_SW | CN8-5 | H: open |
| P012 (input) | bit0 | Upper cover sensor | TOPCOV_S | CN4-6 | H: open |
| | bit1 | Front door sensor | FDOOR_S | CN4-9 | H: open |
| | bit2 | Aligning plate home position sensor (rear) | RJOG_HP | CN5-15 | L: HP |
| | bit3 | Swing guide home position sensor | BDL_ROL_HP | CN9-9 | L: HP |
| | bit4 | Paddle home position sensor | PDL_HP | CN9-3 | L: HP |
| | bit5 | Inlet sensor | ENT_S | CN16-12 | L: paper present |
| | bit6 | Folding home position sensor | BIND_HP | CN16-6 | H: HP |
| | bit7 | Stapler connection signal | STPL_CNCT | CN11-1 | H: connected |
| P013 (output) | bit0 | Stack feed roller (upper) home position sensor | BIND_ROL_HO | CN16-9 | L: HP |
| | bit1 | Puncher connection signal (input) | PNCH_CNCT | — | L: connected |
| | bit2 | Binding tray sensor (input) | BIND_EMPS | CN15-3 | H: paper present |
| | bit3 | Power save switch (input) | PWR_DN | — | H: power save |
| | bit4 | LED1 | LED1 | — | L: ON |
| | bit5 | LED2 | LED2 | — | L: ON |
| | bit6 | LED3 | LED3 | — | L: ON |
| | bit7 | ACK | ACK2 | — | H: paper present |

T05-504-03

| Address | bit | Indication | Signal | Connector | Remarks |
|-----------------------|------|--|-------------|-----------|---------|
| P014 (input) | bit0 | DIPSW1 bit1 | — | — | L: ON |
| | bit1 | DIPSW1 bit2 | — | — | L: ON |
| | bit2 | DIPSW1 bit3 | — | — | L: ON |
| | bit3 | DIPSW1 bit4 | — | — | L: ON |
| | bit4 | DIPSW1 bit5 | — | — | L: ON |
| | bit5 | DIPSW1 bit6 | — | — | L: ON |
| | bit6 | DIPSW1 bit7 | — | — | L: ON |
| | bit7 | DIPSW1 bit8 | — | — | L: ON |
| P015 (input) | bit0 | PUSHSW1 | — | — | L: ON |
| | bit1 | PUSHSW2 | — | — | L: ON |
| | bit2 | PUSHSW3 | — | — | L: ON |
| | bit3 | — | — | — | |
| | bit4 | — | — | — | |
| | bit5 | — | — | — | |
| | bit6 | — | — | — | |
| | bit7 | — | — | — | |
| P023 (analog port) | — | Folding position sensor (analog) | BIND_POS_AD | — | |
| P024 (analog port) | — | | | — | |
| P025 (analog port) | — | Push switch 1, 2 | PSW_1_2 | — | |
| P026 (analog port) | — | DIP switch 7, 8 | DIPSW7,8 | — | |
| P027 (analog port) | — | DIP switch 5, 6 | DIPSW5,6 | — | |
| P028 (analog port) | — | DIP switch 3, 4 | DIPSW3,4 | — | |
| P029 (analog port) | — | DIP switch 1, 2 | DIPSW1,2 | — | |
| P030 (analog port) | — | Folding position sensor (emitted light quantity)(output) | BIND_POS_DA | — | |

T05-504-04

5.4.2 Puncher Unit (option)

| Address | bit | Indication | Signal | Connector | Remarks |
|------------------|------|---|--------|-----------|------------------------|
| P016 (output) | bit0 | Ladder circuit 1st bit | — | — | |
| | bit1 | Ladder circuit 2nd bit | — | — | |
| | bit2 | Ladder circuit 3rd bit | — | — | |
| | bit3 | Ladder circuit 4th bit | — | — | |
| | bit4 | Ladder circuit 5th bit | — | — | |
| | bit5 | Ladder circuit 6th bit | — | — | |
| | bit6 | Ladder circuit 7th bit | — | — | |
| | bit7 | Ladder circuit 8th bit | — | — | |
| P017 (input) | bit0 | Punch home position sensor | PUNCH | J1006-6 | L: HP |
| | bit1 | Horizontal registration home position sensor | SLIDE | J1006-3 | H: HP |
| | bit2 | — | — | — | |
| | bit3 | — | — | — | |
| | bit4 | DIPSW1001 bit1 | — | — | L: ON |
| | bit5 | DIPSW1001 bit2 | — | — | L: ON |
| | bit6 | DIPSW1001 bit3 | — | — | L: ON |
| | bit7 | DIPSW1001 bit4 | — | — | L: ON |
| P018 (input) | bit0 | Push SW1 | — | — | L: ON |
| | bit1 | Push SW2 | — | — | L: ON |
| | bit2 | — | — | — | |
| | bit3 | — | — | — | |
| | bit4 | Power supply detection | — | — | H: power drop |
| | bit5 | LED1 (output) | — | — | |
| | bit6 | LED2 (output) | — | — | |
| | bit7 | LED3 (output) | — | — | |
| P019 (output) | bit0 | Horizontal registration sensor light intensity adjustment | — | — | level up: intensity up |
| | bit1 | Registration sensor light intensity adjustment | — | — | level up: intensity up |
| | bit2 | — | — | — | |
| | bit3 | — | — | — | |
| | bit4 | EEPROM D0 (input) | — | — | |
| | bit5 | EEPROM DI | — | — | |
| | bit6 | EEPROM CLK | — | — | |
| | bit7 | EEPROM CS | — | — | |

T05-504-05

| Address | bit | Indication | Signal | Connector | Remarks |
|-----------------------|------|---|--------|-----------|------------------------|
| P020 (input) | bit0 | — | — | — | |
| | bit1 | — | — | — | |
| | bit2 | Registration interrupt (horizontal registration) | — | — | H: light blocked |
| | bit3 | REQ | — | — | |
| | bit4 | HFS communication RXD | — | — | |
| | bit5 | HFS communication TXD (output) | — | — | |
| | bit6 | — | — | — | |
| | bit7 | ACK (output) | — | — | |
| P021 (output) | bit0 | Horizontal registration motor current setting | — | — | |
| | bit1 | Horizontal registration motor current setting | — | — | |
| | bit2 | Horizontal registration motor phase B output | — | J1001-2 | |
| | bit3 | Horizontal registration motor phase A output | — | J1001-1 | |
| | bit4 | Punch motor REV | — | — | |
| | bit5 | Punch motor FWD | — | — | |
| | bit6 | Punch motor PWM | — | — | |
| | bit7 | Punch motor encoder (input) | CLOCK | J1006-9 | L: light blocked |
| P022 (input) | bit0 | — | — | — | |
| | bit1 | — | — | — | |
| | bit2 | DUST sensor | — | — | H: full |
| | bit3 | Registering sensor 5 (horizontal registration) | — | — | |
| | bit4 | Registration sensor 4 (B5R) | — | — | |
| | bit5 | Registration sensor 3 (A4R) | — | — | |
| | bit6 | Registration sensor 2 (B4) | — | — | |
| | bit7 | Registration sensor 1 (A4) | — | — | |
| P031 (analog port) | — | DUST sensor | — | — | H: full |
| P032 (analog port) | — | Registration sensor 5 (horizontal registration) | — | — | |
| P033 (analog port) | — | Registration sensor 4 (B5R) | — | — | |
| P034 (analog port) | — | Registration sensor 3 (A4R) | — | — | |
| P035 (analog port) | — | Registration sensor 2 (B4) | — | — | |
| P036 (analog port) | — | Registration sensor 1 (A4) | — | — | |
| P037 (analog port) | — | Horizontal registration sensor light intensity adjustment | — | — | level up: intensity up |
| P038 (analog port) | — | Registration sensor light intensity adjustment | — | — | level up: intensity up |

T05-504-06

APPENDIX

1 General Timing Chart

1.1 Finisher Unit

Stapling: A4 size paper, 2-sheet document, rear 1-point stapling



1.2 Saddle Unit

Binding: LTR-size paper, a copy of 2-sheet document




■ CW rotation

▨ CCW rotation

1.3 Puncher Unit (option)

Punching: A4size paper, 2-sheet document, job offset, 2set

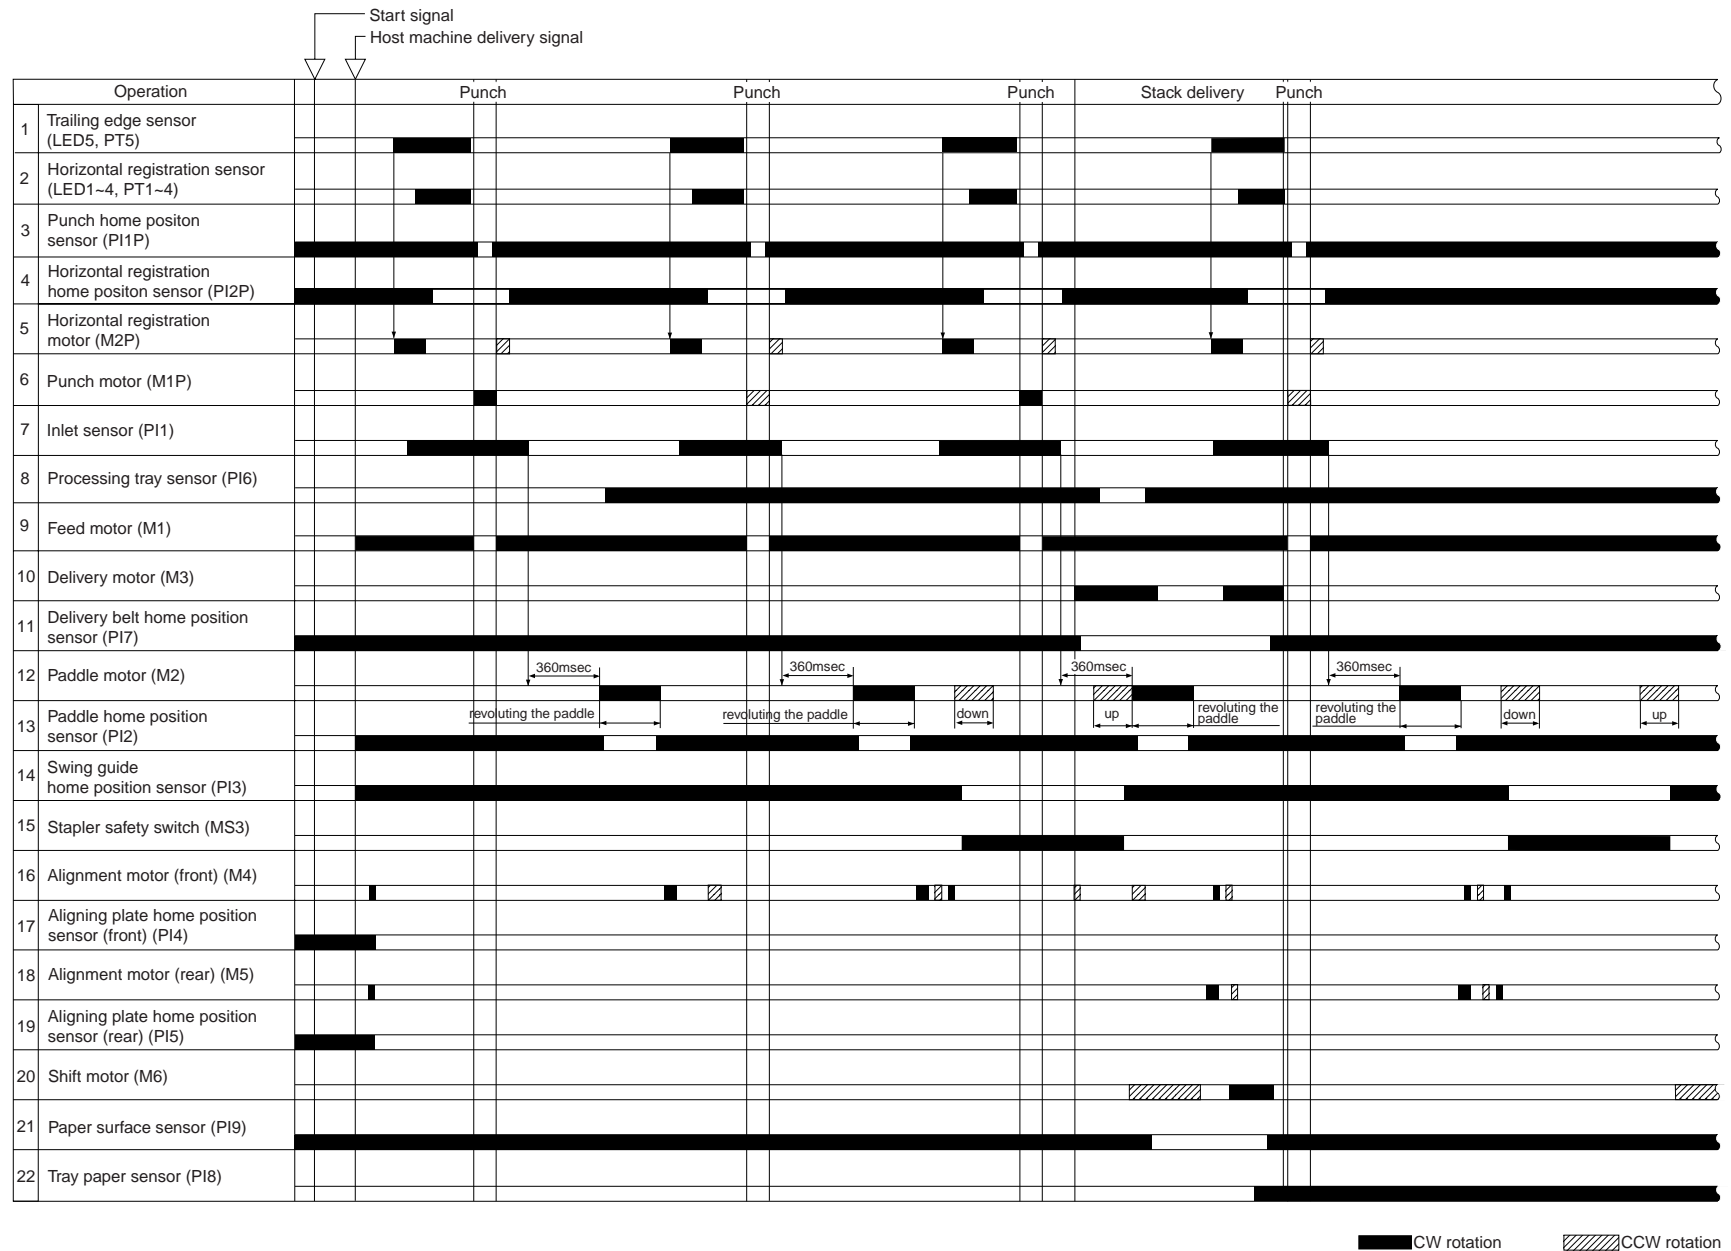

2 Signals and Abbreviations

The following presents the abbreviations of signals used in this manual and in drawings, and the meaning of each signal.

Reference: Signals enclosed by brackets [] are electrical signals, However, the state “1” or “0” of these analog signals cannot be indicated. Otherwise, the state of digital signals “1” or “0” can be indicated.

2.1 Finisher Saddle Unit


| | |
|-------------|---------------------------------------|
| ADJ_TRAY_S | JOG TRAY PAPER DETECT Signal |
| B_CLU | BIND CLUTCH DRIVE Signal |
| BDL_ROL_HP | SWING GUIDE HP DETECT Signal |
| BIND_CLK | STAPLE/FOLD MOTOR CLOCK DETECT Signal |
| BIND_EMPS | BIND TRAY PAPER DETECT Signal |
| BIND_HP | FOLDING HP DETECT Signal |
| BIND_L | FOLD POSITION LED ON Signal |
| BINDMTR | STAPLE/FOLD MOTOR DRIVE Signal |
| BIND_P | FOLD POSITION PAPER DETECT Signal |
| BIND_ROL_HP | BUNDLE FEED ROLLER HP DETECT Signal |
| EJCT_BLT_HP | EJECT BELT HP DETECT Signal |
| EJCTMTR | EJECT MOTOR DRIVE Signal |
| ENT_S | INLET PAPER DETECT Signal |
| FDOOR_S | FRONT DOOR OPEN DETECT Signal |
| FEEDMTR | FEED MOTOR DRIVE Signal |
| FJOG_HP | FRONT JOG PLATE HP DETECT Signal |
| FJOGMTR | FRONT JOG MOTOR DRIVE Signal |
| FRONT_SW | FRONT DOOR SWITCH Signal |
| HOOK_S | HOOK EMPTY DETECT Signal |
| JOINT_SW | JOINT SWITCH Signal |
| LVL_S | PAPER SURFACE DETECT Signal |
| PAPER_F | PAPER FULL DETECT Signal |
| PDL_HP | PADDLE HP DETECT Signal |
| PDLMTR | PADDLE MOTOR DRIVE Signal |
| RJOG_HP | REAR JOG PLATE HP DETECT Signal |
| RJOGMTR | REAR JOG MOTOR DRIVE Signal |

| | |
|-------------|---------------------------------|
| SELF_P | HOOK TOP POSITION DETECT Signal |
| SIFT_CLK | SIFT MOTOR CLOCK DETECT Signal |
| SIFT_DNLMT | SIFT DOWN LIMIT DETECT Signal |
| SIFTMTR | SIFT MOTOR DRIVE Signal |
| SIFT_UPLMT | SIFT UPPER LIMIT DETECT Signal |
| SLID_HP | SLIDE HP DETECT Signal |
| SLIDMTR | SLIDE MOTOR DRIVE Signal |
| STPL_CNCT | STAPLER CONNECT DETECT Signal |
| STPL_HP | STAPLE HP DETECT Signal |
| STPLSAFE_SW | STAPLE SAFETY SWITCH Signal |
| TOPCOV_S | TOP COVER OPEN DETECT Signal |
| TRY_EMPS | TRAY PAPER DETECT Signal |

2.2 Puncher Unit (option)

| | |
|---------|------------------------------------|
| CLOCK | PUNCH MOTOR CLOCK DETECT Signal |
| DUSTLED | DUST LED ON Signal |
| DUSTPTR | DUST FULL DETECT Signal |
| PAEND | PAPER END DETECT Signal |
| PUNCH | PUNCH HP DETECT Signal |
| SLIDE | SIDE REGISTRATION HP DETECT Signal |
| SREG1 | SIDE REGISTRATION DETECT Signal 1 |
| SREG2 | SIDE REGISTRATION DETECT Signal 2 |
| SREG3 | SIDE REGISTRATION DETECT Signal 3 |
| REG4 | SIDE REGISTRATION DETECT Signal 4 |
| LEDON1 | LED1 ON Signal |
| LEDON2 | LED2 ON Signal |
| LEDON3 | LED3 ON Signal |
| LEDON4 | LED4 ON Signal |
| LEDON5 | LED5 ON Signal |


3 Finisher/Saddle Unit General Circuit Diagram

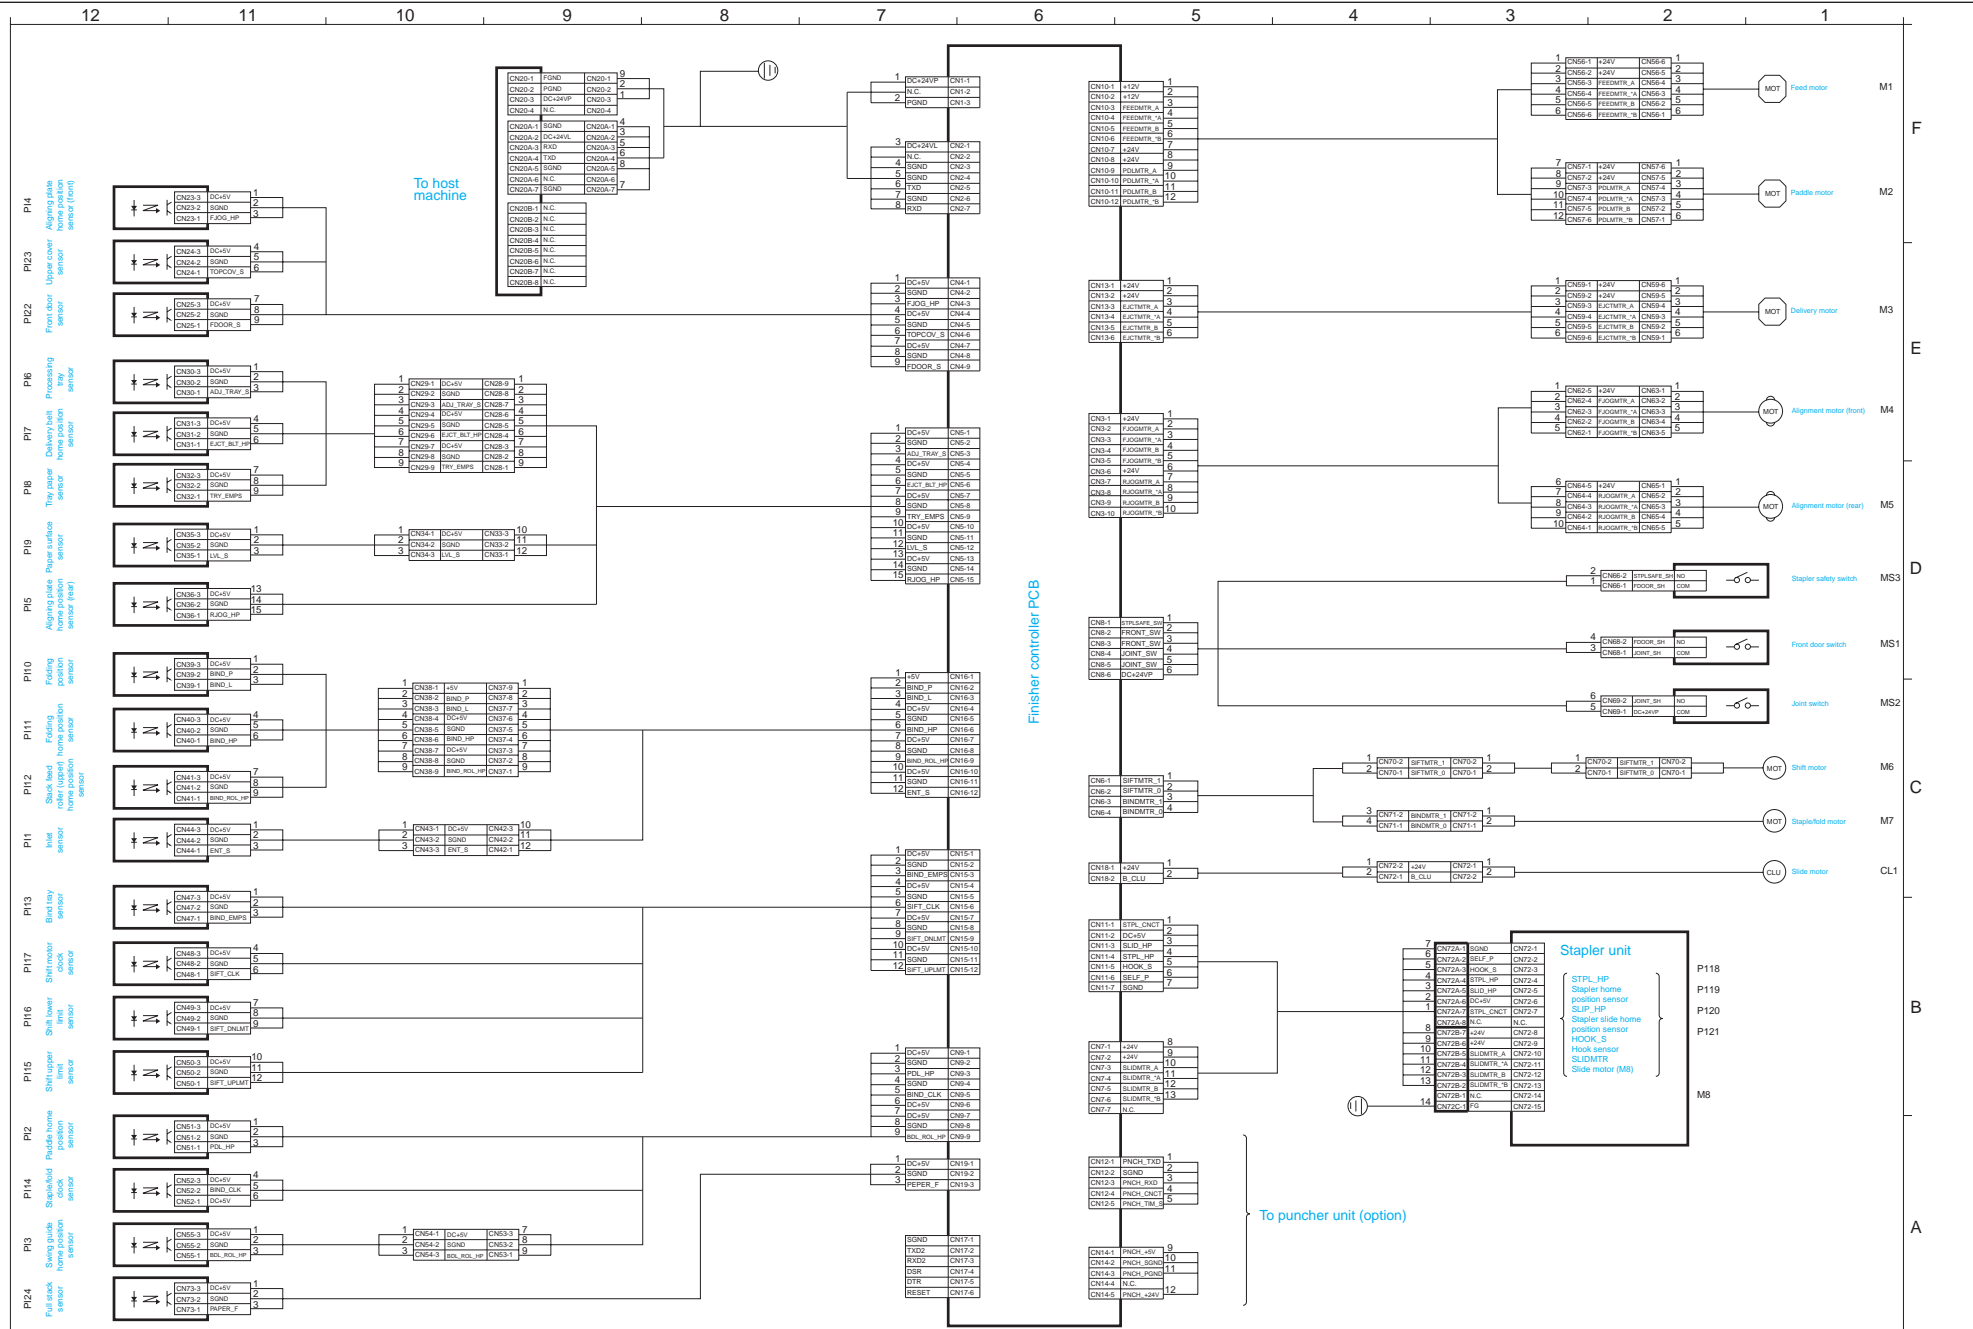


A-10




3.2 Finisher Controller PCB (2/8)

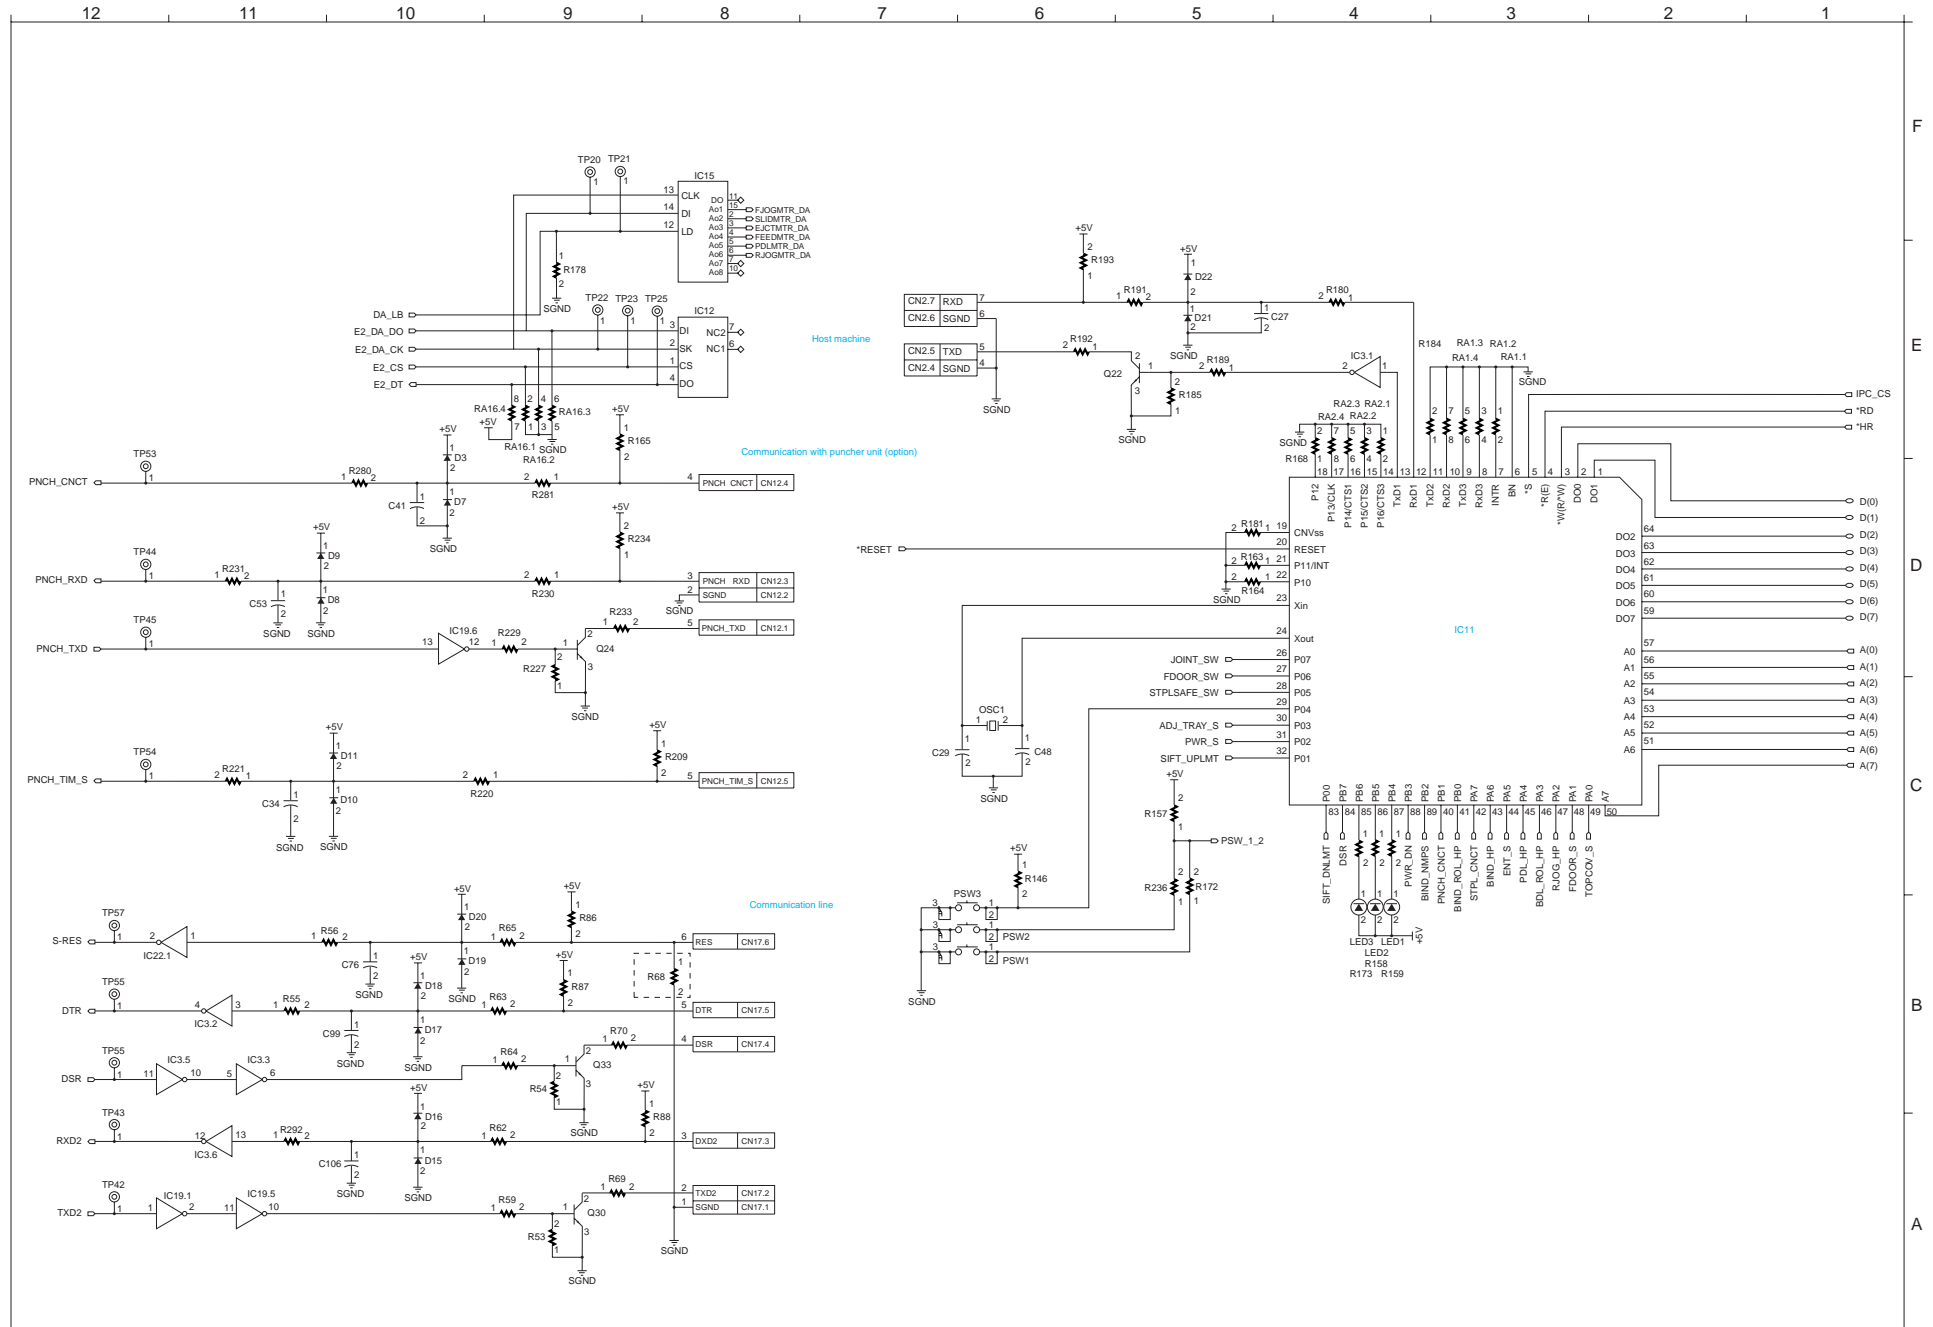


3.3 Finisher Controller PCB (3/8)

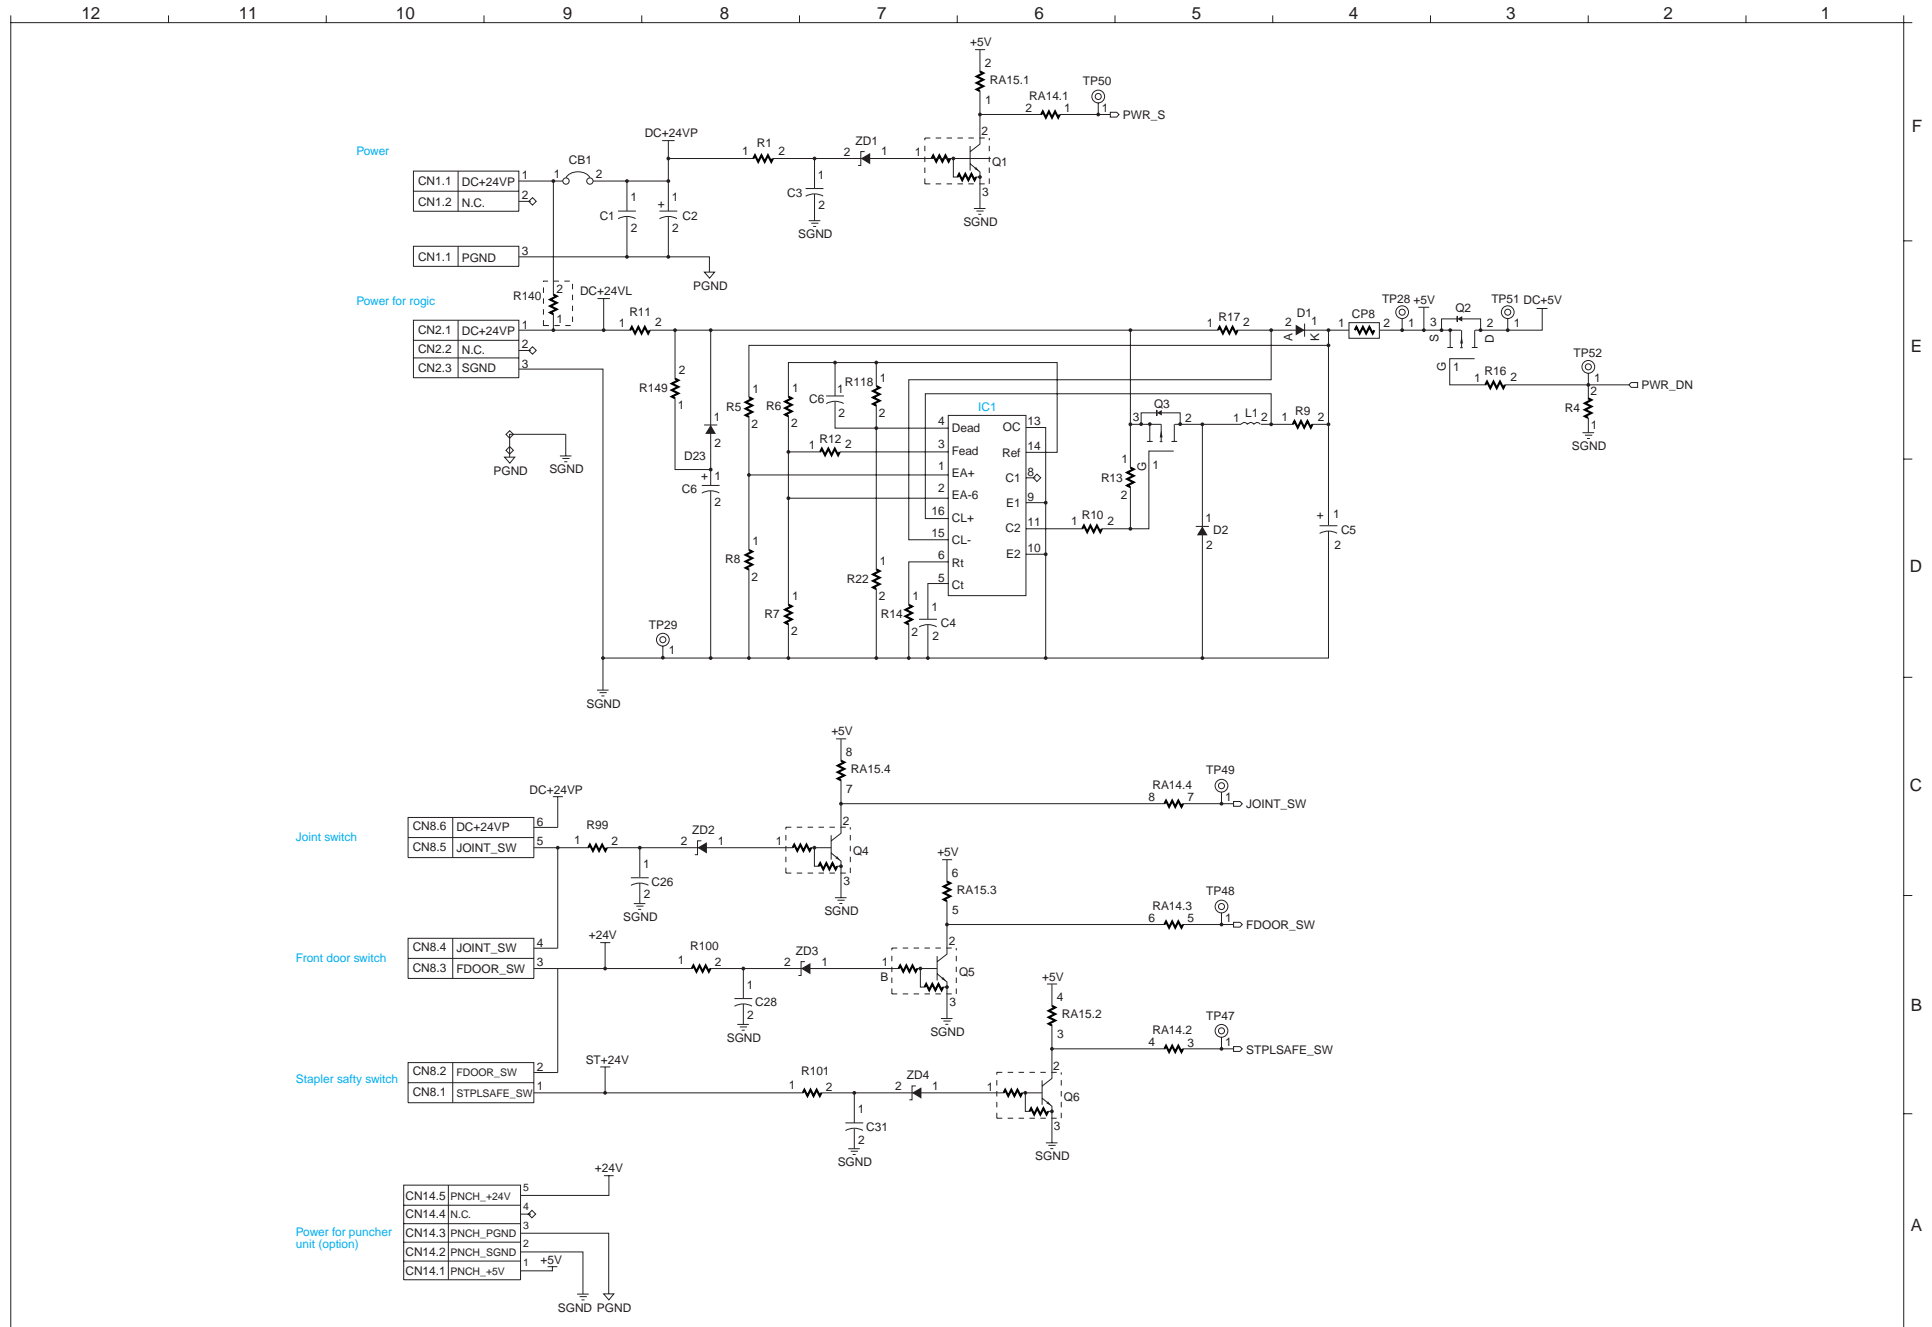


3.4 Finisher Controller PCB (4/8)

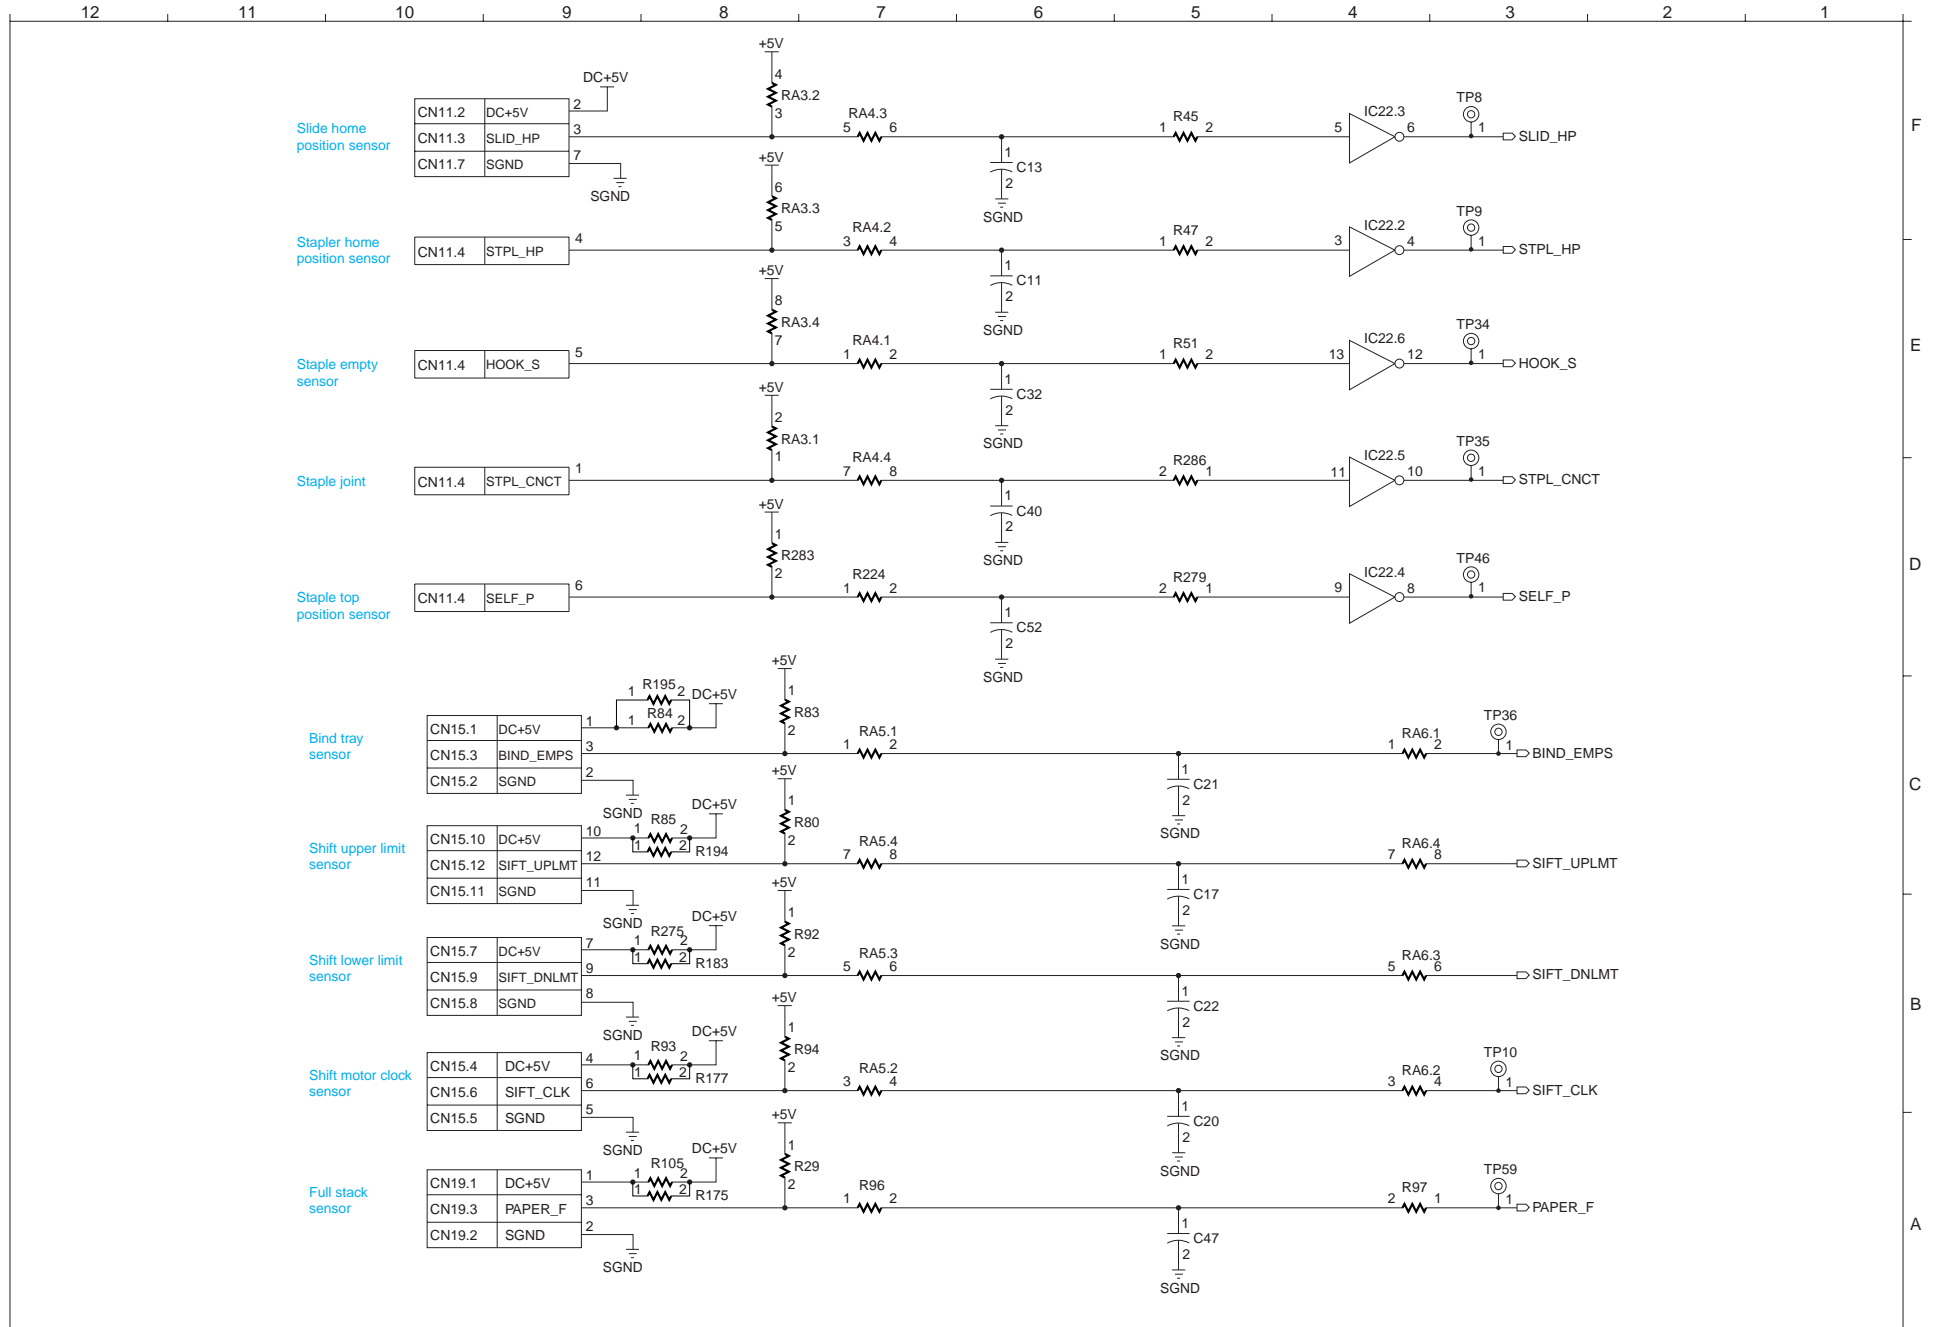


3.5 Finisher Controller PCB (5/8)

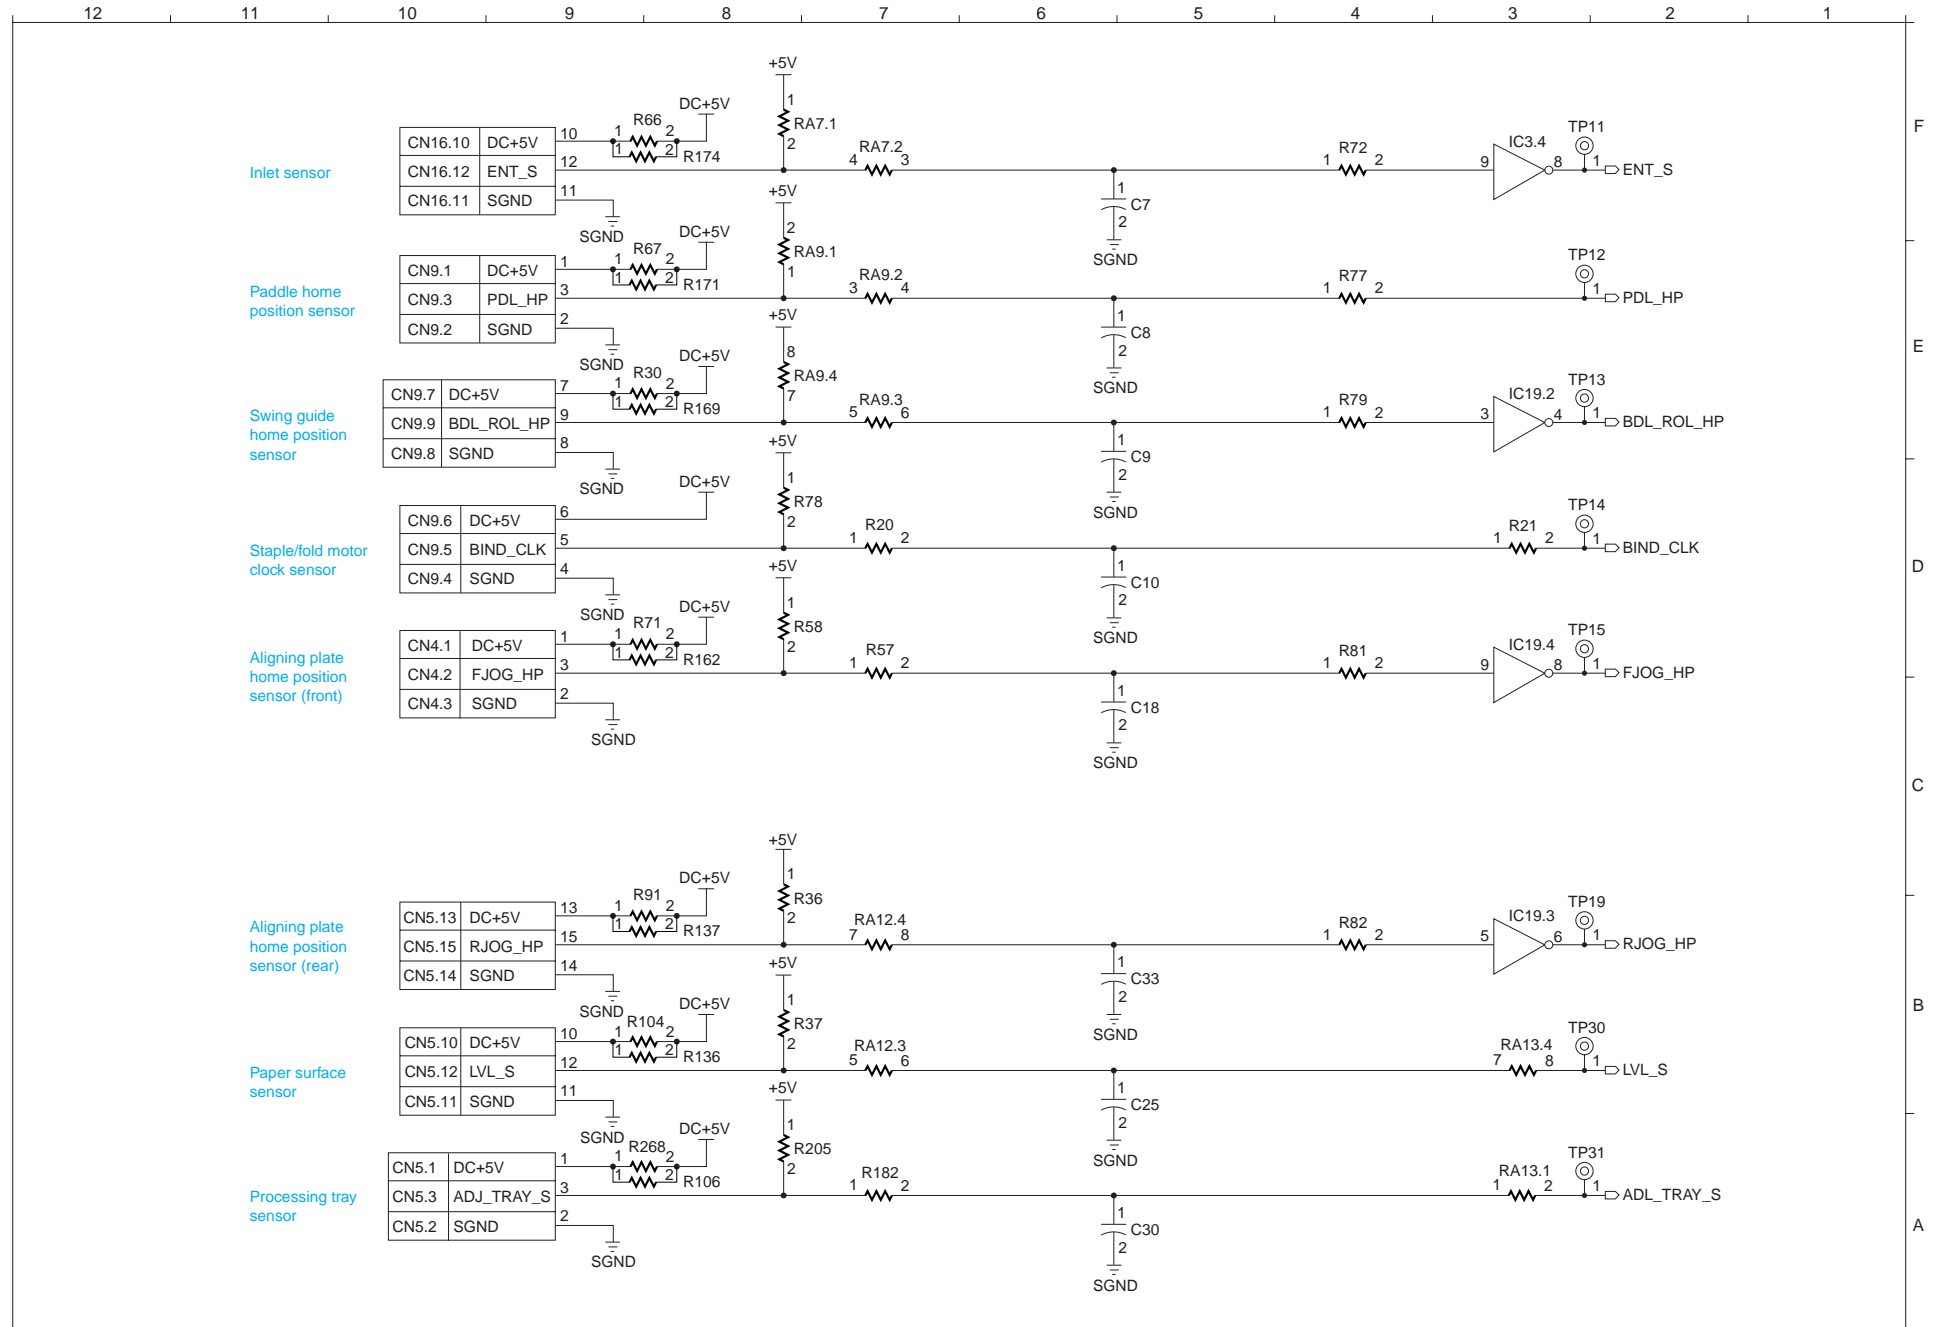

3.6 Finisher Controller PCB (6/8)

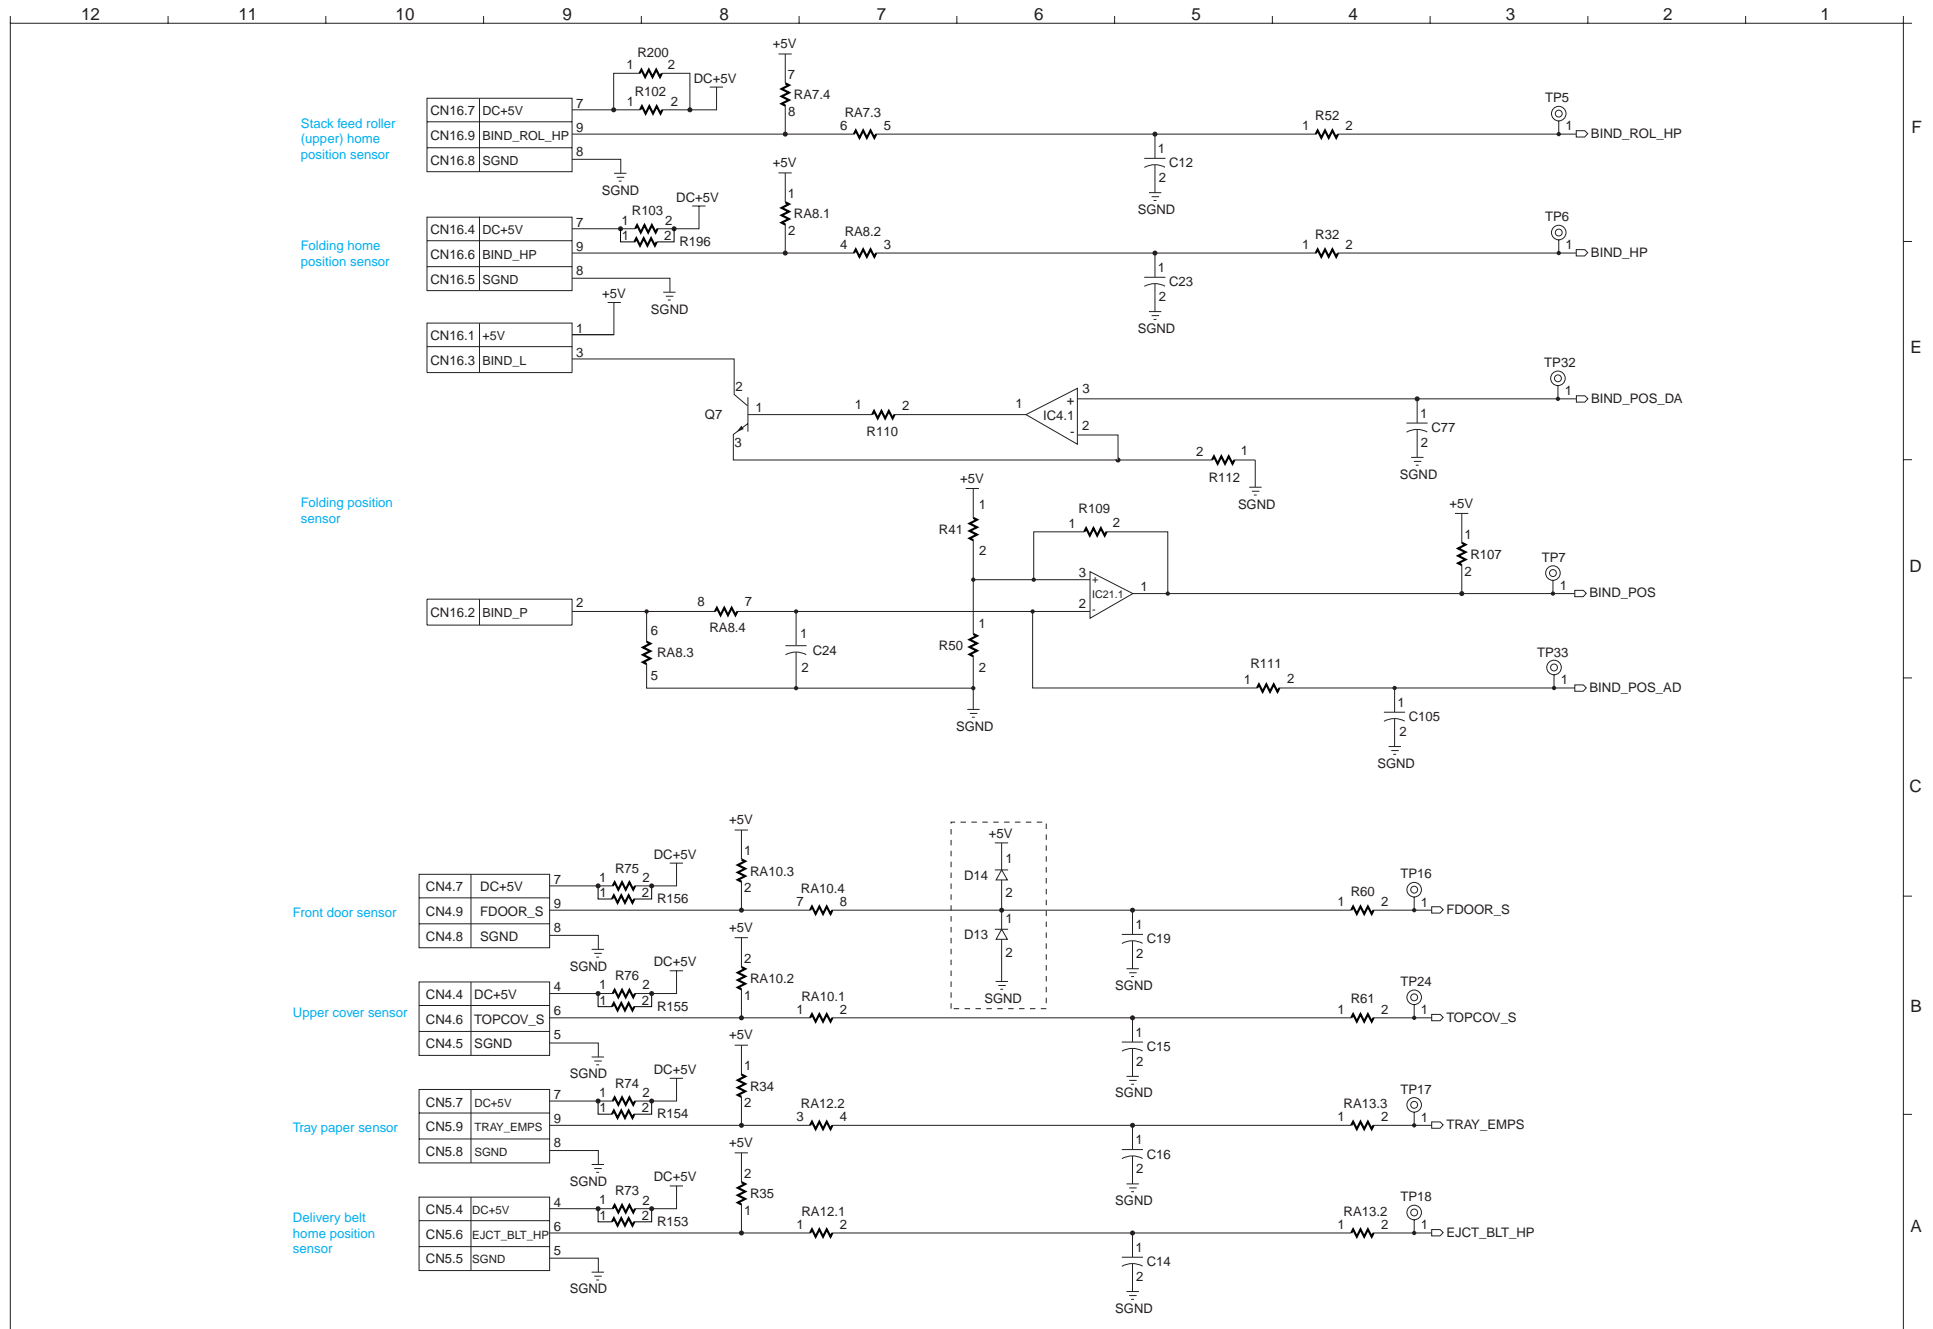


3.7 Finisher Controller PCB (7/8)

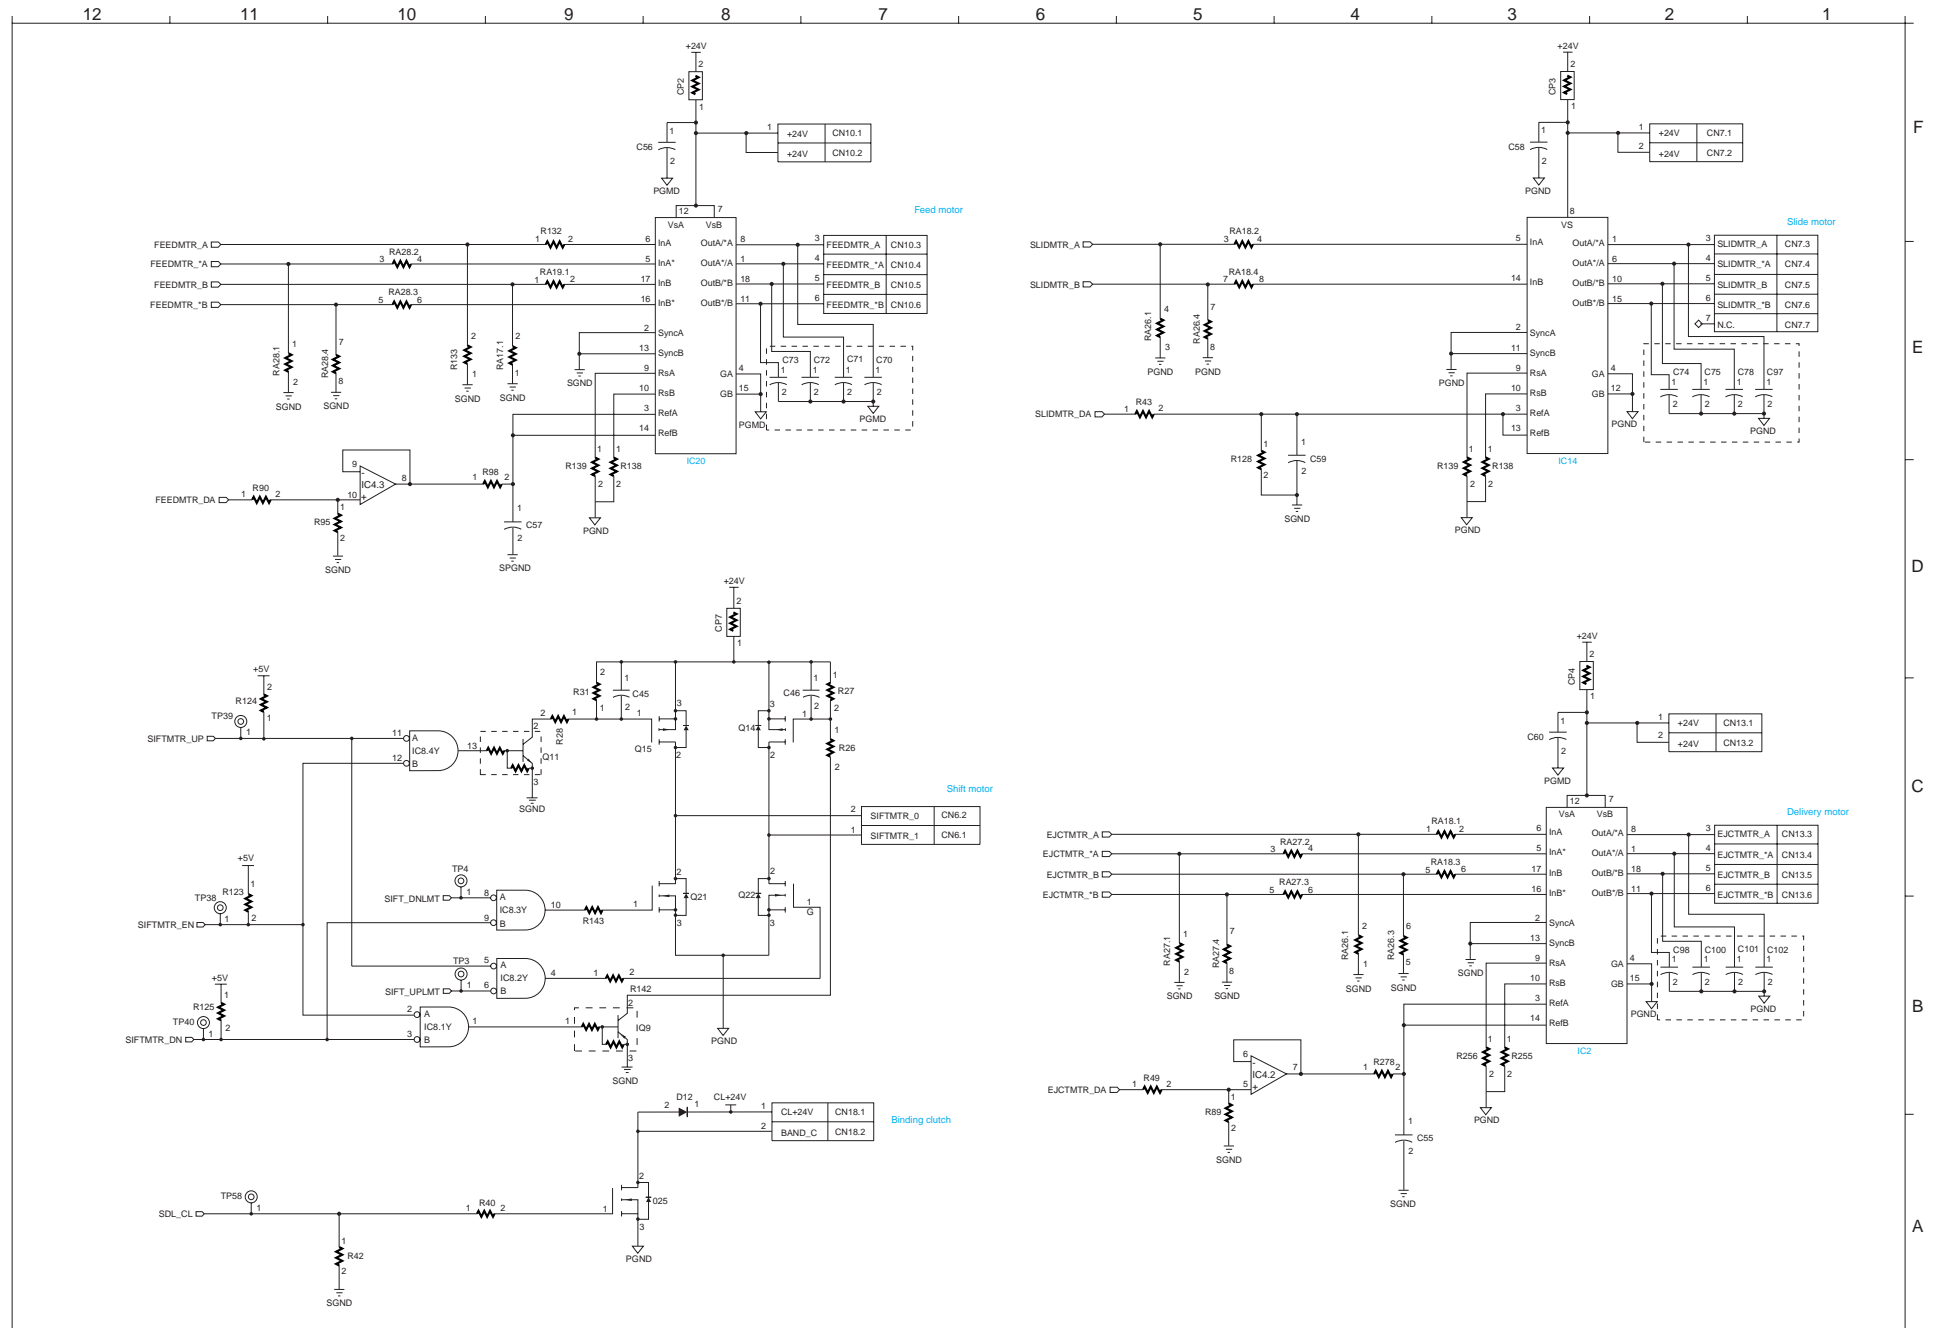

COPYRIGHT © 2001 CANON INC.




4 Puncher Unit General Circuit Diagram






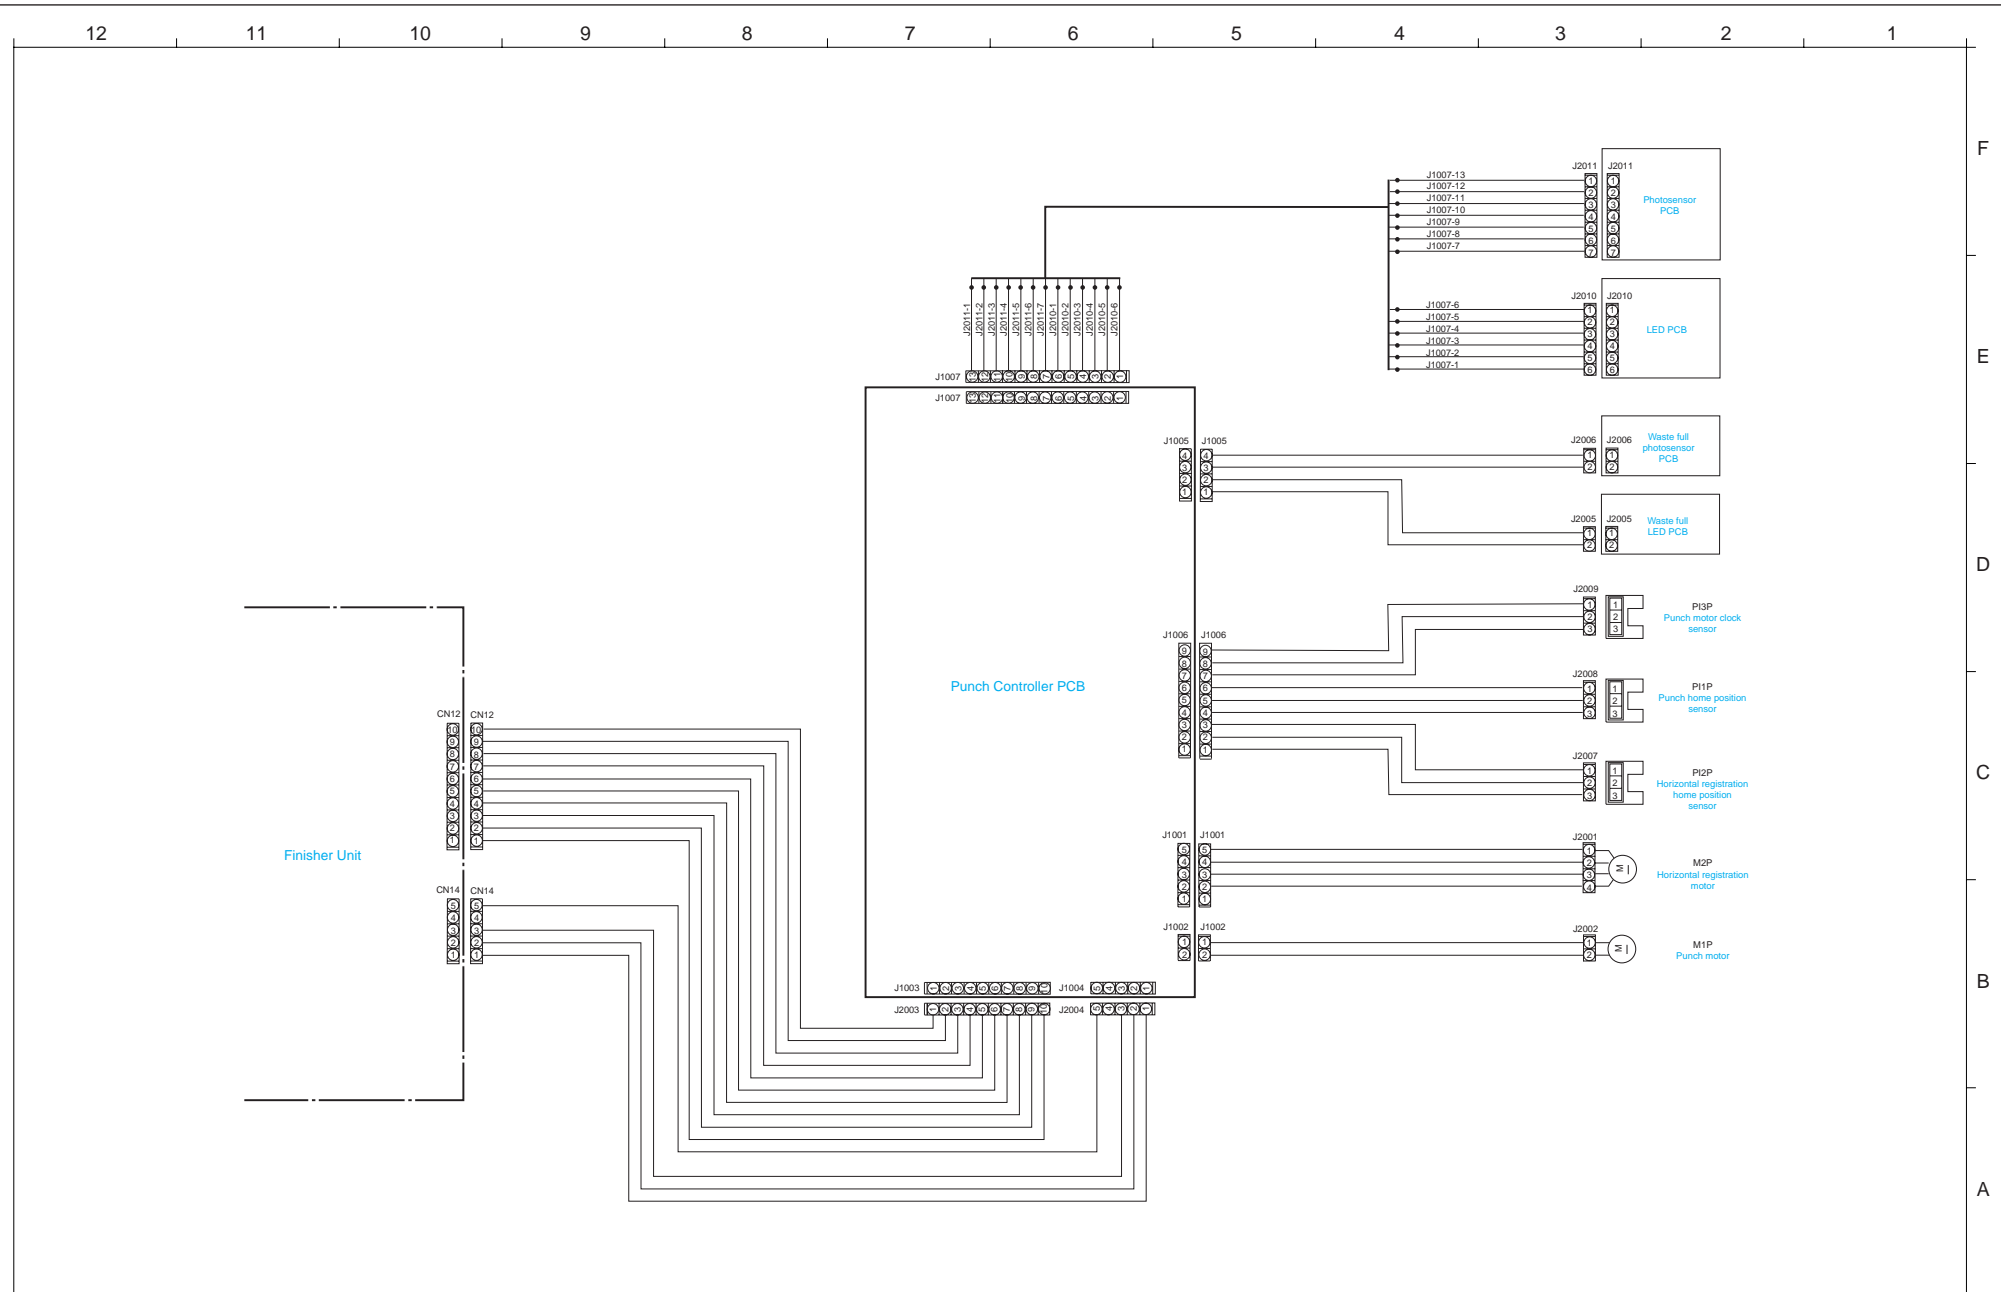


[illegible]

4.2 LED PCB

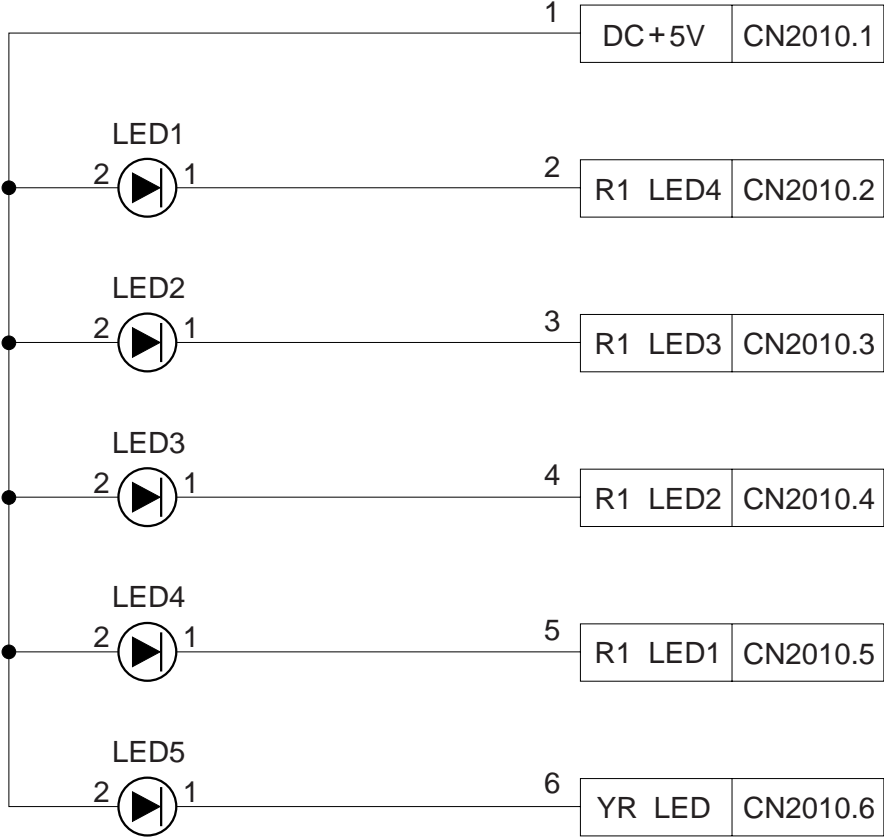

4.3 Photosensor PCB

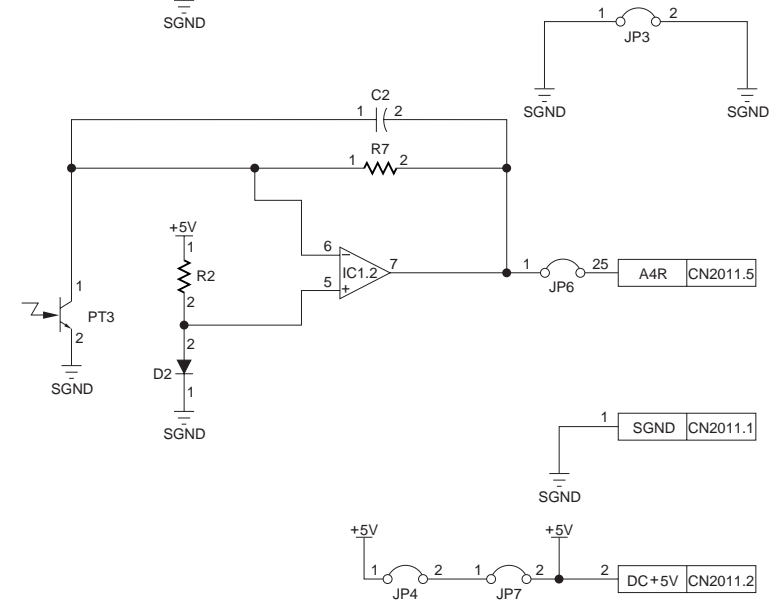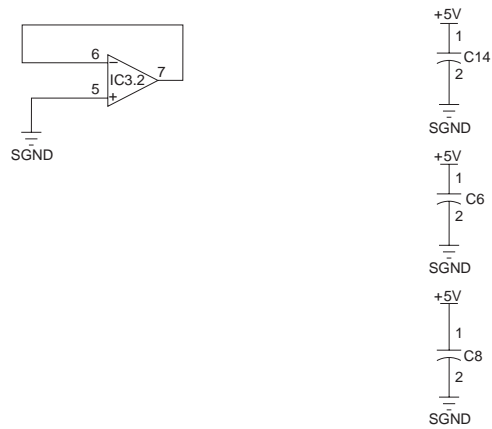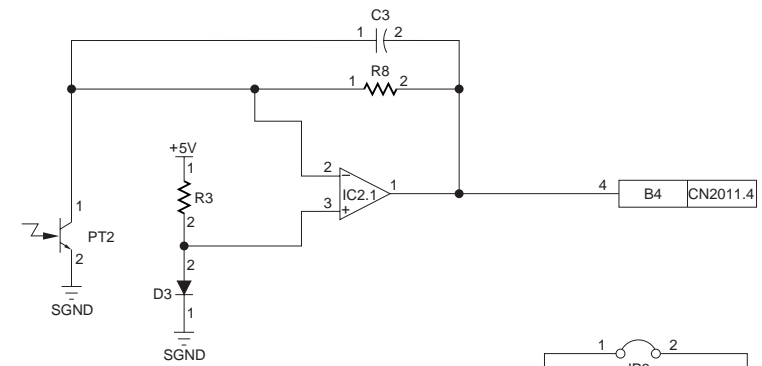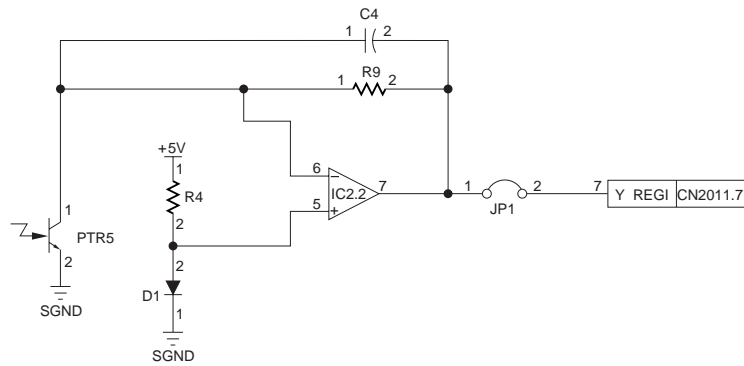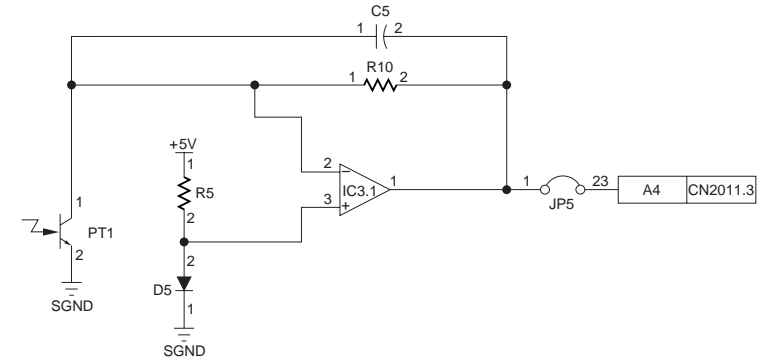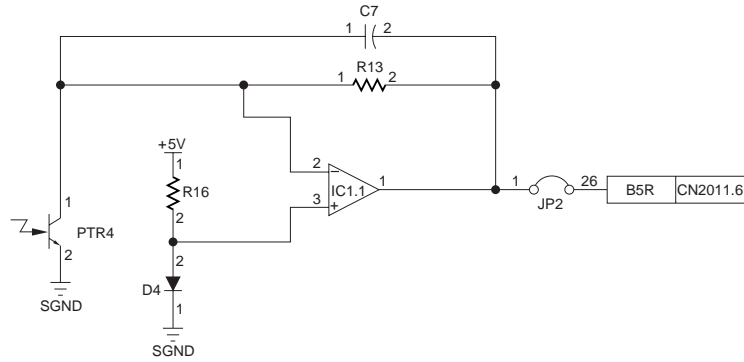

5 Jam Code

| No. | Jamcode | Indication |
|-----|---------|------------------------------------|
| 1 | 1006 | Staple jam |
| 2 | 1007 | Power-on jam |
| 3 | 1008 | Door open jam |
| 4 | 1011 | Inlet sensor delay jam |
| 5 | 1012 | Folding position sensor delay jam |
| 6 | 1021 | Inlet sensor stationary jam |
| 7 | 1022 | Folding position sensor stationary |

6 Solvents and Oils

| No. | Name | Description | Composition | Remarks |
|-----|----------------|--|---|--|
| 1 | Vic Clean C-17 | Cleaning: e.g., glass, plastic, rubber parts, external covers | Hydrocarbon (fluorine family) Alcohol Surface activating agent Water | <ul style="list-style-type: none">• Do not bring near fire.• Procure locally.• Isopropyl alcohol may be substituted. |
| 2 | Lubricant | Drive, friction parts, lead cam | Silicone oil | <ul style="list-style-type: none">• Varmulb G2 (made by Japan Mineral Oils) |

TA-600-01

Prepared by
Office Imaging Products Quality Assurance Center
CANON INC.
Printed in Japan

REVISION 0 (MAR. 2001) (01073)

5-1, Hakusan 7-chome, Toride-shi, Ibaraki 302-8501 Japan



This publication is printed on
100% reprocessed paper.

Canon