


IDV 11
IAV 11

IDV/IAV-11 I/O DIAG
CZIXVAO

COPYRIGHT (c) 1983
AH-T507A-MC
FICHE 01 OF 02

JUL 1984
digital
Made In USA

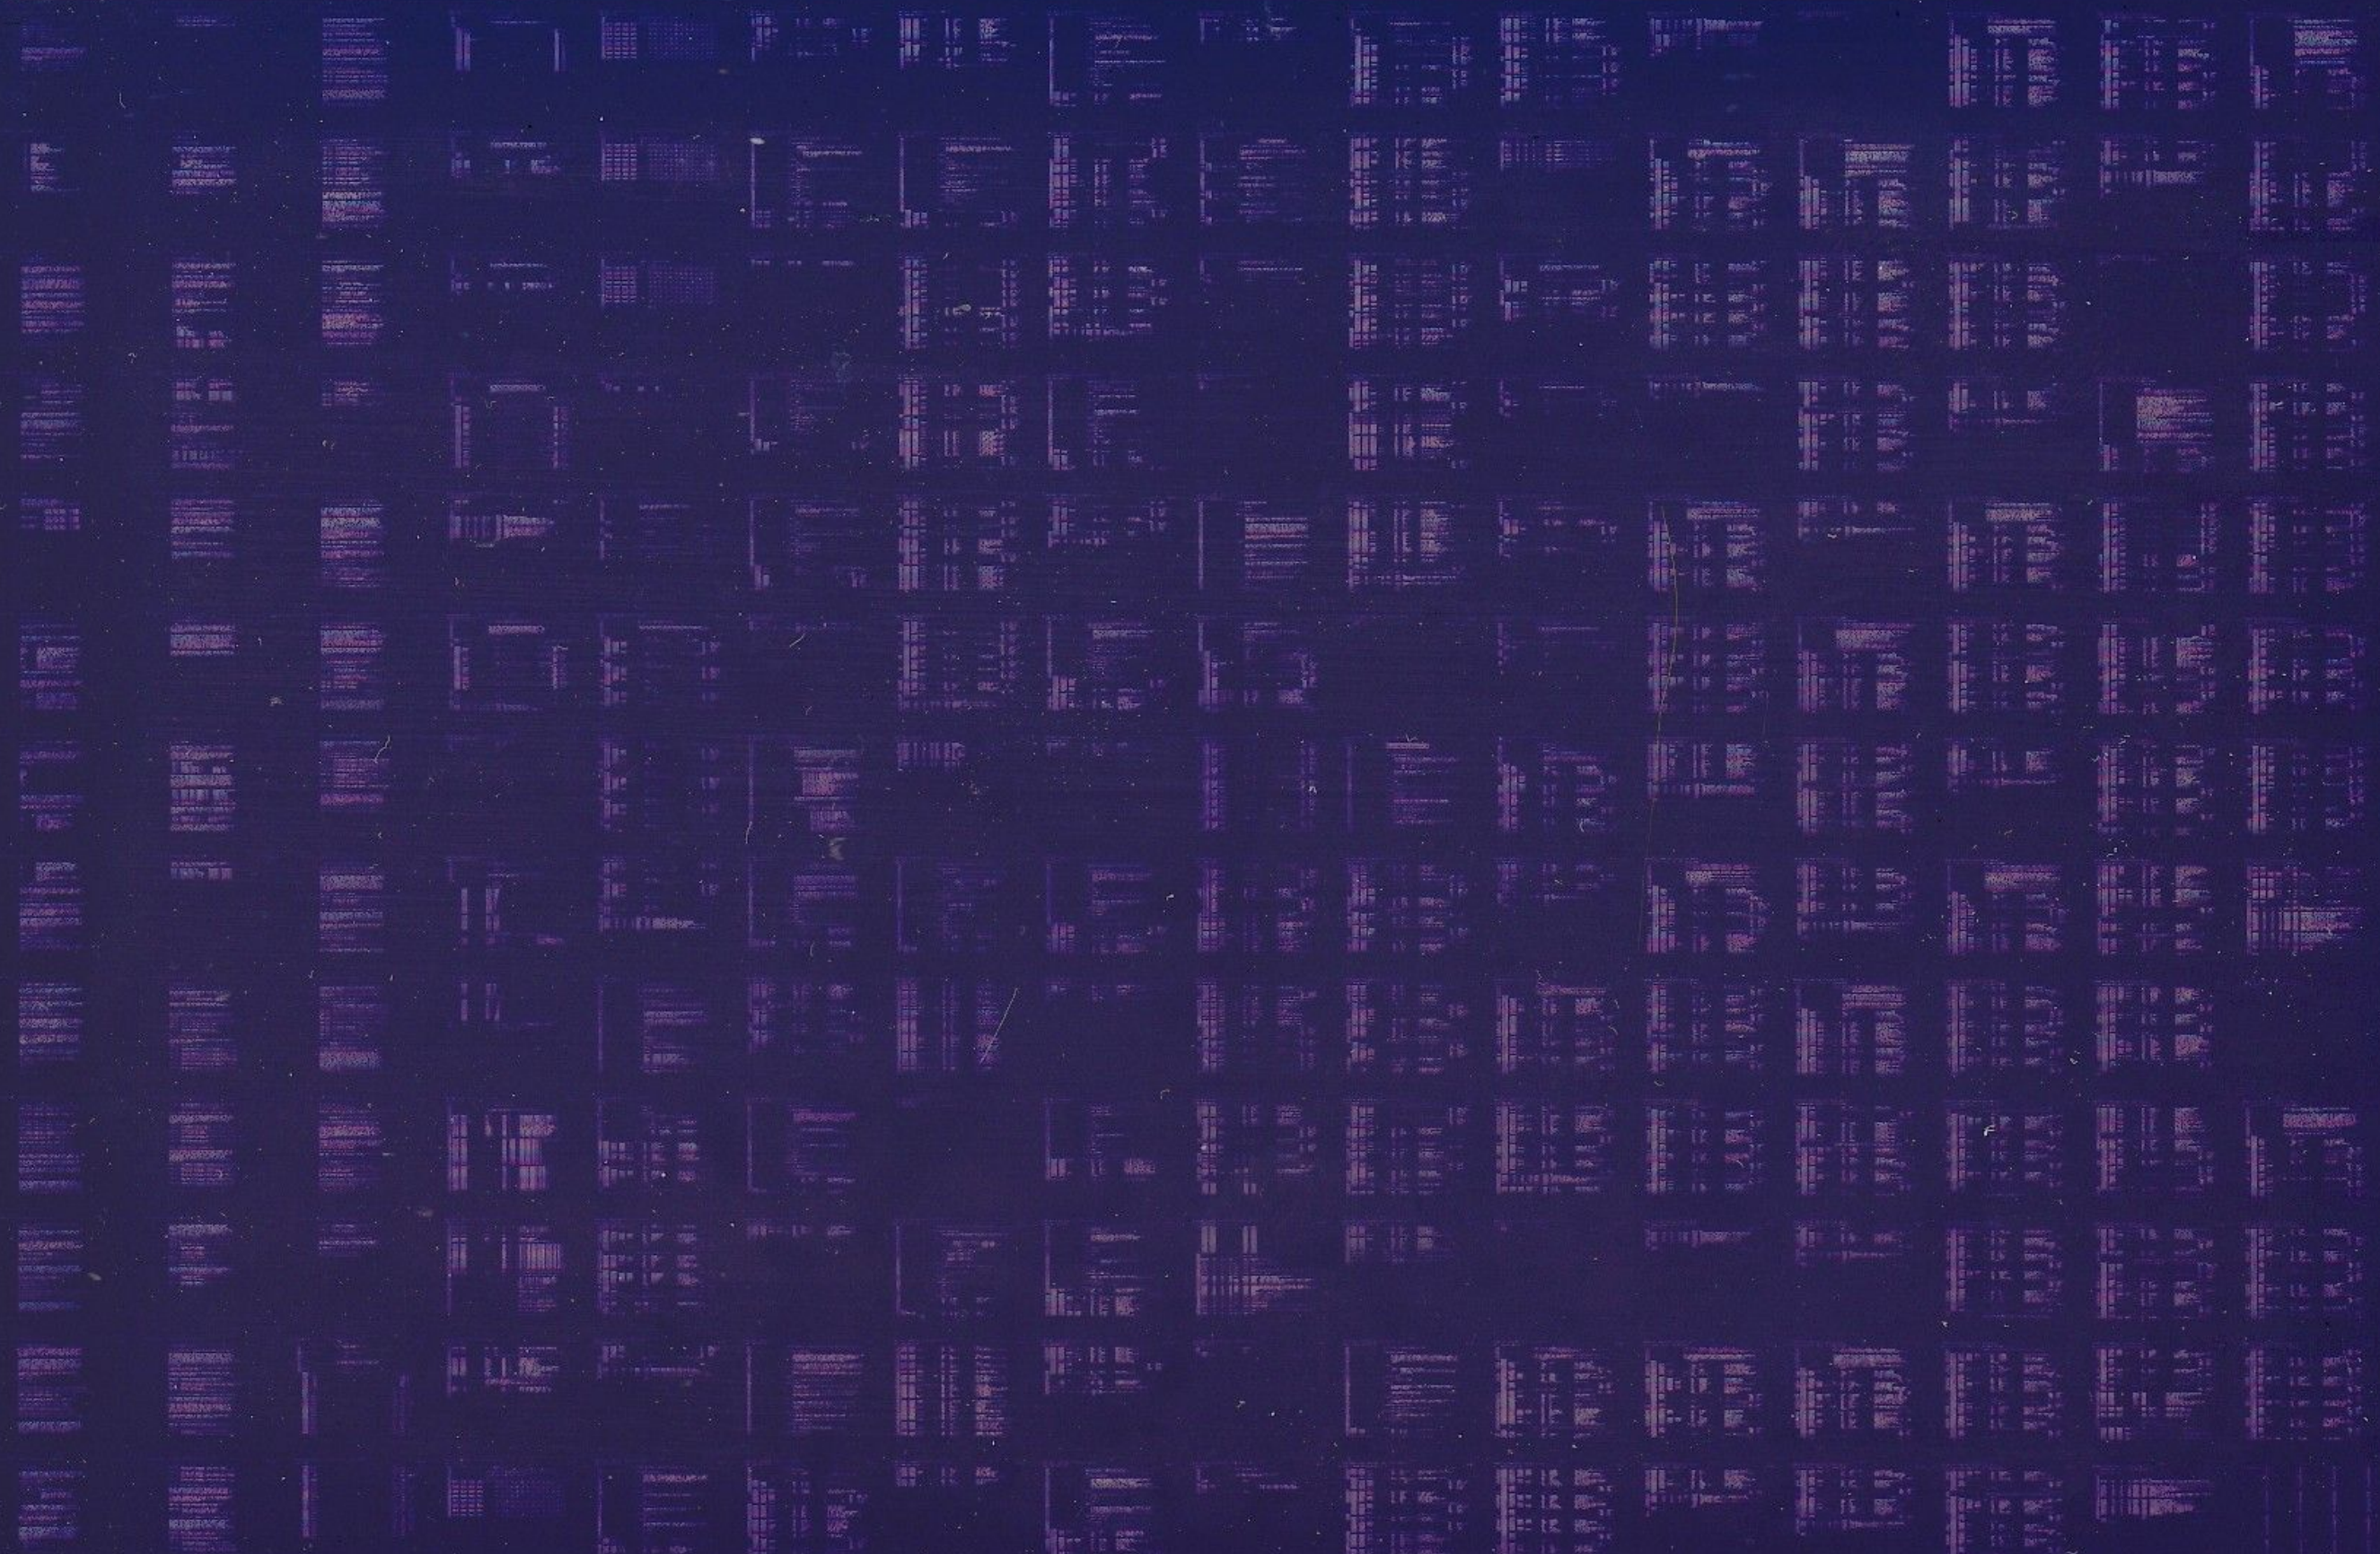

IDV 11
IAV 11

IDV/IAV-11 I/O DIAG
CZIXVRO

COPYRIGHT (c) 1983
AH-T507A-MC
FICHE 02 OF 02

JUL 1984
digital
Made In USA

Diagram 1	Diagram 2	Diagram 3	Diagram 4
Diagram 5	Diagram 6	Diagram 7	Diagram 8
Diagram 9	Diagram 10	Diagram 11	Diagram 12
Diagram 13	Diagram 14	Diagram 15	Diagram 16

.REM 6

IDENTIFICATION

PRODUCT CODE: AC T504A MC
 PRODUCT NAME: CZIXVA0 IDV/IAV 11 I/O MOD FAMILY DIAG
 PRODUCT DATE: OCT 1983
 MAINTAINER: CSS MUNICH
 AUTHORS: PETER SEEBACH, DAVE MUNTER

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY APPEAR IN THIS DOCUMENT.

NO RESPONSIBILITY IS ASSUMED FOR THE USE OR RELIABILITY OF SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL OR ITS AFFILIATED COMPANIES.

COPYRIGHT (C) 1983 BY DIGITAL EQUIPMENT CORPORATION

THE FOLLOWING ARE TRADEMARKS OF DIGITAL EQUIPMENT CORPORATION:

DIGITAL	PDP	UNIBUS	MA R
DEC	DECUS	DECTAPE	

TABLE OF CONTENTS

1.0	GENERAL INFORMATION
1.1	PROGRAM ABSTRACT
1.2	SYSTEM REQUIREMENTS
1.3	RUNNING THE DIAGNOSTIC ON A FALCON.
1.4	RELATED DOCUMENTS AND STANDARDS
1.5	DIAGNOSTIC HIERARCHY PREREQUISITES
1.6	EXECUTION TIME
2.0	OPERATING INSTRUCTIONS
2.1	COMMANDS
2.2	SWITCHES
2.3	FLAGS
2.4	HARDWARE QUESTIONS
2.5	SOFTWARE QUESTIONS
2.6	EXTENDED P TABLE DIALOGUE
2.7	CLOCK QUESTIONS
2.8	QUICK STARTUP PROCEDURE
2.9	USING THE XXDP. SETUP UTILITY
3.0	ERROR INFORMATION
4.0	PERFORMANCE AND PROGRESS REPORTS
4.1	PRINT COMMAND UTILIZATION
5.0	DEVICE INFORMATION TABLES
6.0	TEST SUMMARIES
6.1	INTERNAL LOGIC TESTS.
6.2	MANUFACTURING I/O TESTS.
6.3	FIELD INPUT/OUTPUT TESTS USING FIELD TEST CONNECTORS.
6.4	SPECIFICALLY SELECTABLE INPUT/OUTPUT TESTS.

1.0 GENERAL INFORMATION

1.1 PROGRAM ABSTRACT

THE CZIXV?? DIAGNOSTIC PROVIDES A SERIES OF TESTS TO VERIFY THE INTEGRITY AND FUNCTIONALITY OF THE IAV/IDV 11 FAMILY. THIS DIAGNOSTIC CAN BE USED BY FIELD SERVICE FOR FUNCTIONAL TESTING, BY THE ENGINEER FOR DESIGN TESTS, AND BY MANUFACTURING FOR CHECKOUT AND REPAIR.

THE FOLLOWING SPECIAL FEATURES ARE IMPLEMENTED.

THE DIAGNOSTIC IS SET UP FOR FIELD SERVICE SO THAT IF THE USER TYPES 'N' TO THE 'CHANGE HARDWARE' AND "CHANGE SOFTWARE" QUESTIONS, AN AUTOMATIC CONFIGURATION ROUTINE WILL BE RUN. THIS FINDS ALL DEVICES IN THE ADDRESS RANGE 171000 TO 171770, PRINTS A LIST OF ALL IAV/IDV11 DEVICES FOUND, AND CARRIES OUT THE SELECTED TESTS ON THESE DEVICES. THIS FEATURE HAS SPECIAL SIGNIFICANCE WHEN THE XXDP. SETUP UTILITY IS USED (SEE SECTION 2.9).

NOT ALL OF THE DIAGNOSTIC TESTS ARE RUN DURING EVERY PASS WHICH TO RUN IS DETERMINED BY THE DEVICE BEING TESTED AND BY THE ANSWERS TO THE SOFTWARE QUESTIONS. FOR MORE INFORMATION, SEE SECTION 6.0.

THE "PRINT" COMMAND CAN BE USED TO OBTAIN A LIST OF TEST TITLES, A PRINTOUT OF THE IAV/IDV 11 CONFIGURATION THAT THE DIAGNOSTIC IS USING, OR A PRINTOUT OF THE ERROR STATISTICS ACCUMULATED BY THE DIAGNOSTIC. HELP ON HOW TO REPEAT THE AUTOCONFIGURATION CAN ALSO BE OBTAINED. FOR MORE INFORMATION, SEE SECTION 4.0.

IF THE EVALUATE FLAG "EVL" IS SET, ANY UNIT ON WHICH MORE THAN 5 ERRORS ARE DETECTED FOLLOWING A "START" COMMAND IS DROPPED FROM TESTING.

THE PROGRAM SUPPORTS UP TO 16 UNITS, ALL SELECTED TESTS BEING RUN ON ONE UNIT BEFORE PROCEEDING TO THE NEXT UNIT.

THIS DIAGNOSTIC HAS BEEN WRITTEN FOR USE WITH THE DIAGNOSTIC RUNTIME SERVICES SOFTWARE (SUPERVISOR). THESE SERVICES PROVIDE THE INTERFACE TO THE OPERATOR AND TO THE SOFTWARE ENVIRONMENT. THIS PROGRAM CAN BE USED WITH XXDP..

FOR A COMPLETE DESCRIPTION OF THE RUNTIME SERVICES, REFER TO THE XXDP. USER'S MANUAL. THERE IS A BRIEF DESCRIPTION OF THE RUNTIME SERVICES IN SECTION 2 OF THIS DOCUMENT.

1.2 SYSTEM REQUIREMENTS

- A. LSI PROCESSOR WITH A MINIMUM OF 28K OF MEMORY.
- B. CONSOLE TERMINAL WITH INTERFACE ADDRESS 171560.

C. XXDP. LOAD DEVICE (RX,RK,RL ECT.)

D. IDV/IAV 11 MODULES TO BE CHECKED.

E. FIELD CHECKOUT : FOR DIGITAL MODULES, DIGITAL TEST CONNECTOR
2G-M002A.

FOR ANALOGUE MODULES, CALIBRATED VOLTAGE
SOURCE, MEASURING EQUIPMENT AND ANALOGUE
TEST CONNECTOR.

MANUFACTURING : FOR DIGITAL MODULES, DATA LOOPBACK EQUIPMENT.
CHECKOUT

FOR ANALOGUE MODULES, CALIBRATED VOLTAGE
SOURCE AND MEASURING EQUIPMENT.

1.3 RUNNING THE DIAGNOSTIC ON A FALCON

TO RUN THE DIAGNOSTIC ON A FALCON BASED SYSTEM, A BOOTSTRAP
PROGRAM IS NEEDED IN ADDITION TO THE ABOVE REQUIERMENTS.
THIS COULD BE IN THE FALCON MACRO ODT ROM (KXT11 A2), OR ON
A MXV-11 BOARD.

IF YOU HAVE INSTALLED THE FALCON MACRO-ODT ROM KXT11 A2 FOR
BOOTING THE XXDP. MEDIA WITH THE DIAGNOSTIC ON IT, SOME OF THE
IAV/IDV 11 DEFAULT ADDRESSES ARE USED, PREVENTING THE
DIAGNOSTICS AUTOMATIC CONFIGURATION ROUTINE FROM WORKING
CORRECTLY. TO USE THE DIAGNOSTIC, THE ADDRESSES MUST BE ENTERED
MANUALLY USING THE STARTUP QUESTIONS.

NOTE:

ONES THE XXDP. MEDIA IS BOOTED, THE CONSOLE "BREAK KEY SHOULD
NOT BE PRESSED AS IT MAY CAUSE ERROR MESSAGES TO BE PRINTED.

1.4 RELATED DOCUMENTS AND STANDARDS

XXDP. USER MANUAL (CHQUS)
IAV/IDV 11 OPTION DESCRIPTION YG C03NC 00

1.5 DIAGNOSTIC HIERARCHY PREREQUISITES

BEFORE RUNNING THIS DIAGNOSTIC, THE APPROPRIATE LSI 11 CPU,
MEMORY AND PERIPHERAL STANDARD DIAGNOSTICS SHOULD BE RUN TO VERIFY
CORRECT OPERATION OF THE SYSTEM.

1.6 EXECUTION TIME

EXECUTION TIMES LISTED BELOW ARE FOR A WHOLE PASS IN NO QUICK

VERIFY MODE WITH "UAM" FLAG SELECTED.
MANY OF THE TESTS NEED MANUAL INTERVENTIONS, SO IT MAKES NO
SENSE TO GIVE THE TIMES WITH UAM NOT SFT.
EXECUTION TIMES VARY WITH THE CPU TYPE. THE FOLLOWING TIMES
ARE TYPICAL ON A PDP-11/23 SYSTEM :

FIELD SERVICE TESTS	1 DIGITAL INPUT MODULE	18 SECONDS
	1 DIGITAL OUTPUT MODULE	18 SECONDS
	1 ANALOGUE INPUT MODULE	18 SECONDS
	1 ANALOGUE OUTPUT MODULE	18 SECONDS
MANUFACTURING TESTS (BASIC LOGIC ONLY)	1 DIGITAL INPUT MODULE	18 SECONDS
	1 DIGITAL OUTPUT MODULE	18 SECONDS
	1 ANALOGUE INPUT MODULE	18 SECONDS
	1 ANALOGUE OUTPUT MODULE	18 SECONDS
MANUFACTURING TESTS (INCL. LOOPBACK OR SETUP TESTS)	1 DIGITAL INPUT MODULE	270 SECONDS
	1 DIGITAL OUTPUT MODULE	110 SECONDS
	1 ANALOGUE INPUT MODULE	18 SECONDS
	1 ANALOGUE OUTPUT MODULE	18 SECONDS

2.0 OPERATING INSTRUCTIONS

THIS SECTION CONTAINS A BRIEF DESCRIPTION OF THE RUNTIME SERVICES. FOR DETAILED INFORMATION, REFER TO THE XXDP. USER'S MANUAL (CMQUS).

2.1 COMMANDS

THERE ARE ELEVEN LEGAL COMMANDS FOR THE DIAGNOSTIC RUNTIME SERVICES (SUPERVISOR). THIS SECTION LISTS THE COMMANDS AND GIVES A VERY BRIEF DESCRIPTION OF THEM. THE XXDP. USER'S MANUAL HAS MORE DETAILS.

COMMAND	EFFECT
START	START THE DIAGNOSTIC FROM AN INITIAL STATE
RESTART	START THE DIAGNOSTIC WITHOUT INITIALIZING
CONTINUE	CONTINUE AT TEST THAT WAS INTERRUPTED (AFTER ^C)
PROCEED	CONTINUE FROM AN ERROR HALT
EXIT	RETURN TO XXDP. MONITOR (XXDP. OPERATION ONLY!)
ADD	ACTIVATE A UNIT FOR TESTING (ALL UNITS ARE CONSIDERED TO BE ACTIVE AT START TIME)
DROP	DEACTIVATE A UNIT
PRINT	PRINT TEST TITLES, IAV/IDV-11 CONFIGURATION, ERROR STATISTICS, OR HOW TO RECONFIGURE. (SEE SECTION 4.0)
DISPLAY	TYPE A LIST OF ALL DEVICE INFORMATION
FLAGS	TYPE THE STATE OF ALL FLAGS (SEE SECTION 2.3)
ZFLAGS	CLEAR ALL FLAGS (SEE SECTION 2.3)

A COMMAND CAN BE RECOGNIZED BY THE FIRST THREE CHARACTERS. SO YOU MAY, FOR EXAMPLE, TYPE "STA" INSTEAD OF "START".

2.2 SWITCHES

THERE ARE SEVERAL SWITCHES WHICH ARE USED TO MODIFY SUPERVISOR OPERATION. THESE SWITCHES ARE APPENDED TO THE LEGAL COMMANDS. ALL OF THE LEGAL SWITCHES ARE TABULATED BELOW WITH A BRIEF DESCRIPTION OF EACH. IN THE DESCRIPTIONS BELOW, A DECIMAL NUMBER IS DESIGNATED BY 'DDDD'.

SWITCH	EFFECT
/TESTS:LIST	EXECUTE ONLY THOSE TESTS SPECIFIED IN THE LIST. LIST IS A STRING OF TEST NUMBERS. FOR EXAMPLE /TESTS:1:5:7-10. THIS LIST WILL CAUSE TESTS 1,5,7,8,9,10 TO BE RUN. ALL OTHER TESTS WILL NOT BE RUN.
/PASS:DDDD	EXECUTE DDDD PASSES (DDDD = 1 TO 64000)
/FLAGS:FLGS	SET SPECIFIED FLAGS. FLAGS ARE DESCRIBED IN SECTION 2.3.
/EOP:DDDD	REPORT END OF PASS MESSAGE AFTER EVERY DDDD PASSES ONLY. (DDDD = 1 TO 64000)
/UNIT:LIST	TEST/ADD/DROP ONLY THOSE UNITS SPECIFIED

IN THE LIST. LIST EXAMPLE /UNITS:0:5:10 12
 USE UNITS 0,5,10,11,12 (UNIT NUMBERS = 0-63)

EXAMPLE OF SWITCH USAGE:

START TESTS:1 5/PASS:1000/EOP:100

THE EFFECT OF THIS COMMAND WILL BE: 1) TESTS 1 THROUGH 5 WILL BE EXECUTED, 2) ALL UNITS WILL TESTED 1000 TIMES AND 3) THE END OF PASS MESSAGES WILL BE PRINTED AFTER EACH 100 PASSES ONLY. A SWITCH CAN BE RECOGNIZED BY THE FIRST THREE CHARACTERS. YOU MAY, FOR EXAMPLE, TYPE "/TES:1 5" INSTEAD OF "/TESTS:1-5".

BELOW IS A TABLE THAT SPECIFIES WHICH SWITCHES CAN BE USED BY EACH COMMAND.

	TESTS	PASS	FLAGS	EOP	UNITS
START	x	x	x	x	x
RESTART	x	x	x	x	x
CONTINUE		x	x	x	
PROCEED			x		
DROP					x
ADD					x
PRINT					
DISPLAY					x
FLAGS					
ZFLAGS					
EXIT					

2.3 FLAGS

FLAGS ARE USED TO SET UP CERTAIN OPERATIONAL PARAMETERS SUCH AS LOOPING ON ERROR. ALL FLAGS ARE CLEARED AT STARTUP AND REMAIN CLEARED UNTIL EXPLICITLY SET USING THE FLAGS SWITCH. FLAGS ARE ALSO CLEARED AFTER A START COMMAND UNLESS SET USING THE FLAG SWITCH. THE ZFLAGS COMMAND MAY ALSO BE USED TO CLEAR ALL FLAGS.

WITH THE EXCEPTION OF THE START AND ZFLAGS COMMANDS, NO COMMANDS AFFECT THE STATE OF THE FLAGS; THEY REMAIN SET OR CLEARED AS SPECIFIED BY THE LAST FLAG SWITCH.

FLAG	EFFECT
MOE	HALT ON ERROR CONTROL IS RETURNED TO RUNTIME SERVICES COMMAND MODE
LOE	LOOP ON ERROR
IER*	INHIBIT ALL ERROR REPORTS
IBE*	INHIBIT ALL ERROR REPORTS EXCEPT FIRST LEVEL (FIRST LEVEL CONTAINS ERROR TYPE, NUMBER, PC, TEST AND UNIT)
IXE*	INHIBIT EXTENDED ERROR REPORTS (THOSE CALLED BY PRINTX MACROS)
PRI	DIRECT MESSAGES TO LINE PRINTER
BOE	BELL ON ERROR

PNT PRINT TEST NUMBER AS TEST EXECUTES
 UAM UNATTENDED MODE (NO MANUAL INTERVENTION)
 (IF SET, TEST 15,16,17,18 WILL NOT RUN)
 ISR INHIBIT STATISTICAL REPORTS (NOT APPLICABLE)
 IDR INHIBIT PROGRAM DROPPING OF UNITS (NOT
 REQUIRED SINCE UNITS ARE ONLY DROPPED IF
 EVL IS USED.
 ADR EXECUTE AUTODROP CODE
 LOT LOOP ON TEST
 EVL EXECUTE EVALUATION IE. DROP UNIT IF MORE
 THAN 5 ERRORS OCCUR AFTER A START OR RESTART
 COMMAND.

*ERROR MESSAGES ARE DESCRIBED IN SECTION 3.1

SEE THE XXDP USER S MANUAL FOR MORE DETAILS ON FLAGS. YOU MAY SPECIFY MORE THAN ONE FLAG WITH THE FLAG SWITCH. FOR EXAMPLE, TO CAUSE THE PROGRAM TO LOOP ON ERROR, INHIBIT ERROR REPORTS AND TYPE A "BELL" ON ERROR, YOU MAY USE THE FOLLOWING STRING:

/FLAGS:LOE:IER:BOE

2.4 HARDWARE QUESTIONS

WHEN THE DIAGNOSTIC IS STARTED, THE RUNTIME SERVICES WILL PROMPT THE USER FOR HARDWARE INFORMATION BY TYPING 'CHANGE HW (L) ?'

THIS DIAGNOSTIC HAS BEEN PRELOADED SUCH THAT IF YOU ANSWER 'N' TO THE QUESTION, IT WILL AUTOMATICALLY SEARCH FOR UP TO 16 IAV/IDV11 UNITS IN THE ADDRESS RANGE 171000 TO 171770. DEFAULT VECTORS EQUAL TO THE LOW 9 ADDRESS BITS WILL BE ASSUMED FOR MODULES WITH ADDRESSES OVER 171400.

TO RUN THE DIAGNOSTIC WITH SPECIFIC MODULES WHICH NEED NOT BE IN THE ABOVE ADDRESS RANGE, YOU MUST ANSWER 'Y' TO THE 'CHANGE HARDWARE' QUESTION. THE RUNTIME SERVICES WILL THEN ASK FOR THE NUMBER OF UNITS (IN DECIMAL). TO KEEP DOWN MEMORY REQUIREMENTS, THE MAXIMUM NUMBER OF UNITS SUPPORTED IS 16. YOU WILL THEN BE ASKED THE FOLLOWING QUESTIONS FOR EACH UNIT:

MODE REGISTER ADDRESS (O) 171000 ?

IN REPLY, YOU SHOULD ENTER AN ADDRESS IN OCTAL IN THE RANGE 160000 TO 177770.

VECTOR ADDRESS (FOR OUTPUT MODULES, TYPE '0') (O) 0 ?

PRIORITY LEVEL (FOR OUTPUT MODULES, TYPE "0") (O) 4 ?
 (FOR LSI WITH FIXED PRI. USE LEVEL 4 ONLY)

FOR OUTPUT MODULES (WHICH HAVE NO INTERRUPT LOGIC) YOU SHOULD TYPE '0' FOR THE ABOVE TWO QUESTIONS. THIS CAUSES THE DIAGNOSTIC PRINT ROUTINE TO OUTPUT 'NONE' FOR THE VECTOR ADDRESS OF THE MODULES.

IS THIS MODULE CONNECTED TO ANOTHER VIA A LOOPBACK CABLE
(ONLY MANUFACTURING SHOULD ANSWER YES) (L) N ?

IF YOU ANSWER 'N' TO THIS QUESTION, NO MORE HARDWARE QUESTIONS
ARE ASKED. THIS WILL BE THE NORMAL ANSWER FOR FIELD SERVICE AS
SPECIAL SIGNAL LOOPING EQUIPMENT IS REQUIRED FOR LOOPBACK TESTS.
IF YOU ANSWER 'Y', THE FOLLOWING ARE ALSO ASKED:

LOW LEVEL INPUT FOR DIGITAL INPUT LOOPBACK TESTS
(FOR OUTPUT LOOPBACK TYPE "N") (L) N ?

THIS SELECTS WHETHER TO USE THE 0.5 VOLT OR 0-60 VOLT
SENSITIVITY OF THE DIGITAL INPUT MODULES FOR THE INPUT LOOPBACK TESTS.
TO FULLY TEST THE MODULES, SEVERAL PASSES SHOULD BE MADE AT BOTH
LEVELS. FOR OUTPUT LOOPBACK TESTS THE 0-60 VOLT SENSITIVITY MUST
BE USED ('N' HAS TO BE TYPED).
IF 'Y' IS TYPED, THE NEXT QUESTION IS OMITTED.
OTHERWISE, THE DIAGNOSTIC ASKS:

DEBOUNCE PERIOD FOR DIGITAL INPUT LOOPBACK TESTS
500US (0), 5 MS (1), 10MS (2) OR ALL (3) (S) 3 ?

IF THE HIGH LEVEL (0-60 VOLTS) IS USED ON THE DIGITAL INPUT
MODULES, THE HARDWARE CAN BE PROGRAMMED TO WAIT FOR A SPECIFIED
INTERVAL BEFORE INTERRUPTING WITH NEW INPUT DATA. THIS QUESTION
ALLOWS YOU TO SPECIFY THAT A PARTICULAR INTERVAL BE USED. FOR
FULL TESTING OF THE MODULES, "3" SHOULD BE TYPED.
FOR OUTPUT LOOPBACK TESTS THE ANSWERING OF THIS QUESTION HAS NO
AFFECT. A FIXED 500 US INPUT DEBOUNCE WILL ALWAYS BE USED.

OTHER MODULE MODE REGISTER ADDRESS (0) 171400 ?

IN REPLY, YOU SHOULD ENTER AN ADDRESS IN OCTAL IN THE RANGE
160000 TO 177770. THE MODULE AT THIS ADDRESS WILL BE USED AS THE
OTHER HALF OF A LOOPED PAIR, BUT WILL NOT ITSELF BE TESTED
UNLESS IT IS ALSO ONE OF THE MODULES SPECIFIED BY THE FIRST
HARDWARE QUESTION UNDER ANOTHER UNIT NUMBER. IF THE UNIT IS
CONNECTED TO SEVERAL OTHER MODULES, ONLY ONE WILL BE USED FOR
LOOPBACK TESTING.

OTHER MODULE VECTOR ADDRESS (IF OUTPUT MODULE, TYPE "0") (0) 400 ?

FOR OUTPUT MODULES (WHICH HAVE NO INTERRUPT LOGIC) YOU SHOULD
TYPE "0" FOR THE ABOVE QUESTION. THIS CAUSES THE DIAGNOSTIC
PRINT ROUTINE TO OUTPUT 'NONE' FOR THE VECTOR ADDRESS OF THE
MODULE.

THE FOLLOWING ILLUSTRATES THE RESPONSE TO THE HARDWARE
QUESTIONS. IN THIS EXAMPLE, THE USER RESPONSE IS UNDERLINED :

CHANGE HARDWARE (L) ? Y <CR>

#UNITS (D) ? 2 <CR>

UNIT 0

MODE REGISTER ADDRESS (0) 171000 ? CR

VECTOR ADDRESS (FOR OUTPUT MODULES, TYPE '0') (0) 0 ? <CR>
 PRIORITY LEVEL (FOR OUTPUT MODULES, TYPE "0") (0) 4 ? 0 <CR>
 (FOR LSI WITH FIXED PRI. USE LEVEL 4 ONLY)

IS THIS MODULE CONNECTED TO ANOTHER VIA A LOOPBACK CABLE
 (ONLY MANUFACTURING SHOULD ANSWER YES) (L) N ? <CR>

UNIT 1

MODE REGISTER ADDRESS (0) 171000 ? 171400 <CR>

VECTOR ADDRESS (FOR OUTPUT MODULES, TYPE RETURN) (0) 0 ? 400 <CR>

PRIORITY LEVEL (FOR OUTPUT MODULES, TYPE RETURN) (0) 0 ? 4 <CR>
 (FOR LSI WITH FIXED PRI. USE LEVEL 4 ONLY)

IS THIS MODULE CONNECTED TO ANOTHER VIA A LOOPBACK CABLE
 (ONLY MANUFACTURING SHOULD ANSWER YES) (L) N ? Y <CR>

LOW LEVEL INPUT FOR DIGITAL INPUT LOOPBACK TESTS
 (FOR OUTPUT LOOPBACK TYPE "N") (L) N ? <CR>

DEBOUNCE PERIOD FOR DIGITAL INPUT LOOPBACK TESTS
 500US (0), 5 MS (1), 10MS (2) OR ALL (3) (S) 3 ? <CR>

OTHER MODULE MODE REGISTER ADDRESS (0) 171000 ? <CR>

OTHER MODULE VECTOR ADDRESS (IF OUTPUT MODULE, TYPE '0') (0) 0 ? <CR>

IN THIS EXAMPLE, THE INTERNAL LOGIC OF AN OUTPUT MODULE AT ADDRESS 171000 WILL BE TESTED. THE MODULE WILL THEN BE USED AS THE SIGNAL SOURCE TO TEST AN INPUT MODULE AT ADDRESS 171400.

FOR THE DIGITAL LOOPBACK TESTS THE LOGIC LEVELS USED WILL BE 0 VOLTS FOR THE LOW LEVEL AND UP TO 60 VOLTS FOR THE HIGH LEVEL. IF INPUT LOOPBACK TESTS ARE RUNNING ALL DEBOUNCE INTERVALS WILL BE USED.

NOTICE THAT THE DEFAULT VALUE FOR THE PRIORITY LEVEL CHANGES WHEN A NON DEFAULT RESPONSE IS GIVEN. THIS IS TRUE FOR ALL OF THE HARDWARE QUESTIONS, SO BE CAREFUL WHEN SPECIFYING MULTIPLE UNITS!

2.5 SOFTWARE QUESTIONS

AFTER YOU HAVE ANSWERED THE HARDWARE QUESTIONS OR AFTER A RESTART OR CONTINUE COMMAND, THE RUNTIME SERVICES WILL ASK FOR SOFTWARE PARAMETERS. THESE PARAMETERS GOVERN THE DIAGNOSTIC OPERATING MODES. YOU WILL BE PROMPTED BY "CHANGE SW (L) ?". THE NORMAL RESPONSE FOR FIELD SERVICE IS TO TYPE 'N'. THIS CAUSES THE DEVICE INTERNAL LOGIC TESTS AND FIELD INPUT/OUTPUT TESTS TO BE RUN.
 IN A MANUFACTURING ENVIRONMENT, THE PARAMETERS SHOULD BE CHANGED

BY TYPING "Y". THE FOLLOWING QUESTIONS WILL THEN BE ASKED :

RUN MANUFACTURING TESTS (L) N ?

ANSWERING "N" TO THIS QUESTION CAUSES THE INTERNAL LOGIC AND FIELD INPUT/OUTPUT TESTS TO BE RUN. THE NEXT SOFTWARE QUESTION WILL BE "QUICK VERIFY ?". ANSWERING 'Y' CAUSES THE FOLLOWING QUESTIONS TO BE ASKED:

RUN LOOPBACK AND I/O TESTS (L) Y ?

IF "Y" IS TYPED, LOOPBACK TESTS WILL BE RUN FOR DIGITAL MODULES AND INPUT/OUTPUT TESTS WILL BE RUN FOR ANALOGUE MODULES. ANSWERING "N" CAUSES ONLY THE INTERNAL LOGIC TESTS TO BE RUN AND THE NEXT QUESTION TO BE 'QUICK VERIFY MODE ?'. THIS IS INTENDED FOR A QUICK TEST OF THE MODULE INTEGRITY BEFORE CONNECTING UP TEST EQUIPMENT FOR FULL TESTS.

FIRST PATTERN FOR DIGITAL LOOPBACK TESTS (O) 177777 ?
SECOND PATTERN FOR DIGITAL LOOPBACK TESTS (O) 0 ?

THESE WILL BE USED AS ALTERNATING DATA PATTERNS IN DIGITAL LOOPBACK TESTS 8 AND 9.

QUICK VERIFY MODE (L) N ?

IF THE ANSWER TO THIS QUESTION IS 'Y', ONLY ONE ITERATION OF EACH TEST WILL BE PERFORMED. OTHERWISE, SOME TESTING IS DONE MORE THAN ONCE. REPEATEDLY TESTING A PIECE OF LOGIC IN THIS WAY OFTEN DETECTS FAULTS WHICH A SINGLE TEST WOULD NOT. THEREFORE, TO FULLY TEST THE HARDWARE, THE ANSWER TO THIS QUESTION SHOULD BE "N".

THE FOLLOWING ILLUSTRATES THE RESPONSE TO THE SOFTWARE QUESTIONS. THE USER RESPONSE IS UNDERLINED:

CHANGE SOFTWARE (L) ? Y <CR>

RUN MANUFACTURING TESTS (L) N ? Y <CR>

RUN LOOPBACK AND I/O TESTS (L) Y ? Y <CR>

FIRST PATTERN FOR DIGITAL LOOPBACK TESTS (O) 177777 ? 125252 <CR>

SECOND PATTERN FOR DIGITAL LOOPBACK TESTS (O) 0 ? 52525 <CR>

QUICK VERIFY MODE (L) N ? <CR>

IN THIS EXAMPLE, FULL MANUFACTURING TESTS ARE TO BE RUN, INCLUDING LOOPBACK TESTS FOR ANY DIGITAL MODULES AND INPUT/OUTPUT TESTS FOR ANY ANALOGUE MODULES. IN THE DIGITAL LOOPBACK TESTS WITH ALTERNATING PATTERNS, THE USER HAS CHOSEN TO SWITCH ALTERNATE BITS OF THE SIGNAL RATHER THAN TO ACCEPT THE DEFAULT OF ALL ONES THEN ALL ZEROS

2.6 EXTENDED P TABLE DIALOGUE

WHEN YOU ANSWER THE HARDWARE QUESTIONS, YOU ARE BUILDING ENTRIES IN A TABLE THAT DESCRIBES THE DEVICES UNDER TEST. THE SIMPLEST WAY TO BUILD THIS TABLE IS TO ANSWER ALL QUESTIONS FOR EACH UNIT TO BE TESTED. IF YOU ARE TESTING SEVERAL IDENTICAL DEVICES, THIS BECOMES TEDIOUS SINCE MOST OF THE ANSWERS ARE THE SAME FOR EACH UNIT.

TO ILLUSTRATE A MORE EFFICIENT METHOD, SUPPOSE YOU ARE TESTING FOUR DIGITAL INPUT MODULES ALL CONNECTED VIA SPECIAL TEST EQUIPMENT TO ONE DIGITAL OUTPUT MODULE FOR LOOPBACK TESTS. YOU COULD ANSWER THE HARDWARE QUESTIONS FOR EACH OF THE FOUR UNITS AS SHOWN IN SECTION 2.4. HOWEVER, APART FROM THE "MODE REGISTER AND VECTOR ADDRESS", THE ANSWERS ARE THE SAME FOR ALL OF THE UNITS. THIS PROCEDURE IS NOT VERY EFFICIENT.

THE RUNTIME SERVICES CAN TAKE MULTIPLE UNIT SPECIFICATIONS HOWEVER. LET'S BUILD THE SAME TABLE USING THE MULTIPLE SPECIFICATION FEATURE:

CHANGE HARDWARE (L) ? Y <CR>

#UNITS (D) ? 4 <CR>

UNIT 0

MODE REGISTER ADDRESS (O) 171000 ? 171400,171410,171420,171430 <CR>

VECTOR ADDRESS (FOR OUTPUT MODULES, TYPE "O") (O) 0 ? 400,410,420,430 <CR>

PRIORITY LEVEL (FOR OUTPUT MODULES, TYPE "O") (O) 4 ? <CR>
(FOR LSI WITH FIXED PRI. USE LEVEL 4 ONLY)

IS THIS MODULE CONNECTED TO ANOTHER VIA A LOOPBACK CABLE
(ONLY MANUFACTURING SHOULD ANSWER YES) (L) N ? Y <CR>

LOW LEVEL INPUT FOR DIGITAL INPUT LOOPBACK TESTS
(FOR OUTPUT LOOPBACK TYPE "N") (L) N ? <CR>

DEBOUNCE PERIOD FOR DIGITAL INPUT LOOPBACK TESTS
500US (0), 5 MS (1), 10MS (2) OR ALL (3) (S) 3 ? <CR>

OTHER MODULE MODE REGISTER ADDRESS (O) 171400 ? 171000 <CR>

OTHER MODULE VECTOR ADDRESS (IF OUTPUT MODULE, TYPE "O") (O) 400 ? 0 <CR>

AS YOU CAN SEE IN THE ABOVE DIALOGUE, THE RUNTIME SERVICES WILL BUILD AS MANY ENTRIES AS IT CAN WITH THE INFORMATION GIVEN IN ANY ONE PASS THROUGH THE QUESTIONS. IN THIS EXAMPLE, THE 4 INPUT MODULES AT ADDRESSES 174000, 174010, 174020 AND 174030 ARE SET UP WITH VECTORS 400, 410, 420 AND 430. ALL HAVE PRIORITY LEVEL 4 AND ALL USE HIGH LEVEL WITH ALL THREE DEBOUNCE PERIODS AND ALL ARE CONNECTED TO THE SAME OUTPUT MODULE AT ADDRESS 171000.

2.7 CLOCK QUESTIONS

IF THERE IS NO LINE TIME CLOCK ON THE SYSTEM, THE USER IS ASKED TO TYPE 2 CHARACTERS 6 SECONDS APART ON THE CONSOLE. THIS SHOULD BE DONE AS ACCURATELY AS POSSIBLE SINCE THE INTERVAL IS USED BY THE DIAGNOSTIC TO CALCULATE VALUES FOR DEVICE TIMEOUTS.

2.8 QUICK START-UP PROCEDURE (XXDP.)

TO START UP THIS PROGRAM:

1. BOOT XXDP.
2. GIVE THE DATE AND ANSWER XXDP . QUESTIONS
3. TYPE "R ZIXV?? ." (NORMALLY THE REVISION AND PATCH LEVEL ARE TYPED INSTEAD OF THE QUESTION MARKS. THE FORM SHOWN HERE CAUSES THE LATEST VERSION TO BE RUN.)
4. TYPE STA. ' .
5. FOR STANDARD CONFIGURATIONS USING ADDRESSES 171000 TO 171770 ANSWER THE CHANGE HW QUESTION WITH ' . TO TEST SPECIFIC DEVICES OR THOSE AT NON-STANDARD ADDRESSES ANSWER "Y" AND ANSWER ALL OF THE HARDWARE QUESTIONS.
6. ANSWER THE "CHANGE SW" QUESTION WITH 'N"

WHEN YOU FOLLOW THIS PROCEDURE YOU WILL BE USING ONLY THE DEFAULTS FOR FLAGS AND SOFTWARE PARAMETERS. THESE DEFAULTS ARE DESCRIBED IN SECTIONS 2.3 AND 2.5.

2.9 USING THE XXDP. SETUP UTILITY

TO ENABLE THE DIAGNOSTIC TO AUTOMATICALLY ESTABLISH THE IXV11 CONFIGURATION IN THE FIELD, THE HARDWARE P TABLE IS PRESET FOR 16 UNITS, EACH WITH A MODE ADDRESS OF 0. IF THE XXDP. SETUP UTILITY IS USED TO PRESET THE P TABLE FOR A PARTICULAR CONFIGURATION, THEN THE DIAGNOSTIC WILL NOT AUTOMATICALLY ESTABLISH THE CONFIGURATION AT STARTUP. IN THIS CASE, THE DIAGNOSTIC CAN BE MADE TO DO AUTOMATIC CONFIGURATION BY ANSWERING THE HARDWARE QUESTIONS TO GIVE 16 UNITS WITH MODE ADDRESSES OF 0.

EG. CHANGE HARDWARE (L) ? Y <CR>

#UNITS (D) ? 16 <CR>

UNIT 0

MODE REGISTER ADDRESS (J) 0 ? 0.0.0.0.0.0.0.0.0.0.0.0.0.0.0.0.0.0 <CR>

VECTOR ADDRESS (FOR OUTPUT MODULES, TYPE 'O') (O) 0 7 0 <CR>

PRIORITY LEVEL (FOR OUTPUT MODULES, TYPE 'O') (O) 4 7 0 <CR>
(FOR LSI WITH FIXED PRI. USE LEVEL 4 ONLY)

IS THIS MODULE CONNECTED TO ANOTHER VIA A LOOPBACK CABLE
(ONLY MANUFACTURING SHOULD ANSWER YES) (L) N ? <CR>

3.0 ERROR INFORMATION

3.1 TYPES OF ERROR MESSAGES

THERE ARE THREE LEVELS OF ERROR MESSAGES THAT MAY BE ISSUED BY A DIAGNOSTIC : GENERAL, BASIC AND EXTENDED. GENERAL ERROR MESSAGES ARE ALWAYS PRINTED UNLESS THE "IER" FLAG IS SET (SECTION 2.3). THE GENERAL ERROR MESSAGE IS OF THE FORM :

```
NAME TYPE NUMBER ON UNIT NUMBER TST NUMBER PC:XXXXXX
ERROR MESSAGE
```

WHERE NAME = DIAGNOSTIC NAME
TYPE = ERROR TYPE (SYS FATAL, DEV FATAL, HARD OR SOFT)
NUMBER = ERROR NUMBER
UNIT NUMBER = 0 - N (N IS LAST UNIT IN PTABLE)
TST NUMBER = TEST AND SUBTEST WHERE ERROR OCCURRED
PC:XXXXXX = ADDRESS OF ERROR MESSAGE CALL

BASIC ERROR MESSAGES ARE MESSAGES THAT CONTAIN SOME ADDITIONAL INFORMATION ABOUT THE ERROR. THESE ARE ALWAYS PRINTED UNLESS THE "IER" OR "IBR" FLAGS ARE SET (SECTION 2.3). THESE MESSAGES ARE PRINTED AFTER THE ASSOCIATED GENERAL MESSAGE.

EXTENDED ERROR MESSAGES CONTAIN SUPPLEMENTARY ERROR INFORMATION SUCH AS REGISTER CONTENTS OR GOOD/BAD DATA. THESE ARE ALWAYS PRINTED UNLESS THE "IER", "IBR" OR "IXR" FLAGS ARE SET (SECTION 2.3). THESE MESSAGES ARE PRINTED AFTER THE ASSOCIATED GENERAL ERROR MESSAGE AND ANY ASSOCIATED BASIC ERROR MESSAGE.

3.2 SPECIFIC ERROR MESSAGES

ALL SPECIFIC ERROR MESSAGES ARE EXPLAINED WITH THE TEST DESCRIPTIONS IN SECTION 6.0.

4.0 PERFORMANCE AND PROGRESS REPORTS

AT THE END OF EACH PASS, THE PASS COUNT IS GIVEN ALONG WITH THE TOTAL NUMBER OF ERRORS REPORTED SINCE THE DIAGNOSTIC WAS STARTED. THE "EOP" SWITCH CAN BE USED TO CONTROL HOW OFTEN THE END OF PASS MESSAGE IS PRINTED. SECTION 2.2 DESCRIBES SWITCHES.

4.1 PRINT COMMAND UTILIZATION

THE "PRINT" COMMAND CAN BE USED TO FIND OUT HOW MANY ERRORS HAVE OCCURRED ON EACH UNIT SINCE THE DIAGNOSTIC WAS STARTED.

IN ADDITION, THE COMMAND CAN BE USED TO DISPLAY THE CONFIGURATION THAT THE DIAGNOSTIC IS CURRENTLY USING, TO PRINT A LIST OF TEST TITLES, OR TO SHOW HOW TO MAKE THE DIAGNOSTIC REESTABLISH THE CONFIGURATION. THE FOLLOWING EXAMPLES SHOW HOW THE PRINT COMMAND CAN BE USED. USER INPUT IS UNDERLINED :

PRINT <CR>

TYPE T,R,C,S OR HELP (S) H ? <CR>

THE FOLLOWING COMMANDS ARE ACCEPTED :-

T PRINT TEST TITLES
 R PRINT HOW TO REESTABLISH THE SYSTEM CONFIGURATION
 C PRINT CONFIGURATION TABLE CURRENTLY USED BY DIAGNOSTIC
 S PRINT STATISTICS TABLE
 TYPE T,R,C,S OR HELP (S) H ?

IF YOU TYPE "H", "HELP" OR ANY CHARACTER OTHER THEN "T", "R", "C" OR "S", THE ROUTINE PRINTS THE ABOVE HELP MESSAGE LISTING THE ACCEPTABLE COMMANDS.

PRINT <CR>

TYPE T,R,C,S OR HELP (S) H ? T <CR>

TEST TITLES.

1 REGISTER NXM TEST	
2 RESET TEST	
3 R W BIT TEST	
4 INTERNAL INTERRUPT TEST	DIGITAL INPUT
5 INTERNAL LOGIC TEST	ANALOGUE INPUT
6 INTERNAL INTERRUPT TEST	ANALOGUE INPUT
7 INTERNAL LOGIC TEST	ANALOGUE OUTPUT
8 DIGITAL INPUT LOOPBACK TEST	PATTERN PAIR SELECTABLE
9 DIGITAL OUTPUT LOOPBACK TEST	PATTERN PAIR SELECTABLE
10 DIGITAL INPUT LOOPBACK TEST	RANDOM PATTERN
11 DIGITAL OUTPUT LOOPBACK TEST	RANDOM PATTERN
12 DIGITAL INPUT LOOPBACK TEST	SLIDING PATTERN
13 DIGITAL OUTPUT LOOPBACK TEST	SLIDING PATTERN

F2

- 14 DIGITAL INPUT LOOPBACK TEST INTERRUPT LINE TEST
- 15 ANALOGUE INPUT TEST - FIELD AND MANUFACTURING
- 16 ANALOGUE OUTPUT TEST FIELD AND MANUFACTURING
- 17 DIGITAL INPUT TEST FIELD TEST
- 18 DIGITAL OUTPUT TEST FIELD TEST
- 19 DIGITAL INPUT TEST - SPECIFICALLY SELECTABLE
- 20 DIGITAL OUTPUT TEST SPECIFICALLY SELECTABLE
- 21 ANALOGUE INPUT (DYNAMIC) - SPECIFICALLY SELECTABLE
- 22 ANALOGUE OUTPUT (DYNAMIC) SPECIFICALLY SELECTABLE
- 23 ANALOGUE OUTPUT (CALIBR.) SPECIFICALLY SELECTABLE
- 24 ANALOGUE INPUT (CALIBR.) SPECIFICALLY SELECTABLE
- 25 VISUAL LED TEST SPECIFICALLY SELECTABLE

DR> PRINT <CR>

TYPE T,R,C,S OR HELP (S) T ? S <CR>

IDV/IAV 11 MODULE STATISTICS.

UNIT ERRORS DROPPED

0	0	NO
1	6	YES
2	UNTESTED	NO

HERE, UNIT 0 HAS SHOWN NO FAULTS, UNIT 1 HAS HAD 6 ERRORS AND BEEN DROPPED FROM TESTING, AND UNIT 2 HAS NOT YET BEEN TESTED. UNIT 2 IS SHOWN AS NOT DROPPED. IF THE DIAGNOSTIC HAD NOT YET BEEN STARTED, THE UNIT WOULD STILL NOT BE SHOWN AS DROPPED (UNLIKE THE DISPLAY COMMAND).

DR> PRINT <CR>

TYPE T,R,C,S OR HELP (S) S ? C <CR>

IDV/IAV 11 MODULE CONFIGURATION.

UNIT	ADDRESS	VECTOR ASSUMED	ID/MODE	MODULE TYPE	LOOPED	TO	AT	VECTOR
0	171000	NONE	060/000	DIG. OUT	YES	DIG. IN	171400	400
1	171400	400	030/002	DIG. IN	YES	DIG. OUT	171000	NONE
2	171010	NONE	260/000	AN. OUT	NO			
3	171410	410	100/000	AN. IN	NO			
4	171700	NONE	320/000	*** CANNOT BE TESTED WITH THIS DIAGNOSTIC ***				
5	171710	NONE	UNKNOWN	UNKNOWN	NO			
6	171020	NONE	060/000	DIG. OUT	YES	UNKNOWN	171420	420

THE THIRD COLUMN IS LABELED "VECTOR ASSUMED" FOR THE FOLLOWING REASONS. IF THE DIAGNOSTIC IS CONFIGURED AUTOMATICALLY BY ANSWERING 'NO' TO THE 'CHANGE HARDWARE' QUESTION, DEVICES WITH ADDRESSES LOWER THAN 171400 ARE ASSUMED TO HAVE NO VECTOR. ABOVE

THIS ADDRESS, THE VECTOR IS ASSUMED TO BE THE SAME AS THE LOW 9 BITS OF THE ADDRESS. IF THE HARDWARE QUESTIONS WERE ANSWERED, THE VECTOR IS PRINTED AS IT WAS TYPED, EXCEPT THAT ZERO VECTORS ARE PRINTED AS "NONE".

THE ABOVE EXAMPLE IS SELECTED TO ILLUSTRATE THE DIFFERENT FEATURES OF THE CONFIGURATION PRINTOUT.

UNIT 4 HAS AN ID CODE GREATER THAN 300. IT IS THEREFORE NOT ONE OF THE IXV11 DEVICES RECOGNISED BY THE DIAGNOSTIC. ALTHOUGH A WARNING IS PRINTED, BASIC LOGIC TESTS WILL BE RUN ON THE UNIT.

IF ADDRESSING THE UNIT UNDER TEST CAUSES A BUS TIMEOUT, THEN 'UNKNOWN' IS PRINTED FOR THE ID/MODE AND MODULE TYPE. THIS IS SHOWN FOR UNIT 5. THIS WOULD NORMALLY ONLY OCCUR IF THE ADDRESS WAS INCORRECTLY TYPED IN THE HARDWARE QUESTIONS.

IF ADDRESSING THE OTHER MODULE CAUSES A BUS TIMEOUT, THEN "UNKNOWN" IS PRINTED FOR THE MODULE TYPE OF THE OTHER MODULE IN THE COLUMN HEADED "TO". THIS IS SHOWN FOR UNIT 6. THIS WOULD NORMALLY ONLY OCCUR IF THE ADDRESS WAS INCORRECTLY TYPED IN THE HARDWARE QUESTIONS.

DR> PRINT <CR>

TYPE T,R,C,S OR HELP (S) C ? R <CR>

TO REESTABLISH THE SYSTEM CONFIGURATION, ANSWER THE HARDWARE QUESTION TYPING '0' AS THE MODE ADDRESS FOR 16 UNITS.

EG. MODE REGISTER ADDRESS (0) 0 ? 0.....

TYPING "R" GIVES YOU INFORMATION ON HOW TO REESTABLISH THE SYSTEM CONFIGURATION. THIS IS NECESSARY IF THE H/W QUESTIONS HAVE BEEN ANSWERED OR THE HARDWARE ITSELF HAS BEEN CHANGED AND YOU WANT TO FIND OUT WHAT IS IN THE SYSTEM WITHOUT REBOOTING THE DIAGNOSTIC.

5.0 DEVICE INFORMATION TABLES
.....

THE HARDWARE P TABLES CONTAIN 6 WORDS FOR EACH DEVICE. THESE ARE USED TO SAVE THE ANSWERS TO THE STARTUP HARDWARE QUESTIONS, AND CAN BE DISPLAYED ON THE CONSOLE BY USING EITHER THE "DISPLAY" COMMAND DESCRIBED IN SECTION 2.1 OR THE "PRINT" COMMAND DESCRIBED IN SECTION 4.

THE HARDWARE P TABLE IS SET UP FOR FIELD SERVICE FOR 16 UNITS, EACH WITH A MODE ADDRESS OF 0. IF THE USER TYPES "NO" TO THE "CHANGE HARDWARE" AND "CHANGE SOFTWARE" QUESTIONS, AN AUTOMATIC CONFIGURATION ROUTINE WILL BE RUN. THIS FINDS ALL DEVICES IN THE ADDRESS RANGE 171000 TO 171770, PRINTS A LIST OF ALL IXV11 DEVICES FOUND, AND CARRIES OUT THE SELECTED TESTS ON THESE DEVICES. THE HARDWARE TABLE SET UP BY THE CONFIGURATION ROUTINE REMAINS IN EFFECT UNTIL CHANGED BY THE HARDWARE QUESTIONS, EVEN IF THE HARDWARE CONFIGURATION ITSELF IS ALTERED.

USING THE XXDP. SETUP UTILITY, THE TABLES CAN BE PRELOADED TO CONTAIN INFORMATION FOR SPECIFIC SYSTEMS. HOWEVER, SPECIAL CARE MUST BE TAKEN IF IT IS DESIRED TO RESTORE THE SELF CONFIGURING FEATURE OF THE DIAGNOSTIC. SEE SECTION 2.9.

6.0 TEST SUMMARIES

TESTS ARE DIVIDED INTO 4 TYPES INTERNAL LOGIC, MANUFACTURING INPUT/OUTPUT, FIELD INPUT/OUTPUT USING FIELD TEST CONNECTORS, AND SPECIFICALLY SELECTABLE INPUT/OUTPUT.

INTERNAL LOGIC TESTS PERFORM DETAILED CHECKS ON EACH SEPARATELY ACCESSABLE PART OF THE DEVICE AND GIVE ERROR MESSAGES WHICH HELP THE FAULTY COMPONENTS TO BE IDENTIFIED. OUTPUT LINES ARE AFFECTED BUT NO TEST CONNECTORS ARE REQUIRED. THESE TESTS ARE ALWAYS RUN FOR FIELD AND MANUFACTURING.

TEST 1 :	REGISTER NXM TEST	
TEST 2 :	RESET TEST	
TEST 3 :	R-W BIT TEST	
TEST 4 :	INTERNAL INTERRUPT TEST	- DIGITAL INPUT
TEST 5 :	INTERNAL LOGIC TEST	- ANALOGUE INPUT
TEST 6 :	INTERNAL INTERRUPT TEST	ANALOGUE INPUT
TEST 7 :	INTERNAL LOGIC TEST	ANALOGUE OUTPUT

MANUFACTURING INPUT/OUTPUT TESTS ARE RUN IF THE USER ANSWERS 'YES' TO THE "RUN MANUFACTURING TESTS" AND "RUN LOOPBACK AND I/O TESTS" SOFTWARE QUESTIONS. THE USER MUST EITHER CONNECT TEST CABLES BETWEEN THE MODULE BEING TESTED AND THE "OTHER" MODULE SPECIFIED IN THE HARDWARE QUESTIONS, OR FOR ANALOGUE MODULES, CONNECT VOLTAGE SOURCES OR MEASURING EQUIPMENT. THE ANALOGUE TESTS WILL ONLY BE CARRIED OUT IF THE "UNATTENDED MODE" FLAG IS NOT SELECTED.

TEST 8 :	DIGITAL INPUT LOOPBACK TEST	- PATTERN PAIR SELECTABLE
TEST 9 :	DIGITAL OUTPUT LOOPBACK TEST	PATTERN PAIR SELECTABLE
TEST10 :	DIGITAL INPUT LOOPBACK TEST	- RANDOM PATTERN
TEST11 :	DIGITAL OUTPUT LOOPBACK TEST	RANDOM PATTERN
TEST12 :	DIGITAL INPUT LOOPBACK TEST	SLIDING PATTERN
TEST13 :	DIGITAL OUTPUT LOOPBACK TEST	SLIDING PATTERN
TEST14 :	DIGITAL INPUT LOOPBACK TEST	INTERRUPT LINE TEST
TEST15 :	ANALOGUE INPUT TEST	FIELD AND MANUFACTURING
TEST16 :	ANALOGUE OUTPUT TEST	FIELD AND MANUFACTURING

FIELD INPUT/OUTPUT TESTS ARE RUN IF THE USER ANSWERS 'NO' TO THE "MANUFACTURING" SOFTWARE QUESTION AND THE "UNATTENDED MODE" FLAG IS NOT SELECTED. THE TESTS GUIDE THE USER THROUGH THE SEQUENCE NECESSARY TO TEST THE USER LINES OF EACH DEVICE USING THE TEST CONNECTORS.

TEST15 :	ANALOGUE INPUT TEST	FIELD AND MANUFACTURING
TEST16 :	ANALOGUE OUTPUT TEST	FIELD AND MANUFACTURING
TEST17 :	DIGITAL INPUT TEST	FIELD TEST
TEST18 :	DIGITAL OUTPUT TEST	FIELD TEST

SPECIFICALLY SELECTABLE TESTS ARE ONLY RUN IF THE USER SELECTS THEM BY TEST NUMBER (IE, NOT IN SEQUENCE WITH OTHER TESTS). THEY ALLOW THE USER TO READ FROM OR WRITE TO THE USER INTERFACE OF THE CHOSEN DEVICE. FOR ANALOGUE DEVICES, THE PROGRAM ALSO PERFORMS THE CONVERSIONS BETWEEN BIT PATTERNS AND VOLTAGES. ONCE

STARTED, THESE TESTS WILL RUN INDEFINATELY UNTIL "CONTROL C IS TYPED. AT THIS POINT, THEY CAN BE RESTARTED BY TYPING 'CONTINUE', OR ANOTHER TEST CAN BE SELECTED.

TEST19	: DIGITAL INPUT TEST	- SPECIFICALLY SELECTABLE
TEST20	: DIGITAL OUTPUT TEST	- SPECIFICALLY SELECTABLE
TEST21	: ANALOGUE INPUT (DYNAMIC)	- SPECIFICALLY SELECTABLE
TEST22	: ANALOGUE OUTPUT (DYNAMIC)	- SPECIFICALLY SELECTABLE
TEST23	: ANALOGUE OUTPUT (CALIBR.)	- SPECIFICALLY SELECTABLE
TEST24	: ANALOGUE INPUT (CALIBR.)	SPECIFICALLY SELECTABLE
TEST25	: VISUAL LED TEST	SPECIFICALLY SELECTABLE

6.1 INTERNAL LOGIC TESTS.
.....

TEST 1 - REGISTER NXM TEST.

THIS TEST CHECKS THAT ACCESSING THE DEVICE MODE, DATA, CSA AND CSB REGISTERS (IF PRESENT) DOES NOT CAUSE A NXM TRAP. THE FOLLOWING ERROR MAY BE PRINTED :

ERROR 101 : REGISTER ADDRESSING ERROR - TRAP TO 4
REGISTER AT XXXXXX DOES NOT RESPOND

THIS COULD MEAN THAT THE DEVICE ADDRESS SWITCH IS INCORRECTLY SET, THAT THE ADDRESS WAS ENTERED INCORRECTLY IN THE STARTUP QUESTIONS, OR THAT THE DEVICE DOES NOT RESPOND.

TEST 2 - RESET TEST.

THIS TEST CHECKS THAT THE DEVICE REGISTERS ARE CORRECTLY SET OR RESET AFTER A BUS RESET. IN THE MOD REGISTER, ONLY THE LED BIT IS TESTED.

ERROR 200 : SPECIAL MODULE FOUND, CAN'T BE TESTED WITH THIS DIAGNOSTIC

ERROR 201 : LED BIT IN MOD REGISTER NOT CLEARED AFTER BUS RESET

ERROR 202 : LED BIT IN MOD REGISTER CAN'T BE SET

ERROR 203 : REGISTER INCORRECT AFTER BUS RESET
ADDRESS:AAAAAA, GOOD:GGGGGG, BAD:BBBBBB

TEST 3 REGISTER R/W BIT TEST.

THIS TEST CHECKS THAT THE READ/WRITE BITS OF EACH REGISTER CAN ALL BE SET, ALL CLEARED AND INDIVIDUALLY SET. THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 300 : SPECIAL MODULE FOUND CAN'T BE TESTED WITH THIS DIAGNOSTIC

ERROR 301 : REGISTER READ/WRITE BITS COULD NOT BE SET
ADDRESS:AAAAAA, GOOD:GGGGGG, BAD:BBBBBB, R/W BITS:RRRRRR

ERROR 302 : REGISTER READ/WRITE BITS COULD NOT BE CLEARED
ADDRESS:AAAAAA, GOOD:GGGGGG, BAD:BBBBBB, R/W BITS:RRRRRR

ERROR 303 : REGISTER READ/WRITE BITS COULD NOT BE INDIVIDUALLY SET
ADDRESS:AAAAAA, GOOD:GGGGGG, BAD:BBBBBB, R/W BITS:RRRRRR

ERROR 304 : MOD REGISTER CONTENTS OF DIGITAL INPUT MODULE INCORRECT
ADDRESS:AAAAAA, GOOD:GGGGGG, BAD:BBBBBB

ERROR 305 : MOD REGISTER CONTENTS OF DIGITAL INPUT MODULE INCORRECT
RT1 BIT NOT SET
ADDRESS:AAAAAA, GOOD:GGGGGG, BAD:BBBBBB

ERROR 306 : MOD REGISTER CONTENTS OF DIGITAL INPUT MODULE INCORRECT
RTO * RT1 NOT SET
ADDRESS:AAAAAA, GOOD:GGGGGG, BAD:BBBBBB

TEST 4 INTERNAL INTERRUPT LOGIC TEST - DIGITAL INPUT.

THIS TEST CHECKS THAT THE INTERNAL INTERRUPT LOGIC IS ABLE TO CAUSE AN INTERRUPT USING THE VECTOR AND PRIORITY LEVEL SELECTED IN THE START UP QUESTIONS. THE INTERRUPT IS GENERATED BY SETTING THE INTERRUPT ENABLE AND THEN INTERRUPT TEST BITS. AFTER THE INTERRUPT, THE CS CONTENTS ARE ALSO CHECKED. THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 401 : NO INTERRUPT AFTER SETTING EI * 1ST IR BIT IN CSA
CSA REGISTER CONTENTS :DDDDDD

ERROR 402 : INTERRUPT DID NOT OCCUR AT THE SELECTED PRIORITY LEVEL
GOOD: GGGGGG, BAD :BBBBBB

ERROR 403 : CSA REGISTER OF DIGITAL INPUT MODULE INCORRECT AFTER INTERRUPT
GOOD: GGGGGG, BAD :BBBBBB

ERROR 404 : IR15 IN CSA REGISTER OF DIGITAL INPUT NOT CLEARED AFTER INTERRUPT
GOOD: GGGGGG, BAD :BBBBBB

TEST 5 INTERNAL LOGIC TEST - ANALOGUE INPUT.

THIS TEST PERFORMS A PSEUDO CONVERSION ON EACH CHANNEL THAT IS FOUND, BY SETTING THE A/D START BIT AND THEN POLLING THE 'DONE' BIT TO CHECK THAT THE CONVERSION HAS BEEN COMPLETED WITHIN THE ALLOWED TIMEOUT PERIOD (AT LEAST 10MS). BEFORE A/D START IS SET, A CHECK IS MADE THAT THE DONE BIT IS CLEARED. THE ERROR CONDITIONS ARE ALSO CHECKED, BUT NO CHECK IS MADE ON THE RESULTING INPUTS OR ON THE GAIN SETTING. THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 501 : CSA CONTENTS INCORRECT AFTER READ DAT AND CLEAR CSA
GOOD:GGGGGG, BAD:BBBBBB, ADDRESSED CHANNEL IS : CCC

ERROR 502 : DONE BIT IN CSA NOT SET (TIMEOUT) AFTER A/D START
GOOD:GGGGGG, BAD:BBBBBB, ADDRESSED CHANNEL IS : CCC

ERROR 503 : ERR BIT IN CSA NOT SET AFTER A/D STAR WHEN DONE IS SET
GOOD:GGGGGG, BAD:BBBBBB, ADDRESSED CHANNEL IS : CCC

ERROR 504 : ERR, DONE BIT IN CSA NOT CLEARED AFTER READ DAT REG.
GOOD:GGGGGG, BAD:BBBBBB, ADDRESSED CHANNEL IS : CCC

ERROR 505 : ERR BIT IN CSA NOT SET AFTER LOADING A/D START TWICE
GOOD:GGGGGG, BAD:BBBBBB, ADDRESSED CHANNEL IS : CCC

TEST 6 INTERNAL INTERRUPT LOGIC TEST ANALOGUE INPUT.

THIS TEST CHECKS THAT THE INTERNAL INTERRUPT LOGIC IS ABLE TO CAUSE A DONE AND AN ERROR INTERRUPT USING THE VECTOR AND PRIORITY LEVEL SELECTED IN THE START UP QUESTIONS. THE DONE INTERRUPT IS GENERATED BY SETTING THE INTERRUPT ENABLE BIT AND THE A/D START BIT. THE ERROR INTERRUPT IS GENERATED BY SETTING THE A/D START BIT TWICE. A TIME OUT IS GENERATED IF THE INTERRUPT HAS NOT OCCURED WITHIN THE ALLOWED TIMEOUT PERIOD. THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 601 : TIME OUT DONE BIT IN CSA NOT SET AFTER A/D START AND 606

ERROR 602 : NO INTERRUPT AFTER SETTING EI + A/D START IN CSA

ERROR 603 : PRIORITY LEVEL INCORRECT
GOOD:GGGGGG, BAD:BBBBBB

ERROR 604 : CSA CONTENTS INCORRECT AFTER CONVERSION
GOOD:GGGGGG, BAD:BBBBBB

ERROR 605 : ERROR INTERRUPT OCCURRED

ERROR 607 : NO ERROR INTERRUPT AFTER TWO A/D STARTS

TEST 7 INTERNAL LOGIC TEST ANALOGUE OUTPUT.

THIS TEST PERFORMS A CONVERSION ON EACH AVAILABLE CHANNEL, LOADING THE DAT REGISTER AND CHECKING THAT THE CONVERSIONS ARE COMPLETED WITHIN THE ALLOWED TIMEOUT PERIOD (READING THE READY BIT AFTER 150 US). THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 701 : CSA CONTENTS INCORRECT AFTER LOADING NEW CHANNEL (IGNORE OPL BIT)
GOOD:GGGGGG, BAD:BBBBBB

ERROR 702 : CSA CONTENTS INCORRECT AFTER LOADING DAT REG.
READY TIMEOUT WAS 150 US
GOOD:GGGGGG, BAD:BBBBBB

6.2 MANUFACTURING I/O TESTS.

TEST 8 - DIGITAL INPUT LOOPBACK WITH SELECTABLE DATA PATTERN PAIR.

DATA TRANSFERS ARE MADE BETWEEN THE MODULE UNDER TEST (IN THIS TEST A DIGITAL INPUT) AND THE MODULE SPECIFIED AS THE "OTHER" IN THE HARDWARE QUESTIONS (IN THIS TEST A DIGITAL OUTPUT). IF LOW LEVEL IS NOT SELECTED, ONE HUNDRED CYCLES ARE PERFORMED USING THE DATA PAIR AND DEBOUNCE PERIOD SPECIFIED IN THE HARD AND SOFTWARE QUESTIONS. A DEBOUNCE PERIOD OF 10 MILLISECOND IS THEN USED TO CHECK THAT THE DAT REGISTER DOES NOT CHANGE IN THE FIRST 2.5 MILLISECOND.

IF LOW LEVEL IS SELECTED, ONLY 3 CYCLES ARE PERFORMED AND THE DEBOUNCE FUNCTION IS NOT CHECKED.

BY DEFAULT, THE DATA PAIR IS ALL ZEROS AND ALL ONES, BUT ANY PATTERN PAIR CAN BE SELECTED. IF THE TWO PATTERNS ARE IDENTICAL, A FIXED OUTPUT WILL RESULT.

ERROR 801 : REGISTER ADDRESSING ERROR FOR OTHER MODULE
804 AND 806 REGISTER AT AAAAAA DOSE NOT RESPOND

ERROR 802 : LOOPED DATA IN DATA REGISTER OF DIGITAL INPUT MODULE INCORRECT
AND 807 GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS:DDDDDD

ERROR 803 : DEBOUNCE FUNCTION ERROR -
AND 805 DATA ACCEPTED BEFORE LOADED DEBOUNCE FINISHED

TEST 9 - DIGITAL OUTPUT LOOPBACK TEST - SELECTABLE DATA PATTERN PAIR.

DATA TRANSFERS ARE MADE BETWEEN THE MODULE UNDER TEST (IN THIS TEST A DIGITAL OUTPUT) AND THE MODULE SPECIFIED AS THE "OTHER" IN THE HARDWARE QUESTIONS (IN THIS TEST A DIGITAL INPUT).

SEVERAL CYCLES ARE PERFORMED USING THE DATA PAIR FROM THE SW P TABLE AND A DEBOUNCE PERIOD FOUND IN THE MOD REGISTER OF THE DIGITAL OUTPUT MODULE. FOR THE INPUT MODULE A DEBOUNCE OF (500US) IS USED. BY DEFAULT, THE DATA PAIR IS ALL ZEROS AND ALL ONES, BUT ANY PATTERN PAIR CAN BE SELECTED. IF THE TWO PATTERNS ARE IDENTICAL, A FIXED OUTPUT WILL RESULT.

IF A RELAY OUTPUT MODULE IS USED, A CHECK IS ALSO MADE THAT THE DAT REGISTER OF THE DIGITAL INPUT MODULE WILL NOT BE CHANGED WITHIN 2 MS OF LOADING THE OUTPUT DATA REGISTER.

THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 901 : REGISTER ADDRESSING ERROR FOR OTHER MODULE ADDRESS
903, 905 REGISTER AT AAAAAA DOSE NOT RESPOND
AND 907

ERROR 902 : DATA REGISTER OF DIGITAL OUTPUT MODULE INCORRECT
AFTER READ BACK
GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS:DDDDDD

ERROR 904 : RECEIVED DATA INCORRECT CHECK OUTPUT LOGIC
GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS:DDDDDD

ERROR 906 : DEBOUNCE TIME INCORRECT
DATA ACCEPTED TOO FAST (LOADED DEBOUNCE NOT FINISHED)
GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS:DDDDDD

ERROR 908 : RECEIVED DATA INCORRECT - CHECK OUTPUT LOGIC
GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS:DDDDDD

TEST 10 - DIGITAL INPUT LOOPBACK TEST - RANDOM PATTERN

THIS TEST CHECKS THE DATA TRANSFER BETWEEN INPUT AND OUTPUT MODULES. THE OUTPUT MODULE IS THAT SPECIFIED AS THE "OTHER" IN THE HARDWARE QUESTIONS. SEVERAL CYCLES ARE PERFORMED USING DATA GENERATED BY A RANDOM PATTERN GENERATOR WITHIN THE PROGRAM.

IF LOW LEVEL TESTING WAS NOT SELECTED IN THE HARDWARE QUESTIONS, THE SELECTED DEBOUNCE PERIOD IS USED. IF "ALL" WAS SPECIFIED, THE PERIOD IS SELECTED AT RANDOM FROM THE 3 ALLOWED VALUES. THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 1001 : REGISTER ADDRESSING ERROR FOR OTHER MODULE
AND 1003 REGISTER AT AAAAAA DOES NOT RESPOND

ERROR 1002 : DIGITAL INPUT DATA REGISTER INCORRECT
AND 1004 LOADED AND READ DATA NOT THE SAME
GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS:DDDDDD

TEST 11 - DIGITAL OUTPUT LOOPBACK TEST WITH RANDOM PATTERN

THIS TEST CHECKS THE DATA OUTPUT LINES OF DIGITAL OUTPUT MODULES BY READING THE OUTPUT DATA WITH AN INPUT MODULE. THE INPUT MODULE IS THAT SPECIFIED AS THE "OTHER" IN THE HARDWARE QUESTIONS. 500 CYCLES ARE PERFORMED USING DATA GENERATED BY A RANDOM PATTERN GENERATOR WITHIN THE PROGRAM. THE TIMEOUT PERIOD IS BASED ON THE DEBOUNCE PERIOD FOUND IN THE MOD REGISTER OF THE DIGITAL OUTPUT MODULE.

THE DIGITAL INPUT MODULE IS ALWAYS LOADED WITH A DEBOUNCE PERIOD OF 500 US. THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 1101 : REGISTER ADDRESSING ERROR FOR OTHER MODULE
AND 1103 REGISTER AT AAAAAA DOES NOT RESPOND

ERROR 1102 : DATA REGISTER OF DIGITAL OUTPUT MODULE INCORRECT
DATA CHANGED AFTER LOADING
GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS:DDDDDD

ERROR 1104 : LOADED AND READ DATA NOT THE SAME CHECK OUTPUT LOGIC
GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS:DDDDDD

TEST 12 DIGITAL INPUT LOOPBACK TEST WITH SLIDING PATTERN

THIS TEST TRANSFERS SLIDING ONES AND THEN SLIDING ZEROS BETWEEN OUTPUT MODULE AND INPUT MODULES. THE OUTPUT MODULE IS THAT SPECIFIED AS THE "OTHER" IN THE HARDWARE QUESTIONS.

THE TRANSFERS ARE PERFORMED USING THE LEVEL SELECT AND DEBOUNCE PERIOD SPECIFIED IN THE HARDWARE QUESTIONS.

THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 1201 : REGISTER ADDRESSING ERROR FOR OTHER MODULE
1203, 1205 REGISTER AT AAAAAA DOES NOT RESPOND
AND 1207

ERROR 1202 : DATA REGISTER OF INPUT MODULE INCORRECT
1204 AND 1208 GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS:DDDDDD

TEST 13 DIGITAL OUTPUT LOOPBACK TEST WITH SLIDING PATTERN

THIS TEST CHECKS THE DATA OUTPUT LINES OF DIGITAL OUTPUT MODULES BY READING THE OUTPUT DATA WITH AN INPUT MODULE. THE INPUT MODULE IS THAT SPECIFIED AS THE "OTHER" IN THE HARDWARE QUESTIONS. SEVERAL CYCLES ARE PERFORMED USING SLIDING ONES AND THEN SLIDING ZEROS.

THE TIMEOUT PERIOD IS DEPENDENT ON THE DEBOUNCE SPECIFIED IN THE RT BITS FOUND IN THE MOD REGISTER OF THE DIGITAL OUTPUT MODULE.

THE DIGITAL INPUT MODULE IS ALWAYS LOADED WITH A DEBOUNCE PERIOD OF 5 US.

THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 1301 : REGISTER ADDRESSING ERROR FOR OTHER MODULE ADDRESS
1303 AND 1306 REGISTER AT AAAAAA DOES NOT RESPOND

ERROR 1302 : DATA REGISTER OF OUTPUT MODULE INCORRECT AFTER LOAD
AND 1305 GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS:DDDDDD

ERROR 1304 : RECEIVED DATA INCORRECT CHECK DIGITAL OUTPUT LINES
AND 1307 GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS:DDDDDD

TEST 14 DIGITAL LOOPBACK TEST INPUT MODULE INTERRUPT LINE.

THIS CHECKS THAT THE CSA INTERRUPT BIT OF THE INPUT MODULE CAN BE SET TO CAUSE AN INTERRUPT BY THE LEADING OR TRAILING EDGES OF THE MODULE DATA LINE 15. THE DEBOUNCE PERIOD FOR THE DIGITAL INPUT MODULE IS DEPENDENT ON THE OUTPUT MODULE THAT YOU SELECT AS THE "OTHER" IN THE HARDWARE QUESTIONS. A CHECK IS ALSO MADE THAT BIT 15 REMAINS HIGH AFTER THE LINE HAS REVERTED BACK TO ITS INITIAL STATE. ALL SIGNALS ARE PROVIDED BY LINES FROM THE OUTPUT MODULE.

ALSO THE BITS 0 14 ARE SWITCHED ON AND OFF FOUR TIMES,
AND THEN A CHECK IS MADE THAT BIT 15 IS NOT AFFECTED.

ALL OF THE FUNCTIONAL TESTS ABOVE ARE ALSO CARRIED OUT IF LOW LEVEL TESTING IS SELECTED.

THE FOLLOWING ERRORS MAY BE PRINTED :

- ERROR 1401 : REGISTER ADDRESSING ERROR FOR OTHER MODULE
AND 1410 REGISTER AT AAAAAA DOSE NOT RESPOND
- ERROR 1402 : DATA REGISTER CONTENTS OF INPUT MODULE INCORRECT
AND 1411 GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS:DDDDDD
- ERROR 1403 : NO INTERRUPT ON LEADING EDGE OF LINE 15
AND 1412 CSA REGISTER CONTENTS IS :DDDDDD
- ERROR 1404 : CSA REGISTER INCORRECT AFTER INTERRUPT
1407, 1413 GOOD:GGGGGG, BAD:BBBBBB
AND 1416
- ERROR 1405 : CSA REGISTER NOT LOADABLE WITH THE CORRECT DATA
AND 1414 GOOD:GGGGGG, BAD:BBBBBB
- ERROR 1406 : NO INTERRUPT ON TRAILING EDGE OF LINE 15
CSA REGISTER CONTENT IS : DDDDDD
- ERROR 1408 : INTERRUPT OCCURRED WHEN SWITCHING DATA BITS 0 14
AND 1417 CSA REGISTER CONTENT IS : DDDDDD
- ERROR 1409 : CSA REGISTER CHANGED AFTER SWITCHING DATA BITS 0 14
AND 1418 GOOD:GGGGGG, BAD:BBBBBB

TEST 15 ANALOGUE INPUT TEST. (FIELD AND MANUFACTURING TEST)

AT FIRST THE USER IS TOLD THAT THE TEST WILL ONLY RUN CORRECTLY IF THE MODULE HAS BEEN CALIBRATED. THEN HE IS ASKED HOW MANY MUX BOARDS ARE CONNECTED TO THE CONTROLLER. THEN HE IS ASKED TO CONNECT A CALIBRATED VOLTAGE SOURCE ON THE EVEN INPUTS TO THE MODULE VIA THE ANALOGUE TEST CONNECTOR.

PROMPTED BY THE PROGRAM, THE USER THEN SETS UP A SERIES OF VOLTAGES, TYPING "CARRIAGE RETURN" AFTER EACH SO THAT THE PROGRAM CAN CHECK THE D/A CONVERSIONS. THE CONVERSIONS FOR 48.828 MV ARE PERFORMED ON ALL GAINS. OTHER CONVERSIONS ARE PERFORMED ONLY AT GAIN 1. IF 'N' TO THE SW QUESTION "RUN MANUFACTURING TEST" IS ANSWERED THE FOLLOWING TOLLERANCES WILL BE USED, FOR GAIN 1,2,5 IS 2 LSB, FOR GAIN 10 IS 4 LSB, FOR GAIN 20 IS 6 LSB, FOR GAIN 50 IS 7 LSB, FOR GAIN 100 IS 12 LSB AND FOR GAIN 200 IS 20 LSB.
IF "Y" WAS ANSWERD THE TOLLERANCE WILL BE, FOR GAIN 1,2,5 IS 2 LSB, FOR GAIN 10 IS 3 LSB, FOR GAIN 20 IS 3, FOR GAIN 50 IS 5 LSB, FOR GAIN 100 IS 10 LSB AND FOR GAIN 200 IS 15 LSB.
IF MUX BOARDS ARE CONNECTED THE TOLLERANCE WILL BE 2 LSB MORE FOR GAINS OVER 10.

NEXT, THE USER IS PROMPTED TO CONNECT THE VOLTAGE SOURCE TO THE ODD INPUTS AND DO THE SAME AS FOR THE EVEN LINES AS ABOVE.

THE VALUES USED DEPEND ON WHETHER THE MODULE IS SET UP FOR UNIPOLAR OR BIPOLAR INPUT.

FINALLY, THE EXTERNAL TRIGGER FUNCTION IS TESTED BY SWITCHING THE ENABLE EXTERNAL TRIGGER ON AND OFF TO DO THE EXTERNAL START (EET IS LOOPED BACK TO THE EXTERNAL TRIGGER INPUT VIA THE ANALOGUE TEST CONNECTOR). THE EXTERNAL TRIGGER FUNCTION IS TESTED UNDER INTERRUPT.

IF THE 'UAM' FLAG IS SET, THE TEST IS NOT CARRIED OUT.

THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 1501,1504: CSA CONTENTS INCORRECT
GOOD:GGGGGG, BAD:BBBBBB, ADDRESSED CHANNEL IS: CCC

ERROR 1502 : TIMEOUT DONE BIT NOT SET AFTER A/D START
AND 1505 CSA REGISTER CONTENTS IS : DDDDDD

ERROR 1503,1506 : CONVERSION VALUE INCORRECT
GOOD:GGGGGG, BAD:BBBBBB, CSA REGISTER CONTENTS:DDDD

ERROR 1507 : NO DONE INTERRUPT AFTER EXTERNAL TRIGGER

ERROR 1508 : CSA CONTENTS INCORRECT AFTER EXTERNAL TRIGGER
GOOD:GGGGGG, BAD:BBBBBB, ADDRESSED CHANNEL IS: CCC

TEST 16 ANALOGUE OUTPUT TEST. (FIELD AND MANUFACTURING TEST)

THE USER IS TOLD THAT THE TEST WILL ONLY RUN CORRECTLY IF THE MODULE HAS BEEN CALIBRATED.

NEXT, THE OPERATOR IS ASKED WHETHER THE MODULE IS VOLTAGE CALIBRATED OR CURRENT CALIBRATED. DEPENDING ON THE RESPONSE, THE PROGRAM PROMPTS WITH VOLTAGE OR CURRENT VALUES. IF CURRENT IS SELECTED A CHECK IS MADE THAT ALL CHANNELS ARE SHOWN AS 'OPEN LINE' IN THE CSA REGISTER. THIS ASSUMES THAT NOTHING IS CONNECTED TO THE CURRENT OUTPUTS.

THE USER IS THEN ASKED TO CONNECT A DVM WITH THE CORRECT RANGE TO THE MODULE OUTPUT AT THE SPECIFIED CHANNEL. IF CURRENT WAS SELECTED, THE PROGRAM USES THE OFFSET BIT IN THE MOD REGISTER AND CHECKS THAT THE OPL BIT IN THE CSA REGISTER IS CLEAR.

THE OPERATOR THEN HAS TO CHECK SEVERAL VALUES TO ENSURE THAT THE READING OF THE DVM IS THE SAME AS THE OUTPUT VALUE. ALL VALUES HAVE BEEN CHECKED BY ANSWERING THE QUESTION 'IS VALUE ON DVM IN RANGE'. THE PROCESS IS REPEATED FOR ALL CHANNELS.

IF 'UAM' FLAG IS SET, THIS TEST WILL NOT BE CARRIED OUT.

N.B. THE DVM READINGS MAY DIFFER FROM THE PRINTED VALUES IF THE MODULE HAS BEEN RECALIBRATED BY THE CUSTOMER.

THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 1601 : OPL BIT IN CSA NOT SET
MAKE SURE THAT NOTHING IS CONNECTED TO CURRENT OUTPUT
CSA REGISTER CONTENTS IS :DDDDDD

ERROR 1602 : OPL BIT IN CSA NOT CLEARED
IS DVM CONNECTED TO THE ADDRESSED CHANNEL ?
CSA REGISTER CONTENTS IS :DDDDDD

ERROR 1603 : READY BIT IN CSA NOT SET AFTER LOADING DAT REGISTER (TIMEOUT)
AND 1606 GOOD:GGGGGG, BAD:BBBBBB

ERROR 1604 : CSA CONTENTS INCORRECT
AND 1607 GOOD:GGGGGG, BAD:BBBBBB

ERROR 1605 : MODULE DEFECT OR INCORRECTLY CALIBRATED TRY TEST 23
AND 1608

6.3 FIELD INPUT/OUTPUT TESTS USING FIELD TEST CONNECTORS.

TEST 15 ANALOGUE INPUT TEST. (FIELD AN.) MANUFACTURING TEST)

AT FIRST THE USER IS TOLD THAT THE TEST WILL ONLY RUN CORRECTLY IF THE MODULE HAS BEEN CALIBRATED. THEN HE IS ASKED HOW MANY MUX BOARDS ARE CONNECTED TO THE CONTROLLER. THEN HE IS ASKED TO CONNECT A CALIBRATED VOLTAGE SOURCE ON THE EVEN INPUTS TO THE MODULE VIA THE ANALOGUE TEST CONNECTOR.

PROMPTED BY THE PROGRAM, THE USER THEN SETS UP A SERIES OF VOLTAGES, TYPING "CARRIAGE RETURN" AFTER EACH SO THAT THE PROGRAM CAN CHECK THE D/A CONVERSIONS. THE CONVERSIONS FOR 48.828 MV ARE PERFORMED ON ALL GAINS. OTHER CONVERSIONS ARE PERFORMED ONLY AT GAIN 1. IF 'N' TO THE SW QUESTION "RUN MANUFACTURING TEST" IS ANSWERED THE FOLLOWING TOLLERANCES WILL BE USED. FOR GAIN 1,2,5 IS 2 LSB, FOR GAIN 10 IS 4 LSB, FOR GAIN 20 IS 6 LSB, FOR GAIN 50 IS 7 LSB, FOR GAIN 100 IS 12 LSB AND FOR GAIN 200 IS 20 LSB.

IF "Y" WAS ANSWERD THE TOLLERANCE WILL BE, FOR GAIN 1,2,5 IS 2 LSB, FOR GAIN 10 IS 3 LSB, FOR GAIN 20 IS 3, FOR GAIN 50 IS 5 LSB, FOR GAIN 100 IS 10 LSB AND FOR GAIN 200 IS 15 LSB. IF MUX BOARDS ARE CONNECTED THE TOLLERANCE WILL BE 2 LSB MORE FOR GAINS OVER 10.

NEXT, THE USER IS PROMPTED TO CONNECT THE VOLTAGE SOURCE TO THE ODD INPUTS AND DO THE SAME AS FOR THE EVEN LINES AS ABOVE.

THE VALUES USED DEPEND ON WHETHER THE MODULE IS SET UP FOR UNIPOLAR OR BIPOLAR INPUT.

FINALLY, THE EXTERNAL TRIGGER FUNCTION IS TESTED BY SWITCHING THE ENABLE EXTERNAL TRIGGER ON AND OFF TO DO THE EXTERNAL START (EET IS LOOPED BACK TO THE EXTERNAL TRIGGER INPUT VIA THE ANALOGUE TEST CONNECTOR). THE EXTERNAL TRIGGER FUNCTION IS TESTED UNDER INTERRUPT.

IF THE 'UAM' FLAG IS SET, THE TEST IS NOT CARRIED OUT.

THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 1501,1504: CSA CONTENTS INCORRECT
GOOD:GGGGGG, BAD:BBBBBB, ADDRESSED CHANNEL IS: CCC

ERROR 1502 : TIMEOUT DONE BIT NOT SET AFTER A/D START
AND 1505 CSA REGISTER CONTENTS IS : DDDDDD

ERROR 1503,1506 : CONVERSION VALUE INCORRECT
GOOD:GGGGGG, BAD:BBBBBB, CSA REGISTER CONTENTS:DDDD

ERROR 1507 : NO DONE INTERRUPT AFTER EXTERNAL TRIGGER

ERROR 1508 : CSA CONTENTS INCORRECT AFTER EXTERNAL TRIGGER
GOOD:GGGGGG, BAD:BBBBBB, ADDRESSED CHANNEL IS: CCC

TEST 16 ANALOGUE OUTPUT TEST. (FIELD AND MANUFACTURING TEST)

THE USER IS TOLD THAT THE TEST WILL ONLY RUN CORRECTLY IF THE MODULE HAS BEEN CALIBRATED.

NEXT, THE OPERATOR IS ASKED WHETHER THE MODULE IS VOLTAGE CALIBRATED OR CURRENT CALIBRATED. DEPENDING ON THE RESPONSE, THE PROGRAM PROMPTS WITH VOLTAGE OR CURRENT VALUES. IF CURRENT IS SELECTED A CHECK IS MADE THAT ALL CHANNELS ARE SHOWN AS "OPEN LINE" IN THE CSA REGISTER. THIS ASSUMES THAT NOTHING IS CONNECTED TO THE CURRENT OUTPUTS. THE USER IS THEN ASKED TO CONNECT A DVM WITH THE CORRECT RANGE TO THE MODULE OUTPUT AT THE SPECIFIED CHANNEL. IF CURRENT WAS SELECTED, THE PROGRAM USES THE OFFSET BIT IN THE MOD REGISTER AND CHECKS THAT THE OPL BIT IN THE CSA REGISTER IS CLEAR.

THE OPERATOR THEN HAS TO CHECK SEVERAL VALUES TO ENSURE THAT THE READING OF THE DVM IS THE SAME AS THE OUTPUT VALUE. WHEN ALL VALUES HAVE BEEN CHECKED AND NO ERROR FOUND, THE USER HAS TO TYPE "CARRIAGE RETURN". THE PROCESS IS REPEATED FOR ALL CHANNELS.

IF "UAM" FLAG IS SET, THIS TEST WILL NOT BE CARRIED OUT.

N.B. THE DVM READINGS MAY DIFFER FROM THE PRINTED VALUES IF THE MODULE HAS BEEN RECALIBRATED BY THE CUSTOMER.

THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 1601 : OPL BIT IN CSA NOT SET
MAKE SURE THAT NOTHING IS CONNECTED TO CURRENT OUTPUT
CSA REGISTER CONTENTS IS :DDDDDD

ERROR 1602 : OPL BIT IN CSA NOT CLEARED
IS DVM CONNECTED TO THE ADDRESSED CHANNEL ?
CSA REGISTER CONTENTS IS :DDDDDD

ERROR 1603 : READY BIT IN CSA NOT SET AFTER LOADING DAT REGISTER (TIMEOUT)
AND 1606 GOOD:GGGGGG, BAD:BBBBBB

ERROR 1604 : CSA CONTENTS INCORRECT
AND 1607 GOOD:GGGGGG, BAD:BBBBBB

ERROR 1605 : MODULE DEFECT OR INCORRECTLY CALIBRATED TRY TEST 23
AND 1608

TEST 17 DIGITAL INPUT TEST.

FIRST OF ALL, THE USER IS PROMPTED TO INSERT THE TEST CONNECTOR INTO THE MODULE ON WHICH THE LED IS FLASHING. THEN A CHECK IS MADE THAT THE INPUT DATA MATCHES THE ODD PATTERNS AVAILABLE FROM THE CONNECTOR. AFTER THIS, THE USER IS ASKED TO SWITCH THE CONNECTOR TO THE EVEN POSITION AND THE DATA IS CHECKED TO BE CORRECT. THE PROGRAM THEN PROMPTS THE USER TO MOVE THE SWITCH "ON" AND "OFF" TWICE MORE. THIS CHECKS THAT THE CSA INTERRUPT

BIT IR15 CAN BE SET TO CAUSE AN INTERRUPT BY THE LEADING OR TRAILING EDGES OF THE MODULE DATA LINE 15, AND THAT IR15 OF THE CSA REMAINS SET AFTER THE DATA LINE 15 HAS REVERTED TO ITS ORIGINAL STATE.

IF THE 'UAM' FLAG IS SET, THIS TEST WILL NOT BE CARRIED OUT.

THIS TEST IS CARRIED OUT IN LOW LEVEL MODE.

THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 1701 : DATA REGISTER OF DIGITAL INPUT NOT LOADED WITH EVEN DATA
GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS IS:DDDDDD

ERROR 1702 : DATA REGISTER OF DIGITAL INPUT NOT LOADED WITH ODD DATA
GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS IS:DDDDDD

ERROR 1703 : NO INTERRUPT ON LEADING EDGE OF DATA LINE 15
CSA REGISTER CONTENTS IS:DDDDDD

ERROR 1704 : CSA REGISTER OF DIGITAL INPUT MODULE INCORRECT
AND 1706 AFTER INTERRUPT
GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS IS:DDDDDD

ERROR 1705 : NO INTERRUPT ON TRAILING EDGE OF DATA LINE 15
CSA REGISTER CONTENTS IS:DDDDDD

ERROR 1707 : CSA DATA BIT IR15 IS NOT CORRECT CLEARED BY DATA LINE 15
GOOD:GGGGGG, BAD:BBBBBB, MOD REGISTER CONTENTS IS:DDDDDD

TEST 18 DIGITAL OUTPUT TEST.

THE USER IS PROMPTED TO INSERT THE DIGITAL TEST CONNECTOR INTO THE MODULE ON WHICH THE LED IS FLASHING. THEN HE IS PROMPTED TO CHECK THAT A SLIDING ONES PATTERN APPEARS ON THE TEST CONNECTOR LEDS. AFTER 15 SECONDS THE PROGRAM PROMPTS THE USER TO LOOK FOR A SLIDING ZEROS PATTERN, WHICH IS OUTPUT FOR 15 SECONDS BEFORE TERMINATING THE TEST. THIS CHECKS THAT ALL OUTPUT LINES CAN BE UNIQUELY SET AND CLEARED.

IF THE "UAM" FLAG IS SET, THIS TEST WILL NOT BE CARRIED OUT.

ERRORS : THIS TEST IS A VISUAL TEST AND HAS NO ERROR PRINTOUT.

6.4 SPECIFICALLY SELECTABLE INPUT/OUTPUT TESTS.

TEST 19 DIGITAL INPUT TEST - SPECIFICALLY SELECTABLE

THIS TEST CONTINUOUSLY READS THE INPUT LINES AND PRINTS THE DATA TO THE CONSOLE.

THE USER IS ASKED WHICH INPUT RANGE (LOW LEVEL OR NORMAL) AND IF NORMAL IS SELECTED, WHICH DEBOUNCE PERIOD TO USE. THEN THE INPUT LINES OF THE MODULE ARE CONTINUOUSLY READ AND, IF THE SUPERVISOR FLAG "INHIBIT ERROR REPORT" IS NOT SET, THE BIT PATTERN IS OUTPUT TO THE CONSOLE. BY USING DIFFERENT INPUT VOLTAGES, THIS TEST CAN BE USED TO CHECK THE SWITCHING LEVELS. THIS TEST IS A VISUAL TEST. AN ERROR REPORT IS ONLY MADE IF THE LLS AND RT BITS IN THE MOD REGISTER CAN'T CLEAR OR SET. THE INTERRUPT FUNCTION OF THE MODULE IS NOT TESTED. TO ABORT THE TEST, THE USER MUST TYPE "CNTL C".

THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 1901 : LOW LEVEL BIT IN MOD REGISTER OF DIGITAL INPUT COULD NOT BE CLEARED

ERROR 1902 : DEBOUNCE BITS IN MOD REGISTER COULD NOT BE SET
GOOD:GGGGGG, BAD:BBBBBB

ERROR 1903 : LOW LEVEL BIT IN MOD REGISTER OF DIGITAL INPUT COULD NOT BE SET

TEST 20 DIGITAL OUTPUT TEST - SPECIFICALLY SELECTABLE.

THE USER IS FIRST ASKED TO SELECT A PATTERN TYPE SLIDING ONES, SLIDING ZEROS, OR A PATTERN PAIR. IN THE LAST CASE, HE IS ALSO ASKED TO ENTER THE DATA PAIR. THE PROGRAM THEN REQUESTS A TIME INTERVAL IN MILLISECONDS (DEFAULT IS ZERO) TO WAIT BETWEEN EACH PATTERN CHANGE. THE SELECTED PATTERN IS THEN OUTPUT TO THE USER LINES OF THE MODULE.

AFTER LOADING THE OUTPUT, THE DATA REGISTER IS READ BACK AND AN ERROR REPORTED IF THE LOADED DATA AND THE READ DATA ARE NOT THE SAME. THIS IS THE ONLY ERROR REPORT IN THE TEST. ALL OTHER CHECKING IS VISUAL.

TO ABORT THE TEST, "CNTL C" MUST BE TYPED.

THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 2001 : DATA REGISTER INCORRECT AFTER READ BACK
AND 2002 GOOD:GGGGG, BAD:BBBBBB

TEST 21 ANALOGUE INPUT (DYNAMIC ROUTINE) SPECIFICALLY SELECTABLE.

THE USER IS ASKED WHICH CHANNELS ARE TO BE READ, WHICH GAIN AND WHICH TRIGGER (INTERNAL OR EXTERNAL) ARE TO BE USED. AFTER THIS HE IS TOLD WHICH RANGE (UNI OR BIPOLAR) THE MODULE IS SWITCHED

TO.

CONVERSIONS ARE THEN MADE TWICE ON EACH SELECTED CHANNEL. THE VALUES READ ARE PRINTED OUT AS A DUMP AFTER ALL CONVERSIONS. THE DUMPED VALUES ARE OCTAL.

PRINTOUT CAN BE DISABLED USING THE SUPERVISOR FLAG "INHIBIT ERROR REPORTS".

TO ABORT THE TEST, "CNTRL C" MUST BE TYPED.

THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 2101 : CSA CONTENTS INCORRECT - SELECTED CHANNEL NOT AVAILABLE
GOOD:GGGGGG, BAD:BBBBBB, ADDRESSED CHANNEL IS:CCC

ERROR 2102 : MODULE NOT READY FOR CONVERSION DONE BIT IN CSA IS SET

ERROR 2103 : DONE BIT IN CSA NOT SET (TIMEOUT) AFTER CONVERSION START
AND 2105

ERROR 2104 : DONE BIT IN CSA NOT CLEARED AFTER READING DATA REGISTER
AND 2106

ERROR 2107 : DUMP BUFFER FULL MORE THEN 127 CHANNELS ADDRESSED ?
AND 2115

ERROR 2108 : CSA CONTENTS INCORRECT
2110, 2112 GOOD:GGGGGG, BAD:BBBBBB, ADDRESSED CHANNEL IS:CCC
AND 2114

ERROR 2109 : TIMEOUT NO DONE INTERRUPT OCCURRED
AND 2111

ERROR 2113 : ERRONEOUS INTERRUPT OCCURRED

TEST 22 ANALOGUE OUTPUT (DYNAMIC TEST) SPECIFICALLY
SELECTABLE.

THIS TEST GENERATES EITHER A PERMANENT LOADED STATIC VALUE, OR AN ENDLESS SYMMETRICAL VOLTAGE RAMP.

THE USER IS ASKED TO ENTER THE NUMBER OF THE FIRST AND LAST CHANNEL WHICH HE WANTS TO USE. HE THEN SELECTS THE OUTPUT PATTERN TYPE - SINGLE FIXED VALUE OR RAMP. FOR THE FIRST OF THESE, THE USER TYPES THE DESIRED OUTPUT BINARY VALUE. FOR THE RAMP PATTERN, AN ENDLESS SYMMETRICAL VOLTAGE RAMP IS GENERATED. IN THIS CASE, THE USER IS ASKED TO ENTER A VALUE "DELTA U". THIS VALUE IS THE NUMBER OF BITS BY WHICH THE PROGRAM CHANGES THE OUTPUT FOR EACH STEP OF THE RAMP, AND MUST BE IN THE RANGE 1 TO 4096. THE USER MUST ALSO SELECT A TIME INTERVAL "DELTA T" IN INCREMENT STEPS, WHICH WILL DETERMINE THE PERIOD BETWEEN EACH VALUE CHANGE. IF ZERO IS TYPED, THE VALUE WILL BE VARIED AS FAST AS THE HARDWARE ALLOWS IT.

THE CONTROL STATUS REGISTER STATUS PRINTOUT CAN BE INHIBITED BY

SETTING THE IBE FLAG.

THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 2201 : READY BIT IN CSA NOT SET AFTER LOADING DATA REGISTER (TIMEOUT)
2202 AND 2203 CSA REGISTER CONTENTS IS:DDDDDD

TEST 23 - ANALOGUE OUTPUT (CALIBRATION ROUTINE) SPECIFICALLY
SELECTABLE.

THIS TEST IS FOR CALIBRATION AND ALLOWS THE USER TO
FOLLOW A CALIBRATION PROCEDURE OR TO DO A MANUAL CALIBRATION.

FIRST OF ALL, THE USER GETS SOME INFORMATION ABOUT THE
CALIBRATION EQUIPMENT. HE IS THEN PROMPTED FOR THE CHANNEL
AND THE OUTPUT TYPE (VOLTAGE OR CURRENT). IF CURRENT IS
SELECTED, THE PROGRAM LOOKS AT THE COFS BIT IN THE CSA TO FIND
OUT THE OFFSET CONFIGURATION. NOW THE OPERATOR CAN CHOOSE
BETWEEN THE CALIBRATION PROCEDURE OR MANUAL VALUES; IF MANUAL IS
USED, THE OPERATOR CAN TYPE IN A VALUE IN MILLIVOLTS OR
MICROAMPS.

OTHERWISE HE IS PROMPTED TO CALIBRATE FIRST THE OFFSET AND THEN
THE GAIN. THEN HE IS REQUIRED TO TEST THE HALF FULL SCALE. TO GO
FROM ONE STEP TO THE NEXT, THE USER MUST TYPE CARRIAGE RETURN.
ALL STEPS (OFFSET, GAIN AND HALF FULL SCALE) MUST BE REPEATED
BEFORE GOING ON TO THE NEXT CHANNEL.

THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 2301 : READY BIT IN CSA NOT SET AFTER LOADING DATA REGISTER
2302, 2303 CSA REGISTER CONTENTS IS:DDDDDD
AND 2304

TEST 24 ANALOGUE INPUT (CALIBRATION ROUTINE) SPECIFICALLY
SELECTABLE.

THIS TEST IS FOR CALIBRATING AN ANALOGUE INPUT MODULE .

FIRST OF ALL, THE USER IS ASKED WHETHER HE NEEDS INFORMATION
ABOUT THE CALIBRATION PROCEDURE.

HE IS THEN PROMPTED FOR THE CHANNEL ON WHICH HE HAS PUT THE
PRECISION VOLTAGE REFERENCE SOURCE .

AFTER THIS HE IS INFORMED WHICH RANGE IS SWITCHED (UNIPOLAR OR
BIPOLAR) AND ASKED TO SELECT THE DESIRED GAIN.

NOW THE PROGRAM CONTINUOUSLY READS THE INPUT AND PRINTS THE
RESULT AS AN OCTAL AND VOLTAGE VALUE.

TO ABORT THE TEST, 'CNTRL C' MUST BE TYPED.

THE FOLLOWING ERRORS MAY BE PRINTED :

ERROR 2401 : CSA CONTENTS INCORRECT AFTER READING DATA REGISTER
GOOD:GGGGGG, BAD:BBBBBB

ERROR 2402 : TIMEOUT DONE NOT SET AFTER A/D START
GOOD:GGGGGG, BAD:BBBBBB

TEST 25 VISUAL LED TEST SPECIFICALLY SELECTABLE.

THIS TEST IS A VISUAL TEST. IT FLASHES THE LED ON AND OFF ON EVERY MODULE IN THE SYSTEM THAT IS FOUND BY THE AUTOMATIC CONFIGURATION ROUTINE OR SELECTED IN THE HARDWARE QUESTIONS.

MUX BOARDS ARE NOT INDEPENDENTLY ADDRESSABLE, SO THEIR LEDS ARE NOT FLASHED.

THE TEST RUNS UNTIL 'CNTRL C' IS TYPED.

ERRORS : THIS TEST HAS NO ERROR MESSAGES.

E

```

1815 .TITLE PROGRAM HEADER AND TABLES
1816 .SBTTL PROGRAM HEADER
1842
1843
1849 000000 .ENABL ABS,AMA
1850 002000 . 2000
1852
1853 002000 BGNMOD
1854
1855
1856 : *
1857 : THE PROGRAM HEADER IS THE INTERFACE BETWEEN
1858 : THE DIAGNOSTIC PROGRAM AND THE SUPERVISOR.
1859 :
1860 002000 POINTER ALL
1861
1878
1879 002000 HEADER CZIXV,A,0,150, 340
002000
002000 103
002001 132
002002 111
002003 130
002004 126
002005 000
002006 000
002007 000
002010
002010 101
002011
002011 060
002012
002012 000020
002014
002014 000150
002016
002016 002246
002020
002020 003376
002022
002022 002210
002024
002024 002232
002026
002026 104004
002030
002030 000000
002032
002032 000000
002034
002034 000000
002036
002036 000000
002040
002040 002124
002042
002042 000340
    
```

```

L$NAME::
        .ASCII /C/
        .ASCII /Z/
        .ASCII /I/
        .ASCII /X/
        .ASCII /V/
        .BYTE 0
        .BYTE 0
        .BYTE 0
L$REV::
        .ASCII /A/
L$DEPO::
        .ASCII /O/
L$UNIT::
        .WORD T$PTHV
L$TIML::
        .WORD 150
L$MPCP::
        .WORD L$HARD
L$SPCP::
        .WORD L$SOFT
L$MPTP::
        .WORD L$HW
L$SPTP::
        .WORD L$SW
L$LADP::
        .WORD L$LAST
L$STA::
        .WORD 0
L$CO::
        .WORD 0
L$DTYP::
        .WORD 0
L$APT::
        .WORD 0
L$DTP::
        .WORD L$DISPATCH
L$PRIO::
        .WORD 340
    
```


PROGRAM HEADER

002044
002044 000000
002046
002046 000000
002050
002050 003
002051 003
002052
002052 000000
002054 000000
002056
002056 000000
002060
002060 007206
002062
002062 017320
002064
002064 000000
002066
002066 000000
002070
002070 026702
002072
002072 026610
002074
002074 000000
002076
002076 007222
002100
002100 104035
002102
002102 007176
002104
002104 022350
002106
002106 026600
002110
002110 026514
002112
002112 022342
002114
002114 000000
002116
002116 000000
002120
002120 000000

L\$ENVI::
.LWORD 0
L\$EXP1::
.LWORD 0
L\$MREV::
.BYTE C\$REVISION
.BYTE C\$EDIT
L\$EF::
.LWORD 0
.LWORD 0
L\$SPC::
.LWORD 0
L\$DEVP::
.LWORD L\$DVTYP
L\$REPP::
.LWORD L\$RPT
L\$EXP4::
.LWORD 0
L\$EXP5::
.LWORD 0
L\$AUT::
.LWORD L\$AU
L\$DUT::
.LWORD L\$DU
L\$LUN::
.LWORD 0
L\$DESP::
.LWORD L\$DESC
L\$LOAD::
EMT E\$LOAD
L\$ETP::
.LWORD L\$ERRTBL
L\$ICP::
.LWORD L\$INIT
L\$CCP::
.LWORD L\$CLEAN
L\$ACP::
.LWORD L\$AUTO
L\$PRT::
.LWORD L\$PROT
L\$TEST::
.LWORD 0
L\$DLY::
.LWORD 0
L\$HIME::
.LWORD 0

DISPATCH TABLE

1892
1893
1894
1895
1896
1897
1898
1899

.SBTTL DISPATCH TABLE

;;
; THE DISPATCH TABLE CONTAINS THE STARTING ADDRESS OF EACH TEST.
; IT IS USED BY THE SUPERVISOR TO DISPATCH TO EACH TEST.
;

DISPATCH 25.

002122 000031
002124 026714
002126 027220
002130 030144
002132 031326
002134 032414
002136 033674
002140 035154
002142 035720
002144 037076
002146 040216
002150 041076
002152 041674
002154 042776
002156 043702
002160 046404
002162 052510
002164 056536
002166 061070
002170 062124
002172 063254
002174 064500
002176 070704
002200 072532
002202 077110
002204 102102

.WORD 25
DISPATCH::
.WORD T1
.WORD T2
.WORD T3
.WORD T4
.WORD T5
.WORD T6
.WORD T7
.WORD T8
.WORD T9
.WORD T10
.WORD T11
.WORD T12
.WORD T13
.WORD T14
.WORD T15
.WORD T16
.WORD T17
.WORD T18
.WORD T19
.WORD T20
.WORD T21
.WORD T22
.WORD T23
.WORD T24
.WORD T25

1900

PROGRAM HEADER AND TABLES
DEFAULT HARDWARE P TABLE

MACRO M1200 26 OCT 83 15:22 PAGE 16

SEQ 0041

1908
1909
1910
1911
1912
1913
1914
1915
1916
1917
1918
1928
1929
1930
1931
1932
1933
1934
1935
1936
1937
1938

002206
002206 000010
002210
002210

002210 171000
002212 000000
002214 000200
002216 000000
002220 000000
002222 000003

002224 171400
002226 000400

002230
002230

.SBTTL DEFAULT HARDWARE P-TABLE

;;
; THE DEFAULT HARDWARE P TABLE CONTAINS DEFAULT VALUES OF
; THE TEST DEVICE PARAMETERS. THE STRUCTURE OF THIS TABLE
; IS IDENTICAL TO THE STRUCTURE OF THE HARDWARE P TABLES,
; AND IS USED AS A 'TEMPLATE' FOR BUILDING THE P TABLES.
;

BGNHW DFPTBL

.WORD L10000 L\$HW/2
L\$HW::
DFPTBL::

.WORD 171000
.WORD 0
.WORD PRI04
.WORD 0
.WORD 0
.WORD 3

.WORD 171400
.WORD 400

; MODE REGISTER ADDRESS
; VECTOR ADDRESS
; PRIORITY LEVEL
; LOOPED ?
; LOW LEVEL INPUT ? (0 = NO)
; DEBOUNCE FOR DIGITAL LOOPBACK
; 3=ALL, 0=LOW, 1=NORMAL, 2=HIGH
; OTHER MODULE ADDRESS
; OTHER MODULE VECTOR ADDRESS

ENDHW

110000:

SOFTWARE P-TABLE

1940
1941
1942
1943
1944
1945
1946
1947
1948
1949
1950
1958
1959
1960
1961
1962
1963
1964
1965

002230
002230 000005
002232
002232

002232 000000
002234 000000
002236 177777
002240 000000
002242 000000

002244
002244

.SBTTL SOFTWARE P TABLE

; THE SOFTWARE TABLE CONTAINS VARIOUS DATA USED BY THE
; PROGRAM AS OPERATIONAL PARAMETERS. THESE PARAMETERS ARE
; SET UP AT ASSEMBLY TIME AND MAY BE VARIED BY THE OPERATOR
; AT RUN TIME.
;

BGNSW SFPTBL

.WORD L10001 L\$SW/2
L\$SW::
SFPTBL::

MANTST:: .WORD 0 ; RUN MANUFACTURING TESTS ? (0 = NO)
MANIO:: .WORD 0 ; RUN LOOPBACK TESTS ? (0 = NO)
PAT1:: .WORD 177777 ; 1ST PATTERN FOR DIGITAL LOOPBACK
PAT2:: .WORD 0 ; 2ND PATTERN FOR DIGITAL LOOPBACK
QVP:: .WORD 0 ; QUICK VERIFY ? (0 = NO)

ENDSW

L10001:

HARDWARE PARAMETER CODING SECTION

SEQ 0044

```

002344 003302
002346 000000
002350 000770
2000
2001 002352          104:  ENDHRD

002352
2002
2009
2010
2011 002352      115      117      104  G1:  .NLIST  BEX
2012 002400      126      105      103  G2:  .ASCIZ  /MODE REGISTER ADDRESS/
2013 002456      120      122      111  G3:  .ASCIZ  /VECTOR ADDRESS (FOR OUTPUT MODULES, TYPE '0')/
2014 002533      012      015      050  G3:  .ASCII  /PRIORITY LEVEL (FOR OUTPUT MODULES, TYPE "0")/
2015 002610      111      123      040  G4:  .ASCIZ  <12><15>/(FOR LSI WITH FIXED PRI. USE LEVEL 4 ONLY)/
2016 002673      103      101      102  G4:  .ASCII  /IS THIS MODULE CONNECTED TO ANOTHER VIA A LOOPBACK /
2017 002744      131      105      123  G4:  .ASCII  /CABLE/<15><12>/(ONLY MANUFACTURING SHOULD ANSWER /
2018 002751      114      117      127  G4:  .ASCIZ  /YES)/
2019 003031      015      012      050  G14: .ASCII  /LOW LEVEL INPUT FOR DIGITAL INPUT LOOPBACK TESTS/
2020 003077      104      105      102  G15: .ASCIZ  <15><12>/(FOR OUTPUT LOOPBACK TYPE "N") /
2021 003166      065      060      060  G15: .ASCII  /DEBOUNCE PERIOD FOR DIGITAL INPUT LOOPBACK TESTS ONLY/<15><12>
2022 003237      117      124      110  G5:  .ASCIZ  /500US (0), 5MS (1), 10MS (2), OR ALL (3)/
2023 003302      117      124      110  G6:  .ASCIZ  /OTHER MODULE MODE REGISTER ADDRESS/
2024 003361      124      131      120  G6:  .ASCII  /OTHER MODULE VECTOR ADDRESS (IF OUTPUT MODULE, /
2025          .ASCIZ  /TYPE "0")/
2026          .LIST  BEX
          .EVEN

```

```

.WORD  G6
.WORD  T$LOLIM
.WORD  T$HILIM

```

```

.EVEN
L10002:

```

SOFTWARE PARAMETER CODING SECTION

```

2028      .SBTTL  SOFTWARE PARAMETER CODING SECTION
2029
2030      ;**
2031      ; THE SOFTWARE PARAMETER CODING SECTION CONTAINS MACROS
2032      ; THAT ARE USED BY THE SUPERVISOR TO BUILD P TABLES.  THE
2033      ; MACROS ARE NOT EXECUTED AS MACHINE INSTRUCTIONS BUT ARE
2034      ; INTERPRETED BY THE SUPERVISOR AS DATA STRUCTURES.  THE
2035      ; MACROS ALLOW THE SUPERVISOR TO ESTABLISH COMMUNICATIONS
2036      ; WITH THE OPERATOR.
2037      ;
2038
2039 003374      BGNSFT
003374      000025
003376
                                .WORD  L10003 L$SOFT/2
                                L$SOFT::
2040
2049
2050 003376      GPRML  G10.0. 1.YES      ; MANUFACTURING TESTS ?
003376      000130                      .WORD  T$CODE
003400      003450                      .WORD  G10
003402      177777                      .WORD  1
2051 003404      XFERF  10$              ; IF NOT, BRANCH
003404      017044                      .WORD  T$CODE
2052 003406      GPRML  G11.2.-1.YES     ; MANUFACTURING I/O TESTS ?
003406      001130                      .WORD  T$CODE
003410      003500                      .WORD  G11
003412      177777                      .WORD  1
2053 003414      XFERF  10$              ; IF NOT, BRANCH
003414      013044                      .WORD  T$CODE
2054 003416      GPRMD  G12.4.0. 1.0.177777.YES ; LOOPBACK PATTERN 1
003416      002032                      .WORD  T$CODE
003420      003533                      .WORD  G12
003422      177777                      .WORD  -1
003424      000000                      .WORD  T$LOLIM
003426      177777                      .WORD  T$HILIM
2055 003430      GPRMD  G13.6.0. 1.0.177777.YES ; LOOPBACK PATTERN 2
003430      003032                      .WORD  T$CODE
003432      003604                      .WORD  G13
003434      177777                      .WORD  1
003436      000000                      .WORD  T$LOLIM
003440      177777                      .WORD  T$HILIM
2056 003442      10$: GPRML  G16.10.-1.YES ; QUICK VERIFY MODE ?
003442      004130                      .WORD  T$CODE
003444      003656                      .WORD  G16
003446      177777                      .WORD  -1
2057
2058      .EVEN
2059
2060 003450      ENDSFT
                                .EVEN
                                L10003:
2061
2068
2069
2070 003450      122      125      116  G10:  .MLIST  BEX
2071 003500      122      125      116  G11:  .ASCIZ  /RUN MANUFACTURING TESTS/
2072 003533      106      111      122  G12:  .ASCIZ  \RUN LOOPBACK AND I/O TESTS\
2073 003604      123      105      103  G13:  .ASCIZ  /FIRST PATTERN: FOR DIGITAL LOOPBACK TESTS
                                .ASCIZ  /SECOND PATTERN FOR DIGITAL LOOPBACK TESTS/

```

SOFTWARE PARAMETER CODING SECTION

2074	003656	121	125	111	G16:	.ASCIZ	/QUICK VERIFY MODE/
2075						.LIST	BEX
2076						.EVEN	
2077							
2078							
2079	003700					ENDMOD	
2080							

SOFTWARE PARAMETER CODING SECTION

2092
2093
2121
2131
2132 003700
2133
2134
2135
2136
2137
2138
2153
2154 003700

.TITLE GLOBAL AREAS
.SBTTL GLOBAL EQUATES SECTION

BGNMOD

; THE GLOBAL EQUATES SECTION CONTAINS PROGRAM EQUATES THAT
; ARE USED IN MORE THAN ONE TEST.
;

EQUALS

; BIT DIFINITIONS

100000	BIT15..	100000
040000	BIT14..	40000
020000	BIT13..	20000
010000	BIT12..	10000
004000	BIT11..	4000
002000	BIT10..	2000
001000	BIT09..	1000
000400	BIT08..	400
000200	BIT07..	200
000100	BIT06..	100
000040	BIT05..	40
000020	BIT04..	20
000010	BIT03..	10
000004	BIT02..	4
000002	BIT01..	2
000001	BIT00..	1

001000	BIT9..	BIT09
000400	BIT8..	BIT08
000200	BIT7..	BIT07
000100	BIT6..	BIT06
000040	BIT5..	BIT05
000020	BIT4..	BIT04
000010	BIT3..	BIT03
000004	BIT2..	BIT02
000002	BIT1..	BIT01
000001	BIT0..	BIT00

; EVENT FLAG DEFINITIONS
; EF32:EF17 RESERVED FOR SUPERVISOR TO PROGRAM COMMUNICATION

000040	EF.START..	32.	; START COMMAND WAS ISSUED
000037	EF.RESTART..	31.	; RESTART COMMAND WAS ISSUED
000036	EF.CONTINUE..	30.	; CONTINUE COMMAND WAS ISSUED
000035	EF.NEW..	29.	; A NEW PASS HAS BEEN STARTED
000034	EF.PWR..	28.	; A POWER FAIL POWER UP OCCURRED

; PRIORITY LEVEL DEFINITIONS

000340 PRI07.. 340

GLOBAL EQUATES SECTION

000300	PRI06** 300
000240	PRI05** 240
000200	PRI04** 200
000140	PRI03** 140
000100	PRI02** 100
000040	PRI01** 40
000000	PRI00** 0

; OPERATOR FLAG BITS

000004	EVL** 4
000010	LOT** 10
000020	ADR** 20
000040	IDU** 40
000100	ISR** 100
000200	UAM** 200
000400	BOE** 400
001000	PNT** 1000
002000	PRI** 2000
004000	IXE** 4000
010000	IBE** 10000
020000	IER** 20000
040000	LOE** 40000
100000	MOE** 100000

2155
2156
2157
2158
2159

171000	IXSTA** 171000	; FIRST STANDARD IDV/IAV 11 ADDRESS
171770	IXEND** 171770	; LAST STANDARD IDV/IAV 11 ADDRESS

; NB. SEE ALSO MESSAGE NODE V BELOW.

GLOBAL DATA SECTION

```

2161          .SBTTL GLOBAL DATA SECTION
2162
2163          ;**
2164          ; THE GLOBAL DATA SECTION CONTAINS DATA THAT ARE USED
2165          ; IN MORE THAN ONE TEST.
2166          ;
2167
2168 003700 000000 MOD::          .WORD 0          ; MODE REGISTER ADDRESS OF CURRENT UUT
2169 003702 000000 DAT::          .WORD 0          ; DATA REGISTER ADDRESS OF CURRENT UUT
2170 003704 000000 CSA::          .WORD 0          ; CSR REGISTER A ADDRESS OF CURRENT UUT
2171 003706 000000 CSB::          .WORD 0          ; CSR REGISTER B ADDRESS OF CURRENT UUT
2172 003710 000000 VEC::          .WORD 0          ; VECTOR ADDRESS OF CURRENT UUT
2173 003712 000000 PRIO::         .WORD 0          ; PRIORITY LEVEL OF CURRENT UUT
2174 003714 000000 COND::         .WORD 0          ; SET IF UUT IS CONNECTED TO ANOTHER
2175 003716 000000 LOWLVL::       .WORD 0          ; LOW LEVEL FOR DIGITAL INPUT LOOPBACK
2176 003720 000003 DBOUNC::       .WORD 3          ; DEBOUNC PERIOD FOR DIGITAL INPUT LOOPB.
2177 003722 000000 OTHMOD::       .WORD 0          ; OTHER MODULE MODE REGISTER ADDRESS
2178 003724 000000 OTHDAT::       .WORD 0          ; OTHER MODULE DATA REGISTER ADDRESS
2179 003726 000000 OTHCSA::       .WORD 0          ; OTHER MODULE REGISTER A ADDRESS
2180 003730 000000 OTHCSB::       .WORD 0          ; OTHER MODULE REGISTER B ADDRESS
2181 003732 000000 OTHVEC::       .WORD 0          ; OTHER MODULE VECTOR ADDRESS
2182
2183 003734 100000 ECNT::          .WORD 100000 ; ERROR COUNT FOR UUT 0 BIT 15 IS SET TO
2184 003736 100000          .WORD 100000 ; ERROR COUNT FOR UUT 1 FLAG NOT TESTED.
2185 003740 100000          .WORD 100000 ; ERROR COUNT FOR UUT 2
2186 003742 100000          .WORD 100000 ; ERROR COUNT FOR UUT 3
2187 003744 100000          .WORD 100000 ; ERROR COUNT FOR UUT 4
2188 003746 100000          .WORD 100000 ; ERROR COUNT FOR UUT 5
2189 003750 100000          .WORD 100000 ; ERROR COUNT FOR UUT 6
2190 003752 100000          .WORD 100000 ; ERROR COUNT FOR UUT 7
2191 003754 100000          .WORD 100000 ; ERROR COUNT FOR UUT 8
2192 003756 100000          .WORD 100000 ; ERROR COUNT FOR UUT 9
2193 003760 100000          .WORD 100000 ; ERROR COUNT FOR UUT 10
2194 003762 100000          .WORD 100000 ; ERROR COUNT FOR UUT 11
2195 003764 100000          .WORD 100000 ; ERROR COUNT FOR UUT 12
2196 003766 100000          .WORD 100000 ; ERROR COUNT FOR UUT 13
2197 003770 100000          .WORD 100000 ; ERROR COUNT FOR UUT 14
2198 003772 100000          .WORD 100000 ; ERROR COUNT FOR UUT 15
2199
2200 003774 000000 GPADD::          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 0
2201 003776 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 1
2202 004000 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 2
2203 004002 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 3
2204 004004 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 4
2205 004006 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 5
2206 004010 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 6
2207 004012 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 7
2208 004014 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 8
2209 004016 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 9
2210 004020 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 10
2211 004022 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 11
2212 004024 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 12
2213 004026 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 13
2214 004030 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 14
2215 004032 000000          .WORD 0          ; PARAMETER ADDRESS FOR UNIT 15
2216
2217 004034          DROPED::       .BLKB 1+          ; UNIT DROPPED FLAGS

```


GLOBAL DATA SECTION

```

2275
2276 004134 000000      MODE:: .WORD 0      ; MODE FOR DIGITAL/ANALOGUE CONVERSIONS
2277 004136 000000      GAIN:: .WORD 0     ; GAIN FOR DIGITAL/ANALOGUE CONVERSIONS
2278
2279 004140 000000      PADD:: .WORD 0     ; ADDRESS OF PROMPT FOR DECIMAL INPUT ROUTINE
2280
2281      ;THE FOLLOWING EQUATES ARE ONLY USED IN THE TESTS
2282
2283 004142 000000      ANS:: .WORD 0      ; TEMPORARY STORE FOR MANUAL INPUTS
2284 004144 000000      ITRCNT:: .WORD 0   ; ITERRATION COUNTER
2285 004146 000010      ITRDEF:: .WORD 10  ; ITERRATION DEFAULT
2286 004150 000000      INTFLA:: .WORD 0   ; DONE INTERRUPT FLAG
2287 004152 000000      INTFL2:: .WORD 0   ; ERROR INTERRUPT FLAG
2288 004154 000020      CYCLE:: .WORD 20   ; CYCLE COUNTER FOR PATTERN PAIR LOOPBACK
2289 004156 000003      CYCLLS:: .WORD 3    ; CYCLE COUNTER FOR LLS AND SLIDING TESTS
2290 004160 000500      CYCRAD:: .WORD 500  ; CYCLE COUNTER FOR RANDOM LOOPBACK TESTS
2291 004162 000020      LLWC:: .WORD 16.   ; INPUT MODULE LOW LEVEL WAIT VALUE (10MS)
2292 004164 007777      REDTIM:: .WORD 7777 ; READY TIMEOUT COUNTER
2293 004166 000001      OUTDE1:: .WORD 1    ; OPTO OUTPUT DLBOUNCE WAIT VALUE
2294 004170 000012      OUTDE2:: .WORD 12   ; RELAY OUTPUT DEBOUNCE WAIT VALUE
2295
2296      ;THE FOLLOWING TABEL GIVE THE LOAD VALUE OF HOW OFTEN THE 500 US
2297      ;WAIT LOOP WILL BE EXECUTED.
2298      ;THE TABLE IS FOR DIGITAL INPUT MODULES ONLY AND WILL BE USED IN THE
2299      ;DIGITAL INPUT LOOPBACK TESTS.(TEST 8,10,12)
2300
2301 004172 000      DBTAB:: .BYTE 0      ; DUMMY LOCATION FOR USE OF R5
2302 004173 001      .BYTE 1      ; VALUE FOR INPUT MODULE DEB. 500US
2303 004174 013      .BYTE 11.     ; VALUE FOR INPUT MODULE DEB. 5MS
2304 004175 025      .BYTE 21.     ; VALUE FOR INPUT MODULE DEB. 10MS
2305
2306      .EVEN
2307
2308

```

GLOBAL DATA SECTION

```

2310          000012          .RADIX 10
2311                                     .MLIST BEX
2312
2313          ; ANALOGUE/DIGITAL CONVERSION TABLES USED BY ROUTINES DACON AND ADCON.
2314
2315          ; VOLTAGE UNIPOLAR TABLE MODE 0 (0-10V)
2316
2317          ; BITS   11   10   9   8   7   6   5   4   3   2   1   0
2318
2319 004176 011610 004704 002342 VUPTAB:: 5000,2500,1250, 625, 312, 156, 78, 39, 19, 9, 4, 2 ; MV G=1
2320 004226 000000 000000 000000          0, 0, 0, 0, 500, 250, 125, 63, 531, 766, 883, 441 ; UV
2321
2322 004256 004704 002342 001161          2500,1250, 625, 312, 156, 78, 39, 19, 9, 4, 2, 1 ; MV G=2
2323 004306 000000 000000 000000          0, 0, 0, 500, 250, 125, 63, 531, 766, 883, 441, 221 ; UV
2324
2325 004336 001750 000764 000372          1000, 500, 250, 125, 62, 31, 15, 7, 3, 1, 0, 0 ; MV G=5
2326 004366 000000 000000 000000          0, 0, 0, 0, 500, 250, 625, 813, 906, 953, 977, 488 ; UV
2327
2328 004416 000764 000372 000175          500, 250, 125, 62, 31, 15, 7, 3, 1, 0, 0, 0 ; MV G=10
2329 004446 000000 000000 000000          0, 0, 0, 500, 250, 625, 813, 906, 953, 977, 488, 244 ; UV
2330
2331 004476 000372 000175 000076          250, 125, 62, 31, 15, 7, 3, 1, 0, 0, 0, 0 ; MV G=20
2332 004526 000000 000000 000764          0, 0, 500, 250, 625, 813, 906, 953, 977, 488, 244, 122 ; UV
2333
2334 004556 000144 000062 000031          100, 50, 25, 12, 6, 3, 1, 0, 0, 0, 0, 0 ; MV G=50
2335 004606 000000 000000 000000          0, 0, 0, 500, 250, 125, 563, 781, 391, 195, 98, 49 ; UV
2336
2337 004636 000062 000031 000014          50, 25, 12, 6, 3, 1, 0, 0, 0, 0, 0, 0 ; MV G=100
2338 004666 000000 000000 000764          0, 0, 500, 250, 125, 563, 781, 391, 195, 98, 49, 24 ; UV
2339
2340 004716 000031 000014 000006          25, 12, 6, 3, 1, 0, 0, 0, 0, 0, 0, 0 ; MV G=200
2341 004746 000000 000764 000372          0, 500, 250, 125, 563, 781, 391, 195, 98, 49, 24, 12 ; UV
2342

```


C5

GLOBAL DATA SECTION

					CURRENT 0-20 MA TABLE MODE 2															
					BITS	11	10	9	8	7	6	5	4	3	2	1	0			
2373																				
2374																				
2375																				
2376																				
2377	005576	023420	011610	004704	IOTAB::	10000.	5000.	2500.	1250.	625.	312.	156.	78.	39.	19.	9.	4.	;	UA G=1	
2378	005626	000000	000000	000000		0.	0.	0.	0.	0.	500.	250.	125.	63.	531.	766.	883.	;	NA	
2379																				
2380	005656	011610	004704	002342		5000.	2500.	1250.	625.	312.	156.	78.	39.	19.	9.	4.	2.	;	UA G=2	
2381	005706	000000	000000	000000		0.	0.	0.	0.	500.	250.	125.	63.	531.	766.	883.	441.	;	NA	
2382																				
2383	005736	003720	001750	000764		2000.	1000.	500.	250.	125.	62.	31.	15.	7.	3.	1.	0.	;	MA G=5	
2384	005766	000000	000000	000000		0.	0.	0.	0.	0.	500.	250.	625.	813.	906.	953.	977.	;	NA	
2385																				
2386	006016	001750	000764	000372		1000.	500.	250.	125.	62.	31.	15.	7.	3.	1.	0.	0.	;	UA G=10	
2387	006046	000000	000000	000000		0.	0.	0.	0.	500.	250.	625.	813.	906.	953.	977.	488.	;	NA	
2388																				
2389	006076	000764	000372	000175		500.	250.	125.	62.	31.	15.	7.	3.	1.	0.	0.	0.	;	UA G=20	
2390	006126	000000	000000	000000		0.	0.	0.	500.	250.	625.	813.	906.	953.	977.	488.	244.	;	NA	
2391																				
2392	006156	000310	000144	000062		200.	100.	50.	25.	12.	6.	3.	1.	0.	0.	0.	0.	;	UA G=50	
2393	006206	000000	000000	000000		0.	0.	0.	0.	500.	250.	125.	563.	781.	391.	195.	98.	;	NA	
2394																				
2395	006236	000144	000062	000031		100.	50.	25.	12.	6.	3.	1.	0.	0.	0.	0.	0.	;	UA G=100	
2396	006266	000000	000000	000000		0.	0.	0.	500.	250.	125.	563.	781.	391.	195.	98.	49.	;	NA	
2397																				
2398	006316	000062	000031	000014		50.	25.	12.	6.	3.	1.	0.	0.	0.	0.	0.	0.	;	UA G=200	
2399	006346	000000	000000	000764		0.	0.	500.	250.	125.	563.	781.	391.	195.	98.	49.	24.	;	NA	
2400																				

GLOBAL DATA SECTION

2435
2448
2449

007176
007176 000000
007200 000000
007202 000000
007204 000000

ERRTBL

ERRTYP:: .WORD 0
ERRNBR:: .WORD 0
ERRMSG:: .WORD 0
ERRBLK:: .WORD 0

L\$ERRTBL::

GLOBAL TEXT SECTION

```

2451          .SBTTL GLOBAL TEXT SECTION
2452
2453          ;**
2454          ; THE GLOBAL TEXT SECTION CONTAINS FORMAT STATEMENTS,
2455          ; MESSAGES, AND ASCII INFORMATION THAT ARE USED IN
2456          ; MORE THAN ONE TEST.
2457          ;
2458
2459          .NLIST BEX
2460
2461          ;
2462          ; NAMES OF DEVICES SUPPORTED BY PROGRAM
2463          ;
2464          DEVTYP <IDV\IAV-11>
2465          007206
2466          007206      111      104      126
2467
2468
2469          ;
2470          ; TEST DESCRIPTION
2471          ;
2472          DESCRIPT      <IDV\IAV 11 DIAGNOSTIC>
2473          007222
2474          007222      111      104      126
2475
2476          ;
2477          ;
2478          ;
2479          ;
2480          ;
2481          ;
2482          ;
2483          ;
2484          ;
2485          ;
2486          ;
2487          ;
2488          ;
2489          ;
2490          ;
2491          ;
2492          ;
2493          ;
2494          ;
2495          ;
2496          ;
2497          ;
2498          ;
2499          ;
2500          ;
2501          ;
2502          ;

```

IC/

```

L$DVTYP:: .ASCIZ /IDV\IAV-11/
.EVEN

L$DESC:: .ASCIZ /IDV\IAV-11 DIAGNOST
.EVEN

NODEV:: .ASCIZ \N/A*** NO DEVICES FOUND IN RANGE 171000 TO 171770 ***N\
.LIST BEX
.EVEN

```

GLOBAL ERROR REPORT SECTION

2511
 2512
 2513
 2514
 2515
 2516
 2517
 2518
 2519
 2535
 2536 007342
 007342
 2537 007342
 007342 013746 004064
 007346 013746 004062
 007352 012746 007732
 007356 012746 000003
 007362 010600
 007364 104414
 007366 062706 000010
 2538 007372 004737 011342
 2539 007376
 007376
 007376 104423
 2540
 2541
 2542 007400
 007400
 2543 007400
 007400 017746 174274
 007404 013746 004064
 007410 013746 004062
 007414 012746 010101
 007420 012746 000004
 007424 010600
 007426 104414
 007430 062706 000012
 2544 007434 004737 011342
 2545 007440
 007440
 007440 104423
 2546
 2547 007442
 007442
 2548 007442
 007442 017746 174236
 007446 012746 010166
 007452 012746 000002
 007456 010600
 007460 104414
 007462 062706 000006
 2549 007466 004737 011342
 2550 007472
 007472
 007472 104423
 2551
 2552

.SBTTL GLOBAL ERROR REPORT SECTION

```

; **
; THE GLOBAL ERROR REPORT SECTION CONTAINS MESSAGE PRINTING AREAS
; USED BY MORE THAN TEST TO OUTPUT ADDITIONAL ERROR INFORMATION. PRINTB
; (BASIC) AND PRINTX (EXTENDED) CALLS ARE USED TO CALL PRINT SERVICES.
;

```

BGNMSG EER1

PRINTB @GOOBAD,GOOD,BAD

EER1::

; PRINT GOOD AND BAD

```

MOV BAD, -(SP)
MOV GOOD, (SP)
MOV @GOOBAD, -(SP)
MOV @3, -(SP)
MOV SP,R0
TRAP C$PNTB
ADD @10,SP

```

JSR PC,CHKMAX

; CHECK FOR TOO MANY ERRORS

ENDMSG

L10004:

TRAP C\$MSG

BGNMSG EER2

PRINTB @EMG3,GOOD,BAD,@MOD

EER2::

```

MOV @MOD, -(SP)
MOV BAD, (SP)
MOV GOOD, (SP)
MOV @EMG3, -(SP)
MOV @4, -(SP)
MOV SP,R0
TRAP C$PNTB
ADD @12,SP

```

JSR PC,CHKMAX

ENDMSG

L10005:

TRAP C\$MSG

BGNMSG EER3

PRINTB @EMG4,@CSA

EER3::

```

MOV @CSA, -(SP)
MOV @EMG4, (SP)
MOV @2, (SP)
MOV SP,R0
TRAP C$PNTB
ADD @6,SP

```

JSR PC,CHKMAX

ENDMSG

L10006:

TRAP C\$MSG

GLOBAL ERROR REPORT SECTION

2553	007474			BGNMSG	EER4		
	007474						
2554	007474	000304		SWAB	R4	EER4::	
2555	007476			PRINTB	#EMG5,GOOD,BAD,R4		
	007476	010446					MOV R4,-(SP)
	007500	013746	004064				MOV BAD,-(SP)
	007504	013746	004062				MOV GOOD,-(SP)
	007510	012746	010230				MOV #EMG5,(SP)
	007514	012746	000004				MOV #4,-(SP)
	007520	010600					MOV SP,R0
	007522	104414					TRAP C\$PNTB
	007524	062706	000012				ADD #12,SP
2556	007530	000304		SWAB	R4		
2557	007532	004737	011342	JSR	PC,CHKMAX		
2558	007536			ENDMSG			
	007536	104423				L10007:	TRAP C\$MSG
2559							
2560							
2561	007540			BGNMSG	EER5		
	007540						
2562	007540			PRINTB	#EMG6,GOOD,BAD,@CSA	EER5::	
	007540	017746	174140				MOV @CSA,-(SP)
	007544	013746	004064				MOV BAD,-(SP)
	007550	013746	004062				MOV GOOD,-(SP)
	007554	012746	010314				MOV #EMG6,-(SP)
	007560	012746	000004				MOV #4,-(SP)
	007564	010600					MOV SP,R0
	007566	104414					TRAP C\$PNTB
	007570	062706	000012				ADD #12,SP
2563	007574	004737	011342	JSR	PC,CHKMAX		
2564	007600			ENDMSG			
	007600	104423				L10010:	TRAP C\$MSG
2565							
2566							
2567	007602			BGNMSG	EER6		
	007602						
2568	007602			PRINTB	#EMG4,BAD	EER6::	
	007602	013746	004064				MOV BAD,-(SP)
	007606	012746	010166				MOV #EMG4,-(SP)
	007612	012746	000002				MOV #2,-(SP)
	007616	010600					MOV SP,R0
	007620	104414					TRAP C\$PNTB
	007622	062706	000006				ADD #6,SP
2569	007626	004737	011342	JSR	PC,CHKMAX		
2570	007632			ENDMSG			
	007632	104423				L10011:	TRAP C\$MSG
2571							
2572							
2573							
2574	007634			BGNMSG	EERA		
	007634						
2575	007634			PRINTB	#EMG1,R1	EERA::	
	007634	010146					MOV R1,(SP)
	007636	012746	007762				MOV #EMG1,(SP)

GLOBAL ERROR REPORT SECTION

007642	012746	000002						
007646	010600						MOV	#2, (SP)
007650	104414						MOV	SP, R0
007652	062706	000006					TRAP	C\$PNTB
2576	007656	004737	011342	JSR	PC,CHKMAX		ADD	#6, SP
2577	007662			ENDMSG				
	007662							
	007662	104423				L10012:	TRAP	C\$MSG
2578								
2579								
2580	007664			BGNMSG	EERB			
	007664					EERB::		
2581	007664			PRINTB	#EMG2, R5, GOOD, BAD			
	007664	013746	004064				MOV	BAD, -(SP)
	007670	013746	004062				MOV	GOOD, (SP)
	007674	010546					MOV	R5, (SP)
	007676	012746	010031				MOV	#EMG2, -(SP)
	007702	012746	000004				MOV	#4, (SP)
	007706	010600					MOV	SP, R0
	007710	104414					TRAP	C\$PNTB
	007712	062706	000012				ADD	#12, SP
2582	007716	004737	011342	JSR	PC,CHKMAX			
2583	007722			ENDMSG				
	007722					L10013:	TRAP	C\$MSG
	007722	104423						
2584								
2585								
2586	007724			BGNMSG	EERG			
	007724					EERG::		
2587	007724	004737	011342	JSR	PC,CHKMAX			
2588	007730			ENDMSG				
	007730					L10014:	TRAP	C\$MSG
	007730	104423						
2589								
2590				.NLIST	BEX			
2591	007732	045	101	107	GOOBAD: .ASCIZ	/#AGOOD:#06#A, BAD:#06#N/		
2592	007762	045	101	122	EMG1: .ASCIZ	/#AREGISTER AT #06#A DOES NOT RESPOND#N/		
2593	010031	045	101	101	EMG2: .ASCIZ	/#AADDRESS: #06#A, GOOD:#06#A, BAD:#06#N/		
2594	010101	045	101	107	EMG3: .ASCIZ	/#AGOOD:#06#A, BAD:#06#A, MOD REGISTER CONTENTS:#06#N/		
2595	010166	045	101	103	EMG4: .ASCIZ	/#ACSA REGISTER CONTENTS IS :#06#N/		
2596	010230	045	101	107	EMG5: .ASCIZ	/#AGOOD:#06#A, BAD:#06#A, ADDRESSED CHANNEL IS:#D3#N/		
2597	010314	045	101	107	EMG6: .ASCIZ	/#AGOOD:#06#A, BAD:#06#A, CSA REGISTER CONTENTS:#06#N/		
2598					.LIST	BEX		
2599					.EVEN			
2600								

GLOBAL SUBROUTINES SECTION

```

2602 .SBTTL GLOBAL SUBROUTINES SECTION
2603
2604 ;**
2605 ; THE GLOBAL SUBROUTINES SECTION CONTAINS THE SUBROUTINES
2606 ; THAT ARE USED IN MORE THAN ONE TEST.
2607 ;
2608
2609 ; SUBROUTINE REGTST GENERAL PURPOSE REGISTER TEST.
2610
2611 ;**
2612 ; FUNCTIONAL DESCRIPTION:
2613 ;
2614 ; CHECKS THAT ALL READ/WRITE BITS OF THE SELECTED REGISTER CAN BE
2615 ; SET, CLEARED, AND INDIVIDUALLY SET (SLIDING ONES PATTERN).
2616 ;
2617 ; INPUTS:
2618 ;
2619 ; IF ENTERED AT LOCATION REGTST, THE LOCATIONS FOLLOWING THE
2620 ; SUBROUTINE CALL MUST CONTAIN THE READ/WRITE BIT MASK, THE
2621 ; ADDRESS OF THE REGISTER TO BE TESTED, AND THE FIRST ERROR NUMBER
2622 ; TO BE USED (SEE CALLING SEQUENCE).
2623 ;
2624 ; IF ENTERED AT LOCATION REGTST1, THE READ/WRITE BIT MASK, REGISTER
2625 ; ADDRESS TO BE TESTED, AND THE FIRST ERROR NUMBER MUST BE LOADED
2626 ; INTO LOCATIONS MASK, REGADD, AND ERRNBR RESPECTIVELY. THIS
2627 ; ALLOWS THE ARGUMENTS TO BE VARIED AT RUN TIME.
2628 ;
2629 ; IMPLICIT INPUTS:
2630 ;
2631 ; NONE.
2632 ;
2633 ; OUTPUTS:
2634 ;
2635 ; ERROR MESSAGES IF ERRORS OCCUR.
2636 ;
2637 ; IMPLICIT OUTPUTS:
2638 ;
2639 ; IF ENTERED AT LOCATION REGTST,
2640 ;
2641 ; MASK CONTAINS THE READ/WRITE BIT MASK
2642 ; REGADD CONTAINS THE ADDRESS OF THE REGISTER BEING TESTED
2643 ;
2644 ; ALWAYS,
2645 ;
2646 ; MASCOM CONTAINS THE COMPLEMENT OF THE MASK
2647 ; GOOD CONTAINS LAST EXPECTED DATA
2648 ; BAD CONTAINS LAST ACTUAL DATA
2649 ; ERRNBR CONTAINS THE INPUT ERROR NUMBER * 2
2650 ; ERRTP CONTAINS 3 (SOFT ERROR)
2651 ; ERRBLK CONTAINS ADDRESS OF REGERR (REGISTER ERROR MESSAGE)
2652 ; ERRMSG - CONTAINS 3RD REGISTER ERROR MESSAGE
2653 ;
2654 ; SUBORDINATE ROUTINES USED:
2655 ;
2656 ; INSERT ERROR INSERTION ROUTINE
2657 ; CHKMAX ERROR COUNT CHECKING ROUTINE
2658 ; ORS ERROR MACRO

```

GLOBAL SUBROUTINES SECTION

```

2659
2660
2661
2662
2663
2664
2665
2666
2667
2668
2669
2670
2671
2672
2673
2674
2675
2676
2677
2678
2679
2680
2681
2682 010402
2683 010402 017637 000000 010754
2684 010410 062716 000002
2685 010414 017637 000000 010760
2686 010422 062716 000002
2687 010426 017637 000000 007200
2688 010434 062716 000002
2689 010440
2690 010440 013737 010754 010756
2691 010446 005137 010756
2692 010452 012737 000003 007176
2693 010460 012737 010762 007204
2694 010466 012737 011030 007202
2695
2696
2697
2698 010474 013737 010754 004062
2699 010502
010502 104404
2700 010504 053777 004062 000246
2701 010512 017737 000242 004064
2702 010520 043737 010756 004064
2703 010526 023737 004064 004062
2704 010534 004737 012146
2705 010540 001401
2706 010542
010542 104460
2707 010544
010544
010544 104405
2708
2709
2710
2711 010546 005037 004062

```

```

; FUNCTIONAL SIDE EFFECTS:
;
; NONE.
;
; CALLING SEQUENCE:
;
; EITHER FIXED PARAMETERS FOLLOW THE SUBROUTINE CALL :
;
; EG.      CALL      REGTST
;           177      ; BIT MASK OF R/W BITS
;           CSR      ; REGISTER ADDRESS
;           200.    ; FIRST ERROR NUMBER
;
; OR PARAMETERS ARE SET DYNAMICALLY :
;
; EG.      MOV      @177,MASK ; BIT MASK OF R/W BITS
;           MOV      CSR,REGADD ; REGISTER ADDRESS
;           MOV      @200.,ERRNBR ; FIRST ERROR NUMBER
;           CALL     REGTST1
;
REGTST::
MOV      @2(SP),MASK ; GET R/W BIT MASK
ADD      @2,(SP) ; JUMP OVER ARGUMENT
MOV      @2(SP),REGADD ; GET REGISTER ADDRESS
ADD      @2,(SP) ; JUMP OVER ARGUMENT
MOV      @2(SP),ERRNBR ; GET FIRST ERROR NUMBER
ADD      @2,(SP) ; JUMP OVER ARGUMENT
REGTST1::
MOV      MASK,MASCOM ; SET UP COMPLEMENT
COM      MASCOM ; OF R/W BIT MASK
MOV      @3,ERRTYP ; SET UP FOR SOFT ERROR
MOV      @REGERR,ERRBLK ; SET UP ERROR MESSAGE ROUTINE
MOV      @RERR1,ERRMSG ; FIRST ERROR MESSAGE
;
; CHECK THAT ALL R/W BITS CAN BE SET
;
MOV      MASK,GOOD ; SET UP EXPECTED DATA
BGNSEG
;
BIS      GOOD,@REGADD ; SET ALL R/W BITS
MOV      @REGADD,BAD ; READ THE RESULT
BIC      MASCOM,BAD ; KEEP ONLY R/W BITS
CMP      BAD,GOOD ; ALL R/W BITS SET?
CALL     INSERT ; ALLOW FORCED ERROR PRINTOUT
BEQ      10$ ; IF OK, BRANCH
ERROR ; ELSE REPORT ERROR
10$: ENDSEG
10000$: TRAP C$BSEG
10000$: TRAP C$ERROR
10000$: TRAP C$SEEG
;
; CHECK THAT ALL R/W BITS CAN BE CLEARED
;
CLR      GOOD ; SET UP EXPECTED DATA

```


GLOBAL SUBROUTINES SECTION

```

2712 010552 005237 007200          INC      ERRNBR          ; NEXT ERROR NUMBER
2713 010556 012737 011102 007202  MOV      @RERR2,ERRMSG ; NEXT ERROR MESSAGE
2714
2715 010564          BGNSEG
      010564 104404
2716 010566 043777 010754 000164    BIC      MASK,@REGADD   ; CLEAR ALL R/W BITS          TRAP   C$BSEG
2717 010574 017737 000160 004064    MOV      @REGADD,BAD    ; READ THE RESULT
2718 010602 043737 010756 004064    BIC      MASCOM,BAD     ; KEEP ONLY R/W BITS
2719 010610 023737 004064 004062    CMP      BAD,GOOD      ; ALL R/W BITS CLEAR?
2720 010616 004737 012146          CALL     INSERT         ; ALLOW FORCED ERROR PRINTOUT
2721 010622 001401          BEQ     20$            ; IF OK, BRANCH
2722 010624          ERROR              ; ELSE REPORT ERROR
      010624 104460
2723 010626          20$:  ENDSEG              TRAP   C$ERROR
      010626
      010626 104405          10001$: TRAP   C$ESEG
2724
2725          ; CHECK THAT EACH R/W BIT CAN BE SET
2726          ;
2727 010630 005237 007200          INC      ERRNBR          ; NEXT ERROR NUMBER
2728 010634 012737 011160 007202  MOV      @RERR3,ERRMSG ; NEXT ERROR MESSAGE
2729 010642 012737 000001 004062  MOV      #1,GOOD       ; FIRST BIT TO TEST
2730 010650 033737 004062 010754 30$:  BIT      GOOD,MASK     ; R/W BIT?
2731 010656 001004          BNE     50$            ; IF YES, TEST IT
2732 010660 006337 004062          40$:  ASL      GOOD     ; ELSE FIND NEXT R/W BIT
2733 010664 103427          BCS     70$            ; IF ALL DONE, RETURN
2734 010666 000770          BR      30$           ; ELSE CHECK IF NEXT IS R/W
2735
2736 010670          50$:  BGNSEG              TRAP   C$BSEG
      010670 104404
2737 010672 043777 010754 000060    BIC      MASK,@REGADD   ; CLEAR ALL R/W BITS
2738 010700 053777 004062 000052    BIS      GOOD,@REGADD   ; SET ONE BIT
2739 010706 017737 000046 004064    MOV      @REGADD,BAD    ; READ IT BACK
2740 010714 043737 010756 004064    BIC      MASCOM,BAD     ; KEEP ONLY R/W BITS
2741 010722 023737 004064 004062    CMP      BAD,GOOD      ; ALL OTHER BITS CLEAR?
2742 010730 004737 012146          CALL     INSERT         ; ALLOW FORCED ERROR PRINTOUT
2743 010734 001401          BEQ     60$            ; IF OK, BRANCH
2744 010736          ERROR              ; ELSE REPORT ERROR
      010736 104460
2745 010740          60$:  ENDSEG              TRAP   C$ERROR
      010740
      010740 104405          10002$: TRAP   C$ESEG
2746 010742 000746          BR      40$           ; TEST NEXT BIT
2747
2748 010744 043777 010754 000006 70$:  BIC      MASK,@REGADD ; LEAVE THE R/W BITS CLEAR
2749 010752 000207          RETURN
2750
2751
2752 010754 000000          MASK:: .WORD 0        ; BIT MASK OF READ/WRITE BITS
2753 010756 000000          MASCOM: .WORD 0     ; COMPLEMENT OF MASK
2754 010760 000000          REGADD:: .WORD 0    ; ADDRESS OF REGISTER TO BE TESTED
2755
2756 010762          BGNMSG  REGERR
      010762
2757 010762          PRINTB @REGMSG,REGADD,GOOD,BAD,MASK          REGERR::
      010762 013746 010754          MOV      MASK, (SP)
      010766 013746 004064          MOV      BAD, (SP)

```

GLOBAL SUBROUTINES SECTION

```

010772 013746 004062
010776 013746 010760
011002 012746 011247
011006 012746 000005
011012 010600
011014 104414
011016 062706 000014
2758 011022 004737 011342 JSR PC.CHKMAX ; CHECK FOR TOO MANY ERRORS
2759 011026 ENDMSG
011026
011026 104423 L10015: TRAP C$MSG
2760
2761 .NLIST BEX
2762
2763 011030 122 105 107 RERR1: .ASCIZ #REGISTER READ/WRITE BITS COULD NOT BE SET#
2764 011102 122 105 107 RERR2: .ASCIZ #REGISTER READ/WRITE BITS COULD NOT BE CLEARED#
2765 011160 122 105 107 RERR3: .ASCIZ #REGISTER READ/WRITE BITS COULD NOT BE INDIVIDUALLY SET#
2766
2767 011247 045 101 101 REGMSG: .ASCIZ .#ADDRESS: #06#A, GOOD: #06#A, BAD: #06#A, R/W BITS: #06#N.
2768
2769 .LIST BEX
2770 .EVEN

```

```

MOV GOOD, -(SP)
MOV REGADD, -(SP)
MOV #REGMSG, -(SP)
MOV #5, -(SP)
MOV SP, R0
TRAP C$PNTB
ADD #14, SP

```

GLOBAL SUBROUTINES SECTION

```

2772 ; SUBROUTINE CHKMAX ERROR COUNT CHECKING ROUTINE.
2773 ;
2774 ;**
2775 ; FUNCTIONAL DESCRIPTION:
2776 ;
2777 ; SUBROUTINE TO UPDATE UNIT ERROR COUNT. IF THE PROGRAM IS LOOPING
2778 ; ON AN ERROR, THE SUBROUTINE DOES NOTHING. OTHERWISE, THE ERROR
2779 ; COUNT FOR THE UNIT IS INCREMENTED. IF THE ERROR COUNT EXCEEDS 5
2780 ; AND THE USER FLAG EVL HAS BEEN SELECTED AND THE FLAG IDU IS NOT
2781 ; SELECTED, THE UNIT IS DROPPED FROM THE TEST CYCLE.
2782 ;
2783 ; INPUTS:
2784 ;
2785 ; NONE
2786 ;
2787 ; IMPLICIT INPUTS:
2788 ;
2789 ; L$LUN CONTAINS THE NUMBER OF THE UNIT CURRENTLY BEING TESTED.
2790 ; ECNT IS THE ADDRESS OF THE ERROR COUNT FOR UNIT 0
2791 ;
2792 ; OUTPUTS:
2793 ;
2794 ; NONE.
2795 ;
2796 ; IMPLICIT OUTPUTS:
2797 ;
2798 ; THE ERROR COUNT FOR THE LOGICAL UNIT BEING TESTED IS
2799 ; INCREMENTED IF THE PROGRAM IS NOT LOOPING.
2800 ;
2801 ; SUBORDINATE ROUTINES USED:
2802 ;
2803 ; NONE.
2804 ;
2805 ; FUNCTIONAL SIDE EFFECTS:
2806 ;
2807 ; IF THE ERROR COUNT EXCEEDS 5 AND THE USER EVL FLAG IS SELECTED,
2808 ; AND THE 'LOOP ON TEST' AND 'INHIBIT DROPPING OF UNITS' FLAGS ARE
2809 ; NOT SELECTED, THE UNIT WILL BE DROPPED FROM TESTING.
2810 ;
2811 ; CALLING SEQUENCE:
2812 ;
2813 ; JSR PC,CHKMAX
2814 ;
2815 ;
2816 ;
2817 011342 CHKMAX::INLOOP ; LOOPING ON ERROR?
2818 011342 104420 ; TRAP C$INLP
2819 011344 103436 ; IF YES, EXIT BCS !0$
2820 011346 013700 002074 MOV L$LUN,RO ; GET CURRENT UNIT
2821 011352 006300 ASL R0 ; CONVERT TO ERROR COUNT OFFSET
2822 011354 005260 003734 INC ECNT(RO) ; UPDATE THE ERROR COUNT
2823 011360 026027 003734 000005 CMP ECNT(RO),#5 ; TOO MANY ERRORS?
2824 011366 003425 BLE 10$ ; IF NOT, JUMP
2825 ;
2826 011370 RFLAGS RO ; GET OPERATOR FLAGS

```

GLOBAL SUBROUTINES SECTION

```

011370 104421
2827 011372 032700 000040      BIT    @IDU,RO      ; IS DROPPING INHIBITED?
2828 011376 001021              BNE    10$         ; IF YES, EXIT
2829 011400 032700 000004      BIT    @EVL,RO     ; EVALUATE FLAG SELECTED ?
2830 011404 001416              BEQ    10$         ; IF NOT, EXIT
2831
2832 011406              PRINTF @NERRS,L$LUN ; 'TOO MANY ERRORS'
011406 013746 002074              MOV    L$LUN,(SP)
011412 012746 011444              MOV    @NERRS,(SP)
011416 012746 000002              MOV    @2,-(SP)
011422 010600              MOV    SP,RO
011424 104417              TRAP  C$PNTF
011426 062706 000006              ADD   @6,SP
2833 011432              DODU   L$LUN      ; DROP THE UNIT
011432 013700 002074              MOV    L$LUN,RO
011436 104451              TRAP  C$DODU
2834
2835 011440              DOCLN                ; END THE SUBPASS
011440 104444              TRAP  C$DCLN
2836
2837 011442 000207              10$:  RTS    PC
2838
2839
2840 011444 045 116 045 NERRS: .NLIST BEX
                                .ASCIZ /@N$AMORE THAN 5 ERRORS ON UNIT@D2/
2841                                .LIST  BEX
2842                                .EVEN
2843
2844
2845

```

C6

GLOBAL SUBROUTINES SECTION

```

2847 ; SUBROUTINES WT25M, WT500 AND WT25 DELAY ROUTINES.
2848 ;
2849 ;
2850 ; **
2851 ; FUNCTIONAL DESCRIPTION:
2852 ;
2853 ;     SUBROUTINE TO WAIT FOR 25 MILLISECONDS, 500 MICROSECONDS OR 25
2854 ;     MICROSECONDS.
2855 ;
2856 ;     NOTE. BECAUSE OF THE SMALL NUMBER OF PROGRAM WAIT LOOPS USED FOR
2857 ;     THE 25 MICROSECOND COUNTER, THE ACCURACY OF THE WT25 ROUTINE
2858 ;     IS LOW. THE DELAY MAY LAST UP TO 50 MICROSECONDS ON SOME
2859 ;     SLOW PROCESSORS.
2860 ;
2861 ; INPUTS:
2862 ;
2863 ;     NONE.
2864 ;
2865 ; IMPLICIT INPUTS:
2866 ;
2867 ;     THE VARIABLES CNT25M, CNT500, AND CNT25 MUST HAVE BEEN SET UP BY
2868 ;     ROUTINE SETCLK.
2869 ;
2870 ; OUTPUTS:
2871 ;
2872 ;     NONE.
2873 ;
2874 ; IMPLICIT OUTPUTS:
2875 ;
2876 ;     NONE.
2877 ;
2878 ; SUBORDINATE ROUTINES USED:
2879 ;
2880 ;     NONE.
2881 ;
2882 ; FUNCTIONAL SIDE EFFECTS:
2883 ;
2884 ;     NONE.
2885 ;
2886 ; CALLING SEQUENCE:
2887 ;
2888 ;     JSR     PC,WT25M      ; WAIT FOR 25 MILLISECONDS
2889 ;     OR JSR     PC,WT500   ; WAIT FOR 500 MICROSECONDS
2890 ;     OR JSR     PC,WT25    ; WAIT FOR 25 MICROSECONDS
2891 ;
2892 ;
2893 011506 013700 011534 WT25M:: MOV     CNT25M,RO    ; GET 25 MILLISECOND WAIT COUNT
2894 011512 000405        BR          WAIT          ;
2895
2896 011514 013700 011536 WT500:: MOV     CNT500,RO    ; GET 500 MICROSECOND WAIT COUNT
2897 011520 000402        BR          WAIT          ;
2898
2899 011522 013700 011540 WT25::  MOV     CNT25,RO     ; GET 25 MICROSECOND WAIT COUNT
2900
2901 011526 005300        WAIT:  DEC     RO          ; ALL DONE?
2902 011530 001376        BNE     WAIT        ; IF NOT, WAIT SOME MORE
2903 011532 000207        RTS     PC          ; ELSE RETURN

```

GLOBAL SUBROUTINES SECTION

2904

2905 011534 000000

2906 011536 000000

2907 011540 000000

2908

CNT25M::WORD 0

CNT500::WORD 0

CNT25::WORD 0

; COUNTER FOR 25 MILLISECOND DELAY

; COUNTER FOR 500 MICROSECOND DELAY

; COUNTER FOR 25 MICROSECOND DELAY

GLOBAL SUBROUTINES SECTION

```

2910 ; SUBROUTINE CRLF ROUTINE TO PRINT CARRIAGE RETURN, LINE FEED.
2911
2912 ;**
2913 ; FUNCTIONAL DESCRIPTION:
2914 ;
2915 ; PRINTS A CARRIAGE RETURN AND LINE FEED.
2916 ;
2917 ; INPUTS:
2918 ;
2919 ; NONE.
2920 ;
2921 ; IMPLICIT INPUTS:
2922 ;
2923 ; NONE.
2924 ;
2925 ; OUTPUTS:
2926 ;
2927 ; A CARRIAGE RETURN AND LINE FEED ARE PRINTED.
2928 ;
2929 ; IMPLICIT OUTPUTS:
2930 ;
2931 ; NONE.
2932 ;
2933 ; SUBORDINATE ROUTINES USED:
2934 ;
2935 ; SUPERVISOR PRINTF MACRO.
2936 ;
2937 ; FUNCTIONAL SIDE EFFECTS:
2938 ;
2939 ; NONE.
2940 ;
2941 ; CALLING SEQUENCE:
2942 ;
2943 ; JSR PC,CRLF
2944 ;
2945 ;
2946 ;
2947 011542 CRLF::
2948 011542 PRINTF @LF
011542 012746 011564 MOV @LF,-(SP)
011546 012746 000001 MOV @1,-(SP)
011552 010600 MOV SP,R0
011554 104417 TRAP C$PRINTF
011556 062706 000004 ADD @4,SP
2949 011562 000207 RTS PC
2950
2951 011564 045 116 000 LF: .ASCIZ /N/
2952 .EVEN

```

GLOBAL SUBROUTINES SECTION

```

2954 ; SUBROUTINE WRDY SUBROUTINE TO WAIT FOR OPERATOR READY
2955
2956 ;**
2957 ; FUNCTIONAL DESCRIPTION:
2958 ;
2959 ; THIS PRINTS A MESSAGE FOR THE OPERATOR TO TYPE 'CARRIAGE RETURN'
2960 ; TO CONTINUE. THE ROUTINE IS NORMALLY USED TO ALLOW A MESSAGE TO
2961 ; BE READ BEFORE PROCEEDING.
2962 ;
2963 ; IF MANUAL INTERVENTION IS NOT ALLOWED, THE ROUTINE DOES NOTHING.
2964 ;
2965 ; INPUTS:
2966 ;
2967 ; NONE.
2968 ;
2969 ; IMPLICIT INPUTS:
2970 ;
2971 ; NONE.
2972 ;
2973 ; OUTPUTS:
2974 ;
2975 ; 'TYPE 'CARRIAGE RETURN' TO CONTINUE OR CONRTOL C TO ABORT.
2976 ;
2977 ; IMPLICIT OUTPUTS:
2978 ;
2979 ; NONE.
2980 ;
2981 ; SUBORDINATE ROUTINES USED:
2982 ;
2983 ; SUPERVISOR GMANID MACRO.
2984 ;
2985 ; FUNCTIONAL SIDE EFFECTS:
2986 ;
2987 ; NONE.
2988 ;
2989 ; CALLING SEQUENCE:
2990 ;
2991 ; JSR PC,WRDY
2992 ;
2993 ;
2994 ;
2995 011570 WRDY::
2996 011570 MANUAL ; IS MANUAL INTERVENTION ALLOWED ?
2997 011572 104450 ; IF NOT, EXIT TRAP C$MANI
2998 011574 BCC 10$
2998 011574 104443 GMANID WRDY1,WFLG,A,377,0,1,YES ; TYPE RETURN TO CONTINUE
2998 011576 000406 TRAP C$GMAN
2998 011600 011616 BR 10000$
2998 011602 000152 .WORD WFLG
2998 011604 011620 .WORD T$CODE
2998 011606 000377 .WORD WRDY1
2998 011610 000000 .WORD 377
2998 011612 000001 .WORD T$LOLIM
2998 011614 .WORD T$HILIM
2999 011614 000207 10000$:
2999 10$: RTS PC

```


GLOBAL SUBROUTINES SECTION

```
3000
3001 011616 000000          WFLG:  .WORD  0          ; FLAG FOR WARNING MESSAGE INPUT
3002
3003
3004 011620      124      131      120 WRDY1:  .NLIST  BEX
3005                                     .ASCIZ  /TYPE "CARRIAGE RETURN" TO CONTINUE OR "CONTROL C" TO ABORT./
3006                                     .LIST   BEX
                                     .EVEN
```

GLOBAL SUBROUTINES SECTION

```

3008      ; SUBROUTINE SELECT TEST SELECT ROUTINE
3009
3010      ; **
3011      ; FUNCTIONAL DESCRIPTION:
3012      ;
3013      ;     THIS IS CALLED BY EACH TEST TO DECIDE WHETHER THE TEST SHOULD
3014      ;     BE RUN BASED ON THE DEVICE TYPE AND THE TEST MODE SELECTED IN
3015      ;     THE STARTUP QUESTIONS. A TEST SELECT MASK SUPPLIED BY THE TEST
3016      ;     IS COMPARED WITH A CONTROL MASK SET UP BY THE INITIALISATION
3017      ;     ROUTINE TO DECIDE WHETHER THE TEST IS RUN.
3018      ;
3019      ;     IF THE SOFTWARE FAULT INSERTION FLAG SFI IS SET, ALL NON SPECIFIC
3020      ;     TESTS ARE SELECTED.
3021
3022      ; INPUTS:
3023      ;
3024      ;     THE LOCATION FOLLOWING THE SUBROUTINE CALL CONTAINS THE TEST
3025      ;     SELECT MASK IN THE FOLLOWING FORMAT :
3026      ;
3027      ;     BIT 0 IS SET IF DIGITAL INPUT MODULES ARE TO BE TESTED
3028      ;     BIT 1 IS SET IF DIGITAL OUTPUT MODULES ARE TO BE TESTED
3029      ;     BIT 2 IS SET IF ANALOGUE INPUT MODULES ARE TO BE TESTED
3030      ;     BIT 3 IS SET IF ANALOGUE OUTPUT MODULES ARE TO BE TESTED
3031      ;     BIT 4 IS SET TO FORCE TESTING OF MODULES WHICH ARE NOT
3032      ;     IDENTIFIED AS ANALOGUE OR DIGITAL
3033      ;     BITS 5, 6 AND 7 ARE UNUSED
3034      ;     BIT 8 IS SET TO INDICATE A BASIC INTERNAL LOGIC TEST
3035      ;     BIT 9 IS SET FOR FIELD INPUT/OUTPUT TESTS
3036      ;     BIT 10 IS SET FOR LOOPBACK TESTS
3037      ;     BIT 11 IS SET FOR ANALOGUE INPUT/OUTPUT TESTS USED BY
3038      ;     MANUFACTURING AND FIELD SERVICE
3039      ;     BIT 12 IS SET FOR SPECIFICALLY SELECTABLE TESTS
3040      ;     BITS 13, 14 AND 15 ARE UNUSED
3041      ;
3042      ;     THE SECOND LOCATION FOLLOWING THE SUBROUTINE CALL CONTAINS THE
3043      ;     ADDRESS OF A TEST HEADER MESSAGE TO BE PRINTED IF THE TEST IS
3044      ;     SELECTED AND THE USER 'PNT' FLAG IS SELECTED.
3045
3046      ; IMPLICIT INPUTS:
3047      ;
3048      ;     CONMSK TEST CONTROL MASK SET UP BY INIT CODE AT THE BEGINING
3049      ;     OF EACH SUBPASS. THE FORMAT IS AS FOLLOWS :
3050      ;
3051      ;     BIT 0 IS SET IF UUT IS DIGITAL INPUT
3052      ;     BIT 1 IS SET IF UUT IS DIGITAL OUTPUT
3053      ;     BIT 2 IS SET IF UUT IS ANALOGUE INPUT
3054      ;     BIT 3 IS SET IF UUT IS ANALOGUE OUTPUT
3055      ;     BIT 4 IS SET IF UUT IS NONE OF THE ABOVE
3056      ;     BITS 5, 6 AND 7 ARE UNUSED
3057      ;     BIT 8 IS ALWAYS SET TO SELECT BASIC INTERNAL
3058      ;     LOGIC TESTS
3059      ;     BIT 9 SET TO SELECT FIELD INPUT/OUTPUT TESTS
3060      ;     BIT 10 IS SET IF LOOPBACK TESTING IS SELECTED
3061      ;     AND ALLOWED FOR CURRENT UUT
3062      ;     BIT 11 IS SET IF MANUFACTURING HAVE SELECTED LOOPBACK
3063      ;     AND I/O TESTS
3064      ;     BIT 12 IS SET IF A SPECIFICALLY SELECTABLE TEST

```

GLOBAL SUBROUTINES SECTION

```

3065
3066
3067
3068
3069
3070
3071
3072
3073
3074
3075
3076
3077
3078
3079
3080
3081
3082
3083
3084
3085
3086
3087
3088
3089
3090
3091
3092
3093
3094
3095
3096
3097
3098
3099
3100
3101
3102
3103
3104
3105
3106
3107
3108
3109
3110
3111
3112
3113 011714
3114 011714 017601 000000
3115 011720 062716 000002
3116 011724 017602 000000
3117 011730 062716 000002
3118
3119 011734
      011734 104421
3120

```

```

:
:           IS CHOSEN
:           BITS 13, 14 AND 15 ARE UNUSED
:
:           SFI IF THIS IS NON ZERO, ALL TESTS ARE SELECTED.
:
: OUTPUTS:
:
:           IF THE TEST MATCHES THE DEVICE TYPE AND TEST MODE CHOSEN VIA THE
:           STARTUP QUESTIONS, THE ROUTINE EXITS WITH THE CARRY BIT CLEAR.
:           IN THIS CASE, IF THE 'PNT' FLAG IS SELECTED, THE TEST HEADER IS
:           PRINTED AND THE FLAGS TSTFLG AND TSUFLG ARE SET TO SHOW THAT A
:           TEST HAS BEEN SELECTED.
:
:           IF THE TEST IS NOT SELECTED, THE CARRY BIT IS SET AND, IF THE
:           'PNT' FLAG IS SELECTED, A MESSAGE 'TEST DISABLED BY STARTUP
:           QUESTIONS' IS PRINTED.
:
:           IF THE TEST IS NOT SPECIFICALLY SELECTABLE (BIT 11 IS CLEAR IN
:           THE TEST SELECT MASK), BIT 11 IS CLEARED IN THE CONTROL MASK TO
:           PREVENT SUBSEQUENT SPECIFICALLY SELECTABLE TESTS FROM BEING RUN.
:
:           R0, R1 AND R2 ARE CORRUPTED.
:
: IMPLICIT OUTPUTS:
:
:           NONE.
:
: SUBORDINATE ROUTINES USED:
:
:           NONE.
:
: FUNCTIONAL SIDE EFFECTS:
:
:           NONE.
:
: CALLING SEQUENCE:
:
:           FIXED PARAMETERS FOLLOW THE SUBROUTINE CALL :
:
:           EG.      CALL      SELECT
:                   777
:                   TNAME
:                   HC,      TSTEND
:                   ; TEST SELECT MASK (BASIC TEST
:                   ; ON ALL DEVICE TYPES
:                   ; ADDRESS OF TEST HEADER
:                   ; BRANCH IF TEST NOT SELECTED
:
:
: SELECT::
:           MOV      @ (SP), R1
:                   ; SAVE TEST SELECT MASK
:           ADD      @2, (SP)
:                   ; JUMP OVER THE ARGUMENT
:           MOV      @ (SP), R1
:                   ; SAVE TEST HEADER ADDRESS
:           ADD      @2, (SP)
:                   ; JUMP OVER THE ARGUMENT
:
:           RFLAGS  R0
:                   ; READ OPERATOR FLAGS INTO R0
:                   TRAP

```

GLOBAL SUBROUTINES SECTION

```

3121 011736 032701 010000          BIT    #10000,R1          ; SPECIFICALLY SELECTABLE TEST ?
3122 011742 001003                BNE    10$              ; IF YES, BRANCH
3123 011744 042737 010000 004132    BIC    #10000,CONMSK    ; ELSE PREVENT SUCH TESTS
3124 011752 005737 004066          TST    SFI              ; SOFTWARE FAULT INSERTION ?
3125 011756 001007                BNE    20$              ; IF YES, SELECT THE TEST
3126 011760 130137 004132          BITB   R1,CONMSK        ; IS DEVICE THE CORRECT TYPE ?
3127 011764 001426                BEQ    30$              ; IF NOT, BRANCH
3128 011766 105001                CLRB   R1               ; IF YES, DISCARD LOW BYTE
3129 011770 030137 004132          BIT    R1,CONMSK        ; AND CHECK TEST TYPE
3130 011774 001422                BEQ    30$              ; IF WRONG, BRANCH
3131
3132          ; TEST IS SELECTED
3133
3134 011776 012737 000001 004054 20$:  MOV    #1,TSTFLG        ; FLAG THAT TEST IS SELECTED
3135 012004 012737 000001 004056    MOV    #1,TSUFLG        ;
3136
3137 012012 032700 001000          BIT    #PNT,R0          ; PRINT TEST HEADER ?
3138 012016 001425                BEQ    50$              ; IF NOT, EXIT (CARRY IS CLEAR)
3139 012020                PRINTF R2              ; ELSE PRINT THE HEADER
3140 012020 010246                MOV    R2,(SP)
3141 012022 012746 000001                MOV    #1,(SP)
3142 012026 010600                MOV    SP,R0
3143 012030 104417                TRAP  C$PNTF
3144 012032 062706 000004                ADD    #4,SP
3145 012036 000241                CLC
3146 012040 000414                BR     50$              ; CLEAR THE CARRY
3147                                ; AND EXIT
3148
3149          ; TEST IS NOT SELECTED
3150
3151 012042 032700 001000          30$:  BIT    #PNT,R0          ; PRINT TEST HEADER ?
3152 012046 001410                BEQ    40$              ; IF NOT, EXIT
3153 012050                PRINTF #TNA            ; ELSE PRINT NOT APPLICABLE
3154 012050 012746 012074                MOV    #TNA,(SP)
3155 012054 012746 000001                MOV    #1,(SP)
3156 012060 010600                MOV    SP,R0
3157 012062 104417                TRAP  C$PNTF
3158 012064 062706 000004                ADD    #4,SP
3159 012070 000261          40$:  SEC
3160                                ; SET THE CARRY BIT
3161
3162 012072 000207          50$:  RETURN
3163                                ; COMMON RETURN
3164
3165 012074 045 101 040 TNA:  .MLIST BEX
3166                                .ASCIZ /#A TEST DISABLED BY STARTUP QUESTIONS#N'
3167                                .LIST BEX
3168                                .EVEN

```

GLOBAL SUBROUTINES SECTION

```

3157 ; SUBROUTINE INSERT SUBROUTINE TO FORCE ERROR PRINTOUTS
3158
3159 ;**
3160 ; FUNCTIONAL DESCRIPTION:
3161 ;
3162 ; THIS SUBROUTINE CAN BE USED TO FORCE PRINTOUT OF ERROR MESSAGES
3163 ; FOR QUALITY CHECKING. IF THE FLAG 'SFI' IS NONE ZERO, THE BRANCH
3164 ; INSTRUCTION FOLLOWING THE SUBROUTINE CALL IS SKIPPED OVER,
3165 ; CAUSING THE ERROR MESSAGE TO BE PRINTED. IF 'SFI' IS SET TO 1,
3166 ; THE ADDRESS OF THE SUBROUTINE CALL IS COMPARED WITH THAT OF THE
3167 ; LAST CALL AND, IF IT HAS NOT CHANGED, THE MESSAGE IS NOT
3168 ; PRINTED.
3169 ;
3170 ; INPUTS:
3171 ;
3172 ; SFI IF ZERO, THE ROUTINE DOES NOTHING.
3173 ; IF ONE, ERROR MESSAGES ARE PRINTED ONCE.
3174 ; IF ANY OTHER VALUE, ERROR MESSAGES ARE ALWAYS PRINTED.
3175 ;
3176 ; IMPLICIT INPUTS:
3177 ;
3178 ; SEE CALLING SEQUENCE.
3179 ;
3180 ; OUTPUTS:
3181 ;
3182 ; LASTFA IF THE ERROR MESSAGE IS TO BE PRINTED ONCE ONLY, LASTFA
3183 ; IS LOADED WITH THIS SUBROUTINE RETURN ADDRESS.
3184 ;
3185 ; IMPLICIT OUTPUTS:
3186 ;
3187 ; NONE.
3188 ;
3189 ; SUBORDINATE ROUTINES USED:
3190 ;
3191 ; NONE.
3192 ;
3193 ; FUNCTIONAL SIDE EFFECTS:
3194 ;
3195 ; IF 'SFI' IS NONE ZERO, THE ROUTINE RETURN ADDRESS IS INCREMENTED
3196 ; BY ONE WORD.
3197 ;
3198 ; CALLING SEQUENCE:
3199 ;
3200 ; A ONE WORD BRANCH INSTRUCTION MUST FOLLOW THE SUBROUTINE CALL
3201 ; BEFORE THE ERROR PRINT CALL.
3202 ;
3203 ; EG. CMP BAD,GOOD ; REGISTER CORRECT ?
3204 ; CALL INSERT ; SKIP BRANCH IF SFI FLAG SET
3205 ; BEQ 10$ ; BRANCH IF REGISTER CORRECT
3206 ; ERROR ; ELSE PRINT OUT ERROR MESSAGE
3207 ;
3208 ;
3209 ;
3210 012146 INSERT::
3211 012146 106746 MFPS (SP) ; SAVE CONDITION CODES
3212 012150 023727 004066 000001 CMP SFI,#1 ; INSERT FAULTS ?
3213 012156 103413 BLO 20$ ; IF NOT, BRANCH

```

GLOBAL SUBROUTINES SECTION

```

3214 012160 001007          BNE      10$          ; IF ALWAYS, BRANCH
3215 012162 026637 000002 012212    CMP      2(SP),LASTFA ; IS THIS FAULT ALREADY PRINTED?
3216 012170 001406          BEQ      20$          ; IF YES, EXIT
3217 012172 016637 000002 012212    MOV      2(SP),LASTFA ; ELSE, SAVE FAULT ADDRESS
3218 012200 062766 000002 000002 10$:  ADD      2,2(SP)      ; SKIP BRANCH TO FORCE PRINTOUT
3219 012206 106426          20$:  MTPS     (SP)+      ; RESTORE CONDITION CODES
3220 012210 000207          RETURN          ; AND RETURN
3221
3222 012212 000000          LASTFA: .WORD 0      ; ADDRESS OF ROUTINE CALL
3223

```

GLOBAL SUBROUTINES SECTION

```

3225 ; SUBROUTINE CONFIG ROUTINE TO FIND THE DEVICE CONFIGURATION AUTOMATICALLY.
3226
3227 ;**
3228 ; FUNCTIONAL DESCRIPTION:
3229 ;
3230 ; THIS ROUTINE SEARCHES THE IDV/IAV-11 ADDRESS RANGE (171000-171770) FOR A
3231 ; RESPONDING ADDRESS. FOR THE FIRST ADDRESS ON A 4 WORD BOUNDARY (171XX0)
3232 ; WHICH DOES NOT CAUSE AN NXM TRAP, AN ENTRY IS MADE IN THE HARDWARE
3233 ; P TABLE FOR UNIT L$LUN. FOR ADDRESSES OVER 171400, A VECTOR IS
3234 ; ASSUMED BASED ON THE LOW 8 BITS OF THE DEVICE ADDRESS.
3235 ;
3236 ; EACH CALL TO THE ROUTINE WILL CAUSE ONE MORE UNIT TO BE SEARCHED FOR.
3237 ; IF THE UNIT FOUND IS THE LAST IN THE IDV/IAV-11 RANGE, L$UNITS IS SET TO
3238 ; THE TOTAL NUMBER OF UNITS. IF NO UNIT IS FOUND, THE PROGRAM EXITS
3239 ; WITH THE CARRY BIT SET AND L$UNIT SET TO L$LUN.
3240 ;
3241 ; MODULES WITH MODE REGISTER CONTENTS NOT CORRESPONDING TO AN IDV/IAV11
3242 ; ARE SET UP, BUT CAUSE AN 'UNIDENTIFIED MODULE' MESSAGE TO BE OUTPUT.
3243 ;
3244 ; INPUTS:
3245 ;
3246 ; L$LUN - NUMBER FOR THE NEXT UNIT FOUND.
3247 ;
3248 ; IMPLICIT INPUTS:
3249 ;
3250 ; STADD MUST BE SET TO 171000 PRIOR TO THE FIRST CALL TO INITIALISE
3251 ; THE SEARCH AREA.
3252 ;
3253 ; ADDRESSES DEFINED BY "IXSTA" TO "IXEND" OF THE I/O PAGE ARE READ.
3254 ;
3255 ; THE WORD L$LUN*2 AFTER LABEL GPADD MUST CONTAIN THE PARAMETER
3256 ; TABLE ADDRESS FOR THE UNIT.
3257 ;
3258 ; OUTPUTS:
3259 ;
3260 ; THE HARDWARE P TABLE AND L$UNIT ARE SET UP TO INCLUDE UP TO 16
3261 ; UNITS FOUND IN THE ABOVE ADDRESS RANGE.
3262 ;
3263 ; A MESSAGE 'UNIDENTIFIED MODULE FOUND AT ADDRESS NNNNNN' MAY BE
3264 ; PRINTED.
3265 ;
3266 ; IMPLICIT OUTPUTS:
3267 ;
3268 ; IF THE UNIT FOUND IS THE LAST IN THE IDV/IAV 11 RANGE, L$UNIT IS SET UP
3269 ; TO CONTAIN THE TOTAL NUMBER OF UNITS FOUND (L$LUN+1).
3270 ;
3271 ; IF NO MORE UNITS ARE FOUND, THE CARRY BIT IS SET AND L$LUN IS
3272 ; PLACED IN L$UNIT.
3273 ;
3274 ; SUBORDINATE ROUTINES USED:
3275 ;
3276 ; NXM - NON EXISTANT MEMORY TRAP ROUTINE.
3277 ; WRDY ROUTINE TO WAIT FOR OPERATOR TO TYPE RETURN .
3278 ;
3279 ; FUNCTIONAL SIDE EFFECTS:
3280 ;
3281 ; NXMFLG MAY BE SET.

```

GLOBAL SUBROUTINES SECTION

```

3282
3283      ; CALLING SEQUENCE:
3284      ;
3285      ; EG. JSR      PC,CONFIG
3286      ;           BCS      INIUUT
3287      ;
3288      ; --
3289
3290      CONFIG::
3291      012214      010146      MOV      R1,-(SP)
3292      012216      010246      MOV      R2,(SP)
3293      012220      010346      MOV      R3,(SP)
3294      012222      010446      MOV      R4,-(SP)
3295
3296      012274      013702      012514      MOV      STADD,R2
3297      012230      012737      000001      012516      MOV      #1,NOUNIT
3298      012236      012746      000340      SETVEC   #4,#NXM,#340
3299
3300      012264      005037      004060      10$:     CLR      NXMFLG
3301      012270      005712      TST      (R2)
3302      012272      005737      004060      TST      NXMFLG
3303      012276      001006      BNE      20$
3304      012300      005737      012516      TST      NOUNIT
3305      012304      001422      BEQ      30$
3306      012306      005037      012516      CLR      NOUNIT
3307      012312      010201      MOV      R2,R1
3308
3309      012314      062702      000010      20$:     ADD      #10,R2
3310      012320      020227      171770      CMP      R2,#IXEND
3311      012324      003757      BLE      10$
3312      012326      012702      171000      MOV      #IXSTA,R2
3313      012332      013737      002074      002012      MOV      L$LUN,L$UNIT
3314      012340      005737      012516      TST      NOUNIT
3315      012344      001047      BNE      70$
3316      012346      005237      002012      INC      L$UNIT
3317
3318      012352      021127      140000      30$:     CMP      (R1),#140000
3319      012356      103413      BLO
3320      012360      PRINTF   #C01,R1
3321
3322      012360      010146      MOV      R1,(SP)
3323      012362      012746      012520      MOV      #C01,(SP)
3324      012366      012746      000002      MOV      #2,(SP)
3325      012372      010600      MOV      SP,R0
3326      012374      104417      TRAP    C$PNTF
3327      012376      062706      000006      ADD      #6,SP
3328      012402      004737      011570      JSR      PC,WRDY
3329
3330      012406      013700      002074      40$:     MOV      L$LUN,R0
3331      012412      006300      ASL      R0
3332      012414      016003      003774      MOV      GPADD(R0),R3
3333      012420      010123      MOV      R1,(R3)

```

```

; IF NO MORE UNITS, START AGAIN
;
; SAVE R1 TO R4
;
;
;
; START SEARCH FROM THIS ADDRESS
; ASSUME NO UNIT WILL BE FOUND
; SET UP NXM TRAP
;
; MOV      #340,-(SP)
; MOV      #NXM,-(SP)
; MOV      #4,(SP)
; MOV      #3,(SP)
; TRAP    C$SVEC
; ADD      #10,SP
; CLEAR THE NXM FLAG
; CHECK THE ADDRESS
; ANYTHING THERE ?
; IF NOT, TRY NEXT DEVICE ADDRESS
; IF YES, IS IT THE 2ND ONE THIS CALL ?
; IF YES, SET UP THE P TABLE
; IF IT'S THE FIRST, FLAG UNIT FOUND
; AND SAVE THE ADDRESS
; GET THE NEXT ADDRESS
; OUT OF THE IXV11 RANGE ?
; IF NOT, GO BACK
; ELSE START AGAIN NEXT CALL
; SAVE THE UNIT NUMBER
; WERE ANY UNITS FOUND ?
; IF NOT, EXIT
; ELSE WE HAVE THE LAST UNIT
; IS MODULE ID OK ?
; IF YES, BRANCH
; ELSE PRINT 'UNIDENTIFIED'
; MOV      R1,(SP)
; MOV      #C01,(SP)
; MOV      #2,(SP)
; MOV      SP,R0
; TRAP    C$PNTF
; ADD      #6,SP
; WAIT FOR OPERATOR TO TYPE 'RE*U*W*
; FORM OFFSET FOR LUN
;
; GET P TABLE ADDRESS IN R3
; SAVE THE DEVICE ADDRESS

```


GLOBAL SUBROUTINES SECTION

```

3327
3328 012422 042701 177000      BIC    #177000,R1      ; CALCULATE THE VECTOR ADDRESS
3329 012426 032701 000400      BIT    #400,R1        ; ADDRESS OVER 171400 ?
3330 012432 001001              BNE    50$            ; IF YES, BRANCH
3331 012434 005001              CLR    R1             ; ELSE ZERO THE VECTOR
3332 012436 010123      50$:  MOV    R1,(R3).      ; AND SAVE IT
3333 012440 001402              BEQ    60$            ; IF 0, BRANCH
3334 012442 012701 000200      MOV    #200,R1        ; ELSE SET UP DEFAULT PRIORITY
3335 012446 010123      60$:  MOV    R1,(R3).      ; SAVE THE PRIORITY
3336 012450 005023              CLR    (R3).          ; FLAG NOT LOOPED
3337 012452 005023              CLR    (R3).          ; NO LOW LEVEL
3338 012454 012723 000003      MOV    #3,(R3).      ; ALL DEBOUNCE PERIODS
3339 012460 005023              CLR    (R3).          ; NO OTHER DEVICE
3340 012462 005023              CLR    (R3).          ; OR VECTOR
3341
3342 012464 010237 012514      70$:  MOV    R2,STADD    ; SAVE THE NEXT SEARCH ADDRESS
3343 012470      CLRVEC #4          ; RESTORE THE NXM TRAP CATCHER
      012470 012700 000004      MOV    #4,R0
      012474 104436      TRAP
3344 012476 012604      MOV    (SP),R4        ; RESTORE R4 TO R1
3345 012500 012603      MOV    (SP),R3
3346 012502 012602      MOV    (SP),R2
3347 012504 012601      MOV    (SP),R1
3348 012506 006237 012516      ASR    NOUNIT        ; IF NO UNIT, SET THE CARRY BIT
3349 012512 000207      RTS    PC           ; AND RETURN
3350
3351 012514 171000      STADD:: .WORD IXSTA  ; START ADDRESS OF SEARCH AREA
3352 012516 000000      NOUNIT: .WORD 0     ; SET TO SHOW NO UNIT FOUND
3353
3354
3355 012520      045      116      045  001:  .NLIST BEX
      .ASCIZ /UNIDENTIFIED MODULE FOUND AT ADDRESS #06#A.
3356      .LIST BEX
3357      .EVEN

```

GLOBAL SUBROUTINES SECTION

```

3359 ; SUBROUTINE CONPRI SUBROUTINE TO PRINT A CONFIGURATION TABLE.
3360
3361 ;**
3362 ; FUNCTIONAL DESCRIPTION:
3363 ;
3364 ; THIS ROUTINE PRINTS A CONFIGURATION TABLE OF ALL UNITS LISTED IN
3365 ; THE HARDWARE PARAMETER TABLE. LISTED ARE THE MODE REGISTER ADDRESS,
3366 ; VECTOR, DEVICE TYPE, WHETHER LOOPED AND IF SO, THE ADDRESS AND VECTOR
3367 ; OF THE DEVICE TO WHICH IT IS LOOPED.
3368 ;
3369 ; INPUTS:
3370 ;
3371 ; NONE.
3372 ;
3373 ; IMPLICIT INPUTS:
3374 ;
3375 ; THE HARDWARE P TABLE.
3376 ;
3377 ; IF NO UNITS ARE CONFIGURED, THE GLOBAL MESSAGE LABELLED NODEV
3378 ; IS PRINTED.
3379 ;
3380 ; OUTPUTS:
3381 ;
3382 ; THE CONFIGURATION TABLE IS PRINTED.
3383 ;
3384 ; IMPLICIT OUTPUTS:
3385 ;
3386 ; IF NO UNITS ARE CONFIGURED (L$UNIT = 0), A MESSAGE 'NO DEVICES
3387 ; FOUND' IS PRINTED.
3388 ;
3389 ; SUBORDINATE ROUTINES USED:
3390 ;
3391 ; NXM NON EXISTANT MEMORY TRAP ROUTINE.
3392 ; CRLF LINE FEED PRINT ROUTINE.
3393 ;
3394 ; FUNCTIONAL SIDE EFFECTS:
3395 ;
3396 ; REGISTERS R1 TO R5 ARE CORRUPTED.
3397 ;
3398 ; CALLING SEQUENCE:
3399 ;
3400 ; JSR PC,CONPRI
3401 ;
3402 ;
3403 ;
3404 012600 CONPRI::
3405 012600 SETVFC #4,#NXM,#340 ; CATCH REFERENCES TO NXM
012600 012746 000340 ;
012604 012746 017266 MOV #340,-(SP)
012610 012746 000004 MOV #NXM,(SP)
012614 012746 000003 MOV #4,(SP)
012620 104437 MOV #3,(SP)
012622 062706 000010 TRAP C$SVEC
3406 012626 005737 002012 TST L$UNIT ; ANY UNITS CONFIGURED ?
3407 012632 001012 BNE 10, ; IF YES, BRANCH
3408 012634 PRINTF #NODEV ; ELSE PRINT 'NO DEVICES FOUND'
012634 012746 007250 MOV #NODEV,(SP)

```

GLOBAL SUBROUTINES SECTION

	012640	012746	000001				MOV	#1, (SP)
	012644	010600					MOV	SP, R0
	012646	104417					TRAP	C\$PNTF
	012650	062706	000004				ADD	#4, SP
3409	012654	000137	013704		JMP	CONEX		; AND EXIT
3410								
3411	012660			10\$:	PRINTF	#CP1		; PRINT CONFIGURATION HEADER
	012660	012746	013720				MOV	#CP1, -(SP)
	012664	012746	000001				MOV	#1, -(SP)
	012670	010600					MOV	SP, R0
	012672	104417					TRAP	C\$PNTF
	012674	062706	000004				ADD	#4, SP
3412	012700				PRINTF	#CP1A		
	012700	012746	013771				MOV	#CP1A, -(SP)
	012704	012746	000001				MOV	#1, -(SP)
	012710	010600					MOV	SP, R0
	012712	104417					TRAP	C\$PNTF
	012714	062706	000004				ADD	#4, SP
3413	012720				PRINTF	#CP1B		
	012720	012746	014043				MOV	#CP1B, -(SP)
	012724	012746	000001				MOV	#1, -(SP)
	012730	010600					MOV	SP, R0
	012732	104417					TRAP	C\$PNTF
	012734	062706	000004				ADD	#4, SP
3414	012740				PRINTF	#CP1C		
	012740	012746	014146				MOV	#CP1C, (SP)
	012744	012746	000001				MOV	#1, (SP)
	012750	010600					MOV	SP, R0
	012752	104417					TRAP	C\$PNTF
	012754	062706	000004				ADD	#4, SP
3415	012760	005001						
3416	012762	010100		20\$:	CLR	R1		; START WITH FIRST UNIT
3417	012764	006300			MOV	R1, R0		; FORM PARAMETER TABLE OFFSET
3418	012766	016002	003774		ASI	R0		
3419	012772	012203			MOV	GPADD(R0), R2		; GET THE UNIT P TABLE
3420	012774				MOV	(R2), R3		; SAVE THE UNIT ADDRESS
	012774	010346			PRINTF	#CP2, R1, R3		; PRINT UNIT NO. AND ADDRESS
	012776	010146					MOV	R3, (SP)
	013000	012746	014217				MOV	R1, -(SP)
	013004	012746	000003				MOV	#CP2, (SP)
	013010	010600					MOV	#3, -(SP)
	013012	104417					MOV	SP, R0
	013014	062706	000010				TRAP	C\$PNTF
	013014	062706	000010				ADD	#10, SP
3421	013020	005722			TST	(R2),		; IS THERE A VALID VECTOR ?
3422	013022	001413			BEQ	30\$; IF NOT, BRANCH
3423	013024				PRINTF	#CP3, 2(R2)		; ELSE PRINT THE VECTOR
	013024	016246	177776				MOV	-2(R2), (SP)
	013030	012746	014230				MOV	#CP3, -(SP)
	013034	012746	000002				MOV	#2, (SP)
	013040	010600					MOV	SP, R0
	013042	104417					TRAP	C\$PNTF
	013044	062706	000006				ADD	#6, SP
3424	013050	000410			BR	40\$		
3425	013052			30\$:	PRINTF	#CP4		; PRINT NONE
	013052	012746	014237				MOV	#CP4, (SP)
	013056	012746	000001				MOV	#1, (SP)
	013062	010600					MOV	SP, R0

GLOBAL SUBROUTINES SECTION

```

013064 104417
013066 062706 000004 TRAP C$PNTF
3426 ADD #4,SP
3427 013072 005037 004060 40$: CLR NXMFLG ; GET READY FOR NXM TRAP
3428 013076 112305 MOV (R3),R5 ; GET MODE REGISTER LOW BYTE
3429 013100 111304 MOV (R3),R4 ; AND HIGH BYTE
3430 013102 042704 177400 BIC #177400,R4 ; DISCARD REGISTER HIGH BYTE
3431 013106 005737 004060 TST NXMFLG ; WAS THERE AN NXM TRAP ?
3432 013112 001421 BEQ 50$ ; IF NOT, BRANCH
3433 013114 PRINTF #CP10 ; ELSE PRINT UNKNOWN ID/MODE
013114 012746 014400 MOV #CP10,(SP)
013120 012746 000001 MOV #1,(SP)
013124 010600 MOV SP,R0
013126 104417 TRAP C$PNTF
013130 062706 000004 ADD #4,SP
3434 013134 PRINTF #CP10A ; AND UNKNOWN MODULE TYPE
013134 012746 014415 MOV #CP10A,(SP)
013140 012746 000001 MOV #1,(SP)
013144 010600 MOV SP,R0
013146 104417 TRAP C$PNTF
013150 062706 000004 ADD #4,SP
3435 013154 000464 BR 110$ ; AND SEE IF LOOPEd
3436
3437 013156 50$: PRINTF #CP5,R4,R5 ; PRINT OUT ID/MODE
013156 010546 MOV R5,(SP)
013160 010446 MOV R4,-(SP)
013162 012746 014251 MOV #CP5,(SP)
013166 012746 000003 MOV #3,-(SP)
013172 010600 MOV SP,R0
013174 104417 TRAP C$PNTF
013176 062706 000010 ADD #10,SP
3438
3439 013202 020427 000037 CMP R4,#37 ; IS MODULE DIGITAL INPUT ?
3440 013206 101003 BHI 60$ ; IF NOT, BRANCH
3441 013210 012703 014446 MOV #DI,R3 ; ELSE SAVE 'DIG. IN' STRING
3442 013214 000421 BR 90$ ; GO TO PRINT MODULE TYPE
3443 013216 020427 000077 60$: CMP R4,#77 ; IS MODULE DIGITAL OUTPUT ?
3444 013222 101003 BHI 70$ ; IF NOT, BRANCH
3445 013224 012703 014457 MOV #DO,R3 ; ELSE SAVE 'DIG OUT' STRING
3446 013230 000413 BR 90$ ; GO TO PRINT MODULE TYPE
3447 013232 020427 000177 70$: CMP R4,#177 ; IS MODULE ANALOGUE INPUT ?
3448 013236 101003 BHI 80$ ; IF NOT, BRANCH
3449 013240 012703 014470 MOV #AI,R3 ; ELSE SAVE 'AN IN' STRING
3450 013244 000405 BR 90$ ; GO TO PRINT MODULE TYPE
3451 013246 020427 000277 80$: CMP R4,#277 ; IS MODULE ANALOGUE OUTPUT ?
3452 013252 101014 BHI 100$ ; IF NOT, BRANCH
3453 013254 012703 014501 MOV #AO,R3 ; ELSE SAVE 'AN OUT' STRING
3454 013260 90$: PRINTF #CP6,R3 ; PRINT OUT DEVICE TYPE
013260 010346 MOV R3,(SP)
013262 012746 014266 MOV #CP6,(SP)
013266 012746 000002 MOV #2,(SP)
013272 010600 MOV SP,R0
013274 104417 TRAP C$PNTF
013276 062706 000006 ADD #6,SP
3455 013302 000411 BR 110$ ;
3456 013304 100$: PRINTF #CP7 ; PRINT 'CANNOT BE TESTED'
013304 012746 014274 MOV #CP7,(SP)

```

GLOBAL SUBROUTINES SECTION

```

013310 012746 000001
013314 010600
013316 104417
013320 062706 000004
3457 013324 000561 BR 210$ ; GO TO NEXT DEVICE
3458
3459 013326 005722 110$: TST (R2). ; SKIP THE PRIORITY
3460 013330 005722 TST (R2). ; IS DEVICE LOOPED ?
3461 013332 001012 BNE 120$ ; IF YES, BRANCH
3462 013334 PRINTF #CP9 ; ELSE PRINT 'NO'
013334 012746 014367
013340 012746 000001
013344 010600
013346 104417
013350 062706 000004
3463 013354 000137 013670 JMP 210$ ; AND GO TO NEXT DEVICE
3464
3465 013360 120$: PRINTF #CP8 ; PRINT 'YES'
013360 012746 014356
013364 012746 000001
013370 010600
013372 104417
013374 062706 000004
3466
3467 013400 005037 004060 CLR NXMFLG ; GET READY FOR NXM TRAP
3468 013404 005722 TST (R2). ; SKIP LOW LEVEL QUESTION
3469 013406 005722 TST (R2). ; SKIP DBOUNCE QUESTION
3470 013410 012203 MOV (R2),R3 ; GET OTHER MODULE ADDRESS
3471 013412 105723 TSTB (R3). ; GET ID CODE
3472 013414 111304 MOVB (R3),R4 ; INTO R4
3473 013416 042704 177400 BIC #177400,R4 ; DISCARD REGISTER TOP BYTE
3474 013422 005737 004060 TST NXMFLG ; WAS THERE AN NXM TRAP ?
3475 013426 001411 BEQ 130$ ; IF NOT, BRANCH
3476 013430 PRINTF #CP10A ; ELSE PRINT UNKNOWN OTHER MODULE TYPE
013430 012746 014415
013434 012746 000001
013440 010600
013442 104417
013444 062706 000004
3477 013450 000451 BR 190$ ;
3478
3479 013452 020427 000037 130$: CMP R4,#37 ; IS MODULE DIGITAL INPUT ?
3480 013456 101003 BHI 140$ ; IF NOT, BRANCH
3481 013460 012703 014446 MOV #DI,R3 ; ELSE SAVE 'DIG. IN' STRING
3482 013464 000421 BR 170$ ; GO TO PRINT MODULE TYPE
3483 013466 020427 000077 140$: CMP R4,#77 ; IS MODULE DIGITAL OUTPUT ?
3484 013472 101003 BHI 150$ ; IF NOT, BRANCH
3485 013474 012703 014457 MOV #DO,R3 ; ELSE SAVE 'DIG OUT' STRING
3486 013500 000413 BR 170$ ; GO TO PRINT MODULE TYPE
3487 013502 020427 000177 150$: CMP R4,#177 ; IS MODULE ANALOGUE INPUT ?
3488 013506 101003 BHI 160$ ; IF NOT, BRANCH
3489 013510 012703 014470 MOV #AI,R3 ; ELSE SAVE 'AN IN' STRING
3490 013514 000405 BR 170$ ; GO TO PRINT MODULE TYPE
3491 013516 020427 000277 160$: CMP R4,#277 ; IS MODULE ANALOGUE OUTPUT ?
3492 013522 101014 BHI 180$ ; IF NOT, BRANCH
3493 013524 012703 014501 MOV #AO,R3 ; ELSE SAVE 'AN OUT' STRING
3494 013530 PRINTF #CP6,R3 ; PRINT OUT DEVICE TYPE

```

GLOBAL SUBROUTINES SECTION

```

013530 010346
013532 012746 014266
013536 012746 000002
013542 010600
013544 104417
013546 062706 000006
3495 013552 000410
3496 013554 180$: BR 190$
PRINTF @CP10 ; PRINT 'UNKNOWN'
013554 012746 014400
013560 012746 000001
013564 010600
013566 104417
013570 062706 000004
3497
3498 013574 190$: PRINTF @CP11, 2(R2) ; PRINT OTHER MODULE ADDRESS
013574 016246 177776
013600 012746 014433
013604 012746 000002
013610 010600
013612 104417
013614 062706 000006
3499 013620 005712
3500 013622 001011
3501 013624 TST (R2) ; IS THERE A VALID VECTOR ?
BNE 200$ ; IF YES, BRANCH
PRINTF @CP4 ; ELSE PRINT 'NONE'
013624 012746 014237
013630 012746 000001
013634 010600
013636 104417
013640 062706 000004
3502 013644 000411
3503 013646 200$: BR 210$
PRINTF @CP12,(R2) ; AND GO TO NEXT UNIT
; PRINT OTHER VECTOR
013646 011246
013650 012746 014437
013654 012746 000002
013660 010600
013662 104417
013664 062706 000006
3504
3505 013670 005201
3506 013672 020137 002012
3507 013676 002002
3508 013700 000137 012762
3509 013704 004737 011542
3510 013710
013710 012700 000004
013714 104436
3511 013716 000207
3512
3513
3514
3515 013720 045 116 045 CP1: .ASCIZ \#N#S24#AIDV/IAV 11 MODULE CONFIGURATION.\
3516 013771 045 116 045 CP1A: .ASCIZ /#N#S24#A-----/
3517 014043 045 116 062 CP1B: .ASCII \#N2#AUNIT ADDRESS VECTOR ID/MODE MODULE LOOPEO TC\
3518 014136 045 123 071 .ASCIZ \#S9#AAT\
3519 014146 045 101 040 CP1C: .ASCIZ \#A VECTOR#N#S15#AASSUMED#S13#ATYPE#N\
3520
3521 014217 045 116 045 CP2: .ASCIZ \#N#D3#09\

```

```

MOV R3, (SP)
MOV @CP6, (SP)
MOV @2, -(SP)
MOV SP, R0
TRAP C$PNTF
ADD @6, SP
MOV @CP10, -(SP)
MOV @1, (SP)
MOV SP, R0
TRAP C$PNTF
ADD @4, SP
MOV 2(R2), (SP)
MOV @CP11, (SP)
MOV @2, (SP)
MOV SP, R0
TRAP C$PNTF
ADD @6, SP
MOV @CP4, -(SP)
MOV @1, (SP)
MOV SP, R0
TRAP C$PNTF
ADD @4, SP
MOV (R2), -(SP)
MOV @CP12, (SP)
MOV @2, (SP)
MOV SP, R0
TRAP C$PNTF
ADD @6, SP
MOV @4, R0
TRAP C$CVFC

```

GLOBAL SUBROUTINES SECTION

```

3522 014230      045      123      065  CP3:  .ASCIZ  \#S5#03\
3523 014237      045      123      064  CP4:  .ASCIZ  \#S4#ANONE\
3524 014251      045      123      063  CP5:  .ASCIZ  \#S3#03#A/#03\
3525 014266      045      123      063  CP6:  .ASCIZ  \#S3#T\
3526 014274      045      101      040  CP7:  .ASCIZ  \#A  *** CANNOT BE TESTED WITH THIS DIAGNOSTIC ***\
3527 014356      045      101      040  CP8:  .ASCIZ  \#A  YES\
3528 014367      045      101      040  CP9:  .ASCIZ  \#A  NO\
3529 014400      045      101      040  CP10: .ASCIZ  \#A  UNKNOWN\
3530 014415      045      101      040  CP10A: .ASCIZ  \#A  UNKNOWN \
3531 014433      045      117      071  CP11: .ASCIZ  \#09\
3532 014437      045      123      065  CP12: .ASCIZ  \#S5#03\
3533
3534 014446      104      111      107  DI:   .ASCIZ  /DIG. IN /
3535 014457      104      111      107  DO:   .ASCIZ  /DIG. OUT/
3536 014470      101      116      056  AI:   .ASCIZ  /AN. IN /
3537 014501      101      116      056  AO:   .ASCIZ  /AN. OUT/
3538
3539
3540
      .LIST  BEX
      .EVEN

```

GLOBAL SUBROUTINES SECTION

3542
 3543
 3544
 3545
 3546
 3547
 3548
 3549
 3550
 3551
 3552
 3553
 3554
 3555
 3556
 3557
 3558
 3559
 3560
 3561
 3562
 3563
 3564
 3565
 3566
 3567
 3568
 3569
 3570
 3571
 3572
 3573
 3574
 3575
 3576
 3577
 3578
 3579
 3580
 3581
 3582
 3583
 3584
 3585
 3586
 3587
 3588
 3589
 3590
 3591
 3592
 3593
 3594 014512
 3595 014512 010346
 3596 014514 010446
 3597 014516 013703 004134
 3598 014522 005703

```

; SUBROUTINE DACON  DIGITAL TO ANALOGUE CONVERSION ROUTINE.
;
; **
; FUNCTIONAL DESCRIPTION:
;
;     THIS CONVERTS A 12 BIT DIGITAL PATTERN INTO A 2 WORD ANALOGUE
;     OUTPUT VALUE.
;
; INPUTS:
;
;     MODE : 0 = UNIPOLAR (0 TO 10 VOLTS)      BINARY CODED
;           1 = BIPOLAR ( -10 TO +10 VOLTS)  OFFSET BINARY CODED
;           2 = 0 - 20 MA                      BINARY CODED
;           3 = 4 - 20 MA                      BINARY CODED
;
;     GAIN : 0 - 7 = GAINS 1,2,5,10,20,50,100,200
;
;     R1   : 12 BIT INPUT PATTERN.
;
; IMPLICIT INPUTS:
;
;     VITAB AND ITAB : DIGITAL ANALOGUE CONVERSION TABLES.
;
; OUTPUTS:
;
;     R1   MILLIVOLTS (MODES 0 AND 1)
;         MICROAMPS (MODES 2 AND 3)
;
;     R2   MICROVOLTS (MODES 0 AND 1)
;         NANOAMPS (MODES 2 AND 3)
;
; IMPLICIT OUTPUTS:
;
;     NONE.
;
; SUBORDINATE ROUTINES USED:
;
;     NONE.
;
; FUNCTIONAL SIDE EFFECTS:
;
;     NONE.
;
; CALLING SEQUENCE:
;
;     EG.  MOV     #1,MODE      ; BIPOLAR CONVERSION
;         MOV     #5,GAIN      ; GAIN = 100
;         MOV     #7777,R1     ; ALL BITS SET
;         JSR     PC,DACON
;
;
; DACON::
;         MOV     R3,(SP)      ; SAVE R3
;         MOV     R4,(SP)      ; AND R4
;         MOV     MODE,R3      ; GET MODE
;         TST    R3            ; MODE 0?
    
```


GLOBAL SUBROUTINES SECTION

```

3599 014524 001003      BNE      10$      ; IF NOT, BRANCH
3600 014526 012700 004176  MOV      @VUPTAB,R0 ; GET CONVERSION TABLE FOR MODE 0
3601 014532 000414      BR       PSDA      ;
3602
3603 014534 005303      10$:    DEC      R3      ; MODE 1 ?
3604 014536 001003      BNE      20$      ; IF NOT, BRANCH
3605 014540 012700 004776  MOV      @VBPTAB,R0 ; GET CONVERSION TABLE FOR MODE 1
3606 014544 000407      BR       PSDA      ;
3607
3608 014546 005303      20$:    DEC      R3      ; MODE 2 ?
3609 014550 001003      BNE      30$      ; IF NOT, BRANCH
3610 014552 012700 005576  MOV      @IOTAB,R0 ; GET CONVERSION TABLE FOR MODE 2
3611 014556 000402      BR       PSDA      ;
3612
3613 014560 012700 006376  30$:    MOV      @I4TAB,R0 ; USE I4TAB FOR MODE 3
3614
3615 014564 013703 004136  PSDA:   MOV      GAIN,R3    ; GET THE GAIN
3616 014570 005303      30$:    DEC      R3      ; HAVE WE GOT THE CORRECT TABLE ?
3617 014572 100403      BMI      40$      ; IF YES, BRANCH
3618 014574 062700 000060  ADD      @48.,R0   ; ELSE INCREASE THE TABLE OFFSET
3619 014600 000773      BR       30$      ; AND TRY AGAIN
3620
3621 014602 011004      40$:    MOV      (R0),R4   ; SAVE HIGH BIT VALUE
3622 014604 010103      MOV      R1,R3    ; SAVE THE BIT PATTERN
3623 014606 005001      CLR      R1      ; CLEAR THE OUTPUT REGISTERS
3624 014610 005002      CLR      R2      ;
3625 014612 006303      ASL      R3      ; SHIFT OUT UNUSED BITS
3626 014614 006303      ASL      R3      ; ( BITS 15 12 )
3627 014616 006303      ASL      R3      ;
3628 014620 006303      ASL      R3      ;
3629
3630 014622 006303      50$:    ASL      R3      ; TEST A BIT
3631 014624 103011      BCC      70$      ; IF CLEAR, BRANCH
3632 014626 066002 000030  ADD      24.(R0),R2 ; ELSE ADD IN LOW VALUE
3633 014632 020227 001750  CMP      R2,#1000. ; OVERFLOW OF LOW WORD ?
3634 014636 002403      BLT      60$      ; IF NOT, BRANCH
3635 014640 162702 001750  SUB      #1000.,R2 ; ELSE CARRY FROM LOW WORD
3636 014644 005201      INC      R1      ; TO HIGH WORD
3637 014646 061001      60$:    ADD      (R0),R1   ; AND ADD IN HIGH VALUE
3638 014650 062700 000002  70$:    ADD      @2,R0    ; GET NEXT TABLE ENTRY
3639 014654 005703      TST      R3      ; ALL BITS PROCESSED ?
3640 014656 001361      BNE      50$      ; IF NOT, DO MORE BITS
3641
3642 014660 023727 004134 000001 80$:    CMP      MODE,#1   ; BIPOLAR VOLTAGE CONVERSION ?
3643 014666 001007      BNE      90$      ; IF NOT, BRANCH
3644 014670 160401      SUB      R4,R1    ; ELSE MAKE BIPOLAR
3645 014672 002005      BGE      90$      ; IF STILL POSITIVE, BRANCH
3646 014674 005702      TST      R2      ; DECIMAL PART ZERO ?
3647 014676 001403      BEQ      90$      ; IF YES, BRANCH
3648 014700 162702 001750  SUB      #1000.,R2 ; ELSE BORROW FROM HIGH PART
3649 014704 005201      INC      R1      ;
3650
3651 014706 023727 004134 000003 90$:    CMP      MODE,#3   ; 4 20 MA MODE ?
3652 014714 001002      BNE      100$     ; IF NOT, BRANCH
3653 014716 062701 007640  ADD      @4000.,R1 ; ELSE ADD IN BASE VALUE
3654
3655 014722 012604      100$:   MOV      (SP),R4   ; RESTORE R4

```

GLOBAL SUBROUTINES SECTION

3656 014724 012603
3657 014726 000207

MOV (SP),R3 ; AND R3
RTS PC ;

GLOBAL SUBROUTINES SECTION

```

3659      ; SUBROUTINE ADCON  ANALOGUE TO DIGITAL CONVERSION ROUTINE.
3660
3661      ;**
3662      ; FUNCTIONAL DESCRIPTION:
3663      ;
3664      ;     THIS CONVERTS A 2 WORD ANALOGUE VALUE INTO A 12 BIT DIGITAL OUTPUT
3665      ;     PATTERN. THE INPUT IS ROUNDED UP OR DOWN TO THE NEAREST LSB VALUE.
3666      ;
3667      ; INPUTS:
3668      ;
3669      ;     MODE : 0 = UNIPOLAR (0 TO 10 VOLTS)      BINARY CODED
3670      ;           1 = BIPOLAR ( -10 TO +10 VOLTS)  OFFSET BINARY CODED
3671      ;           2 = 0    20 MA                    BINARY CODED
3672      ;           3 = 4    20 MA                    BINARY CODED
3673      ;
3674      ;     GAIN : 0    7 = GAINS 1,2,5,10,20,50,100,200
3675      ;
3676      ;     R1 - MILLIVOLTS (MODES 0 AND 1)
3677      ;           MICROAMPS (MODES 2 AND 3)
3678      ;
3679      ;     R2 - MICROVOLTS (MODES 0 AND 1)
3680      ;           NANOAMPS (MODES 2 AND 3)
3681      ;
3682      ; IMPLICIT INPUTS:
3683      ;
3684      ;     VITAB AND ITAB : DIGITAL/ANALOGUE CONVERSION TABLES.
3685      ;
3686      ; OUTPUTS:
3687      ;
3688      ;     R1   : 12 BIT INPUT PATTERN.
3689      ;
3690      ; IMPLICIT OUTPUTS:
3691      ;
3692      ;     NONE.
3693      ;
3694      ; SUBORDINATE ROUTINES USED:
3695      ;
3696      ;     NONE.
3697      ;
3698      ; FUNCTIONAL SIDE EFFECTS:
3699      ;
3700      ;     NONE.
3701      ;
3702      ; CALLING SEQUENCE:
3703      ;
3704      ;     EG.  MOV    #1,MODE      ; BIPOLAR CONVERSION
3705      ;           MOV    #6,GAIN     ; GAIN = 100
3706      ;           MOV    #4,R1       ; 4.001 MILLIVOLTS
3707      ;           MOV    #1,R2       ; IN R1/R2
3708      ;           JSR    PC,ADCON
3709      ;
3710      ;
3711      ;
3712 014730      ADCON::
3713 014730      MOV    R3,(SP)      ; SAVE R3
3714 014732      MOV    R4,(SP)      ; AND R4
3715 014734      MOV    MODE,R3      ; GET MODE
004134

```

GLOBAL SUBROUTINES SECTION

```

376 014740 005703          TST      R3          ; MODE 0 ?
3717 014742 001003        BNE      10$        ; IF NOT, BRANCH
3718 014744 012700 004176  MOV      #VUPTAB,R0 ; GET CONVERSION TABLE FOR MODE 0
3719 014750 000416        BR       PSAD       ;
3720
3721 014752 005303        10$:    DEC      R3          ; MODE 1 ?
3722 014754 001003        BNE      20$        ; IF NOT, BRANCH
3723 014756 012700 004776  MOV      #VBPTAB,R0 ; GET CONVERSION TABLE FOR MODE 1
3724 014762 000411        BR       PSAD
3725
3726 014764 005303        20$:    DFC      R3          ; MODE 2 ?
3727 014766 001003        BNE      30$        ; IF NOT, BRANCH
3728 014770 012700 005576  MOV      #IOTAB,R0  ; GET CONVERSION TABLE FOR MODE 2
3729 014774 000404        BR       PSAD
3730
3731 014776 012700 006376  30$:    MOV      #I4TAB,R0 ; USE I4TAB FOR MODE 3
3732 015002 162701 007640  SUB      #4000.,R1  ; AND SUBTRACT BASE VALUE
3733
3734 015006 013703 004136  PSAD:   MOV      GAIN,R3   ; GET THE GAIN
3735 015012 005303        10$:    DEC      R3          ; HAVE WE GOT THE CORRECT TABLE ?
3736 015014 100403        BMI      20$        ; IF YES, BRANCH
3737 015016 062700 000060  ADD      #48.,R0   ; ELSE INCREASE THE TABLE OFFSET
3738 015022 000773        BR       10$        ; AND TRY AGAIN
3739
3740 015024 023727 004134 000001 20$:    CMP      MODE,#1   ; BIPOLAR MODE ?
3741 015032 001011        BNE      30$        ; IF NOT, BRANCH
3742 015034 061001        ADD      (R0),R1   ; ELSE CONVERT BIPOLAR TO UNIPOLAR
3743 015036 020127 023420  CMP      R1,#10000. ; WAS PREVIOUS VALUE NEGATIVE ?
3744 015042 001005        BNE      30$        ; IF NOT, BRANCH
3745 015044 005702        TST      R2          ; IS DECIMAL PART ZERO ?
3746 015046 001403        BEQ      30$        ; IF YES, BRANCH
3747 015050 062702 001750  ADD      #1000.,R2 ; ELSE BORROW FROM HIGH PART
3748 015054 005301        DEC      R1          ;
3749
3750 015056 016003 000026  30$:    MOV      22.(R0),R3 ; GET ROUNDING VALUES FROM LOWEST
3751 015062 016004 000056  MOV      46.(R0),R4 ; SIGNIFICANT BIT
3752 015066 006203        ASP      R3          ; DIVIDE BY 2
3753 015070 103002        BCC      40$        ; IF NO CARRY SKIP NEXT COMMAND
3754 015072 062704 001000  ADD      #1000,R4   ; ADD CARRY
3755 015076 006204        40$:    ASR      R4          ; DIDIDE BY 2
3756 015100 060402        ADD      R4,R2      ; ROUND UP THE INPUT VALUE
3757 015102 020227 001750  CMP      R2,#1000. ; LOWER PART IS MODULO 1000
3758 015106 002403        BLT
3759 015110 162702 001750  SUB      #1000.,R2 ; IF OVERFLOW, CARRY OVER TO
3760 015114 005201        INC      R1          ; HIGH PART
3761 015116 060301        50$:    ADD      R3,R1     ; ADD IN HIGH PART OF ROUNDING FACTOR
3762 015120 012703 000020  MOV      #20,R3    ; INITIALISE WORKING REGISTER
3763
3764 015124 020110        60$:    CMP      R1,(R0)   ; COMPARE HIGH VALUE WITH TABLE ENTRY
3765 015126 002415        BLT      90$        ; IF LESS, DON'T SET BIT
3766 015130 003003        BGT      70$        ; IF MORE, SET THE BIT
3767 015132 020260 000030  CMP      R2,24.(R0) ; OTHERWISE, MUST CHECK THE LOW VALJE
3768 015136 002411        BLT      90$        ; IF LESS, DON'T SET THE BIT
3769
3770 015140 166002 000030  70$:    SUB      24.(R0),R2 ; SUBTRACT THE TABLE ENTRIES
3771 015144 002003        BGE      80$        ; BRANCH IF NO BORROW NEEDED
3772 015146 062702 001750  ADD      #1000.,R2 ; ELSE ADD TO LOW WORD

```

GLOBAL SUBROUTINES SECTION

3773	015152	005301		DEC	R1		; FROM HIGH WORD
3774	015154	161001		80\$: SUB	(R0),R1		; AND LOW WORDS
3775	015156	052703	000001	BIS	#1,R3		; AND SET THE OUTPUT BIT
3776	015162	062700	000002	90\$: ADD	#2,R0		; AND NEXT TABLE ENTRY
3777	015166	006303		ASL	R3		; READY FOR NEXT BIT
3778	015170	103355		BCC	60\$; IF 12 BITS NOT DONE, GO BACK
3779							
3780	015172	006203		100\$: ASR	R3		; GET THE PATTERN AGAIN
3781	015174	010301		MOV	R3,R1		; SET UP OUTPUT REGISTER
3782	015176	012604		MOV	(SP)+,R4		; RESTORE R4
3783	015200	012603		MOV	(SP)+,R3		; AND R3
3784	015202	000207		RTS	PC		;

GLOBAL SUBROUTINES SECTION

```

3786 ; SUBROUTINE DECIN SIGNED DECIMAL INPUT ROUTINE.
3787
3788 ;
3789 ; **
3790 ; FUNCTIONAL DESCRIPTION:
3791 ; THIS SOLICITS A SIGNED DECIMAL NUMBER FROM THE OPERATOR.
3792 ;
3793 ; INPUTS:
3794 ;
3795 ; PADD THE ADDRESS OF THE PROMPT STRING FOR THE INPUT.
3796 ;
3797 ; THE OPERATOR IS PROMPTED FOR A NUMBER WHICH CAN BE UP TO 10 DIGITS
3798 ; LONG INCLUDING AN OPTIONAL + OR - SIGN AND DECIMAL POINT. THE
3799 ; STRING SHOULD BE IN 'PRINT' FORMAT ( IE..ASCIZ /#MAINPUT VALUE/ ).
3800 ;
3801 ; IMPLICIT INPUTS:
3802 ;
3803 ; NONE.
3804 ;
3805 ; OUTPUTS:
3806 ;
3807 ; R1 INTEGER PART OF OPERATOR INPUT
3808 ; R2 DECIMAL PART OF OPERATOR INPUT
3809 ;
3810 ;
3811 ; IMPLICIT OUTPUTS:
3812 ;
3813 ; ERROR MESSAGES ARE PRINTED IF THE OPERATOR TYPES AN ILLEGAL CHARACTER,
3814 ; AN INTEGER PART OVER 32767, OR A DECIMAL PART WITH MORE THAN 3 DIGITS.
3815 ;
3816 ; AN EXAMPLE STRING IS APPENDED TO THE INPUT PROMPT.
3817 ;
3818 ; SUBORDINATE ROUTINES USED:
3819 ;
3820 ; NONE.
3821 ;
3822 ; FUNCTIONAL SIDE EFFECTS:
3823 ;
3824 ; NONE.
3825 ;
3826 ; CALLING SEQUENCE:
3827 ;
3828 ; EG. MOV @MADD,PADD ; LOAD THE PROMPT MESSAGE ADDRESS
3829 ; JSR PC,DECIN
3830 ;
3831 ;
3832 ;
3833 015204 DECIN:: MOV @NR1,R0 ; CLEAR NUMBER AND STRING LOCATIONS
3834 015204 012700 015556 MOV @7,R1 ; 2 WORDS FOR INTEGER AND DECIMAL
3835 015210 012701 000007 108: CLR (R0). ; PARTS AND 10 BYTES FOR THE INPUT
3836 015214 005020 DEC R1 ; STRING.
3837 015216 005301 BNE 108 ;
3838 015220 001375 PRINTF PADD ; PRINT THE PROMPT
3839
3840 015222 MOV PADD,SP
015222 013746 004140 MOV R1,SP
015226 012746 000001

```

GLOBAL SUBROUTINES SECTION

```

015232 010600
015234 104417
015236 062706 000004
3841 015242 GMANID GETNUM,SNUM,A, 1,0,10.,NO ; GET THE NUMBER STRING
015242 104443
015244 000406
015246 015562
015250 000142
015252 015575
015254 177777
015256 000000
015260 000012
015262
3842 015262 012700 015562 MOV #SNUM,R0 ; POINT TO THE START
3843 015266 012701 015556 MOV #NR1,R1 ; ASSUME INTEGER PART FIRST
3844
3845 015272 121027 000053 CMPB (R0),#' ' ; IS 1ST CHARACTER A . ?
3846 015276 001430 BEQ 60$ ; IF YES, BRANCH
3847 015300 121027 000055 CMPB (R0),#'-' ; IS IT A - ?
3848 015304 001425 BEQ 60$ ; IF YES, BRANCH
3849 015306 121027 000056 20$: CMPB (R0),#'.' ; IS _T A . ?
3850 015312 001017 BNE 50$ ; IF NOT, BRANCH
3851
3852 015314 012701 015560 30$: MOV #NR2,R1 ; START ON DECIMAL PART
3853 015320 105760 000002 TSTB 2(R0) ; FORCE TO 3 DIGITS
3854 015324 001003 BNE 40$ ;
3855 015326 112760 000060 000002 MOVB #'0,2(R0) ; IE. REPLACE NULLS
3856 015334 105760 000003 40$: TSTB 3(R0) ;
3857 015340 001007 BNE 60$ ; WITH ZEROS
3858 015342 112760 000060 000003 MOVB #'0,3(R0) ;
3859 015350 000403 BR 60$ ;
3860
3861 015352 105710 50$: TSTB (R0) ; END OF STRING ?
3862 015354 001451 BEQ 110$ ; IF YES, FINISH UP
3863 015356 000402 BR 70$ ; ELSE GET NEXT DIGIT
3864
3865 015360 005200 60$: INC R0 ; SKIP OVER THE SIGN OR POINT
3866 015362 000751 BR 20$ ;
3867
3868 015364 121027 000060 70$: CMPB (R0),#60 ; IS CHARACTER A VALID NUMBER ?
3869 015370 002403 BLT 80$ ; IF TOO LOW, .SK AGAIN
3870 015372 121027 000071 CMPB (R0),#71 ;
3871 015376 003411 BLE 90$ ; IF NOT TOO HIGH, BRANCH
3872
3873 015400 80$: PRINTF #DECIN$ ; PRINT ILLEGAL CHARACTER
015400 012746 015734 MOV #DECIN$, (SP)
015404 012746 000001 MOV #1, (SP)
015410 010600 MOV SP,R0
015412 104417 TRAP C$PNTF
015414 062706 000004 ADD #4,SP
3874 015420 000671 BR DECIN ; AND ASK AGAIN
3875
3876 015422 021127 006314 90$: CMP (R1),#3276. ; NUMBER TOO HIGH ?
3877 015426 101013 BMI 100$ ; IF YES, BRANCH
3878
3879 015430 006311 ASL (R1) ; ELSE MULTIPLY BY 10
3880 015432 011102 MOV (R1),R1 ;

```

GLOBAL SUBROUTINES SECTION

SEQ 0094

```

3881 015434 006311          ASL      (R1)          ; READY FOR NEXT CHARACTER
3882 015436 006311          ASL      (R1)          ;
3883 015440 060211          ADD      R2,(R1)      ;
3884                                     ;
3885 015442 112002          MOVB     (R0),R2      ; SAVE THE CHARACTER
3886 015444 162702 000060  SUB      #60,R2      ; CONVERT TO NUMBER
3887 015450 060211          ADD      R2,(R1)      ; AND ADD TO ACCUMULATOR
3888 015452 100401          BMI     100$        ; IF OVERFLOW, REPORT ERROR
3889                                     ;
3890 015454 000714          BR       20$        ; AND GET NEXT CHARACTER
3891                                     ;
3892 015456                                     100$: PRINTF  #DECIN1      ; PRINT 'NUMBER TOO BIG'
    015456 012746 015615          MOV      #DECIN1,(SP)
    015462 012746 000001          MOV      #1,(SP)
    015466 010600          MOV      SP,R0
    015470 104417          TRAP    C$PRINTF
    015472 062706 000004          ADD      #4,SP
3893 015476 000642          BR       DECIN      ; AND GET ANOTHER
3894                                     ;
3895 015500 013701 015556          110$: MOV      NR1,R1      ; SET UP OUTPUT REGISTERS
3896 015504 013702 015560          MOV      NR2,R2      ;
3897 015510 020227 001750          CMP      R2,#1000.   ;
3898 015514 103411          BLO     120$        ; DECIMAL PART TOO BIG ?
3899 015516          PRINTF  #DECIN2      ; IF NOT, BRANCH
    015516 012746 015653          ; PRINT 'ONLY 3 DIGITS ALLOWED'
    015522 012746 000001          MOV      #DECIN2,(SP)
    015526 010600          MOV      #1,(SP)
    015530 104417          MOV      SP,R0
    015532 062706 000004          TRAP    C$PRINTF
    015536 000622          ADD      #4,SP
3900 015536 000622          BR       DECIN
3901                                     ;
3902 015540 123727 015562 000055 120$: CMPB     SNUM,#' '      ; WAS STRING NEGATIVE ?
3903 015546 001002          BNE     130$        ; IF NOT, BRANCH
3904 015550 005401          NEG     R1          ; ELSE NEGATE THE OUTPUT
3905 015552 005402          NEG     R2          ;
3906                                     ;
3907 015554 000207          130$: RTS      PC      ; AND RETURN
3908                                     ;
3909                                     .NLIST  BEX
3910                                     ;
3911 015556 000000          NR1:    .WORD    0      ; STORE FOR INTEGER PART
3912 015560 000000          NR2:    .WORD    0      ; STORE FOR DECIMAL PART
3913 015562 055 061 062  SNUM:  .ASCIIZ  /-12345.678/ ; STORE FOR INPUT STRING
3914                                     ;
3915 015575 050 105 107  GETNUM: .ASCIIZ  /(EG. 12345.678)/ ; PROMPT FOR INPUT
3916 015615 045 116 045  DECIN1: .ASCIIZ  /#N#AMUST BE LESS THAN 32768#N/
3917 015653 045 116 045  DECIN2: .ASCIIZ  /#N#ONLY 3 DIGITS MAY FOLLOW THE DECIMAL POINT#N/
3918 015734 045 116 045  DECIN3: .ASCIIZ  /#N#ILLEGAL CHARACTER#N/
3919                                     ;
3920                                     .LIST  BEX
3921                                     .EVEN

```


GLOBAL SUBROUTINES SECTION

3923
3924
3925
3926
3927
3928
3929
3930
3931
3932
3933
3934
3935
3936
3937
3938
3939
3940
3941
3942
3943
3944
3945
3946
3947
3948
3949
3950
3951
3952
3953
3954
3955
3956
3957
3958
3959
3960
3961
3962
3963
3964
3965
3966 015764
3967 015764 010146
3968 015766 010246
3969
3970 015770 005701
3971 015772 002402
3972 015774 005702
3973 015776 002012
3974 016000 005401
3975 016002 005402
3976 016004
016004 012746 016102
016010 012746 000001
016014 010600

```

; SUBROUTINE DECOUT  SIGNED DECIMAL OUTPUT ROUTINE
; **
; FUNCTIONAL DESCRIPTION:
; ROUTINE TO PRINT A SIGNED DECIMAL NUMBER.
; INPUTS:
; R1  INTEGER PART OF NUMBER TO BE PRINTED
; R2  DECIMAL PART OF NUMBER TO BE PRINTED
; IMPLICIT INPUTS:
; NONE.
; OUTPUTS:
; THE NUMBER IS PRINTED AS FOLLOWS : 12345.678
; ( NO SIGN IS PRINTED FOR POSITIVE NUMBERS )
; IF THE DECIMAL PART (R2) IS ZERO, THE NUMBER
; IS PRINTED AS 12345
; IMPLICIT OUTPUTS:
; NONE.
; SUBORDINATE ROUTINES USED:
; NONE.
; FUNCTIONAL SIDE EFFECTS:
; NONE.
; CALLING SEQUENCE:
; EG.  MOV    #10.,R1           ; PRINT -10.001
;      MOV    #1,R2            ;
;      JSR    PC,DECOUT
;
DECOUT::
      MOV    R1,(SP)           ; SAVE R1
      MOV    R2,(SP)           ; SAVE R2
;
      TST    R1                ; R1 > 0 ?
      BLT    10$              ; IF NOT, BRANCH
      TST    R2                ; R2 POSITIVE ?
      BGE    20$              ; IF YES, BRANCH
10$:    NEG    R1               ; ELSE MAKE POSITIVE
;
      NEG    R2
;
      PRINTF @DEC01           ; AND PRINT ...

```

```

      MOV    @DEC01,.(SP)
      MOV    #1,(SP)
      MOV    SP,R0

```

GLOBAL SUBROUTINES SECTION

```

016016 104417
016020 062706 000004
3977
3978 016024 20$: PRINTF #DEC02,R1 ; PRINT THE INTEGER PART
016024 010146
016026 012746 016106
016032 012746 000002
016036 010600
016040 104417
016042 062706 000006
3979 016046 005702 TST R2 ; DECIMAL PART = 0 ?
3980 016050 001411 BEQ DECEX ; IF YES BRANCH
3981 016052 PRINTF #DEC03,R2 ; ELSE, PRINT DECIMAL PART
016052 010246
016054 012746 016112
016060 012746 000002
016064 010600
016066 104417
016070 062706 000006
3982 016074 012602 DECEX: MOV (SP)+,R2 ; RESTORE R2
3983 016076 012601 MOV (SP)+,R1 ; AND R1
3984 016100 000207 RTS PC ; AND RETURN
3985
3986
3987 016102 045 101 055 DEC01: .MLIST BEX
3988 016106 045 104 065 DEC02: .ASCIZ /#A-/
3989 016112 045 101 056 DEC03: .ASCIZ /#D5/
3990 .LIST BEX
3991 .EVEN
3992

```

GLOBAL SUBROUTINES SECTION

3994
3995
3996
3997
3998
3999
4000
4001
4002
4003
4004
4005
4006
4007
4008
4009
4010
4011
4012
4013
4014
4015
4016
4017
4018
4019
4020
4021
4022
4023
4024
4025
4026
4027
4028 016122 010146
4029 016124
016124 012746 000340
016130 012746 017266
016134 012746 000004
016140 012746 000003
016144 104437
016146 062706 000010
4030 016152 005037 004060
4031 016156 010177 165542
4032 016162
016162 012700 000004
016166 104436
4033 016170 005737 004060
4034 016174 000241
4035 016176 004737 012146
4036 016202 001415
4037 016204 013701 003722
4038 016210 012737 000003 007176
4039 016216 012737 016242 007202
4040 016224 012737 007634 007204
4041 016232
016232 104460

```

*****
; SUBROUTINE WRITE - WRITE ROUTINE FOR OTHER MODULE ADDRESS
;-----
; FUNCTIONAL DESCRIPTION:
;
;   SUBROUTINE FOR LOADING THE DATA REGISTER OF A DIGITAL OUTPUT
;   MODULE. THE OUTPUT MODULE IS SPECIFIED FOR THE LOOPBACK TESTS
;   AS 'OTHER' IN THE HARDWARE P TABLE.
;   THIS SUBROUTINE ALSO DOES A CHECK TO THE OTHER MODULE
;   ADDRESS. IF THE ADDRESS IS NOT AVAILABLE IT WILL REPORT
;   AN ERROR.
;
; INPUTS:
;
;   THE CONTENTS OF R1 WILL BE USED TO LOAD THE DATA REGISTER
;
; IMPLICIT INPUTS:
;
;   ERRNBR - CONTAINS THE ERROR NUMBER
;
; OUTPUTS:
;
;   ERROR MESSAGES IF OUTPUT ADDRESS IS NOT AVAILABLE (NXM).
;
; SUBORDINATE ROUTINES USED:
;
;   DRS ERROR MACRO
;
; CALLING SEQUENCE:
;
;   CALL WRITE OR JSR PC.WRITE
;
;   - - -
WRITE:: MOV     R1, (SP)      ;SAVE R1
        SETVEC #4, @NXM, @PRIO7 ;SET UP VECTOR
                                MOV     @PRIO7, (SP)
                                MOV     @NXM, (SP)
                                MOV     #4, (SP)
                                MOV     #3, -(SP)
                                TRAP    C$SVEC
                                ADD     #10, SP
                                MOV     #4, R0
                                TRAP    C$CLEC
        CLR     NXMFLG      ;CLEAR NXM FLAG
        MOV     R1, @OTMDAT ;LOAD DIGITAL OUTPUT REGISTER
        CLRVEC #4          ;VECTOR 4 TO NORMAL STATE
                                MOV     #4, R0
                                TRAP    C$CLEC
        TST     NXMFLG     ;WAS MODULE ADDRESS AVAILABLE
        CLC                    ;CLEAR CARRY
        CALL   INSERT      ;SKIP BRANCH IF SFI IS SET
        BEQ    10$         ;BRANCH IF YES
        MOV     OTMMD, R1   ;SET UP DATA FOR ERROR REPORT
        MOV     #3, ERR1P   ;SET UP FOR SOFT ERROR
        MOV     @WRERM, ERRMSG ;LOAD ERROR MESSAGES
        MOV     @EERA, ERRBLK ;LOAD ERROR MESSAGES ROUTINE
        ERROR                    ;ERROR HANDLER
                                TRAP    C$ERROR

```

GLOBAL SUBROUTINES SECTION

```

4042 016234 000261
4043 016236 012601
4044 016240 000207
4045
4046
4047 016242 122 105 107 WRERM: .NLIST BEX
4048 .ASCIIZ /REGISTER ADDRESSING ERROR FOR OTHER MODULE ADDRESSES
4049 .LIST BEX
4050 .EVEN

```

GLOBAL SUBROUTINES SECTION

4052
4053
4054
4055
4056
4057
4058
4059
4060
4061
4062
4063
4064
4065
4066
4067
4068
4069
4070
4071
4072
4073
4074
4075
4076
4077
4078
4079
4080
4081
4082
4083
4084
4085
4086
4087
4088
4089
4090
4091
4092
4093
4094
4095
4096
4097
4098
4099
4100

```

.....
SUBROUTINE READ - READ ROUTINE FOR OTHER MODULE ADDRESS
.....
FUNCTIONAL DESCRIPTION:
SUBROUTINE FOR READING THE DATA REGISTER OF A DIGITAL INPUT
MODULE THAT IS SPECIFIED FOR THE LOOPBACK TESTS AS 'OTHER
IN THE HARDWARE P TABLE.
THIS SUBROUTINE ALSO DOES A CHECK TO THE OTHER MODULE
ADDRESS. IF THE ADDRESS IS NOT AVAILABLE IT WILL REPORT
AN ERROR.
INPUTS:
NONE.
IMPLICIT INPUTS:
ERRNBR CONTAINS ERROR NUMBER FOR ERROR HANDLER
OUTPUTS:
ERROR MESSAGES IF INPUT ADDRESS IS NOT AVAILABLE (NXM).
THE LOCATION 'BAD' WILL CONTAIN THE CONTENTS OF THE
DATA REGISTER OF THE DIGITAL INPUT MODULE.
SUBORDINATE ROUTINES USED:
DRS ERROR MACRO
CALLING SEQUENCE:
CALL READ OR JSR PC,READ

```

```

READ:: MOV R1, (SP) ;SAVE R1
      SETVEC #4, @NXM, @PRIO ;SET UP VECTOR
      MOV @PRIO7, (SP)
      MOV @NXM, (SP)
      MOV #4, -(SP)
      MOV #3, (SP)
      TRAP C:SEVC
      ADD #10, SP
      CLR NXMFLG ;CLEAR NXM FLAG
      MOV @DTHDAT, BAD ;READ DIGITAL INPUT REGISTER
      CLRVEC #4 ;VECTOR 4 TO NORMAL STATE
      MOV #4, R0
      TRAP C:SEVC
      TST NXMFLG ;WAS MODULE ADDRESS AVAILABLE
      CLC ;CLEAR CARRY
      CALL INSERT ;SKIP BRANCH IF SFI IS SET
      BEQ 108 ;BRANCH IF YES
      MOV 0THMOD, R1 ;SET UP DATA FOR ERROR REPORT
      MOV #3, ERRTP ;SET UP FOR SOFT ERROR
      MOV @REERM, ERRMSG ;LOAD ERROR MESSAGES

```

```

016326 010146
016330
016330 012746 000340
016334 012746 017266
016340 012746 000004
016344 012746 000003
016350 104437
016352 062706 000010
4091 016356 005037 004060
4092 016362 017737 165336 004064
4093 016370
      016370 012700 000004
      016374 104436
4094 016376 005737 004060
4095 016402 000241
4096 016404 004737 012146
4097 016410 001415
4098 016412 013701 003722
4099 016416 012737 000003 007176
4100 016424 012737 016450 007202

```

GLOBAL SUBROUTINES SECTION

```

4101 016432 012737 007634 007204      MOV      @EERA,ERRBLK      ;LOAD ERROR MESSAGES ROUTINE
4102 016440      ERROR      ;ERROR HANDLER
      016440 104460
4103 016442 000261      SEC
4104 016444 012601      104:  MOV      (SP)+,R1      ;SET CARRY FOR MARK THE ERROR
4105 016446 000207      RETURN      ;RESTORE R1
      ;AND RETURN
4106
4107
4108 016450      122      105      107 REERM: .NLIST BEX
      .ASCIZ /REGISTER ADDRESSING ERROR FOR OTHER MODULE ADDRESS/
4109      .LIST BEX
4110      .EVEN
4111

```

GLOBAL SUBROUTINES SECTION

4113
 4114
 4115
 4116
 4117
 4118
 4119
 4120
 4121
 4122
 4123
 4124
 4125
 4126
 4127
 4128
 4129
 4130
 4131
 4132
 4133
 4134
 4135
 4136
 4137
 4138
 4139
 4140
 4141
 4142
 4143
 4144
 4145
 4146
 4147 016534 013746 016572
 4148 016540 013700 016574
 4149 016544 006316
 4150 016546 005500
 4151 016550 006200
 4152 016552 005516
 4153 016554 061600
 4154 016556 005600
 4155 016560 012637 016572
 4156 016564 010037 016574
 4157 016570 000207
 4158
 4159 016572 135753
 4160 016574 024674
 4161

```

.....
SUBROUTINE RANDOM
FUNCTIONAL DESCRIPTION:
    THIS ROUTINE GENERATES A RANDOM PATTERN. THE PATTERN IS
    STORED IN LOCATION RB.
INPUTS:
    NONE.
IMPLICIT INPUTS:
    RA AND RB
OUTPUTS:
    RB CONTAINS THE RANDOM PATTERN
    RA CONTAINS A SECOND RANDOM PATTERN
IMPLICIT OUTPUTS:
    NONE.
SUBORDINATE ROUTINES USED:
    NONE.
CALLING SEQUENCE:
    CALL RANDOM OR JSR PC,RANDOM
RANDOM: MOV RA, (SP) ; PUSH RA TO STACK
        MOV RB, RO ; GET THE LAST RANDOM PATTERN
        ASL @SP ; SHIFT SP (=RA) LEFT
        ADC RO ; IF CARRY IS SET ADD TO RO (=RB)
        ASR RO ; THEN SHIFT THE RESULT RITH
        ADC @SP ; IF CARRY IS SET ADD TO SP (=RA)
        ADD @SP, RO ; ADD SP (=RA) AND RO (=RB)
        SBC RO ; SUBTRACT CARRY IF SET FROM RB
        MOV (SP), RA ; LOAD NEW VALUE INTO LOCATION RA
        MOV RO, RB ; LOAD LOCATION RB WITH NEW PAT.
        RETURN ;
RA: .WORD 135753 ; START PATTERN FOR RB
RB: .WORD 24674 ; STORAGE FOR RANDOM PATTERN
    
```

GLOBAL SUBROUTINES SECTION

```

4163
4164
4165
4166
4167
4168
4169
4170
4171
4172
4173
4174
4175
4176
4177
4178
4179
4180
4181
4182
4183
4184
4185
4186
4187
4188
4189
4190
4191
4192
4193
4194
4195
4196
4197
4198
4199
4200
4201
4202 016576 105737 177560
4203 016602 100002
4204 016604 104422
4205 016606 000421
4206 016610 042777 000100 165062 10$:
4207 016616 012701 000012 40$:
4208 016622 004737 011506 30$:
4209 016626 005301
4210 016630 001374
4211 016632 032777 000100 165040
4212 016640 001356
4213 016642 052777 000100 165030
4214 016650 000762
4215 016652 012737 000001 017000 20$:
4216 016660 013737 177562 004064
4217 016666 042737 000200 004064
4218 016674 122737 000131 004064

;*****
; SUBROUTINE - FLASH
;-----
; FUNCTIONAL DESCRIPTION:
;
; THIS SUBROUTINE FLASHES THE SELECTED MODULE
; LED ON AND OFF WHILE READING THE CONSOLE KEYBOARD INPUT.
; THE EXPECTED INPUTS ARE 'Y' OR 'N' OTHER INPUTS
; (EXCEPT THE CNTL C) WILL CAUSE A PROMT TO REPEAT
; WITH THE CORRECT CHARACTER.
;
; INPUTS:
;
; CONSOLE KEYBOARD INPUT.
;
; IMPLICIT INPUTS:
;
; NONE.
;
; OUTPUTS:
;
; FLSANS CONTAINS THE KEYBOARD INPUT YES OR NO
; FLSANS ZERO = NO
; FLSANS ONE = YES
;
; IMPLICIT OUTPUTS:
;
; NONE.
;
; SUBORDINATE ROUTINES USED:
;
; BREAK - DRS MACRO (THIS MACRO LOOKS FOR CNTL C)
; PRINTF - DRS MACRO, THIS MACRO PRINTS A MESSAGES ON THE CONSOLE
;
; CALLING SEQUENCE:
;
; CALL FLASH OR JSR PC,FLASH
;-----
FLASH:: TSTB TKS ;TEST THE KEYBOARD STATUS REG.
;BPL 10$ ;BRANCH IF NOTHING FOUND
;BREAK ;LOOK FOR 'CNTL C' TRAP C$BRK
;
; BR 20$ ;
; BIC #100,@MOD ;SWITH MODULE LED OFF
; MOV #10.,R1 ;SET UP WAIT COUNTER
; CALL WT25M ;WAIT FOR 25 MS
; DEC R1 ;ARE 250 MS OVER
; BNE 30$ ;BRANCH IF NO
; BIT #100,@MOD ;IS THE MODULE LED SWITCHED ON
; BNE FLASH ;BRANCH IF YES
; BIS #100,@MOD ;OTHERWISE SWITCH IT ON
; BR 40$ ;AND BRANCH TO WAIT LOOP
; MOV #1,FLSANS ;SAVE 'YES' ANSWER
; MOV TKB,BAD ;GET CHARACTER
; BIC #200,BAD ;DISCARD PARITY BIT
; CMPB #Y,BAD ;WAS THE TYPED CHARACTER A 'Y' ?

```


GLOBAL SUBROUTINES SECTION

```

4219 016702 001432          BEQ      50$          ;BRANCH IF YES
4220 016704 122737 000131 004064  CMPB   #'Y,BAD      ;WAS IT A LOWESCASE 'Y' ?
4221 016712 001426          BEQ      50$          ;BRANCH IF YES
4222 016714 005037 017000          CLR     FLSANS      ;SAVE 'NO' ANSWER
4223 016720 122737 000116 004064  CMPB   #'N,BAD      ;WAS THE TYPED CHARACTER A 'N' ?
4224 016726 001420          BEQ      50$          ;BRANCH IF YES
4225 016730 122737 000116 004064  CMPB   #'N,BAD      ;WAS IT A LOWERCASE 'N' ?
4226 016736 001414          BEQ      50$          ;BRANCH IF YES
4227 016740 013737 177562 177566  MOV     TKB,TPB     ;ECHO THE CHARACTER
4228 016746          PRINTF  #PROMT      ;IF NO PRINT A PROMT
          016746 012746 017002          MOV     #PROMT,-(SP)
          016752 012746 000001          MOV     #1,-(SP)
          016756 010600          MOV     SP,RO
          016760 104417          TRAP   C$PNTF
          016762 062706 000004          ADD     #4,SP
4229 016766 000703          BR      FLASH      ;AND GO BACK
4230 016770 013737 177562 177566 50$:  MOV     TKB,TPB     ;ECHO THE CHARACTER
4231 016776 000207          RETURN
4232
4233          ; CONSOLE EQUATES
4234
4235          177560          TKS = 177560      ;KEYBOARD STATUS REGISTER
4236          177562          TKB = 177562      ;KEYBOARD DATA REGISTER
4237          177566          TPB = 177566      ;PRINTER DATA BUFFER
4238
4239 017000 000000          FLSANS::          .WORD 0      ;SAVE LOCATION FOR KEYBOARD BUFFER
4240
4241
4242 017002 045 116 045 PROMT: .NLIST BEX
          .ASCIZ /#N#AUNAUTHORIZED CHARACTER, TYPE ONLY 'Y' OR 'N' /
4243          .LIST BEX
4244          .EVEN

```


GLOBAL SUBROUTINES SECTION

```

4297
4298 017164 006237 017172      101:  ASR      CARRFL      ;DO SOMETHING
4299 017170 000207              RETURN      ;AFFECT THE CARRY
4300
4301      ; CONSOLE EQUATES
4302
4303      TKS = 177560      ;KEYBOARD STATUS REGISTER
4304      TKB = 177562      ;KEYBOARD DATA REGISTER
4305      TPB = 177566      ;PRINTER DATA BUFFER
4306
4307 017172 000000      CARRFL: .WORD 0      ;SAVE LOCATION FOR CARRY BIT
4308
4309      .NLIST BEX
4310 017174 045 116 045 RETME1: .ASCIZ /WAType CNTL C TO ABORT OR RETURN TO GO TO THE NEXT STEP/
4311      .LIST BEX
4312      .EVEN
4313

```

C)

GLOBAL SUBROUTINES SECTION

```

4315
4316
4317
4318
4319
4320
4321
4322
4323
4324
4325
4326
4327
4328
4329
4330 017266          BGNSRV  NXM
      017266
4331 017266 012737 000001 004060      MOV    #1,NXMFLG          ; FLAG NXM TRAP      NXM::
4332 017274          ENDSRV
      017274          L10016:
      017274 000002          RTI
4333
4334
4335
4336
4337
4338
4339
4340
4341
4342
4343
4344 017276          BGNSRV  INTSR
      017276
4345 017276 012737 000001 004150      MOV    #1,INTFLA        ; INTERRUPT FLAG      INTSR::
4346 017304          ENDSRV
      017304          L10017:
      017304 000002          RTI
4347
4348
4349
4350
4351
4352
4353
4354
4355
4356
4357
4358 017306          BGNSRV  INTSR2
      017306
4359 017306 012737 000001 004152      MOV    #1,INTFL2        ; ERROR INTERRUPT FLAG INTSR2::
4360 017314          ENDSRV
      017314          L10020:
      017314 000002          RTI
4361
4362

```

```

;*****;
; INTERRUPT SERVICE ROUTINES ;
;*****;
; INTERRUPT SERVICE ROUTINE NXM  NON EXISTANT MEMORY TRAP.
;
; THIS ROUTINE SETS A FLAG NXMFLG TO 1. IT IS EXECUTED WHEN A NON
; EXISTANT MEMORY TRAP OCCURS IF VVECTOR 4 HAS BEEN LOADED WITH THE
; ADDRESS NXM.
;
; NXMFLG SHOULD BE CLEARED IMMEDIATELY BEFORE EXECUTING CODE WHICH MAY
; ADDRESS NON EXISTANT MEMORY.
;

```

```

;*****;
; INTERRUPT SERVICE ROUTINE  INTSR
;*****;
;
; THIS ROUTINE SETS A FLAG (INTFLA) TO 1. IT WILL BE EXECUTED
; WHEN AN DONE INTERRUPT HAS OCCURRED.
;

```

```

;*****;
; INTERRUPT SERVICE ROUTINE  INTSR2
;*****;
;
; THIS ROUTINE SETS A FLAG (INTFL2) TO 1. IT WILL BE EXECUTED
; WHEN AN ERROR INTERRUPT HAS OCCURRED.
;

```

GLOBAL SUBROUTINES SECTION

```

4363
4364
4365
4366
4367
4368
4369
4370
4371
4372 017316
      017316
4373
4374 017316
      017316
      017316 000002
4375

```

```

;.....
; INTERRUPT SERVICE ROUTINE - CLINT
;.....
;...
; THIS ROUTINE IS A DUMY SERVICE FOR THE LINE TIME CLOCK INTERRUPTS
; IT WILL BE EXECUTED WHEN AN INTERRUPT AT VECTOR 100 IS OCCURED.
;
      BGNSRV CLINT
;NO ACTION IN THIS ROUTINE
      ENDSRV
      CLINT::
      L10021: RTI

```

GLOBAL SUBROUTINES SECTION

4377
4378
4379
4380 017320
4381
4382

ENDMOD

GLOBAL SUBROUTINES SECTION

```

4394 .TITLE MISCELLANEOUS SECTIONS
4395 .SBTTL REPORT CODING SECTION
4423
4424 017320          BGNMOD
4425
4426 ; PRINT ROUTINE
4427
4428 ;**
4429 ; FUNCTIONAL DESCRIPTION:
4430 ;
4431 ;     PRINTS OUT TEST TITLES, A CONFIGURATION TABLE OR A STATISTICS
4432 ;     TABLE FOR THE UNITS UNDER TEST, WHICH TO PRINT IS DETERMINED BY
4433 ;     USER INPUT.
4434 ;
4435 ;     THE CONFIGURATION TABLE SHOWS THE HARDWARE CHARACTERISTICS OF
4436 ;     THE UNIT UNDER TEST AND IF PRESENT, OF THE UNIT TO WHICH IT IS
4437 ;     CONNECTED FOR LOOPBACK TESTING. IF THE FIRST UNIT MODE ADDRESS
4438 ;     IS ZERO (IE. NO TESTS HAVE BEEN RUN AND NO HARDWARE PARAMETERS
4439 ;     HAVE BEEN SET UP) THE AUTOMATIC CONFIGURATION ROUTINE 'CONFIG'
4440 ;     IS CALLED TO ASCERTAIN THE HARDWARE CONFIGURATION.
4441 ;
4442 ;     THE STATISTICS TABLE DISPLAYS THE NUMBER OF ERRORS WHICH THE
4443 ;     DIAGNOSTIC HAS DETECTED FOR EACH UNIT, AND WHETHER THE UNIT HAS
4444 ;     BEEN DROPPED FROM TESTING.
4445 ;
4446 ; INPUTS:
4447 ;
4448 ;     THE USER IS ASKED TO TYPE A CHARACTER INDICATING WHETHER TO
4449 ;     PRINT THE TEST TITLES, THE CONFIGURATION TABLE, THE STATISTICS
4450 ;     TABLE OR HOW TO REESTABLISH THE SYSTEM CONFIGURATION.
4451 ;
4452 ; IMPLICIT INPUTS:
4453 ;
4454 ;     THE HARDWARE PARAMETER TABLE IS READ FOR THE CONFIGURATION
4455 ;     PRINTOUT.
4456 ;
4457 ;     THE ERROR TABLE 'ECNT' IS USED FOR THE STATISTICS PRINTOUT.
4458 ;
4459 ;     TEST TITLES ARE ASSUMED TO BE LABELLED WITH THE FORMAT TDMNN,
4460 ;     WHERE NN IS THE TEST NUMBER. NTESTS AT THE START OF THE ROUTINE
4461 ;     MUST EQUAL THE NUMBER OF TESTS IN THE DIAGNOSTIC.
4462 ;
4463 ; OUTPUTS:
4464 ;
4465 ;     EITHER A LIST OF TEST TITLES, A CONFIGURATION TABLE OR A
4466 ;     STATISTICS TABLE ARE OUTPUT.
4467 ;
4468 ;     IF ANY UNIT HAS BEEN DROPPED OR DESELECTED USING THE "UNITS"
4469 ;     SWITCH, A MESSAGE "PLEASE TYPE ADD" MAY BE PRINTED.
4470 ;
4471 ; IMPLICIT OUTPUTS:
4472 ;
4473 ;     NONE.
4474 ;
4475 ; SUBORDINATE ROUTINES USED:
4476 ;
4477 ;     CONFIG  AUTOMATIC CONFIGURATION ROUTINE.

```

REPORT CODING SECTION

```

4478 ; CONPRI - CONFIGURATION PRINT ROUTINE.
4479 ; CRLF LINE FEED PRINT ROUTINE.
4480 ;
4481 ; FUNCTIONAL SIDE EFFECTS:
4482 ;
4483 ; IF NO HARDWARE PARAMETERS ARE SET UP, THE AUTOMATIC
4484 ; CONFIGURATION ROUTINE IS CALLED TO GENERATE A HARDWARE P TABLE.
4485 ;
4486 ; REGISTERS R1 TO R5 ARE CORRUPTED.
4487 ;
4488 ; CALLING SEQUENCE:
4489 ;
4490 ; INVOKED BY THE OPERATOR PRINT COMMAND.
4491 ;
4492 ;
4493 ;
4494 ;
4495 ;
4496 000031 NTESTS=25. ; 25 TESTS FOR TITLE PRINTOUT
4497 017320 BGNRPT
4498 017320 104450 ASK: MANUAL ; IS MANUAL INTERVENTION ALLOWED ?
4499 017322 103412 BCOMPLETE 10% ; IF YES, BRANCH (UAM NOT SET)
017324 012746 020654 PRINTF @PRA ; PRINT THAT UAM HAS TO BE SET
017330 012746 000001
017334 010600
017336 104417
017340 062706 000004
4500 017344 EXIT RPT ; EXIT PRINT ROUTINE
017344 000167
017346 002770
4501 017350 10%: GMANID PR1,CHAR,A,377,1,4,YES; PROMPT FOR A COMMAND
017350 104443
017352 000406
017354 020454
017356 000152
017360 020746
017362 000377
017364 000001
017366 000004
017370
4502 017370 023727 020454 000122 CMP CHAR,@R ; REESTABLISH SYSTEM CONFIG. ?
4503 017376 001457 BEQ RECON ; IF YES, OUTPUT INFORMATION
4504 017400 023727 020454 000124 CMP CHAR,@T ; TEST LIST REQUESTED ?
4505 017406 001515 BEQ TITLE ; IF YES, OUTPUT TITLES
4506 017410 023727 020454 000103 CMP CHAR,@C ; CONFIGURATION REQUESTED ?
4507 017416 001574 BEQ CON ; IF YES, OUTPUT CONFIGURATION
4508 017420 023727 020454 000123 CMP CHAR,@S ; STATISTICS REQUESTED ?
4509 017426 001002 BNE HEL ; IF NOT, PRINT THE HELP MESSAGE
4510 017430 000137 020260 JMP STAT ; IF YES, OUTPUT STATISTICS
4511
4512 017434 HEL: PRINTF @PR2 ; OTHERWISE, PRINT THE HELP MESSAGE
017434 012746 020773
017440 012746 000001
017444 010600

```


REPORT CODING SECTION

017446	104417										TRAP	CSPNTE
017450	062706	000004									ADD	04,SP
4513	017454			PRINTF	@PR2A							
	017454	012746	021100								MOV	@PR2A, (SP)
	017460	012746	000001								MOV	01, (SP)
	017464	010600									MOV	SP,R0
	017466	104417									TRAP	CSPNTE
	017470	062706	000004								ADD	04,SP
4514	017474			PRINTF	@PR2B							
	017474	012746	021177								MOV	@PR2B, (SP)
	017500	012746	000001								MOV	01, (SP)
	017504	010600									MOV	SP,R0
	017506	104417									TRAP	CSPNTE
	017510	062706	000004								ADD	04,SP
4515	017514			PRINTF	@PR2C							
	017514	012746	021271								MOV	@PR2C, (SP)
	017520	012746	000001								MOV	01, (SP)
	017524	010600									MOV	SP,R0
	017526	104417									TRAP	CSPNTE
	017530	062706	000004								ADD	04,SP
4516	017534	000671		BR	ASK							
4517												
4518	017536			RECON: PRINTF	@PR2D							
	017536	012746	021332								MOV	@PR2D, (SP)
	017542	012746	000001								MOV	01, (SP)
	017546	010600									MOV	SP,R0
	017550	104417									TRAP	CSPNTE
	017552	062706	000004								ADD	04,SP
4519	017556			PRINTF	@PR2E							
	017556	012746	021422									
	017562	012746	000001								MOV	@PR2E, (SP)
	017566	010600									MOV	01, (SP)
	017570	104417									MOV	SP,R0
	017572	062706	000004								TRAP	CSPNTE
	017576										ADD	04,SP
4520	017576			PRINTF	@PR2F							
	017576	012746	021525									
	017602	012746	000001								MOV	@PR2F, (SP)
	017606	010600									MOV	01, (SP)
	017610	104417									MOV	SP,R0
	017612	062706	000004								TRAP	CSPNTE
	017616										ADD	04,SP
4521	017616			PRINTF	@PR2G							
	017616	012746	021621									
	017622	012746	000001								MOV	@PR2G, (SP)
	017626	010600									MOV	01, (SP)
	017630	104417									MOV	SP,R0
	017632	062706	000004								TRAP	CSPNTE
	017636	000137	020444								ADD	04,SP
4522				JMP	PREX							
4523												
4524	017642			TITLE: PRINTF	@TT							
	017642	012746	020546									
	017646	012746	000001								MOV	@TT, (SP)
	017652	010600									MOV	01, (SP)
	017654	104417									MOV	SP,R0
	017656	062706	000004								TRAP	CSPNTE
	017662	012701	000001								ADD	04,SP
4525	017666	012702	020464	MOV	01,R1							
4526				MOV	@TAD5,R2							
4527												

```

; AND PROMPT FOR COMMAND AGAIN
; PRINT HOW TO REESTABLISH
; THE SYSTEM CONFIGURATION
; ...
; ...
; AND EXIT
; TEST LIST HEADER
; START WITH TEST 1
; START OF LIST OF TITLE ADDRESSES
    
```

REPORT CODING SECTION

4528	017672	012703	000022	108:	MC.	#18.,R3	:	WAIT AFTER 18 LINES	
4529									
4530	017676			208:	PRINTF	@TNUM,R1	:	PRINT TEST NUMBER	
	017676	010146							MOV R1,(SP)
	017700	012746	020650						MOV @TNUM,(SP)
	017704	012746	000002						MOV #2,(SP)
	017710	010600							MOV SP,R0
	017712	104417							TRAP C\$PNTF
	017714	062706	000006						ADD #5,SP
4531	017720				PRINTF	(R2)	:	AND TITLE	
	017720	011246							MOV (R2),(SP)
	017722	012746	000001						MOV #1,(SP)
	017726	010600							MOV SP,R0
	017730	104417							TRAP C\$PNTF
	017732	062706	000004						ADD #4,SP
4532	017736	062702	000002		ADD	#2,R2	:	GET ADDRESS OF NEXT TITLE	
4533	017742	005201			INC	R1	:	AND NEXT TEST NUMBER	
4534	017744	020127	000031		CMP	R1,@NTSTS	:	ALL PRINTED ?	
4535	017750	003015			BGT	308	:	IF YES, EXIT	
4536	017752	005303			DEC	R3	:	18 LINES OUTPUT ?	
4537	017754	001350			BNE	208	:	IF NOT, BRANCH	
4538	017756				GMANID	RDY,RFLG,A,377,0,1,YES	:	ELSE WAIT FOR OPERATOR TO READ	
	017756	104443							TRAP C\$GMAN
	017760	000406							BR 100018
	017762	020462							.WORD RFLG
	017764	000152							.WORD T\$CODE
	017766	020612							.WORD RDY
	017770	000377							.WORD 377
	017772	000000							.WORD T\$LOLIM
	017774	000001							.WORD T\$HILIM
	017776								100018:
4539	017776	004737	011542		JSR	PC,CRLF	:	PRINT A LINE FEED	
4540	020002	000733			BR	108	:	AND THEN CONTINUE	
4541									
4542	020004	000137	020444	308:	JMP	PREX	:	EXIT	
4543									
4544	020010	005037	020450		CON:	CLR STFLG	:	ASSUME DIAGNOSTIC IS NOT STARTED	
4545	020014	005037	020452			CLR GPFLG	:	FLAG NO GPHARDS YET EXECUTED	
4546	020020	005737	003774			TST GPADD	:	ARE ANY PARAMETER ADDRESSES SET UP ?	
4547	020024	001402				BFG 108	:	IF NOT, BRANCH	
4548	020026	005237	020450			INC STFLG	:	ELSE FLAG DIAGNOSTIC IS STARTED	
4549									
4550	020032	005737	002012	108:	TST	L\$UNIT	:	ANY UNITS SET UP ?	
4551	020036	001404				BEQ 208	:	IF NOT, BRANCH	
4552	020040	023727	002012	000020		CMP L\$UNIT,#16.	:	TOO MANY UNITS SET UP ?	
4553	020046	003403				BLE 308	:	IF NOT, BRANCH	
4554	020050	012737	000020	002012	208:	MOV #16.,L\$UNIT	:	SET UP 16 UNITS	
4555									
4556	020056	013746	002074	308:	MOV	L\$LUN,(SP)	:	SAVE THE UNIT NUMBER BEING TESTED	
4557	020062	005037	002074			CLR L\$LUN	:	START WITH UNIT 0	
4558									
4559	020066	013701	003774			MOV GPADD,R1	:	GET FIRST PARAM. ADDRESS	
4560	020072	005711				TST (R1)	:	ANYTHING IN IT	
4561	020074	001003				BNE 408	:	IF YES, BRANCH	
4562	020076	012737	171000	012514		MOV #171000,STADD	:	ELSE START FOR FIRST IAV IDV ADDR.	
4563									
4564	020104	013701	002074	408:	MOV	L\$ILUN,R1	:	FORM OFFSET FOR UNIT TABLES	

REPORT CODING SECTION

```

4565 020110 006301          ASL      R1              ;
4566 020112 005761 003774  TST      GPADD(R1)       ; PARAMETER ADDRESS SET UP ?
4567 020116 001010          BNE      50$             ; IF YES, BRANCH
4568 020120          GPHARD  L$LUN,GPADD(R1) ; ELSE, GET P TABLE ADDRESS
       020120 013700 002074          MOV      L$LUN,RO
       020124 104442          TRAP     C$GPHRD
       020126 010061 003774          MOV      RO,GPADD(R1)
4569 020132          BNCOMPLETE ASKADD ; IF DESELECTED, REQUEST OPERATOR ADD
       020132 103040          BCC      ASKADD
4570 020134 005237 020452  INC      GPFLG          ; FLAG THAT GPHARD HAS BEEN USED
4571
4572 020140 005771 003774  50$:  TST      @GPADD(R1)    ; MODE ADDRESS OF UNIT = 0 ?
4573 020144 001002          BNE      60$             ; IF NOT, BRANCH
4574 020146 004737 012214  55$:  JSR      PC,CONFIG  ; DO AUTO CONFIGURATION
4575
4576 020152 005237 002074  60$:  INC      L$LUN        ; NEXT UNIT
4577 020156 023737 002074 002012  CMP     L$LUN,L$UNIT    ; ALL DONE ?
4578 020164 002747          BLT     40$             ; IF NOT, DO THE NEXT
4579 020166 012637 002074  MOV     (SP)+,L$LUN    ; RESTORE THE UNIT NUMBER
4580
4581 020172 004737 012600  70$:  JSR      PC,CONPRI  ; PRINT THE CONFIGURATION
4582
4583 020176 005737 020450  TST     STFLG          ; WAS DIAGNOSTIC STARTED ?
4584 020202 001520          BEQ     PREX           ; IF NOT, EXIT
4585 020204 005737 020452  TST     GPFLG          ; HAVE WE USED ANY GPHARDS ?
4586 020210 001515          BEQ     PREX           ; IF NOT, EXIT
4587 020212          80$:  PRINTF  @PR7         ; ELSE PRINT "USE STA OR RES"
       020212 012746 022234          MOV      @PR7,-(SP)
       020216 012746 000001          MOV      @1,-(SP)
       020222 010600          MOV      SP,RO
       020224 104417          TRAP     C$PNTF
       020226 062706 000004          ADD     @4,SP
4588 020232 000504          BR      PREX          ; AND EXIT
4589
4590 020234          ASKADD: PRINTF  @PR6         ; ASK OPERATOR TO ADD UNITS
       020234 012746 022133          MOV      @PR6,-(SP)
       020240 012746 000001          MOV      @1,-(SP)
       020244 010600          MOV      SP,RO
       020246 104417          TRAP     C$PNTF
       020250 062706 000004          ADD     @4,SP
4591 020254 000137 020444  JMP     PREX          ; AND EXIT
4592
4593 020260          STAT:  PRINTF  @PR3         ; PRINT STATISTICS HEADER
       020260 012746 021715          MOV      @PR3,-(SP)
       020264 012746 000001          MOV      @1,-(SP)
       020270 010600          MOV      SP,RO
       020272 104417          TRAP     C$PNTF
       020274 062706 000004          ADD     @4,SP
4594 020300          PRINTF  @PR3A        ;
       020300 012746 022022          MOV      @PR3A,-(SP)
       020304 012746 000001          MOV      @1,-(SP)
       020310 010600          MOV      SP,RO
       020312 104417          TRAP     C$PNTF
       020314 062706 000004          ADD     @4,SP
4595
4596 020320 005001          CLR     R1              ; START WITH FIRST UNIT
4597

```

REPORT CODING SECTION

```

4598 020322 020137 002012      20$:  CMP      R1,L$UNIT      ; ALL UNITS REPORTED ?
4599 020326 001444              BEQ      60$              ; IF YES, EXIT
4600 020330 010104              MOV      R1,R4           ; FORM OFFSET TO ERROR COUNT
4601 020332 006304              ASL      R4              ;
4602 020334 016405 003734      MOV      ECNT(R4),R5     ; GET UNIT'S ERROR COUNT
4603 020340 005705              TST      R5              ; IS IT NEGATIVE ?
4604 020342 100423              BMI      40$            ; IF YES, REPORT UNTESTED
4605
4606 020344 012703 022334      MOV      @NO,R3          ; ASSUME UNIT IS NOT DROPPED
4607 020350 105761 004034      TSTB    DROPE(R1)       ; CHECK IF IT IS
4608 020354 001402              BEQ      30$            ; IF IT IS NOT, BRANCH
4609 020356 012703 022330      MOV      @YES,R3         ; OTHERWISE PRINT YES
4610 020362              30$:  PRINTF   @PR5,R1,R5,R3 ; ELSE PRINT STATISTICS
                                MOV      R3,-(SP)
                                MOV      R5,(SP)
                                MOV      R1,(SP)
                                MOV      @PR5,(SP)
                                MOV      @4,(SP)
                                MOV      SP,R0
                                TRAP    C$PNTF
                                ADD     @12,SP
4611 020410 000411              BR       50$            ; AND LOOK FOR MORE UNITS
4612
4613 020412              40$:  PRINTF   @PR4,R1     ; PRINT 'UNTESTED'
                                MOV      R1,-(SP)
                                MOV      @PR4,-(SP)
                                MOV      @2,(SP)
                                MOV      SP,R0
                                TRAP    C$PNTF
                                ADD     @6,SP
                                020412 010146
                                020414 012746 022061
                                020420 012746 000002
                                020424 010600
                                020426 104417
                                020430 062706 000006
4614
4615 020434 005201              50$:  INC      R1          ; PREPARE FOR NEXT UNIT
4616 020436 000731              BR       20$            ; IF NOT, REPORT THE NEXT
4617
4618 020440 004737 011542      60$:  JSR      PC,CRLF    ; PRINT 4 LINE FEED
4619
4620 020444              PREX:  EXIT      RPT
                                020444 000167
                                020446 001670
                                .WORD   J$JMP
                                .WORD   L10022 2 .
4621
4622 020450 000000              STFLG: .WORD    0        ; SET IF DIAGNOSTIC HAS BEEN STARTED
4623 020452 000000              GPFLG: .WORD    0        ; SET IF ANY GPHARDS ARE EXECUTED
4624 020454 110 040 040 040 CHAR:  .ASCIZ  /H /      ; STORE FOR OPERATOR INPUT
                                020457 040 040 000
4625 020462 000000              RFLG:  .WORD    0        ; FLAG FOR TYPE RETURN FOR MORE TITLES
4626
4650
4651 020464              TADS:  TITLES          ; LIST OF TEST TITLE ADDRESSES
                                020464 027116
                                020466 027562
                                020470 030626
                                020472 031760
                                020474 033204
                                020476 034524
                                020500 035424
                                020502 036570
                                .WORD   TSHD1
                                .WORD   TSHD2
                                .WORD   TSHD3
                                .WORD   TSHD4
                                .WORD   TSHD5
                                .WORD   TSHD6
                                .WORD   TSHD7
                                .WORD   TSHD8

```

REPORT CODING SECTION

```

020504 037616 .WORD TSHD9
020506 040676 .WORD TSHD10
020510 041400 .WORD TSHD11
020512 042572 .WORD TSHD12
020514 043450 .WORD TSHD13
020516 045612 .WORD TSHD14
020520 051006 .WORD TSHD15
020522 054530 .WORD TSHD16
020524 057454 .WORD TSHD17
020526 061424 .WORD TSHD18
020530 062450 .WORD TSHD19
020532 063746 .WORD TSHD20
020534 067340 .WORD TSHD21
020536 071566 .WORD TSHD22
020540 075120 .WORD TSHD23
020542 100100 .WORD TSHD24
020544 102236 .WORD TSHD25

4655
4656 .NLIST BEX
4657
4658 020546 045 116 045 TT: .ASCII /%N%ATEST TITLES./
4659 020566 045 116 045 .ASCIZ /%N%A----- - ---%N2/
4660
4661 020612 124 131 120 RDY: .ASCIZ /TYPE "RETURN" FOR MORE TITLES/
4662
4663 020650 045 104 063 TNUM: .ASCIZ /%D3/
4664
4665 020654 045 116 045 PRA: .ASCIZ /%N%ATO USE THE PRINT COMMAND. PLEASE CLEAR THE "UAM" FLAG/
4666
4667 020746 124 131 120 PR1: .ASCIZ /TYPE T,R,C,S OR HELP/
4668
4669 020773 045 116 045 PR2: .ASCII /%N%ATHE FOLLOWING COMMANDS ARE ACCEPTED : /
4670 021045 045 116 045 PR2: .ASCIZ /%N2%AT - PRINT TEST TITLES/
4671 021100 045 116 045 PR2A: .ASCIZ /%N%AC - PRINT CONFIGURATION TABLE CURRENTLY USED BY DIAGNOSTIC/
4672 021177 045 116 045 PR2B: .ASCIZ /%N%AR - PRINT HOW TO REESTABLISH THE SYSTEM CONFIGURATION/
4673 021271 045 116 045 PR2C: .ASCIZ /%N%AS - PRINT STATISTICS TABLE%N/
4674
4675 021332 045 116 045 PR2D: .ASCIZ /%N%ATO REESTABLISH THE SYSTEM CONFIGURATION. ANSWER THE/
4676 021422 045 116 045 PR2E: .ASCIZ /%N%AHARDWARE QUESTION TYPING "0" AS THE MODE ADDRESS FOR 16 UNITS./
4677 021525 045 116 045 PR2F: .ASCIZ /%N%N%AEQ. MODE REGISTER ADDRESS (0) 0 ? 0...../
4678 021621 045 116 045 PR2G: .ASCIZ /%N%A ...../
4679 021715 045 116 062 PR3: .ASCII \%N2%AIDV/IAV-11 MODULE STATISTICS.\
4680 021757 045 116 045 PR3: .ASCIZ /%N%A-----/
4681 022022 045 116 062 PR3A: .ASCIZ /%N2%AUNIT ERRORS DROPPED%N/
4682
4683 022061 045 116 045 PR4: .ASCIZ /%N%D3%A UNTESTED NO/
4684
4685 022112 045 116 045 PR5: .ASCIZ /%N%D3%S5%D3%S7%T/
4686
4687 022133 045 116 045 PR6: .ASCII /%N%AUNIT DROPPED OR DESELECTED PLEASE TYPE "ADD" /
4688 022215 040 101 116 PR6: .ASCIZ / AND TRY AGAIN/
4689
4690 022234 045 116 045 PR7: .ASCIZ /%N%APLEASE TYPE "START" OR "RESTART" TO CONTINUE TESTING.%N
4691
4692 022330 131 105 123 YES: .ASCIZ /YES/
4693 022334 116 117 000 NO: .ASCIZ /NO/
4694

```

M9

REPORT CODING SECTION

4695
4696
4697
4698 022340
022340
022340 104425

.LIST BEX
.EVEN
ENDRPT

L10022: TRAP CSRPT

PROTECTION TABLE

```

4700          .SBTTL  PROTECTION TABLE
4701
4702          ;**
4703          ; THIS TABLE IS USED BY THE RUNTIME SERVICES
4704          ; TO PROTECT THE LOAD MEDIA.
4705          ;
4706
4707          022342          BGNPROT
          022342
4708
4709          022342          000000          L$PROT::
4710          022344          177777          0          ;OFFSET INTO P-TABLE FOR MODE ADDRESS
4711          022346          177777          -1          ;OFFSET INTO P-TABLE FOR MASSBUS ADDRESS
4712
4713          022350          -1          ;OFFSET INTO P TABLE FOR DRIVE NUMBER
4714          ENDPROT

```

INITIALIZE SECTION

```

4729          .SBTTL INITIALIZE SECTION
4730
4731          ;;;
4732          ; THE INITIALIZE SECTION CONTAINS THE CODING THAT IS PERFORMED
4733          ; AT THE BEGINNING OF EACH PASS.
4734          ;
4735
4736 022350          BGNINIT
4737          022350          L$INIT::
4761
4762 022350          START: READEF @EF.START          ; IS THIS A NEW START ?
4763          022350 012700 000040          MOV @EF.START,R0
4764          022354 104447          TRAP C$REFG
4765          022356          BNCOMPLETE RESTRT          ; IF NOT, BRANCH
4766          022356 103126          BCC RESTRT
4767          022360          SETVEC @14,@106736,@340; *** JUST FOR DEBUG PROGRAM ***
4768          022360 012746 000340          MOV @340,(SP)
4769          022364 012746 106736          MOV @106736,(SP)
4770          022370 012746 000014          MOV @14,(SP)
4771          022374 012746 000003          MOV @3,(SP)
4772          022400 104437          TRAP C$SVEC
4773          022402 062706 000010          ADD @10,SP
4774          022406          SETVEC @100,@CLINT,@340; IGNORE FURTHER INTERRUPTS TO VECTOR 100
4775          022406 012746 000340          MOV @340,(SP)
4776          022412 012746 017316          MOV @CLINT,(SP)
4777          022416 012746 000100          MOV @100,-(SP)
4778          022422 012746 000003          MOV @3,-(SP)
4779          022426 104437          TRAP C$SVEC
4780          022430 062706 000010          ADD @10,SP
4781          022434 005737 002232          TST MANTST          ; DOING MANUFACTURING TESTS ?
4782          022440 001024          BNE 10$          ; IF YES, BRANCH
4783          022442          PRINTF @WARN          ; PRINT DISCONNECT EXTERNAL EQUIPMENT
4784          022442 012746 023652          MOV @WARN,(SP)
4785          022446 012746 000001          MOV @1,(SP)
4786          022452 010600          MOV SP,R0
4787          022454 104417          TRAP C$PNTF
4788          022456 062706 000004          ADD @4,SP
4789          022462          PRINTF @WARN1          ;
4790          022462 012746 023756          MOV @WARN1,(SP)
4791          022466 012746 000001          MOV @1,(SP)
4792          022472 010600          MOV SP,R0
4793          022474 104417          TRAP C$PNTF
4794          022476 062706 000004          ADD @4,SP
4795          022502 004737 011570          JSR PC,WRDY          ; WAIT FOR OPERATOR TO TYPE RETURN
4796          022506 004737 011542          JSR PC,CRLF          ; PRINT A LINE FEED
4797          022512          10$: BRESET          ; RESET THE SYSTEM
4798          022512 104433          TRAP C$RESET
4799          022514 004737 024222          JSR PC,SETCLK          ; SET UP CLOCK COUNTER
4800
4801          022520          TST L$UNIT          ; ANY UNITS CONFIGURED ?
4802          022524 001404          BEQ 20$          ; IF NOT, BRANCH
4803          022526 023727 002012 000020          CMP L$UNIT,@16.          ; TOO MANY UNITS SET UP ?
4804          022534 003403          BLE 30$          ; IF NOT, BRANCH
4805          022536 012737 000020 002012 20$: MOV @16.,L$UNIT          ; ELSE, SET UP 16 UNITS
4806
4807          022544 005037 023650          30$: CLR ACFG          ; CLEAR AUTO CONFIGURATION FLAG
    
```


INITIALIZE SECTION

```

4782 022550 012737 171000 012514      MOV      #171000,STADD      ; START ADDRESS FOR SEARCH
4783 022556 012700 004070              MOV      #LDFLG,RO        ; FLAG THAT LOOP CONFIGURATION IS NOT CHECKED
4784 022562 012701 000020              MOV      #16.,R1          ; FOR POSSIBLE 16 UNITS
4785 022566 005020          50$:      CLR      (RO).            ; CLEAR THE FLAG
4786 022570 005301              DEC      R1                ; ALL DONE ?
4787 022572 001375              BNE     50$                ; IF NOT, DO THE NEXT
4788
4789
4790 022574 012700 004034              MOV      #DROPPED,RO      ; GET UNIT DROPPED TABLE ADDRESS
4791 022600 012701 000020              MOV      #16.,R1          ; THERE ARE 16 UNITS
4792 022604 105020          55$:      CLR      (RO).            ; CLEAR ALL 16 DROPPED UNIT FLAGS
4793 022606 005301              DEC      R1                ; ...
4794 022610 001375              BNE     55$                ; ...
4795 022612 012700 003734              MOV      #ECNT,RO         ; GET ERROR COUNT FOR UNIT 0
4796 022616 012701 000020              MOV      #16.,R1          ; THERE ARE 16 UNIT'S
4797 022622 012720 100000          60$:      MOV      #100000,(RO).    ; INIT THE ERROR COUNT
4798 022626 005301              DEC      R1                ; ALL CLEARED ?
4799 022630 001374              BNE     60$                ; IF NOT, CLEAR NEXT COUNT
4800 022632 000404              BR       STARES            ; ELSE, START TESTING WITH FIRST UNIT
4801
4802 022634          RESTRT: REDEF  #EF.RESTART      ; IS THIS A RESTART ?
      022634 012700 000037              MOV      #EF.RESTART,RO   ;
      022640 104447              TRAP     C$REFG           ;
4803 022642          BNCOMPLETE NEWST      ; IF NOT, BRANCH
      022642 103005              BCC     NEWST             ;
4804
4805 022644 005037 004054          STARES: CLR      TSTFLG      ; SHOW NO TESTS HAVE BEEN RUN THIS PASS
4806 022650 005037 004056          CLR      TSUFLG          ; OR FOR THIS UNIT
4807 022654 000536          BR       INIUUT         ; START TESTING WITH FIRST UNIT
4808
4809 022656          NEWST: REDEF  #EF.NEW          ; IS THIS A NEW PASS ?
      022656 012700 000035              MOV      #EF.NEW,RO       ;
      022662 104447              TRAP     C$REFG           ;
4810 022664          BNCOMPLETE CONT      ; IF NOT, BRANCH
      022664 103030              BCC     CONT             ;
4811 022666 005737 004054          TST      TSTFLG          ; WERE ANY TESTS SELECTED LAST TIME ?
4812 022672 001011          BNE     10$              ; IF YES, BRANCH
4813 022674          PRINTF #NTEST          ; IF NOT, TELL THE USER
      022674 012746 024056              MOV      #NTEST,(SP)     ;
      022700 012746 000001              MOV      #1,(SP)        ;
      022704 010600              MOV      SP,RO           ;
      022706 104417              TRAP     C$PRINTF        ;
      022710 062706 000004              ADD      #4,SP           ;
4814 022714          DOCLN                  ; AND RETURN TO THE SUPERVISOR
      022714 104444              TRAP     C$DOCLN        ;
4815
4816 022716 005037 004054          10$:   CLR      TSTFLG      ; INIT TEST FLAG AGAIN
4817 022722 005737 023650          TST      ACFLG           ; JUST DONE A RUN OF AUTO CONFIGURATION ?
4818 022726 001511          BEQ     INIUUT          ; IF NOT, TEST FIRST UNIT
4819 022730 005037 023650          CLR      ACFLG           ; ELSE, FLAG THAT THE RUN IS FINISHED
4820 022734 004737 012600          JSR     PC,CONPRI        ; PRINT THE CONFIGURATION
4821 022740 004737 011570          JSR     PC,WRDY          ; WAIT FOR OPERATOR TO TYPE RETURN
4822 022744 000502          BR       INIUUT         ; THEN TEST THE FIRST UNIT
4823
4824 022746          CONT: REDEF  #EF.CONTINUE      ; IS THIS A CONTINUE ?
      022746 012700 000036              MOV      #EF.CONTINUE,RO ;
      022752 104447              TRAP     C$REFG           ;

```

INITIALIZE SECTION

```

4825 022754          BNCOMPLETE PWRFL          ; IF NOT, BRANCH
      022754 103025
4826 022756          SETVEC  #4,#NXM,#PRIORITY ; IGNORE NXM TRAPS
      022756 012746 000340
      022762 012746 017266
      022766 012746 000004
      022772 012746 000003
      022776 104437
      023000 062706 000010
4827 023004 052777 000100 160666      BIS  #100,#MOD          ; ELSE, LIGHT OUT LED
4828 023012          CLRVEC  #4          ; RESTORE THE SUPERVISOR NXM VECTOR
      023012 012700 000004
      023016 104436
      023020 004737 025146
4829 023020          JSR  PC,LOPCHK          ; CHECK THE LOOP CONFIGURATION
4830 023024          JMP  END          ; AND CONTINUE
4831
4832 023030          PWRFL: READEF #EF,PWR          ; IS THIS A POWER FAIL
      023030 012700 000034
      023034 104447
4833 023036          BNCOMPLETE NXTUUT          ; IF NOT, MUST BE NEXT UNIT
      023036 103023
4834 023040          SETVEC  #4,#NXM,#PRIORITY ; IGNORE NXM TRAPS
      023040 012746 000340
      023044 012746 017266
      023050 012746 000004
      023054 012746 000003
      023060 104437
      023062 062706 000010
4835 023066 052777 000100 160604      BIS  #100,#MOD          ; ELSE, LIGHT OUT LED
4836 023074          CLRVEC  #4          ; RESTORE THE SUPERVISOR NXM VECTOR
      023074 012700 000004
      023100 104436
      023102 000137 023550
4837 023102          JMP  PSEUL1          ; AND CONTINUE
4838
4839 023106          NXTUUT: TST  TSUFLG          ; WERE ANY TESTS RUN ON THE LAST UNIT ?
4840 023112          BNE  10$          ; IF YES, BRANCH
4841 023114          PRINTF #NTEST1,L$LUN          ; ELSE PRINT A WARNING
      023114 013746 002074
      023120 012746 024152
      023124 012746 000002
      023130 010600
      023132 104417
      023134 062706 000006
4842 023140          JSR  PC,WRDY          ; LET THE OPERATOR READ IT
4843 023144          CLR  TSUFLG          ; SHOW NO TESTS FOR NEXT UNIT
4844 023150          BR   NEXT          ; AND TEST THE NEXT UNIT
4845
4846 023152          INIUUT: MOV  #1,L$LUN          ; INITIALIZE LOGICAL UNIT NUMBER.
4847 023160          NEXT: INC  L$LUN          ; NEXT LOGICAL UNIT TO BE TESTED ?
4848 023164          CMP  L$LUN,L$UNIT          ; ALL UNITS TRIED ?
4849 023172          BGE  INIUUT          ; IF YES, START AGAIN
4850
4851 023174          MOV  L$LUN,R5          ; SAVE UNIT NUMBER
4852 023200          ASL  R5          ; FORM OFFSET
4853
4854 023202          GPHARD L$LUN,R1          ; GET PARAMETER TABLE ADDRESS IN R1
      023202 013700 002074
      MOV  L$LUN,R0

```

INITIALIZE SECTION

```

023206 104442
023210 010001
4855 023212          BNCOMPLETE NEXT          ; IF DROPPED, GET THE NEXT
023212 103362
4856 023214 010165 003774      MOV      R1,GPADD(R5)      ; ELSE SAVE THE ADDRESS
4857 023220 005711          TST      (R1)              ; MODE ADDRESS = 0 ?
4858 023222 001024          BNE      20$              ; IF NOT, BRANCH
4859 023224 004737 012214      JSR      PC,CONFIG        ; ELSE DO AUTO CONFIGURATION FOR THIS UNIT
4860 023230 012737 000001 023650  MOV      #1,ACFLG        ; AND FLAG THAT WE ARE DOING IT
4861 023236 103014          BCC      10$              ; BRANCH IF ANOTHER UNIT FOUND
4862 023240 005737 002012      TST      L$UNIT          ; ARE THERE ANY UNITS TO TEST ?
4863 023244 001342          BNE      INIUU*          ; IF YES, START AGAIN WITH THE FIRST UNIT
4864 023246          PRINTF  #NODEV        ; ELSE PRINT "NO UNITS FOUND"
023246 012746 007250          MOV      #NODEV, (SP)
023252 012746 000001          MOV      #1, (SP)
023256 010600          MOV      SP,R0
023260 104417          TRAP    C$PNTF
023262 062706 000004          ADD      #4,SP
4865 023266          DOCLN          ; AND RETURN TO THE SUPERVISOR
023266 104444          TRAP    C$DCLN
4866
4867 023270 016501 003774      10$:    MOV      GPADD(R5),R1    ; GET PARAMETER TABLE ADDRESS IN R1
4868
4869 023274 004737 025146      20$:    JSR      PC,LOPCHK        ; CHECK THE LOOP CONFIGURATION
4870
4871 023300 042765 100000 003734  BIC      #100000,ECNT(R5); FLAG UNIT IS BEING TESTED
4872
4873 023306 011137 003700      MOV      (R1),MOD        ; SAVE NEW MODE REGISTER ADDRESS
4874 023312 011137 003702      MOV      (R1),DAT        ; SAVE NEW DATA REGISTER ADDRESS
4875 023316 062737 000002 003702  ADD      #2,DAT          ;
4876 023324 011137 003704      MOV      (R1),CSA        ; SAVE NEW CSA REGISTER ADDRESS
4877 023330 062737 000004 003704  ADD      #4,CSA          ;
4878 023336 012137 003706      MOV      (R1),CSB        ; SAVE NEW CSB REGISTER ADDRESS
4879 023342 062737 000006 003706  ADD      #6,CSB          ;
4880
4881 023350 012137 003710      MOV      (R1),VEC        ; SAVE NEW VECTOR ADDRESS
4882 023354 012137 003712      MOV      (R1),PRIO       ; SAVE NEW PRIORITY
4883 023360 012137 003714      MOV      (R1),COND       ; SAVE WHETHER OTHER MODULE CONNECTED
4884 023364 012137 003716      MOV      (R1),LOWLVL     ; SAVE LOW LEVEL AND
4885 023370 012137 003720      MOV      (R1),DBOUNC     ; DEBOUNCE ANSWER FOR DIGITAL INPUT LOOPB.
4886 023374 011137 003722      MOV      (R1),OTHMOD     ; SAVE OTHER MODULE MODL ADDRESS
4887 023400 011137 003724      MOV      (R1),OTHDAT     ; AND DATA REGISTER ADDRESS
4888 023404 062737 000002 003724  ADD      #2,OTHDAT       ;
4889 023412 011137 003726      MOV      (R1),OTHCSA     ; AND REGISTER A ADDRESS
4890 023416 062737 000004 003726  ADD      #4,OTHCSA       ;
4891 023424 012137 003730      MOV      (R1),OTHCSB     ; AND REGISTER B ADDRESS
4892 023430 062737 000006 003730  ADD      #6,OTHCSB       ;
4893 023436 011137 003732      MOV      (R1),OTHVEC     ; AND OTHER MODULE VECTOR ADDRESS
4894
4895 023442          SETVEC  #4,#NXM,#PRIO7 ; IGNORE NXM TRAPS
023442 012746 000340          MOV      #PRIO7, -(SP)
023446 012746 017266          MOV      #NXM, -(SP)
023452 012746 000004          MOV      #4, (SP)
023456 012746 000003          MOV      #3, (SP)
023462 104437          TRAP    C$SVEC
023464 062706 000010          ADD      #10,SP
4896 023470 052777 000100 160202  BIS      #100,#MOD        ; SWITCH ON WUT LED

```

INITIALIZE SECTION

```

4897 023476 017701 160176      MOV      @MOD,R1      ; GET MODE REGISTER CONTENTS
4898 023502      CLRVEC   #4          ; RESTORE NXM TRAP CATCHER
      023502 012700 000004      MOV      #4,R0
      023506 104436      TRAP
4899
4900 023510 012702 000020      MOV      #20,R2      ; ASSUME UNIDENTIFIABLE MODULE
4901 023514 020127 140000      CMP      R1,#140000  ; IS ID TOO BIG ?
4902 023520 103013      BHIS    PSEUL1      ; IF YES, BRANCH
4903 023522 012702 000010      MOV      #10,R2     ; ELSE ASSUME ANALOGUE OUTPUT
4904 023526 006301      ASL     R1          ; SHIFT OUT TOP BIT
4905 023530 103407      BCS    PSEUL1      ; IF ID > 177, ID IS ANALOGUE OUTPUT
4906 023532 006202      ASR     R2          ; ELSE ASSUME ANALOGUE INPUT
4907 023534 006301      ASL     R1          ; SHIFT OUT NEXT BIT
4908 023536 103404      BCS    PSEUL1      ; IF ID > 77, ID IS ANALOGUE INPUT
4909 023540 006202      ASR     R2          ; ELSE ASSUME DIGITAL OUTPUT
4910 023542 006301      ASL     R1          ; SHIFT OUT TOP BIT
4911 023544 103401      BCS    PSEUL1      ; IF ID > 37, ID IS DIGITAL OUTPUT
4912 023546 006202      ASR     R2          ; ELSE ID IS DIGITAL INPUT
4913
4914 023550 052702 000400      PSEUL1: BIS      #400,R2      ; FORCE BASIC TESTS TO BE RUN
4915 023554 005737 002232      TST     MANTST      ; MANUFACTURING TESTS SELECTED ?
4916 023560 001003      BNE     40$         ; IF YES, BRANCH
4917 023562 052702 001000      BIS     #1000,R2    ; ELSE FORCE FIELD I/O TESTS
4918 023566 000412      BR      50$         ;
4919 023570 005737 002234      40$:   TST     MANIO      ; MANUFACTURING I/O TESTS SELECTED ?
4920 023574 001407      BEQ     50$         ; IF NOT, BRANCH
4921 023576 052702 004000      BIS     #4000,R2   ; IF YES, SELECT THEM
4922 023602 005737 003714      TST     COND        ; OTHER MODULE CONNECTED ?
4923 023606 001402      BEQ     50$         ; IF NOT, BRANCH
4924 023610 052702 002000      BIS     #2000,R2   ; ELSE SELECT LOOPBACK TESTS
4925 023614 052702 010000      50$:   BIS     #10000,R2 ; ASSUME SPECIFICALLY SELECTED TEST
4926 023620 010237 004132      MOV     R2,CONMSK  ; SAVE TEST CONTROL MASK
4927
4928 023624 005037 004130      CLR     LOTFLA      ; INIT LOOP ON TEST FLAG
4929 023630      RFLAGS  RO         ; GET OPERATOR FLAGS
      023630 104421      TRAP    C$RFLA
4930 023632 032700 000010      BIT     #LOT,RO     ; LOOP ON TEST SELECTED ?
4931 023636 001402      BEQ     END         ; IF NOT, BRANCH
4932 023640 005237 004130      INC     LOTFLA      ; ELSE SET FLAG
4933
4934 023644      END:   EXIT      INIT
      023644 104432      TRAP    C$EXIT
      023646 000352      .WORD  L10024
4935
4936 023650 000000      ACFLG: .WORD  0      ; SET IF AUTO CONFIGURATION IS TO BE DONE
4937
4938      .NLIST  BEX
4939 023652      045    116    045  WARN:  .ASCIZ  /#N#ATHE FOLLOWING TESTS MAY GENERATE SIGNALS ON THE OUTPUT MODULES.
4940 023756      045    116    045  WARN1: .ASCII  /#N#AEXTERNAL EQUIPMENT SHOULD BE DISCONNECTED BEFORE/
4941 024042      040    120    122      .ASCIZ  / PROCEEDING./
4942
4943 024056      045    116    045  NTEST: .ASCIZ  /#N#AND TESTS WERE RUN CHECK ANSWERS TO STARTUP QUESTIONS.
4944 024152      045    116    045  NTEST1: .ASCIZ  /#N#AND TESTS WERE RUN ON UNIT #03#A./
4945      .LIST  BEX
4946      .EVEN
4947
4948 024220      ENDTNIT

```

INITIALIZE SECTION

024220
024220 104411
4949
4961

L10024: TRAP CSINIT

INITIALIZE SECTION

4963
4964
4965
4966
4967
4968
4969
4970
4971
4972
4973
4974
4975
4976
4977
4978
4979
4980
4981
4982
4983
4984
4985
4986
4987
4988
4989
4990
4991
4992
4993
4994
4995
4996
4997
4998
4999
5000
5001
5002
5003
5004
5005
5006
5007
5008
5009
5010
5011
5012
5013
5014
5015
5016
5017
5018
5019

```

:*****
: SUBROUTINES USED DURING INITIALISATION.
:*****
.SBTTL SETCLK ROUTINE TO SET UP DELAY COUNTS

:
:
: **
: FUNCTIONAL DESCRIPTION:
:
: THIS ROUTINE SETS UP 3 DELAY VARIABLES CALLED CNT25M, CNT500, AND
: CNT25. THESE GIVE DELAYS OF APPROXIMATELY 25 MILLISECONDS, 500
: MICROSECONDS OR 25 MICROSECONDS RESPECTIVELY IF USED AS FOLLOWS:-
:
:
:         MOV     CNTXXX,RO
:    18: DEC     RO
:         BNE     18
:
: THE COUNTS ARE DERIVED FROM AN L CLOCK IF THERE IS ONE.
: OTHERWISE, THE OPERATOR IS ASKED TO TYPE 2 CHARACTERS ON THE
: CONSOLE 6 SECONDS APART.
:
: INPUTS:
:
:     NONE.
:
: IMPLICIT INPUTS:
:
:     IF CNT25M IS NOT ZERO (ALREADY SET UP), THE ROUTINE DOES NOTHING.
:
: OUTPUTS:
:
:     CONSOLE MESSAGE IF THERE IS NO L CLOCK ON THE SYSTEM.
:
: IMPLICIT OUTPUTS:
:
:     CNT25M CONTAINS THE COUNT REQUIRED FOR 25 MILLISECONDS.
:     CNT500 CONTAINS THE COUNT REQUIRED FOR 500 MICROSECONDS.
:     CNT25 CONTAINS THE COUNT REQUIRED FOR 25 MICROSECONDS.
:
: SUBORDINATE ROUTINES USED:
:
:     CRLF     LINE FEED PRINT ROUTINE.
:     CLINT    DUMMY CLOCK INTERRUPT SERVICE ROUTINE
:
: FUNCTIONAL SIDE EFFECTS:
:
:     R0 TO R5 ARE CORRUPTED.
:
:     IF A LINE TIME CLOCK IS FOUND, VECTOR 100 IS SET UP SO THAT
:     INTERRUPTS TO IT ARE IGNORED. THE SETVEC MACRO CAN BE USED TO
:     SET UP THE VECTOR FOR A DEVICE INTERRUPT.
:
: CALLING SEQUENCE:
:
:     JSR     PC,SETCLK
:
:

```

SETCLK ROUTINE TO SET UP DELAY COUNTS

```

5020
5021 024222 005737 011534 SETCLK: TST CNT25M ; COUNTERS ALREADY SET UP?
5022 024226 001402 BEQ 10$ ; IF NOT, BRANCH
5023 024230 000137 025072 JMP SETEX ; IF YES, EXIT
5024
5025 024234 005004 10$: CLR R4 ; CLEAR A COUNTER
5026 024236 GETPRI R2 ; SAVE CURRENT PRIORITY IN R2
024236 104440 TRAP C$GPRI
024240 010002 MOV RO,R2
5027 024242 005037 025074 CLR CLKFLG ; ASSUME THERE IS NO CLOCK WITH A CSR
5028 024246 CLOCK L,R1 ; GET ADDRESS OF CLOCK TABLE
024246 012700 000114 MOV @L,RO
024252 104462 TRAP C$CLK
024254 010001 MOV RO,R1
5029 024256 SETVEC @4,@NXM,@340 ; SET UP CLOCK CSA TRAP
024256 012746 000340 MOV @340,(SP)
024262 012746 017266 MOV @NXM,(SP)
024266 012746 000004 MOV @4,(SP)
024272 012746 000003 MOV @3,(SP)
024276 104437 TRAP C$SVEC
024300 062706 000010 ADD @10,SP
5030 024304 005037 004060 CLR NXMFLG ; CLEAR NXM FLAG
5031 024310 005771 000000 TST @R1 ; ACCESS THE CLOCK ADDRESS
5032 024314 005737 004060 TST NXMFLG ; DOES THE CLOCK HAVE A REGISTER ?
5033 024320 001005 BNE LCLOCK ; IF NOT, BRANCH
5034 024322 005237 025074 INC CLKFLG ; ELSE FLAG THERE IS A CLOCK CSR
5035 024326 012771 000100 000000 MOV @100,@R1 ; AND SET IT UP TO INTERRUPT
5036
5037 ; USE THE L CLOCK
5038 ;
5039 024334 LCLOCK: CLRVEC @4 ; SET VECTOR 4 TO UNUSED POOL
024334 012700 000004 MOV @4,RO
024340 104436 TRAP C$CVEC
5040 024342 012703 000006 MOV @6,R3 ; IF 50 HZ, 100 MS = 5 INTERRUPTS
5041 024346 026127 000006 000062 CMP 6(R1),@50. ; 50 HZ CORRECT?
5042 024354 001401 BEQ 10$ ; IF YES, BRANCH
5043 024356 005203 INC R3 ; ELSE ALLOW 6 INTERRUPTS
5044
5045 024360 010305 10$: MOV R3,R5 ; SAVE NUMBER OF INTERRUPTS
5046 024362 SETVEC @100,@KLINT,@340 ; SET UP THE CLOCK VECTOR
024362 012746 000340 MOV @340,-(SP)
024366 012746 024450 MOV @KLINT,-(SP)
024372 012746 000100 MOV @100,(SP)
024376 012746 000003 MOV @3,-(SP)
024402 104437 TRAP C$SVEC
024404 062706 000010 ADD @10,SP
5047
5048 024410 SETPRI @0 ; TO WAIT FOR 1ST INTERRUPT
024410 012700 000000 ; AND DROP THE PRIORITY
024414 104441 MOV @0,RO
5049 024416 005000 TRAP C$SPRI
5050 024420 020305 20$: CLR RO ; CLEAR RO AND THE CARRY BIT
5051 024422 001004 CMP R3,R5 ; HAS COUNT BEEN DROPPED ?
5052 024424 005300 BNE 30$ ; IF YES, START THE COUNTERS
5053 024426 001374 DEC RO ; WAITED TOO LONG ?
5054 024430 000137 024542 BNE 20$ ; IF NOT, WAIT LONGER
5055 JMP USCLOK ; IF YES, ASSUME NO CLOCK

```

SETCLK ROUTINE TO SET UP DELAY COUNTS

```

5056 024434 005005      30$: CLR R5 ; CLEAR THE HIGH COUNTER
5057 024436 005204      40$: INC R4 ; COUNT THE DELAY FOR 5 OR 6 INTERRUPTS
5058 024440 001376      BNE 40$ ;
5059 024442 105205      INCB R5 ;
5060 024444 001374      BNE 40$ ;
5061 024446 000435      BR USCLOK ; IF TOO LONG, ASSUME NO CLOCK
5062
5063 024450 005303      KLINT: DEC R3 ; 5 OR 6 INTERRUPTS?
5064 024452 001401      BEQ 40$ ; IF YES, TIDY UP
5065 024454 000002      RTI ; ELSE KEEP COUNTING
5066
5067 024456      40$: SETPRI R2 ; RESTORE THE PRIORITY
      024456 010200
      024460 104441
5068 024462      SETVEC #100,#CLINT,#340; IGNORE FURTHER INTERRUPTS TO VECTOR 100
      024462 012746 000340
      024466 012746 017316
      024472 012746 000100
      024476 012746 000003
      024502 104437
      024504 062706 000010
5069 024510 022626      CMP (SP), (SP) ; TIDY UP THE STACK
5070 024512 005737 025074 TST CLKFLG ; CAN WE DISABLE A CLOCK ?
5071 024516 001402      BEQ 50$ ; IF NOT, BRANCH
5072 024520 005071 000000 CLR @R1 ; ELSE, DISABLE CLOCK INTERRUPTS
5073
5074 024524 000241      50$: CLC ; DIVIDE THE 100 MILLISECOND COUNTERS
5075 024526 006005      ROR R5 ; BY 4 TO GIVE 25 MILLISECONDS
5076 024530 006004      ROR R4 ;
5077 024532 000241      CLC ;
5078 024534 006005      ROR R5 ;
5079 024536 006004      ROR R4 ;
5080 024540 000524      BR SAVCNT ; AND SAVE THE COUNT
5081
5082 ; COME HERE IF NOT ENOUGH CLOCK INTERRUPTS OCCUR BEFORE THE COUNTERS OVERFLOW
5083
5084 024542      USCLOK: SETPRI R2 ; RESTORE THE PRIORITY
      024542 010200
      024544 104441
5085 024546      SETVEC #100,#CLINT,#340; IGNORE FURTHER INTERRUPTS TO VECTOR 100
      024546 012746 000340
      024552 012746 017316
      024556 012746 000100
      024562 012746 000003
      024566 104437
      024570 062706 000010
5086 024574 005737 025074 TST CLKFLG ; CAN WE DISABLE A CLOCK ?
5087 024600 001402      BEQ NOCLOK ; IF NOT, BRANCH
5088 024602 005071 000000 CLR @R1 ; ELSE DISABLE CLOCK INTERRUPTS
5089
5090 ; USE THE CONSOLE FOR TIMING
5091
5092 177560      TKS=177560 ; KEYBOARD STATUS REGISTER
5093 177562      TKB=177562 ; KEYBOARD DATA BUFFER
5094 177564      TPS=177564 ; PRINTER STATUS REGISTER
5095 177566      TPB=177566 ; PRINTER DATA BUFFER
5096

```


SETCLK ROUTINE TO SET UP DELAY COUNTS

```

5097 024606          NOCLOCK: SETVEC #60,#TTINT,#340 ; SET UP INTERRUPT VECTOR
      024606 012746 000340          MOV #340,(SP)
      024612 012746 024740          MOV #TTINT,-(SP)
      024616 012746 000060          MOV #60,-(SP)
      024622 012746 000003          MOV #3,(SP)
      024626 104437          TRAP C$SVEC
      024630 062706 000010          ADD #10,SP
5098 024634          PRINTF #TIMMSG ; 'TYPE 2 CHARACTERS 6 SECONDS APART'
      024634 012746 025076          MOV #TIMMSG,-(SP)
      024640 012746 000001          MOV #1,(SP)
      024644 010600          MOV SP,R0
      024646 104417          TRAP C$PNTF
      024650 062706 000004          ADD #4,SP
5099
5100 024654 105737 177560          10$: TSTB TKS ; IS FIRST CHARACTER READY?
5101 024660 100375          BPL 10$ ; IF NOT, WAIT
5102 024662 013700 . 562          MOV TKB,R0 ; ELSE GET THE CHARACTER
5103 024666 042700 177600          BIC #177600,R0 ; DISCARD UNWANTED BITS
5104 024672 020027 000003          CMP R0,#3 ; IF 'C, RETURN TO SUPERVISOR
5105 024676 001001          BNE 20$ ;
5106 024700          DOCLN ;
      TRAP C$DCLN
5107
5108 024702 013737 177562 177566 20$: MOV TKB,TPB ; NOW ECHO THE CHARACTER
5109 024710          SETPRI #0 ; DROP THE PRIORITY
      MOV #0,R0
      TRAP C$SPRI
5110 024716 012737 000100 177560          MOV #100,TKS ; ALLOW INTERRUPTS
5111
5112 024724 012705 000360          30$: MOV #240.,R5 ; SET UP MODULO 240 COUNTER
5113 024730 005305          40$: DEC R5 ; START COUNTING
5114 024732 001376          BNE 40$ ; R5 IS MODULO 240 COUNTER
5115 024734 005204          INC R4 ; UPDATE THE COUNTER
5116 024736 000772          BR 30$ ; 6 SECONDS/240 = 25 MILLISECONDS
5117
5118 024740          TTINT: SETPRI R2 ; RESTORE THE PRIORITY
      MOV R2,R0
      TRAP C$SPRI
5119 024744          CLRVEC #60 ; AND THE KEYBOARD VECTOR
      MOV #60,R0
      TRAP C$CVEC
5120 024752 022626          CMP (SP)+,(SP)+ ; TIDY UP THE STACK
5121 024754 005037 177560          CLR TKS ; DISABLE INTERRUPTS
5122 024760 013700 177562          MOV TKB,R0 ; ELSE GET THE CHARACTER
5123 024764 042700 177600          BIC #177600,R0 ; DISCARD UNWANTED BITS
5124 024770 020027 000003          CMP R0,#3 ; IF 'C, RETURN TO SUPERVISOR
5125 024774 001001          BNE 10$ ;
5126 024776          DOCLN ;
      TRAP C$DCLN
5127 025000 013737 177562 177566 10$: MOV TKB,TPB ; ELSE, ECHO THE CHARACTER
5128 025006 004737 011542          JSR PC,CRLF ; AND PRINT A LINE FEED
5129
5130 ; SAVE THE COUNTERS
5131
5132 025012 010437 011534          SAVCNT: MOV R4,CNT25M ; SAVE THE 25 MILLISECONDS COUNTER
5133 025016 012700 000062          MOV #50.,R0 ; NOW DIVIDE BY 50
5134 025022 062704 000031          ADD #25.,R4 ; TO NEAREST 50

```

SETCLK ROUTINE TO SET UP DELAY COUNTS

```

5135 025026 005001          CLR    R1          ; INITIALISE RESULT
5136 025030 160004      10$:  SUB    R0,R4        ; REMAINDER < 0 ?
5137 025032 002402          BLT    20$          ; IF YES, BRANCH
5138 025034 005201          INC    R1          ; ELSE INCREMENT RESULT
5139 025036 000774          BR     10$          ; AND TRY AGAIN
5140 025040 010137 011536  20$:  MOV    R1,CNT500    ; SAVE THE 500 MICROSECONDS COUNTER
5141
5142 025044 012700 000024    MOV    #20.,R0      ; NOW DIVIDE BY 20
5143 025050 062701 000012    ADD    #10.,R1     ; TO NEAREST 20
5144 025054 005002          CLR    R2          ; INITIALISE RESULT
5145 025056 160001      30$:  SUB    R0,R1        ; REMAINDER < 0 ?
5146 025060 002402          BLT    40$          ; IF YES, BRANCH
5147 025062 005202          INC    R2          ; ELSE INCREMENT RESULT
5148 025064 000774          BR     30$          ; AND TRY AGAIN
5149 025066 010237 011540  40$:  MOV    R2,CNT25    ; SAVE THE 25 MICROSECONDS COUNTER
5150
5151 025072 000207      SETEX: RTS    PC          ; RETURN
5152
5153 025074 000000      CLKFLG: .WORD 0      ; SET IF DRS FINDS A CLOCK WITH A CSR
5154
5155
5156 025076 045 116 045 TIMMSG: .NLIST BEX
5157                                     .ASCIZ /#N#ATYPE 2 CHARACTERS 6 SECONDS APART >/
5158                                     .LIST BEX
5158                                     .EVEN

```

LOPCHK LOOPBACK CHECKING ROUTINE.

```

5160 .SBTTL LOPCHK - LOOPBACK CHECKING ROUTINE.
5161
5162 ;**
5163 ; FUNCTIONAL DESCRIPTION:
5164 ;
5165 ; IF UNIT L$LUN IN THE HARDWARE P TABLE IS SPECIFIED AS LOOPED, THE
5166 ; ROUTINE CHECKS THAT THE OTHER MODULE CAN BE ADDRESSED AND THAT IT
5167 ; IS THE CORRECT TYPE FOR LOOPING TO THE UUT. IF EITHER CHECK FAILS,
5168 ; A MESSAGE IS PRINTED AND THE UNIT IS FLAGGED IN THE P TABLE AS NOT
5169 ; LOOPED.
5170 ;
5171 ; INPUTS:
5172 ;
5173 ; L$LUN NUMBER OF UNIT TO CHECK
5174 ; LOPFLG - ADDRESS OF FLAG FOR UNIT 0. IF THE FLAG FOR UNIT L$LUN
5175 ; IS NON ZERO, THE UNIT HAS BEEN CHECKED AND THE ROUTINE
5176 ; DOES NOTHING.
5177 ;
5178 ; IMPLICIT INPUTS:
5179 ;
5180 ; THE HARDWARE P TABLE.
5181 ;
5182 ; OUTPUTS:
5183 ;
5184 ; IF MODULES SPECIFIED AS 'OTHER' IN THE HARDWARE QUESTIONS DO NOT
5185 ; RESPOND OR ARE NOT OF THE CORRECT TYPE FOR LOOPING, AN ERROR
5186 ; MESSAGE IS PRINTED.
5187 ;
5188 ; LOPFLG FOR THE SPECIFIED UNIT IS SET TO FLAG THAT THE LOOPBACK
5189 ; CONFIGURATION HAS BEEN CHECKED.
5190 ;
5191 ; IMPLICIT OUTPUTS:
5192 ;
5193 ; IF THE CONFIGURATION IS NOT CORRECT, THE INCORRECT MODULES ARE
5194 ; FLAGGED AS NO LONGER LOOPED IN THE HARDWARE P TABLE.
5195 ;
5196 ; SUBORDINATE ROUTINES USED:
5197 ;
5198 ; NXM : NON EXISTANT MEMORY TRAP ROUTINE.
5199 ;
5200 ; FUNCTIONAL SIDE EFFECTS:
5201 ;
5202 ; IF A LOOPED MODULE DOES NOT CHECK CORRECTLY, IT IS FLAGGED AS
5203 ; NOT LOOPED IN THE HARDWARE P TABLE.
5204 ;
5205 ; CALLING SEQUENCE:
5206 ;
5207 ; JSR PC,LOPCHK
5208 ;
5209 ;-
5210
5211 LOPCHK:
5212 MOV R1,-(SP) ; SAVE REGISTERS R1 TO R3
5213 MOV R2,-(SP) ;
5214 MOV R3,-(SP) ;
5215
5216 MOV L$LUN,R1 ; GET UNIT OFFSET

```

LOPCHK LOOPBACK CHECKING ROUTINE.

```

5217 025160 006301          ASL    R1          ;
5218 025162 005761 004070  TST    LOPFLG(R1) ; LOOP CONFIGURATION ALREADY CHECKED ?
5219 025166 001402          BEQ    20$         ; IF NOT, CHECK IT
5220 025170 000137 025630 10$:   JMP    LOPEX       ; EXIT
5221
5222 025174 005237 004070 20$:   INC    LOPFLG      ; SHOW CONFIGURATION IS CHECKED
5223 025200          SETVEC  #4,#NXM,#PRI07 ; SET UP NXM VECTOR
                    MOV    #PRI07,-(SP)
                    MOV    #NXM,(SP)
                    MOV    #4,(SP)
                    MOV    #3,-(SP)
                    TRAP   C$SVEC
                    ADD    #10,SP
                    025200 012746 000340
                    025204 012746 017266
                    025210 012746 000004
                    025214 012746 000003
                    025220 104437
                    025222 062706 000010
5224
5225 025226 016102 003774 30$:   MOV    GPADD(R1),R2 ; GET UNIT'S P TABLE
5226 025232 005762 000006  TST    6(R2)        ; IS UNIT LOOPED ?
5227 025236 001574          BEQ    LOPEX       ; IF NOT, EXIT
5228 025240 005037 004060  CLR    NXMFLG      ; ELSE CLEAR NXM FLAG
5229 025244 005772 000010  TST    @10(R2)     ; ACCESS THE OTHER UNIT ADDRESS
5230 025250 005737 004060  TST    NXMFLG      ; DOES OTHER UNIT EXIST ?
5231 025254 001413          BEQ    40$         ; IF YES, BRANCH
5232 025256          PRINTF  #LOP1,14(R2) ; ELSE PRINT 'OTHER UNIT DOESN'T RESPOND'
                    MOV    14(R2),(SP)
                    MOV    #LOP1,(SP)
                    MOV    #2,(SP)
                    MOV    SP,R0
                    TRAP   C$PNTF
                    ADD    #6,SP
                    025256 016246 000014
                    025262 012746 025646
                    025266 012746 000002
                    025272 010600
                    025274 104417
                    025276 062706 000006
5233 025302 000534          BR     110$        ; AND DESELECT LOOPING
5234
5235 025304 027227 000014 140000 40$:   CMP    @14(R2),#140000 ; IS OTHER UNIT IXV11 ?
5236 025312 103413          BLO   50$         ; IF YES, BRANCH
5237 025314          PRINTF  #LOP2,14(R2) ; ELSE PRINT 'OTHER UNIT NOT IXV11'
                    MOV    14(R2),(SP)
                    MOV    #LOP2,(SP)
                    MOV    #2,(SP)
                    MOV    SP,R0
                    TRAP   C$PNTF
                    ADD    #6,SP
                    025314 016246 000014
                    025320 012746 025723
                    025324 012746 000002
                    025330 010600
                    025332 104417
                    025334 062706 000006
5238 025340 000515          BR     110$        ; DESELECT LOOPING
5239
5240 025342 027227 000000 020000 50$:   CMP    @R2,#20000    ; IS UUT DIGITAL INPUT ?
5241 025350 103013          BHI   60$         ; IF NOT, BRANCH
5242 025352 012703 025771  MOV    #LOP3,R3     ; SAVE DIGITAL INPUT MESSAGE ADDRESS
5243 025356 027227 000014 020000  CMP    @14(R2),#20000 ; IS OTHER UNIT DIGITAL OUTPUT ?
5244 025364 103471          BLO   100$        ; IF NOT, DESELECT LOOPING
5245 025366 027227 000014 037400  CMP    @14(R2),#37400 ;
5246 025374 101065          BHI   100$        ;
5247 025376 000514          BR     LOPEX      ; OTHERWISE, DO NOTHING
5248
5249 025400 027227 000000 040000 60$:   CMP    @R2,#40000    ; IS UUT DIGITAL OUTPUT ?
5250 025406 103007          BHI   70$         ; IF NOT, BRANCH
5251 025410 012703 026067  MOV    #LOP4,R3     ; SAVE DIGITAL OUTPUT MESSAGE ADDRESS
5252 025414 027227 000014 017400  CMP    @14(R2),#17400 ; IS OTHER UNIT DIGITAL INPUT ?
5253 025422 101052          BHI   100$        ; IF NOT, DESELECT LOOPING
5254 025424 000501          BR     LOPEX      ; OTHERWISE DO NOTHING
5255

```

LOPCHK LOOPBACK CHECKING ROUTINE.

```

5256 025426 027227 000000 100000 701:  CMP      @ (R2), #100000 ; IS UNIT ANALOGUE INPUT ?
5257 025434 103013          BHIS     801 ; IF NOT, BRANCH
5258 025436 012703 026166          MOV     @LOP5, R3 ; SAVE ANALOGUE INPUT MESSAGE ADDRESS
5259 025442 027227 000014 100000          CMP     @14(R2), #100000 ; IS OTHER UNIT ANALOGUE OUTPUT ?
5260 025450 103437          BLO    1001 ; IF NOT, DESELECT LOOPING
5261 025452 027227 000014 137400          CMP     @14(R2), #137400 ;
5262 025460 101033          BHI    1001 ;
5263 025462 000462          BR     LOPEX ; OTHERWISE, DO NOTHING
5264
5265 025464 027227 000000 140000 801:  CMP      @ (R2), #140000 ; IS UUT ANALOGUE INPUT ?
5266 025472 103012          BHIS     901 ; IF NOT, BRANCH
5267 025474 012703 026265          MOV     @LOP6, R3 ; SAVE ANALOGUE OUTPUT MESSAGE ADDRESS
5268 025500 027227 000014 040000          CMP     @14(R2), #40000 ; IS OTHER UNIT ANALOGUE INPUT ?
5269 025506 103420          BLO    1001 ; IF NOT, DESELECT LOOPING
5270 025510 027227 000014 077400          CMP     @14(R2), #77400 ;
5271 025516 101444          BLOS   LOPEX ; IF YES, DO NOTHING
5272
5273 025520          901:  PRINTF  @LOP7, (R2) ; PRINT 'UNKNOWN MODULE CANNOT BE LOOPED'
5274 025520 011246          MOV     (R2), -(SP)
5275 025522 012746 026365          MOV     @LOP7, (SP)
5276 025526 012746 000002          MOV     #2, (SP)
5277 025532 010600          MOV     SP, R0
5278 025534 104417          TRAP   C$PNTF
5279 025536 062706 000006          ADD    #6, SP
5280 025542 005062 000006          CLR    6(R2) ; CLEAR P TABLE LOOPED PARAMETER
5281 025546 000430          BR     LOPEX ; AND EXIT
5282
5283 025550          1001: PRINTF  R3, (R2), 14(R2) ; PRINT 'CAN'T BE LOPEX'
5284 025550 016246 000014          MOV     14(R2), -(SP)
5285 025554 011246          MOV     (R2), -(SP)
5286 025556 010346          MOV     R3, (SP)
5287 025560 012746 000003          MOV     #3, (SP)
5288 025564 010600          MOV     SP, R0
5289 025566 104417          TRAP   C$PNTF
5290 025570 062706 000010          ADD    #10, SP
5291
5292 025574 005062 000006          1101: CLR    6(R2) ; CLEAR P TABLE LOOPED PARAMETER
5293 025600          PRINTF  @LOPDES, L$LUN ; PRINT LOOPING DESELECTED
5294 025600 013746 002074          MOV     L$LUN, (SP)
5295 025604 012746 026444          MOV     @LOPDES, (SP)
5296 025610 012746 000002          MOV     #2, (SP)
5297 025614 010600          MOV     SP, R0
5298 025616 104417          TRAP   C$PNTF
5299 025620 062706 000006          ADD    #6, SP
5300 025624 004737 011570          JSR    PC, WRD1 ; WAIT FOR OPERATOR TO TYPE RETURN
5301
5302 025630          LOPEX: CLRVEC #4 ; RESTORE SUPERVISOR NXM TRAP
5303 025630 012700 000004          MOV     #4, R0
5304 025634 104436          TRAP   C$VEC
5305
5306 025636 012603          MOV     (SP), R3 ; RESTORE REGISTERS R1 TO R3
5307 025640 012602          MOV     (SP), R2 ;
5308 025642 012601          MOV     (SP), R1 ;
5309 025644 000207          RTS    PC ; AND RETURN
5310
5311
5312
5313
5314
5315
5316
5317
5318
5319
5320
5321
5322
5323
5324
5325
5326
5327
5328
5329
5330
5331
5332
5333
5334
5335
5336
5337
5338
5339
5340
5341
5342
5343
5344
5345
5346
5347
5348
5349
5350
5351
5352
5353
5354
5355
5356
5357
5358
5359
5360
5361
5362
5363
5364
5365
5366
5367
5368
5369
5370
5371
5372
5373
5374
5375
5376
5377
5378
5379
5380
5381
5382
5383
5384
5385
5386
5387
5388
5389
5390
5391
5392
5393
5394
5395
5396
5397
5398
5399
5400

```

LOPCMK LOOPBACK CHECKING ROUTINE.

```

5292
5293 025723      045      116      062 LOP2:  .ASCIZ  \#N2#AOTHER DEVICE AT #06#A NOT I#V11.\
5294
5295 025771      045      116      062 LOP3:  .ASCII  /#N2#ADIGITAL INPUT AT #06#A CANNOT BE LOOPED TO DEVICE AT/
5296 026062      040      045      117      .ASCIZ  / #06/
5297
5298 026067      045      116      062 LOP4:  .ASCII  /#N2#ADIGITAL OUTPUT AT #06#A CANNOT BE LOOPED TO DFVICE AT/
5299 026161      040      045      117      .ASCIZ  / #06/
5300
5301 026166      045      116      062 LOP5:  .ASCII  /#N2#AANALOGUE INPUT AT #06#A CANNOT BE LOOPED TO DEVICE AT/
5302 026260      040      045      117      .ASCIZ  / #06/
5303
5304 026265      045      116      062 LOP6:  .ASCII  /#N2#AANALOGUE OUTPUT AT #06#A CANNOT BE LOOPED TO DEVICE AT/
5305 026360      040      045      117      .ASCIZ  / #06/
5306
5307 026365      045      116      062 LOP7:  .ASCIZ  /#N2#AUNKNOWN MODULE AT #06#A CANNOT BE LOOPED./
5308
5309 026444      045      116      045 LOPDES: .ASCIZ  \#N#ALOOPING DESELECTED FOR UNIT #D2#A.\
5310
5311
5312
                    .LIST  BEX
                    .EVEN
    
```

AUTODROP SECTION

```

5314          .SRITL  AUTODROP SECTION
5315
5316          ;**
5317          ; THIS CODE IS EXECUTED IMMEDIATELY AFTER THE INITIALIZE CODE IF
5318          ; THE 'ADR' FLAG WAS SET.  THE UNIT(S) UNDER TEST ARE CHECKED TO
5319          ; SEE IF THEY WILL RESPOND.  THOSE THAT DON'T ARE IMMEDIATELY
5320          ; DROPPED FROM TESTING.
5321          ;
5322
5323 026514          BGNAUTO
026514
5324
5331 026514          SETVEC 04,0NXM,0PRI07 ; SET UP NON EXISTENT MEMORY TRAP VECTOR.
026514 012746 000340          MOV 0PRI07, (SP)
026520 012746 017266          MOV 0NXM, (SP)
026524 012746 000004          MOV 04, (SP)
026530 012746 000003          MOV 03, (SP)
026534 104437          TRAP C$SVEC
026536 062706 000010          ADD 010,SP
5332 026542 005037 004060          CLR NXMFLG ; CLEAR NON - EXISTENT MEMORY FLAG
5333 026546 005777 155126          TST 0MOD ; REFERENCE MEMORY ADDRESS FOR THE DEVICE
5334          ; TO SEE IF IT EXISTS.
5335
5336          ; IF THE DEVICE DOESN'T EXIST, THE RESULTANT TRAP TO VECTOR 04 WILL
5337          ; CAUSE THE FLAG NXMFLG TO BE SET (SEE INTERRUPT ROUTINE NXM).
5338
5339 026552 005737 004060          TST NXMFLG ; WAS THERE A TRAP ?
5340 026556 001404          BEQ 10$ ; BRANCH IF NOT
5341 026560          DODU L$LUN ; ELSE DROP THE DEVICE
026560 013700 002074          MOV L$LUN,RO
026564 104451          TRAP C$DODU
5342 026566          DOCLN ; CLEAN UP CODE.
026566 104444          TRAP C$DOCLN
5343 026570          10$: CLRVEC 04 ; RETURN VECTOR 04 TO NORMAL STATE
026570 012700 000004          MOV 04,RO
026574 104436          TRAP C$CVEC
5344 026576          ENDAUTO
026576          L10025: TRAP C$AUTO
026576 104461

```

CLEANUP CODING SECTION

```

5346 .SBTTL CLEANUP CODING SECTION
5347
5348
5349 ;
5350 ; THE CLEANUP CODING SECTION CONTAINS THE CODING THAT IS PERFORMED
5351 ; AFTER THE HARDWARE TESTS HAVE BEEN PERFORMED.
5352 ;
5353 026600 BGNCLN
5354 026600 L$CLEAN::
5355
5356
5357
5358 026600 104433 BRESET ; DO A BUS RESET TO SWITCH TO ALL LEDS
5359 026602 104432 EXIT CLN TRAP C$RESET
5360 026604 000002 TRAP C$EXIT
5361 .WORD L10026..
5362
5363
5364
5365
5366
5367
5368
5369 .EVEN
5370
5371
5372
5373
5374
5375
5376
5377
5378
5379
5380
5381 026606 ENDCLN
5382 026606 L10026: TRAP C$CLEAN
5383 026606 104412

```


DROP UNIT SECTION

```

5383          .SBTTL  DROP UNIT SECTION
5384
5385          ;**
5386          ; THE DROP-UNIT SECTION CONTAINS THE CODING THAT CAUSES A DEVICE
5387          ; TO NO LONGER BE TESTED.
5388          ;
5389
5390 026610          BGNDU
5391          026610          L$DU::
5400
5401 026610 010026          MOV      RO,(SP);          ; SAVE RO CONTENTS
5402 026612 112760 000001 004034      MOVB   #1,DROPE(DRO)          ; FLAG UNIT DROPPED IN PARAM TABLE
5403 026620 014600          MOV      (SP),RO          ; GET ORIGINAL RO CONTENTS
5404 026622          PRINTF  #DROPE,RO          ; 'UNIT DROPPED'
5405          026622 010046
5406          026624 012746 026650          MOV      RO,(SP)
5407          026630 012746 000002          MOV      #DROPE,(SP)
5408          026634 010600          MOV      SP,RO
5409          026636 104417          TRAP   C$PNTF
5410          026640 06^706 000006          ADD     #6,SP
5411
5412          026644          EXIT  DU
5413          026644 000167          .WORD  J$JMP
5414          026646 000030          .WORD  L10027-2 .
5415
5416          026650          045      116      045  DROPE: .NLIST  BEX
5417          .ASCIZ  /#N#AUNIT #D2#A DROPE/
5418          .LIST   BEX
5419          .EVEN
5420
5421          026700          ENDDU
5422          026700          L10027:
5423          026700 104453          TRAP   C$D

```

ADD UNIT SECTION

5428
5429
5430
5431
5432
5433
5434
5435
5436 026702
026702
5437
5446
5447 026702 105060 004034
5448
5449 026706
026706 000167
026710 000000
5450
5462
5463
5464
5465 026712
026712
026712 104452
5466
5467 026714
5468
5469

.SBTTL ADD UNIT SECTION

```

***
; THE ADD UNIT SECTION CONTAINS ANY CODE THE PROGRAMMER WISHES
; TO BE EXECUTED IN CONJUNCTION WITH THE ADDING OF A UNIT BACK
; TO THE TEST CYCLE.
;

```

BGNAU

L\$AJ::

CLRB DROPED(RO)

; FLAG UNIT NOT DROPPED IN PARAM TABLE

EXIT AU

```

.WORD JSJMP
.WORD L10030 2 .

```

.EVEN

ENDAU

L10030:

TRAP C\$AU

ENDMOD

ADD UNIT SECTION

5471
5482
5483
5518
5519 026714
5520
5521
5522
5523
5524
5525
5532
5538 026714
026714
5539 026714 004737 011714
5540 026720 000417
5541 026722 027116
5542 026724 103465
5543 026726 005037 004144
5544 026732
026732 012746 000340
026736 012746 027112
026742 012746 000004
026746 012746 000003
026752 104437
026754 062706 000010
5545 026760 013701 003700
5546 026764 162701 000002
5547 026770 012702 000004
5548 026774 005003
5549 026776 062701 000002
5550 027002
027002 104404
5551 027004 005004
5552 027006 005711
5553 027010 005704
5554 027012 004737 012146
5555 027016 001405
5556 027020 005203
5557 027022
027022 104456
027024 000145
027026 027150
027030 007634
5558 027032
027032
027032 104405
5559 027034 005302
5560 027036 001357
5561 027040 005703
5562 027042 001404
5563 027044
027044 013700 002074
027050 104451
5564 027052
027052 104444
5565 027054 005737 002242

```

.TITLE HARDWARE TESTS
.SBTTL TEST 1: REGISTER NXM TEST.

      BGNMOD
;.....
;          TEST 1 - REGISTER NXM TEST.
;
;          THIS TEST CHECKS THAT ACCESSING THE DEVICE MODE, DATA, CSA AND
;          CSB REGISTERS (IF PRESENT) DOES NOT CAUSE A NXM TRAP.
;.....

      BGNTST

      T1::
CALL   SELECT          ;CALL SELECT ROUTINE
.WORD  417             ;GIVE TEST PARAMETER
TSMO1  ;GIVE TEST HEADER ADDRESS
BCS    EXQV1           ;IF CARRY IS SET, EXIT TEST
CLR    ITRCNT          ;CLEAR ITERATION COUNTER
SETVEC #4,#LOCATE,#PRI07 ;SET UP INTERRUPT ROUTINE

                                MOV    #PRI07,-(SP)
                                MOV    #LOCATE,(SP)
                                MOV    #4,(SP)
                                MOV    #3,(SP)
                                TRAP   C$SVEC
                                ADD    #10,SP

ITRAC1: MOV    MOD,R1      ;GET FIRST REGISTER ADDRESS
        SUB    #2,R1
        MOV    #4,R2
        CLR    R3
        ADD    #2,R1
        BGNSEG
;
;                                TRAP   C$BSEG
;
;          TEST REGISTER ADDRESS
;          WAS THERE A TRAP?
;          SKIP BRANCH IF SFI IS SET
;          IF NO, BRANCH
;          MARK THE ERROR
;          ERROR HANDLER
                                TRAP   C$ERRRD
                                .WORD  101
                                .WORD  E101
                                .WORD  EERA

20$:   ENOSEG
;
;          10000$: TRAP   C$ESEG
;
;          ALL REGISTERS TESTED
;          IF NO, BRANCH
;          WAS THERE AN ERROR
;          IF NO, DON'T DROP THE UNIT
;          DROP THE UNIT UNDER TEST
                                MOV    L$LUN,R0
                                TRAP   C$DODU'

DOCLN ;RUN THE CLEAN UP ROUTINE
;
;          IS QUICK VERIFY PASS SELECTED?
30$:   TST    QVP

```

TEST 1: REGISTER NXM TEST.

```

5566 027060 001007          BNE    EXQV1          ;IF YES EXIT TEST
5567 027062 005237 004144    INC    ITRCNT          ;ITERATION COUNTER + 1
5568 027066 023737 004146 004144    CMP    ITRDEF,ITRCNT    ;DEFAULT ITERATION EXECUTED
5569 027074 001401          BEQ    EXQV1          ;IF YES EXIT TEST
5570 027076 000730          BR     ITRAC1         ;IF NO, TEST ITERATION
5571 027100          EXQV1: CLRVEC    #4          ;
      027100 012700 000004          ;
      027104 104436          ;
5577 027106          TSTEN1. EXIT    TST          ;
      027106 104432          ;
      027110 000106          ;
5578          ;
5590 027112          BGNSRV LOCATE          ;SERVICE ROUTINE LOCATE
      027112          ;
5591 027112 005204          INC    R4              LOCATE::
5592 027114          ENDSRV          ;INCREMENTS R4 IF A TRAP TO 4
      027114          ;HAS OCCURRED
      027114 000002          ;
5593          ;
5594          ;
5595 027116          045    123    062 TSHD1:: .ASCIZ  /#S2#AREGISTER NXM TEST.#N/
5596 027150          122    105    107 E101:  .ASCIZ  /REGISTER ADDRESSING ERROR TRAP TO 4/
5597          ;
5598          ;
5599          ;
5600 027216          ;
      027216          ;
      027216 104401          ;

```

MOV #4,R0
TRAP C\$CVEC
TRAP C\$EXIT
.WORD L10031 .

L10032:
RTI

L10031:
TRAP C\$ETST

TEST 2: RESET TEST

```

5608 .SBTTL TEST 2: RESET TEST
5609 ;*****
5610 ; TEST 2 - RESET TEST.
5611 ; THIS TEST CHECKS THAT THE DEVICE REGISTERS ARE CORRECTLY SET OR RESET
5612 ; AFTER A BUS RESET. IN THE MOD REGISTER ONLY THE LED BIT IS TESTED .
5613 ;*****
5614 027220          BGNST
5615 027220          T2::
5616 027220 004737 011714 CALL SELECT          ;CALL SELECT ROUTINE
5617 027224 000417 .WORD 417          ;GIVE TEST PARAMETER
5618 027226 027562 TSHD2          ;GIVE TEST HEADER ADDRESS
5619 027230 103552 BCS EXQV2       ;IF CARRY IS SET, EXIT TEST
5620 027232 005037 004144 CLR ITRCNT       ;CLEAR ITERATION COUNTER
5621 027236 005001 ITRAC2: CLR R1      ;CLEAR TEMPORARY STORE
5622 027240 113701 004132 MOVB CONMSK,R1    ;GET MODULE TYPE
5623 027244 032701 000020 BIT #20,R1        ;DON'T TEST SPECIAL MODULES
5624 027250 004737 012146 CALL INSERT      ;SKIP BRANCH IF 'SFI' IS SET
5625 027254 001404 BEQ 10$          ;BRANCH IF NO SPEC. MODULE
5626 027256          ERRSOFT 200,E200,EERG ;ERROR HANDLER
5627 027256 104457          TRAP C$ERSOFT
5628 027260 000310          .WORD 200
5629 027262 027605          .WORD E200
5630 027264 007724          .WORD EERG
5631 027266 012702 177777 10$: MOV #1,R2          ;MODULE IDENTIFICATION
5632 027272 005202 20$: INC R2          ;...
5633 027274 006201 ASR R1          ;...
5634 027276 103375 BCC 20$          ;...
5635 027300 006302 ASL R2          ;MULTIPLY BY 10 TO GET TABLE
5636 027302 006302 ASL R2          ;OFFSET
5637 027304 006302 ASL R2          ;...
5638 027306 005003 CLR R3          ;START WITH DAT REGISTER
5639 027310          BGNSEG
5640 027310 104404          TRAP C$BSEG
5641 027312          BRESET          ;DO A BUS RESET
5642 027312 104433          TRAP C$RESET
5643 027314 032777 000100 154356 BIT #100,@MOD      ;IS LED BIT CLEARED ?
5644 027322 004737 012146 CALL INSERT      ;SKIP BRANCH IF "SFI" IS SET
5645 027326 001404 BEQ 30$          ;BRANCH IF YES
5646 027330          ERRSOFT 201,E201,EERG ;ERROR HANDLER
5647 027330 104457          TRAP C$ERSOFT
5648 027332 000311          .WORD 201
5649 027334 027703          .WORD E201
5650 027336 007724          .WORD EERG
5651 027340          30$: CKLOOP          ;
5652 027340 104406          TRAP C$CLP1
5653 027342 052777 000100 154330 BIS #100,@MOD      ;SWITCH ON THE MODULE LED
5654 027350 032777 000100 154322 BIT #100,@MOD      ;IS LED BIT NOW SET ?
5655 027356 004737 012146 CALL INSERT      ;SKIP BRANCH IF 'SFI' IS SET
5656 027362 001004 BNE 40$          ;BRANCH IF YES
5657 027364          ERRSOFT 202,E202,EERG ;ERROR HANDLER
5658 027364 104457          TRAP C$ERSOFT
5659 027366 000312          .WORD 202
5660 027370 027770          .WORD E202
5661 027372 007724          .WORD EERG
5662 027374          40$: ENDSEG          ;
5663 027374 104405          10000$: TRAP C$ESEG

```

TEST 2: RESET TEST

```

5647 027376 013705 003702      MOV    DAT,R5      ;GET FIRST REGISTER ADDRESS
5648 027402 062702 000002      ADD    #2,R2      ;POINT TABLE OFFSET TO DAT CONT.
5649 027406      BGNSEG
5650 027410      BRESET           ;DO A BUS RESET          TRAP    C$BSEG
      027410 104433      ;DO A BUS RESET          TRAP    C$RESET
5651 027412 052777 000100 154260    BIS    #100,MOD    ;SWITCH ON THE MODULE LED
5652 027420 016237 030102 004062 50$:  MOV    R5AV(R2),GOOD ;GET FIRST COMPARE CONTENTS FROM TABLE
5653 027426 011537 004064      MOV    #R5,BAD    ;GET FIRST REGISTER CONTENTS
5654 027432 005703      TST    R3         ;IS THIS THE DAT REGISTER?
5655 027434 001006      BNE    60$       ;IF NO, BRANCH
5656 027436 032737 000005 004132    BIT    #5,CONMSK  ;IS THIS AN INPUT MODULE?
5657 027444 001402      BEQ    60$       ;IF NO, BRANCH
5658 027446 005037 004064      CLR    BAD       ;IF YES, CLEAR DAT CONTENTS
5659 027452 042737 000040 004064 60$:  BIC    #40,BAD    ;MASK OUT OPL BIT FOR ANA. OUTPUT
5660 027460 023737 004062 004064    CMP    GOOD,BAD   ;CMP TABLE CONT. WITH REG. CONT.
5661 027466 004737 012146      CALL   INSERT    ;SKIP BRANCH IF "SFI" IS SET
5662 027472 001404      BEQ    70$       ;
5663 027474      ERRSOFT 203,E203,EERB ;ERROR HANDLER
      027474 104457      ;
      027476 000313      ;
      027500 030035      ;
      027502 007664      ;
5664 027504      CKLOOP           ;
      027504 104406      ;
5665 027506 005203      INC    R3         ;COUNTER FOR NEXT REGISTER
5666 027510 022703 000003      CMP    #3,R3     ;3 REGISTERS TESTED ?
5667 027514 001405      BEQ    80$       ;BRANCH IF YES
5668 027516 062702 000002      ADD    #2,R2     ;LOAD NEXT TABLE ADDR.
5669 027522 062705 000002      ADD    #2,R5     ;LOAD NEXT REGISTER ADDR.
5670 027526 000734      BR    50$       ;
5671 027530      ENDSEG          ;
      027530      ;
      027530 104405      ;
5672 027532 005737 002242      TST    QVP       ;IS QUICK VERIFY PASS SELECTED?
5673 027536 001007      BNE    EXQV2    ;IF YES EXIT TEST
5674 027540 005237 004144      INC    ITRCNT   ;ITERATION COUNTER + 1
5675 027544 023737 004146 004144    CMP    ITRDEF,ITRCNT ;DEFAULT ITERATION EXECUTED
5676 027552 001401      BEQ    EXQV2    ;IF YES EXIT TEST
5677 027554 00063C      BR    ITRAC2   ;IF NO, TEST ITERATION
5678 027556      EXQV2: EXIT    TST
      027556 104432      ;
      027560 000362      ;
5679      ;
5680 027562      045      123      062 TSHD2: .NLIST BEX
5681 027605      123      120      105 E200: .ASCIZ /$S2$ARESET TEST.$N/
5682 027703      114      105      104 E201: .ASCIZ /SPECIAL MODULE FOUND - CAN'T BE TESTED WITH THIS DIAGNOSTIC /
5683 027770      114      105      104 E202: .ASCIZ /LED BIT IN MOD REGISTER NOT CLEARED AFTER BUS RESET /
5684 030035      122      105      107 E203: .ASCIZ /LED BIT IN MOD REGISTER CAN'T BE SET/
5685      ;
5686      ;
5687 030102 000000 000000 000000 RSAV: .WORD 0,0,0,0 ;MASKS FOR DIGITAL INPUT
5688 030112 000000 000000 000000      .WORD 0,0,0,0 ;MASKS FOR DIGITAL OUTPUT
5689 030122 000000 000000 100000      .WORD 0,0,100000,0 ;MASKS FOR ANALOGUE INPUT
5690 030132 000000 000000 100200      .WORD 0,0,100200,0 ;MASKS FOR ANALOGUE OUTPUT
5691      ;
5692      .LIST BEX
      .EVEN

```

L11

TEST 2: RESET TEST

SEQ 0141

5693 030142
030142
030142 104401

ENDTST

L10033: TRAP C#ETST

TEST 3: REGISTER R/W BIT TEST.

```

5695 .SBTTL TEST 3: REGISTER R/W BIT TEST.
5696 ;*****
5697 ;
5698 ;
5699 ;
5700 ;THIS TEST CHECKS THAT THE READ/WRITE BITS OF EACH REGISTER CAN ALL BE
5701 ;SET, ALL CLEARED AND INDIVIDUALLY SET.
5702 ;*****
5702 030144 BGNST
5703 030144 004737 011714 CALL SELECT ;CALL SELECT ROUTINE
5704 030150 000417 .WORD 417 ;TEST SELECT MASK
5705 030152 030626 TSHD3 ;TEST HEADER ADDRESS
5706 030154 103002 BCC 1$ ;IF CARRY IS SET, DON'T BRANCH
5707 030156 104432 EXIT TST ;EXIT TEST IF CARRY IS SET
5708 030162 005037 004144 1$: CLR ITRCNT ;CLEAR ITERATION COUNTER
5709 030166 113701 004132 MOV CONMSK,R1 ;GET MODULE TYPE
5710 030172 032701 000020 BIT #20,R1 ;TEST ONLY ANAL.+ DIGITAL MODULES
5711 030176 004737 012146 CALL INSERT ;SKIP BRANCH IF "SFI" IS SET
5712 030202 001404 BEQ ITRAC3 ;...
5713 030204 104457 ERRSOFT 300,E300,EERG ;ERROR HANDLER
5714 030214 000340 ITRAC3: SETPRI #PRI07 ;DISABLE INTERRUPTS
5715 030222 005001 CLR R1 ;CLEAR TEMPORARY STORE
5716 030224 113701 004132 MOV CONMSK,R1 ;GET MODULE TYPE
5717 030230 012702 177777 MOV #1,R2 ;
5718 030234 005202 10$: INC R2 ;MODULE IDENTIFICATION
5719 030236 006201 ASR R1 ;...
5720 030240 103375 BCC 10$ ;...
5721 030242 006302 ASL R2 ;MULTIPLY BY 8. TO GET TABLE
5722 030244 006302 ASL R2 ;OFFSET
5723 030246 006302 ASL R2 ;
5724 030250 005003 CLR R3 ;START WITH MOD REGISTER
5725 030252 013737 003700 010760 MOV MOD,REGADD ;LOAD FIRST REGISTER ADDRESS
5726 030260 012737 000455 007200 20$: MOV #301.,ERRNBR ;LOAD FIRST ERROR NUMBER
5727 030266 016237 031264 010754 MOV RWMASK(R2),MASK ;GET R/W MASK FORM TABLE
5728 030274 004737 010440 CALL REGTS1 ;CALL REGISTER TEST
5729 030300 005203 INC R3 ;COUNTER FOR NEXT REGISTER
5730 030302 022703 000004 CMP #4,R3 ;4 REGISTERS TESTED ?
5731 030306 001406 BEQ 30$ ;BRANCH IF YES
5732 030310 062702 000002 ADD #2,R2 ;LOAD NEXT TABLE ADDR.
5733 030314 062737 000002 010760 ADD #2,REGADD ;NEXT REGISTER ADDRESS
5734 030322 000756 BR 20$ ;TEST AGAIN WITH NEW PARAMETER
5735 ;
5736 ;THE FOLLOWING CODE IS FOR TESTING THE RT1 BIT IN A DIGITAL INPUT MODULE.
5737 ;
5738 030324 30$: BGNSEG
5739 030326 104404 004132 MOV CONMSK,R1 ;GET MODULE TYPE
5740 030332 032701 000001 BIT #1,R1 ;IS MODULE A DIGITAL INPUT?
5741 030336 001515 BEQ 70$ ;BRANCH IF NO

```


TEST 3: REGISTER R/W BIT TEST.

```

5781
5782 030626      045      123      062  TSM03: .LIST BEX
5783 030652      123      120      105  E300:  .ASCIZ /S2#AR W BIT TEST#N/
5784 030747      115      117      104  E304:  .ASCIZ /SPECIAL MODULE FOUND CAN'T BE TESTED WITH THIS DIAGNOSTIC /
5785 031037      115      117      104  E305:  .ASCIZ /MOD REGISTER CONTENTS OF DIGITAL INPUT MODULE INCORRECT/
5786 031126      012      015      122  E305:  .ASCII /MOD REGISTER CONTENTS OF DIGITAL INPUT MODULE INCORRECT/
5787 031150      115      117      104  E306:  .ASCIZ <12><15>/RT1 BIT NOT SET/
5788 031237      012      015      122  E306:  .ASCIZ <12><15>/RTO . RT1 NOT SET/
5789
5790
5791 031264      000011  000000  070000  RWM0K: .EVEN BEX
      031272      000000
      031274      000000  177777  000000  .WORD 11,0,70000,0 ;R/W MASKS FOR DIGITAL INPUT
      031302      000000
5792 031274      000000  177777  000000  .WORD 0,177777,0,0 ;R/W MASKS FOR DIGITAL OUTPUT
      031302      000000
5793 031304      000000  000000  077136  .WORD 0,0,77136,0 ;R/W MASKS FOR ANALOGUE INPUT
      031312      000000
5794 031314      000000  000000  001420  .WORD 0,0,1420,0 ;R/W MASKS FOR ANALOGUE OUTPUT
      031322      000000
5795
5796 031324
      031324
      031324      104401
      .EVEN
      .ENDTST
      L10034: TRAP CSETST
5797
5798 031326
      .ENDMOD
5799

```

TEST 5: REGISTER R/W BIT TEST.

```

5803 .TITLE HARDWARE TESTS
5848 031326 BGNMOD
5849 .SBTTL TEST 4: INTERNAL INTERRUPT LOGIC TEST DIGITAL INPUT.
5850 ;*****
5851 ; TEST 4 INTERNAL INTERRUPT LOGIC TEST DIGITAL INPUT.
5852 ;
5853 ; THIS TEST CHECKS THAT THE INTERNAL INTERRUPT LOGIC IS ABLE TO CAUSE AN
5854 ; INTERRUPT USING THE VECTOR AND PRIORITY LEVEL SELECTED IN THE START UP
5855 ; QUESTIONS. THE INTERRUPT IS GENERATED BY SETTING THE INTERRUPT ENABLE
5856 ; AND THEN INTERRUPT TEST BITS. AFTER INTERRUPT, THE CSA CONTENTS
5857 ; ARE ALSO CHECKED.
5858 ;*****
5859 031326 BGNTST 4
031326
5860 031326 004737 011714 CALL SELECT ;JUMP TO SELECT ROUTINE
5861 031332 000401 .WORD 401 ;GIVE TEST PARAMETER
5862 031334 031760 TSHD4 ;GIVE TEST HEADER
5863 031336 103002 BCC 10 ;BRANCH IF CARRY IS CLEARED
5864 031340 EXIT TST ;EXIT TEST IF CARRY WAS SET
031340 104432 TRAP C$EXIT
031342 001050 .WORD L10035
5865 031344 005037 004144 10: CLR ITRCNT ;CLEAR ITERATION COUNTER
5866 031350 ITRAC4: BGNSEG TRAP C$BSEG
031350 104404
5867 031352 005037 004150 CLR INTFLA ;CLEAR INTERRUPT FLAG
5868 031356 005077 152322 CLR @CSA ;CLEAR CONTROL STATUS REGISTER
5869 031362 SETVEC VEC,@INTSR,@P:IO? ;SET VECTOR AND SERVICE ROUTINE
031362 012746 000340 MOV @P:IO?,-(SP)
031366 012746 017276 MOV @INTSR,-(SP)
031372 013746 003710 MOV VEC,-(SP)
031376 012746 000003 MOV @3,-(SP)
031402 104437 TRAP C$SVEC
031404 062706 ADD @10,SP
5870 031410 SETPRI @P:IO? ;DISABLE INTERRUPT AT THIS POINT
031410 012700 000340 MOV @P:IO?,RO
031414 104441 TRAP C$SPRI
5871 031416 012777 040000 152260 MOV @40000,@CSA
5872 031424 052777 000400 152252 BIS @400,@CSA
5873 031432 012701 000340 MOV @P:IO?,R1
5874 031436 004737 011522 10: CALL W:25 ;;;LOAD R1 WITH PRIORITY NUMBER
5875 031442 005737 004150 TST INTFLA ;;;WAIT 20 US
5876 031446 001015 RNE 20: ;INTERRUPT OCCURRED ?
5877 031450 162701 000040 SUB @40,R1 ;BRANCH IF YES
5878 031454 SETPRI R1 ;DECREMENT PRIORITY
031454 010100 ;SET PRIORITY
031456 104441 MOV R1,RO
5879 031460 020127 000100 TRAP C$SPRI
5880 031464 004737 012146 CMP R1,@P:IO? ;IS THE PRIORITY OVER 2?
5881 031470 001362 CALL INSERT ;SKIP BRANCH IF SFI FLAG SET
5882 031472 ERRSOF T 401,E401,EER3 ;IF YES, BRANCH
031472 104457 ;ERROR HANDLER
031474 000621 TRAP C$ERSOFT
031476 032040 .WORD 401
031500 007442 .WORD E401
5883 031502 20: CKLOOP . ;BRANCH TO BGNSEG IF LOE IS SET
031502 104406 TRAP C$CLP1
5884 031504 SETPRI @P:IO? ;DISABLE INTERRUPT AT THIS POINT

```

TEST 4: INTERNAL INTERRUPT LOGIC TEST DIGITAL INPUT.

```

031504 012700 000340
031510 104441
5885 031512 062701 000040      ADD    @40,R1
5886 031516 020137 003712      CMP    R1,PRI0
5887 031522 004737 012146      CALL  INSERT
5888 031526 001430              BEQ    30$
5889              .REPT 5
5890              ASR    R1
5891              .ENDR
5892 031542 010137 004064      MOV    R1,BAD
5893 031546 013737 003712 004062  MOV    PRI0,GOOD
5894              .REPT 5
5895              ASR    GOOD
5896              .ENDR
5897 031600      ERRSOFT 402,E402,EER1
031600 104457
031602 000622
031604 032122
031606 007342
5898 031610      30$: CKLOOP
031610 104406
5899 031612 017737 152066 004064      MOV    @CSA,BAD
5900 031620 022737 140000 004064      CMP    @140000,BAD
5901 031626 004737 012146      CALL  INSERT
5902 031632 001407              BEQ    40$
5903 031634 012737 140000 004062  MOV    @140000,GOOD
5904 031642      ERRSOFT 403,E403,EER1
031642 104457
031644 000623
031646 032211
031650 007342
5905 031652      40$: CKLOOP
031652 104406
5906 031654 052777 100000 152022      BIS    @100000,@CSA
5907 031662 017737 152016 004064      MOV    @CSA,BAD
5908 031670 022737 040000 004064      CMP    @.0000,BAD
5909 031676 004737 012146      CALL  INSERT
5910 031702 001407              BEQ    50$
5911 031704 012737 040000 004062  MOV    @40000,GOOD
5912 031712      ERRSOFT 404,E404,EER1
031712 104457
031714 000624
031716 032310
031720 007342
5913 031722      50$: ENDSEG
031722
031722 104405
5914 031724 005737 002242      TST    QVP
5915 031730 001007      BNE   EXQV4
5916 031732 005237 004144      INC   ITRCNT
5917 031736 023737 004146 004144      CMP   ITRDEF,ITRCNT
5918 031744 001401      BEQ   EXQV4
5919 031746 000600      BR    ITRAC4
5920 031750 005077 151730      EXQV4: CLR  @CSA
5921 031754      EXIT  TST
031754 104432
031756 000434
MOV    @PRI0,R0
TRAP   C$SPRI
;CORRECT PRI. FOR CMP (-INC BY 1)
;CHECK INTERRUPT PRIORITY
;SKIP BRANCH IF SFI FLAG SET
;BRANCH IF PRIORITY WAS CORRECT
;SET UP DATA FOR ERROR MESSAGES
;...
;...
;SET UP DATA FOR ERROR MESSAGE
;...
;...
;...
;...
;ERROR HANDLER
TRAP   C$ERSOFT
.WORD 402
.WORD E402
.WORD EER1
TRAP   C$CLP1
;BRANCH TO BGNSEG IF LOE IS SET
;GET CSA CONTENTS
;IE AND IR SHOULD BE SET
;SKIP BRANCH IF SFI FLAG SET
;BRANCH IF YES
;SET UP DATA FOR ERROR MESSAGES
;ERROR HANDLER
TRAP   C$ERSOFT
.WORD 403
.WORD E403
.WORD EER1
TRAP   C$CLP1
;BRANCH TO BGNSEG IF LOE IS SET
;CLEAR IR 15 BIT IN CSA
;GET CSA CONTENTS
;IS IR15 BIT CLEARED
;SKIP BRANCH IF SFI FLAG SET
;BRANCH IF YES
;SET UP DATA FOR ERROR MESSAGES
;ERROR HANDLER
TRAP   C$ERSOFT
.WORD 404
.WORD E404
.WORD EER1
TRAP   C$ESEG
;IS QUICK VERIFY PASS SELECTED?
;IF YES, EXIT TEST
;ITERATION COUNTER = 1
;DEFAULT ITERATION EXECUTED
;IF YES, EXIT TEST
;IF NO, TEST ITERATION
;CLEAR CSA REGISTER
;EXIT TESTS
TRAP   C$EXIT
.WORD .0035

```

F12

TEST 4: INTERNAL INTERRUPT LOGIC TEST DIGITAL INPUT.

```

5922
5923 031760      045      123      062 TSHD4:: .ASCIZ /S2#AINTERNAL INTERRUPT TEST DIGITAL INPUT.#N/
5924 032040      116      117      040 E401:  .ASCIZ /NO INTERRUPT AFTER SETTING EI + TST IR BIT IN CSA/
5925 032122      111      116      124 E402:  .ASCIZ /INTERRUPT DID NOT OCCUR AT THE SELECTED PRIORITY LEVEL/
5926 032211      103      123      101 E403:  .ASCIZ /CSA REGISTER OF DIGITAL INPUT MODULE INCORRECT AFTER INTERRUPT/
5927 032310      111      122      061 E404:  .ASCIZ /IR15 IN CSA REGISTER OF DIGITAL INPUT NOT CLEARED AFTER INTERRUPT/
5928
5929
5930
5931 032412
      032412
      032412 104401

```

```

      .NLIST BEX
      .LIST BEX
      .EVEN
      .ENDTST

```

```

L10035: TRAP C#ETST

```

TEST 5: INTERNAL LOGIC TEST ANALOGUE INPUT.

```

5933 .SBTTL TEST 5: INTERNAL LOGIC TEST - ANALOGUE INPUT.
5934 ;*****
5935 ; TEST 5 INTERNAL LOGIC TEST ANALOGUE INPUT.
5936 ;
5937 ; THIS TEST PERFORMS A PSEUDO CONVERSION ON EACH CHANNEL THAT IS FOUND, BY
5938 ; SETTING THE A/D START BIT AND THEN POLLING THE 'DONE' BIT TO CHECK THAT
5939 ; THE CONVERSION HAS BEEN COMPLETED WITHIN THE ALLOWED TIMEOUT PERIOD (AT
5940 ; LEAST 10MS).
5941 ; BEFORE A/D START IS SET, A CHECK IS MADE THAT THE DONE BIT IS CLEARED.
5942 ; THE ERROR CONDITIONS ARE ALSO CHECKED, BUT NO CHECK IS MADE ON THE RESULTING
5943 ; INPUTS OR ON THE GAIN SETTING.
5944 ;*****
5945 032414 BGNSTST
5946 032414 004737 011714 CALL SELECT ;CALL SELECT ROUTINE
5947 032420 000404 .WORD 404 ;GIVE TEST PARAMETER (BASIC,AIP)
5948 032422 033204 T5:05 ;GIVE TEST HEADER ADDRESS
5949 032424 103002 BCC 1$ ;BRANCH IF CARRY IS CLEARED
5950 032426 EXIT TST ;EXIT TEST IF CARRY WAS SET
5951 032432 005037 004144 1$: CLR ITRCNT ;CLEAR ITERATION COUNTER
5952 032436 005003 ITRACS: CLR R3 ;CLEAR MAXIMUM CHANNEL COUNTER
5953 032440 005004 CLR R4 ;GET FIRST CHANNEL
5954 032442 104404 10$: BGNSEG
5955 032444 005777 151232 TST @DAT ;READ DAT TO CLEAR DONE+ERR IN CSA
5956 032450 005077 151230 CLR @CSA ;CLEAR CONTROL STATUS REGISTER
5957 032454 050477 151224 BIS R4,@CSA ;LOAD CHANNEL NUMBER
5958 032460 017737 151220 004064 MOV @CSA,BAD ;GET CSA CONTENTS
5959 032466 012737 100000 004062 MOV @100000,GOOD ;SET UP GOOD DATA
5960 032474 050437 004062 BIS R4,GOOD ;SAVE CHANNEL NUMBER IN GOOD
5961 032500 023737 004062 004064 CMP GOOD,BAD ;IS CHANNEL AVAILABLE AND DONE CLEARED
5962 032506 004737 012146 CALL INSERT ;SKIP BRANCH IF SFI FLAG SET
5963 032512 001404 BEQ 20$ ;BRANCH IF YES
5964 032514 ERRSOFT 501,E501,EER4 ;ERROR HANDLER
5965 032514 104457 TRAP C$ERSOFT
5966 032516 000765 .WORD 501
5967 032520 033261 .WORD E501
5968 032522 007474 .WORD EER4
5969 032524 104406 20$: CKLOOP ;BRANCH BACK TO BGNSEG
5970 032526 052777 000001 151150 TRAP C$CLP1
5971 032534 012701 000024 BIS @1,@CSA ;START A CONVERSION
5972 032540 004737 011514 MOV @20.,R1 ;SET UP TIME OUT COUNTER
5973 032544 017737 151134 004064 30$: CALL WT500 ;WAIT 500 US
5974 032552 032737 000200 004064 MOV @CSA,BAD ;GET CSA CONTENTS
5975 032560 001015 BIT @200,BAD ;POLL THE DONE BIT
5976 032562 005301 BNE 40$ ;BRANCH IF DONE BIT WAS SET
5977 032564 004737 012146 DEC R1 ;DECREMENT TIMEOUT COUNTER
5978 032570 001363 CALL INSERT ;SKIP BRANCH IF SFI FLAG SET
5979 032572 012737 100200 004062 BNE 30$ ;BRANCH IF 4 MS NOT REACHED
5980 032600 050437 004062 MOV @100200,GOOD ;SET UP DATA FOR ERROR MESSAGES
5981 032604 104457 BIS R4,GOOD ;LOAD CHANNEL NUMBER IF U GOOD
5982 032606 000766 ERRSOFT 502,E502,EER4 ;ERROR HANDLER
5983 032610 033345 .WORD 502
5984 .WORD E502

```

TEST 5: INTERNAL LOGIC TEST ANALOGUE INPUT.

SEQ 0149

```

032612 007474
5978 032614          40$: CKLOOP          ;BRANCH TO BGNSEG          .WORD  EER4
032614 104406
5979 032616 052777 000001 151060  BIS    #1,@CSA          ;SET A/D START BIT TO GET AN ERR          TRAP  C$CLP1
5980 032624 017737 151054 004064  MOV    @CSA,BAD          ;GET CSA CONTENTS
5981 032632 012737 100240 004062  MOV    #100240,GOOD      ;SET UP GOOD DATA FOR COMPARISON
5982 032640 050437 004062          BIS    R4,GOOD          ;...
5983 032644 023737 004062 004064  CMP    GOOD,BAD          ;ERROR BIT SHOULD NOW BE SET
5984 032652 004737 012146          CALL  INSERT            ;SKIP BRANCH IF SFI FLAG SET
5985 032656 001404          BEQ    50$              ;BRANCH IF YES
5986 032660          ERRSOFT 50$,E50$,EER4  ;ERROR HANDLER
032660 104457
032662 000767          TRAP  C$ERSOFT
032664 033427          .WORD  503
032666 007474          .WORD  E503
5987 032670          50$: ENDSEG          .WORD  EER4
032670
032670 104405          10000$: TRAP  C$ESEG
5988 032672          BGNSEG
032672 104404
5989 032674 017737 151002 004064  MOV    @DAT,BAD          ;CLEAR DONE + ERR BY READING DAT REG.          TRAP  C$BSEG
5990 032702 017737 150776 004064  MOV    @CSA,BAD          ;GET CSA CONTENTS
5991 032710 012737 100000 004062  MOV    #100000,GOOD      ;SET UP GOOD DATA FOR COMPARISON
5992 032716 050437 004062          BIS    R4,GOOD          ;...
5993 032722 023737 004062 004064  CMP    GOOD,BAD          ;DONE + ERR BIT SHOULD NOW BE CLEARED
5994 032730 004737 012146          CALL  INSERT            ;SKIP BRANCH IF SFI FLAG SET
5995 032734 001404          BEQ    60$              ;BRANCH IF YES
5996 032736          ERRSOFT 504,E504,EER4  ;ERROR HANDLER
032736 104457          TRAP  C$ERSOFT
032740 000770          .WORD  504
032742 033517          .WORD  E504
032744 007474          .WORD  EER4
5997 032746          60$: CKLOOP          ;BRANCH TO BGNSEG IF LOE IS SET
032746 104406          TRAP  C$CLP1
5998 032750 052777 000001 150726  BIS    #1,@CSA          ;SET A/D START BIT IN CSA
5999 032756 052777 000001 150720  BIS    #1,@CSA          ;SET A/D START A SECOND TIME
6000 032764 017737 150714 004064  MOV    @CSA,BAD          ;GET CSA CONTENTS
6001 032772 012737 100040 004062  MOV    #100040,GOOD      ;SET UP GOOD DATA FOR COMPARISON
6002 033000 050437 004062          BIS    R4,GOOD          ;...
6003 033004 023737 004062 004064  CMP    GOOD,BAD          ;ERROR BIT SHOULD BE SET
6004 033012 004737 012146          CALL  INSERT            ;SKIP BRANCH IF SFI FLAG SET
6005 033016 001404          BEQ    70$              ;BRANCH IF YES
6006 033020          ERRSOFT 505,E505,EER4  ;ERROR HANDLER
033020 104457          TRAP  C$ERSOFT
033022 000771          .WORD  505
033024 033604          .WORD  E505
033026 007474          .WORD  EER4
6007 033030          70$: CKLOOP          ;BRANCH BACK TO BGNSEG (LOE SET)
033030 104406          TRAP  C$CLP1
6008 033032          ENDSEG
033032
033032 104405          10001$: TRAP  C$ESEG
6009 033034 017737 150642 004064  MOV    @DAT,BAD          ;CLEAR ERROR BIT IN CSA
6010 033042 005203          INC    R3                ;MARK CHANNEL NUMBER
6011 033044 022703 000017          CMP    #15.,R3          ;16 CHANNELS TESTED ?
6012 033050 002027          BGE    90$              ;BRANCH IF NOT
6013 033052 017737 150626 004064  MOV    @CSA,BAD          ;GET CSA CONTENTS

```

TEST 5: INTERNAL LOGIC TEST - ANALOGUE INPUT.

```

6014 033060 042737 100377 004064      BIC      @100377,BAD      ;MASK OUT UNUSED BITS
6015 033066 023727 004064 077400      CMP      BAD,@77400      ;HAVE WE REACHED LAST CHA. IN LAST BANK
6016 033074 103026                      BHIS     110$           ;EXIT IF YES
6017 033076 062704 000400                      ADD      @400,R4        ;INCREMENT CHANNEL NUMBER
6018 033102 005077 150576      80$:    CLR      @CSA          ;CLEAR OLD CHANNEL NUMBER
6019 033106 050477 150572                      BIS      R4,@CSA       ;LOAD NEW CHANNEL NUMBER
6020 033112 032777 100000 150564      BIT      @100000,@CSA   ;IS THE LOADED CHANNEL AVAILABLE ?
6021 033120 001407                      BEQ      100$          ;BRANCH IF NOT
6022 033122 005003                      CLR      R3            ;POINT TO FIRST CHANNEL IN BANK
6023 033124 000137 032442                      JMP      10$           ;IF YES GO TO TEST CHANNEL
6024 033130 062704 000400      90$:    ADD      @400,R4        ;GET NEXT CHANNEL
6025 033134 000137 032442                      JMP      10$           ;REPEAT WITH NEXT CHANNEL
6026 033140 062704 010000      100$:   ADD      @10000,R4      ;POINT TO NEXT CHANNEL BANK
6027 033144 020427 070000                      CMP      R4,@70000     ;HAVE WE REACHED THE LAST CHA.
6028 033150 101754                      BLOS    80$           ;BRANCH IF NOT
6029 033152 005737 002242      110$:   TST      QVP          ;IS QUICK VERIFY PASS SELECTED?
6030 033156 001010                      BNE     EXQV5         ;IF YES, EXIT TEST
6031 033160 005237 004144                      INC      ITRCNT        ;ITERATION COUNTER + 1
6032 033164 023737 004146 004144      CMP      ITRDEF,ITRCNT ;DEFAULT ITERATION EXECUTED
6033 033172 001402                      BEQ     EXQV5         ;IF YES, EXIT TEST
6034 033174 000137 032436                      JMP     ITRACS         ;IF NO, TEST ITERATION
6035 033200      EXQV5:  EXIT      TST          ;EXIT TEST
        033200 104432
        033202 000470

```

TRAP C\$EXIT
.WORD L10036-

```

6036
6037
6038 033204      045      123      062 TSHD5: .NLIST BEX
6039 033261      103      123      101 E501: .ASCIZ /#S2#INTERNAL LOGIC TEST - ANALOGUE INPUT.#N/
6040 033345      104      117      116 E502: .ASCIZ /CSA CONTENTS INCORRECT AFTER READ DAT AND CLEAR CSA/
6041 033427      105      122      122 E503: .ASCIZ /DONE BIT IN CSA NOT SET (TIMEOUT) AFTER A/D START/
6042 033517      105      122      122 E504: .ASCIZ /ERR BIT IN CSA NOT SET AFTER A/D START WHEN DONE IS SET\
6043 033604      105      122      122 E505: .ASCIZ /ERR, DONE BIT IN CSA NOT CLEARED AFTER READ DAT REG./
6044
6045
6046 033672
        033672
        033672 104401

```

L10036: TRAP C\$ETST

TEST 6: INTERNAL INTERRUPT LOGIC TEST ANALOGUE INPUT.

```

6048 .SBTTL TEST 6: INTERNAL INTERRUPT LOGIC TEST ANALOGUE INPUT.
6049 ;*****
6050 ; TEST 6 - INTERNAL INTERRUPT LOGIC TEST ANALOGUE INPUT.
6051 ;
6052 ; THIS TEST CHECKS THAT THE INTERNAL INTERRUPT LOGIC IS ABLE TO CAUSE A
6053 ; DONE AND AN ERROR INTERRUPT USING THE VECTOR AND PRIORITY LEVEL SELECTED
6054 ; IN THE START UP QUESTIONS.
6055 ; THE DONE INTERRUPT IS GENERATED BY SETTING THE INTERRUPT ENABLE
6056 ; BIT AND THE A/D START BIT.
6057 ; THE ERROR INTERRUPT IS GENERATED BY SETTING THE A/D START BIT TWICE.
6058 ; A TIME OUT IS GENERATED IF THE INTERRUPT HAS NOT OCCURED WITHIN THE
6059 ; ALLOWED TIMEOUT PERIOD.
6060 ;*****
6061 033674          BGNTST
        033674
6062 033674 004737 011714          CALL    SELECT          ;CALL SELECT ROUTINE
        033700 000404          .WORD   404              ;GIVE TEST PARAMETER (BASIC.AIP)
6064 033702 034524          TSHD6          ;GIVE TEST HEADER ADDRESS
6065 033704 103002          BCC     1$              ;BRANCH IF CARRY IS CLEARED
6066 033706          EXIT    TST              ;EXIT TEST IF CARRY WAS SET
        033706 104432          TRAP    C$EXIT          TRAP    C$EXIT
        033710 001242          .WORD   L10037          .WORD   L10037
6067 033712 005037 004144 1$: CLR    ITRCNT          ;CLEAR ITERATION COUNTER
6068 033716          SETVEC VEC,@INTSR,@PRI07 ;SET DONE VECTOR AND SERVICE ROUTINE
        033716 012746 000340          MOV     @PRI07,-(SP)
        033722 012746 017276          MOV     @INTSR,-(SP)
        033726 013746 003710          MOV     VEC,(SP)
        033732 012746 000003          MOV     @3,(SP)
        033736 104437          TRAP   C$SVEC          TRAP   C$SVEC
        033740 062706 000010          ADD    @10,SP
6069 033744 013702 003710          MOV    VEC,R2          ;GET DONE VECTOR
6070 033750 062702 000004          ADD    @4,R2          ;CREATE ERROR VECTOR (VEC.4)
6071 033754          SETVEC R2,@INTSR2,@PRI07 ;SET ERROR VEC. AND SERVICE ROUTINE
        033754 012746 000340          MOV     @PRI07,-(SP)
        033760 012746 017306          MOV     @INTSR2,-(SP)
        033764 010246          MOV     R2,(SP)
        033766 012746 000003          MOV     @3,(SP)
        033772 104437          TRAP   C$SVEC          TRAP   C$SVEC
        033774 062706 000010          ADD    @10,SP
6072 034000          ITRAC6: BGNSEG
        034000 104404          TRAP   C$BSEG
6073 034002          SETPRI @PRI07          ;DISABLE INTERRUPT AT THIS POINT
        034002 012700 000340          MOV     @PRI07,R0
        034006 104441          TRAP   C$SPRI
6074 034010 005037 004150          CLR    INTFLA          ;CLEAR INTERRUPT FLAG
6075 034014 005037 004152          CLR    INTFL2         ;CLEAR ERROR INTERRUPT FLAG
6076 034020 005777 147656          TST    @DAT           ;READ DAT TO CLEAR ERR.DONE IN CSA
6077 034024 005077 147654          CLR    @CSA          ;CLEAR CONTROL STATUS REGISTER
6078 034030 012701 000340          MOV    @PRI07,R1      ;;;LOAD R1 WITH PRIORITY NUMBER
6079 034034 012777 000100 147642          MOV    @100,@CSA     ;;;SET INTERRUPT ENABLE BIT
6080 034042 052777 000001 147634          BIS    @1,@CSA       ;;;START THE CONVERSION
6081 034050 012703 000036          MOV    @30,R3        ;;;SET UP TIME OUT COUNTER
6082 034054 004737 011514 10$: CALL    WT500          ;;;WAIT 500 US
6083 034060 032777 000200 147616          BIT    @200,@CSA     ;;;POLL THE DONE BIT
6084 034066 001010          BNE    20$           ;;;BRANCH IF DONE BIT WAS SET
6085 034070 005303          DEC    R3            ;;;DECREMENT TIMEOUT COUNTER
6086 034072 004737 012146          CALL   INSERT        ;;;SKIP BRANCH IF SFI FLAG SET
    
```

TEST 6: INTERNAL INTERRUPT LOGIC TEST ANALOGUE INPUT.

```

6087 034076 001366          BNE      10$
6088 034100          ERRSOFT 601,E601,EERG          ;;BRANCH IF 4 MS NOT REACHED
                                           ;;ERROR HANDLER
                                           TRAP      C$ERSOFT
                                           .WORD    601
                                           .WORD    E601
                                           .WORD    EERG
6089 034110          20$:   CKLOOP          ;;BRANCH TO BGNSEG
                                           TRAP      C$CLP1
6090 034112 104406          TST      INTFLA          ;DONE INTERRUPT OCCURRED ?
6091 034116 005737 004150  BNE      30$          ;BRANCH IF YES
6092 034120 001015          SUB      #40,R1          ;DECREMENT PRIORITY
6093 034124 162701 000040  SETPRI   R1             ;SET PRIORITY
                                           MOV      R1,R0
                                           TRAP      C$SPRI
6094 034130 020127 000100  CMP      R1,#PRI02      ;IS THE PRIORITY OVER 2?
6095 034134 004737 012146  CALL     INSERT          ;SKIP BRANCH IF SFI FLAG SET
6096 034140 001363          BNE      20$          ;IF YES, BRANCH
6097 034142          ERRSOFT 602,E602,EERG ;ERROR HANDLER
                                           TRAP      C$ERSOFT
                                           .WORD    602
                                           .WORD    E602
                                           .WORD    EERG
6098 034152          30$:   CKLOOP          ;BRANCH TO BGNSEG IF LOE IS SET
                                           TRAP      C$CLP1
6099 034154 104406 062701 000040  ADD      #40,R1          ;CORRECT PRI.FOR CMP
6100 034160 020137 003712  CMP      R1,PRI0        ;CHECK INTERRUPT PRIORITY
6101 034164 004737 012146  CALL     INSERT          ;SKIP BRANCH IF SFI FLAG SET
6102 034170 001430          BEQ      40$          ;BRANCH IF PRIORITY WAS CORRECT
6103          .REPT    5          ;SET UP DATA FOR ERROR MESSGAES
6104          ASR      R1          ;...
6105          .ENDR          ;...
6106 034204 010137 004064          MOV      R1,BAD          ;SET UP DATA FOR ERROR MESSAGE
6107 034210 013737 003712 004062  MOV      PRI0,GOOD      ;...
6108          .REPT    5          ;...
6109          ASR      GOOD          ;...
6110          .ENDR          ;...
6111 034242          ERRSOFT 603,E603,EER1 ;ERROR HANDLER
                                           TRAP      C$ERSOFT
                                           .WORD    603
                                           .WORD    E603
                                           .WORD    EER1
6112 034252          40$:   CKLOOP          ;BRANCH TO BGNSEG IF LOE IS SET
                                           TRAP      C$CLP1
6113 034254 017737 147424 004064  MOV      @CSA,BAD        ;GET CSA CONTENTS
6114 034262 022737 100300 004064  CMP      #100300,BAD     ;CHAVAI + IE + DONE SHOULD BE SET
6115 034270 004737 012146  CALL     INSERT          ;SKIP BRANCH IF SFI FLAG SET
6116 034274 001407          BEQ      50$          ;BRANCH IF YES
6117 034276 012737 100300 004062  MOV      #100300,GOOD    ;SET UP DATA FOR ERROR MESSAGES
6118 034304          ERRSOFT 604,E604,EER1 ;ERROR HANDLER
                                           TRAP      C$ERSOFT
                                           .WORD    604
                                           .WORD    E604
                                           .WORD    EER1
6119 034314          50$:   ENDSEG          ;
                                           10000$: TRAP      C$ESEG
6120 034314 104405

```

TEST 6: INTERNAL INTERRUPT LOGIC TEST ANALOGUE INPUT.

```

6121 ;NOW WE TEST THE ERROR INTERRUPT
6122
6123 034316 BGNSEG
6124 034316 104404 TRAP C$BSEG
6125 034320 005777 147356 TST @DAT ;READ DAT TO CLEAR ERR+DONE IN CSA
6126 034324 005737 004152 TST INTFL2 ;ERROR INTERRUPT OCCURRED ?
6127 034330 004737 012146 CALL INSERT ;SKIP BRANCH IF SFI FLAG SET
6128 034334 001404 BEQ 60$ ;BRANCH IF NO
034336 104457 ERRSOFT 605,E605,EERG ;ERROR HANDLER
034340 001135 TRAP C$ERSOFT
034342 035052 .WORD 605
034344 007724 .WORD E605
. WORD EERG
6129 034346 60$: CKLOOP ;
034346 104406 TRAP C$CLP1
6130 034350 013703 000036 MOV 30.,R3 ;SET TIMEOUT COUNTER
6131 034354 052777 000001 147322 BIS #1,@CSA ;START A CONVERSION (SET A/D BIT)
6132 034362 004737 011514 70$: CALL WT500 ;WAIT 500 US
6133 034366 032777 000200 147310 BIT #200,@CSA ;POLL THE DONE BIT
6134 034374 001010 BNE 80$ ;BRANCH IF DONE BIT WAS SET
6135 034376 005303 DEC R3 ;DECREMENT TIMEOUT COUNTER
6136 034400 004737 012146 CALL INSERT ;SKIP BRANCH IF SFI FLAG SET
6137 034404 001366 BNE 70$ ;BRANCH IF 4 MS NOT REACHED
6138 034406 ERRSOFT 606,E601,EERG ;ERROR HANDLER
034406 104457 TRAP C$ERSOFT
034410 001136 .WORD 606
034412 034605 .WORD E601
034414 007724 .WORD EERG
6139 034416 80$: CKLOOP ;
034416 104406 TRAP C$CLP1
6140 034420 052777 000001 147256 BIS #1,@CSA ;SET A/D START A SECOND TIME
6141 034426 004737 011522 CALL WT25 ;WAIT 25 US FOR INTERRUPT
6142 034432 005737 004152 TST INTFL2 ;ERROR INTERRUPT OCCURRED ?
6143 034436 004737 012146 CALL INSERT ;SKIP BRANCH IF SFI FLAG SET
6144 034442 001004 BNE 90$ ;BRANCH IF YES
6145 034444 ERRSOFT 607,E606,EERG ;ERROR HANDLER
034444 104457 TRAP C$ERSOFT
034446 001137 .WORD 607
034450 035102 .WORD E606
034452 007724 .WORD EERG
6146 034454 90$: CKLOOP ;
034454 104406 TRAP C$CLP1
6147 034456 005777 147220 TST @DAT ;READ DAT TO CLEAR ERR+DONE IN CSA
6148 034462 ENDSEG
034462 104405 10001$: TRAP C$ESEG
6149 034464 SETPRI #PRI07 ;DISABLE INTERRUPTS
034464 012700 000340 MOV #PRI07,R0
034470 104441 TRAP C$SPRI
6150 034472 005737 002242 TST QVP ;IS QUICK VERIFY PASS SELECTED?
6151 034476 001010 BNE EXQV6 ;IF YES, EXIT TEST
6152 034500 005237 004144 INC ITRCNT ;ITERATION COUNTER + 1
6153 034504 023737 004146 004144 CMP ITRDEF,ITRCNT ;DEFAULT ITERATION EXECUTED
6154 034512 001402 BEQ EXQV6 ;IF YES, EXIT TEST
6155 034514 000137 034000 JMP ITRAC6 ;IF NO, TEST ITERATION
6156 034520 EXQV6: EXIT TST ;
034520 104432 TRAP C$EXIT

```

TEST 6: INTERNAL INTERRUPT LOGIC TEST ANALOGUE INPUT.

```

034522 000430 .WORD L10037 .
6157
6158
6159 034524 045 123 062 TSHD6:: .NLIST BFX
6160 034605 124 111 115 E601: .ASCIZ /S2*INTERNAL INTERRUPT TEST ANALOGUE INPUT.*N/
6161 034670 116 117 040 E602: .ASCIZ \TIME OUT - DONE BIT IN CSA NOT SET AFTER A/D START\
6162 034751 120 122 111 E603: .ASCIZ \NO INTERRUPT AFTER SETTING EI + A/D START IN CSA\
6163 035002 103 123 101 E604: .ASCIZ /PRIORITY LEVEL INCORRECT/
6164 035052 105 122 122 E605: .ASCIZ /CSA CONTENTS INCORRECT AFTER CONVERSION/
6165 035102 116 117 040 E606: .ASCIZ /ERROR INTERRUPT OCCURED/
o166 .LIST BEX
6167 .EVEN
6168 035152 .LIST BEX
035152 L10037: TRAP C$ETST
035152 104401

```

TEST 7: INTERNAL LOGIC TEST - ANALOGUE OUTPUT.

```

6170 .SBTTL TEST 7: INTERNAL LOGIC TEST - ANALOGUE OUTPUT.
6171 ;*****
6172 ; TEST 7 - INTERNAL LOGIC TEST - ANALOGUE OUTPUT.
6173 ;
6174 ; THIS TEST PERFORMS A CONVERSION ON EACH AVAILABLE CHANNEL, LOADING THE
6175 ; DAT REGISTER AND CHECKING THAT THE CONVERSIONS ARE COMPLETED WITHIN THE
6176 ; ALLOWED TIMEOUT PERIOD ( READING THE READY BIT AFTER 150 US).
6177 ;*****
6178 035154 BGNTST
        035154
6179 035154 004737 011714 CALL SELECT ;CALL SELECT ROUTINE
6180 035160 000410 .WORD 410 ;GIVE TEST PARAMETER (BASIC.AOP)
6181 035162 035424 TSHD7 ;GIVE TEST HEADER ADDRESS
6182 035164 103515 BCS EXQV7 ;IF CARRY IS SET, EXIT TEST
6183 035166 005037 004144 CLR ITRCNT ;CLEAR ITERATION COUNTER
6184 035172 005002 ITRAC7: CLR R2 ;LOAD R2 WITH FIRST CHAN. NUMBER
6185 035174 012704 012525 MOV #12525,R4 ;SET UP DATA FOR DATA REGISTER
6186 035200 104404 10$ : BGNSEG
        035200 104404 TRAP C$BSEG
6187 035202 042777 003400 146474 BIC #3400,@CSA ;CLEAR CHANNEL BITS
6188 035210 050277 146470 BIS R2,@CSA ;LOAD CHANNEL NUMBER
6189 035214 017737 146464 004064 MOV @CSA,BAD ;GET CSA CONTENTS
6190 035222 012737 100200 004062 MOV #100200,GOOD ;LOAD GOOD DATA FOR COMPARISON
6191 035230 050237 004062 BIS R2,GOOD ;
6192 035234 042737 000040 004064 BIC #40,BAD ;MASK OUT OPL BIT
6193 035242 023737 004062 004064 CMP GOOD,BAD ;CHAVAI,READY SHOULD BE SET
6194 035250 004737 012146 CALL INSERT ;SKIP BRANCH IF SFI FLAG SET
6195 035254 001404 BEQ 20$ ;BRANCH IF YES
6196 035256 ERRSOFT 701,E701,EER1 ;ERROR HANDLER
        035256 104457 TRAP C$ERSOFT
        035260 001275 .WORD 701
        035262 035502 .WORD E701
        035264 007342 .WORD EER1
6197 035266 20$ : ENDSEG ;BRANCH TO BGNSEG IF LOE IS SET
        035266 104405 10000$:
        035270 006104 ROL R4 TRAP C$ESEG
6199 035272 BGNSEG ;CHANGE DATA FOR LOAD DAT REGISTER
        035272 104404 TRAP C$BSEG
6200 035274 010477 146402 MOV R4,@DAT ;LOAD DATA REGISTER
6201 035300 012703 000006 MOV #6,R3 ;LOAD WAIT COUNTER
6202 035304 004737 011522 30$ : CALL WT25 ;WAIT 25 US
6203 035310 005303 DEC R3 ;DECREMENT COUNTER
6204 035312 001374 BNE 30$ ;BRANCH IF NOT ZERO
6205 035314 017737 146364 004064 MOV @CSA,BAD ;GET CSA CONTENTS
6206 035322 042737 000040 004064 BIC #40,BAD ;MASK OUT OPL BIT
6207 035330 023737 004062 004064 CMP GOOD,BAD ;COMPARE GOOD AND BAD
6208 035336 004737 012146 CALL INSERT ;SKIP BRANCH IF SFI FLAG SET
6209 035342 001404 BEQ 40$ ;BRANCH IF YES
6210 035344 ERRSOFT 702,E702,EER1 ;ERROR HANDLER
        035344 104457 TRAP C$ERSOFT
        035346 001276 .WORD 702
        035350 035606 .WORD E702
        035352 007342 .WORD EER1
6211 035354 40$ : ENDSEG ;BRANCH TO BGNSEG IF LOE IS SET
        035354 104405 10001$:
        035354 104405 TRAP C$ESEG

```

TEST 7: INTERNAL LOGIC TEST - ANALOGUE OUTPUT.

```

6212 035356 000302          SWAB R2          ;SWAB HIGH AND LOW BYTE
6213 035360 120227 000003    CMPB R2,#3      ;ALL 4 CHANNELS EXECUTED?
6214 035364 001403          BEQ 60$        ;BRANCH IF YES
6215 035366 005202          INC R2         ;NEXT CHANNEL NUMBER
6216 035370 000302          SWAB R2         ;SWAB LOW AND HIGH BYTE
6217 035372 000702          BR 10$        ;PERFORM A CONV. WITH NEXT CHAN.
6218 035374 005737 002242    60$: TST QVP      ;IS QUICK VERIFY PASS SELECTED?
6219 035400 001007          BNE EXQV7     ;IF YES EXIT TEST
6220 035402 005237 004144    INC ITRCNT    ;ITERATION COUNTER + 1
6221 035406 023737 004146 004144  CMP ITRDEF,ITRCNT ;DEFAULT ITERATION EXECUTED
6222 035414 001401          BEQ EXQV7     ;IF YES, EXIT TEST
6223 035416 000665          BR ITRAC7     ;IF NO, TEST ITERATION
6224 035420          EXQV7: EXIT TST
        035420 104432
        035422 000274
6225
6226 035424 045 123 062 TSHD7: .NLIST BEX
6227 035502 103 123 101 E701: .ASCIZ /#S2#AINTERNAL LOGIC TEST ANALOGUE OUTPUT.#N/
6228 035565 050 111 107 .ASCII /CSA CONTENTS INCORRECT AFTER LOADING NEW CHANNEL /<12><15>
6229 035606 103 123 101 E702: .ASCIZ /((IGNORE OPL BIT)/
6230 035665 122 105 101 .ASCII /CSA CONTENTS INCORRECT AFTER LOADING DAT REG./<12><15>
6231 .LIST BEX
6232 .EVEN
6233 035716          ENDTST
        035716
        035716 104401
6234
6240
6241
6253

```

```

TRAP C$EXIT
WORD L10040 .
L10040: TRAP C$ETST

```

HARDWARE TESTS MACRO M1200 26 OCT 83 15:22 PAGE 68

TEST 2: INTERNAL LOGIC TEST ANALOGUE OUTPUT.

SEQ 0157

0.261 035720
0.261

ENDMOD

TEST 7: INTERNAL LOGIC TEST ANALOGUE OUTPUT.

```

6266 .TITLE HARDWARE TESTS
6312 035720 BGNMOD
6313
6314 .SBTTL TEST 8: DIGITAL INPUT LOOPBACK TEST WITH SELECTABLE DATA PATTERN PAIR.
6315 ;*****
6316 ; TEST 8 - DIGITAL INPUT LOOPBACK WITH SELECTABLE DATA PATTERN PAIR.
6317 ;
6318 ; DATA TRANSFERS ARE MADE BETWEEN THE MODULE UNDER TEST (IN THIS
6319 ; TEST A DIGITAL INPUT) AND THE MODULE SPECIFIED AS THE "OTHER" IN
6320 ; THE HARDWARE QUESTIONS (IN THIS TEST A DIGITAL OUTPUT). IF LOW
6321 ; LEVEL IS NOT SELECTED, ONE HUNDRED CYCLES ARE PERFORMED USING
6322 ; THE DATA PAIR AND DEBOUNCE PERIOD SPECIFIED IN THE SOFTWARE
6323 ; AND HARDWARE QUESTIONS. A DEBOUNCE PERIOD OF 10 MILLISECONDS IS
6324 ; THEN USED TO CHECK THAT THE DAT REGISTER DOES NOT CHANGE IN THE
6325 ; FIRST 2.5 MILLISECONDS.
6326 ;
6327 ; IF LOW LEVEL IS SELECTED, ONLY 4 CYCLES ARE PERFORMED AND THE
6328 ; DEBOUNCE FUNCTION IS NOT CHECKED.
6329 ;
6330 ; BY DEFAULT, THE DATA PAIR IS ALL ZEROS AND ALL ONES, BUT ANY
6331 ; PATTERN PAIR CAN BE SELECTED. IF THE TWO PATTERNS ARE IDENTICAL,
6332 ; A FIXED OUTPUT WILL RESULT.
6333 ;*****
6334 035720 BGNST 8.
        T8::
6335 035720 004737 011714 CALL SELECT ;CALL SELECT ROUTINE
6336 035724 002001 .WORD 2001 ;GIVE TEST PARAMETER
6337 035726 036570 TSMDB ;GIVE TEST HEADER ADDRESS
6338 035730 103002 BCC 18 ;IF CARRY IS CLEARED BRANCH
6339 035732 104432 EXIT T8T ;IF CARRY IS SET, EXIT TEST
        TRAP C8EXIT
        .WORD L10041 .
6340 035736 005037 004144 18: CLR ITRCNT ;CLEAR ITERATION COUNTER
6341 035742 013737 004154 036566 ITRAB: MOV CYCLE, SAV8 ;LOAD CYCLE COUNTER
6342 035750 005002 108: CLR R2 ;FLAG FOR PATTERN CHOICE
6343 035752 005737 003716 TST LOWLVL ;IS LOW LEVEL SELEC. IN P TABLE?
6344 035756 001402 BEQ 208 ;BRANCH IF NO
6345 035760 000137 036360 JMP LLPAB ;JUMP TO LOW LEVEL PART
6346 035764 013705 003720 208: MOV DEBOUNC, R5 ;GET DEBOUNCE FROM P TABLE
6347 035770 005205 INC R5 ;CREATE DEBOUNCE VALUE FOR MOD
6348 035772 042705 177774 BIC @177774, R5 ;ONLY BITS 1 AND 2 ARE USED
6349 035776 022737 000003 003720 CMP @3, DEBOUNC ;ALL DEBOUNCE PERIODS SELECTED ?
6350 036004 001002 BNE 308 ;BRANCH IF NO
6351 036006 012705 000001 MOV @1, R5 ;GET FIRST DEBOUNCE
6352 036012 110577 145662 308: MOVB R5, @MOD ;LOAD INPUT DEBOUNCE INTO MOD REGISTER
6353 036016 052777 000100 145654 BIS @100, @MOD ;SET MODULE LED BIT AGAIN
6354 036024 116503 004172 MOVB DBTAB(R5), R3 ;GET DEBOUNCE WAIT VALUE FROM TABLE
6355 036030 013701 002236 408: MOV PAT1, R1 ;GET FIRST PATTERN FROM P TABLE
6356 036034 104404 508: BGNSEG
        TRAP C8BSEG
6357 036036 010304 MOV R3, R4 ;LOAD WAIT COUNTER
6358 036040 012737 001441 007200 MOV @801, .ERRNBR ;ERROR NUMBER FOR WRITE SUBROU.
6359 036046 004737 016122 CALL WRITE ;CALL WRITE ROUTINE
6360 036052 103002 BCC 608 ;BRANCH IF NO ADDR. ERROR FOUND
6361 036054 104432 EXIT T8T ;EXIT TEST IF ADDRESSING ERROR
        TRAP C8EXIT
        .WORD L10041 .
036054 104432
036056 001016
    
```


TEST 8: DIGITAL INPUT LOOPBACK TEST WITH SELECTABLE DATA PATTE

```

6362 036060 063704 004166 60%: ADD OUTDE1,R4 ;ADD OPTO OUTPUT DEBOUNCE
6363 036064 032777 000001 145630 BIT #1,B0THMOD ;IS DEBOUNCE OF OUTPUT 500 US ?
6364 036072 001002 BNE 70% ;BRANCH IF YES
6365 036074 063704 004170 ADD OUTDE2,R4 ;IF NO ADD RLEAY DEBOUNCE
6366 036100 004737 011514 70%: JSR PC,WT500 ;WAIT 500 US
6367 036104 005304 DEC R4 ;DECREMENT DEBOUNCE WAIT COUNTER
6368 036106 001374 BNE 70% ;BRANCH IF COUNTER IS NOT ZERO
6369 036110 017737 145566 004064 MOV #DAT,BAD ;READ DIGITAL INPUT PATTERN
6370 036116 020137 004064 CMP R1,BAD ;CMP READ AND LOADED DATA
6371 036122 004737 012146 CALL INSERT ;SKIP BRANCH IF 'SFI' IS SET
6372 036126 001406 BEQ 80% ;BRANCH IF EQUAL
6373 036130 010137 004062 MOV R1,GOOD ;GET GOOD PATTERN
6374 036134 ERRSOF 802,E802,EER2 ;ERROR HANDLER
        TRAP C$ERSOFT
        .WORD 802
        .WORD E802
        .WORD EER2
6375 036144 80%: ENDSEG
        10000%: TRAP C$ESEG
        036144 104405
6376 036146 005702 TST R2 ;IS THE 2ND PATTERN USED
6377 036150 001004 BNE 90% ;BRANCH IF YES
6378 036152 005202 INC R2 ;INC FLAG TO SHOW 2ND PATTERN
6379 036154 013701 002240 MOV PAT2,R1 ;GET SECONO PATTERN FROM P TABLE
6380 036160 000725 BR 50% ;BRANCH TO OUTPUT LOOP
6381 036162 022737 000003 003720 90%: CMP #3,DBOUNC ;ALL DEBOUNCE SELECTED?
6382 036170 001004 BNE 100% ;BRANCH IF NO
6383 036172 005205 INC R5 ;POINT TO NEXT DEBOUNCE VALUE
6384 036174 022705 000004 CMP #4,R5 ;ALL DEBOUNCE PERIODS EXECUTED
6385 036200 001304 BNE 30% ;BRANCH IF NO
6386 036202 005337 036566 100%: DEC SAV8 ;DECREMENT CYCLE COUNTER
6387 036206 001260 BNE 10% ;BRANCH IF NO ZERO
6388
6389 ;NOW WE WILL TEST THAT THE DEBOUNCE TIME IS NOT FINISHED TOO FAST
6390
6391 036210 PSUE8: BGNSEG
        TRAP C$BSEG
        036210 104404
6392 036212 005001 CLR R1 ;GET VALUE FOR WRITE ROUTINE
6393 036214 012704 000062 MOV #50.,R4 ;WAIT COUNTER FOR CLEAR DAT REG.
6394 036220 012737 001443 007200 MOV #803.,ERRNBR ;LOAD ERROR NUMBER
6395 036226 004737 016122 JSR PC,WRITE ;CLEAR OUTPUT DAT REGISTER
6396 036232 103002 BCC 10% ;BRANCH IF NO ADDR. ERROR FOUND
6397 036234 EXIT TST ;EXIT TEST IF ADDRESSING ERROR
        TRAP C$EXIT
        .WORD L10041 .
        036234 104432
        036236 000636
6398 036240 004737 011514 10%: JSR PC,WT500 ;...
6399 036244 005304 DEC R4 ;...
6400 036246 001374 BNE 10% ;...
6401 036250 052777 000003 145422 BIS #3,AMOD ;LOAD INPUT DEBOUNCE OF 10 MS
6402 036256 012701 177777 MOV #177777,R1 ;LOAD VALUE FOR OUTPUT DAT REG.
6403 036262 012704 000004 MOV #4,R4 ;LOAD (2MS) WAIT COUNTER
6404 036266 012737 001444 007200 MOV #804.,ERRNBR ;LOAD ERROR NUMBER
6405 036274 004737 016122 JSR PC,WRITE ;SEND DATA
6406 036300 103002 BCC 20% ;BRANCH IF NO ADDR. ERROR FOUND
6407 036302 EXIT TST ;EXIT TEST IF ADDRESSING ERROR
        TRAP C$EXIT
        .WORD L10041 .
        036302 104432
        036304 000570

```

TEST 8: DIGITAL INPUT LOOPBACK TEST WITH SELECTABLE DATA PATTE

```

6408 036306 004737 011514          20$: JSR    PC,WT500      ;WAIT 500 US
6409 036312 005304                    DEC    R4          ;...
6410 036314 001374                    BNE    20$        ;BRANCH IF NOT FINISHED
6411 036316 017737 145360 004064    MOV    @DAT,BAD   ;READ INPUT DATA REG.
6412 036324 020137 004064          CMP    R1,BAD     ;DATA SHOULD NOT BE CHANGED
6413 036330 004737 012146          CALL   INSERT     ;SKIP BRANCH IF 'SFI' IS SET
6414 036334 001006                    BNE    30$        ;BRANCH IF OK
6415 036336 005037 004062          CLR    GOOD       ;SET UP DATA FOR ERROR HANDLER
6416 036342                    ERRSOFT 805,E803,EER2 ;ERROR HANDLER
                                TRAP   C$ERSOFT
                                .WORD  805
                                .WORD  E803
                                .WORD  EER2
                                TRAP   C$ESEG
6417 036352                    30$:  ENDSEG
                                ;
                                10001$: TRAP   C$ESEG
6418 036354 000137 036534          JMP    QVR8       ;SKIP LOW LEVEL PART
6419
6420
6421
                                ;THE FOLLOWING CODE WILL TEST THE LOW LEVEL (IF SELECTED) OF THE INPUT MODULE
6422 036360 013737 004156 036566  LLPA8: MOV    CYCLLS,SAVB   ;LOAD LOW LEVEL CYCLE COUNTER
6423 036366 052777 000002 145304    3IS    #2,@MOD    ;LOAD SMS INPUT DEBOUNCE
6424 036374 042777 000001 145276    BIC    #1,@MOD
6425 036402 052777 000010 145270    BIS    #10,@MOD
6426 036410 005002                    10$:  CLR    R2        ;SWITCH INPUT MODULE TO LLS
6427 036412 013701 002236          MOV    PAT1,R1   ;FLAG FOR PATTERN MARKING
6428 036416 013704 004162          20$:  MOV    LLWC,R4 ;GET FIRST PATTERN
6429 036422 012737 001446 007200    MOV    #806.,ERRNBR ;GET LOW LEVEL DEBOUNCE TIME
6430 036430                    BGNSEG          ;LOAD ERROR NUMBER
                                TRAP   C$BSEG
6431 036432 004737 016122          CALL   WRITE     ;CALL WRITE ROUTINE
6432 036436 103002                    BCC    30$        ;BRANCH IF NO ADDR. ERROR FOUND
6433 036440                    EXIT    TST       ;EXIT TEST IF ADDRESSING ERROR
                                TRAP   C$EXIT
                                .WORD  L10041
6434 036444 004737 011514          30$:  JSR    PC,WT500 ;WAIT 500 US
6435 036450 005304                    DEC    R4        ;DECREMENT WAIT COUNTER
6436 036452 001374                    BNE    30$        ;BRANCH IF COUNTER IS NOT ZERO
6437 036454 017737 145222 004064    MOV    @DAT,BAD   ;READ DIGITAL INPUT PATTERN
6438 036462 020137 004064          CMP    R1,BAD     ;CMP HEAD AND LOADED DATA
6439 036466 004737 012146          CALL   INSERT     ;SKIP BRANCH IF 'SFI' IS SET
6440 036472 001406                    BEQ    40$        ;BRANCH IF EQUAL
6441 036474 010137 004062          MOV    R1,GOOD   ;GET GOOD PATTERN
6442 036500                    ERRSOFT 807,E802,EER2 ;ERROR HANDLER
                                TRAP   C$ERSOFT
                                .WORD  807
                                .WORD  E802
                                .WORD  EER2
6443 036510                    40$:  ENDSEG
                                ;
                                10002$: TRAP   C$ESEG
6444 036512 005702                    TST    R2        ;WAS THE 2ND PATTERN USED?
6445 036514 001004                    BNE    50$        ;BRANCH IF YES
6446 036516 005202                    INC    R2        ;INC FLAG TO SHOW 2ND PATTERN
6447 036520 013701 002240          MOV    PAT2,R1   ;GET SECOND PATTERN FROM P TABLE
6448 036524 000734                    BR     20$        ;BRANCH TO OUTPUT LOOP
6449 036526 005337 036566          50$:  DEC    SAVB   ;IS CYCLE COUNTER OVER?

```

TEST 8: DIGITAL INPUT LOOPBACK TEST WITH SELECTABLE DATA PATTE

```

6450 036532 001326
6451 036534 005737 002242          QVR8:  BNE 10$          ;BRANCH IF NO
6452 036540 001010                    TST QVP          ;IS QUICK VERIFY PASS SELECTED?
6453 036542 005237 004144          BNE EXQV8       ;IF YES, EXIT TEST
6454 036546 023737 004146 004144  INC ITRCNT      ;ITERATION COUNTER . 1
6455 036554 001402                    CMP ITRDEF,ITRCNT ;DEFAULT ITERATION EXECUTED
6456 036556 000137 035742          BEQ EXQV8       ;IF YES, EXIT TEST
6457 036562                    JMP ITRAB        ;IF NO, TEST ITERATION
        036562 104432          EXQV8: EXIT TST          ;EXIT TEST
        036564 000310
                                TRAP C$EXIT
                                .WORD L10041 .
6458
6459
6460 036566 000000          SAV8: .WORD          ;
6461
6462
6463
6464 036570 045 123 062 TSHD8: .NLIST BEX
6465 036665 114 117 120 E802: .ASCIZ /*S2#ADIGITAL INPUT LOOPBACK TEST PATTERN PAIR SELECTABLE#N/
6466 036764 104 105 102 E803: .ASCIZ /LOPPED DATA IN DATA REGISTER OF DIGITAL INPUT MODULE INCORRECT/
6467 037015 104 101 124 .ASCII /DEBOUNCE FUNCTION ERROR/<12><15>
6468 .ASCIZ /DATA ACCEPTED BEFORE LOADED DEBOUNCE FINISHED/
6469 .LIST BEX
6470 .EVEN
6471 037074          ENDTST
        037074
        037074 104401          L10041: TRAP C$ETST

```

TEST 9: DIGITAL OUTPUT LOOPBACK TEST WITH SELECTABLE DATA PATT

```

6473 .SBTTL TEST 9: DIGITAL OUTPUT LOOPBACK TEST WITH SELECTABLE DATA PATTERN PAIR.
6474 ;*****
6475 ; TEST 9 DIGITAL OUTPUT LOOPBACK TEST - SELECTABLE DATA PATTERN PAIR.
6476 ;
6477 ;DATA TRANSFERS ARE MADE BETWEEN THE MODULE UNDER TEST (IN THIS TEST A
6478 ;DIGITAL OUTPUT) AND THE MODULE SPECIFIED AS THE 'OTHER' IN THE HARDWARE
6479 ;QUESTIONS (IN THIS TEST A DIGITAL INPUT). SEVERAL CYCLES
6480 ;ARE PERFORMED USING THE DATA PAIR FROM THE SW P-TABLE AND A DEBOUNCE
6481 ;PERIOD FOUND IN THE MOD REGISTER OF THE DIGITAL OUTPUT MODULE .
6482 ;FOR THE INPUT MODULE THE DEBOUNCE OF (500US) IS USED.
6483 ;BY DEFAULT, THE DATA PAIR IS ALL ZEROS AND ALL ONES,
6484 ;BUT ANY PATTERN PAIR CAN BE SELECTED. IF THE TWO PATTERNS ARE IDENTICAL,
6485 ;A FIXED OUTPUT WILL RESULT.
6486 ;IF A RELAY OUTPUT MODULE IS USED, A CHECK IS ALSO MADE THAT THE
6487 ;DAT REGISTER OF THE DIGITAL INPUT MODULE WILL NOT BE CHANGED
6488 ;TOO FAST AFTER LOADING THE OUTPUT DATA REGISTER.
6489 ;*****
6490 037076          BGNTS1
6491 037076          T9::
6492 037076 004737 011714 CALL SELECT          ;CALL SELECT ROUTINE
6493 037102 002002          .WORD 2002          ;GIVE TEST PARAMETER
6494 037104 037616          TSM09          ;GIVE TEST HEADER ADDRESS
6495 037106 103002          BCC 1$          ;IF CARRY IS CLEARED, BRANCH
6496 037110          EXIT TST          ;IF CARRY IS SET, EXIT TEST
6497 037110 104432          TRAP C$EXIT
6498 037112 001102          .WORD L10042 .
6499 037114 005037 004144 1$: CLR ITRCNT          ;CLEAR ITERATION COUNTER
6500 037120 013705 004154 ITRA9: MOV CYCLE,R5          ;LOAD CYCLE COUNTER
6501 037124 005002          10$: CLR R2          ;FLAG FOR PATTERN CHOICE
6502 037126 012737 001605 007200 MOV #901.,ERRNBR          ;LOAD ERROR NUMBER
6503 037134 004737 016326 CALL READ          ;LOAD ERROR NUMBER
6504 037140 103002          BCC 20$          ;TEST OTHER MODULE ADDRESS
6505 037142          EXIT TST          ;BRANCH IF NO ADDR. ERROR FOUND
6506 037142 104432          TRAP C$EXIT
6507 037144 001050          .WORD L10042 .
6508 037146 052777 000001 144546 20$: BIS #1,@OTHMOD          ;LOAD 500 US INPUT DEBOUNCE
6509 037154 142777 000002 144540          ;...
6510 037162 012703 000001          MOV #1,R3          ;LOAD INPUT DEBOUNCE COUNTER
6511 037166 032777 000001 144504          BIT #1,@MOD          ;FIND DEBOUNCE OF OUTPUT MODULE
6512 037174 001003          BNE 30$          ;BRANCH IF RTO IS SET (500 US)
6513 037176 063703 004170          ADD OUTDE2,R3          ;ADD RELAY OUTPUT MODULE DEB
6514 037202 000402          BR 40$          ;BRANCH OVER NEXT COMMAND
6515 037204 063703 004166          30$: ADD OUTDE1,R3          ;ADD OPTP OUTPUT DEB.
6516 037210 013701 002236          40$: MOV PAT1,R1          ;GET FIRST PATTERN
6517 037214 010304          50$: MOV R2,R4          ;SAVE WAIT COUNTER VALUE
6518 037216 010177 144460          MOV R1,@DAT          ;LOAD OUTPUT DATA REGISTER
6519 037222 004737 011514          60$: JSR PC,W500          ;WAIT 500 US
6520 037226 005304          DEC R4          ;DECREMENT WAIT COUNTER
6521 037230 001374          BNE 60$          ;BRANCH IF COUNTER IS NOT ZERO
6522 037232 017737 144444 004064          MOV @DAT,BAD          ;READ LOADED DATA BACK
6523 037240 020137 004064          CMP R1,BAD          ;ARE THE LOADED DATA STILL THERE?
6524 037244 004737 012146          CALL INSERT          ;SKIP BRANCH IF SFI IS SET
6525 037250 001406          BEQ 70$          ;BRANCH IF YES
6526 037252 010137 004062          MOV R1,GOOD          ;SET UP DATA FOR ERROR REPORT
6527 037256          ERRSOFT 902,E902,EER2          ;ERROR HANDLER
6528 037260          TRAP C$ERRSOFT
6529          .WORD 902
    
```

TEST 9: DIGITAL OUTPUT LOOPBACK TEST WITH SELECTABLE DATA PATT

```

037262 037714
037264 007400 .WC D E902
6523 037266 012737 001607 007200 70$: MOV #903.,FRRNBR ;LOAD ERROR NUMBER .WORD EER2
6524 037274 004737 016326 CALL READ ;READ DATA REG. OF INPUT MODULE
6525 037300 103002 BCC 80$ ;BRANCH IF NO ADDR. ERROR FOUND
6526 037302 EXIT TST ;EXIT TEST IF ADDRESSING ERROR
037302 104432 TRAP C$EXIT
037304 000710 .WORD L10042
6527 037306 020137 004064 80$: CMP R1,BAD ;CMP READ AND LOADED DATA
6528 037312 004737 012146 CALL INSERT ;SKIP BRANCH IF 'SFI' IS SET
6529 037316 001406 BEQ 90$ ;BRANCH IF EQUAL
6530 037320 010137 004062 MOV R1,GOOD ;GET GOOD PATTERN
6531 037324 ERRSOFT 904,E903,EER2 ;ERROR HANDLER
037324 104457 TRAP C$ERSOFT
037326 001610 .WORD 904
037330 040017 .WORD E903
037332 007400 .WORD EER2
6532 037334 005702 90$: TST R2 ;IS THE 2ND PATTERN USED?
6533 037336 001004 BNE 100$ ;BRANCH IF YES
6534 037340 005202 INC R2 ;INC FLAG TO SHOW 2ND PATTERN
6535 037342 013701 002240 MOV PAT2,R1 ;GET SECOND PATTERN FROM P TABLE
6536 037346 000722 BR 50$ ;BRANCH TO OUTPUT LOOP
6537 037350 005305 100$: DEC R5 ;ALL CYCLES PERFORMED?
6538 037352 001264 BNE 10$ ;BRANCH IF NO
6539
6540 ;NOW WE WILL TEST THAT THE OUTPUT DEBOUNCE TIME IS NOT FINISHED TOO FAST
6541 ;ONLY IF WE HAVE A RELAY OUTPUT (5 MS DEBOUNCE).
6542
6543 037354 BGNSEG
037354 104404 TRAP C$BSEG
6544 037356 032777 000001 144314 BIT #1,@MOD ;IS THE DEBOUNCE OF OUTPUT 500 US
6545 037364 001076 BNE 170$ ;SKIP THE FOLLOWING PART IF YES
6546 037366 012777 177777 144306 MOV #177777,@DAT ;LOAD OUTPUT MODULE DAT REGISTER
6547 037374 010304 MOV R3,R4 ;GET IN AND OUTPUT DEBOUNCE
6548 037376 004737 011514 110$: JSR PC,WT500 ;INPUT DAT REGISTER WILL ALSO
6549 037402 005304 DEC R4 ;BE LOADED
6550 037404 001374 BNE 110$ ;...
6551 037406 005077 144270 CLR @DAT ;CLEAR OUTPUT DATA REGISTER
6552 037412 012704 000002 MOV #2,R4 ;LOAD WAIT COUNTER
6553 037416 004737 011522 120$: JSR PC,WT25 ;WAIT 25 US
6554 037422 005304 DEC R4 ;...
6555 037424 001374 BNE 120$ ;BRANCH IF NOT FINISHED
6556 037426 012737 001611 007200 MOV #905.,ERRNBR ;ERROR NUMBER FOR READ ROUT.
6557 037434 004737 016326 CALL READ ;READ LOOPED DATA
6558 037440 103002 BCC 130$ ;BRANCH IF NO ADDR. ERROR FOUND
6559 037442 EXIT TST ;EXIT TEST IF ADDRESSING ERROR
037442 104432 TRAP C$EXIT
037444 000550 .WORD L10042
6560 037446 022737 177777 004064 130$: CMP #177777,BAD ;DATA REG OF INPUT SHOULD NOT CHANGE
6561 037454 004737 012146 CALL INSERT ;SKIP BRANCH IF 'SFI' IS SET
6562 037460 001407 BEQ 140$ ;BRANCH IF YES
6563 037462 012737 177777 004062 MOV #177777,GOOD ;SET UP DATA FOR ERROR HANDLER
6564 037470 ERRSOFT 906,E904,EER2 ;ERROR HANDLER
037470 104457 TRAP C$ERSOFT
037472 001612 .WORD 906
037474 040074 .WORD E904
037476 007400 .WORD EER2

```

TEST 9: DIGITAL OUTPUT LOOPBACK TEST WITH SELECTABLE DATA PATT

```

6565 037500          140$: CKLOOP          ;
      037500 104406          ;                                TRAP  C$CLP1
6566 037502 010304          ;LOAD WAIT COUNTER
6567 037504 004737 011514 150$: JSR      PC,WT500 ;WAIT FOR 500 US
6568 037510 005304          ;
6569 037512 001374          ;
6570 037514 012737 001613 007200 BNE     150$ ;BRANCH IF NOT FINISHED
6571 037522 004737 016326 MOV     #907.,ERRNBR ;LOAD ERROR NUMBER
6572 037526 103002          CALL    READ ;READ DATA REG. OF INPUT MODULE
6573 037530          104432          ;BRANCH IF NO ADDR. ERROR FOUND
      037532 000462          ;EXIT TEST IF ADDRESSING ERROR
      037532 000462          ;                                TRAP  C$EXIT
6574 037534 005737 004064 160$: TST     BAD ;OUT-INPUT DATA SHOULD BE EQUAL
6575 037540 004737 012146 CALL    INSERT ;SKIP BRANCH IF 'SFI' IS SET
6576 037544 001406          BEQ     170$ ;BRANCH IF EQUAL (ZERO)
6577 037546 005037 004062 CLR     GOOD ;GET GOOD PATTERN
6578 037552 104457          ERRSOFT 908,E903,EER2 ;ERROR HANDLER
      037554 001614          ;                                TRAP  C$ERSOFT
      037556 040017          ;                                .WORD  908
      037560 007400          ;                                .WORD  E903
6579 037562          170$: ENDSEG          ;                                .WORD  EER2
      037562          10000$:          ;
      037562 104405          ;                                TRAP  C$ESEG
6580 037564 005737 002242 TST     QVP ;IS QUICK VERIFY PASS SELECTED?
6581 037570 001010          BNE     EXQV9 ;IF YES, EXIT TEST
6582 037572 005237 004144 INC     ITRCNT ;ITERATION COUNTER + 1
6583 037576 023737 004146 004144 CMP     ITRDEF,ITRCNT ;DEFAULT ITERATION EXECUTED
6584 037604 001402          BEQ     EXQV9 ;IF YES, EXIT TEST
6585 037606 000137 037120 JMP     ITRA9 ;IF NO, TEST ITERATION
6586 037612          EXQV9: EXIT    TST ;EXIT TEST
      037612 104432          ;                                TRAP  C$EXIT
      037614 000400          ;                                .WORD  L10042-.
6587
6588
6589
6590 037616          045    123    062 TSHD9: .NLIST BEX
6591 037714          104    101    124 E902: .ASCIZ /#S2#DIGITAL OUTPUT LOOPBACK TEST PATTERN PAIR SELECTABLE#N/
6592 037777          101    106    124 .ASCIZ /DATA REGISTER OF DIGITAL OUTPUT MODULE INCORRECT /<12><15>
6593 040017          122    105    103 E903: .ASCIZ /AFTER READ BACK/
6594 040074          104    105    102 E904: .ASCIZ /RECEIVED DATA INCORRECT CHECK OUTPUT LOGIC/
6595 040125          104    101    124 .ASCIZ /DEBOUNCE TIME INCORRECT/<12><15>
6596 .LIST BEX
6597 .EVEN
6598
6599 040214          ENDTST
      040214
      040214 104401          ;                                L10042:
          ;                                TRAP  C$ETST

```

TEST 10: DIGITAL INPUT LOOPBACK TEST RANDOM PATTERN

```

6601 .SBTTL TEST 10: DIGITAL INPUT LOOPBACK TEST RANDOM PATTERN
6602 ;*****
6603 ; TEST 10 DIGITAL LOOPBACK TEST WITH RANDOM PATTERN AND RANDOM OR
6604 ; SELECTABLE DEBOUNCE PERIOD.
6605 ;
6606 ; THIS TEST CHECKS THE DATA TRANSFER BETWEEN INPUT AND OUTPUT
6607 ; MODULES. THE OUTPUT MODULE IS THAT SPECIFIED AS THE "OTHER" IN
6608 ; THE HARDWARE QUESTIONS. SEVERAL CYCLES ARE PERFORMED USING DATA
6609 ; GENERATED BY A RANDOM PATTERN GENERATOR WITHIN THE PROGRAM.
6610 ;
6611 ; IF LOW LEVEL TESTING WAS NOT SELECTED IN THE HARDWARE QUESTIONS,
6612 ; THE SELECTED DEBOUNCE PERIOD IS USED. IF "ALL" WAS SPECIFIED,
6613 ; THE PERIOD IS SELECTED AT RANDOM FROM THE 3 ALLOWED VALUES.
6614 ;*****
6615 040216 BGNTST
        040216 T10::
6616 040216 004737 011714 CALL SELECT ;CALL SELECT ROUTINE
6617 040222 002001 .WORD 2001 ;GIVE TEST PARAMETER
6618 040224 040676 TSHD10 ;GIVE TEST HEADER ADDRESS
6619 040226 103002 BCC 1$ ;IF CARRY IS CLEARED, BRANCH
6620 040230 EXIT TST ;IF CARRY IS SET, EXIT TEST
        040230 104432 TRAP C$EXIT
        040232 000642 .WORD L10043
6621 040234 005037 004144 1$: CLR ITRCNT ;CLEAR ITERATION COUNTER
6622 040240 013702 004160 ITRA10: MOV CYCRAD,R2 ;LOAD CYCLE COUNTER
6623 040244 005737 003716 TST LOWLVL ;IS LOW LEVEL SELEC. IN P-TABLE?
6624 040250 001402 BEQ 10$ ;BRANCH IF NO
6625 040252 000137 040504 JMP LLPA10 ;JUMP TO LOW LEVEL PART
6626 040256 013705 003720 10$: MOV DBOUNC,R5 ;GET DEBOUNCE FROM P TABLE
6627 040262 005205 INC R5 ;CREATE DEBOUNCE VALUE FOR MOD
6628 040264 042705 177774 BIC #177774,R5 ;WE ONLY USE BITS 1 AND 2
6629 040270 022737 000003 003720 CMP #3,DBOUNC ;ALL DEBOUNCE PERIODS SELECTED ?
6630 040276 001002 BNE 30$ ;BRANCH IF NO
6631 040300 012705 000001 20$: MOV #1,R5 ;GET FIRST DEBOUNCE
6632 040304 110577 143370 30$: MOVB R5,@MOD ;LOAD DEBOUNCE INTO MOD REGISTER
6633 040310 052777 000100 143362 BIS #100,@MOD ;SWITCH ON THE MODULE LED AGAIN
6634 040316 116503 004172 MOVB DBTAB(R5),R3 ;GET WAIT VALUE FROM TABLE
6635 040322 104404 40$: BGNSEG
        040322 104404 TRAP C$BSEG
6636 040324 013701 016574 MOV RB,R1 ;GET FIRST RANDOM PATTERN
6637 040330 010304 50$: MOV R3,R4 ;SAVE WAIT COUNTER VALUE
6638 040332 012737 001751 007200 MOV #1001,,ERRNBR ;LOAD ERROR NUMBER FOR SUBROU.
6639 040340 004737 016122 JSR PC,WRITE ;CALL WRITE ROUTINE
6640 040344 103002 BCC 60$ ;BRANCH IF NO ADDR. ERROR FOUND
6641 040346 EXIT TST ;EXIT TEST IF ADDRESSING ERROR
        040346 104432 TRAP C$EXIT
        040350 000524 .WORD L10043
6642 040352 063704 004166 60$: ADD OUTDE1,R4 ;ADD OPTO OUTPUT DEBOUNCE
6643 040356 032777 000001 143336 BIT #1,@OTHMOD ;IS DEBOUNCE OF OUTPUT 500 US ?
6644 040364 001002 BNE 70$ ;BRANCH IF YES
6645 040366 063704 004170 ADD OUTDE2,R4 ;IF NO ADD RELAY DEBOUNCE
6646 040372 004737 011514 70$: JSR PC,WT500 ;WAIT 500 US
6647 040376 005304 DEC R4 ;DECREMENT WAIT COUNTER
6648 040400 001374 BNE 70$ ;BRANCH IF COUNTER IS NOT ZERO
6649 040402 017737 143274 004064 MOV @DAT,BAD ;READ DIGITAL INPUT PATTERN
6650 040410 020137 004064 CMP R1,BAD ;CMP READ AND LOADED DATA
6651 040414 004737 012146 CALL INSERT ;SKIP BRANCH IF SFI IS SET

```

TEST 10: DIGITAL INPUT LOOPBACK TEST - RANDOM PATTERN

```

6652 040420 001406          BEQ      80$          ;BRANCH IF EQUAL
6653 040422 010137 004062    MOV      R1,GOOD     ;GET GOOD PATTERN
6654 040426          ERR$OFT 1002,E1002,EER2 ;ERROR HANDLER
        040426 104457          TRAP    C$ERSOFT
        040430 001752          .WORD  1002
        040432 040762          .WORD  E1002
        040434 007400          .WORD  EER2
6655 040436          80$:   ENDSEG
        040436          10000$: TRAP    C$ESEG
        040436 104405
6656 040440 004737 016534    CALL    RANDOM       ;GENERATE NEXT PATTERN
6657 040444 022737 000003 003720    CMP     #3,DBOUNC   ;ALL DEBOUNCE REQUESTED ?
6658 040452 001010          BNE     90$         ;BRANCH IF NO
6659 040454 005205          INC     R5          ;NEXT DEBOUNCE
6660 040456 022705 000004    CMP     #4,R5       ;ALL DEBOUNCE PERIODS EXECUTED?
6661 040462 001310          BNE     30$         ;BRANCH IF NO
6662 040464 005302          DEC     R2          ;ALL CYCLES PERFORMED ?
6663 040466 001304          BNE     20$         ;BRANCH IF NO
6664 040470 000137 040644    JMP     QVR10       ;SKIP LOW LEVEL PART
6665 040474 005302 90$:   DEC     R2          ;ALL CYCLES PERFORMED ?
6666 040476 001311          BNE     40$         ;BRANCH IF NO
6667 040500 000137 040644    JMP     QVR10       ;SKIP LOW LEVEL PART
6668
6669          ;THIS PART WILL TEST THAT THE LOW LEVEL SELECT WILL WORK WITH RANDOM
6670          ;PATTERN. THE DEBOUNCE OF THE DIGITAL INPUT MODULE IS FIXED AT 5 MS
6671
6672 040504 052777 000002 143166 LLPA10: BIS     #2,@MOD   ;LOAD A DEBOUNCE OF 5 MS
6673 040512 042777 000001 143160    BIC     #1,@MOD   ;CLEAR DEBOUNCE OF 5 US
6674 040520 052777 000010 143152    BIS     #10,@MOD  ;SWITCH INPUT MODULE TO LLS
6675 040526 013702 004156          MOV     CYCLLS,R2  ;LOAD CYCLE COUNTER
6676 040532          BGNSEG
        040532 104404          TRAP    C$BSEG
6677 040534 013701 016574 10$:   MOV     RB,R1       ;LOAD DATA
6678 040540 013704 004162          MOV     LLWC,R4    ;LOAD LLS WAIT COUNTER
6679 040544 012737 001753 007200    MOV     #1003,ERRNBR ;LOAD ERROR NUMBER
6680 040552 004737 016122          JSR     PC,WRITE   ;SEND DATA AND ADD OUTPUT DEBOU.
6681 040556 103002          BCC     20$         ;BRANCH IF NO ADDR. ERROR FOUND
6682 040560          EXIT    TST       ;EXIT TEST IF ADDRESSING ERROR
        040560 104432          TRAP    C$EXIT
        040562 000312          .WORD  L10043
6683 040564 004737 011514 20$:   JSR     PC,WT500   ;WAIT 500 US
6684 040570 005304          DEC     R4
6685 040572 001374          BNE     20$         ;BRANCH IF NOT FINISHED
6686 040574 017737 143102 004064    MOV     @DAT,BAD   ;READ INPUT DATA
6687 040602 020137 004064          CMP     R1,BAD    ;DATA SHOULD NOT BE CHANGED
6688 040606 004737 012146          CALL    INSERT     ;SKIP BRANCH IF SFI IS SET
6689 040612 001406          BEQ     30$         ;BRANCH IF OK
6690 040614 010137 004062          MOV     R1,GOOD   ;SET UP DATA FOR ERROR HANDLER
6691 040620          ERR$OFT 1004,E1002,EER2 ;ERROR HANDLER
        040620 104457          TRAP    C$ERSOFT
        040622 001754          .WORD  1004
        040624 040762          .WORD  E1002
        040626 007400          .WORD  EER2
6692 040630          30$:   CKLOOP
        040630 104406          TRAP    C$CLP1
6693 040632 004737 016534    CALL    RANDOM
6694 040636 005302          DEC     R2
;CREATE NEXT PATTERN
;IS CYCLE COUNTER OVER?

```


TEST 10: DIGITAL INPUT LOOPBACK TEST RANDOM PATTERN

```

6695 040640 001335          BNE      10$          ;BRANCH IF NO
6696 040642          ENDSEG
        040642          10001$: TRAP      C$ESEG
        040642 104405
6697 040644 005737 002242    QVR10:  TST      QVP          ;IS QUICK VERIFY PASS SELECTED?
6698 040650 001010          BNE      EXQV10      ;IF YES, EXIT TEST
6699 040652 005237 004144    INC      ITRCNT      ;ITERATION COUNTER + 1
6700 040656 023737 004146 004144  CMP      ITRDEF,ITRCNT ;DEFAULT ITERATION EXECUTED
6701 040664 001402          BEQ      EXQV10      ;IF YES, EXIT TEST
6702 040666 000137 040240    JMP      ITR10
6703 040672          EXQV10: EXIT    TST
        040672 104432          TRAP      C$EXIT
        040674 000200          .WORD    L10043 .
6704
6705
6706          .NLIST    BEX
6707 040676          045      123      062    TSHD10: .ASCIZ  /S2ADIGITAL INPUT LOOPBACK TEST RANDOM PATTERN/
6708 040762          104      111      107    E1002:  .ASCII  /DIGITAL INPUT DATA REGISTER INCORRECT /<12><15>/
6709 041032          114      117      101    .ASCIZ  /LOADED AND READ DATA NOT THE SAME/
6710          .LIST    BEX
6711          .EVEN
6712
6713 041074          ENDTST
        041074          L10043: TRAP      C$ETST
        041074 104401

```

TEST 11: DIGITAL OUTPUT LOOPBACK TEST RANDOM PATTERN

```

6715 .SBTTL TEST 11: DIGITAL OUTPUT LOOPBACK TEST - RANDOM PATTERN
6716 ;*****
6717 ; TEST 11 - DIGITAL OUTPUT LOOPBACK TEST WITH RANDOM PATTERN
6718 ;
6719 ; THIS TEST CHECKS THE DATA OUTPUT LINES OF DIGITAL OUTPUT MODULES
6720 ; BY READING THE OUTPUT DATA WITH AN INPUT MODULE. THE INPUT MODULE IS THAT
6721 ; SPECIFIED AS THE 'OTHER' IN THE HARDWARE QUESTIONS. 500 CYCLES ARE
6722 ; PERFORMED USING DATA GENERATED BY A RANDOM PATTERN GENERATOR WITHIN THE
6723 ; PROGRAM. THE TIMEOUT PERIOD IS BASED ON THE DEBOUNCE PERIOD FOUND IN THE
6724 ; MOD REGISTER OF THE DIGITAL OUTPUT MODULE.
6725 ; THE DIGITAL INPUT MODULE IS ALWAYS LOADED WITH A DEBOUNCE OF 500 US.
6726 ;*****
6727 041076          BGNTST
        041076
6728 041076 004737 011714          CALL SELECT          ;CALL SELECT ROUTINE
6729 041102 002002          .WORD 2002          ;GIVE TEST PARAMETER
6730 041104 041400          TSHD11          ;GIVE TEST HEADER ADDRESS
6731 041106 103002          BCC 1$          ;IF CARRY IS CLEARED, BRANCH
6732 041110          EXIT TST          ;IF CARRY IS SET, EXIT TEST
        041110 104432          TRAP C$EXIT
        041112 000560          .WORD L10044
6733 041114 005037 004144          1$: CLR ITRCNT          ;CLEAR ITERATION COUNTER
6734 041120 013702 004160          ITR11: MOV CYCRAD,R2          ;LOAD CYCLE COUNTER
6735 041124 012737 002115 007200          MOV #1101.,ERRNBR          ;LOAD ERROR NUMBER
6736 041132 004737 016326          CALL READ          ;TEST OTHER MODULE ADDRESS (INPUT)
6737 041136 103002          BCC 10$          ;BRANCH IF NO ADDR. ERROR FOUND
6738 041140          EXIT TST          ;EXIT TEST IF ADDRESSING ERROR
        041140 104432          TRAP C$EXIT
        041142 000530          .WORD L10044
6739 041144 152777 000001 142550          10$: BISB #1,@OTHMOD          ;SET 500 US DEBOUNCE IN INPUT
6740 041152 042777 000002 142542          BIC #2,@OTHMOD          ;CLEAR 5 MS DEBOUNCE IN INPUT MOD
6741 041160 012703 000001          MOV #1,R3          ;LOAD WAIT COUNTER WITH INPUT DEB.
6742 041164 032777 000001 142506          BIT #1,@MOD          ;FIND DEBOUNCE OF OUTPUT MODULE
6743 041172 001003          BNE 20$          ;BRANCH IF RTO IS SET (500 US)
6744 041174 063703 004170          ADD OUTDE2,R3          ;ADD RELAY OUTPUT MODULE DEB.
6745 041200 000402          BR 30$          ;
6746 041202 063703 004166          20$: ADD OUTDE1,R3          ;ADD DEBOUNCE OF OPTO OUTPUT MODULE
6747 041206 013701 016574          30$: MOV RB,R1          ;GET FIRST RANDOM PATTERN
6748 041212          BGNSEG
        041212 104404          TRAP C$BSEG
6749 041214 010304          40$: MOV R3,R4          ;SAVE WAIT COUNTER VALUE
6750 041216 010177 142460          MOV R1,@DAT          ;LOAD OUTPUT DATA REGISTER
6751 041222 004737 011514          50$: JSR PC,WT500          ;WAIT 500 US
6752 041226 005304          DEC R4          ;DECREMENT WAIT COUNTER
6753 041230 001374          BNE 50$          ;BRANCH IF COUNTER IS NOT ZERO
6754 041232 017737 142444 004064          MOV @DAT,BAD          ;READ LOADED DATA BACK
6755 041240 020137 004064          CMP R1,BAD          ;LOADED DATA STILL THERE?
6756 041244 004737 012146          CALL INSERT          ;SKIP BRANCH IF 'SFI' IS SET
6757 041250 001406          BEQ 60$          ;BRANCH IF YES
6758 041252 010137 004062          MOV R1,GOOD          ;SET UP DATA FOR ERROR REPORT
6759 041256          ERRSOFT 1102,E1102,EER2          ;ERROR HANDLER
        041256 104457          TRAP C$ERSOFT
        041260 002116          .WORD 1102
        041262 041465          .WORD E1102
        041264 007400          .WORD EER2
6760 041266          60$: CKLOOP          ;
        041266 104406          TRAP C$CLP1
    
```

TEST 11: DIGITAL OUTPUT LOOPBACK TEST RANDOM PATTERN

```

6761 041270 012737 002117 007200      MOV    #1103.,ERRNBR      ;LOAD ERROR NUMBER
6762 041276 004737 016326                CALL   READ              ;READ D/O LINES WITH DI MODULE
6763 041302 103002                BCC    70$              ;BRANCH IF NO ADDR. ERROR FOUND
6764 041304                EXIT   TST              ;EXIT TEST IF ADDRESSING ERROR
      041304 104432
      041306 000364                TRAP   C$EXIT
6765 041310 020137 004064      70$:  CMP    R1,BAD        ;CMP READ AND LOADED DATA
6766 041314 004737 012146                CALL   INSERT           ;SKIP BRANCH IF 'SFI' IS SET
6767 041320 001406                BEQ    80$              ;BRANCH IF EQUAL
6768 041322 010137 004062      MOV    R1,GOOD          ;GET GOOD PATTERN
6769 041326 104457      ERRSOFT 1104,E1103,EER2 ;ERROR HANDLER
      041326 104457                TRAP   C$ERSOFT
      041330 002120                .WORD 1104
      041332 041603                .WORD E1103
      041334 007400                .WORD EER2
6770 041336      80$:  ENDSEG
      041336                10000$: TRAP   C$ESEG
      041336 104405
6771 041340 004737 016534      CALL   RANDOM           ;GENERATE NEXT PATTERN
6772 041344 005302                DEC    R2              ;ALL CYCLES PERFORMED ?
6773 041346 001317                BNE    30$              ;BRANCH IF NO
6774 041350 005737 002242      TST    QVP              ;IS QUICK VERIFY PASS SELECTED?
6775 041354 001007                BNE    EXQV11          ;IF YES, EXIT TEST
6776 041356 005237 004144      INC    ITRCNT          ;ITERATION COUNTER + 1
6777 041362 023737 004146 004144      CMP    ITRDEF,ITRCNT   ;DEFAULT ITERATION EXECUTED
6778 041370 001401                BEQ    EXQV11          ;IF YES, EXIT TEST
6779 041372 000652                BR     ITR11           ;IF NO, TEST ITERATION
6780 041374      EXQV11: EXIT   TST   ;EXIT TEST
      041374 104432                TRAP   C$EXIT
      041376 000274                .WORD  L10044-.
6781
6782      .NLIST  BEX
6783 041400      045      123      062  TSHD11: .ASCIZ /#S2#ADIGITAL OUTPUT LOOPBACK TEST  RANDOM PATTERN#N/
6784 041465      104      101      124  E1102: .ASCII  /DATA REGISTER OF DIGITAL OUTPUT MODULE INCORRECT /<12><15>
6785 041550      104      101      124      .ASCIZ  /DATA CHANGED AFTER LOADING/
6786 041603      114      117      101  E1103: .ASCIZ  /LOADED AND READ DATA NOT THE SAME  CHECK OUTPUT LOGIC/
6787      .LIST  BEX
6788      .EVEN
6789
6790 041672                ENDTST
      041672
      041672 104401                L10044: TRAP   C$ETST

```

TEST 12: DIGITAL INPUT LOOPBACK TEST SLIDING PATTERN

```

6792 .SBTTL TEST 12: DIGITAL INPUT LOOPBACK TEST SLIDING PATTERN
6793 ;*****
6794 ; TEST 12 - DIGITAL INPUT LOOPBACK TEST WITH SLIDING PATTERN
6795 ;
6796 ; THIS TEST TRANSFERS SLIDING ONES AND THEN SLIDING ZEROS BETWEEN
6797 ; OUTPUT MODULE AND INPUT MODULES. THE OUTPUT MODULE THAT SPECIFIED
6798 ; AS THE 'OTHER' IN THE HARDWARE QUESTIONS.
6799 ; THE TRANSFERS ARE PERFORMED USING THE LEVEL SELECT AND THE DEBOUNCE
6800 ; PERIOD SPECIFIED IN THE HARDWARE QUESTIONS.
6801 ;*****
6802 041674 BGNST
041674
6803 041674 004737 011714 CALL SELECT ;CALL SELECT ROUTINE
6804 041700 002001 .WORD 2001 ;GIVE TEST PARAMETER
6805 041702 042572 TSMO12 ;GIVE TEST HEADER ADDRESS
6806 041704 103002 BCC 1$ ;IF CARRY IS CLEARED, BRANCH
6807 041706 EXI' TST ;IF CARRY IS SET, EXIT TEST
041706 104432 TRAP C$EXIT
041710 001064 .WORD L10045
6808 041712 005037 004144 1$: CLR ITRCNT ;CLEAR ITERATION COUNTER
6809 041716 013702 004156 ITRA12: MOV CYCLLS,R2 ;LOAD CYCLE COUNTER
6810 041722 005737 003716 TST LOWLVL ;IS LOW LEVEL SELEC. IN P TABLE
6811 041726 001402 BEQ 10$ ;BRANCH IF NO
6812 041730 000137 042270 JMP LLPA12 ;JUMP TO LOW LEVEL PART
6813 041734 013705 003720 10$: MOV DBOUNC,R5 ;GET DEBOUNCE FROM P TABLE
6814 041740 005205 INC R5 ;CREATE DEBOUNCE VALUE FOR MOD
6815 041742 042705 177774 BIC @177774,R5 ;WE ONLY USE BITS 1 AND 2
6816 041744 022737 000003 003720 CMP @3,DBOUNC ;ALL DEBOUNCE PERIODS SELECTED ?
6817 041754 001002 BNE 20$ ;BRANCH IF NO
6818 041756 012705 000001 20$: MOV @1,R5 ;GET FIRST DEBOUNCE
6819 041762 110577 141712 30$: MOVB R5,@MOD ;LOAD DEBOUNCE INTO MOD REGISTER
6820 041766 052777 000100 141704 BIS @100,@MOD ;SWITCH ON THE MODULE LED
6821 041774 012701 000001 MOV @1,R1 ;GET MASK FOR SLIDING ONES
6822 042000 40$: BGNSEG
042000 104404 TRAP C$BSEG
6823 042002 116503 004172 MOVB DBTAB(R5),R3 ;GET WAIT VALUE FROM TABLE
6824 042006 012737 002261 007200 MOV @1201.,ERRNBR ;LOAD ERROR NUMBER
6825 042014 004737 016122 JSR PC,WRITE ;CALL WRITE ROUTINE
6826 042020 103002 BCC 50$ ;BRANCH IF NO ADDR. ERROR FOUND
6827 042022 EXIT TST ;EXIT TEST IF ADDRESSING ERROR
042022 104432 TRAP C$EXIT
042024 000750 .WORD L10045
6828 042026 063703 004166 50$: ADD OUTDE1,R3 ;ADD OPTO OUTPUT DEBOUNCE
6829 042032 032777 000001 141662 BIT @1,@OTHMOD ;IS DEBOUNCE OF OUTPUT 500 US ?
6830 042040 001002 BNE 60$ ;BRANCH IF YES
6831 042042 063703 004170 ADD OUTDE2,R3 ;IF NO, ADD RELAY DEBOUNCE
6832 042046 010304 60$: MOV R3,R4 ;SAVE WAIT COUNTER VALUE
6833 042050 004737 011514 70$: JSR PC,WT500 ;WAIT 500 US
6834 042054 005304 DEC R4 ;DECREMENT WAIT COUNTER
6835 042056 001374 BNE 70$ ;BRANCH IF COUNTER IS NOT ZERO
6836 042060 017737 141616 004064 MOV @DAT,BAD ;READ DIGITAL INPUT PATTERN
6837 042066 020137 004064 CMP R1,BAD ;CMP READ AND LOADED DATA
6838 042072 004737 012146 CALL INSRT ;SKIP BRANCH IF SFI IS SET
6839 042076 001406 BEQ 80$ ;BRANCH IF EQUAL
6840 042100 010137 004062 MOV R1,GOOD ;GET GOOD PATTERN
6841 042104 ERRSOFT 1202,E1202,EEP? ;ERROR HANDLER
042104 104457 TRAP C$ERRSOFT

```

TEST 12: DIGITAL INPUT LOOPBACK TEST SLIDING PATTERN

```

042106 002262
042110 042660
042112 007400
6842 042114 80$: ENDSEG
042114
042114 104405
6843 042116 006301
6844 042120 103327
6845
6846
6847
6848 042122 012701 177776
6849 042126
042126 104404
6850 042130 010304
6851 042132 012737 002263 007200
6852 042140 004737 016122
6853 042144 103002
6854 042146
042146 104432
042150 000624
6855 042152 004737 011514
6856 042156 005304
6857 042160 001374
6858 042162 017737 141514 004064
6859 042170 020137 004064
6860 042174 004737 012146
6861 042200 001406
6862 042202 010137 004062
6863 042206
042206 104457
042210 002264
042212 042660
042214 007400
6864 042216 110$: ENDSEG
042216
042216 104405
6865 042220 006301
6866 042222 103002
6867 042224 005501
6868 042226 000737
6869 042230 022737 000003 003720 120$:
6870 042236 001010
6871 042240 005205
6872 042242 022705 000004
6873 042246 001245
6874 042250 005302
6875 042252 001241
6876 042254 000137 042540
6877 042260 005302
6878 042262 001246
6879 042264 000137 042540
6880
6881
6882
6883
6884

;THE FOLLOWING CODE IS FOR SENDING SLIDING ZEROS
90$: MOV #177776,R1 ;LOAD MASK FOR SLIDING ZEROS
BGNSEG
MOV R3,R4 ;SAVE WAIT COUNTER VALUE
MOV #1203,ERRNBR ;LOAD ERROR NUMBER
JSR PC,WRITE ;CALL WRITE ROUTINE
BCC 100$ ;BRANCH IF NO ADDR. ERROR FOUND
EXIT TST ;EXIT TEST IF ADDRESSING ERROR
TRAP C$EXIT
;WORD L10045

100$: JSR PC,WT500 ;WAIT 500 US
DEC R4 ;DECREMENT WAIT COUNTER
BNE 100$ ;BRANCH IF COUNTER IS NOT ZERO
MOV @DAT,BAD ;READ DIGITAL INPUT PATTERN
CMP R1,BAD ;CMP READ AND LOADED DATA
CALL INSERT ;SKIP BRANCH IF SFI IS SET
BEQ 110$ ;BRANCH IF EQUAL
MOV R1,GOOD ;GET GOOD PATTERN
ERRSOFT 1204,E1202,EER2 ;ERROR HANDLER
TRAP C$ERSOFT
;WORD 1204
;WORD E1202
;WORD EER2

110$: ENDSEG
10001$: TRAP C$ESEG

ASL R1 ;NEXT SLIDING ZEROS DATA
BCC 120$ ;BRANCH IF ALL DATA LINES WERE ZEROS
ADC R1 ;ADD THE CARRY AND REPEAT
BR 90$ ;WITH NEW DATA
120$: CMP #3,DBOUNC ;ALL DEBOUNCE SELECTED?
BNE 130$ ;BRANCH IF NO
INC R5 ;NEXT DEBOUNCE
CMP #4,R5 ;ALL DEBOUNCE PERIODS EXECUTED
BNE 30$ ;BRANCH IF NO
DEC R2 ;ALL CYCLES PERFORMED ?
BNE 20$ ;BRANCH IF NO
JMP QVR12 ;SKIP LOW LEVEL PART
130$: DEC R2 ;ALL CYCLES PERFORMED ?
BNE 40$ ;BRANCH IF NO
JMP QVR12 ;JUMP TO QUICK VERIFY ROUTINE

;THIS PART WILL TEST THAT THE LOW LEVEL SELECT WILL WORK WITH SLIDING
;PATTERNS. THE DEBOUNCE OF THE DIGITAL INPUT MODULE WILL FIX 5 MS
;BUT THE WAIT LOOP FOR LLS WILL BE 10 MS.

```

TEST 12: DIGITAL INPUT LOOPBACK TEST SLIDING PATTERN

```

6885
6886 042270 052777 000002 141402 LLPA12: BIS      #2, @MOD      ;LOAD AN INPUT DEBOUNCE OF 5 MS
6887 042276 042777 000001 141374      BIC      #1, @MOD
6888 042304 052777 000010 141366      BIS      #10, @MOD
6889 042312 013702 004156      MOV      CYCLLS, R2
6890 042316 013703 004162      10$:    MOV      LLWC, R3
6891 042322 012701 000001      MOV      #1, R1
6892 042326      BGNSEG
6893 042330 012737 002265 007200 20$:    MOV      #1205, ERRNBR
6894 042336 004737 016122      JSR      PC, WRITE
6895 042342 103002      BCC      30$
6896 042344      EXIT      TST
6897 042350 010304      30$:    MOV      R3, R4
6898 042352 004737 011514      40$:    JSR      PC, WT500
6899 042356 005304      DEC      R4
6900 042360 001374      BNE      40$
6901 042362 017737 141314 004064      MOV      @DAT, BAD
6902 042370 020137 004064      CMP      R1, BAD
6903 042374 004737 012146      CALL     INSERT
6904 042400 001406      BEQ      50$
6905 042402 010137 004062      MOV      R1, GOOD
6906 042406      ERRSOFT 1206, E1202, EER2
6907 042416 007400      50$:    CKLOOP
6908 042420 006301      ASL      R1
6909 042422 103342      BCC      20$
6910 042424      ENDSEG
6911 042426 012701 177776      60$:    MOV      #177776, R1
6912 042432 104404      BGNSEG
6913 042434 010304      MOV      R3, R4
6914 042436 012737 002267 007200      MOV      #1207, ERRNBR
6915 042444 004737 016122      JSR      PC, WRITE
6916 042450 103002      BCC      70$
6917 042452      EXIT      TST
6918 042456 004737 011514      70$:    JSR      PC, WT500
6919 042462 005304      DEC      R4
6920 042464 001374      BNE      70$
6921 042466 017737 141210 004064      MOV      @DAT, BAD
6922 042474 020137 004064      CMP      R1, BAD
6923 042500 004737 012146      CALL     INSERT
6924 042504 001406      BEQ      80$
6925 042506 010137 004062      MOV      R1, GOOD
6926 042512      ERRSOFT 1208, E1202, EER2
6927 042514 002270

```

TEST 12: DIGITAL INPUT LOOPBACK TEST SLIDING PATTERN

```

042516 042660
042520 007400
6927 042522 80$: ENDSEG
042522
042522 104405
6928 042524 006301
6929 042526 103002
6930 042530 005501
6931 042532 000737
6932 042534 005302
6933 042536 001267
6934 042540 005737 002242
6935 042544 001010
6936 042546 005237 004144
6937 042552 023737 004146 004144
6938 042560 001402
6939 042562 000137 041716
6940 042566
042566 104432
042570 000204
6941
6942
6943
6944 042572 045 123 062 TSHD12: .NLIST BEX
6945 042660 104 101 124 E1202: .ASCII /#S2#ADIGITAL INPUT LOOPBACK TEST - SLIDING PATTERN#N#
6946 042732 114 117 101 .ASCII /DATA REGISTER OF INPUT MODULE INCORRECT /<12><15>
6947 .LIST BEX
6948 .EVEN
6949
6950 042774
042774
042774 104401

```

.WORD E1202
.WORD EER2
10003\$: TRAP C#ESEG
;NEXT SLIDING ZERO DATA
;BRANCH IF ALL ZEROS WHERE DONE
;ADD THE CARRY
;AND REPEAT
;ALL CYCLES PERFORMED ?
;BRANCH IF NO
;IS QUICK VERIFY PASS SELECTED?
;IF YES EXIT TEST
;ITERATION COUNTER . 1
;DEFAULT ITERATION EXECUTED
;IF YES, EXIT TEST
;IF NO, TEST ITERATION
;EXIT TEST
TRAP C#EXIT
.WORD L10045 .
L10045: TRAP C#ETST

TEST 13: DIGITAL OUTPUT LOOPBACK TEST SLIDING PATTERN

```

6952 .SBTTL TEST 13: DIGITAL OUTPUT LOOPBACK TEST - SLIDING PATTERN
6953 ;*****
6954 ; TEST 13 - DIGITAL OUTPUT LOOPBACK TEST WITH SLIDING PATTERN
6955 ;
6956 ; THIS TEST CHECKS THE DATA OUTPUT LINES OF DIGITAL OUTPUT MODULES
6957 ; BY READING THE OUTPUT DATA WITH AN INPUT MODULE. THE INPUT MODULE IS
6958 ; THAT SPECIFIED AS THE 'OTHER' IN THE HARDWARE QUESTIONS. SEVERAL CYCLES ARE
6959 ; PERFORMED USING SLIDING ONES AND THEN SLIDING ZEROS.
6960 ; THE TIMEOUT IS DEPENDENT ON THE DEBOUNCE PERIOD SPECIFIED BY RT BITS
6961 ; IN THE MOD REGISTER OF THE DIGITAL OUTPUT MODULE.
6962 ; THE DIGITAL INPUT MODULE IS ALWAYS LOADED WITH A DEBOUNCE PERIOD OF 5 US.
6963 ;*****
6964 042776          BGNTST
        042776
6965 042776 004737 011714          CALL SELECT          ;CALL SELECT ROUTINE
6966 043002 002002          .WORD 2002          ;GIVE TEST PARAMETER
6967 043004 043450          TSHD13          ;GIVE TEST HEADER ADDRESS
6968 043006 103002          BCC 1$          ;IF CARRY IS CLEARED, BRANCH
6969 043010          EXIT TST          ;IF CARRY IS SET, EXIT TEST
        043010 104432          TRAP C$EXIT
        043012 000666          .WORD L10046
6970 043014 005037 004144          1$: CLR ITRCNT          ;CLEAR ITERATION COUNTER
6971 043020 013702 004156          ITRA13: MOV CYCLLS,R2      ;LOAD CYCLE COUNTER
6972 043024 012737 002425 007200  MOV #1301.,ERRNBR    ;LOAD ERROR NUMBER
6973 043032 004737 016326          CALL READ          ;TEST OTHER MODULE ADDRESS
6974 043036 103002          BCC 10$          ;BRANCH IF NO ADDR. ERROR FOUND
6975 043040          EXIT TST          ;EXIT TEST IF ADDRESSING ERROR
        043040 104432          TRAP C$EXIT
        043042 000636          .WORD L10046
6976 043044 152777 000001 140650 10$: BISB #1,@OTHMOD      ;LOAD 5 US DEBOUNCE IN INPUT MOD
6977 043052 042777 000002 140642  BIC #2,@OTHMOD
6978 043060 012703 000001          ;...
6979 043064 032777 000001 140606  MOV #1,R3          ;LOAD WAIT COUNTER WITH INPUT DEB.
6980 043072 001003          BIT #1,@MOD        ;FIND DEBOUNCE OF OUTPUT MODULE
6981 043074 063703 004170          BNE 20$          ;BRANCH IF RTO IS SET (500 US)
6982 043100 000402          ADD OUTDE2,R3     ;ADD RELAY OUTPUT MODULE DEB.
6983 043102 063703 004166          BR 30$          ;BRANCH OVER NEXT COMMAND
6984 043106 012701 000001          20$: ADD OUTDE1,R3   ;ADD OPTO OUTPUT DEB.
6985 043112          30$: MOV #1,R1          ;GET SLIDING ONES' MASK
        043112 104404          40$: BGNSEG
        043114 010304          TRAP C$BSEG
6986 043116 010177 140560          MOV R3,R4          ;SAVE WAIT COUNTER VALUE
6987 043122 004737 011514          50$: MOV R1,@DAT      ;LOAD OUTPUT DATA REGISTER
6988 043126 005304          JSR PC,WT500      ;WAIT 500 US
6989 043130 001374          DEC R4            ;DECREMENT WAIT COUNTER
6990 043132 017737 140544 004064  BNE 50$          ;BRANCH IF COUNTER IS NOT ZERO
6991 043140 020137 004064          MOV @DAT,BAD      ;READ LOADED DATA BACK
6992 043144 004737 012146          CMP R1,BAD        ;LOADED DATA STILL THERE?
6993 043150 001406          CALL INSERT       ;SKIP BRANCH IF 'SFI' IS SET
6994 043152 010137 004062          BEQ 60$          ;BRANCH IF YES
6995 043156          MOV R1,GOOD        ;SET UP DATA FOR ERROR REPORT
6996 043156 104457          ERRSOF T 1302,E1302,EER2 ;ERROR HANDLER
        043160 002426          TRAP C$ERSOF
        043162 043536          .WORD 1302
        043164 007400          .WORD E1302
6997 043166          60$: CKLOOP          ;
        043166 104406          TRAP C$CLP1
    
```


TEST 13: DIGITAL OUTPUT LOOPBACK TEST SLIDING PATTERN

```

6998 043170 12737 002427 007200      MOV    #1303.,ERRNBR      ;LOAD ERROR NUMBER
6999 0431 004737 016326      CALL   READ              ;READ D/O LINES WITH DI MODULE
7000 04320 103002          BCC    70$              ;BRANCH IF NO ADDR. ERROR FOUND
7001 043204          EXIT   TST              ;EXIT TEST IF ADDRESSING ERROR
      043204 104432          TRAP  C$EXIT
      043206 000472          .WORD L10046 .
7002 043210 020137 004064      70$:  CMP    R1,BAD          ;CMP READ AND LOADED DATA
7003 043214 004737 012146      CALL   INSERT          ;SKIP BRANCH IF 'SFI' IS SET
7004 043220 001406          BEQ    80$              ;BRANCH IF EQUAL
7005 043222 010137 004062      MOV    R1,GOOD        ;GET GOOD PATTERN
7006 043226          ERRSOFT 1304,E1303,EER2 ;ERROR HANDLER
      043226 104457          TRAP  C$ERSOFT
      043230 002430          .WORD 1304
      043232 043622          .WORD E1303
      043234 007400          .WORD EER2
7007 043236          80$:  ENDSEG
      043236          10000$: TRAP  C$ESEG
7008 043240 006301          ASL    R1              ;NEXT SLIDING ONES DATA
7009 043242 103323          BCC    40$              ;BRANCH IF CARRY IS CLEARED
7010
7011          ;THE FOLLOWING CODE IS FOR SLIDING ZERO
7012
7013 043244 012701 177776      90$:  MOV    #177776,R1     ;LOAD MASK FOR SLIDING ZEROS
7014 043250          BGNSEG
      043250 104404          TRAP  C$BSEG
7015 043252 010304          MOV    R3,R4          ;SAVE WAIT COUNTER VALUE
7016 043254 010177 140422      MOV    R1,@DAT        ;LOAD OUTPUT DATA REGISTER
7017 043260 004737 011514      100$: JSR    PC,WT500      ;WAIT 500 US
7018 043264 005304          DEC    R4              ;DECREMENT WAIT COUNTER
7019 043266 001374          BNE    100$           ;BRANCH IF COUNTER IS NOT ZERO
7020 043270 017737 140406 004064      MOV    @DAT,BAD      ;READ DIGITAL INPUT PATTERN
7021 043276 020137 004064      CMP    R1,BAD        ;CMP READ AND LOADED DATA
7022 043302 004737 012146      CALL   INSERT          ;SKIP BRANCH IF SFI IS SET
7023 043306 001406          BEQ    110$           ;BRANCH IF EQUAL
7024 043310 010137 004062      MOV    R1,GOOD        ;GET GOOD PATTERN
7025 043314          ERRSOFT 1305,E1302,EER2 ;ERROR HANDLER
      043314 104457          TRAP  C$ERSOFT
      043316 002431          .WORD 1305
      043320 043536          .WORD E1302
      043322 007400          .WORD EER2
7026 043324          110$: CKLOOP
      043324 104406          TRAP  C$CLP1
7027 043326 012737 002432 007200      MOV    #1306.,ERRNBR  ;LOAD ERROR NUMBER
7028 043334 004737 016326      CALL   READ              ;READ D/O LINES WITH DI MODULE
7029 043340 103002          BCC    120$           ;BRANCH IF NO ADDR. ERROR FOUND
7030 043342          EXIT   TST              ;EXIT TEST IF ADDRESSING ERROR
      043342 104432          TRAP  C$EXIT
      043344 000334          .WORD L10046 .
7031 043346 020137 004064      120$: CMP    R1,BAD          ;CMP READ AND LOADED DATA
7032 043352 004737 012146      CALL   INSERT          ;SKIP BRANCH IF SFI IS SET
7033 043356 001406          BEQ    130$           ;BRANCH IF EQUAL
7034 043360 010137 004062      MOV    R1,GOOD        ;GET GOOD PATTERN
7035 043364          ERRSOFT 1307,E1305,EER2 ;ERROR HANDLER
      043364 104457          TRAP  C$ERSOFT
      043366 002433          .WORD 1307
      043370 043622          .WORD E1303

```

TEST 13: DIGITAL OUTPUT LOOPBACK TEST SLIDING PATTERN

```

043372 007400
7036 043374 130$: ENDSEG .WORD EER2
043374 104405 10001$: TRAP C$ESEG
7037 043376 006301 ASL R1 ;NEXT SLIDING ZEROS DATA
7038 043400 103002 BCC 140$ ;BRANCH IF ALL LINES WHERE ZERO
7039 043402 005501 ADC R1 ;ADD THE CARRY TO R1
7040 043404 000721 BR 90$ ;AND REPEAT
7041 043406 005302 140$: DEC R2 ;ALL CYCLES PERFORMED ?
7042 043410 001402 BEQ 150$ ;BRANCH IF YES
7043 043412 000137 043106 JMP 30$ ;IF NO, DO NEXT CYCLE
7044 043416 005737 002242 150$: TST QVP ;IS QUICK VERIFY PASS SELECTED?
7045 043422 001010 BNE EXQV13 ;IF YES EXIT TEST
7046 043424 005237 004144 INC ITRCNT ;ITERATION COUNTER + 1
7047 043430 023737 004146 004144 CMP ITRDEF,ITRCNT ;DEFAULT ITERATION EXECUTED
7048 043436 001402 BEQ EXQV13 ;IF YES, EXIT TEST
7049 043440 000137 043020 JMP ITRA13 ;IF NO, TEST ITERATION
7050 043444 EXQV1?: EXIT TST ;EXIT TEST
043444 104432 TRAP C$EXIT
043446 000232 .WORD L10046 .
7051
7052 .NLIST BEX
7053 043450 045 123 062 TSHD13: .ASCIZ /#S2#ADIGITAL OUTPUT LOOPBACK TEST - SLIDING PATTERN#N/
7054 043536 104 101 124 E1302: .ASCIZ /DATA REGISTER OF OUTPUT MODULE INCORRECT AFTER LOAD/
7055 043622 122 105 103 E1303: .ASCIZ /RECEIVED DATA INCORRECT CHECK OUTPUT LINES/
7056 .LIST BEX
7057 .EVEN
7058
7059 043700 ENDTST
043700
043700 104401 L10046: TRAP C$ETST

```

TEST 14: DIGITAL INPUT LOOPBACK TEST INPUT MODULE INTERRUPT

```

7061 .SBTTL TEST 14: DIGITAL INPUT LOOPBACK TEST INPUT MODULE INTERRUPT LINE.
7062 ;*****
7063 ; TEST 14 DIGITAL LOOPBACK TEST INPUT MODULE INTERRUPT LINE.
7064 ;
7065 ; THIS CHECKS THAT THE CSA INTERRUPT BIT OF THE INPUT MODULE CAN BE SET
7066 ; TO CAUSE AN INTERRUPT BY THE LEADING OR TRAILING EDGES OF THE MODULE
7067 ; DATA LINE 15. THE DEBOUNCE PERIOD FOR THE DIGITAL INPUT MODULE
7068 ; IS DEPENDENT ON THE OUTPUT MODULE THAT YOU SELECT AS THE 'OTHER' IN THE
7069 ; HARDWARE QUESTIONS. IT IS ALSO CHECKED THAT BIT 15 REMAINS HIGH AFTER THE
7070 ; LINE HAS REVERTED BACK TO ITS INITIAL STATE. ALL SIGNALS ARE PROVIDED BY
7071 ; LINES FROM THE OUTPUT MODULE.
7072 ; ALSO THE BITS 0 14 ARE SWITCHED ON AND OFF FOUR TIMES AND THEN A CHECK IS
7073 ; MADE THAT BIT 15 IS NOT AFFECTED.
7074 ; ALL OF THE FUNCTIONAL TESTS ABOVE ARE ALSO CARRIED OUT IF LOW LEVEL
7075 ; TESTING IS SELECTED.
7076 ;*****
7077 043702          BGNTST
7078 043702          T14::
7079 043702 004737 011714 CALL SELECT          ;CALL SELECT ROUTINE
7080 043706 002001          .WORD 2001          ;GIVE TEST PARAMETER
7081 043710 045612          TSHD14          ;GIVE TEST HEADER ADDRESS
7082 043712 103002          BCC 1$          ;IF CARRY IS SET, EXIT TEST
7083 043714          EXIT TST          ;EXIT TEST
7084 043714 104432          TRAP C$EXIT
7085 043716 002464          .WORD L10047 .
7086 043720 005037 004144 1$: CLR ITRCNT          ;CLEAR ITERATION COUNTER
7087 043724 ITRA14: SETVEC VEC,@INTSR,@PRI07 ;SET VECTOR AND SERVICE ROUTINE
7088 043724 012746 000340 MOV @PRI07,(SP)
7089 043730 012746 017276 MOV @INTSR,(SP)
7090 043734 013746 003710 MOV VEC,-(SP)
7091 043740 012746 000003 MOV @3,(SP)
7092 043744 104437          TRAP C$SVEC
7093 043746 062706 000010 ADD @10,SP
7094 043752          SETPRI @PRI07          ;DISABLE INTERRUPT
7095 043752 012700 000340 MOV @PRI07,RO
7096 043756 104441          TRAP C$SPRI
7097 043760 005037 004150 CLR INTFLA          ;CLEAR INTERRUPT FLAG
7098 043764 012737 002571 007200 MOV @1401.,ERRNBR ;LOAD ERROR NUMBER
7099 043772 004737 016122 JSR PC,WRITE          ;TEST SELECTED OUTPUT ADDR.
7100 044000 103002          BCC 10$          ;BRANCH IF NO ADDR. ERROR FOUND
7101 044000 104432          EXIT TST          ;EXIT TEST IF ADDRESSING ERROR
7102 044002 002400          TRAP C$EXIT
7103 044004 005737 003716 10$: TST LOWLVL          ;IS LOW LEVEL SELEC. IN P TABLE
7104 044010 001402          BEQ 20$          ;BRANCH IF NO
7105 044012 000137 044704 JMP LLPA14          ;JUMP TO LOW LEVEL PART
7106 044016 112777 000001 137654 20$: MOV @1,@MOD          ;LOAD 500US AS INPUT DEBOUNCE
7107 044024 012703 000003 MOV @3,R3          ;LOAD DEBOUNCE WAIT COUNTER WITH 1.5MS
7108 044030 032777 000001 137664 BIT @1,@OTHMOD          ;IS DEBOUNCE OF OUTPUT MOD 500 US?
7109 044036 001007          BNE 30$          ;BRANCH IF 500 US DEBOUNCE IS FOUND
7110 044040 112777 000002 137632 MOV @2,@MOD          ;IF NO, LOAD 5 MS AS INPUT DEBOUNCE
7111 044046 012703 000024 MOV @20.,R3          ;LOAD DEBOUNCE WAIT COUNTER WITH 10MS
7112 044052 062703 000010 ADD @8.,R3          ;ADD 4 MS DEBOUNCE TOLLERANCE
7113 044056 052777 000100 137614 30$: BIS @100,@MOD          ;SWITCH ON THE MODULE LED AGAIN
7114 044064 104404          TRAP C$BSEG
7115 044066 005001          CLR R1          ;DATA FOR WRITE ROUTINE

```

TEST 14: DIGITAL INPUT LOOPBACK TEST INPUT MODULE INTERRUPT

```

7104 044070 010304          40$:  MOV    R3,R4          ;SAVE WAIT COUNTER
7105 044072 004737 016122   JSR    PC,WRITE       ;SEND DATA
7106 044076 103002          BCC    50$           ;BRANCH IF NO ADDR. ERROR FOUND
7107 044100          EXIT    TST           ;EXIT TEST IF ADDRESSING ERROR
      044100 104432          TRAP   C$EXIT
      044102 002300          .WORD L10047
7108 044104 004737 011514   50$:  JSR    PC,WT500      ;WAIT 500 US
7109 044110 005304          DEC    R4
7110 044112 001374          BNE    50$           ;...
7111 044114 017737 137562 004064  MOV    @DAT,BAD       ;BRANCH IF NOT FINISHED
7112 044122 005737 004064   TST    BAD           ;GET DATA REGISTER CONTENTS
7113 044126 004737 012146   CALL   INSERT        ;IS DATA REG. OF INPUT MODULE ZERO
7114 044132 001406          BEQ    60$           ;SKIP BRANCH IF 'SFI' IS SET
7115 044134 005037 004062   CLR    GOOD          ;BRANCH IF YES
7116 044140          ERRSOFT 1402,E1402,EER2 ;SET UP DATA FOR ERROR HANDLER
      044140 104457          TRAP   C$ERSOFT
      044142 002572          .WORD 1402
      044144 045703          .WORD E1402
      044146 007400          .WORD EER2
7117 044150          60$:  CKLOOP
7118 044152 104406          SETPRI @PRI00
      044152 012700 000000          TRAP   C$CLP1
      044156 104441          MOV    @PRI00,R0
7119 044160 012701 100000          TRAP   C$SPRI
7120 044164 012777 060000 137512  MOV    #100000,R1     ;DATA (BIT 15 SET) FOR WRITE ROUTINE
7121 044172 010304          MOV    #60000,@CSA   ;ENABLE INT. * LEADING EDGE
7122 044174 004737 016122   MOV    R3,R4         ;RELOAD WAIT COUNTER
7123 044200 103002          JSR    PC,WRITE       ;SEND DATA
7124 044202          BCC    70$           ;BRANCH IF NO ADDR. ERROR FOUND
      044202 104432          EXIT    TST           ;EXIT TEST IF ADDRESSING ERROR
      044204 002176          TRAP   C$EXIT
7125 044206 004737 011514   70$:  JSR    PC,WT500      ;WAIT 500 US
7126 044212 005304          DEC    R4
7127 044214 001374          BNE    70$           ;...
7128 044216 005737 004150   TST    INTFLA        ;BRANCH IF NOT FINISHED
7129 044222 004737 012146   CALL   INSERT        ;WAS THERE AN INTERRUPT ON LEAD.
7130 044226 001004          BNE    80$           ;SKIP BRANCH IF 'SFI' IS SET
7131 044230          ERRSOFT 1403,E1403,EER3 ;BRANCH IF YES
      044230 104457          TRAP   C$ERSOFT
      044232 002573          .WORD 1403
      044234 045764          .WORD E1403
      044236 007442          .WORD EER3
7132 044240          80$:  CKLOOP
      044240 104406          TRAP   C$CLP1
7133 044242 017737 137436 004064  MOV    @CSA,BAD       ;GET CSA CONTENTS
7134 044250 022737 160000 004064  CMP    #160000,BAD   ;IS IR,IE AND ELE SET
7135 044256 004737 012146   CALL   INSERT        ;SKIP BRANCH IF 'SFI' IS SET
7136 044262 001407          BEQ    90$           ;BRANCH IF YES
7137 044264 012737 160000 004062  MOV    #160000,GOOD  ;SET UP DATA FOR ERROR HANDLER
7138 044272          ERRSOFT 1404,E1404,EER1 ;ERROR HANDLER
      044272 104457          TRAP   C$ERSOFT
      044274 002574          .WORD 1404
      044276 046034          .WORD E1404
      044300 007342          .WORD EER1
7139 044302          90$:  ENDSEG
      044302

```

10000\$:

TEST 14: DIGITAL INPUT LOOPBACK TEST INPUT MODULE INTERRUPT

```

044302 104405                                TRAP    C$ESEG
7140
7141      ;NOW WE TEST THAT WE GET AN INTERRUPT ON THE TRAILING EDGE OF BIT 15
7142
7143 044304                                BGNSEG
044304 104404                                TRAP    C$BSEG
7144 044306 012701 077777                    MOV     #77777,R1                ;DATA (BIT 15 CLEAR) FOR WRITE ROUTINE
7145 044312 012777 050000 137364            MOV     #50000,@CSA             ;ENABLE INT. + TRAILING EDGE
7146 044320 052777 100000 137356            BIS     #100000,@CSA           ;CLEAR IR BIT IN CSA
7147 044326 017737 137352 004064            MOV     @CSA,BAD               ;GET CSA CONTENTS
7148 044334 022737 050000 004064            CMP     #50000,BAD            ;IS IR CLEARED AND EI+ETE SET?
7149 044342 004737 012146                    CALL    INSERT                 ;SKIP BRANCH IF 'SFI' IS SET
7150 044346 001407                            BEQ     100$                   ;BRANCH IF YES
7151 044350 012737 050000 004062            MOV     #50000,GOOD           ;SET UP DATA FOR ERROR HANDLER
7152 044356                                ERRSOFT 1405,E1405,EER1        ;ERROR HANDLER
                                TRAP    C$ERSOFT
                                .WORD   1405
                                .WORD   E1405
                                .WORD   EER1
044356 104457
044360 002575
044362 046103
044364 007342
7153 044366                                100$:  CKLOOP                    ;                                TRAP    C$CLP1
044366 104406
7154 044370 005037 004150                    CLR     INTFLA                 ;CLEAR INTERRUPT FLAG
7155 044374 010304                            MOV     R3,R4                 ;RELOAD WAIT COUNTER
7156 044376 004737 016122                    JSR     PC,WRITE              ;SEND DATA
7157 044402 103002                            BCC     110$                  ;BRANCH IF NO ADDR. ERROR FOUND
7158 044404                                EXIT     TST                   ;EXIT TEST IF ADDRESSING ERROR
                                TRAP    C$EXIT
                                .WORD   L10047-.
044404 104432
044406 001774
7159 044410 004737 011514                    110$:  JSR     PC,WT500         ;WAIT 500 US
7160 044414 005304                            DEC     R4
7161 044416 001374                            BNE     110$                  ;...
7162 044420 005737 004150                    TST     INTFLA                ;BRANCH IF NOT FINISHED
7163 044424 004737 012146                    CALL    INSERT                 ;WAS THERE AN INTERRUPT ON 'RAIL.?'
7164 044430 001004                            BNE     120$                  ;SKIP BRANCH IF 'SFI' IS SET
7165 044432                                ERRSOFT 1406,E1406,EER3        ;BRANCH IF YES
                                ;ERROR HANDLER
                                TRAP    C$ERSOFT
                                .WORD   1406
                                .WORD   E1406
                                .WORD   EER3
044432 104457
044434 002576
044436 046163
044440 007442
7166 044442                                120$:  CKLOOP                    ;                                TRAP    C$CLP1
044442 104406
7167 044444 017737 137234 004064            MOV     @CSA,BAD               ;GET CSA CONTENTS
7168 044452 022737 150000 004064            CMP     #150000,BAD           ;IS IR,IE AND ELE SET
7169 044460 004737 012146                    CALL    INSERT                 ;SKIP BRANCH IF 'SFI' IS SET
7170 044464 001407                            BEQ     130$                   ;BRANCH IF YES
7171 044466 012737 150000 004062            MOV     #150000,GOOD          ;SET UP DATA FOR ERROR HANDLER
7172 044474                                ERRSOFT 1407,E1404,EER1        ;ERROR HANDLER
                                TRAP    C$ERSOFT
                                .WORD   1407
                                .WORD   E1404
                                .WORD   EER1
044474 104457
044476 002577
044500 046034
044502 007342
7173 044504                                130$:  ENDSEG                    ;                                TRAP    C$ESEG
044504
044504 104405                                10001$:
7174
7175      ;WE NOW SWITCH BITS 0 14 ON AND OFF FOUR TIMES
7176      ;AND TEST THAT WE GET NO INTERRUPT

```

TEST 14: DIGITAL INPUT LOOPBACK TEST INPUT MODULE INTERRUPT

```

7177
7178 044506 012705 000004      MOV      #4,R5          ;LOAD FOUR TIMES LOOP COUNTER
7179 044512 012777 070000 137164  MOV      #70000,@CSA    ;SET IE,ETE AND ELE IN CSA
7180 044520 052777 100000 137156  BIS      #100000,@CSA   ;CLEAR IR BIR IN CSA
7181 044526
      044526 104404
      140$:   CLR      R1          ;DATA FOR WRITE ROUTINE
      150$:   CLR      INTFLA      ;CLEAR INTERRUPT FLAG
7182 044530 005001
7183 044532 005037 004150
7184 044536 010304
      MOV      R3,R4      ;RELOAD WAIT COUNTER
7185 044540 004737 016122
      JSR      PC,WRITE    ;SEND DATA AND ADD OUTPUT DEBOU.
7186 044544 103002
      BCC      160$       ;BRANCH IF NO ADDR. ERROR FOUND
7187 044546
      EXIT     TST          ;EXIT TEST IF ADDRESSING ERROR
      044546 104432
      044550 001632
      160$:   JSR      PC,WT500   ;WAIT 500 US
7188 044552 004737 011514
7189 044556 005304
      DEC      R4          ;...
7190 044560 001374
      BNE      160$       ;BRANCH IF NOT FINISHED
7191 044562 005737 004150
      TST      INTFLA     ;NO INTERRUPT SHOULD BE SHOWN
7192 044566 004737 012146
      CALL    INSERT     ;SKIP BRANCH IF 'SFI' IS SET
7193 044572 001404
      BEQ      170$       ;BRANCH IF NO INTERRUPT OCCURRED
7194 044574
      ERRSOFT 1408,E1408,EER3 ;ERROR HANDLER
      044574 104457
      044576 002600
      044600 046234
      044602 007442
      170$:   CKLOOP
      TRAP    C$ERSOFT
      .WORD  1408
      .WORD  E1408
      .WORD  EER3
7195 044604
      044604 104406
      TRAP    C$CLP1
7196 044606 017737 137072 004064  MOV      @CSA,BAD      ;GET CSA CONTENTS
7197 044614 022737 070000 004064  CMP      #70000,BAD    ;IS IR,IE AND ETE SET
7198 044622 004737 012146
      CALL    INSERT     ;SKIP BRANCH IF 'SFI' IS SET
7199 044626 001407
      BEQ      180$       ;BRANCH IF YES
7200 044630 012737 070000 004062  MOV      #70000,GOOD   ;SET UP DATA FOR ERROR HANDLER
7201 044636
      ERRSOFT 1409,E1409,EER1 ;ERROR HANDLER
      044636 104457
      044640 002601
      044642 046315
      044644 007342
      180$:   CKLOOP
      TRAP    C$ERSOFT
      .WORD  1409
      .WORD  E1409
      .WORD  EER1
7202 044646
      044646 104406
      TRAP    C$CLP1
7203 044650 005705
      TST      R5          ;HAVE WE DONE THIS ROUTINE 4 TIMES?
7204 044652 001006
      BNE      190$       ;BRANCH IF YES
7205 044654 005305
      DEC      R5          ;DECREMENT FOUR TIMES LOOP COUNTER
7206 044656 005701
      TST      R1          ;USED DATA ALL ONES?
7207 044660 001723
      BEQ      140$       ;BRANCH IF YES
7208 044662 012701 077777
      MOV      #77777,R1  ;IF NO, LOAD ONES DATA WRITE ROUTINE
7209 044666 000721
      BR      150$       ;BRANCH BACK TO WRITE ROUTINE
7210 044670
      190$:   SETPRI  #PRI07
      ;DISABLE INTERRUPTS
      044670 012700 000340
      MOV      #PRI07,R0
      044674 104441
      TRAP    C$SPRI
7211 044676
      ENDSEG
      10002$: TRAP    C$ESEG
      044676 104405
7212 044700 000137 045560
      JMP      QVR14      ;JUMP TO QUICK VERIFY ROUTINE
7213
7214
7215
7216
      ;IF LOW LEVEL WAS REQUESTED IN THE SOFTWARE & TABLE, THE FOLLOWING
      ;CODE WILL BE EXECUTED. WE WILL TEST THE SAME AS ABOVE BUT WITH LOW LEVEL

```

TEST 14: DIGITAL INPUT LOOPBACK TEST INPUT MODULE INTERRUPT

```

7217                                     ;DEBOUNCE VALUE. THE INPUT MODULE DEBOUNCE WILL BE SELECTED AS 5 MS.
7218
7219
7220 044704 052777 000002 136766 LLPA14: BIS      #2,@MOD      ;LOAD AN INPUT DEBOUNCE OF 5 MS
7221 044712 042777 000001 136760      BIC      #1,@MOD      ;...
7222 044720 052777 000010 136752      BIS      #10,@MOD     ;SWITCH INPUT MODULE TO LLS
7223 044726 013702 004156      MOV      CYCLLS,R2    ;LOAD CYCLE COUNTER
7224 044732 013703 004162      MOV      LLWC,R3     ;LOAD LLS WAIT COUNTER
7225 044736      BGNSEG
7226 044740 005001      CLR      R1          ;DATA FOR WRITE ROUTINE
7227 044742 010304      MOV      R3,R4      ;SAVE WAIT COUNTER
7228 044744 012737 002602 007200 10$:  MOV      #1410.,ERRNBR ;LOAD ERROR NUMBER FOR WRITE ROUT.
7229 044752 004737 016122      JSR      PC,WRITE    ;SEND DATA
7230 044756 103002      BCC     20$         ;BRANCH IF NO ADDR. ERROR FOUND
7231 044760      EXIT     TST          ;EXIT TEST IF ADDRESSING ERROR
7232 044764 004737 011514      JSR      PC,WT500    ;WAIT 500 US
7233 044770 005304      DEC     R4          ;...
7234 044772 001374      BNE     20$         ;BRANCH IF NOT FINISHED
7235 044774 017737 136702 004064 20$:  MOV      @DAT,BAD    ;GET DATA REGISTER CONTENTS
7236 045002 005737 004064      TST     BAD         ;IS DATA REG. OF INPUT MODULE ZERO?
7237 045006 004737 012146      CALL    INSERT      ;SKIP BRANCH IF 'SFI' IS SET
7238 045012 001406      BEQ     30$         ;BRANCH IF YES
7239 045014 005037 004062      CLR     GOOD        ;SET UP DATA FOR ERRCR HANDLER
7240 045020      ERRSOFT 1411,E1402,EER2 ;ERROR HANDLER
7241 045030      CKLOOP
7242 045032      SETPRI #PRI00     ;ENABLE INTERRUPTS
7243 045040 012701 100000      MOV     #100000,R1  ;DATA (BIT 15 SET) FOR WRITE ROUTINE
7244 045044 012777 060000 136632 30$:  MOV     #60000,@CSA ;ENABLE INT. + LEADING EDGE
7245 045052 010304      MOV     R3,R4      ;RELOAD WAIT COUNTER
7246 045054 004737 016122      JSR     PC,WRITE    ;SEND DATA
7247 045060 103002      BCC     40$         ;BRANCH IF NO ADDR. ERROR FOUND
7248 045062      EXIT     TST          ;EXIT TEST IF ADDRESSING ERROR
7249 045066 004737 011514      JSR     PC,WT500    ;WAIT 500 US
7250 045072 005304      DEC     R4          ;...
7251 045074 001374      BNE     40$         ;BRANCH IF NOT FINISHED
7252 045076 005737 004150      TST     INTFLA     ;WAS THERE AN INTERRUPT?
7253 045102 004737 012146      CALL    INSERT      ;SKIP BRANCH IF 'SFI' IS SET
7254 045106 001004      BNE     50$         ;BRANCH IF YES
7255 045110      ERRSOFT 1412,E1403,EER3 ;ERROR HANDLER
7256 045120      CKLOOP

```

TEST 14: DIGITAL INPUT LOOPBACK TEST INPUT MODULE INTERRUPT

```

7257 045122 017737 136556 004064      MOV      @CSA,BAD      ;GET CSA CONTENTS
7258 045130 022737 160000 004064      CMP      @160000,BAD  ;IS IR,IE AND ELE SET
7259 045136 004737 012146              CALL     INSERT       ;SKIP BRANCH IF 'SFI' IS SET
7260 045142 001407              BEQ      60$          ;BRANCH IF YES
7261 045144 012737 160000 004062      MOV      @160000,GOOD ;SET UP DATA FOR ERROR HANDLER
7262 045152              ERRSOFT 1413,E1404,EER1 ;ERROR HANDLER
              045152 104457              TRAP    C$ERSOFT
              045154 002605              .WORD  1413
              045156 046034              .WORD  E1404
              045160 007342              .WORD  EER1
7263              60$:      ENDSEG
              10003$:
              045162 104405              TRAP    C$ESEG
7264
7265      ;WE NOW TEST THAT WE GET AN INTERRUPT ON THE TRAILING EDGE OF BIT 15
7266
7267 045164              BGNSEG
              045164 104404              TRAP    C$BSEG
7268 045166 012701 077777              MOV      @77777,R1    ;DATA (BIT 15 CLEAR) FOR WRITE ROUTINE
7269 045172 012777 050000 136504      MOV      @50000,@CSA ;ENABLE INT. + TRAILING EDGE
7270 045200 052777 100000 136476      BIS      @100000,@CSA ;CLEAR IR BIT IN CSA
7271 045206 017737 136472 004064      MOV      @CSA,BAD    ;GET CSA CONTENTS
7272 045214 022737 050000 004064      CMP      @50000,BAD  ;IS IR CLEARED AND EI+ETE SET
7273 045222 004737 012146              CALL     INSERT       ;SKIP BRANCH IF 'SFI' IS SET
7274 045226 001407              BEQ      70$          ;BRANCH IF YES
7275 045230 012737 050000 004062      MOV      @50000,GOOD ;SET UP DATA FOR ERROR HANDLER
7276 045236              ERRSOFT 1414,E1405,EER1 ;ERROR HANDLER
              045236 104457              TRAP    C$ERSOFT
              045240 002606              .WORD  1414
              045242 046103              .WORD  E1405
              045244 007342              .WORD  EER1
7277 045246              70$:      CKLOOP
              045246 104406              TRAP    C$CLP1
7278 045250 005037 004150      CLR      INTFLA      ;CLEAR INTERRUPT FLAG
7279 045254 010304      MOV      R3,R4      ;RELOAD WAIT COUNTER
7280 045256 004737 016122      JSR      PC,WRITE    ;SEND DATA
7281 045262 103002      BCC      80$         ;BRANCH IF NO ADDR. ERROR FOUND
7282 045264              EXIT      TST        ;EXIT TEST IF ADDRESSING ERROR
              045264 104432              TRAP    C$EXIT
              045266 001114              .WORD  L10047..
7283 045270 004737 011514      80$:      JSR      PC,WT500    ;WAIT 500 US
7284 045274 005304      DEC      R4
7285 045276 001374      BNE      80$         ;BRANCH IF NOT FINISHED
7286 045300 005737 004150      TST      INTFLA     ;WAS THERE AN INTERRUPT ON TRAIL?
7287 045304 004737 012146      CALL     INSERT     ;SKIP BRANCH IF 'SFI' IS SET
7288 045310 001004      BNE      90$         ;BRANCH IF YES
7289 045312              ERRSOFT 1415,E1406,EER3 ;ERROR HANDLER
              045312 104457              TRAP    C$ERSOFT
              045314 002607              .WORD  1415
              045316 046163              .WORD  E1406
              045320 007442              .WORD  EER3
7290 045322              90$:      CKLOOP
              045322 104406              TRAP    C$CLP1
7291 045324 017737 136354 004064      MOV      @CSA,BAD    ;GET CSA CONTENTS
7292 045332 022737 150000 004064      CMP      @150000,BAD ;IS IR,IE AND ELE SET
7293 045340 004737 012146              CALL     INSERT     ;SKIP BRANCH IF SFI IS SET
7294 045344 001407              BEQ      100$        ;BRANCH IF YES

```


TEST 14: DIGITAL INPUT LOOPBACK TEST INPUT MODULE INTERRUPT

```

7295 045346 012737 150000 004062      MOV      #150000,GOOD      ;SET UP DATA FOR ERROR HANDLER
7296 045354      ERRSOFT 1416,E1404,EER1 ;ERROR HANDLER
      045354 104457
      045356 002610          TRAP      C$ERSOFT
      045360 046034          .WORD    1416
      045362 007342          .WORD    E1404
7297 045364      1000:  ENDSEG          .WORD    EER1
      045364
      045364 104405          10004:  TRAP      C$ESEG
7298
7299      ;WE NOW SWITCH BITS 0 14 ON AND OFF FOUR TIMES AND TEST THAT WE
7300      ;GET NJ INTERRUPT
7301
7302 045366 012705 000004      MOV      #4,R5            ;LOAD FOUR TIMES LOOP COUNTER
7303 045372 012777 070000 136304      MOV      #70000,@CSA     ;SET IE,ETE AND ELE IN CSA
7304 045400 052777 100000 136276      BIS      #100000,@CSA   ;CLEAR IR BIT IN CSA
7305 045406      BGNSEG
      045406 104404          TRAP      C$BSEG
7306 045410 005001
7307 045412 005037 004150      1100:  CLR      R1            ;DATA FOR WRITE ROUTINE
7308 045416 010304      1200:  CLR      INTFLA     ;CLEAR INTERRUPT FLAG
7309 045420 004737 016122      MOV      R3,R4           ;RELOAD WAIT COUNTER
7310 045424 103002      JSR      PC,WRITE       ;SEND DATA AND ADD OUTPUT DEBOU.
7311 045426      BCC     1300           ;BRANCH IF NO ADDR. ERROR FOUND
      045426 104432      EXIT     TST           ;EXIT TEST IF ADDRESSING ERROR
      045430 000752          TRAP      C$EXIT
7312 045432 004737 011514      1300:  JSR      PC,WT500     ;WAIT 500 US
7313 045436 005304      DEC     R4             ;...
7314 045440 001374      BNE     1300           ;BRANCH IF NOT FINISHED
7315 045442 005737 004150      TST     INTFLA        ;WAS THERE AN INTERRUPT?
7316 045446 004737 012146      CALL    INSERT        ;SKIP BRANCH IF 'SFI' IS SET
7317 045452 001404      BEQ     1400           ;BRANCH IF YES
7318 045454      ERRSOFT 1417,E1408,EER3 ;ERROR HANDLER
      045454 104457          TRAP      C$ERSOFT
      045456 002611          .WORD    1417
      045460 046234          .WORD    E1408
      045462 007442          .WORD    EER3
7319 045464      1400:  CKLOOP          TRAP      C$CLP1
      045464 104406
7320 045466 017737 136212 004064      MOV      @CSA,BAD       ;GET CSA CONTENTS
7321 045474 022737 070000 004064      CMP      #70000,BAD     ;IS IR,IE AND ETE SET
7322 045502 004737 012146      CALL    INSERT        ;SKIP BRANCH IF 'SFI' IS SET
7323 045506 001407      BEQ     1500           ;BRANCH IF YES
7324 045510 012737 070000 004062      MOV      #70000,GOOD   ;SET UP DATA FOR ERROR HANDLER
7325 045516      ERRSOFT 1418,E1409,EER1 ;ERROR HANDLER
      045516 104457          TRAP      C$ERSOFT
      045520 002612          .WORD    1418
      045522 046315          .WORD    E1409
      045524 007342          .WORD    EER1
7326 045526      1500:  CKLOOP          TRAP      C$CLP1
      045526 104406
7327 045530 005705      TST     R5            ;HAVE WE DONE THIS ROUTINE 4 TIMES?
7328 045532 001006      BNE     1600           ;BRANCH IF YES
7329 045534 005305      DEC     R5            ;DECREMENT FOUR TIMES LOOP COUNTER
7330 045536 005701      TST     R1            ;USED DATA ALL ONES?
7331 045540 001723      BEQ     1100           ;BRANCH IF YES
7332 045542 012701 077777      MOV      #7777,R1     ;IF NO, LOAD ONES DATA WRITE ROUTINE

```

TEST 14: DIGITAL INPUT LOOPBACK TEST INPUT MODULE INTERRUPT

SEQ 0194

```

7333 045546 000721
7334 045550 1608: BR 1208 ;BRANCH BACK TO WRITE ROUTINE
      045550 012700 070340 SETPRI @PRI07 ;DISABLE INTERRUPT,
      045554 104441 MOV @PRI07,R0
7335 045556 ENDSEG TRAP C$SPRI
      045556 104405 100058: TRAP C$ESEG
7336 045560 005737 002242 QVR14: TST QVP ;IS QUICK VERIFY PASS SELECTED?
7337 045564 001010 BNE EXQV14 ;IF YES, EXIT TEST
7338 045566 005237 004144 INC ITRCNT ;ITERATION COUNTER = 1
7339 045572 023737 004146 004144 CMP ITRDEF,ITRCNT ;DEFAULT ITERATION EXECUTED
7340 045600 001402 BEQ EXQV14 ;IF YES, EXIT TEST
7341 045602 000137 043724 JMP ITR14 ;IF NO, TEST ITERATION
7342 045606 EXQV14: EXIT TST ;EXIT TEST
      045606 104432 TRAP C$EXIT
      045610 000572 .WORD L10047
7343
7344
7345
7346 045612 045 123 062 TSHD14: .MLIST BEX
7347 045703 104 101 124 E1402: .ASCIZ /#S2#ADIGITAL INPUT LOOPBACK TEST INTERRUPT LINE TEST#N/
7348 045764 116 117 040 E1403: .ASCIZ /DATA REGISTER CONTENTS OF INPUT MODULE INCORRECT/
7349 046034 103 123 101 E1404: .ASCIZ /NO INTERRUPT ON LEADING EDGE OF LINE 15/
7350 046103 103 123 101 E1405: .ASCIZ /CSA REGISTER INCORRECT AFTER INTERRUPT/
7351 046163 116 117 040 E1406: .ASCIZ /CSA REGISTER NOT LOADABLE WITH THE CORRECT DATA/
7352 046234 111 116 124 E1408: .ASCIZ /NO INTERRUPT ON TRAILING EDGE OF LINE 15/
7353 046315 103 123 101 E1409: .ASCIZ /INTERRUPT OCCURRED WHEN SWITCHING DATA BITS 0-14/
7354 .ASCIZ /CSA REGISTER CHANGED AFTER SWITCHING DATA BITS 0-14/
7355 .LIST BEX
7356 .EVEN
7357 046402 ENDTST
      046402 L10047: TRAP C$ETST
      046402 104401
7358
7370
7371 .EVEN
7372

```

HARDWARE TESTS MACRO M1200 26 OCT 83 15:22 PAGE 78

D15

SEQ 0185

TEST 14: DIGITAL INPUT LOOPBACK TEST INPUT MODULE INTERRUPT

*380 046404
*381

ENDMOD

TEST 14: DIGITAL INPUT LOOPBACK TEST INPUT MODULE INTERRUPT

```

7385 .TITLE HARDWARE TESTS
7396
7432
7433 046404          BGNMOD
7434 .SBTTL TEST 15: ANALOGUE INPUT TEST FIELD AND MANUFACTURING TEST.
7435 ;*****
7436 ; TEST 15 - ANALOGUE INPUT TEST.
7437 ;
7438 ;AT FIRST THE USER IS TOLD THAT THE TEST WILL ONLY RUN CORRECTLY IF THE
7439 ;MODULE HAS BEEN CALIBRATED CORRECTLY.
7440 ;THEN HE IS ASKED HOW MANY MUXBOARDS ARE CONNECTED THE THE CONTROLLER.
7441 ;THEN HE IS ASKED TO CONNECT A CALIBRATED VOLTAGE SOURCE ON THE EVEN
7442 ;INPUTS TO THE MODULE VIA THE ANALOGUE INPUT TEST CONNECTOR.
7443 ;PROMPTED BY THE PROGRAM, THE USER THEN
7444 ;SETS UP A SERIES OF VOLTAGES, TYPIN, 'CARRIAGE RETURN AFTER EACH SO
7445 ;THAT THE PROGRAM CAN CHECK THE D/A CONVERSIONS.
7446 ;THE CONVERSION FOR 48.828 MV ARE PERFORMED ON ALL GAINS. OTHER
7447 ;CONVERSIONS ARE PERFORMED ONLY IN GAIN 1.
7448 ;IF "N" TO THE SW QUESTION "RUN MANUFACTURING TEST" WAS ANSWERED THE FOLLOWING
7449 ;TOLLERANCE MAY BE USED , FOR GAIN 1,2,5 IS 2 LSB, FOR GAIN 10 IS 4 LSB,
7450 ;FOR GAIN 20 IS 6, FOR GAIN 50 IS 7 LSB, FOR GAIN 100 IS 12 LSB AND FOR
7451 ;GAIN 200 IS 20 LSB.
7452 ;IF "Y" WAS ANSWERED THEN THE TOLLERANCE WILL BE , FOR GIAN 1,2,5 IS 2 LSB
7453 ;FOR GAIN 10 IS 3 LSB, FOR GIAN 20 IS 3 LSB, FOR GAIN 50 IS 5 LSB, FOR GAIN
7454 ;100 IS 10 LSB AND FOR GAIN 200 IS 15 LSB. IF A MUX BOARD IS CONNECTED WE WILL
7455 ;ADD 2 LSB MORE FOR GAINS OVER 10.
7456 ;NEXT THE USER IS PROMTED TO CONNECT THE VOLTAGE SOURCE TO THE ODD INPUTS
7457 ;AND DO THE SAME AS FOR THE EVEN LINES ABOVE.
7458 ;THE VALUES USED DEPEND ON WHETHER THE MODULE IS
7459 ;SET UP FOR UNIPOLAR OR BIPOLAR INPUT.
7460 ;
7461 ;FINALLY, THE EXTERNAL TRIGGER FUNCTION IS TESTED BY SWITCHING THE
7462 ;ENABLE EXTERNAL TRIGGER ON AND OFF TO DO THE EXTERNAL START (EET IS LOOPED
7463 ;BACK TO THE EXTERNAL TRIGGER INPUT VIA THE ANALOGUE INPUT TEST CONNECTOR).
7464 ;THE EXTERNAL TRIGGER FUNCTION IS TESTED UNDER INTERRUPT.
7465 ;
7466 ;IF THE 'UAM" FLAG IS SET, THIS TEST IS NOT CARRIED OUT.
7467 ;TO RUN THIS TEST SUCCESSFULLY, THE DEVICE HAS TO BE CALIBRATED CORRECTLY.
7468 ;*****
7469 046404          BGNTEST 15.
046404
7470 046404 004737 011714          CALL SELECT          T15::
7471 046410 005004          .WORD 5004          ;CALL SELECT ROUTINE
7472 046412 051006          TSHD15          ;GIVE TEST PARAMETER
7473 046414 103002          BCC 1$          ;GIVE TEST HEADER ADDRESS
7474 046416          EXIT 15T          ;IF CARRY IS SET, EXIT TEST
          ;EXIT TEST
          TRAP C$EXIT
          .WORD L10050
7475 046422          1$: MANUAL          ;IS MANUAL INTERVENTION ALLOWED?
          TRAP C$MANI
7476 046424          BCOMPLETE 10$          ;IF YES, BRANCH (UAM FLAG NOT SET)
          BCS 10$
7477 046426          RFLAGS RO          ;READ OPERATOR FLAGS INTO RO
          TRAP C$RFL4
          046426 104421
7478 046430 032700 001000          BIT @PNT,RO          ;PRINT MESSAGES ?
7479 046434 001410          BEQ 3$          ;IF NO, EXIT
7480 046436          PRINT# @?M15          ;IF YES PRINT TEST DISABLED

```

TEST 15: ANALOGUE INPUT TEST FIELD AND MANUFACTURING TEST.

SEQ 0187

046436	012746	051100							MOV	@TM15, (SP)
046442	012746	000001							MOV	@1, (SP)
046446	010600								MOV	SP,RO
046450	104417								TRAP	C\$PNTF
046452	062706	000004							ADD	@4,SP
7481	046456		3\$:	EXIT	TST					
	046456	104432								
	046460	004026							TRAP	C\$EXIT
7482	046462		10\$:	PRINTF	@PME153				.WORD	L10050
	046462	012746								
	046466	012746								
	046472	010600							MOV	@PME153, (SP)
	046474	104417							MOV	@1, (SP)
	046476	062706							MOV	SP,RO
7483	046502			PRINTF	@PME154				TRAP	C\$PNTF
	046502	012746							ADD	@4,SP
	046506	012746								
	046512	010600								
	046514	104417							MOV	@PME154, -(SP)
	046516	062706							MOV	@1, -(SP)
7484	046522		20\$:	PRINTF	@PME151				MOV	SP,RO
	046522	012746							TRAP	C\$PNTF
	046526	012746							ADD	@4,SP
	046532	010600								
	046534	104417								
	046536	062706								
7485	046542			PRINTF	@PME152					
	046542	012746								
	046546	012746								
	046552	010600							MOV	@PME151, (SP)
	046554	104417							MOV	@1, (SP)
	046556	062706							MOV	SP,RO
7486	046562	004737		CALL	FLASH				TRAP	C\$PNTF
7487	046566	005737		TST	FLSANS				ADD	@4,SP
7488	046572	001753		BEQ	20\$					
7489	046574	005001		CLR	R1					
7490	046576	005037		CLR	BIPOL					
7491	046602	032777	050664	BIT	@20, @MOD					
7492	046610	001414	135070	BEQ	20\$					
7493	046612			PRINTF	@PME152					
	046612	012746								
	046616	012746								
	046622	010600								
	046624	104417								
	046626	062706								
7494	046632	012737	050664	MOV	@1, BIPOL					
7495	046640	000410		BR	30\$					
7496	046642		20\$:	PRINTF	@PME151					
	046642	012746								
	046646	012746								
	046652	010600								
	046654	104417								
	046656	062706								
7497	046662	005777	135014	TST	@DAT					
7498	046666	005037	050666	CLR	MUXC					
7499	046672			GMAN!D	MES151,ANS151,D, 1,0,~,NO					
	046672	104443								

TEST 15: ANALOGUE INPUT TEST - FIELD AND MANUFACTURING TEST.

046674	000406										BR	10000\$
046676	050656										.WORD	ANS151
046700	000042										.WORD	T\$CODE
046702	051340										.WORD	MES151
046704	177777										.WORD	-1
046706	000000										.WORD	T\$LOLIM
046710	000007										.WORD	T\$HILIM
046712												10000\$:
7500	046712	012737	050726	050674	MOV	#FILTOL,TOLOF						;GET FIELD TOLLERANCE TABLE
7501	046720	005737	002232		TST	MANTST						;ARE MANUFACTURING TESTS REQUIRED ?
7502	046724	001411			BEQ	PS151						;BRANCH IF NOT
7503	046726	012737	050746	050674	MOV	#MAFTOL,TOLOF						;GET MANUFACTURING TOLLERANCE TABLE
7504	046734	005737	050656		TST	ANS151						;ARE THERE SOME MUX BOARDS CONNECTED
7505	046740	001403			BEQ	PS151						;BRANCH IF NOT
7506	046742	012737	050766	050674	MOV	#MUXTOL,TOLOF						;GET MUX TOLLERANCE TABLE
7507	046750	012703	000014		MOV	#14,R3			PS151:			;POINT R3 TO BIPOLAR TABLE (VOLVA+14)
7508	046754	012737	000024	050670	MOV	#24,VOLTE						;LOAD BIPOLAR VOLTAGE TABLE END ADDRESS
7509	046762	005737	050664		TST	BIPOL						;IS BIPOLAR SELECTED ?
7510	046766	001004			BNE	10\$;BRANCH IF YES
7511	046770	005003			CLR	R3						;POINT R3 TO UNIPOLAR TABLE (VOLVA)
7512	046772	012737	000010	050670	MOV	#10,VOLTE						;LOAD UNIP. VOLTAGE TABLE END ADDR.
7513	047000	005737	050666		TST	MUXC			10\$:			;ARE WE TESTING A MUX BOARDED ?
7514	047004	001001			BNE	20\$;BRANCH IF YES
7515	047006	005004			CLR	R4						;BEGIN WITH CHANNEL ZERO
7516	047010	042704	007400		BIC	#7400,R4			20\$:			;BEGIN WITH FIRST CHANNEL IN BANK
7517	047014	005037	050662		CLR	ANS153						;CLEAR ODD/EVEN FLAG
7518	047020				PRINTF	#MES152						;PRINT VOLT SOURCE ADJUSTMENT
	047020	012746	051415									
	047024	012746	000001									
	047030	010600										
	047032	104417										
	047034	062706	000004									
7519	047040	016301	050676		MOV	VOLVA(R3),R1						MOV #MES152, (SP)
7520	047044	016302	050700		MOV	VOLVA+2(R3),R2						MOV #1, (SP)
7521	047050	004737	015764		CALL	DECOUT						MOV SP,R0
7522	047054				PRINTF	#OUT15						TRAP C\$PNTF
	047054	012746	051455									ADD #4,SP
	047060	012746	000001									
	047064	010600										
	047066	104417										
	047070	062706	000004									
7523	047074											
	047074	104443										
	047076	000404										
	047100	050660										
	047102	000130										
	047104	051474										
	047106	177777										
	047110											
7524	047110	005737	050660		TST	ANS152						MOV #OUT15, (SP)
7525	047114	001767			BEQ	30\$						MOV #1, (SP)
7526	047116	005037	004134		CLR	MODE						MOV SP,R0
7527	047122	005737	050664		TST	BIPOL						TRAP C\$PNTF
7528	047126	001403			BEQ	50\$						ADD #4,SP
7529	047130	012737	000001	004134	MOV	#1,MODE						
7530	047136	022763	000060	050676	50\$:	CMP	#48.,VOLVA(R3)					
7531	047144	001016			BNE	40\$						

TEST 15: ANALOGUE INPUT TEST FIELD AND MANUFACTURING TEST.

```

7532 047146 012702 003720      MOV      #2000.,R2      ;WAIT LOOP NECESSARY FOR
7533 047152 012746 052467      PRINTF   #PME155      ;PRINT WORKING MESSAGES
                                MOV      #PME155,-(SP)
                                MOV      #1,-(SP)
                                MOV      SP,R0
                                TRAP     C$PNTF
                                ADD      #4,SP
7534 047172 004737 011506      41$:    CALL     WT25M      ;LOADING NEXT VOITAGE INTO
7535 047176 005302                DEC      R2          ;CAPALITOR
7536 047200 001374                BNE     41$         ;BRANCH IF 30 SEC. NOT OVER
7537 047202 005005                CLR     R5          ;LOAD ZERO INTO GAIN POINTER
7538 047204 010537 004136      40$:    MOV     R5,GAIN   ;LOAD ADCON INPUT (GAIN)
7539 047210                60$:    BGNSEG
                                TRAP     C$BSEG
7540 047212 042777 077536 134464      BIC     #77536,@CSA  ;CLEAR ALL R/W BITS IN CSA
7541 047220 006305                ASL     R5          ;CORRECT BIT POSITION FOR CSA
7542 047222 050577 134456                BIS     R5,@CSA    ;LOAD GAIN INTO CSA
7543 047226 012737 100000 004062      MOV     #100000,GOOD ;SET UP GOOD DATA
7544 047234 050537 004062                BIS     R5,GOOD    ;ADD GAIN TO GOOD
7545 047240 006205                ASR     R5          ;CHANGE BACK BIT POSITION
7546 047242 050477 134436                BIS     R4,@CSA    ;LOAD CHANNEL NUMBER
7547 047246 017737 134432 004064      MOV     @CSA,BAD    ;GET CSA CONTENTS
7548 047254 050437 004062                BIS     R4,GOOD    ;ADD CHA. NUMBER TO GOOD
7549 047260 023737 004062 004064      CMP     GOOD,BAD   ;IS CSA CONTENTS CORRECT ?
7550 047266 004737 012146                CALL   INSERT      ;SKIP BRANCH IF "SFI" IS SET
7551 047272 001404                BEQ    70$         ;BRANCH IF YES
7552 047274                ERRSOFT 1501,E1501,EER4 ;ERROR HANDLER
                                TRAP     C$ERSOFT
                                .WORD   1501
                                .WORD   E1501
                                .WORD   EER4
7553 047304                70$:    CKLOOP      ;
                                TRAP     C$CLP1
7554 047306 052777 000001 134370      BIS     #1,@CSA    ;START THE CONVERSION
7555 047314 005002                CLR     R2          ;SET UP TIMEOUT COUNTER
7556 047316 017737 134362 004064 80$:    MOV     @CSA,BAD   ;GET CSA CONTENTS
7557 047324 032737 000200 004064      BIT     #200,BAD   ;CONVERSION OVER (DONE SET)?
7558 047332 001013                BNE     90$         ;BRANCH IF YES
7559 047334 005302                DEC     R2          ;DECREMENT TIMEOUT COUNTER
7560 047336 004737 012146                CALL   INSERT      ;SKIP BRANCH IF 'SFI' IS SET
7561 047342 001365                BNE     80$         ;BRANCH IF NOT ZERO
7562 047344 052737 000200 004062      BIS     #200,GOOD  ;SET DONE IN GOOD
7563 047352                ERRSOFT 1502,E1502,EER4 ;ERROR HANDLER
                                TRAP     C$ERSOFT
                                .WORD   1502
                                .WORD   E1502
                                .WORD   EER4
7564 047362                90$:    CKLOOP      ;
                                TRAP     C$CLP1
7565                ;...
7566
7567
7568 047364 012702 000012                MOV     #10.,R2    ;REPEAT DATA DEALY FOR
7569 047370 004737 011514                100$:  CALL    WT500      ;SAME CHANNEL
7570 047374 005302                DEC     R2          ;5 MS OVER
7571 047376 001374                BNE     100$       ;BRANCH IF NOT
7572 047400 017737 134276 004064      MOV     @DAT,BAD   ;GET CONVERSION VALUE

```

TEST 15: ANALOGUE INPUT TEST - FIELD AND MANUFACTURING TEST.

```

7573 047406 016301 050676          MOV    VOLVA(R3),R1          ;GET EXPECTED VOLTAGE VALUE
7574 047412 016302 050700          MOV    VOLVA+2(R3),R2      ;GET EXPECTED MILLIVOLT VALUE
7575 047416 004737 014730          CALL  ADCON                ;ANALOGUE TO DIGITAL CONVERSION
7576 047422 010137 004062          MOV    R1,GOOD            ;GET GOOD VALUE FROM ADCON ROUTINE
7577 047426 013702 050674          MOV    TOLOF,R2          ;LOAD TOLLERANCE POINTER
7578 047432 022763 000060 050676  CMP    #48.,VOLVA(R3)      ;IS THE USED VOLTAGE 48.828 MV
7579 047440 001007                   BNE    120$                ;BRANCH IF NOT
7580 047442 010500                   MOV    R5,R0              ;GET GAIN
7581 047444 005700                   TST    R0                 ;IS GIAN 1 USED ?
7582 047446 001404                   BEQ    120$                ;BRANCH IF YES
7583 047450 062702 000002 110$:   ADD    #2,R2              ;POINT TO NEXT TOLLERANCE VALUE
7584 047454 005300                   DEC    R0                 ;LOOK TO NEXT GAIN
7585 047456 001374                   BNE    110$                ;BRANCH IF GAIN NOT USED
7586
7587 047460 011237 050672 120$:   MOV    (R2),TOLRA         ;LOAD TOLLERANS
7588 047464 063737 050672 004062  ADD    TOLRA,GOOD        ;ADD TOLLERANS TO EXPECTED VALUE
7589 047472 023737 004064 004062  CMP    BAD,GOOD          ;FOUND VALUE OUTSIDE POS. TOLLERANS ?
7590 047500 101016                   BHI    130$                ;BRANCH IF YES TO ERROR
7591 047502 163737 050672 004062  SUB    TOLRA,GOOD        ;SUBTRACT ADDED TOLLERANS
7592 047510 163737 050672 004062  SUB    TOLRA,GOOD        ;SUB TOLLERANS FROM EXPECTED VALUE
7593 047516 023737 004064 004062  CMP    BAD,GOOD          ;FOUND VALUE INSIDE NEG. TOLLERANS ?
7594 047524 002013                   BGE    150$                ;BRANCH IF YES
7595 047526 063737 050672 004062  ADD    TOLRA,GOOD        ;CORRECT GOOD TO ORIGINAL VALUE
7596 047534 000403                   BR     140$                ;
7597 047536 163737 050672 004062 130$:  SUB    TOLRA,GOOD        ;FORM EXPECTED VALUE
7598 047544 104457 140$:  ERRSOFT 1503,E1503,EERS5 ;ERROR HANDLER
      047544 002737                   .WORD 1503
      047546 052030                   .WORD E1503
      047550 007540                   .WORD EERS
7599 047554 104405 150$:  ENDSEG
      047554
      047554 104405 10002$: TRAP  C$ESEG
7600
7601
7602
7603 047556 022763 000060 050676  CMP    #48.,VOLVA(R3)      ;IS THE USED VOLTAGE 48.828 MV
7604 047564 001006                   BNE    160$                ;BRANCH IF NOT
7605 047566 005205                   INC    R5                 ;INCREMENT GAIN
7606 047570 022705 000010          CMP    #10,R5            ;ALL GAINS TESTED?
7607 047574 001402                   BEQ    160$                ;BRANCH IF YES
7608 047576 000137 047204          JMP    60$                ;JUMP IF NOT
7609
7610 ;NOW WE TEST THAT THE NEIGHBORING CHANNEL IS ZERO FOR UNIPOLAR RANGE
7611 ;OR HALF SCALE FOR BIPOLAR RANGE
7612
7613 047602 010400 160$:  MOV    R4,R0              ;GET R4 CONTENTS (CHANNEL)
7614 047604 042700 170377          BIC    #170377,R0         ;CLEAR UNNEEDED BITS
7615 047610 022700 007400          CMP    #7400,R0          ;ALL CHANNEL TESTED ?
7616 047614 001545                   BEQ    230$                ;BRANCH IF YES
7617 047616 000304                   SWAB   R4                 ;SWAB HIGH BYTE INTO LOW BYTE
7618 047620 005204                   INC    R4                 ;INCREMENT CHANNEL NUMBER
7619 047622 000304                   SWAB   R4                 ;SWAB LOW BYTE INTO HIGH BYTE
7620 047624 104404
      047624 104404
7621 047626 042777 077536 134050  BIC    #77536,@CSA       TRAP  C$BSEG
7622 047634 005005                   CLR    R5                 ;LOAD GAIN 1

```


TEST 15: ANALOGUE INPUT TEST - FIELD AND MANUFACTURING TEST.

```

7623 047636 042777 000016 134040      BIC      #16,@CSA      ;LOAD GAIN 1
7624 047644 013702 050674      MOV      TOLOF,R2     ;LOAD TABLE POINTER
7625 047650 011237 050672      MOV      (R2),TOLRA   ;LOAD TOLLERANCE FOR GAIN 1
7626 047654 012737 100000 004062      MOV      #100000,GOOD ;SET UP GOOD CONTENTS
7627 047662 050477 134016      BIS      R4,@CSA     ;LOAD NEIGHBORING CHANNEL
7628 047666 017737 134012 004064      MOV      @CSA,BAD    ;GET CSA CONTENTS
7629 047674 060437 004062      ADD      R4,GOOD     ;ADD CHA. NUMBER TO GOOD
7630 047700 023737 004062 004064      CMP      GOOD,BAD    ;IS CHANNEL AVAILABLE ?
7631 047706 004737 012146      CALL     INSERT      ;SKIP BRANCH IF "SFI" IS SET
7632 047712 001404      BEQ      170$       ;BRANCH IF YES
7633 047714      ERRSOFT 1504,E1501,EER4 ;ERROR HANDLER
      047714 104457      TRAP    C$ERSOFT
      047716 002740      .WORD  1504
      047720 051726      .WORD  E1501
      047722 007474      .WORD  EER4
7634 047724      170$:  CKLOOP      ;
      047724 104406      TRAP    C$CLP1
7635 047726 052777 000001 133750      BIS      #1,@CSA     ;START THE CONVERSION
7636 047734 005002      CLR      R2         ;SET UP TIMEOUT COUNTER
7637 047736 032777 000200 133740 180$:  BIT      #200,@CSA   ;CONVERSION OVER ?
7638 047744 001006      BNE      190$       ;BRANCH IF YES
7639 047746 005302      DEC      R2         ;DECREMENT TIMEOUT COUNTER
7640 047750 001372      BNE      180$       ;BRANCH IF NOT ZERO
7641 047752      ERRSOFT 1505,E1502,EER3 ;ERROR HANDLER
      047752 104457      TRAP    C$ERSOFT
      047754 002741      .WORD  1505
      047756 051755      .WORD  E1502
      047760 007442      .WORD  EER3
7642 047762      190$:  CKLOOP      ;
      047762 104406      TRAP    C$CLP1
7643 047764 017737 133712 004064      MOV      @DAT,BAD    ;GET CONVERSION VALUE
7644 047772 005001      CLR      R1         ;ADCON INPUT SHOULD BE ZERO
7645 047774 005002      CLR      R2         ;ADCON INPUT SHOULD BE ZERO
7646 047776 004737 014730      CALL     ADCON       ;ANALOGUE TO DIGITAL CONVERSION
7647 050002 010137 004062      MOV      R1,GOOD    ;GET GOOD VALUE FROM ADCON ROUTINE
7648 050006 063737 050672 004062      ADD      TOLRA,GOOD  ;ADD TOLLERANS TO EXPECTED VALUE
7649 050014 023737 004064 004062      CMP      BAD,GOOD    ;FOUND VALUE OUTSIDE POS. TOLLERANS ?
7650 050022 101020      BHI      200$       ;BRANCH IF YES TO ERROR
7651 050024 163737 050672 004062      SUB      TOLRA,GOOD  ;SUBTRACT ADDED TOLLERANS
7652 050032 163737 050672 004062      SUB      TOLRA,GOOD  ;SUB TOLLERANS FROM EXPECTED VALUE
7653 050040 023737 004064 004062      CMP      BAD,GOOD    ;FOUND VALUE INSIDE NEG. TOLLERANS ?
7654 050046 004737 012146      CALL     INSERT      ;SKIP BRANCH IF "SFI" IS SET
7655 050052 002013      BGE      220$       ;BRANCH IF YES
7656 050054 063737 050672 004062      ADD      TOLRA,GOOD  ;CORRECT GOOD TO ORIGINAL VALUE
7657 050062 000403      BR      210$       ;
7658 050064 163737 050672 004062 200$:  SUB      TOLRA,GOOD  ;CORRECT GOOD TO ORIGINAL VALUE
7659 050072 050072 104457 210$:  ERRSOFT 1506,E1503,EER4 ;ERROR HANDLER
      050074 002742      TRAP    C$ERSOFT
      050076 052030      .WORD  1506
      050100 007474      .WORD  E1503
      050102      .WORD  EER4
7660 050102      220$:  ENDSEG      ;
      050102      10003$: TRAP    C$ESEC
      050102 104405
7661
7662
7663

```

TEST 15: ANALOGUE INPUT TEST FIELD AND MANUFACTURING TEST.

```

7664 050104 010400          MOV      R4,R0          ;GET R4 CONTENTS (CHANNEL)
7665 050106 042700 170377  BIC      #170377,R0    ;CLEAR UNNEEDED BITS
7666 050112 022700 007400  CMP      #7400,R0     ;ALL CHANNELS TESTED ?
7667 050116 001404          BEQ      230$         ;BRANCH IF YES
7668 050120 062704 000400  ADD      #400,R4      ;INCREMENT CHANNEL NUMBER
7669 050124 000137 047202  JMP      40$         ;BRANCH IF NOT
7670 050130 023703 050670  230$:  CMP      VOLTE,R3   ;ALL VOLTAGES REQUESTED ?
7671 050134 001414          BEQ      240$         ;BRANCH IF YES
7672 050136 062703 000004  ADD      #4,R3       ;IF NO, POINT TO NEXT VALUE
7673 050142 005737 050666  TST     MUXC         ;ARE WE TESTING MUX BOARDS ?
7674 050146 001402          BEQ      233$         ;BRANCH IF NOT
7675 050150 062703 000004  ADD      #4,R3       ;IF YES SKIP HALF SCALE TESTING
7676 050154 005737 050662  233$:  TST     ANS153    ;ARE WE TESTING ODD CHANNELS
7677 050160 001016          BNE      250$         ;BRANCH IF YES
7678 050162 000137 047000  JMP      10$         ;AND REPEAT THE TEST WITH FIRST CHA.
7679 050166 005737 050662  240$:  TST     ANS153    ;WAS ODD AND EVEN CHA. TESTED ?
7680 050172 001056          BNE      270$         ;BRANCH IF YES
7681
7682          ;NOW WE DO CONVERSION WITH VOLTAGE SOURCE ON ODD CHANNELS
7683
7684 050174 012737 000001 050662  MOV      #1,ANS153    ;SET ODD/EVEN FLAG
7685 050202 012703 000014  MOV      #14,R3      ;POINT R3 TO BIPOLAR TABLE (VOLVA+14)
7686 050206 005737 050664  TST     BIPOL        ;IS BIPOLAR SELECTED ?
7687 050212 001001          BNE      250$         ;BRANCH IF YES
7688 050214 005003          CLR      R3          ;POINT R3 TO UNIPOLAR TABLE (VOLVA)
7689 050216 042704 007400  250$:  BIC      #7400,R4    ;CLEAR BITS FOR CHANNEL 0-15
7690 050222 052704 000400  BIS      #400,R4     ;LOAD FIRST ODD CHANNEL
7691 050226          PRINTF #MES152   ;PRINT VOLT SOURCE ADJUSTMENT
          MOV      #MES152,-(SP)
          MOV      #1,-(SP)
          MOV      SP,R0
          TRAP    C$PNTF
          ADD      #4,SP
          MOV      #OUT15,-(SP)
          MOV      #1,-(SP)
          MOV      SP,R0
          TRAP    C$PNTF
          ADD      #4,SP
7692 050246 016301 050676  MOV      VOLVA(R3),R1 ;LOAD DECOUT INPUT (R1)
7693 050252 016302 050700  MOV      VOLVA+2(R3),R2 ;...
7694 050256 004737 015764  CALL     DECOUT       ;PRINT DECIMAL NUMBER
7695 050262          PRINTF #OUT15    ;PRINT VOLT
          MOV      #OUT15,-(SP)
          MOV      #1,-(SP)
          MOV      SP,R0
          TRAP    C$PNTF
          ADD      #4,SP
7696 050302          260$:  GMANIL MES154,ANS152,1,YES ;CONNECT VOLT SOURCE TO J3 (ODD)
          TRAP    C$GMAN
          BR      10004$
          .WORD  ANS152
          .WORD  T$CODE
          .WORD  MES154
          .WORD  1
          10004$:
7697 050316 005737 050670  TST     ANS152       ;TEST ANSWER
7698 050322 001767          BEQ      260$         ;ASK AGAIN IF ANSWER IS NO
7699 050324 000137 047136  JMP      50$         ;REPEAT TEST WITH ODD CHANNELS
7700
7701          ;
7702
7703 050330 005737 050666  270$:  TST     MUXC         ;ARE WE TESTING THE CONTROLLER ?

```

TEST 15: ANALOGUE INPUT TEST FIELD AND MANUFACTURING TEST.

```

7704 050334 001427          BEQ     EXTRI          ;BRANCH IF YES TO EXT.TRIGGER PART
7705 050336 023737 050656 050666 MUXPAR: CMP     ANS151,MUXC    ;ALL BOARDS TESTED ?
7706 050344 001542          BEQ     EXQV15         ;IF YES, EXIT TEST
7707 050346 062704 000400    ADD     #400,R4        ;POINT TO NEXT BANK
7708 050352 042777 077536 133324    BIC     #77536,@CSA    ;CLEAR CSA REGISTER
7709 050360 050477 133320    BIS     R4,@CSA        ;LOAD CHANNEL IN CSA
7710 050364          GMANIL MES155,ANS152, 1,YES ;PUT TEST CONNECTOR TO NEXT BANK
      050364 104443          TRAP    C$GMAN
      050366 000404          BR      10005$
      050370 050660          .WORD  ANS152
      050372 000130          .WORD  T$CODE
      050374 051666          .WORD  MES155
      050376 177777          .WORD  -1
      050400          10005$:
7711 050400 042704 007400    BIC     #7400,R4        ;BEGIN TEST ITERATION WITH AN EVEN CHA.
7712 050404 005237 050666    INC     MUXC
7713 050410 000137 046750    JMP     PS151          ;COUNT MUX BOARDS
7714
7715
7716          ;THE FOLLOWING CODE IS USED FOR TEST EXTERNAL TRIGGER FUNCTION
7717
7718 050414          EXTRI: SETVEC  VEC,@INTSR,@PRI07 ;SET VECTOR 1 AND SERVICE ROUTINE
      050414 012746 000340          MOV     #PRI07,(SP)
      050420 012746 017276          MOV     #INTSR,-(SP)
      050424 013746 003710          MOV     VEC,(SP)
      050430 012746 000003          MOV     #3,-(SP)
      050434 104437          TRAP   C$ EC
      050436 062706 000010          ADD     #10,SP
7719 050442          SETPRI  #PRI07          ;DISABLE INTERRUPTS
      050442 012700 000340          MOV     #PRI07,RO
      050446 104441          TRAP   C$SPRI
7720 050450          BGNSEG
      050450 104404          TRAP   C$BSEG
7721 050452 005037 004150    CLR     INTFLA        ;CLEAR INTERRUPT FLAG
7722 050456 005005          CLR     R5           ;CLEAR GAIN POINTER
7723 050460 042777 077536 133216 20$: BIC     #77536,@CSA    ;CLEAR ALL R/W BITS IN CSA
7724 050466 050477 133212    BIS     R4,@CSA        ;LOAD CHANNEL
7725 050472          SETPRI  #PRI00        ;ALLOW INTERRUPTS
      050472 012700 000000          MOV     #PRI00,RO
      050476 104441          TRAP   C$SPRI
7726 050500 052777 000120 133176    BIS     #120,@CSA     ;SET EET + IE IN CSA
7727 050506 042777 000020 133170    BIC     #20,@CSA     ;DO EXTERNAL START (= CLR EET)
7728 050514 005003          CLR     R3           ;CLEAR TIMEOUT COUNTER
7729 050516 005737 004150          TST     INTFLA        ;WAS THERE A DONE INTERRUPT?
7730 050522 001010          BNE     50$          ;BRANCH IF YES
7731 050524 005303          DEC     R3           ;DECREMENT TIMEOUT COUNTER
7732 050526 004737 012146          CALL   INSERT        ;SKIP BRANCH IF 'SFI' IS SET
7733 050532 001371          BNE     40$          ;BRANCH IF NOT ZERO
7734 050534          ERRSOFT 1507,E1507,EERG ;ERROR HANDLER
      050534 104457          TRAP   C$ERSOFT
      050536 002743          .WORD  1507
      050540 052063          .WORD  E1507
      050542 007724          .WORD  EERG
7735 050544          50$: CKLOOP          ;
      050544 104406          TRAP   C$CLP1
7736 050546 017737 133132 004064    MOV     @CSA,BAD      ;GET CSA CONTENTS
7737 050554 012737 100300 004062    MOV     #100300,GOOD ;SET UP DATA FOR ERROR MESSAGES

```

TEST 15: ANALOGUE INPUT TEST FIELD AND MANUFACTURING TEST.

```

7738 050562 050437 004062      BIS      R4,GOOD      ;... (CHANNEL)
7739 050566 050537 004062      BIS      R5,GOOD      ;... (GAIN )
7740 050572 023737 004062 004064  CMP      GOOD,BAD     ;IS CSA CONTENTS OK AFTER CONVERSION?
7741 050600 004737 012146      CALL     INSERT      ;SKIP BRANCH IF 'SFI' IS SET
7742 050604 001404      BEQ     60$          ;BRANCH IF DONE IS CLEARED
7743 050606      ERRSOFT 1508,E1508,FER4 ;ERROR HANDLER
      050606 104457      TRAP    C$ERSOFT
      050610 002744      .WORD  1508
      050612 052134      .WORD  E1508
      050614 007474      .WORD  EER4
7744 050616      60$:  C$LOOP
      050616 104406      TRAP    C$CLP1
7745 050620 042777 000100 133056  BIC     #100,@CSA     ;CLEAR INTERRUPT ENABLE BIT
7746 050626 005037 004150      CLR     INTFLA       ;CLEAR DONE INTERRUPT FLAG
7747 050632      SETPRI #PRI07       ;DISABLE INTERRUPTS
      050632 012700 000340      MOV     #PRI07,RO
      050636 104441      TRAP    C$SPRI
7748 050640 005777 133036      TST     @DAT         ;READ DAT TO CLR DONE+ERR IN CSA
7749 050644      ENDSEG
      050644      10006$:
7750 050646 000137 050336      JMP     MUXPAR       ;JUMP TO MUX PART
      TRAP    C$ESEG
7751
7752 050652      EXQV15: EXIT  TST
      050652 104432      TRAP    C$EXIT
      050654 001632      .WORD  L10050-.
7753
7754 050656 000000      ANS151: .WORD  0      ;SAVE LOCATION FOR MUX BOARD ANSWER
7755 050660 000001      ANS152: .WORD  1      ;SAVE LOCATION FOR SOURCE CONNECTION ANSWER
7756 050662 000000      ANS153: .WORD  0      ;LOCATION FOR ODD/EVEN FLAG
7757 050664 000000      BIPOL:  .WORD  0      ;BIPOLAR FLAG
7758 050666 000000      MUXC:   .WORD  0      ;MUX BOARD COUNTER
7759 050670 000000      VOLTE:  .WORD  0      ;SAVE LOCATION FOR VOLVA TABLE END ADDR.
7760 050672 000002      TOLRA:  .WORD  2      ;LOCATION TO STORE THE TOLLERANS VALUE
7761 050674 000000      TOLOF:  .WORD  0      ;STORE TO SAVE TABLE POINTER
7762
7763 050676 000060 001474      VOLVA:  .WORD  48.,828. ;UNIPOLAR LSB VALUE
7764 050702 011610 000000      .WORD  5000.,0       ;UNIPOLAR HALF SCALE VALUE
7765 050706 023413 000144      .WORD  9995.,100.    ;UNIPOLAR FULL SCALE VALUE
7766
7767 050712 154365 177634      .WORD  -9995.,-100.  ;BIPOLAR FULL NEG. VALUE
7768 050716 000060 001474      .WORD  48.,828.     ;BIPOLAR ZERO SCALE VALUE
7769 050722 023413 000144      .WORD  9995.,100.   ;BIPOLAR FULL POS. VALUE
7770
7771
7772      ;  TOLLERANCE TABLE
7773
7774      ;  GAIN  1 2 5 10 20 50 100 200
7775
7776 050726 000002 000002 000002 000002  FILTOL: .WORD  2,2,2, 4, 6, 7,12., 20. ;FIELD TABLE
      050734 000004 000006 000007
      050742 000014 000024
7777 050746 000002 000002 000002 000002  MAFTOL: .WORD  2,2,2, 3, 3, 5,10., 15. ;MANUFACTURING TABLE (NO MUX)
      050754 000003 000003 000005
      050762 000012 000017
7778 050766 000002 000002 000002 000002  MUXTOL: .WORD  2,2,2, 3, 5, 6,12., 17. ;MANUFACTURING TABLE (WITH MUX)
      050774 000003 000005 000006

```

TEST 15: ANALOGUE INPUT TEST - FIELD AND MANUFACTURING TEST.

```

051002 000014 000021
7779
7780
7781
7782
7783 051006      045      123      062  TSHD15: .ASCIZ /S2ANALOGUE INPUT TEST FIELD AND MANUFACTURING TESTN/
7784 051100      045      101      124  TM15: .ASCIZ /ATEST DISABLED - NO MANUAL INTERVENTION ALLOWED (UAM FLAG SET)N/
7785
7786 051202      045      116      045  WME151: .ASCIZ /NNAIS THE ANALOGUE INPUT TEST CONNECTOR PLUGGED INTO THE BOARDN/
7787 051304      045      101      127  WME152: .ASCIZ /AWITH THE FLASHING LED ? /
7788 051340      116      125      115  MES151: .ASCIZ /NUMBER OF MUX BOARDS CONNECTED TO CONTROLLER/
7789 051415      045      116      045  MES152: .ASCIZ /NAAJUST VOLTAGE SOURCE TO /
7790 051455      045      101      040  OUT15: .ASCIZ /A MILLIVOLTN/
7791 051474      101      116      104  MES153: .ASCIZ /AND PUT IT TO J2 ON TEST CONNECTOR (CONNECT ALSO J3 WITH J4)/
7792 051571      101      116      104  MES154: .ASCIZ /AND PUT IT TO J3 ON TEST CONNECTOR (CONNECT ALSO J2 WITH J4)/
7793 051666      120      125      124  MES155: .ASCIZ /PUT TEST CONNECTOR TO N'XT BANK/
7794
7795 051726      103      123      101  E1501: .ASCIZ /CSA CONTENTS INCORRECT/
7796 051755      124      111      115  E1502: .ASCIZ /TIMEOUT - DONE BIT NOT SET AFTER AND START/
7797 052030      103      117      116  E1503: .ASCIZ /CONVERSION VALUE INCORRECT/
7798 052063      116      117      040  E1507: .ASCIZ /NO DONE INTERRUPT AFTER EXTERNAL TRIGGER/
7799 052134      103      123      101  E1508: .ASCIZ /CSA CONTENTS INCORRECT AFTER EXTERNAL TRIGGER/
7800 052212      045      116      045  PME151: .ASCIZ /NAMODULE IS SWITCHED TO UNIPOLAR RANGE N/
7801 052265      045      116      045  PME152: .ASCIZ /NAMODULE IS SWITCHED TO BIPOLAR RANGE N/
7802 052337      045      116      045  PME153: .ASCIZ /NATHIS TEST WILL ONLY RUN CORRECTLY IF THE MODULE IS N/
7803 052430      045      101      103  PME154: .ASCIZ /ACALIBRATED (USE TEST 24) N N/
7804 052467      045      116      045  PME155: .ASCIZ /NAWORKING N/
7805
7806
7807 052506
      052506
      052506 104401
                                .LIST  BEX
                                .EVEN
                                .ENDTST
                                L10050: TRAP  C$ETST

```

TEST 16: ANALOGUE OUTPUT TEST FIELD AND MANUFACTURING TEST

```

7809 .SBTTL TEST 16: ANALOGUE OUTPUT TEST FIELD AND MANUFACTURING TEST
7810 ;*****
7811 ; TEST 16 - ANALOGUE OUTPUT TEST.
7812 ;
7813 ; THE USER IS TOLD THAT THE TEST WILL ONLY
7814 ; RUN CORRECTLY IF THE MODULE HAS BEEN CALIBRATED.
7815 ;
7816 ; NEXT, THE OPERATOR IS ASKED WHETHER THE MODULE IS VOLTAGE
7817 ; CALIBRATED OR CURRENT CALIBRATED. DEPENDING ON THE RESPONSE, THE
7818 ; PROGRAM PROMPTS WITH VOLTAGE OR CURRENT VALUES.
7819 ; IF CURRENT IS USED A CHECK IS MADE THAT ALL CHANNELS ARE SHOWN
7820 ; AS "OPEN LINE" IN THE CSA REGISTER.
7821 ; THIS ASSUMES THAT NOTHING IS CONNECTED TO THE CURRENT OUTPUTS.
7822 ; THE USER IS THEN ASKED TO CONNECT A DVM WITH THE CORRECT RANGE
7823 ; TO THE MODULE OUTPUT AT THE SPECIFIED CHANNEL. IF CURRENT WAS
7824 ; SELECTED, THE PROGRAM USES THE OFFSET BIT IN THE MOD REGISTER AND
7825 ; CHECKS THAT THE OPL BIT IN THE CSA REGISTER IS CLEAR.
7826 ;
7827 ; THE OPERATOR THEN HAS TO CHECK SEVERAL VALUES TO ENSURE THAT THE
7828 ; READING OF THE DVM IS THE SAME AS THE OUTPUT VALUE. ALL
7829 ; VALUES HAVE BEEN CHECKED BY ANSWERING THE QUESTION 'IS VALUE ON
7830 ; DVM IN RANGE. THE PROCESS IS REPEATED FOR ALL
7831 ; CHANNELS.
7832 ;
7833 ; IF 'UAM' FLAG IS SET, THIS TEST WILL NOT BE CARRIED OUT.
7834 ;
7835 ; N.B. THE DVM READINGS MAY DIFFER FROM THE PRINTED VALUES IF THE
7836 ; MODULE HAS BEEN RECALIBRATED BY THE CUSTOMER.
7837 ;*****
7838 BGNTST
7839 052510 004737 011714          CALL    SELECT          ;CALL SELECT ROUTINE
7840 052514 001010                .WORD    1010           ;GIVE TEST PARAMETER
7841 052516 054530                TSHD16                ;GIVE TEST HEADER ADDRESS
7842 052520 103002                BCC     18            ;IF CARRY IS SET, EXIT TEST
7843 052522                EXIT    TST           ;EXIT TEST
7844 052522 104432                TRAP   C8EXIT
7844 052524 004010                .WORD   L10051 .
7844 052526                18:    MANUAL          ;IS MANUAL INTERVENTION ALLOWED?
7845 052530 104450                TRAP   C8MANI
7845 052530 103416                BCOMPLETE ITRA16      ;BRANCH IF YES (UAM FLAG NOT SET)
7846 052532                BCS    ITRA16
7846 052532 104421                RFLAGS  R0            ;READ OPERATOR FLAGS INTO R0
7847 052534 032700 001000        TRAP   C8RFLA
7848 052540 001410                BIT     @PNT,R0       ;PRINT MESSAGES ?
7849 052542                BEQ    38            ;IF NO, EXIT
7849 052542                PRINTF @TM16         ;IF YES PRINT TEST DISABLED
7849 052542 012746 054623        MOV    @TM16,(SP)
7849 052546 012746 000001        MOV    @1,(SP)
7849 052552 010600                MOV    SP,R0
7849 052554 104417                TRAP   C8PNTF
7849 052556 062706 000004        ADD    @4,SP
7850 052562                38:    EXIT    TST           ;EXIT TEST
7850 052562 104432                TRAP   C8EXIT
7850 052564 003750                .WORD   L10051 .
7851 052566 005001                ITRA16: CLR    R1
7852 052570 005004                CLR    R4
7852                ;CLEAR TEMPORARY STORE
7852                ;GET FIRST CHANNEL NUMBER

```

CI

TEST 16: ANALOGUE OUTPUT TEST FIELD AND MANUFACTURING TEST

SEQ 0197

```

7853 052572          PRINTF @PME166           ;MARK FOR CALIBRATION WITH
       052572 012746 055666          MOV @PME166,(SP)
       052576 012746 000001          MOV #1,(SP)
       052602 010600          MOV SP,R0
       052604 104417          TRAP C$PNTF
7854 052606 062706 000004          ADD #4,SP
       052612          PRINTF @PME167           ;TEST 23
       052612 012746 055757          MOV @PME167,(SP)
       052616 012746 000001          MOV #1,(SP)
       052622 010600          MOV SP,R0
       052624 104417          TRAP C$PNTF
7855 052626 062706 000004          ADD #4,SP
       052632          GMANIL MES164,ANS164,1,NO ;VOLTAGE OR CURRENT
       052632 104443          TRAP C$GMAN
       052634 000404          BR 10000$
       052636 054404          .WORD ANS164
       052640 000120          .WORD T$CODE
       052642 055521          .WORD MES164
       052644 177777          .WORD 1
       052646          10000$:
7856 052646 005737 054404          TST ANS164           ;IS CURRENT CALIBRATED?
7857 052652 001002          BNE 10$             ;SKIP VOLTAGE ROUTINE IF YES
7858 052654 000137 053744          JMP VOLPA           ;JUMP TO VOLTAGE ROUTINE
7859 052660          10$:
       052660 104404          BGNSEG
7860 052662 000304          SWAB R4             TRAP C$BSEG
7861 052664 005077 131014          CLR @CSA            ;CHANNEL NUMBER IN HIGH BYTE
7862 052670 050477 131010          BIS R4,@CSA         ;SET UP CSA
7863 052674 032777 000010 130776          BIT #10,@MOD        ;LOAD CHANNEL INTO CSA
7864 052702 001013          BNE 12$             ;IS 4-20 MA RANGE SELECTED
7865 052704 012777 000010 130770          MOV #10,@DAT        ;BRANCH IF YES
7866 052712 013703 004164          MOV REDTIM,R3       ;LOAD DAT FOR OPL CORRECTION
7867 052716 032777 000200 130760 13$:          BIT #200,@CSA       ;LOAD READY TIMEOUT COUNTER
7868 052724 001002          BNE 12$             ;IS READY BIT SET?
7869 052726 005303          DEC R3              ;BRANCH IF YES
7870 052730 001372          BNE 13$             ;IS TIMEOUT OVER?
7871 052732 004737 011514 12$:          CALL WT500          ;BRANCH IF NOT ZERO
7872 052736 017737 130742 004064          MOV @CSA,BAD        ;WAIT 500 US
7873 052744 032737 000040 004064          BIT #40,BAD         ;GET CSA CONTENTS
7874 052752 004737 012146          CALL INSERT         ;IS OLP BIT SET
7875 052756 001004          BNE 20$             ;SKIP BRANCH IF SFI IS SET
7876 052760          ERRSOF 1601,E1601,EER6 ;BRANCH IF YES
       052760 104457          ;ERROR HANDLER
       052762 003101          TRAP C$EPSOFT
       052764 056016          .WORD 1601
       052766 007602          .WORD E1601
7877 052770          20$:          ENDSFG           .WORD EER6
       052770          10001$:
7878 052772 000304          SWAB R4             TRAP C$SEGE
7879 052774 005204          INC R4              ;CHANNEL NUMBER IN LOW BYTE
7880 052776 022704 000004          CMP #4,R4           ;CREATE NEXT CHANNEL NUMBER
7881 053002 001326          BNE 10$             ;ALL 4 CHANNELS DONE ?
7882          ;BRANCH IF NO
7883 053004 017737 130670 004064          MOV @MOD,BAD        ;GET MOD REGISTER CONTENTS
7884 053012 012737 000003 004134          MOV #3,MODE         ;SET UP INPUT FOR DACON ROUTINE
7885 053020 012737 000036 054524          MOV #36,TABOFF     ;POINT TO CURRENT OFFSET TABLE

```

TEST 16: ANALOGUE OUTPUT TEST FIELD AND MANUFACTURING TEST

```

7886 053026 032737 000010 004064 BIT @10,BAD ;IS AN OFFSET SELECTED?
7887 053034 001005 BNE 30$ ;BRANCH IF YES
7888 053036 005037 054524 CLR TABOFF ;CLEAR TABLE POINTER
7889 053042 012737 000002 004134 MOV @2,MODE ;SET UP INPUT FOR DACON ROUTINE
7890 053050 005037 004136 30$: CLR GAIN ;...
7891 053054 005004 CLR R4 ;CHANNEL COUNTER
7892 053056 012737 000003 054526 40$: MOV @3,VALCNT ;LOAD VALUE COUNTER
7893 053064 PRINTF @PME162,R4 ;PROMT FOR DVM CHAN. CONNECTION
      053064 010446 MOV R4,-(SP)
      053066 012746 055055 MOV @PME162,(SP)
      053072 012746 000002 MOV @2,(SP)
      053076 010600 MOV SP,R0
      053100 104417 TRAP C$PNTF
      053102 062706 000006 ADD @6,SP
7894 053106 PRINTF @PME165 ;PROMT FOR DVM ADJUSTMEN
      053106 012746 055151 MOV @PME165,(SP)
      053112 012746 000001 MOV @1,(SP)
      053116 010600 MOV SP,R0
      053120 104417 TRAP C$PNTF
      053122 062706 000004 ADD @4,SP
7895 053126 PRINTF @PME16A ;
      053126 012746 055213 MOV @PME16A,-(SP)
      053132 012746 000001 MOV @1,(SP)
      053136 010600 MOV SP,R0
      053140 104417 TRAP C$PNTF
      053142 062706 000004 ADD @4,SP
7896 053146 GMANIL MES162,ANS161,1,YES ;...
      053146 104443 TRAP C$GMAN
      053150 000404 BR 10002$
      053152 054402 .WORD ANS161
      053154 000130 .WORD T$CODE
      053156 055305 .WORD MES162
      053160 177777 .WORD 1
      053162 10002$:
7897 053162 000304 SWAB R4 ;LOAD CHANNEL IN HIGH BYTE
7898 053164 01047 130514 MOV R4,@CSA ;LOAD CSA WITH CHANNEL NUMBER
7899 053170 01305 054524 MOV TABOFF,R5 ;POINT TO THE FIRST VALUE
7900 053174 016501 054430 50$: MOV CUROUT(R5),R1 ;GET OUTPUT VALUE FROM TABLE
7901 053200 BGNSEG TRAP C$BSEG
      053200 104404
7902 053202 032777 000010 130470 BIT @10,@MOD ;IS 4-20 MA RANGE SELECTED
7903 053210 001002 BNE 60$ ;BRANCH IF YES
7904 053212 005701 TST R1 ;ARE WE USEING 0 MA
7905 053214 001415 BEQ 70$ ;SKIP OPL TESTING IF YES
7906 053216 017737 130462 004064 60$: MOV @CSA,BAD ;GET CSA CONTENTS
7907 053224 032737 000040 004064 BIT @40,BAD ;IS OPL BIT CLEARED ?
7908 053232 004737 012146 CALL INSERT ;SKIP BRANCH IF SFI IS SET
7909 053236 001404 BEQ 70$ ;BRANCH IF YES
7910 053240 ERRSOFT 1602,E1602,EER3 ;ERROR HANDLER
      053240 104457 TRAP C$ERRSOFT
      053242 003102 .WORD 1602
      053244 056134 .WORD E1602
      053246 007442 .WORD EER3
7911 053250 70$: CKLOOP TRAP C$CKLP
      053250 104406
7912 053252 010177 130424 MOV R1,@DAT ;LOAD OUTPUT VALUE INTO DATA REG.
7913 053256 013703 004164 MOV REDTIM,R3 ;LOAD READ TIMEOUT COUNTER

```


TEST 16: ANALOGUE OUTPUT TEST FIELD AND MANUFACTURING TEST

```

053522 010600
053524 104417
053526 062706 000004
7943
7944 053532 006237 054402 ASR ANS161 ;DIVIDE BY TWO FOR VOLTAGE PRINTOUT
7945 053536 006003 ROR R3 ;DIVIDE BY TWO FOR VOLTAGE PRINTOUT
7946 053540 PRINTF @PME164,ANS161,R3 ;PRINT VOLT ON 500 OHM RESISTOR
053540 010346 MOV R3,(SP)
053542 013746 054402 MOV ANS161,(SP)
053546 012746 055603 MOV @PME164,(SP)
053552 012746 000003 MOV @3,(SP)
053556 010600 MOV SP,R0
053560 104417 TRAP C$PNTF
053562 062706 000010 ADD @4,SP
7947 053566 067705 000002 ADD @2,R5 ;POINT TO INTEGER DIFFERENTS VALUE
7948 053572 016501 054430 MOV CUROUT(R5),R1 ;AND GET IT
7949 053576 062705 000002 ADD @2,R5 ;POINT TO DECIMAL DIFFERENTS VALUE
7950 053602 016502 054430 MOV CUROUT(R5),R2 ;AND GET IT
7951 053606 PRINTF @PLMI ;PRINT ./
053606 012746 056457 MOV @PLMI,(SP)
053612 012746 000001 MOV @1,(SP)
053616 010600 MOV SP,R0
053620 104417 TRAP C$PNTF
053622 062706 000004 ADD @4,SP
7952 053626 004737 015764 CALL DECOU ;PRINT DIFFERENTS VALUE
7953 053632 PRINTF @OUT2 ;PRINT MILLIVOLTS
053632 012746 056516 MOV @OUT2,(SP)
053636 012746 000001 MOV @1,(SP)
053642 010600 MOV SP,R0
053644 104417 TRAP C$PNTF
053646 062706 000004 ADD @4,SP
7954
7955 053652 GMANIL MES165,ANS161,1,NO ;IS VALUE ON DVM IN RANGE ?
053652 104443 TRAP C$GMAN
053654 000404 BR 10004$
053656 054402 .WORD ANS161
053660 000120 .WORD T$CODE
053662 055017 .WORD MES165
053664 177777 .WORD 1
053666 10004$:
7956 053666 005737 054402 TST ANS161 ;TEST ANSWER
7957 053672 001004 BNE 110$ ;BRANCH IF YES
7958 053674 ERRSOF T 1605,E1608,EERG ;ERROR HANDLER
053674 104457 TRAP C$ERRSOF T
053676 003105 .WORD 1605
053700 056371 .WORD E1608
053702 007724 .WORD EERG
7959 053704 062705 000002 110$: ADD @2,R5 ;POINT TO NEXT OUTPUT VALUE
7960 053710 005337 054526 DEC VALCNT ;ALL VALUES USED
7961 053714 001402 BEQ 120$ ;BRANCH IF YES
7962 053716 000137 053174 JMP 50$ ;IF NO, REPEATED WITH NEXT VALUE
7963 053722 000304 120$: SWAB R4 ;CHANNEL NUMBER IN LOW BYTE
7964 053724 005204 INC R4 ;CREATE NEXT CHANNEL NUMBER
7965 053726 022704 000004 CMP @4,R4 ;ALL 4 CHANNELS DONE ?
7966 053732 001002 BNE 130$ ;BRANCH IF NO
7967 053734 000137 054376 JMP EXQV16 ;SKIP VOLTAGE OUTPUT CHECK
7968 053740 000137 053056 130$: JMP 40$ ;

```

TEST 16: ANALOGUE OUTPUT TEST FIELD AND MANUFACTURING TEST

```

7969
7970          ;...PART 2 WILL DO THE SAME WITH THE VOLTAGES OUTPUTS (EXCEPT THE OPL TESTING)
7971
7972 053744 012737 000000 004134 VOLPA: MOV    #0,MODE          ;SET UP DACON ROUTINE INP1,1
7973 053752 005037 004136          CLR    GAIN          ;...
7974 053756 005004          CLR    R4            ;START WITH CHANNEL 0
7975 053760 012737 000003 054526 10$: MOV    #3.,VALCNT      ;LOAD OUTPUT VALUE COUNTER
7976 053766          PRINTF  #PME163,R4      ;PROMT FOR DVM CHAN. CONNECTION
      053766 010446          MOV    R4, (SP)
      053770 012746 055346          MOV    #PME163, (SP)
      053774 012746 000002          MOV    #2, (SP)
      054000 010600          MOV    SP,R0
      054002 104417          TRAP  C$PNTF
      054004 062706 000006          ADD    #6,SP
7977 054010          GMANIL MES163,ANS161, 1,YES ;PROMT FOR DVM ADJUST
      054010 104443          TRAP  C$GMAN
      054012 000404          BR    10005$
      054014 054402          .WORD ANS161
      054016 000130          .WORD T$CODE
      054020 055441          .WORD MES163
      054022 177777          .WORD 1
      054024          10005$:
7978 054024 000304          SWAB   R4            ;LOAD CHANNEL IN HIGH BYTE
7979 054026 010477 127652          MOV    R4,@CSA      ;LOAD CHANNEL IN CSA
7980 054032 005005          CLR    R5            ;POINT TO THE FIRST VALUE
7981 054034 016501 054406 20$: MOV    VOLOUT(R5),R1 ;GET OUTPUT VALUE FROM TABLE
7982 054040          BGNSEG
      054040 104404          TRAP  C$BSEG
7983 054042 010177 127634          MOV    R1,@DAT      ;LOAD OUTPUT DATA REGISTER
7984 054046 013703 004164          MOV    REDTIM,R3    ;LOAD READY TIMEOUT COUNTER
7985 054052 032777 000200 127624 40$: BIT    #200,@CSA    ;IS READY BIT NOW SET?
7986 054060 004737 012146          CALL  INSERT        ;SKIP BRANCH IF SFI IS SET
7987 054064 001006          BNE   50$          ;BRANCH IF YES
7988 054066 005303          DEC   R3            ;DECREMENT READY TIMEOUT COUNT.
7989 054070 001370          BNE   40$          ;BRANCH IF COUNTER IS NOT ZERO
7990 054072          ERRSOFT 1606,E1603,EER3 ;
      054072 104457          TRAP  C$ERSOFT
      054074 003106          .WORD 1606
      054076 056244          .WORD E1603
      054100 007442          .WORD EER3
7991 054102          50$: CKLOOP ;
      054102 104406          TRAP  C$CLP1
7992 054104 017737 127574 004064          MOV    @CSA,BAD     ;GET CSA CONTENTS
7993 054112 012737 100200 004062          MOV    #100200,GOOD ;LOAD GOOD DATA
7994 054120 050437 004062          BIS   R4,GOOD       ;LOAD CHANNEL NUMBER
7995 054124 042737 000040 004064          BIC   #40,BAD       ;MASK OUT OPL BIT
7996 054132 023737 004062 004064          CMP   GOOD,BAD     ;CSA CONTENTS CORRECT AFTER READY SET?
7997 054140 004737 012146          CALL  INSERT        ;SKIP BRANCH IF SFI IS SET
7998 054144 001404          BEQ   30$          ;BRANCH IF YES
7999 054146          ERRSOFT 1607,E1604,EER1 ;ERROR HANDLER
      054146 104457          TRAP  C$ERSOFT
      054150 003107          .WORD 1607
      054152 056342          .WORD E1604
      054154 007342          .WORD EER1
8000 054156          30$: ENDSEG
      054156          10006$:
      054156 104405          TRAP  C$ESEG

```

TEST 16: ANALOGUE OUTPUT TEST FIELD AND MANUFACTURING TEST

8001	054160			PRINTF	@PME161		;PRINT OPERATOR ACTION
	054160	012746	054725				MOV @PME161.(SP)
	054164	012746	000001				MOV #1.(SP)
	054170	010600					MOV SP,R0
	054172	104417					TRAP C\$PNTF
	054174	062706	000004				ADD #4,SP
8002	054200	004737	014512	CALL	DACON		;CALL D/A CONVERSION ROUTINE
8003	054204	004737	015764	CALL	DECOUT		;PRINT OUT THE RESULT
8004	054210			PRINTF	@OUT2		;PRINT MILLIVOLTS
	054210	012746	056516				MOV @OUT2.(SP)
	054214	012746	000001				MOV #1.(SP)
	054220	010600					MOV SP,R0
	054222	104417					TRAP C\$PNTF
	054224	062706	000004				ADD #4,SP
8005	054230	062705	000002	ADD	#2,R5		;POINT TO INTEGER DIFFERENTS VALUE
8006	054234	016501	054406	MOV	VOLOUT(R5),R1		;AND GET IT
8007	054240	062705	000002	ADD	#2,R5		;POINT TO DECIMAL DIFFERENTS VALUE
8008	054244	016502	054406	MOV	VOLOUT(R5),R2		;AND GET IT
8009	054250			PRINTF	@PLMI		;PRINT ..
	054250	012746	056457				MOV @PLMI..(SP)
	054254	012746	000001				MOV #1.(SP)
	054260	010600					MOV SP,R0
	054262	104417					TRAP C\$PNTF
	054264	062706	000004				ADD #4,SP
8010	054270	004737	015764	CALL	DECOUT		;PRINT THE DIFFERENTS VALUE
8011	054274			PRINTF	@OUT2		;PRINT MILLIVOLTS
	054274	012746	056516				MOV @OUT2.(SP)
	054300	012746	000001				MOV #1.(SP)
	054304	010600					MOV SP,R0
	054306	104417					TRAP C\$PNTF
	054310	062706	000004				ADD #4,SP
8012	054314			GMANIL	MES165,ANS161,1,NO		;IS THE VALUE ON THE DVM IN RANGE
	054314	104443					TRAP C\$GMAN
	054316	000404					BR 10007\$
	054320	054402					.WORD ANS161
	054322	000120					.WORD T\$CODE
	054324	055017					.WORD MES165
	054326	177777					.WORD 1
	054330						10007\$:
8013	054330	005737	054402	TST	ANS161		;TEST ANSWER
8014	054334	001004		BNE	60\$;BRANCH IF YES
8015	054336			ERRSOFT	1608,E1608,EERG		;ERROR HANDLER
	054336	104457					TRAP C\$ERRSOFT
	054340	003110					.WORD 1608
	054342	056371					.WORD F1608
	054344	007724					.WORD EERG
8016	054346	062705	000002	60\$:	ADD #2,R5		;POINT TO THE NEXT OUTPUT VALUE
8017	054352	005337	054526	DEC	VALCNT		;ALL OUTPUT VALUES USED
8018	054356	001226		BNE	20\$;BRANCH IF NO
8019	054360	000304		SWAB	R4		;CHANNEL NUMBER IN LOW BYTE
8020	054362	005204		INC	R4		;NEXT CHANNEL NUMBER
8021	054364	022704	000004	CMP	#4,R4		;ALL 4 CHANNELS DONE
8022	054370	001402		BEQ	EXQV16		;EXIT IF YES
8023	054372	000137	053760	JMP	10\$;BRANCH IF NO
8024	054376			EXQV16:	EXIT		
	054376	104432					TRAP C\$EXIT
	054400	002134					.WORD -10051

TEST 16: ANALOGUE OUTPUT TEST - FIELD AND MANUFACTURING TEST

```

8025
8026 054402 000000      ANS161: .WORD 0      ;TEMPORARY STORE
8027 054404 000000      ANS164: .WORD 0      ;STORE FOR VOLTAGE OR CURRENT ANSWER
8028
8029 054406 000000 000002 000620 VOLOUT: .WORD 0,2,400. ;OUTPUT VALUE + DIFFERENTS FROM THAT
8030 054414 004000 000002 000620      .WORD 4000,2,400. ;... (= +/- 1LSB DIFFERENCE)
8031 054422 007777 000002 000620      .WORD 7777,2,400. ;...
8032
8033 054430 000000 000011 001130 CUROUT: .WORD 0,9.,600.,4,600. ;OUT VALUE+DIFFERENTS+500 OHM DIFF.
      054436 000004 001130
8034 054442 004000 000011 001130      .WORD 4000,9.,600.,4,600. ;...(* +/- 2LSB DIFFERENCE)
      054450 000004 001130
8035 054454 007777 000011 001130      .WORD 7777,9.,600.,4,600. ;...
      054462 000004 001130
8036
8037 054466 000000 000010 000000      .WORD 0,8.,0,4,0 ;OFFSET OUT+DIFFER.+500 OHM DIFFER.
      054474 000004 000000
8038 054500 004000 000010 000000      .WORD 4000,8.,0,4,0 ;...(* +/- 2LSB DIFFERENCE)
      054506 000004 000000
8039 054512 007777 000010 000000      .WORD 7777,8.,0,4,0 ;...
      054520 000004 000000
8040
8041 054524 000000      TABOFF: .WORD 0      ;CUROUT TABLE PIONTER
8042 054526 000000      VALCNT: .WORD 0      ;VALUE COUNTER
8043
8044      .NLIST BEX
8045 054530      045      123      062      TSHD16: .ASCIZ /S2#ANALOGUE OUTPUT TEST - FIELD AND MANUFACTURING TEST#N/
8046 054623      045      101      124      TM16: .ASCIZ /#ATEST DISABLED - NO MANUAL INTERVENTION ALLOWED (UAM FLAG SET)#N/
8047
8048 054725      045      116      045      PME161: .ASCIZ /#N#ACOMPARE THE PRINTED VALUE WITH THE VALUE ON THE DVM#N/
8049 055017      012      015      012      MES165: .ASCIZ <12><15><12><15>/IS VALUE ON DVM IN RANGE /
8050 055055      045      116      045      PME162: .ASCIZ /#N#ACONNECT YOUR DVM TO THE CURRENT OUTPUT AT CHANNEL #02#N/
8051 055151      045      101      124      PME165: .ASCIZ /#ATO MEASURE THE 20000 UA RANGE#N/
8052 055213      045      101      050      PME16A: .ASCIZ /#A(OOR THE 10000 MV RANGE IF YOU USE A 500 OHM RESISTOR)#N/
8053 055305      124      131      120      MES162: .ASCIZ /TYPE CARRIAGE RETURN TO CONTINUE/
8054 055346      045      116      045      PME163: .ASCIZ /#N#ACONNECT YOUR DVM TO THE VOLTAGES OUTPUT AT CHANNEL #02'
8055 055441      101      116      104      MES163: .ASCIZ /AND ADJUST IT TO MEASURE THE 0 10000 MV RANGE/
8056 055521      101      122      105      MES164: .ASCIZ /ARE THE ANALOGUE OUTPUTS FOR CURRENT CALIBRATED ?/
8057 055603      045      116      045      PME164: .ASCIZ /#N#A= #D5#A.#23#A MILLIVOLTS ON 500 OHM RESISTOR /
8058 055666      045      116      045      PME166: .ASCIZ /#N#ATHIS TEST WILL ONLY RUN CORRECTLY IF THE MODULE IS#N
8059 055757      045      101      103      PME167: .ASCIZ /#ACALIBRATED (USE TEST 23)#N#N/
8060
8061 056016      117      120      114      E1601: .ASCII /OPL BIT IN CSA NOT SET/<12><15>
8062 056046      115      101      113      .ASCIZ /MAKE SURE THAT NOTHING IS CONNECTED TO CURRENT OUTPUT'
8063 056134      117      120      114      E1602: .ASCII /OPL BIT IN CSA NOT CLEARED/<12><15>
8064 056170      111      123      040      .ASCIZ /IS DVM CONNECTED TO THE ADDRESSED CHANNEL ?/
8065 056244      122      105      101      E1603: .ASCIZ /READY BIT IN CSA NOT SET AFTER LOADING DAT REGISTER (TIMEOUT)
8066 056342      103      123      101      E1604: .ASCIZ /CSA CONTENTS INCORRECT.
8067 056371      115      117      104      E1608: .ASCIZ /MODULE DEFECT OR INCORRECTLY CALIBRATED TRY TEST 23
8068
8069 056457      045      101      040      PLMI: .ASCIZ \#A TOLLERANCE +/- \
8070 056501      045      101      040      OUT1: .ASCIZ /#A MICROAMPS/
8071 056516      045      101      040      OUT2: .ASCIZ /#A MILLIVOLTS/
8072      .LIST BEX
8073      .EVEN
8074 056534      .ENDTST
      056534

```

L10051:

HARDWARE TESTS MACRO M1200 26 OCT 83 15:22 PAGE 81 8

TEST 16: ANALOGUE OUTPUT TEST FIELD AND MANUFACTURING TEST

056534 104401

J16

SEQ 0204

TRAP C8ETST

TEST 17: DIGITAL INPUT TEST USING FIELD TEST CONNECTOR.

```

8076 .SBTTL TEST 17: DIGITAL INPUT TEST - USING FIELD TEST CONNECTOR.
8077 ;*****
8078 ; TEST 17 DIGITAL INPUT TEST.
8079 ;
8080 ;FIRST OF ALL, THE USER IS PROMPTED TO INSERT THE TEST CONNECTOR INTO THE
8081 ;MODULE ON WHICH THE LED IS FLASHING. THEN A CHECK IS MADE THAT THE INPUT
8082 ;DATA MATCHES THE ODD PATTERNS AVAILABLE FROM THE CONNECTOR. AFTER THIS,
8083 ;THE USER IS ASKED TO SWITCH THE CONNECTOR TO THE EVEN POSITION AND THE
8084 ;DATA IS CHECKED TO BE CORRECT. THE PROGRAM THEN PROMPTS THE USER TO MOVE
8085 ;THE SWITCH "ON" AND "OFF" TWICE MORE. THIS CHECKS THAT THE CSA INTERRUPT
8086 ;BIT IR15 CAN BE SET TO CAUSE AN INTERRUPT BY THE LEADING OR TRAILING
8087 ;EDGES OF THE MODULE DATA LINE 15, AND THAT IR15 OF THE CSA REMAINS SET
8088 ;AFTER THE DATA LINE 15 HAS REVERTED TO ITS ORIGINAL STATE.
8089 ;
8090 ;IF 'UAM' FLAG IS SET, THIS TEST WILL NOT BE CARRIED OUT.
8091 ;
8092 ;THIS TEST IS CARRIED OUT IN LOW LEVEL MODE.
8093 ;*****
8094 056536          BGNTST
8095 056536 004737 011714          CALL SELECT          ;CALL SELECT ROUTINE
8096 056542 001001          .WORD 1001          ;GIVE TEST PARAMETER
8097 056544 057454          TSHD17          ;GIVE TEST HEADER ADDRESS
8098 056546 103002          BCC 10$          ;IF CARRY IS SET, EXIT TEST
8099 056550          EXIT TST          ;EXIT TEST
8100 056552 104432          TRAP C$EXIT
8100 056554 002314          .WORD L10052 .
8101 056554 104450          10$: MANUAL          ;IS MANUAL INTERVENTION ALLOWED?
8101 056556          BCOMPLETE 20$          ;IF YES, BRANCH (UAM FLAG NOT SET)
8102 056556 103416          TRAP C$MANI
8102 056560          RFLAGS RO          ;READ OPERATOR FLAGS INTO RO
8102 056560 104421          BCS 20$          ;PRINT MESSAGES ?
8103 056562 032700 001000          TRAP C$RFLA
8104 056566 001410          BIT @PNT,RO          ;IF NO, EXIT
8105 056570          BEQ 3$          ;IF YES PRINT TEST DISABLED
8105 056570 012746 057544          PRINTF @TM17          ;PRINT TEST DISABLED
8105 056574 012746 000001          MOV @TM17, (SP)
8105 056600 010600          MOV @1, (SP)
8105 056602 104417          MOV SP,RO
8105 056604 062706 000004          TRAP C$PNTF
8106 056610          ADD @4,SP
8106 056610 104432          3$: EXIT TST          ;IF NO, EXIT TEST
8106 056612 002254          TRAP C$EXIT
8107 056614 052777 000010 125056 20$: BIS @10,@MOD          ;SELECT LOW LEVEL RANGE
8108 056622          PRINTF @WME171          ;ASK FOR TEST CONNECTOR
8108 056622 012746 057646          MOV @WME171, (SP)
8108 056626 012746 000001          MOV @1, (SP)
8108 056632 010600          MOV SP,RO
8108 056634 104417          TRAP C$PNTF
8108 056636 062706 000004          ADD @4,SP
8109 056642          PRINTF @WME172          ;ASK FOR TEST CONNECTOR
8109 056642 012746 057747          MOV @WME172, (SP)
8109 056646 012746 000001          MOV @1, (SP)
8109 056652 010600          MOV SP,RO
8109 056654 104417          TRAP C$PNTF
8109 056656 062706 000004          ADD @4,SP

```

TEST 17: DIGITAL INPUT TEST USING FIELD TEST CONNECTOR.

8110	056662	004737	016576	CALL	FLASH				;CALL FLASHING LED ROUTINE
8111	056666	005737	017000	TST	FLSANS				;WAS THE ANSWER NO?
8112	056672	001753		BEQ	30\$;ASK AGAIN IF ANSWER WAS NO
8113	056674	005037	004144	CLR	IIRCNT				;CLEAR ITERATION COUNTER
8114	056700			SETVEC	VEC,#INTSR,#PRI07				;SET UP VECTOR AND SERVICE ROUT.
	056700	012746	000340					MOV	#PRI07,(SP)
	056704	012746	017276					MOV	#INTSR,(SP)
	056710	013746	003710					MOV	VEC,(SP)
	056714	012746	000003					MOV	#3,(SP)
	056720	104437						TRAP	C\$SVEC
	056722	062706	000010					ADD	#10,SP
8115	056726	005001		ITRA17:	CLR	R1			;CLEAR TEMPORARY STORE
8116	056730				BGNSEG				
	056730	104404						TRAP	C\$BSEG
8117	056732	005037	004150	CLR	INTFLA				;CLEAR INTERRUPT FLAG
8118	056736	017737	124740	MOV	@DAT,BAD	004064			;READ INPUT
8119	056744	022737	125252	CMP	#125252,BAD	004064			;IS ODD PATTERN FOUND ?
8120	056752	004737	012146	CALL	INSERT				;SKIP BRANCH IF "SFI" IS SET
8121	056756	001407		BEQ	10\$;IF YES BRANCH
8122	056760	012737	125252	MOV	#125252,GOOD	004062			;SET UP DATA FOR ERROR HANDLER
8123	056766			ERRSOFT	1701,E1701,EER2				;ERROR HANDLER
	056766	104457						TRAP	C\$ERSOFT
	056770	003245						.WORD	1701
	056772	060356						.WORD	E1701
	056774	007400						.WORD	EER2
8124	056776			10\$:	CKLOOP				
	056776	104406						TRAP	C\$CLP1
8125	057000			20\$:	GMANIL	MES171,ANS,-1,NO			;PROMPT FOR EVEN PATTERN
	057000	104443						TRAP	C\$GMAN
	057002	000404						BR	10001\$
	057004	004142						.WORD	ANS
	057006	000120						.WORD	T\$CODE
	057010	060035						.WORD	MES171
	057012	177777						.WORD	1
	057014								10001\$:
8126	057014	005737	004142	TST	ANS				;CHECK THE ANSWER
8127	057020	001767		BEQ	20\$;IF ANSWER WAS NO, ASK AGAIN
8128	057022	017737	124654	MOV	@DAT,BAD	004064			;READ INPUT
8129	057030	022737	052525	CMP	#52525,BAD	004064			;EVEN PATTERN FOUND
8130	057036	004737	012146	CALL	INSERT				;SKIP BRANCH IF "SFI" IS SET
8131	057042	001407		BEQ	30\$;IF YES, BRANCH
8132	057044	012737	052525	MOV	#52525,GOOD	004062			;SET UP DATA FOR ERROR HANDLER
8133	057052			ERRSOFT	1702,E1702,EER2				;ERROR HANDLER
	057052	104457						TRAP	C\$ERSOFT
	057054	003246						.WORD	1702
	057056	060447						.WORD	E1702
	057060	007400						.WORD	EER2
8134	057062			30\$:	CKLOOP				
	057062	104406						TRAP	C\$CLP1
8135	057064	012777	040000	MOV	#40000,@CSA	124612			;SET IE IN CSA REGISTER
8136	057072	052777	020000	BIS	#20000,@CSA	124604			;SET ELE IN CSA REGISTER
8137	057100			SETPRI	#PRI00				;ENABLE INTERRUPT
	057100	012700	000000					MOV	#PRIOC,RO
	057104	104441						TRAP	C\$SPRI
8138	057106			40\$:	GMANIL	MES172,ANS,1,NO			;ASK ODD POSITION
	057106	104443						TRAP	C\$GMAN
	057110	000404						BR	10002\$

TEST 17: DIGITAL INPUT TEST - USING FIELD TEST CONNECTOR.

	057112	004142							.WORD	ANS
	057114	000120							.WORD	T\$CODE
	057116	060136							.WORD	MES172
	057120	177777							.WORD	1
	057122									
8139	057122	005737	004142		TST	ANS			10002\$:	
8140	057126	001767			BEQ	40\$;CHECK THE ANSWER
8141	057130	005737	004150		TST	INTFLA				;IF ANSWER WAS NO, ASK AGAIN
8142	057134	004737	012146		CALL	INSERT				;WAS THERE AN INTERRUPT AT LEAD.?
8143	057140	001004			BNE	50\$;SKI' BRANCH IF "SFI" IS SET
8144	057142				ERRSOFT	1703,E1703,EER3				;BRANCH IF YES
	057142	104457								;ERROR HANDLER
	057144	003247							TRAP	C\$ERSOFT
	057146	060537							.WORD	1703
	057150	007442							.WORD	E1703
8145	057152			50\$:	CKLOOP				.WORD	EER3
	057152	104406								
8146	057154	017737	124524	004064	MOV	@CSA,BAD			TRAP	C\$CLP1
8147	057162	022737	160000	004064	CMP	#160000,BAD				
8148	057170	004737	012146		CALL	INSERT				;GET CSRA CONTENTS
8149	057174	001407			BEQ	60\$;IS IR15,EI AND ELE15 IN CSRA SET
8150	057176	012737	160000	004062	MOV	#160000,GOOD				;SKIP BRANCH IF "SFI" IS SET
8151	057204				ERRSOFT	1704,E1704,EER2				;BRANCH IF YES
	057204	104457								;SET UP DATA FOR ERROR HANDLER
	057206	003250								;ERROR HANDLER
	057210	060614							TRAP	C\$ERSOFT
	057212	007400							.WORD	1704
8152	057214			60\$:	ENDSEG				.WORD	E1704
	057214								.WORD	EER2
	057214	104405								
8153	057216				BGNSEG				10000\$:	
	057216	104404								
8154	057220	012777	050000	124456	MOV	#50000,@CSA			TRAP	C\$ESEG
8155	057226	052777	100000	124450	BIS	#100000,@CSA				
8156	057234	005037	004150		CLR	INTFLA				;LOAD EI AND ETE15 INTO CSRA
8157	057240				GMANIL	MES173,ANS, 1,NO				;CLEAR IR BIT IN CSA REGISTER
	057240	104443								;CLEAR INTERRUPT FLAG
	057242	000404								;ASK FOR EVEN MESSAGES
	057244	004142							TRAP	C\$GMAN
	057246	000120							BR	10004\$
	057250	060247							.WORD	ANS
	057252	177777							.WORD	T\$CODE
	057254								.WORD	MES173
	057254								.WORD	1
8158	057254	005737	004142		TST	ANS			10004\$:	
8159	057260	001767			BEQ	70\$;CHECK THE ANSWER
8160	057262	005737	004150		TST	INTFLA				;IF ANSWER WAS NO, ASK AGAIN
8161	057266	004737	012146		CALL	INSERT				;WAS THERE AN INTERRUPT AT TRAI.?
8162	057272	001004			BNE	80\$;SKIP BRANCH IF "SFI" IS SET
8163	057274				ERRSOFT	1705,E1705,EER3				;BRANCH IF YES
	057274	104457								;ERROR HANDLER
	057276	003251							TRAP	C\$ERSOFT
	057300	060714							.WORD	1705
	057302	007442							.WORD	E1705
8164	057304			80\$:	CKLOOP				.WORD	EER3
	057304	104406								
8165	057306	017737	124372	004064	MOV	@CSA,BAD			TRAP	C\$CLP1
8166	057314	022737	150000	004064	CMP	#150000,BAD				
										;GET CSRA CONTENTS
										;IS IR15,EI AND ETE15 STILL SET

TEST 17: DIGITAL INPUT TEST - USING FIELD TEST CONNECTOR.

```

8167 057322 004737 012146          CALL    INSERT          ;SKIP BRANCH IF "SFI" IS SET
8168 057326 001407                   BEQ     901             ;BRANCH IF YES
8169 057330 012737 150000 004062    MOV     @150000,GOOD    ;SET UP DATA FOR ERROR HANDLER
8170 057336                   ERRSOFT 1706,E1704,EER2 ;ERROR HANDLER
                                TRAP    C%ERSOFT
                                .WORD   1706
                                .WORD   E1704
                                .WORD   EER2
8171 057346                   901:   CKLOOP
8172 057350                   GMANIL MES172,ANS,-1,NO ;ASK ODD POSITION
                                TRAP    C%CLP1
                                .WORD   100051
                                BR       100051
                                .WORD   ANS
                                .WORD   T%CODE
                                .WORD   MES172
                                .WORD   -1
8173 057364 005737 004142          TST    ANS              ;CHECK THE ANSWER
8174 057370 001766                   BEQ     901             ;IF ANSWER WAS NO, ASK AGAIN
8175 057372 017737 124306 004064    MOV     @BCSA,BAD      ;GET CSRA CONTENTS
8176 057400 022737 150000 004064    CMP     @150000,BAD     ;IS IR15,EI AND ETE15 STILL SET
8177 057406 004737 012146          CALL    INSERT          ;SKIP BRANCH IF "SFI" IS SET
8178 057412 001407                   BEQ     1001           ;BRANCH IF YES
8179 057414 012737 150000 004062    MOV     @150000,GOOD    ;SET UP DATA FOR ERROR HANDLER
8180 057422                   ERRSOFT 1707,E1707,EER2 ;ERROR HANDLER
                                TRAP    C%ERSOFT
                                .WORD   1707
                                .WORD   E1707
                                .WORD   EER2
8181 057432                   1001: ENDSEG
                                TRAP    C%ESEG
                                .WORD   100031
8182 057434                   100031:
8182 057434 104405                   SETPRI @PRI07          ;DISABLE INTERRUPTS
                                MOV     @PRI07,RO
                                TRAP    C%SPRI
8183 057442                   CLRVEC VEC             ;RESTORE INTERRUPT VECTOR
                                MOV     VEC,RO
                                TRAP    C%CVEC
8184 057450                   EXQV17: EXIT          TST
                                TRAP    C%EXIT
                                .WORD   L10052
8185 .NLIST BEX
8186 057454 045 123 062 TSHD17:;.ASCIZ /#S2#ADIGITAL INPUT TEST - USING FIELD TEST CONNECTOR.#N/
8187 057544 045 101 124 TM17: .ASCIZ /#ATFST DISABLED NO MANUAL INTERVENTION ALLOWED (UAM FLAG SET)#N
8188
8189 057646 045 116 045 WME171: .ASCIZ /#W#AIS THE DIGITAL TEST CONNECTOR SWITCHED TO THE ODD POSITION#N
8190 057747 045 101 101 WME172: .ASCIZ /#A#AND PLUGGED INTO THE BOARD WITH THE FLASHING LED ?
8191 060035 115 117 126 MES171: .ASCII /MOVE THE SWITCH TO THE EVEN POSITION/<12><15>
8192 060103 124 131 120 .ASCIZ /TYPE Y AND THEN CR IF DONE/
8193 060136 116 117 127 MES172: .ASCII /NOW MOVE THE SWITCH BACK TO THE ODD POSITION/<12><15>
8194 060214 124 131 120 .ASCIZ /TYPE Y AND THEN CR IF DONE/
8195 060247 115 117 126 MES173: .ASCII /MOVE THE SWITCH TO THE EVEN POSITION AGAIN/<12><15>
8196 060323 124 131 120 .ASCIZ /TYPE Y AND THEN CR IF DONE/
8197 060356 104 101 124 E1701: .ASCIZ /DATA REGISTER OF DIGITAL INPUT NOT LOADED WITH EVEN DATA
8198 060447 104 101 124 E1702: .ASCIZ /DATA REGISTER OF DIGITAL INPUT NOT LOADED WITH ODD DATA
8199 060537 116 117 040 E1703: .ASCIZ /NO INTERRUPT ON LEADING EDGE OF DATA LINE 15

```

TEST 17: DIGITAL INPUT TEST USING FIELD TEST CONNECTOR.

8200	060614	103	123	101	E1704:	.ASCII	/CSA REGISTER OF DIGITAL INPUT MODULE INCORRECT/12,15>
8201	060674	101	106	124		.ASCII2	/AFTER INTERRUPT/
8202	060714	116	117	040	E1705:	.ASCII2	/NO INTERRUPT ON TRAILING EDGE OF DATA LINE 15/
8203	060772	103	123	101	E1707:	.ASCII2	/CSA DATA BIT IR15 IS NOT CORRECT CLEARED BY DATA LINE 15/
8204						.LIST	BEX
8205						.EVEN	
8206	061066					ENDTST	
	061066						
	061066	104401					

L10052: TRAP CSETST

TEST 18: DIGITAL OUTPUT TEST USING FIELD TEST CONNECTOR.

```

8208 .SRITL TEST 18: DIGITAL OUTPUT TEST - USING FIELD TEST CONNECTOR.
8209 ;*****
8210 ; TEST 18 DIGITAL OUTPUT TEST.
8211 ;
8212 ;THE USER IS PROMPTED TO INSERT THE DIGITAL TEST CONNECTOR INTO THE MODULE
8213 ;ON WHICH THE LED IS FLASHING. THEN HE IS PROMPTED TO CHECK THAT A SLIDING
8214 ;ONES PATTERN APPEARS ON THE TEST CONNECTOR LEDS. AFTER 15 SECONDS THE PROGRAM
8215 ;PROMPTS THE USER TO LOOK FOR A SLIDING ZEROS PATTERN, WHICH IS OUTPUT FOR
8216 ;15 SECONDS BEFORE TERMINATING THE TEST. THIS CHECKS THAT ALL OUTPUT LINES
8217 ;CAN BE UNIQUELY SET AND CLEARED.
8218 ;
8219 ;IF THE 'UAM' FLAG IS SET, THIS TEST WILL NOT BE CARRIED OUT.
8220 ;*****
8221 061070 BGNIST
      061070
8222 061070 004737 011714 CALL SELECT T18::
8223 061074 001002 .WORD 1002 ;CALL SELECT ROUTINE
8224 061076 061424 TSMO18 ;GIVE TEST PARAMETER (FIELD/DO)
8225 061100 103546 BCS EXQV18 ;GIVE TEST HEADER
8226 061102 MANUAL ;IF CARRY IS SET, EXIT TEST
      061102 104450 ;IS MANUAL INTERVENTION ALLOWED?
8227 061104 BCOMPLETE 10% TRAP C$MANI
      061104 103416 ;IF YES BRANCH (UAM FLAG NOT SET)
8228 061106 RFLAGS RO BCS 10%
      061106 104421 ;READ OPERATOR FLAGS INTO RO
8229 061110 032700 001000 BIT @PNT,RO TRAP C$RFLA
8230 061114 001410 BEQ 3% ;PRINT MESSAGES ?
8231 061116 PRINTF @TM18 ;IF NO, EXIT
      061116 012746 061515 ;IF YES PRINT TEST DISABLED
      061122 012746 000001 MOV @TM18,-(SP)
      061126 010600 MOV @1,-(SP)
      061130 104417 MOV SP,RO
      061132 062706 000004 TRAP C$PNTF
8232 061136 3%: EXIT TST ;EXIT TEST
      061136 104432 TRAP C$EXIT
      061140 000762 .WORD L10053
8233 061142 005737 004130 10%: TST LOTFLA ;IS LOOP ON TEST FLAG SET ?
8234 061146 001027 BNE 30% ;IF NO, BRANCH
8235 061150 005337 004130 DEC LOTFLA ;IF YES, DECREMENT IT
8236 061154 20%: PRINTF @WME181 ;ASK FOR TEST CONNECTOR
      061154 012746 061617 MOV @WME181,-(SP)
      061160 012746 000001 MOV @1,-(SP)
      061164 010600 MOV SP,RO
      061166 104417 TRAP C$PNTF
      061170 062706 000004 ADD @4,SP
8237 061174 PRINTF @WME184 ;...
      061174 012746 061712 MOV @WME184,(SP)
      061200 012746 000001 MOV @1,(SP)
      061204 010600 MOV SP,RO
      061206 104417 TRAP C$PNTF
      061210 062706 000004 ADD @4,SP
8238 061214 004737 016576 CALL FLASH ;CALL FLASHING LED ROUTINE
8239 061220 005737 017000 TST FLSANS ;IF THE ANSWER IS NO
8240 061224 001753 BEQ 20% ;BRANCH BACK AND ASK AGAIN
8241 061226 005037 004144 30%: CLR ITRCNT ;CLEAR ITERATION COUNTER
8242 061232 005037 061422 ITRA18: CLR SLZERO ;CLEAR FLAG
8243 061236 PRINTB @WME182 ;PRINT SLIDING ONE MESSAGES

```


HARDWARE TESTS MACRO M1200 26 OCT 83 15:22 PAGE 83 2
TEST 18: DIGITAL OUTPUT TEST - USING FIELD TEST CONNECTOR.
8.297

F1

SEQ 0212

HARDWARE TESTS MACRO M1200 26 OCT 83 15:22 PAGE 85
TEST 18: DIGITAL OUTPUT TEST - USING FIELD TEST CONNECTOR.
8305 06.124
8306
ENDMOD

G1

SEQ 0213

TEST 18: DIGITAL OUTPUT TEST - USING FIELD TEST CONNECTOR.

```

8310 .TITLE HARDWARE TESTS
8355
8356 062124 BGNMOD
8357 .SBTTL TEST 19: DIGITAL INPUT TEST - SPECIFICALLY SELECTABLE
8358 :*****
8359 : TEST 19 - DIGITAL INPUT TEST - SPECIFICALLY SELECTABLE
8360 :
8361 : THIS TEST CONTINUOUSLY READS THE INPUT LINES AND PRINTS THE DATA
8362 : TO THE CONSOLE.
8363 :
8364 : THE USER IS ASKED WHICH INPUT RANGE (LOW LEVEL OR NORMAL) AND IF
8365 : NORMAL IS SELECTED, WHICH DEBOUNCE PERIOD TO USE. THEN THE INPUT
8366 : LINES OF THE MODULE ARE CONTINUOUSLY READ AND, IF THE SUPERVISOR
8367 : FLAG "INHIBIT ERROR REPORT" IS NOT SET, THE BIT PATTERN IS
8368 : OUTPUT TO THE CONSOLE. BY USING DIFFERENT INPUT VOLTAGES, THIS
8369 : TEST CAN BE USED TO CHECK THE SWITCHING LEVELS. THIS TEST IS A
8370 : VISUAL TEST. AN ERROR REPORT IS ONLY MADE IF THE LLS AND RT BITS
8371 : IN THE MOD REGISTER CAN'T CLEAR OR SET. THE INTERRUPT FUNCTION
8372 : OF THE MODULE IS NOT TESTED. TO ABORT THE TEST, THE USER MUST
8373 : TYPE "CNTRL C".
8374 :
8375 :*****
8376 062124 BGNTST 19.
8377 062124 004737 011714 T19:
8378 062130 010001 .WORD 10001 ;CALL SELECT ROUTINE
8379 062132 062450 TSM019 ;GIVE TEST PARAMETER (SPEC/DI)
8380 062134 103002 BCC ITRA19 ;GIVE TEST HEADER
8381 062136 EXIT TST ;IF CARRY IS SET, EXIT TEST
8382 062136 104432 TRAP C$EXIT
8382 062140 001112 .WORD L10054
8382 062142 ITRA19: GMANIL MMES1,ANS, 1,NO ;ASK FOR LEVEL
8382 062142 104443 TRAP C$GMAN
8382 062144 000404 BR 10000$
8382 062146 004142 .WORD ANS
8382 062150 000120 .WORD T$CODE
8382 062152 063020 .WORD MMES1
8382 062154 177777 .WORD 1
8382 062156 10000$:
8383 062156 005737 004142 TST ANS ;IS LOW LEVEL SELECTED?
8384 062162 001067 BNE 30$ ;IF YES, DON'T ASK FOR DEBOUNCE
8385 062164 042777 000010 121506 BIC @10,@MOD ;CLEAR LOW LEVEL BIT IN MOD REG.
8386 062172 017737 121502 004064 MOV @MOD,BAD ;GET MOD REGISTER CONTENTS
8387 062200 032737 000010 004064 BIT @10,BAD ;IS LOW LEVEL BIT IN MOD CLEARED?
8388 062206 004737 012146 CALL INSERT ;SKIP BRANCH IF SFI IS SET
8389 062212 001404 BEQ 10$ ;BRANCH IF YES
8390 062214 ERRSOFT 1901,E1901,EERG ;ERROR HANDLER
8390 062214 104457 TRAP C$ERSOFT
8390 062216 003555 .WORD 1901
8390 062220 062535 .WORD E1901
8390 062222 007724 .WORD EERG
8391 062224 10$: CKLOOP ;
8392 062224 104406 TRAP C$CLP1
8392 062226 GMANID MMES2,ANS1,0, 1,1,3,NO ;ASK FOR DEBOUNCE PERIOD
8392 062226 104443 TRAP C$GMAN
8392 062230 000406 BR 10001$
8392 062232 062446 .WORD ANS1

```


TEST 19: DIGITAL INPUT TEST - SPECIFICALLY SELECTABLE

```

062234 000022 .WORD T$CODE
062236 063042 .WORD MMES2
062240 177777 .WORD -1
062242 000001 .WORD T$LLOLIM
062244 000003 .WORD T$HILIM
062246 10001$:
8393 062246 053777 062446 121424 BIS ANS1,@MOD ;SET RESPONSE TIME IN MOD REG.
8394 062254 032737 000001 062446 BIT #1,ANS1 ;IS ONLY RTO USED ?
8395 062262 001003 BNE 20$ ;BRANCH IF NO
8396 062264 042777 000002 121406 BIC #2,@MOD ;IF YES, CLEAR RT1 BIT
8397 062272 117137 121402 004064 20$: MOVB @MOD,BAD ;GET MOD REGISTER CONTENTS
8398 062300 123737 004064 062446 CMPB BAD,ANS1 ;DEBOUNCE CORRECT LOADED
8399 062306 004737 012146 CALL INSERT ;SKIP BRANCH IF 'SFI' IS SET
8400 062312 001435 BEQ 40$ ;BRANCH IF YES
8401 062314 013737 062446 004062 MOV ANS1,GOOD ;SET UP DATA FOR ERROR HANDLER
8402 062322 052737 002100 004062 BIS #2100,GOOD ;...
8403 062330 ERRSOFT 1902,E1902,EER1 ;ERROR HANDLER
062330 104457 TRAP C$ERSOFT
062332 003556 .WORD 1902
062334 062641 .WORD E1902
062336 007342 .WORD EER1
8404 062340 000422 BR 40$ ;SKIP THE NEXT COMMAND LINE
8405 062342 052777 000010 121330 30$: BIS #10,@MOD ;SET LOW LEVEL
8406 062350 004737 011506 CALL WT25M ;WAIT 25 MS
8407 062354 017737 121320 004064 MOV @MOD,BAD ;GET MOD REGISTER CONTENTS
8408 062362 032737 000010 004064 BIT #10,BAD ;IS LOW LEVEL SELECTED
8409 062370 004737 012146 CALL INSERT ;SKIP BRANCH IF SFI IS SET
8410 062374 001004 BNE 40$ ;BRANCH IF YES
8411 062376 ERRSOFT 1903,E1903,EERG ;ERROR HANDLER
062376 104457 TRAP C$ERSOFT
062400 003557 .WORD 1903
062402 062720 .WORD E1903
062404 007724 .WORD EERG
8412 062406 40$: CKLOOP ;
062406 104406 TRAP C$CLP1
8413 062410 017702 121266 MOV @DAT,R2 ;GET INPUT VALUE
8414 062414 PRINTB @FORMAT,R2,R2 ;PRINT INPUT VALUE BIN. * OCTAL
062414 010246 MOV R2,-(SP)
062416 010246 MOV R2,-(SP)
062420 012746 063171 MOV @FORMAT,-(SP)
062424 012746 000003 MOV #3,-(SP)
062430 010600 MOV SP,R0
062432 104414 TRAP C$PNTB
062434 062706 000010 ADD #10,SP
8415 062440 000762 BR 40$ ;GO INTO THE PRINTOUT LOOP
8416 062442 EXQV19: EXIT TST ;EXIT TEST
062444 104432 TRAP C$EXIT
062444 000606 .WORD L10054
8417
8418 062446 000002 ANS1: .WORD 2
8419
8420 .NLIST BEX
8421 062450 045 123 062 T$MD19: .ASCIZ /MS2#ADIGITAL INPUT TEST - SPECIFICALLY SELECTABLE.#N/
8422 062535 114 117 127 E1901: .ASCIZ /LOW LEVEL BIT IN MOD REGISTER OF DIGITAL INPUT COULD NOT BE CLEARED
8423 062641 104 105 102 E1902: .ASCIZ /DEBOUNCE BITS IN MOD REGISTER COULD NOT BE SET
8424 062720 114 117 127 E1903: .ASCIZ /LOW LEVEL BI* IN MOD REGISTER OF DIGITAL INPUT COULD NOT BE SET
8425 063020 114 117 127 MMES1: .ASCIZ /LOW LEVEL INPUT ?/

```

TEST 19: DIGITAL INPUT TEST SPECIFICALLY SELECTABLE

```

8426 063042      127      110      111 MPRES2: .ASCII /WHICH DEBOUNCE PERIOD DO YOU WANT TO USE ? /<12><15>
8427 063117      105      116      124      .ASCIZ /ENTER 1 FOR 500US, 2 FOR 5MS, 3 FOR 10MS./
8428 063171      045      116      045 FORMAT: .ASCIZ /#N#ARFAD INPUT VALUE = #B16#A (OCTAL = #06#A )/
8429                                     .LIST BEX
8430                                     .EVEN
8431 063252                                     .ENDTST
      063252
      063252 104401

```

```

L10054: TRAP C#ETST

```

TEST 20: DIGITAL OUTPUT TEST SPECIFICALLY SELECTABLE

```

8433 .SBTTL TEST 20: DIGITAL OUTPUT TEST - SPECIFICALLY SELECTABLE
8434 :*****
8435 : TEST 20 DIGITAL OUTPUT TEST - SPECIFICALLY SELECTABLE.
8436 :
8437 : THE USER IS FIRST ASKED TO SELECT A PATTERN TYPE - SLIDING ONES,
8438 : SLIDING ZEROS, OR A PATTERN PAIR. IN THE LAST CASE, HE IS ALSO
8439 : ASKED TO ENTER THE DATA PAIR. THE PROGRAM THEN REQUESTS A TIME
8440 : INTERVAL IN MILLISECONDS (DEFAULT IS ZERO) TO WAIT BETWEEN EACH
8441 : PATTERN CHANGE. THE SELECTED PATTERN IS THEN OUTPUT TO THE USER
8442 : LINES OF THE MODULE.
8443 :
8444 : AFTER LOADING THE OUTPUT, THE DATA REGISTER IS READ BACK AND AN
8445 : ERROR REPORTED IF THE LOADED DATA AND THE READ DATA ARE NOT THE
8446 : SAME. THIS IS THE ONLY ERROR REPORT IN THE TEST. ALL OTHER
8447 : CHECKING IS VISUAL.
8448 :
8449 : TO ABORT THE TEST, "CNTL C" MUST BE TYPED.
8450 :*****
8451 063254 BGNTST
8451 063254 T20::
8452 063254 004737 011714 CALL SELECT ;CALL SELECT ROUTINE
8453 063260 010002 .WORD 10002 ;GIVE TEST PARAMETER (SPEC/DI)
8454 063262 063746 TSHD20 ;GIVE TEST HEADER
8455 063264 103002 BCC ITRA20 ;IF CARRY IS SET EXIT TEST
8456 063266 EXIT TST ;EXIT TEST
8457 063272 ITRA20: GMANID MMES71,ANS2,0, 1,1,3,YES ;GET MANUAL PARAMETER
8457 063272 104443 TRAP C$EXIT
8457 063274 000406 .WORD L10055
8457 063276 063736 BR C$GMAN
8457 063300 000032 .WORD 10000$
8457 063302 064104 .WORD ANS2
8457 063304 177777 .WORD T$CODE
8457 063306 000001 .WORD MMES71
8457 063310 000003 .WORD 1
8457 063312 .WORD T$LOLIM
8458 063312 022737 000003 063736 10000$: ;IS IT A PATTERN PAIR?
8459 063320 001410 BEQ 10$ ;BRANCH IF YES
8460 063322 022737 000001 063736 CMP #1,ANS2 ;IS IT SLIDING ONES?
8461 063330 001445 BEQ 20$ ;IF YES, BRANCH
8462 063332 022737 000002 063736 CMP #2,ANS2 ;IS IT SLIDING ZEROS?
8463 063340 001444 BEQ 30$ ;BRANCH IF YES
8464 063342 10$: GMANID MMES72,FIRPA,0, 1,0,177777,YES ;GET FIRST PATTERN
8464 063342 104443 TRAP C$GMAN
8464 063344 000406 BR 10001$
8464 063346 063740 .WORD FIRPA
8464 063350 000032 .WORD T$CODE
8464 063352 064214 .WORD MMES72
8464 063354 177777 .WORD 1
8464 063356 000000 .WORD T$LOLIM
8464 063360 177777 .WORD T$HILIM
8465 063362 GMANID MMES73,SECPA,0, 1,0,177777,YES ;GET SECOND PATTERN
8465 063362 104443 TRAP C$GMAN
8465 063364 000406 BR 10002$
8465 063366 063742 .WORD SECPA

```

TEST 20: DIGITAL OUTPUT TEST SPECIFICALLY SELECTABLE

063370	000032					.WORD	T\$CODE
063372	064234					.WORD	MMES73
063374	177777					.WORD	-1
063376	000000					.WORD	T\$LQIM
063400	177777					.WORD	T\$HILIM
063402							
8466	063402			GMANID	MMES74,TIMIN,D,-1,1,5000,YES	10002\$:	
	063402	104443					;GET TIME INTERVAL IN MS
	063404	000406				TRAP	C\$GMAN
	063406	063744				BR	10003\$
	063410	000052				.WORD	TIMIN
	063412	064254				.WORD	T\$CODE
	063414	177777				.WORD	MMES74
	063416	000001				.WORD	-1
	063420	005000				.WORD	T\$LQIM
	063422					.WORD	T\$HILIM
8467	063422			PRINTB	@MMES2	10003\$:	
	063422	012746	064421				;PRINT MESSAGES
	063426	012746	000001			MOV	@MMES2,-(SP)
	063432	010600				MOV	@1,(SP)
	063434	104414				MOV	SP,RO
	063436	062706	000004			TRAP	C\$PNTB
8468	063442	000464				ADD	@4,SP
8469	063444	012704	000001	20\$:	BR 80\$;SKIP SLIDING ONES,ZEROS
8470	063450	000402			MOV @1,R4		;MASK FOR SLIDING ONES
8471	063452	012704	177776	30\$:	BR 40\$;BRANCH TO SEND ROUTINE
8472					MOV @177776,R4		;MASK FOR SLIDING ZEROS
8473							
8474							
8475	063456			40\$:	GMANID MMES74,TIMIN,D,1,1,5000,YES		;GET TIME INTERVAL IN MS
	063456	104443				TRAP	C\$GMAN
	063460	000406				BR	10004\$
	063462	063744				.WORD	TIMIN
	063464	000052				.WORD	T\$CODE
	063466	064254				.WORD	MMES74
	063470	177777				.WORD	-1
	063472	000001				.WORD	T\$LQIM
	063474	005000				.WORD	T\$HILIM
	063476						
8476	063476			PRINTB	@MMES1	10004\$:	
	063476	012746	064342				;PRINT WORKING MESSAGE
	063502	012746	000001			MOV	@MMES1,(SP)
	063506	010600				MOV	@1,-(SP)
	063510	104414				MOV	SP,RO
	063512	062706	000004			TRAP	C\$PNTB
8477	063516	013703	063744	50\$:	MOV TIMIN,R3	ADD	@4,SP
8478	063522				BGNSEG		;LOAD TIME INTERVAL COUNTER
	063522	104404				TRAP	C\$BSEG
8479	063524	010477	120152				
8480	063530	005303		60\$:	MOV R4,@DAT		;PUT DATA TO OUTPUT
8481	063532	004737	011514		DEC R3		;DEC TIME INTERVAL CON.
8482	063536	004737	011514		JSR PC,WT500		;WAIT 500 US
8483	063542	005703			JSR PC,WT500		;WAIT 500 US
8484	063544	001371			TST R3		;IS THE TIME OVER?
8485	063546	017737	120130 004064		BNE 60\$;IF NO, BRANCH
8486	063554	023704	004064		MOV @DAT,BAD		;READ THE DATA REG. BACK
8487	063560	004737	012146		CMP BAD,R4		;CMP READ . LOADED DATA
					CALL INSERT		;SKIP BRANCH IF 'SFI' IS SET

TEST 20: DIGITAL OUTPUT TEST SPECIFICALLY SELECTABLE

```

8488 063564 001406          BEQ      70$          ;BRANCH IF EQUAL
8489 063566 010437 004062    MOV      R4,GOOD      ;SET UP DATA FOR ERMES.
8490 063572          ERRSOFT 2001,E2001,EER1 ;ERROR HANDLER
      063572 104457          TRAP     C$ERSOFT
      063574 003721          .WORD   2001
      063576 064034          .WORD   E2001
      063600 007342          .WORD   EER1
8491          70$:      ENDSEG
      10005$:
      063602 104405          TRAP     C$ESEG
8492 063604 006104          ROL      R4          ;NEXT DATA
8493 063606 005504          ADC      R4          ;ADD CARRY IF SET
8494 063610          BREAK          ;OPERATER INTERR. ENB.
      063610 104422          TRAP     C$BRK
8495 063612 000741          BR       50$        ;GO INTO OUTPUT LOOP
8496
8497          ;SEND ROUTINE FOR PATTERN PAIR
8498
8499 063614 013777 063740 120060 80$:  MOV      FIRPA,@DAT    ;FIRST PATTERN TO OUTPUT
8500 063622 013704 063740          MOV      FIRPA,R4    ;THIS IS FOR ERR HANDLER
8501 063626          BREAK          ;OPERATOR INTRR. ENB.
      063626 104422          TRAP     C$BRK
8502 063630 005002          CLR      R2          ;FLAG FOR PATTERN CHOICE
8503 063632 013703 063744 90$:  MOV      TIMIN,R3    ;LOAD TIME INTERVAL COUNTER
8504 063636 005303 100$:  DEC      R3          ;DEC TIME INTERVAL CON.
8505 063640 004737 011514    JSR      PC,WT500    ;WAIT 500 US
8506 063644 004737 011514    JSR      PC,WT500    ;WAIT 500 US
8507 063650 005703          TST      R3          ;IS THE TIME OVER?
8508 063652 001371          BNE      100$        ;IF YES, SEND SECOND PAT.
8509 063654 017737 120022 004064    MOV      @DAT,BAD    ;READ THE DATA REG. BACK
8510 063662 023704 004064          CMP      BAD,R4     ;CMP READ + LOADED DATA
8511 063666 004737 012146    CALL     INSERT      ;SKIP BRANCH IF 'SFI' IS SET
8512 063672 001406          BEQ      110$        ;BRANCH IF EQUAL
8513 063674 010437 004062    MOV      R4,GOOD      ;SET UP DATA FOR ERMES.
8514 063700          ERRSOFT 2002,E2001,EER1 ;ERROR HANDLER
      063700 104457          TRAP     C$ERSOFT
      063702 003722          .WORD   2002
      063704 064034          .WORD   E2001
      063706 007342          .WORD   EER1
8515 063710 005702 110$:  TST      R2          ;IS R2 CLEARED?
8516 063712 001340          BNE      80$        ;BRANCH IF R2 = 1
8517 063714 005202          INC      R2          ;INCREMENT R2
8518 063716 013777 063742 117756    MOV      SECPA,@DAT  ;SECOND PATTERN TO OUTP.
8519 063724 013704 063742          MOV      SECPA,R4   ;THIS IS FOR ERR HANDLER
8520 063730 000740          BR       90$        ;GO INTO OUTPUT LOOP
8521 063732          EXQV20: EXIT      TST          ;EXIT TEST
      063732 104432          TRAP     C$EXIT
      063734 000542          .WORD   L10055
8522 063736 000001          ANS2:   .WORD   1
8523 063740 000000          FIRPA:  .WORD   0          ;STORE FOR FIRST PATTERN
8524 063742 177777          SECPA:  .WORD   177777    ;STORE FOR SECOND PATTERN
8525 063744 001000          TIMIN:  .WORD   1000    ;STORE FOR TIME INTERVAL
8526          .NLIST      BEX
8527 063746          045     123     062  TSHD20: .ASCIZ /#S2#ADIGITAL OUTPUT TEST SPECIFICALLY SELECTABLE.#N
8528 064034          104     101     124  E2001: .ASCIZ /DATA REGISTER INCORRECT AFTER READ BACK/
8529 064104          105     116     124  MME571: .ASCII /ENTER PATTERN: TYPE/<<12><<15>
8530 064130          061     040     106  .ASCIZ /1 FOR SLIDING ONE, 2 FOR ZEROS, 3 FOR PATTERN PAIR

```

TEST 20: DIGITAL OUTPUT TEST SPECIFICALLY SELECTABLE

```

8531 064214      106      111      122  MMES72: .ASCIZ /FIRST PATTERN /
8532 064234      123      105      103  MMES73: .ASCIZ /SECOND PATTERN /
8533 064254      105      116      124  MMES74: .ASCIZ /ENTER TIME INTERVAL (MS) BETWEEN EACH PATTERN CHANGE /
8534 064342      045      101      127  WMES1:  .ASCIZ /#AWORKING,  OUTPUT DATA ARE SLIDING PATTERN#N/
8535 064421      045      101      127  WMES2:  .ASCIZ /#AWORKING,  OUTPUT DATA ARE PATTERN PAIRS#N/
8536                                     .LIST  BEX
8537                                     .EVEN
8538 064476                                     ENDTST
      064476
      064476 104401

```

L10055: TRAP C#ETST

TEST 21: ANALOGUE INPUT (DYNAMIC ROUTINE) - SPECIFICALLY SELEC

```

8540 .SBTTL TEST 21: ANALOGUE INPUT (DYNAMIC ROUTINE) SPECIFICALLY SELECTABLE
8541 :*****
8542 : TEST 21 - ANALOGUE INPUT (DYNAMIC ROUTINE) SPECIFICALLY
8543 : SELECTABLE.
8544 :
8545 : THE USER IS ASKED WHICH CHANNELS ARE TO BE READ, WHICH GAIN AND
8546 : WHICH TRIGGER (INTERNAL OR EXTERNAL) ARE TO BE USED. AFTER THIS
8547 : HE IS TOLD WHICH RANGE (UNI OR BIPOLAR) THE MODULE IS SWITCHED
8548 : TO.
8549 :
8550 : CONVERSIONS ARE THEN MADE TWICE ON EACH SELECTED CHANNEL. THE
8551 : VALUES READ ARE PRINTED OUT AS A DUMP AFTER ALL CONVERSIONS. THE
8552 : DUMPED VALUES ARE OCTAL.
8553 :
8554 : PRINTOUT CAN BE DISABLED USING THE SUPERVISOR FLAG "INHIBIT
8555 : ERROR REPORTS".
8556 :
8557 : TO ABORT THE TEST, "CNIL C" MUST BE TYPED.
8558 :*****
8559 064500 BGNTST
      064500
8560 064500 004737 011714 CALL SELECT ;CALL SELECT ROUTINE
      064504 010004 .WORD 10004 ;GIVE TEST PARAMETER (SPEC/DI)
8561 064506 067340 TSMO21 ;GIVE TEST HEADER
8562 064510 103002 BCC ITRC21 ;IF CARRY IS SET, EXIT TEST
8563 064512 EXIT TST ;EXIT TEST
      064512 104432 TRAP C$EXIT
      064514 004166 .WORD L10056
8564 064516 ITRC21: GMANID MES211,ANS211,D,77400,0,127,YES ;GET 1ST CHANNEL TO BE TESTED
      064516 104443 TRAP C$GMAN
      064520 000406 BR 10000$
      064522 066330 .WORD ANS211
      064524 000052 .WORD T$CODE
      064526 067434 .WORD MES211
      064530 077400 .WORD 77400
      064532 000000 .WORD T$LOLIM
      064534 000177 .WORD T$HILIM
      064536
      10000$:
8565 064536 GMANID MFS212,ANS212,D,77400,0,127,YES ;GET LAST CHANNEL TO BE TESTED
      064536 104443 TRAP C$GMAN
      064540 000406 BR 10001$
      064542 066332 .WORD ANS212
      064544 000052 .WORD T$CODE
      064546 067452 .WORD MES212
      064550 077400 .WORD 77400
      064552 000000 .WORD T$LOLIM
      064554 000177 .WORD T$HILIM
      064556
      10001$:
8566 064556 023737 066332 066330 CMP ANS212,ANS211 ;IS LAST CHA. GREATER THAN 1ST
8567 064564 002011 BGE 10$ ;BRANCH IF YES
8568 064566 012746 067571 PRINTF @PME211 ;PRINT OPERATOR MISTAKE
      064572 012746 000001 MOV @PME211,(SP)
      064576 010600 MOV #1,(SP)
      064600 104417 TRAP C$PRINTF
      064602 062706 000004 ADD @4,SP
8570 064606 000743 BR ITRC21 ;AND BRANCH BACK

```

TEST 21: ANALOGUE INPUT (DYNAMIC ROUTINE) SPECIFICALLY SELEC

```

8571 064610          101:  GMANID MES213,ANS213,0,16,0,7,YES      ;ASK FOR GAIN
      064610 104443
      064612 000406
      064614 066334
      064616 000032
      064620 067467
      064622 000016
      064624 000000
      064626 000007
      064630
      100021:
8572 064630 032777 000020 117042      BIT      @20,@MOD      ;IS BIPOLAR MODE SELECTED?
8573 064636 001011
8574 064640          201:  PRINTF @PME213      ;BRANCH IF YES
      064640 012746 067747
      064644 012746 000001
      064650 010600
      064652 104417
      064654 062706 000004
      064660 000410
      100022:
8575 064660          201:  BR      301
      064662          PRINTF @PME214      ;PRINT UNIPOLAR MESSAGES
      064662 012746 070022
      064666 012746 000001
      064672 010600
      064674 104417
      064676 062706 000004
      064702          301:  GMANIL MES214,ANS214,1,YES      ;AND SKIP BIPOLAR MESSAGES
      064702 104443
      064704 000404
      064706 066336
      064710 000130
      064712 067550
      064714 177777
      064716
      100023:
8578 064716 042777 000016 116760      BIC      @16,@CSA      ;PRINT BIPOLAR MESSAGES
8579 064724 053777 066334 116752
8580 064732 005001
8581 064734 013704 066330
8582 064740          201:  BGNSEG
      064740 104404
      064742 005777 116734
      064746 042777 177400 116730
      064754 050477 116724
      064760 017737 116720 004064
      064766 032737 100000 004064
      064774 004737 012146
      065000 001014
      065002 012737 100000 004062
      065010 050437 004062
      065014 053737 066334 004062
      065022          101:  ERRSOF T 2101,F2101,EER4
      065022 104457
      065024 004065
      065026 070074
      065030 007474
      065032          201:  CKLOOP
8594 065032
8595 065034 032777 000200 116742      BIT      @200,@CSA      ;READ DAT TO CLEAR DONE-ERR IN CSA
      ;CLEAR HIGH BYTE OF CSA
      ;LOAD CHANNEL INTO CSA
      ;GET CSA CONTENTS
      ;IS THE LOADED CHANNEL AVAILABLE?
      ;SKIP BRANCH IF SFI IS SET
      ;BRANCH IF YES
      ;SET UP DATA FOR ERROR MESSAGES
      ;SET CHANNEL NUMBER
      ;SET GAIN
      ;ERROR HANDLER
      TRAP  C#BSEG
      .WORD 2101
      .WORD E2101
      .WORD EER4
      TRAP  C#CLP1
      ;IS INTERFACE READY FOR CONVERSION?

```


TEST 21: ANALOGUE INPUT (DYNAMIC ROUTINE) SPECIFICALLY SELEC

```

8596 065042 004737 012146          CALL   INSERT
8597 065046 001404          BEQ    30$
8598 065050          ERRSOFT 2102,E2102,EERG      ;SKIP BRANCH IF 'SFI' IS SET
                                       ;BRANCH IF DONE IS CLEARED
                                       ;ERROR HANDLER
                                       TRAP   C$ERSOFT
                                       .WORD  2102
                                       .WORD  E2102
                                       .WORD  EERG
      065050 104457
      065052 004066
      065054 070164
      065056 007724
8599 065060          30$:  CKLOOP
      065060 104406          TRAP   C$CLP1
8600 065062 005737 066336          TST   ANS214
8601 065066 001175          BNE   EXTR21
8602 065070 005003          CLR   R3
8603 065072 052777 000001 116604        BIS   @1,@CSA
8604 065100 032777 000200 116576        40$:  BIT   @200,@CSA
8605 065106 001010          BNE   50$
8606 065110 005303          DEC   R3
8607 065112 004737 012146          CALL   INSERT
8608 065116 001370          BNE   40$
8609 065120          ERRSOFT 2103,E2103,EERG      ;IS EXTERNAL TRIGGER USED?
                                       ;BRANCH IF YES TO EXTERNAL PART
                                       ;LOAD DONE TIMEOUT COUNTER
                                       ;START THE FIRST CONVERSION
                                       ;CONVERSION DONE (DONE SET )
                                       ;BRANCH IF YES
                                       ;DECREMENT READY WAIT COUNTER
                                       ;SKIP BRANCH IF 'SFI' IS SET
                                       ;BRANCH IF TIMEOUT COUNTER IS NOT ZERO
                                       ;ERROR HANDLER
                                       TRAP   C$ERSOFT
                                       .WORD  2103
                                       .WORD  E2103
                                       .WORD  EERG
      065120 104457
      065122 004067
      065124 070255
      065126 007724
8610 065130          50$:  ENDSEG
                                       10004$:
      065130 104405          TRAP   C$ESEG
8611 065132 017761 116544 066340        MOV   @DAT,DMP TAB(R1)
8612 065140 062701 000002          ADD   @2,R1
8613 065144 032777 000200 116532        BIT   @200,@CSA
8614 065152 004737 012146          CALL   INSERT
8615 065156 001404          BEQ   60$
8616 065160          ERRSOFT 2104,E2104,EERG      ;READ DATA REGISTER AND SAVE IT
                                       ;INCREMENT DUMP TABLE ADDRESS
                                       ;DONE CLEARED AFTER READ DAT REG.?
                                       ;SKIP BRANCH IF 'SFI' IS SET
                                       ;BRANCH IF YES
                                       ;ERROR HANDLER
                                       TRAP   C$ERSOFT
                                       .WORD  2104
                                       .WORD  E2104
                                       .WORD  EERG
      065160 104457
      065162 004070
      065164 070346
      065166 007724
8617 065170 005003          60$:  CLR   R3
8618 065172 052777 000001 116504        BIS   @1,@CSA
8619 065200 032777 000200 116476        70$:  BIT   @200,@CSA
8620 065206 001010          BNE   80$
8621 065210 005303          DEC   R3
8622 065212 004737 012146          CALL   INSERT
8623 065216 001370          BNE   70$
8624 065220          ERRSOFT 2105,E2105,EERG      ;LOAD DONE TIMEOUT COUNTER
                                       ;START SECOND CONVERSION
                                       ;CONVERSION DONE (DONE SET )
                                       ;BRANCH IF YES
                                       ;DECREMENT DONE TIMEOUT COUNTER
                                       ;SKIP BRANCH IF 'SFI' IS SET
                                       ;BRANCH IF TIMEOUT COUNTER IS NOT ZERO
                                       ;ERROR HANDLER
                                       TRAP   C$ERSOFT
                                       .WORD  2105
                                       .WORD  E2103
                                       .WORD  EERG
      065220 104457
      065222 004071
      065224 070255
      065226 007724
8625 065230 017761 116446 066340        80$:  MOV   @DAT,DMP TAB(R1)
8626 065236 062701 000002          ADD   @2,R1
8627 065242 032777 000200 116434        BIT   @200,@CSA
8628 065250 004737 012146          CALL   INSERT
8629 065254 001404          BEQ   90$
8630 065256          ERRSOFT 2106,E2104,EERG      ;READ DATA REGISTER AND SAVE IT
                                       ;INCREMENT DUMP TABLE ADDRESS
                                       ;DONE CLEARED AFTER READ DAT REG.?
                                       ;SKIP BRANCH IF 'SFI' IS SET
                                       ;BRANCH IF YES
                                       ;ERROR HANDLER
                                       TRAP   C$ERSOFT
                                       .WORD  2106
                                       .WORD  E2104
      065256 104457
      065260 004072
      065262 070346

```

F.1

TEST 21: ANALOGUE INPUT (DYNAMIC ROUTINE) SPECIFICALLY SELEC

```

065264 007724
8631 065266 020437 066332      90$:  CMP      R4,ANS212      ;HAVE WE READ THE LAST CHANNEL ?
8632 065272 002017              BGE      DMPR              ;IF YES, BRANCH TO DUMP ROUTINE
8633 065274 062704 000400      ADD      @400,R4           ;INCREMENT CHANNEL
8634 065300 022701 001000      CMP      @512.,R1         ;IS THE TOP ADDRESS OF TABLE REACHED?
8635 065304 004737 012146      CALL    INSERT            ;SKIP BRANCH IF 'SFI' IS SET
8636 065310 001006              BNE      100$             ;BRANCH IF NO
8637 065312              ERRSOFT 2107,E2107,EERG   ;ERROR HANDLER
065312 104457
065314 004073
065316 070433
065320 007724
8638 065322 000137 064516      100$:  JMP      ITRC21          ;
8639 065326 000137 064740      JMP      100$             ;AND DO CONVERSION WITH NEXT CHA.
8640
8641
8642
8643 065332              ;THE NEXT CODE WILL DUMP THE CONVERSION ON THE CONSOLE TERMINAL
065332 104421
8644 065334 032700 010000      DMPR:  RFLAGS  R0         ;READ SUPERVISOR FLAGS
8645 065340 001402              BIT      @IBE,R0          TRAP      C$RFLA
8646 065342 000137 064732      BEQ      100$             ;IS IBE FLAG SET?
8647 065346 162701 000002      JMP      INTR              ;SKIP JUMP INSTRUCTION IF NO
8648 065352 010102              ;DISABLE DUMP PRINT OUT
8649 065354 005001              ;RESTORE LAST R1 INCREMENT
8650 065356 013704 066330      100$:  SUB      @2,R1         ;SAVE DUMP TABLE END ADDRESS
8651 065362 000304              MOV      R1,R2           ;POINT TO FIRST VALUE
8652 065364 005003              CLR      R1              ;SET UP R4 WITH FIRST CHANNEL NO.
8653 065366              MOV      ANS211,R4       ;SWAB HIGH BYTE INTO LOW BYTE
065366 010446              CLR      R3              ;CLEAR CHANNEL MARKER
065370 016146 066340      20$:  PRINTF @PME212,DMPTAB(R1),R4 ;DUMP THE CONVERSION TABLE
065374 012746 067665              MOV      R4,(SP)
065400 012746 000003              MOV      DMPTAB(R1),-(SP)
065404 010600              MOV      @PME212,(SP)
065406 104417              MOV      @3, -(SP)
065410 062706 000010              MOV      SP,R0
8654 065414 005203              TRAP    C$PNTF
8655 065416 022703 000002      ADD      @10,SP
8656 065422 001002              INC      R3              ;INCREMENT CHANNEL MARKER
8657 065424 005204              CMP      @2,R3           ;IS CHANNEL NUMBER PRINTED TWICE ?
8658 065426 005003              BNE      30$             ;BRANCH IF NO
8659 065430 062701 000002      INC      R4              ;IF YES, INCREMENT CHANNEL NUMBER
8660 065434 020201              CLR      R3              ;CLEAR CHANNEL MARKER
8661 065436 002353              30$:  ADD      @2,R1         ;INCREMENT TABLE ADDRESS
8662 065440 004737 011542      CMP      R2,R1           ;ALL VALUES PRINTED ?
8663 065444 005737 066336      BGE      20$             ;BRANCH IF NO
8664 065450 001002              CALL    CRLF              ;PRINT A CRLF BETWEEN EVERY DUMP
8665 065452 000137 064732      TST      ANS214          ;IS EXTERNAL TRIGGER USED?
8666 065456 000137 065552      BNE      40$             ;BRANCH IF YES
8667
8668
8669
8670 065462              40$:  JMP      INTR              ;REPEAT INTERNAL TEST
065462 012746 000340      JMP      EXTR              ;REPEAT EXTERNAL TEST
065466 012746 017276      ;THE FOLLOWING CODE IS USED IF EXTERNAL TRIGGER WAS REQUESTED
065472 013746 003710      EXTR21: SETVEC VEC,@INTSR,@PRIO7 ;SET VECTOR 1 AND SERVICE ROUTINE
065476 012746 000003              MOV      @PRIO7,(SP)
                                MOV      @INTSR,(SP)
                                MOV      VEC,(SP)
                                MOV      @3, -(SP)

```


TEST 21: ANALOGUE INPUT (DYNAMIC ROUTINE) SPECIFICALLY SELEC

```

8708 066002          ERRSOFT 2110,E2108,EER4      ;ERROR HANDLER
      066002 104457          TRAP          C$ERSOFT
      066004 004076          .WORD        2110
      066006 070521          .WORD        E2108
      066010 007474          .WORD        EER4
8709 066012 017761 115664 066340 70$:  MOV      @DAT,DMPTAB(R1)      ;SAVE DATA REGISTER CONTENTS
8710 066020 062701 000002          ADD      #2,R1              ;INCREMENT DUMP TABLE ADDRESS
8711 066024 017737 115654 004064          MOV      @CSA,BAD          ;GET CSA CONTENTS
8712 066032 012737 100120 004062          MOV      #100120,GOOD     ;SET UP DATA FOR ERROR MESSAGES
8713 066040 050437 004062          BIS      R4,GOOD          ;SET CHANNEL NUMBER
8714 066044 053737 066334 004062          BIS      ANS213,GOOD     ;SET GAIN
8715 066052 023737 004062 004064          CMP      GOOD,BAD        ;IS INTERFACE READY FOR CONVERSION?
8716 066060 004737 012146          CALL    INSERT           ;SKIP BRANCH IF 'SFI' IS SET
8717 066064 001404          BEQ     90$             ;BRANCH IF DONE IS CLEARED
8718 066066          ERRSOFT 2112,E2108,EER4      ;ERROR HANDLER
      066066 104457          TRAP          C$ERSOFT
      066070 004100          .WORD        2112
      066072 070521          .WORD        E2108
      066074 007474          .WORD        EER4
8719 066076 005737 004152          90$:   TST      INTFL2        ;WAS THERE AN ERROR INTERRUPT?
8720 066102 004737 012146          CALL    INSERT           ;SKIP BRANCH IF 'SFI' IS SET
8721 066106 001404          BEQ     100$            ;BRANCH IF NO
8722 066110          ERRSOFT 2113,E2110,EERG          ;ERROR HANDLER
      066110 104457          TRAP          C$ERSOFT
      066112 004101          .WORD        2113
      066114 070650          .WORD        E2110
      066116 007724          .WORD        EERG
8723 066120 005037 004150          100$:  CLR      INTFLA          ;CLEAR DONE INTERRUPT FLAG
8724 066124 005037 004152          CLR      INTFL2         ;CLEAR ERROR INTERRUPT FLAG
8725 066130 005003          CLR      R3             ;SET UP WAIT COUNTER
8726 066132 005737 004150          170$:  TST      INTFLA          ;WAS THERE A DONE INTERRUPT?
8727 066136 001010          BNE     180$            ;BRANCH IF YES
8728 066140 005303          DEC      R3             ;DECREMENT TIMEOUT COUNTER
8729 066142 004737 012146          CALL    INSERT           ;SKIP BRANCH IF 'SFI' IS SET
8730 066146 001371          BNE     170$            ;BRANCH IF NOT ZERO
8731 066150          ERRSOFT 2114,E2109,EERG          ;ERROR HANDLER
      066150 104457          TRAP          C$ERSOFT
      066152 004102          .WORD        2114
      066154 070603          .WORD        E2109
      066156 007724          .WORD        EERG
8732 066160 017761 115516 066340 180$:  MOV      @DAT,DMPTAB(R1)      ;SAVE DATA REGISTER CONTENTS
8733 066166 062701 000002          ADD      #2,R1              ;INCREMENT DUMP TABLE ADDRESS
8734 066172 022701 001000          CMP      #512.,R1         ;IS TOP ADDRESS OF TABLE REACHED?
8735 066176 001004          BNE     120$            ;BRANCH IF NO
8736 066200          ERRSOFT 2115,E2107,EERG          ;ERROR HANDLER
      066200 104457          TRAP          C$ERSOFT
      066202 004103          .WORD        2115
      066204 070433          .WORD        E2107
      066206 007724          .WORD        EERG
8737 066210 020437 066332          120$:  CMP      R4,ANS212        ;HAVE WE REACHED THE LAST CHANNEL?
8738 066214 002036          BGE     130$            ;IF YES, BRANCH TO DUMP ROUTINE
8739 066216 062704 000400          ADD      #400,R4          ;INCREMENT CHANNEL NUMBER
8740 066222 042777 177400 115454          BIC     #177400,@CSA      ;CLEAR HIGH BYTE OF CSA
8741 066230 050477 115450          BIS     R4,@CSA          ;LOAD CHANNEL INTO CSA
8742 066234 017737 115444 004064          MOV     @CSA,BAD          ;GET CSA CONTENTS
8743 066242 012737 100120 004062          MOV     #100120,GOOD     ;SET UP DATA FOR ERROR MESSAGES
8744 066250 050437 004062          BIS     R4,GOOD          ;SET CHANNEL NUMBER

```

TEST 21: ANALOGUE INPUT (DYNAMIC ROUTINE) SPECIFICALLY SELEC

```

8745 066254 053737 066334 004062      BIS      ANS213,GOOD      ;SET GAIN
8746 066262 023737 004062 004064      CMP      GOOD,BAD       ;IS CSA CONTENTS CORRECT?
8747 066270 004737 012146      CALL     INSERT         ;SKIP BRANCH IF 'SFI' IS SET
8748 066274 001404      BEQ      110$           ;BRANCH IF YES
8749 066276      ERRSOFT 2116,E2108,EER4  ;ERROR HANDLER
      066276 104457      TRAP     C$ERSOFT
      066300 004104      .WORD   2116
      066302 070521      .WORD   E2108
      066304 007474      .WORD   EER4
8750 066306 000137 065700      110$:   JMP      30$           ;DO CONVERSION WITH NEXT CHANNEL
8751 066312      130$:   SETPRI  @PRI07     ;DISABLE INTERRUPTS
      066312 012700 000340      MOV     @PRI07,R0
      066316 104441      TRAP    C$SPRI
8752 066320 000137 065332      JMP     DMPR           ;JUMP TO DUMP ROUTINE
8753
8754 066324      EXQV21: EXIT  TST       ;EXIT TEST
      066324 104432      TRAP     C$EXIT
      066326 002354      .WORD   L10056
8755
8756 066330 000000      ANS211: .WORD  0        ;SAVE LOCATION FOR FIRST CHANNEL
8757 066332 000000      ANS212: .WORD  0        ;SAVE LOCATION FOR LAST CHANNEL
8758 066334 000000      ANS213: .WORD  0        ;SAVE LOCATION FOR THE GAIN
8759 066336 000000      ANS214: .WORD  0        ;SAVE LOCATION FOR TRIGGER
8760
8761 066340      DMPTAB: .BLKW  256.     ;DUMP TABLE AREA
8762
8763      .NLIST  BEX
8764 067340      045    123    062  TSHD21: .ASCIZ  /$S2$AANALOGUE INPUT (DYNAMIC ) SPECIFICALLY SELECTABLE.$N/
8765 067434      106    111    122  MES211: .ASCIZ  /FIRST CHANNEL/
8766 067452      114    101    123  MES212: .ASCIZ  /LAST CHANNEL/
8767 067467      107    101    111  MES213: .ASCIZ  /GAIN (TYPE 0 - 7 = GAIN 1,2,5,10,20,50,100,200)/
8768 067550      105    130    124  MES214: .ASCIZ  /EXTERNAL TRIGGER/
8769
8770 067571      045    101    114  PME211: .ASCIZ  /$ALAST CHANNEL HAS TO BE GREATER OR EQUAL TO THE 1ST ONE.$N/
8771 067665      045    116    045  PME212: .ASCIZ  /$N$A CONVERSION VALUE (OCTAL):$06$A, CHANNEL:$D3/
8772 067747      045    116    045  PME213: .ASCIZ  /$N$AMODULE IS SWITCHED TO UNIPOLAR RANGE$N/
8773 070022      045    116    045  PME214: .ASCIZ  /$N$AMODULE IS SWITCHED TO BIPOLAR RANGE$N/
8774
8775 070074      103    123    101  E2101: .ASCIZ  /CSA CONTENTS INCORRECT - SELECTED CHANNEL NOT AVAILABLE/
8776 070164      115    117    104  E2102: .ASCIZ  /MODULE NOT READY FOR CONVERSION - DONE BIT IN CSA IS SET/
8777 070255      104    117    116  E2103: .ASCIZ  /DONE BIT IN CSA NOT SET (TIMEOUT) AFTER CONVERSION START/
8778 070346      104    117    116  E2104: .ASCIZ  /DONE BIT IN CSA NOT CLEARED AFTER READ DATA REGISTER/
8779 070433      104    125    115  E2107: .ASCIZ  /DUMP BUFFER FULL MORE THEN 127 CHANNELS ADDRESSED ?/
8780 070521      103    123    101  E2108: .ASCIZ  /CSA CONTENTS INCORRECT AFTER READ DATA REGISTER/
8781 070603      124    111    115  E2109: .ASCIZ  /TIMEOUT NO DONE INTERRUPT OCCURRED/
8782 070650      105    122    122  E2110: .ASCIZ  /ERROR INTERRUPT OCCURRED/
8783      .LIST  BEX
8784      .EVEN
8785 070702      ENDTST
      070702      L10056: TRAP     C$E$S$
      070702 104401

```

TEST 22: ANALOGUE OUTPUT (DYNAMIC TEST) SPECIFICALLY SELECTA

```

8787 .SBTTL TEST 22: ANALOGUE OUTPUT (DYNAMIC TEST) SPECIFICALLY SELECTABLE.
8788 :*****
8789 : TEST 22 ANALOGUE OUTPUT (DYNAMIC TEST) SPECIFICALLY
8790 : SELECTABLE.
8791 :
8792 : THIS TEST GENERATES EITHER A PERMANENT LOADED STATIC VALUE, OR AN ENDLESS
8793 : SYMMETRICAL VOLTAGE RAMP.
8794 :
8795 : THE USER IS ASKED TO ENTER THE NUMBER OF THE FIRST AND LAST
8796 : CHANNEL WHICH HE WANTS TO USE. HE THEN SELECTS THE OUTPUT PATTERN TYPE
8797 : SINGLE FIXED VALUE OR RAMP. FOR THE FIRST OF THESE, THE USER
8798 : TYPES THE DESIRED OUTPUT BINARY VALUE. FOR THE RAMP PATTERN, AN
8799 : ENDLESS SYMMETRICAL VOLTAGE RAMP IS GENERATED. IN THIS CASE, THE USER IS
8800 : ASKED TO ENTER A VALUE 'DELTA U'. THIS VALUE IS THE NUMBER OF BITS BY
8801 : WHICH THE PROGRAM CHANGES THE OUTPUT FOR EACH STEP OF THE RAMP, AND MUST
8802 : BE IN THE RANGE 1 TO 4096. THE USER MUST ALSO SELECT A TIME INTERVAL
8803 : 'DELTA T' IN INCREMENT STEPS, WHICH WILL DETERMINE THE PERIOD BETWEEN EACH
8804 : VALUE CHANGE. IF ZERO IS TYPED, THE VALUE WILL BE VARIED AS FAST
8805 : AS THE HARDWARE ALLOWS IT.
8806 :
8807 : THE CONTROL STATUS REGISTER STATUS PRINTOUT CAN BE INHIBITED BY
8808 : SETTING THE 'IBE' FLAG.
8809 :*****

```

```

8810 070704          BGNTST
      070704
8811 070704 004737 011714          CALL SELECT          T22:
8812 070710 010010          .WORD 10010          ;CALL SELECT ROUTINE
8813 070712 071566          TSHD22          ;GIVE TEST PARAMETER (SPEC/DI)
8814 070714 103002          BCC ITRC22          ;GIVE TEST HEADER
8815 070716          EXIT TST          ;IF CARRY IS CLEARED, EXIT TEST
      070716 104432          TRAP C$EXIT
      070720 001610          .WORD L10057
8816 070722          ITRC22: GMANID MES221,ANS221,D,1400,0,7,YES ;GET 1ST CHANNEL TO BE TESTED
      070722 104443          TRAP C$GMAN
      070724 000406          BR 10000$
      070726 071552          .WORD ANS221
      070730 000052          .WORD T$CODE
      070732 071662          .WORD MES221
      070734 001400          .WORD 1400
      070736 000000          .WORD T$LJLIM
      070740 000007          .WORD T$HILIM
      070742
8817 070742          10000$:
      070742 104443          10$: GMANID MES222,ANS222,D,1400,0,7,YES ;GET LAST CHANNEL TO BE TESTED
      070744 000406          TRAP C$GMAN
      070746 071554          BR 10001$
      070750 000052          .WORD ANS222
      070752 071700          .WORD T$CODE
      070754 001400          .WORD MES222
      070756 000000          .WORD 1400
      070760 000007          .WORD T$LJLIM
      070762          .WORD T$HILIM
8818 070762 023737 071554 071552          CMP ANS222,ANS221          10001$:
8819 070770 002011          BGE 20$          ;LAST CHA. GREATER THAN 1ST?
8820 070772          PRINTF @PME221          ;BRANCH IF YES
      070772 012746 072162          ;PRINT OPERATOR MISTAKE
      070776 012746 000001          MOV @PME221, (SP)
      MOV @1, (SP)

```

Jr

TEST 22: ANALOGUE OUTPUT (DYNAMIC TEST) - SPECIFICALLY SELECTA

```

071002 010600
071004 104417
071006 062706 000004
8821 071012 000743
8822 071014 20$: BR ITRC22 ;AND BRANCH BACK
GMANID MES223,ANS223.0. 1.1.2.YES ;GET PATTERN TYPE
071014 104443 TRAP C$GMAN
071016 000406 BR 10002$
071020 071556 .WORD ANS223
071022 000032 .WORD T$CODE
071024 071715 .WORD MES223
071026 177777 .WORD 1
071030 000001 .WORD T$LOLIM
071032 000002 .WORD T$HILIM
071034
8823 071034 022737 000001 071556 CMP #1,ANS223 ;10002$: IS STATIC VALUE USED ?
8824 071042 001431 BEQ 40$ ;BRANCH IF YES
8825 071044 30$: GMANID MES224,ANS224.D. 1.1.4096.,YES ;GET DELTA U
071044 104443 TRAP C$GMAN
071046 000406 BR 10003$
071050 071560 .WORD ANS224
071052 000052 .WORD T$CODE
071054 071767 .WORD MES224
071056 177777 .WORD 1
071060 000001 .WORD T$LOLIM
071062 010000 .WORD T$HILIM
071064
8826 071064 GMANID MES225,ANS225.D. 1.0.177777.YES ;10003$: GET DELTA T
071064 104443 TRAP C$GMAN
071066 000406 BR 10004$
071070 071562 .WORD ANS225
071072 000052 .WORD T$CODE
071074 072040 .WORD MES225
071076 177777 .WORD 1
071100 000000 .WORD T$LOLIM
071102 177777 .WORD T$HILIM
071104
8827 071104 PRINTF #PME223 ;10004$: PRINT HOW TO CONTINUE
071104 012746 072332 MOV #PME223, (SP)
071110 012746 000001 MOV #1, (SP)
071114 010600 MOV SP,RO
071116 104417 TRAP C$PNTF
071120 062706 000004 ADD #4,SP
8828 071124 000470 BR 110$ ;SKIP NEXT GMANID
8829
8830 ;THE NEXT CODE FOR FIXED VALUE OUTPUT
8831
8832 071126 40$: GMANID MES226,ANS226.0. -1.0.7777.YES ;GET STATIC VALUE
071126 104443 TRAP C$GMAN
071130 000406 BR 10005$
071132 071564 .WORD ANS226
071134 000032 .WORD T$CODE
071136 072121 .WORD MES226
071140 177777 .WORD 1
071142 000000 .WORD T$LOLIM
071144 007777 .WORD T$HILIM
071146
8833 071146 005002 CLR R2 ;10005$: CLEAR INHIBIT CSA PRINT.

```

TEST 22: ANALOGUE OUTPUT (DYNAMIC TEST) SPECIFICALLY SELECTA

```

8834 071150 005037 071562          CLR      ANS225          ;SET DELTA T TO ZERO
8835 071154 004737 017066          50$:    CALL     CALRET      ;READ OPERATOR KEYBOARD ACTION
8836 071160 103762                   BCS     40$             ;BRANCH IF CR WAS TYPED TO NEXT VALUE
8837 071162 013704 071552          MOV     ANS221,R4      ;SAVE CHANNEL
8838 071166 010477 112512          60$:    MOV     R4,@CSA   ;LOAD CHANNEL
8839 071172 013703 004164          MOV     REDTIM,R3     ;LOAD READY TIME OUT COUNTER
8840 071176 032777 000200 112500 70$:    BIT     @200,@CSA     ;READY SET
8841 071204 001010                   BNE     80$             ;BRANCH IF YES
8842 071206 005303                   DEC     R3              ;DECREMENT TIME OUT COUNTER
8843 071210 004737 012146          CALL   INSERT         ;SKIP BRANCH IF 'SFI' IS SET
8844 071214 001370                   BNE     70$             ;BRANCH IF COUNTER IS NOT ZERO
8845 071216                   ERRSOFT 2201,E2201,EER3 ;ERROR HANDLER
                                TRAP   C$ERSOFT
                                .WORD  2201
                                .WORD  E2201
                                .WORD  EER3
                                ;WAS CSA MESSAGES PRINTED ONCE?
8846 071226 005702          80$:    TST     R2              ;WAS CSA MESSAGES PRINTED ONCE?
8847 071230 001012                   BNE     90$             ;SKIP PRINTOUT IF YES
8848 071232                   PRINTB @PME222,@CSA    ;PRINT CSA STATUS
                                MOV     @CSA,-(SP)
                                MOV     @PME222,(SP)
                                MOV     @2,-(SP)
                                MOV     SP,R0
                                TRAP   C$PNTB
                                ADD     @6,SP
8849 071256 013777 071564 112416 90$:    MOV     ANS226,@DAT    ;LOAD DATA REG. WITH OPERATOR INPUT
8850 071264 020437 071554          CMP     R4,ANS222     ;HAVE WE READ THE LAST CHANNEL ?
8851 071270 103003                   BHS     100$           ;BRANCH IF YES
8852 071272 062704 000400          ADD     @400,R4       ;INCREMENT CHANNEL
8853 071276 000733                   BR      60$            ;GO INTO LOOP, EXIT WITH CNTL C
8854 071300 012702 000001          100$:   MOV     @1,R2        ;SET INHIBIT CSA PRINTOUT FLAG
8855 071304 000723                   BR      50$            ;BRANCH
8856
8857          ;THE FOLLOWING CODE CREATES A RAMP ON THE OUTPUT
8858
8859 071306 005002          110$:   CLR     R2              ;CLR DELTA U SAVE LOCATION
8860 071310 013704 071552          MOV     ANS221,R4     ;GET FIRST CHANNEL
8861 071314 000412                   BR      130$           ;
8862 071316 004737 017066          120$:   CALL   CALRET      ;READ OPERATOR KEYBOARD ACTION
8863 071322 103650                   BCS     30$             ;IF CR WAS TYPED, BRANCH
8864 071324 013704 071552          MOV     ANS221,R4     ;GET FIRST CHANNEL NUMBER
8865 071330 063702 071560          ADD     ANS224,R2     ;GET DELTA U
8866 071334 022702 007777          CMP     @4095.,R2    ;FULL SCALE REACHED
8867 071340 103436                   BLO     180$           ;IF YES, BRANCH TO NEGATIVE RAMP
8868 071342 013701 071562          130$:   MOV     ANS225,R1     ;LOAD DELTA T COUNTER
8869 071346 010477 112332          MOV     R4,@CSA      ;LOAD CHANNEL NUMBER
8870 071352 013703 004164          MOV     REDTIM,R3    ;LOAD READY TIMEOUT COUNTER
8871 071356 032777 000200 112320 140$:   BIT     @200,@CSA     ;READY SET
8872 071364 001010                   BNE     150$           ;BRANCH IF YES
8873 071366 005303                   DEC     R3              ;DECREMENT TIMEOUT COUNTER
8874 071370 004737 012146          CALL   INSERT         ;SKIP BRANCH IF SFI IS SET
8875 071374 001370                   BNE     140$           ;BRANCH IF COUNTER IS NOT ZERO
8876 071376                   ERRSOFT 2202,E2201,EER3 ;ERROR HANDLER
                                TRAP   C$ERSOFT
                                .WORD  2202
                                .WORD  E2201
                                .WORD  EER3
                                ;
                                TRAP   C$ERSOFT
                                .WORD  2202
                                .WORD  E2201
                                .WORD  EER3
                                ;
                                TRAP   C$ERSOFT
                                .WORD  2202
                                .WORD  E2201
                                .WORD  EER3

```


TEST 22: ANALOGUE OUTPUT (DYNAMIC TEST) SPECIFICALLY SELECTA

```

8877 071406 010277 112270      150$:  MOV    R2,@DAT      ;LOAD DELTA U IN DATA REG.
8878 071412 005701              TST    R1                ;IS DELTA T ZERO ?
8879 071414 001402              BEQ    170$              ;BRANCH IF YES
8880 071416 005301      160$:  DEC    R1                ;IS DELTA T OVER ?
8881 071420 001376              BNE    160$              ;BRANCH IF NO
8882 071422 020437 071554      170$:  CMP    R4,ANS222        ;HAVE WE READ THE LAST CHANNEL ?
8883 071426 103333              BHIS   120$              ;IF YES, BRANCH TO FIRST CHANNEL
8884 071430 062704 000400      ADD    @400,R4           ;IF NO, INCREMENT CHANNEL
8885 071434 000742              BR     130$              ;AND DO NEXT ONE WITH SAME DELTA U
8886
8887      ;THE FOLLOWING CODE IS FOR NEGATIVE RAMP
8888
8889 071436 013704 071552      180$:  MOV    ANS221,R4        ;GET FIRST CHANNEL NUMBER
8890 071442 163702 071560      SUB    ANS224,R2        ;DO NEGATIVE RAMP
8891 071446 005702              TST    R2                ;HAVE WE REACHED THE BOTTOM (ZERO)
8892 071450 001716              BEQ    110$              ;IF YES, BRANCH TO POSITIV RAMP
8893 071452 013701 071562      190$:  MOV    ANS225,R1        ;LOAD DELTA T
8894 071456 010477 112222      MOV    R4,@CSA          ;LOAD CHANNEL NUMBER
8895 071462 013703 004164      MOV    REDTIM,R3        ;LOAD READY TIMEOUT COUNTER
8896 071466 032777 000200 112210 200$:  BIT    @200,@CSA        ;IS READY THERE ?
8897 071474 001010              BNE    210$              ;BRANCH IF YES
8898 071476 005303              DEC    R3                ;DECREMENT TIMEOUT COUNTER
8899 071500 004737 012146      CALL  INSERT            ;SKIP BRANCH IF SFI IS SET
8900 071504 001370              BNE    200$              ;BRANCH IF COUNTER IS NOT ZERO
8901 071506              ERRSOFT 2203,E2201,EER3 ;ERROR HANDLER
      TRAP    C$ERRSOFT
      .WORD   2203
      .WORD   E2201
      .WORD   EER3
8902 071516 010277 112160      210$:  MOV    R2,@DAT
8903 071522 005701              TST    R1                ;...
8904 071524 001402              BEQ    230$              ;IS DELTA T ZERO ?
8905 071526 005301      220$:  DEC    R1                ;BRANCH IF YES
8906 071530 001376              BNE    220$              ;DECREMENT DELTA T COUNTER
8907 071532 020437 071554      230$:  CMP    R4,ANS222        ;UNTILL WE HAVE ZERO
8908 071536 103337              BHIS   180$              ;HAVE WE READ THE LAST CHANNEL ?
8909 071540 062704 000400      ADD    @400,R4           ;BRANCH IF YES
8910 071544 000742              BR     190$              ;INCREMENT CHANNEL
8911 071546              EXQV22: EXIT  TST        ;DO NEXT CHANNEL WITH SAME DELTA U
      TRAP    C$EXIT
      .WORD   L10057
      ;EXIT TEST
8912
8913 071552 000000      ANS221: .WORD 0          ;SAVE LOCATION FOR FIRST CHANNEL
8914 071554 000000      ANS222: .WORD 0          ;SAVE LOCATION FOR SECOND CHANNEL
8915 071556 000002      ANS223: .WORD 2          ;SAVE LOCATION FOR PATTERN TYPE
8916 071560 000200      ANS224: .WORD 128.       ;SAVE LOCATION FOR DELTA U
8917 071562 000144      ANS225: .WORD 100.       ;SAVE LOCATION FOR DELTA T
8918 071564 004000      ANS226: .WORD 4000       ;SAVE LOCATION FOR STATIC VALUE
8919
8920      .NLIST  BEX
8921 071566      045      123      062  TSHD22: .ASCIZ /#S2#ANALOGUE OUTPUT (DYNAMIC) SPECIFICALLY SELECTABLE.#N
8922 071662      106      111      122  MES221: .ASCIZ /FIRST CHANNEL/
8923 071700      114      101      123  MES222: .ASCIZ /LAST CHANNEL/
8924 071715      120      101      124  MES223: .ASCIZ /PATTERN TYPE (1 = SINGLE FIXED, 2 = RAMP)/
8925 071767      116      125      115  MES224: .ASCIZ /NUMBER OF BINARY STEPS (DELTA U)(1-4096)/
8926 072040      124      111      115  MES225: .ASCIZ /TIME INTERVAL (INCREMENTS) BETWEEN DELTA U STEPS/
8927 072121      105      116      124  MES226: .ASCIZ /ENTER FIXED VALUE (OCTAL 0 7777)/

```

TEST 22: ANALOGUE OUTPUT (DYNAMIC TEST) SPECIFICALLY SELECTA

```

8928
8929 072162      045      101      114  PME221: .ASCIZ /#ALAST CHANNEL HAS TO BE GREATER OR EQUAL TO THE FIRST ONE.#N/
8930 07226J      045      116      045  PME222: .ASCIZ /#N#ACONTROL STATUS REGISTER STATUS :#06#N/
8931 072332      045      116      045  PME223: .ASCIZ /#N#ATYPE CNTL C TO ABORT OR CR FOR NEXT DELTA T AND U VALUE#N/
8932 072430      122      105      101  E2201: .ASCIZ /READY BIT IN CSA NOT SET AFTER LOADING DATA REGISTER (TIMEOUT)/
8933              .LIST      BEX
8934              .EVEN
8935 072530
      072530
      072530 104401

```

L10057: TRAP C\$ETST

TEST 23: ANALOGUE OUTPUT (CALIBRATION ROUTINE)

```

8937 .SBTTL TEST 23: ANALOGUE OUTPUT (CALIBRATION ROUTINE)
8938 ;*****
8939 ; TEST 23 - ANALOGUE OUTPUT (CALIBRATION ROUTINE) - SPECIFICALLY
8940 ; SELECTABLE.
8941 ;
8942 ; THIS TEST IS FOR CALIBRATION AND ALLOWS THE USER TO
8943 ; FOLLOW A CALIBRATION PROCEDURE OR TO DO A MANUAL CALIBRATION.
8944 ;
8945 ; FIRST OF ALL, THE USER GETS SOME INFORMATION ABOUT THE
8946 ; CALIBRATION EQUIPMENT. HE IS THEN IS PROMPTED FOR THE CHANNEL
8947 ; AND THE OUTPUT TYPE (VOLTAGE OR CURRENT). IF CURRENT IS
8948 ; SELECTED, THE PROGRAM LOOKS AT THE COFS BIT IN THE CSA TO FIND
8949 ; OUT THE OFFSET CONFIGURATION. NOW THE OPERATOR CAN CHOOSE
8950 ; BETWEEN THE CALIBRATION PROCEDURE OR MANUAL VALUES; IF MANUAL IS
8951 ; USED, THE OPERATOR CAN TYPE IN A VALUE IN MILLIVOLTS OR
8952 ; MICROAMPS.
8953 ;
8954 ; OTHERWISE HE IS PROMPTED TO CALIBRATE FIRST THE OFFSET AND THEN
8955 ; THE GAIN. THEN HE IS REQUIRED TO TEST THE HALF FULL SCALE TO GO
8956 ; FROM ONE STEP TO THE NEXT, THE USER MUST TYPE CARRIAGE RETURN.
8957 ; ALL STEPS (OFFSET,GAIN AND HALF FULL SCALE) MUST BE REPEATED
8958 ; BEFORE GOING ON TO THE NEXT CHANNEL.
8959 ;*****

```

```

8960 072532 BGNTST
      072532
8961 072532 004737 011714 CALL SELECT ;CALL SELECT ROUTINE
8962 072536 010010 .WORD 10010 ;GIVE TEST PARAMETER (SPEC/AO)
8963 072540 075120 TSHD23 ;GIVE TEST HEADER
8964 072542 103002 BCC ITRC23 ;IF CARRY IS CLEARED, EXIT TEST
8965 072544 EXIT TST ;EXIT TEST
      072544 104432 TRAP C$EXIT
      072546 004340 .WORD L10060
8966 072550 ITRC23: PRINTF @PME23A ;PRINT CALIBRATION EQUIPMENT
      072550 012746 075402 MOV @PME23A, (SP)
      072554 012746 000001 MOV #1, (SP)
      072560 010600 MOV SP,RO
      072562 104417 TRAP C$PNTF
      072564 062706 000004 ADD #4,SP
8967 072570 PRINTF @PME23B ;PRINT CALIBRATION EQUIPMENT
      072570 012746 075530 MOV @PME23B, -(SP)
      072574 012746 000001 MOV #1, (SP)
      072600 010600 MOV SP,RO
      072602 104417 TRAP C$PNTF
      072604 062706 000004 ADD #4,SP
8968 072610 PRINTF @PME23D ;PRINT CALIBRATION EQUIPMENT
      072610 012746 075626 MOV @PME23D, (SP)
      072614 012746 000 1 MOV #1, (SP)
      072620 010600 MOV SP,RO
      072622 104417 TRAP C$PNTF
      072624 062706 000004 ADD #4,SP
8969 072630 PRINTF @PME23E ;PRINT CALIBRATION EQUIPMENT
      072630 012746 075715 MOV @PME23E, (SP)
      072634 012746 000001 MOV #1, (SP)
      072640 010600 MOV SP,RO
      072642 104417 TRAP C$PNTF
      072644 062706 000004 ADD #4,SP
8970 072650 005005 CHA23: CLR R5 ;CLEAR SECOND PASS COUNTER

```

TEST 23: ANALOGUE OUTPUT (CALIBRATION ROUTINE)

```

8971 072652          GMANID MES231,ANS231,D,3400,0,3,YES ;WHICH CHANNEL SHOULD CALIBR.
      072652 104443          TRAP C%GMAN
      072654 000406          BR 10000%
      072656 074752          .WORD ANS231
      072660 000052          .WORD T%CODE
      072662 075214          .WORD MES231
      072664 003400          .WORD 3400
      072666 000000          .WORD T%LLOLIM
      072670 000003          .WORD T%HILIM
      072672          10000%:
8972 072672 042777 003400 111004 BIC #3400,@CSA ;CLEAR CHANNEL NUMBER
8973 072700 053777 074752 110776 BIS ANS231,@CSA ;LOAD CHANNEL NUMBER
8974 072706 013704 074752 MOV ANS231,R4 ;GET CHANNEL NUMBER
8975 072712 000304 SWAB R4 ;SWAB HIGH BYTE INTO LOW BYTE
8976 072714 032777 100000 110762 BIT #100000,@CSA ;IS THE CHANNEL AVAILABLE ?
8977 072722 001011 BNE 10% ;BRANCH IF YES
8978 072724          PRINTF @PME233 ;PRINT CHA. NOT AVAILABLE
      072724 012746 076121 MOV @PME233,(SP)
      072730 012746 000001 MOV #1,(SP)
      072734 010600 MOV SP,R0
      072736 104417 TRAP C%PNTF
      072740 062706 000004 ADD #4,SP
8979 072744 000741 BR CHA23 ;
8980 072746 10%: GMANID MES232,ANS232,0,1,0,1,YES ;CURRENT OR VOLTAGE ?
      072746 104443          TRAP C%GMAN
      072750 000406          BR 10001%
      072752 074754          .WORD ANS232
      072754 000032          .WORD T%CODE
      072756 075243          .WORD MES232
      072760 177777          .WORD 1
      072762 000000          .WORD T%LLOLIM
      072764 000001          .WORD T%HILIM
      072766          10001%:
8981 072766          GMANIL MES233,ANS233,1,YES ;PROCEDURE OR MANUAL ?
      072766 104443          TRAP C%GMAN
      072770 000404          BR 10002%
      072772 074756          .WORD ANS233
      072774 000130          .WORD T%CODE
      072776 075320          .WORD MES233
      073000 177777          .WORD 1
      073002          10002%:
8982 073002 005037 004134 CLR MODE ;LOAD DACON INPUT (UNIPOLAR)
8983 073006 005737 074754 TST ANS232 ;IS VOLTAGE USED ?
8984 073012 001012 BNE 20% ;BRANCH IF YES
8985 073014 012737 000002 004134 MOV #2,MODE ;LOAD DACON INPUT (0 20MA)
8986 073022 032777 000010 110650 BIT #10,@MOD ;READ OFFSET CONFIGURATION
8987 073030 001403 BEQ 20% ;BRANCH IF 0 MA OFFSET
8988 073032 012737 000003 004134 MOV #3,MODE ;LOAD DACON INPUT (4 20MA)
8989 073040 005037 004136 20%: CLR GAIN ;LOAD DACON INPUT (GAIN)
8990 073044 022737 000001 074756 CMP #1,ANS233 ;IS MANUAL VALUE USED ?
8991 073052 001402 BEQ 30% ;BRANCH IF NO
8992 073054 000137 074544 JMP MAN23 ;IF YES JUMP TO MANUAL ROUTINE.
8993 073060 005002 30%: CLR R2 ;CLEAR INHIBIT PRINT FLAG
8994 073062 013703 004164 40%: MOV REDTIM,R3 ;LOAD TIMEOUT COUNTER
8995 073066 032777 000200 110610 50%: BIT #200,@CSA ;READY SET ?
8996 073074 001010 BNE 60% ;BRANCH IF YES
8997 073076 005303 DEC R3 ;DECREMENT TIMEOUT COUNTER

```

TEST 23: ANALOGUE OUTPUT (CALIBRATION ROUTINE)

```

8998 073100 004737 012146      CALL    INSERT
8999 073104 001370      BNE     501
9000 073106      ERRSOF 2301,E2301,EER3
      073106 104457
      073110 004375
      073112 077021
      073114 007442
9001
9002
9003 073116 012777 000001 110556 601:  MOV     @1,8DAT
      073124 005702      TST     R2
9005 073126 001175      BNE     901
9006 073130 012701 000001      MOV     @1,R1
9007 073134      PRINTF @PME235,R1,R4
      073134 010446
      073136 010146
      073140 012746 076275
      073144 012746 000003
      073150 010600
      073152 104417
      073154 062706 000010
9008 073160 013703 004134      MOV     MODE,R3
9009 073164 006303      ASL     R3
9010 073166 006303      ASL     R3
9011 073170 006303      ASL     R3
9012 073172 016301 074760      MOV     TAB23(R3),R1
9013 073176 016302 074762      MOV     TAB23+2(R3),R2
9014 073202 005737 074754      TST     ANS232
9015 073206 001025      BNE     661
9016 073210 032777 000010 110462  BIT     @10,8MOD
9017 073216 001011      BNE     621
9018 073220      PRINTF @PME231
      073220 012746 075753
      073224 012746 000001
      073230 010600
      073232 104417
      073234 062706 000004
9019 073240 000410      BR      661
9020 073242      PRINTF @PME232
      073242 012746 076040 621:
      073246 012746 000001
      073252 010600
      073254 104417
      073256 062706 000004
9021 073262      PRINTF @PME234
      073262 012746 076205 661:
      073266 012746 000001
      073272 010600
      073274 104417
      073276 062706 000004
9022 073302 004737 015764      CALL    DECOUT
9023 073306 005737 074754      TST     ANS232
9024 073312 001043      BNE     701
9025 073314      PRINTF @OUT231
      073314 012746 077002
      073320 012746 000001
      073324 010600

```

```

;SKIP BRANCH IF 'SFI IS SET
;BRANCH IF NOT ZERO
;ERROR HANDLER
      TRAP    C1ERSOFT
      .WORD  2301
      .WORD  E2301
      .WORD  EER3
;LOAD DATA REG.
;WAS THE OFFSET CALIB. MES. PRINTED
;BRANCH IF YES
;SETUP R1 FOR PRINTOUT
;PRINT CHANNEL NUMBER - DAT CONT.
      MOV     R4,-(SP)
      MOV     R1,(SP)
      MOV     @PME235,(SP)
      MOV     @3,(SP)
      MOV     SP,R0
      TRAP    C1PNTF
      ADD     @10,SP
;LOAD TABLE START ADDRESS (O/P=1)
;
;
;
;LOAD R1 FOR DECOUT ROUTINE
;LOAD R2 FOR DECOUT ROUTINE
;WAS VOLTAGE RANGE REQUESTED
;BRANCH IF YES
;IS OFFSET BIT SET ?
;BRANCH IF YES
;PRINT 0 20 MA RANGE IS SELECTED
      MOV     @PME231,(SP)
      MOV     @1,(SP)
      MOV     SP,R0
      TRAP    C1PNTF
      ADD     @4,SP
;SKIP 4 20 MA PRINTOUT
;PRINT 4 20 MA RANGE IS SELECTED
      MOV     @PME232,-(SP)
      MOV     @1,(SP)
      MOV     SP,R0
      TRAP    C1PNTF
      ADD     @4,SP
;PRINT OFFSET CALIBRATION
      MOV     @PME234,-(SP)
      MOV     @1,(SP)
      MOV     SP,R0
      TRAP    C1PNTF
      ADD     @4,SP
;CALL DECIMAL OUT ROUTINE
;IS VOLTAGE USED ?
;BRANCH IF YES
;PRINT MICROAMPS
      MOV     @OUT231,-(SP)
      MOV     @1,(SP)
      MOV     SP,R0

```

TEST 23: ANALOGUE OUTPUT (CALIBRATION ROUTINE)

073326	104417					TRAP	C\$PNTF
073330	062706	000004				ADD	#4,SP
9026 073334	006201		ASR	R1		;DIVIDE BY TWO FOR VOLTAGE VALUE	
9027 073336	006002		ROR	R2		;DIVIDE BY TWO ADD CARRY FOR VOLTAGE	
9028 073340			PRINTF	#PME239,R1,R2		;PRINT VOLTAGE ON 500 OHM RESISTOR	
073340	010246					MOV	R2, (SP)
073342	010146					MOV	R1, -(SP)
073344	012746	076576				MOV	#PME239, (SP)
073350	012746	000003				MOV	#3, (SP)
073354	010600					MOV	SP,RO
073356	104417					TRAP	C\$PNTF
073360	062706	000010				ADD	#10,SP
9029 073364	016301	074764	MOV	TAB23.4(R3),R1		;GET VOLTAGE ON 500 OHM TOLLERANCE	
9030 073370	016302	074766	MOV	TAB23.6(R3),R2		;...	
9031 073374			PRINTF	#TOL1,R1,R2		;AND PRINT IT	
073374	010246					MOV	R2, (SP)
073376	010146					MOV	R1, (SP)
073400	012746	076707				MOV	#TOL1, (SP)
073404	012746	000003				MOV	#3, (SP)
073410	010600					MOV	SP,RO
073412	104417					TRAP	C\$PNTF
073414	062706	000010				ADD	#10,SP
9032 073420	000426		BR	80:		;AND SKIP MILLIVOLTS PRINTOUT	
9033 073422			PRINTF	#OUT232		;PRINT MILLIVOLTS	
073422	012746	076762				MOV	#OUT232, (SP)
073426	012746	000001				MOV	#1, (SP)
073432	010600					MOV	SP,RO
073434	104417					TRAP	C\$PNTF
073436	062706	000004				ADD	#4,SP
9034 073442	016301	074764	MOV	TAB23.4(R3),R1		;GET VOLTAGE TOLLERANCE	
9035 073446	016302	074766	MOV	TAB23.6(R3),R2		;...	
9036 073452			PRINTF	#TOL1,R1,R2		;AND PRINT IT	
073452	010246					MOV	R2, -(SP)
073454	010146					MOV	R1, (SP)
073456	012746	076707				MOV	#TOL1, (SP)
073462	012746	000003				MOV	#3, (SP)
073466	010600					MOV	SP,RO
073470	104417					TRAP	C\$PNTF
073472	062706	000010				ADD	#10,SP
9037 073476			80:	PRINTF	#PME236	;PRINT HOW TO CONTINUE	
073476	012746	076352				MOV	#PME236, (SP)
073502	012746	000001				MOV	#1, -(SP)
073506	010600					MOV	SP,RO
073510	104417					TRAP	C\$PNTF
073512	062706	000004				ADD	#4,SP
9038 073516	012702	000001	MOV	#1,R2		;SET INHIBIT OFFSET PRINTOUT	
9039 073522	004737	017066	CALL	CALRET		;READ OPERATOR KEYBOARD ACTION	
9040 073526	103402		BCS	95:		;BRANCH IF CARRIEGE RETURN TO NEXT	
9041 073530	000137	073062	JMP	40:		;REPEAT IF NO CARRIEGE RETURN FOUND	
9042							
9043 073534	005002		95:	CLR	R2	;	
9044 073536	013703	004164	100:	MOV	REDTIM,R3	;LOAD READY TIMEOUT COUNTER	
9045 073542	032777	000200	110134 110:	BIT	#200,#CSA	;READY SET	
9046 073550	001010			BNE	120:	;BRANCH IF YES	
9047 073552	005303			DEC	R3	;DECREMENT TIMEOUT COUNTER	
9048 073554	004737	012146		CALL	INSERT	;SKIP BRANCH IF 'SPI' IS SET	
9049 073560	001370			BNE	110:	;BRANCH IF COUNTER IS NOT ZERO	

TEST 23: ANALOGUE OUTPUT (CALIBRATION ROUTINE)

```

9050 073562          ERRSOFT 2302,E2301,EER3          ;ERROR HANDLER
      073562      104457          TRAP      C$ERSOFT
      073564      004376          .WORD    2302
      073566      077021          .WORD    E2301
      073570      007442          .WORD    EER3
9051 073572      012777      007777      110102      120$:  MOV      #7777, @DAT          ;LOAD DATA REG.
9052 073600      005702          TST      R2          ;WAS THE GAIN CALIB. MES. PRINTED
9053 073602      001145          BNE      150$          ;BRANCH IF YES
9054 073604      012701      007777          MOV      #7777, R1          ;SETUP R1 FOR PRINTOUT
9055 073610          PRINTF      #PME235, R1, R4          ;PRINT CHANNEL NUMBER + DAT CONT.
      073610      010446          MOV      R4, (SP)
      073612      010146          MOV      R1, -(SP)
      073614      012746      076275          MOV      #PME235, (SP)
      073620      012746      000003          MOV      #3, (SP)
      073624      010600          MOV      SP, R0
      073626      104417          TRAP    C$PNTF
      073630      062706      000010          ADD      #10, SP
9056 073634      013703      004134          MOV      MODE, R3          ;LOAD TABLE START POINT (O/P=7777)
9057 073640      006303          ASL      R3          ;BUILD EVEN ADDRESS
9058 073642      006303          ASL      R3
9059 073644      006303          ASL      R3
9060 073646      016301      075020          MOV      TAB23.40(R3), R1          ;LOAD R1 FOR DECOU'T ROUTINE
9061 073652      016302      075022          MOV      TAB23.42(R3), R2          ;LOAD R2 FOR DECOU'T ROUTINE
9062 073656          PRINTF      #PME237          ;PRINT GAIN CALIBRATION
      073656      012746      076421          MOV      #PME237, -(SP)
      073662      012746      000001          MOV      #1, (SP)
      073666      010600          MOV      SP, R0
      073670      104417          TRAP    C$PNTF
      073672      062706      000004          ADD      #4, SP
9063 073676      004737      015764          CALL     DECOU'T          ;CALL DECIMAL OUT ROUTINE
9064 073702      005737      074754          TST      ANS232          ;IS VOLTAGE USED ?
9065 073706      001043          BNE      130$          ;BRANCH IF YES
9066 073710          PRINTF      #OUT231          ;PRINT MICROAMPS
      073710      012746      077002          MOV      #OUT231, -(SP)
      073714      012746      000001          MOV      #1, (SP)
      073720      010600          MOV      SP, R0
      073722      104417          TRAP    C$PNTF
      073724      062706      000004          ADD      #4, SP
9067 073730          ASR      R1          ;DIVIDE BY TWO FOR VOLTAGE VALUE
9068 073732          ROR      R2          ;DIVIDD BY TWO ADD CARRY FOR VOLTAGE
9069 073734          PRINTF      #PME239, R1, R2          ;PRINT VOLTAGE ON 500 OHM RESISTOR
      073734      010246          MOV      R2, -(SP)
      073736      010146          MOV      R1, -(SP)
      073740      012746      076576          MOV      #PME239, (SP)
      073744      012746      000003          MOV      #3, (SP)
      073750      010600          MOV      SP, R0
      073752      104417          TRAP    C$PNTF
      073754      062706      000010          ADD      #10, SP
9070 073760          MOV      TAB23.44(R3), R1          ;GET VOLTAGE ON 500 OHM TOLLERANCE
9071 073764          MOV      TAB23.46(R3), R2
9072 073770          PRINTF      #TOL1, R1, R2          ;AND PRINT IT
      073770      010246          MOV      R2, (SP)
      073772      010146          MOV      R1, (SP)
      073774      012746      076707          MOV      #TOL1, (SP)
      074000      012746      000003          MOV      #3, (SP)
      074004      010600          MOV      SP, R0
      074006      104417          TRAP    C$PNTF

```

TEST 23: ANALOGUE OUTPUT (CALIBRATION ROUTINE)

```

9073 074010 062706 000010
9074 074014 000426
9074 074016 130$: BR 140$ ;AND SKIP MILLIVOLT PRINTOUT
074016 012746 076762 PRINTF #OUT232 ;PRINT 'MILLIVOLTS'
074022 012746 000001
074026 010600
074030 104417
074032 062706 000004
9075 074036 016301 075024 MOV TAB23+44(R3),R1 ;GET VOLTAGE ON 500 OHM TOLLERANCE
9076 074042 016302 075026 MOV TAB23+46(R3),R2 ;...
9077 074046 PRINTF #TOL1,R1,R2 ;AND PRINT IT
074046 010246
074050 010146
074052 012746 076707
074056 012746 000003
074062 010600
074064 104417
074066 062706 000010
9078 074072 140$: PRINTF #PME236 ;PRINT HOW TO CONTINUE
074072 012746 076352
074076 012746 000001
074102 010600
074104 104417
074106 062706 000004
9079 074112 012702 000001
9080 074116 004737 017066 150$: MOV #1,R2 ;SET INHIBIT GAIN PRINTOUT
9081 074122 103402 CALL CALRET ;READ OPERATOR KEYBOARD ACTION
9082 074124 000137 073536 BCS 155$ ;BRANCH IF CARRIAGE RETURN
9083 JMP 100$ ;REPEAT IF NO CARRIGE RETURN FOUO
9084 074130 005002 155$: CLR R2 ;CLEAR INHIBIT HALF SCALE PRI. FLAG
9085 074132 013703 004164 160$: MOV REDTIM,R3 ;LOAD READY TIMEOUT COUNTER
9086 074136 032777 000200 107540 170$: BIT #200,@CSA ;READY SET
9087 074144 001010 BNE 180$ ;BRANCH IF YES
9088 074146 005303 DEC R3 ;DECREMENT TIMEOUT COUNTER
9089 074150 004737 012146 CALL INSERT ;SKIP BRANCH IF SFI IS SET
9090 074154 001370 BNE 170$ ;BRANCH IF NOT ZERO
9091 074156 ERRSOFT 2303,E2301,EER3 ;ERROR HANDLER
074156 104457 TRAP C#ERSOFT
074160 004377 .WORD 2303
074162 077021 .WORD E2301
074164 007442 .WORD EER3
9092 074166 012777 004000 107506 180$: MOV #4000,@DAT ;LOAD DATA REG. (HA F SCALE)
9093 074174 005702 TST R2 ;WAS THE GAIN CALIB. MES. PRINTED?
9094 074176 001145 BNE 210$ ;BRANCH IF YES
9095 074200 012701 004000 MOV #4000,R1 ;SETUP R1 FOR PRINTOUT
9096 074204 PRINTF #PME235,R1,R4 ;PRINT DAT AND CHA. VALUE
074204 010446
074206 010146
074210 012746 076275
074214 012746 000003
074220 010600
074222 104417
074224 062706 000010
9097 074230 013703 004134 MOV MODE,R3 ;LOAD TABLE START POINT (O/P=4000)
9098 074234 006303 ASL R3 ;BUILD EVEN ADDRESS
9099 074236 006303 ASL R3
9100 074240 006303 ASL R3

```


TEST 23: ANALOGUE OUTPUT (CALIBRATION ROUTINE)

```

9101 074242 016301 075060      MOV      TAB23+100(R3),R1      ;LOAD R1 FOR DECOUT ROUTINE
9102 074246 016302 075062      MOV      TAB23+102(R3),R2      ;LOAD R2 FOR DECOUT ROUTINE
9103 074252                        PRINTF   #PME238                ;PRINT HALF SCALE CALIBRATION
                                MOV      #PME238, -(SP)
                                MOV      #1, (SP)
                                MOV      SP,R0
                                TRAP     C$PNTF
                                ADD      #4,SP
                                074252 012746 076507
                                074256 012746 000001
                                074262 010600
                                074264 104417
                                074266 062706 000004
9104 074272 004737 015764      CALL     DECOUT                ;CALL DECIMAL OUT ROUTINE
9105 074276 005737 074754      TST      ANS232                ;IS VOLTAGE USED ?
9106 074302 001043                BNE      190$                  ;BRANCH IF YES
9107 074304                        PRINTF   #OUT231                ;PRINT 'MICROAMPS'
                                MOV      #OUT231, (SP)
                                MOV      #1, -(SP)
                                MOV      SP,R0
                                TRAP     C$PNTF
                                ADD      #4,SP
                                074304 012746 077002
                                074310 012746 000001
                                074314 010600
                                074316 104417
                                074320 062706 000004
9108 074324 006201                ASR      R1                      ;DIVIDE BY TWO FOR VOLTAGE VALUE
9109 074326 006002                ROR      R2                      ;DIVIDE BY TWO ADD CARRY FOR VOLTAGE
9110 074330                        PRINTF   #PME239,R1,R2          ;PRINT VOLTAGE ON 500 OHM RESISTOR
                                MOV      R2, -(SP)
                                MOV      R1, -(SP)
                                MOV      #PME239, -(SP)
                                MOV      #3, -(SP)
                                MOV      SP,R0
                                TRAP     C$PNTF
                                ADD      #10,SP
                                074330 010246
                                074332 010146
                                074334 012746 076576
                                074340 012746 000003
                                074344 010600
                                074346 104417
                                074350 062706 000010
9111 074354 016301 075064      MOV      TAB23+104(R3),R1      ;GET VOLTAGE ON 500 OHM TOLLERANCE
9112 074360 016302 075066      MOV      TAB23+106(R3),R2      ;...
9113 074364                        PRINTF   #TOL1,R1,R2          ;AND PRINT IT
                                MOV      R2, (SP)
                                MOV      R1, -(SP)
                                MOV      #TOL1, (SP)
                                MOV      #3, -(SP)
                                MOV      SP,R0
                                TRAP     C$PNTF
                                ADD      #10,SP
                                074364 010246
                                074366 010146
                                074370 012746 076707
                                074374 012746 000003
                                074400 010600
                                074402 104417
                                074404 062706 000010
9114 074410 000426                BR       200$                  ;AND SKIP MILLIVOLT PRINTOUT
9115 074412                        PRINTF   #OUT232                ;PRINT 'MILLIVOLTS'
                                MOV      #OUT232, -(SP)
                                MOV      #1, (SP)
                                MOV      SP,R0
                                TRAP     C$PNTF
                                ADD      #4,SP
                                074412 012746 076762
                                074416 012746 000001
                                074422 010600
                                074424 104417
                                074426 062706 000004
9116 074432 016301 075064      MOV      TAB23+104(R3),R1      ;GET VOLTAGE ON 500 OHM TOLLERANCE
9117 074436 016302 075066      MOV      TAB23+106(R3),R2      ;...
9118 074442                        PRINTF   #TOL1,R1,R2          ;AND PRINT IT
                                MOV      R2, (SP)
                                MOV      R1, (SP)
                                MOV      #TOL1, -(SP)
                                MOV      #3, (SP)
                                MOV      SP,R0
                                TRAP     C$PNTF
                                ADD      #10,SP
                                074442 010246
                                074444 010146
                                074446 012746 076707
                                074452 012746 000003
                                074456 010600
                                074460 104417
                                074462 062706 000010
9119 074466                        PRINTF   #PME236                ;PRINT HOW TO CONTINUE
                                MOV      #PME236, (SP)
                                MOV      #1, (SP)
                                074466 012746 076352
                                074472 012746 000001

```

TEST 23: ANALOGUE OUTPUT (CALIBRATION ROUTINE)

```

074476 010600
074500 104417
074502 062706 000004
9120 074506 012702 000001
9121 074512 004737 017066
9122 074516 103402
9123 074520 000137 074132
9124 074524 005705
9125 074526 001402
9126 074530 000137 072650
9127 074534 012705 000001
9128 074540 000137 073060
9129
9130
9131
9132
9133 074544 005737 074754
9134 074550 001004
9135 074552 012737 077002 004140
9136 074560 000403
9137 074562 012737 076762 004140
9138 074570
074570 012746 076655
074574 012746 000001
074600 010600
074602 104417
074604 062706 000004
9139 074610 004737 015204
9140 074614 004737 014730
9141 074620 005002
9142 074622 013703 004164
9143 074626 032777 000200 107050
9144 074634 001010
9145 074636 005303
9146 074640 004737 012146
9147 074644 001370
9148 074646
074646 104457
074650 004400
074652 077021
074654 007442
9149 074656 010177 107020
9150 074662 004737 017066
9151 074666 103726
9152 074670 005702
9153 074672 001353
9154 074674
074674 010446
074676 010146
074700 012746 076275
074704 012746 000003
074710 010600
074712 104417
074714 062706 000010
9155 074720
074720 012746 076352
074724 012746 000001

```

210\$: MOV #1,R2 ;SET INHIBIT PRNTOU FLAG
CALL CALRET ;READ OPERATOR KEYBOARD ACTION
BCS 215\$;IF CARRIGE RETURN NEXT STEP
JMP 160\$;BRANCH IF NO CARRIAGE RETURN
215\$: TST R5 ;WAS IT THE SECOND PASS ?
BEQ 220\$;IF NO BRANCH
JMP CHA23 ;IF YES JUMP TO CHANNEL PRINTOUT
220\$: MOV #1,R5 ;SET SECOND PASS INDICATOR
JMP 30\$;DO THE SECOND PASS

;THE FOLLOWING PART IS USED IF THE OPERATOR WANTS MANUAL VALUES FOR
;CALIBRATION

MAN23: TST ANS232 ;IS VOLTAGE USED ?
BNE 10\$;BRANCH IF YES
MOV #OUT231,PADD ;LOAD MICROAMPS INFORMATION
BR 20\$;AND JUMP
10\$: MOV #OUT232,PADD ;LOAD MILLIVOLTS INFORMATION
20\$: PRINTF #PRMST ;PRINT ENTER MANUAL VALUE

MOV #PRMST,(SP)
MOV #1,-(SP)
MOV SP,R0
TRAP C\$PNTF
ADD #4,SP

CALL DECIN ;REQUEST A DEC. NUM. FROM OPERATOR
CALL ADCON ;CONVERT THE ANALOGUE VALUE TO DIGI.
CLR R2 ;CLEAR INHIBIT MESSAGES FLAG
30\$: MOV REDTIM,R3 ;LOAD TIMEOUT COUNTER
40\$: BIT #200,@CSA ;READY SET
BNE 50\$;BRANCH IF YES
DEC R3 ;DECREMENT TIMEOUT COUNTER
CALL INSERT ;SKIP BRANCH IF SFI IS SET
BNE 40\$;BRANCH IF COUNTER IS NOT ZERO
ERRSOFT 2304,E2301,EER3 ;ERROR HANDLER

TRAP C\$ERSOFT
.WORD 2304
.WORD E2301
.WORD EER3

50\$: MOV R1,@DAT ;LOAD DIGITAL VALUE INTO DATA REGISTER
CALL CALRET ;READ OPERATOR KEYBOARD ACTION
BCS MAN23 ;BRANCH IF CR WAS TYPED
TST R2 ;INHIBIT THE PRINT OUT ?
BNE 30\$;BRANCH IF YES
PRINTF #PME235,R1,R4 ;PRINT CHANNEL NUMBER * DAT CONT.

MOV R4,(SP)
MOV R1,(SP)
MOV #PME235,(SP)
MOV #3,(SP)
MOV SP,R0
TRAP C\$PNTF
ADD #10,SP

60\$: PRINTF #PME236 ;PRINT HOW TO CONTINUE

MOV #PME236,(SP)
MOV #1,(SP)

TEST 23: ANALOGUE OUTPUT (CALIBRATION ROUTINE)

```

074730 010600
074732 104417
074734 062706 000004
9156 074740 012702 000001
9157 074744 000726
9158 074746
074746 104432
074750 002136
9159
9160 074752 000000
9161 074754 000000
9162 074756 000001
9163
9164
9165
9166 074760 000002 000671 000002 TAB23: .WORD 2.,441.,2,400. ;MODE 0 (LOADED VALUE INTO DAT = 1)
074766 000620
9167 074770 154365 000000 000002 .WORD -9995.,000,2,400. ;MODE 1 (LOADED VALUE INTO DAT = 1)
074776 000620
9168 075000 000004 001563 000004 .WORD 4.,883.,4,800. ;MODE 2 (LOADED VALUE INTO DAT = 1)
075006 001440
9169 075010 007643 000000 000004 .WORD 4003.,000,4,000 ;MODE 3 (LOADED VALUE INTO DAT = 1)
075016 000000
9170
9171 075020 023415 000000 000002 .WORD 9997.,000,2,400. ;MODE 0 (LOADED VALUE INTO DAT = 7777)
075026 000620
9172 075030 023413 000000 000002 .WORD 9995.,000,2,400. ;MODE 1 (LOADED VALUE INTO DAT = 7777)
075036 000620
9173 075040 047033 000000 000004 .WORD 19995.,000,4,800. ;MODE 2 (LOADED VALUE INTO DAT = 7777)
075046 001440
9174 075050 047034 000000 000004 .WORD 19996.,000,4,000 ;MODE 3 (LOADED VALUE INTO DAT = 7777)
075056 000000
9175
9176 075060 011610 000000 000002 .WORD 5000.,000,2,400. ;MODE 0 (LOADED VALUE INTO DAT = 4000)
075066 000620
9177 075070 000000 000000 000002 .WORD 000.,000,2,400. ;MODE 1 (LOADED VALUE INTO DAT = 4000)
075076 000620
9178 075100 023420 000000 000004 .WORD 10000.,000,4,800. ;MODE 2 (LOADED VALUE INTO DAT = 4000)
075106 001440
9179 075110 027340 000000 000004 .WORD 12000.,000,4,000 ;MODE 3 (LOADED VALUE INTO DAT = 4000)
075116 000000
9180
9181
9182 .NLIST BEX
9183 075120 045 123 062 TSHD23: .ASCIZ /52#ANALOGUE OUTPUT (CALIBR.) SPECIFICALLY SELECTABLE.#N/
9184 075214 103 110 101 MES231: .ASCIZ /CHANNEL TO CALIBRATE ?/
9185 075243 103 101 114 MES232: .ASCIZ /CALIBRATE FOR CURRENT (0) OR FOR VOLTAGE (1)/
9186 075320 104 117 040 MES233: .ASCIZ /DO YOU WANT TO FOLLOW THE CALIBRATION PROCEDURE ?
9187
9188 075402 045 116 045 PME23A: .ASCII /#ACALIBRATION EQUIPMENT#N/
9189 075435 045 116 045 .ASCIZ /#ADIGITAL VOLTMETER TO MEASURE THE VOLTAGE AND CURRENT#N
9190 075530 045 101 117 PME23B: .ASCIZ /#AOUTPUTS. THE DVM SHOULD HAVE AN ACCURACY OF 0.01 PERCENT.#N
9191 075626 045 101 106 PME23D: .ASCIZ /#AFOR CURRENT ADJUSTMENT ATTACH THE 500 OHM RESISTOR#N
9192 075715 045 101 111 PME23E: .ASCIZ /#AIN PARALLEL WITH THE DVM.#N/
9193
9194 075753 045 116 045 PME231: .ASCIZ /#A0 20 M#A RANGE IS SELECTED (COFS BIT CLEARED)#N
9195 076040 045 116 045 PME232: .ASCIZ /#A4 20 MA RANGE IS SELECTED (COFS BIT SET)#N

```

TEST 23: ANALOGUE OUTPUT (CALIBRATION ROUTINE)

```

9196 076121      045      101      103  PME233: .ASCIZ  /#ACHANNEL NOT AVAILABLE, ENTER AVAILABLE CHANNEL #N/
9197 076205      045      116      045  PME234: .ASCIZ  /#N#AADJUST THE OFFSET TRIMPOT UNTIL THE DVM INDICATES :/
9198 076275      045      116      045  PME235: .ASCIZ  /#N#ABIT PATTERN #06#A OUTPUT TO CHANNEL :#D3/
9199 076352      045      116      045  PME236: .ASCIZ  /#N#ATYPE CARRIAGE RETURN TO CONTINUE#N/
9200 076421      045      116      045  PME237: .ASCIZ  /#N#AADJUST THE GAIN TRIMPOT UNTIL THE DVM INDICATES :/
9201 076507      045      116      045  PME238: .ASCIZ  /#N#ANOW CHECK THE HALF SCALE THE DVM SHOULD INDICATE :/
9202 076576      045      101      075  PME239: .ASCIZ  /#A# -#D5#A.#23#A MILLIVOLT ON 500 OHM RESISTOR/
9203 076655      045      116      045  PRMST:  .ASCIZ  /#N#AENTER MANUAL VALUE IN/
9204
9205 076707      045      101      040  TOL1:   .ASCIZ  \#A TOLLERANCE // #D1#A.#D3#A MILLIVOLTS#N\
9206 076762      045      101      040  OUT232: .ASCIZ  /#A MILLIVOLTS#N/
9207 077002      045      101      040  OUT231: .ASCIZ  /#A MICROAMPS#N/
9208
9209 077021      122      105      101  E2301:  .ASCIZ  /READY BIT IN CSA NOT SET AFTER LOADING DATA REGISTER/
9210          .LIST  BEX
9211          .EVEN
9212 077106          .ENDTST
          077106
          077106 104401

```

L10060: TRAP C#ETST

TEST 24: ANALOGUE INPUT (CALIBRATION ROUTINE)

```

9214 .SBTTL TEST 24: ANALOGUE INPUT (CALIBRATION ROUTINE)
9215 ;*****
9216 ; TEST 24 - ANALOGUE INPUT (CALIBRATION ROUTINE) - SPECIFICALLY
9217 ; SELECTABLE.
9218 ;
9219 ; THIS TEST IS FOR CALIBRATING AN ANALOGUE INPUT MODULE .
9220 ;
9221 ; FIRST OF ALL, THE USER IS ASKED WHETHER HE NEEDS INFORMATION ABOUT
9222 ; THE CALIBRATION PROCEDURE.
9223 ; HE IS THEN PROMPTED FOR THE CHANNEL ON WHICH HE HAS PUT THE PRECISION
9224 ; VOLTAGE REFERENCE SOURCE .
9225 ; AFTER THIS HE IS INFORMED WHICH RANGE IS SWITCHED (UNIPOLAR OR BIPOLAR)
9226 ; AND ASKED TO SELECT THE DESIRED GAIN.
9227 ; NOW THE PROGRAM CONTINUOUSLY READS THE INPUT AND PRINTS THE RESULT
9228 ; AS AN OCTAL AND VOLTAGE VALUE.
9229 ; TO ABORT THE TEST, "CNIL C" MUST BE TYPED.
9230 ;*****
9231 077110          BGNTS1
9232 077110          T24::
9233 077110 004737 011714 CALL SELECT          ;CALL SELECT ROUTINE
9234 077114 010004          .WORD 10004          ;GIVE TEST PARAMETER (SPEC/AI)
9235 077116 100100          TSMO24          ;GIVE TEST HEADER
9236 077120 103002          BCC ITRC24          ;IF CARRY IS CLEARED EXIT TEST
9237 077122          EXIT TST          ;EXIT TEST
9238 077122 104432          TRAP C$EXIT
9239 077124 002754          .WORD L10061 .
9240 077126          ITRC24: GMANIL MES241,ANS241, 1,YES ;DO YOU WANT CALIBRATION HELP
9241 077126 104443          TRAP C$GMAN
9242 077130 000404          BR 10000$
9243 077132 100072          .WORD ANS241
9244 077134 000130          .WORD T$CODE
9245 077136 100173          .WORD MES241
9246 077140 177777          .WORD 1
9247 077142          10000$:
9248 077142 005737 100072 TST ANS241          ;DO YOU WANT HELP
9249 077146 001545          BEQ 20$          ;BRANCH IF ANSWER WAS NO
9250 077150 032777 000020 104522 BIT #20,@MOD          ;IS UNIPOLAR RANGE SWITCHED
9251 077156 001461          BEQ 10$          ;BRANCH IF YES
9252 077160          PRINTF @PME242          ;PRINT BIPOLAR MESSAGES
9253 077160 012746 101530 MOV @PME242,-(SP)
9254 077164 012746 000001 MOV #1,(SP)
9255 077170 010600          MOV SP,R0
9256 077172 104417          TRAP C$PNTF
9257 077174 062706 000004 ADD #4,SP
9258 077200          PRINTF @PME24A          ;CALIBRATION INFORMATION GENERAL
9259 077200 012746 100364 MOV @PME24A,(SP)
9260 077204 012746 000001 MOV #1,(SP)
9261 077210 010600          MOV SP,R0
9262 077212 104417          TRAP C$PNTF
9263 077214 062706 000004 ADD #4,SP
9264 077220          PRINTF @PME24B          ;CALIBRATION INFORMATION FOR BIPOLAR
9265 077220 012746 100474 MOV @PME24B,-(SP)
9266 077224 012746 000001 MOV #1,(SP)
9267 077230 010600          MOV SP,R0
9268 077232 104417          TRAP C$PNTF

```

TEST 24: ANALOGUE INPUT (CALIBRATION ROUTINE)

```

9247 077234 062706 000004
077240 012746 100604 PRINTF @PME24C
077244 012746 000001
077250 010600
077252 104417
9248 077254 062706 000004
077260 012746 100675 PRINTF @PME24D
077264 012746 000001
077270 010600
077272 104417
9249 077274 062706 000004
077300 012746 100750 PRINTF @PME24E
077304 012746 000001
077310 010600
077312 104417
077314 062706 000004
9250 077314 000460 BR 20$
9251
9252 077322 10$: PRINTF @PME24A
077322 012746 100364
077326 012746 000001
077332 010600
077334 104417
9253 077336 062706 000004
077342 012746 101604 PRINTF @PME243
077346 012746 000001
077352 010600
077354 104417
9254 077356 062706 000004
077362 012746 101036 PRINTF @PME24F
077366 012746 000001
077372 010600
077374 104417
9255 077376 062706 000004
077402 012746 101145 PRINTF @PME24G
077406 012746 000001
077412 010600
077414 104417
077416 062706 000004
9256 077422 012746 101235 PRINTF @PME24H
077426 012746 000001
077432 010600
077434 104417
077436 062706 000004
9257 077442 012746 10130. PRINTF @PME24I
077446 012746 000001
077452 010600
077454 104417
077456 062706 000004

```

```

ADD @4,SP
;CALIBRATION INFORMATION FOR BIPOLAR
MOV @PME24C,-(SP)
MOV @1,-(SP)
MOV SP,RO
TRAP C$PNTF
ADD @4,SP
;CALIBRATION INFORMATION FOR BIPOLAR
MOV @PME24D,-(SP)
MOV @1,-(SP)
MOV SP,RO
TRAP C$PNTF
ADD @4,SP
;CALIBRATION INFORMATION FOR BIPOLAR
MOV @PME24E,-(SP)
MOV @1,-(SP)
MOV SP,RO
TRAP C$PNTF
ADD @4,SP
;AND SKIP UNIPOLAR MESSAGE
;CALIBRATION INFORMATION GENERAL
MOV @PME24A,-(SP)
MOV @1,-(SP)
MOV SP,RO
TRAP C$PNTF
ADD @4,SP
;PRINT UNIPOLAR MESSAGES
MOV @PME243,(SP)
MOV @1,-(SP)
MOV SP,RO
TRAP C$PNTF
ADD @4,SP
;CALIBRATION INFORMATION FOR UNIPOLAR
MOV @PME24F,-(SP)
MOV @1,(SP)
MOV SP,RO
TRAP C$PNTF
ADD @4,SP
;CALIBRATION INFORMATION FOR UNIPOLAR
MOV @PME24G,(SP)
MOV @1,(SP)
MOV SP,RO
TRAP C$PNTF
ADD @4,SP
;CALIBRATION INFORMATION FOR UNIPOLAR
MOV @PME24H,(SP)
MOV @1,-(SP)
MOV SP,RO
TRAP C$PNTF
ADD @4,SP
;CALIBRATION INFORMATION FOR UNIPOLAR
MOV @PME24I,(SP)
MOV @1,-(SP)
MOV SP,RO
TRAP C$PNTF
ADD @4,SP

```

TEST 24: ANALOGUE INPUT (CALIBRATION ROUTINE)

```

9258
9259 07 462 005037 004134 20$: CLR MODE ;LOAD DACON INPUT (UNIPOLAR)
9260 07 466 032777 000020 104204 BIT #20,@MOD ;IS UNIPOLAR RANGE SWITCHED
9261 077474 001403 BEQ 30$ ;BRANCH IF YES
9262 077476 012737 000001 004134 MOV #1,MODE ;LOAD DACON INPUT (BIPOLAR)
9263 07 504 30$: GMANID MES242,ANS242,D,77400,0,15.,YES ;GET USED CHANNEL
    077504 104443 TRAP C$GMAN
    077506 000406 BR 10001$
    077510 100074 .WORD ANS242
    077512 000052 .WORD T$CODE
    077514 100246 .WORD MES242
    077516 077400 .WORD 77400
    077520 000000 .WORD T$LOLIM
    077522 000017 .WORD T$HILIM
    077524 10001$:
9264 077524 042777 077536 104152 BIC #77536,@CSA ;CLEAR CSA R/W BITS
9265 077532 053777 100074 104144 BIS ANS242,@CSA ;LOAD CHANNEL NUMBER
9266 077540 013704 100074 MOV ANS242,R4 ;AND GET CHANNEL NUMBER
9267 077544 032777 100000 104132 BIT #100000,@CSA ;IS THE CHANNEL AVAILABLE
9268 077552 001011 BNE 40$ ;BRANCH IF YES
9269 077554 PRINTF #PME241 ;PRINT CHA. NOT AVAILABLE
    077554 012746 101375 MOV #PME241,(SP)
    077560 012746 000001 MOV #1,(SP)
    077564 010600 MOV SP,R0
    077566 104417 TRAP C$PNTF
    077570 062706 000004 ADD #4,SP
9270 077574 000743 BR 30$ ;
9271
9272 077576 40$: GMANID MES243,ANS243,0,16,0,7,YES ;GET GAIN
    077576 104443 TRAP C$GMAN
    077600 000406 BR 10002$
    077602 100076 .WORD ANS243
    077604 000032 .WORD T$CODE
    077606 100306 .WORD MES243
    077610 000016 .WORD 16
    077612 000000 .WORD T$LOLIM
    077614 000007 .WORD T$HILIM
    077616 10002$:
9273 077616 053777 100076 104060 BIS ANS243,@CSA ;LOAD GAIN INTO CSA
9274 077624 006237 100076 ASR ANS243 ;CHANGE GAIN BIT POSITION
9275 077630 013737 100076 004136 MOV ANS243,GAIN ;LOAD DACON INPUT (GAIN)
9276 077636 006337 100076 ASL ANS243 ;CHANGE BACK GAIN BIT POSI.
9277
9278 077642 005777 104034 TST @DAT ;READ DAT FOR CLR DONE+ERR BIT IN CSA
9279 077646 017737 104032 004064 50$: MOV @CSA,BAD ;GET CSA CONTENTS
9280 077654 032737 000200 004064 BIT #200,BAD ;READY FOR CONVERSION (DONE CLEARED)
9281 077662 004737 012146 CALL INSERT ;SKIP BRANCH IF 'SFI' IS SET
9282 077666 001414 BEQ 60$ ;BRANCH IF YES
9283 077670 012737 100000 004062 MOV #100000,GOOD ;SET UP GOOD DATA
9284 077676 013737 100076 004062 MOV ANS243,GOOD ;SET UP GOOD DATA
9285 077704 050437 004062 BIS R4,GOOD ;
9286 077710 ERRSOF T 2401,E2401,EER1 ;ERROR HANDLER
    077710 104457 TRAP C$ERSOF T
    077712 00454 .WORD 2401
    077714 101746 .WORD E2401
    077716 007342 .WORD EER1
9287 077720 005003 60$: CLR R3 ;CLEAR DONE TIMEOUT COUNTER

```

TEST 24: ANALOGUE INPUT (CALIBRATION ROUTINE)

```

9288 077722 052777 000001 103754      BIS      #1, @CSA      ;START A CONVERSION
9289 077730 017737 103750 004064 70$:  MOV      @CSA, BAD    ;GET CSA CONTENTS
9290 077736 032737 000200 004064      BIT      #200, BAD    ;CONVERSION DONE (DONE SET) ?
9291 077744 001013      BNE      80$         ;BRANCH IF YES
9292 077746 005303      DEC      R3         ;DECREMENT DONE WAIT COUNTER
9293 077750 004737 012146      CALL    INSERT      ;SKIP BRANCH IF 'SFI' IS SET
9294 077754 001365      BNE      70$         ;BRANCH IF NO TIMEOUT
9295 077756 052737 000200 004062      BIS      #200, GOOD  ;SET UP GOOD DATA
9296 077764      ERRSOFT 2402, E2402, EER1 ;ERROR HANDLER
          077764 104457      TRAP    C$ERRSOFT
          077766 004542      .WORD  2402
          077770 002031      .WORD  E2402
          077772 007342      .WORD  EER1

9297
9298 077774 017737 103702 004062 80$:  MOV      @DAT, GOOD   ;GET DAT CONTENTS
9299 100002 013701 004062      MOV      GOOD, R1    ;LOAD DACON INPUT WITH DAT CONTENTS
9300 100006 004737 004512      CALL    DACON        ;DIGITAL TO ANALOGUE CONVERSION
9301 100012      PRINTF  #PME244, GOOD ;PRINT FOUND VALUES
          100012 013746 004062      MOV      GOOD, -(SP)
          100016 012746 101661      MOV      #PME244, (SP)
          100022 012746 000002      MOV      #2, (SP)
          100026 010600      MOV      SP, R0
          100030 104417      TRAP    C$PNTF
          100032 062706 000006      ADD      #6, SP
9302 100036 004737 015764      CALL    DECOUT      ;CALL DECIMAL OUT ROUTINE
9303 100042      PRINTF  #OUT24      ;PRINT MILLIVOLTS'
          100042 012746 101731      MOV      #OUT24, (SP)
          100046 012746 000001      MOV      #1, (SP)
          100052 010600      MOV      SP, R0
          100054 104417      TRAP    C$PNTF
          100056 062706 000004      ADD      #4, SP
9304 100062 000137 077646      JMP      50$         ;GO INTO LOOP
9305 100066      EXIT      TST
          100066 104432      TRAP    C$EXIT
          100070 002010      .WORD  L10061

9306
9307 100072 000000      ANS241: .WORD  0      ;LOCATION FOR HELP ANSWER
9308 100074 000000      ANS242: .WORD  0      ;SAVE LOCATION FOR CHANNEL NUMBER
9309 100076 000000      ANS243: .WORD  0      ;SAVE LOCATION FOR GAIN VALUE
9310
9311      .NLIST  BEX
9312 100100      045      123      062  TSHD24: .ASCIZ  /#S2#ANALOGUE INPUT (CALIBR.) SPECIFICALLY SELECTABLE.#N/
9313 100173      104      117      040  MES241: .ASCIZ  /DO YOU NEED CALIBRATION HELP INFORMATION ?/
9314 100246      125      123      105  MES242: .ASCIZ  /USED CHANNEL FOR VOLTAGE SOURCE/
9315 100306      107      101      111  MES243: .ASCIZ  /GAIN (TYPE 0-7 = GIAN 1,2,5,10,20,50,100,200)/
9316
9317 100364      045      116      045  PME24A: .ASCII  /#N#ACALIBRATION INFORMATION#N/
9318 100421      045      101      107      .ASCIZ  /#AGAIN 1 IS USED FOR FOLLOWING PROCEDURE#N/
9319
9320 100474      045      116      045  PME24B: .ASCII  /#N#AFOR BIPOLAR ADJUSTMENT#N#N/
9321 100534      045      101      101      .ASCIZ  /#AADJUST VOLTAGE SOURCE TO -9.9951 V#N/
9322 100604      045      101      101  PME24C: .ASCIZ  /#AADJUST OFFSET TRIMPOT UNTIL 0001 ( 9.9951 V) APPEARS#N
9323 100675      045      116      045  PME24D: .ASCIZ  /#N#AADJUST VOLTAGE SOURCE TO +9.9902 V#N/
9324 100750      045      101      101  PME24E: .ASCIZ  /#AADJUST GAIN TRIMPOT UNTIL 7776 (9.9902 V) APPEARS#N'
9325
9326 101036      045      116      045  PME24F: .ASCII  /#N#AFOR UNIPOLAR ADJUSTMENT#N#N/
9327 101077      045      101      101      .ASCIZ  /#AADJUST VOLTAGE SOURCE TO 0.0024 V#N/

```


TEST 24: ANALOGUE INPUT (CALIBRATION ROUTINE)

```

9328 101145 045 101 101 PME24G: .ASCIZ /#AADJUST OFFSET TRIMPOT UNTIL 0001 (0.0024 V) APPEARS#N/
9329 101235 045 116 045 PME24H: .ASCIZ /#N#AADJUST VOLTAGE SOURCE TO 9.9952 V#N/
9330 101307 045 101 101 PME24I: .ASCIZ /#AADJUST GAIN TRIMPOT UNTIL 7776 (9.9952 V) APPEARS#N/
9331
9332 101375 045 101 103 PME24J: .ASCII /#ACHANNEL NOT AVAILABLE, ENTER CORRECT CHANNEL OR #N/
9333 101461 045 101 106 .ASCIZ /#AFIND THE MISTAKE WITH OTHER TESTS.#N/
9334 101530 045 116 045 PME24K: .ASCIZ /#N#AMODULE IS SWITCHED TO BIPOLAR RANGE#N#N/
9335 101604 045 116 045 PME24L: .ASCIZ /#N#AMODULE IS SWITCHED TO UNIPOLAR RANGE#N#N/
9336 101661 045 116 045 PME24M: .ASCIZ /#N#ACTUAL VALUE :#06#A, EQUIVALENT TO :/
9337
9338 101731 045 101 040 OUT24: .ASCIZ /#A MILLIVOLT/
9339
9340 101746 103 123 101 E2401: .ASCIZ /CSA CONTENTS INCORRECT AFTER READING DATA REGISTER/
9341 102031 124 111 115 E2402: .ASCIZ \TIMEOUT DONE NOT SET AFTER A/D START\
9342 .LIST BEX
9343 .EVEN
9344 102100 .ENDST
102100
102100 104401

```

L10061: TRAP C#E1ST

TEST 25: VISUAL LED TEST - SPECIFICALLY SELECTABLE.

```

9346          .SBTTL TEST 25: VISUAL LED TEST - SPECIFICALLY SELECTABLE.
9347          ;.....
9348          ; TEST 25 VISUAL LED TEST - SPECIFICALLY SELECTABLE.
9349          ;
9350          ; THIS TEST IS A VISUAL TEST. IT FLASHES THE LED ON AND OFF ON
9351          ; EVERY MODULE IN THE SYSTEM THAT IS FOUND BY THE AUTOMATIC
9352          ; CONFIGURATION ROUTINE OR SELECTED IN THE HARDWARE QUESTIONS.
9353          ;
9354          ; MUX BOARDS ARE NOT INDEPENDENTLY ADDRESSABLE, SO THEIR LEDS ARE
9355          ; NOT FLASHED.
9356          ;
9357          ; THE TEST RUNS UNTIL "CNTRL C" IS TYPED.
9358          ;.....
9359
9360 102102          BGNTST
9361 102102 004737 011714          CALL SELECT          ; CALL THE SELECT ROUTINE
9362 102106 010377          .WORD 10377          ; SPECIFIC TEST, ALL DEVICES
9363 102110 102236          TSHD25          ; TEST HEADER ADDRESS
9364 102112 103002          BCC 108          ; BRANCH IF THE TEST IS SELECTED
9365 102114          EXIT TST          ; OTHERWISE, EXIT THE TEST
          102114 104432          TRAP C8EXIT
          102116 000202          .WORD L10062..
9366
9367 102120 005001          108: CLR R1          ; START BY SWITCHING LEDS ON
9368
9369 102122 062701 000100          208: ADD #100,R1          ; IF BIT 6 IS CLEAR, SET IT
9370 102126 042701 000200          BIC #200,R1          ; IF IT IS SET, CLEAR IT
9371
9372 102132 005037 002074          CLR L8LUN          ; START WITH UNIT 0
9373 102136 013703 002074          308: MOV L8LUN,R3          ; FORM OFFSET FOR PARAMETER ADDRESS
9374 102142 006303          ASL R3          ;
9375 102144 016302 003774          MOV GPADD(R3),R2          ; GET PARAMETER ADDRESS IN R2
9376 102150 001006          BNE 358          ; IF ADDRESS IS SET UP, BRANCH
9377 102152          GPHARD L8LUN,R2          ; ELSE, GET PARAM ADDRESS FROM DRS
          102152 013700 002074          MOV L8LUN,R0
          102156 104442          TRAP C8GPHRD
          102160 010002          MOV R0,R2
9378 102162 010263 003774          MOV R2,GPADD(R3)          ; AND SAVE IT IN THE TABLE
9379 102166 005712          358: TST (R2)          ; MODE ADDRESS = 0 ?
9380 102170 001002          BNE 408          ; IF NOT, BRANCH
9381 102172 004737 012214          JSR PC,CONFIG          ; ELSE DO AUTO CONFIGURATION FOR THIS UNIT
9382 102176 010172 000000          408: MOV R1,@(R2)          ; SWITCH THE LED OVER
9383 102202 005237 002074          INC L8LUN          ; GO TO NEXT UNIT
9384 102206 023737 002074 002012          CMP L8LUN,L8UNITS          ; ALL CHANGED ?
9385 102214 002750          BLT 308          ; IF NOT, SWITCH OVER THE NEXT
9386
9387 102216 012703 000024          MOV #20.,R3          ; WAIT FOR 0.5 SECONDS
9388 102222 004737 011506          508: JSR PC,WI25M          ; 25 MILLISECOND WAIT ROUTINE
9389 102226 005303          DEC R3          ; * 20 = 0.5 SECONDS
9390 102230 001374          BNE 508          ; GO ON IF 0.5 SEC. ARE OVER
9391 102232          BREAK          ; ALLOW OPERATOR INPUT
          102232 104422          TRAP C8BRK
9392 102234 000732          BR 208          ; DO IT ALL AGAIN
9393
9394          .NLIST BEX
9395 102236 045 123 062 TSHD25:;.ASCIZ /#52#AVISUAL LED TEST SPECIFICALLY SELECTABLE.#N

```

TEST 25: VISUAL LED TEST SPECIFICALLY SELECTABLE.

9396
9397
9398
9399

102320
102320
102320 104401

.LIST BEX
.EVEN
ENDTST

L10062: TRAP C0ETST

TEST 25: VISUAL LED TEST SPECIFICALLY SELECTABLE.

9407
9413
9419
9436 102322
9437

ENDMOD

TEST 25: VISUAL LED TEST - SPECIFICALLY SELECTABLE.

```

9441          .TITLE CLOSE SECTION
9452
9481
9482 102322          BGNMOD
9483
9484 102322          $PATCH:
9485 102322          .BLKW  500
9486
9493
9495 103522          .BLKB  400 <.6377>          ; SHIFT TO CORRECT FOR LSI BUG
9497 104000          LASTAD
                                     .EVEN
                                     .WORD T$FREE
                                     .WORD T$SIZE
          104000 104504
          104002 000240
          104004
9498 104004          L$LAST:
                                     ENDMOD

```

TEST 25: VISUAL LED TEST - SPECIFICALLY SELECTABLE.

9500
 9501
 9502
 9515
 9516 104004
 9517 000020
 9518
 9519
 9520
 9521

BGNSETUP 16.
 .REPT 16.
 BGNPTAB
 .WORD 0,0,0,0,0,0,0,0
 ENDP TAB
 .ENDR

104004 104034
 104006 000010
 104010
 104030
 104030 104060
 104032 000010
 104034
 104054
 104054 104104
 104056 000010
 104060
 104100
 104100 104130
 104102 000010
 104104
 104124
 104124 104154
 104126 000010
 104130
 104150
 104150 104200
 104152 000010
 104154
 104174
 104174 104224
 104176 000010
 104200
 104220
 104220 104250
 104222 000010
 104224
 104244
 104244 104274
 104246 000010
 104250
 104270
 104270 104320
 104272 000010
 104274
 104314
 104314 104344
 104316 000010
 104320
 104340
 104340 104370
 104342 000010
 104344

.WORD L10064
 .WORD L10065 ./2 1
 L10063:
 L10065:
 .WORD L10066
 .WORD L10067-./2-1
 L10064:
 L10067:
 .WORD L10070
 .WORD L10071-./2-1
 L10066:
 L10071:
 .WORD L10072
 .WORD L10073-./2-1
 L10070:
 L10073:
 .WORD L10074
 .WORD L10075-./2-1
 L10072:
 L10075:
 .WORD L10076
 .WORD L10077-./2-1
 L10074:
 L10077:
 .WORD L10100
 .WORD L10101-./2-1
 L10076:
 L10101:
 .WORD L10102
 .WORD L10103-./2-1
 L10100:
 L10103:
 .WORD L10104
 .WORD L10105-./2-1
 L10102:
 L10105:
 .WORD L10106
 .WORD L10107-./2-1
 L10104:
 L10107:
 .WORD L10110
 .WORD L10111-./2-1
 L10106:
 L10111:
 .WORD L10112
 .WORD L10113-./2-1
 L10110:

TEST 25: VISUAL LED TEST - SPECIFICALLY SELECTABLE.

```

104364
104364 104414
104366 000010
104370
104410
104410 104440
104412 000010
104414
104434
104434 104464
104436 000010
104440
104460
104460 000000
104462 000010
104464
104504
9522 104504
9523 000001

```

.END ENOSETUP

```

L10113:
        .WORD L10114
        .WORD L10115-./2-1
L10112:
L10115:
        .WORD L10116
        .WORD L10117-./2-1
L10114:
L10117:
        .WORD L10120
        .WORD L10121-./2-1
L10116:
L10121:
        .WORD 0
        .WORD L10123 ./2-1
L10120:
L10123:

```

SYMBOL TABLE

ACFLG	023650		BIT7	=	000200	G	C#DODU	=	000051		DMPR	065332	EXTR21	065462		
ADCON	014730	G	BIT8	=	000400	G	C#DRPT	=	000024		DMPTAB	066340	E#END	=	002100	
ADR	=	000020	G	BIT9	=	001000	G	C#DU	=	000053		DO	014457	E#LOAD	=	000035
AI	014470		BOE	=	000400	G	C#EDIT	=	000003		DROPD	026650	E1002		040762	
ANS	004142	G	CALRET	017066	G	C#ERDF	=	000055		DROPE	004034	G	E101		027150	
ANS1	062446		CARRFL	017172		C#ERHR	=	000056		ECNT	003734	G	E1102		041465	
ANS151	050656		CHAR	020454		C#ERRO	=	000060		EERA	007634	G	E1103		041603	
ANS152	050660		CHA23	072650		C#ERSF	=	000054		EERB	007664	G	E1202		042660	
ANS153	050662		CHKMAX	011342	G	C#ERSO	=	000057		EERG	007724	G	E1302		043536	
ANS161	054402		CLINT	017316	G	C#ESCA	=	000010		EER1	007342	G	E1303		043622	
ANS164	054404		CLKFLG	025074		C#ESEG	=	000005		EER2	007400	G	E1402		045703	
ANS2	063736		CNT25	011540	G	C#ESUB	=	000003		EER3	007442	G	E1403		045764	
ANS211	066330		CNT25M	011534	G	C#ETST	=	000001		EER4	007474	G	E1404		046034	
ANS212	066332		CNT500	011536	G	C#EXIT	=	000032		EER5	007540	G	E1405		046103	
ANS213	066334		CON	020010		C#GETB	=	000026		EER6	007602	G	E1406		046163	
ANS214	066336		COND	003714	G	C#GETW	=	000027		EF.CON	=	000036	G	E1408		046234
ANS221	071552		CONEX	013704		C#GMAN	=	000043		EF.NEW	=	000035	G	E1409		046315
ANS222	071554		CONFIG	012214	G	C#GPHR	=	000042		EF.PWR	=	000034	G	E1501		051726
ANS223	071556		CONMSK	004132	G	C#GPLO	=	000030		EF.RES	=	000037	G	E1502		051755
ANS224	071560		CONPRI	012600	G	C#GPRI	=	000040		EF.STA	=	000040	G	E1503		052030
ANS225	071562		CONT	022746		C#INIT	=	000011		EMG1	007762		E1507		052063	
ANS226	071564		CO1	012520		C#INLP	=	000020		EMG2	010031		E1508		052134	
ANS231	074752		CP1	013720		C#MANI	=	000050		EMG3	010101		E1601		056016	
ANS232	074754		CP1A	013771		C#MEM	=	000031		EMG4	010166		E1602		056134	
ANS233	074756		CP1B	014043		C#MSG	=	000023		EMG5	010230		E1603		056244	
ANS241	100072		CP1C	014146		C#OPEN	=	000034		EMG6	010314		E1604		056342	
ANS242	100074		CP10	014400		C#PNTB	=	000014		END	023644		E1608		056371	
ANS243	100076		CP10A	014415		C#PNTF	=	000017		ERRBLK	007204	G	E1701		060356	
AO	014501		CP11	014433		C#PNTS	=	000016		ERRMSG	007202	G	E1702		060447	
ASK	017320		CP12	014437		C#PNTX	=	000015		ERRNBR	007200	G	E1703		060537	
ASKADD	020234		CP2	014217		C#UID	=	000377		ERRTYP	007176	G	E1704		060614	
ASSEMB	=	000010	CP3	014230		C#HDBU	=	000007		EVL	=	000004	G	E1705		060714
BAD	004064	G	CP4	014237		C#REFG	=	000047		EXQV1	027100		E1707		060772	
BIPOL	050664		CP5	014251		C#RESE	=	000033		EXQV10	040672		E1901		062535	
BIT0	=	000001	G	CP6	014266		C#REVI	=	000003		EXQV11	041374		E1902		062641
BIT00	=	000001	C	CP7	014274		C#RFLA	=	000021		EXQV12	042566		E1903		062720
BIT01	=	000002	G	CP8	014356		C#RPT	=	000025		EXQV13	043444		E200		027605
BIT02	=	000004	G	CP9	014367		C#SEFG	=	000046		EXQV14	045606		E2001		064034
BIT03	=	000010	G	CRLF	011542	G	C#SPRI	=	000041		EXQV15	050652		E201		027703
BIT04	=	000020	G	CSA	003704	G	C#SVEC	=	000037		EXQV16	054376		E202		027770
BIT05	=	000040	G	CSB	003706	G	C#TPRI	=	000013		EXQV17	057450		E203		030035
BIT06	=	000100	G	CUROUT	054430		DACON	014512	G	EXQV18	061416		E2101		070074	
BIT07	=	000200	G	CYCLE	004154	G	DAT	003702	G	EXQV19	062442		E2102		070164	
BIT08	=	000400	G	CYCLS	004156	G	DBOUNC	003720	G	EXQV2	027556		E2103		070255	
BIT09	=	001000	G	CYCRAD	004160	G	UBTAB	004172	G	EXQV20	063732		E2104		070346	
BIT1	=	000002	G	C#AU	=	000052	DECEX	016074		EXQV21	066324		E2107		070433	
BIT10	=	002000	G	C#AUTO	=	000061	DECIN	015204	G	EXQV22	071546		E2108		070521	
BIT11	=	004000	G	C#BRK	=	000022	DECIN1	015615		EXQV23	074746		E2109		070603	
BIT12	=	010000	G	C#BSEG	=	000004	DECIN2	015653		EXQV3	030622		E2110		070650	
BIT13	=	020000	G	C#BSUB	=	000002	DECIN3	015734		EXQV4	031750		E2201		072430	
BIT14	=	040000	G	C#CEFG	=	000045	DECOUT	015764	G	EXQV5	033200		E2301		077021	
BIT15	=	100000	G	C#CLCK	=	000062	DEC01	016102		EXQV6	034520		E2401		101746	
BIT2	=	000004	G	C#CLEA	=	000012	DEC02	016106		EXQV7	035420		E2402		102031	
BIT3	=	000010	G	C#CLOS	=	000035	DEC03	016112		EXQV8	036562		E300		030652	
BIT4	=	000020	G	C#CLP1	=	000006	DFPTBL	002210	G	EXQV9	037612		E304		030747	
BIT5	=	000040	G	C#CVEC	=	000036	DI	014446		EXR	065552		E305		031037	
BIT6	=	000100	G	C#DCLN	=	000044	DIAGMC	=	000000	EXTRI	050414		E306		031150	

SYMBOL TABLE

E401	032040	G\$EXCP=	000400	ITRA17	056725	LOP7	026365	L\$UNIT	002012 G
E402	032122	G\$HILI=	000002	ITRA18	061232	LOT	000010 G	L10000	002230
E403	032211	G\$LOLI=	000001	ITRA19	062142	LOTFLA	004130 G	L10001	002244
E404	032310	G\$NO	000000	ITRA20	063272	LOWLVL	003716 G	L10002	002352
E501	033261	G\$OFFS=	000400	ITRA8	035742	L\$ACP	002110 G	L10003	003450
E502	033345	G\$OFFSI=	000376	ITRA9	037120	L\$APT	002036 G	L10004	007376
E503	033427	G\$PRMA=	000001	ITRCNT	004144 G	L\$AU	026702 G	L10005	007440
E504	033517	G\$PRMD=	000002	ITRC21	064516	L\$AUT	002070 G	L10006	007472
E505	033604	G\$PRML=	000000	ITRC22	070722	L\$AUTO	026514 J	L10007	007536
E601	034605	G\$RADA=	000140	ITRC23	072550	L\$CCP	002106 G	L10010	007600
E602	034670	G\$RADB=	000000	ITRC24	077126	L\$CLEA	026600 G	L10011	007632
E603	034751	G\$RADD=	000040	ITRDEF	004146 G	L\$CO	002032 G	L10012	007662
E604	035002	G\$RADL=	000120	IXE	004000 G	L\$DEPO	002011 G	L10013	007722
E605	035052	G\$RADO=	060020	IXEND	171770 G	L\$DESC	007222 G	L10014	007730
E606	035102	G\$XFER=	000004	IXSTA	171000 G	L\$DESP	002076 G	L10015	011026
E701	035502	G\$YES	000010	I\$AU	000041	L\$DEVP	002060 G	L10016	017274
E702	035606	G1	002352	I\$AUTO=	000041	L\$DISP	002124 G	L10017	017304
E802	036665	G10	003450	I\$CLN	000041	L\$DLY	002116 G	L10020	017314
E803	036764	G11	003500	I\$DU	000041	L\$DTP	002040 G	L10021	017316
E902	037714	G12	003533	I\$HRD	000041	L\$DTYP	002034 G	L10022	022340
E903	040017	G13	003604	I\$INIT=	000041	L\$DU	026610 G	L10024	024220
E904	040074	G14	002751	I\$MOD	000041	L\$DUT	002072 G	L10025	026576
FILTOL	050726	G15	003077	I\$MSG	000041	L\$DVTY	007206 G	L10026	026606
FIRPA	063740	G16	003656	I\$PROT=	000040	L\$EF	002052 G	L10027	026700
FLASH	016576 G	G2	002400	I\$PTAB=	000041	L\$ENVI	002044 G	L10030	026712
FLSANS	017000 G	G3	002456	I\$PWR	000041	L\$ERRT	007176 G	L10031	027216
FORMAT	063171	G4	002610	I\$RPT	000041	L\$ETP	002102 G	L10032	027114
F\$AU	= 000015	G5	003237	I\$SEG	000041	L\$EXP1	002046 G	L10033	030142
F\$AUTO=	000020	G6	003302	I\$SETU=	000041	L\$EXP4	002064 G	L10034	031324
F\$BGN	= 000040	MEL	017434	I\$SFT	000041	L\$EXP5	002066 G	L10035	032412
F\$CLEA=	000007	MELP	= 000000	I\$SRV	000041	L\$HARD	002246 G	L10036	033672
F\$DU	= 000016	MOE	= 100000 G	I\$SUB	000041	L\$HIME	002120 G	L10037	035152
F\$END	= 000041	IBE	= 010000 G	I\$TST	000041	L\$MPCP	002016 G	L10040	035716
F\$HARD=	000004	IDU	= 000040 G	IOTAB	005576 G	L\$MPTP	002022 G	L10041	037074
F\$HW	= 000013	IER	= 020000 G	IATAB	006376 G	L\$MW	002210 G	L10042	040214
F\$INIT=	000006	INIUT	023152	J\$JMP	= 000167	L\$ICP	002104 J	L10043	041074
F\$JMP	= 000050	INSERT	012146 G	KLINT	024450	L\$INIT	022350 G	L10044	041672
F\$MOD	= 000000	INTFLA	004150 G	LASTFA	012212	L\$LADP	002026 G	L10045	042774
F\$MSG	= 000011	INTFL2	004152 G	LCLOCK	024334	L\$LAST	104004 G	L10046	043700
F\$PROT=	000021	INTR	064732	LF	011564	L\$LOAD	002100 G	L10047	046402
F\$PWR	= 000017	INTSR	017276 G	LLPA10	040504	L\$LUN	002074 G	L10050	052506
F\$RPT	= 000012	INTSR2	017306 G	LLPA12	042270	L\$MREV	002050 G	L10051	056534
F\$SEG	= 000003	ISR	= 000100 G	LLPA14	044704	L\$NAME	002000 G	L10052	061066
F\$SOFT=	000005	ITRAC1	026760	LLPA8	036360	L\$PRIO	002042 G	L10053	062122
F\$SRV	= 000010	ITRAC2	027236	LLWC	004162 G	L\$PROT	022342 G	L10054	063252
F\$SUB	= 000002	ITRAC3	030214	LOCATE	027112 G	L\$PRT	002112 G	L10055	064476
F\$SW	= 000014	ITRAC4	031350	LOE	= 040000 G	L\$REPP	002062 G	L10056	070702
F\$TEST=	000001	ITRAC5	032436	LOPCHK	025146	L\$REV	002010 G	L10057	072530
GAIN	004136 G	ITRAC6	034000	LOPDES	026444	L\$RPT	017320 G	L10060	077106
GETNUM	015575	ITRAC7	035172	LOPEX	025630	L\$SOFT	003376 G	L10061	102100
GOOBAD	007732	ITRA10	040240	LOPFLG	004070 G	L\$SPC	002056 G	L10062	102320
GOOD	004062 G	ITRA11	041120	LOP1	025646	L\$SPCP	002020 G	L10063	104010
GPADD	003774 G	ITRA12	041716	LOP2	025723	L\$SPTP	002024 G	L10064	104034
GPFLG	020452	ITRA13	043020	LOP3	025771	L\$STA	002030 G	L10065	104030
G\$CNTD=	000200	ITRA14	043724	LOP4	026067	L\$SW	002232 G	L10066	104060
G\$DELM=	000372	ITRA15	046574	LOP5	026166	L\$TEST	002114 G	L10067	104054
G\$DISP=	000003	ITRA16	052566	LOP6	026265	L\$TML	002014 G	L10070	104104

SYMBOL TABLE

L10071	104100	MES241	100173	PME151	052212	PRI06	= 000300 G	SFI	004066 G
L10072	104130	MES242	100246	PME152	052265	PRI07	= 000340 G	SFPTBL	002232 G
L10073	104124	MES243	100306	PME153	052337	PRMST	076655	SLZERO	061422
L10074	104154	MME51	063020	PME154	052430	PROMT	017002	SNUM	015562
L10075	104150	MME52	063042	PME155	052467	PR1	020746	STADD	012514 G
L10076	104200	MME571	064104	PME16A	055213	PR2	020773	STARES	022644
L10077	104174	MME572	064214	PME161	054725	PR2A	021100	START	022350
L10100	104224	MME573	064234	PME162	055055	PR2B	021177	STAT	020260
L10101	104220	MME574	064254	PME163	055346	PR2C	021271	STFLG	020450
L10102	104250	MOD	003700 G	PME164	055603	PR2D	021332	SVCGBL	= 000000
L10103	104244	MODE	004134 G	PME165	055151	PR2E	021422	SVCINS	= 000001
L10104	104274	MUXC	050666	PME166	055666	PR2F	021525	SVCSUB	= 000001
L10105	104270	MUXPAR	050336	PME167	055757	PR2G	021621	SVCTAG	= 000001
L10106	104320	MUXTOL	050766	PME211	067571	PR3	021715	SVCTST	= 000001
L10107	104314	NERRS	011444	PME212	067665	PR3A	022022	SLSYM	= 010000
L10110	104344	NEWT	022656	PME213	067747	PR4	022061	TABOFF	054524
L10111	104340	NEXT	023160	PME214	070022	PR5	022112	TAB23	074760
L10112	104370	NH	= 000032	PME221	072162	PR6	022133	TADS	020464
L10113	104364	NO	022334	PME222	072260	PR7	022234	TIMIN	063744
L10114	104414	NOCLK	024606	PME223	072332	PSAD	015006	TIMMSG	025076
L10115	104410	NODEV	007250 G	PME23A	075402	PSDA	014564	TITLE	017642
L10116	104440	NOUNIT	012516	PME23B	075530	PSEUL1	023550	TKB	= 177562
L10117	104434	NR1	015556	PME23D	075626	PSUE8	036210	TKS	= 177560
L10120	104464	NR2	015560	PME23E	075715	PS151	046750	TM15	051100
L10121	104460	NTEST	024056	PME23I	075753	PWRFL	023030	TM16	054623
L10123	104504	NTESTS	= 000031	PME23J	076040	QVP	002242 G	TM17	057544
MAFTOL	050746	NTEST1	024152	PME23K	076121	QVR10	040644	TM18	061515
MANIO	002234 G	NXM	017266 G	PME23L	076205	QVR12	042540	TNA	012074
MANTST	002232 G	NXMFLG	004060 G	PME23M	076275	QVR14	045560	TNUM	020650
MAN23	074544	NXTUUT	023106	PME23N	076352	QVR8	036534	TOLOF	050674
MASCOM	010756	ONEFIL	= 000001	PME23P	076421	RA	016572 G	TOLRA	050672
MASK	010754 G	OTHCSA	003726 G	PME23Q	076507	RANDOM	016534 G	TOL1	076707
MES151	051340	OTHCSB	003730 G	PME23R	076576	RB	016574 G	TPB	= 177566
MES152	051415	OTHDAT	003724 G	PME24A	100364	RDY	020612	TPS	= 177564
MES153	051474	OTHMOD	003722 G	PME24B	100474	READ	016326 G	TSHD1	027116 G
MES154	051571	OTHVEC	003732 G	PME24C	100604	RECON	017536	TSHD10	040676 G
MES155	051666	OUTDE1	004166 G	PME24D	100675	REDTIM	004164 G	TSHD11	041400 G
MES162	055305	OUTDE2	004170 G	PME24E	100750	REERM	016450	TSHD12	042572 G
MES163	055441	OUT1	056501	PME24F	101036	REGADD	010760 G	TSHD13	043450 G
MES164	055521	OUT15	051455	PME24G	101145	REGERR	010762 G	TSHD14	045612 G
MES165	055017 G	OUT2	056516	PME24H	101235	REGMSG	011247	TSHD15	051006 G
MES171	060035	OUT231	077002	PME24I	101307	REGTST	010402 G	TSHD16	054530 G
MES172	060136	OUT232	076762	PME24J	101375	REGTS1	010440 G	TSHD17	057454 G
MES173	060247	OUT24	101731	PME24K	101530	RERR1	011030	TSHD18	061424 G
MES211	067434	O\$APTS	= 000001	PME24L	101604	RERR2	011102	TSHD19	062450 G
MES212	067452	O\$AU	= 000001	PME24M	101661	RERR3	011160	TSHD2	027562 G
MES213	067467	O\$BGNR	= 000001	PNT	= 001000 G	RESTR	022634	TSHD20	063746 G
MES214	067550	O\$BGNS	= 000001	PRA	020654	RETIME1	017174	TSHD21	067340 G
MES221	071662	O\$DU	= 000001	PREX	020444	RFLG	020462	TSHD22	071566 G
MES222	071700	O\$ERRT	= 000001	PRI	= 002000 G	RSVAV	030102	TSHD23	075120 G
MES223	071715	O\$GNSW	= 000001	PRI0	003712 G	RWMK	031264	TSHD24	100100 G
MES224	071767	O\$POIN	= 000001	PRI00	= 000000 G	SAVCNT	025012	TSHD25	102236 G
MES225	072040	O\$SETU	= 000001	PRI01	= 000040 G	SAVB	036566	TSHD3	030626 G
MES226	072121	PADD	004140 G	PRI02	= 000100 G	SECPA	063742	TSHD4	031760 G
MES231	075214	PAT1	002236 G	PRI03	= 000140 G	SELECT	011714 G	TSHD5	033204 G
MES232	075243	PAT2	002240 G	PRI04	= 000200 G	SETCLK	024222	TSHD6	034524 G
MES233	075320	PLMI	056457	PRI05	= 000240 G	SETEX	025072	TSHD7	035424 G

SYMBOL TABLE

TSHD8	036570	G	T\$PTAB=	010122	T\$\$PRO=	010023	T24	077110	G	WMES1	064342		
TSHD9	037616	G	T\$PTHV=	000020	T\$\$PTA=	010122	T25	102102	G	WMES2	064421		
TSTEN1	027106		T\$PTNU=	000020	T\$\$RPT=	010022	T3	030144	G	WME151	051202		
TSTFLG	004054	G	T\$SAVL=	177777	T\$\$SEG=	010004	T4	031326	G	WME152	051304		
TSUFLG	004056	G	T\$SEGL=	177777	T\$\$SOF=	010003	T5	032414	G	WME171	057646		
TT	020546		T\$SEKO=	010004	T\$\$SRV=	010032	T6	033674	G	WME172	057747		
TTINT	024740		T\$SIZE=	000240	T\$\$SW =	010001	T7	035154	G	WME181	061617		
T\$ARGC=	000001		T\$SUBN=	000000	T\$\$TES=	010062	T8	035720	G	WME182	061744		
T\$CODE=	000032		T\$TAGL=	177777	T1	026714	G	T9	037076	G	WME183	062030	
T\$ERRN=	004542		T\$TAGN=	010124	T10	040216	G	UAM	000200	G	WME184	061712	
T\$EXCP=	000000		T\$TEMP=	000000	T11	041076	G	USCLOK	024542		WRDY	011570	G
T\$FLAG=	000040		T\$TEST=	000031	T12	041674	G	VALCNT	054526		WRDY1	011620	
T\$FREE=	104504		T\$TSTM=	177777	T13	042776	G	VBPTAB	004776	G	WRERM	016242	
T\$GMAN=	000000		T\$TSTS=	000001	T14	043702	G	VEC	003710	G	WRITE	016122	G
T\$HILI=	000007		T\$\$AU =	010030	T15	046404	G	VOLOUT	054406		WT25	011522	G
T\$LAST=	000001		T\$\$AUT=	010025	T16	052510	G	VOLPA	053744		WT25M	011506	G
T\$LOLI=	000000		T\$\$CLE=	010026	T17	056536	G	VOLTE	050670		WT500	011514	G
T\$LSYM=	010000		T\$\$DAT=	010123	T18	061070	G	VOLVA	050676		X\$ALWA=	000000	
T\$LTNO=	0 0031		T\$\$DU =	010027	T19	062124	G	VUPTAB	004176	G	X\$FALS=	000040	
T\$NEST=	177777		T\$\$HAR=	010002	T2	027220	G	WAIT	011526		X\$OFFS=	000400	
T\$NSO =	000000		T\$\$HW =	010000	T20	063254	G	WARN	023652		X\$TRUE=	000020	
T\$NS1 =	000001		T\$\$INI=	010024	T21	064500	G	WARN1	023756		YES	022330	
T\$NS2 =	000003		T\$\$MSG=	010015	T22	070704	G	WFLG	011616		\$PATCH	102322	G
T\$PCNT=	000000		T\$\$PC =	000020	T23	072532	G						

. ABS. 104504 000
000000 001
ERRORS DETECTED: 0

VIRTUAL MEMORY USED: 31296 WORDS (123 PAGES)
DYNAMIC MEMORY: 17890 WORDS (68 PAGES)
ELAPSED TIME: 00:11:46
ZIXVAO.BIN,ZIXVAO.SEQ/CR/-SP=[50,200]SVC/ML,[7,116]ZIXVAO.SRC