

**DNI NEVADA**

---

Operating and Service Manual

Impulse 4000

*Defibrillator and  
Transcutaneous Pacer Analyzer*

DNI NEVADA

# **Impulse 4000 Defibrillator and Transcutaneous Pacer Analyzer**

## **Operating and Service Manual**

---

©Copyright Fluke Corporation  
Fluke Biomedical  
6920 Seaway Blvd.  
Everett, WA 98203  
Sales & Customer Service:

775-883-3400 • 800-648-7952

<http://www.flukebiomedical.com> • [sales@flukebiomedical.com](mailto:sales@flukebiomedical.com)

Service and Repair

*Please call for RMA number before shipping*

1420 75<sup>th</sup> Street SW

Everett, WA 98203

888-99FLUKE (888-993-5853) • 425-446-5560



To order this manual, use Part Number 9508-0242.

Revision History		
Revision	Description	Date
A	Firmware Version 1.00	7/94
B	Firmware Version 1.02	9/96
C	Firmware Version 1.04	1/98

Copyright

DNI Nevada agrees to a limited copyright release that allows you to reproduce manuals and other printed materials for use in service training programs and other technical publications. If you would like other reproductions or distributions, submit a written request to DNI Nevada, Inc.

Standard Terms and Conditions

Refunds & Credits

Please note that only serialized products (products labeled with a distinct serial number) and accessories are eligible for partial refund and/or credit. Nonserialized parts and accessory items (cables, carrying cases, auxiliary modules, etc.) are not eligible for return or refund. In order to receive a partial refund/credit of a product purchase price on a serialized product, the product must not have been damaged by the customer or by the common carrier chosen by the customer to return the goods, and the product must be returned complete (meaning all manuals, cables, accessories, etc.) within 90 days of original purchase and in "as new" and resellable condition. The Return Procedure must be followed to assure prompt refund/credit.

Restocking Charges

Only products returned within 90 days from the date of original purchase are eligible for refund/credit. Products returned within 30 days of original purchase are subject to a minimum restocking fee of 15%. Products returned in excess of 30 days after purchase, but prior to 90 days, are subject to a minimum restocking fee of 20%. Additional charges for damage and/or missing parts and accessories will be applied to all returns. Products not returned within 90 days of purchase, or products which are not in "as new" and resellable condition, are not eligible for credit return and will be returned to the customer.

Return Procedure

Every product returned for refund/credit must be accompanied by a Return Material Authorization (RMA) number, to be obtained from our Order Processing Department. All items being returned must be sent freight prepaid to our factory location.

Certification

This instrument was thoroughly tested and inspected and found to meet DNI Nevada's manufacturing specifications when it was shipped from the factory. Calibration measurements are traceable to the National Institute of Standards and Technology (NIST). Devices for which there are no NIST calibration standards are measured against in-house performance standards using accepted test procedures.

Warranty

Warranty and Product Support

This instrument is warranted by DNI Nevada against defects in materials and workmanship for one full year from the date of original purchase. During the warranty period, we will repair or, at our option, replace at no charge a product that proves to be defective, provided you return the product, shipping prepaid, to DNI Nevada, Inc. This warranty does not apply if the product has been damaged by accident or misuse or as the result of service or modification by other than DNI Nevada. IN NO EVENT SHALL DNI NEVADA BE LIABLE FOR CONSEQUENTIAL DAMAGES.

Only serialized products and their accessory items (those items bearing a distinct serial number tag) are covered under this one-year warranty. PHYSICAL DAMAGE CAUSED BY MISUSE OR PHYSICAL ABUSE IS NOT COVERED UNDER THE WARRANTY. Items such as cables and nonserialized modules are not covered under this warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state, province to province, or country to country. This warranty is limited to repairing the instrument to DNI Nevada's specifications.

When you return an instrument to DNI Nevada, Inc., for service, repair, or calibration, we recommend using United Parcel Service, Federal Express, or Air Parcel Post. We also recommend that you insure your shipment for its actual replacement cost. DNI Nevada will not be responsible for lost shipments or instruments that are received in damaged condition due to improper packaging or handling. All warranty claim shipments must be made on a freight prepaid basis. Also, in order to expedite your claim, please include a properly completed copy of the Service Return Form. Recalibration of instruments, which have a recommended semiannual calibration frequency, is not covered under the warranty.

Warranty Disclaimer

Should you elect to have your instrument serviced and/or calibrated by someone other than DNI Nevada, please be advised that the original warranty covering your product becomes void when the tamper-resistant Quality Seal is removed or broken without proper factory authorization. We strongly recommend, therefore, that you send your instrument to DNI Nevada for factory service and calibration, especially during the original warranty period.

In all cases, breaking the tamper-resistant Quality Seal should be avoided at all cost, as this seal is the key to your original instrument warranty. In the event that the seal must be broken to gain internal access to the instrument (e.g., in the case of a customer-installed firmware upgrade), you must first contact DNI Nevada's technical support department at 702-883-3400. You will be required to provide us with the serial number for your instrument as well as a valid reason for breaking the Quality Seal. You should break this seal only after you have received factory authorization. Do not break the Quality Seal before you have contacted us! Following these steps will help ensure that you will retain the original warranty on your instrument without interruption.

WARNING

Unauthorized user modifications or application beyond the published specifications may result in electrical shock hazards or improper operation. DNI Nevada will not be responsible for any injuries sustained due to unauthorized equipment modifications.

## Trademarks

Trademarked names appear throughout this book. Rather than list the names and entities that own the trademark symbol or insert a trademark symbol with each mention of the trademarked name, the publisher states that it is using the names only for editorial purposes and to the benefit of the trademark owner with no intention of improperly using that trademark.

Companies are listed in alphabetical order.

The following are trademarks of Armstrong Medical Industries, Inc., Lincolnshire, Illinois:

Chris Clean®

The following are trademarks of Hewlett Packard, McMinnville, Oregon:

HP Code Master ®

The following are trademarks of Laerdal Corporation, Armonk, New York:

Defib-Anne®, Heart Start®

The following are trademarks of Physio-Control, Redmond, Washington:

FAST-PATCH®, LIFEPAK®

## Table of Contents

### 1 General Information

<b>Safety Considerations</b> .....	1-1
<b>General</b> .....	1-1
<b>Safety Symbols</b> .....	1-1
<b>Battery Charger</b> .....	1-1
<b>Defibrillators</b> .....	1-1
<b>Automatic Defibrillators</b> .....	1-1
<b>Connecting the Defibrillator to the Impulse 4000</b> .....	1-2
<b>Discharging the Defibrillator</b> .....	1-2
<b>Discharging the Automatic Defibrillator</b> .....	1-3
<b>Internal Paddles</b> .....	1-4
<b>Safety Information</b> .....	1-4
<b>Introduction and Features</b> .....	1-5
<b>Impulse 4000 Instrument Specifications</b> .....	1-6
<b>Defibrillator Measurement</b> .....	1-6
<b>Transcutaneous Pacemaker Measurement</b> .....	1-8
<b>Autosequence Test</b> .....	1-11
<b>Defibrillator Tests</b> .....	1-11
<b>Pacemaker Tests</b> .....	1-11
<b>ECG Waveforms</b> .....	1-12
<b>Manikin Interface</b> .....	1-15
<b>Training Scenarios</b> .....	1-15
<b>Calendar/Clock</b> .....	1-15
<b>Data Interfaces</b> .....	1-15
<b>General Specifications for the Impulse 4000</b> .....	1-16
<b>Standard Accessories</b> .....	1-17
<b>Optional Accessories</b> .....	1-17
<b>Defibrillation-Only (50-Ω) Electrode Adapters</b> .....	1-17
<b>External Transcutaneous Pacer-Only (50-Ω)</b> <b>Electrode Adapters</b> .....	1-17
<b>Combination Defibrillator/External Transcutaneous Pacer</b> <b>(50-Ω) Electrode Adapters</b> .....	1-17
<b>Adapter (Pacemaker Plug-In) Modules</b> .....	1-18
<b>Other Optional Accessories</b> .....	1-18
<b>Instrument Familiarity</b> .....	1-19

## 2 Installation

Unpacking and Inspection.....	2-1
Claims.....	2-1
Warranty Repair .....	2-1
Connecting the Printer .....	2-1
RS-232 Serial Port Setup.....	2-2
Manikin Connection .....	2-2
High-Level ECG Output Port.....	2-2

## 3 Operating Instructions

Power-Up and Initialization.....	3-1
Main Menu Structure .....	3-1
Testing a Defibrillator.....	3-2
Defibrillator Testing Theory.....	3-2
Available Energy Ranges .....	3-2
Measuring Defibrillator Energy Output.....	3-2
Self-Test Feature .....	3-3
Printing Measurement Data .....	3-4
Testing Semi- and Fully Automatic Defibrillators .....	3-4
Viewing Waveform Output .....	3-5
Real-Time Waveform Output .....	3-5
Time-Expanded Waveform Playback.....	3-5
Testing Defibrillator Cardioversion .....	3-6
Cardioversion Testing Theory, Measurement Technique and Parameters .....	3-6
Cardioversion Delay Time .....	3-6
Selecting the Stimulus Waveform .....	3-6
Conducting the Cardioversion Test.....	3-7
Self-Test Feature .....	3-8
Printing Measurement Data .....	3-8
Viewing Waveform Output .....	3-8
Testing Defibrillator Maximum Energy .....	3-9
Conducting the Maximum Energy Test .....	3-9
Self-Test Feature .....	3-9
Printing Measurement Data .....	3-9

**Testing an External Transcutaneous Pacemaker ..... 3-10**

**Adapter (Pacemaker Plug-In) Modules – Optional ..... 3-12**

**Connecting the Pacemaker to the Impulse 4000 ..... 3-12**

**Conducting the Manual Pacemaker Test ..... 3-13**

**Measuring Pulse Parameters ..... 3-13**

**Self-Test Feature ..... 3-14**

**Viewing Real-Time Waveform Output ..... 3-14**

**Measuring the Refractory Periods ..... 3-15**

**Conducting a Demand Mode Test ..... 3-17**

**Generating ECG Waveforms ..... 3-19**

**Selecting the ECG Waveform ..... 3-19**

**Transvenous Paced Feature ..... 3-20**

***ECG Waveform Parameters Table* ..... 3-21**

**Generating ECG Performance Waveforms ..... 3-24**

**Manual Performance Mode ..... 3-24**

**Automated Performance Sequence Mode ..... 3-24**

**Reference Lead ..... 3-24**

***ECG Performance Waveform Parameters Table* ..... 3-25**

**R-Wave Detector Testing ..... 3-26**

**Autosequence Test ..... 3-27**

**Running Autosequences ..... 3-27**

**Sample Printouts for the Hewlett Packard Model**

**Codemaster XL+ Defibrillator ..... 3-29**

**Sample Printouts for the Hewlett Packard Model**

**Codemaster XL+ Pacemaker ..... 3-30**

***Factory-Initialized Autosequence Table – Defibrillator* ..... 3-32**

***Factory-Initialized Autosequence Table – Defibrillator Data for Defibrillator/Pacer* ..... 3-34**

***Factory-Initialized Autosequence Table – Pacer Data for Defibrillator/Pacer* ..... 3-35**

**Programming Custom Autosequences ..... 3-42**

**Making Defibrillator Autosequences ..... 3-43**

**Making Defibrillator/Pacer Autosequences ..... 3-43**

**Making Pacer Autosequences ..... 3-44**

**Viewing Autosequences ..... 3-45**

**Printing Autosequences ..... 3-45**

**Initializing Autosequences ..... 3-45**

***Autosequence Test Options Table* ..... 3-46**

<b>Training .....</b>	<b>3-47</b>
<b>Using Training Scenarios.....</b>	<b>3-47</b>
<b>Interactive Defibrillator Training.....</b>	<b>3-49</b>
<b>Emergency Ventricular Defibrillation .....</b>	<b>3-49</b>
<b>Elective Cardioversion .....</b>	<b>3-49</b>
<b>Interactive Transcutaneous Pacemaker Training .....</b>	<b>3-50</b>
<b>medTester Interface .....</b>	<b>3-52</b>
<b>Using the Impulse 4000 with the medTester.....</b>	<b>3-52</b>
<b>Utilities .....</b>	<b>3-53</b>
<b>View Angle.....</b>	<b>3-53</b>
<b>Clock.....</b>	<b>3-53</b>
<b>Battery .....</b>	<b>3-54</b>
<b>Baud Rate .....</b>	<b>3-55</b>
<b>Calibration .....</b>	<b>3-55</b>
<b>Diagnostics.....</b>	<b>3-55</b>
<b>Serial Port Operation .....</b>	<b>3-56</b>
<b>Baud Rate .....</b>	<b>3-56</b>
<b>XON/XOFF.....</b>	<b>3-57</b>
<b>Serial Printing of Test Data .....</b>	<b>3-57</b>
<b>Remote Commands .....</b>	<b>3-57</b>
<b>Introduction .....</b>	<b>3-57</b>
<b>Command Syntax .....</b>	<b>3-58</b>
<b>Responses to Commands.....</b>	<b>3-58</b>
<b>Error Responses .....</b>	<b>3-59</b>
<b>Special Commands.....</b>	<b>3-59</b>
<b>Instrument Identification Commands.....</b>	<b>3-59</b>
<b>Global Variable Setup Commands .....</b>	<b>3-60</b>
<b>General Purpose Command .....</b>	<b>3-61</b>
<b>Defibrillator Measurement Commands.....</b>	<b>3-61</b>
<b>Pacemaker Measurement Commands.....</b>	<b>3-63</b>
<b>Waveform Commands.....</b>	<b>3-64</b>
<b>Utilities and Diagnostics.....</b>	<b>3-66</b>
<b>4 TEST AND CALIBRATION</b>	
<b>Introduction.....</b>	<b>4-1</b>
<b>Functional Test .....</b>	<b>4-1</b>
<b>Calibration .....</b>	<b>4-2</b>



## 5 Theory of Operation

<b>Introduction</b> .....	5-1
<b>Impulse 4000 Overview Circuit Block Diagram</b> .....	5-2
<b>Circuit Block Descriptions</b> .....	5-3
<b>Main Control Processor</b> .....	5-3
<b>Memory</b> .....	5-4
<b>Display</b> .....	5-4
<b>Keyboard</b> .....	5-4
<b>Real-Time Clock</b> .....	5-4
<b>Auxiliary Processor</b> .....	5-4
<b>Input Control</b> .....	5-5
<b>Output Control</b> .....	5-5
<b>Data Interfaces</b> .....	5-6
<b>Battery Charger</b> .....	5-6

## 6 Technical Information

<b>Part Number References for the Impulse 4000</b> .....	6-1
<b>Impulse 4000 Final Assembly Component List</b> .....	6-3
<b>Impulse 4000 Main Printed Circuit Board Component Locator</b> .....	6-8
<b>Impulse 4000 Main Printed Circuit Board Schematic</b> .....	6-9
<b>Impulse 4000 Main Printed Circuit Board Component List</b> .....	6-29
<b>Impulse 4000 Load Printed Circuit Board Component Locator</b> .....	6-50
<b>Impulse 4000 Load Printed Circuit Board Schematic</b> .....	6-51
<b>Impulse 4000 Load Printed Circuit Board Component List</b> .....	6-53
<b>Impulse 4000 Display Printed Circuit Board Component Locator</b> ..	6-58
<b>Impulse 4000 Display Printed Circuit Board Schematic</b> .....	6-59
<b>Impulse 4000 Display Printed Circuit Board Component List</b> .....	6-63

## 7 Modules

## List of Illustrations

### 1 General Information

Instrument Familiarity .....	1-19
------------------------------	------

### 3 Operating Instructions

Main Menu Structure .....	3-1
Example of a Printed Report with a Header ( <i>Testing a Defibrillator</i> ).....	3-4
Waveform Output from an Oscilloscope ( <i>Testing a Defibrillator</i> ).....	3-5
Waveform Output from an Oscilloscope (Testing an External Transcutaneous Pacemaker) .....	3-14
<i>ECG Waveform Parameters Table</i> .....	3-21
<i>ECG Performance Waveform Parameters Table</i> .....	3-25
<i>R-Wave Detector Tests</i> .....	3-26
Sample Printouts for the Hewlett Packard Model Codemaster XL+ Defibrillator .....	3-29
Sample Printouts for the Hewlett Packard Model Codemaster XL+ Pacemaker .....	3-30
<i>Factory-Initialized Autosequence Table - Defibrillator</i> .....	3-32
<i>Factory-Initialized Autosequence Table - Defibrillator Data for Defibrillator/Pacer</i> .....	3-34
<i>Factory-Initialized Autosequence Table - Pacer Data for Defibrillator/Pacer</i> .....	3-35
<i>Autosequence Test Options Table</i> .....	3-46
Sample printout ( <i>Using Training Scenarios</i> ).....	3-48
<i>Battery Status Table</i> .....	3-54

### 5 Theory Of Operation

Impulse 4000 Overview Circuit Block Diagram .....	5-2
---	-----

## **6 Technical Information**

**Impulse 4000 Main Printed Circuit Board Component Locator..... 6-8**

**Impulse 4000 Main Printed Circuit Board Schematic — 10 sheets .. 6-9**

**Impulse 4000 Load Printed Circuit Board Component Locator ..... 6-50**

**Impulse 4000 Load Printed Circuit Board Schematic — 1 sheet ..... 6-51**

**Impulse 4000 Display Printed Circuit Board Component Locator .. 6-58**

**Impulse 4000 Display Printed Circuit Board Schematic — 2 sheets 6-59**

## Abbreviations

NOTE: This column alphabetized

<b>A</b>	ampere
<b>BPM</b>	beats per minute
<b>°C</b>	degrees Celsius (centigrade)
<b>°F</b>	degrees Fahrenheit
<b>DMM</b>	digital multimeter
<b>ECG</b>	electrocardiograph or electrocardiogram
<b>Hz</b>	hertz
<b>in</b>	inch
<b>J</b>	joule
<b>k</b>	kilo- ( $10^3$ )
<b>kHz</b>	kilohertz
<b>k<math>\Omega</math></b>	kilohm
<b>m</b>	-meter
<b><math>\mu</math></b>	micro- ( $10^{-6}$ )
<b><math>\mu</math>A</b>	microampere
<b><math>\mu</math>s</b>	microsecond
<b>m</b>	milli- ( $10^{-3}$ )
<b>mA</b>	milliampere
<b>mm</b>	millimeter
<b>ms</b>	millisecond
<b>mV</b>	millivolt
<b><math>\Omega</math></b>	ohm
<b>pacemaker</b>	pacemaker
<b>p-p</b>	peak-to-peak
<b>lb</b>	pound
<b>PPM</b>	pulses per minute
<b>PQRST</b>	Refers to portion of the ECG waveform
<b>s</b>	second
<b>V</b>	volt

# ***Chapter 1***

## *General Information*

## SAFETY CONSIDERATIONS

### General

This instrument and its related documentation must be reviewed for familiarization with safety markings and instructions before operation.

### Safety Symbols



This is the instruction manual symbol; the instrument is marked with this symbol when it is necessary for you to refer to the instruction manual.

**WARNING!** The "**WARNING!**" sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a "**WARNING!**" sign until the indicated conditions are fully understood and met.

**CAUTION:** The "**CAUTION:**" sign denotes a hazard. It calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the instrument. Do not proceed beyond a "**CAUTION:**" sign until the indicated conditions are fully understood and met.

### Battery Charger

Use only the specified battery charger supplied by DNI Nevada with this instrument. Make sure the battery charger is rated for your power source. The power source should be compatible with the input voltage and current ratings printed on the battery charger.

### Defibrillators

Defibrillators deliver high-voltage shocks to a patient in order to stop a life-threatening heart condition. The defibrillator pulse is potentially dangerous. Do not touch the Impulse 4000 paddle contacts or the defibrillator paddles when discharging (firing) a defibrillator. Always follow the device manufacturer's safety protocols of the defibrillator, such as holding both paddles correctly and pushing the buttons on both paddles simultaneously. Under no circumstances should you touch the conductive metal contacts on the defibrillator paddles. Never try to defeat the safety features of a defibrillator.

### Automatic Defibrillators

Automatic defibrillators discharge automatically when they detect a life-threatening heart condition that requires defibrillation. The Impulse 4000 simulates a wide range of cardiac arrhythmias to test the defibrillator. If the Impulse 4000 has been set to output a ventricular fibrillation or a rapid ventricular tachycardia waveform, the automatic defibrillator will discharge after it detects the waveform and determines that defibrillation is necessary. The fully automatic defibrillator warns you that it is about to discharge.

Always heed the audible warnings of the automatic defibrillator. Make sure it is connected to the Impulse 4000 with the correct electrode adapters. Do not touch the Impulse 4000 paddle contacts or the defibrillator connections.

*continued on the next page*

## SAFETY CONSIDERATIONS - *continued*

### Automatic Defibrillators - *continued*

During automatic sequences of defibrillator tests, the Impulse 4000 outputs the ventricular fibrillation waveform automatically. Therefore, be aware of this fact and heed the defibrillator's audible warnings, so that you are ready for the pending defibrillator discharge.

### Connecting the Defibrillator to the Impulse 4000

1. Select the proper Impulse 4000 electrode adapters (see the *Optional Accessories* section in Chapter 1) for the defibrillator to be tested. An electrode adapter consists of a connector to the defibrillator cable, a banana plug, and a plastic insulating cover. Ensure that the banana plug is in the center of the plastic cover.
2. Place the banana plug portion of the electrode adapter into the center of each of the Impulse 4000 defibrillator paddle contacts.
3. Fit the plastic cover so it completely covers the metal of each of the Impulse 4000 defibrillator paddle contacts.
4. Now plug each of the wires of the defibrillator cable onto the connector of each Impulse 4000 electrode adapter. There should not be any exposed metal conductors in the connection from the defibrillator to the Impulse 4000.
5. An alternate method of connection is to place the defibrillator paddles firmly on the Impulse 4000 paddle contacts.

**CAUTION:** Never use electrode paste on the defibrillator paddles when testing with the Impulse 4000 because it is not necessary and it will degrade the electrical connection.

### Discharging the Defibrillator

The Impulse 4000 has several functions that measure defibrillator parameters when the defibrillator is discharged into its internal test load. To perform any of these tests, first turn on the Impulse 4000 power switch, and then select the appropriate function using the menus and function keys.

Always follow the manufacturer's instructions for the defibrillator that you are testing. Operate the defibrillator with the Impulse 4000 as follows:

**WARNING!** Defibrillators generate dangerous voltages between their paddles when discharged. Be very careful never to touch either paddle when the energy is discharged. Most defibrillators have a safety interlock which requires buttons on both paddles to be pushed simultaneously with separate hands to discharge the energy. Never try to defeat this safety interlock system.

**CAUTION:** Never use electrode paste on the defibrillator paddles or conductive disposable electrodes when testing with the Impulse 4000 because it is not necessary and it will degrade the electrical connection.

*continued on the next page*

## SAFETY CONSIDERATIONS - *continued*

### Discharging the Defibrillator - *continued*

NOTE: Certain defibrillators have an alternate connection path to the Impulse 4000 that requires the use of the electrode adapters. If this is the case, complete steps 1 through 4 in the preceding section, *CONNECTING THE DEFIBRILLATOR TO THE IMPULSE 4000*.

1. Turn the power on to the defibrillator, then set the defibrillator to the desired energy level.  
If testing cardioversion, turn on the synchronized mode of the defibrillator and connect the ECG monitor leads of the defibrillator to the Impulse 4000 ECG posts. Turn on the ECG monitor of the defibrillator and check that the ECG waveform is displayed and that the defibrillator is recognizing the simulated heartbeat waveform and synchronizing on it. A marker or visual indicator should be displayed on the defibrillator ECG monitor.
2. Charge the defibrillator to the preset energy level by pushing the charge button on the defibrillator. The defibrillator will indicate when it is charged.
3. Place the defibrillator paddles firmly on the Impulse 4000 paddle contacts. The apex (+) paddle should be on the right paddle contact and the sternum (-) paddle should be on the left.\* Discharge the defibrillator by pushing both discharge buttons on the paddle handles simultaneously with separate hands.  
\*NOTE: On most defibrillators this ensures a positive polarity of the signal at the real-time scope output. Reversing the paddles does not harm anything, even with grounded defibrillators, and still gives a correct energy reading. Reversing the paddles does reverse the real-time scope output polarity.
4. After you have discharged the defibrillator, remove the paddles. The Impulse 4000 displays the results.

### Discharging the Automatic Defibrillator

From the ECG signal, the fully automatic defibrillator can detect that defibrillation is needed; then it will charge and discharge automatically. Automatic defibrillators do not use conventional apex and sternum paddles. Instead, they have a cable that connects to adhesive defibrillation electrode pads to facilitate safe and convenient use.

DNI Nevada has special electrode adapters available as optional accessories (see the *Optional Accessories* section in Chapter 1). These electrode adapters connect to the defibrillator's cable.

**WARNING!** Automatic defibrillators generate dangerous voltages at their outputs. Never touch the defibrillator cable contacts, or the connected electrode adapter metal parts whenever the defibrillator is turned on. Follow the defibrillator's warnings to "stand back" when it discharges.

1. Complete steps 1 through 4 in the earlier section *CONNECTING THE DEFIBRILLATOR TO THE IMPULSE 4000*.
2. If the automatic defibrillator incorporates an ECG monitor with 3- or 5-lead inputs, connect the ECG leads to the Impulse 4000 ECG posts.

*continued on the next page*



## SAFETY CONSIDERATIONS - *continued*

### Discharging the Automatic Defibrillator - *continued*

3. Select the appropriate function using the menus and function keys.
  - Use the "VFIB" function (see *Testing Semi- and Fully Automatic Defibrillators* in Chapter 3) for manual tests.
  - Use the "AUTO" function (see *AUTOSEQUENCE TEST* in Chapter 3) to *automatically* generate simulated ventricular fibrillation waveforms during energy tests.  
NOTE: Heed all defibrillator warnings, so that you are ready for the pending defibrillator discharge.
4. Turn on the automatic defibrillator. Follow the manufacturer's instructions. The automatic defibrillator detects the ventricular fibrillation waveform and determines that defibrillation is necessary, then it charges to the preset energy level. The automatic defibrillator issues a warning to stand back and then it discharges the energy.
5. The Impulse 4000 displays the test results.
6. Make sure to turn off the automatic defibrillator when you are done testing.

### Internal Paddles

Some defibrillators have special defibrillation paddles for internal body use during open-heart surgery. These paddles are small and are placed directly on the heart. The Impulse 4000 has adapters for these internal paddles that are supplied as standard accessories. They are similar to the automatic defibrillator adapters in that they plug into the center of each of the Impulse 4000 paddle contacts and have plastic covers that go over the paddle contacts. They have a small curved contact surface on top that mates with the internal paddles. To test defibrillators with internal paddles, plug the two internal paddle adapters onto the Impulse 4000 paddle contacts, completely covering the conductive paddle contacts. Then proceed, as described previously, to discharge the defibrillator for an energy level measurement.

**CAUTION:** The internal defibrillation paddle adapter set (DNI Part # 5215-0198) is shipped with the Impulse 4000 Analyzer as a standard accessory. This adapter set tests the unsterilized cardiac contact plates of internally discharged defibrillators that are typically used during open-heart surgery. The set is shipped from the factory in an unsterilized condition and should not be used, as shipped, to test sterilized contact plates during an open-heart procedure.

The internal defibrillation paddle adapters can be gas sterilized using Ethylene Oxide (EtO) protocol. Both the metal and plastic parts of these adapters can withstand repeated sterilizations, but they should still be examined for damage such as cracking, discoloration, and warping both prior to and immediately following EtO sterilization. No extended product liability or implied warranty, beyond what is listed in the statement on the inside front cover of this manual, is intended by the manufacturer.

## SAFETY INFORMATION

**WARNING!** Instructions for adjustments while covers are removed and for servicing of the Impulse 4000 are for use by trained service personnel only. To avoid dangerous electric shock, do not perform such adjustments or servicing unless qualified to do so.

## INTRODUCTION AND FEATURES

### Introduction

This manual is written for the biomedical equipment technician or clinical engineer responsible for testing defibrillator and transcutaneous pacemaker equipment. It explains the intended operation and service of the Impulse 4000 Defibrillator and Transcutaneous Pacemaker Analyzer.

The Impulse 4000 measures and reports specific defibrillator performance parameters and transcutaneous pacemaker performance parameters.

### Features

The following is a list of the Impulse 4000 features:

- Measures energy output of defibrillators.
- Measures cardioversion delay time of defibrillators in the synchronized mode.
- Measures output parameters of transcutaneous pacemakers.
- Simulates the human body with an internal 50- $\Omega$  resistance.
- Provides the specific resistance loads and measurement algorithms necessary to test external transcutaneous pacemakers to manufacturer's specifications.  
NOTE: Requires the use of an adapter (pacemaker plug-in) module; this is an optional accessory.
- Automates testing by making 50 user-programmable autosequences available.
- Generates a wide variety of simulated ECG waveforms.
- Provides clinical training scenarios and interfaces to compatible training manikins such as the Armstrong Medical Defib Chris Clean or the Laerdal Defib-Anne.
- Connects to DNI Nevada's original medTester, medTester 5000, and medTester 5000B.
- Interfaces to a PC, terminal, or parallel printer.

Performs the following functions with defibrillators, transcutaneous pacemakers, and 12-lead ECG devices:

- **DEFIBRILLATOR MEASUREMENTS.** Output energy, peak output voltage and current, output pulse width, cardioversion delay time test, and charge time.
- **TRANSCUTANEOUS PACEMAKER MEASUREMENTS.** Peak current, pulse width, pulse rate, pulsed-refractory period, and sensed-refractory period.
- **AUTOMATED TESTING PROTOCOLS.** Capacity for 50 unique test sequences that inspect specific defibrillators and/or external transcutaneous pacemakers.
- **ECG TEST/SIMULATION.** Performance waveforms, normal sinus rhythm waveforms, arrhythmia simulations, and R-wave detector tests.
- **INTERACTIVE TRAINING SCENARIOS.** Simulated ECG waveform sequences that respond to defibrillator discharges and transcutaneous pacemaker inputs. Excellent for training medical personnel.

## IMPULSE 4000 INSTRUMENT SPECIFICATIONS

### Defibrillator Measurement

The Impulse 4000 Analyzer tests the operation of defibrillators with output waveforms such as Lown, Edmark, Truncated Exponential, or Trapezoidal. This instrument measures and digitally displays the energy, peak voltage, peak current, pulse width, and charge time of the applied defibrillator output pulse.

The Impulse 4000 is designed to operate up to the energy/voltage/current levels as specified below. The actual accuracy of the Impulse 4000 has been verified and tested at 360 joules using an Edmark waveform type defibrillator.

Modes of Operation:	Manual, Factory Preprogrammed Autosequence, User-Programmable Autosequence, and Remote Computer Control.
Internal Defibrillation Test Load:	50 $\Omega$ , $\pm 1\%$
Energy Measurement Ranges:	<u>High Range</u> Energy: 360.0 J maximum at specified accuracies NOTE: Readings are obtainable at energies up to 1000 J. Resolution: 0.1 J Accuracy: $\pm 2\%$ of reading for 100–360 J $\pm 2$ J for <100 J
Peak Voltage:	6000 V maximum Resolution: 3 V Accuracy: $\pm (1\% \text{ of reading} + 10 \text{ V})$ NOTE: Accuracy specified is for energy levels $\leq 360$ J.
Peak Current:	120 A maximum Resolution: 0.1 A Accuracy: $\pm (1\% \text{ of reading} + 2 \text{ A})$ NOTE: Accuracy specified is for energy levels $\leq 360$ J.
Trigger Level:	100 V
Test Pulse:	100 J $\pm 5$ J
Real-Time Output:	1 V/1000 V Accuracy: $\pm 5\%$ peak-to-peak
Playback:	1 mV/3000 V Lead II (Time Expansion Factor = 200:1)

Low Range

Energy: 50.0 J maximum  
Resolution: 0.1 J  
Accuracy:  $\pm 2\%$  of reading for 20–50 J  
 $\pm 0.4$  J for <20 J

Peak Voltage: 1200 V maximum  
Resolution: 1 V  
Accuracy:  $\pm(1\%$  of reading + 2 V)

Peak Current: 24 A maximum  
Resolution: 0.1 A  
Accuracy:  $\pm(1\%$  of reading + 0.1 A)

Trigger Level: 20 V

Test Pulse: 4 J  $\pm 0.2$  J

Real-Time Output: 1 V/200 V  
Accuracy:  $\pm 5\%$  peak-to-peak

Playback: 1 mV/600 V Lead II  
(Time Expansion Factor = 200:1)

Energy Measurement Time Window: 64 ms

Output Pulse Width Measurement: Measurement is 10% and 50% of the waveform peak; applies to voltage or current.  
Resolution: 0.05 ms  
Accuracy:  $\pm 0.2$  ms

Automated Defibrillator Testing: Seven ventricular arrhythmias can be output across the 50- $\Omega$  test load to arm the automated defibrillator.  
Selections: Ventricular Fibrillation 1 (coarse) and Ventricular Fibrillation 2 (fine).  
Ventricular Tachycardia at 130, 175, 180, 185, and 220 BPM.

Cardioversion Delay Time: Measured from the peak of the simulated ECG R wave to the peak of the defibrillator output pulse.  
Range: -120 to +380 ms from the R-wave peak.  
Resolution: 1 ms  
Accuracy:  $\pm 1$  ms  
ECG: Five selections—Normal Sinus Rhythm at 60, 80, and 120 BPM; Atrial Fibrillation 1 (coarse) and Atrial Fibrillation 2 (fine).

Charge Time: Measurement is initiated by pressing the function key and simultaneously charging the defibrillator. Charge time is displayed after the defibrillator output is applied across the internal 50- $\Omega$  test load.  
Range: 1 to 99 s  
Resolution: 1 s  
Accuracy:  $\pm 1$  s

## Transcutaneous Pacemaker Measurement

The Impulse 4000 Analyzer is specifically designed to test the basic operation of external transcutaneous pacemakers.

NOTE 1: This particular type of pacemaker is used in both prehospital paramedic and hospital-based emergency cardiac applications to induce a productive heart rhythm in a patient with either asystole (no cardiac activity) or bradycardia (very low heart rate). The pacemaker pulse is typically delivered via a set of disposable electrode pads that are directly attached across the patient's chest.

NOTE 2: The Impulse 4000 Analyzer is not intended for use with either external transvenous or internal implantable pacemakers that use an indwelling invasive catheter to directly stimulate the heart. Refer to the specific device manufacturer for the recommended testing methods for these pacemakers.

The Impulse 4000 Analyzer measures monophasic external transcutaneous pacemaker pulse outputs such as rectilinear, trapezoidal, and truncated waveform types. This analyzer displays rate, peak output current, and pulse width of the applied pacemaker pulse. The Impulse 4000 Analyzer also has interactive testing capabilities for refractory period measurement and demand/asynchronous mode verification that are conducted without the use of additional test equipment.

NOTE: The Impulse 4000 also tests transcutaneous pacemakers using optional adapter (pacemaker plug-in) modules. These modules modify particular measurement techniques, add test load selections, and incorporate the proper electrode connectors to the standard Impulse 4000 as required by specific medical device manufacturers. Refer to Chapter 7 *Modules* or the current DNI Nevada price list for specific adapter (pacemaker plug-in) module availability.

Internal Pacemaker Test Load: 50  $\Omega$ ,  $\pm 1\%$

Current Amplitude Measurement:      Range:            4 to 250 mA  
   Resolution:        0.2 mA  
   Accuracy:          $\pm(1\%$  of reading + 2 mA)

Trigger Level: 4 mA

Test Pulse Amplitude: 100 mA,  $\pm 5$  mA

Measurement Time Window: 100 ms (maximum)

Pulse Width Measurement:      Pulse width is defined as the time between the initial upslope and the final downslope of the applied monophasic pacemaker pulse. This time is measured at 10% of the maximum amplitude of the applied pacemaker pulse leading-edge slope.

Resolution: 0.1 ms  
Accuracy:  $\pm 0.5$  ms

Pulse Rate:                            Range:            30 to 200 PPM  
   Resolution:        1 PPM  
   Accuracy:          $\pm 1$  PPM

Refractory Tests: These tests are performed in the pacemaker demand mode only.

*Pulsed-Refractory Period (PRP)*  
This is the period of time that immediately follows the pacemaker pulse during which time the pacemaker does not sense cardiac activity.

*Sensed-Refractory Period (SRP)*  
This is the period of time that immediately follows sensing of cardiac activity during which time the pacemaker does not sense further cardiac activity.

Measurement Range: 20 to 500 ms  
Pacemaker Rate Range: 30 to 200 PPM  
Measurement Points: PRP: Leading edge of the pacemaker pulse to the peak of the first ECG R-wave complex.  
SRP: Between the peaks of the first and second ECG R-wave complex following the pacemaker pulse.

ECG Waveform Stimulus: Havertriangle, 1 mV peak (Lead II), and 40-ms width.

Measurement Resolution: 1 ms  
Measurement Accuracy:  $\pm 2$  ms

Demand Test: This is an interactive test that verifies the basic operation of the pacemaker in the demand mode. The applied pacemaker pulse rate is measured and two ECG heart rates are automatically computed that either inhibit or enable the pacemaker output.

ECG Waveform Stimulus: Havertriangle, 1-mV peak (Lead II).

ECG Waveform Stimulus Rate Range: 1 to 250, in 1-BPM steps.

*This page intentionally blank.*

## Autosequence Test

The Impulse 4000 can store up to 50 autosequences with device-specific inspection protocols. These autosequences can include a wide range of defibrillator, pacemaker, and ECG tests. The first 26 autosequences are factory-initialized for selected device manufacturers' models. The first 18 of these selections comprise defibrillator-only devices, the next 8 comprise combination defibrillator/pacemaker devices, and the remaining 24 are exclusively reserved for your own customized protocols. If desired, you can program any of the 50 autosequences with your own customized protocols. However, the first 26 autosequences revert to factory values whenever the instrument is reinitialized and the rest of the autosequences are erased.

## Defibrillator Tests

Defibrillator Energy Levels:	Up to 20 discrete energy levels with both $\pm$ test limits set in % steps. For low-level energy settings, a minimum test limit of $\pm 0.7$ J is factory preprogrammed.
Maximum Energy:	Records energy and charge time with $\pm$ test limits set in 1-J steps. A test can be repeated; only the results of the last test are saved.
Cardioversion:	Records up to three tests with both energy levels and delay time measurements. Energy has both $\pm$ test limits set in % steps.
ECG Performance Waveforms:	Series of ECG waveforms sequenced to test the basic operation of the ECG monitor and recorder functions. (Refer to the next section, <i>ECG Waveforms</i> , for details.)

## Pacemaker Tests

Pulse Mode:	Up to 20 outputs with selectable amplitude and rate values. A $\pm$ test limit can be independently set for each of the parameters. This test is intended primarily for the continuous (asynchronous) mode of the transcutaneous pacemaker for basic amplitude and rate accuracy testing. For low-level amplitude settings, a minimum test limit of $\pm 5$ mA is factory preprogrammed.
Asynchronous Pacemaker Test:	One discrete test for the continuous (asynchronous) pacemaker to ensure that the desired continuous pacemaker output selection is not disabled in the presence of a higher-rate ECG signal. The overdrive ECG signal can be set by the operator to a rate from 10% to 50% over the continuous pacemaker rate.
Demand Pacemaker Tests:	Five discrete rate tests. Interaction of the demand-mode pacemaker pulse and a user-programmable ECG base rate can be tested. Both the underdrive and the overdrive ECG rates can be set by the operator. Underdrive and overdrive rate ranges are 10% to 50% of the selected ECG base rate.
Refractory Tests:	Pulsed- and sensed-refractory tests are performed. A test can be repeated; only the results of the last test are saved.



## ECG Waveforms

The Impulse 4000 Analyzer generates a true 12-lead ECG simulation with independent outputs for each signal lead.

### Waveform Selections:

#### Manually Selectable Performance Waveforms

- Zero Output
- Square Wave: 2 Hz
- Pulse: 4 s
- Sine Waves: 0.05, 0.5, 1, 10, 25, 30, 40, 50, 60, 100, 125, and 150 Hz.
- Square Wave: 1 kHz
- Triangle Wave: 2 Hz

NOTE: Reference lead signal is 1-mV amplitude; selectable between I and II.

#### Automated ECG Performance Waveform Sequence

A series of the above-listed performance waveforms is output in the following sequence to facilitate the testing of ECG monitoring and recording devices:

Zero Output; Square Wave; Pulse; Sine Waves 1, 10, 30, 40, 50, 60, and 100 Hz, and 1 kHz (Square Wave); Triangle Wave; and Normal Sinus Rhythm rates 60, 30, 60, 120, 240, and 60 BPM.

NOTE: Reference lead signal is 1-mV amplitude; selectable between I and II.

#### Manually Selectable Normal Sinus Rhythms

30, 60, 80, 120, 160, 200, 240, and 300 BPM.

NOTE: Lead II signal is 1-mV amplitude.

#### ECG R-Wave Threshold Detection Test

Determines the minimum width and amplitude of the particular R wave that is detectable, i.e., those R waves that reach threshold.

##### ECG R Waves

Width: 8, 12, 20, 40, 60, 80, 100, 120, 140, 160, 180, and 200 ms.

Accuracy:  $\pm 1\%$

Amplitude: Lead II signal

0.05 to 0.50 mV in 0.05-mV steps.

0.50 to 5.50 mV in 0.25-mV steps.

Accuracy:  $\pm 5\%$

Arrhythmia Selections

NOTE: Lead II signal is 1-mV amplitude for all arrhythmia selections.

- Supraventricular: Atrial Fibrillation (1 & 2)  
Atrial Flutter  
Sinus Arrhythmia  
1° AV block  
2° AV block type I  
2° AV block type II  
3° AV block
  
- Ventricular: Premature Ventricular Contractions (PVC 1 and PVC 2)  
Multifocal PVCs  
Couplet (pair of PVCs)  
Bigeminy  
Trigeminy  
Run of 5 PVCs  
Run of 11 PVCs  
Ventricular  
Ventricular Tachycardia at 130, 175, 180, 185, and 220 BPM.  
Ventricular Fibrillation (1 & 2)  
Asystole (1 & 2)
  
- Transvenous Pacemaker:  
Continuous  
Demand (type 1 & 2)  
AV (Atrioventricular) Sequential  
Noncapture  
Nonfunctional
  
- Simulated Waveform Accuracy  
Amplitude: ±5% (reference lead)  
Rate: ±0.5%
  
- Transvenous Pacemaker Spike Simulation  
Amplitudes: -700, -500, -200, -100, -50, -20, -18, -16, -14, -12, -10, -8, -6, -4, -2, 0, 2, 4, 6, 8, 10, 12, 14, 16, 18, 20, 50, 100, 200, 500, and 700 mV.  
Accuracy: ±(10% of setting +0.2 mV)  
Pulse Widths: 0.1, 0.2, 0.5, 1.0, and 2.0 ms.  
Accuracy: ±5%

Low-Level ECG Posts

- Ten binding posts that are compatible with disposable snap electrodes, 3.2- and 4-mm pins, and loose wires.
- The binding posts are as follows:
  1. RL (right leg)
  2. RA (right arm)
  3. LA (left arm)
  4. LL (left leg)
  5. V1 (chest)
  6. V2 (chest)
  7. V3 (chest)
  8. V4 (chest)
  9. V5 (chest)
  10. V6 (chest)
- A true 12-lead simulation with independent signals at each lead ( $RA + LA + LL = 0$ ).
- Amplitude swing:  $\pm 2$  mV maximum for each signal.
- Nominal levels for a Normal Sinus ECG R wave, baseline to peak:

Lead I	0.7 mV
Lead II	1.0 mV
Lead III	0.3 mV
V Leads	1.0 mV
- Defibrillator Paddle ( $50\text{-}\Omega$ ) Contacts are the same as the low-level Lead II amplitude signal.

High-Level Output

- A high-level version of the Lead II signal (LL-RA) proportional to the low-level signal at 1 V/mV.
- $\frac{1}{4}$ -inch phone jack connection.

## Manikin Interface

Compatible with training manikins such as Armstrong Medical Defib Chris Clean and the Laerdal Defib-Anne. Provides ECG signal and receives isolated defibrillator signal to sequence the ECG during training scenarios.

ECG Signal Output: Low-level Lead II signal.

## Training Scenarios

The Impulse 4000 has several training scenarios that are interactive with defibrillators, transcutaneous pacemakers, and training manikins (listed in the preceding section). The Impulse 4000 outputs an ECG waveform and then responds to the discharge of a defibrillator or transcutaneous pacemaker thereby providing realistic training situations for medical personnel. The student can be presented with a new ECG selection, or defib/pacer conversion response by the instructor with the simple push of a button.

A printout of the student's responses, elapsed time, ECG waveform series, and formatted evaluation checklist can be output at the end of each training scenario. (Refer to the sample printout in *Using Training Scenarios* in Chapter 3.)

Defibrillator Training Scenarios: Emergency Ventricular Defibrillation (Sequence of waveforms that simulates a failing heart condition and subsequent revival if defibrillation is successful; also VFIB1, VFIB2, VTACH, and NORM-NSR 80.)

Elective Cardioversion (AFIB1, AFIB2)

Transcutaneous Pacemaker Scenarios: Asystole  
Bradycardia  
Demand  
Noncapture

## Calendar/Clock

Both the date and time are maintained with internal battery backup. These selections can be viewed on the display or printed on both the autosequence and training scenario test forms.

## Data Interfaces

Printer Port: Parallel  
Connector: IBM compatible DB25 female connector.

Serial Port: RS-232  
Connector: IBM compatible DB25 male connector.

- Bi-directional port for controlling the instrument and outputting test results.
- CTS handshake for sending data.
- Baud rates are 300, 600, 1200, 2400, 4800, and 9600.

## General Specifications for the Impulse 4000

<u>PARAMETER</u>	<u>SPECIFICATION</u>
Power Requirements:	<p>Internal 12-V lead-acid battery provides a minimum of 20 hours' operation. Instrument will run from charger while charging a fully depleted battery.</p> <p>Battery is rechargeable from wall plug charger:</p> <ul style="list-style-type: none"><li>• Use North American 115-volt CSA-approved battery charger with 115 VAC (<math>\pm 10\%</math>) @ 50-60 Hz.</li><li>• Use European 230-volt with IEC square-power input jack battery charger with 230 VAC (<math>\pm 10\%</math>) @ 50-60 Hz.</li></ul>
Temperature Range:	<p>Operating: 15° to 35°C (59° to 95°F). Storage: 0° to 50°C (32° to 122°F).</p>
Relative Humidity:	95% maximum, noncondensing.
Display:	4-line x 40-character Supertwist Liquid Crystal Display.
Weight:	3.86 kg (8.5 lb).
Dimensions:	24.89 cm L x 26.92 cm W x 8.89 cm H (9.8" L x 10.6" W x 3.5" H).

**Standard Accessories**

DNI Part #

Battery Charger	
Domestic (115 VAC) or	1201-0088
European (230 VAC)	1201-0089
Operating and Service Manual	9508-0242
Defibrillator Contact Plate	
Internal Paddle Adapter Set	5215-0198
Vinyl Carrying Case	9530-0050

**Optional Accessories**

Defibrillation-Only (50-Ω) Electrode Adapters

Cardiotronics—Molded Wing Type Connector	3010-0448
Physio-Control LIFEPAK series (set of two)	5215-0256
SpaceLabs—First Medic 610; Laerdal Heart Start 1000/2000/3000 (set of two)	5215-0278

External Transcutaneous Pacer-Only (50-Ω) Electrode Adapters

Physio-Control LIFEPAK series (set of two)	5215-0322
Zoll Medical—NTP Electrode System Compatible	3010-0450

Combination Defibrillator/External Transcutaneous Pacer (50-Ω) Electrode Adapters

Cardiotronics—Latching Type Connector	3010-0449
Hewlett Packard—Round Connector	3010-0447
Marquette Medical (all models; set of two)	5215-0258
Zoll Medical PD2200 Multi-Function Electrode System	3010-0378

Adapter (Pacemaker Plug-In) Modules	DNI Part #
TQA-2 Zoll Models PD1200 and PD1400; PD2200 Electrode System. (1000-Ω Load)	9513-0180
TQA-3 Zoll Models NTP2000 and NTP2100. (1000-Ω Load)	9513-0181
TQA-6 Medical Data Electronics (MDE) Model E300. (600- and 1000-Ω Loads, and Open Circuit)	9513-0179
TQA-7 Marquette Medical Model 1500. (300-Ω Load)	9513-0183
TQA-9 Physio-Control LIFEPAK series. (100-, 700-, 1000-, and 1500-Ω Loads)	9513-0178
TQA-11 Cardiotronics—Latching Type Connector. (100-Ω Load)	9513-0184
TQA-12 Hewlett Packard Code Master Series. (50- and 400-Ω Loads)	9513-0185


NOTE: Refer to the current DNI Nevada Price List for availability, part number information, and price.

#### Other Optional Accessories

Hard-sided carrying case	9530-0048
Bi-directional Serial Communication Cable, DB25 (female) to DB25 (female) connectors	3010-0250
Bi-directional Serial Communication Cable, DB9 (female) to DB25 (female) connectors	3010-0441
<i>Use this cable for a medTester</i> Bi-directional Serial Communication Cable, DB25 (female) to DB25 (female) connectors	3010-0467
Adapter Module Output Cable, 2.5-mm phone plug to BNC	3010-0442

NOTE: Refer to the current DNI Nevada Price List for availability, part number information, and price.

## INSTRUMENT FAMILIARITY

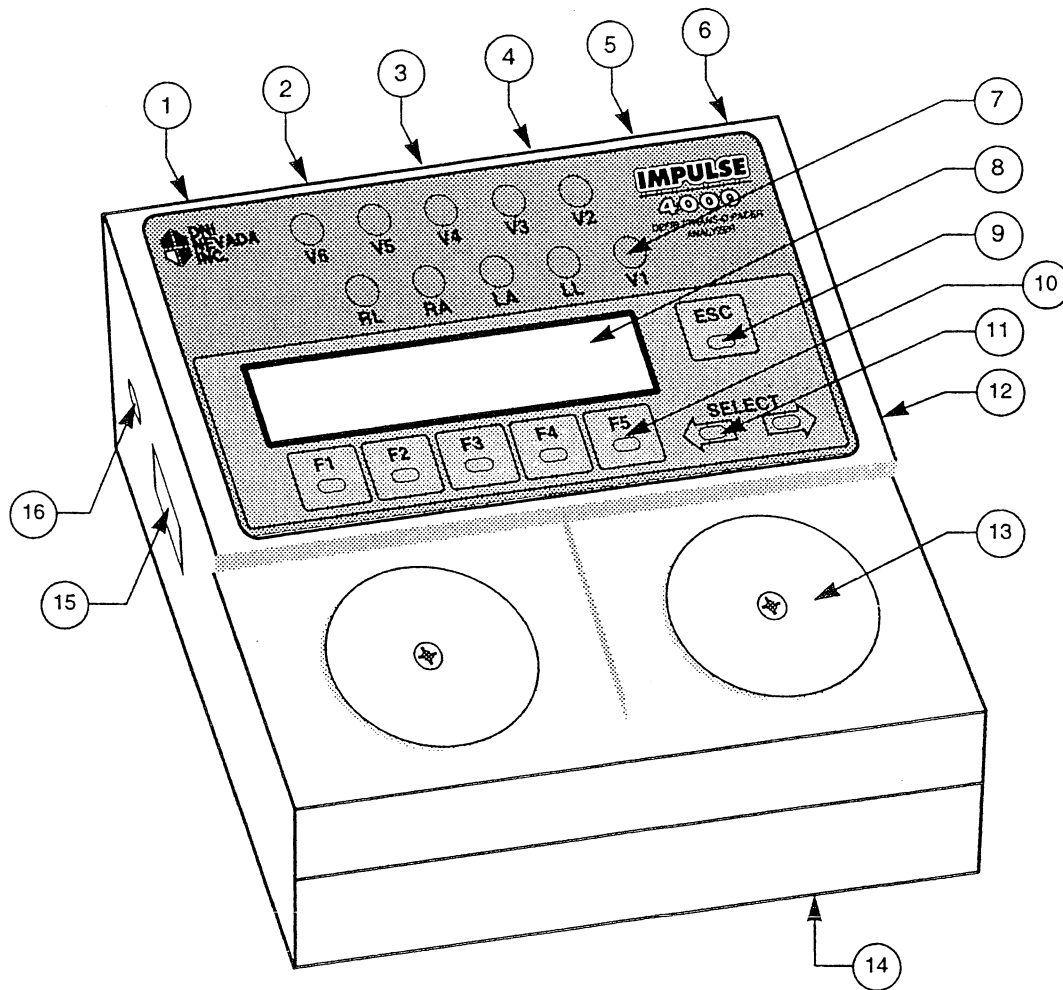

- |                             |  |
|-----------------------------|--|
| ① Printer Port              | ⑨ ESC: Escape Key  |
| ② RS-232 Serial Port        | ⑩ F1-F5: Function keys execute the function displayed above the key. |
| ③ Handle                    | ⑪ SELECT: Left and right arrow keys.                                 |
| ④ Manikin Port              | ⑫ Power Switch   |
| ⑤ High-Level ECG Output     | ⑬ Defibrillator Paddle Contacts: "Apex" (right), "Sternum" (left).   |
| ⑥ Battery Charger Input     | ⑭ EPROM cover located on the underside of the instrument.            |
| ⑦ 10 ECG Lead-Binding Posts | ⑮ Adapter Module Receptacle  |
| ⑧ Display                   | ⑯ Real-Time Output   |



## ***Chapter 2***

### *Installation*

## **UNPACKING AND INSPECTION**

Follow standard receiving practices upon receipt of the instrument. Check the shipping carton for damage. If damage is found, stop unpacking the instrument. Notify the carrier and ask for an agent to be present while the instrument is unpacked. There are no special unpacking instructions, but be careful not to damage the instrument when unpacking it. Inspect the instrument for physical damage such as bent or broken parts, dents, or scratches.

## **CLAIMS**

Our routine method of shipment is via common carrier, FOB origin. Upon delivery, if physical damage is found, retain all packing materials in their original condition and contact the carrier immediately to file a claim.

If the instrument is delivered in good physical condition but does not operate within specifications, or if there are any other problems not caused by shipping damage, please contact DNI Nevada or your local sales representative.

## **WARRANTY REPAIR**

The warranty statement for this product is at the front of this manual.

When shipping an instrument to DNI Nevada for repair, complete the Service Return Form and attach to the instrument. Completing this form will help to ensure timely repair of your instrument.

Use the original carton and packaging material for shipment. If they are not available, we recommend the following guide for repackaging:

- a) Use a double-walled carton of sufficient strength for the weight being shipped.
- b) Use heavy paper or cardboard to protect all instrument surfaces. Use a nonabrasive material around all projecting parts.
- c) Use at least four inches of tightly packed, industrial-approved shock-absorbent material around the instrument.

## **CONNECTING THE PRINTER**

You can connect any Centronics or IBM PC compatible parallel printer to the Impulse 4000. DNI Nevada recommends that you use a standard IBM PC compatible parallel printer cable.

Connect this cable to the "PRINTER PORT", a 25-pin (DB25) female connector, on the rear panel of the Impulse 4000.

## **RS-232 SERIAL PORT SETUP**

The Impulse 4000 can be connected to the medTester via the RS-232 serial port. Test results can be sent to a computer using this port and it can also be used to control all test functions via a personal computer or compatible terminal device. DNI Nevada recommends that you use the appropriate cable as can be located in the *Other Optional Accessories* section in Chapter 1. The cable connects to the 25-pin (DB25) male connector, labeled "SERIAL PORT", on the rear panel of the Impulse 4000.

## **MANIKIN CONNECTION**

The Impulse 4000 will output the selected ECG waveform to the defibrillator pick-up plates of either the Armstrong Medical Defib Chris Clean training manikin or the Laerdal Defib-Anne training manikin. Use the standard modular phone jack, labeled "MANIKIN", on the rear panel of the Impulse 4000.

## **HIGH-LEVEL ECG OUTPUT PORT**

Use this port—a ¼-inch diameter phone jack, labeled "ECG HI LEVEL OUTPUT", on the rear panel of the Impulse 4000—to connect to an oscilloscope for monitoring waveforms.

## ***Chapter 3***

### *Operating Instructions*

## POWER-UP AND INITIALIZATION

The Impulse 4000 is battery operated. The power on/off switch is located on the right side of the Impulse 4000 case next to the ventilation slots. When you turn the instrument on, it displays the firmware version followed by the MAIN MENU PAGE 1 as shown below:


7/21/94	IMPULSE 4000	15:06:20		
MAIN MENU PAGE 1:				
DEFIB	PACER	ECG	PERF	AUTO>
<F1>	<F2>	<F3>	<F4>	<F5>

Press the "SELECT" right pointing arrow to view PAGE 2 of the MAIN MENU:

7/21/94	IMPULSE 4000	15:06:20		
MAIN MENU PAGE 2:				
<TRAIN	CUSTOM	MEDT	UTIL	
<F1>	<F2>	<F3>	<F4>	<F5>

## MAIN MENU STRUCTURE

Below is a brief outline of the Impulse 4000 main menu structure.

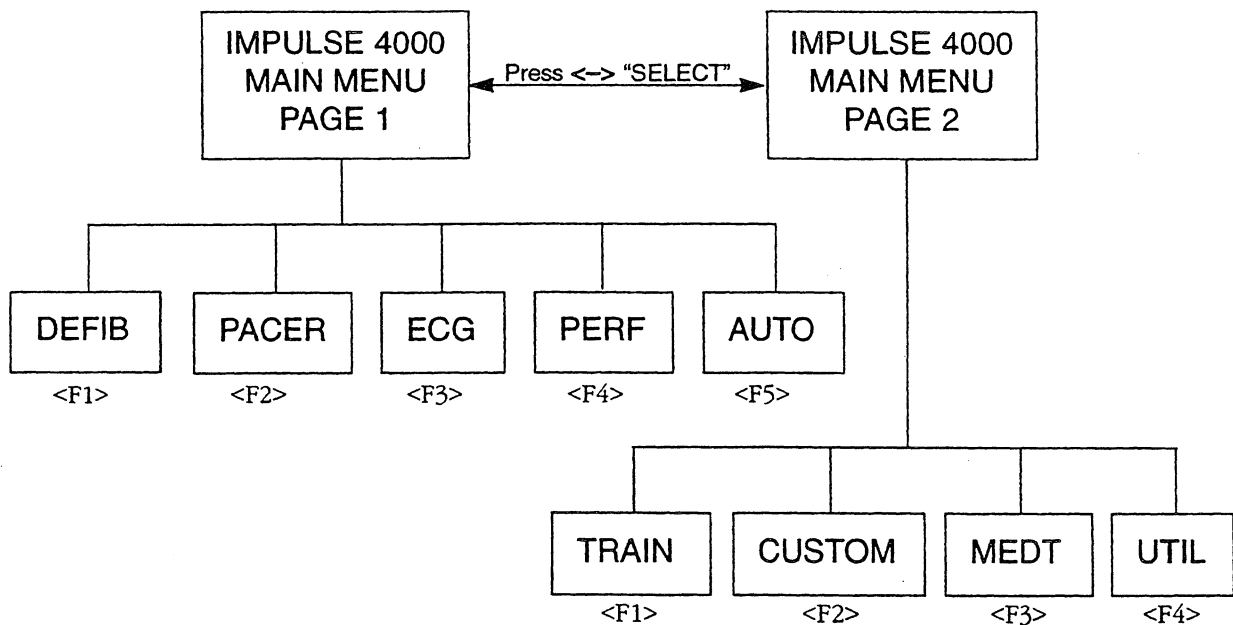

## TESTING A DEFIBRILLATOR

### Defibrillator Testing Theory

Energy is defined as the integral over time of the instantaneous power output of a defibrillator. Power is equal to the voltage squared, then divided by the resistance.

$$E = \int p \, dt = \int V^2/R \, dt = \int V^2 \, dt/R$$

The Impulse 4000 measures and stores the instantaneous voltage of the discharge pulse every 50 microseconds, 1280 times, for a total measurement time of 64 milliseconds. All of these instantaneous voltages are squared, summed, multiplied by 50 microseconds, and finally divided by the 50- $\Omega$  load resistance to yield an energy measurement in joules (J), also referred to as watt-seconds.

$$E = (\sum v^2) \cdot \Delta t/R = (\sum v^2) \cdot 50 \, \mu s/50 \, \Omega$$

### Available Energy Ranges

The Impulse 4000 provides a low- and a high-energy range for thorough testing of the defibrillator output, as follows:

- Low energy = Less than or equal to 50 J.
- High energy = Up to 1000 J.

NOTE: Refer to the IMPULSE 4000 INSTRUMENT SPECIFICATIONS - *Defibrillator Measurement* section in Chapter 1 for more information.

### Measuring Defibrillator Energy Output

**WARNING!** Cardiac defibrillators generate potentially dangerous voltages which can be lethal if improperly handled by an untrained operator. Refer to the device manufacturer's operator or service manual for the specific device-inspection requirements. Additional safety information for testing cardiac defibrillators is included in the *SAFETY CONSIDERATIONS* section at the beginning of Chapter 1.

To measure the defibrillator output energy:

1. If you are using electrode adapters, complete steps 1 through 4 in Chapter 1, *SAFETY CONSIDERATIONS - Connecting the Defibrillator to the Impulse 4000*.
2. Press <F1> "DEFIB" from the MAIN MENU PAGE 1.
3. If a printer is attached to the Impulse 4000, press <F5> to print a manual defibrillator test header. Press <F4> to send the header to the serial port. If no header is desired, press <F1> to continue.
4. Press <F1> "ENERGY".
5. Select either <F1> "LOW" for measurements up to 50 J or <F2> "HIGH" for measurements over 50 J. The top line of the display flashes "READY". The Impulse 4000 will accept a defibrillator output pulse for energy measurement.

6. Place the defibrillator paddles firmly on the Impulse 4000 defibrillator paddle contacts, and charge the defibrillator to the desired energy level. Alternately, ensure that the electrode adapters are connected properly as stated in Chapter 1, SAFETY CONSIDERATIONS - *Connecting the Defibrillator to the Impulse 4000*.
7. Discharge the defibrillator.

The Impulse 4000 displays the following measurement data:

DEFIB ENERGY:		READY	E = 98.1 J
Vpk =	2025 V	Ipk =	40.5 A
t50 =	1.60 mS	t10 =	2.65 mS
VFIB	VTACH	PLYBCK	SERIAL PRINT>
<F1>	<F2>	<F3>	<F4> <F5>

where:

E = Energy in joules.

Vpk = Peak voltage.

Ipk = Peak current in amperes.

t50 = Pulse width at 50 percent of the waveform peak in milliseconds.

t10 = Pulse width at 10 percent of the waveform peak in milliseconds.

### Self-Test Feature

Press the "SELECT" right pointing arrow to view the next page of the display:

DEFIB ENERGY:		READY	E = 98.1 J
Vpk =	2025 V	Ipk =	40.5 A
t50 =	1.60 mS	t10 =	2.65 mS
<TEST			
<F1>			

Use <F1> "TEST" to periodically test the Impulse 4000 operation. When you press <F1> "TEST", the Impulse 4000 supplies a simulated defibrillator pulse to test its circuitry. There is an actual pulse generator circuit that feeds into the low-level measurement circuitry, after the high-voltage attenuator. Therefore, the circuitry and the firmware are tested completely. This is not an absolute calibration pulse, but just a general purpose self-test. When in the "LOW" range, the test pulse should measure 4 J  $\pm$ 0.2 J; and in the "HIGH" range, the test pulse should measure 100 J  $\pm$ 5 J.

### Printing Measurement Data

The displayed measurement data can be sent to an attached serial printer or parallel printer.

- To send to a serial printer, press <F4> "SERIAL".
- To send to a parallel printer, press <F5> "PRINT".

Below is an example of a printed report with a header:

```

IMPULSE 4000          DNI NEVADA
DATE: 08/21/94       TIME: 11:34:54
OP CODE: _____  CN: _____
MANF: _____     MODEL: _____
SERIAL # _____  LOC: _____

MANUAL DEFIB ENERGY TEST    RANGE: HI
E = 105.0 J                  Ipk = 29.4 A
Vpk = 1472 V                 t10 = 6.40 ms
t50 = 3.10 ms
ECG OUTPUT: vfib1
    
```

← Optional Header

### Testing Semi- and Fully Automatic Defibrillators

Refer to the device manufacturer's operator or service manual for specific device-inspection requirements. The following ECG waveforms are available to activate the automatic defibrillator:

- VFIB – VFIB1 (coarse) and VFIB2 (fine).
- VTACH Rate – vt130, vt175, vt180, vt185, and vt220.

To test either semi- or fully automatic defibrillators:

1. Complete steps 1 through 3 in Chapter 1, SAFETY CONSIDERATIONS - *Discharging the Automatic Defibrillator*.
2. Press <F1> "DEFIB" from the MAIN MENU PAGE 1.
3. If a printer is attached to the Impulse 4000, press <F5> to print a manual defibrillator test header. Press <F4> to send the header to the serial port. If no header is desired, press <F1> to continue.
4. Press <F1> "ENERGY".
5. Select either <F1> "LOW" for measurements up to 50 J or <F2> "HIGH" for measurements over 50 J. The top line of the display flashes "READY". The Impulse 4000 will accept a defibrillator output pulse for energy measurement.
6. Press either <F1> "VFIB" (ventricular fibrillation) or <F2> "VTACH" (ventricular tachycardia) to generate the required stimulus ECG waveform for the advisory shock feature of the device. Press the key again to choose additional selections (coarse or fine VFIB or VTACH Rate). The display shows your choice.
7. Discharge the defibrillator. The Impulse 4000 displays the measurement data.

```

DEFIB ENERGY: vt185          READY          E = 98.5 J
Vpk = 2022 V                  Ipk = 40.4 A
t50 = 1.60 mS                 t10 = 2.60 mS
VFIB          VTACH          PLYBCK          SERIAL          PRINT>
    
```

<F1>                      <F2>                      <F3>                      <F4>                      <F5>



## Viewing Waveform Output


### Real-Time Waveform Output

The attenuated defibrillator discharge pulse can be viewed on an oscilloscope using the Impulse 4000 real-time output. The ratios of displayed voltages to actual voltages are as follows:

Oscilloscope	Defibrillator Voltage (displayed)	Defibrillator Voltage (actual)
High range	1 V	1000 V
Low range	1 V	200 V

To view waveform output in real time:

Connect a BNC cable from the real-time output on the left side of the Impulse 4000 to the oscilloscope. A sample printout is shown below:

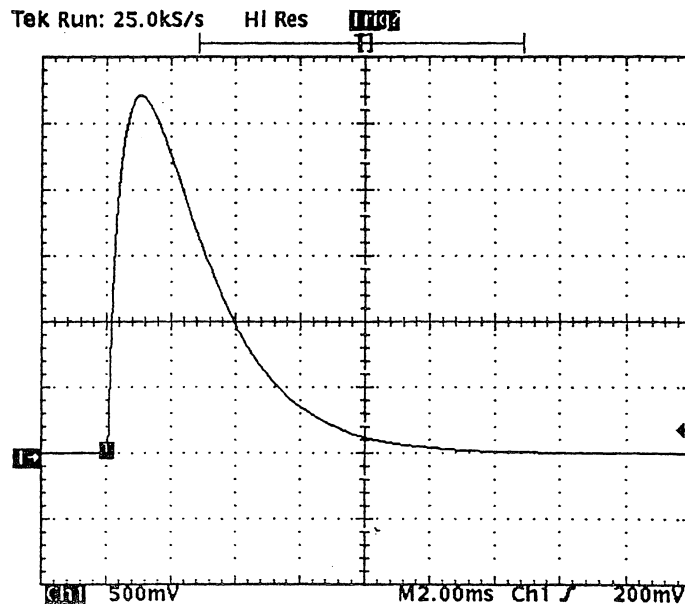

Waveform Output from an Oscilloscope

### Time-Expanded Waveform Playback

The defibrillator discharge pulse can be viewed on a standard ECG monitor or recorder (e.g., strip chart) using time-expanded output. The expansion factor rescales at a ratio of 200:1. At typical 25 mm/s chart speed, 5 mm = 1 ms.

NOTE: Typically monitors have frequency response characteristics that can potentially distort the waveform. Because the low-end frequency (-3-dB) response for the chart recorder and monitor is approximately 0.5 Hz or higher (in the monitoring quality mode), a certain amount of "droop" may be present in the playback waveform. For the highest fidelity reproduction, use an oscilloscope and directly couple (DC) the input.

Press <F3> "PLYBCK" to play back the waveform. First, the Impulse 4000 outputs a 1-mV marker pulse: 0.2 seconds wide in "HIGH" range or 0.1 seconds wide in "LOW" range. Then it plays back the waveform. The complete playback takes 13 seconds since there is a 200:1 ratio on the 64-ms data acquisition. Press <ESC> to terminate the playback if desired.

## TESTING DEFIBRILLATOR CARIOVERSION

### Cardioversion Testing Theory, Measurement Technique and Parameters

The purpose of the cardioversion test is to determine the ability of the defibrillator to synchronize the discharge of its output pulse with the selected Impulse 4000 simulated ECG waveform.

Ideally, the peak of the defibrillator output pulse should coincide or immediately follow the peak of the ECG R wave within 30 milliseconds. Technical Reference: ANSI/AAMI DF2-1989 (Cardiac Defibrillators Devices Standard).

#### Cardioversion Delay Time

The Impulse 4000 can measure the cardioversion delay time of synchronized defibrillators. In this mode, the instrument outputs an ECG waveform (see the following section, *Selecting the Stimulus Waveform*) while it waits for a concurrent defibrillator pulse. When the defibrillator pulse comes, the delay time is computed from the R-wave peak of the last heartbeat to the onset of the defibrillator pulse. The ECG waveform is 1 mV on Lead II.

The Impulse 4000 measures the delay time from the peak of the simulated ECG R wave to the peak of the defibrillator output pulse. This measurement range is -120 to +380 ms. The values are negative if the defibrillator discharges prior to the peak of the simulated R wave, such as on the QR up-slope. The values are positive if the defibrillator discharges after the simulated R wave. If the delay time is outside of these limits, "NO SYNC" is displayed.

### Selecting the Stimulus Waveform

The following ECG waveforms are simulated by the Impulse 4000 for performing the cardioversion test.

<u>Waveform</u>	<u>Abbreviation</u>
Normal Sinus @ 60 BPM	NSR60
Normal Sinus @ 80 BPM	NSR80
Normal Sinus @ 120 BPM	NSR120
Atrial Fibrillation (COARSE)	AFIB1
Atrial Fibrillation (FINE)	AFIB2

To select the ECG stimulus waveform:

1. Press <F1> "DEFIB" from the MAIN MENU PAGE 1.
2. If a printer is attached to the Impulse 4000, press <F5> to print a manual defibrillator test header. Press <F4> to send the header to the serial port. If no header is desired, press <F1> to continue.
3. Press <F2> "CARDIO".
4. To select the range, press <F1> "LOW" for measurements up to 50 J or <F2> "HIGH" for measurements over 50 J. The top line of the display flashes "READY". The Impulse 4000 will accept a defibrillator output pulse for cardioversion measurement.

**WARNING!** Follow all instructions in the next section, *Conducting the Cardioversion Test*, before discharging the defibrillator.

5. Press <F1> "NSR" for a normal sinus rhythm selection or press <F2> "AFIB" for an atrial fibrillation selection.
  - a. For NSR, press <F1> "NSR" until the desired heart rate is displayed.
  - b. For AFIB, press <F2> "AFIB" to select coarse or fine atrial fibrillation.

## Conducting the Cardioversion Test

**WARNING!** Cardiac defibrillators generate potentially dangerous voltages which can be lethal if improperly handled by an untrained operator. Refer to the device manufacturer's operator or service manual for the specific device-inspection requirements. Additional safety information for testing cardiac defibrillators is included in the *SAFETY CONSIDERATIONS* section at the beginning of Chapter 1.

1. If you are using electrode adapters, complete steps 1 through 4 in Chapter 1, *SAFETY CONSIDERATIONS - Connecting the Defibrillator to the Impulse 4000*.
2. Complete step 1 in Chapter 1, *SAFETY CONSIDERATIONS - Discharging the Defibrillator*.
3. Complete steps 1 through 5 in the preceding section, *Selecting the Stimulus Waveform*.
4. Select the "SYNCHRONIZED" mode of operation on the defibrillator.
5. Connect the ECG leads from the monitor/defibrillator to the Impulse 4000 binding posts.
6. Place the defibrillator paddles firmly on the Impulse 4000 defibrillator paddle contacts. Alternately, ensure that the electrode adapters are connected properly.
7. Charge the defibrillator to the desired energy level.
8. Press and hold the discharge pushbuttons on the defibrillator paddles and wait for the defibrillator to discharge.

After the defibrillator discharges, the Impulse 4000 displays the following measurement data:

DEFIB CARDIO:	nsr60	READY	E = 145.6 J
Vpk =	2477 V	Ipk =	49.5 A
Delay time =	88 ms		
NSR	AFIB	PLYBCK	SERIAL PRINT>
<F1>	<F2>	<F3>	<F4> <F5>

where:

E = Energy in joules.

Vpk = Peak voltage.

Ipk = Peak current in amperes.

Delay time = Amount of time in ms; from -120 to +380.

NOTE: If the defibrillator discharges outside of the -120- to +380-ms timing window, the prompt "NO SYNC" displays. Verify that the "SYNCHRONIZED" mode of operation is selected on the defibrillator.

### **Self-Test Feature**

Use <F1> "TEST", on page 2 of the DEFIB CARDIO menu, to periodically test the Impulse 4000 operation. First, press the <right arrow> "SELECT" key to change the display to PAGE 2 of the MAIN MENU. Then press <F1> "TEST". When you press <F1> "TEST", the Impulse 4000 supplies a simulated defibrillator pulse to test its circuitry. There is an actual pulse generator circuit that feeds into the low-level measurement circuitry, after the high-voltage attenuator. Therefore, the circuitry and the firmware are tested completely. This is not an absolute calibration pulse, but just a general purpose self-test. In the "LOW" range, the test pulse should measure  $4 \text{ J} \pm 0.2 \text{ J}$ ; and in the "HIGH" range, the test pulse should measure  $100 \text{ J} \pm 5 \text{ J}$ .

### **Printing Measurement Data**

Because the information is the same, refer to *Printing Measurement Data* in the previous section *TESTING A DEFIBRILLATOR*.

### **Viewing Waveform Output**

Because the information is the same, refer to *Viewing Waveform Output* in the previous section *TESTING A DEFIBRILLATOR*.

## TESTING DEFIBRILLATOR MAXIMUM ENERGY

Use the MAXE option to test the defibrillator's maximum energy output for either the low or high range. MAXE also measures the charging time of the defibrillator. The following ECG waveforms are available to activate the semi- and fully automatic defibrillator:

- VFIB – VFIB1 (coarse) and VFIB2 (fine).
- VTACH Rate – vt130, vt175, vt180, vt185, and vt220.

### Conducting the Maximum Energy Test

To run the maximum energy test:

1. Complete steps 1 through 3 in Chapter 1, SAFETY CONSIDERATIONS - *Discharging the Automatic Defibrillator*.
2. Press <F1> "DEFIB" from the MAIN MENU PAGE 1.
3. If a printer is attached to the Impulse 4000, press <F5> to print a manual defibrillator test header. Press <F4> to send the header to the serial port. If no header is desired, press <F1> to continue.
4. Press <F3> "MAXE".
5. To select the range, press <F1> "LOW" for measurements up to 50 J or <F2> "HIGH" for measurements over 50 J.
6. For automatic defibrillators, press <F1> "VFIB" or <F2> "VTACH" repeatedly until the desired waveform is displayed. For example, press <F1> twice to select VFIB2 (fine).  
NOTE: The selected waveform doesn't affect an energy test for a nonautomatic defibrillator.
7. Press <F3> "START" and begin charging the defibrillator.

The top line of the display flashes "READY". The Impulse 4000 will accept a defibrillator output pulse. Discharge the defibrillator. Test results display on the Impulse 4000 as shown in the sample below:

DEFIB	MAXE	vfib2	E =	97.5 J
	Charge Time =	1 S		
	Push F3 and start charging defib			
VFIB	VTACH	START	SERIAL	PRINT>
<F1>	<F2>	<F3>	<F4>	<F5>

### Self-Test Feature

The test pulse becomes available on <F5> after you press <F3> "START". When you press <F5> "TEST", the Impulse 4000 supplies a simulated defibrillator pulse and displays the data as shown above.

### Printing Measurement Data

The displayed measurement data can be sent to an attached serial printer or parallel printer.

- To send to a serial printer, press <F4> "SERIAL".
- To send to a parallel printer, press <F5> "PRINT".

## TESTING AN EXTERNAL TRANSCUTANEOUS PACEMAKER

The Impulse 4000 is specifically designed to test the basic operation of external transcutaneous pacemakers.

NOTE 1: This particular type of pacemaker is used in both prehospital paramedic and hospital-based emergency cardiac applications to induce a productive heart rhythm in a patient with either asystole (no cardiac activity) or bradycardia (very low heart rate). The pacemaker pulse is typically delivered via a set of disposable electrode pads that are directly attached across the patient's chest.

NOTE 2: The Impulse 4000 is not intended for use with either external transvenous or internal implantable pacemakers that use an indwelling invasive catheter to directly stimulate the heart. Refer to the specific device manufacturer for the recommended testing methods for these pacemakers.

The Impulse 4000 measures monophasic external transcutaneous pacemaker pulse outputs such as rectilinear, trapezoidal, and truncated waveform types. This instrument displays rate, peak output current, and pulse width of the applied pacemaker pulse. The Impulse 4000 also has interactive testing capabilities for refractory period measurement and demand/asynchronous mode verification that are conducted without the use of additional test equipment.

### Test Load

The internal 50- $\Omega$  noninductive resistance provides a standard test load for the pacemaker that simulates the thoracic impedance of the adult chest.

### Pulse Current Amplitude Measurement

The highest (or peak) current value, in either polarity, of the pacemaker pulse is directly computed by the Impulse 4000 and is displayed in milliamperes (mA).

NOTE: Some pacemaker manufacturers require different measurement techniques for their specific devices. Refer to the section *Adapter (Pacemaker Plug-In) Modules* for information or review the specific device specifications listed in the manufacturer's service manual.

### Pulse Width Measurement

The width of the pacemaker pulse is measured at the 10%-point between the zero baseline and the highest peak current value. It is displayed in milliseconds (ms).

### Pulse Rate Measurement

The rate is determined by measuring the elapsed time between the leading-edge points of consecutive pacemaker pulse waveforms. This rate is directly displayed in pulses per minute (PPM).

## Refractory Period Measurement

Refractory tests are to be performed in the pacemaker "DEMAND" mode only. These tests verify the ability of the pacemaker to interact with cardiac activity while the pacemaker is operating in the "DEMAND" mode. The desired outcome of the "DEMAND" mode is to pace the heart during periods of asystole or extreme bradycardia, and not to interfere with the heart when it beats at a normal rhythm and rate.

While the pacemaker is in the "DEMAND" mode of operation, it acts as a backup to the heart's normal rhythm. If this normal rhythm rate falls below the selected pacemaker rate, the pacemaker's output is enabled and the heart is artificially paced. If the heart begins to beat at a normal rhythm and rate, the pacemaker's output becomes inhibited and discontinues pacing.

The pacemaker is constantly monitoring the patient's cardiac activity except during the intervals that the pacemaker pulse is output and during the blanking period immediately following the pacemaker pulse. The *Pulsed-Refractory Period (PRP)* is the period of time that immediately follows the pacemaker pulse during which time the pacemaker does not sense cardiac activity and its output is not inhibited. The Impulse 4000 interactively outputs the ECG R-wave complex following the pacemaker pulse and makes a series of adjustments to this coupling interval until the following pacemaker pulse is inhibited. The Impulse 4000 measures the PRP from the leading edge of the pacemaker pulse to the peak of the first ECG R-wave complex.

The *Sensed-Refractory Period (SRP)* is the period of time that immediately follows sensing of cardiac activity during which time the pacemaker does not sense further cardiac activity. The Impulse 4000 measures the SRP from the peak of the first ECG R-wave complex to the next ECG R-wave complex following the pacemaker pulse.

## Demand Mode Interactive Testing

This is an interactive test that verifies the basic operation of the pacemaker in the "DEMAND" mode. The applied pacemaker pulse rate is measured and two ECG R-wave drive rates are automatically computed. The underdrive rate is 80 percent of the applied pacemaker pulse rate and the overdrive rate is 120 percent of the applied pacemaker pulse rate. These rates either enable (underdrive) or inhibit (overdrive) the pacemaker pulse rate when output by the Impulse 4000. If desired, you can adjust the ECG R-wave complex rate from 1 to 250 BPM in one-beat-per-minute steps.

## Adapter (Pacemaker Plug-In) Modules - Optional

As an optional feature, DNI Nevada offers a series of adapter (pacemaker plug-in) modules for the Impulse 4000 designed to satisfy the testing requirements of specific manufacturers' models. These adapter (pacemaker plug-in) modules have the connector required to directly interface to the pacemaker's electrode cable, provide specified test loads, and also have an identification code that can modify the Impulse 4000 testing formats. While the standard pacemaker testing capabilities of this instrument satisfy general testing needs, some device manufacturers require different measurement techniques. The following manufacturers' models are some of the examples:

### *Zoll Medical Models PD1200, PD1400, NTP2000, and NTP2100*

#### DNI Nevada Adapter (Pacemaker Plug-in) Modules TQA-2 and TQA-3

**Output Current:** Displayed reading (in mA) is an averaged value of samples taken every 50 microseconds across the entire rectilinear peak instead of a single maximum peak current value. Approximately 800 readings are averaged during this 40-millisecond time period.

**Refractory Period:** Pulsed-refractory period measurement is referenced from the trailing edge of the pacemaker pulse instead of the initial rising edge.

### *Medical Data Electronics Model E300*

#### DNI Nevada Adapter (Pacemaker Plug-in) Module TQA-6

**Output Current:** Displayed reading (in mA) is the peak amplitude measurement of the trailing edge of the pacemaker pulse to the zero baseline instead of the maximum peak current value.

See the Adapter (Pacemaker Plug-In) Modules' listing in Chapter 1, *Optional Accessories* section, for specific information regarding the DNI Nevada Adapter Module model numbers and part numbers for each specific manufacturer's model.

NOTE: Refer to the current DNI Nevada Price List for the complete listing of available Adapter (Pacemaker Plug-In) Modules.

## Connecting the Pacemaker to the Impulse 4000

**WARNING!** Never touch the pacemaker connections when the pacemaker is turned on. The pacemaker must be turned off prior to changing any connections because the pacemaker generates a potentially dangerous voltage that can be lethal if improperly handled.

Electrode adapters or an adapter (pacemaker plug-in) module (see above) can be used to connect the pacemaker to the Impulse 4000. It is preferable to use an adapter module because it is compatible with the pacemaker manufacturer's specifications.

1. If you are using electrode adapters, complete steps 1 through 4 in Chapter 1, SAFETY CONSIDERATIONS - *Connecting the Defibrillator to the Impulse 4000*.
2. If you are using an adapter module, turn off the Impulse 4000 and plug the adapter module into the "ADAPTER MODULE" receptacle on the left side of this instrument. Connect the adapter module cables to the pacemaker cables.

NOTE: Readings will be identical if the connections are accidentally reversed. If you want to reverse the polarity of the real-time output, reverse the connection.



## Conducting the Manual Pacemaker Test

**CAUTION:** Do not discharge a defibrillator into the pacemaker adapter module inputs! This may result in damage to both the Impulse 4000 and the adapter module.

If this occurs, over-voltage protection circuitry in the Impulse 4000 displays an error message, and the adapter module produces an audible “beep”. To reset the Impulse 4000, turn it off, disconnect the defibrillator leads, and then turn it on.

### Measuring Pulse Parameters

1. Connect the pacemaker to the Impulse 4000 as explained in the preceding section.
2. Press <F2> “PACER” from the MAIN MENU PAGE 1.
3. If a printer is attached to the Impulse 4000, press <F5> to print a manual defibrillator test header. Press <F4> to send the header to the serial port. If no header is desired, press <F1> to continue.
4. Press <F1> “INT50 Ω” to select the internal 50-Ω resistance, or press <F2> “EXT” to select an external adapter module.
5. When <F2> “EXT” is selected, the name of the connected module is displayed. For modules with multiple loads, select the desired load.
6. Press <F1> “PULSE”. Turn on the pacemaker and set the desired pacing rate and amplitude. Start sending pulses. The Impulse 4000 displays the following information:

PACER PULSE:	Internal	50Ω
Amp = 103.2 mA	Pulse rate = 105 PPM	
Pwd = 18.7 mS	---Π---Π---Π---Π---Π-	
HOLD		TEST

<F1>

<F2>

<F3>

<F4>

<F5>

where:

Amp = Amplitude in milliamperes (mA).

Pwd = Pulse width in milliseconds (ms).

Pulse rate = Pulse rate in pulses per minute (PPM).

---Π---Π-- = Visual representation of the pulse rate (not calibrated), where “Π” is the pulse.

7. Incoming pulses are measured, the data is updated, and then the parameters are displayed. To print the test data or send it to the serial port, press <F1> “HOLD.” This freezes the test data. Select <F4> “SERIAL” or <F5> “PRINT”.
8. To release the hold and continue measuring incoming pulses, press <F1> “REL” (release).

### Self-Test Feature

Press <F5> "TEST" to input a test pulse at approximately 100 mA.


### Viewing Real-Time Waveform Output

The pacemaker pulse waveforms can be viewed on an oscilloscope using this real-time output in a manner similar to viewing the defibrillator discharge pulse. The ratio of displayed voltage to actual pacemaker output current is as follows:

<i>Pacemaker Voltage (displayed)</i>	<i>Pacemaker Current (actual)</i>
1 V	40 mA

To view waveform output in real time:

1. Connect a BNC cable from the real-time output on the left side of the Impulse 4000 to the oscilloscope. A sample printout is shown below:

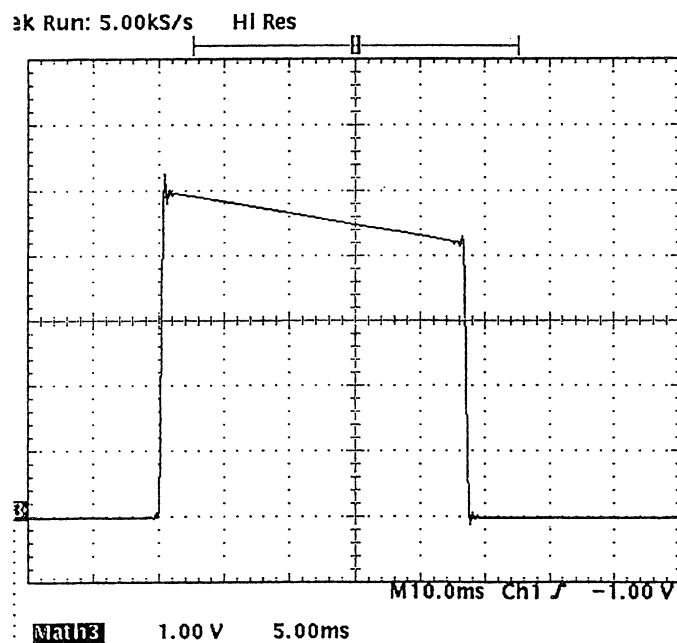

*Waveform Output from an Oscilloscope*

## Measuring the Refractory Periods

Complete the following steps:

1. Connect the pacemaker output leads to the Impulse 4000 internal 50- $\Omega$  input using the optional electrode adapters or to the adapter (pacemaker plug-in) module if it is plugged into the left side of the Impulse 4000.

NOTE 1: Refer to an earlier section in this chapter *Connecting the Pacemaker to the Impulse 4000* for more information.

NOTE 2: To simplify the direct connection of the pacemaker output leads to the Impulse 4000, refer to the current DNI Nevada Price List for availability of optional electrode adapters and modules that are designed for specific manufacturers' models.

2. Connect the pacemaker's ECG cable to the Impulse 4000 top panel color-coded ECG binding posts.
3. On the pacemaker, select the pacemaker pulse rate and output level to be tested.
4. Press <F2> "PACER" from the MAIN MENU PAGE 1 on the Impulse 4000.
5. If a parallel printer is attached to the Impulse 4000, press <F5> to print a test form header. Press <F4> to send the test form header to the serial port. If no test form header is desired, press <F1> to continue.
6. Press <F1> "INT50  $\Omega$ " to select the internal 50- $\Omega$  top panel test load, or press <F2> "EXT" to select an adapter (pacemaker plug-in) module. If an adapter module is selected, it will be identified on the top line of the display. Some adapter modules have multiple test loads; if this is the case, select the desired value.
7. Press <F2> "RFRCTRY" to show the initial refractory test display:

```
PACER REFRACTORY:      Internal 50  $\Omega$ 
set pacer to demand mode,
30..200 PPM, push START when ready
START
```

<F1>

<F2>

<F3>

<F4>

<F5>

8. Place the pacemaker in the "DEMAND" mode of operation and activate the output.
9. When ready, press the Impulse 4000's <F1> "START" key.

The Impulse 4000 calculates the rate of the applied pacemaker pulse and then outputs the 1.0-mV (Lead II) haverstriangle waveform to conduct the PRP and the SRP measurements. If no pacemaker pulses are sensed, the Impulse 4000 halts the test and then shows <F1> "START" on the display. If this occurs, check all connections and controls as listed above and press <F1> "START" to restart the test.

NOTE: At low pacemaker rates, these tests can take over 30 seconds to complete.

When the measurements are complete, the Impulse 4000 displays the following information:

PACER REFRACTORY:	Internal 50 $\Omega$
PRP = 297 mS	
SRP = 282 mS	
	SERIAL PRINT

<F1>

<F2>

<F3>

<F4>

<F5>

The measurement can take up to 60 seconds to complete.

10. If a parallel printer is attached to the Impulse 4000, press <F5> to print a test form header. Press <F4> to send the test form header to the serial port. Press <ESC> once to return to "START".

## Conducting a Demand Mode Test

Complete the following steps:

1. Connect the pacemaker output leads to the Impulse 4000 internal 50- $\Omega$  input using the optional electrode adapters or to the adapter module if it is plugged into the left side of the Impulse 4000.  
NOTE 1: Refer to an earlier section in this chapter *Connecting the Pacemaker to the Impulse 4000* for more information.  
NOTE 2: To simplify the direct connection of the pacemaker output leads to the Impulse 4000, refer to the current DNI Nevada Price List for availability of optional electrode adapters and modules that are designed for specific manufacturers' models.
2. Connect the pacemaker's ECG cable to the Impulse 4000's color-coded ECG binding posts located on the top panel.
3. On the pacemaker, select the pacemaker pulse rate and output level to be tested.
4. Press <F2> "PACER" from the MAIN MENU PAGE 1 on the Impulse 4000.
5. If a parallel printer is attached to the Impulse 4000, press <F5> to print a test form header. Press <F4> to send the test form header to the serial port. If no test form header is desired, press <F1> to continue.
6. Press <F1> "INT50  $\Omega$ " to select the internal 50- $\Omega$  top panel test load, or press <F2> "EXT" to select an adapter (pacemaker plug-in) module. If an adapter module is selected, it will be identified on the top line of the display. Some adapter modules have multiple test loads; if this is the case, select the desired value.
7. Press <F3> "DEMAND" to show the initial demand mode test display:

```
PACER DEMAND:           Internal 50  $\Omega$ 
set pacer to demand mode,
30..200 PPM, push START when ready
START
```

<F1>

<F2>

<F3>

<F4>

<F5>

8. Place the pacemaker in the "DEMAND" mode of operation and activate output.

- When ready, press the Impulse 4000's <F1> "START" key.

The Impulse 4000 calculates the rate of the applied pacemaker pulse and then computes an underdrive ECG rate equal to 80 percent of the pacemaker rate. A 1.0-mV (Lead II) haverstriangle waveform is output at this underdrive rate. Observe the tracing on the ECG monitor. Ensure that the haverstriangle waveform is sensed by the pacemaker and that the selected pacemaker pulse train is not interrupted by this lower underdrive ECG rate. The demand mode display now shows:

PACER DEMAND:		Internal 50 $\Omega$		
Under = 60 BPM		Testing for pulse...		
Over = 90 BPM		--- $\Pi$ --- $\Pi$ --- $\Pi$ --- $\Pi$ --- $\Pi$ ---		
UNDER	OVER	UP	DOWN	HOLD
<F1>	<F2>	<F3>	<F4>	<F5>

NOTE: You may have to adjust the amplitude and lead settings on the ECG monitor to be able to properly view the signal.

If no pacemaker pulses are sensed, the Impulse 4000 halts the test and then shows <F1> "START" on the display. If this occurs, check all connections and controls as listed above. Press <F1> "START" to restart the test.

- Press <F2> to output the overdrive ECG, which is equal to 120 percent of the applied pacemaker pulse. The 1.0-mV (Lead II) haverstriangle waveform is now output at this higher overdrive rate. Observe the tracing on the ECG monitor and ensure that the haverstriangle waveform is sensed by the pacemaker. Also, verify that the selected pacemaker pulse is inhibited by this higher overdrive ECG rate.

NOTE: Make sure that the pacemaker is in the "DEMAND" mode of operation.

- Both the underdrive and overdrive ECG rates can be adjusted in 1-BPM steps using the <F3> "UP" and the <F4> "DOWN" keys.
- If you desire to print the measured pacemaker rate, the underdrive value, and the overdrive value, press <F5> "HOLD".
- Press <F5> to output values to the parallel printer. Press <F4> to send the values to the serial port.
- Press <F1> "REL" to release the held display, or press <ESC> once to return to "START".

## GENERATING ECG WAVEFORMS

The Impulse 4000 generates a wide range of ECG waveforms for testing the cardiac vigilance capabilities of defibrillators and external transcutaneous pacemaker systems that incorporate monitoring, recording, and diagnostic features.

The ECG waveform signal is available on the

- ten ECG lead-binding posts (*Impulse 4000 top panel*),
- through-the-paddles pickup (*Impulse 4000 top panel*),
- high-level ECG output (*Impulse 4000 rear panel*), and
- manikin connection (*Impulse 4000 rear panel*).

### Selecting the ECG Waveform

To generate the ECG waveform:

1. Press <F3> "ECG" from the MAIN MENU PAGE 1.
2. Select the ECG wave group:
  - <F1> "NORM"      Normal Sinus Rhythm
  - <F2> "SVARR"     Supraventricular Arrhythmias
  - <F3> "VENT1"     Ventricular Arrhythmias - Series 1
  - <F4> "VENT2"     Ventricular Arrhythmias - Series 2
  - <F5> "PACED"     Transvenous Paced Group
3. As an example, select the <F1> "NORM" ECG wave group, and the Impulse 4000 displays:

NORMAL SINUS GROUP:				
select wave:				
30	60	80	120	160>
<F1>	<F2>	<F3>	<F4>	<F5>

4. Press the "SELECT" right pointing arrow to view the next page of the display:

NORMAL SINUS GROUP:				
select wave:				
<200	240	300		
<F1>	<F2>	<F3>	<F4>	<F5>

5. Use the *ECG Waveform Parameters Table* that follows in this section to help you select a waveform.
6. For example, select 200 BPM and the following displays:

NORMAL SINUS GROUP:				
select wave:				
Normal Sinus beats at 200 BPM				
<200	240	300		
<F1>	<F2>	<F3>	<F4>	<F5>

### Transvenous Paced Feature

The ECG wave group <F5> "PACED" *Transvenous Paced Group* provides waveforms that are seen on a heart monitor when the patient has an implanted pacemaker.

1. To begin, press <F3> "ECG" from the MAIN MENU PAGE 1, then select <F5> "PACED". Menu selections of <F1> "WAVE", <F2> "ATRIAL", and <F3> "VENT" are displayed.
2. Press <F1> "WAVE" to view the possible paced ECG waveforms. Refer to the *ECG Waveform Parameters Table* that follows in this section for a description of the PACED wave group.
3. As an example, select <F2> "ASNC" (asynchronous pacemaker). Press <ESC> and the TRANSVENOUS PACED menu returns with "ASNC" ready to have its pacemaker parameters set.

The pacemaker parameters default to 100-mV amplitude and 1.0-ms width when the instrument is turned on. You can change the parameters and they remain changed until the instrument is turned off. All waveforms use the ventricular pacemaker parameters, and the AVSQ (atrioventricular sequential) waveform also uses the atrial pacemaker parameters. To set the pacemaker parameters, select <F2> "ATRIAL" or <F3> "VENT".

1. For example, complete steps 1 through 3 above, then select <F3> "VENT" to set up the ventricular pacemaker parameters for "ASNC". The following is displayed:

TRANSVENOUS PACED: ASNC		Vent		
amp = 100 mV		width = 1.0 mS		
AMP	WIDTH	DOWN	UP	AUTO
<F1>	<F2>	<F3>	<F4>	<F5>

where:

ASNC = The selected waveform (NSR 80 is the default).

amp = Amplitude in millivolts (100 mV is the default; see specifications for list of values).

width = Pulse width in milliseconds (1.0 ms is the default; see specifications for list of values).

2. Select <F1> "AMP" and adjust the amplitude using <F3> "DOWN" and <F4> "UP".
3. Select <F2> "WIDTH" and adjust the pulse width using <F3> "DOWN" and <F4> "UP".
4. Press <F5> "AUTO" to initiate automatic incrementing or decrementing of the amplitude or width fields. This function steadily changes the selected parameter every 5 seconds. It is possible to test the monitor over a wide range of waveform amplitudes and widths using this function.



ECG Waveform Parameters Table

Waveform	Wave Group (Key)	Description	Rate
Normal Sinus Rhythm (NSR)	NORM	Normal heart beats.	30 BPM 60 BPM 80 BPM 120 BPM 160 BPM 200 BPM 240 BPM 300 BPM
Atrial Fibrillation (AFIB)	SVARR (AFIB1) (AFIB2)	Rapid, irregular atrial signal with no real P waves. Irregular ventricular rate. Select COARSE (AFIB1) or FINE (AFIB2).	N/A
Atrial Flutter	SVARR (AFLUT)	Large regular P waves. Ventricular response at 5:1 for 12 seconds, 13:1 for 6 seconds, 2:1 for 6 seconds, repeating.	Irregular
Sinus Arrhythmia	SVARR (SINAR)	Normal beats but triggered at irregular rate.	From 60 to 100 BPM
1° AV Block	SVARR (1AVB)	First-degree atrioventricular block. Normal beats except with long PR interval of 0.25 seconds.	80 BPM
2° AV Block Type I	SVARR (2AVBI)	Second-degree atrioventricular block, type I, Wenckebach. Increasing PR interval from 0.22 to 0.47 seconds followed by a P wave only with no QRS response, repeated. P waves at normal 80 BPM.	80 BPM
2° AV Block Type II	SVARR (2AVBII)	Second-degree atrioventricular block, type II. Waveform similar to right bundle branch block except PR interval is 0.25 seconds. Eighteen beats followed by two missed beats, repeated.	80 BPM
3° AV Block	SVARR (3AVB)	Third-degree atrioventricular block. Normal waveforms except with a P-wave rate of 80 BPM and a QRS rate of 30 BPM running independently of each other.	80 BPM (P wave) 30 BPM (QRS rate)
Premature Ventricular Contraction (PVC) Type 1	VENT1 (PVC1)	Normal rhythm except every tenth beat is a PVC. Left focus with marked left axis deviation and concordant positivity in the V leads.	
<i>continued on the next page</i>			

**NOTE:** Normal heart rate amplitude = 1 mV

ECG Waveform Parameters Table (continued)

Waveform	Wave Group (Key)	Description	Rate
PVC Type 2	VENT1 (PVC2)	Normal rhythm except every tenth beat is a PVC. Right focus with left axis deviation and concordant negativity in the V leads.	
Multifocal PVCs	VENT1 (MF)	Normal rhythm except 2 of every 15 beats are PVCs. PVC type alternates between type 1 and type 2.	
Couplet of PVCs	VENT1 (COUP)	Two PVCs together in a series with 14 normal beats, repeated. Also called pair.	
Bigeminy	VENT1 (BIGEM)	Normal beat followed by a PVC, repeated.	
Trigeminy	VENT1 (TRIGEM)	Two normal beats followed by a PVC, repeated.	
Run of 5 PVCs	VENT1 (RUN5)	Five left-focus PVCs together in a series with eight normal beats, repeating continuously.	
Run of 11 PVCs	VENT1 (RUN11)	Ten left-focus PVCs followed by one right-focus PVC together in a series with eight normal beats, repeating continuously.	
Ventricular Rhythm 120	VENT2 (VENT)	Similar to left-focus PVCs at 120 BPM.	120 BPM
Ventricular Tachycardia	VENT2 (VT130) (VT175) (VT180) (VT185) (VT220)	Similar to left-focus PVCs at increased heart rates.	130 BPM 175 BPM 180 BPM 185 BPM 220 BPM
Ventricular Fibrillation	VENT2 (VFIB1) (VFIB2)	Irregular ventricular waveform. Coarse. Fine.	
Asystole	VENT2 (ASYS1) (ASYS2)	Irregular baseline. No beats (flat line).	
<i>continued on the next page</i>			

**NOTE:** Normal heart rate amplitude = 1 mV

ECG Waveform Parameters Table (continued)

Waveform	Wave Group (Key)	Description	Rate
Transvenous Paced	PACED	Pacemaker waveforms. The AV sequential waveform uses both pacers. All others use the ventricular pacer which triggers a wide QRST similar to LBBB since the ventricular pacer is in the right ventricle. The pacemaker rate is 75 BPM.	
	(NSR)	Normal Sinus Rhythm.	80 BPM
	(ASNC)	Asynchronous at 75 BPM continuously paced.	75 BPM
	(DEM1)	Series of 40 paced beats and 20 normal beats. Pacer starts when normal beat is 20% late and stops when normal beat synchronizes to 80 BPM.	
	(DEM2)	Series of 20 paced beats and 40 normal beats. Pacer starts when normal beat is 20% late and stops when normal beat synchronizes to 80 BPM.	
	(AVSQ)	Atrioventricular sequential with dual pacer spikes. The first (atrial) spike triggers the P wave and the second (ventricular) spike triggers QRST; 0.15 seconds apart.	
	(NONC)	Asynchronous paced, except every tenth beat has no QRST response.	
	(NONF)	Nonfunction. Pacer spikes only. No QRST response.	

NOTE: Normal heart rate amplitude = 1 mV

## GENERATING ECG PERFORMANCE WAVEFORMS

Use this menu option to perform gain, damping, frequency response, and linearity tests on the ECG section of the defibrillator and external transcutaneous pacemaker. Use the manual mode to output a single waveform, or use the automated mode to sequence a series of waveforms.

### Manual Performance Mode

To output a single waveform:

1. Select <F4> "PERF" from the MAIN MENU PAGE 1.
2. Press <F1> "WAVES".
3. Press <F1> "MANUAL".

NOTE: After you press <F1> "MANUAL", the message "Zero output" displays. When you select a waveform (as in the next step), its description displays.

4. Select the desired waveform:
  - <F1> SQUARE
  - <F2> PULSE
  - <F3> SINE\*
  - <F4> TRIANGLE
  - <F5> ECG\*

NOTE 1: Refer to the *ECG Performance Waveform Parameters Table* that follows in this section for details about the waveforms.

\*NOTE 2: When you select <F3> "SINE" and <F5> "ECG", function keys <F4> "DOWN" and <F5> "UP" become available. Use these keys to manually step through the selections.

### Automated Performance Sequence Mode

Use this option to output an automated series of ECG waveforms.

1. Select <F4> "PERF" from the MAIN MENU PAGE 1.
2. Press <F1> "WAVES".
3. Select <F2> "AUTO", then press <F5> "ADV" to begin.

NOTE: The Impulse 4000 outputs waveforms as listed in the *ECG Performance Waveform Parameters Table* that follows in this section.

### Reference Lead

Use this option to select the lead that is to be referenced at 1 mV. Your selection can be Lead I or Lead II and it is stored permanently in EEPROM nonvolatile memory. This selection is only available for ECG performance waveforms as described in this section. The factory default selection is Lead II.

When <b>Lead I</b> is referenced at 1.0 mV, Lead II is                    1.5 mV Lead III is                    0.5 mV V leads are                    1.0 mV	When <b>Lead II</b> is referenced at 1.0 mV, Lead I is                        0.7 mV Lead III is                      0.3 mV V leads are                      1.0 mV
---	---

1. Select <F4> "PERF" from the MAIN MENU PAGE 1.
2. Press <F1> "WAVES".
3. Select <F3> "LEAD", then press <F3> "I" or <F4> "II".
4. Press <F5> "STORE". Press <ESC> once to return to the "WAVES" menu and twice to return to the "PERF" menu.

ECG Performance Waveform Parameters Table

Waveform	Wave Group <Key>	Manual Performance Mode Amplitude refers to the reference lead signal	Automated Performance Sequence Mode
Square	SQUARE <F1>	2 Hz, 1-mV amplitude.	Outputs continuously; press <F5> "ADV" to advance.
Pulse	PULSE <F2>	4 s, 1-mV amplitude.	Outputs once for 4 seconds and then automatically advances.
Sine	SINE <F3>	The following are available, all at 1-mV amplitude: 0.05, 0.5, 1, 10, 25, 30, 40, 50, 60, 100, 125, and 150 Hz; and 1 kHz. (NOTE: 1 kHz is a square wave.)	Outputs the following sine waves, all at 1-mV amplitude, for 2 seconds each: 1, 10, 30, 40, 50, 60, and 100 Hz; and 1 kHz; then automatically advances.
Triangle	TRIANGLE <F4>	2 Hz, 1-mV amplitude.	Outputs continuously; press <F5> "ADV" to advance.
ECG (normal sinus rhythms)	ECG <F5>	The following are available, all at 1-mV amplitude: 30, 60, 120, and 240 BPM.	<p>First, a 60-BPM waveform is output at 1-mV amplitude. This is output continuously to allow the monitor to settle down.</p> <p>To continue, press &lt;F5&gt; "ADV".</p> <p>Next, the following waveforms are output for 20 seconds each in the sequence shown: 30, 60, 120, 240, and 60 BPM.</p> <p>End of the automated performance sequence; returns to PERFORMANCE WAVE menu. Press &lt;F2&gt; "AUTO" to begin this sequence again.</p> <p>NOTE: Press &lt;F5&gt; "(ADV)" to skip segments of this sequence if necessary.</p>

## R-Wave Detector Testing

The Impulse 4000 generates an R wave that is used to determine the threshold of the ECG device. The R-wave waveform can be precisely adjusted in both amplitude and width to simulate the range of the normal sinus rhythm R-wave complex. R-wave amplitude refers to the Lead II signal.

Complete the following steps to generate an R wave:

1. Connect the ECG leads to the Impulse 4000.
2. Select <F4> "PERF" from the MAIN MENU PAGE 1.
3. Press <F2> "RDETECT".
4. Press <F1> "AMP" or <F2> "WIDTH". For settings, refer to the table below. Press <ESC> to change between the amplitude and width parameter settings.
5. Press <F3> "AUTO" and the Impulse 4000 will automatically change the values of the amplitude or width at 6-second intervals.

### *R-Wave Detector Tests*

<b>R-Wave Amplitude</b>	0.05 to 0.50 mV in 0.05-mV steps 0.50 to 5.50 mV in 0.25-mV steps Menu Entry Default: +2.0 mV
<b>R-Wave Width</b>	8 and 12 ms 20 to 200 ms in 20-ms steps Menu Entry Default: 40 ms
<b>Auto-Step Time Interval</b>	6 s

## AUTOSEQUENCE TEST

The Impulse 4000 can store up to 50 autosequences with device-specific inspection protocols. These autosequences can include a wide range of defibrillator, pacemaker, and ECG tests. The first 26 autosequences are factory-initialized for selected device manufacturers' models. The first 18 of these selections comprise defibrillator-only devices, the next 8 comprise combination defibrillator/pacemaker devices, and the remaining 24 are exclusively reserved for your own customized protocols. If desired, you can program any of the 50 autosequences with your own customized protocols. However, the first 26 autosequences revert to the factory default values whenever the instrument is reinitialized and the rest of the autosequences are erased.

Each autosequence is identified by an alphanumeric entry (maximum of six digits). In many cases, a similar designation is used for several autosequences. To help you identify the correct autosequence for the equipment under test, all the factory-initialized autosequences with pacemaker tests contain the suffix "P" or "PM". The "P" suffix is reserved for pacemaker tests using the internal 50- $\Omega$  test load. The "PM" suffix is reserved for pacemaker tests using a specific adapter (pacemaker plug-in) module.

For example,

- "LP10" is for the Physio-Control Model LIFEPAK 10© defibrillator tests only.
- "LP10P" adds a series of pacemaker tests using the internal 50- $\Omega$  test load.
- "LP10PM" upgrades the pacemaker tests with the factory-specified 700- $\Omega$  test load provided by the DNI Nevada Adapter Module TQA-9.

## Running Autosequences

To run an autosequence:

1. Refer to the *Factory-Initialized Autosequence Tables* that follow in this section to determine the correct autosequence to run for the equipment under test. Use the defibrillator paddle contacts, disposable defibrillator/pacemaker electrode adapters, and/or the listed adapter module to conduct these tests. If desired, connect a printer/serial device to the Impulse 4000 for a hard copy record of the autosequence.
2. Select <F5> "AUTO" from the Impulse 4000's MAIN MENU PAGE 1.
3. Use the <right arrow> and <left arrow> "SELECT" keys to scroll through and locate the autosequence.
4. To begin, press the function key (<F1> through <F5>) beneath the desired autosequence.
5. Follow the displayed operating instructions to conduct the various test steps.

NOTE 1: If any of the preprogrammed test limits are exceeded, you are prompted to either rerun that particular test step or continue with the autosequence. If you rerun the test and the test result is within limits, the Impulse 4000 stores the new test result. When you view or output the autosequence test record, a pound sign (#) marks the failed test steps.

NOTE 2: The Impulse 4000 does not retain the autosequence test record if you either press the <ESC> key or turn it off.

*continued on the next page*

To run an autosequence (*continued*):

6. After you've conducted all the test steps, you can access the test record as follows:
  - a. **View the autosequence test record.** Press <F1> "VIEW" to view the result of each test step. Press <F5> "ADV" to advance through the steps.
  - b. **Print the autosequence test record.** Press <F5> "PRINT" to send the autosequence test record to a parallel printer.
  - c. **Send the autosequence test record to a serial device.** Press <F4> "SERIAL" to send the autosequence test record to a serial device.

NOTE : When you view or output the autosequence test record, a pound sign (#) marks the failed test steps.

7. Refer to the sample printouts that follow for information about the autosequence "HPXLPM". These printouts were generated by inspecting the Hewlett Packard Codemaster XL+ defibrillator/pacemaker with the Impulse 4000 using DNI Nevada Adapter Module TQA-12.



**Sample Printouts for the Hewlett Packard Model Codemaster XL+ Defibrillator**

Autosequence: "HPXLPM" Defibrillator/Pacemaker  
 Adapter Module: Model TQA-12

*Program Sequence Printout*

```

IMPULSE 4000          DNI NEVADA
DATE: 03/13/95      TIME: 02:24:43
SEQUENCE: HPXLPM    TYPE: DEFIB/PACER
ENERGY LEVEL TESTS
  1.      2 J
  2.      3 J
  3.      5 J
  4.      7 J
  5.     10 J
  6.     20 J
  7.     30 J
  8.     50 J
  9.     70 J
 10.    100 J
 11.    150 J
 12.    200 J
 13.    300 J
 14.    360 J
+LIMIT (%)      15
-LIMIT (%)      15

VFIB?          NO

MAX ENERGY?   YES
MAX LEVEL      360 J
MAX +LIMIT     385 J
MAX -LIMIT     335 J

CARDIO?        YES
ENERGY LEVEL TESTS
  1.     100 J
  2.     100 J
  3.     100 J
+LIMIT (%)     15
-LIMIT (%)     15

PERF WAVES?    YES
    
```

*Test Results Printout*

```

IMPULSE 4000          DNI NEVADA
DATE: 03/13/95      TIME: 02:23:57
SEQUENCE: HPXLPM    TYPE: DEFIB/PACER
OP CODE: MCB          CN: CN0005
MANF: HP             MODEL: Codemaster XL+
SERIAL #A123456     LOC: CCU
ENERGY LEVEL TESTS (+15/-15% or ±0.7J)
SET LEVEL           ENERGY
(J)                (J)
  2                 2.1
  3                 3.1
  5                 5.3
  7                 7.1
 10                10.3
 20                20.8
 30                30.8
 50                51.1
 70                70.1
100                100.0
150                150.7
200                201.8
300                302.0
360                362.6
MAX ENERGY        359.2 J (385/335)
TIME TO CHARGE:    3 Seconds
CARDIOVERSION TESTS (+15/-15% or ±0.7J)
SET LEVEL           ENERGY     DELAY
(J)                (J)         (mS)
 100                103.9        23
 100                104.8        23
 100                105.0        22

COMMENTS: _____
NEXT TEST DUE DATE: _____
    
```

**Sample Printouts for the Hewlett Packard Model Codemaster XL+ Pacemaker**

Autosequence: "HPXLPM" Defibrillator/Pacemaker  
 Adapter Module: Model TQA-12

*Program Sequence Printout*

```

IMPULSE 4000          DNI NEVADA
DATE: 03/13/95      TIME: 02:24:44
SEQUENCE: HPXLPM  TYPE: DEFIB/PACER
PACER MODULE: TQA-12 HP
PULSE MODE TESTS
  1. 400OHMS 40PPM 30mA
  2. 400OHMS 50PPM 30mA
  3. 400OHMS 60PPM 30mA
  4. 400OHMS 70PPM 30mA
  5. 400OHMS 80PPM 30mA
  6. 400OHMS 90PPM 30mA
  7. 400OHMS 100PPM 30mA
  8. 400OHMS 110PPM 30mA
  9. 400OHMS 120PPM 30mA
 10. 400OHMS 130PPM 30mA
 11. 400OHMS 140PPM 30mA
 12. 400OHMS 150PPM 30mA
 13. 400OHMS 160PPM 30mA
 14. 400OHMS 170PPM 30mA
 15. 400OHMS 180PPM 30mA
 16. 400OHMS 80PPM 60mA
 17. 400OHMS 80PPM 100mA
 18. 400OHMS 80PPM 140mA
 19. 400OHMS 80PPM 180mA
 20. 400OHMS 80PPM 200mA
+-LIMITS (%)      5      10

ASNC MODE?  YES
ASNC MODE TEST
  1. 400OHMS 80PPM      20%
DEMAND MODE?  YES
DEMAND MODE TESTS
  1. 400OHMS 80PPM
OVERDRIVE (%) 20
UNDERDRIVE (%) 20

REFRACTORY?  NO
    
```

*Test Results Printout*

```

IMPULSE 4000          DNI NEVADA
DATE: 03/13/95      TIME: 02:23:59
SEQUENCE: HPXLPM  TYPE: DEFIB/PACER
OP CODE: MCB          CN: CND005
MANF: HP              MODEL: Codemaster XL+
SERIAL #A123456      LOC: CCU
PACER MODULE: TQA-12 HP
PULSE MODE TESTS (RATE ±5%)
  (AMPLITUDE ±10% OR ±5mA)
  LOAD      SET LEVEL  RATE  SET LEVEL  AMP
  (OHMS)    (PPM)      (PPM) (mA)      (mA)
  400        40         40   30        29.6
  400        50         50   30        29.6
  400        60         60   30        29.6
  400        70         70   30        29.6
  400        80         80   30        29.6
  400        90         91   30        29.6
  400       100        100  30        29.6
  400       110        111  30        29.6
  400       120        121  30        29.6
  400       130        132  30        29.6
  400       140        141  30        29.6
  400       150        152  30        29.6
  400       160        162  30        29.6
  400       170        170  30        29.6
  400       180        181  30        29.6
  400        80         80   60        59.5
  400        80         80  100       99.8
  400        80         80  140      140.1
  400        80         80  180      181.0
  400        80         80  200      202.1

ASNC TESTPASSED(80PPM/96PPM)
DEMAND MODE TESTS (20/20%)
  LOAD      SET LEVEL  RESULT
  (OHMS)    (PPM)
  400        80      PASSED

COMMENTS: _____
NEXT TEST DUE DATE: _____
    
```

*This page intentionally blank.*

Chapter 3 - Operating Instructions

Factory-Initialized Autosequence Table - Defibrillator

Autosequence	Manufacturer/ Model	Energy Level Tests	+ Limit (%)			- Limit (%)			V-FIB On?			Max Energy?			Max + Limit			Max - Limit			Cardio Energy Level Tests			+ Limit (%)			- Limit (%)			Perf Waves?		
LP4	Physio-Control LIFEPAK 4	10, 25, 50, 100, 200, 300, 400, 450	15	15	N	450	480	418	100	100	100	10	10	Y																		
LP5	Physio-Control LIFEPAK 5	20, 50, 100, 200, 300, 360	15	15	N	360	396	324	100	100	100	10	10	Y																		
LP6	Physio-Control LIFEPAK 6	5, 10, 20, 30, 50, 100, 200, 300, 400	15	15	N	400	428	372	100	100	100	10	10	Y																		
LP6S	Physio-Control LIFEPAK 6S	5, 10, 20, 30, 50, 100, 150, 200, 300, 360	15	15	N	360	385	335	100	100	100	10	10	Y																		
LP7	Physio-Control LIFEPAK 7	5, 10, 20, 30, 50, 100, 200, 300, 360	15	15	N	360	385	335	100	100	100	10	10	Y																		
LP8	Physio-Control LIFEPAK 8	2, 5, 9, 10, 20, 30, 50, 100, 150, 200, 300, 360	15	15	N	360	385	335	100	100	100	10	10	Y																		
M/D3	Datascope M/D3	5, 10, 20, 35, 50, 75, 100, 150, 200, 300, 400	15	15	N	400	440	360	100	100	100	10	10	Y																		
HP660	Hewlett Packard 78660A	5, 10, 20, 40, 60, 100, 150, 200, 250, 300, 360	15	15	N	360	400	330	100	100	100	10	10	Y																		
NK7K	Nihon Kohden 7000	3, 5, 10, 20, 30, 50, 70, 100, 150, 200, 300, 360	15	15	N	360	396	324	100	100	100	10	10	Y																		
HS2K	Laerdal Heart Start 2000	200, 200, 360, 200, 200, 360	15	15	Y	0	0	0	0	0	0	10	10	N																		
AOLOWN	American Optical	5, 10, 20, 30, 40, 50, 100, 150, 200, 300, 360	15	15	N	360	414	306	100	100	100	10	10	Y																		
M/D4	Datascope M/D4	1, 8, 40, 80, 160, 240, 320	15	15	N	320	384	256	100	100	100	10	10	Y																		
M/D2	Datascope M/D2	8, 20, 30, 40, 50, 100, 200, 300, 400	15	15	N	400	480	320	100	100	100	10	10	Y																		
M/D2J	Datascope M/D2J	5, 10, 20, 40, 75, 100, 200, 300, 400, 460	15	15	N	460	506	404	100	100	100	10	10	Y																		
HP670	Hewlett Packard 78670A	5, 10, 20, 30, 50, 70, 100, 150, 200, 300, 360	15	15	N	360	414	306	100	100	100	10	10	Y																		
HP431	Hewlett Packard 43100	2, 3, 5, 7, 10, 20, 30, 50, 70, 100, 150, 200, 300, 360	15	15	N	360	414	306	100	100	100	10	10	Y																		

Factory-Initialized Autosequence Table - Defibrillator continued

Autosequence	Manufacturer/ Model	Energy Level Tests	+ Limit (%)	- Limit (%)	V-FIB On?	Max Energy?	Max + Limit	Max - Limit	Cardio Energy Level Tests	+ Limit (%)	- Limit (%)	Perf Waves?
ZOLL	Zoll PD2000	2, 3, 5, 7, 10, 20, 30, 50, 100, 150, 200, 300, 360	15	15	N	360	396	324	100, 100, 100	10	10	Y
LP10	Physio-Control LIFEPAK 10	5, 10, 20, 50, 100, 200, 300, 360	15	15	N	360	396	324	100, 100, 100	10	10	Y

Chapter 3 - Operating Instructions

Factory-Initialized Autosequence Table - *Defibrillator Data for Defibrillator/Pacer*

Autosequence	Manufacturer/ Model	Energy Level Tests	+ Limit (%)	- Limit (%)	V-FIB On?	Max Energy?	Max + Limit	Max - Limit	Cardio Energy Level Tests	+ Limit (%)	- Limit (%)	Perf Waves?
LP8P	Physio-Control LIFEPAK 8P	2, 3, 4, 5, 6, 7, 8, 9, 10, 20, 30, 50, 100, 150, 200, 300, 360	15	15	Y	360	382	338	100, 100, 100	12	12	Y
LP9P	Physio-Control LIFEPAK 9P	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 20, 30, 50, 100, 200, 300, 360	15	15	Y	360	385	335	20, 50, 100	12	12	Y
LP9PM	Physio-Control LIFEPAK 9P Module	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 20, 30, 50, 100, 200, 300, 360	15	15	Y	360	385	335	20, 50, 100	12	12	Y

Factory-Initialized Autosequence Table - *Pacer Data for Defibrillator/Pacer*

Autosequence	Manufacturer/ Model	Input Load	Pulse Mode Tests	+ Limit (%)	- Limit (%)	Asnc Mode Test	Overdrive (%)	Demand Mode Test	Overdrive (%)	Underdrive (%)	Refractory
LP8P	Physio-Control LIFEPAK 8P	Int 50Ω	50Ω, 40 PPM, 200mA	10	10	50Ω, 70 PPM	20	50Ω, 50 PPM	20	20	N
			50Ω, 50 PPM, 200mA								
			50Ω, 60 PPM, 200mA								
			50Ω, 70 PPM, 200mA								
			50Ω, 80 PPM, 200mA								
			50Ω, 90 PPM, 200mA								
LP9P	Physio-Control LIFEPAK 9P	Int 50Ω	50Ω, 60 PPM, 55mA	10	10	50Ω, 60 PPM	20	50Ω, 50 PPM	20	20	N
			50Ω, 150 PPM, 55mA								
			50Ω, 170 PPM, 55mA								
			50Ω, 160 PPM, 55mA								
			50Ω, 140 PPM, 55mA								
			50Ω, 130 PPM, 55mA								
			50Ω, 120 PPM, 55mA								
			50Ω, 110 PPM, 55mA								
			50Ω, 100 PPM, 55mA								
			50Ω, 90 PPM, 55mA								
			50Ω, 80 PPM, 55mA								
			50Ω, 70 PPM, 55mA								
			50Ω, 60 PPM, 55mA								
			50Ω, 50 PPM, 55mA								
			50Ω, 40 PPM, 55mA								
			50Ω, 60 PPM, 200mA								
			50Ω, 60 PPM, 150mA								
			50Ω, 60 PPM, 100mA								
			50Ω, 60 PPM, 130mA								
			LP9PM	Physio-Control LIFEPAK 9P Module	TQA-9						
700Ω, 150 PPM, 55mA											
700Ω, 170 PPM, 55mA											
700Ω, 160 PPM, 55mA											
700Ω, 140 PPM, 55mA											
700Ω, 130 PPM, 55mA											
700Ω, 120 PPM, 55mA											
700Ω, 110 PPM, 55mA											
700Ω, 100 PPM, 55mA											
700Ω, 90 PPM, 55mA											
700Ω, 80 PPM, 55mA											
700Ω, 70 PPM, 55mA											
700Ω, 60 PPM, 55mA											
700Ω, 50 PPM, 55mA											
700Ω, 40 PPM, 55mA											
700Ω, 60 PPM, 200mA											
700Ω, 60 PPM, 150mA											
700Ω, 60 PPM, 100mA											
700Ω, 60 PPM, 130mA											

Chapter 3 - Operating Instructions

Factory-Initialized Autosequence Table - Defibrillator Data for Defibrillator/Pacer continued

Autosequence	Manufacturer/ Model	Energy Level Tests	+ Limit (%)	- Limit (%)	V-FIB On?	Max Energy?	Max + Limit	Max - Limit	Cardio Energy Level Tests	+ Limit (%)	- Limit (%)	Perf Waves?
LP10P	Physio-Control LIFEPAK 10P	5, 10, 20, 50, 100, 200, 300, 360	15	15	Y	360	396	324	100, 100, 100	12	12	Y
LP10PM	Physio-Control LIFEPAK 10P Module	5, 10, 20, 50, 100, 200, 300, 360	15	15	Y	360	396	324	100, 100, 100	12	12	Y



Factory-Initialized Autosequence Table - Pacer Data for **Defibrillator/Pacer** continued

Autosequence	Manufacturer/ Model	Input Load	Pulse Mode Tests	+ Limit (%)		Asnc Mode Test	Overdrive (%)	Demand Mode Test	Overdrive (%)	Underdrive (%)	Refractory
LP10P	Physio-Control LIFEPAK 10P	Int 50Ω	50Ω, 40 PPM, 40mA	10	10	50Ω, 80 PPM	20	50Ω, 50 PPM	20	20	N
			50Ω, 50 PPM, 40mA								
			50Ω, 60 PPM, 40mA								
			50Ω, 70 PPM, 40mA								
			50Ω, 80 PPM, 40mA								
			50Ω, 90 PPM, 40mA								
			50Ω, 100 PPM, 40mA								
			50Ω, 110 PPM, 40mA								
			50Ω, 120 PPM, 40mA								
			50Ω, 130 PPM, 40mA								
			50Ω, 140 PPM, 40mA								
			50Ω, 150 PPM, 40mA								
			50Ω, 160 PPM, 40mA								
			50Ω, 170 PPM, 40mA								
			50Ω, 80 PPM, 60mA								
			50Ω, 80 PPM, 80mA								
			50Ω, 80 PPM, 100mA								
			50Ω, 80 PPM, 140mA								
			50Ω, 80 PPM, 180mA								
			50Ω, 80 PPM, 200mA								
LP10PM	Physio-Control LIFEPAK 10P Module	TQA-9	700Ω, 40 PPM, 40mA	10	10	100Ω, 80 PPM	20	700Ω, 80 PPM	20	20	N
			700Ω, 50 PPM, 40mA								
			700Ω, 60 PPM, 40mA								
			700Ω, 70 PPM, 40mA								
			700Ω, 80 PPM, 40mA								
			700Ω, 90 PPM, 40mA								
			700Ω, 100 PPM, 40mA								
			700Ω, 110 PPM, 40mA								
			700Ω, 120 PPM, 40mA								
			700Ω, 130 PPM, 40mA								
			700Ω, 140 PPM, 40mA								
			700Ω, 150 PPM, 40mA								
			700Ω, 160 PPM, 40mA								
			700Ω, 170 PPM, 40mA								
			700Ω, 80 PPM, 60mA								
			700Ω, 80 PPM, 80mA								
			700Ω, 80 PPM, 100mA								
			700Ω, 80 PPM, 140mA								
			700Ω, 80 PPM, 180mA								
			700Ω, 80 PPM, 200mA								

Chapter 3 - Operating Instructions

Factory-Initialized Autosequence Table - Defibrillator Data for Defibrillator/Pacer continued

Autosequence	Manufacturer/ Model	Energy Level Tests	+ Limit (%)	- Limit (%)	V-FIB On?	Max Energy?	Max + Limit	Max - Limit	Cardio Energy Level Tests	+ Limit (%)	- Limit (%)	Perf Waves?
1500PM	Marquette Model 1500 Module	5, 10, 20, 50, 100, 200, 300, 360	15	15	Y	360	385	335	100, 100, 100	12	12	Y
HPXLPM	Hewlett Packard Code Master Series	2, 3, 5, 7, 10, 20, 30, 50, 70, 100, 150, 200, 300, 360	15	15	Y	360	385	335	100, 100, 100	12	12	Y

Factory-Initialized Autosequence Table - Pacer Data for Defibrillator/Pacer continued

Autosequence	Manufacturer/ Model	Input Load	Pulse Mode Tests	+ Limit (%)	- Limit (%)	Asnc Mode Test	Overdrive (%)	Demand Mode Test	Overdrive (%)	Underdrive (%)	Refractory
1500PM	Marquette Model 1500 Module	TQA-7	300Ω, 40 PPM, 30mA	10	10	300Ω, 80 PPM	20	300Ω, 80 PPM	20	20	N
			300Ω, 50 PPM, 30mA								
			300Ω, 60 PPM, 30mA								
			300Ω, 65 PPM, 30mA								
			300Ω, 70 PPM, 30mA								
			300Ω, 75 PPM, 30mA								
			300Ω, 80 PPM, 30mA								
			300Ω, 90 PPM, 30mA								
			300Ω, 100 PPM, 30mA								
			300Ω, 110 PPM, 30mA								
			300Ω, 120 PPM, 30mA								
			300Ω, 130 PPM, 30mA								
			300Ω, 140 PPM, 30mA								
			300Ω, 150 PPM, 30mA								
			300Ω, 160 PPM, 30mA								
			300Ω, 180 PPM, 30mA								
			300Ω, 80 PPM, 50mA								
			300Ω, 80 PPM, 100mA								
300Ω, 80 PPM, 150mA											
300Ω, 80 PPM, 200mA											
HPXLPM	Hewlett Packard Code Master Series	TQA-12	400Ω, 40 PPM, 30mA	10	10	400Ω, 80 PPM	20	400Ω, 80 PPM	20	20	N
			400Ω, 50 PPM, 30mA								
			400Ω, 60 PPM, 30mA								
			400Ω, 70 PPM, 30mA								
			400Ω, 80 PPM, 30mA								
			400Ω, 90 PPM, 30mA								
			400Ω, 100 PPM, 30mA								
			400Ω, 110 PPM, 30mA								
			400Ω, 120 PPM, 30mA								
			400Ω, 130 PPM, 30mA								
			400Ω, 140 PPM, 30mA								
			400Ω, 150 PPM, 30mA								
			400Ω, 160 PPM, 30mA								
			400Ω, 170 PPM, 30mA								
			400Ω, 180 PPM, 30mA								
			400Ω, 80 PPM, 60mA								
			400Ω, 80 PPM, 100mA								
			400Ω, 80 PPM, 140mA								
400Ω, 80 PPM, 180mA											
400Ω, 80 PPM, 200mA											

Chapter 3 - Operating Instructions

Factory-Initialized Autosequence Table - Defibrillator Data for Defibrillator/Pacer continued

Autosequence	Manufacturer/ Model	Energy Level Tests	+ Limit (%)	- Limit (%)	V-FIB Op?	Max Energy?	Max + Limit	Max - Limit	Cardio Energy Level Tests	+ Limit (%)	- Limit (%)	Perf Waves?
MD300M	Medical Data Electronics (MDE) Series 300 Module	2, 3, 5, 10, 20, 30, 50, 100, 150, 200, 300, 360	15	15	Y	360	400	320	10, 50, 100	15	15	Y

Factory-Initialized Autosequence Table - *Pacer Data for Defibrillator/Pacer continued*

Autosequence	Manufacturer/ Model	Input Load	Pulse Mode Tests	+ Limit (%)	- Limit (%)	Asnc Mode Test	Overdrive (%)	Demand Mode Test	Overdrive (%)	Underdrive (%)	Refractory
MD300M	Medical Data Electronics (MDE) Series 300 Module	TQA-6	600Ω,40 PPM, 60mA 600Ω,60 PPM, 60mA 600Ω,70 PPM, 60mA 600Ω,75 PPM, 60mA 600Ω,80 PPM, 60mA 600Ω,90 PPM, 60mA 600Ω,100 PPM,60mA 600Ω,120 PPM,60mA 600Ω,140 PPM,60mA 600Ω,160 PPM,60mA 600Ω,100 PPM,60mA 600Ω,100 PPM,90mA 600Ω,100 PPM,120mA 1000Ω,60 PPM,120mA	10	10	600Ω, 100 PPM	40	600Ω, 80 PPM	20	20	N

## Programming Custom Autosequences

The CUSTOM option from the MAIN MENU PAGE 2 makes it easy to program your own autosequences. You can change a factory–initialized autosequence or create a new autosequence for a defibrillator–only, defibrillator/pacemaker combination, or pacemaker–only model.

Reset changed autosequences to factory default settings using <F3> “INIT”.

NOTE 1: Factory default defibrillator energy limits changed from 10% to 15% with firmware version 1.01. If the limits on your Impulse 4000 are not 15% and you want them to be 15%, reinitialize your instrument to factory default values as explained below.

1. Select <F2> “CUSTOM” from the MAIN MENU PAGE 2.
2. Press <F3> “INIT”.
3. Press <F1> “YES”.

NOTE 2: Reinitialization affects all 50 autosequences; the first 26 revert to the factory default values and the rest are erased.

View autosequence steps using <F2> “VIEW” and print autosequence steps using <F5> “PRINT”.

You will be prompted for different information depending on whether you are making a defibrillator or pacemaker autosequence. For combination defibrillator/pacemaker models, the Impulse 4000 prompts first for defibrillator information, then pacemaker information. Before making an autosequence, it is suggested that the parameter entries be planned using the *Autosequence Test Options Table* that follows in this chapter.

### To make a custom autosequence:

1. Select <F2> “CUSTOM” from the MAIN MENU PAGE 2.
2. Press <F1> “MAKE” to begin making the autosequence.
3. Select the autosequence to make using the <left arrow> and <right arrow> “SELECT” keys.  
NOTE: Blank autosequences begin at AS#27.
4. The Impulse 4000 prompts for the autosequence name. Assign the autosequence a name up to six characters.
  - a. Use the <F3> “DOWN” and <F4> “UP” keys to change the character displayed. Letters are followed by symbols, then numerals.
  - b. Use the <left arrow> and <right arrow> “SELECT” keys to move left and right in the name.
  - c. When finished, press <F5> “ENTER”.

5. Select the type of instrument this autosequence is for

Defibrillator–Only . . . . .	<F1> “DEFIB”
Defibrillator/Pacemaker Combination . . . . .	<F2> “DFB/PCR”
Pacemaker . . . . .	<F3> “PACER”

## Making Defibrillator Autosequences

1. Complete steps 1 through 4 in the previous section *Programming Custom Autosequences*, and select <F1> "DEFIB".
2. **Energy Level Tests.** Select up to 20 separate energy levels to test in sequence: "Step 1", "Step 2", "Step 3", and so on.
  - a. For each step, set the energy level from 1 to 500 J. Use the <F4> "UP" and <F3> "DOWN" keys to increase and decrease the energy level (press continuously to advance rapidly).
  - b. To move to the next step, press <F2> "NEXT", or press <F1> "PREV" to return to a previous step.
  - c. When you have programmed all energy levels to test, press <F5> "END".
  - d. Next, select the upper (+) and lower (-) level limits as a percentage: for example, +10%, -10%. This programs the Impulse 4000 to flag any output that is outside these limits.
  - e. Use <F2> "-LIM" to select a lower limit and <F1> "+LIM" to select an upper limit. Both limit ranges are 0% to 99%.
  - f. Use the <F4> "UP" and <F3> "DOWN" keys to increase and decrease the energy level limits.
  - g. When you are done setting both upper and lower limits, press <F5> "ENTER".
3. **V-FIB for Energy Tests.** Press <F1> "YES" to have a ventricular fibrillation ECG waveform output for energy level tests and maximum energy tests. Or press <F2> "NO" to output the previous pulse playback waveform.
4. **Max Energy Test.** Press <F1> "YES" to perform a maximum energy test or <F2> "NO" to bypass the maximum energy test. If you answer "YES," you can enter maximum energy high and low test limits from 1 to 999 J.
5. **Cardio Energy Level Tests.** Press <F1> "YES" to perform cardioversion tests or <F2> "NO" to bypass the cardioversion test. If you are performing cardioversion tests, you will be prompted for the information in (a) and (b) below:
  - a. Enter up to three cardioversion energy levels to test; from 1 to 500 J. Press <F5> "END" when done.
  - b. Select the cardioversion energy level limits. Use <F2> "-LIM" to select a lower limit and <F1> "+LIM" to select an upper limit. Use the <F4> "UP" and <F3> "DOWN" keys to increase and decrease the energy level limits. Press <F5> "ENTER" when done. Both limit ranges are 0% to 99%.
7. **Performance Waveforms.** Press <F1> "YES" to run performance waveforms or <F2> "NO" to bypass them.
8. **Saving the Custom Autosequence.** Press <F1> "YES" to save your custom autosequence, or <F2> "NO" to exit without saving.
9. The Impulse 4000 displays "END MAKE" and returns to the custom autosequence menu.

## Making Defibrillator/Pacer Autosequences

1. Complete steps 1 through 4 in the section *Programming Custom Autosequences*, and select <F2> "DFB/PCR".
2. Use the instructions above, *Making Defibrillator Autosequences*.
3. Use the instructions that follow next, *Making Pacer Autosequences*.

NOTE: The Defibrillator/Pacer autosequence includes first, all steps from the Defibrillator Autosequence series and then, second, all steps from the Pacer Autosequence series.

## Making Pacer Autosequences

1. Complete steps 1 through 4 in the section *Programming Custom Autosequences*, and select <F3> "PACER".
2. **Pacer Test (Input) Load.** Select the external adapter (pacemaker plug-in) module you are using. Select "INTERNAL" if you are not using a module.
3. **Pulse Mode Tests.** Select up to 20 pulse-mode pacemaker rates to test in sequence: "Step 1", "Step 2", "Step 3", and so on.
  - a. For each step, set the rate from 30 to 200 PPM (in 1-PPM increments). Use the <F4> "UP" and <F3> "DOWN" keys to increase and decrease the rate (press continuously to advance rapidly).
  - b. Press <F2> "NEXT" (moves the cursor). Set the amplitude from 10 to 250 mA (in 1-mA increments). Press <F2> "NEXT" (begins next step). Press <F1> "PREV" to return to a previous step and/or parameter.

NOTE: If you are using a module that has more than one load, use the "UP" and "DOWN" keys to select the required load for the test. Use the "NEXT" key to move the cursor to the rate parameter.
  - c. When you have programmed all rates and amplitudes, press <F5> "END".
  - d. Select the rate and amplitude limits as percentages: for example, Rate Limit (%) = 5 (press <F1> "RATE")\*, Amp Limit (%) = 5 (press <F2> "AMP")\*. This programs the Impulse 4000 to flag any output that is outside these limits. The limit range is 0% to 99% (in 1% increments) and applies to all steps in this mode. When both limits are set, press <F5> "ENTER".

\*NOTE: Use the <F4> "UP" and <F3> "DOWN" keys to increase and decrease the limits.
4. **Async Mode Test.** Press <F1> "YES" to enter the asynchronous mode test parameters for the pacemaker or <F2> "NO" to bypass them.
  - a. Use <F1> "RATE" to select rate limits from 30 to 200 PPM (in 1-PPM increments). Use the <F4> "UP" and <F3> "DOWN" keys to increase and decrease the rate.
  - b. Use <F2> "OVER" to select the overdrive limits from 10% to 50% (in 1% increments). Use the <F4> "UP" and <F3> "DOWN" keys to increase and decrease the overdrive limits.
  - c. When both parameters are set, press <F5> "ENTER".
5. **Demand Mode Test.** Press <F1> "YES" to perform demand mode pacemaker tests or <F2> "NO" to bypass them. If you answer "YES," you can enter demand mode pacemaker rates for up to 20 steps.
  - a. For each step, set the rate from 30 to 200 PPM (in 1-PPM increments). Use the <F4> "UP" and <F3> "DOWN" keys to increase and decrease the rate.
  - b. To begin the next step, press <F2> "NEXT", or press <F1> "PREV" to return to a previous step.

NOTE: If you are using a module that has more than one load, use the "UP" and "DOWN" keys to select the required load for the test. Use the "NEXT" key to move the cursor to the rate parameter.
  - c. When you have programmed all rates necessary for your test, press <F5> "END".
  - d. Select the demand mode pacer drive limits as percentages: for example, Overdrive (%) = 10 (press <F1> "OVER")\*, Underdrive (%) = 10 (press <F2> "UNDER")\*. This programs the Impulse 4000 to flag any output that is outside these limits. The limit range is 10% to 50% and applies to all steps in this mode. When done with both limits, press <F5> "ENTER".

\*NOTE: Use the <F4> "UP" and <F3> "DOWN" keys to increase and decrease the limits.
6. **Refractory Tests.** Press <F1> "YES" to perform the refractory mode pacemaker tests: pulsed-refractory period and sensed-refractory period (compatible with pacemaker rate ranges of 30 to 100 PPM), or <F2> "NO" to bypass them.
7. **Saving the Custom Autosequence.** Press <F1> "YES" to save the custom autosequence, or <F2> "NO" to exit without saving.
8. The Impulse 4000 displays "END MAKE" and returns to the custom autosequence menu.



## Viewing Autosequences

View steps in any existing autosequence.

1. Select <F2> "CUSTOM" from the MAIN MENU PAGE 2.
2. Press <F2> "VIEW".
3. Select the autosequence you wish to view by pressing the corresponding function key. Use the <left arrow> and <right arrow> "SELECT" keys to see all autosequence selections. The Impulse 4000 displays the autosequence name and type.
4. Press <F5> "ADV" to advance to the next step in the autosequence.

## Printing Autosequences

Print the steps in any existing autosequence using a parallel printer.

1. Select <F2> "CUSTOM" from the MAIN MENU PAGE 2.
2. Press <F5> "PRINT".
3. Select the autosequence you wish to print by pressing the corresponding function key. Use the <left arrow> and <right arrow> "SELECT" keys to see all autosequence selections. The Impulse 4000 displays the autosequence name and prints the selected autosequence.

Print the steps in any existing autosequence using a serial printer.

1. Select <F2> "CUSTOM" from the MAIN MENU PAGE 2.
2. Press <F4> "SERIAL".
3. Select the autosequence you wish to print by pressing the corresponding function key. Use the <left arrow> and <right arrow> "SELECT" keys to see all autosequence selections. The Impulse 4000 displays the autosequence name and prints the selected autosequence.

## Initializing Autosequences

Initialize all existing autosequences to factory default values.

NOTE 1: Initialization affects all 50 autosequences; the first 26 revert to factory default values and the rest are erased.

NOTE 2: All user-programmed autosequences are erased.

To initialize autosequences:

1. Select <F2> "CUSTOM" from the MAIN MENU PAGE 2.
2. Press <F3> "INIT".
3. Press <F1> "YES" to overwrite current autosequence definitions with factory default values.
4. Press <F2> "NO" to bypass initialization.

Autosequence Test Options Table

DEFIBRILLATOR		PACER	
<b>Energy Levels</b>	1 to 20 steps. 0 to 500 J. Must enter a value other than zero to move to next step.	<b>Pacer Test Load</b>	Internal 50 $\Omega$ or External Pacer Module (TQA-##).
<b>Energy Level Limits</b>	+ Limit: 0% to 99%. - Limit: 0% to 99%.	<b>Pulse Mode Rate &amp; Amplitude</b>	1 to 20 steps. Load: Module dependent. Rate: 30 to 200 PPM. Amplitude: MIN - 10 mA, MAX - 250 mA.
<b>V-FIB for Energy Tests?</b>	YES: Outputs ventricular fibrillation ECG waveform for energy level tests and maximum energy test. NO: No ECG waveform.	<b>Rate &amp; Amplitude Limits</b>	Rate Limit: 0% to 99%. Amplitude Limit: 0% to 99%.
<b>Perform Max Energy Test?</b>	YES: Performs maximum energy test. NO: Bypasses maximum energy test.	<b>Perform Async Mode Tests?</b>	YES: Performs asynchronous mode pacer tests; prompts for rates shown below. NO: Bypasses async mode pacer tests.
<b>Max Energy Test Limits</b>	Sets high and low limits. 0 to 999 J.	<b>Asnc Mode Rate &amp; Overdrive</b>	One step. Rate: 30 to 200 PPM. Overdrive: 10% to 50%.
<b>Perform Cardioversion Test?</b>	YES: Performs cardioversion test. NO: Bypasses cardioversion test.	<b>Perform Demand Mode Pacer Tests?</b>	YES: Performs demand mode pacer tests; prompts for rates shown below. NO: Bypasses demand mode pacer tests.
<b>Cardio Energy Levels</b>	1 to 3 steps. 0 to 500 J. Must enter a value other than zero to move to next step.	<b>Demand Mode Pacer Rates</b>	1 to 5 steps. Rate: 30 to 200 PPM.
<b>Cardio Energy Level Limits</b>	+ Limit: 0% to 99%. - Limit: 0% to 99%.	<b>Demand Mode Drive Limits</b>	Overdrive: 10% to 50%. Underdrive: 10% to 50%.
<b>Run Performance Waveforms?</b>	YES: Outputs ECG sequence. NO: Bypasses ECG sequence.	<b>Refractory Mode Tests?</b>	YES: Performs refractory mode tests: Pulsed-Refractory Period and Sensed-Refractory Period. NO: Bypasses refractory mode tests.
<b>OK to Save?</b>	YES: Saves autosequence. NO: Discards autosequence.	<b>OK to Save?</b>	YES: Saves autosequence. NO: Discards autosequence.

## TRAINING

The Impulse 4000 has several training scenarios that are interactive with the defibrillator, transcutaneous pacemaker, and manikins such as the Armstrong Medical Defib Chris Clean™ and the Laerdal Defib–Anne™.

This instrument outputs ECG waveforms that simulate real–life situations.

Three types of interactive—real–life—training scenarios are available:

- Emergency Ventricular Defibrillation
- Elective Cardioversion
- Transcutaneous Pacemaker

The Impulse 4000 outputs a simulated ECG waveform that, in turn, responds to

- a defibrillator discharge at the Impulse 4000 defibrillator paddle contacts.
- a defibrillator discharge at the defibrillator pick–up plates of the connected manikin.
- an input of a transcutaneous pacemaker pulse via the electrode adapters at the Impulse 4000 defibrillator paddle contacts or the connected adapter (pacemaker plug-in) module; refer to the *Optional Accessories* section in Chapter 1.

### Using Training Scenarios

The training scenarios may require use of Impulse 4000 accessories such as the defibrillator electrode adapters, pacemaker adapters, and adapter (pacemaker plug-in) modules.

For more information, refer to these sections in this manual: *Connecting the Defibrillator to the Impulse 4000* in Chapter 1 (SAFETY CONSIDERATIONS section); *Connecting the Pacemaker to the Impulse 4000 and Adapter (Pacemaker Plug-In) Modules* in Chapter 3 (TESTING AN EXTERNAL TRANSCUTANEOUS PACEMAKER section); or the current DNI Nevada Price List.

Common features are programmed in the training scenarios. These features appear on the Impulse 4000 display as follows: “NEXT”, “INHIBIT”, “CONVERT”, “END”, and “ESCAPE”.

Explanations of common training scenario features follow:

- <F1> “NEXT” - Returns to the waveform selection menu within the training scenario.
- <F2> “INHIBIT” - Allows the instructor to introduce randomness, or a real–life nonconversion simulation into a training scenario. When the inhibit feature is used, the Impulse 4000 senses the defibrillator pulse or pacemaker pulse and does not respond to it.

*For example:* The instructor can press the inhibit button in several successive defibrillator training scenarios, each time requesting the student to increase the energy level. At the instructor’s discretion, the <F2> “INHIBIT” key can be pressed again to turn the inhibit feature off. When the inhibit feature is turned off, the Impulse 4000 responds to the defibrillator input (conversion is not inhibited).

Also, if the instructor notices that the student is making an error, he or she can stop the test by pressing <F2> “INHIBIT”.

*continued on the next page*

## Chapter 3 - Operating Instructions

---

Explanations of common training scenario features follow (*continued*):

- <F3> "CONVERT" - Provides a simulated defibrillator pulse. If a defibrillator is not available, use this feature to show students ECG waveforms and the effect that an applied "energy pulse" has on a waveform.

NOTE: A properly timed "energy pulse" for recovery (conversion) is output in the elective cardioversion scenario.

- <F5> "END" - Ends a particular training session. At this time, press <F4> "SERIAL" to transmit the training session data via the serial port or <F5> "PRINT" to print the results of the training session.

NOTE: An improper defibrillation automatically ends a training session.

Below is a sample printout:

IMPULSE 4000	DNI NEVADA	
DATE: 03/16/94	TIME: 13:08:45	
DEFIB SKILLS	EMERGENCY	
STUDENT:	_____	
INSTRUCTOR:	_____	
DEVICE MAN:	MODEL:	_____
SERIAL #:	_____	
TIME	ACTIVITY	
00:00	NSR 80 BPM	
00:00	Failure Sequence Initiated	
00:13	VFIB1	
01:43	Defib Pulse - E = 109.6 J	
01:43	Converted	
02:00	NSR 80 BPM	
EVALUATION:	PASS	FAIL
Verbal Skills	_____	_____
Equipment Skills	_____	_____
Safety Procedures	_____	_____
Protocol/Format	_____	_____
Overall Assessment	_____	_____
CPR/Ventilations	_____	_____
CPR/Compressions	_____	_____
COMMENTS:	_____	
_____		
_____		
DEFIB Student:	_____	
Re-Certification Date:	_____	

- <ESC> "ESCAPE" - Returns to training scenario selection. Repeatedly pressing <ESC> returns to previous menus.

## Interactive Defibrillator Training

The Impulse 4000 is well-suited for use as a defibrillator training tool. Both types of interactive defibrillator training scenarios, Emergency Ventricular Defibrillation and Elective Cardioversion, are covered in this section. Ensure that the proper connections have been made; refer to *Connecting the Defibrillator to the Impulse 4000* in Chapter 1 (SAFETY CONSIDERATIONS section).

### Emergency Ventricular Defibrillation

To enter this mode:

- Select <F1> “TRAIN” from the MAIN MENU PAGE 2.
- Press <F1> “DEFIB”, then press <F1> “EMRG”.

Use emergency ventricular defibrillation when the patient’s heart is in a failing condition. Press <F1> “FAIL”, then <F1> “START” and the Impulse 4000 outputs a sequence of ECG waveforms that simulates a failing heart condition and subsequent revival if defibrillation succeeds. The failure sequence is NSR80, PVC1, NSR80, PVC1, VFIB1. Defibrillation must occur during the VFIB1 period (two minutes) for it to succeed.

**Student Training Aid.** The remaining function keys on the “DEFIB EMRG” menu offer these simulations: “VFIB1”, “VFIB2”, “VTACH”, and “NORM” (NSR 80).

- When you press <F2> “VFIB1”, <F3> “VFIB2”, or \*<F4> “VTACH” and then press <F1> “START”, the selected ECG waveform runs for two minutes and then changes to an asystole waveform. If the student does not defibrillate correctly during the two-minute period, the message “IMPROPER DEFIBRILLATION” displays and the training session terminates.  
\*NOTE: After you press <F4> “VTACH”, the simulations “VT130”, “VT175”, “VT180”, “VT185”, and “VT220” are offered.
- When you press <F5> “NORM” and then press <F1> “START”, a normal sinus rhythm of 80 BPM outputs continuously. Defibrillation at this time gives the message “IMPROPER DEFIBRILLATION” and the training session terminates.

### Elective Cardioversion

To enter this mode:

- Select <F1> “TRAIN” from the MAIN MENU PAGE 2.
- Press <F1> “DEFIB”, then press <F2> “CARDIO”.

Use elective cardioversion when a synchronized defibrillation is required to change or convert a patient’s irregular heartbeat to a regular heartbeat. Select <F1> “AFIB1” (coarse) or <F2> “AFIB2” (fine). The common training scenario features operate as explained previously in *Using Training Scenarios*. The features explained below are specific to the elective cardioversion mode:

- <F3> “CONVERT” - Outputs a properly timed “energy pulse”, within the delay time range, for recovery (conversion).
- <F4> “NO-SYNC” - Outputs a poorly timed “energy pulse”, outside the delay time range, that results in a ventricular fibrillation (VFIB) waveform.

The cardioversion delay time range is -120 to +120 ms from the R-wave peak. Outside of this range, synchronization does not occur and a ventricular fibrillation (VFIB) outputs.

## Interactive Transcutaneous Pacemaker Training

The Impulse 4000 is an effective training tool for instructing clinical staff in the basic use and operation of the transcutaneous pacemaker.

Four different transcutaneous pacemaker training scenarios output. These scenarios simulate typical patient ECGs that require intervention by a transcutaneous pacemaker. Run these scenarios with or without a transcutaneous pacemaker connected to the Impulse 4000. Connect a transcutaneous pacemaker to the Impulse 4000, and you can interact with the operation of the pacemaker.

NOTE: During the pacemaker scenarios, the ECG signal is available on the chest electrode plates of the attached training manikin for monitoring purposes only. If you connect the pacemaker to the manikin chest electrode plates, the Impulse 4000 and the pacemaker can't interact.

For best monitoring results, connect the pacemaker electrodes to either the 50- $\Omega$  internal test load or to the adapter (pacemaker plug-in) module, and then monitor the ECG signal using the pacemaker's 3- or 5-lead patient cable connected to the Impulse 4000's top panel ECG lead binding posts.

The Impulse 4000 connections explained above and a manikin attached to the Impulse 4000 interact in the defibrillation scenarios only.

### 1. Connecting the transcutaneous pacemaker to the Impulse 4000.

Follow the instructions in the *Connecting the Pacemaker to the Impulse 4000* section, which is located earlier in this chapter.

NOTE: You can attach a printer or serial device to the Impulse 4000 to document the training scenario.

### 2. Beginning the pacemaker training scenario.

- Press the <right arrow> "SELECT" key from the MAIN MENU PAGE 1.
- Press <F1> "TRAIN" from the MAIN MENU PAGE 2.
- Press <F2> "PACER".

### 3. Preparing to run pacemaker training scenarios with or without a pacemaker.

#### a. Prepare to run the scenario interactively with a pacemaker.

- Press <F1> "ACTUAL".
- Press either <F1> "INT50" for the internal 50- $\Omega$  test load or <F2> "EXT" for the first (lowest resistance) test load selection of the adapter module.
- Connect the pacemaker electrodes and the ECG patient cable to the Impulse 4000.

#### b. Press <F2> "SIMULATE" to prepare to run the scenario without a pacemaker.

NOTE: If a transcutaneous pacemaker is not available and you choose <F2> "SIMULATE", you need a basic cardiac monitor (or equivalent device) to view the ECG waveform generated by the Impulse 4000.

### 4. Interacting with the pacemaker operation.

- In the "ACTUAL" mode, press <F2> "INHIBIT" to cancel (inhibit) the effect of the incoming pacemaker pulse.
- In the "SIMULATE" mode, press <F3> "CAPTURE" to mimic a paced beat.

5. Running scenarios.

- a. Press a below-listed function key and then press <F1> "START":

<F1> "ASYS"      ASYSTOLE—Flat line ECG waveform.

<F2> "BRADY"      BRADYCARDIA—Normal sinus rhythm ECG @ 30 BPM.

<F3> "DEMAND"      Normal sinus rhythm ECG @ 80 BPM that degrades to asystole on the 20th beat and then restarts to a normal sinus rhythm after 40 seconds. Set up the pacemaker in the "DEMAND" mode at a rate less than 80 PPM.

NOTE: Whenever the Impulse 4000 senses a pacemaker pulse while it is outputting a normal sinus rhythm ECG waveform, the message "PACER/PATIENT CONFLICT" flashes on its display.

This flashing message makes you aware that the pacemaker is improperly set for the simulated patient condition.

The Impulse 4000 outputs an 80-BPM normal sinus rhythm ECG waveform that degrades to an asystole waveform after 19 beats and then restarts after 40 seconds. The pacemaker must be set in the "DEMAND" mode at a pacemaker rate less than 80 PPM to properly convert the asystole waveform and sense the restart of the 80-BPM normal sinus rhythm ECG waveform.

<F4> "NONC"      NONCAPTURE—Asystole. Upon capture, every 10th ventricular paced beat is dropped.

- b. During the scenario, you can use the function keys as explained below:

- 1) **Change scenarios.** Press <F1> "NEXT" and then select another scenario.
- 2) **Stop a scenario.** Press <F5> "END" to stop a scenario.
- 3) **Print the scenario data.** Press <F5> "END" and then press <F5> "PRINT". Ensure that a parallel printer is attached to the Impulse 4000. The Impulse 4000 outputs the elapsed time indicated in its upper right display.
- 4) **Send the scenario data to the serial data port.** Press <F5> "END" and then press <F4> "SERIAL". The Impulse 4000 outputs the elapsed time indicated in its upper right display.
- 5) **Return to the earlier "ACTUAL SIMULATE" display.** Press <ESC> "ESCAPE" once.

NOTE: An automatic time-out terminates a scenario if you do not initiate intervention during any elapsed 10-minute interval. Additionally, if the maximum number of 200 events or a total scenario-elapsed time of 1 hour 40 minutes is exceeded, the scenario also terminates.

The prompt "Maximum training time exceeded" displays and you have the option to either immediately abort the selection or output the scenario log/data to an attached printer or serial device.

## MEDTESTER INTERFACE

The Impulse 4000 is designed to interface with the original medTester (one that can run an autosequence) or the medTester 5000B. When the medTester runs a defibrillator autosequence, it uses the Impulse 4000. Both the Impulse 4000 and the medTester are switched to a 2400-baud rate by this feature. When this feature is exited, the previous baud rates resume.

### Using the Impulse 4000 with the medTester

This feature enables the sending of data obtained from an Impulse 4000 after a defibrillator discharge to the medTester.

Connect an RS-232 interface cable (DNI Part # 3010-0250) from the Impulse 4000 to the medTester's COM2. Turn both instruments on.

From the medTester "DEFIB" menu, select "CASO", "LOAD", then "IMPULSE". *The medTester baud rate is automatically set to 2400 upon entering this mode.* Escape to any medTester defibrillator autosequence. Operate the autosequence until the medTester display indicates "ready" and the medTester is waiting to accept defibrillator energy information.

Select <F3> "MEDT" from the MAIN MENU PAGE 2 of the Impulse 4000 and "MEDTESTER INTERFACE: READY" displays. Also, "TEST" appears above the <F5> key. At this point, there is an ECG NSR 60 waveform present at the ECG jacks of the Impulse 4000 (a mode similar to CARDIOVERSION). *The Impulse 4000 baud rate is automatically set to 2400 upon entering this mode.*

Use <F3> and <F4> to change the waveform from NSR 60 to VFIB or from VFIB to NSR 60. Use <F1> and <F2> to select the range. The autosequence starts out in the low range then a prompt occurs to switch to the high range.

- NSR 60 - For a nonautomatic defibrillator; a delay time reading.
- VFIB - For an automatic defibrillator; no delay time reading. In VFIB "YYY" is transmitted for the delay time.

Press <F5> for a test pulse.

Discharge the defibrillator into the Impulse 4000 when both the Impulse 4000 and the medTester displays indicate "ready". The Impulse 4000 then sends data to the medTester containing the defibrillator energy and cardio delay time. The Impulse 4000 displays the delay time in milliseconds (mS) and the energy (E=) in joules (J).

Press <ESC> to return to MAIN MENU PAGE 2; reverts the baud rate to its previous setting.



## UTILITIES

Options in this section affect operating the Impulse 4000 but not taking measurements. Press <F4> "UTIL" from the MAIN MENU PAGE 2 to access the UTILITIES menu.

Available options:

- <F1> VIEW
- <F2> CLOCK
- <F3> BATT
- <F4> BAUD
- <F5> CAL
- <F1> DIAG (UTILITIES MENU PAGE 2)

### View Angle

Changes the viewing angle (contrast) of the Impulse 4000's display. The Impulse 4000 is shipped from DNI Nevada with the display viewing angle set at five. The adjustment range varies from zero (dimkest) to seven (brightest).

Set the view angle as follows:

1. Select <F4> "UTIL" from the MAIN MENU PAGE 2.
2. Press <F1> "VIEW".
3. Use the <F3> "DOWN" and <F4> "UP" keys to adjust the angle between zero and seven.
4. Press <F5> "STORE" to save the setting in nonvolatile memory (EEPROM).
5. Press <ESC> to exit this option.

NOTE: If you exit this option without storing your setting, the view angle remains at the previous setting.

### Clock

Sets the day and time of the real-time clock.

NOTE: The clock runs on 24-hour time, i.e., military time.

Set the clock as follows:

1. Select <F4> "UTIL" from the MAIN MENU PAGE 2.
2. Press <F2> "CLOCK".
3. Use the <F1> "left arrow" and the <F2> "right arrow" to select the digit you want to change. The asterisk moves to the digit you select.
4. Use the <F3> "DOWN" and <F4> "UP" keys to increase or decrease the value of the digit. The clock stops counting while you change the digit.
5. Press <F5> "START" and the clock resumes counting.
6. Press <ESC> to exit this option.

NOTE: If you exit without pressing <F5> "START" (step 5), the time reverts to the previously set time.

## Battery

Displays the battery status.

View the battery status as follows:

1. Select <F4> "UTIL" from the MAIN MENU PAGE 2.
2. Press <F3> "BATT". The table below describes the various displayed messages.

*Battery Status Table*

<b>Impulse 4000 Battery</b>	<b>Wall Plug Charger 115-volt or 230-volt</b>	<b>Message displayed on the Impulse 4000</b>
Fully charged	Not plugged in	Battery voltage: 12.4 V to 13.7 V $\pm$ 0.15 V Not charging
Not fully charged	Plugged in	Battery voltage: ##.# V Charging at: ## mA
Lowly charged NOTE: At battery voltages below 10.5 V, the Impulse 4000 doesn't operate as specified.	Not plugged in	Battery voltage: 10.5 V Not charging
Almost depleted of charge	Not plugged in	<b>BATTERY DEAD CHARGE BEFORE USING</b>
Depleted of charge	Not plugged in	No message displayed
Turned off (Impulse 4000 isn't powered up)	Plugged in	No message displayed (Impulse 4000 battery is charging)

The internal 12-V lead-acid battery provides a minimum of 20 hours of operation. The instrument will run from the charger while it is charging a fully depleted battery.

The battery charger limits the charging voltage to 13.7 V  $\pm$ 0.15 V. As the battery charges, the charging current decreases. The battery is fully charged when the charging current decreases to 50 mA or less. The amount of time required to fully charge the battery varies. Generally, 12 hours is adequate to recharge a depleted battery.

### To optimize battery life

1. Operate the Impulse 4000 without the charger for a maximum of 10 hours, which is 50 percent of capacity.
2. Plug in the charger and fully recharge the Impulse 4000.
3. Again, operate the Impulse 4000 without the charger for a maximum of 10 hours.
4. Plug in the charger and fully recharge the Impulse 4000. Repeat this cycle of use.

NOTE: Operating the Impulse 4000 with the charger plugged in full-time does not hurt the instrument.

## Baud Rate

Matches the Impulse 4000's baud rate to a serial communication device. Refer to the *Serial Port Operation* section later in this chapter.

Set the baud rate as follows:

1. Select <F4> "UTIL" from the MAIN MENU PAGE 2.
2. Press <F4> "BAUD".
3. Use the <F3> "DOWN" and <F4> "UP" keys to adjust the value.
4. Press <F5> "OK" to save the baud rate for the current instrument usage. The baud rate is always reset at power-up to 2400.

NOTE: There is a remote command—"BAUD"—for changing the baud rate via the serial port. See the *SERIAL PORT OPERATION* section later in this chapter.

## Calibration

Refer to *Chapter 4 - Test and Calibration* for more information on this option.

Start calibration as follows:

1. Select <F4> "UTIL" from the MAIN MENU PAGE 2.
2. Press <F5> "CAL".

## Diagnostics

Checks the Impulse 4000's internal functions.

Begin the diagnostic option as follows:

1. Select <F4> "UTIL" from the MAIN MENU PAGE 2.
2. Press <F1> "DIAG", UTILITIES PAGE 2.
3. A brief summary of the Impulse 4000's diagnostic capabilities follows:
  - <F1> "MEM" Checks the ROM (press <F1>) using a checksum method.  
Tests the RAM (press <F2>) and the EEPROM (press <F3>) by writing and then reading back from every byte in these memories. Ensures the RAM and the EEPROM are working.
  - <F2> "MODTST" Tests the adapter module (when it's plugged in the Impulse 4000) by switching the loads in the module.  
To check that the load is switched correctly, attach an ohmmeter to the inputs and measure the resistance .
  - <F3> "VWCAL" View of calibration constants.
  - <F4> "PRINTER" Initiates printout.
  - <F5> "PACEIN" For DNI Nevada's use only.

## SERIAL PORT OPERATION

The Impulse 4000 serial port is compatible with the RS-232 Standard: EIA RS-232-C, and the IBM PC connector configuration. It uses a 25-pin (DB25) male D-sub connector. The port is wired as Data Terminal Equipment (DTE). The connector signals are as follows:

- Pin 1 - Chassis ground connection (sometimes used for shielding)
- Pin 2 - Transmit data connection (from the Impulse 4000)
- Pin 3 - Receive data connection (to the Impulse 4000)
- Pin 5 - Clear to send connection (CTS)
- Pin 7 - Signal ground connection

Test results can be downloaded to a computer or other serial device using the Impulse 4000 serial port. The use of this port provides a way to remotely control the instrument and obtain test data.

A standard null-modem cable with female connectors is required to connect the Impulse 4000 to a personal computer (wired as DTE with a male connector). The appropriate cable is available from DNI Nevada and its part number can be found in the *Other Optional Accessories* section in Chapter 1. This cable connects the Impulse 4000 to the medTester. When using the cable, notice that pins 1, 2, 3, and 7 are connected but not pin 5.

The clear-to-send (CTS) line is not usually used when the Impulse 4000 is connected to a personal computer or a serial terminal; therefore, it is best to leave this line disconnected.

There are instances when a serial printer or other device needs to interrupt the flow of data it is receiving. This occurs to prevent a loss of data during operations such as a carriage return [CR] or a line feed [LF]. When the interruptions are necessary, connect the CTS line to the Data Terminal Ready (DTR) line of the attached device. Then assert the CTS line high using the attached device's DTR line; otherwise, the Impulse 4000 will not send data.

The CTS line is a hardware function of the Impulse 4000 and is not programmable. When it is left disconnected, the line is pulled high by a resistor. If connected, the line must be asserted high by the attached device to allow the Impulse 4000 to send data. If a user mistakenly connects the CTS line and does not assert it high, the Impulse 4000 will not respond to any inputs.

### Baud Rate

The Impulse 4000 can be queried as to what baud rates it accepts using

- QBAUD

The Impulse 4000 responds with

- 300,600,1200,2400,4800,9600

To set the baud rate, send

- BAUD=baudrate

Where "baudrate" is one of the baud rates listed in the above response, the Impulse 4000 responds with

- OK

The baud rate of the Impulse 4000 is now changed. The controller should wait approximately 0.5 seconds before attempting communication at the new baud rate. Communication should be started with [CR][LF] to clear the buffers. *At power-up, the Impulse 4000 operates at 2400 baud.*

The baud rate can also be changed from the control panel using the BAUD menu. From the MAIN MENU PAGE 2, press <F4> "UTIL", then <F4> "BAUD". Choose the baud rate using the <F3> "DOWN" and <F4> "UP" keys. Then press <F5> "OK" to set the baud rate. Escape to previous menus using the <ESC> "ESCAPE" key.

## **XON/XOFF**

The Impulse 4000 supports XON/XOFF handshaking for both transmitting and receiving data. Initially, the Impulse 4000 transmits characters to a connected device. If a connected device sends the XOFF character (13 hexadecimal) to the Impulse 4000, it stops sending data. When the connected device sends an XON character (11 hexadecimal), the Impulse 4000 resumes sending data. In this way the connected device controls the incoming stream of data.

When receiving data, the Impulse 4000 monitors the receive buffer. When this buffer is almost filled, the Impulse 4000 sends an XOFF character to the connected device telling it to stop sending data. When the Impulse 4000 has processed the buffer data, it sends an XON character to the connected device indicating that it can resume sending data.

## **Serial Printing of Test Data**

After the Impulse 4000 performs measurements, the results (test record) can be sent out the serial port to a serial printer. Simply select the "SERIAL" function key to send the test data. This menu selection is located within the Defibrillator Manual Tests (DEFIB) menus, the Pacemaker Manual Tests (PACER) menus, and at the end of an autosequence—after you've conducted all test steps. To send the existing steps in an autosequence to a serial printer, select the "SERIAL" function key in the CUSTOM AUTOSEQUENCES menu.

## **Remote Commands**

### **Introduction**

Use the remote commands to control the Impulse 4000 from a personal computer or other serial device, to make measurements, and to obtain test results.

Primary commands are valid when the instrument is in the MAIN MENU or in the REMOTE MAIN MODE. When a valid command is received from the MAIN MENU, the instrument enters the REMOTE MAIN MODE. In this mode, and in any remote submodes, the remote commands are displayed and the keys on the top panel are deactivated.

The "LOC" command is a special command that leaves whichever remote mode the instrument is in and returns to local control at the MAIN MENU.

The "EXIT" command is a special command that is valid in any of the remote submodes and which exits that submode and returns to the REMOTE MAIN MODE.

Commands that are listed more than once are defined only at the first occurrence.

At power-up, the global variables are set to the default. When entering a mode, the variables for that mode are set to the default. The default setting is the one listed first unless otherwise stated. The global variable setup commands are valid in the MAIN MENU and also in the modes where they are listed. Other measurement commands are only valid in the specific mode they are listed in.

## Command Syntax

Commands can be sent in upper or lower case. All command strings must be terminated with a carriage return [CR] and/or a line feed [LF], i.e., [command][CR][LF]. Spaces are ignored.

Commands shown with "=" are setup commands that require at least one parameter to be included with the command. Multiple parameters, if required, are separated by commas. All possible parameter choices are shown. Unless otherwise stated, the default parameters are listed first.

## Responses to Commands

The instrument responds to all commands. Commands that do not return any other message or data return "OK".

After receiving a command, the instrument ignores all other incoming characters until it has responded to the one at hand. Some commands take a while to complete. These are noted.

The null command, which has no characters and consists only of terminating characters, returns "?".

All responses are in upper case and are followed by a [CR] and [LF]. Where a command returns more than one item, they are separated by commas. The items are returned in the order listed.

Commands can return character strings, integers, or floating point numbers.

Measurement readings are returned as floating point numbers. The readings are in scientific notation and include a unit of measurement.

Readings are in the following format:

[+/-][reading][E][+/-][exponent][unit]

- The leading + sign is not transmitted.
- The reading is up to four digits with or without a decimal point.
- The E indicates that an exponent follows.
- The exponent has either a plus or minus sign and is 0, 3, 6, or 9.
- The units of measurement have the following abbreviations:

V = volt

A = ampere

S = second

J = joule

PM = per minute

## Error Responses

If an error is detected, an error response is returned in the following format:

- ERR=XX, description

The possible error responses are as follows:

- ERR=00,NO COMMANDS ALLOWED NOW  
The instrument is in a mode in which commands are not allowed.
- ERR=01,UNKNOWN COMMAND  
The received command was not recognized.
- ERR=02,ILLEGAL COMMAND  
The command was understood, but it is not allowed at this time.
- ERR=03,ILLEGAL PARAMETER  
A parameter sent with a command was not the right type, was out of range, was not understood, or the right number of parameters were not sent.
- ERR=20,OVERLOAD  
The adapter module has been overloaded because a defibrillator has been discharged into it. This is a terminal condition that causes the instrument to go into a dead-end state. This message is unique in that it is not a response to a command, but is sent immediately when an overload is detected. The Impulse 4000 displays "!!! MODULE OVERLOAD !!!" and the adapter module produces an audible "beep". To reset the Impulse 4000, turn the instrument off, disconnect the defibrillator leads, wait 5 seconds, and then turn the instrument back on.

## Special Commands

- LOC  
Leaves any remote mode and returns to local key control at the MAIN MENU.  
Returns "OK".
- EXIT  
Exits any of the remote submodes and returns to the REMOTE MAIN MODE.  
Returns "OK".

## Instrument Identification Commands

- IDENT  
Asks for the instrument identification, then returns a string which contains the instrument name, firmware version level, and any installed options. The IDENT string is in the following format: [model],[version],[options].  
Where model is "IMPULSE4000", version is a character string (for example, "VER 1.02"), and options is a character string listing the options.
- QADAPTER  
Asks for the adapter module identification, then returns an integer 0 through 255 that identifies the installed adapter module. This number corresponds to the TQA number on the adapter module.

### Global Variable Setup Commands

- DEFRANGE=range  
Sets the defibrillator measurement range. Use "HIGH" for high range or "LOW" for low range. Returns "OK".

- PACELOAD=load  
Sets the pacemaker load using one of the following commands:

INT	Internal 50 $\Omega$ .
ADAP0	Adapter, open circuit.
ADAP1	Adapter, load 1.
ADAP2	Adapter, load 2.
ADAP3	Adapter, load 3.
ADAP4	Adapter, load 4.

Returns "OK".

NOTE: If running a transcutaneous interactive waveform, the waveform must be restarted with a new ECG wave command when the pacemaker load is changed with this command.

- PACEIN=enable  
Enables or disables the incoming pacemaker pulse from affecting the ECG waveform when running one of the transcutaneous interactive waves (TQXXX).

ON	Pulse affects the waveform.
OFF	Pulse doesn't affect the waveform.

Returns "OK".

For the next two commands the width and amplitude parameters are as follows:

*Width:* A number that represents the width in milliseconds. It must be from the following list, exactly as shown: 0.1, 0.2, 0.5, 1.0, 2.0. The default value is 1.0.

*Amplitude:* A number that represents the amplitude in millivolts. It must be from the following list, exactly as shown: -700, -500, -200, -100, -50, -20, -18, -16, -14, -12, -10, -8, -6, -4, -2, 0, 2, 4, 6, 8, 10, 12, 14, 16, 18, 20, 50, 100, 200, 500, 700. The default value is 100.

- ATRPACE=width,amplitude  
Sets the width and amplitude of the atrial pacemaker spike in transvenous paced ECG waveforms. Returns "OK".
- VENTPACE=width,amplitude  
Sets the width and amplitude of the ventricular pacemaker spike in transvenous paced ECG waveforms. Returns "OK".



### General Purpose Command

The following command is valid during measurement modes to query the status of measurement data in that mode:

- QDATA  
Asks if the measurement data is available. Valid during all measurement modes. Returns one of the following:  
NODATA        No data is available.  
NEWDATA       Data is available. Reading the data with the "XXXDATA" command, for that mode, resets the status to "OLDDATA".  
OLDDATA       Data has been read by the "XXXDATA" command. It can be read again if desired.

### Defibrillator Measurement Commands

• ENERGYMODE is a command that enters the energy mode and enables measuring a defibrillator pulse when ready. The following commands are enabled and then "OK" is returned.

- DEFRANGE (See definition in a previous section *Global Variable Setup Commands*.)
- DEFIBWAVE=ECG waveform  
Sets the ECG waveform for a defibrillator test as follows:  
NONE            No waveform.  
VFB1            Ventricular fibrillation 1, coarse.  
VFB2            Ventricular fibrillation 2, fine.  
VTC130          Ventricular tachycardia 130 BPM.  
VTC175          Ventricular tachycardia 175 BPM.  
VTC180          Ventricular tachycardia 180 BPM.  
VTC185          Ventricular tachycardia 185 BPM.  
VTC220          Ventricular tachycardia 220 BPM.  
Returns "OK".
- QDATA (See definition in the preceding section *General Purpose Command*.)
- ENERGYDATA  
Asks for the energy mode defibrillator pulse data. Returns all the following if the data is available:  
Defibrillator energy        J  
Peak voltage                V  
Peak current                A  
50% pulse width            S  
10% pulse width            S  
If no data is available, "NODATA" is returned.
- CHKENERGY (medTester checklist command)  
Returns the defibrillator energy reading: "DEFIB ENERGY=ddd.d J"  
NOTE: Does not change NEWDATA to OLDDATA.
- PLAYBACK  
Starts the energy playback waveform. This waveform takes 13 seconds to complete. Returns "OK" when complete.
- EXIT (See definition in a previous section *Special Commands*.)

## Chapter 3 - Operating Instructions

---

• MAXEMODE is a command that enters the maxe mode and enables measuring the defibrillator maximum energy and charge time. The following commands are enabled and then "OK" is returned.

- DEFRANGE
- DEFIBWAVE
- QDATA
- MAXESTART  
Starts the charge time test. Should be sent at the same time that the defibrillator is set to start charging. Returns "OK".
- MAXEDATA  
Asks for the maxe mode defibrillator pulse data. Returns all the following if good data is available:  
Defibrillator energy            J  
Peak voltage                    V  
Peak current                    A  
Charge time                     S  
If no data is available, "NODATA" is returned. If a defibrillator pulse arrives and the MAXESTART command has not started the test yet, "NOSTART" is returned. If the charge time was greater than the maximum of 99 seconds, "CT>99S" is returned.
- CHKENERGY (medTester checklist command)
- PLAYBACK
- EXIT

• CARDIOMODE is a command that enters the cardio mode and enables measuring defibrillator cardioversion delay time. The following commands are enabled and then "OK" is returned.

- DEFRANGE
- CARDIOWAVE=ECG waveform  
Sets the ECG waveform for a defibrillator cardioversion test as follows:  
NSB60                    Normal sinus rhythm 60 BPM.  
NSB80                    Normal sinus rhythm 80 BPM.  
NSB120                   Normal sinus rhythm 120 BPM.  
AF1                      Atrial fibrillation 1, coarse.  
AF2                      Atrial fibrillation 2, fine.  
Returns "OK".
- QDATA
- CARDIODATA  
Asks for the cardio mode defibrillator pulse data. Returns all of the following if the data is available:  
Defibrillator energy            J  
Peak voltage                    V  
Peak current                    A  
Cardio delay time               S  
If the cardio delay time is outside the measurement range or -120 to +380 ms. "NO-SYNC" is returned for this field instead of the data. If no data is available, "NODATA" is returned.

- CARDIOMODE *continued*
  - CHKENERGY (medTester checklist command)
  - CHKCARDIO (medTester checklist command)  
Returns the cardioversion delay time: "DEFIB CARDIO=ddd mS".  
NOTE: Does not change NEWDATA to OLDDATA.
  - PLAYBACK
  - EXIT

### Pacemaker Measurement Commands

• PACEPMODE is a command that enters the pacer mode and enables measuring pacemaker pulse parameters.  
NOTE: Complete data is not available until at least two pulses have been received. Two pulses are required to establish the pacing rate. The following commands are enabled and then "OK" is returned.

- QADAPTER
  - PACELOAD
  - HOLD=hold  
Sets or releases a hold on the current data during which the instrument will not look at additional incoming pulses. The hold parameter can be  
RESUME           Resume measuring pulses.  
HOLD             Hold current data.  
Returns "OK".
  - QDATA
  - PACEPDATA  
Asks for the pacer mode pacemaker pulse data. Returns all the following if data is available:  
Peak current           A  
Pulse width            S  
Pulse rate             PM  
If no data is available, "NODATA" is returned.
  - CHKPACER (medTester checklist command)  
Returns the pacemaker pulse amplitude and pacing rate:  
"PACER PULSE=ddd.d mA, ddd PPM".  
NOTE: Does not change NEWDATA to OLDDATA.
  - EXIT
- PACEREFRACT is a command that measures the pacemaker pulsed- and sensed-refractory periods, and the pacing rate.
- If no pacemaker pulse is detected within 10 seconds, "NO PACER" is returned.
  - If the pacing rate is less than the minimum, "PACERATE TOO LOW" is returned.
  - If the pacing rate is greater than the maximum, "PACERATE TOO HIGH" is returned.
  - If the pacing rate is within the range (30 to 100 PPM) and the refractory periods are able to be measured, all of the following are returned:  
Pacing rate            PM  
Pulsed-refractory period   S  
Sensed-refractory period   S  
NOTE: The entire measurement can take up to 60 seconds to complete.

### Waveform Commands

- **PERFLEAD=lead**  
Sets the performance waveform reference lead to I or II.  
Returns "OK".

NOTE: When you run waveforms from the serial commands, performance waveforms (as listed below) are affected by the reference lead selection; ECG waveforms (as listed below) aren't affected by the reference lead selection.

The following waveform commands simply turn on the specified waveform. They do not enter a special mode. All of these commands return "OK".

NOTE: The "W0##" commands are alternatives (secondary commands) to the commands they follow, and are compatible with the medTester.

---

#### *Performance Waveforms*

- |           |         |                     |
|-----------|---------|---------------------|
| • ZERO    |         | Zero output.        |
| • SQU     | or W001 | 2-Hz square wave.   |
| • PUL     | or W002 | 4-second pulse.     |
| • SIN0.05 |         | 0.05-Hz sine wave.  |
| • SIN0.5  | or W014 | 0.5-Hz sine wave.   |
| • SIN1    |         | 1-Hz sine wave.     |
| • SIN10   | or W003 | 10-Hz sine wave.    |
| • SIN25   |         | 25-Hz sine wave.    |
| • SIN30   |         | 30-Hz sine wave.    |
| • SIN40   | or W004 | 40-Hz sine wave.    |
| • SIN50   |         | 50-Hz sine wave.    |
| • SIN60   | or W005 | 60-Hz sine wave.    |
| • SIN100  | or W006 | 100-Hz sine wave.   |
| • SIN125  |         | 125-Hz sine wave.   |
| • SIN150  |         | 150-Hz sine wave.   |
| • SQ1K    | W007    | 1-kHz square wave.  |
| • TRI     | W008    | 2-Hz triangle wave. |

---

#### *ECG Waveforms*

- |          |      |                                 |
|----------|------|---------------------------------|
| • NSB30  | W010 | Normal sinus rhythm at 30 BPM.  |
| • NSB60  | W011 | Normal sinus rhythm at 60 BPM.  |
| • NSB80  |      | Normal sinus rhythm at 80 BPM.  |
| • NSB120 | W012 | Normal sinus rhythm at 120 BPM. |
| • NSB160 |      | Normal sinus rhythm at 160 BPM. |
| • NSB200 |      | Normal sinus rhythm at 200 BPM. |
| • NSB240 | W013 | Normal sinus rhythm at 240 BPM. |
| • NSB300 |      | Normal sinus rhythm at 300 BPM. |

*ECG Waveforms continued*

• AF1	W015	Atrial fibrillation 1, coarse.
• AF2		Atrial fibrillation 2, fine.
• AFL		Atrial flutter.
• SINA		Sinus arrhythmia.
• 1DB		1st degree AV block.
• 2DB1	W016	2nd degree AV block, type 1, Wenckebach.
• 2DB2	W017	2nd degree AV block, type 2.
• 3DB		3rd degree AV block.
• PVC1	W020	PVC type 1.
• PVC2	W021	PVC type 2.
• MF	W022	Multifocal PVCs.
• PAIR	W024	A pair or couplet of PVCs.
• BIG		Bigeminy.
• TRG		Trigeminy.
• RUN5	W025	Run of 5 PVCs.
• RUN11	W026	Run of 11 PVCs.
• VNT		Ventricular rhythm 120 BPM.
• VTC130		Ventricular tachycardia 130 BPM.
• VTC175		Ventricular tachycardia 175 BPM.
• VTC180	W028	Ventricular tachycardia 180 BPM.
• VTC185		Ventricular tachycardia 185 BPM.
• VTC220		Ventricular tachycardia 220 BPM.
• VFB1	W029	Ventricular fibrillation 1, coarse.
• VFB2		Ventricular fibrillation 2, fine.
• ASY1		Asystole 1, some movement.
• ASY2	W030	Asystole 2, flat.
• ASN		Asynchronous, continuous, transvenous paced.
• DM1		Demand 1, mostly paced, transvenous paced.
• DM2		Demand 2, mostly normal, transvenous paced.
• AVS		Atrioventricular sequential, transvenous paced.
• NCA		Noncapture, transvenous paced.
• NFU		Nonfunctional, transvenous paced.
• TQASYS		Asystole, transcutaneous paced.
• TQBRAD		Bradycardia, transcutaneous paced.
• TQDEM		Demand, transcutaneous paced.
• TQNC		Noncapture, transcutaneous paced.

- THRESH=width,amplitude  
Turns on the R-wave threshold detection waveform with the specified width and amplitude parameters as indicated below:  
  
*Width:* A number that is the width in milliseconds. It must be from the following list, exactly as shown: 8, 12, 20, 40, 60, 80, 100, 120, 140, 160, 180, 200.  
  
*Amplitude:* Referenced to Lead II. A number that represents the amplitude in millivolts. It must be from the following list, exactly as shown: 0.05, 0.10, 0.15, 0.20, 0.25, 0.30, 0.35, 0.40, 0.45, 0.50, 0.75, 1.00, 1.25, 1.50, 1.75, 2.00, 2.25, 2.50, 2.75, 3.00, 3.25, 3.50, 3.75, 4.00, 4.25, 4.50, 4.75, 5.00, 5.25, 5.50.  
  
Returns "OK".

### Utilities and Diagnostics

- QBAUD  
Asks for all possible baud rates that the instrument can operate in. Returns all the possible baud rates separated by commas, exactly as follows:  
300,600,1200,2400,4800,9600
- BAUD=baudrate  
Sets the baud rate that is a number from the following list exactly as shown:  
300, 600, 1200, 2400, 4800, 9600.  
Returns "OK".
- SETCLOCK=month,day,year,hour,minute,second  
Sets the real-time clock. Note that time is always in a 24-hour format.  

month	An integer 1 through 12.
day	An integer 1 through 31.
year	An integer 0 through 99.
hour	An integer 0 through 23.
minute	An integer 0 through 59.
second	An integer 0 through 59.

  
Returns "OK".
- QCLOCK  
Asks for the date and time from the real-time clock. Returns the following as integers: month, day, year, hour, minute, and second.

- ROMCHECK  
Calculates the ROM checksum and checks to see if it is equal to the stored checksum. All checksums are four-digit hexadecimal numbers. Returns one of the following:  

GOOD	The checksum does match the stored checksum.
BAD	The checksum doesn't match the stored checksum.
  
- RAMTEST  
Performs a RAM test. Returns one of the following:  

GOOD	The RAM tests good.
BAD	The RAM tests bad.
  
- EEPROMTEST  
Performs an EEPROM test. Note that this test can take up to 60 seconds. Returns one of the following:  

GOOD	The EEPROM tests good.
BAD	The EEPROM tests bad.

## ***Chapter 4***

### *Test and Calibration*



## INTRODUCTION

**WARNING!** Read Chapters 1, 2, and 3 of this manual. Pay attention to all the WARNINGS. Failure to heed these WARNINGS can result in severe injury or death.

**CAUTION:** Read Chapters 1, 2, and 3 of this manual. Pay attention to all the CAUTIONS. Failure to heed these CAUTIONS can damage the instrument.

Read Chapters 1, 2, and 3 before beginning this chapter to familiarize yourself with the operation of the Impulse 4000.

## FUNCTIONAL TEST

The following procedure checks the operation of the Impulse 4000.

### Equipment Required for Functional Test

The following equipment is required to complete this test:

- Defibrillator with ECG monitor.
- Transcutaneous pacemaker with ECG monitor.

### Functional Test Procedure

- From the MAIN MENU PAGE 1, press...  
<F1> "DEFIB",  
<F1> "NO",  
<F1> "ENERGY",  
<F2> "HIGH",  
<right arrow> "SELECT", and finally  
<F1> "TEST".
  - Check that the displayed energy is 100 J  $\pm$  5 J.
  - Check that the peak voltage "Vpk", peak current "Ipk", and 50% and 10% pulse width values, "t50" and "t10", are displayed.
- Press the <left arrow> "SELECT" key (to prepare for step #4).
- Discharge a defibrillator into the Impulse 4000. Check that all test parameters are displayed.
- Connect the ECG leads from the defibrillator to the Impulse 4000. Press <F1> "VFIB". Check that a ventricular fibrillation waveform is displayed on the defibrillator ECG monitor. Press <ESC> "ESCAPE" three times.
- From the MAIN MENU PAGE 1, press...  
<F2> "PACER",  
<F1> "NO",  
<F1> "INT50 $\Omega$ " or <F2> "EXT", depending on the pacemaker connection, and  
<F1> "PULSE".
  - Press <F5> "TEST" several times, once per second, then press <F1> "HOLD".
  - Check that the displayed pulse amplitude is 100 mA  $\pm$  5 mA.
  - Check that the pulse rate and pulse width are displayed, and press <F1> "REL".
- Connect a transcutaneous pacemaker to the Impulse 4000.
  - Turn on pacing.
  - Check that the pacemaker pulses are measured and that all test parameters are displayed.

## CALIBRATION

Calibration is the procedure by which an instrument is adjusted to make its indicated values correspond as closely as possible to the actual values being measured. Sometimes calibration is accomplished by measuring a set of known values and adjusting the instrument accordingly. Verification is accomplished by comparing readings of the instrument with those of another instrument that serves as a reference or standard.

### Recommendation

Calibration must be performed at the recommended interval to ensure that the instrument's measurements remain within its specifications. Consult DNI Nevada for the Impulse 4000's recommended calibration interval.

We recommend that you send your instrument to DNI Nevada for this service. When we receive your Impulse 4000, we will install any firmware updates, calibrate it, certify calibration, and return it to you promptly.

Our calibration measurements are traceable to the National Institute of Standards and Technology (NIST). A certificate of calibration and performance is sent with each instrument.

### Calibration on Site

Before beginning this calibration procedure, it is important that you are aware of the Warranty Disclaimer (refer to page ii). According to this disclaimer, the warranty on the Impulse 4000 becomes void if the Quality Seal or the Calibration Tag is broken without proper factory authorization. For this reason, we recommend that you send your instrument to DNI Nevada for factory calibration.

### Equipment Required for Calibration

The following equipment is required to perform the calibration.

- **Digital Multimeter (DMM)**—suggest Keithley 196\*

<i>Range</i>	<i>Resolution</i>	<i>Accuracy</i>	<i>Used in steps</i>
1 A	0.1 mA	0.1%	2
20 V	1 mV	0.1%	4
10 V	0.1 mV	0.01%	8, 9, 10, 13, and 14
100 $\Omega$	0.001 $\Omega$	0.02%	19
1 V	0.01 mV	0.1%	20

\*NOTE: Equivalent equipment is required to meet or exceed listed specifications.

- **DC Voltage Source**—suggest any stable DC power supply or batteries in this range.

4 V  $\pm$ 1 V      Use in steps 8, 9, 10, 13, and 14.

- **Resistor Set**—use in steps 8, 9, and 10.

<i>Quantity</i>	<i>Description</i>	<i>DNI Part #</i>
2	634- $\Omega$ , 0.1% resistor	0316-0240
2	3.16-k $\Omega$ , 0.1% resistor	0316-0241
2	316-k $\Omega$ , 0.1% resistor	0316-0242
3	2-pin Molex connector	2710-0014
6	Molex pins	2716-0027

NOTE: Several steps depend on the completion of the previous step; therefore, complete the steps in the order shown.

### Calibration Setup

1. Turn off the Impulse 4000.
2. Remove all cables connected to the Impulse 4000 including the battery charger.
3. Remove the two screws on the top cover, three screws on the front panel, two screws on the back panel, and two screws on the side panel (top, center).  
NOTE: This action breaks the Quality Seal and voids the factory calibration and warranty if factory authorization is not obtained.
4. Lift the top cover and rest it on the bottom case assembly. Ensure that the rear panel of the top half does not rest on the power switch.

### Calibration Procedure

1. Connect a short jumper between TB6—pins 1 and 2. This is the calibration—enable test block. You can use a screwdriver tip to short the pins together until the calibration mode has been entered.
2. Turn on the Impulse 4000.
3. Select <F4> “UTIL” from the MAIN MENU PAGE 2.
4. Press <F5> “CAL”.
5. **ENTERING CALIBRATION ROUTINE.**
  - a) Press <F1> to enter the calibration routine with raw calibration constants.
  - b) Press <F2> to enter the calibration routine with existing constants.

6. **CAL 1: BATTERY CHARGING CURRENT OFFSET.** Unplug the battery charger but keep the battery connected. Press <F5> “ADV” to continue.

NOTE: Throughout the calibration of the Impulse 4000, two functions keys are used.

- The <F4> SKIP key moves the Impulse 4000 to the next calibration step. It does not affect the calibration constants previously stored.
- The <F5> ADVANCE key instructs the Impulse 4000 to take the new values (either entered manually or acquired automatically) and store them in the EEPROM at the end of the calibration procedure.

At the end of calibration you are prompted to save the new calibration constants. In some calibration steps, the Impulse 4000 acquires the new calibration constants automatically. In these cases, there is no input required from you. Some calibration steps require you to enter data. In all cases, read the value to enter from the DMM. Use the <F1> “DOWN” and <F2> “UP” keys to change the value the Impulse 4000 displays.

7. **CAL 2: BATTERY CHARGER CURRENT AMPLITUDE.** Plug in the battery charger. Remove the POSITIVE lead from the battery (yellow wire). Connect the DMM (in DC current mode) in series with the lead and the battery. Read the value on the DMM. Use the Impulse 4000’s <F1> “DOWN” and <F2> “UP” keys to adjust the displayed “mA” value to match the DMM reading. The range is from 200 to 400 mA.

NOTE: If the battery is fully charged, then the measured current is quite small and thus is outside the adjustment range. Disconnect the battery at J2 and connect a 50- $\Omega$ , 5-watt resistor across J2. This creates a load for the Battery Charging Circuit to use during calibration. Press <F5> “ADV” to continue.

8. **CAL 3: BATTERY VOLTAGE OFFSET.** No setup. Press <F5> “ADV” to continue. Disconnect the DMM. Reconnect the battery lead.
9. **CAL 4: BATTERY VOLTAGE AMPLITUDE.**

**CAUTION:** Do not short TB1—pins 1 and 2—together. They are connected to the battery directly. This could blow a trace off the printed circuit board.

With mini-hooks, connect the DMM in the voltage mode to TB1—pin 1 (*ground*) and pin 2 (+12 V *battery*). Adjust the display to match the DMM reading. The range is from 10.40 to 15.50 V. Press <F5> “ADV” to continue. Remove the DMM leads.
10. **CAL 5: DIFF AMP DEFIB HI OFFSET.** Remove the cable on the J5 connector. This is reconnected in the *Post Calibration Procedure*. Press <F5> “ADV” to continue.
11. **CAL 6: DIFF AMP DEFIB LO OFFSET.** Press <F5> “ADV” to continue.
12. **CAL 7: DIFF AMP PACER OFFSET.** Press <F5> “ADV” to continue.
13. **CAL 8: DIFF AMP DEFIB HI AMPLITUDE.** This calibration step requires two 634- $\Omega$ , 0.1% resistors. These resistors are connected in series (one for each lead) with a voltage source. Connect the voltage source (set to approximately 4.00 V) to J5—pin 1 (*right-positive*) and pin 2 (*middle-negative*). Connect the DMM across the voltage source (not across J5). Adjust the display value to match the DMM reading. The range is from 3.000 to 5.000 V. Press <F5> “ADV” to continue. Remove the two 634- $\Omega$  resistors.
14. **CAL 9: DIFF AMP DEFIB LO AMPLITUDE.** This calibration step requires two 3.16-k $\Omega$ , 0.1% resistors. These resistors are connected in series (one for each lead) with a voltage source. Connect the voltage source (set to approximately 4.00 V) to J5—pin 1 (*right-positive*) and pin 2 (*middle-negative*). Connect the DMM across the voltage source (not across J5). Adjust the display value to match the DMM reading. The range is from 3.000 to 5.000 V. Press <F5> “ADV” to continue. Remove the two 3.16-k $\Omega$  resistors.
15. **CAL 10: DIFF AMP PACER AMPLITUDE.** This calibration step requires two 316-k $\Omega$ , 0.1% resistors. These resistors are connected in series (one for each lead) with a voltage source. Connect the voltage source (set to approximately 4.00 V) to J5—pin 1 (*right-positive*) and pin 2 (*middle-negative*). Connect the DMM across the voltage source (not across J5). Adjust the display value to match the DMM reading. The range is from 3.000 to 5.000 V. Press <F5> “ADV” to continue. Remove the two 316-k $\Omega$  resistors.
16. **CAL 11: EXT PACER HI OFFSET.** Short TB3—pin 2 to pin 1 (*ground*)—with a short clip lead. Press <F5> “ADV” to continue.
17. **CAL 12: EXT PACER LO OFFSET.** Short TB3—pin 3 to pin 1 (*ground*). Press <F5> “ADV” to continue.
18. **CAL 13: EXT PACER HI AMPLITUDE.** Connect a 4.000-V voltage source to TB3—pin 2 and pin 1 (*ground*). Connect a DMM (in voltage mode) across the voltage source. Adjust the display to match the DMM reading. Range is from 3.000 to 5.000 V. Press <F5> “ADV” to continue. Remove the voltage source.
19. **CAL 14: EXT PACER LO AMPLITUDE.** Connect a 4.000-V voltage source to TB3—pin 3 and pin 1 (*ground*). Connect a DMM (in voltage mode) across the voltage source. Adjust the display to match the DMM reading. Range is from 3.000 to 5.000 V. Press <F5> “ADV” to continue. Remove the voltage source.

20. **CAL 15: TEST PULSE DEFIB OFFSET.** No setup. Press <F5> "ADV" to continue.
21. **CAL 16: TEST PULSE PACER OFFSET.** No setup. Press <F5> "ADV" to continue.
22. **CAL 17: TEST PULSE DEFIB AMPLITUDE.** No setup. Press <F5> "ADV" to continue.
23. **CAL 18: TEST PULSE PACER AMPLITUDE.** No setup. Press <F5> "ADV" to continue.
24. **CAL 19: LOAD RESISTOR MEASUREMENT.** With the DMM in four-terminal  $\Omega$  mode, measure the load resistor across the "Apex" (*RIGHT*) and "Sternum" (*LEFT*) paddles. Do not use the two-terminal technique because it is not accurate enough for this calibration step. Adjust the display to match the DMM reading. Press <F5> "ADV" to continue. Disconnect the DMM.
25. **CAL 20: PACO DAC OFFSET.** Connect a voltmeter across the ECG posts LL (+) and RA (-). Adjust the voltage by pressing the <F1> "DOWN" and <F2> "UP" keys until the smallest voltage possible is measured by the voltmeter. The voltage should be less than 0.5 mV. Press <F5> "ADV" to continue.
26. **LEAVING CAL ROUTINE**  
**SAVE NEW CAL CONST**
  - a) Enter "YES" to save all changes that were made during the calibration procedure.
  - b) Enter "NO" to abort all changes made during the calibration procedure, and exit the calibration procedure with the previous calibration constants intact.

#### Post Calibration Procedure

1. Reconnect the cable from the load assembly to the J5 connector.
2. Ensure that the battery leads are connected.
3. Reassemble the instrument. Install the nine screws on the top, front, back, and side panels.

## ***Chapter 5***


### *Theory of Operation*

## **INTRODUCTION**

The Impulse 4000 is a precision multipurpose analyzer that performs tests on defibrillators and transcutaneous pacemakers. This instrument is microprocessor controlled. It is configured with a V25 microprocessor, a 128 k x 8 RAM, two 128 k x 8 ROMs, an 8 k x 8 EEPROM, and a 4-line x 40-character LCD display. The Impulse 4000 also uses a 68HC705 to control and read the Analog-to-Digital converter.

An overview of the Impulse 4000 circuit block diagram is on the next page, and circuit block descriptions are on pages that follow the diagram.

### IMPULSE 4000 OVERVIEW CIRCUIT BLOCK DIAGRAM

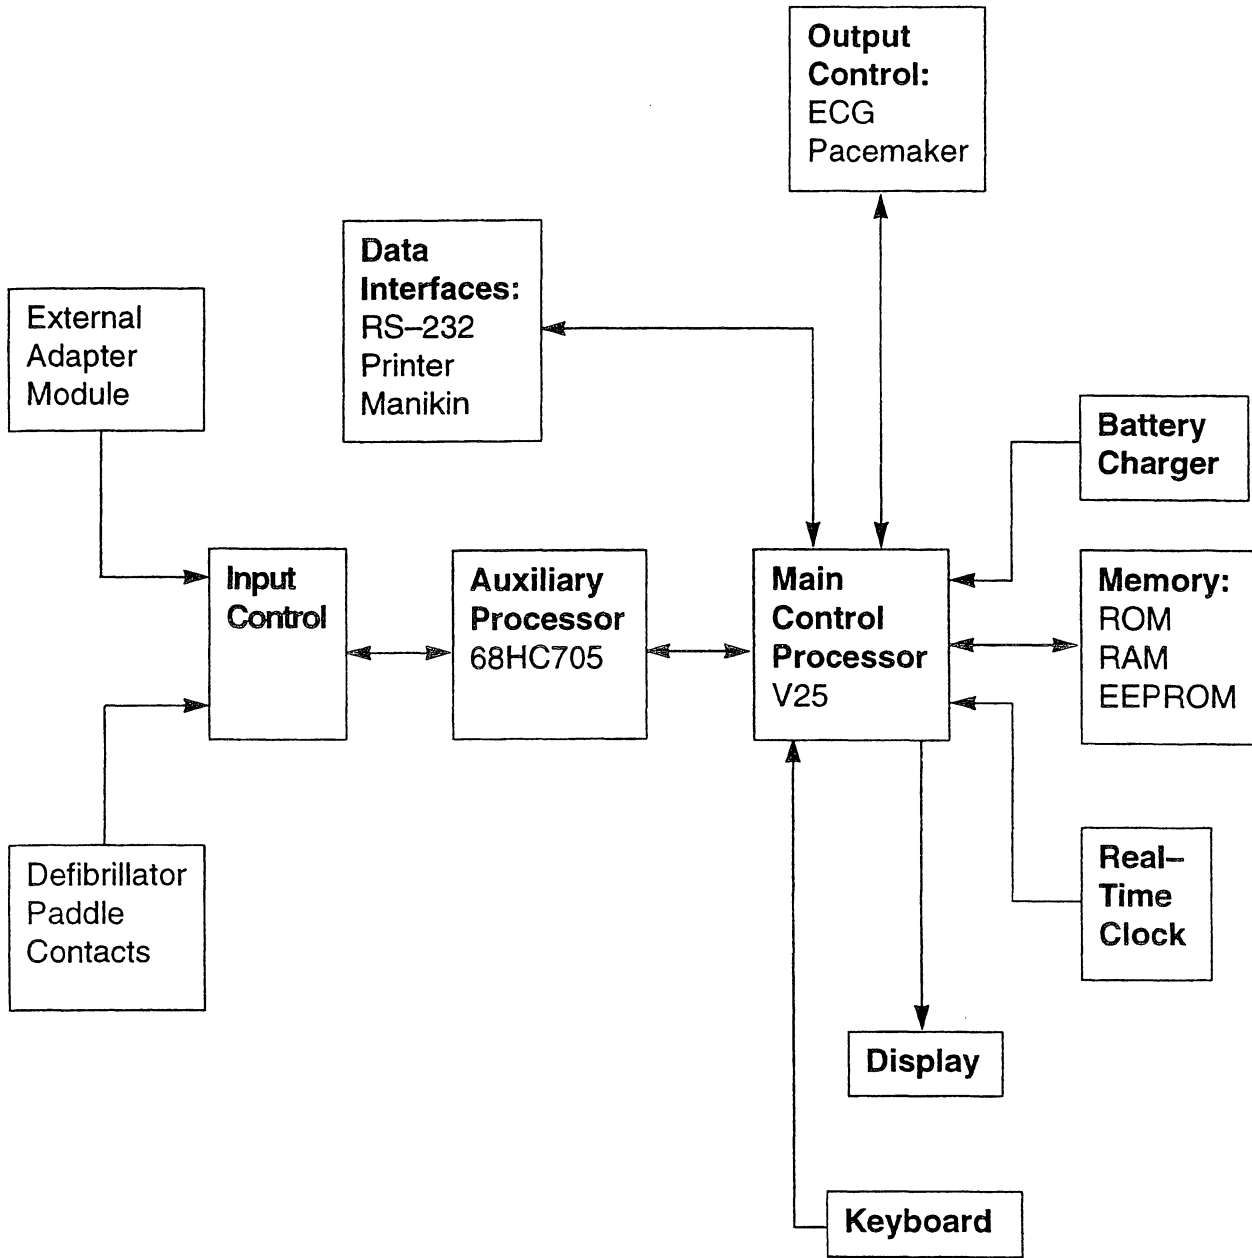



## CIRCUIT BLOCK DESCRIPTIONS

Starting with the Main Control Processor, each circuit block in the preceding diagram is explained in this section except the Defibrillator Paddle Contacts (Load Printed Circuit Board) and the External Adapter Module. For circuit information about an (external) adapter module, refer to the *Theory of Operation* section in the document(s) you receive with your adapter modulé(s).

NOTE: Unless otherwise noted, schematic refers to the Main Printed Circuit Board Schematic.

### Main Control Processor

The heart of the Impulse 4000 is this block of circuitry that centers around the NEC V25 Microcontroller (microprocessor). The V25 (U25) can be found on schematic sheet 5 and has these features: 20-bit addressing, 8-bit external and 16-bit internal data bus architecture, four I/O ports, two serial communications ports, 256-bit internal RAM, programmable IRQ memory controller bank, two DMA controller channels, and two 16-bit timers. This high-performance microcontroller is software compatible with Intel's 8086 microprocessors and has enhancements to control the additional features.

The first three lines (bits 0, 1, and 2) of Port 0 are used to control the view angle of the display. The three lines feeding the input to U40D (schematic sheet 6) give eight levels of view-angle adjustment. Port 0, bit 3 triggers the "Check Pulse Generators" (U30 and U44) that are used to test the operation of the instrument. Bits 4, 5, and 6 are used to control the MUX (U19) channel selections (schematic sheet 3). The Impulse 4000 has seven analog inputs. The MUX chip uses three lines to select its eight analog input lines (the eighth line is not used). Bit 7 provides the clock for the auxiliary microprocessor (U17; schematic sheet 3).

Port 1, bit 0 is not used and is connected to + 5 V. Bits 1, 4, and 7 are used to control the auxiliary microprocessor (U17). Bit 7 is used to determine when the auxiliary processor has finished with the instruction it received. Bit 2 receives the IRQ signal from the Manikin Port (schematic sheet 9). Bit 3 receives the 1-Hz clock signal from the Real-Time Clock (schematic sheet 6); this signal tells the V25 (U25) to update the Date/Time on the display. Bits 5 and 6 are used to control the chip-select of the ECG Output DAC (U37; schematic sheet 8).

Port 2, bits 0, 1, 2, and 3 are used to control the set/reset type relays (K1 and K2; schematic sheet 4). Bit 5 is used to reset the auxiliary microprocessor (U17). Bits 4 and 6 are used to control the pacemaker output pulse. Bit 7 is used to strobe the Printer Port.

Port T, bit 0 is tied to the auxiliary microprocessor (U17) IRQ line as described above. Bits 1 and 6 are not used and are connected to ground. Bit 2 tests the Adapter Module Receptacle Port for an overload condition. Bit 3 monitors whether the battery charger is connected to the Impulse 4000 or not. Bit 4 checks if the printer is busy. If the printer is busy, no data can be sent to the printer until this line becomes free. Bit 5 checks the status of any errors on the Printer Port. Bit 7 is used to enable the calibration routine (TB6).

Serial Port 1 is the instrument's external RS-232 port. Serial Port 0 is used to send data to the ECG output DAC (U37; schematic sheet 8) and to the (external) adapter module relay driver (U47; schematic sheet 2).

The reset line of the V25 is controlled by a microprocessor supervisor chip (U26). U26 releases the reset line when the power supplies have stabilized after power-up, which allows the V25 to begin operating. U26 also handles the backup power for the RTC (Real-Time Clock) and the RAM chip.

## **Memory**

The memory circuitry is detailed on schematic sheet 5. Both the EPROMs (U28 and U29) and the RAM (U27) are 128 k x 8 in size. The ROMs hold the program instructions and the RAM holds the temporary data. The EEPROM (U20) is 8 k x 8 in size. The EEPROM is used to store the instrument's configuration setup and calibration constants. The RAM is connected to the battery backup system.

## **Display**

The display module is an LCD type with 4 lines of 40 characters each. This display has two chip-selects: E1 controls the upper two lines of text, and E2 controls the lower two lines of text. The display uses the usual address, data, and control lines.

## **Keyboard**

The keyboard consists of these eight keys: <ESC> "Escape", <Left Arrow> "Select", <Right Arrow> "Select", and programmable <F1> through <F5> (function keys).

## **Real-Time Clock**

The Real-Time Clock IC maintains the date and time for the system. This IC uses the 12-V lead-acid battery to maintain the time when the power is off. The "VBATT" voltage is provided by U9 (schematic sheet 1) and U26 (schematic sheet 5). U9 steps the voltage down from 12 VDC to 3 VDC. U26 outputs 5 VDC when the instrument is on and 3 VDC when the instrument is off. The date and time show on the display and are used in the autosequences. The RAM (U27) also uses the battery as a backup voltage source.

## **Auxiliary Processor**

The 68HC705 (U17) is another microcontroller chip. It contains four ports (PA, PB, PC and PD) and on-board memory; ROM-8 k x 8, and RAM-300 bytes x 8.

NOTE: One byte equals eight bits.

Port PC is used to receive and send data on the 8-bit data bus through an octal bus transceiver (U24).

All eight bits on Port PA and the lower four bits of Port PD are used to receive the data from the Analog-to-Digital converter (U16; schematic sheet 3). Bit 4 of Port PD is the chip-select line from the V25 (U25) and bit 5 is the "read/write" control line.

Port PB, bit 0 starts the analog conversion. Port PB, bit 1 controls the "read" and bit 2 controls the "mode" of the Analog-to-Digital converter. Port PB, bit 3 is the "ready" line that tells the V25 (U25) that the received instruction has been executed and the 68HC705 (U17) is ready to receive instructions.

The clock oscillator is provided by the V25 instead of a regular crystal because this enables synchronization of the two microcontrollers, which eases the data handling task. Also, the clock oscillator is run through a flip-flop (U18) that the Analog-to-Digital converter (U16) uses. The "reset" line is under the control of the V25 (U25).

The program for the 68HC705 (U17) is stored in its on-board ROM and does not use any of the system memory—ROM (U28) or RAM (U27).

## Input Control

This circuitry centers around the Analog-to-Digital (A/D) converter (U16) and the MUX (U19); schematic sheet 3. The A/D converter uses a monolithic successive-approximation design with sample-and-hold and 12-bit resolution. The A/D converter has a 15- $\mu$ s conversion time and a 52-kHz throughput rate. The auxiliary processor code has been written such that the cycle time is 50  $\mu$ s in all cases of use. The MUX is an 8-to-1 channel input selectable device. The output of the MUX goes to the input of the A/D converter with U15 as a unity-gain buffer amplifier between them. There are seven input signals to be measured. These signals are as follows:

- **DIFFERENTIAL AMPLIFIER**  
This amplifier (U22; schematic sheet 4) is used to measure the signals applied across the paddles.
- **X PACER LOW**  
This signal comes from the "External Module Receptacle".
- **X PACER HIGH**  
This signal comes from the "External Module Receptacle".
- **DEFIB CHECK**  
This signal is from the "Lown Check Pulse" (U44A; schematic sheet 2) and is used to test the defibrillator circuitry.
- **PACER CHECK**  
This signal is from the "Pacer Check Pulse" (U30B; schematic sheet 2) and is used to test the pacemaker circuitry.
- **CHARGE**  
This input monitors the charge current from the battery charger into the battery. This is a voltage-to-current signal coming from U50A; schematic sheet 1.
- **BATTERY MONITOR**  
This signal is used to measure the voltage of the 12-V battery.

## Output Control

The output circuitry centers around the octal DAC (U37) found on schematic sheet 8. This device is a monolithic octal 8-bit voltage-output Digital-to-Analog converter using serial interface and two references. The octal DAC is configured to run in the "unbuffered mode". The two references are connected to plus and minus 2-V sources (U36A and U36B).

The serial input (pin 8) comes from the V25, pin 44 (TXD0). The synchronous clock comes from U25, pin 65 (Port 1, bit 6), and U25, pin 64 (bit 5) provides the chip-select.

OUT0 generates the ECG Right Arm (ECGRA) signal while OUT1 generates the ECG Left Leg (ECGLL) signal. These two signals are mixed together using U39A to generate the ECG Left Arm (ECGLA) signal. OUT2 through OUT7 produce the V-lead signals (ECGV1-ECGV6). U40A generates a high-level (1-V) output. The ECG signals are sent to the ECG Attenuator Board (Display PCB Schematic sheet 2). The ECG signals from U36 and U39 are approximately 1 V in amplitude and are attenuated to 1 mV at the ECG posts.

U38 generates the simulated pacemaker pulse and the R-wave threshold detection pulse. This is a monolithic 12-bit DAC using eight data-input lines and a current-output line. The address and data lines come from the V25. The signal at U45, pin 7 is bipolar. U46A creates a negative pacemaker pulse of equal amplitude.

## **Data Interfaces**

The Impulse 4000 has three interface ports: RS-232, Printer, and Manikin. The RS-232 Port uses a standard 25-pin (DB25) male connector. Pin 2 is the transmit line, pin 3 is the receive line, pin 5 is the CTS line, and pin 7 is the circuit ground. Pin 1 is the chassis ground. The mounting stand-off posts are connected to chassis ground. The ICs used for this port are U41A and U42; schematic sheet 9.

The Printer Port is a standard 25-pin (DB25) female connector on the rear panel. This port drives any Centronics or IBM PC compatible parallel printer.

The Manikin Port uses the RJ45 connector on the rear panel. Pin 1 is the 249- $\Omega$  to ground, pin 2 is the ECG output, pin 3 is the Manikin IRQ (going to U25, pin 61) and pin 4 is the digital ground. The ECG output signal is generated by U43 and U34A. U43 forms a 5-kHz clock. U34A forms a modulation mixer for the ECG and 5-kHz signal. Pin 1 on U34A has the ECG signal riding on top of a +5-V carrier. Because the ECG signal is on the negative input of U34A, the amplitude-modulated signal on the carrier is inverted. C129 strips the DC component of the signal going to the manikin. The manikin contains the transformer, demodulation, and attenuation circuitry to provide the 1-mV ECG signal on the paddle contacts.

## **Battery Charger**

The rechargeable 12-V lead-acid battery is permanently mounted in the Impulse 4000. It is charged whenever the battery charger is plugged in, whether the instrument is turned on or not.

U1 controls the battery charging voltage and limits the charging current. The differential amplifier (U50A) measures the charging current. U1 limits...

- the battery charging voltage to 13.7 V.
- the battery charging current to approximately 350 mA (by the voltage developed across R3) when the battery becomes depleted.

## ***Chapter 6***

### *Technical Information*

**PART NUMBER REFERENCES FOR THE IMPULSE 4000**

PART NUMBER	DESCRIPTION
9519-0209	IMPULSE 4000
1201-0088	DOMESTIC BATTERY CHARGER
1201-0089	EUROPEAN BATTERY CHARGER
5215-0198	INTERNAL PADDLE ADAPTER
9510-0019	CHARGE INSTRUCTION CARD
9508-0242	OPERATING AND SERVICE MANUAL
9530-0050	VINYL CARRYING CASE


## IMPULSE 4000 FINAL ASSEMBLY COMPONENT LIST

REFERENCE	PART NUMBER	DESCRIPTION
B001	1001-4004	12V BATTERY DATASIM
J099	2706-0019	CONN BNC
S001	2515-0010	SWITCH ROCKER SPST
W001	3010-0430	IMP 4000 CABLE BNC JACK
W002	3010-0429	IMP 4000 CABLE HI LEVEL JACK
W003	3010-0428	IMP 4000 CABLE ON/OFF SWITCH
W005	3010-0433	IMP 4000 CABLE DIFF AMP
W006	3010-0427	IMP 4000 CABLE ECG PADDLE
W007	3010-0431	IMP 4000 CABLE BATTERY
W008	3010-0432	IMP 4000 CABLE DISP INTRCONN
ZZ01	5205-0313	IMP 4000 MAIN PCB ASSY
ZZ02	5205-0314	IMP 4000 DISPLAY PCB ASSY
ZZ03	5205-0316	IMP 4000 LOAD PCB ASSY
ZZ04	5215-0311	IMP 4000 BOTTOM ENCLOSURE ASSY
ZZ05	5215-0312	IMP 4000 TOP ENCLOSURE ASSY
ZZ06	5023-0149	IMP 4000 DEFIB CONTACT COVER
ZZ07	5008-0434	IMP 4000 BATTERY BRACKET
ZZ08	5008-0438	IMP 4000 BATTERY CLAMP
ZZ09	5215-0313	IMP 4000 VERT LOAD BRCKT ASSY
ZZ10	5008-0439	IMP 4000 HORIZ LOAD BRCKT
ZZ11	5027-0229	IMP 4000 INS SHT HORIZ LOAD BX
ZZ12	5027-0230	IMP 4000 LOAD PCB INSULATOR
ZZ13	4709-0029	SCREW PFH 1/4-20 3/4 L MOD
ZZ14	5001-0513	IMP 4000 TOP DATA LABEL
ZZ15	5001-0516	IMP 4000 REAR DATA LABEL
ZZ16	5001-0517	IMP 4000 LEFT DATA LABEL
ZZ17	5001-0518	IMP 4000 RIGHT DATA LABEL
ZZ18	5001-0514	IMP 4000 SERIAL NUMBER SLIP
ZZ19	5015-0155	229A CONTACT PLATE
ZZ20	5008-0442	IMP 4000 COVER, ROM DOOR
ZZ21	4902-0030	HANDLE BLACK
ZZ22	4904-0039	BAIL KIT 7" W/ FEET
ZZ23	4904-0061	BUSHING SNAP 9/16 ID 3/4 HOLE
ZZ24	8006-0015	FOAM TAPE 1 X 1/8 3" LG
ZZ25	4711-6019	D WASHER BNC
ZZ26	4704-2434	SCREW PPH 6-32 X 5/16
ZZ27	4704-2435	SCREW PPH 6-32 X 3/8
ZZ28	4704-2437	SCREW PPH 6-32 X 1/2

## IMPULSE 4000 FINAL ASSEMBLY COMPONENT LIST


REFERENCE	PART NUMBER	DESCRIPTION
ZZ29	4704-2442	SCREW PPH 6-32 X 1
ZZ30	4711-9720	NUT KEP 6-32 X 1/4
ZZ31	4711-6414	WSHR FLAT #6 .26 OD
ZZ32	4711-0119	WSHR INT TTH #6
ZZ33	4910-0148	JACKSCREW DSUB .187 4-40
ZZ34	4709-0021	SCREW PPH BLACK 4-40 X 3/8
ZZ35	4709-0028	SCREW PPH BLACK 6-32 X 3/8
ZZ37	4708-2434	SCREW PPH S/S 6-32 X 5/16
ZZ38	4708-0435	SCREW PFH S/S 6-32 X 3/8
ZZ39	4709-0019	SCREW PPH BLACK 6-32 X 3/16
ZZ40	8006-0037	FOAM TAPE 1 X 1/16 3" LG



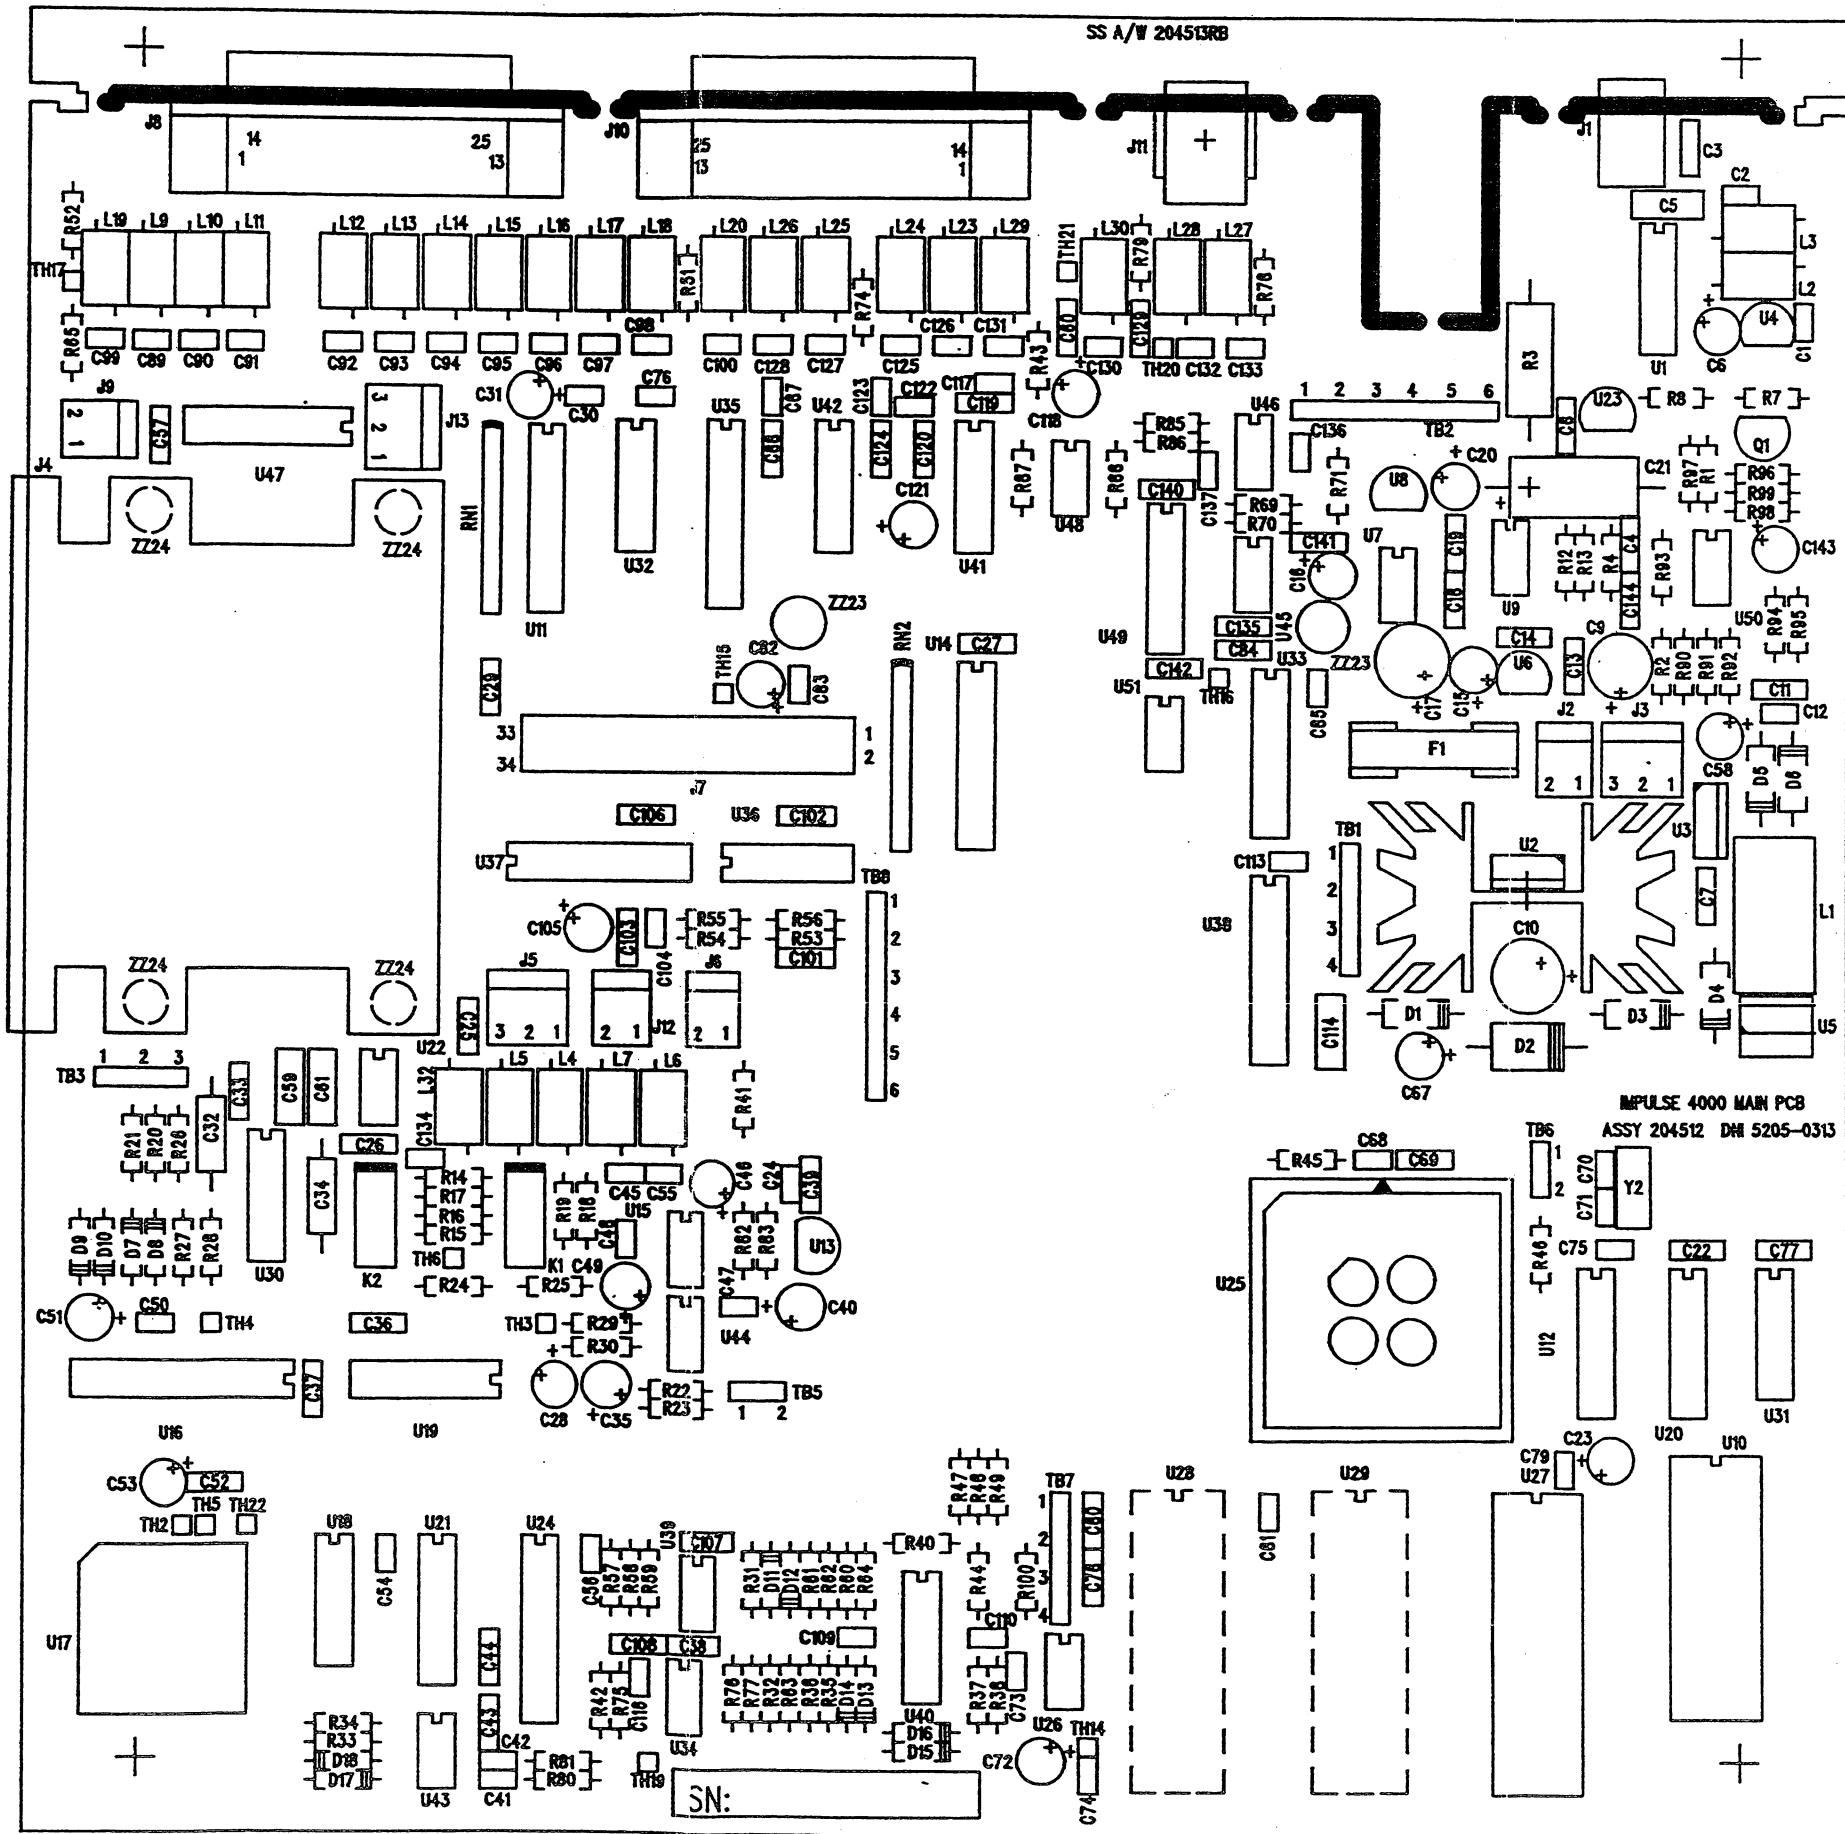

IMPULSE 4000 MAIN PCB  
ASSY 204512 DH 5205-0313

LTR	DESCRIPTION	DATE	REV BY
A	RELEASE TO PROD. ECO#1389	6/5/94	
B	ECO1628 - CHG R2 AND U2	6/26/94	JTW
C	ECO1937, DELETED R96, R97, Q1	8/27/96	DG

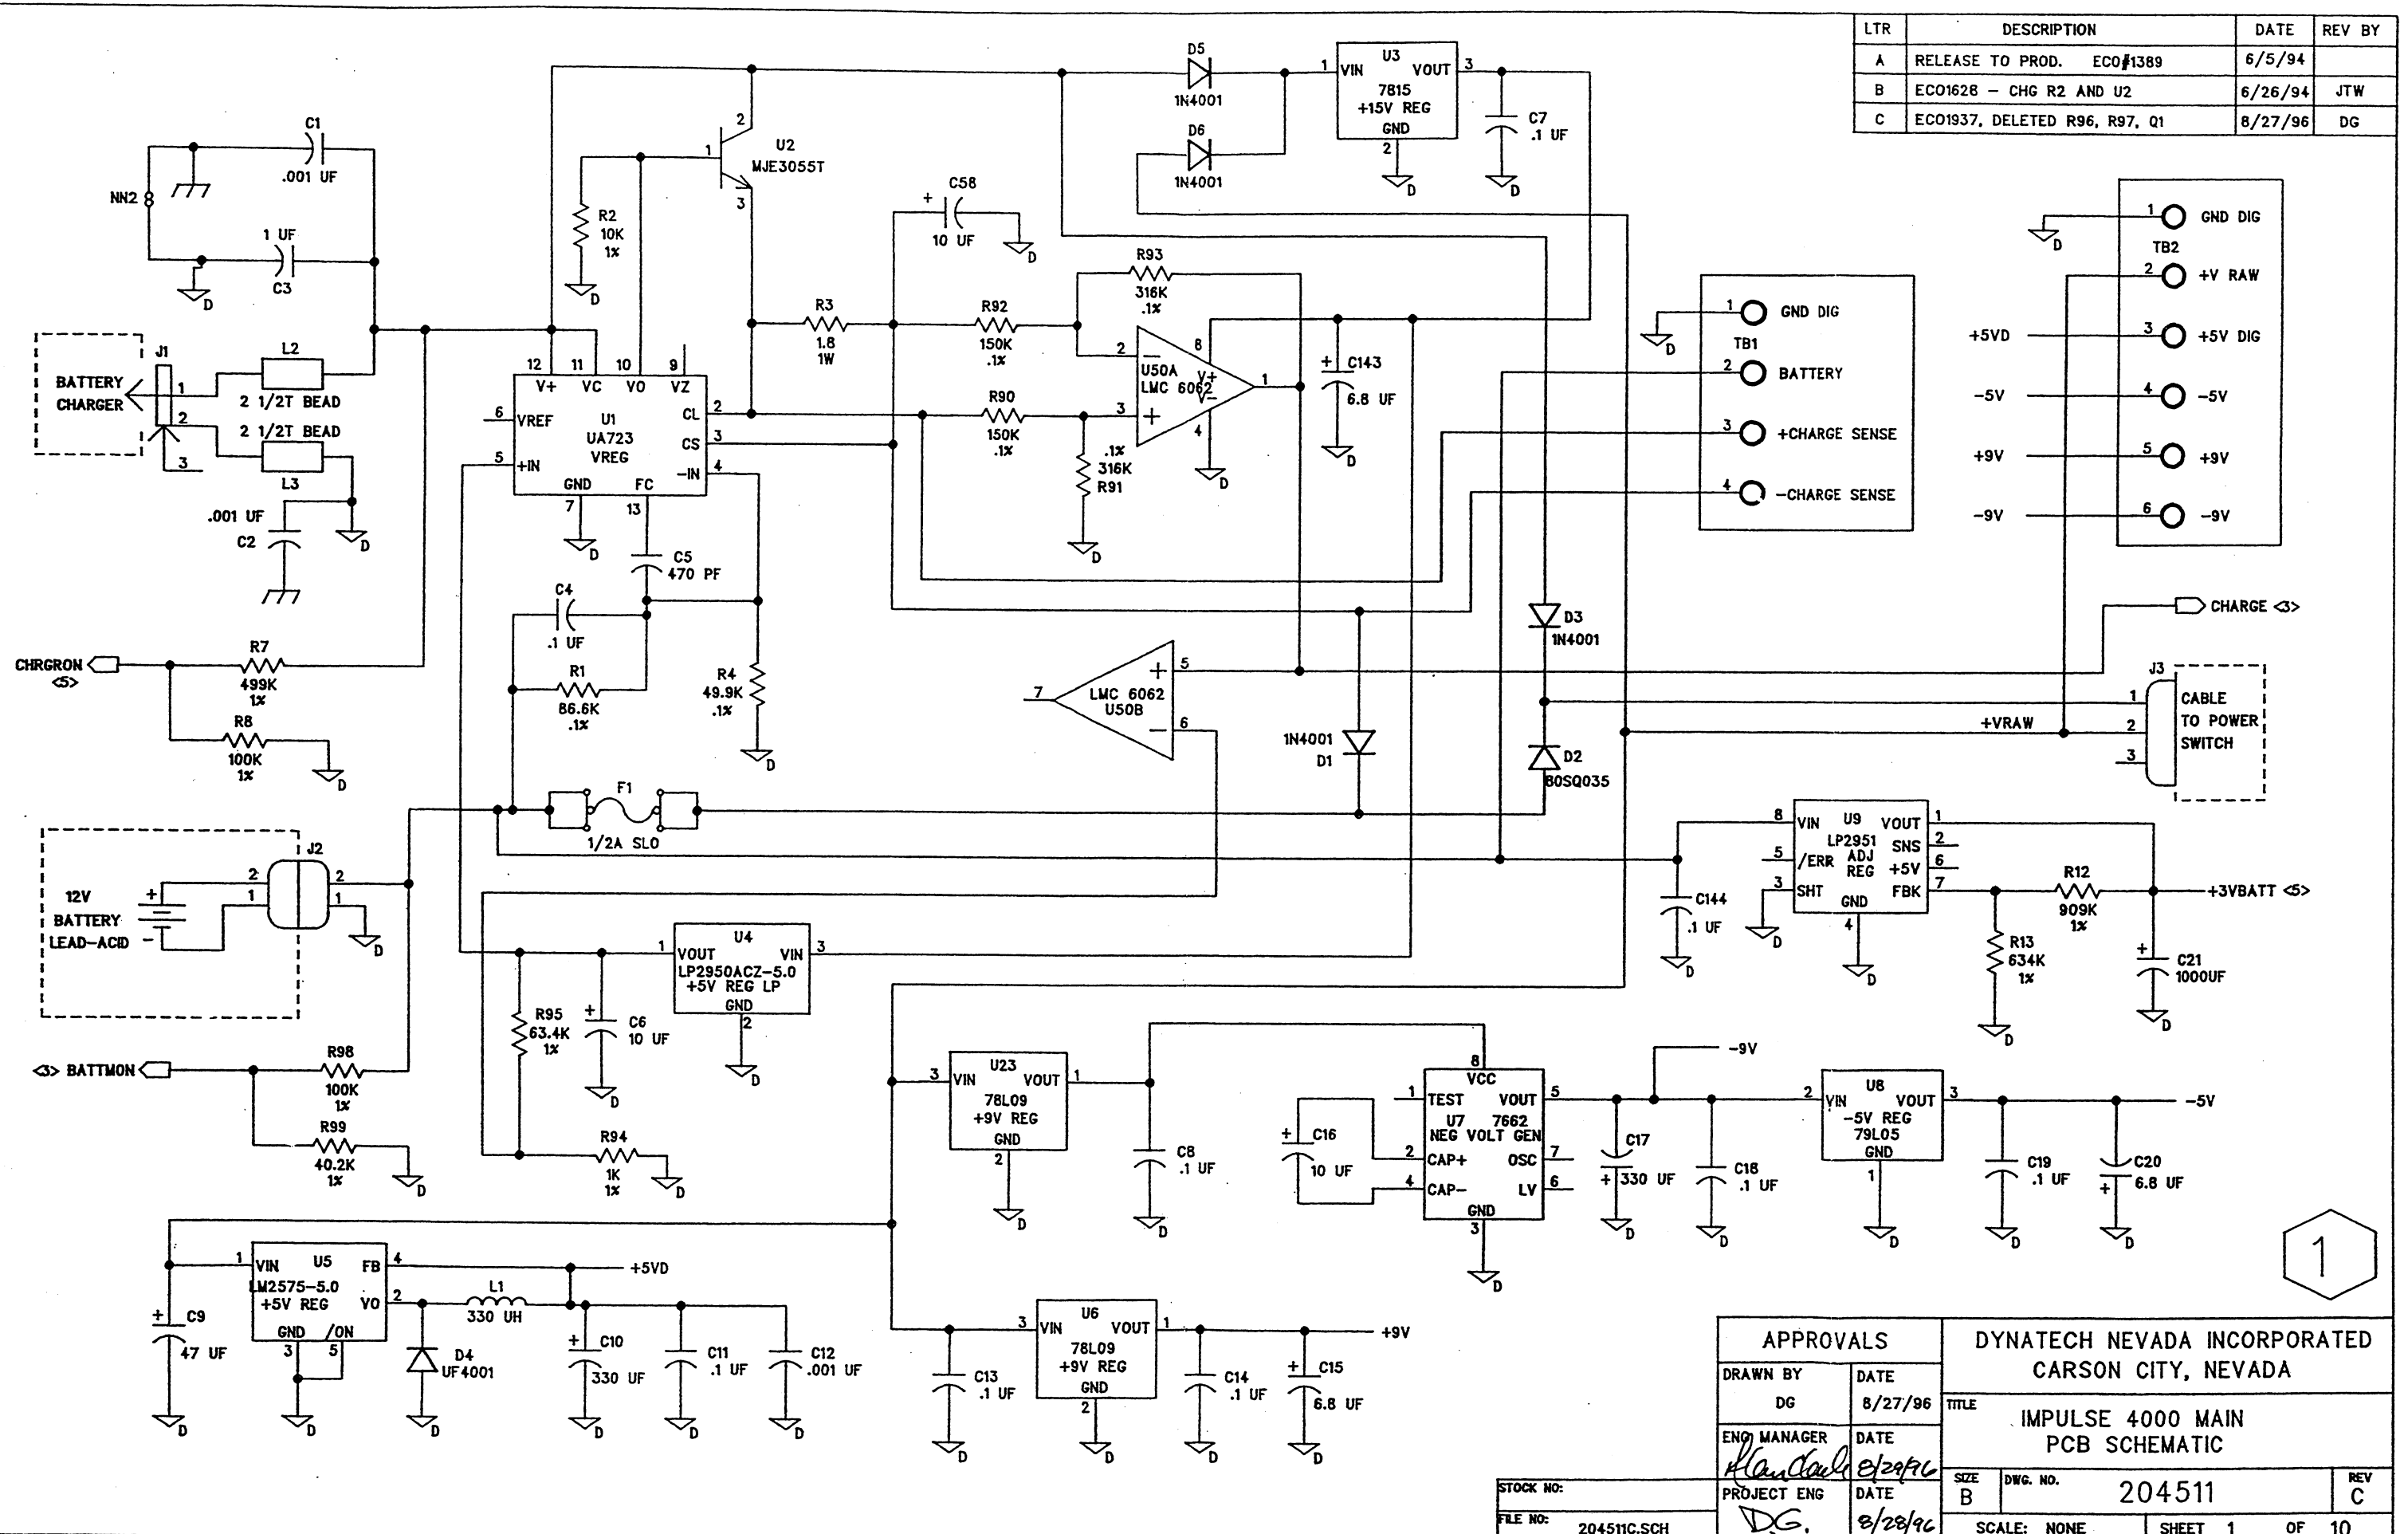


APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
DRAWN BY DG	DATE 8/27/96	TITLE IMPULSE 4000 MAIN PCB SCHEMATIC	
ENG. MANAGER <i>[Signature]</i>	DATE 8/28/96	SIZE B	DWG. NO. 204511
PROJECT ENG D.G.	DATE 8/28/96	SCALE: NONE	SHEET 1 OF 10

STOCK NO:  
FILE NO: 204511C.SCH

1

LTR	DESCRIPTION	DATE	REV BY
	FOR REVISION SEE SHEET 1		

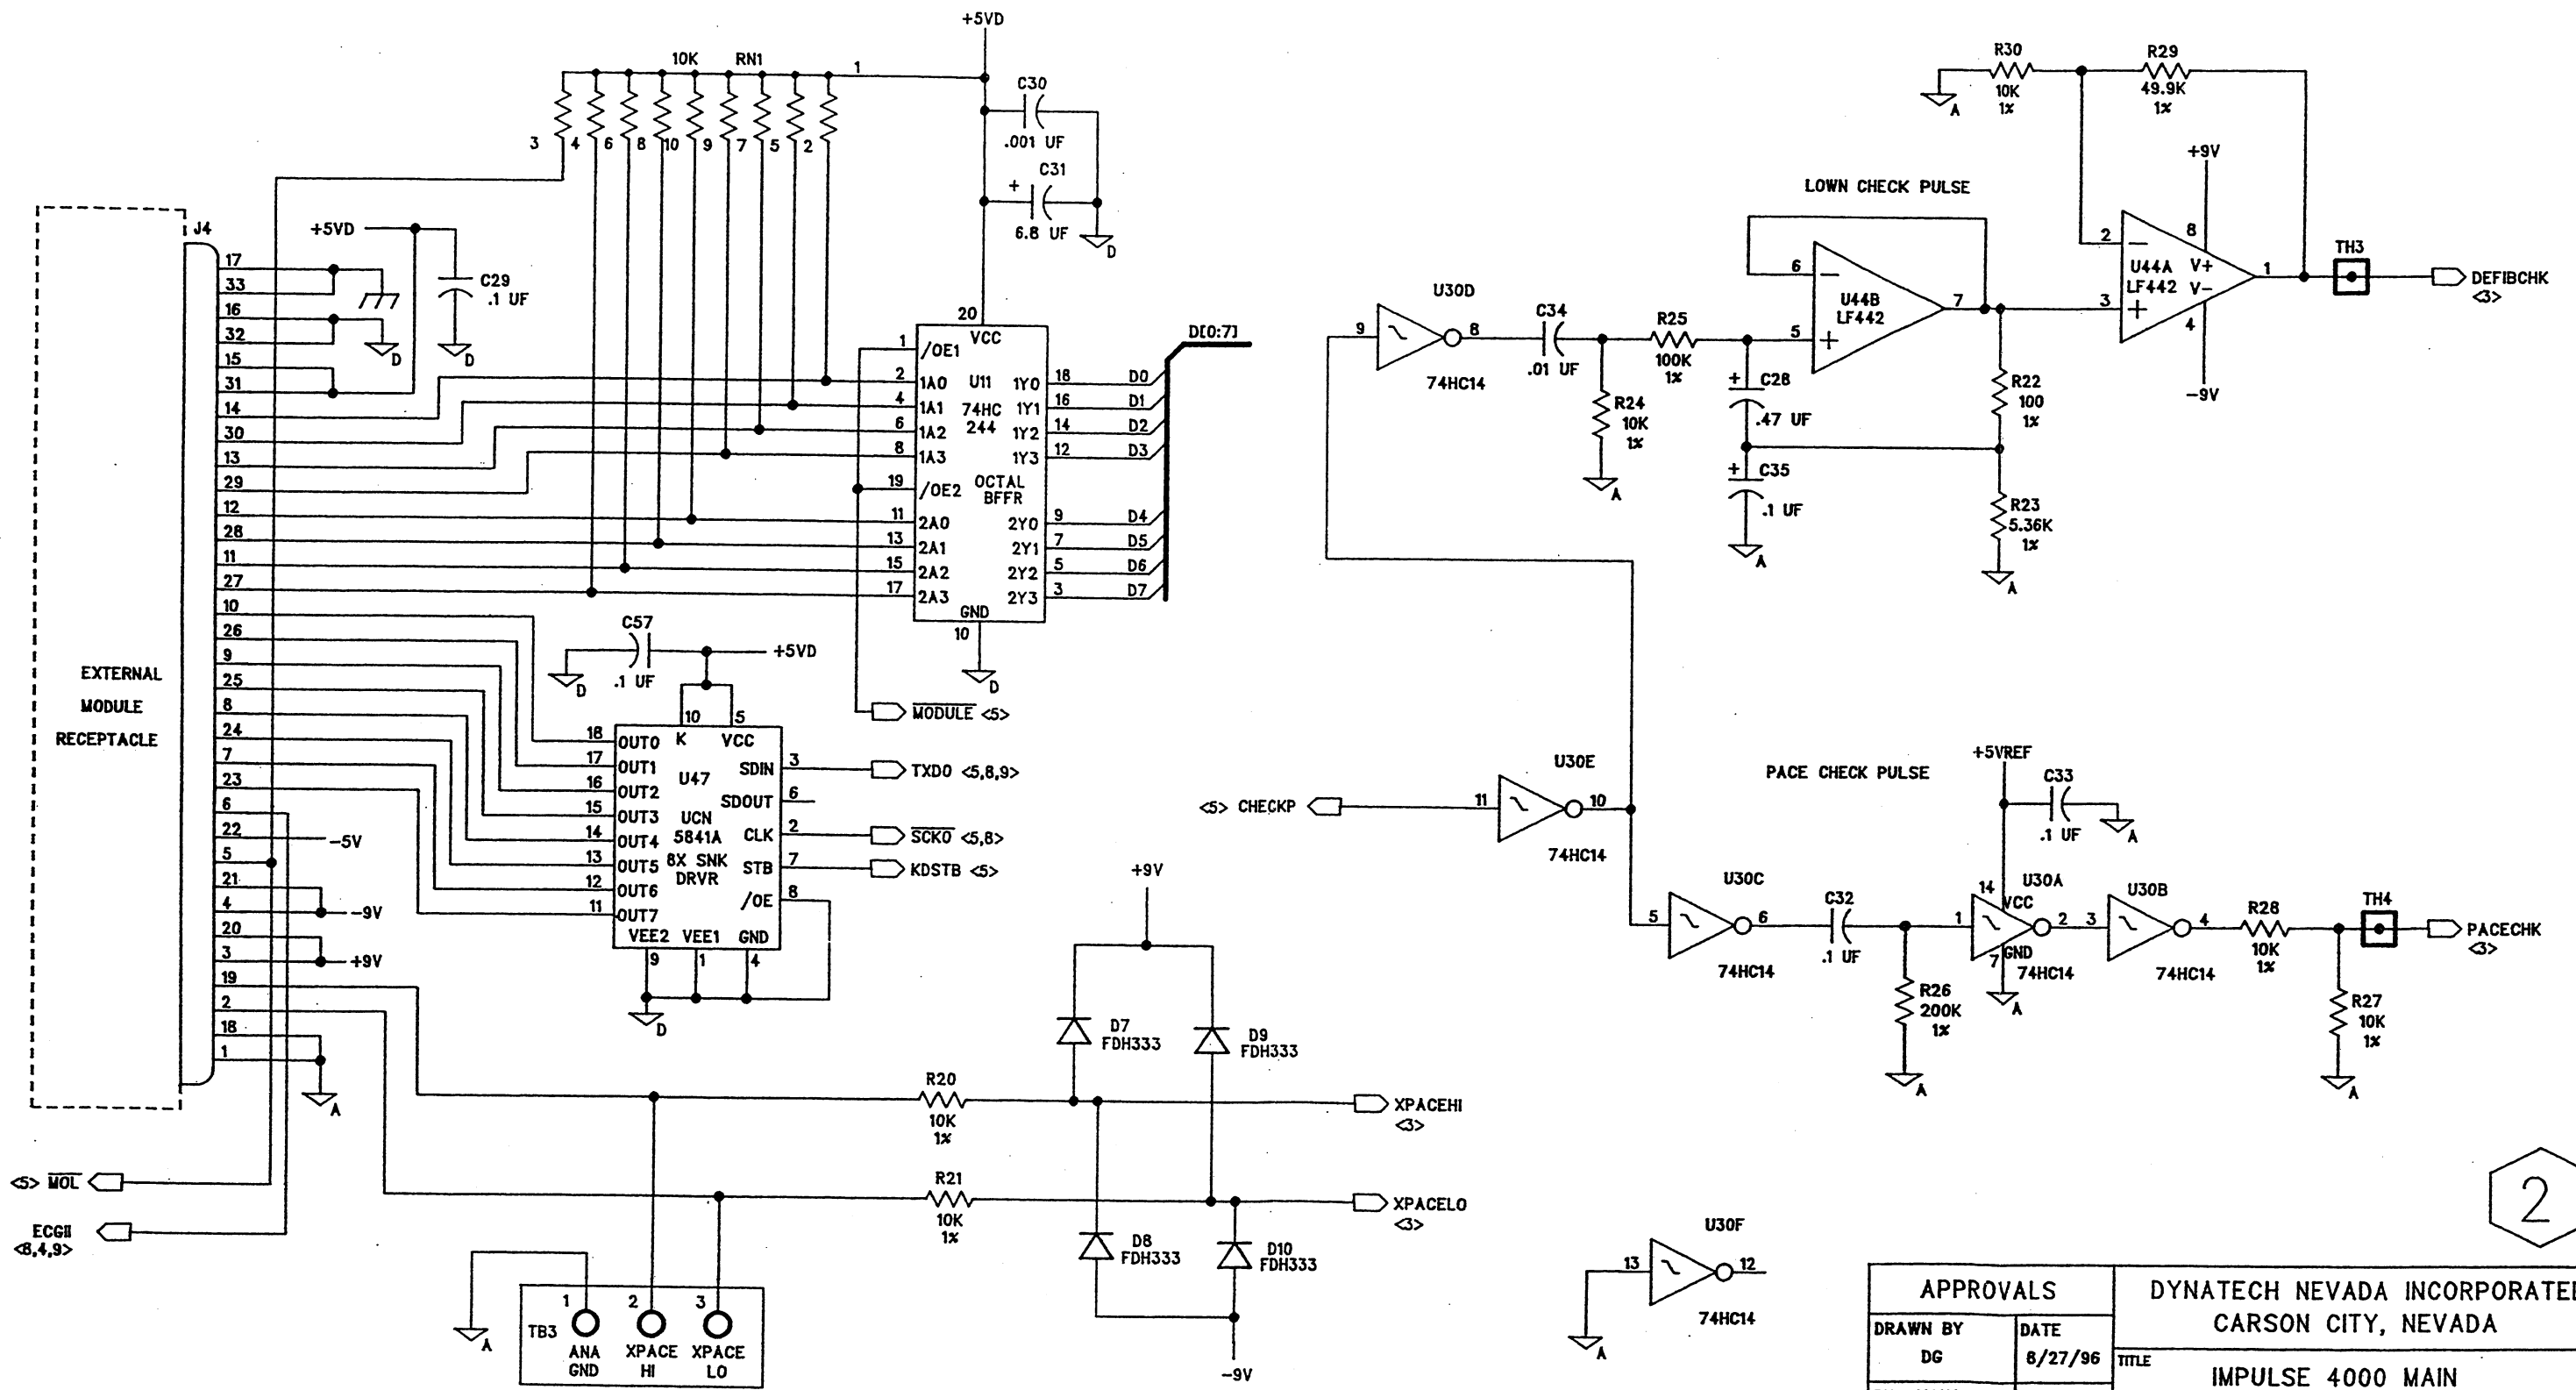


2

APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
DRAWN BY DG	DATE 8/27/96	TITLE IMPULSE 4000 MAIN PCB SCHEMATIC	
ENG. MANAGER <i>[Signature]</i>	DATE 8/29/96	SIZE B	DWG. NO. 204511
PROJECT ENG D.G.	DATE 8/29/96	SCALE: NONE	SHEET 2 OF 10

STOCK NO:  
FILE NO: 20451C.SCH


LTR	DESCRIPTION	DATE	REV BY
	FOR REVISION SEE SHEET 1		

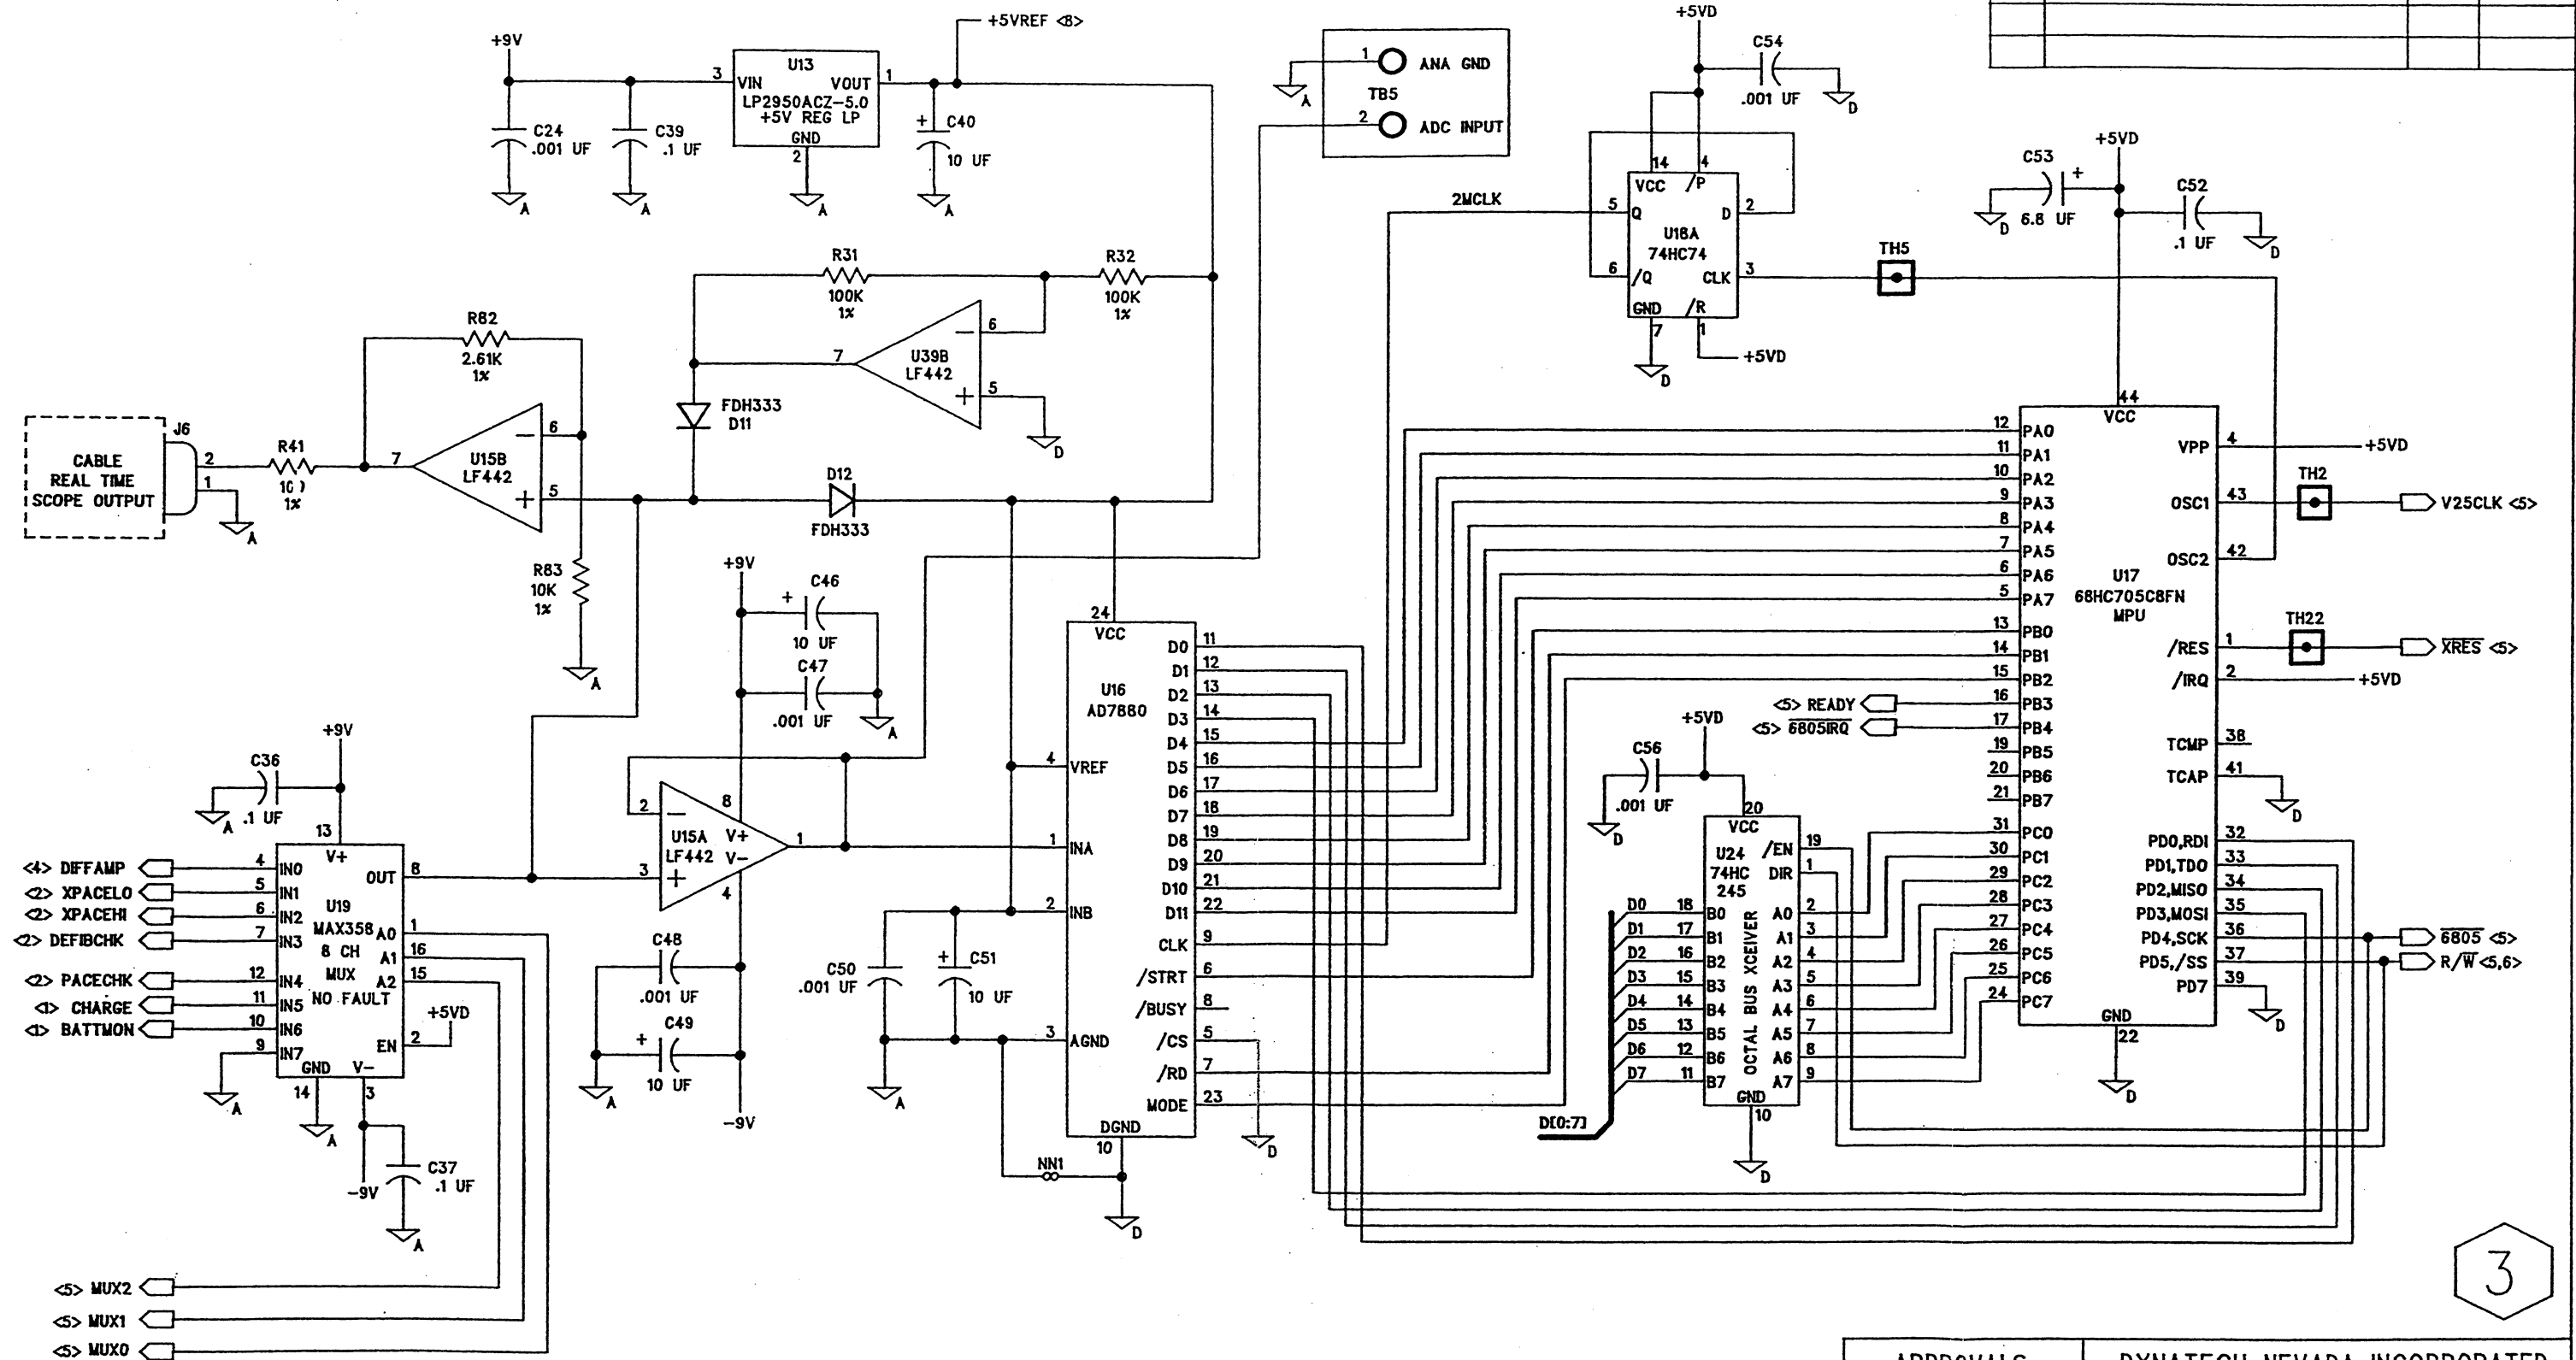

3

APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
DRAWN BY DG	DATE 8/27/96	TITLE IMPULSE 4000 MAIN PCB SCHEMATIC	
ENG. MANAGER <i>[Signature]</i>	DATE 8/29/96	SIZE B	DWG. NO. 204511
PROJECT ENG D.G.	DATE 8/29/96	REV C	SCALE: NONE
STOCK NO:		SHEET 3 OF 10	
FILE NO: 204511C.SCH			


LTR	DESCRIPTION	DATE	REV BY
	FOR REVISION SEE SHEET 1		

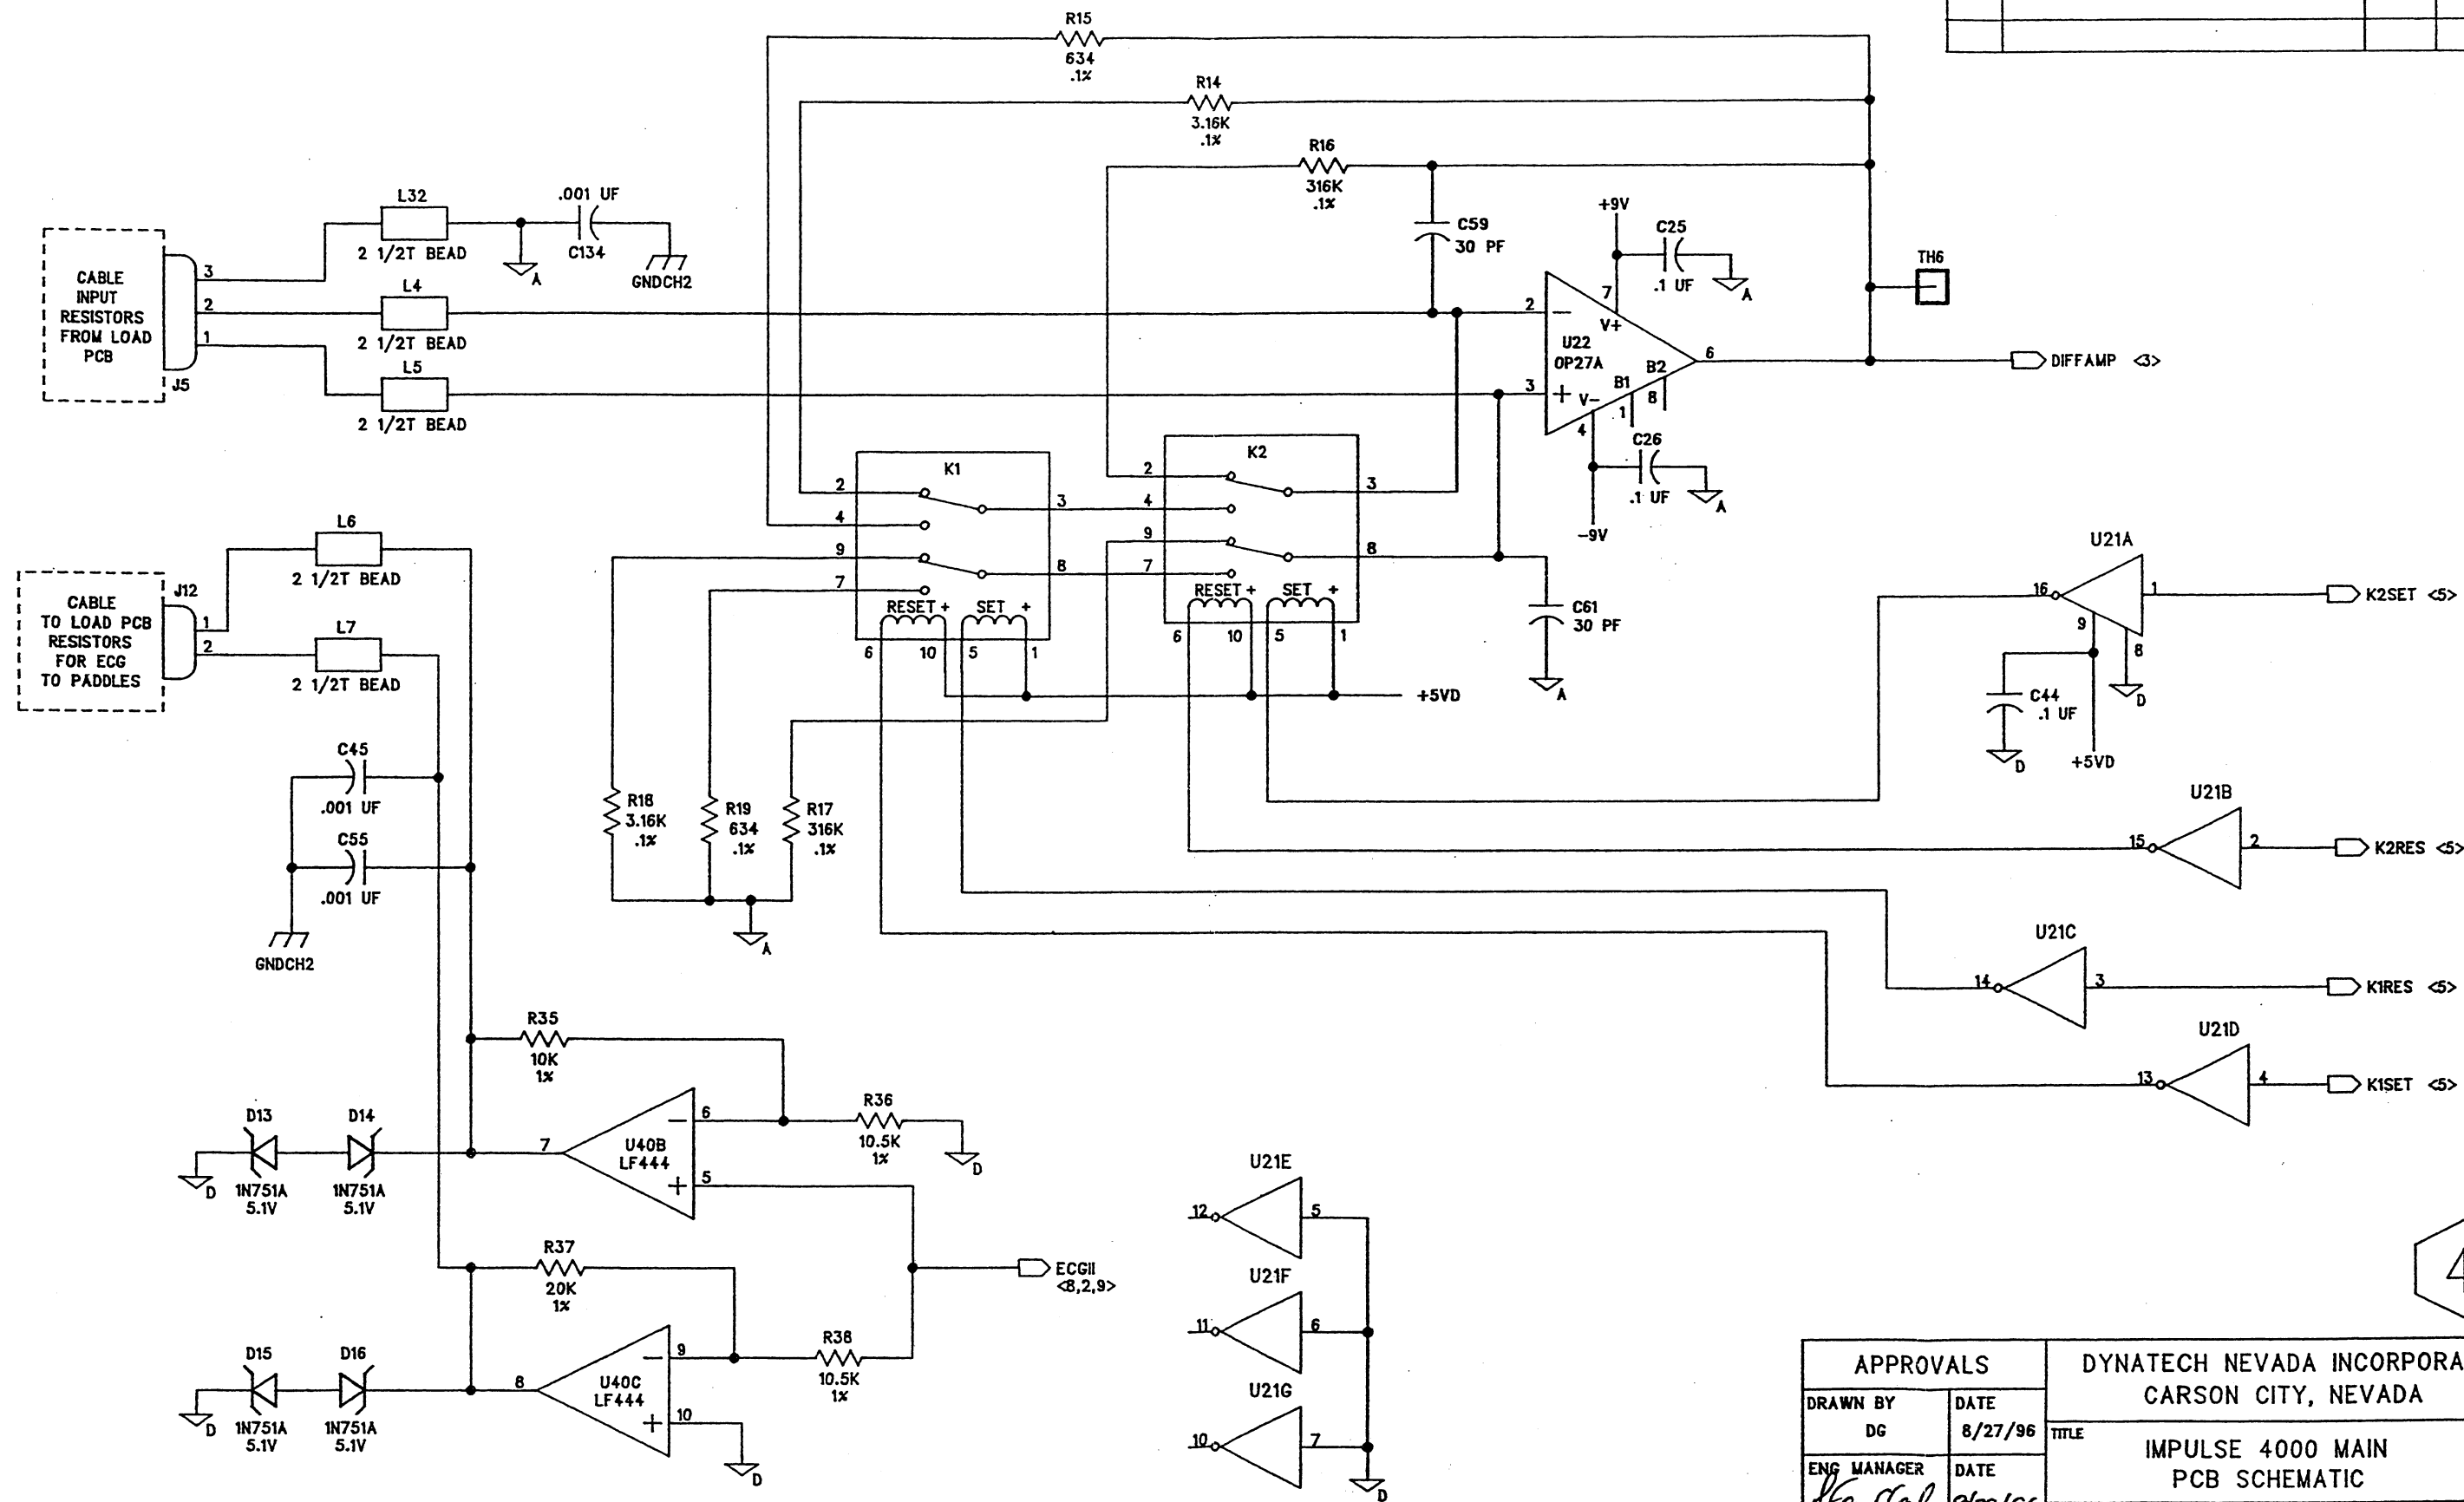

4

APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
DRAWN BY DG	DATE 8/27/96	TITLE IMPULSE 4000 MAIN PCB SCHEMATIC	
ENG MANAGER <i>[Signature]</i>	DATE 8/29/96	SIZE B	DWG. NO. 204511
PROJECT ENG D.G.	DATE 8/29/96	SCALE: NONE	REV C
STOCK NO:		SHEET 4 OF 10	
FILE NO: 204511C.SCH			


LTR	DESCRIPTION	DATE	REV BY
	FOR REVISION SEE SHEET 1		

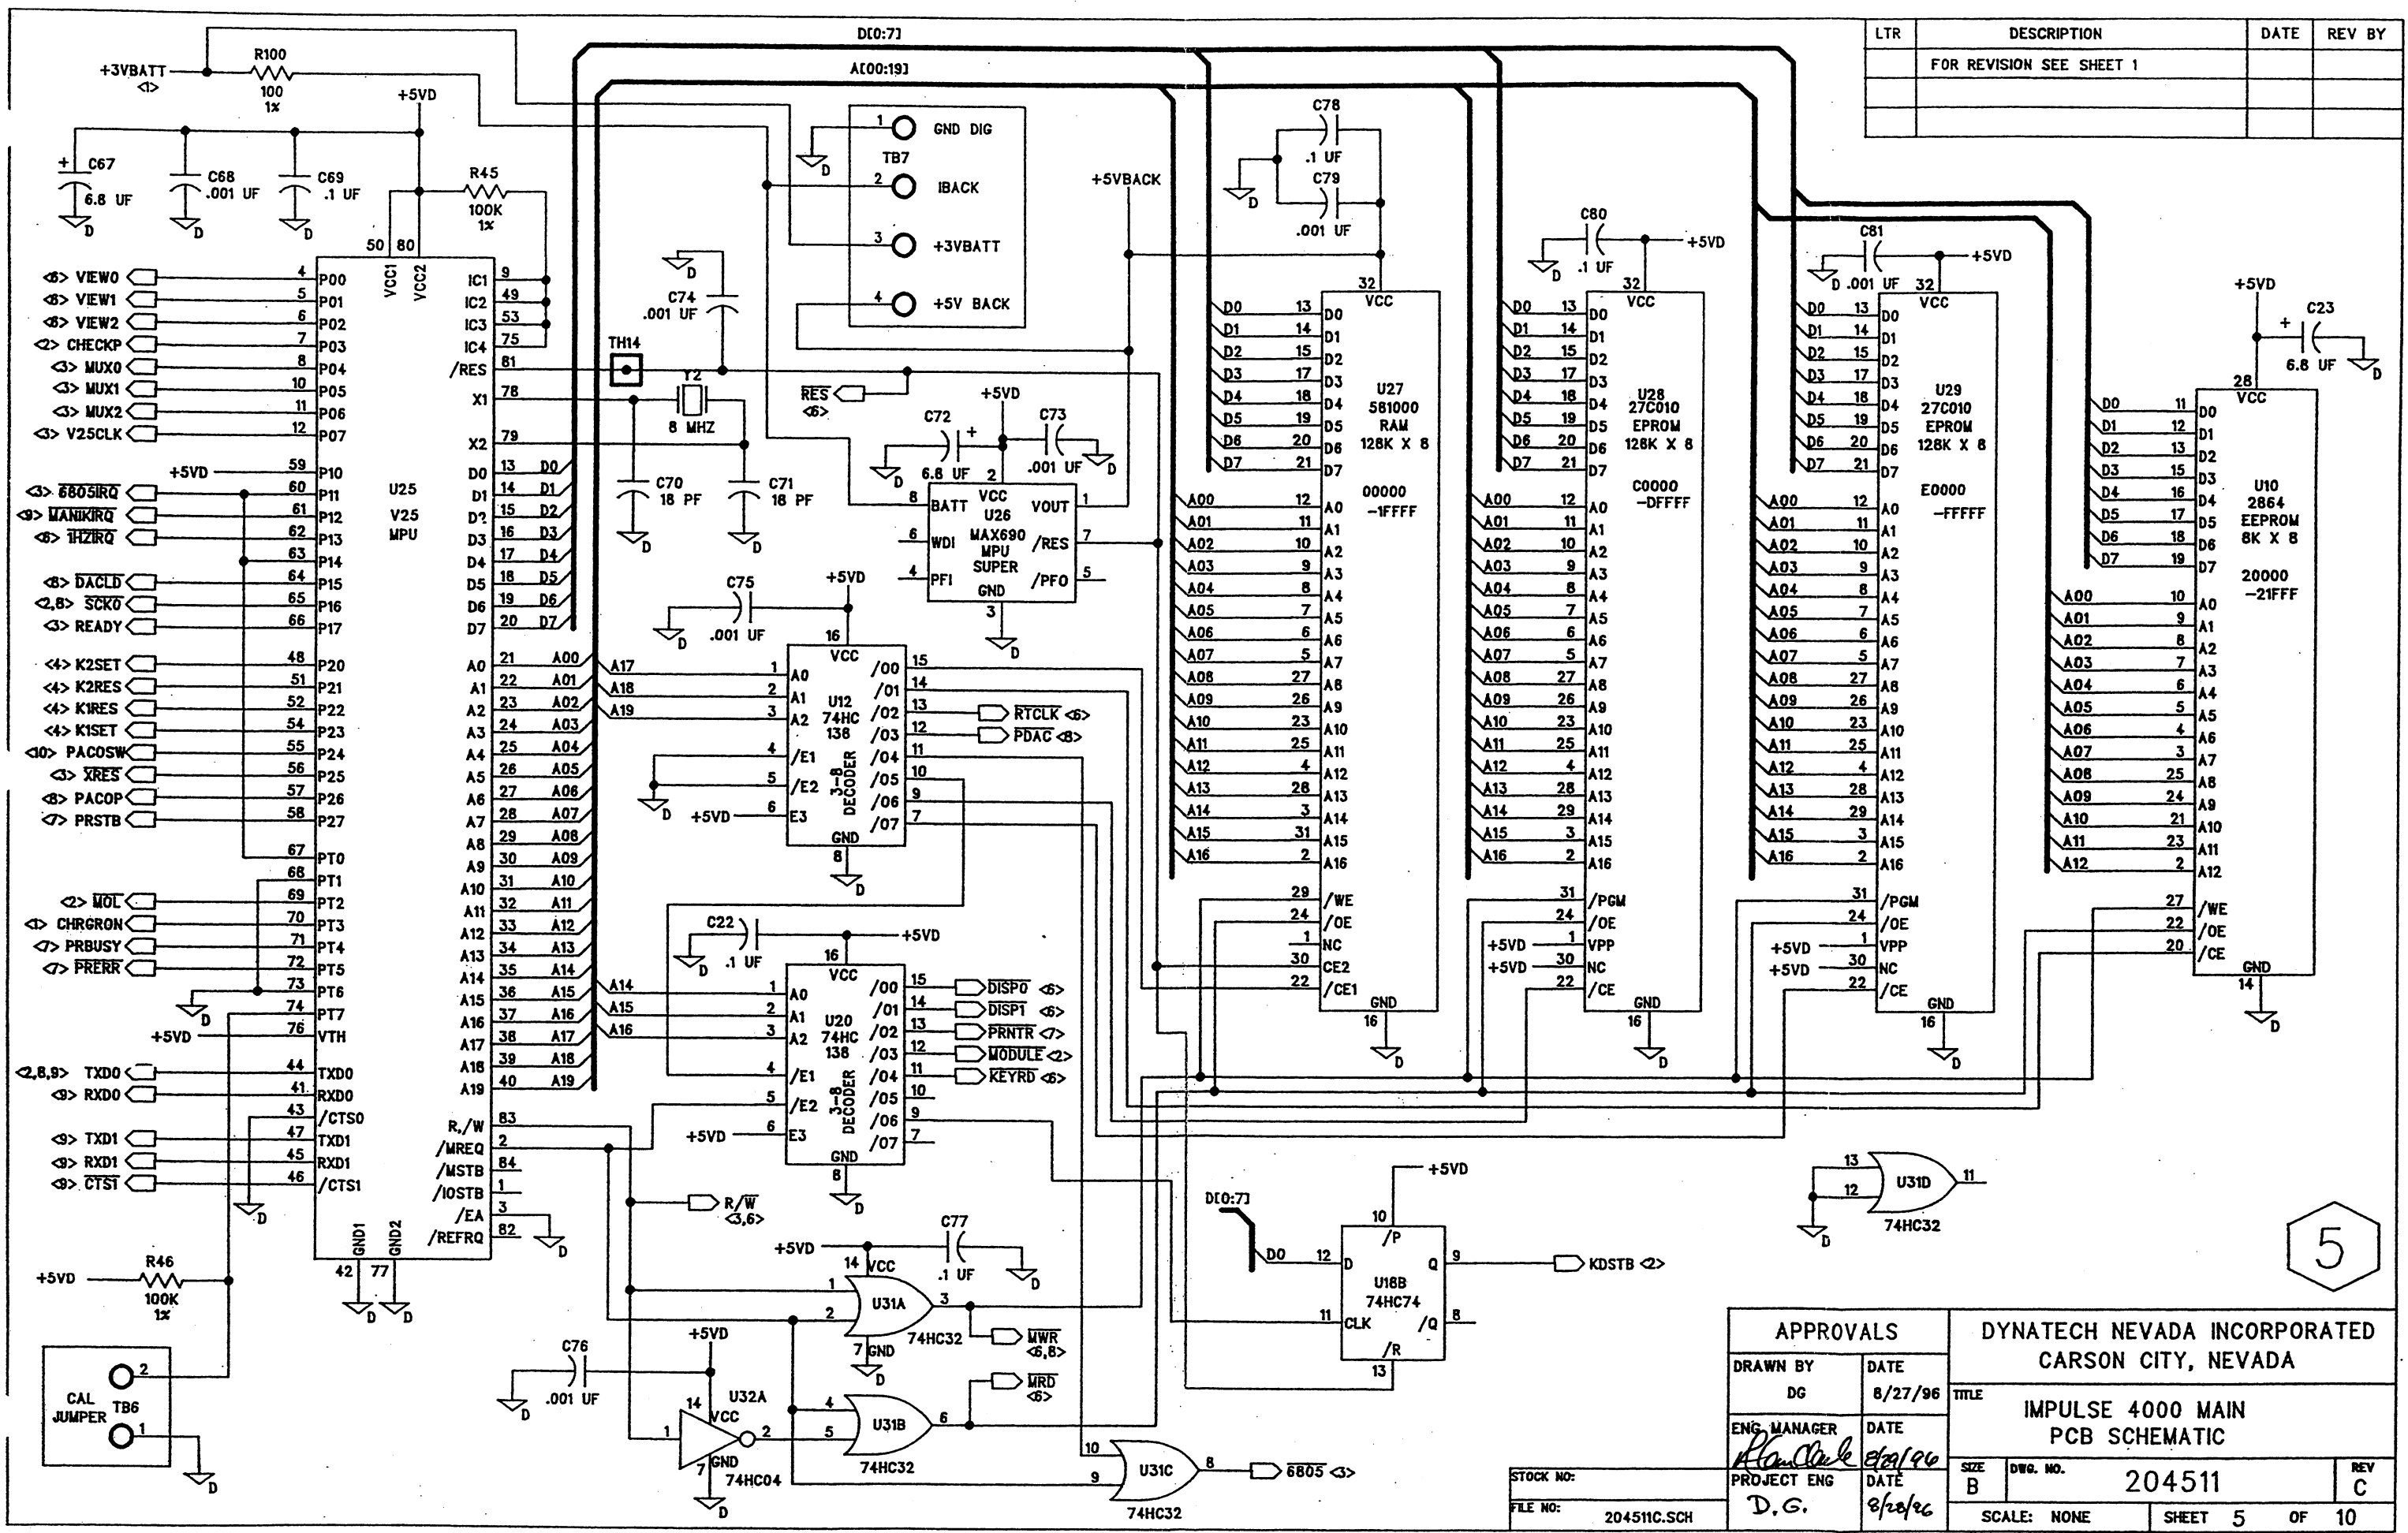

APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
DRAWN BY DG	DATE 8/27/96	TITLE IMPULSE 4000 MAIN PCB SCHEMATIC	
ENG. MANAGER <i>[Signature]</i>	DATE 8/29/96	SIZE B	DWG. NO. 204511
PROJECT ENG D.G.	DATE 8/29/96	SCALE: NONE	REV C
STOCK NO:		SHEET 5 OF 10	
FILE NO: 204511C.SCH			

5

LTR	DESCRIPTION	DATE	REV BY
	FOR REVISION SEE SHEET 1		

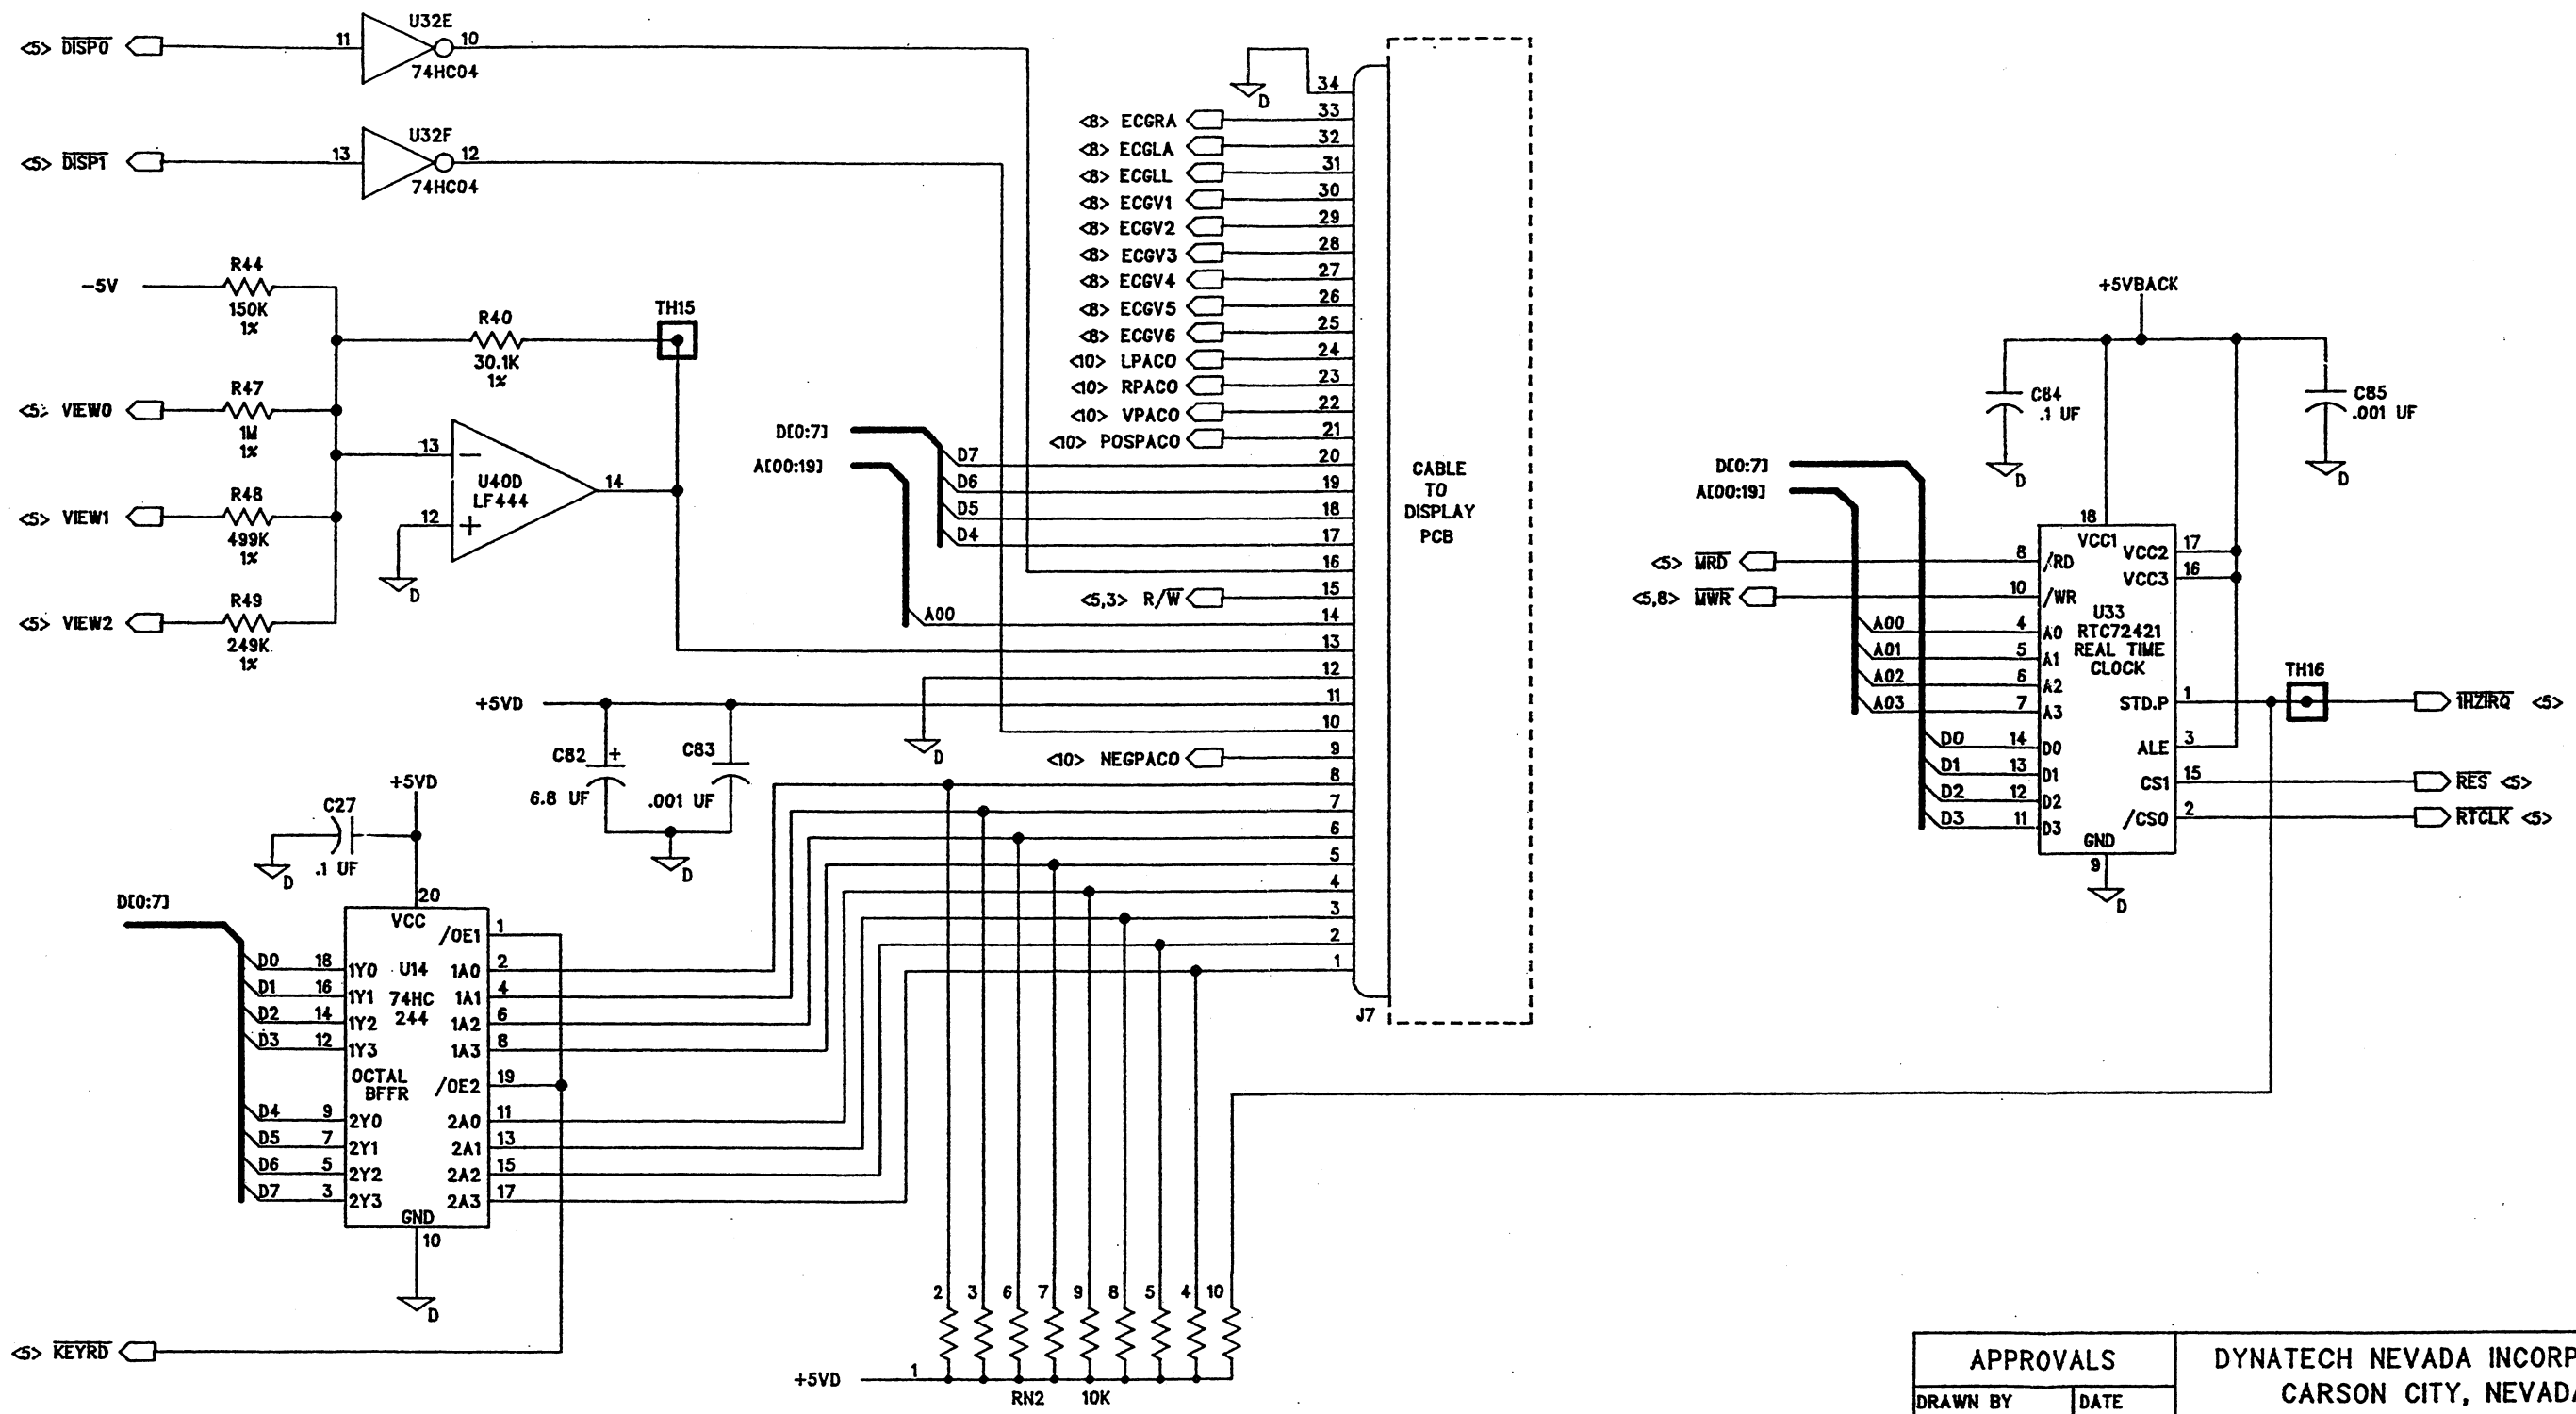


6

APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA		
DRAWN BY DG	DATE 8/27/96	TITLE IMPULSE 4000 MAIN PCB SCHEMATIC		
ENG. MANAGER <i>[Signature]</i>	DATE 8/29/96	SIZE B	DWG. NO. 204511	REV C
PROJECT ENG D.G.	DATE 8/28/96	SCALE: NONE		SHEET 6 OF 10

STOCK NO:  
FILE NO: 204511C.SCH

LTR	DESCRIPTION	DATE	REV BY
	FOR REVISION SEE SHEET 1		

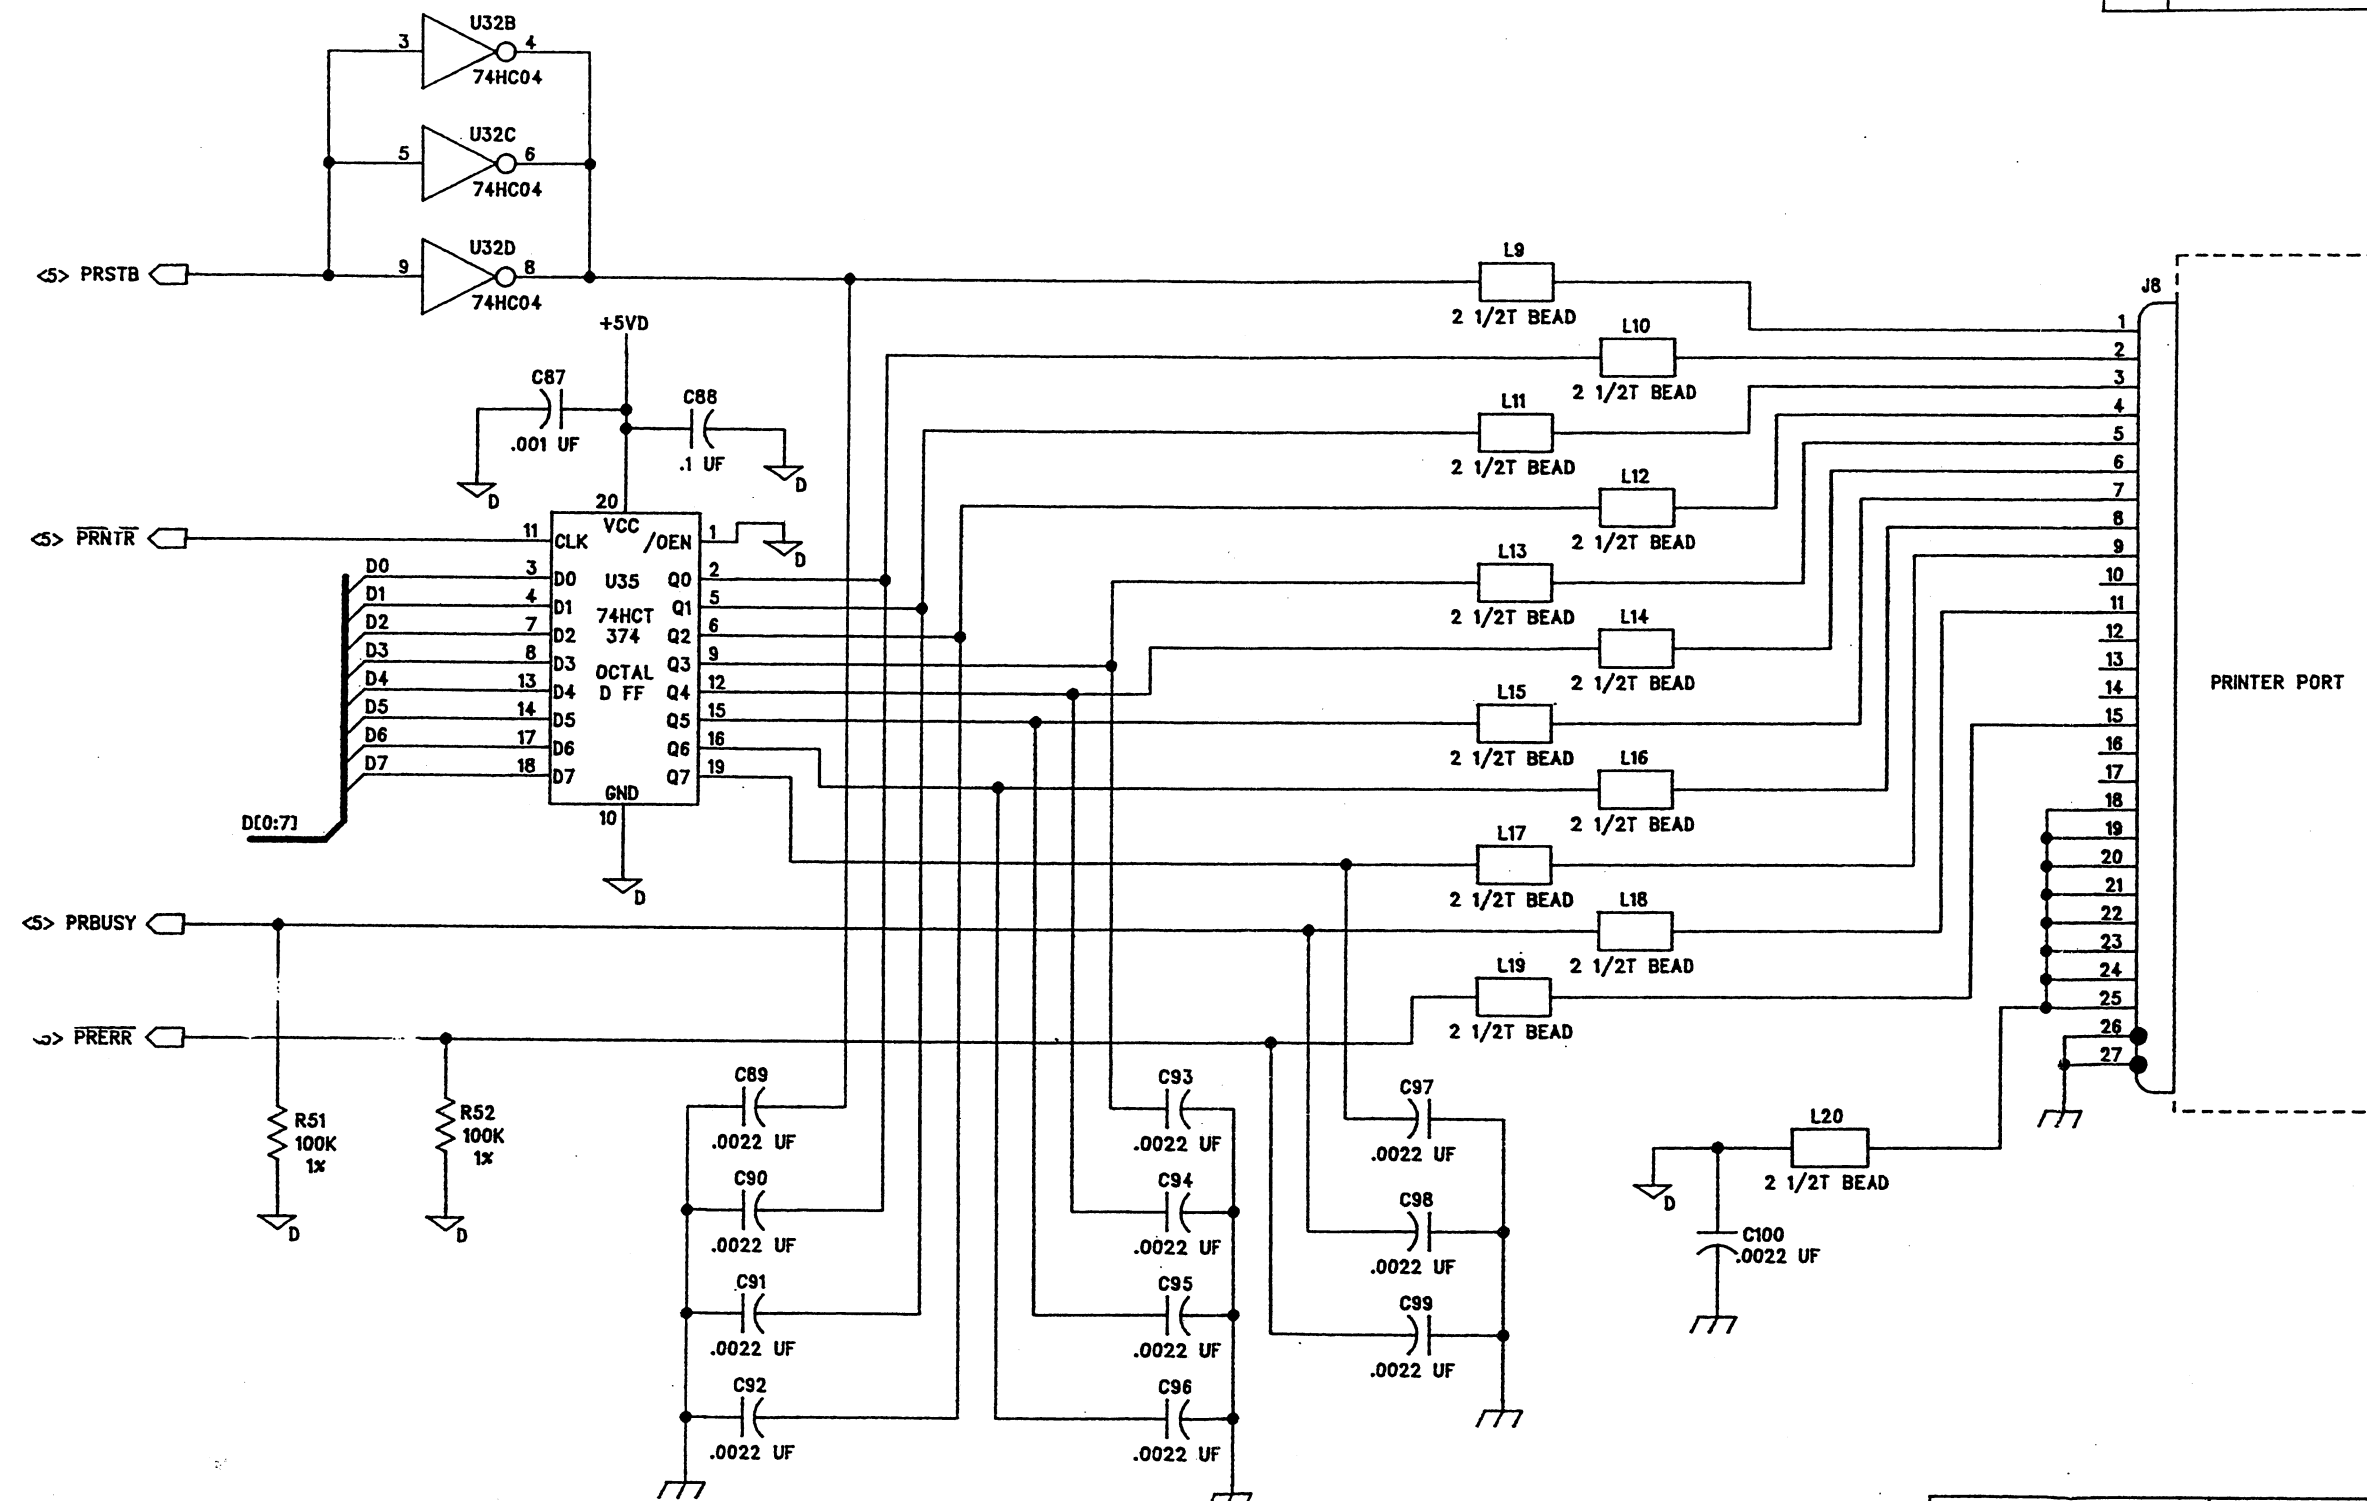


7

APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
DRAWN BY DG	DATE 8/27/96	TITLE IMPULSE 4000 MAIN PCB SCHEMATIC	
END. MANAGER <i>Handal</i>	DATE 8/28/96	SIZE B	DWG. NO. 204511
PROJECT ENG D.G.	DATE 8/28/96	SCALE: NONE	SHEET 7 OF 10

STOCK NO:  
FILE NO: 204511C.SCH



LTR	DESCRIPTION	DATE	REV BY
	FOR REVISION SEE SHEET 1		

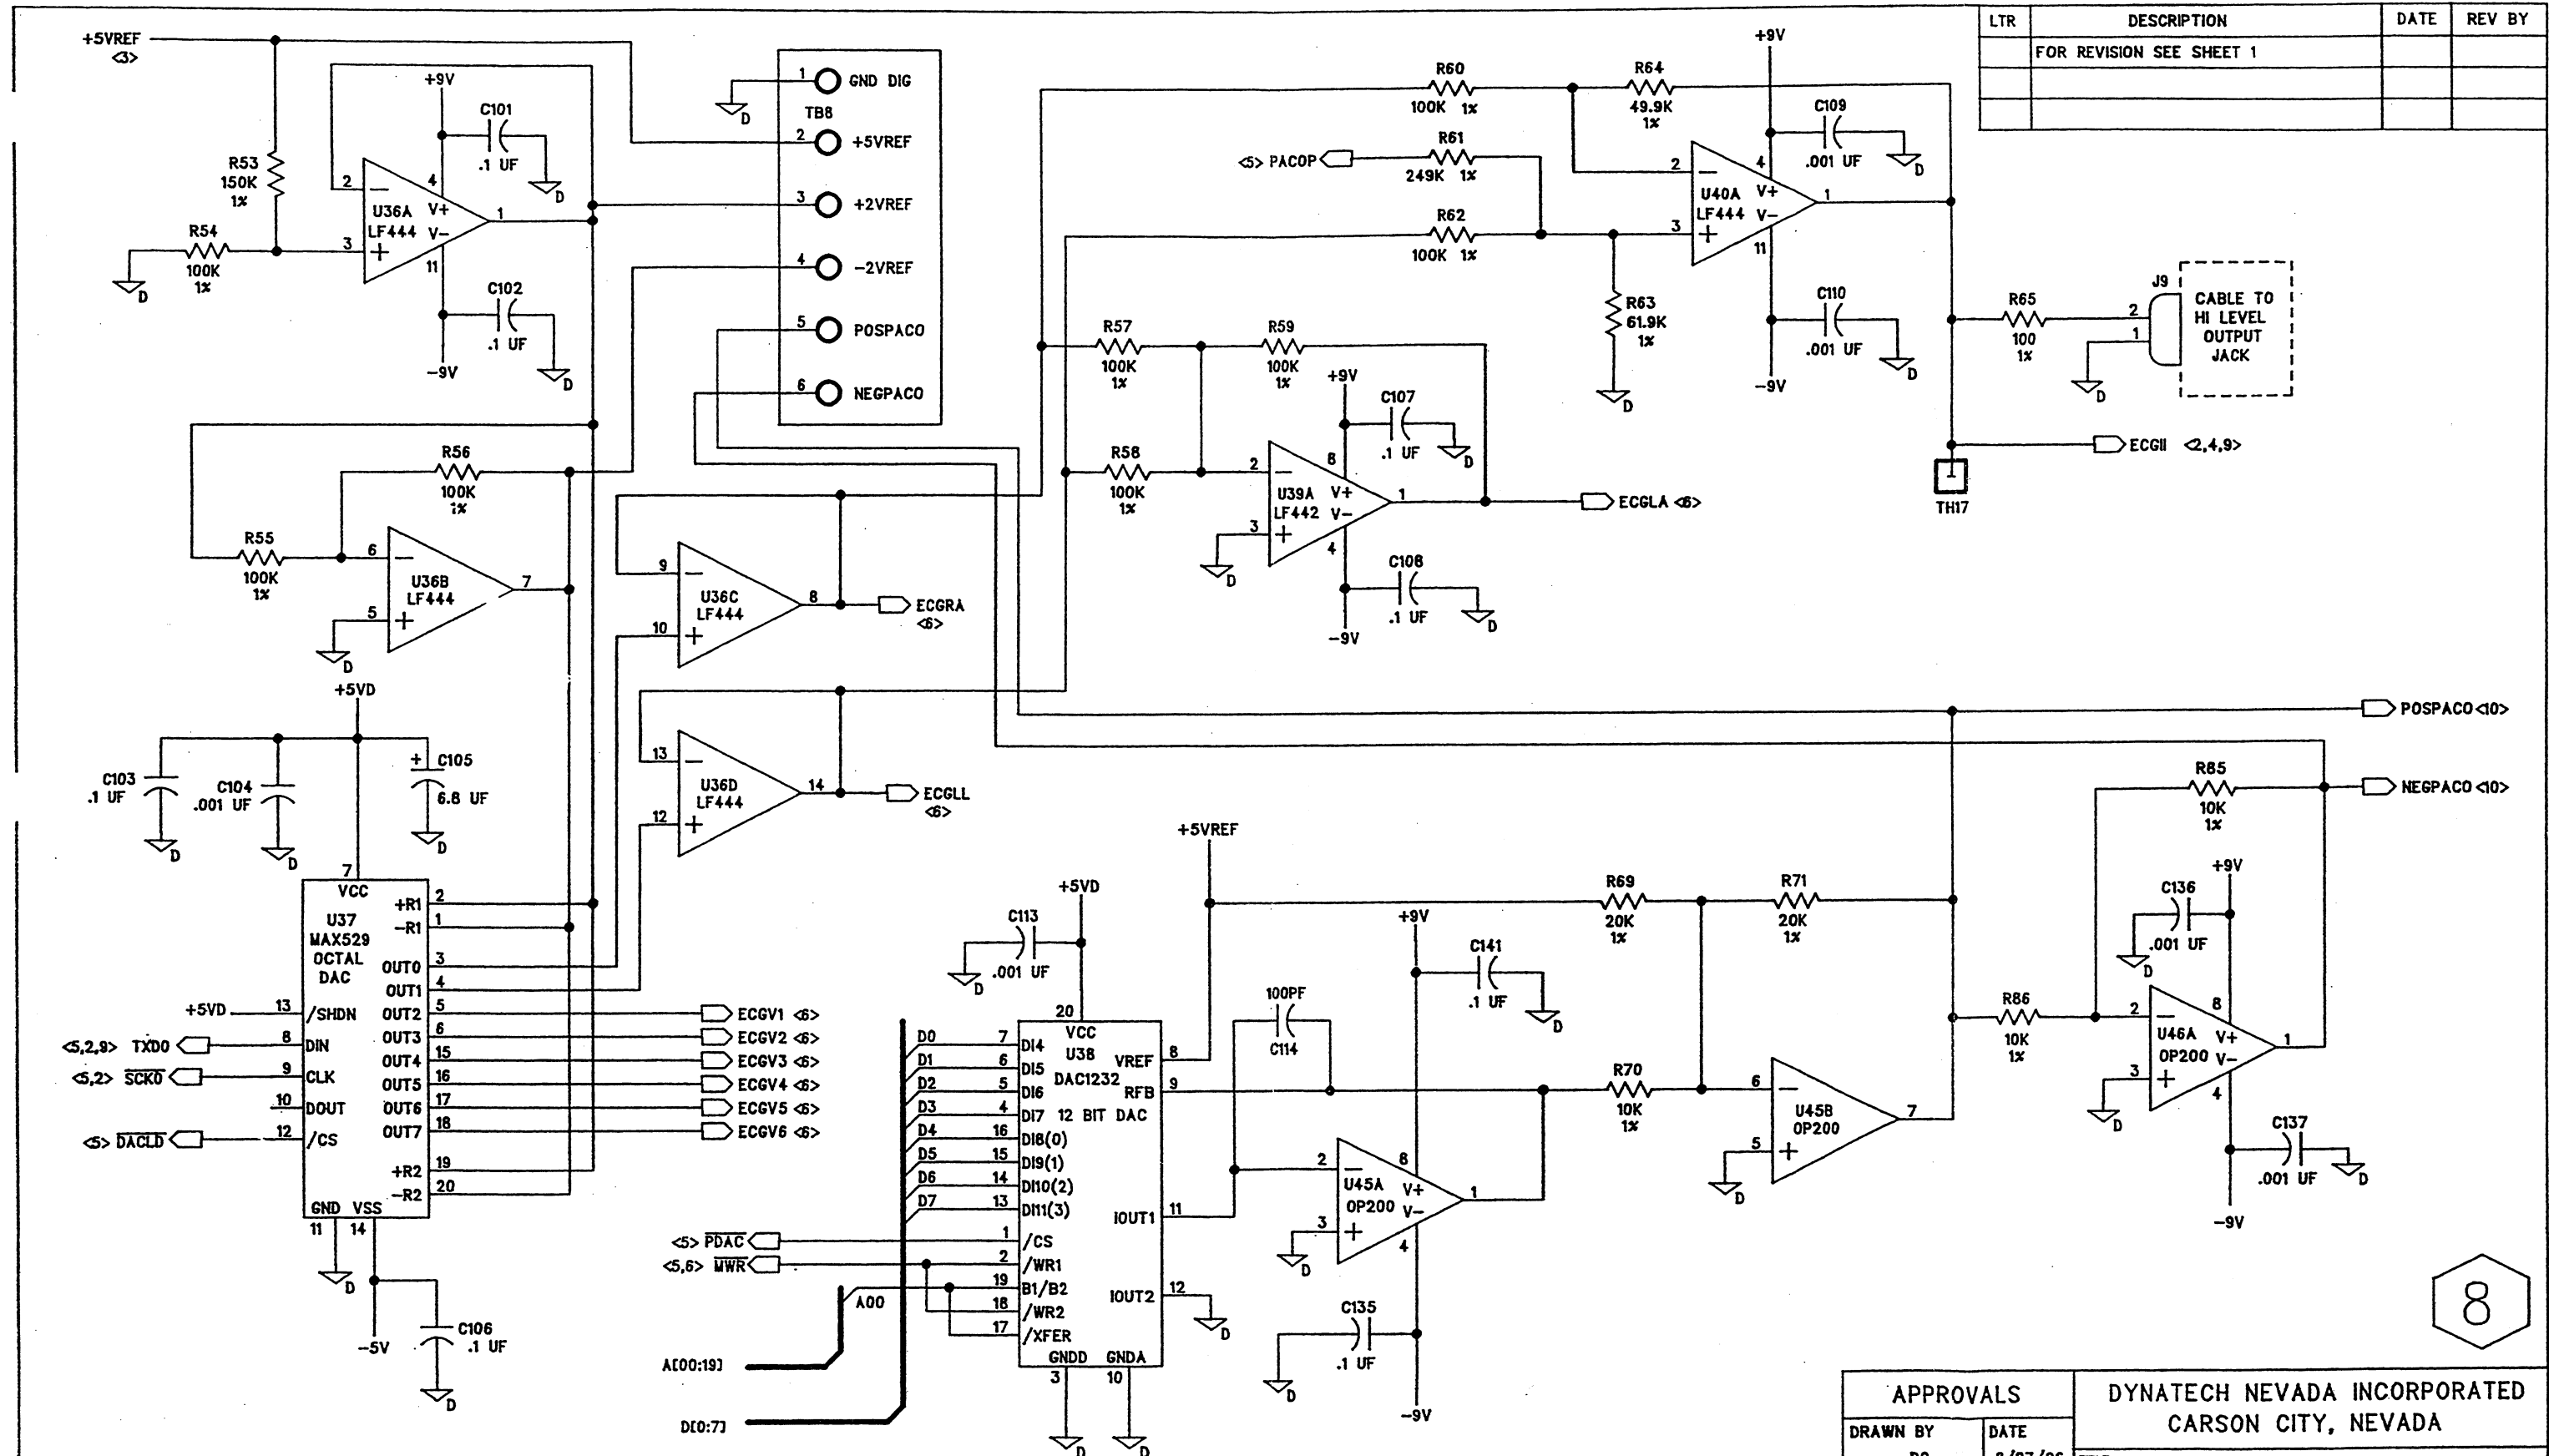


8


APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
DRAWN BY DG	DATE 8/27/96	TITLE IMPULSE 4000 MAIN PCB SCHEMATIC	
ENG. MANAGER <i>[Signature]</i>	DATE 8/28/96	SIZE B	DWG. NO. 204511
PROJECT ENG D.G.	DATE 8/28/96	SCALE: NONE	SHEET 8 OF 10

STOCK NO:  
FILE NO: 204511C.SCH

LTR	DESCRIPTION	DATE	REV BY
	FOR REVISION SEE SHEET 1		

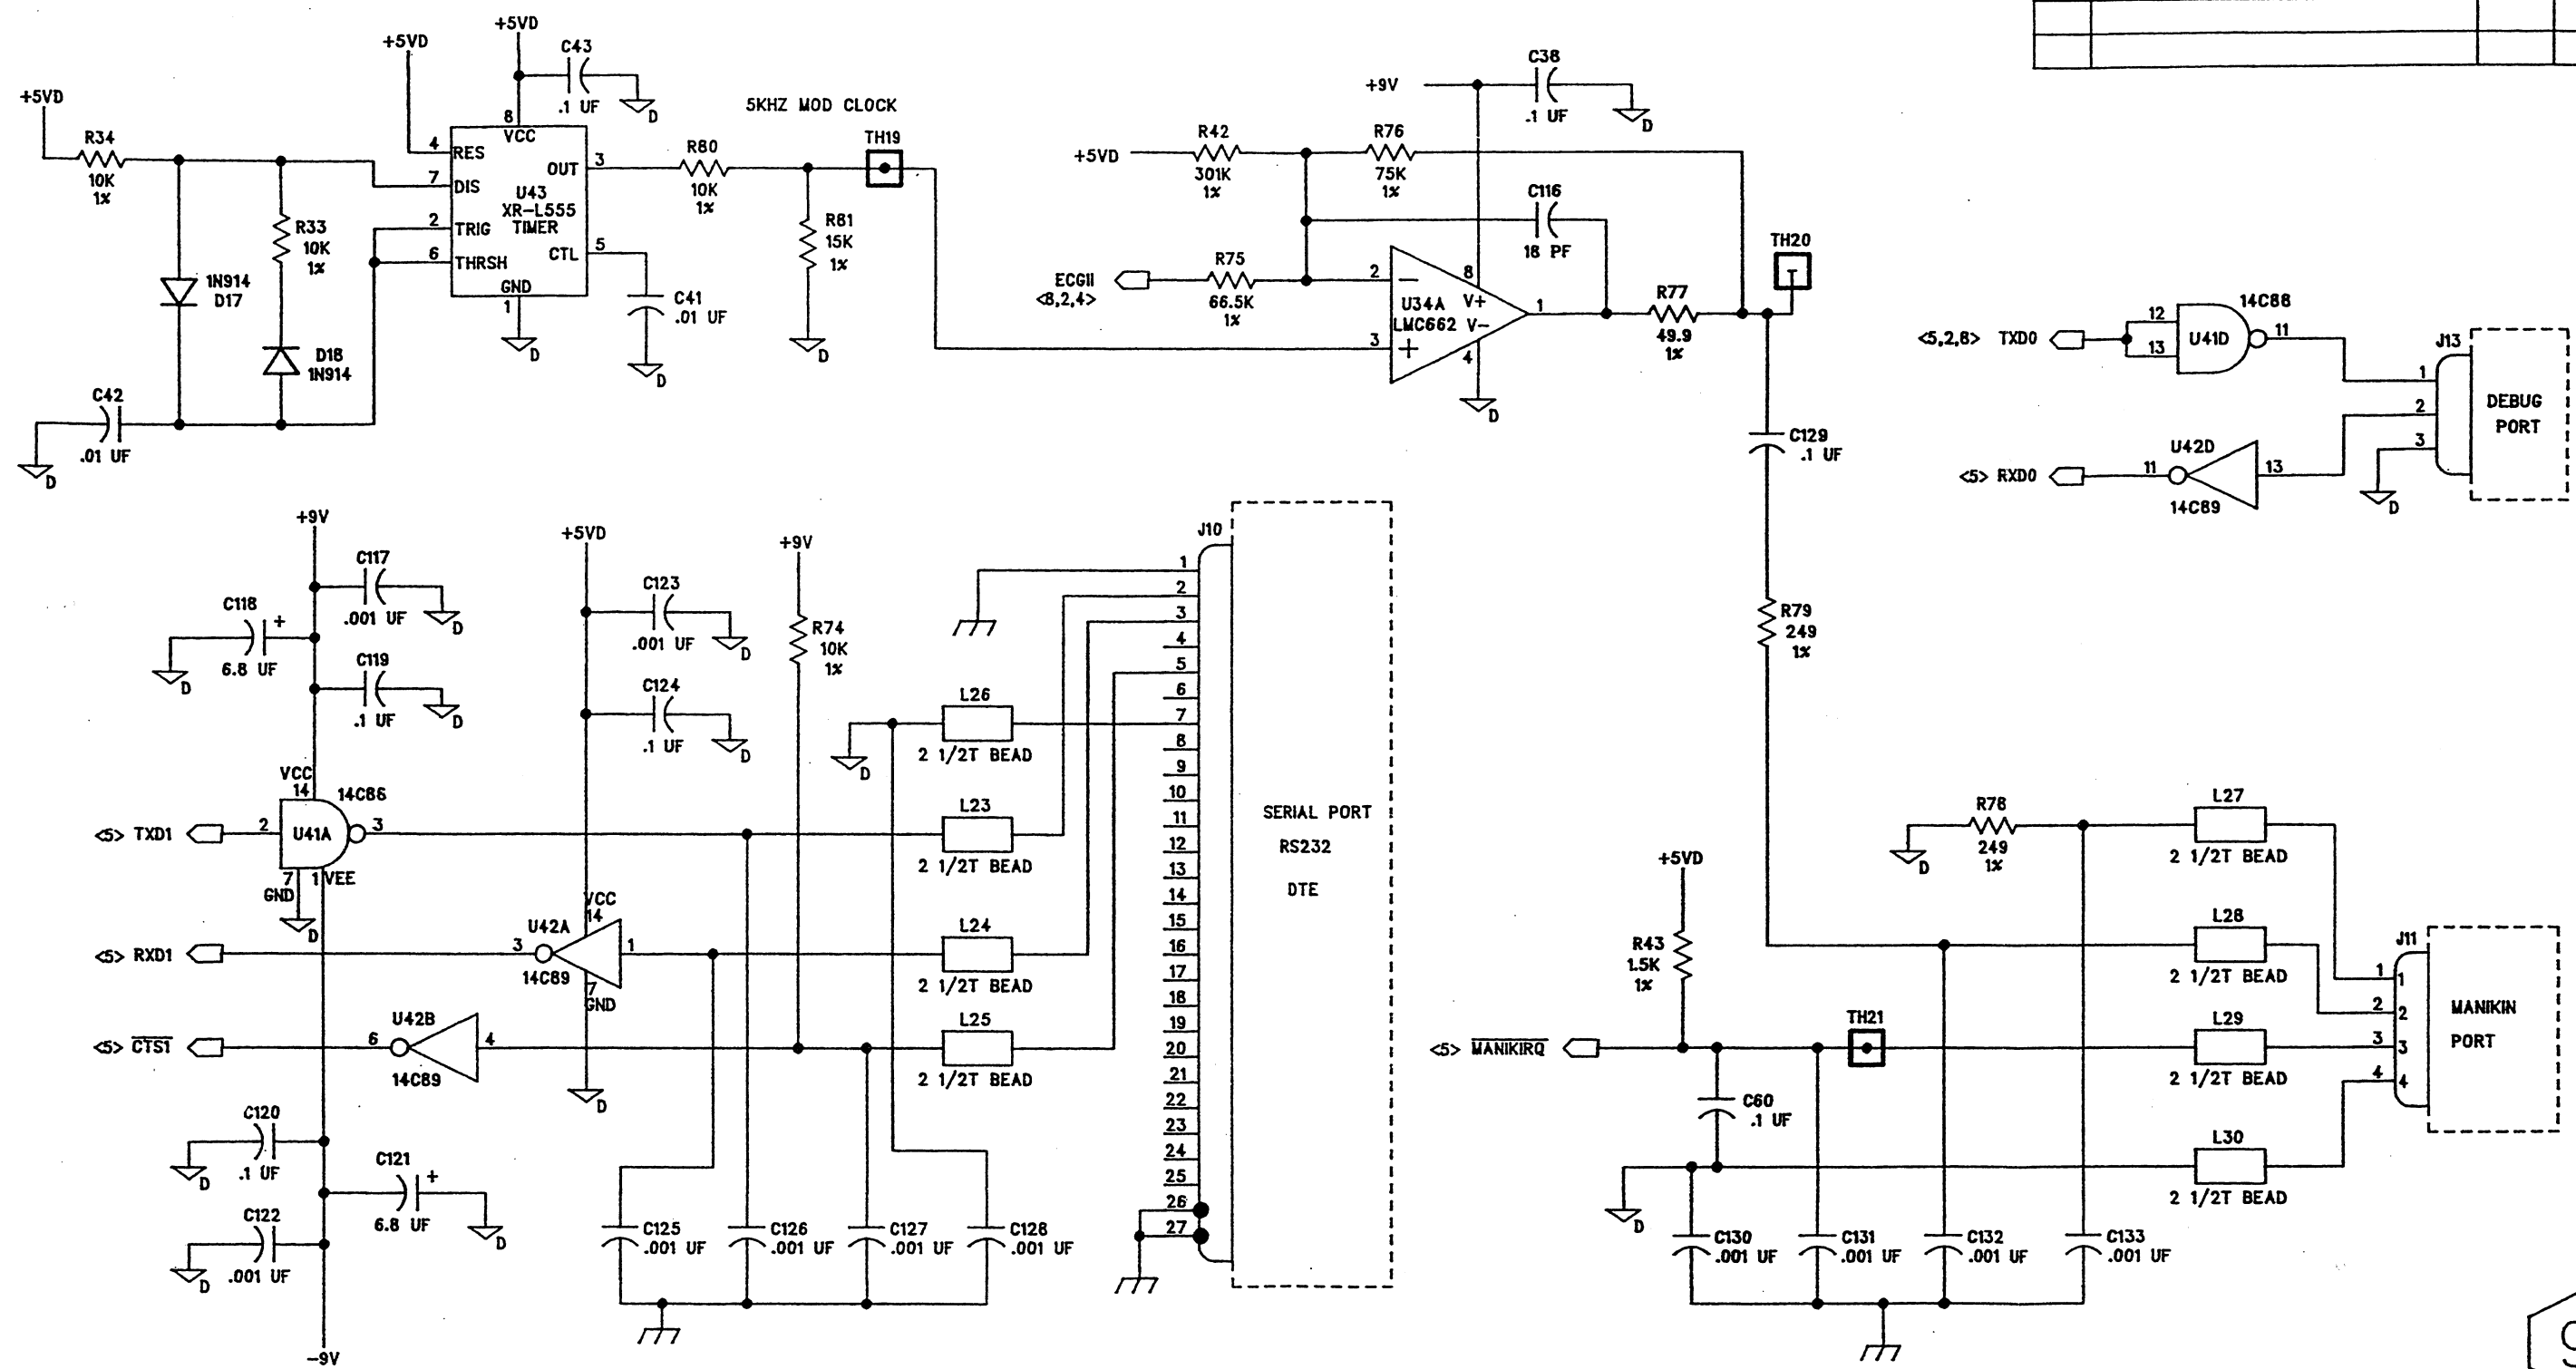


9

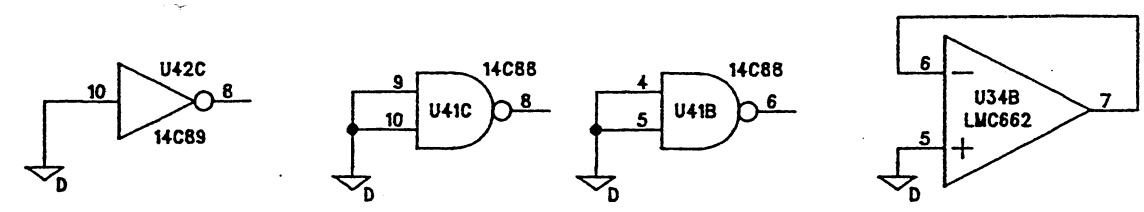

APPROVALS			DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA		
DRAWN BY DG	DATE 8/27/96	TITLE IMPULSE 4000 MAIN PCB SCHEMATIC	SIZE B	DWG. NO. 204511	REV C
ENG. MANAGER <i>[Signature]</i>	DATE 8/29/96	SCALE: NONE	SHEET 9 OF 10		
PROJECT ENG D.G.	DATE 8/29/96	STOCK NO: 204511C.SCH			

LTR	DESCRIPTION	DATE	REV BY
	FOR REVISION SEE SHEET 1		

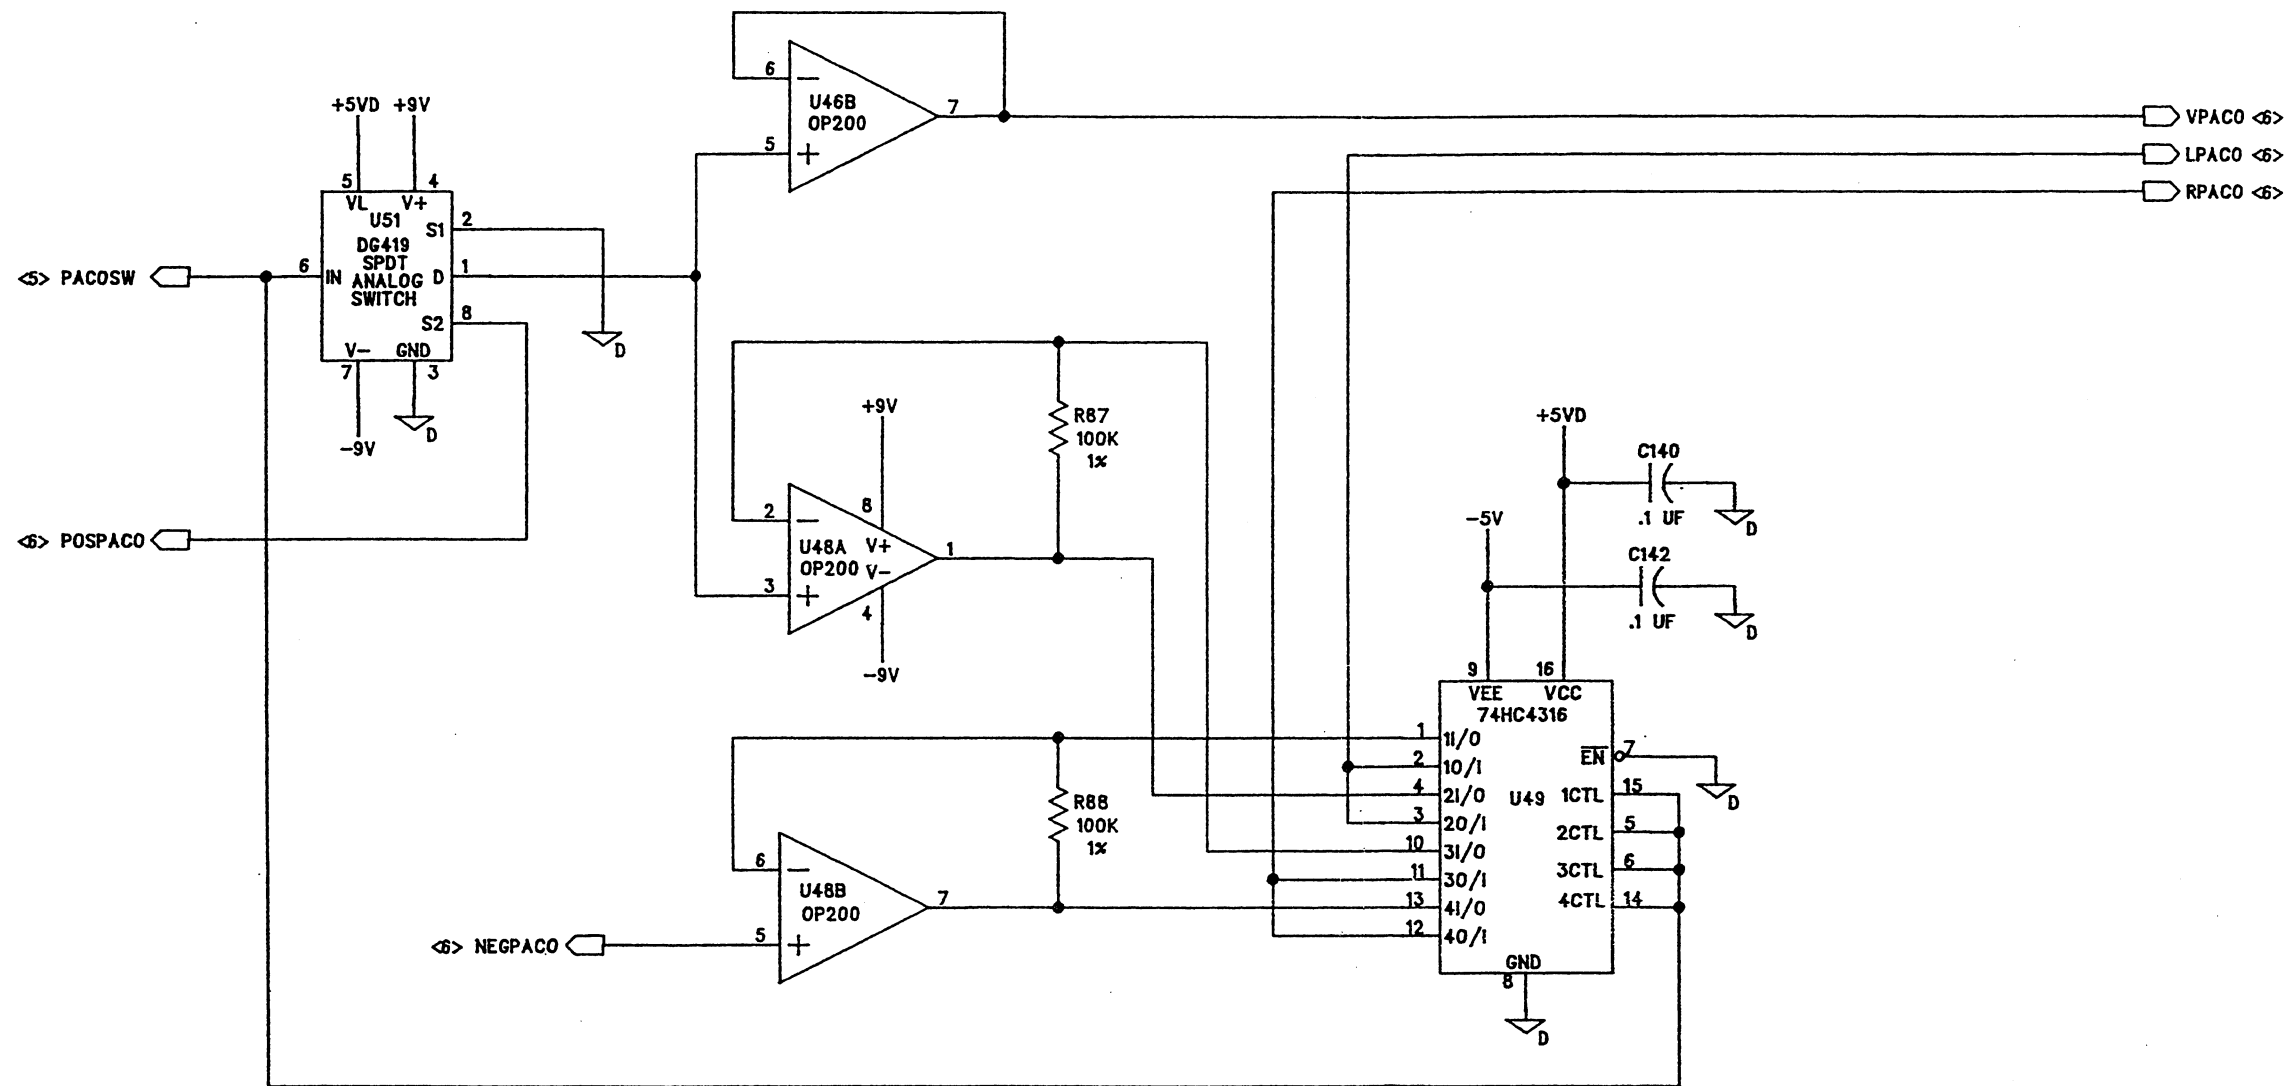

10

APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
DRAWN BY DG	DATE 8/27/96	TITLE IMPULSE 4000 MAIN PCB SCHEMATIC	
ENG MANAGER <i>[Signature]</i>	DATE 8/29/96	SIZE B	DWG. NO. 204511
PROJECT ENG D.G.	DATE 8/28/96	SCALE: NONE	SHEET 10 OF 10

STOCK NO:  
FILE NO: 204511C.SCH

**IMPULSE 4000 MAIN PRINTED CIRCUIT BOARD COMPONENT LIST**

REFERENCE	PART NUMBER	DESCRIPTION
C001	0418-0016	CAP CERA .001 UF 50V
C002	0418-0016	CAP CERA .001 UF 50V
C003	0418-0009	CAP CERA 1 UF 50V
C004	0418-0008	CAP CERA .1 UF 50V
C005	0415-0117	CAP MICA 470 PF 500V
C006	0401-0015	CAP TANT DIP 10 UF 25V
C007	0418-0008	CAP CERA .1 UF 50V
C008	0418-0008	CAP CERA .1 UF 50V
C009	0401-0016	CAP TANT DIP 47 UF 25V
C010	0403-0016	CAP ELECT 330 UF 25V RAD
C011	0418-0008	CAP CERA .1 UF 50V
C012	0418-0016	CAP CERA .001 UF 50V
C013	0418-0008	CAP CERA .1 UF 50V
C014	0418-0008	CAP CERA .1 UF 50V
C015	0403-0052	CAP ELECT 6.8 UF 50V
C016	0401-0015	CAP TANT DIP 10 UF 25V
C017	0403-0016	CAP ELECT 330 UF 25V RAD
C018	0418-0008	CAP CERA .1 UF 50V
C019	0418-0008	CAP CERA .1 UF 50V
C020	0403-0052	CAP ELECT 6.8 UF 50V
C021	0403-0003	CAP ELECT 1000 UF 10V
C022	0418-0008	CAP CERA .1 UF 50V
C023	0403-0052	CAP ELECT 6.8 UF 50V
C024	0418-0016	CAP CERA .001 UF 50V
C025	0418-0008	CAP CERA .1 UF 50V
C026	0418-0008	CAP CERA .1 UF 50V
C027	0418-0008	CAP CERA .1 UF 50V
C028	0401-0018	CAP TANT .47 UF 35V
C029	0418-0008	CAP CERA .1 UF 50V
C030	0418-0016	CAP CERA .001 UF 50V
C031	0403-0052	CAP ELECT 6.8 UF 50V
C032	0408-0021	CAP MYLAR .1 UF 80V
C033	0418-0008	CAP CERA .1 UF 50V
C034	0408-0009	CAP MYLAR .01 UF 80V
C035	0401-0006	CAP TANT .1 UF 35V
C036	0418-0008	CAP CERA .1 UF 50V
C037	0418-0008	CAP CERA .1 UF 50V
C038	0418-0008	CAP CERA .1 UF 50V
C039	0418-0008	CAP CERA .1 UF 50V
C040	0401-0015	CAP TANT DIP 10 UF 25V

**IMPULSE 4000 MAIN PRINTED CIRCUIT BOARD COMPONENT LIST**

REFERENCE	PART NUMBER	DESCRIPTION
C041	0418-0014	CAP CERA .01 UF 50V
C042	0418-0014	CAP CERA .01 UF 50V
C043	0418-0008	CAP CERA .1 UF 50V
C044	0418-0008	CAP CERA .1 UF 50V
C045	0418-0016	CAP CERA .001 UF 50V
C046	0401-0015	CAP TANT DIP 10 UF 25V
C047	0418-0016	CAP CERA .001 UF 50V
C048	0418-0016	CAP CERA .001 UF 50V
C049	0401-0015	CAP TANT DIP 10 UF 25V
C050	0418-0016	CAP CERA .001 UF 50V
C051	0401-0015	CAP TANT DIP 10 UF 25V
C052	0418-0008	CAP CERA .1 UF 50V
C053	0403-0052	CAP ELECT 6.8 UF 50V
C054	0418-0016	CAP CERA .001 UF 50V
C055	0418-0016	CAP CERA .001 UF 50V
C056	0418-0016	CAP CERA .001 UF 50V
C057	0418-0008	CAP CERA .1 UF 50V
C058	0401-0015	CAP TANT DIP 10 UF 25V
C059	0415-0086	CAP MICA 30 PF 500V
C060	0418-0008	CAP CERA .1 UF 50V
C061	0415-0086	CAP MICA 30 PF 500V
C067	0403-0052	CAP ELECT 6.8 UF 50V
C068	0418-0016	CAP CERA .001 UF 50V
C069	0418-0008	CAP CERA .1 UF 50V
C070	0415-0012	CAP MICA 18 PF 300V
C071	0415-0012	CAP MICA 18 PF 300V
C072	0403-0052	CAP ELECT 6.8 UF 50V
C073	0418-0016	CAP CERA .001 UF 50V
C074	0418-0016	CAP CERA .001 UF 50V
C075	0418-0016	CAP CERA .001 UF 50V
C076	0418-0016	CAP CERA .001 UF 50V
C077	0418-0008	CAP CERA .1 UF 50V
C078	0418-0008	CAP CERA .1 UF 50V
C079	0418-0016	CAP CERA .001 UF 50V
C080	0418-0008	CAP CERA .1 UF 50V
C081	0418-0016	CAP CERA .001 UF 50V
C082	0403-0052	CAP ELECT 6.8 UF 50V
C083	0418-0016	CAP CERA .001 UF 50V
C084	0418-0008	CAP CERA .1 UF 50V
C085	0418-0016	CAP CERA .001 UF 50V

**IMPULSE 4000 MAIN PRINTED CIRCUIT BOARD COMPONENT LIST**

REFERENCE	PART NUMBER	DESCRIPTION
C087	0418-0016	CAP CERA .001 UF 50V
C088	0418-0008	CAP CERA .1 UF 50V
C089	0418-0085	CAP CERA .0022 UF 50V
C090	0418-0085	CAP CERA .0022 UF 50V
C091	0418-0085	CAP CERA .0022 UF 50V
C092	0418-0085	CAP CERA .0022 UF 50V
C093	0418-0085	CAP CERA .0022 UF 50V
C094	0418-0085	CAP CERA .0022 UF 50V
C095	0418-0085	CAP CERA .0022 UF 50V
C096	0418-0085	CAP CERA .0022 UF 50V
C097	0418-0085	CAP CERA .0022 UF 50V
C098	0418-0085	CAP CERA .0022 UF 50V
C099	0418-0085	CAP CERA .0022 UF 50V
C100	0418-0085	CAP CERA .0022 UF 50V
C101	0418-0008	CAP CERA .1 UF 50V
C102	0418-0008	CAP CERA .1 UF 50V
C103	0418-0008	CAP CERA .1 UF 50V
C104	0418-0016	CAP CERA .001 UF 50V
C105	0403-0052	CAP ELECT 6.8 UF 50V
C106	0418-0008	CAP CERA .1 UF 50V
C107	0418-0008	CAP CERA .1 UF 50V
C108	0418-0008	CAP CERA .1 UF 50V
C109	0418-0016	CAP CERA .001 UF 50V
C110	0418-0016	CAP CERA .001 UF 50V
C113	0418-0016	CAP CERA .001 UF 50V
C114	0415-0100	CAP MICA 100 PF 500V
C116	0415-0012	CAP MICA 18 PF 300V
C117	0418-0016	CAP CERA .001 UF 50V
C118	0403-0052	CAP ELECT 6.8 UF 50V
C119	0418-0008	CAP CERA .1 UF 50V
C120	0418-0008	CAP CERA .1 UF 50V
C121	0403-0052	CAP ELECT 6.8 UF 50V
C122	0418-0016	CAP CERA .001 UF 50V
C123	0418-0016	CAP CERA .001 UF 50V
C124	0418-0008	CAP CERA .1 UF 50V
C125	0418-0016	CAP CERA .001 UF 50V
C126	0418-0016	CAP CERA .001 UF 50V
C127	0418-0016	CAP CERA .001 UF 50V
C128	0418-0016	CAP CERA .001 UF 50V
C129	0418-0008	CAP CERA .1 UF 50V

## IMPULSE 4000 MAIN PRINTED CIRCUIT BOARD COMPONENT LIST

REFERENCE	PART NUMBER	DESCRIPTION
C130	0418-0016	CAP CERA .001 UF 50V
C131	0418-0016	CAP CERA .001 UF 50V
C132	0418-0016	CAP CERA .001 UF 50V
C133	0418-0016	CAP CERA .001 UF 50V
C134	0418-0016	CAP CERA .001 UF 50V
C135	0418-0008	CAP CERA .1 UF 50V
C136	0418-0016	CAP CERA .001 UF 50V
C137	0418-0016	CAP CERA .001 UF 50V
C140	0418-0008	CAP CERA .1 UF 50V
C141	0418-0008	CAP CERA .1 UF 50V
C142	0418-0008	CAP CERA .1 UF 50V
C143	0403-0052	CAP ELECT 6.8 UF 50V
C144	0418-0008	CAP CERA .1 UF 50V
D001	2101-0002	DIODE 1N4001
D002	2101-0031	DIODE 80SQ035 8A RECT
D003	2101-0002	DIODE 1N4001
D004	2101-0029	DIODE ULTRA FAST UF4001
D005	2101-0002	DIODE 1N4001
D006	2101-0002	DIODE 1N4001
D007	2101-0008	DIODE FDH333 LOW LEAKAGE
D008	2101-0008	DIODE FDH333 LOW LEAKAGE
D009	2101-0008	DIODE FDH333 LOW LEAKAGE
D010	2101-0008	DIODE FDH333 LOW LEAKAGE
D011	2101-0008	DIODE FDH333 LOW LEAKAGE
D012	2101-0008	DIODE FDH333 LOW LEAKAGE
D013	2102-0021	ZENER 1N751 5.1V
D014	2102-0021	ZENER 1N751 5.1V
D015	2102-0021	ZENER 1N751 5.1V
D016	2102-0021	ZENER 1N751 5.1V
D017	2101-0010	DIODE 1N914
D018	2101-0010	DIODE 1N914
F001	1005-0185	FUSE 1/2A SLO 5X20MM
J001	2710-0361	CONN POWER JCK 2.1MM PC RT
J002	2710-0007	CONN 2P HDR .156
J003	2710-0008	CONN 3P HDR .156
J004	2710-0366	CONN CASSETTE HOLDER STD KIT
J005	2710-0008	CONN 3P HDR .156
J006	2710-0007	CONN 2P HDR .156
J007	2710-0362	CONN 34P DIP HDR ST BOX
J008	2710-0335	CONN DB25S PCRT .318

**IMPULSE 4000 MAIN PRINTED CIRCUIT BOARD COMPONENT LIST**

REFERENCE	PART NUMBER	DESCRIPTION
J009	2710-0007	CONN 2P HDR .156
J010	2710-0334	CONN DB25P PCRT .318
J011	2710-0369	MOD PHONE JK PC RT LO PROFILE
J012	2710-0007	CONN 2P HDR .156
K001	2562-0016	RELAY DPDT SUBMIN DBL LATCH
K002	2562-0016	RELAY DPDT SUBMIN DBL LATCH
L001	1214-0057	INDUCTOR 330 UH
L002	1214-0055	INDUCTOR WOUND BEAD
L003	1214-0055	INDUCTOR WOUND BEAD
L004	1214-0055	INDUCTOR WOUND BEAD
L005	1214-0055	INDUCTOR WOUND BEAD
L006	1214-0055	INDUCTOR WOUND BEAD
L007	1214-0055	INDUCTOR WOUND BEAD
L009	1214-0055	INDUCTOR WOUND BEAD
L010	1214-0055	INDUCTOR WOUND BEAD
L011	1214-0055	INDUCTOR WOUND BEAD
L012	1214-0055	INDUCTOR WOUND BEAD
L013	1214-0055	INDUCTOR WOUND BEAD
L014	1214-0055	INDUCTOR WOUND BEAD
L015	1214-0055	INDUCTOR WOUND BEAD
L016	1214-0055	INDUCTOR WOUND BEAD
L017	1214-0055	INDUCTOR WOUND BEAD
L018	1214-0055	INDUCTOR WOUND BEAD
L019	1214-0055	INDUCTOR WOUND BEAD
L020	1214-0055	INDUCTOR WOUND BEAD
L023	1214-0055	INDUCTOR WOUND BEAD
L024	1214-0055	INDUCTOR WOUND BEAD
L025	1214-0055	INDUCTOR WOUND BEAD
L026	1214-0055	INDUCTOR WOUND BEAD
L027	1214-0055	INDUCTOR WOUND BEAD
L028	1214-0055	INDUCTOR WOUND BEAD
L029	1214-0055	INDUCTOR WOUND BEAD
L030	1214-0055	INDUCTOR WOUND BEAD
L032	1214-0055	INDUCTOR WOUND BEAD
R001	0316-0231	RES MF 1/8W .1% 86.6 K $\Omega$
R002	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R003	0303-1180	RES CF 1W 5% 1.8 $\Omega$
R004	0316-0232	RES MF 1/8W .1% 49.9 K $\Omega$
R007	0307-1685	RES MF 1/8W 1% 499 K $\Omega$
R008	0307-1015	RES MF 1/8W 1% 100 K $\Omega$



---

**IMPULSE 4000 MAIN PRINTED CIRCUIT BOARD COMPONENT LIST**

REFERENCE	PART NUMBER	DESCRIPTION
R012	0307-1935	RES MF 1/8W 1% 909 K $\Omega$
R013	0307-1785	RES MF 1/8W 1% 634 K $\Omega$
R014	0316-0241	RES MF 1/8W .1% 3.16K
R015	0316-0240	RES MF 1/8W .1% 634
R016	0316-0242	RES MF 1/8W .1% 316K
R017	0316-0242	RES MF 1/8W .1% 316K
R018	0316-0241	RES MF 1/8W .1% 3.16K
R019	0316-0240	RES MF 1/8W .1% 634
R020	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R021	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R022	0307-1012	RES MF 1/8W 1% 100 $\Omega$
R023	0307-1713	RES MF 1/8W 1% 5.36 K $\Omega$
R024	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R025	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R026	0307-1305	RES MF 1/8W 1% 200 K $\Omega$
R027	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R028	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R029	0307-1684	RES MF 1/8W 1% 49.9 K $\Omega$
R030	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R031	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R032	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R033	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R034	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R035	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R036	0307-1034	RES MF 1/8W 1% 10.5 K $\Omega$
R037	0307-1304	RES MF 1/8W 1% 20 K $\Omega$
R038	0307-1034	RES MF 1/8W 1% 10.5 K $\Omega$
R040	0307-1474	RES MF 1/8W 1% 30.1 K $\Omega$
R041	0307-1012	RES MF 1/8W 1% 100 $\Omega$
R042	0307-1475	RES MF 1/8W 1% 301 K $\Omega$
R043	0307-1183	RES MF 1/8W 1% 1.5 K $\Omega$
R044	0307-1185	RES MF 1/8W 1% 150 K $\Omega$
R045	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R046	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R047	0307-1016	RES MF 1/8W 1% 1 M $\Omega$
R048	0307-1685	RES MF 1/8W 1% 499 K $\Omega$
R049	0307-1395	RES MF 1/8W 1% 249 K $\Omega$
R051	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R052	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R053	0307-1185	RES MF 1/8W 1% 150 K $\Omega$

**IMPULSE 4000 MAIN PRINTED CIRCUIT BOARD COMPONENT LIST**

REFERENCE	PART NUMBER	DESCRIPTION
R054	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R055	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R056	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R057	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R058	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R059	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R060	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R061	0307-1395	RES MF 1/8W 1% 249 K $\Omega$
R062	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R063	0307-1774	RES MF 1/8W 1% 61.9 K $\Omega$
R064	0307-1684	RES MF 1/8W 1% 49.9 K $\Omega$
R065	0307-1012	RES MF 1/8W 1% 100 $\Omega$
R069	0307-1304	RES MF 1/8W 1% 20 K $\Omega$
R070	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R071	0307-1304	RES MF 1/8W 1% 20 K $\Omega$
R074	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R075	0307-1804	RES MF 1/8W 1% 66.5 K $\Omega$
R076	0307-1854	RES MF 1/8W 1% 75 K $\Omega$
R077	0307-1681	RES MF 1/8W 1% 49.9 $\Omega$
R078	0307-1392	RES MF 1/8W 1% 249 $\Omega$
R079	0307-1392	RES MF 1/8W 1% 249 $\Omega$
R080	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R081	0307-1184	RES MF 1/8W 1% 15 K $\Omega$
R082	0307-1413	RES MF 1/8W 1% 2.61 K $\Omega$
R083	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R085	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R086	0307-1014	RES MF 1/8W 1% 10 K $\Omega$
R087	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R088	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R090	0316-0222	RES MF 1/8W .1% 150 K $\Omega$
R091	0316-0242	RES MF 1/8W .1% 316 K $\Omega$
R092	0316-0222	RES MF 1/8W .1% 150 K $\Omega$
R093	0316-0242	RES MF 1/8W .1% 316 K $\Omega$
R094	0307-1013	RES MF 1/8W 1% 1 K $\Omega$
R095	0307-1784	RES MF 1/8W 1% 63.4 K $\Omega$
R098	0307-1015	RES MF 1/8W 1% 100 K $\Omega$
R099	0307-1594	RES MF 1/8W 1% 40.2 K $\Omega$
R100	0307-1012	RES MF 1/8W 1% 100 $\Omega$
RN01	0317-0006	RES NTWK SIP 2% 10K X 9
RN02	0317-0006	RES NTWK SIP 2% 10K X 9

**IMPULSE 4000 MAIN PRINTED CIRCUIT BOARD COMPONENT LIST**


REFERENCE	PART NUMBER	DESCRIPTION
TB01	2710-0294	CONN 4P SIP HDR .2 CENTERS
TB02	2710-0296	CONN 6P SIP HDR .2 CENTERS
TB03	2710-0293	CONN 3P SIP HDR .2 CENTERS
TB05	2710-0292	CONN 2P SIP HDR .2 CENTERS
TB06	2710-0292	CONN 2P SIP HDR .2 CENTERS
TB07	2710-0294	CONN 4P SIP HDR .2 CENTERS
TB08	2710-0296	CONN 6P SIP HDR .2 CENTERS
U001	2118-0009	IC UA723 VOLTS REG
U002	2111-0040	TRANS NPN MJE3055T
U003	2118-0093	IC 7815 +15V REG TO-220
U004	2118-0120	IC LP2950ACZ-5.0 +5V REG LP
U005	2118-0171	IC LM2575T-5.0 SW REG +5V
U006	2118-0163	IC 78L09 +9V REG LP TO-92
U007	2118-0122	IC 7662 NEG VOLT GEN
U008	2118-0016	IC 79L05 -5V REG TO-92
U009	2118-0112	IC LP2951 LOW PWR ADJ REG
U010	2122-0089	IC 28C64B EEPROM 8KX8 PROTECT
U011	2121-0072	IC 74HC244 OCTAL BUFFER
U012	2121-0048	IC 74HC138 3-8 DECODER
U013	2118-0120	IC LP2950ACZ-5.0 +5V REG LP
U014	2121-0072	IC 74HC244 OCTAL BUFFER
U015	2118-0116	IC LF442 DUAL OP AMP LP BIFET
U016	2122-0235	IC ADC7880 12 BIT SMPL LP
U017	2122-0236	IMP 4000 PROG MPU 6805 U17
U018	2121-0077	IC 74HC74 DUAL D FF
U019	2118-0176	IC MAX358 8CH MUX NO FAULT
U020	2121-0048	IC 74HC138 3-8 DECODER
U021	2120-0094	IC ULN2003A RELAY DRIVER
U022	2118-0132	IC OP27A OP AMP
U023	2118-0163	IC 78L09 +9V REG LP TO-92
U024	2121-0076	IC 74HC245 OCTAL BUS XCEIVER
U025	2122-0115	IC V25 MPU 5MHZ UPD70320L
U026	2122-0110	IC MAX690 MPU SUPERVISOR
U027	2122-0131	IC 581000 RAM 128K BYTES
U028	2122-0242	IMP 4000 PRG EPROM U28 ASSY
U029	2122-0237	IMP 4000 PRG EPROM U29 ASSY
U030	2121-0088	IC 74HC14 HEX INV SCHMITT TRIG
U031	2121-0075	IC 74HC32 QUAD OR 2-IN
U032	2121-0050	IC 74HC04 HEX INVERTER
U033	2122-0079	IC RTC72421 REAL TIME CLOCK

**IMPULSE 4000 MAIN PRINTED CIRCUIT BOARD COMPONENT LIST**


REFERENCE	PART NUMBER	DESCRIPTION
U034	2118-0169	IC LMC662CN DUAL OP AMP CMOS
U035	2121-0044	IC 74HCT374 OCTAL D FF
U036	2118-0114	IC LF444 QUAD OP AMP LP BIFET
U037	2122-0223	IC MAX529 8 CH DAC 8 BIT SER
U038	2122-0064	IC DAC1232LCD
U039	2118-0116	IC LF442 DUAL OP AMP LP BIFET
U040	2118-0114	IC LF444 QUAD OP AMP LP BIFET
U041	2121-0073	IC 14C88 QUAD RS232 DRVR
U042	2121-0074	IC 14C89 QUAD RS232 RCVR
U043	2118-0133	IC XR-L555CP TIMER
U044	2118-0116	IC LF442 DUAL OP AMP BIFET
U045	2118-0177	IC OP200 DUAL OP AMP LO OFFS
U046	2118-0177	IC OP200 DUAL OP AMP LO OFFS
U047	2121-0089	IC UCN5841A 8X SNK DRVR SER
U048	2118-0177	IC OP200 DUAL OP AMP LO OFFS
U049	2121-0054	IC 74HC4316 QUAD ANALOG SWITCH
U050	2118-0178	IC LMC6062 DUAL OP AMP CMOS
U051	2118-0179	IC DG419 ANA SW SPDT
Y002	1220-0023	CRYSTAL 8 MHZ PAR RES
ZU01	2712-0015	IC SKT 14 PIN
ZU07	2712-0003	IC SKT 8 PIN
ZU09	2712-0003	IC SKT 8 PIN
ZU10	2712-0023	IC SKT 28 PIN
ZU11	2712-0017	IC SKT 20 PIN
ZU12	2712-0018	IC SKT 16 PIN
ZU14	2712-0017	IC SKT 20 PIN
ZU15	2712-0003	IC SKT 8 PIN
ZU16	2712-0054	IC SKT 24 PIN SKINNY
ZU17	2712-0048	IC SKT 44 PIN PLCC
ZU18	2712-0015	IC SKT 14 PIN
ZU19	2712-0018	IC SKT 16 PIN
ZU20	2712-0018	IC SKT 16 PIN
ZU21	2712-0018	IC SKT 16 PIN
ZU22	2712-0003	IC SKT 8 PIN
ZU24	2712-0017	IC SKT 20 PIN
ZU25	2712-0046	IC SKT 84 PIN PLCC
ZU26	2712-0003	IC SKT 8 PIN
ZU27	2712-0052	IC SKT 32 PIN
ZU28	2712-0058	IC SKT 32 PIN LP MACH W/CARRY
ZU29	2712-0058	IC SKT 23 PIN LP MACH W/CARRY

**IMPULSE 4000 MAIN PRINTED CIRCUIT BOARD COMPONENT LIST**

REFERENCE	PART NUMBER	DESCRIPTION
ZU30	2712-0015	IC SKT 14 PIN
ZU31	2712-0015	IC SKT 14 PIN
ZU32	2712-0015	IC SKT 14 PIN
ZU33	2712-0024	IC SKT 18 PIN
ZU34	2712-0003	IC SKT 8 PIN
ZU35	2712-0017	IC SKT 20 PIN
ZU36	2712-0015	IC SKT 14 PIN
ZU37	2712-0017	IC SKT 20 PIN
ZU38	2712-0017	IC SKT 20 PIN
ZU39	2712-0003	IC SKT 8 PIN
ZU40	2712-0015	IC SKT 14 PIN
ZU41	2712-0015	IC SKT 14 PIN
ZU42	2712-0015	IC SKT 14 PIN
ZU43	2712-0003	IC SKT 8 PIN
ZU44	2712-0003	IC SKT 8 PIN
ZU45	2712-0003	IC SKT 8 PIN
ZU46	2712-0003	IC SKT 8 PIN
ZU47	2712-0024	IC SKT 18 PIN
ZU48	2712-0003	IC SKT 8 PIN
ZU49	2712-0018	IC SKT 16 PIN
ZU50	2712-0003	IC SKT 8 PIN
ZU51	2712-0003	IC SKT 8 PIN
ZZ01	5201-0313	IMPULSE 4000 MAIN PCB BASIC
ZZ13	1006-0019	FUSE CLIP 5 X 20 MM
ZZ14	8006-0012	FOAM TAPE DBL STICK 1/2"L
ZZ15	4402-0037	HEATSINK TO-220 BIG 6298B
ZZ16	4906-0009	SIL PAD TO-220
ZZ17	4704-2434	SCREW PPH 6-32 X 5/16
ZZ18	4711-9720	NUT KEP 6-32
ZZ19	4704-2236	SCREW PPH 4-40 X 7/16
ZZ20	4711-4015	WASHER FLAT #4
ZZ21	4711-0115	WASHER INT TTH #4
ZZ22	5001-0372	LABEL BARCODE SERIALIZED
ZZ23	4713-0067	PCB PRESS STDOFF #6 CLR .625
ZZ24	4713-0013	PCB PRESS NUT 4-40

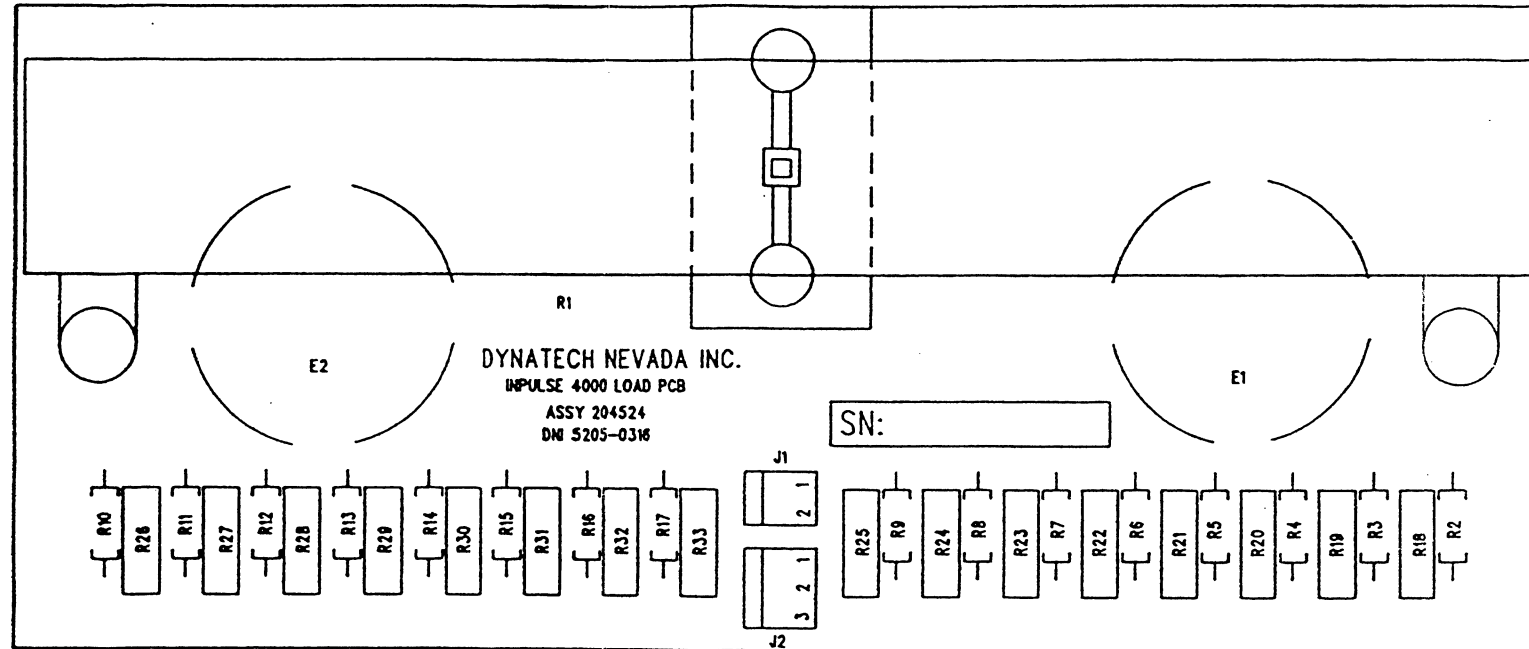

LTR	DESCRIPTION	DATE	REV BY
A	RELEASE TO PROD. ECO#1389	6/5/94	

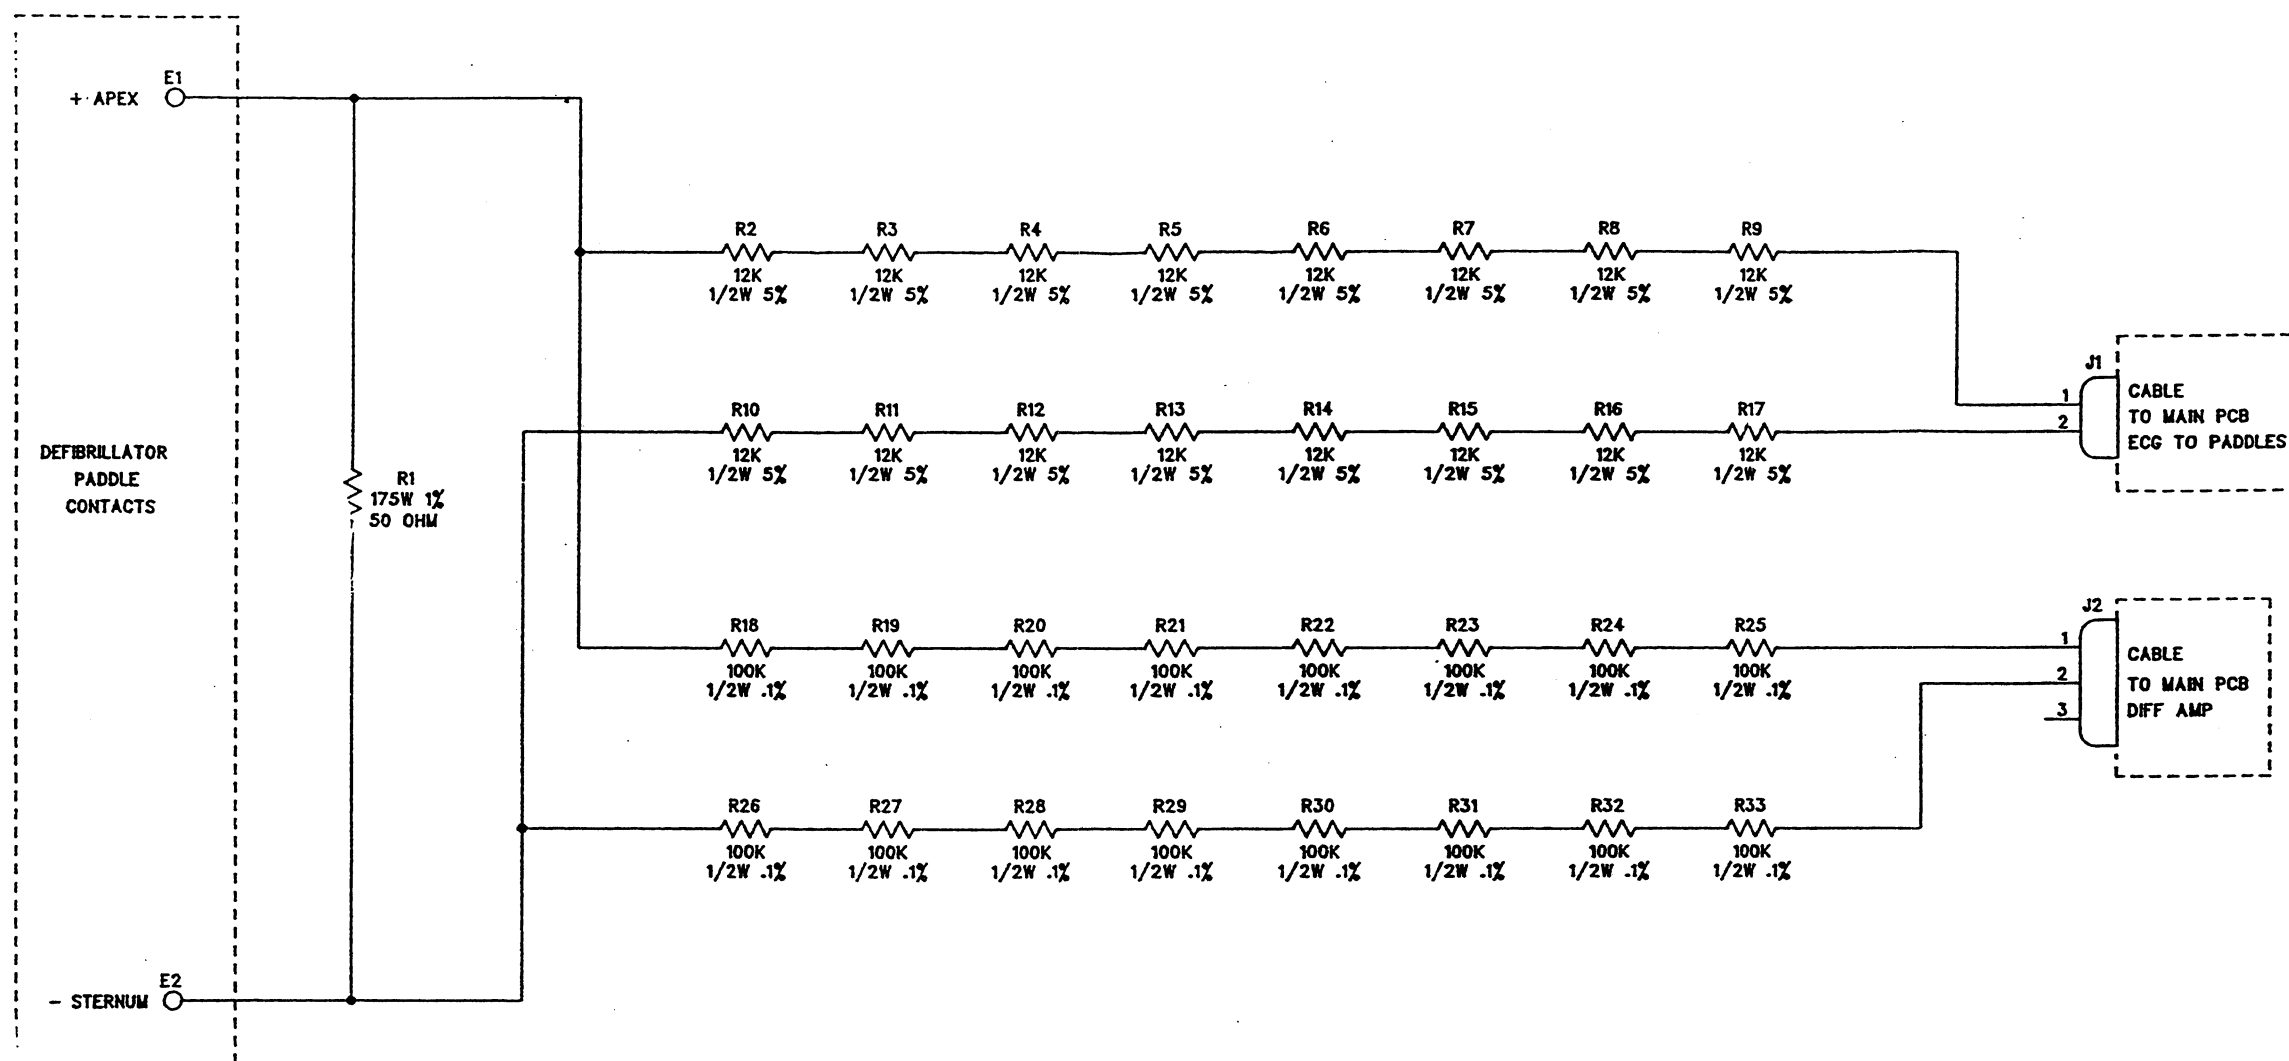

1

APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA		
ENG MANAGER	DATE	TITLE		
<i>[Signature]</i>	6/5/94	IMPULSE 4000 LOAD PCB SCHEMATIC		
PROJECT ENG	DATE	SIZE	DWG. NO.	REV
<i>[Signature]</i>	6/14/94	B	204523	A
STOCK NO:	FILE NO: 204523A.SCH	SCALE: NONE	SHEET 1 OF 1	


## IMPULSE 4000 LOAD PRINTED CIRCUIT BOARD COMPONENT LIST

REFERENCE	PART NUMBER	DESCRIPTION
E001	4713-0064	NUT PRESS PCB 1/4-20
E002	4713-0064	NUT PRESS PCB 1/4-20
J001	2710-0007	CONN 2P HDR .156
J002	2710-0008	CONN 3P HDR .156
R001	0320-0054	RES WW 175W 1% 50 OHM SPECIAL
R002	0301-1124	RES CF 1/2W 5% 12K
R003	0301-1124	RES CF 1/2W 5% 12K
R004	0301-1124	RES CF 1/2W 5% 12K
R005	0301-1124	RES CF 1/2W 5% 12K
R006	0301-1124	RES CF 1/2W 5% 12K
R007	0301-1124	RES CF 1/2W 5% 12K
R008	0301-1124	RES CF 1/2W 5% 12K
R009	0301-1124	RES CF 1/2W 5% 12K
R010	0301-1124	RES CF 1/2W 5% 12K
R011	0301-1124	RES CF 1/2W 5% 12K
R012	0301-1124	RES CF 1/2W 5% 12K
R013	0301-1124	RES CF 1/2W 5% 12K
R014	0301-1124	RES CF 1/2W 5% 12K
R015	0301-1124	RES CF 1/2W 5% 12K
R016	0301-1124	RES CF 1/2W 5% 12K
R017	0301-1124	RES CF 1/2W 5% 12K
R018	0316-0239	REF MF 1/2W .1% 100K
R019	0316-0239	REF MF 1/2W .1% 100K
R020	0316-0239	REF MF 1/2W .1% 100K
R021	0316-0239	REF MF 1/2W .1% 100K
R022	0316-0239	REF MF 1/2W .1% 100K
R023	0316-0239	REF MF 1/2W .1% 100K
R024	0316-0239	REF MF 1/2W .1% 100K
R025	0316-0239	REF MF 1/2W .1% 100K
R026	0316-0239	REF MF 1/2W .1% 100K
R027	0316-0239	REF MF 1/2W .1% 100K
R028	0316-0239	REF MF 1/2W .1% 100K
R029	0316-0239	REF MF 1/2W .1% 100K
R030	0316-0239	REF MF 1/2W .1% 100K
R031	0316-0239	REF MF 1/2W .1% 100K
R032	0316-0239	REF MF 1/2W .1% 100K
R033	0316-0239	REF MF 1/2W .1% 100K
ZZ01	5201-0316	IMPULSE 4000 LOAD PCB BASIC
ZZ03	4910-0158	SW STD 1/4 RD 6-32 X .75"L
ZZ04	4704-2434	SCREW PPH 6-32 X 5/16




**IMPULSE 4000 LOAD PRINTED CIRCUIT BOARD COMPONENT LIST**

REFERENCE	PART NUMBER	DESCRIPTION
ZZ05	4711-0119	WSHR INT TTH #6
ZZ06	5027-0028	IMPULSE 4000 RESISTOR SPACER
ZZ07	3012-0019	TIE WRAP HI TEMP
ZZ08	4711-6415	WSHR PHNLC 1.5 OD .5 ID .125TH
ZZ09	8006-0022	LOCTITE SUPER BONDER 414
ZZ10	5001-0372	LABEL BARCODE SERIALIZED

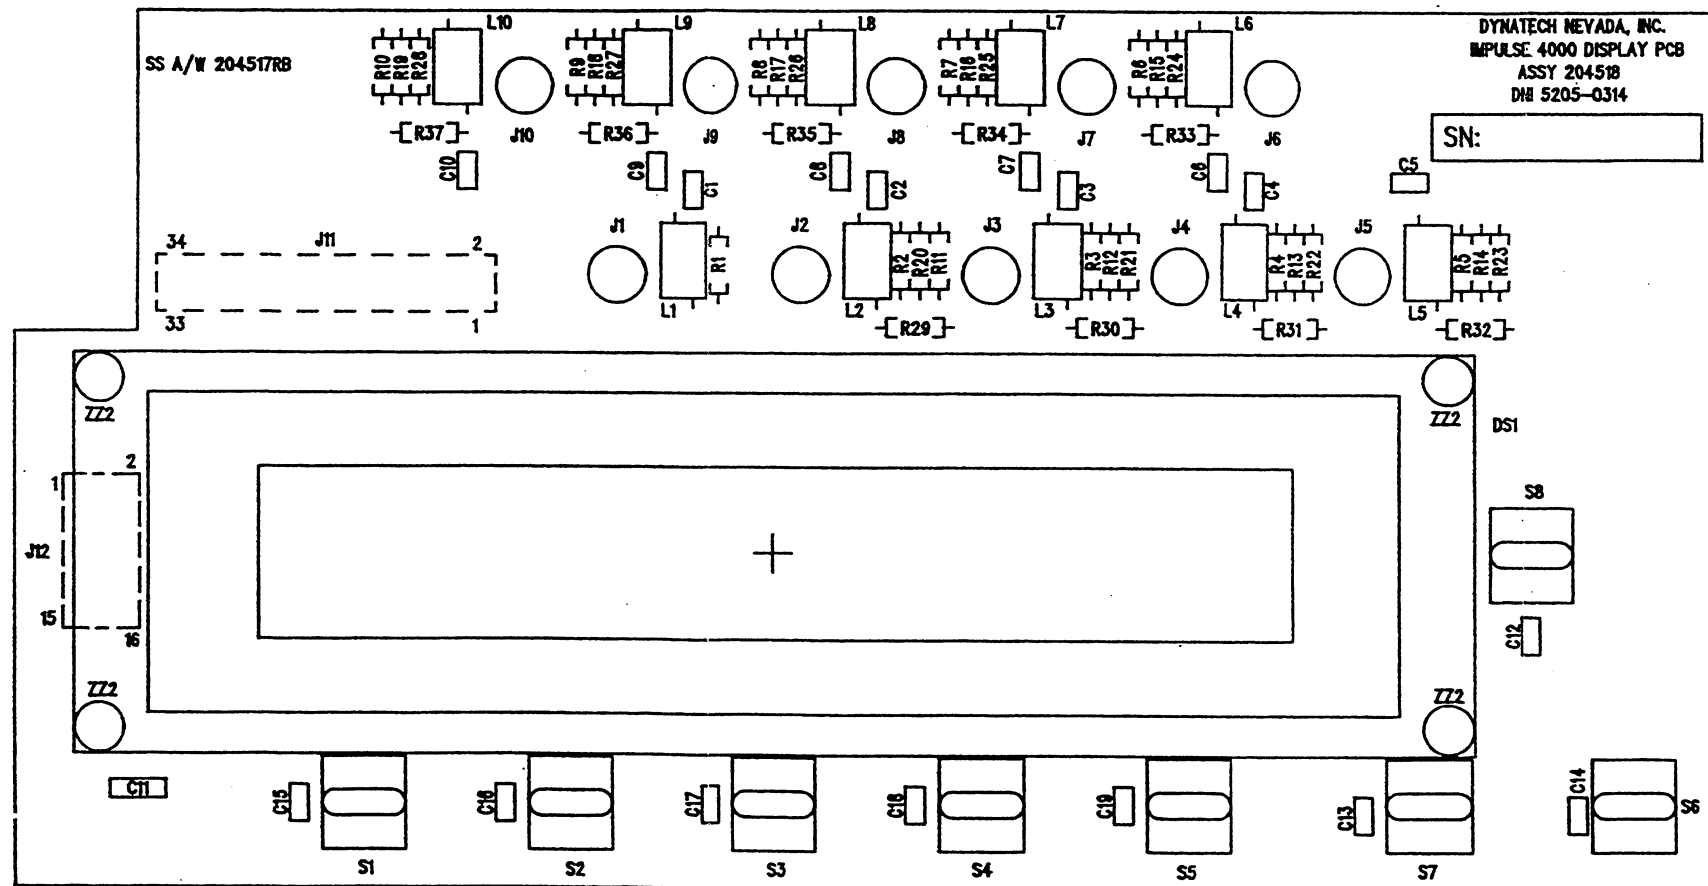


LTR	DESCRIPTION	DATE	REV BY
A	RELEASE TO PROD. ECO#1389	6/5/94	
B	ECO 1417 - R3 R4 WAS 499 OHM	9/16/94	JTW

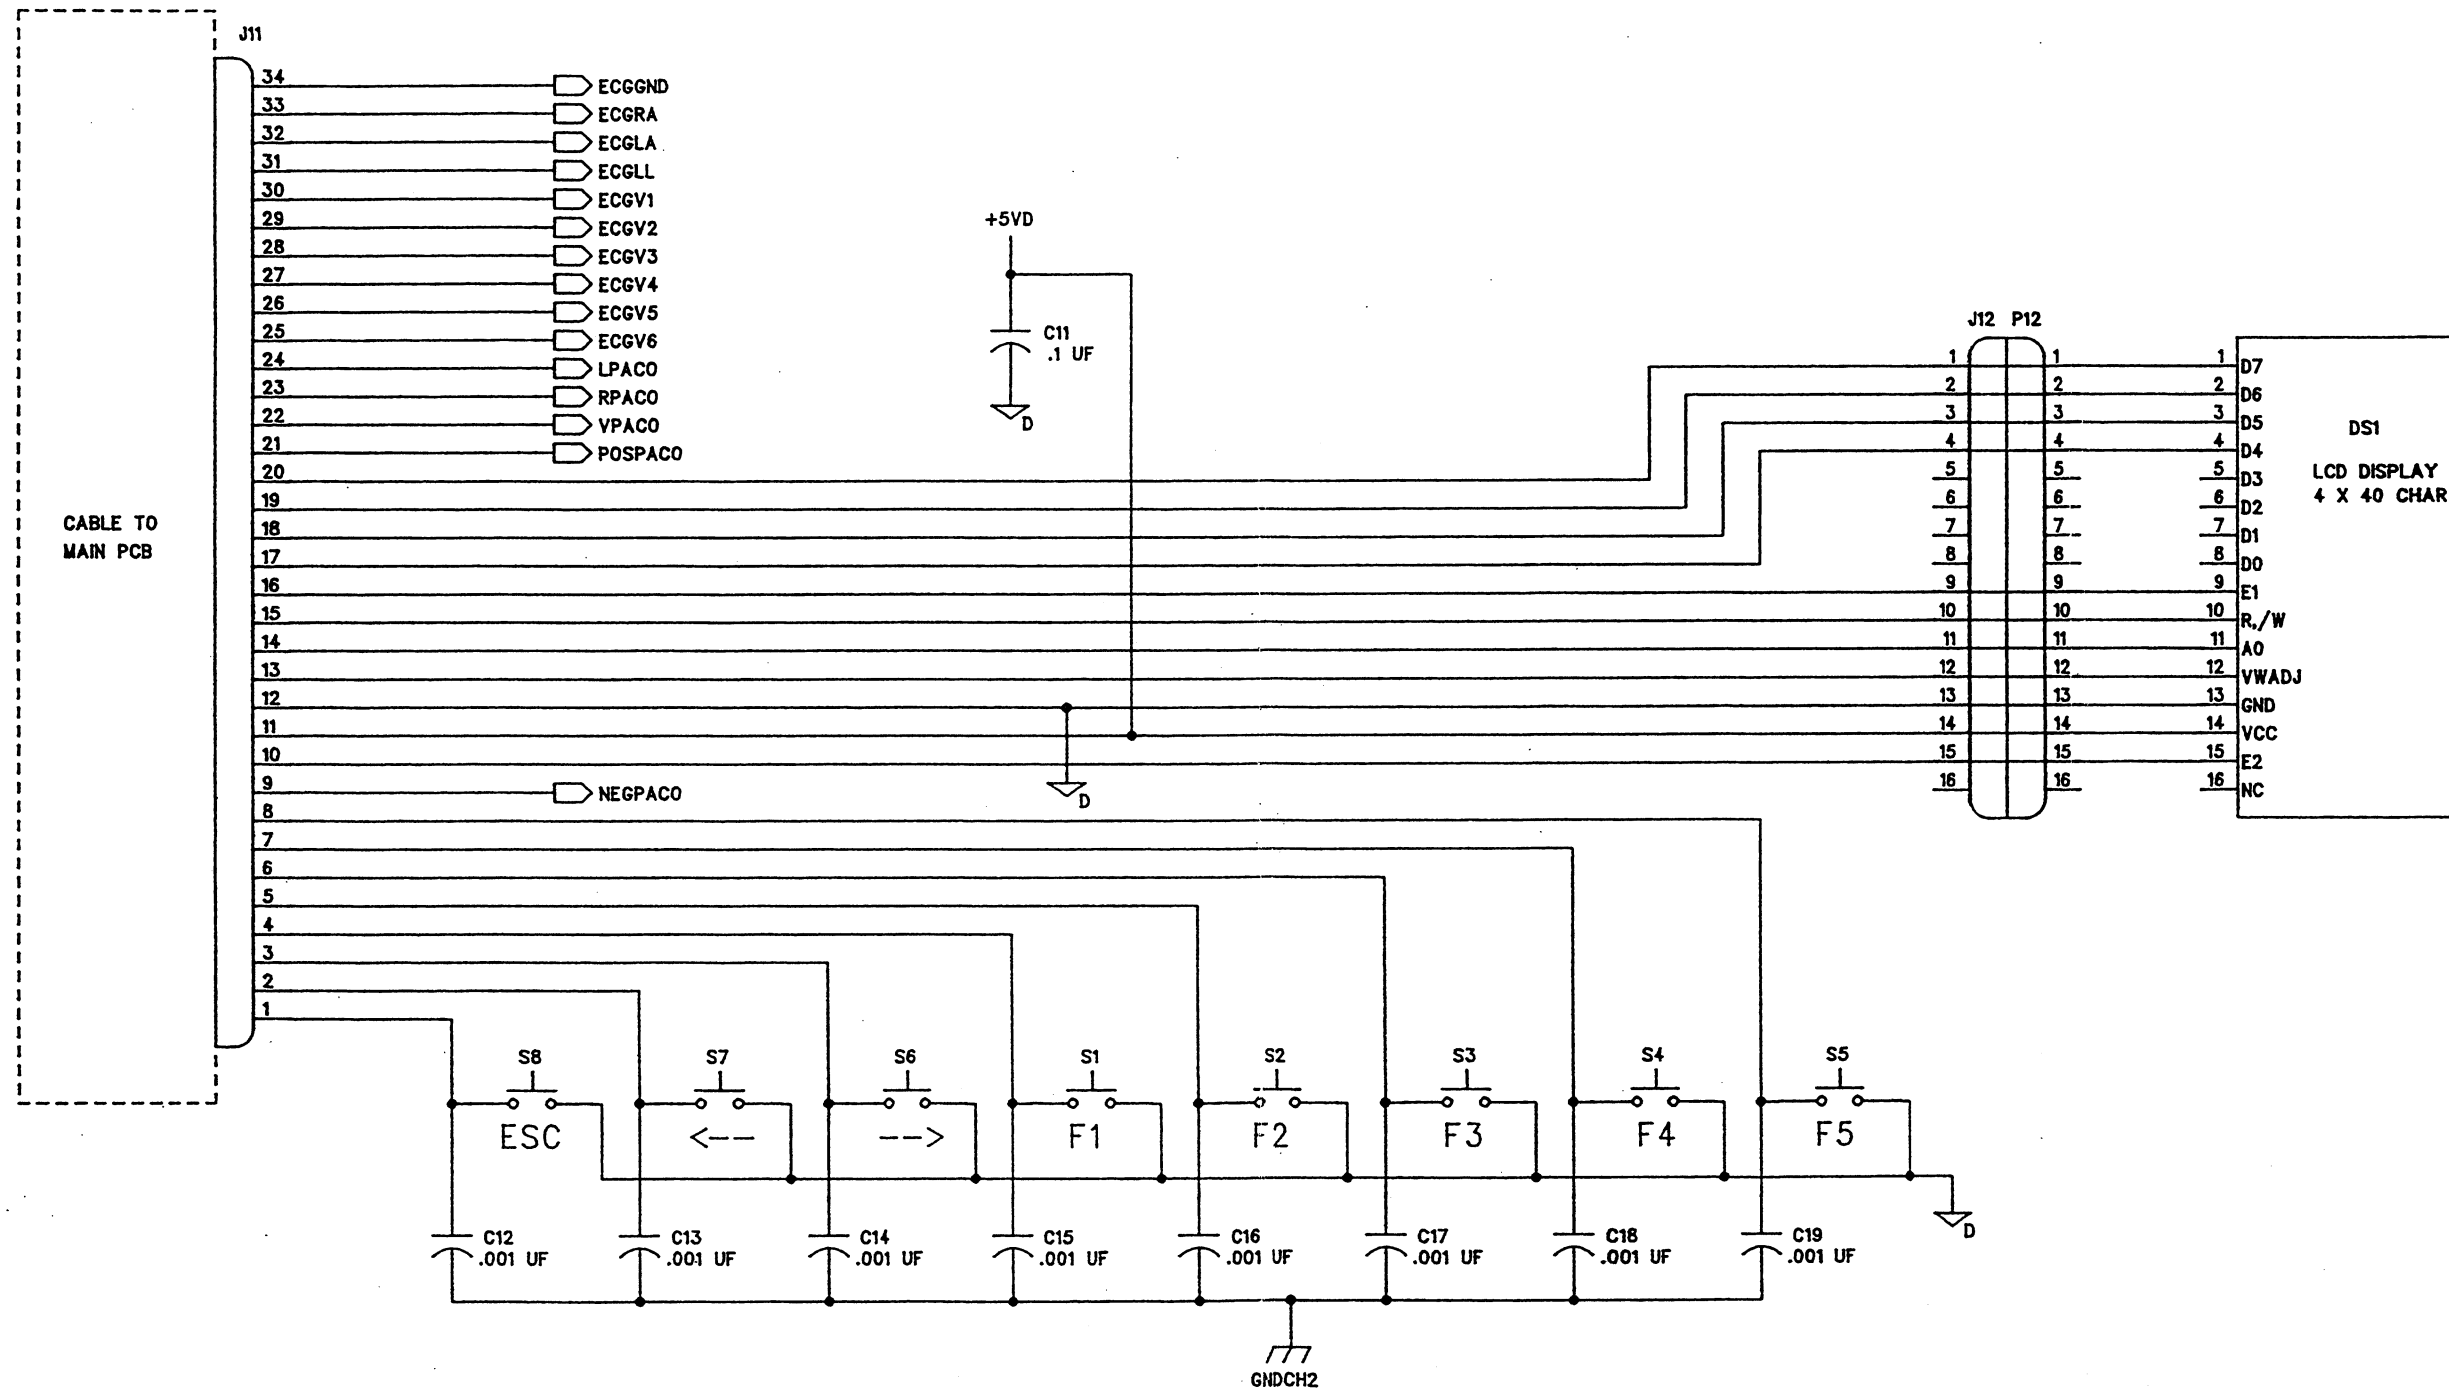

1

APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
DRAWN BY DG	DATE 6/5/94	TITLE IMPULSE 4000 DISPLAY PCB SCHEMATIC	
ENG MANAGER <i>[Signature]</i>	DATE 10/3/94	SIZE B	DWG. NO. 204515
PROJECT ENG DG	DATE 10/3/94	SCALE: NONE	REV B
STOCK NO:	FILE NO: 204515B.SCH	SHEET 1 OF 2	

LTR	DESCRIPTION	DATE	REV BY
	SEE SHEET 1		

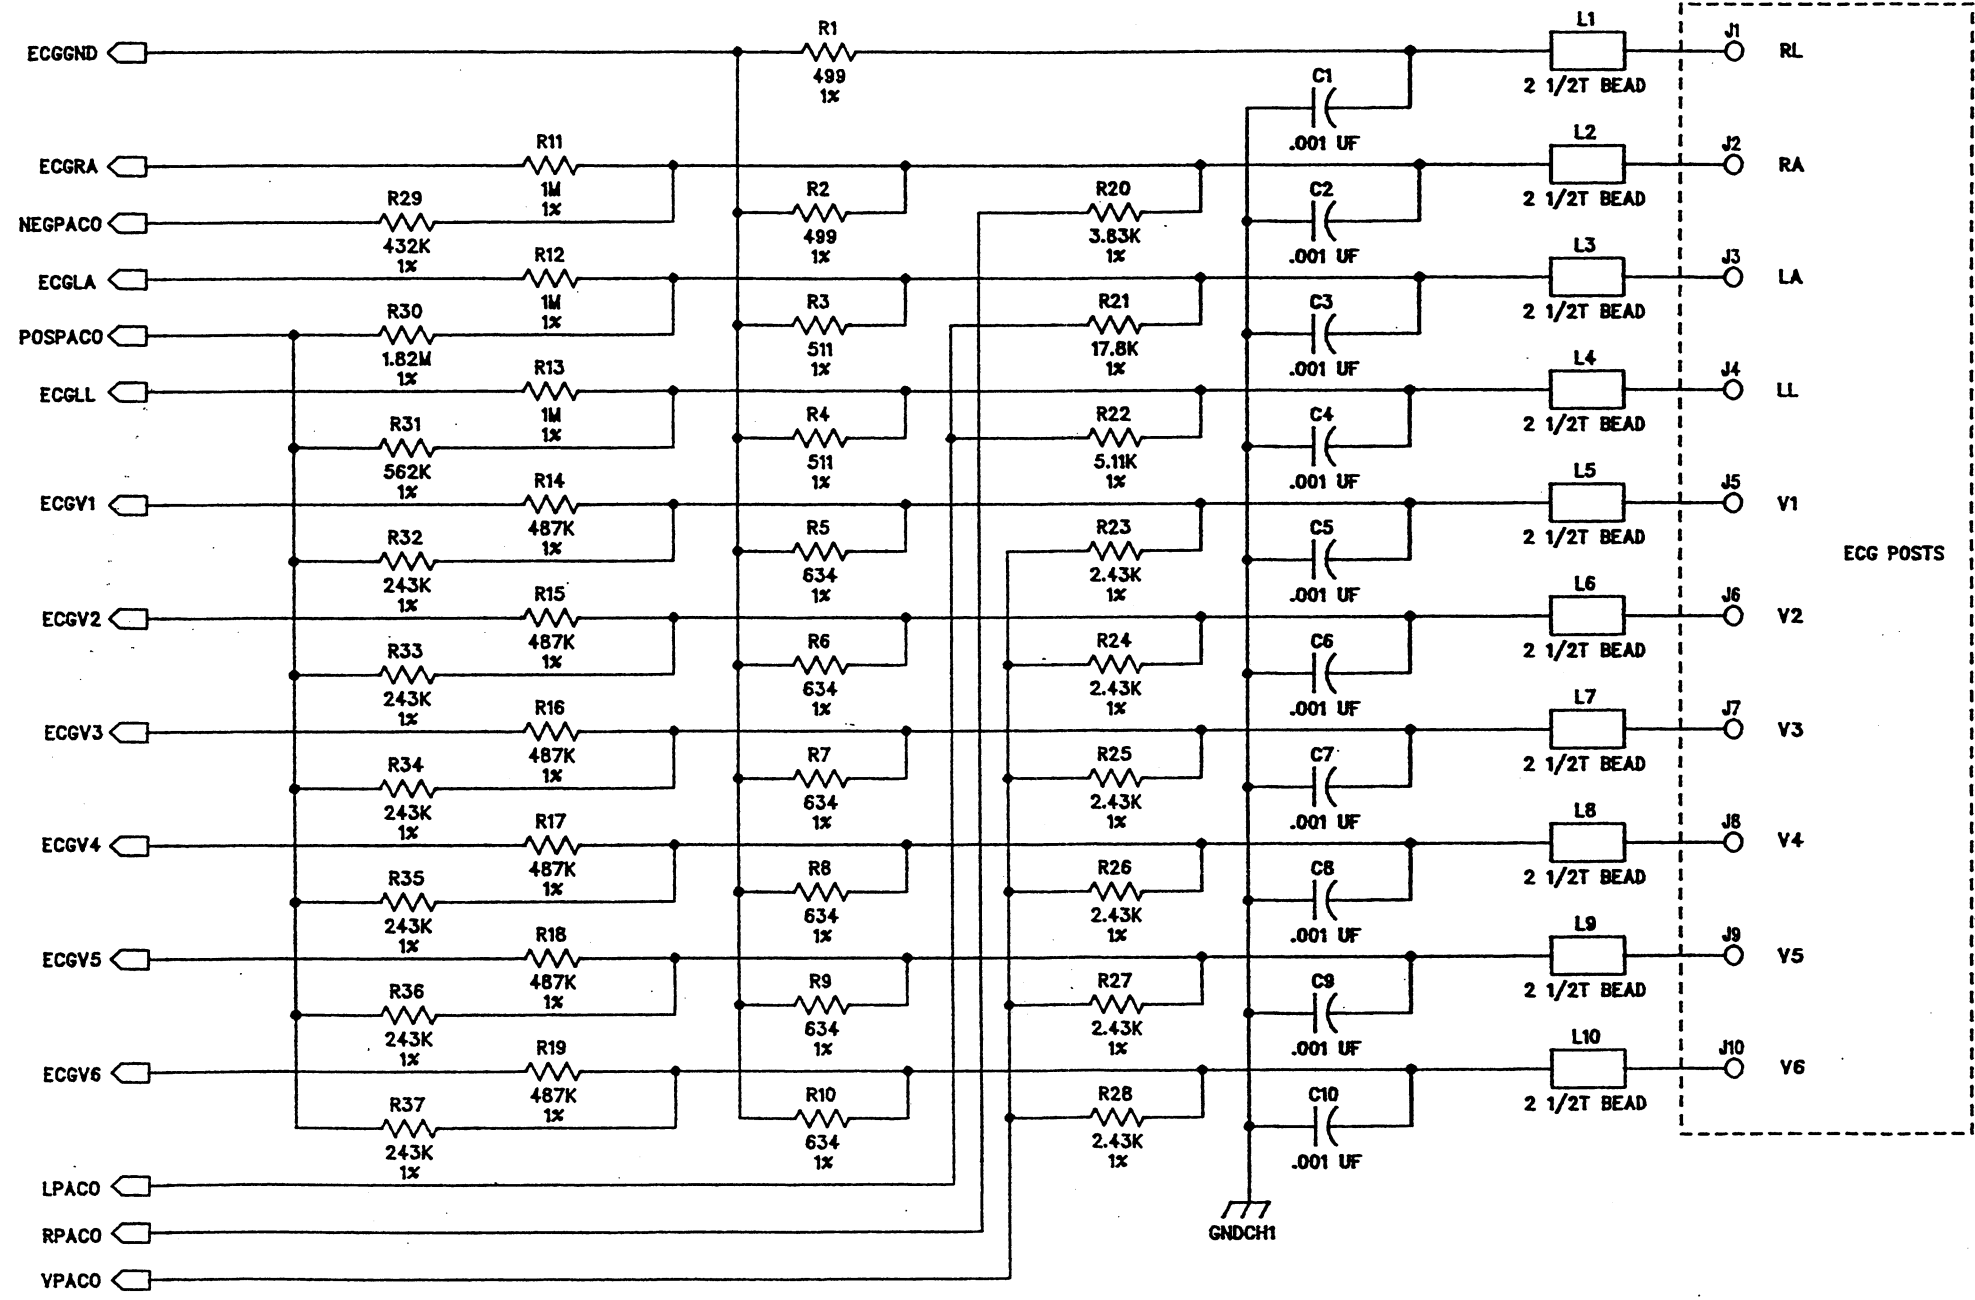

ECG POSTS

2

APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
ENG MANAGER	DATE	TITLE IMPULSE 4000 DISPLAY PCB SCHEMATIC	
PROJECT ENG	DATE	SIZE B	DWG. NO. 204515
STOCK NO: FILE NO:		SCALE: NONE	REV B
		SHEET 2	OF 2

**IMPULSE 4000 DISPLAY PRINTED CIRCUIT BOARD COMPONENT LIST**

REFERENCE	PART NUMBER	DESCRIPTION
C001	0418-0016	CAP CERA .001 UF 50V
C002	0418-0016	CAP CERA .001 UF 50V
C003	0418-0016	CAP CERA .001 UF 50V
C004	0418-0016	CAP CERA .001 UF 50V
C005	0418-0016	CAP CERA .001 UF 50V
C006	0418-0016	CAP CERA .001 UF 50V
C007	0418-0016	CAP CERA .001 UF 50V
C008	0418-0016	CAP CERA .001 UF 50V
C009	0418-0016	CAP CERA .001 UF 50V
C010	0418-0016	CAP CERA .001 UF 50V
C011	0418-0008	CAP CERA 1 UF 50V
C012	0418-0016	CAP CERA .001 UF 50V
C013	0418-0016	CAP CERA .001 UF 50V
C014	0418-0016	CAP CERA .001 UF 50V
C015	0418-0016	CAP CERA .001 UF 50V
C016	0418-0016	CAP CERA .001 UF 50V
C017	0418-0016	CAP CERA .001 UF 50V
C018	0418-0016	CAP CERA .001 UF 50V
C019	0418-0016	CAP CERA .001 UF 50V
DS01	2410-0020	DISP LCD 4 X 40 SUPERTWIST
J001	4919-0055	BINDING POST KIT GREEN
J002	4919-0056	BINDING POST KIT WHITE
J003	4919-0052	BINDING POST KIT BLACK
J004	4919-0054	BINDING POST KIT RED
J005	4919-0053	BINDING POST KIT BROWN
J006	4919-0053	BINDING POST KIT BROWN
J007	4919-0053	BINDING POST KIT BROWN
J008	4919-0053	BINDING POST KIT BROWN
J009	4919-0053	BINDING POST KIT BROWN
J010	4919-0053	BINDING POST KIT BROWN
J011	2710-0363	CONN 34P DIP HDR RT BOX
J012	2710-0364	CONN 16P DIP HDR FEM BOTTOM MT
L001	1214-0055	INDUCTOR WOUND BEAD
L002	1214-0055	INDUCTOR WOUND BEAD
L003	1214-0055	INDUCTOR WOUND BEAD
L004	1214-0055	INDUCTOR WOUND BEAD
L005	1214-0055	INDUCTOR WOUND BEAD
L006	1214-0055	INDUCTOR WOUND BEAD
L007	1214-0055	INDUCTOR WOUND BEAD
L008	1214-0055	INDUCTOR WOUND BEAD

## IMPULSE 4000 DISPLAY PRINTED CIRCUIT BOARD COMPONENT LIST

REFERENCE	PART NUMBER	DESCRIPTION
L009	1214-0055	INDUCTOR WOUND BEAD
L010	1214-0055	INDUCTOR WOUND BEAD
P012	2710-0365	CONN 16P DIP HDR MALE ST .318
R001	0307 1682	RES MF 1/8W 1% 499 $\Omega$
R002	0307 1682	RES MF 1/8W 1% 499 $\Omega$
R003	0307 1692	RES MF 1/8W 1% 511 $\Omega$
R004	0307 1692	RES MF 1/8W 1% 511 $\Omega$
R005	0307 1782	RES MF 1/8W 1% 634 $\Omega$
R006	0307 1782	RES MF 1/8W 1% 634 $\Omega$
R007	0307 1782	RES MF 1/8W 1% 634 $\Omega$
R008	0307 1782	RES MF 1/8W 1% 634 $\Omega$
R009	0307 1782	RES MF 1/8W 1% 634 $\Omega$
R010	0307 1782	RES MF 1/8W 1% 634 $\Omega$
R011	0307 1016	RES MF 1/8W 1% 1 M $\Omega$
R012	0307 1016	RES MF 1/8W 1% 1 M $\Omega$
R013	0307 1016	RES MF 1/8W 1% 1 M $\Omega$
R014	0307 1675	RES MF 1/8W 1% 487 K $\Omega$
R015	0307 1675	RES MF 1/8W 1% 487 K $\Omega$
R016	0307 1675	RES MF 1/8W 1% 487 K $\Omega$
R017	0307 1675	RES MF 1/8W 1% 487 K $\Omega$
R018	0307 1675	RES MF 1/8W 1% 487 K $\Omega$
R019	0307 1675	RES MF 1/8W 1% 487 K $\Omega$
R020	0307 1573	RES MF 1/8W 1% 3.83 K $\Omega$
R021	0307 1254	RES MF 1/8W 1% 17.8 K $\Omega$
R022	0307 1693	RES MF 1/8W 1% 5.11 K $\Omega$
R023	0307 1383	RES MF 1/8W 1% 2.43 K $\Omega$
R024	0307 1383	RES MF 1/8W 1% 2.43 K $\Omega$
R025	0307 1383	RES MF 1/8W 1% 2.43 K $\Omega$
R026	0307 1383	RES MF 1/8W 1% 2.43 K $\Omega$
R027	0307 1383	RES MF 1/8W 1% 2.43 K $\Omega$
R028	0307 1383	RES MF 1/8W 1% 2.43 K $\Omega$
R029	0307 1625	RES MF 1/8W 1% 432 K $\Omega$
R030	0307 1266	RES MF 1/8W 1% 1.82 M $\Omega$
R031	0307 1735	RES MF 1/8W 1% 562 K $\Omega$
R032	0307 1385	RES MF 1/8W 1% 243 K $\Omega$
R033	0307 1385	RES MF 1/8W 1% 243 K $\Omega$
R034	0307 1385	RES MF 1/8W 1% 243 K $\Omega$
R035	0307 1385	RES MF 1/8W 1% 243 K $\Omega$
R036	0307 1385	RES MF 1/8W 1% 243 K $\Omega$
R037	0307 1385	RES MF 1/8W 1% 243 K $\Omega$

## IMPULSE 4000 DISPLAY PRINTED CIRCUIT BOARD COMPONENT LIST

REFERENCE	PART NUMBER	DESCRIPTION
S001	2505-0028	SW KEY OBROUND BLACK
S002	2505-0028	SW KEY OBROUND BLACK
S003	2505-0028	SW KEY OBROUND BLACK
S004	2505-0028	SW KEY OBROUND BLACK
S005	2505-0028	SW KEY OBROUND BLACK
S006	2505-0028	SW KEY OBROUND BLACK
S007	2505-0028	SW KEY OBROUND BLACK
S008	2505-0028	SW KEY OBROUND BLACK
ZZ01	5201-0314	IMPULSE 4000 DISPLAY PCB BASIC
ZZ02	4910-0159	SW STD 1/4 RD 6-32 125L
ZZ03	4704-2433	SCREW PPH 6-32 X 1/4
ZZ06	4919-0090	ECG POST STAINLESS .55 BASE
ZZ09	4711-6405	WSHR FLAT #8 TYP B
ZZ12	4711-9722	NUT KEP 8-32 X 3/8
ZZ13	5001-0372	LABEL BARCODE SERIALIZED

# ***Chapter 7***

## *Modules*



## IMPULSE 4000 ADAPTER (PACEMAKER PLUG-IN) MODULE TQA-2 for ZOLL MODELS PD1200 and PD1400 using the PD2200 Electrode System

### General Information

The adapter (pacemaker plug-in) module when connected to the Impulse 4000, tests the transcutaneous pacemaker using the manufacturer's suggested measurement technique for both the width and amplitude of the pacemaker pulse. The specified test load impedance and the electrode interface connection match the manufacturer's requirements. Pacemaker measurements can be easily completed during manual tests, automated sequences, and remote operation.

The Impulse 4000 without this option is limited to measurements across the standard internal 50  $\Omega$  test load.

### Specifications

Test Load Value:	1000 $\Omega$ , $\pm 1\%$ 4 Watts (maximum)	
Defibrillation Input Protection:	Yes	
Oscilloscope Output:	Module Output:	Direct voltage measurement across selected test load. Subminiature phone jack connector.
	Impulse 4000 Output:	One Volt (Peak) = 40 mA applied. BNC connector.
Impulse 4000 Firmware Level:	Ver 1.00 (minimum)	
Power:	No internal power supply; DC power supplied via Impulse 4000 module interface.	
Case:	Plastic	
Weight:	0.15 lb, 68 g.	
Dimensions:	4.3"L x 2.0"W x 0.9"H. 10.92cm L x 5.08cm W x 2.29cm H.	

## Measurement Technique Description

Waveform Description: The Zoll PD Models of external transcutaneous pacemakers utilize a rectilinear current pulse of approximately 40 milliseconds in duration.

Applied Pacemaker Polarity: Measurements are conducted regardless of polarity ( $\pm$ ).

Width Algorithm: Measurement is made at the 50% point between the zero reference and the peak of the applied pacemaker pulse.

Accuracy:  $\pm 0.5$  mS  
(Assumes Impulse 4000 specification)

Amplitude Algorithm: The pacemaker amplitude measurement is made from the 50% point of the leading edge across the horizontal peak down to the 50% point of the trailing edge. This segment of the pacemaker pulse waveform is digitized at 50 microsecond intervals. All of these samples are averaged to yield the amplitude value in milliamperes.

Accuracy:  $\pm(1\%$  of reading +2.0 mA)  
(Assumes Impulse 4000 specification)

## Installation

To begin using the adapter module:

- Turn off the Impulse 4000.
- Plug the adapter module into the "ADAPTER MODULE" receptacle on the left side of the Impulse 4000.
- Connect the adapter module cables to the pacemaker cables.

NOTE: Readings will be identical if the connections are accidentally reversed. If you want to reverse the polarity of the real-time output, reverse the connection.

## Operating Instructions

With the adapter module connected as stated above, follow the operating instructions in the *Conducting the Manual Pacer Test* section in Chapter 3 of the Impulse 4000 Operating and Service manual.

## Test and Calibration

There are no test and calibration procedures for the adapter modules.

## Theory of Operation

The adapter modules contain the loads used for pacemaker testing. The adapter module interfaces to the Impulse 4000 with a special connector that has 33 connections. Following is a brief description of the adapter module circuitry. Please refer to the schematics on the next two pages.

NOTE: *Not all modules contain all the circuitry described below.*


### ADAPTER MODULE SCHEMATIC, SHEET 1


There are from 1-4 loads and they are R1, R2, R3, and R4. Relays K1, K2, and K3 select the load. "No load" can also be selected for open circuit tests. The selected load is connected through R9 and R10 to ground. The voltage across R9 and R10 is proportional to the input current and is measured by the Impulse 4000.

### ADAPTER MODULE SCHEMATIC, SHEET 2

This circuit detects an input overload caused by a defibrillator pulse. U1 is a voltage comparator and its inputs are set at  $\pm 4.1$  V. The current sense signal from R9 and R10 is attenuated so that an overload is greater than or equal to  $\pm 4.1$  V and this trips one or the other comparator. C3 and C4 hold the comparator in the tripped state for about 0.7 seconds. The Impulse 4000 signals the user by turning on speaker LS1.

IMPULSE 4000 ADAPTER (PLUG-IN) MODULE COMPONENT LOCATOR

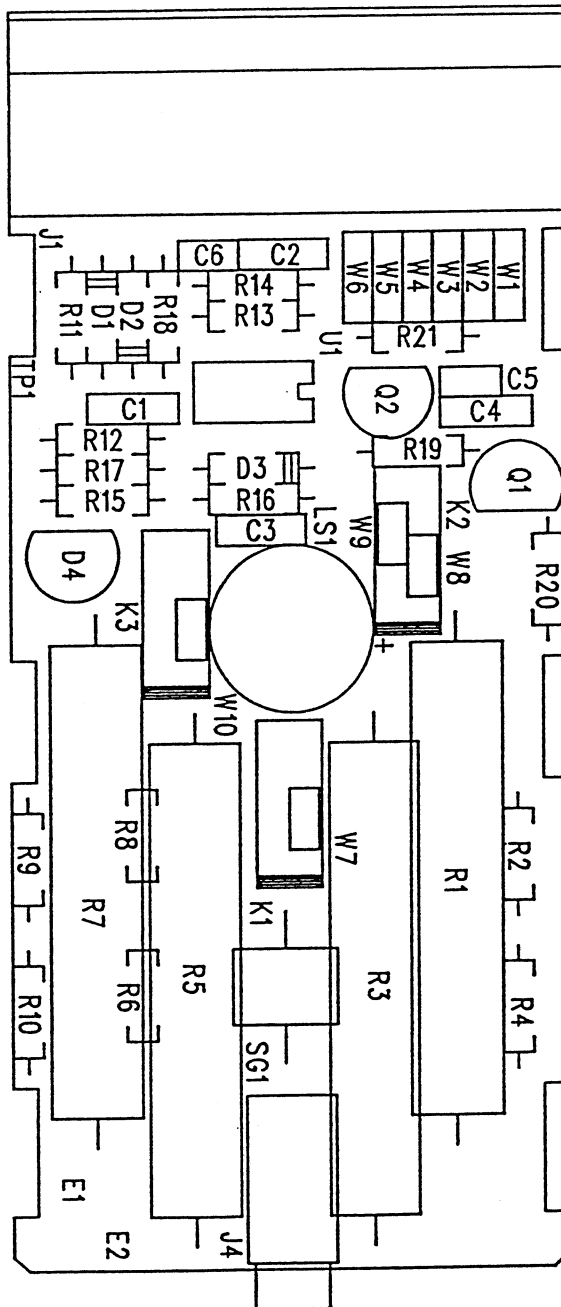

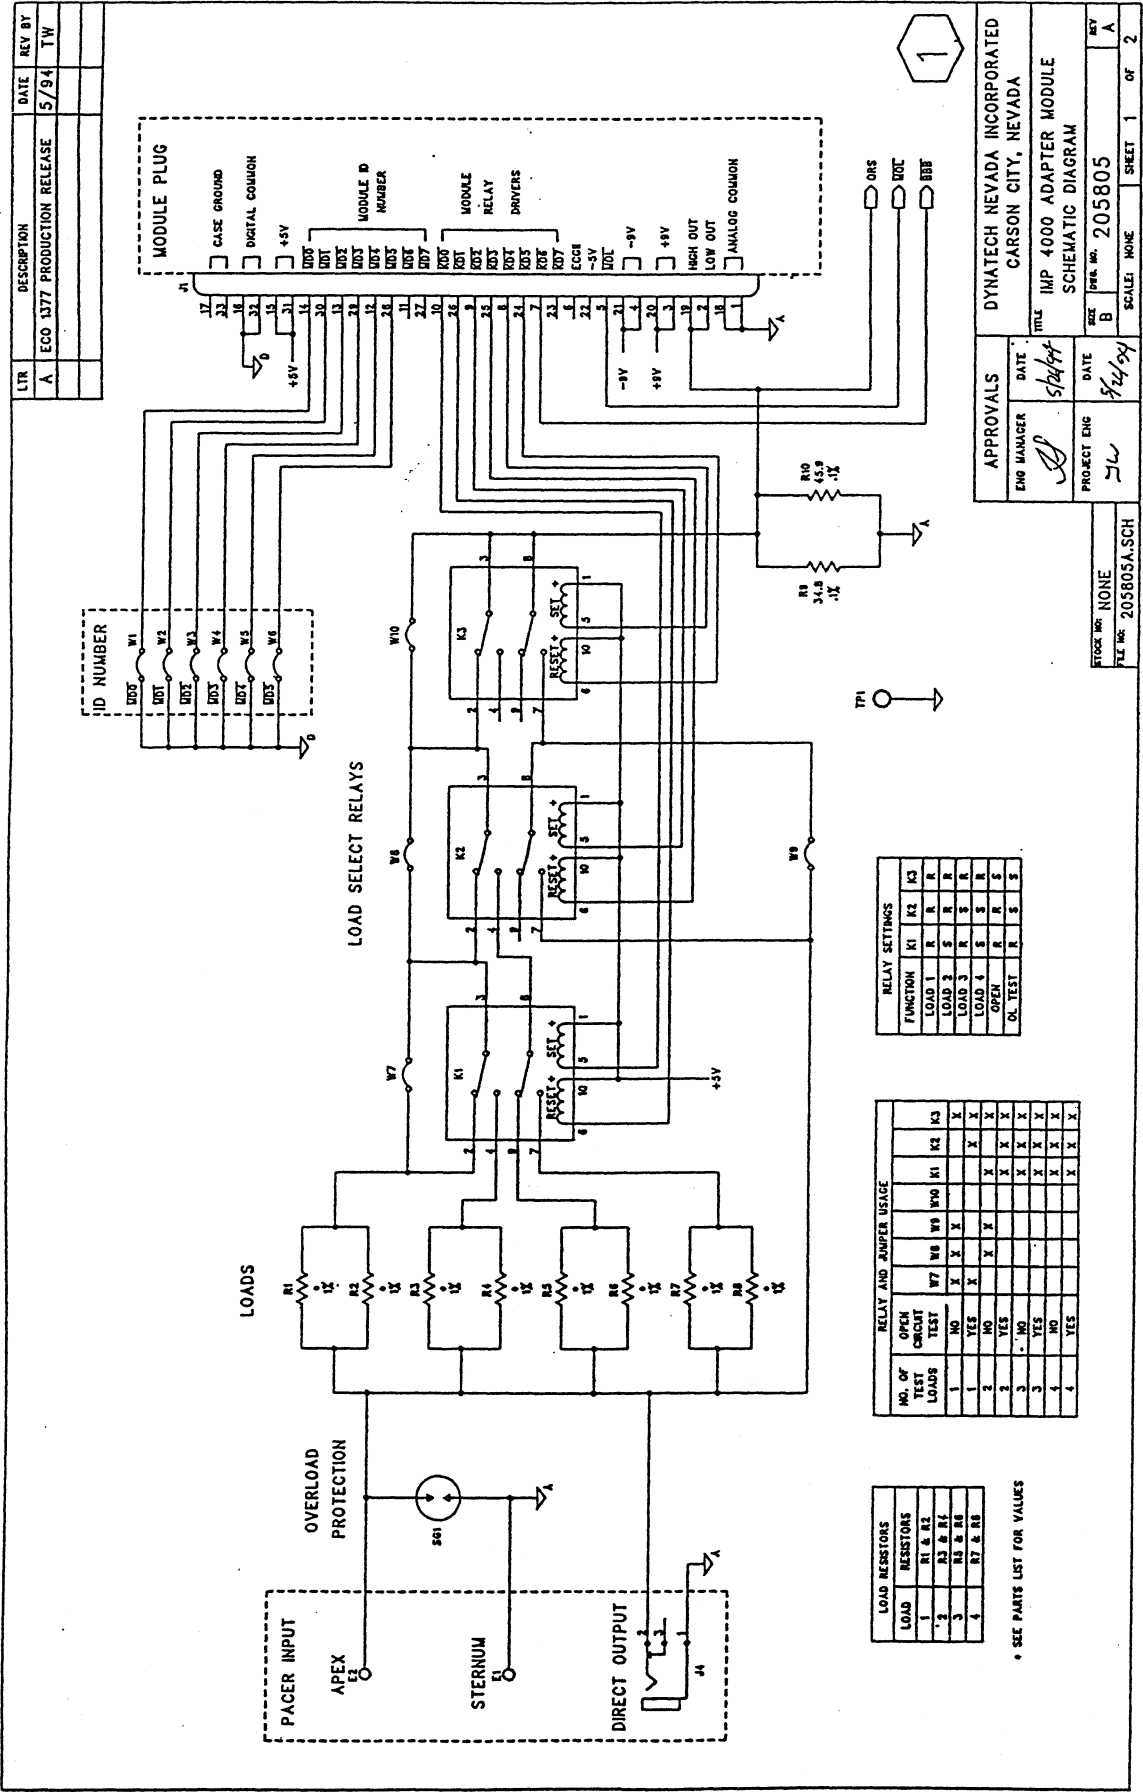

LTR	DESCRIPTION	DATE	REV BY
A	ECO 1377 PRODUCTION RELEASE	5/94	TW

APPROVALS		DATE
ENG MANAGER	<i>[Signature]</i>	5/24/94
PROJECT ENG	<i>[Signature]</i>	5/24/94

STOCK NO.	NONE
FILE NO.	205805A.SCH


TITLE	DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA
TITLE	IMP 4000 ADAPTER MODULE SCHEMATIC DIAGRAM
SIZE	1/8" x 1/2"
SCALE	NONE
SHEET	1 OF 2

FUNCTION	K1	K2	K3
LOAD 1	R	R	R
LOAD 2	S	S	S
LOAD 3	R	R	R
LOAD 4	S	S	S
OPEN	R	R	R
DL-TEST	R	R	R

NO. OF TEST LOADS	OPEN CIRCUIT TEST	W7	W8	W9	W10	K1	K2	K3
1	NO	X	X	X	X	X	X	X
2	NO	X	X	X	X	X	X	X
3	NO	X	X	X	X	X	X	X
4	NO	X	X	X	X	X	X	X
4	YES							

LOAD	RESISTORS
1	R1 & R2
2	R3 & R4
3	R5 & R6
4	R7 & R8

\* SEE PARTS LIST FOR VALUES

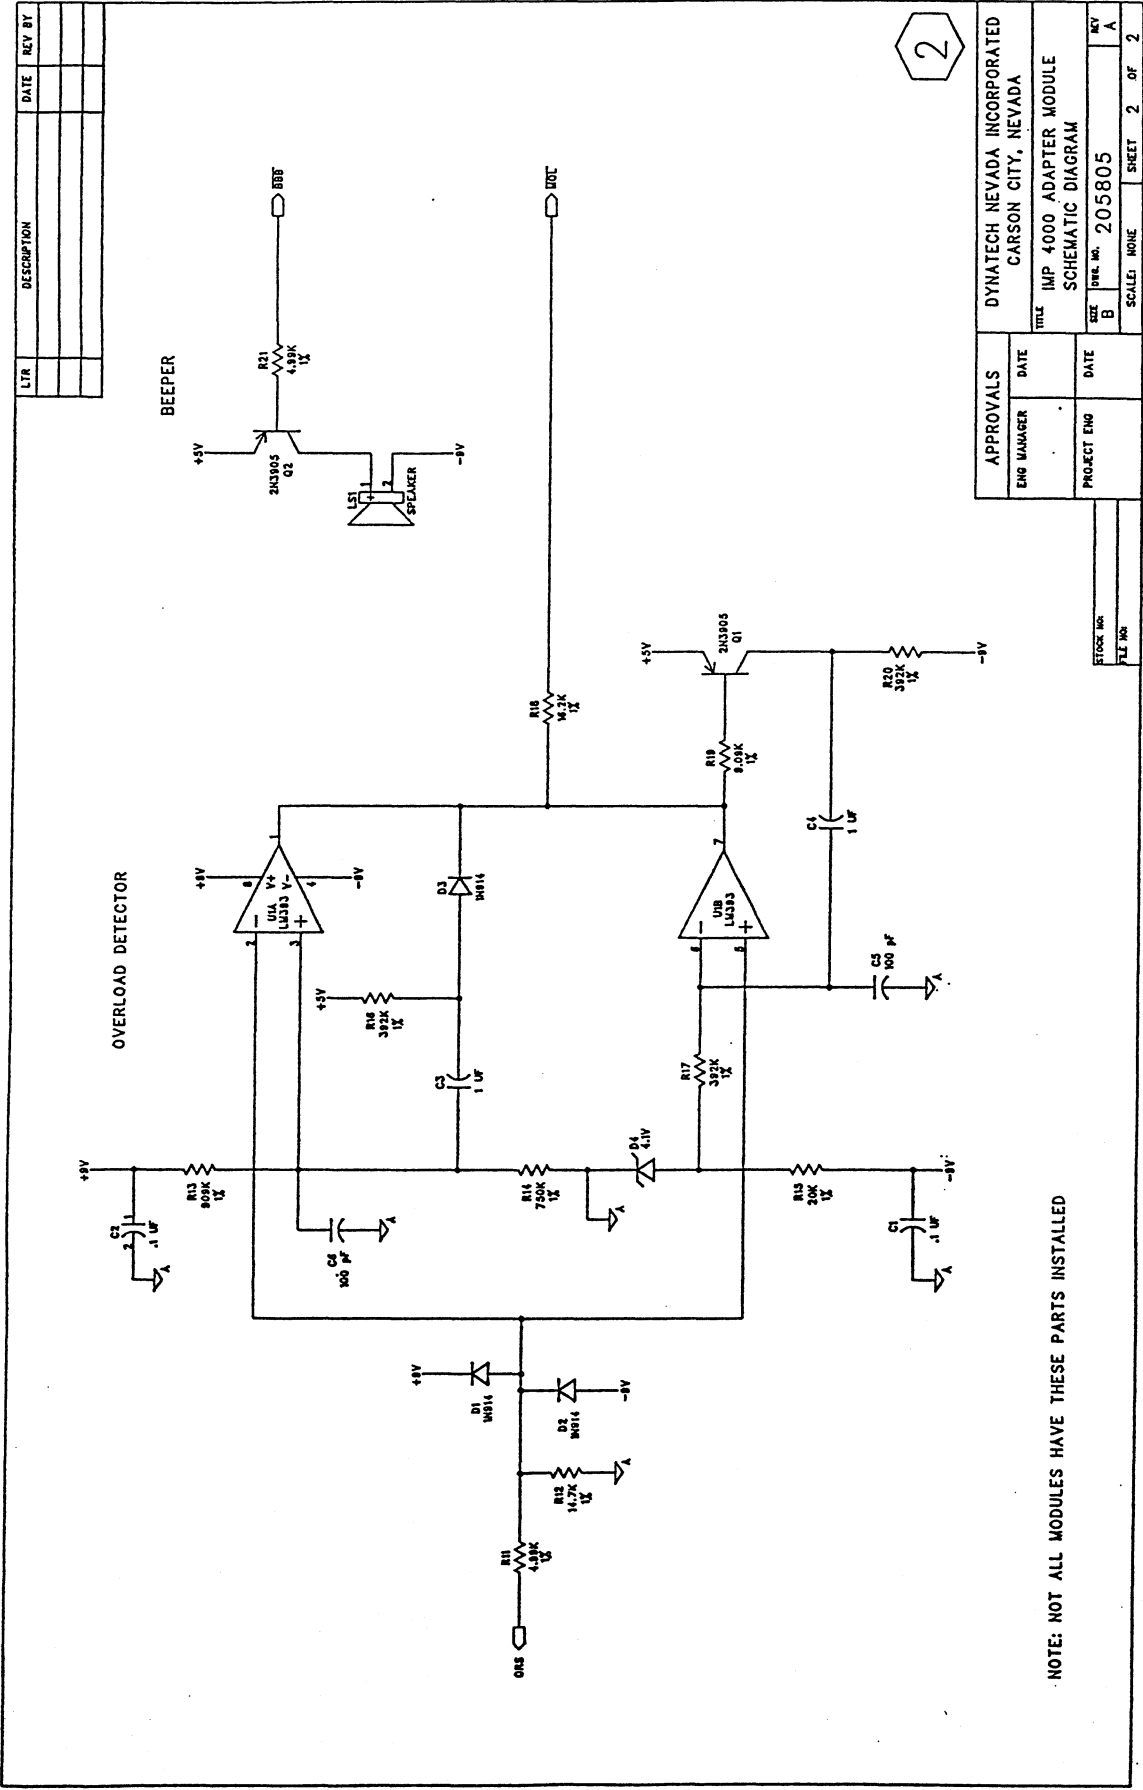

OVERLOAD DETECTOR

BEEPER

LTR	DESCRIPTION	DATE	REV BY

2

APPROVALS		DYNATECH NEVADA, INCORPORATED CARSON CITY, NEVADA	
ENG MANAGER	DATE	TITLE	
		IMP 4000 ADAPTER MODULE SCHEMATIC DIAGRAM	
PROJECT ENG	DATE	REV	
		B	205805
		SCALE: NONE	SHEET 2 OF 2

NOTE: NOT ALL MODULES HAVE THESE PARTS INSTALLED

## Impulse 4000 Adapter Module TQA-2 Component List

REFERENCE	PART NUMBER	DESCRIPTION
C001	0418-0008	CAP CERA 0.1MF 50V
C002	0418-0008	CAP CERA 0.1MF 50V
C003	0418-0009	CAP 1MF 50V CERAMIC
C004	0418-0009	CAP 1MF 50V CERAMIC
C005	0418-0076	100PF 50V CERA
C006	0418-0076	100PF 50V CERA
D001	2101-0010	DIODE 1N914/1N4148
D002	2101-0010	DIODE 1N914/1N4148
D003	2101-0010	DIODE 1N914/1N4148
D004	2102-0045	DIODE ZEN LM4040DIZ-4.1 4.1V
J004	2719-0207	PHONE JACK MINI RT PC MT
K003	2562-0016	RELAY DUAL LATCHING MINI PC 5V
LS01	0801-0009	BEEPER 3-16 VDC PC MT
Q001	2112-0007	TRANS PNP 2N3905
Q002	2112-0007	TRANS PNP 2N3905
R001	0316-0251	RES MF 4W 1% 1000 OHM
R002	0307-1684	RES MF 1/8W 1% 49.9K
R009	0316-0244	RES MF 1/8W 1% 34.8 OHM
R010	0316-0245	RES MF 1/8W 1% 45.9 OHM
R011	0307-1683	RES MF 1/8W 1% 4.99K
R012	0307-1174	RES MF 1/8W 1% 14.7K
R013	0307-1935	RES MF 1/8W 1% 909K
R014	0307-1855	RES MF 1/8W 1% 750K
R015	0307-1304	RES MF 1/8W 1% 20K
R016	0307-1585	RES MF 1/8W 1% 392K
R017	0307-1585	RES MF 1/8W 1% 392K
R018	0307-1214	RES MF 1/8W 1% 16.2K
R019	0307-1933	RES MF 1/8W 1% 9.09K
R020	0307-1585	RES MF 1/8W 1% 392K
R021	0307-1683	RES MF 1/8W 1% 4.99K
SG01	1010-0001	SURGE ARRESTER, AC240L
TP01	2714-0002	TERM SWAGE 10-877-2
U001	2118-0045	IC DUAL COMPARATOR LM393N
W002	3015-0001	INSULATED JUMPER .200
W007	3015-0018	UN-INSULATED JUMPER .100
W008	3015-0018	UN-INSULATED JUMPER .100
W009	3015-0018	UN-INSULATED JUMPER .100

**Impulse 4000 Adapter Module TQA-2 Component List**

REFERENCE	PART NUMBER	DESCRIPTION
ZZ01	3010-0452	CABLE ASSY, TQA-2, ZOLL
ZZ02	5001-0545	TQA DIRECT OUTPUT LABEL
ZZ03	5001-0547	SERIAL COVER LABEL .8 X .8
ZZ04	5001-0603	LABEL, TQA-2 (ZOLL PD2200)
ZZ05	5001-0604	TQA-2 SERIAL NO. SLIP
ZZ06	5027-0238	TQA-6 CASE MODIFICATION
ZZ07	5201-0333	TQA MODULE PCB - BASIC



## **IMPULSE 4000 ADAPTER (PACEMAKER PLUG-IN) MODULE TQA-3 for ZOLL MODELS NTP2000 AND NTP2100**

### **General Information**

The adapter (pacemaker plug-in) module when connected to the Impulse 4000, tests the transcutaneous pacemaker using the manufacturer's suggested measurement technique for both the width and amplitude of the pacemaker pulse. The specified test load impedance and the electrode interface connection match the manufacturer's requirements. Pacemaker measurements can be easily completed during manual tests, automated sequences, and remote operation.

The Impulse 4000 without this option is limited to measurements across the standard internal 50  $\Omega$  test load.

### **Specifications**

Test Load Value:	1000 $\Omega$ , $\pm 1\%$ . 4 Watts (maximum)
Defibrillation Input Protection:	None
Oscilloscope Output:	Module Output: Direct voltage measurement across selected test load. Subminiature phone jack connector.
	Impulse 4000 Output: One Volt (Peak) = 40 mA applied. BNC connector.
Impulse 4000 Firmware Level:	Ver 1.00 (minimum)
Power:	No internal power supply; DC power supplied via Impulse 4000 module interface.
Case:	Plastic
Weight:	0.15 lb, 68 g.
Dimensions:	4.3"L x 2.0"W x 0.9"H. 10.92cm L x 5.08cm W x 2.29cm H.

## Measurement Technique Description

Waveform Description: The Zoll NTP Models of external transcutaneous pacemakers utilize a rectilinear current pulse of approximately 40 milliseconds in duration.

Applied Pacemaker Polarity: Measurements are conducted regardless of polarity ( $\pm$ ).

Width Algorithm: Measurement is made at the 50% point between the zero reference and the peak of the applied pacemaker pulse.

Accuracy:  $\pm 0.5$  mS  
(Assumes Impulse 4000 specification)

Amplitude Algorithm: The pacemaker amplitude measurement is made from the 50% point of the leading edge across the horizontal peak down to the 50% point of the trailing edge. This segment of the pacemaker pulse waveform is digitized at 50 microsecond intervals. All of these samples are averaged to yield the amplitude value in milliamperes.

Accuracy:  $\pm(1\%$  of reading +2.0 mA)  
(Assumes Impulse 4000 specification)

## Installation

To begin using the adapter module:

- Turn off the Impulse 4000.
- Plug the adapter module into the “ADAPTER MODULE” receptacle on the left side of the Impulse 4000.
- Connect the adapter module cables to the pacemaker cables.

NOTE: Readings will be identical if the connections are accidentally reversed. If you want to reverse the polarity of the real-time output, reverse the connection.

## Operating Instructions

With the adapter module connected as stated above, follow the operating instructions in the *Conducting the Manual Pacer Test* section in Chapter 3 of the Impulse 4000 Operating and Service manual.

## Test and Calibration

There are no test and calibration procedures for the adapter modules.

## Theory of Operation

The adapter modules contain the loads used for pacemaker testing. The adapter module interfaces to the Impulse 4000 with a special connector that has 33 connections. Following is a brief description of the adapter module circuitry. Please refer to the schematics on the next two pages.

NOTE: Not all modules contain all the circuitry described below.


### ADAPTER MODULE SCHEMATIC, SHEET 1

There are from 1-4 loads and they are R1, R2, R3, and R4. Relays K1, K2, and K3 select the load. “No load” can also be selected for open circuit tests. The selected load is connected through R9 and R10 to ground. The voltage across R9 and R10 is proportional to the input current and is measured by the Impulse 4000.


### ADAPTER MODULE SCHEMATIC, SHEET 2

This circuit detects an input overload caused by a defibrillator pulse. U1 is a voltage comparator and its inputs are set at  $\pm 4.1$  V. The current sense signal from R9 and R10 is attenuated so that an overload is greater than or equal to  $\pm 4.1$  V and this trips one or the other comparator. C3 and C4 hold the comparator in the tripped state for about 0.7 seconds. The Impulse 4000 signals the user by turning on speaker LS1.

**IMPULSE 4000 ADAPTER (PLUG-IN) MODULE COMPONENT LOCATOR**

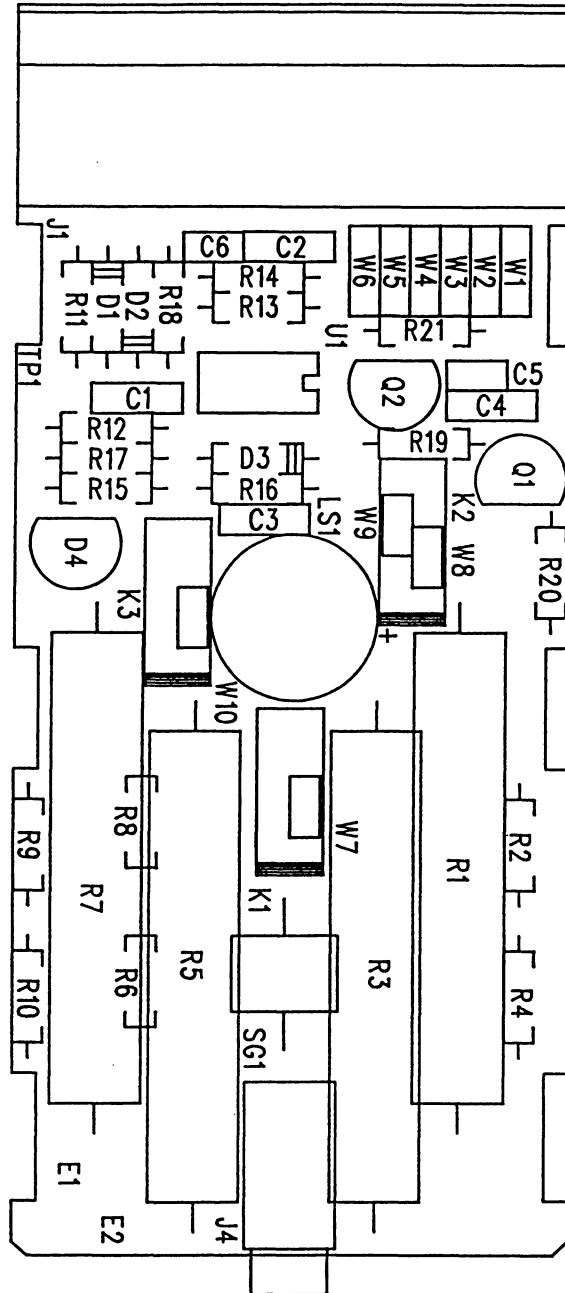

LTR	DESCRIPTION	DATE	REV BY
A	ECO 1377 PRODUCTION RELEASE	5/94	TW

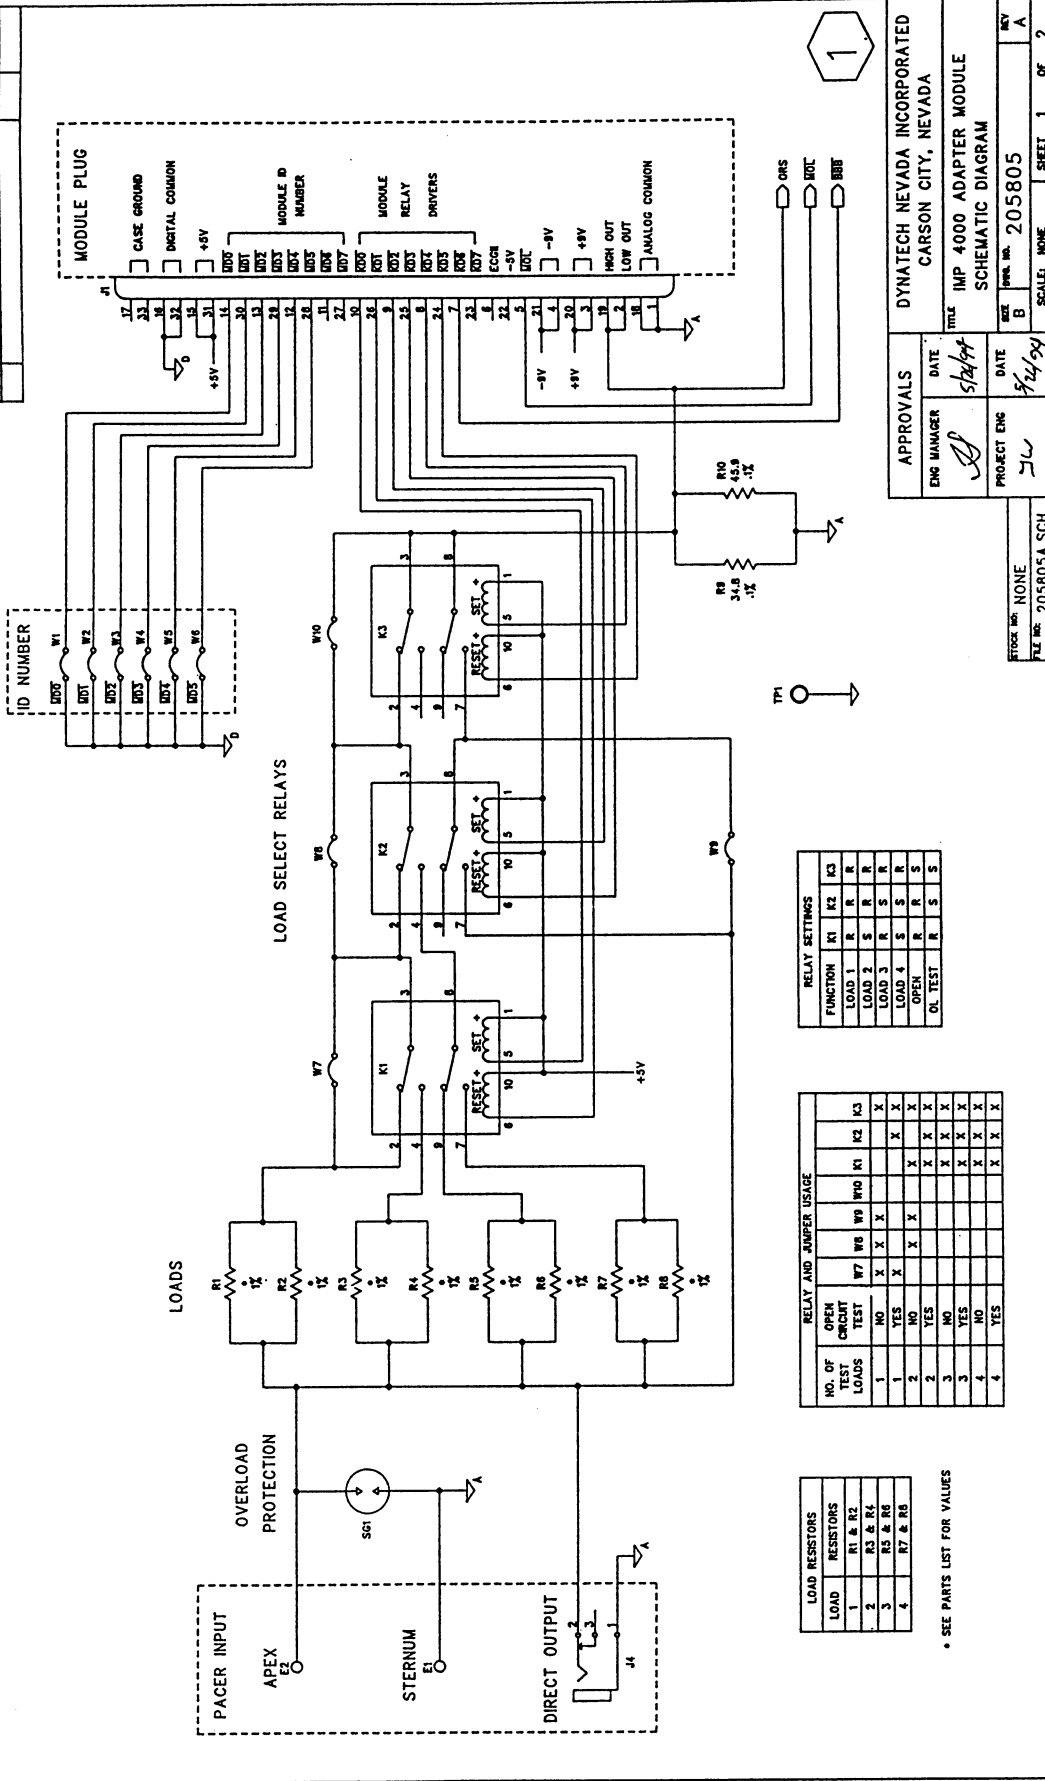

RELAY SETTINGS	K1	K2	K3
FUNCTION	R	R	R
LOAD 1	R	R	R
LOAD 2	S	R	R
LOAD 3	R	R	R
LOAD 4	S	S	R
OPEN	R	R	S
DL TEST	R	S	S


NO. OF TEST LOADS	RELAY AND JUMPER USAGE							
	OPEN ORIGIN TEST	W7	W6	W9	W10	K1	K2	K3
1	NO	X	X	X	X	X	X	X
2	YES	X	X	X	X	X	X	X
3	NO					X	X	X
4	YES					X	X	X

LOAD RESISTORS	RESISTORS
LOAD 1	R1 & R2
LOAD 2	R3 & R4
LOAD 3	R5 & R6
LOAD 4	R7 & R8

\* SEE PARTS LIST FOR VALUES

APPROVALS		DATE	DATE
ENG MANAGER	PROJECT ENG	5/24/94	5/24/94
DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA		TITLE	IMP 4000 ADAPTER MODULE SCHEMATIC DIAGRAM
FILE NO.	SCALE	REV	REV
205805A	NONE	B	A
SHEET 1		OF 2	

LTR	DESCRIPTION	DATE	REV BY

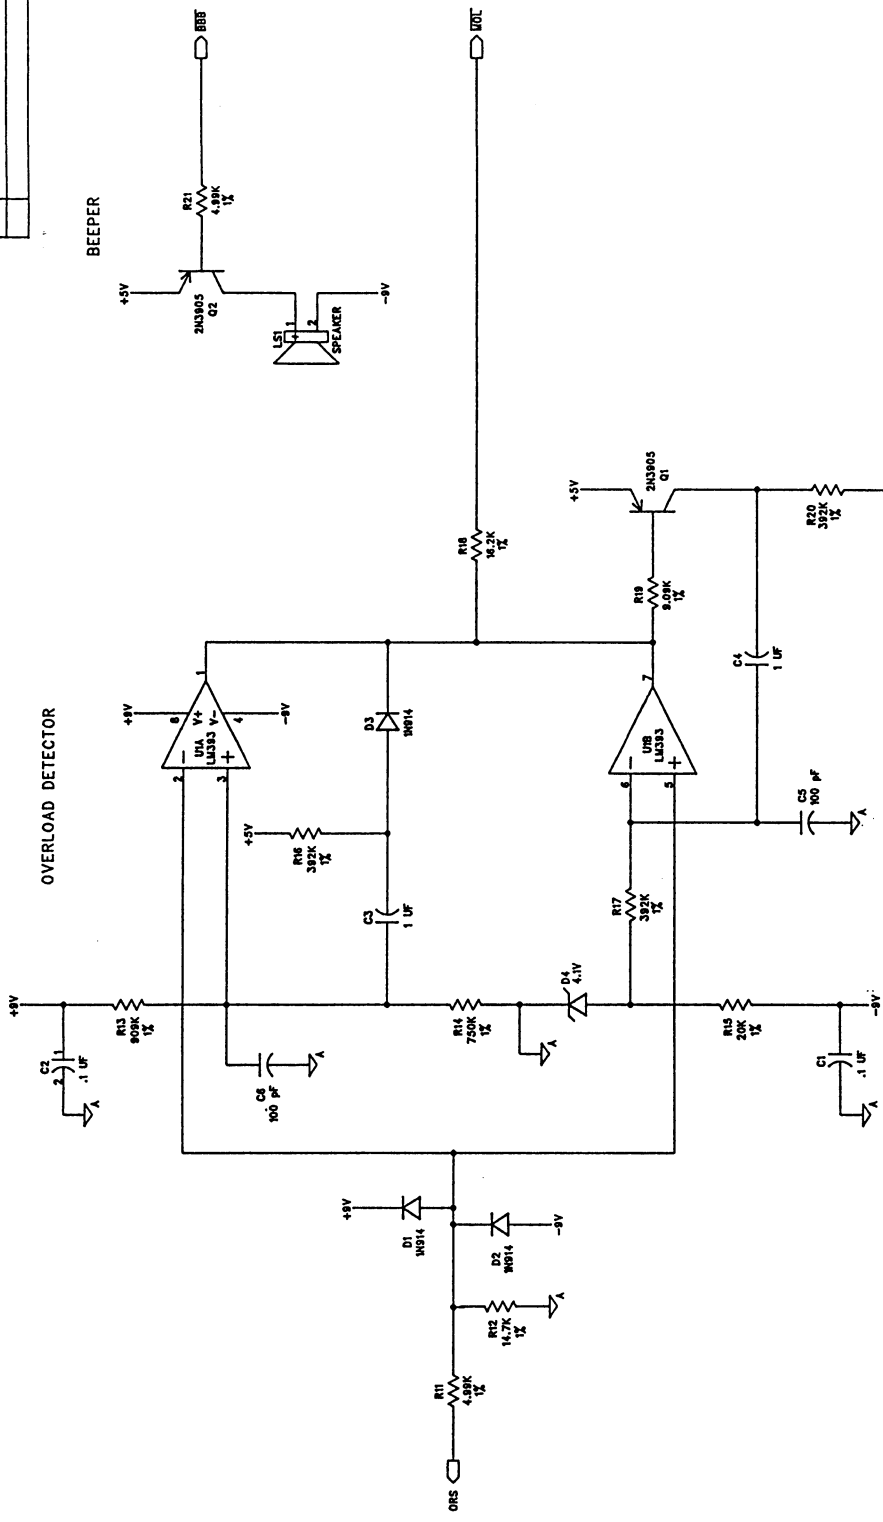

2

APPROVALS		DATE	

DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
TITLE IMP 4000 ADAPTER MODULE SCHEMATIC DIAGRAM	
DATE B	REV A
PROJECT NO. 205805	SCALE: NONE
FILE NO.	SHEET 2 OF 2

NOTE: NOT ALL MODULES HAVE THESE PARTS INSTALLED

**Impulse 4000 Adapter Module TQA-3 Component List**

REFERENCE	PART NUMBER	DESCRIPTION
J004	2719-0207	PHONE JACK MINI RT PC MT
K003	2562-0016	RELAY DUAL LATCHING MINI PC 5V
R001	0316-0251	RES MF 4W 1% 1000 OHM
R002	0307-1684	RES MF 1/8W 1% 49.9K
R009	0316-0244	RES MF 1/8W 1% 34.8 OHM
R010	0316-0245	RES MF 1/8W 1% 45.9 OHM
W001	3015-0001	INSULATED JUMPER .200
W002	3015-0001	INSULATED JUMPER .200
W007	3015-0018	UN-INSULATED JUMPER .100
W008	3015-0018	UN-INSULATED JUMPER .100
W009	3015-0018	UN-INSULATED JUMPER .100
ZZ01	3010-0453	CABLE ASSY, TQA-3
ZZ02	5001-0545	TQA DIRECT OUTPUT LABEL
ZZ03	5001-0547	SERIAL COVER LABEL .8 X .8
ZZ04	5001-0605	LABEL, TQA-3 (ZOLL NTP)
ZZ05	5001-0606	TQA-3 SERIAL NO. SLIP
ZZ06	5027-0238	TQA-6 CASE MODIFICATION
ZZ07	5201-0333	TQA MODULE PCB - BASIC

## **IMPULSE 4000 ADAPTER (PACEMAKER PLUG-IN) MODULE TQA-6**

### ***for the MEDICAL DATA ELECTRONICS (MDE) MODEL E300***

### **General Information**

The adapter (pacemaker plug-in) module when connected to the Impulse 4000, tests the transcutaneous pacemaker using the manufacturer's suggested measurement technique for both the width and amplitude of the pacemaker pulse. The range of test load impedances and the electrode interface connection match the manufacturer's requirements. Pacemaker measurements can be easily completed during manual tests, automated sequences, and remote operation.

The Impulse 4000 without this option is limited to measurements across the standard internal 50  $\Omega$  test load.

NOTE: This module is compatible with the MDE Model E300 pacemaker only. The TQA-6 Adapter Module is equipped with the R2/Darox pacing connector, however, it is not electrically compatible with other R2/Darox electrode products designed for different brands and models of pacemakers.

### **Specifications**

Test Load Values:	600 and 1000 $\Omega$ , $\pm$ 1%. 4 Watts (maximum)	
Defibrillation Input Protection:	None - Pacemaker input only.	
Oscilloscope Output:	Module Output:	Direct voltage measurement across selected testload. Subminiature phone jack connector.
	Impulse 4000 Output:	One Volt (Peak) = 40 mA applied. BNC connector.
Impulse 4000 Firmware Level:	Ver 1.00 (minimum)	
Power:	No internal power supply; DC power supplied via Impulse 4000 module interface.	
Case:	Plastic	
Weight:	0.15 lb, 68 g.	
Dimensions:	4.3"L x 2.0"W x 0.9"H. 10.92cm L x 5.08cm W x 2.29cm H.	



## Measurement Technique Description

Waveform Description: The MDE Model E300 external transcutaneous pacemaker utilizes a truncated monophasic constant current pulse of approximately 20 milliseconds in duration.

Applied Pacemaker Polarity: Measurements are conducted regardless of polarity ( $\pm$ ).

Width Algorithm: Measurement is made at the 50% point between the zero reference and the peak of the applied pacemaker pulse.


Accuracy:  $\pm 0.5$  mS  
(Assumes Impulse 4000 specification)

Amplitude Algorithm: The amplitude measurement is made from the peak of the pulse trailing edge to the zero reference point. The peak measurement is computed as the average of 32 consecutive samples, preceding the pulse trailing edge, stored every 50 microseconds (1.6 milliseconds in total).

As specified by MDE, no portion of the pulse negative undershoot is utilized to compute this measurement.

Accuracy:  $\pm$  (1% of reading + 2.0 mA)  
(Assumes Impulse 4000 specification)

Pacemaker Pulse: Below is an example of what a typical MDE Model E300 pacemaker pulse looks like, as seen from the real-time output of the Impulse 4000.

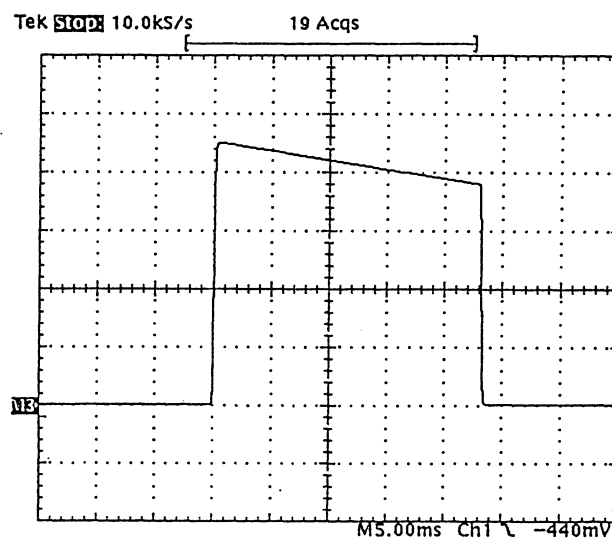

MDE Model E300 Pacemaker Pulse

## Installation

To begin using the adapter module:

- Turn off the Impulse 4000.
- Plug the adapter module into the “ADAPTER MODULE” receptacle on the left side of the Impulse 4000.
- Connect the adapter module cables to the pacemaker cables.

NOTE: Readings will be identical if the connections are accidentally reversed. If you want to reverse the polarity of the real-time output, reverse the connection.

## Operating Instructions

With the adapter module connected as stated above, follow the operating instructions in the *Conducting the Manual Pacer Test* section in Chapter 3 of the Impulse 4000 Operating and Service manual.

## Test and Calibration

There are no test and calibration procedures for the adapter modules.

## Theory of Operation

The adapter modules contain the loads used for pacemaker testing. The adapter module interfaces to the Impulse 4000 with a special connector that has 33 connections. Following is a brief description of the adapter module circuitry. Please refer to the schematics on the next two pages.

NOTE: *Not all modules contain all the circuitry described below.*


### ADAPTER MODULE SCHEMATIC, SHEET 1

There are from 1-4 loads and they are R1, R2, R3, and R4. Relays K1, K2, and K3 select the load. “No load” can also be selected for open circuit tests. The selected load is connected through R9 and R10 to ground. The voltage across R9 and R10 is proportional to the input current and is measured by the Impulse 4000.


### ADAPTER MODULE SCHEMATIC, SHEET 2

This circuit detects an input overload caused by a defibrillator pulse. U1 is a voltage comparator and its inputs are set at  $\pm 4.1$  V. The current sense signal from R9 and R10 is attenuated so that an overload is greater than or equal to  $\pm 4.1$  V and this trips one or the other comparator. C3 and C4 hold the comparator in the tripped state for about 0.7 seconds. The Impulse 4000 signals the user by turning on speaker LS1.

IMPULSE 4000 ADAPTER (PLUG-IN) MODULE COMPONENT LOCATOR

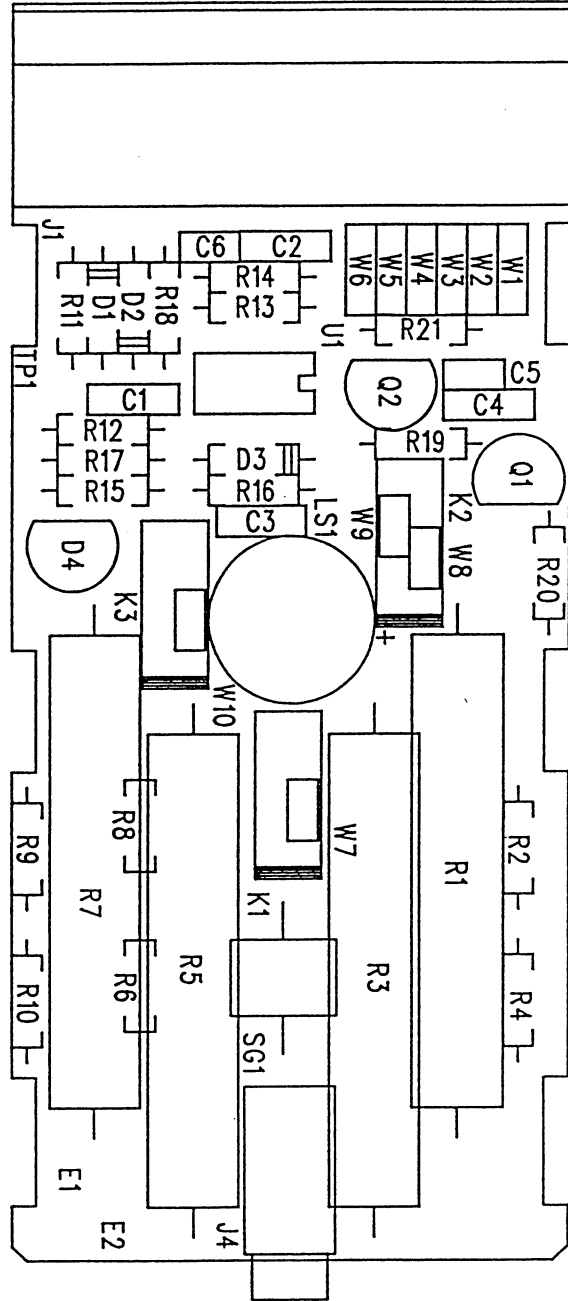

LT#	DESCRIPTION	DATE	REV BY
A	ECO 1377 PRODUCTION RELEASE	5/94	TW

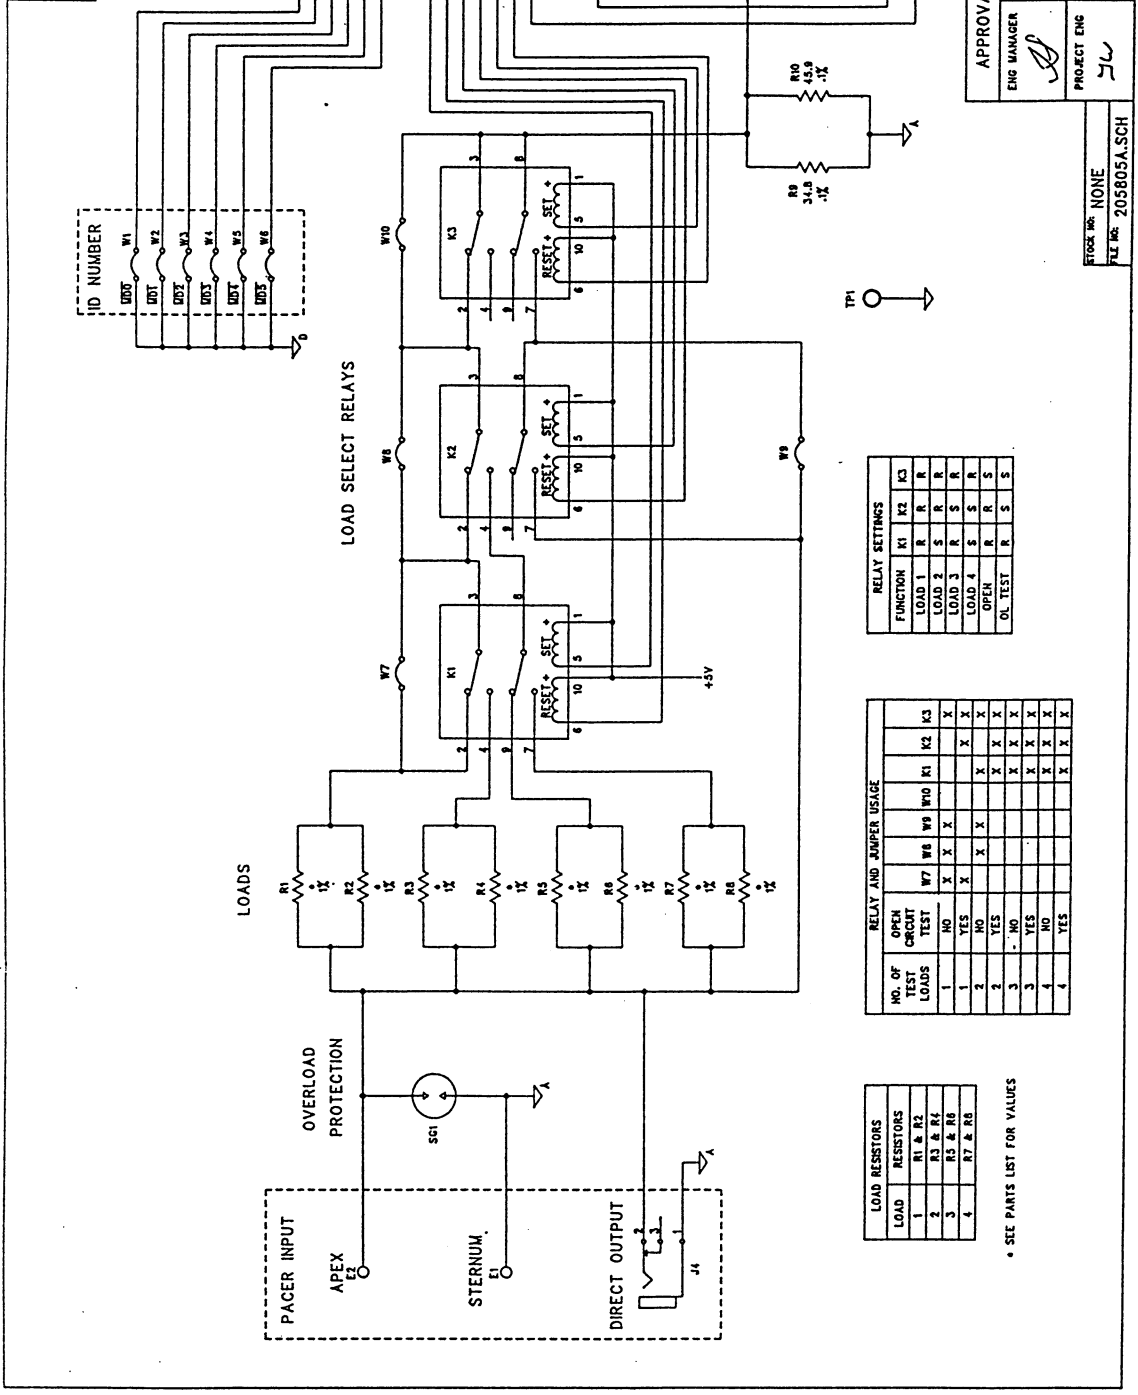

FUNCTION	K1	K2	K3
LOAD 1	R	R	R
LOAD 2	S	R	R
LOAD 3	R	S	R
LOAD 4	S	R	S
OPEN	R	R	S
OL TEST	R	R	S

NO. OF TEST LOADS	RELAY AND JUMPER USAGE							
	NO.	YES	NO.	YES	NO.	YES	NO.	YES
1								
2								
3								
4								

LOAD	RESISTORS
1	R1 & R2
2	R3 & R4
3	R5 & R6
4	R7 & R8


\* SEE PARTS LIST FOR VALUES

APPROVALS		DATE
ENG MANAGER	<i>[Signature]</i>	5/24/94
PROJECT ENG	<i>[Signature]</i>	5/24/94

STOCK NO:	NONE
FILE NO.:	205805A.SCH

TITLE	DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA
IMP 4000 ADAPTER MODULE	SCHEMATIC DIAGRAM
SIZE	B
PROJ. NO.	205805

SCALE:	NONE
SHEET	1 OF 2

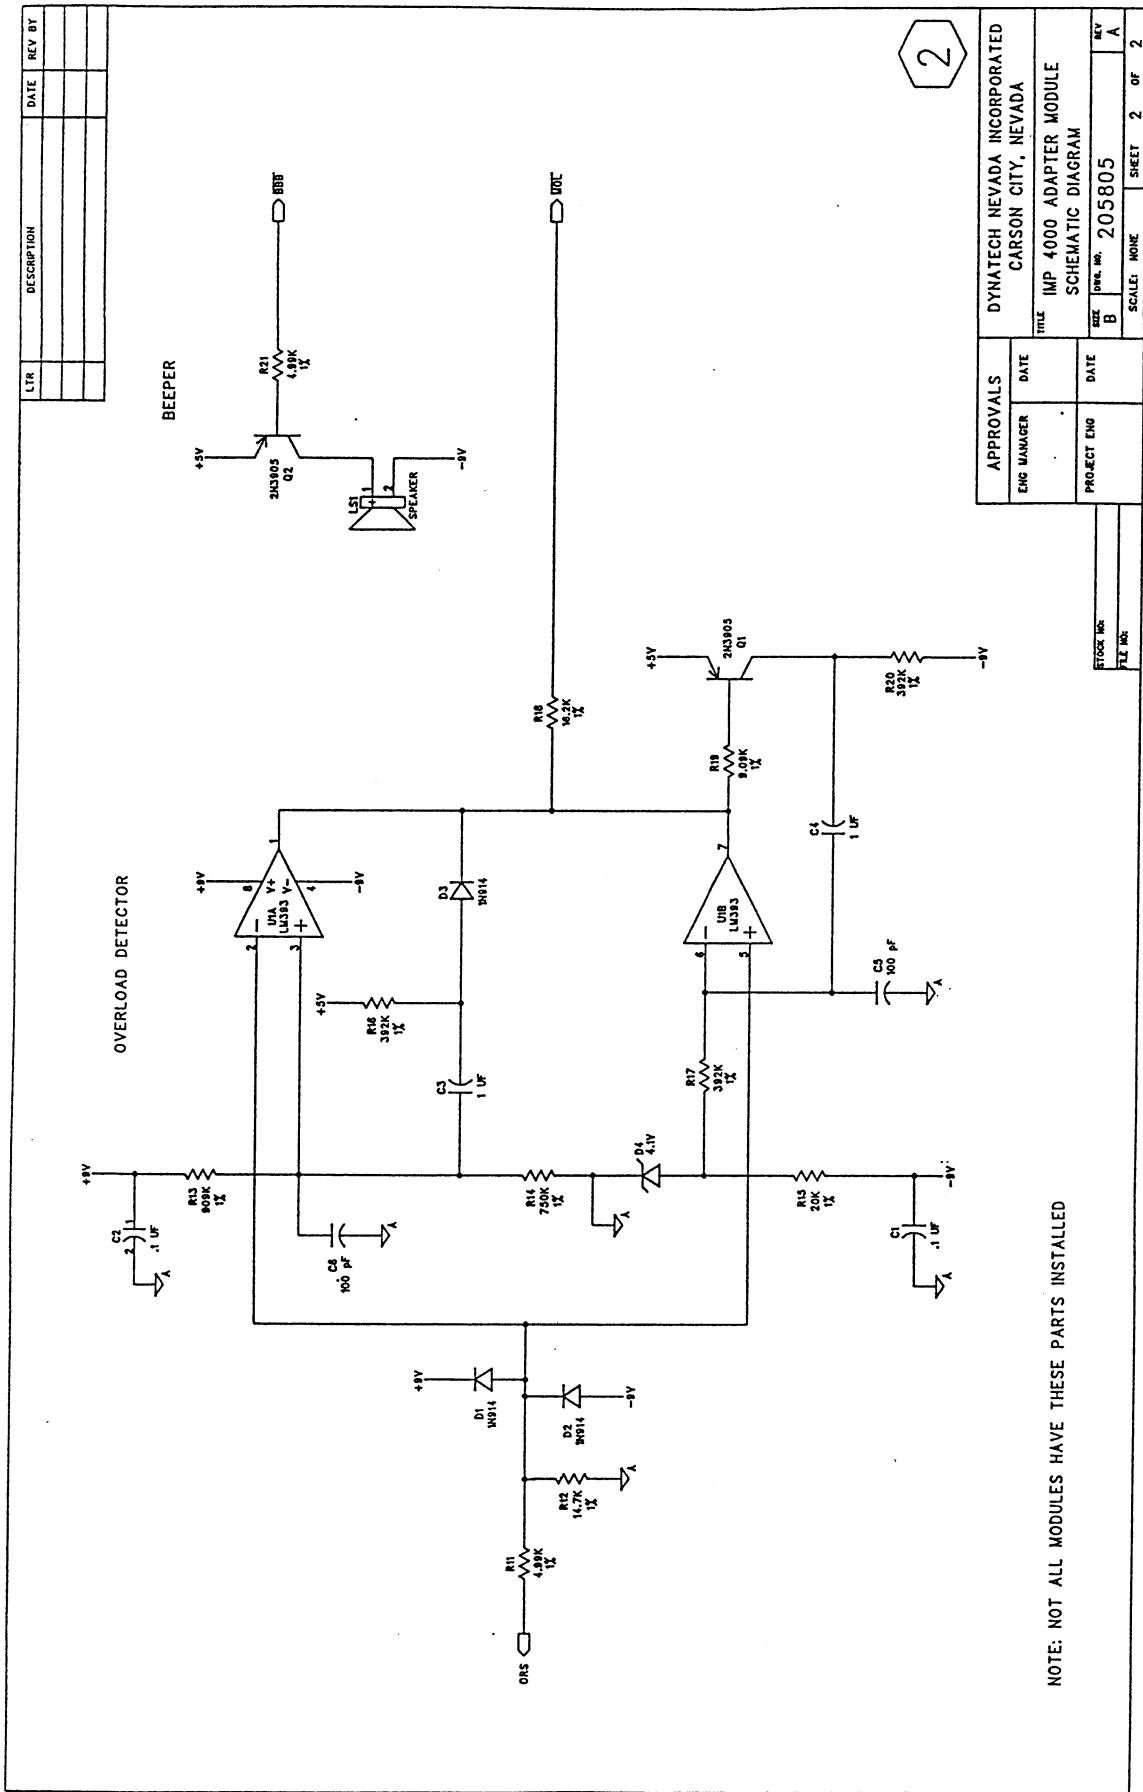

2

LTR	DESCRIPTION	DATE	REV BY

APPROVALS		DATE
ENG MANAGER		
PROJECT ENG		

DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
TITLE IMP 4000 ADAPTER MODULE SCHEMATIC DIAGRAM	
REV B	DRW. NO. 2058905
SCALE: NONE	SHEET 2 OF 2

NOTE: NOT ALL MODULES HAVE THESE PARTS INSTALLED

## Impulse 4000 Adapter Module TQA-6 Component List

REFERENCE	PART NUMBER	DESCRIPTION
J004	2719-0207	PHONE JACK MINI RT PC MT
K001	2562-0016	RELAY DUAL LATCHING MINI PC 5V
K002	2562-0016	RELAY DUAL LATCHING MINI PC 5V
K003	2562-0016	RELAY DUAL LATCHING MINI PC 5V
R001	0316-0250	RES MF 4W 1% 590 OHM
R002	0307-1534	RES MF 1/8W 1% 34.8K
R003	0316-0251	RES MF 4W 1% 1000 OHM
R004	0307-1684	RES MF 1/8W 1% 49.9K
R009	0316-0244	RES MF 1/8W 1% 34.8 OHM
R010	0316-0245	RES MF 1/8W 1% 45.9 OHM
TP01	2714-0002	TERM SWAGE 10-877-2
W002	3015-0001	INSULATED JUMPER .200
W003	3015-0001	INSULATED JUMPER .200
ZZ01	3010-0451	CABLE, R2 DAROX, MDE PACER
ZZ02	3012-0001	CABLE TIE NYLON
ZZ03	4904-0062	GROMMET RUBBER .281 ID .375MTG
ZZ04	5001-0545	TQA DIRECT OUTPUT LABEL
ZZ05	5001-0547	SERIAL COVER LABEL .8 X .8
ZZ06	5001-0554	TQA-6 (MDE 200) MODULE LABEL
ZZ07	5001-0555	TQA-6 SERIAL NO. SLIP
ZZ08	5027-0238	TQA-6 CASE MODIFICATION
ZZ09	5201-0333	TQA MODULE PCB - BASIC

## **IMPULSE 4000 ADAPTER (PACEMAKER PLUG-IN) MODULE TQA-7** *for the MARQUETTE MEDICAL MODEL 1500*

### **General Information**

The adapter (pacemaker plug-in) module when connected to the Impulse 4000, tests the transcutaneous pacemaker using the manufacturer's suggested measurement technique for both the width and amplitude of the pacemaker pulse. The specified test load impedance and the electrode interface connection match the manufacturer's requirements. Pacemaker measurements can be easily completed during manual tests, automated sequences, and remote operation.

The Impulse 4000 without this option is limited to measurements across the standard internal 50  $\Omega$  test load.

### **Specifications**

Test Load Value:	300 $\Omega$ , $\pm$ 1%. 4 Watts (maximum)	
Defibrillation Input Protection:	Yes	
Oscilloscope Output:	Module Output:	Direct voltage measurement across selected testload. Subminiature phone jack connector.
	Impulse 4000 Output:	One Volt (Peak) = 40 mA applied. BNC connector.
Impulse 4000 Firmware Level:	Ver 1.00 (minimum)	
Power:	No internal power supply; DC power supplied via Impulse 4000 module interface.	
Case:	Plastic	
Weight:	0.15 lb, 68 g.	
Dimensions:	4.3"L x 2.0"W x 0.9"H. 10.92cm L x 5.08cm W x 2.29cm H.	

## Measurement Technique Description

**Waveform Description:** The Marquette Medical Model 1500 external transcutaneous pacemaker utilizes a truncated exponential sawtooth constant current pulse of approximately 20 milliseconds in duration.

**Applied Pacemaker Polarity:** Measurements are conducted regardless of polarity ( $\pm$ ).

**Width Algorithm:** Measurement is made at the 50% point between the zero reference and the peak of the applied pacemaker pulse.


**Accuracy:**  $\pm 0.5$  mS  
(Assumes Impulse 4000 specification)

**Amplitude Algorithm:** The amplitude measurement is made from the peak of the pulse trailing edge to the zero reference point. The peak measurement is computed as the average of 64 consecutive samples preceding the pulse trailing edge stored every 50 microseconds (3.2 milliseconds in total).

The Marquette Model 1500 utilizes a truncated exponential sawtooth pacemaker waveform which requires this extended averaging method for computing the specified output amplitude.

**Accuracy:**  $\pm (1\% \text{ of reading} + 2.0 \text{ mA})$   
(Assumes Impulse 4000 specification)

**Pacemaker Pulse:** Below is an example of what a typical Marquette Model 1500 pacemaker pulse looks like, as seen from the real-time output of the Impulse 4000.

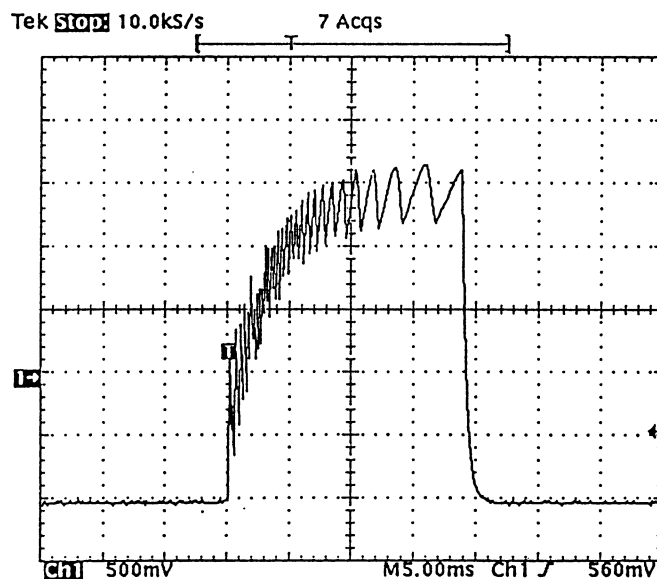

Marquette Medical Model 1500 Pacemaker Pulse



## Installation

To begin using the adapter module:

- Turn off the Impulse 4000.
- Plug the adapter module into the “ADAPTER MODULE” receptacle on the left side of the Impulse 4000.
- Connect the adapter module cables to the pacemaker cables.

NOTE: Readings will be identical if the connections are accidentally reversed. If you want to reverse the polarity of the real-time output, reverse the connection.

## Operating Instructions

With the adapter module connected as stated above, follow the operating instructions in the *Conducting the Manual Pacer Test* section in Chapter 3 of the Impulse 4000 Operating and Service manual.

## Test and Calibration

There are no test and calibration procedures for the adapter modules.

## Theory of Operation

The adapter modules contain the loads used for pacemaker testing. The adapter module interfaces to the Impulse 4000 with a special connector that has 33 connections. Following is a brief description of the adapter module circuitry. Please refer to the schematics on the next two pages.

NOTE: *Not all modules contain all the circuitry described below.*


### ADAPTER MODULE SCHEMATIC, SHEET 1

There are from 1-4 loads and they are R1, R2, R3, and R4. Relays K1, K2, and K3 select the load. “No load” can also be selected for open circuit tests. The selected load is connected through R9 and R10 to ground. The voltage across R9 and R10 is proportional to the input current and is measured by the Impulse 4000.


### ADAPTER MODULE SCHEMATIC, SHEET 2

This circuit detects an input overload caused by a defibrillator pulse. U1 is a voltage comparator and its inputs are set at  $\pm 4.1$  V. The current sense signal from R9 and R10 is attenuated so that an overload is greater than or equal to  $\pm 4.1$  V and this trips one or the other comparator. C3 and C4 hold the comparator in the tripped state for about 0.7 seconds. The Impulse 4000 signals the user by turning on speaker LS1.

**IMPULSE 4000 ADAPTER (PLUG-IN) MODULE COMPONENT LOCATOR**

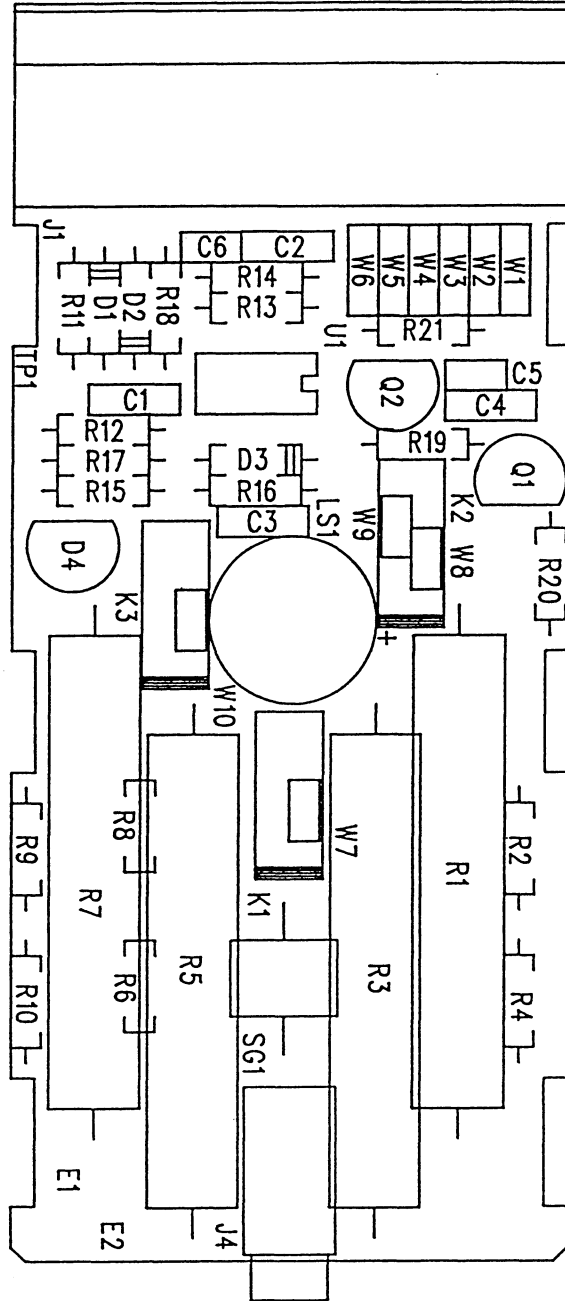

LTR	DESCRIPTION	DATE	REV BY
A	ECO 1377 PRODUCTION RELEASE	5/94	TW

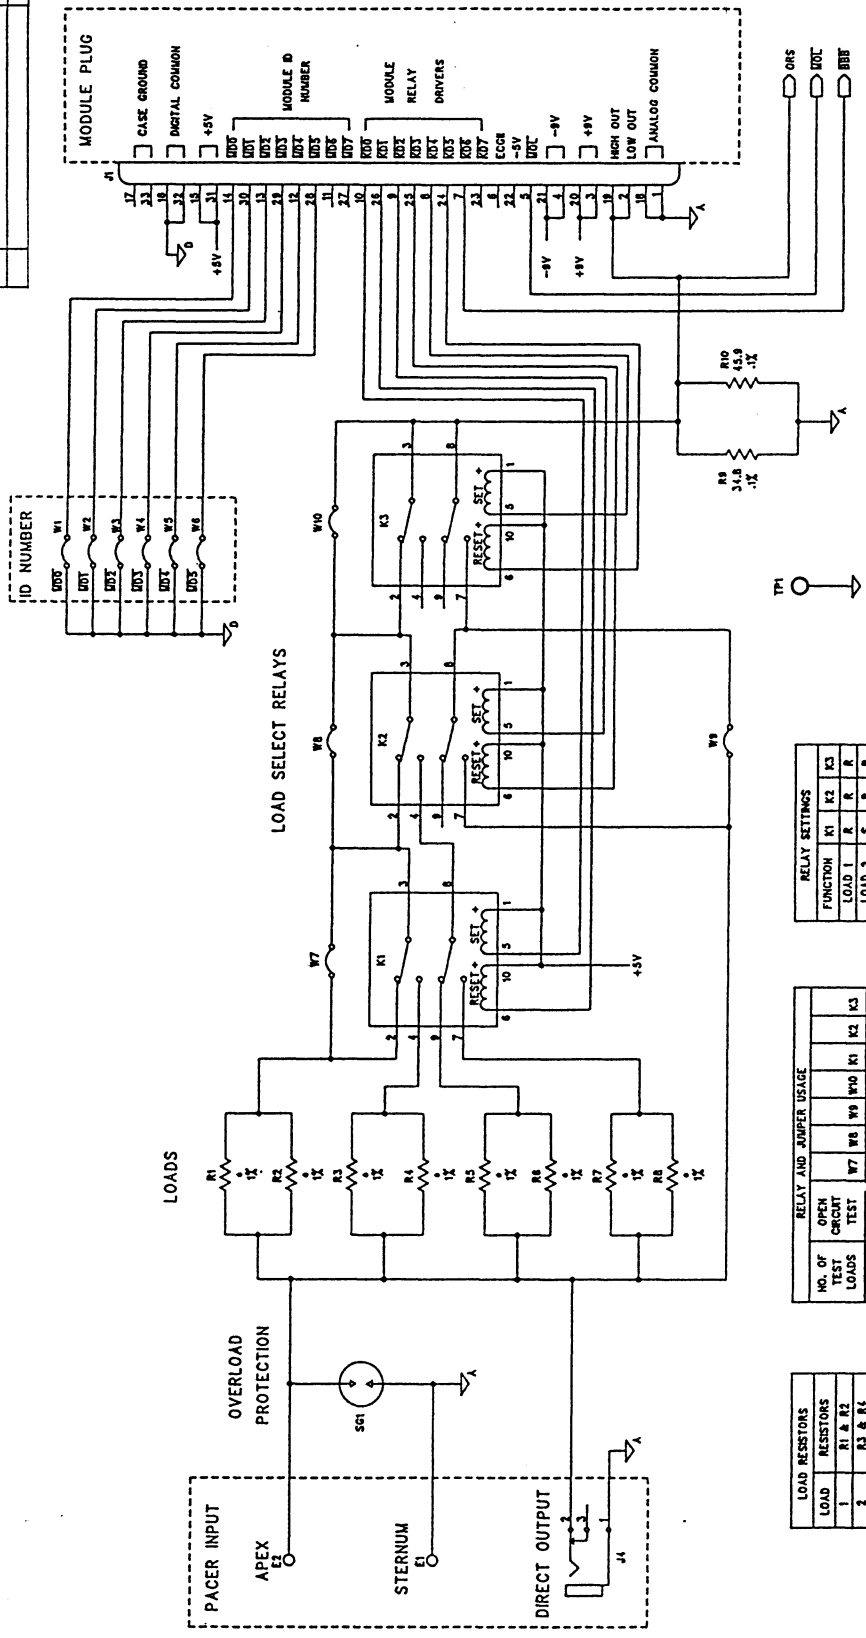

LOAD RESISTORS

LOAD	RESISTORS
1	R1 & R2
2	R3 & R4
3	R5 & R6
4	R7 & R8

\* SEE PARTS LIST FOR VALUES

RELAY AND JUMPER USAGE

NO. OF TEST LOADS	OPEN CIRCUIT TEST	W7	W8	W9	W10	K1	K2	K3
1	NO	X	X	X		X	X	X
2	NO	X	X	X		X	X	X
3	NO					X	X	X
4	NO					X	X	X
4	YES							

RELAY SETTINGS

FUNCTION	K1	K2	K3
LOAD 1	R	R	R
LOAD 2	S	S	S
LOAD 3	R	S	R
LOAD 4	S	R	S
OPEN	R	R	R
OL TEST	R	S	S

DYNATECH NEVADA INCORPORATED  
CARSON CITY, NEVADA

TITLE: IMP 4000 ADAPTER MODULE  
SCHEMATIC DIAGRAM

USE: DRAWING NO. 205805  
SCALE: NONE

APPROVALS


DATE: 5/24/94

DATE: 5/24/94

PROJECT ENG: JLV

FOR USE: NONE  
FOR USE: 205805A.SCH

LTR	DESCRIPTION	DATE	REV BY

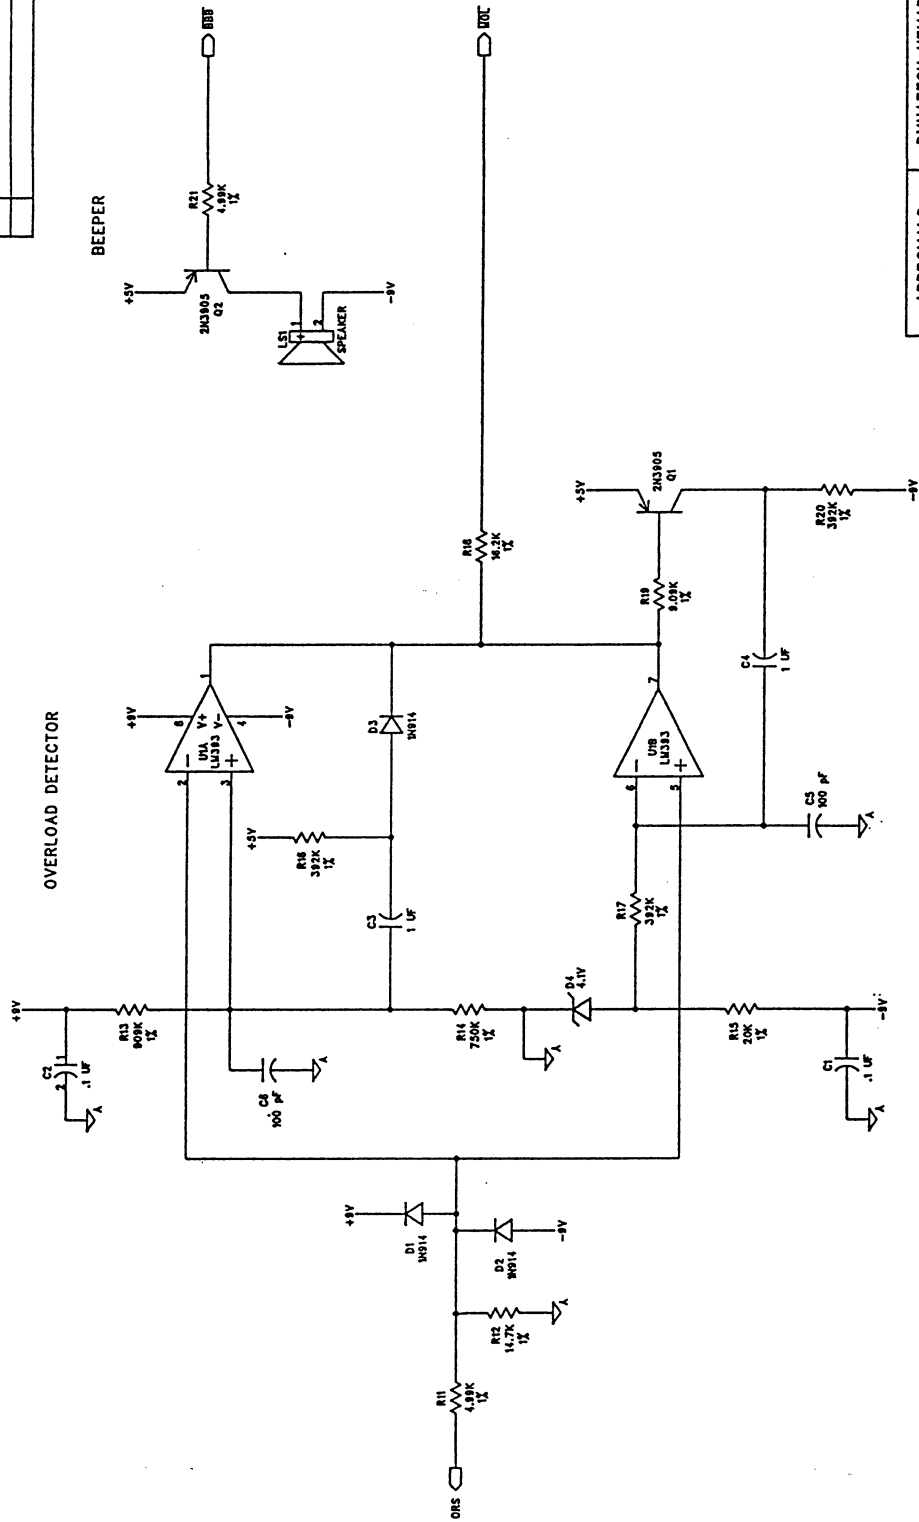

2

APPROVALS		DATE	
ENG MANAGER			
PROJECT ENG			

TITLE		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
PROJECT NO.		IMP 4000 ADAPTER MODULE	
REV		SCHEMATIC DIAGRAM	
REV	DATE	REV	DATE
B		A	
SCALE: NONE		SHEET 2 OF 2	

NOTE: NOT ALL MODULES HAVE THESE PARTS INSTALLED

## Impulse 4000 Adapter Module TQA-7 Component List

REFERENCE	PART NUMBER	DESCRIPTION
C001	0418-0008	CAP CERA 0.1MF 50V
C002	0418-0008	CAP CERA 0.1MF 50V
C003	0418-0009	CAP 1MF 50V CERAMIC
C004	0418-0009	CAP 1MF 50V CERAMIC
C005	0418-0076	100PF 50V CERA
C006	0418-0076	100PF 50V CERA
D001	2101-0010	DIODE 1N914/1N4148
D002	2101-0010	DIODE 1N914/1N4148
D003	2101-0010	DIODE 1N914/1N4148
D004	2102-0045	DIODE ZEN LM4040DIZ-4.1 4.1V
J004	2719-0207	PHONE JACK MINI RT PC MT
K003	2562-0016	RELAY DUAL LATCHING MINI PC 5V
LS01	0801-0009	BEEPER 3-16 VDC PC MT
Q001	2112-0007	TRANS PNP 2N3905
Q002	2112-0007	TRANS PNP 2N3905
R001	0316-0247	RES MF 4W 1% 287 OHM
R002	0307-1084	RES MF 1/8W 1% 11.8K
R009	0316-0244	RES MF 1/8W 1% 34.8 OHM
R010	0316-0245	RES MF 1/8W 1% 45.9 OHM
R011	0307-1683	RES MF 1/8W 1% 4.99K
R012	0307-1174	RES MF 1/8W 1% 14.7K
R013	0307-1935	RES MF 1/8W 1% 909K
R014	0307-1855	RES MF 1/8W 1% 750K
R015	0307-1304	RES MF 1/8W 1% 20K
R016	0307-1585	RES MF 1/8W 1% 392K
R017	0307-1585	RES MF 1/8W 1% 392K
R018	0307-1214	RES MF 1/8W 1% 16.2K
R019	0307-1933	RES MF 1/8W 1% 9.09K
R020	0307-1585	RES MF 1/8W 1% 392K
R021	0307-1683	RES MF 1/8W 1% 4.99K
SG01	1010-0001	SURGE ARRESTER, AC240L
TP01	2714-0002	TERM SWAGE 10-877-2
U001	2118-0045	IC DUAL COMPARATOR LM393N
W001	3015-0001	INSULATED JUMPER .200
W002	3015-0001	INSULATED JUMPER .200
W003	3015-0001	INSULATED JUMPER .200
W007	3015-0018	UN-INSULATED JUMPER .100
W008	3015-0018	UN-INSULATED JUMPER .100
W009	3015-0018	UN-INSULATED JUMPER .100

**Impulse 4000 Adapter Module TQA-7 Component List**

REFERENCE	PART NUMBER	DESCRIPTION
ZZ01	3010-0460	CABLE ASSY, TQA-7 MODULE
ZZ02	5001-0545	TQA DIRECT OUTPUT LABEL
ZZ03	5001-0547	SERIAL COVER LABEL .8 X .8
ZZ04	5001-0590	TQA-7 (MARQ 1500) LABEL
ZZ05	5001-0591	TQA-7 SERIAL NO. SLIP
ZZ06	5027-0239	TQA-11 CASE MODIFICATION
ZZ07	5201-0333	TQA MODULE PCB - BASIC

## **IMPULSE 4000 ADAPTER (PACEMAKER PLUG-IN) MODULE TQA-9** *for the PHYSIO-CONTROL LIFEPAK SERIES*

### **General Information**

The adapter (pacemaker plug-in) module when connected to the Impulse 4000, tests the transcutaneous pacemaker using the manufacturer's suggested measurement technique for both the width and amplitude of the pacemaker pulse. The range of test load impedances and the electrode interface connection match the manufacturer's requirements. Pacemaker measurements can be easily completed during manual tests, automated sequences, and remote operation.

The Impulse 4000 without this option is limited to measurements across the standard internal 50  $\Omega$  test load.

### **Specifications**

Test Load Values:	100, 700, 1000, and 1500 $\Omega$ , $\pm$ 1%. 4 Watts (maximum)
Defibrillation Input Protection:	None - Fast-Patch pacemaker input only.
Oscilloscope Output:	Module Output: Direct voltage measurement across selected testload. Subminiature phone jack connector.
	Impulse 4000 Output: One Volt (Peak) = 40 mA applied. BNC connector.
Impulse 4000 Firmware Level:	Ver 1.00 (minimum)
Power:	No internal power supply; DC power supplied via Impulse 4000 module interface.
Case:	Plastic
Weight:	0.15 lb, 68 g.
Dimensions:	4.3"L x 2.0"W x 0.9"H. 10.92cm L x 5.08cm W x 2.29cm H.

## Measurement Technique Description

**Waveform Description:** The Physio-Control LIFEPAK series of external transcutaneous pacemakers utilize a truncated monophasic current pulse of approximately 20 milliseconds in duration.

**Applied Pacemaker Polarity:** Measurements are conducted regardless of polarity ( $\pm$ ).


**Width Algorithm:** Measurement is made at the 50% point between the zero reference and the peak of the applied pacemaker pulse.

**Accuracy:**  $\pm 0.5$  mS  
(Assumes Impulse 4000 specification)

**Amplitude Algorithm:** The amplitude measurement is triggered from the peak of the leading edge of the applied pacemaker pulse and will be computed as the average of 32 consecutive samples stored every 50 microseconds (1.6 milliseconds in total).

**Accuracy:**  $\pm$  (1% of reading + 2.0 mA)  
(Assumes Impulse 4000 specification)

**Pacemaker Pulse:** Below is an example of what a typical Physio-Control LIFEPAK 8 pacemaker pulse looks like, as seen from the real-time output of the Impulse 4000.

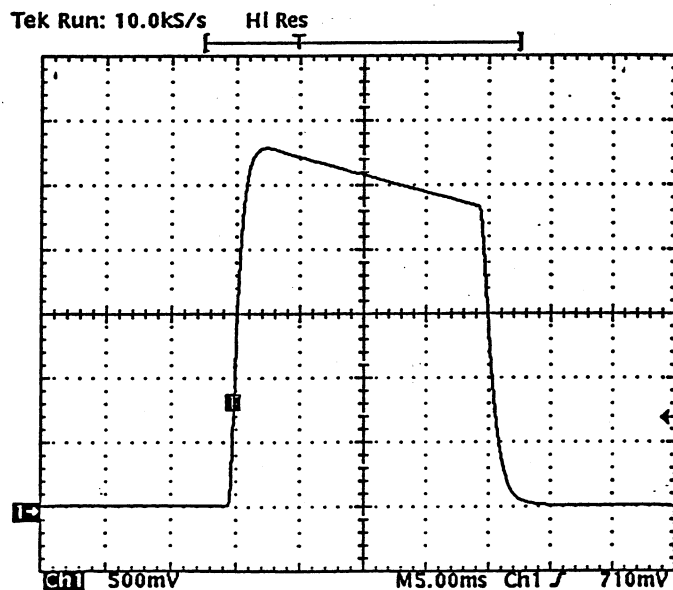

*Physio-Control LIFEPAK 8 Pacemaker Pulse*



## Installation

To begin using the adapter module:

- Turn off the Impulse 4000.
- Plug the adapter module into the "ADAPTER MODULE" receptacle on the left side of the Impulse 4000.
- Connect the adapter module cables to the pacemaker cables.

NOTE: Readings will be identical if the connections are accidentally reversed. If you want to reverse the polarity of the real-time output, reverse the connection.

## Operating Instructions

With the adapter module connected as stated above, follow the operating instructions in the *Conducting the Manual Pacer Test* section in Chapter 3 of the Impulse 4000 Operating and Service manual.

## Test and Calibration

There are no test and calibration procedures for the adapter modules.

## Theory of Operation

The adapter modules contain the loads used for pacemaker testing. The adapter module interfaces to the Impulse 4000 with a special connector that has 33 connections. Following is a brief description of the adapter module circuitry. Please refer to the schematics on the next two pages.

NOTE: Not all modules contain all the circuitry described below.


### ADAPTER MODULE SCHEMATIC, SHEET 1


There are from 1-4 loads and they are R1, R2, R3, and R4. Relays K1, K2, and K3 select the load. "No load" can also be selected for open circuit tests. The selected load is connected through R9 and R10 to ground. The voltage across R9 and R10 is proportional to the input current and is measured by the Impulse 4000.

### ADAPTER MODULE SCHEMATIC, SHEET 2

This circuit detects an input overload caused by a defibrillator pulse. U1 is a voltage comparator and its inputs are set at  $\pm 4.1$  V. The current sense signal from R9 and R10 is attenuated so that an overload is greater than or equal to  $\pm 4.1$  V and this trips one or the other comparator. C3 and C4 hold the comparator in the tripped state for about 0.7 seconds. The Impulse 4000 signals the user by turning on speaker LS1.

# IMPULSE 4000 ADAPTER (PLUG-IN) MODULE COMPONENT LOCATOR

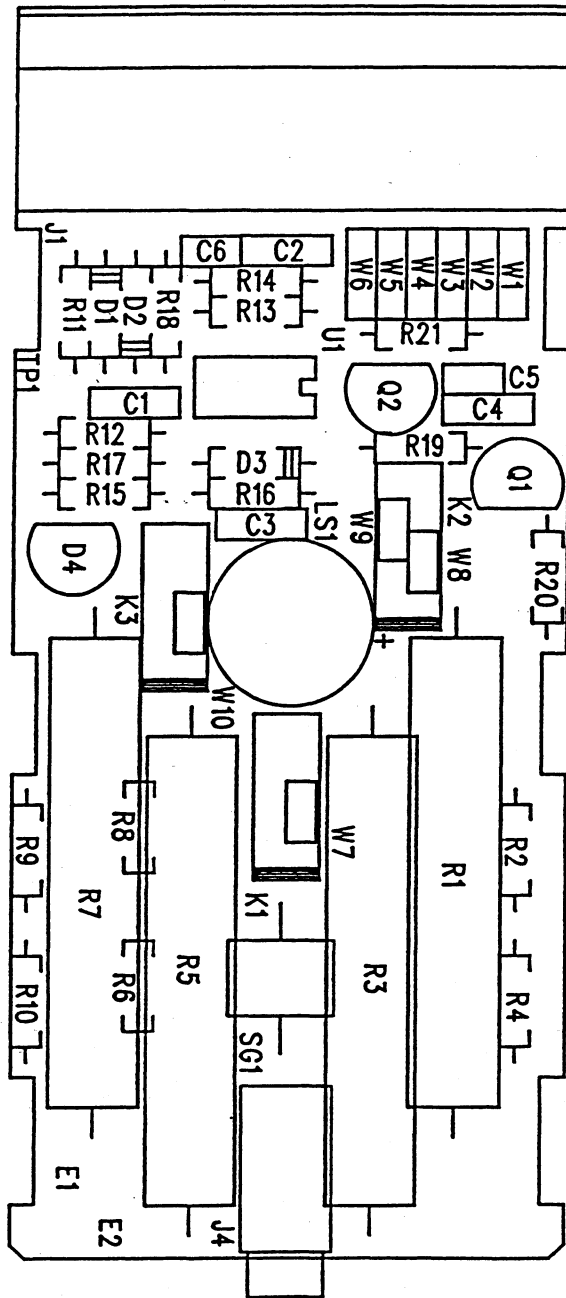

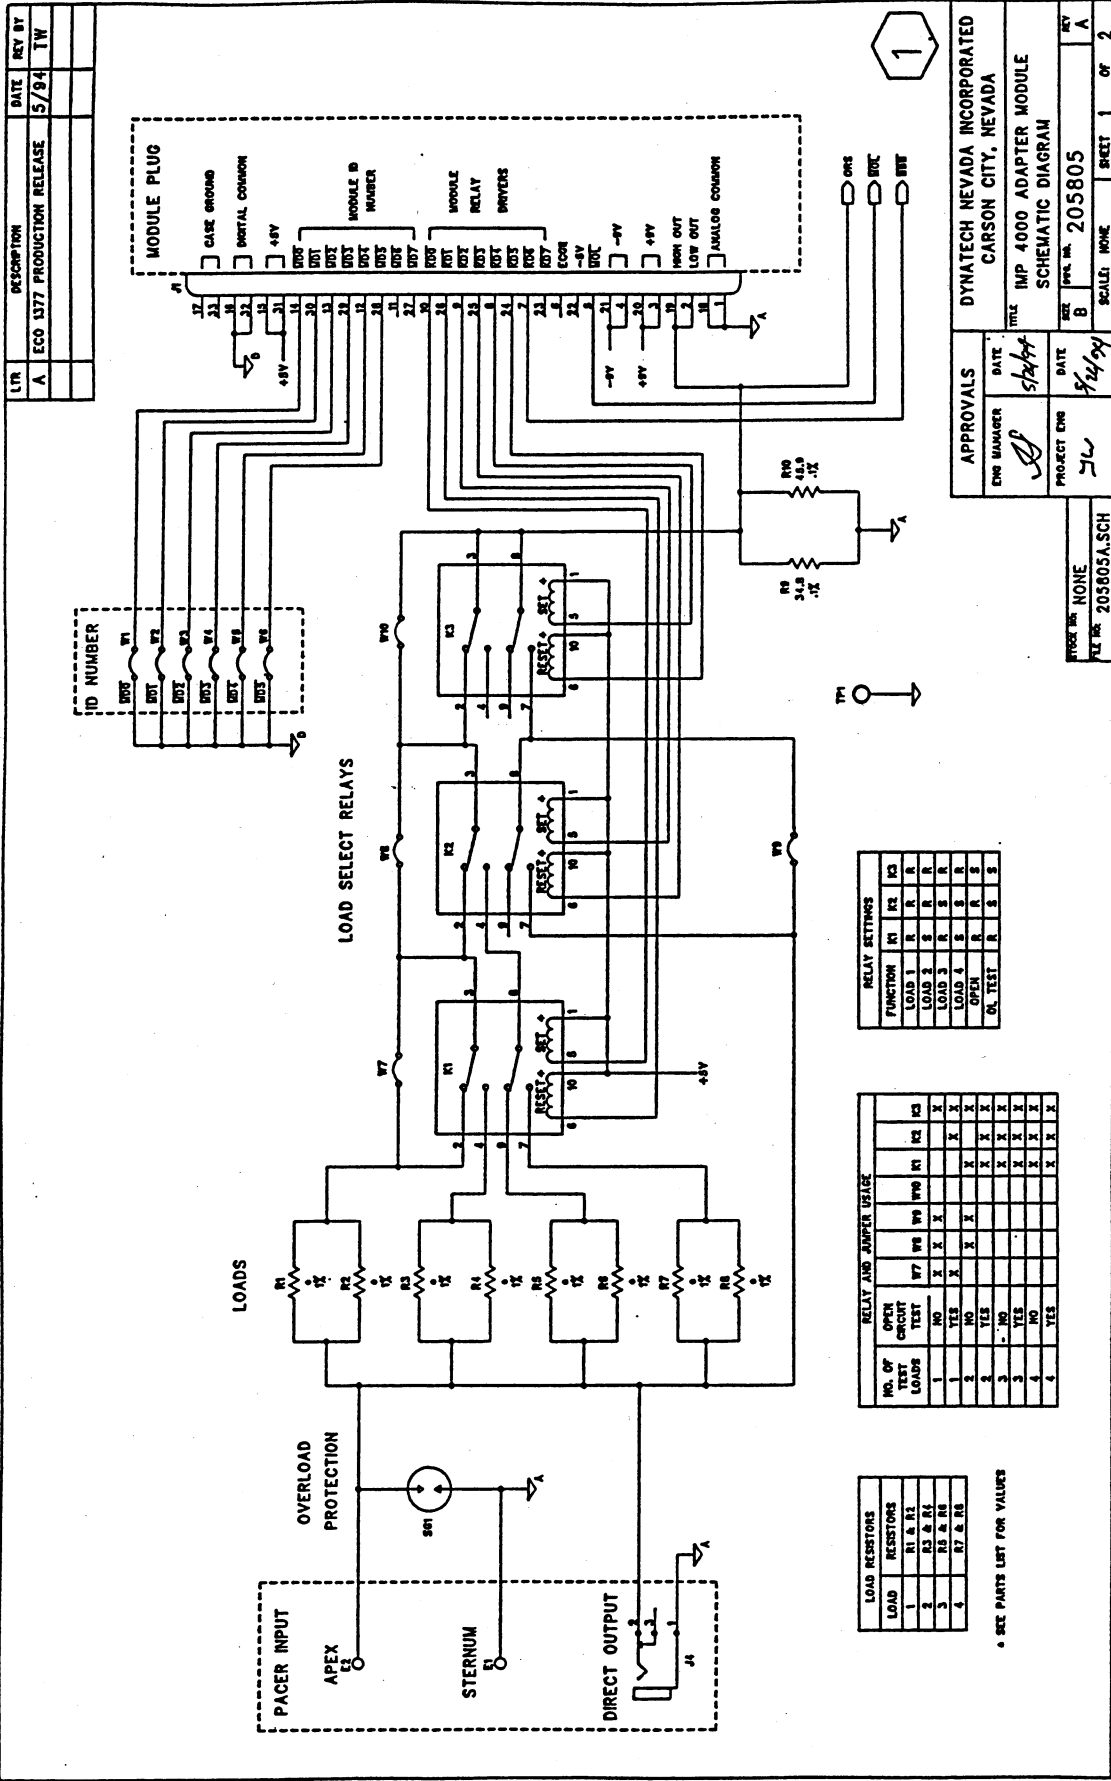

LTR	DESCRIPTION	DATE	REV BY
A	ECO 1377 PRODUCTION RELEASE	5/94	TW

APPROVALS		DATE	REV
ENG MANAGER	DATE	5/94	A
PROJECT ENG	DATE	5/94	A
DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA		FILE	REV
IMP 4000 ADAPTER MODULE		205805	B
SCHEMATIC DIAGRAM		SCALE: NONE	SHEET 1 OF 2


FUNCTION	K1	K2	K3	K4
LOAD 1	R	R	R	R
LOAD 2	S	R	R	R
LOAD 3	R	S	R	R
LOAD 4	S	R	S	R
OPEN	R	R	R	S
OL TEST	R	R	S	S

NO. OF TEST LOADS	RELAY AND ADAPTER USAGE			
	OPEN CIRCUIT TEST	K1	K2	K3
1	YES	X	X	X
2	YES	X	X	X
3	NO	X	X	X
4	NO	X	X	X

LOAD	RESISTORS
1	R1 & R2
2	R3 & R4
3	R5 & R6
4	R7 & R8

\* SEE PARTS LIST FOR VALUES

LTR	DESCRIPTION	DATE	REV BY

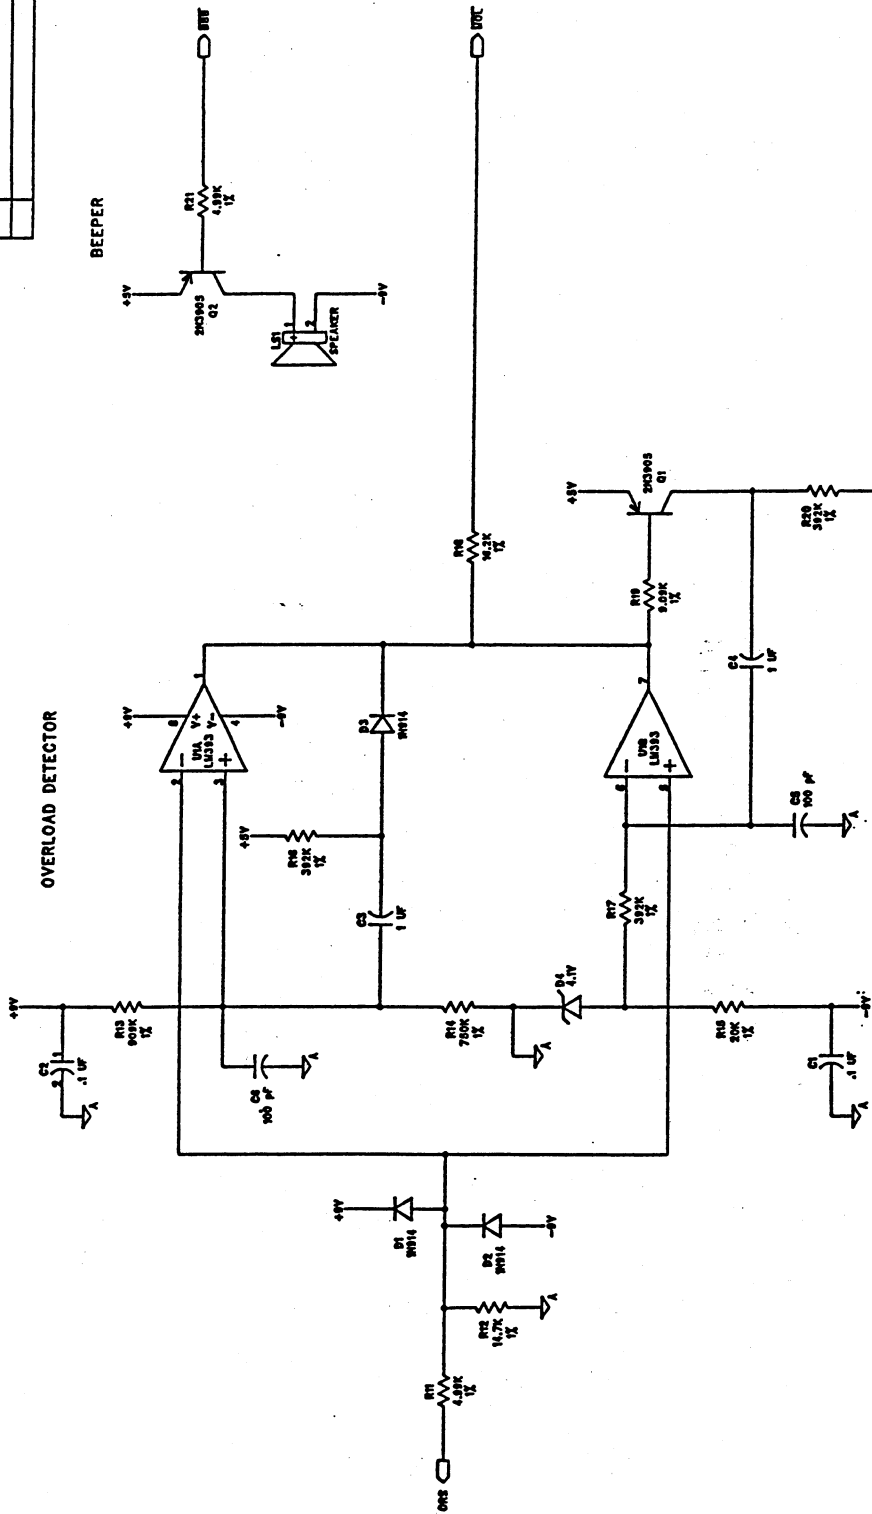

2

APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
ENG MANAGER	DATE	TITLE	IMP 4000 ADAPTER MODULE SCHEMATIC DIAGRAM
PROJECT ENG	DATE	REV	B
		REV	A
		SCALE	NONE
		SHEET	2 OF 2

NOTE: NOT ALL MODULES HAVE THESE PARTS INSTALLED

## Impulse 4000 Adapter Module TQA-9 Component List

REFERENCE	PART NUMBER	DESCRIPTION
J004	2719-0207	PHONE JACK MINI RT PC MT
K001	2562-0016	RELAY DUAL LATCHING MINI PC 5V
K002	2562-0016	RELAY DUAL LATCHING MINI PC 5V
K003	2562-0016	RELAY DUAL LATCHING MINI PC 5V
R001	0316-0246	RES MF 4W 1% 80.6 OHM
R002	0307-1214	RES MF 1/8W 1% 16.2K
R003	0316-0254	RES MF 4W 1% 681 OHM
R005	0316-0251	RES MF 4W 1% 1000 OHM
R006	0307-1684	RES MF 1/8W 1% 49.9K
R007	0316-0252	RES MF 4W 1% 1500 OHM
R008	0307-1065	RES MF 1/8W 1% 113K
R009	0316-0244	RES MF 1/8W 1% 34.8 OHM
R010	0316-0245	RES MF 1/8W 1% 45.9 OHM
TP01	2714-0002	TERM SWAGE 10-877-2
W001	3015-0001	INSULATED JUMPER .200
W004	3015-0001	INSULATED JUMPER .200
ZZ01	3010-0461	CABLE ASSY, TQA-9 MODULE
ZZ02	5001-0544	TQA-9 (PHYSIO CONTROL) LABEL
ZZ03	5001-0545	TQA DIRECT OUTPUT LABEL
ZZ04	5001-0547	SERIAL COVER LABEL .8 X .8
ZZ05	5001-0548	TQA-9 SERIAL NO. SLIP
ZZ06	5027-0239	TQA-9 CASE MODIFICATION
ZZ07	5201-0333	TQA MODULE PCB - BASIC

**IMPULSE 4000 ADAPTER (PACEMAKER PLUG-IN) MODULE TQA-9**  
*for the PHYSIO-CONTROL LIFEPAK SERIES*

**General Information**

The adapter (pacemaker plug-in) module when connected to the Impulse 4000, tests the transcutaneous pacemaker using the manufacturer's suggested measurement technique for both the width and amplitude of the pacemaker pulse. The range of test load impedances and the electrode interface connection match the manufacturer's requirements. Pacemaker measurements can be easily completed during manual tests, automated sequences, and remote operation.

The Impulse 4000 without this option is limited to measurements across the standard internal 50  $\Omega$  test load.

**Specifications**

Test Load Values:	100, 700, 1000, and 1500 $\Omega$ , $\pm$ 1%. 4 Watts (maximum)	
Defibrillation Input Protection:	None - Fast-Patch pacemaker input only.	
Oscilloscope Output:	Module Output:	Direct voltage measurement across selected testload. Subminiature phone jack connector.
	Impulse 4000 Output:	One Volt (Peak) = 40 mA applied. BNC connector.
Impulse 4000 Firmware Level:	Ver 1.00 (minimum)	
Power:	No internal power supply; DC power supplied via Impulse 4000 module interface.	
Case:	Plastic	
Weight:	0.15 lb, 68 g.	
Dimensions:	4.3"L x 2.0"W x 0.9"H. 10.92cm L x 5.08cm W x 2.29cm H.	

## Installation

To begin using the adapter module:

- Turn off the Impulse 4000.
- Plug the adapter module into the "ADAPTER MODULE" receptacle on the left side of the Impulse 4000.
- Connect the adapter module cables to the pacemaker cables.

NOTE: Readings will be identical if the connections are accidentally reversed. If you want to reverse the polarity of the real-time output, reverse the connection.

## Operating Instructions

With the adapter module connected as stated above, follow the operating instructions in the *Conducting the Manual Pacer Test* section in Chapter 3 of the Impulse 4000 Operating and Service manual.

## Test and Calibration

There are no test and calibration procedures for the adapter modules.

## Theory of Operation

The adapter modules contain the loads used for pacemaker testing. The adapter module interfaces to the Impulse 4000 with a special connector that has 33 connections. Following is a brief description of the adapter module circuitry. Please refer to the schematics on the next two pages.


NOTE: *Not all modules contain all the circuitry described below.*

### ADAPTER MODULE SCHEMATIC, SHEET 1

There are from 1-4 loads and they are R1, R2, R3, and R4. Relays K1, K2, and K3 select the load. "No load" can also be selected for open circuit tests. The selected load is connected through R9 and R10 to ground. The voltage across R9 and R10 is proportional to the input current and is measured by the Impulse 4000.

### ADAPTER MODULE SCHEMATIC, SHEET 2

This circuit detects an input overload caused by a defibrillator pulse. U1 is a voltage comparator and its inputs are set at  $\pm 4.1$  V. The current sense signal from R9 and R10 is attenuated so that an overload is greater than or equal to  $\pm 4.1$  V and this trips one or the other comparator. C3 and C4 hold the comparator in the tripped state for about 0.7 seconds. The Impulse 4000 signals the user by turning on speaker LS1.

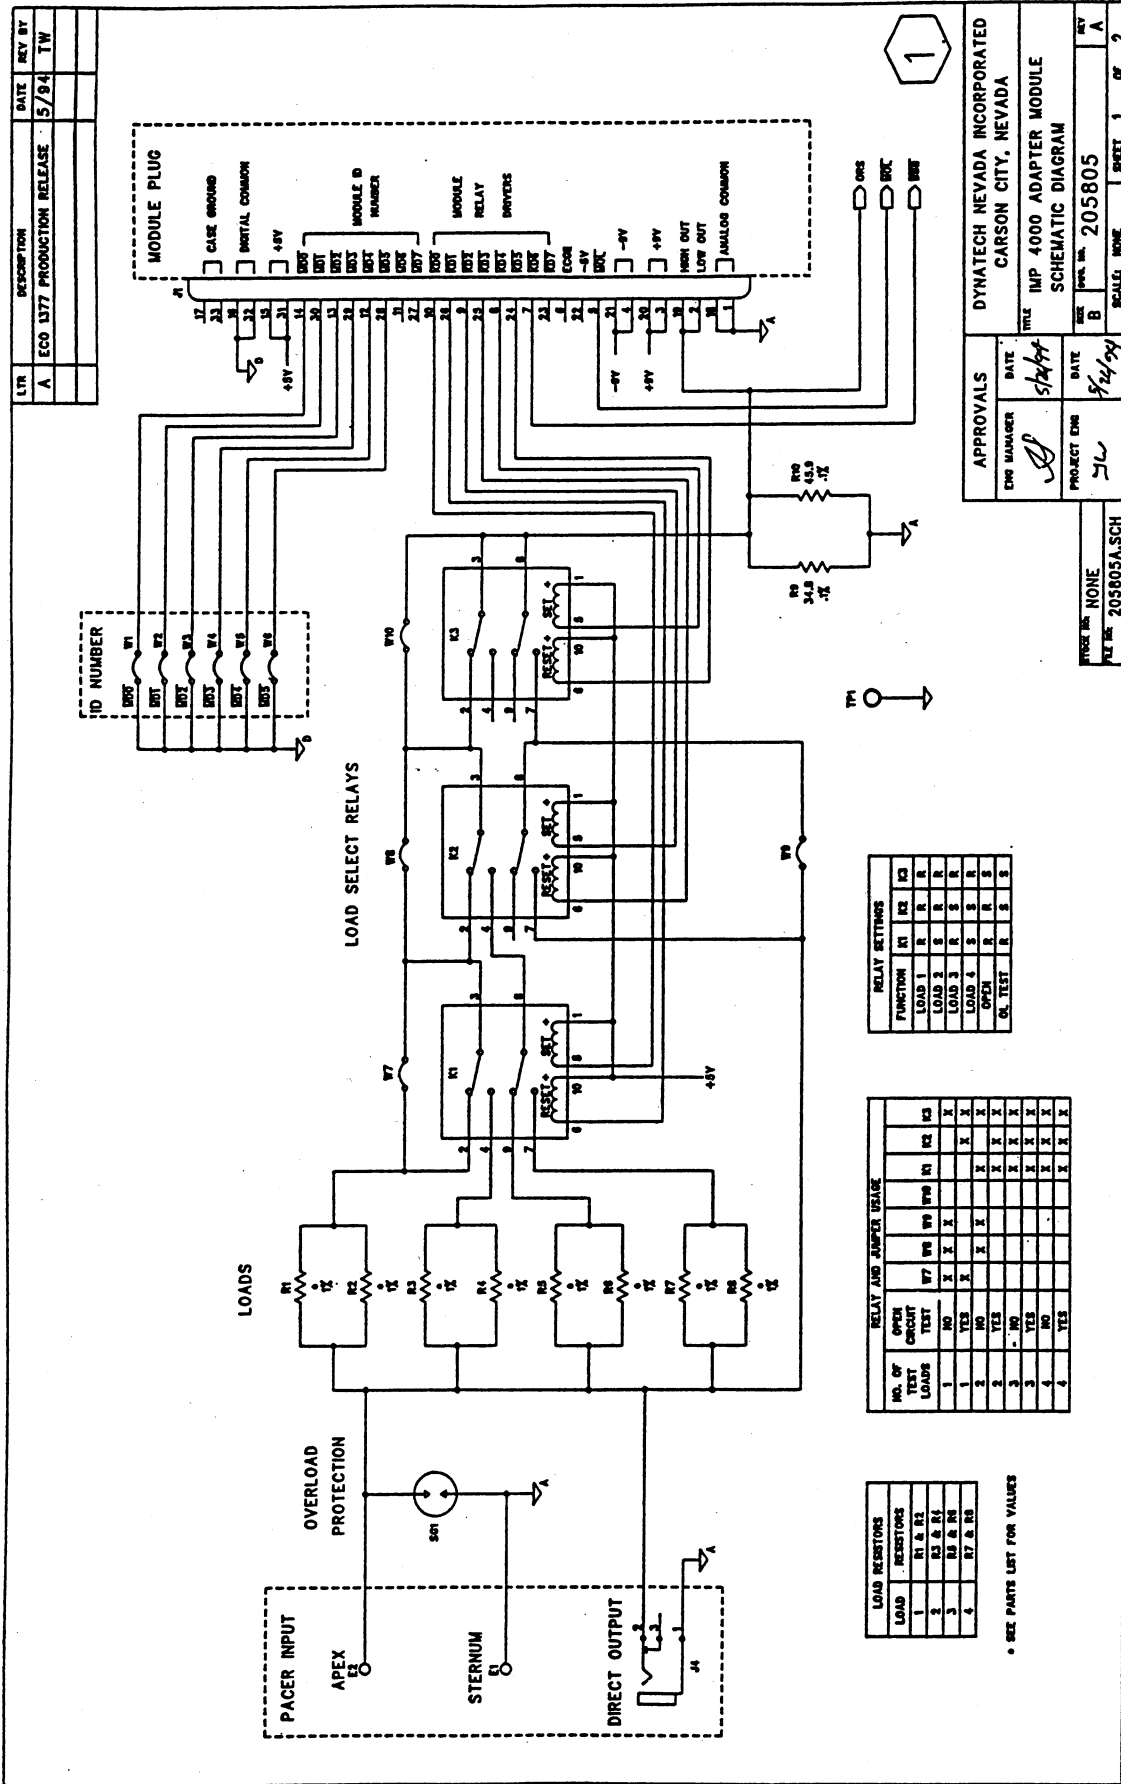

LTR	DESCRIPTION	DATE	REV BY
A	ECO 1377 PRODUCTION RELEASE	5/84	TW

APPROVALS		DATE
ENG MANAGER	<i>[Signature]</i>	5/84
PROJECT ENG	<i>[Signature]</i>	5/84

PROJECT NO.	NONE
FILE NO.	205605A.SCH

RELAY SETTINGS			
FUNCTION	K1	K2	K3
LOAD 1	R	R	R
LOAD 2	S	R	R
LOAD 3	R	S	R
LOAD 4	S	R	S
OPEN	R	R	S
CL. TEST	R	S	S

NO. OF LOADS	RELAY AND AMPERE USAGE							
	OPEN	K1	K2	K3	K4	R1	R2	R3
1	NO	X	X	X	X	X	X	X
2	YES	X	X	X	X	X	X	X
3	NO	X	X	X	X	X	X	X
4	NO	X	X	X	X	X	X	X

LOAD	RESISTORS
1	R1 & R2
2	R3 & R4
3	R5 & R6
4	R7 & R8

• SEE PARTS LIST FOR VALUES



### Impulse 4000 Adapter Module TQA-9 Component List

REFERENCE	PART NUMBER	DESCRIPTION
J004	2719-0207	PHONE JACK MINI RT PC MT
K001	2562-0016	RELAY DUAL LATCHING MINI PC 5V
K002	2562-0016	RELAY DUAL LATCHING MINI PC 5V
K003	2562-0016	RELAY DUAL LATCHING MINI PC 5V
R001	0316-0246	RES MF 4W 1% 80.6 OHM
R002	0307-1214	RES MF 1/8W 1% 16.2K
R003	0316-0254	RES MF 4W 1% 681 OHM
R005	0316-0251	RES MF 4W 1% 1000 OHM
R006	0307-1684	RES MF 1/8W 1% 49.9K
R007	0316-0252	RES MF 4W 1% 1500 OHM
R008	0307-1065	RES MF 1/8W 1% 113K
R009	0316-0244	RES MF 1/8W 1% 34.8 OHM
R010	0316-0245	RES MF 1/8W 1% 45.9 OHM
TP01	2714-0002	TERM SWAGE 10-877-2
W001	3015-0001	INSULATED JUMPER .200
W004	3015-0001	INSULATED JUMPER .200
ZZ01	3010-0461	CABLE ASSY, TQA-9 MODULE
ZZ02	5001-0544	TQA-9 (PHYSIO CONTROL) LABEL
ZZ03	5001-0545	TQA DIRECT OUTPUT LABEL
ZZ04	5001-0547	SERIAL COVER LABEL .8 X .8
ZZ05	5001-0548	TQA-9 SERIAL NO. SLIP
ZZ06	5027-0239	TQA-9 CASE MODIFICATION
ZZ07	5201-0333	TQA MODULE PCB - BASIC

## **IMPULSE 4000 ADAPTER (PACEMAKER PLUG-IN) MODULE TQA-11** *for the CARDIOTRONICS (Latching Type Connector)*

### **General Information**

The adapter (pacemaker plug-in) module when connected to the Impulse 4000, tests the transcutaneous pacemaker using the manufacturer's suggested measurement technique for both the width and amplitude of the pacemaker pulse. The specified test load impedance and the electrode interface connection match the manufacturer's requirements. Pacemaker measurements can be easily completed during manual tests, automated sequences, and remote operation.

The Impulse 4000 without this option is limited to measurements across the standard internal 50  $\Omega$  test load.

### **Specifications**

Test Load Value:	100 $\Omega$ , $\pm 1\%$ . 4 Watts (maximum)	
Defibrillation Input Protection:	Yes	
Oscilloscope Output:	Module Output:	Direct voltage measurement across selected test load. Subminiature phone jack connector.
	Impulse 4000 Output:	One Volt (Peak) = 40 mA applied. BNC connector.
Impulse 4000 Firmware Level:	Ver 1.00 (minimum)	
Power:	No internal power supply; DC power supplied via Impulse 4000 module interface.	
Case:	Plastic	
Weight:	0.15 lb, 68 g.	
Dimensions:	4.3"L x 2.0"W x 0.9"H. 10.92cm L x 5.08cm W x 2.29cm H.	

## Measurement Technique Description

**Waveform Description:** The Cardiometrics external transcutaneous pacemaker utilizes a rectilinear current pulse of approximately 4 milliseconds in duration.

**Applied Pacemaker Polarity:** Measurements are conducted regardless of polarity ( $\pm$ ).


**Width Algorithm:** Measurement is made at the 50% point between the zero reference and the peak of the applied pacemaker pulse.

**Accuracy:**  $\pm 0.5$  mS  
(Assumes Impulse 4000 specification)

**Amplitude Algorithm:** The amplitude measurement is made from the peak of the applied pacemaker pulse.

**Accuracy:**  $\pm(1\%$  of reading  $+2.0$  mA)  
(Assumes Impulse 4000 specification)

**Pacemaker Pulse:** Below is an example of what a typical Cardiometrics pacemaker pulse looks like, as seen from the real-time output of the Impulse 4000.

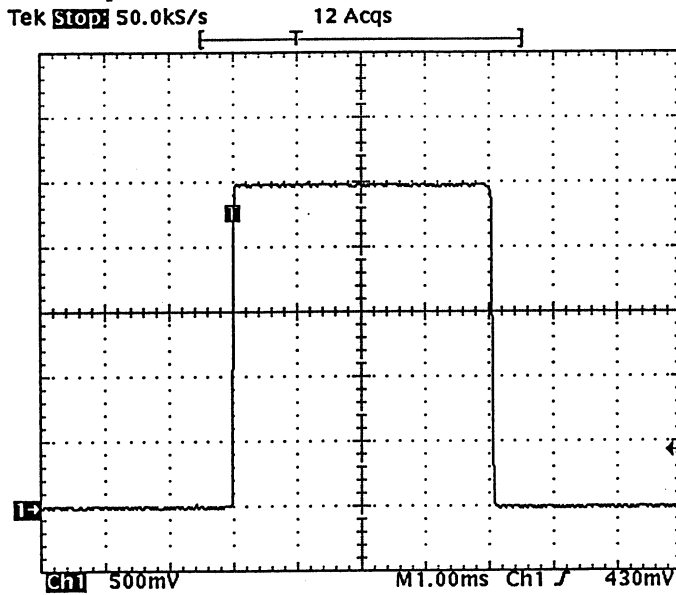

*Cardiometrics Pacemaker Pulse*

## Installation

To begin using the adapter module:

- Turn off the Impulse 4000.
- Plug the adapter module into the “ADAPTER MODULE” receptacle on the left side of the Impulse 4000.
- Connect the adapter module cables to the pacemaker cables.

NOTE: Readings will be identical if the connections are accidentally reversed. If you want to reverse the polarity of the real-time output, reverse the connection.

## Operating Instructions

With the adapter module connected as stated above, follow the operating instructions in the *Conducting the Manual Pacer Test* section in Chapter 3 of the Impulse 4000 Operating and Service manual.

## Test and Calibration

There are no test and calibration procedures for the adapter modules.

## Theory of Operation

The adapter modules contain the loads used for pacemaker testing. The adapter module interfaces to the Impulse 4000 with a special connector that has 33 connections. Following is a brief description of the adapter module circuitry. Please refer to the schematics on the next two pages.

NOTE: *Not all modules contain all the circuitry described below.*


### ADAPTER MODULE SCHEMATIC, SHEET 1

There are from 1-4 loads and they are R1, R2, R3, and R4. Relays K1, K2, and K3 select the load. “No load” can also be selected for open circuit tests. The selected load is connected through R9 and R10 to ground. The voltage across R9 and R10 is proportional to the input current and is measured by the Impulse 4000.


### ADAPTER MODULE SCHEMATIC, SHEET 2

This circuit detects an input overload caused by a defibrillator pulse. U1 is a voltage comparator and its inputs are set at  $\pm 4.1$  V. The current sense signal from R9 and R10 is attenuated so that an overload is greater than or equal to  $\pm 4.1$  V and this trips one or the other comparator. C3 and C4 hold the comparator in the tripped state for about 0.7 seconds. The Impulse 4000 signals the user by turning on speaker LS1.

IMPULSE 4000 ADAPTER (PLUG-IN) MODULE COMPONENT LOCATOR

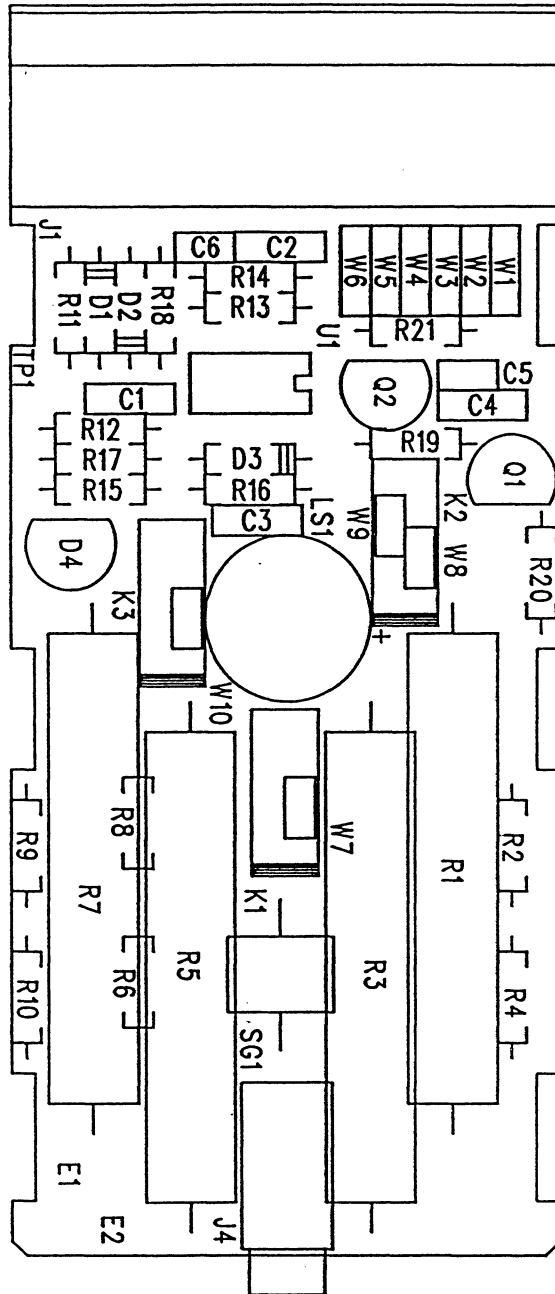

LTR	DESCRIPTION	DATE	REV BY
A	ECO 1377 PRODUCTION RELEASE	5/94	TW

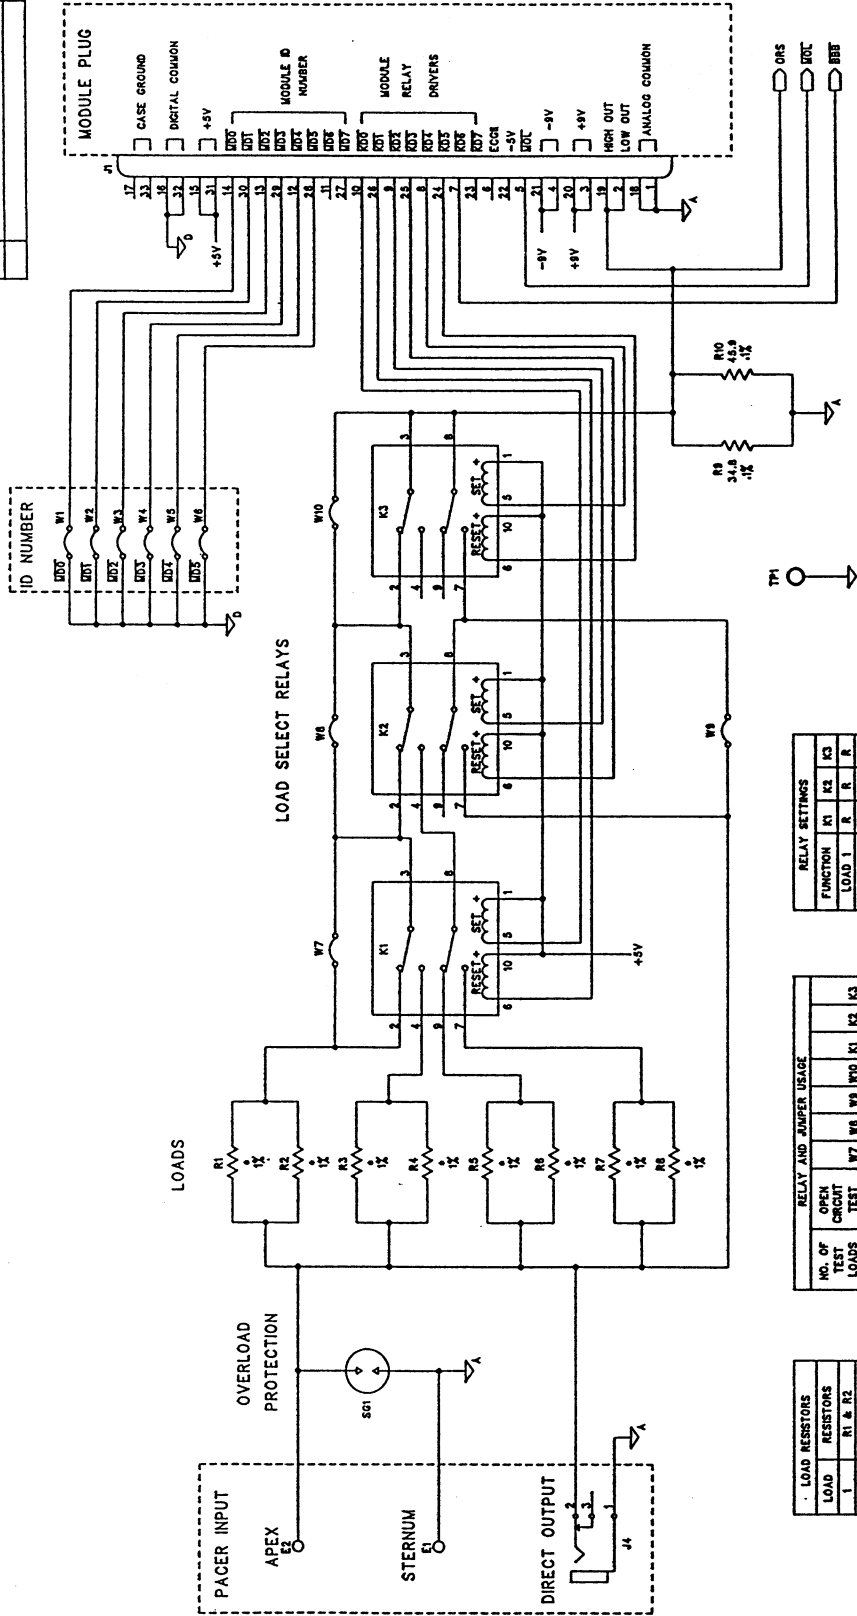

FUNCTION	K1	K2	K3
LOAD 1	R	R	R
LOAD 2	S	R	R
LOAD 3	R	S	R
LOAD 4	S	S	R
OPEN	R	R	S
OL TEST	R	S	S

NO. OF TEST LOADS	OPEN CIRCUIT TEST	W7	W6	W9	W10	K1	K2	K3
1	NO	X	X	X				X
2	YES	X	X	X				X
3	NO				X	X	X	X
4	NO				X	X	X	X
4	YES				X	X	X	X


LOAD	RESISTORS
1	R1 & R2
2	R3 & R4
3	R5 & R6
4	R7 & R8

\* SEE PARTS LIST FOR VALUES

APPROVALS		DATE	DATE
ENG MANAGER		5/24/94	8/24/94
PROJECT ENG			

FILE NO: NONE  
 FILE NO: 205805A.SCH

DYNATECH NEVADA INCORPORATED  
 CARSON CITY, NEVADA  
 IMP 4000 ADAPTER MODULE  
 SCHEMATIC DIAGRAM  
 SHEET 1 OF 2

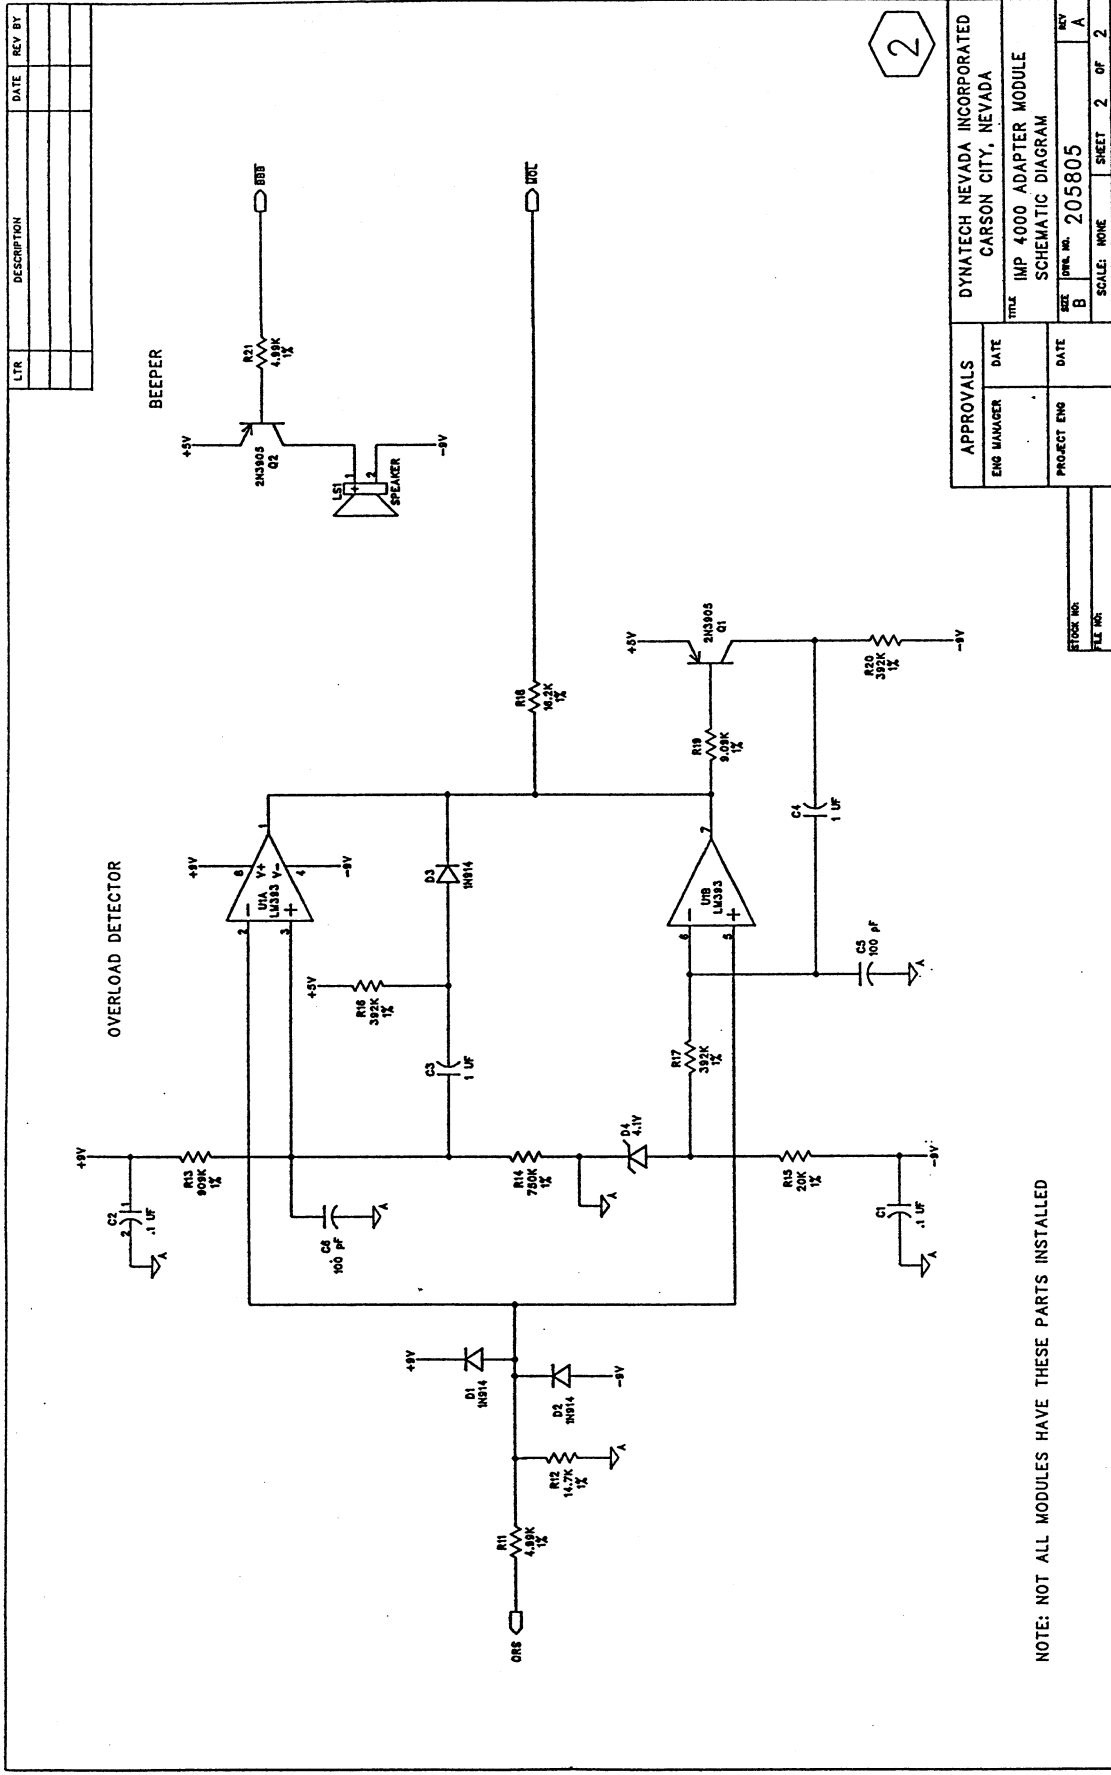

2

APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
ENG. MANAGER	DATE	TITLE IMP 4000 ADAPTER MODULE	
PROJECT ENG	DATE	SCHEMATIC DIAGRAM	
FILE NO.	FILE NO.	SIZE	REV
		B	A
		DRAW. NO.	REV
		205805	A
		SCALE: NONE	SHEET 2 OF 2

NOTE: NOT ALL MODULES HAVE THESE PARTS INSTALLED

### Impulse 4000 Adapter Module TQA-11 Component List

REFERENCE	PART NUMBER	DESCRIPTION
C001	0418-0008	CAP CERA 0.1MF 50V
C002	0418-0008	CAP CERA 0.1MF 50V
C003	0418-0009	CAP 1MF 50V CERAMIC
C004	0418-0009	CAP 1MF 50V CERAMIC
C005	0418-0076	100PF 50V CERA
C006	0418-0076	100PF 50V CERA
D001	2101-0010	DIODE 1N914/1N4148
D002	2101-0010	DIODE 1N914/1N4148
D003	2101-0010	DIODE 1N914/1N4148
D004	2102-0045	DIODE ZEN LM4040DIZ-4.1 4.1V
J004	2719-0207	PHONE JACK MINI RT PC MT
K003	2562-0016	RELAY DUAL LATCHING MINI PC 5V
LS01	0801-0009	BEEPER 3-16 VDC PC MT
Q001	2112-0007	TRANS PNP 2N3905
Q002	2112-0007	TRANS PNP 2N3905
R001	0316-0246	RES MF 4W 1% 80.6 OHM
R002	0307-1214	RES MF 1/8W 1% 16.2K
R009	0316-0244	RES MF 1/8W 1% 34.8 OHM
R010	0316-0245	RES MF 1/8W 1% 45.9 OHM
R011	0307-1683	RES MF 1/8W 1% 4.99K
R012	0307-1684	RES MF 1/8W 1% 49.9K
R013	0307-1795	RES MF 1/8W 1% 649K
R014	0307-1885	RES MF 1/8W 1% 806K
R015	0307-1304	RES MF 1/8W 1% 20K
R016	0307-1585	RES MF 1/8W 1% 392K
R017	0307-1585	RES MF 1/8W 1% 392K
R018	0307-1214	RES MF 1/8W 1% 16.2K
R019	0307-1933	RES MF 1/8W 1% 9.09K
R020	0307-1585	RES MF 1/8W 1% 392K
R021	0307-1683	RES MF 1/8W 1% 4.99K
SG01	1010-0001	SURGE ARRESTER, AC240L
TP01	2714-0002	TERM SWAGE 10-877-2
U001	2118-0045	IC DUAL COMPARATOR LM393N
W001	3015-0001	INSULATED JUMPER .200
W002	3015-0001	INSULATED JUMPER .200
W004	3015-0001	INSULATED JUMPER .200
W007	3015-0018	UN-INSULATED JUMPER .100
W008	3015-0018	UN-INSULATED JUMPER .100



**Impulse 4000 Adapter Module TQA-11 Component List**

REFERENCE	PART NUMBER	DESCRIPTION
W009	3015-0018	UN-INSULATED JUMPER .100
ZZ01	3010-0455	CABLE, CARDIO, LATCH, PACER
ZZ02	3012-0001	CABLE TIE NYLON
ZZ03	4904-0063	GROMMET, RUBBER, 3/16ID - 1/2
ZZ04	5001-0545	TQA DIRECT OUTPUT LABEL
ZZ05	5001-0547	SERIAL COVER LABEL .8 X .8
ZZ06	5001-0612	LABEL, TQA-11 (CARDIO LATCH)
ZZ07	5001-0613	TQA-11 SERIAL NO. SLIP
ZZ08	5027-0239	CASE MODIFICATION, TQA-11
ZZ09	5201-0333	TQA MODULE PCB - BASIC

## IMPULSE 4000 ADAPTER (PACEMAKER PLUG-IN) MODULE TQA-12

*for the HEWLETT PACKARD Code Master Series*

### General Information

The adapter (pacemaker plug-in) module when connected to the Impulse 4000, tests the transcutaneous pacemaker using the manufacturer's suggested measurement technique for both the width and amplitude of the pacemaker pulse. The range of test load impedances and the electrode interface connection match the manufacturer's requirements. Pacemaker measurements can be easily completed during manual tests, automated sequences, and remote operation.

The Impulse 4000 without this option is limited to measurements across the standard internal 50  $\Omega$  test load.

### Specifications

Test Load Values:	50 and 400 $\Omega$ , $\pm 1\%$ 4 Watts (maximum)	
Defibrillation Input Protection:	Yes	
Oscilloscope Output:	Module Output:	Direct voltage measurement across selected test load. Subminiature phone jack connector.
	Impulse 4000 Output:	One Volt (Peak) = 40 mA applied. BNC connector.
Impulse 4000 Firmware Level:	Ver 1.00 (minimum)	
Power:	No internal power supply; DC power supplied via Impulse 4000 module interface.	
Case:	Plastic	
Weight:	0.15 lb, 68 g.	
Dimensions:	4.3"L x 2.0"W x 0.9"H. 10.92cm L x 5.08cm W x 2.29cm H.	

## Measurement Technique Description

Waveform Description: The Hewlett Packard Code Master Series external transcutaneous pacemaker utilizes a truncated exponential sawtooth constant current pulse of approximately 20 milliseconds in duration.

Applied Pacemaker Polarity: Measurements are conducted regardless of polarity ( $\pm$ ).

Width Algorithm: Measurement is made at the 50% point between the zero reference and the peak of the applied pacemaker pulse.


Accuracy:  $\pm 0.5$  mS  
(Assumes Impulse 4000 specification)

Amplitude Algorithm: The amplitude measurement is made from the peak of the pacemaker pulse trailing edge to the zero reference point. The peak measurement is computed as the average of 32 consecutive samples that precede the pulse trailing edge; the samples are stored every 50 microseconds (1.6 milliseconds in total).

Accuracy:  $\pm(1\%$  of reading  $+2.0$  mA)  
(Assumes Impulse 4000 specification)

Pacemaker Pulse: Below is an example of what a typical Hewlett Packard Code Master Series pacemaker pulse looks like, as seen from the real-time output of the Impulse 4000.

NOTE: This pacemaker pulse waveform is shown in a negative polarity.

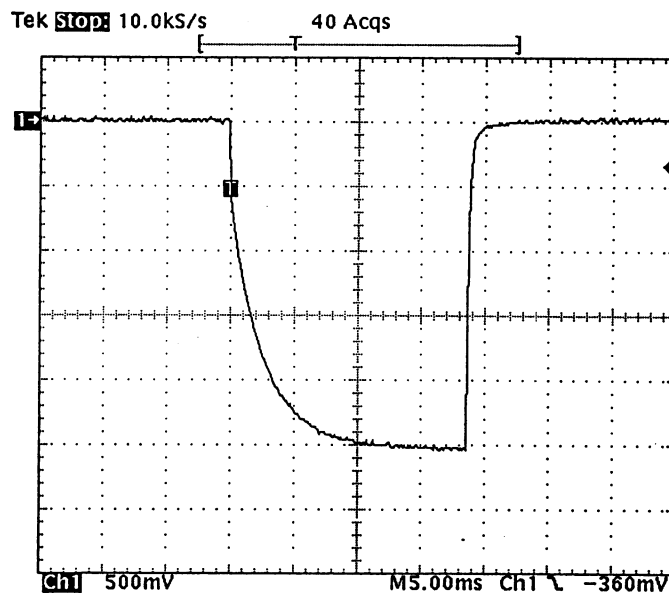

Hewlett Packard Code Master Series Pacemaker Pulse

## Installation

To begin using the adapter module:

- Turn off the Impulse 4000.
- Plug the adapter module into the “ADAPTER MODULE” receptacle on the left side of the Impulse 4000.
- Connect the adapter module cables to the pacemaker cables.

NOTE: Readings will be identical if the connections are accidentally reversed. If you want to reverse the polarity of the real-time output, reverse the connection.

## Operating Instructions

With the adapter module connected as stated above, follow the operating instructions in the *Conducting the Manual Pacer Test* section in Chapter 3 of the Impulse 4000 Operating and Service manual.

## Test and Calibration

There are no test and calibration procedures for the adapter modules.

## Theory of Operation

The adapter modules contain the loads used for pacemaker testing. The adapter module interfaces to the Impulse 4000 with a special connector that has 33 connections. Following is a brief description of the adapter module circuitry. Please refer to the schematics on the next two pages.

NOTE: *Not all modules contain all the circuitry described below.*


### ADAPTER MODULE SCHEMATIC, SHEET 1

There are from 1-4 loads and they are R1, R2, R3, and R4. Relays K1, K2, and K3 select the load. “No load” can also be selected for open circuit tests. The selected load is connected through R9 and R10 to ground. The voltage across R9 and R10 is proportional to the input current and is measured by the Impulse 4000.


### ADAPTER MODULE SCHEMATIC, SHEET 2

This circuit detects an input overload caused by a defibrillator pulse. U1 is a voltage comparator and its inputs are set at  $\pm 4.1$  V. The current sense signal from R9 and R10 is attenuated so that an overload is greater than or equal to  $\pm 4.1$  V and this trips one or the other comparator. C3 and C4 hold the comparator in the tripped state for about 0.7 seconds. The Impulse 4000 signals the user by turning on speaker LS1.

**IMPULSE 4000 ADAPTER (PLUG-IN) MODULE COMPONENT LOCATOR**

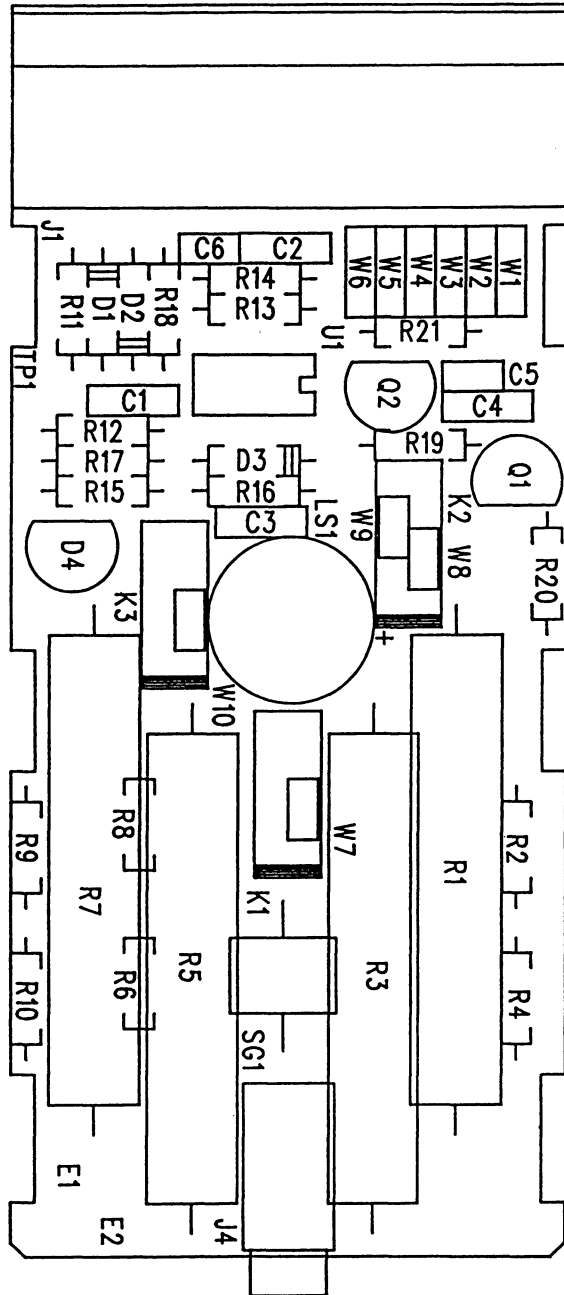

LTR	DESCRIPTION	DATE	REV BY
A	ECD 1377 PRODUCTION RELEASE	5/94	TW

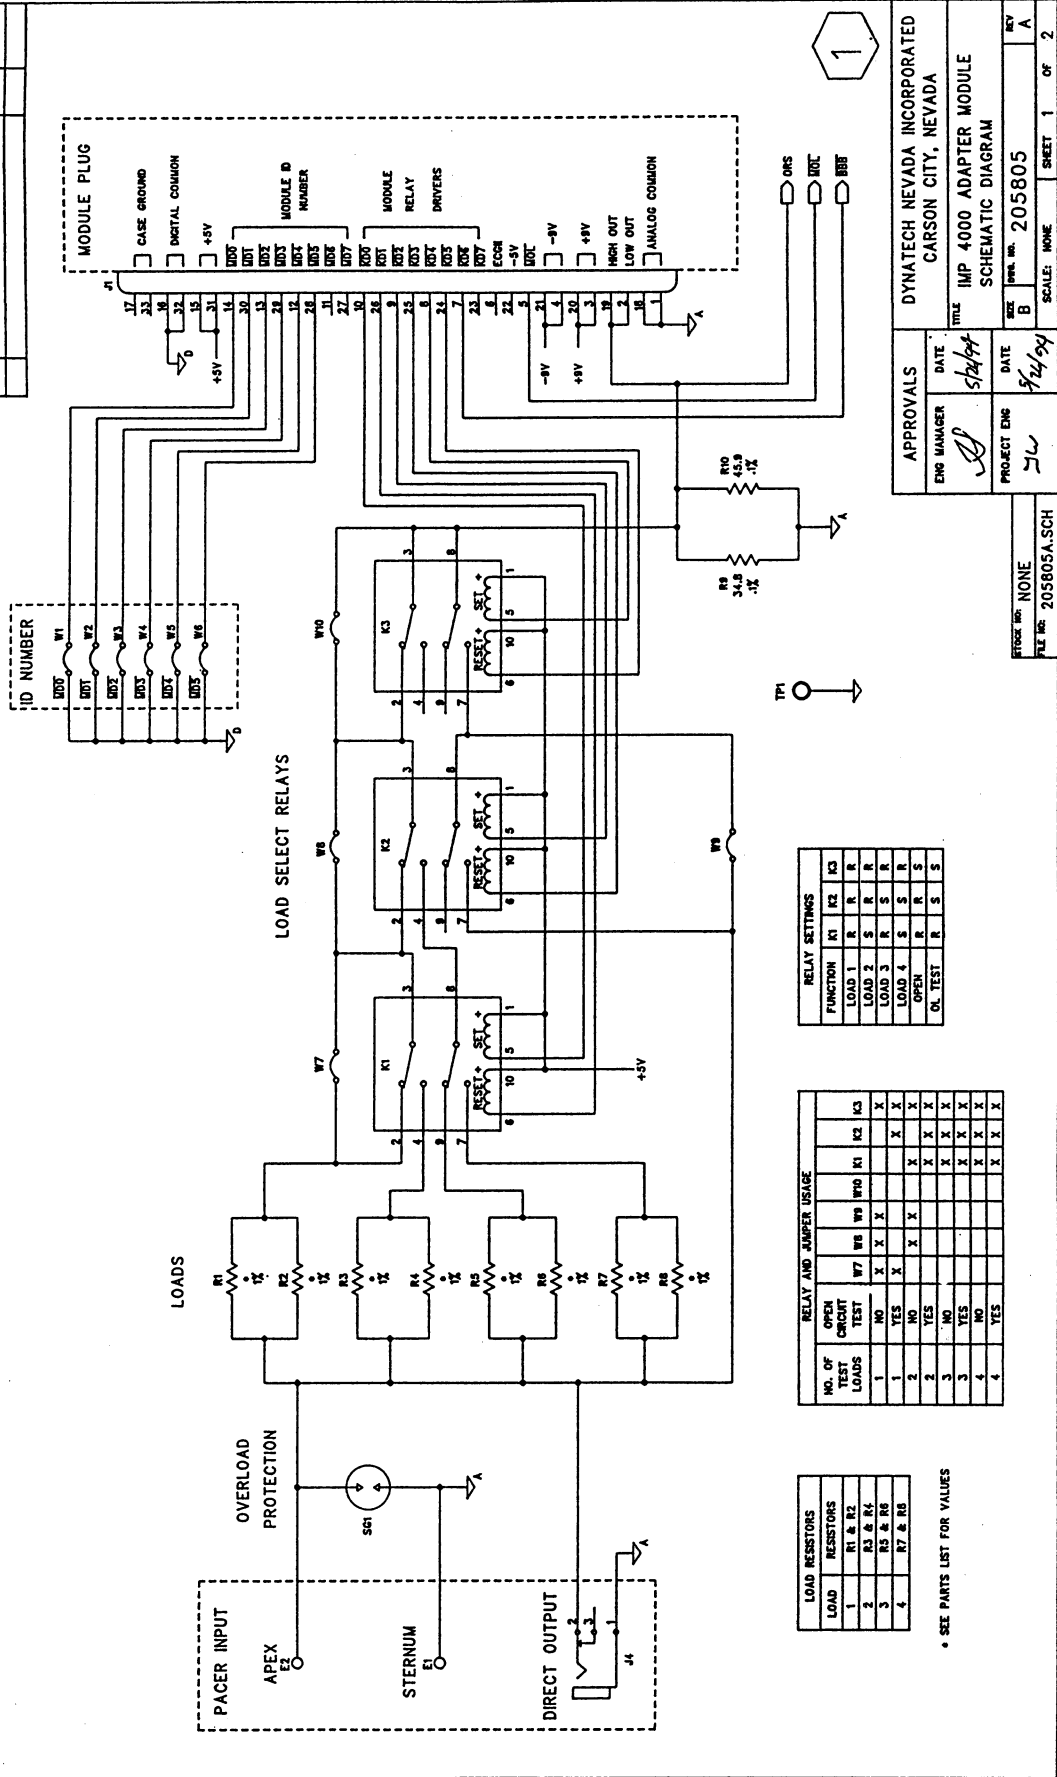

1

DYNATECH NEVADA INCORPORATED  
CARSON CITY, NEVADA

TITLE: IMP 4000 ADAPTER MODULE  
SCHEMATIC DIAGRAM

APPROVALS  
 ENG MANAGER: [Signature]  
 DATE: 5/24/94  
 PROJECT ENG: [Signature]  
 DATE: 5/24/94

FIGURE NO.: NONE  
 FILE NO.: 205805A.SCH

SCALE: NONE  
 SHEET 1 OF 2


FUNCTION	K1	K2	K3
LOAD 1	R	R	R
LOAD 2	S	R	R
LOAD 3	R	S	R
LOAD 4	S	R	R
OPEN	R	R	S
DL TEST	R	R	S

NO. OF TEST LOADS	OPEN CIRCUIT TEST	NO	YES	NO	YES	NO	YES	NO	YES
1		X		X		X		X	
2		X		X		X		X	
3		X		X		X		X	
4		X		X		X		X	
4	YES								

LOAD	R1 & R2	R3 & R4	R5 & R6	R7 & R8
1				
2				
3				
4				

\* SEE PARTS LIST FOR VALUES

LTR	DESCRIPTION	DATE	REV BY

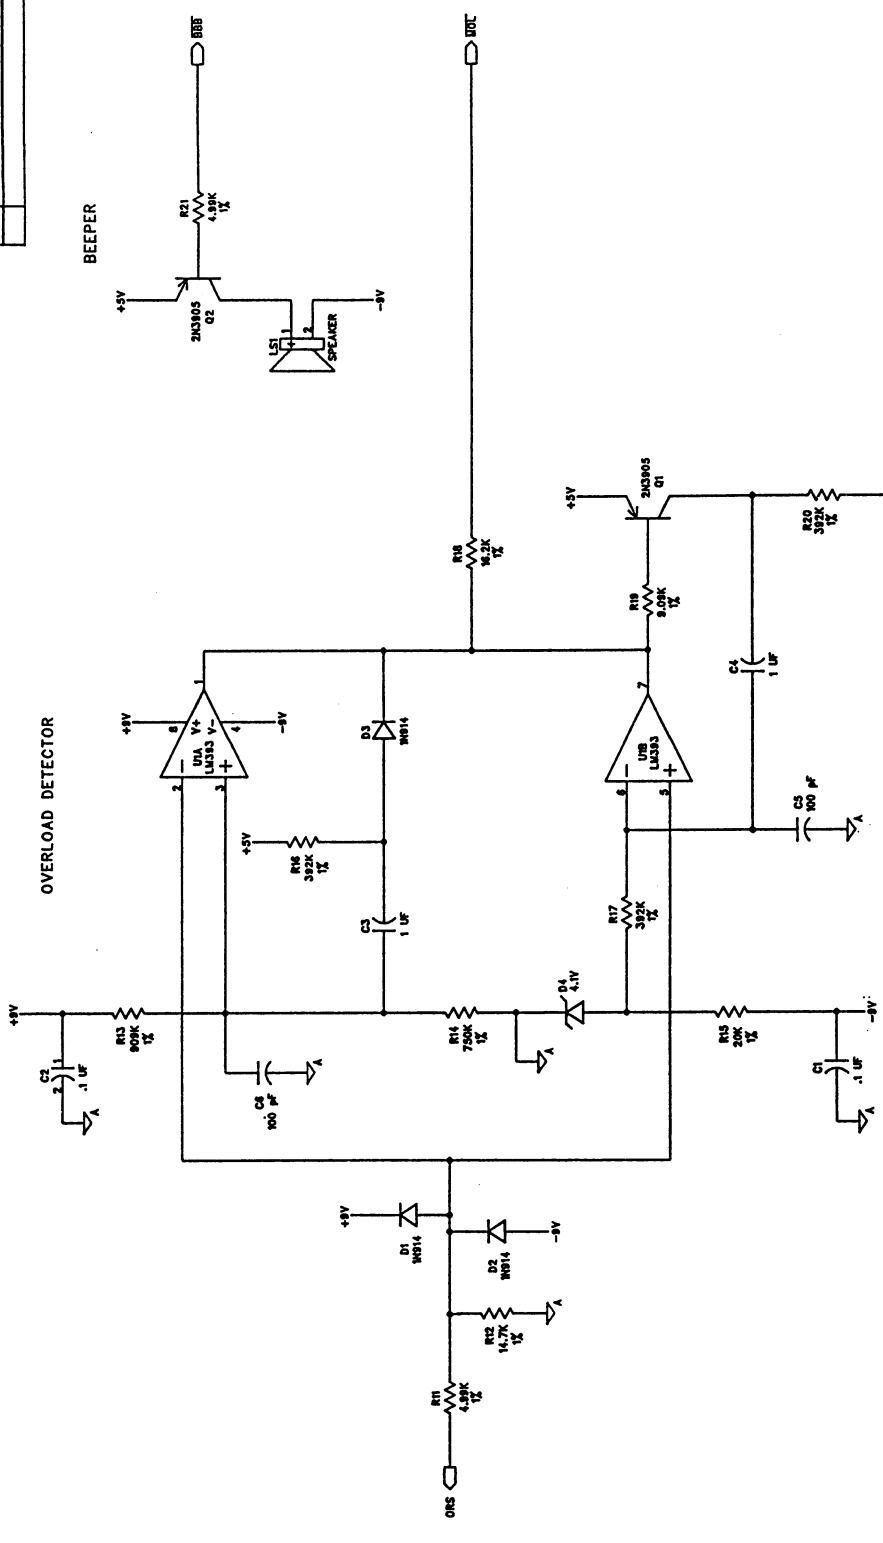

2

APPROVALS		DATE	
ENG MANAGER			
PROJECT ENG			

DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
TITLE	IMP 4000 ADAPTER MODULE
SCHEMATIC DIAGRAM	
REV	A
REV	A
SCALE	SCALE: NONE
SHEET	2 OF 2

NOTE: NOT ALL MODULES HAVE THESE PARTS INSTALLED


### Impulse 4000 Adapter Module TQA-12 Component List

REFERENCE	PART NUMBER	DESCRIPTION
C001	0418-0008	CAP CERA 0.1MF 50V
C002	0418-0008	CAP CERA 0.1MF 50V
C003	0418-0009	CAP 1MF 50V CERAMIC
C004	0418-0009	CAP 1MF 50V CERAMIC
C005	0418-0076	100PF 50V CERA
C006	0418-0076	100PF 50V CERA
D001	2101-0010	DIODE 1N914/1N4148
D002	2101-0010	DIODE 1N914/1N4148
D003	2101-0010	DIODE 1N914/1N4148
D004	2102-0045	DIODE ZEN LM4040DIZ-4.1 4.1V
J004	2719-0207	PHONE JACK MINI RT PC MT
K001	2562-0016	RELAY DUAL LATCHING MINI PC 5V
K003	2562-0016	RELAY DUAL LATCHING MINI PC 5V
LS01	0801-0009	BEEPER 3-16 VDC PC MT
Q001	2112-0007	TRANS PNP 2N3905
Q002	2112-0007	TRANS PNP 2N3905
R001	0316-0243	RES MF 4W 1% 30.9 OHM
R002	0307-1133	RES MF 1/8W 1% 1.33K
R003	0316-0248	RES MF 4W 1% 392 OHM
R004	0307-1114	RES MF 1/8W 1% 12.7K
R009	0316-0244	RES MF 1/8W 1% 34.8 OHM
R010	0316-0245	RES MF 1/8W 1% 45.9 OHM
R011	0307-1683	RES MF 1/8W 1% 4.99K
R012	0307-1174	RES MF 1/8W 1% 14.7K
R013	0307-1935	RES MF 1/8W 1% 909K
R014	0307-1855	RES MF 1/8W 1% 750K
R015	0307-1304	RES MF 1/8W 1% 20K
R016	0307-1585	RES MF 1/8W 1% 392K
R017	0307-1585	RES MF 1/8W 1% 392K
R018	0307-1214	RES MF 1/8W 1% 16.2K
R019	0307-1933	RES MF 1/8W 1% 9.09K
R020	0307-1585	RES MF 1/8W 1% 392K
R021	0307-1683	RES MF 1/8W 1% 4.99K
SG01	1010-0001	SURGE ARRESTER, AC240L
TP01	2714-0002	TERM SWAGE 10-877-2
U001	2118-0045	IC DUAL COMPARATOR LM393N
W003	3015-0001	INSULATED JUMPER .200
W004	3015-0001	INSULATED JUMPER .200
W008	3015-0018	UN-INSULATED JUMPER .100



**Impulse 4000 Adapter Module TQA-12 Component List**

REFERENCE	PART NUMBER	DESCRIPTION
W009	3015-0018	UN-INSULATED JUMPER .100
ZZ01	3010-0454	CABLE ASSEMBLY, TQA-12
ZZ02	5001-0545	TQA DIRECT OUTPUT LABEL
ZZ03	5001-0547	SERIAL COVER LABEL .8 X .8
ZZ04	5001-0608	LABEL, TQA-12 (HP CODEMASTER)
ZZ05	5001-0607	TQA-12 SERIAL NO. SLIP
ZZ06	5027-0239	TQA-11 CASE MODIFICATION
ZZ07	5201-0333	TQA MODULE PCB - BASIC

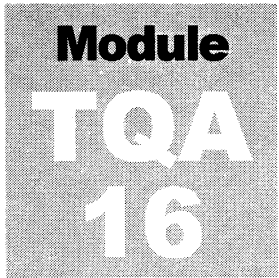

# Impulse 4000 Adapter Module TQA-16 *for the* **Physio-Control Quik-Combo**

*In this document—*

<b>General Information.....</b>	<b>2</b>
<b>Specifications.....</b>	<b>2</b>
<b>Measurement Technique Description .....</b>	<b>3</b>
<b>Installation.....</b>	<b>4</b>
<b>Operating Instructions .....</b>	<b>4</b>
<b>Test and Calibration .....</b>	<b>4</b>
<b>Theory of Operation.....</b>	<b>5</b>
<b>Adapter Module Component Locator .....</b>	<b>6</b>
<b>Adapter Module Schematic Diagrams</b>	
<b>Sheet 1 of 2 .....</b>	<b>7</b>
<b>Sheet 2 of 2 .....</b>	<b>8</b>
<b>Adapter Module TQA-16 Component List .....</b>	<b>9</b>

## General Information

The adapter (pacemaker plug-in) module when connected to the Impulse 4000, tests the transcutaneous pacemaker using the manufacturer's suggested measurement technique for both the width and amplitude of the pacemaker pulse. The range of test load impedances and the electrode interface connection match the manufacturer's requirements. Pacemaker measurements can be easily completed during manual tests, automated sequences, and remote operation.

The Impulse 4000 without this option is limited to measurements across the standard internal 50- $\Omega$  test load.

## Specifications

**Test Load Values:** 100, 700, 1000, and 1500  $\Omega$ ,  $\pm 1\%$   
4 watts (maximum)

**Defibrillation Input Protection:** Yes

**Oscilloscope Output:** *Module Output:* Direct voltage measurement across selected test load.  
Subminiature phone jack connector.

*Impulse 4000 Output:* One volt (peak) = 40 mA applied.  
BNC connector

**Impulse 4000 Firmware Level:** Version 1.04 (minimum)

**Power:** No internal power supply;  
DC power supplied via Impulse 4000 module interface.

**Case:** Plastic

**Weight:** 68 gm (0.15 lb)

**Dimensions:** 10.92-cm L x 5.08-cm W x 2.29-cm H  
(4.3" L x 2.0" W x 0.9" H)

## Measurement Technique Description

**Waveform Description:** The Physio-Control QUIK-COMBO series of external transcutaneous pacemakers utilize a truncated monophasic current pulse of approximately 20 milliseconds in duration.

**Applied Pacemaker Polarity:** Measurements are conducted regardless of polarity ( $\pm$ ).


**Width Algorithm:** Measurement is made at the 50% point between the zero reference and the peak of the applied pacemaker pulse.

*Accuracy:*  $\pm 0.5$  ms  
(Assumes Impulse 4000 specification)

**Amplitude Algorithm:** The amplitude measurement is triggered from the peak of the leading edge of the applied pacemaker pulse and will be computed as the average of 32 consecutive samples stored every 50 microseconds (1.6 milliseconds in total).

*Accuracy:*  $\pm(1\%$  of reading  $+2.0$  mA)  
(Assumes Impulse 4000 specification)

**Pacemaker Pulse:** Below is an example of what a typical Physio-Control QUIK-COMBO pacemaker pulse looks like, as seen from the real time output of the Impulse 4000.

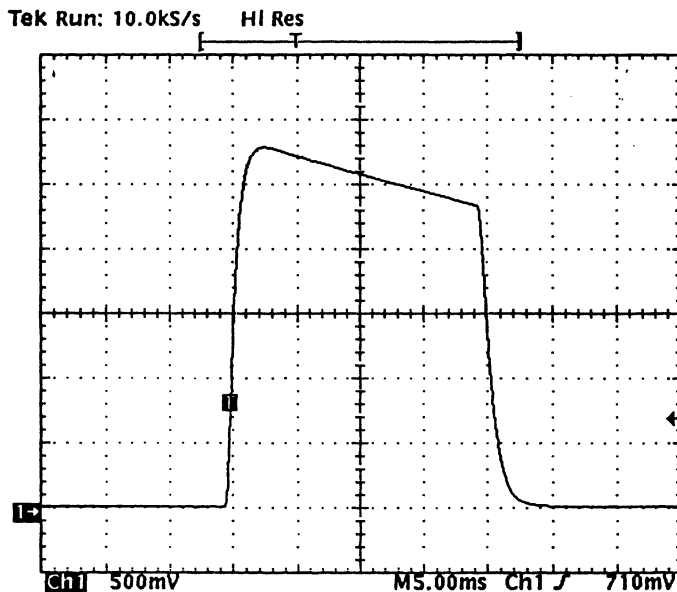

*Physio-Control Quik-Combo Pacemaker Pulse*

## Installation

To begin using the adapter module:

1. Turn off the Impulse 4000.
2. Plug the adapter module into the ADAPTER MODULE receptacle on the left side of the Impulse 4000.
3. Connect the adapter module cables to the pacemaker cables.

## Operating Instructions

With the adapter module connected as stated above, follow the operating instructions in the *Conducting the Manual Pacer Test* section in Chapter 3 of the Impulse 4000 Operating and Service manual.

## Test and Calibration

There are no test and calibration procedures for the adapter modules.

## Theory of Operation

The adapter modules contain the loads used for pacemaker testing. The adapter module interfaces to the Impulse 4000 with a special connector that has 33 connections.

Following is a brief description of the adapter module circuitry. Please refer to the schematics on the next two pages.

### Note


Not all modules contain all the circuitry described below.

### Adapter Module Schematic, Sheet 1

There are from 1 to 4 loads made up from R1 through R8. Relays K1, K2, and K3 select the load. "No load" can also be selected for open circuit tests. The selected load is connected through R9 to ground. The voltage across R9 is proportional to the input current and is measured by the Impulse 4000.


### Adapter Module Schematic, Sheet 2

This circuit detects an input overload caused by a defibrillator pulse. U1 is a voltage comparator and its inputs are set at  $\pm 4.1$  V. The current sense signal from R9 is attenuated so that an overload is greater than or equal to  $\pm 4.1$  V and this trips one or the other comparator. C3 and C4 hold the comparator in the tripped state for about 0.7 seconds. The Impulse 4000 signals the user by turning on speaker LS1.

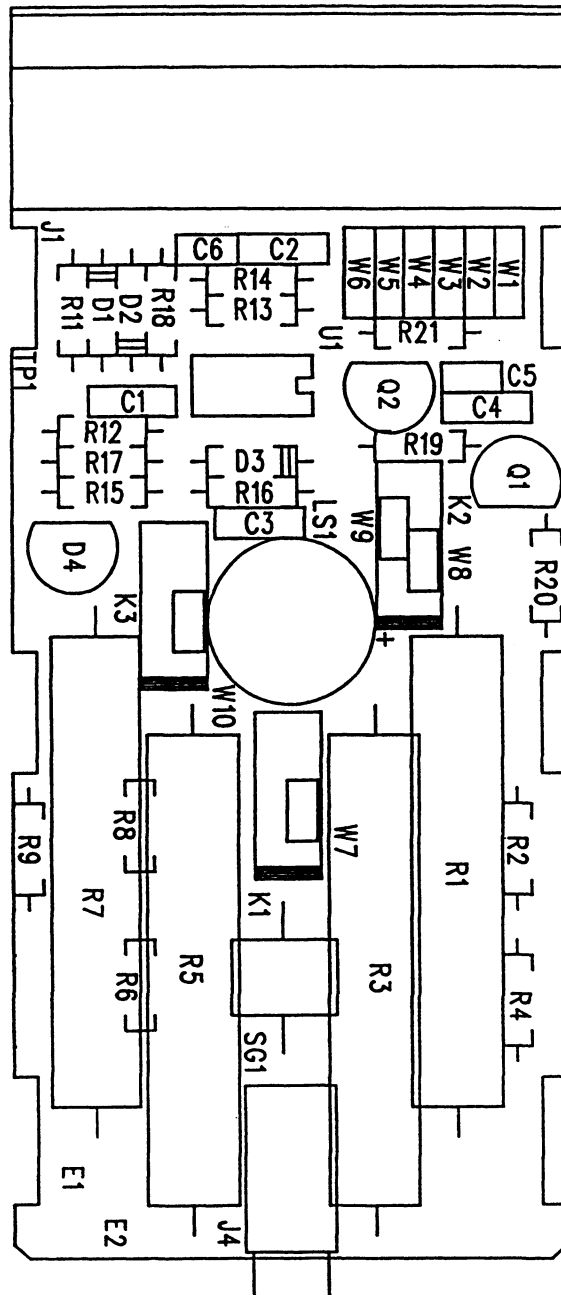

*Impulse 4000 Adapter (Plug-In) Module Component Locator*

LTR	DESCRIPTION	DATE	REV BY
A	ECC 1377 PRODUCTION RELEASE	5/15/94	TW
B	ECC 1633 - CHG R9, DEL R10	5/19/95	JTW

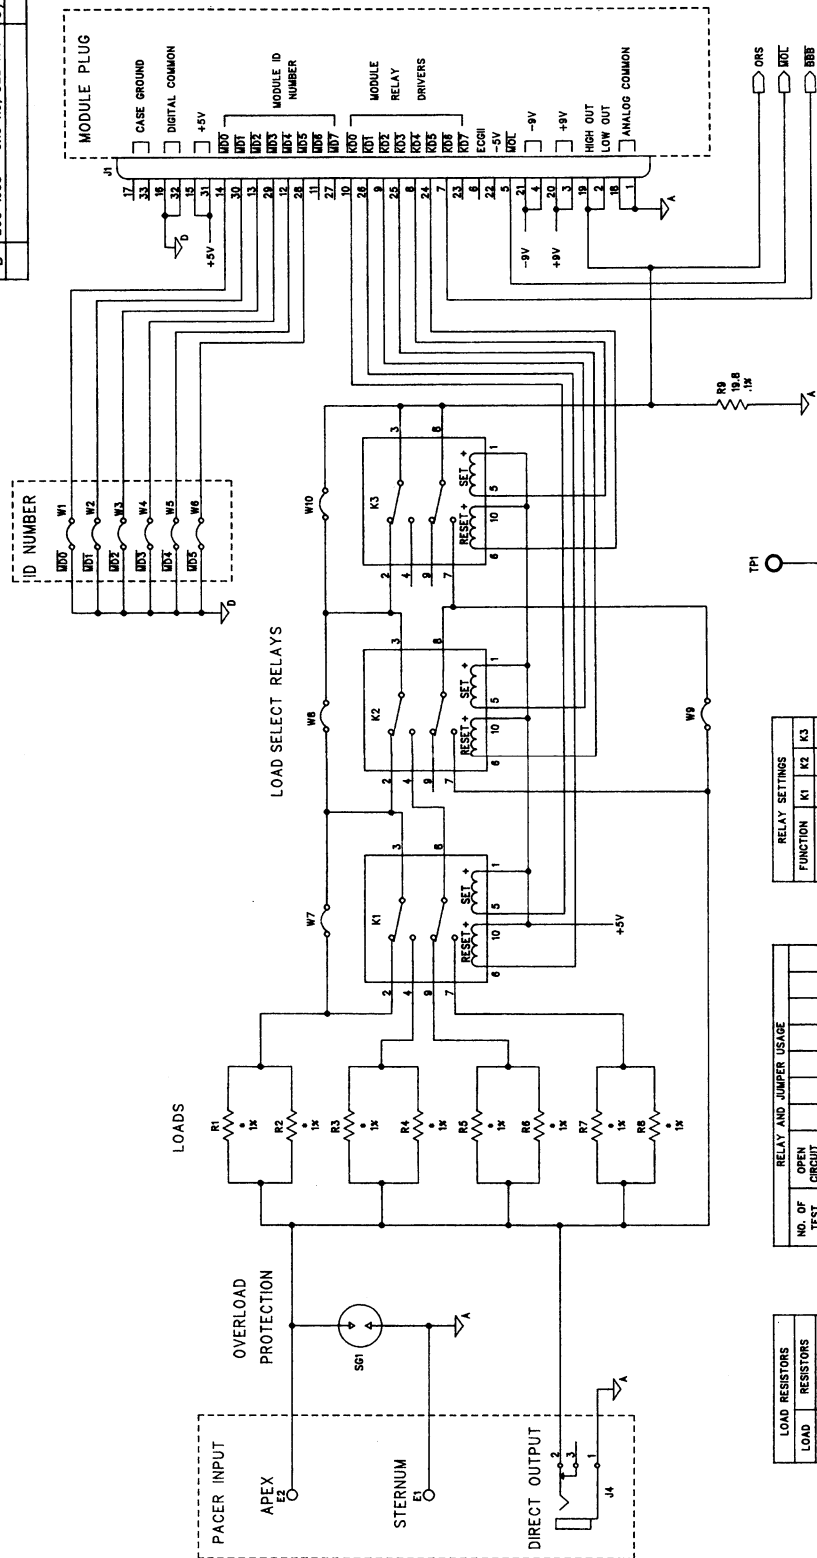

RELAY SETTINGS

FUNCTION	K1	K2	K3
LOAD 1	R	R	R
LOAD 2	S	R	R
LOAD 3	R	S	R
LOAD 4	S	S	R
OPEN	R	R	S
OL TEST	R	S	S

RELAY AND JUMPER USAGE

NO. OF TEST LOADS	OPEN CIRCUIT TEST	W7	W8	W9	W10	K1	K2	K3
1	NO	X	X	X			X	X
2	YES	X	X	X		X	X	X
3	NO					X	X	X
4	YES					X	X	X

LOAD RESISTORS

LOAD	R1 & R2	R3 & R4	R5 & R6	R7 & R8
1				
2				
3				
4				

\* SEE PARTS LIST FOR VALUES

APPROVALS


DRAWN BY	DATE	5/15/94
ENG MANAGER	DATE	5/23/95

FILE NO: 205805B.SCH  
 PROJECT ENG: TW  
 SCALE: NONE  
 SHEET 1 OF 2

DYNATECH NEVADA INCORPORATED  
 CARSON CITY, NEVADA  
 IMP 4000 ADAPTER MODULE  
 SCHEMATIC DIAGRAM



IMPULSE 4000 ADAPTER MODULE TQA-16

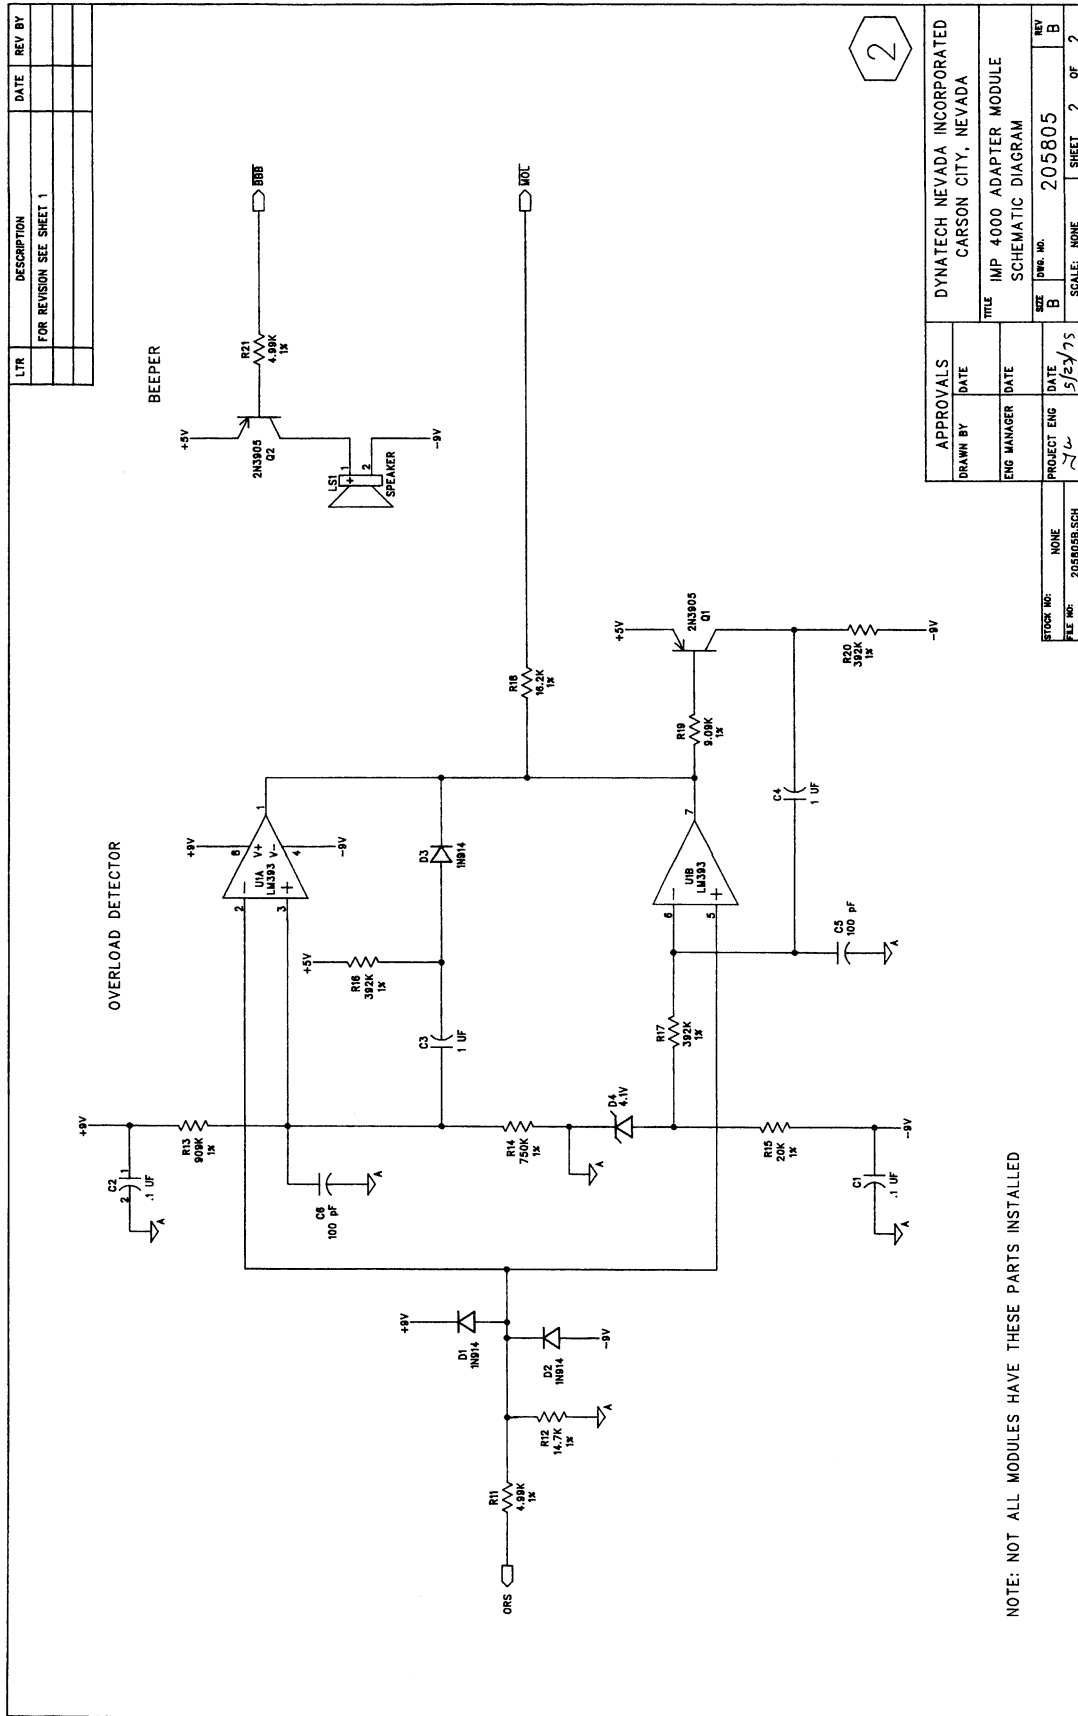

LTR	DESCRIPTION	DATE	REV BY
	FOR REVISION SEE SHEET 1		

APPROVALS		DYNATECH NEVADA INCORPORATED CARSON CITY, NEVADA	
DRAWN BY	DATE	TITLE	IMP 4000 ADAPTER MODULE
ENG MANAGER	DATE	SIZE	B
PROJECT ENG	DATE	DWG. NO.	205805
FILE NO:	205805B.SCH	SCALE:	NONE
		SHEET	2 OF 2

2

## Impulse 4000 Adapter Module TQA-16 Component List

Reference	Part Number	Description
C001	0418-0008	CAP CERA 0.1MF 50V
C002	0418-0008	CAP CERA 0.1MF 50V
C003	0418-0009	CAP 1MF 50V CERAMIC
C004	0418-0009	CAP 1MF 50V CERAMIC
C005	0418-0016	CAP CERA .001 UF 50V
C006	0418-0016	CAP CERA .001 UF 50V
D001	2101-0010	DIODE 1N914/1N4148
D002	2101-0010	DIODE 1N914/1N4148
D003	2101-0010	DIODE 1N914/1N4148
D004	2102-0045	DIODE ZEN LM4040DIZ-4.1 4.1V
J004	2719-0207	PHONE JACK MINI RT PC MT
K001	2562-0016	RELAY DUAL LATCHING MINI PC 5V
K002	2562-0016	RELAY DUAL LATCHING MINI PC 5V
K003	2562-0016	RELAY DUAL LATCHING MINI PC 5V
LS01	0801-0009	BEEPER 3-16 VDC PC MT
Q001	2112-0007	TRANS PNP 2N3905
Q002	2112-0007	TRANS PNP 2N3905
R001	0316-0246	RES MF 4W 1% 80.6 OHM
R002	0307-1214	RES MF 1/8W 1% 16.2K
R003	0316-0254	RES MF 4W 1% 681 OHM
R005	0316-0251	RES MF 4W 1% 1000 OHM
R006	0307-1684	RES MF 1/8W 1% 49.9K
R007	0316-0252	RES MF 4W 1% 1500 OHM
R008	0307-1065	RES MF 1/8W 1% 113K
R009	0320-0065	RES WW 3W .1% 19.8
R011	0307-1683	RES MF 1/8W 1% 4.99K
R012	0307-1174	RES MF 1/8W 1% 14.7K
R013	0307-1935	RES MF 1/8W 1% 909K
R014	0307-1855	RES MF 1/8W 1% 750K
R015	0307-1304	RES MF 1/8W 1% 20K
R016	0307-1585	RES MF 1/8W 1% 392K
R017	0307-1585	RES MF 1/8W 1% 392K
R018	0307-1214	RES MF 1/8W 1% 16.2K

## Impulse 4000 Adapter Module TQA-16 Component List *(cont'd)*

Reference	Part Number	Description
R019	0307-1933	RES MF 1/8W 1% 9.09K
R020	0307-1585	RES MF 1/8W 1% 392K
R021	0307-1683	RES MF 1/8W 1% 4.99K
SG01	1010-0001	SURGE ARRESTER, AC240L
TP01	2714-0002	TERM SWAGE 10-877-2
U001	2118-0045	IC DUAL COMPARATOR LM393N
W005	3015-0001	INSULATED JUMPER .200
ZZ01	3010-0514	ALDEN ADAPTER CABLE ASSY
ZZ03	3040-0016	TUBE 3/8 SHRINK
ZZ04	4904-0063	GROMMET, RUBBER, 3/16-1/2
ZZ05	5001-0545	TQA DIRECT OUTPUT LABEL
ZZ06	5001-0547	SERIAL COVER LABEL .8 X .8
ZZ07	5001-0732	TQA-16 MODEL LABEL
ZZ08	5001-0733	TQA-16 SERIAL NO. SLIP
ZZ09	5027-0239	TQA-11 CASE MODIFICATION
ZZ10	5201-0333	TQA MODULE PCB - BASIC

## IMPULSE 4000 PACEMAKER PLUG-IN ADAPTER MODULE TQA-17

*The TQA-17 is designed specifically for testing the Zoll Medical Models PD1200 through PD2000 and M-Series resuscitation units equipped with the external transcutaneous pacemaker function using Zoll Medical (PD2200, **propadz**<sup>™</sup> or **statpadz**<sup>™</sup>) Multi-Function Electrode Systems.*

### General Information

When the TQA-17 plug-in adapter module is utilized with the Impulse 4000, the biomedical technician can effectively perform functional tests on Zoll Medical transcutaneous pacemakers. The TQA-17 also provides a safe and convenient method of directly connecting the pacemaker electrode cable to the analyzer and selecting the prescribed test load resistance. All pacemaker measurements can easily be conducted with the TQA-17 during manual tests, internal autosequences and remote operation.

### Specifications

DNI Nevada Part Number:	9513-0262
Test Load Values:	100 $\Omega$ , $\pm$ 1% (M-Series) 1000 $\Omega$ , $\pm$ 1% (PD-Series) 4 Watts (Maximum)
Defibrillation Input Protection:	Yes (Internal buzzer momentarily annunciates module overload).
Oscilloscope Output(s):	Two (2) Module Output - Direct measurement across selected test load. Output connector type: 2.5-mm subminiature phone jack  Impulse 4000 Output: One Volt Peak = 40 mA applied. Output connector type: BNC
Impulse 4000 Firmware Level:	1.06 (minimum)
Power:	No internal power supply. DC power supplied through Impulse 4000 module interface connection.
Case:	High Impact Plastic; Black
Weight:	0.15lb, 68g.
Dimensions:	4.3" x 2.0" x 0.9" (10.92cm x 5.08cm x 2.29cm)
Optional Accessory:	Module Output Cable (2.5mm subminiature phone jack to BNC cable) DNI part number: 3010-0442

## Measurement Technique

Waveform Description:	The Zoll medical external transcutaneous pacemakers utilize a rectilinear current pulse of approximately 40 milliseconds in duration.
Applied Pacemaker Polarity:	All measurements are conducted regardless of polarity.
Width Algorithm:	Measurement is made at the 50% amplitude point of the applied pacemaker pulse directly across the leading and trailing edges.
<i>Width Accuracy:</i>	$\pm 0.5mS$ (Assumes Impulse 4000 specification)
Amplitude Algorithm:	The pacemaker amplitude measurement is initiated at the 50% amplitude point of the leading edge across the horizontal peak down to the 50% amplitude point of the trailing edge. This segment of the pacemaker pulse waveform is digitized at 50 microsecond intervals. All of these samples are averaged to yield the amplitude value in milliamperes.
<i>Amplitude Accuracy:</i>	$\pm 1\%$ of reading + 2.0 mA (Assumes Impulse 4000 specification)
Paced Refractory Period:	The paced refractory period (PRP) measurement reflects the capability of a demand mode pacemaker to sense the patient's cardiac (ECG) activity following the generation of a pacemaker pulse. The final PRP measurement is referenced at the trailing edge (downslope) of the pacemaker pulse and terminates at the peak of the simulated ECG R-wave after the following interactive simulation and pulse measurement sequence is completed:

First, the analyzer measures the applied pacemaker pulse interval, computes the pulse rate (PPM) and then generates an ECG R-wave delayed in increasing 32 millisecond increments after the pacemaker pulse until it is sensed by the pacemaker indicated by a now prolonged pacer pulse interval. (This period is the approximate PRP.) To best compute the actual PRP, the coupling interval is reduced in smaller steps until the simulated R-wave again falls inside of the actual PRP, indicated by the pacing interval reverting to the constant of the selected pacer rate (PPM). The delay of the simulated R-wave is then manipulated in increasingly smaller steps down to 1 mS. The last ten bi-directional increments are averaged to compute the PRP of the applied demand mode pacemaker pulse.

**NOTE #1:** The Zoll Medical PD-Series transcutaneous pacemaker PRP measurements will be approximately 60 milliseconds across the entire range of applied pacer rates (PPM).

**NOTE #2:** The Zoll Medical M-Series transcutaneous pacemaker PRP measurements will be interactive from the lowest selectable pacer rate setting of 30 PPM up to approximate setting of 130 PPM. At applied pacer rates just above 130 PPM and up to the maximum of 180 PPM, the M-Series pacemaker exhibits a fixed delay response of approximately 45 milliseconds.

Testing of the paced refractory period (PRP) is usually reserved for preliminary device validation by the medical device manufacturer or whenever the healthcare facility deems it necessary to interrogate this demand mode pacer parameter. During routine preventive maintenance inspections at the hospital level, many medical device manufacturers usually do not require that this PRP test be performed.

The following chart is provided as a basic guideline to be used when testing the Zoll Medical M-Series transcutaneous pacemaker.

<b>Zoll Medical M-Series Pulse Rate / PRP TQA-17 Measurements</b>	
<b>Measured Pacemaker Pulse Rate</b>	<b>Measured Paced Refractory Period</b>
31 PPM	695 mS
40 PPM	510 mS
50 PPM	394 mS
61 PPM	321 mS
70 PPM	264 mS
81 PPM	225 mS
102 PPM	169 mS
122 PPM	131 mS
124 PPM	128 mS
130 PPM	101 mS
132 PPM	45 mS
135 PPM	45 mS
143 PPM	48 mS
153 PPM	46 mS
163 PPM	44 mS
174 PPM	46 mS
180 PPM	45 mS

**NOTE #3:** The Impulse 4000 is programmed to reference the leading edge of the pacemaker pulse for both the internal 50-Ohm test load and other TQA modules (unless indicated in the provided operating instructions.).

**Sensed Refractory Period:** The sensed refractory period (SRP) measurement reflects the capability of a demand mode external pacemaker to sense two sequential R-waves of the patient's cardiac (ECG) activity following the generation of a pacemaker pulse. This test is described within the standard DNI Impulse 4000 Operation manual.

## Installation

To begin using the TQA-17 Adapter module:

- Turn off the Impulse 4000
- Plug the adapter module into the "ADAPTER MODULE" receptacle on the left side of the Impulse 4000.
- Connect the adapter module input connector into the multi-function/pacemaker cable. Readings will be identical if the connections are reversed.

## Operating Instructions

Once the adapter has been connected, follow the operating instructions in the *Conducting the Manual Pacer Test* section in Chapter 3 of the Impulse 4000 Operating Manual.

## Test and Calibration

The TQA-17 adapter module requires no test or calibration.

## Theory of Operation

The adapter module contains the loads used for pacemaker testing. The adapter module interfaces to the Impulse 4000 with a special 33-pin connector. A brief description of the adapter module circuitry follows. Refer to the module schematics on pages 5 and 6 of this addendum


### Adapter Module Schematic- Sheet 1

There are from 1 to 4 loads (R1, R2, R3, and R4) which are controlled by relays K1, K2 and K3. No load can also be selected for open circuit testing. The selected load is connected through R9 and R10 to ground. The voltage across R9 and R10 is proportional to the input current and is measured by the Impulse 4000.


### Adapter Module Schematic- Sheet 2

This circuit detects an input overload caused by a defibrillator pulse. U1 is a voltage comparator with inputs set at  $\pm 4.1V$ . The current sense signal from R9 and R10 is attenuated so that an overload is greater than or equal to  $\pm 4.1V$  and will trip one or the other comparator. C3 and C4 hold the comparator in the tripped state for about 0.7 seconds. The impulse 4000 signals the user of an overload by turning on speaker LS1.

# TQA-17 Component Locator

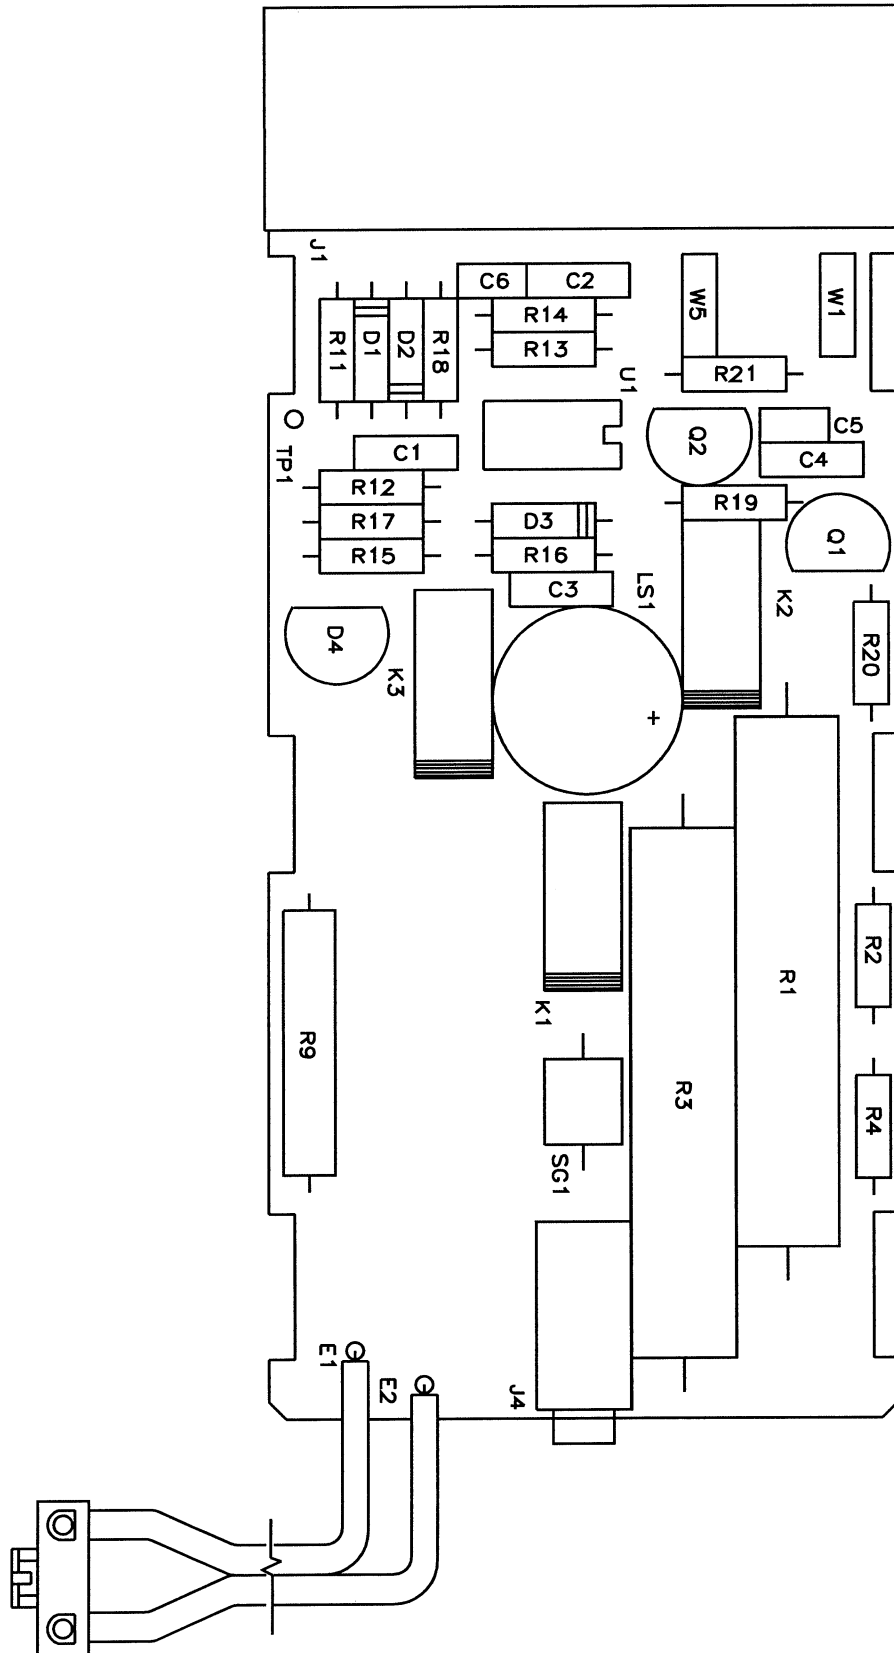



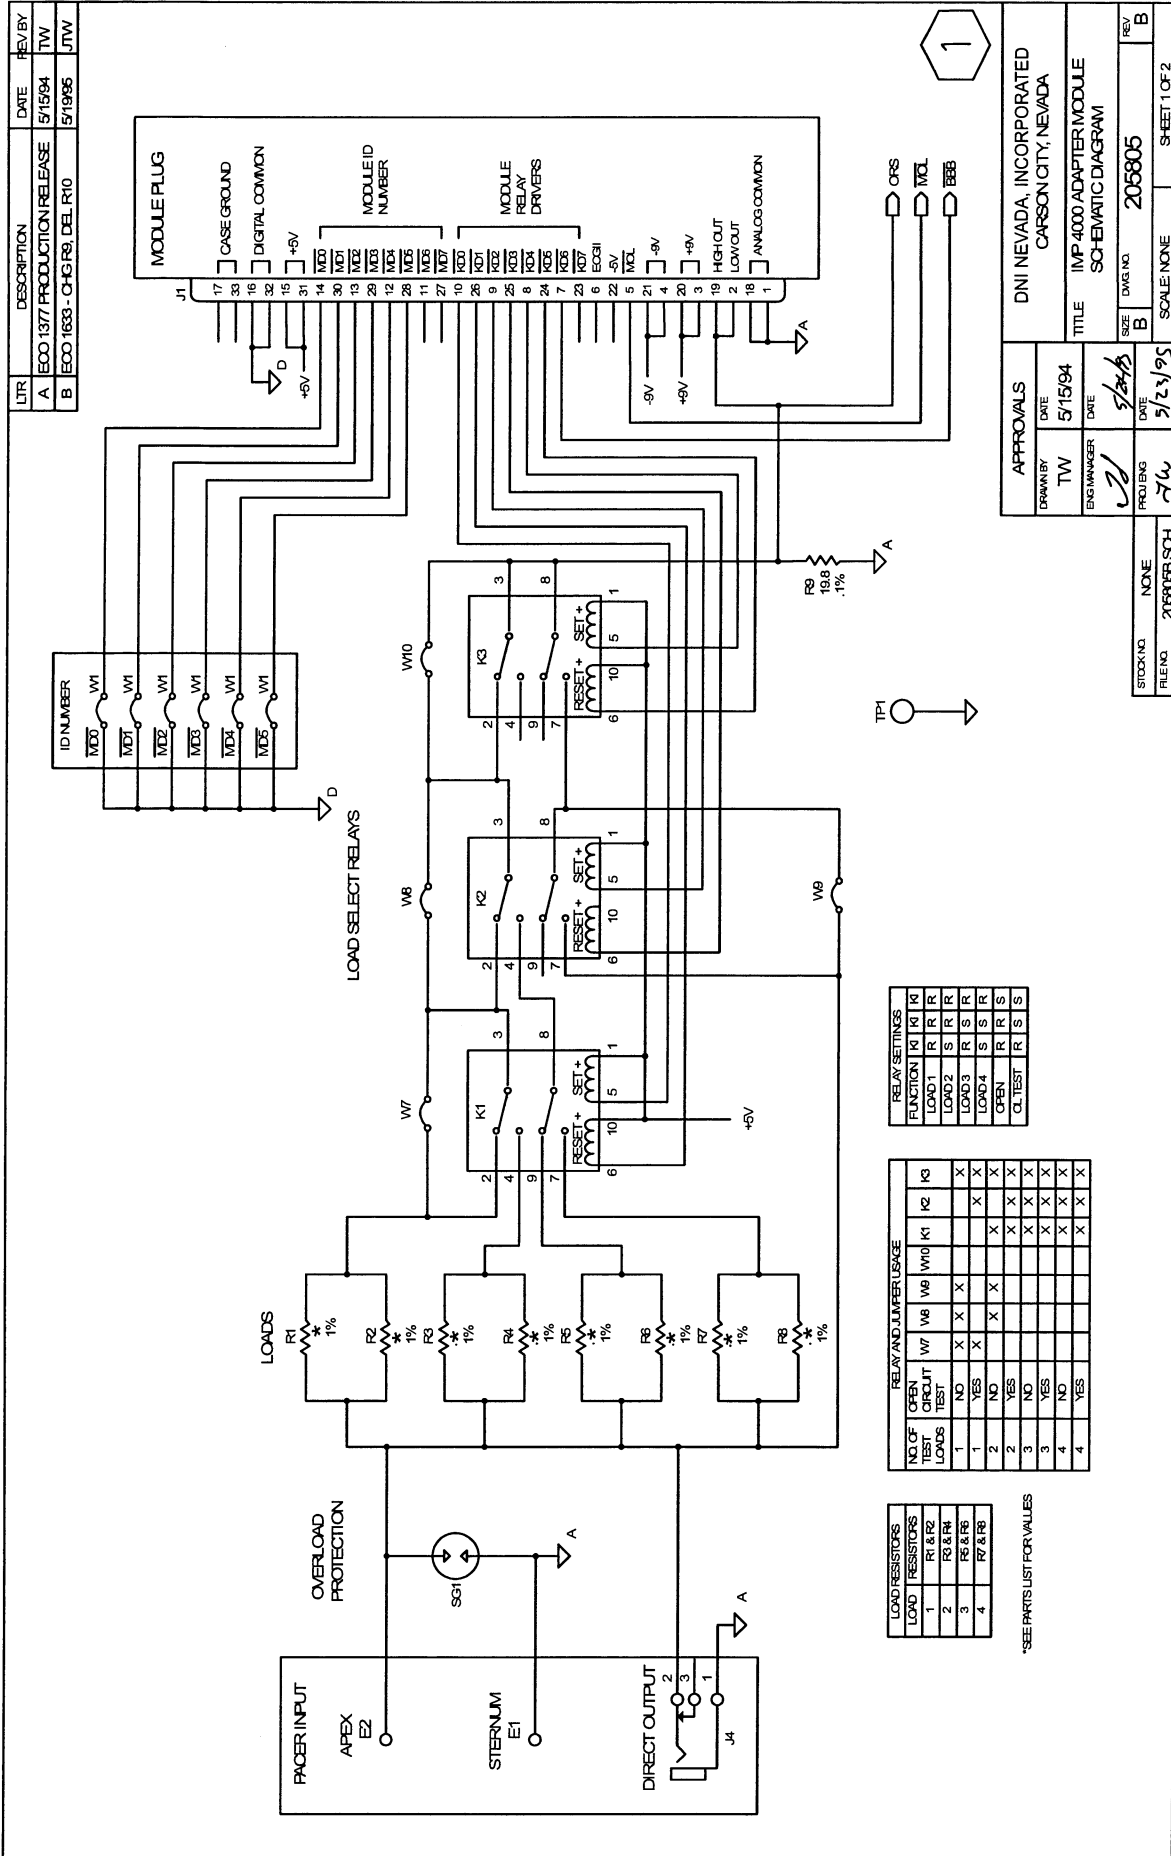

RELAY SETTINGS				
FUNCTION	K1	K2	K3	K4
LOAD 1	R	R	R	R
LOAD 2	S	R	R	R
LOAD 3	R	S	R	R
LOAD 4	R	S	R	R
OPEN	R	R	R	R
CL TEST	R	S	R	S

RELAY AND JUMPER USAGE								
NO. OF TEST LOADS	OPEN CIRCUIT TEST	W7	W8	W9	W10	K1	K2	K3
1	NO	X	X	X			X	X
2	YES	X	X	X			X	X
3	NO				X	X	X	X
4	YES				X	X	X	X
4	NO						X	X
4	YES						X	X

LOAD RESISTORS			
LOAD	R1 & R2	R3 & R4	R5 & R8
1			
2			
3			
4			


\*SEE PARTS LIST FOR VALUES

1

APPROVALS		DNI NEVADA, INCORPORATED CARSON CITY, NEVADA	
DRAWN BY TW	DATE 5/15/94	TITLE IMP 4000 ADAPTER MODULE SCHEMATIC DIAGRAM	REV B
ENGINEER [Signature]	DATE 5/23/95	DWG NO. 205805	SCALE NONE
PROJ. MGR. TW	DATE 5/23/95	FILE NO. 205805B	SHEET 1 OF 2

STOCK NO. NONE  
FILE NO. 205805B

LTR	DESCRIPTION	DATE	REV BY
A	ECO 1377 PRODUCTION RELEASE	5/15/94	TW
B	ECO 1633 - CHG R3, DEL R10	5/19/95	JTW

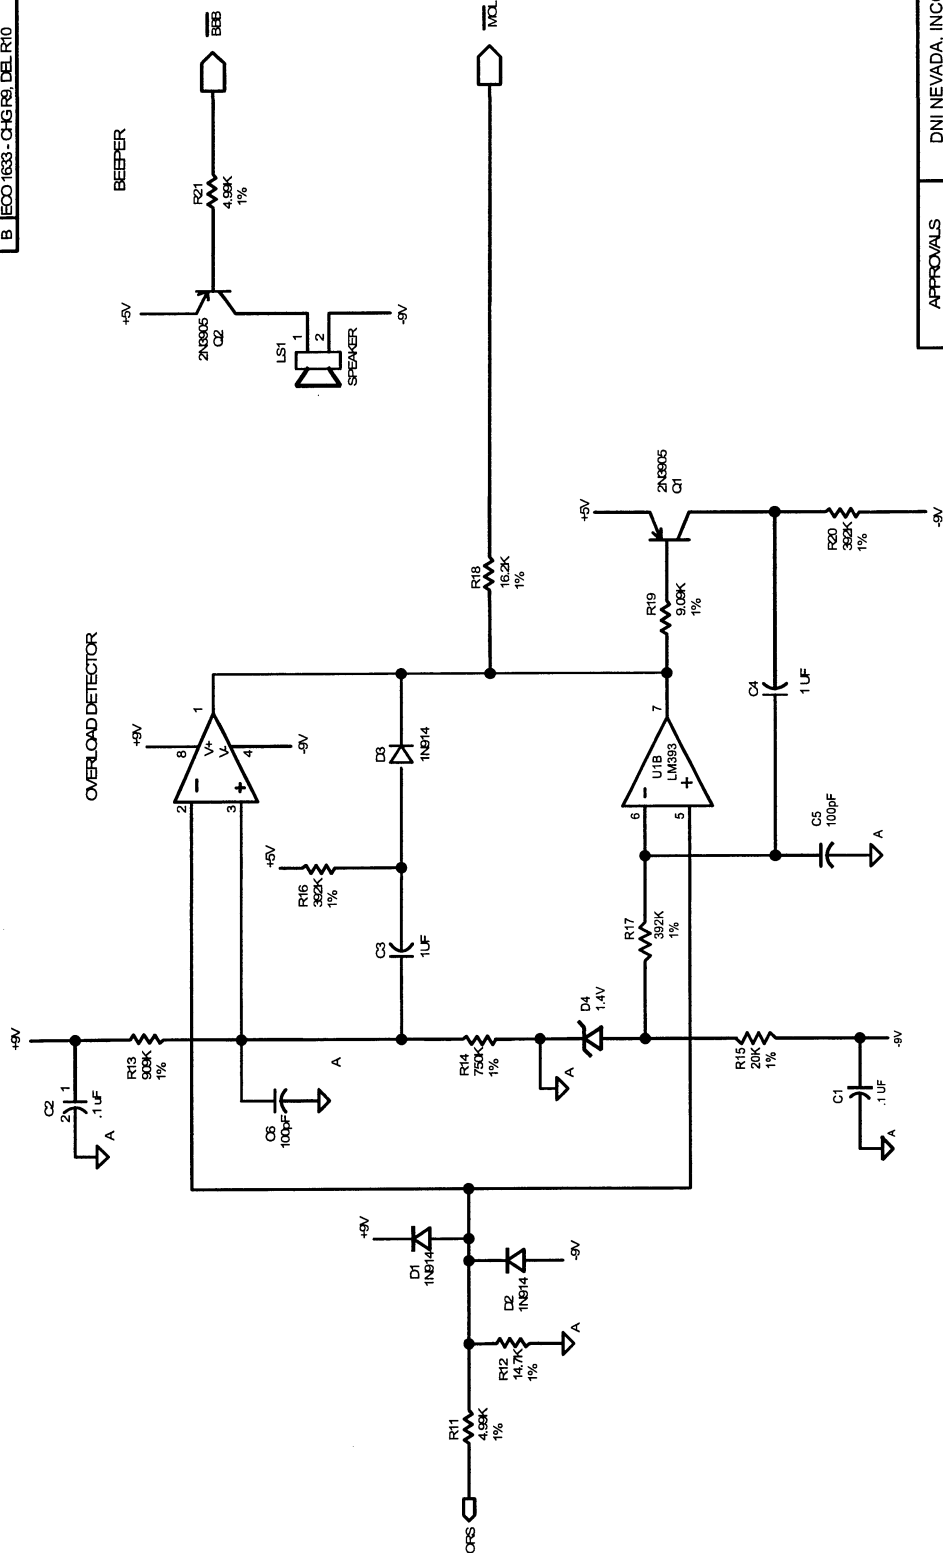

2

APPROVALS		DNI NEVADA, INCORPORATED CARSON CITY, NEVADA	
DRAWN BY	DATE	DATE	REV
TW	5/15/94	5/15/94	B
DESIGNER	DATE	TITLE	SCALE
JTW	5/15/95	IMP 4000 ADAPTER MODULE SCHEMATIC DIAGRAM	NONE
PROBING	DATE	SIZE	SHEET 2 OF 2
JTW	5/21/95	206805	

STANDARD	FILE NO.	SCALE
NONE	206805SCH	NONE

NOTE: NOT ALL MODULES HAVE THESE PARTS INSTALLED

## TQA-17 Parts List

REFDES	PARTNUM	DESCRIPTION	QTY	DWGNUM
C001	0418-0008	CAP CERA 0.1MF 50V	1	
C002	0418-0008	CAP CERA 0.1MF 50V	1	
C003	0418-0009	CAP 1MF 50V CERAMIC	1	
C004	0418-0009	CAP 1MF 50V CERAMIC	1	
C005	0418-0076	100PF 50V CERA	1	
C006	0418-0076	100PF 50V CERA	1	
D001	2101-0010	DIODE 1N914/1N4148	1	
D002	2101-0010	DIODE 1N914/1N4148	1	
D003	2101-0010	DIODE 1N914/1N4148	1	
D004	2102-0045	DIODE ZEN LM4040DIZ-4.1 4.1V	1	
J004	2719-0207	PHONE JACK MINI RT PC MT	1	
K001	2562-0016	RELAY DUAL LATCHING MINI PC 5V	1	
K002	2562-0016	RELAY DUAL LATCHING MINI PC 5V	1	
K003	2562-0016	RELAY DUAL LATCHING MINI PC 5V	1	
LS01	0801-0009	BEEPER 3-16 VDC PC MT	1	
Q001	2112-0007	TRANS PNP 2N3905	1	
Q002	2112-0007	TRANS PNP 2N3905	1	
R001	0316-0246	RES MF 4W 1% 80.6	1	
R002	0307-1214	RES MF 1/8W 1% 16.2K	1	
R003	0316-0251	OHM RES MF 4W 1% 1000 OHM	1	
R004	0307-1684	RES MF 1/8W 1% 49.9K	1	
R009	0320-0065	RES WW 3W .1% 19.8	1	
R011	0307-1683	RES MF 1/8W 1% 4.99K	1	
R012	0307-1174	RES MF 1/8W 1% 14.7K	1	
R013	0307-1935	RES MF 1/8W 1% 909K	1	
R014	0307-1855	RES MF 1/8W 1% 750K	1	
R015	0307-1304	RES MF 1/8W 1% 20K	1	
R016	0307-1585	RES MF 1/8W 1% 392K	1	
R017	0307-1585	RES MF 1/8W 1% 392K	1	
R018	0307-1214	RES MF 1/8W 1% 16.2K	1	
R019	0307-1933	RES MF 1/8W 1% 9.09K	1	
R020	0307-1585	RES MF 1/8W 1% 392K	1	
R021	0307-1683	RES MF 1/8W 1% 4.99K	1	
SG01	1010-0001	SURGE ARRESTER, AC240L	1	
TP01	2714-0002	TERM SWAGE 10-877-2	1	
U001	2118-0045	IC DUAL COMPARATOR LM393N	1	
W001	3015-0001	INSULATED JUMPER .200	1	
W005	3015-0001	INSULATED JUMPER .200	1	
ZZ01	3010-0452	CABLE ASSY, TQA-2, ZOLL	1	205836
ZZ02	5001-0545	TQA DIRECT OUTPUT LABEL	1	205816
ZZ03	5001-0547	SERIAL COVER LABEL .8 X .8	1	205806
ZZ04	5001-0762	TQA-17 MODULE LABEL	1	206031
ZZ05	5001-0763	TQA-17 SERIAL NO. SLIP	1	206032
ZZ06	5027-0238	TQA-6 CASE MODIFICATION	1	205893
ZZ07	5201-0333	TQA MODULE PCB - BASIC	1	205814

# IMPULSE 4000 PACEMAKER PLUG-IN ADAPTER MODULE TQA-18

The TQA-18 is designed specifically for testing the Medical Research Laboratories (MRL) Portable Intensive Care (PIC) System and the Spacelabs Burdick Medic™ 6 cardiac resuscitation devices optionally equipped with the external transcutaneous pacemaker function using the multi-purpose R2/Darox disposable electrodes.

## General Information

When the TQA-18 plug-in adapter module is utilized with the Impulse 4000, the biomedical technician can effectively perform functional tests on the above MRL and Spacelabs-Burdick external transcutaneous pacemakers. The TQA-18 provides a safe and convenient method of directly connecting the pacemaker electrode cable to the analyzer, selecting the prescribed test load resistance of 500 ohms and applying the appropriate measurement algorithms. All available measurements can easily be conducted using the TQA-18 during Impulse 4000 manual, internal autosequence and remote operation tests.

## Specifications

DNI Nevada Part Number:	9513-0263
Test Load Values:	500 $\Omega$ , $\pm$ 1% (M-Series) 4 Watts (Maximum)
Defibrillation Input Protection:	Yes (Internal buzzer momentarily annunciates module overload).
Oscilloscope Output(s):	Two (2) Module Output - Direct measurement across selected test load. Output connector type: 2.5-mm subminiature phone jack  Impulse 4000 Output: One Volt Peak = 40 mA applied. Output connector type: BNC
Impulse 4000 Firmware Level:	1.06 (minimum)
Power:	No internal power supply. DC power supplied through Impulse 4000 module interface connection.
Case:	High Impact Plastic; Black
Weight:	0.15lb, 68g.
Dimensions:	4.3" x 2.0" x 0.9" (10.92cm x 5.08cm x 2.29cm)
Optional Accessory:	Module Output Cable (2.5mm subminiature phone jack to BNC cable) DNI part number: 3010-0442

## Measurement Technique

**Waveform Description:** The MRL PIC System and the Spacelabs Burdick-Medic 6 external transcutaneous pacemakers utilize a current pulse of approximately 20 milliseconds in duration.

**Applied Pacemaker Polarity:** All measurements are conducted regardless of polarity.

**Width Algorithm:** Measurement is made at the 50% amplitude point of the applied pacemaker pulse directly across the leading and trailing edges.

*Width Accuracy:*  $\pm 0.5mS$  (Assumes Impulse 4000 specification)

**Amplitude Algorithm:** The pacemaker amplitude measurement is initiated at the 50% amplitude point of the leading edge across the horizontal peak down to the 50% amplitude point of the trailing edge. This segment of the pacemaker pulse waveform is digitized at 50 microsecond intervals. All of these samples are averaged to yield the amplitude value in milliamperes.

*Amplitude Accuracy:*  $\pm 1\%$  of reading + 2.0 mA (Assumes Impulse 4000 specification)

**Paced Refractory Period:** The paced refractory period (PRP) measurement reflects the capability of a demand mode pacemaker to sense the patient's cardiac (ECG) activity following the generation of a pacemaker pulse. The final PRP measurement is referenced at the trailing edge (downslope) of the pacemaker pulse and terminates at the peak of the simulated ECG R-wave after the following interactive simulation and pulse measurement sequence is completed:

First, the analyzer measures the applied pacemaker pulse interval, computes the pulse rate (PPM) and then generates an ECG R-wave delayed in increasing 32 millisecond increments after the pacemaker pulse until it is sensed by the pacemaker indicated by a now prolonged pacer pulse interval. (This period is the approximate PRP.) To best compute the actual PRP, the coupling interval is reduced in smaller steps until the simulated R-wave again falls inside of the actual PRP, indicated by the pacing interval reverting to the constant of the selected pacer rate (PPM). The delay of the simulated R-wave is then manipulated in increasingly smaller steps down to 1 mS. The last ten bi-directional increments are averaged to compute the PRP of the applied demand mode pacemaker pulse.

**NOTE :** The Impulse 4000 is programmed to reference the leading edge of the pacemaker pulse for both the internal 50-Ohm test load and other TQA modules (unless indicated in the provided operating instructions.).

**Sensed Refractory Period:** The sensed refractory period (SRP) measurement reflects the capability of a demand mode external pacemaker to sense two sequential R-waves of the patient's cardiac (ECG) activity following the generation of a pacemaker pulse. This test is described within the standard DNI Impulse 4000 Operation manual.

## Installation

To begin using the TQA-18 Adapter module:

- Turn off the Impulse 4000
- Plug the adapter module into the "ADAPTER MODULE" receptacle on the left side of the Impulse 4000.
- Connect the adapter module input connector into the multi-function/pacemaker cable. Readings will be identical if the connections are reversed.

## Operating Instructions

Once the adapter has been connected, follow the operating instructions in the *Conducting the Manual Pacer Test* section in Chapter 3 of the Impulse 4000 Operating Manual.

## Test and Calibration

The TQA-18 adapter module requires no test or calibration.

## Theory of Operation

The adapter module contains the loads used for pacemaker testing. The adapter module interfaces to the Impulse 4000 with a special 33-pin connector. A brief description of the adapter module circuitry follows. Refer to the module schematics on pages 5 and 6 of this addenda.


### Adapter Module Schematic- Sheet 1


There are from 1 to 4 loads (R1, R2, R3, and R4) which are controlled by relays K1, K2 and K3. No load can also be selected for open circuit testing. The selected load is connected through R9 and R10 to ground. The voltage across R9 and R10 is proportional to the input current and is measured by the Impulse 4000.

### Adapter Module Schematic- Sheet 2

This circuit detects an input overload caused by a defibrillator pulse. U1 is a voltage comparator with inputs set at  $\pm 4.1V$ . The current sense signal from R9 and R10 is attenuated so that an overload is greater than or equal to  $\pm 4.1V$  and will trip one or the other comparator. C3 and C4 hold the comparator in the tripped state for about 0.7 seconds. The impulse 4000 signals the user of an overload by turning on speaker LS1.

# TQA-18 Component Locator

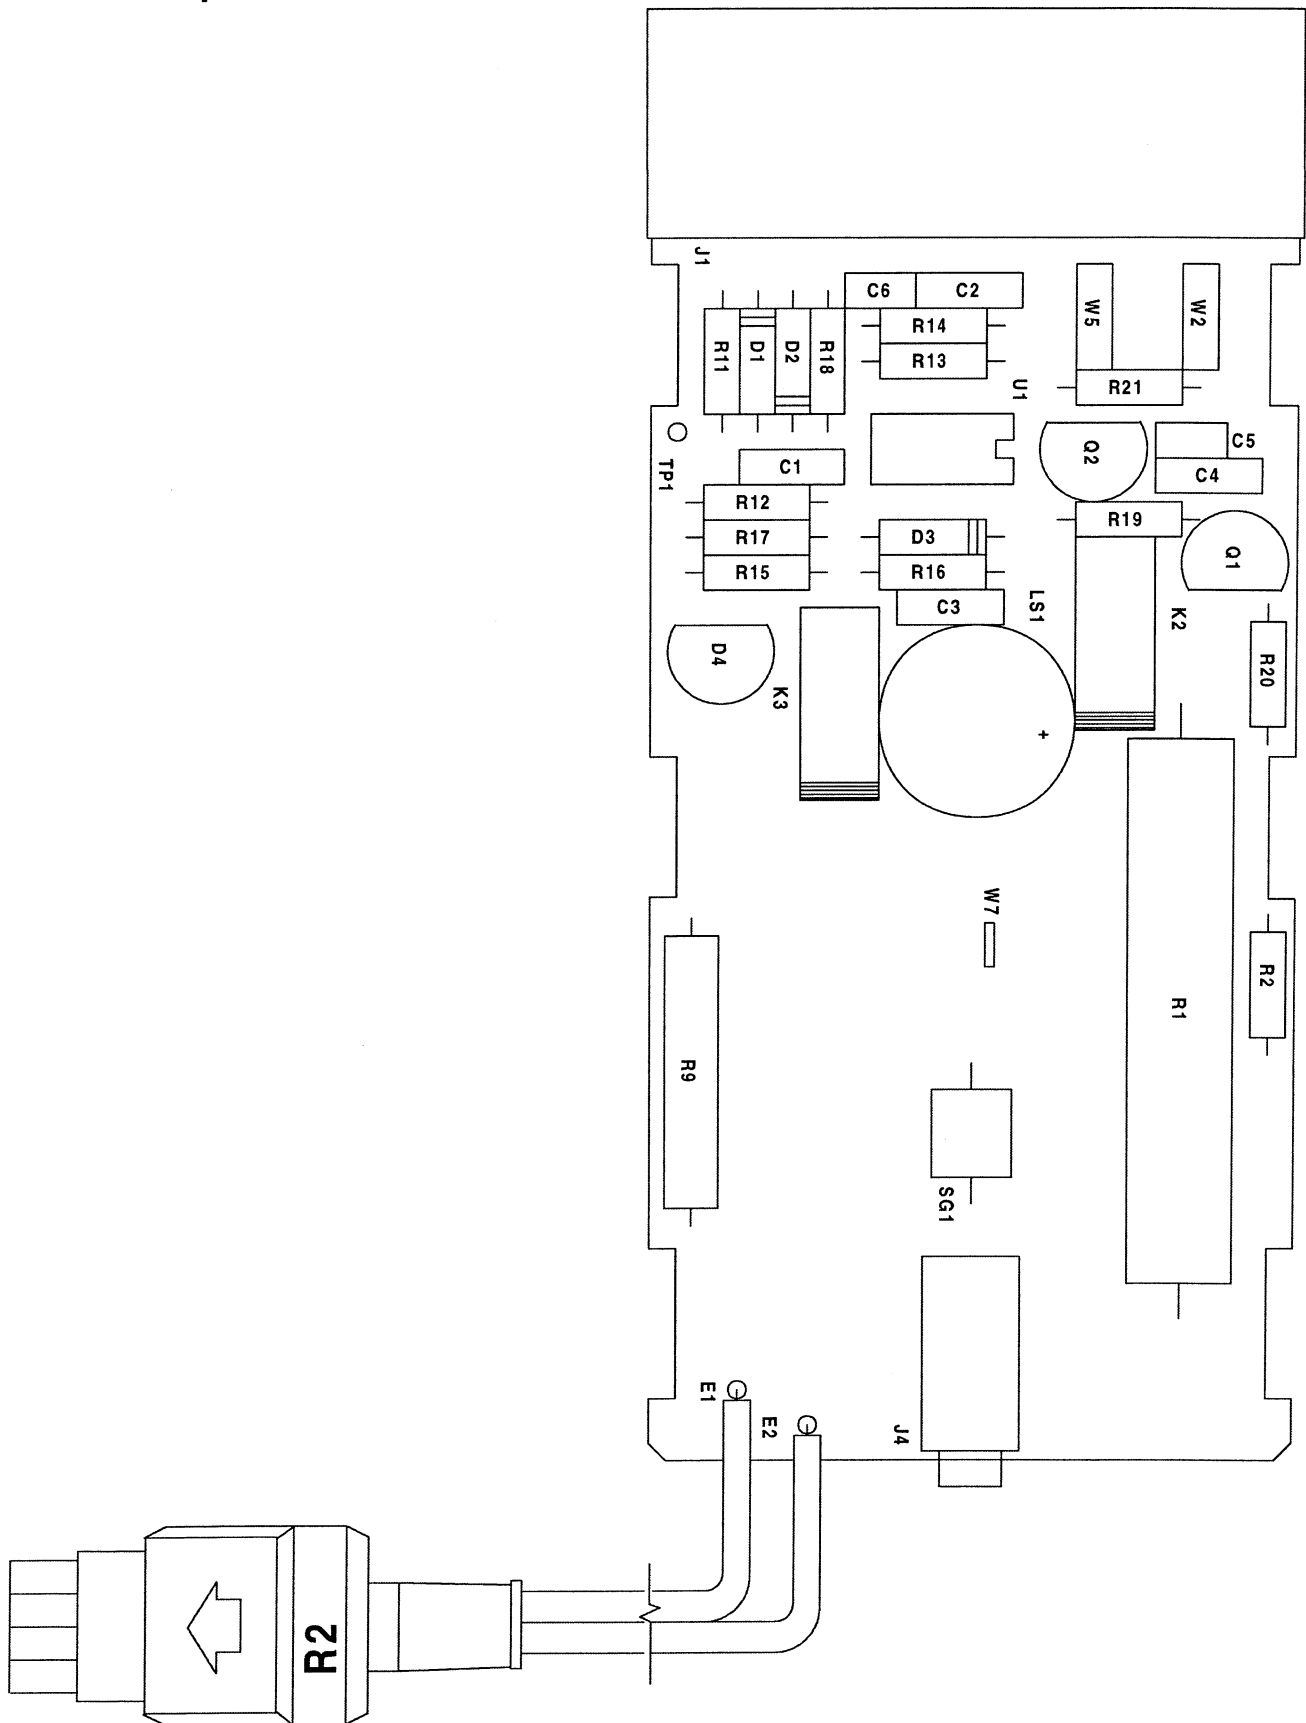

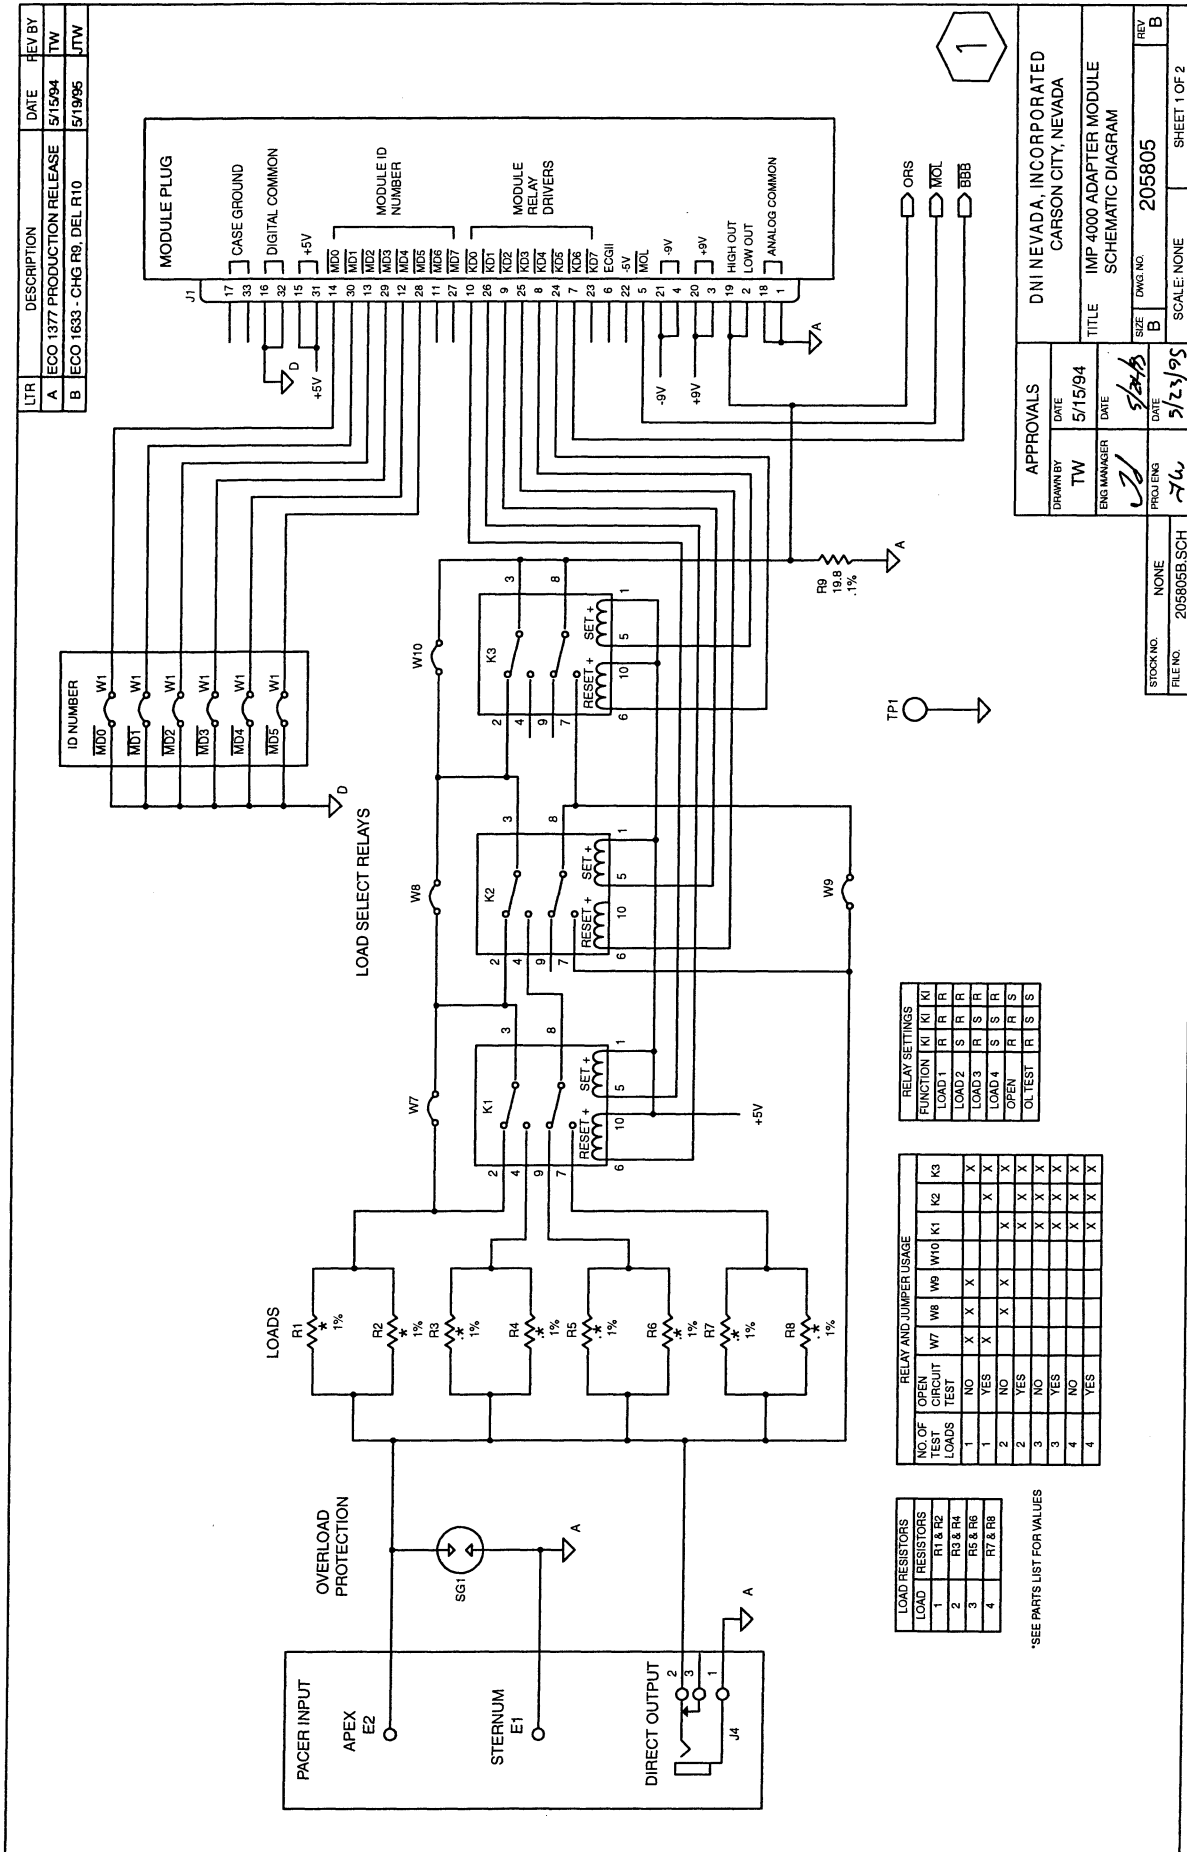

LTR	DESCRIPTION	DATE	REV BY
A	ECO 1377 PRODUCTION RELEASE	5/15/94	TW
B	ECO 1633 - CHG R9, DEL R10	5/19/95	JTW


APPROVALS		DATE	
DRAWN BY	TW	DATE	5/15/94
ENGIN MANAGER	JTW	DATE	5/23/95
PROJ ENG	JTW	DATE	5/23/95

STOCK NO.	FILE NO.	SCALE	SHEET
NONE	205805B.SCH	NONE	1 OF 2

DNI NEVADA, INCORPORATED	
CARSON CITY, NEVADA	IMP 4000 ADAPTER MODULE
TITLE	SCHEMATIC DIAGRAM
DWG. NO.	205805
REV	B



LTR	DESCRIPTION	DATE	REV BY
A	ECO 1377 PRODUCTION RELEASE	5/15/94	TW
B	ECO 1633 - CHG F19, DEL R10	5/19/95	JTW

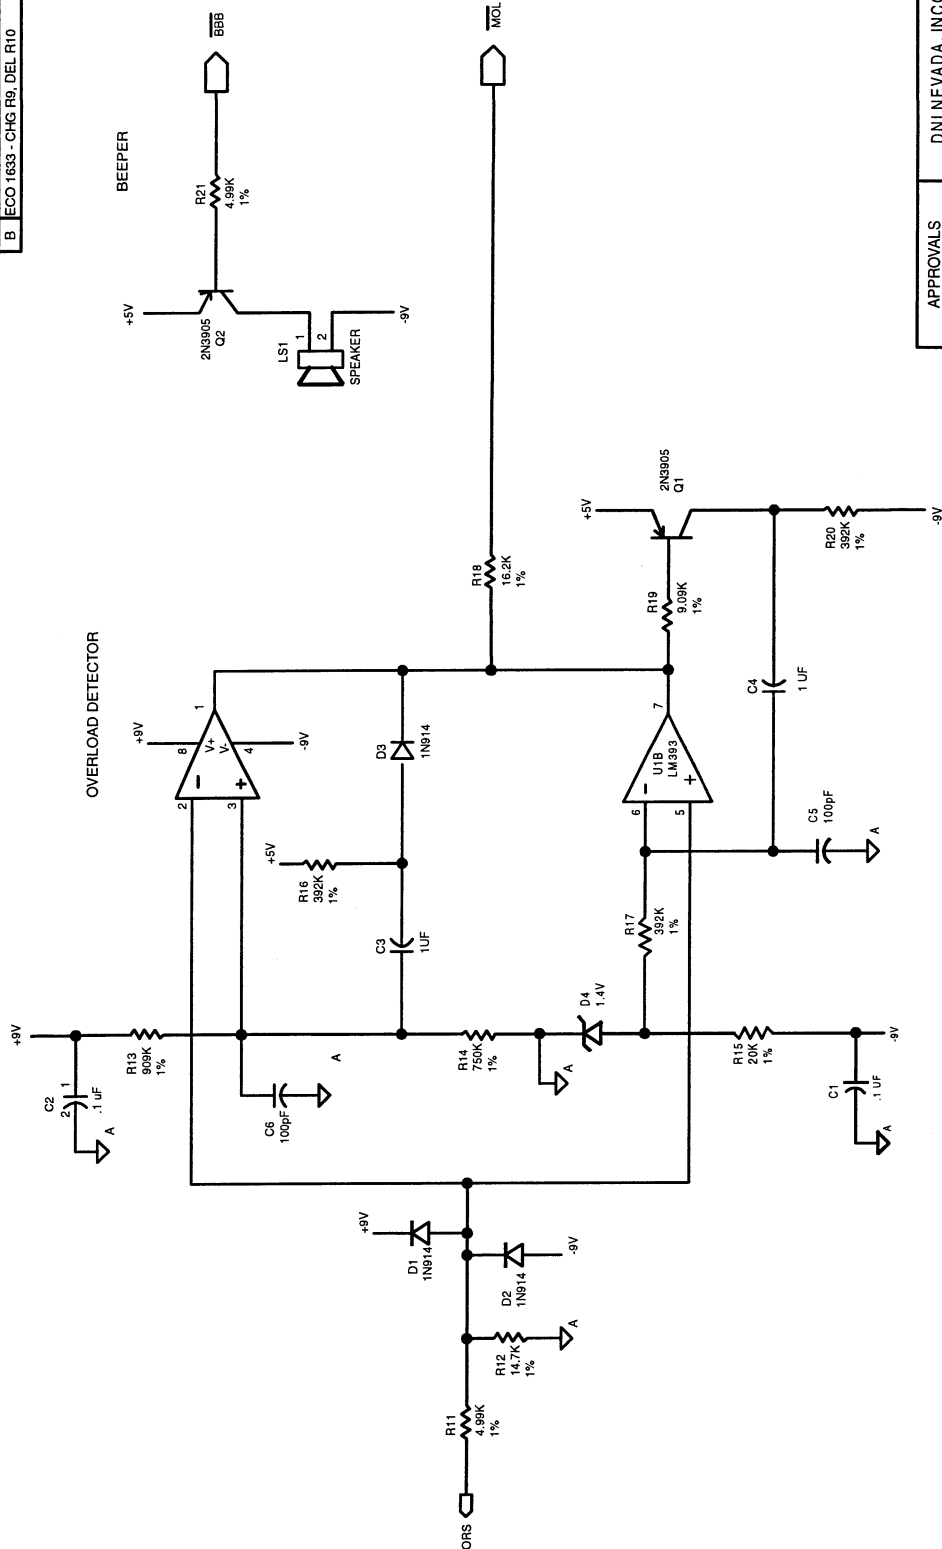

2

APPROVALS		DNI NEVADA, INCORPORATED CARSON CITY, NEVADA	
DRAWN BY TW	DATE 5/15/94	TITLE IMP 4000 ADAPTER MODULE SCHEMATIC DIAGRAM	REV B
ENG. MANAGER <i>[Signature]</i>	DATE 5/23/95	SIZE B	SCALE: NONE
PROJ. ENG. TW	FILE NO. 205805	SHEET 2 OF 2	

NOTE: NOT ALL MODULES HAVE THESE PARTS INSTALLED

**TQA-18 Parts List**

REFDES	PARTNUM	DESCRIPTION	QTY	DWGNUM
C001	0418-0008	CAP CERA 0.1MF 50V	1	
C002	0418-0008	CAP CERA 0.1MF 50V	1	
C003	0418-0009	CAP 1MF 50V CERAMIC	1	
C004	0418-0009	CAP 1MF 50V CERAMIC	1	
C005	0418-0076	100PF 50V CERA	1	
C006	0418-0076	100PF 50V CERA	1	
D001	2101-0010	DIODE 1N914/1N4148	1	
D002	2101-0010	DIODE 1N914/1N4148	1	
D003	2101-0010	DIODE 1N914/1N4148	1	
D004	2102-0045	DIODE ZEN LM4040DIZ-4.1 4.1V	1	
J004	2719-0207	PHONE JACK MINI RT PC MT	1	
K003	2562-0016	RELAY DUAL LATCHING MINI PC 5V	1	
LS01	0801-0009	BEEPER 3-16 VDC PC MT	1	
Q001	2112-0007	TRANS PNP 2N3905	1	
Q002	2112-0007	TRANS PNP 2N3905	1	
R001	0316-0249	RES MF 4W 1% 487 OHM	1	
R002	0307-1541	RES MF 1/8W 1% 33.2K	1	
R009	0320-0065	RES WW 3W .1% 19.8	1	
R011	0307-1683	RES MF 1/8W 1% 4.99K	1	
R012	0307-1174	RES MF 1/8W 1% 14.7K	1	
R013	0307-1935	RES MF 1/8W 1% 909K	1	
R014	0307-1855	RES MF 1/8W 1% 750K	1	
R015	0307-1304	RES MF 1/8W 1% 20K	1	
R016	0307-1585	RES MF 1/8W 1% 392K	1	
R017	0307-1585	RES MF 1/8W 1% 392K	1	
R018	0307-1214	RES MF 1/8W 1% 16.2K	1	
R019	0307-1933	RES MF 1/8W 1% 9.09K	1	
R020	0307-1585	RES MF 1/8W 1% 392K	1	
R021	0307-1683	RES MF 1/8W 1% 4.99K	1	
SG01	1010-0001	SURGE ARRESTER, AC240L	1	
TP01	2714-0002	TERM SWAGE 10-877-2	1	
U001	2118-0045	IC DUAL COMPARATOR LM393N	1	
W002	3015-0001	INSULATED JUMPER .200	1	
W005	3015-0001	INSULATED JUMPER .200	1	
W007	3015-0018	UN-INSULATED JUMPER .100	1	
ZZ01	3010-0452	CABLE ASSY, TQA-2, ZOLL	1	205836
ZZ02	5001-0545	TQA DIRECT OUTPUT LABEL	1	205816
ZZ03	5001-0547	SERIAL COVER LABEL .8 X .8	1	205806
ZZ04	5001-0764	TQA-18 MODULE LABEL	1	206045
ZZ05	5001-0765	TQA-18 SERIAL NO. SLIP	1	206046
ZZ06	5027-0238	TQA-6 CASE MODIFICATION	1	205893
ZZ07	5201-0333	TQA MODULE PCB - BASIC	1	205814