


# DANCOM

---

---

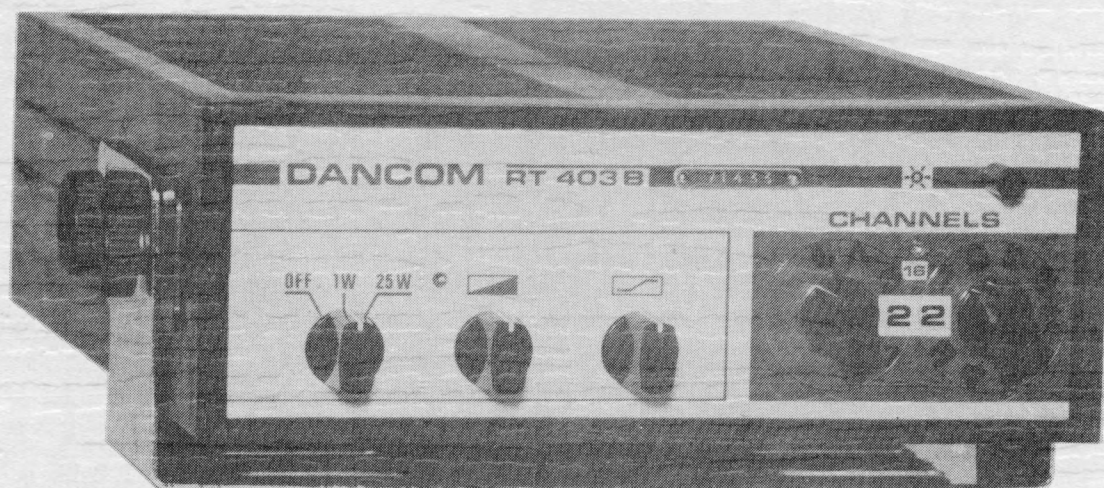

VHF radiotelephone

RT 403 B

**DANCOM**

*Communication - Equipment*

9530 STØVRING


DENMARK

Phone 08-37 19 22

Telex 69798

60 CHANNELS  
25 WATTS

# POWER SUPPLY 220

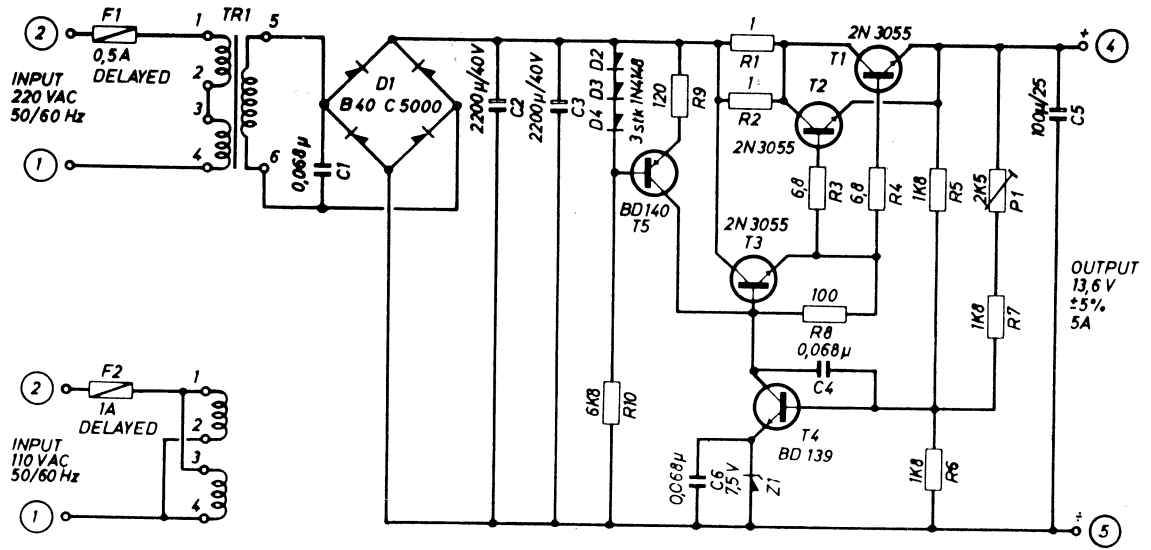

# HANDBOOK FOR RT 403B

## CONTENTS

### GENERAL DESCRIPTION

Technical data RT 403 B	1
Top and bottom view	1
Operation	2
Installation and mounting methods	3
Wiring diagram	4
Frequency tables	5
PROM input/output tables	6

### CIRCUIT DESCRIPTION

<u>SYNTHESIZER 410.</u>	
Reference Oscillator	7
Fixed frequency Divider	7
Phase discriminator	7
Integrator filter	7
Data controlled frequency Divider	7
Synthesizer Amplifier	8
Synthesizer Mixer	8
Synthesizer Oscillator	8
Multiplier	8
<u>CHANNEL-UNIT 436.</u>	
Decimal to BCD Coder	8
Group Selector	9
Combinatoric	9
PROM	9
PROM output	9
<u>FUNCTION-UNIT 437.</u>	
Power reduction circuit	9
Key and blocking circuit	10
Auto CH 16	10
Check of Dual Watch	10
<u>EXCITER 427.</u>	
Modulation Amplifier	10
Crystal modulation	10
Modulator Driver	11
VCO	11
TX-Mixer	11

<u>VHF-DRIVER 412.</u>	11
<u>VHF POWER AMPLIFIER 401.</u>	11
<u>LOW-PASS-FILTER 420.</u>	11
<u>RECEIVER.</u>	11
<u>PRIVATE CHANNELS.</u>	11-12

### TROUBLE SHOOTING

Function troubles	13
Synthesizer troubles	13
Channellogic troubles	13
Transmitter troubles	14
Receiver troubles	14

### ALIGNMENT

Alignment of Synthesizer and VCO	15
Alignment of Exciter	15
Alignment of VHF Driver	16
Alignment of Power Ampl.	16
Unstabilitydetector	16
Alignment of Receiver	17
Alignment of Channel Freq.	17

### DIAGRAMS

Synthesizer 410	18
Channel-Unit 436	19
Function-Unit 437	20
VHF-Exciter 427	21
VHF-Driver 412	22
Power Amplifier 401	23
RF-IF Amplifier 413	24
AF-Amplifier	25
Power Supply 220	26
Power Supply 24B	26

### PARTS LISTS

27-33


## GENERAL DESCRIPTION

### TECHNICAL DATA RT 403B


#### GENERAL:

Modes of operation:	Simplex/Semi-duplex Duplex by means of external filter
Frequency range:	Channels 1-28 <sup>x</sup> Channels 60-88 except 75 and 76  x) (Channels 15 and 17 low power)
Private channels:	5
Bandwidth:	2 MHz
Frequency tolerance:	< $\pm 10$ ppm -25°C to +55°C
Power Supply (std.):	12 VDC battery + 30% - 10%  Consumption on 12 VDC operation receive app. 0,8 amp transmit app. 5,5 amps
Power Supplies optional:	External 24 VDC and External 110/220 VAC
Dimensions and weight:	Height: 69 mm Width: 188 mm Depth: 275 mm  Weight: 3,0 kg
Dimmer:	Controlled from front panel

TOP VIEW OF RT 403B

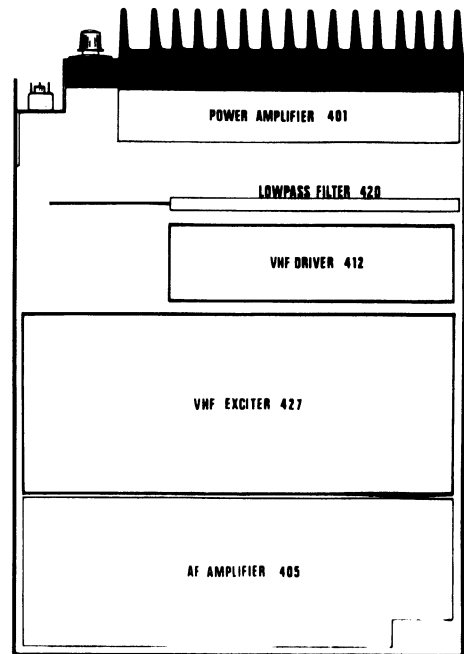

BOTTOM VIEW OF RT 403B

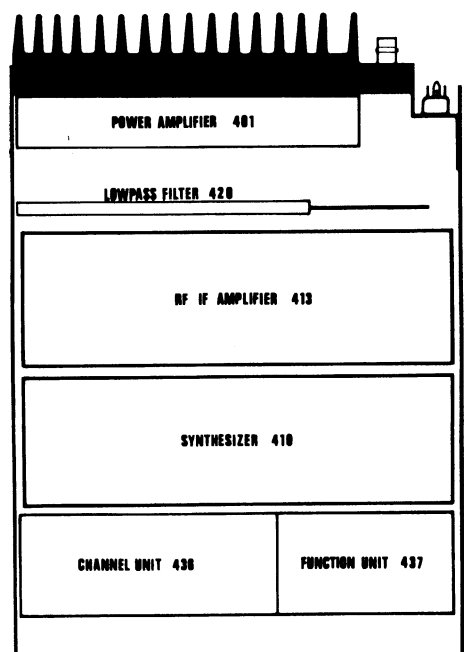


#### TRANSMITTER:

Type of emission:	P.M.
Power output:	25 watts
Power output reduced:	< 1 watt
Antenna impedance:	50 ohms
Audio response:	+ 1dB (300-3000 Hz) - 3dB
Audio distortion:	$\leq 5\%$
Adjacent channel power:	< -70 dB
Conducted spurious:	< -70 dB
Case radiation:	< 300 uV/meter
Microphone impedance:	200 ohms microtelephone
Frequency deviation:	< $\pm 5$ KHz

#### RECEIVER:

AF output power:	4 watts in 4 ohms external speaker
Audio distortion:	< 5%
Squelch:	Controlled from front panel
Usable squelch sensitivity:	6 dB below standard receiver sensitivity

## OPERATION.

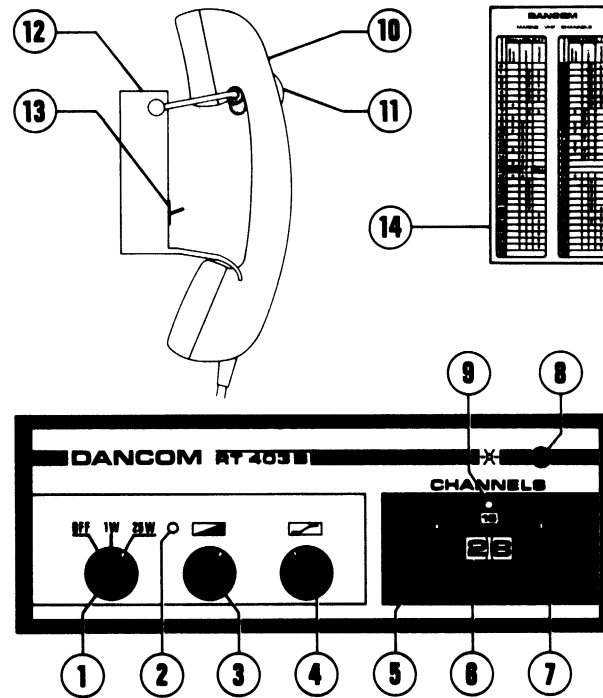

- |  |   |
|--|---|
| <p>① MAIN SWITCH<br/>In position 1 W or 25 W the station is stand-by, and the dial light is turned on. Transmission with reduced power in position 1 W. Transmission with full power in position 25 W.</p> <p>② TRANSMIT INDICATOR<br/>Is alight when the transmitter operates.</p> <p>③ AF-GAIN CONTROL<br/>Here the power in loudspeaker and telephone is adjusted to a suitable level.</p> <p>④ SQUELCH CONTROL<br/>When turned clockwise, the loudspeaker and the telephone are only on when there is a signal on the selected channel.</p> <p>⑤ CHANNEL SELECTOR<br/>"Ten" positions.</p> <p>⑦ CHANNEL SELECTOR<br/>"One" position.</p> | <p>⑧ DIMMER CONTROL<br/>Regulates the dial light in ⑥</p> <p>⑨ CHANNEL 16 - SAFETY AND CALLING<br/>When the radio is operating on channel 16, the indicator will be alight.</p> <p>⑩ MICROTELEPHONE</p> <p>⑪ KEY<br/>For transmitter.</p> <p>⑫ CRADLE<br/>When the microtelephone is in cradle, the KEY circuit is switched off. LOUDSPEAKER is coupled in. CH 16 watch is released.</p> <p>⑬ CH 16<br/>AUTO: CH 16 watch ON.<br/>NORM: CH 16 watch OFF.</p> <p>⑭ CHANNEL CARD<br/>With all international channels.</p> |
|--|---|

# INSTALLATION.




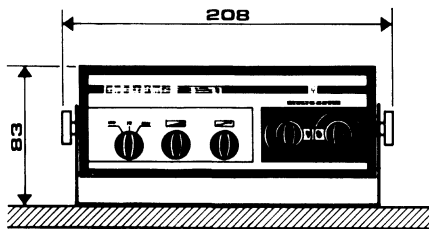



TABLE TOP MOUNTING

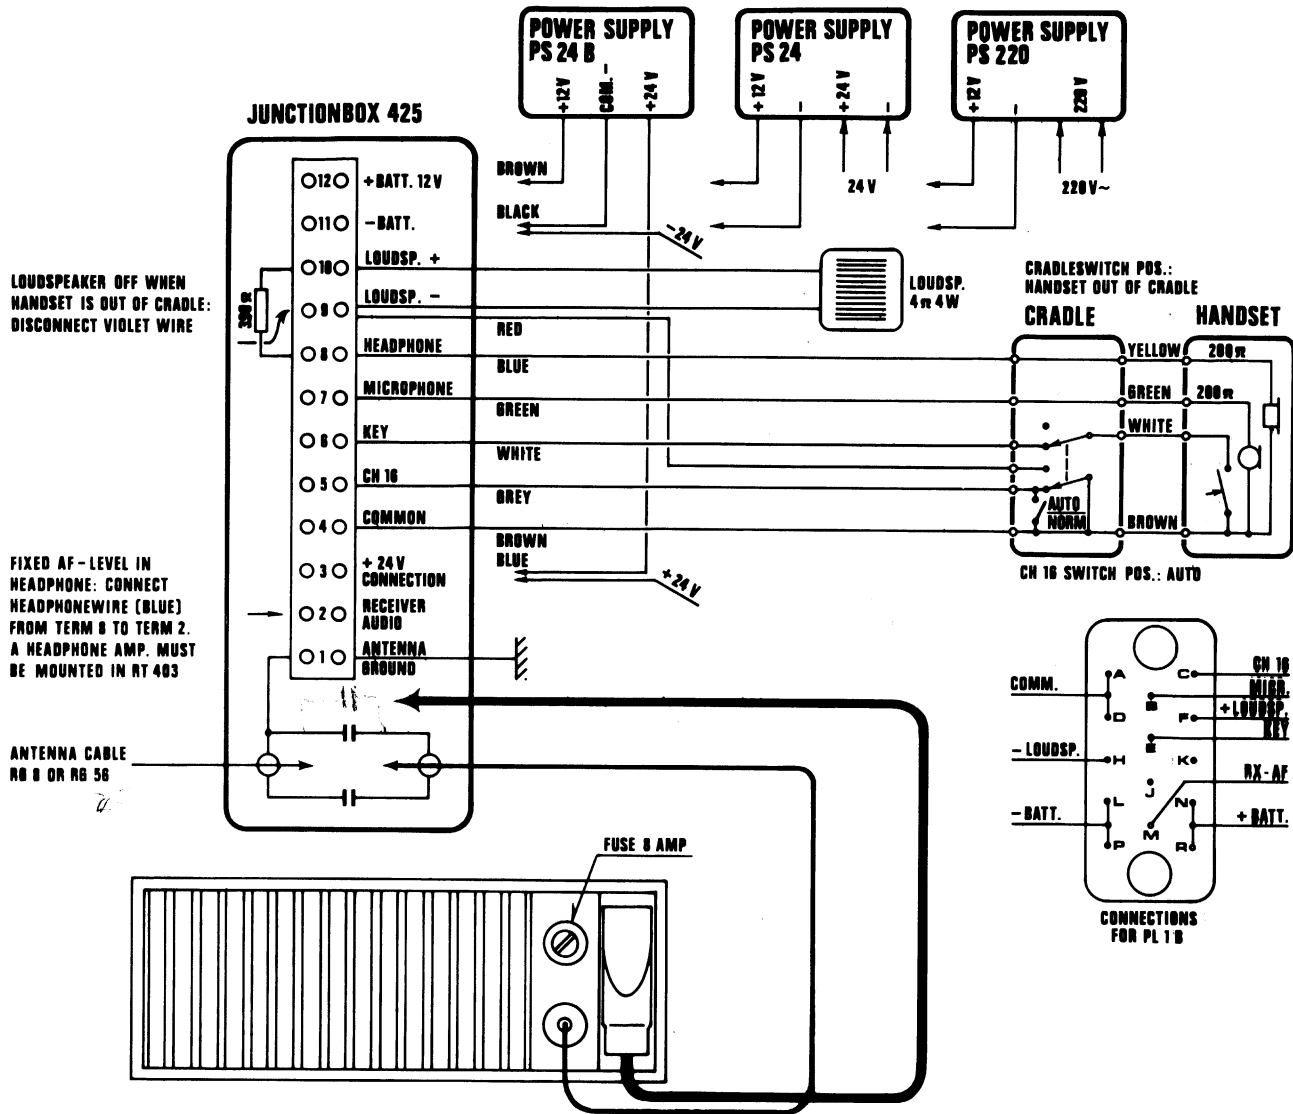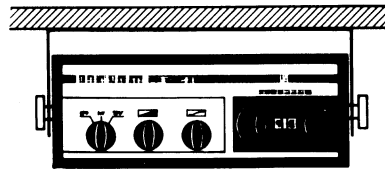


DECK HEAD MOUNTING

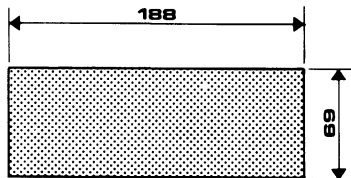

CUT OUT REQUIRED FOR PANEL MOUNTING

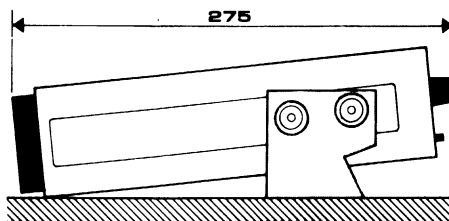

BULKHEAD MOUNTING

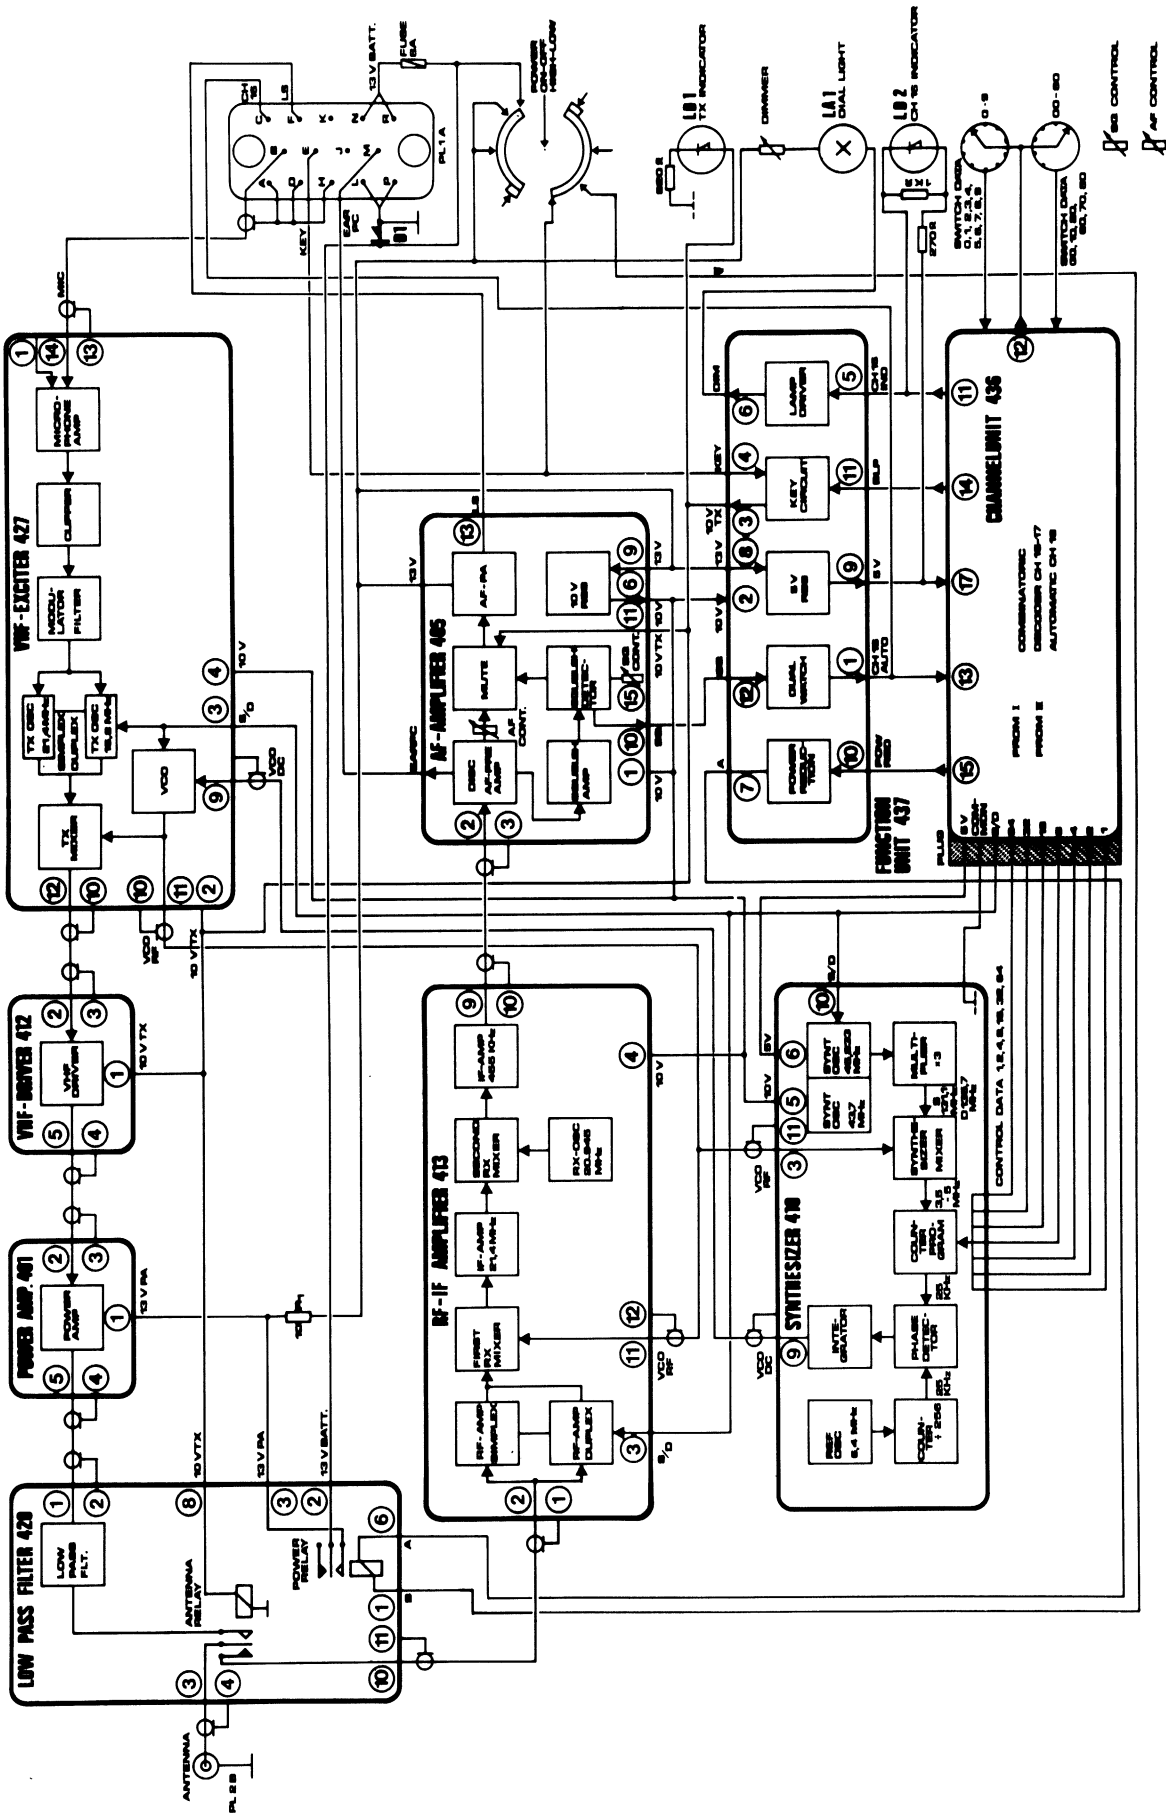

WIRING DIAGRAM

## FREQUENCY TABLES.


Ch	TX_freq	RX_freq	Mo_freq	VCO_fr	SY_osc	Sy_fr.	CH	TX_freq	RX_freq	Mo_freq	VCO_fr	SY_osc	Sy_fr
1	156.050	160.650	16,8	139.250	45.233	3.550	60	156.025	160.625	16,8	139.225	45.233	3.525
2	156.100	160.700	16,8	139.300	45.233	3.600	61	156.075	160.675	16,8	139.275	45.233	3.575
3	156.150	160.750	16,8	139.350	45.233	3.650	62	156.125	160.725	16,8	139.325	45.233	3.625
4	156.200	160.800	16,8	139.400	45.233	3.700	63	156.175	160.775	16,8	139.375	45.233	3.675
5	156.250	160.850	16,8	139.450	45.233	3.750	64	156.225	160.825	16,8	139.425	45.233	3.725
6	156.300	156.300	21,4	134.900	43.700	3.800	65	156.275	160.875	16,8	139.475	45.233	3.775
7	156.350	160.950	16,8	139.550	45.233	3.850	66	156.325	160.925	16,8	139.525	45.233	3.825
8	156.400	156.400	21,4	135.000	43.700	3.900	67	156.375	156.375	21,4	134.975	43,7	3.875
9	156.450	156.450	21,4	135.050	43.700	3.950	68	156.425	156.425	21,4	135.025	43,7	3.925
10	156.500	156.500	21,4	135.100	43.700	4.000	69	156.475	156.475	21,4	135.075	43,7	3.975
11	156.550	156.550	21,4	135.150	43.700	4.050	70	156.525	156.525	21,4	135.125	43,7	4.025
12	156.600	156.600	21,4	135.200	43.700	4.100	71	156.575	156.575	21,4	135.175	43,7	4.075
13	156.650	156.650	21,4	135.250	43.700	4.150	72	156.625	156.625	21,4	135.225	43,7	4.125
14	156.700	156.700	21,4	135.300	43.700	4.200	73	156.675	156.675	21,4	135.275	43,7	4.175
15	156.750	156.750	21,4	135.350	43.700	4.250	74	156.725	156.725	21,4	135.325	43,7	4.225
16	156.800	156.800	21,4	135.400	43.700	4.300	75	-	-	-	-	-	-
17	156.850	156.850	21,4	135.450	43.700	4.350	76	-	-	-	-	-	-
18	156.900	161.500	16,8	140.100	45.233	4.400	77	156.875	156.875	21,4	135.475	43,7	4.375
19	156.950	161.550	16,8	140.150	45.233	4.450	78	156.925	161.525	16,8	140.125	45.233	4.425
20	157.000	161.600	16,8	140.200	45.233	4.500	79	156.975	161.575	16,8	140.175	45.233	4.475
21	157.050	161.650	16,8	140.250	45.233	4.550	80	157.025	161.625	16,8	140.225	45.233	4.525
22	157.100	161.700	16,8	140.300	45.233	4.600	81	157.075	161.675	16,8	140.275	45.233	4.575
23	157.150	161.750	16,8	140.350	45.233	4.650	82	157.125	161.725	16,8	140.325	45.233	4.625
24	157.200	161.800	16,8	140.400	45.233	4.700	83	157.175	161.775	16,8	140.375	45.233	4.675
25	157.250	161.850	16,8	140.450	45.233	4.750	84	157.225	161.825	16,8	140.425	45.233	4.725
26	157.300	161.900	16,8	140.500	45.233	4.800	85	157.275	161.875	16,8	140.475	45.233	4.775
27	157.350	161.950	16,8	140.550	45.233	4.850	86	157.325	161.925	16,8	140.525	45.233	4.825
28	157.400	162.000	16,8	140.600	45.233	4.900	87	157.375	161.975	16,8	140.575	45.233	4.875
							88	157.425	162.025	16,8	140.625,	45.233	4.925






## CIRCUIT DESCRIPTION

### SIGNALPATH FOR RT 403B

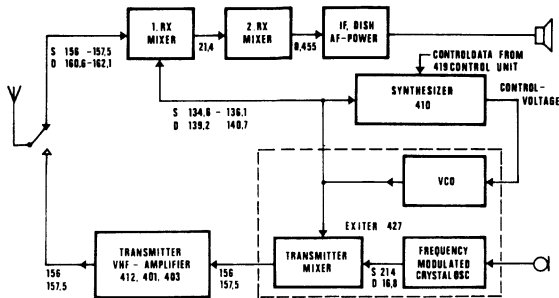

### SIGNALPATH FOR SYNTHESIZER 410

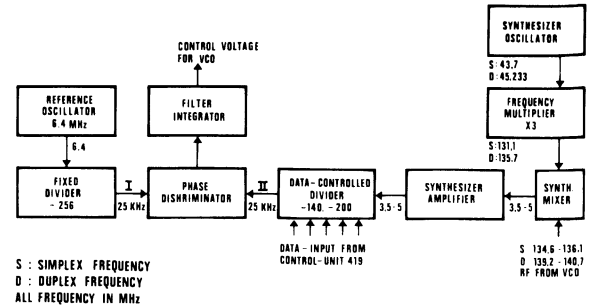

## SYNTHESIZER 410

A synthesizer is a control unit which together with a Voltage Controlled Oscillator produces requested frequencies of high stability.

A data input in the synthesizer controls the VCO frequency.

The synthesizer replaces i.a. the channel oscillators used previously. Therefore, the RT 403 B does not require any channel crystals.

The synthesizer consists of:

- REFERENCE OSCILLATOR
- FIXED FREQUENCY DIVIDER
- PHASE DISCRIMINATOR
- INTEGRATOR FILTER
- DATA-CONTROLLED FREQUENCY DIVIDER
- SYNTHESIZER MIXER
- SYNTHESIZER OSCILLATOR
- MULTIPLIER

### REFERENCE OSCILLATOR

The reference oscillator  $X_3$ ,  $T_{10}$  is a crystal oscillator of high stability.

With counter on TP 2 it is adjusted at  $P_1$  to 6.400.00 MHz.

The oscillator is succeeded by an amplifier  $T_{11}$  amplifying the signal to 5 V p.p. (TTL level).

### FIXED FREQUENCY DIVIDER

The divider consists of  $IC_4$ ,  $IC_5$ .

Each integrated circuit is dividing its input frequency with 16.

The output frequency is

$$f_{\text{ref}} = \frac{6,4 \cdot 10^6}{16 \cdot 16} = 25 \text{ KHz}$$

This frequency can be tested on TP 5.

### PHASE DISCRIMINATOR

The phase discriminator  $IC_3$  is a digital type. Input I is a firm 25 KHz reference frequency. Input II has relation to the VCO frequency.

If input II is higher than 25 KHz, the discriminator gives a voltage of 2,25 V. If input II is lower than 25 KHz or missing, the voltage given by the discriminator is 0,75 V. If input II is at 25 KHz but with a phase difference to input I, positive or negative pulses are given within the range 0,75 - 2,25 V.

### INTEGRATOR FILTER

The function of the filter is to remove 25 KHz remnants and to integrate the pulses from the phase discriminator to a DC voltage. The output voltage to VCO will lie between 2 and 9 volt.

The influence of the DC control voltage on the VCO frequency has the result that input II always is 25 KHz.

### DATA-CONTROLLED FREQUENCY DIVIDER

The signal to input II comes from the data divider  $IC_1$ ,  $IC_2$ . The signal consists of negative peak pulses with a pulse width of approx. 100 n sec. The divider is set to divide with 128 + data input from Channel-unit 436.

See PROM output table pg. 6.

Data input = PROM output.

#### Example:

CH 66:  $128 + \text{data input} = 128 + 16 + 8 + 1 = 153$

See example on page 8.

Thus the input frequency to the divider will be  $25 \text{ KHz} \cdot 153 = 3,825 \text{ MHz}$ .

The divider can be controlled to divide between 128 and 256.

RT 403 B operates with dividing numbers between 141 and 197.

Thus the input frequency for the divider will lie between

$$25 \text{ KHz} \cdot 141 = 3.525 \text{ MHz}$$

$$25 \text{ KHz} \cdot 197 = 4.925 \text{ MHz}$$

### SYNTHESIZER AMPLIFIER

The input signal to the data-divider comes from the synthesizer amplifier T<sub>2</sub>, T<sub>3</sub>, T<sub>4</sub>. Here the signal from the synthesizer mixer is amplified from approx. 10 mV up to 5 V p.p. (TTL level).

### SYNTHESIZER MIXER

The synthesizer mixer converts the VCO frequency to a frequency at which the integrated data-dividers are able to operate. The VCO signal passes through a buffer stage T<sub>1</sub> before being fed to the synthesizer mixer.

### SYNTHESIZER OSCILLATOR

The synthesizer oscillator is an overtone crystal oscillator T 8 which oscillates at 43.700 MHz X<sub>1</sub> on simplex channels, and at 45.233,3 MHz X<sub>2</sub> on duplex channels.

The changing over is operated from the S/D line over T<sub>7</sub>, D<sub>6</sub>.

The frequencies of the oscillator are adjusted with L<sub>5</sub> and L<sub>4</sub> respectively.

### MULTIPLIER

The frequency of the synthesizer oscillator is tripled in the multiplier T 9 and filtered in L<sub>6</sub>, L<sub>7</sub>.

The output frequency of the multiplier to the synthesizer mixer is 131.1 MHz and 135.7 MHz. The reason for using two frequencies is that it is preferable to keep the frequency to the data divider within the same frequency range 3.5 - 5 MHz whether simplex or duplex channels are used.

By changing channels from simplex to duplex the VCO frequency will leap up 4.6 MHz (the VCO frequency being used to the 1st mixer in RX). As the synthesizer oscillator at the same time leaps up 4.6 MHz, the difference frequency to the data-dividers stays in the same range.

Therefore, all channels will lie from 3.5 MHz to 5 MHz on TP 6 with 25 KHZ intervals.


## CHANNEL -UNIT 436

The channel-unit converts the information from the channel selector into a code which is suited for calling the PROM memory cells<sup>x)</sup>. The output from the PROM memory cells controls the synthesizer and is hereby also controlling the frequency of the station.

x)

PROM means Programable Read Only Memory. The PROM contents a memory with 32 words, the address of each word is a binary number between 0 and 31 which can be selected on the input lines. Each word consists of 8 memory cells, and each of these is connected to an output line. The memory cells are programmed by DANCOM.

### FLOW SHEET

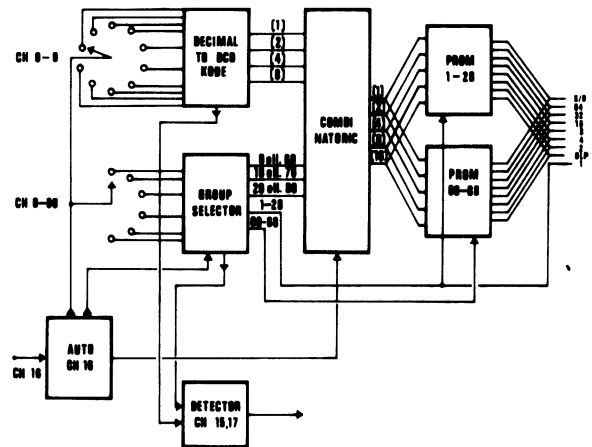

### DECIMAL TO BCD CODER

The coder consists i.a. of D<sub>1</sub> - 15.

The input lines from the channelswitch to the coder has a value or "weight" of between 0 and 9. On the request that this piece of information is coded to 4 output lines with the weights (1), (2), (4), (8), the output values are found by summing up the weights of the lines with logical 0.

In the following diagram 1 (High) means that the line has > 1,5 V and 0 (Low) that the line is short-circuited or has < 0,8 V.

		I N P U T										Auto CH
		0	1	2	3	4	5	6	7	8	9	16
O U T P U T	(8)	1	1	1	1	1	1	1	1	0	0	1
	(4)	1	1	1	1	0	0	0	0	1	1	1
	(2)	1	1	0	0	1	1	0	0	1	1	1
	(1)	1	0	1	0	1	0	1	0	1	0	1

## GROUP-SELECTOR

The group-selector consists of D<sub>16-25</sub>. The function is to give a common decade or "10" output for 0/60, 10/70, 20/80 respectively to the combinatoric and to couple in the requested PROM.

	PROM I				PROM II			
	(10-70)	(20-80)	(0-10-20)	(60-70-80)	(10-70)	(20-80)	(0-10-20)	(60-70-80)
0	1	1	0	1	1	1	0	1
10	0	1	0	1	0	1	0	1
20	1	0	0	1	1	0	0	1
60	1	1	1	0	1	1	1	0
70	0	1	1	0	0	1	1	0
80	1	0	1	0	1	0	1	0

## COMBINATORIC

Combinatoric consists of IC<sub>1, 2, 5</sub>. In Combinatoric the BCD code is put together with the "10" outputs, thus making a pure binary number between 0 and 31 for choice of word in PROM. The code is lying on 5 lines with the weights (1), (2), (4), (8), (16).

## PROM

PROM HAS AN ENABLE INPUT. PROM is only active when this input is at zero.

In the channel range 1-28 PROM I is active.  
In the channel range 60-88 PROM II is active.

## PROM OUTPUT

S/D: Output is 0 on all duplex channels.  
Output is 1 on all simplex channels.

64, 32, 16, 8, 4, 2: These outputs control the variable divider in the synthesizer.

Blocking: The output is 0 when RT 403 B must not transmit on the channel in question e.g. CH 29.

### EXAMPLE

The channel selector on CH 66.

PROM input

(1) = 0 v  
(2) = 5 v  
(4) = 5 v Address 2+4 = 6  
(8) = 0 v  
(16) = 0 v

Group (60-70-80) is at zero, which gives the result that PROM II is coupled in as pin 15 is 0.

The enable line to PROM I is carried out as 1 for control of the synthesizer.


PROM output S/D = 0 v as CH 66 is duplex  
64 = 0 v  
32 = 0 v  
16 = 5 v  
8 = 5 v  
4 = 0 v  
2 = 0 v  
BL = 5 v being an allowed channel

Enable input  
PROM I : 1 = 5 v

The frequency divider of the synthesizer always adds 128 to the dividing data, the total dividing number thus being 128 + 25 = 153.

## FUNCTION-UNIT 437


### POWER REDUCTION CIRCUIT

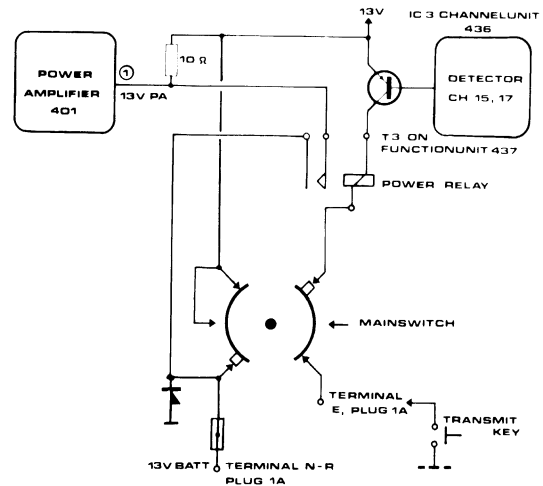

In order that the power relay can be activated, the following is necessary:

1. The MAIN SWITCH must be set at 25 W.
2. The TRANSMITTER must be keyed.
3. CH 15, 17 must not be selected.


## KEY AND BLOCKING CIRCUIT

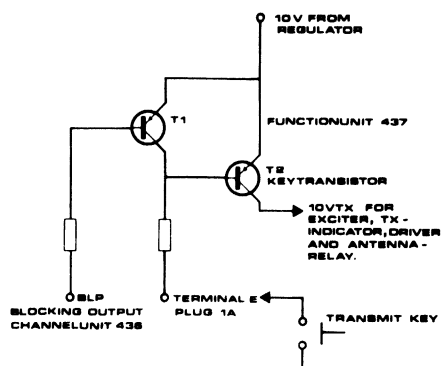

When the KEY is pressed, the POWER RELAY is activated (only on 25 W) and the KEY TRANSISTOR (when not blocked) will feed the EXCITER with 10 V.

On all normal channels the blocking output from the PROM is programmed to logical 1.

## AUTO CH 16

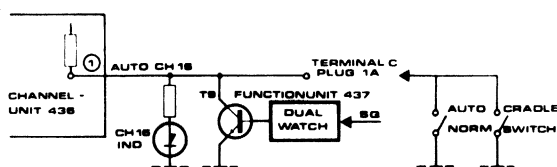

When the line AUTO CH is "open" (5 V) and the CH 16 indicator is alight, the channel switches are open, and a logic code for word 26 in the PROMs appears. See connections pin 4, 9, 13 IC5 CHANNEL-UNIT 436.

PROM word 26 can never be selected by means of the channel switches. Normally this word will be programmed for CH 16 but at option it can be programmed for any simplex or duplex channel in the normal or in the private band.

## CHECK OF DUAL WATCH

DUAL WATCH will only function when the squelch operates.

- Put the microtelephone into the cradle and set the cradle switch in position AUTO.  
Turn the squelch knob clockwise until the noise disappears.
- Select CH 28 on the channel selector.
- Connect a testgenerator to the antenna terminal.

- Set testgenerator on 156.800 MHz (CH 16).  
Squelch must be open and stay open as long as the carrier is applied.  
Also CH 16 indicator must be alight.
- Select CH 01 on the channel selector.
- Same as 4.
- Set testgenerator on 160.650 MHz.  
Squelch must be open in periods of 1 sec. interrupted in periods of approx. 0,1 sec.
- Remove the microtelephone from cradle or set the cradle switch in position NORM.  
Now the interruptions disappear.

The DUAL WATCH FUNCTION is changed to a steady watch when a shunt is connected to the oscillator as shown in the diagram for FUNCTION-UNIT 437.

## EXCITER 427 MODULATION AMPLIFIER

The dynamic microphone signal (14) is fed to the microphone sensitivity potentiometer  $P_1$ .

If a carbon microphone is being used, it must be connected in (1).

The signal is amplified in  $IC_1$  and preemphasized with 6 dB per octave by  $R_5$ ,  $C_7$ .


The following clipper  $T_1$ ,  $T_2$  with the symmetry regulation  $P_2$  prevents overmodulation. The symmetry can be checked at TP 1. To remove harmonic signals from a clipping of the microphone signal, the signal is fed through a 2nd order active filter  $T_3$  and through a RC-stage  $R_{20}$   $C_{15}$ .  
Totally -18 dB/octave above 6 KHz.

## CRYSTAL MODULATION

Simplex channels operate on 21.4 MHz ( $T_8$ ).  
Duplex channels operate on 16.8 MHz ( $T_5$ ).  
The unused oscillator is being stopped by  $T_6$ , 7 and  $T_4$  respectively.

## FLOW SHEET

PRINCIPAL DIAGRAM

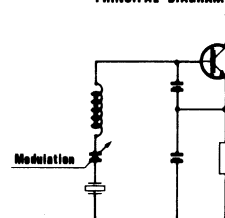

The crystal is coupled to the oscillator via  $L_2$ , 4.

$L_1$ , 3 and  $D_2$ , 3 control the exact frequency of the oscillator.

Without modulation  $L_1$  and  $L_3$  are adjusted to 16.8 MHz and 21.4 MHz respectively.

## MODULATOR DRIVER

The modulator driver T 9 is a wide-band amplifier which raises the level from the TX-oscillators to a suitable level for the TX-mixer.

### VCO

In the range 134.6 - 141.6 MHz the Voltage Controlled Oscillator gives a signal to TX-mixer, the RX-mixer, and the synthesizer-mixer.

In return it receives a DC signal from the synthesizer, and this signal is fed to the capacitance diode D<sub>10</sub>. By that the oscillator is kept at the requested frequency.

By changing channels between simplex and duplex the VCO frequency leaps 4.6 MHz.

Example:

VCO frequency CH 16 = 135.4 MHz

VCO frequency CH 18 = 140.1 MHz

This range in frequency is a result of the control voltage on S/D input, T<sub>11</sub>, R<sub>44</sub> and D<sub>8</sub>.

By change from CH 16 simplex to CH 18 duplex the control voltage should not change more than  $\pm 0,5$  V.

RF-output (11) 0,2 V.

### TX-MIXER

The VCO signal and the modulator signal are mixed in a balanced mixer.

Example:

TX-frequency

CH 16: 135.4 + 21.4 = 156.8 MHz

CH 18: 140.1 + 16.8 = 156.9 MHz

## VHF DRIVER 412

The function of the driver is to take away unwanted products from the TX-mixer and to drive the PA-stage.

The input is approx. 50 mV from 50 ohms.

The output is approx. 4 V in 50 ohms.

## VHF POWER AMPLIFIER 401

The only function of the PA-stage is to give the TX signal power amplification.

In position LOW-POWER the supply voltage from the output stage falls approx. 10 V and the output falls to approx. 1 W.

## LOW-PASS-FILTER 420

The function of the filter is to attenuate harmonic frequencies from the PA-stage.

The filter has been made in "strip-line" technique and does not require any re-adjustment.

Attenuation at 160 MHz approx. 0,5 dB

Attenuation at 320 MHz approx. 80 dB

## RECEIVER

The RF signal is amplified in one of the 2 RF-heads (one is tuned for simplex channels T 12, the other one is tuned for duplex channels T 5) and fed into the first mixer. The first mixer T6 converts the signal from the RF amplifier to 21.4 MHz by means of the VCO signal.

The 21.4 MHz signal is fed to the IF-amplifier T7 through a crystal filter with 90 dB attenuation on adjacent channels. The signal is then converted to 455 KHz in the second mixer T8 by means of the 2nd 20.945 MHz oscillator T14.

The 2nd IF signal is amplified T9, 10 and fed into the integrated limiter and discriminator. The demodulated signal is integrated with a response of 6 dB per octave in the amplified IC2 and hereafter fed into a power amplifier with 4 Watt output into a 4 ohm load.

From the output of the discriminator a noise signal is fed to the squelch circuit. After being amplified, filtered - app. 20 KHz - and detected the signal is fed to the AF-muting circuit. In case of missing or weak signal on the aerial, the AF-signal is short-circuited in T2.

## PRIVATE CHANNELS

It is possible to mount up to 5 channels in RT 403 P besides the 55 international channels.

In the lower channelband the switch positions 00 and 29 are unused. In the upper channelband the switch positions 75, 76, and 89 are unused and thereby at disposal for tuning in of private channels.

When one of the switch positions mentioned is tuned in, a word is selected in the PROM, which is unprogrammed from the factory. This means that all control connections to the synthesizer are "low".

If a private channel is requested, the matching frequency control code must be calculated. By means of a coding instrument this code is programmed into PROM.

### Maximum frequency limits:

TX: 155.000 - 158.500 MHz

RX: 155.000 - 158.500 MHz

159.600 - 163.100 MHz

Utilized bandwidth	Performance
1.5 MHz	normal performance
" " 2 MHz	RX sensitivity loss on external channels 1 dB TX power loss on external channels 1 dB
" " 2.5 MHz	RX sensitivity loss on external channels 3 dB TX power loss on external channels 3 dB
" " 3 MHz	RX sensitivity loss on external channels 6 dB TX power loss 3 dB

Private channels with frequencies ending in ...00 KHz or ...50 KHz must be coded in the lower channelband.

If the frequencies end in ...25 KHz or ...75 KHz, they must be coded in the upper channelband.

Switch Pos.	PROM word	Remarks
00	00 in PROM I	For frequencies ending in ..00 or ..50 KHz
29	11 in PROM I	For frequencies ending in ..00 or ..50 KHz
75	21 in PROM II	For frequencies ending in ..25 or ..75 KHz
76	22 in PROM II	For frequencies ending in ..25 or ..75 KHz
89	11 in PROM II	For frequencies ending in ..25 or ..75 KHz

The binary code for 120 = 64+32+16+8  
PROM CODE.

S/D = 0  
(128 = 0)  
64 = 1  
32 = 1  
16 = 1  
8 = 1  
4 = 0  
2 = 0  
(1 = 0)  
BL = 1

When a PROM with private channels is being mounted, it is necessary to check VCO - DC on TP (9) SYNTHESIZER 410. On the uttermost channels the voltage must lie between the limits 3 and 8 V. Normally it should be unnecessary to readjust RX or TX.

By private channels below 155.700 MHz (RX 160.300 MHz) it is necessary to couple in the "Special Channel" decoder IC 4 Channel-Unit 436, as the synthesizer data input for dividerbit 128 must be coupled in. Usually this data input pin 9 IC 2 on SYNTHESIZER 410 is permanently connected to 5 V. This connection must be cut off, and instead pin 9 must be connected to "128" output on 436 CHANNEL-UNIT.

The input to the "Special Channel" decoder R, S and TU must be connected to the switch position of private channels.

Example: Private channel Tx 155.5 and RX 160.1

The channel must be placed in the lower channelband as the frequency ends in ..00 KHz. We can choose channelswitch position 29.

Because the frequency is below 155.700 MHz the "Special Channel" decoder must be connected to control divider bit "128".

This means that R must be connected to 2 on the "10" switch. S must be connected to 9 on the "1" switch.

If channel 29 is tuned in both R and S will be "low" and thereby output "128" is also low.

The control code must be placed in Word 11 in PROM 1.

The synthesizer frequency will be  
 $f_{TX} - 152.5 \text{ MHz}$

$155.5 - 152.5 = 3.000 \text{ MHz}$

Dividing number =  $f_{SY}/25 \text{ KHz}$

$3000/25 = 120$

## TROUBLE SHOOTING

The purpose of the trouble shooting instruction is to assist in finding the defective circuit as soon as possible.

It is taken for granted that the power supplies always are checked first.

13 V are found on AF-print (9)  
 10 V are found on AF-print (6)  
 5 V are found on FUNCTION-UNIT (9)

The defects can be divided into:

1. Function defect
2. Synthesizer defect
3. Channellogic defect
4. Transmitter defect
5. Receiver defect

### SYNTHESIZER TROUBLES

Typical fault report:

RX/TX do not function on simplex and/or duplex channels.

RX with white noise.

TX indicator is alight, and the relays are pulling when TX is keyed.

Check-up: By fault on simplex channels or both simplex and duplex channels tune in on CH 16.

By fault on duplex channels alone tune in on CH 18.

Check VCO-DC (9) on EXCITER.

VCO-Control Voltage higher than 9 V:

The signal path between VCO-RF (11) on EXCITER and TP 7 on SYNTHESIZER is obviously cut off.

Connect oscilloscope to TP 6 with a non-loading probe.

If signal  $> 3$  Vpp 5-7 MHz appears, the defect may be found in the data divider IC<sub>1</sub>, 2.

The divider is checked on pin 7 IC<sub>2</sub> or TP 7 with oscilloscope and non-loading probe.

The pulses in TP 7 are negative and very narrow (app. 100 n sec.).

If the appearing signal in TP 6 is  $< 1$  Vpp, the possibilities are as follows:

The synthesizer oscillator does not oscillate.

The VCO does not oscillate, or the frequency is too much off.

The VCO driver is defect.

The synthesizer is defect.

The synthesizer amplifier is defect.

The synthesizer oscillator is checked with a frequency counter or a MVTM with the RF-probe on TP 1.

Simplex channels 43.7000 MC approx 50 mV.

Duplex channels 45.2333 MC approx 50 mV.

VCO is checked with MVTM RF-probe on (11) EXCITER. Requirement approx 200 mV.

VCO-Control-Voltage lower than 2 V:

The signal path between the reference oscillator and TP 5 is obviously cut off.

The reference oscillator is checked on TP 2  $> 3$  Vpp 6,4 MHz.

The 16-dividers IC 4, 5 are checked on TP 5 5 Vpp 25 KHz.

If the above circuits are OK, the defect is found in the phase discriminator or the integrator, or the VCO frequency is too much off.

If VCO-DC is 2 V, the voltage in TP 3 must be 2,25 V.

If VCO-DC is 9 V, the voltage in TP 3 must be 0,75 V.

### CHANNELLOGIC TROUBLES

Typical fault report A:

RX/TX do not function on one channel.

RX with white noise.

TX indicator is alight, and the relays are pulling when TX is keyed.

Check-up: Check if the channel selector knobs are loose.

Check control-data on SYNTHESIZER-print on the defective channel.

S/D 64 32 16 8 4 2 1

And compare with table for PROM output  $1=5$  V,  $0=0,5$  V.

If unharmonic, check PROM input

(1) (2) (4) (8) (16)

and compare with table.

If now harmonic, PROM is defective, or PROM output has been short-circuited, interrupted or interconnected.

If unharmonic, combinatoric is defective. A quick dividing code check is to count the frequency in TP 6 and compare with table page 5.



## TRANSMITTER TROUBLES

### Typical fault report A:

Transmitter does not function (no carrier wave) on simplex channels and/or duplex channels.

TX indicator is alight, relays are pulling when TX is keyed.

RX OK otherwise synthesizer defect.

Check-up: By fault on simplex channels only or both simplex and duplex channels - set channel selector on CH 14.

By fault on duplex channels tune in on CH 18.

If the power consumption on HIGH POWER is higher than 4 amp, the antenna relay or the LOW-PASS-FILTER may be defective.

If the power consumption is low, check on TP 2 EXCITER with frequency counter or MVTM with RF-probe if the TX-oscillators are oscillating.

Simplex 21.4 MHz approx. 300 mV.

Duplex 16.8 MHz approx. 300 mV.

If OK, and VCO OK there will be input voltage to VHF-DRIVER.

Check RF-level on PA-input (2) with MVTM and RF-probe.

Requirement: > 3 V.

### Typical fault report B:

TX has bad / no modulation.

N O T E: SET TRANSMITTER ON LOW POWER!

Check-up: Check voltage on (1) EXCITER.

If the voltage is 10 V and a carbon microphone is used, there may be interruption in the external microphone circuit.

Check DC-voltage on IC<sub>1</sub> output.

Requirement: 4-6 V

Check DC voltage TP 1

Requirement: 4-6 V

11 drive 1 KHz, the level in TP 1  
5 Vpp.

## RECEIVER TROUBLES

### Typical fault report:

Receiver weak/silent on simplex and/or duplex channels.

Receiver with white noise/dead.

TX OK, otherwise synthesizer defect.

Check-up: If the receiver is completely dead, the SQUELCH circuit or the AF-AMPLIFIER may be defective. If there is a signal in the telephone, the loudspeaker is cutt off.

If the loudspeaker is short-circuited, the telephone is also silent.

If the voltage in (10) AF-AMPLIFIER is higher than 5 V, squelch is open.

Check on TP 2 (top side connection near L2) if there is a signal through the LF-amplifier.

If a signal of 455 KHz modulation with 1 KHz and with deviation  $\pm 3$  KHz is connected to (2), the sensitivity must be 50uV.

During this measurement unsolder the connection to (2) from the IF-amplifier.


In TP 2 on RF,IF-AMPL. 413 the sensitivity is 1 uV EMF on 21.4 MHz.

Depending on the choice of channel-simplex or duplex - there are 10 V on T<sub>12</sub> and T<sub>g</sub> respectively.

On the unused RF-channel the voltage must not exceed 1 volt.

## ALIGNMENT

## ALIGNMENT OF SYNTHESIZER AND VCO

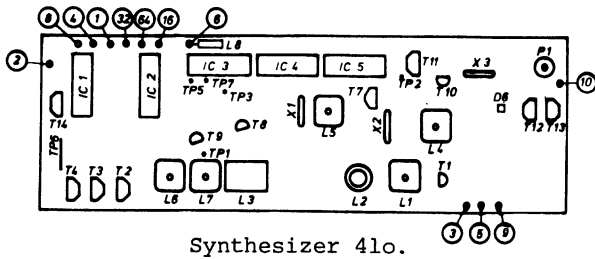

Synthesizer 410.

Necessary measuring equipment:

Frequency counter 50 MHz 50 mV  
 Oscilloscope 10 MHz non-loading test probe  
 Voltmeter  
 Millivoltmeter with RF-probe or diode probe.

VCO


Set channel selector on CH 18.  
 Connect voltmeter to (9) EXCITER.  
 Adjust L7 EXCITER to 5.5 V.  
 Set channel selector on CH 17.  
 Adjust R 44 to 5.5 V in (9).  
 Set channel selector on CH 18 again.  
 Connect MVTM with RF-probe to (11) EXCITER.  
 Adjust L8 EXCITER to max. RF.  
 Requirement > 150 mV RMS.  
 Connect the frequency counter to TP 2.  
 Adjust P1 to 6.400.0 MHz.  
 If a VHF frequency counter (160 MHz) is not available, the channel frequencies must be laid on as follows:  
 Connect counter to TP 1.  
 Adjust on CH 18 L4 to 45.233.33 MHz.  
 Adjust on CH 16 L5 to 43.700.00 MHz.

If a VHF frequency counter is available, L4 and L5 are adjusted in such a way that the transmitter output frequencies are lying exactly on CH 18 and CH 16 156.900.0 and 156.800.0 MHz. But then the EXCITER first has to be aligned.

Set channel selector on CH 18.  
 Connect oscilloscope to TP 6 SYNTHESIZER.

**NOTE!** Remember to use a test probe with a capacitive < 20 pF, and a resistive loading > 1 Kohm.

Remark the form of the curve and adjust L1, L6, and L7 to max. overdrive.

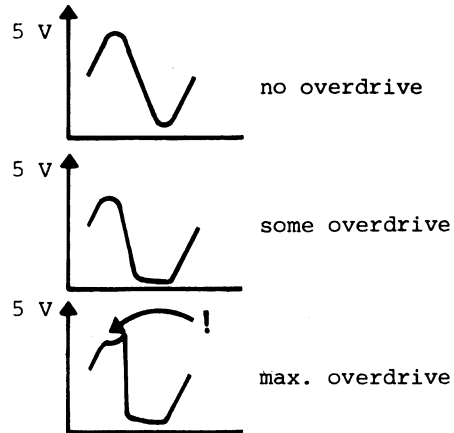


Change over to CH 16.

Re-adjust L1 and L7 to max. overdrive.

Check all channel frequencies with a frequency counter on TP 6, see frequency table.

## ALIGNMENT OF EXCITER

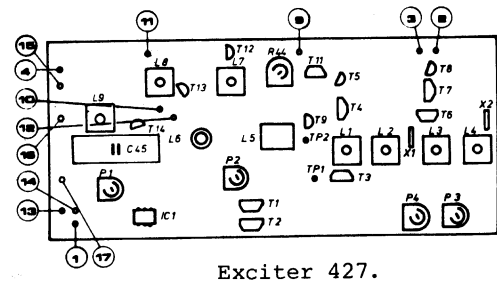

Exciter 427.

Necessary measuring equipment:

Frequency counter 50 Mc 50 mV  
 Oscilloscope  
 Tone generator  
 Deviation meter

1. Connect frequency counter to TP 2.

Turn core in L4 and L2 to approx. 6 turns from the bottom of the coil form.

Set LOW-POWER.

Key transmitter.

Set channel selector on CH 14.

Adjust L3 to 21.400.0 MHz.

Set channel selector on CH 18.

Adjust L1 to 16.800.0 MHz.

2. Connect tone generator 1000 Hz to (14) EXCITER

Connect oscilloscope to TP 1.


Turn P1 and P2 to the middle.

Adjust input in (14) until clipper limit just is obtained. Input app. 6 mV.

Adjust P2 to symmetrical clipper.

3. Connect deviation meter to antenna output.  
Adjust P 3 to  $\pm 3,5$  KHz deviation on CH 14.  
Increase input (14) by 20 dB (ten times).  
Vary input frequency (14) 300-3000 Hz.  
Check that deviation does not exceed  $\pm 5$  KHz.  
Set channel selector on CH 18.  
Adjust P<sub>4</sub> to  $\pm 3,5$  KHz deviation.  
Increase input (14) by 20 dB.  
Vary input frequency (14) 300-3000 Hz.  
Check that deviation does not exceed  $\pm 5$  KHz.

## ALIGNMENT OF VHF-DRIVER

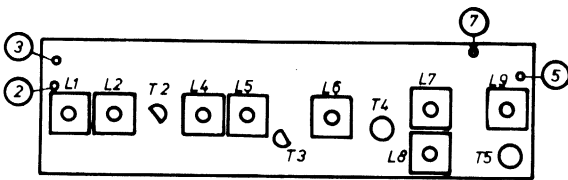

VHF-Driver 412

### Necessary measuring equipment:

- 50 ohms load 0,3 W  
(may be a carbon film resistor 47 ohms).
- MVTM with RF-probe or a diode probe.

- Dissolder the input cable to the PA-stage.
- Terminate it with a 50 ohms load.
- Connect RF-probe of MVTM over the load.
- Set on CH 14.
- Key the transmitter.
- Tune L<sub>9</sub> on EXCITER and L<sub>1</sub>, 2, 4, 5, 6, 7, 8, 9 on VHF-Driver to max. output.
- Because of the overdrive the maximum is "flat", but it is necessary to find the maximum for getting a good selectivity.
- Requirement on all channels > 3 V output.
- Input is approx. 50 mV from 50 ohms.

## ALIGNMENT OF POWER-AMPLIFIER

### Necessary measuring equipment:

- Amp meter 10 A DC
- 50 ohms Power-meter for 25 W
- Oscilloscope 10 MHz.
- Unstability-detector

- Connect Amp-meter in supply voltage line to RT 403.
- Set supply voltage at 13,2 V.
- Connect oscilloscope to unstability-detector.
- Set on CH 14.
- Set HIGH-POWER.
- Adjust all trimmers to minimum capacity.

Key transmitter.

Adjust all trimmers beginning from C<sub>2</sub> to max. power consumption until there is deflection on power-meter.

Then adjust to max. output power.

After this rough adjustment, C<sub>3</sub> and C<sub>4</sub> are fine adjusted by detuning C<sub>3</sub> a little to less capacity and re-adjusting C<sub>4</sub> to max. power.

C<sub>5</sub> and C<sub>6</sub> are fine adjusted in the same way.

Tune C<sub>7</sub> and C<sub>8</sub> to max. output power.

Now the power should be about 25 W.


The current consumption of the station should not be more than 6,5 Amp 13,2 V.

In position LOW-POWER the supply voltage for the output stage falls approx. 10 V and the output power falls to approx. 1,0 W.


If there is an unstability in the PA-stage during the up-tuning, this will show as short-wave signals on the oscilloscope.

After finishing the up-tuning there must not be unstability on any channel with HIGH or LOW POWER and 15 V supply voltage.


## UNSTABILITYDETECTOR

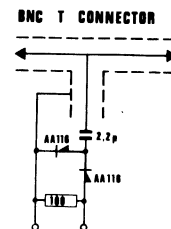

## ALIGNMENT OF RECEIVER

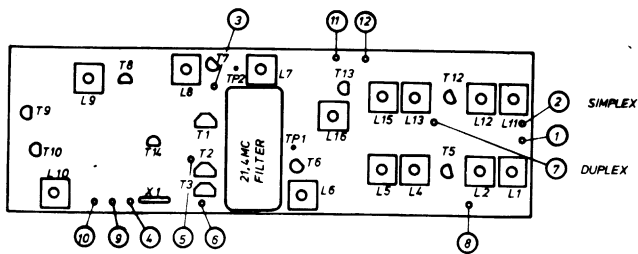

RF-IF Amplifier 413

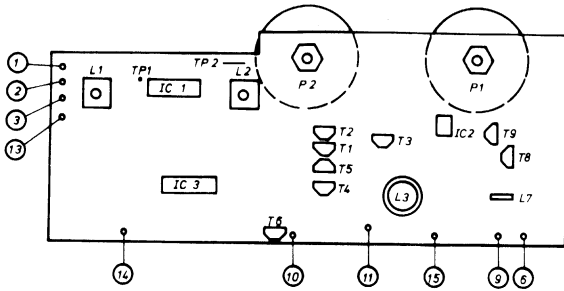

AF-Amplifier 4o5

### Necessary measuring equipment:

Signal generator 0,5 uV - 10 mV 50 ohms  
0,455 - 162 MHz.

Distortionmeter or MVTM.

Oscilloscope 10 MHz.

Connect a 4 ohms loudspeaker.

Connect distortionmeter or MVTM across the loudspeaker output.

Connect oscilloscope to TP 1 (AF-circuit board).

Connect signal generator to TP 2. RF-IF board.

Frequency 21.400 MHz.

Modulation 1 KHz.

Deviation  $\pm$  3 KHz.

Tune L<sub>2</sub> (AF-circuit board) for maximum AF signal on MVTM.

Tune L<sub>1</sub> (AF-circuit board) L<sub>8</sub>, L<sub>9</sub> and L<sub>10</sub> to maximum signal in TP 1.

**Note!** Decrease input in order to avoid limiting in the primary IF-stages.

Connect signal generator to antenna input.

Frequency 156.800 MHz.

Set on CH 16.

Adjust the core in L<sub>5</sub> and L<sub>15</sub> to the bottom of the coil form.

Listen to the signal in the loudspeaker and tune L<sub>11</sub>, L<sub>12</sub>, L<sub>13</sub>, L<sub>15</sub> and L<sub>16</sub> to maximum sensitivity.

Tune L<sub>6</sub> and L<sub>7</sub> to minimum distortion.

Requirement  $< 0,8 \text{ uV EMF at } 20 \text{ dB } \frac{S+N}{N}$

or  $12 \text{ dB } \frac{S+N+D}{N+D}$

Set on CH 18.

Frequency 161.500.0 MHz.

Tune L<sub>1</sub>, L<sub>2</sub>, L<sub>4</sub> and L<sub>5</sub> to maximum sensitivity.

Requirement  $< 0,8 \text{ u EMF at } 20 \text{ dB } \frac{S+N}{N}$

or  $12 \text{ dB } \frac{S+N+D}{N+D}$

Check sensitivity on CH 01, 06 and 28.

## ALIGNMENT OF CHANNEL FREQUENCY

The adjustment must take place in the following order:

Set LOW POWER.

Connect frequency counter on TP 2 SYNTHESIZER.

Adjust P<sub>1</sub> SYNTHESIZER to 6.400.00 MHz.

Connect frequency counter to TP 2 EXCITER.

Adjust L<sub>3</sub> EXCITER to 21.400.00 MHz CH 16.

Adjust L<sub>1</sub> EXCITER to 16.800.00 MHz CH 18.

With VHF frequency counter.

Connect counter to transmitter output.

Adjust L<sub>5</sub> SYNTHESIZER to 156.800.00 MHz CH 16.


Adjust L<sub>4</sub> SYNTHESIZER to 156.900.00 MHz CH 18.

With 50 MHz. counter.


Connect frequency counter to TP 1 SYNTHESIZER.

Adjust L<sub>5</sub> SYNTHESIZER to 43.700.00 MHz CH 16.




Adjust L<sub>4</sub> SYNTHESIZER to 45.233.33 MHz CH 18.

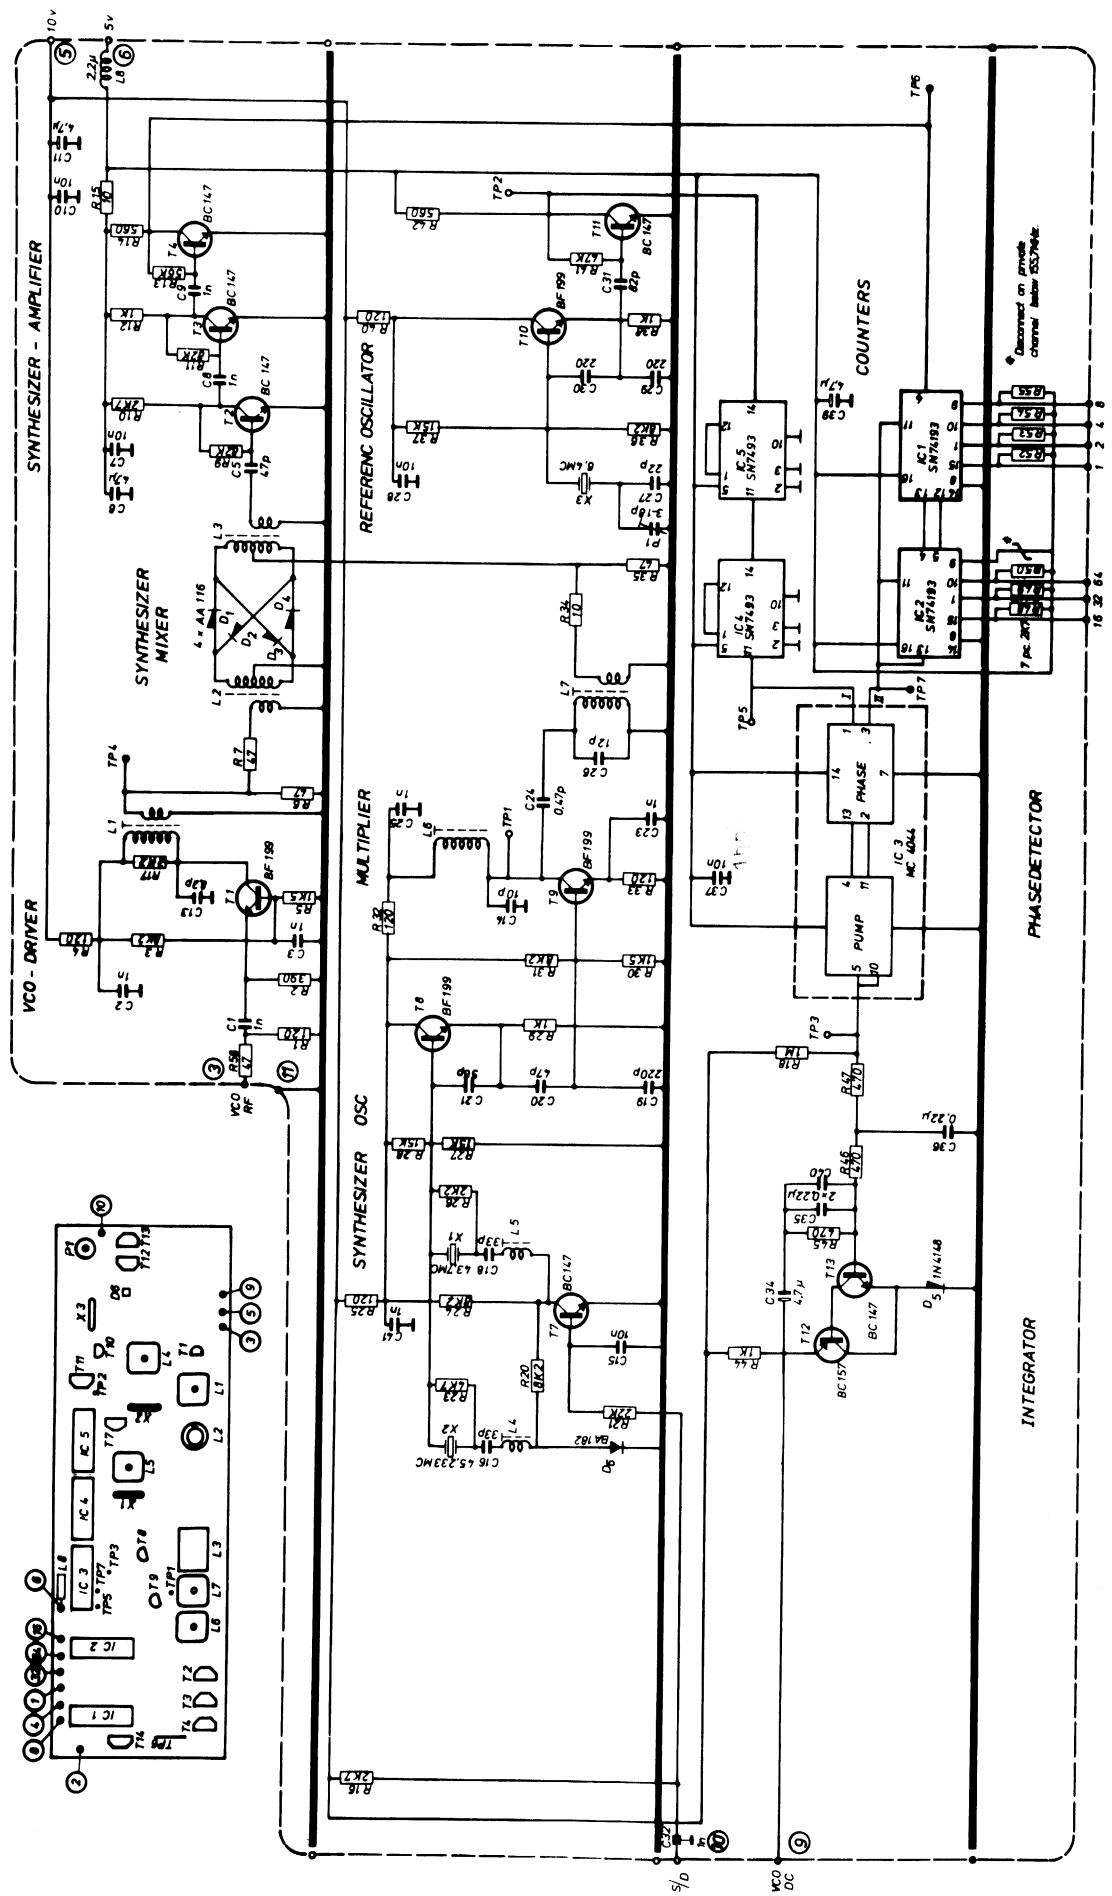


SYNTHESIZER MODULE 410

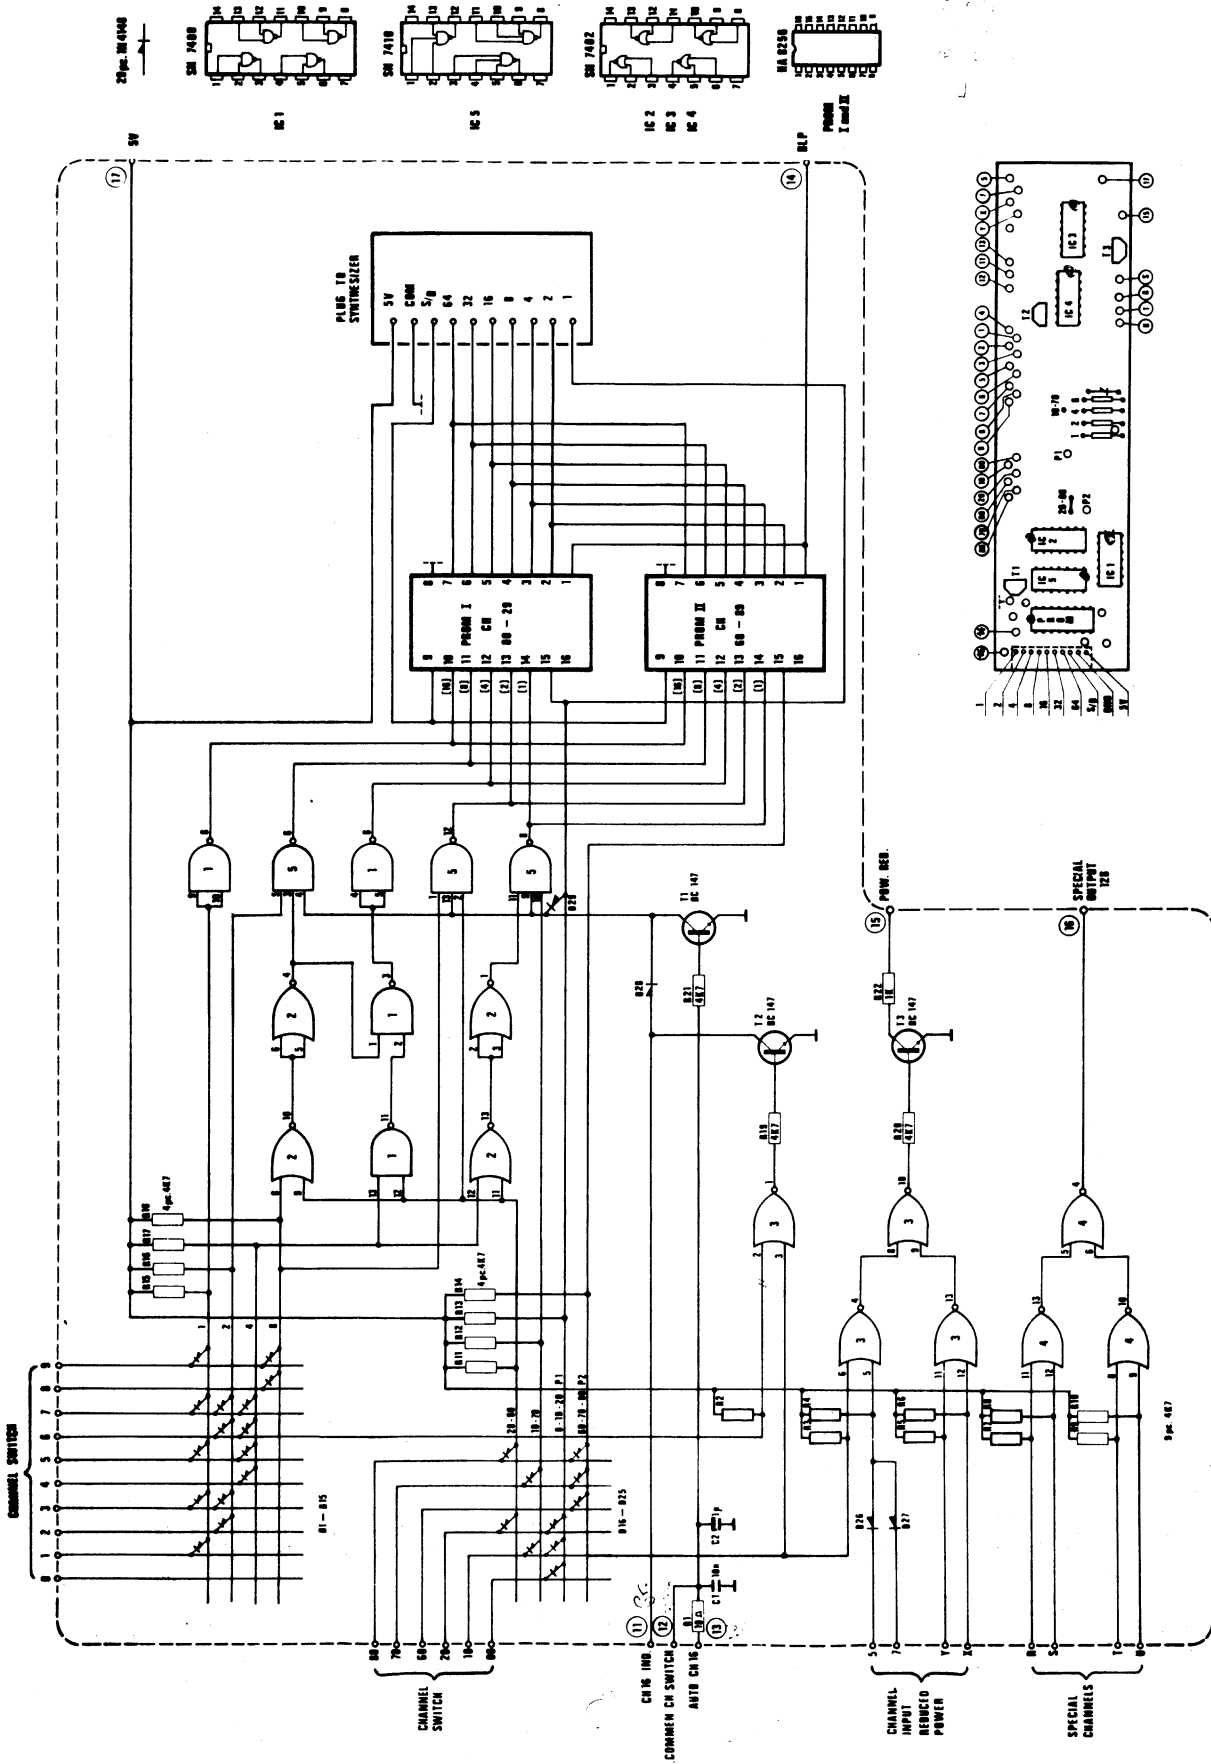

CHANNEL UNIT MODULE 436

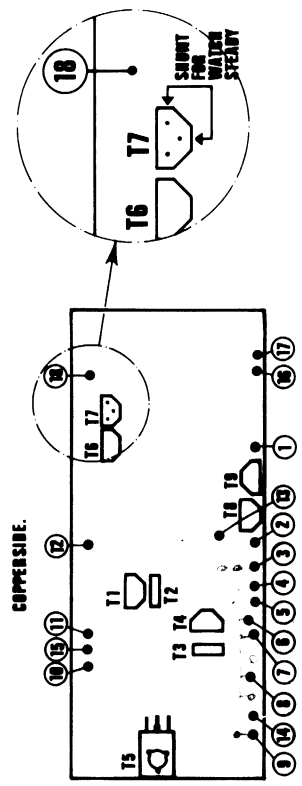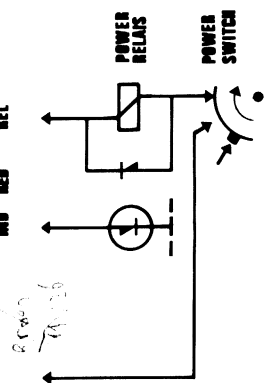
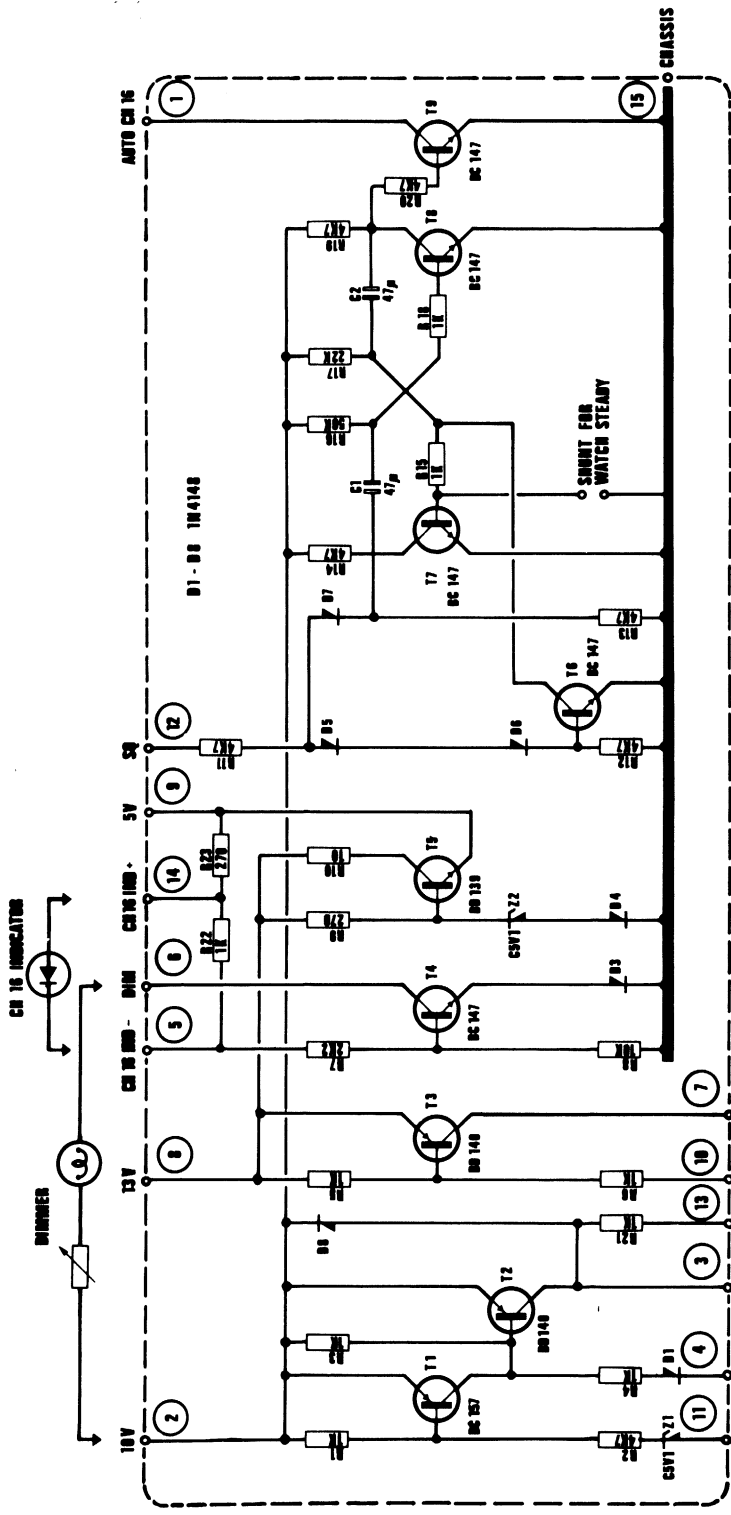


FUNCTION UNIT MODULE 437

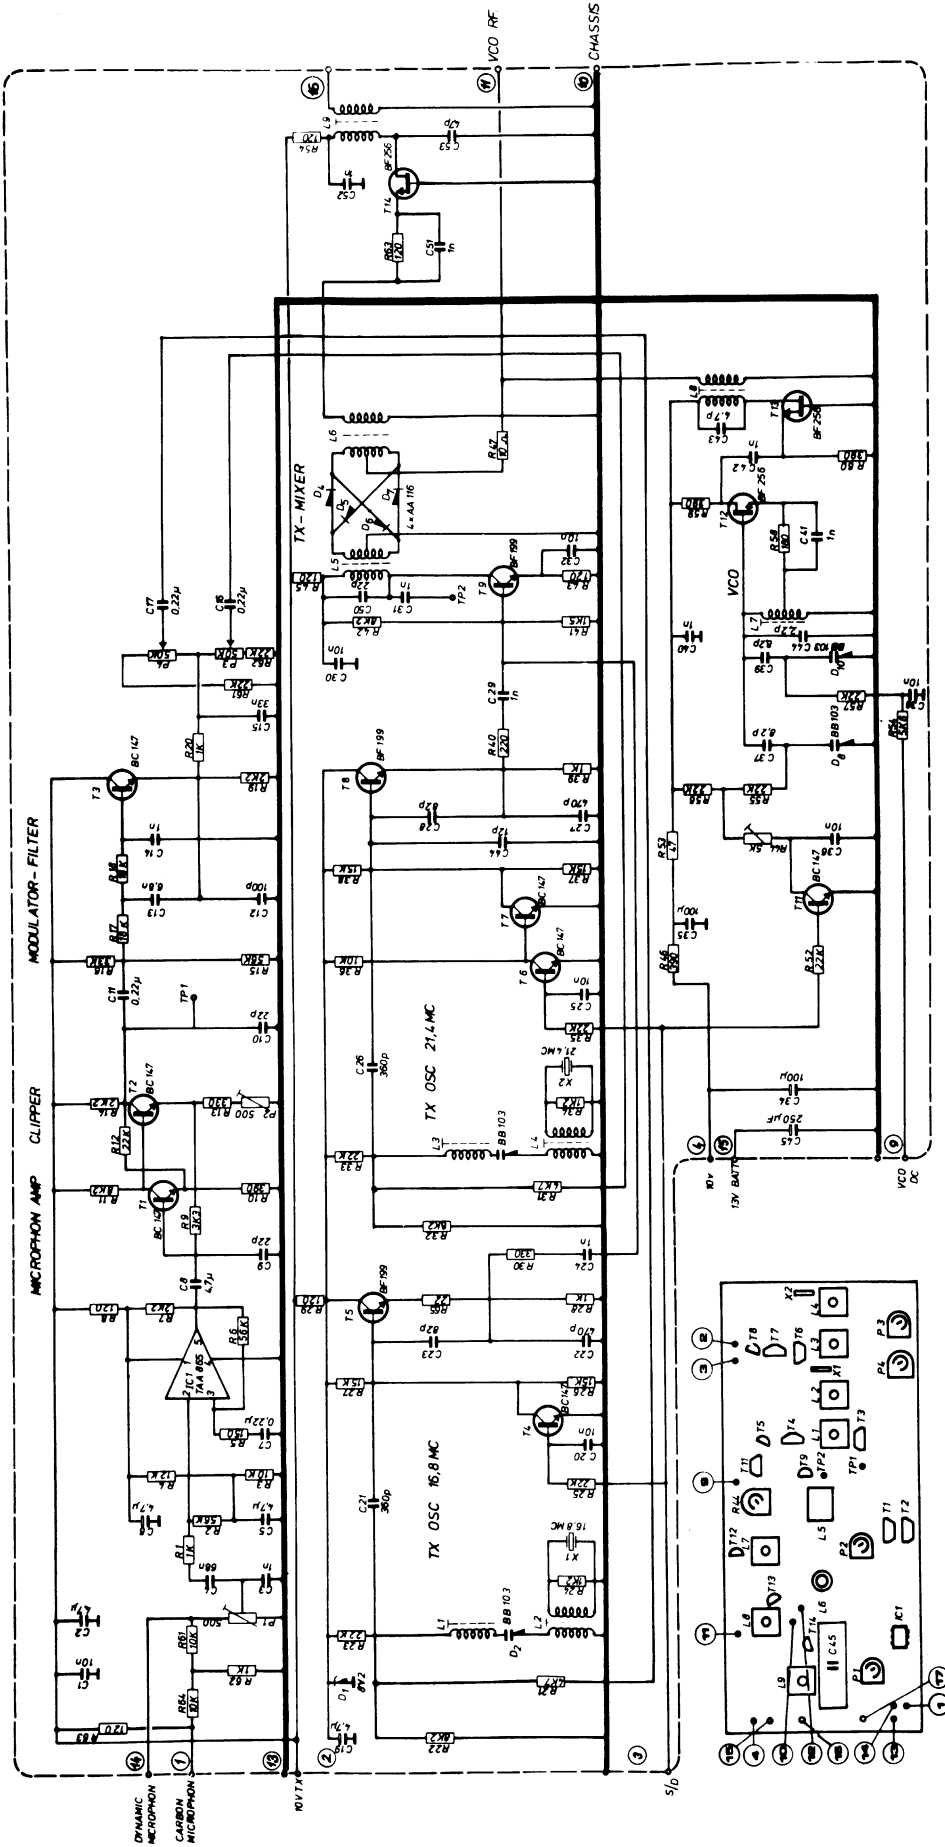


VHF EXCITER. MODULE 427




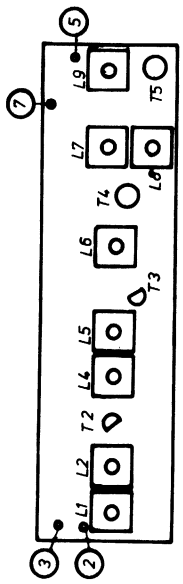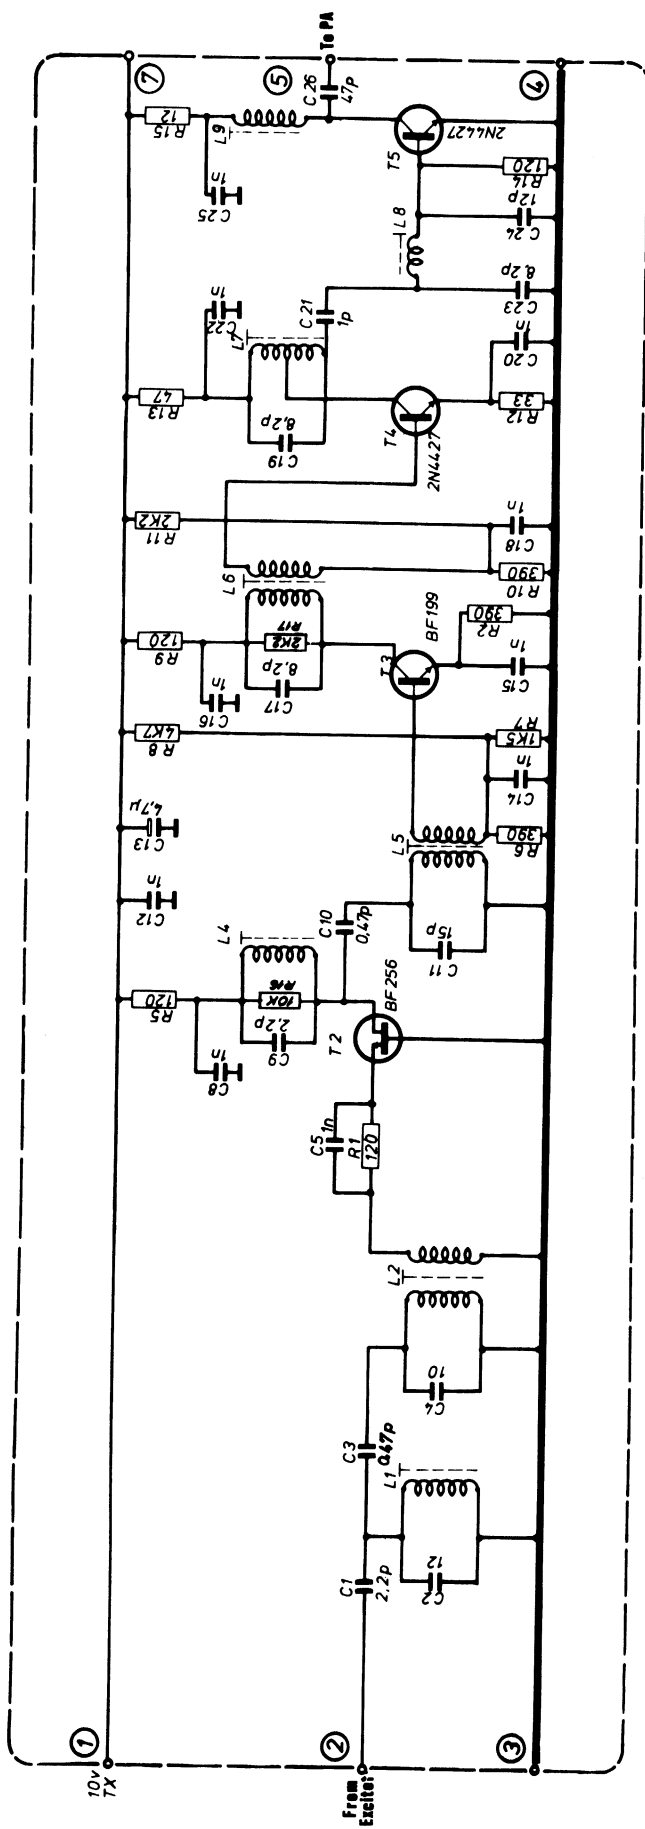


VHF DRIVER. MODULE 412

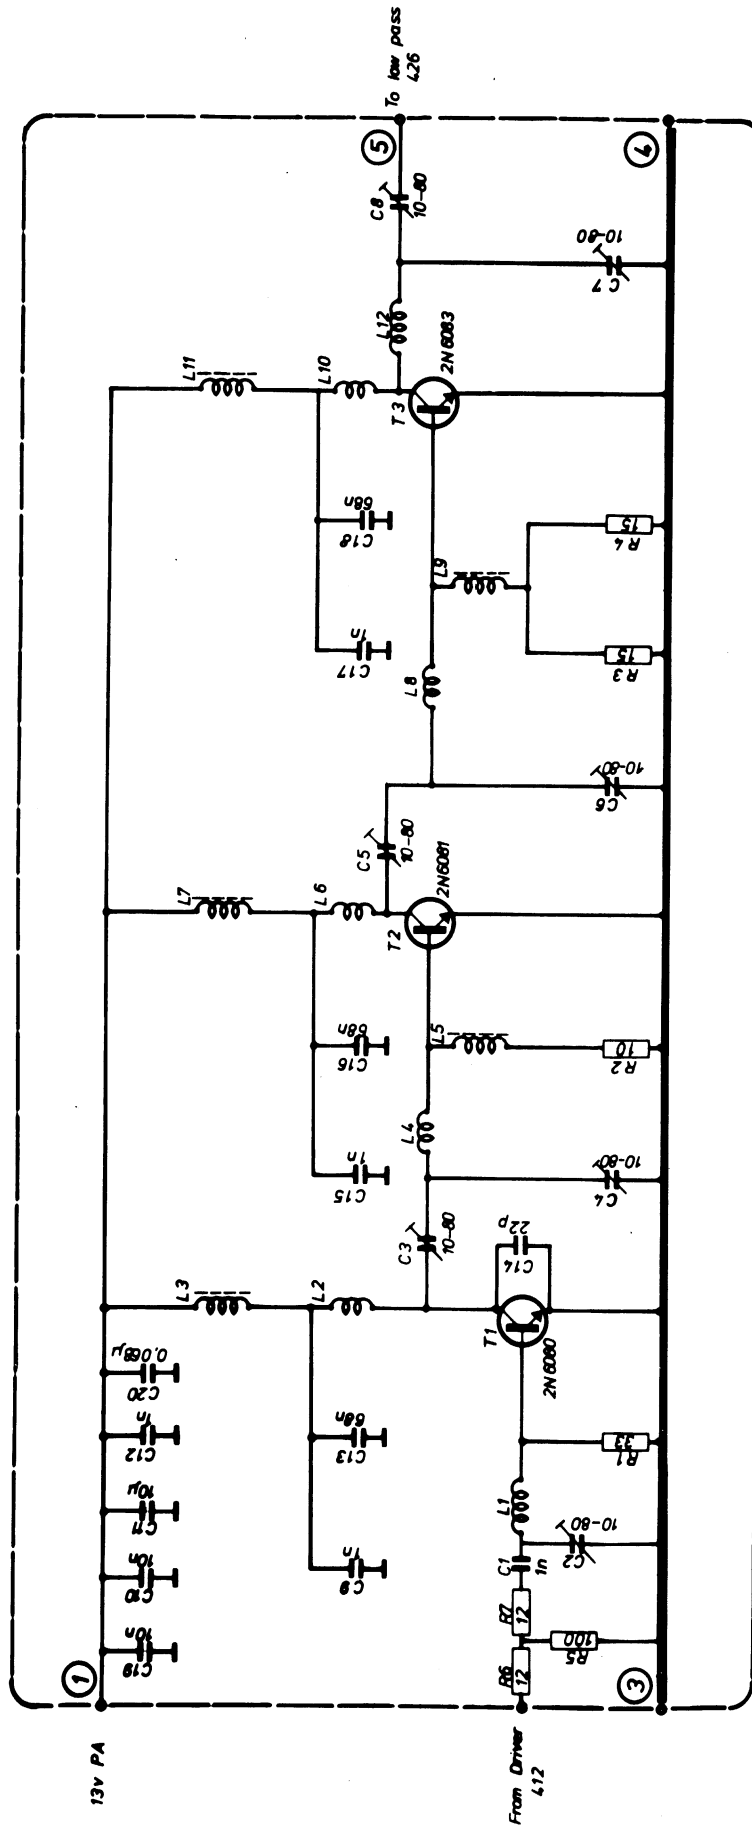

POWER AMPLIFIER. MODULE 401

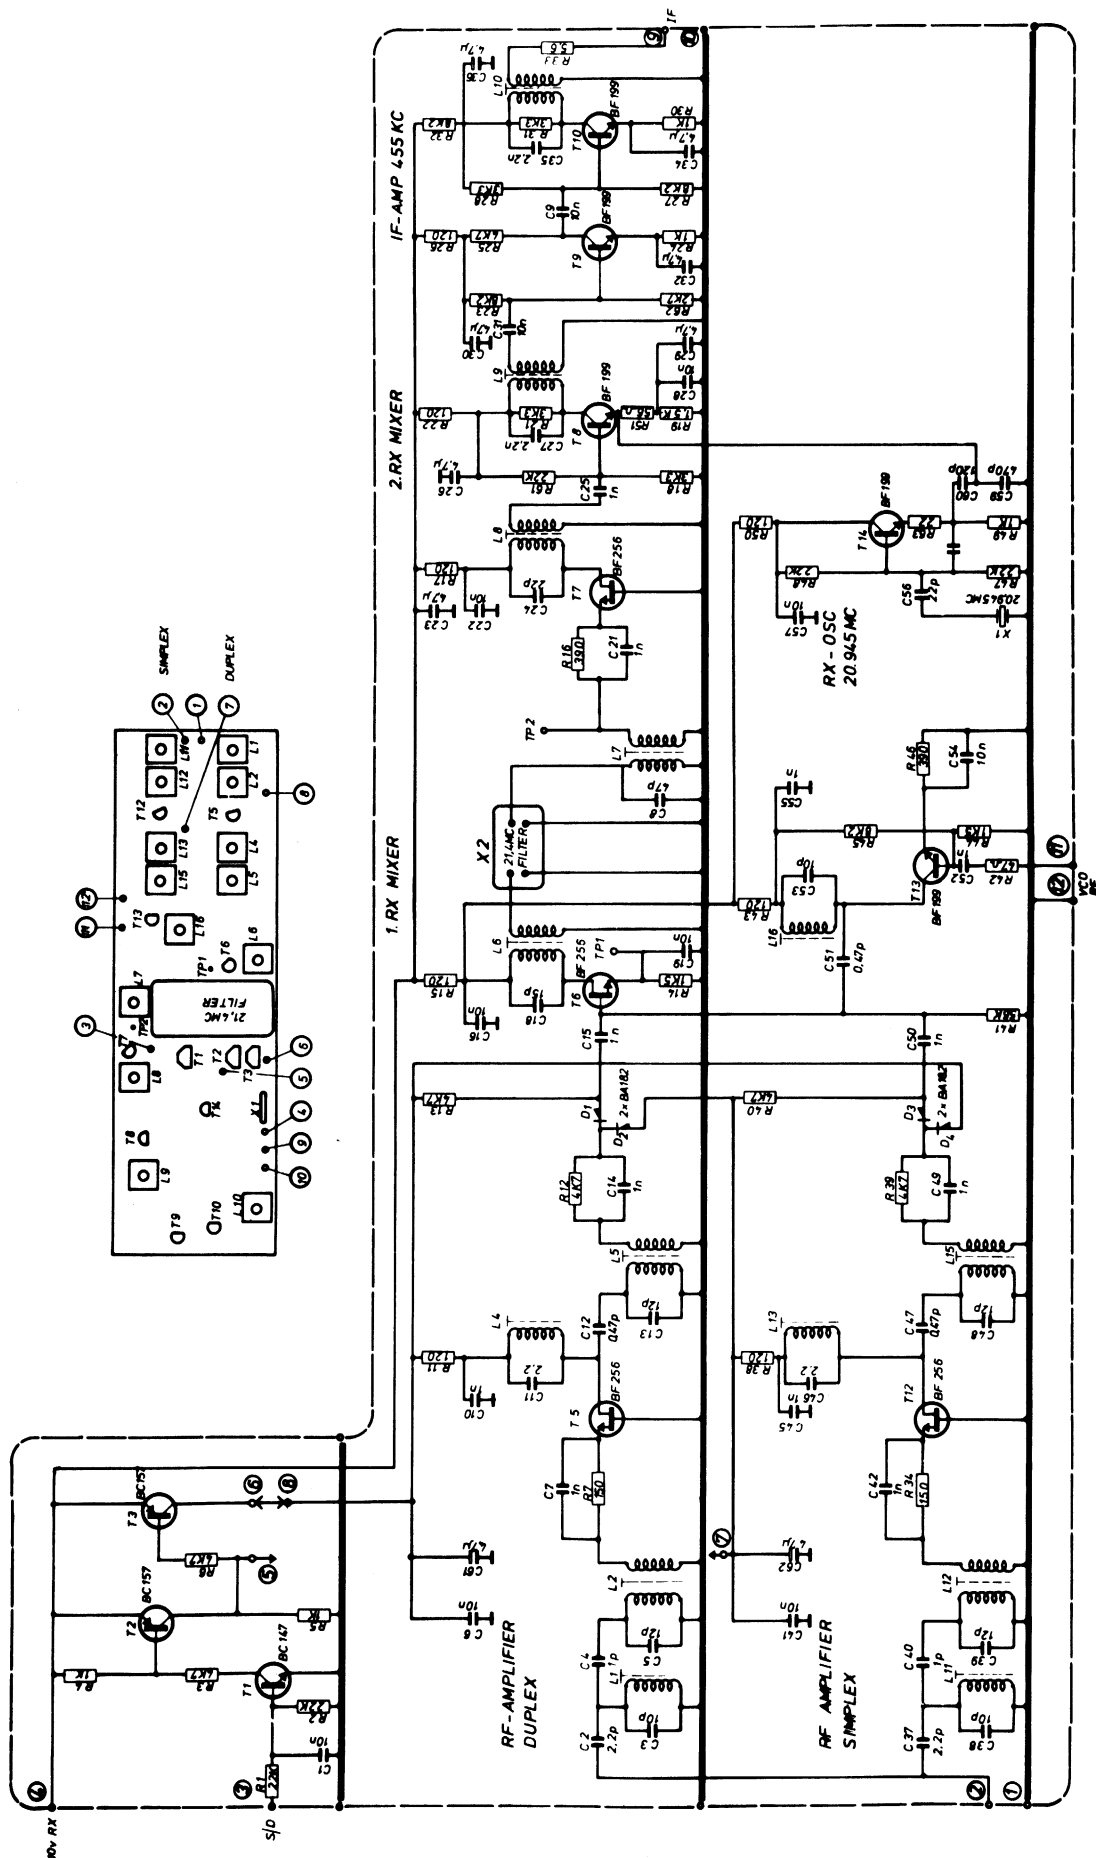


RF-IF-AMPLIFIER. MODULE 413

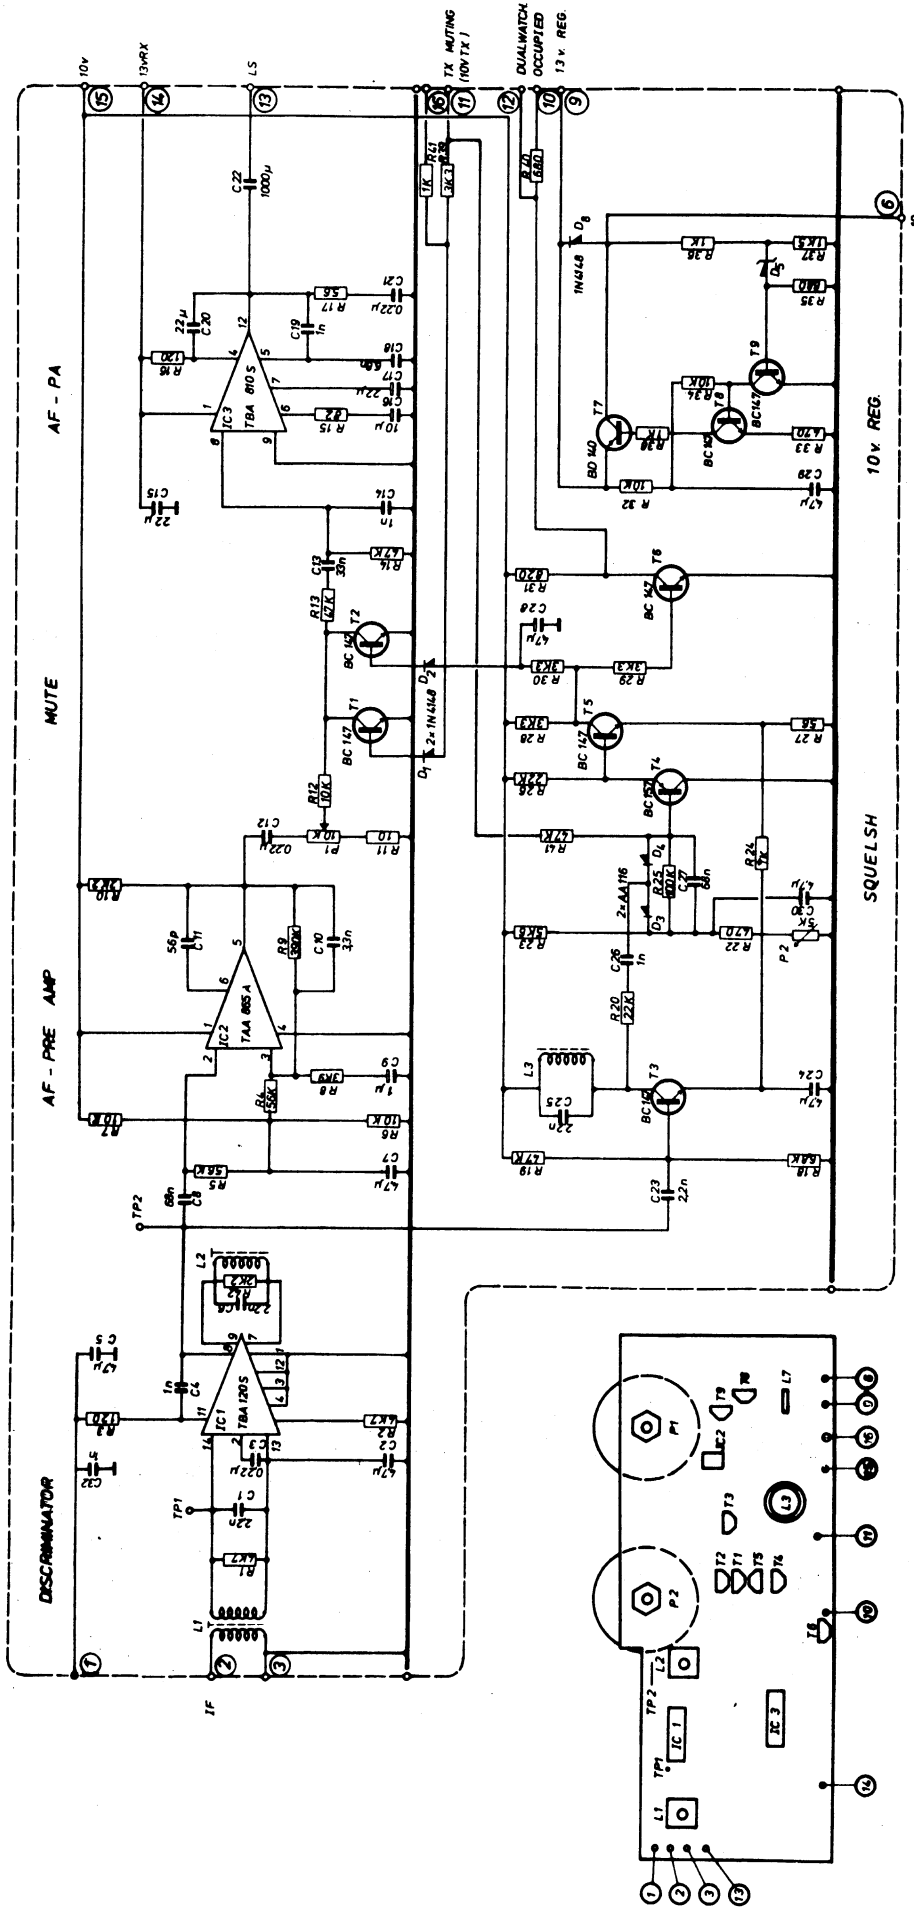


AF-AMPLIFIER. MODULE 405

### POWER SUPPLY 220

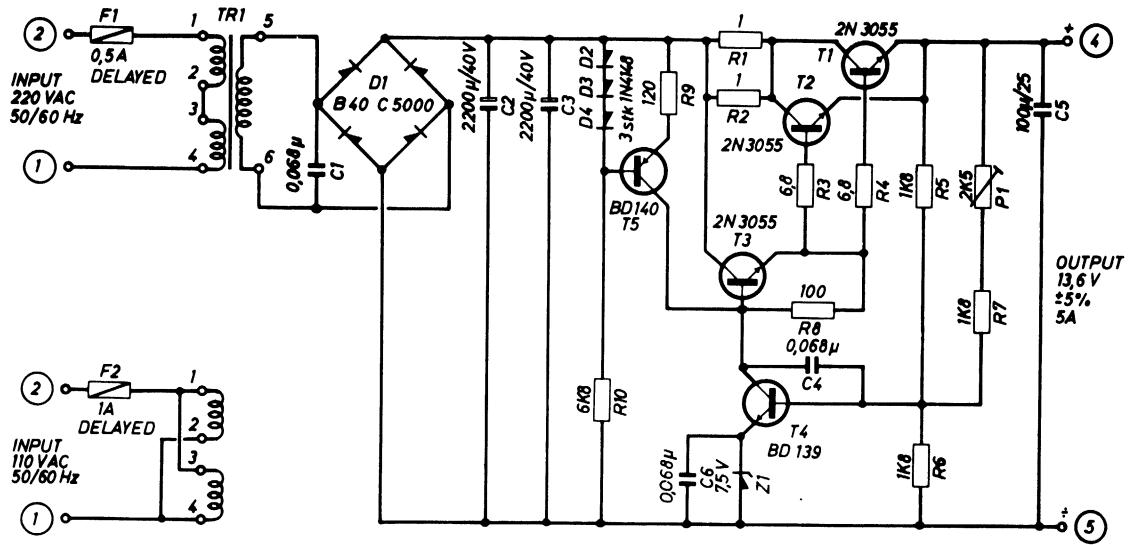

### POWER SUPPLY 24B

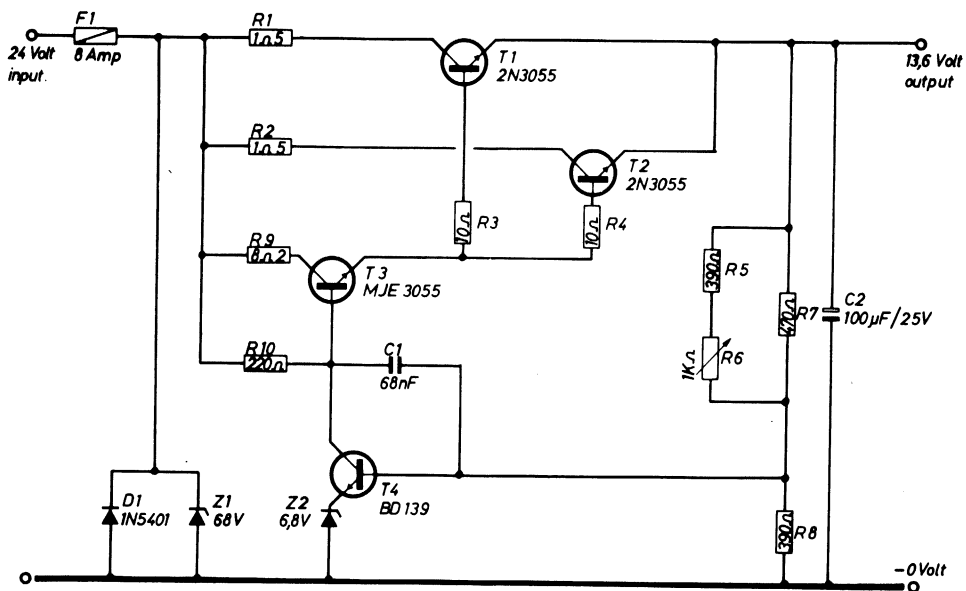

## PARTS LISTS

## SYNTHESIZER MODULE 410

R1	Resistor	120 ohm	5%	0.33W	01.138	C1-3	Capacitor, cer	1 nF	30V	14.901
R2	Resistor	390 ohm	5%	0.33W	01.144	C5	Capacitor, cer	47 pF		14.333
R3	Resistor	8,2 kohm	5%	0.33W	01.160	C6	Capacitor, tantal	4,7 uF		13.121
R4	Resistor	120 ohm	5%	0.33W	01.138	C7	Capacitor, cer	10 nF	30V	14.906
R5	Resistor	1,5 kohm	5%	0.33W	01.151	C8-9	Capacitor, cer	1 nF	30V	14.901
R6-7	Resistor	47 ohm	5%	0.33W	01.133	C10	Capacitor, cer	10 nF	30V	14.906
R9	Resistor	82 kohm	5%	0.33W	01.272	C11	Capacitor, tantal	4,7 uF		13.121
R10	Resistor	2,7 kohm	5%	0.33W	01.154	C13	Capacitor, cer	10 pF		14.125
R11	Resistor	82 kohm	5%	0.33W	01.272	C14	Capacitor, cer	12 pF		14.126
R12	Resistor	1 kohm	5%	0.33W	01.149	C15	Capacitor, cer	10 pF	30V	14.906
R13	Resistor	56 kohm	5%	0.33W	01.270	C16	Capacitor, cer	33 pF		14.131
R14	Resistor	560 ohm	5%	0.33W	01.146	C18	Capacitor, cer	33 pF		14.131
R15	Resistor	10 ohm	5%	0.33W	01.225	C19	Capacitor, styrof.	220 pF	5%	10.133
R16	Resistor	2,7 kohm	5%	0.33W	01.154	C20	Capacitor, cer	47 pF		14.333
R17	Resistor	2,2 kohm	5%	0.33W	01.153	C21	Capacitor, styrof.	56 pF	5%	10.119
R18	Resistor	1 mohm	5%	0.33W	01.185	C23	Capacitor, cer	1 nF	30V	14.901
R20	Resistor	8,2 kohm	5%	0.33W	01.260	C24	Capacitor, cer	0.47 pF		14.109
R21	Resistor	22 kohm	5%	0.33W	01.165	C25	Capacitor, cer	1 nF	30V	14.901
R23	Resistor	4,7 kohm	5%	0.33W	01.157	C26	Capacitor, cer	12 pF		14.126
R24	Resistor	8,2 kohm	5%	0.33W	01.160	C27	Capacitor, cer	22 pF		14.129
R25	Resistor	120 ohm	5%	0.33W	01.138	C28	Capacitor, cer	10 nF	30V	14.906
R26	Resistor	2,2 kohm	5%	0.33W	01.153	C29-30	Capacitor, styrof.	220 pF	5%	10.133
R27-28	Resistor	15 kohm	5%	0.33W	01.163	C31	Capacitor, cer	82 pF		14.336
R29	Resistor	1 kohm	5%	0.33W	01.149	C32	Cap. feed-through	1 nF		15.502
R30	Resistor	1,5 kohm	5%	0.33W	01.151	C34	Capacitor, tantal	4,7 uF		13.121
R31	Resistor	8,2 kohm	5%	0.33W	01.160	C35-36	Capacitor, poly	0.22 uF		11.229
R32-33	Resistor	120 ohm	5%	0.33W	01.138	C37	Capacitor, cer	10 nF	30V	14.906
R34	Resistor	10 ohm	5%	0.33W	01.125	C39	Capacitor, tantal	4,7 uF		13.121
R35	Resistor	47 ohm	5%	0.33W	01.133	C40	Capacitor, poly	0,22 uF		11.229
R36	Resistor	8,2 kohm	5%	0.33W	01.160	P1	Capacitor, var	3,5-18 pF		17.101
R37	Resistor	15 kohm	5%	0.33W	01.163	L1	Coil			04.0431
R38	Resistor	1 kohm	5%	0.33W	01.149	L2	Coil			04.0435
R40	Resistor	120 ohm	5%	0.33W	01.138	L3	Coil			04.0434
R41	Resistor	47 kohm	5%	0.33W	01.169	L4-5	Coil			04.0430
R42	Resistor	560 ohm	5%	0.33W	01.146	L6	Coil			04.0433
R44	Resistor	1 kohm	5%	0.33W	01.149	L7	Coil			04.0432
R45	Resistor	470 ohm	5%	0.33W	01.245	L8	Choke	2,2 uH		22.106
R46	Resistor	470 ohm	5%	0.33W	01.145	D1-4	Diode	AA 116		39.102
R47	Resistor	470 ohm	5%	0.33W	01.245	D5	Diode	1N 4148		39.103
R48-50	Resistor	2,7 kohm	5%	0.33W	01.154	D6	Diode	BA 182		39.101
R52-55	Resistor	2,7 kohm	5%	0.33W	01.154	T1	Transistor	BF 199		33.102
R58	Resistor	47 ohm	5%	0.33W	01.233	T2-4	Transistor	BC 147		32.101
IC1-2	Integrated circuit	SN 74193			36.107	T7	Transistor	BC 147		32.101
IC3	Integrated circuit	MC 4044			36.111	T8-10	Transistor	BF 199		33.102
IC4-5	Integrated circuit	SN 7493			36.105	T11	Transistor	BC 147		32.101
X1	Crystal	43,7 MHz			50.109	T12	Transistor	BC 157		32.102
X2	Crystal	45,2333 MHz			50.110	T13	Transistor	BC 147		32.101
X3	Crystal	6,4 MHz			50.108					32.101

## RF-IF AMPLIFIER MODULE 413

R1-2	Resistor	22 kohm 5%	0.33W	01.265	C10	Capacitor, cer	1 nF	30V	14.901
R3	Resistor	4,7 kohm 5%	0.33W	01.257	C11	Capacitor, cer	2,2 pF	NPO	14.117
R4-5	Resistor	1 kohm 5%	0.33W	01.249	C12	Capacitor, cer	0.47 pF		14.109
R6	Resistor	4,7 kohm 5%	0.33W	01.257	C13	Capacitor, cer	12 pF		14.126
R7	Resistor	150 ohm 5%	0.33W	01.239	C14-15	Capacitor, cer	1 nF	30V	14.901
R11	Resistor	120 ohm 5%	0.33W	01.238	C16	Capacitor, cer	10 nF	30V	14.906
R12-13	Resistor	4,7 kohm 5%	0.33W	01.157	C18	Capacitor, cer	15 pF		14.127
R14	Resistor	1,5 kohm 5%	0.33W	01.251	C19	Capacitor, cer	10 nF	30V	14.906
R15	Resistor	120 ohm 5%	0.33W	01.138	C21	Capacitor, cer	1 nF	30V	14.901
R16	Resistor	390 ohm 5%	0.33W	01.244	C22	Capacitor, cer	10 nF	30V	14.906
R17	Resistor	120 ohm 5%	0.33W	01.138	C23	Capacitor, tantal	4,7 uF	10V	13.121
R18	Resistor	3,3 kohm 5%	0.33W	01.255	C24	Capacitor, cer	22 pF	N 150	14.129
R19	Resistor	1,5 kohm 5%	0.33W	01.151	C25	Capacitor, cer	1 nF	30V	14.901
R21	Resistor	3,3 kohm 5%	0.33W	01.255	C26	Capacitor, tantal	4,7 uF	10V	13.121
R22	Resistor	120 ohm 5%	0.33W	01.138	C27	Capacitor, styrof.	2,2 nF		10.157
R23	Resistor	8,2 kohm 5%	0.33W	01.260	C28	Capacitor, cer	10 nF	30V	14.906
R24	Resistor	1 kohm 5%	0.33W	01.149	C29-30	Capacitor, tantal	4,7 uF	10V	13.121
R25	Resistor	4,7 kohm 5%	0.33W	01.157	C31	Capacitor, cer	10 nF	30V	14.906
R26	Resistor	120 ohm 5%	0.33W	01.138	C32	Capacitor, tantal	4,7 uF	10V	13.121
R27	Resistor	8,2 kohm 5%	0.33W	01.160	C34	Capacitor, tantal	4,7 uF	10V	13.121
R28	Resistor	3,3 kohm 5%	0.33W	01.155	C35	Capacitor, styrof.	2,2 nF		10.157
R30	Resistor	1 kohm 5%	0.33W	01.149	C36	Capacitor, tantal	4,7 uF	10V	13.121
R31	Resistor	3,3 kohm 5%	0.33W	01.155	C37	Capacitor, cer	2,2 pF	NPO	14.117
R32	Resistor	8,2 kohm 5%	0.33W	01.160	C38	Capacitor, cer	10 pF		14.125
R33	Resistor	5,6 ohm 5%	0.33W	01.122	C39	Capacitor, cer	12 pF		14.126
R34	Resistor	150 ohm		01.239	C40	Capacitor, cer	1 pF	250V	14.113
R38	Resistor	120 ohm 5%	0.33W	01.238	C41	Capacitor, cer	10 nF	30V	14.906
R39-40	Resistor	4,7 kohm 5%	0.33W	01.157	C42	Capacitor, cer	1 nF	30V	14.901
R41	Resistor	56 kohm 5%	0.33W	01.270	C45	Capacitor, cer	1 nF	30V	14.901
R42	Resistor	47 ohm 5%	0.33W	01.233	C46	Capacitor, cer	2,2 pF	NPO	14.117
R43	Resistor	120 ohm 5%	0.33W	01.238	C47	Capacitor, cer	0.47 pF		14.109
R44	Resistor	1,5 kohm 5%	0.33W	01.151	C48	Capacitor, cer	12 pF		14.126
R45	Resistor	8,2 kohm 5%	0.33W	01.160	C49-50	Capacitor, cer	1 nF	30V	14.901
R46	Resistor	390 ohm 5%	0.33W	01.144	C51	Capacitor, cer	0.47 pF	30V	14.109
R47-48	Resistor	22 kohm 5%	0.33W	01.165	C52	Capacitor, cer	1 nF	30V	14.901
R49	Resistor	1 kohm 5%	0.33W	01.149	C53	Capacitor, cer	10 pF		14.125
R50	Resistor	120 ohm 5%	0.33W	01.138	C54	Capacitor, cer	10 nF	30V	14.906
R51	Resistor	56 ohm 5%	0.33W	01.234	C55	Capacitor, cer	1 nF	30V	14.901
R61	Resistor	22 kohm 5%	0.33W	01.265	C56	Capacitor, cer	22 pF	N 150	14.129
R62	Resistor	2,7 kohm 5%	0.33W	01.154	C57	Capacitor, cer	10 nF	30V	14.906
C1	Capacitor, cer	10 nF	30V	14.906	C58	Capacitor, styrof.	100 pF	5%	10.125
C2	Capacitor, cer	2,2 pF	NPO	14.117	C59	Capacitor, styrof.	470 pF	5%	10.141
C3	Capacitor, cer	10 pF		14.125	C60	Capacitor, styrof.	120 pF	5%	10.127
C4	Capacitor, cer	1 pF	250V	14.113	C61-62	Capacitor, tantal	4,7 uF		13.121
C5	Capacitor, cer	12 pF		14.126	T1	Transistor	BC 147		32.101
C6	Capacitor, cer	10 nF	30V	14.906	T2-3	Transistor	BC 157		32.102
C7	Capacitor, cer	1 nF	30V	14.901	T5-7	Transistor	BF 256 LA		34.101
C8	Capacitor, cer	47 pF	63V	14.333	T8-10	Transistor	BF 199		33.102
C9	Capacitor, cer	10 nF	30V	14.906	T12	Transistor	BF 256 LA		34.101

RF-IF AMPLIFIER MODULE 413

Tl3-14	Transistor	BF 199	33.102	L1	Coil	04.0401
				L2	Coil	04.0404
D1-4	Diode	BA 182	39.101	L3	Coil	04.0405
				L4	Coil	04.0402
X1	Crystal	20,945 MHz	50.111	L5	Coil	04.0405
X2	Crystal filter	21,4 MHz	50.207	L6	Coil	04.0404
				L7	Coil	04.0405
L1	Coil		04.0444	L8	Coil	04.0402
L2	Coil		04.0461	L9	Coil	04.0405
L4	Coil		04.0446	L10	Coil	04.0404
L5	Coil		04.0447	L11	Coil	04.0405
L6	Coil		04.0448	L12	Coil	04.0403
L7	Coil		04.0421			
L8	Coil		04.0450			
L9	Coil		04.0423			
L10	Coil		04.0424			
L11	Coil		04.0444			
L12	Coil		04.0461			
L13	Coil		04.0446			
L15	Coil		04.0447			
L16	Coil		04.0443			

VHF-DRIVER MODULE 412

R1	Resistor		120 ohm	5%	0.33W	01.238
R5	Resistor		120 ohm	5%	0.33W	01.238
R6	Resistor		390 ohm	5%	0.33W	01.244
R7	Resistor		1,5 kohm	5%	0.33W	01.251
R8	Resistor		4,7 kohm	5%	0.33W	01.257
R9	Resistor		120 ohm	5%	0.33W	01.238
R10	Resistor		390 ohm	5%	0.33W	01.244
R11	Resistor		2,2 kohm	5%	0.33W	01.253
R12	Resistor		33 ohm	5%	0.33W	01.131
R13	Resistor		47 ohm	5%	0.33W	01.233
R14	Resistor		120 ohm	5%	0.33W	01.238
R15	Resistor		12 ohm	5%	0.33W	01.126
R16	Resistor		10 kohm	5%	0.33W	01.161
R17	Resistor		2,2 kohm	5%	0.33W	01.153

POWER AMPLIFIER MODULE 401

R1	Resistor,	33 ohm	5%	0.33W		
R2	Resistor,	10 ohm	5%	0.33W		
R3-4	Resistor,	15 ohm	5%	0.33W		
C1	Capacitor, cer	1 nF		30V		
C2-8	Capacitor, var	10-80 pF				
C9	Capacitor, chip	1 nF				
C10	Capacitor, cer	10 nF				
C11	Capacitor, tantal	10 uF		16V		
C12	Capacitor, cer	1 nF		30V		
C13	Capacitor, poly	0,068 uF	20%			
C15	Capacitor, chip	1 nF				
C16	Capacitor, poly	0,068 uF	20%			
C17	Capacitor, chip	1 nF				
C18	Capacitor, poly	0,068 uF	20%			
C19	Capacitor, poly	0,47 uF				
C20	Capacitor, poly	0,068 uF	20%			
T1	Transistor w/nut	2 N 6080				
T2	Transistor w/nut	2 N 6081				
T3	Transistor w/nut	2 N 6083				
F1	Fuse	8 Amp		5 x 20 mm		
PL2	Coax. connector	BNC				
C1	Capacitor, cer			2,2 pF	NPO	14.117
C2	Capacitor, cer			12 pF	30V	14.126
C3	Capacitor, cer			0,47 pF		14.109
C4	Capacitor, cer			10 pF		14.125
C5	Capacitor, cer			1 nF	30V	14.901
C8	Capacitor, cer			1 nF	30V	14.901
C9	Capacitor, cer			2,2 pF	NPO	14.117
C10	Capacitor, cer			0,47 pF		14.109
C11	Capacitor, cer			15 pF		14.127
C12	Capacitor, cer			1 nF	30V	14.901
C13	Capacitor, tantal			4,7 uF	10V	13.121
C14-16	Capacitor, cer			1 nF	30V	14.901
C17	Capacitor, cer			8,2 pF		14.124
C18	Capacitor, cer			1 nF	30V	14.901
C19	Capacitor, cer			8,2 pF		14.124
C20	Capacitor, cer			1 nF	30V	14.901
C21	Capacitor, cer			1 pF	250V	14.113
C22	Capacitor, cer			1 nF	30V	14.901



VHF DRIVER MODULE 412

C23	Capacitor, cer	8,2 pF	14.124	R36	Resistor	1 kohm 5%	0.33W	01.149
C24	Capacitor, cer	12 pF	14.126	R37	Resistor	1,5 kohm 5%	0.33W	01.151
C25	Capacitor, cer	1 nF	14.901	R38	Resistor	2,2 kohm 5%	0.33W	01.153
C26	Capacitor, cer	47 pF	14.333	R39	Resistor	3,3 kohm 5%	0.33W	01.155
T2	Transistor	BF 256	34.101	R40	Resistor	680 ohm 5%	0.33W	01.147
T3	Transistor	BF 199	33.102	R41	Resistor	56 kohm 5%	0.33W	01.270
T4-5	Transistor	2 N 4427	31.104	R42	Resistor	2,2 kohm 5%	0.33W	01.153

L1	Coil		04.0452	C1	Capacitor, styrof.	2,2 nF	5%	10.157
L2	Coil		04.0461	C2	Capacitor, ellyt	4,7 uF		13.121
L4	Coil		04.0446	C3	Capacitor, poly	0.22 uF		11.229
L5	Coil		04.0455	C4	Capacitor, cer	1 nF		14.901
L6	Coil		04.0456	C5	Capacitor, ellyt	4,7 uF		13.121
L7	Coil		04.0457	C6	Capacitor, styrof.	2,2 nF	5%	10.157
L8	Coil		04.0458	C7	Capacitor, ellyt	4,7 uF		13.121
L9	Coil		04.0459	C8	Capacitor, poly	0.068 uF		11.223
				C9	Capacitor, ellyt	1 uF		13.113
				C10	Capacitor, styrof.	3,3 nF	5%	10.161
				C11	Capacitor, styrof.	56 pF		10.119
				C12	Capacitor, poly	0.22 uF		11.229
				C13	Capacitor, poly	0,033 uF		11.319
				C14	Capacitor, cer	1 nF		14.901
				C15	Capacitor, ellyt	22 u		13.129
				C16	Capacitor, ellyt	10 u		13.125
				C17	Capacitor, ellyt	22 u		13.129
				C18	Capacitor, poly	0,0068uF	20%	11.111
				C19	Capacitor, cer	1 nF		14.901
				C20	Capacitor, ellyt	22 u		13.129
				C21	Capacitor, poly	0,22 uF		11.229
				C22	Capacitor, ellyt	1000 uF		12.249
				C23	Capacitor, styrof.	2,2 nF	5%	10.157
				C24	Capacitor, ellyt	4,7 uF		13.121
				C25	Capacitor, styrof.	2,2 nF	5%	10.157
				C26	Capacitor, cer.	1 nF		14.901
				C27	Capacitor, poly	0,068 uF		11.223
				C28-31	Capacitor, ellyt	4,7 uF		13.121
				C32	Capacitor, cer	1 nF		14.901

AF AMPLIFIER MODULE 405

R1-2	Resistor	4,7 kohm 5%	01.157	D1-2	Diode	1N 4148		39.103
R3	Resistor	120 ohm 5%	01.138	D3-4	Diode	AA 116		39.102
R4-5	Resistor	56 kohm 5%	01.170	D5	Diode, Zener	5,1V	0,4W	39.707
R6-7	Resistor	10 kohm 5%	01.161	D8	Diode	1N 4148		39.103
R8	Resistor	3,9 kohm 5%	01.156	T1-3	Transistor	BC 147		32.101
R9	Resistor	390 kohm 5%	01.180	T4	Transistor	BC 157		32.102
R10	Resistor	2,2 kohm 5%	01.153	T5-6	Transistor	BC 147		32.101
R11	Resistor	10 ohm 5%	01.125	T7	Transistor	BD 140		30.102
R12	Resistor	10 kohm 5%	01.161	T8-9	Transistor	BC 147		32.101
R13-14	Resistor	47 kohm 5%	01.169					
R15	Resistor	82 ohm 5%	01.136					
R16	Resistor	120 ohm 5%	01.138					
R17	Resistor	5,6 ohm 5%	01.122					
R18	Resistor	6,8 kohm 5%	01.159					
R19	Resistor	47 kohm 5%	01.169					
R20	Resistor	22 kohm 5%	01.165					
R22	Resistor	470 ohm 5%	01.145					
R23	Resistor	5,6 kohm 5%	01.158					
R24	Resistor	1 kohm 5%	01.149					
R25	Resistor	100 kohm 5%	01.173					
R26	Resistor	22 kohm 5%	01.165					
R27	Resistor	56 ohm 5%	01.134					
R28-30	Resistor	3,3 kohm 5%	01.155					
R31	Resistor	820 ohm 5%	01.148					
R32	Resistor	10 kohm 5%	01.161					
R33	Resistor	470 ohm 5%	01.145					
R34	Resistor	10 kohm 5%	01.161					
R35	Resistor	680 ohm 5%	01.147					



VHF- EXCITER MODULE 427

C43	Capacitor, cer	4,7 pF	14.121		
C44	Capacitor, cer	12 pF	14.126		
C45	Capacitor	470 uF	12.465		
				40V	
T1-4	Transistor	BC 147	32.101		
T5	Transistor	BF 199	33.102		
T6-7	Transistor	BC 147	32.101		
T8-9	Transistor	BF 199	33.102		
T11	Transistor	BC 147	32.101		
T12-14	Transistor	BF 256 LA	34.101		
IC1	Integrated circuit	TAA 865A	35.102		
D1	Diode, zener	8,2V	39.708		
D2-3	Diode, cap,	BB 103	39.401	0,4W	
D4-7	Diode	AA 116	39.102		
D8	Diode, cap	BB 103	39.401		
D10	Diode, cap	BB 103	39.401		
X1	Crystal	16,8 MHz	50.106		
X2	Crystal	21,4 MHz	50.107		
L1	Coil		04.0439		
L2	Coil		04.0460		
L3	Coil		04.0438		
L4	Coil		04.0460		
L5	Coil		04.0435		
L6	Coil		04.0434		
L7	Coil		04.0436		
L8	Coil		04.0437		
L9	Coil		04.0462		

CHANNEL UNIT MODULE 436

R1	Resistor	10 ohm 5%	01.125		
R2-21	Resistor	4,7 kohm 5%	01.157		
R22	Resistor	1 kohm 5%	01.149		
C1	Capacitor, cer.	10 nF	14.906	30V	
D1-29	Diode	1N 4148	39.103		
T1-3	Transistor	BC 147	32.101		
IC1	Integrated circuit	SN 7400	36.102		
IC2-4	Integrated circuit	SN 7402	36.112		
IC5	Integrated circuit	SN 7410	36.103		
	IC PROM,	Yellow	36.803		
	IC PROM	Blue	36.113		

Fuse IC 80.507  
 Print connector 11 poles 80.609

FUNCTION UNIT MODULE 437

R1	Resistor	1,0 kohm 5%	01.149	0,33W	
R2	Resistor	4,7 kohm 5%	01.157	0,33W	
R3-6	Resistor	1,0 kohm 5%	01.149	0,33W	
R7-8	Resistor	10 kohm 5%	01.161	0,33W	
R9	Resistor	270 ohm 5%	01.142	0,33W	
R10	Resistor	10 ohm 5%	02.225	3W	
R11-14	Resistor	4,7 kohm 5%	01.157	0,33W	
R15	Resistor	1,0 kohm 5%	01.149	0,33W	
R16	Resistor	56 kohm 5%	01.170	0,33W	
R17	Resistor	22 kohm 5%	01.165	0,33W	
R18	Resistor	1,0 kohm 5%	01.149	0,33W	
R19-20	Resistor	4,7 kohm 5%	01.157	0,33W	
C1-2	Capacitor, ellyt	47 uF	12.233	16V	
D1-7	Diode	1N 4148	39.103		
Z1-2	Zenerdiode	5,1 V	39.707	0,4 W	
T1	Transistor	BD 139	32.102		
T2-3	Transistor	BD 140	30.102		
T4	Transistor	BC 147	32.101		
T5	Transistor	BD 139	30.101		
T6-9	Transistor	BC 147	32.101		
	Cooling block		83.115		

JUNCTIONBOX MODULE 425

R1	Resistor	390 ohm	01.144	0.33W	
C1-2	Capacitor, chip	1 nF	15.401		
C3	Capacitor	0,47 uF	11.433		
PL3	Multiconnector	14 poles	05.0428		
	Screwconnector	12 poles	82.203		
	Aluminium connector		65.249		
	Microtelephone		28.106		
	Microtelephone capsula				
	Microswitch for key				
	Cradle				

## POWER SUPPLY 220

RL-2	Resistor	16 W	02.513
R3-4	Resistor	5 W	02.323
R5-7	Resistor	0,33 W	01.152
R8	Resistor	0,33 W	01.237
R9	Resistor	0,33 W	01.138
RL0	Resistor	0,33 W	01.159
C1	Capacitor, poly	0,068 uF	11.223
C2-3	Capacitor, ellyt	2200 u	12.553
C4	Capacitor, poly	0,068 uF	11.223
C5	Capacitor, ellyt	100 uF	12.337
C6	Capacitor, poly	0,068 uF	11.223
D1	Rectifier	5 A	38.202
D2-4	Diode	1N4148	39.103
Z1	Zenerdiode	6,8 V	39.709
F1	Fuse	0,8 A	55.404
P1	Potentiometer	2,5 K	04.154
TR1	Transf.	PS 220	26.107
T1-3	Transistor	2N3055	30.105
T4	Transistor	BD 139	30.101
T5	Transistor	BD 140	30.102

## POWER SUPPLY 24B

RL-2	Resistor	16 W	02.515
R3-4	Resistor	3 W	02.225
R5	Resistor	0,33 W	01.144
R6	Resistor	1 K ohm	04.149
R7	Resistor	470 ohm 5%	01.145
R8	Resistor	390 ohm 5%	01.144
R9	Resistor	8,2 ohm 5%	02.324
RL0	Resistor	220 ohm 5%	02.241
C1	Capacitor, poly	0,068 uF	11.223
C2	Capacitor, ellyt	100 uF	12.337
D1	Diode	1N5401	38.102
Z1	Zenerdiode	68 V	39.711
Z2	Zenerdiode	6,8 V	39.709
F1	Fuse	8A	55.409
	Cover	PS 24B	65.332
	Mounting plate		65.333
T1-2	Transistor	2N 3055	30.105
T3	Transistor	MJE 3055	30.108
T4	Transistor	BD 139	30.101

## COMPONENTS MOUNTED ON CHASSIS

RL	Resistor	10 ohm	16W	02.525
	Mounting Kit for resistor			09.101
D1	Diode	5401		38.102
LD1-2	Light diode			39.301
LA1	Dial lamp	12V	30mA	55.303
	Fuseholder			80.207
	Fuse		8A	55.406
PL2B	BNC Socket			80.708
PL1A	Multiconnector	14 p.		80.110
	Antennarelay			27.107
	Powerrelay			27.106
SQ	Potentiometer	5 kohm, lin.		05.205
AF	Potentiometer	10 kohm, log.		05.212
DIM	Potentiometer	250 ohm		05.211
	Rotary switch	3 pos.		86.125
	Rotary switch	10 pos.		86.113
	Button with line			81.213
	Button without line			81.214
	Button cover			81.215
	Number dial "1"			81.217
	Number dial "10"			81.218
	Frontplate "RT 403 B"			69.256
	Diallight window			60.149
	Cabinet			22.160
	Thumbscrew			62.158

## ACCESSORIES

	Loudspeaker			28.103
	Channel table			60.130