# 8 WARRANTY AND SPECIFICATIONS

#### THREE YEAR LIMITED WARRANTY

R.L. DRAKE COMPANY warrants to the original purchaser this product shall be free from defects in material or workmanship for three (3) years from the date of original purchase.

During the warranty period the R.L. DRAKE COMPANY or an authorized Drake service facility will provide, free of charge, both parts and labor necessary to correct defects in material and workmanship. At its option, R.L. DRAKE COMPANY may replace a defective unit.

To obtain such warranty service, the original purchaser must:

(1) Retain invoice or original proof of purchase to establish the start of the warranty period.

(2) Notify the R.L. DRAKE COMPANY or the nearest authorized service facility, as soon as possible after discovery of a possible defect, of:

(a) the model and serial number,

(b) the identity of the seller and the approximate date of purchase; and

(c) A detailed description of the problem, including details on the electrical connection to associated equipment and the list of such equipment.

(3) Deliver the product to the R.L. DRAKE COMPANY or the nearest authorized service facility, or ship the same in its original container or equivalent, fully insured and shipping charges prepaid.

Correct maintenance, repair, and use are necessary to obtain proper performance from this product. Therefore carefully read the Instruction Manual. This warranty does not apply to any defect that R.L. DRAKE COMPANY determines is due to:

(1) Improper maintenance or repair, including the installation of parts or accessories that do not conform to the quality and specifications of the original parts.

(2) Misuse, abuse, neglect or improper installation.

(3) Accidental or intentional damage

All implied warranties, if any, including warranties of merchantability and fitness for a particular purpose, terminate three (3) years from the date of the original purchase.


The foregoing constitutes R.L. DRAKE COMPANY'S entire obligation with respect to this product, and the original purchaser shall have no other remedy and no claim for incidental or consequential damages, losses or expenses. Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusions or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This warranty shall be construed under the laws of Ohio.



R.L. DRAKE COMPANY 230 INDUSTRIAL DRIVE FRANKLIN, OHIO 45005 U.S.A. CUSTOMER SERVICE AND PARTS TELEPHONE: +1 (937) 746-6990 TELEFAX: +1 (937) 743-4576 WORLD WIDE WEB SITE: http://www.rldrake.com

© Copyright 2002 R.L. Drake Company P/N: 3852413B-2-2002 Printed in U.S.A.

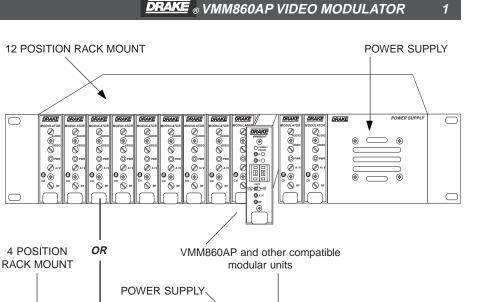

DRAKE

**(‡**)

æ

The R.L. Drake Video Modulator System is a professional quality modular headend system designed to optimize rack space. An

0

 $\bigcirc$ 

æ

assortment of up to (12) modular units, such as the fixed channel series of modulators, or agile modulators, or compatible audio/video products can be racked alongside a single power supply in the Drake12 position rack mount. The 4 position rack mount accepts up to (4) modular units.

The R.L. Drake VMM860AP Audio-Video Modulator is a high quality, vestigial sideband unit with synthesized visual and aural carriers. The frequency agile VMM860AP allows front panel pushwheel switch selection of standard CATV channels 2 through 135, or VHF/UHF TV channels 2 through 69. Aeronautical channels are offset positive with a tolerance of ±5 kHz as required by FCC rules.

The heterodyne conversion system, in conjunction with the use of a SAW filter, ensures optimum vestigial selectivity for adjacent channel headends.

An optional FCC predistortion SAW response is also available for the VMM860AP.

٩


\$

 $\bigcirc$ 

The modulator is designed to accept any standard audio/video source such as NTSC video and audio baseband signals from a satellite receiver, TV camera, videotape recorder, TV demodulator, or similar signal source.

The modulator is designed to accept standard (negative sync) polarity video at 0.6 to 1.5 Vp-p level. All level controls are located on the front panel for ease of operation. Output level is +45 dBmV and is adjustable over a 15 dB range.

Field-defeatable audio pre-emphasis allows transmission of BTSC encoded baseband stereo audio signals using the Drake stereo encoder. The AUDIO INPUT can also accept a 4.5 MHz audio modulated carrier by changing internal jumpers.

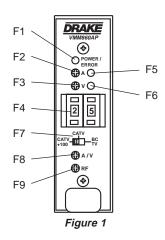

# F1 - POWER/ERROR Indicator

Lights when the unit is connected to the required source of DC power via the rear panel DC INPUT connector. A flashing condition indicates an invalid channel setting or other conditions that would cause the unit to operate on an invalid channel. The RF output is switched off for flashing (ERROR) conditions.

#### F2 - AUDIO Level Control

The setting of this screwdriver adjustment determines the aural carrier deviation. Clockwise rotation increases the carrier deviation. See F8 for more detail.

### F3 - VIDEO Level Control

The setting of this screwdriver adjustment determines the video modulation level. Clockwise rotation increases the modulation depth.

#### F4 - Channel Number Switch

Sets the desired operating channel for standard CATV channels 02 through 135 or Broadcast TV channels 02 through 69. See also Item F7 which sets the type of channel (CATV or Broadcast TV) and sets the leading "1" for CATV channels 100 through 135.

#### F5 - AUDIO Over-Modulation Indicator

This LED will illuminate when the audio deviation exceeds ±25 kHz. Audio level, F2, should be adjusted until F8 just begins to blink on audio programming peaks.

### F6 - VIDEO Overmodulation Indicator


This LED will illuminate when the video modulation exceeds 87.5% (the desired setting is 87.5%). Video level, F3, should be set at a point just below the level where F6 illumninates. This adjustment must be made with normal program video preset at the video input.

## F7 - Mode Switch

Sets the type of channel, CATV or Broadcast TV ("BC TV"). The first position of the switch ("+100") sets a leading "1" for CATV channels 100 through 135. See also Item F4 for setting the channel number.

For example: Setting for CATV channel "125"-

For example: Setting for CATV channel "25"-

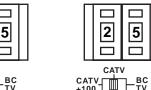

#### F8 - A/V Ratio Control

5


2

CATV

This screwdriver adjustment varies the level of the aural carrier over a range from 11 dB to 18 dB below the visual carrier. The aural carrier should be adjusted to approximately 15 dB below the visual carrier (normal operation). Clockwise rotation increases the aural carrier level. If test equipment is not available to make this measurement, set this control at 50%.

#### F9 - RF Output Level

This screwdriver adjustment permits decreasing the RF output level a minimum of 10 dB as the control is rotated counterclockwise. Set the control for a +45 dBmV output level.

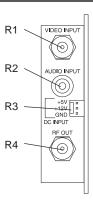

# Figure 2


4.5 MHz Audio Input: This AUDIO INPUT can also accept a 4.5 MHz audio modulated carrier by reconfiguring two specified internal jumper settings. Required 4.5 MHz input level is +40 dBmV ±2 dB. Some stereo generators or satellite receivers provide audio output in a 4.5 MHz audio modulated carrier format. See the illustration on this page.

## **R3 - DC INPUT Connector**

This 3-pin connector (Male) accepts the appropriate mating DC power cable. Observe proper orientation and wiring.

#### **R4 - RF OUTPUT Connector**

This is the modulator output.

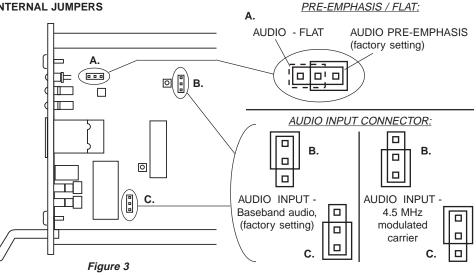

#### **INTERNAL JUMPERS**

3 Vrms levels.

**R1 - VIDEO INPUT Connector** 

levels from 0.6 Vp-p to 1.5 Vp-p.

**R2 - AUDIO INPUT Connector** 

This is the baseband video input to the IF

circuits. This input accepts baseband input

This is an unbalanced audio input to the IF

circuits. This "RCA" (phono) connector input

accepts baseband audio from 100 mVrms to

defeats the audio pre-emphasis for stereo

capability. See the illustration on this page.

**NOTE:** An internally selected test point jumper

# INSTALLATION

#### CONNECTIONS AND CONTROLS

All connections to and from each modulator are made through the rear panel. Figure 4 illustrates an installation with (12) modulator units combined through a passive signal combiner. Additional channels can be added by using additional fixed channel or agile type modulators and either multi-port combiners or combinations of two-port combiners.

#### **INSTALLATION NOTES**

Level adjustment provides optimum performance in multi-channel installations. The modulator outputs should be checked periodically with a spectrum analyzer to

maintain a ±1 dB variation of adjacent channel carriers. Aural/Visual (A/V) ratios should be held to -15 dB or less. The output 'RF' and 'A/V (Ratio)' controls are used respectively to make these adjustments.

#### **RACK MOUNTING**

Adequate ventilation is very important in multi-channel installations. Units should be spaced apart by at least one panel height wherever possible, and some air movement is mandatory in enclosed rack cabinets. Excessive heat will shorten component life and modulator performance will be degraded without proper cooling.

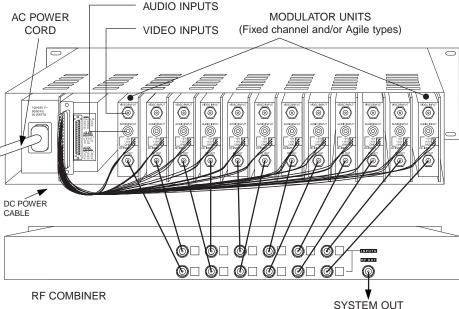


Figure 4

## POWER SUPPLY REQUIREMENT

This VMM860AP agile modulator requires more current than the fixed channel units. Therefore, new 12 position rack installations with multiple VMM860AP modulators (up to 12) must use the Drake PSM121 (or equivalent) high capacity power supply module (4.5 A rating @ 5 VDC and 3 A @ 12 VDC).

If you are retrofitting a 12 position rack installation and replacing only one of 12 fixed channel modulators with the VMM860AP agile unit, you may continue to use the standard capacity PSM120 power supply.

If more than one VMM860AP unit will be used, the power supply module must be upgraded to the high capacity PSM121, if not already in place.

The power supply in the four position rack system can power up to four VMM860AP modulators, or, any mix of fixed and agile VMM models, up to a total of four modulators.

	CATV
TABLE 1: CATV	

# CATV

CATV CHANNEL OUTPUT FREQUENCIES

5

Output Channel Switch Setting	Visual Carrier Frequency (MHz)	Frequency Offset (kHz)
02	55.25	NONE
03	61.25	NONE
04	67.25	NONE
05 06	67.25 77.25 83.25	NONE
07	175.25	NONE NONE
08	181.25	NONE
09	181.25 187.25	NONE
10	193.25	NONE
11	199.25 205.25	NONE
12 13	205.25 211.25	NONE NONE
13	121.25	±12.5
15	127.25	±12.5
16	133.25	±12.5
17	139.25	NONE
18	145.25	NONE
19	151.25	NONE
20	157.25	NONE
<u>21</u> 22	163.25 169.25	NONE NONE
22	217.25	NONE
23	223.25	+12.5
25	229.25	+12.5
26	235.25	+12.5
27	241.25	+12.5
28	247.25	+12.5
29	253.25 259.25	+12.5 +12.5
30 31	265.25 265.25	+12.5
32	271.25	+12.5
33	277.25	+12.5
34	283.25	+12.5
35	289.25	+12.5
36	295.25	+12.5
37	301.25	+12.5 +12.5
38 39	307.25 313.25	+12.5
40	319.25	+12.5
	325.25	+12.5
<u>41</u> 42	<u>325.25</u> 331.25	+25
43	337.25	+12.5
44	343.25 349.25	+12.5
45		+12.5
<u>46</u> 47	355.25	+12.5
47 48	361.25 367.25	+12.5 +12.5
49	373.25	+12.5
50	379.25	+12.5
51	<u>385.25</u> 391.25	+12.5
52	391.25	+12.5
53	397.25 403.25	+12.5
54 55	403.25 409.25	NONE NONE
55	409.25	NONE
57	421.25	NONE
58	427.25	NONE
59	433.25	NONE
60	439.25	NONE
61	445.25	NONE
62 63	451.25 457.25	NONE NONE
64	463.25	NONE
65	469.25	NONE
66	475.25	NONE
67	481.25	NONE
	487.25	NONE
68 69	493.25	NONE

1	Output Channel Switch Setting	Visual Carrier Frequency (MHz)	Frequency Offset (kHz)
	70	499.25	NONE
	71	505.25	NONE
	72 73	511.25 517.25	NONE NONE
	74	523.25	NONE
]	75	529.25	NONE
	76	535.25	NONE
	77 78	541.25 547.25	NONE NONE
	79	553.25	NONE
]	80	559.25	NONE
	81	565.25	NONE
	82 83	571.25 577.25	NONE NONE
	84	583.25	NONE
1	85	589.25	NONE
	86	595.25	NONE
	87 88	601.25 607.25	NONE NONE
	89	613.25	NONE
]	90	619.25	NONE
1	91	625.25	NONE
	92 93	631.25 637.25	NONE NONE
	94	643.25	NONE
	95	91.25	NONE
	96	97.25	NONE NONE
	97 98	103.25 109.25	+25
	99	115.25	+25
	CATV +100		
	100	649.25	NONE
1	101	655.25	NONE
	102	661.25	NONE
	103	667.25	NONE
	104 105	673.25 679.25	NONE NONE
1	106	685.25	NONE
	107	691.25	NONE
	108 109	697.25 703.25	NONE NONE
	110	709.25	NONE
1	111	715.25	NONE
1	112	721.25	NONE
1	113 114	727.25 733.25	NONE NONE
	115	739.25	NONE
1	116	745.25	NONE
1	117 118	751.25 757.25	NONE NONE
1	119	763.25	NONE
1	120	769.25	NONE
	121 122	775.25	NONE NONE
1	122	781.25 787.25	NONE
1	124	793.25	NONE
1	125	799.25	NONE
-		805.25	NONE
	126 127		NONF
	126 127 128	811.25 817.25	NONE NONE
	127 128 129	811.25 817.25 823.25	NONE
	127 128 129 130	811.25 817.25 823.25 829.25	NONE NONE NONE
-	127 128 129	811.25 817.25 823.25	NONE
-	127 128 129 130 131 132 133	811.25 817.25 823.25 829.25 835.25 841.25 847.25	NONE NONE NONE NONE NONE NONE
-	127 128 129 130 131 132	811.25 817.25 823.25 829.25 835.25 835.25 841.25	NÔNE NONE NONE NONE NONE

# BROADCAST TV CHANNEL OUTPUT FREQUENCIES

# TABLE 2: BC TV CATV +100-TV

6

+100	
VHF BROADCA	ST CHANNELS
Channel Number	Visual Carrier Frequency (MHz)
2	55.25
3	61.25
4	67.25
5	77.25
6	83.25
7	175.25
8	181.25
9	187.25
10	193.25
11	199.25
12	205.25
13	211.25

UHF BROADCA	UHF BROADCAST CHANNELS	
	Visual Carrier	
Channel Number	Frequency (MHz)	
14	471.25	
15	477.25	
16	483.24	
17	489.25	
18	495.25	
19	501.25	
20	507.25	
21	513.25	
22	519.25	
23	525.25	
24	531.25	
25	537.25	
26	543.25	
27	549.25	
28	555.25	
29	561.25	
30	567.25	
31	573.25	
32	579.25	
33	585.25	
34	591.25	
35 36	597.25 603.25	
30	609.25	
38	615.25	
39	621.25	
40	627.25	
40	633.25	
42	639.25	
43	645.25	
44	651.25	
45	657.25	
46	663.25	
47	669.25	
48	675.25	
49	681.25	
50	687.25	
51	693.25	
52	699.25	
53	705.25	
54	711.25	
55	717.25	
56 57	723.25 729.25	
	729.25 735.25	
<u>58</u> 59	735.25	
60	747.25	
61	753.25	
62	759.25	
63	765.25	
64	771.25	
65	777.25	
66	783.25	
67	789.25	
68	795.25	
	801.25	

CATV CATV +100 BC TV

RF	
Frequency Range:	54 to 860 MHz;
	Standard CATV channels 2 to 135,
	Broadcast TV channels 2 to 69.
FCC Frequency Offsets:	Automatic (+12.5 kHz, +25 kHz, or none as required for each
	channel).
Output level:	+45 dBmV (minimum 10 dB adjustment range).
Amplitude Stability:	
, , , , , , , , , , , , , , , , , , , ,	75 Ohms, 10 dB return loss.
	Audio carrier level, adjustable from -18 to -11 dB (±2 dB)
	referenced to video carrier level.
Frequency Stability:	
Intercarrier Frequency:	••
1 2	-60 dBc typical, measured at -15 dB A/V ratio and with
	modulator output level of +45 dBmV.
In-channel C/N	60 dB typical, 4 MHz bandwidth.
	-78 dBc typicial, 4 MHz bandwidth @ +45 dBmV output.
Broadbarid Noise.	
VIDEO	
	0.6 Vp-p to 1.5 Vp-p. Manual gain adjust with

Input Level for 87.5% Modulation:	0.6 Vp-p to 1.5 Vp-p. Manual gain adjust with front panel control.
Overmodulation Indicator:	Trips at 87.5% modulation depth.
Input Impedance:	75 Ohms, return loss of 20 dB minimum.
Frequency Response:	20 Hz to 4.2 MHz, ±1 dB.
C/L Delay:	Within 50 nSec. of 0 nSec. (standard), or
	FCC predistortion, (option).
Differential Gain:	3% maximum (10 to 90% APL).
Differential Phase:	3º maximum (10 to 90% APL).

AUDIO

Input Level for 25 kHz Peak Deviation:	100 mVrms to 3 Vrms. Manual gain adjust with front panel control.
Overmodulation Indicator:	Trips at $\pm 25$ kHz deviation. This indicator is only functional on monaural input signals. It is not usable for composite BTSC inputs.
Input Impedance:	Greater than 10 K Ohms, unbalanced.
Pre-emphasis:	$75 \mu\text{Sec.}$ , defeatable by internal jumper for BTSC baseband stereo compatibility.
Frequency Response:	40 Hz to 15 kHz, $\pm$ 1.0 dB referenced to 75 $\mu$ Sec. pre-emphasis curve.
	40 Hz to 100 kHz, ±0.5 dB if pre-emphasis is defeated.
S/N ratio:	55dB.
Total Harmonic Distortion:	Less than 1%.

## 4.5MHz INPUT

(AUDIO INPUT Connector –	selected by internal jumpers).
Input Impedance:	75 Ohms.
Input Level:	+40 dBmV ±2 dB for -15 dB A/V ratio.

## GENERAL

DC Power Input:	+12 V ±5% at 180 mA typical.
	+5 V ±5% at 360 mA typical.
Operating Temperature:	$0^{\circ}$ C to +50° C ambient.
Size:	1" W x 3.5" H x 7.5" D. (2.5 cm) W x (8.9 cm) H x (19.1 cm) D.
Weight:	10.7 oz. (0.3 Kg).

Specifications subject to change without notice or obligation.