

G1000[™]

*engine indication system
pilot's guide for Mooney
M20M & M20R*

Record of Revisions

Revision	Date of Revision	Revision Page Range	Description
A	05/23/05	7-1 – 7-8	Initial release.

The G1000 Engine Indication System (EIS) is designed to provide gauges, bar graphs and numeric readouts of engine parameters to the pilot. The EIS is displayed on the left side of the MFD during normal operations.



NOTE: Refer to the System Overview for information regarding reversionary mode.

The EIS contains three distinct pages, which are accessed by the **ENGINE** softkey:

Engine Page

This is the default page, which displays all critical engine, fuel and electrical indicators.

Lean Page

The Lean Page provides engine leaning information and a user interface to perform engine leaning.

System Page

The System Page displays a numeric readout for the critical engine, fuel and electrical indicators.

7.1 ENGINE

Atop all three pages are two (2) round dial gauges with a white pointer and digital readouts for manifold pressure and revolutions per minute (RPM). Below those gauges are color-coded horizontal bar indicators with triangular pointers and numeric readouts indicating fuel quantity (no numeric readout), fuel flow (normally aspirated), fuel pressure (turbocharged), oil pressure, oil temperature, exhaust gas temperature (EGT) of the hottest cylinder – for normally aspirated aircraft, turbine inlet temperature (TIT) – for turbocharged aircraft, and cylinder head temperature (CHT) of the hottest cylinder. The pointer on the horizontal bar indicators appears in white, which represents acceptable areas of operation. The pointer color changes to yellow or

red upon exceeding areas of normal operation. The green band is indicative of normal areas of operation. Located beneath the horizontal bar indicators are the electrical indicators. A numeric readout is provided for the bus voltage and battery amperage.

Manifold Pressure Gauge

The Manifold Pressure gauge displays the engine power in inches of mercury (in Hg).

- **White** – Normal operating range
- **Red** – Maximum manifold pressure (turbocharged)

Tachometer

The Tachometer displays propeller speed in revolutions per minute (RPM).

- **White** – Below normal flight operating range
- **Green** – Normal flight operating range
- **Red** – Propeller overspeed

Fuel Qty Indicator

The Fuel Quantity indicator displays the quantity of fuel in the tanks, in gallons. Two (2) triangular pointers labeled L (Left) and R (Right) indicate the number of gallons in each fuel tank.

- **Green** – Normal
- **Yellow** – Caution
- **Red** – Warning

Standard Tanks

The indicator ranges from 0 (Empty) to F (Full) with tick marks at 5 gallon intervals.



NOTE: The Fuel Quantity indicator only displays to 44.5 gallons when full.

Long Range Tanks (optional)

The Long Range tank option allows for 55 gallons per side (110 total). The indicator range is the same as the standard tank. The pointers will remain at Full until the quantity decreases below 44.5 gallons.



NOTE: Refer to the Aircraft Flight Manual (AFM) for limitations regarding fuel quantity.

Fuel Flow GPH Indicator (Normally Aspirated)

The Fuel Flow indicator displays current fuel flow in gallons per hour (GPH). The indicator ranges from 0 to 30. This indicator does not have a color band.

Fuel Pressure Indicator (Turbocharged)

The Fuel Pressure indicator displays the fuel pressure in pounds per square inch (PSI).

- **Green** – Normal
- **Yellow** – Caution
- **Red** – Warning (minimum and maximum)

Oil Pressure Indicator

The Oil Pressure indicator displays the pressure of the oil supplied to the engine in pounds per square inch (PSI).

- **Green** – Normal
- **Yellow** – Caution (low and high indications are on turbocharged aircraft only)
- **Red** – Warning (minimum and maximum)

Oil Temperature Indicator

The Oil Temperature indicator displays the engine oil temperature in degrees Fahrenheit.

- **Green** – Normal
- **Red** – Warning

EGT Indicator (Normally Aspirated)

The EGT (Exhaust Gas Temperature) indicator displays the exhaust gas temperature of the hottest cylinder in degrees Fahrenheit.

- **White** – Normal
- **Red** – Warning

TIT Indicator (Turbocharged)

The TIT (Turbine Inlet Temperature) indicator displays the temperature at the turbine inlet in degrees Fahrenheit.

- **Green** – Normal
- **Red** – Warning

CHT Indicator

The CHT (Cylinder Head Temperature) indicator displays the temperature of the hottest cylinder in degrees Fahrenheit. The number of the hottest cylinder appears in the triangle pointer.

- **Green** – Normal
- **Red** – Warning

Voltmeter

The Voltmeter displays the bus voltage for the selected battery (i.e., VOLTS1 or VOLTS2).

Ammeter

The Ammeter displays the battery amperage for the selected battery (i.e., BAT1 or BAT2).



NOTE: Refer to the Aircraft Flight Manual (AFM) for limitations.

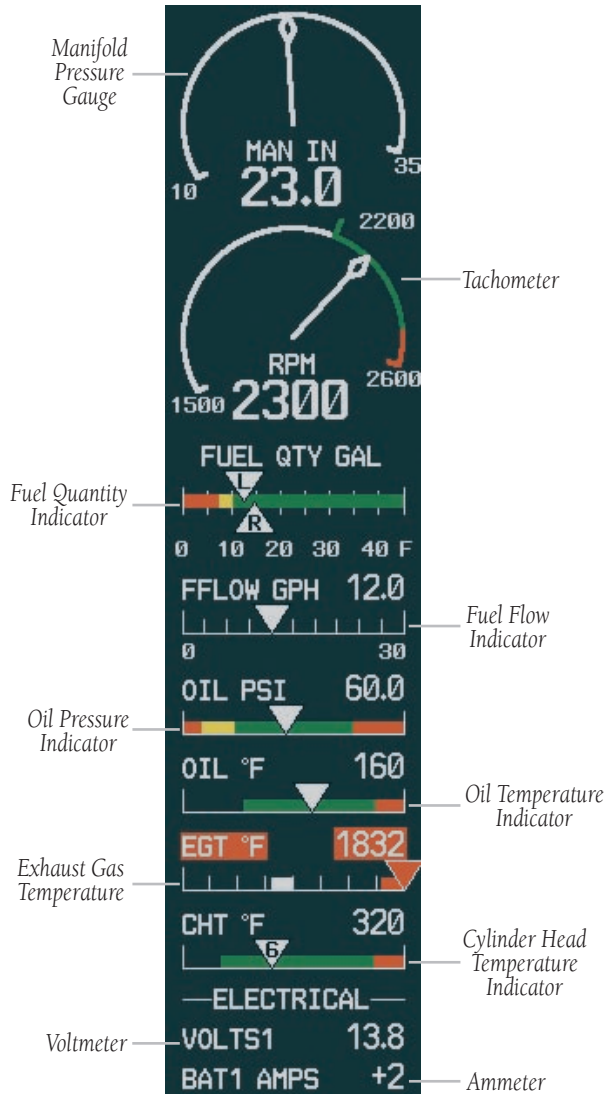


Figure 7.1.1 ENGINE Page (Normally Aspirated)

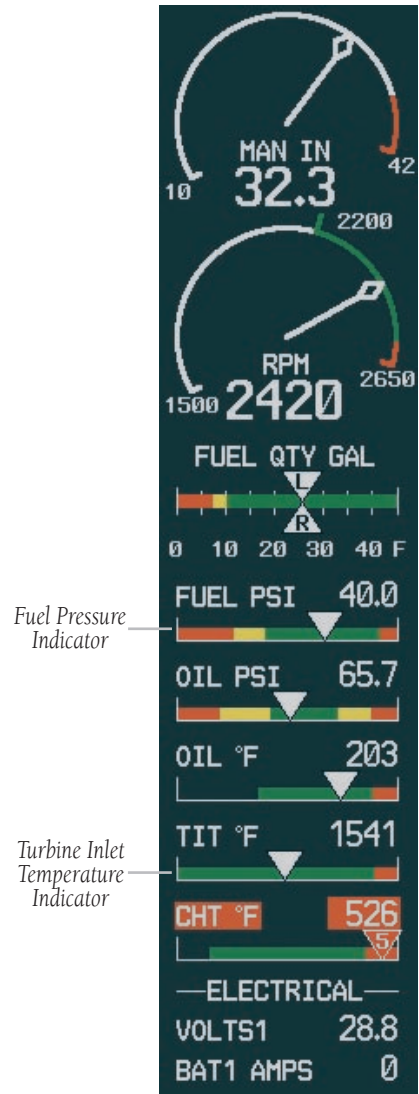


Figure 7.1.2 ENGINE Page (Turbocharged)

7.2 LEAN

The Lean Page is accessible by pressing the **LEAN** softkey. A color-coded horizontal bar indicator for fuel quantity and a numeric readout for fuel flow reside below the tachometer. Beneath the fuel flow indication is the turbo inlet temperature indicator (turbocharged) followed by bar graphs and numeric readouts for exhaust gas temperature (normally aspirated) and cylinder head temperature in degrees Fahrenheit. By default, the numeric readouts of EGT and CHT are associated with the hottest cylinder and are graphically indicated in cyan (light blue). Color coding for the EGT and CHT bar graphs is listed below:

- **Cyan** – Selected cylinder (EGT and CHT)
- **White** – Normal (EGT and CHT)
- **Yellow** – Caution (CHT only)
- **Red** – Warning (CHT only)

The temperature deviation from peak in degrees Fahrenheit for normally aspirated aircraft is displayed beneath the EGT readout.

Cylinder Select

The **CYL SLCT** softkey can be utilized to obtain information about a particular cylinder. The **CYL SLCT** softkey becomes disabled when a particular cylinder turns yellow (Caution) or red (Warning), until the temperature decreases and returns to normal, which is indicated by white on the bar graph. It is also disabled when the **ASSIST** softkey is pressed.

The **CYL SLCT** softkey is available by pressing the **LEAN** softkey.

To monitor the desired cylinder(s):

1. From the Lean Page, press the **CYL SLCT** softkey to cycle through each cylinder and view the EGT and CHT.

Lean Assist

The **ASSIST** softkey can be utilized to assist in the leaning process.

Normally Aspirated

When a cylinder peaks, its peak is represented by a hollow bar on the EGT bar graph. The EGT readout for the peaked cylinder, indicated in cyan (light blue), appears directly beneath the bar graph. The system automatically switches to the first peak obtained and displays the temperature deviation from peak in degrees Fahrenheit below the EGT readout.



NOTE: The pilot should follow the engine manufacturer's recommended leaning procedures in the Aircraft Flight Manual (AFM).

The **ASSIST** softkey is available by pressing the **LEAN** softkey.

To select the Assist function:

1. From the Lean Page, press the **ASSIST** softkey to identify the peak.



NOTE: The Lean Assist function is not available for the turbocharged Mooney models.



NOTE: If any parameters are exceeded the system automatically switches back to the default Engine Page.

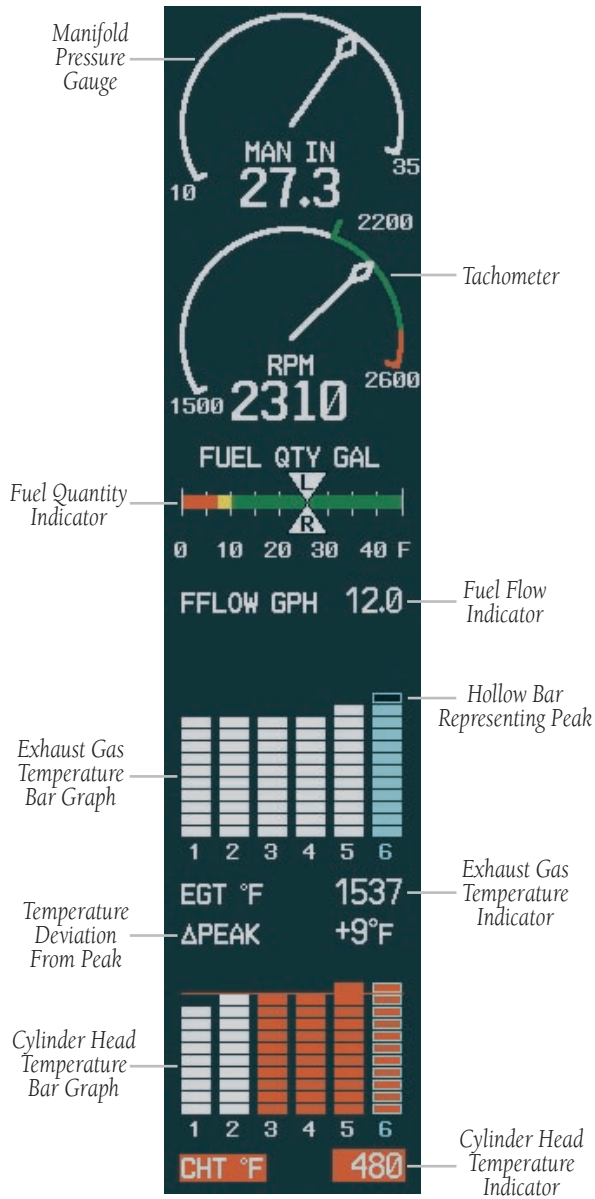


Figure 7.2.1 LEAN Page (Normally Aspirated)

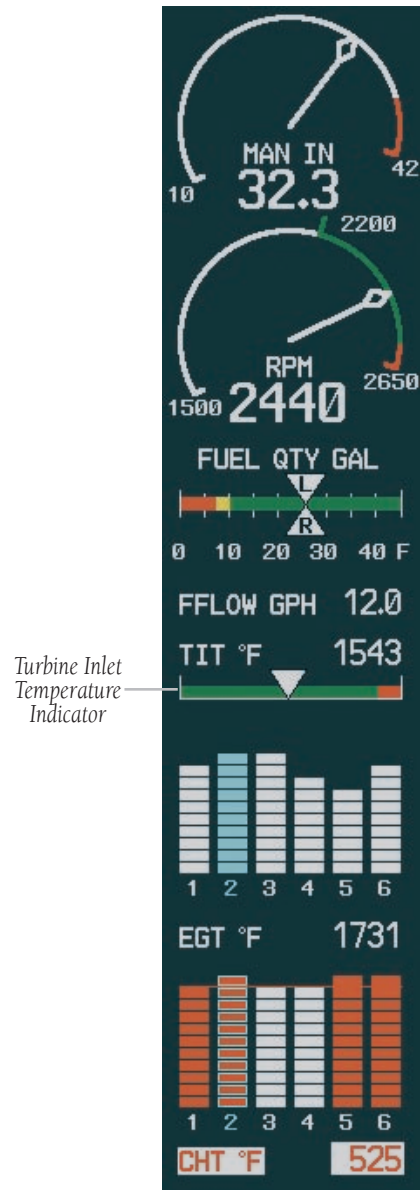


Figure 7.2.2 LEAN Page (Turbocharged)

7.3 SYSTEM

The System Page is accessible by pressing the **SYSTEM** softkey. Beneath the Tachometer is a color-coded horizontal bar indicator for fuel quantity (normally aspirated) or fuel pressure (turbocharged), followed by numeric readouts for oil pressure, oil temperature and engine hours (tach). The fuel calculations reside below the engine indicators. A numeric readout is provided for fuel flow, and gallons remaining.

The fuel calculation portion of the System Page is based on the fuel flow totalizer and displays the following:

- **FFLOW GPH** – Fuel flow in gallons per hour.
- **GAL REM** – Quantity of fuel remaining in gallons.

Below the fuel calculations is a color-coded horizontal bar indicator with a numeric readout for EGT (normally aspirated). Located at the bottom of the page are the electrical indicators. A numeric readout is provided for bus voltage and battery amperage.

If desired, the pilot can utilize the **DEC FUEL**, **INC FUEL** and **RST FUEL** softkeys to adjust the amount of fuel remaining for totalizer calculations.

- **DEC FUEL** – Decreases totalizer based fuel quantity remaining in one gallon increments.
- **INC FUEL** – Increases totalizer based fuel quantity remaining in one gallon increments.
- **RST FUEL** – Reset totalizer based fuel quantity remaining relative to the aircraft fuel capacity.

To decrease the fuel totalizer quantity:

1. From the System Page, press the **DEC FUEL** softkey to obtain the desired number of gallons remaining.

To increase the fuel totalizer quantity:

1. From the System Page, press the **INC FUEL** softkey to obtain the desired number of gallons remaining.

To reset the fuel totalizer:

1. From the System Page, press the **RST FUEL** softkey. This also resets the GAL REM to the aircraft fuel capacity.



NOTE: Fuel calculations do not use the aircraft fuel quantity indicators and are calculated from the last time the fuel was reset.



NOTE: If any parameters are exceeded the system automatically switches back to the default Engine Page.



Figure 7.3.1 SYSTEM Page (Normally Aspirated)

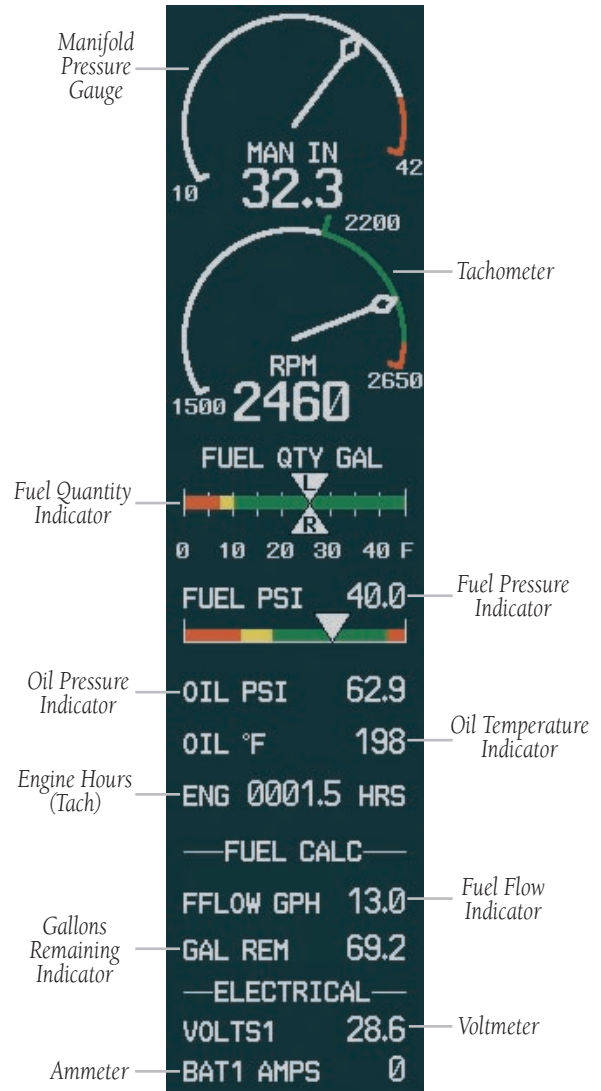


Figure 7.3.2 SYSTEM Page (Turbocharged)

7.4 FLAP & TRIM INDICATIONS

Rudder Trim Position Indicator

The Rudder Trim Position indicator is located beneath the EIS strip. Rudder trim position is displayed by a cyan (light blue) triangle on a horizontal bar indicator. L (left) and R (right) tick marks are shown. The white bar indicates the takeoff setting range. The rudder trim is not displayed on the LEAN page.



Figure 7.4.1 Rudder Trim

Elevator Trim Position Indicator

The Elevator Trim Position indicator is located to the lower right of the EIS strip. Elevator trim position is displayed by a cyan (light blue) triangle pointer on a vertical bar indicator. UP and DN tick marks are shown. The white bar indicates the takeoff setting range.



Figure 7.4.2 Elevator Trim

Flap Position Indicator

The Flap Position indicator is collocated with the elevator trim position indicator. The flap indications are displayed inside the box on top the elevator trim. The flap positions are as follows:

- UP
- T/O (takeoff)
- DN (down)




Figure 7.4.3 Flaps – Up



Figure 7.4.4 Flaps – Takeoff



Figure 7.4.5 Flaps – Down

When the flaps are in transit and not within these ranges, '///' is displayed inside the box.



Figure 7.4.6 Flaps – In Transit



Garmin International, Inc.
1200 East 151st Street
Olathe, KS 66062, U.S.A.
p: 913.397.8200 f: 913.397.8282

Garmin AT, Inc.
2345 Turner Road SE
Salem, OR 97302, U.S.A.
p: 503.391.3411 f: 503.364.2138

Garmin (Europe) Ltd.
Unit 5, The Quadrangle
Abbey Park Industrial Estate
Romsey, SO51 9DL, U.K.
p: 44/0870.8501241 f: 44/0870.8501251

Garmin Corporation
No. 68, Jangshu 2nd Road
Shijr, Taipei County, Taiwan
p: 886/2.2642.9199 f: 886/2.2642.9099

www.garmin.com