



May 1999 Edition

HP LaserJet Family
Quick Reference
Service Guide

Volume II

HP LaserJet Family Quick Reference Service Guide

Volume II

© Copyright Hewlett-Packard
Company, 1999

All Rights Reserved. Reproduction,
adaptation, or translation without prior
written permission is prohibited, except
as allowed under the copyright laws.

Publication number
5090-3390

First edition, May 1999

Trademark credits

MS-DOS® is a U.S. registered
trademark of Microsoft Corporation.

UNIX is a registered trademark in the
United States and other countries,
licensed exclusively through X/Open
Company Limited.

Warranty

The information contained in this
document is subject to change without
notice.

Hewlett-Packard makes no warranty
of any kind with respect to this
information. HEWLETT-PACKARD
SPECIFICALLY DISCLAIMS THE
IMPLIED WARRANTY OF
MERCHANTABILITY AND FITNESS
FOR A PARTICULAR PURPOSE.

Hewlett-Packard shall not be liable for
any direct, indirect, incidental,
consequential, or other damage
alleged in connection with the
furnishing or use of this information.

Contents

1	Control panel messages	7
	Error listings, descriptions, and recommended actions	
2	Service mode	61
	How to access service mode and related functions	
3	Power supply	85
	DC voltages, test points, and tools	
4	Input/output (I/O)	99
	Printer interface and cabling information	
5	Media specifications	105
	Supported sizes and specifications for paper and special media	
6	Toner cartridge information	121
	Cartridge weights, capacities, and potential service issues	
7	Printer options and replaceable parts	131
	Support matrix and part numbers for accessories	
8	Printer parts	143
	Selected high-usage replacement parts	
9	Image quality	181
	Image defect samples, suspect causes, and remedies	
10	Wiring diagrams	213
	Main wiring schematics	
11	Services and support/resources and training	229
	How and where to get training, support, and materials	
12	Hewlett-Packard LaserJet Companion	235
	HP LaserJet Companion information and specifications	
A	Acronyms and abbreviations	239
	Index	243

Ordering other manuals

The *HP LaserJet Quick Reference Service Guide, Volume II*, provides support for newer monochrome printers (see the following page for a complete list of supported printers). It has been created to help the HP LaserJet service engineer quickly troubleshoot common printer problems.

For older monochrome printers, see the *HP LaserJet Quick Reference Service Guide, Volume I*. It provides support for the following printers: LJ 6L, LJ 5Si Mopier, LJ 5Si, LJ 5Si MX, LJ 5L, LJ 6P, LJ 6MP, LJ 5P, LJ 5MP, LJ 5, LJ 5M, LJ 5N, LJ 4V, LJ 4MV, LJ 4P, LJ 4MP, LJ 4L, LJ 4ML, LJ 4+, LJ 4M+, LJ4, LJ 4M, LJ 4Si, LJ 4Si MX, LJ IIISi, LJ IIIP, LJ IIP+, LJ IIP, LJ IIID, LJ III, LJ IID, LJ II, LJ 2686D, LJ 2686A.

To obtain service support for HP LaserJet 240 and 320 Mopiers, see the *HP Mopier Family Quick Reference Service Guide*.

While the quick reference guides are intended to provide all the information the service engineer will need for on-site repair of HP products, they are not intended to replace the service manual for any HP LaserJet product. For detailed information about the HP LaserJet products described in this guide, see the user guide or service manual for that product.

Service manuals for HP LaserJet products are available from Hewlett-Packard. The phone number for the Service Parts Order Desk is:

(800) 227-8164 (U.S. only)

If you are located outside of the U.S., contact your local HP Sales and Service office.

Supported products

Reference name used in this guide	Model number	Maximum pages per month	Service manual part number
LJ 2100/2100 M/ 2100 TN	C4170A/C4171A/ C4172A	15K	C4170-90959 (hard copy) C4170A-60129 (CD)
LJ 4050/4050 T/ 4050 N/4050 TN LJ 4000/4000 T 4000 N/4000 TN	C4251A/C4252A/ C4253A/C4254A C4118A/C4119A/ C4120A/C4121A	65K	C4251-91003
LJ Companion	LJ C3989A/ C3979A/C4106A	N/A	HP Central Repair Only
LJ 5000/5000 N/ 5000 GN	C4110A/C4111A/ C4112A	65K	C4110-91033
LJ8000/8000 N/ 8000 DN	C4085A/C4086A/ C4087A	130K	C4085-91017
LJ 3100	C3948A	6K	C3948-90958
LJ 8100/8100 N/ 8100 DN	C4214A/C4215A/ C4216A	150K	C4214-91000
LJ 1100/1100XI/ 1100 SE/ 1100 A/1100 AXI/ 1100 ASE	C4224A/C4225A/ C4226A/C4218A/ C4219A/C4220A	7K	C4224-60140

Note

This guide is updated on a regular basis as the service needs change, as new products are introduced, and as additional information becomes available.

1

Control panel messages

Overview

This chapter provides information on the display lights for the HP LaserJet 1100 and 2100 series printers, and lists printer control panel messages for these HP LaserJet printers:

- LJ 4050 series
- LJ 4000 series
- LJ 5000 series
- LJ 3100
- LJ 8000 series
- LJ 8100 series

Alphabetical messages are listed first, followed by numerical messages. Control panel messages that are self-explanatory are not included.
























Note

If you need more detailed information, see the service manual for the printer you are servicing.

LaserJet 2100 series printer light-emitting diode (LED) displays

The control panel for the LaserJet 2100 is composed of 3 light-emitting diodes (LEDs). The messages displayed on the LJ 2100 control panel are: 1) Status and attendance messages; 2) Continuable error messages; 3) Service or fatal error messages; and 4) Accessory error messages. The following table shows status and attendance messages. (Note the legend following the table for a description of the error and the recommended course of action.)

Status and attendance messages

LED displays		Key		
	Job Cancel Button			
	Attention LED	Off	On	Blinking
	Ready LED			
	Go Button			
				
				
1. Go, Ready, and Attention LEDs are cycling.	2. Ready LED is on.	3. Ready LED is blinking.	4. Ready LED is blinking; Go LED is on.	
				
				
5. Go LED is blinking.	6. Attention LED is on	7. Go LED is on.	8. Attention LED is blinking.	

Legend for LJ 2100 series LED displays














Status and attendance messages legend

Item	Description	Recommended action
1	Start up. The buttons will cycle one after another until the printer is ready to print.	<ul style="list-style-type: none">No action is needed
2	Ready. The printer is ready to print.	<ul style="list-style-type: none">No action is needed; however, pressing the Go button will print a demo page.
3	Processing	<ul style="list-style-type: none">No action is needed; however, pressing JOB CANCEL cancels the current job.
4	Data. Data is in the printer memory waiting to be printed.	<ul style="list-style-type: none">Pressing Go prints from Tray 1 or from another tray if Tray 1 is empty and the paper size is supported in the other tray. Pressing JOB CANCEL cancels the current job and the printer returns to ready.
5	Manual feed with pause.	<ul style="list-style-type: none">Pressing Go prints from Tray 1 or from another tray if Tray 1 is empty. Pressing JOB CANCEL cancels the current job and the printer returns to ready.
6	Paper out	<ul style="list-style-type: none">Fill the printer with paper.
7	Paper out (requested tray)	<ul style="list-style-type: none">Add paper to the requested tray. Pressing Go prints from another tray. Pressing JOB CANCEL cancels the current job.
8	Attention. The printer requires attention for one of the following reasons: <ul style="list-style-type: none">The door is open.The toner cartridge is missing.Paper is jammed in the printer.	<ul style="list-style-type: none">Pressing Go to clear the paper jam. Note: It may be necessary to clear the jam manually, and then push Go or close the top cover.

LaserJet 2100 series printer LED displays for primary error messages

Continuable, service, and accessory errors consist of a primary and secondary LED pattern. The primary LED pattern is the one initially displayed by the control panel. The following table shows the primary error LED patterns. To view secondary error LED patterns, simultaneously press **Go** and **JOB CANCEL**. A description of and recommended action for secondary LED patterns begins on page 12.

Primary error messages

LED displays	Key	
 Job Cancel Button		
 Attention LED	  	
 Ready LED	Off On Blinking	
 Go Button		
		
		
1. Attention and Ready LEDs are on.	2. All LEDs are on.	3. All LEDs are blinking.

Legend for LJ 2100 series primary LED messages































The following legend provides a description of the primary LED messages. For detailed information about the secondary error messages, see the page numbers referenced in the following legend.

Item	Description	Recommended action
1	Continuable error	• For secondary information, see page 12.
2	Service error	• For secondary information, see page 15.
3	Accessory error	• For secondary information, see page 18.

LaserJet 2100 series printer LED displays for continuable errors

The following table shows secondary continuable error messages. The legend following the table provides a description of each error and the recommended course of action.

Secondary continuable error messages

LED displays		Key		
	Job Cancel Button			
	Attention LED	Off	On	Blinking
	Ready LED			
	Go Button			
				
1. The Attention LED is on.	2. The Ready LED is on.	3. The Attention and Go LEDs are on.	4. The Ready and Go LEDs are on.	
				
				
				
5. All LEDs are on.	6. The Attention LED is blinking.	7. The Ready LED is blinking.	8. The Attention and Go LEDs are blinking.	
				
				
				
9. The Attention and Ready LEDs are on.	10. The Attention, Ready, and Go LEDs are blinking.			

Legend for LJ 2100 series LED displays

Secondary continuable error messages legend

Item	Description	Recommended action
1	Memory Overflow (20 error/Mem Full)	Press Go to print the transferred data (some data might be lost), then simplify the print job or install additional memory.
2	Temporary Engine Error (41.x errors)	<ul style="list-style-type: none">• Press Go. The page containing the error will automatically be reprinted. If the error persists:<ol style="list-style-type: none">1 Reseat the connections to the laser scanner and the engine controller assembly.2 Replace the laser scanner.3 Replace the engine controller assembly.4 Replace the intermediate PCB.
3	Print Overrun (21 error)	Press Go to print the transferred data (some data might be lost), then simplify the print job or install additional memory.
4	I/O Error (22 error - Buffer Flow Error)	Press Go to clear the message (some data will be lost). Check for a loose cable connection and be sure to use a high-quality cable. Some non-HP cables might be missing pin connections, or might otherwise not conform to the IEEE-1284 B specification.
5	I/O Error (40 error-bad connection)	The connection between the printer and the EIO card has been broken. <ol style="list-style-type: none">1 Turn the printer off and reseat the card.2 Press Go to clear the message and continue printing.




















Secondary continuable error messages legend (continued)

Item	Description	Recommended action
6	NVRAM Error (68 error)	<p>Press Go to clear the message and continue printing.</p> <p>An error occurred in the printer's nonvolatile memory (NVRAM) and one or more printer settings has been reset to its factory default.</p> <ol style="list-style-type: none"> 1 Print a configuration page and check the printer settings to determine which values have changed. 2 While turning the printer on, hold JOB CANCEL until all lights come on and stay on. This cleans up the NVRAM by removing old areas that are not being used.
7	I/O Error (81 error)	<p>The EIO accessory has encountered a critical error.</p> <ol style="list-style-type: none"> 1 Power cycle the printer. 2 Reseat or replace the EIO accessory.
8	Memory Configuration Error	<ol style="list-style-type: none"> 1 Reprint the job. 2 Perform a cold reset. 3 Replace a DIMM/memory. 4 Replace the formatter.
9	Personality, Job Related Error	<ol style="list-style-type: none"> 1 Perform a cold reset. 2 Remove/replace the language DIMM (PS DIMM). 3 If all else fails, replace the formatter.
10	General Continuable Error	<ol style="list-style-type: none"> 1 Check connections on the intermediate PCB. 2 Replace the formatter PCB.

LaserJet 2100 series printer LED displays for service errors

The following table shows secondary service error messages. The legend following the table provides a description of each error and the recommended course of action.

Secondary service error messages

LED displays		Key		
	Job Cancel Button			
	Attention LED	Off	On	Blinking
	Ready LED			
	Go Button			
				
1. The Attention LED is on.	2. The Ready LED is on.	3. The Go LED is on.	4. The Attention and Ready LEDs are on.	
				
5. The Ready and Go LEDs are on.	6. All LEDs are on.	7. The Attention LED is blinking.	8. The Ready LED is blinking.	
				
9. The Go LED is on.	10. The Attention and Ready LEDs are blinking.	11. The Attention and Go LEDs are blinking.	12. All LEDs are blinking.	

Legend for LJ 2100 series LED displays

Secondary service error messages legend

Item	Description	Recommended action
1	Engine Error (Error 55 - Engine Communication Error)	<p>A printer error has occurred. Press Go to clear the error message.</p> <ul style="list-style-type: none">• Check the connections to the intermediate PCB and the engine controller assembly.• Replace the engine controller assembly.
2	Scanner Error (Error 52)	<p>Press Go. The page containing the error will automatically be reprinted.</p> <p>Turn the printer off and reseal the laser scanner cables.</p> <p>Replace the laser scanner.</p>
3	Beam Error (Error 51 - Bad Beam Detect)	<p>Press Go. The page containing the error will automatically be reprinted.</p> <ul style="list-style-type: none">• Turn the printer off and reseal the laser scanner cables.• Replace the laser scanner.
4	Motor Error (57 Service-Scan Motor Error)	<ol style="list-style-type: none">1 Turn the printer off, then turn it back on.2 Turn the printer off, then reseal the connection between the laser scanner assembly and the intermediate PCB.3 Replace the laser scanner.
5	Fuser Error (50 service-bad fuser)	<ol style="list-style-type: none">1 Be sure that the fuser is installed correctly and is fully seated.2 Reseat the fuser cables.3 Replace the fuser.4 Replace the engine controller assembly.5 Replace the intermediate PCB.
6	Formatter internal RAM or ROM error	<p>Replace the formatter.</p>
7	Fan Error (58 service - Fan Motor Error)	<ol style="list-style-type: none">1 Turn the printer off, then turn it back on.2 Turn the printer off, then reseal the connection between the fan and the intermediate PCB.3 Replace the fan.4 Replace the engine controller assembly.
























Secondary service error messages legend (continued)

Item	Description	Recommended action
8	NVRAM Error (68 service)	Replace the formatter.
9	Scan Buffer Error (64 service)	Cycle power. If the message persists, replace the formatter.
10	Dynamic Ram Controller Error (65 service)	Replace the formatter.
11	Miscellaneous Interface Hardware Error (67 service)	Check the I/O connections. Verify that the cable is IEEE-1284 B-compliant (if applicable).
12	General Fatal Error	Cycle power.

LaserJet 2100 series printer LED displays for accessory errors

The following table shows secondary accessory error messages. The legend following the table provides a description of each error and the recommended course of action.

Secondary accessory error messages

LED displays	Key		
 Job Cancel Button  Attention LED  Ready LED  Go Button	 Off	 On	 Blinking
   	   	   	   
1. Attention LED is on.	2. Go LED is on.	3. Ready LED is on.	4. Attention and Ready LEDs are on.








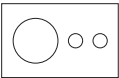


Secondary accessory error messages legend

Item	Description	Recommended action
1	EIO Port Error	<ul style="list-style-type: none"> Verify connections. Reseat or replace the EIO accessory. Replace the formatter
2	DIMM Slot 1 Error	<ul style="list-style-type: none"> Reseat the DIMM in slot 1. If the problem persists, replace the DIMM.
3	DIMM Slot 2 Error	<ul style="list-style-type: none"> Reseat the DIMM in slot 2. If the problem persists, replace the DIMM.
4	DIMM Slot 3 Error	<ul style="list-style-type: none"> Reseat the DIMM in slot 3. If the problem persists, replace the DIMM.

LaserJet 1100 series printer light-emitting diode (LED) displays

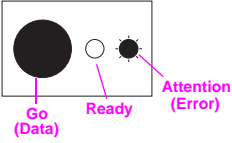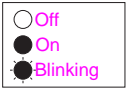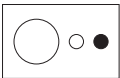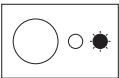Status messages for the LJ 1100 series printers can be viewed in the table below. Error messages appear in the “Error and service messages,” table on page 22. (The legends following the tables provide a description of each error and the recommended course of action.)

Continuable error messages

LED displays		Key	
			
			
1. Error LED is on.	2. Error LED is blinking.	3. Attention and Data LEDs are on.	4. All LEDs are blinking.
			
5. Data LED is blinking.	6. All LEDs are off.	7. Data LED is blinking.	8. All LEDs are on.

Legend for LJ 1100 series LED displays

Status messages legend

Item	Description	Recommended action
1	Paper out	<ul style="list-style-type: none">• The paper tray is empty.• The sensor arm is stuck or broken.
2	Door open No toner cartridge Paper jam	<ul style="list-style-type: none">• Check that the toner cartridge is fully seated and that the door is firmly closed.• The actuator or tab is missing or broken.• Install a new toner cartridge.• The high-voltage contacts are dirty or defective.• The ECU is defective.• Remove the jammed paper. Check the entire paper path for other pieces of paper.• Check sensors and flags in the paper path for proper operation.• The media does not meet HP specifications.• The paper path is dirty or obstructed.<ul style="list-style-type: none">– Clean the paper path components; ensure that the transfer roller is seated properly.• The pickup (or other) roller or the separation pad is worn.• The media is not correctly loaded.• The solenoid operation is bad.<ul style="list-style-type: none">– Verify proper solenoid operation and replace if necessary.• The gear(s) is bad or not meshing in the drive train.<ul style="list-style-type: none">– Replace the bad gear(s) or check the toner cartridge gears for damage.• The main motor is bad.






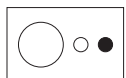
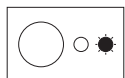
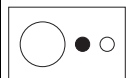




Status messages legend (continued)

Item	Description	Recommended action
3	Memory error	<ul style="list-style-type: none">• Set the enhanced input/output (I/O) to auto mode (printer command language [PCL] mode).• Re-send the print job. If the auto-continue variable is on within the printer job language (PJM), the printer will continue to print after 10 seconds. If it is off, press the front panel button to continue printing.
4	Incompatible memory card	Turn the printer off, remove any additional memory, and then turn the printer back on. If the error clears, replace with a compatible memory card.
5	Manual feed	<ul style="list-style-type: none">• Ensure that the correct paper is loaded in the printer. Press and release the front panel button. If manual feed is not desired, turn off the setting in the software application.
6	Sleep mode	<ul style="list-style-type: none">• Press the front panel button or open the electrophotographic (EP) door.• No power is supplied to the printer.<ul style="list-style-type: none">– Check the power cord connections and the power source.– Check the power switch (220 V only).
7	Form feed	See "Manual feed" above.
8	Fatal error	<ul style="list-style-type: none">• Power cycle the printer.• If the error persists, replace the formatter PCA.

LaserJet 1100 series printer LED displays

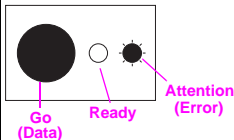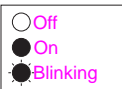The legend following the table provides a description of each error and the recommended course of action.

Error and service messages

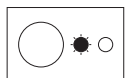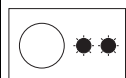LED displays	Key		
			
	<p>Note: When all the lights are on, a service error has occurred. Press and hold the Go (Data) button to display the secondary LED error code pattern. The code will be shown only while the button is pressed. The following illustrations show the possible LED error patterns.</p>		
			
1. All LEDs are on.	2. Data and Error LEDs are on.	3. Error LED is on.	4. Error LED is blinking.
			
5. Ready LED is on.	6. Data and Ready LEDs are on.	7. Data LED is on.	8. Ready LED is blinking.
			
9. Ready and Error LEDs are blinking.			

Legend for LJ 1100 series LED displays

Note

Before troubleshooting any service error, power cycle the printer to see if the error persists.

Error and service messages legend

Item	Description	Recommended Action
1	RAM/ROM error	<ul style="list-style-type: none">• Power cycle the printer.• The memory card is defective or incompatible.<ul style="list-style-type: none">– Turn the printer off, remove any additional memory, then turn the printer back on. If the message clears, replace the memory card.• The formatter PCA is defective.
2	Firmware error/ processor error	<ul style="list-style-type: none">• Power-cycle the printer.• The formatter PCA is defective.
3	Print engine error	<ul style="list-style-type: none">• Temporary Error<ul style="list-style-type: none">– Power cycle the printer. If the error persists, reseal the formatter PCA to the ECU.• If the error persists, replace the ECU PCA
4	Document scan engine error	<ol style="list-style-type: none">1 Unplug the printer, remove and reattach the laser scanner, and then replug the printer.2 Replace the document scanner unit.
5	Print laser scanner error	<ul style="list-style-type: none">• A temporary error has occurred.<ul style="list-style-type: none">– Power cycle the printer.• The laser scanner assembly is improperly fitted.• A problem has occurred with the laser scanner cable.• The laser scanner assembly is defective.• The ECU PCA is defective.
6	Fuser error	<ul style="list-style-type: none">• Turn the printer off, wait 20 minutes, and then turn the printer on.• Check the fuser connections.• Replace the fuser.

Error and service messages legend (continued)

Item	Description	Recommended Action
7	Beam error	<ul style="list-style-type: none">• A temporary error has occurred.<ul style="list-style-type: none">– Power cycle the printer.• The laser scanner assembly is not seated.• The laser scanner assembly is defective.<ul style="list-style-type: none">– Replace the laser scanner assembly or cable.
8	Document scan engine NVRAM error	<ol style="list-style-type: none">1 Unplug the printer, remove and reattach the laser scanner, and then replug the printer.2 Replace the document scanner unit.
9	DIMM error	<ul style="list-style-type: none">• An error has been found in the RAM.<ul style="list-style-type: none">– Power cycle the printer.• The memory card is defective or incompatible.<ul style="list-style-type: none">– Turn the printer off; remove any additional memory; then turn the printer back on. If the message clears, replace the memory card.• The formatter PCA is defective.

Alphabetical messages

The following control panel messages are for the LJ 4050 series, LJ 4000 series, LJ 5000 series, LJ 3100, LJ 8000 series, and LJ 8100 series printers. Numerical messages begin on page 46.

1

(number) is a group, group not allowed

- Enter a different one-touch key or an unassigned speed-dial code.

Access denied, menus locked

- Ask the network administrator to unlock the function.

Already in group

While programming a group-dial code, a fax number has been added that is already in the group.

- Add the next fax number to the group.

Bad duplexer connection

- Re-install the duplexer.
- If the message persists, make sure that the duplexer is connected and that the connector is not damaged.
- Replace the duplexer.

Bad opt tray connection

- Re-install the optional tray.
- Make sure that the optional tray is connected and that the connector is not damaged.
- Replace the optional tray.

Blacklisted (France only)

The attempted fax number has received a voice answer or no answer, was busy on the first dial and redials, or was busy with redials pending.

- Unplug the power cord for the fax machine from the power strip or outlet, and then plug it back in.

Busy

- Check the fax number and try resending the fax. If the message appears again, try sending to another fax machine or try again later.

Cancel group edit, **ENTER** to confirm

- Back space was pressed while in a group-dial code in the Group Dial Setup level of the menu.
- 1 Press **START** to return to the group-dial code and continue editing.
 - 2 Press **ENTER/MENU** to go to the Group Dial Setup level of the menu. (Press **ENTER/MENU** again to choose a different group-dial code.)
 - 3 Press **STOP/CLEAR** to exit the menu settings.

Check finisher device alternates with Clear jam

- Check to see if paper is jammed in the external paper-handling finishing device.

Check finisher device alternates with Finisher align error

- Check to see if an alignment error has occurred in the external paper-handling finishing device.

Check input device alternates with Paper path open, please close it

- Check that all doors and trays are closed.
- Check the tabs and sensor levers in the tray for proper operation.
 - Replace any defective tabs or sensors.
- Replace the printed-circuit assembly (PCA) controller in the feeder.

Check output device alternates with Close output delivery path

- Make sure the paper path is closed between the printer and the external paper-handling output device.

Chosen language not available

- 1 Print the job using a driver for a different printer language, or add the requested language to the printer (if available).
- 2 Press **Go** to continue.

Clear document from scanner

- Check to see if the document is jammed or if multiple sheets of the document were loaded.
- Check the special media lever. It should be to the left for regular-weight items or to the right for thick items. Thick items must be fed one at a time.
- Check the control panel configuration for outgoing faxes, including the “send long pages” setting.

Close printer doors/Close covers

- The printer door is open.
- Check that the toner cartridge is fully seated and that the covers are firmly closed.
- The ECU is defective.
- The actuator or tab is missing or broken.

Communication error

- 1 Try resending the fax.
- 2 If the call fails again, check that the telephone cord is securely connected. Then check for a dial tone on the phone line by pressing **MANUAL DIAL**.
- 3 Wait; try resending the fax later.

Note

For additional details, see the *HP LaserJet 3100 Product Service Manual*.

Configuration err # (number 1-4)

An error was detected in the static random-access memory (SRAM).

- Unplug the power cord from the power source, wait 10 seconds, and replug the power cord.
- If the error persists, replace the formatter.

Config. stuck addr

- In Service mode, run the SRAM stuck address test.
 - Unplug the power cord from the power source, wait 10 seconds, and replug the power cord.
- If the error persists, replace the formatter.

Config. tied addr.

- In Service mode, run the SRAM tied address test.
 - Unplug the power cord from the power source, wait 10 seconds, and replug the power cord.
- If the error persists, replace the formatter.

[Date] [Time]

The battery has failed.

- You can continue to use the HP LaserJet 3100 product without replacing the battery, but if you re-enter the menu settings and then turn off the power, the settings will be erased again.

Decoding error # (number 1-3)

- Unplug the power cord from the power source, wait 10 seconds, and replug the power cord.
- If the error persists, replace the formatter.

Disk device failure

- Reseat the enhanced input/output (EIO) disk or replace the old disk device with a new disk.

Disk file operation failed

- Check the filename and directory name.
- Reattempt the operation.

Disk file system is full

- Delete the files from the EIO disk and then try again, or add a Flash dual inline memory module (DIMM).
- Download or delete files from the HP JetAdmin software, and download or delete fonts from the HP FontSmart software.

Disk is write protected

- Use the HP JetAdmin software to disable the write protection.

Documents were lost, START to continue

- 1 Press **START**. A report is printed.
- 2 Check the fax log status column for the “Fax Document was Lost” message.
- 3 Resend the associated outgoing faxes. Ask the sender to resend incoming faxes.

Door open

- The printer door is open.
- Check that the toner cartridge is fully seated and that the covers are firmly closed.
- The ECU is defective.
- The actuator or tab is missing or broken.

Duplex error, check duplexer

- Check the duplexer for a paper jam.
- Reseat the duplex assembly, and check the connection.
- Replace the duplex unit.

EIO x disk initializing

- Stand by until the EIO disk is done initializing.

EIO x disk spinning up

- Stand by until the disk accessory card is done initializing.

EIO disk x non-functional

- Replace the EIO disk.

Encoding error

- Unplug the power cord from the power source, wait 10 seconds, and replug the power cord.
- If the error persists, replace the formatter.

Envelope feeder load

- 1 Load the requested envelope type and size into the envelope feeder.
- 2 Make sure that the envelope size and type are set correctly on the Paper-handling menu in the printer control panel.
- 3 Press **Go** if the envelope is already loaded in the feeder.
- 4 Press **-VALUE+** to scroll through the available types and sizes.

Errors likely in pages: (page range)

- Resend the fax or ask the sender to resend the fax to you.

Fax document was lost

- If you set up faxes to be sent at a future time or to be polled, print a fax log to identify which faxes were lost. Then re-enter the faxes.
- Faxes that were received to memory (instead of printing) have been lost. Ask the sender to resend the fax.

Fax memory error # (number 1-5)

- Unplug the power cord from the power source, wait 10 seconds, and replug the power cord.
- If you set up faxes to be sent at a future time or to be polled, print a fax log to identify which faxes may have been lost. Then, re-enter the faxes.
- Faxes that were received to memory (instead of printing) have been lost. Ask the sender to resend the fax.
- If the error persists, replace the formatter.

Flash device failure

- Remove the Flash DIMM and replace it with a new one.

Flash file operation failed

- Check the filename and directory name.
- Reattempt the operation.

Flash file system is full

- Delete files from the Flash DIMM or add another DIMM.
- Download or delete files from the HP JetAdmin software, and download or delete fonts from the HP FontSmart software.

Flash is write protected

- Use the HP JetAdmin software to disable the write protection.

Group is empty, use ONE-TOUCH/SPEED DIAL

- 1 Begin adding fax numbers to the group-dial code by pressing the one-touch key for each number or by pressing **SPEED DIAL**.
- 2 Enter the speed-dial code for the fax number.
- 3 Press **ENTER/MENU**.

Initializing

- Reseat the DIMM(s).

Input device condition xx.yy

1st x = Device number in chain

2nd x = Device type (3 types):

1 = Input

2 = Output

3 = Stapler/stacker unit

yy = Device specific error

- See the documentation that came with the paper-handling device.

Input limit reached

- The maximum number of fax numbers that can be added to an ad-hoc group is 100. Resend the fax, but only to 100 or fewer fax numbers.

Install front duplex cover

- Re-insert the duplexer's front cover.

Install toner cartridge

- Reseat or install a new toner cartridge.
- The high-voltage contacts are dirty or defective.
- The ECU is defective.

Install Tray x

- Re-insert the specified tray.
- Check for damaged tabs in the tray.
- Check for damaged switches in the printer.
- Replace the PCA controller in the feeder.

Invalid date or time

- Re-enter the date and time.

Keypad test failed

- Run the keypad test again.
- If the error persists, try each of the following in the order given:
 - Check the cabling.
 - Replace the control panel.
 - Replace the formatter.

Loading program <number> alternates with Do not power off

- Wait for the program to load.

Long page? START to continue

- Press **START** to continue scanning. If **START** is not pressed within 3 seconds, the message disappears and the document scanner stops scanning because it thinks the page has jammed.
- If sending a fax or copying a document longer than 991 mm (39 in), the control panel configuration can also be set to "Send long pages." This ensures that long pages feed without having to monitor the task. Press **START** before the document scanner shuts off.

Manually feed [type] [size]

- 1 Load the requested paper into Tray 1.
- 2 Press **Go** if the appropriate paper is already loaded in Tray 1.
- 3 Press **-VALUE+** to scroll through the available types and sizes.
- 4 Press **SELECT** to accept the alternate type or size.

Memory full - send unscanned pages

- Reload the unscanned pages and re-send them to finish the fax job.
- Scan the unscanned pages to the computer and fax them from the computer.

Memory full - stored data lost

- Add more memory to the printer or simplify the print job.

Memory is full

This message should clear automatically when the next task starts (for example, when you start a copy or receive a fax).

Memory settings changed

- Try changing the memory settings for I/O Buffering and Resource Saving (although default settings are usually best).
- Install additional memory in the printer.

Memory shortage job cleared

- Press **Go** to continue.
- On the printer control panel, change the setting for resource saving, or add more memory to the printer.

Memory shortage page simplified

- Press **Go** to continue.
- Add more memory to the printer.

Modem error # (number 1-3)

- Unplug the power cord from the power source, wait 10 seconds, and replug the power cord.
- If the error persists, try each of the following in the order given:
 - Check the cabling.
 - Replace the line interface unit (LIU).
 - Replace the formatter.

No answer

- Check the fax number and try resending the fax. If the message appears again, try sending to another fax machine or try again later.

No dial tone

- Check that the telephone cord is securely connected.
- Check for a dial tone on the phone line by pressing **MANUAL DIAL**.
- If necessary, check the wall outlet by plugging in a phone and attempting to place a call.

No fax in (number) tries

- Check the fax number and try resending the fax. If the message appears again, try sending to another fax machine or try again later.

No fax pages in memory to reprint

- Wait for a fax. As soon as a fax is in the memory, the fax will reprint.

No memory for report, erase/print document

- Print all faxes that have been received in memory.
- If you have several faxes set up to be sent at a future time or to be polled, use job status to clear them.

No modem installed

There is a problem with the line interface unit (LIU).

- Unplug the power cord from the power source, wait 10 seconds, and replug in the power cord.
- If the problem persists, replace the LIU.
- If the problem persists, replace the formatter.

No room in fax log

The fax log was unable to print because of an error, such as out-of-paper.

- Load paper in the paper input bin so the HP LaserJet 3100 product can print the log.

Not enough memory

- Try resending the job. If the error persists, try reducing the amount of activity on the HP LaserJet product. Cancel jobs in memory before resending the job.

Out of memory—switching to ONE COPY

The HP LaserJet product continues to copy, but only one copy is output.

- Divide the copy job into smaller sections and then try copying again.
- If you are collating the job, turn the collation feature off, make only one copy of the document at a time, or see the user guide for instructions about using the Document Assistant.

Output bin full alternates with Clear paper from [bin name]

- 1 Remove the media from the face-down tray.
- 2 Check PS1401 on the sensor PCA.
- 3 Make sure the sensor flag moves freely.

Paper bin is empty, please add paper

- 1 Load paper.
- 2 If paper is already loaded, remove it.
- 3 Check for, remove, and discard any jammed sheets.
- 4 Reload the paper.

Password must be 4 digits

- Re-enter a four-digit password.

Paused (memory full)

- Reduce the size of the print job, or wait for other jobs to finish so memory will be freed.
- If faxes are set up to be polled or sent at a future time, you may want to cancel these jobs to free memory.

Perform printer maintenance

Reset the maintenance page count only after a maintenance kit has been installed. Resetting the maintenance page count causes `PERFORM PRINTER MAINTENANCE` to appear after another 150,000 (LJ 5000 series); 200,000 (LJ 4000 and LJ 4050 series); or 350,000 (LJ 8000 series) pages have printed.

- 1 Hold down the **ITEM-** and **VALUE-** keys while turning the printer on.
- 2 Wait until `RESET MAINTENANCE COUNT` appears, and then release both keys.

PC print timed out

- Let the “print jobs retry” continue for 5 minutes. If the HP LaserJet 3100 product still does not print, resend the print job.

Phone number error

- The maximum number of characters that can be entered is 40. If you have a number longer than 40 characters, break the number into smaller chunks.
- 1 Enter the first part of the number, and press **REDIAL/PAUSE** as the last character in the first number.
 - 2 Enter the second part of the number as if it were a second number going to a group. When the product dials, it will treat both numbers as if they are one.

Polling-in error

- Make sure that the sender's fax machine is ready to be polled, and check the fax number. Then set up to poll again.

Printer comm error^1

- Check that the parallel cable is securely connected between the HP LaserJet 3100 product and the computer.
- If the problem persists, unplug the power cord from the power source for 5 seconds, and then replug it.
- If the problems persists, replace the formatter.

Printer cover open or no cartridge

- Verify that the printer door is closed.
- Check the toner cartridge for proper installation.

Printer fixing error, replace fixing unit

- There is an error with the print engine.
- Check the cabling to the heating element.
- If the problem persists, replace the heating element.
- If the problem persists, replace the ECU.

Printer is busy

- No action is needed. If you already started another job, the job will be completed when the HP LaserJet product becomes available.

Printer laser error, call for service

- Open and reclose the printer door.
- Unplug the power cord from the power source, wait 10 seconds, and replug the power cord.
- If the problem persists, replace the laser scanner assembly.

Printer motor error, call for service

A problem has occurred with the print engine.

- Unplug the power cord from the power source, wait 10 seconds, and then replug the power cord.
- If the problem persists, replace the motor.
- If the problem persists, replace the ECU.

Printer paper jam, check paper path

- Check the input areas, the output areas, and the interior for the jam, and then clear the jam. The job should continue to print. If it does not, try reprinting the job.

Printer signal error

- Open and close the printer door.
- Unplug the power cord from the power source, wait 10 seconds, and replug the power cord.
- If the problem persists, replace the laser scanner assembly.

Processing job from Tray x

- Check the tray selected and the type settings. If the printer does not respond after you press the control panel keys, turn the printer off, and then turn the printer on to clear the message.
- If paper is loaded when the printer is in Power Save mode, it might not be recognized. Open and close the affected paper tray when the printer is in a **READY** state.

RAM disk device failure

- Turn the printer off and on to clear the message.
- If the message persists, install a new RAM disk.

RAM disk file operation failed

- Check the filename and directory name.
- Reattempt the operation.

RAM disk file system is full

- Delete files and then try again, or turn the printer off and then turn the printer on to delete all files on the device. (Use HP JetAdmin software, HP FontSmart software, or another software utility to delete files.)
- If the message persists, increase the size of the RAM disk.
 - Change the RAM disk size from the Configuration menu in the printer control panel.

RAM disk is write protected

- Use HP JetAdmin software to disable the write protection.

Received error

- Ask the sender to resend the fax.

Redial failed

- Try resending the fax. If the fax still fails to transmit, call the recipient to check that the fax machine is on and working and to verify the fax number.

Remote fax was busy

- Try resending the fax. If the fax still fails to transmit, call the recipient to check that the fax machine is on is on and working and to verify the fax number.

Scan reference error

- Recalibrate the document scanner.
- If the problem persists, replace the CIS.

Scanner error #1

An error has occurred within the SRAM.

- Press and hold down the **STOP/CLEAR** key for 7 seconds to reset the product.
- If the error persists, unplug the power cord from its power source for 10 seconds, and then replug it.
- If the error persists, replace the CIS.
- If the error persists, replace the formatter.

Scanner isn't available

The document scanner mechanism is in use.

- Wait until the document scanner has finished the current job before sending the next job.

Scanner jam - reload

- Pull the document release door open and then remove the jammed document.

Speed dial (number) is not assigned

- Choose a speed-dial code that has already been assigned a fax number.

System error

- Unplug the power cord from the power source, wait 10 seconds, and replug the power cord.
- If the message is still displayed, replace the formatter.

There are no documents in memory

- No action is required. There are no faxes to retrieve.

Tray x empty

- Load the empty paper tray (X) to clear the message.
- Inspect the tray for damaged tabs.
- Check the sensor-arm flags for damage. Be sure the flags can move freely.
- Replace any defective sensors.

Tray x lifting

- Verify that the media can be pulled from another tray.
- Replace the paper tray.

Tray x load

- 1 Load the requested paper into the specified tray (X). Ensure that the trays are correctly adjusted for size.
- 2 Press **Go** to print from the next available tray.
- 3 Press **-VALUE+** to scroll through the available types and sizes.
- 4 Press **SELECT** to accept the alternate type or size.
- 5 Inspect the switches in the tray.
- 6 Remove the tray, and then turn the printer on. Push the switches by hand to see if the switches register.

Unrecognized format

When printing, the incorrect printer driver was selected or an error occurred with the parallel interface.

- 1 After selecting the Print command in the software application you are using, select the HP LaserJet 3100 as the printer.
- 2 Reprint the job.

Unsuccessful call

- Check the fax number and try resending the fax.
- If the message appears again, try sending to another fax machine or try again later.

Unsupported size in tray [yy]

- Load a supported paper size in the tray. See chapter 5 for a list of supported paper sizes.

Use [type] [size] instead?

- 1 Press **-VALUE+** to scroll through the available types and sizes.
- 2 Press **SELECT** to accept the alternate type or size.

Numerical messages

XX.YY printer error, press Go to continue

Press **Go** on the printer control panel to clear the error message.

13 Paper jam/Remove paper jam

- Remove the jammed paper from the specified location. Check the entire paper path for other pieces of paper.
- Open and close the top cover to clear the message.
- Check sensors and flags in the paper path for proper operation.
- The media does not meet HP specifications.
- The paper path is dirty or obstructed.
 - Clean the paper path components; ensure that the transfer roller is seated properly.
- The pickup (or other) rollers and/or the separation pad is worn.
- The paper is the wrong length or the paper size is selected incorrectly in the software.
- The exit sensor or flag is defective.
- A defective input (paper-out) sensor does not sense that the printer is out of paper.
- The paper is not correctly loaded.
- The solenoid operation is bad.
 - Verify proper solenoid operation and replace if necessary.
- The gear(s) might be bad or might not be meshing in the drive train.
 - Replace the bad gear(s) or check the toner cartridge gear(s) for damage.
- The main motor is bad.

13.1 Paper delay jam at paper feed area

13.2 Paper stopped jam at paper feed area

- Ensure that the paper trays are loaded properly so that paper can feed from the trays.
- Check the input area for obstructions such as paper in the paper path or damage to the registration assembly.
- Verify that the transfer roller is positioned correctly.
- Check PS 102 and PS 103 (4000/4050 series) and PS 402 and PS 403 (5000 series) for proper operation.
 - Replace any defective sensors or flags.

13.5 Paper delay jam at fuser

13.6 Paper stopped jam at fuser

- Check the transfer roller and small media belt to ensure that the roller and belt are operating and can feed the paper.
- Check the paper path for obstructions at the transfer roller, toner cartridge, paper feed guide, and fuser.
- Check PS 501 and PS 106 (4000/4050 series), PS 1307 (5000 series), or PS 1403 (8000 series) for proper operation. Replace any defective sensors or flags.

13.9 Check left door

- Inspect the path between the fuser and delivery assemblies.
- Check the diverter assembly.

13.10 Paper delay jam at paper reversing area/ duplexer

- Check the duplexer and the rear area of the printer for obstructions or damage.
- In the duplexer, check PS 701 and PS 703 for proper operation.
- Replace the duplexer if a sensor is defective.

13.11 Paper jam

- Check the entire paper path for obstructions.
- Reseat the duplexer.
- Try the Paper Path test.
- Replace the duplexer.

13.11 Paper jam in input device

- 1 Open the vertical transfer unit (VTU) and remove the media.
- 2 Verify that the entry or exit sensor can move freely.
- 3 If the problem persists, open the VTU and override its open door sensor, perform a Paper Path test from the 2,000-sheet Input Tray (or 2x500-sheet Input Tray), and make sure the feed rollers are advancing the paper.
 - If the rollers do not rotate, verify the connections at the main drive assembly, pickup assembly, controller PCA, and power supply. If the rollers still do not rotate or do not drop down, replace the pickup assembly.
 - If the rollers rotate and drop down without advancing the paper, replace the feed rollers using the maintenance kit.
 - If the problem persists, replace the VTU.

13.12 Paper jam

- Check the paper path between the fuser and duplex assembly.
- Reseat the duplexer.
- Replace the duplexer.

13.13 Paper jam

- Check the entire paper path for obstructions.
- Remove the duplex assembly and look for paper in the side of the assembly.
 - Retest.
- Replace the duplexer.

13.20 Paper jam

- Check the paper path for obstructions.
- Check that all assemblies are seated and all doors are closed.
- Check all sensors and flags in the paper path.

13.21 Door open jam

- Check that all assemblies are seated and all doors are closed.
- Check all sensors and flags in the paper path.

13.22 Paper jam in output device

- Open the flipper jam access door and remove the media.
- Make sure the sensor flag moves freely.
- Make sure that the flipper shaft is in place.
- If the problem persists, replace the flipper assembly.
- If the problem persists, replace the mailbox controller PCA.

20 Insufficient memory alternates with Press Go to continue

- Press **Go** to print the transferred data (some data might be lost); then simplify the print job or install additional memory.

20 Error/Memory overflow

- Set the enhanced input/output (I/O) to auto mode (printer command language [PCL] mode).
 - Resend the print job. If the auto-continue variable is on within the printer job language (PJM), the printer will continue to print after 10 seconds. If it is off, press the front panel button to continue printing.

21 Page too complex

- Press **Go** to print the transferred data. (Some data could be lost).
- To print the job without losing data, select `PAGE PROTECT=ON` from the Configuration menu in the printer control panel and then print the job. Afterward, return to `PAGE PROTECT=AUTO`. Do not leave `PAGE PROTECT=ON`; doing so could degrade performance.
- If this message appears often, simplify the print job or install additional memory.

22 EIO x buffer overflow alternates with Press Go to continue (too much data sent to EIO card)

- Press **Go** to clear the message. (Data will be lost.)

22 Parallel I/O buffer overflow (too much data sent to parallel port)

- Check for a loose cable connection. Use a high-quality IEEE-1284 cable.
- Press **Go** to clear the error message. (Data will be lost.)

22 Serial I/O buffer overflow alternates with Press Go to continue (too much data sent to the serial port)

- Verify that the correct option for serial pacing is selected on the I/O menu.
- Print a menu map and verify that the serial pacing item (from the I/O menu on the printer control panel) matches the setting on the computer.
- Press **Go** to clear the error message. (Data will be lost.)

40 Bad serial transmission (data transfer error)

- Verify cable connections.
- Verify that the printer serial configuration is set the same as the computer.
 - Access the serial baud rate setting from the I/O menu on the printer control panel.
- Press **Go** to clear the error message and continue printing.

40 EIO x bad transmission (connection between printer and EIO card broken)

X = Description

1 = EIO slot 1

2 = EIO slot 2

- Turn the printer off and reseal the card.
- Press **Go** to clear the error message and continue printing.

41.3 Unexpected paper size

- Verify that all trays are adjusted correctly for size. (The printer attempts to print the job until the size settings are correct.)
- If you are trying to print from Tray 1, make sure that the paper-size setting in the printer control panel is configured correctly.
- If you are trying to print from the optional 500-sheet tray, be sure to set the paper-size dial to match the paper size loaded in the tray.
- Press **Go**. The page containing the error is automatically reprinted. (Or, press **CANCEL JOB** to clear the job from the printer's memory.)

41.x Printer error alternates with Press Go to continue

- A temporary printing error occurred.

X = Description

1 = Unknown misprint error

2 = Beam detect error

4 = No VSYNC error

5 = Media feed error

9 = Noise VSREQ error

- Press **Go**. The page containing the error reprints automatically. If the error persists, try the following procedures:
 - Reseat the connections to the laser scanner and the engine controller board.
 - Replace the laser scanner.
 - Replace the engine controller board.

50.x Fuser error

- 1 Turn the printer off, wait 20 minutes, and then turn the printer on.
- 2 If the message persists, reseal the fuser.
- 3 If the message persists, replace the fuser.
- 4 The line voltage is low or bad--printer is hooked up to uninterruptable power supply (UPS).

51.x Printer error (loss of beam detect)

X = Description

1 = Beam detect error

2 = Laser error

- Press **Go**. The page containing the error reprints automatically.
- Turn the printer off and then on.
- Reseat the cables.
- Replace the laser scanner.

52.x Printer error (the laser scanner speed is incorrect)

X = Description

1 = Scanner startup error

2 = Scanner rotation error

- Press **Go**. The page containing the error reprints automatically.
- Turn the printer off and then on.
- Reseat the cables.
- Replace the laser scanner.

53.xy.zz Printer memory error with an accessory

The DIMM that caused the error will not be used.

X = DIMM type

0 = read only memory (ROM)

1 = random access memory (RAM)

y = Device location

0 = Internal memory (ROM or RAM)

1 to 3 = DIMM slots 1, 2, or 3

zz = Error number

0 = Unsupported memory

1 = Unrecognized memory

2 = Unsupported memory size

3 = Failed RAM test

4 = Exceeded maximum RAM size

5 = Exceeded maximum ROM size

6 = Invalid DIMM speed

7 = DIMM reporting information incorrectly

8 = DIMM RAM parity error

9 = ROM needs to be mapped to an unsupported address

10 = DIMM address conflict

11 = PDC XROM out of bounds

12 = Unable to make a temporary mapping

- Turn the printer off, and reseal or replace the specified DIMM.
- Try the DIMM in another slot.

- Replace the DIMM that caused the error.
- An error has been found in the RAM or ROM.
 - Power cycle the printer.
- The memory card is defective or incompatible.
 - Turn off the printer, remove any additional memory, then turn the printer back on. If the message clears, replace the memory card.
- The formatter PCA is defective.

55 Printer error alternates with Press Go to continue (internal communications problem)

- Press **Go**. The page containing the error reprints automatically.
- Check the power at the site.
- Replace the formatter PCA.
- Replace the DC controller.
- Replace the engine controller board.

56.x Printer error alternates with Cycle power to continue

- Press **Go**. The page containing the error reprints automatically.
- Turn the printer off and on.
- Check the configuration of the printer.

57.x Printer error

Note

To see the entire message, check the service manual for the printer.

- Check the fan's connector.
- Verify that the fan is not blocked.
- Replace the fan.

59.x Printer error

X = Description

0 = Motor error

1 = Motor startup error

2 = Motor rotation error

- Turn the printer off and then on.
- Make sure that the fuser or toner cartridge is not hindering gear movement in the drive train.
- Verify that the cable in the main motor is seated properly.
- If the error persists, replace the motor.

62.x Printer error (printer memory)

X = Location of problem

0 = Internal memory

1 to 3 = DIMM slots 1, 2, or 3

- Reseat or replace the specified DIMM.

63 Service

The formatter PCA is defective.

- Power cycle the printer. Disconnect the parallel I/O cable and run a self test. If the error persists, replace the formatter PCA.

64.x Printer error (scan buffer)

- Turn the printer off and then on.
- If the message persists, replace the formatter.

66 Error (external paper-handling device)

First X = Device number in chain

Second X = Device type (3 types):

1 = Input

2 = Output

3 = Stapler/stacker unit

yy = Device-specific error

- Press **Go** to clear the message.
- Turn the printer off and then on.
- Check all of the cables.
- Reseat the external paper-handling device.

66.11 Input device failure

- Verify that the lifting plate lifts up freely by hand.
- Verify that the paper size plates are installed correctly and are not bent.
- Check the pickup roller for proper installation.
- Check the pickup assembly and replace if necessary.
- Replace Tray 4.

66.xx.yy Input device failure alternates with Check cables and cycle power

- Check for an error in an external paper-handling device.

1st X = Device number in chain

2nd X = Device type (3 types):

1 = Input

2 = Output

3 = Stapler/stacker unit

yy = Device specific error

- Press **Go** to clear the message.
- Turn the printer off, and then turn the printer on.
- Reseat the external paper-handling device.

68 NVRAM full check settings

- Print a configuration page and check the printer settings to determine which values have changed.
- Hold down **CANCEL JOB** while turning the printer on.

69.x Printer error

X = Description

0 = The duplex mechanism has failed.

1 = The duplex side adjust has failed.

- Turn the printer off, and then turn the printer on.
- Reseat the duplexer.

79.xxxx Error (printing)

The printer detected an error. The numbers (xxxx) indicate the specific type of error. (See the printer service manual for the specific type of error.)

- Turn the printer off and then on.
- Try printing a job from a different software application. If the job prints, go back to the first application and try printing a different file. (If the message appears only with a certain software application or print job, the customer should contact the software vendor for assistance.)

If the message persists, try the following procedures:

- Turn the printer off and then on.
- Reseat or replace the interface cable and power cycle the printer.
- Remove the DIMMs one at a time and power cycle the printer.
- If possible, use the parallel interface.
- With the EIO cards removed from the printer, perform a cold reset.
- If the error persists, replace the formatter.

8x.yyyy critical error (EIO accessory)

The EIO accessory in slot x has encountered a critical error as specified by yyyy.

X = Description

1 = EIO slot 1 -The printer detected an error with the EIO card.

2 = EIO slot 2 -The printer detected an error with the EIO card.

6 = EIO slot 1 -The EIO card detected an error.

The EIO card may be defective.

7 = EIO slot 2 -The EIO card detected an error.

The EIO card may be defective.

- Turn the printer off, and then turn the printer on.
- Reseat or replace the EIO board.

2

Service mode

Overview

Service mode allows service personnel to verify and manipulate internal printer settings and to access the diagnostic feature. Service mode should be used only by authorized service personnel.

Service mode tasks

You can perform the following tasks while in service mode.

- Print a service mode self-test.
- Verify the page count.
- Set the page count.
- Set the maintenance count.
- Verify and set the serial number.
- Set the cold reset default. This sets the factory default paper size to either Letter or A4.
- Turn the diagnostic function on or off (for software developer use only).
- Clear the event log.
- Use the extended service mode.
- Reset softswitches.
- Perform a firmware download.
- Recalibrate the document scanner.
- Set the page count at which the next `PERFORM PRINTER MAINTENANCE` message appears on the control panel.
- Set the Demo Page =True/False (used to remove the demo page from the service mode self-test).

Accessing service mode

LJ 4050, 4000, 5000, 8000, and 8100 series only

Use the following procedure to access service mode.

- 1 Turn the printer off.
- 2 Press **SELECT** and **CANCEL JOB** simultaneously while turning the printer on. Hold the keys down until all lights are illuminated. (If the control panel reads `INITIALIZING`, the keys were released too soon.)
- 3 Press the right side of the **MENU** key, and then press **SELECT**.
`SERVICE MODE` appears.
- 4 To exit service mode, press **Go**.

LJ 3100 only

Use the following procedure to access service mode.

- 1 Press **BACKSPACE##** to access the extended Service Menu.
- 2 Use the **<** and **>** keys to select the choices given in the extended Service Menu (see the Extended Service Menu tree, page 72) and press **ENTER/MENU**.

See the display for further instructions. Notes about some of the menu choices are provided in the Extended Service Menu tree on page 72.

LJ 2100 and 1100

Use PCL commands to enter service mode and perform various service mode configurations. Users must use the exact character and case specified for PCL printer commands.

The following are elements of a typical printer command:

- Escape character (begins escape sequence)
- Parameterized character
- Group character
- Value field (contains both alpha and numeric characters)
- Termination character (uppercase)

Escape sequences may be combined into one escape sequence string. There are three important rules to follow when combining code:

- 1 The first two characters after the EC character (the parameterized and group characters) must be the same in all of the commands to be combined.
- 2 When combining escape sequences, change the uppercase (termination) character in each individual escape sequence to lowercase.
- 3 The final character of the combined escape sequence must be uppercase.

Entering Escape Characters

Printer commands always begin with the escape character (EC). The following table shows how the escape character can be entered from various DOS software applications.

DOS Software	Application Entry	What Appears
Lotus 1-2-3 and Symphony	Type \027	027
Microsoft Word for DOS	Hold down ALT and type 027 on the numeric keypad	<--
WordPerfect for DOS	Type <27>	<27>
MS-DOS Edit	Hold down CTRL-P, and press ESC	<--
MS-DOS Edlin	Hold down CTRL-V, and press [^[
DBASE	Type ?? CHR(27)+"command"	?? CHR(27)+" "

The following table shows how to use PJI commands to enter service mode and perform various service mode configurations.

PJL Service mode commands

PJL command	Description
E _C %-12345X@PJL	Start PJL job.
@PJL SET	
SERVICEMODE=HPBOISEID	Enter Service Mode
@PJL SET PAGES=0	Set page count [= xxxxx]
@PJL SET CRPAPER=LETTER	Sets cold reset page size [=Letter/A4]
@PJL SET SKIPDEMO=FALSE	Skips demo/PCL type page [=true/false]
@PJL SET DIAGNOSTICS-OFF	Sets diagnostics [=OFF/ON] (for ISV use)
@PJL SET SERVICEMODE=EXIT	Exits Service Mode
DEFAULT PAPER=LETTER	Selects user paper size default
@PJL RESET	Performs PJL reset
E _C %-12345X	Exits PJL mode
E _C Z	Prints self test/configuration page
E _C E	Resets the printer

2

Customization variable (LJ 2100 and 1100 only)

The customization variable will determine the default paper size after a cold reset. This is set to A4/Letter at the manufacturer. This variable may need to be reset when replacing the formatter.

Note

Before removing the old formatter PCB, print a self-test/configuration page to verify the current page count of the printer, if possible.

Resetting the printer (LJ 2100 only)

To perform a cold reset, turn the LJ 2100 printer off, then press and hold the **JOB CANCEL** button. Turn the printer back on and after all the LEDs come on release the **JOB CANCEL** button.

A cold reset changes most system parameters in NVRAM to the factory defaults. The **JOB CANCEL** button must be released within 20 seconds after all of the LEDs come on; otherwise, an NVRAM initialization is performed instead of a cold reset.

Setting the page count

LJ 4050, 4000, and 5000 series only

The page count is stored in the printer's non-volatile memory. If it is necessary to replace the formatter PCA, the page count should be set to the current value to reflect the age of the print engine. Use the following procedure to set the page count.

- 1 Before replacing the formatter PCA, print a configuration page to verify the current page count and serial number of the printer, if possible. Use the information on the configuration page to reset the page count and serial number for the new formatter PCA.

Note

Press the right side of the **MENU** and **ITEM** buttons to increase the value (+). Press the left side of the **MENU** and **ITEM** buttons to decrease the value (-).

- 2 Press **MENU+** to display SERVICE MENU.
- 3 Press **ITEM+** to advance to the PAGES=XXXXXX display. XXXXXX represents the page count currently stored in the non-volatile memory. The underlined character denotes the position of the cursor.
- 4 Press **SELECT** to advance the cursor one digit to the right. If the last digit is currently selected, the cursor will move to the first digit when you press the **SELECT** key.
- 5 Press **VALUE+/-** to scroll the digit until the correct value is displayed for the underlined digit. (Pressing **VALUE+** when 9 is the value of the currently selected digit changes the value of the digit to 0).
- 6 Press **SELECT** to enter numeric changes to the current digit and to advance the cursor one digit to the right.
- 7 Press **Go** to exit the Service Menu.

Resetting the maintenance counter

LJ 4050, 4000, 5000, 8000, and 8100 series only

The maintenance count should be reset only after a maintenance kit has been installed. Resetting the maintenance count resets the maintenance counter so that the message `PERFORM PRINTER MAINTENANCE` displays after another 150,000 (5000 series) 200,000 (4000 series) or 350,000 (8000, 8100 series) pages are printed.

Note

`MAINTENANCE COUNT` in the service mode menu sets the page count interval for when the next printer service is due for the printer. The maintenance count is set initially at the factory. Editing this number is similar to editing the `PAGES` item.

- 1 Hold down the **ITEM-** and **VALUE-** keys while turning the printer on.
- 2 Wait until `RESET MAINTENANCE COUNT` displays and then release both keys.

Setting the serial number

LJ 4050, 4000, and 5000 series only

Re-enter the serial number whenever you replace a formatter.

- 1 Press **MENU** to display the SERVICE MENU.
- 2 Press **ITEM+** three times. SERIAL NUMBER=XXXXXX displays. XXXXXX represents the page count currently stored in the printer's non-volatile memory. The underlined character denotes the position of the cursor.
- 3 Press **SELECT** to advance the cursor one digit to the right. If the last digit is currently selected, the cursor wraps around the first digit when you press the **SELECT** key.
- 4 Press **VALUE+/-** to scroll the digit until the correct value is displayed for the underlined digit. (Pressing **VALUE+** when 9 is the value of the currently selected digit will change the value of the digit to 0).
- 5 Press **SELECT** to enter numeric changes to the current digit and to advance the cursor one digit to the right.
- 6 Press **Go** to exit the Service Menu.

Non-volatile memory settings

LJ 4050, 4000, 5000, 8000, and 8100 series only

The page count, maintenance count, printer serial numbers, and maintenance interval are stored in non-volatile memory.

- `PAGECOUNT` is the total number of images printed by the printer.
- `MAINTCOUNT` is the page count when the next preventive maintenance should be performed (every 350,000 images).
- `S.N.` is the printer serial number (located on the back cover of the printer).
- `MAINTENANCE INTERVAL` is primarily for customers who knowingly use media that does not meet specifications and causes premature wear to maintenance parts. This allows a maintenance message to be set to a desired number.

If it is necessary to replace the formatter PCA, these numbers should be set to the current values to accurately reflect the age of the print engine. The printer service manual provides the procedure for setting these values.

Before removing the old formatter PCA, print a configuration page to verify the current values, if possible.

Note

If it is not possible to print a configuration page, try to verify the values before replacing the formatter PCA by following steps 1 through 5, below.

After verifying the page count, maintenance count, and printer serial number from the old formatter PCA, replace it with the new PCA.

- 1 Enter service mode. See “Service Mode” in the printer service manual for instructions.
- 2 When SERVICE MODE is displayed, press **MENU** to access the Service Menu.
- 3 Press **ITEMS** to display PAGES = MAINTENANCE COUNT = MAINTENANCE INTERVAL = SERIAL NUMBER =.
- 4 Enter the appropriate values for each item.
- 5 Press **Go** to exit service mode.

Setting the default paper size used in a cold reset

LJ 4050, 4000, 5000, 8000, and 8100 series only

Cold reset clears all data from the printer memory and sets all defaults back to the factory setting.

The default paper size is stored in NVRAM. When a cold reset is performed, the default paper size is restored. The default paper size is set to the factory setting. Possible values are COLD RESET PAPER=LETTER and COLD RESET PAPER=A4. When replacing the formatter in countries that use the A4 paper size (in place of the letter-size paper), set the cold reset paper size to A4.

To customize the cold reset paper size:

- 1 Enter the service mode. See “Accessing service mode” on page 63.
- 2 Press **MENU** to display SERVICE MENU.
- 3 Press **ITEM+** until COLD RESET PAPER=LETTER* or A4 displays.
- 4 Press **ITEM+** to toggle between LETTER and A4.
- 5 Press **SELECT** to activate your choice.
- 6 Press **Go** to exit the Service Menu.

Diagnostics

LJ 4050, 4000, 5000, 8000, and 8100 series only

The diagnostics menu item enables or disables the use of the firmware diagnostic features. These features are accessible when `DIAGNOSTICS=ON` displays. To access the diagnostic features, verify that the printer is in the `READY` state and press **SELECT**.

Note

This procedure is for software developers only.

Clear event log

Select this item to clear the internal event log.

Extended Service Menu

LJ 3100 only

Use the extended Service Menu to run various self-tests and to change softswitch settings, such as the country code softswitch setting.

The following page shows the layout of the extended Service Menu settings in a hierarchical diagram.

Reports		
	Help	Help prints a menu report for the product.
	T.30 protocol trace	
	SRAM dump	
	Scanner plots	
	Log debug report	
	Task stacks	
	Translations	
	Printer fonts	
Memory/softswitch		
	Softswitches	See "To change the country code softswitch" on page 78.
	Clear memory	
	Check documents	
	Edit SRAM	
	SRAM dump	
	Firmware version	
Control panel		
	Keypad test	Various tests under Control panel can assist in troubleshooting the product.
	LCD test	
	Control panel test	
	Sensor states	
	Speaker test	
	All LCD characters	
Scanner		
	Scanner plots	Scanner LED is the contact image sensor light bar test.
	Scanner LED	
	ADF feed test	ADF feed test runs the document feeder pickup rollers once.
	ADF motor test	ADF motor test runs the document scanner motor.
	Do TWAIN scan	
	White ref summary	
Self test		
	Burn-in	Burn-in prints a report after running the following tests: Program test, Configuration test #1, Fax memory test #2, Modem test #2, Scanner test #1, Scanner LED.
	Individual diagnostics	
	System reset	
Modem/PTT		
	Modem tone	
	Modem modulation	
	Modem type	

Self-test in extended service mode

LJ 3100 only

If you perform a self-test from the extended Service Menu, the printed report will also show the firmware revision number and details.

Note

Print the internal reports before performing extended service mode tests. The reports contain a record of all settings and can assist you in restoring the product to its settings.

The table below lists the tests that are performed during a self-test and the actions to take when tests fail.

Extended service mode self-test failures

Test	If the test fails, take these actions:
Configuration test #1	Replace the formatter.
Fax memory test #1	
Program test #1	1 Cycle power by unplugging the power cord from the power source, waiting 10 seconds, and replugging the power cord.
Configuration test #2	
Configuration test #3	2 If the test fails again, clear all memory (see the extended Service Menu tree, page 72).
Configuration test #4	
Fax memory test #2	3 If the test fails again, replace the formatter.
Fax memory test #3	
Fax memory test #4	
Fax memory test #5	
Modem 1 test #1	
Modem 1 test #2	
Modem 1 test #3	

Extended service mode self-test failures (continued)

Test	If the test fails, take these actions:
Modem 1 dial tone detect	<ol style="list-style-type: none"><li data-bbox="360 178 931 344">1 Make sure that the telephone cable is plugged into the correct connector on the product and that the telephone line is operational (use a telephone to test the line).<li data-bbox="360 359 931 424">2 If the test fails again, check the configuration settings in the control panel.<li data-bbox="360 439 931 470">3 If the test fails again, replace the LIU.
Scanner test #1	<p data-bbox="360 491 931 586">This test fails under normal conditions if the document scanner is busy. If the document scanner is not busy:</p> <ol style="list-style-type: none"><li data-bbox="360 606 931 701">1 Cycle power by unplugging the power cord from the power source, waiting 10 seconds, and replugging in the power cord.<li data-bbox="360 716 931 811">2 If the test fails again, clear all memory (see the “Extended Service Menu tree” on page 72).<li data-bbox="360 827 931 857">3 If the test fails again, replace the formatter.

Other tests in extended service mode

LJ 3100 only

The following chart shows tests that can be performed in extended service mode and provides a brief explanation of each test:

Extended service mode tests

Test	Explanation
Keypad test	Tests that all keys are functioning (by pressing the keys in sequence)
LCD test	Tests the control panel display
Control panel test	Tests the control panel lights
Sensor states	Shows current detector activation levels. Detector 1 and detector 2 are paper-size detectors. The control panel display shows the percentage of time each detector is activated.
All LCD characters	Scrolls through the full list of control panel display characters
Scanner plots	Tests and recalibrates the document scanner
Scanner LED	After selecting this menu item, lift the document release door and verify that all of the LEDs in the contact image sensor are lit
ADF feed test	Runs the document scanner pickup rollers once
ADF motor test	Runs the document scanner motor once
Individual diagnostics	Run individual tests from the self-test sequence (see the extended service mode self-test failures table)
Modem tone	Generates tones with various frequencies from 300 Hz to 2425 Hz
Modem modulation	Generates various fax identification signals

Reports in extended service mode

LJ 3100 only

The following chart shows reports that can be printed from extended service mode and provides a brief explanation of each report.

Extended service mode reports

Report	Explanation
T.30 protocol trace	Prints a report of the G3 protocol transmissions and receptions
SRAM dump	Prints SRAM address values in an address range that you select
Scanner plots	Prints the calibration page
Log debug report	Prints detailed fax and memory address information. Fax information includes job number, start time used, fax ID, transmission type, pages, communication mode, and status.
Task stacks	Prints address locations of various tasks
Translations	Prints text strings used in the display, beginning with the number you select. These text strings are printed in the language currently in use by the product. Compare the numbers in this report to the numbers in an English report to translate non-English messages on the display.
Printer fonts	Prints all characters of fonts available in memory
Firmware version (under "memory/softswitch")	Shows firmware revision information on the control panel display
White reference summary (under "scanner")	Displays average, minimum, and maximum white reference values

Clear memory in extended service mode

LJ 3100 only

CAUTION

Clearing memory clears all parameters, which can render the product illegal or inoperable. Print the internal reports before clearing memory in extended service mode. The reports contain a record of all settings and can assist you in restoring the product to its settings.

To perform a system reset, use extended service mode to choose MEMORY/SOFTSWITCH, and then choose CLEAR MEMORY. Use the < and > keys to select the memory you want to clear:

- DOCUMENTS (AND LOG) deletes all documents stored in memory and all log information.
- PHONEBOOK deletes all numbers stored in the phonebook.
- CONFIGURATION resets all menu settings printed in the configuration report to their defaults.
- SOFTSWITCHES resets all softswitches to their defaults.
- COUNTERS resets all page counts except the total number of pages printed. These page counts are printed at the end of the configuration report.
- EVERYTHING deletes and resets all of the above. Information retained includes white reference curve, total page count, and serial number.

Softswitches

LJ 3100 only

Note

Reset the country code softswitch whenever the formatter board is replaced or otherwise removed from the product, or when softswitches are reset to defaults.

Extended service mode allows you to change softswitches on the LJ 3100 product. A softswitch is a set of eight bits. See the software service manual for a complete list of softswitches.

To change the country code softswitch

- 1 Press **BACKSPACE**, **#**, *****, and *****, in sequence, to access the extended Service Menu.
- 2 Press **<** or **>** until `MEMORY/SOFTSWITCHES` appears below `SERVICE` on the control panel.
- 3 Press **ENTER/MENU**.
- 4 If `SOFTSWITCHES` does not appear below `MEMORY/SOFTSWITCHES` on the control panel, press **<** or **>** until it appears.
- 5 Press **ENTER/MENU**.
- 6 Use the keypad to enter **101** (the “country code” softswitch).
- 7 Press **ENTER/MENU**.
- 8 Use the keypad to enter the sequence that corresponds to the country in which the product is used. (See the list of country code softswitch sequences on the following page.)

Country code softswitch sequences

Country	Code (decimal)	Code (binary)
Australia	0B	00001011
Austria	19	00011001
Belgium	0E	00001110
Canada	29	00101001
Denmark	0C	00001100
Eire (Ireland)	02	00000010
Finland	08	00001000
France	07	00000111
Germany	06	00000110
Hong Kong	13	00010011
Hungary	12	00010010
Israel	16	00010110
Italy	0A	00001010
Malaysia	20	00100000
Netherlands	0D	00001101
New Zealand	0F	00001111
Norway	05	00000101
Russia	1D	00011101
Singapore	11	00010001
Spain (Espagne)	18	00011000
Sweden	04	00000100
Switzerland	03	00000011
United Kingdom	01	00000001
United States	00	00000000

9 Press **ENTER/MENU** to complete the softswitch change.

10 Press **STOP/CLEAR**.

The product will exit extended service mode within a few minutes.

Firmware download

LJ 3100 only

Newer versions of the firmware for the HP LaserJet 3100 product can be downloaded to the product.

To perform a firmware download

- 1 Restart the computer in MS-DOS® mode (do not use an MS-DOS window).
- 2 Press down and hold **STOP/CLEAR** while performing step 3.
- 3 Cycle power by unplugging the power cord from the power source, and then replugging in the power cord.
- 4 Type the following, substituting the current version of the firmware for xxx: `Copy /b leonxxx.rom lpt1:`

Calibrating the document scanner

LJ 3100 only

Calibrate the document scanner if you notice that copies, items scanned to the computer, or faxes you send have black or white lines running through them.

To calibrate the document scanner

- 1 Clean the HP LaserJet 3100 product before calibrating it. (See “Cleaning the HP LaserJet 3100 product” in the product service manual.)
- 2 On the control panel, press **ENTER/MENU**.
- 3 Press **<** once to display `SERVICE` and press **ENTER/MENU**.
- 4 Use the **<** and **>** keys to select `SCAN CORRECTION` and press **ENTER/MENU**.
- 5 Insert a blank, bright white piece of letter-sized paper into the document feeder tray.

The HP LaserJet 3100 product pulls the piece of paper through and then prints a recalibration test page. Discard this page. The calibration procedure is complete.

Calibrating the document scanner

LJ 1100 only

If images are showing defects, the scanner may need to be calibrated. First, verify that the problem is not printer related. If the problem is not printer related, clean the scanner. If image defects persist, then calibrate the scanner. To do so, follow the instructions below:

- 1 Create a page that measures 219 mm by at least 153 mm (8.6 in by at least 6 in). Use bright, white paper.
- 2 Insert the page into the paper input tray, wide side first, and begin calibration.

To access the calibration utility, see “Accessing the calibration utility”, below.

Note

For more information about calibration, see the online help.

Accessing the calibration utility

Windows 9x and NT 4.0

From the **Document Assistant**, click **Tools**, and then **Calibration**.

Windows 3.1x

From the **Program Manager**, double-click the HP LaserJet 1100 icon, and then double-click on **Calibrate Scanner**.

Service mode functions (PJL software commands)

Setting the service mode in the LJ 1100 series printer allows the following functionality:

- Sets the following NVRAM variables:
 - Factory printer `DEFAULT PAPER`: the factory default paper size for the scanner (if one is attached) will be set to the same value automatically.
 - Factory printer `DEFAULT LPARM=PCL SYMSET`
 - Factory `DEFAULT OEM bit`
 - Factory `DEFAULT PRINTPAGECOUNT`
 - Factory `DEFAULT SCANPAGECOUNT` (if the scanner is attached)
 - Factory `DEFAULT COPYPAGECOUNT` (if the scanner is attached)

Note

The default quick-copy paper size is also stored in the scanner NVRAM; however, it can be changed only within the software or set back to the factory default setting with an `NVRAMINIT`.

The quick-copy image type and the contrast have a default value stored in NVRAM; however, they can only be changed within the software or by `NVRAMINIT`, which returns them to a ROM default value.

- Provides `NVRAMINIT`, which restores all default variables stored in NVRAM to the factory default values or a default ROM value depending on the variable. It also performs a system reset. To do this, turn off the printer, hold down the **Go** button, and then turn the printer on. All LEDs will flash once, and then turn off. Continue holding the button down until you see LEDs cycle once; then release the button. The LEDs will cycle twice as fast after the RAM/ROM checks and the NVRAM variables will be restored to the factory default values. This will not clear page counts.

The following table provides a detailed description of the NVRAM PJI factory variables or commands and possible settings.

NVRAM PJI factory variables

NVRAM PJI variable or command	Possible settings
DEFAULT PAPER	"Letter", "Legal", "A4", "Executive", "Com10", "Monarch", "DL", "C5", "B5", "Custom"
DEFAULT LPARM:PCL SYMSET	"Roman8", "ISOL1", "ISOL2", "ISOL5", "PC8", "PC8DN", "PC850", "PC852", "PC8TK", "WINL1", "WINL2", "WINL5", "DESKTOP", "PSTEXT", "VNINTL", "VNUS", "MSPUBL", "MATH8", "PSMATH", "VNMATH", "PIFONT", "LEGAL", "ISO4", "ISO6", "ISO11", "ISO15", "ISO17", "ISO21", "ISO60", "ISO69", "WIN30"
DEFAULT OEM	"On", "Off"
DEFAULT PRINTPAGECOUNT	0-2147483647
DEFAULT SCANPAGECOUNT	0-2147483647
DEFAULT COPYPAGECOUNT	0-2147483647
NVRAMINIT	None (command)

Note

Set `SERVICEMODE=HPBOISEID` before trying to set the variable. The PJI reset is also necessary to make sure the `SERVICEMODE` status is cleared.

3

Power supply


Overview

This chapter details the distribution of AC and DC power.

AC and DC power distribution

HP LaserJet 2100 series printer

- AC power is supplied to the low-voltage power supply circuit when the power switch is turned on. This circuit supplies DC voltage (+24V, +5V, +3.3V) to the main motor, laser scanner unit, interlock switch, video controller, solenoids, paper feeder, high-voltage power supply, and formatter.
- Opening the top cover interrupts the DC voltage supplied to the high-voltage power supply circuit.
- The low-voltage power supply circuit contains an overcurrent/overvoltage protection circuit that automatically turns off the output voltage when an overcurrent condition occurs because of a short or abnormal voltage on the load side.
- The protection circuit automatically resets after the input power is turned off then on. The low-voltage power supply circuit also contains a fuse that shuts off the power supply to the circuit when overcurrent conditions occur. See “Engine Control System” in the printer service manual for more information.
- In response to the engine controller assembly, the high-voltage power supply circuit (see “Engine Control System” in the printer service manual) supplies DC and AC voltage to the various parts of the image formation system.

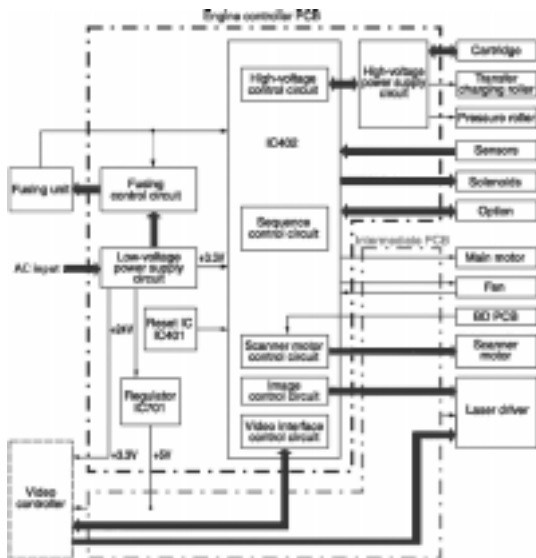

Low- and high-voltage power supply circuit (2100 series)

HP LaserJet 4050 and 4000 series


AC power is supplied to the low-voltage power supply circuit in the engine controller board when the power switch (SW 101) is turned on. The low-voltage power supply circuit supplies +24 Vdc and +3.3 Vdc to the printer. DC power drives the following items:

+24 Vdc

- main motor
- scanner motor
- fan
- high-voltage power supply

+3.3 Vdc

- sensors
- ICs on the engine controller board
- EIO accessories

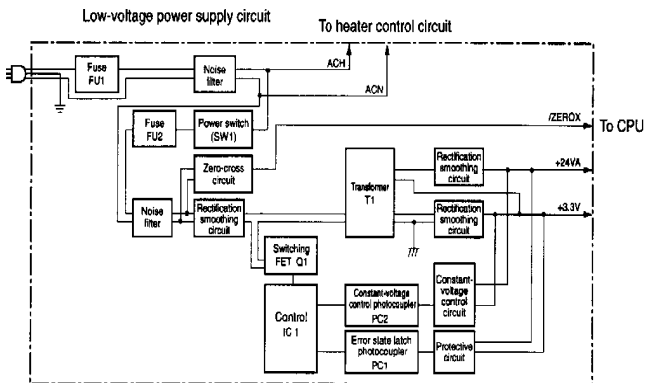

Low-voltage power supply circuit (4050 and 4000 series)

HP LaserJet 5000 series

The AC line voltage for the LaserJet 5000 printer is applied through the main switch (SW 101) and supplied to the low-voltage power supply circuit through the fuse (FU1). The low-voltage power supply divides the AC voltage to +24 Vdc, +5 Vdc and +3.4 Vdc and supplies them to the DC controller PCA. This circuit generates a zero-cross signal (ZEROX) and supplies it to the DC controller PCA.

DC power is supplied as follows:

+3.4 Vdc


- ICs on the DC controller PCA and the BD PCA

+5 Vdc

- laser driver PCA
- sensors

+24 Vdc

- high-voltage power supply PCA to drive the main motor
- exhaust fan
- scanner motor
- clutches
- solenoids

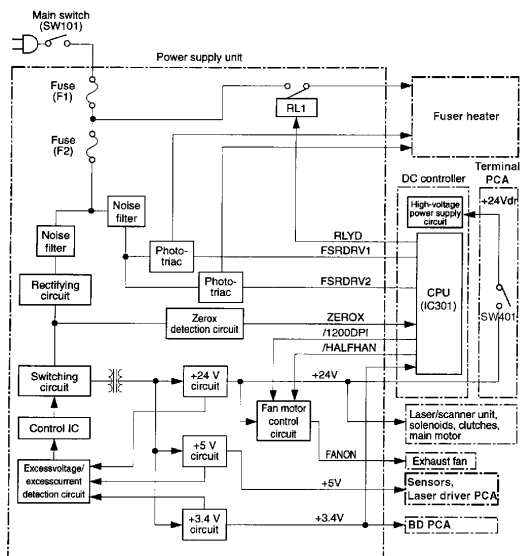

Low-voltage power supply circuit (5000 series)

HP LaserJet 3100

The AC, DC, and high-voltage power supply circuits are all contained within the ECU.

The AC power circuitry supplies AC voltage whenever the power cord is connected to the AC power source. AC voltage is distributed to the DC power supply circuitry and to the AC driver circuitry. The AC driver circuitry controls AC voltage to the heating element in the fusing assembly.

The DC power distribution circuitry distributes +5 Vdc and +12 Vdc as follows:

+5 Vdc


- formatter
- photosensors
- ECU circuitry
- laser/beam detect circuitry

+12 Vdc

- printer main motor
- document scanner motor
- solenoid

+12 VAdc


- high-voltage power supply (on ECU)

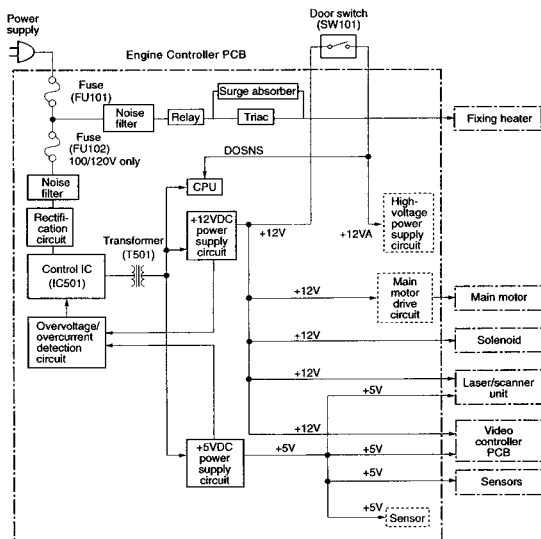

Low-voltage power supply circuit (3100)

HP LaserJet 8000 series

The AC and DC power supply circuits are contained in the low-voltage power supply (LVPS). The high voltages required for image formation are generated by the high-voltage power supply (HVPS). The low-voltage power supply and distribution system are illustrated below.

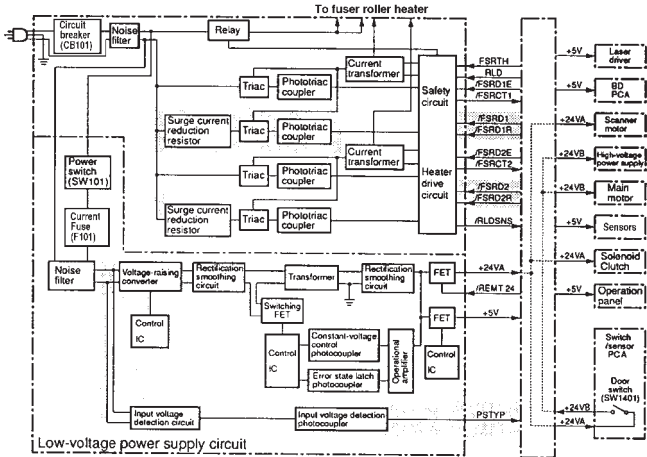


220-240V ONLY

Low-voltage power supply circuit (8000 series)

HP LaserJet 8100 series

The AC and DC power supply circuits are contained in the low-voltage power supply (LVPS). The high voltages required for image formation are generated by the high-voltage power supply (HVPS). The low-voltage power supply and distribution system are illustrated below.

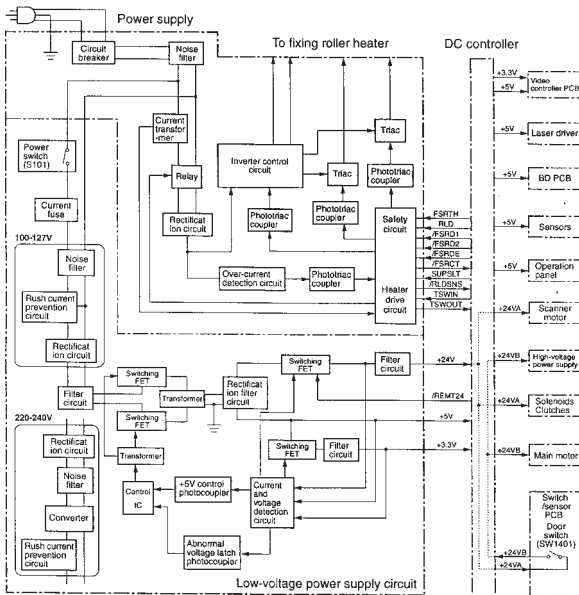

Low-voltage power supply circuit (8100 series)

HP LaserJet 1100 series

The AC, DC, and high-voltage power supply circuits are all contained within the ECU.

The AC power circuitry supplies AC voltage whenever the power cord is connected to the AC power source. AC voltage is distributed to the DC power supply circuitry and to the AC driver circuitry. The AC driver circuitry controls AC voltage to the heating element in the fusing assembly.

The DC power distribution circuitry distributes +3.3 Vdc, +5 Vdc, and +24 Vdc as follows:

+3.3 Vdc

- formatter
- laser/beam detect circuitry
- ECU

+ 5 Vdc


- formatter
- photosensors
- printer laser scanner

+24 Vdc

- printer main motor
- document scanner motor
- solenoid
- formatter

+24 VAdc

- high-voltage power supply (on ECU)

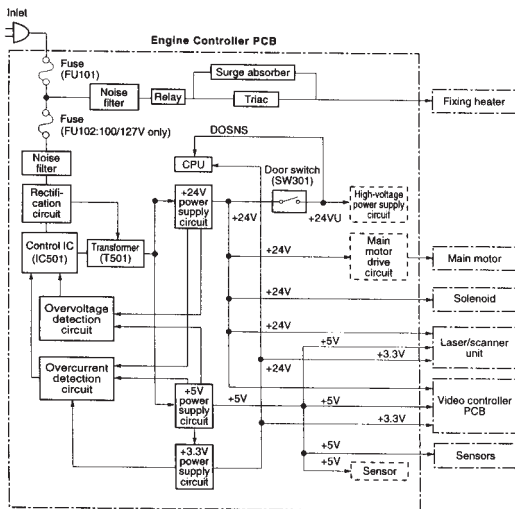

Low-voltage power supply circuit (1100 series)

Protection systems

Problems on the load side, such as short circuits, can cause an excessive flow of current from the DC power supplies or can generate abnormal voltage. When this happens, the excess-current and excess-voltage protection systems automatically shut off the output voltage to protect the power supplies.

If the protection systems are activated and the power supply circuit does not output DC voltage, turn the printer off, correct the problem in the faulty load, and then turn the printer on again.

4

Input/output (I/O)

Overview

This chapter provides information on cabling and the printer interface.

Bidirectional parallel interface

The formatter PCA receives incoming data through its bidirectional interface (IEEE 1284).

The bidirectional parallel interface (IEEE-1284 compliant) is compatible with Centronics parallel interfaces. To take advantage of its enhanced capabilities, such as bidirectional communication, the following must be provided:

- Software application support for these features.
- IEEE-1284 compliant parallel cable with the correct pin configuration (see the following table).

4050, 4000, 5000, 8000, and 8100 only

The user may configure the `HIGH SPEED` item in the Control panel menu. The default setting, `YES`, allows the I/O to run at the higher speeds supported by most newer computers. When set to `NO`, the parallel interface runs at the slower mode that is compatible for older computers. The user may also configure the `ADVANCED FUNCTIONS` item. The default setting, `ON`, allows for two-way parallel communications. The `OFF` mode disables this advanced functionality.

Pin configuration

Signal name	Printer pin #	Parallel port pin #
nSTROBE	1	1
DATA 1	2	2
DATA 2	3	3
DATA 3	4	4
DATA 4	5	5
DATA 5	6	6
DATA 6	7	7
DATA 7	8	8
DATA 8	9	9
nACKNLG	10	10
BUSY	11	11
CALL (PE)	12	12
SELECT	13	13
nAUTOFd	14	14
On VDC (GND)	19 THRU 30	18 THRU 25
nFAULT	32	15
nSelln	36	17

IEEE-1284 compliant parallel cables

HP helped develop the IEEE-1284 standard and is one of the first companies to introduce products that are compliant with it. HP offers four IEEE-1284 compliant parallel cables. Each is described below.

IEEE-1284 compliant parallel cables

Part number	Length	Connector type
C2950A	2 meters (7 feet)	Host A to printer B (large) connector
C2951A	3 meters (10 feet)	Host A to printer B (large) connector
C2946A	3 meters (10 feet)	Host A to printer C (small) connector
C2947A	10 meters (33 feet)	Host A to printer C (small) connector


Maximum I/O cable lengths

Serial RS-232C RS-422A	15 meters (50 feet) 610 meters (2000 feet)
Parallel (non-IEEE-1284)	3 meters (10 feet)
Parallel (IEEE-1284) with "B" type connector	3 meters (10 feet)
Parallel (IEEE-1284) with "C" type connector	3 meters (10 feet) (LJ 3100) 10 meters (33 feet) (LJ 1100)

Attaching the printer cables

The printer's parallel port can have one or both of the following connectors:

- B-type parallel (large)
- C-type parallel (small)

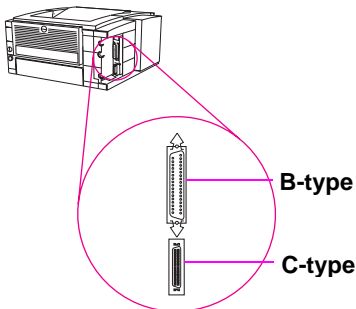

Printer interface connections

RS-232-C/RS-422-A serial interface

For this information, see the wiring diagram for common serial input/output cables in the printer service manual.

Configuring the network interface

To configure the printer network interface, see the *HP JetDirect Print Server User Manual*.

LocalTalk I/O*

The printer implements AppleTalk networking protocol through LocalTalk hardware. The LocalTalk network cable (HP part number 92215N) is connected through the EIO card.

Expanded I/O*

The optional expanded I/O card can be installed in the slots provided on the formatter PCA. The expanded I/O card provides automatic I/O switching between multiple computers or networks connected to the printer. The network version printers include the HP JetDirect Multi-protocol Network Card with Ethernet/10Base-T and 10Base-2, and LocalTalk.

Flash*

Flash is provided in optional 2 and 4 megabyte (MB) flash memory DIMMs for storage of forms, fonts, and signatures.

Disk*

The optional EIO-based hard disk is used for creating multiple original prints (mopies) and for storing forms, fonts, and signatures.

*This feature does not apply to the HP LJ 2100, LJ 3100, or LJ 1100.

5

Media specifications

Overview

Use media that meet the specifications listed on the following pages. By doing so, you will minimize the incidents of paper jams, prevent premature wear to the printer, and reduce repair costs.

Hewlett-Packard recommends testing print media before buying it in large quantities.

Note

For complete paper specifications for all HP LaserJet printers, see the *HP LaserJet Family Paper Specification Guide*.

Paper sizes

Metric system

Size	Metric dimensions	U.S. dimensions
A3	297 by 420 mm	11.7 by 16.5 in
A4	210 by 297 mm	8.3 by 11.7 in
A5	148 by 210 mm	5.8 by 8.3. in
B4 (ISO)	250 by 353 mm	9.8 by 13.9 in
B5 (ISO)	176 by 250 mm	6.9 by 9.8 in

Imperial (U.S.) system

Size	U.S. dimensions	Metric dimensions
Ledger	11 by 17 in	279 by 432 mm
Legal	8.5 by 14 in	216 by 356 mm
Letter	8.5 by 11 in	216 by 279 mm
Executive	7.25 by 10.5 in	184 by 267 mm
Custom	5.8 by 8.2 in to 8.5 by 14 in	149 by 210 mm to 216 by 356 mm
JIS B4**	10.1 by 14.3 in	257 by 364 mm
JIS B5**	7.2 by 10 in	182 by 257 mm
J Postcard*	3.9 by 5.8 in	100 by 148 mm
J Double postcard*	5.8 by 7.9 in	148 by 200 mm
* J - Japanese ** JIS Japanese Industry Standard		

Paper specifications

Paper specifications

Category	Specification
Acid content	5.5 pH to 8.0 pH
Basis weight (2100 series): Tray 1 Tray 2 Tray 3	60 to 163 g/m ² (16 to 43 lb) 60 to 105 g/m ² (16 to 28 lb) 60 to 105 g/m ² (16 to 28 lb)
Basis weight (4050, 4000 series): Tray 1 (4050 series, 4000 series) Tray 2 (4050/40050 N, 4000, 4000 N) Tray 2 and tray 3 (4050 T/4050 TN, 4000 T/4000 TN) Optional 500-sheet tray Duplexer Optional envelope feeder	60 to 199 g/m ² (16 to 53 lb) 60 to 105 g/m ² (16 to 28 lb) 60 to 105 g/m ² (16 to 28 lb) 60 to 105 g/m ² (16 to 28 lb) 60 to 105 g/m ² (16 to 28 lb) 75 to 105 g/m ² (20 to 28 lb)
Basis weight (5000 series): Tray 1 Tray 2 or optional 250-sheet tray Optional 500-sheet tray Duplexer	60 to 199 g/m ² (16 to 53 lb) 60 to 105 g/m ² (16 to 28 lb) 60 to 105 g/m ² (16 to 28 lb) 60 to 105 g/m ² (16 to 28 lb)
Basis weight (3100): Paper input bin Single-sheet input slot Document feeder tray	60 to 105 g/m ² (16 to 28 lb) (up to 157 g/m ² [42 lb] using the front output slot) 60 to 105 g/m ² (16 to 28 lb) (up to 157 g/m ² [42 lb] using the front output slot) 44 to 105 g/m ² (12 to 28 lb) (up to 67 lbs using the special media lever)
Basis weight (8000 series): Standard output bin Left output bin Optional 2000-sheet input tray Duplexer Optional envelope feeder	60 to 105 g/m ² (16 to 28 lb) 60 to 105 g/m ² (16 to 28 lb) 60 to 105 g/m ² (16 to 28 lb) 60 to 105 g/m ² (16 to 28 lb) 60 to 90 g/m ² (16 to 24 lb)

Paper specifications (continued)

Category	Specification
Basis weight (8100 series): Tray 1 (multipurpose) Trays 2 and 3 Optional 2000-sheet input tray Duplexer Optional envelope feeder	One-sided: 60 to 199 g/m ² (16 to 53 lb) Two-sided: 60 to 75 g/m ² (16 to 28 lb) 60 to 105 g/m ² (16 to 28 lb) 60 to 105 g/m ² (16 to 28 lb) 60 to 105 g/m ² (16 to 28 lb) 60 to 90 g/m ² (16 to 24 lb)
Basis weight (1100 series): Front output slot Single-sheet input slot Document feeder tray	60 to 105 g/m ² (16 to 28 lb) (up to 157 g/m ² [42 lbs] using the front output slot) 60 to 105 g/m ² (16 to 28 lb) (up to 157 g/m ² [42 lbs] using the front output slot) 60 to 105 g/m ² (16 to 28 lb)
Caliper	Dependent upon basis weight
Curl in ream	Flat within 5 mm (0.2 in)
Condition of cut edge	Cut with sharp blades with no visible fray
Fusing compatibility	Must not scorch, melt, offset, or release hazardous emissions when heated to 205°C (400°F) for 0.1 second
Grain	Long grain
Moisture content	4% to 6% by weight
Smoothness	100-250 Sheffield

U.S. paper grades: Basic sizes and basis weights

The U.S. paper grading system has evolved from custom and usage rather than from a technical background, resulting in similar papers having different stated weights. For example, a 24# bond paper is exactly the same weight as a 60# book or a 60# text or a 33# cover. This is because basis weight is defined as the weight of 500 sheets of paper cut to basic size. The basic size for bond, book/text, cover, index, bristol, and tag are all different so the given weights for these paper grades may be different although the physical weight is virtually identical. The following tables will help clarify these differences. Note the difference in basic size for each grade which effects the weight of 500 sheets of that grade:

U.S. paper grades: basic sizes and basis weights

Paper grade	Basic size	Basic area	Factor	Equivalent basis weights (example)
Bond	17 by 22 in	374.0 sq.in.	1.00	24# bond
Text	25 by 38 in	950.0 sq. in.	2.54	61# text
Book (coated or uncoated)	25 by 3 in	950.0 sq. in.	2.54	61# book
Cover	20 by 26 in	520.0 sq. in.	1.39	33# cover
Bristol	22.5 by 28.5 in	641.25 sq. in.	1.71	41# bristol
Index	25.5 by 30.5 in	777.75 sq. in.	2.08	50# index
Tag	24 by 36 in	864.0 sq. in.	2.31	55# tag
Metric weight	none	none	3.76	90 g/m ²

Weight equivalence table

The following rows show equivalent weights for different grades of paper. Shaded boxes indicate a commonly available standard weight for that grade.

Weight equivalence table

Bond wt. (17x22)	Text/ book wt. (25x38)	Cover wt. (20x26)	Bristol wt. (22.5x 28.5)	Index wt. (25.5x 30.5)	Tag wt. (24x36)	Metric wt.
16#	41#	22#	27#	33#	37#	60 g/m ²
17#	43#	24#	29#	35#	39#	64 g/m ²
20#	50# *	28#	34#	42#	46#	75 g/m ²
21#	54#	30#	36#	44#	49#	80 g/m ²
24#	60# *	33#	41#	50#	55#	90 g/m ²
27#	68#	37#	45#	55#	61#	100 g/m ²
28#	70# *	39#	49#	58#	65#	105 g/m ²
29#	74#	41#	50#	61#	68#	110 g/m ²
32#	80# *	44#	55#	67#	74#	120 g/m ²
36#	90#	50#	62#	75#	83#	135 g/m ²
39#	100#	55#	67#	82#	91#	148 g/m ²
40#	101#	55#	68#	83#	92#	150 g/m ²
43#	110#	60#	74#	90#	100#	163 g/m ²
45#	115#	63#	77#	94#	104#	170 g/m ²
47#	119#	65#	80#	97#	108#	176 g/m ²
51#	128#	70#	86#	105#	117#	190 g/m ²
53#	134#	74#	90#	110#	122#	199 g/m ²
54#	137#	75#	93#	113#	125#	203 g/m ²
58#	146#	80#	98#	120#	133#	216 g/m ²
65#	165#	90#	111#	135#	150#	244 g/m ²
66#	169#	92#	114#	138#	154#	250 g/m ²
67#	171#	94#	115#	140#	155#	253 g/m ²

Weight equivalence table (continued)

Bond wt. (17x22)	Text/ book wt. (25x38)	Cover wt. (20x26)	Bristol wt. (22.5x 28.5)	Index wt. (25.5x 30.5)	Tag wt. (24x36)	Metric wt.
70#	178#	98#	120#	146#	162#	264 g/m ²
72#	183#	100#	123#	150#	166#	271 g/m ²

Note

Text and book grades marked with an * actually calculate out to 51, 61, 71 and 81 but are rounded to standard book/text weights of 50, 60, 70 and 80.

Troubleshooting media problems

Paper problems can be difficult to detect. The following series of steps will help isolate paper-induced problems versus printer problems:

- Isolate a paper path.
- Isolate a brand of paper.
- Isolate a type of paper.
- Evaluate paper-use practices.
- Evaluate environmental conditions.

Here are some paper usage tips:

- Turn the paper over and print on the other side. Doing so often corrects excess paper curl.
- Rotate the paper 180° (end-for-end) to feed a different leading edge. This can help correct multi-sheet feeding problems.

Media to avoid

- NCR self-carbon (or “carbonless” paper)
- paper that has been preprinted (such as letterhead) with ink that will not withstand fuser heat (205° C [400° F] for 0.1 second)
- plastic-fiber paper
- embossed paper
- paper with cutouts or perforations
- chemically treated paper
- coated paper
- synthetic paper
- multi-part forms
- odd-sized paper

If your printer is having trouble with paper jams, multi-feeds, or misfeeds, try using HP 20 lb multi-purpose paper (part number 9300-2092) or HP 24 lb LaserJet paper (part number 9300-2091).

General tips

Paper curl

Paper curl results from both the heating process used to bond the print image (toner) to the paper and from the path that the paper must negotiate through the printer.

Take the following actions to help reduce paper curl:

- 1 Turn the paper over in the input tray. Some paper packages (reams) have an arrow indicating the preferred printing side. Experiment to determine which orientation yields the least curl.
- 2 Try a different output paper path (if available for your printer). Using the “face-up” output path may yield more acceptable results than the standard “face-down” output bin.
- 3 Protect the paper from adverse environmental conditions prior to use. Paper designed for laser printing has an initial moisture content of 4-6 percent which is maintained as long as it is stored properly. Once the paper has been removed from its packaging it will dry out or absorb additional moisture, depending on the environment. Excess moisture in the paper will increase the amount of curl.
- 4 Try a different type or brand of paper. Not all paper is designed for laser printing.

Much of the paper curl that is induced by the laser printer fusing process will tend to relax within the first 24 hours following printing. However, the curl on the leading edge of the page may remain longer because the leading edge tends to remain in contact with the fusing roller for longer periods.

Envelope specifications

Envelope specifications

Category	Specifications
Basis weight	All printers except LJ 2100: Should not exceed 105 g/m ² (28 lb) LJ 2100 printer only: 100 g/m ² (27 lb)
Caliper	0.084 to 0.14 mm (3.3 to 5.5 mils) single layer thickness
Curl	All printers except LJ 2100: Less than 6 mm (0.25 in) curl across entire surface. LJ 2100 printer only: Less than 5 mm (0.2 in) curl across entire surface.
Finishing	Accurate, sharply creased folds with no more than two thicknesses of paper at the leading edge
Fusing compatibility	Must not scorch, melt, offset, or release hazardous emissions when heated to 205° C (400° F) for 0.1 second
Moisture content	4% to 6% by weight
Paper	Must meet all the normal paper specifications
Smoothness	100 to 250 Sheffield

Envelope sizes

Imperial (U.S.) system

Size	U.S. Dimensions	Metric Dimensions
Tray 1: Minimum Maximum	3 by 5 in 8.5 by 14 in	76 by 127 mm 216 by 356 mm
Optional envelope feeder: Minimum Maximum	3.5 by 6.3 in 7 by 10 in	90 by 160 mm 178 by 254 mm

Envelopes to avoid

Do not use the following envelopes:

- with clasps, snaps, or tie strings
- with transparent windows, holes, perforations, or cutouts
- having an open flap with adhesive exposed
- having paper, inks, adhesives, or materials that discolor, melt, offset, or release hazardous emissions when exposed to 205° C (400° F)
- having extremely smooth, shiny, rough, textured, or deeply embossed surfaces
- damaged, wrinkled, or irregularly shaped
- constructed with encapsulating adhesives that do not require moistening, but rely instead on pressure to seal them

Preventing printer malfunctions caused by envelopes

When you are printing on envelopes, use these preventive measures to avoid printer malfunctions.

- Carefully feed the envelopes into the printer.
- Be aware of the envelope's construction.

Envelope feeding

Follow these preventive measures when feeding envelopes:

- Envelopes can be manually fed through the printer or they can be fed automatically through an envelope tray or feeder.
- Closely inspect the leading edge of the envelopes before feeding them into the printer.
 - Ensure that the leading edge is flat.
 - Do not use envelopes with excessive curl.
 - Flatten the leading edge of the envelope before printing.
- Wait an appropriate time; in manual feed mode the printer displays a message when it is ready to accept the next envelope. Wait for this message to appear before inserting the next envelope.
- Do not allow a large quantity of envelopes to accumulate in the output bin.
- On most printers, use the rear (or front) output bin (if available) when printing envelopes. Do not use the top (face-down) output bin.

Envelope construction

- The corner folds need to be well-creased, with no more than two thicknesses of paper.
- The envelopes must lay flat.
- The paper grain should be diagonal to the direction of the feed.
- Adhesives must meet HP specifications for fusing compatibility.
- Basis weight must not exceed 105 g/m^2 (28 pounds).
- Do not use envelopes with clasps, snaps, tie strings, or windows.
- Do not use envelopes made of synthetic materials.

Label specifications

Label specifications

Category	Specifications
Adhesive	Must not be on any external surfaces of the label before, during, or after printing. Label construction and die-cutting must not allow labels to peel off during transport, printing, or fusing.
Caliper	Must not exceed 0.18 mm (0.007 in)
Curl	All printers except LJ 2100: In ream: flat within 13 mm (0.5 in) LJ 2100 only: In ream: flat within 5 mm (0.2 in)
Finishing precision	Cut sheet within 0.79 mm (0.031 in) of nominal and 0.20° square
Fusing compatibility	All adhesions, carrier sheets, top sheets, and other materials used in label construction must be compatible with the heat and pressure of the fusing process. Materials must not discolor, melt, offset, or release hazardous emissions when heated to 205° C (400° F) for 0.1 second.
Packaging	Use moisture-proof wrap to preserve properties.

Preventing printer malfunctions caused by adhesive labels

As with envelopes, prevention is the best way to avoid printer malfunctions caused by adhesive labels. To prevent jams and feed problems, labels must meet the following requirements:

- Be cut long grain (as opposed to short grain).
- Totally cover the carrier sheet (no spaces between labels, no removed labels).
- Contain no excessive glue. (The adhesive should be acrylic-based emulsion and should not come into direct contact with the printer).
- Meet HP specifications for fusing compatibility.
- Meet HP specifications for caliper.
- Have a carrier sheet that is not too smooth.
- Use the flat paper path (manual feed slot and rear, or front, face-up delivery door), which is the recommended printing method.

Transparency specifications

Transparency specifications

Category	Specifications
Caliper	0.100 to 0.110 mm (3.9 to 4.3 mils)
Cutting angle	90° ± 0.2°
Finishing precision	Cut sheet to within 0.8 mm (0.03 in) of nominal and ± 0.2° of square
Fusing compatibility	Overhead transparency material must be compatible with the heat and pressure of the fusing process. Materials must not discolor, melt, offset material, or release hazardous emissions when heated to 205° C (400° F) for 0.1 second.


Preventing printer malfunctions caused by transparencies

Use these preventive measures to avoid printer malfunctions caused by transparencies:

- Use the straightest paper path to avoid curling and other problems.
- Use transparencies with the correct resistivity.
- Use transparencies that meet HP specifications for fusing compatibility.
- Remove each printed sheet from the tray and place it on a flat surface before printing the next sheet.
- Print transparencies to the top output bin to avoid jams (LJ 2100).

HP paper training video

HP has developed a training video that shows how paper is manufactured and how the manufacturing process relates to the use of paper in HP LaserJet printers. Part numbers for the video are shown below.

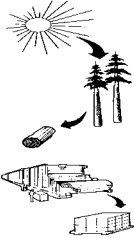 <p>The Paper Training video explains the manufacturing process.</p>	Part Number	Version (VHS Format)
	5961-0711	National standard television committee (NTSC) version (U.S.)
	5961-0712	European television standard: PAL version (Europe, Asia)

6

Toner cartridge information

Overview

This chapter provides information on toner cartridges and their use. Hewlett-Packard recommends using HP toner cartridges, which are designed specifically to enhance the output from the HP LaserJet family of printers.

Cartridge weights and page counts

Cartridge weights and page counts

HP LaserJet printer	Product	Full weight	Empty weight	Page count at 5% coverage
LJ 2100	C4096A	1130 gm (39.86 oz)	925 gm (32.63 oz)	5,000
LJ 4050 and LJ 4000 series	C4127A	1295 gm (45.7 oz)	1020 gm (36 oz)	6,000
LJ 4050 and LJ 4000 series	C4127X	1445 gm (51 oz)	1000 gm (35.3 oz)	10,000
LJ 5000 series	C4129X	1880 gm (66.3 oz)	1450 gm (51.1 oz)	10,000
LJ 8000 series	C3909A	3000 gm (106 oz)	2200 gm (80.5 oz)	15,000
LJ Mopier 240	C3909S	3000 gm (106 oz)	2200 gm (80.5 oz)	15,000
LJ 3100	C3906A	730 gm (26.1 oz)	640 gm (22.7 oz)	2,500
LJ 8100 series	C4182X	3200 gm (112.9 oz)	2200 gm (80.5 oz.)	20,000
LJ 1100 series	C4092A	702 gm (24.8 oz)	594 gm (20.9 oz)	2,500

Potential toner cartridge issues

Banding

When printing with a laser printer, the toner is applied across the page in horizontal strips. The page is moved through the printer and toner is continually applied. When printing text or black image pages, a large amount of toner is deposited on the page. As the amount of toner deposited on the page decreases, slight speed variations become more apparent. As the resolution (dots per inch) and the speed (pages per minute) increase, a variation in pattern intensity may appear on the page as lines or bands.

The bands are more visible in certain grayscale patterns. High speed printers that are capable of printing high resolution grayscale patterns are more likely to display the pattern variations. Changing the grayscale pattern or reducing the resolution may significantly reduce the amount of banding that occurs.

Character voids

Small gaps or voids may appear in some of the characters when printing on media other than standard photocopier paper. These “character voids” occur because some print media does not accept the transfer of toner as well as others.

To minimize the occurrence of character voids, avoid media with a rough finish. Use media that is within the Hewlett-Packard paper specifications listed in the user guide or the *HP LaserJet Family Paper Specification Guide*. If the finish is too rough, the surface will have large inconsistencies. If the finish is too smooth, toner will not adhere well. Adjusting the print density may affect the severity of character voids.

Toner cracking

When the paper is folded and the crease aligns with a line of text, it is possible with certain types of paper for the text to break along the line, giving the appearance of a white line through the text. Papers that do not meet the smoothness (100-250 Sheffield, 100-500 Bendtsen) or wax pick (>11 *Dennison*) are likely to exhibit this effect more than others.

Toner in the HP LaserJet printers is composed of minute particles of pigmented plastic material (styrene) and iron oxide. When the toner is subjected to the fusing temperature, these individual iron-impregnated plastic particles become part of a larger plastic image on the page. When the printed page is subsequently folded, the plastic image must also give, in some fashion, to accommodate the fold. If the print image has been well-set into the paper, this resulting break in the plastic will not be apparent. However, if the toner is unable to adequately penetrate the paper fibers or if, in the process of folding the paper, the paper fibers behind the toner break away from the page itself, the result will be a “white line” through the image. There are several ways to minimize this effect:

- Ensure that the paper being used meets all of the specifications provided in the *HP LaserJet Printer Family Paper Specification Guide*; in particular the smoothness and wax pick.
- A lighter density setting will ensure that the toner image will be composed of less plastic material, thus minimizing the resulting effect of trying to fold the toner image.
- For the reasons listed earlier, a more narrow character-stroke width might also help.
- Magnetic Ink Character Recognition (MICR) paper may fix toner cracking problems (see also the *HP MICR User's Guide*).

In photocopier (laser) printing, using paper that has a laid finish often causes problems. The surface roughness of the paper is often responsible for the problems.

Paper that is stiffer than photocopier paper also causes problems. Stiff papers do not fold well. Problems increase when stiff paper is folded and a toner image is applied to the paper's surface.

Transfer of toner image (Post-image transfer)

After printing a document on an HP LaserJet printer, folding it, and sending it through the mail, you might observe that a portion of the print image was transferred to opposing surfaces of the folded document.

The laser printing process uses a pigmented plastic powder (toner) to form a print image that is first transferred to a sheet of paper (or other print medium) and then melted (fused) onto the surface of the paper to form a permanent image. Though paper is usually thought of as being “soft,” it is actually quite abrasive. When the printed page is folded, movement under pressure between a paper surface and the toner image may cause the paper to abrade (scratch) the toner, causing a transfer of the toner material onto the opposing surface of the paper. This can be demonstrated by rubbing a print image against (or into) a clean sheet of paper.

Some machinery, such as that used by the U.S. Postal Service to sort mail, can apply the necessary pressure and agitation to cause this toner image transfer phenomenon.

To minimize this effect:

- Minimize the amount (or height) of toner used to produce the print image.
- Use a paper that is less abrasive.
- Ensure optimal fusing of the toner (print) image to the paper.

The **amount** of toner used to produce a print image is controlled by the print density dial, slide, or control panel settings in the HP LaserJet printers. The print density should be adjusted for a **lighter** image to reduce the amount (height) of toner prone to abrasive transfer.

HP LaserJet printers have been designed for optimum results with photocopier (laser) bond papers, such as HP paper. The properties of this type of paper (for example, surface roughness, composition, moisture content) are such that the other causes of potential toner transfer are minimized. Photocopy papers are typically less abrasive than other types of paper (such as writing bond) and are also formulated to ensure optimal fusing of the toner image. Using other types of paper will generally yield less than optimal results in laser

printers. For help in selecting paper suitable for use in the HP LaserJet printers, refer to the *HP LaserJet Printer Family Paper Specification Guide*. This guide can be ordered by calling HP Parts Direct at (800) 227-8164 in the U.S., or HP Distribution at (970) 339-7009.

Because of the way that laser printing is accomplished, currently there is no way to entirely eliminate the possibility of toner transfer. However, using these techniques should yield more satisfactory results and will often reduce the problem to imperceptible levels.

Gray background on envelopes

Poor print quality is normally the result of using envelopes that are of the incorrect weight or finish. The paper used to construct the envelope may be embossed; or may be too heavy, too rough or too slick; or may be made in such a way that it is incompatible with the high temperatures encountered in toner fusing. The result is that the toner does not adhere well to the surface. Also, on heavier envelopes, a gray background may appear on the front (or print side) of the envelope. To reduce the gray background, the print density may need to be set to a darker setting.

HP PLANET PARTNERS

The U. S., Canada, Europe, and Australia now have HP toner cartridge recycling programs. The used toner cartridge should be placed in the wrapper and box that held the new cartridge and sent back for recycling.

U.S.	A brochure explaining the recycling program in the U.S., part number 5091-1325EUS, can be ordered. The customer returns used toner cartridges via UPS at no cost to the customer using shipping labels included in the brochure. The toner cartridges can be shipped one at a time or in volume shipments. Some of the parts are recycled to make new cartridges. Other parts are melted for re-use as raw materials. If the customer has any questions, and to receive the free recycling brochure, refer them to the Customer Information Center at (800) 752-0900.
AUSTRALIA	Australian customers can send their toner cartridges to their local HP dealer. If more than 30 cartridges a month are used, contact the local dealer for instructions on how to have the cartridges picked up directly from the customer's site. For further information, contact the dealer or local HP sales office.
EUROPE	The recycling program in Europe currently includes these countries: Germany, Switzerland, Austria, United Kingdom, the Netherlands, and Sweden. If more than 30 cartridges a month are used, contact the local dealer for instructions on how to have the cartridges picked up directly from the customer's site. For further information, contact the dealer or local HP sales office.
CANADA	<p>Canada uses Federal Express for their recycling program. At least eight but no more than 40 Toner Cartridges can be shipped at one time. Shipments of less than eight cartridges are at the shipper's expense. Call Federal Express at (800) GoFedEx; (800) 463-3339 to arrange for free pickup of the bundled cartridges. Fill out a Federal Express Waybill or obtain a preprinted one from your dealer.</p> <p>In Alberta, B.C., Manitoba, NWT, Saskatchewan, and the Yukon, send the bundles to: Hewlett-Packard Toner Cartridge Recycling Program 6551 Westminister Hwy, Unit 160 Richmond, B.C. V7C 4V4 Acct. No.: 1246-1740-5</p> <p>In the Atlantic provinces, Ontario, and Quebec send the bundles to: Hewlett-Packard Toner Cartridge Recycling Program 6600 Goreway Drive, Unit C Mississauga, Ontario L4V 1S6 Acct. No.: 1246-1740-5</p> <p>For more information, call: Canada wide: (800) 387-3867 Dept. 129; Toronto: (800) 678-9430 Ext. 4981</p>

Note

Recycling information is included in the toner cartridge package.

For additional information about HP corporate-wide, environmental policies, practices, and awards, visit www.hp.com.

Refill toner cartridge statement

Hewlett-Packard toner cartridges have been designed to maximize the reliability of the HP LaserJet printer by including all of the components that need frequent replacement or adjustment within the cartridge. While we recognize that all parts of this critical printer mechanism will not wear consistently, the HP toner cartridge has been designed to optimize the exceptional print quality that is synonymous with the HP LaserJet printer name. While Hewlett-Packard does not prohibit the use of refilled toner cartridges during the warranty period or under a maintenance contract, we also do not recommend their use for the following reasons:

- 1 The HP LaserJet toner cartridge is not designed to be refilled or remanufactured.
- 2 Hewlett-Packard has no control or process to ensure that a refilled toner cartridge will function at the high level of reliability of a new HP LaserJet toner cartridge. Hewlett-Packard also cannot predict what the long-term effect on the printer's reliability could be from using different toner formulations found in refilled cartridges. Because the HP LaserJet printer has the highest reliability reputation in the industry, we are concerned about any usage that might affect this reputation.
- 3 Hewlett-Packard has no control over the actual print quality of a refilled toner cartridge. The print quality of the HP LaserJet toner cartridge directly influences the customer's perception of the HP LaserJet printer itself. The high print quality of the HP LaserJet printer is one of the primary reasons for the success of the product and we are keenly interested in maintaining that image.

The entire family of HP LaserJet printers is covered under a standard one-year warranty from the date of purchase. Hewlett-Packard offers optional maintenance contracts after the one-year warranty expires. The use of refilled toner cartridges alone does not affect either the warranty or any maintenance contract purchased from HP. **However, if an HP LaserJet printer failure or damage is found to be directly attributed to the use of a refilled toner cartridge, the repair will not**

be covered under the warranty or by the maintenance contract.

Rather, standard time and material charges will be applied to service the printer for that particular failure or damage.

Hewlett-Packard is constantly striving to provide the highest quality printer products possible. The HP LaserJet printer family was designed for optimum output performance when the printing mechanism is periodically replaced with a new HP toner cartridge. The HP toner cartridge is designed specifically to enhance the output from the HP family of printers. We know that the highest quality print results will be obtained when new HP toner cartridges are used with HP LaserJet printers.

7

Printer options and replaceable parts

Overview

The following tables list the products, product numbers, product descriptions, and service part numbers for each printer. Parts can be ordered through HP Parts Direct Ordering at (800) 227-8164 (U.S. only). For additional product support, see the inside back cover of this guide.

Printer options and replaceable parts

Product	Product number	Product description	Service part number
Memory	C4135A	4 MB EDO DIMM	C4135-67901
	C4136A	8 MB EDO DIMM	C4136-67901
	C4137A	16 MB EDO DIMM	C4137-67901
	C4140A	4 MB SDRAM DIMM	C4140-67901
	C4141A	8 MB SDRAM DIMM	C4141-67901
	C4142A	16 MB SDRAM DIMM	C4142-67901
	C4143A	32 MB SDRAM DIMM	C4143-67901
	C3913A	64 MB SDRAM DIMM	C3913-67901
	C4286A	2 MB Flash DIMM	N/A
	C4287A	4 MB Flash DIMM	N/A
	C3098	PostScript DIMM	C3098-60001
Fonts	C4292A	Traditional Chinese Font DIMM (8 MB Asian ROM)	N/A
	C4293A	Simplified Chinese Font DIMM (8 MB Asian ROM)	N/A
	D4838A	Korean (8 MB Asian ROM)	N/A
Enhanced I/O cards	J3110A	Ethernet RJ-45 only	N/A
	J3111A	Ethernet RJ-45 and BNC, LocalTalk	J3111-61003
	J3112A	Token Ring RJ-45 and DB-9	N/A
	J3113A	10/100Base-TX networks	N/A
Hard disk	C2985A	Hard disk	N/A

2100	4050 and 4000	5000	8000	3100	8100	1100
•	•	•	•		•	•
•	•	•	•		•	•
•	•	•	•		•	•
	•	•	•		•	
	•	•	•		•	
	•	•	•		•	
	•	•	•		•	
	•	•	•		•	
	•	•	•		•	
•						
	•	•	•		•	
	•	•	•		•	
	•	•	•		•*	
•	•	•	•		•	
•	•	•	•		•	
•	•	•	•		•	
•	•	•	•		•	
	•	•	•		•	

*Available only in Korea

Product	Product number	Product description	Service part number
Parallel cables	C2950A	Parallel IEEE-1284 compliant A to B (2.0 m)	N/A
	C2951A	Parallel IEEE-1284 compliant A to B (3.0 m)	N/A
	C2946A	Parallel IEEE-1284 compliant A to C (3.0 m)	N/A
	C2947A	Parallel IEEE-1284 compliant A to C (10.0 m)	N/A
Serial cables	C2932A	9-9 pin serial cable (male/female)	N/A
	C2933A	9-25 pin serial cable (male/female)	N/A
	C2809A	25-9 pin serial adaptor (male/female)	N/A
	92215S	Macintosh computer serial cable	N/A
	92215N	Macintosh network cable kit	N/A
Trays	C4781A	2,000-sheet input tray and paper feeder	N/A
	C4124A	500-sheet paper feeder and tray	N/A
	C4125A	500-sheet universal replacement tray	C4125-67901
	C3122A	Standard 500-sheet tray	N/A
	C4115A	500-sheet paper feeder and tray	N/A
	C4117A	500-sheet replacement tray	C4117-69001

Note

Trays are continued on the following page.

2100	4050 and 4000	5000	8000	3100	8100	1100
•	•	•				
•	•	•				
			•	•	•	•
			•	•	•	•
	•	•				
	•	•				
	•	•				
	•	•				
	•	•				
			•		•	
	•					
	•					
	•					
		•				
		•	•			

Product	Product number	Product description	Service part number
Trays, continued	C4780A	Two 500-sheet trays and paper feeder	N/A
	C4114A	250-sheet paper feeder and tray	N/A
	C4126A	250-sheet universal replacement tray	C4126-67901
	C4116A	250-sheet replacement tray	C4116-69001
		250-sheet cassette (trays 2 and 3)	RG5-4137-000CN
	C4793A	Tray 3	N/A
	C4098A	Tray 2 (500-sheet input tray) or Tray 4 (2 x 500-sheet input tray)	RG5-3951-000CN
	C4099A	Tray 3 (500-sheet input tray) or Tray 5 (2 x 500-sheet input tray)	RG5-3952-000CN
Envelope feeder	C4122A	Envelope feeder	C4122-69001
	C3765B	Envelope feeder	
Duplexer	C4123A	Duplex printing accessory	C4123-69001
	C4113A	Duplex printing accessory	C4113-69001
	C4782A	Duplex printing accessory	C4782-69501
Mailbox	C4783A	7-bin tabletop mailbox	
	C4785B	8-bin multibin mailbox	
	C4787A	5-bin mailbox with stapler	C4787-69502
Media	HPM1120	HP multi-purpose paper (letter-size)	M1120
	HPJ1124	HP LaserJet paper (letter-size)	J1124

2100	4050 and 4000	5000	8000	3100	8100	1100
			•		•	
		•				
	•					
•		•				
•						
			•			
			•			
	•					
			•		•	
	•					
		•				
			•		•	
			•		•	
			•		•	
•	•	•	•	•	•	•
•	•	•	•	•	•	•

Product	Product number	Product description	Service part number
Toner cartridges	C4127A	Toner cartridge (6,000 pages)	N/A
	C4127X	Toner cartridge (10,000 pages)	N/A
	C4129X	Toner cartridge (10,000 pages)	N/A
	C3906A	Toner cartridge (2,500 pages)	N/A
	C3909A	Toner cartridge (15,000 pages)	N/A
	C3909S	3 toner cartridges (15,000 pages) (LJ Mopier 240)	N/A
	C4092A	Toner cartridge (2,500 pages)	N/A
	C4182X	Toner cartridge (20,000 pages)	N/A
	C4096A	Toner Cartridge (5,000 pages)	N/A
Power box	C4789A	Connects a multibin mailbox to the printer when the printer is on a printer stand.	N/A
Infrared receiver	C4103A	Fast infrared receiver	C4103-67901

2100	4050	4000	5000	8000	3100	8100	1100
	•	•					
	•	•					
			•				
				•	•		
							•
•						•	
				•		•	
	•			•		•	

Product	Product description	Service part number	Exchange number
Maintenance kit	Preventative maintenance kit with 110 V fuser (4000, 4050 series)	C4118-67902	C4118-69001*
	Preventative maintenance kit with 220 V fuser (4000, 4050 series)	C4118-67903	C4118-69002*
	Preventative maintenance kit with 110 V fuser (5000 series)	C4110-67901	C4110-69006*
	Service maintenance kit with 220 V fuser (5000 series)	C4110-67902	C4110-69007*
	Preventative maintenance kit with 110 V fuser (8000 series)	C3971B	C3971-69002*
	Preventative maintenance kit with 220 V fuser (8000 series)	C3972B	C3972-69002*
	Preventative maintenance kit with 110 V fuser (8100 series)	C3914A	C3914-69001
	Preventative maintenance kit with 220 V fuser (8100 series)	C3915A	C3915-69001*

*Requires exchange

2100	4050 and 4000	5000	8000	3100	8100	1100
	•					
	•					
		•				
		•				
			•			
			•			
					•	
					•	

8




Printer parts

Overview

This chapter provides the part numbers and descriptions of the most commonly used assemblies and subassemblies in the HP LaserJet printers. The shaded numbers in the tables refer to the location of the part in the printer, as shown in the corresponding illustrations.

Note

See your printer service manual for a complete listing of hardware components.



6 mm



8 mm



10 mm



12 mm




M 3



M 4



14 mm



16 mm



25 mm



Common Hardware

Common Hardware

Common hardware


	Part number	Product description	
1	XB1-2300-606CN	M3 x 5mm	Pan-head phillips
1	XB1-2300-507CN	M3 x 5mm	Pan-head phillips
1	XB1-2300-607CN	BH3 x 6mm	Pan-head phillips
1	0515-1895	M3 x 8mm	Pan-head phillips
1	XB1-2301-407CN	M4 x 14mm	Pan-head phillips
1	XB1-2400-606CN	M4 x 6mm	Pan-head phillips
1	XB1-2400-809CN	M4 x 8mm	Pan-head phillips
1	0515-1912	M4 x 8mm	Pan-head phillips
1	XB1-1300-807CN	M3 x 8 mm	Pan-head phillips
2	FA9-1449-000CN	M3 x 6mm	Washer-head phillips
2	XA9-0267-000CN	M3 x 6mm	Washer-head phillips
2	XA9-0253-000CN	M3 x 8mm	Washer-head phillips
2	XA9-0542-000CN	M3 x 10mm	Washer-head phillips
2	XA9-0540-000CN	M4 x 8mm	Washer-head phillips
3	XA9-0653-000CN	M3 x 6mm	Star-washer phillips
3	XA9-0653-000CN	M3 x 6mm	Star-washer phillips
3	XA9-0389-000CN	M3 x 8mm	Star-washer phillips
3	XA9-0654-000CN	M3 x 10mm	Star-washer phillips
3	XA9-0192-000CN	M4 x 6mm	Star-washer phillips
3	XA9-0828-000CN	M3 x 6mm	Star-washer phillips
4	RBI-5552-000CN	M3	Shoulder screw phillips
4	RAI-7636-000CN	M3	Shoulder screw phillips
4	RBI-5489-000CN	M3 x 4mm	Shoulder screw phillips
4	XA9-0342-000CN	M3 x 8mm	Shoulder screw phillips
5	XB4-7300-609CN	M3 x 6mm	Self-tapping phillips
5	XB6-7300-607CN	M3 x 6mm	Self-tapping phillips
5	XB4-7400-809CN	M4 x 8mm	Self-tapping phillips
5	XA9- 0870-000CN	M4 x 10mm	Self-tapping phillips (black)
5	XB4-7401-009CN	M4 x 10mm	Self-tapping phillips
5	XB4-7401-007CN	M4 x 10mm	Self-tapping phillips
5	XB4-7401-209CN	M4 x 12mm	Self-tapping phillips
5	XA9-0773-000CN	M4 x 12mm	Self-tapping phillips
5	XA9-0916-000CN	M4 x 14mm	Self-tapping phillips
6	XA9-0253-000CN	M3 x 8mm	Loose flat/lock washer phillips
6	XA9-0584-000CN	M3 x 12mm	Loose flat/lock washer phillips

Common hardware (continued)

	Part Number	Product Description	
7	FA9-1449-000CN		Star-washer trus-head phillips
7	XB1-2302-507CN	M3 x 25mm	Trus-head phillips
7	XB6-7300-809CN	M3 x 8mm	Trus-head phillips
7	XA9-0326-000CN	M3 x 4mm	Trus-head phillips
7	XB6-7300-807CN	M3 x 8mm	Trus-head phillips
8	XD2-1100-242CN	2.4mm	Retaining ring (e-type)
8	XD2-1100-322CN	3.2mm	Retaining ring (e-type)
8	XD2-1100-402CN	4.0mm	Retaining ring (e-type)
8	XD2-1100-502CN	5.0mm	Retaining ring (e-type)
8	XD2-1100-642CN	6.4mm	Retaining ring (e-type)
8	XG9-0260-000CN		Retaining ring (e-type)
8	XD2-2300-507CN	5.0mm	Grip ring (c-type)
9	XA9-0375-000CN	3m x 25 mm	Loose flat/star washer phillips
10	XA9-0686-000CN	M3 x 6mm	Hexhead screw
10	XA9-0724-000CN	M3 x 8 mm	Hexhead screw
10	XA9-0824-000CN	M3 x 10mm	Hexhead screw
10	XA9-0813-000CN	M3 x 8mm	Hexhead screw with washer

Notes

Parts for the HP LaserJet 2100 series

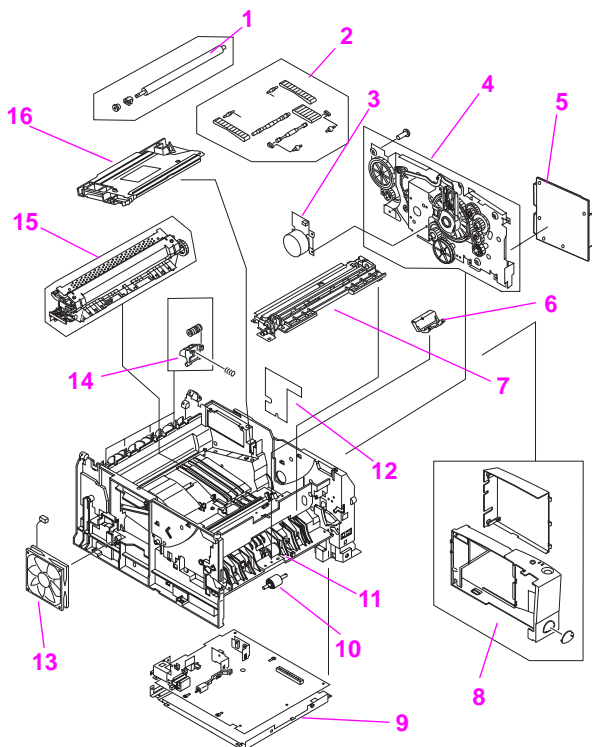


Major assembly locations (2100 series)

HP LaserJet 2100 assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	Transfer roller assembly	RG5-4130-000CN
2	Roller kit Belt kit	RY7-5052-000CN RY7-5053-000CN
3	Motor, DC5-76W	RH7-1381-000CN
4	Printer drive assembly	RG5-4131-000CN
5	Formatter PCA	C4132-60001
6	Separation pad	RB2-2835-000Cn
7	Registration assembly	RG5-4129-000CN
8	DIMM cover assembly	RG5-4123-000CN
9	Pickup roller	RB2-2900-0000CN
10	Paper pickup roller	RB2-2891-000CN
11	Engine controller assembly (220 V) Engine controller assembly (110 V)	RG5-4150-020CN RG5-4125-020CN
12	Intermediate PCB assembly	RG5-4250-000CN
13	Fan	RH7-1382-000CN
14	Face-down delivery roller assembly	RG5-4119-000CN
15	Fusing assembly (110 V) Fusing assembly (220 V)	RG5-4132-000CN RG5-4133-000CN
16	Laser scanner assembly	RG5-4172-000CN
	Universal paper cassette--trays 2 and 3 (not shown)	R98-1003-000CN

*These parts require exchange.

Parts for the HP LaserJet 4050 and 4000 series

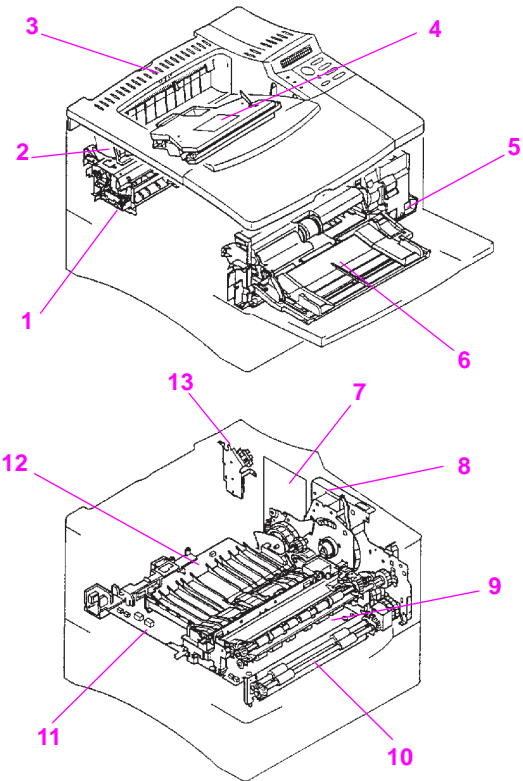



Major assembly locations (4050 and 4000 series)

HP LaserJet 4050 and 4000 assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	Fusing assembly	C4118-69003 (110 V)* C4118-69004 (220 V)*
2	Paper delivery assembly	RG5-2648-000CN
No Call out #	Paper pickup drive assembly (500-sheet)	RG5-2672-000CN
	Upper paper pickup drive assembly (2 x 250)	RG5-2683-000CN
	Lower paper pickup drive assembly (2 x 250)	RG5-2684-000CN
	Feed/separation roller	RG5-2490-000CN
3	Top cover assembly	RG5-2663-000CN
	Front panel	RG5-2666-000CN
4	Laser scanner assembly	C4118-69005*
5	Tray 1 pickup assembly	RG5-2655-000CN
	Tray 1 pickup roller	RG5-3718-000CN
6	Tray 1 assembly	RG5-2656-000CN
7	Formatter assembly (LJ 4050) Formatter assembly (LJ 4000)	C4251-69001* C4118-69008*
8	Printer drive assembly	RG5-2653-000CN
	Release rod	RB1-8756-000CN
	Main motor	RH7-1331-000CN
9	Registration assembly	RG5-2652-000CN
10	Paper feed assembly	RG5-2651-000CN
11	Engine controller board (ECU)	C4118-69006 (110 V)* C4118-69007 (220 V)*
12	Paper feed guide assembly	RG5-2643-000CN
	Paper feed belt	RB1-8668-000CN
	Transfer roller	RG5-4283-000CN
13	Delivery drive assembly	RG5-3721-000CN

*These parts require exchange

Parts for the HP LaserJet 5000 series

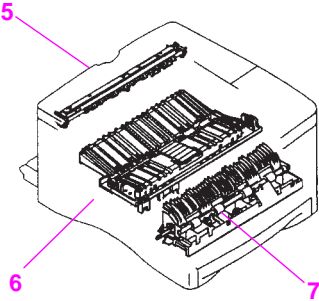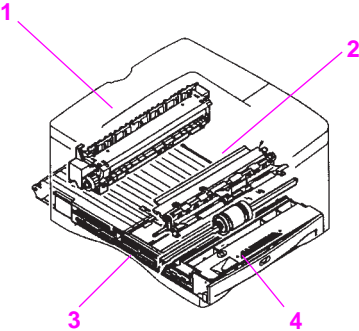


Major assembly locations (5000 series, 1 of 2)

HP LaserJet 5000 assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	Fusing assembly	C4110-69002 (110 V)* C4110-69003 (220 V)*
2	Registration assembly	RG5-3524-000CN
3	Paper pickup assembly (Tray 2)	RG5-3521-000CN
	Pickup roller (Tray 1)	RB2-1820-000CN
4	Paper tray	C4116-69001 (250-sheet)* C4117-69001 (500-sheet)*
5	Upper delivery assembly	RG5-3542-000CN
6	Paper feed belt assembly	RG5-3526-000CN
	Transfer roller	RG5-3579-000CN
7	Paper feed assembly	RG5-3522-000CN

*These parts require exchange

Parts for the HP LaserJet 5000 series

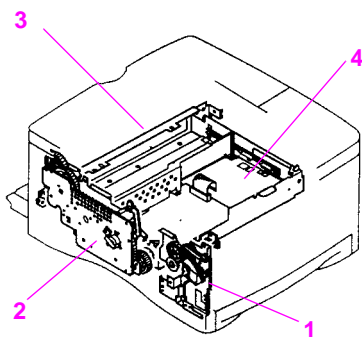


Major assembly locations (5000 series, 2 of 2)

HP LaserJet 5000 assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	Pickup drive assembly	RG5-3544-000CN
	Spring	RS5-2434-000CN
2	Main gear assembly	RG5-3543-000CN
	Main motor	RH7-1356-000CN
3	DC controller	C4110-69001*
4	Formatter	C3974-69001*
	Laser scanner assembly	C4110-69008*
	DC power supply	C4110-69004 (110 V)* C4110-69005 (220 V)*
	Top cover	RB2-1748-000CN
	Control panel assembly	RG5-3604-000CN
	Fan	RH7-1354-000CN
	Toner cartridge engagement arm	RB2-1856-000CN
	Tray 2 separation pad with spring	RG5-3585-000CN
	Paper-handling PCA	RG5-3560-000CN
	Tray 1 separation pad	RF5-2400-000CN
	Control panel display cover	RB2-1758-000CN

*These parts require exchange

Parts for HP LaserJet 8000 series

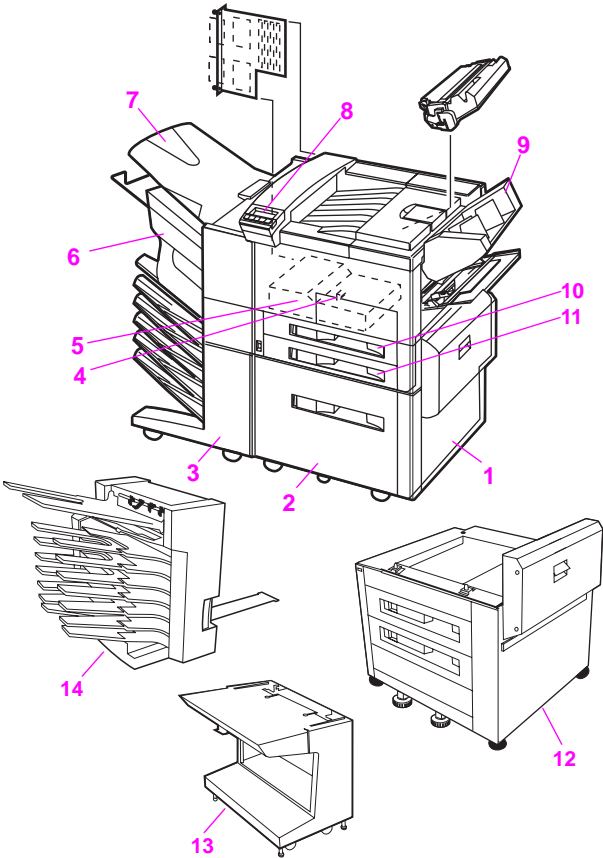


Major assembly locations (8000 series, 1 of 4)

HP LaserJet 8000 series assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	2000-sheet input unit assembly	C4781A
2	Tray 4 assembly	RG5-2155-000CN
3	Multi-bin mailbox	C4785B
4	Duplex unit roller 1	RB1-6822-000CN
5	Duplex unit	C4782A
6	5-bin mailbox with stapler	C4787A
7	Face-up bin	RB1-6491-000CN
8	Control panel display	RG5-4384-000CN
9	Envelope feeder	C3765B
10	Tray 2	RG5-3951-000CN
11	Tray 3	RG5-3952-000CN
12	Multiple input tray (2 x 500-sheet input tray)	C4780A
13	7-bin stand	C4784A
14	7-bin tabletop mailbox	C4783A

Parts for HP LaserJet 8000 series

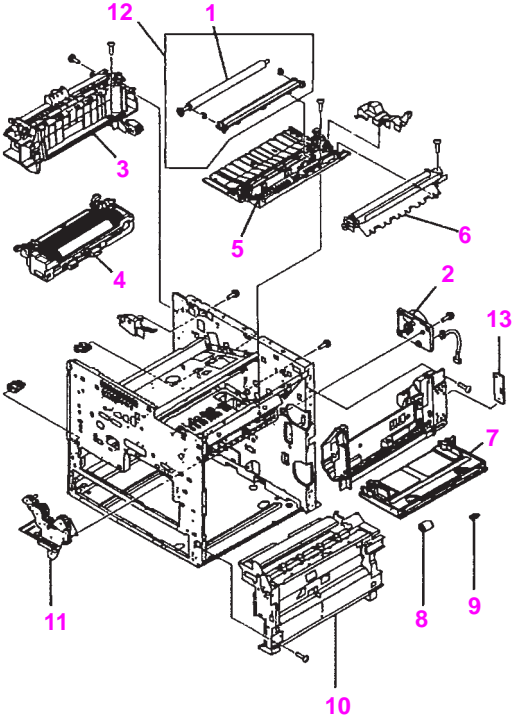


Major assembly locations (8000 series, 2 of 4)

HP LaserJet 8000 assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	Transfer roller	RF5-1412-000CN
2	Main motor	RH7-1260-000CN
3	Face-down delivery assembly	RG5-1874-000CN
4	Fusing assembly 100 V-120 V	C3166-69012*
4	Fusing assembly 220 V-240 V	C3166-69013*
5	Feeder assembly	RG5-1834-000CN
6	Registration assembly	RG5-1833-000CN
7	Tray 1 pickup assembly	RG5-1880-100CN
8	Tray 1 feed roller	RB1-6730-000CN
9	Tray 1 separation pad	RF5-1455-000CN
10	Paper input unit (PIU)	C3166-69011-000*
11	Main gear assembly	RG5-1847-000CN
12	Transfer roller assembly	RG5-1887-000CN
13	Tray 1 PCA	RG5-1884-000CN

*These parts require exchange.

Parts for HP LaserJet 8000 series

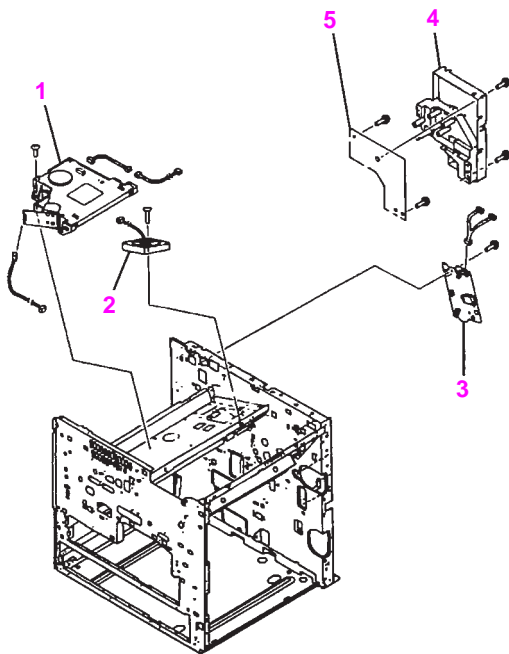


Major assembly locations (8000 series, 3 of 4)

HP LaserJet 8000 series assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	Laser scanner assembly	C3166-69006*
2	Fan 1	RH7-1266-000CN
3	Switch/sensor PCA	RG5-1846-000CN
4	High-voltage power supply	C3166-69005*
5	DC controller PCA	C3166-69010*

*These parts require exchange.

Parts for HP LaserJet 8000 series

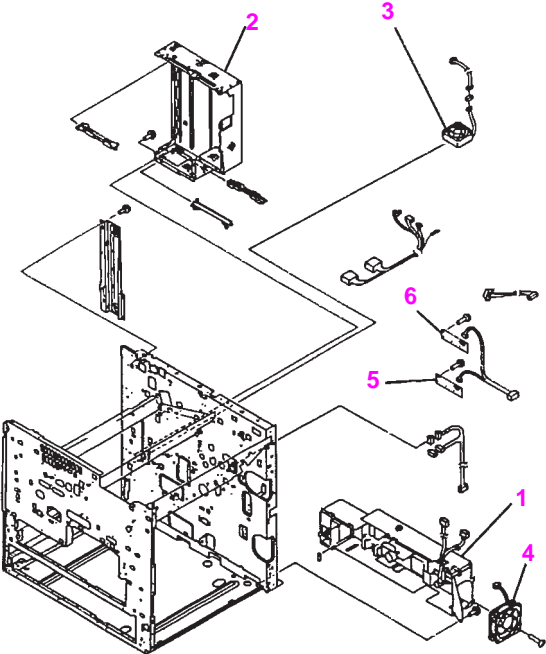


Major assembly locations (8000 series, 4 of 4)

HP LaserJet 8000 series assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	Low-voltage power supply, 110 V-220 V	C3166-69007*
1	Low-voltage power supply, universal	C3166-69008*
2	Formatter	C4186-69001*
3	Fan 3	RH7-1271-000CN
4	Fan 2	RH7-1266-000CN
5& 6	Paper size sensing PCA, trays 2 and 3	RG5-1845-000CN

*These parts require exchange.

Parts for the HP LaserJet 3100

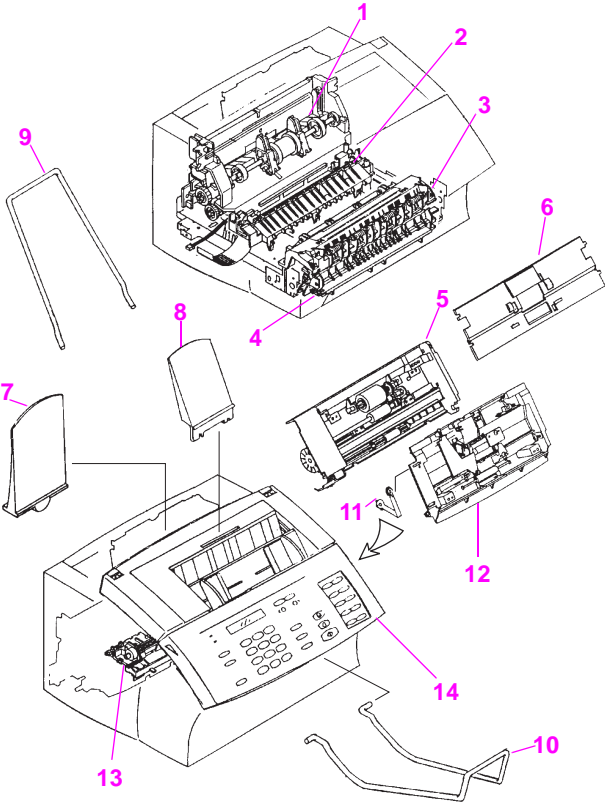


Major assembly locations (3100, 1 of 2)

HP LaserJet 3100 assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	Paper pickup assembly	RG5-3484-000CN
	Pickup roller assembly	RG5-3486-000CN
	Clutch	RB1-7197-020CN
	Separation pad kit	RY7-5008-000CN
	Input sensor assembly	RB1-7182-000CN
	Solenoid	RH7-5139-000CN
2	Transfer guide assembly	RG5-3452-000CN
	Transfer roller	RF5-1534-000CN
3	Delivery assembly	RG5-3474-020CN
4	Separation guide assembly	RG5-3475-020CN
	Lever sensor arm	RB1-7293-000CN
	Fuser exit roller assembly	RF5-2368-000CN
5	Document scanner assembly	RG5-4223-000CN
	Pickup roller assembly	RG5-4688-000CN
	Scanner motor, AC 1.08 watts	RH7-1376-000CN
	Contact image sensor assembly	RG5-4239-000CN
	Cable, contact image sensor	RG5-4233-000CN
6	Document scanner guide/cover	RB2-3436-000CN
7	Paper input support	RB2-3362-000CN*
8	Paper output support	RB2-3410-000CN*
9	Document feeder support	RB2-3455-000CN*
10	Document output support	RB2-3470-000CN*
11	Strap	RB2-3354-000CN*
12	Upper guide assembly	RG5-4221-000CN
	Separation pad kit	RY7-5055-000CN
13	Feed assembly	RG5-3485-030CN
	Feed roller	RB2-1699-000CN
14	Control panel assembly	RG5-4241-000CN

* These are customer-replaceable parts.

Parts for the HP LaserJet 3100

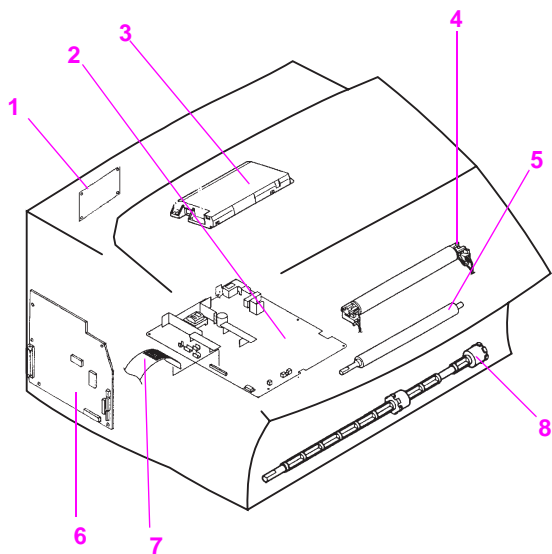


Major assembly locations (3100, 2 of 2)

HP LaserJet 3100 assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	LIU board (U.S.)	C3948-67903
	LIU board (Worldwide)	C3948-67904
2	ECU (engine controller board) 110 V	RG5-4690-000CN
	ECU 220 V	RG5-4691-000CN
3	Laser scanner assembly	RG5-3494-050CN
4	Fixing/fusing assembly 110 V	RG5-4678-000CN
	Fixing/fusing assembly 220V	RG5-4681-000CN
5	Fixing assembly pressure roller	RF5-2362-000CN
6	Formatter (without shield)	C3949-67901
7	Cable ECU to formatter	RH2-5346-000CN
8	Fuser exit roller assembly	RF5-2368-000CN
	Foot (4)	RF5-2663-000CN
	Speaker	RH6-3845-000CN
	Laser cable	RG5-2035-000CN
	Motor, D.C. 12V	RH7-1320-000CN
	RFI shield, formatter	C3948-00002

Parts for HP LaserJet 8100 series

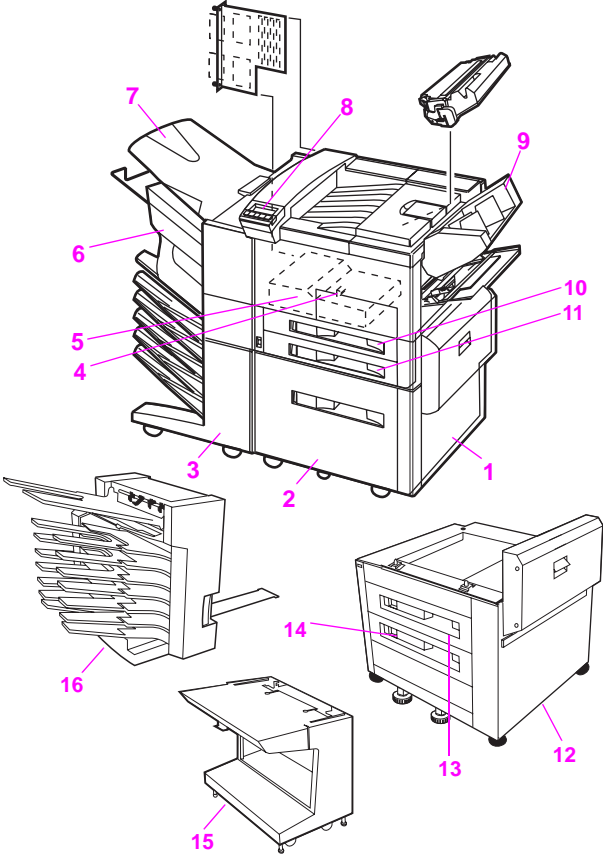


Major assembly locations (8100 series, 1 of 4)

HP LaserJet 8100 assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	2000-sheet input unit assembly	C4781A
2	Tray 4 assembly	RG5-2155-000CN
3	8-bin multi-bin mailbox	C4785A
4	Duplex unit roller 1	RB1-6822-000CN
5	Duplex unit	C4782A
6	5-bin mailbox with stapler	C4787A
7	Face-up bin	RB1-6491-000CN
8	Control panel display	RG5-4384-000CN
9	Envelope feeder	C3765B
10	Tray 2	R98-1005-000CN
11	Tray 3	R98-1004-000CN
12	Multiple input tray (2 x 500-sheet input tray)	C4780A
13	Tray 4 multiple input tray	R98-1007-000CN
14	Tray 5 multiple input tray	R98-1006-000CN
15	7-bin stand	C4784A
16	7-bin tabletop mailbox	C4783A

Parts for HP LaserJet 8100 series

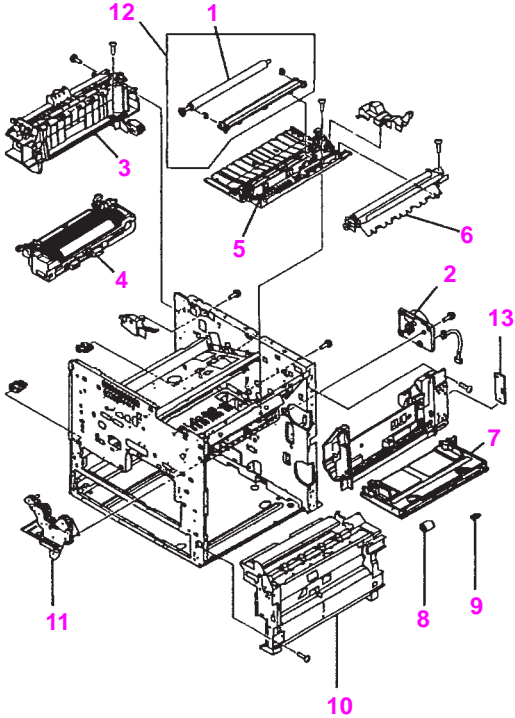


Major assembly locations (8100 series, 2 of 4)

HP LaserJet 8100 assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	Transfer roller	RF5-2675-000CN
2	Main motor	RH7-5219-000CN
3	Face-down delivery assembly	RG5-1874-000CN
4	Fusing assembly 100 V-120 V	C4214-69007*
4	Fusing assembly 220 V-240 V	C4214-69008*
5	Feeder assembly	RG5-4305-000CN
6	Registration assembly	RG5-4303-000CN
7	Tray 1 pickup assembly	RG5-4330-000CN
8	Tray 1 feed roller	RB1-9526-000CN
9	Tray 1 separation pad	RF5-2703-000CN
10	Paper input unit (PIU)	C4214-69004*
11	Main gear assembly	RG5-4365-000CN
12	Transfer roller assembly	RG5-4304-000CN
13	Tray 1 PCA	RG5-1884-000CN

*These parts require exchange.

Parts for HP LaserJet 8100 series

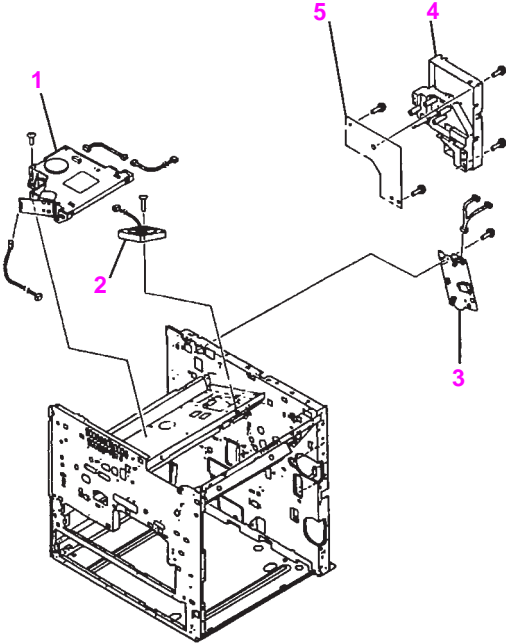


Major assembly locations (8100 series, 3 of 4)

HP LaserJet 8100 assemblies and subassemblies

	Assemblies and subassemblies	Part numbers
1	Laser scanner assembly	C4214-69003*
2	Fan 1 (laser scanner fan)	RH7-1266-000CN
3	Switch/sensor PCA	RG5-1846-000CN
4	High-voltage power supply	RG5-4306-000CN*
5	DC controller PCA	C4214-69001*

*These parts require exchange.

Parts for HP LaserJet 8100 series

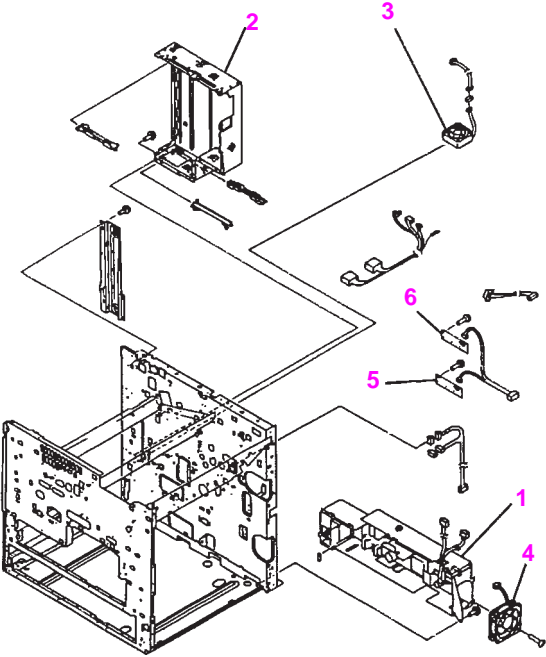


Major assembly locations (8100 series, 4 of 4)

HP LaserJet 8100 assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	Low-voltage power supply, 110 V	RG5-4300-000CN
1	Low-voltage power supply, 220 V	RG5-4301-000CN
2	Formatter	C4107-69001*
3	Fan 3 (formatter fan)	RH7-1271-000CN
4	Fan 2 (low-voltage power supply fan)	RH7-1396-000CN
5& 6	Paper size sensing PCA, trays 2 and 3	RG5-1845-000CN

*These parts require exchange.

Parts for HP LaserJet 1100 series

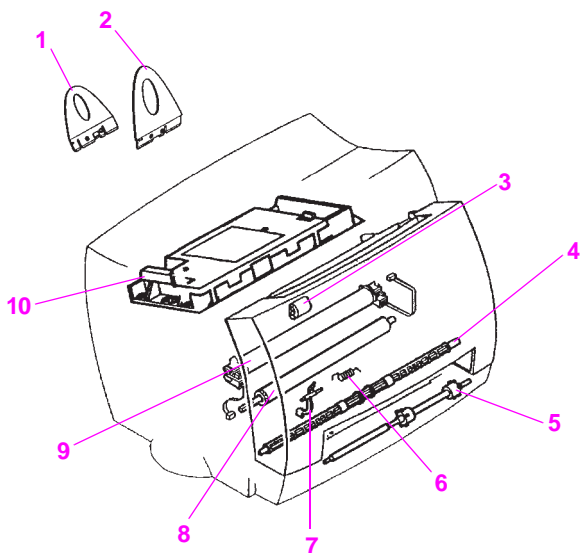


Major assembly locations (1100 series, 1 of 2)

HP LaserJet 1100 assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	Input paper support	RB2-4021-000CN*
2	Output/scanner paper support	RB2-4020-000CN*
3	Paper pickup roller	RB2-3929-000CN*
4	Face-down roller	RF5-2830-000CN
5	Face-up roller	RF5-2822-000CN
6	Torsion spring	RB2-3961-000CN
7	Sensor flag	RB2-3960-000CN
8	Pressure roller	RF5-2823-000CN
9	Fusing/fixing assembly (110 V) Fusing/fixing assembly (220 V)	RG5-4589-000CN RG5-4590-000CN
10	Laser scanner assembly	RG5-4570-000CN

*These parts are customer replaceable

Parts for HP LaserJet 1100 series

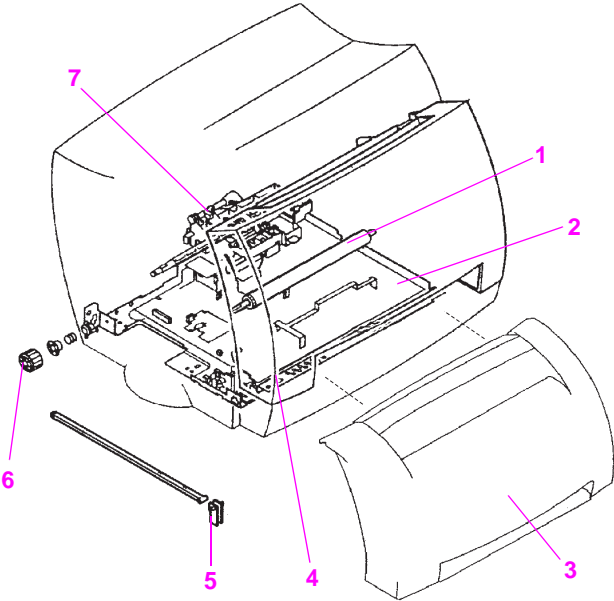

Major assembly locations (1100 series, 2 of 2)

HP LaserJet 1100 assemblies and subassemblies

Assemblies and subassemblies		Part numbers
1	Transfer roller	RG5-4594-000CN
2	Engine controller unit (ECU) (110 V) Engine controller unit (ECU) (220 V)	RG5-4595-000CN RG5-4596-000CN
3	Document scanner	R37-5000-000CN
4	Formatter	C4146-60001
5	Arm mount (2)	RB2-4034-000CN
6	Clutch kit	RY7-5051-000CN
7	Paper feed assembly	RG5-4581-000CN

9

Image quality

Overview

This chapter provides examples of image defects and a list of recommended solutions. Repetitive image defect rulers are supplied at the end of the chapter to use when measuring the approximate distances between repetitive image defects. Use the appropriate defect ruler for your product.

The engine controller unit (ECU) includes the high-voltage power supply and DC controller as one assembly for the LJ2100, LJ 3100, LJ 4050, LJ 4000, LJ 1100, and LJ 1100A products.

All other products (LJ 5000, 8000, and 8100) are separate assemblies.

Cleaning page (all printers except 2100 and 1100)

For print-quality defects, try generating a cleaning page from the printer control panel (4050, 4000, 5000, 8000, or 8100) or from the JetSuite Pro software (3100). The HP LaserJet Cleaning Utility works on all HP monochrome printers, regardless of driver type. Running the utility at regular intervals can extend the useful life of the fuser and reduce service procedures.

If your printer cannot generate a cleaning page, you can download the HP LaserJet Cleaning Utility file and obtain instructions on its usage by accessing the worldwide web at www.hp.com/cposupport/eschome.html.

Note

For the cleaning page to work properly, make sure to print the page on copier grade paper (not bond or rough paper).

Cleaning page (LJ 2100 only)

Use this process if toner specks or dots appear on printouts. This process will provide a blank page which should be discarded.

Note

For best results, use a transparency during this process. If a transparency is not available, use copier grade paper and not bond or rough paper.

To Start Engine Cleaning

- 1 Make sure the printer is turned on and in the Ready state. Load a transparency in Tray 1.
- 2 Press and hold the **Go** and **JOB CANCEL** buttons until all lights flash. This will take about 10 seconds. Release the buttons when the lights flash.
- 3 Press the **Go** button.

Note

During the engine cleaning process, the printer pulls the transparency into the printer and then stops. **This is not a jam.** The transparency will be slowly stepped through the printer to complete the engine cleaning.

- 4 Discard the blank page produced from the engine cleaning process.

Cleaning the printer paper path (LJ 1100 only)

This process uses copier grade paper to remove dust and toner from the paper path. Do not use bond or rough paper. Use this process if you are experiencing toner specs or dots on printouts. This process will produce a page with toner debris, which should be discarded.

- 1 Ensure the printer is loaded with paper.
- 2 Ensure the printer is in the Ready state.
- 3 Press and hold **Go** for 20 seconds (if the **Go** button is released before 20 seconds, the printer will perform a reset). Paper will feed through the printer.

Note

After holding **Go** for 20 seconds, each of the three printer lights will blink until the cleaning process is complete.


During the engine cleaning process, the printer pulls the paper into the printer and then stops. This is not a jam. The paper will slowly be stepped through the printer to complete the engine cleaning.

Image Defect Table

For more information, go to the page numbers provided below each image.




Background scatter
(see page 188)



Black lines
(see page 188)



Black pages
(see page 188)



Blank page
(see page 189)




Blank spots
(see page 190)




Bottom of page is blank or graphic image is cut off
(see page 190)




Character voids
(see page 190)



Dirt on back of page
(see page 191)



Distorted image
(see page 191)




Dropouts
(see page 191)




Faded print or bubbles
(see page 192)




Gray background
(see page 192)



Horizontal black lines or smears (see page 193)




Horizontal dots (see page 193)



Horizontal smudges (see page 193)



Horizontal white lines (see page 194)




Light print, dark print, faded print (see page 194)



Loose toner (see page 194)




Outgoing faxes/copies/scanned images are too light or too dark (see page 195)



Print is faded or vertically aligned white streaks are apparent (see page 195)



Random black spots (see page 195)




Repetitive defects (see page 196)




Scanned images have black dots or streaks in top and bottom margins (see page 196)




Scanned text is unclear (see page 196)



Toner smear
(see page 197)



Vertical black lines
(see page 197)



Vertical dots
(see page 198)



Vertical white
lines
(see page 198)

Image defect details

Background scatter

- The media does not meet HP specifications.
- The toner cartridge is defective.
- The inside of the printer is dirty.
- The transfer roller is dirty or worn.
- Generate a cleaning page.

Black lines

- The toner cartridge is defective.
- The toner cartridge is not seated properly.
- The fusing assembly is contaminated or damaged.
- The static eliminator teeth are contaminated or defective.
- The lens in the laser scanner is broken.

Black pages

- The high-voltage power supply connections are dirty.
- The high-voltage power supply is installed improperly. If the high-voltage power supply has been removed and replaced, it may not be seated properly.
- Check the ECU (engine controller unit) for damage.
- The toner cartridge is defective.
- Light is leaking into the printer.
 - Ensure all covers are in place.
- The DC controller PCA is defective.
- The laser scanner assembly is faulty (turning laser on continuously).
- The connectors between the laser scanner unit and the ECU or DC controller PCA are not seated properly or are defective.
- The Intermediate PCB is defective.

Blank pages

- Your software application is sending an extra page-eject command.
 - Check the software's printing configuration information.
- There is a problem with the network configuration. Some sharing devices on networks may generate a blank page as a separator.
 - Check with the network administrator.
- The printer may be feeding two or more pages at once because the paper is difficult to separate.
- The sealing tape has been left in the toner cartridge.
- The toner cartridge is empty or defective.
- The laser scanner door does not open properly.
 - Remove and reseal the toner cartridge.
 - Check the laser scanner shutter door for proper operation.
- The toner cartridge guide is damaged, improperly positioned, or missing.
- There is no transfer roller voltage.
 - Perform the Half Self-Test Functional Check to check all other electrophotographic processes.
 - Replace the transfer roller if necessary.
 - Check the ECU.
- The high-voltage connectors are mounted on the high-voltage power supply PCA and protrude into the toner cartridge cavity.
 - Check the springs for functionality. Clean if dirty; replace if defective or missing.
 - The high-voltage power supply PCA is defective.
- The DC controller PCA is defective.
- There is no developing bias.
 - Clean the high-voltage power supply contacts. With no developing bias charge, toner is not attracted to the drum.
 - Replace the ECU.

(Continued on next page.)

- There is no drum ground path.
 - Check the drum ground.
 - Replace the ECU.
- The laser scanner cable assembly is defective.
- The page length and margins are not set correctly for the paper size.

Blank spots

- The paper does not meet HP paper specifications or is stored improperly.
- The toner cartridge is defective.
- The transfer roller is dirty or defective.

Bottom of page is blank or graphic image is cut off

- The page is too complex. (There is not enough memory to process the page.)
 - Reduce the resolution through the software or printer driver. See the online help for printer driver issues.

Character voids

- Use paper that meets HP paper specifications.
 - The surface of the paper is too rough or the paper's surface is too smooth for proper toner adhesion.
 - The moisture content of the paper is too high.
 - Printing is on the wrong side of the paper.
 - The transparencies are not designed for proper toner adhesion.
 - The transfer roller is defective.
 - The laser scanner assembly is defective.

Dirt on back

- The inside of the printer is dirty (tray separation roller, feed roller, fuser, transfer roller, toner cartridge, feed belt, feed guide, or fuser entrance guide).
- The paper does not meet HP paper specifications or is stored improperly.
- The pressure roller in the fuser is contaminated.
- There is dirt on an internal roller.

Distorted image

- The paper does not meet HP paper specifications or is stored improperly.
- The printer operating environment does not meet HP specifications.
- The connection of the cables to the laser scanner is poor.
- The connection of the cables to the ECU is poor.
- The laser scanner is defective.
- The ECU is defective.
- The main motor or gear train has failed.

Dropouts

- The paper does not meet HP paper specifications.
- The printer's operating environment does not meet specifications.
- The print density is set incorrectly.
 - Change to a darker setting and retry printing.
- The fuser setting was wrong for the paper type.*
- The DC controller PCA is defective.
- The high-voltage power supply PCA is defective.
- The transfer roller is defective.
- "Draft mode" or "EconoMode" is selected in the software.

*This feature does not apply to all products.

Faded print or bubbles

- Check the ground path.
- Replace the ECU.
- The toner cartridge is empty or defective.
- The print density is set incorrectly.
 - Change to a darker setting and retry printing.
- “Draft mode” or “EconoMode” is selected in the software or printer control panel.
- The paper does not meet HP paper specifications.
- Inspect the transfer roller for proper installation and contact.
 - Replace the transfer roller if it is damaged.
- The laser scanner door is not opening properly.
 - Remove and reseal the toner cartridge.
 - Check the laser scanner door for proper operation.
- The high-voltage contact springs are dirty or defective.
- The DC controller PCA is defective.

Gray background

- The paper does not meet HP paper specifications or is stored improperly.
- The printer operating environment does not meet specifications.
- The toner density is set incorrectly.
- The toner cartridge is defective.
- The inside of the printer is dirty.
- The printer is printing on envelope seams.
 - Move the text to an area without seams.
- There is poor contact between the primary bias contact on the ECU and toner cartridge contact.

Horizontal black lines or smears

- The paper does not meet HP paper specifications or is stored improperly.
- The laser scanner assembly or ECU is defective.
- The toner cartridge is defective or it was improperly installed.
- The printer needs to be cleaned.
- The fusing assembly is dirty or defective.

3100 and 1100 series only

- Horizontal lines appear in the margins and across entire pages of faxes, copies, and scans.
 - The contact image sensor needs to be cleaned.
 - Recalibrate the scanner.
 - There is a problem in the contact image sensor.

Horizontal dots

- The transfer roller is deformed or has deteriorated.
- The static eliminator teeth are dirty.
- There is poor contact between the static eliminator and the engine controller assembly.
- There is poor contact between the transfer roller contact on the engine controller assembly and the transfer charging roller shaft contact.
- The engine controller assembly is defective.

Horizontal smudges

- The paper does not meet HP paper specifications or is stored improperly.
- The paper path is contaminated or damaged.

Horizontal white lines

- The toner cartridge could be defective or low on toner.
- The toner cartridge has been exposed to too much light.
- The fusing assembly is dirty or defective.
- The laser scanner assembly is dirty or defective.
- The ECU could be faulty.

Light print, dark print, faded print

- The toner density setting is incorrect.
- The toner cartridge is empty or defective.
- The toner cartridge requires cleaning.
- The transfer roller is defective or dirty.
- The paper does not meet HP paper specifications or is stored improperly.
- The laser scanner is defective.
- The ECU is defective.
- The high-voltage power supply is defective.
- “Draft mode” or “EconoMode” is selected in the software.

Loose toner

- The inside of the printer is dirty.
- The toner cartridge is defective.
- The paper does not meet HP paper specifications.
- The fuser setting is wrong for the paper type.
- The fusing assembly is defective or dirty.
- There is a paper jam in the fuser.

Outgoing faxes/copies/scanned images are too light or too dark

3100 and 1100 series only

- Recalibrate the scanner.
- The contrast is not set correctly.
- The original image is very light or very dark.
- The scanned image is too light or too dark because the original was on a colored paper.

Print is faded or vertically aligned white steaks are apparent

- The toner cartridge is empty or defective.
- The paper you are using does not meet HP paper specifications.
- The toner density setting is not adjusted correctly.
- The laser scanner is damaged or defective.

3100 and 1100 series only

- The contact image sensor needs to be cleaned.
- The document scanner needs to be recalibrated.
- The contact image sensor is damaged.

Random black spots

- The paper you are using does not meet HP paper specifications.
- You are printing on the wrong side of the paper.
- The printer requires cleaning with a cleaning page.
- The toner cartridge is damaged or defective.

Repetitive defects

- Use the repetitive defect ruler to determine the defective component.
- The gears are worn, causing slippage or jumping.
- The paper does not meet HP paper specifications.

Scanned images have black dots or streaks in top and bottom margins

3100 and 1100 series only

- There is ink, glue, white-out, or some other substance on the contact image sensor.
 - Recalibrate the document scanner.
- There is a problem in the contact image sensor.
 - Replace the contact image sensor.

Scanned text is unclear

3100 and 1100 series only

- The contrast, resolution, or brightness needs to be adjusted before scanning.
- The original is on colored paper.
- There is a problem in the contact image sensor.
 - Replace the contact image sensor.

Toner smear

- There is contamination on the paper.
- The fusing roller assembly is dirty.
- The paper does not meet HP specifications.
- The toner cartridge is defective.
- The toner cartridge needs cleaning.
- The fuser setting was wrong for the paper type.*
- The fusing assembly is defective.
- The inside of the printer is dirty.
- The static eliminator teeth are contaminated or defective.
- The DC controller PCA is defective.
- A fuser wrap jam is causing poor fusing.*

*This feature does not apply to all products.

Vertical black lines

- The toner cartridge is dirty, defective, or not seated properly.
- The fuser assembly is dirty or defective.
- Use the repetitive defect ruler to determine the defective component.
- The printer needs to be cleaned.

3100 and 1100 series only

- There is ink, glue, white-out, or some other substance on the contact image sensor.
- Slick paper could be the problem; use a carrier sheet to send the item.
- Recalibrate the product.


Vertical dots

- The static eliminator teeth are dirty.
- There is poor contact between the static eliminator and the ECU.
- The transfer roller is dirty or defective.
- The ECU is defective.

Vertical white lines


- The toner cartridge is empty or defective.
- The fuser is defective or dirty.
- The laser scanner assembly is defective or dirty.

LJ 2100 series repetitive defect ruler

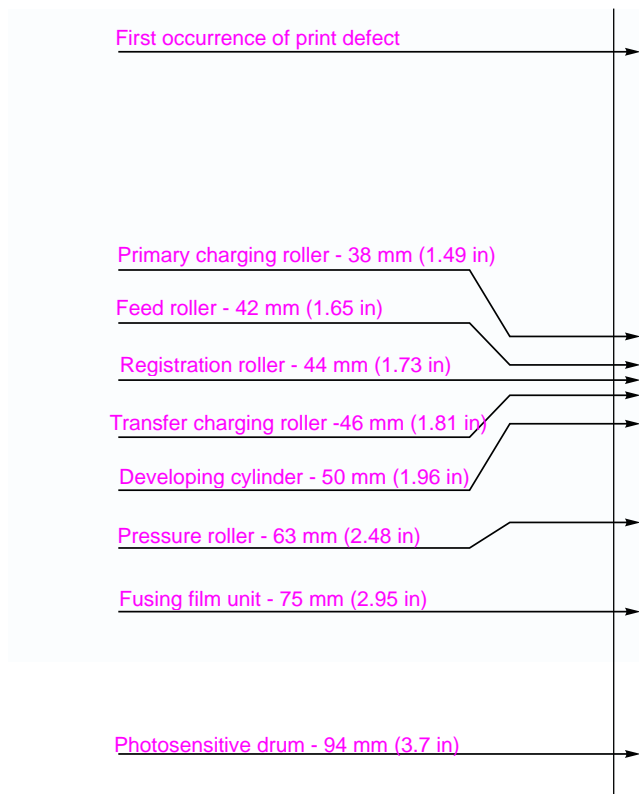


Notes

LJ 4050 and LJ 4000 series repetitive defect ruler

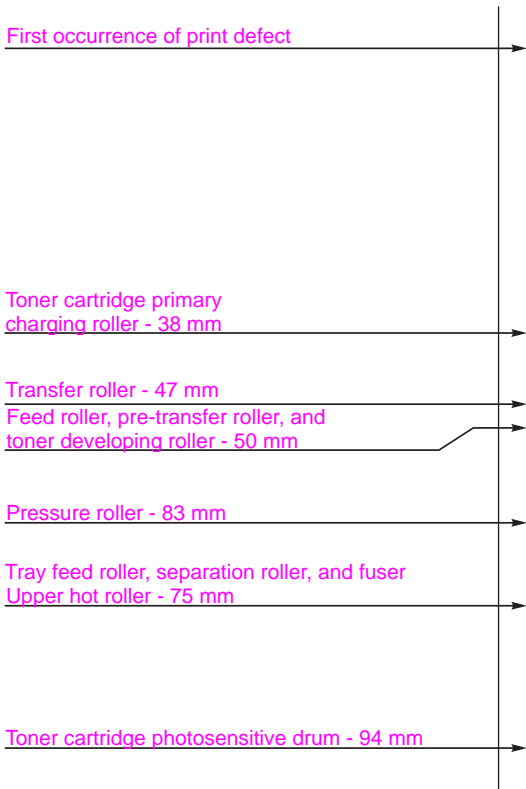


Notes

LJ 5000 series repetitive defect ruler

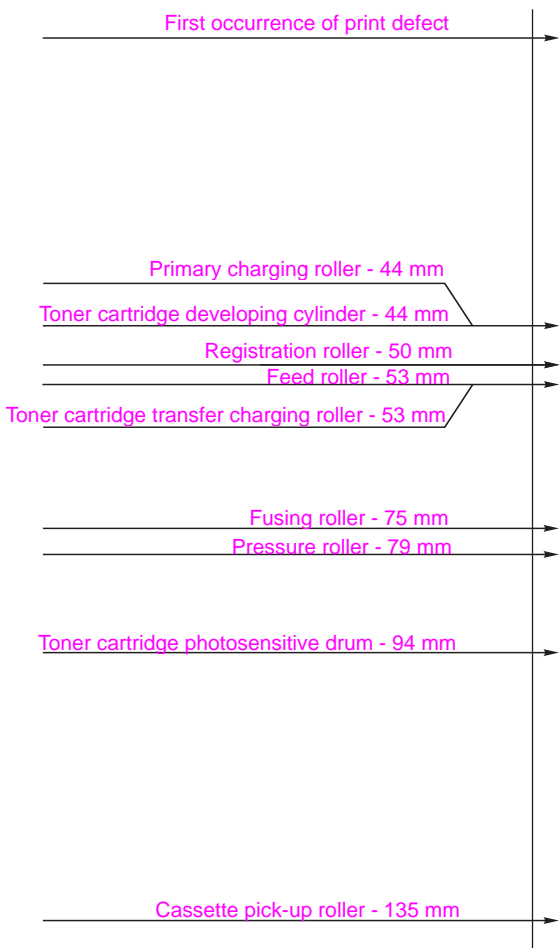


Notes

LJ 8000 repetitive defect ruler

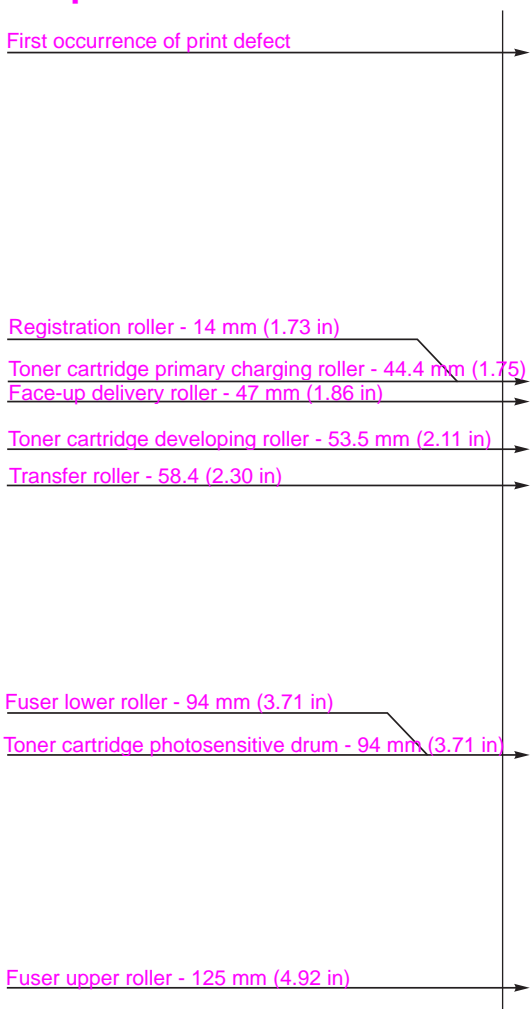


Notes

LJ 3100 repetitive defect ruler

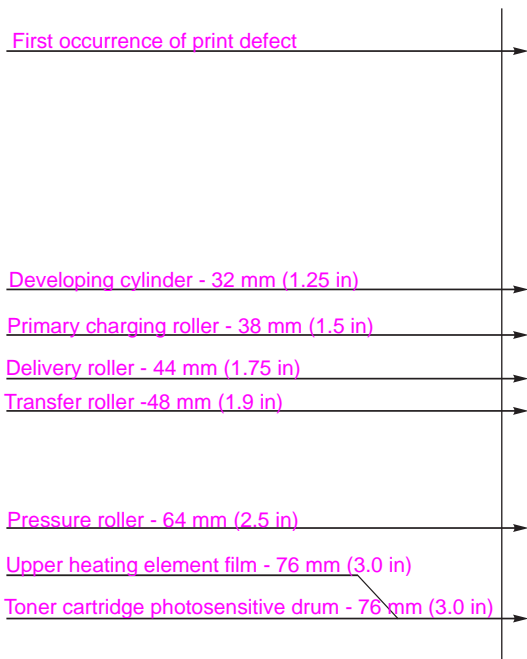


Notes

LJ 8100 repetitive defect ruler

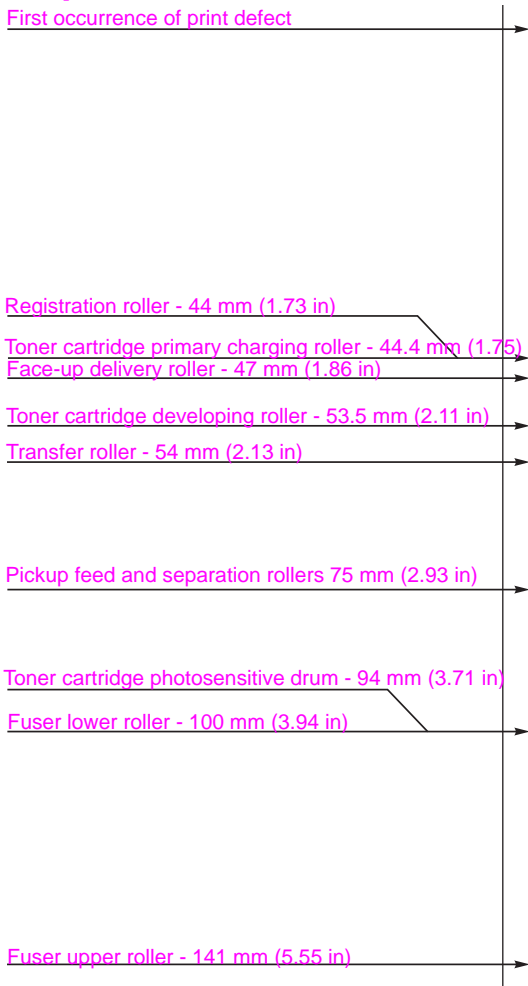

Notes

LJ 1100 repetitive defect ruler

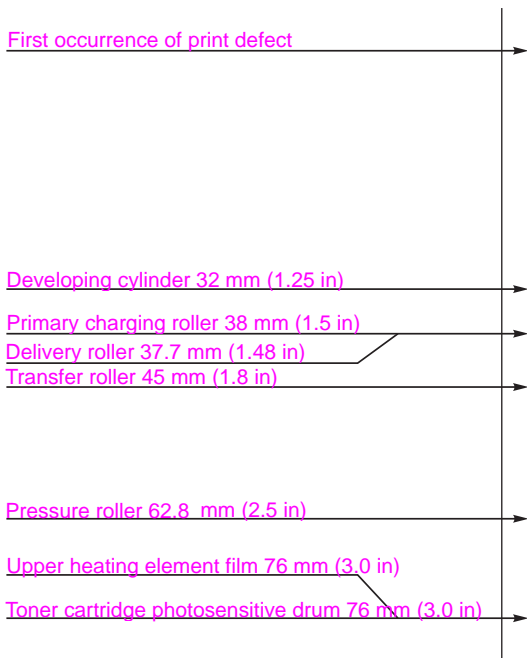


Notes


10 Wiring diagrams

Overview

This chapter provides wiring diagrams for printers supported in this guide.

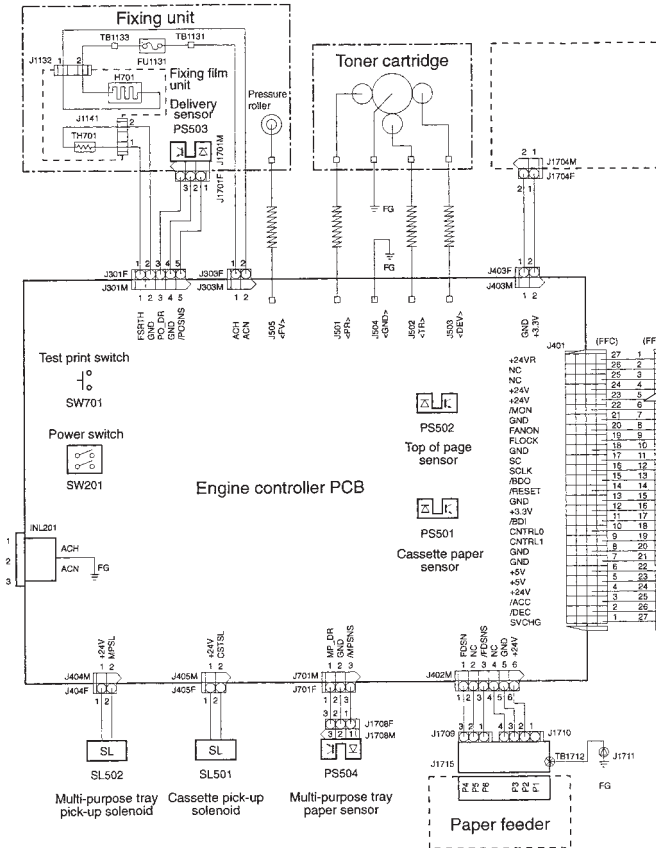


Wiring diagram (HP LaserJet 2100 series)

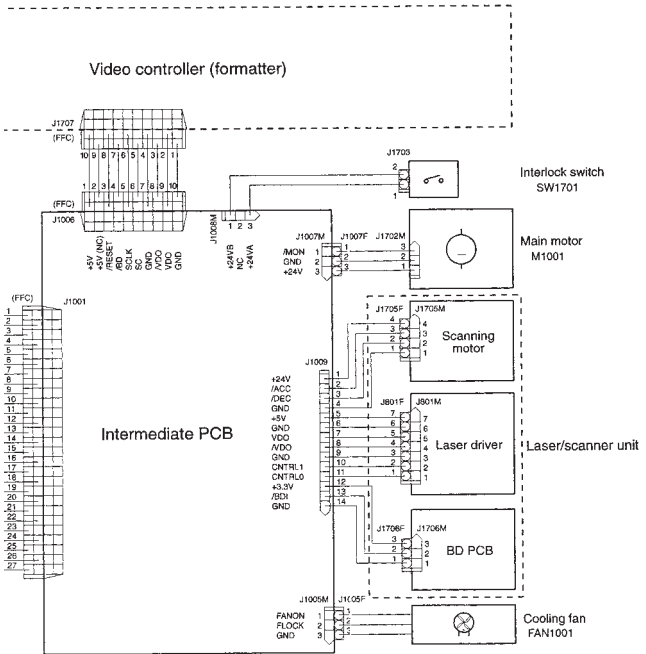


10


Wiring diagram (HP LaserJet 2100 series)

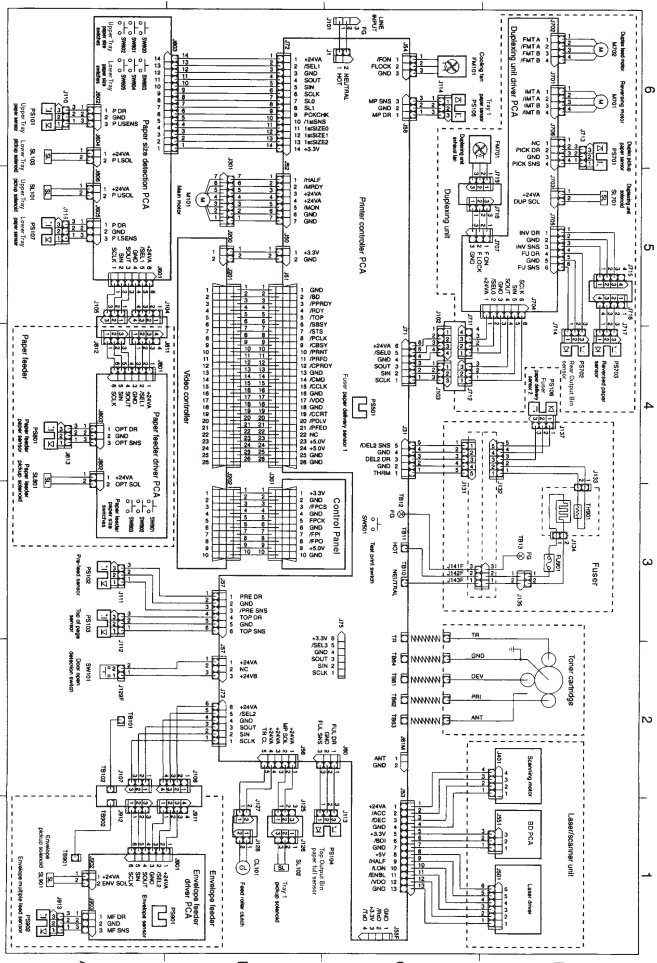


Wiring diagram (HP LaserJet 4050 T/4050 TN and 4000 T/4000 TN)

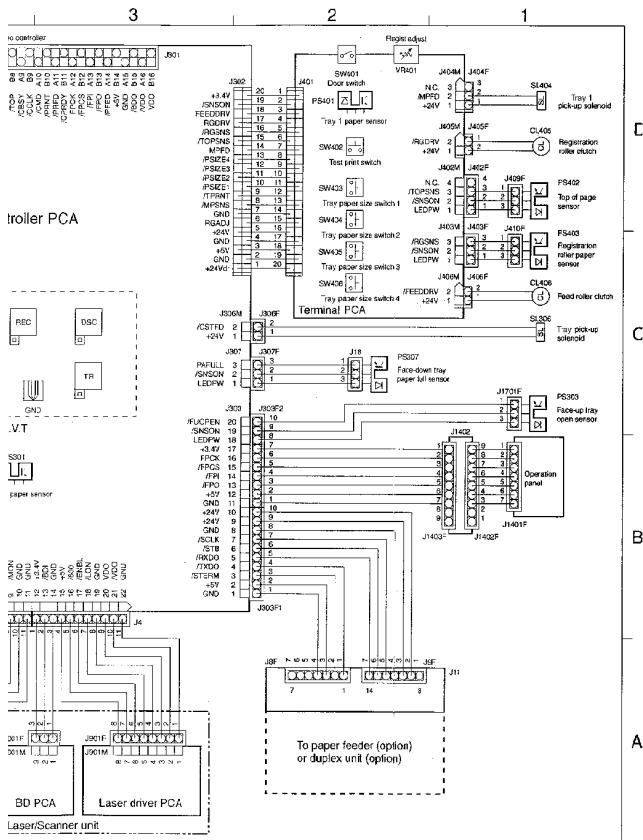


Wiring diagram (HP LaserJet 5000 series, 2 of 2)

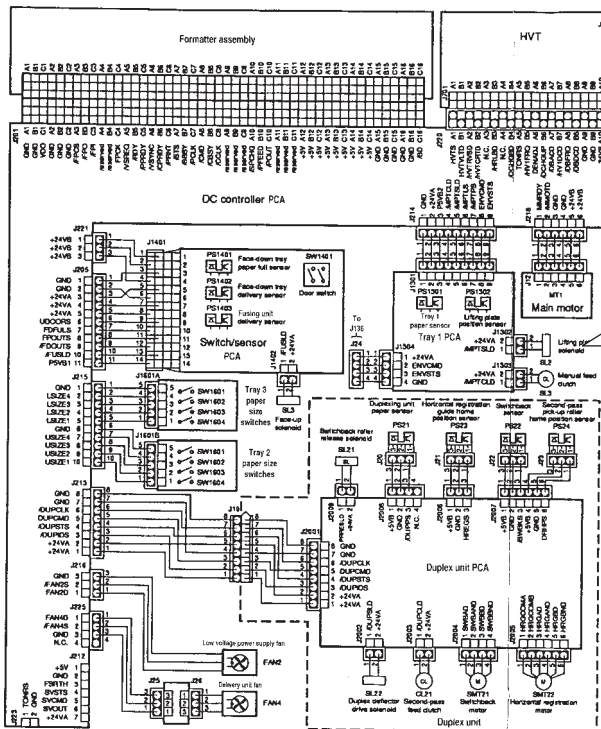


Wiring diagram (HP LaserJet 8000 series, 1 of 2)

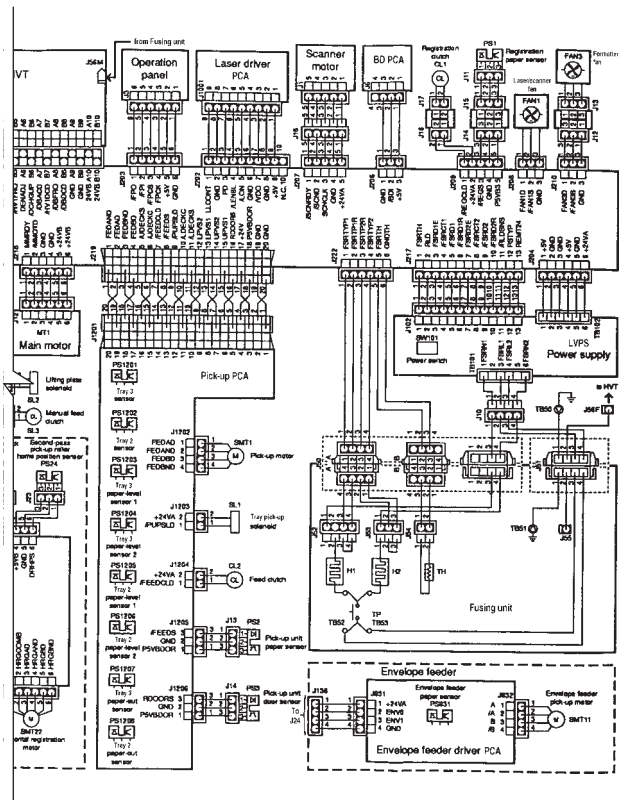

Wiring diagram (HP LaserJet 8000 series, 2 of 2)

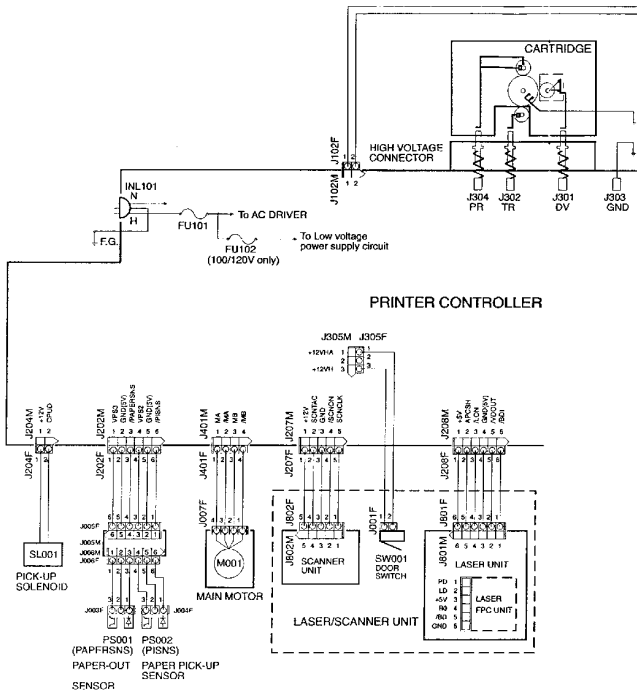


Wiring diagram (HP LaserJet 3100, 1 of 2)

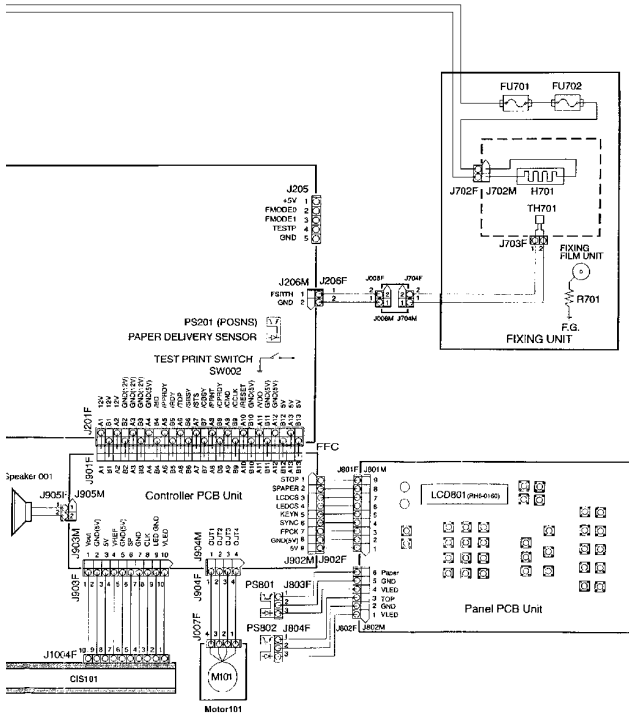


10

Wiring diagram (HP LaserJet 3100, 2 of 2)

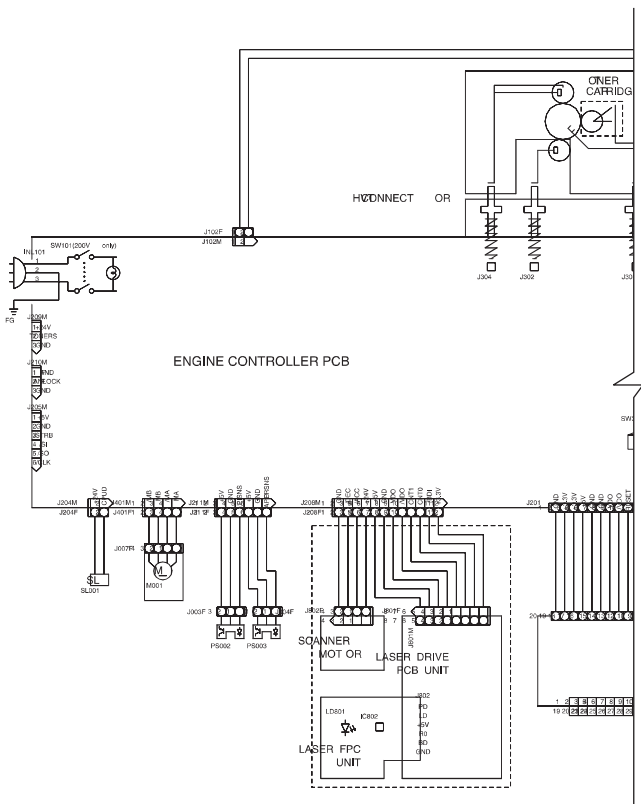

Wiring diagram (HP LaserJet 1100, 1 of 2)

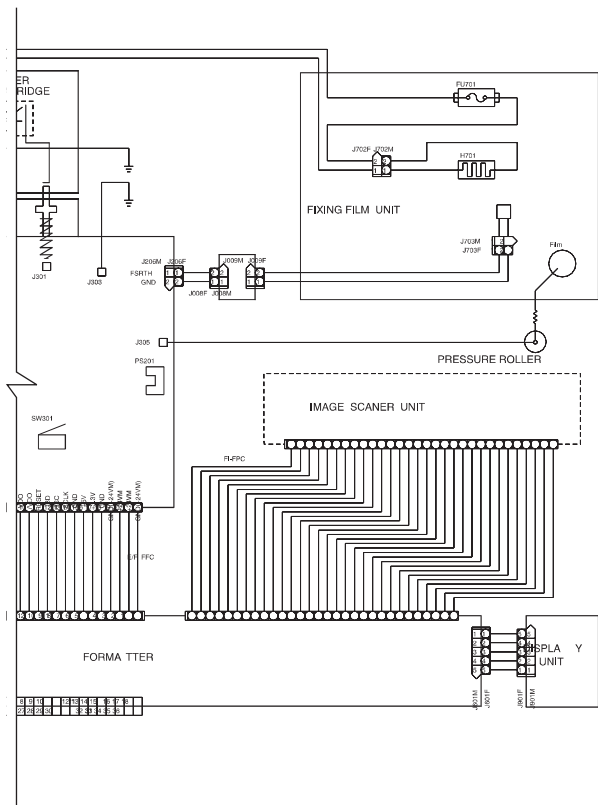

10

Wiring diagram (HP LaserJet 1100, 2 of 2)

11 Services and support/ resources and training

Overview

This chapter provides information on obtaining training, support, and materials.

How to get training

Lecture/lab training (U.S. only)

Service technicians who want individual, hands-on training can attend regularly scheduled lecture/lab training classes. These classes are offered throughout the country. To receive the latest schedule, see the HP website (www.hp.com/go/resellertraining) and request document ID number 9104. The latest schedule will immediately be sent to the fax number of your choice. Class schedule and registration information can also be obtained by calling the centralized registration center at (512) 434-1520.

Self-paced training kits

Descriptions and part numbers

Product	Description	Part number
All LaserJet Printers	Basic Hardware Training Course (prerequisite for all LaserJet service training)	5961-0880
	Paper Training Video	5961-0711 (NTSC) 5961-0712 (PAL)
LJ 2100/2100 M/ 2100 TN	Self-paced Training Kit CD-ROM	C4170-90959 C4170A-60129
LJ 4050/4050 N/ 4050 T/4050 TN	Self-paced Training Kit CD-ROM	C4251-67902
LJ 4000/4000 N/ 4000 T/4000 TN	Self-paced Training Kit NTSC Format PAL Format	C4118-61101 C4118-61102
LJ 5000/5000 N/ 5000 GN	Self-paced Training Kit NTSC Format PAL Format	C4110-61101 C4110-61102

Descriptions and part numbers (continued)

Product	Description	Part number
LJ 3100	Self-paced Training Kit NTSC Format PAL Format LaserJet 3100 Online Service Documentation and Training CD ROM (requires Netscape 3.x or greater or Internet Explorer 3.x or greater)	C3948-61101 C3948-61102 C3948-6011
LJ 8000/Mopier 240	Self-paced Training Kit NTSC Format PAL Format	C4085-67901 C4085-67902
LJ 8100	Self-paced Training Kit NTSC Format PAL Format	C4214-67901 C4214-67902
LJ 1100	Online Service and Support Documentation and Training CDROM (requires Netscape 3.x or greater or Internet Explorer 4.x or greater)	C4224-60140

Support resources

Hardware Technical Support Center

The Hardware Technical Support Center (HTSC) is available for technical support to assist service technicians. The HTSC can be reached at (800) 477-6222 (HPCEs Only) and (800) 999-3558 (subcontractors only).

Other areas

Outside of North America and Europe, contact your local HP sales office for assistance in obtaining technical support.

HP end-user support options

Local support assistance

The user's first source of assistance should be their local dealer or service center. HP continuously provides local computer dealers and service centers with the latest information regarding products and services. To locate the nearest authorized dealer or service center, phone (800) 243-9816 (U.S.) or (800) 387-3867 (Canada).

24-hour support information

Phone (800) 333-1917 to access the HP ASAP system for 24-hour automated support services. User support information includes notes for common software applications and troubleshooting tips. Users may request up to three documents per call.

Printer drivers by mail

To obtain printer drivers, contact the software application manufacturer. HP distributes printer drivers for a few of the most popular applications. Call (970) 339-7009, 6 days a week, 24 hours a day (closed Sundays). Shipping and handling charges may apply on some printer drivers.

Telephone assistance – in warranty

Call (1) (208) 323-2551 Monday through Friday from 6 am to 10 pm, Saturday 9 am to 4 pm (Mountain Time) free of charge during the warranty period. However, your standard long-distance phone charges still apply. Have your system nearby and your serial number ready when calling.

Telephone assistance – post-warranty

Post-warranty telephone assistance is available to answer your product usage questions. Call (1) (900) 555-1500 (\$2.50 per minute, U.S. only) or call 1-800-999-1148 (\$25 per call, Visa or MasterCard, U.S. and Canada) Monday through Friday from 7 am to 6 pm and Saturday from 9 am to 3 pm (Mountain Time). Charges begin only when you connect with a support technician. Prices subject to change.

Hardware repair services

To find a local authorized repair center for hardware repair needs, call (800) 243-9816. HP also offers a variety of service contract options to complement the standard warranty. Call (800) 743-8308 (U.S.) or (800) 268-1221 (Canada).

12 Hewlett-Packard LaserJet Companion

Overview

This section provides information on the LaserJet 300 DPI page scanner, which is available in three models.

Hewlett-Packard LaserJet Companion

The HP LaserJet Companion includes the following models:

- C3989A Companion
- C3079A Companion SE
- C4106A Companion XI

(These are all the same product except for minor software differences.)

Description

The HP LaserJet Companion is a 300-DPI page scanner, parallel port pass-through accessory designed for Hewlett-Packard LaserJet 4000 series printers.

Warranty

The HP LaserJet Companion comes with a 1-year warranty, offering Central Repair only (no dealer repairs); Express Exchange (U.S. and Canada); and Repair and Return (Worldwide).

Supported media

- The following media sizes are supported:
 - Maximum: 216 mm x 762 mm (8.5 by 30 inch)
 - Minimum: 51 mm x 89 mm (2 by 3.5 inch)
- The following media weights are supported:
 - 60 to 105 g/m² (16 lb to 28 lb)

Skew specifications

Some skew is normal. The maximum amount of skew that is considered normal is 3.35 millimeters (0.13 inches) over 279 millimeters (11 inches). Skew exceeding the normal amount may be caused by media that is damaged, media that does not meet the specifications, or media that is loaded incorrectly.

If media meets specifications, is not damaged, and is correctly loaded, but skew remains excessive, clean the separation pad, pickup roller, and scan roller.

Cleaning

Clean these parts with isopropyl alcohol:

- separation pad
- pickup roller
- white scan roller

Clean the image sensor with glass cleaner.

Cables

Cable part numbers

HP part number	Part description
8120-6963	Cable shipped with the HP LaserJet Companion
C2950A	Printer parallel cable (IEEE-1284) 2 meters (7 feet)
C2951A	Printer parallel cable (IEEE-1284) 3 meters (10 feet)

Power supply modules

Output = 22VDC, + or - 25%

Power supply part numbers

HP part number	Part description
9100-5534	120 Vac 60 Hz (US/CN/MX)
9100-5535	230 Vac 50 Hz (EUROPE)
9100-5536	240 Vac 50 Hz (U.K.)
9100-5537	220 Vac 50 Hz (ARG)
9100-5539	240 Vac 50 Hz (AUSTRL)
9100-5541	220 Vac 50 Hz (TI/INDO)
9100-5542	220 Vac 50 Hz (HNG KNG)

A

Acronyms and abbreviations

Acronyms and abbreviations

AC	Alternating current
AUTOCONT	Automatic continue
BNC	A 10-Base 2 connector used with coaxial cables
CE	Customer engineer
CFG	Configuration on control panel
DC	Direct current
DCPS	Direct current power supply
MS-DOS	Disk operating system
DPI	Dots per inch
DTR	Data terminal ready
DTR LINE	Data terminal ready line
ECU	Engine control unit
EP	Electro-photographic
EPH	External paper handling
FRU	Field replacement unit
FTP	File transfer protocol
HP ASAP	Hewlett-Packard Automated Support Access Program

Acronyms and abbreviations (continued)

HP FIRST	Hewlett-Packard Fax information retrieval support technology
HP-GL/2	Hewlett-Packard graphics language
HTML	Hypertext markup language
HTSL	Hardware Technical Support Center
HV	High voltage
HVPS	High-voltage power supply
I/O	Input/output
IR	Infrared
IrDA	Infrared Data Association
IRQ	Interrupt request
JEIDA	A type of memory module
JOBID	Print job identification
JP	Jobpack
LAN	Local area network
LC PICKUP ROLLER	Lower-cassette pickup roller
LED	Light-emitting diode
LIU	Line interface unit
LVPS	Low-voltage power supply
MB	Megabyte
MEM	Memory
MIO	Modular input/output
MP PICKUP ROLLER	Multipurpose tray pickup roller
MP Tray	Multipurpose tray
MSDS	Material safety data sheets
NTSC	National Television Standard Committee

Acronyms and abbreviations (continued)

NVRAM	Nonvolatile random-access memory
Ohm	A unit of measure of electrical resistance
PAL	Phase alternation line format
PCA	Printed-circuit assembly
PCB	Printed circuit board
PCL	Printer command language
PC PICKUP ROLLER	Paper-cassette pickup roller
PIU	Paper input unit
PJL	Printer job language
RAM	Random-access memory
RIP	Raster image process
ROM	Read-only memory
SIMM	Single inline memory module
SMO	Support materials organization
SMODE	Service mode
SPEC	Specifications
SRVR	Server
TCP/IP	Transmission control protocol/Internet protocol
TS I/T52	Thermoswitch
UNIX®	Network operating system using TCP/IP protocol
URL	Universal resource locator
VDC	Volts direct current

Index

A

- accessing, calibration utility 82
- accessory messages (2100) 18
- assemblies
 - locations (1100 series) 176
 - locations (2100 series) 148
 - locations (3100) 165
 - locations (4000 series) 151
 - locations (4050 series) 151
 - locations (5000 series) 154
 - locations (8000 series) 156
 - locations (8100 series) 168
 - part numbers (1100 series) 177
 - part numbers (2100 series) 149
 - part numbers (3100) 165
 - part numbers (5000 series) 155
 - part numbers (8000 series) 157
 - part numbers (8100 series) 169
- attaching printer cables 103

C

- cables
 - attaching 103
 - lengths 102
- calibrating, document scanner 81
- calibration utility, accessing 82
- character voids 123
- cleaning page, obtaining 182
- common hardware, part numbers 145
- configuration test 73
- continuable error messages (2100) 12

- control panel messages
 - 1100 19
 - alphabetical 25
 - numerical 46
- control panel test 75
- country code softswitches, changing 78

D

- default paper size, setting 70
 - diagnostics, accessing 71
 - displays, interpreting 19
 - document scanner
 - calibrating 1100 82
 - calibrating 3100 81
 - feed test 75
 - motor test 75
 - test 74
 - documents, lost 30
 - download, firmware 80
 - duplexer
 - description 136
 - part numbers 136
- ## E
- EIO-based hard drive 104
 - envelope feeder
 - description 136
 - part numbers 136
 - envelopes
 - See also* media
 - construction 116
 - gray background 126
 - improving print quality 126

- preventing problems 115
- sizes 115
- specifications 114
- types to avoid 115
- error messages (1100) 22
- error messages (2100) 16
- expanded input/output 104
- extended service menu (3100) 72
- extended service mode
 - clearing memory 77
 - reports 76
 - self-test 73
 - tests 75

F

- fax memory test 73
- faxes, lost 30
- firmware download 80
- firmware version 76
- flash 104
- fonts, ordering 132

G

- generating cleaning page 182

H

- hard disk, part numbers 132
- hard disks, ordering 132
- Hardware Technical Support Center (HTSC) 232
- hardware, part numbers 145
- HP LaserJet Cleaning Utility file 182
- HP LaserJet Companion
 - cleaning 237
 - description 236
 - supported media 236
 - warranty service 236

- HP Parts Direct Ordering 131
- HP Planet Partners 127

I

- image defects 185
- individual diagnostics 75
- input/output
 - bidirectional parallel interface 100
 - cable lengths 102
 - expanded card 104
 - pin configurations 100
- input/output cables
 - description 134
 - part numbers 134
- input/output cards
 - description 132
 - part numbers 132
- internal event log, clearing 71
- interruptions in power 30

J

- JetSuite Pro software 182

K

- keypad test 75

L

- labels See also media
- labels
 - preventing problems 118
 - specifications 117
- LCD characters test 75
- LCD test 75
- LED displays 19
- LocalTalk 104

- locations
 - printer parts (1100 series) 176
 - printer parts (3100 series) 165
 - printer parts (5000 series) 154
 - printer parts (8000 series) 156
 - printer parts (8100 series) 168
- log debug report 76
- lost, documents 30
- M**
- mailbox
 - ordering 136
 - part numbers 136
- maintenance count, setting 67, 69
- maintenance kits
 - description 140
 - part numbers 140
- media
 - basic sizes 109
 - basis weights 109
 - envelope sizes 115
 - envelope specifications 114
 - envelopes to avoid 115
 - grades 109
 - label specifications 117
 - ordering 136
 - paper curl 113
 - paper sizes 106
 - part numbers 136
 - transparency specifications 119
 - troubleshooting problems 112
 - types to avoid 112
 - weight equivalence table 110
- memory
 - ordering 132
 - part numbers 132, 134
 - product description 132, 134
- menu tree, extended service 63
- modem dial tone test 74
- modem modulation test 75
- modem test 73
- modem tone test 75
- O**
- ordering
 - duplexer 136
 - fonts 132
 - hard disks 132
 - I/O cards 132
 - input/output cables 134
 - mailbox 136
 - memory 132
 - power box 138
 - toner cartridges 138
 - trays 134, 136
- P**
- paper
 - See* media
- page count
 - setting (4000 series) 66
 - setting (5000 series) 66
 - setting (8000 series) 69
 - setting (8100 series) 69
- paper size, setting default 70
- paper training video 119
- parallel cables
 - connectors 102
 - lengths 102
 - part numbers 102
- part numbers 145
- pin configurations 100
- PJL software commands 83
- post-warranty service 233
- power box
 - ordering 138
 - part numbers 138

- power supply 85
 - 1100 series 96
 - 2100 series 86
 - 3100 92
 - 4000 series 88
 - 4050 series 88
 - 5000 series 90
 - 8000 series 94
 - 8100 series 95
- power, interruptions 30
- printer
 - hardware part numbers 145
 - obtaining hardware repair 233
 - obtaining support 232
 - part numbers (2100 series) 149
 - part numbers (4000 series) 151
 - part numbers (4050 series) 151
 - post-warranty service 233
 - service center 232
 - warranty service 233
- printer cables
 - attaching 103
- printer drivers, ordering 233
- printer fonts report 76
- problems, troubleshooting 25
- product, part numbers 132, 134
- program test 73
- protection systems 98

R

- refill statement 129
- repetitive defect ruler
 - LJ 1100 series 211
 - LJ 2100 series 199
 - LJ 3100 207
 - LJ 4000 series 201
 - LJ 5000 series 203
 - LJ 8000 series 205
 - LJ 8100 series 209

- reports
 - extended service mode 76
 - log debug 76
 - printer fonts 76
 - SRAM dump 76
 - T.30 protocol trace 76
 - task stacks 76
 - translations 76
- reset, country code 78

S

- scanner
 - calibrating 1100 82
 - calibrating 3100 81
 - LED test 75
 - test 74
- scanner plots test 75
- screws
 - description 145
 - part numbers 145
- self-paced training kits, ordering 230
- self-test 73
- sensor states test 75
- serial number, setting 68, 69
- service messages (1100) 22
- service messages (2100) 16
- service mode 61
- setting
 - maintenance count 67, 69
 - page count 66, 69
 - serial number 68, 69
- softswitches 78
- SRAM dump report 76
- status messages (1100) 19
- support, obtaining 232
- system reset, performing 77

T

- T.30 protocol trace report 76
- task stacks report 76
- tests
 - all LCD characters 75
 - configuration 73
 - control panel 75
 - document scanner feed 75
 - document scanner motor 75
 - extended service mode 75
 - fax memory 73
 - individual diagnostics 75
 - keypad 75
 - LCD 75
 - modem 73
 - modem dial tone 74
 - modem modulation 75
 - modem tone 75
 - program 73
 - scanner 74
 - scanner LED 75
 - scanner plots 75
 - sensor states 75
- toner cartridges
 - banding 123
 - ordering 138
 - page counts 122
 - part numbers 138
 - resolving problems 123
 - weights 122
- toner cracking 124
- toner images, transferring 125
- training classes 230
- translations report 76
- transparencies
 - See also media
 - preventing problems 119
 - specifications 119

trays

- description 134
- ordering 134
- part numbers 134

troubleshooting

- image defects 185
- paper problems 112
- printer problems 25

W

- warranty service, obtaining 233
- weight equivalence 110
- white reference summary 76
- wiring diagram
 - LJ 1100 series 226
 - LJ 3100 222
 - LJ 4000 series 214, 216
 - LJ 4050 series 214, 216
 - LJ 5000 series 218
 - LJ 8000 220
 - LJ 8100 224

Service Websites

Electronic Support Center

Software, drivers, support documentation, frequently asked questions

<http://www.hp.com/go/support>

HP Technical Training (North America)

Classes and schedules

<http://www.hp.com/go/resellertraining>

Parts

Parts information

<http://outfield.external.hp.com/spi/welcome.htm>

Service Phone Numbers

All numbers listed are for North America only.

Dealer Response Line

Dealer pre/post sales and service support

(800) 544-9976 *U.S. Only* **(800) 363-6594** *Canada*

Customer Care Center

User questions, applications, LaserJet Fax

(208) 323-2551

Customer Information Center

Sales dealer locations, literature, and specifications

(800) 752-0900 *U.S. Only*

HP Driver Distribution Center

Printer drivers and software application notes orders

(970) 339-7009 *U.S. Only*

Customer Support Sales Center

Authorized repair locations

(800) 243-9816 *U.S. Only*

Parts Direct Ordering / SMO

Service parts, supplies, and accessories orders

(800) 227-8164 *U.S. Only*

Parts Identification

Service part number identification

(916) 783-0804

Hardware Technical Support Center

Online technical assistance

(800) 477-6222 *HPCEs Only* **(800) 999-3558** *Subcontractors only*

Corvallis Customer Service Center

Express exchange/customer return services

(916) 785-1200

Supported Products

HP LaserJet 2100/2100 M/2100 TN printer
HP LaserJet 4050/4050 T/4050 N/4050 TN printer
HP LaserJet 4000/4000 T/4000 N/4000 TN printer
HP LaserJet Companion
HP LaserJet 5000/5000 N/5000 GN printer
HP LaserJet 3100 multifunction printer
HP LaserJet 8000/8000 N/8000 DN printer
HP LaserJet Mopier 240
HP LaserJet 8100/8100 N/8100 DN printer
HP LaserJet 1100/1100XI/1100SE printer
HP LaserJet 1100A/1100AXI/1100ASE printer



Printed on at least
50% Total Recycled Fiber with
at least 10% Post-Consumer Paper

Copyright© 1999
Hewlett-Packard Co.
Printed in USA

**Manual Part No.
5090-3390**



5090-3390