


# TRUE RMS VOLTMETER

## 3403C



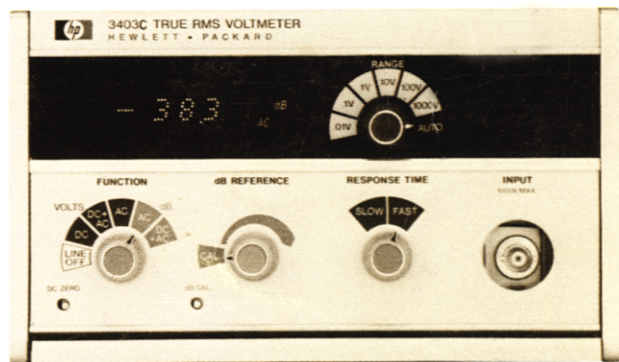

**OPERATING AND SERVICE MANUAL**

Manual Part No. 03403-90005  
(Complete manual, including binder)

Binder Part No. 03403-90004  
(Includes cover inserts)

3403C Manual Loose Leaf Pages only  
Part No. 03403-90003

Microfiche Part No. 03403-90053

**MODEL 3403C**

**TRUE RMS VOLTMETER**

Serial Number 1303A00101 and higher

Copyright Hewlett-Packard Company 1973  
P.O. Box 301, Loveland, Colorado 80537 U.S.A.



## CERTIFICATION

*The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.*

## WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard. No other warranty is expressed or implied. We are not liable for consequential damages.

Service contracts or customer assistance agreements are available for Hewlett-Packard products that require maintenance and repair on-site.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

## TABLE OF CONTENTS

Section	Page	Section	Page
I	GENERAL INFORMATION . . . . .	IV	THEORY OF OPERATION . . . . .
	1-1. Introduction . . . . .	4-1.	Introduction . . . . .
	1-3. Specifications . . . . .	4-3.	AC Converter Assembly . . . . .
	1-5. Options . . . . .	4-4.	Attenuator . . . . .
	1-7. Accessory Equipment Supplied . . . . .	4-6.	Input Amplifier . . . . .
	1-9. Accessories Available . . . . .	4-8.	Converter Amplifier . . . . .
	1-11. Instrument and Manual Identification . . . . .	4-10.	Thermopile Protection . . . . .
		4-12.	DC Amplifier . . . . .
		4-14.	Converter Logic . . . . .
II	INSTALLATION . . . . .	4-16.	Connector Assembly . . . . .
	2-1. Introduction . . . . .	4-18.	Digital Panel Meter . . . . .
	2-3. Initial Inspection . . . . .	4-20.	Measurement Technique . . . . .
	2-5. Power Requirements . . . . .	4-22.	Analog Circuits . . . . .
	2-7. Power Cords and Receptacles . . . . .	4-27.	Clock and Counters . . . . .
	2-9. Grounding Requirements . . . . .	4-29.	Display . . . . .
	2-11. Installation . . . . .	4-31.	Polarity Display . . . . .
	2-13. Bench Mounting . . . . .	4-33.	Logic Timing . . . . .
	2-15. Rack Mounting . . . . .	4-37.	FET Switch Drive . . . . .
	2-17. Rear Panel Input . . . . .	4-39.	Local Control . . . . .
	2-19. Installation of Options . . . . .	4-41.	Remote Programming Option . . . . .
	2-21. Repackaging for Shipment . . . . .	4-43.	Display Logic . . . . .
	2-25. Interface Connections . . . . .	4-44.	+/- Blanking . . . . .
	2-26. Digital Output . . . . .	4-46.	Decimal Location . . . . .
	2-28. Remote Control . . . . .	4-48.	Up/Down Range Indication . . . . .
		4-50.	dB Display . . . . .
		4-52.	Autorange Option . . . . .
III	OPERATING INSTRUCTIONS . . . . .	4-55.	Digital Output Option . . . . .
	3-1. Introduction . . . . .	4-60.	Power Supplies . . . . .
	3-4. Front and Rear Panel Description . . . . .	4-61.	Analog Circuit Supplies . . . . .
	3-6. Maximum Input Voltages . . . . .	4-63.	Digital Circuit Supplies . . . . .
	3-7. General Operating Characteristics . . . . .	4-65.	Ground Circuits . . . . .
	3-8. Turn-on and Warm-up . . . . .	4-66.	Standard Instrument Ground . . . . .
	3-10. DC Zero . . . . .		
	3-12. Floating Measurements . . . . .	V	MAINTENANCE . . . . .
	3-14. High Frequency Measurements . . . . .	5-1.	Introduction . . . . .
	3-16. Response Time . . . . .	5-3.	Test Equipment Required . . . . .
	3-18. Automatic Sampling Rate . . . . .	5-5.	Performance Check Procedure . . . . .
	3-22. Remote Measure Command Input . . . . .	5-7.	AC Voltage Accuracy Checks . . . . .
	3-28. Out-of-Range Indication . . . . .	5-8.	Mid-Band Frequency Measurements . . . . .
	3-30. Autoranging . . . . .	5-10.	100 kHz to 10 MHz Measurements . . . . .
	3-32. Analog Recorder Output . . . . .	5-12.	10 MHz to 100 MHz Measurements . . . . .
	3-35. Non-Sinusoidal Input Signals . . . . .	5-16.	Low Frequency Measurements . . . . .
	3-37. Digital Output . . . . .	5-18.	dB Accuracy Check (Option 006) . . . . .
	3-38. Output Signals and Levels . . . . .	5-20.	DC Voltage Accuracy Check . . . . .
	3-41. Input Signals and Levels . . . . .	5-22.	AC Normal-Mode Rejection Check . . . . .
	3-46. Digital Output Isolation Characteristics . . . . .	5-24.	AC Common-Mode Rejection Check . . . . .
	3-49. Remote Control . . . . .	5-26.	AC Volts Function . . . . .
	3-51. Remote Programming . . . . .	5-27.	DC Volts Function . . . . .
	3-53. Remote Measurement Control . . . . .	5-29.	Digital Output Check . . . . .
	3-55. Output Signals . . . . .		
	3-58. dB Display . . . . .		

**TABLE OF CONTENTS (cont'd)**

Section V (Cont'd)	Page
5-31. Remote Control Check .....	5-6
5-33. Adjustment Sequence .....	5-7
5-38. Access to Adjustments .....	5-7
5-40. Power Supply Adjustments .....	5-7
5-42. Zero Adjustments .....	5-7
5-44. Converter Amplifier Adjustments .....	5-8
5-46. Gain Adjustments .....	5-10
5-48. High Frequency Adjustments .....	5-11
5-50. Digital Panel Meter Adjustments .....	5-12
5-52. Out-of-Range Adjustments .....	5-12
5-54. Log Converter Adjustments .....	5-12
5-56. Final Converter Balance Adjustment .....	5-13
5-58. Preliminary Troubleshooting .....	5-14
5-60. Access for Servicing .....	5-14
5-62. Troubleshooting Trees .....	5-62
5-64. AC Converter Service .....	5-15
5-65. AC Converter Exchange .....	5-15
5-67. AC Converter Input/Output Checks .....	5-15
5-69. AC Converter Service Precautions .....	5-15
5-71. Power Supply Checks .....	5-15
5-74. Connector Assembly Checks .....	5-15

Section V (Cont'd)	Page
5-76. Autorange Checks .....	5-15
5-78. Log Converter Zero Error .....	5-15
5-80. Factory Selected Components .....	5-16
5-82. A2CR1 and A2R4 .....	5-16
5-84. Replacement of DS2 Through DS10 .....	5-16

Section	Page
VI REPLACEABLE PARTS .....	6-1
6-1. Introduction .....	6-1
6-4. Ordering Information .....	6-1
6-6. Non-Listed Parts .....	6-1
6-8. Proprietary Parts .....	6-1

Section	Page
VII CIRCUIT DIAGRAMS .....	7-1
7-1. Introduction .....	7-1
7-3. Notes .....	7-1

**APPENDICES**

A. CODE LIST OF MANUFACTURERS

B. SALES AND SERVICE OFFICES

C. MANUAL BACKDATING CHANGES

**LIST OF TABLES**

Table	Page
1-1. Specifications .....	1-2
1-2. Typical Operating Characteristics .....	1-3
3-1. Maximum Input Loading Error .....	3-1
3-2. Autorange/Frequency Limits .....	3-3
4-1. Attenuator and Amplifier Gain .....	4-1
5-1. Required Test Equipment .....	5-2
5-2. Mid-Band AC Voltage Checks .....	5-3
5-3. 100 kHz to 10 MHz Checks .....	5-3

Table	Page
5-4. 10 MHz to 100 MHz Checks .....	5-4
5-5. dB Accuracy Check .....	5-5
5-6. DC Voltage Accuracy Check .....	5-5
5-7. Digital Output Check .....	5-6
5-8. Selection of A2C9 .....	5-11
5-9. Log Converter Zero .....	5-16
6-1. Replaceable Parts .....	6-1

## LIST OF ILLUSTRATIONS

Figure	Page	Figure	Page
2-1. Changing Input from Front to Rear . . . . .	2-0	6-1. Location of Miscellaneous Parts . . . . .	6-13
2-2. Power Cord Receptacles . . . . .	2-1	6-2. Line Switch Assembly A8 . . . . .	6-14
2-3. Installation of Options . . . . .	2-2	7-1. Assembly Locations . . . . .	7-2
2-4. BCD Output Connector J2 . . . . .	2-5	7-2. Block Diagram . . . . .	7-3/7-4
2-5. Remote Program Connector J3 . . . . .	2-6	7-3. Schematic Diagram, AC Converter Amplifier Circuits, A2 . . . . .	7-5/7-6
3-1. Front and Rear Panels . . . . .	3-2	7-4. Schematic Diagram, AC Converter DC Amp. and Logic Circuits, A3 . . . . .	7-7/7-8
3-2. High Frequency Measurements . . . . .	3-2	7-5. Schematic Diagram, Manual Range and Function Logic, A4 . . . . .	7-9/7-10
3-3. Remote Measure Sequence . . . . .	3-3	7-6. Master Board Wiring Diagram, A4 . . . . .	7-11/7-12
3-4. dB Analog Recorder Output . . . . .	3-4	7-7. Schematic Diagram, Power Supplies, A5, A6 . . . . .	7-13/7-14
3-5. Remote Programming Sequence . . . . .	3-5	7-8. Schematic Diagram, Standard Connector Assembly, A7 . . . . .	7-15/7-16
4-1. Panel Meter Measurement Cycle . . . . .	4-2	7-9. Schematic Diagram, Log Converter, A12 . . . . .	7-17/7-18
4-2. Panel Meter Block Diagram . . . . .	4-2	7-10. Schematic Diagram, Autorange Assembly, A13 . . . . .	7-19/7-20
4-3. Panel Meter Analog Circuits . . . . .	4-3	7-11. Schematic Diagram, Remote and Autorange Assembly, A14 . . . . .	7-21/7-22
4-4. Timing Counter and Decoder Signals . . . . .	4-5	7-12. Schematic Diagram, Input/Output Assembly, A15 . . . . .	7-23/7-24
4-5. 3403C Ground Circuit . . . . .	4-7	7-13. Schematic Diagram, Digital Panel Meter, (Standard), A20 . . . . .	7-25/7-26
5-1. High Frequency Voltage Accuracy Check . . . . .	5-1		
5-2. AC Common-Mode Voltage Check . . . . .	5-6		
5-3. Access to Adjustments . . . . .	5-8		
5-4. Location of Adjustments . . . . .	5-9		
5-5. Access for Servicing . . . . .	5-14		
5-6. Basic Troubleshooting Tree . . . . .	5-17/5-18		
5-7. Panel Meter Troubleshooting Tree . . . . .	5-19/5-20		
5-8. Autorange (A13) Troubleshooting Tree . . . . .	5-21/5-22		

## SECTION I

### GENERAL INFORMATION

#### 1-1. INTRODUCTION.

1-2. The Hewlett-Packard Model 3403C True RMS Voltmeter makes ac voltage measurements on six ranges of 10 mV to 1000 V full range, with overrange capability of up to 190 % of range except as limited by maximum allowable input voltage. In addition, the Model 3403C makes dc voltage and dc + ac measurements on five ranges. Options listed in Paragraph 1-5 are available to increase the usefulness of the instrument.

#### 1-3. SPECIFICATIONS.

1-4. Specifications for the Model 3403C are shown in Table 1-1. Table 1-2 lists a number of typical operating characteristics.

#### 1-5. OPTIONS.

1-6. The following options are available for the Model 3403C:

- Option 001: Autoranging
- Option 002: Digital Output (Non-isolated)
- Option 003: Autoranging + Remote + BCD Output
- Option 006: dB Display

#### 1-7. ACCESSORY EQUIPMENT SUPPLIED.

1-8. A "banana plug to BNC" adapter, -hp- Part No. 5040-5847, is supplied with the Model 3403C. Use of this adapter disconnects input common from chassis ground, so

that floating measurements may be made. A printed circuit extender, -hp- Part No. 5060-5984, is supplied as an aid to servicing the digital panel meter assembly.

#### 1-9. ACCESSORIES AVAILABLE.

1-10. Available accessories include a 50  $\Omega$  feed-thru termination, -hp- 11048C; a 75  $\Omega$  feed-thru termination, -hp- 11094B; and a 600  $\Omega$  feed-thru termination, -hp- 11095A. An output cable, -hp- 11184A, is available for connecting the BCD output to a digital recorder such as the -hp- Model 5055A or 5050B. Accessories required for rack mounting the Model 3403C include the -hp- 5060-8762 adapter frame, the -hp- 5060-8540 half-width filler panel, and if only one instrument is to be mounted, the -hp- 5060-8760 half-module filler panel. The -hp- 11096A high frequency, peak responding probe may be used to reduce the input capacitance to 2 pF and permit relative measurements up to 1 GHz.

#### 1-11. INSTRUMENT AND MANUAL IDENTIFICATION.

1-12. Instrument identification by serial number is located on the rear panel. Hewlett-Packard uses a two-section serial number consisting of a four-digit prefix and a five-digit suffix, separated by a letter designating the country in which the instrument was manufactured, (A = U.S.A.; G = West Germany; J = Japan; U = United Kingdom.) If the four-digit prefix of the serial number of your instrument is lower than the prefix shown on the title page of this manual, backdating information located in Appendix C will define the differences between your instrument and the Model 3403C described in this manual.

Table 1-1. Specifications.

**Ranges:**

- .01 V (ac only)
- .1 V
- 1 V
- 10 V
- 100 V
- 1000 V

DC + AC: Responds to true RMS value of dc and ac signal;  
Reading is:

$$\sqrt{(dc)^2 + (ac\ RMS)^2}$$

**Effective Common-Mode Rejection (1 kΩ unbalance in either lead):**

- AC Function: > 60 dB at 60 Hz.
- DC Function: > 120 dB at 60 Hz.

**Functions:**

- AC: Responds to true RMS value of ac coupled input signal.
- DC: Responds to dc component of input signal.

**Normal-Mode Rejection:**

- DC Function: > 60 dB at 60 Hz.

**Voltage Measurement Accuracy:** (25° C ± 5° C; < 95 % relative humidity).

AC or DC + AC voltage measurement accuracy is not specified below the point on any range where the RNG ↓ indicators light.  
DC function accuracy is specified over the entire range.

Voltage Reading Accuracy	= ± (% of Range)			⊕ % of Reading)**									
	Function			Frequency in Hz									
	Range	DC	DC + AC	AC	DC	2	25	100 k	1 M	10 M	20 M	50 M	100 M
1000 V	0.3	0.3	0.3	0.3	0.2	0.4*	0.2						
100 V	0.2	0.2	0.2	0.2	0.2	0.4*	0.2	1.0					
10 V	0.2	0.2	0.2	0.2	0.2	0.4*	0.2	0.5	1.0				
1 V	0.2	0.2	0.2	0.2	0.2	0.4*	0.2	0.5	1.0	2.0	5.0	10.0	
.1 V	0.6	0.6	.04 V $\frac{0.2}{0.4}$		0.2	0.4*	0.2	0.5	2.0	2.0	5.0	10.0	
.01 V			.004 V $\frac{0.2}{0.4}$		0.2	0.4*	0.2	0.3	1.0	3.0 <sup>2</sup> M			

\* DC + AC Function and Slow Response Time only.

\*\* % of Reading Specification is representative of typical flatness.

Frequencies and Ranges in shaded areas may result in invalid readings without ranging information.

**dB Measurement Accuracy (Option 006):** (25° C ± 5° C; < 95 % relative humidity).

dB measurement accuracy is not specified below the point on any range where the RNG ↓ indicators light.

dB Reading Accuracy	= ± dB		+ dB**									
	Function		Frequency in Hz									
	Range	AC	DC + AC	DC	2	25	100 k	1 M	10 M	20 M	50 M	100 M
1000 V	0.15	0.15	0.15	0.02	0.04*	0.02						
100 V	0.15	0.15	0.15	0.02	0.04*	0.02	0.1					
10 V	0.15	0.15	0.15	0.02	0.04*	0.02	0.05	0.1				
1 V	0.15	0.15	0.15	0.02	0.04*	0.02	0.05	0.1	0.2	0.5	1.0	
.1 V	0.15	0.15	0.15	0.02	0.04*	0.02	0.05	0.2	0.2	0.5	1.0	
.01 V	0.15	0.15	0.15	0.02	0.04*	0.02	0.1	0.3 <sup>2</sup> M				

\* DC + AC Function and Slow Response Time only.

\*\* Specification is representative of typical flatness.

Frequencies and Ranges in shaded areas may result in invalid readings without ranging information.

**Temperature Coefficient (0° C to 20° C and 30° C to 50° C):** TC = 0.1 × Reading accuracy (from charts)/° C.

Table 1-2. Typical Operating Characteristics.

Frequency Range:

Voltage Range	DC + AC Slow Response Time Only		AC or DC + AC Fast or Slow Response Time				
	Frequency in Hz						
	2	25	100k	1M	2M	10M	100M
1000 V	Shaded						
100 V	Shaded						
10 V	Shaded						
1 V	Shaded						
.1 V	Shaded						
.01 V	Shaded						

Response Time:

Fast: 1 second  
Slow: 10 seconds.

Instrument reads final reading  $\pm 0.1\%$  of input voltage change in stated response time.

Reading Rate:

Fast response time: 4 per second  
Slow response time: 2 per second

Maximum Input Voltage:

High to Low:  
1000 V rms, 1500 V peak or  $10^8$  V Hz on any range.  
Maximum dc in ac function:  $\pm 500$  V dc.

Low to Chassis:  
 $\pm 500$  V peak, when floated with special banana jack-to-BNC adapter.

Input Impedance:

Below 10 MHz  
1 V to 1000 V ranges:  $10\text{ M}\Omega \pm 10\%$  in parallel with  $19\text{ pF} \pm 10\%$ .

.01 V and .1 V ranges:  $20\text{ M}\Omega \pm 10\%$  in parallel with  $16\text{ pF} \pm 10\%$ .

1 MHz to 100 MHz: The following table gives maximum loading error due to input shunt impedance across a terminated source.

System Impedance (Source and Load)	Frequency	
	10 MHz	100 MHz
50 $\Omega$	1 %	10 %
75 $\Omega$	2 %	20 %

Autoranging (Options 001 and 005):



Up-ranging occurs at approximately 190 % of range, down-ranging at approximately 17 % of range.

Autorange operating frequency range: Input signals above the frequencies indicated by the Frequency Range chart in this table may result in erroneous readings and improper auto-range operation.

Autorange time per range change:

Fast response time: 1 second  
Slow response time: 10 seconds

Crest Factor: Peak Voltage Limits:

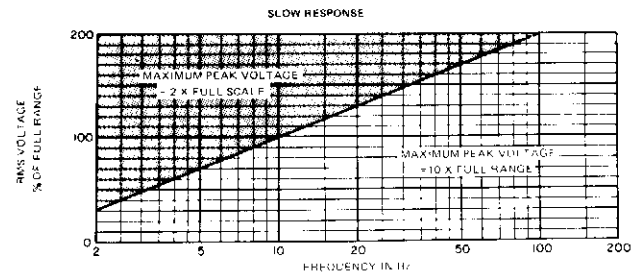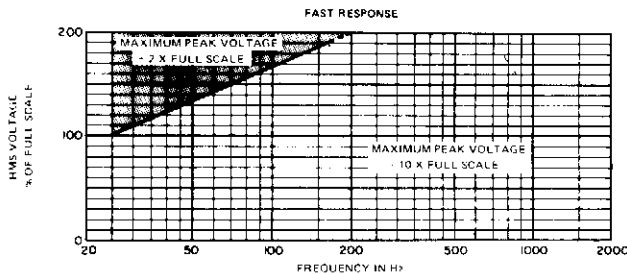

The Crest Factor capabilities of the Model 3403C are limited by two things: the dynamic range of the Input Amplifier and the Overload Protection circuitry which protects the thermopile. The dynamic range of the Input Amplifier is sufficient to handle peaks of at least 10 times full range. The Overload Protection circuit, which limits the peak temperature of the thermopile, is dependent on both the voltage level and frequency. The following figures show the ranges of frequency and level at which the RMS Converter will accept signals with peaks of 10 times full range without being limited by the Overload Protection circuit. As the frequency is reduced (or the RMS value is increased) beyond the limits shown, the maximum peak voltage allowable makes a fairly abrupt transition from 10 times to 2 times full range.

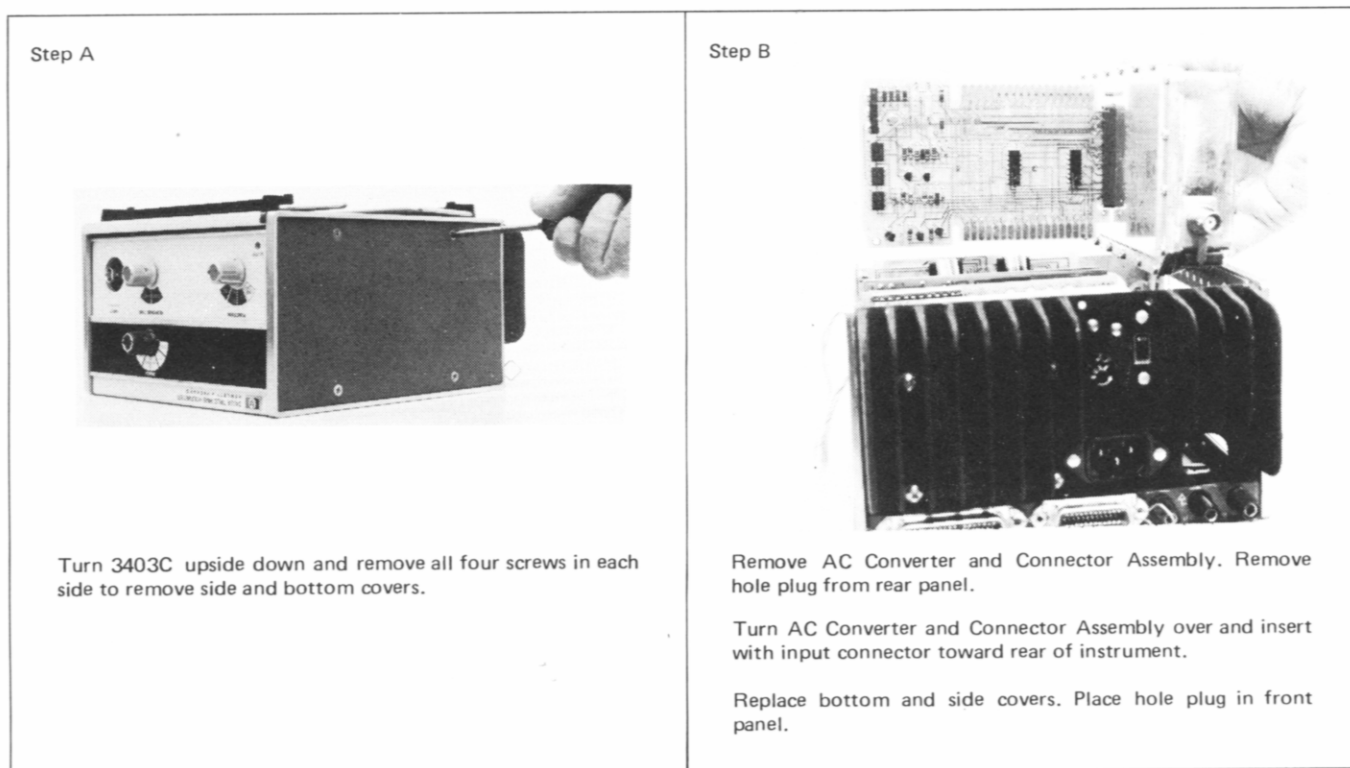


Figure 2-1. Changing Input from Front to Rear.



## SECTION II INSTALLATION

### 2-1. INTRODUCTION.

2-2. This section contains information and instructions necessary for installing the Model 3403C True RMS Voltmeter and for installing certain options within the instrument. Included are initial inspection procedures, power and grounding requirements, installation and interface information, and instructions for repackaging for shipment.

### 2-3. INITIAL INSPECTION.


2-4. This instrument was carefully inspected both mechanically and electrically before shipment. It should be free of marks or scratches and in perfect electrical order upon receipt. To confirm this, the instrument should be inspected for physical damage in transit, and the electrical performance should be tested using the procedure outlined in Section V of this manual. If there is damage or deficiency, see the warranty in the front of this manual.

### 2-5. POWER REQUIREMENTS.

2-6. The Model 3403C can be operated from any source of 115 or 230 volts at 48 to 440 Hz. Power dissipation is a maximum of 50 VA, depending upon options installed.

### 2-7. POWER CORDS AND RECEPTACLES.

2-8. Figure 2-2 illustrates the standard power receptacle (wall outlet) configurations that are used throughout the United States and in other countries. The -hp- Part Number shown directly above each receptacle drawing is the part number for a 3403C power cord equipped with the appropriate mating plug for that receptacle. If the appropriate power cord is not included with the instrument, notify the nearest -hp- Sales and Service Office and a replacement cord will be provided.

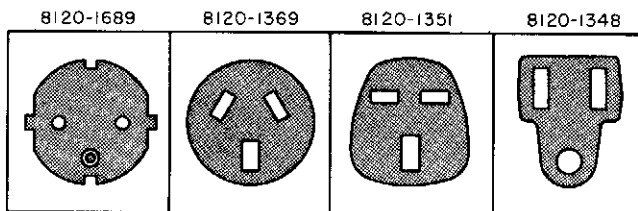

STD - B - 2878

Figure 2-2. Power Cord Receptacles.

### 2-9. GROUNDING REQUIREMENTS.

2-10. To protect operating personnel, the National Electrical Manufacturers' Association (NEMA) recommends that the instrument panel and cabinet be grounded. The Model

3403C is equipped with a three-conductor power cable which, when plugged into an appropriate receptacle, grounds the instrument. The offset pin on the power cable is the ground wire. To preserve the protection feature when operating the instrument from a two-contact output, use a three-contact to two-contact adapter and connect the green wire on the adapter to power line (earth) ground.

### 2-11. INSTALLATION.

2-12. The Model 3403C is fully transistorized and no special cooling equipment is required. However, the instrument should not be mounted in a manner that would obstruct the free flow of air around the instrument, particularly around the rear panel cooling fins. It should not be operated where the ambient temperature exceeds 50° C (122° F) or the relative humidity exceeds 95 %. Power dissipation is 50 VA maximum.

### 2-13. Bench Mounting.

2-14. The Model 3403C is shipped with plastic feet and tilt stands in place, ready for use as a bench instrument.

### 2-15. Rack Mounting.

2-16. The 3403C may be rack mounted by using an adapter frame, -hp- Part No. 5060-8762. This adapter frame accepts a combination of submodular units for rack mounting only. An -hp- 5060-8540 half-width filler is needed above the 3403C. If only one instrument is to be rack mounted the half-module filler panel, -hp- 5060-8760 is also required.

### 2-17. REAR PANEL INPUT.

2-18. The design of the 3403C permits the input connector to be located either at the front panel or rear panel. Instructions for changing the input from the usual front panel location to the rear panel are given in Figure 2-1.

### 2-19. INSTALLATION OF OPTIONS.

2-20. Instructions for installing Options 001 and 002 are contained in Figure 2-3. Follow only those steps which apply to the option you are installing. Options 003 and 006 are available only as factory installed options.

### 2-21. REPACKAGING FOR SHIPMENT.

2-22. The following paragraphs contain a general guide for repackaging the instrument for shipment. Refer to Paragraph 2-23 if the original container is to be used; 2-24 if it is not. If you have any questions, contact your nearest -hp- Sales and Service Office (see Appendix B).

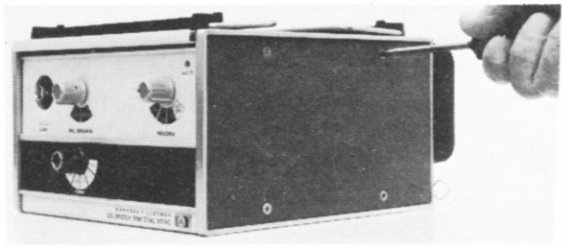
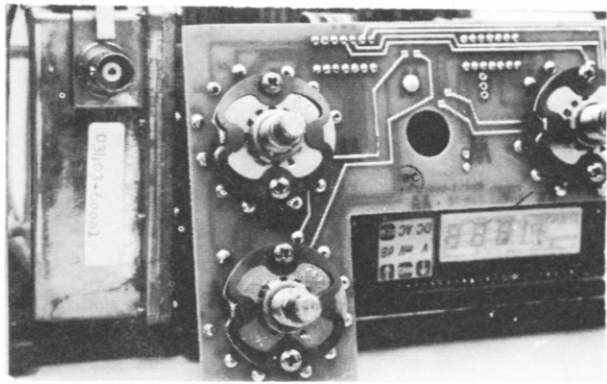
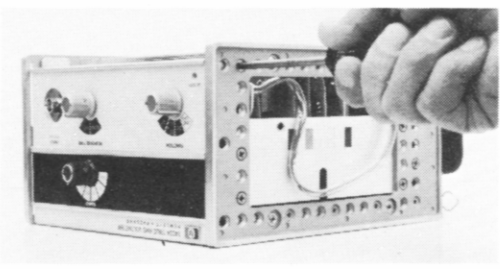
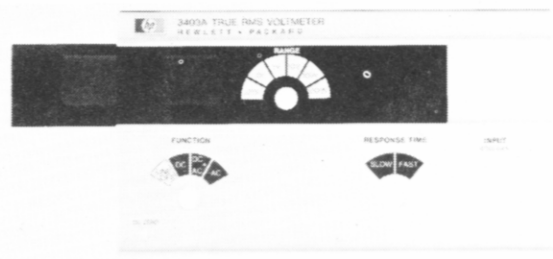
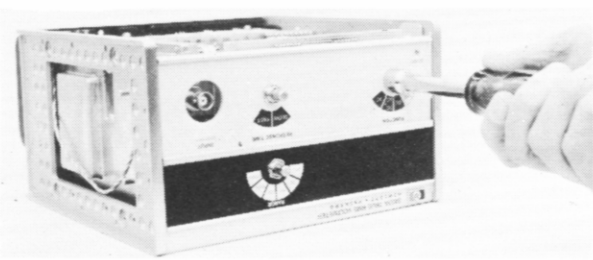
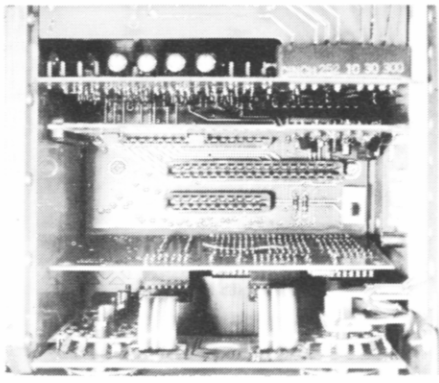
<p>Step A Options 001, 002</p>  <p>Turn 3403C upside down and remove all four screws in each side to remove side and bottom covers.</p>	<p>Step D Option 001</p>  <p>Move limit stop on range switch one position clockwise. Detent plates may be mounted opposite (180°) to the position shown. Place drop of fingernail polish or other quick-drying substance on limit stop and allow to set.</p>
<p>Step B Option 001</p>  <p>Remove one screw in each side to release front panel.</p>	<p>Step E Option 001</p>  <p>Slide window from front panel and replace with window supplied with option. Place front panel in position, making sure switch limit stops are in correct position. Replace control mounting nuts. Secure front panel in position. Replace control knobs.</p>
<p>Step C Option 001</p>  <p>Remove all front panel control knobs. Remove mounting nuts from all front panel controls. Remove front panel from switches and board assembly carefully to avoid moving switch limit stops.</p>	<p>Step F Option 001</p>  <p>Place Autorange Assembly (Option 001) into J5, with components toward front of instrument.</p>

Figure 2-3. Installation of Options.

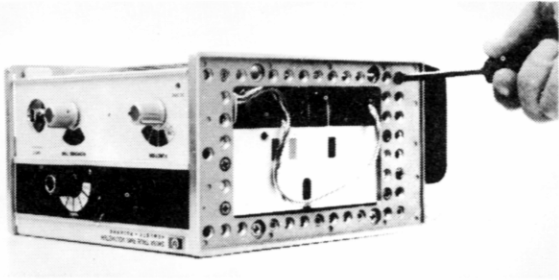
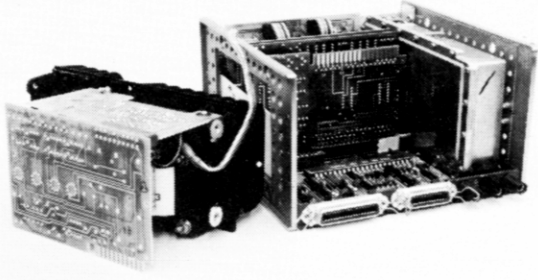
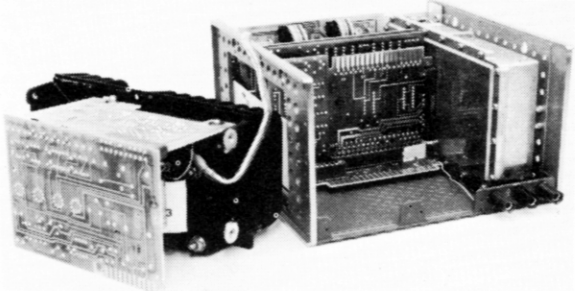
<p>Step G Option 002</p>  <p>Remove two screws from each side to release rear panel.</p>	<p>Step I Option 002</p>  <p>Remove plate from flange of top cover and insert Input/Output Assembly into connector on edge of Master Board. Secure connectors to flange.</p>
<p>Step H Option 002</p>  <p>Remove rear panel with power supply attached.</p>	<p>Step J Option 002</p> <p>Place rear panel assembly in position and secure. Replace side and bottom covers.</p>

Figure 2-3. Installation of Options (Cont'd).

**NOTE**

*If the instrument is to be shipped to Hewlett-Packard for service or repair, attach a tag to the instrument identifying the owner and indicating the service or repair to be accomplished. Include the model number and full serial number of the instrument. In any correspondence, identify the instrument by model number and full serial number.*

2-23. Place instrument in original container with appropriate packing material and seal well with strong tape or metal bands. If original container is not available, one can be purchased from your nearest -hp- Sales and Service Office.

2-24. If original container is not be be used, proceed as follows:

- a. Wrap instrument in heavy paper or plastic before placing in an inner container.
- b. Place packing material around all sides of instrument and protect panel face with cardboard strips.
- c. Place instrument and inner container in a heavy carton and seal with strong tape or metal bands.
- d. Mark shipping container "DELICATE INSTRUMENT", "FRAGILE", etc.

## 2-25. INTERFACE CONNECTIONS.


### 2-26. Digital Output.

2-27. If the Model 3403C is equipped with a Digital Output option, 7 columns of 1-2-4-8 coded BCD information are provided, LOW state true. In addition to 4 columns of measurement magnitude information, range,

function, polarity, and out-of-range information are provided. Positive reference is +5 V and negative reference is 0 V (ground), available at the rear panel connector. In addition to the coded information, connections are provided for several input and output signals. Figure 2-4 shows the BCD Output Connector J2 and gives required interface information. The mating connector for J2 is -hp- Part No. 1251-0084 (Amphenol No. 57-30360-375). A cable, -hp- 11184A, is available for connection to -hp- digital recorders.

### 2-28. Remote Control.

2-29. Option 003 permits programming of function, range, autorange and response time. Lines are also provided for remote control of sampling. Figure 2-5 shows the Remote Program Connector J3 and gives required interface information. The mating connector for J3 is -hp- Part No. 1251-0293 (Amphenol No. 57-30240).

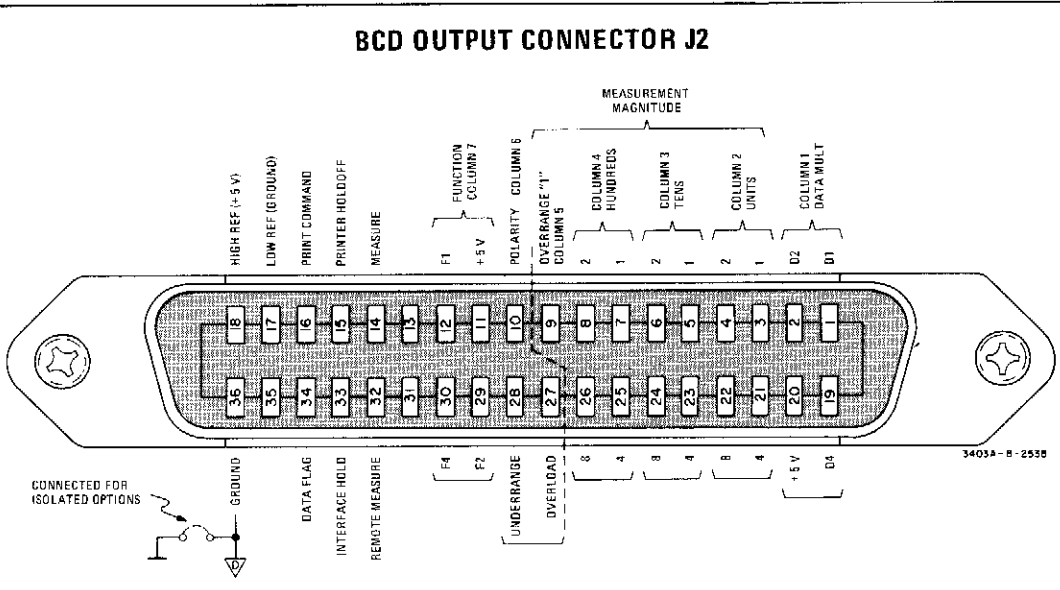

**OUTPUT SIGNAL LEVELS**

LOW = < + 0.5 V, 12 mA max sink current  
 HIGH = + 5 V, 6 kΩ source resistance  
 Data output signals are LOW true.  
 Printer columns are numbered right to left.

**OUTPUT SIGNALS**

Column 1: Readout Magnitude Multiplier is Decimal position in negative power of 10 beginning at a point between columns 1 and 2 (0000.0 X 10<sup>-n</sup>). Multiplier is 1 for all dB measurements.

Print	Voltage Range
0	1000. V
1	100.0 V
2	10.00 V
3	1.000 V
4	.1000 V
5	.01000 V

Columns 2 through 5: Readout Magnitude.

Column 6: Polarity, Overload, and Underrange.

Print	Conditions
0	-
1	+
2	-, Overload
3	+, Overload
4	-, Underrange
5	+, Underrange
6	-, Underrange, Overload
7	+, Underrange, Overload

Column 7: Function.

Print	Function
0	DC + AC Volts
1	DC Volts
2	AC Volts

Column 7: Function. (cont'd)

Print	Function
3	Not used
4	DC + AC dB
5	Not used
6	AC dB
7	Not used

Print Command:

Positive- or negative-going pulse between 0 V and - 10 V. Polarity is selected by connection on Input/Output Assembly. First Transition acknowledges receipt of Remote Measure signal when in Remote mode of operation. Second transition indicates valid data available.

Data Flag:

Positive- or negative-going pulse between 0 V and + 5 V. Polarity is selected by connection on Input/Output Assembly. First transition acknowledges receipt of Remote Measure signal when in Remote mode of operation. Second transition indicates valid data available.

Print Command and Data Flag are identical except for voltage.

**INPUT SIGNALS:**

Interface Hold:

LOW level disables automatic sampling.

Printer Holdoff:

Level ≥ +2.0 V and ≤ + 20 V disables automatic sampling.

Measure:


LOW > 2 microseconds initiates measurement.

Remote Measure:

LOW > 50 microseconds initiates measurement when in Remote operating mode.

Figure 2-4. BCD Output Connector J2.

### REMOTE PROGRAM CONNECTOR J3

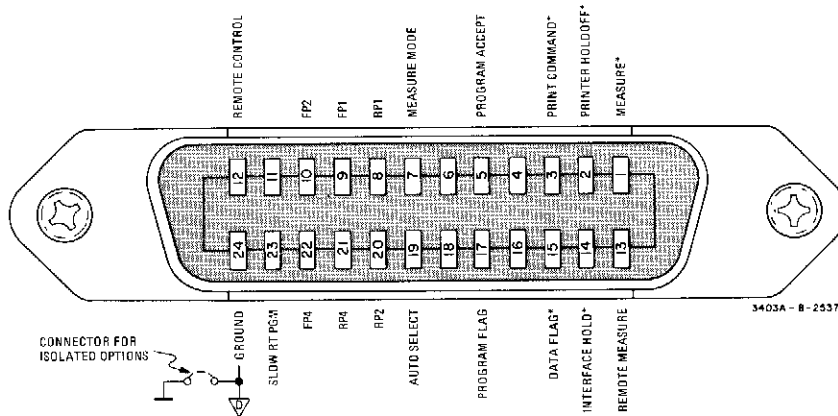

\*These signals available with or without Remote option installed.

**INPUT SIGNAL LEVELS**

LOW = + 0.5 V, 12 mA max sink current, or contact closure to ground through < 600 Ω.  
 HIGH = + 5 V, 6 kΩ source resistance, or open circuit.

**INPUT SIGNALS**

**Remote Control:**  
 LOW level enables remote programming and disables front panel Function, Range, and Response Time Controls. Disables automatic sampling.

**Remote Measure:**  
 LOW > 50 microseconds initiates measurement when in Remote operating mode.

**Interface Hold\*:**  
 LOW level disables automatic sampling.

**Printer Holdoff\*:**  
 Level ≥ + 2 V and ≤ + 20 V disables automatic sampling.

**Measure\*:**  
 LOW > 2 microseconds initiates measurement.

**Program Accept:**  
 LOW > 50 microseconds accepts remote program word.

**Function Program:**

Function	FP1	FP2	FP4
DC + AC Volts	H	H	H
DC Volts	L	H	H
AC Volts	H	L	H
Not used	L	L	H
DC + AC dB	H	H	L
Not used	L	H	L
AC dB	H	L	L
Not used	L	L	L

} If dB Option not installed these states not used.

**Range Program:**

Range	RP1	RP2	RP4
1000 V	H	H	H
100 V	L	H	H
10 V	H	L	H
1 V	L	L	H
.1 V	H	H	L
.01 V	L	H	L

**Auto Select:**  
 LOW level selects autoranging when in Remote mode.

**Response Time Program:**  
 LOW = Slow; HIGH = Fast

**Measure Mode Program:**  
 LOW = Non-delayed; HIGH = Delayed

**OUTPUT SIGNALS:**

**Program Flag:**  
 Positive - or negative - going pulse between 0 V and + 5 V. Polarity selected by connection on Remote Assembly. First transition acknowledges receipt of Program Accept. Second transition indicated program stored.

**Print Command\*:**  
 Positive - or negative - going pulse between 0 V and - 10 V. Polarity selected by connection on Input/Output Assembly. First transition acknowledges receipt of Remote Measure command when in Remote mode of operation. Second transition indicates valid data available.

**Data Flag:**  
 Positive - or negative - going pulse between 0 V and + 5 V. Polarity selected by connection on Input/Output Assembly. First transition acknowledges receipt of Remote Measure command when in Remote mode. Second transition indicates valid data available.

Figure 2-5. Remote Program Connector J3.

## SECTION III

### OPERATING INSTRUCTIONS

#### 3-1. INTRODUCTION.

3-2. The -hp- Model 3403C True RMS voltmeter makes ac voltage measurements on six ranges from 10 mV to 1000 V full range. The Model 3403C also makes dc and dc + ac true rms measurements on five ranges from 100 mV to 1000 V full range. The dc + ac true rms measurement is equal to  $\sqrt{(\text{dc})^2 + (\text{ac rms})^2}$ . Overrange readings of greater than 190 % of range are possible on all except the 1000 V range. *The accuracy of readings in AC and DC + AC Functions is not specified below the point on any range where downrange indication occurs.*

3-3. In addition to voltage measurements, the dB Option 006 permits measurements of ac and dc + ac to be read directly in dB. Other options, listed in Paragraph 1-5, provide autoranging, remote programming, and digital output.

#### 3-4. FRONT AND REAR PANEL DESCRIPTION.

3-5. Figure 3-1 shows the front and rear panel controls and connectors and gives a brief description of each. Some of the features shown are available only with certain options.

#### 3-6. MAXIMUM INPUT VOLTAGES.



*DO NOT EXCEED THE FOLLOWING MAXIMUM INPUT VOLTAGES OR DAMAGE TO THE INSTRUMENT MAY RESULT.*

*BETWEEN INPUT HIGH AND LOW:*

*AC FUNCTION: 1500 VAC PEAK, 500 VDC*

*DC FUNCTION: ± 1000 V*

*DC + AC FUNCTION: 1000 VRMS, 1500 V PEAK DC + AC*

*BETWEEN INPUT LOW AND CHASSIS (FLOATING MEASUREMENTS): ± 500 V PEAK.*

#### 3-7. GENERAL OPERATING CHARACTERISTICS.

#### 3-8. Turn-on and Warm-up.

3-9. Make sure the rear panel 115/230 slide switch is set to the proper line voltage before connecting the Model 3403C. To obtain readings within the specified measurement accuracy, turn the instrument on and allow to warm up for at least 15 minutes.

#### 3-10. DC Zero.

3-11. For maximum accuracy when making dc measurements with the Model 3403C, short the input and adjust the front panel DC ZERO control for zero display.

#### 3-12. Floating Measurements.



*TO MAKE FLOATING OR POWER LINE VOLTAGE MEASUREMENTS WITH THE 3403C, THE BANANA JACK TO BNC ADAPTER (-hp- PART NO. 5040-5847) SUPPLIED WITH THE INSTRUMENT MUST BE USED TO DISCONNECT INPUT LOW FROM CHASSIS.*


3-13. Normally, the 3403C input Low is connected to chassis (power line) ground. The banana jack to BNC adapter breaks this ground connection. *Be sure the adapter is inserted correctly and turned fully clockwise on the BNC bayonet connector.* Floating measurements may then be made of inputs up to ± 500 V peak above chassis ground, provided that any input or output equipment connected to the 3403C is also floating. If the 3403C is equipped with the Digital Output, refer to Paragraph 3-46.

#### 3-14. High Frequency Measurements.

3-15. At frequencies below approximately 10 MHz, input impedance is  $10 \text{ M}\Omega \pm 10 \%$  shunted by  $19 \text{ pF} \pm 10 \%$  on the 1 V through 1000 V ranges, and  $20 \text{ M}\Omega \pm 10 \%$  shunted by  $16 \text{ pF} \pm 10 \%$  on the .01 V and .1 V ranges. At frequencies of approximately 10 MHz and higher the input impedance is not accurately represented by the above description. When measuring signals above approximately 10 MHz, a termination should be used at the 3403C input equal to the characteristic impedance of the signal source, as shown in Figure 3-2. The impedance of the cable used should also match the source impedance. This is necessary to minimize the loading effect of mismatched impedances and standing waves. Maximum loading error due to input shunt impedance across a terminated source is shown in Table 3-1. Feed-thru terminations of  $50 \text{ }\Omega$  (-hp- 11048C),  $75 \text{ }\Omega$  (-hp- 11094B) and  $600 \text{ }\Omega$  (-hp- 11095A) are available.

**Table 3-1. Maximum Input Loading Error.**

System Impedance (Source and Load)	Frequency	
	10 MHz	100 MHz
50 $\Omega$	1 %	10 %
75 $\Omega$	2 %	20 %

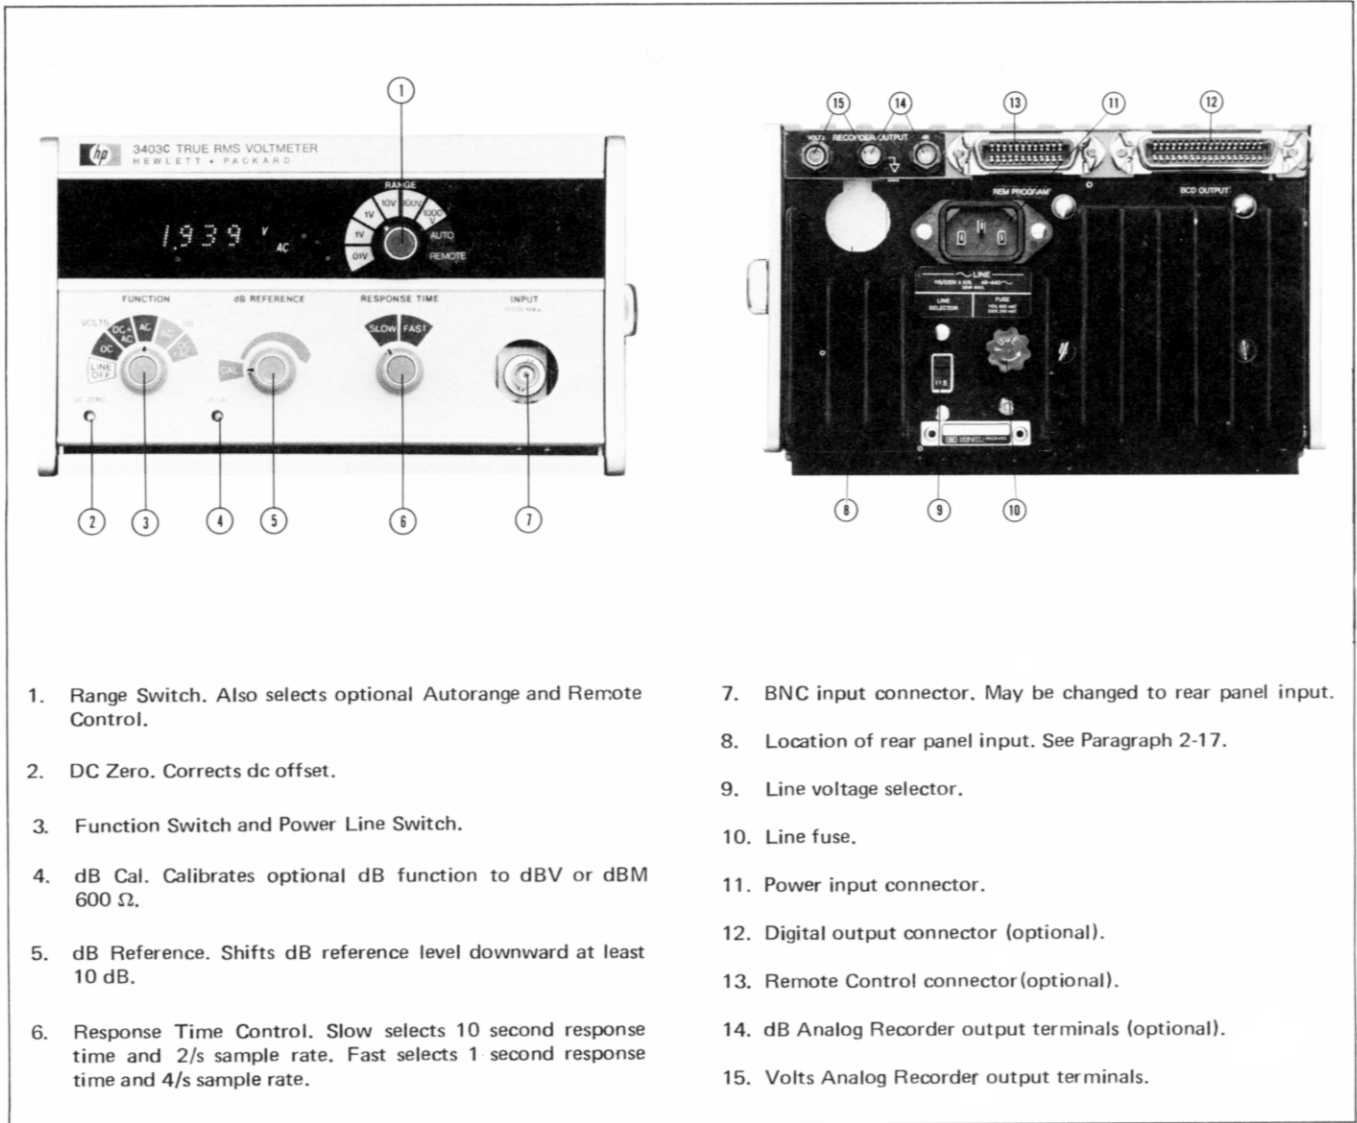

1. Range Switch. Also selects optional Autorange and Remote Control.
2. DC Zero. Corrects dc offset.
3. Function Switch and Power Line Switch.
4. dB Cal. Calibrates optional dB function to dBV or dBM 600 Ω.
5. dB Reference. Shifts dB reference level downward at least 10 dB.
6. Response Time Control. Slow selects 10 second response time and 2/s sample rate. Fast selects 1 second response time and 4/s sample rate.
7. BNC input connector. May be changed to rear panel input.
8. Location of rear panel input. See Paragraph 2-17.
9. Line voltage selector.
10. Line fuse.
11. Power input connector.
12. Digital output connector (optional).
13. Remote Control connector (optional).
14. dB Analog Recorder output terminals (optional).
15. Volts Analog Recorder output terminals.

Figure 3-1. Front and Rear Panels.

**3-16. Response Time.**

3-17. The Model 3403C reaches final reading ± 0.1 % of an input voltage change within the stated response time. The 3403C provides a choice of two response times. SLOW response time is approximately 10 seconds, and must be used with DC + AC Function for input frequencies below 25 Hz. FAST response time is approximately 1 second and may be used for frequencies higher than 25 Hz.

**3-18. Automatic Sampling Rate.**

3-19. The RESPONSE TIME control of the 3403C selects the automatic sampling rate. In the SLOW position, the reading rate is 2 per second, and 4 per second in FAST position. In both cases, the reading rate is faster than the response, resulting in one or more erroneous readings when a large step input voltage is applied. However, the faster reading rates provided are desirable when small voltage changes are being observed.

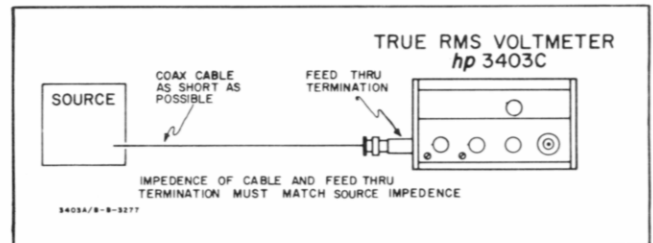


Figure 3-2. High Frequency Measurements.

**3-20. Measure Command Input.**

3-21. This input connection is available in the 3403C equipped with a Digital Output option. When the Interface Hold line is grounded (continuous LOW), a LOW connection at the Measure input for > 2 μs initiates a measure-



ment. In this method of operation, the maximum reading rate is 8 per second.

**3-22. Remote Measure Command Input.**

3-23. This input connection is available only in the 3403C equipped with a Remote Control option.

**3-24. Non-Delayed Measure Mode.** The non-delayed mode must be programmed by a LOW signal at the Measure Mode connection, J3 Pin 7. See Figure 2-5 and Paragraph 3-51. In this mode of operation, a Remote Measure command (LOW > 50  $\mu$ s at the Remote Measure input of either J2 or J3) initiates a measurement within a few microseconds. The maximum reading rate in the non-delayed mode is 15 per second; however, it may be desirable to consider the 3403C response time in determining the optimum reading rate.

**3-25. Delayed Measure Mode.** A HIGH signal (or open circuit) at the Measure Mode connection, J3 Pin 7, selects the delayed measure mode of operation. In this mode, the Remote Measure command is delayed for a length of time determined by the 3403C response time programmed. See Figure 2-5 and Paragraph 3-51. If Fast response time is selected, the delay is a minimum of 1 second, and 10 seconds minimum for Slow response time. The reading rate, then, is determined by the response time selected. A Remote Measure command may be applied following the second transition of the Print Command or Data Flag signal, which indicates that the previous measurement has been completed. A Remote Measure command applied between the first and second transition of these signals will have no effect. The measurement sequence is illustrated in Figure 3-3.

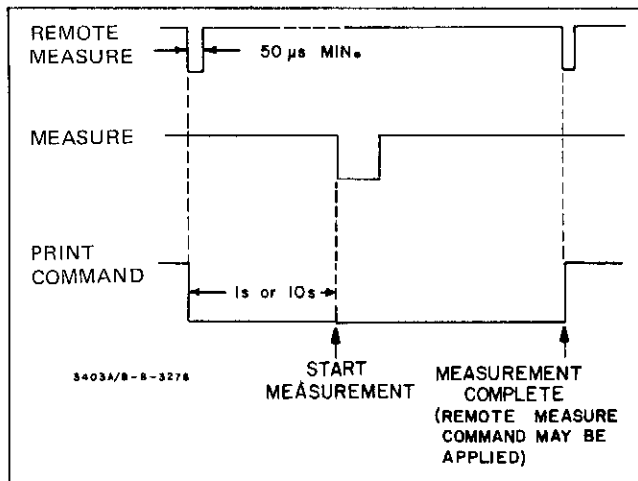


Figure 3-3. Remote Measure Sequence.

**3-26. Overrange Measurements.**

3-27. The Model 3403C is capable of readings greater than 190 % of full range on all except the 1000 V range.

The fourth digit "1" lights for all measurements of 1000 or higher.

**3-28. Out-of-Range Indication.**

3-29. If any or all of the  $\uparrow$ , RNG, or  $\downarrow$  annunciators are lit, the reading is not valid. In voltage measurements, this out-of-range indication occurs for readings below approximately 17% of range or above approximately 190% of range. If a measurement is overrange, the RNG annunciator will light up, and the least significant digits will be blank. In the over-range condition, the first significant digit lights up, along with the RNG and  $\uparrow$  annunciators. If the digits are lit, the numbers displayed are not accurate. In dB measurements, the out-of-range limits on the two lower ranges are approximately 34% and 380% of range. On the four higher ranges, the limits are 17% and 190%. The 10 mV range for either dc or dc + ac is out of range of the specifications; on that range, all digits will blank, and the  $\uparrow$ ,  $\downarrow$ , and RNG annunciators will come on.

**3-30. Autoranging.**

3-31. When autoranging operation (Option 001 or 003) is selected, autoranging occurs at the points where the uprange and downrange indications occur. Autoranging time per range change is 1 second minimum when fast response time is selected, and 10 seconds minimum for slow response time. If a step input voltage greater than approximately 220% of range is applied, the instrument will go to the 1000 V range and then downrange to the proper range. Due to the frequency response design of the attenuator, autoranging may not operate properly above certain frequencies on some ranges. These limits are shown in Table 3-2.

Table 3-2. Autorange/Frequency Limits.

Range	Maximum Frequency
.01 V	2 MHz
.1 V	100 MHz
1 V	100 MHz
10 V	10 MHz
100 V	1 MHz
1000 V	100 kHz

**3-32. Analog Recorder Output.**

**3-33. Volts.** The Volts Recorder Output at the rear panel of the Model 3403C is +1 V for a full-range input on any range in the AC function. A full-range DC + AC input also gives +1 V output. In the DC function, the output is  $\pm 1$  V for a full-range + or - dc input. The Volts Recorder Output resistance is 1 k $\Omega$   $\pm$  10 %.

**3-34. dB.** If the instrument incorporates the dB option, a dB Analog Output is provided in addition to the voltage output. The voltage level at the dB Recorder Output is 0 mV for a display of 00.0 dB. For readings above or below 0 dB, the recorder output varies  $\pm 10$  mV per dB. Figure

3-4 shows the relationship between the dB Recorder Output, the display, and the range selected. Output resistance is  $1000 \Omega \pm 500 \Omega$ .

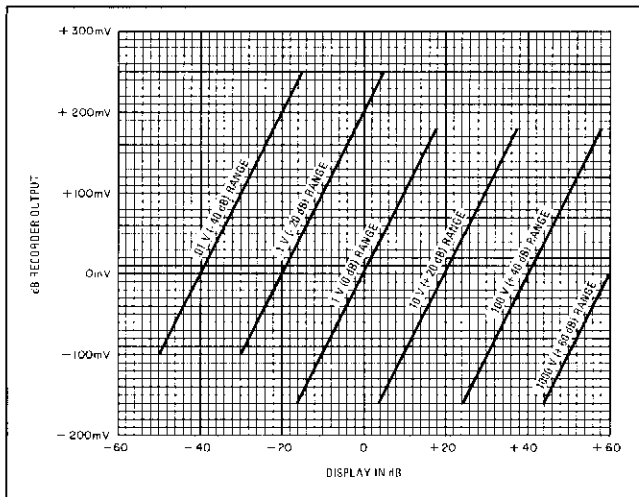


Figure 3-4. dB Analog Recorder Output.

### 3-35. Non-Sinusoidal Input Signals.

3-36. The Model 3403C makes true rms measurements of non-sinusoidal input signals as shown in the Crest Factor information in Table 1-2. When the frequency and rms value of the signal fall within the shaded portion of the Crest Factor graphs (Table 1-2), a peak voltage greater than 2 times full range will cause the  $\uparrow$  indicator and the 3 least significant digits to flash, indicating that the peak voltage is beyond the limit of the instrument. When operating in the autorange mode, this condition will cause the instrument to go to the 1000 V range and then range downward to the proper range.

### 3-37. DIGITAL OUTPUT.

#### 3-38. Output Signals and Levels.

3-39. **Coded Data.** The Model 3403C equipped with a Digital Output option provides 7 columns of 1-2-4-8 coded BCD information, LOW state true. LOW =  $< +0.5 \text{ V}$ , 12 mA maximum sink current; HIGH =  $+5 \text{ V}$ , 6 k $\Omega$  source resistance. In addition to measurement magnitude, coded output information includes range, function, polarity, and out-of-range conditions. Figure 2-4 shows the print codes for a standard -hp- 5050B print wheel, -1248.

3-40. **Print Command and Data Flag.** These two pulse outputs occur simultaneously, and are both either positive-going or negative-going. Pulse polarity is selected by a connection on the Input/Output Assembly A15. If the jumper, W1, is in position A (see Figure 7-12), the pulses are negative-going, and are positive-going if W1 is in position B. The Print Command signal goes between 0 V and -10 V, and Data Flag between 0 V and +5 V. The first

transition of either pulse acknowledges receipt of a Remote Measure command when operating in the Remote mode, and the second transition indicates that valid data is available.

#### 3-41. Input Signals and Levels.

3-42. **Interface Hold.** A continuous LOW level disables automatic sampling. LOW =  $+0.5 \text{ V}$ , 12 mA maximum sink current; or contact closure to ground through  $< 600 \Omega$ . HIGH =  $+5 \text{ V}$ , 6 k $\Omega$  source resistance; or open circuit.

3-43. **Printer Holdoff.** A voltage level between  $+2 \text{ V}$  and  $+20 \text{ V}$  disables automatic sampling. A LOW level ( $< 0.5 \text{ V}$ ) or an open circuit permits automatic sampling.

3-44. **Measure.** A LOW  $> 2$  microseconds initiates a measurement when the Interface Hold input is LOW. This input may be used whether the instrument has the Remote option or not. LOW =  $< +0.5 \text{ V}$ , 12 mA maximum sink current; or contact closure to ground through  $< 600 \Omega$ . HIGH =  $+5 \text{ V}$ , 6 k $\Omega$  source resistance; or open circuit.

3-45. **Remote Measure.** A LOW input  $> 50$  microseconds initiates a measurement when operating in the Remote mode. The measurement may be delayed or non-delayed (see Paragraphs 3-22 and 3-51). LOW =  $< +0.5 \text{ V}$ , 12 mA maximum sink current; or contact closure to ground through  $< 600 \Omega$ . HIGH =  $+5 \text{ V}$ , 6 k $\Omega$  source resistance; or open circuit.

#### 3-46. Digital Output Characteristics.

3-47. **Option 002.** Output data lines and input control lines are referenced to a ground line that is electrically common with the measurement input Low. Input Low is normally connected to chassis (power line) ground, but may be disconnected from chassis ground by use of the banana jack to BNC adapter provided with the instrument (-hp- Part No. 5040-5847). *Make sure the adapter is inserted correctly and turned fully clockwise on the BNC bayonet connector.* With the use of this input adapter, floating measurements may be made only if the printer or other interface equipment can be floated. However, under these operating conditions, common-mode rejection characteristics may be degraded.

3-48. **Option 003.** Output data and input control lines are referenced to chassis (power line) ground. The banana jack to BNC adapter (-hp- Part No. 5040-5847) supplied with the 3403C must be used at the input to disconnect input Low from chassis ground in order to make floating measurement. *Make sure the adapter is inserted correctly and turned fully clockwise on the BNC bayonet connector.* The instrument will maintain all normal- and common-mode rejection characteristics under these conditions.

#### 3-49. REMOTE CONTROL.

3-50. Option 003 permits remote programming of function, range, autorange and response time. Lines are also

provided for remote control of sampling. Characteristics for Remote Control are the same as those given for Digital Output in Paragraph 3-48. Figure 2-5 shows the Remote Program Connector J3 and gives required interface information. For all input signals, LOW =  $< +0.5$  V, 12 mA maximum sink current; or connect closure to ground through  $< 600 \Omega$ . HIGH =  $+5$  V,  $6 \text{ k}\Omega$  source resistance; or open circuit.

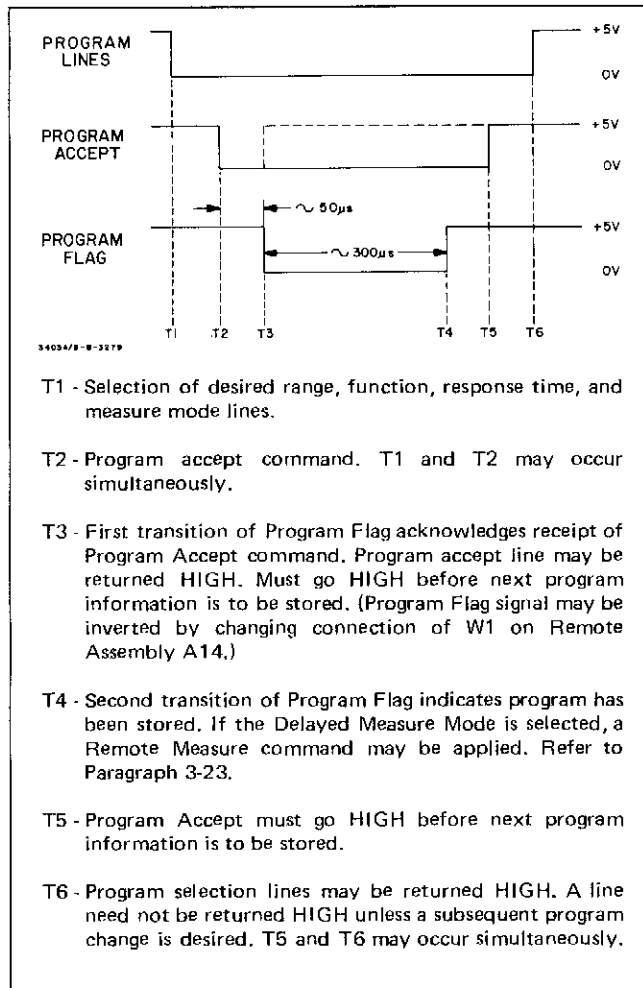


Figure 3-5. Remote Programming Sequence.

### 3-51. Remote Programming.

3-52. The remote mode of operation may be selected either by the front panel switch or by a continuous LOW connection at the rear panel connector, J3. Either method enables remote programming and disables the front panel function range, and response time controls. Programming of Range, Function, Response Time, and Measure Mode must be entered and stored in the instrument by application of a Program Accept command. The remote programming sequence is shown in Figure 3-5. Autorange and Non-Delayed Measure Mode must not be programmed at the same time, or the instrument will not autorange.

### 3-53. Remote Measurement Control.

3-54. The remote measurement rate is affected by the programmed response time and measurement mode, and is discussed in Paragraph 3-22.

### 3-55. Output Signals.

3-56. **Program Flag.** This signal is a positive- or negative-going pulse between 0 V and +5 V. The pulse polarity is selected by a connection, W1, on the Remote Assembly, A14. The first transition acknowledges receipt of a Program Accept command, and the second transition indicates that the program is stored.

3-57. **Print Command and Data Flag.** These signals are described in Paragraph 3-40.

### 3-58. dB DISPLAY.

3-59. Option 006 provides a choice of either a voltage or dB display. The dB display is normally calibrated in dBV ( $1 \text{ V} = 0 \text{ dB}$ ). However, the front panel dB CAL screwdriver adjustment allows calibration in dBm  $600 \Omega$  ( $.7746 \text{ V} = 0 \text{ dB}$ ). To accomplish dBm  $600 \Omega$  calibration, set the 3403C FUNCTION to AC dB, RANGE to 1 V, and apply an accurate .7746 V at 100 Hz from an ac calibrator (-hp- 745A). Adjust the dB CAL control for a display of 00.0 dB. A variable dB REFERENCE control is provided with which the reference level may be shifted downward at least 10 dB for comparison measurements. This range of reference levels includes dBm  $75 \Omega$  and dBm  $50 \Omega$ .

## SECTION IV

### THEORY OF OPERATION

#### 4-1. INTRODUCTION.

4-2. A block diagram of the Model 3403C is shown in Figure 7-2. The following paragraphs give a brief description of circuit operation.

#### 4-3. AC CONVERTER ASSEMBLY.

#### 4-4. Attenuator.

4-5. In addition to input signal attenuation, the Attenuator provides frequency compensation on all ranges. When a dc function is selected, the input blocking capacitor is bypassed by a reed relay. Attenuation ratio is also selected by reed relays. These relays are driven by signals which are initiated by the front panel switches or by optional autorange or remote program circuits. Table 4-1 shows attenuator and amplifier gains for each range.

#### 4-6. Input Amplifier.

4-7. The Input Amplifier circuit is contained in one integrated circuit package, except for a feedback amplifier circuit which is used on all ac functions. This feedback amplifier is connected into the circuit by Field Effect Transistor (FET) switches. On the .01 V range, the Input Amplifier gain is 50 and an additional feedback capacitor is switched into the circuit. On all other ranges the gain is 5. There are two signal outputs from the Input Amplifier; one goes to the rms Converter Amplifier, and the other by-passes the Converter and is used when the "dc only" function is selected.

#### 4-8. Converter Amplifier.

4-9. A specially designed dual thermocouple called a thermopile is used in the Converter Amplifier. Each half of the thermopile consists of 30 thermocouples in series, resulting in high sensitivity. The low thermal mass of the thin-film construction permits rapid response to input

signal changes. One half of the dual thermocouple converts the ac to dc, and the other half is used in the dc feedback loop of the Converter Amplifier. Since a thermocouple is a non-linear device (output proportional to power input), the feedback offsets the non-linearity of the input to the amplifier, resulting in a linear dc output. Using the dual unit in this manner also minimizes the effect of ambient temperature drift. An integrating ac feedback loop is employed to filter out the ripple in the converter thermocouple output. A square-law amplifier in this loop offsets the non-linearity of the thermocouple output to provide a linear integrating action. Integrating capacitance is increased when Slow Response Time is selected, to permit measurement of signals down in 2 Hz.

#### 4-10. Thermopile Protection.

4-11. The Converter Thermopile is extremely sensitive to overload voltages and is easily destroyed. Consequently, a means of protection has been devised which cuts off the input to the thermopile when overload conditions exist. This is accomplished by removing the supply voltages to the output stage of the Input Amplifier. A comparator amplifier senses the voltage drop across a resistor in the Converter Amplifier integrating feedback loop. If this voltage drop indicates an excessive input, the comparator activates the protection circuit. The protection circuit is also employed when switching to Slow Response Time, since additional capacitance added to the integrating circuit may result in an overload to the thermopile. The protection circuit also prevents a surge through the thermopile at instrument turn-on.

#### 4-12. DC Amplifier.

4-13. The DC Amplifier has a gain of 4 on the .01 V and .1 V ranges, and a gain of 2 on all other ranges. However, this circuit is designed primarily as a filter amplifier. The DC Amplifier output is  $\pm 1$  V for a full-range input in the "dc only" function, and +1 V for full range input on all

Table 4-1. Attenuator and Amplifier Gain.

RANGE	APPROXIMATE GAIN				TOTAL GAIN OUT/RMS IN
	ATTEN- UATOR	INPUT AMP	CONVERTER AMP	DC AMP	
.01 V	.5	50	1	4	100
.1 V	.5	5	1	4	10
1 V	.1	5	1	2	1
10 V	.01	5	1	2	.1
100 V	.001	5	1	2	.01
1000V	.0001	5	1	2	.001

ranges when an ac function is selected. Final gain adjustments for all ranges are made in the feedback circuit of this amplifier.

**4-14. Converter Logic.**

4-15. The Converter Logic circuits translate the Range, Function and Response Time selection signals into voltages which drive the proper reed relays and FET switches.

**4-16. CONNECTOR ASSEMBLY.**

4-17. The Connector Assembly carries signals and supply voltages between the AC Converter Assembly and the Master Board Assembly. In addition, comparator amplifiers on this assembly determine when the input signal is above or below the proper level for the range selected, and activate uprange or downrange indicators through logic circuits located on the Master Board. These signals are also used to initiate autoranging if the instrument incorporates this option. Buffer amplifiers are used in the range and function control lines.

**4-18. DIGITAL PANEL METER.**

4-19. Figure 4-2 is a block diagram of the Digital Panel Meter. The following paragraphs describe operation of the various circuits shown.

**4-20. Measurement Technique.**

4-21. The Digital Panel Meter uses the dual-slope integration method of analog-to-digital conversion. The integrator charges toward a voltage proportional to the input voltage for a fixed time as shown in Figure 4-1. Consequently, the charging rate and resulting charge are proportional to the input voltage. The integrator is then discharged at a fixed rate toward a known reference voltage. Since the discharge rate is constant, the time required to

discharge to zero is proportional to the amplitude of the charge (and the input voltage). The counters accumulate the number of clock pulses received between the start of discharge and zero detect, and this number is displayed as the measurement amplitude.

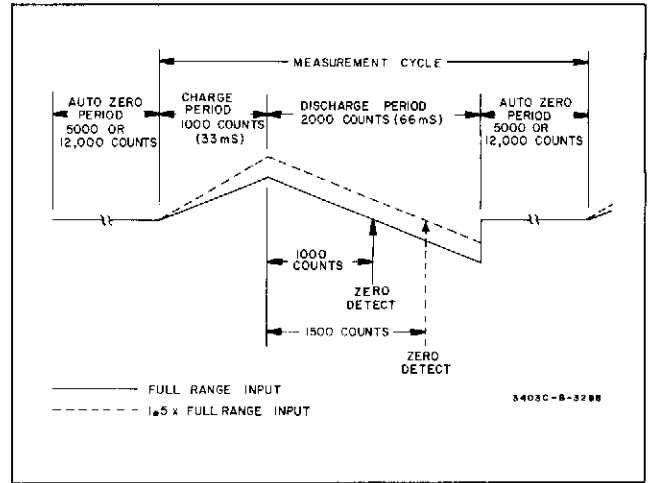


Figure 4-1. Panel Meter Measurement Cycle.

**4-22. Analog Circuits.**

4-23. The analog circuits consist of an integrating amplifier and a zero detect comparator amplifier, together with the FET switches needed to control operation of these amplifiers. Simplified diagrams of the analog circuits in the three states required for measurement are shown in Figure 4-3.

4-24. **Charge Period.** Prior to the beginning of the charge period, the integrating capacitor is discharged and the inputs to both amplifiers are at zero. At the start of the charge period, the panel meter input (divided by 10) is applied through switch Q107 to the non-inverting input of the integrator. Switch Q112 is also closed, allowing the integrating capacitor to charge. The charge period lasts for approximately 33 ms, or 1000 cycles of the panel meter

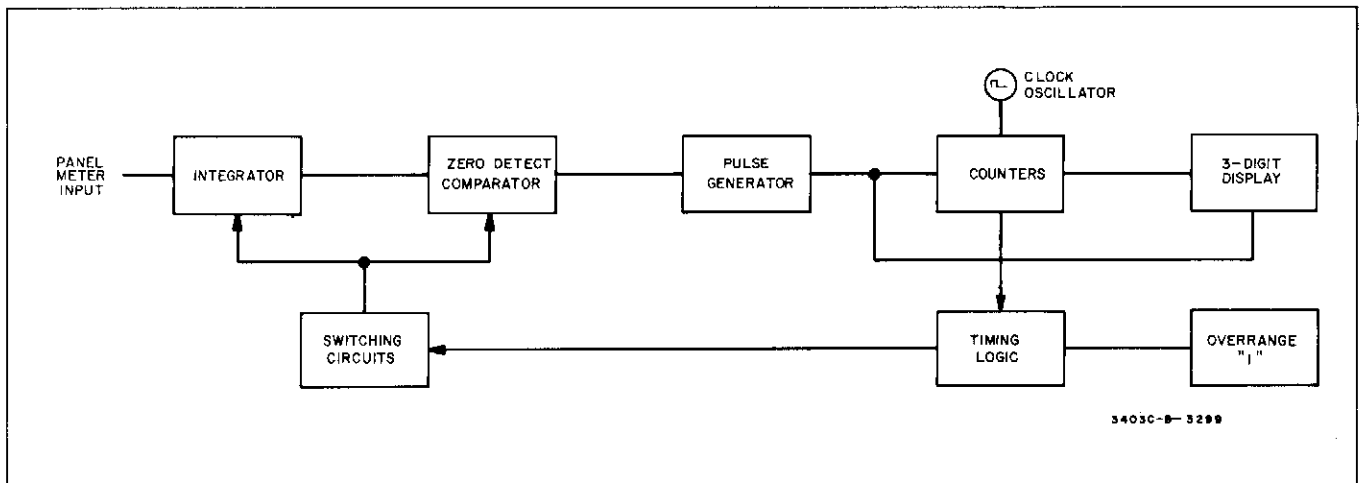


Figure 4-2. Panel Meter Block Diagram.

clock. The zero detect amplifier operates in a very high-gain configuration during the charge and discharge periods; consequently, a very small input voltage causes its output to be saturated. This amplifier is also non-inverting.

**4-25. Discharge Period.** At the end of the charge period, Q107 opens and a reference voltage, opposite in polarity to the input voltage, is applied to the integrator through Q108 or Q109. The integrating capacitor then discharges at a linear rate. When the voltage across the capacitor reaches zero, the output of the zero detect amplifier saturates in the opposite direction, initiating a transfer pulse which causes the count at this point to be transferred to the display. The discharge period continues for a total of 2000 clock cycles.

**4-26. Auto Zero Period.** Following the discharge period, switches Q110, Q111 and Q113 close, placing both amplifiers in a unity-gain configuration and grounding the input to the integrator. This discharges the integrating capacitor. Any offset present in the output of the integrating amplifier is stored on the auto zero capacitor; then, during the following measurement, this voltage is applied to the inverting input to the integrator and effectively cancels the amplifier offset.

**4-27. Clock and Counters.**

**4-28.** A free-running multivibrator provides a 30 kHz clock signal to a series of three decade counters, which count on the negative-going edge of the clock pulse. The clock

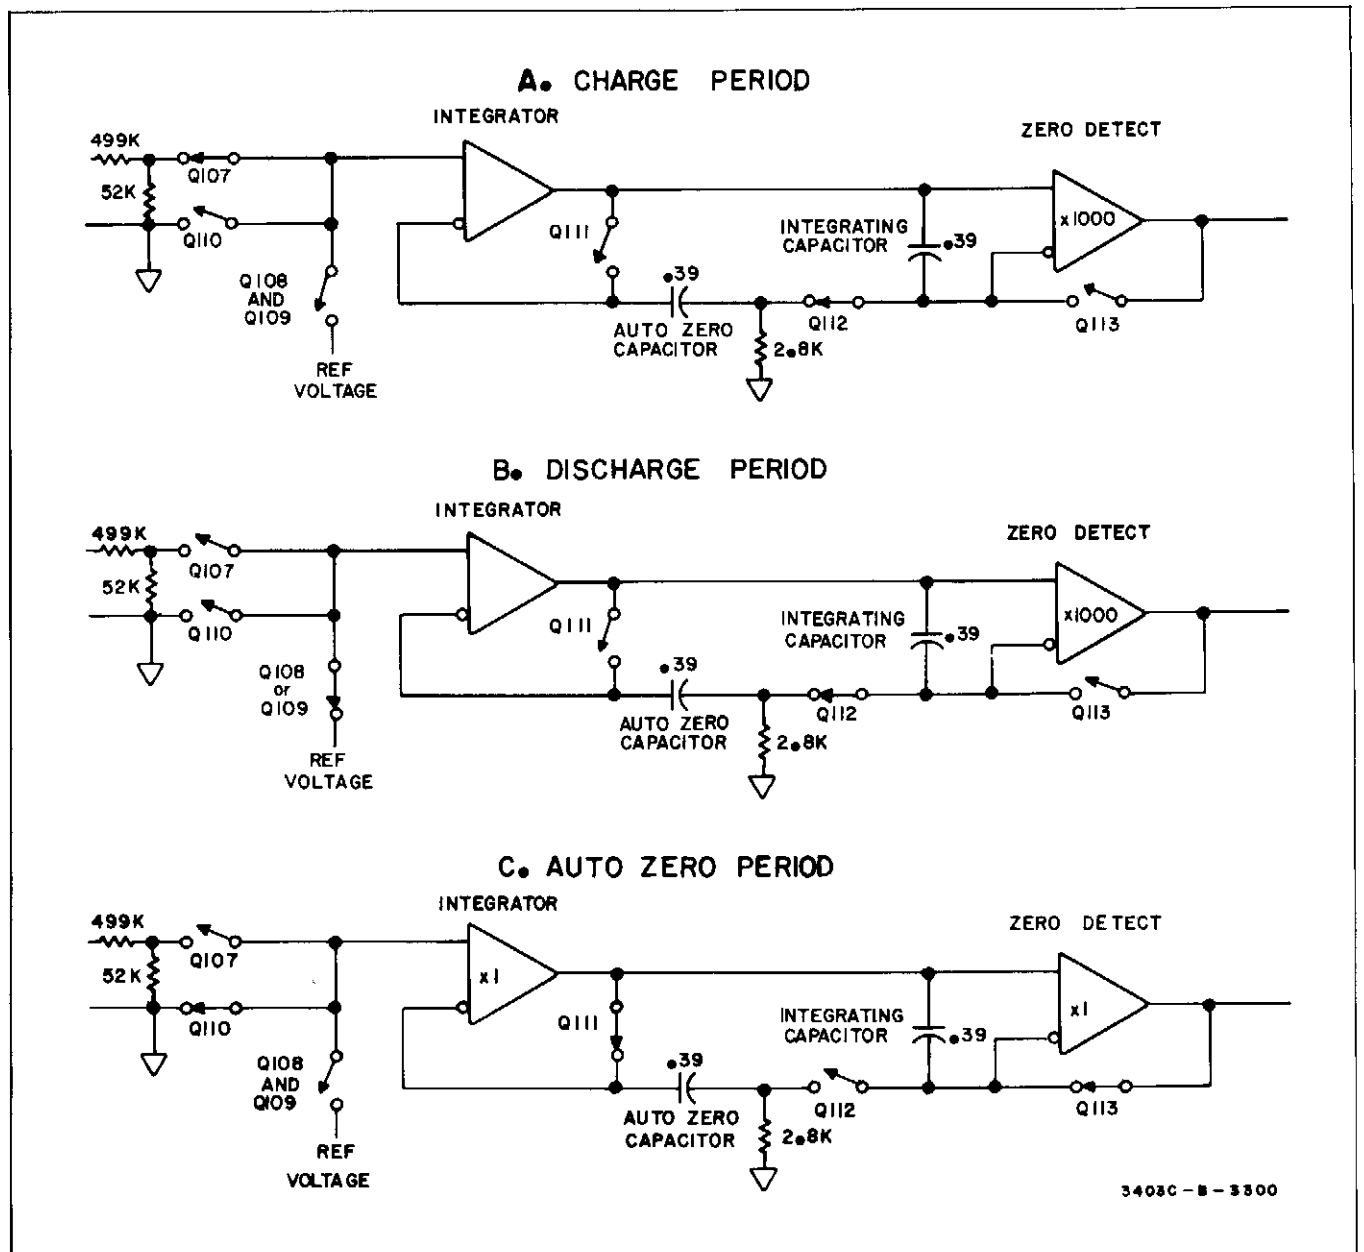


Figure 4-3. Panel Meter Analog Circuits.

operates continuously, and the signal to the counters is interrupted only during a transfer pulse. This prevents a count uncertainty that would arise if the transfer pulse occurred at the same time as the negative-going edge of the clock pulse. Counting is also continuous (unless interrupted by the 1  $\mu$ s transfer pulse) and the D output pulse from the third, or hundreds, counter is used to clock the timing logic. This pulse occurs at the 1000th count. The next clock pulse sets all three counters to zero. The discharge period begins at one of these points, and the count accumulated between that point and zero detect is transferred to the display.

#### 4-29. Display.

4-30. Three dot-matrix light-emitting diode (LED) units make up the three-digit display, and the overrange "1" is in a fourth unit which also contains the polarity symbol. The three units decode the BCD count information to light the proper LED dots in the matrix. The transfer pulse produced at the time of zero detect enables the information to be transferred to the matrix. If zero detect occurs after the first 1000 counts in the discharge period, a signal from the timing logic causes the overrange "1" to light. If the 3403C input is above 190 % of range or below 17 % of range, a signal from the A4 logic circuits causes the three-digit to blank.

#### 4-31. Polarity Display.

4-32. If AC or DC + AC volts function is selected, a signal from the A4 logic circuits blanks the polarity display. When the DC function is selected, the horizontal bar of the polarity symbol is lit continuously. If the polarity of the zero detect amplifier during the charge period is positive, the vertical bar also lights. The zero detect amplifier output is inverted by a clipper circuit and applied to the polarity flip-flop. This is a D flip-flop which is clocked at the end of the charge period, allowing the polarity display to change only at this time.

#### 4-33. Logic Timing.

4-34. **Timing Circuits.** Timing of the measurement cycle is controlled by the timing counter and a BCD-to-decimal decoder. The timing counter is a synchronous 4-bit counter which triggers on the positive-going edge of the clock pulse. A clock pulse received while the Clear input is LOW resets all four outputs to LOW. A LOW level at the Preset input also disables the counter, and a clock pulse during this time presets the four outputs to agree with the data inputs. A number of gates are also associated with the counter and decoder.

4-35. **Internal Trigger Operation.** Figure 4-4 shows the significant timing counter and decoder signals during a complete measurement period when the Response Time control is set to Fast. The D output of the hundreds decade counter is inverted and applied to the clock input of the timing counter, clocking this counter at the end of every

1000th count received by the decade counters. At the end of the auto zero period, all four counter outputs are set to zero (LOW). This results in a LOW Charge output from the decoder which switches the integrator to the charge state. The timing counter then counts the next two clock pulses and the decoder outputs switch the integrator to the discharge state for these two counts. During the last half of the discharge period, the L Discharge 2 signal causes the counter Preset input to be LOW, through AND gate U208B (see Figure 7-13). The next clock pulse presets the counter, which then counts in a binary manner during the auto zero period. When the D output goes HIGH, this output (through NAND gate U509A) clears the counter to zero at the next clock pulse, beginning another charge period. If the Response Time control is set to Slow, NAND gates U509A, B, and C are disabled and the counter does not receive a Clear signal. In this case, the timing counter continues counting through 1111 to 0000 to begin another charge period. This lengthens the auto zero period, making the total measurement cycle 1/2 second.

4-36. **External Trigger Operation.** When the remote control Interface Hold line is held LOW, the Panel Meter waits in the auto zero state until a Measure command is received. A Measure command causes the Clear input to the timing counter to be LOW. A Measure command also resets the three decade counters to the "9" state so that the next clock oscillator pulse becomes the 1000th count, providing a clock pulse to the timing counter. This clears the timing counter to zero, beginning a charge period. At the end of the discharge period, the L Discharge 2 signal causes a LOW Preset input to the counter. L Hold again goes LOW, continuing the LOW Preset input. The instrument is again in the auto zero state, waiting for another Measure command.

#### 4-37. FET Switch Drive.

4-38. Gated signals from the timing logic and the polarity flip-flop provide drive signals to the FET switches in the integrator and zero detect circuits. The drive signals turn on the FET switches at the proper times during the measurement cycle (see Paragraph 4-22).

#### 4-39. LOCAL CONTROL.

4-40. Local selection of function, range, or response time is made by switch contact to ground. This contact to ground is made through the output stage of integrated circuit inverters. If remote program operation has been selected, the output transistors of these inverters are turned off, disabling the front panel switches.

#### 4-41. REMOTE PROGRAMMING OPTION.

4-42. Range, function, and response time may be selected remotely if the instrument has the Remote Control option. Programming of range and function is accomplished by contact to ground of coded program lines. Decoding is done on the Remote Assembly A14. A "Program Accept" signal is required to initiate or change a program. Range, function

and response time programming is stored until a succeeding Program Accept command is applied. When the range switch is set to Remote, the Automatic sampling circuit is disabled, and an external trigger signal must be applied.

**4-43. DISPLAY LOGIC.**

**4-44. +/- Blanking.**

4-45. When AC or DC + AC Volts function is selected, the +/- Blank signal is HIGH, disabling the polarity display. However, if either dB function is selected, the +/- Blank signal is LOW, enabling the polarity symbol to indicate whether the measurement is above or below 0 dB.

**4-46. Decimal Location.**

4-47. The range selection signals are gated in such a manner that the correct decimal is lit for each voltage range. No decimal point is used for the 1000 V range. If a dB function is selected, the third, or right hand decimal is forced to remain on.

**4-48. Up/Down Range Indication.**

4-49. The Out of Range Detectors on the Connector Assembly are adjusted so that the Uprange line goes LOW if the input is greater than approximately 190 % of range, and the Downrange line goes low if the input is less than approximately 17 % of range. If either condition exists, the RNG annunciator will light, along with the up or down arrow to indicate the need to select a higher or lower range. If the peak value of a non-symmetrical input signal is

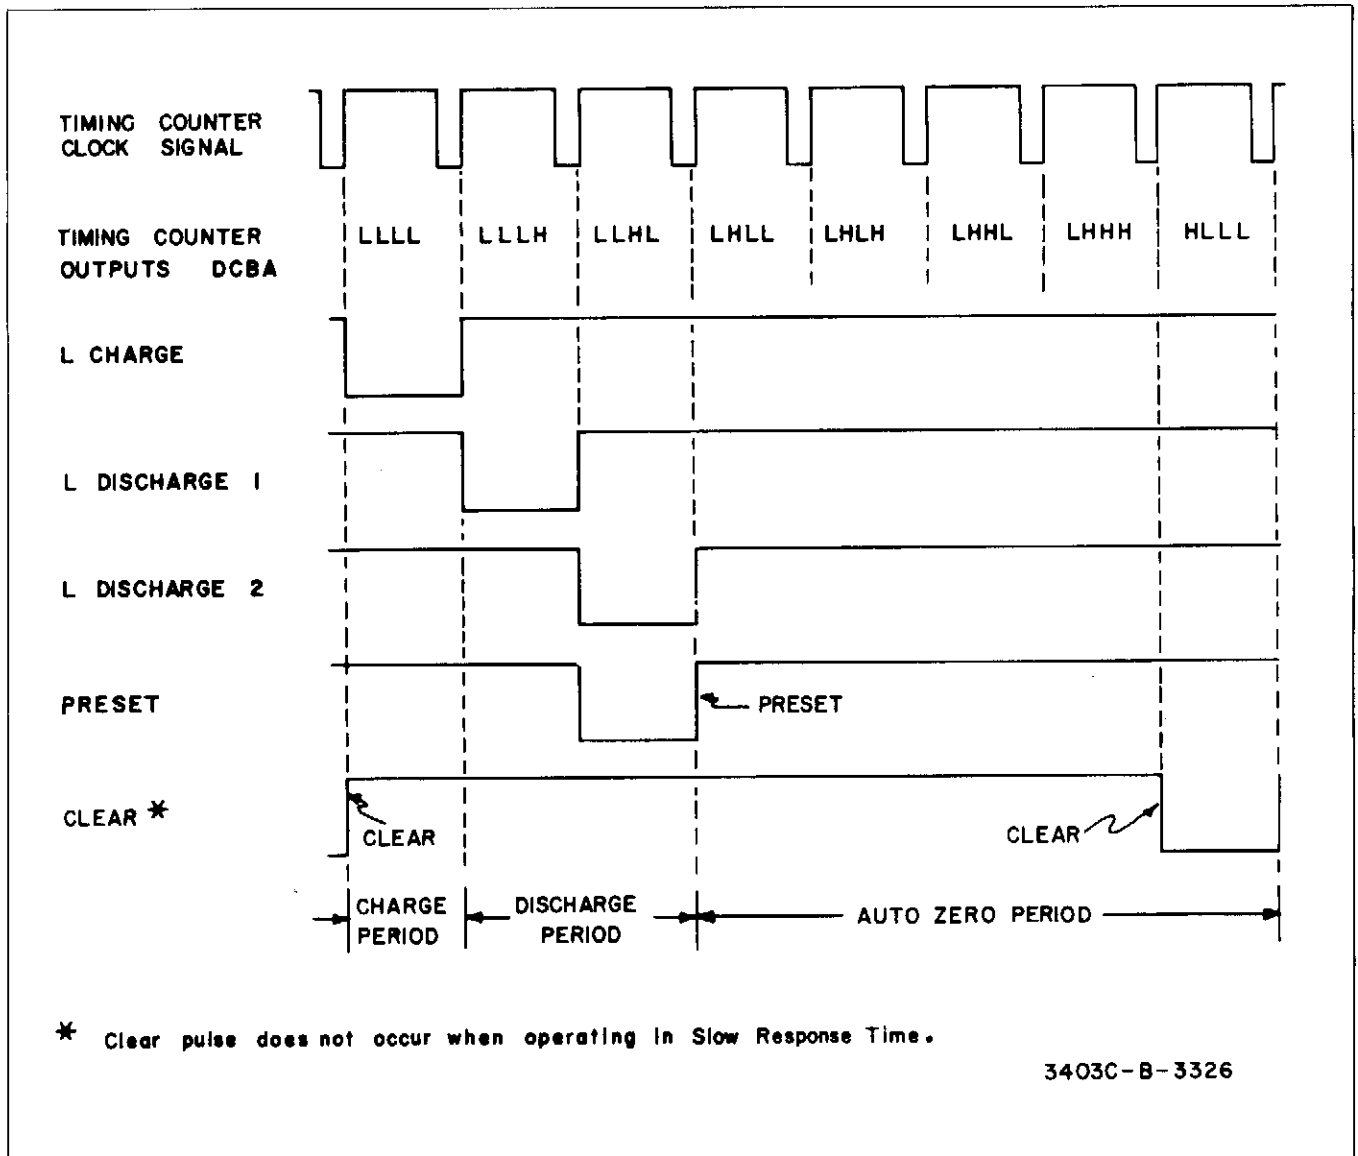


Figure 4-4. Timing Counter and Decoder Signals.



greater than the rms value to the extent that the peaks are too high for the range in use, a detection circuit in the Converter Amplifier produces a Crest Factor signal. This signal input to the range indication logic may cause the three least significant digits to blank and the Uprange arrow to light. If the range and function switches are set to .01 V DC, the RNG annunciator and both arrows will light.

#### 4-50. dB Display.

4-51. The dB Adder Control logic provides control signals to the dB Adder circuit on the Log Converter Assembly if the instrument has the dB Option 006. This adds or subtracts 20, 40 or 60 dB, according to the range selected.

#### 4-52. AUTORANGE OPTION.

4-53. When Autorange is selected, an Autorange Clock provides pulses to Uprange and Downrange gates. If either of these gates is enabled by an autorange (Uprange or Downrange) signal, the clock pulse is allowed to pass through to an Up-Down Counter. Outputs from the counter are applied to a Decoder, which selects the correct range. The Counter Preset Gate "clears" the counter to the 1000 V range when a Crest Factor signal is received. The minimum Autorange Clock period is 1 second when Fast Response Time is selected, and 10 seconds for Slow Response Time.

4-54. If the instrument is equipped with Option 003, autorange may be selected remotely. In this case, since automatic sampling is disabled during remote operation, the autorange clock pulse is also applied to a gate which initiates a measurement after the correct range has been reached. Remote programming of range is accomplished by forcing the Up-Down Counter into the correct state.

#### 4-55. DIGITAL OUTPUT OPTION.

4-56. Between the start of the discharge period and the zero detect point, the Digital Panel Meter clock oscillator signal is gated out to the data counters on the Input/Output assembly, A15. The Data Flag output signal indicates when valid data is available. The data counting circuits consist of three decade counters and a J-K flip-flop. The L Charge signal from the Panel Meter resets the counters and flip-flop. BCD coded range, function and polarity and overload information is also provided. Output information is 1-2-4-8 BCD coded, LOW true.

4-57. The output of the Log Converter Output Amplifier is 0 V for a full-range input on any range. The Add/Subtract and 20/40 Amplifier circuits add either a positive or negative voltage to this output to provide the correct display. This voltage is  $\pm 200$  mV per range for each range

above or below the 1 V range. Signals from the A4 dB Adder Control logic determine whether the added voltage is positive or negative, and also determine the magnitude of this voltage.

#### 4-58. dB OPTION.

4-59. The output of the AC Converter is a dc voltage which is directly proportional to the rms value of the input signal. When a dB function is selected, the Log Converter output is a dc voltage having a logarithmic relationship to the input, enabling the Digital Panel Meter to display the measurement in decibels. Normally, the amplifier is adjusted so that 1 V input = 0 dB. However, the front panel dB CAL control may be adjusted for a dBm (0 dBm = 0.775 V) indication.

#### 4-60. POWER SUPPLIES.

##### 4-61. Analog Circuit Supplies.

4-62. The AC Converter, Log Converter, and the analog circuits in the Digital Panel Meter are powered by regulated + and - 12 V supplies. Sensing terminals for these regulators are located in the AC Converter Assembly. The + and - 12 V supplies are referenced to analog ground, and are voltage regulated and current limited.

##### 4-63. Digital Circuit Supplies.

4-64. Regulated voltages of +12 V, -12 V, +5 V, and -10 V are supplied to the digital circuits. In addition, a supply of approximately +4 V is provided for the light emitting diodes in the display. The +4 V supply is taken from the emitter of the series pass transistor of the +5 V supply, and is not current limited. The -10 V, +12 V, -12 V, and +5 V supplies are voltage regulated and current limited. An over-voltage protection circuit is added to the +5 V supply for the protection of the integrated circuits in the instrument. The digital circuit supplies are referenced to digital ground.

#### 4-65. GROUND CIRCUITS.

##### 4-66. Standard Instrument Ground.

4-67. In the standard 3403C, the analog and digital ground circuits are connected together. The connection is made on the Standard Connector Assembly A7, as shown in Figure 4-5. Also, analog ground is normally connected to chassis ground through S6 on the AC Converter Assembly.

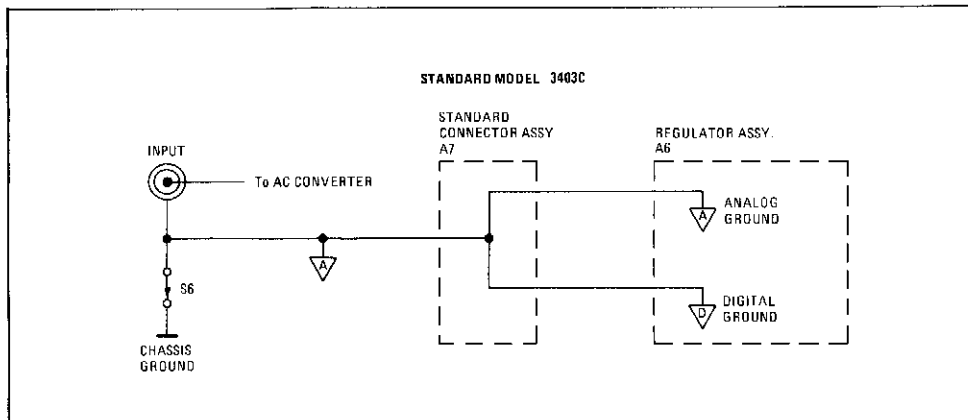


Figure 4-5. 3403C Ground Circuit.

## SECTION V MAINTENANCE

### 5-1. INTRODUCTION.

5-2. This section contains information necessary to maintain the Model 3403C True RMS Voltmeter. The following paragraphs describe the Performance Checks, Adjustment Procedures, Servicing and Troubleshooting. Schematic diagrams are in Section VII.

### 5-3. TEST EQUIPMENT REQUIRED.

5-4. Recommended test equipment for maintaining and checking the performance of the 3403C is listed in Table 5-1. Test instruments other than those listed may be used if their specifications equal or exceed the required characteristics.

### 5-5. PERFORMANCE CHECK PROCEDURE.

5-6. Use the following procedures to verify proper operation of the Model 3403C True RMS Voltmeter. The 3403C and test equipment should be operated at a line voltage of 115 Vac (or 230 Vac) and ambient temperature of 20° C to 30° C unless otherwise stated. It is recommended that the performance of the 3403C be checked upon receipt and at regular intervals thereafter. A Performance Check Card is provided at the rear of this section for recording the performance of the 3403C. This card may be removed from the manual and used as a permanent record of the incoming inspection or of a routine performance check. If the 3403C is found to be out of

specifications at any point, refer to the Adjustment Procedures or to the Troubleshooting Information. Allow sufficient warm-up for the 3403C and test equipment before proceeding with the Performance Checks.

### 5-7. AC VOLTAGE ACCURACY CHECKS.

#### 5-8. Mid-Band Frequency Measurements.

5-9. The ac voltage measurement accuracy of the 3403C at frequencies between 10 Hz and 100 kHz may be checked using an ac calibrator (-hp- 745A) and a high voltage amplifier (-hp- 746A) as the signal source. Use the input voltages shown in Table 5-2 to verify the ac voltage accuracy at the frequencies listed. The display should be within the limits given for each measurement.

#### 5-10. 100 kHz to 10 MHz Measurements.

5-11. AC voltage accuracy at frequencies between 100 kHz and about 10 MHz may be checked using the test set-up shown in Figure 5-1 and the test equipment recommended in Table 5-3. Recommended test equipment models are: -hp- Model 8601A Generator/Sweeper; Optimization Model PA-25 Power Amplifier; -hp- 11051A 0.45 V Thermal Converter; -hp- 11050A 1 V Thermal Converter; -hp- 11049A 3 V Thermal Converter; Englehard Model 36850 or Holt Model 6A, 11 10 V and 100 V Thermal Converters;

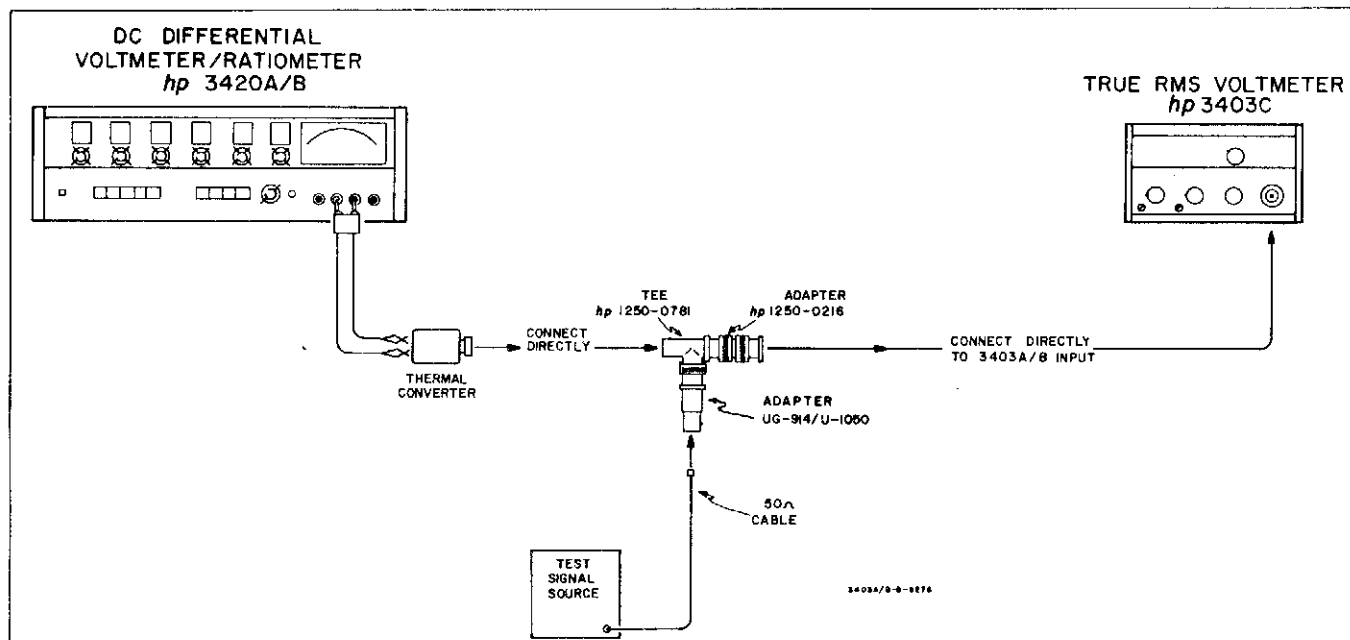


Figure 5-1. High Frequency Voltage Accuracy Check.

Table 5-1. Required Test Equipment.

Instrument Type	Required Characteristics	Use	Recommended Model
DC Voltage Standard	Voltage: 1 mV to 1000 V	Performance Checks Adjustments Troubleshooting	-hp- Model 740B DC Standard/ Differential Voltmeter
AC Calibrator/High Voltage Amplifier	Frequency: 10 Hz to 100 kHz Output Level: 1 mV to 1000 V Accuracy (mid-band): $\pm 0.1\%$ Voltage Stability: $\pm 0.02\%$ for six months	Performance Checks Adjustments Troubleshooting	-hp- Model 745A AC Calibrator/ -hp- Model 746A High Voltage Amplifier
Function Generator	Frequency: 5 Hz minimum Output Level: 10 V rms sine wave	Performance Checks	-hp- Model 3310A Function Generator
Test Oscillator	Frequency: 1 MHz to 10 MHz Output Level: 3 V rms Amplitude Flatness: $\pm 0.25\%$ (1 V and 3 V output)	Performance Checks	-hp- Model 652A Test Oscillator
AC Amplifier	Output Voltage: 10 V to 100 V Frequency: 100 kHz to 1 MHz Voltage Gain: 20 Output Power: 25 VA	Performance Checks	Optimization Inc. Model PA-25 Power Amplifier
Signal Generator	Frequency: 100 kHz - 100 MHz Output Level: 2 V rms	Performance Checks Adjustments	-hp- Model 8601A Generator/ Sweeper
DC Differential Voltmeter	Range: 1 V Resolution: 1 $\mu$ V	Performance Checks Adjustments	-hp- Model 3420A/B DC Differential Voltmeter
Thermal Converters or Thermal Transfer Standards	Accuracy: Correction Factor Chart to 100 MHz  Voltages: 450 mV 1 V 3 V 10 V 100 V	Performance Checks Adjustments	-hp- Model 11051A -hp- Model 11050A -hp- Model 11049A Holt Model 6A, 11; or Englehard Model 36850
DC Digital Voltmeter	Voltage Range: 10 mV to 10 V Resolution: 0.01 mV	Adjustments Troubleshooting	-hp- Model 3480A/3482A Digital Voltmeter/DC Range Unit
Oscilloscope	Bandwidth: dc to 10 MHz Sweep: 0.2 $\mu$ s to 5 s/div Sensitivity: 1 mV/div	Troubleshooting	-hp- Model 140A/1402A/1423A Oscilloscope
Capacitor	Capacitance: 1.0 $\mu$ F Voltage: 20 vdcw	Performance Checks	-hp- Part No. 0160-2611
Resistors	Resistances: 1 k $\Omega$ $\pm 10\%$ 1/4 W 100 $\Omega$ $\pm 10\%$ 1/2 W 39 $\Omega$ $\pm 10\%$ 1 W	Performance Checks Troubleshooting	-hp- Part Nos. 0684-1021 0687-1011 0698-5083
Printed Circuit Extender Board	20-pin (2 x 10)	Adjustments (Option 006)	-hp- Part No. 5060-0091
Digital Recorder	Code and Standard Print Wheel: -1248	Performance Checks	-hp- Model 5055A Digital Recorder
Printer Cable	36-pin to 50-pin	Performance Checks	-hp- 11184A Printer Cable
BNC Connectors and Adapters	Tee Adapter, male to male Adapter, female to female	Performance Checks Adjustments	-hp- 1250-0781 -hp- 1250-0216 Amphenol, UG-914/U-1050

Table 5-2. Mid-Band AC Voltage Checks.

Function	Range	Test Signal		Maximum Display Error	Test Signal Source
		Voltage	Frequency		
AC	.01 V	10 mV	100 Hz	± 5 counts	AC Calibrator
AC	.01 V	10 mV	100 kHz	± 5 counts	
AC	.1 V	20 mV	100 kHz	± 4 counts	
AC	.1 V	100 mV	1 kHz	± 4 counts	
AC	1 V	0.5 V	200 Hz	± 3 counts	
AC	1 V	1 V	20 kHz	± 4 counts	
AC	10 V	10 V	100 kHz	± 4 counts	
AC	10 V	15 V	100 Hz	± 5 counts	
AC	100 V	20 V	50 Hz	± 2 counts	
AC	100 V	100 V	50 kHz	± 4 counts	
*DC + AC	100 V	100 V	20 Hz	± 6 counts	
*DC + AC	1 V	1 V	10 Hz	± 6 counts	
*DC + AC	.1 V	100 mV	20 Hz	± 10 counts	
AC	1000 V	1000 V	100 Hz	± 5 counts	AC Calibrator and High Voltage Amplifier
AC	1000 V	1000 V	10 kHz	± 5 counts	

\* Slow response time

-hp- Model 3420A/B DC Voltmeter/Ratiometer. Use the following procedure for each measurement in Table 5-3. The measurement uncertainty of the thermal converter must be taken into account in each measurement.

- a. Set FUNCTION to AC. Select proper range. Set RESPONSE TIME to FAST.
- b. Set signal generator frequency to 100 kHz and adjust output level to obtain correct 3403C display according to voltage measurement to be checked.
- c. Adjust dc differential voltmeter for null indication.
- d. Change signal generator to frequency to be checked.

e. Adjust signal generator output level to return dc differential voltmeter to null indication.

f. 3403C display should be within limits shown for each check.

**5-12. 10 MHz to 100 MHz Measurements.**

5-13. Making voltage measurements in the upper frequency range of the 3403C involves significant problems that are not present at the frequencies covered by other general purpose ac voltmeters. At high frequencies, any measurement involves transmission line problems of impedance mismatch, standing waves, etc. Even minor variations in the hardware connections can cause significant differences. For these reasons, even the National Bureau of Standards

Table 5-3. 100 kHz to 10 MHz Checks.

Range	Test Signal		Maximum Display Error	Test Signal Source	Other Equipment Required
	Voltage	Frequency			
.1 V	100 mV	1 MHz	± 22 counts	Signal Generator	0.45 V Thermal Converter, DC Differential Voltmeter
.1 V	100 mV	10 MHz	± 22 counts		
1 V	1 V	2 MHz	± 12 counts	Signal Generator	1 V Thermal Converter, DC Differential Voltmeter
1 V	1 V	8 MHz	± 12 counts		
10 V	3 V	500 kHz	± 4 counts	Signal Generator	3 V Thermal Converter, DC Differential Voltmeter
10 V	3 V	5 MHz	± 5 counts		
10 V	10 V	1 MHz	± 12 counts	Signal Generator, Power Amplifier	10 V Thermal Converter, DC Differential Voltmeter
10 V	10 V	5 MHz	± 12 counts		
100 V	100 V	500 kHz	± 12 counts	Signal Generator, Power Amplifier	100 V Thermal Converter, DC Differential Voltmeter
100 V	100 V	1 MHz	± 12 counts		

calibration of the thermal converters used as references for the 3403C accuracy checks includes an uncertainty of up to  $\pm 1.5\%$  when measured in a specific hardware configuration.

5-14. For optimum accuracy, high frequency measurements should be made using matched source, load, and cable impedances. Since the 3403C input is unterminated, the most satisfactory configuration is shown in Figure 5-1, where the reference thermal converter is electrically as close as possible to the 3403C input. This is the method used at the factory for calibration and test of the instrument. Because of the difficulties described in Paragraph 5-13, the accuracy specifications at frequencies above about 10 MHz are defined using the input hardware connections shown. Measurement in any other configuration can be expected to give different results.

5-15. The .1 V and 1 V ranges should be checked at the frequencies shown in Table 5-4, using the test set-up and hardware configuration shown in Figure 5-1. The recommended signal generator is -hp- Model 8601A Generator/Sweeper, and the other equipment is the same as listed in Paragraph 5-11. Use the procedure in Paragraph 5-11 for each check.

#### 5-16. Low Frequency Measurements.

5-17. The accuracy of the Model 3403C may be checked on the .1 V, 1 V, and 10 V ranges at frequencies down to 5 Hz using a function generator (-hp- Model 3310A) as a signal source. The thermal converter cannot be used at frequencies below 5 Hz. Connect the equipment as shown in Figure 5-1 and use the following procedure, which checks the 1 V range as an example.

- a. Set 3403C FUNCTION to AC VOLTS, RESPONSE TIME to SLOW, RANGE to 1 V.
- b. Set function generator frequency to 100 Hz and adjust output level to obtain 3403C display of 1.000 V.
- c. Adjust dc differential voltmeter for null indication.
- d. Change frequency to 5 Hz and adjust function generator output level for null indication on differential voltmeter.

e. Display should be  $1.000\text{ V} \pm 6$  counts.

f. The .1 V and 10 V ranges may be checked in the same manner.

#### 5-18. dB ACCURACY CHECK (Option 006).

5-19. The input to the Log Converter is the dc output of the AC Converter, and is +1 V for a full-range input on any range. Since the accuracy and flatness of the AC Converter have been verified by the preceding checks, the dB measurement accuracy may be verified by checking the calibration and linearity of the Log Converter and the operation of the adder circuit in the Digital Panel Meter. An ac calibrator and a high voltage amplifier are required for this check.

a. Set FUNCTION to AC dB, RANGE to 1 V, dB REFERENCE control fully counterclockwise to CAL position, RESPONSE TIME TO FAST.

b. Connect ac calibrator to 3403C input and set calibrator output to 1.0000 V and 100 Hz. 3403C display should be -00.2 dB to +00.2 dB. If not, adjust front panel dB CAL screwdriver adjustment for display of 00.0 dB, with polarity symbol alternating between + and -.

c. Select ranges and input voltages listed in Table 5-5, leaving ac calibrator frequency set at 100 Hz. 3403C display should be within limits shown in each case.

d. Reduce ac calibrator output and disconnect.

#### 5-20. DC VOLTAGE ACCURACY CHECK.

5-21. A dc standard (-hp- 740B) is required for this check.

a. Set 3403C FUNCTION to DC VOLTS, RANGE to .1 V, RESPONSE TIME to FAST. Short input and adjust front panel DC ZERO control.

b. Connect dc standard to 3403C input and adjust standard output voltage to +.100000 V. 3403C display should be +99.2 mV to +100.8 mV.

Table 5-4. 10 MHz to 100 MHz Checks.

Range	Test Signal		Maximum Display Error	Test Signal Source	Other Equipment Required
	Voltage	Frequency			
.1 V	100 mV	20 MHz	$\pm 22$ counts	Signal Generator	0.45 V Thermal Converter, DC Differential Voltmeter
.1 V	100 mV	40 MHz	$\pm 52$ counts		
.1 V	100 mV	100 MHz	$\pm 102$ counts		
1 V	1 V	20 MHz	$\pm 22$ counts	Signal Generator	1 V Thermal Converter, DC Differential Voltmeter
1 V	1 V	40 MHz	$\pm 52$ counts		
1 V	1 V	100 MHz	$\pm 102$ counts		

Table 5-5. dB Accuracy Check.

3403B Range	Input Voltage	Display Limits
1 V	0.31620 V	- 09.8 dB to - 10.2 dB
.1 V	0.10000 V	- 19.8 dB to - 20.2 dB
.01 V	0.01000 V	- 39.8 dB to - 40.2 dB
10 V	10.0000 V	+ 19.8 dB to + 20.2 dB
10 V	15.0000 V	+ 23.3 dB to + 23.7 dB
100 V	100.000 V	+ 39.8 dB to + 40.2 dB
1000 V	100.000 V	+ 39.8 dB to + 40.2 dB

c. Set RANGE to 10 V, short input, and adjust DC ZERO.

d. Select ranges and positive and negative input voltages shown in Table 5-6. Display should be within limits indicated in each case.

Table 5-6. DC Voltage Accuracy Check.

3403A Range	Input Voltage	Display Limits
.1 V	± .100000 V	± 99.2 mV to 100.8 mV
.1 V	± .070000 V	± 69.2 mV to 70.8 mV
.1 V	± .040000 V	± 39.3 mV to 40.7 mV
.1 V	± 010000 V	± 09.3 mV to 10.7 mV
1 V	± 0.10000 V	± .097 V to .103 V
1 V	± 0.50000 V	+ .496 V to .504 V
1 V	± 1.00000 V	± .996 V to 1.004 V
10 V	± 1.00000 V	± 0.97 V to 1.03 V
10 V	± 5.00000 V	± 4.96 V to 5.04 V
10 V	± 10.0000 V	± 9.96 V to 10.04 V
100 V	± 10.0000 V	± 09.7 V to 10.3 V
100 V	± 50.0000 V	± 49.6 V to 50.4 V
100 V	± 100.000 V	± 99.6 V to 100.4 V
1000 V	± 100.000 V	± 096 V to 104 V
1000 V	± 500.000 V	± 495 V to 505 V
1000 V	+ 1000.00 V*	+ 995 V to 1005 V

\* If -hp- Model 740B is used as dc standard, do not apply negative voltage greater than - 500 V.

**5-22. AC NORMAL-MODE REJECTION CHECK.**

5-23. This check indicates the ability of the 3403C to reject ac signals of 60 Hz and greater in the DC function. An ac calibrator (-hp- 745A) is required for this check.

a. Set FUNCTION to DC VOLTS, RANGE to 10 V, RESPONSE TIME to FAST.

b. Short 3403C input and adjust front panel DC ZERO until display is at least 50 counts (positive or negative). Note reading.

c. Disconnect input short and connect ac calibrator to 3403C input. Set calibrator output to 20.0000 V at 60 Hz.

d. 3403C display should not vary more than ± 0.02 V from reading noted in step b, indicating normal-mode rejection of 60 dB, where:

$$NMR = 20 \log \frac{\text{normal-mode voltage}}{\text{effects on reading (volts)}}$$

e. Disconnect ac calibrator, short 3403C input and readjust DC ZERO for zero display.

**5-24. AC COMMON-MODE REJECTION CHECK.**

5-25. Effective common-mode rejection is the ratio of the common-mode voltage to the resultant error in reading with 1 kΩ unbalance in either lead. An ac calibrator, a 1 kΩ resistor, and an input adapter (-hp- Part No. 5040-5847) are required. (See Figure 5-2).

**5-26. AC Volts Function.**

a. Attach input adapter (supplied with 3403C) to 3403C input. This adapter is necessary to make floating measurements.

b. Connect 1 kΩ resistor and ac calibrator to 3403C as shown in Figure 5-2.

c. Set 3403C FUNCTION to AC VOLTS, RANGE to .1 V, RESPONSE TIME to FAST.

d. Adjust ac calibrator output to 100 V at 60 Hz. 3403C display should be less than 100.0 mV, verifying effective common-mode rejection greater than 60 dB, where:

$$ECMR = 20 \log \frac{\text{common-mode voltage}}{\text{effect on reading (volts)}}$$

**5-27. DC Volts Function.**

5-28. Effective common-mode rejection in the DC VOLTS function is the sum of the common-mode rejection in the AC VOLTS function and the ac normal-mode rejection.

**5-29. DIGITAL OUTPUT CHECK.**

5-30. The digital output of the 3403C Options 002 or 003 may be checked by the following procedure. An ac calibrator (-hp- 745A), a dc standard (-hp- 740B), a digital recorder (-hp- 5055A), and a printer cable (-hp- 11184A) are required for this check.

a. Connect ac calibrator to 3403C input, digital recorder to BCD output. Recorder must accept -8421 input.

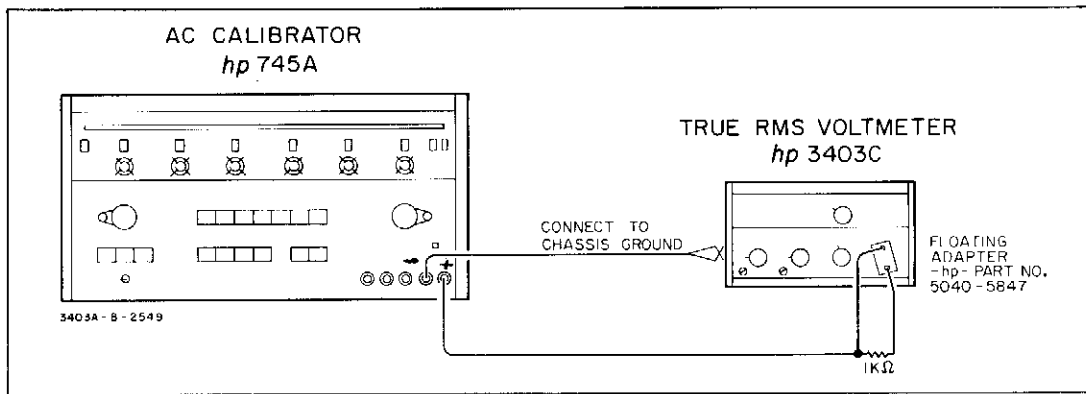


Figure 5-2. AC Common-Mode Voltage Check.

b. Set FUNCTION to AC VOLTS, RANGE to .01 V, RESPONSE TIME to FAST.

c. Adjust ac calibrator output for 3403C display of 10.00 mV.

d. Allow recorder to print at least one reading. Printout should be as indicated in first line of Table 5-7.

e. Adjust ac calibrator output for 3403C display of 17.77 mV. Printout should be as shown in line 2 of Table 5-7.

f. Select function, range and input as shown in the remainder of Table 5-7, within the capabilities of your instrument, and compare printout in each case. "x" in printout column of Table 5-7 indicates that the number printed is immaterial to this test.

**5-31. REMOTE CONTROL CHECK.**

5-32. The following procedure checks remote operation of the 3403C Option 003. Remote program signal requirements are shown in Figure 2-5. The mating connector for the Remote Program Connector J3 is -hp- Part No.

1251-0293 (Amphenol No. 57-30240). No input signal is required except for step g.

a. Program Remote Control. Observe that REM annunciator is on. Continue to program Remote Control throughout the remaining checks.

b. Program each function and verify proper operation by observing AC, DC and dB annunciators.

*NOTE*

*A Program Accept command is required to initiate or change a remote program.*

c. Disconnect function programming and program each range. Verify proper range selection by observing decimals and V/mV annunciators.

d. Program Delayed Measure Mode and Fast Response Time. Range and function program lines may be left open, thus programming the 1000 V range and DC + AC Volts. Initiate a measurement with a Remote Measure command.

Table 5-7. Digital Output Check.

Function	Range	Input	Printer Column						
			7	6	5	4	3	2	1
AC Volts	.01 V	10.000 mV	2	1	1	0	0	0	5
AC Volts	.01 V	17.770 mV	2	1	1	7	7	7	5
AC Volts	.01 V	20.000 mV	2	3	1	x	x	x	5
AC Volts	.01 V	1.000 mV	2	5	0	x	x	x	5
AC Volts	.1 V	none	2	5	0	x	x	x	4
AC Volts	1 V	none	2	5	0	x	x	x	3
AC Volts	10 V	none	2	5	0	x	x	x	2
AC Volts	100 V	none	2	5	0	x	x	x	1
AC Volts	1000 V	none	2	5	0	x	x	x	0
AC dB	1 V	none	6	5	x	x	x	x	3
DC + AC dB	1 V	none	4	5	x	x	x	x	3
DC + AC Volts	1 V	none	0	5	x	x	x	x	3
DC Volts	1 V	+ 1.0000 V	1	1	x	x	x	x	3
DC Volts	1 V	- 1.0000 V	1	0	x	x	x	x	3
DC Volts	1 V	- 2.0000 V	1	2	x	x	x	x	3
DC Volts	1 V	+ 2.0000 V	1	3	x	x	x	x	3
DC Volts	1 V	+ .1000 V	1	5	x	x	x	x	3
DC Volts	1 V	- .1000 V	1	4	x	x	x	x	3



**PERFORMANCE CHECK CARD**

Hewlett-Packard Model 3403C  
 True RMS Voltmeter  
 Serial Number \_\_\_\_\_

Tests Performed by \_\_\_\_\_  
 Date \_\_\_\_\_

Paragraph	Description			Reading	Test Limits	
	Range	Input	Frequency		Min.	Max.
5-8	Mid-Band Frequencies					
	.01 V	10 mV	100 Hz	_____	9.95	10.05
	.01 V	10 mV	100 kHz	_____	9.95	10.05
	.1 V	20 mV	100 kHz	_____	19.6	20.4
	.1 V	100 mV	1 kHz	_____	99.6	100.4
	1 V	0.5 V	200 Hz	_____	.497	.503
	1 V	1 V	20 kHz	_____	.996	1.004
	10 V	10 V	100 kHz	_____	9.96	10.04
	10 V	15 V	100 Hz	_____	14.95	15.05
	100 V	20 V	50 Hz	_____	19.8	20.2
	100 V	100 V	50 kHz	_____	99.6	100.4
	100 V	100 V	*20 Hz	_____	99.4	100.6
	1 V	1 V	*10 Hz	_____	.994	1.006
	.1 V	100 mV	*20 Hz	_____	99.0	101.0
	1000 V	1000 V	100 Hz	_____	995	1005
	1000 V	1000 V	10 kHz	_____	995	1005

\* Slow response time.

**PERFORMANCE CHECK CARD (Cont'd)**

Paragraph	Description		Reading	Test Limits		
5-10	100 kHz to 10 MHz					
	Range	Input	Frequency	Min.	Max.	
	.1 V	100 mV	1 MHz	_____	97.8 102.2	
	.1 V	100 mV	10 MHz	_____	97.8 102.2	
	1 V	1 V	2 MHz	_____	.988 1.012	
	1 V	1 V	8 MHz	_____	.988 1.012	
	10 V	3 V	500 kHz	_____	2.96 3.04	
	10 V	3 V	5 MHz	_____	2.95 3.05	
	10 V	10 V	1 MHz	_____	9.88 10.12	
	10 V	10 V	5 MHz	_____	9.88 10.12	
	100 V	100 V	500 kHz	_____	98.8 101.2	
	100 V	100 V	1 MHz	_____	98.8 101.2	
	5-12	10 MHz to 100 MHz				
		.1 V	100 mV	20 MHz	_____	97.8 102.2
.1 V		100 mV	40 MHz	_____	94.8 105.2	
.1 V		100 mV	100 MHz	_____	89.8 110.2	
1 V		1 V	20 MHz	_____	.978 1.022	
1 V		1 V	40 MHz	_____	.948 1.052	
1 V		1 V	100 MHz	_____	.898 1.102	
5-16	Low Frequency					
	1 V	1 V	5 Hz	_____	.994 1.006	
5-18	dB Accuracy (Optional)					
	Range	Input	Reading	Min.	Max.	
	1 V	0.31620 V	_____	- 09.8	- 10.2	
	.1 V	0.10000 V	_____	- 19.8	- 20.2	
	.01 V	0.01000 V	_____	- 39.8	- 40.2	
	10 V	10.0000 V	_____	+ 19.8	+ 20.2	
	10 V	15.0000 V	_____	+ 23.3	+ 23.7	
	100 V	100.000 V	_____	+ 39.8	+ 40.2	
	1000 V	1000.00 V	_____	+ 59.8	+ 60.2	

**PERFORMANCE CHECK CARD (Cont'd)**

Paragraph	Description		Reading		Test Limits	
			Pos.	Neg.	Min.	Max.
5-20	DC Voltage Accuracy					
	Range	Input	Pos.	Neg.	Min.	Max.
	.1 V	± .100000 V	_____	_____	99.2	100.8
	.1 V	± .070000 V	_____	_____	69.2	70.8
	.1 V	± .040000 V	_____	_____	39.3	40.7
	.1 V	± .010000 V	_____	_____	09.3	10.7
	1 V	± 0.10000 V	_____	_____	.097	.103
	1 V	± 0.50000 V	_____	_____	.496	.504
	1 V	± 1.00000 V	_____	_____	.996	1.004
	10 V	± 1.00000 V	_____	_____	0.97	1.03
	10 V	± 5.00000 V	_____	_____	4.96	5.04
	10 V	± 10.0000 V	_____	_____	9.96	10.04
	100 V	± 10.0000 V	_____	_____	09.7	10.3
	100 V	± 50.0000 V	_____	_____	49.6	50.4
	100 V	± 100.000 V	_____	_____	99.6	100.4
	1000 V	± 100.000 V	_____	_____	096	104
	1000 V	± 500.000 V	_____	_____	495	505
	1000 V	+ 1000.00 V	_____	_____	995	1005
5-22	AC Normal-Mode Rejection		_____		± 0.02 V	
5-24	AC Common-Mode Rejection		_____		100.0 mV	
5-29	Digital Output Check (Optional)					
	Column 1, Data Multiplier			_____		
	Columns 2 - 5, Data			_____		
	Column 6, Polarity, OL, Underrange			_____		
	Column 7, Function			_____		
5-31	Remote Control Check (Optional)					
	Range			_____		
	Function			_____		
	Response Time			_____		
	Delayed Mode			_____		
	Non-delayed Mode			_____		
	Autorange			_____		

e. Change Response Time program to Slow and repeat test in step d.

f. Program Non-delayed Measure Mode and Fast Response Time. Repeat previous test and observe that the Sample Rate indicator lights immediately when measure command is applied.

g. Apply input of 1 V at 100 Hz. Program AC Volts, 1000 V range, Delayed Measure Mode, Fast Response Time, and Autorange. Initiate a measurement and verify that the instrument ranges to the 1 V range and reads correctly. After instrument has completed autoranging, disconnect input and verify that instrument remains on the 1 V range (do not initiate a measurement).

### 5-33. ADJUSTMENT SEQUENCE.

5-34. The following procedures should be performed only after it has been determined from the performance checks that the Model 3403C is out of specifications. If any adjustment in this procedure cannot be made correctly, refer to the Troubleshooting Procedures. Cover removal and access to adjustments are shown in Figure 5-3, and the location of adjustments is given in Figure 5-4.

5-35. If the Performance Checks indicate an error only below approximately 30% of range, and only in AC functions, it may be possible to correct this error by adjusting the RMS Converter Balance. Refer to Paragraph 5-62, Final Converter Balance Adjustment.

5-36. If an error is present that is consistent from range to range and on all functions, it may be possible to correct the error by adjustment of the Digital Panel Meter. To determine if the error is in the AC Converter or the Digital Panel Meter, perform the following check. An ac calibrator and a dc digital voltmeter are required.

a. Set FUNCTION to AC VOLTS, RANGE to 1 V, RESPONSE TIME to FAST.

b. Connect ac calibrator to 3403C input and adjust calibrator output to 1.0000 V at 100 Hz.

c. Measure voltage at rear panel VOLTS recorder output terminals with a digital voltmeter.

d. If the digital voltmeter reading is  $+1.0000 \text{ V} \pm 0.0040$ , proceed to the Digital Panel Meter Adjustments, Paragraph 5-50. If the error is greater than  $\pm 0.0040 \text{ V}$ , perform the complete adjustment procedures.

5-37. With the exception of the above conditions, the Adjustment procedures must be performed in the order given unless otherwise stated within the procedure.

### 5-38. ACCESS TO ADJUSTMENTS.

5-39. Open the 3403C and the AC Converter Assembly as shown in Figure 5-3. Turn the instrument on and allow to warm up for at least 1 hour.



*THE COMPONENTS AND PRINTED CIRCUIT BOARDS WITHIN THE AC CONVERTER ASSEMBLY MUST BE KEPT CLEAN AND FREE FROM FINGERPRINTS OR OTHER CONTAMINATION, OR PERFORMANCE MAY BE DEGRADED. IF COMPONENTS OR WIRES IN THE ATTENUATOR AREA ARE MOVED, CALIBRATION AT HIGH FREQUENCIES MAY BE ALTERED.*

### 5-40. POWER SUPPLY ADJUSTMENTS.

5-41. A digital voltmeter having 5-digit resolution (for 12 V measurement) is required for these adjustments. Test points and adjustments are on the Regulator Assembly, A6.

a. Connect digital voltmeter between +5 test point and digital ground  $\nabla$ . Adjust A6R22 for voltmeter reading of  $+5.000 \text{ V} \pm 0.050 \text{ V}$ .

b. Connect digital voltmeter between -10 test point and digital ground. Adjust A6R14 for digital voltmeter reading of  $-10.000 \text{ V} \pm 0.010 \text{ V}$ .

c. Measure voltage at -5 test point (to digital ground). Voltage should be  $-5.00 \text{ V} \pm 0.40 \text{ V}$ . If not, troubleshoot -5 V regulator circuit (A6Q5).

d. Connect digital voltmeter between +12 test point and analog ground  $\nabla$ . Adjust A6R4 for voltmeter reading of  $+12.000 \text{ V} \pm 0.010 \text{ V}$ .

e. Connect digital voltmeter between -12 test point and analog ground. Adjust A6R9 for voltmeter reading of  $-12.000 \text{ V} \pm 0.010 \text{ V}$ .

### 5-42. ZERO ADJUSTMENTS.

5-43. A digital voltmeter having 0.01 mV resolution is required for these adjustments. All adjustments must be made in the order given.

a. Set 3403C FUNCTION to DC, RANGE to 10 V, RESPONSE TIME to FAST, INPUT open.

b. Connect digital voltmeter between test point H (A2) and analog ground. The AC Converter box is analog ground.

c. Connect short circuit between pins 7 and 8 of J10, which is the printed circuit connector at the center of A3, providing connections to and from the converter assembly.

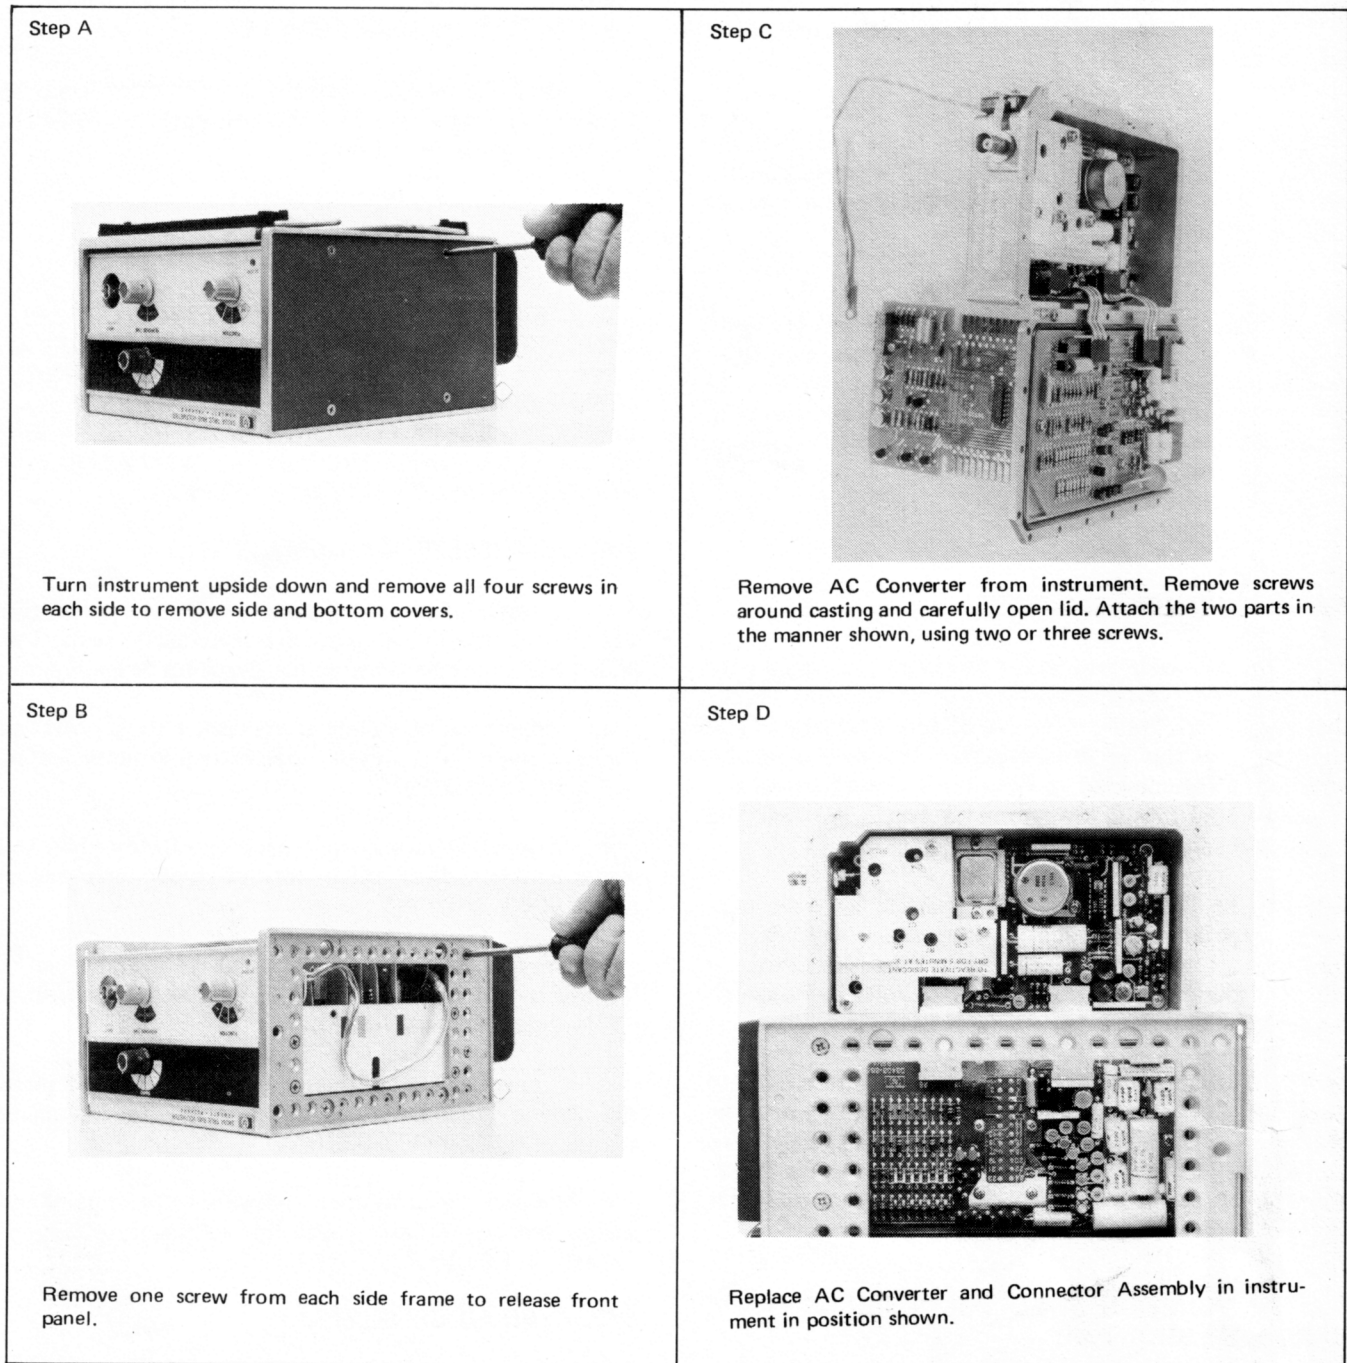


Figure 5-3. Access to Adjustments.

d. Adjust A2R11 for digital voltmeter reading of  $0 \pm 1.0$  mV. Remove short circuit.

e. Adjust front panel DC ZERO for digital voltmeter reading of  $0 \pm 0.05$  mV.

f. Set FUNCTION to AC VOLTS. Adjust A2R18 for digital voltmeter reading of  $0 \pm 0.1$  mV.

g. Set FUNCTION to DC VOLTS. Connect digital voltmeter to test point D (A3). Short test point H to analog ground.

h. Adjust A3R8 for digital voltmeter reading of  $0 \pm 0.1$  mV. Remove short from test point H.

#### 5-44. CONVERTER AMPLIFIER ADJUSTMENTS.

5-45. A digital voltmeter having 0.1 mV resolution, a dc standard, and an ac calibrator are required for these adjustments of the Converter Amplifier balance and gain. The adjustments in the preceding paragraphs must be completed before performing the following procedure.

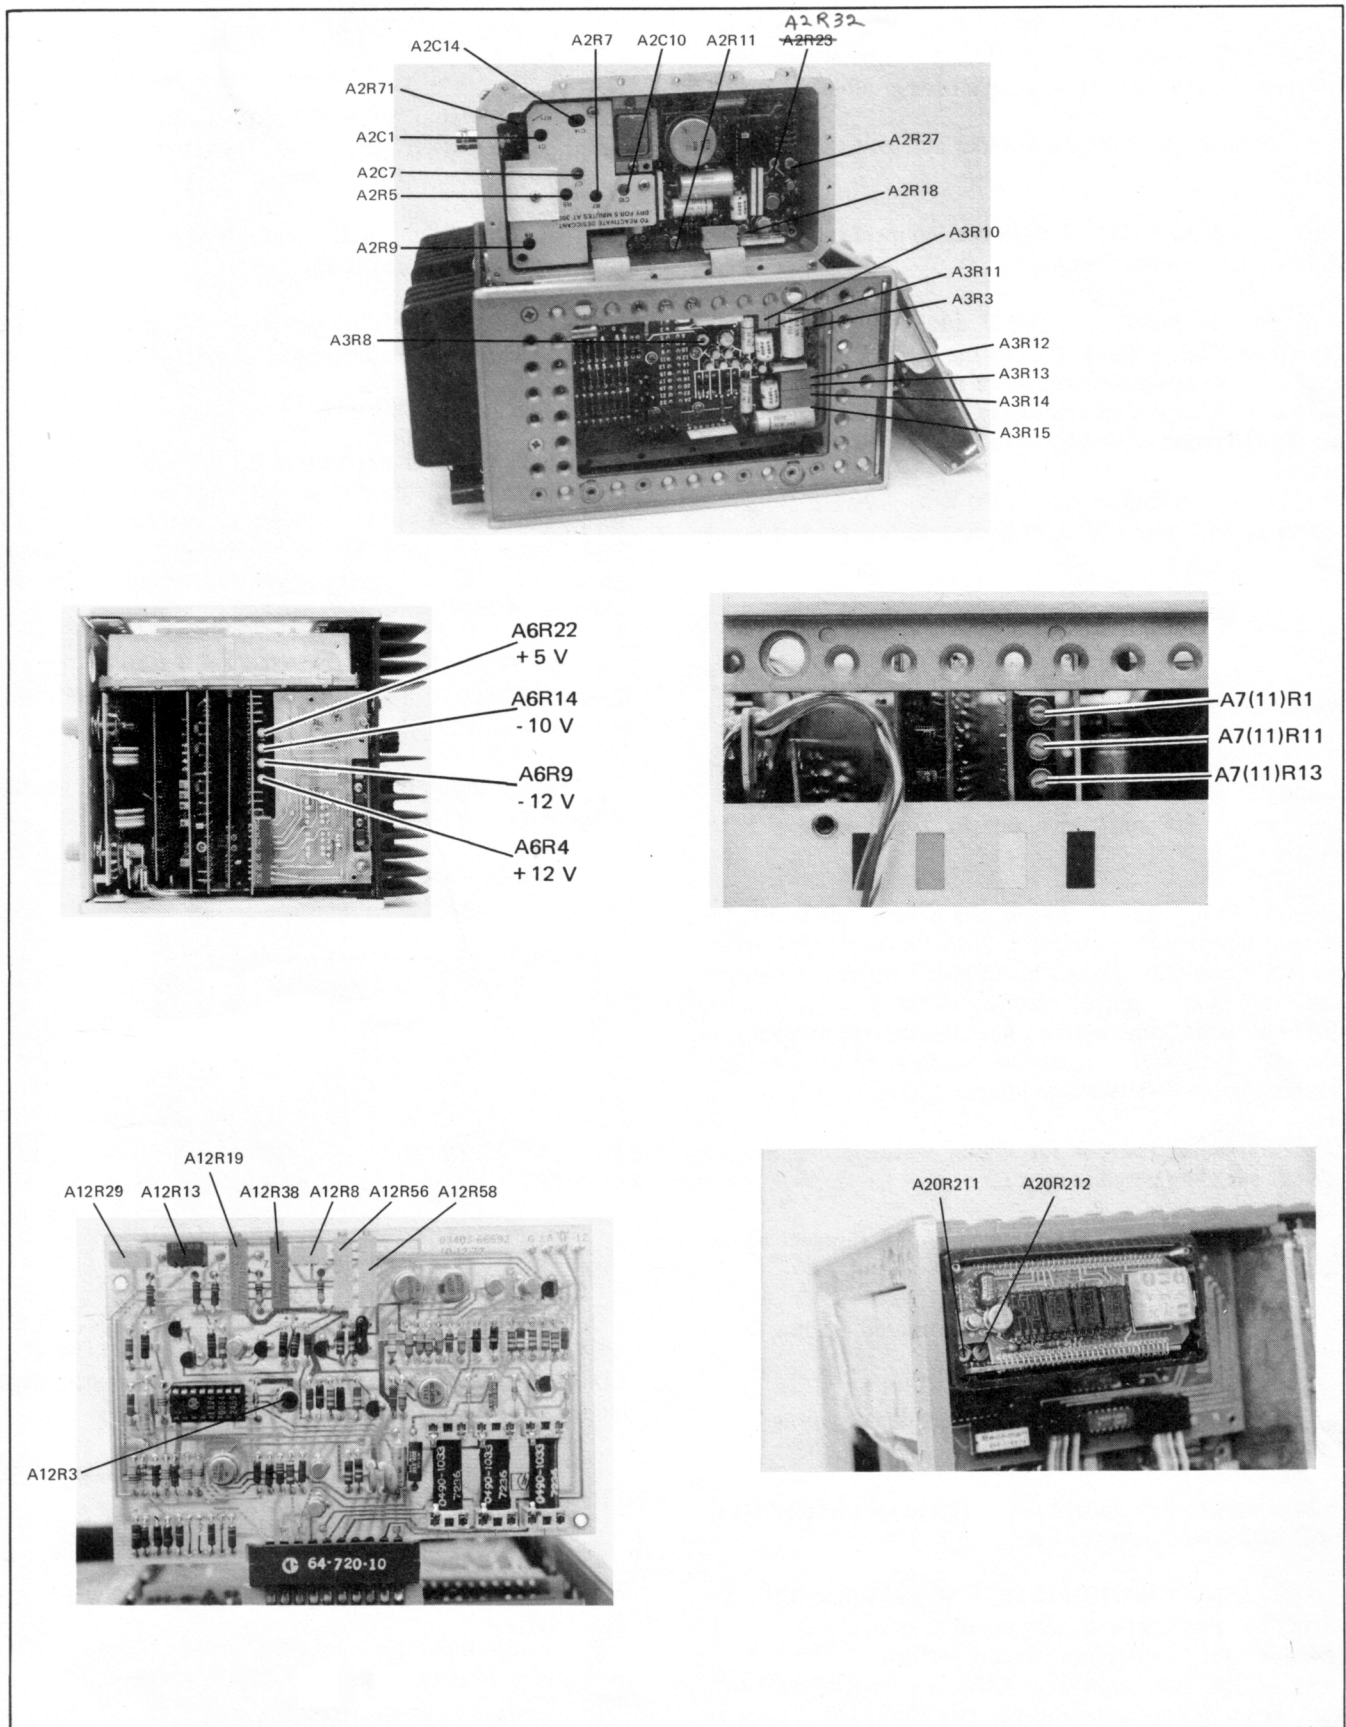


Figure 5-4. Location of Adjustments.

a. Set FUNCTION to AC VOLTS, RANGE to 10 V, RESPONSE TIME to FAST. Connect digital voltmeter between test point D (on A3) and analog ground.

b. Connect ac calibrator to input and set to 10.000 V at 100 Hz.

c. Adjust A7 (A11) R1 RMS BAL to mechanical center. Note digital voltmeter reading.

d. Reduce input to 1.000 V and adjust A2R27 for digital voltmeter reading of 1/10 the reading noted in step c,  $\pm 1.0$  mV. If adjustment can be made correctly, proceed to step e. If the adjustment range of A2R27 is insufficient, use the following procedure to balance the amplifier.

1) Apply input of 10.000 V at 100 Hz from ac calibrator and note digital voltmeter reading (at test point D).

2) Reduce input to 1.0000 V.

3) Insert wire jumpers in positions 1, 3, 4 and 5 (near A2R27).

4) Turn A2R27 fully clockwise. If digital voltmeter reading is greater than 1/10 the reading noted in step 1, turn power off and move jumper from position 1 to position 2.

5) Bring A2R27 within the proper range by removing jumpers 3, 4 and/or 5 until the digital voltmeter reading is near 1/10 the reading of step 1 without exceeding this value. For example, remove jumper 3. If the reading does not exceed the desired value, also remove jumper 4. If removing jumper 3 causes the reading to be too high, replace jumper 3 and remove jumper 4, etc.

6) Adjust A2R27 for digital voltmeter reading of 1/10 the reading noted in step 1.

e. Disconnect ac calibrator from input. Connect digital voltmeter to test point S (on A2).

f. Adjust A2R32 for digital voltmeter reading of  $0 \pm 20$  mV.

g. Set FUNCTION to DC. Connect digital voltmeter to test point D.

h. Connect dc standard to input and set to + 15.000 V. Note digital voltmeter reading.

i. Change FUNCTION to DC + AC and adjust A3R3 for same digital voltmeter reading noted in step h,  $\pm 0.5$  mV. If this adjustment procedure is being performed after replacement of the thermopile and A3R3 has insufficient range, turn power off and rotate thermopile  $180^\circ$ . Turn power on and repeat steps h and i. Disconnect dc standard.

j. Set FUNCTION to AC and apply input of 10.000 V at 100 Hz. Note reading.

k. Reduce input to 1.000 V and adjust A2R27 for digital voltmeter reading 1/10 that noted in step j,  $\pm 0.3$  mV. Disconnect ac calibrator.

l. Set FUNCTION to DC and apply + 15.000 V input from dc standard. Note reading.

m. Change FUNCTION to DC + AC and adjust A3R3 for digital voltmeter reading noted in step l,  $\pm 0.1$  mV.

#### 5-46. GAIN ADJUSTMENTS.

5-47. A digital voltmeter having 0.1 mV resolution, an ac calibrator, and a high voltage amplifier are required for these adjustments. All adjustments in the preceding paragraphs must be made before performing the following procedures. All the gain adjustments are in the AC Converter Assembly, some on A2 and some on A3.

a. Set FUNCTION to AC VOLTS, RANGE to 1000 V, RESPONSE TIME to FAST. Connect digital voltmeter between test point D and analog ground.

b. Apply input of 800.00 V at 100 Hz from ac calibrator and high voltage amplifier.

c. Adjust A3R15 for digital voltmeter reading of  $0.8000 \text{ V} \pm 0.0002 \text{ V}$ .

**WARNING**

*EXERCISE EXTREME CAUTION WHEN MAKING ADJUSTMENTS WITH A HIGH VOLTAGE INPUT.*

d. Change input frequency to 30 kHz. Adjust A2C1 (with plastic tool) for digital voltmeter reading of  $0.8000 \text{ V} \pm 0.0002 \text{ V}$ . Reduce input voltage and disconnect high voltage amplifier.

e. Set 3403C RANGE to .1 V and apply input of 0.1000 V at 100 Hz from ac calibrator.

f. Adjust A3R11 for digital voltmeter reading of  $1.0000 \text{ V} \pm 0.0002 \text{ V}$ .

g. Change input frequency to 30 kHz. Adjust A2C14 for digital voltmeter reading of  $1.0000 \text{ V} \pm 0.0002 \text{ V}$ .

h. Decrease input to 0.01000 V. Set 3403C RANGE to .01 V.

i. Adjust A3R10 for digital voltmeter reading of 1.0000 V  $\pm$  0.0002 V.

j. Set 3403C RANGE to 1 V. Change input to 1.0000 V at 100 Hz.

k. Adjust A3R12 for digital voltmeter reading of 1.0000 V  $\pm$  0.0002 V.

l. Change input frequency to 30 kHz. Adjust A2C7 for digital voltmeter reading of 1.0000 V  $\pm$  0.0002 V.

m. Set 3403C RANGE to 10 V. Change input to 10.000 V at 100 Hz.

n. Adjust A3R13 for digital voltmeter reading of 1.0000 V  $\pm$  0.0002 V.

o. Change input frequency to 30 kHz. Adjust A2C10 for digital voltmeter reading of 1.0000 V  $\pm$  0.0002 V. If A2C10 can be adjusted correctly, proceed to step p. If A2C10 has insufficient range of adjustment, the following procedure should be used to select the proper value of A2C9.

1) Remove A2C9.

2) With input of 10.000 V at 30 kHz (as in step o), adjust A2C10 for minimum reading on the digital voltmeter.

3) If digital voltmeter reading is less than 0.981, adjust A2C10 for reading of 1.0000 V  $\pm$  0.0002 V and proceed to step p.

4) If digital voltmeter reading is greater than 0.981, replace A2C9 with the value indicated in Table 5-8.

Table 5-8. Selection of A2C9.

Reading	A2C9 Value
0.981 to 1.011	12 pF
1.012 to 1.024	24 pF
1.025 to 1.036	33 pF
1.037 to 1.048	43 pF
1.049 or greater	51 pF

p. Set 3403C RANGE to 100 V. Adjust input to 160 V at 30 kHz.

q. Adjust A3R14 for digital voltmeter reading of 1.6000 V  $\pm$  0.0003 V.

r. Change input frequency to 100 Hz. Adjust A2R9 for digital voltmeter reading of 1.6000 V  $\pm$  0.0003 V.

5-48. HIGH FREQUENCY ADJUSTMENTS.

5-49. All the previous adjustments must be correct before beginning this procedure. The attenuator shield must be left in place while these adjustments are made. A high frequency signal generator (-hp- 8601A), an ac calibrator (-hp- 745A), a digital voltmeter (-hp- 3480A/3482A), and two thermal converters, .45 V (-hp- 11051A), and 3 V (-hp- 11049A) are required for these adjustments.



*IF COMPONENTS OR WIRES IN THE ATTENUATOR AREA ARE MOVED, CALIBRATION AT HIGH FREQUENCIES MAY BE ALTERED.*

a. Using ac calibrator as test signal source, connect calibrator to 3403C as shown in Figure 5-1. This is the configuration used at the factory for testing and calibrating the 3403C. Any other configuration can be expected to give different results. Do not connect thermal converter at this time.

b. Set FUNCTION to AC VOLTS, RANGE to .1 V, RESPONSE TIME to FAST.

c. Connect digital voltmeter between test point D on A3 and analog ground (converter box).

d. Adjust ac calibrator output to 0.10000 V at 100 kHz. Note digital voltmeter reading.

e. Disconnect ac calibrator and replace with high frequency signal generator. Connect .45 V thermal converter as shown in Figure 5-1.

f. Set signal generator frequency to 100 kHz and adjust output amplitude so that digital voltmeter reading is the same as noted in step d.

g. Disconnect digital voltmeter from AC Converter and connect to thermal converter. Note reading.

NOTE

*The measurement error of the thermal converter at the test signal frequency must be taken into account in each step where the thermal converter output is measured.*

h. Change signal generator frequency to 90 MHz and adjust output amplitude for digital voltmeter reading noted in step g.



- i. Disconnect digital voltmeter from thermal converter and connect between test point D and analog ground. Adjust A2R71 for digital voltmeter reading of  $1.000\text{ V} \pm 0.002\text{ V}$ .
- j. Disconnect thermal converter. Replace signal generator with ac calibrator.
- k. Set 3403C RANGE to 1 V. Adjust ac calibrator output to  $0.4000\text{ V}$  at 100 kHz. Note digital voltmeter reading at test point D.
- l. Replace ac calibrator with signal generator. Connect  $.45\text{ V}$  thermal converter to test set-up.
- m. Set signal generator frequency to 100 kHz and adjust output amplitude for digital voltmeter reading noted in step k.
- n. Disconnect digital voltmeter from AC Converter and connect to thermal converter. Note reading.
- o. Change signal generator frequency to 90 MHz and adjust output amplitude for digital voltmeter reading noted in step n.
- p. Disconnect digital voltmeter from thermal converter and connect between test point D and analog ground. Adjust A2R5 for digital voltmeter reading of  $0.4000\text{ V} \pm 0.0002\text{ V}$ .
- q. Disconnect thermal converter. Replace signal generator with ac calibrator.
- r. Set 3403C RANGE to 10 V. Adjust ac calibrator output to  $2.000\text{ V}$  at 100 kHz. Note digital voltmeter reading at test point D.
- s. Replace ac calibrator with signal generator. Connect  $3\text{ V}$  thermal converter to test set-up.
- t. Set signal generator frequency to 100 kHz and adjust output amplitude for digital voltmeter reading noted in step r.
- u. Disconnect digital voltmeter from AC Converter and connect to thermal converter. Note reading.
- v. Change signal generator frequency to 9 MHz and adjust output amplitude for digital voltmeter reading noted in step u.
- w. Disconnect digital voltmeter from thermal converter and connect between test point D and analog ground. Adjust A2R7 for digital voltmeter reading of  $0.2000\text{ V} \pm 0.0004\text{ V}$ .
- x. Disconnect test set-up. Turn 3403C off. Close AC Converter box, making sure seal is in place, and replace all screws. Replace AC Converter in instrument and turn on.

### 5-50. DIGITAL PANEL METER ADJUSTMENTS.

5-51. All preceding adjustments (with the exception of the High Frequency Adjustments if required test equipment is not available) must be completed before performing the Digital Panel Meter Adjustments, unless these adjustments are being performed as a result of the check given in Paragraph 5-36. A dc standard (-hp- 740B) and a dc differential voltmeter (-hp- 3420A/B) are required for these adjustments.

- a. Set 3403C FUNCTION to DC, RANGE to 1 V, RESPONSE TIME to FAST.
- b. Connect dc differential voltmeter to rear panel VOLTS analog output terminals.
- c. Connect dc standard to 3403C input. Adjust standard output for differential voltmeter reading of  $+1.5005\text{ V}$ .
- d. Adjust A20 R212 (+ Cal) so that 3403C display alternates equally between  $+1.500$  and  $+1.501$ .
- e. Reverse polarity of dc standard output and adjust for differential voltmeter reading of  $-1.5005\text{ V}$ .
- f. Adjust A20 R211 (- Cal) so that 3403C display alternates equally between  $-1.500$  and  $-1.501$ . Disconnect differential voltmeter and dc standard.

### 5-52. OUT-OF-RANGE ADJUSTMENTS.

5-53. An ac calibrator is required for these adjustments which set the points at which uprange and downrange blanking occurs. Both adjustments are on the Connector Assembly. This assembly may be either A7 or A11, depending on the options included. The A7 designation used in this procedure applies to all instruments, since the adjustments are identical. An ac calibrator (-hp- 745A) is required for these adjustments.

- a. Set FUNCTION to AC VOLTS, RANGE to 10 V, RESPONSE TIME to FAST.
- b. Apply input of  $19.500\text{ V}$  at 100 Hz from ac calibrator.
- c. Adjust A7R11 to the point where the 3-digit display goes from on to off. (The overrange "1" should remain on.)
- d. Reduce input voltage to  $1.650\text{ V}$  and adjust A7R13 to the point where the display goes from on to off.

### 5-54. LOG CONVERTER ADJUSTMENTS.

5-55. The Log Converter (Option 006) may be adjusted at any time after the Gain Adjustments, Paragraph 5-46, have been completed. An ac calibrator and high voltage amplifier (-hp- 745A/746A), a digital voltmeter able to resolve

0.01 mV, and a 20-pin (2 x 10) printed circuit extender board (-hp- Part No. 5060-0091) are required for this procedure.

a. Set FUNCTION to AC VOLTS, RANGE to 1 V, RESPONSE TIME to FAST, dB REFERENCE fully counterclockwise to CAL position.

b. Short test point Z to test point G. Connect digital voltmeter between test point ET and test point G.

c. Apply input of 1.0000 V at 100 Hz ac calibrator. Digital voltmeter reading should be either positive or negative approximately 0.7 V. If the reading is negative, then adjust A12R8 clockwise until reading changes to positive, then adjust counterclockwise slowly until reading goes negative. (Because of the high gain of the amplifier, reading cannot be adjusted to zero.) If the first reading is positive, rotate A12R8 counterclockwise until reading is negative, then proceed as instructed above. Then remove short from test point Z.

d. Adjust front panel dB CAL multi-turn screwdriver adjustment fully clockwise. A faint click can be heard when wiper is at limit of travel.

e. Adjust A12R13 for digital voltmeter reading (at test point ET) of  $-488.3 \text{ mV} \pm 0.2 \text{ mV}$ .

f. Connect digital voltmeter between test points ET and ED (ET to High terminal, ED to Low). Voltmeter reading should be  $-7$  to  $-10 \text{ mV}$ . (If not, see Paragraph 5-78.) Adjust front panel dB CAL for digital voltmeter reading of  $0 \pm 0.05 \text{ mV}$ .

g. Connect digital voltmeter between rear panel dB recorder output terminal and ground terminal. Adjust A12R29 for voltmeter reading of  $0 \pm 0.05 \text{ mV}$ .

h. Set FUNCTION to AC dB. Connect digital voltmeter between Log Converter output at J6 pin 7 and ground.

i. Reduce ac calibrator output to 0.10000 V (3403C on 1 V range). Adjust A12R19 for digital voltmeter reading of  $-0.2000 \text{ V} \pm 0.0001 \text{ V}$ .

j. Reduce ac calibrator output to 0.01000 V. Set 3403C RANGE to .01 V. Adjust A12R56 for digital voltmeter reading of  $-0.4000 \text{ V} \pm 0.0001 \text{ V}$ .

k. Set 3403C RANGE to 1000 V. Connect high voltage amplifier (-hp- 746A) to 3403C input and to ac calibrator. Set voltage to 1000 V. Adjust A12R58 for digital voltmeter reading of  $+0.6000 \text{ V} \pm 0.0001 \text{ V}$ . Reduce voltage and disconnect high voltage amplifier.

l. Set RANGE to .1 V. Connect ac calibrator to 3403C input and adjust voltage to 0.4000 V.

m. Digital voltmeter reading should be  $-0.0774 \text{ V} \pm 0.0003 \text{ V}$ . If not, adjust A12R3 to obtain this reading.

n. If necessary to adjust A12R3 in step m, repeat steps i, l and m (omit steps j and k) until readings are correct without further adjustment.

o. Set RANGE to 1 V, ac calibrator output to 0.1000 V. Note and record digital voltmeter reading (at J6 pin 7).

p. Connect digital voltmeter between rear panel dB recorder output terminal and ground terminal. Adjust A12R38 for digital voltmeter reading noted in step o  $\pm 0.0001 \text{ V}$ .

q. The preceding steps adjust the Log Converter for dBV readings (1 V in = 0 dB). If it is preferred to have the instrument display dBm  $600 \Omega$  readings, set RANGE to 1 V and apply an input of 0.7746 V. Adjust front panel dB CAL screwdriver adjustment for digital voltmeter reading (at dB recorder output) of  $0 \pm 0.001 \text{ V}$ .

#### 5-56. FINAL CONVERTER BALANCE ADJUSTMENT.

5-57. An ac calibrator and digital voltmeter are required for this adjustment. Secure the front panel and replace bottom and side covers. Allow the instrument to warm up for at least 1 hour before proceeding.

a. Set FUNCTION to AC VOLTS, RANGE to .1 V, RESPONSE TIME to FAST.

b. Connect digital voltmeter to rear panel VOLTS recorder output terminals.

c. Apply input of 100.000 mV at 100 Hz from ac calibrator. Note digital voltmeter reading.

d. Reduce input to 10.000 mV.

e. Remove left side cover and adjust A7R1 for voltmeter reading of 1/10 the reading noted in step c.

**5-58. PRELIMINARY TROUBLESHOOTING.**

5-59. If the Model 3403C operates incorrectly and the trouble cannot be corrected by the Adjustment Procedures, the following troubleshooting information should be used. Check for loose wires or other obvious sources of trouble, such as burned or loose components. Make sure printed

circuit boards are seated firmly in connectors, and integrated circuit packages are firmly seated in sockets.

**5-60. ACCESS FOR SERVICING.**

5-61. Figure 5-5 illustrates the procedure for removing covers and releasing front and rear panels to gain access to the various assemblies and circuits.

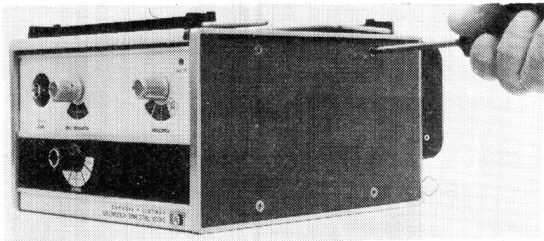
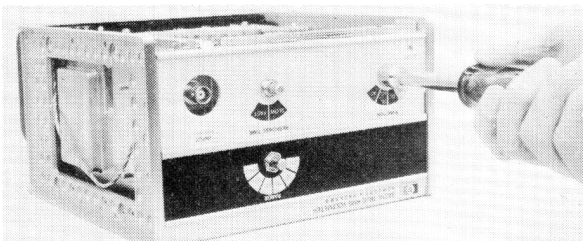
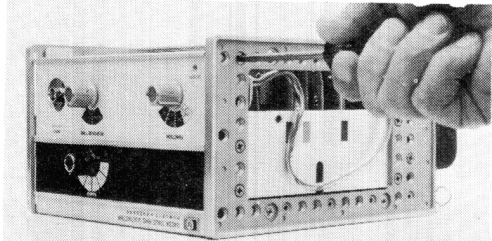
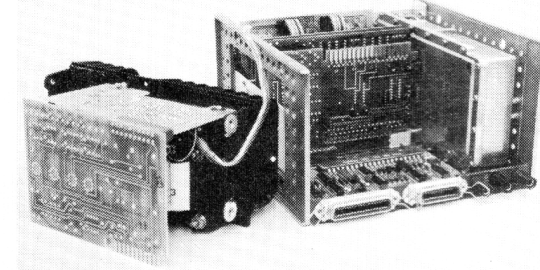
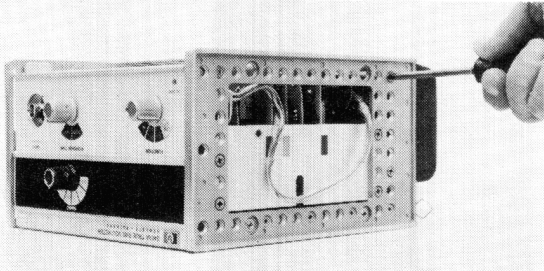
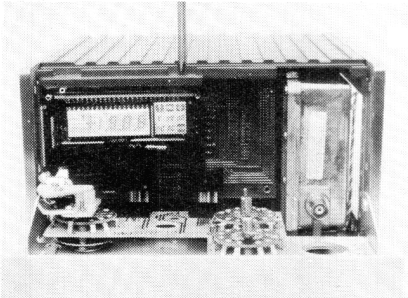
<p>Step A</p>  <p>Remove four screws in each side to remove side and bottom covers. AC Converter and Connector assemblies may be removed from instrument.</p>	<p>Step D</p>  <p>Remove control knobs and mounting nuts to remove front panel from master board assembly.</p>
<p>Step B</p>  <p>Remove one screw in each side frame to release front panel. Provides access to switching logic circuits and digital panel meter.</p>	<p>Step E</p>  <p>Power supply may be removed from instrument (with rear panel) and operated separately outside the instrument for power supply troubleshooting.</p>
<p>Step C</p>  <p>Remove two screws in each side frame to release rear panel and power supply assembly.</p>	<p>Step F &amp; G</p>  <p>Remove digital panel meter by removing two screws. Remove meter assembly from printed circuit connector behind meter. Slide meter PC assembly out rear of case. Make sure insulator is in place at top of case when replacing PC assembly in case.</p>

Figure 5-5. Access For Servicing.

**5-62. TROUBLESHOOTING TREES.**

5-63. The Basic Troubleshooting Tree, Figure 5-6, should be used to locate the area of difficulty. Additional troubleshooting information for the various circuits is given in the following paragraphs, in the Digital Panel Meter Troubleshooting Tree, Figure 5-7, and in the Autorange Troubleshooting Tree, Figure 5-8.

**5-64. AC CONVERTER SERVICE.****5-65. AC Converter Exchange.**

5-66. If the AC Converter Assembly is defective, replacement may be more practical than repair. The replacement assembly is -hp- Part No. 03403-69501. This assembly is available on an exchange basis. Contact your nearest -hp- Sales and Service Office for details.

**5-67. AC Converter Input/Output Checks.**

5-68. The AC Converter Assembly contains the Input Attenuator and Amplifier, The Converter Amplifier and Thermopile, and the DC Amplifier, as well as the logic circuits which drive the range and function selection relays. Signals to and from the AC Converter Assembly may be checked at printed circuit board connector J10 on the side of the converter box. Figure 5-5 shows the method of access to this connector. If the instrument is equipped with Autorange or dB Options, these printed circuit boards must be removed to provide access to J10. When the Log Converter Assembly is removed, the small slide switch beside the connector on the Master Board must be switched toward the rear of the instrument to provide an output connection from the AC Converter to the Digital Panel Meter. If a signal is not correct at J10, check the proper pin at the top edge of the Connector Assembly. Connections to the pins at the top and bottom of this printed circuit board are identical.

**5-69. AC Converter Service Precautions.**

5-70. The AC Converter may be opened and operated for servicing as illustrated in Figure 5-3. Certain components are easily damaged by excessive voltage; consequently, extreme care must be exercised when using a voltmeter or oscilloscope probe within the assembly. In addition, calibration may be altered by movement of components or wires in the attenuator area.



*THE COMPONENTS AND PRINTED CIRCUIT BOARDS WITHIN THE AC CONVERTER ASSEMBLY MUST BE KEPT CLEAN AND FREE FROM FINGERPRINTS OR OTHER CONTAMINATION, OR PERFORMANCE MAY BE DEGRADED.*

**5-71. POWER SUPPLY CHECKS.**

5-72. Remove the rear panel and power supply from the instrument as indicated in Figure 5-5, and operate power supply outside the instrument.

**WARNING**

*KEEP HANDS AND TOOLS AWAY FROM THE AC POWER INPUT CONNECTOR, THE FUSEHOLDER, AND THE 115/230 SWITCH WHILE POWER SUPPLY IS CONNECTED TO POWER LINE.*

5-73. Measure power supply voltages. If a supply voltage is very low, or zero, first check the bridge rectifier output for that supply. The voltage should be approximately as shown on the schematic diagram, Figure 7-13 or 7-14. If the rectifier output is correct, the problem is usually either the series pass transistor or the regulator IC. The trouble can usually be isolated by removing the series pass transistor and shorting the base and emitter connections on the printed circuit board. If the power supply output is then nearly correct, the regulator IC is good and the series pass transistor is defective. However, if the output voltage is still incorrect with the above check, the regulator is probably defective.

**5-74. CONNECTOR ASSEMBLY CHECKS.**

5-75. Voltage levels of signals to and from the Master Board (at J7) may be checked at the printed circuit connector strip at the exposed edge of the A7 (or A11) assembly, since connections at both edges of the board are identical. Logic levels for the function and range selection inputs to A7 (or A11) are approximately 0 V = select, +5 V = not select. Output levels to the AC Converter assembly are approximately 0 V = select, +12 V = not select.

**5-76. AUTORANGE CHECKS.**

5-77. The Autorange Troubleshooting Tree, Figure 5-8, checks the operation of the Autorange Assembly, A13, used in 3403C Option 002. The operation of the autorange circuits of the Remote and Autorange Assembly A14, used in 3403C Option 003, is essentially the same, with the addition of the remote programming logic.

**5-78. LOG CONVERTER ZERO ERROR.**

5-79. If A12CR2 or A12IC2 has been replaced, it may be necessary to reselect the proper jumpers across A12R11, 12 and 14. If the digital voltmeter reading in Paragraph 5-55, step f, is not -7 to -10 mV, perform the following selection procedure.

- a. Connect a clip lead across all three jumper positions at the lower left corner of A12. Note digital voltmeter reading between test points ET and ED. (Digital voltmeter HIGH connected to ET, LOW to ED.) Reading should be between + 7.1 mV and - 10 mV.
- b. Determine voltage change necessary to bring reading to between - 7 and - 10 mV.
- c. Use Table 5-9 to determine which jumper positions should be open.
- d. Proceed with adjustment procedures in Paragraph 5-55.

### 5-80. FACTORY SELECTED COMPONENTS.

5-81. The values of certain components are selected at the factory for optimum performance. These components are designated on the schematic diagram and the replaceable parts list by an asterisk (\*), and the average value is shown. The following paragraphs describe the selection procedure in the event one of these components must be replaced.

### 5-82. A2CR1 and A2R4.

5-83. These components are matched for temperature coefficient and matched to the Input Amplifier A2IC1. If it is necessary to replace A2IC1, the diode and resistor are supplied with the IC and must be replaced at the same time.

### 5-84. REPLACEMENT OF DS2 THROUGH DS10.

5-85. It is unlikely that the annunciator light emitting diodes DS2 through DS10 will fail. However, if any needs to be replaced, -hp- Part Number 1990-0419 should be

used. This LED is smaller in diameter than the older part, -hp- 1990-0410. If a LED fails in an annunciator containing any of the older diodes, these should be replaced with the newer part. The following procedure should be used when re-installing the annunciator housing:

- a. A piece of plastic tubing 3/16 inch long, with inside diameter of .15 inch and outside diameter of .19 inch, must be provided. This may be obtained by ordering -hp- Part Number 5000-9540, or it may be cut from a piece of tubing available as -hp- Part Number 0890-0023.
- b. Position the piece of tubing over the center LED, but do not press it down; just place it over the top of the LED.
- c. Put the annunciator housing in place and press it gently over the diode cluster. The tubing will slide down inside the housing and will hold it in place.
- d. To avoid slippage, it is best to use a new piece of tubing each time the housing is removed.

Table 5-9. Log Converter Zero.

Voltage Change Required	Jumper Positions *	
	Open	Shorted
2.0 mV or less	1	2, 3
2.0 mV to 4.0 mV	2	1, 3
4.0 mV to 5.9 mV	1, 2	3
5.9 mV to 7.7 mV	3	1, 2
7.7 mV to 9.4 mV	1, 3	2
9.4 mV to 11.1 mV	2, 3	1
11.1 mV to 14.1 mV	1, 2, 3	--

\* Due to component tolerance it may be necessary to select one position higher or lower than indicated.

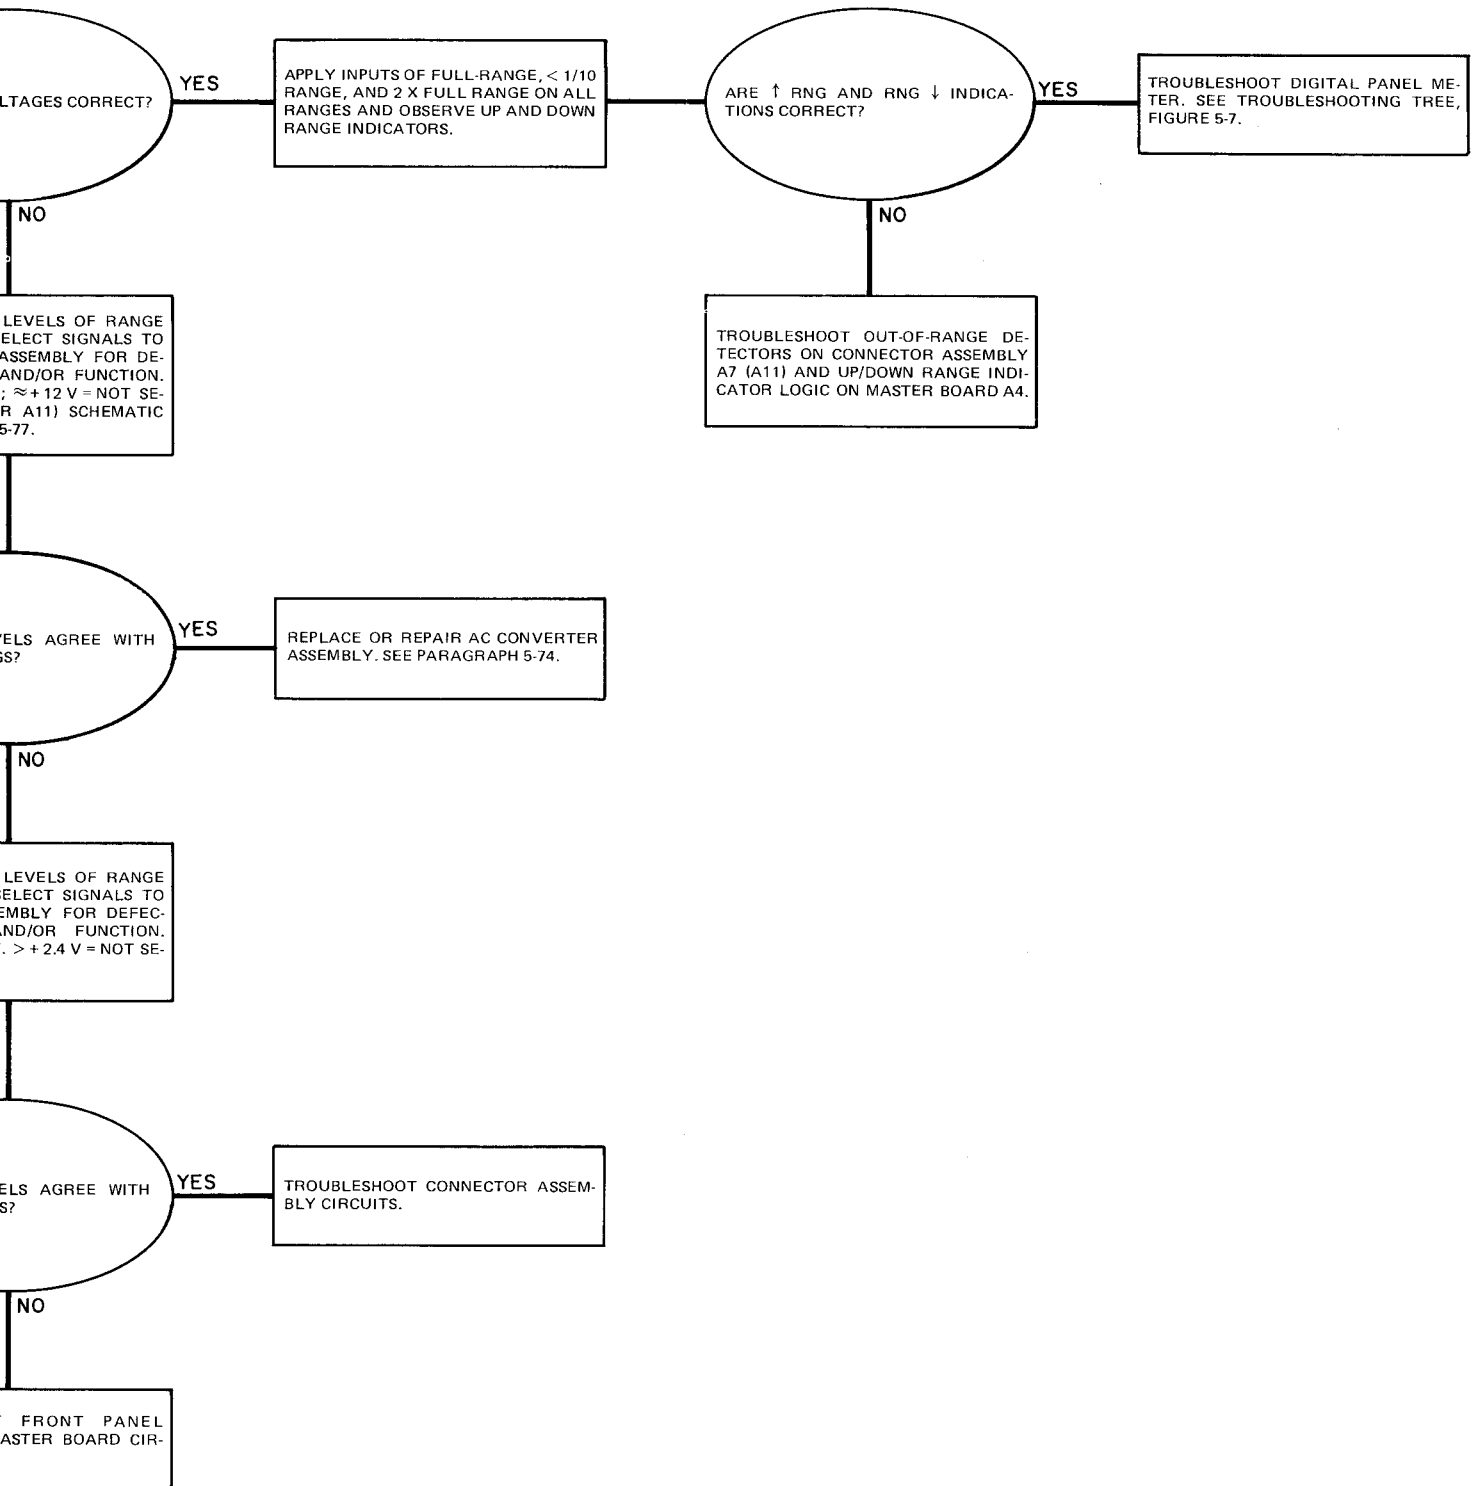


Figure 5-6. Basic Troubleshooting Tree.  
5-17/5-18

CHECK ALL POWER SUPPLY VOLTAGES ( $\pm 12$  V,  $\pm 5$  V,  $-10$  V). ALLOW TOLERANCE OF  $\pm 10$  %.

ARE ALL VOLTAGES CORRECT?

YES

MONITOR REAR PANEL VOLTS REORDER OUTPUT AND APPLY FULL-RANGE AC (100 Hz) INPUT ON EACH AC VOLTS RANGE. REPEAT CHECK WITH DC INPUT ON DC FUNCTION FOR 3403A. OUTPUT SHOULD BE  $1$  V  $\pm 5$  % ON EACH RANGE.

ARE OUTPUT VOLTAGES CORRECT?

NO

TROUBLESHOOT POWER SUPPLIES. SEE FIGURE 5-13 OR 5-14 AND PARAGRAPH 5-81.

NO

MEASURE LOGIC LEVELS OF RANGE AND FUNCTION SELECT SIGNALS TO AC CONVERTER ASSEMBLY FOR DEFECTIVE RANGE AND/OR FUNCTION.  $< +0.5$  V = SELECT;  $\approx +12$  V = NOT SELECT. SEE A7 (OR A11) SCHEMATIC AND PARAGRAPH 5-77.

DO LOGIC LEVELS AGREE WITH SWITCH SETTINGS?

NO

MEASURE LOGIC LEVELS OF RANGE AND FUNCTION SELECT SIGNALS TO CONNECTOR ASSEMBLY FOR DEFECTIVE RANGE AND/OR FUNCTION.  $< +0.5$  V = SELECT.  $> +2.4$  V = NOT SELECT.

DO LOGIC LEVELS AGREE WITH SWITCH SETTINGS?

NO

TROUBLESHOOT FRONT PANEL SWITCHES AND MASTER BOARD CIRCUITS.

BE GAINED AS

AND AN AC CALIBRATION CHECKS.

REMOVE LOG CONVERTER AND AUTO-RANGE ASSEMBLIES, IF PRESENT. SET SMALL SLIDE SWITCH ON MASTER BOARD TOWARD REAR OF INSTRUMENT.

CHECK ALL POWER SUPPLIES ( $\pm 12$  V,  $\pm 5$  V,  $-10$  V). TOLERANCE OF  $\pm 10$  %.

NOTES

1. ACCESS FOR SERVICING MAY BE GAINED AS SHOWN IN FIGURE 5-5.
2. A DC DIGITAL VOLTMETER AND AN AC CALIBRATOR ARE REQUIRED FOR THESE CHECKS.


3 403A-D-3203






### The Analog Circuit

The oscilloscope check at Test Point A7 and the major branch of the troubleshooting tree that follows it constitute the analog circuit check. The procedure is self explanatory except for the Zero Detect Switch and Integrator checks. To perform these tests, proceed as follows.

- a. Lock the two circuits into a X1 amplifier configuration by grounding pin 50 of the panel meter's rear connector.
- b. Apply a 5 Hz, 100 mV p-p sine wave from the 50 ohm output of an oscillator to the drain of Q110. Ground the oscillator's low side.
- c. Check for approximately 100 mV p-p at pins 1 and 2 of U101, the source and drain of Q102B, Q111, & Q113, the source and gate of Q101A & B & Q102A, and the base and emitter of Q104. The collector of Q104 should read about 10 mV p-p. There should be no signal at the drain of Q102A and at the junction of C103 and R105. All of these signals are measured with respect to ground.

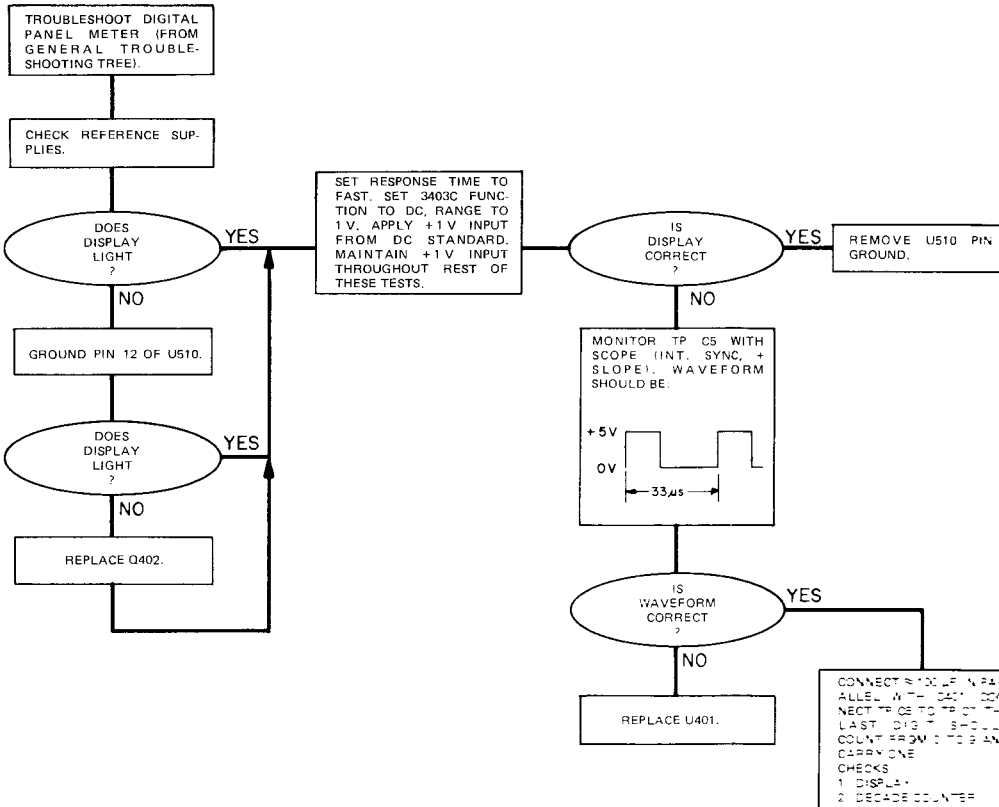

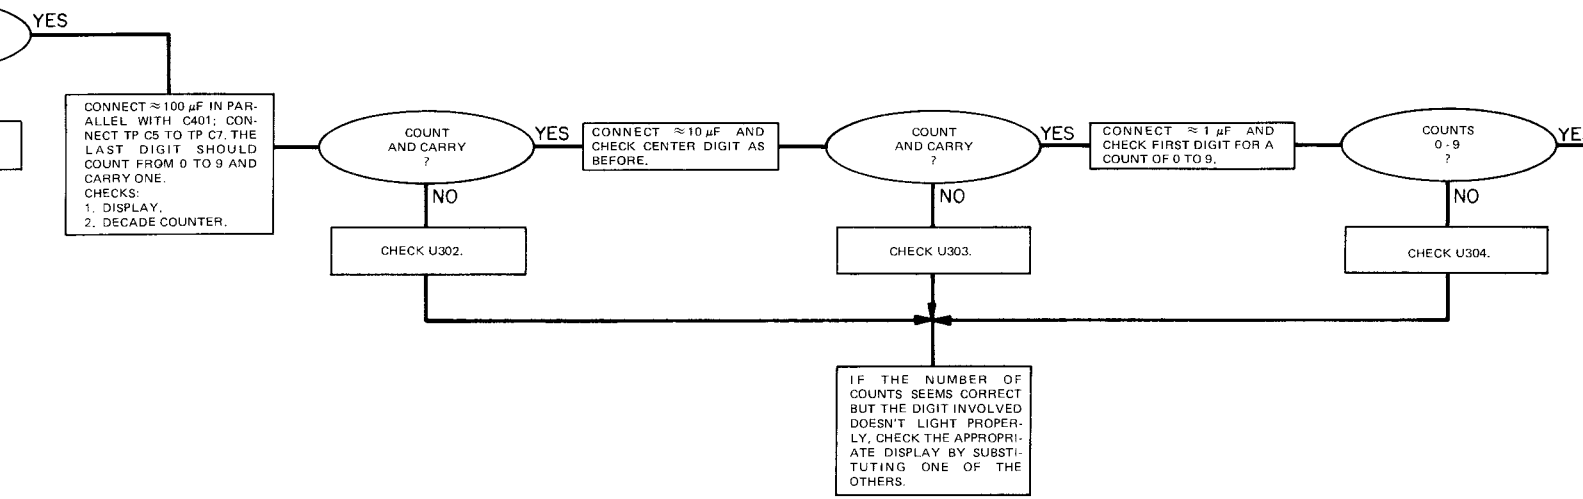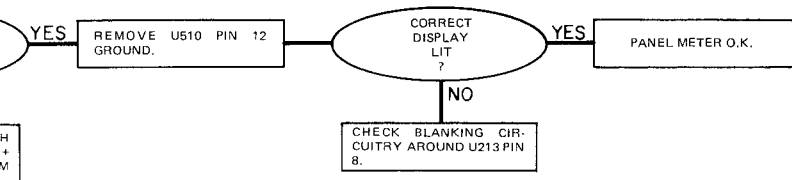

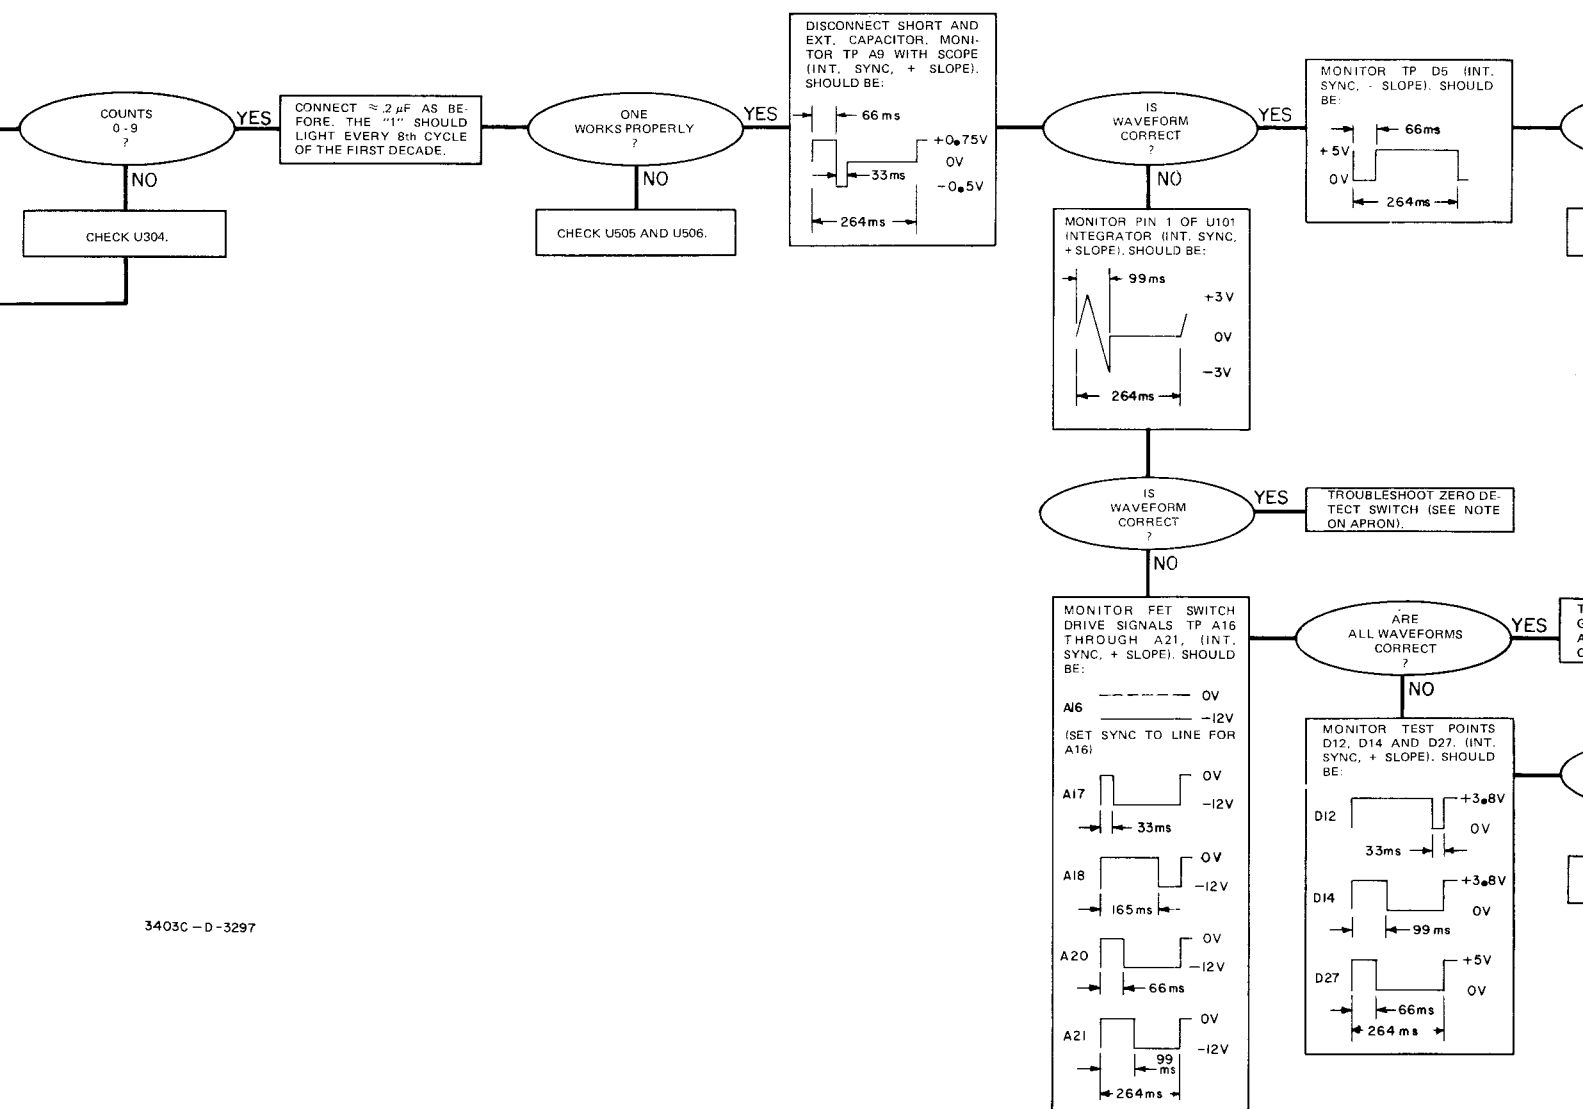


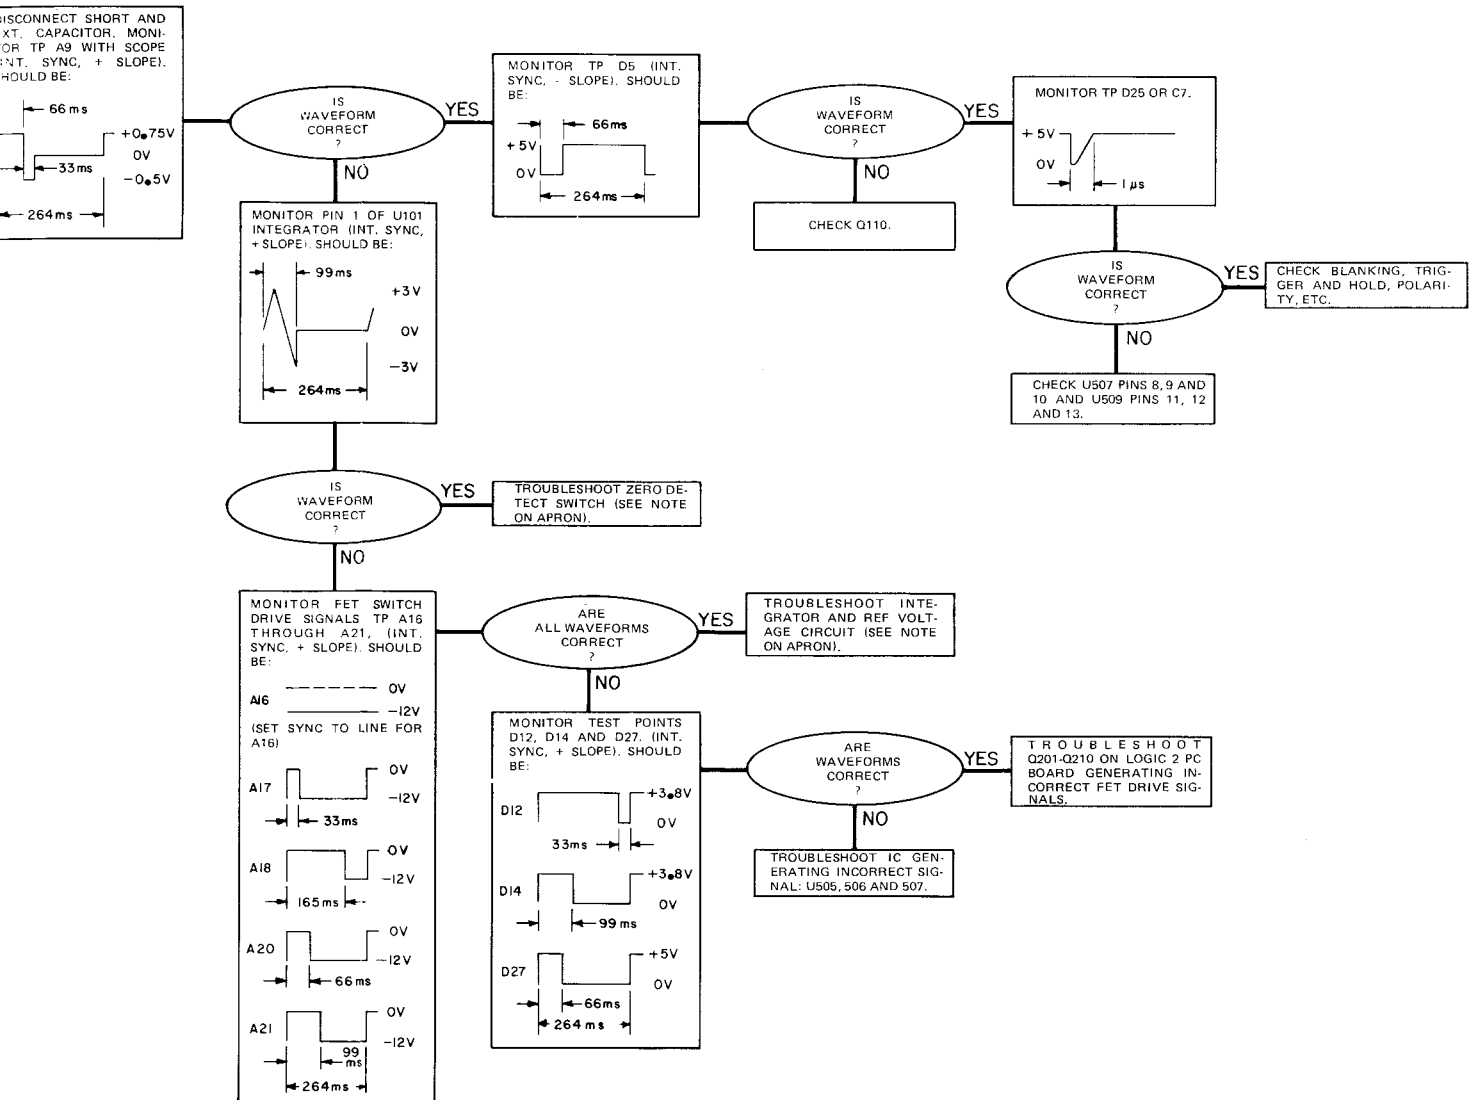


Figure 5-7. Panel Meter Troubleshooting Tree.  
Rev. A 5-19/5-20

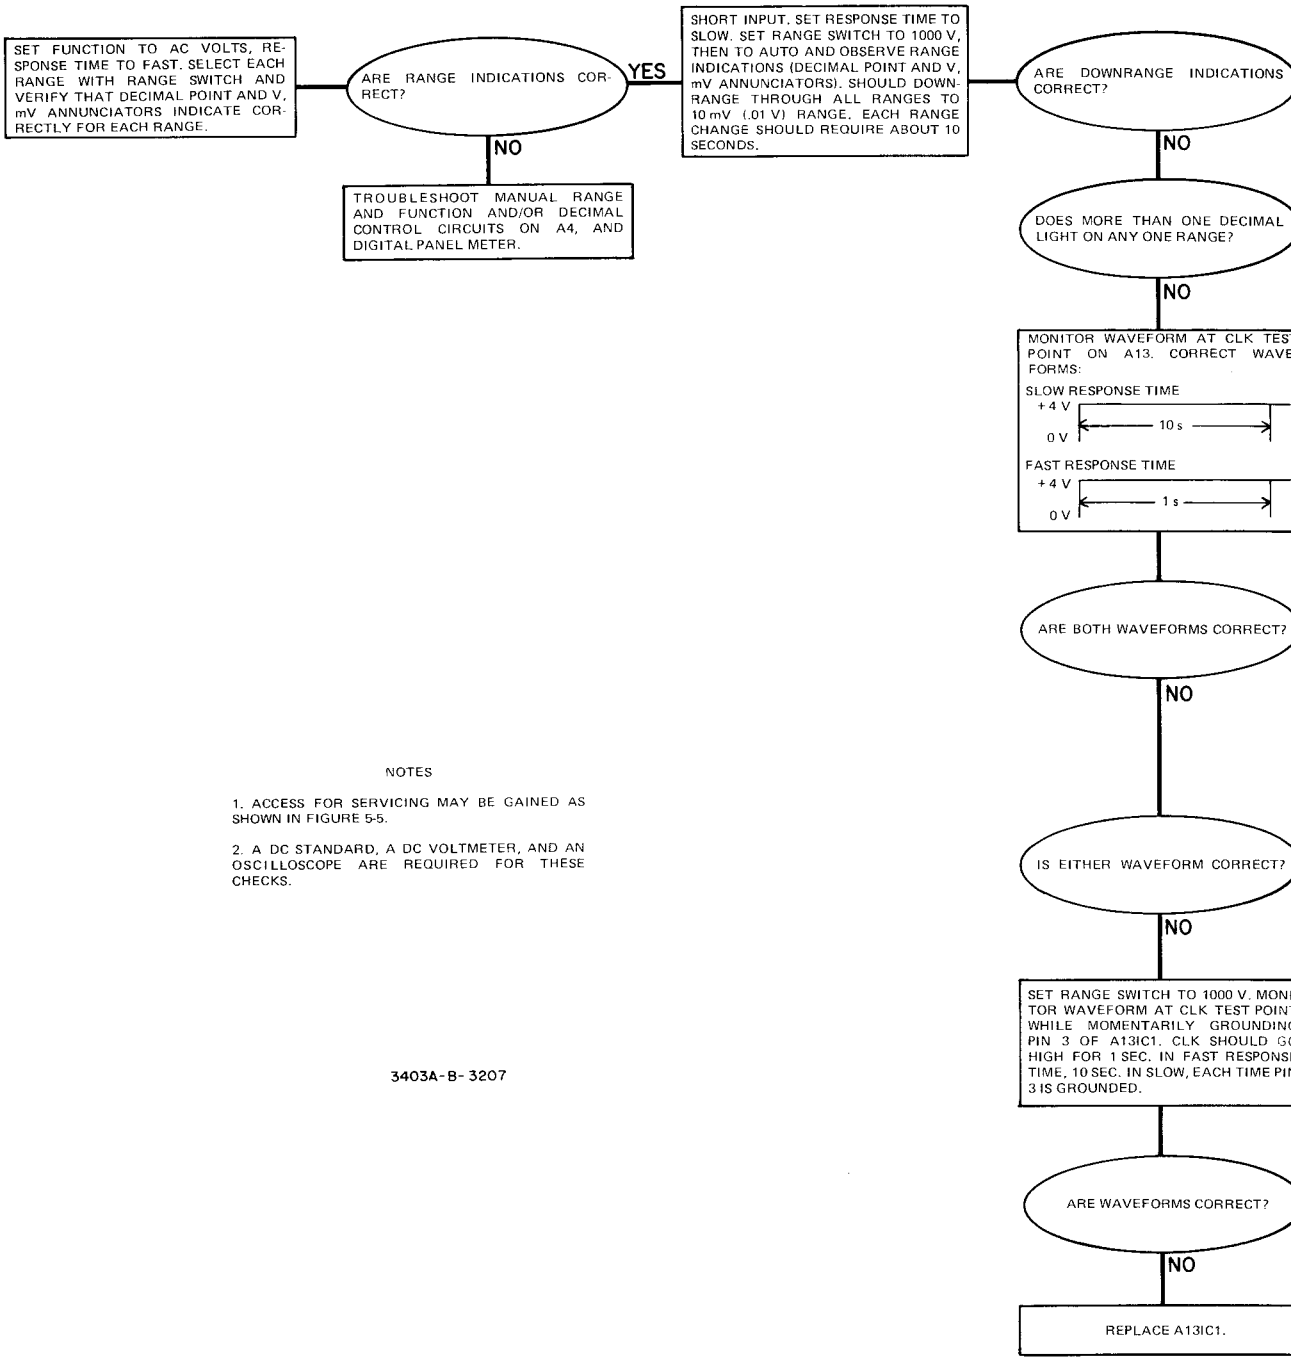

NOTES

1. ACCESS FOR SERVICING MAY BE GAINED AS SHOWN IN FIGURE 5-5.
2. A DC STANDARD, A DC VOLTMETER, AND AN OSCILLOSCOPE ARE REQUIRED FOR THESE CHECKS.

ME TO  
000 V,  
RANGE  
AND V,  
DOWN-  
ES TO  
RANGE  
OUT 10

ARE DOWNRANGE INDICATIONS CORRECT?

YES

SET FUNCTION TO DC VOLTS. (IF PREVIOUS CHECK WAS CORRECT, 3403A SHOULD BE ON 10 mV RANGE, 3 DIGITS BLANK, OVERRANGE "1" MAY BE ON.) REMOVE INPUT SHORT, CONNECT DC STANDARD TO INPUT AND APPLY 10 mV. THEN INCREASE INPUT TO 20 mV. 3403A SHOULD UP-RANGE TO 100 mV RANGE.

IS UP-RANGING CORRECT?


YES

SET INPUT TO 1000 V. 3403A SHOULD UP-RANGE. IF SO, SET RANGE TO 2 V, 10 V AND 20 V. 3403A SHOULD UP-RANGE FOR EACH STEP. OCCURS IN 1 SEC. ABOUT 10 SECONDS. (A) BELOW.

DOES MORE THAN ONE DECIMAL LIGHT ON ANY ONE RANGE?

YES

REPLACE A131C5.

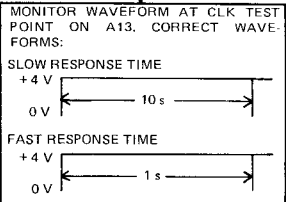

ARE BOTH WAVEFORMS CORRECT?

YES

MEASURE COUNTER OUTPUTS AT DECODER INPUTS (A131C5). A (PIN 15), B (PIN 14), C (PIN 13). VOLTAGE LEVELS SHOULD CORRESPOND TO RANGE INDICATED IN DISPLAY. SEE TRUTH TABLE IN FIGURE 7-18. (D INPUT, PIN 12, SHOULD BE LOW.)

DO LOGIC LEVELS AGREE WITH DISPLAY RANGE?

YES

DOES DISPLAY INDICATE 1000 V RANGE?

YES


MEASURE VOLTAGE AT PIN 10 OF A131C6. SHOULD BE > +2.4 V.

IS EITHER WAVEFORM CORRECT?

YES

(A) TROUBLESHOOT A13Q1 - 3. Q1 AND Q2 SHOULD BOTH BE ON FOR FAST RESPONSE TIME, OFF FOR SLOW WAVEFORM AT Q3 COLLECTOR SHOULD BE APPROXIMATELY AS FOLLOWS FOR EACH CYCLE OF THE AUTORANGE CLOCK IN EITHER FAST OR SLOW RESPONSE TIME:  
+5 V  
+1 V  
40 μs

REPLACE A131C5.

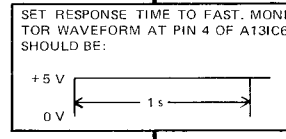

IS VOLTAGE CORRECT?

YES

SET RANGE SWITCH TO 1000 V. MONITOR WAVEFORM AT CLK TEST POINT WHILE MOMENTARILY GROUNDING PIN 3 OF A131C1. CLK SHOULD GO HIGH FOR 1 SEC. IN FAST RESPONSE TIME, 10 SEC. IN SLOW, EACH TIME PIN 3 IS GROUNDED.

ARE WAVEFORMS CORRECT?

YES

A131C3 OR A131C4 IS DEFECTIVE.

IS WAVEFORM CORRECT?

YES

REPLACE A131C6.

REPLACE A131C1.

MEASURE VOLTAGE AT PIN 10 OF A131C2. SHOULD BE > +2.4 V.

IS VOLTAGE CORRECT?

YES

REPLACE A131C2.

MEASURE VOLTAGE AT PIN 13 OF A131C3. SHOULD BE < +0.5 V.

IS VOLTAGE CORRECT?

YES

REPLACE A131C3.

TROUBLESHOOT DOWNRANGE COMPARATOR CIRCUIT (OUT-OF-RANGE DETECTOR) ON CONNECTOR ASSEMBLY A7 (A11).

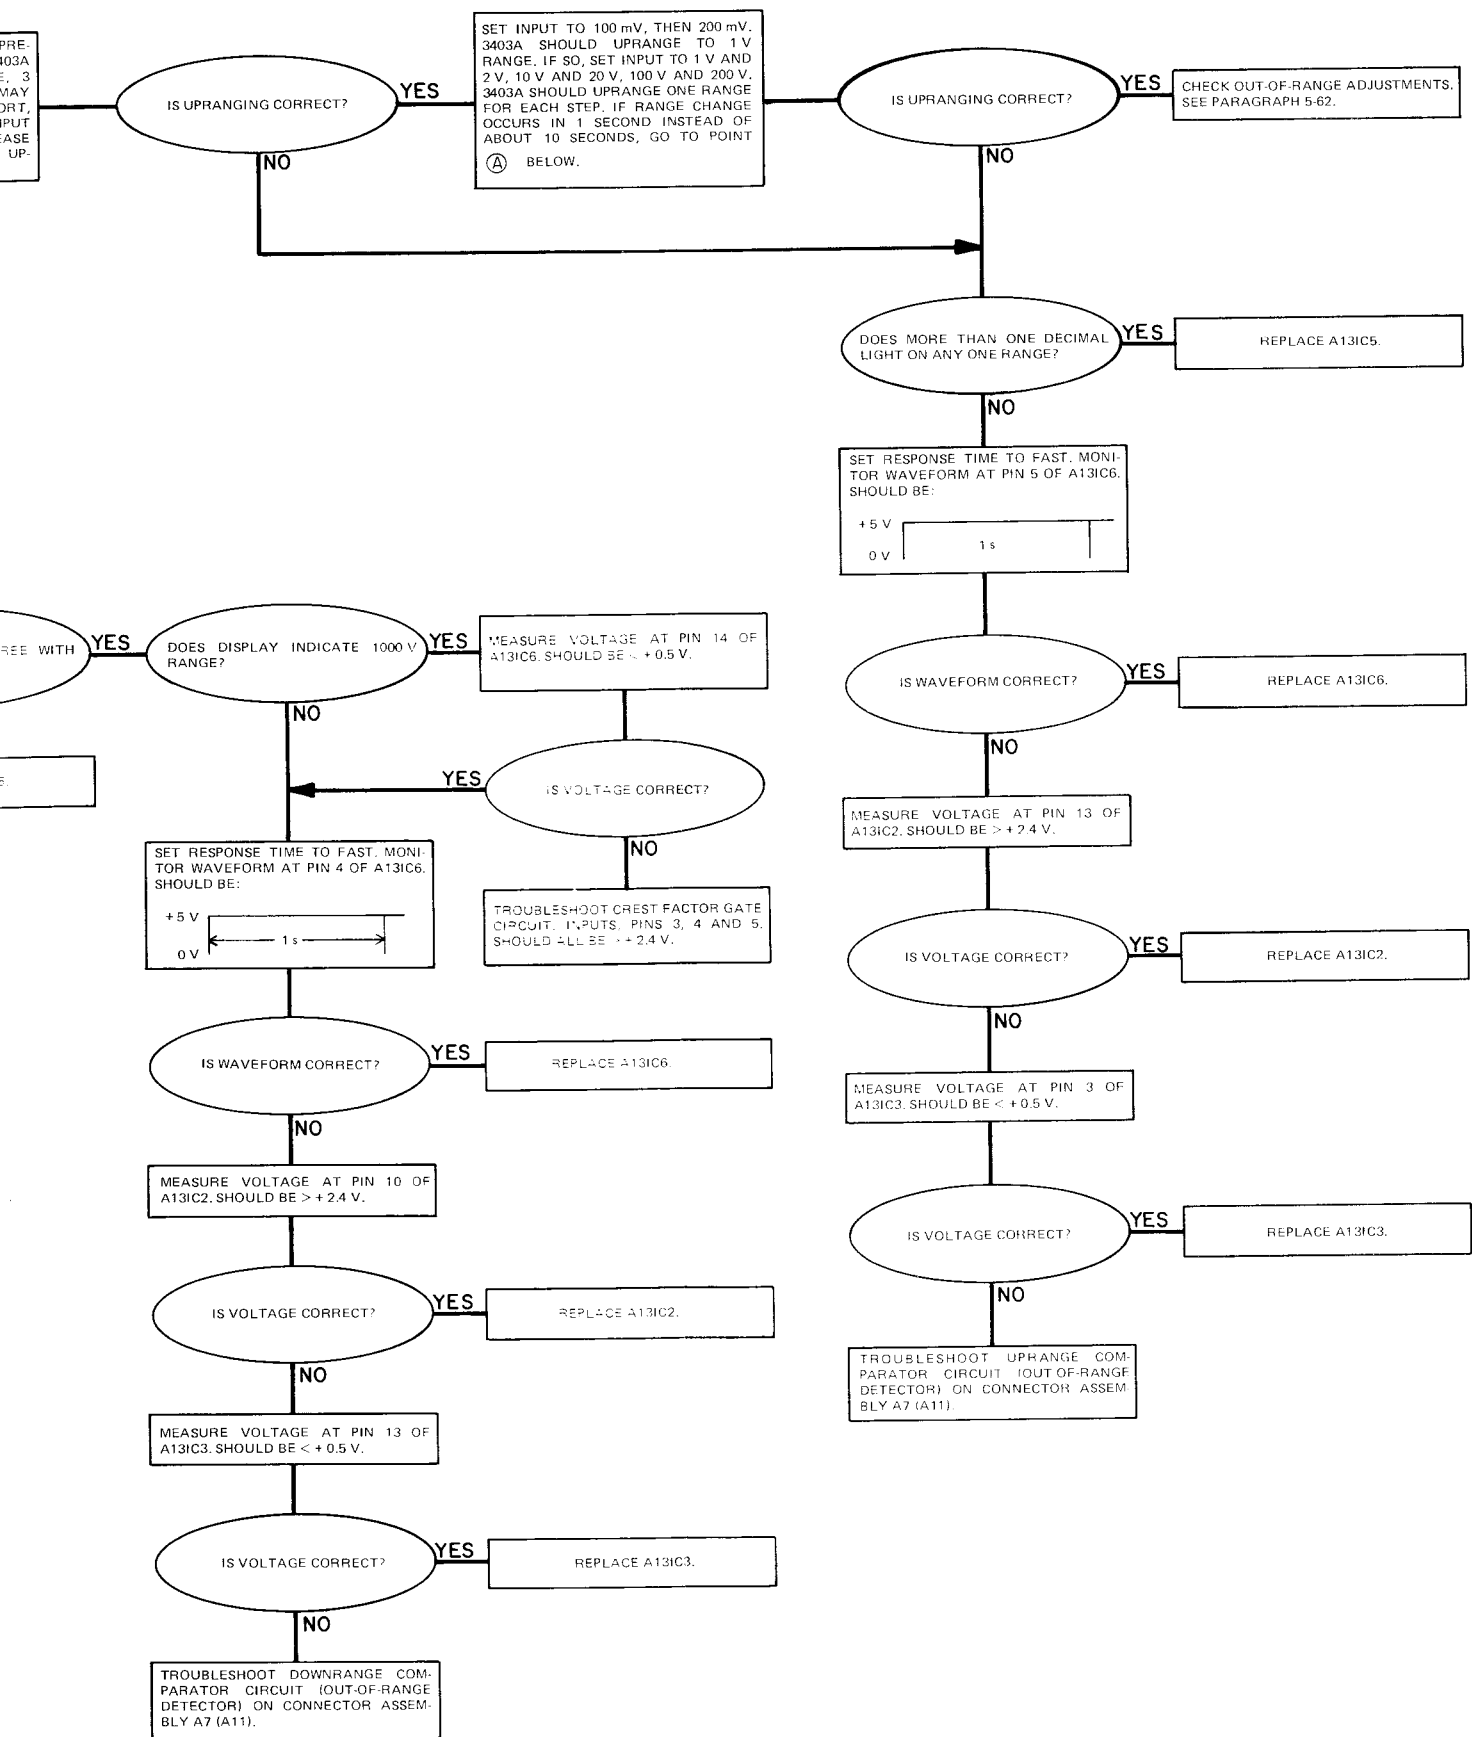


Figure 5-8. Autorange (A13) Troubleshooting Tree.  
5-21/5-22



# SECTION VI REPLACEABLE PARTS

## 6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphameric order of their reference designators and indicates the description, -hp- Part Number of each part, together with any applicable notes, and provides the following:

- a. Total quantity used in the instrument (Qty column). The total quantity of a part is given the first time the part number appears.
- b. Description of the part. (See list of abbreviations below.)
- c. Typical manufacturer of the part in a five-digit code. (See Appendix A for list of manufacturers.)
- d. Manufacturers part number.

6-3. Miscellaneous parts are listed at the end of Table 6-1.

## 6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office. (See Appendix B for list of office locations.) Identify parts by their Hewlett-Packard part numbers. Include instrument model and serial numbers.

## 6-6. NON-LISTED PARTS.

- 6-7. To obtain a part that is not listed, include:
- a. Instrument model number.
  - b. Instrument serial number.
  - c. Description of the part.
  - d. Function and location of the part.

## 6-8. PROPRIETARY PARTS.

6-9. Items marked by a dagger (†) in the reference designator column are available only for repair and service of Hewlett-Packard instruments.

ABBREVIATIONS	
Ag ..... silver Al ..... aluminum A ..... ampere(s) Au ..... gold  C ..... capacitor cer ..... ceramic coef ..... coefficient com ..... common comp ..... composition conn ..... connection  dep ..... deposited DPDT ..... double-pole double-throw DPST ..... double-pole single-throw  elect ..... electrolytic encap ..... encapsulated  F ..... farad(s) FET ..... field effect transistor fxd ..... fixed  GaAs ..... gallium arsenide GHz ..... gigahertz = 10 <sup>9</sup> hertz gd ..... guard(ed) Ge ..... germanium gnd ..... ground(ed)  H ..... henry(ies) Hg ..... mercury	Hz ..... hertz (cycle(s) per second)  ID ..... inside diameter impg ..... impregnated incd ..... incandescent ins ..... insulation(ed)  kΩ ..... kilohm(s) = 10 <sup>3</sup> ohms kHz ..... kilohertz = 10 <sup>3</sup> hertz  L ..... inductor lin ..... linear taper log ..... logarithmic taper  mA ..... milliamper(e)s = 10 <sup>-3</sup> amperes MHz ..... megahertz = 10 <sup>6</sup> hertz MΩ ..... megohm(s) = 10 <sup>6</sup> ohms met film ..... metal film mfr ..... manufacturer ms ..... millisecond mtg ..... mounting mV ..... millivolt(s) = 10 <sup>-3</sup> volts μF ..... microfarad(s) μs ..... microsecond(s) μV ..... microvolt(s) = 10 <sup>-6</sup> volts my ..... Mylar®  nA ..... nanoampere(s) = 10 <sup>-9</sup> amperes NC ..... normally closed Ne ..... neon NO ..... normally open

DECIMAL MULTIPLIERS																																																	
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Prefix</th> <th>Symbols</th> <th>Multiplier</th> </tr> </thead> <tbody> <tr> <td>tera</td> <td>T</td> <td>10<sup>12</sup></td> </tr> <tr> <td>giga</td> <td>G</td> <td>10<sup>9</sup></td> </tr> <tr> <td>mega</td> <td>M or Meg</td> <td>10<sup>6</sup></td> </tr> <tr> <td>kilo</td> <td>K or k</td> <td>10<sup>3</sup></td> </tr> <tr> <td>hecto</td> <td>h</td> <td>10<sup>2</sup></td> </tr> <tr> <td>deka</td> <td>da</td> <td>10</td> </tr> <tr> <td>deci</td> <td>d</td> <td>10<sup>-1</sup></td> </tr> </tbody> </table>	Prefix	Symbols	Multiplier	tera	T	10 <sup>12</sup>	giga	G	10 <sup>9</sup>	mega	M or Meg	10 <sup>6</sup>	kilo	K or k	10 <sup>3</sup>	hecto	h	10 <sup>2</sup>	deka	da	10	deci	d	10 <sup>-1</sup>	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Prefix</th> <th>Symbols</th> <th>Multiplier</th> </tr> </thead> <tbody> <tr> <td>centi</td> <td>c</td> <td>10<sup>-2</sup></td> </tr> <tr> <td>milli</td> <td>m</td> <td>10<sup>-3</sup></td> </tr> <tr> <td>micro</td> <td>μ</td> <td>10<sup>-6</sup></td> </tr> <tr> <td>nano</td> <td>n</td> <td>10<sup>-9</sup></td> </tr> <tr> <td>pico</td> <td>p</td> <td>10<sup>-12</sup></td> </tr> <tr> <td>femto</td> <td>f</td> <td>10<sup>-15</sup></td> </tr> <tr> <td>atto</td> <td>a</td> <td>10<sup>-18</sup></td> </tr> </tbody> </table>	Prefix	Symbols	Multiplier	centi	c	10 <sup>-2</sup>	milli	m	10 <sup>-3</sup>	micro	μ	10 <sup>-6</sup>	nano	n	10 <sup>-9</sup>	pico	p	10 <sup>-12</sup>	femto	f	10 <sup>-15</sup>	atto	a	10 <sup>-18</sup>
Prefix	Symbols	Multiplier																																															
tera	T	10 <sup>12</sup>																																															
giga	G	10 <sup>9</sup>																																															
mega	M or Meg	10 <sup>6</sup>																																															
kilo	K or k	10 <sup>3</sup>																																															
hecto	h	10 <sup>2</sup>																																															
deka	da	10																																															
deci	d	10 <sup>-1</sup>																																															
Prefix	Symbols	Multiplier																																															
centi	c	10 <sup>-2</sup>																																															
milli	m	10 <sup>-3</sup>																																															
micro	μ	10 <sup>-6</sup>																																															
nano	n	10 <sup>-9</sup>																																															
pico	p	10 <sup>-12</sup>																																															
femto	f	10 <sup>-15</sup>																																															
atto	a	10 <sup>-18</sup>																																															

DESIGNATORS	
A ..... assembly B ..... motor BT ..... battery C ..... capacitor CR ..... diode DL ..... delay line DS ..... lamp E ..... misc electronic part F ..... fuse	FL ..... filter HR ..... heater IC ..... integrated circuit J ..... jack K ..... relay L ..... inductor M ..... meter MP ..... mechanical part P ..... plug

NPO ..... negative positive zero (zero temperature coefficient) ns ..... nanosecond(s) = 10 <sup>-9</sup> seconds nsr ..... not separately replaceable  Ω ..... ohm(s) obd ..... order by description OD ..... outside diameter  p ..... peak pA ..... picoampere(s) pc ..... printed circuit pF ..... picofarad(s) 10 <sup>-12</sup> farads piv ..... peak inverse voltage p/o ..... part of pos ..... position(s) poly ..... polystyrene pot ..... potentiometer p-p ..... peak-to-peak ppm ..... parts per million prec ..... precision (temperature coefficient, long term stability and/or tolerance)	R ..... resistor Rh ..... rhodium rms ..... root-mean-square rot ..... rotary  Se ..... selenium sect ..... section(s) Si ..... silicon
---	--

sl ..... slide SPDT ..... single-pole double-throw SPST ..... single-pole single-throw  Ta ..... tantalum TC ..... temperature coefficient TiO <sub>2</sub> ..... titanium dioxide tog ..... toggle tol ..... tolerance trim ..... trimmer TSTR ..... transistor  V ..... volt(s) vacw ..... alternating current working voltage var ..... variable vdcw ..... direct current working voltage  W ..... watt(s) w/ ..... with wiv ..... working inverse voltage w/o ..... without ww ..... wirewound	* ..... optimum value selected at factory, average value shown (part may be omitted) ** ..... no standard type number assigned selected or special type  ® Dupont de Nemours
--	---

STD-B-2734

Table 6-1. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
TA1	03403-60001	1	AC CONVERTER ASSY	28480	03403-60001
TA1	03403-69501	1	REBUILT AC CONVERTER	28480	03403-69501
A1J1	1250-0047	1	CONNECTOR:RF BULKHEAD JACK	95712	12682-1
A1MP1	03403-22004	1	BOX:CONVERTER	28480	03403-22004
A1MP2	03403-22003	1	LID:CONVERTER BOX	28480	03403-22003
A1MP3	03403-00603	1	SHIELD:ATTENUATOR	28480	03403-00603
A1MP4	03403-09101	1	SPRING:LEAF	28480	03403-09101
A1MP5	0340-0740	1	INSULATOR	13103	08D#
A1MP6	0905-0429	1	SEAL:"O" RING 0.364" ID	83259	2-012N219-7
A1MP7	0905-0435	1	SEAL:"O" RING 1.487" ID	83259	2-128N219-7
A1MP8	0905-0431	1	SEAL:"O" RING 5.987" ID	83259	2-163N219-7
A1S6	3102-0006	1	SWITCH: SENSITIVE SPDT PIN PLUNGER	91929	225M261
		2			
TA2	03403-66530		ASSY:AMPLIFIER	28480	03403-66530
A2C1	0121-0168	2	C:VAR TEFLON 0.25-1.50 PF 600VDCW	28480	0121-0168
A2C2	0160-3841	1	C:FXD PORC 3.9+/-0.25 PF 1000WVAC	95275	VY13C3R9C
A2C3	0160-3842	1	C:FXD PORC 3.3+/-0.25 PF 1000WVAC	95275	VY10CA3R3CA
A2C4	0160-3662	1	C:FXD POLY 0.056 UF 10% 600VDCW	28480	0160-3662
A2C5	0160-3846	1	C:FXD MICA 39+/-0.5 PF 100VDCW	00853	RDM10E390D1S
A2C6	0160-3845	1	C:FXD MICA 22+/-0.5 PF 100VDCW	00953	RDM10E220D1S
A2C7	0121-0451	1	C:VAR TRIMMER 1.7-11.0 PF 250VDC	74970	187-0160-005
A2C8	0160-3844	1	C:FXD MICA 170 PF 1% 100VDCW	00853	RDM15E171F1S
A2C9*	0160-2201	1	C:FXD MICA 51 PF 5%	72136	RDM15E510J1C
A2C10	0121-0114	1	C:VAR CER 7-25 PF	28480	0121-0114
A2C11	0160-3843	1	C:FXD MICA 560 PF 1% 100VDCW	00853	RDM15E561F1S
A2C12	0160-3840	1	C:FXD MICA 7800 PF 1% 100VDCW	00853	RDM19E782F1S
A2C13	0160-3851	1	C:FXD POLY 0.085 UF 1.0% 50VDCW	28480	0160-3851
A2C14	0121-0168	1	C:VAR TEFLON 0.25-1.50 PF 600VDCW	28480	0121-0168
A2C15	0160-3501	1	C:FXD POLY 4 UF 10% 50VDCW	84411	HEW 138
A2C16	0160-3686	1	C:FXD POLY 0.27 UF 10% 50VDCW	28480	0160-3686
A2C17	0180-1835	2	C:FXD TA 68 UF 20% 15VDCW	56289	1500686X0015R2-DYS
A2C18	0180-1835	1	C:FXD TA 68 UF 20% 15VDCW	56289	1500686X0015R2-DYS
A2C19	0160-3830	1	C:FXD POLY 5.0 UF 10% 50VDCW	28480	0160-3830
A2C20	0160-3829	2	C:FXD POLY 0.47 UF 10% 50VDCW	28480	0160-3829
A2C21	0160-3787	1	C:FXD POLY 1.0 UF 10% 50VDCW	28480	0160-3787
A2C22	0160-0300	1	C:FXD MY 0.0027 UF 200VDCW	56289	192P27292-PTS
A2C23	0140-0198	1	C:FXD MICA 200 PF 5%	72136	RDM15F201J3C
A2C24	0150-0084	1	C:FXD CER 0.1 UF +80-20% 100VDCW	72982	8131-100-651-104Z
A2C25	0150-0050	6	C:FXD CER 1000 PF +80-20% 1000VDCW	56289	C0679102E102ZS26-CDH
A2C26	0150-0046	1	C:FXD TI DIOX 0.68 PF 5% 500VDCW	78488	TYPE GA
A2CR2	1902-3002	1	DIODE BREAKDOWN:2.37V 5%	28480	1902-3002
A2CR3	1901-0053	14	DIODE:SILICON 30VDCW	07263	FD3444
A2CR4	1901-0053		DIODE:SILICON 30VDCW	07263	FD3444
A2CR5	1901-0053		DIODE:SILICON 30VDCW	07263	FD3444
A2CR6	1902-3226	1	DIODE BREAKDOWN:18.2V 2%	28480	1902-3226
A2CR7	1901-0053		DIODE:SILICON 30VDCW	07263	FD3444
†A2IC1	0960-0173	1	IC: HYBRID AMPLIFIER	28480	0960-0173
A2IC2	1820-0203	2	IC: OPERATIONAL AMPLIFIER	07263	SL8940
A2IC3	1820-0203		IC: OPERATIONAL AMPLIFIER	07263	SL8940
†A2IC4	1826-0052	1	IC: LINEAR HYBRID AMP	28480	1826-0052
A2K1	0490-0969	1	RELAY: REED	28480	0490-0969
A2K3	0490-0978	2	RELAY: REED	28480	0490-0978
A2K4	0490-0978		RELAY: REED	28480	0490-0978
A2K5	0490-0968	5	RELAY: REED	28480	0490-0968
A2K6	0490-0968		RELAY: REED	28480	0490-0968
A2K7	0490-0968		RELAY: REED	28480	0490-0968
A2MP1	0340-0060	2	FEEDTHRU: INSULATED MOUNTING	28480	0340-0060
A2MP2	0340-0128	1	TERMINAL: STANDOFF	28480	0340-0128
A2MP3	1200-0423	1	SOCKET: IC BLK 16 CONTACT	23880	CSA2900-16B
A2MP4	1200-0424	4	SOCKET: IC BLK 14 CONTACT	23880	CSA2900-14B
A2MP5	1200-0432	14	SOCKET-CONTACT-DIP	27264	1938-4
A2Q1	1855-0368	12	TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A2Q2	1855-0082	1	TSTR:SI FET P-CHANNEL	28480	1855-0082
A2Q3	1855-0368		TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A2Q4	1854-0071	15	TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A2Q5	1853-0020	21	TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A2Q6	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A2Q7	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A2R1	0757-0280	6	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A2R2	0757-0280		R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A2R3	0698-7950	1	RESISTOR SET	28480	0698-7950
A2R5	2100-1984	1	R:VAR FLM 100 OHM 10% LIN 1/2W	28480	2100-1984

See introduction to this section for ordering information

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2R6	0698-7521	1	R:FXD FLM 5.11K OHM 5% 1/4W	28480	0698-7521
A2R7	2100-1985	1	R:VAR CERMET 20 OHM 20% LIN 1/2W	28480	2100-1985
A2R8	0698-7985	1	R:FXD FLM 2 OHM 5% 1/4W	28480	0698-7985
A2R9	2100-1986	1	R:VAR CERMET 1000 OHM 10% LIN 1/2W	28480	2100-1986
A2R10	1810-0056	1	R:NETWORK 6 (4)=50K(2)= 5K OHM	28480	1810-0056
A2R11	2100-2497	3	R:VAR FLM 2000 OHM 10% LIN 1/2W	28480	2100-2497
A2R12	0684-1001	7	R:FXD COMP 10 OHM 10% 1/4W	01121	CB 1001
A2R13	1810-0060	1	R:NETWORK 4(2)=1K(1)=5K(1)=620 OHM	28480	1810-0060
A2R14	0684-1001		R:FXD COMP 10 OHM 10% 1/4W	01121	CB 1001
A2R15	0684-1031	47	R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A2R16	0684-2241	1	R:FXD COMP 220K OHM 10% 1/4W	01121	CB 2241
A2R17	1810-0057	1	R:NETWORK 4(2)=2.6(1)=26(1)=24K OHM	28480	1810-0057
A2R18	2100-1738	6	R:VAR FLM 10K OHM 10% LIN 1/2W	28480	2100-1738
A2R19	1810-0053	1	R:PACK 5=36/30/47/130/200K OHM 5%	28480	1810-0053
A2R20	0698-3572	1	R:FXD FLM 60.4K OHM 1% 1/8W	28480	0698-3572
A2R21	0757-0466	1	R:FXD MET FLM 110K OHM 1% 1/8W	28480	0757-0466
A2R22	0811-2960	2	R:FXD WW 650K OHM 1.0% 1/5W	28480	0811-2960
A2R23	0811-2960		R:FXD WW 650K OHM 1.0% 1/5W	28480	0811-2960
A2R24	0698-7653	1	R:FXD FLM 25.5K OHM 1.0% 1/8W	28480	0698-7653
A2R25	0757-0446	1	R:FXD MET FLM 15.0K OHM 1% 1/8W	28480	0757-0446
A2R26	0698-4202	1	R:FXD FLM 8.87K OHM 1% 1/8W	28480	0698-4202
A2R27	2100-1738		R:VAR FLM 10K OHM 10% LIN 1/2W	28480	2100-1738
A2R28	1810-0059	1	R:NETWORK 4=2K/500/1K/4K OHM	28480	1810-0059
A2R29	0757-0346	3	R:FXD MET FLM 10 OHM 1% 1/8W	28480	0757-0346
A2R30	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A2R31	0757-0442	6	R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A2R32	2100-1738		R:VAR FLM 10K OHM 10% LIN 1/2W	28480	2100-1738
A2R33	0757-0346		R:FXD MET FLM 10 OHM 1% 1/8W	28480	0757-0346
A2R34	0698-3433	1	R:FXD MET FLM 28.7 OHM 1% 1/8W	28480	0698-3433
A2R41	0757-0420	1	R:FXD MET FLM 750 OHM 1% 1/8W	28480	0757-0420
A2R42	0684-1041	2	R:FXD COMP 100K OHM 10% 1/4W	01121	CB 1041
A2R71	2100-2061	1	R:VAR FLM 200 OHM 10% LIN 1/2W	28480	2100-2061
†A2TC1	0853-0014	1	THERMOCOUPLE	28480	0853-0014
A3	03403-66540	1	ASSY:FILTER	28480	03403-66540
A3C1	0180-0116	1	C:FXD ELECT 6.8 UF 10% 35VDCW	56289	1500685X903582-DYS
A3C2	0180-1794	1	C:FXD ELECT 22 UF 10% 35VDCW	56289	1500226X9035R2-DYS
A3C3	0160-3563	2	C:FXD POLY 10 UF 5% 50VDCW	84411	HEW 138
A3C4	0160-3402	2	C:FXD POLY 1.0 UF 5% 50VDCW	84411	HEW 138
A3C5	0150-0093	1	C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K800011
A3C6	0160-3563		C:FXD POLY 10 UF 5% 50VDCW	84411	HEW 138
A3C7	0160-3402		C:FXD POLY 1.0 UF 5% 50VDCW	84411	HEW 138
A3CR1	1901-0040	41	DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR2	1901-0045	1	DIODE:SILICON 0.75A 100PIV	04713	SR1358-7
A3CR3	1901-0053		DIODE:SILICON 30VDCW	07263	FD3444
A3CR4	1901-0053		DIODE:SILICON 30VDCW	07263	FD3444
A3CR5	1901-0053		DIODE:SILICON 30VDCW	07263	FD3444
A3CR6	1901-0053		DIODE:SILICON 30VDCW	07263	FD3444
A3CR7	1901-0053		DIODE:SILICON 30VDCW	07263	FD3444
A3CR8	1901-0053		DIODE:SILICON 30VDCW	07263	FD3444
A3CR9	1901-0053		DIODE:SILICON 30VDCW	07263	FD3444
A3CR10	1901-0053		DIODE:SILICON 30VDCW	07263	FD3444
A3CR11	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR12	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR13	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR14	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR15	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR16	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR17	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR18	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR19	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR20	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR21	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR22	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR23	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR24	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR25	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR26	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR27	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR28	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR29	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3CR30	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A3IC1	1826-0018	1	IC:LINEAR OPERATIONAL AMPLIFIER	28480	1826-0018
A3J10	1251-1626	1	CONNECTOR:PC (2 X 12) 24 CONTACT	71785	252-12-30-300

See introduction to this section for ordering information

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A3K8	0490-0968		RELAY:REED	28480	0490-0968
A3K9	0490-0968		RELAY:REED	28480	0490-0968
A3Q1	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A3Q2	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A3Q3	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A3Q4	1855-0368		TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A3Q5	1855-0368		TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A3Q6	1855-0368		TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A3Q7	1855-0368		TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A3Q8	1855-0368		TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A3Q9	1855-0368		TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A3Q10	1855-0368		TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A3Q11	1855-0368		TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A3Q12	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A3Q13	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A3Q14	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A3Q15	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A3Q16	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A3Q17	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A3Q18	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A3Q19	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A3Q20	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A3R1	1810-0054	1	R:PACK 4= 5/10/10/10K OHM 10%	28480	1810-0054
A3R2	0698-4195	1	R:FXD MET FLM 1.02K OHM 1% 1/8W	28480	0698-4195
A3R3	2100-3154	3	R:VAR CERMET 100K OHM 10% TYPE P 3/4W	28480	2100-3154
A3R4	1810-0058	1	R:NETWORK 5 (2)=15(2)=47(1)=4.7K OHM	28480	1810-0058
A3R5	1810-0079	1	R:NETWORK	28480	1810-0079
A3R6	0684-1011	2	R:FXD COMP 100 OHM 10% 1/4W	01121	CB 1011
A3R7	0684-1011		R:FXD COMP 100 OHM 10% 1/4W	01121	CB 1011
A3R8	2100-1738		R:VAR FLM 10K OHM 10% LIN 1/2W	28480	2100-1738
A3R9	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A3R10	2100-3056	6	R:VAR CERMET 5K OHM 10% TYPE P 3/4W	28480	2100-3056
A3R11	2100-3056		R:VAR CERMET 5K OHM 10% TYPE P 3/4W	28480	2100-3056
A3R12	2100-3056		R:VAR CERMET 5K OHM 10% TYPE P 3/4W	28480	2100-3056
A3R13	2100-3056		R:VAR CERMET 5K OHM 10% TYPE P 3/4W	28480	2100-3056
A3R14	2100-3056		R:VAR CERMET 5K OHM 10% TYPE P 3/4W	28480	2100-3056
A3R15	2100-3056		R:VAR CERMET 5K OHM 10% TYPE P 3/4W	28480	2100-3056
A3R16	1810-0062	1	R:NETWORK 4=355/342/159/671 OHM 1.0%	28480	1810-0062
A3R17	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R18	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R19	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R20	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R21	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R22	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R23	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R24	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R25	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R26	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R27	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R28	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R29	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R30	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R31	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R32	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R33	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R34	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A3R35	0684-2231	8	R:FXD COMP 22K OHM 10% 1/4W	01121	CB 2231
A3R36	0684-2231		R:FXD COMP 22K OHM 10% 1/4W	01121	CB 2231
A3R37	0684-2231		R:FXD COMP 22K OHM 10% 1/4W	01121	CB 2231
A3R38	0684-2231		R:FXD COMP 22K OHM 10% 1/4W	01121	CB 2231
A3R39	0684-2231		R:FXD COMP 22K OHM 10% 1/4W	01121	CB 2231
A3R40	0684-2231		R:FXD COMP 22K OHM 10% 1/4W	01121	CB 2231
A3R41	0684-2231		R:FXD COMP 22K OHM 10% 1/4W	01121	CB 2231
A3R42	0684-4731	6	R:FXD COMP 47K OHM 10% 1/4W	01121	CB 4731
A3R43	0757-0384	1	R:FXD FLM 20 OHM 1% 1/8W	28480	0757-0384
A3W1	8120-1718	4	CABLE ASSY	28480	8120-1718
A3W2	8120-1718		CABLE ASSY	28480	8120-1718
A4	03403-66516	1	ASSY:MASTER	28480	03403-66516
A4C1	0180-0309	3	C:FXD ELECT 4.7 UF 20% 10VDCW	56289	1500475X0010A2-DYS
A4IC1	1820-0307	10	IC:DTL HEX INVERTER	04713	MC 836P
A4IC2	1820-0273	4	IC:DTL QUAD 2-INPT AND GATE	28480	1820-0273
A4IC3	1820-0307		IC:DTL HEX INVERTER	04713	MC 836P
A4IC4	1820-0094	10	IC:DTL QUAD 2-INPUT GATE	04713	SC6903PK

See introduction to this section for ordering information

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A4IC5	1820-0086	2	IC:DTL DUAL 4-INPUT GATE (EXPANDABLE)	04713	SC6900PK
A4IC6	1820-0310	5	IC:DTL TRIPLE 3-INPUT NAND GATE	04713	SC6910PK
A4IC7	1820-0273		IC:DTL QUAD 2-INPUT AND GATE	28480	1820-0273
A4IC8	1820-0094		IC:DTL QUAD 2-INPUT GATE	04713	SC6903PK
A4IC9	1820-0307		IC:DTL HEX INVERTER	04713	MC836P
A4IC10	1820-0668	1	IC: TTL HEX BUFFER/DRIVER	28480	1820-0668
A4J4	1251-2825	1	CONNECTOR:50 PIN	28480	1251-2825
A4J5	1251-2026	2	CONNECTOR:PC 36 CONTACT	71785	252-18-30-300
A4J6	1251-2034	3	CONNECTOR:PC EDGE (2 X 10) 20 CONTACT	71785	252-10-30-300
A4J7	1251-2026		CONNECTOR:PC 36 CONTACT	71785	252-18-30-300
A4J8	1251-2034		CONNECTOR:PC EDGE (2 X 10) 20 CONTACT	71785	252-10-30-300
A4MP1	1200-0474	11	SOCKET:IC 14-PIN	28480	1200-0474
A4JA	1200-0424		SOCKET:IC BLK 14 CONTACT	23880	CSA2900-148
A4JB	1200-0424		SOCKET:IC BLK 14 CONTACT	23880	CSA2900-148
A4Q1 THRU 5	1853-0086	5	TSTR: SI PNP 2N5087	28480	1853-0086
A4R1	0684-1001		R:FXD COMP 10 OHM 10% 1/4W	01121	CB 1001
A4R2	0684-1001		R:FXD COMP 10 OHM 10% 1/4W	01121	CB 1001
A4R3	1810-0162	1	R:FXD PACKAGE 4.7 K OHM 2%	28480	1810-0162
A4R17 THRU 25	0684-1011	1	R:FXD COMP 100 OHM 10% 1/4W	01121	CB 1011
A4S1	3101-0982	1	SWITCH:SLIDE SPST 0.5A 125V	79727	GF124-0007
A4A1	03403-66513	1	ASSY:SWITCH	28480	03403-66513
A4A1MP1	3130-0392	3	SHAFT AND INDEX ASSY:30 DEGREE INDEX	28480	3130-0392
A4A1MP2	03403-04310	1	SWITCH PLATE:MOUNTING	28480	03403-04310
A4A1MP3	0380-0990	6	SPACER:0.375" LG	00000	0BD
A4A1MP4	0380-0991	6	SPACER:0.125" LG	00000	0BD
A4A1R3	2100-3282	1	R:VAR 50K OHM	28480	2100-3282
A4A1S1	3130-0395	1	SWITCH:WAFER	28480	3130-0395
A4A1S2	3130-0394	1	SWITCH:WAFER	28480	3130-0394
A4A1S3	3130-0393	1	SWITCH:WAFER	28480	3130-0393
A4A1W1	8120-1718		CABLE ASSY	28480	8120-1718
A4A1W2	8120-1718		CABLE ASSY	28480	8120-1718
A5	03403-66551	1	ASSY:RECTIFIER	28480	03403-66551
A5C9	0180-2428	1	C:FXD AL ELECT 250 UF +75-10% 25VDCW	56289	500D257G025EF7
A5C13	0180-2187	1	C:FXD ELECT 2500 UF +75-10% 15VDCW	56289	39D258G015GP4-DS8
A5CR1	1901-0638	1	DIODE ASSY:SI FULL WAVE BRIDGE	28480	1901-0638
A5CR2	1901-0363	3	DIODE ASSY:SI 100 PIV PER CELL	28480	1901-0363
A5CR3	1901-0363		DIODE ASSY:SI 100 PIV PER CELL	28480	1901-0363
A5CR4	1901-0363		DIODE ASSY:SI 100 PIV PER CELL	28480	1901-0363
A5MP1	1460-1269	1	SPRING:COMPRESSION, GROUND	00000	0BD
A5MP2	1600-0365	2	HEAT SINK	28480	1600-0365
A5Q1	1854-0402	2	TSTR:SI NPN	28480	1854-0402
A5Q2	1854-0402		TSTR:SI NPN	28480	1854-0402
A5Q4	1854-0072	1	TSTR:SI NPN 2N3054	28480	1854-0072
A6	03403-66561	1	ASSY:REGULATOR	28480	03403-66561
A6C1	0180-2506	2	C:FXD AL ELECT 470 UF +50-10% 40VDCW	73445	ET471X025A01
A6C2	0180-0049	4	C:FXD ELECT 20 UF +75-10% 50VDCW	56289	30D206G050CC2-DSM
A6C3	0160-0990	2	C:FXD MICA 100 PF 2% 300VDCW	00853	RDM15F101G3S
A6C5	0180-2506		C:FXD AL ELECT 470 UF +50-10% 40VDCW	73445	ET471X025A01
A6C6	0180-0049		C:FXD ELECT 20 UF +75-10% 50VDCW	56289	30D206G050CC2-DSM
A6C7	0160-0990		C:FXD MICA 100 PF 2% 300VDCW	00853	RDM15F101G3S
A6C10	0180-0049		C:FXD ELECT 20 UF +75-10% 50VDCW	56289	30D206G050CC2-DSM
A6C11	0160-0362	2	C:FXD MICA 510PF 5%	28480	0160-0362
A6C12	0180-0228	5	C:FXD ELECT 22 UF 10% 15VDCW	56289	150D226X9015B2-DYS
A6C14	0180-0049		C:FXD ELECT 20 UF +75-10% 50VDCW	56289	30D206G050CC2-DSM
A6C15	0160-0362		C:FXD MICA 510PF 5%	28480	0160-0362
A6C17	0180-0229	1	C:FXD ELECT 33 UF 10% 10VDCW	28480	0180-0229
A6CR1	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A6CR2	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A6CR3	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A6CR4	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A6CR7	1902-3074	1	DIODE BREAKDOWN:4.32V 2%	28480	1902-3074
A6CR8	1901-0522	1	DIODE:SI 100V PIV	28480	1901-0522
A6IC1	1820-0196	4	IC:LINEAR VOLTAGE REGULATOR(INPUT)	28480	1820-0196
A6IC2	1820-0196		IC:LINEAR VOLTAGE REGULATOR(INPUT)	28480	1820-0196
A6IC3	1820-0196		IC:LINEAR VOLTAGE REGULATOR(INPUT)	28480	1820-0196
A6IC4	1820-0196		IC:LINEAR VOLTAGE REGULATOR(INPUT)	28480	1820-0196
A6J12	1251-2034		CONNECTOR:PC EDGE (2 X 10) 20 CONTACT	71785	252-10-30-300
A6MP1	1205-0011	1	HEAT DISSIPATOR:FOR T0-5 AND T0-9 CASES	98978	TXBF-032-0258
A6Q3	1854-0039	1	TSTR:SI NPN	80131	2N3053
A6Q5	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A6R1	0813-0029	2	R:FXD WW 1 OHM 3% 3W	28480	0813-0029
A6R2	0757-0431	2	R:FXD MET FLM 2.43K OHM 1% 1/8W	28480	0757-0431
A6R3	0698-3496	2	R:FXD FLM 3.57K OHM 1% 1/8W	28480	0698-3496
A6R4	2100-2633	4	R:VAR CERMET 1K OHM 10% LIN 1/2W	28480	2100-2633
A6R5	0698-3382	2	R:FXD MET FLM 5.49K OHM 1% 1/8W	28480	0698-3382
A6R6	0813-0029		R:FXD WW 1 OHM 3% 3W	28480	0813-0029
A6R7	0757-0431		R:FXD MET FLM 2.43K OHM 1% 1/8W	28480	0757-0431
A6R8	0698-3496		R:FXD FLM 3.57K OHM 1% 1/8W	28480	0698-3496
A6R9	2100-2633		R:VAR CERMET 1K OHM 10% LIN 1/2W	28480	2100-2633
A6R10	0698-3382		R:FXD MET FLM 5.49K OHM 1% 1/8W	28480	0698-3382
A6R11	0683-0335	1	R:FXD COMP 3.3 OHM 5% 1/4W	01121	CB 0335
A6R12	0757-0283	3	R:FXD MET FLM 2.00K OHM 1% 1/8W	28480	0757-0283
A6R13	0698-4434	1	R:FXD FLM 2.32K OHM 1% 1/8W	28480	0698-4434
A6R14	2100-2633		R:VAR CERMET 1K OHM 10% LIN 1/2W	28480	2100-2633
A6R15	0698-3484	1	R:FXD FLM 6650 OHM 1% 1/8W	28480	0698-3484
A6R16	0698-5101	1	R:FXD COMP 33 OHM 10% 1/4W	01121	CB 3301
A6R17	0684-3311	1	R:FXD COMP 330 OHM 10% 1/4W	01121	CB 3311
A6R18	0684-1021	3	R:FXD COMP 1000 OHM 10% 1/4W	01121	CB 1021
A6R19	0812-0017	1	R:FXD WW 0.25 OHM 5% 3W	28480	0812-0017
A6R20	0698-4432	1	R:FXD FLM 2.1K OHM 1% 1/8W	28480	0698-4432
A6R21	0698-4435	1	R:FXD FLM 2.49K OHM 1% 1/8W	28480	0698-4435
A6R22	2100-2633		R:VAR CERMET 1K OHM 10% LIN 1/2W	28480	2100-2633
A6R23	0698-3226	1	R:FXD MET FLM 6.49K OHM 1% 1/8W	28480	0698-3226
A6R24	0684-4701	3	R:FXD COMP 47 OHM 10% 1/4W	01121	CB 4701
A6R25	0684-1001		R:FXD COMP 10 OHM 10% 1/4W	01121	CB 1001
A6R26	0684-1001		R:FXD COMP 10 OHM 10% 1/4W	01121	CB 1031
A6R27	0684-1001		R:FXD COMP 10 OHM 10% 1/4W	01121	CB 1001
A6R28	0812-0039	1	R:FXD WW 2.2 OHM 3% 3W	28480	0812-0039
A7	03403-66520	1	ASSY:CONNECTOR, STANDARD	28480	03403-66520
A7C1	0180-0228		C:FXD ELECT 22 UF 10% 15VDCW	56289	1500226X901582-DYS
A7C2	0180-0228		C:FXD ELECT 22 UF 10% 15VDCW	56289	1500226X901582-DYS
A7CR1	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A7CR2	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A7CR3	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A7CR4	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A7CR5	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A7CR6	1901-0376	2	DIODE:SILICON 35V	28480	1901-0376
A7CR7	1901-0040		DIODE:SILICON 30MA 30WV	07263	FDG1088
A7IC1	1826-0043	8	IC:LINEAR OPERATIONAL AMPLIFIER	28480	1826-0043
A7IC2	1826-0043		IC:LINEAR OPERATIONAL AMPLIFIER	28480	1826-0043
A7IC3	1826-0043		IC:LINEAR OPERATIONAL AMPLIFIER	28480	1826-0043
A7IC4	1820-0668	4	IC:TTL HEX DRIVER W/OPEN COLLECTOR(30V)	01295	SN7407N
A7IC5	1820-0668		IC:TTL HEX DRIVER W/OPEN COLLECTOR(30V)	01295	SN7407N
A7Q1	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A7Q2	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A7Q3	1855-0378	4	TSTR:FET SI N-CHANNEL	28480	1855-0378
A7Q4	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A7Q5	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A7Q6	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A7R1	2100-2522	6	R:VAR CERMET 10K OHM 10% LIN 1/2W	28480	2100-2522
A7R2	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A7R3	0684-1831	4	R:FXD COMP 18K OHM 10% 1/4W	01121	CB 1831
A7R4	0684-4731		R:FXD COMP 47K OHM 10% 1/4W	01121	CB 4731
A7R5	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A7R6	0684-1831		R:FXD COMP 18K OHM 10% 1/4W	01121	CB 1831
A7R7	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A7R8	0757-0435	2	R:FXD FLM 3920 OHM 1% 1/8W	28480	0757-0435
A7R9	0698-4445	2	R:FXD FLM 5.76K OHM 1% 1/8W	28480	0698-4445
A7R10	0757-0282	2	R:FXD MET FLM 221 OHM 1% 1/8W	28480	0757-0282
A7R11	2100-2413	2	R:VAR FLM 200 OHM 10% LIN 1/2W	28480	2100-2413
A7R12	0757-0428	2	R:FXD MET FLM 1.62K OHM 1% 1/8W	28480	0757-0428
A7R13	2100-2520	2	R:VAR CERMET 50 OHM 20% TYPE V 1/2W	28480	2100-2520

See introduction to this section for ordering information

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A7R14	0698-4411	2	R:FXD FLM 140 OHM 1% 1/8W	28480	0698-4411
A7R15	0684-4731		R:FXD COMP 47K OHM 10% 1/4W	01121	CB 4731
A7R16	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A7R17	0698-7394	4	R:FXD FLM 698 OHM 0.1% 1/8W	28480	0698-7394
A7R18	0698-7394		R:FXD FLM 698 OHM 0.1% 1/8W	28480	0698-7394
A7R19	0684-4731		R:FXD COMP 47K OHM 10% 1/4W	01121	CB 4731
A7R20	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A7R21	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A7R22	0684-1021		R:FXD COMP 1000 OHM 10% 1/4W	01121	CB 1021
A8	03403-61901	1	LINE SWITCH ASSY	28480	03403-61901
A8MP1	03403-04112	1	PLATE:SHIELD	28480	03403-04112
A8MP2	0340-0737	2	PLATE:INSULATOR	13103	ORD#
A8MP3	1600-0226	1	PLATE:RETAINER	28480	1600-0226
A8MP4	1400-0830	1	CLAMP:CABLE 0.375" W 0.625" LG	79963	#139 MODIFIED
A8MP5	5040-5846	1	CAM:POWER SWITCH	28480	5040-5846
A8S7	3101-1304	1	SWITCH:SENSITIVE SPDT 5 AMP	91929	111 SMI-T
A12	03403-66592	1	LOG CONVERTER BOARD ASSY	28480	03403-66592
A12C1	0150-0093	3	C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K80CC11
A12C2	0150-0093		C:FXD CER 0.01 UF +80-20% 100VDCW	72982	801-K80CC11
A12C3	0180-0374	2	C:FXD TANT. 10 UF 10% 20VDCW	56289	1500106X9C20B2-DYS
A12C4	0180-0374		C:FXD TANT. 10 UF 10% 20VDCW	56289	1500106X9C20B2-DYS
A12C5	0160-0181	1	C:FXD MICA 30PF 5% 300VDCW	14655	RDM15E300J3S
A12CR1	1901-0040	9	DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A12CR2	1902-0777	1	DIODE:BREAKDOWN 6.2V 5%	04713	1N825
A12CR3	1901-0053	2	DIODE:SILICON 30VDCW	07263	FD3444
A12CR4	1901-0053		DIODE:SILICON 30VDCW	07263	FD3444
A12CR5	1901-0053		DIODE:SILICON 30 WV	07263	FD3444
A12CR6	1901-0053		DIODE:SILICON 30 WV	07263	FD3444
A12CR7	1901-0376	4	DIODE:SILICON 35V	28480	1901-0376
A12CR8	1901-0376		DIODE:SILICON 35V	28480	1901-0376
A12CR9	1901-0376		DIODE:SILICON 35V	28480	1901-0376
A12CR10	1901-0376		DIODE:SILICON 35V	28480	1901-0376
A12CR11	1902-3149	2	DIODE BREAKDOWN:9.09V 5%	28480	1902-3149
A12CR12	1901-0240		DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A12CR13	1901-0040		DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A12CR14	1901-0040		DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A12IC1	1826-0111	4	IC	04713	MC1458C
A12IC2	1826-0054	1	IC:LINEAR	28480	1826-0054
A12IC3	1826-0111	1	IC	04713	MC1458C
A12IC4	1826-0111		IC	04713	MC1458C
A12IC5	1826-0066	1	IC:LIN. OP AMPL. 25K OHM	07263	U58777312
A12K1 THRU K3	0490-0778	3	RELAY, REED	28480	0490-0778
A12L1 THRU L3	0490-1033		RELAY/COIL, REED	28480	0490-1033
A12MP1	1200-0473	1	SOCKET:IC 16-PIN	28480	1200-0473
A12Q1	1853-0086	3	TSTR:SI PNP	80131	2N5087
A12Q2	1854-0071	14	TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A12Q3	1855-0368	5	TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A12Q4	1855-0368		TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A12Q5	1855-0368		TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A12Q6	1855-0368		TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A12Q7	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A12Q8	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A12Q11	1853-0086		TSTR:SI PNP	80131	2N5087
A12Q12	1855-0082	1	TSTR:SI FET P-CHANNEL	28480	1855-0082
A12Q13	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A12Q14	1855-0368		TSTR:FET SI NPN N-CHANNEL	28480	1855-0368
A12R1	0757-0280	1	R:FXD MET FLM 1K OHM 1% 1/8W	28480	0757-0280
A12R2	0698-3279	2	R:FXD MET FLM 4990 OHM 1% 1/8W	28480	0698-3279
A12R3	2100-2010	1	R:VAR FLM 10 OHM 20% LIN 1/2W	28480	2100-2010
A12R4	0757-0442	2	R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A12R5	0757-0274	1	R:FXD MET FLM 1.21K OHM 1% 1/8W	28480	0757-0274
A12R6	0757-0346	1	R:FXD MET FLM 10 OHM 1% 1/8W	28480	0757-0346
A12R7	0698-3279	1	R:FXD MET FLM 4990 OHM 1% 1/8W	28480	0698-3279
A12R8	2100-3274	2	R:VAR CER 10K OHM 10% LIN 1/2W	28480	2100-3274
A12R9	0757-0465	1	R:FXD MET FLM 100K OHM 1% 1/8W	28480	0757-0465
A12R10	0757-0417	2	R:FXD MET FLM 562 OHM 1% 1/8W	28480	0757-0417
A12R11	0698-4443	1	R:FXD FLM 4.53K OHM 1% 1/8W	28480	0698-4443
A12R12	0698-4443	1	R:FXD FLM 2260 OHM 1% 1/8W	28480	0698-4443

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A12R13	2100-3354	1	R:VAR CERMET 50K OHM 10%	28480	2100-3354
A12R14	0698-4468	1	R:FXD FLM 113K OHM 1% 1/8W	28480	0698-4468
A12R15	C757-0448	1	R:FXD MET FLM 18.2K OHM 1% 1/8W	28480	C757-0448
A12R16	0698-8180	2	R:FXD FLM 4.22K OHM 0.1% 1/8W	28480	0698-8180
A12R17	0698-8180		R:FXD FLM 4.22K OHM 0.1% 1/8W	28480	0698-8180
A12R18	0757-0283	1	R:FXD MET FLM 2.00K OHM 1% 1/8W	28480	C757-0283
A12R19	2100-3154	2	R:VAR CERMET 1000 OHM 10% TYPE P 3/4W	28480	2100-3154
A12R20	0698-7934	2	R:FXD MET FLM 12.1K OHM 0.1% 1/8W	28480	0698-7934
A12R21	0757-0442		R:FXD MET FLM 10.0K OHM 1% 1/8W	28480	0757-0442
A12R22	0698-7934		R:FXD MET FLM 12.1K OHM 0.1% 1/8W	28480	0698-7934
A12R23	C757-0388	1	R:FXD FLM 30.1 OHM 1% 1/8W	28480	C757-0388
A12R24	0698-4442	2	R:FXD MET FLM 4.42K OHM 1% 1/8W	28480	0698-4442
A12R25	0698-4442		R:FXD MET FLM 4.42K OHM 1% 1/8W	28480	0698-4442
A12R26	0684-4711	2	R:FXD COMP 470 OHM 10% 1/4W	01121	CB 4711
A12R27	0684-1031	15	R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A12R28	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A12R29	2100-3274		R:VAR CER 10K OHM 10% LIN 1/2W	28480	2100-3274
A12R30	0684-2231	4	R:FXD COMP 22K OHM 10% 1/4W	01121	CB 2231
A12R31	0684-1041	1	R:FXD COMP 100K OHM 10% 1/4W	01121	CB 1041
A12R32	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A12R33	0684-4731	5	R:FXD COMP 47K OHM 10% 1/4W	01121	CB 4731
A12R34	0698-3193	3	R:FXD FLM 10K OHM 0.25% 1/8W	28480	0698-3193
A12R35	0698-8316	8	R:FXD FLM 49.9K OHM 1% 1/8W	28480	0698-8316
A12R36	0698-8316		R:FXD FLM 49.9K OHM 1% 1/8W	28480	0698-8316
A12R37	0698-8316		R:FXD FLM 49.9K OHM 1% 1/8W	28480	0698-8316
A12R38	2100-3154		R:VAR CERMET 1000 OHM 10% TYPE P 3/4W	28480	2100-3154
A12R39	0684-4731		R:FXD COMP 47K OHM 10% 1/4W	01121	CB 4731
A12R40	0684-4731		R:FXD COMP 47K OHM 10% 1/4W	01121	CB 4731
A12R41	0684-4731		R:FXD COMP 47K OHM 10% 1/4W	01121	CB 4731
A12R42	0684-4731		R:FXD COMP 47K OHM 10% 1/4W	01121	CB 4731
A12R43	0698-8421	1	R:FXD FLM 149.625K OHM 5%	28480	0698-8421
A12R44	0698-8422	1	R:FXD FLM 299.25K OHM 5%	28480	0698-8422
A12R45	0684-4721	5	R:FXD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A12R46	0684-4721		R:FXD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A12R47	0684-1541	1	R:FXD COMP 150K OHM 10% 1/4W	01121	CB 1541
A12R48	0698-8316		R:FXD FLM 49.9K OHM 1% 1/8W	28480	0698-8316
A12R49	0698-4486	2	R:FXD MET FLM 24.9K OHM 1% 1/8W	28480	0698-4486
A12R50	0698-4481	1	R:FXD FLM 16.5K OHM 1% 1/8W	28480	0698-4481
A12R51	0698-8316		R:FXD FLM 49.9K OHM 1% 1/8W	28480	0698-8316
A12R52	0698-3519	1	R:FXD FLM 12.3K OHM 1% 1/8W	28480	0698-3519
A12R53	0698-3122	1	R:FXD MET FLM 4.12 OHM .1% 1/8W	28480	0698-3122
A12R54	0684-4711		R:FXD COMP 470 OHM 10% 1/4W	01121	CB 4711
A12R55	0698-3193		R:FXD FLM 10K OHM 0.25% 1/8W	28480	0698-3193
A12R56	2100-3056	2	R:VAR CERMET 5K OHM 10% TYPE P 3/4W	28480	2100-3056
A12R57	0698-3193		R:FXD FLM 10K OHM 0.25% 1/8W	28480	0698-3193
A12R58	2100-3056		R:VAR CERMET 5K OHM 10% TYPE P 3/4W	28480	2100-3056
A12R59	0698-8316		R:FXD FLM 49.9K OHM 1% 1/8W	28480	0698-8316
	03403-66571	1	ASSY:AUTORANGE	28480	03403-66571
	0180-0309		C:FXD ELECT 4.7 UF 20% 10VDCW	56289	1500475X0010A2-DYS
	0160-2605	12	C:FXD CER 0.02 MFD +80-20% 25VDCW	72982	5835000-Y5U 203Z
A13C3	0160-2605		C:FXD CER 0.02 MFD +80-20% 25VDCW	72982	5835000-Y5U 203Z
A13C4	0180-1715	2	C:FXD TA-ELECT 150 UF 10% 6VDCW	56289	1500157X9006R2-DYS
A13C5	0150-0073	4	C:FXD CER 100 PF 10% 1000VDCW	56289	C028102E101K527-CDH
A13CR1	1901-0040		DIODE:SILICON 30MA 30WV	07263	F0G1088
A13IC1	1820-0207	2	IC:TTL MONOSTABLE MULTIVIBRATOR	28480	1820-0207
A13IC2	1820-0310		IC:DTL TRIPLE 3-INPUT NAND GATE	04713	SC6910PK
A13IC3	1820-0307		IC:DTL HEX INVERTER	04713	MC836P
A13IC4	1820-0094		IC:DTL QUAD 2-INPUT GATE	04713	SC6903PK
A13IC5	1820-0491	2	IC:TTL BCD/DEC. DECODER/DRIVER	01295	SN74145N
A13IC6	1820-0546	2	IC:DIGITAL TTL SYNC 4-BIT BCD	28480	1820-0546
A13Q1	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A13Q2	1855-0378		TSTR:FET SI N-CHANNEL	28480	1855-0378
A13Q3	1854-0392	2	TSTR:SI NPN	80131	2N5088
A13R1	0684-4721		R:FXD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A13R2	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A13R3	0698-4529	2	R:FXD FLM 226K OHM 1% 1/8W	28480	0698-4529
A13R4	0698-4486	2	R:FXD MET FLM 24.9K OHM 1% 1/8W	28480	0698-4486
A13R5	0684-2731	2	R:FXD COMP 27K OHM 10% 1/4W	01121	CB 2731
A13R6	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031

FOR A14, SEE THE END OF THIS SECTION.



Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A15	03403-66582	1	INPUT/OUTPUT BOARD ASSY	28480	03403-66582
A15C1	0180-0210	1	C:FXD ELECT 3.3 UF 20% 15VDCW	56289	150D335X0015A2-DYS
A15C3	0150-0050	3	C:FXD CER 1000 PF +80-20% 100OVDCW	56289	C0678102E102LS26-CDH
A15C4	0180-0195	1	C:FXD ELECT 0.33 UF 20% 35VDCW	56289	150D334X0035A2-DYS
A15C5	0150-0050	1	C:FXD CER 1000 PF +80-20% 100OVDCW	56289	C0678102E102LS26-CDH
A15C6	0150-0073	1	C:FXD CER 100 PF 10% 100OVDCW	56289	C0288102E101KS27-CDH
A15C7	0180-0309	1	C:FXD ELECT 4.7 UF 20% 10VDCW	56289	150U475X0010A2-DYS
A15IC1	1820-0094	2	IC:DTL QUAD 2-INPUT GATE	04713	SC6903PK
A15IC2	1820-0273	2	IC:DTL QUAD 2-INPT AND GATE	28480	1820-C273
A15IC3	1820-0304	1	IC:TTL J-K M/S F/F W/CLOCKED & INPTS	01295	SN7472N
A15IC5	1820-0055	3	IC:TTL DECADE COUNTER 10 MHZ MIN.	01295	SN7490N
A15IC6	1820-0055	1	IC:TTL DECADE COUNTER 10 MHZ MIN.	01295	SN7490N
A15IC7	1820-0310	1	IC:DTL TRIPLE 3-INPUT NAND GATE	04713	SC6910PK
A15IC9	1820-0307	1	IC:DTL HEX INVERTER	04713	MC836P
A15IC10	1820-C665	1	IC:DTL 4-BIT LATCH	04713	MC1814P
A15IC11	1820-0055	1	IC:TTL DECADE COUNTER 10 MHZ MIN.	01295	SN7490N
A15IC12	1820-0207	2	IC:TTL MONOSTABLE MULTIVIBRATOR	28480	1820-0207
A15J2	1251-0085	1	CONNECTOR:FEMALE 36-PIN MINAT	28480	1251-0085
A15J3	1251-0292	1	CONNECTOR:FEMALE 24 PIN	28480	1251-C292
A15J9	1251-2875	1	CONNECTOR:PC (2 X 22) 44 CONTACT	71785	251-22-30-380
A15Q1	1854-0071	6	TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A15Q2	1853-0020	6	TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A15R1	0684-4721	5	R:FXD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A15R2	0684-5621	5	R:FXD COMP 5.6K OHM 10% 1/4W	01121	CB 5621
A15R3	0684-1031	5	R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A15R4	0684-1031	1	R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A15R5	0684-1031	1	R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A15R6	0684-4721	1	R:FXD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A15R7	0684-4701	1	R:FXD COMP 47 OHM 10% 1/4W	01121	CB 4701
A15R8	0684-4721	1	R:FXD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A15R9	0684-5621	3	R:FXD COMP 5.6K OHM 10% 1/4W	01121	CB 5621
A15R10	0684-1031	3	R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A15R11	0684-2221	3	R:FXD COMP 2200 OHM 10% 1/4W	01121	CB 2221
A15R12	0684-2221	3	R:FXD COMP 2200 OHM 10% 1/4W	01121	CB 2221
A15R13	0684-1031	3	R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A15R14	0684-1031	1	R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A15R15	0684-5621	1	R:FXD COMP 5.6K OHM 10% 1/4W	01121	CB 5621
A15R16	0684-5621	1	R:FXD COMP 5.6K OHM 10% 1/4W	01121	CB 5621
A15R17	0684-5621	1	R:FXD COMP 5.6K OHM 10% 1/4W	01121	CB 5621
A15R20	0757-0451	1	R:FXD MET FLM 24.3K OHM 1% 1/8W	28480	0757-C451
A20	5060-9133	1	PANEL METER ASSEMBLY (DOES NOT INCLUDE CASE OR DISPLAY UNITS U414, U415, U416 OR U417)	28480	5060-9133
A20C103	0160-3826	2	C:FXD POLY 0.39 UF 10% 50VDCW	28480	0160-3826
A20C104	0160-3826	2	C:FXD POLY 0.39 UF 10% 50VDCW	28480	0160-3826
A20C201	0150-0093	1	C:FXD CER 0.01 UF +80-20% 10CVDW	72982	8C1-K800011
A20C401	0160-C569	1	C:FXD 3000 PF	28480	0160-C569
A20C501	0160-3847	2	C:FXD CER 0.01 UF +100-10% 25VDCW	72982	8C05-Q1ACB-W5R-103P
A20C502	0160-3847	2	C:FXD CER 0.01 UF +100-10% 25VDCW	72982	8C05-Q1ACB-W5R-103P
A20C503	0150-0071	1	C:FXD CER 400 PF 5% 100OVDCW	56289	C0168102E401JS27-CDH
A20CR101	1902-0072	1	DIODE:BREAKDOWN 2% 7.87V 400MH	28480	1902-0072
A20CR102	1910-0016	1	DIODE:GE 60 WIV	28480	1910-0016
A20CR103	1901-0040	1	DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A20CR104	1902-0048	1	DIODE:BREAKDOWN 6.81V 5%	04713	SZ1C939-134
A20CR105	1901-0040	1	DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A20CR107	1902-3149	1	DIODE BREAKDOWN:9.09V 5%	28480	1902-3149
A20CR108	1902-0686	1	DIODE BREAKDOWN:6.2V 2%	04713	1N825
A20CR201	1901-0040	1	DIODE:SILICON 50 MA 30 WV	07263	FDG1088
A20CR202	1901-0518	1	DIODE:HOT CARRIER	28480	1901-0518
A20CR203	1902-3002	1	DIODE BREAKDOWN:2.37V 5%	28480	1902-3002
A20DS2	1990-0419	9	DIODE:VISIBLE LIGHT EMITTER	28480	1990-0419
A20DS3	1990-0419	9	DIODE:VISIBLE LIGHT EMITTER	28480	1990-0419
A20DS4	1990-0419	9	DIODE:VISIBLE LIGHT EMITTER	28480	1990-0419
A20DS5	1990-0419	9	DIODE:VISIBLE LIGHT EMITTER	28480	1990-0419
A20DS6	1990-0419	9	DIODE:VISIBLE LIGHT EMITTER	28480	1990-0419
A20DS7	1990-0419	9	DIODE:VISIBLE LIGHT EMITTER	28480	1990-0419
A20DS8	1990-0419	9	DIODE:VISIBLE LIGHT EMITTER	28480	1990-0419
A20DS9	1990-0419	9	DIODE:VISIBLE LIGHT EMITTER	28480	1990-0419
A20DS10	1990-0419	9	DIODE:VISIBLE LIGHT EMITTER	28480	1990-0419
A20MP1	1200-C462	32	SOCKET:IC CONTACT	00775	3-116141-2
A20MP2	5020-6897	1	HEAT SINK	28480	5020-6897
A20MP3	1460-1366	1	SPRING:COMPRESSION, HEAT SINK	00000	080
A20Q101	1855-0308	2	TSTR:SI NPN DUAL	28480	1855-0308
A20Q102	1855-0308	2	TSTR:SI NPN DUAL	28480	1855-0308

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A200103	1853-0086		TSTR:SI PNP	80131	2N5087
A200104	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	2848C	1854-0071
A200106	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	2848C	1854-0071
A200107	1855-0081	2	TSTR:SI FET	80131	2N5245
A200108	1855-0386	4	TSTR:FET N-CHANNEL	80131	2N4392
A200109	1855-0386		TSTR:FET N-CHANNEL	80131	2N4392
A200110	1855-0081		TSTR:SI FET	80131	2N5245
A200111	1855-0412	1	TSTR:FET	2848C	1855-0412
A200112	1855-0386		TSTR:FET N-CHANNEL	80131	2N4392
A200113	1855-0386		TSTR:FET N-CHANNEL	80131	2N4392
A200201	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	2848C	1853-0020
A200202	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	2848C	1854-0071
A200203	1853-0086		TSTR:SI PNP	80131	2N5087
A200204	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	2848C	1854-0071
A200205	1853-0086		TSTR:SI PNP	80131	2N5087
A200206	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	2848C	1854-0071
A200207	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	2848C	1853-0020
A200208	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	2848C	1854-0071
A200209	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	2848C	1853-0020
A200210	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	2848C	1854-0071
A200211	1854-0071	1	TSTR:SI NPN(SELECTED FROM 2N3704)	2848C	1854-0071
A200402	1853-0093	1	TSTR:SI PNP	2848C	1853-0093
A200502	1854-0071	1	TSTR:SI NPN(SELECTED FROM 2N3704)	2848C	1854-0071
A20R101	0698-8312	1	R:FXD FLM 499K OHM 1% 1/8W	2848C	0698-8312
A20R102	0698-8313	1	R:FXD FLM 52.3K OHM 1% 1/8W	2848C	0698-8313
A20R103	0698-3572	2	R:FXD FLM 60.4K OHM 1% 1/8W	2848C	0698-3572
A20R104	0698-3572		R:FXD FLM 60.4K OHM 1% 1/8W	2848C	0698-3572
A20R105	0698-4436	1	R:FXD FLM 2.80K OHM 1% 1/8W	2848C	0698-4436
A20R106	0698-3558	2	R:FXD MET FLM 4.02K OHM 1% 1/8W	2848C	0698-3558
A20R107	0698-3558		R:FXD MET FLM 4.02K OHM 1% 1/8W	2848C	0698-3558
A20R108	0757-0290	1	R:FXD MET FLM 6.19K OHM 1% 1/8W	2848C	0757-0290
A20R109	0698-3498	1	R:FXD MET FLM 8.66K OHM 1% 1/8W	2848C	0698-3498
A20R110	0684-2221		R:FXD COMP 220C OHM 10% 1/4W	01121	CB 2221
A20R111	0684-1231	1	R:FXD COMP 12K OHM 10% 1/4W	01121	CB 1231
A20R113	0698-3122	1	R:FXD MET FLM 412 OHM 1% 1/8W	2848C	0698-3122
A20R114	0757-0417		R:FXD MET FLM 562 OHM 1% 1/8W	2848C	0757-0417
A20R115	0698-4486		R:FXD MET FLM 24.9K OHM 1% 1/8W	2848C	0698-4486
A20R116	0698-8316		R:FXD FLM 49.9K OHM 1% 1/8W	2848C	0698-8316
A20R117	0698-8316		R:FXD FLM 49.9K OHM 1% 1/8W	2848C	0698-8316
A20R118	0698-8314	2	R:FXD FLM 215K OHM 1% 1/8W	2848C	0698-8314
A20R120	0698-8315	2	R:FXD FLM 3.24K OHM 1% 1/8W	2848C	0698-8315
A20R121	0698-8314		R:FXD FLM 215K OHM 1% 1/8W	2848C	0698-8314
A20R123	0698-8315		R:FXD FLM 3.24K OHM 1% 1/8W	2848C	0698-8315
A20R124	0698-4445	1	R:FXD FLM 5.76K OHM 1% 1/8W	2848C	0698-4445
A20R203	1810-0155	2	RESISTIVE NETWORK 5 X 4K OHM 10% 1/4W	56289	200C
A20R204	1810-0155	1	RESISTIVE NETWORK 5 X 4K OHM 10% 1/4W	56289	200C
A20R205	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A20R206	0683-1535		R:FXD COMP 15K OHM 5% 1/4W	01121	CB 1535
A20R207	0683-1535		R:FXD COMP 15K OHM 5% 1/4W	01121	CB 1535
A20R208	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A20R209	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
A20R210	0684-1021	1	R:FXD COMP 1000 OHM 10% 1/4W	01121	CB 1021
A20R211	2100-2061	2	R:VAR FLM 20C OHM 10% LIN 1/2W	2848C	2100-2061
A20R212	2100-2061		R:VAR FLM 20C OHM 10% LIN 1/2W	2848C	2100-2061
A20R401	0698-3160	1	R:FXD MET FLM 31.6K OHM 1% 1/8W	2848C	0698-3160
A20R402	0757-0468	1	R:FXD FLM 135K OHM 1% 1/8W	2848C	0757-0468
A20R403	0684-1011	1	R:FXD COMP 100 OHM 10% 1/4W	01121	CB 1011
A20R404	0684-5611	1	R:FXD COMP 560 OHM 10% 1/4W	01121	CR 5611
A20R501	0698-8378	5	R:FXD FLM 15C OHM 5%	2848C	0698-8378
A20R502	0698-8378		R:FXD FLM 15C OHM 5%	2848C	0698-8378
A20R503	0698-8378		R:FXD FLM 15C OHM 5%	2848C	0698-8378
A20R504	0698-8378		R:FXD FLM 15C OHM 5%	2848C	0698-8378
A20R505	0698-8378		R:FXD FLM 15C OHM 5%	2848C	0698-8378
A20R506	0698-8379	1	R:FXD FLM 3.9K OHM 5% 1/10W	2848C	0698-8379
A20U101	1820-0111		IC	04713	MC1458C
A20U208	1820-0273		IC:DTL QUAD 2-INPT AND GATE	28480	1820-0273
A20U212	1820-0077	2	IC:TTL SP DUAL EDGE TRIG, D F/F	12095	SN7474N
A20U215	1820-0596		IC:TTL LP DUAL EDGE TRIG, D F/F	1204C	DM74L74N
A20U302	1820-0600	3	IC:TTL LP DECADE COUNTER	1204C	DM85L90N
A20U303	1820-0600		IC:TTL LP DECADE COUNTER	1204C	DM85L90N
A20U304	1820-0600		IC:TTL LP DECADE COUNTER	1204C	DM85L90N
A20U401	1820-0207		IC:TTL MUNGSTABLE MULTIVIBRATOR	2848C	1820-0207
A20U414	1990-0399	1	INDICATOR PDL	2848C	1990-0399
A20U415	1990-0330	3	NUMERICAL DISPLAY:SOLID STATE	2848C	1990-0330
A20U416	1990-0330		NUMERICAL DISPLAY:SOLID STATE	2848C	1990-0330

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A20U417	199C-0330		NUMERICAL DISPLAY:SOLID STATE	2848C	199C-C330
A20U505	1820-C713	1	IC:TTL 4-BIT BINARY COUNTER	01295	SN74163N
A20U506	1820-0214	1	IC:TTL BCD TO DEC. DECODER	01295	SN7442N
A20U507	1820-0418	1	IC:DIGITAL DTL QUAD EXCLUSIVE OR GATE	28480	1820-0418
A20U509	1820-0094	1	IC:DTL QUAD 2-INPUT GATE	04713	SC6903PK
A20U510	1820-0068	1	IC:TTL TRIPLE 3-INPUT POS NAND GATE	1204C	SN741CN
A20U511	1820-0584	1	IC:TTL LP QUAD 2-INPT NOR GATE	1204C	DM74LC2N
	5040-5839	1	HOUSING: ANNUNCIATOR	28480	5040-5839
	03403-24301	1	MASK: ANNUNCIATOR	28480	03403-24301
	5000-9540	1	SLEEVE-LED	28480	5000-9540
	5000-9520		INSULATOR	28480	5000-9520
	5020-6871		CASE-EXTRU	28480	5020-6871
			CHASSIS PARTS AND MISCELLANEOUS		
TA1	03403-60001		AC CONVERTER ASSY	28480	03403-60001
TA1	03403-69501		REBUILT AC CONVERTER ASSY	28480	03403-69501
TA2	03403-66530		ASSY:AMPLIFIER	28480	03403-66530
A3	03403-66540		ASSY:FILTER	28480	03403-66540
A4	03403-66511		ASSY:MASTER	28480	03403-66511
A4A1	03403-66513		ASSY: SWITCH	28480	03403-66513
A5	03403-66551		ASSY:RECTIFIER	28480	03403-66551
A6	03403-66561		ASSY:REGULATOR	28480	03403-66561
A7	03403-66520		ASSY:CONNECTOR, STANDARD	28480	03403-66520
A8	03403-61901		LINE SWITCH ASSY	28480	03403-61901
A11	03403-66521		ASSY:CONNECTOR, ISOLATED	28480	03403-66521
A12	03403-66591		ASSY:CONVERTER, LOG	28480	03403-66591
A13	03403-66571		ASSY:AUTORANGE	28480	03403-66571
A14	03403-66572		ASSY:REMOTE AND AUTORANGE	28480	03403-66572
A15	03403-66581		ASSY:INPUT/OUTPUT	28480	03403-66581
†A21	03431-69501		ASSY:DISPLAY (DOES NOT INCLUDE DS1)	28480	03431-69501
†A22	03431-66507		ASSY:ANALOG, STANDARD	28480	03431-66507
†A23	03431-66502		ASSY:ANALOG, ISOLATED	28480	03431-66502
†A24	03431-60001		ASSY:LOGIC, STANDARD	28480	03431-60001
†A25	03431-60002		ASSY:CONTROL LOGIC, ISOLATED	28480	03431-60002
†A26	03431-60003		ASSY:CONTROL LOGIC, DB	28480	03431-60003
F1	2110-0340	1	FUSE:0.4A AT 250V	71400	MDL 4/10
F2	2110-0235	1	FUSE:0.2A 250V SLOW-BLOW	71400	MDL 2/10
J13	1251-2357	1	SOCKET:3-PIN MALE POWER RECEPTACLE	82339	EAC-301
J14	1510-0059	2	BINDING POST ASSY:RED INSULATOR	28480	1510-0059
J15	1510-0058	1	BINDING POST ASSY:BLK INSULATOR	28480	1510-0058
J16	1510-0059	1	BINDING POST ASSY:RED INSULATOR	28480	1510-0059
MP1	03403-60203	1	FRONT PANEL ASSY	28480	03403-60203
MP3	03403-04103	1	COVER:SIDE	28480	03403-04103
MP4	03403-01203	1	BRACKET:PC GUIDE	28480	03403-01203
MP5	5020-6871	1	CASE:EXTRUSION	28480	5020-6871
MP7	03403-22002	1	PANEL:TOP	28480	03403-22002
MP9	6960-0060	1	PLUG-BUTTON:STL	90763	51050
MP10	03403-22001	1	PANEL:REAR	28480	03403-22001
MP11	03403-60301	1	COVER ASSY:SIDE	28480	03403-60301
MP12	1490-0032	2	STAND:TILT HALF-MODULE	28480	1490-0032
MP13	03403-27901	2	FOOT ASSY	28480	03403-27901
MP14	5040-5848	1	HOLDER:AC CONVERTER	28480	5040-5848
MP17	03403-60302	1	COVER ASSY:BOTTOM	28480	03403-60302
MP19	7120-2769	1	WINDOW(STANDARD)	28480	7120-2769
MP20	7120-2771	1	WINDOW(AUTORANGE)	28480	7120-2771
MP21	7120-2770	1	WINDOW(REMOTE & AUTORANGE)	28480	7120-2770
MP22	7120-2767	1	PANEL:INSERT, STD	28480	7120-2767
MP23	7120-2768	1	PANEL:INSERT DB	28480	7120-2768
MP24	0370-1103	2	KNOB:RANGE	28480	0370-1103
MP25	0370-1099	2	KNOB:JADE GREY	28480	0370-1099
MP26	0370-1097	1	KNOB:POINTER 0.50", JADE GRAY	28480	0370-1097
MP27	9320-1605	1	CARD: SPEC	28480	9320-1605
MP28	0340-0738	1	INSULATOR: OUTPUT	28480	0340-0738
MP29	03403-04104	1	FILLER PLATE:REAR PANEL	28480	03403-04104
MP31	5040-5847	1	ADAPTER:BNC TO GR	28480	5040-5847
MP32	5060-5984	1	PC EXTENDER:2 X 25	28480	5060-5984
MP33	03403-90005	1	MANUAL	28480	03403-90005
MP34	03403-20203	1	FRAME:LEFT SIDE	28480	03403-20203

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
MP35	03403-20204	1	FRAME:RIGHT SIDE	28480	03403-20204
MP36	0340-0424	1	INSULATOR:BINDING POST, BLACK	28480	0340-0424
MP37	0340-0425	1	INSULATOR:BINDING POST, RED	28480	0340-0425
MP38	0340-0739	2	INSULATOR: SERIES PASS TSTR	28480	0340-0739
MP39	0460-1056	1	TAPE-PLASTIC	28480	0460-1056
MP40	5020-6892	1	INSULATOR: PANEL METER CASE	28480	5020-6892
MP41	5060-5940	1	PC EXTENDER	28480	5060-5940
MP42	5020-6896	1	INSULATOR: PANEL METER ASSY	28480	5020-6896
P2	1251-0084	1	PLUG:36-CONTACT MALE W/HOOD & CLAMP	28480	1251-0084
P3	1251-0293	1	CONNECTOR:24 CONTACT	28480	1251-0293
R1	2100-3269	1	R:VAR 75 OHM 20% 1/2W LIN	28480	2100-3269
R2	2100-3083	1	R:VAR CERMET 500 OHM 10% LIN 1/2W	28480	2100-3083
S5	3101-1234	1	SWITCH:SLIDE DPDT	82389	11A-1242
T1	9100-3233	1	TRANSFORMER	28480	9100-3233
W1	8120-1378	1	CABLE ASSY:POWER CORD 7.5 FT.	70903	KH 7081
XF1	1400-0084	1	FUSEHOLDER:EXTRACTOR POST TYPE	75915	342014

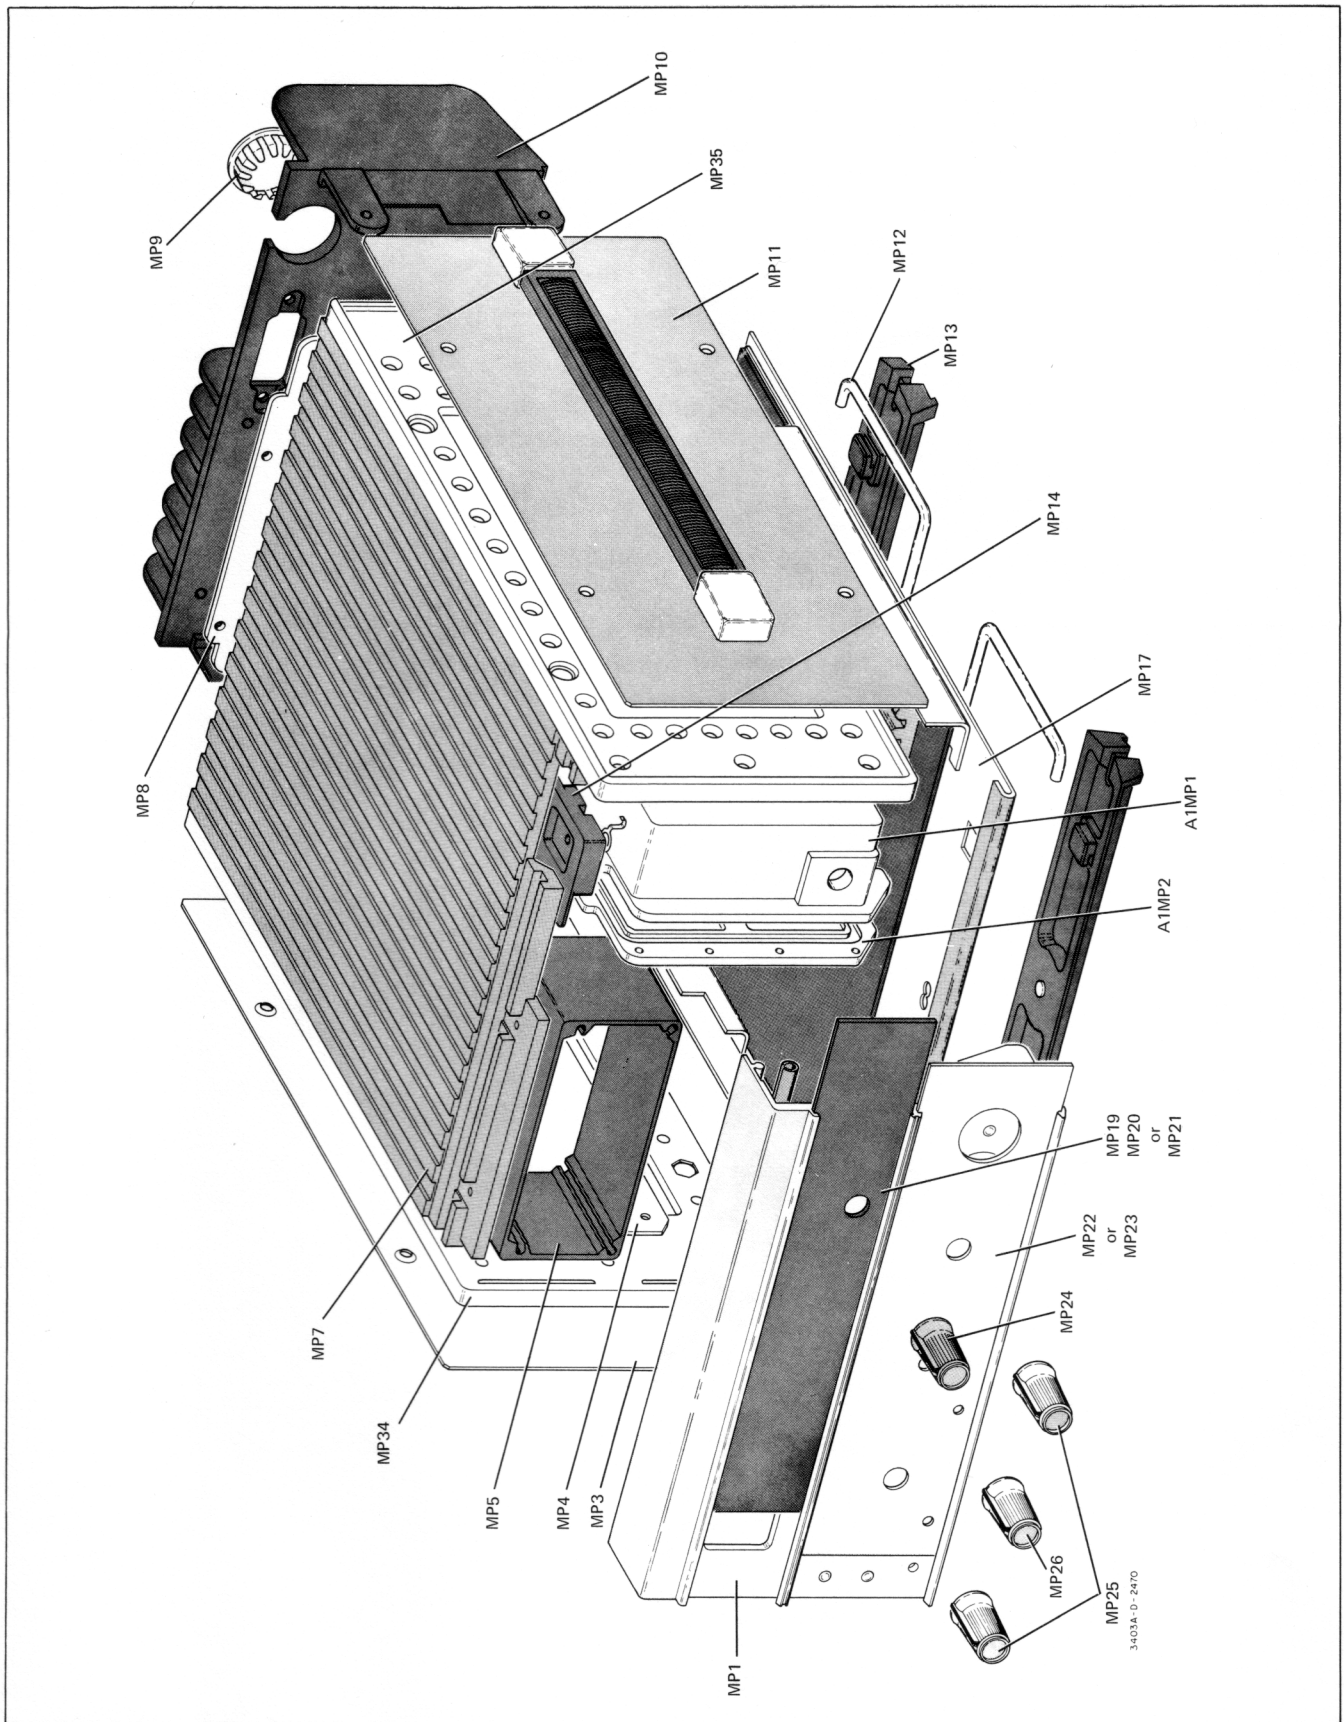


Figure 6-1. Location of Miscellaneous Parts.

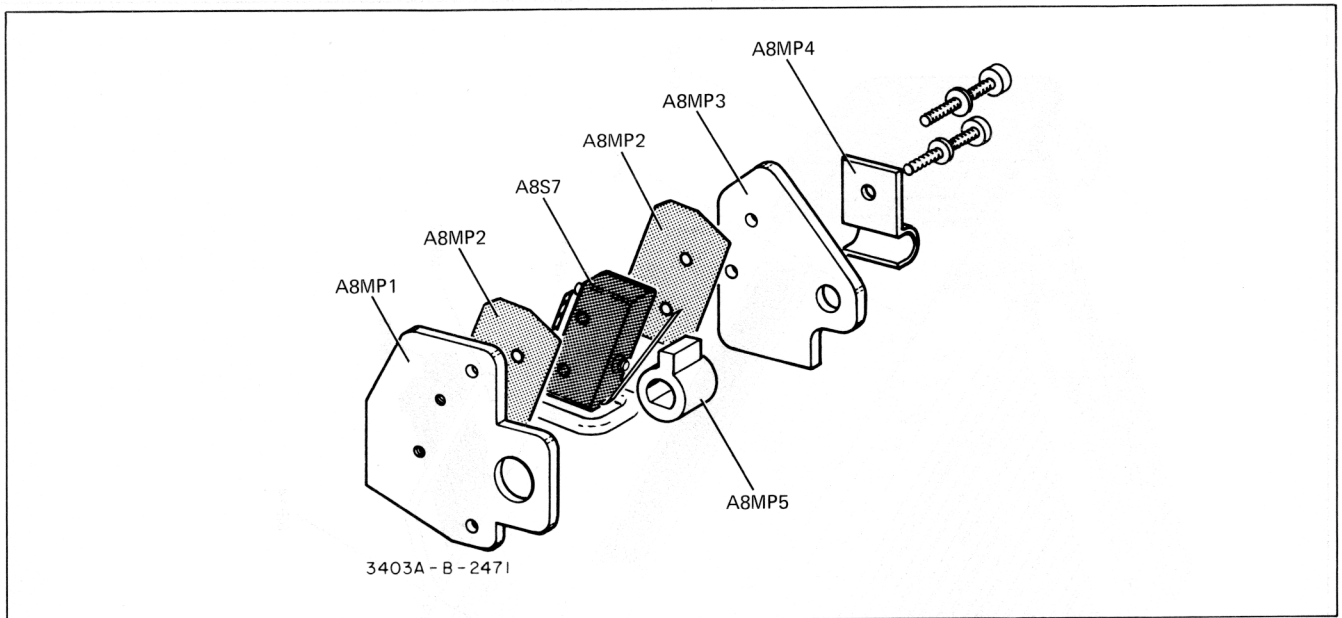


Figure 6-2. Line Switch Assembly A8.

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A14	03403-66572	1	ASSY:REMOTE AND AUTORANGE	28480	03403-66572
A14C1	0180-0309		C:F XD ELECT 4.7 UF 20% 10VDCW	56289	150D475X0010A2-DYS
A14C2	0160-2605		C:F XD CER 0.02 MFD +80-20% 25VDCW	72982	5835000-Y5U 203Z
A14C3	0160-2605		C:F XD CER 0.02 MFD +80-20% 25VDCW	72982	5835000-Y5U 203Z
A14C4	0160-2605		C:F XD CER 0.02 MFD +80-20% 25VDCW	72982	5835000-Y5U 203Z
A14C5	0160-2605		C:F XD CER 0.02 MFD +80-20% 25VDCW	72982	5835000-Y5U 203Z
A14C6	0150-0073		C:F XD CER 100 PF 10% 1000VDCW	56289	C0288102E101KS27-CDH
A14C7	0150-0050		C:F XD CER 1000 PF +80-20% 1000VDCW	56289	C0678102E102ZS26-CDH
A14C8	0160-2605		C:F XD CER 0.02 MFD +80-20% 25VDCW	72982	5835000-Y5U 203Z
A14C9	0180-0195	2	C:F XD ELECT 0.33 UF 20% 35VDCW	56289	1500334X0035A2-DYS
A14C10	0160-3486	1	C:F XD CER 0.47 UF -20+80% 500VDCW	72982	8131-060-651-47Z
A14C11	0150-0050		C:F XD CER 1000 PF +80-20% 1000VDCW	56289	C0678102E102ZS26-CDH
A14C12	0160-2605		C:F XD CER 0.02 MFD +80-20% 25VDCW	72982	5835000-Y5U 203Z
A14C13	0180-1715		C:F XD TA-ELECT 150 UF 10% 6VDCW	56289	1500157X9006R2-DYS
A14C14	0160-2605		C:F XD CER 0.02 MFD +80-20% 25VDCW	72982	5835000-Y5U 203Z
A14C15	0150-0073		C:F XD CER 100 PF 10% 1000VDCW	56289	C0288102E101KS27-CDH
A14C16	0150-0050		C:F XD CER 1000 PF +80-20% 1000VDCW	56289	C0678102E102ZS26-CDH
A14CR1	1901-0040		DIODE: SILICON 30MA 30WV	07263	FDG1088
A14CR2	1910-0016	4	DIODE:GERMANIUM 100MA/0.85V 60PIV	93332	D2361
A14IC1	1820-0307		IC:DTL HEX INVERTER	04713	MC836P
A14IC2	1820-0310		IC:DTL TRIPLE 3-INPUT NAND GATE	04713	SC6910PK
A14IC3	1820-0094		IC:DTL QUAD 2-INPUT GATE	04713	SC6903PK
A14IC4	1820-0207		IC:DTL MONOSTABLE MULTIVIBRATOR	28480	1820-0207
A14IC5	1820-0310		IC:DTL TRIPLE 3-INPUT NAND GATE	04713	SC6910PK
A14IC6	1820-0307		IC:DTL HEX INVERTER	04713	MC836P
A14IC7	1820-0307		IC:DTL HEX INVERTER	04713	MC836P
A14IC8	1820-0094		IC:DTL QUAD 2-INPUT GATE	04713	SC6903PK
A14IC9	1820-0094		IC:DTL QUAD 2-INPUT GATE	04713	SC6903PK
A14IC10	1820-0094		IC:DTL QUAD 2-INPUT GATE	04713	SC6903PK
A14IC11	1820-0086		IC:DTL DUAL 4-INPUT GATE (EXPANDABLE)	04713	SC6900PK
A14IC12	1820-0491		IC:TTL BCD/DEC. DECODER/DRIVER	01295	SN74145N
A14IC13	1820-0546		IC:DIGITAL TTL SYNC 4-BIT BCD	28480	1820-0546
A14IC14	1820-0094		IC:DTL QUAD 2-INPUT GATE	04713	SC6903PK
A14IC15	1820-0307		IC:DTL HEX INVERTER	04713	MC836P
A14IC16	1820-0301	2	IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A14IC17	1820-0301		IC:TTL QUAD BI-STABLE D-LATCH	01295	SN7475N
A14Q1	1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A14Q2	1855-0378		TSTR:FEI SI N-CHANNEL	28480	1855-0378
A14Q3	1856-0392		TSTR:SI NPN	80131	2N5088
A14R1	0684-1031		R:F XD COMP 10K OHM 10% 1/4W	01121	CB 1031
A14R2	0684-4721		R:F XD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A14R3	0684-5621		R:F XD COMP 5.6K OHM 10% 1/4W	01121	CB 5621
A14R4	0684-4721		R:F XD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A14R5	0684-4721	8	R:F XD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A14R6	0684-4721		R:F XD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A14R7	0684-4701		R:F XD COMP 47 OHM 10% 1/4W	01121	CB 4701
A14R8	0684-4721		R:F XD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A14R9	0684-5621		R:F XD COMP 5.6K OHM 10% 1/4W	01121	CB 5621
A14R10	0684-4721		R:F XD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A14R11	0684-1031		R:F XD COMP 10K OHM 10% 1/4W	01121	CB 1031
A14R12	0698-4529		R:F XD FLM 226K OHM 1% 1/8W	28480	0698-4529
A14R13	0698-4486		R:F XD MET FLM 24.9K OHM 1% 1/8W	28480	0698-4486
A14R14	0684-2731		R:F XD COMP 27K OHM 10% 1/4W	01121	CB 2731
A14R15	0684-1031		R:F XD COMP 10K OHM 10% 1/4W	01121	CB 1031
A14R16	0684-4721		R:F XD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A14R17	0684-5621		R:F XD COMP 5.6K OHM 10% 1/4W	01121	CB 5621
A14R18	0684-4721		R:F XD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A14R19	0684-4721		R:F XD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A14R20	0684-4721		R:F XD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A14R21	0684-4721		R:F XD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A14R22	0684-4721		R:F XD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A14R23	0684-4721		R:F XD COMP 4700 OHM 10% 1/4W	01121	CB 4721
A14R24	0684-4721		R:F XD COMP 4700 OHM 10% 1/4W	01121	CB 4721

## SECTION VII CIRCUIT DIAGRAMS

### 7-1. INTRODUCTION.

7-2. This section contains the diagrams necessary to maintain the Model 3403C. Both schematic diagrams and pictorial views of the circuit boards are included. Figure 7-1 shows the location of the various assemblies, and schematic diagrams are in order by assembly number. Figure 7-2 is a block diagram. The following assemblies, including options, are used in the 3403C :

- A1 AC Converter Assembly (includes A2 and A3)
- A2 Amplifier Assembly
- A3 Filter Assembly
- A4 Master Board Assembly
- A5 Rectifier Assembly
  
- A6 Regulator Assembly
- A7 Standard Connector Assembly
- A8 Line Switch Assembly
- A12 Log Converter Assembly
  
- A13 Autorange Assembly
- A14 Remote and Autorange Assembly
- A15 Input/Output Assembly
- A20 Digital Panel Meter (Std)

### 7-3. NOTES.

7-4. The following notes apply in general to all schematic diagrams:


a. Partial reference designators are shown within assembly outlines. Prefix with assembly number for complete designator.


b. Component values are shown as follows unless otherwise noted:


- Capacitance in microfarads
- Resistance in ohms
- Inductance in microhenries

c. \* Average value shown. Optimum value selected at factory.

d.  Denotes assembly.

e.  Denotes main signal path.

f.  Denotes feedback path.


g.  Denotes screwdriver adjustment.

h. All relays shown de-energized.

i. Rotary switches shown in extreme counterclockwise position.

j.  $\sqrt{924}$  denotes wire color: color code same as resistor color code. First number identifies base color, second number identifies wider strip, third number identifies narrower strip, (e.g.  $\sqrt{924}$  = white, red, yellow).

### 7-5. SYMBOLS.

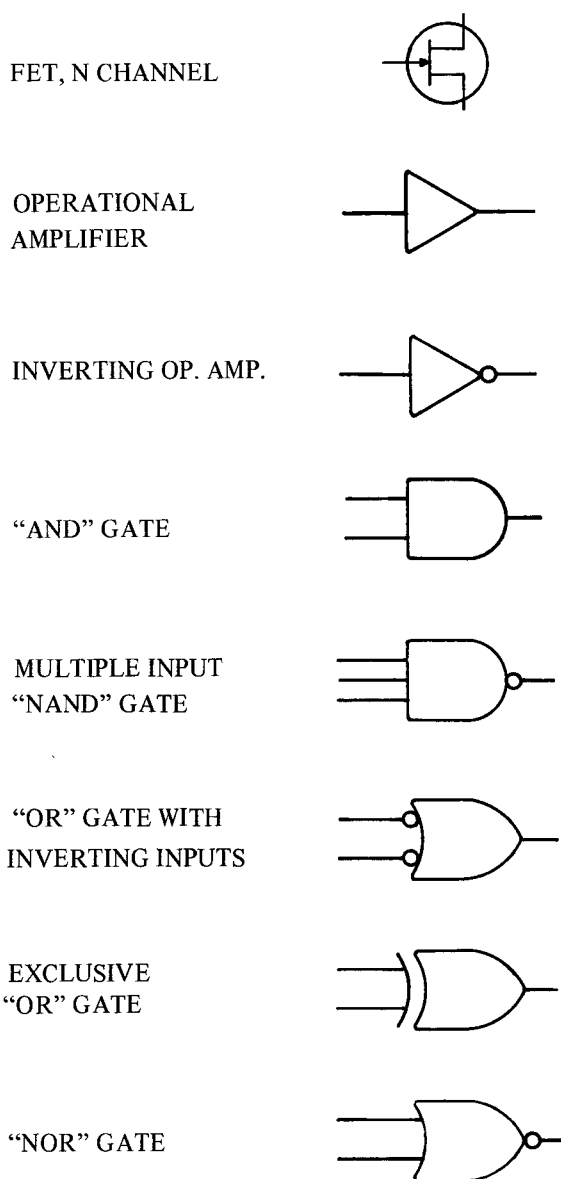






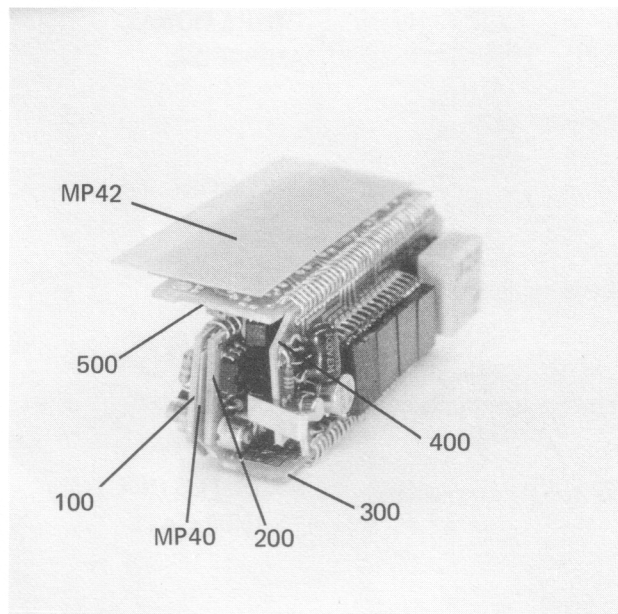



Figure 7-1. Assembly Locations.

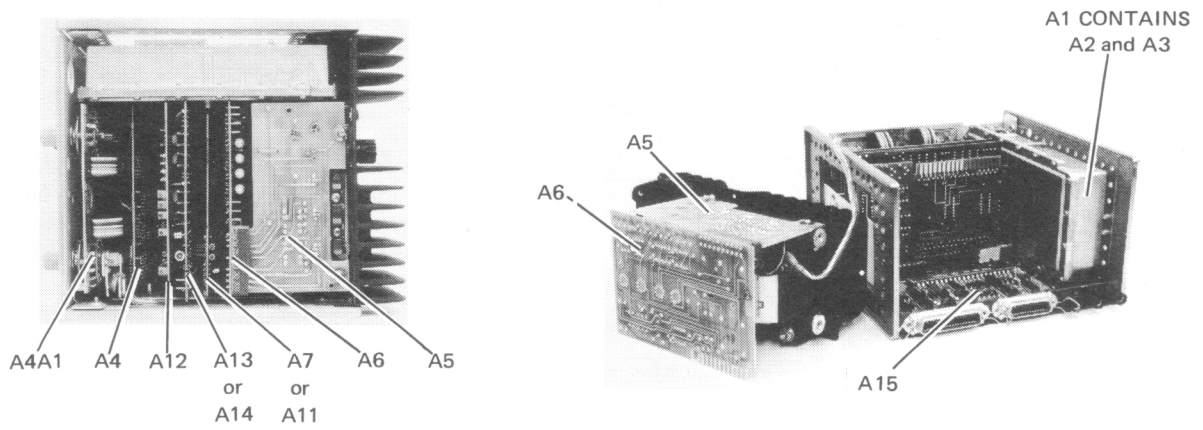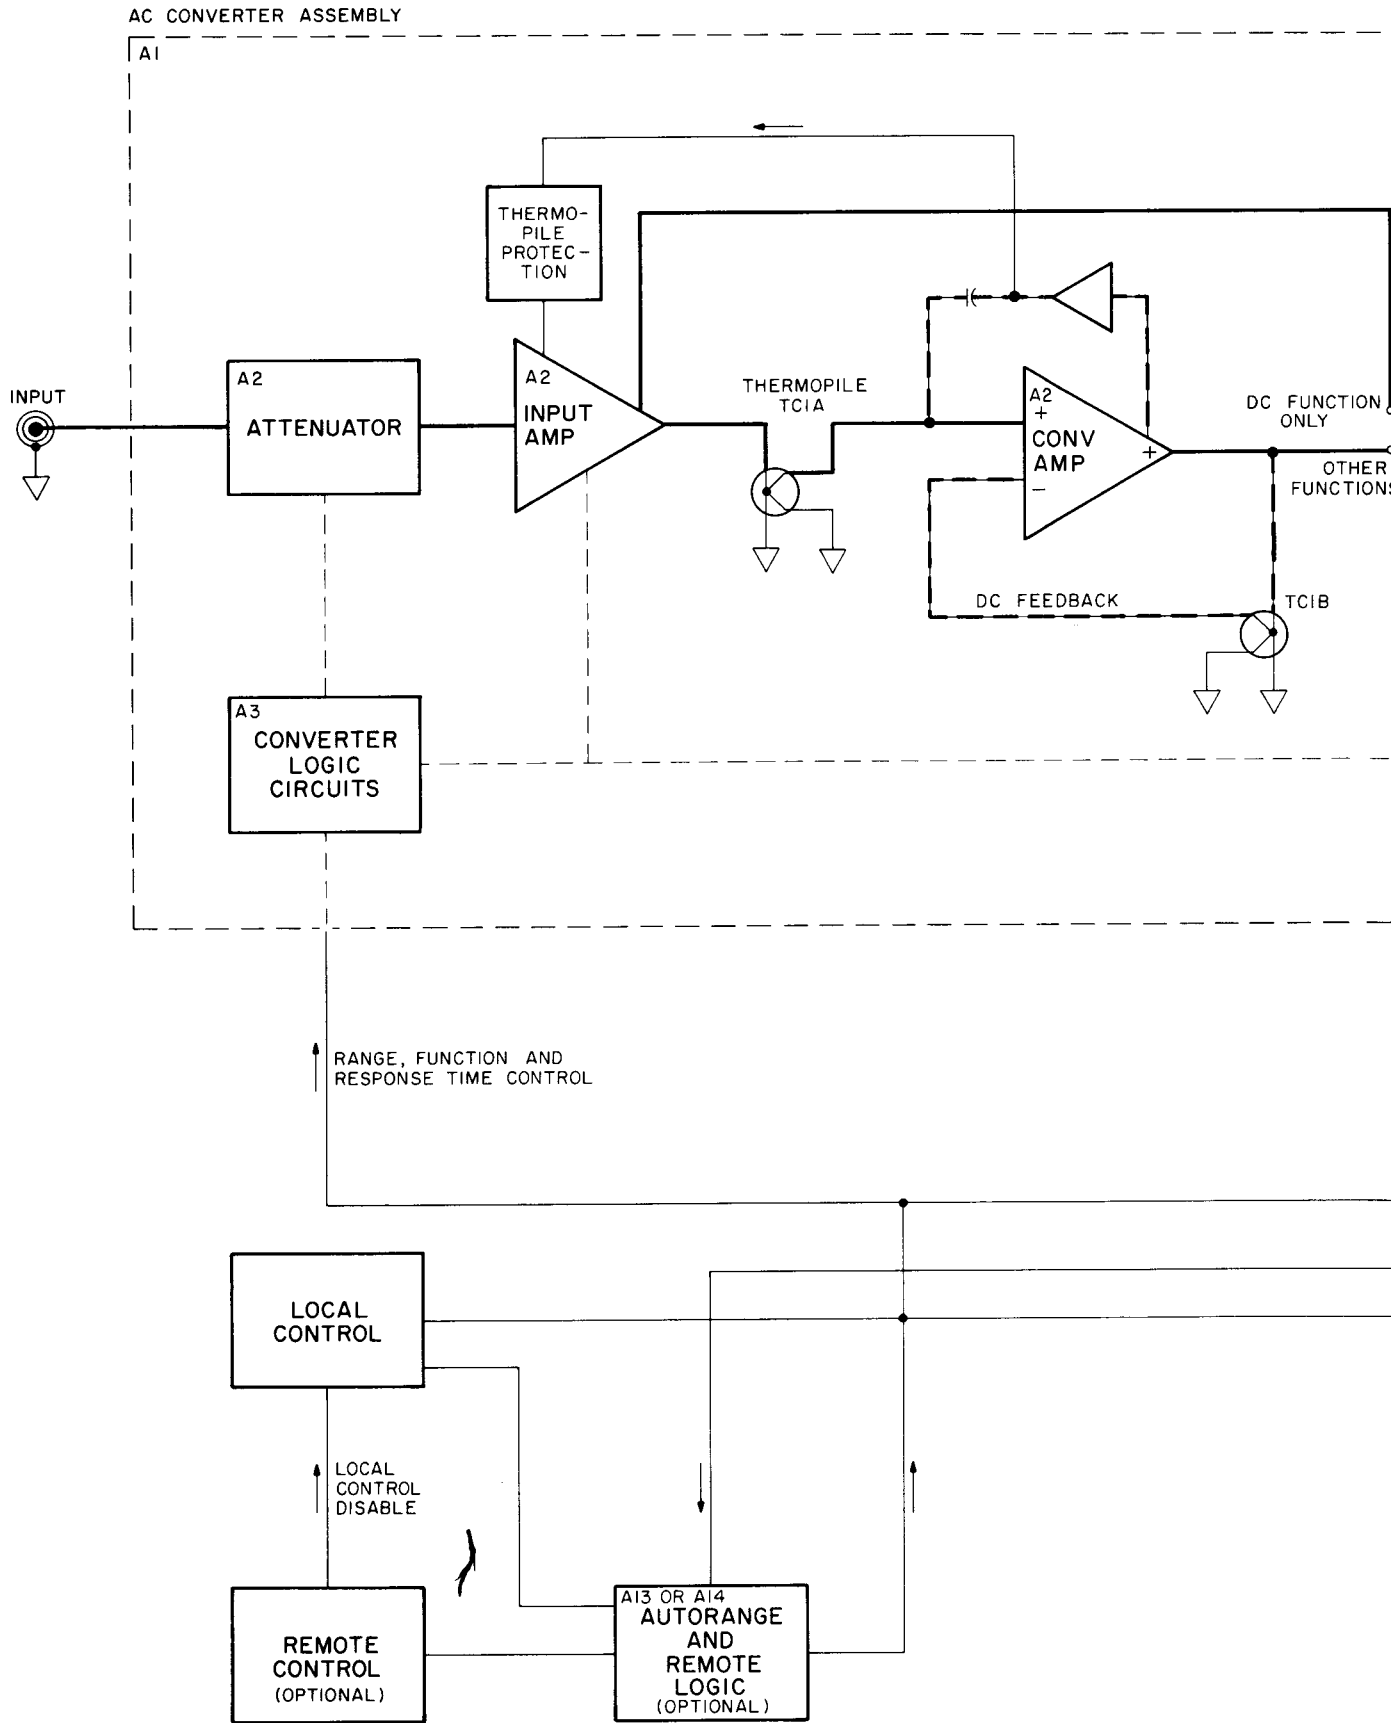

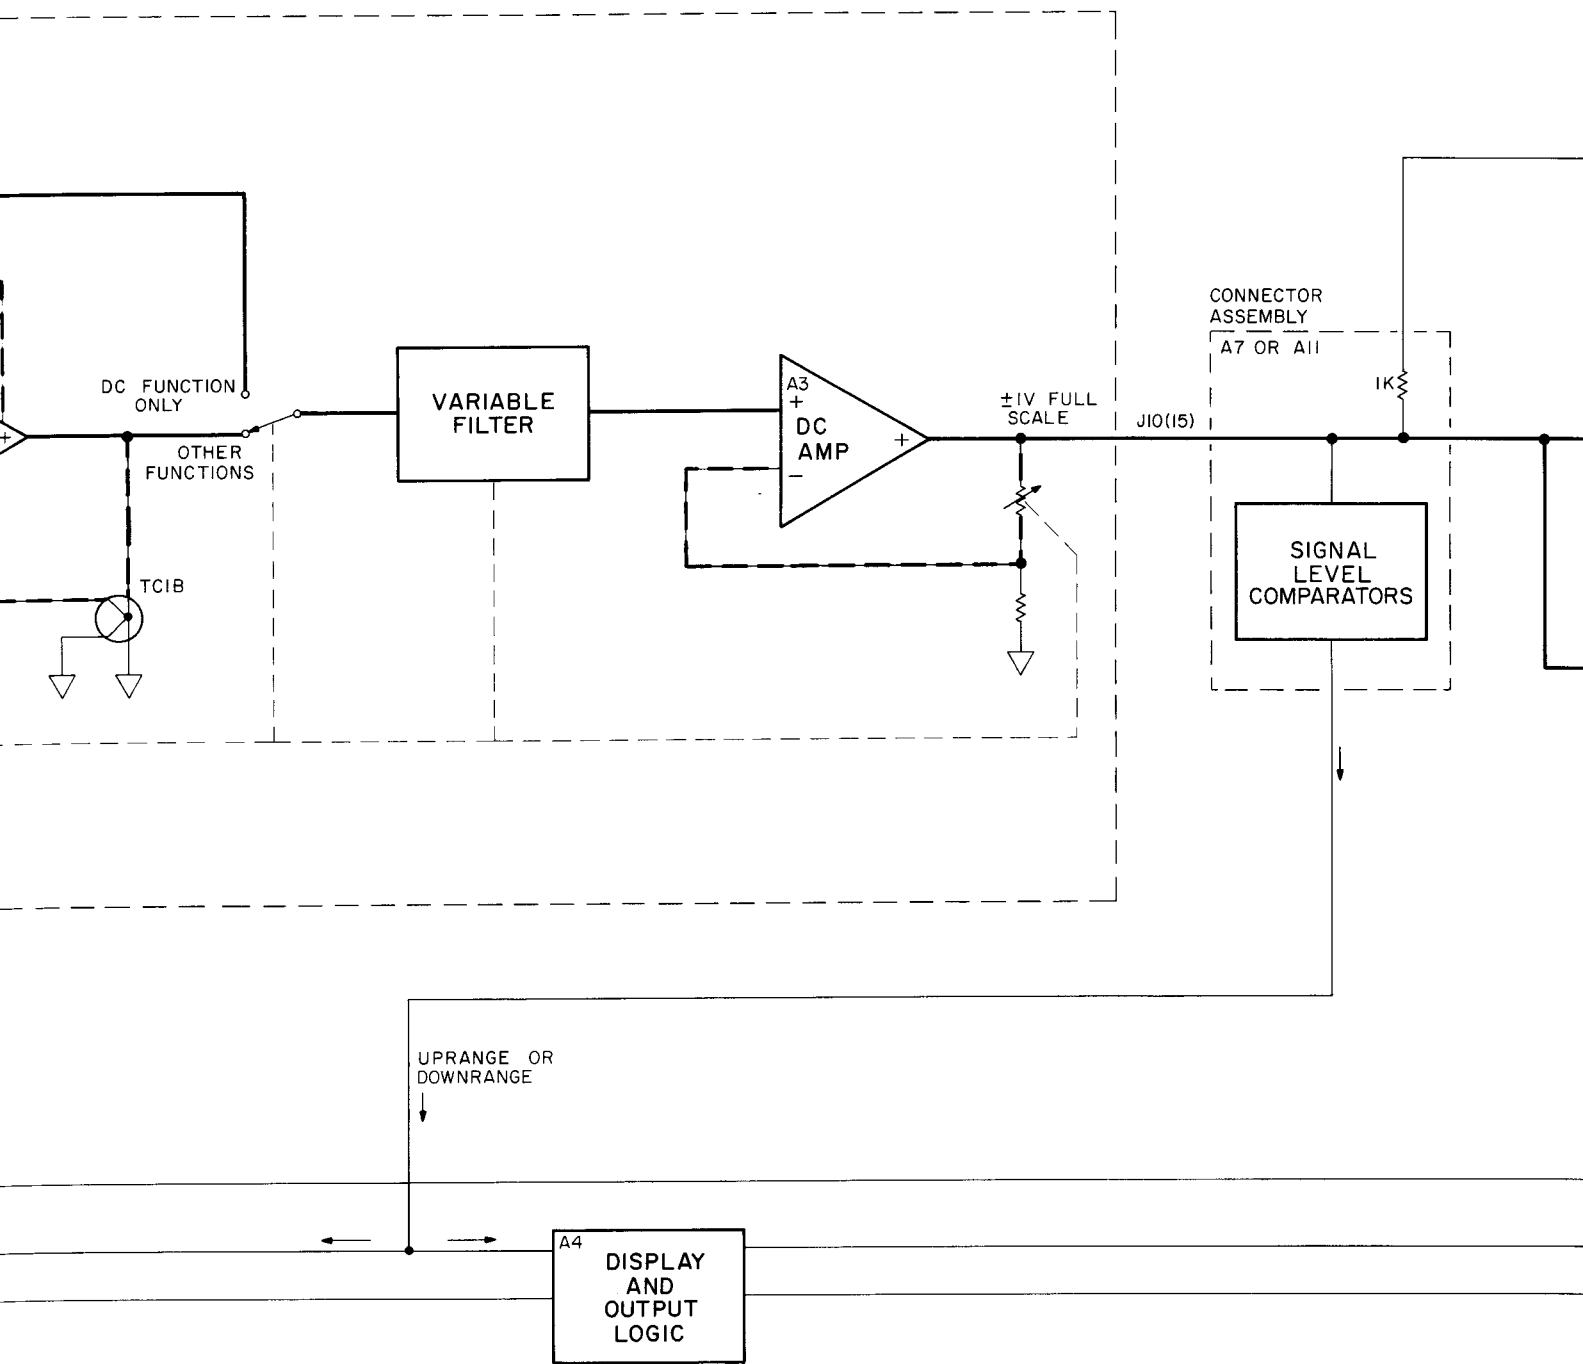

RANGE	APPROXIMATE GAIN				TOTAL GAIN ( $\frac{\text{OUTPUT}}{\text{RMS INPUT}}$ )
	ATTENUATOR	INPUT AMPLIFIER	CONVERTER AMPLIFIER	DC AMPLIFIER	
.01V	.5	50	1	4	100
.1V	.5	5	1	4	10
1V	.1	5	1	2	1
10V	.01	5	1	2	.1
100V	.001	5	1	2	.01
1000V	.0001	5	1	2	.001

TOTAL GAIN = PRODUCT OF ALL OTHER GAINS

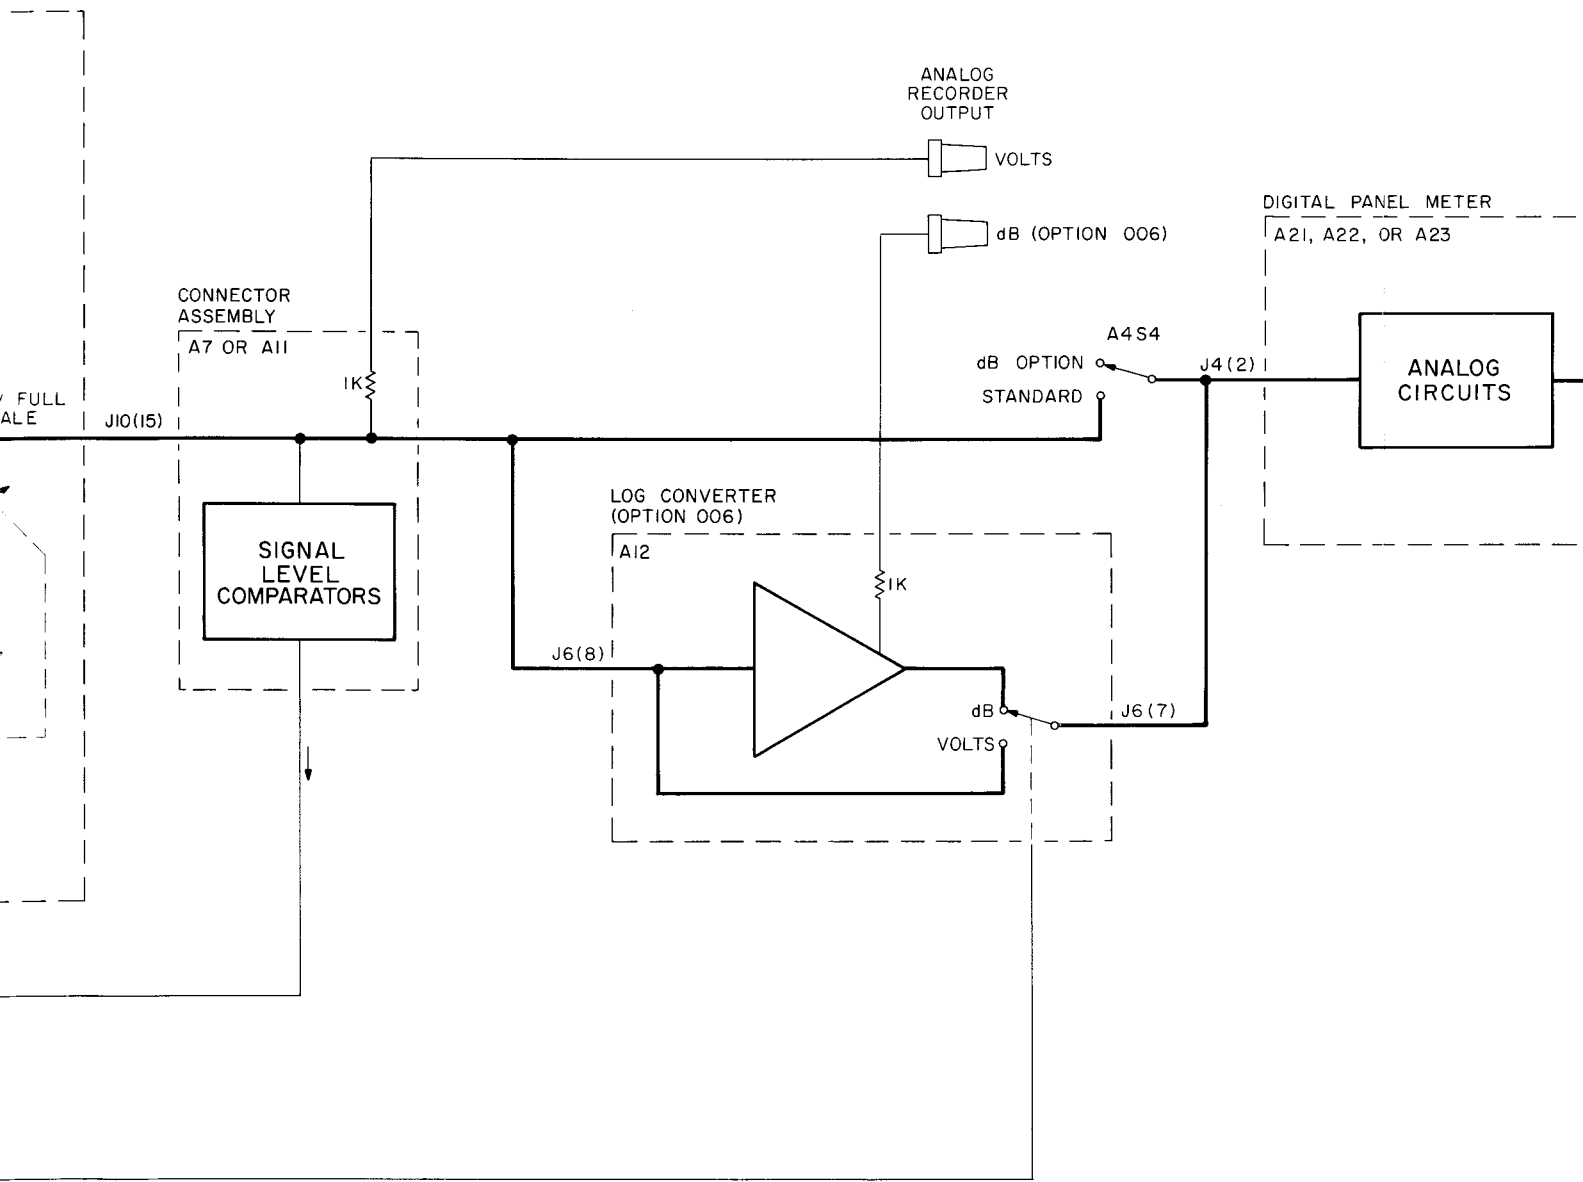

INVERTER AMPLIFIER	DC AMPLIFIER	TOTAL GAIN ( $\frac{\text{OUTPUT}}{\text{RMS INPUT}}$ )
1	4	100
1	4	10
1	2	1
1	2	.1
1	2	.01
1	2	.001

LTS



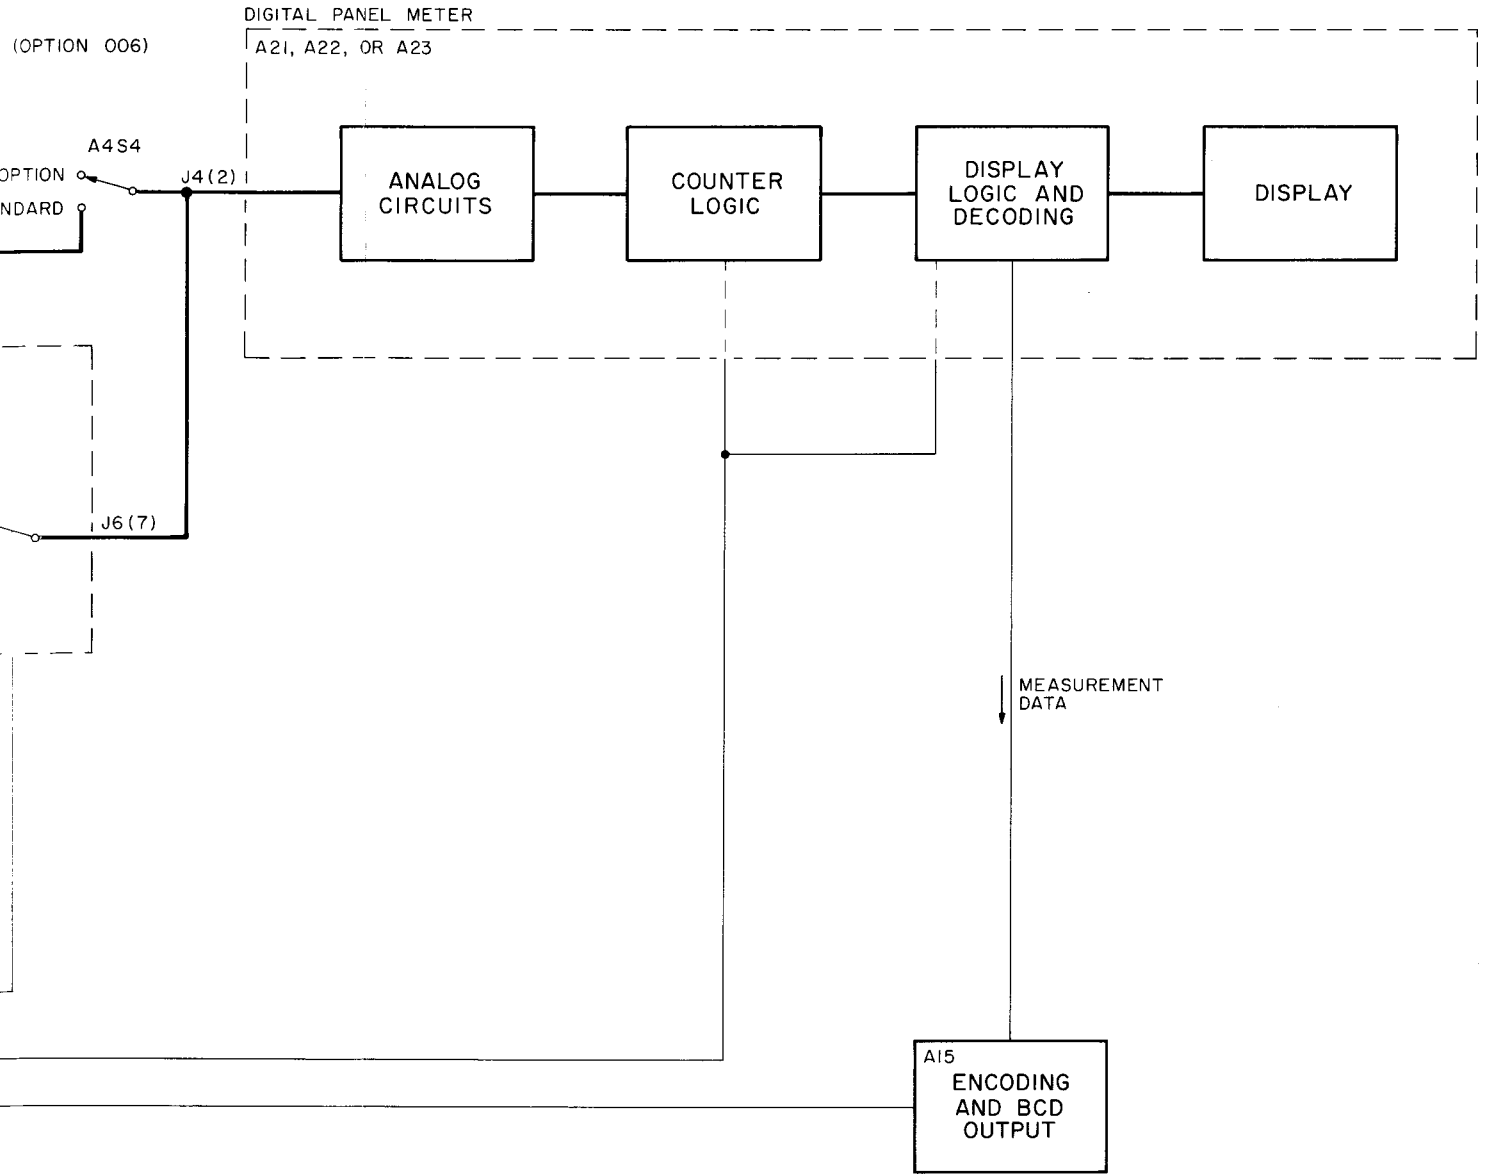


Figure 7-2. Block Diagram.  
7-3/7-4

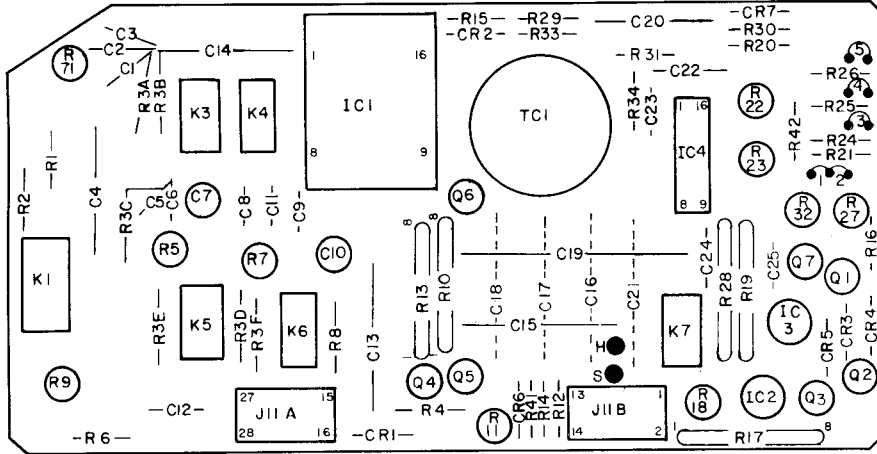

34 03A - B - 3199

**A2**  
 hp Part No. 03403-66530

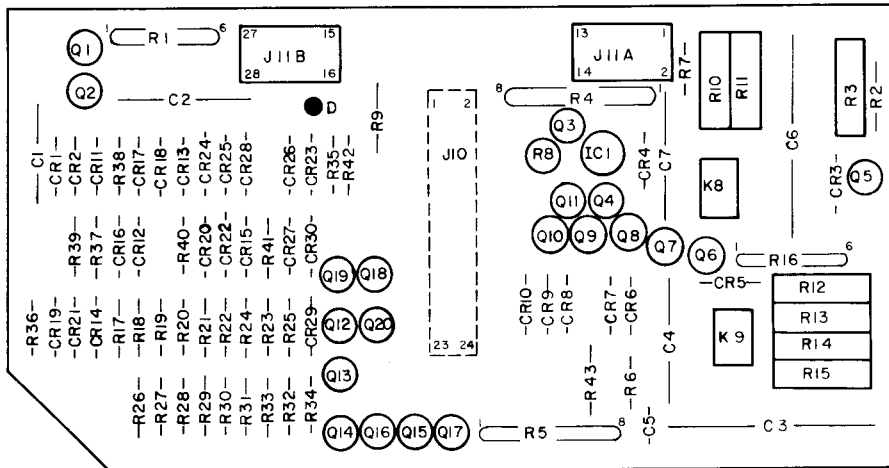

3403A - B - 3199



**A3**  
 hp Part No. 03403-66540

**P/O A3** FILTER ASS'Y (03403-66540)

**A2** AMPLIFIER ASSEMBLY (03403-66530)

RANGE	RELAYS CLOSED	APPROXIMATE GAIN				TOTAL GAIN (OUTPUT / RMS INPUT)
		ATTEN-UATOR	INPUT AMP	CONV AMP	DC AMP	
•0IV	NONE	•5	50		4	100
•IV	NONE	•5	5		4	10
IV	K3	•1	5		2	1
10V	K3, K4	•01	5		2	•1
100V	K4, K5	•001	5		2	•01
1000V	K4, K6	•0001	5		2	•001




TOTAL GAIN = PRODUCT OF ALL OTHER GAINS

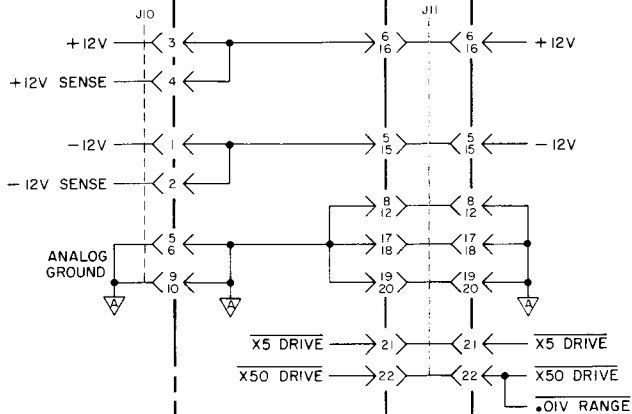


**ATTENUATOR**

OVERSCORED SIGNAL NAME INDICATES HIGH STATE TRUE. HIGH = +12V

S6 NORMALLY CLOSED. USE OF ADAPTER -hp- PART NO. 5040-5847 OPENS S6 TO DISCONNECT INPUT COMMON FROM CHASSIS (EARTH) GROUND.


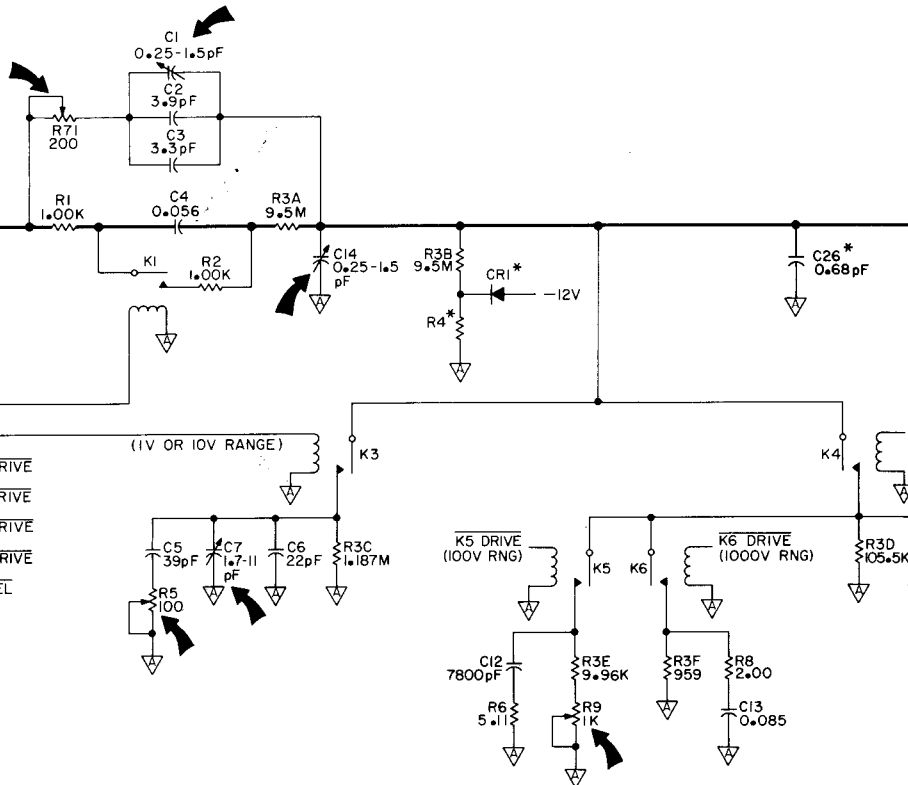
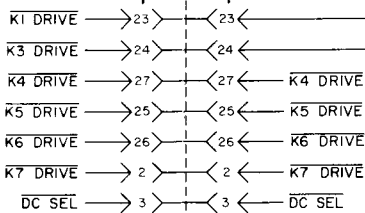
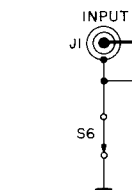


DC AMP	TOTAL GAIN (OUTPUT / RMS INPUT)
4	100
4	10
2	1
2	.1
2	.01
2	.001



### THERMOPILE PROTECTION


### INPUT AMPLIFIER

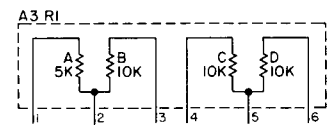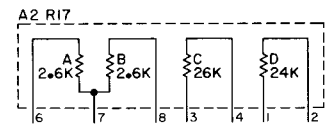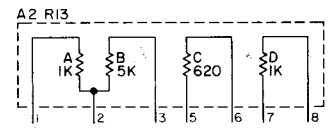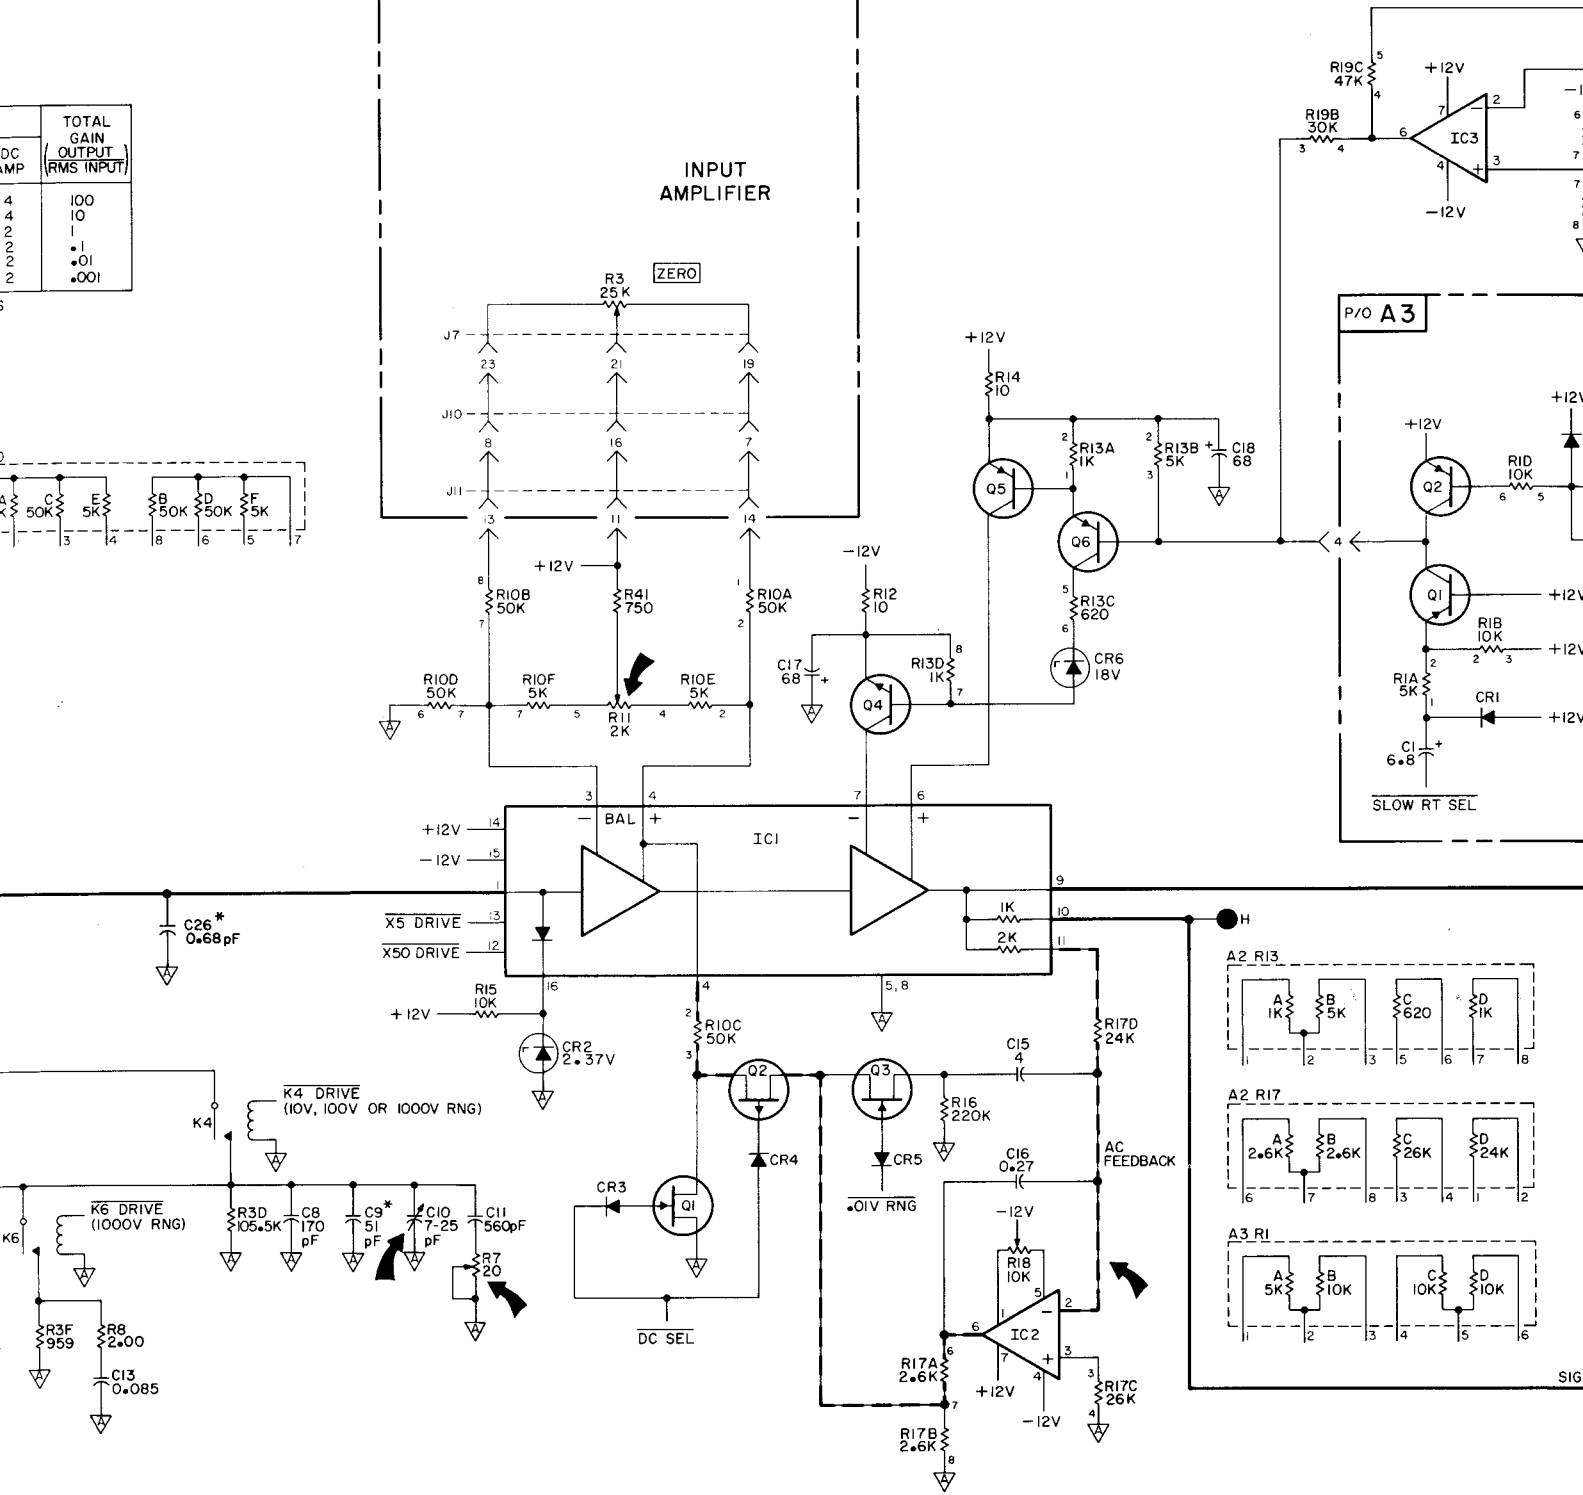

SIG





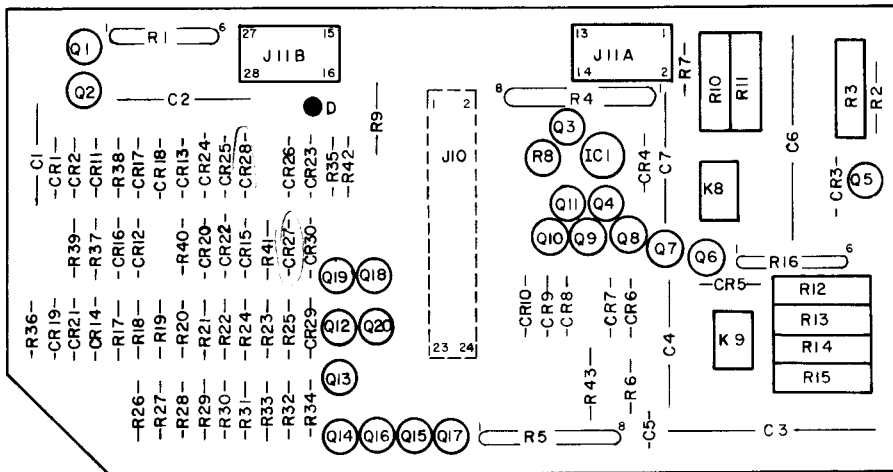


3403A-B-3199

A3


hp Part No. 03403-66540

P/O A3 FILTER ASSEMBLY (03403-66540)


DC AMPLIFIER

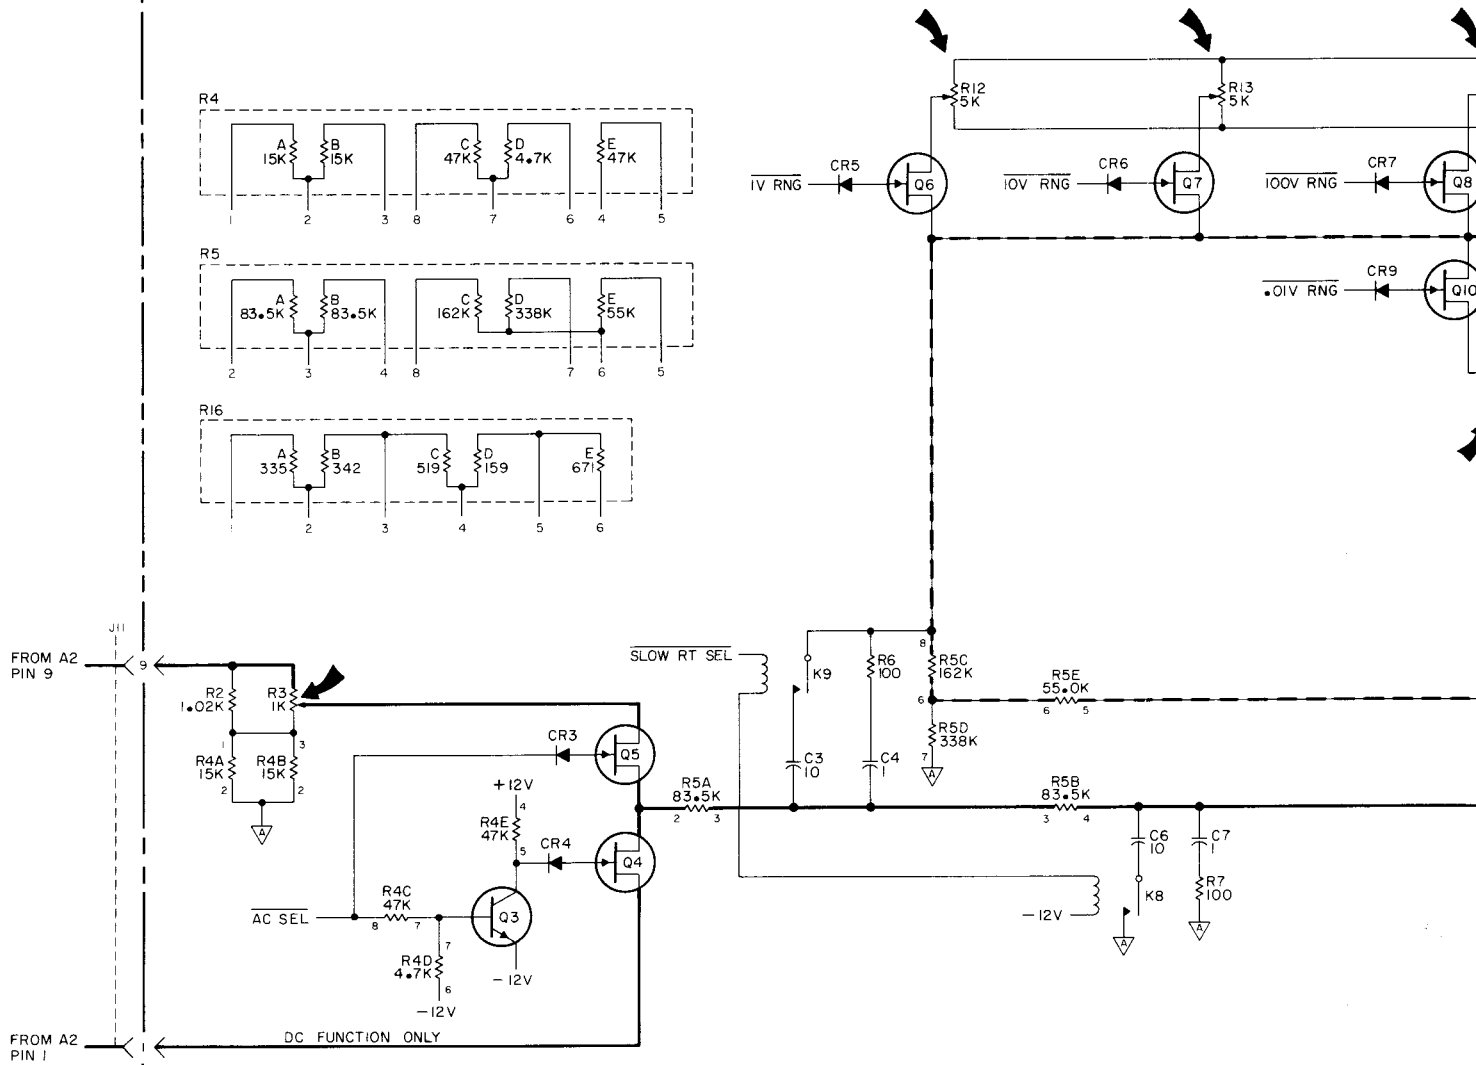


DC AMPLIFIER

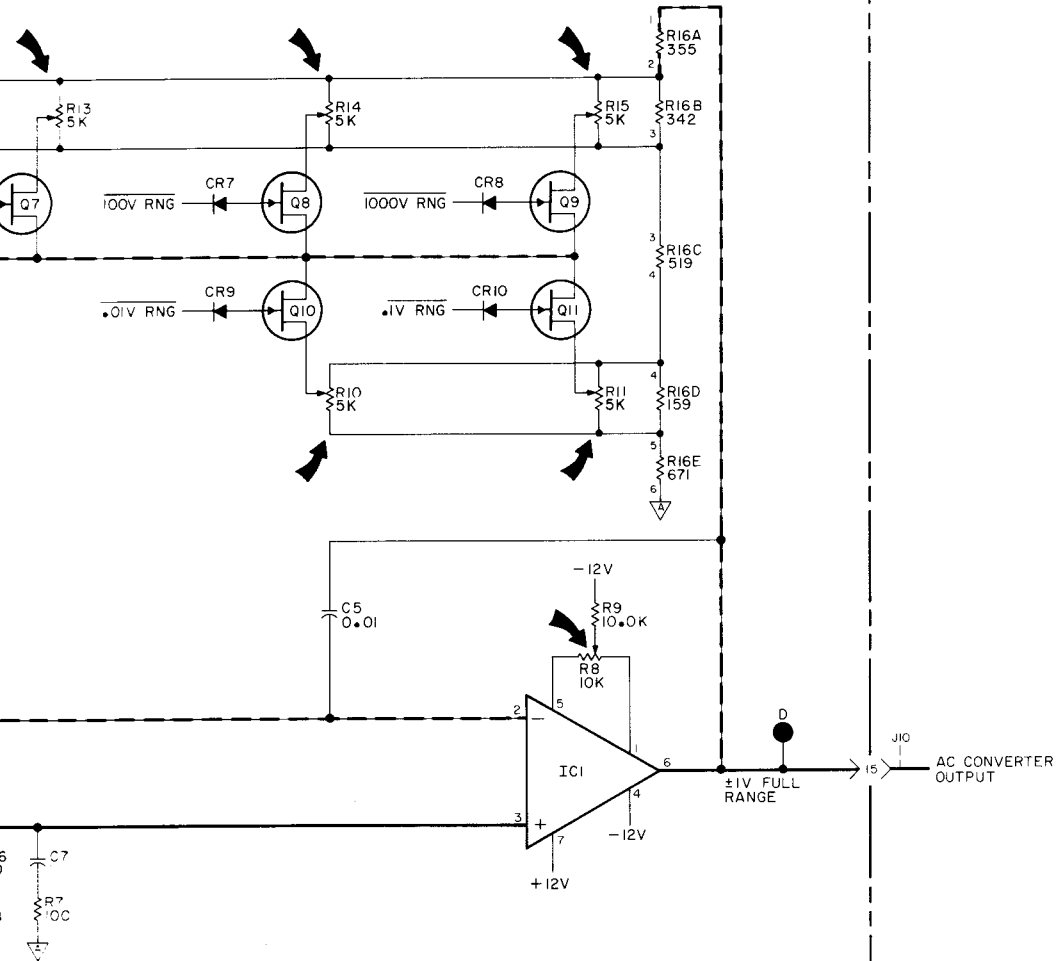


P/O A3 FILTER ASSEMBLY (03403-66540)

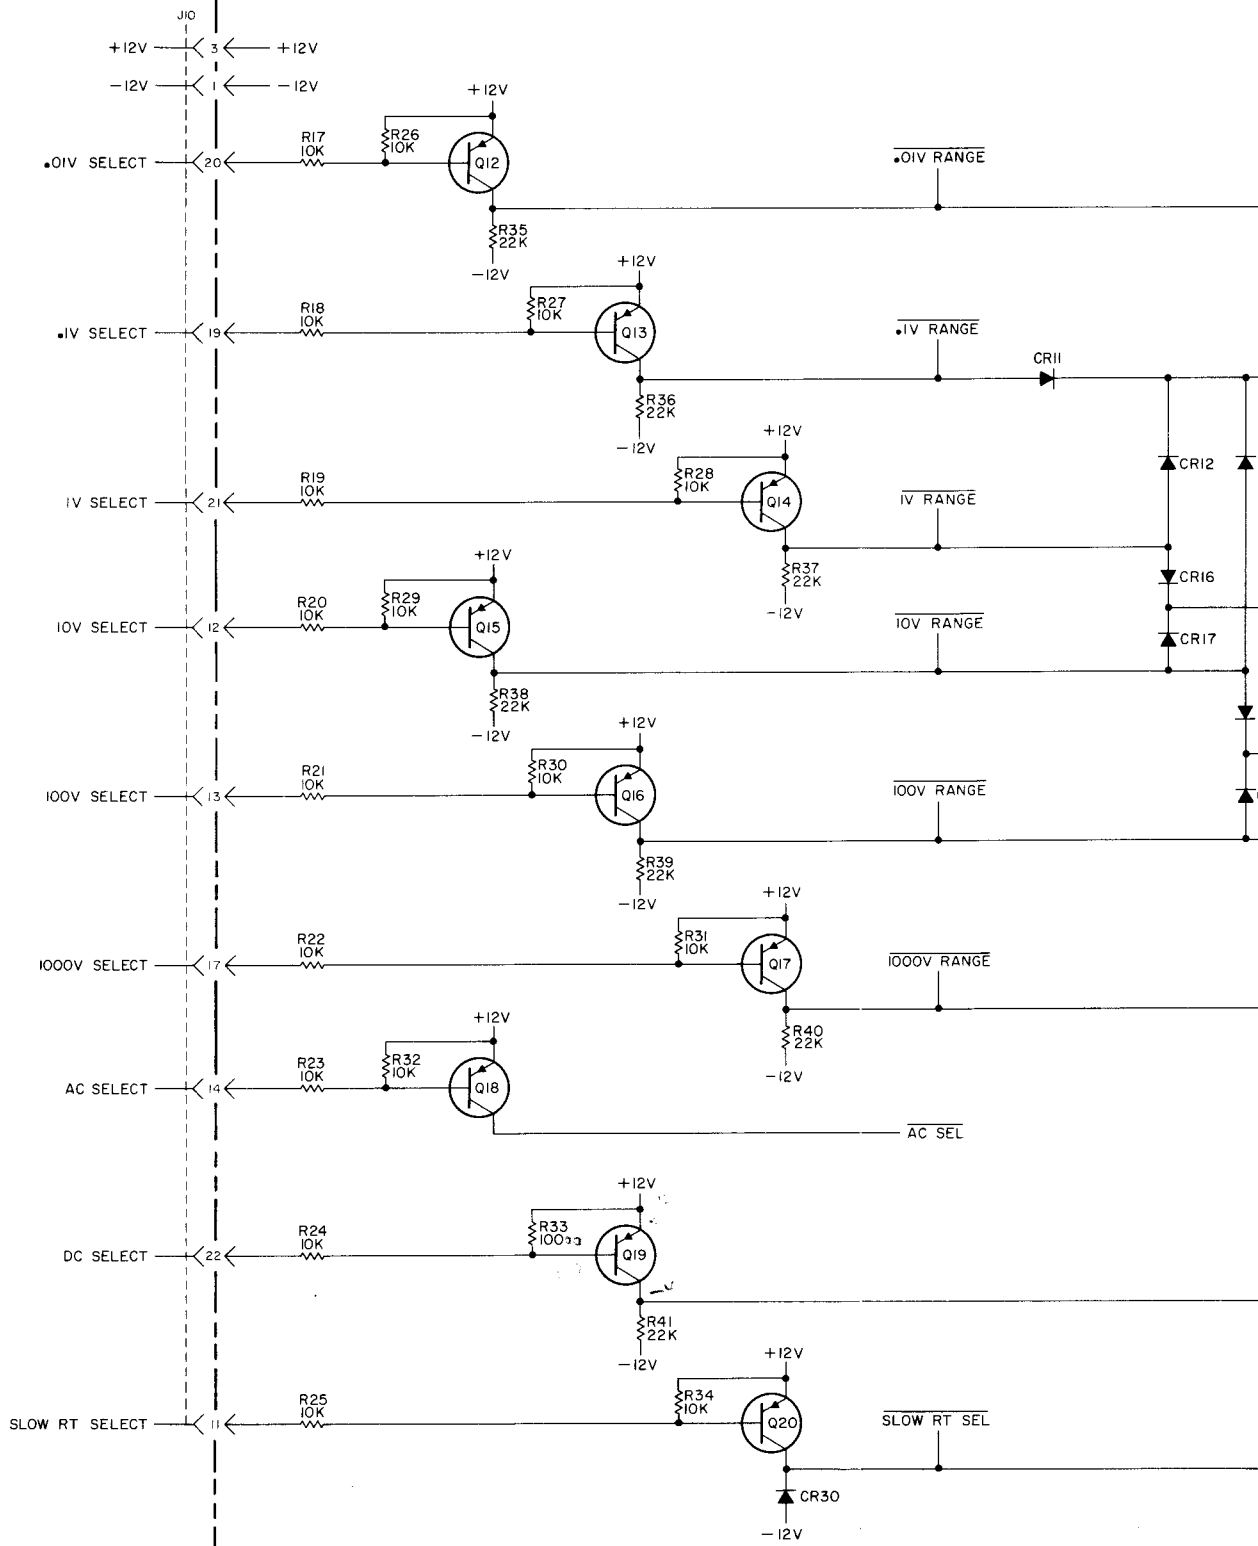

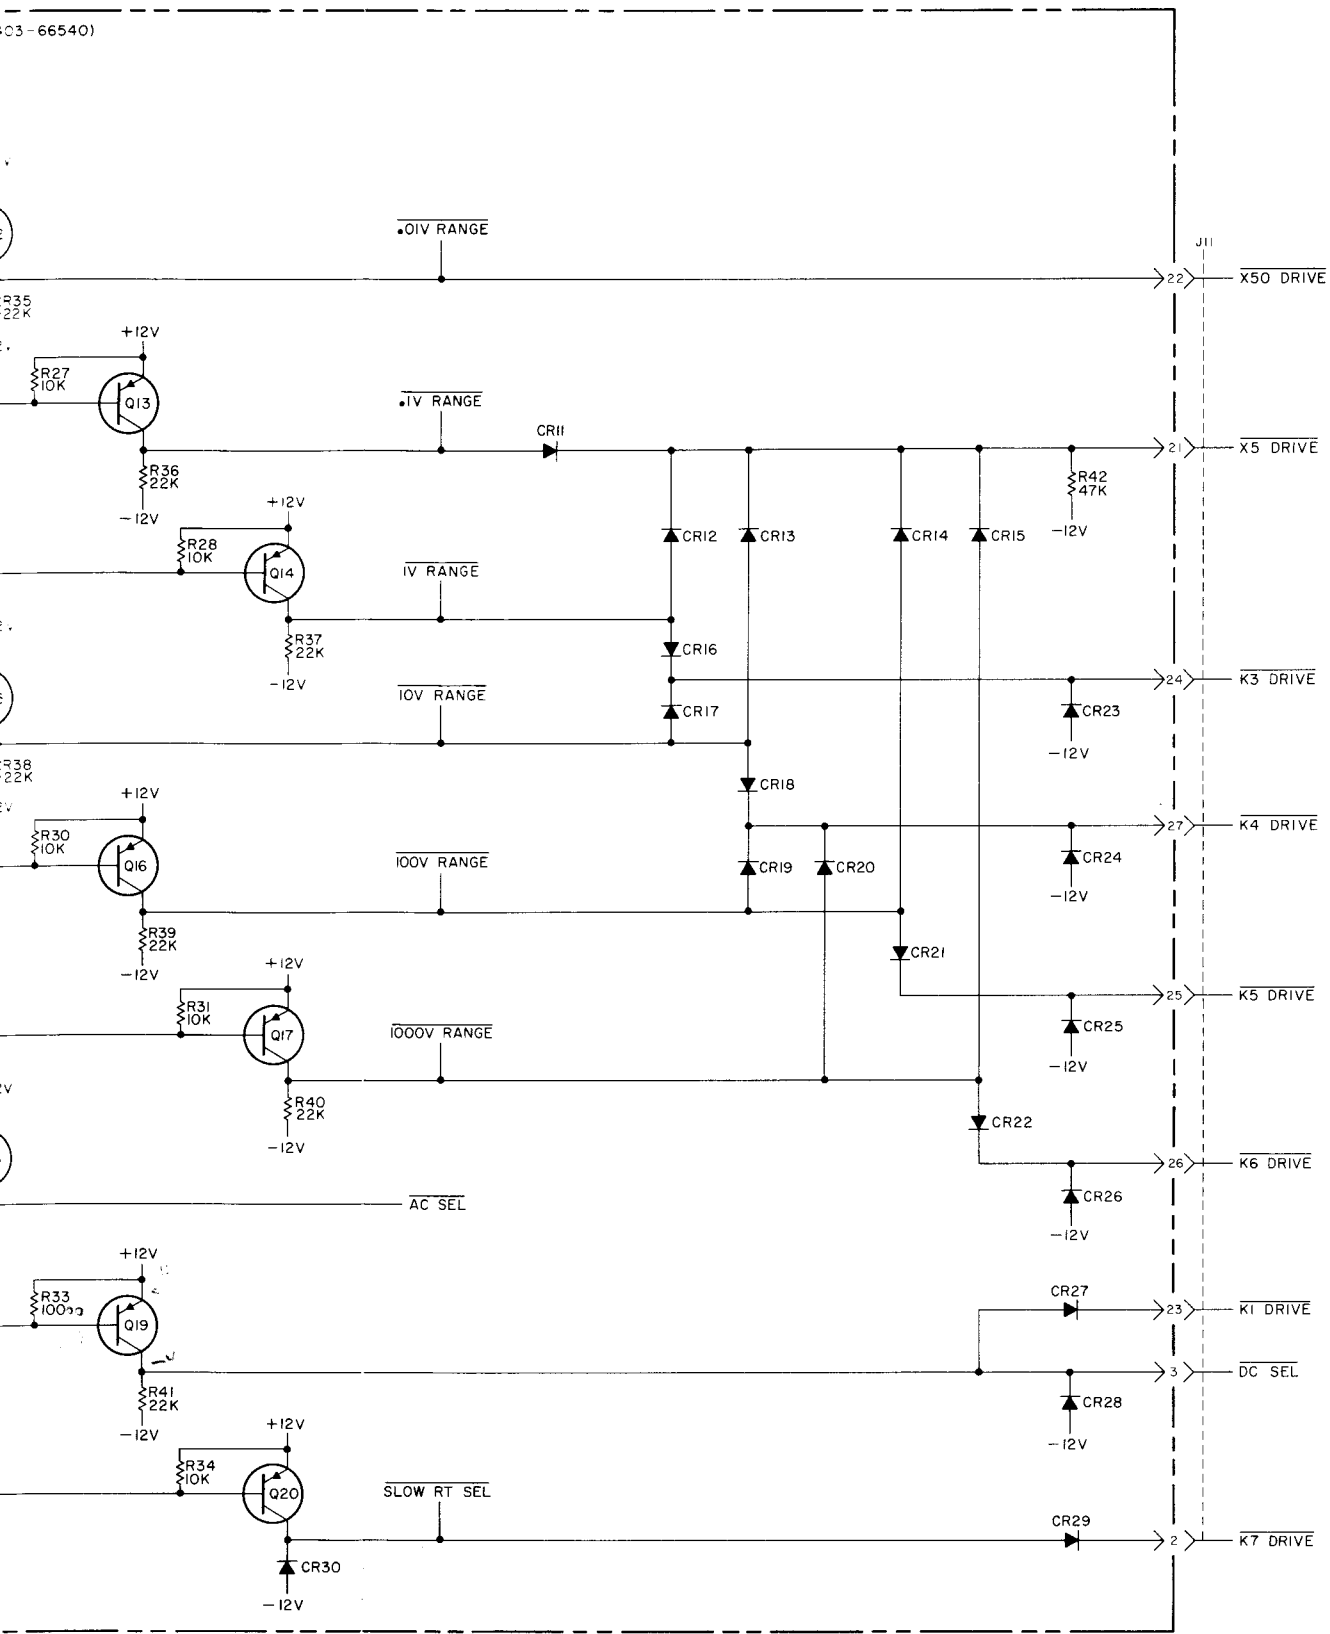


TO AMPLIFIER ASSEMBLY A2

Figure 7-4. Schematic Diagram, AC Converter DC Amp. and Logic Circuits, A3.

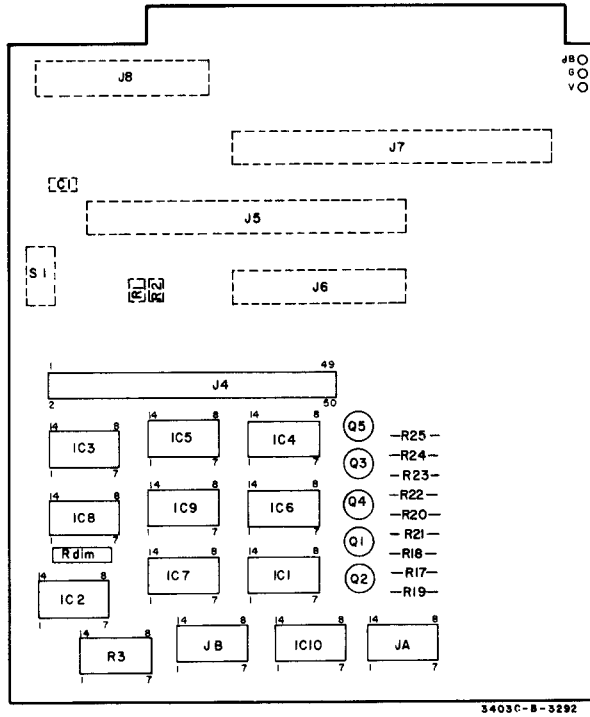


**A4**  
 hp Part No. 03403-66516

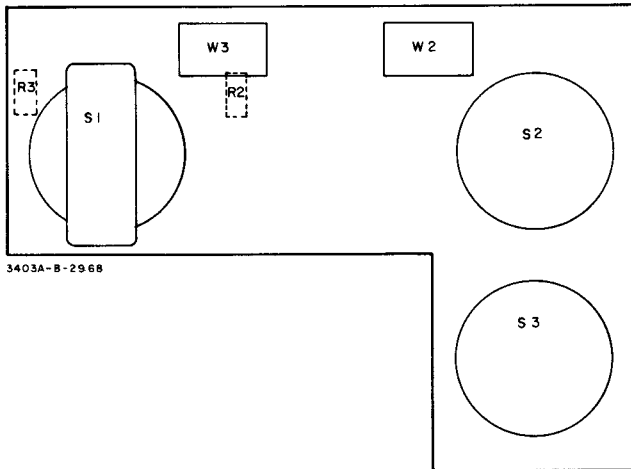






**A4A1**  
 hp Part No. 03403-66513

P/O A 4 MASTER BOARD ASSEMBLY (03403-66516)

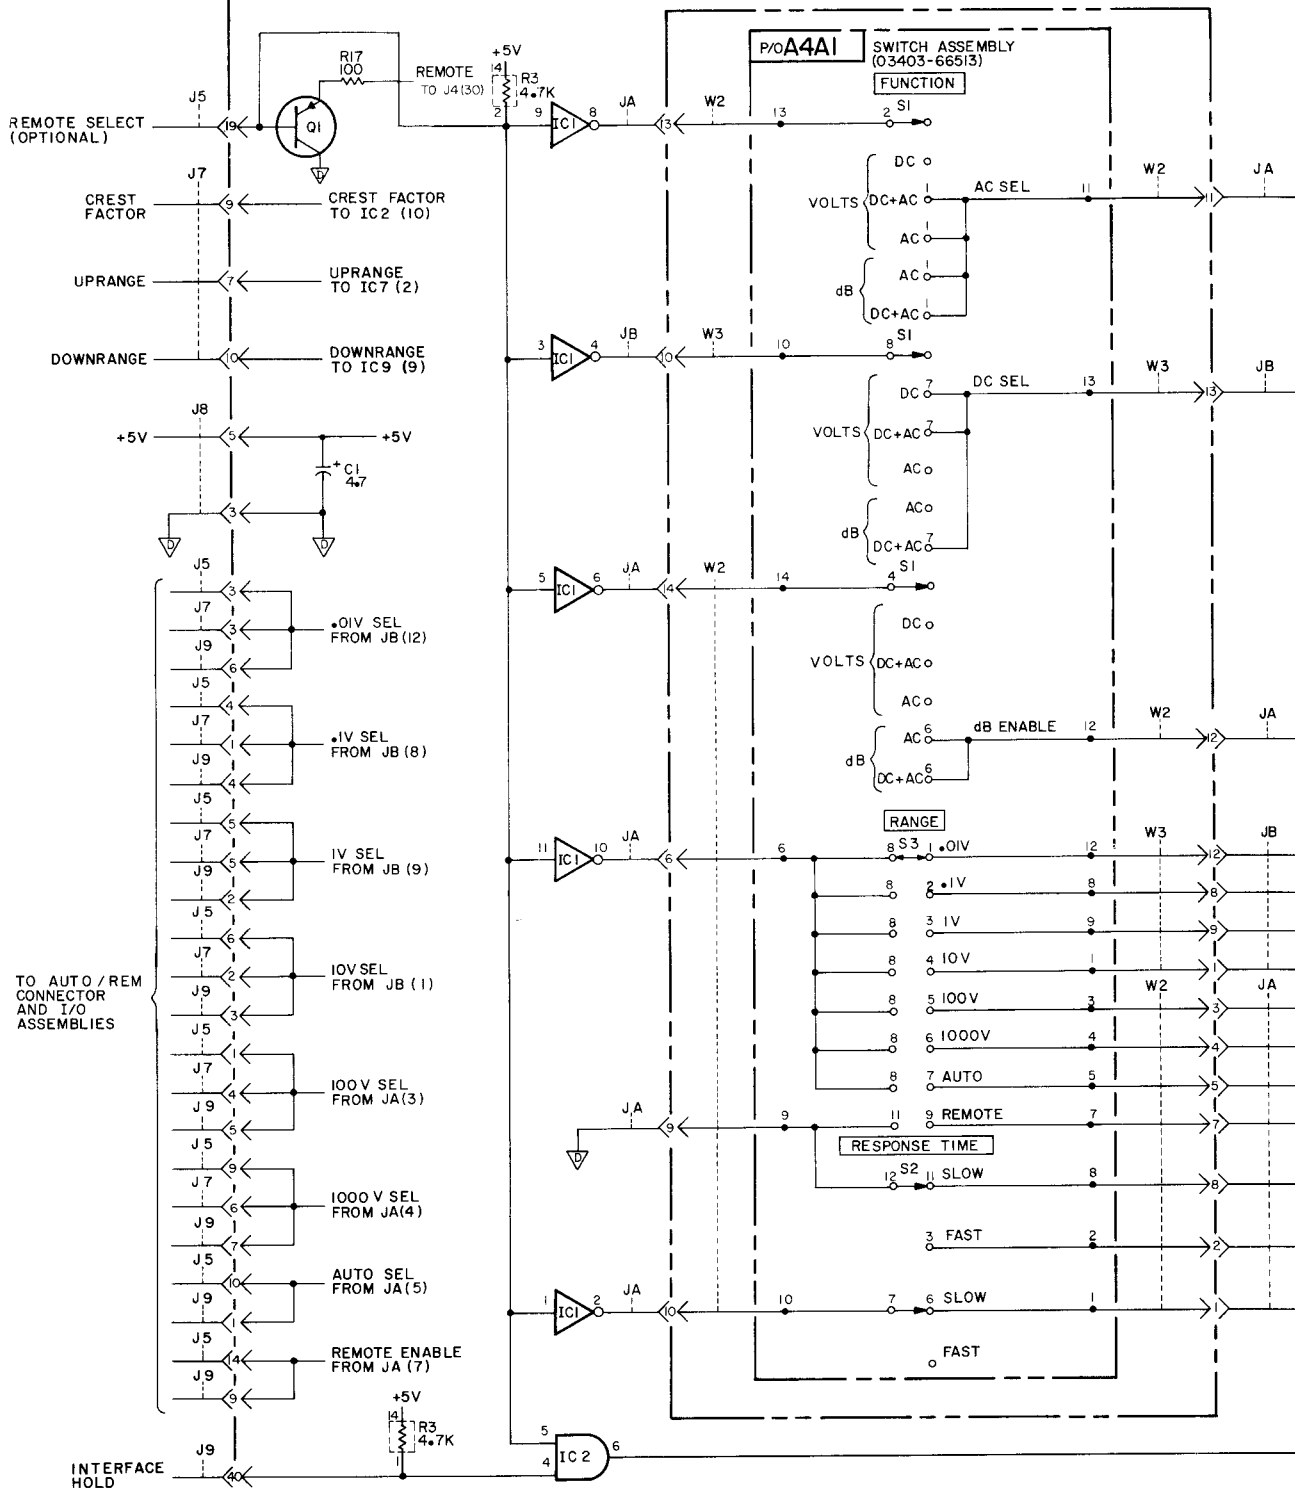



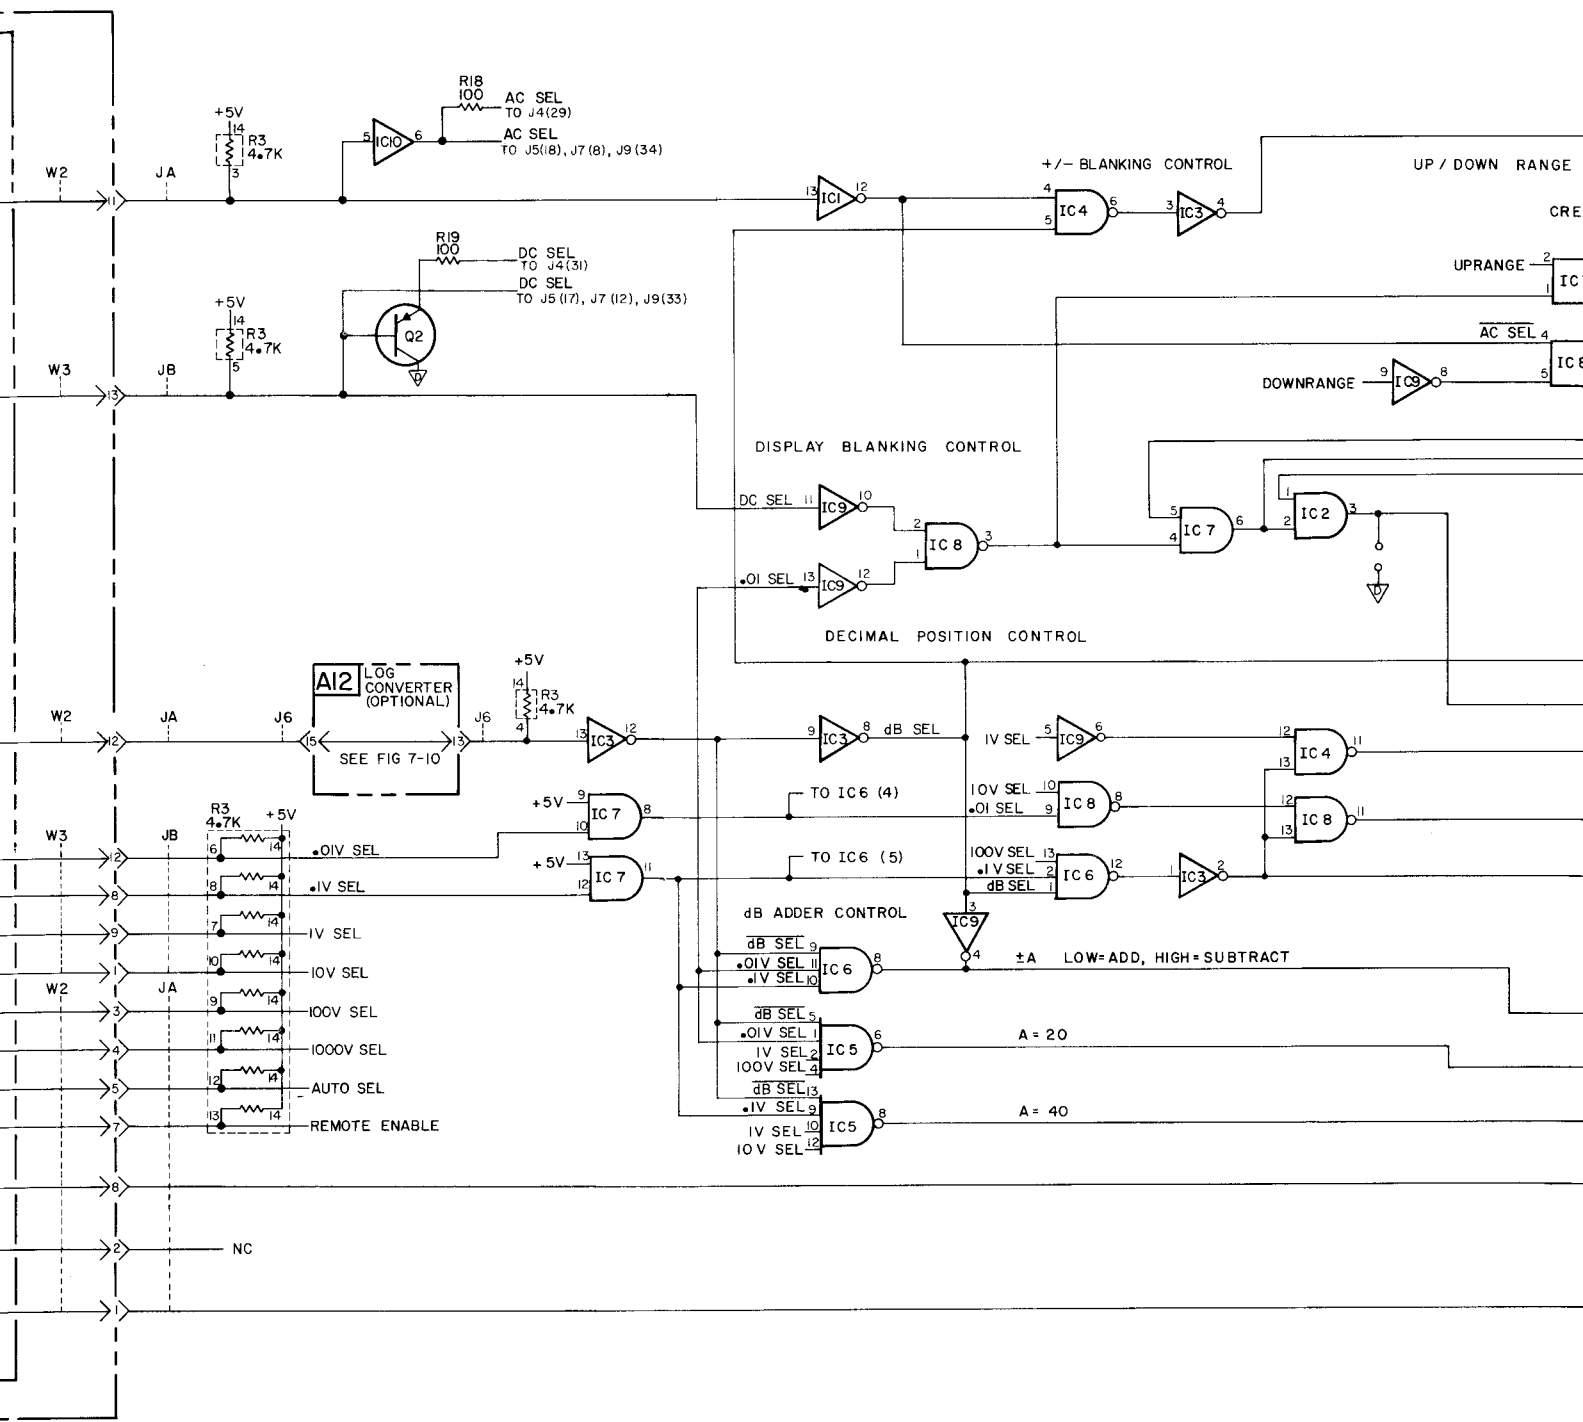

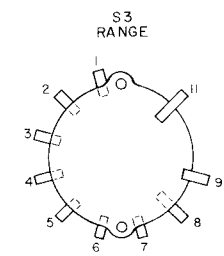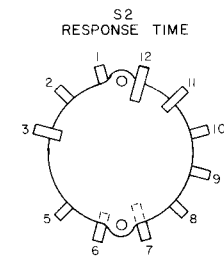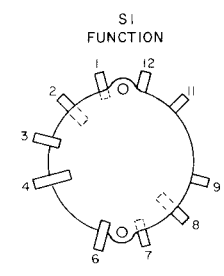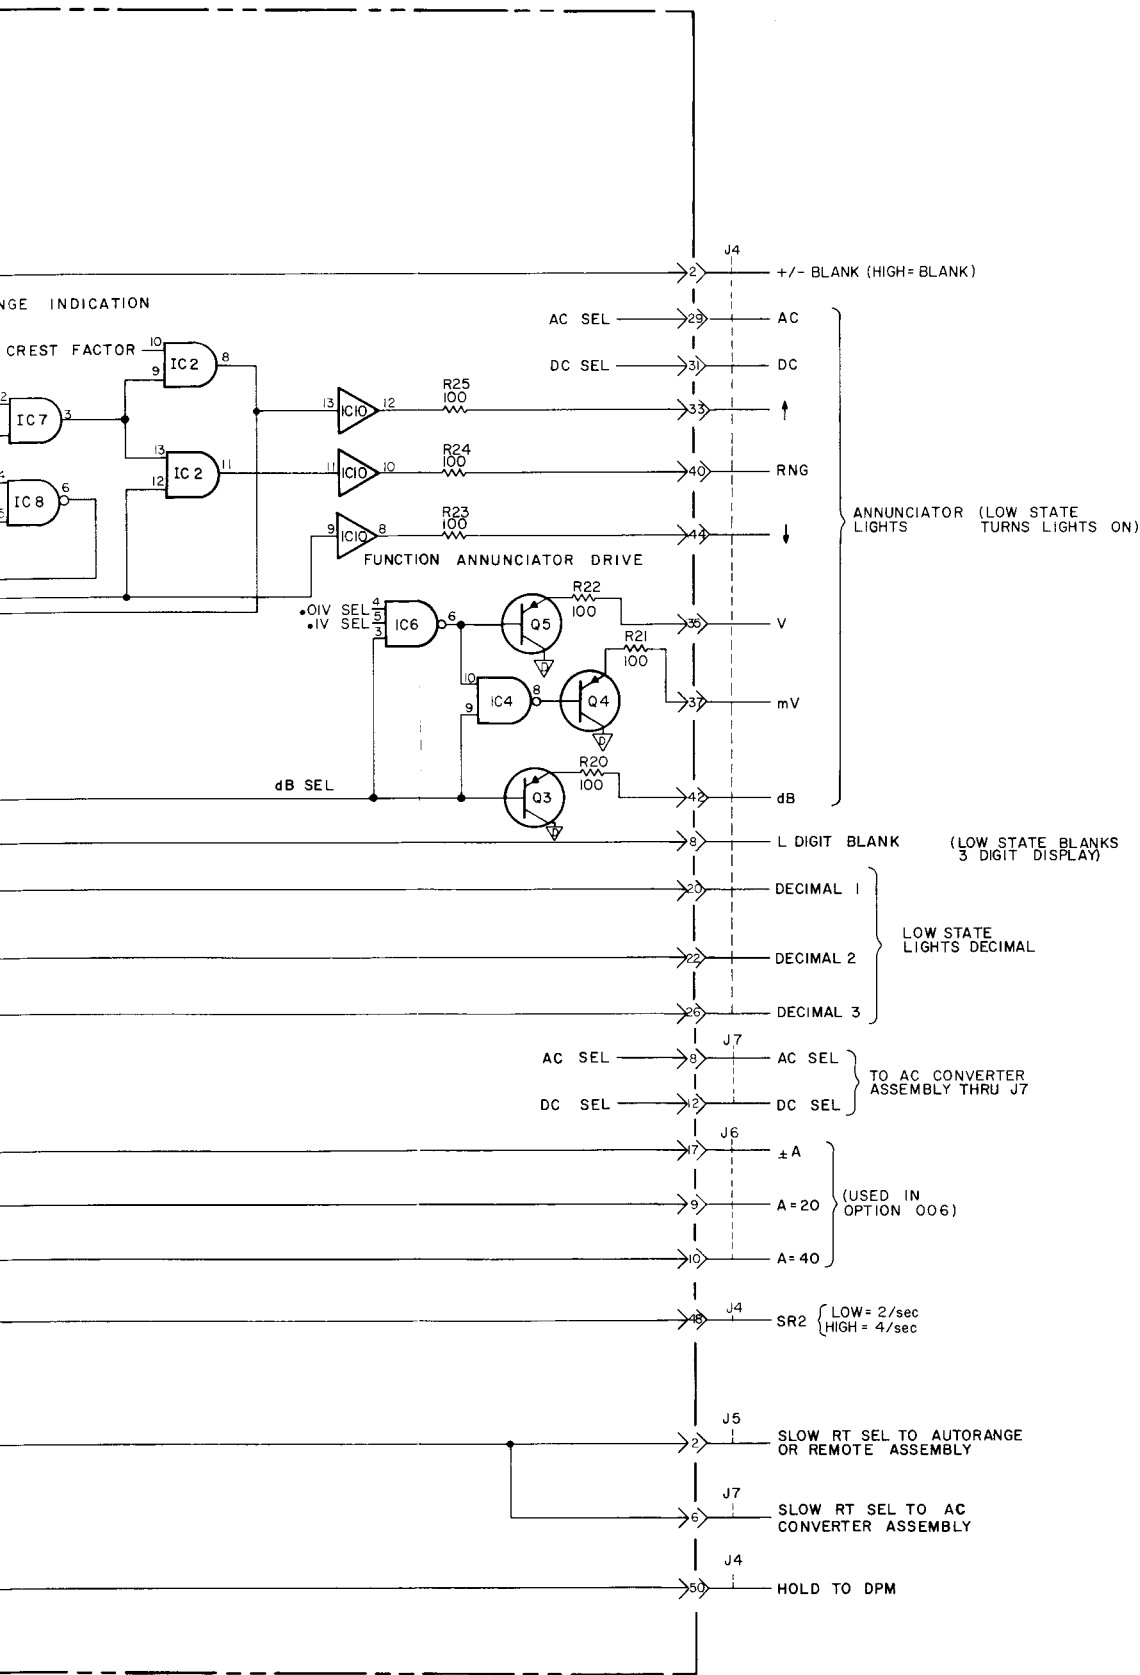

ALL SWITCHES VIEWED FROM REAR



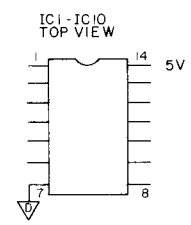



Figure 7-5. Schematic Diagram, Manual Range and Function Logic, A4.

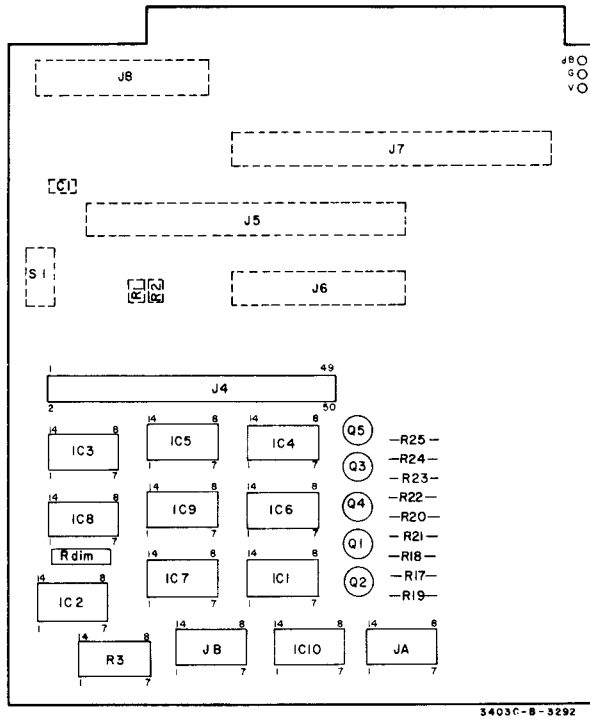

**A4**  
 hp Part No. 03403-66516

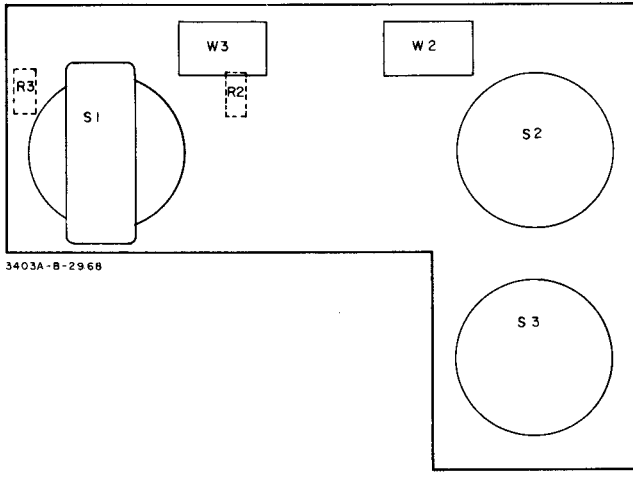


**A4A1**  
 hp Part No. 03403-66513

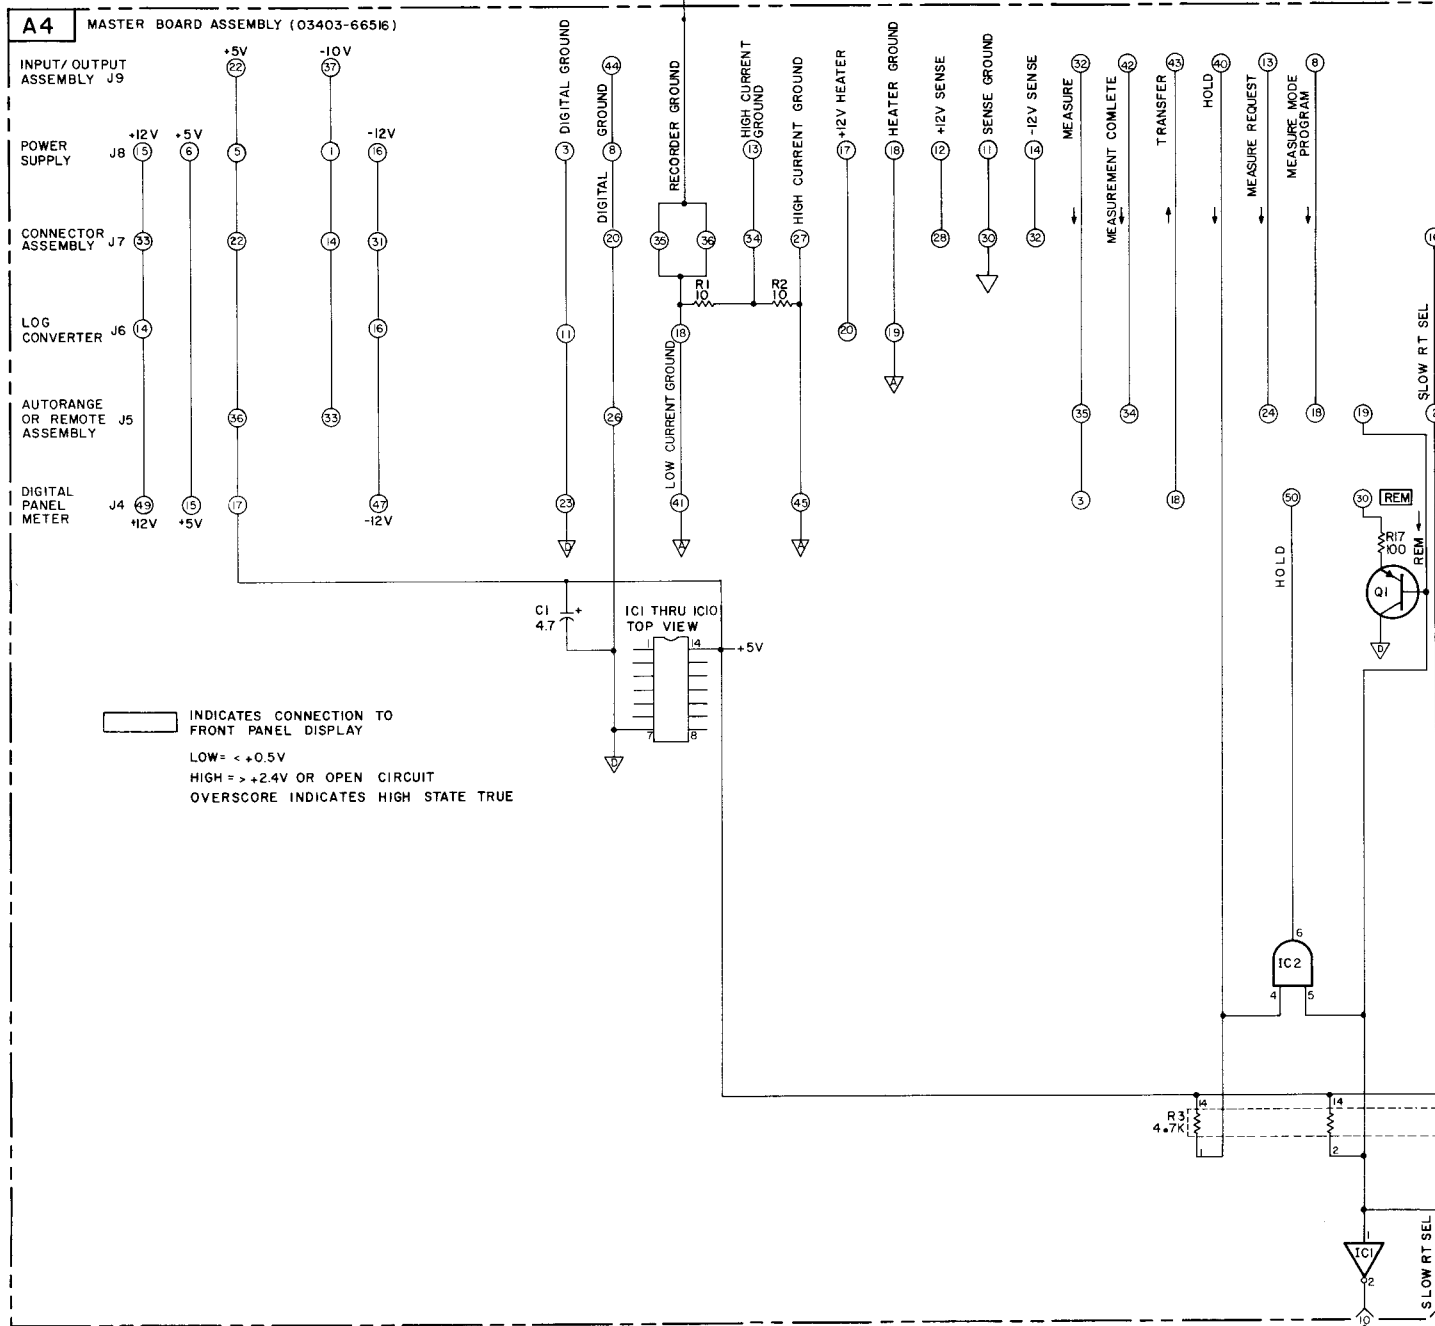


COPYRIGHT 1971 BY HEWLETT-PACKARD COMPANY  
3403A-J-2970A

P/OA4A1

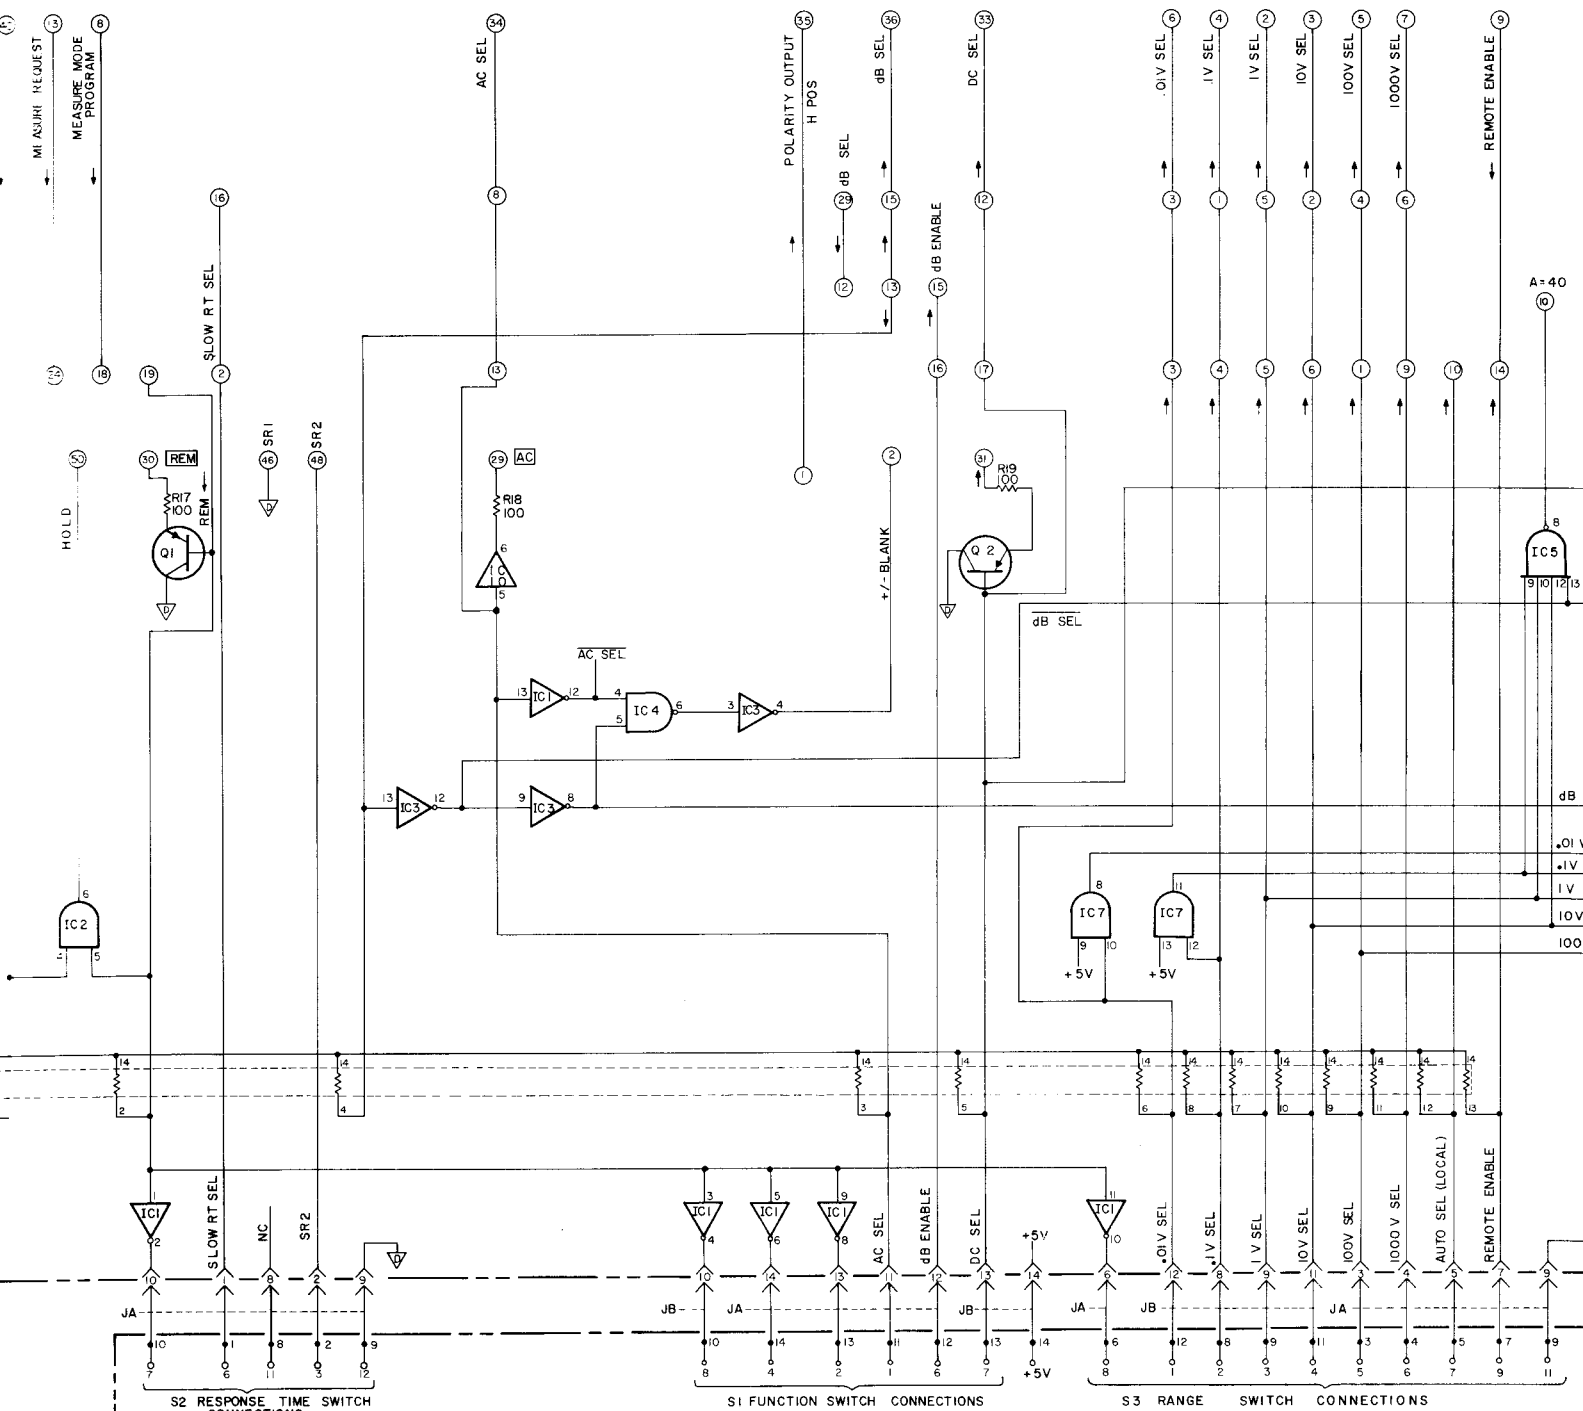

P/OA4A1 SWITCH ASSEMBLY 03403-66513

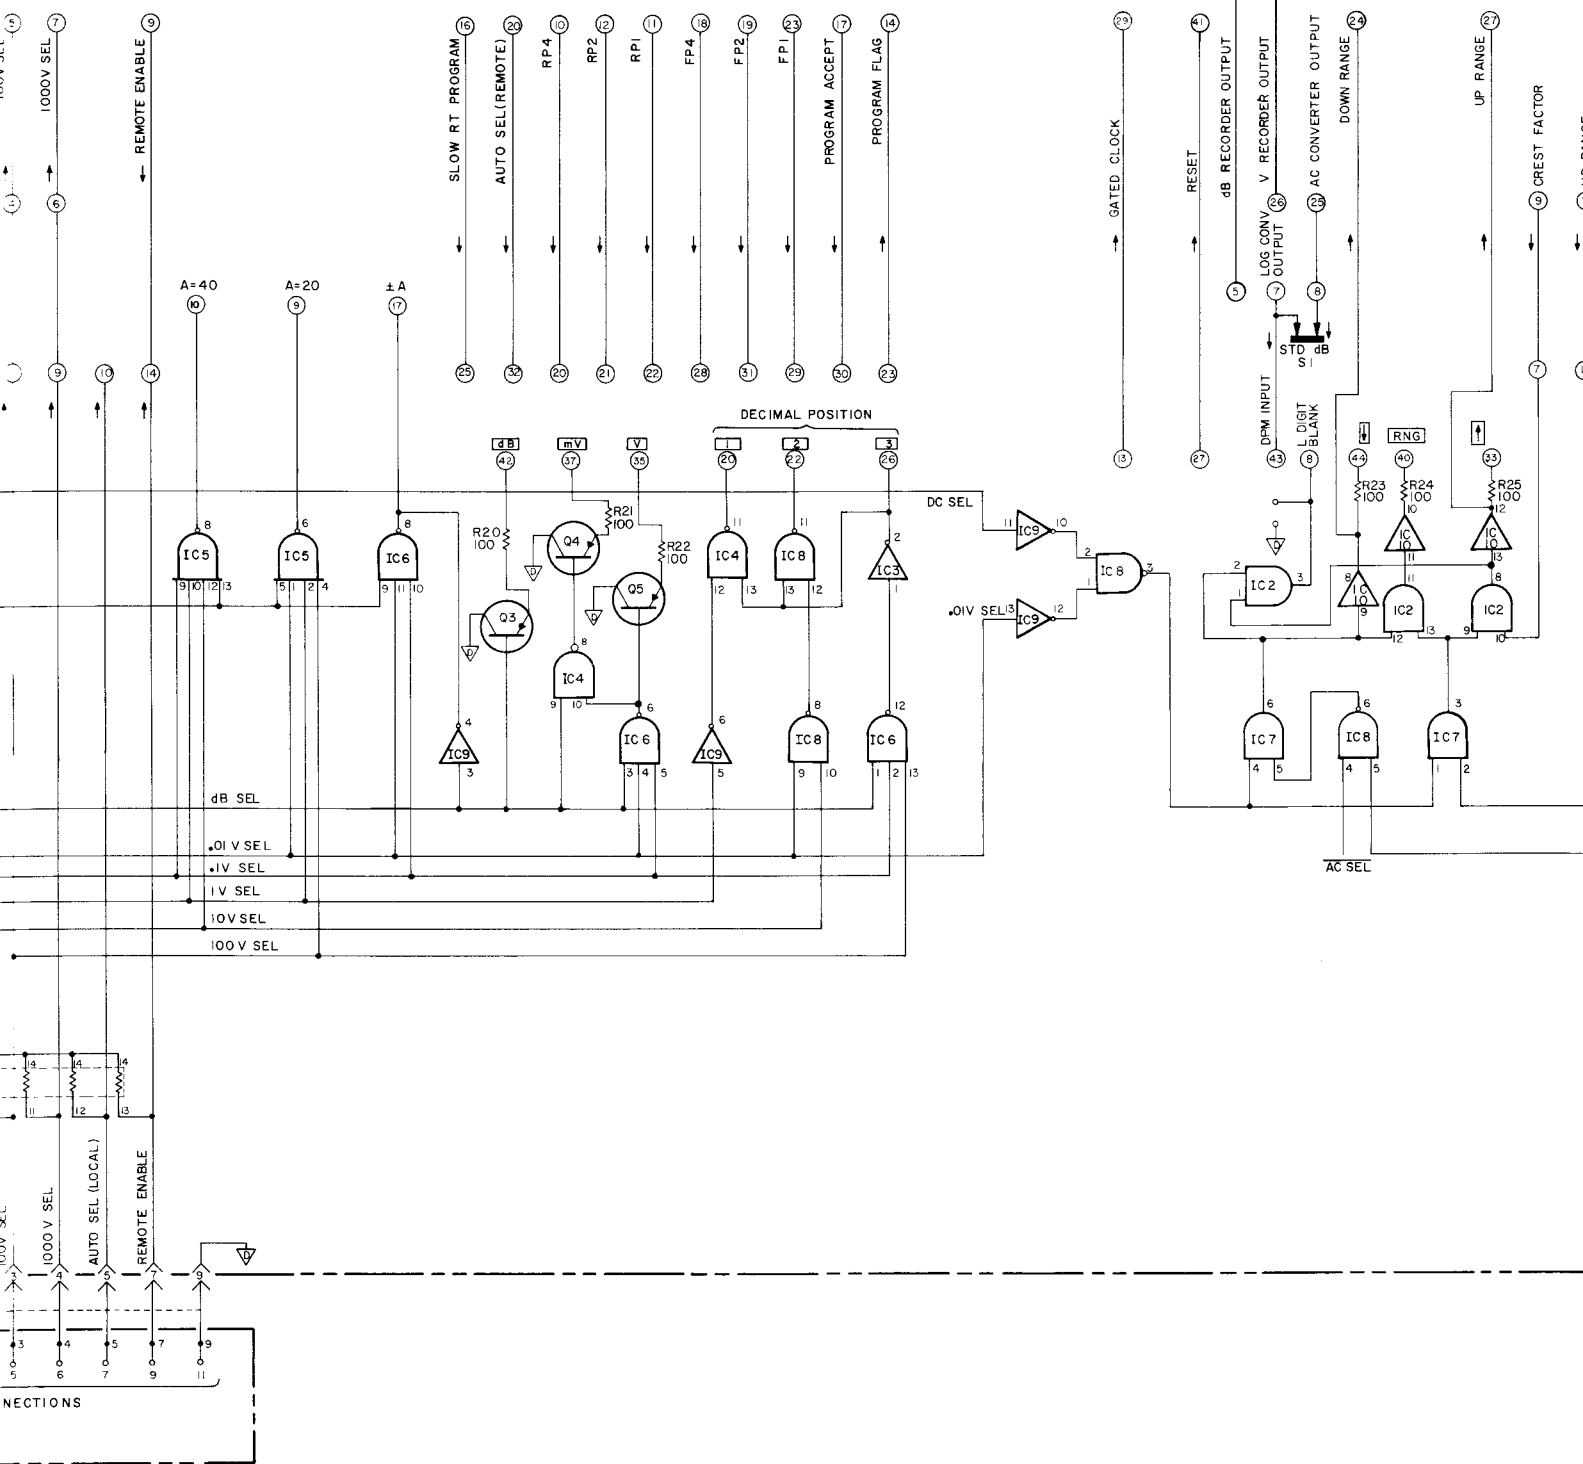

CONNECTIONS



AC SEL

DECIMAL POSITION

DC SEL

GATED CLOCK

J16 dB  
J14 V

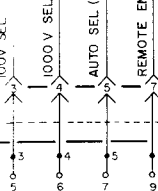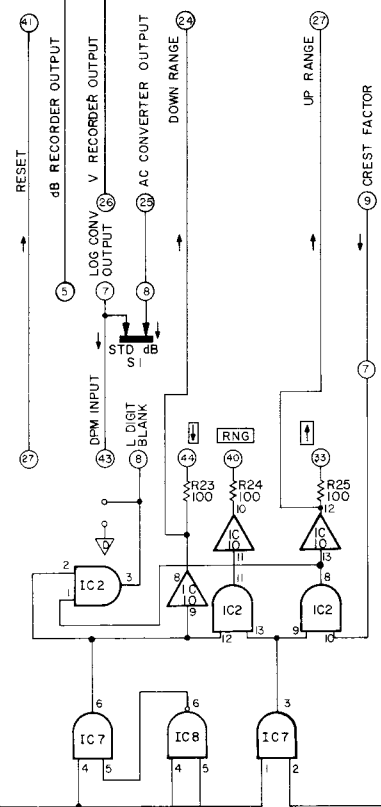



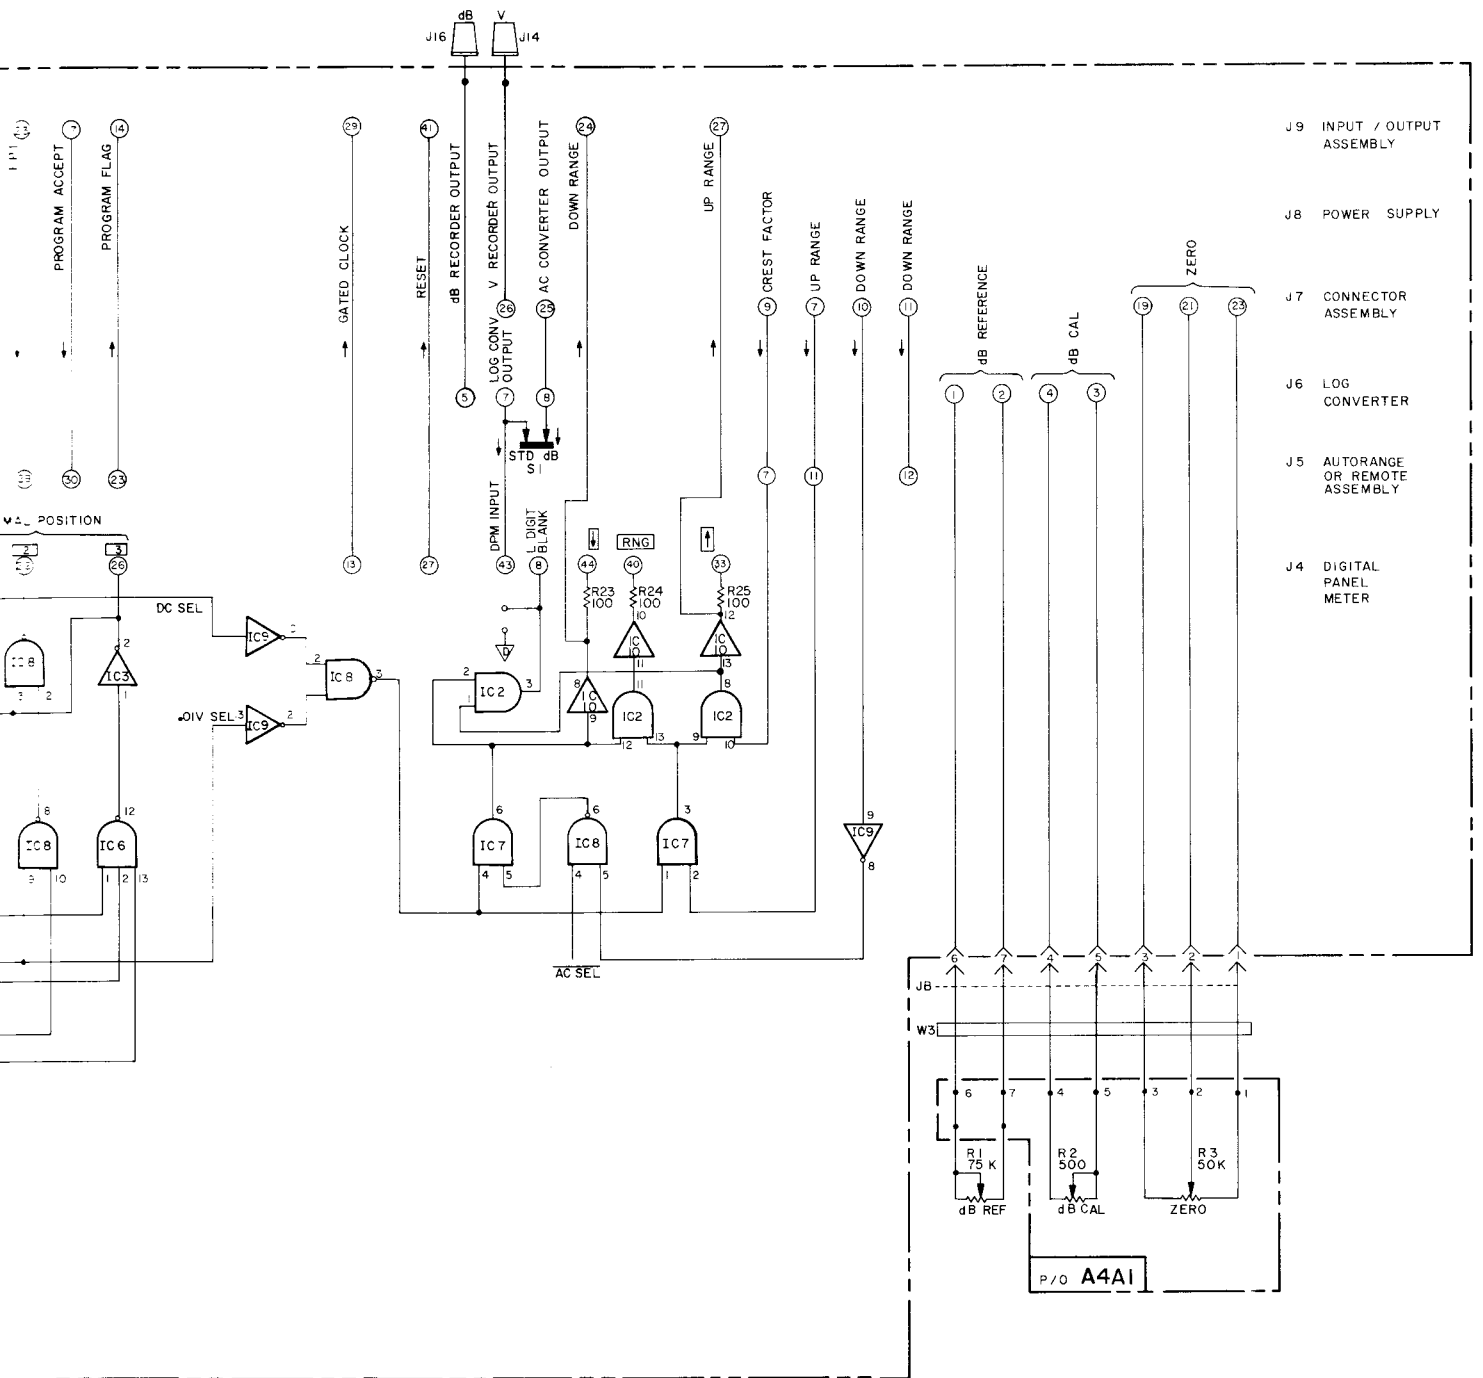


Figure 7-6. Master Board Wiring Diagram, A4.  
Rev. B 7-11/7-12


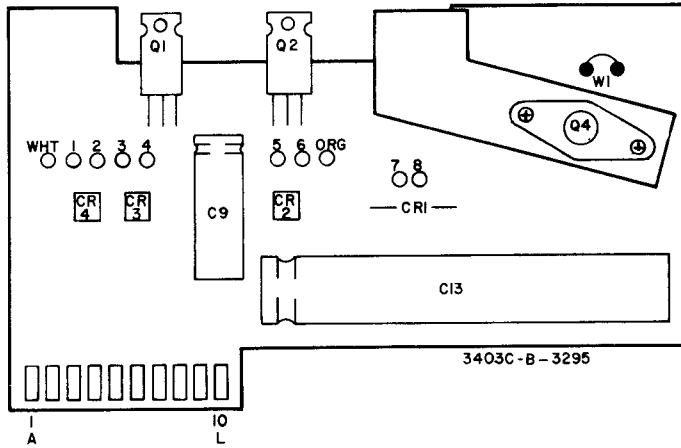


**A5**  
 hp Part No. 03403-66551

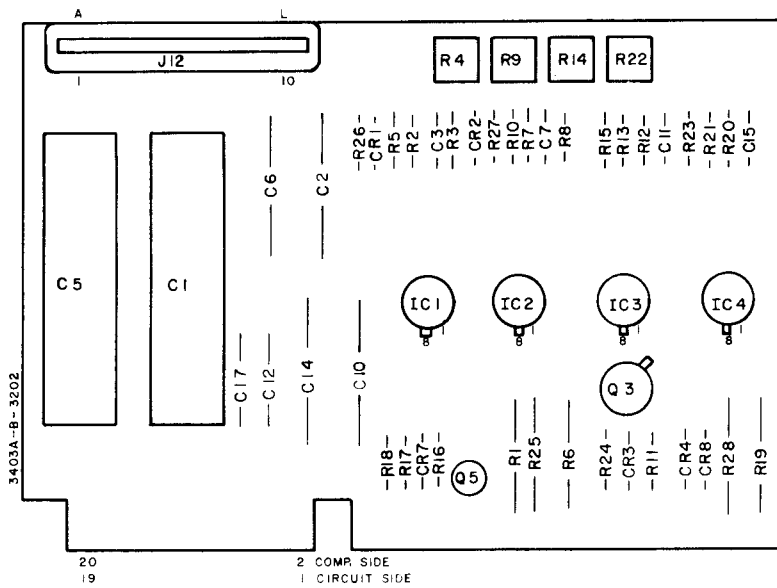


**A6**  
 03403-66561



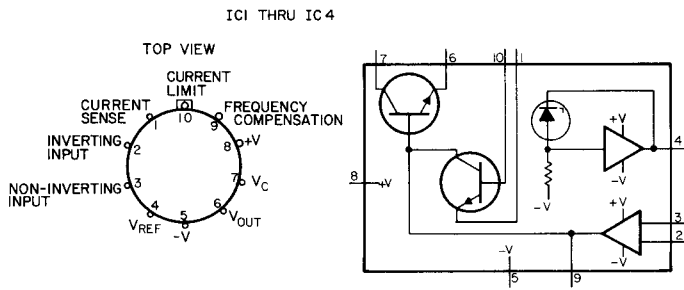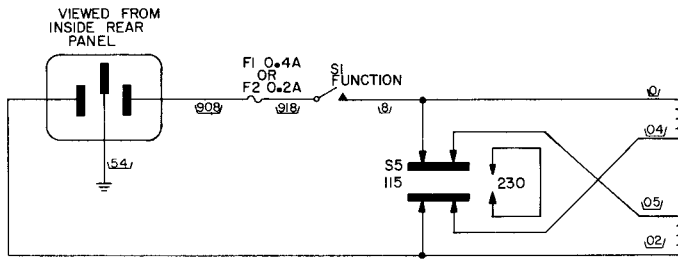

3403A-D-3195A  
COPYRIGHT 1971 BY HEWLETT - PACKARD COMPANY

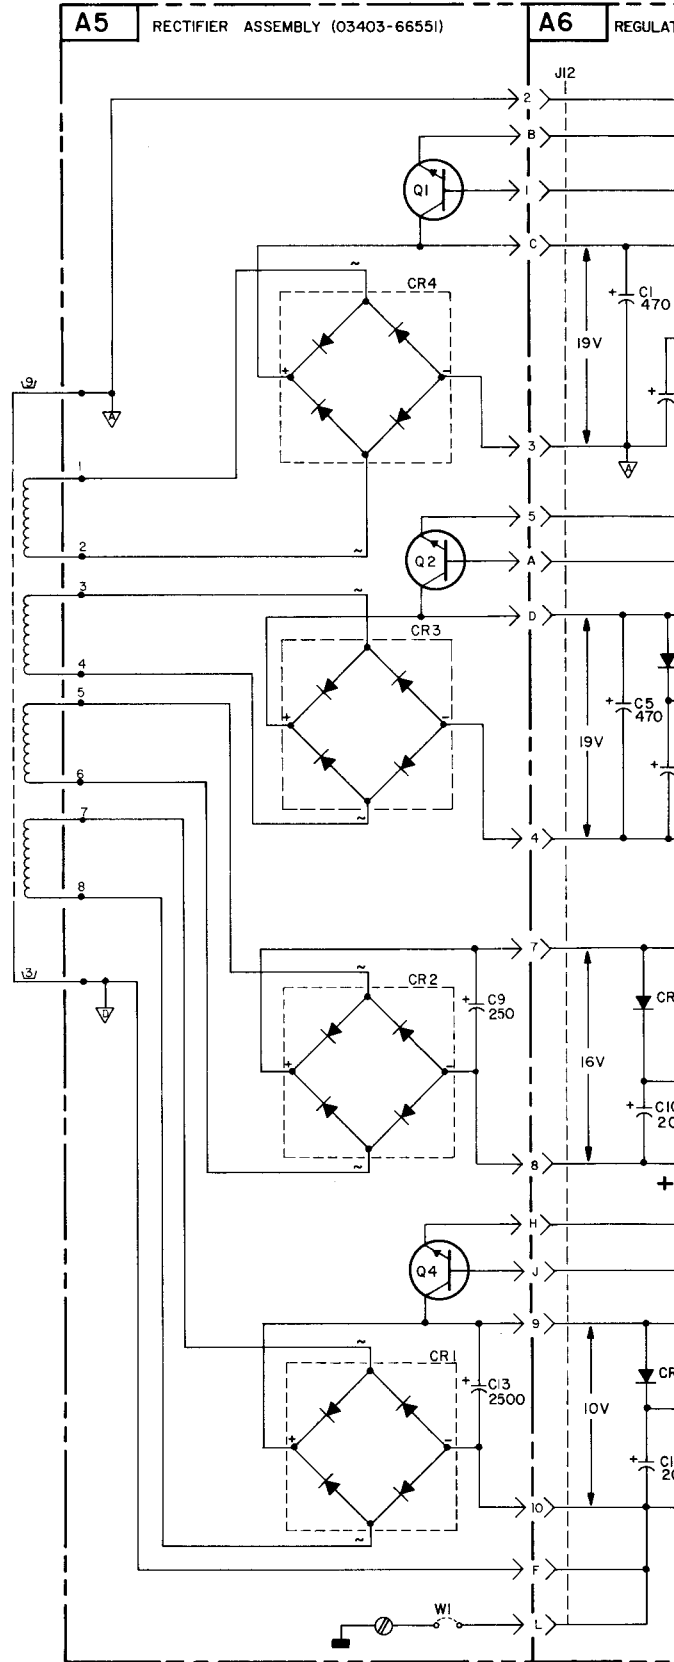

**A6** REGULATOR ASSEMBLY (03403-66561)


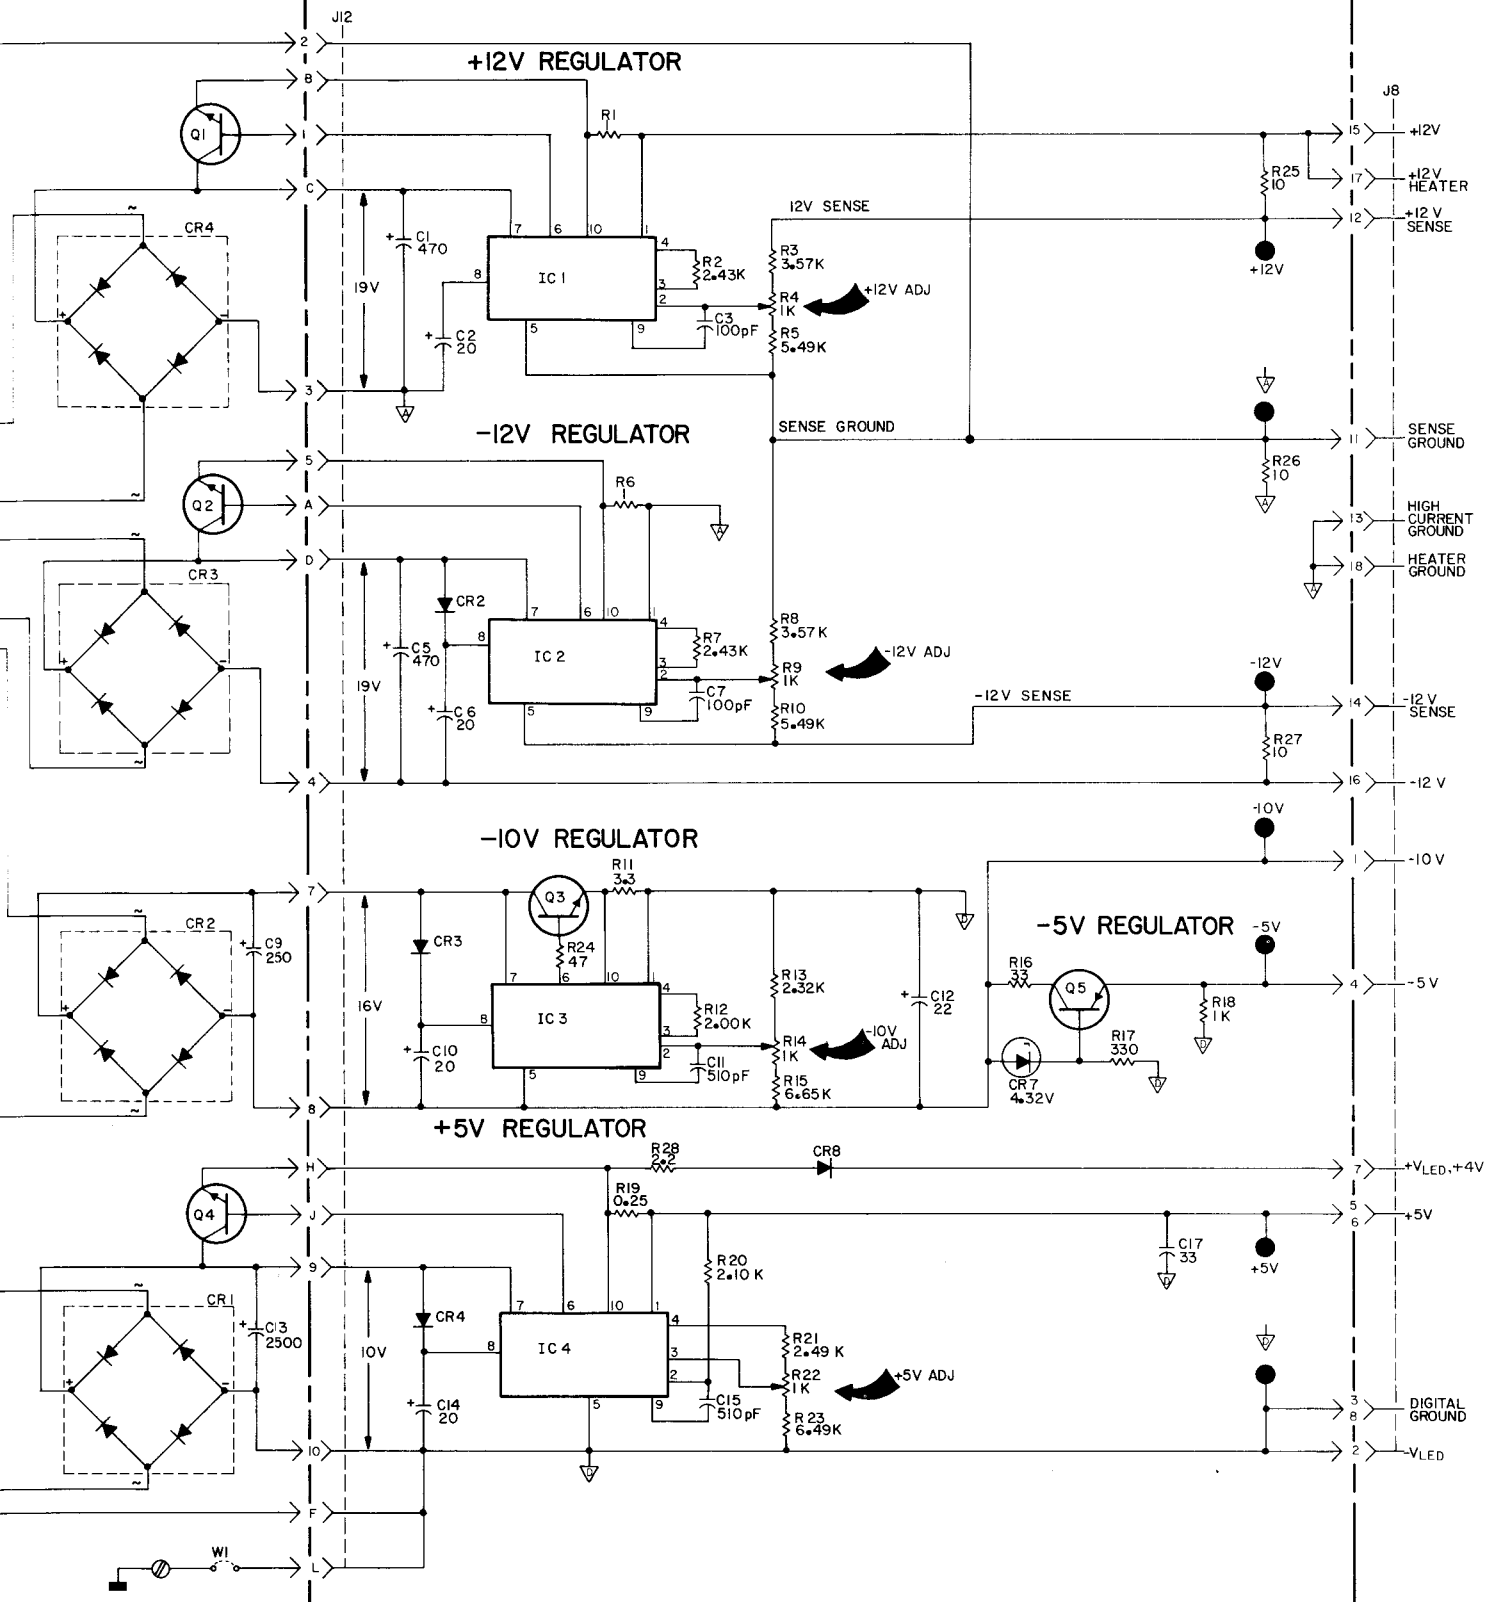



Figure 7-7. Schematic Diagram, Power Supplies, A5, A6.  
Rev. B 7-13/7-14

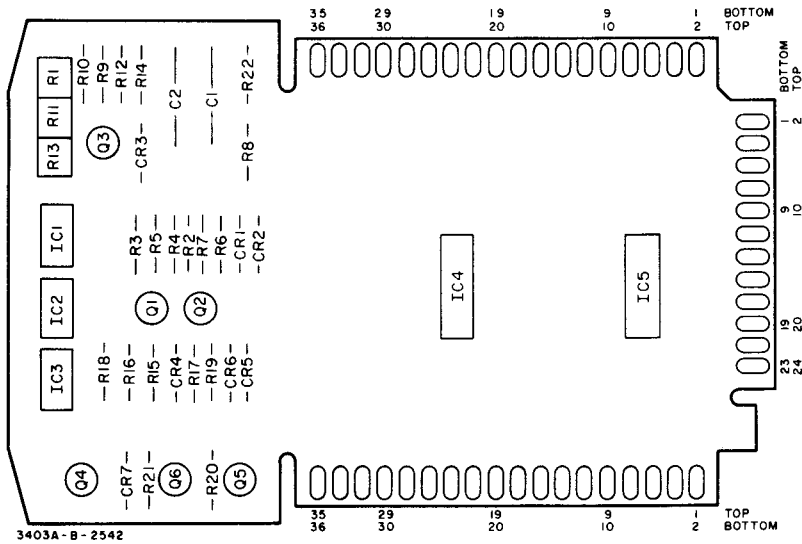


A7

hp Part No. 03403-66520

Rev. C

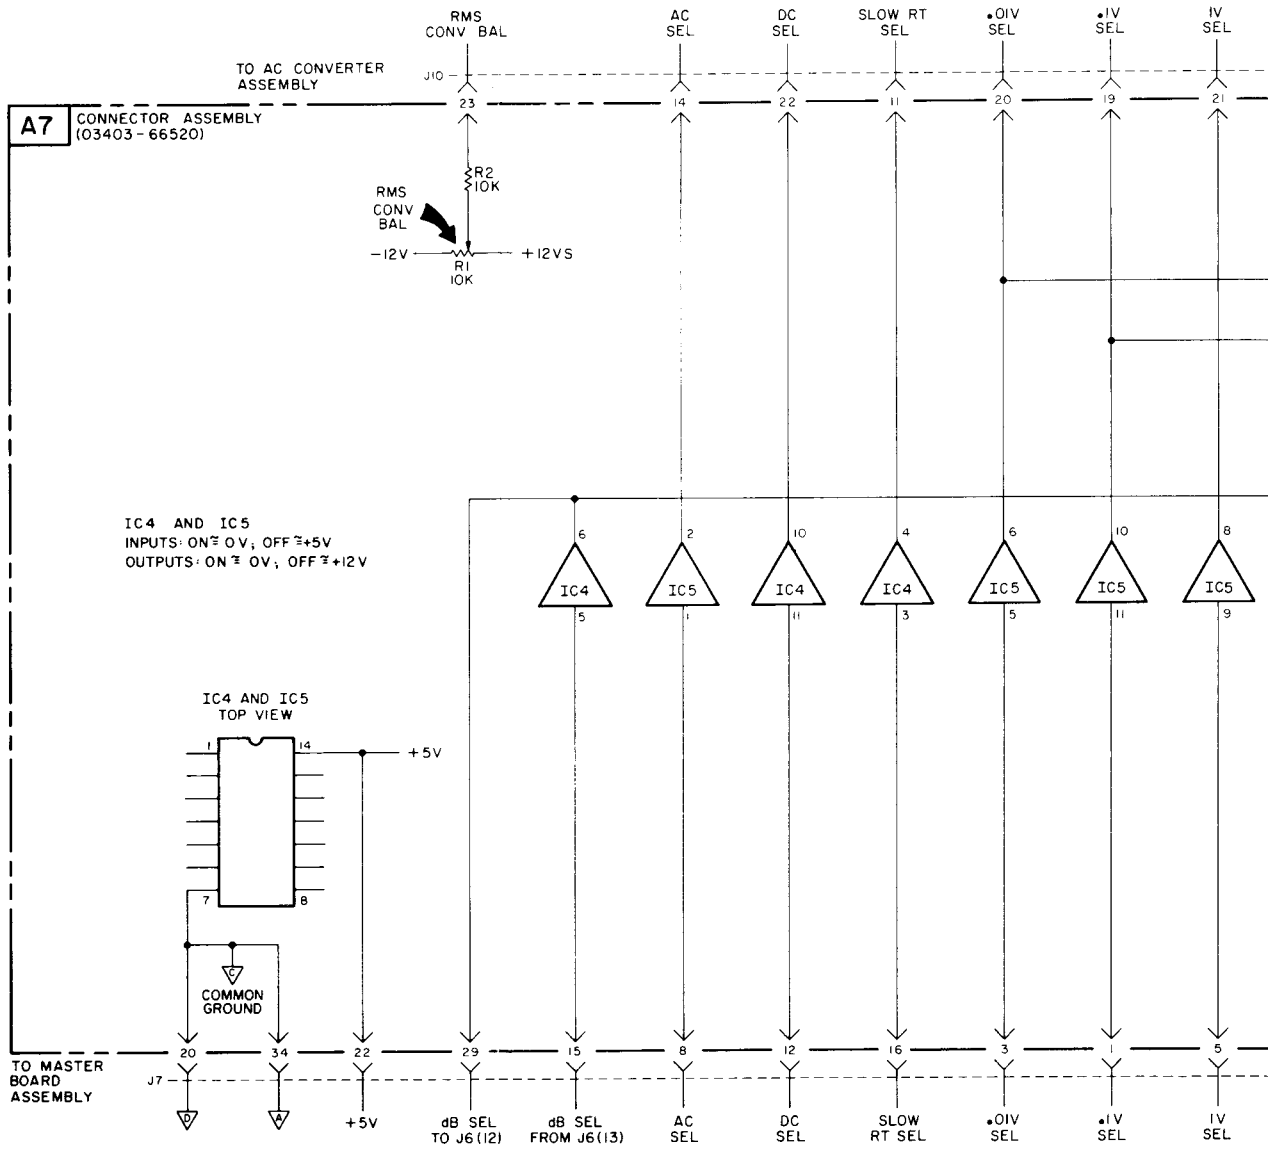

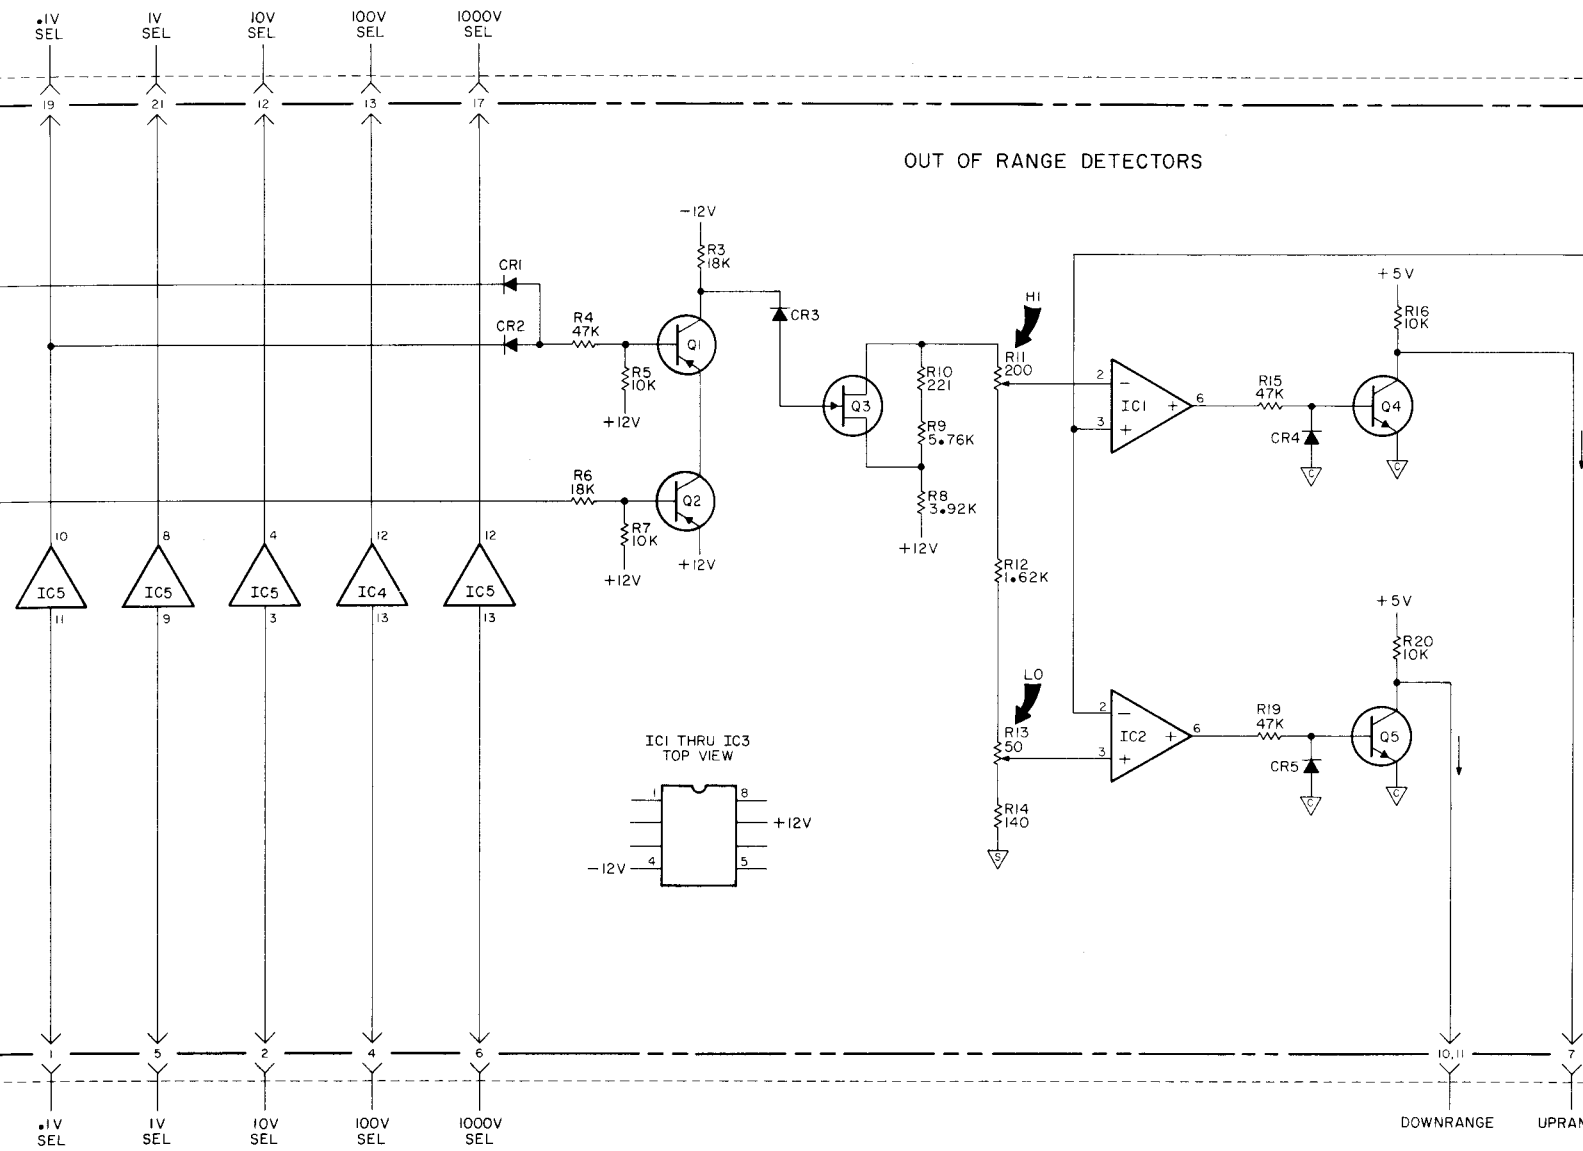


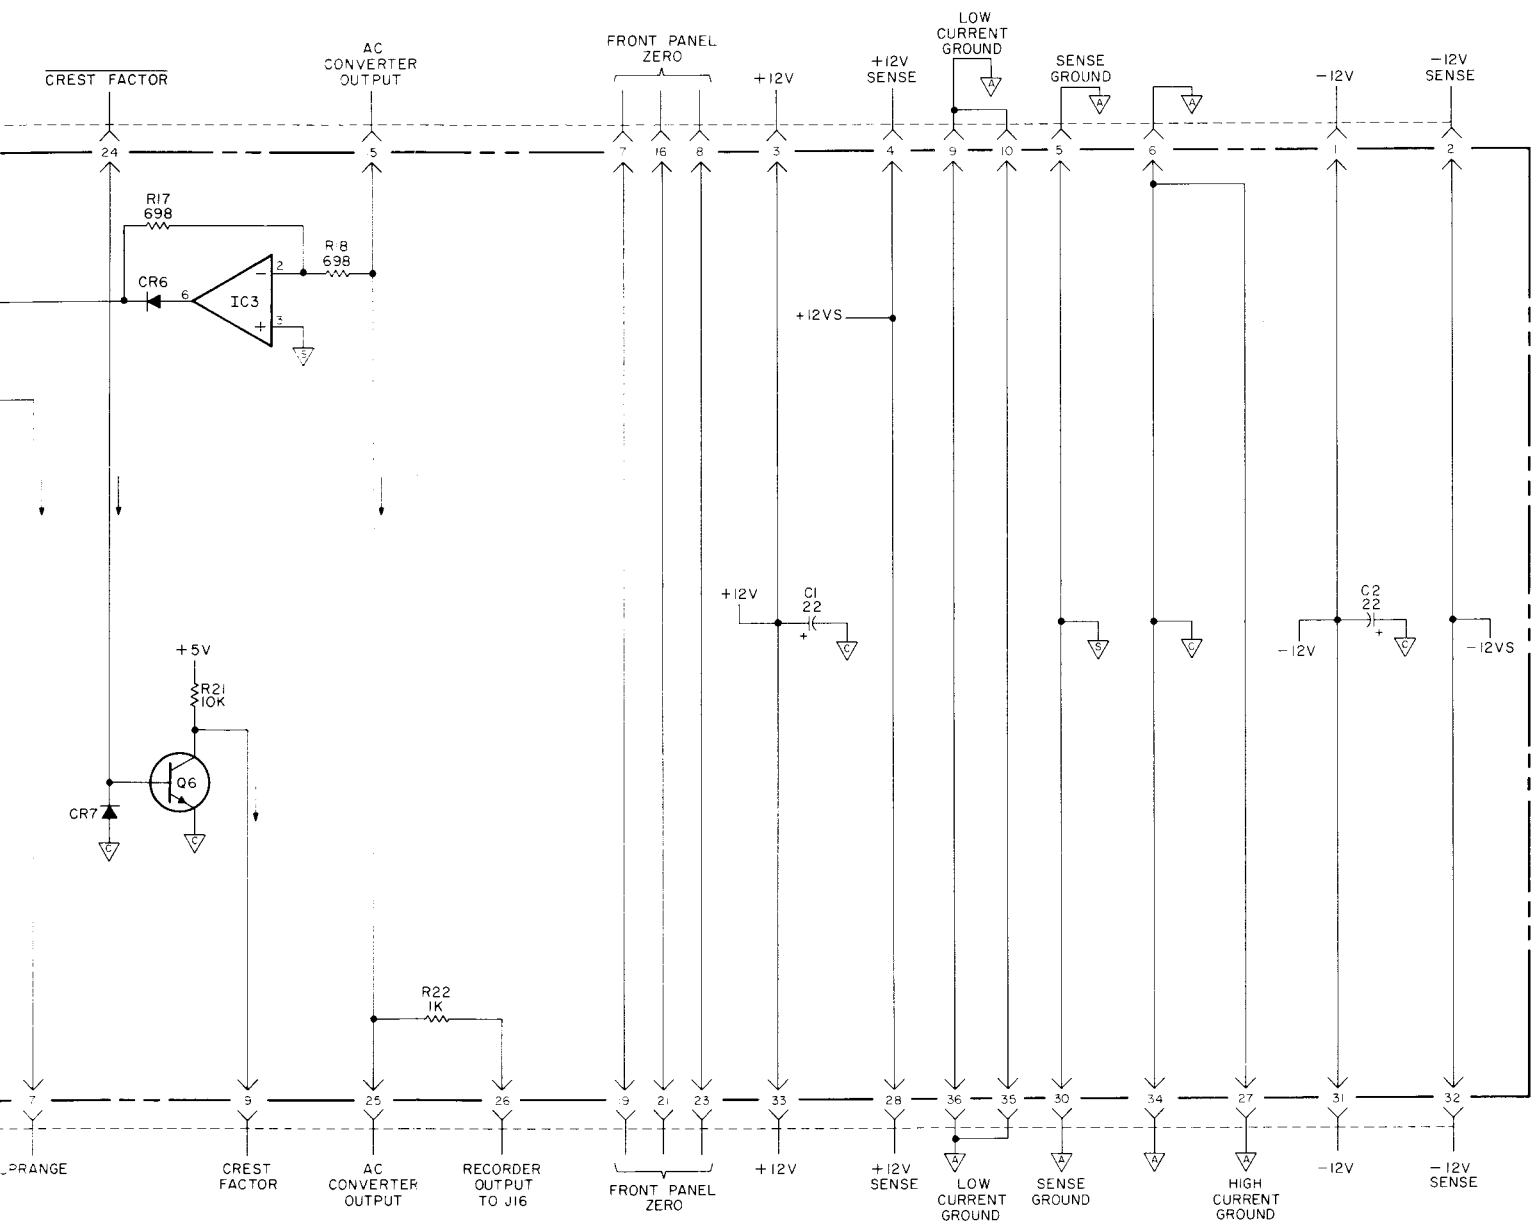


Figure 7-8. Schematic Diagram, Standard Connector Assembly, A7.  
7-15/7-16

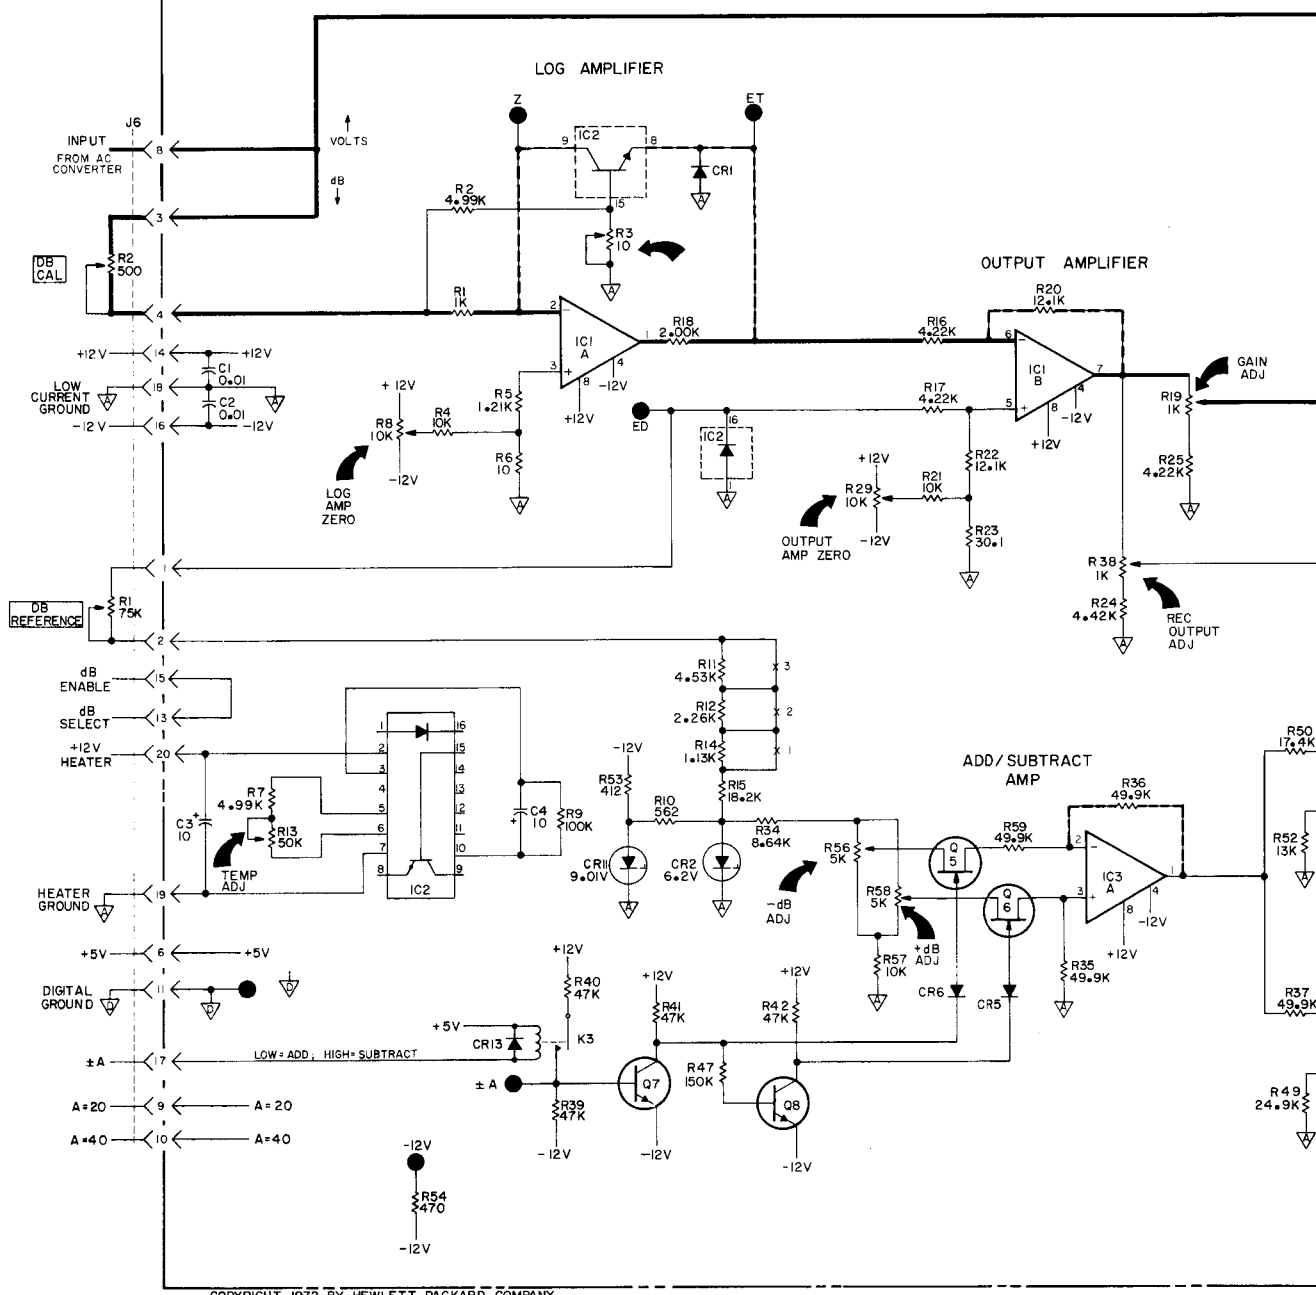

**A12** LOG CONVERTER ASSEMBLY, OPTION 006 (03403-66592)







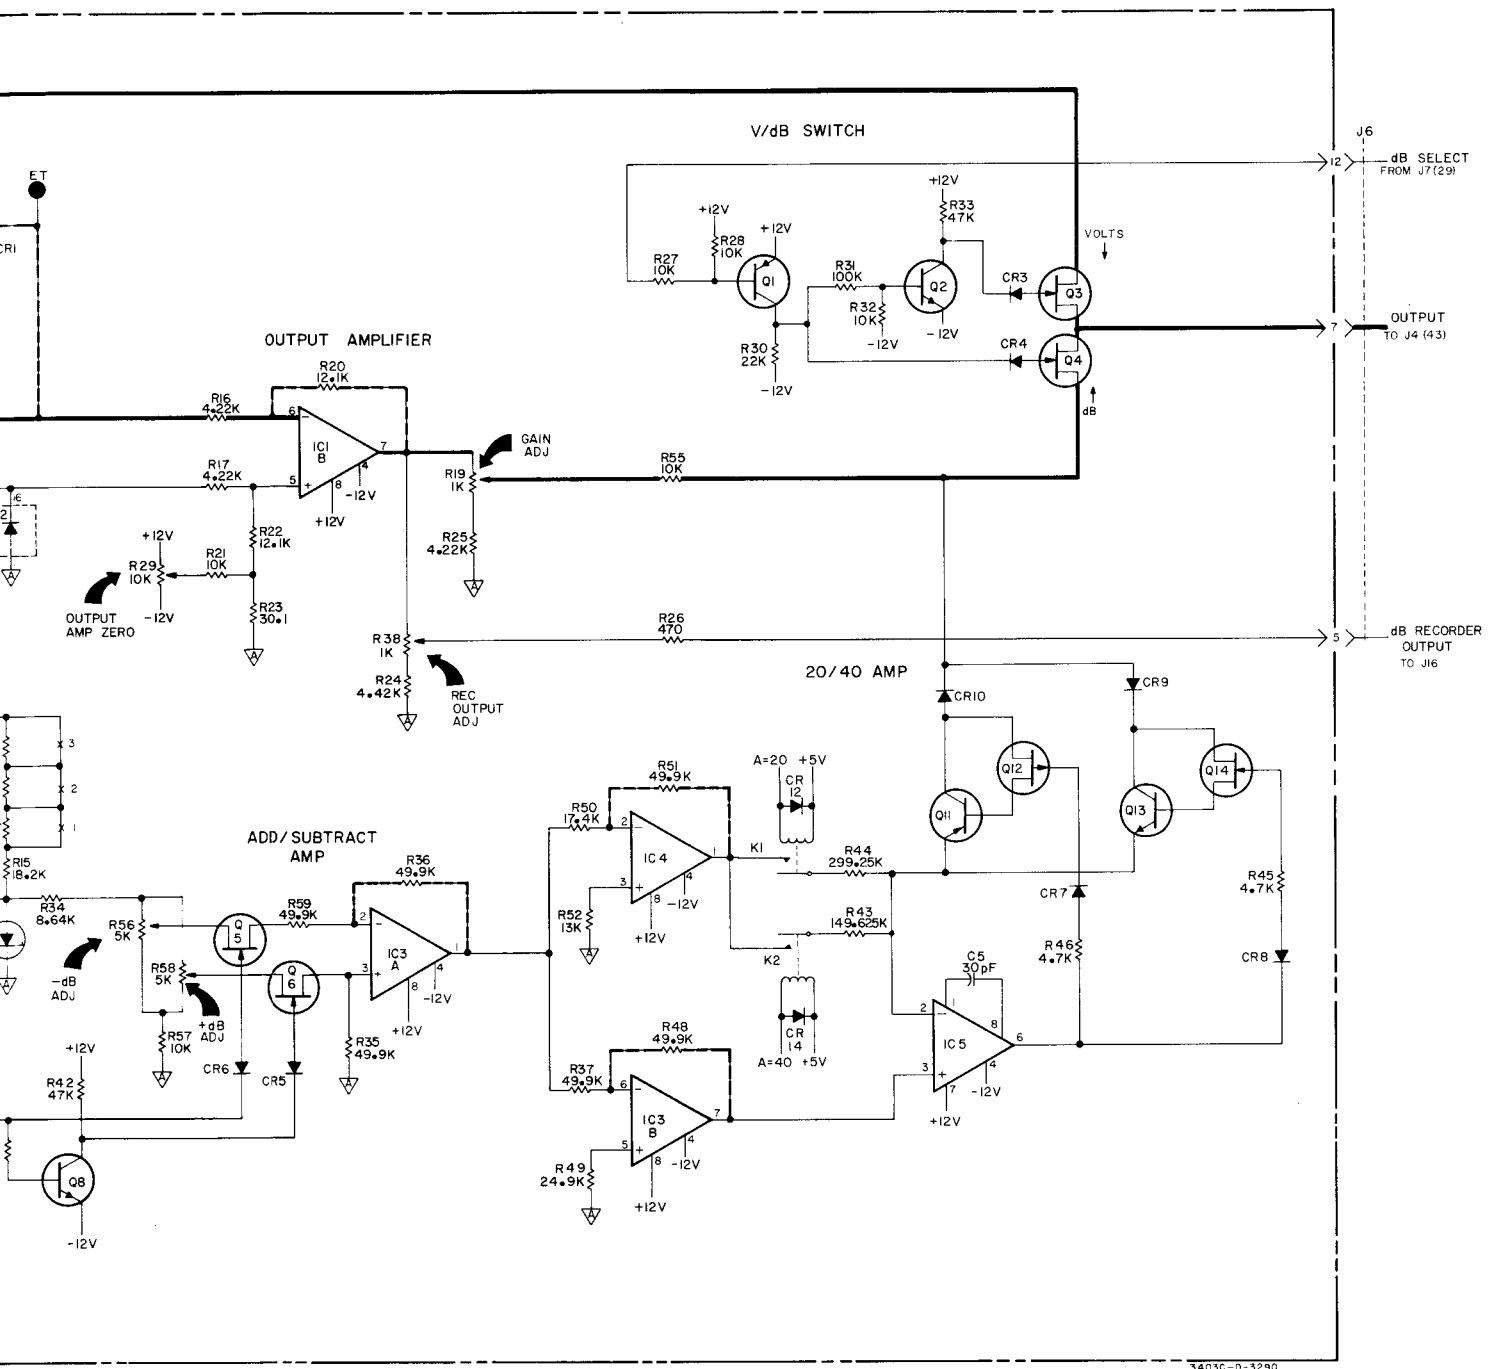


Figure 7-9. Schematic Diagram, Log Converter, A12.  
Rev. A 7-17/7-18

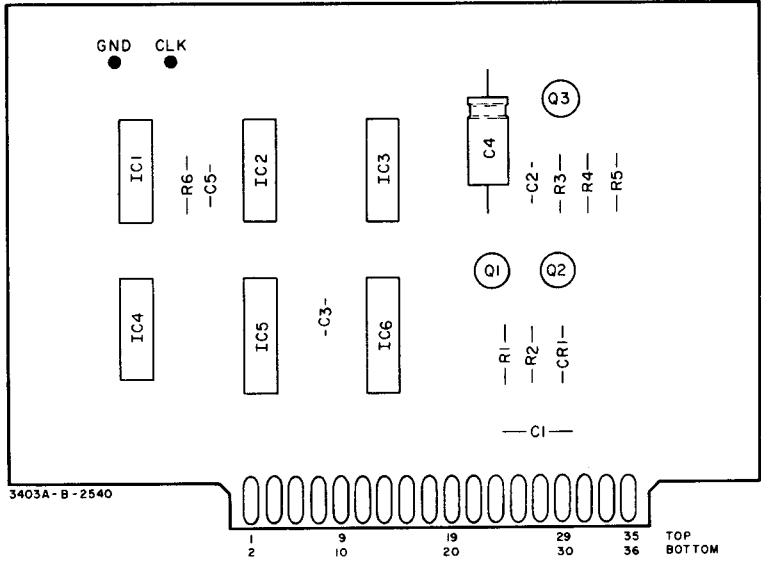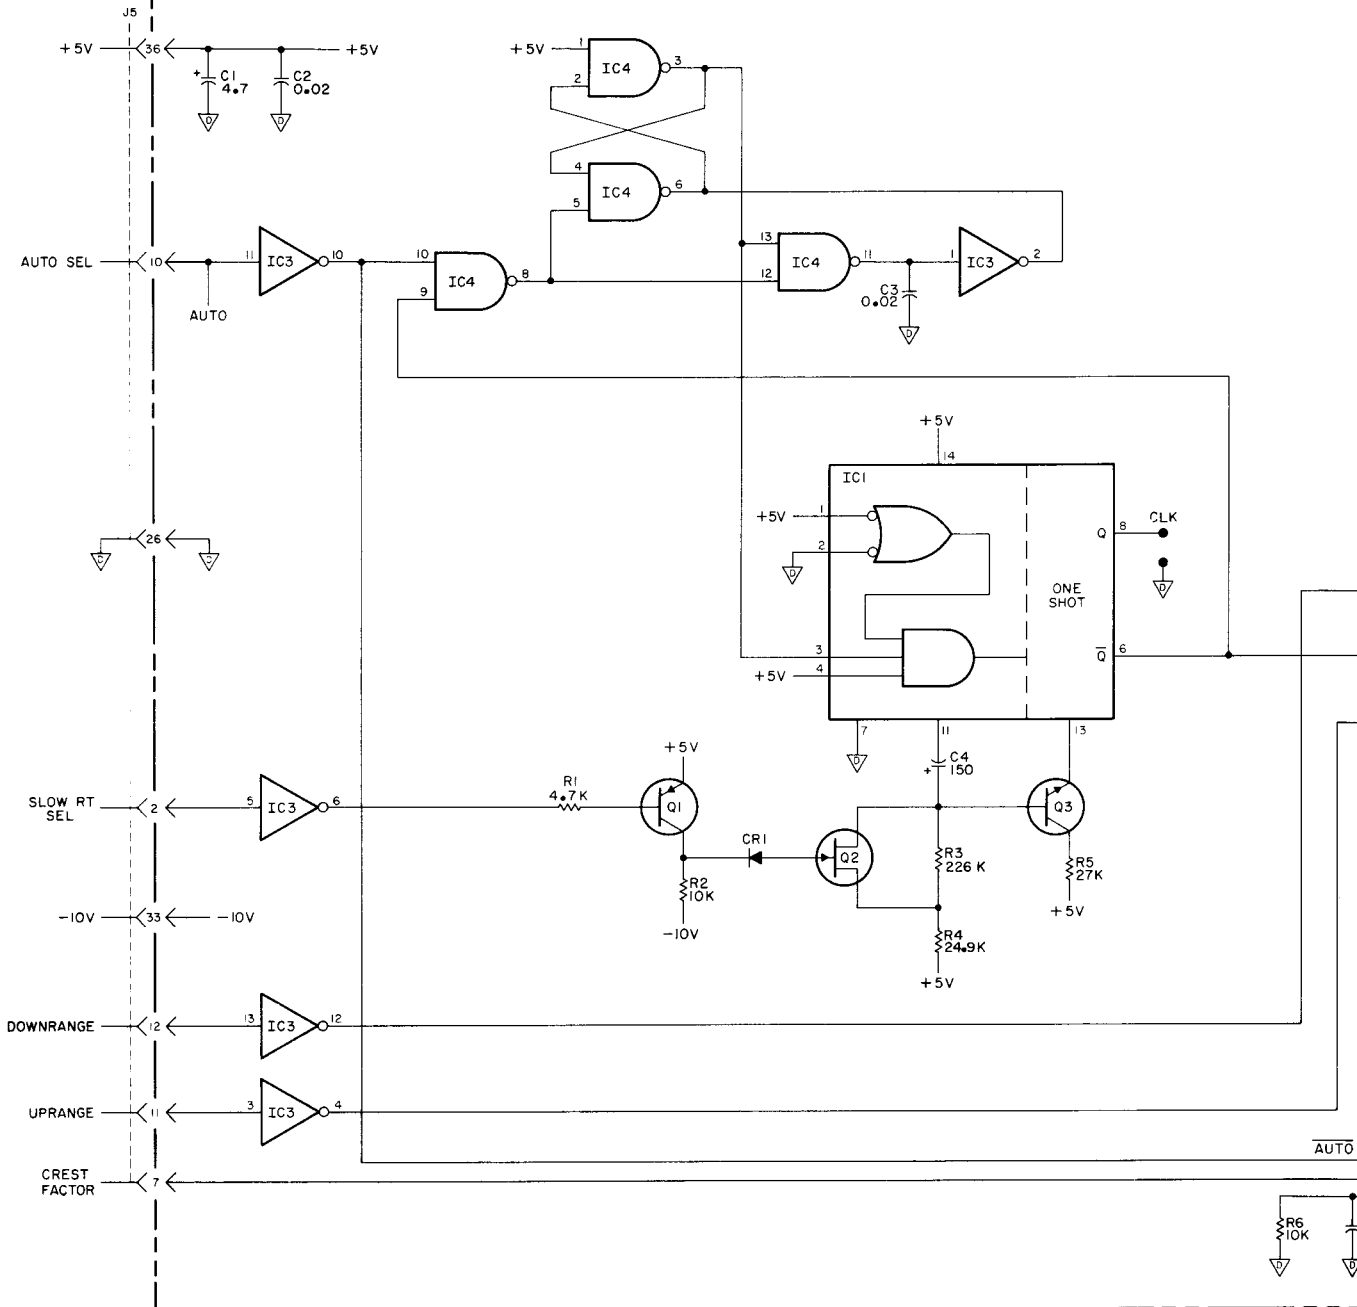

**AI3**  
 hp Part No. 03403-66571

**AUTORANGE CLOCK**





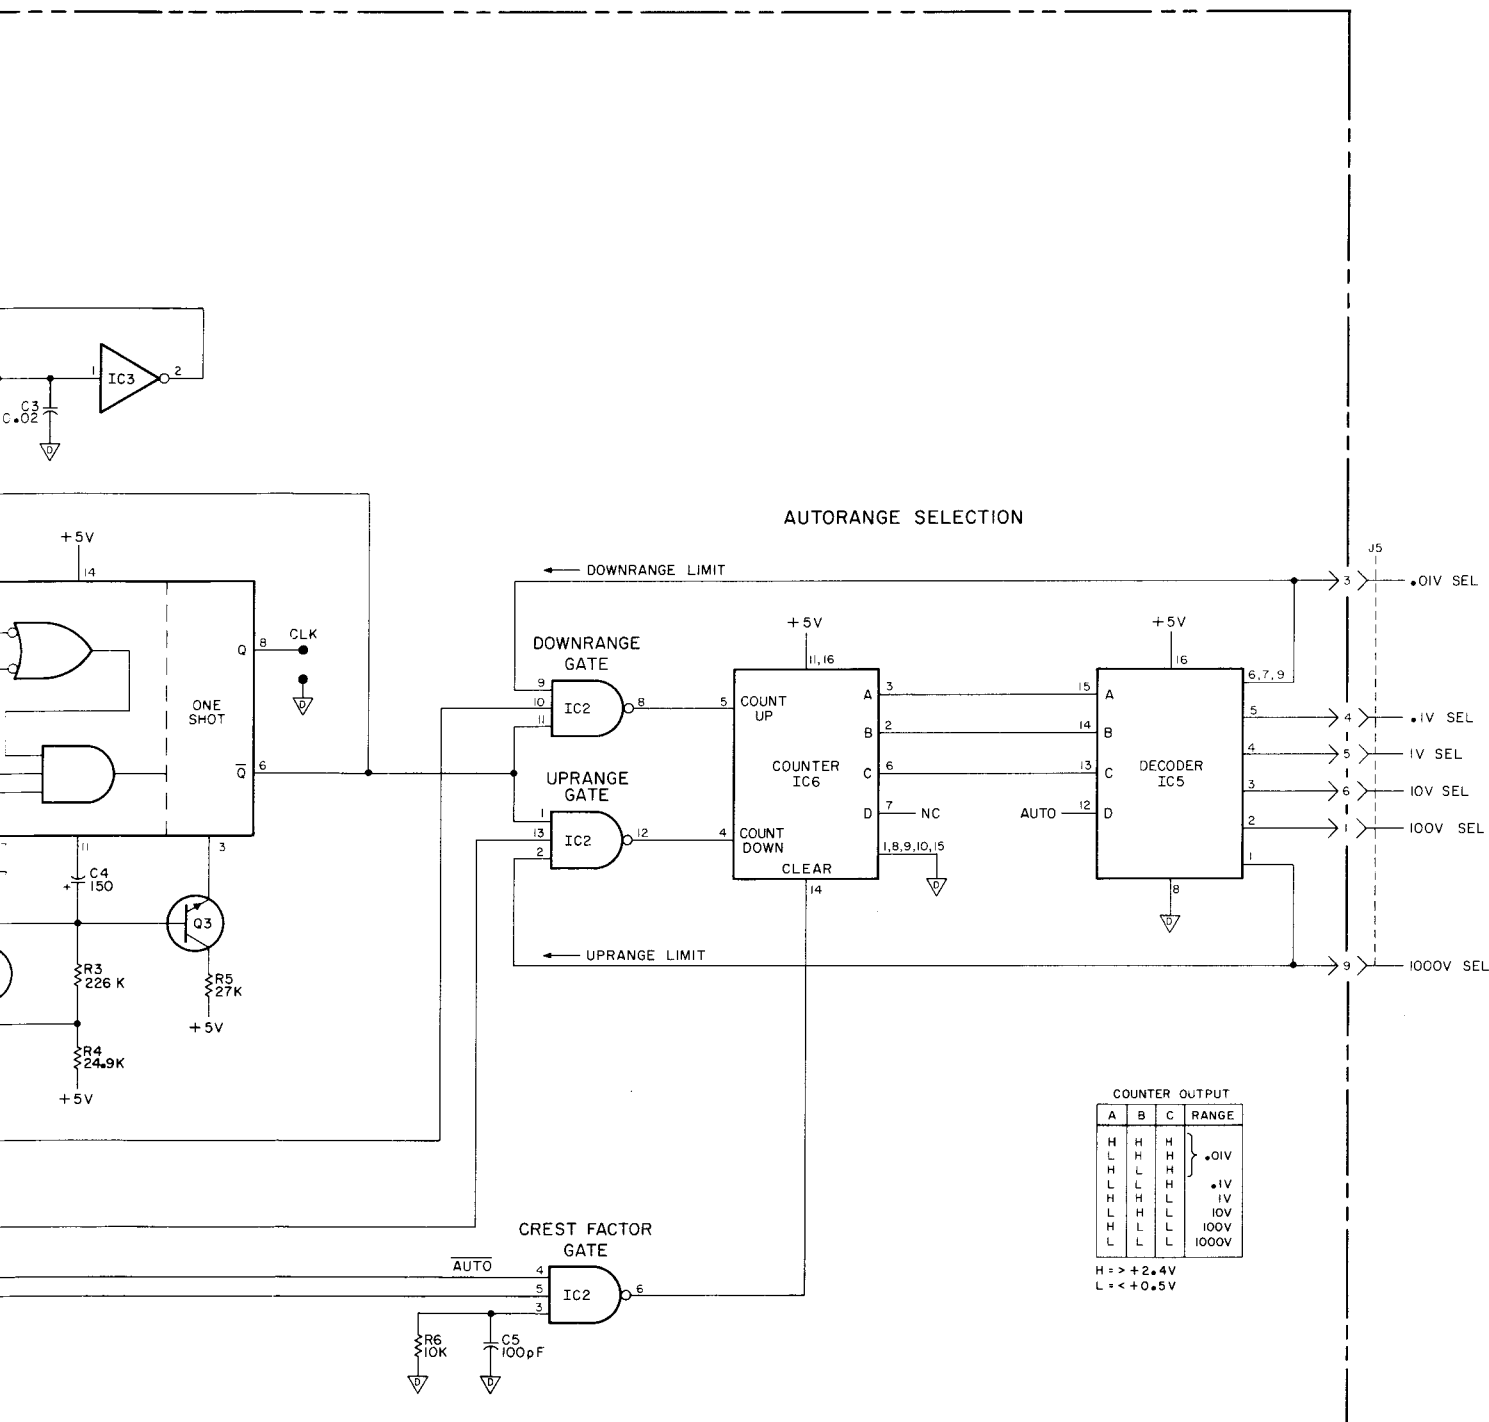


Figure 7-10. Schematic Diagram, Autorange Assembly, A13.  
7-19/7-20

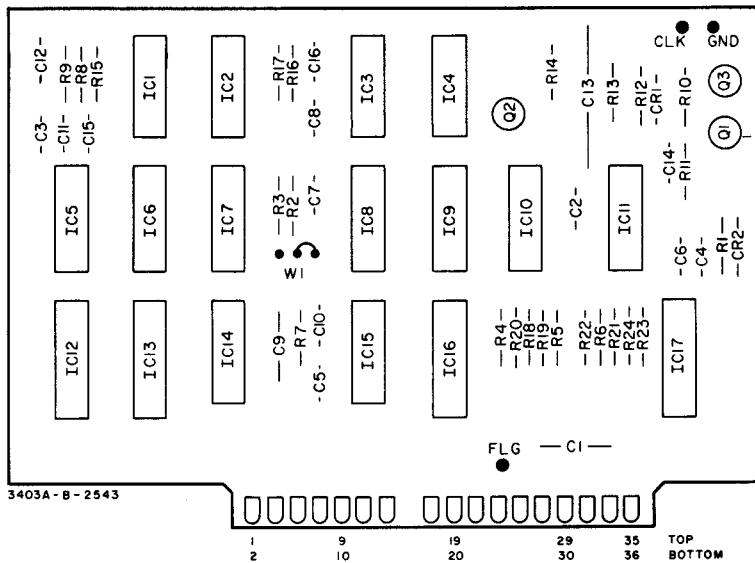

**A14**  
 hp Part No. 03403-66572  
 Rev. B


**A14** REMOTE PROGRAM ASSEMBLY (OPTIONAL) (03403-66572)

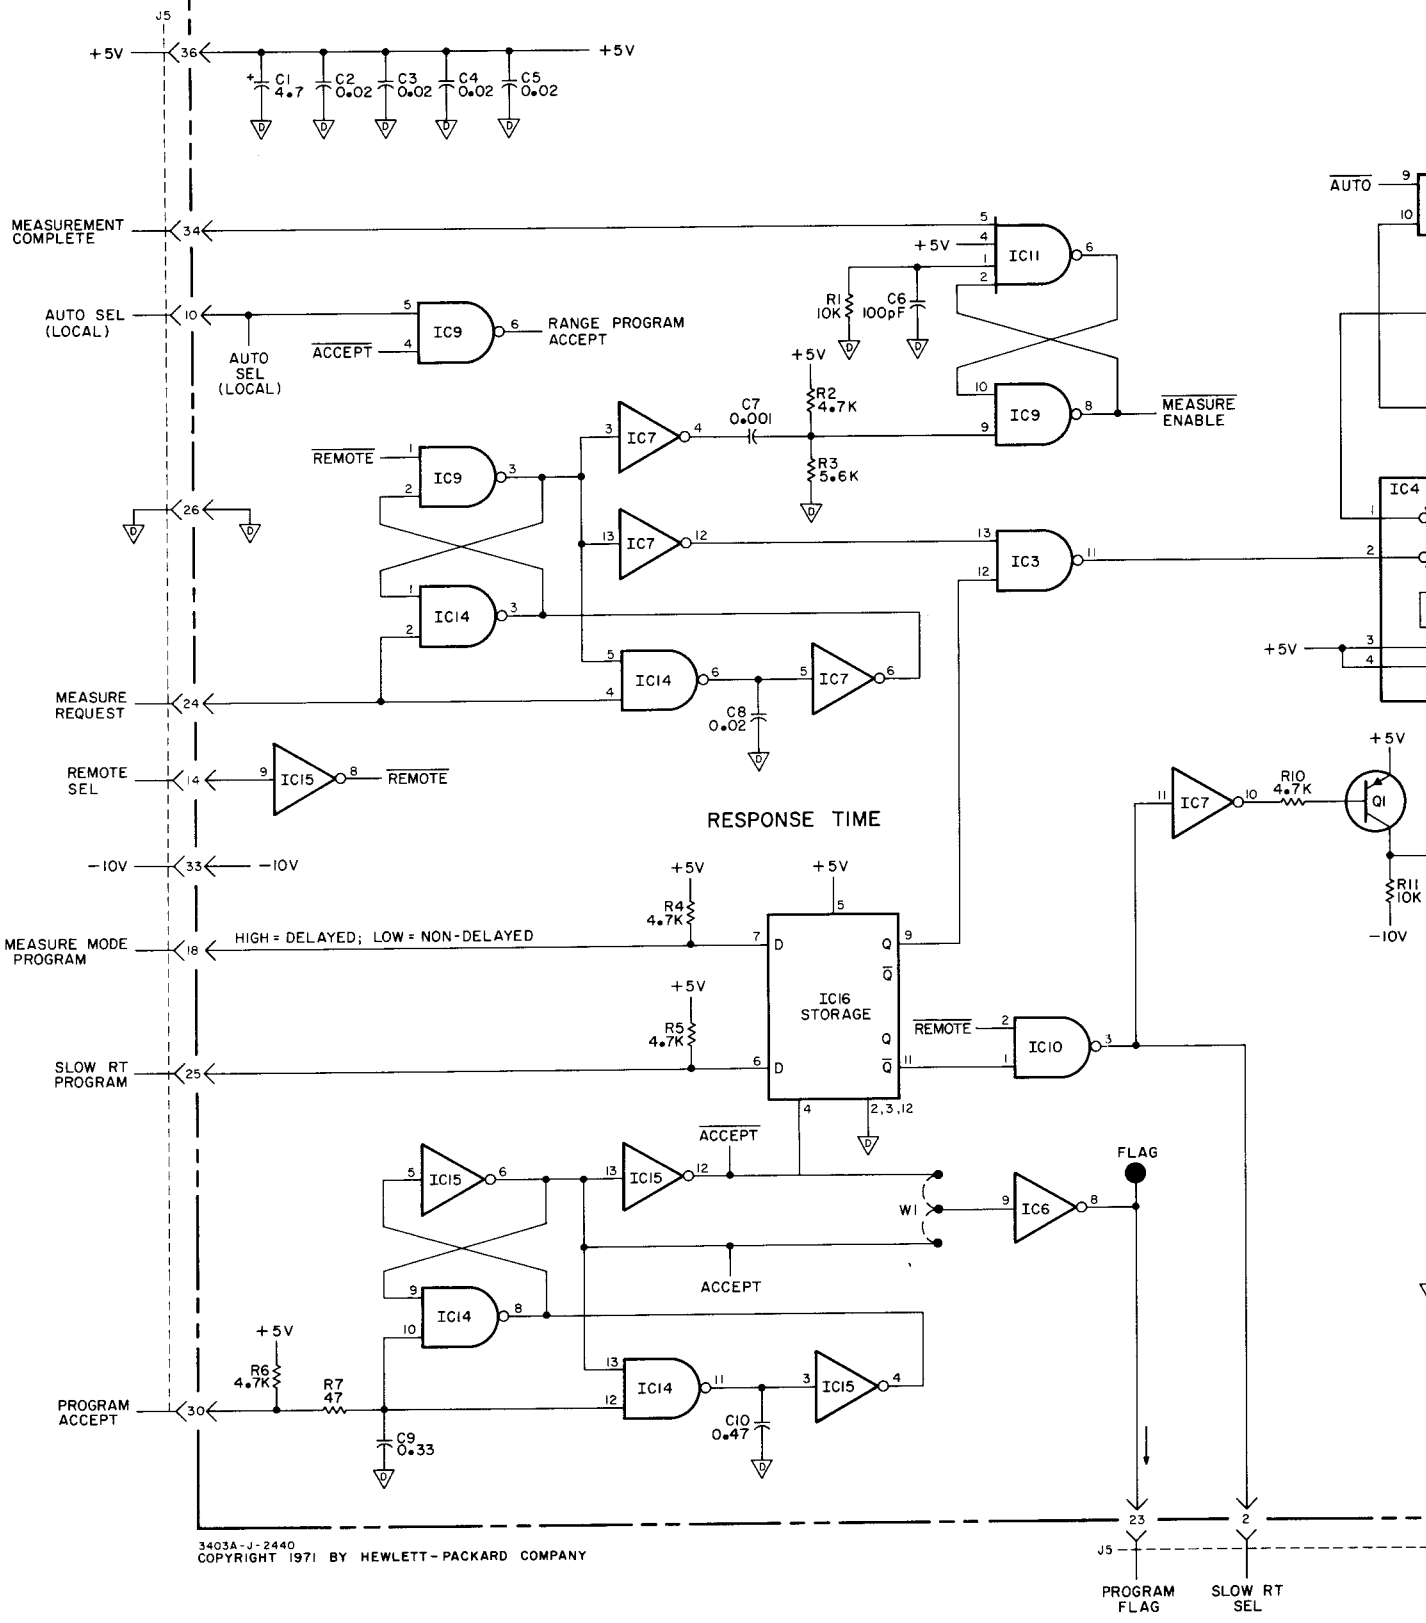


**AUTORANGE CLOCK**

**DOWNRANGE GATE**


**UPRANGE GATE**

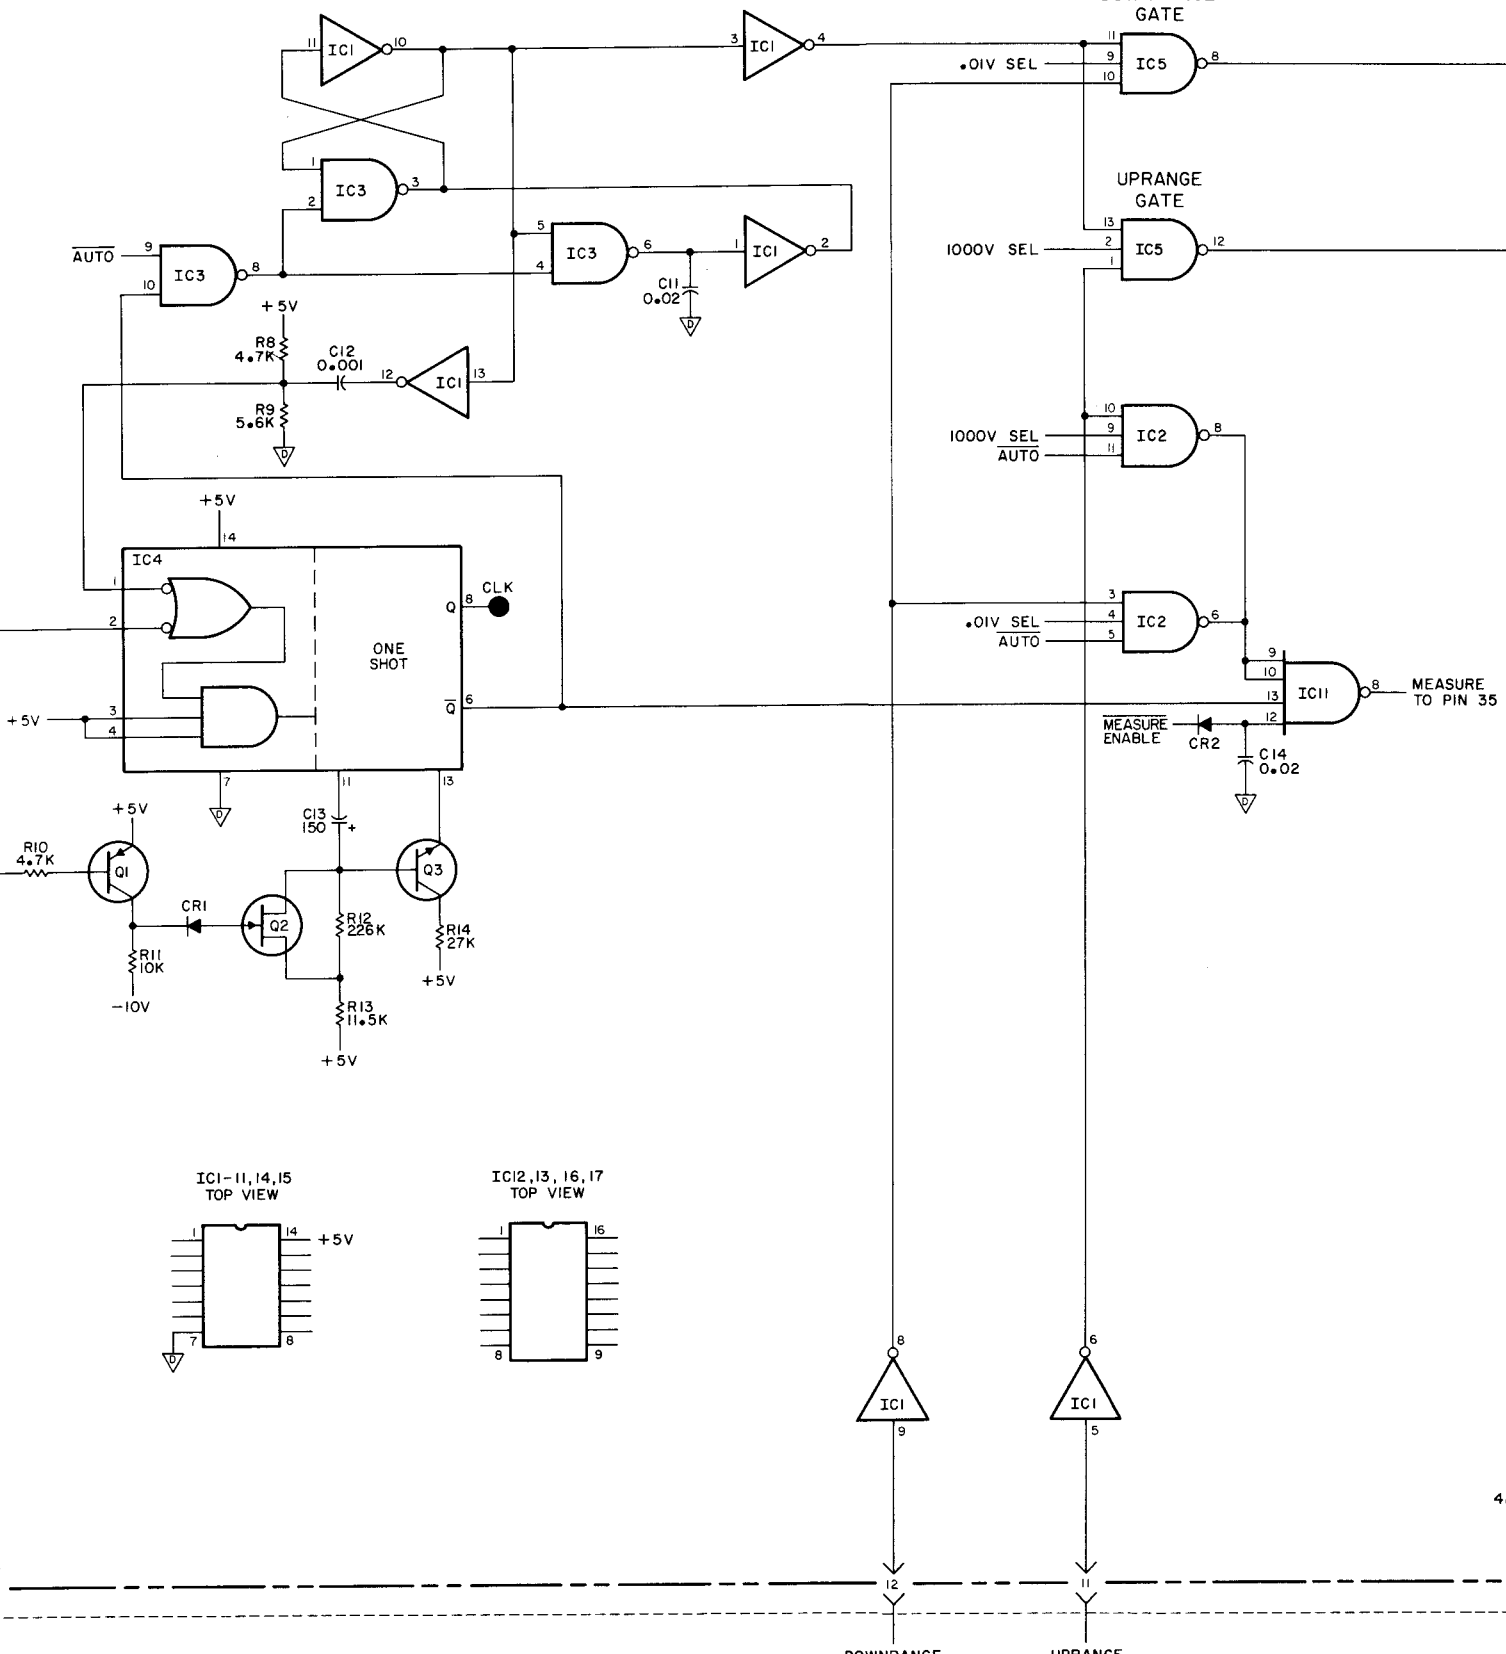

IC1-11, 14, 15  
TOP VIEW

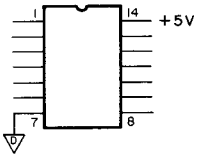

IC2, 13, 16, 17  
TOP VIEW

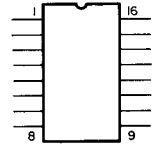

SLOW RT SEL


DOWNRANGE

UPRANGE

+5  
R18  
4.7K


DOWNRANGE  
GATE

REMOTE AND AUTO RANGE S

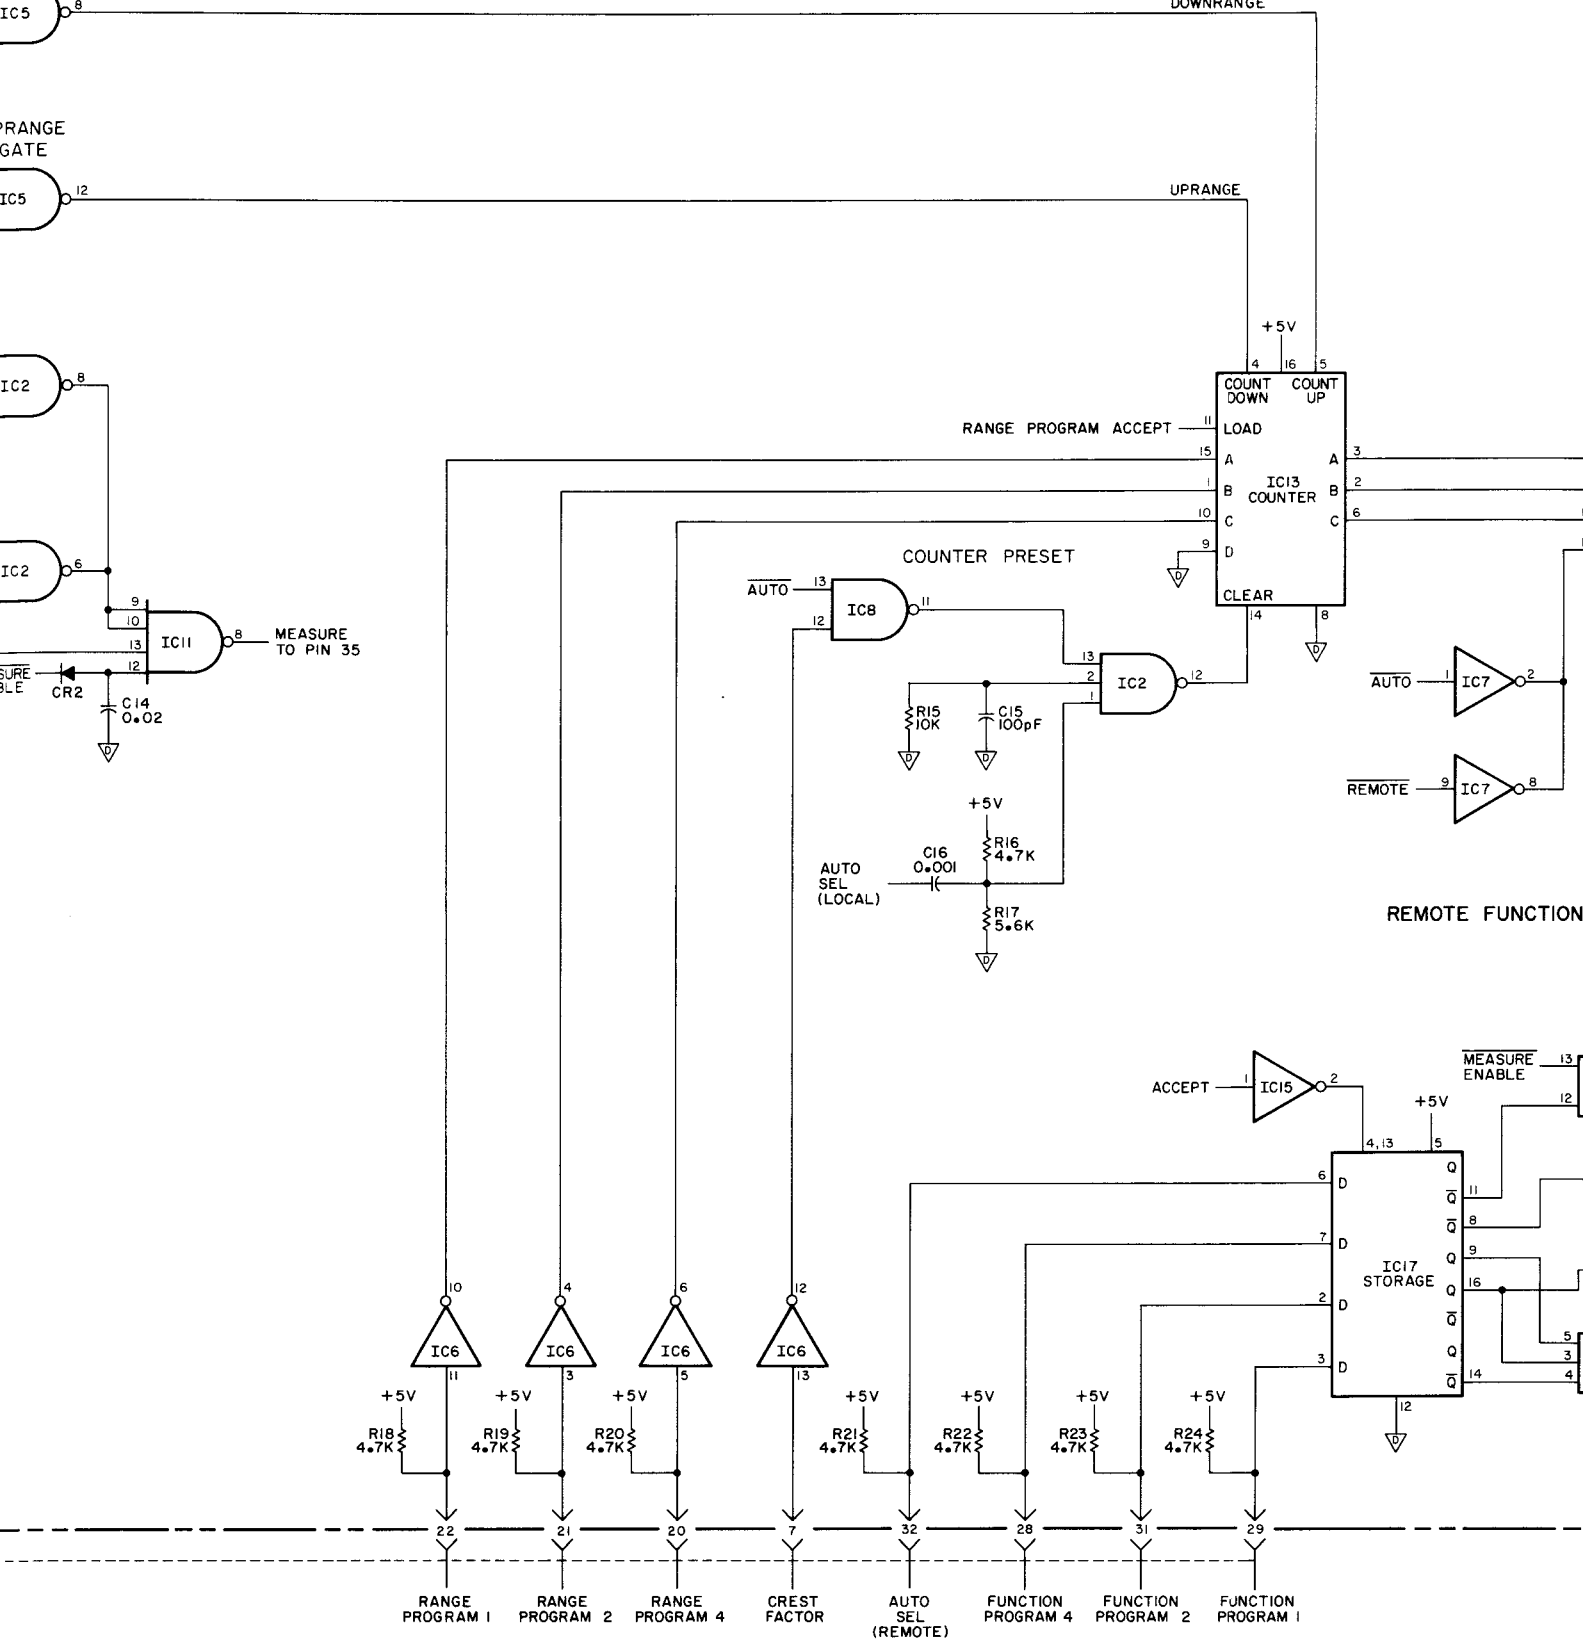






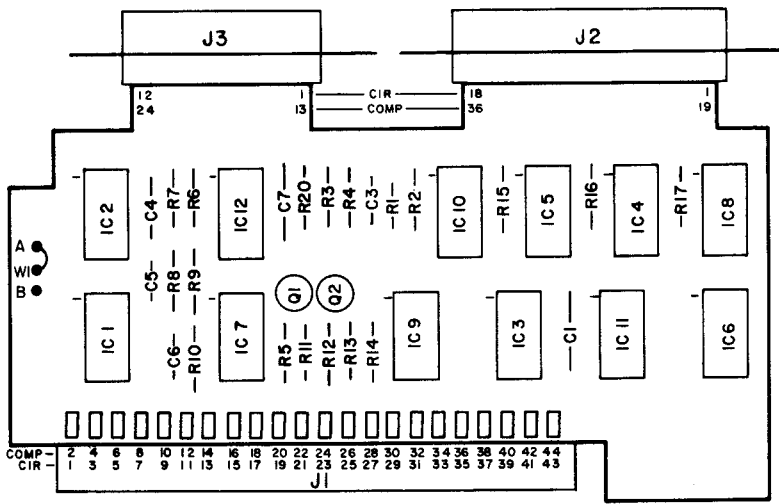


3403C-B-3291

**AI5**  
 hp Part No. 03403-66582

J3  
REMOTE CONNECTOR  
(REAR PANEL VIEW)

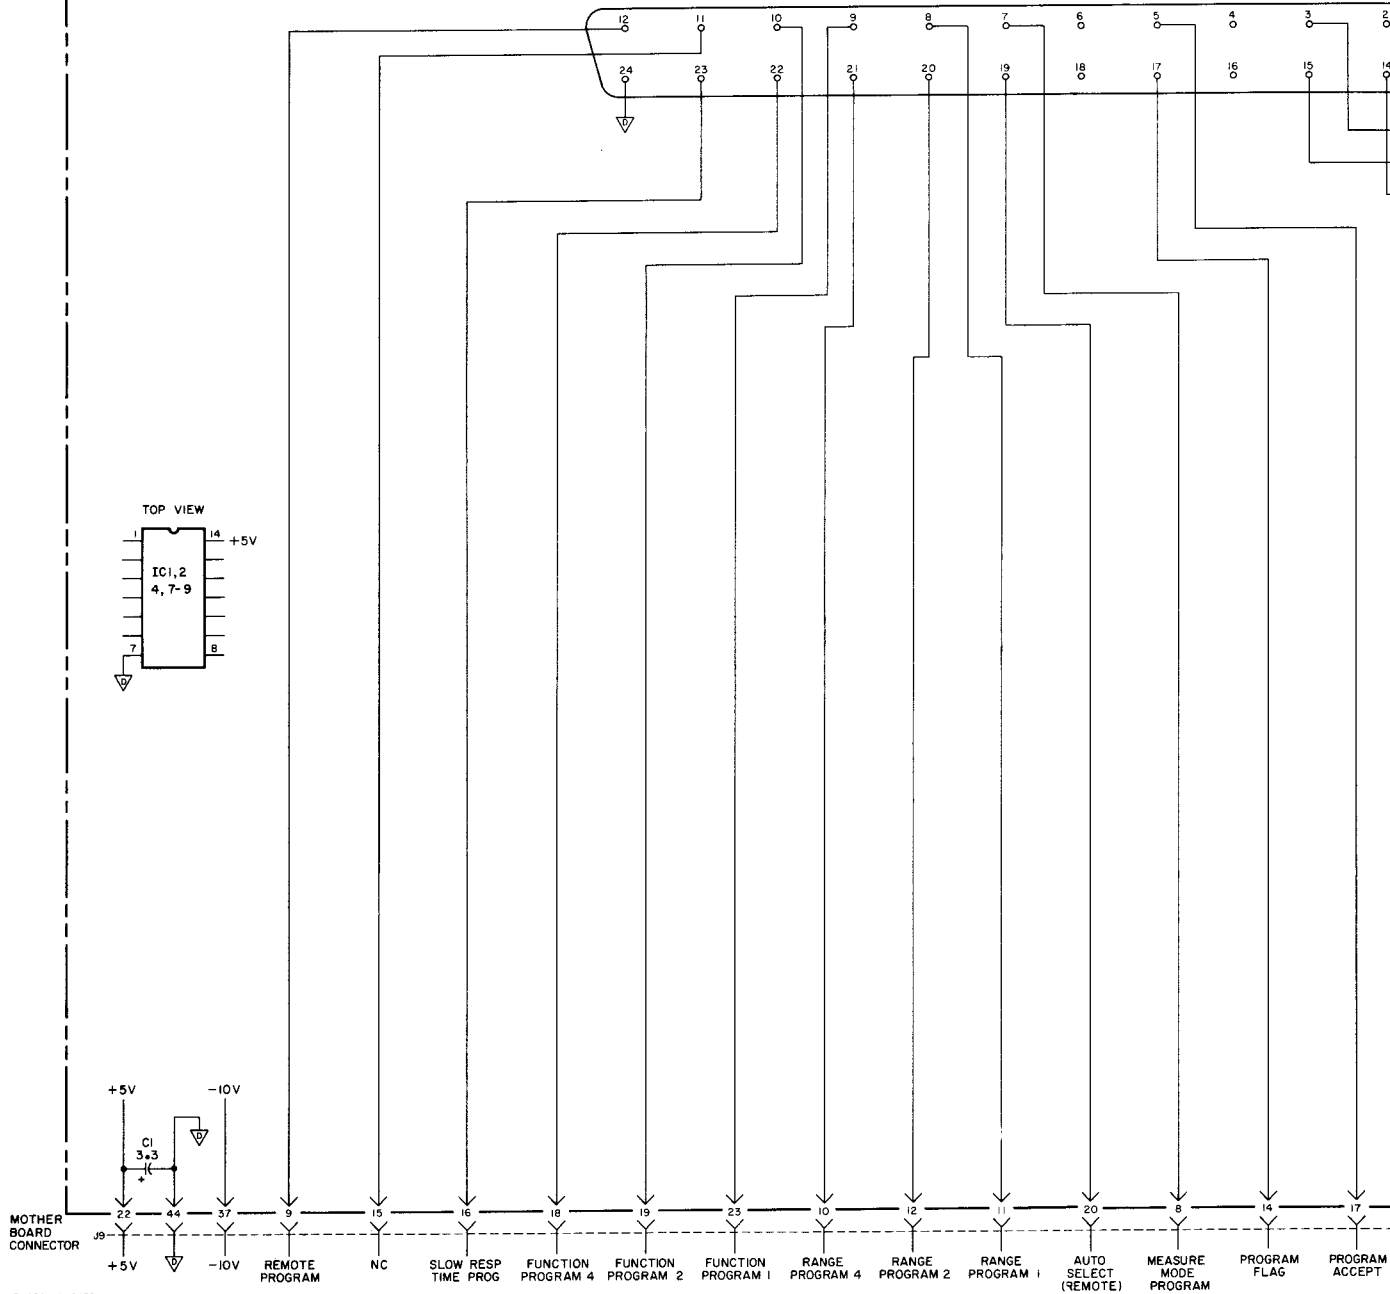

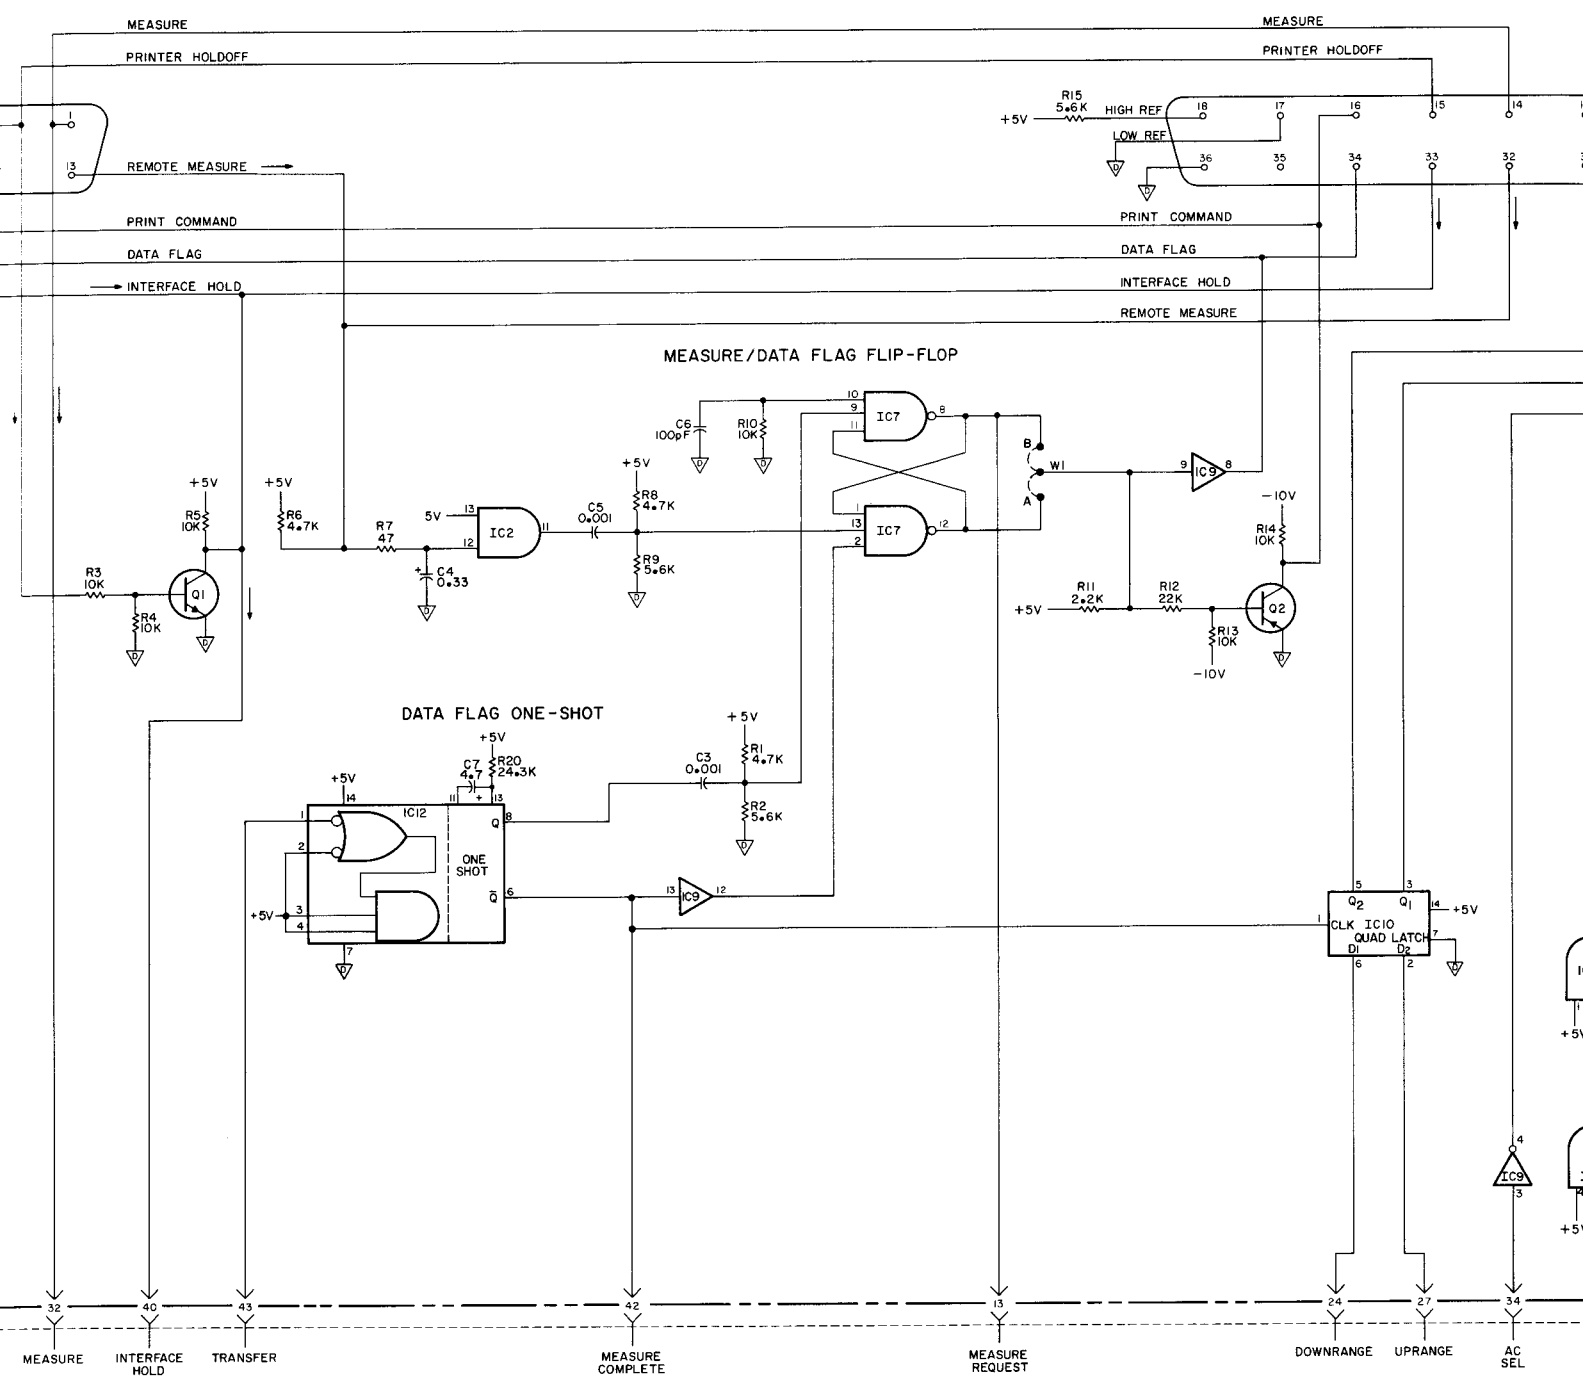

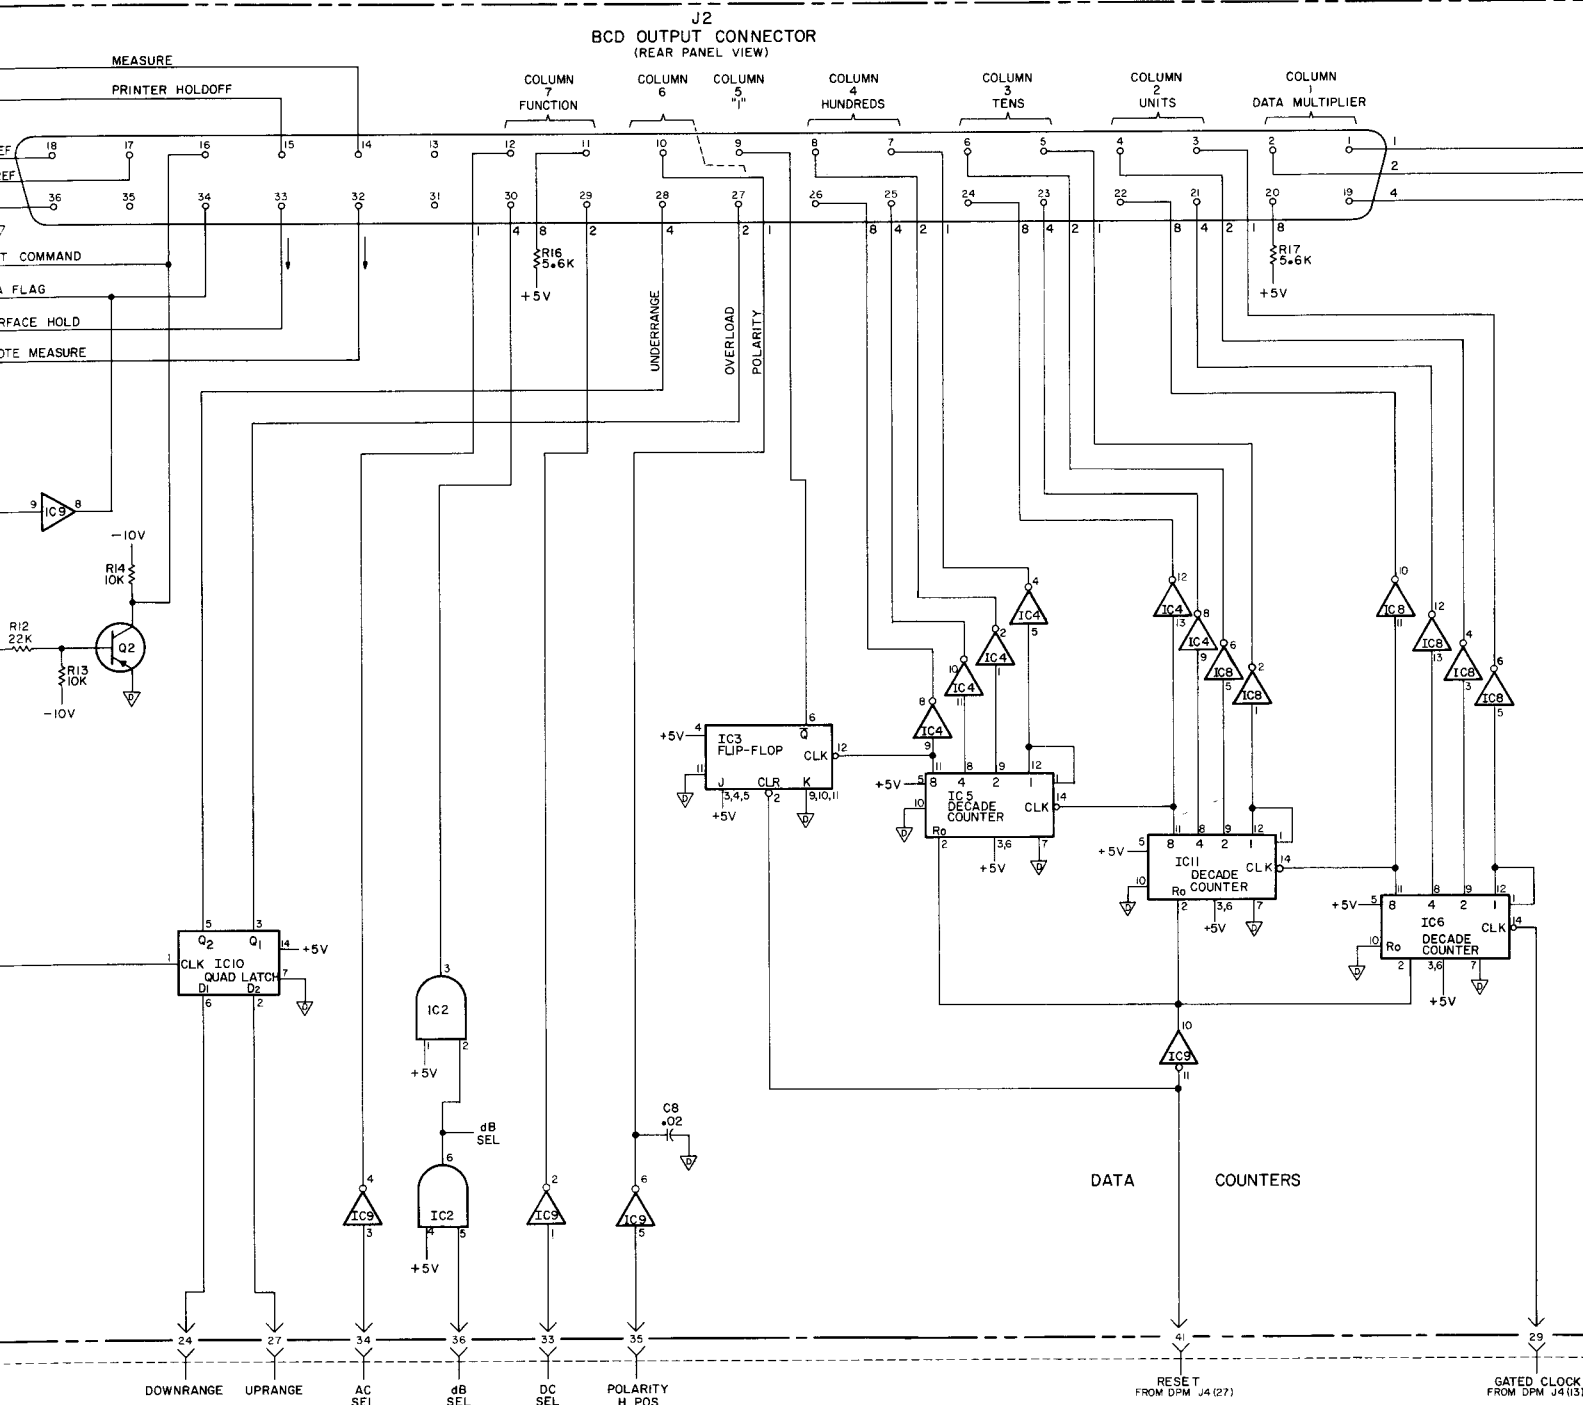


Figure 7-12.


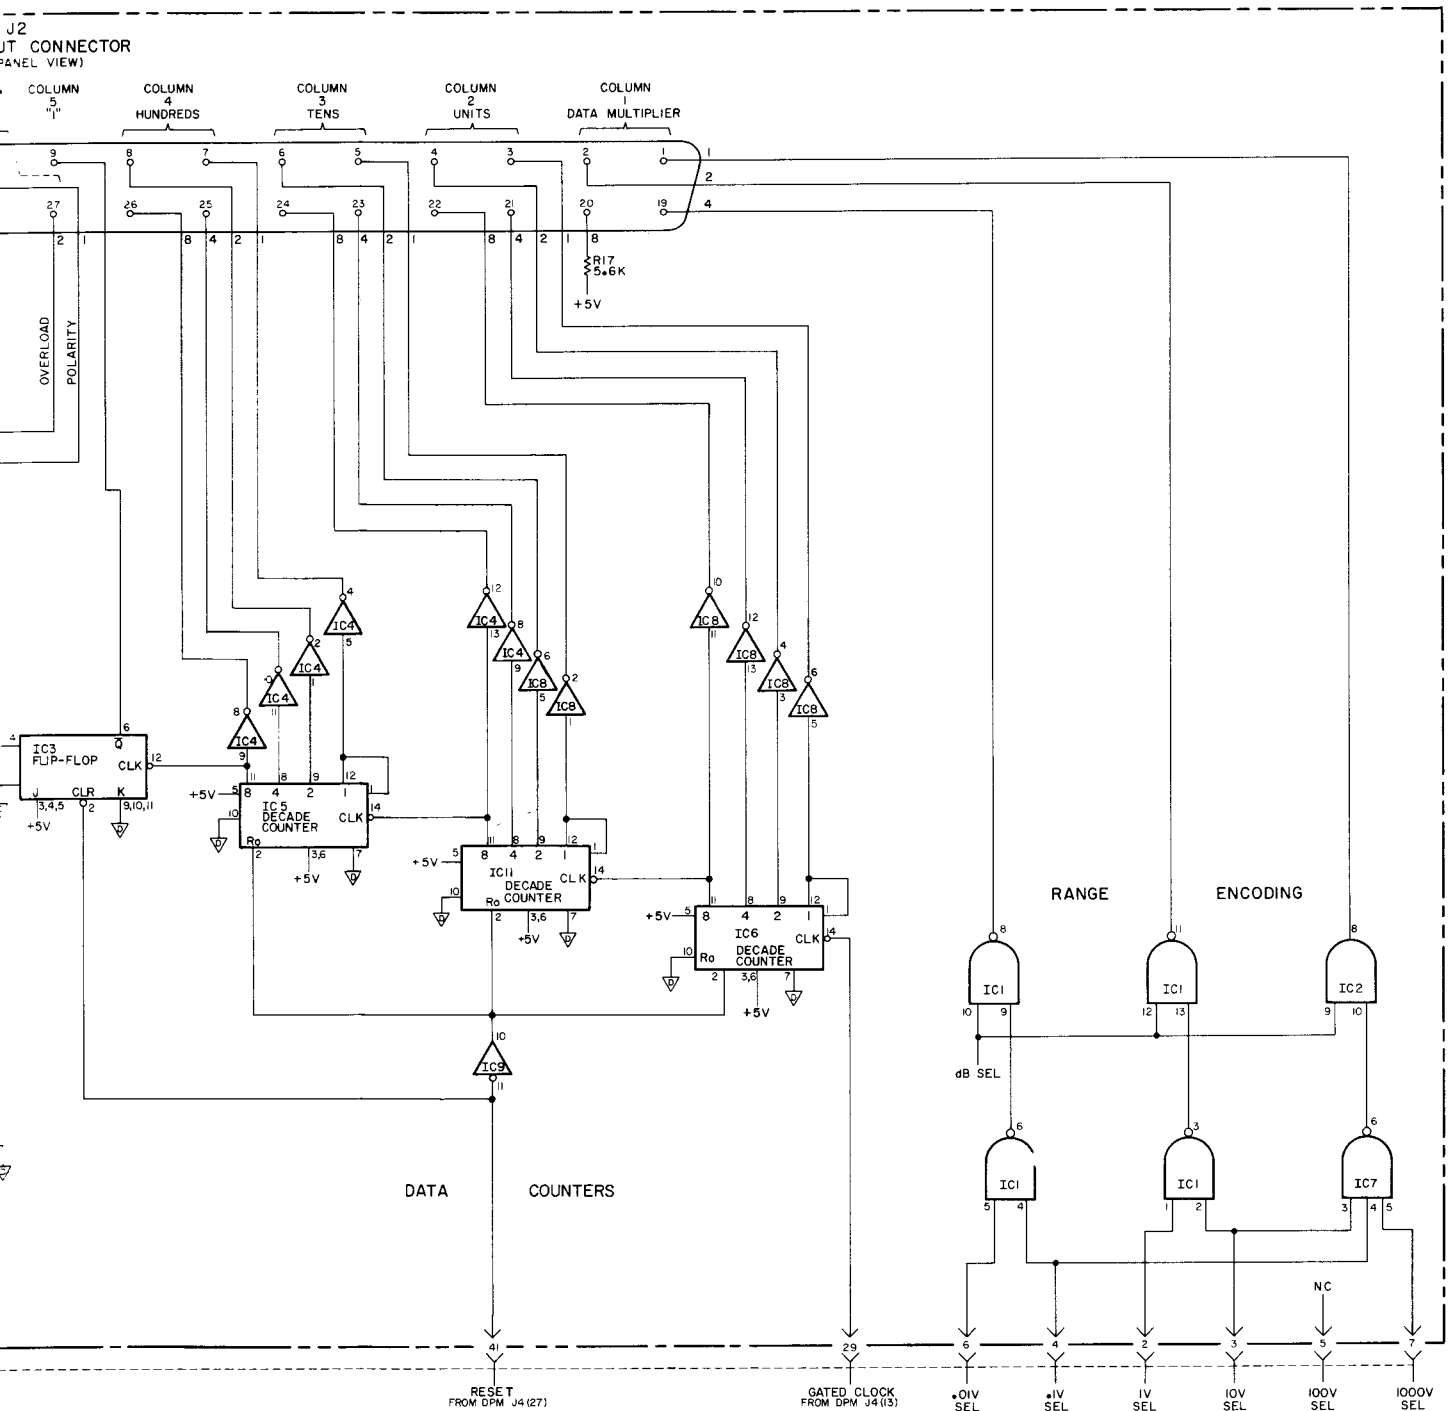


Figure 7-12. Schematic Diagram, Input/Output Assembly, A15.

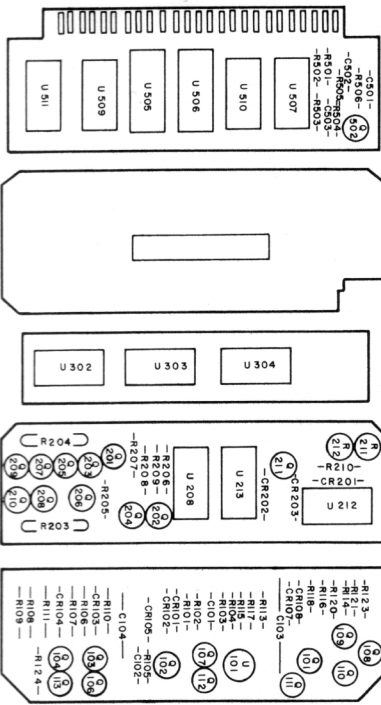

hp Part No. 5060-9131


REPAIR NOTES

Do not bend the wires (that connect the various parts of the digital panel meter) more than is necessary nor more often than is necessary. The digital panel meter was so designed that most of the test points are available at the front panel (prefixed "C" and "D") to minimize any necessity to flex the wires during troubleshooting.


The digital panel meter can be more easily accessed when mounted on a board extender (-hp- Part No. 5060-5984) for maintenance.

After repair and calibration has been completed, **gently and slowly** refold the digital panel meter until it fits into its case.


For replacement of light emitting diodes DS2 through DS10, see Paragraph 5-84, Page 5-16.

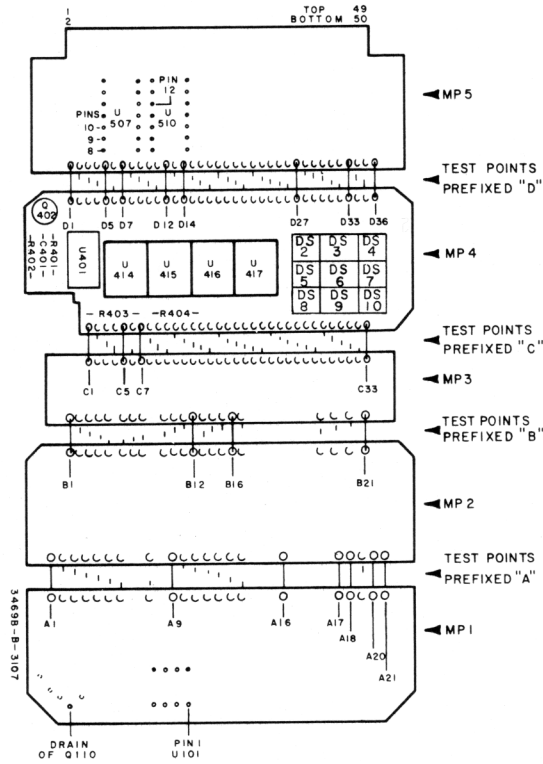

hp Part No. 5060-9131

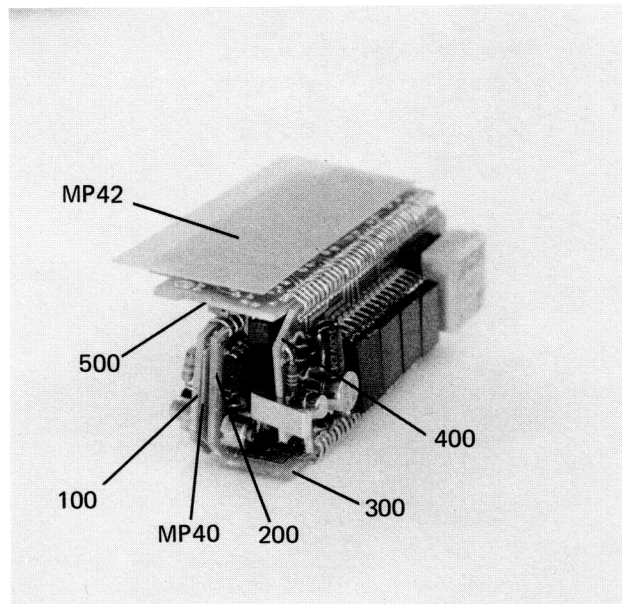

**A 20** PANEL METER (5060-9133)

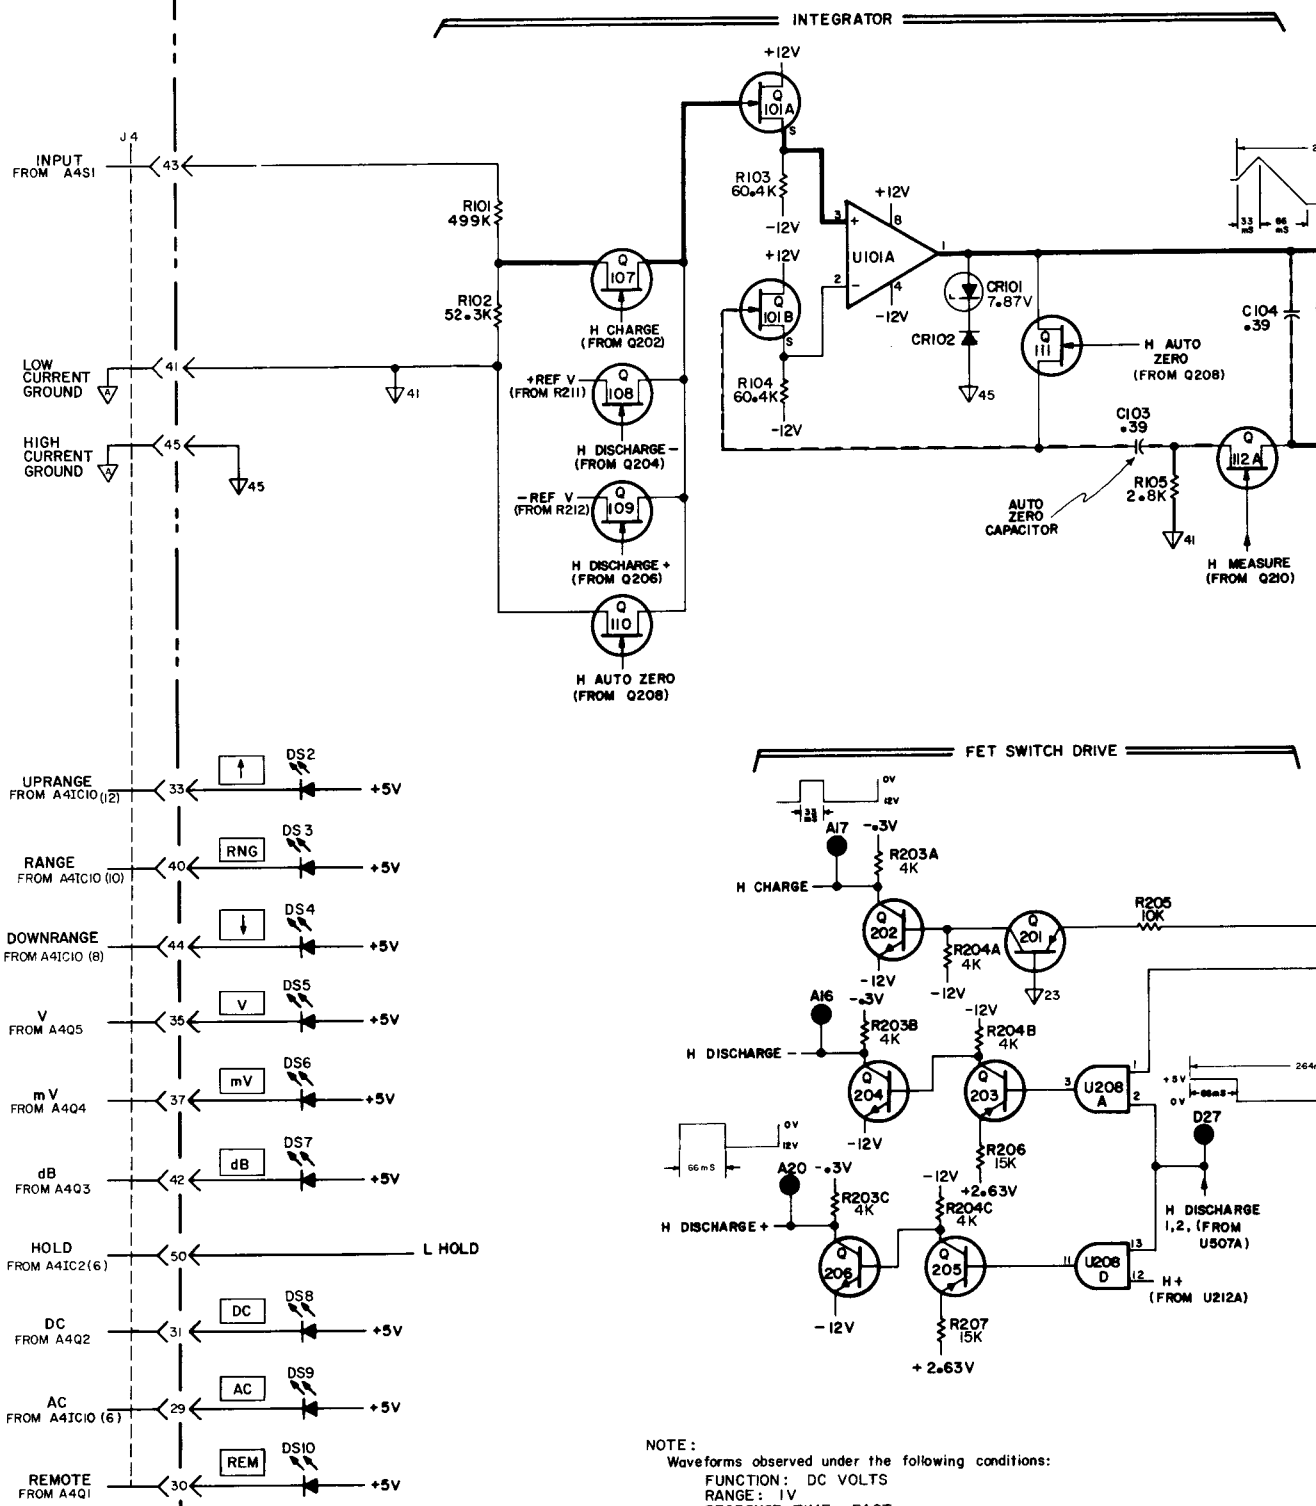

NOTE:  
 Waveforms observed under the following conditions:  
 FUNCTION: DC VOLTS  
 RANGE: 1V  
 RESPONSE TIME: FAST  
 INPUT: +1V





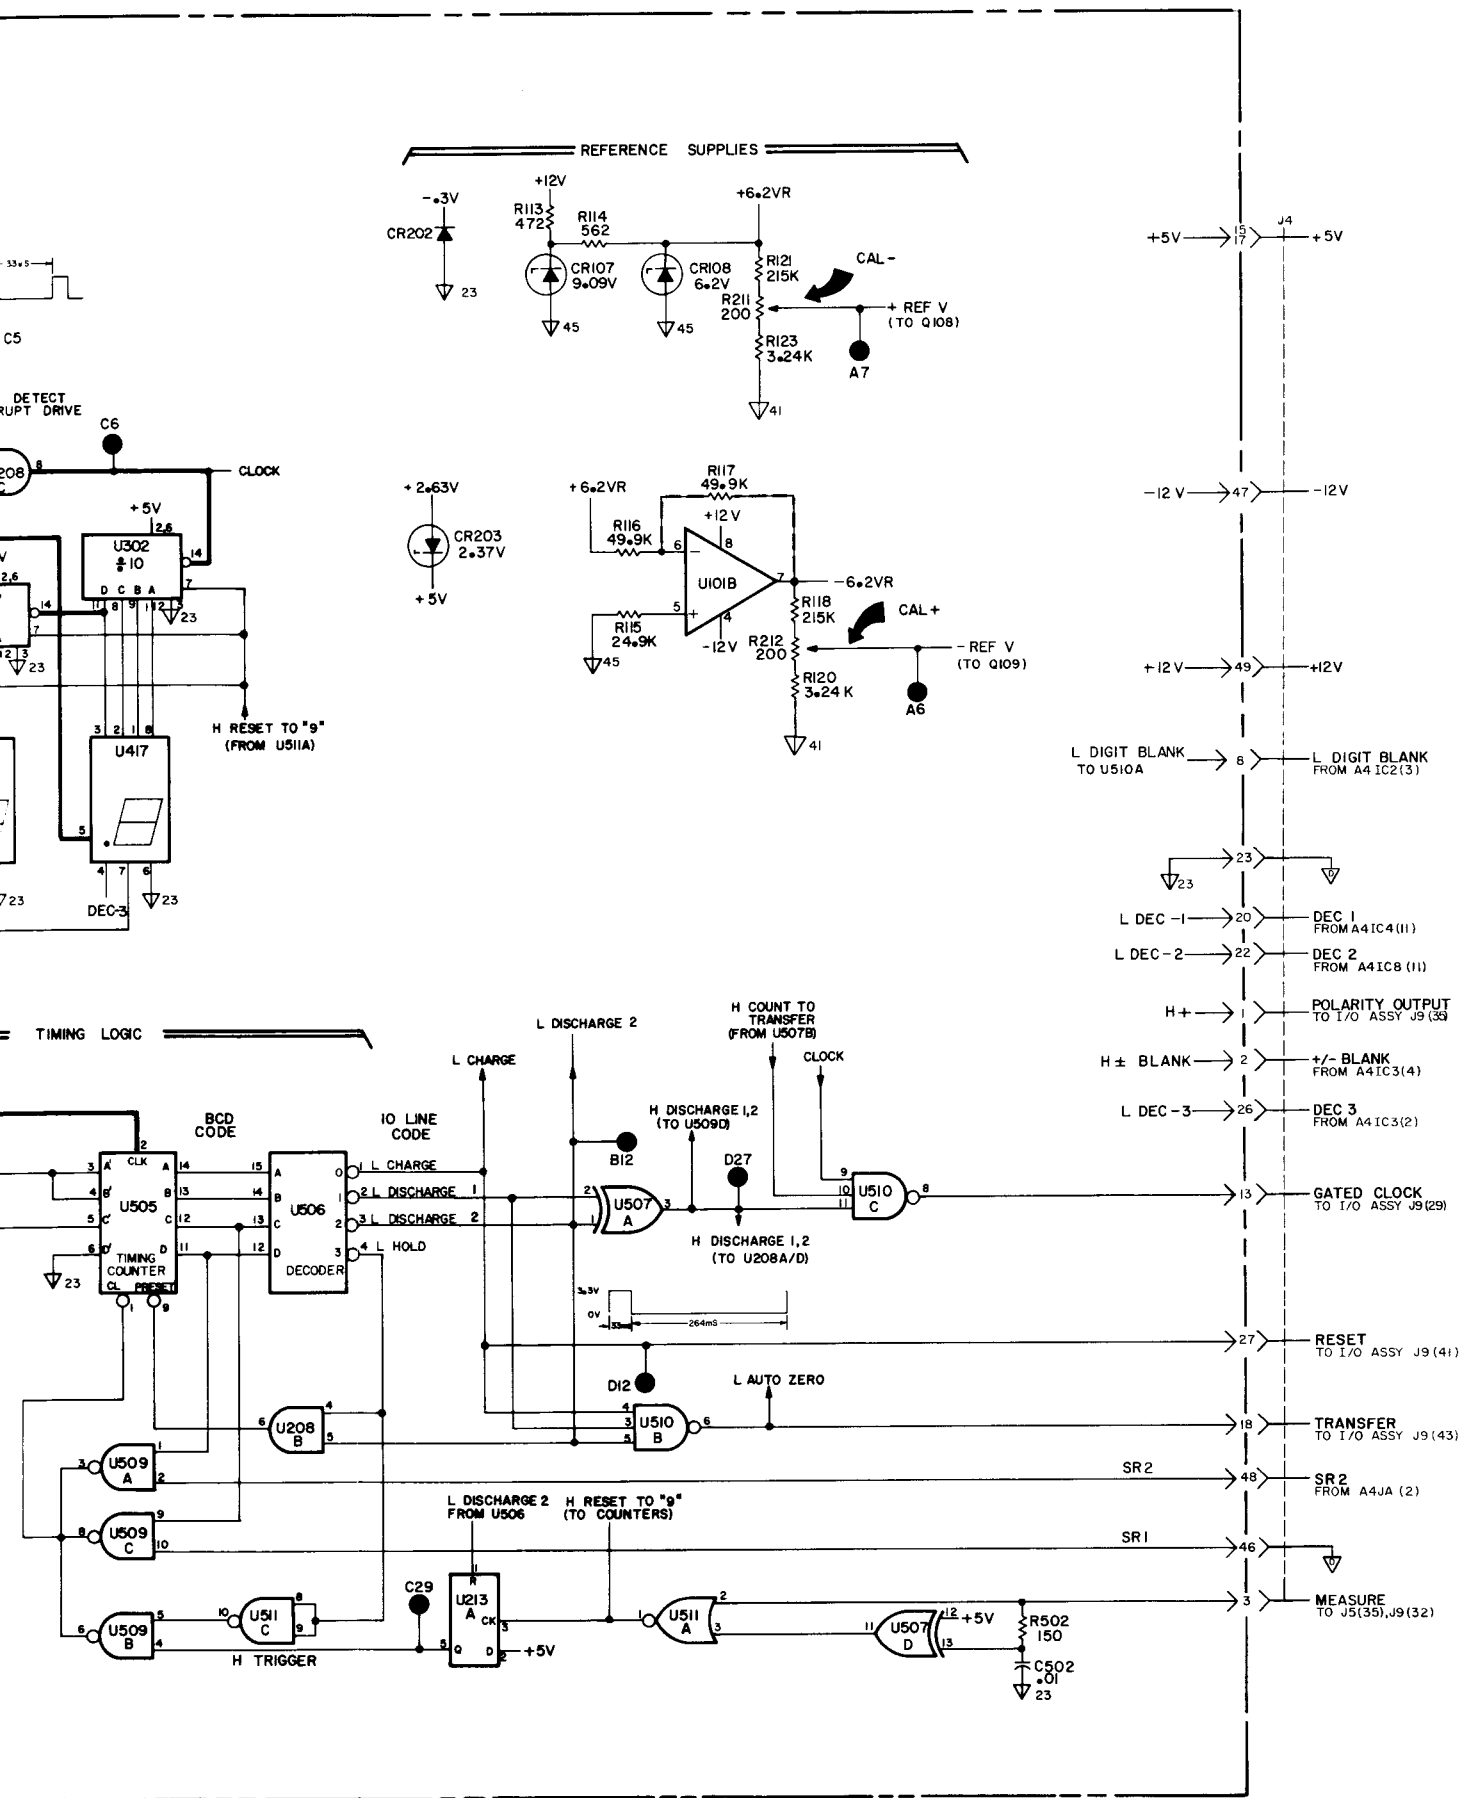


Figure 7-13. Schematic Diagram, Digital Panel Meter, (Standard), A20.

Rev. B 7-25/7-26

## CODE LIST OF MANUFACTURERS

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 Handbooks.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
00000	U. S. A Common	Any supplier of U. S.	05347	Ultronix, Inc.	San Mateo, Cal.	11236	CTS of Berne, Inc.	Berne, Ind.
00136	McCoy Electronics	Mount Holly Springs, Pa.	05397	Union Carbine Corp., Elect.		11237	Chicago Telephone of California, Inc.	So. Pasadena, Cal.
00213	Sage Electronics Corp.	Rochester, N. Y.	05574	Viking Ind. Inc.	Canoga Park, Cal.	11242	Bay State Electronics Corp.	Waltham, Mass
00287	Cemco, Inc.	Danielson, Conn.	05593	Icore Electro-Plastics Inc.	Sunnyvale, Cal.	11312	Teledyne Inc., Microwave Div.	Palo Alto, Cal.
00334	Humidial	Colton, Calif.	05616	Cosmo Plastic (c/o Electrical Spec. Co.)	Cleveland, Ohio	11314	National Seal	Downey, Cal.
00348	Mictron, Co., Inc.	Valley Stream, N. Y.	05624	Barber Colman Co.	Rockford, Ill.	11453	Precision Connector Corp.	Jamaica, N. Y.
00373	Garlock Inc.	Cherry Hill, N. J.	05728	Tiffen Optical Co.		11534	Duncan Electronics Inc.	Costa Mesa, Cal.
00656	Aerovox Corp.	New Bedford, Mass.	05729	Metro-Tel Corp.	Westbury, N. Y.	11711	General Instrument Corp., Semiconductor Division Products Group	Newark, N. J.
00779	Amp. Inc.	Harrisburg, Pa.	05783	Stewart Engineering Co.	Santa Cruz, Cal.	11717	Imperial Electronic, Inc.	Buena Park, Cal.
00781	Aircraft Radio Corp.	Boonton, N. J.	05820	Wakefield Engineering Inc.	Wakefield, Mass.	11870	Melabs, Inc.	Camden, N. J.
00809	Crown, Ltd.	Whitby, Ontario, Canada	06004	Bassick Co., Div. of Stewart Warner Corp.	Bridgeport, Conn.	12136	Philadelphia Handle Co.	Shady Grove, Pa.
00815	Northern Engineering Laboratories, Inc.	Burlington, Wis.	06090	Raychem Corp.	Redwood City, Cal.	12361	Grove Mfg. Co., Inc.	Albuquerque, N. M.
00853	Sangamo Electric Co., Pickens Div.	Pickens, S. C.	06175	Bausch and Lomb Optical Co.	Rochester, N. Y.	12574	Gulton Ind. Inc., Data System Div.	Dover, N. H.
00866	Goe Engineering Co.	City of Industry, Cal.	06402	E. T. A. Products Co. of America	Chicago, Ill.	12697	Clarostat Mfg. Co.	W. Haven, Conn.
00891	Carl E. Holmes Corp.	Los Angeles, Cal.	06540	Amatong Electronic Hardware Co., Inc.	New Rochelle, N. Y.	12728	Elmar Filter Corp.	Tokyo, Japan
00929	Microlab Inc.	Livingston, N. J.	06555	Beede Electrical Instrument Co., Inc.	Penacook, N. H.	12859	Nippon Electric Co., Ltd.	Clark, N. J.
01002	General Electric Co., Capacitor Dept.	Hudson Falls, N. Y.	06666	General Devices Co., Inc.	Indianapolis, Ind.	12881	Metex Electronics Corp.	Newport Beach, Cal.
01009	Alden Products Co.	Brockton, Mass.	06751	Components Inc., Ariz. Div.	Phoenix, Arizona	12930	Delta Semiconductor Inc.	Scottsdale, Arizona
01121	Allen Bradley Co.	Milwaukee, Wis.	06812	Torrington Mfg. Co., West Div.	Van Nuys, Cal.	12954	Dickson Electronics Corp.	Witchita, Kansas
01255	Litton Industries, Inc.	Beverly Hills, Cal.	06890	Varian Assoc. Etmac Div.	San Carlos, Cal.	13019	Airco Supply Co., Inc.	Detroit, Mich.
01281	TRW Semiconductors, Inc.	Lawndale, Cal.	07088	Kelvin Electric Co.	Van Nuys, Cal.	13061	Wilco Products	Dallas, Texas
01295	Texas Instruments, Inc., Transistor Products Div.	Dallas, Texas	07126	Digitran Co.	Pasadena, Cal.	13327	Solitron Devices Inc.	Tappan, N. Y.
01349	The Alliance Mfg. Co.	Alliance, Ohio	07137	Transistor Electronics Corp.	Minneapolis, Minn.	13396	Telefunken (GmbH)	Hanover, Germany
01538	Small Parts Inc.	Los Angeles, Cal.	07138	Westinghouse Electric Corp., Electronic Tube Div.	Elmira, N. Y.	13835	Midland-Wright Div. of Pacific Industries, Inc.	Kansas City, Kansas
01589	Pacific Relays, Inc.	Van Nuys, Cal.	07149	Filmohm Corp.	New York, N. Y.	14099	Sem-Tech	Newbury Park, Cal.
01670	Gudebrod Bros. Silk Co.	New York, N. Y.	07233	Cinch-Graphik Co.	City of Industry, Cal.	14193	Calif. Resistor Corp.	Santa Monica, Cal.
01930	Amerock Corp.	Rockford, Ill.	07256	Silicon Transistor Corp.	Carle Place, N. Y.	14298	American Components, Inc.	Conshohocken, Pa.
01960	Pulse Engineering Co.	Santa Clara, Cal.	07261	Avnet Corp.	Culver City, Cal.	14433	ITT Semiconductor, a Div. of Int. Telephone and Telegraph Corporation	West Palm Beach, Fla.
02114	Ferroxcube Corp. of America	Saugerties, N. Y.	07263	Fairchild Camera & Inst. Corp., Semiconductor Div.	Mountain View, Cal.	14493	Hewlett-Packard Company	Loveland, Colo.
02116	Wheelock Signals, Inc.	Long Branch, N. J.	07322	Minnesota Rubber Co.	Minneapolis, Minn.	14655	Cornell Dublier Electric Corp.	Newark, N. J.
02286	Cole Rubber and Plastics Inc.	Sunnyvale, Cal.	07387	Birtcher Corp., The	Monterey Park, Cal.	14674	Corning Glass Works	Corning, N. Y.
02660	Amphenol-Borg Electronics Corp.	Broadview, Ill.	07397	Sylvania Elect. Prod. Inc., Mt. View Operations	Mountain View, Cal.	14752	Electro Cube Inc.	San Gabriel, Cal.
02735	Radio Corp. of America, Semiconductor and Materials Division	Somerville, N. J.	07700	Technical Wire Products Inc.	Cranford, N. J.	14960	Williams Mfg. Co.	San Jose, Cal.
02771	Vocaline Co. of America, Inc.	Old Saybrook, Conn.	07829	Bodine Elect. Co.	Chicago, Ill.	15106	The Sphere Co., Inc.	Little Falls, N. J.
02777	Hopkins Engineering Co.	San Fernando, Cal.	07910	Continental Device Corp.	Hawthorne, Cal.	15203	Webster Electronics Co.	New York, N. Y.
02875	Hudson Tool & Die	Newark, N. J.	07933	Raytheon Mfg. Co., Semiconductor Div.	Mountain View, Cal.	15287	Scionics Corp.	Northridge, Cal.
03296	Nylon Molding Corp.	Springfield, N. J.	07980	Hewlett-Packard Co., New Jersey Division	Rockaway, N. J.	15291	Adjustable Bushing Co.	N. Hollywood, Cal.
03508	G. E. Semiconductor Prod. Dept.	Syracuse, N. Y.	08145	U. S. Engineering Co.	Los Angeles, Cal.	15558	Micron Electronics	Garden City, Long Island, N. Y.
03705	Apex Machine & Tool Co.	Dayton, Ohio	08289	Blinn, Delbert Co.	Pomona, Cal.	15566	Amprobe Inst. Corp.	Lynbrook, N. Y.
03797	Eldema Corp.	Compton, Calif.	08358	Burgess Battery Co.	Niagara Falls, Ontario, Canada	15631	Cabletronics	Costa Mesa, Cal.
03818	Parker Seal Co.	Los Angeles, Cal.	08524	Deutsch Fastener Corp.	Los Angeles, Cal.	15772	Twentieth Century Coil Spring Co.	Santa Clara, Cal.
03877	Transitron Electric Corp.	Wakefield, Mass.	08664	Bristol Co., The	Waterbury, Conn.	15801	Fenwal Elect. Inc.	Framingham, Mass.
03888	Pyrofilm Resistor Co., Inc.	Cedar Knolls, N. J.	08717	Sloan Company	Sun Valley, Cal.	15818	Amelco Inc.	Mountain View, Cal.
03954	Singer Co., Diehl Div., FINDERNE PLANT	Sumerville, N. J.	08718	ITT Cannon Electric Inc., Phoenix Div.	Phoenix, Arizona	16037	Spruce Pine Mica Co.	Spruce Pine, N. C.
04009	Arrow, Hart and Hegeman Elect. Co.	Hartford, Conn.	08727	National Radio Lab. Inc.	Paramus, N. J.	16179	Omni-Spectra Inc.	Detroit, Ill.
04013	Taruus Corp.	Lambertville, N. J.	08792	CBS Electronics Semiconductor Operations, Div. of CBS Inc.	Lowell, Mass.	16352	Computer Diode Corp.	Lodi, N. J.
04062	Arco Electronic Inc.	Great Neck, N. Y.	08806	General Electric Co., Miniature Lamp Dept.	Cleveland, Ohio	16554	Electroid Co.	Union, N. J.
04217	Essex Wire	Los Angeles, Cal.	08984	Mel-Rain	Indianapolis, Ind.	16554	Boots Aircraft Nut Corp.	Pasadena, Cal.
04222	Hi-Q Division of Aerovox	Myrtle Beach, S. C.	09026	Babcock Relays Div.	Costa Mesa, Cal.	16688	Ideal Prec. Meter Co., Inc., De Jur Meter Div.	Brooklyn, N. Y.
04354	Precision Paper Tube Co.	Wheeling, Ill.	09097	Electronic Enclosures Inc.	Los Angeles, Calif.	16758	Delco Radio Div. of G. M. Corp.	Kokomo, Ind.
04404	Palo Alto Division of Hewlett-Packard Co.	Palo Alto, Cal.	09145	Texas Capacitor Co.	Houston, Texas	17109	Thermonetics Inc.	Canoga Park, Cal.
04651	Sylvania Electric Products, Microwave Device Div.	Mountain View, Cal.	09250	Electro Assemblies, Inc.	Chicago, Ill.	17474	Tranex Company	Mountain View, Cal.
04673	Dakota Engr. Inc.	Culver City, Cal.	09353	C & K Components Inc.	Newton, Mass.	17675	Hamlin Metal Products Corp.	Akron, Ohio
04713	Motorola Inc. Semiconductor Prod. Div.	Phoenix, Arizona	09569	Mallory Battery Co. of Canada, Ltd.	Toronto, Ontario, Canada	17745	Angstrom Prec. Inc.	No. Hollywood, Cal.
04732	Filttron Co., Inc. Western Div.	Culver City, Cal.	09795	Pennsylvania Florocarbon	Clifton Heights, Penn.	17856	Siliconix Inc.	Sunnyvale, Cal.
04773	Automatic Electric Co.	Northlake, Ill.	09922	Burndy Corp.	Norwalk, Conn.	17870	McGraw-Edison Co.	Manchester, N. H.
04796	Sequoia Wire Co.	Redwood City, Cal.	10214	General Transistor Western Corp.	Los Angeles, Cal.	18042	Power Design Pacific Inc.	Palo Alto, Cal.
04811	Precision Coil Spring Co.	El Monte, Cal.	10411	Ti-Tal, Inc.	Berkeley, Cal.	18083	Clevite Corp. Semiconductor Div.	Palo Alto, Cal.
04870	P. M. Motor Company	Westchester, Ill.	10646	Carborundum Co.	Niagara Falls, N. Y.	18324	Signetics Corp.	Sunnyvale, Cal.
04919	Component Mfg. Service Co.	W. Bridgewater, Mass.				18476	Ty-Car Mfg. Co., Inc.	Holliston, Mass.
05006	Twentieth Century Plastics, Inc.	Los Angeles, Cal.				18486	TRW Elect. Comp. Div.	Des Plaines, Ill.
05277	Westinghouse Electric Corp. Semiconductor Dept.	Youngwood, Pa.				18565	Chomerics	Plainville, Mass.
						18583	Curtis Instrument, Inc.	Mt. Kisco, N. Y.
						18612	Vishay Instruments Inc.	Malvern, Pa.
						18873	E. I. DuPont and Co., Inc.	Wilmingon, Del.
						18911	Durant Mfg. Co.	Milwaukee, Wis.
						19315	The Bendix Corp., Navigation & Control Div.	Teterboro, N. J.
						19500	Thomas A. Edison Industries, Div. of McGraw-Edison	West Orange, N. J.
						19589	Concoa	Baldwin Park, Cal.

## CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
19644	LRC Electronics	Horseheads, N. Y.	71482	C. P. Clare & Co.	Chicago, Ill.	78452	Thompson-Bremer & Co.	Chicago, Ill.
19701	Electra Mfg. Co.	Independence, Kansas	71590	Centralab Div. of		78471	Tilley Mfg. Co.	San Francisco, Cal.
20183	General Atomics Corp.	Philadelphia, Pa.		Globe Union Inc.	Milwaukee, Wis.	78488	Stackpole Carbon Co.	St. Marys, Pa.
21226	Executone, Inc.	Long Island City, N. Y.	71616	Commercial Plastics Co.	Chicago, Ill.	78493	Standard Thomson Corp.	Waltham, Mass.
21355	Fafnir Bearing Co., The	New Britain, Conn.	71700	Cornish Wire Co., The	New York, N. Y.	78553	Tinnerman Products, Inc.	Cleveland, Ohio
21520	Fansteel Metallurgical Corp.	N. Chicago, Ill.	71707	Coto Coil Co., Inc.	Providence, R. I.	78790	Transformer Engineers	San Gabriel, Cal.
23020	General Reed Co.	Metuchen, N. J.	71744	Chicago Miniature Lamp Works	Chicago, Ill.	78947	Ucinite Co.	Newtonville, Mass.
23042	Texscan Corp.	Indianapolis, Ind.	71785	Cinch Mfg. Co.		79136	Waldes Kohinoor Inc.	Long Island City, N. Y.
23783	British Radio Electronics Ltd.	Washington, D.C.		Howard B. Jones Div.	Chicago, Ill.	79142	Veeder Root, Inc.	Hartford, Conn.
24455	G. E. Lamp Division, Nela Park	Cleveland, Ohio	71984	Dow Corning Corp.	Midland, Mich.	79251	Wenco Mfg. Co.	Chicago, Ill.
24655	General Radio Co.	West Concord, Mass.	72136	Electro Motive Mfg. Co., Inc.		79727	Continental-Wirt Electronics Corp.	Philadelphia, Pa.
24681	Memcor Inc., Comp. Div.	Huntington, Ind.			Willimantic, Conn.			
26365	Gries Reproducer Corp.	New Rochelle, N. Y.	72619	Dialight Corp.	Brooklyn, N. Y.	79963	Zierick Mfg. Corp.	New Rochelle, N. Y.
26462	Grobert File Co. of America, Inc.	Carlstadt, N. J.	72656	Indiana General Corp.,		80031	Mepec Division of Sessions Clock Co.	
26851	Compac/Hollister Co.	Hollister, Cal.		Electronics Div.	Keasby, N. J.			
26992	Hamilton Watch Co.	Lancaster, Pa.	72699	General Instrument Corp.,		80033	Prestole Corp.	Toledo, Ohio
28480	Hewlett-Packard Co.	Palo Alto, Cal.		Cap Division	Newark, N. J.	80120	Schnitzer Alloy Products Co.	Elizabeth, N. J.
28520	Heyman Mfg. Co.	Kenilworth, N. J.	72765	Drake Mfg. Co.	Harwood Heights, Ill.	80131	Electronic Industries Association.	
30817	Instrument Specialties Co.,		72825	Hugh H. Eby Inc.	Philadelphia, Pa.		Standard tube or semi-conductor device,	
	Inc.	Little Falls, N. J.	72928	Gudeman Co.	Chicago, Ill.		any manufacturer.	
33173	G. E. Receiving Tube Dept.	Owensboro, Ky.	72962	Elastic Stop Nut Corp.	Union, N. J.	80207	Unimax Switch, Div. Maxon Electronics	
35434	Lectrohm Inc.	Chicago, Ill.	72964	Robert M. Hadley Co.	Los Angeles, Cal.		Corp.	Wallingford, Conn.
36196	Stanwyck Coil Products,		72982	Erie Technological Products, Inc.	Erie, Pa.	80223	United Transformer Corp.	New York, N. Y.
	Ltd.	Hawkesbury, Ontario, Canada	73061	Hansen Mfg. Co., Inc.	Princeton, Ind.	80248	Oxford Electric Corp.	Chicago, Ill.
36287	Cunningham, W. H. & Hill,		73076	H. M. Harper Co.	Chicago, Ill.	80294	Bourns Inc.	Riverside, Cal.
	Ltd.	Toronto, Ontario, Canada	73138	Helipot Div. of Beckman Inst., Inc.		80411	Arco Div. of Robertshaw Controls Co.	
37942	P. R. Mallory & Co., Inc.	Indianapolis, Ind.			Fullerton, Cal.			
39543	Mechanical Industries Prod. Co.	Akron, Ohio	73293	Hughes Products Division of		80486	All Star Products Inc.	Columbus, Ohio
40920	Miniature Precision Bearings, Inc.	Keene, N. H.		Hughes Aircraft Co.	Newport Beach, Cal.	80509	Avery Label Co.	Monrovia, Cal.
40931	Honeywell Inc.	Minneapolis, Minn.	73445	Amperex Elect. Co.	Hicksville, L. I., N. Y.	80583	Hammarlund Co., Inc.	Mars Hill, N. C.
42190	Muter Co.	Chicago, Ill.	73506	Bradley Semiconductor Corp.		80640	Stevens, Arnold, Co., Inc.	Boston, Mass.
43990	C. A. Norgren Co.	Englewood, Colo.			New Haven, Conn.	80813	Dimco Gray Co.	Dayton, Ohio
44655	Ohmite Mfg. Co.	Skokie, Ill.	73559	Carling Electric, Inc.	Hartford, Conn.	81030	International Inst. Inc.	Orange, Conn.
46384	Penn Eng. & Mfg. Corp.	Doylestown, Pa.	73586	Circle F Mfg. Co.	Trenton, N. J.	81073	Grayhill Co.	El Grange, Ill.
47904	Polaroid Corp.	Cambridge, Mass.	73682	George K. Garrett Co.,		81095	Triad Transformer Corp.	Venice, Cal.
48620	Precision Thermometer &			Div. MSL Industries, Inc.	Philadelphia, Pa.	81312	Winchester Elec. Div. Litton Ind., Inc.	
	Inst. Co.	Southampton, Pa.	73734	Federal Screw Products, Inc.	Chicago, Ill.			Oakville, Conn.
49956	Microwave & Power Tube Div.	Waltham, Mass.	73743	Fischer Special Mfg. Co.	Cincinnati, Ohio	81349	Military Specification	
52090	Rowan Controller Co.	Westminster, Md.	73793	General Industries Co., The	Elyria, Ohio	81483	International Rectifier Corp.	El Segundo, Cal.
52983	HP Co., Med. Elec. Div.	Waltham, Mass.	73846	Goshen Stamping & Tool Co.	Goshen, Ind.	81541	Airpax Electronics, Inc.	Cambridge, Maryland
54294	Shallcross Mfg. Co.	Selma, N. C.	73899	JFD Electronics Corp.	Brooklyn, N. Y.	81860	Barry Controls, Div. Barry Wright Corp.	
55026	Simpson Electric Co.	Chicago, Ill.	73905	Jennings Radio Mfg. Corp.	San Jose, Cal.			Watertown, Mass.
55933	Sonotone Corp.	Elmsford, N. Y.	73957	Groove-Pin Corp.	Ridgefield, N. J.	82042	Carter Precision Electric Co.	Skokie, Ill.
55938	Raytheon Co. Commercial Apparatus		74455	Signalite Inc.	Neptune, N. J.	82047	Sperti Faraday Inc. Copper Hewitt	
	& System Div.	So. Norwalk, Conn.	74455	J. H. Winns, and Sons	Winchester, Mass.		Electric Div.	Hoboken, N. J.
56137	Spaulding Fibre Co., Inc.	Tonawanda, N. Y.	74861	Industrial Condenser Corp.	Chicago, Ill.	82116	Electric Regulator Corp.	Norwalk, Conn.
56289	Sprague Electric Co.	North Adams, Mass.	74868	R. F. Products Division of		82142	Jeffers Electronics Division of	
58474	Superior Elect. Co.	Bristol, Conn.		Amphenol-Borg Electronic Corp.			Speer Carbon Co.	Du Bois, Pa.
59446	Telex Corp.	Tulsa, Okla.	74970	E. F. Johnson Co.	Waseca, Minn.	82170	Fairchild Camera & Inst. Corp.,	
59730	Thomas & Betts Co.	Elizabeth, N. J.	75042	International Resistance Co.	Philadelphia, Pa.		Space & Defense Systems Div.	Paramus, N. J.
60741	Triplett Electrical Inst. Co.	Bluffton, Ohio	75263	Keystone Carbon Co., Inc.	St. Marys, Pa.	82209	Magurie Industries, Inc.	Greenwich, Conn.
61775	Union Switch and Signal Div. of		75378	CTS Knights, Inc.	Sandwich, Ill.	82219	Sylvania Electric Prod., Inc.	
	Westinghouse Air Brake Co.	Pittsburgh, Pa.	75382	Kulka Electric Corp.	Mt. Vernon, N. Y.		Electronic Tube Division	Emporium, Pa.
62119	Universal Electric Co.	Owosso, Mich.	75818	Lenz Electric Mfg. Co.	Chicago, Ill.	82376	Astron Corp.	East Newark, Harrison, N. J.
63743	Ward-Leonard Electric Co.	Mt. Vernon, N. Y.	75915	Littlefuse, Inc.	Des Plaines, Ill.	82389	Switchcraft, Inc.	Chicago, Ill.
64959	Western Electric Co., Inc.	New York, N. Y.	76005	Lord Mfg. Co.	Erie, Pa.	82647	Metals & Controls Inc.	
65092	Weston Inst. Inc. Weston-Newark	Newark, N. J.	76210	C. W. Marwedel	San Francisco, Cal.		Spencer Products	Attleboro, Mass.
66295	Wittek Mfg. Co.	Chicago, Ill.	76433	General Instrument Corp.,		82768	Phillips-Advance Control Co.	Joliet, Ill.
66346	Minnesota Mining & Mfg. Co.			Micomold Division	Newark, N. J.	82866	Research Products Corp.	Madison, Wis.
	Revere Mincom Div.	St. Paul, Minn.	76487	James Millen Mfg. Co., Inc.	Malden, Mass.	82877	Rolton Mfg. Co., Inc.	Woodstock, N. Y.
70276	Allen Mfg. Co.	Hartford, Conn.	76493	J. W. Miller Co.	Los Angeles, Cal.	82893	Vector Electronic Co.	Glendale, Cal.
70309	Allied Control	New York, N. Y.	76530	Cinch-Monadnock, Div. of United Carr		83058	Carr Fastener Co.	Cambridge, Mass.
70318	Allmetal Screw Product Co., Inc.			Fastener Corp.	San Leandro, Cal.	83086	New Hampshire Ball	
		Garden City, N. Y.	76545	Mueller Electric Co.	Cleveland, Ohio		Bearing, Inc.	Peterborough, N. H.
70417	Amplex, Div. of Chrysler Corp.	Detroit, Mich.	76703	National Union	Newark, N. J.	83125	General Instrument Corp.,	
70485	Atlantic India Rubber Works, Inc.	Chicago, Ill.	76854	Oak Manufacturing Co.	Crystal Lake, Ill.		Capacitor Div.	Darlington, S. C.
70563	Amperite Co., Inc.	Union City, N. J.	77068	The Bendix Corp.,		83148	ITT Wire and Cable Div.	Los Angeles, Cal.
70674	ADC Products Inc.	Minneapolis, Minn.		Electrodynamics Div.	N. Hollywood, Cal.	83186	Victory Eng. Corp.	Springfield, N. J.
70903	Belden Mfg. Co.	Chicago, Ill.	77075	Pacific Metals Co.	San Francisco, Cal.	83298	Bendix Corp., Red Bank Div.	Red Bank, N. J.
70998	Bird Electric Corp.	Cleveland, Ohio	77221	Phaostran Instrument and		83315	Hubbell Corp.	Mundelein, Ill.
71002	Birnback Radio Co.	New York, N. Y.		Electronic Co.	So. Pasadena, Cal.	83324	Rosan Inc.	Newport Beach, Cal.
71034	Bliley Electric Co., Inc.	Erie, Pa.	77252	Philadelphia Steel and		83330	Smith, Herman H., Inc.	Brooklyn, N. Y.
71041	Boston Gear Works Div. of			Wire Corp.	Philadelphia, Pa.	83332	Tech Labs	Palisades Park, N. J.
	Murray Co. of Texas	Quincey, Mass.	77342	American Machine & Foundry Co.		83385	Central Screw Co.	Chicago, Ill.
71218	Bud Radio, Inc.	Willoughby, Ohio		Potter & Brumfield Div.	Princeton, Ind.	83501	Gavitt Wire and Cable Co., Div. of	
71279	Cambridge Thermionics Corp.	Cambridge, Mass.	77630	TRW Electronic Components Div.	Camden, N. J.		Amerace Corp.	Brookfield, Mass.
71286	Camloc Fastener Corp.	Paramus, N. J.	77638	General Instrument Corp.,		83594	Burroughs Corp., Electronic	
71313	Cardwell Condenser Corp.			Rectifier Division	Brooklyn, N. Y.		Tube Div.	Plainfield, N. J.
		Lindenhurst, L. I., N. Y.	77764	Resistance Products Co.	Harrisburg, Pa.	83740	Union Carbide Corp., Consumer	
71400	Bussmann Mfg. Div. of		77969	Rubbercraft Corp. of Calif.	Torrance, Cal.		Prod. Div.	New York, N. Y.
	McGraw-Edison Co.	St. Louis, Mo.	78189	Shakeproof Division of		83777	Model Eng. and Mfg., Inc.	Huntington, Ind.
71436	Chicago Condenser Corp.	Chicago, Ill.		Illinois Tool Works	Elgin, Ill.	83821	Loyd Scruggs Co.	Festus, Mo.
71447	Calif. Spring Co., Inc.	Pico-Rivera, Cal.	78277	Sigma	So. Braintree, Mass.	83942	Aeronautical Inst. & Radio Co.	Lodi, N. J.
71450	CTS Corp.	Elkhart, Ind.	78283	Signal Indicator Corp.	New York, N. Y.	84171	Arco Electronics Inc.	Great Neck, N. Y.
71468	ITT Cannon Electric Inc.	Los Angeles, Cal.	78290	Struthers-Dunn Inc.	Pitman, N. J.	84396	A. J. Glesener Co., Inc.	San Francisco, Cal.
71471	Cinema, Div. Aerovox Corp.	Burbank, Cal.				84411	TRW Capacitor Div.	Ogallala, Neb.

**CODE LIST OF MANUFACTURERS (Continued)**

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
94870	Sarkes Tarzian, Inc.	Bloomington, Ind.	91929	Honeywell Inc., Micro Switch Division		96095	Hi-Q Div. of Aerovox Corp.	Olean, N.Y.
85454	Boonton Molding Company	Boonton, N.J.			Freeport, Ill.	96256	Thordarson-Meissner Inc.	Mt. Carmel, Ill.
85471	A. B. Boyd Co.	San Francisco, Cal.	91961	Nahm-Bros. Spring Co.	Oakland, Cal.	96296	Solar Mfg. Co.	Los Angeles, Cal.
85474	R. M. Bracamonte & Co.	San Francisco, Cal.	92180	Tru-Connector Corp.	Peabody, Mass.	96396	Microswitch, Div. of	
85660	Koiled Kords, Inc.	Hamden, Conn.	92367	Elgeet Optical Co., Inc.	Rochester, N.Y.		Minn.-Honeywell	Freeport, Ill.
85911	Seamless Rubber Co.	Chicago, Ill.	92607	Tensolite Insulated Wire Co., Inc.		96330	Carlton Screw Co.	Chicago, Ill.
86174	Fafnir Bearing Co.	Los Angeles, Calif.			Tarrytown, N.Y.	96341	Microwave Associates, Inc.	Burlington, Mass.
86197	Clifton Precision Products Co., Inc.		92702	IMC Magnetics Corp.	Westbury, L.I., N.Y.	96501	Excel Transformer Co.	Oakland, Cal.
		Clifton Heights, Pa.	92966	Hudson Lamp Co.	Kearney, N.J.	96508	Xcelite, Inc.	Orchard Park, N.Y.
86579	Precision Rubber Products Corp.	Dayton, Ohio	93332	Sylvania Electric Prod. Inc.,		96733	San Fernando Elec. Mfg. Co.	San Fernando, Cal.
86684	Radio Corp. of America, Electronic Comp. & Devices Division	Harrison, N.J.		Semiconductor Div.	Woburn, Mass.	96881	Thomson Ind. Inc.	Long Island, N.Y.
86928	Seastrom Mfg. Co.	Glendale, Cal.	93369	Robbins & Myers Inc.	Pallisades Park, N.J.	97464	Industrial Retaining Ring Co.	Irvington, N.J.
87034	Marco Industries	Anaheim, Cal.	93410	Stemco Controls, Div. of Essex		97539	Automatic & Precision Mfg.	Englewood, N.J.
87216	Philco Corporation (Lansdale Division)	Lansdale, Pa.		Wire Corp.	Mansfield, Ohio	97979	Reon Resistor Corp.	Yonkers, N.Y.
			93632	Waters Mfg. Co.	Culver City, Cal.	97983	Litton System Inc., Adler-Westrex	
87473	Western Fibrous Glass Products Co.	San Francisco, Cal.	93929	G.V. Controls	Livingston, N.J.		Commun. Div.	New Rochelle, N.Y.
			94137	General Cable Corp.	Bayonne, N.J.	98141	R-Tronics, Inc.	Jamaica, N.Y.
87664	Van Waters & Rogers Inc.	San Francisco, Cal.	94144	Raytheon Co., Comp. Div.,		98159	Rubber Teck, Inc.	Gardena, Cal.
87930	Tower Mfg. Corp.	Providence, R.I.		Ind. Comp. Operations	Quincy, Mass.	98220	Hewlett-Packard Co.,	
88140	Cutler-Hammer, Inc.	Lincoln, Ill.	94148	Scientific Electronics			Medical Elec. Div.	Pasadena, Cal.
88220	Gould-National Batteries, Inc.	St. Paul, Minn.		Products, Inc.	Loveland, Colo.	98278	Microdot, Inc.	So. Pasadena, Cal.
88698	General Mills, Inc.	Buffalo, N.Y.	94154	Wagner Elect. Corp.,		98291	Seaelectro Corp.	Mamaronech, N.Y.
89231	Graybar Electric Co.	Oakland, Cal.		Tung-Sol Div.	Newark, N.J.	98376	Zero Mfg. Co.	Burbank, Cal.
89473	G. E. Distributing Corp.	Schenectady, N.Y.	94197	Curtiss-Wright Corp.,		98410	Etc Inc.	Cleveland, Ohio
89479	Security Co.	Detroit, Mich.		Electronics Div.	East Patterson, N.J.	98731	General Mills Inc., Electronics Div.	
89665	United Transformer Co.	Chicago, Ill.	94222	South Chester Corp.	Chester, Pa.			Minneapolis, Minn.
90030	United Shoe Machinery Corp.	Beverly, Mass.	94330	Wire Cloth Products, Inc.	Bellwood, Ill.	98734	Paeco Division of Hewlett-Packard Co.	
90179	U. S. Rubber Co., Consumer Ind. & Plastics Prod. Div.	Passaic, N.J.	94375	Automatic Metal Products Co.	Brooklyn, N.Y.			Palo Alto, Cal.
			94682	Worcester Pressed Aluminum Corp.		98821	North Hills Electronics, Inc.	Glen Cove, N.Y.
90365	Belleville Speciality Tool Mfg., Inc.	Belleville, Ill.			Worcester, Mass.	98978	International Electronic Research Corp.	
			94696	Magnecraft Electric Co.	Chicago, Ill.			Burbank, Cal.
90763	United Carr Fastener Corp.	Chicago, Ill.	95023	George A. Philbrick Researchers, Inc.		99109	Columbia Technical Corp.	New York, N.Y.
90970	Bearing Engineering Co.	San Francisco, Cal.			Boston, Mass.	99313	Varian Associates	Palo Alto, Cal.
91146	ITT Cannon Elect. Inc., Salem Div.	Salem, Mass.	95146	Alco Elect. Mfg. Co.	Lawrence, Mass.	99378	Atlee Corp.	Winchester, Mass.
			95236	Allies Products Corp.	Dania, Fla.	99515	Marshall Ind., Capacitor Div.	Monrovia, Cal.
91260	Connor Spring Mfg. Co.	San Francisco, Cal.	95238	Continental Connector Corp.	Woodside, N.Y.	99707	Control Switch Division, Controls Co. of America	El Segundo, Cal.
91345	Miller Dial & Nameplate Co.	El Monte, Cal.	95263	Leecraft Mfg. Co., Inc.	Long Island, N.Y.	99800	Delevan Electronics Corp.	East Aurora, N.Y.
91418	Radio Materials Co.	Chicago, Ill.	95265	Ironcoil Coil Co.	Sheridan, Wyo.	99848	Wilco Corporation	Indianapolis, Ind.
91506	Augat Inc.	Attleboro, Mass.	95275	Vitramon, Inc.	Bridgeport, Conn.	99928	Branson Corp.	Whippany, N.J.
91637	Dale Electronics, Inc.	Columbus, Nebr.	95348	Gordos Corp.	Bloomfield, N.J.	99934	Rembrandt, Inc.	Boston, Mass.
91662	Elco Corp.	Willow Grove, Pa.	95354	Methode Mfg. Co.	Rolling Meadows, Ill.	99942	Hoffman Electronics Corp.,	
91673	Epiphone Inc.	New York, N.Y.		Arnold Engineering Co.	Marengo, Ill.		Semiconductor Division	El Monte, Cal.
91737	Gremer Mfg. Co., Inc.	Wakefield, Mass.	95712	Dage Electric Co., Inc.	Franklin, Ind.	99957	Technology-Instrument Corp.	
91827	K F Development Co.	Redwood City, Cal.	95984	Siemon Mfg. Co.	Wayne, Ill.		of California	Newbury Park, Cal.
91886	Malco Mfg., Inc.	Chicago, Ill.	95987	Weckesser Co.	Chicago, Ill.			
			96067	Microwave Assoc., West, Inc.	Sunnyvale, Cal.			

The following HP Vendors have no number assigned in the latest supplement to the Federal Supply Code for Manufacturers Handbook.

0000F	Malco Tool and Die	Los Angeles, Calif.	000CS	Hewlett-Packard Co., Colorado		000QQ	Cooltron	Oakland, Cal.
0000Z	Willow Leather Products Corp.	Newark, N.J.		Springs Div.	Colorado Springs, Colorado	000WW	California Eastern Lab	Burlington, Cal.
000AB	ETA	England	000MM	Rubber Eng. & Development	Hayward, Cal.	000YY	S. K. Smith Co.	Los Angeles, Cal.
000BB	Precision Instrument Comp. Co.	Van Nuys, Cal.	000NN	A "N" D Mfg. Co.	San Jose, Cal.			

**SUPPLEMENTAL CODE LIST OF MANUFACTURERS**

Code No.	Manufacturer	Address
23880	Stanford Applied Engineering	Santa Clara, California
27264	Molex Products Co.	Downers Grove, Illinois