

**Agilent E5260 Series  
High Speed Measurement  
Solutions  
Agilent E5270 Series  
Precision Measurement  
Solutions**

**Programming Guide**



**Agilent Technologies**

# Notices

© Agilent Technologies 2004

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

## Manual Part Number

E5260-90010

## Edition

First Edition, October 2004

Agilent Technologies, Inc.  
395 Page Mill Road  
Palo Alto, CA 94303 USA

## Warranty

**The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.**

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as

defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

---

## In This Manual

This manual provides the information to control the Agilent E5260A/E5262A/E5263A/E5270B via GPIB interface using an external computer, and consists of the following chapters:

- “Programming Basics”

This chapter provides basic information to control the Agilent E5260/E5270.

- “Remote Mode Functions”

This chapter explains the functions of the Agilent E5260/E5270 in the remote mode.

- “Programming Examples”

This chapter lists the GPIB commands and explains the programming examples for each measurement mode or function. The examples have been written in the Microsoft Visual Basic .NET or the HP BASIC language.

- “Command Reference”

This chapter provides the complete reference of the GPIB commands of the Agilent E5260/E5270.

- “Error Messages”

This chapter lists the error codes, and explains them.



---

# Contents

## 1. Programming Basics

Before Starting . . . . .	1-3
Getting Started . . . . .	1-4
To Reset the Agilent E5260/E5270 . . . . .	1-5
To Read Query Response . . . . .	1-5
To Perform Self-Test . . . . .	1-5
To Perform Self-Calibration . . . . .	1-5
To Perform Diagnostics . . . . .	1-6
To Enable Source/Measurement Channels . . . . .	1-6
To Select the Measurement Mode . . . . .	1-7
To Force Voltage/Current . . . . .	1-8
To Set the Integration Time . . . . .	1-10
To Set the Measurement Range . . . . .	1-11
To Pause Command Execution . . . . .	1-12
To Start Measurement . . . . .	1-12
To Force 0 V . . . . .	1-12
To Disable Source/Measurement Channels . . . . .	1-13
To Control ASU . . . . .	1-13
To Read Error Code/Message . . . . .	1-14
To Read Spot Measurement Data . . . . .	1-14
To Read Sweep Measurement Data . . . . .	1-15
To Read Time Stamp Data . . . . .	1-16
To Perform High Speed Spot Measurement . . . . .	1-17
Command Input Format . . . . .	1-18
Header . . . . .	1-18
Numeric Data . . . . .	1-19
Terminator . . . . .	1-20
Special Terminator . . . . .	1-20
Separator . . . . .	1-20
Data Output Format . . . . .	1-21

---

# Contents

Conventions . . . . .	1-21
ASCII Data Output Format . . . . .	1-22
Binary Data Output Format . . . . .	1-29
GPIB Interface Capability . . . . .	1-36
Status Byte . . . . .	1-37
Programming Tips . . . . .	1-39
To Confirm the Operation . . . . .	1-40
To Confirm the Command Completion . . . . .	1-40
To Disable the Auto Calibration . . . . .	1-40
To Optimize the Measurement Range . . . . .	1-41
To Optimize the Integration Time . . . . .	1-41
To Disable the ADC Zero Function . . . . .	1-41
To Optimize the Source/Measurement Wait Time . . . . .	1-42
To Use the Internal Program Memory . . . . .	1-43
To Get Time Data with the Best Resolution . . . . .	1-43
To Use Sweep Source as a Constant Source . . . . .	1-43
To Start Measurements Simultaneously . . . . .	1-43
To Perform Quasi-Sampling Measurement . . . . .	1-44
To Interrupt Command Execution . . . . .	1-44
To Use Programs for Agilent 4142B . . . . .	1-45
To Use Programs for Agilent 4155/4156 . . . . .	1-46
To Use Programs for Agilent E5270A . . . . .	1-48
<b>2. Remote Mode Functions</b>	
Measurement Modes . . . . .	2-3
Spot Measurements . . . . .	2-4
Pulsed Spot Measurements . . . . .	2-5
Staircase Sweep Measurements . . . . .	2-6
Multi Channel Sweep Measurements . . . . .	2-8
Pulsed Sweep Measurements . . . . .	2-10

---

# Contents

Staircase Sweep with Pulsed Bias Measurements . . . . .	2-12
Quasi-Pulsed Spot Measurements . . . . .	2-15
Binary Search Measurements . . . . .	2-17
Linear Search Measurements . . . . .	2-19
Synchronous Output . . . . .	2-21
Automatic Sweep Abort Function . . . . .	2-23
Program Memory . . . . .	2-24
Using Program Memory . . . . .	2-24
Digital I/O Port . . . . .	2-27
Accessories . . . . .	2-28
Digital I/O Internal Circuit . . . . .	2-29
Trigger Function . . . . .	2-30
Trigger Input . . . . .	2-31
Trigger Output . . . . .	2-33
Using Trigger Function . . . . .	2-35
Trig In/Out Internal Circuit . . . . .	2-41
Initial Settings . . . . .	2-42

## 3. Programming Examples

Programming Basics for Visual Basic .NET Users . . . . .	3-4
To Create Your Project Template . . . . .	3-4
To Create Measurement Program . . . . .	3-5
High-Speed Spot Measurements . . . . .	3-9
Spot Measurements . . . . .	3-12
Pulsed Spot Measurements . . . . .	3-15
Staircase Sweep Measurements . . . . .	3-18
Pulsed Sweep Measurements . . . . .	3-28

---

# Contents

Staircase Sweep with Pulsed Bias Measurements . . . . .	3-32
Quasi Pulsed Spot Measurements . . . . .	3-36
Linear Search Measurements . . . . .	3-39
Binary Search Measurements . . . . .	3-42
Multi Channel Sweep Measurements . . . . .	3-45
Using Program Memory . . . . .	3-49
Tips to use program memory . . . . .	3-50
Using Trigger Function . . . . .	3-55
Reading Time Stamp Data . . . . .	3-67
Reading Binary Output Data . . . . .	3-68
Using Programs for 4142B . . . . .	3-71
Using Programs for 4155B/4156B/4155C/4156C . . . . .	3-73
<b>4. Command Reference</b>	
Command Summary . . . . .	4-3
Command Parameters . . . . .	4-9
Command Reference . . . . .	4-15
AAD . . . . .	4-16
AB . . . . .	4-17
ACH . . . . .	4-19
AIT . . . . .	4-20
AV . . . . .	4-22
AZ . . . . .	4-24
BC . . . . .	4-24
BDM . . . . .	4-25
BDT . . . . .	4-25
BDV . . . . .	4-26



---

# Contents

BGI .....	4-27
BGV .....	4-29
BSI .....	4-31
BSM .....	4-32
BSSI .....	4-35
BSSV .....	4-36
BST .....	4-37
BSV .....	4-38
BSVM .....	4-39
CA .....	4-40
*CAL? .....	4-41
CL .....	4-42
CM .....	4-43
CMM .....	4-44
CN .....	4-45
DFM .....	4-46
DI .....	4-47
DIAG? .....	4-48
DO .....	4-49
DV .....	4-50
DZ .....	4-51
EMG? .....	4-52
END .....	4-52
ERC .....	4-53
ERM .....	4-54
ERR? .....	4-55
ERS? .....	4-56
FL .....	4-57
FMT .....	4-58
*IDN? .....	4-60
IN .....	4-61
KLC .....	4-62

---

## Contents

LGI .....	4-63
LGV .....	4-64
LOP? .....	4-65
*LRN? .....	4-67
LSI .....	4-73
LSM .....	4-74
LSSI .....	4-75
LSSV .....	4-76
LST? .....	4-77
LSTM .....	4-79
LSV .....	4-80
LSVM .....	4-81
MCH .....	4-81
MM .....	4-82
MPA .....	4-83
NUB? .....	4-84
*OPC? .....	4-84
OS .....	4-85
OSX .....	4-85
PA .....	4-86
PAX .....	4-87
PI .....	4-88
PT .....	4-89
PV .....	4-90
PWI .....	4-91
PWV .....	4-93
RCV .....	4-95
RED .....	4-95
RI .....	4-96
RM .....	4-97
*RST .....	4-98
RU .....	4-98

---

# Contents

RV	4-99
RZ	4-100
SAL	4-101
SAR	4-101
SAP	4-102
SCH	4-103
SCR	4-103
SPA	4-104
*SRE	4-105
*SRE?	4-106
SSR	4-107
ST	4-108
*STB?	4-109
TDI	4-110
TDV	4-111
TGMO	4-112
TGP	4-113
TGPC	4-115
TGSI	4-116
TGSO	4-117
TGXO	4-117
TI	4-118
TM	4-119
TSC	4-120
TSQ	4-121
TSR	4-121
*TST?	4-122
TTI	4-123
TTV	4-124
TV	4-125
UNT?	4-126
VAR	4-127

---

# Contents

VAR? .....	4-127
WAT .....	4-128
WI .....	4-130
WM .....	4-132
WNU? .....	4-133
WNX .....	4-134
WS .....	4-137
WSI .....	4-138
WSV .....	4-140
WSX .....	4-142
WT .....	4-143
WV .....	4-145
WZ? .....	4-147
XE .....	4-148

## 5. Error Messages

Channel Status Code .....	5-3
Error Codes .....	5-4
Operation Error .....	5-4
Self-test/Calibration Error .....	5-12

---

# **1** **Programming Basics**

## Programming Basics

This chapter describes basic information to control the Agilent E5260/E5270, and contains the following sections:

- “Before Starting”
- “Getting Started”
- “Command Input Format”
- “Data Output Format”
- “GPIB Interface Capability”
- “Status Byte”
- “Programming Tips”

---

## Before Starting

Before starting the programming, connect an external computer, and set the GPIB address of the Agilent E5260/E5270 as shown below.

1. Connect a GPIB cable between the GPIB interface of the external computer and the GPIB connector on the rear panel of the E5260/E5270.
2. Turn on the E5260/E5270, and set the GPIB address as shown below.
  - a. Press the **Menu** key.
  - b. Select the CONFIG menu, and press the **Enter** key.
  - c. Select the ADDRESS menu, and press the **Enter** key.
  - d. Press the arrow key to set the GPIB address of the E5260/E5270, then press the **Enter** key.
  - e. Press the **Exit** key twice to close the setup menu.

---

### NOTE

#### Command execution examples

In this section, command execution examples are written in HP BASIC. See the following instructions for your guidance.

1. Use the ASSIGN statement to assign the I/O path for controlling instruments.

In the next example, the select code of the external computer is 7 and the GPIB address of the E5260/E5270 is 17.

```
10 ASSIGN @E5270 TO 717
```

2. Use the OUTPUT statement to send commands to instruments, as shown below.

```
OUTPUT @E5270;"*RST"
```

It is available to send multiple commands as shown below.

```
OUTPUT @E5270;"*CN;MM2,1"
```

3. Use the ENTER statement to get a query response or data from instruments.
4. Use the RED command instead of the LOCAL statement. If you execute LOCAL to the instruments on the same bus, execute the following statements. The following example is for the select code 7 and the address 17.

```
LOCAL 7  
REMOTE 717  
OUTPUT 717;"RED 1"
```

## Getting Started

This section explains the following basic operations. In this section, the HP BASIC language is used for the examples.

- “To Reset the Agilent E5260/E5270”
- “To Read Query Response”
- “To Perform Self-Test”
- “To Perform Self-Calibration”
- “To Perform Diagnostics”
- “To Enable Source/Measurement Channels”
- “To Select the Measurement Mode”
- “To Force Voltage/Current”
- “To Set the Integration Time”
- “To Set the Measurement Range”
- “To Pause Command Execution”
- “To Start Measurement”
- “To Force 0 V”
- “To Disable Source/Measurement Channels”
- “To Control ASU”
- “To Read Error Code/Message”
- “To Read Spot Measurement Data”
- “To Read Sweep Measurement Data”
- “To Read Time Stamp Data”
- “To Perform High Speed Spot Measurement”



## To Reset the Agilent E5260/E5270

The E5260/E5270 returns to the initial settings by the \*RST command.

### Example

```
OUTPUT @E5270;"*RST"
```

For the initial settings, refer to *User's Guide*.

## To Read Query Response

If you enter a query command such as the \*TST?, ERR? and so on, the E5260/E5270 puts an ASCII format response to the query buffer that can store only one response. Read the response as soon as possible after entering a query command.

### Example

```
OUTPUT @E5270;"NUB?"  
ENTER @E5270;A
```

This example returns the number of data stored in the data output buffer.

## To Perform Self-Test

The E5260/E5270 starts the self-test by the \*TST? command. The \*TST? command also returns the test result.

### Example

```
OUTPUT @E5270;"*TST?"  
ENTER @E5270;Code  
IF Code<>0 THEN DISP "FAIL: SELF-TEST"
```

This example starts the self-test, and reads the test result code. For the test result code, refer to “\*TST?” on page 4-122.

## To Perform Self-Calibration

The E5260/E5270 starts the self-calibration by the \*CAL? command.

### Example

```
OUTPUT @E5270;"*CAL?"  
ENTER @E5270;Result  
IF Result<>0 THEN DISP "FAIL: CALIBRATION"
```

This example starts the self-calibration, and reads the result, pass or fail. For details, refer to “\*CAL?” on page 4-41.

## To Perform Diagnostics

The E5260/E5270 starts the diagnostics by the `DIAG?` command, and returns the result. You must specify the diagnostics item by using the first parameter. Available parameter values are:

- 1: Trigger In/Out diagnostics
- 2: Front panel key diagnostics
- 3: High voltage LED diagnostics
- 4: Digital I/O diagnostics
- 5: Beeper diagnostics

To perform diagnostics 1, connect a BNC cable between the Ext Trig In terminal and the Ext Trig Out terminal before starting the diagnostics.

To perform diagnostics 4, disconnect any cable from the digital I/O port.

For diagnostics 1 and 4, the second parameter is available. Available parameter values are:

- 0: E5260/E5270 starts diagnostics immediately.
- 1: E5260/E5270 starts diagnostics when the **Enter** key is pressed.

### Example

```
OUTPUT @E5270;"DIAG? 1,0"  
ENTER @E5270;Result  
IF Result<>0 THEN DISP "FAIL: DIAGNOSTICS"
```

This example starts the Trigger In/Out diagnostics, and reads the result, pass or fail. For details, refer to “DIAG?” on page 4-48.

## To Enable Source/Masurement Channels

The measurement channels or source channels can be enabled by closing the output switch. To close the switch, send the `CN` command. The E5260/E5270 closes the output switch of the specified channels.

### Example

```
OUTPUT @E5270;"CN 1"
```

This example enables channel 1 (the module installed in slot 1 of the E5260/E5270). If you do not specify the channel, the `CN` command enables all channels.

## To Select the Measurement Mode

The E5260/E5270 provides the following measurement modes. To select the measurement mode, send the MM command.

Measurement Mode	Mode No.
Spot Measurement	1
Staircase Sweep Measurement	2
Pulsed Spot Measurement	3
Pulsed Sweep Measurement	4
Staircase Sweep with Pulsed Bias Measurement	5
Quasi-Pulsed Spot Measurement	9
Linear Search Measurement	14
Binary Search Measurement	15
Multi Channel Sweep Measurement	16
High Speed Spot Measurement	NA

In the table, Mode No. means a command parameter of the MM command.

### Syntax

MM Mode#, Ch# [, Ch#] . . .

where, Mode# specifies the Mode No., and Ch# specifies the measurement channel. The available number of measurement channels depends on the measurement mode. For details, refer to “MM” on page 4-82.

### Example

```
OUTPUT @E5270;"MM 2,1"
```

This example sets the staircase sweep measurement, and assigns channel 1 (the module installed in slot 1 of the E5260/E5270) as the measurement channel.

### NOTE

The Mode No. is not assigned for the high speed spot measurement. Refer to “To Perform High Speed Spot Measurement” on page 1-17. The high speed spot measurement does not need the MM command.

For the source output commands available for each measurement mode, see Table 1-1 on page 1-9.

## To Force Voltage/Current

The E5260/E5270 provides the following commands to enable the voltage/current output. For the commands available for each measurement mode, see Table 1-1.

Command	Description
DV	Forces the constant voltage immediately.
DI	Forces the constant current immediately.
WV	Sets the staircase sweep voltage source.
WSV	Sets the synchronous sweep voltage source.
WI	Sets the staircase sweep current source.
WSI	Sets the synchronous sweep current source.
PV / PT	Sets the pulsed voltage source.
PI / PT	Sets the pulsed current source.
PWV / PT	Sets the pulsed sweep voltage source.
PWI / PT	Sets the pulsed sweep current source.
WNX	Sets a sweep source for the multi sweep measurement.
BDV	Sets the quasi-pulsed voltage source.
LSV	Sets the linear search voltage source.
LSSV	Sets the linear search synchronous voltage source.
LSI	Sets the linear search current source.
LSSI	Sets the linear search synchronous current source.
BSV	Sets the binary search voltage source.
BSSV	Sets the binary search synchronous voltage source.
BSI	Sets the binary search current source.
BSSI	Sets the binary search synchronous current source.

where, the PT command is used to set the timing parameters of the pulsed bias source or pulsed sweep source.

**Table 1-1 Measurement Mode and Available Source Output Commands**

Measurement Mode	Command
Spot Measurement	DV, DI
Staircase Sweep Measurement	DV, DI, and WV(/WSV) or WI(/WSI)
Pulsed Spot Measurement	DV, DI, and PV/PT or PI/PT
Pulsed Sweep Measurement	DV, DI, and PWV/PT(/WSV) or PWI/PT(/WSI)
Staircase Sweep with Pulsed Bias Measurement	DV, DI, and WV(/WSV) or WI(/WSI), and PV/PT or PI/PT
Quasi-Pulsed Spot Measurement	DV, DI, BDV
Linear Search Measurement	DV, DI, and LSV(/LSSV) or LSI(/LSSI)
Binary Search Measurement	DV, DI, and BSV(/BSSV) or BSI(/BSSI)
Multi Channel Sweep Measurement	DV, DI, WNX, and WV or WI
High Speed Spot Measurement	DV, DI

The DV and DI commands start to force the voltage or current immediately when the command is executed. The other commands just set the source channel condition, and the source channel starts the output by the start trigger, such as the XE command. For more details of the commands, refer to Chapter 4, “Command Reference.”

**Example**

```
OUTPUT @E5270;"DV 1,0,5"
```

This example just forces 5 V using channel 1 (the module installed in slot 1 of the E5260/E5270) with auto ranging.

## To Set the Integration Time

To adjust the balance of the measurement accuracy and the measurement speed, change the integration time or the number of averaging samples of the A/D converter (ADC) by using the AV command. The AV command is compatible with the AV command of the Agilent 4142B.

For accurate and reliable measurement, set the integration time longer or set the number of samples larger. For details about the integration time settings, refer to Chapter 4, "Command Reference."

The Agilent E5270B has the following two types of the A/D converter. Use the AAD command to select the type of ADC, and use the AIT command to set the integration time or the number of samples.

Type of ADC	Description
High-speed ADC	Effective for the high speed measurement. In the multi channel sweep measurement mode (MM16), multiple measurement channels can perform synchronous measurements.  The number of averaging samples must be set by the AIT or AV command.
High-resolution ADC	Effective for the accurate measurement. Cannot be used for the pulsed measurement channel and the simultaneous measurement channel.  The integration time must be set by the AIT command.

### Example

The following example sets the number of samples to 10 for the A/D converter (high-speed ADC for the Agilent E5270B).

```
OUTPUT @E5270;"AV 10,1"
```

The following example is for the Agilent E5270B, and sets the power line cycle mode (PLC) for both the high-speed ADC and the high-resolution ADC. And channel 1 uses the high-resolution ADC and other channels use the high-speed ADC.

```
OUTPUT @E5270;"*RST"  
OUTPUT @E5270;"AIT 0,2,1"  
OUTPUT @E5270;"AIT 1,2"  
OUTPUT @E5270;"AAD 1,1"
```

## To Set the Measurement Range

To set the measurement range, send the following command:

Command	Description
RI	Sets the current measurement range. Available for measurement except for the high speed spot measurement.
RV	Sets the voltage measurement range. Available for measurement except for the high speed spot measurement.
TI, TTI	Sets the current measurement channel and the measurement range, and performs the high speed spot measurement.
TV, TTV	Sets the voltage measurement channel and the measurement range, and performs the high speed spot measurement.

For the current measurement with the auto ranging mode, you can specify the coverage of each measurement range. To specify the coverage, send the RM command.

For details, refer to Chapter 4, “Command Reference.”

### Example

This example sets the voltage measurement ranging mode of channel 1 to auto.

```
OUTPUT @E5270;"RV 1,0"
```

This example sets the current measurement ranging mode of channel 1 to auto, and specifies coverage between 9 % and 90 % of the range value or between 90 mA and 180 mA for the 200 mA range.

```
OUTPUT @E5270;"RI 1,0"
```

```
OUTPUT @E5270;"RM 1,3,90"
```

## To Pause Command Execution

To pause command execution until the specified wait time has elapsed, send the PA command.

### Example

```
OUTPUT @E5270;"PA 5"
```

If this command is sent, the E5260/E5270 waits 5 seconds before executing the next command.

## To Start Measurement

To start measurement other than the high speed spot measurement, send the XE command.

### Example

```
OUTPUT @E5270;"XE"
```

This starts the measurement specified by the MM command.

For the high speed spot measurement, refer to “To Perform High Speed Spot Measurement” on page 1-17.

## To Force 0 V

To force 0 V immediately, send the DZ command. The E5260/E5270 memorizes the present source output settings of the specified channel, and changes the specified channel output to 0 V. If you do not specify the channel, the DZ command function is effective for all channels.

### Example

```
OUTPUT @E5270;"DZ 1"
```

If this command is sent, the E5260/E5270 memorizes the current settings of channel 1 (the module installed in slot 1 of the E5260/E5270), and changes channel 1 output to 0 V.

To restore the settings stored by the DZ command, send the RZ command. For details, refer to Chapter 4, “Command Reference.”



## To Disable Source/Measurement Channels

To disable the channels, send the CL command. The E5260/E5270 opens the output switch of the specified channels. Opening the output switch disables the channel.

### Example

```
OUTPUT @E5270;"CL 1"
```

This example disables channel 1 (the module installed in slot 1 of the E5260/E5270). If you do not specify the channel, the CL command disables all channels.

## To Control ASU

This function is available for the Agilent E5270B that is installed with the high resolution SMU (HRSMU). Atto Sense and Switch Unit (ASU) has two inputs, SMU input for the HRSMU and AUX input for the other instrument. And the instrument's inputs/outputs that will be appeared on the ASU output can be switched by controlling the ASU internal switch. When the instrument is turned on, the SMU input will be internally connected to the ASU output. However, the source output will be off yet. The ASU internal switch can be controlled by the following commands.

Table 1-2

ASU Output Connection Control

Previous Connection	Command	Subsequent Connection
SMU side, Output on/off	SAP <i>chnum</i> , 1	AUX side
SMU side, Output off	CN <i>chnum</i>	SMU side, Output on
	SAP <i>chnum</i> , 0	
AUX side	CN <i>chnum</i>	
	SAP <i>chnum</i> , 0	
	CL [ <i>chnum</i> ]	SMU side, Output off
SMU side, Output on	CL [ <i>chnum</i> ]	

When the SMU side is connected to the ASU output, the source output on/off can be controlled by the CN/CL command. And then the SAP *chnum*, 1 command is used to change the output connection to the AUX side. Where, *chnum* indicates the channel number of the HRSMU connected to the ASU. When the AUX side is connected, the output of the instrument connected to the AUX input is appeared to the ASU output immediately.

See also "SAL" and "SAR" on page 4-101 for the other function of the ASU.

## To Read Error Code/Message

If any error occurs, the E5260/E5270 will not put the measurement data into the data output buffer. Hence, confirm that no error has occurred before reading the measurement data. To read the error code, enter the ERR? command, and to read the error message, enter the EMG? command.

### Example

```
OUTPUT @E5270;"ERR? 1"  
ENTER @E5270;Code  
IF Code<>0 THEN  
    OUTPUT @E5270;"EMG? ";Code  
    ENTER @E5270;Msg$  
    PRINT "ERROR: ";Msg$  
ELSE  
    :   :
```

This example checks the error buffer, and prints the error message on the computer screen if any error code is stored in the error buffer.

## To Read Spot Measurement Data

After the spot measurements, the E5260/E5270 puts the measurement data into its output data buffer. You can read the data as shown below. For the data output format, refer to “Data Output Format” on page 1-21.

### Example 1

For the HP BASIC users, use the ENTER statement. The example stores the header information and the measurement data included in the ASCII data set by the FMT5 command into the Head\$ and Mdata variables respectively.

```
ENTER @E5270 USING "#,3A,12D,X";Head$,Mdata
```

### Example 2

For the Microsoft Visual Basic .NET with Agilent T&M Programmer’s Toolkit users, use the Read, ReadList, UnbufferedRead methods and so on. The example stores the header information and the measurement data included in the ASCII data set by the FMT5 command into the head and mdata variables respectively.

```
ret_value = E5270.Read(True)  
head = Left(ret_val, 3)  
mdata = Val(Right(ret_val, 12))
```

## To Read Sweep Measurement Data

For the sweep measurements, the measurement data will be put into the data output buffer after every step measurement. You can read the data as shown below. For the data output format, refer to “Data Output Format” on page 1-21.

- To read data after sweep measurement

This way waits for the measurement completion by using the \*OPC? command after the XE command, and reads the sweep data (all step measurement data) at once after the sweep measurement is completed.

Example:

```
E5270.WriteLine("FMT 5,0")           'terminator=comma
E5270.WriteLine("XE")
E5270.WriteLine("*OPC?")
rep = E5270.Read(True)
ret_val = E5270.ReadListAsStringArray() 'string array
For i = 0 To nop - 1                 'nop=number of sweep steps
    head = Left(ret_val(i), 3)
    mdata = Val(Right(ret_val(i), 12))
    ddata = "Data = " & mdata & ", Header = " & head
    Console.WriteLine(ddata)
Next i
```

For the specific example, see Table 3-5 on page 3-19.

- To read data after every step measurement

This way starts to read the data after the XE command. You do not need to wait for the sweep measurement completion. So you can check the result data before the sweep measurement is completed.

Example:

```
E5270.WriteLine("FMT 5,0")           'terminator=comma
E5270.TerminationCharacter = Chr(44) 'Chr(44)=comma
E5270.TerminationCharacterEnabled = True 'enables comma
E5270.WriteLine("XE")
For i = 0 To nop - 1                 'nop=number of sweep steps
    ret_val = E5270.Read(True)       'string
    head = Left(ret_val, 3)
    mdata = Val(Right(ret_val, 12))
    ddata = "Data = " & mdata & ", Header = " & head
    Console.WriteLine(ddata)
Next i
```

For the specific example, see Table 3-6 on page 3-22.

## To Read Time Stamp Data

---

**NOTE**

---

This function is *not* available for the quasi-pulsed spot measurement (MM 9), search measurement (MM 14 or 15), and the binary data output format (FMT 3 or 4).

To read the time data with the best resolution (100  $\mu$ s), clear the timer every 100 s or less (for FMT 1, 2, or 5), or 1000 s or less (for FMT 11, 12, 15, 21, 22, or 25).

The time stamp function records the time from when the timer count is cleared until the measurement is started. This function is enabled by the TSC command.

For example, in the staircase sweep measurement, the output data will be as follows:

*Block1* [,*Block2*] . . . <terminator>

where, *BlockN* (*N*: integer) = *Time1,Data1* [,*Time2,Data2*] ... [,*Source\_data*], then *TimeN* (*N*: integer) is the time when the *DataN* measurement is started.

Without the TSC command, you can get the time data by the following commands:

- TSR: Resets the timer count (*Time*=0 s).
- TDV (for voltage output), TDI (for current output):

Applies DC voltage or current, and returns the output start time.

Example:

```
OUTPUT @E5270;"TDV 1,0,20"  
ENTER @E5270 USING "#,5X,13D,X";Time  
PRINT "Time=";Time;"sec"
```

- TTV (for voltage measurement), TTI (for current measurement):

Executes the high speed spot measurement, and returns the measurement data and the time data for the time from when the timer count is cleared until the measurement is started.

Example:

```
OUTPUT @E5270;"TTV 1,0"  
ENTER @E5270 USING "#,5X,13D,X";Time  
ENTER @E5270 USING "#,5X,13D,X";Mdata  
PRINT "Data=";Mdata;" at ";Time;"sec"
```

- TSQ: Returns the time when this command is entered.

Example:

```
OUTPUT @E5270;"TSR"                !Resets count  
:  
OUTPUT @E5270;"TSQ"                !Returns time data  
ENTER @E5270 USING "#,5X,13D,X";Time  
PRINT "Time=";Time;"sec"
```

## To Perform High Speed Spot Measurement

The high speed spot measurement does not need the MM and XE commands to set the measurement mode and start measurement. To start and perform the high speed spot measurement immediately, send the TI command for the current measurement, or the TV command for the voltage measurement. The following example program measures current by using the TI command, and displays the measurement result data on the computer screen.

### Example

```

10  ASSIGN @E5270 TO 717
20  OUTPUT @E5270;"*RST"
30  OUTPUT @E5270;"FMT 5"
40  OUTPUT @E5270;"CN 1,2,3,4"
50  OUTPUT @E5270;"DV 1,0,0"
60  OUTPUT @E5270;"DV 2,0,0"
70  OUTPUT @E5270;"DV 3,0,2"
80  OUTPUT @E5270;"DV 4,0,5"
90  OUTPUT @E5270;"TI 4,0"
100 ENTER @E5270 USING "#,3A,12D,X";Head$,Data
110 PRINT Head$,Data
120 OUTPUT @E5270;"DZ"
130 OUTPUT @E5270;"CL"
140  END

```


Line Number	Description
10	Assigns the I/O path to control the E5260/E5270.
20	Initializes the E5260/E5270.
30	Sets the data output format (ASCII with header and <,>).
40	Enables channels 1, 2, 3, and 4.
50 to 80	Forces the DC voltage. Channel 1 and 2 force 0 V, channel 3 forces 2 V, and channel 4 forces 5 V with auto ranging.
90	Performs the high speed spot measurement using channel 4 with auto ranging.
100 to 110	Prints the header data and measurement data on the screen.
120	Forces 0 V. All channels force 0 V.
130	Disables all channels.

---

## Command Input Format

The GPIB commands of the Agilent E5260/E5270 are composed of a header, numeric data, and terminator, as shown in the syntax diagram in the following figure.


### E5260/E5270 Control Command Syntax Diagram

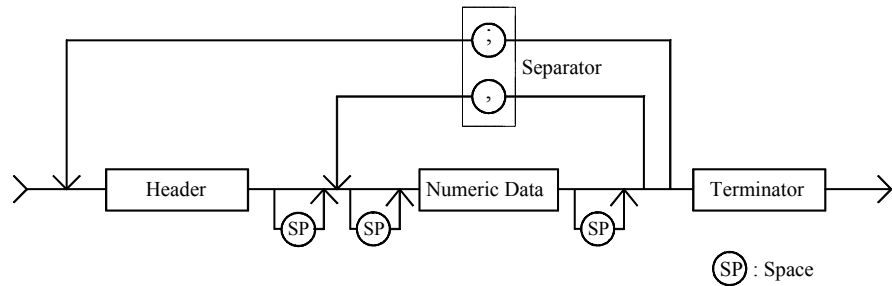

## Header

The header is the command name, always contains alpha characters, and is not upper or lowercase sensitive. Some command names also contain an asterisk (\*) or question mark (?). The following figure shows the syntax diagram for a header.


### Header Syntax Diagram

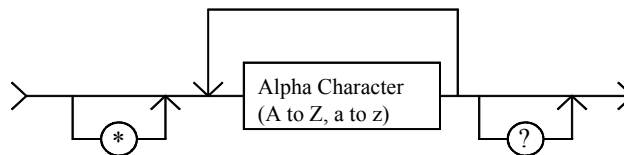

## Numeric Data


Numeric data are the command parameters. You can enter numeric data directly after the header or insert spaces between the header and numeric data. Some parameters require integer data. The following figure shows the syntax diagram for numeric data.

### Numeric Data Syntax Diagram

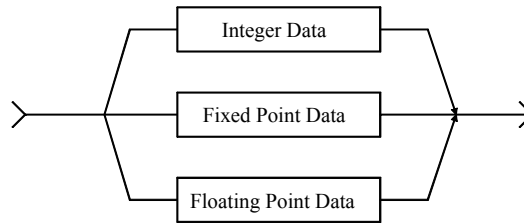


The following 3 figures show the syntax diagrams for integer, fixed point, and floating point data, respectively.


### Integer Data Syntax Diagram

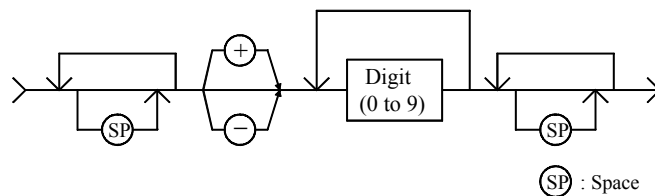

### Fixed Point Data Syntax Diagram

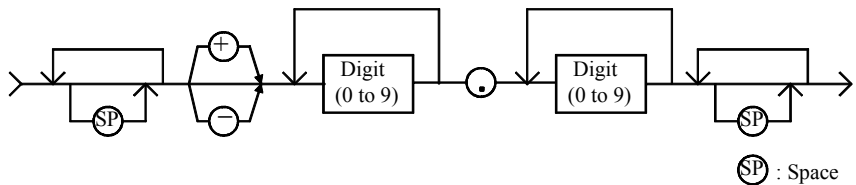


### Floating Point Data Syntax Diagram

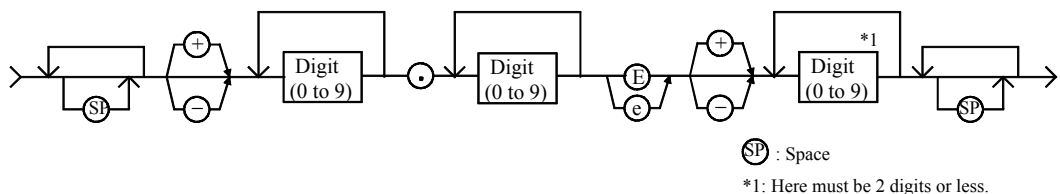

## Terminator

The terminator completes the GPIB command entry and starts command execution. The following figure shows the terminator syntax diagram.


### Terminator Syntax Diagram

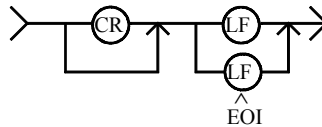

## Special Terminator

If a semicolon (;) is inserted before the terminator, as shown in the following figure, the preceding commands are not executed until the next command line is input and another terminator is input, without a preceding semicolon. The command lines are then executed together.

### Special Terminator Syntax Diagram

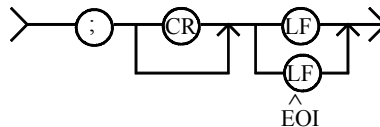

## Separator

If you enter multiple commands, use semicolons (;) to separate the commands. Spaces are allowed before and after the semicolons. Command execution starts when the terminator is received, not when the semicolon is received. You can input multiple commands of up to a total of 256 characters (including the terminator). If you input more than 256 characters, the input buffer overflows, and an error is indicated.

Use commas (,) to separate numeric data entries.

---

**NOTE**

---

Do not include the reset command (\*RST) or the abort command (AB) in multiple command strings (example: OUTPUT @E5270;\*RST;CN"). If you do, the other commands in the string (example: CN) are not executed.



---

## Data Output Format

Agilent E5260/E5270 provides the following data output formats:

- “ASCII Data Output Format”

The E5260/E5270 supports ASCII format of the Agilent 4155B/4156B/4155C/4156C Parameter Analyzer in the Agilent FLEX command control mode and ASCII format of the Agilent 4142B Modular DC Source/Monitor.

ASCII format provides better data resolution than binary format. You can read the data without calculation.

- “Binary Data Output Format”

The E5260/E5270 supports binary format of the Agilent 4142B. Binary format enables faster data transfer time than ASCII format.

To select the data output format, use the FMT command. For details about the command, refer to Chapter 4, “Command Reference.”

For the query response, the returned data is always stored in the query buffer in ASCII format, regardless of the FMT command setting.

A minimum of  $17 \times 1001 \times 2$  (34034) measurement data can be stored in the data output buffer.

## Conventions

The following conventions are used in this section.

**Data** Output data that the E5260/E5270 sends after a measurement.

**[Data]** Optional output data sent when there are multiple output data items.

For example, source data will be sent with measurement data after the staircase sweep measurements when the source data output is enabled by the FMT command.

**<terminator>** Terminator.

<CR/LF^EOI> (two bytes) or <,> (one byte) for ASCII data.

<CR/LF^EOI> (two bytes) or <^EOI> (0 byte) for binary data.

You can select by using the FMT command.

## ASCII Data Output Format

This section describes the ASCII data output format, and the elements of the data.

- “Data Format”
- “Time Stamp”
- “Data Elements”

### Data Format

The data output format depends on the measurement mode as shown below.

#### High Speed Spot

*Data* <terminator> (by TI or TV command)

*Time,Data* <terminator> (by TTI or TTV command)

*Data* is the value measured by the channel you specify by using the TI, TV, TTI, or TTV command. *Time* is the time from when the timer count is cleared until the measurement is started.

#### Spot

*Data1* [,*Data2*] . . . <terminator>

*DataN* (*N*: integer) is the value measured by a channel. The order of *Data* is defined by the MM command.

#### Pulsed Spot, Quasi-Pulsed Spot

*Data* <terminator>

*Data* is the value measured by the channel you specify by using the MM command.

#### Staircase Sweep, Multi Channel Sweep

*Block1* [,*Block2*] . . . <terminator>

*Block1* is the block of data measured at the first sweep step. *Block2* is the block of data measured at the second sweep step.

where *Block* consists of the following data:

*Data1* [,*Data2*] . . . [,*Source\_data*]

*DataN* (*N*: integer) is the value measured by a channel. The order of *Data* is defined by the MM command.

*Source\_data* is the sweep source output value. It is sent if the data output is enabled by the FMT command.

**Pulsed Sweep,  
Staircase Sweep  
with Pulsed Bias**

*Block1* [,*Block2*] . . . <terminator>

*Block1* is the block of data measured at the first sweep step. *Block2* is the block of data measured at the second sweep step.

where *Block* consists of the following data:

*Data* [,*Source\_data*]

*Data* is the value measured by the channel you specify by using the MM command.

*Source\_data* is the sweep source output value. It is sent if the data output is enabled by the FMT command.

**Linear Search,  
Binary Search**

*Data\_search* [,*Data\_sense*]<terminator>

This is the data at the measurement point closest to the search target.

*Data\_search* is the value forced by the search output channel.

*Data\_sense* is the value measured by the search monitor channel. It is sent if data output is enabled by the BSVM command for the binary search, or the LSVM command for the linear search.

**TDI, TDV  
command**

*Time* <terminator>

*Time* is the time from when the timer count is cleared until the output is started.

**Time Stamp**

---

**NOTE**

---

This function is *not* available for the quasi-pulsed spot measurement (MM9) and the search measurement (MM14 and MM15).

The E5260/E5270 can record the time when the measurement is started, and sends the time data (*Time*). This function is enabled by the TSC command.

The time data will be sent just before the measurement data. For example, in the staircase sweep measurements, the data will be as shown below.

*Block1* [,*Block2*] . . . <terminator>

where, *BlockN* (*N*: integer) = *Time1*,*Data1* [,*Time2*,*Data2*] ... [,*Source\_data*], then *TimeN* (*N*: integer) is the time from when the timer count is cleared until the *DataN* measurement is started.

The timer count is cleared (*Time*=0) by the TSR command.

## Data Elements

The measurement data (*Data*), source output data (*Source\_data*), time data (*Time*), and search data (*Data\_search* and *Data\_sense*) are the string as shown below.

<b>Data</b>	<b>FMT command</b>
ABCDDDDDDDDDDDDDD	FMT1 or FMT5
ABCDDDDDDDDDDDDDD	FMT11 or FMT15
EEEFGDDDDDDDDDDDDDD	FMT21 or FMT25
DDDDDDDDDDDDDD	FMT2
DDDDDDDDDDDDDD	FMT12 or FMT22

The data elements depends on the FMT command setting. Details of the elements are described on the following pages.

- A:** Status. One character.
- B:** Channel number. One character.
- C:** Data type. One character.
- D:** Data. Twelve digits or 13 digits.
- E:** Status. Three digits.
- F:** Channel number. One character.
- G:** Data type. One character.

**A**

Status. One character.

- Status for *Source\_data*:

Priority of appearance is W<E.

<b>A</b>	<b>Explanation</b>
W	Data is for the first or intermediate sweep step.
E	Data is for the last sweep step.

- Status for *Data*, *Data\_search*, or *Data\_sense*: See Table 1-3 on page 1-28.

Priority of appearance is as follows:

- For the quasi-pulsed spot measurement: N<T<C<V<X<G or S
- For other measurement: N<G<S<T<C<V<X<F

**B**

Channel number of the measurement/source channel. One character.

<b>B</b>	<b>Explanation</b>
A	Channel 1.
B	Channel 2.
C	Channel 3.
D	Channel 4.
E	Channel 5.
F	Channel 6.
G	Channel 7.
H	Channel 8.

**C**

Data type. One character.

<b>C</b>	<b>Explanation</b>
V	Voltage measurement data ( <i>Data</i> ).
I	Current measurement data ( <i>Data</i> ).
T	Time data ( <i>Time</i> ).

## Programming Basics

### Data Output Format

**D** Value of *Data*, *Source\_data*, *Data\_search*, *Data\_sense*, or *Time*.  
Twelve or 13 digits depends on FMT setting, which may be one of the following:

- *sn.nnnnnEsnn* or *sn.nnnnnnEsnn*
- *snn.nnnnEsnn* or *snn.nnnnnEsnn*
- *snnn.nnnEsnn* or *snnn.nnnnEsnn*

where,

*s*: Sign, + or -.

*n*: Digit, 0 to 9.

*E*: Exponent symbol.

**E** Status. Three digits. Ignore status for the *Time* value.

- Status for *Data*, *Data\_search*, or *Data\_sense*:

EEE	Explanation
1	A/D converter overflowed.
2	One or more units are oscillating.
4	Another unit reached its compliance setting.
8	This unit reached its compliance setting.
16	Target value was not found within the search range.
32	Search measurement was automatically stopped.
64	Invalid data is returned. <i>D</i> is not used.
128	EOD (End of Data).

If multiple status conditions are found, the sum of the *EEE* values is returned. For example, if an A/D converter overflow occurred, and an SMU was oscillating during the measurements, the returned *EEE* value is 3 (=1+2).

- Status for *Source\_data*: Priority of appearance is W<E.

EEE	Explanation
W	Data is for the first or intermediate sweep step.
E	Data is for the last sweep step.

**F** Channel number of the measurement/source unit. One character.

<b>F</b>	<b>Explanation</b>
A	Channel 1.
B	Channel 2.
C	Channel 3.
D	Channel 4.
E	Channel 5.
F	Channel 6.
G	Channel 7.
H	Channel 8.
V	GNDU.
Z	Status code for extraneous data in the channel. TSQ command response or invalid data is returned.

**G** Data type. One character.

<b>G</b>	<b>Explanation</b>
V	Voltage measurement data ( <i>Data</i> ).
v	Voltage source setup data ( <i>Setup_data</i> ).
I	Current measurement data ( <i>Data</i> ).
i	Current source setup data ( <i>Setup_data</i> ).
T	Time data ( <i>Time</i> ).
Z	Invalid data is returned.
z	

Table 1-3

Status for Data, Data\_search, or Data\_sense

A	Explanation
N	No status error occurred.
T	Another channel reached its compliance setting.
C	This channel reached its compliance setting.
V	Measurement data is over the measurement range. Or the sweep measurement was aborted by the automatic stop function or power compliance. <i>D</i> will be the meaningless value 199.999E+99.
X	One or more channels are oscillating. Or source output did not settle before measurement. <sup>a</sup>
G	For linear or binary search measurement, the target value was not found within the search range. Returns the source output value.  For quasi-pulsed spot measurement, the detection time was over the limit (3 s for Short mode, 12 s for Long mode). <sup>b</sup>
S	For linear or binary search measurement, the search measurement was stopped. Returns the source output value. See status of <i>Data_sense</i> .  For quasi-pulsed spot measurement, output slew rate was too slow to perform the settling detection. <sup>c</sup> Or quasi-pulsed source channel reached the current compliance before the source output voltage changed 10 V from the start voltage. <sup>d</sup>

- a. Make the wait time or delay time longer. Or make the current compliance larger. For pulsed measurement, make the pulse width longer, or make the pulse base value closer to the pulse peak value. For current output by limited auto ranging, make the output range lower.
- b. Make the current compliance or start voltage larger. Or set the detection interval to Long. If this status occurs with the Long mode, perform the spot measurement.
- c. Make the current compliance larger. Or set the detection interval to Long. If this status occurs with the Long mode, perform the spot measurement or pulsed spot measurement.
- d. Perform the pulsed spot measurement or spot measurement.



## Binary Data Output Format

This section describes the binary data output format, and the elements of the data.

- “Data Format”
- “Data Elements”

---

### NOTE

#### Data resolution

The resolution of binary data is as shown below.

- Measurement data: Measurement range / 50000
- Output data: Output range / 20000

Note that the resolution of the measurement data is larger than the resolution of the high resolution A/D converter.

---

### Data Format

The data output format depends on the measurement mode as shown below.

#### High Speed Spot

*Data* <terminator>

*Data* is the value measured by the channel you specify by using the TI or TV command.

#### Spot

*Data1* [*Data2*] . . . <terminator>

*DataN* (*N*: integer) is the value measured by a channel. The order of *Data* is defined by the MM command.

#### Pulsed Spot, Quasi-Pulsed Spot

*Data* <terminator>

*Data* is the value measured by the channel you specify by using the MM command.

## Programming Basics

### Data Output Format

#### Staircase Sweep, Multi Channel Sweep

*Block1* [*Block2*] . . . . <terminator>

*Block1* is the block of data measured at the first sweep step. *Block2* is the block of data measured at the second sweep step.

where *Block* consists of the following data:

*Data1* [*Data2*] . . . . [*Source\_data*]

*DataN* (*N*: integer) is the value measured by a channel. The order of *Data* is defined by the MM command.

*Source\_data* is the sweep source output value. It is sent if the data output is enabled by the FMT command.

#### Pulsed Sweep, Staircase Sweep with Pulsed Bias

*Block1* [*Block2*] . . . . <terminator>

*Block1* is the block of data measured at the first sweep step. *Block2* is the block of data measured at the second sweep step.

where *Block* consists of the following data:

*Data* [*Source\_data*]

*Data* is the value measured by the channel you specify by using the MM command.

*Source\_data* is the sweep source output value. It is sent if the data output is enabled by the FMT command.

#### Linear Search, Binary Search

*Data\_search* [*Data\_sense*] <terminator>

This is the data at the measurement point closest to the search target.

*Data\_search* is the value forced by the search output channel.

*Data\_sense* is the value measured by the search monitor channel. It is sent if data output is enabled by the BSVM command for the binary search, or the LSVM command for the linear search.

## Data Elements

The measurement data (*Data*), source output data (*Source\_data*), and search data (*Data\_search* and *Data\_sense*) are the 4 byte data as shown below.

Byte 1								Byte 2								Byte 3								Byte 4							
7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
A		B		C				D								E			F												

There are 6 data elements. Details of the elements are described in the following pages.

- A:** Measurement or source output data type. One bit.
- B:** Data type. One bit.
- C:** Measurement or output range. Five bits.
- D:** Data. 17 bits.
- E:** Status. Three bits.
- F:** Channel number. Five bits.

Programming Basics  
Data Output Format

**A** Measurement or source output data type. One bit.

<b>A</b>	<b>Explanation</b>
0	Source output data.
1	Measurement data.

**B** Data type. One bit.

<b>B</b>	<b>Explanation</b>
0	Voltage data.
1	Current data.

**C** Measurement or output range. Five bits.

<b>C</b>	<b>Explanation</b>
01000 (8)	0.5 V or 1 pA range.
01001 (9)	5 V or 10 pA range.
01010 (10)	100 pA range.
01011 (11)	2 V or 1 nA range.
01100 (12)	20 V or 10 nA range.
01101 (13)	40 V or 100 nA range.
01110 (14)	100 V or 1 $\mu$ A range.
01111 (15)	200 V or 10 $\mu$ A range.
10000 (16)	100 $\mu$ A range.
10001 (17)	1 mA range.
10010 (18)	10 mA range.
10011 (19)	100 mA range.
10100 (20)	1 A range for E5280B/E5290A HPSMU or 200 mA range for E5291A MPSMU.
11111 (21)	Invalid data is returned.

**D**

Value of *Data*, *Source\_data*, *Data\_search*, or *Data\_sense*.

This value is expressed in 17-bit binary data. The value can be calculated by the following formula.

$$\text{Measurement data} = \text{Count} \times \text{Range} / 50000$$

$$\text{Source data} = \text{Count} \times \text{Range} / 20000$$

where, *Count* is the decimal value of *D*, and *Range* is the measurement range or output range indicated by *C*.

For the current data, the Range value can be calculated by the following formula:

$$\text{Range} = 10^{(C-20)}$$

If the top bit of the 17-bit binary data is 0, the *Count* is positive and equal to the decimal value of the 16-bit binary data that follows the top bit.

If the top bit is 1, the *Count* is negative. Calculate the *Count* by subtracting 65536 (1000000000000000 in binary) from the decimal value of the 16-bit binary data.

**Example:**

If the output binary data is:

1101011000010011100010000000001

then,

**Data type:** Current measurement data (*A*=1, *B*=1)

**Range:** 1 nA=1E-9 A (*C*=01011)

**Count:** 5000 (*D*=00001001110001000)

**Status:** Normal condition (*E*=000)

**Channel:** SMU1 (channel number 1) (*F*=00001)

$$\text{Measurement data} = 5000 \times 1\text{E-}9/5\text{E+}4 = 100 \text{ pA}$$

---

**NOTE**

---

*B*=1 and *C*=10100 means that HPSMU used 1 A range or MPSMU used 200 mA range. Then use *Range*=1 to calculate the data for both HPSMU and MPSMU. *Range*=0.2 is not available even if the range value is 200 mA.

## Programming Basics

### Data Output Format

#### E

Status. Three bits.

- Status for *Source\_data*:

Priority of appearance is 001<010.

<b>E</b>	<b>Explanation</b>
001	Data is for the first or intermediate sweep step.
010	Data is for the last sweep step.

- Status for *Data*, *Data\_search*, or *Data\_sense*. See Table 1-4.

Priority of appearance is as follows:

- For the quasi-pulsed spot measurement: 0<1<2<3<4<6 or 7
- For other measurement: 0<6<7<1<2<3<4<5

#### F

Channel number of the measurement/source channel. Five bits.

<b>F</b>	<b>Explanation</b>
00001 (1)	Channel 1.
00010 (2)	Channel 2.
00011 (3)	Channel 3.
00100 (4)	Channel 4.
00101 (5)	Channel 5.
00110 (6)	Channel 6.
00111 (7)	Channel 7.
01000 (8)	Channel 8.
11111 (31)	Invalid data is returned.

Table 1-4

Status for Data, Data\_search, or Data\_sense

E	Explanation
000 (0)	No status error occurred.
001 (1)	Another channel reached its compliance setting.
010 (2)	This channel reached its compliance setting.
011 (3)	Measurement data is over the measurement range. <i>D</i> will be the meaningless value 111111111111111 (65535).
100 (4)	One or more channels are oscillating. Or source output did not settle before measurement. <sup>a</sup>
110 (6)	For linear or binary search measurement, the target value was not found within the search range. Returns the source output value. For quasi-pulsed spot measurement, the detection time was over the limit (3 s for Short mode, 12 s for Long mode). <sup>b</sup>
111 (7)	For linear or binary search measurement, the search measurement was stopped. Returns the source output value. See status of <i>Data_sense</i> . For quasi-pulsed spot measurement, output slew rate was too slow to perform the settling detection. <sup>c</sup> Or quasi-pulsed source channel reached the current compliance before the source output voltage changed 10 V from the start voltage. <sup>d</sup>

- a. Make the wait time or delay time longer. Or make the current compliance larger. For pulsed measurement, make the pulse width longer, or make the pulse base value closer to the pulse peak value. For current output by limited auto ranging, make the output range lower.
- b. Make the current compliance or start voltage larger. Or set the detection interval to Long. If this status occurs with the Long mode, perform the spot measurement.
- c. Make the current compliance larger. Or set the detection interval to Long. If this status occurs with the Long mode, perform the spot measurement or pulsed spot measurement.
- d. Perform the pulsed spot measurement or spot measurement.

## GPIB Interface Capability

The following table lists the GPIB capabilities and functions of the Agilent E5260/E5270. These functions provide the means for an instrument to receive, process, and transmit, commands, data, and status over the GPIB bus.

Interface Function	Code	Description
Source Handshake	SH1	Complete capability
Acceptor Handshake	AH1	Complete capability
Talker	T6	Basic Talker: YES Serial Poll: YES Talk Only Mode: NO Unaddress if MLA (my listen address): YES
Listener	L4	Basic Listener: YES Unaddress if MTA (my talk address): YES Listen Only Mode: NO
Service Request	SR1	Complete capability
Remote/Local	RL1	Complete capability (with local lockout)
Parallel Poll	PP0	No capability
Device Clear	DC1	Complete capability
Device Trigger	DT1	Complete capability
Controller Function	C0	No capability
Driver Electronics	E1	Open Collector

The E5260/E5270 responds to the following HP BASIC statements:

- ABORT (IFC)
- CLEAR (DCL or SDC. same as AB command)
- LOCAL (GTL)
- LOCAL LOCKOUT (LL0)
- REMOTE
- SPOLL (Serial Poll)
- TRIGGER (GET. same as XE command)



## Status Byte

Status byte bits are turned off or on (0 or 1) to represent the instrument operation status. When you execute a serial poll, an external computer (controller) reads the contents of the status byte, and responds accordingly. When an unmasked status bit is set to “1”, the instrument sends an SRQ to the controller, causing the controller to perform an interrupt service routine.

Bit	Decimal Value	Description
0	1	Data Ready Indicates whether the output buffer is empty. If an unread data or query response exists, this bit is set to “1”. It is set to “0” when all the stored data has been transferred to the controller, or when the E5260/E5270 receives a *RST, BC, FMT, or device clear command.
1	2	Wait Indicates whether the instrument is in the wait status. This bit is set to “1” when the E5260/E5270 has been set to the wait state by the PA, WS, PAX, or WSX command. It is set to “0” when the waiting condition is complete, or when the E5260/E5270 receives a *RST or device clear command.
2	4	Not used. This bit is always set to “0”.
3	8	Interlock Open If the interlock circuit is open, and a voltage output or voltage compliance setup value exceeds $\pm 42$ V, this bit is set to “1”. It is set to “0” when the E5260/E5270 receives a serial poll, *RST, or device clear command.
4	16	Set Ready If the E5260/E5270 receives a GPIB command or a trigger signal, this bit is set to “0”. It is set to “1” when its operation is completed. This bit is also set to “0” when the self-test or calibration is started by front panel operation, and set to “1” when it is completed.

Programming Basics  
Status Byte

Bit	Decimal Value	Description
5	32	<p>Error</p> <p>Indicates whether any error has occurred. If an error occurred, this bit is set to “1”. It is set to “0” when the E5260/E5270 receives a serial poll, *RST, ERR?, CA, *TST?, *CAL?, DIAG? or device clear command.</p>
6	64	<p>RQS (You cannot mask this bit.)</p> <p>Indicates whether an SRQ (Service Request) has occurred. This bit is set to “1” whenever any other unmasked bit is set to “1”. This causes the E5260/E5270 to send an SRQ to the controller. It is set to “0” when the E5260/E5270 receives a serial poll, *RST, or device clear command.</p>
7	128	<p>Shutdown</p> <p>If the E5260/E5270 turned off by itself to avoid damage, or an instantaneous power down occurred on the site power line, this bit is set to “1”. It is set to “0” when the E5260/E5270 receives a serial poll, *RST, or device clear command.</p>

The status byte register can be read with either a serial poll or the \*STB? query command. Serial poll is a low-level GPIB command that can be executed by the SPOLL command in HP BASIC, for example `Status=SPOLL (@E5270)`.

In general, use serial polling (not \*STB?) inside interrupt service routines. Use \*STB? in other cases (not in interrupt service routine) when you want to know the value of the Status Byte.

---

**NOTE**

If Bit 3, Bit 5, or Bit 7 are masked, they are not set to “0” by a serial poll. Also, if these bits are masked, set to “1”, and then unmasked, a serial poll does not set them to “0”.

After a masked bit is set to “1”, removing the mask does not set Bit 6 to “1”. That is, the E5260/E5270 does not send an SRQ to the controller. Therefore, if you remove a mask from a bit, it is usually best to do it at the beginning of the program.

---

---

## Programming Tips

This section provides the following additional information on creating measurement programs. It is useful for checking the operation status, improving the measurement speed, and so on.

- “To Confirm the Operation”
- “To Confirm the Command Completion”
- “To Disable the Auto Calibration”
- “To Optimize the Measurement Range”
- “To Optimize the Integration Time”
- “To Disable the ADC Zero Function”
- “To Optimize the Source/Measurement Wait Time”
- “To Use the Internal Program Memory”
- “To Get Time Data with the Best Resolution”
- “To Use Sweep Source as a Constant Source”
- “To Start Measurements Simultaneously”
- “To Interrupt Command Execution”
- “To Use Programs for Agilent 4142B”
- “To Use Programs for Agilent 4155/4156”
- “To Use Programs for Agilent E5270A”

## To Confirm the Operation

To complete the measurement program, you can insert statements to check the E5260/E5270 operation status as shown below. This example starts the measurement, checks the status caused by the statements before the ERR? command, reads and displays the measurement data without errors, or displays an error message when an error occurs.

```
OUTPUT @E5270;"XE"  
OUTPUT @E5270;"ERR? 1"  
ENTER @E5270;Code  
IF Code=0 THEN  
    ENTER @E5270 USING "#,3X,12D,X";Mdata  
    PRINT "I(A)=";Mdata  
ELSE  
    OUTPUT @E5270;"EMG? ";Code  
    ENTER @E5270;Msg$  
    PRINT "ERROR: ";Msg$  
END IF
```

## To Confirm the Command Completion

To check the completion of the previous command execution, use the \*OPC? query command. Entering the \*OPC command before sending a command to other equipment serves to delay its operation until the E5260/E5270 has completed its operation. The \*OPC? command is useful to control equipments sequentially.

For example, the following program segment waits until the E5260/E5270 completes the DI command execution, and sends the DCV command to equipment identified by @Address.

```
OUTPUT @E5270;"DI";1,0,1.0E-10,1  
OUTPUT @E5270;"*OPC?"  
ENTER @E5270;A$  
OUTPUT @Address;"DCV"
```

## To Disable the Auto Calibration

The auto calibration function triggers self-calibration automatically every 30 minutes after measurement. When the function is enabled, open the measurement terminals frequently because calibration requires open terminals.

If you execute automatic measurements as a batch job that might leave the device connected for over 30 minutes after the measurements, disable auto calibration. Otherwise, the calibration might not be performed properly, or unexpected output might appear at the measurement terminals, and it could even damage the device. To disable auto calibration, send the CM 0 command.

## To Optimize the Measurement Range

The most effective way to improve measurement speed is to reduce the number of range changes. The limited auto ranging mode is more effective than the auto ranging mode. The fixed range mode is the most effective.

Check the typical value of the measurement data, select the optimum range, and perform measurement using the fixed range mode.

## To Optimize the Integration Time

For best reliability and repeatability of the measurement data, the integration time or the number of averaging samples of the A/D converter must be increased. This increases the measurement time.

A long integration time and numerous samples are required for low current/ voltage measurements. However, the values can be decreased for medium or high current/voltage measurements. Enter the following commands:

- AV** Sets the number of averaging samples of the A/D converter. This command is compatible with the AV command of the Agilent 4142B.
- AAD** Selects the type of the A/D converter (high-speed ADC or high-resolution ADC) of the Agilent E5270B.
- AIT** Sets the integration time of the high-resolution ADC or the number of averaging samples of the high-speed ADC of the Agilent E5270B. The AIT command covers the function of the AV command. The last command setting is available for the measurement.

For more information regarding these commands, refer to Chapter 4, “Command Reference.” The AAD/AIT commands are available only for the Agilent E5270B.

## To Disable the ADC Zero Function

This information is effective only for the Agilent E5270B and when the high resolution A/D converter is used for the measurement. If measurement speed is given top priority or is more important than reliability, disable the ADC zero function by sending the AZ 0 command. This roughly halves integration time.

---

**NOTE**

---

The ADC zero function is the function to cancel offset of the high resolution ADC. This function is especially effective for low voltage measurements.

## To Optimize the Source/Masurement Wait Time


If measurement speed is given top priority or is more important than reliability, set the wait time shorter by using the WAT command. The source wait time is the time the source channel always waits before changing the source output value. The measurement wait time is the time the measurement channel always waits before starting measurement. The time is given by the following formula:

$$\text{wait time} = \text{initial wait time} \times A+B$$

where, *initial wait time* is the time the E5260/E5270 automatically sets and you cannot change. The *initial source wait time* is not the same as the *initial measurement wait time*. *A* and *B* are the command parameters of the WAT command.

The wait time settings are effective for all modules.

Figure 1-1 Source/Masurement Wait Time

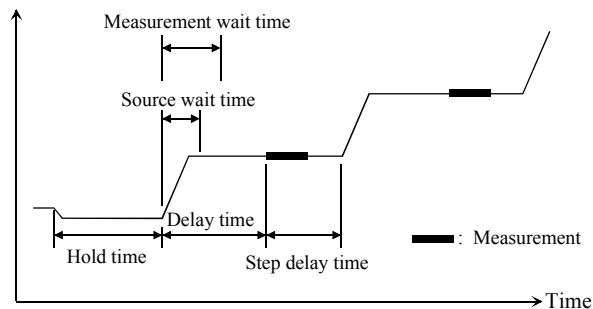

---

### NOTE

The wait time can be ignored if it is shorter than the delay time.

It is not easy to determine the best wait time. If you specify it too short, the measurement may start before device characteristics stable. If too long, time will be wasted.

The initial wait time may be too short for measurements of high capacitance or slow response devices. Then set the wait time longer.

For measurements of low capacitance or fast response devices, if measurement speed has top priority or is more important than reliability and accuracy, set the wait time shorter.

## To Use the Internal Program Memory

If your program repeats the setup and measurement for a number of devices, use the internal program memory. For these measurements, using the internal program memory reduces the command transfer time, and improves the program execution speed.

You can enter a maximum of 2,000 programs (total 40,000 commands) into the internal program memory. Refer to Chapter 2, “Remote Mode Functions.”

## To Get Time Data with the Best Resolution

To read the time data with the best resolution (100  $\mu$ s), the timer must be cleared within the following interval:

- 100 sec or less (for FMT1, 2, or 5 data output format)
- 1000 sec or less (for FMT 11, 12, 15, 21, 22, or 25 data output format)

Send the TSR command to clear the timer.

## To Use Sweep Source as a Constant Source

The following setup enables sweep source to force a constant current or voltage.

- Sweep start value = Sweep stop value (for WI, WV, or WNX).

Also, setting number of sweep steps to 1 enables to perform a spot measurement.

## To Start Measurements Simultaneously

Spot measurement, staircase sweep measurement, and multi channel sweep measurement enable to use multiple measurement channels. Then the measurement channels perform measurement in the order defined in the MM command. However, the measurement channels with the following setup start measurements simultaneously.

- To set the multi channel sweep measurement mode (MM 16).
- To set the measurement ranging mode to fixed (for RI or RV).
- For the Agilent E5270B, to use the high-speed ADC (use AV).

---


### NOTE

Measurement setup is independent from source output setup. So, this simultaneous measurement cannot be broken by the source output setup. Any setting of the output ranging mode is effective for the simultaneous measurement.

## To Perform Quasi-Sampling Measurement

The following setup enables to perform a quasi-sampling measurement. Then the sampling interval will be sum of delay time and step delay time.

- Sets the sweep measurement mode (MM 2 or MM 16).
- Sweep start value = Sweep stop value (for WI, WV, or WNX).
- Sets hold time, delay time, and step delay time (WT).

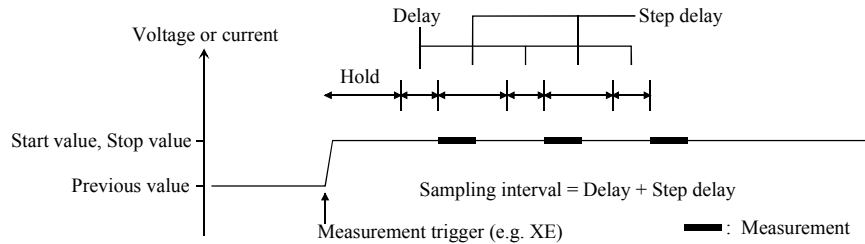

## To Interrupt Command Execution

The E5260/E5270 executes commands in the received order. However, only the following commands can interrupt the command execution.

Table 1-5

### Interrupt Commands

Command	Description
AV	Changes the number of averaging samples during the measurement.
AIT	Changes the integration time during the measurement.
AB	Aborts the command execution.
*RST	Resets the E5260/E5270 during the command execution.
XE	If the E5260/E5270 has been set to the wait status by the PA or PAX command, the XE command can be used to release the wait status. For details, refer to Chapter 4, "Command Reference."



## To Use Programs for Agilent 4142B

Agilent E5260/E5270 supports most of the commands and the data output format supported by the Agilent 4142B Modular DC Source/Monitor. To reuse the programs created for the Agilent 4142B, confirm the following and modify the programs if necessary.

- To remove all unsupported commands

Some commands are not supported owing to differences in the modules supported by each instrument. Refer to Table 1-6 that shows the commands not supported by the E5260/E5270. Do not use these commands.

Perform the linear search or binary search measurement as a substitute for the analog search measurement that needs the analog feedback unit (AFU).

Use a source/monitor unit (SMU) instead of the voltage source/voltage monitor unit (VS/VMU). Note that the SMU cannot perform the differential voltage measurements.

- FL command

The initial setting of the FL command is different. It is ON for the Agilent 4142B, and OFF for the E5260/E5270.

Add the FL1 command to use the filter.

- AV command

This command is used to set the A/D converter of the E5260/E5270.

To set the high resolution ADC installed in the E5270B, use the AAD and AIT commands.

**Table 1-6**

### Modules and Commands Unsupported

Plug-in Module	Commands
Analog Feedback Unit	ASM, AT, ASV, AIV, AVI
High Current Unit	PDM, PDI, PDV
High Voltage Unit	POL
Voltage Source/Voltage Monitor Unit	VM

## To Use Programs for Agilent 4155/4156

Agilent E5260/E5270 supports commands similar to the FLEX command of the Agilent 4155B/4156B/4155C/4156C Parameter Analyzer. However, not all command sets are fully compatible. To reuse the programs created for the Agilent 4155/4156, the following modifications are required.

- To remove all unsupported commands

Table 1-7 shows the commands not supported by the E5260/E5270. You cannot use these commands. The SCPI commands and 4145 syntax commands are not supported either.

The E5260/E5270 does not need the US and :PAGE commands that are necessary to change the control mode of the Agilent 4155/4156.

- To check and correct the command syntax

Even if the command name is the same, the available parameters and values may be different. Check and correct the command parameters.

- To change the FMT command parameter

Use the FMT 21, FMT 22, or FMT 25 command that sets the data output format compatible with the 4155/4156 ASCII format.

- To delete RMD?

The E5260/E5270 does not need the RMD? command that is necessary to put the measurement data into the output data buffer of the Agilent 4155/4156.

- FL command

The initial setting of the FL command is different. It is ON for the Agilent 4155/4156, and OFF for the E5260/E5270.

Add the FL1 command to use the filter.

- AV command

This command is used to set the A/D converter of the E5260/E5270.

To set the high resolution ADC installed in the E5270B, use the AAD and AIT commands.

- To replace TI?/TV?/TTI?/TTV? with TI/TV/TTI/TTV respectively
- To replace WM with LSM for the linear search measurement
- To replace TSQ? with TSQ

- If you reuse the built-in IBASIC programs:
  - Change the GPIB address.
  - Remove the statements to use the built-in flexible disk drive.

**Table 1-7 FLEX Commands Unsupported**

Category	Command
Control mode	:PAGE, US, US42
Measurement mode	VM, VMD
Staircase/pulsed sweep source setup	ESC
Sampling source setup	MCC, MI, MP, MSC, MV
Quasi-static CV measurement setup	QSL, QSM, QSR, QST, QSV, QSZ, QSZ?
PGU control	POR, SPG, SPP, SRP
Stress source setup	STC, STI, STM, STP, STT, STV
Measurement setup	MT
Integration time	SIT, SLI
Measurement execution	TI?, TTI?, TTV?, TV?
Time stamp	TSQ?
Output data	RMD?
Abort/pause/wait	*WAI
Zero offset cancel	GOC, SOC
SMU/PGU selector	SSP
R-box	RBC
External trigger	STG
Network operation	CLOSE, OPEN, PRN, RD?, SDSK, SPL, SPR, WR
Status byte	*CLS, *ESE(?), *ESR?
Query	CMD?, *OPT?, :SYST:ERR?

## To Use Programs for Agilent E5270A

Agilent E5270B supports all of the commands and the data output format supported by the Agilent E5270 series.

Agilent E5260 series supports most of the commands and the data output format supported by the Agilent E5270 series. To reuse the programs created for the Agilent E5270 series, confirm the following and modify the programs if necessary.

- To remove all unsupported commands

The following commands are not supported by the Agilent E5260 series. Do not use the commands.

- AAD

E5260 series does not have the function corresponding to this command.

- AIT

Use the AV command instead of this command.

- AZ

E5260 series does not have the function corresponding to this command.

- Measurement range

Agilent E5260 series does not have the 1 nA range and the 10 nA range. Use the 100 nA range or above.

---

## **2** **Remote Mode Functions**

## Remote Mode Functions

This chapter describes the functions of the Agilent E5260/E5270 in the remote mode, and the initial settings.

- “Measurement Modes”
- “Synchronous Output”
- “Automatic Sweep Abort Function”
- “Program Memory”
- “Digital I/O Port”
- “Trigger Function”
- “Initial Settings”

---

**NOTE**

### Synchronous Output

You can use synchronous output that will be synchronized to the output of the primary sweep or search source. The output is available for the following measurement modes:

- “Staircase Sweep Measurements”
- “Pulsed Sweep Measurements”
- “Staircase Sweep with Pulsed Bias Measurements”
- “Binary Search Measurements”
- “Linear Search Measurements”

The synchronous source supports the output mode (voltage or current) same as the primary source, and does not support the pulsed output.

---

## Measurement Modes

The Agilent E5260/E5270 provides the following measurement modes.

- “Spot Measurements”
- “Pulsed Spot Measurements”
- “Staircase Sweep Measurements”
- “Multi Channel Sweep Measurements”
- “Pulsed Sweep Measurements”
- “Staircase Sweep with Pulsed Bias Measurements”
- “Quasi-Pulsed Spot Measurements”
- “Binary Search Measurements”
- “Linear Search Measurements”

---

### NOTE

#### About Search Measurements

The E5260/E5270 supports search measurement to find a point on an I-V curve where a specified condition is satisfied. For example, it searches for a breakdown voltage or threshold voltage at a specified current.

Search measurements are performed by one or two SMUs. For two SMUs, one is the search channel, and the other is a sense channel. When one SMU is used, it serves as both search and sense channel.

Basically, the search channel forces voltage or current until the search stop condition is satisfied.


---

## Spot Measurements

Spot measurement is performed as shown below. The measurement channel performs one point measurement.

Figure 2-1

### Spot Measurements

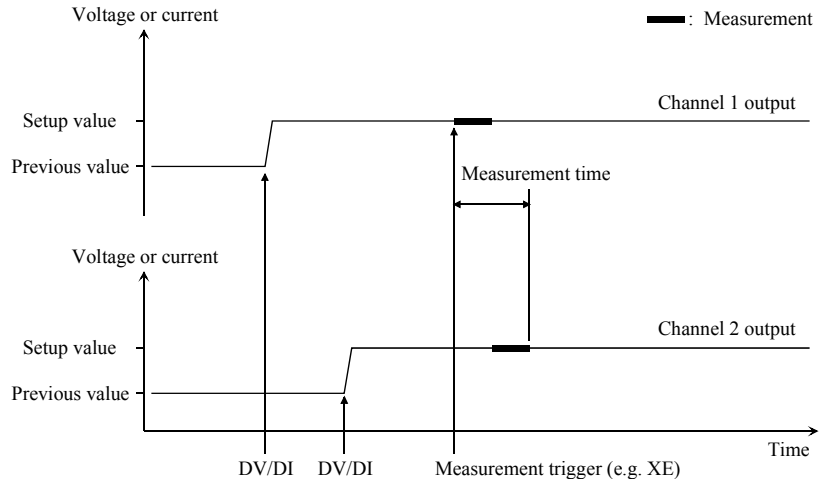

1. The source channel starts output by the DV or DI command.

You can use up to eight channels for the 8-ch mainframe, two channels for the 2-ch mainframe.

2. The measurement channel starts measurement by a trigger, such as the XE command. If the trigger is received during the settling time of the source channels, measurement starts after the settling time.

You can use up to eight channels for the 8-ch mainframe, two channels for the 2-ch mainframe. If you use multiple measurement channels, the channels perform measurement in the order defined in the MM command.

3. After measurement, the source channels continue the source output.

For 0 V output, enter the DZ command that is used to memorize the present settings of the channel and change the output to 0 V.

---

#### NOTE

---

The DV command is used to force voltage, and the DI command is used to force current.




## Pulsed Spot Measurements

Pulsed spot measurement is performed as shown below. The measurement channel performs one point measurement while the source channel is forcing a pulse.

Figure 2-2

### Pulsed Spot Measurements

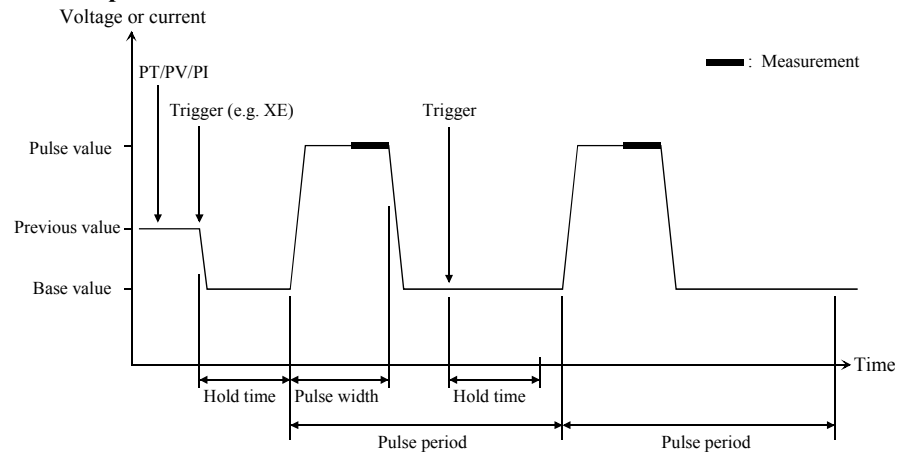

1. The pulse source channel sets output by the PT command and the PV or PI command. Only one channel can be used for the pulse source.
2. The pulse source channel starts output by a trigger, such as the XE command.
3. The measurement channel starts measurement as shown in Figure 2-2. The channel performs measurement so that the pulse width and pulse period are kept (the integration time setting is ignored). Only one channel can be used for measurement.
4. After measurement, the pulse source channel forces the pulse base value.

If the next trigger occurs within the pulse period, and if the rest of the pulse period is longer than the hold time as shown in Figure 2-2, the pulse source waits for the rest, then starts the pulse output immediately. If the rest of the pulse period is shorter than the hold time, the pulse source waits for the hold time since the last trigger, then starts the pulse output.

For 0 V output, enter the DZ command that is used to memorize the present settings of the channel and change the output to 0 V.

---

#### NOTE

---


The PT command sets the pulse timing parameters, such as pulse width and pulse period. The PV command sets voltage pulse, and the PI command sets current pulse.

## Staircase Sweep Measurements

Staircase sweep measurement is performed as shown below. The source channel forces staircase sweep voltage or current, and the measurement channel performs one point measurement at each sweep step.

Figure 2-3

### Staircase Sweep Measurements

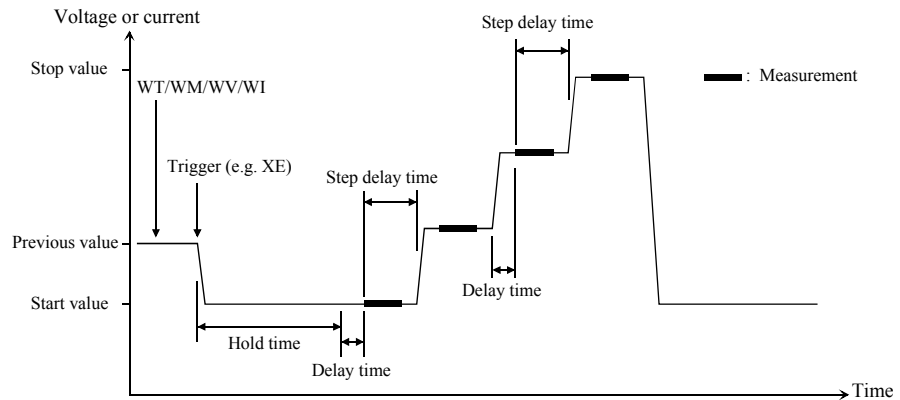

1. The staircase sweep source sets output by the WT, WM, and WV or WI commands. Only one channel can be used for the sweep source.
2. The sweep source starts output by a trigger, such as the XE command.
3. After the hold time, the sweep source waits for the delay time.
4. After the delay time, the measurement channel starts measurement.

You can use up to eight channels for the 8-ch mainframe, two channels for the 2-ch mainframe. If you use multiple measurement channels, the channels perform measurement in the order defined in the MM command.

5. After measurement, the sweep source waits for the rest of the step delay time if it is set, and the sweep source changes the output value.
6. The E5260/E5270 repeats 4 and 5 for all sweep steps.
7. After the sweep measurement, the sweep source forces the start or stop value, as specified by the WM command, and keeps it.

For 0 V output, enter the DZ command that is used to memorize the present settings of the channel and change the output to 0 V.

**NOTE**


The WT command sets the hold time, delay time, and step delay time. The WM command sets the automatic sweep abort function and the output after sweep. The WV command sets the sweep voltage, and the WI command sets the sweep current. The start and stop values must have the same polarity for log sweep.

**To Use  
Synchronous  
Sweep Source**

One more channel can be set up as a sweep source that has the output synchronized with the staircase sweep. Refer to “Synchronous Output” on page 2-21. After the measurement, the synchronous sweep source forces the start or stop value, as specified by the WM command, and keeps it.

Figure 2-4

**Synchronous Sweep**

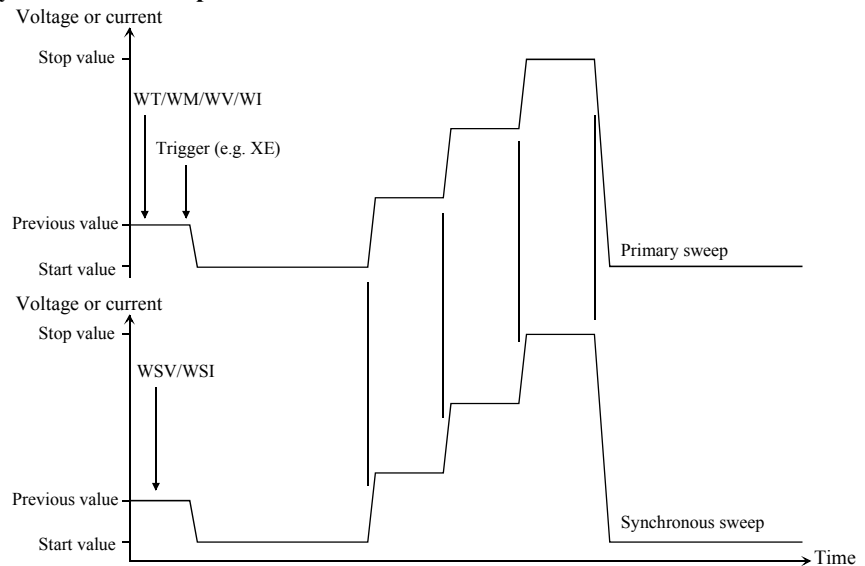

**NOTE**

The WSV command sets the sweep voltage, and the WSI command sets the sweep current. You can use the same output mode (voltage or current) as the primary sweep. The start and stop values must have the same polarity for log sweep.

**To Stop Sweep  
Output**

An automatic sweep abort function is available. Refer to “Automatic Sweep Abort Function” on page 2-23.


Even if the automatic sweep abort function is disabled, the E5260/E5270 automatically stops measurement if power compliance is enabled for the sweep source and the power compliance or an automatic sweep abort condition is detected.

## Multi Channel Sweep Measurements

Multi channel sweep measurement is performed as shown below. The source channel forces staircase sweep voltage or current, and the measurement channel performs one point measurement at each sweep step. Up to eight channels can be used for both sweep output and measurement. Both voltage output mode and current output mode are available for the sweep sources regardless of the output mode of the primary sweep source.

Figure 2-5

### Multi Channel Sweep Measurements using High-Resolution A/D Converter

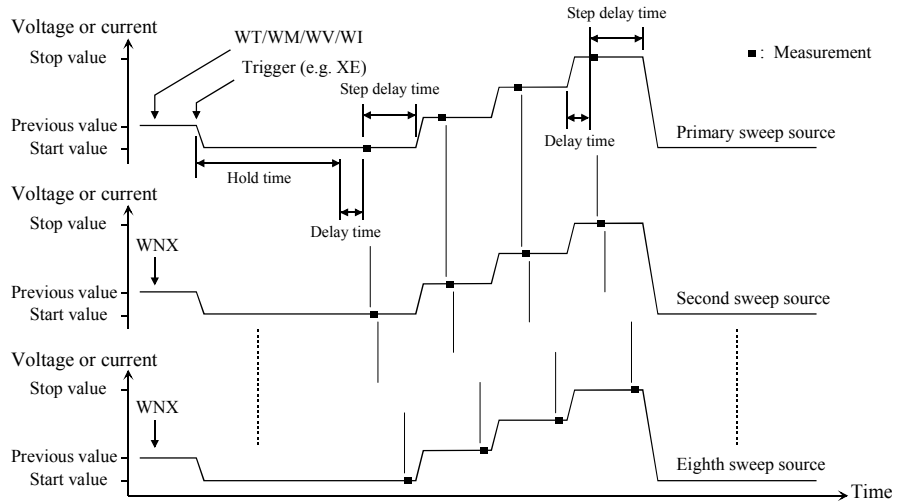

1. The primary sweep source sets output by the WV or WI commands. And the  $n$ th ( $n=2$  to 8) sweep source sets output by the WNX command.
2. The sweep sources simultaneously start output by a trigger, such as the XE command. However, if a sweep source sets power compliance or forces logarithmic sweep current, the sweep sources start output in the order specified by the  $n$  value. Then the first output is forced by the channel set by the WI or WV command.
3. After the hold time, the sweep sources wait for the delay time.
4. After the delay time, the measurement channel starts measurement. If you use multiple measurement channels, the channels that use the fixed measurement ranging mode start measurement simultaneously, then other channels perform measurement in the order defined in the MM command.

For the Agilent E5270B, note that the high-resolution ADC cannot perform simultaneous measurement.

5. After measurement, the sweep source waits for the rest of the step delay time if it is set, and the sweep source changes the output value.
6. The E5260/E5270 repeats 4 and 5 for all sweep steps.
7. After the sweep measurement, the sweep sources force the start or stop value, as specified by the WM command, and keep it.

For 0 V output, enter the DZ command that is used to memorize the present settings of the channel and change the output to 0 V.

---

**NOTE**

The WT command sets the hold time, delay time, and step delay time. The WM command sets the automatic sweep abort function and the output after sweep. The WV/WI command sets the output of the first sweep source, and the WNX command sets the output of the  $n$ th ( $n=2$  to 8) sweep source. The start and stop values must have the same polarity for log sweep.

---

**To Stop Sweep Output**

An automatic sweep abort function is available. Refer to “Automatic Sweep Abort Function” on page 2-23.


Even if the automatic sweep abort function is disabled, the E5260/E5270 automatically stops measurement if power compliance is enabled for the sweep source and the power compliance or an automatic sweep abort condition is detected.

## Pulsed Sweep Measurements

Pulsed sweep measurement is performed as shown below. The source channel forces pulsed sweep voltage or current, and the measurement channel performs one point measurement at each sweep step.

Figure 2-6

### Pulsed Sweep Measurements

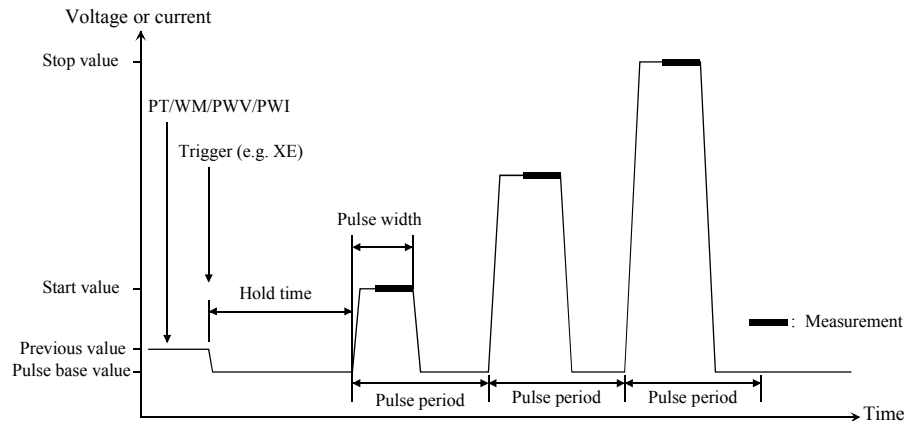

1. The pulsed sweep source sets output by the PT, WM, and PWV or PWI commands. Only one channel can be used for the pulsed sweep source.
2. The pulsed sweep source starts output by a trigger, such as the XE command.
3. After the hold time, the measurement channel starts measurement as shown in Figure 2-6. The channel performs measurement so that the pulse width and pulse period are kept (the integration time setting is ignored). Only one channel can be used for measurement.
4. After measurement, the pulsed sweep source forces the pulse base value, and waits for the rest of the pulse period. Then the pulsed sweep source changes the output value.
5. The E5260/E5270 repeats 3 and 4 for all sweep steps.
6. After the pulsed sweep measurement, the pulsed sweep source forces the pulse base value, and keeps it.

For 0 V output, enter the DZ command that is used to memorize the present settings of the channel and change the output to 0 V.

**NOTE**


The PT command sets the hold time, pulse width, and pulse period. The WM command sets the automatic sweep abort function and the output after sweep. The PWV sets the pulsed sweep voltage, and the PWI sets the pulsed sweep current. The start, stop, and pulse base values must have the same polarity for log sweep.

**To Use  
Synchronous  
Sweep Source**

One more channel can be set up as a staircase sweep source that has the output synchronized with the pulsed sweep. Refer to “Synchronous Output” on page 2-21. After the measurement, the synchronous sweep source forces the start value, and keeps it.

**Figure 2-7**

**Synchronous Sweep**

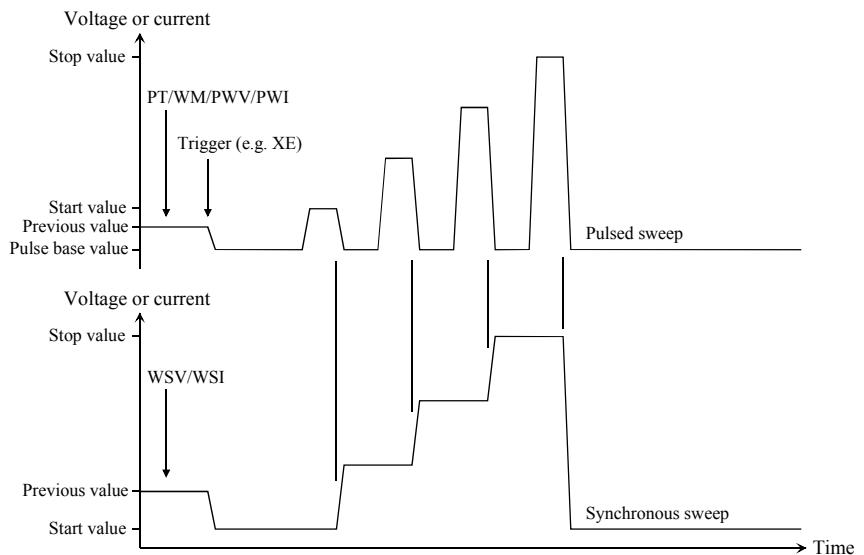

**NOTE**

The WSV command sets the sweep voltage, and the WSI command sets the sweep current. You can use the same output mode (voltage or current) as the pulsed sweep. The start and stop values must have the same polarity for log sweep.

**To Stop Sweep  
Output**

An automatic sweep abort function is available. Refer to “Automatic Sweep Abort Function” on page 2-23.


Even if the automatic sweep abort function is disabled, the E5260/E5270 automatically stops measurement if power compliance is enabled for the sweep source and the power compliance or an automatic sweep abort condition is detected.

## Staircase Sweep with Pulsed Bias Measurements

Staircase sweep with pulsed bias measurement is performed as shown below. The source channel forces staircase sweep voltage or current, the pulse channel forces pulsed bias, and the measurement channel performs one point measurement at each sweep step.

Figure 2-8

### Staircase Sweep with Pulsed Bias Measurements

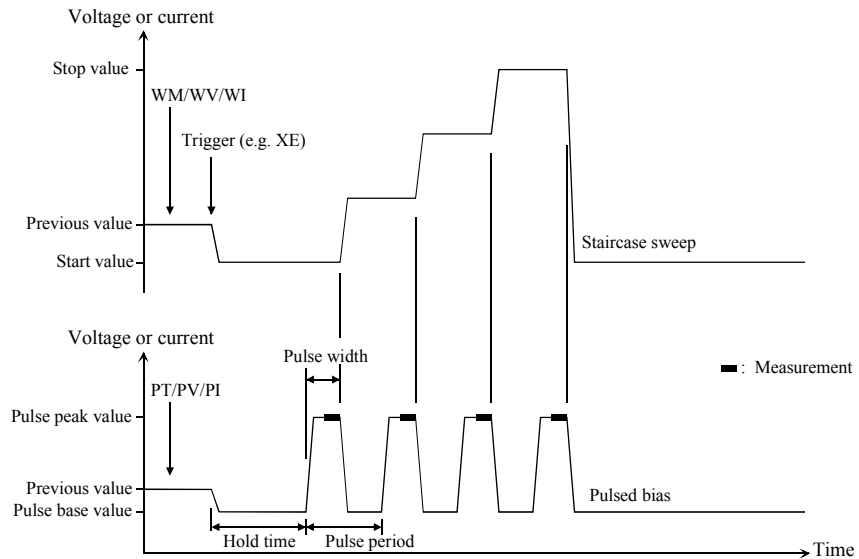

1. The staircase sweep source sets output by the WM, and WV or WI commands. Only one channel can be used for the sweep source.
2. The pulsed source sets output by the PT, and PV or PI commands. Only one channel can be used for the pulsed source.
3. The source channels start output by a trigger, such as the XE command.
4. After the hold time, the measurement channel starts measurement as shown in Figure 2-8. The channel performs measurement so that the pulse width and pulse period are kept (the integration time setting is ignored). Only one channel can be used for measurement.
5. After the measurement, the sweep source changes the output value. Then the pulsed source forces the pulse base value, and waits for the rest of the pulse period until the next pulse output.
6. The E5260/E5270 repeats 4 and 5 for all sweep steps.



- After the sweep measurement, the pulsed source forces the pulse base value, and the sweep source forces the start or stop value, as specified by the WM command, and keeps it.

For 0 V output, enter the DZ command that is used to memorize the present settings of the channel and change the output to 0 V.

**NOTE**

The WM command sets the automatic sweep abort function and the output after sweep. The WV command sets the sweep voltage, and the WI command sets the sweep current. The start and stop values must have the same polarity for log sweep.

The PT command sets the pulse timing parameters, such as pulse width and pulse period. The PV command sets the voltage pulse, and the PI command sets current pulse.


**To Use  
Synchronous  
Sweep Source**

One more channel can be set up as a sweep source that has the output synchronized with the staircase sweep. Refer to “Synchronous Output” on page 2-21.

After the measurement, the synchronous sweep source forces the start or stop value, as specified by the WM command, and keeps it.

**Figure 2-9**

**Synchronous Sweep**

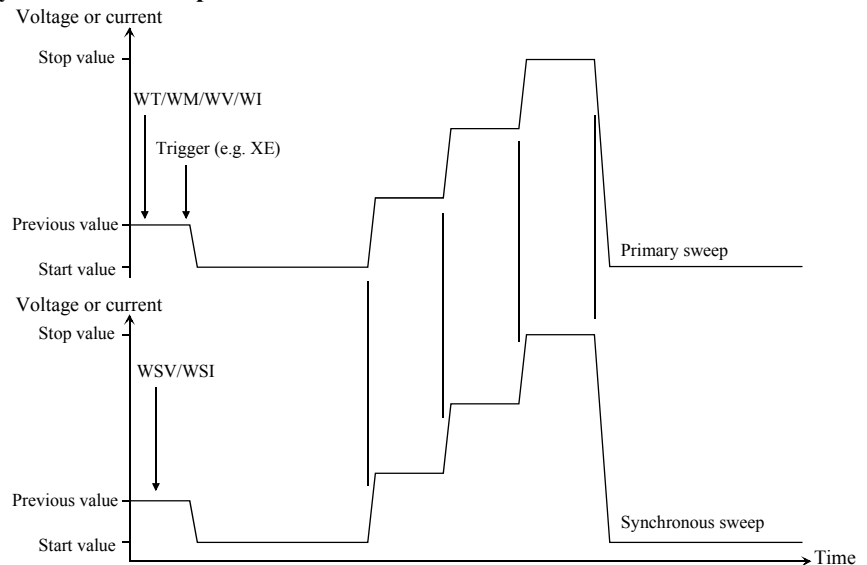

## Remote Mode Functions

### Measurement Modes

---

**NOTE**

---

The WSV command sets the sweep voltage, and the WSI command sets the sweep current. You can use the same output mode (voltage or current) as the primary sweep. The start and stop values must have the same polarity for log sweep.

**To Stop Sweep Output**

An automatic sweep abort function is available. Refer to “Automatic Sweep Abort Function” on page 2-23.


Even if the automatic sweep abort function is disabled, the E5260/E5270 automatically stops measurement if power compliance is enabled for the sweep source and the power compliance or an automatic sweep abort condition is detected.

## Quasi-Pulsed Spot Measurements

Quasi-pulsed spot measurement is performed as shown below. The measurement channel performs one point measurement while the source channel forces a quasi-pulse voltage. This measurement mode can minimize the output time of the measurement voltage. So it is effective for the breakdown voltage measurement and the reliability test.

Figure 2-10

### Quasi-Pulsed Spot Measurements

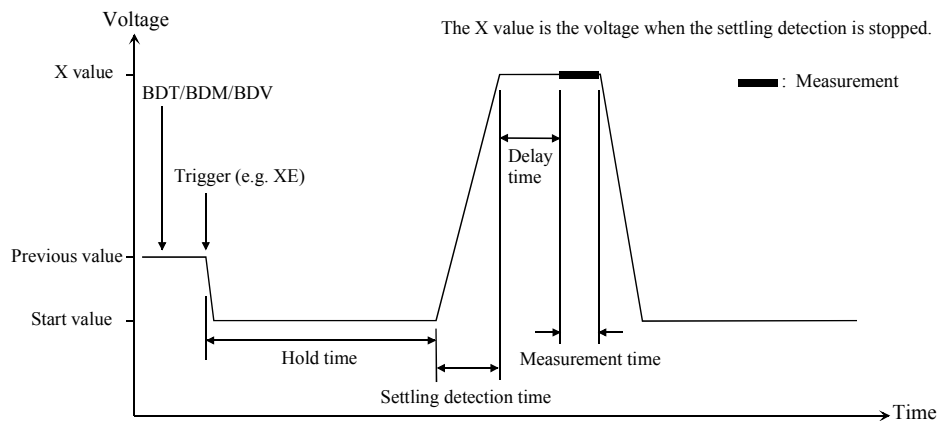

1. The quasi-pulse source channel sets output by the BDT, BDM, and BDV commands. Only one channel can be used for the quasi-pulse source.
2. The quasi-pulse source starts output by a trigger, such as the XE command.
3. After the hold time, the quasi-pulse source starts the voltage transition to the stop value (settling detection time). Also, it performs voltage measurement (settling detection) in the interval set by the BDM command. The voltage transition and settling detection continue until the output voltage slew rate becomes half of the rate when settling detection started. The slew rate depends on the cabling and the characteristics of the device. You cannot define it directly. In normal operation, the slew rate will be slower in the following conditions:
  - When the quasi-pulse source applies voltage close to the stop value.
  - When the quasi-pulse source reaches its current compliance due to the breakdown condition of the device under test.

#### NOTE

If the slew rate was too slow when settling detection started or if the settling detection time was too long, an error occurs and the source returns its output to the start value immediately. See “BDM” on page 4-25.

## Remote Mode Functions

### Measurement Modes

4. After the settling detection stops, the quasi-pulse source keeps the output.
5. After the delay time, the measurement channel starts measurement.  
Only one channel can be used for measurement.
6. After measurement, the quasi-pulse source immediately returns the output to the start value and keeps it.

For 0 V output, enter the DZ command that is used to memorize the present settings of the channel and change the output to 0 V.

---

**NOTE**

---

If there is noise or skew on the output voltage, settling detection might stop at an unexpected voltage.

---

**NOTE**

---


The BDT command sets the hold time and delay time, and the BDM command sets the settling detection interval and measurement mode (voltage or current); the BDV command sets the output. Also |start-stop| must be 10 V or more.

## Binary Search Measurements

Binary search measurement is performed as shown below. The source channel forces voltage or current, and the measurement channel performs one point measurement. The E5260/E5270 repeats this until the search stop condition is satisfied, and returns the source's last output value. The last measurement data is also returned if it is set by the BSVM command.

Figure 2-11

### Binary Search Measurements

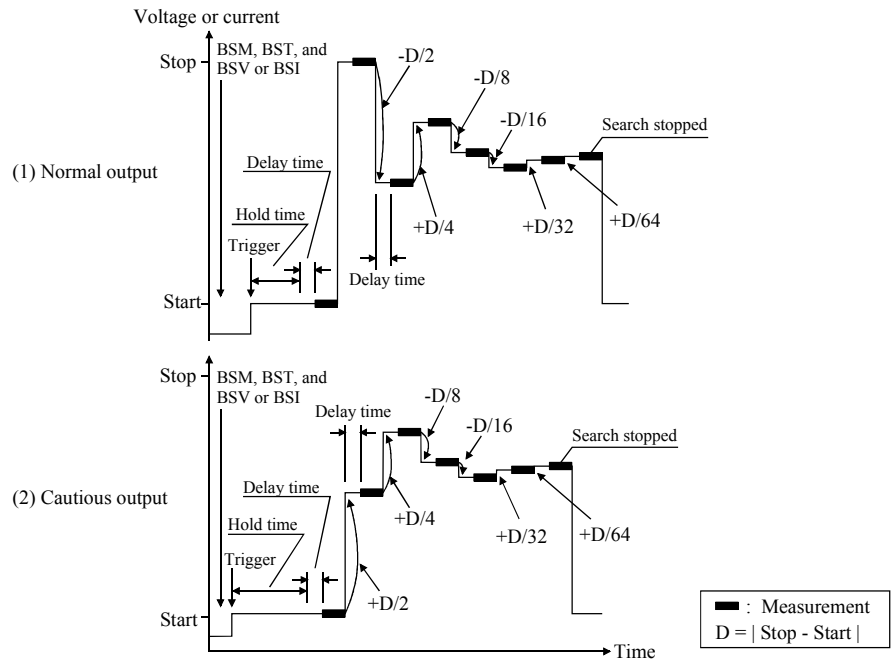

1. The search source sets output by the BSM, BST, and BSV or BSI commands. Only one channel can be used for the search source.
2. The search source starts output by a trigger, such as the XE command.
3. After the hold time, the measurement channel waits for the delay time, and starts measurement as shown in Figure 2-11. The measurement channel can be set by the BGI or BGV command. Only one channel can be used for measurement.
4. After measurement, the search source changes the output value. The output value depends on the output control mode, normal or cautious, selected by the BSM command. See Figure 2-11.

## Remote Mode Functions

### Measurement Modes

5. The E5260/E5270 repeats 3 and 4 until the search stop condition is satisfied. The search stop condition is one of the following conditions selected by the BGI or BGV command.

- Measured value = Search target value  $\pm$  limit
- Number of measurement points > limit

6. After the search measurement, the search source forces the start value, the stop value, or the last output value, as specified by the BSM command, and keeps it.

For 0 V output, enter the DZ command that is used to memorize the present settings of the channel and change the output to 0 V.

---

#### NOTE

The BSM command sets the search control mode, the automatic abort function, and the output after search. The BST command sets the hold time and delay time. The BSV/BSI command sets the search output, and the BGI/BGV command sets the measurement channel.


---

#### To Use Synchronous Output Channel

You can use the synchronous output channel that provides the output synchronized with the search source. Refer to “Synchronous Output” on page 2-21. After measurement, the synchronous channel forces the start+offset, stop+offset, or the last output value, as specified by the BSM command, and keeps it.

Figure 2-12

#### Synchronous Output

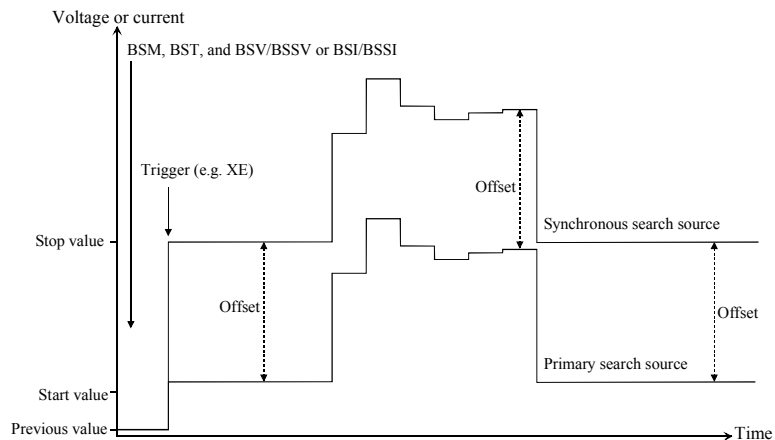

---

#### NOTE

The BSSV/BSSI command sets the synchronous output. You can use the same output mode (voltage or current) as the search source. All output values must be covered by the output range of the search source.


---

## Linear Search Measurements

Linear search measurement is performed as shown below. The source channel sweeps voltage or current, and the measurement channel performs one point measurement at each sweep step. The E5260/E5270 stops sweep and measurement when the search stop condition is satisfied, and returns the source's last output value. The last measurement data is also returned if it is set by the LSVM command.

Figure 2-13

### Linear Search Measurements

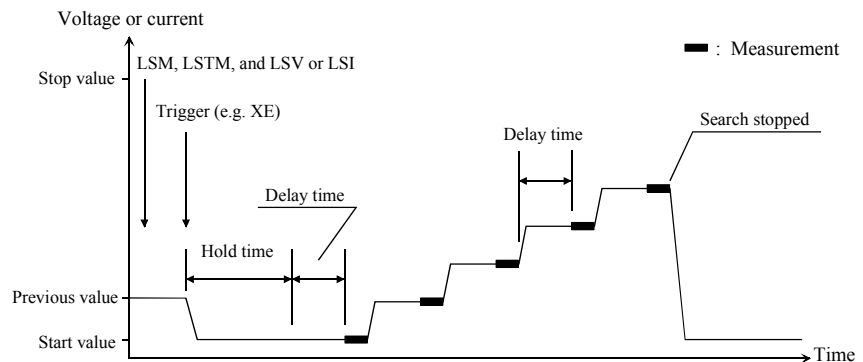

1. The search source sets output by the LSM, LSTM, and LSV or LSI commands. Only one channel can be used for the search source.
2. The search source starts output by a trigger, such as the XE command.
3. After the hold time, the measurement channel waits for the delay time, and starts measurement as shown in Figure 2-13. The measurement channel can be set by the LGI or LGV command. Only one channel can be used for the measurement.
4. After measurement, the search source changes the output value.
5. The E5260/E5270 repeats 3 and 4 until the search stop condition is satisfied. The search stop condition is one of the following conditions selected by the LGV or LGI command.
  - Measured value is over the search target value.
  - Measured value breaks the search target value.
6. After the search measurement, the search source forces the start value, the stop value, or the last output value, as specified by the LSM command, and keeps it.

For 0 V output, enter the DZ command that is used to memorize the present settings of the channel and change the output to 0 V.

## Remote Mode Functions Measurement Modes

---

### NOTE

The LSM command sets the automatic abort function and the output after search. The LSTM command sets the hold time and delay time. The LSV/LSI command sets the search output, and the LGI/LGV command sets the measurement channel.

---


### To Use Synchronous Output Channel

You can use the synchronous output channel that provides output synchronized with the search source. Refer to “Synchronous Output” on page 2-21.

After measurement, the synchronous channel forces the start+offset, stop+offset, or the last output value, as specified by the LSM command, and keeps it.

Figure 2-14

### Synchronous Output

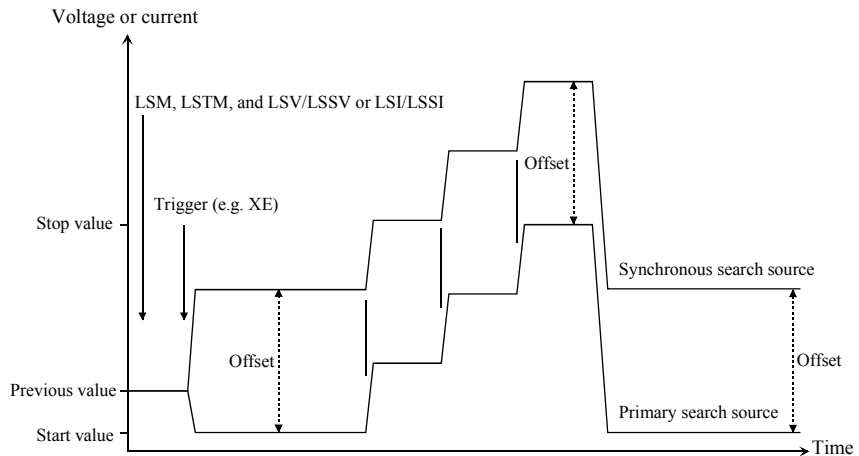

---

### NOTE

The LSSV/LSSI command sets the synchronous output. You can use the same output mode (voltage or current) as the search source. All output values must be covered by the output range of the search source.

---



## Synchronous Output

You can use synchronous output that will be synchronized to the output of the primary sweep or search source. See Figure 2-15 and Figure 2-16. Synchronous output is available for the following measurement modes and set by the following commands:

Measurement Mode	Command
“Staircase Sweep Measurements”	WSI or WSV
“Pulsed Sweep Measurements”	WSI or WSV
“Staircase Sweep with Pulsed Bias Measurements”	WSI or WSV
“Binary Search Measurements”	BSSI or BSSV
“Linear Search Measurements”	LSSI or LSSV

The synchronous source supports the same output mode (voltage or current) as the primary source, and does not support pulsed output.

### Parameters

The following parameters are used to set up a synchronous output. For details of the commands, refer to Chapter 4, “Command Reference.”

- For the WSI and WSV commands:

**start**                      Synchronous sweep start value.

**stop**                        Synchronous sweep stop value.

The start and stop values must have the same polarity for logarithmic sweep.

- For the BSSI, BSSV, LSSI, and LSSV commands:

**offset**                      Offset value from the search source output.

**polarity**                    Polarity (+ or –) of the synchronous source output.

Synchronous output is given by one of the following formulas:

- $Synchronous\ output = primary\ source\ output + offset$
- $Synchronous\ output = -1 \times primary\ source\ output + offset$

All output values must be covered by the output range of the search source.

## Remote Mode Functions Synchronous Output

Figure 2-15

Synchronous Sweep Output Example for Staircase Sweep


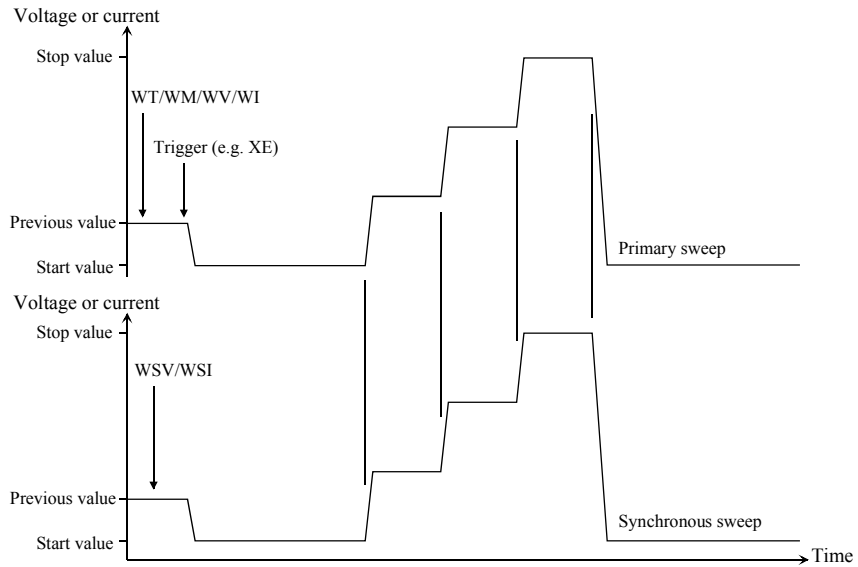


Figure 2-16

Synchronous Output Example for Binary Search

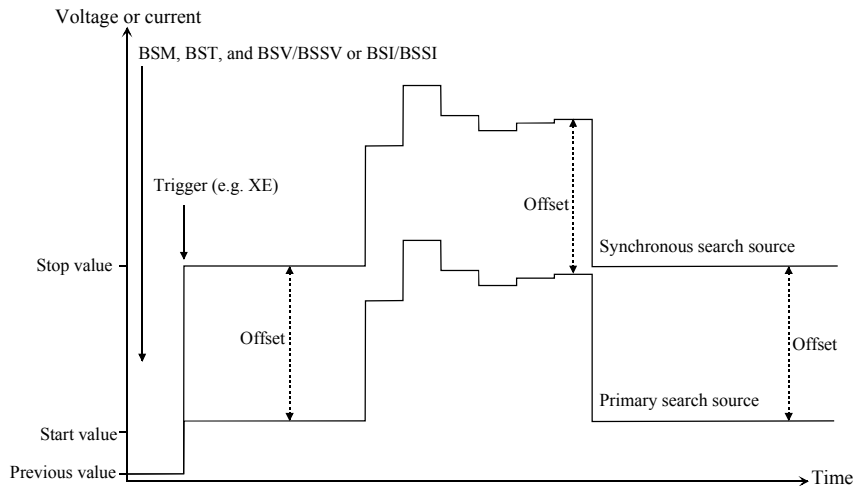

## Automatic Sweep Abort Function

The automatic sweep abort function stops sweep (increasing or decreasing source output value) when one of the following conditions occurs. This function is useful to reduce sweep time and to prevent damage to the device during sweep measurement.

- The output reaches voltage compliance or current compliance
- A measurement value exceeds the specified measurement range
- An SMU oscillates

The automatic abort function is enabled by using the WM, LSM, or BSM command. This function is available for the following measurement modes:

- “Staircase Sweep Measurements”
- “Staircase Sweep with Pulsed Bias Measurements”
- “Multi Channel Sweep Measurements”
- “Pulsed Sweep Measurements”
- “Linear Search Measurements” and “Binary Search Measurements”

**When abort occurs** After sweep or search is aborted, the source forces the following value. And then the dummy data (199.999E+99) is returned for measurement points not reached.

- Start value (for staircase sweep source and search source)
- Pulse base value (for pulsed source and pulsed sweep source)

**Output after sweep** You can specify the post sweep condition for normal sweep end. The source output value is set by the WM, LSM, or BSM command, and it can be one of the following values:

- Start value
- Stop value
- Last output value (for search measurement)

The setting is not effective for the pulsed sweep measurement.

---

### NOTE

Even if the output after sweep value is set, the source forces the start value if output is stopped by the automatic abort function, power compliance, or AB command.

## Program Memory

The program memory is a volatile memory that is used to store command strings temporarily. The Agilent E5260/E5270 has a built-in program memory that can store 2,000 programs maximum, and a total of 40,000 commands.

The program memory can eliminate several processes in the program execution, such as transferring commands, checking command syntax, and converting commands to the internal codes. Thus, using the program memory speeds up program execution. If frequently used command strings are stored in the program memory, GPIB/computer activity is minimized.

## Using Program Memory

You can store, execute, read, and delete programs in the program memory as shown below. For details on each command, refer to Chapter 4, “Command Reference.”

**To store programs** Send the ST and END commands to store a program. The following procedure stores a program (program number *n*) in the program memory. A multiple command string is also available.

1. OUTPUT @E5270; “ST *n*”

where, *n* is the program number for the program now stored in the program memory. The value must be an integer, 1 to 2000.

2. OUTPUT @E5270; “XXXX”

where, XXXX must be the command you want to store in the program memory. Repeat this until all required commands are stored.

Table 2-1 lists the invalid commands for the program memory.

3. OUTPUT @E5270; “END”

---

### NOTE

The program must be complete and free of errors.

An error occurs if the program memory overflows while a program is being stored.

If you store a new program using an existing program number, the old program is deleted and the new program is stored.

---

**To call programs from a memory program**

A memory program can invoke another memory program by storing the DO or RU command in the memory program. Up to eight levels of nesting are available. The first level is always the DO or RU command sent by the external computer.

**To execute programs**

Send the RU or DO command to execute the memory program.

- `OUTPUT @E5270;"RU 1,5"`

This example executes the programs numbered 1 through 5 sequentially. These programs must be stored in the memory.

- `OUTPUT @E5270;"DO 1,2,3,4,5"`

This example executes programs 1, 2, 3, 4, and 5 in this order. These programs must be stored in the memory. A maximum of eight numbers can be specified.

**To use variables**

You can use variables in the memory programs. To enter the value to the variable, send the VAR command. If the variable is referred by multiple programs or commands, set or change the value carefully so that the program works fine without errors. Format of the variable is `%tn` (*t*: integer I or real R, *n*: integer, 1 to 99).

In the following example, the first line stores a program (program 99) which uses the `%I50` variable. The second line enters 2 to `%I50`, and executes the program 99.

```
OUTPUT @E5270;"ST99;CN%I50;DV%I50,0,2;TI%I50;CL%I50;END"  
OUTPUT @E5270;"VAR0,50,2;DO99"
```

**To read programs**

To read the program numbers of the memory programs, send the LST? command without a command parameter.

To read the contents of a memory program, send the LST? command with the program number as shown below. Up to 3000 commands can be read by one command execution.

```
OUTPUT @E5270;"LST? 100"
```

**To delete programs**

To delete all memory programs, send the SCR command without a parameter.

To delete a memory program, send the SCR command with the program number as shown below.

```
OUTPUT @E5270;"SCR 100"
```

---

**NOTE**

---

Turning off the instrument also clears the program memory. The device clear and \*RST commands do not clear the program memory.

Remote Mode Functions  
Program Memory

Table 2-1

Invalid Commands for Program Memory

Category	GPIB Command
Reset	*RST
Diagnostics	DIAG?
Self-test	*TST?
Self Calibration	CA
	*CAL?
	CM
Abort	AB
Channel Control	RCV
	WZ?
Program Memory	ST
	END
	SCR
	VAR?
	LST?
16 bit Control Port	ERS?
Query	ERR?
	EMG?
	*IDN?
	LOP?
	*LRN?
	NUB?
	*OPC?
	UNT?
	WNU?
Status Byte	*SRE?
	*STB?

## Digital I/O Port

The digital I/O port is used for the trigger input/output terminals or an interface to control an external relay circuit and so on. For the trigger input/output, refer to “Trigger Function”. For another usage, the following commands are available:

- ERM** Changes the digital I/O port assignments.
- ERS?** Returns the digital I/O port status.
- ERC** Changes the output status of the digital I/O port

Connector type of the digital I/O port is D-Sub 25-pin. The pin assignment is shown in Table 2-2. In the initial setting, the all port forces TTL high level (approx. 2.4 V. TTL low is approx. 0.8 V). The above commands are available for non trigger ports from DIO 1 to DIO 16.

**Table 2-2 Digital I/O Pin Assignment**

Description	Pin Number		Description
GND	25	13	GND
NC	24	12	NC
NC	23	11	NC
DIO 15 (bit 15)	22	10	DIO 16 (bit 16)
DIO 13 (bit 13)	21	9	DIO 14 (bit 14)
DIO 11 (bit 11)	20	8	DIO 12 (bit 12)
DIO 9 (bit 9)	19	7	DIO 10 (bit 10)
DIO 7 (bit 7)	18	6	DIO 8 (bit 8)
DIO 5 (bit 5)	17	5	DIO 6 (bit 6)
DIO 3 (bit 3)	16	4	DIO 4 (bit 4)
DIO 1 (bit 1)	15	3	DIO 2 (bit 2)
NC	14	2	NC
		1	NC


## Accessories

The following accessories are available to connect the Digital I/O port.

- Agilent 16493G Digital I/O connection cable  
Used to connect the Digital I/O port to a D-Sub (f) 25-pin connector. This cable should be connected between two E5260/E5270s, or between the E5260/E5270 and the N1253A-200 BNC box. Cable length depends on the following option items:  
16493G-001: Approx. 1.5 m  
16493G-002: Approx. 3 m
- Agilent N1253A-100 Digital I/O T-cable  
Used to connect the Digital I/O port to a D-Sub (f) 25-pin connector and a D-Sub (m) 25-pin connector. This cable must be used to connect three or more E5260/E5270s. Cable length is as following:
  - D-Sub (m) to D-Sub (m): Approx. 1.5 m  
Both connectors should be connected to the Digital I/O ports.
  - D-Sub (m) to D-Sub (f): Approx. 30 cm  
The D-Sub (f) connector should be connected to the additional N1253A-100 or the 16493G cable to connect the third or following E5260/E5270.
- Agilent N1253A-200 Digital I/O BNC box  
Used to convert the D-Sub connector to the BNC connectors. Only the DIO 1 to DIO 8 are connected to the BNC (f) connectors individually. To use the BNC box, connect the 16493G cable between the Digital I/O port and the BNC box.

Figure 2-17

### Accessories for Digital I/O Port

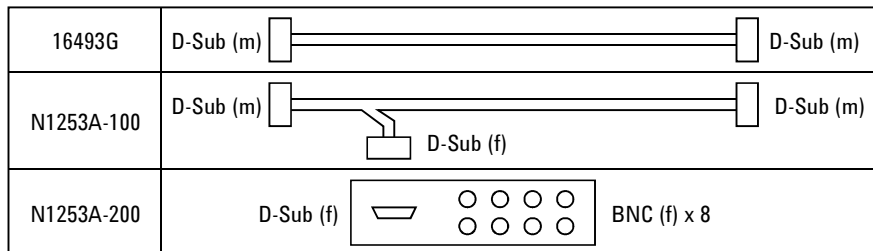




## Digital I/O Internal Circuit

The following figure shows the input/output circuits internally connected to each port/pin of the Digital I/O connector.

Figure 2-18

### Digital I/O Internal Circuit

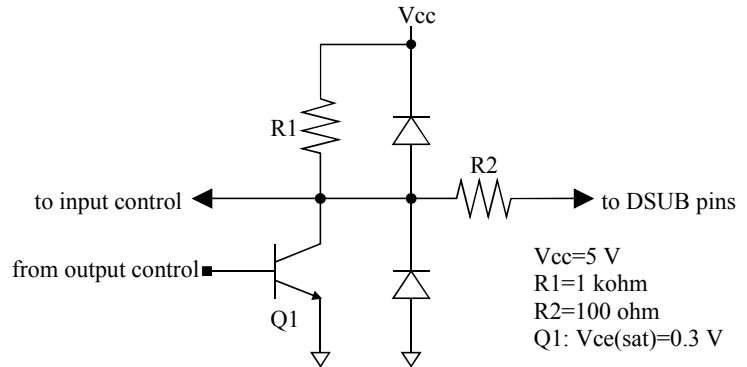

## Trigger Function


The Agilent E5260/E5270 can be synchronized with other equipment, such as capacitance meters, voltmeters, ammeters, probers, handlers and so on, by using the following terminals:

- Ext Trig In  
BNC connector. Only for trigger input (to receive trigger).
- Ext Trig Out  
BNC connector. Only for trigger output (to send trigger).
- Digital I/O  
D-Sub 25-pin connector. Sixteen paths are available for the trigger port. Each path can be used for either input or output. For the pin assignment and accessories, refer to “Digital I/O Port”.

Figure 2-19 shows a connection example of the E5260/E5270 and another device.

Figure 2-19

### Connecting Trigger Input/Output

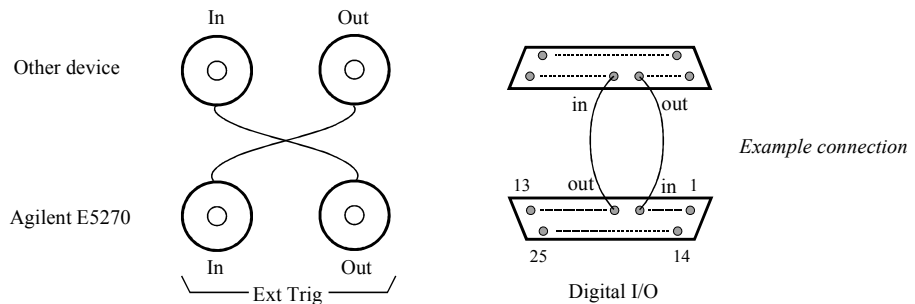

### NOTE


To use the digital I/O port for the trigger input/output port, send the TGP command. DIO 1 to DIO 16 can be used for the trigger input/output port. See Table 2-2.

## Trigger Input

A trigger input operation example is shown in Figure 2-20. Measurement or source output can be started by the input trigger sent through the port specified by the TGP command. See Table 2-3.

Figure 2-20

### Trigger Input Example, Staircase Sweep Measurement, Negative Logic

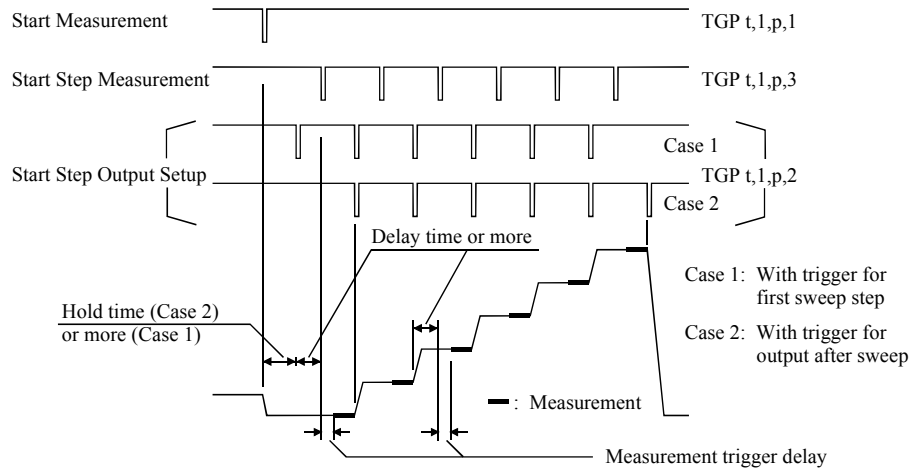

### Initial Settings

The following functions are available in the initial settings:

- Trigger port: Ext Trig In
- Trigger type: Start Measurement (type 1)
- Commands for the trigger wait: WS, TM3, or PA with TM3

### Input Trigger

The E5260/E5270 responds to the input trigger (minimum pulse width 10  $\mu$ s) that changes the signal level from high (approx. 2.4 V) to low (approx. 0.8 V). This is negative logic. You can change it to positive logic by using the third parameter of the TGP command.

### Measurement Trigger Delay

Delay time from a trigger input to starting a step measurement. The delay time is available for the Start Step Measurement trigger (type 3). You can set the delay time value by using the WT command.

## Remote Mode Functions

### Trigger Function

#### PA/PAX/WS/WSX Commands

The commands put the E5260/E5270 in the trigger wait state. The E5260/E5270 can recover from the wait state if an external trigger is sent to a trigger input port. You can use the commands regardless of the trigger type.

If you use the PA or PAX command to put the E5260/E5270 in the trigger wait state, send the TM3 command before the PA or PAX command.

**Table 2-3** Type of Trigger Input

Type	E5260/E5270 Operation by Input Trigger	Command <sup>a</sup>
1	Starts the measurement specified by the MM command.	TGP <i>t,1,p,1</i> TM3
2	The sweep source starts to set the sweep step output. The pulse source starts to set the pulsed output. This trigger type is available for the staircase sweep, pulsed spot, pulsed sweep, staircase sweep with pulsed bias, or multi channel sweep measurement.	TGP <i>t,1,p,2</i> TGSI <i>m</i>
3	Waits for the measurement trigger delay, and starts the sweep step measurement. This trigger type is available for the staircase sweep and multi channel sweep measurement.	TGP <i>t,1,p,3</i>


- a. *t* selects trigger input terminal, Ext Trig In or a digital I/O path.  
*p* selects positive or negative logic of the trigger.  
*m* selects Case 1 or Case 2 of the trigger type 2 (see Figure 2-20).

## Trigger Output

A trigger output operation example is shown in Figure 2-21. When the measurement or source output setup is completed, the output trigger is sent through the port specified by the TGP command. See Table 2-4.

Figure 2-21

### Trigger Output Example, Staircase Sweep Measurement, Negative Logic

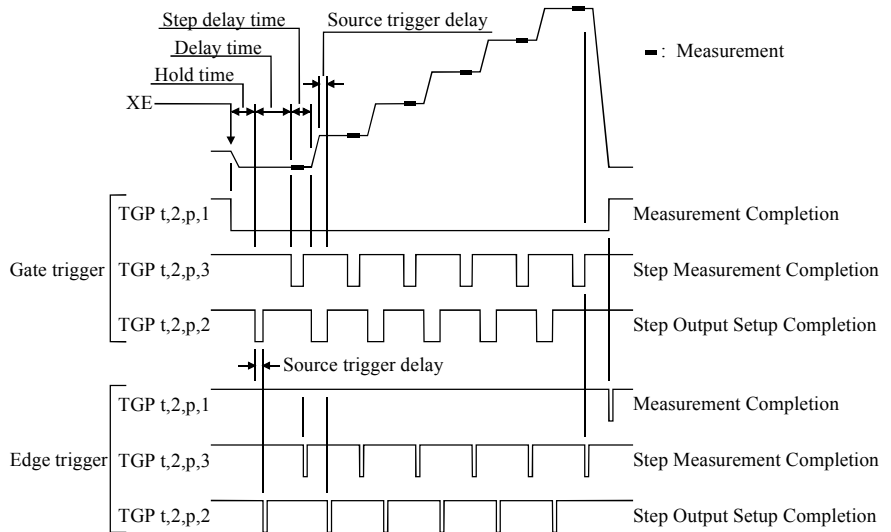

### Initial Settings

The following functions are available in the initial settings:

- Trigger port: Ext Trig Out
- Trigger type: Measurement Completion (type 1)
- Commands for the trigger output: OS

### Output Trigger

An edge trigger or a gate trigger will be sent when an operation is completed (see Figure 2-22). Initially, the negative edge trigger is sent.

### Source Trigger Delay

Delay time from when the source output setup is completed until an edge trigger is sent or a gate trigger level is returned. The delay time is available for the Step Output Setup Completion trigger (type 2). You can set the delay time value by using the WT command.

### OS/OSX Commands

The command is used to send a trigger immediately from a trigger output terminal. You can use the commands regardless of the trigger type.

## Remote Mode Functions

### Trigger Function

#### Using Multiple Channels

If you use the multiple measurement channels, an edge trigger will be sent or a gate trigger level will be returned when the measurement is completed by all channels.

For the multi channel sweep measurement, an edge trigger will be sent or a gate trigger level will be returned when the source output setup is completed by all channels, or when the measurement is completed by all channels.

Figure 2-22

#### Output Trigger

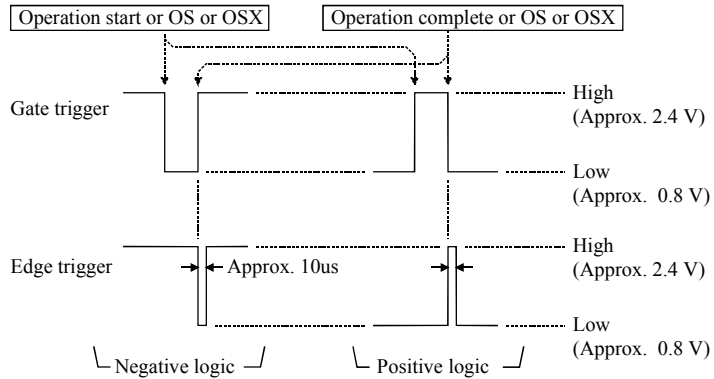


Table 2-4

#### Type of Trigger Output

Type	Timing of Trigger Output by E5260/E5270	Command <sup>a</sup>
1	When the measurement specified by the MM command is completed.	TGP <i>t,2,p,1</i> TGXO <i>m</i> TM3
2	When the source trigger delay time is elapsed after the sweep step output setup or pulse output setup is completed.  Available for the staircase sweep, pulsed spot, pulsed sweep, staircase sweep with pulsed bias, and multi channel sweep measurement.	TGP <i>t,2,p,2</i> TGSO <i>m</i>
3	When the measurement is completed at each sweep step for the staircase sweep or multi channel sweep measurement.	TGP <i>t,2,p,3</i> TGMO <i>m</i>

- a. *t* selects the trigger output terminal, Ext Trig Out or a digital I/O.  
*p* selects positive or negative logic. *m* selects edge or gate trigger.

## Using Trigger Function

- “To Make Wait State Using PA/PAX”
- “To Make Wait State Using WS/WSX”
- “To Send Trigger Using OS/OSX”
- “To Receive Measurement Trigger”
- “To Specify Trigger Port and Receive Trigger”
- “To Control Measurement Timing Using External Trigger”

### To Make Wait State Using PA/PAX

The PA or PAX command puts the E5260/E5270 into a wait state. The E5260/E5270 can be recovered from the wait state when the specified wait time elapses, or when an event selected by the TM command occurs. Then the E5260/E5270 executes the commands following the PA/PAX command. The event only releases the wait state set by the PA/PAX command.

The wait time parameter is available for the PA/PAX command. If you specify the wait time, the wait state continues until the time has elapsed or until the event occurs.

Available value: -99.9999 to 99.9999 s, in 100  $\mu$ s resolution.

If you set a negative value, the wait state is kept until the event occurs.

You can select the event by using the TM command. If you want to use an external trigger as the event, enter the TM3 command. Then the PA/PAX command waits for the XE command execution, or:

- PA waits for a trigger sent to the Ext Trig In terminal.
- PAX waits for a trigger sent to the specified terminal.

In the initial setting, negative logic is available. To change it to positive, send the TGP command.

---

**NOTE**

The TM command is used to select the event effective for starting measurement, or releasing the wait time set by the PA or PAX command. Enter the TM command before the PA or PAX command.

## Remote Mode Functions

### Trigger Function

#### To Make Wait State Using WS/WSX

The WS or WSX command puts the E5260/E5270 into a wait state. The E5260/E5270 can be recovered from the wait state by an external trigger. Then the E5260/E5270 executes the commands following the WS/WSX command. The external trigger only releases the wait state set by the WS/WSX command.

- WS waits for a trigger sent to the Ext Trig In terminal.
- WSX waits for a trigger sent to the specified terminal.

In the initial setting, the negative logic is available. To change it to the positive, send the TGP command.

If you want to end a wait state before receiving an external trigger, enter the AB or \*RST command, or use the device clear (HP BASIC CLEAR statement) if any other commands have already been entered.

---

**NOTE**

---

For easy programming, do not enter the TM command, or use the TM1, TM2, or TM4 event mode. The TM3 event mode will complicate programming.


#### To Send Trigger Using OS/OSX

To trigger an external device from the E5260/E5270, use the OS or OSX command.

- OS sends an edge trigger to the Ext Trig Out terminal.
- OSX sends a trigger to the specified terminal.

In the initial setting, negative logic is available. To change it to positive, send the TGP command.

Enter the WS/WSX command immediately after the OS/OSX command. Then the E5260/E5270 triggers an external device to start its operation by the OS/OSX, and waits for an operation complete trigger from the external equipment. This scenario ensures that the E5260/E5270 and external equipment operations do not overlap.

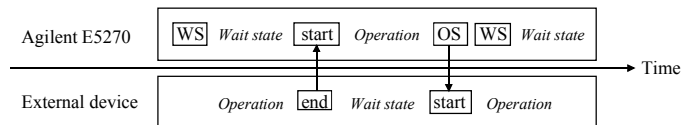



## To Receive Measurement Trigger

To use an external trigger just for starting measurement, instead of the XE command, perform the next step. This is not effective for the high speed spot measurement.

1. Connect a BNC cable between the Ext Trig In connector and a trigger output connector of an external device.
2. Create a control program. Then the TM3 command and HP BASIC ENTER statement should be entered as shown in the following example:

```


:
OUTPUT @E5270;"MM1"      ! Sets spot measurement mode
:                        ! Sets measurement condition
:
:
OUTPUT @E5270;"TM3"      ! Uses external trigger
ENTER @E5270 USING "#,3X,12D,2X";M_data
:

```

3. Execute the control program.

The E5260/E5270 sets the measurement conditions, and waits for an external trigger (negative trigger) sent to the Ext Trig In connector.

When the trigger is received, the E5260/E5270 starts measurement. When measurement is completed, the E5260/E5270 sends a negative edge trigger to the Ext Trig Out connector, and puts the measurement data in the data output buffer.



### NOTE

The HP BASIC ENTER statement pauses program execution until measurement data is put in the data buffer, reads the data from the buffer, and then continues program execution.

## Remote Mode Functions

### Trigger Function

### To Specify Trigger Port and Receive Trigger

To use an external trigger just for starting measurement, instead of the XE command, perform the next step. This is not effective for the high speed spot measurement.

This example specifies the trigger input/output ports and uses the gate trigger for the output trigger.


1. Connect a BNC cable between the Ext Trig In connector and a trigger output connector of an external device.
2. Create a control program. Then the TM3 and TGP commands and HP BASIC ENTER statement should be entered as shown in the following example:

```
      :  
OUTPUT @E5270;"MM1"           ! Sets spot measurement mode  
      :                       ! Sets measurement condition  
      :  
OUTPUT @E5270;"TM3"           ! Uses external trigger  
OUTPUT @E5270;"TGP -1,1,1,1"  ! Sets trigger input  
OUTPUT @E5270;"TGP -2,2,1,1"  ! Sets trigger output  
OUTPUT @E5270;"TGXO 2"        ! Enables gate trigger  
ENTER @E5270 USING "#,3X,12D,2X";M_data  
      :
```

3. Execute the control program.

The E5260/E5270 sets the measurement conditions, and waits for an external trigger (positive trigger) sent to the Ext Trig In connector.

When the trigger is received, the E5260/E5270 starts measurement and sends a positive gate trigger to the Ext Trig Out connector. When measurement is completed, the E5260/E5270 returns the gate trigger level to logical low, and puts the measurement data in the data output buffer.



---

#### NOTE

---

The HP BASIC ENTER statement pauses program execution until measurement data is put in the data buffer, reads the data from the buffer, and then continues program execution.

## To Control Measurement Timing Using External Trigger

Multiple trigger terminals will be used to control measurement timing. Refer to the following example that controls the staircase sweep measurement timing.

The example below uses the following triggers and terminals:

Trigger Name or Trigger Type	Terminal	TGP Command <sup>a</sup>
Start Measurement	Ext Trig In	TGP -1, 1, 2, 1
Start Step Measurement	DIO 2	TGP 2, 1, 2, 3
Start Step Output Setup	DIO 1	TGP 1, 1, 2, 2
Measurement Completion	Ext Trig Out	TGP -2, 2, 2, 1
Step Measurement Completion	DIO 12	TGP 12, 2, 2, 3
Step Output Setup Completion	DIO 11	TGP 11, 2, 2, 2

- a. Parameters mean the port number, trigger input/output, positive/negative logic, and trigger type in this order from left.

### Example

This example uses the negative edge trigger (set by the TGP and TGXO/TGMO/TGSO commands), and the Case 1 Start Step Output Setup trigger (set by the TGSI command). The WT command sets the hold time, delay time, step delay time, source trigger delay time, and the measurement trigger delay time.

```

:
OUTPUT @E5270;"MM2"          ! Sets staircase sweep measurement mode
:                             ! Sets measurement condition
:
OUTPUT @E5270;"TM3"          !Uses external trigger
OUTPUT @E5270;"TGP -1,1,2,1" !Start Measurement trigger
OUTPUT @E5270;"TGP 2,1,2,3"  !Start Step Measurement trigger
OUTPUT @E5270;"TGP 1,1,2,2"  !Start Step Output Setup trigger
OUTPUT @E5270;"TGP -2,2,2,1" !Measurement Completion trigger
OUTPUT @E5270;"TGP 12,2,2,3" !Step Measurement Completion trigger
OUTPUT @E5270;"TGP 11,2,2,2" !Step Output Setup Completion trigger
OUTPUT @E5270;"TGXO 1"       !1:Edge trigger
OUTPUT @E5270;"TGMO 1"       !1:Edge trigger
OUTPUT @E5270;"TGSO 1"       !1:Edge trigger
OUTPUT @E5270;"TGSI 1"       !1:Case 1
OUTPUT @E5270;"WT";Hold,Delay,Sdelay,Tdelay,Mdelay
:
FOR N=1 TO No_step
  ENTER @E5270 USING "#,3X,12D,2X";M_data
  PRINT "DATA";N;"=";M_data
NEXT N
:


```

## Remote Mode Functions

### Trigger Function

Figure 2-23

#### Trigger Input/Output Example, Staircase Sweep, Negative Logic

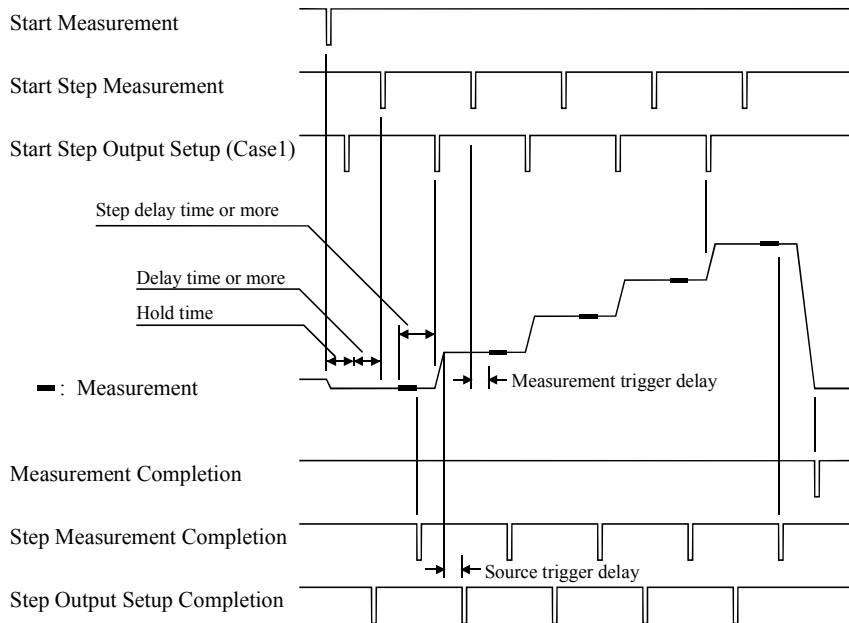

The E5260/E5270 sets the measurement conditions, sets the trigger ports, and waits for a Start Measurement trigger.

By the Start Measurement trigger, the E5260/E5270 starts the staircase sweep measurement.

By the Start Step Output Setup trigger, the E5260/E5270 waits until the source trigger delay is elapsed, and sends the Step Output Setup Completion trigger. If the trigger is received during the hold time, the E5260/E5270 performs this after the hold time.

By the Start Step Measurement trigger, the E5260/E5270 waits until the measurement trigger delay is elapsed, executes a step measurement, and sends the Step Measurement Completion trigger. If the trigger is received during the delay time, the E5260/E5270 performs this after the delay time.

By the next Start Step Output Setup trigger, the E5260/E5270 changes the source output value, and waits until the source trigger delay is elapsed, and sends the Step Output Setup Completion trigger. If the trigger is received during the step delay time, the E5260/E5270 performs this after the step delay time.

After the staircase sweep measurement, the E5260/E5270 sends the Step Measurement Completion trigger and the Measurement Completion trigger, and puts the measurement data in the data output buffer.

## Trig In/Out Internal Circuit

The following figures show the trigger input/output circuits internally connected to the Trig In/Out connectors.

Figure 2-24

### Trigger Input Internal Circuit


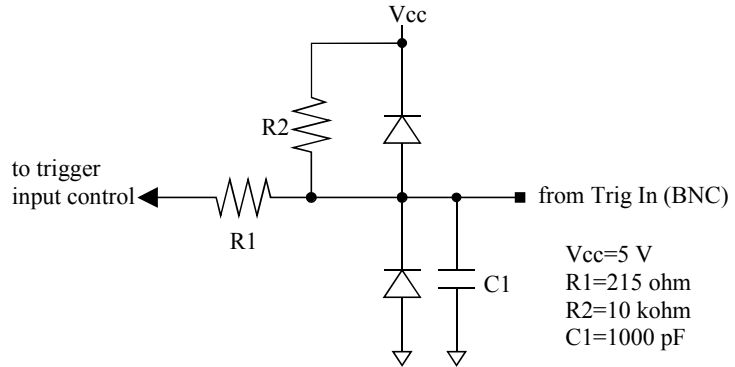


Figure 2-25

### Trigger Output Internal Circuit

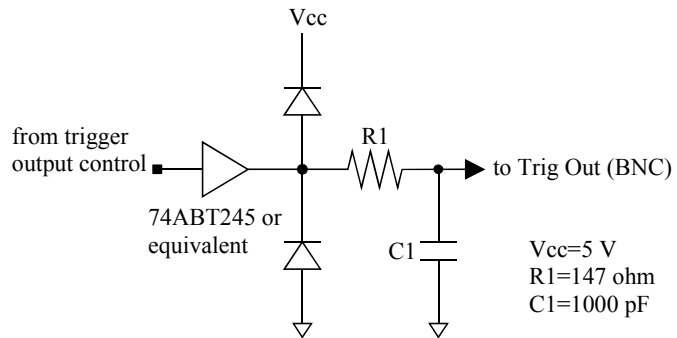

## Initial Settings

Agilent E5260/E5270 is initialized by turning the E5260/E5270 on, the \*RST command, or the device clear. Initial settings of the E5260/E5270 are shown in Table 2-5 and Table 2-6. Table 2-6 fits into one page, and lists all initial settings.

**Table 2-5 Initial Settings**

Setup Item	Initial Setting		Commands
Measurement channel	Channel assigned the lowest number.		MCH
Measurement data to be displayed	Data 1	Compliance side data	MPA
	Data 2	none	MPA
Output channel	Channel assigned the lowest number.		SCH
Output data to be displayed	Data 1	OUT	SPA
	Data 2	CPL	SPA
Data display format	ENGINEERING		DFM
Remote mode data display	off		RED
Remote mode key lock/unlock	unlock		KLC
Auto calibration	on		CM
ADC zero function (for E5270B)	off		AZ
SMU output switch	open		CN, CL
ASU path/1 pA auto range/indicator	SMU side/disabled/enabled		SAP/SAR/SAL
Filter	off		FL
Series resistor	off		SSR
A/D converter	High speed ADC		AAD
Integration time (High resolution ADC is available for E5270B)	High speed ADC: auto		AIT
	High resolution ADC: auto		AIT

Setup Item	Initial Setting		Commands
AV command parameter	<i>number=1, mode=0</i>		AV
Current measurement range	with pulse	Compliance range	RI
	without pulse	auto	
Voltage measurement range	with pulse	Compliance range	RV
	without pulse	auto	
Sweep source parameters	cleared		WV, WSV, WI, WSI
Automatic sweep abort function	off		WM
Output after sweep measurement	Start value		WM
Pulse source parameters	cleared		PV, PI
Pulse sweep source parameters	cleared		PWV, PWI
Pulse width	0.001 s		PT
Pulse period	0.01 s		PT
Search source parameters	cleared		BSV, BSSV, BSI, BSSI, LSV, LSSV, LSI, LSSV
Search monitor parameters	cleared		BGV, BGI, LGV, LGI
Output after search measurement	Start value		BSM, LSM
Search measurement data	Source output value only		BSVM, LSVM
Quasi-pulse source parameters	cleared		BDV
Quasi-pulsed spot measurement mode	Voltage		BDM
Quasi-pulse settling detection interval	Short		BDM
Hold time	0 s		WT, PT, BDT, BST, LSTM

Remote Mode Functions  
Initial Settings

Setup Item	Initial Setting		Commands
Delay time	0 s		WT, PT, BDT, BST, LSTM
Step delay time	0 s		WT
Trigger delay time	0 s		WT, PT
Trigger mode	XE, TV, TI, or GET		TM
Trigger port	Ext Trig In	Start Measurement trigger input	TGP
	Ext Trig Out	Measurement Completion trigger output	TGP
	Digital I/O	cleared	TGP
Trigger condition of Start Step Output Setup trigger	with trigger for first sweep step		TGSI
Type of output trigger	Edge trigger		TGXO, TGSO, TGMO
Digital I/O port	Output for all port		ERM
Program memory	cleared <sup>a</sup>		SCR
Value of internal variable (%In, %Rn)	0		VAR
Data output format	ASCII with header, CR/LF^EOI		FMT
Data output buffer	cleared		BC
Status byte	Only bit 6 is enabled.		*SRE
Error code register	cleared		ERR?

a. Program memory is not cleared by the \*RST command or the device clear.



**Table 2-6 Initial Settings**

Setup Item	Initial Setting		Commands
Measurement channel	Channel assigned the lowest number.		MCH
Measurement data to be displayed	Data 1	Compliance side data	MPA
	Data 2	none	MPA
Output channel	Channel assigned the lowest number.		SCH
Output data to be displayed	Data 1	OUT	SPA
	Data 2	CPL	SPA
Data display format	ENGINEERING		DFM
Remote mode data display	off		RED
Remote mode key lock/unlock	unlock		KLC
Auto calibration	on		CM
ADC zero function (for E5270B)	off		AZ
SMU output switch	open		CN, CL
ASU path/1 pA auto range/indicator	SMU side/disabled/enabled		SAP/SAR/SAL
Filter/Series resistor	off/off		FL/SSR
A/D converter	High speed ADC		AAD
Integration time (High resolution ADC is available for E5270B)	High speed ADC: auto		AIT
	High resolution ADC: auto		AIT
AV command parameter	<i>number=1, mode=0</i>		AV
Current measurement range	with pulse	Compliance range	RI
	without pulse	auto	
Voltage measurement range	with pulse	Compliance range	RV
	without pulse	auto	
Sweep source parameters	cleared		WV, WSV, WI, WSI
Automatic sweep abort function	off		WM
Output after sweep measurement	Start value		WM
Pulse source parameters	cleared		PV, PI
Pulse sweep source parameters	cleared		PWV, PWI
Pulse width	0.001 s		PT
Pulse period	0.01 s		PT
Search source parameters	cleared		BSV, BSSV, BSI, BSSI, LSV, LSSV, LSI, LSSV
Search monitor parameters	cleared		BGV, BGI, LGV, LGI
Output after search measurement	Start value		BSM, LSM
Search measurement data	Source output value only		BSVM, LSVM
Quasi-pulse source parameters	cleared		BDV
Quasi-pulsed spot measurement mode	Voltage		BDM
Quasi-pulse settling detection interval	Short		BDM
Hold time	0 s		WT, PT, BDT, BST, LSTM
Delay time	0 s		WT, PT, BDT, BST, LSTM
Step delay time	0 s		WT
Trigger delay time	0 s		WT, PT
Trigger mode	XE, TV, TI, or GET		TM
Trigger port	Ext Trig In	Start Measurement trigger input	TGP
	Ext Trig Out	Measurement Completion trigger output	TGP
	Digital I/O	cleared	TGP
Trigger condition of Start Step Output Setup trigger	with trigger for first sweep step		TGSI
Type of output trigger	Edge trigger		TGXO, TGSO, TGMO
Digital I/O port	Output for all port		ERM
Program memory	cleared. Not cleared by *RST command or device clear.		SCR
Value of internal variable (%In, %Rn)	0		VAR
Data output format	ASCII with header, CR/LF^EOI		FMT
Data output buffer	cleared		BC
Status byte	Only bit 6 is enabled.		*SRE
Error code register	cleared		ERR?

Remote Mode Functions  
Initial Settings



## Programming Examples

This chapter lists the GPIB commands required for each measurement mode, and provides the programming examples.

- “Programming Basics for Visual Basic .NET Users”
- “High-Speed Spot Measurements”
- “Spot Measurements”
- “Pulsed Spot Measurements”
- “Staircase Sweep Measurements”
- “Pulsed Sweep Measurements”
- “Staircase Sweep with Pulsed Bias Measurements”
- “Quasi Pulsed Spot Measurements”
- “Linear Search Measurements”
- “Binary Search Measurements”
- “Multi Channel Sweep Measurements”
- “Using Program Memory”
- “Using Trigger Function”
- “Reading Time Stamp Data”
- “Reading Binary Output Data”
- “Using Programs for 4142B”
- “Using Programs for 4155B/4156B/4155C/4156C”

Refer to Chapter 4, “Command Reference,” for the command syntax and descriptions of the Agilent E5260/E5270 GPIB commands.

The following command conventions are used in this chapter.

command	Required command for measurement execution.
[command]	Optional command for measurement execution.
<i>parameter</i>	Required command parameter. A value or variable <i>must</i> be specified.
[ <i>parameter</i> ]	Optional command parameter. A value may be specified.

---

**NOTE**
**About Example Program Code**

Example programs described in this section have been written in the Microsoft Visual Basic .NET or the HP BASIC language. Most of the examples written in the Visual Basic .NET are provided as a subprogram that can be run with the project template shown in Table 3-1. To run the program, insert the example subprogram or your subprogram instead of the perform\_meas subprogram in the template.

---

**NOTE**
**To Start Program**

If you create the measurement program by using the example code shown in Table 3-1, the program can be run by clicking the Run button on the Visual Basic main window. Then a message box will appear. After that, click OK to continue.

---

**NOTE**
**After the Automatic Measurement**

After the automatic measurements, open the measurement terminals or disconnect the device under test from the measurement terminals. If you leave the connection with the device, the device may be damaged by unexpected operations.

Do not leave the connection over 30 minutes after measurement if the auto calibration is set to ON. Then, the Agilent E5260/E5270 performs the self-calibration automatically every 30 minutes after measurement. The calibration requires to open the measurement terminals.

To disable the auto calibration, enter the CM 0 command.

## Programming Basics for Visual Basic .NET Users

This section provides the basic information for programming of the automatic measurement using the Agilent E5260/E5270, Agilent T&M Programmer's Toolkit, and Microsoft Visual Basic .NET.

- “To Create Your Project Template”
- “To Create Measurement Program”

### To Create Your Project Template

Before starting programming, create your project template, and keep it as your reference. It will remove the conventional task in the future programming. This section explains how to create a project template.

**Step 1.** Connect instrument (e.g. Agilent E5270B) to computer via GPIB.

**Step 2.** Launch Visual Basic .NET and create a new project. The project type must be Agilent T&M Toolkit Projects.

Follow the Agilent T&M Toolkit New Project Wizard to create the project. For the output type selection, select the Console Application. For the library selections, select top four libraries at least (Agilent.TMFramework, Agilent.TMFramework.DataAnalysis, Agilent.TMFramework.DataVisualization, and Agilent.TMFramework.InstrumentIO).

**Step 3.** Click T&M Toolkit > Instrument Explorer to open Agilent Instrument Explorer. On the explorer, click Find Instrument icon to detect the instrument automatically. Then the instrument names will be appeared on the Agilent Instrument Explorer window (e.g. AG E5270B (::17) below GPIB0).

**Step 4.** Open a module (e.g. Module1.vb) in the project. And enter a program code as template. See Table 3-1 for example.

**Step 5.** Save the project as your template (e.g. \test\my\_temp).

## To Create Measurement Program

Create the measurement program as shown below. The following procedure needs your project template. If the procedure does not fit your programming environment, arrange it to suit your environment.

- Step 1.** Plan the automatic measurements. Then decide the following items:
- Measurement devices  
Discrete, packaged, on-wafer, and so on.
  - Parameters/characteristics to be measured  
 $h_{FE}$ ,  $V_{th}$ , sheet resistance, and so on.
  - Measurement method  
Spot measurement, staircase sweep measurement, and so on.
- Step 2.** Make a copy of your project template (e.g. `\test\my_temp` to `\test\dev_a\my_temp`).
- Step 3.** Rename the copy (e.g. `\test\dev_a\my_temp` to `\test\dev_a\spot_id`).
- Step 4.** Launch Visual Basic .NET.
- Step 5.** Open the project (e.g. `\test\dev_a\spot_id`).
- Step 6.** Open the module that contains the template code as shown in Table 3-1. On the code window, complete the `perform_meas` subprogram.
- Step 7.** Insert the code to display, store, or calculate data into the subprogram.
- Step 8.** Save the project (e.g. `\test\dev_a\spot_id`).

Programming Examples  
Programming Basics for Visual Basic .NET Users

**Table 3-1 Example Template Program Code for Visual Basic .NET**

```
Imports Agilent.TMFramework
Imports Agilent.TMFramework.DataAnalysis
Imports Agilent.TMFramework.DataVisualization
Imports Agilent.TMFramework.InstrumentIO

Module Module1

    Sub Main() ' 8
        Dim E5270 As New DirectIO("GPIB0::17::INSTR")
        E5270.WriteLine("*RST")
        MsgBox("Click OK to start measurement.", vbOKOnly, "")
        Console.WriteLine("Measurement in progress. . ." & Chr(10))
        Dim t() As Integer = {1, 2, 4, 6} 'SMU1, SMU2, SMU4, SMU6
        Dim term As String = t(0) & "," & t(1) & "," & t(2) & "," & t(3)
        E5270.WriteLine("CN " & term)
        perform_meas(E5270, t)
        E5270.WriteLine("CL")
        E5270.Close()
        MsgBox("Click OK to stop the program.", vbOKOnly, "")
        Console.WriteLine("Measurement completed." & Chr(10))
    End Sub ' 21
```

Line	Description
1 to 4	These lines are necessary for the Agilent instrument control programming.
8 to 21	<p>Main subprogram establishes the software connection with the Agilent E5260/E5270, resets the E5260/E5270, opens a message box to confirm the start of measurement, and pauses program execution until OK is clicked on the message box. By clicking OK, the program displays a message on the console window, enables the SMUs, and calls the perform_meas subprogram that will be used to perform measurement.</p> <p>After the measurement, the program disables all SMUs, disables the software connection with the E5260/E5270, and opens a message box to confirm the end of the program. Finally, by clicking OK on the message box, the program displays a message on the console window.</p>
9	The above example is for the E5260/E5270 of the GPIB address 17 on the interface GPIB0. "GPIB0" is the VISA name. Confirm your GPIB settings, and set them properly.
13 to 14	The above example uses the SMUs installed in the E5260/E5270 slots 1, 2, 4, and 6. Change the slot numbers for matching your configuration.



```

Sub perform_meas (ByVal E5270 As DirectIO, ByVal t() As Integer) ' 23
    Dim i As Integer = 0
    Dim j As Integer = 0
    Dim nop1 As Integer = 1
    Dim nop2 As Integer = 1
    Dim data(nop2 - 1, nop1 - 1) As String
    Dim value As String = "Enter data header"
    Dim fname As String = "C:\enter_file_name.txt"
    Dim title As String = "Measurement Result"
    Dim msg As String = "No error."
    Dim err As String = "0"

    ' insert measurement program code

    E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
    If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err

    E5270.WriteLine("DZ")
    save_data(fname, title, value, data, nop1, nop2, E5270, t)
    Exit Sub

Check_err:
    E5270.WriteLine("EMG? " & err) : msg = E5270.Read(True)
    MsgBox("Instrument error: " & err & Chr(10) & msg, vbOKOnly, "")
End Sub ' 47

```

Line	Description
23	Beginning of the perform_meas subprogram.
24 to 33	<p>Declares variables used in this program template. The values are dummy. You must change the values to match your program. If you find unnecessary variables, delete them.</p> <p><i>i</i> and <i>j</i>: Variables used to specify the element of the <i>data</i> array.  <i>nop1</i> and <i>nop2</i>: Number of measurement steps. Also used to declare the <i>data</i> array.  <i>data</i>: String data array used to store the measurement result data.  <i>val</i>: String data variable to store the header (first line) of the displayed data.  <i>fname</i>: Full path name of the measurement result data file.  <i>title</i>: Title of the message box used to display the measurement result data.  <i>msg</i> and <i>err</i>: Variables used to store an error message and an error code.</p>
35	The line is placed as dummy. Remove the line and insert your program code to control the instruments and perform measurement.
37 to 38	Checks if the instrument causes an error, and goes to Check_err if an error is detected.
40 to 41	Applies 0 V from all channels and calls the save_data subprogram (lines 49 to 71).
44 to 46	Opens a message box to display error message if an error is detected.
47	End of the perform_meas subprogram.

## Programming Examples

### Programming Basics for Visual Basic .NET Users

```

Sub save_data(ByVal fname As String, ByVal title As String, ByVal value As
String, ByVal data(,) As String, ByVal nop1 As Integer, ByVal nop2 As Integer,
ByVal E5270 As DirectIO, ByVal t() As Integer) '49
    Dim i As Integer = 0
    Dim j As Integer = 0
    FileOpen(1, fname, OpenMode.Output, OpenAccess.Write, OpenShare.LockReadWrite)
    Print(1, value)
    For j = 0 To nop2 - 1
        For i = 0 To nop1 - 1
            Print(1, data(j, i))
        Next i
    Next j
    FileClose(1)

    Dim rbx As Integer
    For j = 0 To nop2 - 1
        For i = 0 To nop1 - 1
            value = value & data(j, i)
        Next i
    Next j
    value = value & Chr(10) & Chr(10) & "Data save completed."
    value = value & Chr(10) & Chr(10) & "Do you want to perform measurement again?"
    rbx = MsgBox(value, vbYesNo, title)
    If rbx = vbYes Then perform_meas(E5270, t)
End Sub '71

End Module

```

Line	Description
49 to 71	Save_data subprogram saves measurement result data into a file specified by the <i>fname</i> variable and displays the data and a message on a message box. If Yes is clicked on the message box, calls the perform_meas subprogram again. If No is clicked, returns to the perform_meas subprogram.

## High-Speed Spot Measurements

To perform high-speed spot measurements, use the following commands.

Function	Command	Parameters
Enables channels	CN	[ <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Disables channels	CL	[ <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets filter ON/OFF	[FL]	<i>mode</i> [, <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets series resistor ON/OFF	[SSR]	<i>chnum</i> [, <i>mode</i> ]
Sets integration time (Agilent E5270B can use AAD/AIT instead of AV.)	[AV]	<i>number</i> [, <i>mode</i> ]
	[AAD]	<i>chnum</i> [, <i>type</i> ]
	[AIT]	<i>type,mode</i> [, <i>N</i> ]
Forces constant voltage	DV	<i>chnum,vrangle,output</i> [, <i>comp</i> [, <i>polarity</i> [, <i>irangle</i> ]]]
Forces constant current	DI	<i>chnum,irangle,output</i> [, <i>comp</i> [, <i>polarity</i> [, <i>vrangle</i> ]]]
Measures current	TI	<i>chnum</i> [, <i>range</i> ]
Measures voltage	TV	<i>chnum</i> [, <i>range</i> ]

You can use the DV/DI commands and TI/TV commands regardless of the measurement mode (MM command settings).

## Programming Examples

### High-Speed Spot Measurements

A program example of a high-speed spot measurement is shown below. This example measures MOSFET drain current by using the TTI command.

**Table 3-2 High-Speed Spot Measurement Example**

	<pre> Sub perform_meas(ByVal E5270 As DirectIO, ByVal t() As Integer)           '1   Dim i As Integer = 0   Dim j As Integer = 0   Dim nop1 As Integer = 1   Dim nop2 As Integer = 1   Dim data(nop2 - 1, nop1 - 1) As String   Dim value As String = "Id (mA), Status, Meas Time (msec)"   Dim fname As String = "C:\Agilent\data\ex1.txt"   Dim title As String = "Measurement Result"   Dim msg As String = "No error."   Dim err As String = "0"    Dim vd As Double = 0.5   '13   Dim vg As Double = 0.5   Dim idcomp As Double = 0.05   Dim igcomp As Double = 0.01   Dim orng As Integer = 0   Dim mrng As Integer = 0    E5270.WriteLine("FMT 1")   '20   E5270.WriteLine("AV 10,1")      ' sets number of samples for 1 data   E5270.WriteLine("FL 0")        ' sets filter off   E5270.WriteLine("DV " &amp; t(3) &amp; ",0,0,0.1")  'out= 0 V, comp= 0.1 A   '23   E5270.WriteLine("DV " &amp; t(2) &amp; ",0,0,0.1")  'out= 0 V, comp= 0.1 A   E5270.WriteLine("DV " &amp; t(1) &amp; "," &amp; orng &amp; "," &amp; vg &amp; "," &amp; igcomp)   E5270.WriteLine("DV " &amp; t(0) &amp; "," &amp; orng &amp; "," &amp; vd &amp; "," &amp; idcomp)   E5270.WriteLine("ERR? 1") : err = E5270.Read(True)   If err &lt;&gt; 0 Then E5270.WriteLine("DZ") : GoTo Check_err </pre>
Line	Description
2 to 11	Declares variables used through the project. And sets the proper values.
13 to 18	Declares variables and sets the value.
20 to 22	Sets the data output format and A/D converter. Also sets the SMU filter off.
23 to 28	Applies voltage to device and checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err.

```

E5270.WriteLine("TSR") ' 30
E5270.WriteLine("TTI " & t(0) & ", " & mrng)
E5270.WriteLine("TSQ")
Dim ret_val As String() = E5270.ReadListAsStringArray()
Dim tend As String() = E5270.ReadListAsStringArray()
ret_val(0) = Right(ret_val(0), 12)
tend(0) = Right(tend(0), 12)
Dim mtime As Double = Val(tend(0)) - Val(ret_val(0))
Dim status As String = Left(ret_val(1), 3)
ret_val(1) = Right(ret_val(1), 12)
Dim meas As Double = Val(ret_val(1))
data(j, i) = Chr(13) & Chr(10) & meas * 1000 & ", " & status & ", " & mtime *
1000

E5270.WriteLine("DZ") ' 43
save_data(fname, title, value, data, nop1, nop2, E5270, t)
Exit Sub

Check_err: ' 47
E5270.WriteLine("EMG? " & err) : msg = E5270.Read(True)
MsgBox("Instrument error: " & err & Chr(10) & msg, vbOKOnly, "")
End Sub

```

Line	Description
30 to 41	Resets time stamp and performs the high-speed spot measurement. And stores the returned data into the <i>ret_val</i> string array variable. Finally, stores the measured data into the <i>data</i> array.
43 to 45	Applies 0 V from the all channels. And transfers the data stored in the <i>data</i> variable to the <i>save_data</i> subprogram (see Table 3-1). And the subprogram will save the data into the C:\Agilent\data\ex1.txt file (CSV) and displays the data on a message box.
48 to 49	Displays a message box to show an error message if the error is detected.

**Measurement Result Example**

Id (mA), Status, Meas Time (msec)  
3.8435, NAI, 1.1

Data save completed.

Do you want to perform measurement again?

## Spot Measurements

To perform spot measurements, use the following commands.

Function	Command	Parameters
Enables channels	CN	[ <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Disables channels	CL	[ <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets filter ON/OFF	[FL]	<i>mode</i> [, <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets series resistor ON/OFF	[SSR]	<i>chnum</i> [, <i>mode</i> ]
Sets integration time (Agilent E5270B can use AAD/AIT instead of AV.)	[AV]	<i>number</i> [, <i>mode</i> ]
	[AAD]	<i>chnum</i> [, <i>type</i> ]
	[AIT]	<i>type</i> , <i>mode</i> [, <i>N</i> ]
Forces constant voltage	DV	<i>chnum</i> , <i>vrangle</i> , <i>output</i> [, <i>comp</i> [, <i>polarity</i> [, <i>irangle</i> ]]]
Forces constant current	DI	<i>chnum</i> , <i>irangle</i> , <i>output</i> [, <i>comp</i> [, <i>polarity</i> [, <i>vrangle</i> ]]]
Sets voltage measurement range	[RV]	<i>chnum</i> , <i>range</i>
Sets current measurement range	[RI]	<i>chnum</i> , <i>range</i>
	[RM]	<i>chnum</i> , <i>mode</i> [, <i>rate</i> ]
Selects measurement mode	MM	1, <i>chnum</i> [, <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets SMU operation mode	[CMM]	<i>chnum</i> , <i>mode</i>
Executes measurement	XE	

### NOTE

If you use multiple measurement channels, the channels start measurement in the order defined in the MM command.

A program example of a spot measurement is shown below. This example measures MOSFET drain current.

**Table 3-3 Spot Measurement Example**

<pre> Sub perform_meas(ByVal E5270 As DirectIO, ByVal t() As Integer)           '1   Dim i As Integer = 0   Dim j As Integer = 0   Dim nop1 As Integer = 1   Dim nop2 As Integer = 1   Dim data(nop2 - 1, nop1 - 1) As String   Dim value As String = "Id (mA), Time (sec), Status"   Dim fname As String = "C:\Agilent\data\ex2.txt"   Dim title As String = "Measurement Result"   Dim msg As String = "No error."   Dim err As String = "0"    Dim vd As Double = 0.5   '13   Dim vg As Double = 0.5   Dim idcomp As Double = 0.05   Dim igcomp As Double = 0.01   Dim orng As Integer = 0   Dim mrng As Integer = 0   E5270.WriteLine("FMT 1")   '19   E5270.WriteLine("TSC 1")           ' enables time stamp output   E5270.WriteLine("AV 10,1")       ' sets number of samples for 1 data   E5270.WriteLine("FL 0")         ' sets filter off   E5270.WriteLine("DV " &amp; t(3) &amp; ",0,0,0.1") 'out= 0 V, comp= 0.1 A   '23   E5270.WriteLine("DV " &amp; t(2) &amp; ",0,0,0.1") 'out= 0 V, comp= 0.1 A   E5270.WriteLine("DV " &amp; t(1) &amp; ", " &amp; orng &amp; ", " &amp; vg &amp; ", " &amp; igcomp)   E5270.WriteLine("DV " &amp; t(0) &amp; ", " &amp; orng &amp; ", " &amp; vd &amp; ", " &amp; idcomp)   E5270.WriteLine("MM 1, " &amp; t(0))           '1: spot measurement   E5270.WriteLine("CMM " &amp; t(0) &amp; ",1") '1: compliance side measurement   E5270.WriteLine("RI " &amp; t(0) &amp; ", " &amp; mrng)   E5270.WriteLine("ERR? 1") : err = E5270.Read(True)                 '30   If err &lt;&gt; 0 Then E5270.WriteLine("DZ") : GoTo Check_err </pre>	
Line	Description
2 to 11	Declares variables used through the project. And sets the proper values.
13 to 18	Declares variables and sets the value.
19 to 22	Sets the data output format, time stamp data output mode, and A/D converter. Also sets the SMU filter off.
23 to 26	Applies voltage to device.
27 to 29	Sets the measurement mode, channel measurement mode, and measurement range.
30 to 31	Checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err.

## Programming Examples

### Spot Measurements

```

E5270.WriteLine("TSR")                                     ' 33
E5270.WriteLine("XE")
E5270.WriteLine("TSQ")
Dim ret_val As String() = E5270.ReadListAsStringArray()
Dim tend As String() = E5270.ReadListAsStringArray()
ret_val(0) = Right(ret_val(0), 12)
tend(0) = Right(tend(0), 12)
Dim mtime As Double = Val(tend(0)) - Val(ret_val(0))
Dim status As String = Left(ret_val(1), 3)
ret_val(1) = Right(ret_val(1), 12)
Dim meas As Double = Val(ret_val(1))
data(j, i) = Chr(13) & Chr(10) & meas * 1000 & ", " & status & ", " & mtime *
1000

E5270.WriteLine("DZ")                                     ' 46
save_data(fname, title, value, data, nop1, nop2, E5270, t)
Exit Sub

Check_err:                                                ' 50
E5270.WriteLine("EMG? " & err) : msg = E5270.Read(True)
MsgBox("Instrument error: " & err & Chr(10) & msg, vbOKOnly, "")
End Sub

```

Line	Description
33 to 44	Resets time stamp and performs the spot measurement. And stores the returned data into the <i>ret_val</i> string array variable. Finally, stores the measured data into the <i>data</i> array.
46 to 48	Applies 0 V from the all channels. And transfers the data stored in the <i>data</i> variable to the <i>save_data</i> subprogram (see Table 3-1). And the subprogram will save the data into the C:\Agilent\data\ex2.txt file (CSV) and displays the data on a message box.
51 to 52	Displays a message box to show an error message if the error is detected.

#### Measurement Result Example

Id (mA), Status, Meas Time (msec)  
3.8425, NAI, 1.1

Data save completed.

Do you want to perform measurement again?



## Pulsed Spot Measurements

To perform pulsed spot measurements, use the following commands.

Function	Command	Parameters
Enables channels	CN	[ <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Disables channels	CL	[ <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets filter ON/OFF	[FL]	<i>mode</i> [, <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets series resistor ON/OFF	[SSR]	<i>chnum</i> [, <i>mode</i> ]
Forces constant voltage	DV	<i>chnum</i> , <i>vrange</i> , <i>output</i> [, <i>comp</i> [, <i>polarity</i> [, <i>irange</i> ]]]
Forces constant current	DI	<i>chnum</i> , <i>irange</i> , <i>output</i> [, <i>comp</i> [, <i>polarity</i> [, <i>vrange</i> ]]]
Sets pulse timing parameters	PT	<i>hold</i> , <i>width</i> [, <i>period</i> [, <i>tdelay</i> ]]
Forces pulse voltage	PV	<i>chnum</i> , <i>range</i> , <i>base</i> , <i>pulse</i> [, <i>comp</i> ]
Forces pulse current	PI	<i>chnum</i> , <i>range</i> , <i>base</i> , <i>pulse</i> [, <i>comp</i> ]
Sets voltage measurement range	[RV]	<i>chnum</i> , <i>range</i>
Sets current measurement range	[RI]	<i>chnum</i> , <i>range</i>
	[RM]	<i>chnum</i> , <i>mode</i> [, <i>rate</i> ]
Selects measurement mode	MM	3, <i>chnum</i>
Sets SMU operation mode	[CMM]	<i>chnum</i> , <i>mode</i>
Executes measurement	XE	

### NOTE

Measurement channel performs measurement so that the pulse width and pulse period are kept. The integration time is automatically set by the instrument, and you cannot change. For the Agilent E5270B, note that the high-resolution ADC cannot be used for the pulsed measurements. The AAD/AIT/AV/WT command settings are ignored.

## Programming Examples

### Pulsed Spot Measurements

A program example of a pulsed spot measurement is shown below. This example measures MOSFET drain current.

**Table 3-4 Pulsed Spot Measurement Example**

	<pre> Sub perform_meas(ByVal E5270 As DirectIO, ByVal t() As Integer)          '1   Dim i As Integer = 0   Dim j As Integer = 0   Dim nop1 As Integer = 1   Dim nop2 As Integer = 1   Dim data(nop2 - 1, nop1 - 1) As String   Dim value As String = "Id (mA), Time (sec), Status"   Dim fname As String = "C:\Agilent\data\ex3.txt"   Dim title As String = "Measurement Result"   Dim msg As String = "No error."   Dim err As String = "0"    Dim vd As Double = 0.5   '13   Dim vg As Double = 0.5   Dim idcomp As Double = 0.05   Dim igcomp As Double = 0.01   Dim orng As Integer = 0   Dim mrng As Integer = 0   E5270.WriteLine("FMT 1")   '19   E5270.WriteLine("TSC 1")      ' enables time stamp output   E5270.WriteLine("FL 1")      ' sets filter on   E5270.WriteLine("DV " &amp; t(3) &amp; ",0,0,0.1") 'out= 0 V, comp= 0.1 A   '22   E5270.WriteLine("DV " &amp; t(2) &amp; ",0,0,0.1") 'out= 0 V, comp= 0.1 A   Dim g_pt As String = "0.1,0.01,0.02" 'hold, width, period in sec   E5270.WriteLine("PT " &amp; g_pt)   Dim v0 As Double = 0 '0 V: pulse base voltage   E5270.WriteLine("PV " &amp; t(1) &amp; ",," &amp; orng &amp; ",," &amp; v0 &amp; ",," &amp; vg &amp; ",," &amp; igcomp)   E5270.WriteLine("DV " &amp; t(0) &amp; ",," &amp; orng &amp; ",," &amp; vd &amp; ",," &amp; idcomp)   E5270.WriteLine("MM 3," &amp; t(0)) '3: pulsed spot measurement   E5270.WriteLine("CMM " &amp; t(0) &amp; ",1") '1: compliance side measurement   E5270.WriteLine("RI " &amp; t(0) &amp; ",," &amp; mrng)   E5270.WriteLine("ERR? 1") : err = E5270.Read(True)                 '32   If err &lt;&gt; 0 Then E5270.WriteLine("DZ") : GoTo Check_err </pre>	
Line	Description	
2 to 11	Declares variables used through the project. And sets the proper values.	
13 to 18	Declares variables and sets the value.	
19 to 21	Sets the data output format, time stamp data output mode, and SMU filter.	
22 to 28	Applies DC voltage to device, and sets the voltage pulse source.	
29 to 31	Sets the measurement mode, channel measurement mode, and measurement range.	
32 to 33	Checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err.	

```

E5270.WriteLine("TSR") ' 35
E5270.WriteLine("XE")
E5270.WriteLine("TSQ")
Dim ret_val As String() = E5270.ReadListAsStringArray()
Dim tend As String() = E5270.ReadListAsStringArray()
ret_val(0) = Right(ret_val(0), 12)
tend(0) = Right(tend(0), 12)
Dim mtime As Double = Val(tend(0)) - Val(ret_val(0))
Dim status As String = Left(ret_val(1), 3)
ret_val(1) = Right(ret_val(1), 12)
Dim meas As Double = Val(ret_val(1))
data(j, i) = Chr(13) & Chr(10) & meas * 1000 & ", " & status & ", " & mtime *
1000

E5270.WriteLine("DZ") ' 48
save_data(fname, title, value, data, nop1, nop2, E5270, t)
Exit Sub

Check_err: ' 52
E5270.WriteLine("EMG? " & err) : msg = E5270.Read(True)
MsgBox("Instrument error: " & err & Chr(10) & msg, vbOKOnly, "")
End Sub

```

Line	Description
35 to 46	Resets time stamp and performs the pulsed spot measurement. And stores the returned data into the <i>ret_val</i> string array variable. Finally, stores the measured data into the <i>data</i> array.
48 to 50	Applies 0 V from the all channels. And transfers the data stored in the <i>data</i> variable to the <i>save_data</i> subprogram (see Table 3-1). And the subprogram will save the data into the C:\Agilent\data\ex3.txt file (CSV) and displays the data on a message box.
53 to 54	Displays a message box to show an error message if the error is detected.

**Measurement Result Example**

```

Id (mA), Status, Meas Time (msec)
3.825, NAI, 0.7999999999999995

```

Data save completed.

Do you want to perform measurement again?

## Staircase Sweep Measurements

To perform staircase sweep measurements, use the following commands.

Function	Command	Parameters
Enables channels	CN	[ <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Disables channels	CL	[ <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets filter ON/OFF	[FL]	<i>mode</i> [, <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets series resistor ON/OFF	[SSR]	<i>chnum</i> [, <i>mode</i> ]
Sets integration time (Agilent E5270B can use AAD/AIT instead of AV.)	[AV]	<i>number</i> [, <i>mode</i> ]
	[AAD]	<i>chnum</i> [, <i>type</i> ]
	[AIT]	<i>type</i> , <i>mode</i> [, <i>N</i> ]
Sets sweep source timing parameter	[WT]	<i>hold</i> , <i>delay</i> [, <i>sdelay</i> ][, <i>tdelay</i> ][, <i>mdelay</i> ]]
Sets sweep abort function	[WM]	<i>abort</i> [, <i>post</i> ]
Sets voltage sweep source	WV	<i>chnum</i> , <i>mode</i> , <i>range</i> , <i>start</i> , <i>stop</i> , <i>step</i> [, <i>comp</i> ][, <i>Pcomp</i> ]]
Sets current sweep source	WI	
Sets synchronous sweep source <sup>a</sup>	[WSV]	<i>chnum</i> , <i>range</i> , <i>start</i> , <i>stop</i> [, <i>comp</i> ][, <i>Pcomp</i> ]]
	[WSI]	
Forces constant voltage	DV	<i>chnum</i> , <i>range</i> , <i>output</i> [, <i>comp</i> ][, <i>polarity</i> ][, <i>crange</i> ]]]
Forces constant current	DI	
Sets voltage measurement range	[RV]	<i>chnum</i> , <i>range</i>
Sets current measurement range	[RI]	<i>chnum</i> , <i>range</i>
	[RM]	<i>chnum</i> , <i>mode</i> [, <i>rate</i> ]
Selects measurement mode	MM	2, <i>chnum</i> [, <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets SMU operation mode	[CMM]	<i>chnum</i> , <i>mode</i>
Executes measurement	XE	

a. The WSV/WSI command must be entered after the WV/WI command.

### NOTE

If you use multiple measurement channels, the channels start measurement in the order defined in the MM command.

A program example of a staircase sweep measurement is shown below. This example measures MOSFET Id-Vd characteristics.

**Table 3-5 Staircase Sweep Measurement Example 1**

```

Sub perform_meas(ByVal E5270 As DirectIO, ByVal t() As Integer)      '1
  Dim i As Integer = 0
  Dim j As Integer = 0
  Dim nop1 As Integer = 11
  Dim nop2 As Integer = 3
  Dim data(nop2 - 1, nop1 - 1) As String
  Dim value As String = "Vg (V), Vd (V), Id (mA), Time (sec), Status"
  Dim fname As String = "C:\Agilent\data\ex4.txt"
  Dim title As String = "Measurement Result"
  Dim msg As String = "No error."
  Dim err As String = "0"

  Dim vd1 As Double = 0                                             '13
  Dim vd2 As Double = 3
  Dim idcomp As Double = 0.05
  Dim vg1 As Double = 1
  Dim vg2 As Double = 3
  Dim igcomp As Double = 0.01
  Dim vg As Double = vg1                                           'secondary sweep output value
  Dim d_vg As Double = 0                                           'secondary sweep step value (delta)
  If nop2 <> 1 Then d_vg = (vg2 - vg1) / (nop2 - 1)
  Dim hold As Double = 0
  Dim delay As Double = 0
  Dim s_delay As Double = 0
  Dim p_comp As Double = 0.3
  Dim rep As Integer = nop1
  Dim ret_val As String()                                          '27
  Dim data1 As String
  Dim data2 As String
  Dim data3 As String
  Dim sc(nop1) As Double
  Dim md(nop1) As Double
  Dim st(nop1) As String
  Dim tm(nop1) As Double
  E5270.WriteLine("FMT 1,1")   ' ASCII<CRLF EOI> w/sweep source data   '35
  E5270.WriteLine("TSC 1")    ' enables time stamp output
  E5270.WriteLine("AV 10,1")  ' sets number of samples for 1 data
  E5270.WriteLine("FL 0")    ' sets filter off

```

Line	Description
2 to 11	Declares variables used through the project. And sets the proper values.
13 to 26	Declares variables used to set the source output, and sets the value.
27 to 34	Declares variables used to read the measurement data.
35 to 38	Sets the data output format, time stamp data output mode, and A/D converter. Also sets the SMU filter off.

## Programming Examples

### Staircase Sweep Measurements

```

E5270.WriteLine("DV " & t(3) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A '40
E5270.WriteLine("DV " & t(2) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A
E5270.WriteLine("MM 2," & t(0)) '2: staircase sweep measurement
E5270.WriteLine("CMM " & t(0) & ",1") '1: compliance side measurement
E5270.WriteLine("RI " & t(0) & ",0") '0: auto ranging
E5270.WriteLine("WT " & hold & ", " & delay & ", " & s_delay)
E5270.WriteLine("WM 2,1") ' stops at any abnormal
E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err

For j = 0 To nop2 - 1 '50
    E5270.WriteLine("WV " & t(0) & ",1,0," & vd1 & ", " & vd2 & ", " & nop1 & ", "
    & idcomp & ", " & p_comp)
    E5270.WriteLine("DV " & t(1) & ",0," & vg & ", " & igcomp)
    E5270.WriteLine("TSR")
    E5270.WriteLine("XE")
    E5270.WriteLine("*OPC?")
    rep = E5270.Read(True)
    E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
    If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err
    E5270.WriteLine("NUB?") : rep = E5270.Read(True) '59
    If rep <> nop1 * 3 Then E5270.WriteLine("DZ") : GoTo Check_nop

    ret_val = E5270.ReadListAsStringArray()
    For i = 0 To nop1 - 1
        data1 = ret_val(i * 3)
        data2 = ret_val(i * 3 + 1)
        data3 = ret_val(i * 3 + 2)
        data1 = Right(data1, 12) : tm(i) = Val(data1)
        st(i) = Left(data2, 3)
        data2 = Right(data2, 12) : md(i) = Val(data2)
        data3 = Right(data3, 12) : sc(i) = Val(data3)
        data(j, i) = Chr(13) & Chr(10) & vg & ", " & sc(i) & ", " & md(i) * 1000
    & ", " & tm(i) & ", " & st(i)
    Next i
    vg = vg + d_vg
Next j '74

```

Line	Description
40 to 44	Applies voltage to device. And sets the measurement mode, channel measurement mode, and measurement range.
45 to 48	Sets the timing parameters and sweep mode of the staircase sweep source. And checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err.
50 to 74	Sets the sweep source, applies voltage to device, resets time stamp, and performs the staircase sweep measurement. And stores the returned data into the <i>ret_val</i> string array variable. Finally, stores the measured data into the <i>data</i> array.
59 to 60	Checks number of returned data. If it is not correct, forces 0 V and goes to Check_nop.
71	Stores the measured data into the <i>data</i> array.

<pre>E5270.WriteLine("DZ") save_data(fname, title, value, data, nop1, nop2, E5270, t) Exit_Sub</pre>	'76
<pre>Check_err: E5270.WriteLine("EMG? " &amp; err) : msg = E5270.Read(True) MsgBox("Instrument error: " &amp; err &amp; Chr(10) &amp; msg, vbOKOnly, "") Exit_Sub</pre>	'80
<pre>Check_nop: MsgBox("No. of data: " &amp; rep &amp; " (not " &amp; nop1 * 3 &amp; ")", vbOKOnly, "") End_Sub</pre>	'86
Line	Description
76 to 78	Applies 0 V from the all channels. And transfers the data stored in the <i>data</i> variable to the <i>save_data</i> subprogram (see Table 3-1). And the subprogram will save the data into the C:\Agilent\data\ex4.txt file (CSV) and displays the data on a message box.
81 to 82	Displays a message box to show an error message if the error is detected.
86	Displays a message box to show an error message if the number of returned data is not correct.

**Measurement  
Result Example**

```
Vg (V), Vd (V), Id (mA), Time (sec), Status
1, 0, 0.0020335, 0.0166, NAI
1, 0.3, 3.0515, 0.0229, NAI
1, 0.6, 5.6325, 0.0243, NAI
1, 0.9, 7.7845, 0.0257, NAI
1, 1.2, 9.6155, 0.0272, NAI
1, 1.5, 11.2055, 0.0283, NAI
1, 1.8, 12.63, 0.0316, NAI
1, 2.1, 13.9, 0.033, NAI
1, 2.4, 15.05, 0.034, NAI
1, 2.7, 16.095, 0.0353, NAI
1, 3, 17.045, 0.0363, NAI
2, 0, 0.0025305, 0.016, NAI
2, 0.3, 4.0265, 0.022, NAI
2, 0.6, 7.635, 0.0236, NAI
2, 0.9, 10.804, 0.0251, NAI
2, 1.2, 13.565, 0.0281, NAI
2, 1.5, 15.945, 0.0294, NAI
2, 1.8, 18.01, 0.0305, NAI
2, 2.1, 19.825, 0.0317, NAI
2, 2.4, 21.445, 0.033, NAI
2, 2.7, 22.915, 0.0341, NAI
2, 3, 24.235, 0.0354, NAI
3, 0, 0.0028565, 0.016, NAI
3, 0.3, 4.8745, 0.0228, NAI
3, 0.6, 9.3705, 0.0243, NAI
3, 0.9, 13.445, 0.0278, NAI
3, 1.2, 17.12, 0.0292, NAI
3, 1.5, 20.37, 0.0302, NAI
3, 1.8, 23.24, 0.0315, NAI
3, 2.1, 25.75, 0.0326, NAI
3, 2.4, 27.98, 0.0339, NAI
3, 2.7, 29.96, 0.0352, NAI
3, 3, 31.73, 0.0362, NAI

Data save completed.

Do you want to perform measurement again?
```

## Programming Examples

### Staircase Sweep Measurements

The following program performs the same measurement as the previous program (Table 3-5). This program starts to read measurement data before the sweep measurement is completed.

**Table 3-6 Staircase Sweep Measurement Example 2**

```

Sub perform_meas(ByVal E5270 As DirectIO, ByVal t() As Integer)           '1
  Dim i As Integer = 0
  Dim j As Integer = 0
  Dim nop1 As Integer = 11
  Dim nop2 As Integer = 3
  Dim data(nop2 - 1, nop1 - 1) As String
  Dim value As String = "Vg (V), Vd (V), Id (mA), Time (sec), Status"
  Dim fname As String = "C:\Agilent\data\ex4r.txt"
  Dim title As String = "Measurement Result"
  Dim msg As String = "No error."
  Dim err As String = "0"

  Dim vd1 As Double = 0                                               '13
  Dim vd2 As Double = 3
  Dim idcomp As Double = 0.05
  Dim vg1 As Double = 1
  Dim vg2 As Double = 3
  Dim igcomp As Double = 0.01
  Dim vg As Double = vg1                                             'secondary sweep output value
  Dim d_vg As Double = 0                                             'secondary sweep step value (delta)
  If nop2 <> 1 Then d_vg = (vg2 - vg1) / (nop2 - 1)
  Dim hold As Double = 0
  Dim delay As Double = 0
  Dim s_delay As Double = 0
  Dim p_comp As Double = 0.3

  E5270.WriteLine("FMT 5,1")                                         ' ASCII comma w/sweep source data           '27
  E5270.WriteLine("TSC 1")                                           ' enables time stamp output
  E5270.WriteLine("AV 10,1")                                         ' sets number of samples for 1 data
  E5270.WriteLine("FL 0")                                           ' sets filter off
  E5270.WriteLine("DV " & t(3) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A
  E5270.WriteLine("DV " & t(2) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A
  E5270.WriteLine("MM 2," & t(0)) '2: staircase sweep measurement
  E5270.WriteLine("CMM " & t(0) & ",1") '1: compliance side measurement
  E5270.WriteLine("RI " & t(0) & ",0") '0: auto ranging
  E5270.WriteLine("WT " & hold & ", " & delay & ", " & s_delay)
  E5270.WriteLine("WM 2,1") ' stops at any abnormal
  E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
  If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err           '39

```

Line	Description
1 to 25	Declares variables and set the value. Almost same as the previous program. Only the fname value is different.
27	Sets the data output format. A comma will be sent as the data terminator.
28 to 39	Sets the measurement condition. Same as the lines 36 to 48 of the previous program.



```

Dim ret_val As String : Dim status As String : Dim chan As String           '41
Dim type As String : Dim rdata As Double : Dim tdata As Double
Dim sdata As Double : Dim mdata As Double : Dim mstat As String
Dim disp_data As String : Dim k As Integer = 0
E5270.TerminationCharacter = Chr(44)           'terminator=comma       '45
E5270.TerminationCharacterEnabled = True

For j = 0 To nop2 - 1                                                       '48
    E5270.WriteLine("WV " & t(0) & ",1,0," & vd1 & "," & vd2 & "," & nop1 & ","
    & idcomp & "," & p_comp)
    E5270.WriteLine("DV " & t(1) & ",0" & "," & vg & "," & igcomp)
    E5270.WriteLine("TSR")
    E5270.WriteLine("XE")
    For i = 0 To nop1 - 1
        For k = 0 To 2                                                       '54
            ret_val = E5270.Read(True)
            status = Left(ret_val, 1)           'status
            chan = Mid(ret_val, 2, 1)         'channel
            type = Mid(ret_val, 3, 1)         'data type
            rdata = Val(Right(ret_val, 12))   'data
            If type = "T" Then tdata = rdata   'time data
            If type = "I" Then mdata = rdata : mstat = status 'meas data, status
            If type = "V" Then sdata = rdata   'source data
        Next k
        If mstat <> "N" Then E5270.WriteLine("DZ") : GoTo Check_err           '64
        disp_data = "Vg = " & vg & " (V), "
        disp_data = disp_data & "Vd = " & sdata & " (V), "
        disp_data = disp_data & "Id = " & mdata * 1000 & " (mA), "
        disp_data = disp_data & "Time = " & tdata & " (sec), "
        disp_data = disp_data & "Status = " & mstat
        Console.WriteLine(disp_data)
        data(j, i) = Chr(13) & Chr(10) & vg & ", " & sdata & ", " & mdata * 1000
    & ", " & tdata & ", " & mstat
        Next i
        vg = vg + d_vg
    Next j                                                                    '74

```

Line	Description
41 to 44	Declares the variables used to read and save the measurement data.
45 to 46	Declares that a comma is the data terminator needed to read data, and enables it.
49 to 52	Sets the sweep source, applies voltage to device, resets time stamp, and triggers the staircase sweep measurement. Same as the lines 51 to 54 of the previous program.
54 to 63	Reads data and picks up the status, channel, data type, and data. And stores the time data, measurement data, and source data into the variables, <i>tdata</i> , <i>mdata</i> , and <i>sdata</i> .
64	Checks the status of the measurement channel. And applies 0 V and goes to <i>Check_err</i> if an error is detected.
65 to 71	Displays the data on the console window. And stores the data into the <i>data</i> array.

## Programming Examples

### Staircase Sweep Measurements

<pre>E5270.WriteLine("DZ") save_data(fname, title, value, data, nop1, nop2, E5270, t) Exit_Sub</pre>	'76
<pre>Check_err: E5270.WriteLine("EMG? " &amp; err) : msg = E5270.Read(True) MsgBox("Instrument error: " &amp; err &amp; Chr(10) &amp; msg, vbOKOnly, "") Exit_Sub</pre>	'80
<pre>Check_nop: MsgBox("No. of data: " &amp; rep &amp; " (not " &amp; nop1 * 3 &amp; ")", vbOKOnly, "") End_Sub</pre>	'86
Line	Description
76 to 78	Applies 0 V from the all channels. And transfers the data stored in the <i>data</i> variable to the <i>save_data</i> subprogram (see Table 3-1). And the subprogram will save the data into the C:\Agilent\data\ex4r.txt file (CSV) and displays the data on a message box.
81 to 82	Displays a message box to show an error message if the error is detected.
86	Displays a message box to show an error message if the number of returned data is not correct.

#### Measurement Result Example

```
Vg (V), Vd (V), Id (mA), Time (sec), Status
1, 0, 0.0020335, 0.0166, NAI
1, 0.3, 3.0515, 0.0229, NAI
1, 0.6, 5.6325, 0.0243, NAI
1, 0.9, 7.7845, 0.0257, NAI
1, 1.2, 9.6155, 0.0272, NAI
1, 1.5, 11.2055, 0.0283, NAI
1, 1.8, 12.63, 0.0316, NAI
1, 2.1, 13.9, 0.033, NAI
1, 2.4, 15.05, 0.034, NAI
1, 2.7, 16.095, 0.0353, NAI
1, 3, 17.045, 0.0363, NAI
2, 0, 0.0025305, 0.016, NAI
2, 0.3, 4.0265, 0.022, NAI
2, 0.6, 7.635, 0.0236, NAI
2, 0.9, 10.804, 0.0251, NAI
2, 1.2, 13.565, 0.0281, NAI
2, 1.5, 15.945, 0.0294, NAI
2, 1.8, 18.01, 0.0305, NAI
2, 2.1, 19.825, 0.0317, NAI
2, 2.4, 21.445, 0.033, NAI
2, 2.7, 22.915, 0.0341, NAI
2, 3, 24.235, 0.0354, NAI
3, 0, 0.0028565, 0.016, NAI
3, 0.3, 4.8745, 0.0228, NAI
3, 0.6, 9.3705, 0.0243, NAI
3, 0.9, 13.445, 0.0278, NAI
3, 1.2, 17.12, 0.0292, NAI
3, 1.5, 20.37, 0.0302, NAI
3, 1.8, 23.24, 0.0315, NAI
3, 2.1, 25.75, 0.0326, NAI
3, 2.4, 27.98, 0.0339, NAI
3, 2.7, 29.96, 0.0352, NAI
3, 3, 31.73, 0.0362, NAI

Data save completed.

Do you want to perform measurement again?
```

The following program example executes the synchronous sweep measurement using two sweep sources. This example measures MOSFET Id-Vg characteristics.

**Table 3-7 Staircase Sweep Measurement Example 3**

	<pre> Sub perform_meas(ByVal E5270 As DirectIO, ByVal t() As Integer)           '1   Dim i As Integer = 0   Dim j As Integer = 0   Dim nop1 As Integer = 11   Dim nop2 As Integer = 1   Dim data(nop2 - 1, nop1 - 1) As String   Dim value As String = "Vg (V), Id (mA), Time (sec), Status"   Dim fname As String = "C:\Agilent\data\ex5.txt"   Dim title As String = "Measurement Result"   Dim msg As String = "No error."   Dim err As String = "0"    Dim vd1 As Double = 0   Dim vd2 As Double = 2   Dim idcomp As Double = 0.05   Dim pd_comp As Double = 0.1   Dim vg1 As Double = vd1   Dim vg2 As Double = vd2   Dim igcomp As Double = 0.01   Dim pg_comp As Double = 0.05   Dim hold As Double = 0   Dim delay As Double = 0   Dim s_delay As Double = 0   Dim rep As Integer = nop1   Dim ret_val As String()   Dim data1 As String   Dim data2 As String   Dim data3 As String   Dim sc(nop1) As Double   Dim md(nop1) As Double   Dim st(nop1) As String   Dim tm(nop1) As Double   E5270.WriteLine("FMT 1,1")      ' ASCII&lt;CRLF EOI&gt; w/sweep source data   '33   E5270.WriteLine("TSC 1")      ' enables time stamp output   E5270.WriteLine("AV 10,1")    ' sets number of samples for 1 data   E5270.WriteLine("FL 0")      ' sets filter off </pre>	<p>'1</p> <p>'13</p> <p>'25</p> <p>'33</p>
Line	Description	
2 to 11	Declares variables used through the project. And sets the proper values.	
13 to 24	Declares variables used to set the source output, and sets the value.	
25 to 32	Declares variables used to read the measurement data.	
33 to 36	Sets the data output format, time stamp data output mode, and A/D converter. Also sets the SMU filter off.	

## Programming Examples

### Staircase Sweep Measurements

```

E5270.WriteLine("DV " & t(3) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A '38
E5270.WriteLine("DV " & t(2) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A
E5270.WriteLine("MM 2," & t(0)) '2: staircase sweep measurement
E5270.WriteLine("CMM " & t(0) & ",1") '1: compliance side measurement
E5270.WriteLine("RI " & t(0) & ",0") '0: auto ranging
E5270.WriteLine("WT " & hold & "," & delay & "," & s_delay)
E5270.WriteLine("WM 2,1") ' stops at any abnormal
E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err

E5270.WriteLine("WV " & t(0) & ",1,0," & vd1 & "," & vd2 & "," & nop1 & "," &
idcomp & "," & pd_comp)
E5270.WriteLine("WSV " & t(1) & ",0," & vg1 & "," & vg2 & "," & igcomp & "," &
pg_comp)
E5270.WriteLine("TSR")
E5270.WriteLine("XE")
E5270.WriteLine("*OPC?") : rep = E5270.Read(True)
E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err
E5270.WriteLine("NUB?") : rep = E5270.Read(True) '55
If rep <> nop1 * 3 Then E5270.WriteLine("DZ") : GoTo Check_nop

ret_val = E5270.ReadListAsStringArray()
For i = 0 To nop1 - 1
    data1 = ret_val(i * 3)
    data2 = ret_val(i * 3 + 1)
    data3 = ret_val(i * 3 + 2)
    data1 = Right(data1, 12) : tm(i) = Val(data1)
    st(i) = Left(data2, 3)
    data2 = Right(data2, 12) : md(i) = Val(data2)
    data3 = Right(data3, 12) : sc(i) = Val(data3)
    data(j, i) = Chr(13) & Chr(10) & sc(i) & ", " & md(i) * 1000 & ", " & tm(i)
    & ", " & st(i)
Next i '68

```

Line	Description
38 to 42	Applies voltage to device. And sets the measurement mode, channel measurement mode, and measurement range.
43 to 46	Sets the timing parameters and sweep mode of the staircase sweep source. And checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err.
48 to 68	Sets the sweep sources, applies voltage to device, resets time stamp, and performs the staircase sweep measurement. And stores the returned data into the <i>ret_val</i> string array variable. Finally, stores the measured data into the <i>data</i> array.
55 to 56	Checks number of returned data. If it is not correct, forces 0 V and goes to Check_nop.
67	Stores the measured data into the <i>data</i> array.

<pre>E5270.WriteLine("DZ") save_data(fname, title, value, data, nop1, nop2, E5270, t) Exit Sub</pre>	'70
<pre>Check_err: E5270.WriteLine("EMG? " &amp; err) : msg = E5270.Read(True) MsgBox("Instrument error: " &amp; err &amp; Chr(10) &amp; msg, vbOKOnly, "") Exit Sub</pre>	'74
<pre>Check_nop: MsgBox("No. of data: " &amp; rep &amp; " (not " &amp; nop1 * 3 &amp; ")", vbOKOnly, "") End Sub</pre>	'80
Line	Description
70 to 72	Applies 0 V from the all channels. And transfers the data stored in the <i>data</i> variable to the <i>save_data</i> subprogram (see Table 3-1). And the subprogram will save the data into the C:\Agilent\data\ex5.txt file (CSV) and displays the data on a message box.
75 to 76	Displays a message box to show an error message if the error is detected.
80	Displays a message box to show an error message if the number of returned data is not correct.

**Measurement  
Result Example**

```
Vg (V), Id (mA), Time (sec), Status
0, 9.8235E-05, 0.0199, NAI
0.2, 1.464, 0.0292, NAI
0.4, 3.035, 0.0366, NAI
0.6, 4.7175, 0.0441, NAI
0.8, 6.511, 0.0515, NAI
1, 8.4075, 0.059, NAI
1.2, 10.41, 0.0636, NAI
1.4, 12.49, 0.0654, NAI
1.6, 14.665, 0.0671, NAI
1.8, 16.915, 0.0689, NAI
2, 19.235, 0.0707, NAI
```

Data save completed.

Do you want to perform measurement again?

## Pulsed Sweep Measurements

To perform pulsed sweep measurements, use the following commands.

Function	Command	Parameters
Enables channels	CN	[ <i>chnum</i> ... [ <i>,chnum</i> ] ... ]
Disables channels	CL	[ <i>chnum</i> ... [ <i>,chnum</i> ] ... ]
Sets filter ON/OFF	[FL]	<i>mode</i> [ <i>,chnum</i> ... [ <i>,chnum</i> ] ... ]
Sets series resistor ON/OFF	[SSR]	<i>chnum</i> [ <i>,mode</i> ]
Sets pulse timing parameters	PT	<i>hold,width,period</i> [ <i>,tdelay</i> ]
Sets sweep abort function	[WM]	<i>abort</i> [ <i>,post</i> ]
Sets pulsed sweep source	PWV	<i>chnum,mode,range,base,start,stop,step</i> [ <i>,comp</i> ]
	PWI	
Sets synchronous sweep source <sup>a</sup>	[WSV]	<i>chnum,range,start,stop</i> [ <i>,comp</i> [ <i>,Pcomp</i> ]]
	[WSI]	
Forces constant voltage	DV	<i>chnum,range,output</i> [ <i>,comp</i> [ <i>,polarity</i> [ <i>,crange</i> ]]]
Forces constant current	DI	
Sets voltage measurement range	[RV]	<i>chnum,range</i>
Sets current measurement range	[RI]	<i>chnum,range</i>
	[RM]	<i>chnum,mode</i> [ <i>,rate</i> ]
Selects measurement mode	MM	4, <i>chnum</i>
Sets SMU operation mode	[CMM]	<i>chnum,mode</i>
Executes measurement	XE	

a. The WSV/WSI command must be entered after the PWV/PWI command.

### NOTE

Measurement channel performs measurement so that the pulse width and pulse period are kept. The integration time is automatically set by the instrument, and you cannot change. For the Agilent E5270B, note that the high-resolution ADC cannot be used for the pulsed measurements. The AAD/AIT/AV/WT command settings are ignored.

A program example of a pulsed sweep measurement is shown below. This example measures the bipolar transistor Ic-Vc characteristics.

**Table 3-8 Pulsed Sweep Measurement Example**

```

Sub perform_meas(ByVal E5270 As DirectIO, ByVal t() As Integer)      '1
  Dim i As Integer = 0
  Dim j As Integer = 0
  Dim nop1 As Integer = 11
  Dim nop2 As Integer = 3
  Dim data(nop2 - 1, nop1 - 1) As String
  Dim value As String = "Ib (uA), Vc (V), Ic (mA), Time (sec), Status"
  Dim fname As String = "C:\Agilent\data\ex6.txt"
  Dim title As String = "Measurement Result"
  Dim msg As String = "No error."
  Dim err As String = "0"

  Dim v0 As Double = 0                                             '13
  Dim vc1 As Double = 0
  Dim vc2 As Double = 3
  Dim icomp As Double = 0.05
  Dim ib1 As Double = 0.00005
  Dim ib2 As Double = 0.00015
  Dim vbcomp As Double = 5
  Dim ib As Double = ib1                                           'secondary sweep output value
  Dim d_ib As Double = 0                                           'secondary sweep step value (delta)
  If nop2 <> 1 Then d_ib = (ib2 - ib1) / (nop2 - 1)
  Dim hold As Double = 0
  Dim delay As Double = 0
  Dim s_delay As Double = 0
  Dim rep As Integer = nop1
  Dim ret_val As String()                                          '27
  Dim data1 As String
  Dim data2 As String
  Dim data3 As String
  Dim sc(nop1) As Double
  Dim md(nop1) As Double
  Dim st(nop1) As String
  Dim tm(nop1) As Double

  E5270.WriteLine("FMT 1,1")   ' ASCII<CRLF EOI> w/sweep source data   '36
  E5270.WriteLine("TSC 1")    ' enables time stamp output
  E5270.WriteLine("FL 1")     ' sets filter on

```

Line	Description
2 to 11	Declares variables used through the project. And sets the proper values.
13 to 26	Declares variables used to set the source output, and sets the value.
27 to 34	Declares variables used to read the measurement data.
36 to 38	Sets the data output format, time stamp data output mode, and SMU filter.

## Programming Examples

### Pulsed Sweep Measurements

```

E5270.WriteLine("CL " & t(3)) '40
E5270.WriteLine("DV " & t(0) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A
Dim b_pt As String = "0.1,0.01,0.02" 'hold, width, period in sec
E5270.WriteLine("PT " & b_pt)
E5270.WriteLine("MM 4," & t(2)) '4: pulsed sweep measurement
E5270.WriteLine("CMM " & t(2) & ",1") '1: compliance side measurement
E5270.WriteLine("RI " & t(2) & ",0") '0: auto ranging
E5270.WriteLine("WM 2,1") ' stops at any abnormal '47

E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err
For j = 0 To nop2 - 1 '51
    E5270.WriteLine("PWV " & t(2) & ",1,0," & v0 & "," & vc1 & "," & vc2 & ","
    & nop1 & "," & icomp)
    E5270.WriteLine("DI " & t(1) & ",0," & ib & "," & vbcomp)
    E5270.WriteLine("TSR")
    E5270.WriteLine("XE")
    E5270.WriteLine("*OPC?") : rep = E5270.Read(True)
    E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
    If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err
    E5270.WriteLine("NUB?") : rep = E5270.Read(True) '59
    If rep <> nop1 * 3 Then E5270.WriteLine("DZ") : GoTo Check_nop
    ret_val = E5270.ReadListAsStringArray()
    For i = 0 To nop1 - 1
        data1 = ret_val(i * 3)
        data2 = ret_val(i * 3 + 1)
        data3 = ret_val(i * 3 + 2)
        data1 = Right(data1, 12) : tm(i) = Val(data1)
        st(i) = Left(data2, 3)
        data2 = Right(data2, 12) : md(i) = Val(data2)
        data3 = Right(data3, 12) : sc(i) = Val(data3)
        data(j, i) = Chr(13) & Chr(10) & ib * 1000000 & ", " & sc(i) & ", " &
md(i) * 1000 & ", " & tm(i) & ", " & st(i)
    Next i
    ib = ib + d_ib
Next j '73

```

Line	Description
40	Disables SMU assigned to t(3) that is not needed.
41 to 47	Applies voltage to device. And sets the pulse timing parameters, measurement mode, channel measurement mode, measurement range, and sweep mode.
49 to 50	Checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err.
51 to 73	Sets the pulsed sweep source, applies voltage to device, resets time stamp, and performs the pulsed sweep measurement. And stores the returned data into the <i>ret_val</i> string array variable. Finally, stores the measured data into the <i>data</i> array.
59 to 60	Checks number of returned data. If it is not correct, forces 0 V and goes to Check_nop.



<pre style="margin: 0;">E5270.WriteLine("DZ") save_data(fname, title, value, data, nop1, nop2, E5270, t) Exit_Sub</pre>	'75
<pre style="margin: 0;">Check_err: E5270.WriteLine("EMG? " &amp; err) : msg = E5270.Read(True) MsgBox("Instrument error: " &amp; err &amp; Chr(10) &amp; msg, vbOKOnly, "") Exit_Sub</pre>	'79
<pre style="margin: 0;">Check_nop: MsgBox("No. of data: " &amp; rep &amp; " (not " &amp; nop1 * 3 &amp; ")", vbOKOnly, "") End_Sub</pre>	'85
Line	Description
75 to 77	Applies 0 V from the all channels. And transfers the data stored in the <i>data</i> variable to the <i>save_data</i> subprogram (see Table 3-1). And the subprogram will save the data into the C:\Agilent\data\ex6.txt file (CSV) and displays the data on a message box.
80 to 81	Displays a message box to show an error message if the error is detected.
85	Displays a message box to show an error message if the number of returned data is not correct.

### Measurement Result Example

```
Ib (uA), Vc (V), Ic (mA), Time (sec), Status
50, 0, -0.055, 0.1161, NDI
50, 0.3, 8.98, 0.1361, NDI
50, 0.6, 9.745, 0.1561, NDI
50, 0.9, 9.77, 0.1761, NDI
50, 1.2, 9.84, 0.1961, NDI
50, 1.5, 9.87, 0.2161, NDI
50, 1.8, 9.895, 0.2361, NDI
50, 2.1, 9.96, 0.2561, NDI
50, 2.4, 9.94, 0.2761, NDI
50, 2.7, 9.955, 0.2961, NDI
50, 3, 9.98, 0.3161, NDI
100, 0, -0.1, 0.1129, NDI
100, 0.3, 15.76, 0.1329, NDI
100, 0.6, 18.2, 0.1529, NDI
100, 0.9, 18.86, 0.1729, NDI
100, 1.2, 18.99, 0.1929, NDI
100, 1.5, 19.105, 0.2129, NDI
100, 1.8, 19.17, 0.2329, NDI
100, 2.1, 19.2, 0.2529, NDI
100, 2.4, 19.27, 0.2729, NDI
100, 2.7, 19.33, 0.2929, NDI
100, 3, 19.395, 0.3129, NDI
150, 0, -0.15, 0.1139, NDI
150, 0.3, 21.055, 0.1339, NDI
150, 0.6, 24.625, 0.1539, NDI
150, 0.9, 26.595, 0.1739, NDI
150, 1.2, 27.38, 0.1939, NDI
150, 1.5, 27.625, 0.2139, NDI
150, 1.8, 27.785, 0.2339, NDI
150, 2.1, 27.915, 0.2539, NDI
150, 2.4, 28.07, 0.2739, NDI
150, 2.7, 28.18, 0.2939, NDI
150, 3, 28.275, 0.3139, NDI
```

Data save completed.

Do you want to perform measurement again?

## Staircase Sweep with Pulsed Bias Measurements

To perform staircase sweep with pulsed bias measurements, use the following commands.

Function	Command	Parameters
Enables channels	CN	[ <i>chnum</i> ... [ <i>chnum</i> ] ... ]
Disables channels	CL	[ <i>chnum</i> ... [ <i>chnum</i> ] ... ]
Sets filter ON/OFF	[FL]	<i>mode</i> [, <i>chnum</i> ... [ <i>chnum</i> ] ... ]
Sets series resistor ON/OFF	[SSR]	<i>chnum</i> [, <i>mode</i> ]
Sets sweep abort function	[WM]	<i>abort</i> [, <i>post</i> ]
Sets voltage sweep source	WV	<i>chnum,mode,range,start,stop,step</i> [, <i>comp</i> [, <i>Pcomp</i> ]]
Sets current sweep source	WI	
Sets synchronous sweep source <sup>a</sup>	[WSV]	<i>chnum,range,start,stop</i>
	[WSI]	[ <i>comp</i> [, <i>Pcomp</i> ]]
Sets pulse timing parameters	PT	<i>hold,width,period</i> [, <i>tdelay</i> ]
Forces pulse voltage	PV	<i>chnum,range,base,pulse</i> [, <i>comp</i> ]
Forces pulse current	PI	<i>chnum,range,base,pulse</i> [, <i>comp</i> ]
Forces constant voltage	DV	<i>chnum,range,output</i>
Forces constant current	DI	[ <i>comp</i> [, <i>polarity</i> [, <i>crange</i> ]]]
Sets voltage measurement range	[RV]	<i>chnum,range</i>
Sets current measurement range	[RI]	<i>chnum,range</i>
	[RM]	<i>chnum,mode</i> [, <i>rate</i> ]
Selects measurement mode	MM	<i>5,chnum</i>
Sets SMU operation mode	[CMM]	<i>chnum,mode</i>
Executes measurement	XE	

a. The WSV/WSI command must be entered after the WV/WI command.

### NOTE

Measurement channel performs measurement so that the pulse width and pulse period are kept. The integration time is automatically set by the instrument, and you cannot change. For the Agilent E5270B, note that the high-resolution ADC cannot be used for the pulsed measurements. The AAD/AIT/AV/WT command settings are ignored.

A program example of a staircase sweep with pulsed bias measurement is shown below. This example measures the bipolar transistor Ic-Vc characteristics.

**Table 3-9 Staircase Sweep with Pulsed Bias Measurement Example**

```

Sub perform_meas(ByVal E5270 As DirectIO, ByVal t() As Integer)      '1
  Dim i As Integer = 0
  Dim j As Integer = 0
  Dim nop1 As Integer = 11
  Dim nop2 As Integer = 3
  Dim data(nop2 - 1, nop1 - 1) As String
  Dim value As String = "Ib (uA), Vc (V), Ic (mA), Time (sec), Status"
  Dim fname As String = "C:\Agilent\data\ex7.txt"
  Dim title As String = "Measurement Result"
  Dim msg As String = "No error."
  Dim err As String = "0"
  Dim vc1 As Double = 0                                           '12
  Dim vc2 As Double = 3
  Dim iccomp As Double = 0.05
  Dim pccomp As Double = 0.2
  Dim i0 As Double = 0
  Dim ib1 As Double = 0.00005
  Dim ib2 As Double = 0.00015
  Dim vbcomp As Double = 5
  Dim ib As Double = ib1                                          'secondary sweep output value
  Dim d_ib As Double = 0                                          'secondary sweep step value (delta)
  If nop2 <> 1 Then d_ib = (ib2 - ib1) / (nop2 - 1)
  Dim hold As Double = 0
  Dim delay As Double = 0
  Dim s_delay As Double = 0
  Dim rep As Integer = nop1
  Dim ret_val As String()                                         '27
  Dim data1 As String
  Dim data2 As String
  Dim data3 As String
  Dim sc(nop1) As Double
  Dim md(nop1) As Double
  Dim st(nop1) As String
  Dim tm(nop1) As Double

  E5270.WriteLine("FMT 1,1")      ' ASCII<CRLF EOI> w/sweep source data      '36
  E5270.WriteLine("TSC 1")        ' enables time stamp output
  E5270.WriteLine("FL 1")         ' sets filter on

```

Line	Description
2 to 11	Declares variables used through the project. And sets the proper values.
12 to 26	Declares variables used to set the source output, and sets the value.
27 to 34	Declares variables used to read the measurement data.
36 to 38	Sets the data output format, time stamp data output mode, and A/D converter. Also sets the SMU filter on.

## Programming Examples

### Staircase Sweep with Pulsed Bias Measurements

```

E5270.WriteLine("CL " & t(3)) '40
E5270.WriteLine("DV " & t(0) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A
Dim b_pt As String = "0.1,0.01,0.02" 'hold, width, period in sec
E5270.WriteLine("PT " & b_pt)
E5270.WriteLine("MM 5," & t(2)) '5: sweep with pulsed bias
E5270.WriteLine("CMM " & t(2) & ",1") '1: compliance side measurement
E5270.WriteLine("RI " & t(2) & ",0") '0: auto ranging
E5270.WriteLine("WM 2,1") ' stops at any abnormal '47

E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err
For j = 0 To nop2 - 1 '51
    E5270.WriteLine("WV " & t(2) & ",1,0," & vc1 & "," & vc2 & "," & nop1 & ","
    & iccomp & "," & pccomp)
    E5270.WriteLine("PI " & t(1) & ",0," & i0 & "," & ib & "," & vbcomp)
    E5270.WriteLine("TSR")
    E5270.WriteLine("XE")
    E5270.WriteLine("*OPC?") : rep = E5270.Read(True)
    E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
    If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err
    E5270.WriteLine("NUB?") : rep = E5270.Read(True) '59
    If rep <> nop1 * 3 Then E5270.WriteLine("DZ") : GoTo Check_nop
    ret_val = E5270.ReadListAsStringArray()
    For i = 0 To nop1 - 1
        data1 = ret_val(i * 3)
        data2 = ret_val(i * 3 + 1)
        data3 = ret_val(i * 3 + 2)
        data1 = Right(data1, 12) : tm(i) = Val(data1)
        st(i) = Left(data2, 3)
        data2 = Right(data2, 12) : md(i) = Val(data2)
        data3 = Right(data3, 12) : sc(i) = Val(data3)
        data(j, i) = Chr(13) & Chr(10) & ib * 1000000 & ", " & sc(i) & ", " &
md(i) * 1000 & ", " & tm(i) & ", " & st(i)
    Next i
    ib = ib + d_ib
Next j '73

```

Line	Description
40	Disables SMU assigned to t(3) that is not needed.
41 to 47	Applies voltage to device. And sets the pulse timing parameters, measurement mode, channel measurement mode, measurement range, and sweep mode.
49 to 50	Checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err.
51 to 73	Sets the sweep source and the pulsed bias source, resets time stamp, and performs the staircase sweep with pulsed bias measurement. And stores the returned data into the <i>ret_val</i> string array variable. Finally, stores the measured data into the <i>data</i> array.
59 to 60	Checks number of returned data. If it is not correct, forces 0 V and goes to Check_nop.

<pre>E5270.WriteLine("DZ") save_data(fname, title, value, data, nop1, nop2, E5270, t) Exit_Sub  Check_err: E5270.WriteLine("EMG? " &amp; err) : msg = E5270.Read(True) MsgBox("Instrument error: " &amp; err &amp; Chr(10) &amp; msg, vbOKOnly, "") Exit_Sub  Check_nop: MsgBox("No. of data: " &amp; rep &amp; " (not " &amp; nop1 * 3 &amp; ")", vbOKOnly, "") End_Sub</pre>	<pre>'75 '79 '85</pre>
Line	Description
75 to 77	Applies 0 V from the all channels. And transfers the data stored in the <i>data</i> variable to the <i>save_data</i> subprogram (see Table 3-1). And the subprogram will save the data into the C:\Agilent\data\ex7.txt file (CSV) and displays the data on a message box.
80 to 81	Displays a message box to show an error message if the error is detected.
85	Displays a message box to show an error message if the number of returned data is not correct.

**Measurement  
Result Example**

```
Ib (uA), Vc (V), Ic (mA), Time (sec), Status
50, 0, -0.05, 0.119, NDI
50, 0.3, 8.97, 0.139, NDI
50, 0.6, 9.725, 0.159, NDI
50, 0.9, 9.775, 0.179, NDI
50, 1.2, 9.815, 0.199, NDI
50, 1.5, 9.845, 0.219, NDI
50, 1.8, 9.87, 0.239, NDI
50, 2.1, 9.89, 0.259, NDI
50, 2.4, 9.92, 0.279, NDI
50, 2.7, 9.91, 0.299, NDI
50, 3, 9.965, 0.319, NDI
100, 0, -0.1, 0.113, NDI
100, 0.3, 15.73, 0.133, NDI
100, 0.6, 18.185, 0.153, NDI
100, 0.9, 18.8, 0.173, NDI
100, 1.2, 18.945, 0.193, NDI
100, 1.5, 19.025, 0.213, NDI
100, 1.8, 19.13, 0.233, NDI
100, 2.1, 19.175, 0.253, NDI
100, 2.4, 19.22, 0.273, NDI
100, 2.7, 19.315, 0.293, NDI
100, 3, 19.355, 0.313, NDI
150, 0, -0.15, 0.1162, NDI
150, 0.3, 21.04, 0.1362, NDI
150, 0.6, 24.6, 0.1562, NDI
150, 0.9, 26.575, 0.1762, NDI
150, 1.2, 27.335, 0.1962, NDI
150, 1.5, 27.565, 0.2162, NDI
150, 1.8, 27.745, 0.2362, NDI
150, 2.1, 27.835, 0.2562, NDI
150, 2.4, 28, 0.2762, NDI
150, 2.7, 28.1, 0.2962, NDI
150, 3, 28.165, 0.3162, NDI

Data save completed.

Do you want to perform measurement again?
```

## Quasi Pulsed Spot Measurements

To perform quasi-pulsed spot measurements, use the following commands.

Function	Command	Parameters
Enables channels	CN	[ <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Disables channels	CL	[ <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets filter ON/OFF	[FL]	<i>mode</i> [, <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets series resistor ON/OFF	[SSR]	<i>chnum</i> [, <i>mode</i> ]
Sets integration time (Agilent E5270B can use AAD/AIT instead of AV.)	[AV]	<i>number</i> [, <i>mode</i> ]
	[AAD]	<i>chnum</i> [, <i>type</i> ]
	[AIT]	<i>type,mode</i> [, <i>N</i> ]
Sets detection interval	[BDM]	<i>interval</i> [, <i>mode</i> ]
Sets timing parameters	[BDT]	<i>hold,delay</i>
Sets quasi-pulsed source	BDV	<i>chnum,range,start,stop</i> [, <i>comp</i> ]
Forces constant voltage	DV	<i>chnum,vrange,output</i> [, <i>comp</i> [, <i>polarity</i> [, <i>irange</i> ]]]
Forces constant current	DI	<i>chnum,irange,output</i> [, <i>comp</i> [, <i>polarity</i> [, <i>vrange</i> ]]]
Sets voltage measurement range	[RV]	<i>chnum,range</i>
Sets current measurement range	[RI]	<i>chnum,range</i>
	[RM]	<i>chnum,mode</i> [, <i>rate</i> ]
Selects measurement mode	MM	9[, <i>chnum</i> ]
Sets SMU operation mode	[CMM]	<i>chnum,mode</i>
Executes measurement	XE	

A program example of a spot measurement is shown below. This measures the breakdown voltage of bipolar transistor.

**Table 3-10 Quasi Pulsed Spot Measurement Example**

```

Sub perform_meas(ByVal E5270 As DirectIO, ByVal t() As Integer)          '1
  Dim i As Integer = 0
  Dim j As Integer = 0
  Dim nop1 As Integer = 1
  Dim nop2 As Integer = 1
  Dim data(nop2 - 1, nop1 - 1) As String
  Dim value As String = "BVceo (V), Status"
  Dim fname As String = "C:\Agilent\data\ex8.txt"
  Dim title As String = "Measurement Result"
  Dim msg As String = "No error."
  Dim err As String = "0"

  Dim vc1 As Double = 0                                                  '13
  Dim vc2 As Double = 100
  Dim icomp As Double = 0.005
  Dim hold As Double = 0
  Dim delay As Double = 0
  Dim interval As Double = 0
  Dim mmode As Double = 0
  Dim mrng As Integer = 0

  E5270.WriteLine("FMT 1")                                             '22
  E5270.WriteLine("CL " & t(1) & "," & t(3))
  E5270.WriteLine("MM 9," & t(2))
  E5270.WriteLine("BDT " & hold & "," & delay)
  E5270.WriteLine("BDM " & interval & "," & mmode)
  E5270.WriteLine("BDV " & t(2) & "," & mrng & "," & vc1 & "," & vc2 & "," &
icomp)
  E5270.WriteLine("DV " & t(0) & ",0,0,0.1")      'out= 0 V, comp= 0.1 A    '28
  E5270.WriteLine("XE")
  E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
  If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err

```

Line	Description
2 to 11	Declares variables used through the project. And sets the proper values.
13 to 20	Declares variables, and sets the value.
22 to 23	Sets the data output format. And disables SMUs assigned to t(1) and t(3) that are not needed.
24 to 27	Sets the measurement mode, measurement timing parameters, measurement conditions, and source output conditions.
28 to 31	Applies voltage to device, and performs the quasi pulsed spot measurement. And checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err.

## Programming Examples

### Quasi Pulsed Spot Measurements

```

Dim data1 As String = E5270.Read(True) ' 33
Dim status As String = Left(data1, 3)
data1 = Right(data1, 12)
Dim meas As Double = Val(data1)
data(j, i) = Chr(13) & Chr(10) & meas & ", " & status

E5270.WriteLine("DZ") ' 39
save_data(fname, title, value, data, nop1, nop2, E5270, t)
Exit Sub

Check_err: ' 43
E5270.WriteLine("EMG? " & err) : msg = E5270.Read(True)
MsgBox("Instrument error: " & err & Chr(10) & msg, vbOKOnly, "")
Exit Sub

End Sub

```

Line	Description
33 to 37	Reads the returned data and stores it into the <i>data1</i> string variable. Finally, stores the measured data into the <i>data</i> array.
39 to 41	Applies 0 V from the all channels. And transfers the data stored in the <i>data</i> variable to the <i>save_data</i> subprogram (see Table 3-1). And the subprogram will save the data into the C:\Agilent\data\ex8.txt file (CSV) and displays the data on a message box.
43 to 46	Displays a message box to show an error message if the error is detected.

#### Measurement Result Example

```

BVceo (V), Status
55.87, CDV

```

Data save completed.

Do you want to perform measurement again?



## Linear Search Measurements

To perform linear search measurements, use the following commands.

Function	Command	Parameters
Enables channels	CN	[ <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Disables channels	CL	[ <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets filter ON/OFF	[FL]	<i>mode</i> [, <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets series resistor ON/OFF	[SSR]	<i>chnum</i> [, <i>mode</i> ]
Sets integration time (Agilent E5270B can use AAD/AIT instead of AV.)	[AV]	<i>number</i> [, <i>mode</i> ]
	[AAD]	<i>chnum</i> [, <i>type</i> ]
	[AIT]	<i>type</i> , <i>mode</i> [, <i>N</i> ]
Sets measurement mode	MM	14
Selects output data	[LSVM]	<i>output_data</i>
Sets timing parameters	[LSTM]	<i>hold</i> , <i>delay</i>
Sets abort function	[LSM]	<i>abort</i> [, <i>post</i> ]
Sets current search or voltage search condition	LGI or LGV	<i>chnum</i> , <i>mode</i> , <i>range</i> , <i>target</i>
Sets voltage source or current source	LSV or LSI	<i>chnum</i> , <i>range</i> , <i>start</i> , <i>stop</i> , <i>step</i> [, <i>comp</i> ]
Sets synchronous voltage source or current source	[LSSV] or [LSSI]	<i>chnum</i> , <i>polarity</i> , <i>offset</i> [, <i>comp</i> ]
Forces constant voltage	DV	<i>chnum</i> , <i>range</i> , <i>output</i> [, <i>comp</i> [, <i>polarity</i> [, <i>crange</i> ]]]
Forces constant current	DI	
Executes measurement	XE	

The LSV and LSI commands clear the previous source settings.

Send the LSI command before sending the LSSI command.

Send the LSV command before sending the LSSV command.

The LSI/LSSV commands or LSV/LSSI commands cannot be used together.

## Programming Examples

### Linear Search Measurements

A program example of a linear search measurement is shown below. This example measures the MOSFET threshold voltage.

**Table 3-11**                      **Linear Search Measurement Example**

```

Sub perform_meas(ByVal E5270 As DirectIO, ByVal t() As Integer)           '1
  Dim i As Integer = 0
  Dim j As Integer = 0
  Dim nop1 As Integer = 1
  Dim nop2 As Integer = 1
  Dim data(nop2 - 1, nop1 - 1) As String
  Dim value As String = "Vth (mV), Id (uA), Status"
  Dim fname As String = "C:\Agilent\data\ex9.txt"
  Dim title As String = "Measurement Result"
  Dim msg As String = "No error."
  Dim err As String = "0"

  Dim vd1 As Double = 0                                                   '13
  Dim vd2 As Double = 3
  Dim vdel As Double = 0.01
  Dim idcomp As Double = 0.01
  Dim igcomp As Double = 0.01
  Dim orng As Integer = 12        '12: 20 V limited auto ranging
  Dim mrng As Integer = 13       '13: 100 nA limited auto ranging
  Dim hold As Double = 0
  Dim delay As Double = 0
  Dim judge As Integer = 1      ' 1: result>=target
  Dim tgt As Double = 0.001    ' target current
  Dim posneg As Integer = 1    ' 1: positive
  Dim offset As Double = 0     ' offset voltage

  E5270.WriteLine("FMT 1")                                             '27
  E5270.WriteLine("MM 14")      ' linear search measurement
  E5270.WriteLine("LSM 2,3")   ' stops at any abnormal
  E5270.WriteLine("LSVM 1")   ' returns search data and sense data
  E5270.WriteLine("LSTM " & hold & ", " & delay)
  E5270.WriteLine("LGI " & t(0) & ", " & judge & ", " & mrng & ", " & tgt)
  E5270.WriteLine("LSV " & t(0) & ", " & orng & ", " & vd1 & ", " & vd2 & ", " & vdel
& ", " & idcomp)
  E5270.WriteLine("LSSV " & t(1) & ", " & posneg & ", " & offset & ", " & igcomp)

```

Line	Description
2 to 11	Declares variables used through the project. And sets the proper values.
13 to 25	Declares variables, and sets the value.
27 to 28	Sets the data output format and the measurement mode.
29 to 32	Sets the linear search measurement conditions.
33 to 34	Sets the linear search sources, primary source and synchronous source.

```

E5270.WriteLine("DV " & t(3) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A '36
E5270.WriteLine("DV " & t(2) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A
E5270.WriteLine("XE")
E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err

Dim ret_val As String() = E5270.ReadListAsStringArray() '42
Dim data1 As String = ret_val(0)
Dim data2 As String = ret_val(1)
data1 = Right(data1, 12)
Dim dsearch As Double = Val(data1)
Dim status As String = Left(data2, 3)
data2 = Right(data2, 12)
Dim dsense As Double = Val(data2)

data(j, i) = Chr(13) & Chr(10) & dsearch * 1000 & ", " & dsense * 1000000 & ",
" & status

E5270.WriteLine("DZ") '53
save_data(fname, title, value, data, nop1, nop2, E5270, t)
Exit Sub

Check_err: '57
E5270.WriteLine("EMG? " & err) : msg = E5270.Read(True)
MsgBox("Instrument error: " & err & Chr(10) & msg, vbOKOnly, "")
Exit Sub

End Sub

```

Line	Description
36 to 40	Applies voltage to device, and performs the linear search measurement. And checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err.
42 to 51	Reads the returned data and stores it into the <i>ret_val</i> string array variable. Finally, stores the measured data into the <i>data</i> array.
53 to 55	Applies 0 V from the all channels. And transfers the data stored in the <i>data</i> variable to the <i>save_data</i> subprogram (see Table 3-1). And the subprogram will save the data into the C:\Agilent\data\ex9.txt file (CSV) and displays the data on a message box.
57 to 60	Displays a message box to show an error message if the error is detected.

**Measurement Result Example**

```
Vth (mV), Id (uA), Status
140, 1013.85, NAI
```

```
Data save completed.
```

```
Do you want to perform measurement again?
```

## Binary Search Measurements

To perform binary search measurements, use the following commands.

Function	Command	Parameters
Enables channels	CN	[ <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Disables channels	CL	[ <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets filter ON/OFF	[FL]	<i>mode</i> [, <i>chnum</i> ... [, <i>chnum</i> ] ... ]
Sets series resistor ON/OFF	[SSR]	<i>chnum</i> [, <i>mode</i> ]
Sets integration time (Agilent E5270B can use AAD/AIT instead of AV.)	[AV]	<i>number</i> [, <i>mode</i> ]
	[AAD]	<i>chnum</i> [, <i>type</i> ]
	[AIT]	<i>type</i> , <i>mode</i> [, <i>N</i> ]
Sets measurement mode	MM	15
Selects output data	[BSVM]	<i>output_data</i>
Sets timing parameters	[BST]	<i>hold</i> , <i>delay</i>
Sets source control mode	BSM	<i>mode</i> , <i>abort</i> [, <i>post</i> ]
Sets current search or voltage search condition	BGI or BGV	<i>chnum</i> , <i>mode</i> , <i>condition</i> , <i>range</i> , <i>target</i>
Sets voltage source or current source	BSV or BSI	<i>chnum</i> , <i>range</i> , <i>start</i> , <i>stop</i> [, <i>comp</i> ]
Sets synchronous voltage source or current source	[BSSV] or [BSSI]	<i>chnum</i> , <i>polarity</i> , <i>offset</i> [, <i>comp</i> ]
Forces constant voltage	DV	<i>chnum</i> , <i>range</i> , <i>output</i> [, <i>comp</i> [, <i>polarity</i> [, <i>crange</i> ]]]
Forces constant current	DI	
Executes measurement	XE	

The BSV and BSI commands clear the previous source settings.

Send the BSI command before sending the BSSI command.

Send the BSV command before sending the BSSV command.

The BSI/BSSV commands or BSV/BSSI commands cannot be used together.

A program example of a binary search measurement is shown below. This example measures the MOSFET threshold voltage.

**Table 3-12 Binary Search Measurement Example**

	<pre> Sub perform_meas(ByVal E5270 As DirectIO, ByVal t() As Integer)      '1   Dim i As Integer = 0   Dim j As Integer = 0   Dim nop1 As Integer = 1   Dim nop2 As Integer = 1   Dim data(nop2 - 1, nop1 - 1) As String   Dim value As String = "Vth (mV), Id (uA), Status"   Dim fname As String = "C:\Agilent\data\ex10.txt"   Dim title As String = "Measurement Result"   Dim msg As String = "No error."   Dim err As String = "0"    Dim vd1 As Double = 0   '13   Dim vd2 As Double = 3   Dim idcomp As Double = 0.01   Dim igcomp As Double = 0.01   Dim orng As Integer = 12      '12: 20 V limited auto ranging   Dim mrng As Integer = 13      '13: 100 nA limited auto ranging   Dim hold As Double = 0   Dim delay As Double = 0   Dim mode As Integer = 0      ' 0: limit, 1: repeat   Dim judge As Double = 0.000001 ' limit value in A   Dim tgt As Double = 0.001     ' target current   Dim posneg As Integer = 1     ' 1: positive   Dim offset As Double = 0     ' offset voltage    E5270.WriteLine("FMT 1")  '27   E5270.WriteLine("MM 15")      ' binary search measurement   E5270.WriteLine("BSM 1,1")    ' cautious mode, abort off   E5270.WriteLine("BSVM 1")     ' returns search data and sense data   E5270.WriteLine("BST " &amp; hold &amp; ", " &amp; delay)   E5270.WriteLine("BGI " &amp; t(0) &amp; ", " &amp; mode &amp; ", " &amp; judge &amp; ", " &amp; mrng &amp; ", " &amp; tgt)   E5270.WriteLine("BSV " &amp; t(0) &amp; ", " &amp; orng &amp; ", " &amp; vd1 &amp; ", " &amp; vd2 &amp; ", " &amp; idcomp)   E5270.WriteLine("BSSV " &amp; t(1) &amp; ", " &amp; posneg &amp; ", " &amp; offset &amp; ", " &amp; igcomp) </pre>
Line	Description
2 to 11	Declares variables used through the project. And sets the proper values.
13 to 25	Declares variables, and sets the value.
27 to 28	Sets the data output format and the measurement mode.
29 to 32	Sets the binary search measurement conditions.
33 to 34	Sets the binary search sources, primary source and synchronous source.

## Programming Examples

### Binary Search Measurements

```

E5270.WriteLine("DV " & t(3) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A '36
E5270.WriteLine("DV " & t(2) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A
E5270.WriteLine("XE")
E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err

Dim ret_val As String() = E5270.ReadListAsStringArray() '42
Dim data1 As String = ret_val(0)
Dim data2 As String = ret_val(1)
data1 = Right(data1, 12)
Dim dsearch As Double = Val(data1)
Dim status As String = Left(data2, 3)
data2 = Right(data2, 12)
Dim dsense As Double = Val(data2)

data(j, i) = Chr(13) & Chr(10) & dsearch * 1000 & ", " & dsense * 1000000 & ",
" & status

E5270.WriteLine("DZ") '53
save_data(fname, title, value, data, nop1, nop2, E5270, t)
Exit Sub

Check_err: '57
E5270.WriteLine("EMG? " & err) : msg = E5270.Read(True)
MsgBox("Instrument error: " & err & Chr(10) & msg, vbOKOnly, "")
Exit Sub

End Sub

```

Line	Description
36 to 40	Applies voltage to device, and performs the binary search measurement. And checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err.
42 to 51	Reads the returned data and stores it into the <i>ret_val</i> string array variable. Finally, stores the measured data into the <i>data</i> array.
53 to 55	Applies 0 V from the all channels. And transfers the data stored in the <i>data</i> variable to the <i>save_data</i> subprogram (see Table 3-1). And the subprogram will save the data into the C:\Agilent\data\ex10.txt file (CSV) and displays the data on a message box.
57 to 60	Displays a message box to show an error message if the error is detected.

#### Measurement Result Example

```

Vth (mV), Id (uA), Status
139, 999.15, NAI

Data save completed.

Do you want to perform measurement again?

```

## Multi Channel Sweep Measurements

To perform multi channel sweep measurements, use the following commands.

Function	Command	Parameters
Enables channels	CN	<i>[chnum ... [,chnum] ... ]</i>
Disables channels	CL	<i>[chnum ... [,chnum] ... ]</i>
Sets filter ON/OFF	[FL]	<i>mode[,chnum ... [,chnum] ... ]</i>
Sets series resistor ON/OFF	[SSR]	<i>chnum[,mode]</i>
Sets integration time (Agilent E5270B can use AAD/AIT instead of AV.)	[AV]	<i>number[,mode]</i>
	[AAD]	<i>chnum[,type]</i>
	[AIT]	<i>type,mode[,N]</i>
Sets sweep source timing parameter	[WT]	<i>hold,delay [,sdelay[,tdelay[,mdelay]]]</i>
Sets sweep abort function	[WM]	<i>abort[,post]</i>
Sets voltage sweep source	WV	<i>chnum,mode,range,start,stop,step [,comp[,Pcomp]]</i>
Sets current sweep source	WI	
Sets synchronous sweep source <sup>a</sup>	WNX	<i>N,chnum,mode,range,start,stop [,comp[,Pcomp]]</i>
Forces constant voltage	DV	<i>chnum,range,output [,comp[,polarity[,crange]]]</i>
Forces constant current	DI	
Sets voltage measurement range	[RV]	<i>chnum,range</i>
Sets current measurement range	[RI]	<i>chnum,range</i>
	[RM]	<i>chnum,mode[,rate]</i>
Selects measurement mode	MM	<i>16,chnum[,chnum ... [,chnum] ... ]</i>
Sets SMU operation mode	[CMM]	<i>chnum,mode</i>
Executes measurement	XE	

a. The WNX command must be entered after the WV/WI command.

## Programming Examples

### Multi Channel Sweep Measurements

#### NOTE

Sweep sources simultaneously start output by a trigger such as the XE command. However, if a sweep source sets power compliance or forces logarithmic sweep current, the sweep sources start output in the order specified by the WNX's *N* value. Then the first output is forced by the channel set by the WI or WV command.

If you use multiple measurement channels, the channels that use the fixed ranging mode start measurement simultaneously, then other channels start measurement in the order defined in the MM command. For the Agilent E5270B, note that the high-resolution ADC cannot perform simultaneous measurement.

A program example of a multi channel sweep measurement is shown below. This example measures the bipolar transistor Ib-Vb and Ic-Vb characteristics.

**Table 3-13 Multi Channel Sweep Measurement Example**

<pre>Sub perform_meas(ByVal E5270 As DirectIO, ByVal t() As Integer)   Dim i As Integer = 0   Dim j As Integer = 0   Dim nop1 As Integer = 11   Dim nop2 As Integer = 1   Dim data(nop2 - 1, nop1 - 1) As String   Dim value As String = "Vb (V), Ib (uA), Tb (sec), Stat_b, Ic (mA), Tc (sec), Stat_c"   Dim fname As String = "C:\Agilent\data\ex11.txt"   Dim title As String = "Measurement Result"   Dim msg As String = "No error."   Dim err As String = "0"    Dim vc As Double = 3   Dim vb1 As Double = 0.3   Dim vb2 As Double = 0.8   Dim ibcomp As Double = 0.001   Dim pbcomp As Double = 0.001   Dim hold As Double = 0   Dim delay As Double = 0   Dim s_delay As Double = 0   Dim rep As Integer = nop1    Dim ret_val As String()   Dim data1 As String   Dim data2 As String   Dim data3 As String   Dim data4 As String   Dim data5 As String</pre>	<pre>'1 '13 '23</pre>
Line	Description
2 to 11	Declares variables used through the project. And sets the proper values.
13 to 21	Declares variables used to set the source output, and sets the value.
23 to 28	Declares variables used to read the measurement data.



```

Dim sc(nop1) As Double ' 30
Dim mdl(nop1) As Double
Dim st1(nop1) As String
Dim tml(nop1) As Double
Dim md2(nop1) As Double
Dim st2(nop1) As String
Dim tm2(nop1) As Double

E5270.WriteLine("FMT 1,1") ' ASCII<CRLF EOI> w/sweep source data ' 38
E5270.WriteLine("TSC 1") ' enables time stamp output
E5270.WriteLine("AV 10,1") ' sets number of samples for 1 data
E5270.WriteLine("FL 1") ' sets filter on
E5270.WriteLine("MM 16," & t(1) & "," & t(2)) '16: multi-ch sweep
E5270.WriteLine("CMM" & t(1) & ",1") '1: compliance side measurement
E5270.WriteLine("CMM" & t(2) & ",1") '1: compliance side measurement
E5270.WriteLine("RI" & t(1) & ",-17") '-17: 1 mA fixed range
E5270.WriteLine("RI" & t(2) & ",-19") '-19: 100 mA fixed range
E5270.WriteLine("WT" & hold & "," & delay & "," & s_delay)
E5270.WriteLine("WM 2,1") ' stops at any abnormal
E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err

E5270.WriteLine("WV" & t(1) & ",1,0," & vb1 & "," & vb2 & "," & nop1 & "," &
ibcomp & "," & pbcomp) ' 52
E5270.WriteLine("DV" & t(2) & ",0," & vc & ",0.1")
E5270.WriteLine("DV" & t(0) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A
E5270.WriteLine("TSR")
E5270.WriteLine("XE")
E5270.WriteLine("*OPC?") : rep = E5270.Read(True) ' 57
E5270.WriteLine("ERR? 1") : err = E5270.Read(True)
If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err
E5270.WriteLine("NUB?") : rep = E5270.Read(True)
If rep <> nop1 * 5 Then E5270.WriteLine("DZ") : GoTo Check_nop
ret_val = E5270.ReadListAsStringArray() ' 62

```

Line	Description
30 to 36	Declares variables used to read the measurement data.
38 to 50	Sets the data output format, time stamp data output mode, A/D converter, SMU filter, measurement mode, channel measurement mode, and measurement range. Also sets the timing parameters and sweep mode of the staircase sweep source. And checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err.
52 to 56	Sets the sweep sources, applies voltage to device, resets time stamp, and performs the multi channel sweep measurement.
57 to 61	Waits until the measurement is completed, and checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err. Also checks number of returned data. If it is not correct, forces 0 V and goes to Check_nop.
62	Stores the returned data into the <i>ret_val</i> string array variable.

## Programming Examples

### Multi Channel Sweep Measurements

```

For i = 0 To nop1 - 1                                     '64
    data1 = ret_val(i * 5)
    data2 = ret_val(i * 5 + 1)
    data3 = ret_val(i * 5 + 2)
    data4 = ret_val(i * 5 + 3)
    data5 = ret_val(i * 5 + 4)
    data1 = Right(data1, 12) : tm1(i) = Val(data1)
    st1(i) = Left(data2, 3)
    data2 = Right(data2, 12) : md1(i) = Val(data2)
    data3 = Right(data1, 12) : tm2(i) = Val(data3)
    st2(i) = Left(data4, 3)
    data4 = Right(data4, 12) : md2(i) = Val(data4)
    data5 = Right(data5, 12) : sc(i) = Val(data5)
    data(j, i) = Chr(13) & Chr(10) & sc(i) & ", " & md1(i) * 1000000 & ", " &
tm1(i) & ", " & st1(i) & ", " & md2(i) * 1000 & ", " & tm2(i) & ", " & st2(i)
Next i

E5270.WriteLine("DZ")                                   '80
save_data(fname, title, value, data, nop1, nop2, E5270, t)
Exit Sub

Check_err:                                             '84
E5270.WriteLine("EMG? " & err) : msg = E5270.Read(True)
MsgBox("Instrument error: " & err & Chr(10) & msg, vbOKOnly, "")
Exit Sub

Check_nop:
MsgBox("No. of data: " & rep & " (not " & nop1 * 3 & ")", vbOKOnly, "") '90
End Sub

```

Line	Description
64 to 78	Picks the measurement data out and stores it into the <i>data</i> array.
80 to 82	Applies 0 V from the all channels and transfers the data stored in the <i>data</i> variable to the <i>save_data</i> subprogram (see Table 3-1). And the subprogram will save the data into the C:\Agilent\data\ex11.txt file (CSV) and displays the data on a message box.
84 to 90	Displays a message box to show an error message if the error is detected. Also displays a message box to show an error message if the number of returned data is not correct.

#### Measurement Result Example

```

Vb (V), Ib (uA), Tb (sec), Stat_b, Ic (mA), Tc (sec), Stat_c
0.3, 0.05, 0.0046, NBI, 0, 0.0046, NDI
0.35, 0.05, 0.0076, NBI, 0, 0.0076, NDI
0.4, 0.05, 0.0106, NBI, 0, 0.0106, NDI
0.45, 0.05, 0.0135, NBI, 0, 0.0135, NDI
0.5, 0.05, 0.0165, NBI, 0, 0.0165, NDI
0.55, 0.1, 0.0195, NBI, 0.01, 0.0195, NDI
0.6, 0.45, 0.0224, NBI, 0.085, 0.0224, NDI
0.65, 2.95, 0.0254, NBI, 0.58, 0.0254, NDI
0.7, 18.45, 0.0284, NBI, 3.72, 0.0284, NDI
0.75, 90.85, 0.0313, NBI, 17.635, 0.0313, NDI
0.8, 290.5, 0.0343, NBI, 50.15, 0.0343, NDI

```

```

Data save completed.
Do you want to perform measurement again?

```

## Using Program Memory

The program memory can store approximately 2,000 programs or 40,000 commands. Storing programs and executing them will improve the program execution speed. The following commands are available to use program memory.

Command	Function and Syntax
ST and END	Stores the program in the memory. ST <i>pnum</i> ; <i>command</i> [ . . . [ ; <i>command</i> ] . . . ] ; END or ST <i>pnum</i> [ <i>command</i> ] : [ <i>command</i> ] END
[SCR]	Scratches the program. SCR [ <i>pnum</i> ]
[LST?]	Gets a catalog of program numbers or a specific program listing (up to 3000 commands). LST? [ <i>pnum</i> [ , <i>index</i> [ , <i>size</i> ] ] ]
DO	Executes specified programs. DO <i>pnum</i> [ , <i>pnum</i> . . . [ , <i>pnum</i> ] . . . ]
RU	Executes programs sequentially. RU <i>start</i> , <i>stop</i>
[PA]	Pauses command execution or internal memory program execution. PA [ <i>wait</i> ]
[VAR]	Defines an internal memory variable, and sets the value. VAR <i>Type</i> , <i>N</i> , <i>Value</i>
[VAR?]	Reads the value of the internal memory variable. VAR? <i>Type</i> , <i>N</i>

## Programming Examples Using Program Memory

Table 3-14 and Table 3-15 show the example program that uses the internal program memory, and does the following:

- stores a high-speed spot measurement program in the memory 1, and displays it.
- stores a pulsed spot measurement program in the memory 2, and displays it.
- executes the internal memory program 1 and 2.
- displays the measurement results on the console window.

The example program shown in Table 3-15 uses the internal variables available for the internal program memory. The program code is given as the replaceable code of the lines 13 to 39 shown in Table 3-14. To run the program, delete the lines 13 to 39 from the program of Table 3-14, and insert the program lines 1 to 37 of Table 3-15. Also insert Table 3-15's lines 39 to 49 between Table 3-14's lines 53 and 54. The code shown in Table 3-15 cannot run by itself.

---

### NOTE

#### Running example programs in this section

To run the programs, the project template (Table 3-1) is not needed. To run the program of Table 3-15, see the above paragraph.

---

## Tips to use program memory

1. Completes program:

Before storing the program in the program memory, verify that the program is complete and free of errors. Command parameter check will be performed when the program is executed.

If the program being stored makes changes to the present measurement setup, verify that these changes are correct and compatible with the present setup.

2. For the invalid commands in the internal memory program, refer to Table 2-1 on page 2-26.

**Table 3-14 Program Memory Programming Example 1**

<pre>Imports Agilent.TMFramework '1 Imports Agilent.TMFramework.DataAnalysis Imports Agilent.TMFramework.DataVisualization Imports Agilent.TMFramework.InstrumentIO  Module Module1 Sub Main()     Dim E5270 As New DirectIO("GPIB0::17::INSTR") '8     E5270.WriteLine("*RST")     Dim fmt As Integer = 1 : E5270.WriteLine("FMT" &amp; fmt)     Dim t() As Integer = {1, 2, 4, 6} 'SMU1, SMU2, SMU4, SMU6 '11      Dim v0 As Double = 0 : Dim vd As Double = 1 : Dim idcomp As Double = 0.1     Dim vg As Double = 0.8 : Dim igcomp As Double = 0.05     Dim orng As Integer = 0 : Dim mrng As Integer = 0 : Dim hold As Double = 0.1     Dim width As Double = 0.01 : Dim period As Double = 0.02      Dim mem As Integer = 1 '18     E5270.WriteLine("ST" &amp; Mem)     E5270.WriteLine("DV" &amp; t(3) &amp; ",0,0,0.1")     E5270.WriteLine("DV" &amp; t(2) &amp; ",0,0,0.1")     E5270.WriteLine("DV" &amp; t(1) &amp; "," &amp; orng &amp; "," &amp; vg &amp; "," &amp; igcomp)     E5270.WriteLine("DV" &amp; t(0) &amp; "," &amp; orng &amp; "," &amp; vd &amp; "," &amp; idcomp)     E5270.WriteLine("TI" &amp; t(0) &amp; "," &amp; mrng)     E5270.WriteLine("END")     display_mem(E5270, mem)      mem = 2 '28     E5270.WriteLine("ST" &amp; Mem)     E5270.WriteLine("PT" &amp; hold &amp; "," &amp; width &amp; "," &amp; period)     E5270.WriteLine("DV" &amp; t(3) &amp; ",0,0,0.1")     E5270.WriteLine("DV" &amp; t(2) &amp; ",0,0,0.1")     E5270.WriteLine("PV" &amp; t(1) &amp; "," &amp; orng &amp; "," &amp; v0 &amp; "," &amp; vg &amp; "," &amp; igcomp)     E5270.WriteLine("DV" &amp; t(0) &amp; "," &amp; orng &amp; "," &amp; vd &amp; "," &amp; idcomp)     E5270.WriteLine("MM3," &amp; t(0))     E5270.WriteLine("RI" &amp; t(0) &amp; "," &amp; mrng)     E5270.WriteLine("XE")     E5270.WriteLine("END")     display_mem(E5270, mem) '39</pre>	
Line	Description
1 to 4	These lines are necessary for the Agilent instrument control programming.
8 to 11	Establishes connection with the Agilent E5260/E5270, resets the E5260/E5270, and sets the data output format. Also declares the SMUs used for measurement.
13 to 16	Declares variables used to set measurement conditions and sets the value.
18 to 26	Stores program in the internal memory 1, and displays it on the console window.
28 to 39	Stores program in the internal memory 2, and displays it on the console window.

## Programming Examples Using Program Memory

```

Dim term As String = t(0) & "," & t(1) & "," & t(2) & "," & t(3)           ' 41
E5270.WriteLine("CN" & term)
Dim i As Integer : Dim ret As Integer : Dim msg As String
Dim value As String : Dim status As String : Dim meas As Double
For i = 1 To 2
    E5270.WriteLine("DO" & i)
    E5270.WriteLine("*OPC?") : ret = E5270.Read(True)
    E5270.WriteLine("ERR? 1") : ret = E5270.Read(True)
    If ret <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err
    value = E5270.Read(True) : status = Left(value, 3)
    value = Right(value, 12) : meas = Val(value)
    Console.WriteLine("Memory " & i & ": Id = " & meas & " (A), Status = " &
status & Chr(10))
Next
E5270.WriteLine("DZ")                                                   ' 54
E5270.WriteLine("CL")
E5270.Close()
Exit Sub

Check_err:                                                             ' 59
E5270.WriteLine("EMG? " & ret) : msg = E5270.Read(True)
MsgBox("Instrument error: " & ret & Chr(10) & msg, vbOKOnly, "")
Exit Sub
End Sub

Sub display_mem(ByVal e5270 As DirectIO, ByVal mem As Integer)         ' 65
E5270.WriteLine("LST?" & mem)
Dim prog_list As String = E5270.Read(True)
Console.WriteLine("Memory " & mem & ":")
Console.WriteLine(prog_list & Chr(10))
End Sub

End Module

```

Line	Description
41 to 53	Enables SMUs and performs the measurement. After that, checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err. Also reads the measured data and displays it on the console window.
54 to 57	Applies 0 V from the all channels, disables SMUs, and closes the software connection with the Agilent E5260/E5270.
59 to 63	Displays a message box to show an error message if the error is detected.
65 to 70	Reads the program lists stored in the internal program memory, and displays it on the console window.

### Measurement Result Example

```

Memory 1: Id = 0.021945 (A), Status = NAI
Memory 2: Id = 0.022095 (A), Status = NAI
Press any key to continue

```

**Table 3-15** Program Memory Programming Example 2

<pre> E5270.WriteLine("VAR0,0," &amp; t(0)) '%I0=t(0)                                '1 E5270.WriteLine("VAR0,1," &amp; t(1)) '%I1=t(1) E5270.WriteLine("VAR0,2," &amp; t(2)) '%I2=t(2) E5270.WriteLine("VAR0,3," &amp; t(3)) '%I3=t(3) E5270.WriteLine("VAR0,4,0") '%I4=mrng=0 E5270.WriteLine("VAR0,5,0") '%I5=orng=0 E5270.WriteLine("VAR1,0,1") '%R0=vd=1 E5270.WriteLine("VAR1,1,0.8") '%R1=vg=0.8 E5270.WriteLine("VAR1,2,0.1") '%R2=idcomp=0.1 E5270.WriteLine("VAR1,3,0.05") '%R3=igcomp=0.05 E5270.WriteLine("VAR1,4,0") '%R4=v0=0 E5270.WriteLine("VAR1,5,0.1") '%R5=hold=0.1 E5270.WriteLine("VAR1,6,0.01") '%R6=width=0.01 E5270.WriteLine("VAR1,7,0.02") '%R7=period=0.02  Dim mem As Integer = 1                                '16 E5270.WriteLine("ST" &amp; mem) E5270.WriteLine("DV %I3,0,0,0.1") E5270.WriteLine("DV %I2,0,0,0.1") E5270.WriteLine("DV %I1,%I5,%R1,%R3") E5270.WriteLine("DV %I0,%I5,%R0,%R2") E5270.WriteLine("TI %I0,%I4") E5270.WriteLine("END") display_mem(E5270, mem)  mem = 2   '26 E5270.WriteLine("ST" &amp; mem) E5270.WriteLine("PT %R5,%R6,%R7") E5270.WriteLine("DV %I3,0,0,0.1") E5270.WriteLine("DV %I2,0,0,0.1") E5270.WriteLine("PV %I1,%I5,%R4,%R1,%R3") E5270.WriteLine("DV %I0,%I5,%R0,%R2") E5270.WriteLine("MM3,%I0") E5270.WriteLine("RI %I0,%I4") E5270.WriteLine("XE") E5270.WriteLine("END") display_mem(E5270, mem)                                '37 </pre>	
Line	Description
1 to 14	Declares variables used to set measurement conditions and sets the value. To run the program, replace the code with the lines 13 to 16 of the program shown in Table 3-14.
16 to 24	Stores program in the internal memory 1, and displays it on the console window. To run the program, replace the code with the lines 18 to 26 of the program shown in Table 3-14.
26 to 37	Stores program in the internal memory 2, and displays it on the console window. To run the program, replace the code with the lines 28 to 39 of the program shown in Table 3-14.

## Programming Examples Using Program Memory

```
'changes vd and vg and performs measurement again '39
E5270.WriteLine("VAR1,0,3") '%R0=vd=3
For i = 1 To 2
  E5270.WriteLine("DO" & i)
  E5270.WriteLine("*OPC?") : ret = E5270.Read(True)
  E5270.WriteLine("ERR? 1") : ret = E5270.Read(True)
  If ret <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err
  value = E5270.Read(True) : status = Left(value, 3)
  value = Right(value, 12) : meas = Val(value)
  Console.WriteLine("Memory " & i & " : Id = " & meas & " (A), Status = " &
status & Chr(10))
Next '49
```

Line	Description
39 to 49	Changes the value of the internal variable %R0, and performs measurement again. Can be inserted between line 53 and line 54 of the program shown in Table 3-14.

### Measurement Result Example

```
Memory 1: Id = 0.021955 (A), Status = NAI
Memory 2: Id = 0.021975 (A), Status = NAI
Memory 1: Id = 0.023085 (A), Status = NAI
Memory 2: Id = 0.023335 (A), Status = NAI
Press any key to continue
```



## Using Trigger Function

The Agilent E5260/E5270 can be equipped with eight trigger ports that will be used for different purpose individually. The Agilent E5260/E5270 can synchronize the operation with other device by using the trigger function. For details about the trigger input/output operation, see “Trigger Function” on page 2-30. The commands below are available to use the trigger function.

Command	Function and Syntax
TGP	Sets the trigger port for the specified terminal. <i>TGP port, terminal, polarity [, type]</i>
TGPC	Clears the trigger setting of the specified ports. <i>TGPC [port ... [,port] ... ]</i>
TGSI	Selects the sweep step first or last that ignores the Start Step Output Setup trigger input set by the <i>TGP port, 1, polarity, 2</i> command. <i>TGSI mode</i>
TGSO	Selects the trigger type, edge or gate, for the Step Output Setup Completion trigger output set by the <i>TGP port, 2, polarity, 2</i> command. <i>TGSO mode</i>
TGXO	Selects the trigger type, edge or gate, for the Measurement Completion trigger output set by the <i>TGP port, 2, polarity, 1</i> command. <i>TGXO mode</i>
TGMO	Selects the trigger type, edge or gate, for the Step Measurement Completion trigger output set by the <i>TGP port, 2, polarity, 3</i> command. <i>TGMO mode</i>
TM3	Enables the trigger set by the <i>TGP port, terminal, polarity, 1</i> command.

## Programming Examples

### Using Trigger Function

The following commands are also available to send a trigger or wait for an external trigger input. Refer to “Using Trigger Function” on page 2-35.

Command	Function and Syntax
OS	Causes the Agilent E5260/E5270 to send a trigger signal from the Ext Trig Out terminal.  OS
OSX <sup>a</sup>	Causes the Agilent E5260/E5270 to send a trigger signal from the specified port.  OSX <i>port</i> [ , <i>level</i> ]
WS	Enters a wait state until the Agilent E5260/E5270 receives an external trigger via the Ext Trig In terminal.  WS [ <i>mode</i> ]
WSX <sup>a</sup>	Enters a wait state until the Agilent E5260/E5270 receives an external trigger via the specified port.  WSX <i>port</i> [ , <i>mode</i> ]
PA	Pauses command execution or internal memory program execution until the specified wait time has elapsed, or until a trigger is received from the Ext Trig In terminal if the TM3 command has been entered.  PA [ <i>wait</i> ]
PAX <sup>a</sup>	Pauses command execution or internal memory program execution until the specified wait time has elapsed, or until a trigger is received from the specified port if the TM3 command has been entered.  PAX <i>port</i> [ , <i>wait</i> ]
TGP	Sets trigger port to the specified terminal.  TGP <i>port, terminal, polarity</i> [ , <i>type</i> ]
TM3	Uses an external trigger to release the PA/PAX command state or to start measurement when the E52570 is not in the PA/PAX/WS/WSX command state.

a. Enter the TGP command to set the trigger port.

The following program shows the example to use the WS and OS commands, the TM and OS commands, and the TM, PA, and OS commands.

This program uses two E5260/E5270 units. A unit applies voltage to a MOSFET source and substrate terminals and the other unit applies voltage to the MOSFET gate and drain terminals and measures the drain current.

Before running the program, connect a BNC cable between the Ext Trig In terminal of the E5260/E5270 with address 722 (Unit1) and the Ext Trig Out terminal of the E5260/E5270 with address 725 (Unit2).

**NOTE**

**Running example program**

This program does not need the example code shown in Table 3-1 to run.

**Table 3-16 Trigger Programming Example 1**

<pre>Imports Agilent.TMFramework '1 Imports Agilent.TMFramework.DataAnalysis Imports Agilent.TMFramework.DataVisualization Imports Agilent.TMFramework.InstrumentIO  Module Module1  Sub Main() '8     Dim unit1 As New DirectIO("GPIB0::17::INSTR")     Dim unit2 As New DirectIO("GPIB0::22::INSTR")     unit1.WriteLine("*RST")     unit2.WriteLine("*RST")     MsgBox("Click OK to start measurement.", vbOKOnly, "")     Console.WriteLine("Measurement in progress. . ." &amp; Chr(10))     Dim t() As Integer = {1, 2, 1, 2} 'unit1[1,2], unit2[1,2]     Dim term1 As String = t(0) &amp; "," &amp; t(1)     Dim term2 As String = t(2) &amp; "," &amp; t(3)     unit1.WriteLine("CN" &amp; term1)     unit2.WriteLine("CN" &amp; term2)     perform_meas(unit1, unit2, t) '20 End Sub </pre>	
Line	Description
1 to 4	These lines are necessary for the Agilent instrument control programming.
8 to 20	Main subprogram establishes the software connection with the Agilent E5260/E5270 (two units, address 17 and 22), resets them, opens a message box to confirm the start of measurement, and pauses program execution until OK is clicked on the message box. By clicking OK, the program displays a message on the console window, enables the SMUs (in the slots 1 and 2 of both unit1 and unit2), and calls the perform_meas subprogram that will be used to perform measurement.

## Programming Examples Using Trigger Function

```

unit1.WriteLine("CL")                                     '22
unit2.WriteLine("CL")
unit1.Close()
unit2.Close()
MsgBox("Click OK to stop the program.", vbOKOnly, "")
Console.WriteLine("Measurement completed." & Chr(10))
End Sub                                                  '28

Sub perform_meas(ByVal unit1 As DirectIO, ByVal unit2 As DirectIO, ByVal t() As
Integer)                                               '30
    Dim i As Integer = 0
    Dim j As Integer = 0
    Dim nop1 As Integer = 1
    Dim nop2 As Integer = 1
    Dim data(nop2 - 1, nop1 - 1) As String
    Dim value As String = "Id (mA), Status"
    Dim fname As String = "C:\Agilent\data\ex14.txt"
    Dim title As String = "Measurement Result"
    Dim msg As String = "No error."
    Dim err As String = "0"

    Dim vg As Double = 0.8 : Dim igcomp As Double = 0.05 '42
    Dim vd As Double = 2.5 : Dim vs As Double = 0 : Dim icipm As Double = 0.1
    Dim ret As Integer

    unit1.WriteLine("FMT 1")                             '46
    unit1.WriteLine("TM 1")
    unit1.WriteLine("AV -1")
    unit1.WriteLine("MM 1," & t(0))
    unit2.WriteLine("DV" & t(3) & ",0," & vs & "," & icipm) 'sub '50
    unit2.WriteLine("DV" & t(2) & ",0," & vs & "," & icipm) 'souce
    unit1.WriteLine("DV" & t(0) & ",0," & vd & "," & icipm) 'drain
    unit1.WriteLine("DV" & t(1) & ",0," & vg & "," & igcomp) 'gate '53

```

Line	Description
22 to 28	After the measurement, the program disables all SMUs, disables the software connection with the E5260/E5270 (unit1 and unit2), and opens a message box to confirm the end of the program. Finally, by clicking OK on the message box, the program displays a message on the console window.
31 to 40	Declares variables used through the project. And sets the proper values.
42 to 44	Declares variables used to perform measurement, and sets the value.
46 to 49	Sets the data output format, trigger mode, A/D converter, and measurement mode.
50 to 51	Unit2 applies voltage to device.
52 to 53	Unit1 applies voltage to device.

```

unit1.WriteLine("WS 2") ' 55
unit1.WriteLine("XE")
unit2.WriteLine("OS")

'unit1.WriteLine("TM 3") ' 59
'unit1.WriteLine("*OPC?") : ret = unit1.Read(True)
'unit2.WriteLine("OS") ' 61
'unit1.WriteLine("PA")
'unit2.WriteLine("OS")
'unit1.WriteLine("XE")

unit1.WriteLine("*OPC?") : ret = unit1.Read(True) ' 66
unit1.WriteLine("ERR? 1") : err = unit1.Read(True)
If err <> 0 Then unit1.WriteLine("DZ") : GoTo Check_err

Dim ret_val As String() = unit1.ReadListAsStringArray() ' 70
Dim data1 As String = ret_val(0)
Dim status As String = Left(data1, 3)
data1 = Right(data1, 12)
Dim meas As Double = Val(data1)

data(j, i) = Chr(13) & Chr(10) & meas * 1000 & ", " & status

unit1.WriteLine("DZ") ' 78
save_data(fname, title, value, data, nop1, nop2, unit1, unit2, t)
Exit Sub

```

Line	Description
55 to 57	Unit1 waits for a trigger sent to the Ext Trig In terminal, and starts measurement when the trigger is received. And unit2 sends a trigger to the Ext Trig Out terminal.
59 to 61	The lines can be replaced with 55 to 57. Delete ' at the top of the lines 59 to 61, and delete lines 55 to 57, then run the program. Unit1 will start measurement when a trigger is received via the Ext Trig In terminal.
62 to 64	The lines can be replaced with 55 to 57. Delete ' at the top of the lines 59 to 64, and delete lines 55 to 57 and 61, then run the program. Unit1 will start measurement when a trigger is received via the Ext Trig In terminal.
66 to 68	Waits for the operation complete and checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err.
70 to 76	Reads measurement data and stores it into the <i>data</i> array.
78 to 80	Applies 0 V from the all channels and transfers the data stored in the <i>data</i> variable to the save_data subprogram. And the subprogram will save the data into the C:\Agilent\data\ex14.txt file (CSV) and displays the data on a message box.

## Programming Examples Using Trigger Function

```

Check_err:                                                    ' 82
    unit1.WriteLine("EMG? " & err) : msg = unit1.Read(True)
    MsgBox("Instrument error: " & err & Chr(10) & msg, vbOKOnly, "")
    Exit Sub

End Sub                                                        ' 87

Sub save_data(ByVal fname As String, ByVal title As String, ByVal value As String,
ByVal data_() As String, ByVal nop1 As Integer, ByVal nop2 As Integer, ByVal unit1
As DirectIO, ByVal unit2 As DirectIO, ByVal t() As Integer)    ' 89
    Dim i As Integer = 0
    Dim j As Integer = 0
    FileOpen(1, fname, OpenMode.Output, OpenAccess.Write, OpenShare.LockReadWrite)
    Print(1, value)
    For j = 0 To nop2 - 1
        'Print(1, Chr(13) & Chr(10) & "Unit" & j + 1)        ' 95
        For i = 0 To nop1 - 1
            Print(1, data(j, i))
        Next i
    Next j
    FileClose(1)

    Dim rbx As Integer
    For j = 0 To nop2 - 1
        'value = value & Chr(10) & "Unit" & j + 1              '104
        For i = 0 To nop1 - 1
            value = value & data(j, i)
        Next i
    Next j
    value = value & Chr(10) & Chr(10) & "Data save completed."
    value = value & Chr(10) & Chr(10) & "Do you want to perform measurement again?"
    rbx = MsgBox(value, vbYesNo, title)
    If rbx = vbYes Then perform_meas(unit1, unit2, t)
End Sub                                                        '113

End Module

```

Line	Description
82 to 85	Displays a message box to show an error message if the error is detected.
89 to 113	Save_data subprogram saves measurement result data into a file specified by the <i>fname</i> variable and displays the data and a message on a message box. If Yes is clicked on the message box, calls the perform_meas subprogram again. If No is clicked, returns to the perform_meas subprogram.

### Measurement Result Example

```

Id (mA), Status
22.475, NAI

Data save completed.

Do you want to perform measurement again?

```

The following program also uses two E5260/E5270 units. Each unit performs I-V measurement of a two-terminal device simultaneously.

Before running the program, connect a BNC cable between the Ext Trig In terminal of Unit1 and the Ext Trig Out terminal of Unit2, and connect a BNC cable between the Ext Trig Out terminal of Unit1 and the Ext Trig In terminal of Unit2.

**NOTE**

**Running example program**

The program needs the example code shown in Table 3-16 to run. Delete the lines 30 to 87 from the program of Table 3-16, and insert the program code of Table 3-17 in there. And delete ' on the lines 95 and 104 of Table 3-16.

**Table 3-17 Trigger Programming Example 2**

<pre> Sub perform_meas(ByVal unit1 As DirectIO, ByVal unit2 As DirectIO, ByVal t() As Integer)     Dim i As Integer = 0     Dim j As Integer = 0     Dim nop1 As Integer = 5     Dim nop2 As Integer = 2     Dim data(nop2 - 1, nop1 - 1) As String     Dim value As String = "I (mA), Time (msec), Status"     Dim fname As String = "C:\Agilent\data\ex15.txt"     Dim title As String = "Measurement Result"     Dim msg As String = "No error."     Dim err As String = "0"     Dim v1 As Double = 0.1 : Dim v2 As Double = 0.5     Dim vs As Double = 0 : Dim icomp As Double = 0.1     Dim ret As Integer     unit1.WriteLine("FMT 1")     unit1.WriteLine("AV -1")     unit1.WriteLine("WT 0, 0.01")     unit1.WriteLine("TM 3")     unit1.WriteLine("TGP -1, 1, 2, 1")     unit1.WriteLine("TGP -2, 2, 2, 3")     unit1.WriteLine("TGMO 1") </pre>	
<b>Line</b>	<b>Description</b>
1 to 11	Declares variables used in the Main of Table 3-16. And sets the proper values.
12 to 14	Declares variables used to perform measurement, and sets the value.
15 to 17	Unit1 sets the data output format, A/D converter, and sweep delay time.
18 to 19	Unit1 sets the Start Measurement trigger input for the Ext Trig In terminal.
20 to 21	Unit1 sets the Step Measurement Completion trigger output for the Ext Trig Out terminal.

## Programming Examples Using Trigger Function

```

unit1.WriteLine("DV" & t(1) & ",0," & vs & "," & icomp) '22
unit1.WriteLine("WV" & t(0) & ",1,0," & v1 & "," & v2 & "," & nop1 & "," & icomp)
unit1.WriteLine("MM 2," & t(0))
unit1.WriteLine("TSC 1")

unit2.WriteLine("FMT 1") '27
unit2.WriteLine("AV -1")
unit2.WriteLine("WT 0, 0.01")
unit2.WriteLine("TM 3") '30
unit2.WriteLine("TGP -2, 2, 2, 1")
unit2.WriteLine("TGXO 2")
unit2.WriteLine("TGP -1, 1, 2, 2")
unit2.WriteLine("TGSI 2") '34
unit2.WriteLine("DV" & t(3) & ",0," & vs & "," & icomp)
unit2.WriteLine("WV" & t(2) & ",1,0," & v1 & "," & v2 & "," & nop1 & "," & icomp)
unit2.WriteLine("MM 2," & t(2))
unit2.WriteLine("TSC 1")
unit1.WriteLine("TSR") : unit2.WriteLine("TSR")
unit2.WriteLine("XE")

unit1.WriteLine(" *OPC?") : ret = unit1.Read(True) '42
unit1.WriteLine("ERR? 1") : err = unit1.Read(True)
If err <> 0 Then unit1.WriteLine("DZ") : unit2.WriteLine("DZ") : GoTo Check_err
unit2.WriteLine("ERR? 1") : err = unit1.Read(True)
If err <> 0 Then unit1.WriteLine("DZ") : unit2.WriteLine("DZ") : GoTo Check_err

```

Line	Description
22 to 25	Unit1 applies voltage to device, and sets the sweep source, the measurement mode, and the time stamp data output.
27 to 29	Unit2 sets the data output format, A/D converter, and sweep delay time.
30 to 32	Unit2 sets the Measurement Completion trigger output for the Ext Trig Out terminal, and specifies the gate trigger. Unit1 will start measurement when this trigger is sent to its Ext Trig In terminal.
33 to 34	Unit2 sets the Start Step Output Setup trigger input for the Ext Trig In terminal. Unit2 will start step output setup when the Step Measurement Completion trigger is sent by the unit1.
35 to 38	Unit2 applies voltage to device, and sets the sweep source, the measurement mode, and the time stamp data output.
39	Resets the time stamp.
40	Unit2 starts measurement, and sends a trigger to the Ext Trig Out terminal. Then the unit1 starts measurement.
42 to 46	Waits for the operation complete and checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err.



```

Dim ret_val1() As String = unit1.ReadListAsStringArray() '48
Dim ret_val2() As String = unit2.ReadListAsStringArray()

Dim data0 As String : Dim data1 As String : Dim time As String
Dim status As String : Dim meas As Double
For i = 0 To nop1 - 1
    data0 = ret_val1(i * 2)
    data1 = ret_val1(i * 2 + 1)
    data0 = Right(data0, 12) : time = Val(data0)
    status = Left(data1, 3)
    data1 = Right(data1, 12) : meas = Val(data1)
    data(0, i) = Chr(13) & Chr(10) & meas * 1000 & ", " & time * 1000 & ", " & status
Next i
For i = 0 To nop1 - 1
    data0 = ret_val2(i * 2)
    data1 = ret_val2(i * 2 + 1)
    data0 = Right(data0, 12) : time = Val(data0)
    status = Left(data1, 3)
    data1 = Right(data1, 12) : meas = Val(data1)
    data(1, i) = Chr(13) & Chr(10) & meas * 1000 & ", " & time * 1000 & ", " & status
Next i
unit1.WriteLine("DZ") : unit2.WriteLine("DZ") '68
save_data(fname, title, value, data, nop1, nop2, unit1, unit2, t)
Exit Sub

Check_err: '73
unit1.WriteLine("EMG? " & err) : msg = unit1.Read(True)
MsgBox("Instrument error: " & err & Chr(10) & msg, vbOKOnly, "")
Exit Sub

End Sub

```

Line	Description
48 to 68	Reads measurement data and stores it into the <i>data</i> array.
69 to 71	Applies 0 V from the all channels and transfers the data stored in the <i>data</i> variable to the <i>save_data</i> subprogram. And the subprogram will save the data into the C:\Agilent\data\ex15.txt file (CSV) and displays the data on a message box.
73 to 76	Displays a message box to show an error message if the error is detected.

### Measurement Result Example

```

I (mA), Time (msec), Status
Unit1
11.345, 18.8, NDI
22.685, 50, NDI
34.035, 81.2, NDI
45.385, 112.4, NDI
56.73, 143.5, NDI
Unit2
10.98, 13.6, NAI
21.98, 47.1, NAI
32.98, 78.2, NAI
43.965, 109.6, NAI
54.965, 140.7, NAI

```

```

Data save completed.
Do you want to perform measurement again?

```

## Programming Examples

### Using Trigger Function

Part of the program used to synchronize the Agilent E5260/E5270 operation with the operation of other instrument is shown below. This program has been written in the HP BASIC language, and performs the following:

1. Sets the Agilent E5260/E5270 for the bipolar transistor Ib-Ic measurement
2. Triggers a sweep measurement
3. Performs a step measurement and sends the Step Measurement Completion output gate trigger
4. Waits for the Start Step Output Setup input trigger
5. Displays a measurement data (Ic)
6. Repeats 3 to 5 the number of times specified by Ib\_num
7. Disables the Agilent E5260/E5270 channel output

This program does not include the program lines to control other instrument and its trigger function. Add the program lines to control the other instrument before running the program. For the timing of the trigger, refer to the comments in the following program listing.

```
10    ASSIGN @E5270 TO 717
20    OPTION BASE 1
30    INTEGER Collector,Base,Ib_num,Vc_num
40    !
50    Collector=2
60    Base=1
70    Ib_start=.0001
80    Ib_stop=.001
90    Ib_num=10
100   Ib_step=(Ib_stop-Ib_start)/(Ib_num-1)
110   Vb_comp=1
120   Vc=2.5
130   Ic_comp=.1
140   !
150   !Other instrument should be initialized and set up.
160   !
```

Line No.	Description
10	Assigns the I/O path to control the E5260/E5270.
50 to 130	Sets the value of the variables for source setup and so on.
140 to 160	Add program lines to perform initialization and measurement setup of the other instrument.

```

170 OUTPUT @E5270;"FMT 5"           ! ASCII w/header<,>
180 OUTPUT @E5270;"AV -1"          ! Averaging=1PLC
190 OUTPUT @E5270;"WT 0,.01"      ! Hold Time, Delay Time
200 OUTPUT @E5270;"CN";Collector,Base
210 OUTPUT @E5270;"TGP -2,2,2,3" ! StepMeasEndTrg Output
220 OUTPUT @E5270;"TGMO 2"        ! Gate Trigger
230 OUTPUT @E5270;"TGP -1,1,2,2" ! StartStepSetupTrg Input
240 OUTPUT @E5270;"TGSI 2" ! Ignore TRG for 1st step setup
250 OUTPUT @E5270;"DV";Collector,0,Vc,Ic_comp
260 OUTPUT @E5270;"WI";Base,1,0,Ib_start,Ib_stop,Ib_num,Vb_comp
270 OUTPUT @E5270;"MM";2,Collector
280 !
290 !Other instrument must be set to the measurement ready and
300 !trigger wait condition.
310 !

```

Line No.	Description
170	Specifies the data output format.
180	Sets the number of averaging samples of the ADC.
190	Sets the hold time and delay time.
200	Enables the source/measurement channels.
210 to 220	Sets the Step Measurement Completion trigger output for the Ext Trig Out terminal, and specifies the gate trigger.
230 to 240	Sets the Start Step Output Setup trigger input for the Ext Trig In terminal, also disables the input trigger for the first sweep step.
250	Forces voltage.
260	Sets the staircase sweep source.
270	Sets the measurement mode and the measurement channel.
280 to 310	To synchronize the Agilent E5260/E5270 operation with the operation of the other instrument, add program lines to set it to the measurement ready and trigger wait condition.

## Programming Examples

### Using Trigger Function

```

320     OUTPUT @E5270;"XE"
330     !
340     !E5270 starts measurement. Then E5270 sends negative gate
350     !trigger to the other instrument.
360     !Then the instrument should start measurement.
370     !
380     FOR I=1 TO Ib_num
390         ENTER @E5270 USING "#,3X,12D,X";Ic
400         PRINT "Ic= ";Ic*1000;" [mA]"
410     !
420     !Measurement data of the other instrument should be read.
430     !And the data should be displayed.
440     !
450     !The instrument must be set to the measurement ready and
460     !trigger wait condition.
470     !
480     !The instrument must send trigger to E5270. E5270 will
490     !start a step source output by the trigger, and perform
500     !a step measurement.
510     !
520     NEXT I
530     !
540     OUTPUT @E5270;"CL"
550     END

```

Line No.	Description
320	Starts sweep measurement, and performs a step measurement. When the Agilent E5260/E5270 starts a step measurement, it sends a negative gate trigger. Then the other instrument should start measurement.
390 to 400	Reads the measurement data, and displays the measurement data.
410 to 510	To synchronize the Agilent E5260/E5270 operation with the operation of other instrument, add program lines to do following: <ul style="list-style-type: none"> <li>To read and display the data measured by the instrument</li> <li>To set it to the measurement ready and trigger wait condition</li> <li>To send a trigger from the instrument</li> </ul> When the Agilent E5260/E5270 receives the trigger, it starts a step measurement and sends negative gate trigger.
520	Repeats 390 to 510 the number of times specified by Ib_num.
540	Disables the source/measurement channels.

## Reading Time Stamp Data

Time stamp function outputs a time data with a measurement result data. For example of reading the time stamp data, see programs in the previous sections.

### NOTE

This function is not available for binary data output format (FMT 3 and 4).

This function is not available for the quasi-pulsed spot measurement (MM 9) and the search measurement (MM 14 and 15).

To read the time data with the best resolution (100  $\mu$ s), reset the time stamp every 100 sec or less for the FMT 1, 2, or 5 data output format, or every 1000 sec or less for the FMT 11, 12, 15, 21, 22, or 25 data output format.

Enter the MM command to define the measurement mode and enter the TSC command to set the time stamp function ON. You can get the time data with the measurement data. The time data is the time from when the time stamp is cleared until the measurement is started.

Function	Command	Parameters
Sets the time stamp function	TSC	<i>onoff</i>

The following commands returns the time data regardless of the TSC command setting. The time data is the time from when the time stamp is cleared until the following command is entered.

Function	Command	Parameters
Forces voltage	TDV	<i>chnum,range,output[,Icomp]</i>
Forces current	TDI	<i>chnum,range,output[,Vcomp]</i>
Performs high speed spot current measurement	TTI	<i>chnum,range</i>
Performs high speed spot voltage measurement	TTV	<i>chnum,range</i>
Just returns the time data	TSQ	

To clear the time stamp, enter the TSR command.

## Reading Binary Output Data

This section provides the example to read binary data. The following program example:

1. executes high-speed spot measurements
2. reads the measurement data in binary data format
3. rearranges the data and calculates the measured data
4. prints the measured data on the screen

---

### NOTE

#### Data resolution

The resolution of binary data is as shown below.

- Measurement data: Measurement range / 50000
- Output data: Output range / 20000

Note that the resolution of the measurement data is larger than the resolution of the high resolution A/D converter.

---

### Measurement Result Example

```
Id (mA), Status
status = 0
type = 1
mode = 1
channel = 1
sign = 0
range = 0.01
count = 19075

3.815, 0

Data save completed.

Do you want to perform measurement again?
```

**Table 3-18 High-Speed Spot Measurement Example to read binary data**

```

Sub perform_meas(ByVal E5270 As DirectIO, ByVal t() As Integer) ' 1
    Dim i As Integer = 0
    Dim j As Integer = 0
    Dim nop1 As Integer = 1
    Dim nop2 As Integer = 1
    Dim data(nop2 - 1, nop1 - 1) As String
    Dim value As String = "Id (mA), Status"
    Dim fname As String = "C:\Agilent\data\ex16.txt"
    Dim title As String = "Measurement Result"
    Dim msg As String = "No error."
    Dim err As String = "0"

    Dim vd As Double = 0.5 ' 13
    Dim vg As Double = 0.5
    Dim idcomp As Double = 0.05
    Dim igcomp As Double = 0.01
    Dim orng As Integer = 0
    Dim mrng As Integer = 0

    E5270.WriteLine("FMT 3") ' 20
    E5270.WriteLine("AV 10,1") ' sets number of samples for 1 data
    E5270.WriteLine("FL 0") ' sets filter off
    E5270.WriteLine("DV " & t(3) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A ' 23
    E5270.WriteLine("DV " & t(2) & ",0,0,0.1") 'out= 0 V, comp= 0.1 A
    E5270.WriteLine("DV " & t(1) & ",," & orng & ",," & vg & ",," & igcomp)
    E5270.WriteLine("DV " & t(0) & ",," & orng & ",," & vd & ",," & idcomp)
    E5270.WriteLine("ERR? 1") : err = E5270.Read(True) ' 28
    If err <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err
    E5270.WriteLine("TI " & t(0) & ",," & mrng)
    Dim dat() As Byte = E5270.UnbufferedRead(4) ' 31

    Dim status As Integer = dat(3) And 224 : status = status / 32 '224=128+64+32
    If status <> 0 Then E5270.WriteLine("DZ") : GoTo Check_err
    Dim type As Integer = dat(0) And 128 : type = type / 128 '0:source, 1:meas
    Dim mode As Integer = dat(0) And 64 : mode = mode / 64 '0:voltage, 1:current
    Dim sign As Integer = dat(0) And 1 '0:positive, 1:negative
    Dim rng As Integer = dat(0) And 62 : rng = rng / 2 '62=32+16+8+4+2
    Dim count As Integer = dat(1) * 256 + dat(2)
    Dim chan As Integer = dat(3) And 31 '31=16+8+4+2+1
    If sign = 1 Then count = count - 65536 '65536 = 1000000000000000 (17 bits)

```

Line	Description
2 to 11	Declares variables used through the project. And sets the proper values.
13 to 18	Declares variables and sets the value.
20 to 22	Sets the data output format and A/D converter. Also sets the SMU filter off.
23 to 26	Applies voltage to device.
28 to 29	Checks if an error occurred. If an error is detected, forces 0 V and goes to Check_err.
30 to 31	Performs the high-speed spot measurement. And stores the returned binary data (four bytes) into the <i>dat</i> array variable.
33 to 41	Picks up the elements, status, type, mode, sign, rng, count, and chan, included in the returned binary data.

## Programming Examples

### Reading Binary Output Data

```

Dim range As Double                                     ' 43
If mode = 1 Then                                       ' current range
    range = 10 ^ (rng - 20)
    If rng = 20 Then
        E5270.WriteLine("UNT? 1")
        Dim unt As String = E5270.Read
        Dim mdl(8) As String : Dim c As String
        Dim a As Integer : Dim b As Integer = 0 : Dim d As Integer = 0
        For a = 1 To Len(unt)
            c = Mid(unt, a, 1)
            If c = "," Then mdl(d) = Mid(unt, b + 1, a - b - 1) : d = d + 1
            If c = ";" Then b = a
        Next
        If mdl(chan) = "E5291A" Then range = 0.2
    End If
Else                                                    ' voltage range
    If rng = 8 Then range = 0.5
    If rng = 9 Then range = 5
    If rng = 11 Then range = 2
    If rng = 12 Then range = 20
    If rng = 13 Then range = 40
    If rng = 14 Then range = 100
    If rng = 15 Then range = 200
End If                                                  ' 66

'value = value & Chr(13) & Chr(10) & "status = " & status ' 68
'value = value & Chr(13) & Chr(10) & "type = " & type
'value = value & Chr(13) & Chr(10) & "mode = " & mode
'value = value & Chr(13) & Chr(10) & "channel = " & chan
'value = value & Chr(13) & Chr(10) & "sign = " & sign
'value = value & Chr(13) & Chr(10) & "range = " & range
'value = value & Chr(13) & Chr(10) & "count = " & count & Chr(13) & Chr(10)

Dim meas As Double                                     ' 76
If type = 0 Then meas = count * range / 20000 'source data
If type = 1 Then meas = count * range / 50000 'measurement data

data(j, i) = Chr(13) & Chr(10) & meas * 1000 & ", " & status ' 80

E5270.WriteLine("DZ")                                  ' 82
save_data(fname, title, value, data, nop1, nop2, E5270, t)
Exit Sub

Check err:                                             ' 86
E5270.WriteLine("EMG? " & err) : msg = E5270.Read(True)
MsgBox("Instrument error: " & err & Chr(10) & msg, vbOKOnly, "")
Exit Sub

End Sub

```

Line	Description
43 to 66	Checks the measurement range or output range setting.
68 to 74	If you want to display and save the binary data elements, delete ' at the top of the lines.
76 to 80	Calculates the measurement data or source output data. And, stores the data into the <i>data</i> array.
82 to 84	Applies 0 V from the all channels. And transfers the data stored in the <i>data</i> variable to the <i>save_data</i> subprogram (see Table 3-1). And the subprogram will save the data into the C:\Agilent\data\ex16.txt file (CSV) and displays the data on a message box.
86 to 89	Displays a message box to show an error message if the error is detected.



## Using Programs for 4142B

This section describes the program modification example to use a program created for the Agilent 4142B Modular DC Source/Monitor. To use the program:

1. change the GPIB address, if necessary.
2. enter the ACH command to translate the channel numbers, if necessary.
3. remove the unsupported command, or replace it with the command supported by the E5260/E5270.

For more information, refer to “To Use Programs for Agilent 4142B” on page 1-45.

The following program examples show a modified measurement program, which performs a high-speed spot measurement.

The original 4142B program:

```

10      ASSIGN @Hp4142 TO 717
20      INTEGER G_ch,D_ch,S_ch
30      !
40      !           !Source:      GNDU
50      G_ch=2  !Gate:         HPSMU (SLOT2)
60      D_ch=3  !Drain:        MPSMU (SLOT3)
70      S_ch=4  !Substrate:    MPSMU (SLOT4)
80      !
90      OUTPUT @Hp4142;"FMT5"
100     OUTPUT @Hp4142;"CN";D_ch,G_ch,S_ch
110     OUTPUT @Hp4142;"DV";S_ch;"",0,0,.1"
120     OUTPUT @Hp4142;"DV";G_ch;"",0,3,.01"
130     OUTPUT @Hp4142;"DV";D_ch;"",0,5,.1"
140     OUTPUT @Hp4142;"TI";D_ch;"",0"
150     ENTER @Hp4142 USING "#,3X,12D,X";Mdata
160     PRINT "Id(A)=";Mdata
170     OUTPUT @Hp4142;"CL"
180     END

```

Line No.	Description
10	Assigns the I/O path to control the 4142B.
90	Specifies the data output format.
100 to 130	Enables the source/measurement channels, and forces voltage.
140 to 180	Executes the measurement, reads and displays the measurement data, and disables channels.

## Programming Examples

### Using Programs for 4142B

The program modified to control the E5260/E5270:

```

10      ASSIGN @Hp4142 TO 717                !<<<<
20      INTEGER G_ch,D_ch,S_ch
21      INTEGER Sub                          !<<<<
30      !
40      !           !Source:      GNDU
50      G_ch=2  !Gate:      HPSMU (SLOT2)
60      D_ch=3  !Drain:     MPSMU (SLOT3)
70      S_ch=4  !Substrate: MPSMU (SLOT4)
80      !
81      Sub=5                                !<<<<
82      OUTPUT @Hp4142;"ACH";Sub,S_ch       !<<<<
83      OUTPUT @Hp4142;"*OPC?"             !<<<<
84      ENTER @Hp4142;A                    !<<<<
85      !
90      OUTPUT @Hp4142;"FMT5"
100     OUTPUT @Hp4142;"CN";D_ch,G_ch,S_ch
110     OUTPUT @Hp4142;"DV";S_ch;" ,0,0, .1"
120     OUTPUT @Hp4142;"DV";G_ch;" ,0,3, .01"
130     OUTPUT @Hp4142;"DV";D_ch;" ,0,5, .1"
140     OUTPUT @Hp4142;"TI";D_ch;" ,0"
150     ENTER @Hp4142 USING "#,3X,12D,X";Mdata
160     PRINT "Id(A)=";Mdata
170     OUTPUT @Hp4142;"CL"
180     END

```

Line No.	Note
10	Change GPIB address, if necessary.
21, 81	Add program lines if the module configuration is different from the 4142B. This example adds the variable Sub, and uses the SMU in slot 5 instead of slot 4 for substrate.
82 to 84	Add program line to set the channel map. This example transfers the Sub value to the variable S_ch used in the original program.

## Using Programs for 4155B/4156B/4155C/4156C

This section describes the program modification example to use a FLEX command program created for the Agilent 4155B/4156B/4155C/4156C Parameter Analyzer. To use the program:

1. change the GPIB address, if necessary.
2. enter the ACH command to translate the channel numbers, if necessary.
3. change the FMT command parameter value to use the data output format compatible with the 4155/4156 output data, or change the program lines to read the measurement data.
4. remove the US command.
5. remove the RMD? command.
6. remove the unsupported command, or replace the command with the corresponding command supported by the E5260/E5270.

For more information, refer to “To Use Programs for Agilent 4155/4156” on page 1-46.

The following program examples show a modified measurement program, which performs a high-speed spot measurement.

## Programming Examples

### Using Programs for 4155B/4156B/4155C/4156C

The original 4156C program:

```

10      ASSIGN @Hp415x TO 717
20      INTEGER G_ch,D_ch,S_ch,B_ch
30      !
40      S_ch      !Source:      SMU1
50      G_ch=2    !Gate:        SMU2
60      D_ch=3    !Drain:       SMU3
70      B_ch=4    !Substrate:   SMU4
80      !
90      OUTPUT @Hp415x;"US"
100     OUTPUT @Hp415x;"FMT 5"
110     OUTPUT @Hp415x;"CN ";D_ch,G_ch,S_ch,B_ch
120     OUTPUT @Hp415x;"DV ";S_ch;"0,0,.1"
130     OUTPUT @Hp415x;"DV ";B_ch;"0,0,.1"
140     OUTPUT @Hp415x;"DV ";G_ch;"0,3,.01"
150     OUTPUT @Hp415x;"DV ";D_ch;"0,5,.1"
160     OUTPUT @Hp415x;"TI ";D_ch;"0"
170     OUTPUT @Hp415x;"RMD? 1"
180     ENTER @Hp415x USING "#,5X,13D,X";Mdata
190     PRINT "Id(A)=";Mdata
200     OUTPUT @Hp415x;"CL"
210     END

```

Line No.	Description
10	Assigns the I/O path to control the 4155/4156.
90	Enters the FLEX command mode.
100	Specifies the data output format.
110 to 150	Enables the source/measurement channels, and forces voltage.
160 to 210	Executes the measurement, reads and displays the measurement data, and disables channels.

The program modified to control the E5260/E5270:

```

10      ASSIGN @Hp415x TO 717                !<<<<
20      INTEGER G_ch,D_ch,S_ch,B_ch
21      INTEGER Sub                          !<<<<
30      !
40      ! S_ch=1 !Source:    SMU1 <<<< replaced with GNDU
50      G_ch=2 !Gate:      SMU2
60      D_ch=3 !Drain:     SMU3
70      B_ch=4 !Substrate: SMU4
80      !
81      Sub=5                                !<<<<
82      OUTPUT @Hp415x;"ACH ";Sub,B_ch      !<<<<
83      !
90      ! OUTPUT @Hp415x;"US"                <<<<
100     OUTPUT @Hp415x;"FMT 25"             !<<<<
110     OUTPUT @Hp415x;"CN ";D_ch,G_ch,B_ch !<<<<
120     ! OUTPUT @Hp415x;"DV ";S_ch;" ,0,0,.1" <<<<
130     OUTPUT @Hp415x;"DV ";B_ch;" ,0,0,.1"
140     OUTPUT @Hp415x;"DV ";G_ch;" ,0,3,.01"
150     OUTPUT @Hp415x;"DV ";D_ch;" ,0,5,.1"
160     OUTPUT @Hp415x;"TI ";D_ch;" ,0"
170     ! OUTPUT @Hp415x;"RMD? 1"           <<<<
180     ENTER @Hp415x USING "#,5X,13D,X";Mdata
190     PRINT "Id (A)=";Mdata
200     OUTPUT @Hp415x;"CL"
210     END

```

Line No.	Note
10	Change GPIB address, if necessary.
21, 81	Add program lines if the module configuration is different from the 415x. This example adds the Sub variable, and uses the SMU in slot 5 instead of slot 4 for substrate.
82	Add program line to set the channel map. This example transfers the Sub value to the variable B_ch used in the original program.
90	Remove the US command. This command is not required.
100	Change the FMT command parameter value.
40, 110, 120	This example uses the GNDU instead of the SMU1. So remove the program lines that include the variable S_ch (SMU1).
170	Remove the RMD? command. This command is not required.

Programming Examples  
Using Programs for 4155B/4156B/4155C/4156C



## Command Reference

This chapter is the complete reference of the GPIB commands of the Agilent E5260/E5270:

- “Command Summary”
- “Command Parameters”
- “Command Reference”

---

**NOTE****Module model number and description**

In this chapter, plug-in modules and accessory for the Agilent E5260/E5270 will be expressed by the model number or the following abbreviation as shown below.

E5280B: HPSMU (high power SMU, for E5270B)

E5281B: MPSMU (medium power SMU, for E5270B)

E5287A: HRSMU (high resolution SMU, for E5270B)

E5288A: ASU (atto sense and switch unit, for E5270B)

E5290A: HPSMU (high power SMU, for E5260 series)

E5291A: MPSMU (medium power SMU, for E5260 series)

---



## Command Summary

The following table summarizes the GPIB commands.

Category	Command	Summary
Reset	*RST	Resets the E5260/E5270 to the initial settings.
Diagnostics	DIAG?	Performs diagnostics, and returns the result.
Self-test	*TST?	Performs the self-test, and returns the result.
Self Calibration	CA	Performs self calibration.
	*CAL?	Performs self calibration, and returns the result.
	CM	Sets auto-calibration ON or OFF.
Abort	AB	Aborts the present operation and subsequent command execution.
Pause/Continue	PA/PAX	Pauses command execution or internal memory program execution, until the specified wait time has elapsed or until an event specified by the TM command is received.
	TM	Sets the event to start measurement or to release the E5260/E5270 from the paused status set by the PA or PAX command.
Channel Control	ACH	Translates a channel number to another channel number.
	CN	Enables the specified channels by setting the output switches to ON.
	CL	Disables the specified channels by setting the output switches to OFF.
	IN	Sets the specified channels to 0 V.
	DZ	Stores the setup of the channels, and sets the output to 0 V.
	RZ	Returns the channel to the settings that are stored by the DZ command and clears the stored channel settings.
	SAL	Only for E5270B. Disables the connection status indicator of the ASU.
	SAR	Only for E5270B. Enables 1 pA range for the auto ranging operation.
	SAP	Only for E5270B. Controls the input-output path of the ASU.
	RCV	Enables the channels that fail self-test.

## Command Reference

Category	Command	Summary
Series Resistor	SSR	Sets the SMU series resistor of the specified channel to ON or OFF.
Filter	FL	Sets the filter of the specified channels to ON or OFF.
Integration Time and Averaging	AV	Selects the number of samples for averaging of the A/D converter.
	WAT	Sets the source wait time and the measurement wait time.
	AAD	Only for E5270B. Selects the type of A/D converter, high-speed or high-resolution ADC.
	AIT	Only for E5270B. Selects the number of samples for averaging or the integration time of the ADC.
	AZ	Only for E5270B. Enables or disables the ADC zero function.
Output Data	FMT	Specifies the measurement data output format and the data terminator.
	BC	Clears the E5260/E5270 output data buffer that stores measurement data and/or query command response data.
Source Setup	DI	Forces current from the specified channel.
	DV	Forces voltage from the specified channel.
High speed spot measurement	TI	Executes the current measurement, and returns the measured data.
	TV	Executes the voltage measurement, and returns the measured data.
Time Stamp	TDI	Forces current (TDI) or voltage (TDV), and returns the time data from when the timer is cleared until source output is started.
	TDV	
	TSC	Enables the time stamp function for the MM 1, 2, 3, 4, 5, or 16 mode.
	TSQ	Returns the time data from when TSR is given until TSQ is given.
	TSR	Clears the timer count.
	TTI	Measures current (TTI) or voltage (TTV), and returns the measurement data and the time data for the time from when the timer is cleared until the measurement is started.
	TTV	
Measurement Mode	MM	Sets the measurement mode and measurement channels.

Category	Command	Summary
Measurement Execution	XE	Performs measurements, and returns the measurement data; or recovers from the paused state if the PA/PAX command has been sent. Not available for the high speed spot measurement.
Staircase Sweep Source Setup	WT	Sets the hold time, delay time, step delay time, and trigger delay time.
	WI	Sets the staircase current sweep source.
	WV	Sets the staircase voltage sweep source.
	WM	Sets the automatic sweep abort function, and also sets the post sweep condition.
Synchronous Sweep Source Setup	WSI	Sets the synchronous current sweep source used with the WI or PWI command.
	WSV	Sets the synchronous voltage sweep source used with the WV or PWV command.
Multi channel Sweep Source Setup	WNX	Sets the synchronous current sweep source or synchronous voltage sweep source used with the WI or WV command.
Pulsed Source Setup	PT	Sets the hold time, pulse width, pulse period, and trigger delay time.
	PI	Sets the pulsed current source.
	PV	Sets the pulsed voltage source.
Pulsed Sweep Source Setup	PT	Sets the hold time, pulse width, pulse period, and trigger delay time.
	PWI	Sets the pulsed current sweep source.
	PWV	Sets the pulsed voltage sweep source.
	WM	Sets the automatic sweep abort function, also sets the post sweep condition.
Quasi-pulsed Voltage Source Setup	BDM	Specifies the detection interval, and either voltage or current measurement.
	BDT	Specifies the hold time and delay time.
	BDV	Sets the quasi-pulsed voltage source.

## Command Reference

Category	Command	Summary
Binary Search Measurement Setup	BSM	Sets the source output control mode, the automatic abort function, and the post search condition.
	BST	Specifies the hold time and delay time.
	BSVM	Selects the data output mode.
	BSI	Sets the current source channel.
	BSSI	Sets the synchronous current source channel.
	BGV	Sets the voltage monitor channel.
	BSV	Sets the voltage source channel.
	BSSV	Sets the synchronous voltage source channel.
	BGI	Sets the current monitor channel.
Linear Search Measurement Setup	LSTM	Specifies the hold time and delay time.
	LSVM	Selects the data output mode.
	LSI	Sets the current source channel.
	LSSI	Sets the synchronous current source channel.
	LGV	Sets the voltage monitor channel.
	LSV	Sets the voltage source channel.
	LSSV	Sets the synchronous voltage source channel.
	LGI	Sets the current monitor channel.
	LSM	Sets the automatic abort function and the post search condition.
Measurement Setup	CMM	Sets the SMU measurement operation mode.
	RI	Specifies the current measurement ranging mode for measurement other than the high speed spot measurement that uses TI/TTI command.
	RV	Specifies the voltage measurement ranging mode for measurement other than the high speed spot measurement that uses TV/TTV command.
	RM	Sets the range selection rule for the auto ranging current measurement.

Category	Command	Summary
Program Memory	ST	Used with END command to store a program in the internal program memory. The ST command indicates the beginning of the program.
	END	Used with the ST command to store a program in the internal program memory. The END command indicates the end of the program.
	SCR	Scratches the specified program from the internal program memory.
	VAR	Sets the value to the variable used in an internal memory program.
	VAR?	Returns the value set to the internal memory program variable.
	LST?	Returns a catalog of internal memory programs or a specific program listing (3000 commands maximum).
	DO	Executes internal memory programs in the order specified.
	RU	Executes internal memory programs sequentially.
Query	ERR?	Returns error codes.
	EMG?	Returns error message for the specified error code.
	*IDN?	Returns the instrument model number and the ROM version number.
	LOP?	Returns the operation status of all modules.
	*LRN?	Returns channel settings or the E5260/E5270 command parameter settings.
	NUB?	Returns the number of measurement data items in the output data buffer.
	*OPC?	Starts to monitor pending operations, or asks the OPC bit setting.
	UNT?	Returns the model and revision numbers of all modules.
	WNU?	Returns the number of sweep steps specified by the sweep command.
	WZ?	Returns 0 if all channel output is $\pm 2$ V or less, or 1 if any channel applies more than $\pm 2$ V.
Status Byte	*SRE	Enables the specified bits of the status byte register.
	*SRE?	Returns which bits of the status byte register are enabled.
	*STB?	Returns the status byte setting.

## Command Reference

Category	Command	Summary
External Trigger	TGP	Enables the trigger function for a terminal.
	TGPC	Clears the trigger setting of the specified ports.
	TGSI	Selects the sweep step first or last that ignores the Start Step Output Setup trigger input set by the <code>TGP port, 1, polarity, 2</code> command.
	TGSO	Selects the trigger type, edge or gate, for the Step Output Setup Completion trigger output set by the <code>TGP port, 2, polarity, 2</code> command.
	TGXO	Selects the trigger type, edge or gate, for the Measurement Completion trigger output set by the <code>TGP port, 2, polarity, 1</code> command.
	TGMO	Selects the trigger type, edge or gate, for the Step Measurement Completion trigger output set by the <code>TGP port, 2, polarity, 3</code> command.
	OS/OSX	Causes the E5260/E5270 to send a trigger signal from a trigger output terminal.
	WS/WSX	Enters a wait state until the E5260/E5270 receives an external trigger via a trigger input terminal.
	TM3	Enables use of an external trigger to release the PA/PAX state, or to start measurement if the E5260/E5270 has not been set to the PA/PAX/WS/WSX state. Or enables trigger set by the <code>TGP port,terminal,polarity,1</code> .
Digital I/O port	ERM	Changes the digital I/O port assignments.
	ERS?	Returns the digital I/O port status.
	ERC	Changes the output status of the digital I/O port.
Display and keyboard	RED	Enables or disables the measurement data display and the setup data display in the remote mode.
	DFM	Selects the data display format, scientific or engineering.
	SPA	Selects the parameter displayed in the Source Data display area.
	MPA	Selects the parameter displayed in the Measurement Data display area.
	SCH	Selects the source channel for the data is displayed on the LCD.
	MCH	Selects the measurement channel for the data is displayed on the LCD.
	KLC	Locks or unlocks the front panel keys.

## Command Parameters

The parameters used by several commands are explained in this section.

- “Channel Number”
- “Voltage Measurement Ranging Type”
- “Current Measurement Ranging Type”
- “Voltage Output Ranging Type”
- “Current Output Ranging Type”
- “Voltage Source Setup Parameters for DV/TDV/BDV/WV/WSV/WNX/PV/PWV/LSV/BSV Commands”
- “Current Source Setup Parameters for DI/TDI/WI/WSI/WNX/PI/PWI/LSI/BSI Commands”

In the following tables, the command parameters are put in italics such as *chnum*.

**Table 4-1**

### Channel Number

Mainframe	<i>chnum</i>	Description
E5270B	2, 3, 4, 6, 7, 8	HPSMU <sup>a</sup> in the slot specified by <i>chnum</i> .
	1 to 8	MPSMU in the slot specified by <i>chnum</i> .
	1 to 8	HRSMU in the slot specified by <i>chnum</i> .
E5260A	2, 3, 4, 6, 7, 8	HPSMU <sup>a</sup> in the slot specified by <i>chnum</i> .
	1 to 8	MPSMU in the slot specified by <i>chnum</i> .
E5262A	1	MPSMU in slot 1.
	2	MPSMU in slot 2.
E5263A	1	MPSMU in slot 1.
	2	HPSMU.

- a. HPSMU uses two slots. Then *chnum* must be the greater slot number. For example, if it is installed in slot 3 and 4, *chnum* must be 4.

**Table 4-2 Voltage Measurement Ranging Type**

<i>range</i> <sup>a</sup>	Ranging type	
	for measurement mode without pulse	for measurement mode that uses pulse
0	Auto ranging	Measurement channel uses the minimum range that covers the compliance value.
5, for MP/HRSMU of E5270B	0.5 V limited auto ranging	
50, for MP/HRSMU of E5270B	5 V limited auto ranging	
20 or 11	2 V limited auto ranging	
200 or 12	20 V limited auto ranging	
400 or 13	40 V limited auto ranging	
1000 or 14	100 V limited auto ranging	
2000 or 15, Only for HRSMU	200 V limited auto ranging	
-5, for MP/HRSMU of E5270B	0.5 V range fixed	
-50, for MP/HRSMU of E5270B	5 V range fixed	
-20 or -11	2 V range fixed	
-200 or -12	20 V range fixed	
-400 or -13	40 V range fixed	
-1000 or -14	100 V range fixed	
-2000 or -15, Only for HPSMU	200 V range fixed	

a. If the measurement channel forces voltage, the channel uses the voltage output range regardless of the *range* value.

**NOTE**

**Measurement Ranging (Auto and Limited auto)**

The instrument automatically selects the minimum range that covers the measurement value, and performs the measurement by using the range. For the limited auto ranging, the instrument does not use the range lower than the specified range value. For example, if you select the 100 nA limited auto ranging, the instrument never uses the 10 nA range and below.



Table 4-3 Current Measurement Ranging Type

<i>range</i> <sup>a</sup>	Ranging type	
	for measurement mode without pulse	for measurement mode that uses pulse
0	Auto ranging	Measurement channel uses the minimum range that covers the compliance value.
8, for HRSMU+ASU	1 pA limited auto ranging	
9, for HRSMU	10 pA limited auto ranging	
10, for HRSMU	100 pA limited auto ranging	
11, for E5270B	1 nA limited auto ranging	
12, for E5270B	10 nA limited auto ranging	
13	100 nA limited auto ranging	
14	1 $\mu$ A limited auto ranging	
15	10 $\mu$ A limited auto ranging	
16	100 $\mu$ A limited auto ranging	
17	1 mA limited auto ranging	
18	10 mA limited auto ranging	
19	100 mA limited auto ranging	
20, for MPSMU of E5260 series	200 mA limited auto ranging	
20, for HPSMU	1 A limited auto ranging	
-8, for HRSMU+ASU	1 pA range fixed	
-9, for HRSMU	10 pA range fixed	
-10, for HRSMU	100 pA range fixed	
-11, for E5270B	1 nA range fixed	
-12, for E5270B	10 nA range fixed	
-13	100 nA range fixed	
-14	1 $\mu$ A range fixed	
-15	10 $\mu$ A range fixed	
-16	100 $\mu$ A range fixed	
-17	1 mA range fixed	
-18	10 mA range fixed	
-19	100 mA range fixed	
-20, for MPSMU of E5260 series	200 mA range fixed	
-20, for HPSMU	1 A range fixed	

a. If the measurement channel forces current, the channel uses the current output range regardless of the *range* value.

**Table 4-4 Voltage Output Ranging Type**

<i>range or vrange</i>	<b>Ranging type</b>
0	Auto ranging
5	0.5 V limited auto ranging, for MP/HRSMU of E5270B
50	5 V limited auto ranging, for MP/HRSMU of E5270B
20 or 11	2 V limited auto ranging
200 or 12	20 V limited auto ranging
400 or 13	40 V limited auto ranging
1000 or 14	100 V limited auto ranging
2000 or 15	200 V limited auto ranging, for HPSMU

**Table 4-5 Current Output Ranging Type**

<i>range or irange</i>	<b>Ranging type</b>
0	Auto ranging
8	1 pA limited auto ranging, for HRSMU+ASU, not available for pulsed output
9	10 pA limited auto ranging, for HRSMU, not available for pulsed output
10	100 pA limited auto ranging, for HRSMU, not available for pulsed output
11	1 nA limited auto ranging, for E5270B, not available for pulsed output
12	10 nA limited auto ranging, for E5270B
13	100 nA limited auto ranging
14	1 $\mu$ A limited auto ranging
15	10 $\mu$ A limited auto ranging
16	100 $\mu$ A limited auto ranging
17	1 mA limited auto ranging
18	10 mA limited auto ranging
19	100 mA limited auto ranging
20	200 mA limited auto ranging, for MPSMU of E5260 series
	1 A limited auto ranging, for HPSMU

**NOTE****Output Ranging**

The instrument automatically selects the minimum range that covers the output value, and applies voltage or current by using the range. For the limited auto ranging, the instrument does not use the range lower than the specified range value. For example, if you select the 100 nA limited auto ranging, the instrument never uses the 10 nA range and below.

**Table 4-6 Voltage Source Setup Parameters for DV/TDV/BDV/WV/WSV/WNX/PV/PWV/LSV/BSV Commands**

Output range (actually used)	Setting resolution in V	voltage, start, stop, base, or pulse in V	Maximum <i>I</i> <sub>comp</sub> value in A				
			E5270B			E5260 series	
			HPSMU	MPSMU	HRSMU	HPSMU	MPSMU
0.5 V	25E-6	0 to ± 0.5	NA	±100E-3	±100E-3	NA	NA
2 V	100E-6	0 to ± 2	±1	±100E-3	±100E-3	±1	±200E-3
5 V	250E-6	0 to ± 5	NA	±100E-3	±100E-3	NA	NA
20 V	1E-3	0 to ± 20	±1	±100E-3	±100E-3	±1	±200E-3
40 V	2E-3	0 to ± 20	±1	±100E-3	±100E-3	±1	±200E-3
		to ± 40	±500E-3	±50E-3	±50E-3	±500E-3	±50E-3
100 V	5E-3	0 to ± 20	±1	±100E-3	±100E-3	±1	±200E-3
		to ± 40	±500E-3	±50E-3	±50E-3	±500E-3	±50E-3
		to ± 100	±125E-3	±20E-3	±20E-3	±125E-3	±20E-3
200 V	10E-3	0 to ± 20	±1	NA	NA	±1	NA
		to ± 40	±500E-3			±500E-3	
		to ± 100	±125E-3			±125E-3	
		to ± 200	±50E-3			±50E-3	

**Table 4-7 Current Source Setup Parameters for DI/TDI/WI/WSI/WNX/PI/PWI/LSI/BSI Commands**

Output range (actually used)	Setting resolution in A	<i>current, start, stop, base, or pulse in A</i>	Maximum <i>Vcomp</i> value in V				
			E5270B			E5260 series	
			HPSMU	MPSMU	HRSMU	HPSMU	MPSMU
1 pA	1E-15	0 to ± 1.15 E-12	NA	NA	±100	NA	NA
10 pA	5E-15	0 to ± 11.5 E-12			±100		
100 pA	5E-15	0 to ± 115 E-12			±100		
1 nA	50E-15	0 to ± 1.15 E-9	±200	±100	±100	±200	±100
10 nA	500E-15	0 to ± 11.5 E-9	±200	±100	±100		
100 nA	5E-12	0 to ± 115 E-9	±200	±100	±100		
1 µA	50E-12	0 to ± 1.15E-6	±200	±100	±100	±200	±100
10 µA	500E-12	0 to ± 11.5E-6	±200	±100	±100	±200	±100
100 µA	5E-9	0 to ± 115E-6	±200	±100	±100	±200	±100
1 mA	50E-9	0 to ± 1.15E-3	±200	±100	±100	±200	±100
10 mA	500E-9	0 to ± 11.5E-3	±200	±100	±100	±200	±100
100 mA	5E-6	0 to ± 20E-3	±200	±100	±100	±200	±100
		to ± 50E-3	±200	±40	±40	±200	±40
		to ± 100E-3	±100	±20	±20	±100	±20
		to ± 115E-3	±100	NA	NA	±100	±20
200 mA	10E-6	0 to ± 20E-3	NA	NA	NA	NA	±100
		to ± 50E-3				±40	
		to ± 200E-3				±20	
1 A	50E-6	0 to ± 50E-3	±200	NA	NA	±200	NA
		to ± 125E-3	±100			±100	
		to ± 500E-3	±40			±40	
		to ± 1	±20			±20	

---

## Command Reference

This section contains detailed descriptions of all GPIB commands. The commands are listed in alphabetical order. Each entry:

1. Defines one GPIB command
2. Describes the execution conditions, if any exist
3. Describes the syntax
4. Lists the parameters
5. Shows the query response after command execution, if there is a query command
6. Explains any additional information
7. Provides examples

The following conventions are used in this section.

<i><b>parameter</b></i>	Required command parameters, for which you must substitute a value or variable.
<i><b>[parameter]</b></i>	Optional command parameters, for which you may substitute a value or omit it.

## Command Reference

### AAD

## AAD

This command is available for the Agilent E5270B, and is used to specify the A/D converter (ADC) type, high-speed or high-resolution, for each measurement channel.

This command setting is ignored by the pulsed spot, pulsed sweep, and staircase sweep with pulsed bias measurements.

#### Execution Conditions

Enter the AIT command to set up the ADC.

This command is not available for the Agilent E5260 series.

#### Syntax

AAD *chnum*[, *type*]

#### Parameters

***chnum*** : Measurement channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***type*** : Type of the A/D converter. Integer expression. 0 or 1.

- 0: High-speed ADC (default setting). For high speed measurement.
- 1: High-resolution ADC. For high accurate measurement.

#### Example Statements

```
OUTPUT @E5270;"AAD 1,0"
```

```
OUTPUT @E5270;"AAD 1,1"
```

## AB

The AB command aborts the present operation and subsequent command execution.

This command stops the operation now in progress, such as the measurement execution, source setup changing, and so on. But this command does not change the present condition. For example, if the E5260/E5270 just keeps to force the DC bias, the AB command does not stop the DC bias output.

### Syntax

AB

### Conditions after Execution

The AB command sets the E5260/E5270 as listed in the following table.

Operation before AB	Setting after AB
Staircase sweep measurement	Sets specified start value.
Pulsed spot measurement	Sets specified base value.
Pulsed sweep measurement	Sets specified base value.
Staircase sweep with pulsed bias measurement	Sets specified start value and base value.
Quasi-pulsed spot measurement	Sets specified start value.
Linear search measurement	Sets specified start value.
Binary search measurement	Sets specified start value.
Multi channel sweep measurement	Sets specified start value.
Self-test	Same as set by CL command.
Self-calibration	Same as set by CL command.
Wait state (PA/PAX/WS/WSX command)	Settings do not change.
Program execution (RU or DO command)	Settings do not change.

### Example Statements

```
OUTPUT @E5270;"AB"
```

## Command Reference

### AB

#### Remarks

If you start an operation that you may want to abort, do not send any command after the command or command string that starts the operation. If you do, the AB command cannot enter the command input buffer until the intervening command execution starts, so the operation cannot be aborted. In this case, use the device clear (HP BASIC CLEAR command) to end the operation.

If the AB command is entered in a command string, the other commands in the string are not executed. For example, the CN command in the following command string is not executed.

```
OUTPUT @E5270;"AB;CN"
```

During sweep measurement, if the E5260/E5270 receives the AB command, it returns only the measurement data obtained before abort. Then the dummy data is not returned.

For the quasi-pulsed spot measurement, the E5260/E5270 cannot receive any command during the settling detection. So the AB command cannot abort the operation, and it will be performed after the settling detection.



## ACH

The ACH command translates the specified *program* channel number to the specified *actual* channel number at the program execution. This command is useful when you use a control program created for an instrument, such as the 4142B, 4155B/4155C/4156B/4156C, and E5260/E5270, that has a module configuration different from the E5260/E5270 actually you use. After the ACH command, enter the \*OPC? command to confirm that the command execution is completed.

### Syntax

ACH [*actual*[,*program*]]

### Parameter

***actual*** : Channel number actually used for measurement instead of *program*. The value must be slot number where the module has been installed in the E5260/E5270. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***program*** : Channel number used in a program and will be replaced with *actual*. Integer expression.

If you do not set *program*, this command is the same as ACH *n,n*.

If you do not set *actual* and *program*, the all channel number mapping is cleared.

For parameter settings, you cannot use the variables set by the VAR command.

### Remarks

The ACH commands must be put at the beginning of the program or before the command line that includes a *program* channel number. In the program lines that follow the ACH command, you must leave the *program* channel numbers. The measurement data is returned as the data of the channel *program*, not *actual*.

### Example Statements

If you want to use channels 1 to 3 instead of channels 5 to 7 respectively, enter the following statements. The measurement data is returned as the data of channel 5, not channel 1.

```

OUTPUT @E5270;"ACH 1,5"      !uses ch1 instead of ch5
OUTPUT @E5270;"ACH 2,6"      !      ch2           ch6
OUTPUT @E5270;"ACH 3,7"      !      ch3           ch7
OUTPUT @E5270;"*OPC?"
ENTER @E5270;A
!
OUTPUT @E5270;"CN 5,6,7"      !leave prog ch No.
!
OUTPUT @E5270;"DV 5,0,3"      !
OUTPUT @E5270;"DV 6,0,0"      !
OUTPUT @E5270;"DV 7,0,0"      !
!
OUTPUT @E5270;"TI 5,0"        !
ENTER @E5270 USING "#,3X,12D,X";Data!
PRINT "I=";Data              !
!
OUTPUT @E5270;"CL 5,6,7"      !      V

```

## Command Reference

### AIT

#### AIT

This command is available for the Agilent E5270B, and is used to set the integration time or the number of averaging samples of the A/D converter (ADC) for each ADC type.

This command setting is ignored by the pulsed spot, pulsed sweep, and staircase sweep with pulsed bias measurements.

#### Execution Conditions

Enter the AAD command to specify the ADC type for each measurement channel.

This command is not available for the Agilent E5260 series.

#### Syntax

```
AIT type, mode [, N]
```

#### Parameters

***type*** : A/D converter type. Integer expression.

0: High-speed A/D converter.

1: High-resolution A/D converter.

***mode*** : ADC operation mode. Integer expression. Initial value is 0.

0: Auto mode.

1: Manual mode.

2: Power line cycle (PLC) mode.

***N*** : Coefficient used to define the integration time or the number of averaging samples. Integer expression. See Table 4-8.

#### Example Statements

```
OUTPUT @E5270;"AIT 0,2,1"
```

```
OUTPUT @E5270;"AIT 1,1,10"
```

Table 4-8 Available Parameter Values

<i>type</i>	<i>mode</i>	<i>N</i>
0	0	Value that defines the number of averaging samples given by the following formula. 1 to 1023. Default value is 1.  <i>Number of averaging samples = N × initial averaging</i> where <i>initial averaging</i> is the number of averaging samples automatically set by Agilent E5270B and you cannot change.
	1	Number of averaging samples. 1 to 1023. Default value is 1.
	2	Value that defines the number of averaging samples given by the following formula. 1 to 100. Default value is 1.  <i>Number of averaging samples = N × 128</i> The Agilent E5270B gets 128 samples in a power line cycle, repeats this for the times you specify, and performs averaging to get the measurement data.
1	0	Value that defines the integration time given by the following formula. 1 to 127. Default value is 6.  <i>Integration time = N × initial integration time</i> where <i>initial integration time</i> is the integration time automatically set by Agilent E5270B and you cannot change.
	1	Value that defines the integration time given by the following formula. 1 to 127. Default value is 3.  <i>Integration time = N × 80 μsec</i>
	2	Value that defines the integration time given by the following formula. 1 to 100. Default value is 1.  <i>Integration time = N / power line frequency</i>

## Command Reference

### AV

## AV

This command sets the number of averaging samples of the A/D converter (ADC).

This command setting is ignored by the pulsed spot, pulsed sweep, and staircase sweep with pulsed bias measurements.

### Syntax

```
AV number [, mode]
```

### Parameters

***number*** : 1 to 1023, or -1 to -100. Initial value is 1.

For *positive* number input, this value specifies the number of samples depended on the *mode* value. See below.

For *negative* number input, this parameter specifies the number of power line cycles (PLC) for one point measurement. The Agilent E5260/E5270 gets 128 samples in 1 PLC. Ignore the *mode* parameter.

***mode*** : Averaging mode. Integer expression. This parameter is meaningless for negative *number*.

0: Auto mode (default setting).

Number of samples =  $number \times initial\ number$

1: Manual mode.

Number of samples =  $number$

where *initial number* means the number of samples the Agilent E5260/E5270 automatically sets and you cannot change. For voltage measurement, *initial number*=1. For current measurement, see Table 4-9.

If you select the manual mode, *number* must be *initial number* or more to satisfy the specifications.

### Example Statements

```
OUTPUT @E5270;"AV 10"  
OUTPUT @E5270;"AV -50"  
OUTPUT @E5270;"AV 100,1"
```

Table 4-9

Initial Number for Current Measurement

Current Measurement Range	Voltage Output Range <sup>a</sup>		
	to 40 V	100 V	200 V
to 10 $\mu$ A	4	10	25
100 $\mu$ A to 1 A	1	1	1

- a. For measurement channels that force current, this is the minimum range that covers the voltage compliance value.

## Command Reference

### AZ

#### AZ

This command is available for the Agilent E5270B, and is used to enable or disable the ADC zero function that is the function to cancel offset of the high-resolution A/D converter. This function is especially effective for low voltage measurements. Power on, \*RST command, and device clear disable the function.

This command is effective for the high-resolution A/D converter, not effective for the high-speed A/D converter.

#### Execution Conditions

This command is not available for the Agilent E5260 series.

#### Syntax

*AZ mode*

#### Parameters

*mode* : Mode ON or OFF.  
0: OFF. Disables the function. Initial setting.  
1: ON. Enables the function.

#### Remarks

Set the function to OFF in cases that the measurement speed is more important than the measurement accuracy. This roughly halves the integration time.

#### Example Statements

```
OUTPUT @E5270;"AZ 0"
```

#### BC

The BC command clears the output data buffer that stores measurement data and query command response data. This command does not change the measurement settings.

---

#### NOTE

---

Multi command statement is not allowed for this command.

#### Syntax

BC

#### Example Statements

```
OUTPUT @E5270;"BC"
```

## BDM

The BDM command specifies the settling detection interval and the measurement mode; voltage or current, for the quasi-pulsed measurements.

### Syntax

BDM *interval*[,*mode*]

### Parameters

***interval*** : Settling detection interval. Numeric expression.

0: Short. Initial setting.

1: Long. For measurements of the devices that have the stray capacitance, or the measurements with the compliance less than 1  $\mu$ A

***mode*** : Measurement mode. Numeric expression.

0: Voltage measurement mode. Default setting.

1: Current measurement mode.

### Remarks

The following conditions must be true to perform the measurement successfully:

When *interval*=0:  $A > 1$  V/ms and  $B \leq 3$  s

When *interval*=1:  $A > 0.1$  V/ms and  $B \leq 12$  s

where A means the slew rate when source output sweep was started, and B means the settling detection time. See “Quasi-Pulsed Spot Measurements” on page 2-15. These values depend on the conditions of cabling and device characteristics. And you cannot specify the values directly.

### Example Statements

```
OUTPUT @E5270;"BDM 0,1"
```

## BDT

The BDT command specifies the hold time and delay time for the quasi-pulsed measurements.

### Syntax

BDT *hold*,*delay*

### Parameters

***hold*** : Hold time (in sec). Numeric expression.

0 to 655.35 s, 0.01 s resolution. Initial setting is 0.

***delay*** : Delay time (in sec). Numeric expression.

0 to 6.5535 s, 0.0001 s resolution. Initial setting is 0.

### Example Statements

```
OUTPUT @E5270;"BDT 0.1,1E-3"
```

## BDV

The BDV command specifies the quasi-pulsed voltage source and its parameters.

### Syntax

```
BDV chnum, range, start, stop [, Icomp]
```

### Parameters

***chnum*** : Source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***range*** : Ranging type for quasi-pulsed source. Integer expression. The output range will be set to the minimum range that covers both *start* and *stop* values. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-4 on page 4-12.

***start, stop*** : Start or stop voltage (in V). Numeric expression. See Table 4-6 on page 4-13.

0 to  $\pm 100$  or 0 to  $\pm 200$  for HPSMU

$|start - stop|$  must be 10 V or more.

***Icomp*** : Current compliance (in A). Numeric expression. See Table 4-6 on page 4-13.

If you do not set *Icomp*, the previous value is used.

The compliance polarity is automatically set to the same polarity as the *stop* value, regardless of the specified *Icomp* value. If *stop*=0, the polarity is positive.

### Remarks

The time forcing the *stop* value will be approximately 1.5 ms to 1.8 ms with the following settings:

- BDM, BDT command parameters: *interval*=0, *mode*=0, *delay*=0
- AV or AAD/AIT command parameters: initial setting

### Example Statements

```
OUTPUT @E5270;"BDV 1, 0, 0, 100, 0.01"
```



## BGI

The BGI command specifies the current monitor channel and its search parameters for the binary search measurement. This command ignores the RI command setting. This command setting is cleared by the BGV command.

### Syntax

BGI *chnum, mode, condition, range, target*

### Parameters

**chnum** : Search monitor channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

**mode**,

**condition** : Search mode (0: limit mode or 1: repeat mode) and search stop condition. The meaning of *condition* depends on the *mode* setting:

<i>mode</i>	<i>condition</i>
0	Limit value for the search target ( <i>target</i> ). The search stops when the monitor data reaches $target \pm condition$ . Numeric expression. Positive value. in A. Setting resolution: $range/20000$ . where <i>range</i> means the measurement range actually used for the measurement.
1	Repeat count. The search stops when the repeat count of the operation that changes the source output value is over the specified value. Numeric expression. 1 to 16.

**range** : Measurement ranging type. Integer expression. The measurement range will be set to the minimum range that covers the *target* value. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-3 on page 4-11.

**target** : Search target current (in A). Numeric expression.

0 to  $\pm 0.1$ , 0 to  $\pm 0.2$  for MPSMU of E5260 series, or 0 to  $\pm 1$  for HPSMU

### Example Statements

```
OUTPUT @E5270;"BGI 1,0,1E-8,14,1E-6"
```

### See Also

“BSM”

## Command Reference

### BGI

#### Remarks

In the limit search mode, if search cannot find the search target and the following two conditions are satisfied, the E5260/E5270 repeats the binary search between the last source value and the source *start* value.

- *target* is between the data at source *start* value and the last measurement data.
- *target* is between the data at source *stop* value and the data at:  
source value =  $| \textit{stop} - \textit{start} | / 2$ .

If the search cannot find the search target and the following two conditions are satisfied, the E5260/E5270 repeats the binary search between the last source value and the source *stop* value.

- *target* is between the data at source *stop* value and the last measurement data.
- *target* is between the data at source *start* value and the data at:  
source value =  $| \textit{stop} - \textit{start} | / 2$ .

## BGV

The BGV command specifies the voltage monitor channel and its search parameters for the binary search measurement. This command ignores the RV command setting. This command setting is cleared by the BGI command.

### Syntax

BGV *chnum, mode, condition, range, target*

### Parameters

***chnum*** : Search monitor channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***mode***,

***condition*** : Search mode (0: limit mode or 1: repeat mode) and search stop condition. The meaning of *condition* depends on the *mode* setting:

<i>mode</i>	<i>condition</i>
0	Limit value for the search target ( <i>target</i> ). The search stops when the monitor data reaches $target \pm condition$ . Numeric expression. Positive value. in V. Setting resolution: $range/20000$ . where <i>range</i> means the measurement range actually used for the measurement.
1	Repeat count. The search stops when the repeat count of the operation that changes the source output value is over the specified value. Numeric expression. 1 to 16.

***range*** : Measurement ranging type. Integer expression. The measurement range will be set to the minimum range that covers the *target* value. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-2 on page 4-10.

***target*** : Search target voltage (in V). Numeric expression.  
0 to  $\pm 100$  or 0 to  $\pm 200$  for HPSMU

### Example Statements

```
OUTPUT @E5270;"BGV 1,0,0.1,12,5"
```

### See Also

“BSM”

## Command Reference

### BGV

#### Remarks

In the limit search mode, if search cannot find the search target and the following two conditions are satisfied, the E5260/E5270 repeats the binary search between the last source value and the source *start* value.

- *target* is between the data at source *start* value and the last measurement data.
- *target* is between the data at source *stop* value and the data at:  
source value =  $| \textit{stop} - \textit{start} | / 2$ .

If the search cannot find the search target and the following two conditions are satisfied, the E5260/E5270 repeats the binary search between the last source value and the source *stop* value.

- *target* is between the data at source *stop* value and the last measurement data.
- *target* is between the data at source *start* value and the data at:  
source value =  $| \textit{stop} - \textit{start} | / 2$ .

## BSI

The BSI command specifies and sets the current search source for the binary search measurement. This command setting is cleared by the BSV command. After search stops, the search channel forces the value specified by the BSM command.

### Syntax

```
BSI chnum, range, start, stop [, Vcomp]
```

### Parameters

- chnum*** : Search source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.
- range*** : Output ranging type. Integer expression. The output range will be set to the minimum range that covers both *start* and *stop* values. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-5 on page 4-12.
- start, stop*** : Search start or stop current (in A). Numeric expression. See Table 4-7 on page 4-14. The *start* and *stop* must have different values.  
0 to  $\pm 0.1$ , 0 to  $\pm 0.2$  for MPSMU of E5260 series, or 0 to  $\pm 1$  for HPSMU
- Vcomp*** : Voltage compliance value (in V). Numeric expression. See Table 4-7 on page 4-14. If you do not specify *Vcomp*, the previous value is set.

### Example Statements

```
OUTPUT @E5270;"BSI 1, 0, 1E-12, 1E-6, 10"
```

## BSM

The BSM command specifies the search source control mode in the binary search measurement, and enables or disables the automatic abort function. The automatic abort function stops the output when one of the following conditions occurs:

- Compliance on the measurement channel
- Compliance on the non-measurement channel
- Overflow on the AD converter
- Oscillation on any channel

This command also sets the post search condition for the binary search sources. After the search measurement is normally completed, the binary search sources force the value specified by the *post* parameter.

If the search operation is stopped by the automatic abort function, the binary search sources force the start value after search.

### Syntax

BSM *mode*,*abort*[,*post*]

### Parameters

***mode*** : Source output control mode, 0 (normal mode) or 1 (cautious mode). If you do not enter this command, the normal mode is set. See Figure 4-1.

***abort*** : Automatic abort function. Integer expression.

1: Disables the function. Initial setting.

2: Enables the function.

***post*** : Source output value after search. Integer expression.

1: forces the start value. Default setting.

2: forces the stop value.

3: keeps the source output when the search target value is get.


If you do not specify *post*, the search source forces the start value.

### Example Statements

```
OUTPUT @E5270;"BSM 1, 2, 3"
```

Figure 4-1

Binary Search Source Output Control Mode

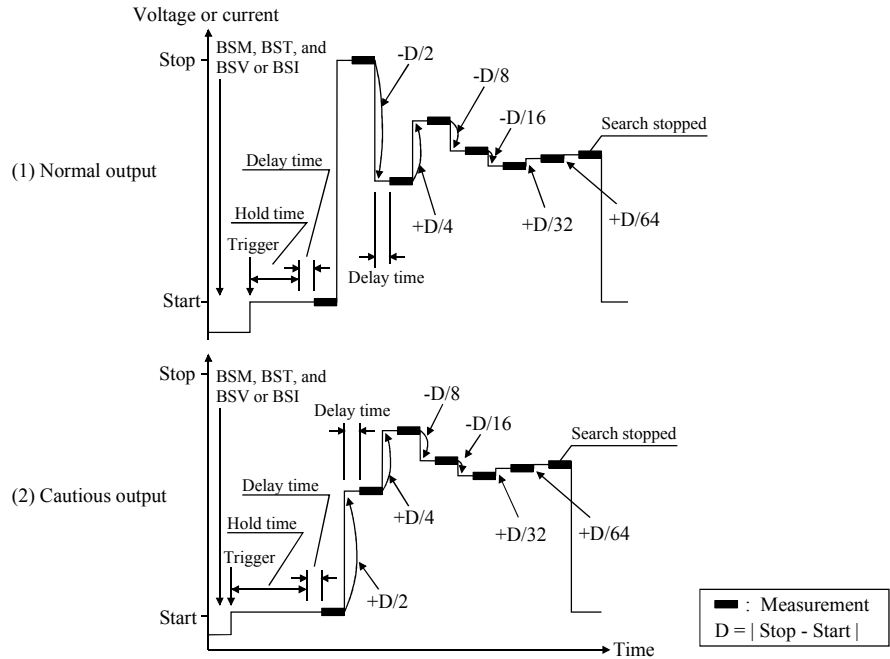

Normal mode

The operation of the normal mode is explained below:

1. The source channel forces the Start value, and the monitor channel executes a measurement.
2. The source channel forces the Stop value, and the monitor channel executes a measurement.

If the search target value is out of the range between the measured value at the Start value and the measured value at the Stop value, the search stops.

3. The source channel forces the  $\text{Stop} - D/2$  value (or  $\text{Stop} + D/2$  if  $\text{Start} > \text{Stop}$ ), and the monitor channel executes a measurement.

If the search stop condition is not satisfied, the measured data is used to decide the direction (+ or -) of the next output change. The value of the change is always half of the previous change.

4. Repeats the output change and measurement until the search stop condition is satisfied.

For information on the search stop condition, see “BGI” or “BGV”. If the output change value is less than the setting resolution, the search stops.

#### **Cautious mode**

The operation of the cautious mode is explained below:

1. The source channel forces the Start value, and the monitor channel executes a measurement.
2. The source channel forces the  $\text{Start}+D/2$  value (or  $\text{Start}-D/2$  if  $\text{Start}>\text{Stop}$ ), and the monitor channel executes a measurement.

If the search stop condition is not satisfied, the measured data is used to decide the direction (+ or -) of the next output change. The value of the change is always half of the previous change.

3. Repeats the output change and measurement until the search stop condition is satisfied.

For information on the search stop condition, see “BGI” or “BGV”. If the output change value is less than the setting resolution, the search stops.



## BSSI

The BSSI command specifies and sets the synchronous current source for the binary search measurement. The synchronous source output will be:

Synchronous source output =  $polarity \times BSI \text{ source output} + offset$

where BSI source output means the output set by the BSI command.

This command setting is cleared by the BSV/BSI command.

### Execution Conditions

The BSI command must be sent *before* sending this command.

### Syntax

BSSI *chnum*, *polarity*, *offset* [, *Vcomp*]

### Parameters

***chnum*** : Synchronous source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***polarity*** : Polarity of the BSSI output for the BSI output.  
 0: Negative. BSSI output =  $-BSI \text{ output} + offset$   
 1: Positive. BSSI output =  $BSI \text{ output} + offset$

***offset*** : Offset current (in A). Numeric expression.  
 0 to  $\pm 0.1$ , 0 to  $\pm 0.2$  for MPSMU of E5260 series, or 0 to  $\pm 1$  for HPSMU  
 Both primary and synchronous search sources will use the same output range. So check the output range set to the BSI command to determine the synchronous source outputs.

***Vcomp*** : Voltage compliance value (in V). Numeric expression. If you do not specify *Vcomp*, the previous value is set.

### Example Statements

```
OUTPUT @E5270;"BSSI 1,0,1E-6,10"
```

### See Also

Refer to Table 4-7 on page 4-14 for the source output value, output range, and the available compliance values.

## BSSV

The BSSV command specifies the synchronous voltage source for the binary search measurement. The synchronous source output will be:

Synchronous source output =  $polarity \times BSV \text{ source output} + offset$

where BSV source output means the output set by the BSV command.

This command setting is cleared by the BSI/BSV command.

The BSV command must be sent *before* sending this command.

### Execution Conditions

### Syntax

`BSSV chnum, polarity, offset[, Icomp]`

### Parameters

**chnum** : Synchronous source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

**polarity** : Polarity of the BSSV output for the BSV output.

0: Negative. BSSV output =  $-BSV \text{ output} + offset$

1: Positive. BSSV output =  $BSV \text{ output} + offset$

**offset** : Offset voltage (in V). Numeric expression.

0 to  $\pm 100$  or 0 to  $\pm 200$  for HPSMU

Both primary and synchronous search sources will use the same output range. So check the output range set to the BSV command to determine the synchronous source outputs.

**Icomp** : Current compliance value (in A). Numeric expression. If you do not specify *Icomp*, the previous value is set. Zero amps (0 A) is not a valid value for the *Icomp* parameter.

### Example Statements

```
OUTPUT @E5270;"BSSV 1,0,5,1E-6"
```

### See Also

Refer to Table 4-6 on page 4-13 for the source output value, output range, and the available compliance values.

## BST

The BST command sets the hold time and delay time for the binary search measurement.

If you do not enter this command, all parameters are set to 0.

### Syntax

BST *hold, delay*

### Parameters

***hold*** : Hold time (in seconds) that is the wait time after starting the search measurement and before starting the delay time for the first search point. Numeric expression.

0 to 655.35 sec. 0.01 sec resolution.

***delay*** : Delay time (in seconds) that is the wait time after starting to force a step output value and before starting a step measurement. Numeric expression.

0 to 65.535 sec. 0.0001 sec resolution.

### Example Statements

```
OUTPUT @E5270;"BST 5,0.1"
```

## BSV

The BSV command specifies and sets the voltage search source for the binary search measurement. This command setting is cleared by the BSI command. After search stops, the search channel forces the value specified by the BSM command.

### Syntax

```
BSV chnum, range, start, stop [, Icomp]
```

### Parameters

- chnum*** : Search source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.
- range*** : Output ranging type. Integer expression. The output range will be set to the minimum range that covers both *start* and *stop* values. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-4 on page 4-12.
- start*, *stop*** : Search start or stop voltage (in V). Numeric expression. See Table 4-6 on page 4-13. The *start* and *stop* parameters must have different values.  
0 to  $\pm 100$  or 0 to  $\pm 200$  for HPSMU
- Icomp*** : Current compliance value (in A). Numeric expression. See Table 4-6 on page 4-13. If you do not specify *Icomp*, the previous value is set. Zero amps (0 A) is not allowed for *Icomp*.

### Example Statements

```
OUTPUT @E5270;"BSV 1,0,0,20,1E-6"
```

## BSVM

The BSVM command selects the data output mode for the binary search measurement.

### Syntax

BSVM *mode*

### Parameters

***mode*** : Data output mode. Integer expression.  
0 : Returns *Data\_search* only (initial setting).  
1 : Returns *Data\_search* and *Data\_sense*.

where

*Data\_search* is the value forced by the search output channel set by the BSV or BSI command.

*Data\_sense* is the value measured by the search monitor channel set by the BGI or BGV command.

For data output format, refer to “Data Output Format” on page 1-21.

### Example Statements

```
OUTPUT @E5270;"BSVM 1"
```

## Command Reference

### CA

## CA

The CA command performs the self-calibration.

Modules that fail the self-calibration are disabled, and can only be enabled by the RCV command.

After the CA command, enter the \*OPC? command to confirm that the command execution is completed.

#### Execution Conditions

No channel may be in the HIGH VOLTAGE state (forcing more than  $\pm 42$  V, or voltage compliance set to more than  $\pm 42$  V).

To perform the self-calibration correctly, the measurement terminals should be opened.

#### Syntax

CA [*slotnum*]

#### Parameters

**slotnum** : Slot number that specifies the module to perform the self-calibration. Integer expression. 1 to 8.

For HPSMU that uses two slots, set the greater slot number. For example, if it is installed in slot 3 and 4, *slotnum* must be 4.

If you do not specify *slotnum*, this command performs the self-calibration for the mainframe and all modules.

If *slotnum* specifies the slot that installs no module, this command causes an error.

#### Example Statements

```
OUTPUT @E5270;"CA"  
OUTPUT @E5270;"*OPC?"  
ENTER @E5270;A
```

## \*CAL?

The CAL? query command performs the self-calibration, and returns the results in ASCII format. Modules that fail the self-calibration are disabled, and can only be enabled by the RCV command.

After the \*CAL? command, read the results soon.

### Execution Conditions

No module may be in the HIGH VOLTAGE state (forcing more than  $\pm 42$  V, or voltage compliance set to more than  $\pm 42$  V).

To perform the self-calibration correctly, the measurement terminals should be opened.

### Syntax

\*CAL? [*slotnum*]

### Parameters

**slotnum** : Specifies the module to perform the self-calibration. Integer expression. 0 to 9.

0: Mainframe and all modules. Default setting.

1 to 8: Module installed in the slot specified by *slotnum*.

9: Mainframe.

For HPSMU that uses two slots, set the greater slot number. For example, if it is installed in slot 3 and 4, *slotnum* must be 4.

If *slotnum* specifies the slot that installs no module, this command causes an error.

### Query Response

*results*<CR/LF^EOI>

*results* returns the sum of the following values corresponding to the failures.

<i>results</i>	Description	<i>results</i>	Description
0	Passed. No failure detected.	16	Slot 5 module failed.
1	Slot 1 module failed.	32	Slot 6 module failed.
2	Slot 2 module failed.	64	Slot 7 module failed.
4	Slot 3 module failed.	128	Slot 8 module failed.
8	Slot 4 module failed.	256	Mainframe failed.

### Example Statements

```
OUTPUT @E5270;"*CAL?"
ENTER @E5270;A
```

## Command Reference

### CL

## CL

The CL command disables the specified channels by setting the output switches to OFF. Then the channel output is opened, and the power consumption is 0 W.

### Execution Conditions

No channel may be in the HIGH VOLTAGE state (forcing more than  $\pm 42$  V, or voltage compliance set to more than  $\pm 42$  V). However, if you do not specify *chnum* for CL command, there are no restrictions on the execution conditions.

### Syntax

```
CL [ chnum [, chnum . . . [, chnum] . . . ] ]
```

A maximum of eight channels can be set.

### Parameters

***chnum*** : Channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

If you do not specify *chnum*, this command sets all channels to 0 V in order from higher voltage range (output or measurement range) to lower voltage range.

If you specify multiple *chnums*, the E5260/E5270 sets the channels to 0 V in the specified order.

### Remarks

The CL command sets the specified channels to the following conditions:

Item	Setting	Item	Setting
Output Switch	OFF	I Compliance	100 $\mu$ A
Source Mode	Voltage	I Range	100 $\mu$ A
Output Voltage	0 V	Filter	OFF
V Range	20 V	Series Resistor	Not changed

### Example Statements

```
OUTPUT @E5270;"CL"
```

```
OUTPUT @E5270;"CL 1, 2, 3, 5"
```



## CM

The CM command sets the auto-calibration function to ON or OFF. If the following two conditions are satisfied, the E5260/E5270 automatically calibrates all channels every 30 minutes.

- Auto-calibration is ON
- Output switches of all channels have been OFF for 30 minutes

**Syntax**

CM *mode*

**Parameters**

***mode*** : Auto-calibration ON or OFF. Integer expression.

0: OFF

1: ON (initial setting)

**Remarks**

To perform the calibration correctly, the measurement terminals should be opened before starting the calibration.

If the auto-calibration is enabled, do not forget to open the measurement terminals after measurements.

**Example Statements**

```
OUTPUT @E5270;"CM 0"
```

```
OUTPUT @E5270;"CM 1"
```

## CMM

The CMM command sets the SMU measurement operation mode. This command is not available for the high speed spot measurement.

### Syntax

CMM *chnum, mode*

### Parameters

***chnum*** : Channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***mode*** : SMU measurement operation mode. Integer expression.

- 0: Compliance side measurement (initial setting).
- 1: SMU always performs current measurement.
- 2: SMU always performs voltage measurement.
- 3: Force side measurement.

If *mode*=0, SMU measures current when it forces voltage, or measures voltage when it forces current.

If *mode*=3, SMU measures current when it forces current, or measures voltage when it forces voltage.

The *mode* setting is kept until the *mode* is changed by this command. If you want to return it to the initial setting, enter the CMM command with *mode*=0.

### Example Statements

```
OUTPUT @E5270;"CMM 1,1"
```

## CN

This command enables the specified channels by setting the output switches to ON. Then the power consumption is 0 W.

---

### WARNING

**SETTING THE OUTPUT SWITCH TO "ON" ENABLES THE CHANNEL TO FORCE DANGEROUS VOLTAGES.**

**WHEN THE CHANNEL IS NOT IN USE, SET THE OUTPUT SWITCH TO "OFF" WHENEVER POSSIBLE.**

---

### Execution Conditions

No channel may be in the HIGH VOLTAGE state (forcing more than  $\pm 42$  V, or voltage compliance set to more than  $\pm 42$  V).

### Syntax

CN [*chnum*[, *chnum*... [, *chnum*]... ]]

A maximum of eight channels can be set.

### Parameters

***chnum*** : Channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

If you do not specify *chnum*, the E5260/E5270 sets all output switches to ON, in the order from lower to higher slot number.

If you specify multiple *chnums*, the E5260/E5270 sets the output switches to ON, in the specified order.

### Remarks

The CN command sets the specified channels to the following conditions:

Item	Setting	Item	Setting
Output Switch	ON	I Compliance	100 $\mu$ A
Source Mode	Voltage	I Range	100 $\mu$ A
Output Voltage	0 V	Filter	Not changed
V Range	20 V	Series Resistor	Not changed

If the output switch of the specified channel is already set to ON, no action is performed by the CN command.

### Example Statements

```
OUTPUT @E5270;"CN"
```

```
OUTPUT @E5270;"CN 1,2,3,5"
```

**DFM**

The DFM command selects the data display format on the front panel LCD.

The \*RST command or the device clear selects scientific.

**Syntax**

DFM *format*

**Parameters**

*format* : Data display format. Integer expression.

<i>format</i>	Description
0	Engineering. +/- sign, 6 digits numeric value with arithmetic point, and unit. Example: +123.456mA
1	Scientific. +/- sign, 4 digits numeric value with arithmetic point, exponential part (E, +/- sign, and 1 or 2 digits numeric value), and unit. Example: +1.234E-1A

**Example Statements**

```
OUTPUT @E5270;"DFM 0"
```

## DI

The DI command forces current from the specified channel.

### Execution Conditions

The CN command has been executed for the specified channel.

If the voltage compliance is greater than  $\pm 42$  V, the interlock circuit must be shorted.

### Syntax

```
DI chnum, irange, current [, Vcomp [, comp_polarity [, vrangle ] ] ]
```

### Parameters

***chnum*** : Source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***irange*** : Ranging type for current output. Integer expression. The output range will be set to the minimum range that covers *current* value. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-5 on page 4-12.

***current*** : Output current value (in A). Numeric expression. See Table 4-7 on page 4-14.

0 to  $\pm 0.1$ , 0 to  $\pm 0.2$  for MPSMU of E5260 series, or 0 to  $\pm 1$  for HPSMU

***Vcomp*** : Voltage compliance value (in V). Numeric expression. See Table 4-7 on page 4-14. If you do not specify this parameter, *Vcomp* is set to the previous setting.

***comp\_polarity*** : Polarity of voltage compliance. Integer expression.

**0**: Auto mode (default setting). The compliance polarity is automatically set to the same polarity as *current*, regardless of the specified *Vcomp*. If *current*=0 A, the polarity is set to positive.

**1**: Manual mode. Uses the polarity of *Vcomp* you specified.

***vrangle*** : Voltage compliance ranging type. Integer expression. The compliance range will be set to the minimum range that covers *Vcomp* value. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-4 on page 4-12.

### Example Statements

```
OUTPUT @E5270;"DI 1,0,1E-6"
```

```
OUTPUT @E5270;"DI 3,14,5E-7,20,0,0"
```

## Command Reference

### DIAG?

## DIAG?

The DIAG? command starts the diagnostics, and returns the results in ASCII format.

Before starting the diagnostics, refer to Remarks below.

After the DIAG? command, read the results soon.

#### Syntax

```
DIAG? item[,pause]
```

#### Parameters

*item* : Diagnostics item. Integer expression. 1 to 5.

<i>item</i>	Description	<i>pause</i>
1	Trigger In/Out diagnostics.	effective
2	Front panel key diagnostics.	n.a
3	High voltage LED diagnostics.	n.a
4	Digital I/O diagnostics.	effective
5	Beeper diagnostics.	n.a

*pause* : Pauses before starting diagnostics or not. Integer expression. 0 or 1.  
This parameter is effective for *item*=1 and 4.

0: Agilent E5260/E5270 starts diagnostics immediately.

1: Agilent E5260/E5270 starts diagnostics when the **Enter** key is pressed.

If you do not specify *pause*, 1 is set.

For *pause*=1, you can abort execution of the diagnostics by pressing the **Exit** key while a message is being displayed on the LCD.

#### Query Response

```
result <CR/LF^EOI>
```

0: Passed.

1: Failed.

2: Aborted.

#### Example Statements

```
OUTPUT @E5270;"DIAG? 1,1"  
ENTER @E5270;A
```

**Remarks**

- Before starting the trigger in/out diagnostics, connect a BNC cable between the Ext Trig In and Out connectors.
- After starting the front panel key diagnostics, press any key and confirm that the key name is displayed. Repeat this for all keys.  
If all response was good, press the **Enter** key twice to stop. *result* returns 0.  
If any response was bad, press the **Exit** key twice to stop. *result* returns 1.
- After starting the high voltage LED diagnostics:  
If the LED blinks, press the **Enter** key to stop. *result* returns 0.  
If the LED does not blink, press the **Exit** key to stop. *result* returns 1.
- Before starting the digital I/O diagnostics, disconnect any cable from the digital I/O port.
- After starting the beeper diagnostics:  
If you listen 2 types of beep sounds every 1 second, press the **Enter** key to stop. *result* returns 0.  
If you do not listen it, press the **Exit** key to stop. *result* returns 1.

**DO**

The DO command executes the E5260/E5270 internal memory programs (up to 8 programs) in the order specified.

**Execution Conditions**

The specified programs have been stored by using the ST and END commands.

**Syntax**

DO *pnum*[, *pnum*[, *pnum*[, *pnum*[, *pnum*[, *pnum*[, *pnum*[, *pnum*]]]]]]]

**Parameters**

*pnum* : Internal memory program number. Numeric expression. 1 to 2000.

**Example Statements**

```
OUTPUT @E5270;"DO 1,2,3,4,5,6,7,8"
OUTPUT @E5270;"DO 98,99"
```

## Command Reference

### DV

## DV

The DV command forces output voltage from the specified channel.

### Execution Conditions

The CN command has been executed for the specified channel.

If the output voltage is greater than  $\pm 42$  V, the interlock circuit must be shorted.

### Syntax

```
DV chnum, vrange, voltage [, Icomp [, comp_polarity [, irange ]]
```

### Parameters

***chnum*** : Source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***vrange*** : Ranging type for voltage output. Integer expression. The output range will be set to the minimum range that covers *voltage* value. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-4 on page 4-12.

***voltage*** : Output voltage value (in V). Numeric expression. See Table 4-6 on page 4-13.

0 to  $\pm 100$  or 0 to  $\pm 200$  (for HPSMU)

***Icomp*** : Current compliance value (in A). Numeric expression. See Table 4-6 on page 4-13. If you do not set *Icomp*, the previous value is used. 0 A is not allowed for *Icomp*.

***comp\_polarity*** : Polarity of current compliance. Integer expression.

**0**: Auto mode (default setting). The compliance polarity is automatically set to the same polarity as *voltage*, regardless of the specified *Icomp*. If *voltage*=0 V, the polarity is set to positive.

**1**: Manual mode. Uses the polarity of *Icomp* you specified.

***irange*** : Current compliance ranging type. Integer expression. The compliance range will be set to the minimum range that covers *Icomp* value. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-5 on page 4-12.

### Example Statements

```
OUTPUT @E5270;"DV 1,0,20,1E-6,0,15"
```

```
OUTPUT @E5270;"DV 2,12,10"
```



## DZ

The DZ command stores the settings (V/I output values, V/I output ranges, V/I compliance values, and series resistor setting) of the specified channels, and sets the channels to 0 V. The settings can be recovered by using the RZ command. The stored settings are cleared by using a device clear (HP BASIC CLEAR) command, \*RST, RZ, CL, CA, or \*TST?.

### Execution Conditions

The CN command has been executed for the specified channels.

### Syntax

DZ [*chnum*[, *chnum*...[, *chnum*]...]

A maximum of eight channels can be set.

### Parameters

***chnum*** : Channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

If you do not specify *chnum*, the DZ command applies 0 V to all channels where the output switch is set to ON, in order from higher (output or measurement range) to lower voltage range.

If you specify multiple *chnums*, the E5260/E5270 sets the channels to 0 V in the specified order.

### Remarks

The DZ command sets the specified channels to the following conditions:

Item	Setting	Item	Setting
Output Switch	ON	I Range	See next table
Source Mode	Voltage	Compliance	See next table
Output Voltage	0 V	Filter	Not changed
V Range	Not changed	Series Resistor	Not changed

Previous range <sup>a</sup>	I Range	I Compliance
1 nA to 100 $\mu$ A	same as previous range	range value
over 100 $\mu$ A	100 $\mu$ A	100 $\mu$ A

a. Range value that was set before the DZ command.

### Example Statements

```
OUTPUT @E5270;"DZ 1,2,3"
```

## EMG?

The EMG? query command returns error message corresponding to the specified error code.

**Syntax**                   EMG? *errcode*

**Parameters**            *errcode* : Error code returned by the ERR? command. Numeric expression.

**Query Response**        *Error message* <CR/LF^EOI>  
For the error codes and error messages, refer to Chapter 5, “Error Messages.”

**Example Statements**     OUTPUT @E5270;"EMG? 100"  
ENTER @E5270;A\$

## END

The END command is used with the ST command to store a program in the internal program memory. See “ST” on page 4-108.

**Syntax**                   END

**Example Statements**     OUTPUT @E5270;"ST1;CN1;DV1,0,5,1E-4;TI1,0;CL1"  
OUTPUT @E5270;"END"

## ERC

The ERC command changes the output status of the digital I/O port. This command does not change the status of the trigger ports and the input ports set by the ERM command.

The \*RST command or the device clear sets the digital I/O port (total 16 paths) to the output port, and sets the port output level to TTL high.

### Syntax

```
ERC mode, value[, rule]
```

### Parameters

***mode*** : Control mode. Integer expression. Set *mode* to 2.

2: Controls the digital I/O port.

If you set 1 that is effective for the Agilent 4142B, an error occurs.

***value*** : Decimal value of the output status bit pattern. Integer expression. 0 to 65535. The bit pattern must comply with the following rule:

Bit value 0: TTL high level (approx. 2.4 V)

Bit value 1: TTL low level (approx. 0.8 V)

***rule*** : Place holder to keep the same syntax as the ERC command of the Agilent 4142B. Input value is ignored.

### Example Statements

If you want to set TTL low level for the output ports of the digital I/O port bit 0 to 7, enter the following command.

```
OUTPUT @E5270;"ERC 2,255"
```

where the decimal value 255 means binary bit pattern 0000000011111111. This command does not change the status of the trigger ports and the input ports.

### See Also

“ERM” and “ERS?”

## ERM

The ERM command changes the input/output assignments of the digital I/O port (total 16 paths). This command does not change the trigger port assignments and settings.

The \*RST command or the device clear sets the digital I/O port to the output port, and sets the port output level to TTL high.

### Syntax

`ERM iport`

### Parameters

***iport*** : Decimal value of the port setting. Integer expression. 0 to 65535.

The setting of each port must be designated by 0 or 1 that has the following meaning:

0: Output port

1: Input port

### Example Statements

If you want to use the non-trigger ports of the digital I/O ports 0 to 7 as the input port, enter the following statement.

```
OUTPUT @E5270;"ERM 255"
```

where the decimal value 255 means binary bit pattern 0000000111111111.

### Remarks

The ERM command sets the port level to TTL high for all ports where the port assignment is changed from output to input or from input to output.

The ERM command does not change the port assignment of the trigger ports.

### See Also

“ERS?”

## ERR?

The ERR? query command returns error codes from the E5260/E5270 error register to the output data buffer (query buffer).

This command clears the error register.

### Syntax

ERR? [*mode*]

### Parameters

***mode*** : Error code output mode. Integer expression. 0 (default setting) or 1.  
 0: Returns up to four error codes in order from their occurrence.  
 1: Returns one error code.

If you do not specify *mode*, the ERR? command returns four error codes (same as *mode*=0).

### Query Response

*Error Code, Error Code, Error Code, Error Code* <CR/LF^EOI>

or

*Error Code* <CR/LF^EOI>

For the error codes, refer to Chapter 5, “Error Messages.” If no error occurred, *Error Code* is 0.

### Example Statements

```
OUTPUT @E5270;"ERR?"
ENTER @E5270;A$
```

```
OUTPUT @E5270;"ERR? 1"
ENTER @E5270;A
```

## ERS?

The ERS? command returns the status of the digital I/O port (16 paths).

### Syntax

ERS?

### Query Response

*pattern* <CR/LF^EOI>

*pattern* returns the decimal value of the port status.

The status of each port is designated by 0 or 1 that has the following meaning:

0: TTL high level (approx. 2.4 V)

1: TTL low level (approx. 0.8 V)

### Example Statements

```
OUTPUT @E5270;"ERS?"  
ENTER @E5270;A  
PRINT "Port Status=";A
```

For example, 255 (0000000011111111) is returned when the port 0 to 7 have been set to the TTL low level and the port 8 to 15 have been set to the TTL high level.

### See Also

“ERM”

## FL

This command sets the connection mode of a filter for each channel.

A filter is mounted on each module. It assures clean source output with no spikes or overshooting.

### Syntax

```
FL mode [, chnum [, chnum . . . [, chnum . . . ]]
```

A maximum of eight channels can be set.

### Parameters

***mode*** : Status of the filter. Integer expression.

0: Disconnect (initial setting).

1: Connect.

***chnum*** : Channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

If you do not specify *chnum*, the FL command sets the same *mode* for all channels.

### Example Statements

```
OUTPUT @E5270;"FL"
```

```
OUTPUT @E5270;"FL 0,1,3,5"
```

## FMT

The FMT command clears the E5260/E5270 output data buffer, and specifies the data output format and the data terminator. For details about data output format, see “Data Output Format” on page 1-21.

Query command output data is always stored in the query buffer in ASCII format, regardless of this command.

If you do not enter this command, the data output format is same as the data format by the FMT1,0 command.

---

**NOTE**

---

Multi command statement is not allowed for this command.

**Syntax**

FMT *format* [, *mode*]

**Parameters**

*format* : Data output format. Integer expression. 1 to 5, 11, 12, 15, 21, 22, or 25. See Table 4-11.

*mode* : Source data output mode. Integer expression. 0 to 8. See Table 4-10. You can select the source data returned with the measurement data. If you do not specify this parameter, no source data is returned.

**Example Statements**

```
OUTPUT @E5270;"FMT 1"
OUTPUT @E5270;"FMT 2,1"
```

**Table 4-10 FMT mode parameter**

<i>mode</i>	Source data returned with measurement data
0	None (default setting). Only the measurement data is returned.
1	Data of the primary sweep source set by the WI/WV/PWI/PWV command.
2	Data of the synchronous sweep source set by the WSI/WSV command.
2 to 8	For the multi channel sweep measurement: Data of the synchronous sweep source set by the WNX command. The <i>mode</i> value must be the sweep source number (2 to 8) you want to get data. For the sweep source number, refer to “WNX” on page 4-134.



**Table 4-11 FMT format parameter**

<i>format</i>	<b>Data format</b>	<b>Terminator</b>
1 <sup>a</sup>	ASCII (12 digits data with header)	<CR/LF^EOI>
2 <sup>a</sup>	ASCII (12 digits data without header)	<CR/LF^EOI>
3 <sup>a</sup>	binary	<CR/LF^EOI>
4 <sup>a</sup>	binary	<^EOI>
5 <sup>a</sup>	ASCII (12 digits data with header)	,
11	ASCII (13 digits data with header)	<CR/LF^EOI>
12	ASCII (13 digits data without header) <sup>b</sup>	<CR/LF^EOI>
15	ASCII (13 digits data with header)	,
21	ASCII (13 digits data with header) <sup>b</sup>	<CR/LF^EOI>
22	ASCII (13 digits data without header) <sup>b</sup>	<CR/LF^EOI>
25	ASCII (13 digits data with header) <sup>b</sup>	,

- a. Compatible with the Agilent 4142B data output format.
- b. Compatible with the Agilent 4155/4156 FLEX mode ASCII data.

12 digits data will be *sn.nnnnnEsnn*, *snn.nnnnEsnn*, or *snnn.nnnEsnn*.

13 digits data will be *sn.nnnnnnEsnn*, *snn.nnnnnEsnn*, or *snnn.nnnnEsnn*.

where, *s* is + or -, *E* is exponent symbol, and *n* means one digit number.

**NOTE**

For binary data output format, the time stamp function is not available. Refer to “Data Output Format” on page 1-21.

## Command Reference

### \*IDN?

#### \*IDN?

The \*IDN? query command returns the instrument model number and the ROM version number, then stores the results in the output data buffer (query buffer).

#### Syntax

\*IDN?

#### Query Response

AGILENT, *model*, 0, *ROM rev* <CR/LF^EOI>

Response	Explanation
<i>model</i>	E5260A, E5262A, E5263A, or E5270B
<i>ROM rev</i>	ROM version number

#### Example Statements

```
OUTPUT @E5270;"*IDN?"  
ENTER @E5270;A$
```

#### Example Response

```
AGILENT, E5270B, 0, B.01.00
```

## IN

The IN command sets the specified channel to 0 V with an output range change.

### Execution Conditions

The CN command has been executed for the specified channel.

### Syntax

```
IN [ chnum [, chnum . . . [, chnum] . . . ] ]
```

A maximum of eight channels can be set.

### Parameters

***chnum*** : Channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

If you do not specify *chnum*, this command sets all channels to 0 V in order from higher voltage range (output or measurement range) to lower voltage range.

If you specify multiple *chnums*, the E5260/E5270 sets the channels to 0 V in the specified order.

### Remarks

The IN command sets the specified channels to the following conditions, which are the same as the conditions after executing the CN command.

Item	SMU	GNDU
Output Switch	ON	ON
Source Mode	V	
Output Voltage	0 V	0 V
V Range	20 V	
I Compliance	100 $\mu$ A	
I Range	100 $\mu$ A	
Filter	Not changed	
Power Consumption	0 W	

### Example Statements

```
OUTPUT @E5270;"IN"  
OUTPUT @E5270;"IN 1,2,3,5,6"
```

## KLC

The KLC command locks or unlocks the front panel keys.

The \*RST command or the device clear unlocks the front panel keys.

### Syntax

`KLC mode`

### Parameters

***mode*** : Front panel key lock or unlock. Integer expression.

0: Unlock.

1: Lock.

### Example Statements

```
OUTPUT @E5270;"KLC 1"
```

## LGI

The LGI command specifies the current monitor channel and its search parameters for the linear search measurement.

This command ignores the RI command setting.

This command setting is cleared by the LGV command.

### Syntax

```
LGI chnum, mode, range, target
```

### Parameters

- chnum*** : Search monitor channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.
- mode*** : Search mode. Integer expression.
- 0 : If the measured value  $\leq$  *target*, it is the search result data.
  - 1 : If the measured value  $\geq$  *target*, it is the search result data.
- range*** : Measurement ranging type. Integer expression. The measurement range will be set to the minimum range that covers the *target* value. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-3 on page 4-11.
- target*** : Search target current (in A). Numeric expression.
- 0 to  $\pm 0.1$ , 0 to  $\pm 0.2$  for MPSMU of E5260 series, or 0 to  $\pm 1$  for HPSMU

### Example Statements

```
OUTPUT @E5270; "LGI 0, 1, 14, 1E-6"
```

## LGV

The LGV command specifies the voltage monitor channel and its search parameters for the linear search measurement.

This command ignores the RV command setting.

This command setting is cleared by the LGI command.

### Syntax

LGV *chnum, mode, range, target*

### Parameters

***chnum*** : Search monitor channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***mode*** : Search mode. Integer expression.

0 : If the measured value  $\leq$  *target*, it is the search result data.

1 : If the measured value  $\geq$  *target*, it is the search result data.

***range*** : Measurement ranging type. Integer expression. The measurement range will be set to the minimum range that covers the *target* value. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-2 on page 4-10.

***target*** : Search target voltage (in V). Numeric expression.

0 to  $\pm 100$  or 0 to  $\pm 200$  for HPSMU

### Example Statements

```
OUTPUT @E5270;"LGV 1,2,12,3"
```

## LOP?

The LOP? query command returns the operation status of all modules and stores the results in the output data buffer (query buffer).

### Syntax

LOP?

### Query Response

LOP *slot1 status, slot2 status.., slot8 status* <CR/LF^EOI>

where *slotN status* (N: 1 to 8) means the following:

Response	Description
<i>slot1 status</i>	Status number indicates the operation status of slot 1 module.
<i>slot2 status</i>	Status number indicates the operation status of slot 2 module.
<i>slot3 status</i>	Status number indicates the operation status of slot 3 module.
<i>slot4 status</i>	Status number indicates the operation status of slot 4 module.
<i>slot5 status</i>	Status number indicates the operation status of slot 5 module.
<i>slot6 status</i>	Status number indicates the operation status of slot 6 module.
<i>slot7 status</i>	Status number indicates the operation status of slot 7 module.
<i>slot8 status</i>	Status number indicates the operation status of slot 8 module.

Status numbers are two-digit decimal numbers. Available numbers and meanings are as follows:

Status Number	Description
00	No module is installed, or the output switch is OFF.
01	SMU forces voltage, and does not reach current compliance.
02	SMU forces positive current, and does not reach voltage compliance.
03	SMU forces negative current, and does not reach voltage compliance.
10	Not applicable.
11	SMU reaches voltage compliance.

## Command Reference

### LOP?

Status Number	Description
12	SMU reaches positive current compliance.
13	SMU reaches negative current compliance.
20	SMU is oscillating.
30	Not applicable.

The HPSMU occupies two slots. The status number is returned for the greater slot number, and 00 is returned for the lower slot number.

#### Example Statements

```
OUTPUT @E5270;"LOP?"  
ENTER @E5270;A$
```



## \*LRN?

The \*LRN? (learn) query command returns information about the channel settings or the E5260/E5270 command parameter settings, and stores the results in the E5260/E5270 output data buffer (query buffer).

### Syntax

```
*LRN? type
```

### Example Statements

```
DIM A$ [200]
OUTPUT @E5270;"*LRN? 1"
ENTER @E5270;A$
```

### Parameters and Query Response

***type*** : This parameter selects the type of query response. Available values are 0 to 60, but some numbers are not used. See below. Integer expression.

A description and the query response of each *type* is described below.

**0** : Returns the output switch ON/OFF status:

```
CN[chnum [, chnum . . . [, chnum] . . . ]]<CR/LF^EOI>
```

where *chnum* is the channel number for the channel whose output switch is set to ON.

If no output switches are ON, the query response is:

```
CL<CR/LF^EOI>
```

**1 to 8** : Returns the SMU source status.

The *type* parameter corresponds to slot number where the module is installed.

If the output switch is ON, the query response is:

```
DV chnum,range,voltage [, lcomp [, comp polarity [, irange]]]
<CR/LF^EOI>
```

or

```
DI chnum,range,current [, Vcomp [, comp polarity [, vrangle]]]
<CR/LF^EOI>
```

where *range* is the present setting of the output range.

If the output switch is OFF, the query response is:

```
CL chnum <CR/LF^EOI>
```

**9 to 29** : Not used.

## Command Reference

### \*LRN?

- 30 :** Returns the filter ON/OFF status:  
FL0 [*off ch* [, *off ch* . . . [, *off ch* ] . . . ] ;  
FL1 [*on ch* [, *on ch* . . . [, *on ch* ] . . . ] <CR/LF^EOI>  
If all modules are Filter OFF, the query response is:  
FL0<CR/LF^EOI>  
If all modules are Filter ON, the query response is:  
FL1<CR/LF^EOI>
- 31 :** Returns the parameter values of the TM, AV, CM, FMT, and MM commands:  
TM *trigger mode*; AV *number* [, *mode*]; CM *auto calibration mode* ;  
FMT *output data format*, *output data mode*  
[; MM *measurement mode* [, *chnum* [, *chnum* . . . [, *chnum* ] . . . ]]]  
<CR/LF^EOI>
- 32 :** Returns the measurement ranging status:  
RI *chnum*, *Irange*; RV *chnum*, *Vrange*  
[; RI *chnum*, *Irange*; RV *chnum*, *Vrange*]  
:  
[; RI *chnum*, *Irange*; RV *chnum*, *Vrange*] <CR/LF^EOI>
- 33 :** Returns the staircase sweep measurement settings:  
WM *automatic sweep abort function*, *output after sweep* ;  
WT *hold time*, *delay time* [, *step delay time* [, *S trig delay* [, *M trig delay* ]]]  
[; WV *chnum*, *mode*, *range*, *start*, *stop*, *nop* [, *Icomp* [, *pcomp* ]]]] or  
[; WI *chnum*, *mode*, *range*, *start*, *stop*, *nop* [, *Vcomp* [, *pcomp* ]]]] or  
[; WSV *chnum*, *range*, *start*, *stop* [, *Icomp* [, *pcomp* ]]]] or  
[; WSI *chnum*, *range*, *start*, *stop* [, *Vcomp* [, *pcomp* ]]]] <CR/LF^EOI>
- 34 :** Returns the pulsed source settings:  
PT *hold time*. *pulse width* [, *pulse period* [, *trig delay* ]]  
[; PV *chnum*, *output range*, *base voltage*, *pulse voltage* [, *Icomp* ]] or  
[; PI *chnum*, *output range*, *base current*, *pulse current* [, *Vcomp* ]]  
[; PWV *chnum*, *mode*, *range*, *base*, *start*, *stop*, *nop* [, *Icomp* ]]]] or  
[; PWI *chnum*, *mode*, *range*, *base*, *start*, *stop*, *nop* [, *Vcomp* ]]]] <CR/LF^EOI>
- 35 to 36 :** Not used.

- 37 :** Returns the quasi-pulsed source settings:  
 BDM *detection interval* [, *mode*];  
 BDT *hold time*, *delay time*  
 [;BDV *chnum*, *range*, *start*, *stop* [, *Icomp*]] <CR/LF^EOI>
- 38 :** Returns the digital I/O port information:  
 ERM *input pin*; ERC2, *value* <CR/LF^EOI>
- 39 :** Not used.
- 40 :** Returns channel mapping information:  
 If multiple channel numbers are translated to another numbers.  
 ACH *actual*, *program*  
 [;ACH *actual*, *program*]  
 :  
 [;ACH *actual*, *program*] <CR/LF^EOI>  
 If no channel number is defined by the ACH command.  
 ACH <CR/LF^EOI>
- 41 to 45 :** Not used.
- 46 :** Returns SMU measurement operation mode settings:  
 CMM *chnum*, *mode*  
 [;CMM *chnum*, *mode*]  
 :  
 [;CMM *chnum*, *mode*] <CR/LF^EOI>
- 47 to 49 :** Not used.
- 50 :** Returns the linear search measurement settings:  
 LSM *abort*, *post*; LSTM *hold*, *delay*; LSVM *mode*;  
 [;LGI *chnum*, *mode*, *Irange*, *Itarget*] or  
 [;LGV *chnum*, *mode*, *Vrange*, *Vtarget*]  
 [;LSV *chnum*, *range*, *start*, *stop*, *step* [, *Icomp*]] or  
 [;LSI *chnum*, *range*, *start*, *stop*, *step* [, *Vcomp*]]  
 [;LSSV *chnum*, *polarity*, *offset* [, *Icomp*]] or  
 [;LSSI *chnum*, *polarity*, *offset* [, *Vcomp*]]  
 <CR/LF^EOI>

## Command Reference

### \*LRN?

- 51 :** Returns the binary search measurement settings:  
BSM *mode,past*;BST *hold,delay*;BSVM *mode*  
[;BGI *chnum,mode,condition,Irange,Itarget*] or  
[;BGV *chnum,mode,condition,Vrange,Vtarget*]  
[;BSV *chnum,range,start,stop[,Icomp]*] or  
[;BSI *chnum,range,start,stop[,Vcomp]*]  
[;BSSV *chnum,polarity,offset[,Icomp]*] or  
[;BSSI *chnum,polarity,offset[,Vcomp]*]  
<CR/LF^EOI>
- 52 :** Not used.
- 53 :** Returns the SMU series resistor ON/OFF status:  
SSR *chnum,mode*  
[;SSR *chnum,mode*]  
:  
[;SSR *chnum,mode*]<CR/LF^EOI>
- 54 :** Returns the auto ranging mode status:  
RM *chnum,mode[,rate]*  
[;RM *chnum,mode[,rate]*]  
:  
[;RM *chnum,mode[,rate]*]<CR/LF^EOI>
- 55 :** Available only for the Agilent E5270B. Returns the A/D converter settings:  
AAD *chnum,type*  
[;AAD *chnum,type*]  
:  
[;AAD *chnum,type*]<CR/LF^EOI>
- 56 :** Available only for the Agilent E5270B. Returns the ADC averaging or integration time setting:  
AIT0,*mode,time*;AIT1,*mode,time*;  
AZ *mode*<CR/LF^EOI>
- 57 :** Returns the source/measurement wait time settings:  
WAT0,*set\_set*;WAT1,*set\_meas*<CR/LF^EOI>

- 58 :** Returns the trigger settings:
- ```
[TGP port,terminal,polarity,type]  
[;TGP port,terminal,polarity,type]  
:  
[;TGP port,terminal,polarity,type]  
TGSI mode;TGXO mode;TGSO mode;TGMO mode<CR/LF^EOI>
```
- 59 :** Returns the multi channel sweep source settings:
- ```
WNX n,chnum,mode,range,start,stop[,comp[,pcomp]]  
[;WNX n,chnum,mode,range,start,stop[,comp[,pcomp]]]  
:  
[;WNX n,chnum,mode,range,start,stop[,comp[,pcomp]]]  
<CR/LF^EOI>
```
- If no multi channel sweep source is set, the query response is:
- ```
WNX<CR/LF^EOI>
```
- 60 :** Returns the time stamp setting:
- ```
TSC enable<CR/LF^EOI>
```
- 61 :** Returns the display settings:
- ```
RED enable;  
KLC lock;  
DFM format;  
SPA1 param;  
SPA2 param;  
MPA param;  
SCH chnum;  
MCH chnum<CR/LF^EOI>
```
- 62 :** Available only for the Agilent E5270B with HRSMU and ASU.  
Returns the ASU connection path:
- ```
SAP chnum,path  
[;SAP chnum,path]  
:  
[;SAP chnum,path]<CR/LF^EOI>
```
- If no channel is connected to ASU.
- ```
SAP<CR/LF^EOI>
```

## Command Reference

### \*LRN?

**63 :** Available only for the Agilent E5270B with HRSMU and ASU.  
Returns the 1 pA auto ranging operation mode:

```
SAR chnum,mode  
[;SAR chnum,mode  
:  
[;SAR chnum,mode]<CR/LF^EOI>
```

If no channel is connected to ASU.

```
SAR<CR/LF^EOI>
```

**64 :** Available only for the Agilent E5270B with HRSMU and ASU.  
Returns the operation mode of the ASU connection status indicator:

```
SAL chnum,mode  
[;SAL chnum,mode  
:  
[;SAL chnum,mode]<CR/LF^EOI>
```

If no channel is connected to ASU.

```
SAL<CR/LF^EOI>
```

## LSI

The LSI command specifies and sets the current search source for the linear search measurement. This command setting is cleared by the LSV command. After search stops, the search channel forces the value specified by the LSM command.

### Syntax

```
LSI chnum, range, start, stop, step [, Vcomp]
```

### Parameters

- chnum*** : Search source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.
- range*** : Output ranging type. Integer expression. The output range will be set to the minimum range that covers both *start* and *stop* values. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-5 on page 4-12.
- start, stop*** : Search start or stop current (in A). Numeric expression. See Table 4-7 on page 4-14. The *start* and *stop* must have different values.  
0 to  $\pm 0.1$ , 0 to  $\pm 0.2$  for MPSMU of E5260 series, or 0 to  $\pm 1$  for HPSMU
- step*** : Step current (in A). Numeric expression.  
If *start* < *stop*, *step* must be positive, and if *start* > *stop*, *step* must be negative. Maximum number of search steps is 1001.
- Vcomp*** : Voltage compliance value (in V). Numeric expression. See Table 4-7 on page 4-14. If you do not specify *Vcomp*, the previous value is set.

### Example Statements

```
OUTPUT @E5270;"LSI 1,0,0,1E-6,1E-8,10"
```

## LSM

The LSM command enables or disables the automatic abort function for the linear search source. The automatic abort function stops the output when one of the following conditions occurs:

- Compliance on the measurement channel
- Compliance on the non-measurement channel
- Overflow on the AD converter
- Oscillation on any channel

This command also sets the post search condition for the linear search sources. After the search measurement is normally completed, the linear search sources force the value specified by the *post* parameter.

If the search operation is stopped by the automatic abort function, the linear search sources force the start value after search.

### Syntax

```
LSM abort[,post]
```

### Parameters

**abort :** Automatic abort function. Integer expression.

1: Disables the function. Initial setting.

2: Enables the function.

**post :** Post search condition. Integer expression.

1: forces the start value. Default setting.

2: forces the stop value.

3: keeps the source output when the search target value is obtained.

If this parameter is not specified, the search source forces the start value.

### Example Statements

```
OUTPUT @E5270;"LSM 2"
```

```
OUTPUT @E5270;"LSM 2,3"
```



## LSSI

The LSSI command specifies and sets the synchronous current source for the linear search measurement. The synchronous source output will be:

Synchronous source output =  $polarity \times LSI \text{ source output} + offset$

where the LSI source output is the output set by the LSI command.

This command setting is cleared by the LSV/LSI command.

### Execution Conditions

The LSI command must be entered before this command.

### Syntax

LSSI *chnum*, *polarity*, *offset* [, *Vcomp*]

### Parameters

***chnum*** : Synchronous source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***polarity***: Polarity of the LSSI output for the LSI output.  
 0 (negative): LSSI output =  $-LSI \text{ output} + offset$   
 1 (positive): LSSI output =  $LSI \text{ output} + offset$

***offset***: Offset current (in A). Numeric expression.  
 0 to  $\pm 0.1$ , 0 to  $\pm 0.2$  for MPSMU of E5260 series, or 0 to  $\pm 1$  for HPSMU  
 Both primary and synchronous search sources will use the same output range. So check the output range set to the LSI command to determine the synchronous source outputs.

***Vcomp***: Voltage compliance value (in V). Numeric expression. If you do not specify *Vcomp*, the previous value is set.

### Example Statements

```
OUTPUT @E5270; "LSSI 1, 1, 1E-6, 5"
```

### See Also

Refer to Table 4-7 on page 4-14 for the source output value, output range, and the available compliance values.

## LSSV

The LSSV command specifies and sets the synchronous voltage source for the linear search measurement. The synchronous source output will be:

Synchronous source output =  $polarity \times LSV \text{ source output} + offset$

where the LSV source output is the value set by the LSV command.

This command setting is cleared by the LSI/LSV command.

The LSV command must be entered before this command.

### Execution Conditions

### Syntax

`LSSV chnum, polarity, offset [, Icomp]`

### Parameters

***chnum*** : Synchronous source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***polarity***: Polarity of the LSSV output for the LSV output.

0 (negative):  $LSSV \text{ output} = -LSV \text{ output} + offset$

1 (positive):  $LSSV \text{ output} = LSV \text{ output} + offset$

***offset***: Offset voltage (in V). Numeric expression.

0 to  $\pm 100$  or 0 to  $\pm 200$  for HPSMU

Both primary and synchronous search sources will use the same output range. So check the output range set to the LSV command to determine the synchronous source outputs.

***Icomp***: Current compliance value (in A). Numeric expression. If you do not specify *Icomp*, the previous value is set. Zero amps (0 A) is not a valid value for the *Icomp* parameter.

### Example Statements

```
OUTPUT @E5270;"LSSV 1,0,5,1E-6"
```

### See Also

Refer to Table 4-6 on page 4-13 for the source output value, output range, and the available compliance values.

## LST?

The LST? query command stores a catalog of internal memory programs or a specific program listing in the output data buffer (query buffer) of the E5260/E5270.

### Syntax

```
LST? [pnum[,index[,size]]]
```

### Parameters

***pnum*** : Memory program number. Numeric expression. 0 to 2000. If you do not specify the value, 0 is set.

LST? 0 returns the catalog of the memory programs. This is same as the LST? command results. Then *index* and *size* are not required.

***index*** : Command index that is the number of top command to read. Numeric expression. If you do not specify the value, 1 is set.

*index*=1 specifies the first command stored in the memory program. This command is always the ST command. And the last command is always the END command. If the *index* value is greater than the number of commands, the LST? returns the END only.

If you set *index*=0, the LST? returns the number of commands stored in the memory program. For empty memory programs, the LST? returns 2 (ST and END).

***size*** : Number of commands to read. Numeric expression. 1 to 3000. If you do not specify the value, 3000 is set.

If you set the value greater than the number of commands from the command specified by *index* to the last command (END), the LST? command stops operation after reading the END command.

### Query Response

Response by LST? or LST? 0:

```
Number of programs[,pnum[,pnum ... [,pnum]...]]<CR/LF^EOI>
```

Response by LST? *pnum*[, *index*[, *size*]]:

```
ST pnum<CR/LF>
[saved command <CR/LF>]
[saved command <CR/LF>]
:
[saved command <CR/LF>]
END<CR/LF^EOI>
```

The LST? command reads the command specified by the *index*, reads the command stored next, and repeats this operation until the *size* each of commands are read. If you do not specify the *index* and *size* values, the LST? command reads the first

## Command Reference

### LST?

stored command (ST *pnum*) to the 3000th stored command. If the number of commands are less than 3000, the LST? command reads the commands from ST to END. See Example Statements that show an HP BASIC programming example.

#### Example Statements

Example of LST? :

```
DIM A$(100)
OUTPUT @E5270;"LST?"
ENTER @E5270;A$
PRINT A$
```

Example of LST? *pnum*[, *index*[, *size*]] :

```
DIM A$(100)
P_num=1
!
OUTPUT @E5270;"LST?";P_num,0
ENTER @E5270;Num_c
Num_l=Num_c/3000
!
IF Num_c>3000 THEN
  C_index=1
  FOR I=1 TO INT(Num_l)
    OUTPUT @E5270;"LST?";P_num,C_index
    FOR N=1 TO 3000
      ENTER @E5270;A$
      PRINT A$
      C_index=C_index+1
    NEXT N
  NEXT I
  OUTPUT @E5270;"LST?";P_num,C_index
  LOOP
  ENTER @E5270;A$
  PRINT A$
  EXIT IF A$="END"
  END LOOP
ELSE
  OUTPUT @E5270;"LST?";P_num
  LOOP
  ENTER @E5270;A$
  PRINT A$
  EXIT IF A$="END"
  END LOOP
END IF
```

## LSTM

The LSTM command sets the timing parameters for the linear search measurement.

If you do not enter this command, all parameters are set to 0.

### Syntax

LSTM *hold, delay*

### Parameters

***hold*** : Hold time (in seconds) that is the wait time after starting the search measurement and before starting the delay time for the first search point. Numeric expression.

0 to 655.35 sec. 0.01 sec resolution.

***delay*** : Delay time (in seconds) that is the wait time after starting to force a step output value and before starting a step measurement. Numeric expression.

0 to 65.535 sec. 0.0001 sec resolution.

### Example Statements

```
OUTPUT @E5270;"LSTM 5,0.1"
```

## LSV

The LSV command specifies and sets the voltage search source for the linear search measurement. This command setting is cleared by the LSI command. After search stops, the search channel forces the value specified by the LSM command.

### Syntax

`LSV chnum, range, start, stop, step[, Icomp]`

### Parameters

- chnum** : Search source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.
- range** : Output ranging type. Integer expression. 0 for auto ranging, 11 to 15 for limited auto ranging. 15 is only for HPSMU. The E5260/E5270 uses the minimum range that covers both *start* and *stop* values. Range changing may cause 0 V output in a moment.

The minimum range of each ranging type is as follows:

| 0, 11 | 12   | 13   | 14    | 15    |
|-------|------|------|-------|-------|
| 2 V   | 20 V | 40 V | 100 V | 200 V |

**start, stop** : Search start or stop voltage (in V). Numeric expression. See Table 4-6 on page 4-13. The *start* and *stop* parameters must have different values.

0 to ±100 (for MPSMU)

0 to ±200 (for HPSMU)

**step** : Step voltage (in V). Numeric expression.

If  $start < stop$ , *step* must be positive, and if  $start > stop$ , *step* must be negative. Maximum number of search steps is 1001.

**Icomp** : Current compliance value (in A). Numeric expression. See Table 4-6 on page 4-13. If you do not specify *Icomp*, the previous value is set. Zero amps (0 A) is not allowed for *Icomp*.

### Example Statements

```
OUTPUT @E5270;"LSV 1,0,0,20,.5,1E-6"
```

## LSVM

The LSVM command selects the data output mode for the linear search measurement.

### Syntax

LSVM *mode*

### Parameters

***mode*** : Data output mode. Integer expression. 0 (initial setting) or 1.

0 : Returns *Data\_search* only.

1 : Returns *Data\_search* and *Data\_sense*.

where

*Data\_search* is the value forced by the search output channel set by the LSV or LSI command.

*Data\_sense* is the value measured by the search monitor channel set by the LGI or LGV command.

For data output format, refer to “Data Output Format” on page 1-21.

### Example Statements

```
OUTPUT @E5270;"LSVM 1"
```

## MCH

The MCH command selects the measurement channel for the data is displayed on the front panel LCD.

### Syntax

MCH *chnum*

### Parameters

***chnum*** : Measurement channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

### Example Statements

```
OUTPUT @E5270;"MCH 1"
```

## MM

The MM command specifies the measurement mode and the channels used for measurements. This command must be entered to specify the measurement mode. For the high speed spot measurements, do not enter the MM command.

### Syntax

- For spot, staircase sweep, and multi channel sweep:

```
MM mode, chnum[, chnum[, chnum...[, chnum]...]]
```

A maximum of eight channels can be set.

- For pulsed spot, pulsed sweep, and staircase sweep with pulsed bias:

```
MM mode, chnum
```

- For binary search and linear search:

```
MM mode
```

- For quasi pulsed spot:

```
MM mode[, chnum]
```

### Parameters

**mode :** Measurement mode. Integer expression. 1 to 5, 9, and 14 to 16.

| <i>mode</i> | Measurement mode                 | Related source setup command                    |
|-------------|----------------------------------|-------------------------------------------------|
| 1           | Spot                             | DI, DV                                          |
| 2           | Staircase sweep                  | WI, WV, WT, WM, WSI, WSV                        |
| 3           | Pulsed spot                      | PI, PV, PT                                      |
| 4           | Pulsed sweep                     | PWI, PWV, PT, WM, WSI, WSV                      |
| 5           | Staircase sweep with pulsed bias | WI, WV, WM, WSI, WSV, PI, PV, PT                |
| 9           | Quasi-pulsed spot                | BDV, BDT, BDM                                   |
| 14          | Linear search                    | LSV, LSI, LGV, LGI, LSM, LSTM, LSSV, LSSI, LSVM |
| 15          | Binary search                    | BSV, BSI, BGV, BGI, BSM, BST, BSSV, BSSI, BSVM  |
| 16          | Multi channel sweep              | WI, WV, WT, WM, WNX                             |

**chnum:** Measurement channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.



**Remarks**

The SMU operation mode is defined by the CMM command.

The measurement range is defined by the RI or RV command for the measurements except for the search measurement.

To execute the measurement, enter the XE command.

For the spot and staircase sweep measurements, if you use multiple measurement channels, the channels start measurement in the order defined in the MM command.

For the multi channel sweep measurement, if you use multiple measurement channels, the channels that use the fixed ranging mode start measurement simultaneously, then other channels start measurement in the order defined in the MM command. For the Agilent E5270B, note that the high-resolution ADC cannot perform simultaneous measurement.

For the quasi-pulsed spot measurement, if you do not specify *chnum*, the E5260/E5270 uses the channel specified by the BDV command to execute measurement.

For the quasi-pulsed spot measurement and the linear/binary search measurements, the time stamp function is not available. See “Data Output Format” on page 1-21.

**Example Statements**

```
OUTPUT @E5270;"MM 1,1"
OUTPUT @E5270;"MM 2,1,3"
```

## MPA

The MPA command selects the data displayed in the measurement data display area on the front panel LCD.

The \*RST command or the device clear sets the compliance side data only.

**Syntax** `MPA item`

**Parameters**

*item* :

- 1: Compliance side data. Initial setting.
- 2: Compliance side data and force side data.
- 3: Resistance data. Displays “-----” in the remote mode.
- 4: Power data. Displays “-----” in the remote mode.

**Example Statements**

```
OUTPUT @E5270;"MPA 2"
```

## NUB?

The NUB? query command checks the number of measurement data in the output data buffer, and stores the results in the output data buffer (query buffer).

**Syntax**

NUB?

**Query Response**

*Number of measurement data*<CR/LF^EOI>

**Example Statements**

```
OUTPUT @E5270;"NUB?"  
ENTER @E5270;A
```

## \*OPC?

The \*OPC? command monitors the pending operations, and places ASCII character 1 into the output queue when all pending operations are completed. Also this command sets/clears the operation complete (OPC) bit in the standard event status register as follows:

- If there are no pending operations, sets the OPC bit to 1.
- If there are any pending operations, sets the OPC bit to 0.  
The bit will be set to 1 when all pending operations are completed.

**Syntax**

\*OPC?

**Query Response**

1<CR/LF^EOI>

No response will be returned until all pending operations are completed.

**Example Statements**

```
OUTPUT @E5270;"*OPC?"  
ENTER @E5270;A
```

## OS

The OS command causes the E5260/E5270 to send a edge trigger from the Ext Trig Out terminal. To set the trigger logic (initial value: negative), send the TGP command for the Ext Trig Out terminal.

**Syntax**

```
OS
```

**Example Statements**

```
OUTPUT @E5270;"OS"
```

## OSX

The OSX command causes the E5260/E5270 to send a trigger from a trigger output terminal specified by the *port* parameter. To set the trigger logic (initial value: negative), send the TGP command for the specified port.

**Syntax**

```
OSX port[,level]
```

**Parameters**

***port*** : External trigger output port number. Integer expression. -2, or 1 to 16.

- 2: Ext Trig Out terminal.
- 1 to 16: Port 1 to 16 of the digital I/O terminal.

To use a digital I/O port, send the TGP command. The *port* value must be same as the *port* value set to the TGP command.

***level*** : Trigger output level. Integer expression. 0, 1, or 2.

- 0: Logical low.
- 1: Logical high.
- 2: Edge trigger (default setting).

If *level* is not specified, the E5260/E5270 sends the edge trigger. For the gate trigger output, send OSX *port*,1 when starting trigger output, and send OSX *port*,0 when stopping trigger output.

**Example Statements**

```
OUTPUT @E5270;"OSX 1,1"
OUTPUT @E5270;"TI";1
ENTER @E5270 USING "#,3X,12D,X";ldata
OUTPUT @E5270;"OSX 1,0"
```

**See Also**

“TGP” and “TGPC”

## Command Reference

### PA

## PA

The PA command pauses the command execution or internal memory program execution, until the specified wait time has elapsed or until an event specified by the TM command is received. The event set by the TM command only releases the paused status. It does not start the measurement.

### Syntax

PA [*wait time*]

### Parameters

***wait time*** : -99.9999 to 99.9999 seconds, with 100 µsec resolution. Numeric expression.

If *wait time* is not specified or negative *wait time* is set, the paused status is kept until receiving an event specified by the TM command.

### Remarks

The TM3 command enables an external trigger from the Ext Trig In terminal as an event used to break the pause state set by the PA command.

The E5260/E5270 counts the *wait time* independent of the source wait time and the measurement wait time set by the WAT command. So the *wait time* can cover them as shown in the following program example:

```
OUTPUT @E5270;"CN";1
OUTPUT @E5270;"WAT";1,0,1E-3 !Source Wait Time =1ms
OUTPUT @E5270;"WAT";2,0,1E-3 !Meas Wait Time =1ms
OUTPUT @E5270;"DV";1,0,5,1E-2
OUTPUT @E5270;"PA";1E-3 !Wait Time =1ms
OUTPUT @E5270;"TI";1
ENTER @E5270 USING "#,3X,12D,X";ldata
```

### Example Statements

```
OUTPUT @E5270;"PA 10"
```

### See Also

“TM”

## PAX

The PAX command pauses the command execution or internal memory program execution, until the specified wait time has elapsed or until an event specified by the TM command is received. The event set by the TM command only releases the paused status. It does not start the measurement.

### Execution Conditions

The *port* parameter is meaningful only for the event (trigger input) set by the TM3 command. Set 1 (dummy) for the event set by the TM1, TM2, or TM4 command.

### Syntax

```
PAX port[,wait time]
```

### Parameters

**port :** External trigger input port number. Integer expression. -1, or 1 to 16.

- 1: Ext Trig In terminal.
- 1 to 16: Port 1 to 16 of the digital I/O terminal.

To use a digital I/O port, send the TGP command. The *port* value must be same as the *port* value set to the TGP command.

**wait time :** -99.9999 to 99.9999 seconds, with 100 µsec resolution. Numeric expression.

If *wait time* is not specified or negative *wait time* is set, the paused status is kept until receiving an event specified by the TM command.

### Remarks

The TM3 command enables an external trigger from a trigger input terminal specified by the *port* parameter as an event used to break the pause state set by the PA command.

The E5260/E5270 counts the *wait time* independent of the source wait time and the measurement wait time set by the WAT command. So the *wait time* can cover them as shown in the following program example:

```
OUTPUT @E5270;"CN";1
OUTPUT @E5270;"WAT";1,0,1E-3 !Source Wait Time =1ms
OUTPUT @E5270;"WAT";2,0,1E-3 !Meas Wait Time =1ms
OUTPUT @E5270;"DV";1,0,5,1E-2
OUTPUT @E5270;"PAX";-1,1E-3 !Wait Time =1ms
OUTPUT @E5270;"TI";1
ENTER @E5270 USING "#,3X,12D,X";ldata
```

### Example Statements

```
OUTPUT @E5270;"PAX 1,10"
```

### See Also

“TM”, “TGP”, and “TGPC”

## Command Reference

### PI

## PI

The PI command specifies the pulse current source and its parameters. This command also clears, and is cleared by, the PV command setting.

In the staircase sweep with pulsed bias measurement mode (set by the MM 5 command), the output forced by the PI command synchronized with the staircase sweep outputs forced by the WI or WV command.

Measurement channel performs measurement so that the pulse width and pulse period are kept. The integration time is automatically set by the instrument, and you cannot change. For the Agilent E5270B, note that the high-resolution ADC cannot be used for the pulsed measurements. The AAD/AIT/AV/WT command settings are ignored.

### Syntax

```
PI chnum, irange, base, pulse[, Vcomp]
```

### Parameters

- chnum*** : Pulsed source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.
- irange***: Ranging type for pulse current output. Integer expression. The output range will be set to the minimum range that covers both *base* and *pulse* values. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-5 on page 4-12.
- base,***  
***pulse*** : Pulse base current or pulse peak current (in A). Numeric expression. See Table 4-7 on page 4-14. *base* and *pulse* must have the same polarity.  
0 to  $\pm 0.1$ , 0 to  $\pm 0.2$  for MPSMU of E5260 series, or 0 to  $\pm 1$  for HPSMU
- Vcomp***: Voltage compliance value (in V). Numeric expression. See Table 4-7 on page 4-14. If *Vcomp* is not specified, the previous value is set.  
Compliance polarity is automatically set to the same polarity as the output value, regardless of the specified *Vcomp*. If the output value is 0, the polarity is set to positive.

### Example Statements

```
OUTPUT @E5270;"PT 1,0.01"  
OUTPUT @E5270;"PI 1,16,0,5E-5,5"
```

```
OUTPUT @E5270;"PT 1,0.01"  
OUTPUT @E5270;"PI 3,0,0,5E-6"
```

## PT

The PT command sets the hold time, pulse width, and pulse period for a pulse source set by the PI, PV, PWI or PWV command. This command also sets the trigger delay time. Measurement channel performs measurement so that the pulse width and pulse period are kept. The integration time is automatically set by the instrument, and you cannot change. For the Agilent E5270B, note that the high-resolution ADC cannot be used for the pulsed measurements. The AAD/AIT/AV/WT command settings are ignored.

### Syntax

For pulsed spot measurements:

```
PT hold, width [, period [, Tdelay ] ]
```

For pulsed sweep or staircase sweep with pulsed bias measurements:

```
PT hold, width, period [, Tdelay ]
```

### Parameters

***hold*** : Hold time (in seconds). Numeric expression.

0 to 655.35 sec. 0.01 sec resolution. Initial setting = 0.

***width*** : Pulse width (in seconds). Numeric expression.

0.5E-3 to 2.0 sec. 1E-4 sec resolution. Initial setting = 1E-3 sec.

***period*** : Pulse period (in seconds). Numeric expression. 0, or 5E-3 to 5.0 sec.  
1E-4 sec resolution. Initial or default setting = 10E-3 sec.

Restrictions:

- $period \geq width + 2$  msec (for  $width \leq 100$  ms)
- $period \geq width + 10$  msec (for  $width > 100$  ms)

If you set  $period=0$ , the E5260/E5270 automatically sets the pulse period to 5 msec (for  $width \leq 3$  ms),  $width + 2$  msec (for  $3 \text{ ms} < width \leq 100$  ms), or  $width + 10$  msec (for  $width > 100$  ms).

If you do not specify *period*, 0 sec is set.

***Tdelay*** : Trigger output delay time (in seconds). Numeric expression.

0 to *width* sec. 1E-4 sec resolution. Default setting = 0.

This parameter is the time from pulse leading edge to timing of trigger output from a trigger output terminal. If you do not specify *Tdelay*, 0 sec is set.

## Command Reference

### PV

## PV

The PV command specifies the pulsed voltage source and its parameters. This command also clears, and is cleared by, the PI command setting.

In the staircase sweep with pulsed bias measurement mode (MM 5 command), the output forced by the PV command synchronized with the staircase sweep outputs forced by the WI or WV command.

Measurement channel performs measurement so that the pulse width and pulse period are kept. The integration time is automatically set by the instrument, and you cannot change. For the Agilent E5270B, note that the high-resolution ADC cannot be used for the pulsed measurements. The AAD/AIT/AV/WT command settings are ignored.

### Syntax

```
PV chnum, vrange, base, pulse [, Icomp]
```

### Parameters

- chnum*** : Pulsed source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.
- vrange***: Ranging type for the pulsed voltage output. Integer expression. The output range will be set to the minimum range that covers both *base* and *pulse* values. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-4 on page 4-12.
- base*,  
*pulse*** : Pulse base voltage or pulse peak voltage (in V). Numeric expression. See Table 4-6 on page 4-13.  
0 to ±100 or 0 to ±200 for HPSMU
- Icomp***: Current compliance value (in A). Numeric expression. See Table 4-6 on page 4-13. If you do not set *Icomp*, the previous value is used.  
Compliance polarity is automatically set to the same polarity as the output value, regardless of the specified *Icomp*. If the output value is 0, the polarity is set to positive.

### Example Statements

```
OUTPUT @E5270;"PT 1,0.01"  
OUTPUT @E5270;"PV 1,12,0,5,1E-3"  
  
OUTPUT @E5270;"PT 1,0.01"  
OUTPUT @E5270;"PV 2,0,0,3"
```



## PWI

The PWI command specifies the pulsed sweep current source and its parameters. This command clears the settings of the PWV, WSV and WSI commands.

The settings specified by this command are cleared by the PWV command.

Measurement channel performs measurement so that the pulse width and pulse period are kept. The integration time is automatically set by the instrument, and you cannot change. For the Agilent E5270B, note that the high-resolution ADC cannot be used for the pulsed measurements. The AAD/AIT/AV/WT command settings are ignored.

### Syntax

```
PWI chnum, mode, range, base, start, stop, step [, Vcomp]
```

### Parameters

- chnum*** : Pulsed sweep source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.
- mode*** : Sweep mode. Integer expression. 1 or 3.  
 1: Linear sweep (single stair, start to stop.)  
 3: Linear sweep (double stair, start to stop to start.)
- range*** : Ranging type for pulsed current sweep. Integer expression. The output range will be set to the minimum range that covers *base*, *start*, and *stop* values. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-5 on page 4-12.
- base, start, stop*** : Pulse base, start, or stop current (in A). Numeric expression. See Table 4-7 on page 4-14. *base*, *start* and *stop* must have the same polarity.  
 0 to  $\pm 0.1$ , 0 to  $\pm 0.2$  for MPSMU of E5260 series, or 0 to  $\pm 1$  for HPSMU
- step*** : Number of steps for pulsed sweep. Numeric expression. 1 to 1001.  
 The E5260/E5270 can store approximately 16000 measurement data in ASCII format with header without source data, or approximately 64000 measurement data in binary format.
- Vcomp*** : Voltage compliance (in V). Numeric expression. See Table 4-7 on page 4-14. If you do not specify *Vcomp*, the previous value is set.  
 Compliance polarity is automatically set to the same polarity as the output value, regardless of the specified *Vcomp*. If the output value is 0, the polarity is set to positive.

## Command Reference

### PWI

#### Example Statements

```
OUTPUT @E5270;"PT 1,0.01"  
OUTPUT @E5270;"PWI 1,1,0,0,0,0.1,101"
```

```
OUTPUT @E5270;"PT 1,0.01"  
OUTPUT @E5270;"PWI 2,3,13,0,1E-7,1E-2,100,10"
```

## PWV

The PWV command specifies the pulsed sweep voltage source and its parameters. This command also clears the settings of the PWI, WSV and WSI commands.

The settings specified by this command are cleared by the PWI command.

Measurement channel performs measurement so that the pulse width and pulse period are kept. The integration time is automatically set by the instrument, and you cannot change. For the Agilent E5270B, note that the high-resolution ADC cannot be used for the pulsed measurements. The AAD/AIT/AV/WT command settings are ignored.

### Syntax

```
PWV chnum, mode, range, base, start, stop, step [, Icomp]
```

### Parameters

***chnum*** : Pulsed sweep source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***mode*** : Sweep mode. Integer expression. 1 or 3.  
 1: Linear sweep (single stair, start to stop.)  
 3: Linear sweep (double stair, start to stop to start.)

***range***: Ranging type for pulsed voltage sweep. Integer expression. The output range will be set to the minimum range that covers *base*, *start*, and *stop* values. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-4 on page 4-12.

***base, start, stop*** : Pulse base, start, or stop voltage (in V). Numeric expression. See Table 4-6 on page 4-13.

0 to ±100 or 0 to ±200 for HPSMU

***step*** : Number of steps for pulsed sweep. Numeric expression. 1 to 1001.  
 The E5260/E5270 can store approximately 16000 measurement data in ASCII format with header without source data, or approximately 64000 measurement data in binary format.

***Icomp*** : Current compliance (in A). Numeric expression. See Table 4-6 on page 4-13. If you do not specify *Icomp*, the previous value is set.

Compliance polarity is automatically set to the same polarity as the output value, regardless of the specified *Icomp*. If the output value is 0, the polarity is set to positive.

## Command Reference

### PWV

#### Example Statements

```
OUTPUT @E5270;"PT 1,0.01"  
OUTPUT @E5270;"PWV 1,1,0,0,0,10,101"
```

```
OUTPUT @E5270;"PT 1,0.01"  
OUTPUT @E5270;"PWV 2,3,14,0,1,10,100,0.1"
```

## RCV

The RCV command enables the modules that fail the self-test or self-calibration so that it can receive commands again.

After the RCV command, enter the \*OPC? command to confirm that the command execution is completed.

This command should only be used for servicing the E5260/E5270.

### Syntax

```
RCV [slotnum]
```

### Parameters

**slotnum** : Specifies the module to enable. Integer expression. 0 to 9.

0: All failed modules. Default setting.

1 to 8: Module installed in the slot specified by *slotnum*.

9: ADC module installed in the mainframe.

For HPSMU that uses two slots, set the greater slot number. For example, if it is installed in slot 3 and 4, *slotnum* must be 4.

If *slotnum* specifies the slot that installs no module, this command causes an error.

### Example Statements

```
OUTPUT @E5270;"RCV 1"  
OUTPUT @E5270;"*OPC?"  
ENTER @E5270;A
```

## RED

The RED command enables or disables the measurement data display and the setup data display in the remote mode.

The \*RST command or the device clear disables the display.

### Syntax

```
RED mode
```

### Parameters

**mode** : Data display mode. Integer expression.

0: Disable.

1: Enable.

### Example Statements

```
OUTPUT @E5270;"RED 1"
```

## Command Reference

### RI

## RI

The RI command specifies the current measurement range or ranging type. In the initial setting, the auto ranging is set. The range changing occurs immediately after the trigger (that is, during the measurements). Current measurement channel can be decided by the CMM command setting and the channel output mode (voltage or current).

For the high speed spot measurement, use the TI/TTI command.

The range setting is cleared by the CL, CA, IN, \*TST?, \*RST or a device clear (HP BASIC CLEAR) command.

### Syntax

```
RI chnum, range
```

### Parameters

***chnum*** : Current measurement channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***range*** : Measurement range or ranging type. Integer expression. If you select the fixed range, the instrument performs measurement by using the specified range. For the auto or limited auto ranging, the measurement range will be set to the minimum range that covers the measured values. However, the instrument never uses the range less than the specified range for the limited auto ranging. See Table 4-3 on page 4-11.

For the measurement mode that uses pulse source, if you select the auto or limited auto ranging, the measurement channel uses the minimum range that covers the compliance value or current output range.

### Example Statements

```
OUTPUT @E5270;"RI 1,0"
```

```
OUTPUT @E5270;"RI 2,-20"
```

## RM

This command specifies the auto range operation for the current measurement.

### Syntax

RM *chnum*, *mode* [, *rate*]

where the *rate* parameter is available for *mode*=2 or 3.

### Parameters

***chnum*** : Current measurement channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***mode*** : Range changing operation mode. Integer expression. 1, 2 or 3.

| <i>mode</i> | Description                                                                                                                                                         |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1           | Initial setting. If you set <i>mode</i> =1, do not set <i>rate</i> .                                                                                                |
| 2           | If measured data $\geq$ <i>current1</i> , the range changes up after measurement.                                                                                   |
| 3           | If measured data $\leq$ <i>current2</i> , the range changes down immediately, and if measured data $\geq$ <i>current1</i> , the range changes up after measurement. |

where *current1* and *current2* are given by the following formula:

$$\text{current1} = \text{measurement range} \times \text{rate} / 100$$

$$\text{current2} = \text{measurement range} \times \text{rate} / 1000$$

For 200 mA range, they must be:

$$\text{current1} = 200 \text{ mA} \times \text{rate} / 100$$

$$\text{current2} = 100 \text{ mA} \times \text{rate} / 100$$

For example, if *measurement range*=10 mA and *rate*=90, these values are as follows:

$$\text{current1} = 9 \text{ mA}$$

$$\text{current2} = 0.9 \text{ mA}$$

***rate***: Parameter used to calculate the *current* value. Numeric expression. 11 to 100. Default value is 50.

### Example Statements

```
OUTPUT @E5270;"RM 1,2"
```

```
OUTPUT @E5270;"RM 2,3,60"
```

## Command Reference

### \*RST

#### **\*RST**

The \*RST command resets the E5260/E5270 to the initial settings. This command does not clear the program memory and the self calibration data.

**Syntax**

\*RST

**Remarks**

If you want to reset channels while a sweep measurement is being performed, you must first send the AB command, then the \*RST command.

**Example Statement**

```
OUTPUT @E5270;"*RST"
```

#### **RU**

The RU command sequentially executes the internal memory programs.

**Execution Conditions**

The specified programs have been stored by using the ST and END commands, from the start program number through the stop program number.

**Syntax**

RU *start, stop*

**Parameters**

***start*** : Start program number. Numeric expression. 1 to 2000.

***stop*** : Stop program number. Numeric expression. 1 to 2000.

where *stop* value must be greater than or equal to the *start* value.

**Example Statements**

```
OUTPUT @E5270;"RU 1,10"
```

```
OUTPUT @E5270;"RU 3,6"
```



## RV

The RV command specifies the voltage measurement range or ranging type. In the initial setting, the auto ranging is set. The range changing occurs immediately after the trigger (that is, during the measurements). Voltage measurement channel can be decided by the CMM command setting and the channel output mode (voltage or current).

For the high speed spot measurement, use the TV/TTV command.

The range setting is cleared by the CL, CA, IN, \*TST?, \*RST or a device clear (HP BASIC CLEAR) command.

### Syntax

*RV chnum, range*

### Parameters

***chnum*** : Voltage measurement channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***range*** : Measurement range or ranging type. Integer expression. If you select the fixed range, the instrument performs measurement by using the specified range. For the auto or limited auto ranging, the measurement range will be set to the minimum range that covers the measured values. However, the instrument never uses the range less than the specified range for the limited auto ranging. See Table 4-2 on page 4-10.

For the measurement mode that uses pulse source, if you select the auto or limited auto ranging, the measurement channel uses the minimum range that covers the compliance value or voltage output range.

### Example Statements

```
OUTPUT @E5270;"RV 2,-15"
```

```
OUTPUT @E5270;"RV 1,12"
```

## Command Reference

### RZ

## RZ

The RZ command returns the channel to the settings that are stored by the DZ command and clears the stored settings.

The DZ command stores the channel settings (V/I output values, V/I output ranges, V/I compliance values, and series resistor setting), then sets the channel to 0 V.

#### Execution Conditions

The DZ command has been executed for the specified channel. And the CL, CA, \*TST?, \*RST or a device clear (HP BASIC CLEAR) command has not been executed for the specified channel.

#### Syntax

```
RZ [ chnum [, chnum . . . [, chnum] . . . ] ]
```

A maximum of eight channels can be set.

#### Parameters

***chnum*** : Channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

If you do not specify this parameter, this command returns the settings for all channels that satisfy the conditions described in “Execution Conditions” above, in the order that the DZ command stored them.

You can specify up to eight channels at once using the RZ command. The E5260/E5270 returns the stored settings in the order specified.

#### Example Statements

```
OUTPUT @E5270;"RZ"
```

```
OUTPUT @E5270;"RZ 1,2,3"
```

## SAL

The Agilent E5260 series does not have this function. This function is available for the Agilent E5270B installed with the high resolution SMU (HRSMU) and the Atto Sense and Switch Unit (ASU).

Disables or enables the connection status indicator (LED) of the ASU. This command is effective for the specified channel.

**Syntax** `SAL chnum,mode`

**Parameters** *chnum* : Slot number where the HRSMU has been installed. The ASU must be connected to the HRSMU. Integer expression. 1 to 8.

*mode* : 0: Disables the indicator.  
1: Enables the indicator. Default setting.

**Example Statements** `OUTPUT @E5270;"SAL 1,0"`

## SAR

The Agilent E5260 series does not have this function. This function is available for the Agilent E5270B installed with the high resolution SMU (HRSMU) and the Atto Sense and Switch Unit (ASU).

Enables or disables the 1 pA range for the auto ranging operation. This command is effective for the specified channel.

**Syntax** `SAR chnum,mode`

**Parameters** *chnum* : Slot number where the HRSMU has been installed. The ASU must be connected to the HRSMU. Integer expression. 1 to 8.

*mode* : 0: Enables 1 pA range for the auto ranging operation.  
1: Disables 1 pA range for the auto ranging operation. Default setting.

**Example Statements** `OUTPUT @E5270;"SAR 1,0"`

---

### NOTE

#### To use ASU

Before turn the Agilent E5270B on, connect the ASU to the HRSMU properly. The ASU will add the 1 pA range to the HRSMU. Remember that the series resistor in the HRSMU connected to the ASU cannot be used.

## SAP

The Agilent E5260 series does not have this function. This function is available for the Agilent E5270B installed with the high resolution SMU (HRSMU) and the Atto Sense and Switch Unit (ASU). This command is not effective when the HIGH VOLTAGE indicator of the Agilent E5270B has been lighted.

Controls the connection path of the ASU. Switches the ASU input resource (HRSMU or the instrument connected to the AUX input) to be connected to the ASU output. This command is effective for the specified channel.

After the Agilent E5270B is turned on or the CL command is entered, the ASU output will be connected to the SMU connector side, but the HRSMU will not be enabled yet. After this command is entered with *path*=1, the HRSMU specified by *chnum* cannot be used. After this command is entered with *path*=0 or the CN command is entered, the HRSMU output will appear on the ASU output. Then the HRSMU output will be 0 V.

### Syntax

*SAP chnum, path*

### Parameters

***chnum*** : Slot number where the HRSMU has been installed. The ASU must be connected to the HRSMU. Integer expression. 1 to 8.

***path*** : Path connected to the ASU output. 0 or 1.

0: The ASU output will be connected to the SMU connector side.

1: The ASU output will be connected to the AUX connector side.

### Example Statements

```
OUTPUT @E5270;"SAP 1,1"
```

---

### NOTE

#### To use ASU

Before turn the Agilent E5270B on, connect the ASU to the HRSMU properly. The ASU will add the 1 pA range to the HRSMU. If you use other instrument such as the capacitance meter, connect the instrument to the AUX input of the ASU. The ASU provides the input selection function.

Remember that the series resistor in the HRSMU connected to the ASU cannot be used.

---

## SCH

The SCH command selects the source channel for the data is displayed on the front panel LCD.

**Syntax**

SCH *chnum*

**Parameters**

***chnum*** : Source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

**Example Statements**

```
OUTPUT @E5270;"SCH 1"
```

## SCR

The SCR command scratches the specified program from the internal program memory.

**Syntax**

SCR [*pnum*]

**Parameters**

***pnum*** : Program number. Numeric expression. 1 to 2000.  
If you do not specify this parameter, this command scratches all programs stored in the internal program memory.

**Example Statements**

```
OUTPUT @E5270;"SCR"  
OUTPUT @E5270;"SCR 5"
```

## Command Reference

### SPA

## SPA

The SPA command selects the parameter displayed in the source data display area on the front panel LCD.

The \*RST command or the device clear sets the source force value in the first line and the source compliance value in the second line.

### Syntax

*SPA line, item*

### Parameters

**line :** Line or position the parameter value is displayed. Integer expression.

1: First line.

2: Second line.

**item :** Parameter displayed on the line specified by *line*. Integer expression.

| <i>item</i> | Description                        |
|-------------|------------------------------------|
| 1           | Source force value.                |
| 2           | Source compliance value.           |
| 3           | Voltage measurement range value.   |
| 4           | Current measurement range value.   |
| 5           | Latest error code or error number. |

### Example Statements

OUTPUT @E5270;"SPA 1,1"

OUTPUT @E5270;"SPA 2,5"

**\*SRE**

The \*SRE command enables the specified bits of the status byte register for SRQ (service requests), and masks (disables) the bits that are not specified.

**Syntax**

\*SRE *bit*

**Parameters**

***bit***: Sum of the decimal values corresponding to the bits to be enabled. Integer expression. 0 to 255. See the following table.

For example, to enable Bit 0, 4, and 7 for the SRQ, the *bit* value must be 145 (1 + 16 + 128).

If *bit*=0, all bits, except for Bit 6, will be masked (disabled for the SRQ). You cannot mask bit 6.

| Decimal Value | Bit Number | Description    |
|---------------|------------|----------------|
| 1             | Bit 0      | Data Ready     |
| 2             | Bit 1      | Wait           |
| 4             | Bit 2      | not used       |
| 8             | Bit 3      | Interlock Open |
| 16            | Bit 4      | Set Ready      |
| 32            | Bit 5      | Error          |
| 64            | Bit 6      | RQS            |
| 128           | Bit 7      | Shut Down      |

**Example Statements**

```
OUTPUT @E5270; "*SRE 6"
```

```
OUTPUT @E5270; "*SRE 128"
```

## Command Reference

### \*SRE?

#### \*SRE?

The \*SRE? query command returns information about which bits of the status byte register are enabled for the SRQ (service requests), and stores the results in the output data buffer (query buffer).

#### Syntax

\*SRE?

#### Query Response

*enabled\_bits*<CR/LF^EOI>

*enabled\_bits* are represented by the corresponding decimal values shown below.

| Decimal Value | Bit Number | Description    |
|---------------|------------|----------------|
| 1             | Bit 0      | Data Ready     |
| 2             | Bit 1      | Wait           |
| 4             | Bit 2      | not used       |
| 8             | Bit 3      | Interlock Open |
| 16            | Bit 4      | Set Ready      |
| 32            | Bit 5      | Error          |
| 64            | Bit 6      | RQS            |
| 128           | Bit 7      | Shut Down      |

For example, if Bit 0, 3, and 4 are enabled for the SRQ, 25 (1 + 8 + 16) will be returned. If all bits, except for Bit 6, are masked, *enabled\_bits* will be 0.

#### Example Statements

```
OUTPUT @E5270;"*SRE?"  
ENTER @E5270;A
```



## SSR

This command sets the connection mode of a series resistor (approx. 1 M $\Omega$ ) for each channel.

If the output switch is opened, the SSR command just sets the mode, and the CN command connects or disconnects the series resistor.

If the output switch is already closed, the SSR command connects the series resistor to the SMU output. Then the output forces 0 V one moment.

A series resistor is mounted on each module. If you use a series resistor, the voltage you set is applied to the near side of the series resistor. Thus, the voltage will be divided by the series resistor and the device under test.

### Execution Conditions

The series resistor cannot be used for the measurements that use the high resolution SMU (HRSMU) connected to the Atto Sense and Switch Unit (ASU) or the measurements that use 1 A range of the high power SMU (HPSMU).

The channel must not be in the HIGH VOLTAGE state (forcing more than  $\pm 42$  V, or voltage compliance set to more than  $\pm 42$  V).

### Syntax

`SSR chnum, mode`

### Parameters

***chnum*** : Channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***mode*** : Status of the series resistor. Integer expression.  
0: Disconnect (initial setting).  
1: Connect.

### Example Statements

```
OUTPUT @E5270;"SSR 1,1"  
OUTPUT @E5270;"SSR 2,1"
```

## Command Reference

### ST

## ST

The ST command is used with the END command to store a program in the internal program memory that can store 2,000 programs maximum, and a total of 40,000 commands.

The ST command indicates the start of the program, and assigns the program number. If the assigned program number already exists, the E5260/E5270 deletes the old program, and stores the new one.

The END command indicates the end of the program. If the END command is not included, the E5260/E5270 stores the commands until the program memory is full.

Use the DO or RU command to execute stored programs.

### Syntax

```
ST

pnum [ ; command [ ; command . . . [ ; command ] . . . ] ; END


```

or

```
ST pnum  
[ command ]  
[ command ]  
  ⋮  
[ command ]  
END
```

### Parameters

***pnum*** : Program number. Integer expression. 1 to 2000.

***command*** : Command stored in the internal program memory. Specify commands according to normal syntax –no special syntax is necessary.

For the commands that cannot be stored in the program memory, refer to Table 2-1 on page 2-26.

### Example Statements

Example 1:

```
OUTPUT @E5270;"ST1;CN1;DV1,0,5,1E-4;TI1,0;CL1"  
OUTPUT @E5270;"END"
```

Example 2:

```
OUTPUT @E5270;"ST 1"  
OUTPUT @E5270;"CN 1"  
OUTPUT @E5270;"DV 1,0,5,1E-4"  
OUTPUT @E5270;"TI 1,0"  
OUTPUT @E5270;"CL 1"  
OUTPUT @E5270;"END"
```

**\*STB?**

The \*STB? query command stores the decimal representation of the status byte in the output data buffer (query buffer).

The \*STB? command is functionally identical to the SPOLL command of BASIC, however this command does not clear the status byte (the SPOLL command clears the status byte).

**Syntax**

\*STB?

**Query Response**

*status\_byte*<CR/LF^EOI>

*status\_byte* value is a decimal number that indicates which bits of the status byte are ON (“1”).

For example, if *status\_byte* is 40 (8 + 32), then Bit 3 and 5 are set to 1.

| Decimal Value | Bit Number | Description    |
|---------------|------------|----------------|
| 1             | Bit 0      | Data Ready     |
| 2             | Bit 1      | Wait           |
| 4             | Bit 2      | not used       |
| 8             | Bit 3      | Interlock Open |
| 16            | Bit 4      | Set Ready      |
| 32            | Bit 5      | Error          |
| 64            | Bit 6      | RQS            |
| 128           | Bit 7      | Shut Down      |

**Example Statements**

```
OUTPUT @E5270;"*STB?"
ENTER @E5270;A
```

## TDI

Forces current and returns the time data from when the timer is cleared until output is started. This command is effective for ASCII data output format. Refer to “FMT” on page 4-58.

### Execution Conditions

The CN command has been executed for the specified channel.

If the voltage compliance is greater than  $\pm 42$  V, the interlock circuit must be shorted.

### Syntax

```
TDI chnum,irange,current[,Vcomp[,comp_polarity[,vrange]]]
```

### Parameters

***chnum*** : Source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***irange***: Ranging type for current output. Integer expression. The output range will be set to the minimum range that covers *current* value. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-5 on page 4-12.

***current***: Output current value (in A). Numeric expression. See Table 4-7 on page 4-14.

0 to  $\pm 0.1$ , 0 to  $\pm 0.2$  for MPSMU of E5260 series, or 0 to  $\pm 1$  for HPSMU

***Vcomp***: Voltage compliance value (in V). Numeric expression. See Table 4-7 on page 4-14. If you do not specify this parameter, *Vcomp* is set to the previous setting.

***comp\_polarity***: Polarity of voltage compliance. Numeric expression.

**0**: Auto mode (default setting). The compliance polarity is automatically set to the same polarity as *current*, regardless of the specified *Vcomp*. If *current*=0 A, the polarity is set to positive.

**1**: Manual mode. Uses the polarity of *Vcomp* you specified.

***vrange***: Voltage compliance ranging type. Integer expression. The compliance range will be set to the minimum range that covers *Vcomp* value. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-4 on page 4-12.

### Example Statements

```
OUTPUT @E5270;"TDI 1,0,1E-6"
ENTER @E5270 USING "#,5X,13D,X";Time
```

## TDV

Forces voltage and returns the time data from when the timer is cleared until output is started. This command is effective for ASCII data output format. Refer to “FMT” on page 4-58.

### Execution Conditions

The CN command has been executed for the specified channel.

If the output voltage is greater than  $\pm 42$  V, the interlock circuit must be shorted.

### Syntax

TDV *chnum*, *vrange*, *voltage* [, *Icomp* [, *comp\_polarity* [, *irange* ]]

### Parameters

***chnum*** : Source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***vrange***: Ranging type for voltage output. Integer expression. The output range will be set to the minimum range that covers *voltage* value. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-4 on page 4-12.

***voltage***: Output voltage value (in V). Numeric expression. See Table 4-6 on page 4-13.

0 to  $\pm 100$  or 0 to  $\pm 200$  for HPSMU

***Icomp***: Current compliance value (in A). Numeric expression. See Table 4-6 on page 4-13. If you do not set *Icomp*, the previous value is used. 0 A is not allowed for *Icomp*.

***comp\_polarity***: Polarity of current compliance. Integer expression.

**0**: Auto mode (default setting). The compliance polarity is automatically set to the same polarity as *voltage*, regardless of the specified *Icomp*. If *voltage*=0 V, the polarity is set to positive.

**1**: Manual mode. Uses the polarity of *Icomp* you specified.

***irange***: Current compliance ranging type. Integer expression. The compliance range will be set to the minimum range that covers *Icomp* value. For the limited auto ranging, the instrument never uses the range less than the specified range. See Table 4-5 on page 4-12.

### Example Statements

```
OUTPUT @E5270;"TDV 1,0,20,1E-6,0,15"
ENTER @E5270 USING "#,5X,13D,X";Time
```

## TGMO

The TGMO command selects the edge trigger or the gate trigger for the Step Measurement Completion trigger output set by the `TGP port, 2, polarity, 3` command. See Figure 4-2.

This command is available for the staircase sweep and multi channel sweep measurements.

### Syntax

`TGMO mode`

### Parameters

**mode :** Edge trigger or gate trigger. Integer expression.

1: Edge trigger (initial setting).

2: Gate trigger.

### Example Statements


```
OUTPUT @E5270;"TGMO 2"
```

### See Also

“TGP” and “TGPC”

Figure 4-2

Trigger Output Example, Staircase Sweep Measurement, Negative Logic

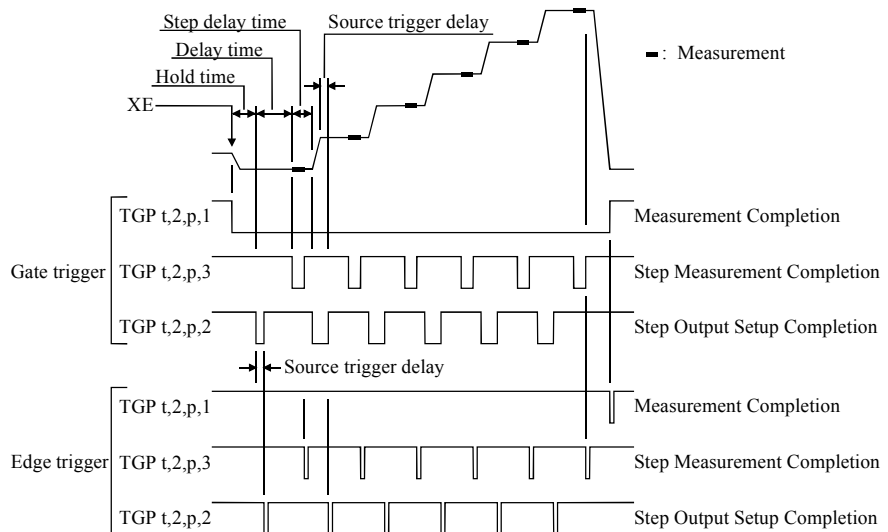

## TGP

The TGP command enables the trigger function for the terminal specified by the *port* parameter. For the trigger function, refer to “Trigger Function” on page 2-30.

### Syntax

TGP *port, terminal, polarity[, type]*

### Parameters

- port*** : Trigger port number. Integer expression. -1, -2, or 1 to 16.
- 1: Ext Trig In terminal.
  - 2: Ext Trig Out terminal.
  - 1 to 16: Port 1 to 16 of the digital I/O terminal.
- terminal*** : Terminal type. Integer expression. 1 or 2.
- 1: Trigger input. Not available for *port*=-2.
  - 2: Trigger output. Not available for *port*=-1.
- polarity*** : Trigger logic. Integer expression. 1 or 2.
- 1: Positive logic.
  - 2: Negative logic.
- type*** : Trigger type. Integer expression. 0, 1, 2, or 3. Selects the function of the trigger port. See Table 4-12.
- If this parameter is not specified, *type* is set to 0.

### Remarks

The function of *type*=0 is effective for all trigger ports regardless of the *type* value. Then the PA and WS commands are used for the Ext Trig In terminal, and the OS command is used for the Ext Trig Out terminal. Also the PAX and WSX commands are used for the trigger input ports set by the TGP command, and the OSX command is used for the trigger output ports set by the TGP command.

*type*=1 to 3 is available for a port only. If you send the command with the same *type* more than once, only the last command is effective. *type*=0 is set for another ports.

If you send the TGP command with *terminal*=1 and *port*=1 to 16, the signal level of the trigger input terminal is set to physical high.

If you send the TGP command with *terminal*=2, the signal level of the trigger output terminal is set to logical low.

**Table 4-12**      **Trigger Type**

| <i>type</i>    | <i>terminal</i> | <b>Description</b>                                                                                                                                                                                                                                                                                                          |
|----------------|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0              | 1               | When a trigger is received, the E5260/E5270 recovers from the wait state set by the PA, PAX, WS, or WSX command.                                                                                                                                                                                                            |
|                | 2               | The E5260/E5270 sends a trigger by the OS or OSX command.                                                                                                                                                                                                                                                                   |
| 1 <sup>a</sup> | 1               | Start measurement trigger<br>When a trigger is received, the E5260/E5270 starts the measurement.                                                                                                                                                                                                                            |
|                | 2               | Measurement completion trigger<br>The E5260/E5270 sends a trigger after measurement.                                                                                                                                                                                                                                        |
| 2              | 1               | Start step output setup trigger<br>When a trigger is received, the E5260/E5270 starts the output setup at each sweep step or the pulsed output setup. This function is available for the staircase sweep, pulsed sweep, staircase sweep with pulsed bias, multi channel sweep, or pulsed spot measurement.                  |
|                | 2               | Step output setup completion trigger<br>The E5260/E5270 sends a trigger when the output setup is completed at each sweep step or the pulsed output setup is completed. This function is available for the staircase sweep, pulsed sweep, staircase sweep with pulsed bias, multi channel sweep, or pulsed spot measurement. |
| 3              | 1               | Start step measurement trigger<br>When a trigger is received, the E5260/E5270 starts the measurement at each sweep step. This function is available for the staircase sweep or multi channel sweep measurement.                                                                                                             |
|                | 2               | Step measurement completion trigger<br>The E5260/E5270 sends a trigger after measurement at each sweep step. This function is available for the staircase sweep or multi channel sweep measurement.                                                                                                                         |

a. TM3 command must be entered to use this trigger type.

**Example Statements**

```
OUTPUT @E5270;"TGP 1,1,1,2"
```

**See Also**

See Figure 4-2 on page 4-112 for a trigger output example and Figure 4-3 on page 4-116 for a trigger input example.



## TGPC

The TGPC command clears the trigger setting of the specified ports.

### Syntax

```
TGPC [port [, port... [, port]...]]
```

A maximum of 18 ports can be set. If no port is specified, the TGPC command clears the setting of the all ports; Ext Trig In, Ext Trig Out, and digital I/O ports 1 to 16.

### Parameters

***port*** : Trigger port number. Integer expression. -1, -2, or 1 to 16.

- 1: Ext Trig In terminal.
- 2: Ext Trig Out terminal.
- 1 to 16: Port 1 to 16 of the digital I/O terminal.

### Remarks

The TGPC command sets the trigger ports as shown below.

**Ext Trig In** Same as after TGP -1,1,2,0 command execution.

**Ext Trig Out** Same as after TGP -2,2,2,0 command execution.

**Digital I/O Ports** No trigger function is available. The ERS? and ERC commands are available for the port control.

This is not same as the condition set by the \*RST command that sets the ports as shown below.

**Ext Trig In** Same as after TGP -1,1,2,1 command execution.

**Ext Trig Out** Same as after TGP -2,2,2,1 command execution.

**Digital I/O Ports** No trigger function is available. The ERS? and ERC commands are available for the port control.

### Example Statements

```
OUTPUT @E5270;"TGPC -1,-2,1,2"
```

### See Also

“TGP”

## TGSI

The TGSI command selects Case 1 or Case 2 effective for the Start Step Output Setup trigger input set by the `TGP port, 1, polarity, 2` command.

This command is available for the staircase sweep, pulsed spot, pulsed sweep, staircase sweep with pulsed bias, and multi channel sweep measurements.

### Syntax

`TGSI mode`

### Parameters

**mode :** Case 1 or Case 2. Integer expression. See Figure 4-3.

1: Case 1 (initial setting).

2: Case 2.

Case 1 waits for a trigger for the first sweep step, and does not wait for a trigger for the source output after sweep.

Case 2 does not wait for a trigger for the first sweep step, and waits for a trigger for the source output after sweep.

### Example Statements


```
OUTPUT @E5270;"TGSI 2"
```

### See Also

“TGP” and “TGPC”

Figure 4-3

Trigger Input Example, Staircase Sweep Measurement, Negative Logic

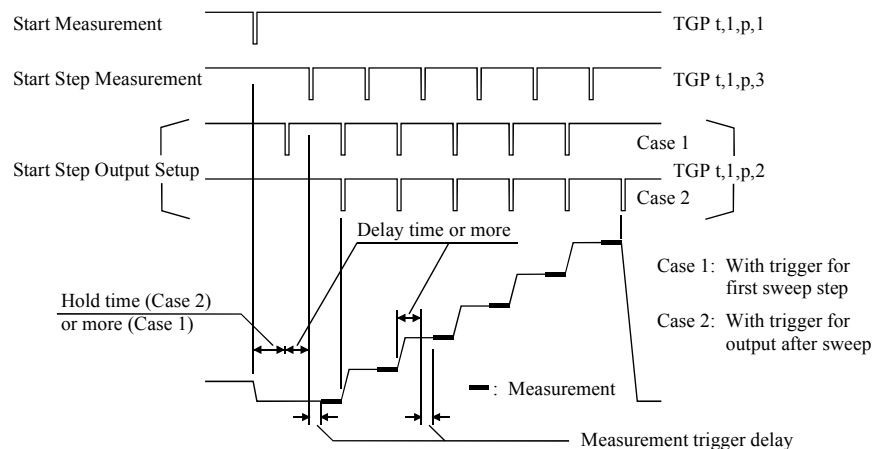

## TGSO

The TGSO command selects the edge trigger or the gate trigger for the Step Output Setup Completion trigger output set by the TGP *port, 2, polarity, 2* command. See Figure 4-2 on page 4-112

This command is available for the staircase sweep, pulsed spot, pulsed sweep, staircase sweep with pulsed bias, and multi channel sweep measurements.

|                           |                                                                                                                                                 |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>             | TGSO <i>mode</i>                                                                                                                                |
| <b>Parameters</b>         | <p><b><i>mode</i></b> : Edge trigger or gate trigger. Integer expression.</p> <p>1: Edge trigger (initial setting).</p> <p>2: Gate trigger.</p> |
| <b>Example Statements</b> | OUTPUT @E5270;"TGSO 2"                                                                                                                          |
| <b>See Also</b>           | “TGP” and “TGPC”                                                                                                                                |

## TGXO

The TGXO command selects the edge trigger or the gate trigger for the Measurement Completion trigger output set by the TGP *port, 2, polarity, 1* command. See Figure 4-2 on page 4-112

|                           |                                                                                                                                                 |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>             | TGXO <i>mode</i>                                                                                                                                |
| <b>Parameters</b>         | <p><b><i>mode</i></b> : Edge trigger or gate trigger. Integer expression.</p> <p>1: Edge trigger (initial setting).</p> <p>2: Gate trigger.</p> |
| <b>Example Statements</b> | OUTPUT @E5270;"TGXO 2"                                                                                                                          |
| <b>See Also</b>           | “TGP” and “TGPC”                                                                                                                                |

## Command Reference

### TI

## TI

The TI command performs the high speed spot measurement, and returns the measurement data. The command performs a current measurement regardless of the SMU operation mode, trigger mode (TM command), and measurement mode (MM command).

### Execution Conditions

CN command has been executed for the specified channel.

### Syntax

```
TI chnum[, range]
```

### Parameters

***chnum*** : Measurement channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***range*** : Measurement range or ranging type. Integer expression. If you select the fixed range, the instrument performs measurement by using the specified range. For the auto or limited auto ranging, the measurement range will be set to the minimum range that covers the measured values. However, the instrument never uses the range less than the specified range for the limited auto ranging. See Table 4-3 on page 4-11.

If you do not specify the *range* parameter for voltage output channels, the channel uses the minimum range that covers the compliance value.

The *range* parameter is meaningless for current output channels. The measurement ranging type is always same as the output ranging type.

### Example Statements

```
OUTPUT @E5270;"TI 1"  
ENTER @E5270 USING "#,3X,12D,X";ldata
```

## TM

The TM command specifies how events are effective for the following actions:

- Releasing the E5260/E5270 from the paused status set by the PA or PAX command
- Starting the measurement except for high speed spot measurement (when the E5260/E5270 is not in the paused status set by the PA, PAX, WS, or WSX command)

### Syntax

TM *mode*

### Parameters

**mode :** Event mode. Integer expression. See below.

| <i>mode</i> | Events                                                                                         |
|-------------|------------------------------------------------------------------------------------------------|
| 1           | XE command and GPIB GET (Group Execute Trigger, TRIGGER command in HP BASIC). Initial setting. |
| 2           | XE command                                                                                     |
| 3           | XE command and external trigger                                                                |
| 4           | XE command and MM command (automatic trigger after the MM command execution)                   |

To enable the trigger function set by the TGP *port,terminal,polarity,1* command, the *mode* value must be 3.

### Remarks

In the TM3 event mode, if the E5260/E5270 is not in the wait status set by the PA, PAX, WS, or WSX command, the E5260/E5270 can start the measurement by an external trigger input. After measurement, the E5260/E5270 sends a trigger to a trigger output terminal. In the initial setting, you can use the Ext Trig In and Out terminals. To use the digital I/O port, enter the TGP command to set the trigger input or output terminal.

To set the trigger logic (initial value: negative), send the TGP command for the trigger input terminal.

### Example Statements

```
OUTPUT @E5270;"TM 1"
OUTPUT @E5270;"TM 3"
```

### See Also

“PA”, “PAX”, “TGP”, “TGPC”, “WS”, and “WSX”

## TSC

The TSC command enables or disables the time stamp function.

This command is effective for ASCII data output format. Refer to “FMT” on page 4-58.

### Execution Conditions

Time stamp function is not available for the following measurement modes:

- Quasi-pulsed spot measurement (MM 9)
- Linear search measurement (MM 14)
- Binary search measurement (MM 15)

### Syntax

TSC *mode*

### Parameters

**mode :** Time stamp function mode. Integer expression.

| <i>mode</i> | Description                                        |
|-------------|----------------------------------------------------|
| 0           | Disables the time stamp function. Initial setting. |
| 1           | Enables the time stamp function.                   |

When the function is enabled, the E5260/E5270 returns the time data with the measurement data. The time data is the time from when the timer is cleared until the measurement is started. Refer to “Data Output Format” on page 1-21.

### Remarks

To read the time data with the best resolution (100  $\mu$ s), the timer must be cleared every 100 sec or less for the FMT1, 2, or 5 data output format, or every 1000 sec or less for the FMT 11, 12, 15, 21, 22, or 25 data output format.

### Example Statements

```
OUTPUT @E5270;"TSC 1"
```

## TSQ

The TSQ command returns the time data from when the TSR command is sent until this command is sent. The time data will be put in the data output buffer as same as the measurement data.

This command is effective for all measurement modes, regardless of the TSC setting.

This command is effective for ASCII data output format. Refer to “FMT” on page 4-58.

### Syntax

TSQ

### Example Statements

```
OUTPUT @E5270;"TSQ"
ENTER @E5270 USING "#,5X,13D,X";Time
PRINT "Time=";Time;"s"
```

## TSR

The TSR command clears the timer count.

This command is effective for all measurement modes, regardless of the TSC setting.

This command is effective for ASCII data output format. Refer to “FMT” on page 4-58.

### Syntax

TSR

### Remarks

To read the time data with the best resolution (100  $\mu$ s), the timer must be cleared every 100 sec or less for the FMT1, 2, or 5 data output format, or every 1000 sec or less for the FMT 11, 12, 15, 21, 22, or 25 data output format.

### Example Statements

```
OUTPUT @E5270;"TSR"
```

## Command Reference

### \*TST?

#### \*TST?

The \*TST? query command performs the self-test and self-calibration, and returns the results in ASCII format. Modules that fail the self-test are disabled, and can only be enabled by the RCV command.

After the \*TST? command, read the results soon.

#### Execution Conditions

No module may be in the HIGH VOLTAGE state (forcing more than  $\pm 42$  V, or voltage compliance set to more than  $\pm 42$  V).

To perform the self-test correctly, the measurement terminals should be opened.

#### Syntax

\*TST? [*slotnum*]

#### Parameters

**slotnum** : Specifies the module to test. Integer expression. 0 to 9.

0: Mainframe and all modules. Default setting.

1 to 8: Module installed in the slot specified by *slotnum*.

9: Mainframe.

For HPSMU that uses two slots, set the greater slot number. For example, if it is installed in slot 3 and 4, *slotnum* must be 4.

If *slotnum* specifies the slot that installs no module, this command causes an error.

#### Query Response

*results*<CR/LF^EOI>

*results* returns the sum of the following values corresponding to the failures.

| <i>results</i> | Description                  | <i>results</i> | Description           |
|----------------|------------------------------|----------------|-----------------------|
| 0              | Passed. No failure detected. | 16             | Slot 5 module failed. |
| 1              | Slot 1 module failed.        | 32             | Slot 6 module failed. |
| 2              | Slot 2 module failed.        | 64             | Slot 7 module failed. |
| 4              | Slot 3 module failed.        | 128            | Slot 8 module failed. |
| 8              | Slot 4 module failed.        | 256            | Mainframe failed.     |

#### Example Statements

```
OUTPUT @E5270;"*TST?"  
ENTER @E5270;A
```



## TTI

The TTI command performs the high speed spot measurement, and returns the measurement data and the time data for the time from when the timer is cleared until the measurement is started. The command performs a current measurement regardless of the SMU operation mode, trigger mode (TM command), and measurement mode (MM command).

This command is effective for ASCII data output format. Refer to “FMT” on page 4-58.

### Execution Conditions

CN command has been executed for the specified channel.

### Syntax

TTI *chnum*[, *range*]

### Parameters

***chnum*** : Measurement channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***range*** : Measurement range or ranging type. Integer expression. If you select the fixed range, the instrument performs measurement by using the specified range. For the auto or limited auto ranging, the measurement range will be set to the minimum range that covers the measured values. However, the instrument never uses the range less than the specified range for the limited auto ranging. See Table 4-3 on page 4-11.

If you do not specify the *range* parameter for voltage output channels, the channel uses the minimum range that covers the compliance value.

The *range* parameter is meaningless for current output channels. The measurement ranging type is always same as the output ranging type.

### Remarks

To read the time data with the best resolution (100  $\mu$ s), the timer must be cleared every 100 sec or less for the FMT1, 2, or 5 data output format, or every 1000 sec or less for the FMT 11, 12, 15, 21, 22, or 25 data output format.

### Example Statements

```
OUTPUT @E5270;"TTI 1"
ENTER @E5270 USING "#,5X,13D,X";Time
ENTER @E5270 USING "#,5X,13D,X";Idata
PRINT "Data=";Idata*1000;"mA, at";Time;"s"
```

## Command Reference

### TTV

## TTV

The TTV command performs the high speed spot measurement, and returns the measurement data and the time data for the time from when the timer is cleared until the measurement is started. The command performs a voltage measurement regardless of the SMU operation mode, trigger mode (TM command), and measurement mode (MM command).

This command is effective for ASCII data output format. Refer to “FMT” on page 4-58.

#### Execution Conditions

CN command has been executed for the specified channel.

#### Syntax

TTV *chnum*[, *range*]

#### Parameters

***chnum*** : Measurement channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***range*** : Measurement range or ranging type. Integer expression. If you select the fixed range, the instrument performs measurement by using the specified range. For the auto or limited auto ranging, the measurement range will be set to the minimum range that covers the measured values. However, the instrument never uses the range less than the specified range for the limited auto ranging. See Table 4-2 on page 4-10.

If you do not specify the *range* parameter for current output channels, the channel uses the minimum range that covers the compliance value.

The *range* parameter is meaningless for voltage output channels. The measurement ranging type is always same as the output ranging type.

#### Remarks

To read the time data with the best resolution (100  $\mu$ s), the timer must be cleared every 100 sec or less for the FMT1, 2, or 5 data output format, or every 1000 sec or less for the FMT 11, 12, 15, 21, 22, or 25 data output format.

#### Example Statements

```
OUTPUT @E5270;"TTV 1"  
ENTER @E5270 USING "#,5X,13D,X";Time  
ENTER @E5270 USING "#,5X,13D,X";Vdata  
PRINT "Data=";Vdata*1000;"mV, at";Time;"s"
```

## TV

The TV command performs the high speed spot measurement, and returns the measurement data. The command performs a voltage measurement regardless of the SMU operation mode, trigger mode (TM command), and measurement mode (MM command).

### Execution Conditions

CN command has been executed for the specified channel.

### Syntax

```
TV chnum[, range]
```

### Parameters

***chnum*** : Measurement channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***range*** : Measurement range or ranging type. Integer expression. If you select the fixed range, the instrument performs measurement by using the specified range. For the auto or limited auto ranging, the measurement range will be set to the minimum range that covers the measured values. However, the instrument never uses the range less than the specified range for the limited auto ranging. See Table 4-2 on page 4-10.

If you do not specify the *range* parameter for current output channels, the channel uses the minimum range that covers the compliance value.

The *range* parameter is meaningless for voltage output channels. The measurement ranging type is always same as the output ranging type.

### Example Statements

```
OUTPUT @E5270;"TV 1"  
ENTER @E5270 USING "#, 3X, 12D, X";Vdata
```

## Command Reference

### UNT?

## UNT?

This query command returns the model and revision numbers of all modules in the E5260/E5270, and stores the results in the E5260/E5270 output data buffer (query buffer).

### Syntax

UNT? [*mode*]

### Parameters

***mode*** : Response type. Integer expression.

0: Returns information for all modules.

1: Returns information for all modules with control unit.

If you do not specify this parameter, the *mode* is set to 0.

### Query Response

```
part number of control unit,revision number of control unit;  
model number at slot 1,revision number at slot 1;  
.....  
model number at slot 8,revision number at slot 8<CR/LF^EOI>
```

For *mode*=0, ignore the first line shown above. The E5260/E5270 does not return the information of the control unit.

### Example Statements

```
DIM A$[50]  
OUTPUT @E5270;"UNT?"  
ENTER @E5270;A$
```

## VAR

This command defines the Agilent E5260/E5270 internal variable, and sets the value. The variable name is automatically assigned by using the parameters you specify.

|                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>     | <code>VAR <i>type</i>, <i>n</i>, <i>value</i></code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Parameters</b> | <p><b><i>type</i></b> : Variable type. Integer expression. 0 or 1.</p> <p>0: Integer variable. Variable name will be %In.</p> <p>1: Real variable. Variable name will be %Rn.</p> <p><b><i>n</i></b> : Number <i>n</i> added to the variable name. Integer expression. 0 to 99.</p> <p><b><i>value</i></b> : Value entered in the variable. Numeric value. The value must be 6 digits or less. Available values are as follows:</p> <p>For integer variables: -999999 to 999999</p> <p>For real variables: -9999.9 to 9999.9</p> |

### Example Statements

```
OUTPUT @E5270;"ST1;CN1;DV1,0,%R99,1E-4;TI1,0"
OUTPUT @E5270;"END"
OUTPUT @E5270;"VAR 1,99,2.5"
This example sets 2.5 to the real variable %R99.
```

## VAR?

Returns the value of the variable set by the VAR command.

|                       |                                                                                                                                                                                                                                                                           |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>         | <code>VAR? <i>type</i>, <i>n</i></code>                                                                                                                                                                                                                                   |
| <b>Parameters</b>     | <p><b><i>type</i></b> : Variable type. Integer expression. 0 or 1.</p> <p>0: Integer variable. For the variable %In.</p> <p>1: Real variable. For the variable %Rn.</p> <p><b><i>n</i></b> : Number <i>n</i> added to the variable name. Integer expression. 0 to 99.</p> |
| <b>Query Response</b> | <code><i>value</i>&lt;CR/LF^EOI&gt;</code>                                                                                                                                                                                                                                |

### Example Statements

```
OUTPUT @E5270;"VAR? 1,99"
ENTER @E5270;A$
This example reads the %R99 real variable value.
```

## WAT

This command sets the source wait time and the measurement wait time as shown in Figure 4-4. The wait time is given by the following formula:

$$\text{wait time} = N \times \text{initial wait time} + \text{offset}$$

where *initial wait time* is the time the Agilent E5260/E5270 initially sets and you cannot change. The *initial source wait time* is not same as the *initial measurement wait time*. The wait time settings are effective for all modules.

### Syntax

WAT *type*, *N*[, *offset*]

### Parameters

***type*** Type of the wait time. Integer expression. 1 or 2.  
 1: Source wait time (before changing the output value).  
 2: Measurement wait time (before starting the measurement).


***N*** Coefficient for *initial wait time*. Numeric expression.  
 0 to 10, resolution 0.1. Initial value is 1.

***offset*** Offset for the wait time. Numeric expression.  
 0 to 1 sec, resolution 0.0001. Default value is 0.

### Example Statements

```
OUTPUT @E5270;"WAT 1, .7"  
OUTPUT @E5270;"WAT 2, 0, .01"
```

Figure 4-4 Source/Measurement Wait Time

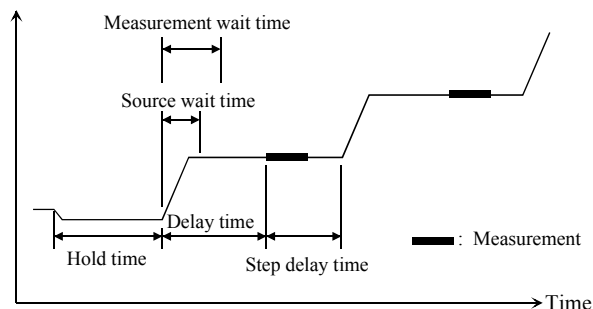

### NOTE

The wait time can be ignored if it is shorter than the delay time.

---

**NOTE**

It is not easy to determine the best wait time. If you specify it too short, the measurement may start before device characteristics stable. If too long, time will be wasted.

The initial wait time may be too short for measurements of high capacitance or slow response devices. Then set the wait time longer.

For measurements of low capacitance or fast response devices, if measurement speed has top priority or is more important than reliability and accuracy, set the wait time shorter.

---

## WI

The WI command specifies the staircase sweep current source and its parameters. This command also clears the WV, WSV, WSI, and WNX command settings.

This command setting is cleared by the WV command.

### Syntax

- For Staircase Sweep Measurement:

```
WI chnum, mode, range, start, stop, step[, Vcomp[, Pcomp]]
```

- For Staircase Sweep with Pulsed Bias Measurement:

```
WI chnum, mode, range, start, stop, step[, Vcomp]
```

### Parameters

***chnum*** : Sweep source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***mode*** : Sweep mode. Integer expression. Only linear sweep (*mode*=1 or 3) is available for the staircase sweep with pulsed bias.

1: Linear sweep (single stair, start to stop.)

2: Log sweep (single stair, start to stop.)

3: Linear sweep (double stair, start to stop to start.)

4: Log sweep (double stair, start to stop to start.)

***range*** : Ranging type for staircase sweep current output. Integer expression. See Table 4-5 on page 4-12.

For the linear sweep, the E5260/E5270 uses the minimum range that covers both *start* and *stop* values to force the staircase sweep current.

For the log sweep, the E5260/E5270 uses the minimum range that covers the output value, and changes the output range dynamically.

For the limited auto ranging, the instrument never uses the range less than the specified range.

***start, stop*** : Start or stop current (in A). Numeric expression. See Table 4-7 on page 4-14. *start* and *stop* must have the same polarity for *log* sweep.

0 to  $\pm 0.1$ , 0 to  $\pm 0.2$  for MPSMU of E5260 series, or 0 to  $\pm 1$  for HPSMU



- step*** : Number of steps for staircase sweep. Numeric expression. 1 to 1001.  
The E5260/E5270 can store approximately 16000 measurement data in ASCII format with header without source data, or approximately 64000 measurement data in binary format.
- Vcomp*** : Voltage compliance (in V). Numeric expression. See Table 4-7.  
If you do not set *Vcomp*, the previous value is used.  
Compliance polarity is automatically set to the same polarity as the output value, regardless of the specified *Vcomp*. If the output value is 0, the polarity is set to positive.  
If you set *Pcomp*, the maximum *Vcomp* value for the module is allowed, regardless of the output range setting.  
For the log sweep and without *Pcomp*, set the value available for the minimum range that covers *start* and *stop* values.
- Pcomp*** : Power compliance (in W). Numeric expression. Resolution: 0.001 W. If the *Pcomp* value is not entered, the power compliance is not set.  
0.001 to 2, 0.001 to 4 for MPSMU of E5260 series, or 0.001 to 20 for HPSMU

### Example Statements

```
OUTPUT @E5270;"WI 1,1,11,0,0.1,100,10,1"
OUTPUT @E5270;"WI 2,2,15,1E-6,0.1,100"
```

## WM

The WM command enables or disables the automatic abort function for the staircase sweep sources and the pulsed sweep source. The automatic abort function stops the sweep when one of the following conditions occurs:

- Compliance on the measurement channel
- Compliance on the non-measurement channel
- Overflow on the AD converter
- Oscillation on any channel

This command also sets the post sweep condition for the sweep sources. After the sweep measurement is normally completed, the staircase sweep sources force the value specified by the *post* parameter, and the pulsed sweep source forces the pulse base value.

If the sweep is stopped by the automatic abort function, the staircase sweep sources force the start value, and the pulsed sweep source forces the pulse base value after sweep.

### Syntax

```
WM abort[,post]
```

### Parameters

**abort** : Automatic sweep abort function. Integer expression.

1: Disables the function. Initial setting.

2: Enables the function.

**post** : Post sweep condition. Integer expression.

1: Staircase sweep sources force the start value. Default setting.

2: Staircase sweep sources force the stop value.

If this parameter is not specified, the staircase sweep sources force the start value.

### Output Data

The E5260/E5270 returns the data measured before the an abort condition is detected. Dummy data 199.999E+99 will be returned for the data after abort.

### Example Statements

```
OUTPUT @E5270;"WM 2"
```

```
OUTPUT @E5270;"WM 2,2"
```

## WNU?

The WNU? query command returns the number of sweep steps specified by the sweep command (WI, WV, PWI or PWV), and stores the results in the output data buffer (query buffer).

### Execution Conditions

If you want to know the number of steps for a pulsed sweep, you must execute an “MM 4” command before using this command, otherwise the number of steps for the staircase sweep is reported.

### Syntax

WNU?

### Query Response

*number of sweep steps*<CR/LF^EOI>

### Example Statement

```
OUTPUT @E5270;"WNU?"  
ENTER @E5270;A
```

## WNX

The WNX command specifies the staircase sweep source (synchronous sweep source) that will be synchronized with the staircase sweep source (primary sweep source) set by the WI or WV command.

You can use the maximum of eight sweep sources. There is no restrictions for the output mode (voltage or current) of the sweep sources.

### Execution Conditions

Available only for the multi channel sweep measurement (MM 16).

This command must be entered after the WI or WV command that clears the WNX command setting.

### Syntax

```
WNX N, chnum, mode, range, start, stop[, comp[, Pcomp]]
```

### Parameters

***N*** : Sweep source number. Integer expression. 2 to 8. Sweep sources start output simultaneously or in number order. See Remarks below.

***chnum*** : Sweep source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***mode*** : Sweep source type. Integer expression. 1 or 2.

1: Voltage sweep source.

2: Current sweep source.

Sweep mode, linear or log, is set by the WI or WV command.

***range*** : Ranging type for synchronous sweep output. Integer expression.

- For voltage source (*mode*=1): See Table 4-4 on page 4-12.

The E5260/E5270 usually uses the minimum range that covers both *start* and *stop* values to force the staircase sweep voltage. However, if you set *Pcomp* and if the following formulas are true, the E5260/E5270 changes the output range dynamically (20 V range or above). Range changing may cause 0 V output in a moment. For the limited auto ranging, the instrument never uses the range less than the specified range.

- $comp > \text{maximum current for the output range}$
- $Pcomp/output\ value > \text{maximum current for the output range}$

- For current source (*mode=2*): See Table 4-5 on page 4-12.

For the linear sweep, the E5260/E5270 uses the minimum range that covers both *start* and *stop* values to force the staircase sweep current.

For the log sweep, the E5260/E5270 changes the output range dynamically.

For the limited auto ranging, the instrument never uses the range less than the specified range.

***start, stop*** : Start or stop value (in V or A). Numeric expression.

- For voltage source (*mode=1*): See Table 4-6 on page 4-13.

0 to  $\pm 100$  or 0 to  $\pm 200$  for HPSMU

- For current source (*mode=2*): See Table 4-7 on page 4-14.

0 to  $\pm 0.1$ , 0 to  $\pm 0.2$  for MPSMU of E5260 series, or 0 to  $\pm 1$  for HPSMU

*start* and *stop* must have the same polarity for *log* sweep.

Sweep mode, linear or log, and the number of sweep steps are set by the WI or WV command.

***comp*** : Compliance (in A or V). Numeric expression. If you do not set *comp*, the previous value is used.

If you set *Pcomp*, the maximum *comp* value for the module is allowed, regardless of the output range setting.

Compliance polarity is automatically set to the same polarity as the output value, regardless of the specified *comp*. If the output value is 0, the polarity is set to positive.

- For voltage source (*mode=1*): See *Icomp* in Table 4-6 on page 4-13.

- For current source (*mode=2*): See *Vcomp* in Table 4-7 on page 4-14.

For the log sweep and without *Pcomp*, set the value available for the minimum range that covers *start* and *stop* values.

***Pcomp*** : Power compliance (in W). Numeric expression. Resolution: 0.001 W. If the *Pcomp* value is not entered, the power compliance is not set.

0.001 to 2, 0.001 to 4 for MPSMU of E5260 series, or 0.001 to 20 for HPSMU

## Command Reference

### WNX

#### Remarks

To set multiple sweep sources, enter the WI or WV command at first, and enter the WNX command once or more. Then the *N* value and the *chnum* value must be unique for each WNX command. If you set the value used to the previous command, the previous command setting is cleared, and the last command setting is effective.

Sweep sources simultaneously start output by a trigger such as the XE command. However, if a sweep source sets power compliance or forces logarithmic sweep current, the sweep sources start output in the order specified by the *N* value. Then the first output is forced by the channel set by the WI or WV command.

If you use multiple measurement channels, the channels that use the high-speed A/D converter with the fixed ranging mode start measurement simultaneously, then other channels start measurement in the order defined in the MM command.

#### Example Statements

```
OUTPUT @E5270;"WNX 2,3,1,12,0,3,1E-3,2E-3"
```

```
OUTPUT @E5270;"WNX 3,4,2,0,1E-3,1E-2,3"
```

## WS

The WS command causes the E5260/E5270 to enter a wait state until the E5260/E5270 receives an external trigger from the Ext Trig In terminal. To set the trigger logic (initial value: negative), send the TGP command for the Ext Trig In terminal.

To end a wait state before the trigger, execute the AB or \*RST command.

### Syntax

WS [*mode*]

### Parameters

**mode :** Waiting mode. Integer expression. 1 or 2.

If this parameter is not specified, *mode* is set to 1.

| <i>mode</i> | Description                                                                                                                                                 |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1           | Continues the operation if an external trigger was already received. Otherwise, the E5260/E5270 immediately goes into a wait state for an external trigger. |
| 2           | In any condition, the E5260/E5270 immediately goes into a wait state for an external trigger.                                                               |

### Remarks

The E5260/E5270 checks its trigger flag to confirm the present trigger status, received or none. To clear the trigger flag:

- Enter the \*RST or device clear command (HP BASIC CLEAR statement).
- Enter the TM3 command.
- Enter the TM1, TM2, or TM4 command to change the mode from TM3.
- Enter the OS command.
- Trigger the E5260/E5270 to start measurement via the Ext Trig In terminal.
- Trigger the E5260/E5270 to recover from wait state set by the WS command via the Ext Trig In terminal.

### Example Statements

```
OUTPUT @E5270;"WS 2"
```

## WSI

The WSI command specifies the staircase sweep current source (synchronous sweep source) that will be synchronized with the staircase sweep current source (primary sweep source) set by the WI command, or the pulsed sweep current source (primary sweep source) set by the PWI command.

### Execution Conditions

Available for the staircase sweep (MM 2), pulsed sweep (MM 4), or staircase sweep with pulsed bias (MM5) measurement.

This command must be entered after the WI or PWI command that clears the WSI command setting. The WV and PWV command also clears the WSI setting.

### Syntax

```
WSI chnum, range, start, stop[, Vcomp[, Pcomp]]
```

### Parameters

***chnum*** : Synchronous sweep source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***range*** : Ranging type for synchronous sweep current output. Integer expression. See Table 4-5 on page 4-12.

For the linear sweep, the E5260/E5270 uses the minimum range that covers both *start* and *stop* values to force the staircase sweep current.

For the log sweep, the E5260/E5270 uses the minimum range that covers the output value, and changes the output range dynamically.

Sweep mode, linear or log, is set by the WI or PWI command.

For the limited auto ranging, the instrument never uses the range less than the specified range.

***start*, *stop*** : Start or stop current (in A). Numeric expression. See Table 4-7 on page 4-14. *start* and *stop* must have the same polarity for *log* sweep. Sweep mode, linear or log, and the number of sweep steps are set by the WI or PWI command.

0 to  $\pm 0.1$ , 0 to  $\pm 0.2$  for MPSMU of E5260 series, or 0 to  $\pm 1$  for HPSMU

***Vcomp*** : Voltage compliance (in V). Numeric expression. See Table 4-7 on page 4-14. If you do not set *Vcomp*, the previous value is used.

Compliance polarity is automatically set to the same polarity as the output value, regardless of the specified *Vcomp*. If the output value is 0, the compliance polarity is positive.



If you set *Pcomp*, the maximum *Vcomp* value for the module is allowed, regardless of the output range setting.

For the log sweep and without *Pcomp*, set the value available for the minimum range that covers *start* and *stop* values.

***Pcomp*** : Power compliance (in W). Numeric expression. Resolution: 0.001 W. If the *Pcomp* value is not entered, the power compliance is not set.

0.001 to 2, 0.001 to 4 for MPSMU of E5260 series, or 0.001 to 20 for HPSMU

**Example  
Statements**

```
OUTPUT @E5270;"WSI 1,16,0,4E-5"
```

```
OUTPUT @E5270;"WSI 2,0,1E-3,1E-2,5,5E-2"
```

## WSV

The WSV command specifies the staircase sweep voltage source (synchronous sweep source) that will be synchronized with the staircase sweep voltage source (primary sweep source) set by the WV command, or the pulsed sweep voltage source (primary sweep source) set by the PWV command.

### Execution Conditions

Available for the staircase sweep (MM 2), pulsed sweep (MM 4), or staircase sweep with pulsed bias (MM5) measurement.

This command must be entered after the WV or PWV command that clears the WSV command setting. The WI and PWI command also clears the WSV setting.

### Syntax

```
WSV chnum, range, start, stop[, Icomp[, Pcomp]]
```

### Parameters

***chnum*** : Synchronous sweep source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***range*** : Ranging type for synchronous sweep voltage output. Integer expression. See Table 4-4 on page 4-12.

The E5260/E5270 usually uses the minimum range that covers both *start* and *stop* values to force the staircase sweep voltage. However, if you set *Pcomp* and if the following formulas are true, the E5260/E5270 changes the output range dynamically (20 V range or above). Range changing may cause 0 V output in a moment. For the limited auto ranging, the instrument never uses the range less than the specified range.

- $Icomp > \text{maximum current for the output range}$
- $Pcomp/\text{output voltage} > \text{maximum current for the output range}$

***start*, *stop*** : Start or stop voltage (in V). Numeric expression. See Table 4-6 on page 4-13. *start* and *stop* must have the same polarity for *log* sweep. Sweep mode, linear or log, and the number of sweep steps are set by the WV or PWV command.

0 to  $\pm 100$  or 0 to  $\pm 200$  for HPSMU

***Icomp*** : Current compliance (in A). Numeric expression. See Table 4-6 on page 4-13. If you do not set *Icomp*, the previous value is used.

Compliance polarity is automatically set to the same polarity as the output value, regardless of the specified *Icomp*. If the output value is 0, the compliance polarity is positive.

If you set *Pcomp*, the maximum *Icomp* value for the module is allowed, regardless of the output range setting.

***Pcomp*** : Power compliance (in W). Numeric expression. Resolution: 0.001 W. If the *Pcomp* value is not entered, the power compliance is not set.

0.001 to 2, 0.001 to 4 for MPSMU of E5260 series, or 0.001 to 20 for HPSMU

**Example  
Statements**

```
OUTPUT @E5270;"WSV 1,0,1,100,0.01,1"
```

```
OUTPUT @E5270;"WSV 2,12,0,10"
```

## WSX

The WSX command causes the E5260/E5270 to enter a wait state until the E5260/E5270 receives an external trigger from a trigger input terminal specified by the *port* parameter. To set the trigger logic (initial value: negative), send the TGP command for the specified terminal. To end a wait state before the trigger, execute the AB or \*RST command.

### Syntax

WSX *port* [, *mode*]

### Parameters

***port*** : External trigger input port number. Integer expression. -1, or 1 to 16.

-1: Ext Trig In terminal.

1 to 16: Port 1 to 16 of the digital I/O terminal.

To use a digital I/O port, send the TGP command. The *port* value must be same as the *port* value set to the TGP command.

***mode*** : Waiting mode. Integer expression. 1 or 2.

If this parameter is not specified, *mode* is set to 1.

| <i>mode</i> | Description                                                                                                                                                 |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1           | Continues the operation if an external trigger was already received. Otherwise, the E5260/E5270 immediately goes into a wait state for an external trigger. |
| 2           | In any condition, the E5260/E5270 immediately goes into a wait state for an external trigger.                                                               |

### Remarks

The E5260/E5270 checks its trigger flag to confirm the present trigger status, received or none. To clear the trigger flag:

- Enter the \*RST or device clear command (HP BASIC CLEAR statement).
- Enter the TM3 command.
- Enter the TM1, TM2, or TM4 command to change the mode from TM3.
- Enter the OS command.
- Trigger the E5260/E5270 to start measurement via the trigger input terminal.
- Trigger the E5260/E5270 to recover from wait state set by the WS command via the trigger input terminal.

### Example Statements

```
OUTPUT @E5270;"WSX 2"
```

## WT

The WT command sets the hold time, delay time, and step delay time for the staircase sweep or multi channel sweep measurement. This command is also used to set the step source trigger delay time effective for the step output setup completion trigger and the step measurement trigger delay time effective for the start step measurement trigger. For the trigger function, refer to “Trigger Function” on page 2-30.

If you do not enter this command, all parameters are set to 0.

This command setting is ignored by the following measurement mode.

- Pulsed spot measurements
- Pulsed sweep measurements
- Staircase sweep with pulsed bias measurements

### Syntax

WT *hold*, *delay*[, *Sdelay*[, *Tdelay*[, *Mdelay*]]]

### Parameters

- hold*** : Hold time (in seconds) that is the wait time after starting the sweep measurement and before starting the delay time for the first step value. Numeric expression.  
0 to 655.35, with 0.01 sec resolution.
- delay*** : Delay time (in seconds) that is the wait time after starting to force a step output value and before starting a step measurement. Numeric expression.  
0 to 65.535, with 0.0001 sec resolution.
- Sdelay*** : Step delay time (in seconds) that is the wait time after starting a step measurement and before starting to force the next step output value. Numeric expression.  
0 to 1, with 0.0001 sec resolution.  
If this parameter is not specified, *Sdelay* is set to 0.  
If the specified *Sdelay* is shorter than the measurement time, the E5260/E5270 waits until the measurement completes, then forces the next step output value.

## Command Reference

### WT

***Tdelay*** : Step source trigger delay time (in seconds) that is the wait time after completing a step output setup and before sending a step output setup completion trigger. Numeric expression.

0 to *delay*, with 0.0001 sec resolution.

If this parameter is not specified, *Tdelay* is set to 0.

***Mdelay*** : Step measurement trigger delay time (in seconds) that is the wait time after receiving a start step measurement trigger and before starting a step measurement. Numeric expression.

0 to 65.535, with 0.0001 sec resolution.

If this parameter is not specified, *Mdelay* is set to 0.

### Example Statements

```
OUTPUT @E5270;"WT 5,0.1,0.1,0.1,0.1"
```

```
OUTPUT @E5270;"WT 5,0.2"
```

## WV

The WV command specifies the staircase sweep voltage source and its parameters. This command also clears the WI, WSI, WSV, and WNX command settings.

This command setting is cleared by the WI command.

### Syntax

- For Staircase Sweep Measurement:

```
WV chnum, mode, range, start, stop, step [, Icomp [, Pcomp]]
```

- For Staircase Sweep with Pulsed Bias Measurement:

```
WV chnum, mode, range, start, stop, step [, Icomp]
```

### Parameters

***chnum*** : Sweep source channel number. The value must be slot number where the module has been installed. Integer expression. 1 to 8 (1 and 5 are not available for HPSMU). See Table 4-1 on page 4-9.

***mode*** : Sweep mode. Integer expression. Only linear sweep (*mode*=1 or 3) is available for the staircase sweep with pulsed bias.

1: Linear sweep (single stair, start to stop.)

2: Log sweep (single stair, start to stop.)

3: Linear sweep (double stair, start to stop to start.)

4: Log sweep (double stair, start to stop to start.)

***range*** : Ranging type for staircase sweep voltage output. Integer expression. See Table 4-4 on page 4-12.

The E5260/E5270 usually uses the minimum range that covers both *start* and *stop* values to force the staircase sweep voltage. However, if you set *Pcomp* and if the following formulas are true, the E5260/E5270 uses the minimum range that covers the output value, and changes the output range dynamically (20 V range or above). Range changing may cause 0 V output in a moment. For the limited auto ranging, the instrument never uses the range less than the specified range.

- $Icomp > \text{maximum current for the output range}$
- $Pcomp/\text{output voltage} > \text{maximum current for the output range}$

***start, stop*** : Start or stop voltage (in V). Numeric expression. See Table 4-6 on page 4-13. *start* and *stop* must have the same polarity for *log* sweep.

0 to  $\pm 100$  or 0 to  $\pm 200$  for HPSMU

## Command Reference

### WV

- step :** Number of steps for staircase sweep. Numeric expression. 1 to 1001.  
The E5260/E5270 can store approximately 16000 measurement data in ASCII format with header without source data, or approximately 64000 measurement data in binary format.
- Icomp :** Current compliance (in A). Numeric expression. See Table 4-6 on page 4-13. If you do not set *Icomp*, the previous value is used.  
Compliance polarity is automatically set to the same polarity as the output value, regardless of the specified *Icomp*. If the output value is 0, the compliance polarity is positive.  
If you set *Pcomp*, the maximum *Icomp* value for the module is allowed, regardless of the output range setting.
- Pcomp :** Power compliance (in W). Numeric expression. Resolution: 0.001 W. If the *Pcomp* value is not entered, the power compliance is not set.  
0.001 to 2, 0.001 to 4 for MPSMU of E5260 series, or 0.001 to 20 for HPSMU

### Example Statements

```
OUTPUT @E5270;"WV 1,2,12,1E-6,10,100,0.1,1"  
OUTPUT @E5270;"WV 2,1,0,0,20,101"
```



## WZ?

This query command immediately confirms the all channel output, and returns the status 0 if it is within  $\pm 2$  V or 1 if it is more than  $\pm 2$  V.

**Syntax** `WZ? [timeout]`

**Parameters** *timeout* : Timeout. Numeric expression.  
0 to 655.35 sec, with 0.01 sec resolution.  
With *timeout* parameter, this command waits until the all channel output becomes within  $\pm 2$  V or until the specified *timeout* elapses, and returns 0 or 1.  
The `WZ? 0` command has the same effect as the `WZ?` command.

**Query Response** `state<CR/LF^EOI>`

0: All channel output is within  $\pm 2$  V.

1: Any output channel applies more than  $\pm 2$  V.

**Example Statement**  
OUTPUT @E5270;"WZ? 5.0"  
ENTER @E5270;A

## Command Reference

### XE

## XE

The XE command triggers the E5260/E5270 to start measurement, or causes the E5260/E5270 to recover from the wait state set by the PA command.

This command is not available for the high-speed spot measurement.

---

### NOTE

---

After measurement, the measurement data will be entered to the output data buffer. For data output format, refer to “Data Output Format” on page 1-21.

### Execution Conditions

The following execution conditions are for you who use the XE command to start measurement. There is no execution condition when you use the XE command to recover from the wait state.

- If any channel is set to the HIGH VOLTAGE state (forcing more than  $\pm 42$  V, or voltage compliance set to more than  $\pm 42$  V) after the trigger (XE), the interlock terminal must be shorted.
- The following commands must be entered before the XE command.

| Measurement Mode                 | Commands                        |
|----------------------------------|---------------------------------|
| Spot                             | CN, MM, DV or DI                |
| Staircase sweep                  | CN, MM, WV or WI                |
| Pulsed spot                      | CN, MM, PV or PI, FL0           |
| Pulsed sweep                     | CN, MM, PWV or PWI, FL0         |
| Staircase sweep with pulsed bias | CN, MM, WV or WI, PV or PI, FL0 |
| Quasi-pulsed spot                | CN, MM, BDV                     |
| Liner search                     | CN, MM, LSV or LSI, LGV or LGI  |
| Binary search                    | CN, MM, BSV or BSI, BGV or BGI  |
| Multi channel sweep              | CN, MM, WI or WV, WNX           |

The FL0 command must be executed for the channel that forces pulsed output.

### Syntax

XE

### Example Statement

```
OUTPUT @E5270;"XE"
```

---

# **5** **Error Messages**

## Error Messages

This chapter explains the channel status code and the error code of the Agilent E5260/E5270.

- “Channel Status Code”
- “Error Codes”

If error occurs, find solutions in the following sections and solve problems. However, if problems still remain, perform self-test.

If the E5260/E5270 fails self-test, contact your nearest Agilent Technologies Service Center.

## Channel Status Code

The channel status code indicates the following statuses of the measurement channel, and is displayed in the channel status area on the LCD. No status code is displayed if the Agilent E5260/E5270 is in the normal condition.

- X**            One or more channels are oscillating.
- V**            Measurement data exceeds the measurement range.
- C**            This channel reached its compliance setting.
- T**            Another channel reached its compliance setting.

The status priority is:

$X > V > C > T$

---

## Error Codes

If errors occur, error codes are stored in the error buffer. To read the error code, execute the “ERR?” command. To read the error message, execute the “EMG?” command.

The output of the error codes is in the order that they occurred, and the first four error codes are stored in the buffer. If no errors occurred, ”0, 0, 0, 0” is returned.

### Operation Error

- |            |                                                                                                                                                                                    |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>100</b> | Undefined GPIB command.<br>Send the correct command.                                                                                                                               |
| <b>102</b> | Incorrect numeric data syntax.<br>Correct the data syntax.                                                                                                                         |
| <b>103</b> | Incorrect terminator position.<br>Correct the command syntax. The number of parameters will be incorrect.                                                                          |
| <b>120</b> | Incorrect parameter value.<br>Correct the parameter value.                                                                                                                         |
| <b>121</b> | Channel number must be 1 to 2, or 1 to 8.<br>Correct the channel number. The channel number must be 1 to 2 for the Agilent E5262A/E5263A, or 1 to 8 for the Agilent E5260A/E5270B. |
| <b>122</b> | Number of channels must be corrected.<br>Check the MM, FL, CN, CL, IN, DZ, or RZ command, and correct the number of channels.                                                      |
| <b>123</b> | Compliance must be set correctly.<br>Incorrect compliance value was set. Set the compliance value correctly.                                                                       |
| <b>124</b> | Incorrect range value for this channel.<br>Check the range value available for the channel, and correct the range value.                                                           |

- 126** Pulse base and peak must be same polarity.  
The polarity of the base and peak values must be the same in the PI command. Also the polarity of the base, start, and stop values must be the same in the PWI command.
- 130** Start and stop must be same polarity.  
For a log sweep, the polarity of the start and stop values must be the same in the WV, WI, WSV, WSI, or WNX command. Also, 0 is not allowed for the start and stop values.
- 150** Command input buffer is full.  
The Agilent E5260/E5270 can receive 256 characters maximum including the terminator at one time.
- 152** Cannot use failed module.  
The channel number specifying the module failed the self-test or calibration. Specify another module that passed the self-test or calibration. For the service purpose, execute the RCV command to enable the module.
- 153** No module for the specified channel.  
Module is not installed in the slot specified by the channel number.
- 160** Incorrect ST execution.  
The internal memory programming can be started by the ST command and completed by the END command. Do not enter the ST command between the ST command and the END command.
- 161** Incorrect END execution.  
The internal memory programming can be started by the ST command and completed by the END command. Do not send the END command before starting the programming.
- 162** Incorrect command for program memory.  
Specified command cannot be stored in the program memory. For the incorrect commands, refer to Table 2-1 on page 2-26.
- 170** Incorrect usage of internal variable.  
The internal variable must be %In for integer data, or %Rn for real data. where *n* is an integer, 0 to 99. Use %In for the integer type command parameters; and use %Rn for the real type command parameters. For the internal variables, refer to “VAR” on page 4-127.

## Error Messages

### Error Codes

- 171** Internal variable is not allowed.  
The internal variables *%In* and *%Rn* are not available for the ACH, VAR, and VAR? commands. Do not use the internal variables for the commands.
- 200** Channel output switch must be ON.  
To enter the specified command, set the channel output switch to ON.
- 201** Compliance must be set.  
To change the source output mode (voltage or current), set the compliance value.
- 202** Interlock circuit must be closed.  
To set the output voltage or the voltage compliance to more than  $\pm 42$  V (high voltage state), close the interlock circuit. If the interlock circuit is opened in the high voltage state, outputs of all units will be set to 0 V.
- 203** Cannot enable channel.  
The channel output switch cannot be set to ON in the high voltage state. Set the output voltage or the voltage compliance to  $\pm 42$  V or less to set the switch to ON.
- 204** Cannot disable channel.  
The channel output switch cannot be set to OFF in the high voltage state. Set the output voltage or the voltage compliance to  $\pm 42$  V or less to set the switch to OFF. Or send the CL command with no parameter to set switches of all channels to OFF immediately.
- 205** DZ must be sent before RZ.  
The RZ command is effective for the channels set to 0 V output by the DZ command.
- 206** Do not specify the channel recovered by RZ.  
Specify the channels that have not been recovered yet by the RZ command after the DZ command. The RZ command cannot be executed if the specified channels include a channel that has already been recovered by the RZ command.
- 210** Ext trigger could not start measurement.  
External trigger cannot start measurement because of busy condition.



- 211** TM1 must be sent to use GET.  
Send the TM1 command to use the GPIB GET command (TRIGGER statement in HP BASIC).
- 212** Compliance must be set correctly.  
Compliance was not set or an incorrect compliance value was set in the DV, DI, PV, PI, PWV, PWI, TDV, TDI, LSV, LSI, LSSV, LSSI, BSV, BSI, BSSV, or BSSI command. Set the compliance value correctly.
- 213** Cannot perform self-test or calibration.  
Self-test and calibration cannot be performed in the high voltage state. Set the output voltage or the voltage compliance to  $\pm 42$  V or less to perform the self-test or calibration.
- 214** Send MM before measurement trigger.  
Before sending the measurement trigger, the MM command must be sent to set the measurement mode.
- 220** Send WV or WI to set primary sweep source.  
Before triggering the staircase sweep measurement, triggering the staircase sweep with pulsed bias measurement, or sending the WSV, WSI, or WNX command to set the synchronous sweep source, send the WV or WI command to set the primary sweep source.
- 221** Send PWV or PWI to set pulse sweep source.  
Before triggering the pulsed sweep measurement, or sending the WSV or WSI command to set the synchronous sweep source, send the PWV or PWI command to set the pulse sweep source.
- 222** Send PV or PI to set pulse source.  
Before triggering the staircase sweep with pulsed bias measurement, send the PV or PI command to set the pulse source.
- 223** Compliance must be set correctly.  
Compliance was not set or an incorrect compliance value was set in the WV, WI, WSV, WSI, WNX, or BDV command. Set the compliance value correctly.
- 224** Sweep and sync output modes must be the same.  
The primary sweep channel and the synchronous sweep channel must be different, and they must be set to the same output mode (voltage or current).

## Error Messages

### Error Codes

- 225** Send WSV, WSI, or WNX to get sync sweep data.  
If you enable data output of the synchronous sweep source, do not forget to set the synchronous sweep source by the WSV, WSI, or WNX command. For data output, refer to “FMT” on page 4-58.
- 226** Set linear sweep for MM4 or MM5.  
Only the linear sweep is available for the PWV or PWI command for the pulsed sweep measurement (MM4) or the WV or WI command for the staircase sweep with pulsed bias measurement (MM5).
- 227** Sweep measurement was aborted.  
Sweep measurement was aborted by the automatic sweep abort function or the power compliance.
- 230** Pulse source must be set.  
To perform the pulsed spot measurement (MM3), send the PV or PI command to set the pulse source.
- 231** Compliance must be set correctly.  
Compliance was not set or an incorrect compliance value was set in the PV, PI, PWV, or PWI command. Set the correct compliance value effective for the pulse output.
- 238** Too large pulse width (max. 2 s).  
The maximum value of the pulse width is 2 s. And the available value depends on the pulse period value. Refer to “PT” on page 4-89.
- 239** Pulse width must be 0.5 ms or more.  
Set the pulse width to 0.5 ms or more. Refer to “PT” on page 4-89.
- 253** Program memory is full.  
Maximum of 2000 programs or 40000 commands can be stored in the program memory. Refer to “ST” on page 4-108.
- 254** Invalid input for a memory program.  
The GPIB GET command (TRIGGER statement in HP BASIC) and an external trigger input are not allowed in a memory program (between the ST and END commands).
- 255** Maximum nesting level is eight.  
Nesting (one program calling another) of a memory program must be eight levels or less.

- 260** Data output buffer is full.  
Maximum 34034 measurement data items can be stored in the data output buffer.
- 270** Search source channel must be set.  
Before triggering the search measurement or sending the LSSV, LSSI, BSSV, or BSSI command to set the synchronous search source, send the LSV, LSI, BSV, or BSI command to set the primary search source.
- 271** Search monitor channel must be set.  
Before triggering the search measurement, send the LGV, LGI, BGV, or BGI command to set the search monitor channel.
- 273** Search and sync output modes must be the same.  
The primary search source channel and the synchronous source channel must be different, and they must be set to the same output mode (voltage or current).
- 274** Search sync source is overflow.  
Set the search sources so that the same output range is set to both primary and synchronous search sources.
- 275** Search target must be compliance value or less.  
The search target value must be less than or equal to the compliance value of the search monitor channel. Correct the search target value or the compliance value.
- 276** Start and stop must be different.  
Set different values for the search start and stop values.
- 277** Step must be output resolution or more.  
Set the search step value to the output resolution or more.
- 278** Search and sync channels must be different.  
Set the search source and the synchronous source to different channels.
- 279** Search monitor mode must be compliance side.  
Send the LGI/BGI command to set the voltage source search monitor channel, or send the LGV/BGV command to set the current source search monitor channel.

## Error Messages

### Error Codes

- 303** Excess voltage in MPSMU.  
Voltage that exceeds maximum voltage at the present current range was detected by a MPSMU. All output switches were set to OFF.
- 305** Excess current in HPSMU.  
Current that exceeds maximum current at the present voltage range was detected by a HPSMU. All output switches were set to OFF.
- 307** Unsupported module.  
This module is not supported by this firmware version. Until you update the firmware, use the Agilent E5260/E5270 with this module removed.
- 310** Interlock open operation error. Initialized.  
Initialization was automatically performed because the E5260/E5270 failed to set its output to 0 V when the interlock circuit was opened in the high voltage condition. Any module may be defective. Perform self-test.
- 311** ASU control cable was connected/disconnected.  
The E5270B must be turned off when the Atto Sense and Switch Unit (ASU) is connected/disconnected.
- 603** Sweep and pulse channels must be different.  
Set the sweep source and the pulse source to different channels for the staircase sweep with pulsed bias measurement (MM5).
- 610** Quasi-pulse source channel must be set.  
Before triggering the quasi-pulsed spot measurement, send the BDV command to set the quasi-pulse source.
- 620** TGP specified incorrect I/O port.  
Specify trigger input for the Ext Trig In port, or trigger output for the Ext Trig Out port by the TGP command. Refer to “TGP” on page 4-113.
- 621** Specify trigger input port for PAX/WSX.  
No trigger input port was specified for the PAX or WSX command. Specify the trigger input port, or set the port as the trigger input port. Refer to “TGP” on page 4-113 to set trigger port.

- 622** Specify trigger output port for OSX.  
No trigger output port was specified for the OSX command. Specify the trigger output port, or set the port as the trigger output port. Refer to “TGP” on page 4-113 to set trigger port.
- 630** Incorrect polarity of search step value.  
For the linear search measurement. The step value must be positive if start<stop, or negative if start>stop.
- 631** Number of search steps must be 1001 or less.  
For the linear search measurement. The number of search steps between start and stop must be 1001 or less. This means the |step| value must be |stop-start|/1001 or more.
- 632** Search measurement was aborted.  
Search measurement was aborted by the automatic abort function.
- 640** Search limits must be range/20000 or more.  
For the binary search measurement. The limit value for the search target must be *range*/20000 or more. where *range* means the measurement range actually used for the measurement.
- 650** Data format must be ASCII to get time data.  
The time stamp function is not available for the binary data output format. To use the time stamp function, set the data output format to ASCII.
- 655** Cannot connect/disconnect series resistor.  
The series resistor status cannot be changed in the high voltage state. Set the output voltage or the voltage compliance to  $\pm 42$  V or less to connect or disconnect the series resistor.
- 656** Series resistor must be OFF for 1 A range.  
The series resistor cannot be set to ON for the measurement channels or the output channels that use 1 A range.
- 657** Series resistor cannot be used with ASU.  
The series resistor is not available for the channel connected to the Atto Sense and Switch Unit (ASU).
- 670** Specified channel does not have ASU.  
Specify the module that can be used with the ASU.

## Self-test/Calibration Error

When the Agilent E5260/E5270 fails the self-test or self-calibration, the Agilent E5260/E5270 returns the following error code and error message.

In the error code, N indicates the slot number. If the module is installed in slot 1, and it fails the function test, the error code will be 1760.

|            |                                              |
|------------|----------------------------------------------|
| <b>700</b> | CPU failed NVRAM read/write test.            |
| <b>701</b> | CPU failed FPGA read/write test.             |
| <b>702</b> | CPU failed H-RESOLN ADC end signal test.     |
| <b>703</b> | CPU failed H-RESOLN ADC start signal test.   |
| <b>704</b> | CPU failed emergency status signal test.     |
| <b>705</b> | CPU failed SRQ status signal test.           |
| <b>706</b> | CPU failed high voltage status signal test.  |
| <b>707</b> | CPU failed low voltage status signal test.   |
| <b>708</b> | CPU failed DAC settling status signal test.  |
| <b>709</b> | CPU failed measure ready status signal test. |
| <b>710</b> | CPU failed set ready status signal test.     |
| <b>711</b> | CPU failed measure end status signal test.   |
| <b>712</b> | CPU failed measure trigger signal test.      |
| <b>713</b> | CPU failed pulse trigger signal test.        |
| <b>714</b> | CPU failed abort trigger signal test.        |
| <b>715</b> | CPU failed DAC set trigger signal test.      |
| <b>716</b> | CPU failed LCD read/write test.              |
| <b>720</b> | H-RESOLN ADC is not installed.               |
| <b>721</b> | H-RESOLN ADC failed ROM/RAM test.            |
| <b>722</b> | H-RESOLN ADC failed B-COM offset DAC test.   |
| <b>723</b> | H-RESOLN ADC failed sampling ADC test.       |
| <b>724</b> | H-RESOLN ADC failed integrating ADC test.    |
| <b>725</b> | H-RESOLN ADC failed bus function test.       |
| <b>740</b> | GNDU failed calibration.                     |

|             |                                               |
|-------------|-----------------------------------------------|
| <b>N760</b> | SMU failed function test.                     |
| <b>N761</b> | SMU failed VF/VM function test.               |
| <b>N762</b> | SMU failed IF/IM function test.               |
| <b>N763</b> | SMU failed loop status test.                  |
| <b>N764</b> | SMU failed temperature sensor test.           |
| <b>N765</b> | SMU failed CMR amplifier calibration.         |
| <b>N766</b> | SMU failed CMR amplifier adjustment.          |
| <b>N767</b> | SMU failed CMR 100 V range full output test.  |
| <b>N768</b> | SMU failed VF/VM calibration.                 |
| <b>N769</b> | SMU failed VM offset calibration.             |
| <b>N770</b> | SMU failed VM gain calibration.               |
| <b>N771</b> | SMU failed VF offset calibration.             |
| <b>N772</b> | SMU failed VF gain calibration.               |
| <b>N773</b> | SMU failed VF gain calibration at 20 V range. |
| <b>N774</b> | SMU failed VF filter offset calibration.      |
| <b>N775</b> | SMU failed H-SPEED ADC self-calibration.      |
| <b>N776</b> | SMU failed H-SPEED ADC VM offset calibration. |
| <b>N777</b> | SMU failed H-SPEED ADC VM gain calibration.   |
| <b>N778</b> | SMU failed IF/IM calibration.                 |
| <b>N779</b> | SMU failed calibration bus test.              |
| <b>N780</b> | SMU failed IM offset calibration.             |
| <b>N781</b> | SMU failed IM gain calibration.               |
| <b>N782</b> | SMU failed IF offset calibration.             |
| <b>N783</b> | SMU failed IF gain calibration.               |
| <b>N784</b> | SMU failed IDAC filter offset calibration.    |
| <b>N785</b> | SMU failed oscillation detector test.         |
| <b>N786</b> | SMU failed I bias test.                       |
| <b>N787</b> | SMU failed common mode rejection test.        |

## Error Messages

### Error Codes

|             |                                        |
|-------------|----------------------------------------|
| <b>N789</b> | SMU failed high voltage detector test. |
| <b>N790</b> | SMU failed zero voltage detector test. |
| <b>N791</b> | SMU failed V hold test.                |
| <b>N792</b> | SMU failed V switch test.              |