

# **Installation and Service Guide**

## **Agilent Technologies**

### **N5250A**

### **PNA Series**

## **Microwave Network Analyzer System**

**Use this manual in conjunction with the following documents:**

PNA Series Network Analyzer Embedded Help System

PNA Series Network Analyzer Installation and Quick Start Guide  
Part Number E8356-90001

E8361A PNA Series Microwave Network Analyzer Service Guide  
Part Number E8361-90001

N5260A Millimeter Head Controller Operation and Service Guide  
Part Number: N5260-90001



**Agilent Technologies**

**Part Number: N5250-90001**

**Printed in USA**  
**November 2010**

Supersedes Print Date: September 2007

© Agilent Technologies, Inc. 2003, 2008, 2010

---

## **WARRANTY STATEMENT**

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED “AS IS,” AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AGILENT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. AGILENT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD AGILENT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

---

## **DFARS/Restricted Rights Notice**

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

---

## **Certification**

Agilent Technologies, Inc. certifies that this product met its published specifications at the time of shipment from the factory. Agilent Technologies, Inc. further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology, to the extent allowed by the Institute's calibration facility, and to the calibration facilities of other International Standards Organization members.

---

## Assistance

Product maintenance agreements and other customer assistance agreements are available for Agilent Technologies, Inc. products. For information about these agreements and for other assistance, contact Agilent. Refer to [“Contacting Agilent” on page 5-4](#).

---

## Safety and Regulatory Information

The safety and regulatory information pertaining to this product is located in [Chapter 1, “Safety and Regulatory Information”](#).

---

## Safety Notes

The following safety notes are used throughout this manual. Familiarize yourself with each of the notes and its meaning before operating this instrument. All pertinent safety notes for using this product are located in [Chapter 1, “Safety and Regulatory Information”](#).

---

**WARNING**      **Warning denotes a hazard. It calls attention to a procedure which, if not correctly performed or adhered to, could result in injury or loss of life. Do not proceed beyond a warning note until the indicated conditions are fully understood and met.**

---

---

**CAUTION**      Caution denotes a hazard. It calls attention to a procedure that, if not correctly performed or adhered to, could result in damage to or destruction of the instrument. Do not proceed beyond a caution sign until the indicated conditions are fully understood and met.

---

---

## Printing Copies of Documentation from the Web

To print copies of documentation from the Web, download the PDF file from the Agilent web site:

- Go to <http://www.agilent.com>.
- Enter the document’s part number (located on the title page) in the **Search** box.
- Click **Search**.



---

# Contents

## 1 Safety and Regulatory Information

Safety Symbols . . . . .	1-2
General Safety Considerations . . . . .	1-2
Safety Earth Ground . . . . .	1-2
Before Applying Power . . . . .	1-2
Servicing . . . . .	1-3
Electrostatic Discharge Protection . . . . .	1-4
Regulatory Information . . . . .	1-5
Instrument Markings . . . . .	1-6
Lithium Battery Disposal . . . . .	1-7

## 2 System Description

N5250A Network Analyzer System . . . . .	2-2
What's Included in the N5250A System? . . . . .	2-3
Partial Systems . . . . .	2-3
Basic System Configurations . . . . .	2-4
Coaxial Measurement . . . . .	2-4
Wafer Probe Measurement . . . . .	2-5
N5260A Millimeter Head Controller . . . . .	2-6
Millimeter-Wave Test Head Modules . . . . .	2-7
Theory of Operation . . . . .	2-8
Specifications . . . . .	2-10
Warranty . . . . .	2-10
Band Solutions from OML, Inc.© . . . . .	2-11

## 3 System Installation

Receiving the System . . . . .	3-2
The System as Shipped . . . . .	3-2
Agilent Technologies Customer Engineering . . . . .	3-2
System Contents . . . . .	3-3
Site Preparation . . . . .	3-6
Power Requirements . . . . .	3-6
Environmental Requirements . . . . .	3-7
Protect Against Electrostatic Discharge (ESD) . . . . .	3-8
Review the Principles of Connector Care . . . . .	3-8
Space Requirements . . . . .	3-8
PNA, Controller, and Test Head Module Interconnections . . . . .	3-10
Rear Panel Cabling . . . . .	3-10
Front Panel Cabling . . . . .	3-11
Sequence of Test Head Module Connections . . . . .	3-13
System Cable Connections . . . . .	3-14
Disconnecting the Combiner Assembly From the mm-Wave Module . . . . .	3-17
Old Design . . . . .	3-17
New Design . . . . .	3-18

## 4 System Specifications

Specifications . . . . .	4-2
System Specifications (typical) . . . . .	4-2

---

# Contents

General E8361A/C Option H11 Specifications . . . . .	4-4
E8361A Option H11 Rear Panel Specifications . . . . .	4-4
N5250A Option 017 and 018 Test Head Bias-Tees Specifications . . . . .	4-5
<b>5 Maintenance and Support</b>	
Maintenance . . . . .	5-2
Physical Maintenance . . . . .	5-2
Electrical Maintenance . . . . .	5-2
Caring for Waveguide (WG) Interfaces. . . . .	5-2
Principles of Connector Care . . . . .	5-3
Agilent Support, Services, and Assistance. . . . .	5-4
Service and Support Options . . . . .	5-4
Contacting Agilent . . . . .	5-4
Shipping an Item to Agilent for Service or Repair . . . . .	5-4
<b>6 Performance Tests and Checks</b>	
Allow the Analyzer to Warm Up . . . . .	6-2
Protect Against Electrostatic Discharge (ESD) . . . . .	6-2
Review the Principles of Connector Care. . . . .	6-2
System Check. . . . .	6-3
System Performance Verification . . . . .	6-4
When to Verify . . . . .	6-4
Materials Required. . . . .	6-5
General Preparation. . . . .	6-5
Verification Procedure . . . . .	6-6
Interpreting the Verification Results . . . . .	6-10
Improving the Verification Results . . . . .	6-12
<b>7 Replaceable Parts</b>	
Ordering Information . . . . .	7-2
Replaceable Parts . . . . .	7-3

---

# **1 Safety and Regulatory Information**

---

## Safety Symbols

The following safety symbols are used throughout this manual. Familiarize yourself with each of the symbols and its meaning before operating this instrument.

---

**CAUTION** Caution denotes a hazard. It calls attention to a procedure that, if not correctly performed or adhered to, could result in damage to or destruction of the instrument. Do not proceed beyond a caution note until the indicated conditions are fully understood and met.

---

---

**WARNING** **Warning denotes a hazard. It calls attention to a procedure which, if not correctly performed or adhered to, could result in injury or loss of life. Do not proceed beyond a warning note until the indicated conditions are fully understood and met.**

---

---

## General Safety Considerations

### Safety Earth Ground

---

**WARNING** **This is a Safety Class I product (provided with a protective earthing ground incorporated in the power cord). The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. Any interruption of the protective conductor, inside or outside of the instrument, will make the instrument dangerous. Intentional interruption is prohibited.**

---

---

**CAUTION** Always use the three-prong AC power cord supplied with this product. Failure to ensure adequate grounding by not using this cord may cause product damage.

---

### Before Applying Power

---

**CAUTION** Make sure that the analyzer line voltage selector switch is set to the voltage of the power supply and the correct fuse is installed.

---

---

**CAUTION** If this product is to be energized via an autotransformer make sure the common terminal is connected to the neutral (grounded side of the mains supply).

---

---

**CAUTION** This product is designed for use in Installation Category II and Pollution Degree 2.

---



## Servicing

- 
- WARNING** These servicing instructions are for use by qualified personnel only. To avoid electrical shock, do not perform any servicing unless you are qualified to do so.
- 
- WARNING** The opening of covers or removal of parts may expose dangerous voltages. Disconnect the instrument from all voltage sources while it is opened.
- 
- WARNING** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended. Discard used batteries according to manufacturer's instructions.
- 
- WARNING** Procedures described in this document may be performed with power supplied to the product while protective covers are removed. Energy available at many points may, if contacted, result in personal injury.
- 
- WARNING** The power cord is connected to internal capacitors that may remain live for 10 seconds after disconnecting the plug from its power supply.
- 
- WARNING** For continued protection against fire hazard, replace line fuse only with same type and rating. The use of other fuses or material is prohibited.
- 
- WARNING** The detachable power cord is the instrument disconnecting device. It disconnects the mains circuits from the mains supply before other parts of the instrument. The front panel switch is only a standby switch and is not a LINE switch (disconnecting device).
-


## Electrostatic Discharge Protection

Protection against electrostatic discharge (ESD) is essential while removing assemblies from or connecting cables to the system components. Static electricity can build up on your body and can easily damage sensitive internal circuit elements when discharged. Static discharges too small to be felt can cause permanent damage. To prevent damage to the instrument:

- *always* have a grounded, conductive table mat in front of your test equipment.
- *always* wear a grounded wrist strap, connected to a grounded conductive table mat, having a 1 M $\Omega$  resistor in series with it, when handling components and assemblies or when making connections.
- *always* wear a heel strap when working in an area with a conductive floor. If you are uncertain about the conductivity of your floor, wear a heel strap.
- *always* ground yourself before you clean, inspect, or make a connection to a static-sensitive device or test port. You can, for example, grasp the grounded outer shell of the test port or cable connector briefly.
- *always* ground the center conductor of a test cable before making a connection to the analyzer test port or other static-sensitive device. This can be done as follows:
  1. Connect a short (from your calibration kit) to one end of the cable to short the center conductor to the outer conductor.
  2. While wearing a grounded wrist strap, grasp the outer shell of the cable connector.
  3. Connect the other end of the cable to the test port and remove the short from the cable.

Figure 1-1 shows a typical ESD protection setup using a grounded mat and wrist strap.

**Figure 1-1 ESD Protection Setup**

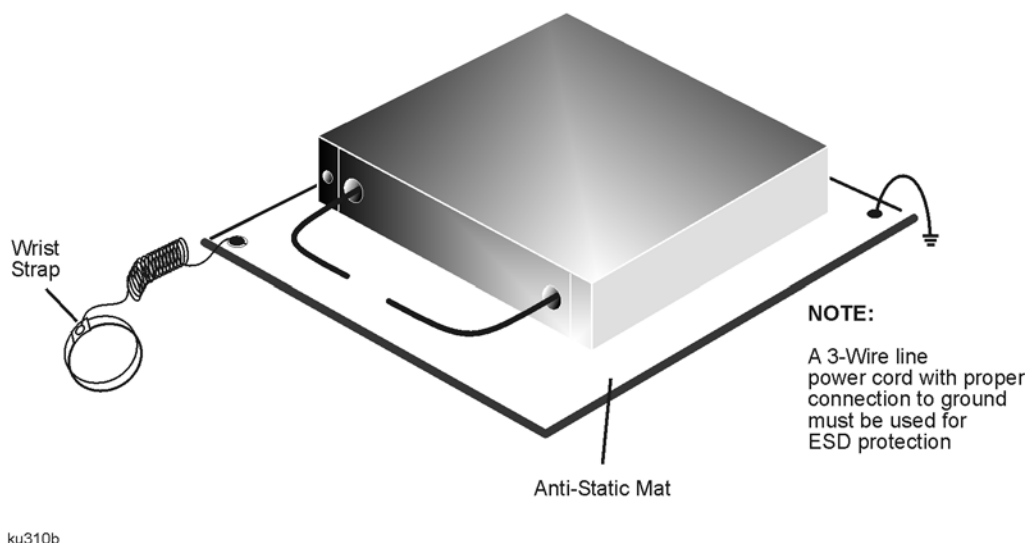

---

## **Regulatory Information**

This section contains information that is required by various government regulatory agencies.

## Instrument Markings



The instruction documentation symbol. The product is marked with this symbol when it is necessary for the user to refer to the instructions in the documentation.



The CE mark is a registered trademark of the European Community. (If accompanied by a year, it is when the design was proven.)



The CSA mark is a registered trademark of the Canadian Standards Association.

ICES/NMB-001

This is a marking to indicate product compliance with the Canadian Interference-Causing Equipment Standard (ICES-001).

ISM1-A

This is a symbol of an Industrial Scientific and Medical Group 1 Class A product.



This is a required mark signifying compliance with an EMC requirement. The C-Tick mark is a registered trademark of the Australian Spectrum Management Agency.



This product complies with the WEEE Directive (2002/96/EC) marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste.

*Product Category: With reference to the equipment types in the WEEE Directive Annex I, this product is classed as a "Monitoring and Control instrumentation" product.*

**Do not dispose in domestic household waste.**

**To return unwanted products, contact your local Agilent office, or see <http://www.agilent.com/environment/product/> for more information.**



This product complies with the China RoHS regulation. Product manuals will have a *Toxic Substance Table* showing the hazardous substances in the product.



This symbol indicates compliance with China RoHS regulations for paper/fiberboard packaging.

## Lithium Battery Disposal

If the battery on the network analyzer's CPU board needs to be disposed of, dispose of it in accordance with your country's requirements. If required, you may return the battery to Agilent Technologies for disposal. For assistance refer to [“Contacting Agilent” on page 5-4](#).



DO NOT THROW BATTERIES AWAY BUT  
COLLECT AS SMALL CHEMICAL WASTE.



---

## **2 System Description**

## N5250A Network Analyzer System

The N5250A is a vector network analyzer system with an extremely wide frequency range of 10 MHz to 110 GHz. The N5250A uses the same 1.0 mm test port connections throughout its entire range of test frequencies. It is never necessary to make and break connections to complete a test.


The bias can be applied to a device under test (DUT) through the test ports using the bias-tees built into the E8361A H11 PNA. Optionally, bias-tees can be added to the millimeter-wave test head modules (N5250A Options 017 and 018) closer to the test ports to improve the bias conditions of sensitive devices.

The N5250A system can be used to make S-parameter measurements three different ways:

1. Continuous sweep 10 MHz to 110 GHz measurements utilizing 1.0 mm test ports on the test head modules.
2. Standalone E8361A H11 PNA measurements from 10 MHz to 67 GHz utilizing the PNA front panel 1.85 mm test ports. This is accomplished by disconnecting the N5260A millimeter head controller and millimeter-wave test head modules from the E8361A H11 PNA and restarting the PNA application.
3. Waveguide measurements from 67 GHz to 110 GHz utilizing the WR-10 waveguide flange on the waveguide T/R modules. This is accomplished by disconnecting the combiner assembly on the front of the test head modules.

The illustration below shows the N5250A configured for coaxial measurement. The system can also be configured for on-wafer measurement using a wafer probe test station.

**Figure 2-1 N5250A Network Analyzer System**

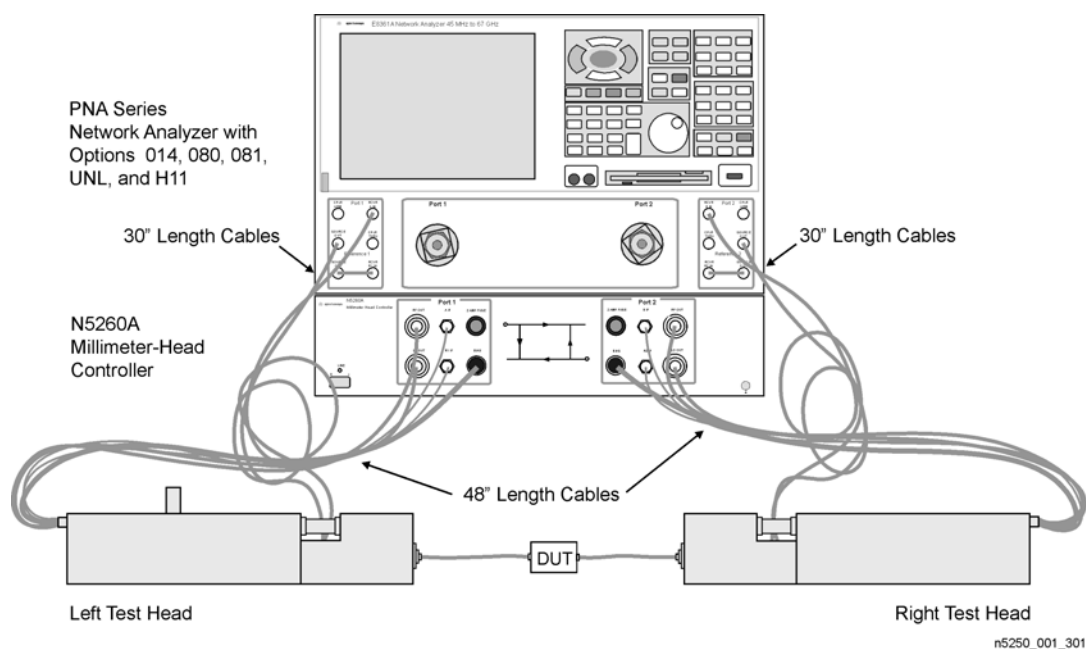



## What's Included in the N5250A System?

The N5250A system includes the following:

- PNA Series network analyzer, E8361A with Option H11 (includes options UNL, 014, 080, and 081)
- N5260A millimeter head controller (which includes the following):
  - Left and right millimeter-wave test head modules (one of the following):
    - N5250A-700 (Standard) millimeter-wave test head modules without bias-tees (left test head has an attenuator)
    - N5250A-017 (Option 017) millimeter-wave test head modules with bias-tees (left test head has an attenuator)
    - N5250A-018 (Option 018) millimeter-wave test head modules with bias-tees (left and right test heads each have an attenuator)
- Interconnection cables and adapters to interconnect the system components

## Partial Systems

If you already have the E8361A network analyzer with Option H11, you can order the N5260A millimeter head controller (with millimeter-wave test head modules and cables) to make a complete system:

- N5260A millimeter head controller (which includes the following):
  - Left and right millimeter-wave test head modules (one of the following):
    - N5260A-110 millimeter-wave test head modules without bias-tees (left test head has an attenuator). (Same as included in N5250A-700.)
    - N5260A-120 millimeter-wave test head modules with bias-tees (left test head has an attenuator). (Same as included in N5250A-017.)
    - N5260A-130 millimeter-wave test head modules with bias-tees (left and right test heads each have an attenuator). (Same as included in N5250A-018.)
- Interconnection cables and adapters to interconnect the system components

---

## Basic System Configurations

The N5250A can be used in either of two basic configurations, depending on how the test ports are connected to the device under test (DUT): coaxial measurement configuration or wafer probe measurement configuration.

---

**CAUTION** Input power to the test ports must not exceed +27 dBm. Input power in excess of this level will damage expensive components. Observe proper precautions, especially when measuring amplifiers with gains of 20 dB or greater.

---

### Coaxial Measurement

This configuration is used when the DUT has coaxial connectors. The N5250A test ports have 1.0 mm coaxial connectors, and are designed to cover a frequency range of 10 MHz to 110 GHz.

In this configuration, the test head modules are placed on a work bench in front of the millimeter head controller.

The DUT is normally connected to the test ports by way of a 1.0 mm coaxial cable (test port cable). Connect the device to Port 1 (left test head module) directly, and to Port 2 (right test head module) by way of a test cable. It is also possible to connect the DUT using a test port cable on each test port, although this configuration will result in greater signal loss.


---

**CAUTION** Do not attempt to connect a test device directly between the two 1.0 mm test ports, without at least one test port cable. The test head modules will not move freely enough to allow such a connection to be made safely.

---

[Figure 2-2 on page 2-5](#) shows how the instruments are configured on a work bench for the coaxial measurement configuration. The test head modules are placed on the bench top in front of the PNA and controller.

**Figure 2-2 Coaxial Measurement Configuration**

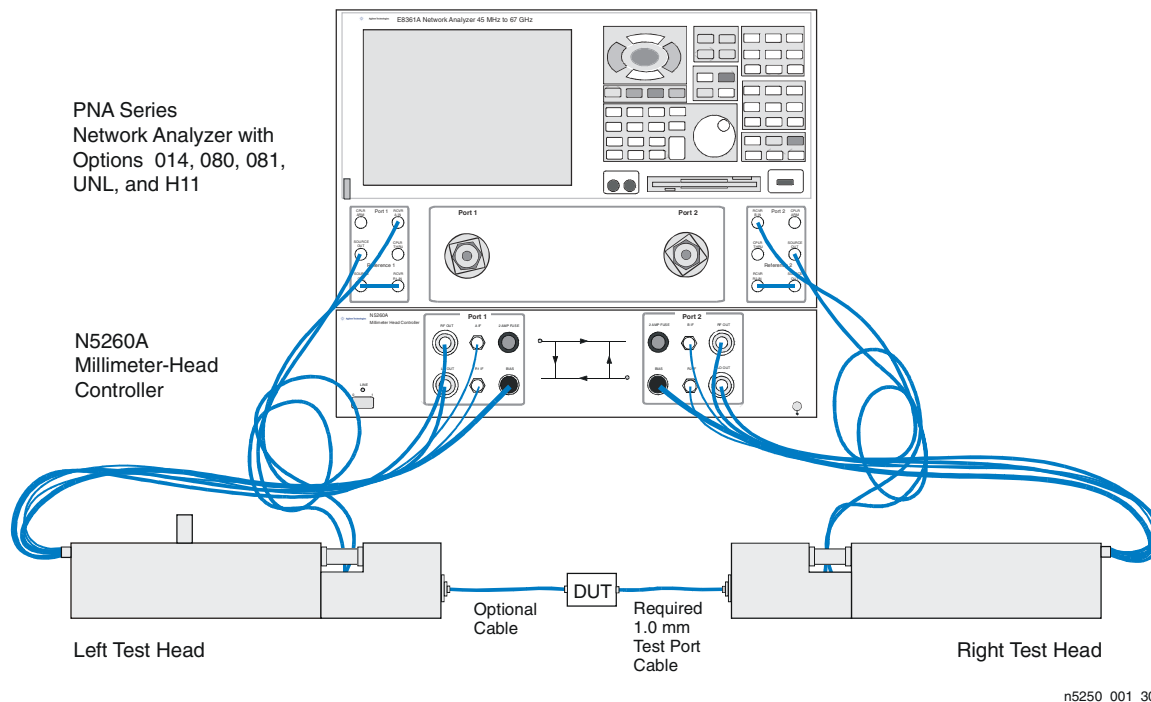

## Wafer Probe Measurement

This configuration is used for on-wafer testing; each test port is connected (through a 1.0 mm coaxial cable, or through an adapter and another type of coaxial cable) to a wafer test probe. Contact the manufacturer of the wafer probe station and an Agilent office for information on the cables and adapters needed to connect the test head modules to the wafer probe station (refer to “[General Safety Considerations](#)” on page 1- 2).

In this configuration, the test head modules are placed on X-Y positioners that are mounted to the wafer probe station.

---

**NOTE** The wafer probe measurement configuration is not documented in this manual.

---

For information about probing equipment and accessories, contact:

Cascade Microtech, Inc.  
2430 NW 206th Avenue  
Beaverton, Oregon 97006, USA  
Toll-free telephone: (800) 550-3279

Telephone: (503) 601-1000  
Fax: (503) 601-1002  
Web site [www.cascademicrotech.com](http://www.cascademicrotech.com)  
Email: [sales@cmicro.com](mailto:sales@cmicro.com)

For additional information on DUT bias connections, refer to [Table 4-3 on page 4-5](#), [Figure 4-1 on page 4-6](#), and [Figure 4-2 on page 4-6](#).

## N5260A Millimeter Head Controller

The N5260A millimeter head controller provides the test interface between the millimeter-wave test head modules and the E8361A H11 PNA series network analyzer.


The millimeter head controller, when used in conjunction with the millimeter-wave test head modules and the PNA, provides all of the feature and functions of a full S-Parameter test set.

The millimeter head controller supplies RF and LO signals to the millimeter-wave test head modules and returns the down converted reference and test IF signals to the PNA for process and display. The N5260A millimeter head controller also supplies the +12 volt bias to each millimeter-wave head module.

The front panel of the N5260A millimeter head controller is illustrated below.

For additional information, see the N5260A Operation and Service Guide. If a printed version of the N5260A manual is not available, refer to [“Printing Copies of Documentation from the Web”](#) on page iii of this manual.

**Figure 2-3 N5260A Millimeter Head Controller Front Panel**

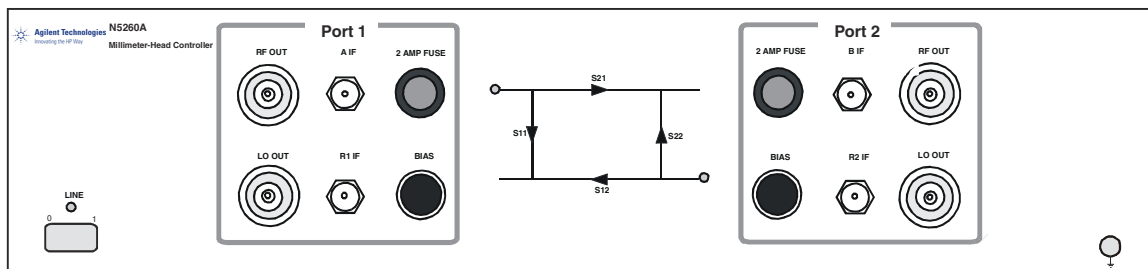

n5250\_001\_309


## Millimeter-Wave Test Head Modules

A pair of 67-110 GHz millimeter-wave test head modules, in conjunction with the N5260A millimeter head controller, is used to make reflection, transmission, or S-parameter measurements at millimeter wave frequencies with the E8361A H11 PNA. These test head modules are manufactured by OLM, Inc.® Refer to “[Band Solutions from OLM, Inc.®](#)” on [page 2- 11](#) for additional information.

The N5250A system measurement ports, Port 1 and Port 2, are in the left and right millimeter-wave test head modules, respectively.

The left and right test head modules are illustrated in [Figure 2-4 on page 2-7](#). Each test head consists of a combiner assembly and a waveguide module. The combiner assembly contains a coupler and combiner, and optionally contains a bias-tee (N5250A, Options 017 and 018). The multiple-connector panels provide connections between the test head module, the N5260A millimeter head controller, and the E8361A H11 PNA.

**Figure 2-4 Left and Right Millimeter-Wave Test Head Modules**

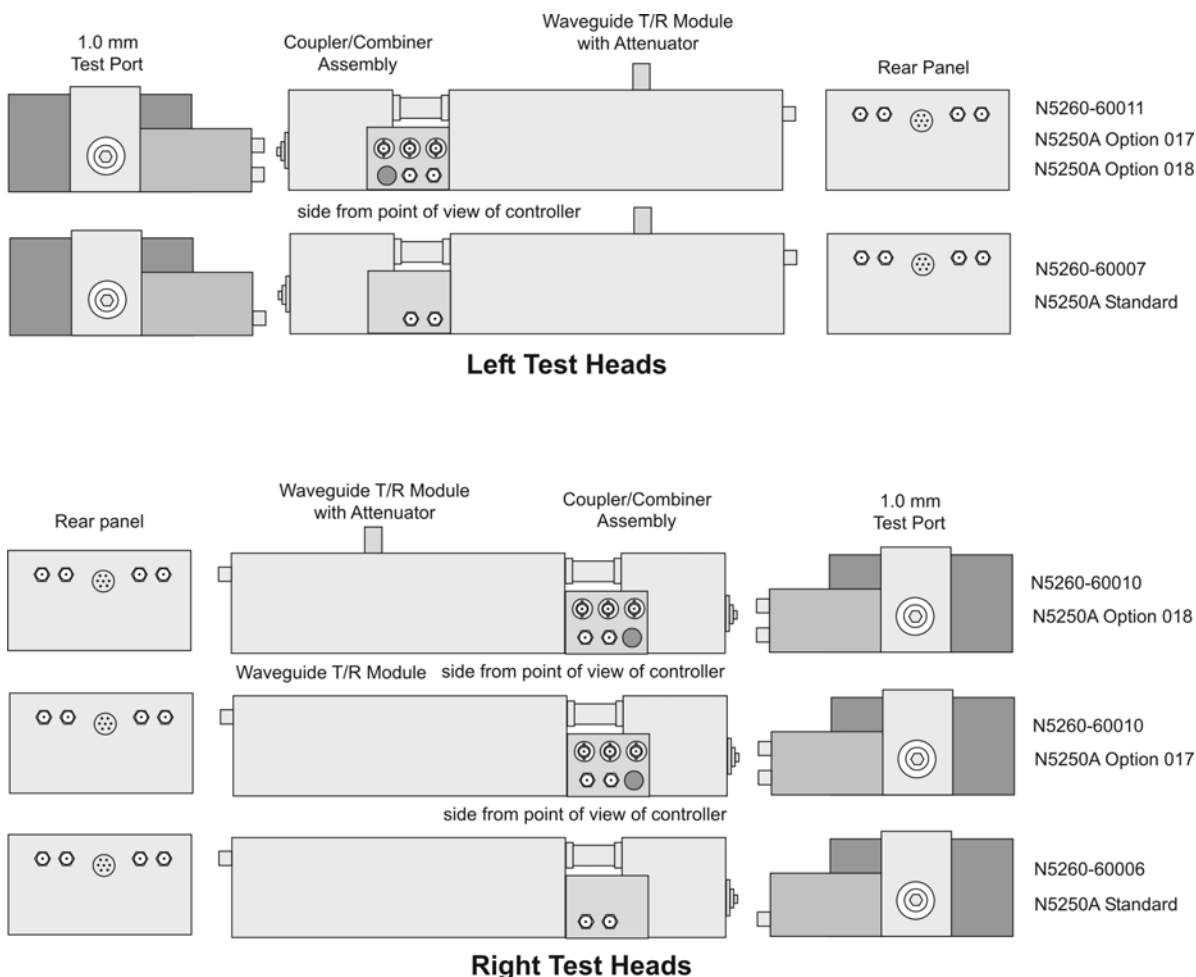

n5250\_001\_311

## Theory of Operation

Refer to the block diagram in [Figure 2-5 on page 2-9](#) for the following paragraphs.

The N5260A millimeter head controller routes the LO and RF signals from the E8361A PNA to the test set modules. The millimeter head controller also performs switching from port 1 to port 2. The test head modules separate the incident from the reflected RF signal and then down convert those signals to an IF signal

The test head modules do not have their own power supplies; each head receives dc power from the N5260A millimeter head controller, by way of a multi-pin interface cable.

### 10 MHz to 67 GHz Operation

The RF signal is received from the E8361A PNA SOURCE OUT and input into the RF IN connector of the combiner module. The RF signal is then input to either the bias tee or coupler depending on the option configuration. From the coupler, the RF signal passes through the combiner and then on to the test port.

The signal received at the test port of the combiner (either transmitted from another test head module or reflected from a device under test) is routed to the RCVR OUT connector via the combiner and coupled arm of the coupler. This output goes to the E8361A PNA RCVR A IN or RCVR B IN.


### 67 GHz to 110 GHz Operation

The RF signal is received from the N5260A millimeter head controller and input into the RF IN connector of the T/R millimeter module. The RF is then amplified and multiplied times six by the source multiplier. This multiplied incident RF signal then passes through micrometer, attenuator (option), and a dual directional coupler where a portion of it is coupled off into the reference mixer.

The signal received at the test port of the combiner section (either transmitted from another test head module or reflected from a device under test) is routed back to the dual directional coupler in the T/R millimeter module where a portion of it is coupled off into the test mixer.

The LO signal is input from the E8361A PNA LO through the N5260A millimeter head controller. The LO 8th harmonic is input into the reference and test converters. These converters mix the LO with the RF signals so that two IF signals are output. These IF signals (incident and reflected) are then output to the millimeter head controller, as the REF IF and TEST IF signals respectively, and passed to the E8361A PNA for further processing.

**Figure 2-5 Millimeter-wave Test Head Module Block Diagram**

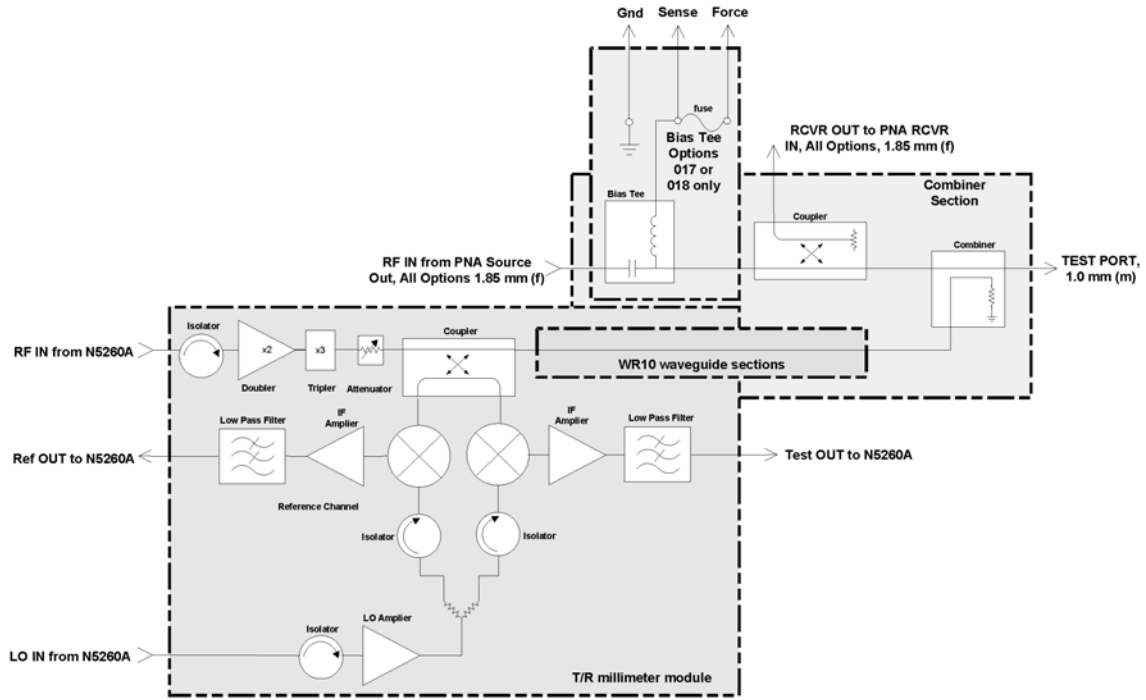

N5250\_001\_201

## Specifications

Specifications described here are the typical performance for the 67 –110 GHz millimeter-wave test head modules. For the electrical specifications of the modules when used in the N5250A system, refer to “[System Specifications \(typical\)](#)” on page 4- 2.

The N5260-60004 test head module does not have a built-in attenuator while the N5260-60003 adds a 25-dB variable attenuator inserted between the source multiplier and the source isolator. See the block diagram, [Figure 2-5 on page 2-9](#).

**Table 2-1. Specifications (Typical Performance)**

Specifications	N5260-60004	N5260-60003
System Operating Freq.	67 to 110 GHz	67 to 110 GHz
RF Input Freq.	11.167 to 18.333 GHz (x6)	11.167 to 18.333 GHz (x6)
RF Input Power	+5 to +13 dBm	+5 to +13 dBm
LO Input Freq.	8.375 to 13.75 GHz (x8)	8.375 to 13.75 GHz (x8)
LO Input Power	+5 to +13 dBm	+5 to +13 dBm
Test Port (TP) Output Power	0 dBm min. +3 dBm typical	-2 dBm min. +1 dBm typical
TP Output Power Adjustment	N/A	25 dB min.
TP Input Power Operating Level	+4 dBm typical, for 0.1 dB compression	+4 dBm typical, for 0.1 dB compression
TP Input Power Damage Level	+27 dBm	+27 dBm
Test Port Interface	OML precision WR-10 flange	OML precision WR-10 flange
Additional Interfaces	4 ea. SMA (f) (Source, LO, 2 IF)	4 ea. SMA (f) (Source, LO, 2 IF)
Power Requirements	+12 VDC @ 1.5 A. typical	+12 VDC @ 1.5 A. typical
Ambient Operating Temperature	20 to 30° C	20 to 30° C
Dimensions (L x W x H)	13 x 4.3 x 2.7 inches	13 x 4.3 x 2.7 inches, not including the attenuator micrometer

## Warranty

The millimeter-wave test head modules are covered by the N5250A system warranty. See “[Service and Support Options](#)” on page 5- 4. In addition, the test head modules have their own separate warranty.



## Band Solutions from OML, Inc.©

OML, Inc.© (formerly known as Oleson Microwave Labs) is a millimeter-wave test equipment manufacturer, and supplier of the millimeter-wave test heads used in the N5250A network analyzer system.

Please contact OML, Inc.© for information about various test heads and related products, including availability, performance, compatibility, applications, and support questions.

OML, Inc.©  
300 Digital Drive  
Morgan Hill, CA 95037  
Tel: (408) 779-2698  
Fax: (408) 778-0491  
www.omlinc.com

For more information on millimeter-wave applications, refer to the manual for the N5260A Millimeter Head Controller. To view this manual online, go to [www.agilent.com](http://www.agilent.com). Enter the manual's part number, N5260-90001, in the Search box and click **Search**.



---

## **3 System Installation**

---

## Receiving the System

---

**WARNING** The N5260A millimeter head controller and the test head modules are sensitive to electrostatic discharge (ESD). Ground your work station before unpacking and installing the test head modules. See [“Electrostatic Discharge Protection” on page 1-4](#).

---

### The System as Shipped

The N5250A system components will arrive packaged separately. For a complete list of components shipped with your system, refer to [Table 3-1 on page 3-3](#).

When the entire shipment has arrived, contact Agilent Technologies to arrange for system installation, if installation is available in your area. See [“Agilent Support, Services, and Assistance” on page 5-4](#).

Keep the shipping containers until the system checklist has been completed, and the system has been checked for physical damage.

If the shipping container is damaged or the packaging material shows signs of stress, notify the carrier as well as the Agilent Technologies Customer Engineer. Keep the shipping materials for the carrier’s inspection. Agilent Technologies will arrange for repair or replacement of damaged equipment without waiting for a claim settlement from the carrier. Refer to [“Agilent Support, Services, and Assistance” on page 5-4](#).

### Agilent Technologies Customer Engineering

An Agilent Technologies Customer Engineer will be assigned to help you install the system. During installation, the Customer Engineer will do the following:

- Unpack the system components.
- Complete the system checklist, see [Table 3-1 on page 3-3](#).
- Connect the E8361A H11 PNA and the N5260A millimeter head controller.
- Install the millimeter-wave test head modules.
- Run a performance verification of the system, which includes a measurement calibration.
- Provide user training for one engineer.

## System Contents

Use the table below to verify that the shipment is complete. These are items that are supplied with all N5250A complete systems only.

**Table 3-1 N5250A System Contents**

✓	Agilent Part Number	Qty	Description
	<b>N5250A-700</b> (Standard)	0 or 1	Vector network analyzer system, 10 MHz to 110 GHz, 1.0 mm (m) test ports
	Includes:		E8361A H11 PNA, N5260A millimeter head controller, N5260A-110 millimeter-wave test head modules, port 1 attenuator, and cables
	<b>N5250A-017</b> (Option 017)	0 or 1	Vector network analyzer system, 10 MHz to 110 GHz, 1.0 mm (m) test ports
	Includes:		E8361A H11 PNA, N5260A millimeter head controller, N5260A-120 millimeter-wave test head modules with bias-tees, port 1 attenuator, and cables
	<b>N5250A-018</b> (Option 018)	0 or 1	Vector network analyzer system, 10 MHz to 110 GHz, 1.0 mm (m) test ports
	Includes:		E8361A H11 PNA, N5260A millimeter head controller, N5260A-120 millimeter-wave test head modules with bias-tees, port 1 and 2 attenuators, and cables
	<b>E8361A H11</b> Includes:	1	PNA series microwave vector network analyzer (10 MHz to 67 GHz)
	E8361A Option H11	1	IF Access
	E8361A Option 014	1	Configurable test set
	E8361A Option UNL	1	Source Attenuators and Bias-Tees
	E8361A Option 080	1	Frequency Offset
	E8361A Option 081	1	Reference Channel Switch
	E8356-90001	1	PNA Series Network Analyzer Installation and Quick Start Guide
	<b>N5260A</b>	1	Millimeter Head Controller
	Includes:		
	85105-60030	2	Bias Cable (48" length)
	85105-60033	4	IF Signal Cable (48" length)
	8121-1221	4	RF and LO 3.5 mm Cable (48" length)
	8120-6818 Was 08503-60051	1	Test Set Interface Cable

**Table 3-1 N5250A System Contents (Continued)**

	8120-1839	4	IF Signal Cable
	5061-9038	2	RF and LO SMA Cable
	1250-2604	4	SMA Right Angle Adapter (Not required unless needed with 8121-1221 cables.)
	5063-9226	1	Handle Set
	5063-9232	1	Rack Mount Flange Set
	N5250A-90001	1	Installation and Service Guide
	<b>N5260A-110</b> (Standard)	0 or 1	millimeter-wave test head modules, port 1 attenuator, 67 GHz to 110 GHz, 1 mm (m) test ports
	Includes:		
	N5260-60007 Includes:	1	Left millimeter-wave test head
	N5260-60002	1	Left combiner assembly
	N5260-60003	1	67 GHz to 110 GHz Wave Guide T/R Module with Attenuator
	N5260-60006 Includes:	1	Right millimeter-wave test head
	N5260-60001	1	Right combiner assembly
	N5260-60004	1	67 GHz to 110 GHz Wave Guide T/R Module
	N5260-60009	2	PNA Front Panel Test Port RF 1.85 mm (f)-(m) Cable (30" length)
	8121-1233	2	PNA Front Panel Access Port RF 1.85 mm (m)-(m) Cable (30" length)
	<b>N5260A-120</b> (Option 017)	0 or 1	Millimeter-wave test head modules with bias-tees, port 1 attenuator, 67 GHz to 110 GHz, 1mm (m) test ports
	Includes:		
	N5260-60011 Includes:	1	Left millimeter-wave test head with bias-tee
	N5260-60013	1	Left combiner assembly with bias-tee
	N5260-60003	1	67 GHz to 110 GHz Wave Guide T/R Module with Attenuator
	N5260-60010 Includes:	1	Right millimeter-wave test head with bias-tee
	N5260-60012	1	Right combiner assembly with bias-tee
	N5260-60004	1	67 GHz to 110 GHz Wave Guide T/R Module

**Table 3-1 N5250A System Contents (Continued)**

	8121-1233	4	PNA Front Panel Access Port RF 1.85 mm (m)-(m) Cable (30" length)
	<b>N5260A-130</b> (Option 018)	0 or 1	Millimeter-wave test head modules with bias-tees, port 1 and 2 attenuators, 67 GHz to 110 GHz, 1mm (m) test ports
	Includes:		
	N5260-60011 Includes:	1	Left millimeter-wave test head with bias-tee
	N5260-60013	1	Left combiner assembly with bias-tee
	N5260-60003	1	67 GHz to 110 GHz Wave Guide T/R Module with Attenuator
	N5260-60022 Includes:	1	Right millimeter-wave test head with bias-tee
	N5260-60012	1	Right combiner assembly with bias-tee
	N5260-60003	1	67 GHz to 110 GHz Wave Guide T/R Module with Attenuator
	8121-1233	4	PNA Front Panel Access Port RF 1.85 mm (m)-(m) Cable (30" length)

## Site Preparation

### Power Requirements

Before installing the system, be sure that the required ac power is available at all necessary locations.

- Three-wire power cables (which provide a safety ground) must be used with all instruments.
- Air-conditioning equipment (or other motor-operated equipment) should not be placed on the same ac line that powers the system.
- The table below lists the maximum VA ratings and BTU/hour ratings for all instruments in the system. This table can be used to determine both the electrical requirements and the air conditioning requirements of the system.

**Table 3-2 Power Requirements of the System**

Standard Equipment		
Instrument	Maximum VA Rating	Maximum BTU/hour
E8361A H11	350	1195
N5260A millimeter head controller	320	1095
N5260-60007 left test head module or N5260-60006 right test head module	(powered from controller)	(powered from controller)
N5260-60011 left test head module or N5260-60010 right test head module	(powered from controller)	(powered from controller)
N5260-60011 left test head module or N5260-60022 right test head module	(powered from controller)	(powered from controller)
Total	670	2290

Notes:

- (1) Values are based on 120 Vac supplied to each instrument at 60 Hz.
- (2) The N5260A millimeter head controller supplies power to the test head modules.



## Environmental Requirements

The environmental requirements shown below are characteristic for the system and are based on the limitations of the E8361A network analyzer used.

**Table 3-3 Environmental Requirements**

Temperature	
Operation	5 °C to 40 °C (41 °F to 104 °F)
Storage	-40 °C to +65 °C (-40 °F to +158 °F)
Measurement Calibration	20 °C to 26 °C (68 °F to 79 °F)
Performance Verification	Temperature must be within 1 °C (1.8 °F) of the temperature at which the measurement calibration was performed.
Relative Humidity	Type tested at 95%, +40 °C (non-condensing)
Pressure Altitude	Type tested 0 to 4600 meters (~15,000 feet)

### System Heating and Cooling

Install air conditioning and heating, if necessary, to maintain the ambient temperature within the appropriate range (as given in the table above). Air conditioning capacity must be consistent with the BTU ratings given in [Table 3-2 on page 3-6](#).

### Required Conditions for Accuracy Enhanced Measurement

Accuracy-enhanced (error-corrected) measurements require the ambient temperature of the N5250A to be maintained within  $\pm 1$  °C of the ambient temperature at calibration.

## Protect Against Electrostatic Discharge (ESD)

This is important. If not properly protected against, electrostatic discharge can seriously damage your analyzer, resulting in costly repair.

---

**CAUTION** To reduce the chance of electrostatic discharge, follow all of the recommendations outlined in [“Electrostatic Discharge Protection”](#) on [page 1-4](#).

---

## Review the Principles of Connector Care

Proper connector care and connection techniques are critical for accurate and repeatable measurements. Refer to [Table 5-1 on page 5-3](#) for tips on connector care.

Prior to making connections to your analyzer, carefully review the information about inspecting, cleaning, and gaging connectors. Refer to the calibration kit documentation for detailed connector care information.

## Space Requirements

Standard installation of the N5250A system includes configuration and installation of the system on a customer provided lab bench or table top of adequate size and strength.

### System Weight and Dimensions

- 55 kg (110 lb)
- Required Bench Top Dimensions for the System:
  - Clearance above bench top: 43 cm (17 in)
  - Width: 127 cm (50 in)
  - Depth: 102 cm (40 in)




### Component Weight and Dimensions

[Table 3-4](#) shows the maximum weight and dimensions of the N5250A system components. Refer also to [Figure 3-1 on page 3-9](#) for test head module dimensions.

**Table 3-4 N5250A System Components Weights and Dimensions**

Model	Weight	Height	Width	Depth
Millimeter-wave test head module (each)	3.5 kg (7.5 lb, ± 0.5 lb)	6.9 cm (2.7 in)	50.7 cm (20 in)	17.8 cm (6.9 in)
E8361A, Option H11 PNA	29 Kg (64 lb) nominal	26.7 cm (10.5 in)	42.5 cm (16.7 in)	42.6 cm (16.8 in)
N5260A millimeter- head controller	9.1 Kg (20 lb)	9.0 cm (3.5 in)	42.4 cm (16.75 in)	49.5 cm (19.5 in)

**Figure 3-1 Test Head Module Dimensions for Mounting**

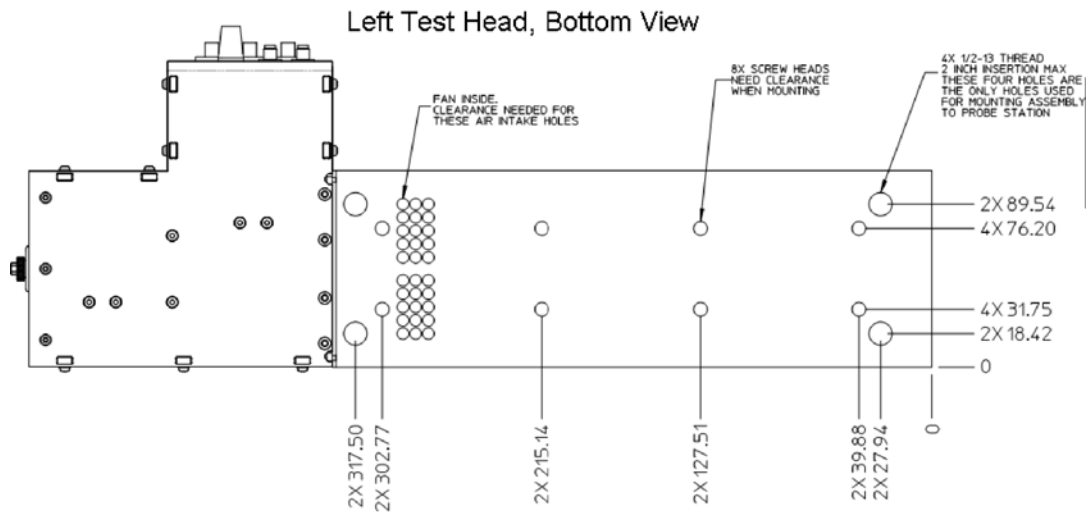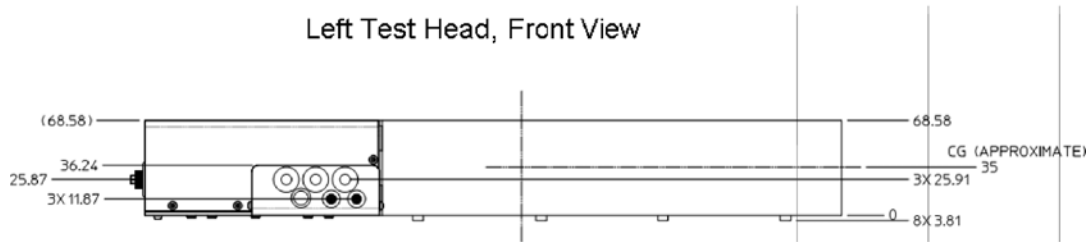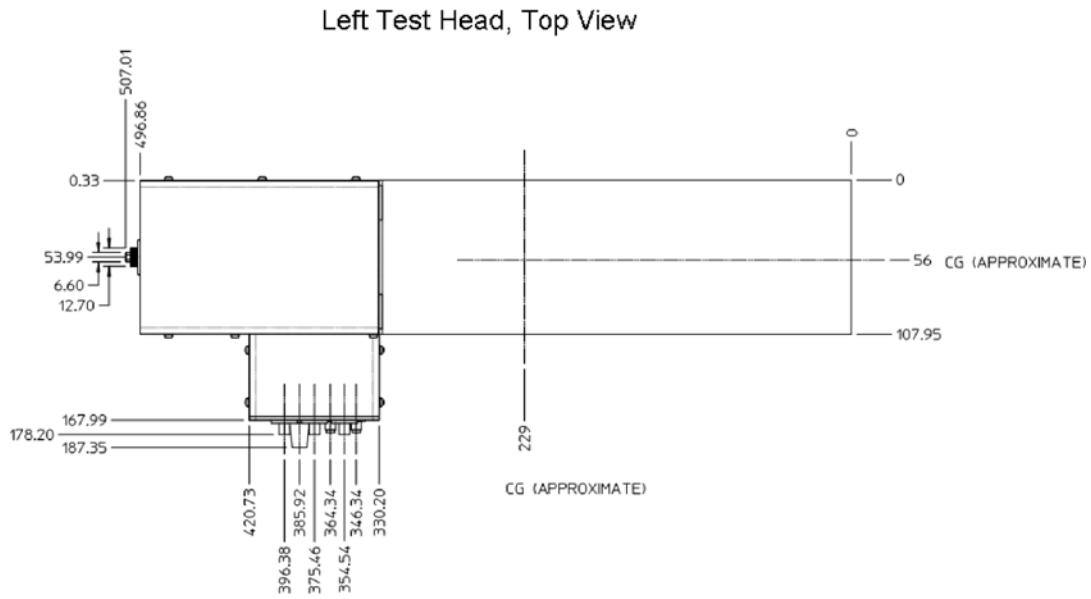

Left and Right Heads are Symmetrical  
 All dimension are in mm

N5250\_001\_313

## PNA, Controller, and Test Head Module Interconnections


### Rear Panel Cabling

Figure 3-2 shows the rear panel cabling. For front-panel cabling between the N5260A millimeter head controller and the test head modules, see “Front Panel Cabling” on page 3-11.

Figure 3-2 Rear View Cabling diagram

E8361A PNA Series  
Network Analyzer with  
Options 014, 080, 081,  
UNL, and H11

N5260A  
Millimeter-Head  
Controller

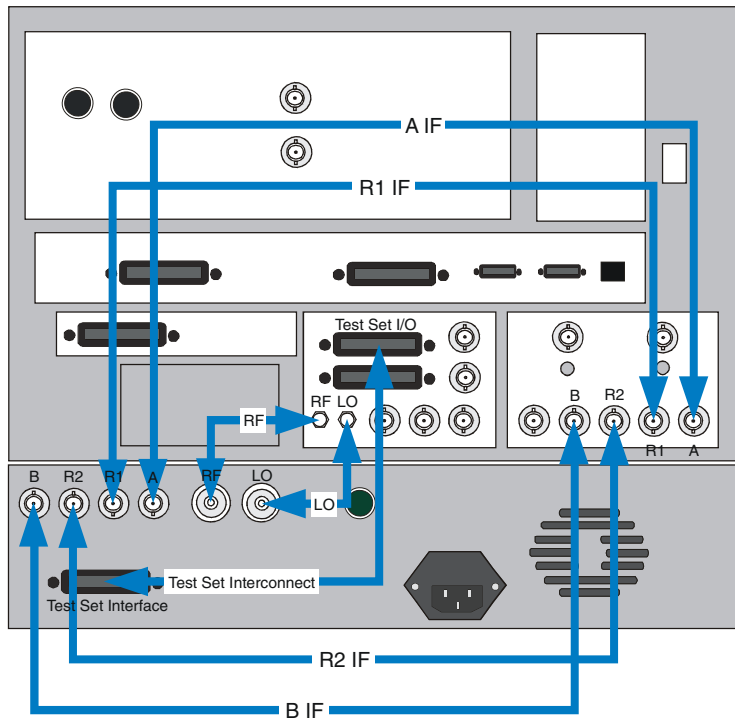

n5250\_001\_304

## Front Panel Cabling

The front-panel interconnections between the N5260A millimeter head controller and the test head modules are shown in [Figure 3-3](#), [Figure 3-4](#), and [Figure 3-6](#).

The test head modules are placed on the work surface in front of the PNA and head controller as shown. When the test head modules are facing each other like this, the Port 1 connector faces the Port 2 connector.


Refer to [“Sequence of Test Head Module Connections”](#) on page 3-13 for power supply connections to the test head modules.

---


**NOTE** The order in which cables are connected to a test head module is significant; see [“Sequence of Test Head Module Connections”](#) on page 3-13.

---


**Figure 3-3 N5250A Standard Configuration**

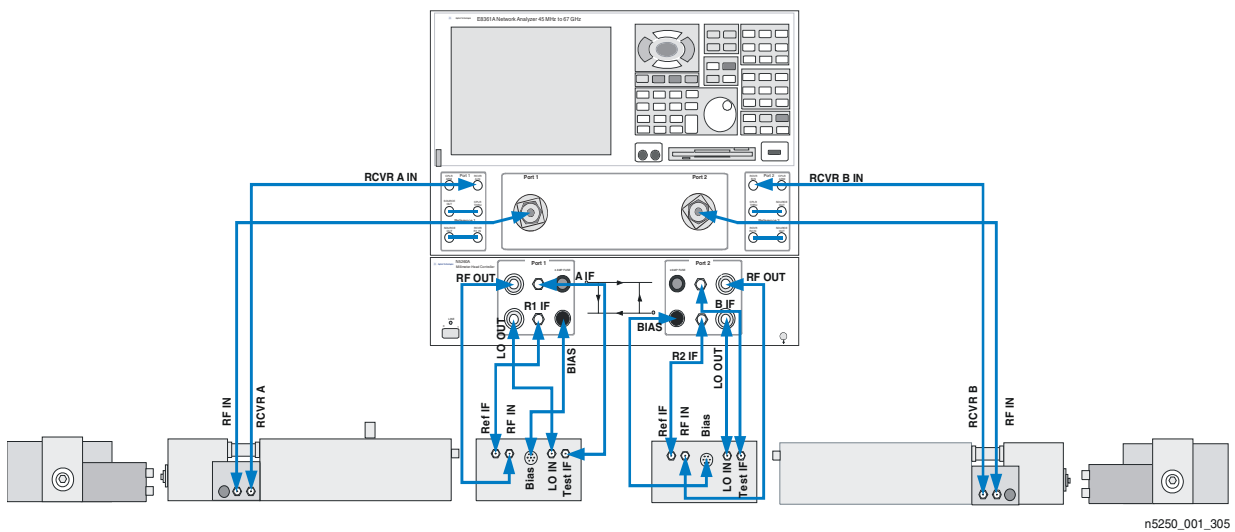


**Figure 3-4 N5250A Option 017/018 Configuration**

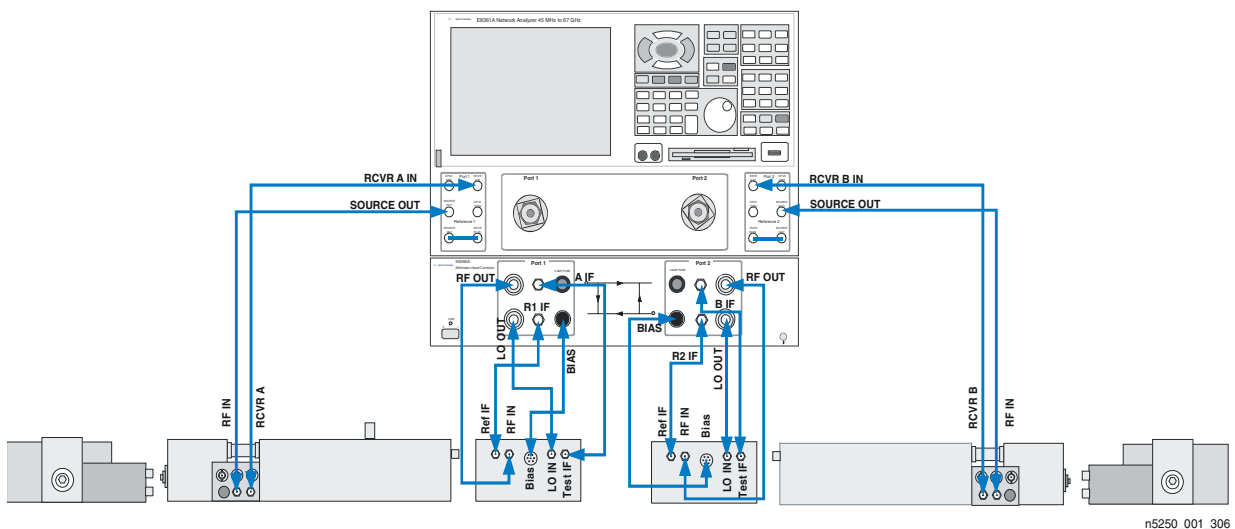

**Figure 3-5 N5250A Option 018 Configuration**

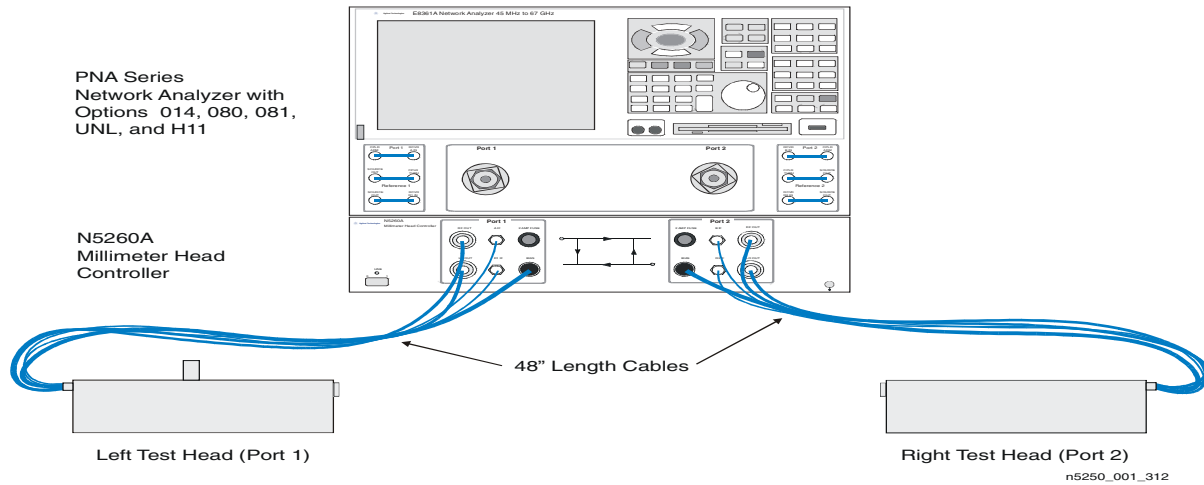

**Figure 3-6 N5250A Waveguide Test Port Configuration with Combiner Assemblies Removed (Banded Solution for N5260A)**

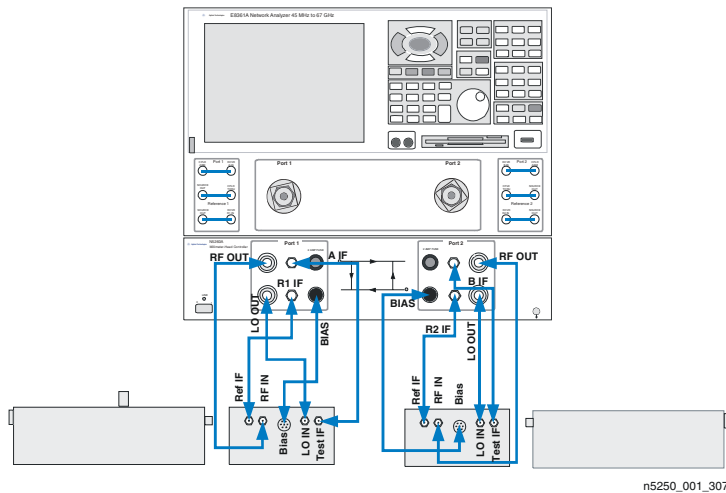

**NOTE** See “[Disconnecting the Combiner Assembly From the mm-Wave Module](#)” on [page 3-17](#) for a procedure to remove the combiner assemblies.

## Sequence of Test Head Module Connections

---


**NOTE** Use a 57 N-cm (5 in-lb) torque wrench to tighten the SMA connectors and a 90 N-cm (8 in-lb) torque wrench to tighten the 1.85 mm and 3.5 mm connectors.

---

The connectors on the backs of the test head modules are very closely spaced. Attaching cables to these connectors is easiest if they are attached in the following sequence as illustrated in [Figure 3-7](#).

- ① BIAS; +12V @ 1.5A
- ② RF INPUT; SMA connector, 11.17–19.33 GHz @ +5 to +13 dBm
- ③ LO INPUT; SMA connector, 8.37–14.5 GHz @ +5 to +13 dBm
- ④ Ref IF; SMA connector
- ⑤ Test IF; SMA connector
- ⑥ RCVR A or B; 1.85 mm connector
- ⑦ RF IN (Port 1 or 2); 1.85 mm connector
- ⑧ Ground unit (GNDU); sub mini-triax connector (N5250A Options 017 and 018)
- ⑨ Sense; sub mini-triax connector (N5250A Options 017 and 018)
- ⑩ Force; sub mini-triax connector (N5250A Options 017 and 018)

**Figure 3-7 Test Head Module Cabling Sequence**

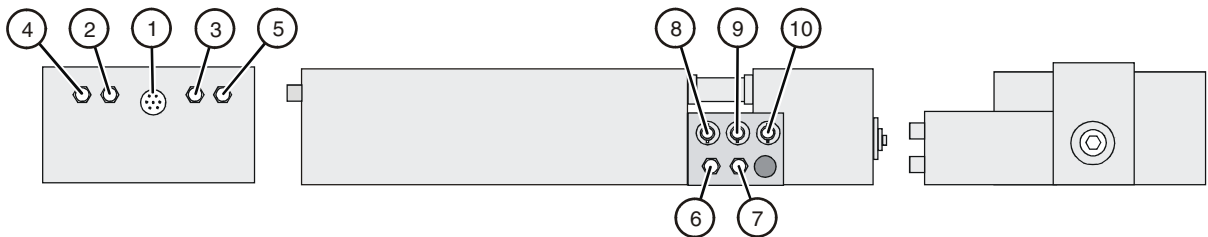

n5250\_001\_308

## System Cable Connections

In this table, a complete from/to connection list is given for the E8361A network analyzer, the N5260A millimeter head controller, and the left and right test head modules. In other words, each cable is listed twice, and can be found by looking up the connection from either end. The duplicate listings make it easier to check the cabling after installation, if a cabling error is suspected.

**Table 3-5 N5250A Cable List and Connections**

From E8361A H11 Network Analyzer:	To:	Cable Type	Part Number
<b>Rear Panel:</b>			
8.333 MHz IF Input A	N5260A–IF Output A	BNC	8120-1839
8.333 MHz IF Input R1	N5260A–IF Output R1	BNC	8120-1839
8.333 MHz IF Input R2	N5260A–IF Output R2	BNC	8120-1839
8.333 MHz IF Input B	N5260A–IF Output B	BNC	8120-1839
Test Set Drivers RF	N5260A–RF Drive	SMA	5061-9038
Test Set Drivers LO	N5260A–LO Drive	SMA	5061-9038
Test Set I/O	N5260A–Test Set Interface	Multi pin	8120-6818 Was 08503-60051
<b>Front Panel:</b>			
Rcvr A	Rcvr A N5260-60001 <i>or</i> N5260-60013	1.85 mm (30" length)	8121-1233
Rcvr B	Rcvr B N5260-60002 <i>or</i> N5260-60012	1.85 mm (30" length)	8121-1233
Test Port 1 (N5250A Standard)	N5260-60002–RF In	1.85 mm (30" length)	N5260-60009
Test Port 2 (N5250A Standard)	N5260-60001–RF In	1.85 mm (30" length)	N5260-60009
Source Out 1 (N5250A Options 017/018)	N5260-60013–RF In	1.85 mm (30" length)	8121-1233
Source Out 2 (N5250A Options 017/018)	N5260-60012–RF In	1.85 mm (30" length)	8121-1233
From N5260A Millimeter Head Controller:	To:	Cable Type	Part Number
<b>Front Panel:</b>			
Bias (Port 1)	Bias (+12 V) N5260-60003	Multi pin (48" length)	85105-60030



**Table 3-5 N5250A Cable List and Connections (Continued)**

A IF (Port 1)	Test IF N5260-60003	SMA (48" length)	85105-60033
R1 IF (Port 1)	Ref IF N5260-60003	SMA (48" length)	85105-60033
RF Out (Port 1)	RF In N5260-60003	3.5 mm (48" length)	8121-1221
LO Out (Port 1)	LO In N5260-60003	3.5 mm (48" length)	8121-1221
Bias (Port 2)	Bias (+12 V) N5260-60004	Multi pin (48" length)	85105-60030
R2 IF (Port 2)	Ref IF N5260-60004	SMA (48" length)	85105-60033
B IF (Port 2)	Test IF N5260-60004	SMA (48" length)	85105-60033
RF Out (Port 2)	RF In N5260-60004	3.5 mm (48" length)	8121-1221
LO Out (Port 2)	LO In N5260-60004	3.5 mm (48" length)	8121-1221
<b>Rear Panel:</b>			
IF Output A	8.333 MHz IF Input A E8361A H11	BNC	8120-1839
IF Output R1	8.333 MHz IF Input R1 E8361A H11	BNC	8120-1839
IF Output R2	8.333 MHz IF Input R2 E8361A H11	BNC	8120-1839
IF Output B	8.333 MHz IF Input B E8361A H11	BNC	8120-1839
RF Drive	Test Set Drivers RF E8361A H11	SMA	5061-9038
LO Drive	Test Set Drivers LO E8361A H11	SMA	5061-9038
Test Set Interface	Test Set I/O E8361A H11	Multi pin	8120-6818 Was 08503-60051
From Right Millimeter-Wave Test Head Module:	To:	Cable Type	Part Number
Bias (+12 V) N5260-60004	Bias N5260A	Multi pin (48" length)	85105-60030

**Table 3-5 N5250A Cable List and Connections (Continued)**

Test IF N5260-60004	A IF N5260A	SMA (48" length)	85105-60033
Ref IF N5260-60004	R1 IF N5260A	SMA (48" length)	85105-60033
RF In N5260-60004	RF Out N5260A	3.5 mm (48" length)	8121-1221
LO In N5260-60004	LO Out N5260A	3.5 mm (48" length)	8121-1221
RF In N5260-60001 (N5250A Standard)	Test Port 2 E8361A H11	1.85 mm (30" length)	N5260-60009
RF In N5260-60012 (N5250A Options 017/018)	Source Out 2 E8361A H11	1.85 mm (30" length)	8121-1233
Rcvr B N5260-60001 <i>or</i> N5260-60012	Rcvr B E8361A H11	1.85 mm (30" length)	8121-1233
From Left Millimeter-Wave Test Head Module:	To:	Cable Type	Part Number
LO In N5260-60003	LO Out	3.5 mm (48" length)	8121-1221
RF IF N5260-60003	RF Out	3.5 mm (48" length)	8121-1221
Ref IF N5260-60003	R2 IF	SMA (48" length)	85105-60033
Test IF N5260-60003	B IF	SMA (48" length)	85105-60033
Bias (+12 V) N5260-60003	Bias	Multi pin (48" length)	85105-60030
RF In N5260-60002 (N5250A Standard)	Test Port 1 E8361A H11	1.85 mm (30" length)	N5260-60009
RF In N5260-60013 (N5250A Options 017/018)	Source Out 1 E8361A H11	1.85 mm (30" length)	8121-1233
Rcvr A N5260-60002 <i>or</i> N5260-60013	Rcvr A E8361A H11	1.85 mm (30" length)	8121-1233


---

## Disconnecting the Combiner Assembly From the mm-Wave Module

The mm-wave (waveguide) modules can be used stand-alone for 67 to 110 GHz high power W-band (WA-10) waveguide measurements.

### Old Design

**Figure 3-8. Old Design Combiner Assembly and mm-Wave Module**

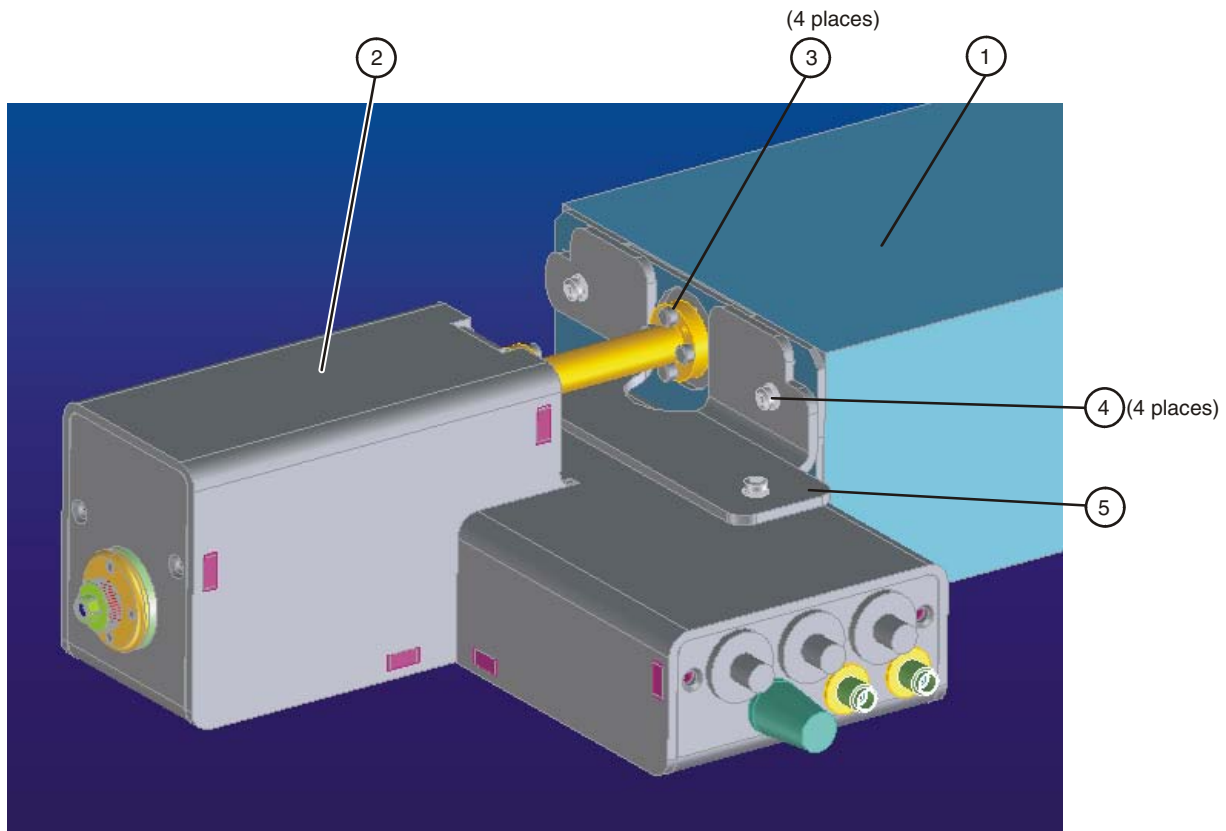

N5230\_013\_315

Refer to [Figure 3-8](#). To use the mm-wave modules without the combiner assembly, disconnect the combiner assembly (item 2) from the mm-wave (waveguide) module (item 1) using this procedure:

1. Loosen the four waveguide screws (item 3).
2. Remove the four screws (item 4) and the bracket (item 5).
3. Reverse the process to reassemble.

---


**NOTE** Do NOT switch modules. Combiner must be reassembled to the mm-wave module in which it was originally installed.

---

4. Perform an Operator's Check after reassembly to test for power holes, etc.

## New Design

**Figure 3-9 New Design Combiner Assembly and mm-Wave Module: View 1**

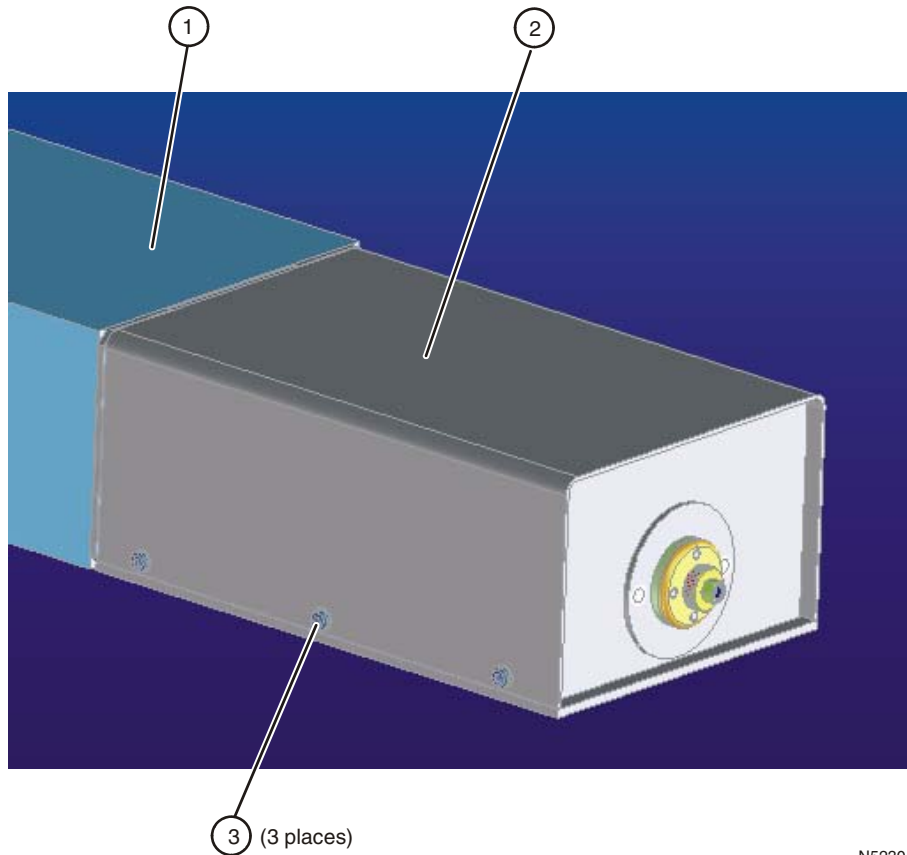


N5230\_013\_316

Refer to [Figure 3-9](#). To use the mm-wave modules without the combiner assembly, disconnect the combiner assembly (item 2) from the mm-wave (waveguide) module (item 1) using this procedure:

1. Remove the three screws (item 3).


**Figure 3-10 New Design Combiner Assembly and mm-Wave Module: View 2**

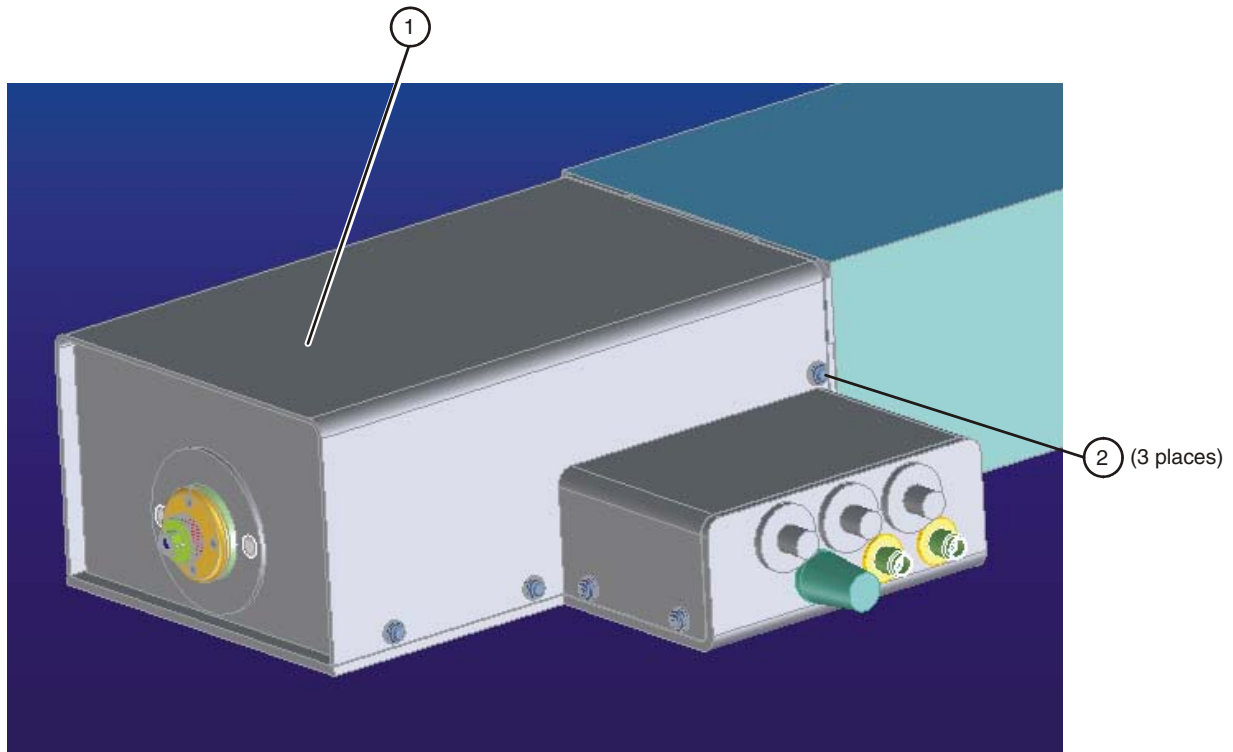

N5230\_013\_317

2. Remove the 3 screws (item 2).
3. Remove the large cover (item 1)

**Figure 3-11 New Design Combiner Assembly and mm-Wave Module: View 3**

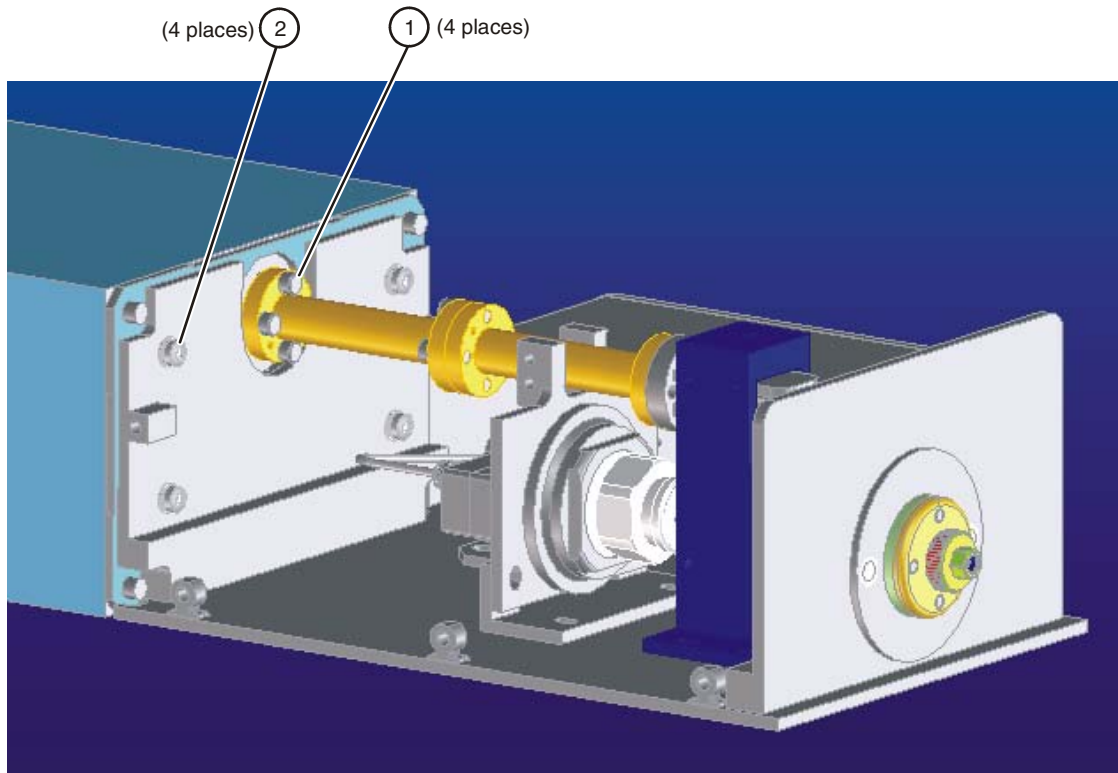

N5230\_013\_318

4. Remove the four waveguide screws (item 1).
5. Remove the four screws (item 2).
6. Reverse the process to reassemble.

---

**NOTE** Do NOT switch modules. Combiner must be reassembled to the mm-wave module in which it was originally installed.

---

7. Perform an Operator's Check after reassembly to test for power holes, etc.

---

## **4 System Specifications**

## Specifications

### System Specifications (*typical*)

The N5250A system has typical (non-warranted) specifications only. See [Table 4-1](#).

**Table 4-1 Typical System Specifications**

Test Port Power (dBm)	1.0 mm Test Port (Std. <sup>a</sup> or Opt 017 or 018 <sup>b</sup> )	1.85 mm PNA Port	WR-10 Waveguide Port
10 MHz to 45 MHz	-8	-7	
45 MHz to 500 MHz	-3	-1	
500 MHz to 2 GHz	0	+2	
2 GHz to 10 GHz	-2	+2	
10 GHz to 24 GHz	-5	0	
24 GHz to 30 GHz	-7	0	
30 GHz to 40 GHz	-10	-1	
40 GHz to 45 GHz	-15	-5	
45 GHz to 50 GHz	-12	-1	
50 GHz to 60 GHz	-17	-4	
60 GHz to 67 GHz	-22	-8	
67 GHz to 70 GHz	-9		-2
70 GHz to 75 GHz	-7		0
75 GHz to 80 GHz	-6		+1
80 GHz to 100 GHz	-5		+1
100 GHz to 110 GHz	-8		-2
Noise Floor (dBm)	1.0 mm Test Port	1.85 mm PNA Port	Waveguide Port
10 MHz to 45 MHz	-71	-72	
45 MHz to 500 MHz	-97	-98	
500 MHz to 2 GHz	-120	-121	
2 GHz to 10 GHz	-118	-121	
10 GHz to 24 GHz	-116	-121	
24 GHz to 30 GHz	-107	-112	
30 GHz to 40 GHz	-102	-108	



**Table 4-1 Typical System Specifications (Continued)**

40 GHz to 45 GHz	-99	-106		
45 GHz to 50 GHz	-97	-104		
50 GHz to 60 GHz	-97	-104		
60 GHz to 67 GHz	-92	-103		
67 GHz to 70 GHz	-77			-84
70 GHz to 75 GHz	-81			-87
75 GHz to 80 GHz	-91			-97
80 GHz to 100 GHz	-94			-100
100 GHz to 110 GHz	-95			-100
<b>System Dynamic Range (dB)</b>	<b>1.0 mm Test Port</b>	<b>1.85 mm PNA Port</b>	<b>Waveguide Port</b>	
10 MHz to 45 MHz	63	65		
45 MHz to 500 MHz	94	97		
500 MHz to 2 GHz	120	123		
2 GHz to 10 GHz	116	123		
10 GHz to 24 GHz	111	121		
24 GHz to 30 GHz	100	112		
30 GHz to 40 GHz	92	107		
40 GHz to 45 GHz	84	101		
45 GHz to 50 GHz	85	103		
50 GHz to 60 GHz	80	100		
60 GHz to 67 GHz	75	95		
67 GHz to 70 GHz	68			82
70 GHz to 75 GHz	74			87
75 GHz to 80 GHz	85			98
80 GHz to 100 GHz	89			101
100 GHz to 110 GHz	87		98	
<b>Test Port Damage Level (dBm)</b>	<b>1.0 mm Test Port</b>	<b>1.85 mm PNA Port</b>	<b>Waveguide Port</b>	
10 MHz to 110 GHz	+27	+27	+27	

- a. Assumes a 30 inch cable from the PNA 1.85 mm Test Port Out is used to provide the 10 MHz to 67 GHz source signal. The standard configuration does not have a bias-tee in the 1.0 mm test head and uses this connection.

- b. Assumes a 30 inch cable from the PNA Source Out bulkhead connector is used to provide the 10 MHz to 67 GHz source signal. The Option 017 and 018 configurations includes a bias-tee in the 1.0 mm test head and use this connection.

## General E8361A/C Option H11 Specifications

---

**NOTE** The E8361A Option H11 specifications are identical to the specifications given for the E8361A Option UNL, 080, 081, and 014 in the E8361A data sheet.

---

## E8361A Option H11 Rear Panel Specifications

**Table 4-2 General E8361A/C H08 and H11 Rear Panel Specifications**

IF Connectors	A, R1, R2, B
IF Connector Input Frequency	8.333 MHz
0.1 dB Compression Points at IF inputs	-27.0 dBm
Pulse Input Connectors <sup>a</sup>	A, R1, R2, B (BNC connectors)
Drive Voltage	TTL (0, +5.0) Volts
Nominal Input Impedance at IF Inputs	50 Ohms
RF Damage Level to IF Connector Inputs	-20.0 dBm
DC Damage Level to IF Connector Inputs	25 Volts
Nominal Input Impedance at Pulse Inputs	1 Kohm
Minimum IF Gate Width	20 ns for less than 1 dB deviation from theoretical performance <sup>b</sup>
DC Damage Level to Pulse Connector Inputs	5.5 volts
Rear Panel LO Power - Test Port Frequency (see 836x H11 PNA Specifications for test port frequencies up to 67 GHz)	
67 GHz to 110 GHz <sup>c</sup>	-7 to -13 dBm

**Table 4-2 General E8361A/C H08 and H11 Rear Panel Specifications**

Rear Panel RF Power - Test Port Frequencies (see 836x H11 PNA Specifications for test port frequencies up to 67 GHz)	
67 GHz to 76 GHz <sup>d</sup>	-4 to -10 dBm
76 GHz to 96 GHz <sup>d</sup>	+1 to -5 dBm
96 GHz to 110 GHz <sup>d</sup>	+5 to -1 dBm


- a. Pulse input connectors are operational only with Option H08 (Pulsed Measurement Capability) enabled.
- b. Based on deviation from signal reduction equation: Signal Reduction (dB) =  $20\log_{10}(\text{Duty\_cycle}) = 20\log_{10}(\text{pulse\_width/period})$ . Measured at Pulse Repetition Frequency (PRF) of 1 MHz.
- c. For rear panel LO port frequency, divide by 8.
- d. For rear panel RF port frequency, divide by 6.

**N5250A Option 017 and 018 Test Head Bias-Tees Specifications**

**Table 4-3 Test Head Bias Input Connector**

GNDU:	Sub Mini-Triaxial Connector, Trompeter BJ152 Insulated Bulkhead Jack (150 Series)
Sense:	Sub Mini-Triaxial Connector, Trompeter BJ152 Insulated Bulkhead Jack (150 Series)
Force:	Sub Mini-Triaxial Connector, Trompeter BJ152 Insulated Bulkhead Jack (150 Series)
Maximum Voltage:	± 30 VDC (typical)
Damage Voltage:	± 40 VDC
Maximum Current:	± 0.5 AMP


**Figure 4-1 Internal Connection Diagram for the Test Head Bias-Tee**

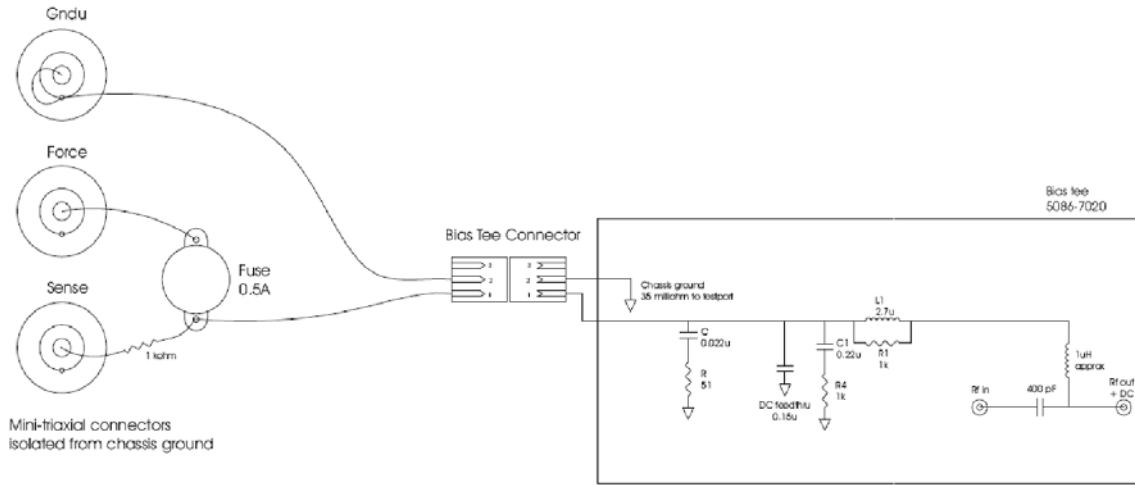

N5250\_001\_401

TEST HEAD BIAS-TEE CIRCUIT

**Figure 4-2 External Connection Diagram for the Test Head Bias-Tee**

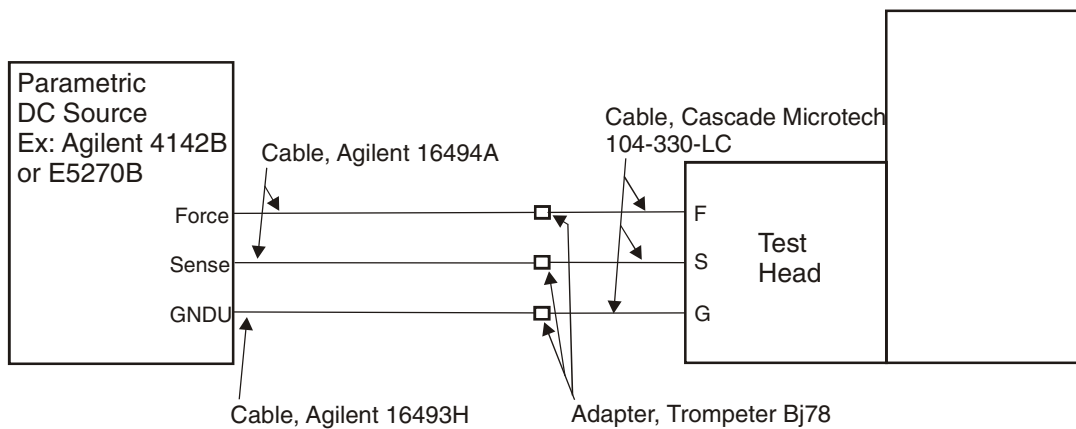

NOTE: GNDU is connected to only one of the test heads.  
A second GNDU connection is not required.

N5250\_001\_402

**NOTE** Refer to the documentation of your parametric DC source for the appropriate cables to use for connecting to the test head bias tee.

- Test head sub-miniature triax connectors are BJ152 bulkhead jacks from Trompeter Electronics ([www.trompeter.com](http://www.trompeter.com)).
- Parametric DC source connectors are standard triax.

---

## **5 Maintenance and Support**

---

## Maintenance

---

**WARNING** To prevent electrical shock, disconnect the analyzer from the mains source before cleaning. Use a dry cloth or one slightly dampened with water to clean the external case parts. Do not attempt to clean internally.

---

### Physical Maintenance

Clean the cabinet, including the front panel, using a dry or slightly damp cloth only.

### Electrical Maintenance

Refer to “Agilent Support, Services, and Assistance” on page 5-4.

---

## Caring for Waveguide (WG) Interfaces

A clean surface at millimeter-wave frequencies is much more important than at lower frequencies because any debris on the waveguide surface can potentially distort the measurement results.

Caring for WG interfaces is not difficult. Dirt and dust can be removed using the following:

- Isopropyl alcohol 99.5 %<sup>1</sup>
- Lint-free cloth
- Pressurized air (for dust removal)

To remove dirt on the waveguide surface, simply put a few drops of isopropyl alcohol on a lint-free cloth and gently wipe the surface.

To remove dust, simply spray the pressurized air on the waveguide surface.

---

1. Use isopropyl alcohol only in a well-ventilated area. Allow all residual alcohol moisture to evaporate, and the fumes to dissipate, prior to assembling waveguide interfaces.

## Principles of Connector Care

Proper connector care and connection techniques are critical for accurate and repeatable measurements. Refer to [Table 5-1](#) for tips on connector care.

Prior to making connections to your analyzer, carefully review the information about inspecting, cleaning, and gaging connectors. Refer to the calibration kit documentation for detailed connector care information.

For course numbers about additional connector care instruction, contact Agilent Technologies. Refer to [“Contacting Agilent” on page 5-4](#).

**Table 5-1 Connector Care Quick Reference Guide**

Handling and Storage	
<b>Do</b> <ul style="list-style-type: none"> <li>• Keep connectors clean</li> <li>• Extend sleeve or connector nut</li> <li>• Use plastic end-caps during storage</li> </ul>	<b>Do Not</b> <ul style="list-style-type: none"> <li>• Touch mating-plane surfaces</li> <li>• Set connectors contact-end down</li> <li>• Store connectors or adapters loose</li> </ul>
Visual Inspection	
<b>Do</b> <ul style="list-style-type: none"> <li>• Inspect all connectors carefully</li> <li>• Look for metal particles, scratches, and dents</li> </ul>	<b>Do Not</b> <ul style="list-style-type: none"> <li>• Use a damaged connector - ever</li> </ul>
Connector Cleaning	
<b>Do</b> <ul style="list-style-type: none"> <li>• Try compressed air first</li> <li>• Use isopropyl alcohol<sup>a</sup></li> <li>• Clean connector threads</li> </ul>	<b>Do Not</b> <ul style="list-style-type: none"> <li>• Use any abrasives</li> <li>• Get liquid into plastic support beads</li> </ul>
Gaging Connectors	
<b>Do</b> <ul style="list-style-type: none"> <li>• Clean and zero the gage before use</li> <li>• Use the correct gage type</li> <li>• Use correct end of calibration block</li> <li>• Gage all connectors before first use</li> </ul>	<b>Do Not</b> <ul style="list-style-type: none"> <li>• Use an out-of-specification connector</li> </ul>
Making Connections	
<b>Do</b> <ul style="list-style-type: none"> <li>• Align connectors carefully</li> <li>• Make preliminary connection contact lightly</li> <li>• Turn only the connector nut</li> <li>• Use a torque wrench for final connection</li> </ul>	<b>Do Not</b> <ul style="list-style-type: none"> <li>• Apply bending force to connection</li> <li>• Over tighten preliminary connection</li> <li>• Twist or screw any connection</li> <li>• Tighten past torque wrench “break” point</li> </ul>

- a. Cleaning connectors with alcohol shall only be done with the instrument’s power cord removed, and in a well-ventilated area. Allow all residual alcohol moisture to evaporate, and the fumes to dissipate, prior to energizing the instrument.

---

## Agilent Support, Services, and Assistance

Information on the following topics is included in this section.

- “Service and Support Options”
- “Contacting Agilent”
- “Shipping an Item to Agilent for Service or Repair”

### Service and Support Options

The N5250A system has a *one-year on-site service warranty* which covers troubleshooting the system to an individual instrument, device, or cable. In addition, each of the components (instrument, device, or cable) in the system has its own warranty. Refer to the documentation provided with those components for the appropriate warranty information.

---

**NOTE** There are many repair and calibration options available from the Agilent Technologies support organization. These options cover a range of service agreements with varying response times. Contact Agilent for additional information on available service agreements for this product. Refer to “Contacting Agilent” on page 5-4.

---

### Contacting Agilent

Assistance with test and measurements needs and information or finding a local Agilent office are available on the Web at:

<http://www.agilent.com/find/assist>

If you do not have access to the Internet, please contact your Agilent field engineer.

---

**NOTE** In any correspondence or telephone conversation, refer to the Agilent product by its model number and full serial number. With this information, the Agilent representative can determine whether your product is still within its warranty period.

---

### Shipping an Item to Agilent for Service or Repair

---

**IMPORTANT** Agilent Technologies reserves the right to reformat or replace the internal hard disk drive in the network analyzer, contained in this system, as part of its repair. This will erase all user information stored on the hard disk. It is imperative, therefore, that you make a backup copy of your critical test data located on the analyzer’s hard disk before shipping it to Agilent for repair.

---

If you wish to send an item from your system to Agilent Technologies for service or repair:

- Include a complete description of the service requested or of the failure and a description of any failed test and any error message.
- Ship the item using the original or comparable antistatic packaging materials.
- Contact Agilent for instructions on where to ship the item. Refer to “Contacting Agilent” on page 5-4.



---

## **6 Performance Tests and Checks**

---

## Allow the Analyzer to Warm Up

---

**NOTE** To achieve the maximum system stability, allow the analyzer to warm up for at least 90 minutes.

---

---

## Protect Against Electrostatic Discharge (ESD)

This is important. If not properly protected against, electrostatic discharge can seriously damage your analyzer, resulting in costly repair.

---

**CAUTION** To reduce the chance of electrostatic discharge, follow all of the recommendations outlined in [“Electrostatic Discharge Protection” on page 1-4](#), for all of the procedures in this chapter.

---

---

## Review the Principles of Connector Care

Proper connector care and connection techniques are critical for accurate and repeatable measurements. Refer to [Table 5-1 on page 5-3](#) for tips on connector care.


Prior to making connections to your analyzer, carefully review the information about inspecting, cleaning, and gaging connectors. Refer to the calibration kit documentation for detailed connector care information.

## System Check

1. Connect a 1.0 mm short to Port 1 and Port 2.
2. Restart the PNA application and perform a factory preset by pressing the **PRESET** key.
3. On the PNA menu bar, select: **System > Service > Utilities > Receiver Display**.
4. Set the IF bandwidth to 1 kHz.

The traces on the display should be similar to the example traces shown in [Figure 6-1](#). If there are power holes, examine the system for loose or damaged cables, dirty or damaged connectors, proper connector torque etc.

**Figure 6-1 Typical Receiver Display**

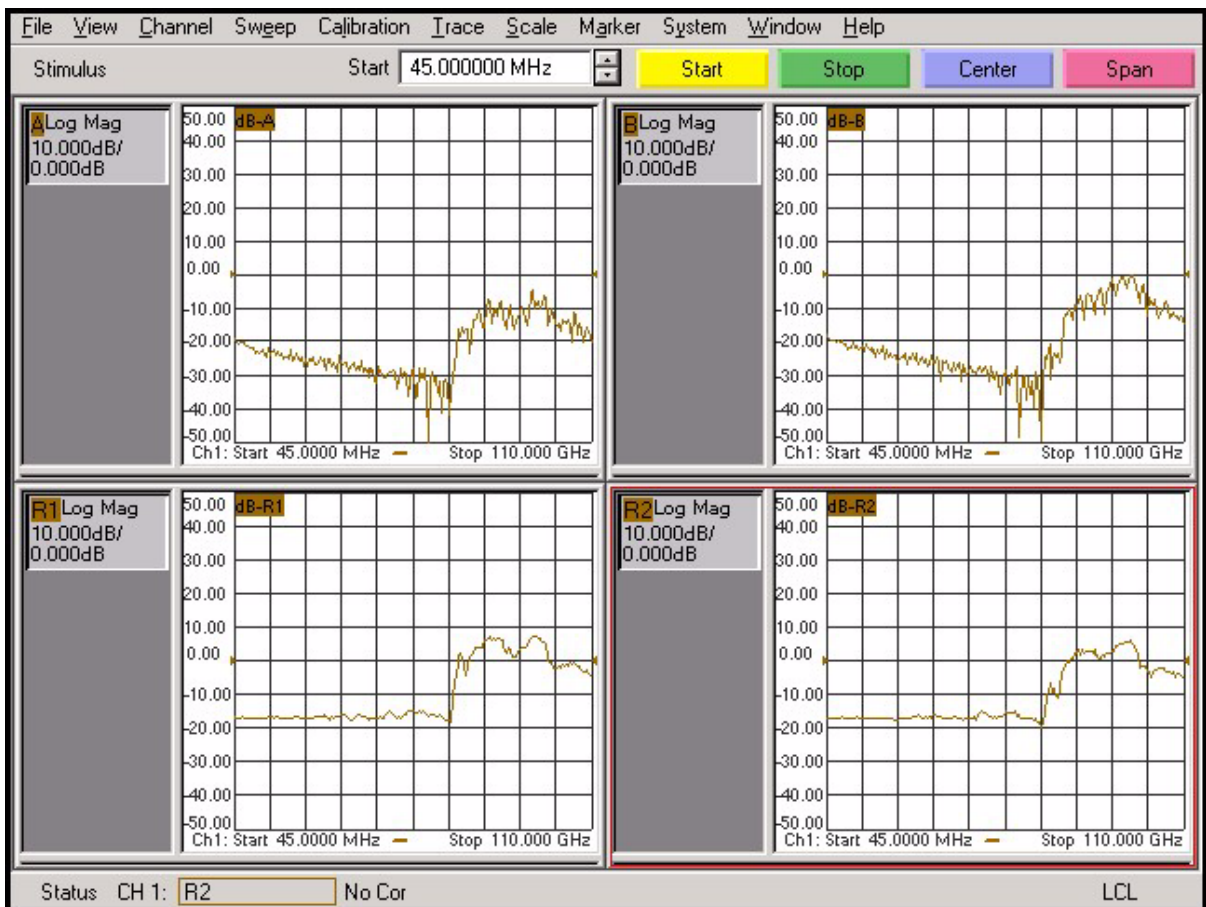

---

## System Performance Verification

---

**NOTE** Since the N5250A has typical (non-warranted) specifications only, the SYSTEM PERFORMANCE VERIFICATION is not a PASS/FAIL test. The SYSTEM PERFORMANCE VERIFICATION is a test to establish BASELINE PERFORMANCE after the installation.

---

The system verification procedure is automated by the analyzer firmware. For each verification device, the analyzer reads a file from the verification disk and sequentially measures the magnitude and phase for all four S-parameters.

System verification is performed at the N5250A system 1.0 mm port connectors over a frequency range of 45 MHz to 110 GHz with an Agilent 85059A 1.0 mm calibration and verification kit.

For system verification to perform correctly, it is **NECESSARY** that the verification devices be measured with their female connectors connected to Port 1 and their male connectors connected to Port 2.

The following procedure, and the connection prompts given, use the 11500-60001 (11500I) 1.0 mm female-to-female cable connected to Port 2. This cable is included in the 85059A 1.0 mm calibration and verification kit.

### When to Verify

After installation of the system is complete, a performance verification is necessary to assure proper system operation. This initial verification is included with the installation.

After the initial verification, the verification should be repeated once a year. This recommended interval assumes that Agilent cables are used with the system.

If non-Agilent cables, adaptors, or other fixtures are used, the verification schedule must be determined by the user, as the characteristics of these devices are unknown. In establishing a verification schedule, the following factors should be considered:

- Frequency of use
- Amount of cable movement
- Amount of drift occurring between prior verifications

---

**NOTE** Performance verification of a system performed at long intervals is *not* to be confused with measurement calibration. Measurement calibration typically is performed on a daily basis, or when the measurement setup or conditions have changed.

---

## Materials Required

The following materials are required to run the tests:

- N5250A system (including system cables)
- 85059A 1.0 mm precision calibration and verification kit


## General Preparation

Prepare for performance verification by completing the following procedure:

1. Measure the environment temperature and humidity. The temperature must be between +20 °C and +26 °C. Additionally, the temperature cannot vary by more than  $\pm 1$  °C after calibration.
2. Perform a thorough installation checkout on the N5250A system.
3. Power on the system components in the following order:
  - a. N5260A millimeter head controller
  - b. E8361A Option H11 PNA
4. Remember to allow at least 90 minutes for warm up and temperature stabilization of the components. The temperature of the calibration and verification kit must be stable with the environment temperature.
5. If you desire printed test outputs, connect a printer to the analyzer. For the printer, ensure that the correct driver is loaded and the printer is defined as the default printer. Refer to the embedded help in the analyzer for printer setup.


## Verification Procedure

Figure 6-2 System Verification Dialog Box

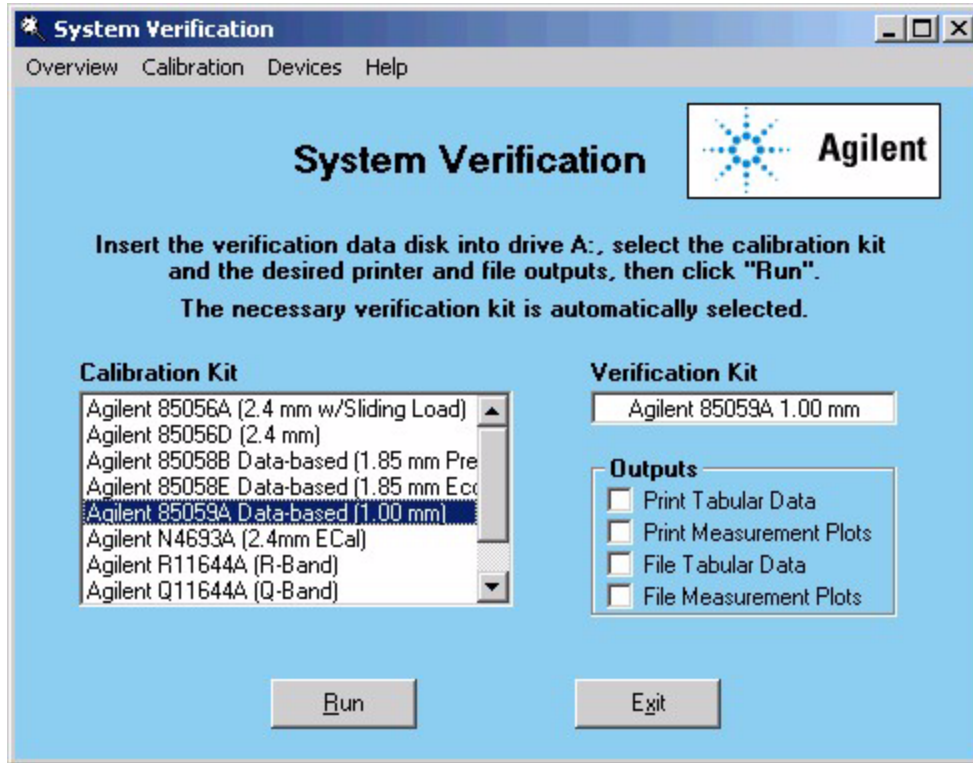

1. Insert the verification kit data disk into the analyzer disk drive.
2. On the **System** menu, point to **Service**, and then click **System Verification**. The **System Verification** dialog box is displayed; refer to [Figure 6-2](#).

**Figure 6-3 System Verification Connections**

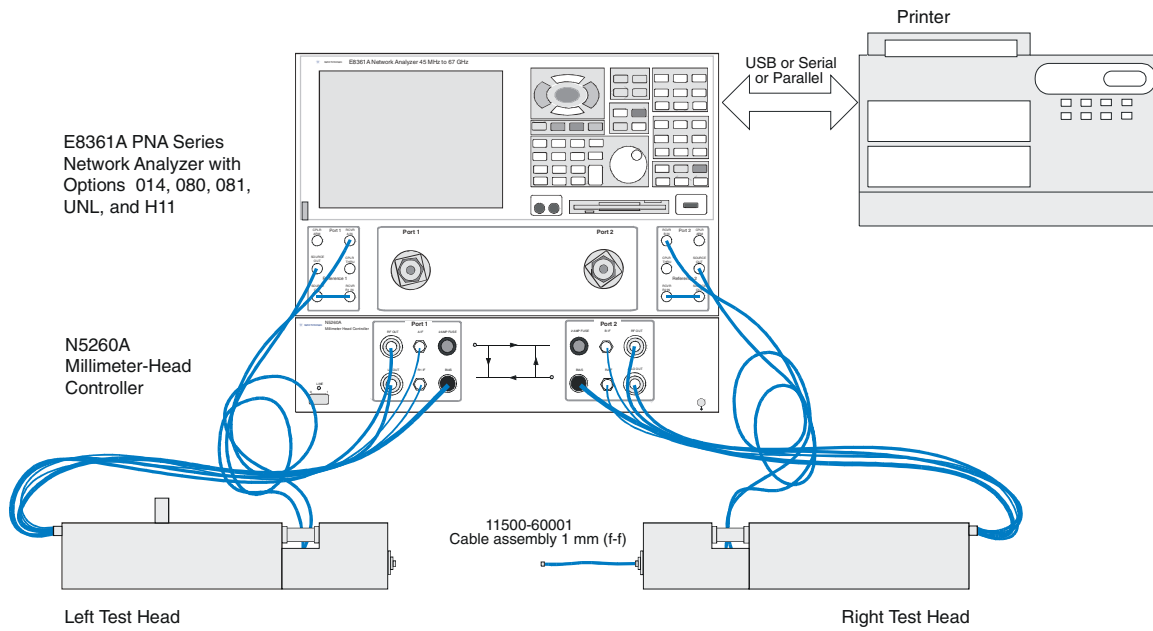

3. In the **Calibration Kit** box, select the “Agilent 85059A Data-based (1.00 mm)” calibration kit by clicking on it. The corresponding verification kit to use is selected for you and displayed in the **Verification Kit** box. Refer to [Figure 6-2](#).
4. Under **Outputs**, select from the following options to print the results or save the results to a file. Refer to [Figure 6-2](#).
  - **No Selection:** No printout or file of results.
  - **Tabular Data:** Print or file the verification data in tabular form which includes measured data. For an example, refer to [Figure 6-5 on page 6-10](#).
  - **Measurement Plots:** Print or file the verification data in graphical form. The graphical form includes the measured data trace and factory supplied data trace. For an example, refer to [Figure 6-6 on page 6-11](#).
  - **Selection of Both:** Print or file the verification data in both formats.

---

**NOTE** For printed output, it is assumed that the printer has been tested and the Windows 2000 driver is installed for the printer that is being used. The system verification test prints to the printer that has been designated as the default printer. (On the Windows Desktop display, click on **My Computer**, **Control Panel**, and then **Printers** to verify the printer setup.)

---

5. Click **Run**.

6. Install the 1.0 mm female to female cable (8.8 cm, Agilent part number 11500-60001) onto the right test head (port 2) prior to calibration as shown in [Figure 6-3](#). This cable is part of the 85059A 1.0 mm Precision Calibration and Verification Kit and is considered to be a test port cable.

---

**CAUTION** Do not remove this test port cable once the Calibration/Verification process has begun. If the test port cable becomes loose or is removed during the calibration/verification process, the calibration is invalid.

---

---

**CAUTION** Do not pull on the connectors on the ends of the test port cable—this will damage the cable. Avoid damaging the cable once it is connected to port 2 by carefully making the thru connection between the two test heads. This is best done by placing the two test heads on a smooth surface and gently sliding the right test head (port 2) towards the left test head (port 1).

---

7. Follow the instructions on the analyzer for performing a full 2-port calibration. The parameters for the calibration are setup automatically by the program.
8. At the last step of the calibration sequence it is necessary to make a thru connection. To make the thru connection, gently slide the right test (port 2) towards the left test head (port 1) a little bit at a time, while turning the threaded ring on the left head test port connector by hand onto the cable attached to the right test head. Do not use the threaded ring on the test port connector to pull the cable into the connector. Repeat this process until the cable is firmly seated into port 1, then make the threaded ring barely finger tight. Finally use the torque wrench on the port 1 threaded ring and a backup wrench on the cable to tighten the connection.
9. After completion of the full 2-port calibration, follow the instructions on the analyzer for performing the system verification. Use the match thru and mismatch thru verification standards provided with the 85059A 1.0 mm Precision Calibration and Verification kit. Insert the devices as shown in [Figure 6-4](#).


---

**NOTE** It is recommended to connect the Verification Standards to the test port cable on port 2 prior to attempting to connect to port 1. Then follow the recommended procedure for making a thru connection outlined under Step 8 above to avoid damaging the cable.

---



**Figure 6-4 System Verification Device Connections**

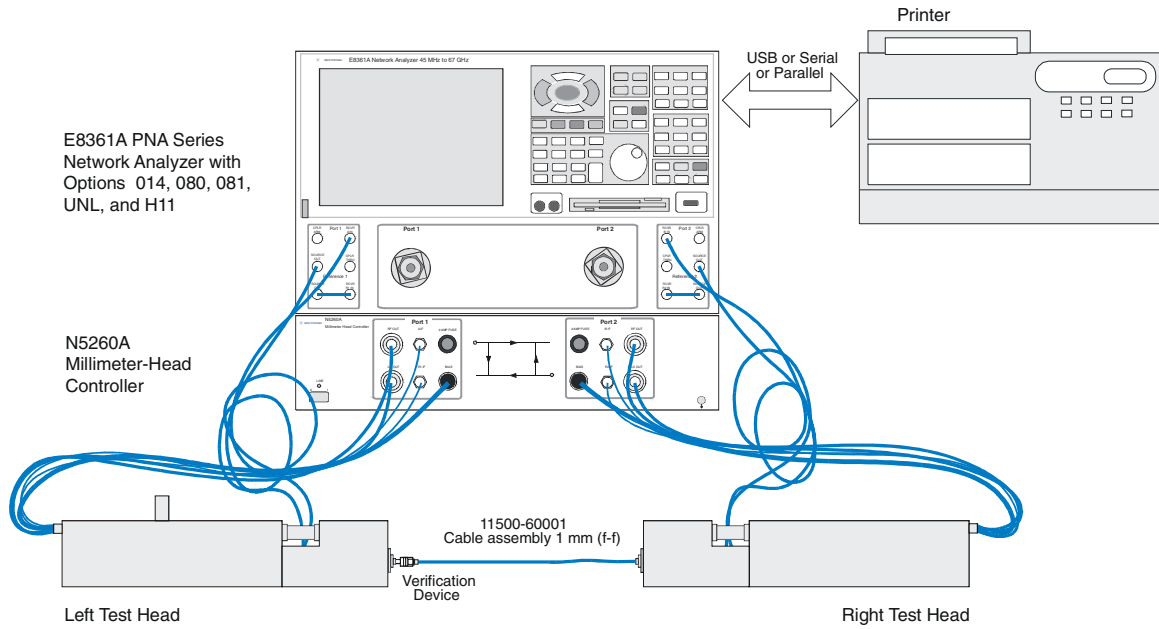

n5250\_001\_604

## Interpreting the Verification Results

Figure 6-5 shows an example of typical verification results with **Tabular Data** selected in the **Outputs** area of the **System Verification** dialog box.

At the top of the printed output is the name of the device, the serial number of the device, and the date tested.

Each S-parameter measurement result is printed with the frequency tested, the factory data, and the measured data.

**Figure 6-5 Example of Printed Tabular Verification Results**

Sys Ver -- Match Thru magnitude results, Serial #00378 -- 10/2/2003 4:26:34 PM  
 Instrument Tested: E8361A 014 & UNL US43140014


S11 Results

Freq. (MHz)	S11 Factory Data (lin)	S11 Measured (lin)
45	.001	.001
2500	.007	.005
5000	.016	.006
7500	.01	.013
10000	.011	.013
12500	.01	.007
15000	.007	.005
17500	.016	.017
20000	.019	.023
22250	.025	.016
22500	.026	.016
25000	.016	.008
27500	.006	.027
30000	.014	.036
32500	.018	.03
35000	.02	.012
37500	.023	.022
40000	.014	.042
42500	.008	.036
44500	.008	.025
45000	.009	.016
47500	.021	.013
50000	.022	.023
52500	.021	.026
55000	.023	.008
57500	.02	.013
60000	.007	.019
62500	.022	.017
65000	.044	.006
66750	.054	.021
67500	.056	.027
70000	.054	.033
72500	.035	.028
75000	.006	.02
77500	.036	.017
80000	.051	.038
82500	.051	.037
85000	.043	.027
87500	.025	.034
89500	.012	.036
90000	.01	.034
92500	.033	.024
95000	.063	.027
97500	.078	.049
100000	.082	.059
102500	.057	.037
105000	.009	.018
107500	.042	.054
110000	.079	.081

Figure 6-6 shows an example of typical verification results with **Measurement Plots** selected in the **Outputs** area of the **System Verification** dialog box. The screen shot graphical results show the following:

- the name of the device measured
- the serial number of the device
- the parameters measured
- Results of the measurements.
- Data measured at the factory from the verification kit.

**Figure 6-6 Example of Printed Graphical Verification Results**

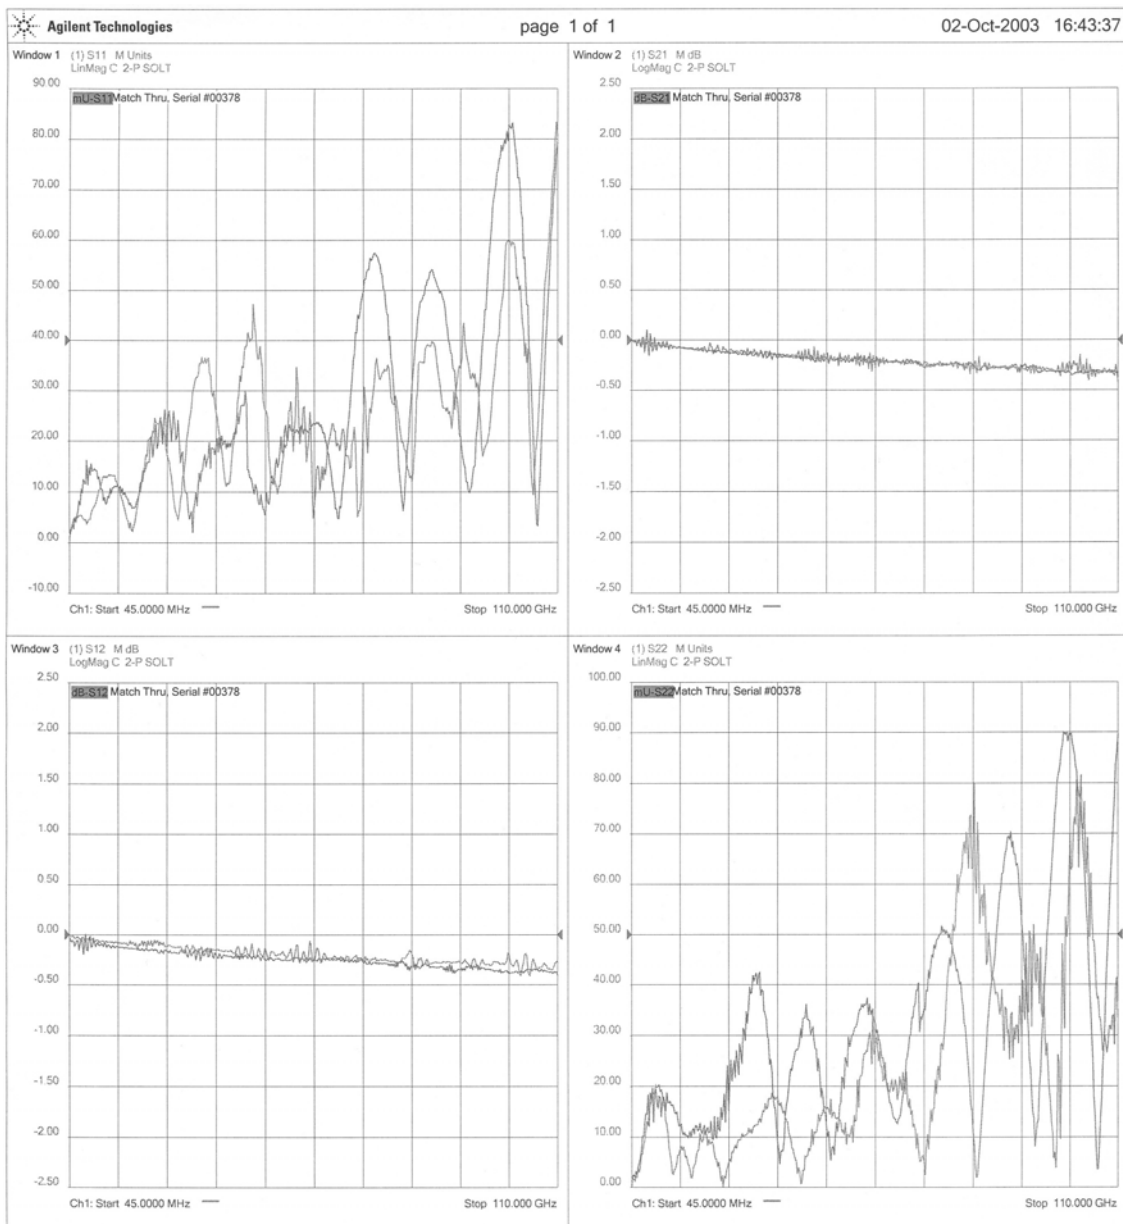

## Improving the Verification Results

---

**IMPORTANT** Inspect all connections. *Do not* remove the test port cable from the analyzer test port. This *will invalidate* the calibration that you performed earlier.

---

1. Disconnect and clean the device that failed the verification measurement.
2. Reconnect the device making sure that all connections are torqued to the proper specifications.
3. Measure the device again.
4. If the device still fails the verification measurement, check the measurement calibration by viewing the error terms as described in the PNA Series Network Analyzer embedded help system, “*Monitoring Error Terms Using Cal Set Viewer*”. It will be necessary to re-calibrate if there is a problem with the calibration. The system will not verify correctly with a bad calibration.

---

## **7 Replaceable Parts**

---

## Ordering Information

To order a part listed in the replaceable parts lists:

- include the part number
- indicate the quantity required
- Contact Agilent Technologies for instructions on where to send the order. Refer to [“Contacting Agilent” on page 5-4](#).

To order a part that is not listed in the replaceable parts lists:

- include the instrument model number and complete instrument serial number
- include the description and function of the part
- indicate the quantity required
- Contact Agilent Technologies for instructions on where to send the order. Refer to [“Contacting Agilent” on page 5-4](#).

## Replaceable Parts

**Table 7-1 Replaceable Parts List**

Agilent Part Number	Description
<b>Waveguide Modules:</b>	
N5260-69003	67 GHz to 110 GHz waveguide T/R module with attenuator. Exchange is available only when the customer's module is returned to the factory for service.
N5260-69004	67 GHz to 110 GHz waveguide T/R module without attenuator Exchange is available only when the customer's module is returned to the factory for service.
<b>Combiner Assembly Parts:</b>	
N5260-60005	WR-10 2-inch long waveguide section
1390-0765	4-40 captive screw (waveguide flange)
2190-0556	4-40 split-lock washer (waveguide flange)
N5260-00007	Bracket—right combiner assembly
N5260-00008	Bracket—left combiner assembly
0515-0372	M3.0 x 8 mm screw (bracket)
85104-60061	1.0 mm test port connector
2190-0104	Washer (for 1 mm test port connector)
2950-0132	Nut (for 1 mm test port connector)
2110-0046	Fuse (inch) 0.5A, 125V NTD BI. Fuse for bias tee (option 017 and 018)
<b>System Front Cables:</b>	
8121-1221	N5260A millimeter head controller RF and LO 3.5 mm cable (48" length)
85105-60033	N5260A millimeter head controller IF signal cable (SMA) (48" length)
85105-60030	N5260A millimeter head controller bias cable (48" length)
8121-1233	E8361A PNA front panel access port RF 1.85 mm (m)-(m) cable (30" length)
N5260-60009	E8361A PNA front panel test port RF 1.85 mm (f)-(m) cable (Option 700) (30" length)
1250-2604	SMA right angle adapter (Used only with 8121-1221 cable.)
<b>System Rear Cables:</b>	
8120-1839	N5260A millimeter head controller IF signal cable (BNC)
8120-6818 Was 08503-60051	N5260A millimeter head controller test set interface cable

**Table 7-1 Replaceable Parts List (Continued)**

<b>Agilent Part Number</b>	<b>Description</b>
5061-9038	N5260A millimeter head controller RF and LO SMA cable
<b>Accessories and Documentation:</b>	
9211-8177	Shipping container for millimeter-wave test heads and subcomponents (combiner assembly and/or waveguide T/R module)
N5250-90001	Part number is for reference only. Documentation is available only on the Internet. Refer to <a href="#">“Printing Copies of Documentation from the Web”</a> on page iii for instructions on locating this documentation.



## A

### Agilent

- assistance, 5-4
- contacting, 5-4
- customer engineering, 3-2
- service and support options, 5-4
- services, 5-4
- support, 5-4
- system installation, 3-2

### analyzer

- warmup time, 6-2

## B

### battery disposal, 1-7

### before applying power, 1-2

## C

### cabling

- front panel, 3-11
- rear panel, 3-10
- system, 3-14

### care of connectors, 3-8, 5-3, 6-2

### care of waveguide, 5-2

### caution, 1-2

### CE mark, 1-6

### certification, 1-ii

### check

- system, 6-3

### cleaning

- connectors, 5-3
- waveguide, 5-2

### coaxial

- measurement, 2-4

### coaxial configuration, 2-2

### combiner assembly

- description of, 2-7

### configuration

- coaxial, 2-2
- wafer probe, 2-2

### connectors

- care of, 3-8, 5-3, 6-2
- care quick reference, 5-3
- cleaning, 5-3

### contacting Agilent, 5-4

### contents

- checklist, 3-3
- of shipment, 3-3

### CSA mark, 1-6

### customer engineering

- Agilent, 3-2

## D

### device connections

- system verification, 6-9

### DFARS, 1-ii

### dimensions

- system, 3-8

- system components, 3-8

### documentation

- on the Web, 1-iii
- printing from the Web, 1-iii

## E

### E8361A PNA

- specifications, 4-4

### earth ground, 1-2

### electrostatic discharge, *See ESD*

### environmental requirements

- system, 3-7

### ESD

- protection, 1-4, 3-8, 6-2

## F

### front panel cabling, 3-11

## G

### general safety considerations, 1-2

### ground, safety earth, 1-2

## H

### head controller, 2-6

## I

### installing

- the system, 3-2

### instruction documentation

- symbol, 1-6

### instrument markings, 1-6

### ISM1-A mark, 1-6

## L

### lithium battery disposal, 1-7

## M

### maintenance

- cleaning, 5-2
- electrical, 5-2
- physical, 5-2
- system, 5-2

### measurement

- coaxial, 2-4
- wafer probe, 2-5

### millimeter head controller, 2-6

### millimeter-wave test head module

- cable connections, 3-13

### millimeter-wave test head

- modules

- description of, 2-7
- theory of operation, 2-8

### millimeter-wave test heads

- by OML, Inc., 2-11
- specifications, 2-10
- warranty, 2-10

## N

### N5250A system

- as shipped, 3-2
- basic configurations, 2-4
- cable connections, 3-14
- check, 6-3
- components
  - weights and dimensions, 3-8
- description of, 2-2
- environmental requirements, 3-7

### front panel cabling, 3-11

### illustration of, 2-2

### installation, 3-2

### maintenance, 5-2

### partial, 2-3

### power requirements, 3-6

### rear panel cabling, 3-10

### receiving, 3-2

### replaceable parts, 7-3

### shipment checklist, 3-3

### shipment contents, 3-3

### shipment for service or repair, 5-4

### site preparation, 3-6

### space requirements, 3-8

### specifications, 4-2

### verification, 6-4

### weight and dimensions, 3-8

### What's included?, 2-3

### N5260A millimeter head

### controller, 2-6

## O

### OML, Inc.

- contact information, 2-11
- millimeter-wave test heads, 2-11

### operation

- millimeter head controller, 2-6

### millimeter-wave test head

- modules, 2-8

### Option 017

- description of, 2-2
- test head bias tees
  - specifications, 4-5

### Option 018

- description of, 2-2
- test head bias tees
  - specifications, 4-5

### options

service and support, 5-4  
system, 2-2, 2-3  
**ordering information**  
replaceable parts, 7-2

## P

**parts**  
replaceable  
ordering information, 7-2  
**PNA**  
specifications, 4-4  
**power requirements**  
system, 3-6  
**printing**  
documentation, 1-iii  
**product**  
certification, 1-ii  
warranty statement, 1-ii  
**protection**  
against ESD, 1-4, 3-8, 6-2

## R

**rear panel cabling**, 3-10  
**receiver display utility**, 6-3  
**receiving**  
the system, 3-2  
**regulatory information**, 1-5  
**repair**  
shipping to Agilent for, 5-4  
**replaceable parts**  
ordering information, 7-2  
system, 7-3  
**Restricted Rights Notice**, 1-ii

## S

**safety**  
considerations, 1-2  
earth ground, 1-2  
symbols, 1-2  
**service**  
contacting Agilent, 5-4  
options, 5-4  
shipping to Agilent for, 5-4  
warnings, 1-3  
warranty  
standard, 5-4  
**shipment**  
checklist, 3-3  
contents, 3-3  
for service or repair, 5-4  
**site preparation**  
system, 3-6  
**space requirements**  
system, 3-8  
**specifications**  
E8361A PNA, 4-4

millimeter-wave test heads,  
2-10  
stabilization, warm up time, 6-2  
system, 4-2  
test head bias tees, 4-5  
**stabilization**  
warm up time, 6-2  
**support**  
contacting Agilent, 5-4  
options, 5-4  
organization, 5-4  
**system**  
as shipped, 3-2  
basic configurations, 2-4  
cable connections, 3-14  
check, 6-3  
components  
weight and dimensions, 3-8  
description of, 2-2  
environmental requirements,  
3-7  
front panel cabling, 3-11  
illustration of, 2-2  
installation, 3-2  
maintenance, 5-2  
options, 2-2, 2-3  
partial, 2-3  
power requirements, 3-6  
rear panel cabling, 3-10  
receiving, 3-2  
replaceable parts, 7-3  
shipment checklist, 3-3  
shipment contents, 3-3  
shipment for service or repair,  
5-4  
site preparation, 3-6  
space requirements, 3-8  
specifications, 4-2  
verification, 6-4  
device connections, 6-9  
dialog box, 6-7  
example of results, 6-10, 6-11  
weight and dimensions, 3-8  
What's included?, 2-3

## T

**test head bias tees**  
specifications, 4-5  
**test head module**  
cable connections, 3-13  
**test head modules**  
description of, 2-7  
**test heads**  
description of, 2-7

## V

**verification**  
system, 6-4  
device connections, 6-9  
dialog box, 6-7  
example of results, 6-10, 6-11

## W

**wafer probe**  
equipment and accessories, 2-5  
measurement, 2-5  
**wafer probe configuration**, 2-2  
**warm up**  
analyzer, 6-2  
**warning**, 1-2  
**warnings for servicing**, 1-3  
**warranty**  
millimeter-wave test heads,  
2-10  
service  
standard, 5-4  
**warranty statement**, 1-ii  
**waveguide**  
care of, 5-2  
cleaning, 5-2  
**waveguide module**  
description of, 2-7  
**weight**  
system, 3-8  
system components, 3-8  
**weight and dimensions**  
system, 3-8  
system components, 3-8