

User's and Programmer's Reference N9072A cdma2000 Mode

Agilent X-Series Signal Analyzers

This manual provides documentation for the following X-Series Analyzers:

MXA Signal Analyzer N9020A

EXA Signal Analyzer N9010A



Manufacturing Part Number: N9072-90004

Supersedes: N9072-90003

Printed in USA

August 2008

© Copyright 2007 - 2008 Agilent Technologies, Inc

Legal Information

The information contained in this document is subject to change without notice.

Agilent Technologies makes no warranty of any kind with regard to this material, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Agilent Technologies shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Where to Find the Latest Information

Documentation is updated periodically.

- For the latest information about Agilent Technologies Spectrum Analyzers, including software upgrades and application information, go to:

<http://www.agilent.com/find/mxa>

<http://www.agilent.com/find/exa>

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

1. Using Help

| | |
|---|-----|
| How Help is Organized..... | 94 |
| The Embedded Help System..... | 97 |
| Front Panel Keys used by the Help System..... | 97 |
| Opening the Help Window..... | 98 |
| Other Help Resources..... | 98 |
| Navigating Windows Help Files..... | 99 |
| Navigating Acrobat (PDF)..... | 104 |
| Terms Used in This Help..... | 115 |
| Context Sensitive Help not Available..... | 117 |

2. About the Analyzer

| | |
|---|-----|
| Installing Application Software..... | 123 |
| Viewing a License Key..... | 123 |
| Obtaining and Installing a License Key..... | 123 |
| Missing and Old Measurement Application Software..... | 124 |
| Front-Panel Features..... | 125 |
| Overview of key types..... | 127 |
| Display Annotations..... | 129 |
| Rear-Panel Features..... | 131 |
| Window Control Keys..... | 133 |
| Multi-Window..... | 133 |
| Zoom..... | 133 |
| Next Window..... | 134 |
| Mouse and Keyboard Control..... | 135 |
| Right-Click..... | 135 |
| PC Keyboard..... | 137 |

3. About the cdma2000 Measurement Application

4. Programming the Analyzer

| | |
|--|-----|
| What Programming Information is Available?..... | 144 |
| STATus Subsystem (No equivalent front panel keys)..... | 145 |
| Detailed Description..... | 146 |
| STATus Subsystem Command Descriptions..... | 157 |
| IEEE Common GPIB Commands..... | 183 |
| Calibration Query..... | 183 |
| Clear Status..... | 183 |
| Standard Event Status Enable..... | 183 |
| Standard Event Status Register Query..... | 184 |
| Identification Query..... | 184 |
| Operation Complete..... | 185 |
| Query Instrument Options..... | 185 |
| Recall Instrument State..... | 185 |
| Save Instrument State..... | 186 |
| Service Request Enable..... | 186 |
| Status Byte Query..... | 187 |
| Trigger..... | 187 |

Contents

| | |
|---|-----|
| Self Test Query | 187 |
| Wait-to-Continue | 187 |
| | |
| 5. System Functions | |
| File | 196 |
| File Explorer | 196 |
| Page Setup | 196 |
| Print | 196 |
| Exit | 197 |
| Preset | 198 |
| Mode Preset | 198 |
| Restore Mode Defaults | 199 |
| *RST (Remote Command Only) | 200 |
| Print | 201 |
| Quick Save | 202 |
| Recall | 204 |
| Save | 205 |
| System | 206 |
| Show | 206 |
| Power On | 214 |
| Alignments | 216 |
| I/O Config | 235 |
| Restore Defaults | 271 |
| Control Panel... | 275 |
| Licensing..... | 275 |
| Service | 278 |
| Diagnostics | 278 |
| List installed Options (Remote Command Only) | 281 |
| Lock the Front Panel keys (Remote Command Only) | 281 |
| List SCPI Commands (Remote Command Only) | 282 |
| SCPI Version Query (Remote Command Only) | 282 |
| Date (Remote Command Only) | 283 |
| Time (Remote Command Only) | 283 |
| User Preset | 284 |
| User Preset | 284 |
| User Preset All Modes | 285 |
| Save User Preset | 286 |
| Measurement Display Windows..... | 287 |
| Window Control Keys | 287 |
| Mouse and Keyboard Control..... | 289 |
| | |
| 6. Channel Power Measurement | |
| AMPTD Y Scale..... | 297 |
| Ref Value | 297 |
| Attenuation | 297 |
| Scale/Div | 298 |
| Presel Center..... | 298 |
| Presel Adjust..... | 299 |

Contents

| | |
|--|-----|
| Internal Preamp | 299 |
| Ref Position | 299 |
| Auto Scaling | 300 |
| Auto Couple | 301 |
| BW | 302 |
| Res BW | 302 |
| Video BW | 303 |
| Filter Type | 305 |
| Cont. | 306 |
| FREQ Channel | 307 |
| Input/Output | 308 |
| Marker | 309 |
| Select Marker | 309 |
| Marker Type | 309 |
| Marker X Axis Value (Remote Command only) | 310 |
| Marker X Axis Position (Remote Command only) | 310 |
| Marker Y Axis Value (Remote Command only) | 311 |
| Properties | 311 |
| All Markers Off | 312 |
| Marker Function | 313 |
| Marker To | 314 |
| Meas | 315 |
| Meas Setup | 316 |
| Avg/Hold Num | 316 |
| Avg Mode | 317 |
| Integ BW | 317 |
| IF Gain | 318 |
| RRC Filter | 320 |
| Filter BW | 320 |
| Filter Alpha | 321 |
| PSD Unit | 322 |
| Meas Preset | 322 |
| Mode | 323 |
| Mode Setup | 324 |
| Peak Search | 325 |
| Recall | 326 |
| Restart | 327 |
| Save | 328 |
| Single | 329 |
| Source | 330 |
| Span X Scale | 331 |
| Span | 331 |
| Full Span | 332 |
| Last Span | 332 |
| Sweep/Control | 333 |
| Sweep Time | 333 |
| Sweep Setup | 334 |
| Pause | 335 |
| Gate | 335 |

Contents

| | |
|----------------------|-----|
| Points | 335 |
| Trace/Detector | 337 |
| Trace Type..... | 337 |
| Detector..... | 337 |
| Trigger | 340 |
| View/Display | 341 |
| Display | 342 |
| Bar Graph | 343 |

7. ACP Measurement

| | |
|--|-----|
| AMPTD Y Scale..... | 352 |
| Ref Value..... | 352 |
| Attenuation | 353 |
| Scale/Div..... | 353 |
| Presel Center..... | 353 |
| Presel Adjust..... | 354 |
| Internal Preamp..... | 354 |
| Ref Position..... | 354 |
| Auto Scaling | 354 |
| Auto Couple | 356 |
| BW | 357 |
| Res BW..... | 357 |
| Video BW | 358 |
| RBW Control | 359 |
| Cont | 361 |
| FREQ Channel | 362 |
| Input/Output | 363 |
| Marker | 364 |
| Select Marker | 364 |
| Marker Type | 364 |
| Marker X Axis Value (Remote Command only) | 365 |
| Marker X Axis Position (Remote Command only) | 365 |
| Marker Y Axis Value (Remote Command only) | 366 |
| Properties | 367 |
| Couple Markers..... | 368 |
| Marker All Off | 369 |
| Marker Function..... | 370 |
| Marker To..... | 371 |
| Meas | 372 |
| Meas Setup | 373 |
| Average/Hold Number | 373 |
| Avg Mode | 374 |
| Carrier Setup..... | 374 |
| Offset/Limits..... | 384 |
| Carrier Result | 395 |
| PhNoise Opt | 396 |
| Meas Method | 397 |
| Meas Type..... | 398 |
| Limit Test | 399 |

| | |
|--|-----|
| Offset RRC Weighting | 400 |
| Offset Filter Alpha | 401 |
| Meas Preset | 401 |
| Noise Correction | 402 |
| Mode | 403 |
| Mode Setup | 404 |
| Peak Search | 405 |
| Peak Search | 405 |
| Next Peak | 405 |
| Next Pk Right | 405 |
| Next Pk Left | 406 |
| Marker Delta | 406 |
| Pk-Pk Search | 406 |
| Min Search | 407 |
| Recall | 408 |
| Restart | 409 |
| Save | 410 |
| Single | 411 |
| Source | 412 |
| SPAN X Scale | 413 |
| Span | 413 |
| Full Span | 414 |
| Last Span | 414 |
| Sweep/Control | 415 |
| Sweep Time | 415 |
| Sweep Setup | 416 |
| Pause | 417 |
| Gate | 417 |
| Points | 417 |
| Trace/Detector | 419 |
| Trace Type | 419 |
| Detector | 420 |
| Select Trace (frontpanel only) | 422 |
| View / Blank | 422 |
| Trigger | 425 |
| View/Display | 426 |
| Display | 428 |
| Bar Graph | 428 |

8. Spectrum Emission Mask Measurement

| | |
|---------------------------|-----|
| AMPTD Y Scale | 440 |
| Ref Value | 440 |
| Attenuation | 441 |
| Scale/Div | 441 |
| Presel Center | 442 |
| Presel Adjust | 442 |
| Internal Preamp | 442 |
| Ref Position | 442 |
| Auto Scaling | 442 |

Contents

| | |
|--|-----|
| Auto Couple | 444 |
| BW | 445 |
| Cont | 446 |
| FREQ Channel | 447 |
| Input/Output | 448 |
| Marker | 449 |
| Select Marker | 449 |
| Marker Type | 449 |
| Marker X Axis Value (Remote Command only) | 450 |
| Marker X Axis Position (Remote Command only) | 450 |
| Marker Y Axis Value (Remote Command only) | 451 |
| Couple Markers. | 452 |
| All Markers Off. | 452 |
| Marker Function | 453 |
| Marker To | 454 |
| Meas | 455 |
| Meas Setup | 456 |
| Avg/Hold Num | 456 |
| Meas Type | 457 |
| Ref Channel | 457 |
| Power Ref | 463 |
| Offsets/Limits | 466 |
| Method | 482 |
| Filter Alpha | 483 |
| Meas Preset | 484 |
| Limits State | 484 |
| Mode | 486 |
| Mode Setup | 487 |
| Peak Search | 488 |
| Recall | 489 |
| Restart | 490 |
| Save | 491 |
| Single | 492 |
| Source | 493 |
| Span X Scale | 494 |
| Sweep/Control | 495 |
| Pause | 495 |
| Gate | 495 |
| Trace/Detector | 496 |
| Trace Type | 496 |
| Chan Detector | 496 |
| Offset Detector | 498 |
| Trigger | 501 |
| View/Display | 502 |
| Display | 503 |
| Abs Pwr Freq | 503 |
| Rel Pwr Freq | 505 |
| Integrated Power | 507 |
| Limit Lines | 509 |

9. Spurious Emissions Measurement

| | |
|--|-----|
| AMPTD Y Scale | 513 |
| Ref Value | 513 |
| Attenuation | 514 |
| Scale/Div | 514 |
| Presel Center | 515 |
| Presel Adjust | 515 |
| Internal Preamp | 515 |
| Auto Scaling | 515 |
| Auto Couple | 517 |
| BW | 518 |
| Cont. | 519 |
| Frequency/Channel | 520 |
| Input/Output | 521 |
| Marker | 522 |
| Select Marker | 522 |
| Marker Type | 522 |
| Marker X Axis Value (Remote Command only) | 523 |
| Marker X Axis Position (Remote Command only) | 524 |
| Marker Y Axis Value (Remote Command only) | 524 |
| Properties | 525 |
| Couple Markers | 526 |
| All Markers Off | 527 |
| Marker Function | 528 |
| Marker To | 529 |
| Meas | 530 |
| Meas Setup | 531 |
| Avg/Hold Num | 531 |
| Avg Mode | 532 |
| Range Table | 532 |
| Meas Type | 551 |
| Spur | 552 |
| Spurious Report Mode | 552 |
| Meas Preset | 553 |
| Range Preset (for TD-SCDMA only) | 553 |
| Mode | 561 |
| Mode Setup | 562 |
| Peak Search | 563 |
| Peak Search | 563 |
| Next Peak | 563 |
| Next Pk Right | 563 |
| Next Pk Left | 564 |
| Marker Delta | 564 |
| Pk-Pk Search | 564 |
| Min Search | 565 |
| Recall | 566 |
| Restart | 567 |
| Save | 568 |
| Single | 569 |

| | |
|----------------|-----|
| Source | 570 |
| Span X Scale | 571 |
| Sweep/Control | 572 |
| Sweep Setup | 572 |
| Pause | 573 |
| Trace/Detector | 574 |
| Trigger | 575 |
| View/Display | 576 |
| Display | 577 |

10. Occupied Bandwidth

| | |
|--|-----|
| Measurement Results | 581 |
| Occupied Bandwidth | 581 |
| Total Power | 581 |
| Transmit Freq Error | 581 |
| x dB Bandwidth | 581 |
| AMPTD Y Scale (Amplitude/Y Scale) | 582 |
| Ref Value | 582 |
| Attenuation | 582 |
| Scale/Div | 583 |
| Internal Preamp | 583 |
| Ref Position | 584 |
| Auto Scaling | 584 |
| Auto Couple | 586 |
| BW | 587 |
| Res BW | 587 |
| Video BW | 588 |
| Filter Type | 589 |
| Cont (Continuous) | 591 |
| FREQ/Channel (Frequency or Channel) | 592 |
| Input/Output | 593 |
| Marker | 594 |
| Select Marker | 594 |
| Marker X Axis Value (Remote Command only) | 594 |
| Marker X Axis Position (Remote Command only) | 595 |
| Marker Y Axis Value (Remote Command only) | 595 |
| Marker Type | 595 |
| Properties | 596 |
| All Markers Off | 597 |
| Marker Function | 598 |
| Marker To | 599 |
| Meas | 600 |
| Mode | 601 |
| Mode Setup | 602 |
| Peak Search | 603 |
| Recall | 604 |
| Restart | 605 |
| Save | 606 |
| Single | 607 |

| | |
|--------------------------|-----|
| Source | 608 |
| Span X Scale | 609 |
| Span | 609 |
| Full Span | 609 |
| Last Span | 610 |
| Sweep/Control | 611 |
| Sweep Time | 611 |
| Sweep Setup | 612 |
| Pause | 613 |
| Gate | 613 |
| Points | 613 |
| Trace/Detector | 615 |
| Trace Type | 615 |
| Detector | 615 |
| Trigger | 618 |
| View/Display | 619 |
| Display | 621 |

11. Power Stat CCDF Measurement

| | |
|--|-----|
| AMPTD Y Scale | 626 |
| Attenuation | 626 |
| Range | 626 |
| Presel Center | 626 |
| Presel Adjust | 627 |
| Internal Preamp | 627 |
| Auto Couple | 628 |
| BW | 629 |
| Info BW | 629 |
| Cont. | 630 |
| FREQ Channel | 631 |
| Input/Output | 632 |
| Marker | 633 |
| Select Marker | 633 |
| Marker Type | 633 |
| Marker X Axis Value | 634 |
| Marker Y Axis Value | 635 |
| Properties | 635 |
| Couple Markers | 637 |
| All Markers Off | 637 |
| Marker To | 638 |
| Marker Function | 639 |
| Meas | 640 |
| Meas Setup | 641 |
| Counts | 641 |
| Meas Cycles | 641 |
| Meas Interval (When the application is NOT CDMA1xEVDO) | 642 |
| Meas Interval (CDMA1xEVDO Only) | 643 |
| Meas Offset (CDMA1xEVDO Only) | 644 |
| IF Gain | 644 |

| | |
|-------------------------------------|-----|
| Meas Preset | 646 |
| Mode | 647 |
| Mode Setup | 648 |
| Peak Search | 649 |
| Recall | 650 |
| Restart | 651 |
| Save | 652 |
| Single | 653 |
| Source | 654 |
| Span X Scale | 655 |
| Scale/Div | 655 |
| Sweep/Control | 656 |
| Pause/Resume | 656 |
| Trace/Detector | 657 |
| Store Ref Trace | 657 |
| Ref Trace | 657 |
| Gaussian Line | 658 |
| Trigger | 659 |
| View/Display | 660 |
| Display | 663 |
| Slot View (TD-SCDMA only) | 663 |

12. Code Domain Measurement

| | |
|--|-----|
| AMPTD Y Scale | 672 |
| Y Ref Value | 672 |
| Attenuation | 678 |
| Range | 679 |
| Y Scale/Div | 679 |
| Presel Center | 685 |
| Presel Adjust | 685 |
| Internal Preamp | 685 |
| YRef Position | 686 |
| Auto Scaling | 688 |
| Auto Couple | 693 |
| BW | 694 |
| Cont | 695 |
| FREQ Channel | 696 |
| Input/Output | 697 |
| Marker | 698 |
| Marker Symbol Value (Remote Command only) | 698 |
| Marker X Axis Value (Remote Command only) | 699 |
| Marker X Axis Position (Remote Command only) | 699 |
| Marker Y Axis Value (Remote Command only) | 700 |
| Select Marker | 700 |
| Marker Type | 701 |
| Properties | 702 |
| Couple Markers | 703 |
| All Markers Off | 704 |
| Backward Compatibility SCPI Commands | 704 |

Contents

| | |
|---|-----|
| Marker Function | 705 |
| Marker To | 706 |
| Mkr -> Despread | 706 |
| Meas | 707 |
| Meas Setup | 708 |
| Meas Type | 708 |
| Walsh Code Length | 708 |
| Walsh Code Number | 709 |
| I/Q Branch (MS only) | 709 |
| Meas Interval | 710 |
| Meas Offset | 711 |
| PN Offset | 711 |
| Sync Type(BTS only) | 712 |
| Long Code Mask (MS only) | 712 |
| Capture Interval | 713 |
| Spectrum Inversion | 713 |
| Meas Preset | 714 |
| Advanced | 714 |
| Mode | 719 |
| Mode Setup | 720 |
| Peak Search | 721 |
| Next Peak | 721 |
| Next Pk Right | 721 |
| Next Pk Left | 721 |
| Marker Delta | 722 |
| Pk-Pk Search | 722 |
| Min Search | 722 |
| Recall | 724 |
| Restart | 725 |
| Save | 726 |
| Single | 727 |
| Source | 728 |
| SPAN X Scale | 729 |
| Code Span | 729 |
| X Scale | 730 |
| Sweep/Control | 744 |
| Pause/Resume | 744 |
| Trace/Detector | 745 |
| Trigger | 746 |
| Trigger Source (Selected Input) | 746 |
| RF Trigger Source | 746 |
| I/Q Trigger Source | 747 |
| View/Display | 749 |
| Display | 750 |
| Power Graph & Metrics | 750 |
| CDP Graph & CDE Graph | 756 |
| I/Q Error (Quad View) | 758 |
| Code Domain (Quad View) | 763 |
| Demod Bits | 769 |

13. Modulation Accuracy (Composite Rho) Measurement

| | |
|--|-----|
| AMPTD Y Scale | 778 |
| Ref Value | 778 |
| Attenuation | 780 |
| Range | 780 |
| Scale/Div | 780 |
| Presel Center | 782 |
| Presel Adjust | 782 |
| Internal Preamp | 783 |
| Ref Position | 783 |
| Auto Scaling | 784 |
| Auto Couple | 787 |
| BW | 788 |
| Cont | 789 |
| FREQ Channel | 790 |
| Input/Output | 791 |
| Marker | 792 |
| Select Marker | 792 |
| Marker Type | 792 |
| Marker Chip Value (Remote Command only) | 793 |
| Marker X Axis Value (Remote Command only) | 794 |
| Marker X Axis Position (Remote Command only) | 795 |
| Marker Y Axis Value (Remote Command only) | 795 |
| Properties | 796 |
| Couple Markers | 797 |
| All Markers Off | 798 |
| Marker Function | 799 |
| Marker To | 800 |
| Meas | 801 |
| Meas Setup | 802 |
| Avg Number | 802 |
| Avg Mode | 802 |
| Limits | 803 |
| PN Offset | 807 |
| Sync Type | 807 |
| Radio Config | 808 |
| Spectrum | 809 |
| Advanced | 810 |
| Meas Preset | 815 |
| Mode | 816 |
| Mode Setup | 817 |
| Peak Search | 818 |
| Next Peak | 818 |
| Next Pk Right | 818 |
| Next Pk Left | 818 |
| Marker Delta | 819 |
| Pk-Pk Search | 819 |
| Min Search | 819 |
| Recall | 821 |

| | |
|---------------------------------|-----|
| Restart | 822 |
| Save | 823 |
| Single | 824 |
| Source | 825 |
| SPAN X Scale | 826 |
| Ref Value | 826 |
| Scale/Div | 828 |
| Ref Position | 830 |
| Auto Scaling | 831 |
| Sweep/Control | 834 |
| Pause/Resume | 834 |
| Trace/Detector | 835 |
| Trigger | 836 |
| Trigger Source (Selected Input) | 836 |
| RF Trigger Source | 836 |
| I/Q Trigger Source | 837 |
| View/Display | 839 |
| Display | 840 |
| I/Q Measured Polar Graph | 841 |
| I/Q Error | 848 |
| Power Timing & Phase | 852 |

14. QPSK EVM Measurement

| | |
|--|-----|
| AMPTD Y Scale | 860 |
| Ref Value | 860 |
| Attenuation | 862 |
| Range | 862 |
| Scale/Div | 862 |
| Presel Center | 865 |
| Presel Adjust | 865 |
| Internal Preamp | 865 |
| Ref Position | 865 |
| Auto Scaling | 866 |
| Auto Couple | 868 |
| BW | 869 |
| Info BW | 869 |
| Info BW Control | 870 |
| Filter Type | 870 |
| Cont | 871 |
| FREQ Channel | 872 |
| Input/Output | 873 |
| Marker | 874 |
| Select Marker | 874 |
| Marker Type | 874 |
| Marker X Axis Value (Remote Command only) | 875 |
| Marker Chip Value (Remote Command only) | 876 |
| Marker X Axis Position (Remote Command only) | 877 |
| Marker Y Axis Value (Query Only) | 878 |
| Marker Properties | 878 |

| | |
|------------------------------------|-----|
| Marker Trace | 880 |
| Couple Marker | 880 |
| All Markers Off | 881 |
| Marker Function | 882 |
| Marker To | 883 |
| Meas | 884 |
| Meas Setup | 885 |
| Avg/Hold Number | 885 |
| Avg Mode | 885 |
| Meas Interval | 886 |
| Limits | 887 |
| Meas Offset & Interval | 888 |
| Spectrum | 889 |
| Advanced | 890 |
| Meas Preset | 893 |
| Mode | 895 |
| Mode Setup | 896 |
| Peak Search | 897 |
| Next Peak | 897 |
| Next Pk Right | 897 |
| Next Pk Left | 898 |
| Marker Delta | 898 |
| Pk-Pk Search | 898 |
| Min Search | 899 |
| Recall | 900 |
| Restart | 901 |
| Save | 902 |
| Single | 903 |
| Source | 904 |
| SPAN X Scale | 905 |
| X Ref Value | 905 |
| X Scale/Div | 907 |
| X Ref Position | 909 |
| X Auto Scaling | 911 |
| Sweep/Control | 914 |
| Pause | 914 |
| Trace/Detector | 915 |
| View/Display | 916 |
| Display | 917 |
| I/Q Measured Polar Graph | 917 |
| I/Q Error View | 925 |

15. Monitor Spectrum Measurement

| | |
|-------------------------|-----|
| AMPTD Y Scale | 928 |
| Ref Value | 928 |
| Attenuation | 928 |
| Scale/Div | 929 |
| Presel Center | 929 |
| Presel Adjust | 929 |

Contents

| | |
|--------------------------------|-----|
| Internal Preamp | 930 |
| Ref Position | 930 |
| Auto Scaling | 930 |
| Auto Couple | 932 |
| BW | 933 |
| Res BW | 933 |
| Video BW | 934 |
| VBW:3dB RBW | 934 |
| Span:3dB RBW | 935 |
| Cont. | 937 |
| FREQ Channel | 938 |
| Input/Output | 939 |
| Marker | 940 |
| Select Marker | 940 |
| Marker Type | 940 |
| Properties | 942 |
| Select Marker | 943 |
| Couple Markers | 944 |
| All Markers Off | 945 |
| Marker Function | 946 |
| Select Marker | 946 |
| Marker Function Type | 946 |
| Band Adjust | 946 |
| Marker To | 949 |
| Meas | 950 |
| Meas Setup | 951 |
| Avg/Hold Num | 951 |
| Avg Mode | 952 |
| Meas Preset | 952 |
| Mode | 953 |
| Mode Setup | 954 |
| Peak Search | 955 |
| Recall | 956 |
| Restart | 957 |
| Save | 958 |
| Single | 959 |
| Source | 960 |
| Span X Scale | 961 |
| Span | 961 |
| Full Span | 962 |
| Last Span | 962 |
| Sweep/Control | 963 |
| Sweep Time | 963 |
| Pause | 964 |
| Gate | 964 |
| Points | 964 |
| Trace/Detector | 965 |
| Select Trace | 965 |
| Trace Type | 965 |

| | |
|------------------------|-----|
| Update..... | 966 |
| Display | 966 |
| Detector..... | 967 |
| Clear Trace | 969 |
| Clear All Traces | 969 |
| View/Display | 970 |
| Display | 971 |

16. Waveform Measurement

| | |
|--|------|
| AMPTD Y Scale..... | 975 |
| Ref Value..... | 975 |
| Attenuation | 976 |
| Range | 977 |
| Scale/Div..... | 977 |
| Scale Type..... | 978 |
| Presel Center..... | 978 |
| Presel Adjust..... | 979 |
| Internal Preamp..... | 979 |
| Ref Position..... | 979 |
| Auto Scaling | 980 |
| Auto Couple | 982 |
| BW | 983 |
| Info BW | 983 |
| IBW Control | 984 |
| Cont | 993 |
| FREQ Channel | 994 |
| Input/Output | 995 |
| Marker | 996 |
| Select Marker | 996 |
| Marker Type | 996 |
| Marker X Axis Value (Remote Command only) | 997 |
| Marker X Axis Position (Remote Command only) | 998 |
| Marker Y Axis Value (Remote Command only) | 999 |
| Properties | 999 |
| Couple Markers..... | 1001 |
| All Markers Off..... | 1002 |
| Marker Function..... | 1003 |
| Select Marker | 1003 |
| Marker Function Type..... | 1003 |
| Band Adjust | 1004 |
| Marker To..... | 1007 |
| Meas | 1008 |
| Meas Setup | 1009 |
| Average/Hold Number | 1009 |
| Avg Mode | 1009 |
| Avg Type..... | 1010 |
| Meas Time..... | 1011 |
| Meas Preset..... | 1011 |
| Advanced | 1012 |

Contents

| | |
|----------------------------|------|
| Mode | 1015 |
| Mode Setup | 1016 |
| Peak Search | 1017 |
| Next Peak | 1017 |
| Min Search | 1017 |
| Recall | 1019 |
| Restart | 1020 |
| Save | 1021 |
| Single | 1022 |
| Source | 1023 |
| Span X Scale | 1024 |
| Ref Value | 1024 |
| Scale/Div | 1024 |
| Ref Position | 1025 |
| Auto Scaling | 1026 |
| Sweep/Control | 1027 |
| Pause and Resume | 1027 |
| Trace/Detector | 1028 |
| Trigger | 1029 |
| View/Display | 1030 |
| Display | 1031 |
| RF Envelop | 1031 |
| I/Q Waveform | 1033 |

17. Common Measurement Functions

| | |
|---|------|
| AMPTD Y Scale (Amplitude Y Scale) | 1037 |
| Attenuation | 1037 |
| Range | 1043 |
| Presel Center | 1048 |
| Preselector Adjust | 1050 |
| Internal Preamp | 1051 |
| AUTO COUPLE | 1055 |
| BW | 1057 |
| FREQ/Channel | 1059 |
| Center Freq (Selected Input) | 1059 |
| CF Step | 1061 |
| Cont (Continuous Measurement/Sweep) | 1063 |
| Input/Output | 1065 |
| RF Input | 1066 |
| I/Q | 1067 |
| RF Calibrator | 1081 |
| External Gain | 1083 |
| Restore Input/Output Defaults | 1086 |
| Data Source | 1087 |
| Freq Ref In | 1091 |
| Output Config | 1093 |
| I/Q Guided Calibration | 1097 |
| Marker | 1109 |
| Marker Function | 1111 |

| | |
|---|------|
| Marker To | 1113 |
| Meas | 1115 |
| Remote Measurement Functions | 1115 |
| Meas Setup | 1131 |
| Mode | 1133 |
| Application Mode Number Selection (Remote Command only) | 1134 |
| Application Mode Catalog Query (Remote Command only) | 1135 |
| Application Identification (Remote Commands only) | 1135 |
| Application Identification Catalog (Remote Commands only) | 1136 |
| Spectrum Analyzer | 1138 |
| IQ Analyzer (Basic) | 1138 |
| Phase Noise | 1139 |
| Noise Figure | 1139 |
| Remote Language Compatibility | 1139 |
| Analog Demod | 1140 |
| W-CDMA with HSDPA/HSUPA | 1140 |
| 802.16 OFDMA (WiMAX/WiBro) | 1140 |
| GSM with EDGE | 1141 |
| cdma2000 | 1141 |
| TD-SCDMA with HSPA/8PSK | 1141 |
| Vector Signal Analyzer | 1141 |
| 89601 VSA | 1142 |
| LTE | 1143 |
| 1xEV-DO | 1143 |
| Mode Setup | 1145 |
| Radio | 1145 |
| Restore Mode Defaults | 1145 |
| Peak Search | 1147 |
| Recall | 1149 |
| State | 1149 |
| Trace (+State) | 1153 |
| Data (Mode Specific) | 1156 |
| File Open Dialog and Menu | 1162 |
| Restart | 1167 |
| Save | 1169 |
| State | 1169 |
| Trace (+State) | 1172 |
| Data (Mode Specific) | 1175 |
| Screen Image | 1183 |
| Save As | 1186 |
| Single (Single Measurement/Sweep) | 1191 |
| Source | 1193 |
| SPAN X Scale | 1195 |
| Sweep / Control | 1197 |
| Abort (Remote Command Only) | 1197 |
| Pause/Resume | 1198 |
| Record Data Now | 1198 |
| Playback (Recorded Data) | 1199 |
| Gate | 1203 |

| | |
|--------------------------------------|------|
| Trace / Detector | 1219 |
| Trigger | 1221 |
| Free Run | 1228 |
| Video (IF Envelope) | 1229 |
| Line | 1231 |
| External 1 | 1232 |
| External 2 | 1234 |
| RF Burst (Wideband) | 1236 |
| Periodic Timer (Frame Trigger) | 1239 |
| LXI Trigger | 1246 |
| Baseband I/Q | 1261 |
| Auto Trig | 1270 |
| Trig Holdoff | 1271 |
| View/Display | 1273 |
| Display | 1273 |
| Full Screen | 1281 |
| Display Enable (Remote Command Only) | 1281 |

List of Commands

| | |
|---|------|
| *CAL? | 224 |
| *CLS | 183 |
| *ESE <integer> | 183 |
| *ESE? | 183 |
| *ESR? | 184 |
| *IDN? | 184 |
| *OPC | 185 |
| *OPC? | 185 |
| *OPT? | 185 |
| *RCL <register #> | 186 |
| *RST | 200 |
| *SAV <register #> | 186 |
| *SRE <integer> | 186 |
| *SRE? | 186 |
| *STB? | 187 |
| *TRG | 187 |
| *TST? | 187 |
| *WAI | 187 |
| :ABORt | 1197 |
| :CALCulate:ACPower:LIMit:STATe OFF ON 0 1 | 399 |
| :CALCulate:ACPower:LIMit:STATe? | 399 |
| :CALCulate:ACPower:MARKer:AOff | 369 |
| :CALCulate:ACPower:MARKer:COUPle[:STATe] ON OFF 1 0 | 369 |
| :CALCulate:ACPower:MARKer:COUPle[:STATe]? | 369 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum | 405 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:LEFT | 406 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT | 405 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:RIGHT | 405 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum | 407 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF | 364 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE? | 364 |

List of Commands

| | |
|---|-----|
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:PTPeak | 406 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REfERENCE <integer> | 367 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REfERENCE? | 367 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe 1 2 3 | 368 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe? | 368 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <freq> | 365 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real> | 366 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition? | 366 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X? | 365 |
| :CALCulate:ACPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y? | 366 |
| :CALCulate:CDPower:ASET:THReshold <real> | 714 |
| :CALCulate:CDPower:ASET:THReshold:AUTO OFF ON 0 1 | 714 |
| :CALCulate:CDPower:ASET:THReshold:AUTO? | 714 |
| :CALCulate:CDPower:ASET:THReshold? | 714 |
| :CALCulate:CDPower:AXIS[:MS] IPH QPH IQCombined | 709 |
| :CALCulate:CDPower:AXIS[:MS]? | 709 |
| :CALCulate:CDPower:MARKer:AOFF | 704 |
| :CALCulate:CDPower:MARKer:COUPle[:STATe] ON OFF 1 0 | 703 |
| :CALCulate:CDPower:MARKer:COUPle[:STATe]? | 703 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum | 721 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:LEFT | 722 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT | 721 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:RIGHT | 721 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum | 722 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF | 701 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE? | 701 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:PTPeak | 722 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REfERENCE <integer> | 702 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REfERENCE? | 702 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:STATe OFF ON 0 1 | 704 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:STATe? | 704 |

List of Commands

| | |
|---|------|
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:SYMBOL <real> | 698 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:SYMBOL? | 698 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe CDPower EVM MERRor PERRor SPOW- er CPOWER CDError POLar | 703 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe? | 703 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <real> | 699 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real> | 700 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition? | 700 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X? | 699 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y? | 700 |
| :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12[:SET]:DESPread | 706 |
| :CALCulate:CDPower:PNOffset <integer> | 711 |
| :CALCulate:CDPower:PNOffset? | 711 |
| :CALCulate:CDPower:SWEep:OFFSet <integer> | 711 |
| :CALCulate:CDPower:SWEep:OFFSet? | 711 |
| :CALCulate:CDPower:SWEep:TIME <integer> | 710 |
| :CALCulate:CDPower:SWEep:TIME? | 710 |
| :CALCulate:CDPower:TYPE RELative ABSolute | 708 |
| :CALCulate:CDPower:TYPE? | 708 |
| :CALCulate:CHPower:MARKer:AOFF | 312 |
| :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum | 325 |
| :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF | 309 |
| :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE? | 309 |
| :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer> | 312 |
| :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence? | 312 |
| :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <real> | 310 |
| :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real> | 310 |
| :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition? | 310 |
| :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X? | 310 |
| :CALCulate:CHPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y? | 311 |
| :CALCulate:CLIMits:FAIL? | 1120 |

List of Commands

| | |
|--|------|
| :CALCulate:DATA<n>:COMPRESS? BLOCk CFIT MAXimum MINimum MEAN DMEan RMS RM-SCubed SAMPLE SDEVIation PPHase [,<soffset>[,<length>[,<roffset>[,<rlimit>]]]] | 1121 |
| :CALCulate:DATA[1] 2 3 4 5 6:PEAKs? <threshold>,<excursion>[,AMPLitude FREQuency TIME[,ALL GTD-Line LTDLine]] | 1126 |
| :CALCulate:DATA[1] 2 3 4 5 6:PEAKs? <threshold>,<excursion>[,AMPLitude FREQuency TIME] | 1126 |
| :CALCulate:DATA[n]? | 1120 |
| :CALCulate:EVMQpsk:IQOFFset:INCLude OFF ON 0 1. | 890 |
| :CALCulate:EVMQpsk:IQOFFset:INCLude? | 890 |
| :CALCulate:EVMQpsk:LIMit:FERRor <freq>. | 888 |
| :CALCulate:EVMQpsk:LIMit:FERRor?. | 888 |
| :CALCulate:EVMQpsk:LIMit:RMS <real> | 887 |
| :CALCulate:EVMQpsk:LIMit:RMS? | 887 |
| :CALCulate:EVMQpsk:MARKer:AOFF | 881 |
| :CALCulate:EVMQpsk:MARKer:COUple[:STATe] ON OFF 1 0 | 880 |
| :CALCulate:EVMQpsk:MARKer:COUple[:STATe]? | 880 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:CHIP <real> | 876 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:CHIP? | 876 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum | 897 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:LEFT | 898 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT. | 897 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:RIGHT | 897 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum | 899 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF | 874 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE? | 874 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:PTPeak. | 898 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFeRence <integer>. | 879 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFeRence? | 879 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe POLar EVM PERRor MERRor | 880 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe? | 880 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <real>. | 875 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real>. | 877 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition?. | 877 |

List of Commands

| | |
|--|-----|
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X? | 875 |
| :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y? | 878 |
| :CALCulate:MONitor:MARKer:AOFF | 945 |
| :CALCulate:MONitor:MARKer:COUple[:STATe] ON OFF 1 0 | 944 |
| :CALCulate:MONitor:MARKer:COUple[:STATe]? | 944 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion NOISe BPOWer BDENSity OFF | 946 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion:BAND:LEFT <freq> | 947 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion:BAND:LEFT? | 947 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion:BAND:RIGHT <freq> | 948 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion:BAND:RIGHT? | 948 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion:BAND:SPAN <freq> | 947 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion:BAND:SPAN? | 947 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion? | 946 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF | 940 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE? | 940 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer> | 943 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence? | 943 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe <integer> | 944 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe? | 944 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <freq> | 941 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real> | 942 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition? | 942 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X? | 941 |
| :CALCulate:MONitor:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y? | 942 |
| :CALCulate:OBWidth:MARKer:AOFF | 597 |
| :CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum | 603 |
| :CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF | 596 |
| :CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE? | 596 |
| :CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer> | 597 |
| :CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence? | 597 |
| :CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <real> | 594 |

List of Commands

| | |
|--|-----|
| :CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real> | 595 |
| :CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition? | 595 |
| :CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X? | 594 |
| :CALCulate:OBWidth:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y? | 595 |
| :CALCulate:PStatistic:MARKer:AOff | 637 |
| :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF | 633 |
| :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE? | 633 |
| :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFeRence <integer> | 636 |
| :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFeRence? | 636 |
| :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe MEASured GAUSSian REFeRence | 636 |
| :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe? | 636 |
| :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <rel_amp> | 634 |
| :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X? | 634 |
| :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y? | 635 |
| :CALCulate:PStatistic:STORE:REFeRence | 657 |
| :CALCulate:RHO:ASET:THReshold <rel_amp> | 811 |
| :CALCulate:RHO:ASET:THReshold? | 811 |
| :CALCulate:RHO:IQOffset:INCLude OFF ON 0 1 | 810 |
| :CALCulate:RHO:IQOffset:INCLude? | 810 |
| :CALCulate:RHO:LIMit:CDErRor <real> | 805 |
| :CALCulate:RHO:LIMit:CDErRor? | 805 |
| :CALCulate:RHO:LIMit:PEAK <real> | 804 |
| :CALCulate:RHO:LIMit:PEAK? | 804 |
| :CALCulate:RHO:LIMit:PHASe <float> | 806 |
| :CALCulate:RHO:LIMit:PHASe? | 806 |
| :CALCulate:RHO:LIMit:RHO <real> | 804 |
| :CALCulate:RHO:LIMit:RHO? | 804 |
| :CALCulate:RHO:LIMit:RMS <real> | 804 |
| :CALCulate:RHO:LIMit:RMS? | 804 |
| :CALCulate:RHO:LIMit:TIMing <float> | 805 |
| :CALCulate:RHO:LIMit:TIMing? | 805 |

List of Commands

| | |
|---|-----|
| :CALCulate:RHO:MARKer:AOff | 798 |
| :CALCulate:RHO:MARKer:COUple[:STATe] ON OFF 1 0 | 797 |
| :CALCulate:RHO:MARKer:COUple[:STATe]? | 797 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:CHIP <real> | 793 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:CHIP? | 793 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum | 818 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:LEFT | 819 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT | 818 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:RIGHT | 818 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum | 819 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF | 792 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE? | 792 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:PTPeak | 819 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer> | 796 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence? | 796 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe POLar EVM MERRor PERRor | 797 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <real> | 794 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real> | 795 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition? | 795 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X? | 794 |
| :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y? | 795 |
| :CALCulate:RHO:PNOFfset <integer> | 807 |
| :CALCulate:RHO:PNOFfset? | 807 |
| :CALCulate:SEMask:LLINE:STATe ON OFF 1 0 | 510 |
| :CALCulate:SEMask:LLINE:STATe? | 510 |
| :CALCulate:SEMask:MARKer:AOff | 452 |
| :CALCulate:SEMask:MARKer:COUple[:STATe] ON OFF 1 0 | 452 |
| :CALCulate:SEMask:MARKer:COUple[:STATe]? | 452 |
| :CALCulate:SEMask:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition OFF | 449 |
| :CALCulate:SEMask:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE? | 449 |
| :CALCulate:SEMask:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <freq> | 450 |

List of Commands

| | |
|---|-----|
| :CALCulate:SEMAsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real> | 451 |
| :CALCulate:SEMAsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition? | 451 |
| :CALCulate:SEMAsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X? | 450 |
| :CALCulate:SEMAsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y? | 451 |
| :CALCulate:SPURious:MARKer:AOff | 527 |
| :CALCulate:SPURious:MARKer:COUPle[:STATe] ON OFF 1 0 | 526 |
| :CALCulate:SPURious:MARKer:COUPle[:STATe]? | 526 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum | 563 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:LEFT | 564 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT | 563 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:RIGHT | 564 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum | 565 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF | 522 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE? | 522 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:PTPeak | 564 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer> | 525 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence? | 525 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <freq> | 523 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <integer> | 524 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition? | 524 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X? | 523 |
| :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y? | 524 |
| :CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA:STOP <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl> | 541 |
| :CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA:STOP:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 | 541 |
| :CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA:STOP:AUTO? | 541 |
| :CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA:STOP? | 541 |
| :CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA[:START] <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl> | 540 |

List of Commands

| | |
|---|------|
| :CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA[:START]? | 540 |
| :CALCulate:WAVeform:MARKer:AOFF | 1002 |
| :CALCulate:WAVeform:MARKer:COUPle[:STATe] ON OFF 1 0 | 1001 |
| :CALCulate:WAVeform:MARKer:COUPle[:STATe]? | 1001 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion BPOWer BDENsity OFF | 1003 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion:BAND:LEFT <time> | 1005 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion:BAND:LEFT? | 1005 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion:BAND:RIGHT <time> | 1006 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion:BAND:RIGHT? | 1006 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion:BAND:SPAN <time> | 1004 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion:BAND:SPAN? | 1004 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:FUNCTion? | 1003 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum | 1017 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MAXimum:NEXT | 1017 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MINimum | 1017 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSition DELTA OFF | 996 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE? | 996 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer> | 1000 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence? | 1000 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe RFENvelope IQ | 1000 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe? | 1000 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X <time> | 997 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition <real> | 998 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POSition? | 998 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X? | 997 |
| :CALCulate:WAVeform:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y? | 999 |
| :CALibration:AUTO ON PARTial OFF ALERT | 217 |
| :CALibration:AUTO:ALERT TTEMperature DAY WEEK NONE | 220 |
| :CALibration:AUTO:ALERT? | 220 |
| :CALibration:AUTO:MODE ALL NRF | 219 |
| :CALibration:AUTO:MODE? | 219 |

List of Commands

| | |
|---|------|
| :CALibration:AUTO:TIME:OFF? | 231 |
| :CALibration:AUTO? | 217 |
| :CALibration:DATA:DEFault | 235 |
| :CALibration:FREQuency:REFeRence:COARse <integer> | 233 |
| :CALibration:FREQuency:REFeRence:COARse? | 233 |
| :CALibration:FREQuency:REFeRence:FINE <integer> | 233 |
| :CALibration:FREQuency:REFeRence:FINE? | 233 |
| :CALibration:FREQuency:REFeRence:MODE CALibrated USER | 232 |
| :CALibration:FREQuency:REFeRence:MODE? | 232 |
| :CALibration:IQ:FLATness:I | 1099 |
| :CALibration:IQ:FLATness:IBar | 1100 |
| :CALibration:IQ:FLATness:Q | 1101 |
| :CALibration:IQ:FLATness:QBar | 1102 |
| :CALibration:IQ:ISOLation | 1097 |
| :CALibration:IQ:PROBe:I | 1103 |
| :CALibration:IQ:PROBe:I Q:CLEar | 1081 |
| :CALibration:IQ:PROBe:IBar | 1104 |
| :CALibration:IQ:PROBe:Q | 1105 |
| :CALibration:IQ:PROBe:QBar | 1106 |
| :CALibration:NRF? | 225 |
| :CALibration:NRF | 225 |
| :CALibration:RF? | 226 |
| :CALibration:RF | 226 |
| :CALibration:TEMPerature:CURRent? | 229 |
| :CALibration:TEMPerature:LALL? | 230 |
| :CALibration:TEMPerature:LPReselector? | 231 |
| :CALibration:TEMPerature:LRF? | 230 |
| :CALibration:TIME:LALL? | 230 |
| :CALibration:TIME:LPReselector? | 231 |
| :CALibration:TIME:LRF? | 230 |
| :CALibration:YTF? | 227 |

List of Commands

| | |
|--|------|
| :CALibration:YTF | 227 |
| :CALibration[:ALL]? | 223 |
| :CALibration[:ALL] | 223 |
| :CONFigure:ACP:NDEFault | 345 |
| :CONFigure:ACPower | 401 |
| :CONFigure:ACP | 345 |
| :CONFigure:CDPower | 714 |
| :CONFigure:CDPower | 665 |
| :CONFigure:CHPower | 322 |
| :CONFigure:CHPower:NDEFault | 295 |
| :CONFigure:CHPower | 295 |
| :CONFigure:EVMQpsk | 893 |
| :CONFigure:EVMQpsk:NDEFault | 857 |
| :CONFigure:EVMQpsk | 857 |
| :CONFigure:MONitor | 952 |
| :CONFigure:MONitor:NDEFault | 927 |
| :CONFigure:MONitor | 927 |
| :CONFigure:OBWidth:NDEFault | 579 |
| :CONFigure:OBWidth | 579 |
| :CONFigure:PSTatistic | 646 |
| :CONFigure:PSTatistic:NDEFault | 623 |
| :CONFigure:PSTatistic | 623 |
| :CONFigure:RHO | 815 |
| :CONFigure:RHO | 775 |
| :CONFigure:SEMask | 484 |
| :CONFigure:SEMask:NDEFault | 429 |
| :CONFigure:SEMask | 429 |
| :CONFigure:SPURious | 553 |
| :CONFigure:SPURious:NDEFault | 511 |
| :CONFigure:SPURious | 511 |
| :CONFigure:WAVEform | 1011 |

List of Commands

| | |
|--|------|
| :CONFigure:WAVeform:NDEFault | 973 |
| :CONFigure:WAVeform | 973 |
| :CONFigure? | 1119 |
| :COUPlE ALL NONE | 1055 |
| :DISPlay:<measurement>:ANNotation:TITLe:DATA <string> | 1277 |
| :DISPlay:<measurement>:ANNotation:TITLe:DATA? | 1277 |
| :DISPlay:ACPower:VIEW[1]:WINDow[1]:BGRaph OFF ON 0 1 | 428 |
| :DISPlay:ACPower:VIEW[1]:WINDow[1]:BGRaph? | 428 |
| :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0 1 OFF ON | 355 |
| :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPlE? | 355 |
| :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_amp> | 353 |
| :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 353 |
| :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> | 352 |
| :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 352 |
| :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom | 354 |
| :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition? | 354 |
| :DISPlay:ACTivefunc[:STATe] ON OFF 1 0 | 1276 |
| :DISPlay:ACTivefunc[:STATe]? | 1276 |
| :DISPlay:ANNotation:MBAR[:STATe] OFF ON 0 1 | 1274 |
| :DISPlay:ANNotation:MBAR[:STATe]? | 1274 |
| :DISPlay:ANNotation:SCREen[:STATe] OFF ON 0 1 | 1275 |
| :DISPlay:ANNotation:SCREen[:STATe]? | 1275 |
| :DISPlay:ANNotation:TRACe[:STATe] ON OFF 1 0 | 1275 |
| :DISPlay:ANNotation:TRACe[:STATe]? | 1275 |
| :DISPlay:BACKlight ON OFF | 1280 |
| :DISPlay:BACKlight:INTensity <integer> | 1281 |
| :DISPlay:BACKlight:INTensity? | 1281 |
| :DISPlay:BACKlight? | 1280 |
| :DISPlay:CDPower:CDOMain:SPAN:STARt <integer> | 729 |
| :DISPlay:CDPower:CDOMain:SPAN:STARt? | 729 |
| :DISPlay:CDPower:CDOMain:SPAN:STOP <integer> | 730 |

List of Commands

| | |
|--|-----|
| :DISPlay:CDPower:CDOMain:SPAN:STOP? | 730 |
| :DISPlay:CDPower:CPOWer[:STATe] 0 1 OFF ON | 768 |
| :DISPlay:CDPower:CPOWer[:STATe]? | 768 |
| :DISPlay:CDPower:VIEW:NSElect <integer> | 750 |
| :DISPlay:CDPower:VIEW:NSElect? | 750 |
| :DISPlay:CDPower:VIEW[:SElect] PGRaph CDE SEVM QUAD DBITs | 749 |
| :DISPlay:CDPower:VIEW[:SElect]? | 749 |
| :DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real> | 679 |
| :DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 679 |
| :DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> | 672 |
| :DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 672 |
| :DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real> | 680 |
| :DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 680 |
| :DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> | 673 |
| :DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 673 |
| :DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision <real> | 680 |
| :DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision? | 680 |
| :DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel <real> | 673 |
| :DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel? | 673 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:COUPE 0 1 OFF ON | 740 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:COUPE? | 740 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:PDIVision <real> | 734 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:PDIVision? | 734 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:RLEVel <real> | 731 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:RLEVel? | 731 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHT | 738 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:RPOSition? | 738 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:COUPE 0 1 OFF ON | 689 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:COUPE? | 689 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real> | 681 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 681 |

List of Commands

| | |
|---|-----|
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> | 674 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 674 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom. | 686 |
| :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:RPOSition? | 686 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:COUPle 0 1 OFF ON | 741 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:COUPle? | 741 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:PDIVision <real>. | 735 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:PDIVision?. | 735 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:RLEVel <real>. | 731 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:RLEVel?. | 731 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHT | 738 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:RPOSition? | 738 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON | 689 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:COUPle? | 689 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:PDIVision <real>. | 681 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:PDIVision?. | 681 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:RLEVel <real>. | 675 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:RLEVel?. | 675 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom | 686 |
| :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:RPOSition? | 686 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:COUPle 0 1 OFF ON | 741 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:COUPle? | 741 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:PDIVision <real>. | 735 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:PDIVision?. | 735 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:RLEVel <real>. | 732 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:RLEVel?. | 732 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHT | 739 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:RPOSition? | 739 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON | 690 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:COUPle? | 690 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:PDIVision <real>. | 682 |

List of Commands

| | |
|---|-----|
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:PDIVision? | 682 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:RLEVel <real> | 675 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:RLEVel? | 675 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:RPOStion TOP CENTer BOTTom | 687 |
| :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:RPOStion? | 687 |
| :DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real> | 683 |
| :DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 683 |
| :DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> | 676 |
| :DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 676 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:COUPle 0 1 OFF ON | 742 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:COUPle? | 742 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:PDIVision <real> | 736 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:PDIVision? | 736 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:RLEVel <real> | 733 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:RLEVel? | 733 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:RPOStion LEFT CENTer RIGHT | 739 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALe]:RPOStion? | 739 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON | 691 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:COUPle? | 691 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:PDIVision <real> | 683 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:PDIVision? | 683 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:RLEVel <real> | 677 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:RLEVel? | 677 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:RPOStion TOP CENTer BOTTom | 687 |
| :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:RPOStion? | 687 |
| :DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real> | 684 |
| :DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 684 |
| :DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> | 677 |
| :DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 677 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:COUPle 0 1 OFF ON | 742 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:COUPle? | 742 |

List of Commands

| | |
|--|------|
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:PDIVision <real> | 737 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:PDIVision? | 737 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:RLEVel <real> | 733 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:RLEVel? | 733 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHT | 739 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALe]:RPOSition? | 739 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON | 691 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:COUPle? | 691 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:PDIVision <real> | 684 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:PDIVision? | 684 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:RLEVel <real> | 678 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:RLEVel? | 678 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom | 688 |
| :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:RPOSition? | 688 |
| :DISPlay:CHPower:VIEW[1]:WINDow[1]:BGRaph ON OFF 1 0 | 343 |
| :DISPlay:CHPower:VIEW[1]:WINDow[1]:BGRaph? | 343 |
| :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON | 300 |
| :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle? | 300 |
| :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl> | 298 |
| :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 298 |
| :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> | 297 |
| :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 297 |
| :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom | 299 |
| :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition? | 299 |
| :DISPlay:ENABle OFF ON 0 1 | 1282 |
| :DISPlay:ENABle? | 1282 |
| :DISPlay:EVMQpsk:VIEW:NSElect <integer> | 916 |
| :DISPlay:EVMQpsk:VIEW:NSElect? | 916 |
| :DISPlay:EVMQpsk:VIEW[:SElect] POLar ERRor | 916 |
| :DISPlay:EVMQpsk:VIEW[:SElect]? | 916 |
| :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:COFFset <integer> | 922 |

List of Commands

| | |
|---|-----|
| :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:COFFset? | 922 |
| :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:FVECTor[:STATe] OFF ON 0 1 | 924 |
| :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:FVECTor[:STATe]? | 924 |
| :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:INTPolation[:STATe] OFF ON 0 1 | 923 |
| :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:INTPolation[:STATe]? | 923 |
| :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:IQCHips <integer> | 923 |
| :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:IQCHips? | 923 |
| :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:POLar VC VECTor CONStn | 921 |
| :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:POLar? | 921 |
| :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:ROtQpi[:STATe] OFF ON 0 1 | 924 |
| :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:ROtQpi[:STATe]? | 924 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUPlE ON OFF 0 1 | 911 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUPlE? | 911 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDIVision <real> | 907 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDIVision? | 907 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RLEVel <real> | 905 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RLEVel? | 905 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHt | 909 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOSition? | 909 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real> | 863 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 863 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> | 860 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 860 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]2 3:TRACe:Y[:SCALe]:COUPlE ON OFF 1 0 | 866 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]2 3:TRACe:Y[:SCALe]:COUPlE? | 866 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]2 3:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom | 866 |
| :DISPlay:EVMQpsk:VIEW2:WINDow[1]2 3:TRACe:Y[:SCALe]:RPOSition? | 866 |
| :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:COUPlE ON OFF 0 1 | 912 |
| :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:COUPlE? | 912 |
| :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:PDIVision <real> | 908 |
| :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:PDIVision? | 908 |

List of Commands

| | |
|--|------|
| :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:RLEVel <real> | 906 |
| :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:RLEVel? | 906 |
| :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHt | 910 |
| :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:RPOSition? | 910 |
| :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision <real> | 863 |
| :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision? | 863 |
| :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel <real> | 861 |
| :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel? | 861 |
| :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:COUPlE ON OFF 0 1 | 912 |
| :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:COUPlE? | 912 |
| :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:PDIVision <real> | 908 |
| :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:PDIVision? | 908 |
| :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:RLEVel <real> | 906 |
| :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:RLEVel? | 906 |
| :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHt | 910 |
| :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:RPOSition? | 910 |
| :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVision <real> | 864 |
| :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVision? | 864 |
| :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALe]:RLEVel <real> | 861 |
| :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALe]:RLEVel? | 861 |
| :DISPlay:FSCReen[:STATe] OFF ON 0 1 | 1281 |
| :DISPlay:FSCReen[:STATe]? | 1281 |
| :DISPlay:MONitor:VIEW:WINDow:TRACe[1] 2 3:CLear | 969 |
| :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0 1 OFF ON | 930 |
| :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPlE? | 930 |
| :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_amp> | 929 |
| :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 929 |
| :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> | 928 |
| :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 928 |
| :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom | 930 |
| :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition? | 930 |

List of Commands

| | |
|--|-----|
| :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0 1 OFF ON | 584 |
| :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPlE? | 584 |
| :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_ampl> | 583 |
| :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 583 |
| :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> | 582 |
| :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 582 |
| :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom | 584 |
| :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition? | 584 |
| :DISPlay:PStatistic:VIEW[1]:WINDow2:TRACe:X[:SCALe]:PDIVision <rel_ampl> | 655 |
| :DISPlay:PStatistic:VIEW[1]:WINDow2:TRACe:X[:SCALe]:PDIVision? | 655 |
| :DISPlay:RHO:VIEW:NSElect <integer> | 840 |
| :DISPlay:RHO:VIEW:NSElect? | 840 |
| :DISPlay:RHO:VIEW[:SElect] POLar ERRor TPHase | 840 |
| :DISPlay:RHO:VIEW[:SElect]? | 840 |
| :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:COFFset <integer> | 846 |
| :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:COFFset? | 846 |
| :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:FVECTor[:STATe] 0 1 OFF ON | 848 |
| :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:FVECTor[:STATe]? | 848 |
| :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:IQCHipS <integer> | 847 |
| :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:IQCHipS? | 847 |
| :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:POLar VC VECTor CONStn | 846 |
| :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:POLar? | 846 |
| :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:ROTQpi[:STATe] 0 1 OFF ON | 847 |
| :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:ROTQpi[:STATe]? | 847 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUPlE 0 1 OFF ON | 832 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUPlE? | 832 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDIVision <real> | 828 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDIVision? | 828 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RLEVel <real> | 826 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RLEVel? | 826 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHt | 830 |

List of Commands

| | |
|--|-----|
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOSition? | 830 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0 1 OFF ON | 785 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:COUPlE? | 785 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <real> | 781 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 781 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> | 778 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 778 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom | 783 |
| :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition? | 783 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:COUPlE 0 1 OFF ON. | 832 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:COUPlE? | 832 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:PDIVision <real> | 829 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:PDIVision? | 829 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:RLEVel <real> | 827 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:RLEVel? | 827 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHT. | 830 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:RPOSition? | 830 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:COUPlE 0 1 OFF ON. | 785 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:COUPlE? | 785 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision <real> | 781 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVision? | 781 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel <real> | 779 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel? | 779 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom. | 784 |
| :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:RPOSition? | 784 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:COUPlE 0 1 OFF ON. | 833 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:COUPlE? | 833 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:PDIVision <real> | 829 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:PDIVision? | 829 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:RLEVel <real> | 827 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:RLEVel? | 827 |

List of Commands

| | |
|--|------|
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHt | 831 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALe]:RPOSition? | 831 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:COUple 0 1 OFF ON | 786 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:COUple? | 786 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVision <real>. | 782 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVision? | 782 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:RLEVel <real>. | 779 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:RLEVel? | 779 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom | 784 |
| :DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:RPOSition? | 784 |
| :DISPlay:SEMask:VIEW:NSElect <integer>. | 503 |
| :DISPlay:SEMask:VIEW:NSElect? | 503 |
| :DISPlay:SEMask:VIEW[:SElect] APFReq RPFReq IPOWER. | 502 |
| :DISPlay:SEMask:VIEW[:SElect]? | 502 |
| :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUple 0 1 ON OFF | 443 |
| :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUple? | 443 |
| :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_amp> | 441 |
| :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 441 |
| :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> | 440 |
| :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 440 |
| :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom. | 442 |
| :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition? | 442 |
| :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUple 0 1 OFF ON | 515 |
| :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUple? | 515 |
| :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_amp>. | 514 |
| :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 514 |
| :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel < real> | 513 |
| :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 513 |
| :DISPlay:THEMe TDColor TDMonochrome FCOLor FMONochrome | 1280 |
| :DISPlay:THEMe? | 1280 |
| :DISPlay:WAVEform:VIEW:NSElect <integer>. | 1030 |

List of Commands

| | |
|--|------|
| :DISPlay:WAVeform:VIEW:NSElect? | 1030 |
| :DISPlay:WAVeform:VIEW[:SElect] RFENvelope IQ | 1030 |
| :DISPlay:WAVeform:VIEW[:SElect]? | 1030 |
| :DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <rel_amp> | 977 |
| :DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 977 |
| :DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <amp;l> | 975 |
| :DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 975 |
| :DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom | 979 |
| :DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition? | 979 |
| :DISPlay:WAVeform:VIEW[1]2:WINDow[1]:TRACe:X[:SCALe]:COUPle 0 1 OFF ON | 1026 |
| :DISPlay:WAVeform:VIEW[1]2:WINDow[1]:TRACe:X[:SCALe]:COUPle? | 1026 |
| :DISPlay:WAVeform:VIEW[1]2:WINDow[1]:TRACe:X[:SCALe]:PDIVision <time> | 1025 |
| :DISPlay:WAVeform:VIEW[1]2:WINDow[1]:TRACe:X[:SCALe]:PDIVision? | 1025 |
| :DISPlay:WAVeform:VIEW[1]2:WINDow[1]:TRACe:X[:SCALe]:RLEVel <time> | 1024 |
| :DISPlay:WAVeform:VIEW[1]2:WINDow[1]:TRACe:X[:SCALe]:RLEVel? | 1024 |
| :DISPlay:WAVeform:VIEW[1]2:WINDow[1]:TRACe:X[:SCALe]:RPOSition LEFT CENTer RIGHT | 1025 |
| :DISPlay:WAVeform:VIEW[1]2:WINDow[1]:TRACe:X[:SCALe]:RPOSition? | 1025 |
| :DISPlay:WAVeform:VIEW[1]2:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON | 981 |
| :DISPlay:WAVeform:VIEW[1]2:WINDow[1]:TRACe:Y[:SCALe]:COUPle? | 981 |
| :DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision <voltage> | 978 |
| :DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision? | 978 |
| :DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <voltage> | 976 |
| :DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? | 976 |
| :DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom | 980 |
| :DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition? | 980 |
| :DISPlay:WINDow:FORMat:TILE | 288 |
| :DISPlay:WINDow:FORMat:TILE ZOOM | 133 |
| :DISPlay:WINDow:FORMat:ZOOM | 288 |
| :DISPlay:WINDow[:SElect] <number> | 134 |
| :DISPlay:WINDow[:SElect] <number> | 288 |
| :DISPlay:WINDow[:SElect]? | 134 |

List of Commands

| | |
|--|------|
| :DISPlay:WINDow[:SElect]? | 288 |
| :DISPlay:WINDow[1]:ANNotation[:ALL] OFF ON 0 1 | 1279 |
| :DISPlay:WINDow[1]:ANNotation[:ALL]? | 1279 |
| :DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1 | 1278 |
| :DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]? | 1278 |
| :DISPlay:WINDow[1]:TRACe:Y:DLINe <ampl> | 1278 |
| :DISPlay:WINDow[1]:TRACe:Y:DLINe:STATe OFF ON 0 1 | 1278 |
| :DISPlay:WINDow[1]:TRACe:Y:DLINe:STATe? | 1278 |
| :DISPlay:WINDow[1]:TRACe:Y:DLINe? | 1278 |
| :FETCh:ACP[n]? | 345 |
| :FETCh:CDPower[n]? | 665 |
| :FETCh:CHPower:CHPower? | 295 |
| :FETCh:CHPower:DENSity? | 295 |
| :FETCh:CHPower[n]? | 295 |
| :FETCh:EVMQpsk[n]? | 857 |
| :FETCh:MONitor[n]? | 927 |
| :FETCh:OBWidth [n]? | 579 |
| :FETCh:OBWidth:FERRor? | 579 |
| :FETCh:OBWidth:OB Width? | 579 |
| :FETCh:OBWidth:XDB? | 579 |
| :FETCh:PSStatistic[n]? | 623 |
| :FETCh:RHO[n]? | 775 |
| :FETCh:SEMAsk[n]? | 429 |
| :FETCh:SPURious[n]? | 511 |
| :FETCh:WAVEform[n] | 973 |
| :FORMat:BORDER NORMAl SWAPped | 1129 |
| :FORMat:BORDER? | 1129 |
| :FORMat[:TRACe][:DATA] ASCii INTEger,32 REAL,32 REAL,64 | 1127 |
| :FORMat[:TRACe][:DATA]? | 1127 |
| :INITiate:ACP | 345 |
| :INITiate:CDPower | 665 |

List of Commands

| | |
|--|------|
| :INITiate:CHPower | 295 |
| :INITiate:CONTInuous OFF ON 0 1 | 1063 |
| :INITiate:CONTInuous? | 1063 |
| :INITiate:MONitor | 927 |
| :INITiate:OBWidth | 579 |
| :INITiate:PAUSE | 1198 |
| :INITiate:PSStatistic | 623 |
| :INITiate:REStart | 1167 |
| :INITiate:RESume | 1198 |
| :INITiate:SEMask | 429 |
| :INITiate:SPURious | 511 |
| :INITiate:WAVEform | 973 |
| :INITiate[:IMMediate] | 1167 |
| :INPut:COUPling AC DC | 1067 |
| :INPut:COUPling:I Q DC LFR1 LFR2 | 1079 |
| :INPut:COUPling:I Q? | 1079 |
| :INPut:COUPling? | 1067 |
| :INPut:IMPedance:REFerence <integer> | 1081 |
| :INPut:IMPedance:REFerence? | 1081 |
| :INPut:IQ:MIRRored OFF ON 0 1 | 1075 |
| :INPut:IQ:MIRRored? | 1075 |
| :INPut:IQ:Q:DIFFerential OFF ON 0 1 | 1076 |
| :INPut:IQ:Q:DIFFerential? | 1076 |
| :INPut:IQ[:I]:DIFFerential OFF ON 0 1 | 1072 |
| :INPut:IQ[:I]:DIFFerential? | 1072 |
| :INPut:OFFSet:I Q <voltage> | 1079 |
| :INPut:OFFSet:I Q? | 1079 |
| :INPut[1]:IQ:BALanced[:STATe] OFF ON 0 1 | 1072 |
| :INPut[1]:IQ:BALanced[:STATe]? | 1072 |
| :INPut[1]:IQ:Q:IMPedance LOW HIGH | 1076 |
| :INPut[1]:IQ:Q:IMPedance? | 1076 |

List of Commands

| | |
|--|------|
| :INPut[1]:IQ:TYPE IQ IQ | 1071 |
| :INPut[1]:IQ:TYPE? | 1071 |
| :INPut[1]:IQ[:I]:IMPedance LOW HIGH | 1073 |
| :INPut[1]:IQ[:I]:IMPedance? | 1073 |
| :INSTrument:CATalog? | 1135 |
| :INSTrument:DEFault | 200 |
| :INSTrument:NSElect <integer> | 1134 |
| :INSTrument:NSElect? | 1134 |
| :INSTrument[:SElect] SA BASIC ADEMOD NFIGURE PNOISE CDMA2K TDSCDMA VSA VSA89601 WCD- MA WIMAXOFDMA GSM CDMA1XEV RLC | 1133 |
| :INSTrument[:SElect]? | 1133 |
| :LXI:CLOCK:PTP:ACCuracy NS25 NS100 NS250 NS1000 NS2500 US10 US25 US100 US250 US1000 US2500 MS10 MS25 MS100 MS1000 S 10 GT10S UNKNown | 252 |
| :LXI:CLOCK:PTP:ACCuracy? | 252 |
| :LXI:CLOCK:PTP:ANNounce:INTerval <interval> | 253 |
| :LXI:CLOCK:PTP:ANNounce:INTerval? | 253 |
| :LXI:CLOCK:PTP:ANNounce:RTOut <numberOfIntervals> | 253 |
| :LXI:CLOCK:PTP:ANNounce:RTOut? | 253 |
| :LXI:CLOCK:PTP:CCLass? | 253 |
| :LXI:CLOCK:PTP:DEViation? | 254 |
| :LXI:CLOCK:PTP:DOMain <domainNumber> | 254 |
| :LXI:CLOCK:PTP:DOMain? | 254 |
| :LXI:CLOCK:PTP:DRINterval <seconds> | 256 |
| :LXI:CLOCK:PTP:DRINterval? | 256 |
| :LXI:CLOCK:PTP:GMASter:ACCuracy? | 257 |
| :LXI:CLOCK:PTP:GMASter:MADdress? | 257 |
| :LXI:CLOCK:PTP:GMASter:TRACeability? | 257 |
| :LXI:CLOCK:PTP:MASter:MADdress? | 257 |
| :LXI:CLOCK:PTP:OFFSet? | 254 |
| :LXI:CLOCK:PTP:PRIority:FIRSt <priority> | 254 |
| :LXI:CLOCK:PTP:PRIority:FIRSt? | 254 |

List of Commands

| | |
|---|-----|
| :LXI:CLOCK:PTP:PRiority:SECond <priority> | 255 |
| :LXI:CLOCK:PTP:PRiority:SECond? | 255 |
| :LXI:CLOCK:PTP:SINterval <seconds> | 256 |
| :LXI:CLOCK:PTP:SINterval? | 256 |
| :LXI:CLOCK:PTP:STATe? | 255 |
| :LXI:CLOCK:PTP:TRACeability? | 255 |
| :LXI:CLOCK:PTP:VARiance? | 255 |
| :LXI:CLOCK:SALGorithm:LOG:ALL? | 259 |
| :LXI:CLOCK:SALGorithm:LOG:CIRCular:FBENtry | 258 |
| :LXI:CLOCK:SALGorithm:LOG:CIRCular[:ENABled] ON OFF 0 1 | 258 |
| :LXI:CLOCK:SALGorithm:LOG:CIRCular[:ENABled]? | 258 |
| :LXI:CLOCK:SALGorithm:LOG:CLEar | 258 |
| :LXI:CLOCK:SALGorithm:LOG:COUNT? | 259 |
| :LXI:CLOCK:SALGorithm:LOG:ENABled ON OFF 0 1 | 259 |
| :LXI:CLOCK:SALGorithm:LOG:ENABled? | 259 |
| :LXI:CLOCK:SALGorithm:LOG:ENTRy? <intIndex> | 260 |
| :LXI:CLOCK:SALGorithm:LOG:SIZE <maxLogEntries> | 259 |
| :LXI:CLOCK:SALGorithm:LOG:SIZE? | 259 |
| :LXI:CLOCK:SALGorithm:LOG:STATistics:CLEar | 260 |
| :LXI:CLOCK:SALGorithm:LOG:STATistics[:DATA]? | 260 |
| :LXI:CLOCK:SALGorithm:LOG[:NEXT]? | 258 |
| :LXI:CLOCK:SALGorithm[:SET]:ASYMmetry <seconds> | 260 |
| :LXI:CLOCK:SALGorithm[:SET]:ASYMmetry? | 260 |
| :LXI:CLOCK:SALGorithm[:SET]:CFTHreshold <secondsSquared> | 261 |
| :LXI:CLOCK:SALGorithm[:SET]:CFTHreshold? | 261 |
| :LXI:CLOCK:SALGorithm[:SET]:CIConstant <servoConstant> | 262 |
| :LXI:CLOCK:SALGorithm[:SET]:CIConstant? | 262 |
| :LXI:CLOCK:SALGorithm[:SET]:CONFigure <asymmetry>, <coarse fine threshold>, <cpc>, <cic>, <fpc>, <fic>, <maximum outlier discard>, <outlier threshold>, <set/steer threshold> | 264 |
| :LXI:CLOCK:SALGorithm[:SET]:CPConstant <servoConstant> | 261 |
| :LXI:CLOCK:SALGorithm[:SET]:CPConstant? | 261 |

List of Commands

| | |
|--|-----|
| :LXI:CLOCK:SALGorithm[:SET]:FIConstant <servoConstant> | 262 |
| :LXI:CLOCK:SALGorithm[:SET]:FIConstant? | 262 |
| :LXI:CLOCK:SALGorithm[:SET]:FPConstant <servoConstant> | 262 |
| :LXI:CLOCK:SALGorithm[:SET]:FPConstant? | 262 |
| :LXI:CLOCK:SALGorithm[:SET]:OMAXimum <consecutiveSamples>. | 263 |
| :LXI:CLOCK:SALGorithm[:SET]:OMAXimum? | 263 |
| :LXI:CLOCK:SALGorithm[:SET]:OTENable ON OFF 1 0 | 264 |
| :LXI:CLOCK:SALGorithm[:SET]:OTENable? | 264 |
| :LXI:CLOCK:SALGorithm[:SET]:OTHReshold <standardDeviations>. | 263 |
| :LXI:CLOCK:SALGorithm[:SET]:OTHReshold? | 263 |
| :LXI:CLOCK:SALGorithm[:SET]:STHReshold <seconds> | 264 |
| :LXI:CLOCK:SALGorithm[:SET]:STHReshold? | 264 |
| :LXI:CLOCK:SYNC:LOCal:ENABled ON OFF 0 1 | 265 |
| :LXI:CLOCK:SYNC:LOCal:ENABled? | 265 |
| :LXI:CLOCK:SYNC:LOCal:INTerval? | 265 |
| :LXI:CLOCK:SYNC:LOCal:INTerval | 265 |
| :LXI:CLOCK:SYNC:MASTer? | 264 |
| :LXI:CLOCK[:TIME]:DLSavings? | 250 |
| :LXI:CLOCK[:TIME]:FRACtion <fraction> | 248 |
| :LXI:CLOCK[:TIME]:FRACtion? | 248 |
| :LXI:CLOCK[:TIME]:LOCal? | 249 |
| :LXI:CLOCK[:TIME]:LSOFFset <integer> | 249 |
| :LXI:CLOCK[:TIME]:LSOFFset? | 249 |
| :LXI:CLOCK[:TIME]:MARKer[1] 2 3 4 5 6 7 8 9:CLEAr. | 250 |
| :LXI:CLOCK[:TIME]:MARKer[1] 2 3 4 5 6 7 8 9:DELTA? | 251 |
| :LXI:CLOCK[:TIME]:MARKer[1] 2 3 4 5 6 7 8 9[:SET]. | 250 |
| :LXI:CLOCK[:TIME]:MEASure:CLEAr | 252 |
| :LXI:CLOCK[:TIME]:MEASure[:DELTA]?. | 251 |
| :LXI:CLOCK[:TIME]:SECOnds <seconds>. | 248 |
| :LXI:CLOCK[:TIME]:SECOnds? | 248 |
| :LXI:CLOCK[:TIME]:TAI? | 249 |

List of Commands

| | |
|--|-----|
| :LXI:CLOCK[:TIME]:TZONe? | 249 |
| :LXI:CLOCK[:TIME]:UTC? | 250 |
| :LXI:CLOCK[:TIME][:VALue] <seconds>,<fractionalSeconds> | 247 |
| :LXI:CLOCK[:TIME][:VALue]? | 247 |
| :LXI:EVENT:DOMain <intDomain> | 240 |
| :LXI:EVENT:DOMain? | 240 |
| :LXI:EVENT:INPut:LAN:ADD “LANEVENT” | 267 |
| :LXI:EVENT:INPut:LAN:COUNT? | 270 |
| :LXI:EVENT:INPut:LAN:DISable:ALL | 266 |
| :LXI:EVENT:INPut:LAN:FILTer “LANEVENT”,“filterString” | 268 |
| :LXI:EVENT:INPut:LAN:FILTer? | 268 |
| :LXI:EVENT:INPut:LAN:IDENtifier “LANEVENT”,“identifier” | 268 |
| :LXI:EVENT:INPut:LAN:IDENtifier? “LANEVENT” | 268 |
| :LXI:EVENT:INPut:LAN:LIST? | 270 |
| :LXI:EVENT:INPut:LAN:LOCation “LANEVENT”,“path” | 266 |
| :LXI:EVENT:INPut:LAN:LOCation? “LANEVENT” | 266 |
| :LXI:EVENT:INPut:LAN:REMOve:ALL | 267 |
| :LXI:EVENT:INPut:LAN:REMOve[:EVENT] “LANEVENT” | 267 |
| :LXI:EVENT:INPut:LAN[:SET]:CONFigure “lanEvent”, <enab>, <detection>, <filter>, <identifier> | 271 |
| :LXI:EVENT:INPut:LAN[:SET]:DETection “LANEVENT”, HIGH LOW RISE FALL | 269 |
| :LXI:EVENT:INPut:LAN[:SET]:DETection? “LANEVENT” | 269 |
| :LXI:EVENT:INPut:LAN[:SET]:ENABled “LANEVENT”,ON OFF 1 0 | 270 |
| :LXI:EVENT:INPut:LAN[:SET]:ENABled? “LANEVENT” | 270 |
| :LXI:EVENT:LOG:ALL? | 213 |
| :LXI:EVENT:LOG:CIRCular:FBENtry | 213 |
| :LXI:EVENT:LOG:CIRCular[:ENABle] ON OFF 1 0 | 211 |
| :LXI:EVENT:LOG:CIRCular[:ENABle]? | 211 |
| :LXI:EVENT:LOG:CLEar | 212 |
| :LXI:EVENT:LOG:COUNt? | 212 |
| :LXI:EVENT:LOG:ENABle ON OFF 1 0 | 212 |
| :LXI:EVENT:LOG:ENABle? | 212 |

List of Commands

| | |
|--|-----|
| :LXI:EVENT:LOG:ENTRY? <intIndex> | 213 |
| :LXI:EVENT:LOG:SIZE <size> | 212 |
| :LXI:EVENT:LOG:SIZE? | 212 |
| :LXI:EVENT:LOG[:NEXT]? | 213 |
| :LXI:EVENT:STATUS[:ENABLEd] "STATUSEVENT",ON OFF 1 0 | 265 |
| :LXI:EVENT:STATUS[:ENABLEd]? "STATUSEVENT" | 265 |
| :LXI:EVENT[:OUTPut]:LAN:ADD "LANEVENT" | 241 |
| :LXI:EVENT[:OUTPut]:LAN:COUNT? | 246 |
| :LXI:EVENT[:OUTPut]:LAN:DISable:ALL | 240 |
| :LXI:EVENT[:OUTPut]:LAN:LIST? | 241 |
| :LXI:EVENT[:OUTPut]:LAN:REMOve:ALL | 242 |
| :LXI:EVENT[:OUTPut]:LAN:REMOve[:EVENT] "LANEVENT" | 241 |
| :LXI:EVENT[:OUTPut]:LAN:SEND "LANEVENT", RISE FALL | 246 |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:CONFigure "lanEvent",<enabled>,<source>,<slope>,<drive>,<destination> 246 | |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:DESTination "LANEVENT", "destinationExpression" | 243 |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:DESTination? "LANEVENT" | 243 |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:DRIVE "LANEVENT", OFF NORMal WOR | 244 |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:DRIVE? "LANEVENT" | 244 |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:ENABLEd "LANEVENT",ON OFF 1 0 | 246 |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:ENABLEd? "LANEVENT" | 246 |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:IDENTifier "LANEVENT", "identifier" | 247 |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:IDENTifier? "LANEVENT" | 247 |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:SLOPe "LANEVENT", POSitive NEGative | 245 |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:SLOPe? "LANEVENT" | 245 |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:SOURce "LANEVENT", "SourceEvent" | 243 |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:SOURce? "LANEVENT" | 243 |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:TSDelta "LANEVENT", <seconds> | 245 |
| :LXI:EVENT[:OUTPut]:LAN[:SET]:TSDelta? "LANEVENT" | 245 |
| :MEASure:ACP[n]? | 345 |
| :MEASure:CDPower[n]? | 665 |

List of Commands

| | |
|--|------|
| :MEASure:CHPower:CHPower? | 295 |
| :MEASure:CHPower:DENSity? | 295 |
| :MEASure:CHPower[n]? | 295 |
| :MEASure:EVMQpsk[n]? | 857 |
| :MEASure:MONitor[n]? | 927 |
| :MEASure:OBWidth [n]? | 579 |
| :MEASure:OBWidth:FERRor? | 579 |
| :MEASure:OBWidth:OBWidth? | 579 |
| :MEASure:OBWidth:XDB? | 579 |
| :MEASure:RHO[n]? | 775 |
| :MEASure:SEMask[n]? | 429 |
| :MEASure:SPURious[n]? | 511 |
| :MEASure:WAVeform[n]. | 973 |
| :MMEMory:LOAD:CAPTured <filename> | 1161 |
| :MMEMory:LOAD:STATe <filename>. | 1152 |
| :MMEMory:LOAD:TRACe TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6,<filename> | 1155 |
| :MMEMory:LOAD:TRACe:DATA TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6,<filename> . | 1160 |
| :MMEMory:LOAD:TRACe:REGister TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6,<integer> | 1155 |
| :MMEMory:LOAD:ZMAP <filename> | 1162 |
| :MMEMory:STORE:CAPTured <filename> | 1182 |
| :MMEMory:STORE:RECORDing <filename>[,SDF SD- FX CSV TXT MAT4 MAT HDF5 BIN[,OFF ON 0 1[,OFF ON 0 1[,OFF ON 0 1]]]. | 1183 |
| :MMEMory:STORE:RESults <filename> | 1180 |
| :MMEMory:STORE:RESults:MTABLE PTABLE <filename>. | 1180 |
| :MMEMory:STORE:SCReen <filename> | 1186 |
| :MMEMory:STORE:SCReen:THEMe TDCOLOR TDMonochrome FCOLOR FMONochrome | 1185 |
| :MMEMory:STORE:SCReen:THEMe? | 1185 |
| :MMEMory:STORE:STATe <filename> | 1172 |
| :MMEMory:STORE:TRACe TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 ALL,<filename> . . | 1174 |
| :MMEMory:STORE:TRACe:DATA TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6,"<filena- me>"[,CSV TXT SDF[,OFF ON 0 1]] | 1182 |
| :MMEMory:STORE:TRACe:DATA TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 ALL,<filename> | |

List of Commands

| | |
|---|------|
| 1181 | |
| :MMEMory:STORe:TRACe:REGister TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 ALL,<integer> 1174 | |
| :MMEMory:STORe:ZMAP <filename> | 1182 |
| :OUTPut:DBUS[1][:STATe] ON OFF 1 0 | 1096 |
| :OUTPut:DBUS[1][:STATe]? | 1096 |
| :OUTPut:IQ:OUTPut IQ1 IQ250 OFF | 1096 |
| :OUTPut:IQ:OUTPut? | 1096 |
| :READ:ACP[n]? | 345 |
| :READ:CDPower[n]? | 665 |
| :READ:CHPower:CHPower? | 295 |
| :READ:CHPower:DENSity | 295 |
| :READ:CHPower[n]? | 295 |
| :READ:EVMQpsk[n]? | 857 |
| :READ:MONitor[n]? | 927 |
| :READ:OBWidth [n]? | 579 |
| :READ:OBWidth:FERRor? | 579 |
| :READ:OBWidth:OBWidth? | 579 |
| :READ:OBWidth:XDB? | 579 |
| :READ:PSStatistic[n]? | 623 |
| :READ:RHO[n]? | 775 |
| :READ:SEMAsk[n]? | 429 |
| :READ:SPURious[n]? | 511 |
| :READ:WAVEform[n]. | 973 |
| :STATus:OPERation:CONDition? | 157 |
| :STATus:OPERation:ENABle <integer> | 158 |
| :STATus:OPERation:ENABle? | 158 |
| :STATus:OPERation:NTRansition <integer>. | 158 |
| :STATus:OPERation:NTRansition? | 158 |
| :STATus:OPERation:PTRansition <integer> | 159 |
| :STATus:OPERation:PTRansition? | 159 |

List of Commands

| | |
|---|-----|
| :STATUS:OPERation[:EVENT]? | 158 |
| :STATUS:PRESet | 159 |
| :STATUS:QUEStionable:CALibration:CONDition? | 162 |
| :STATUS:QUEStionable:CALibration:ENABle <integer> | 162 |
| :STATUS:QUEStionable:CALibration:ENABle? | 162 |
| :STATUS:QUEStionable:CALibration:EXTended:FAILure:CONDition? | 166 |
| :STATUS:QUEStionable:CALibration:EXTended:FAILure:ENABle <integer> | 166 |
| :STATUS:QUEStionable:CALibration:EXTended:FAILure:ENABle? | 166 |
| :STATUS:QUEStionable:CALibration:EXTended:FAILure:NTRansition <integer> | 167 |
| :STATUS:QUEStionable:CALibration:EXTended:FAILure:NTRansition? | 167 |
| :STATUS:QUEStionable:CALibration:EXTended:FAILure:PTRansition <integer> | 167 |
| :STATUS:QUEStionable:CALibration:EXTended:FAILure:PTRansition? | 167 |
| :STATUS:QUEStionable:CALibration:EXTended:FAILure[:EVENT]? | 166 |
| :STATUS:QUEStionable:CALibration:EXTended:NEEDed:CONDition? | 168 |
| :STATUS:QUEStionable:CALibration:EXTended:NEEDed:ENABle <integer> | 168 |
| :STATUS:QUEStionable:CALibration:EXTended:NEEDed:ENABle? | 168 |
| :STATUS:QUEStionable:CALibration:EXTended:NEEDed:NTRansition <integer> | 169 |
| :STATUS:QUEStionable:CALibration:EXTended:NEEDed:NTRansition? | 169 |
| :STATUS:QUEStionable:CALibration:EXTended:NEEDed:PTRansition <integer> | 169 |
| :STATUS:QUEStionable:CALibration:EXTended:NEEDed:PTRansition? | 169 |
| :STATUS:QUEStionable:CALibration:EXTended:NEEDed[:EVENT]? | 168 |
| :STATUS:QUEStionable:CALibration:NTRansition <integer> | 163 |
| :STATUS:QUEStionable:CALibration:NTRansition? | 163 |
| :STATUS:QUEStionable:CALibration:PTRansition <integer> | 163 |
| :STATUS:QUEStionable:CALibration:PTRansition? | 163 |
| :STATUS:QUEStionable:CALibration:SKIPped:CONDition? | 163 |
| :STATUS:QUEStionable:CALibration:SKIPped:ENABle <integer> | 164 |
| :STATUS:QUEStionable:CALibration:SKIPped:ENABle? | 164 |
| :STATUS:QUEStionable:CALibration:SKIPped:NTRansition <integer> | 165 |
| :STATUS:QUEStionable:CALibration:SKIPped:NTRansition? | 165 |
| :STATUS:QUEStionable:CALibration:SKIPped:PTRansition <integer> | 165 |

List of Commands

| | |
|---|-----|
| :STATUS:QUESTIONable:CALibration:SKIPped:PTRansition? | 165 |
| :STATUS:QUESTIONable:CALibration:SKIPped[:EVENT]? | 164 |
| :STATUS:QUESTIONable:CALibration[:EVENT]? | 162 |
| :STATUS:QUESTIONable:CONDition? | 160 |
| :STATUS:QUESTIONable:FREQuency:CONDition? | 170 |
| :STATUS:QUESTIONable:FREQuency:ENABle <integer> | 170 |
| :STATUS:QUESTIONable:FREQuency:ENABle? | 170 |
| :STATUS:QUESTIONable:FREQuency:NTRansition <integer> | 171 |
| :STATUS:QUESTIONable:FREQuency:NTRansition? | 171 |
| :STATUS:QUESTIONable:FREQuency:PTRansition <integer> | 171 |
| :STATUS:QUESTIONable:FREQuency:PTRansition? | 171 |
| :STATUS:QUESTIONable:FREQuency[:EVENT]? | 170 |
| :STATUS:QUESTIONable:INTegrity:CONDition? | 172 |
| :STATUS:QUESTIONable:INTegrity:ENABle <integer> | 172 |
| :STATUS:QUESTIONable:INTegrity:ENABle? | 172 |
| :STATUS:QUESTIONable:INTegrity:NTRansition <integer> | 173 |
| :STATUS:QUESTIONable:INTegrity:NTRansition? | 173 |
| :STATUS:QUESTIONable:INTegrity:PTRansition <integer> | 173 |
| :STATUS:QUESTIONable:INTegrity:PTRansition? | 173 |
| :STATUS:QUESTIONable:INTegrity:SIGNal:CONDition? | 174 |
| :STATUS:QUESTIONable:INTegrity:SIGNal:ENABle <integer> | 174 |
| :STATUS:QUESTIONable:INTegrity:SIGNal:ENABle? | 174 |
| :STATUS:QUESTIONable:INTegrity:SIGNal:NTRansition <integer> | 175 |
| :STATUS:QUESTIONable:INTegrity:SIGNal:NTRansition? | 175 |
| :STATUS:QUESTIONable:INTegrity:SIGNal:PTRansition <integer> | 175 |
| :STATUS:QUESTIONable:INTegrity:SIGNal:PTRansition? | 175 |
| :STATUS:QUESTIONable:INTegrity:SIGNal[:EVENT]? | 175 |
| :STATUS:QUESTIONable:INTegrity:UNCalibrated:CONDition? | 176 |
| :STATUS:QUESTIONable:INTegrity:UNCalibrated:ENABle | 176 |
| :STATUS:QUESTIONable:INTegrity:UNCalibrated:ENABle? | 176 |
| :STATUS:QUESTIONable:INTegrity:UNCalibrated:NTRansition <integer> | 177 |

List of Commands

| | |
|---|------|
| :STATUS:QUESTIONable:INTEGRity:UNCalibrated:NTRansition? | 177 |
| :STATUS:QUESTIONable:INTEGRity:UNCalibrated:PTRansition <integer> | 177 |
| :STATUS:QUESTIONable:INTEGRity:UNCalibrated:PTRansition? | 177 |
| :STATUS:QUESTIONable:INTEGRity:UNCalibrated[:EVENT]? | 177 |
| :STATUS:QUESTIONable:INTEGRity[:EVENT]? | 173 |
| :STATUS:QUESTIONable:POWer:CONDition? | 178 |
| :STATUS:QUESTIONable:POWer:ENABle <integer> | 178 |
| :STATUS:QUESTIONable:POWer:ENABle? | 178 |
| :STATUS:QUESTIONable:POWer:NTRansition <integer> | 179 |
| :STATUS:QUESTIONable:POWer:NTRansition? | 179 |
| :STATUS:QUESTIONable:POWer:PTRansition <integer> | 179 |
| :STATUS:QUESTIONable:POWer:PTRansition?> | 179 |
| :STATUS:QUESTIONable:POWer[:EVENT]? | 179 |
| :STATUS:QUESTIONable:PTRansition <integer> | 161 |
| :STATUS:QUESTIONable:PTRansition? | 161 |
| :STATUS:QUESTIONable:TEMPerature:CONDition? | 180 |
| :STATUS:QUESTIONable:TEMPerature:ENABle <integer> | 180 |
| :STATUS:QUESTIONable:TEMPerature:ENABle? | 180 |
| :STATUS:QUESTIONable:TEMPerature:NTRansition <integer> | 181 |
| :STATUS:QUESTIONable:TEMPerature:NTRansition? | 181 |
| :STATUS:QUESTIONable:TEMPerature:PTRansition <integer> | 181 |
| :STATUS:QUESTIONable:TEMPerature:PTRansition? | 181 |
| :STATUS:QUESTIONable:TEMPerature[:EVENT]? | 181 |
| :STATUS:QUESTIONable[:EVENT]? | 160 |
| :SYSTem:APPLication:CATalog:OPTion? <model> | 1138 |
| :SYSTem:APPLication:CATalog:REVision? <model> | 1137 |
| :SYSTem:APPLication:CATalog[:NAME]:COUNt? | 1136 |
| :SYSTem:APPLication:CATalog[:NAME]? | 1137 |
| :SYSTem:APPLication[:CURRent]:OPTion? | 1136 |
| :SYSTem:APPLication[:CURRent]:REVision? | 1135 |
| :SYSTem:APPLication[:CURRent][:NAME]? | 1135 |

List of Commands

| | |
|---|-----|
| :SYSTem:COMMunicate:GPIB[1][:SELf]:ADDRes <integer> | 235 |
| :SYSTem:COMMunicate:GPIB[1][:SELf]:ADDRes? | 235 |
| :SYSTem:COMMunicate:LAN:SCPI:SIcL:ENABle OFF ON 0 1 | 238 |
| :SYSTem:COMMunicate:LAN:SCPI:SIcL:ENABle? | 238 |
| :SYSTem:COMMunicate:LAN:SCPI:SOCKet:CONTRol? | 237 |
| :SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle OFF ON 0 1 | 236 |
| :SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle? | 236 |
| :SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle OFF ON 0 1 | 236 |
| :SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle? | 236 |
| :SYSTem:COMMunicate:USB:CONNectiOn? | 238 |
| :SYSTem:COMMunicate:USB:PACKets? | 239 |
| :SYSTem:COMMunicate:USB:STATUs? | 238 |
| :SYSTem:DATE “<year>,<month>,<day>” | 283 |
| :SYSTem:DATE? | 283 |
| :SYSTem:DEFault [ALL] ALIGn INPut MISC MODes PON | 271 |
| :SYSTem:ERRor:VERBose OFF ON 0 1 | 208 |
| :SYSTem:ERRor:VERBose? | 208 |
| :SYSTem:ERRor[:NEXT]? | 207 |
| :SYSTem:HELp:HEADers? | 282 |
| :SYSTem:HID? | 277 |
| :SYSTem:KLOCK OFF ON 0 1 | 282 |
| :SYSTem:KLOCK? | 282 |
| :SYSTem:LKEY <”OptionInfo”>, <”LicenseInfo”>. | 276 |
| :SYSTem:LKEY:DELete <”OptionInfo”>,<”LicenseInfo”>. | 276 |
| :SYSTem:LKEY:LIST? | 276 |
| :SYSTem:LKEY? <”OptionInfo”> | 277 |
| :SYSTem:MRELay:COUNt? | 279 |
| :SYSTem:OPTions? | 281 |
| :SYSTem:PON:ETIME? | 280 |
| :SYSTem:PON:MODE SA BASIC ADEMOD NFIGURE PNOISE CDMA2K TDSCD- MA VSA VSA89601 WCDMA WIMAXOFDMA | 215 |

List of Commands

| | |
|--|-----|
| :SYSTem:PON:MODE? | 215 |
| :SYSTem:PON:TIME? | 229 |
| :SYSTem:PON:TYPE MODE USER LAST PRESet | 214 |
| :SYSTem:PON:TYPE? | 214 |
| :SYSTem:PRESet. | 198 |
| :SYSTem:PRESet:USER | 284 |
| :SYSTem:PRESet:USER:ALL | 285 |
| :SYSTem:PRESet:USER:SAVE | 286 |
| :SYSTem:PRINt:THEMe TDCOLOR TDMonochrome FCOLOR FMONochrome. | 196 |
| :SYSTem:PRINt:THEMe? | 196 |
| :SYSTem:SHOW OFF ERRor SYSTem HARDware LXI HWSTatistics ALIGNment SOFTware | 206 |
| :SYSTem:SHOW? | 206 |
| :SYSTem:TEMPerature:HEXTreme? | 280 |
| :SYSTem:TEMPerature:LEXTreme? | 280 |
| :SYSTem:TIME “<hour>,<minute>,<second>” | 283 |
| :SYSTem:TIME? | 283 |
| :SYSTem:VERSion? | 282 |
| :TRACe:ACPower[:TRACe1 2 3]:TYPE WRITe AVERAge MAXHold MINHold | 419 |
| :TRACe:ACPower[:TRACe1 2 3]:TYPE? | 419 |
| :TRACe:CHPower:TYPE WRITe AVERAge MAXHold MINHold | 337 |
| :TRACe:CHPower:TYPE? | 337 |
| :TRACe:MONitor:CLEar [TRACE1] TRACE2 TRACE3 | 969 |
| :TRACe:MONitor:CLEar:ALL | 969 |
| :TRACe:OBWidth:TYPE WRITe AVERAge MAXHold MINHold | 615 |
| :TRACe:OBWidth:TYPE? | 615 |
| :TRACe:SEMask:TYPE WRITe AVERAge MAXHold MINHold | 496 |
| :TRACe:SEMask:TYPE? | 496 |
| :TRACe[1] 2 3:ACPower:DISPlay[:STATe] ON OFF 0 1 | 423 |
| :TRACe[1] 2 3:ACPower:DISPlay[:STATe]? | 423 |
| :TRACe[1] 2 3:ACPower:TYPE WRITe AVERAge MAXHold MINHold | 419 |
| :TRACe[1] 2 3:ACPower:TYPE? | 419 |

List of Commands

| | |
|--|------|
| :TRACe[1] 2 3:ACPower:UPDate[:STATe] ON OFF 0 1 | 423 |
| :TRACe[1] 2 3:ACPower:UPDate[:STATe]? | 423 |
| :TRACe[1] 2 3:MONitor:DISPlay[:STATe] ON OFF 0 1 | 966 |
| :TRACe[1] 2 3:MONitor:DISPlay[:STATe]? | 966 |
| :TRACe[1] 2 3:MONitor:TYPE WRITe AVERAge MAXHold MINHold | 965 |
| :TRACe[1] 2 3:MONitor:TYPE? | 965 |
| :TRACe[1] 2 3:MONitor:UPDate[:STATe] ON OFF 0 1 | 966 |
| :TRACe[1] 2 3:MONitor:UPDate[:STATe]? | 966 |
| :TRIGger:<measurement>[:SEQuence]:IQ:SOURce EXTernal1 EXTernal2 IMMediate IQMag IDEMod QDE- Mod IINPut QINPut AIQMag | 1226 |
| :TRIGger:<measurement>[:SEQuence]:IQ:SOURce? | 1226 |
| :TRIGger:<measurement>[:SEQuence]:RF:SOURce EXTernal1 EXTernal2 IMMediate LINE FRAME RF- Burst VIDeo IF ALARm LAN | 1225 |
| :TRIGger:<measurement>[:SEQuence]:RF:SOURce? | 1225 |
| :TRIGger:<measurement>[:SEQuence]:SOURce EXTernal1 EXTernal2 IMMediate LINE FRAME RFBurst VID- eo IF ALARm LAN IQMag IDEMod QDEMod IINPut QINPut AIQMag | 1221 |
| :TRIGger:<measurement>[:SEQuence]:SOURce? | 1221 |
| :TRIGger:CDPower[:SEQuence]:IQ:SOURce EXTernal[1] EXTernal2 IMMediate IQMag IDEMod QDEMod IIN- Put QINPut AIQMag | 747 |
| :TRIGger:CDPower[:SEQuence]:IQ:SOURce? | 747 |
| :TRIGger:CDPower[:SEQuence]:RF:SOURce EXTernal[1] EXTernal2 IMMediate LINE FRAME RFBurst VID- eo IF | 747 |
| :TRIGger:CDPower[:SEQuence]:RF:SOURce? | 747 |
| :TRIGger:CDPower[:SEQuence]:SOURce EXTernal[1] EXTernal2 IMMediate LINE FRAME RFBurst VID- eo IF IQMag IDEMod QDEMod IINPut QINPut AIQMag | 746 |
| :TRIGger:CDPower[:SEQuence]:SOURce? | 746 |
| :TRIGger:RHO[:SEQuence]:IQ:SOURce EXTernal[1] EXTernal2 IMMediate IQMag IDEMod QDEMod IIN- Put QINPut AIQMag | 837 |
| :TRIGger:RHO[:SEQuence]:IQ:SOURce? | 837 |
| :TRIGger:RHO[:SEQuence]:RF:SOURce EXTernal[1] EXTernal2 IMMediate LINE FRAME RFBurst VIDeo IF | 837 |
| :TRIGger:RHO[:SEQuence]:RF:SOURce? | 837 |
| :TRIGger:RHO[:SEQuence]:SOURce EXTernal[1] EXTernal2 IMMediate LINE FRAME RFBurst VID- eo IF IQMag IDEMod QDEMod IINPut QINPut AIQMag | 836 |

List of Commands

| | |
|---|------|
| :TRIGger:RHO[:SEQuence]:SOURce? | 836 |
| :TRIGger[:SEQuence]:AIQMag:BANDwidth <freq> | 1270 |
| :TRIGger[:SEQuence]:AIQMag:BANDwidth? | 1270 |
| :TRIGger[:SEQuence]:AIQMag:CENTer <freq> | 1269 |
| :TRIGger[:SEQuence]:AIQMag:CENTer? | 1269 |
| :TRIGger[:SEQuence]:AIQMag:DELay <time> | 1269 |
| :TRIGger[:SEQuence]:AIQMag:DELay:STATe OFF ON 0 1 | 1269 |
| :TRIGger[:SEQuence]:AIQMag:DELay:STATe? | 1269 |
| :TRIGger[:SEQuence]:AIQMag:DELay? | 1269 |
| :TRIGger[:SEQuence]:AIQMag:LEVel <ampl > | 1268 |
| :TRIGger[:SEQuence]:AIQMag:LEVel? | 1268 |
| :TRIGger[:SEQuence]:AIQMag:SLOPe POSitive NEGative | 1269 |
| :TRIGger[:SEQuence]:AIQMag:SLOPe? | 1269 |
| :TRIGger[:SEQuence]:ATRigger <time> | 1270 |
| :TRIGger[:SEQuence]:ATRigger:STATe OFF ON 0 1 | 1270 |
| :TRIGger[:SEQuence]:ATRigger:STATe? | 1270 |
| :TRIGger[:SEQuence]:ATRigger? | 1270 |
| :TRIGger[:SEQuence]:EXTernal1:DELay <time> | 1234 |
| :TRIGger[:SEQuence]:EXTernal1:DELay:STATe OFF ON 0 1 | 1234 |
| :TRIGger[:SEQuence]:EXTernal1:DELay:STATe? | 1234 |
| :TRIGger[:SEQuence]:EXTernal1:DELay? | 1234 |
| :TRIGger[:SEQuence]:EXTernal1:LEVel <level> | 1233 |
| :TRIGger[:SEQuence]:EXTernal1:LEVel? | 1233 |
| :TRIGger[:SEQuence]:EXTernal1:SLOPe POSitive NEGative | 1234 |
| :TRIGger[:SEQuence]:EXTernal1:SLOPe? | 1234 |
| :TRIGger[:SEQuence]:EXTernal2:DELay <time> | 1236 |
| :TRIGger[:SEQuence]:EXTernal2:DELay:STATe OFF ON 0 1 | 1236 |
| :TRIGger[:SEQuence]:EXTernal2:DELay:STATe? | 1236 |
| :TRIGger[:SEQuence]:EXTernal2:DELay? | 1236 |
| :TRIGger[:SEQuence]:EXTernal2:LEVel | 1235 |
| :TRIGger[:SEQuence]:EXTernal2:LEVel? | 1235 |

List of Commands

| | |
|--|------|
| :TRIGger[:SEquence]:EXTernal2:SLOPe POSitive NEGative | 1236 |
| :TRIGger[:SEquence]:EXTernal2:SLOPe? | 1236 |
| :TRIGger[:SEquence]:FRAMe:ADJust <time> | 1242 |
| :TRIGger[:SEquence]:FRAMe:DELay <time> | 1245 |
| :TRIGger[:SEquence]:FRAMe:DELay:STATe OFF ON 0 1 | 1245 |
| :TRIGger[:SEquence]:FRAMe:DELay:STATe? | 1245 |
| :TRIGger[:SEquence]:FRAMe:DELay? | 1245 |
| :TRIGger[:SEquence]:FRAMe:OFFSet <time> | 1242 |
| :TRIGger[:SEquence]:FRAMe:OFFSet:DISPlay:RESet | 1243 |
| :TRIGger[:SEquence]:FRAMe:OFFSet? | 1242 |
| :TRIGger[:SEquence]:FRAMe:PERiod <time> | 1241 |
| :TRIGger[:SEquence]:FRAMe:PERiod? | 1241 |
| :TRIGger[:SEquence]:FRAMe:SYNC EXTernal1 EXTernal2 RFBurst OFF | 1244 |
| :TRIGger[:SEquence]:FRAMe:SYNC:HOLDoff <time> | 1245 |
| :TRIGger[:SEquence]:FRAMe:SYNC:HOLDoff:STATe OFF ON 0 1 | 1245 |
| :TRIGger[:SEquence]:FRAMe:SYNC:HOLDoff:STATe? | 1245 |
| :TRIGger[:SEquence]:FRAMe:SYNC:HOLDoff? | 1245 |
| :TRIGger[:SEquence]:FRAMe:SYNC? | 1244 |
| :TRIGger[:SEquence]:HOLDoff <time> | 1271 |
| :TRIGger[:SEquence]:HOLDoff:STATe OFF ON 0 1 | 1271 |
| :TRIGger[:SEquence]:HOLDoff:STATe? | 1271 |
| :TRIGger[:SEquence]:HOLDoff? | 1271 |
| :TRIGger[:SEquence]:IDEMod:DELay <time> | 1264 |
| :TRIGger[:SEquence]:IDEMod:DELay:STATe OFF ON 0 1 | 1264 |
| :TRIGger[:SEquence]:IDEMod:DELay:STATe? | 1264 |
| :TRIGger[:SEquence]:IDEMod:DELay? | 1264 |
| :TRIGger[:SEquence]:IDEMod:LEVel <voltage> | 1263 |
| :TRIGger[:SEquence]:IDEMod:LEVel? | 1263 |
| :TRIGger[:SEquence]:IDEMod:SLOPe POSitive NEGative | 1264 |
| :TRIGger[:SEquence]:IDEMod:SLOPe? | 1264 |
| :TRIGger[:SEquence]:IINPut:DELay <time> | 1266 |

List of Commands

| | |
|--|------|
| :TRIGger[:SEQuence]:IINPut:DELay:STATe OFF ON 0 1 | 1266 |
| :TRIGger[:SEQuence]:IINPut:DELay:STATe? | 1266 |
| :TRIGger[:SEQuence]:IINPut:DELay? | 1266 |
| :TRIGger[:SEQuence]:IINPut:LEVel <voltage> | 1266 |
| :TRIGger[:SEQuence]:IINPut:LEVel? | 1266 |
| :TRIGger[:SEQuence]:IINPut:SLOPe POSitive NEGative. | 1266 |
| :TRIGger[:SEQuence]:IINPut:SLOPe? | 1266 |
| :TRIGger[:SEQuence]:IQMag:DELay <time> | 1263 |
| :TRIGger[:SEQuence]:IQMag:DELay:STATe OFF ON 0 1 | 1263 |
| :TRIGger[:SEQuence]:IQMag:DELay:STATe? | 1263 |
| :TRIGger[:SEQuence]:IQMag:DELay? | 1263 |
| :TRIGger[:SEQuence]:IQMag:LEVel <ampl > | 1262 |
| :TRIGger[:SEQuence]:IQMag:LEVel? | 1262 |
| :TRIGger[:SEQuence]:IQMag:SLOPe POSitive NEGative | 1262 |
| :TRIGger[:SEQuence]:IQMag:SLOPe? | 1262 |
| :TRIGger[:SEQuence]:LINE:DELay <time> | 1232 |
| :TRIGger[:SEQuence]:LINE:DELay:STATe OFF ON 0 1 | 1232 |
| :TRIGger[:SEQuence]:LINE:DELay:STATe? | 1232 |
| :TRIGger[:SEQuence]:LINE:DELay? | 1232 |
| :TRIGger[:SEQuence]:LINE:SLOPe POSitive NEGative | 1232 |
| :TRIGger[:SEQuence]:LINE:SLOPe? | 1232 |
| :TRIGger[:SEQuence]:LXI:ALARm:DISable:ALL | 1253 |
| :TRIGger[:SEQuence]:LXI:ALARm:LIST? | 1253 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:CONFigure "alarmEvent", <enable>, <epochSeconds>, <epochFrac- tion>, <period>, <repeat> | 1261 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:ENABled "alarmEvent",ON OFF 1 0 | 1260 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:ENABled? "alarmEvent" | 1261 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:PERiod "alarmEvent",<seconds> | 1259 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:PERiod? "alarmEvent" | 1259 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:REPeat "alarmEvent",<repetitions> | 1260 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:REPeat? "alarmEvent" | 1260 |

List of Commands

| | |
|---|------|
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME:SEConds "alarmEvent",<seconds> | 1257 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME:SEConds? "alarmEvent". | 1257 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue] "alarmEvent",<seconds>, <fractionalSeconds> . | 1256 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:ABSolute "alarmEvent","date","time" | 1254 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:ABSolute? "alarmEvent". | 1254 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:FRAction "alarmEvent",<fractionalSeconds> . . | 1258 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:FRAction? "alarmEvent" | 1258 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:RELative "alarmEvent",<seconds>. | 1259 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:RELative? "alarmEvent" | 1259 |
| :TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]? | 1257 |
| :TRIGger[:SEQuence]:LXI:LAN:ADD "LANEVENT" | 1250 |
| :TRIGger[:SEQuence]:LXI:LAN:COUNT? | 1252 |
| :TRIGger[:SEQuence]:LXI:LAN:DISable:ALL | 1247 |
| :TRIGger[:SEQuence]:LXI:LAN:LIST? | 1247 |
| :TRIGger[:SEQuence]:LXI:LAN:REMOve:ALL | 1251 |
| :TRIGger[:SEQuence]:LXI:LAN:REMOve[:EVENT] "LANEVENT" | 1250 |
| :TRIGger[:SEQuence]:LXI:LAN[:SET]:CONFigure "lanEvent", <enable>, <detection>, <delay>,<filter>,<identi- fier> | 1252 |
| :TRIGger[:SEQuence]:LXI:LAN[:SET]:DELAy "LANEVENT",<time>. | 1248 |
| :TRIGger[:SEQuence]:LXI:LAN[:SET]:DELAy? "lanEvent". | 1249 |
| :TRIGger[:SEQuence]:LXI:LAN[:SET]:DETEction "LANEVENT", HIGH LOW RISE FALL | 1248 |
| :TRIGger[:SEQuence]:LXI:LAN[:SET]:DETEction? "LANEVENT" | 1248 |
| :TRIGger[:SEQuence]:LXI:LAN[:SET]:ENABled "LANEVENT",ON OFF 1 0. | 1249 |
| :TRIGger[:SEQuence]:LXI:LAN[:SET]:ENABled? "LANEVENT" | 1249 |
| :TRIGger[:SEQuence]:LXI:LAN[:SET]:FILTer "LANEVENT","filterString". | 1251 |
| :TRIGger[:SEQuence]:LXI:LAN[:SET]:FILTer? | 1251 |
| :TRIGger[:SEQuence]:LXI:LAN[:SET]:IDENtifier "LANEVENT","identifier". | 1252 |
| :TRIGger[:SEQuence]:LXI:LAN[:SET]:IDENtifier? "LANEVENT" | 1252 |
| :TRIGger[:SEQuence]:QDEMod:DELAy <time> | 1265 |
| :TRIGger[:SEQuence]:QDEMod:DELAy:STATe OFF ON 0 1 | 1265 |
| :TRIGger[:SEQuence]:QDEMod:DELAy:STATe?. | 1265 |

List of Commands

| | |
|--|------|
| :TRIGger[:SEQuence]:QDEMod:DELay? | 1265 |
| :TRIGger[:SEQuence]:QDEMod:LEVel <voltage> | 1264 |
| :TRIGger[:SEQuence]:QDEMod:LEVel? | 1264 |
| :TRIGger[:SEQuence]:QDEMod:SLOPe POSitive NEGative | 1265 |
| :TRIGger[:SEQuence]:QDEMod:SLOPe? | 1265 |
| :TRIGger[:SEQuence]:QINPut:DELay <time> | 1268 |
| :TRIGger[:SEQuence]:QINPut:DELay:STATe OFF ON 0 1 | 1268 |
| :TRIGger[:SEQuence]:QINPut:DELay:STATe? | 1268 |
| :TRIGger[:SEQuence]:QINPut:DELay? | 1268 |
| :TRIGger[:SEQuence]:QINPut:LEVel <voltage> | 1267 |
| :TRIGger[:SEQuence]:QINPut:LEVel? | 1267 |
| :TRIGger[:SEQuence]:QINPut:SLOPe POSitive NEGative | 1267 |
| :TRIGger[:SEQuence]:QINPut:SLOPe? | 1267 |
| :TRIGger[:SEQuence]:RFBurst:DELay <time> | 1239 |
| :TRIGger[:SEQuence]:RFBurst:DELay:STATe OFF ON 0 1 | 1239 |
| :TRIGger[:SEQuence]:RFBurst:DELay:STATe? | 1239 |
| :TRIGger[:SEQuence]:RFBurst:DELay? | 1239 |
| :TRIGger[:SEQuence]:RFBurst:LEVel:ABSolute <ampl> | 1238 |
| :TRIGger[:SEQuence]:RFBurst:LEVel:ABSolute? | 1238 |
| :TRIGger[:SEQuence]:RFBurst:LEVel:RELative <ampl> | 1238 |
| :TRIGger[:SEQuence]:RFBurst:LEVel:RELative? | 1238 |
| :TRIGger[:SEQuence]:RFBurst:LEVel:TYPE ABSolute RELative | 1238 |
| :TRIGger[:SEQuence]:RFBurst:LEVel:TYPE? | 1238 |
| :TRIGger[:SEQuence]:RFBurst:SLOPe POSitive NEGative | 1238 |
| :TRIGger[:SEQuence]:RFBurst:SLOPe? | 1238 |
| :TRIGger[:SEQuence]:VIDeo:DELay <time> | 1231 |
| :TRIGger[:SEQuence]:VIDeo:DELay:STATe OFF ON 0 1 | 1231 |
| :TRIGger[:SEQuence]:VIDeo:DELay:STATe? | 1231 |
| :TRIGger[:SEQuence]:VIDeo:DELay? | 1231 |
| :TRIGger[:SEQuence]:VIDeo:LEVel <ampl> | 1230 |
| :TRIGger[:SEQuence]:VIDeo:LEVel? | 1230 |

List of Commands

| | |
|---|------|
| :TRIGger[:SEQuence]:VIDeo:SLOPe POSitive NEGative | 1230 |
| :TRIGger[:SEQuence]:VIDeo:SLOPe? | 1230 |
| :TRIGger TRIGger1 TRIGger2[:SEQuence]:OUTPut HSWP MEASuring MAIN GATE GTRigger OEVen. | 1094 |
| :TRIGger TRIGger1 TRIGger2[:SEQuence]:OUTPut:POLarity POSitive NEGative | 1094 |
| :TRIGger TRIGger1 TRIGger2[:SEQuence]:OUTPut:POLarity? | 1094 |
| :TRIGger TRIGger1 TRIGger2[:SEQuence]:OUTPut? | 1094 |
| :TRIGger1 TRIGger[:SEQuence]:LXI:ALARm:COUNT? | 1261 |
| :UNIT:ACPower:POWER:PSD DBMHZ DBMMHZ | 399 |
| :UNIT:ACPower:POWER:PSD? | 399 |
| :UNIT:CHPower:POWER:PSD DBMHZ DBMMHZ | 322 |
| :UNIT:CHPower:POWER:PSD? | 322 |
| [:SENSe]:ACPower:AVERage:COUNT <integer>. | 373 |
| [:SENSe]:ACPower:AVERage:COUNT? | 373 |
| [:SENSe]:ACPower:AVERage:TCONtrol EXPonential REPeat | 374 |
| [:SENSe]:ACPower:AVERage:TCONtrol? | 374 |
| [:SENSe]:ACPower:AVERage[:STATe] OFF ON 0 1 | 373 |
| [:SENSe]:ACPower:AVERage[:STATe]? | 373 |
| [:SENSe]:ACPower:BANDwidth:SHAPE GAUSSian FLATtop | 359 |
| [:SENSe]:ACPower:BANDwidth:SHAPE? | 359 |
| [:SENSe]:ACPower:BANDwidth:TYPE DB3 DB6 | 360 |
| [:SENSe]:ACPower:BANDwidth:TYPE? | 360 |
| [:SENSe]:ACPower:BANDwidth:VIDeo <freq> | 358 |
| [:SENSe]:ACPower:BANDwidth:VIDeo:AUTO OFF ON 0 1 | 358 |
| [:SENSe]:ACPower:BANDwidth:VIDeo:AUTO? | 358 |
| [:SENSe]:ACPower:BANDwidth:VIDeo?. | 358 |
| [:SENSe]:ACPower:BANDwidth[:RESolution] <bandwidth> | 357 |
| [:SENSe]:ACPower:BANDwidth[:RESolution]:AUTO ON OFF 1 0 | 357 |
| [:SENSe]:ACPower:BANDwidth[:RESolution]:AUTO? | 357 |
| [:SENSe]:ACPower:BANDwidth[:RESolution]? | 357 |
| [:SENSe]:ACPower:CARRier[1] 2:AUTO[:STATe] OFF ON 0 1 | 378 |
| [:SENSe]:ACPower:CARRier[1] 2:AUTO[:STATe]? | 378 |

List of Commands

| | |
|---|-----|
| [[:SENSe]:ACPower:CARRier[1]]2:COUNT <integer> | 374 |
| [[:SENSe]:ACPower:CARRier[1]]2:COUNT? | 374 |
| [[:SENSe]:ACPower:CARRier[1]]2:CPSD <real> | 378 |
| [[:SENSe]:ACPower:CARRier[1]]2:CPSD? | 378 |
| [[:SENSe]:ACPower:CARRier[1]]2:LIST:BANDwidth[:INTegration] <freq>, | 382 |
| [[:SENSe]:ACPower:CARRier[1]]2:LIST:BANDwidth[:INTegration]? | 382 |
| [[:SENSe]:ACPower:CARRier[1]]2:LIST:COUple OFF ON 0 1, | 380 |
| [[:SENSe]:ACPower:CARRier[1]]2:LIST:COUple? | 380 |
| [[:SENSe]:ACPower:CARRier[1]]2:LIST:FILTer:ALPHa <real>, | 384 |
| [[:SENSe]:ACPower:CARRier[1]]2:LIST:FILTer:ALPHa? | 384 |
| [[:SENSe]:ACPower:CARRier[1]]2:LIST:METHod IBW RRC, | 383 |
| [[:SENSe]:ACPower:CARRier[1]]2:LIST:METHod? | 383 |
| [[:SENSe]:ACPower:CARRier[1]]2:LIST:PPResent YES NO, | 381 |
| [[:SENSe]:ACPower:CARRier[1]]2:LIST:PPResent? | 381 |
| [[:SENSe]:ACPower:CARRier[1]]2:LIST:WIDTh <bandwidth>, | 381 |
| [[:SENSe]:ACPower:CARRier[1]]2:LIST:WIDTh? | 381 |
| [[:SENSe]:ACPower:CARRier[1]]2:RCARrier <integer> | 375 |
| [[:SENSe]:ACPower:CARRier[1]]2:RCARrier:AUTO OFF ON 0 1 | 375 |
| [[:SENSe]:ACPower:CARRier[1]]2:RCARrier:AUTO? | 375 |
| [[:SENSe]:ACPower:CARRier[1]]2:RCARrier? | 375 |
| [[:SENSe]:ACPower:CARRier[1]]2:RCFRequency <freq> | 376 |
| [[:SENSe]:ACPower:CARRier[1]]2:RCFRequency:AUTO OFF ON 0 1 | 376 |
| [[:SENSe]:ACPower:CARRier[1]]2:RCFRequency:AUTO? | 376 |
| [[:SENSe]:ACPower:CARRier[1]]2:RCFRequency? | 376 |
| [[:SENSe]:ACPower:CARRier[1]]2[:POWer] <real> | 378 |
| [[:SENSe]:ACPower:CARRier[1]]2[:POWer]? | 378 |
| [[:SENSe]:ACPower:CORRection:NOISe[:AUTO] OFF ON 0 1 | 402 |
| [[:SENSe]:ACPower:CORRection:NOISe[:AUTO]? | 402 |
| [[:SENSe]:ACPower:DETEctor:AUTO ON OFF 1 0 | 421 |
| [[:SENSe]:ACPower:DETEctor:AUTO? | 421 |
| [[:SENSe]:ACPower:DETEctor[:FUNction] AVERAge NEGative NORMAl POSitive SAMPle | 420 |

List of Commands

| | |
|---|-----|
| [[:SENSe]:ACPower:DETEctor[:FUNction]? | 420 |
| [[:SENSe]:ACPower:FILTer[:RRC]:ALPHa <real> | 401 |
| [[:SENSe]:ACPower:FILTer[:RRC]:ALPHa? | 401 |
| [[:SENSe]:ACPower:FILTer[:RRC][:STATe] OFF ON 0 1 | 400 |
| [[:SENSe]:ACPower:FILTer[:RRC][:STATe]? | 400 |
| [[:SENSe]:ACPower:FREQuency:SPAN <freq> | 413 |
| [[:SENSe]:ACPower:FREQuency:SPAN:FULL | 414 |
| [[:SENSe]:ACPower:FREQuency:SPAN:PREVious | 414 |
| [[:SENSe]:ACPower:FREQuency:SPAN? | 413 |
| [[:SENSe]:ACPower:FREQuency:SYNThesis:AUTO[:STATe] OFF ON 0 1 | 396 |
| [[:SENSe]:ACPower:FREQuency:SYNThesis:AUTO[:STATe]? | 396 |
| [[:SENSe]:ACPower:FREQuency:SYNThesis[:STATe] 1 2 3 | 397 |
| [[:SENSe]:ACPower:FREQuency:SYNThesis[:STATe]? | 397 |
| [[:SENSe]:ACPower:METHod IBW IBWRange FAST RBW | 398 |
| [[:SENSe]:ACPower:METHod? | 398 |
| [[:SENSe]:ACPower:OFFSet[1] 2:LIST:ABSolute <real>, <real>, <real>, <real>, <real>, <real>. | 391 |
| [[:SENSe]:ACPower:OFFSet[1] 2:LIST:ABSolute? | 391 |
| [[:SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:RESolution <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth> | 388 |
| [[:SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:RESolution:AUTO ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0 | 388 |
| [[:SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:RESolution:AUTO? | 388 |
| [[:SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:RESolution? | 388 |
| [[:SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:SHAPE GAUSSian FLATtop, GAUSSian FLATtop, GAUSSian FLATtop, GAUSSian FLATtop, GAUSSian FLATtop, GAUSSian FLATtop | 390 |
| [[:SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:SHAPE? | 390 |
| [[:SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:TYPE DB3 DB6, DB3 DB6, DB3 DB6, DB3 DB6, DB3 DB6, DB3 DB6 | 391 |
| [[:SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:TYPE? | 391 |
| [[:SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:VIDeo <freq>, <freq>, <freq>, <freq>, <freq>, <freq> | 389 |
| [[:SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:VIDeo:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 | 389 |
| [[:SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth:VIDeo:AUTO? | 389 |

List of Commands

| | |
|--|-----|
| [[:SENSe]:ACPower:OFFSet[1]]2:LIST:BANDwidth:VIDeo? | 389 |
| [[:SENSe]:ACPower:OFFSet[1]]2:LIST:BANDwidth[:INTegration] <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth> | 387 |
| [[:SENSe]:ACPower:OFFSet[1]]2:LIST:BANDwidth[:INTegration]? | 387 |
| [[:SENSe]:ACPower:OFFSet[1]]2:LIST:RCARrier <real>, <real>, <real>, <real>, <real>, <real> | 394 |
| [[:SENSe]:ACPower:OFFSet[1]]2:LIST:RCARrier? | 394 |
| [[:SENSe]:ACPower:OFFSet[1]]2:LIST:RPSDensity <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl> | 395 |
| [[:SENSe]:ACPower:OFFSet[1]]2:LIST:RPSDensity? | 395 |
| [[:SENSe]:ACPower:OFFSet[1]]2:LIST:STATe OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 | 385 |
| [[:SENSe]:ACPower:OFFSet[1]]2:LIST:STATe? | 385 |
| [[:SENSe]:ACPower:OFFSet[1]]2:LIST:TEST ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative | 393 |
| [[:SENSe]:ACPower:OFFSet[1]]2:LIST:TEST? | 393 |
| [[:SENSe]:ACPower:OFFSet[1]]2:LIST[:FREQuency] <freq>, <freq>, <freq>, <freq>, <freq>, <freq> | 385 |
| [[:SENSe]:ACPower:OFFSet[1]]2:LIST[:FREQuency]? | 385 |
| [[:SENSe]:ACPower:SWEEp:POINts <integer> | 418 |
| [[:SENSe]:ACPower:SWEEp:POINts? | 418 |
| [[:SENSe]:ACPower:SWEEp:TIME <time> | 415 |
| [[:SENSe]:ACPower:SWEEp:TIME:AUTO OFF ON 0 1 | 415 |
| [[:SENSe]:ACPower:SWEEp:TIME:AUTO:RULEs NORMAl ACCuracy | 417 |
| [[:SENSe]:ACPower:SWEEp:TIME:AUTO:RULEs? | 417 |
| [[:SENSe]:ACPower:SWEEp:TIME:AUTO? | 415 |
| [[:SENSe]:ACPower:SWEEp:TIME? | 415 |
| [[:SENSe]:ACPower:TYPE TPRef]PSDRef | 398 |
| [[:SENSe]:ACPower:TYPE? | 398 |
| [[:SENSe]:CDPower:ALPHA <real> | 715 |
| [[:SENSe]:CDPower:ALPHA? | 715 |
| [[:SENSe]:CDPower:CAPTure:TIME <integer> | 713 |
| [[:SENSe]:CDPower:CAPTure:TIME? | 713 |
| [[:SENSe]:CDPower:CRATe <freq> | 715 |

List of Commands

| | |
|--|-----|
| [[:SENSe]:CDPower:CRATe? | 715 |
| [[:SENSe]:CDPower:IF:GAIN:AUTO[:STATe] OFF ON 0 1 | 717 |
| [[:SENSe]:CDPower:IF:GAIN:AUTO[:STATe]? | 717 |
| [[:SENSe]:CDPower:IF:GAIN[:STATe] ON OFF 1 0 | 717 |
| [[:SENSe]:CDPower:IF:GAIN[:STATe]? | 717 |
| [[:SENSe]:CDPower:QOF 0 1 2 3 | 716 |
| [[:SENSe]:CDPower:QOF? | 716 |
| [[:SENSe]:CDPower:SPECtrum INVert NORMAL | 713 |
| [[:SENSe]:CDPower:SPECtrum? | 713 |
| [[:SENSe]:CDPower:SYNC:LCMask <integer> | 712 |
| [[:SENSe]:CDPower:SYNC:LCMask? | 712 |
| [[:SENSe]:CDPower:SYNC[:BTS] PICH DPICH | 712 |
| [[:SENSe]:CDPower:SYNC[:BTS]? | 712 |
| [[:SENSe]:CHPower:AVERage:COUNT <integer> | 316 |
| [[:SENSe]:CHPower:AVERage:COUNT? | 316 |
| [[:SENSe]:CHPower:AVERage:TCONtrol EXPonential REPeat | 317 |
| [[:SENSe]:CHPower:AVERage:TCONtrol? | 317 |
| [[:SENSe]:CHPower:AVERage[:STATe] ON OFF 1 0 | 316 |
| [[:SENSe]:CHPower:AVERage[:STATe]? | 316 |
| [[:SENSe]:CHPower:BANDwidth:INTegration <bandwidth> | 318 |
| [[:SENSe]:CHPower:BANDwidth:INTegration? | 318 |
| [[:SENSe]:CHPower:BANDwidth:SHAPE GAUSSian FLATtop | 305 |
| [[:SENSe]:CHPower:BANDwidth:SHAPE? | 305 |
| [[:SENSe]:CHPower:BANDwidth:VIDeo <bandwidth> | 303 |
| [[:SENSe]:CHPower:BANDwidth:VIDeo:AUTO ON OFF 1 0 | 303 |
| [[:SENSe]:CHPower:BANDwidth:VIDeo:AUTO? | 303 |
| [[:SENSe]:CHPower:BANDwidth:VIDeo? | 303 |
| [[:SENSe]:CHPower:BANDwidth[:RESolution] <bandwidth> | 302 |
| [[:SENSe]:CHPower:BANDwidth[:RESolution]:AUTO ON OFF 1 0 | 302 |
| [[:SENSe]:CHPower:BANDwidth[:RESolution]:AUTO? | 302 |
| [[:SENSe]:CHPower:BANDwidth[:RESolution]? | 302 |

List of Commands

| | |
|---|------|
| [[:SENSe]:CHPower:DETEctor:AUTO ON OFF]1 0 | 339 |
| [[:SENSe]:CHPower:DETEctor:AUTO? | 339 |
| [[:SENSe]:CHPower:DETEctor[:FUNction] NORMal AVERage POSitive SAMPlE NEGative | 338 |
| [[:SENSe]:CHPower:DETEctor[:FUNction]? | 338 |
| [[:SENSe]:CHPower:FILTer[:RRC]:ALPHa <real> | 321 |
| [[:SENSe]:CHPower:FILTer[:RRC]:ALPHa? | 321 |
| [[:SENSe]:CHPower:FILTer[:RRC]:BANDwidth <real> | 320 |
| [[:SENSe]:CHPower:FILTer[:RRC]:BANDwidth? | 320 |
| [[:SENSe]:CHPower:FILTer[:RRC][:STATe] OFF ON]0 1 | 320 |
| [[:SENSe]:CHPower:FILTer[:RRC][:STATe]? | 320 |
| [[:SENSe]:CHPower:FREQuency:SPAN <freq> | 331 |
| [[:SENSe]:CHPower:FREQuency:SPAN:FULL | 332 |
| [[:SENSe]:CHPower:FREQuency:SPAN:PREVious | 332 |
| [[:SENSe]:CHPower:FREQuency:SPAN? | 331 |
| [[:SENSe]:CHPower:IF:GAIN:AUTO[:STATe] ON OFF]1 0 | 319 |
| [[:SENSe]:CHPower:IF:GAIN:AUTO[:STATe]? | 319 |
| [[:SENSe]:CHPower:IF:GAIN[:STATe] ON OFF]1 0 | 319 |
| [[:SENSe]:CHPower:IF:GAIN[:STATe]? | 319 |
| [[:SENSe]:CHPower:SWEEp:POINts <integer> | 335 |
| [[:SENSe]:CHPower:SWEEp:POINts? | 335 |
| [[:SENSe]:CHPower:SWEEp:TIME <time> | 333 |
| [[:SENSe]:CHPower:SWEEp:TIME:AUTO OFF ON]0 1 | 333 |
| [[:SENSe]:CHPower:SWEEp:TIME:AUTO:RULes NORMal ACCuracy | 334 |
| [[:SENSe]:CHPower:SWEEp:TIME:AUTO:RULes? | 334 |
| [[:SENSe]:CHPower:SWEEp:TIME:AUTO? | 333 |
| [[:SENSe]:CHPower:SWEEp:TIME? | 333 |
| [[:SENSe]:CORRection:BTS[:RF]:GAIN <rel_ampl> | 1085 |
| [[:SENSe]:CORRection:BTS[:RF]:GAIN? | 1085 |
| [[:SENSe]:CORRection:IMPedance[:INPut][:MAGNitude] 50 75 | 1066 |
| [[:SENSe]:CORRection:IMPedance[:INPut][:MAGNitude]? | 1066 |
| [[:SENSe]:CORRection:IQ:I:GAIN <rel_ampl> | 1085 |

List of Commands

| | |
|---|------|
| [[:SENSe]:CORRection:IQ:I:GAIN? | 1085 |
| [[:SENSe]:CORRection:IQ:I:Q:ATTenuation <rel_ampl> | 1078 |
| [[:SENSe]:CORRection:IQ:I:Q:ATTenuation:RATio <real> | 1078 |
| [[:SENSe]:CORRection:IQ:I:Q:ATTenuation:RATio? | 1078 |
| [[:SENSe]:CORRection:IQ:I:Q:ATTenuation? | 1078 |
| [[:SENSe]:CORRection:IQ:Q:GAIN <rel_ampl> | 1086 |
| [[:SENSe]:CORRection:IQ:Q:GAIN? | 1086 |
| [[:SENSe]:CORRection:IQ:Q:SKEW <seconds> | 1077 |
| [[:SENSe]:CORRection:IQ:Q:SKEW? | 1077 |
| [[:SENSe]:CORRection:IQ[:I]:SKEW <seconds> | 1073 |
| [[:SENSe]:CORRection:IQ[:I]:SKEW? | 1073 |
| [[:SENSe]:CORRection:MS[:RF]:GAIN <rel_ampl> | 1084 |
| [[:SENSe]:CORRection:MS[:RF]:GAIN? | 1084 |
| [[:SENSe]:CORRection:SA[:RF]:GAIN <rel_ampl> | 1084 |
| [[:SENSe]:CORRection:SA[:RF]:GAIN? | 1084 |
| [[:SENSe]:EVMQpsk:AVERAge:COUNt <integer> | 885 |
| [[:SENSe]:EVMQpsk:AVERAge:COUNt? | 885 |
| [[:SENSe]:EVMQpsk:AVERAge:TCONtrol EXPonential REPeat | 886 |
| [[:SENSe]:EVMQpsk:AVERAge:TCONtrol? | 886 |
| [[:SENSe]:EVMQpsk:AVERAge[:STATe] OFF ON 0 1 | 885 |
| [[:SENSe]:EVMQpsk:AVERAge[:STATe]? | 885 |
| [[:SENSe]:EVMQpsk:BANDwidth:SHAPe GAUSSian FLATtop | 870 |
| [[:SENSe]:EVMQpsk:BANDwidth:SHAPe? | 870 |
| [[:SENSe]:EVMQpsk:BANDwidth[:RESolution] <freq> | 869 |
| [[:SENSe]:EVMQpsk:BANDwidth[:RESolution]? | 869 |
| [[:SENSe]:EVMQpsk:CRATe <freq> | 892 |
| [[:SENSe]:EVMQpsk:CRATe? | 892 |
| [[:SENSe]:EVMQpsk:FILTer:ALPHa <real> | 891 |
| [[:SENSe]:EVMQpsk:FILTer:ALPHa? | 891 |
| [[:SENSe]:EVMQpsk:FILTer[:RRC][:STATe] OFF ON 0 1 | 891 |
| [[:SENSe]:EVMQpsk:FILTer[:RRC][:STATe]? | 891 |

List of Commands

| | |
|--|------|
| [:SENSe]:EVMQpsk:IF:GAIN:AUTO[:STATe] ON OFF 1 0 | 893 |
| [:SENSe]:EVMQpsk:IF:GAIN:AUTO[:STATe]? | 893 |
| [:SENSe]:EVMQpsk:IF:GAIN[:STATe] ON OFF 1 0 | 893 |
| [:SENSe]:EVMQpsk:IF:GAIN[:STATe]? | 893 |
| [:SENSe]:EVMQpsk:MEAS:LENGth < integar > | 889 |
| [:SENSe]:EVMQpsk:MEAS:LENGth? | 889 |
| [:SENSe]:EVMQpsk:MEAS:OFFSet <integar> | 888 |
| [:SENSe]:EVMQpsk:MEAS:OFFSet? | 888 |
| [:SENSe]:EVMQpsk:SPECTrum NORMAl INVert | 890 |
| [:SENSe]:EVMQpsk:SPECTrum? | 890 |
| [:SENSe]:EVMQpsk:SWEep:POINts <integer> | 886 |
| [:SENSe]:EVMQpsk:SWEep:POINts? | 886 |
| [:SENSe]:FEED RF AIQ IQ IONLy QONLy INDependent AREFERENCE | 1065 |
| [:SENSe]:FEED:AREFERENCE REF50 REF4800 COMB OFF | 1081 |
| [:SENSe]:FEED:AREFERENCE? | 1081 |
| [:SENSe]:FEED:DATA INPut STORed RECOred | 1087 |
| [:SENSe]:FEED:DATA:STORe | 1089 |
| [:SENSe]:FEED:DATA? | 1087 |
| [:SENSe]:FEED:IQ:TYPE IQ IONLy QONLy INDependent | 1070 |
| [:SENSe]:FEED:IQ:TYPE? | 1070 |
| [:SENSe]:FEED? | 1065 |
| [:SENSe]:FREQuency:CENTer <freq> | 1059 |
| [:SENSe]:FREQuency:CENTer:STEP:AUTO ON OFF 1 0 | 1061 |
| [:SENSe]:FREQuency:CENTer:STEP:AUTO? | 1061 |
| [:SENSe]:FREQuency:CENTer:STEP[:INCRement] <freq> | 1061 |
| [:SENSe]:FREQuency:CENTer:STEP[:INCRement]? | 1061 |
| [:SENSe]:FREQuency:CENTer? | 1059 |
| [:SENSe]:FREQuency:IQ:CENTer <freq> | 1060 |
| [:SENSe]:FREQuency:IQ:CENTer? | 1060 |
| [:SENSe]:FREQuency:RF:CENTer <freq> | 1059 |
| [:SENSe]:FREQuency:RF:CENTer? | 1059 |

List of Commands

| | |
|---|-----|
| [::SENSe]:MONitor:AVERAge:COUNT <integer> | 951 |
| [::SENSe]:MONitor:AVERAge:COUNT? | 951 |
| [::SENSe]:MONitor:AVERAge:TCONtrol EXPonential REPeat | 952 |
| [::SENSe]:MONitor:AVERAge:TCONtrol? | 952 |
| [::SENSe]:MONitor:AVERAge[:STATe] OFF ON 0 1 | 951 |
| [::SENSe]:MONitor:AVERAge[:STATe]? | 951 |
| [::SENSe]:MONitor:BANDwidth:VIDeo <bandwidth> | 934 |
| [::SENSe]:MONitor:BANDwidth:VIDeo:AUTO ON OFF 1 0 | 934 |
| [::SENSe]:MONitor:BANDwidth:VIDeo:AUTO? | 934 |
| [::SENSe]:MONitor:BANDwidth:VIDeo:RATio <real> | |
| [::SENSe]:MONitor:BANDwidth:VIDeo:RATio? | 935 |
| [::SENSe]:MONitor:BANDwidth:VIDeo:RATio:AUTO OFF ON 0 1 | 935 |
| [::SENSe]:MONitor:BANDwidth:VIDeo:RATio:AUTO? | 935 |
| [::SENSe]:MONitor:BANDwidth:VIDeo? | 934 |
| [::SENSe]:MONitor:BANDwidth[:RESolution] <freq> | 933 |
| [::SENSe]:MONitor:BANDwidth[:RESolution]:AUTO OFF ON 0 1 | 933 |
| [::SENSe]:MONitor:BANDwidth[:RESolution]:AUTO? | 933 |
| [::SENSe]:MONitor:BANDwidth[:RESolution]? | 933 |
| [::SENSe]:MONitor:DETEctor:AUTO ON OFF 1 0 | 968 |
| [::SENSe]:MONitor:DETEctor:AUTO? | 968 |
| [::SENSe]:MONitor:DETEctor:TRACe AVERAge NEGative NORMAl POSitive SAMPLE | 967 |
| [::SENSe]:MONitor:DETEctor:TRACe? | 967 |
| [::SENSe]:MONitor:FREQUency:SPAN <freq> | 961 |
| [::SENSe]:MONitor:FREQUency:SPAN:BANDwidth[:RESolution]:RATio <integer> | 935 |
| [::SENSe]:MONitor:FREQUency:SPAN:BANDwidth[:RESolution]:RATio:AUTO OFF ON 0 1 | 935 |
| [::SENSe]:MONitor:FREQUency:SPAN:BANDwidth[:RESolution]:RATio:AUTO? | 935 |
| [::SENSe]:MONitor:FREQUency:SPAN:BANDwidth[:RESolution]:RATio? | 935 |
| [::SENSe]:MONitor:FREQUency:SPAN:FULL | 962 |
| [::SENSe]:MONitor:FREQUency:SPAN:PREVious | 962 |
| [::SENSe]:MONitor:FREQUency:SPAN? | 961 |
| [::SENSe]:MONitor:SWEep:POINts <integer> | 964 |

List of Commands

| | |
|---|-----|
| [[:SENSe]:MONitor:SWEep:POINts? | 964 |
| [[:SENSe]:MONitor:SWEep:TIME <time> | 963 |
| [[:SENSe]:MONitor:SWEep:TIME:AUTO OFF ON 0 1 | 963 |
| [[:SENSe]:MONitor:SWEep:TIME:AUTO? | 963 |
| [[:SENSe]:MONitor:SWEep:TIME? | 963 |
| [[:SENSe]:OBWidth:BANDwidth:SHApe GAUSsian FLATtop | 590 |
| [[:SENSe]:OBWidth:BANDwidth:SHApe? | 590 |
| [[:SENSe]:OBWidth:BANDwidth:VIDeo <bandwidth> | 588 |
| [[:SENSe]:OBWidth:BANDwidth:VIDeo:AUTO ON OFF 1 0 | 588 |
| [[:SENSe]:OBWidth:BANDwidth:VIDeo:AUTO? | 588 |
| [[:SENSe]:OBWidth:BANDwidth:VIDeo? | 588 |
| [[:SENSe]:OBWidth:BANDwidth[:RESolution] <bandwidth> | 587 |
| [[:SENSe]:OBWidth:BANDwidth[:RESolution]:AUTO ON OFF 1 0 | 587 |
| [[:SENSe]:OBWidth:BANDwidth[:RESolution]:AUTO? | 587 |
| [[:SENSe]:OBWidth:BANDwidth[:RESolution]? | 587 |
| [[:SENSe]:OBWidth:DETEctor:AUTO ON OFF 1 0 | 617 |
| [[:SENSe]:OBWidth:DETEctor:AUTO? | 617 |
| [[:SENSe]:OBWidth:DETEctor[:FUNction] NORMal AVERAge POSitive SAMPle NEGative | 616 |
| [[:SENSe]:OBWidth:DETEctor[:FUNction]? | 616 |
| [[:SENSe]:OBWidth:FREQuency:SPAN <freq> | 609 |
| [[:SENSe]:OBWidth:FREQuency:SPAN:FULL | 610 |
| [[:SENSe]:OBWidth:FREQuency:SPAN:PREVious | 610 |
| [[:SENSe]:OBWidth:FREQuency:SPAN? | 609 |
| [[:SENSe]:OBWidth:SWEep:POINts <integer> | 613 |
| [[:SENSe]:OBWidth:SWEep:POINts? | 613 |
| [[:SENSe]:OBWidth:SWEep:TIME <time> | 611 |
| [[:SENSe]:OBWidth:SWEep:TIME:AUTO OFF ON 0 1 | 611 |
| [[:SENSe]:OBWidth:SWEep:TIME:AUTO:RULEs NORMal ACCuracy | 612 |
| [[:SENSe]:OBWidth:SWEep:TIME:AUTO:RULEs? | 612 |
| [[:SENSe]:OBWidth:SWEep:TIME:AUTO? | 611 |
| [[:SENSe]:OBWidth:SWEep:TIME? | 611 |

List of Commands

| | |
|---|------|
| [[:SENSe]:POWer:IQ:Q:RANGe[:UPPer] <ampl> | 1047 |
| [[:SENSe]:POWer:IQ:Q:RANGe[:UPPer]? | 1047 |
| [[:SENSe]:POWer:IQ:RANGe:AUTO OFF ON 0 1 | 1044 |
| [[:SENSe]:POWer:IQ:RANGe:AUTO? | 1044 |
| [[:SENSe]:POWer:IQ[:I]:RANGe[:UPPer] <ampl> | 1045 |
| [[:SENSe]:POWer:IQ[:I]:RANGe[:UPPer]? | 1045 |
| [[:SENSe]:POWer[:RF]:ATTenuation <rel_ampl> | 1037 |
| [[:SENSe]:POWer[:RF]:ATTenuation:AUTO OFF ON 0 1 | 1037 |
| [[:SENSe]:POWer[:RF]:ATTenuation:AUTO? | 1037 |
| [[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB 2 dB | 1042 |
| [[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]? | 1042 |
| [[:SENSe]:POWer[:RF]:ATTenuation? | 1037 |
| [[:SENSe]:POWer[:RF]:EATTenuation <rel_ampl> | 1040 |
| [[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF ON 0 1 | 1038 |
| [[:SENSe]:POWer[:RF]:EATTenuation:STATe? | 1038 |
| [[:SENSe]:POWer[:RF]:EATTenuation? | 1040 |
| [[:SENSe]:POWer[:RF]:GAIN:BAND LOW FULL | 1052 |
| [[:SENSe]:POWer[:RF]:GAIN:BAND? | 1052 |
| [[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF ON 0 1 | 1051 |
| [[:SENSe]:POWer[:RF]:GAIN[:STATe]? | 1051 |
| [[:SENSe]:POWer[:RF]:MIXer:RANGe[:UPPer] <real> | 1043 |
| [[:SENSe]:POWer[:RF]:MIXer:RANGe[:UPPer]? | 1043 |
| [[:SENSe]:POWer[:RF]:PADJust <freq> | 1050 |
| [[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE MMWave EXTernal | 1051 |
| [[:SENSe]:POWer[:RF]:PADJust:PRESelector? | 1051 |
| [[:SENSe]:POWer[:RF]:PADJust? | 1050 |
| [[:SENSe]:POWer[:RF]:PCENter | 1049 |
| [[:SENSe]:POWer[:RF]:RANGe:AUTO ON OFF 1 0 | 1042 |
| [[:SENSe]:POWer[:RF]:RANGe:AUTO? | 1042 |
| [[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE | 1040 |
| [[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF ELECTrical COMBined | 1041 |

List of Commands

| | |
|--|------|
| [[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation? | 1041 |
| [[:SENSe]:PSTatistic: SLTView[:STATe]? | 663 |
| [[:SENSe]:PSTatistic:BANDwidth <freq> | 629 |
| [[:SENSe]:PSTatistic:BANDwidth? | 629 |
| [[:SENSe]:PSTatistic:COUNts <integer> | 641 |
| [[:SENSe]:PSTatistic:COUNts? | 641 |
| [[:SENSe]:PSTatistic:GAUSsian[:STATe] OFF ON 0 1 | 658 |
| [[:SENSe]:PSTatistic:GAUSsian[:STATe]? | 658 |
| [[:SENSe]:PSTatistic:IF:GAIN:AUTO[:STATe] ON OFF 1 0 | 645 |
| [[:SENSe]:PSTatistic:IF:GAIN:AUTO[:STATe]? | 645 |
| [[:SENSe]:PSTatistic:IF:GAIN[:STATe] ON OFF 1 0 | 645 |
| [[:SENSe]:PSTatistic:IF:GAIN[:STATe]? | 645 |
| [[:SENSe]:PSTatistic:RTRace[:STATe] OFF ON 0 1 | 657 |
| [[:SENSe]:PSTatistic:RTRace[:STATe]? | 657 |
| [[:SENSe]:PSTatistic:SLTView[:STATe] OFF ON 0 1 | 663 |
| [[:SENSe]:PSTatistic:SWEEp:CYCLes <integer> | 642 |
| [[:SENSe]:PSTatistic:SWEEp:CYCLes? | 642 |
| [[:SENSe]:PSTatistic:SWEEp:OFFSet <time> | 644 |
| [[:SENSe]:PSTatistic:SWEEp:OFFSet? | 644 |
| [[:SENSe]:PSTatistic:SWEEp:TIME <time> | 642 |
| [[:SENSe]:PSTatistic:SWEEp:TIME <time> | 643 |
| [[:SENSe]:PSTatistic:SWEEp:TIME? | 642 |
| [[:SENSe]:PSTatistic:SWEEp:TIME? | 643 |
| [[:SENSe]:RADio:STANdard:DEVice BTS MS | 1145 |
| [[:SENSe]:RADio:STANdard:DEVice? | 1145 |
| [[:SENSe]:RECOrding:ABORt | 1089 |
| [[:SENSe]:RECOrding:INITiate[:IMMediate]. | 1089 |
| [[:SENSe]:RECOrding:LENGth <real>,SECOnds RECOrds POINts | 1090 |
| [[:SENSe]:RECOrding:LENGth:STATe MAX MANual | 1090 |
| [[:SENSe]:RECOrding:LENGth:STATe? | 1090 |
| [[:SENSe]:RECOrding:LENGth:UNIT? | 1090 |

List of Commands

| | |
|---|------|
| [[:SENSe]:RECORDing:LENGth:VALue? | 1090 |
| [[:SENSe]:RECORDing:PLAYback:FREQuency:CENTer? | 1202 |
| [[:SENSe]:RECORDing:PLAYback:FREQuency:SPAN:MAX? | 1202 |
| [[:SENSe]:RECORDing:PLAYback:FREQuency:SPAN? | 1202 |
| [[:SENSe]:RECORDing:PLAYback:LENGth? | 1202 |
| [[:SENSe]:RECORDing:PLAYback:SRATE? | 1202 |
| [[:SENSe]:RECORDing:PLAYback:ZOOM? | 1203 |
| [[:SENSe]:RHO:ALPHa <real> | 812 |
| [[:SENSe]:RHO:ALPHa? | 812 |
| [[:SENSe]:RHO:AVERAge:COUNT <integer> | 802 |
| [[:SENSe]:RHO:AVERAge:COUNT? | 802 |
| [[:SENSe]:RHO:AVERAge:TCONtrol EXPonential REPEat | 803 |
| [[:SENSe]:RHO:AVERAge:TCONtrol? | 803 |
| [[:SENSe]:RHO:AVERAge[:STATe] OFF ON 0 1 | 802 |
| [[:SENSe]:RHO:AVERAge[:STATe]? | 802 |
| [[:SENSe]:RHO:CRATe <freq> | 812 |
| [[:SENSe]:RHO:CRATe? | 812 |
| [[:SENSe]:RHO:IF:GAIN:AUTO[:STATe] OFF ON 0 1 | 814 |
| [[:SENSe]:RHO:IF:GAIN:AUTO[:STATe]? | 814 |
| [[:SENSe]:RHO:IF:GAIN[:STATe] ON OFF 1 0 | 814 |
| [[:SENSe]:RHO:IF:GAIN[:STATe]? | 814 |
| [[:SENSe]:RHO:MCEStimator OFF ON 0 1 | 813 |
| [[:SENSe]:RHO:MCEStimator? | 813 |
| [[:SENSe]:RHO:RCONfig CDMA2000 IS95 | 809 |
| [[:SENSe]:RHO:RCONfig? | 809 |
| [[:SENSe]:RHO:SPECTrum INVert NORMal | 810 |
| [[:SENSe]:RHO:SPECTrum? | 810 |
| [[:SENSe]:RHO:SYNC:LCMask <integer> | 808 |
| [[:SENSe]:RHO:SYNC:LCMask? | 808 |
| [[:SENSe]:RHO:SYNC[:BTS] PICH DPICH | 807 |
| [[:SENSe]:RHO:SYNC[:BTS]? | 807 |

List of Commands

| | |
|---|------|
| [:SENSe]:ROSCillator:EXTernal:FREQuency <freq> | 1093 |
| [:SENSe]:ROSCillator:EXTernal:FREQuency? | 1093 |
| [:SENSe]:ROSCillator:SOURce INTernal EXTernal | 1092 |
| [:SENSe]:ROSCillator:SOURce:TYPE INTernal EXTernal SENSe | 1091 |
| [:SENSe]:ROSCillator:SOURce:TYPE? | 1091 |
| [:SENSe]:ROSCillator:SOURce? | 1092 |
| [:SENSe]:SEMAsk:AVERAge:COUnT <integer> | 456 |
| [:SENSe]:SEMAsk:AVERAge:COUnT? | 456 |
| [:SENSe]:SEMAsk:AVERAge[:STATe] ON OFF 1 0 | 456 |
| [:SENSe]:SEMAsk:AVERAge[:STATe]? | 456 |
| [:SENSe]:SEMAsk:BANDwidth[1] 2:INTegration <bandwidth> | 458 |
| [:SENSe]:SEMAsk:BANDwidth[1] 2:INTegration? | 458 |
| [:SENSe]:SEMAsk:BANDwidth[1] 2:VIDeo <bandwidth> | 461 |
| [:SENSe]:SEMAsk:BANDwidth[1] 2:VIDeo:AUTO OFF ON 1 0 | 461 |
| [:SENSe]:SEMAsk:BANDwidth[1] 2:VIDeo:AUTO? | 461 |
| [:SENSe]:SEMAsk:BANDwidth[1] 2:VIDeo:RATio <real> | 462 |
| [:SENSe]:SEMAsk:BANDwidth[1] 2:VIDeo:RATio:AUTO OFF ON 1 0 | 462 |
| [:SENSe]:SEMAsk:BANDwidth[1] 2:VIDeo:RATio:AUTO? | 462 |
| [:SENSe]:SEMAsk:BANDwidth[1] 2:VIDeo:RATio | 462 |
| [:SENSe]:SEMAsk:BANDwidth[1] 2:VIDeo? | 461 |
| [:SENSe]:SEMAsk:BANDwidth[1] 2[:RESolution] <bandwidth> | 460 |
| [:SENSe]:SEMAsk:BANDwidth[1] 2[:RESolution]:AUTO OFF ON 1 0 | 460 |
| [:SENSe]:SEMAsk:BANDwidth[1] 2[:RESolution]:AUTO? | 460 |
| [:SENSe]:SEMAsk:BANDwidth[1] 2[:RESolution]? | 460 |
| [:SENSe]:SEMAsk:CARRier:AUTO[:STATe] OFF ON 1 0 | 464 |
| [:SENSe]:SEMAsk:CARRier:AUTO[:STATe]? | 464 |
| [:SENSe]:SEMAsk:CARRier:CPSD <real> | 464 |
| [:SENSe]:SEMAsk:CARRier:CPSD? | 464 |
| [:SENSe]:SEMAsk:CARRier:PEAK[:POWer] <real> | 465 |
| [:SENSe]:SEMAsk:CARRier:PEAK[:POWer]? | 465 |
| [:SENSe]:SEMAsk:CARRier[:POWer] <real> | 464 |

List of Commands

| | |
|---|-----|
| [::SENSe]:SEMAsk:CARRier[:POWer]? | 464 |
| [::SENSe]:SEMAsk:DETEctor:CARRier:AUTO ON OFF 1 0 | 498 |
| [::SENSe]:SEMAsk:DETEctor:CARRier:AUTO? | 498 |
| [::SENSe]:SEMAsk:DETEctor:CARRier[:FUNCTion] AVERAge NEGAtive NORMAl POSitive SAMPlE | 497 |
| [::SENSe]:SEMAsk:DETEctor:CARRier[:FUNCTion]? | 497 |
| [::SENSe]:SEMAsk:DETEctor:OFFSet:AUTO ON OFF 1 0 | 499 |
| [::SENSe]:SEMAsk:DETEctor:OFFSet:AUTO? | 499 |
| [::SENSe]:SEMAsk:DETEctor:OFFSet[:FUNCTion] AVERAge NEGAtive NORMAl POSitive SAMPlE | 499 |
| [::SENSe]:SEMAsk:DETEctor:OFFSet[:FUNCTion]? | 499 |
| [::SENSe]:SEMAsk:FILTer[:RRC]:ALPHa <real> | 483 |
| [::SENSe]:SEMAsk:FILTer[:RRC]:ALPHa? | 483 |
| [::SENSe]:SEMAsk:FILTer[:RRC][:STATe] OFF ON 0 1 | 483 |
| [::SENSe]:SEMAsk:FILTer[:RRC][:STATe]? | 483 |
| [::SENSe]:SEMAsk:FREQuency[1] 2:SPAN <freq> | 458 |
| [::SENSe]:SEMAsk:FREQuency[1] 2:SPAN? | 458 |
| [::SENSe]:SEMAsk:LIMits STD MAN | 484 |
| [::SENSe]:SEMAsk:LIMits? | 484 |
| [::SENSe]:SEMAsk:OFFSet[1] 2:LIST:BANDwidth:IMULti <integer>,<integer>,<integer>,<integer>,<integer>,<integer> | 473 |
| [::SENSe]:SEMAsk:OFFSet[1] 2:LIST:BANDwidth:IMULti? | 473 |
| [::SENSe]:SEMAsk:OFFSet[1] 2:LIST:BANDwidth:VIDeo <freq>,<freq>,<freq>,<freq>,<freq>,<freq> | 474 |
| [::SENSe]:SEMAsk:OFFSet[1] 2:LIST:BANDwidth:VIDeo:AUTO OFF ON 0 1,OFF ON 0 1,OFF ON 0 1,OFF ON 0 1,OFF ON 0 1,OFF ON 0 1 | 474 |
| [::SENSe]:SEMAsk:OFFSet[1] 2:LIST:BANDwidth:VIDeo:AUTO? | 474 |
| [::SENSe]:SEMAsk:OFFSet[1] 2:LIST:BANDwidth:VIDeo:RATio <real>,<real>,<real>,<real>,<real>,<real> | 475 |
| [::SENSe]:SEMAsk:OFFSet[1] 2:LIST:BANDwidth:VIDeo:RATio:AUTO OFF ON 0 1,OFF ON 0 1,OFF ON 0 1,OFF ON 0 1,OFF ON 0 1,OFF ON 0 1 | 475 |
| [::SENSe]:SEMAsk:OFFSet[1] 2:LIST:BANDwidth:VIDeo:RATio:AUTO? | 475 |
| [::SENSe]:SEMAsk:OFFSet[1] 2:LIST:BANDwidth:VIDeo:RATio? | 475 |
| [::SENSe]:SEMAsk:OFFSet[1] 2:LIST:BANDwidth:VIDeo? | 474 |
| [::SENSe]:SEMAsk:OFFSet[1] 2:LIST:BANDwidth[:RESolution] <bandwidth>,<bandwidth>,<bandwidth>,<bandwidth>,<bandwidth>,<bandwidth> | 471 |

List of Commands

| | |
|--|-----|
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:BANDwidth[:RESolution]:AUTO OFF ON 1 0,OFF ON 1 0,OFF ON 1 0,OFF ON 1 0,OFF ON 1 0,OFF ON 1 0 | 471 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:BANDwidth[:RESolution]:AUTO? | 471 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:BANDwidth[:RESolution]? | 471 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:FREQuency:STARt <freq>,<freq>,<freq>,<freq>,<freq>,<freq>... | 467 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:FREQuency:STARt? | 467 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:FREQuency:STOP <freq>,<freq>,<freq>,<freq>,<freq>,<freq> | 468 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:FREQuency:STOP? | 468 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:SIDE BOTH NEGative POSitive,BOTH NEGative POSitive,BOTH NEGative POSitive,BOTH NEGative POSitive,BO TH NEGative POSitive,BOTH NEGative POSitive | 471 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:SIDE? | 471 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:STARt:ABSolute <real>,<real>,<real>,<real>,<real>,<real> | 476 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:STARt:ABSolute? | 476 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:STARt:RCARrier <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl> | 479 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:STARt:RCARrier? | 479 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:STATe ON OFF 1 0,ON OFF 1 0,ON OFF 1 0,ON OFF 1 0,ON OFF 1 0,ON OFF 1 0 | 467 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:STATe? | 467 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:STOP:ABSolute <real>,<real>,<real>,<real>,<real>,<real> | 477 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:STOP:ABSolute:COUPle ON OFF 1 0,ON OFF 1 0,ON OFF 1 0,ON OFF 1 0,ON OFF 1 0,ON OFF 1 0 | 477 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:STOP:ABSolute:COUPle? | 477 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:STOP:ABSolute? | 477 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:STOP:RCARrier <rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl>,<rel_ampl> | 480 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:STOP:RCARrier:COUPle ON OFF 1 0,ON OFF 1 0,ON OFF 1 0,ON OFF 1 0,ON OFF 1 0,ON OFF 1 0 | 480 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:STOP:RCARrier:COUPle? | 480 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:STOP:RCARrier? | 480 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:SWEep:TIME <time>,<time>,<time>,<time>,<time>,<time> | 470 |
| [:SENSe]:SEMAsk:OFFSet[1] 2:LIST:SWEep:TIME:AUTO ON OFF 1 0,ON OFF 1 0,ON OFF 1 0,ON OFF 1 0,ON OFF 1 0,ON OFF 1 0 | 470 |

List of Commands

| | |
|---|-----|
| [[:SENSe]:SEMAsk:OFFSet[1] 2:LIST:SWEEP:TIME:AUTO? | 470 |
| [[:SENSe]:SEMAsk:OFFSet[1] 2:LIST:SWEEP:TIME? | 470 |
| [[:SENSe]:SEMAsk:OFFSet[1] 2:LIST:TEST ABSolute AND OR RELative,ABSolute AND OR RELative,ABSolute AND OR RELative,ABSolute AND OR RELative,ABSolute AND OR RELative,ABSolute AND OR RELative,ABSolute AND OR RELative | 482 |
| [[:SENSe]:SEMAsk:OFFSet[1] 2:LIST:TEST? | 482 |
| [[:SENSe]:SEMAsk:SWEEP[1] 2:TIME <time> | 459 |
| [[:SENSe]:SEMAsk:SWEEP[1] 2:TIME:AUTO OFF 0 ON 1 | 459 |
| [[:SENSe]:SEMAsk:SWEEP[1] 2:TIME:AUTO? | 459 |
| [[:SENSe]:SEMAsk:SWEEP[1] 2:TIME? | 459 |
| [[:SENSe]:SEMAsk:TYPE ? | 457 |
| [[:SENSe]:SEMAsk:TYPE PSDRef TPRef SPRef | 457 |
| [[:SENSe]:SPURious:AVERage:COUNt <integer> | 531 |
| [[:SENSe]:SPURious:AVERage:COUNt? | 531 |
| [[:SENSe]:SPURious:AVERage:TCONtrol EXPonential REPeat | 532 |
| [[:SENSe]:SPURious:AVERage:TCONtrol? | 532 |
| [[:SENSe]:SPURious:AVERage[::STATe] ON OFF 1 0 | 531 |
| [[:SENSe]:SPURious:AVERage[::STATe]? | 531 |
| [[:SENSe]:SPURious:CARRier:FREQuency:MOBil <freq> | 559 |
| [[:SENSe]:SPURious:CARRier:FREQuency:MOBil? | 559 |
| [[:SENSe]:SPURious:CARRier:FREQuency:STARt <freq> | 557 |
| [[:SENSe]:SPURious:CARRier:FREQuency:STARt? | 557 |
| [[:SENSe]:SPURious:CARRier:FREQuency:STOP <freq> | 557 |
| [[:SENSe]:SPURious:CARRier:FREQuency:STOP? | 557 |
| [[:SENSe]:SPURious:CATegory:A | 554 |
| [[:SENSe]:SPURious:CATegory:B | 555 |
| [[:SENSe]:SPURious:CATegory:MOBile | 556 |
| [[:SENSe]:SPURious:IF:GAIN:AUTO[::STATe] OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 | 550 |
| [[:SENSe]:SPURious:IF:GAIN:AUTO[::STATe]? | 550 |
| [[:SENSe]:SPURious:IF:GAIN[::STATe] OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 | |

List of Commands

| | |
|--|-----|
| OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 | 550 |
| [[:SENSe]:SPURious:IF:GAIN[:STATe]? | 550 |
| [[:SENSe]:SPURious:REPT:MODE ALL LIMTest | 553 |
| [[:SENSe]:SPURious:REPT:MODE? | 553 |
| [[:SENSe]:SPURious:SPUR <integer>. | 552 |
| [[:SENSe]:SPURious:SPUR? | 552 |
| [[:SENSe]:SPURious:SWEEP:TIME:AUTO:RULES NORMAl ACCuracy | 572 |
| [[:SENSe]:SPURious:SWEEP:TIME:AUTO:RULES? | 572 |
| [[:SENSe]:SPURious:TDD:FREQuency:START <freq> | 558 |
| [[:SENSe]:SPURious:TDD:FREQuency:START? | 558 |
| [[:SENSe]:SPURious:TDD:FREQuency:STOP <freq> | 559 |
| [[:SENSe]:SPURious:TDD:FREQuency:STOP? | 559 |
| [[:SENSe]:SPURious:TYPE EXAMineFULL | 552 |
| [[:SENSe]:SPURious:TYPE? | 552 |
| [[:SENSe]:SPURious[:RANGe][:LIST]:ATTenuation <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>. | 544 |
| [[:SENSe]:SPURious[:RANGe][:LIST]:ATTenuation:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 | 544 |
| [[:SENSe]:SPURious[:RANGe][:LIST]:ATTenuation:AUTO? | 544 |
| [[:SENSe]:SPURious[:RANGe][:LIST]:ATTenuation? | 544 |
| [[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:SHApe GAUSSian FLATtop, GAUSSian FLATtop | 539 |
| [[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:SHApe? | 539 |
| [[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>. | 538 |
| [[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 | 538 |
| [[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo:AUTO? | 538 |

List of Commands

| | |
|---|------|
| [[:SENSe]:SWEep:EGATe:LENGth? | 1210 |
| [[:SENSe]:SWEep:EGATe:METHod LO VIDeo FFT | 1211 |
| [[:SENSe]:SWEep:EGATe:METHod? | 1211 |
| [[:SENSe]:SWEep:EGATe:MINFast? | 1217 |
| [[:SENSe]:SWEep:EGATe:SOURce EXTernal1 EXTernal2 LINE FRAMe RFBurst TV | 1213 |
| [[:SENSe]:SWEep:EGATe:SOURce? | 1213 |
| [[:SENSe]:SWEep:EGATe:TIME <time> | 1208 |
| [[:SENSe]:SWEep:EGATe:TIME? | 1208 |
| [[:SENSe]:SWEep:EGATe:VIEW ON OFF 1 0. | 1204 |
| [[:SENSe]:SWEep:EGATe:VIEW? | 1204 |
| [[:SENSe]:SWEep:EGATe[:STATe] OFF ON 0 1 | 1203 |
| [[:SENSe]:SWEep:EGATe[:STATe]? | 1203 |
| [[:SENSe]:VOLTage:IQ:Q:RANGe[:UPPer] <voltage> | 1047 |
| [[:SENSe]:VOLTage:IQ:Q:RANGe[:UPPer]? | 1047 |
| [[:SENSe]:VOLTage:IQ:RANGe:AUTO OFF ON 0 1 | 1044 |
| [[:SENSe]:VOLTage:IQ:RANGe:AUTO? | 1044 |
| [[:SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer] <voltage> | 1045 |
| [[:SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer]? | 1045 |
| [[:SENSe]:VOLTage POWER:IQ:MIRRored OFF ON 0 1 | 1046 |
| [[:SENSe]:VOLTage POWER:IQ:MIRRored? | 1046 |
| [[:SENSe]:WAVeform:ADC:DITHer:AUTO[:STATe] OFF ON 0 1 | 1012 |
| [[:SENSe]:WAVeform:ADC:DITHer:AUTO[:STATe]? | 1012 |
| [[:SENSe]:WAVeform:ADC:DITHer[:STATe] OFF ON 0 1 | 1013 |
| [[:SENSe]:WAVeform:ADC:DITHer[:STATe]? | 1013 |
| [[:SENSe]:WAVeform:AVERAge:COUNT <integer> | 1009 |
| [[:SENSe]:WAVeform:AVERAge:COUNT? | 1009 |
| [[:SENSe]:WAVeform:AVERAge:TCONtrol EXPonential REPeat | 1010 |
| [[:SENSe]:WAVeform:AVERAge:TCONtrol? | 1010 |
| [[:SENSe]:WAVeform:AVERAge:TYPE LOG MAXimum MINimum RMS SCALar | 1010 |
| [[:SENSe]:WAVeform:AVERAge:TYPE? | 1010 |
| [[:SENSe]:WAVeform:AVERAge[:STATe] OFF ON 0 1 | 1009 |

List of Commands

| | |
|--|------|
| [[:SENSe]:WAVeform:AVERage[:STATe]? | 1009 |
| [[:SENSe]:WAVeform:BANDwidth:SHApe GAUSSian FLATtop | 984 |
| [[:SENSe]:WAVeform:BANDwidth:SHApe? | 984 |
| [[:SENSe]:WAVeform:BANDwidth[:RESolution] <freq> | 983 |
| [[:SENSe]:WAVeform:BANDwidth[:RESolution]? | 983 |
| [[:SENSe]:WAVeform:IF:GAIN:AUTO[:STATe] ON OFF 1 0 | 1014 |
| [[:SENSe]:WAVeform:IF:GAIN:AUTO[:STATe]? | 1014 |
| [[:SENSe]:WAVeform:IF:GAIN[:STATe] AUTOOrange LOW HIGH | 1014 |
| [[:SENSe]:WAVeform:IF:GAIN[:STATe]? | 1014 |
| [[:SENSe]:WAVeform:SWEep:TIME <time> | 1011 |
| [[:SENSe]:WAVeform:SWEep:TIME? | 1011 |
| [[:SENSe]RECORDing:PLAYback:LOOP OFF ON 0 1 | 1201 |
| [[:SENSe]RECORDing:PLAYback:LOOP? | 1201 |
| [[:SENSe]RECORDing:PLAYback:POSition <time> | 1199 |
| [[:SENSe]RECORDing:PLAYback:POSition? | 1199 |
| [[:SENSe]RECORDing:PLAYback:START <time> | 1200 |
| [[:SENSe]RECORDing:PLAYback:START:AUTO OFF ON 0 1 | 1200 |
| [[:SENSe]RECORDing:PLAYback:START:AUTO? | 1200 |
| [[:SENSe]RECORDing:PLAYback:START? | 1200 |
| [[:SENSe]RECORDing:PLAYback:STOP <time> | 1200 |
| [[:SENSe]RECORDing:PLAYback:STOP:AUTO OFF ON 0 1 | 1200 |
| [[:SENSe]RECORDing:PLAYback:STOP:AUTO? | 1200 |
| [[:SENSe]RECORDing:PLAYback:STOP? | 1200 |
| CALC:CDP:ASET:THR -50.0 | 714 |
| CALC:CDP:ASET:THR:AUTO ON | 714 |
| CALC:CDP:ASET:THR:AUTO? | 714 |
| CALC:CDP:ASET:THR? | 714 |
| CALC:CDP:MARK:AOFF | 704 |
| CALC:CDP:MARK:MIN | 722 |
| CALC:CDP:MARK:PTP | 722 |
| CALC:CDP:MARK:REF 4 | 702 |

List of Commands

| | |
|---|-----|
| CALC:CDP:MARK:REF? | 702 |
| CALC:CDP:MARK:TRACE POL. | 703 |
| CALC:CDP:MARK:TRACE? | 703 |
| CALC:CDP:MARK11:Y? | 700 |
| CALC:CDP:MARK2:MAX | 721 |
| CALC:CDP:MARK2:MAX:LEFT | 722 |
| CALC:CDP:MARK2:MAX:NEXT | 721 |
| CALC:CDP:MARK2:MAX:RIGH | 721 |
| CALC:CDP:MARK3:STAT? | 704 |
| CALC:CDP:MARK3:STATe ON | 704 |
| CALC:CDP:MARK4:SET:DESP | 706 |
| CALCulate:CDPower:WCODe:BASE <integer> | 755 |
| CALCulate:CDPower:WCODe:BASE? | 755 |
| CALCulate:CDPower:WCODe:LENGth <integer> | |
| CALCulate:CDPower:WCODe:LENGth? | 708 |
| CALCulate:CDPower:WCODe:ORDer HADMrD BREVerse | 755 |
| CALCulate:CDPower:WCODe:ORDer? | 755 |
| CALCulate:CDPower:WCODe[:NUMBer] <integer> | |
| CALCulate:CDPower:WCODe[:NUMBer]? | 709 |
| CALCulate:RHO:ASET:THReshold:AUTO OFF ON 0 1 | 811 |
| CALCulate:RHO:ASET:THReshold:AUTO? | 811 |
| CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe? | 797 |
| CDP:ALPH 0.2 | 715 |
| CDP:ALPH? | 715 |
| CDP:CRAT 1228800 | 716 |
| CDP:CRAT? | 716 |
| CDP:IF:GAIN ON | 718 |
| CDP:IF:GAIN:AUTO ON | 717 |
| CDP:IF:GAIN:AUTO? | 717 |
| CDP:IF:GAIN? | 718 |
| DISP:CDP:CDOM:SPAN:STOP 127 | 730 |
| DISP:CDP:CDOM:SPAN:STOP? | 730 |

List of Commands

| | |
|---|------|
| DISP:CDP:VIEW:WIND:TRAC:Y:PDIV 5.0 | 679 |
| DISP:CDP:VIEW:WIND:TRAC:Y:PDIV? | 679 |
| DISP:CDP:VIEW3:WIND:TRAC:X:PDIV 1.0 | 734 |
| DISP:CDP:VIEW3:WIND:TRAC:X:PDIV? | 734 |
| DISP:CDP:VIEW3:WIND:TRAC:X:RLEV 10.0 | 731 |
| DISP:CDP:VIEW3:WIND:TRAC:X:RLEV? | 731 |
| DISP:CDP:VIEW3:WIND:TRAC:X:RPOS LEFT DISP:CDP:VIEW3:WIND:TRAC:X:RPOS? | 738 |
| DISP:CDP:VIEW3:WIND3:TRAC:X:PDIV 1.0 | 736 |
| DISP:CDP:VIEW3:WIND3:TRAC:X:PDIV? | 736 |
| DISP:CDP:VIEW4:WIND2:TRAC:X:PDIV 1.0 | 736 |
| DISP:CDP:VIEW4:WIND2:TRAC:X:PDIV? | 736 |
| DISP:CDP:VIEW4:WIND2:TRAC:X:RLEV 10.0 | 733 |
| DISP:CDP:VIEW4:WIND2:TRAC:X:RLEV? | 733 |
| DISP:CDP:VIEW5:WIND2:TRAC:X:PDIV 1.0 | 737 |
| DISP:CDP:VIEW5:WIND2:TRAC:X:PDIV? | 737 |
| DISPlay:CDPower:MARKer:CONSolidated ON OFF 1 0 | 756 |
| DISPlay:CDPower:MARKer:CONSolidated? | 756 |
| For most other measurements: | 1126 |
| For Swept SA measurement: | 1126 |
| In BTS mode, there are 64 or 128 numberss depending on CALCulate:CDPower:WCODE:BASE | 668 |
| INPut:IMPedance:IQ U50 B50 U1M B1M | 1074 |
| INPut:IMPedance:IQ? | 1074 |
| MMEMory:LOAD:RECOding <filename> | 1162 |
| MMEMory:LOAD:TRACe:DATA D1 D2 D3 D4 D5 D6,<filename>[,CSV TXT SDF] | 1161 |
| Returns series of floating point numbers (in symbol rate) that represent all code domain symbol rate. When In BTS Mode, total is 64 or 128 depending on CALCulate:CDPower:WCODE:BASE. | 668 |
| System, I/O Config | 240 |
| TRIG:CDP:IQ:SOUR RFB | 747 |
| TRIG:CDP:IQ:SOUR? | 747 |
| TRIG:CDP:RF:SOUR RFB | 747 |
| TRIG:CDP:RF:SOUR? | 747 |

List of Commands

| | |
|----------------------------|-----|
| TRIG:CDP:SOUR RFB | 746 |
| TRIG:CDP:SOUR? | 746 |
| TRIG:RHO:IQ:SOUR RFB | 837 |
| TRIG:RHO:IQ:SOUR? | 837 |
| TRIG:RHO:RF:SOUR RFB | 837 |
| TRIG:RHO:RF:SOUR? | 837 |
| TRIG:RHO:SOUR RFB | 836 |
| TRIG:RHO:SOUR? | 836 |

Welcome to the your Signal Analyzer Help system! The Help in this analyzer has powerful features to help you quickly find the information you need. For example:

To view help for any front-panel key or menu key, press that key.

With a Mouse - Navigating the Help Window---use the mouse and keyboard exactly as you would when viewing Help on a PC.

Without a Mouse - Navigating the Help Window---use the **Up/Down Arrow** keys, **Next Window** key, **Forward** and **Backward Tab** keys, and **Enter** key.

Other Help Resources: To view a list of links to other documentation, click Additional Documentation in the Help Table of Contents. All available documentation is included in the analyzer either as HTML Help or PDF files. This same documentation is also included on the Documentation CD shipped with your analyzer.

To scroll down to see the rest of a topic, press the **Next Window** key to move the cursor between the Table of Contents and Topic Panes. Then press the **Down Arrow** key to scroll down (or the **Up Arrow** key to scroll up).

Viewing Help on a separate computer


You may want to view the help at the same time as you are working with the instrument front pane keys. We recommend that you open a copy of the Help system on a separate computer to do this. The Help .chm files are available:

- on the documentation CD that came with the instrument
- inside the instrument, C:/Program Files/Agilent/SignalAnalysis/Infrastrucutre/Help. (Move a copy of the appropriate .chm file to your PC.)

| | |
|-------------|-------------|
| Key Path | Help |
| Help Map ID | 1001 |

How Help is Organized

NOTE Front-panel keys are listed alphabetically (except under Utility Functions) within the different labeled sections of the front-panel.

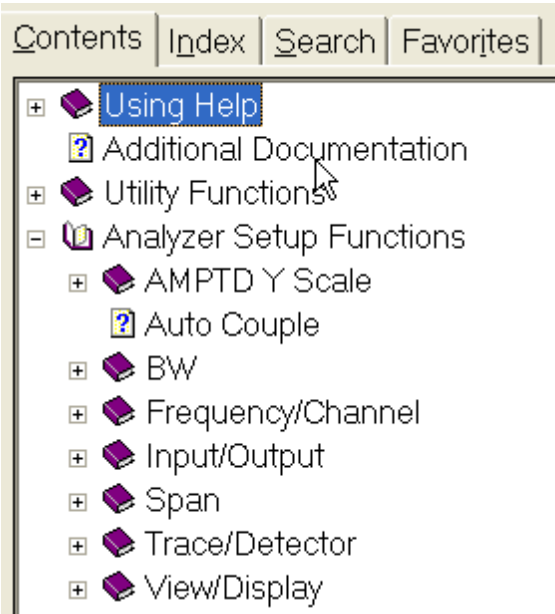

When the key has unique functionality to the measurement, the Help is located under the measurement name and then under the front-panel key name. If you don't see the key there, it is located under one of

the above sections of the Table of Contents entitled, Utility Functions, Analyzer Setup Functions, Marker Functions, or Measurement Functions.


- [-] Occupied Bandwidth
 - [+] Measurement Results
 - [+] Span X Scale
 - [+] AMPTD Y Scale
 - [+] View/Display
 - [+] Trace/Detector
 - [+] BW
 - [+] Meas Setup
 - [+] Trigger
 - [+] Sweep/control
 - [+] Marker

Notice that Occupied Bandwidth has no FREQ front-panel key. Find Help on this key in the “Analyzer Setup Functions” section.

NOTE All softkeys are listed in the order they appear in their menu.

Using Help With a Mouse and Keyboard

1. Type the key name of interest into the Search window as shown below:

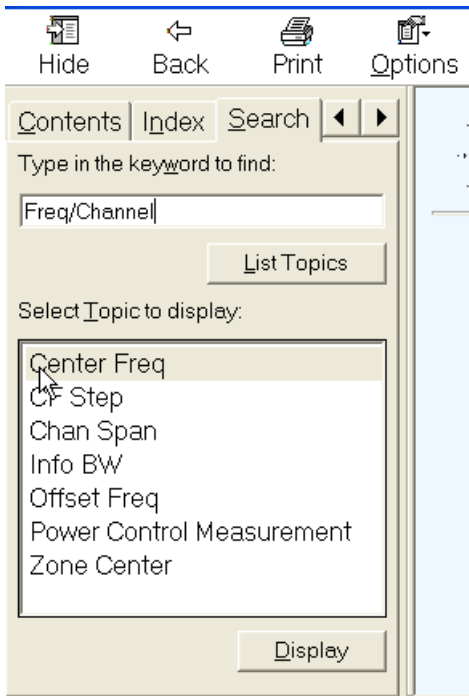

Using Help
How Help is Organized

2. Mouse click on the “List Topics” button.
3. Mouse click on the key name of interest from the list.
4. The topic is then displayed in the Topic Pane (right side of display).


The Embedded Help System

Interactive Windows Help

The instrument software includes a comprehensive, interactive, Help system that operates in a manner similar to the standard Windows Help system.

Front Panel Keys used by the Help System

The interactive Help system uses the front panel keys shown below.

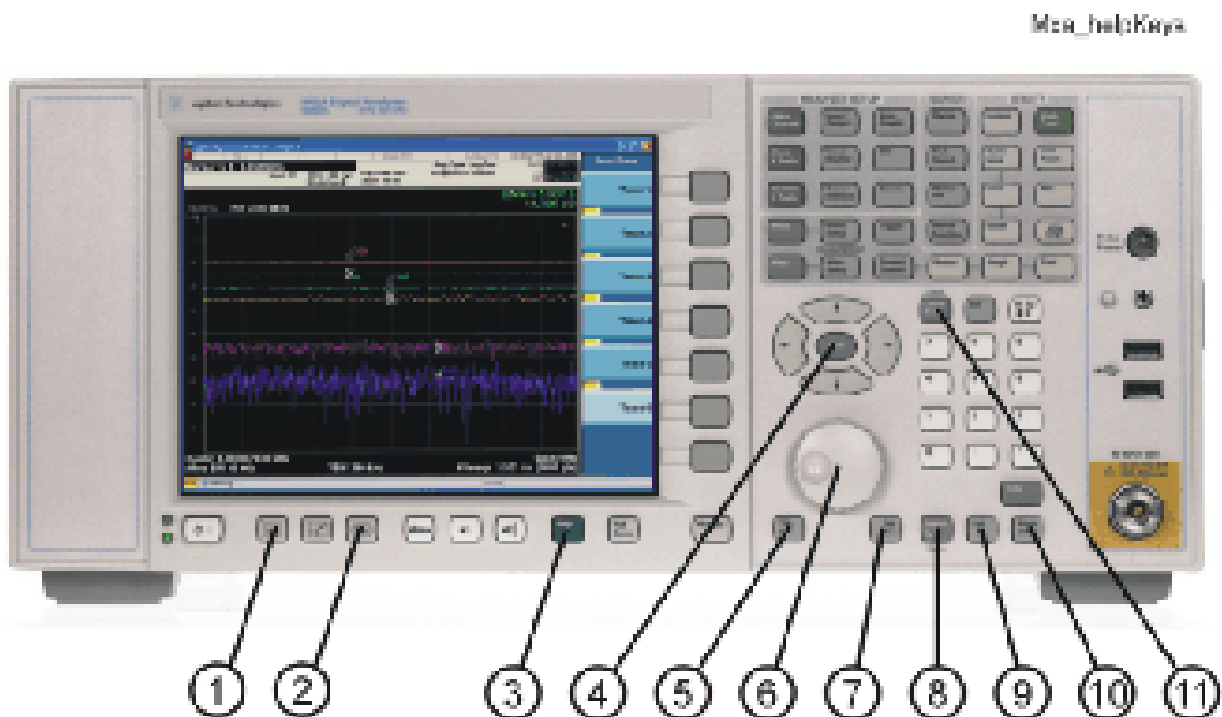

| Item | | Description |
|------|-----------------------------------|--|
| # | Name | |
| 1 | Cancel (Esc) Key | Press this key to quit the interactive Help system |
| 2 | Single/ Multiple Window Key | This key allows you to change the current window size in certain contexts. |

Using Help

The Embedded Help System

| Item | | Description |
|------|---------------------------|---|
| # | Name | |
| 3 | Next Window Key | This key allows you to change the current window pane selection. |
| 4 | Help Key | Initiates the interactive Help display. |
| 5 | Arrow / Enter Keys | This control, consisting of a central Enter key surrounded by four directional arrow keys, allows navigation within the Help system. |
| 6 | Backward Tab Key | Use this key to move between fields in the Help display. |
| 7 | Knob | Use this control to scroll up or down a list of topics. |
| 8 | Forward Tab Key | Use this key to move between fields in the Help display. |
| 9 | Select / Space Key | Use this key, in conjunction with others, to navigate within the Help system. |
| 10 | Ctrl Key | Use this key, in conjunction with others, to navigate within the Help system. |
| 11 | Alt Key | Use this key, in conjunction with others, to navigate within the Help system. |

Opening the Help Window

To access the Help system, press the green **Help** key below the front panel display while an Agilent application is running.

Context Sensitive Help Display

Note that the softkeys remain visible when the Help window is open. Pressing a different softkey, or a front panel function key, displays a different Help page.

Getting Help for a Key

To get help for a specific front panel key or softkey, press the desired key, then, if the Help window is not already visible, press the **Help** key to display the relevant Help page. You can get help for all softkeys, and for the front panel keys in the **Analyzer Setup**, **Marker**, **Measurement** and **Utility** groups.

Navigating Within Help

For details of how to navigate within the panes of the Help window, see [“Navigating Windows Help Files” on page 99](#).

Closing the Help Window

To close the Help window, and return to the measurement application, press the **Cancel (Esc)** key.

Other Help Resources


In addition to the interactive Windows Help system, the instrument includes information resources in other formats, such as Application Notes, tutorial documents, etc.

Many of these supporting documents use the Adobe Acrobat (PDF) file format, which you can access using the pre-installed Adobe Reader software. The Adobe Reader user interface differs from the Windows Help interface. For full details on how to navigate within Acrobat documents using Adobe Reader, see “Navigating Acrobat (PDF)” on page 104.

Navigating Windows Help Files

Display Screen

When the interactive Help Window is open, the instrument display appears as below.

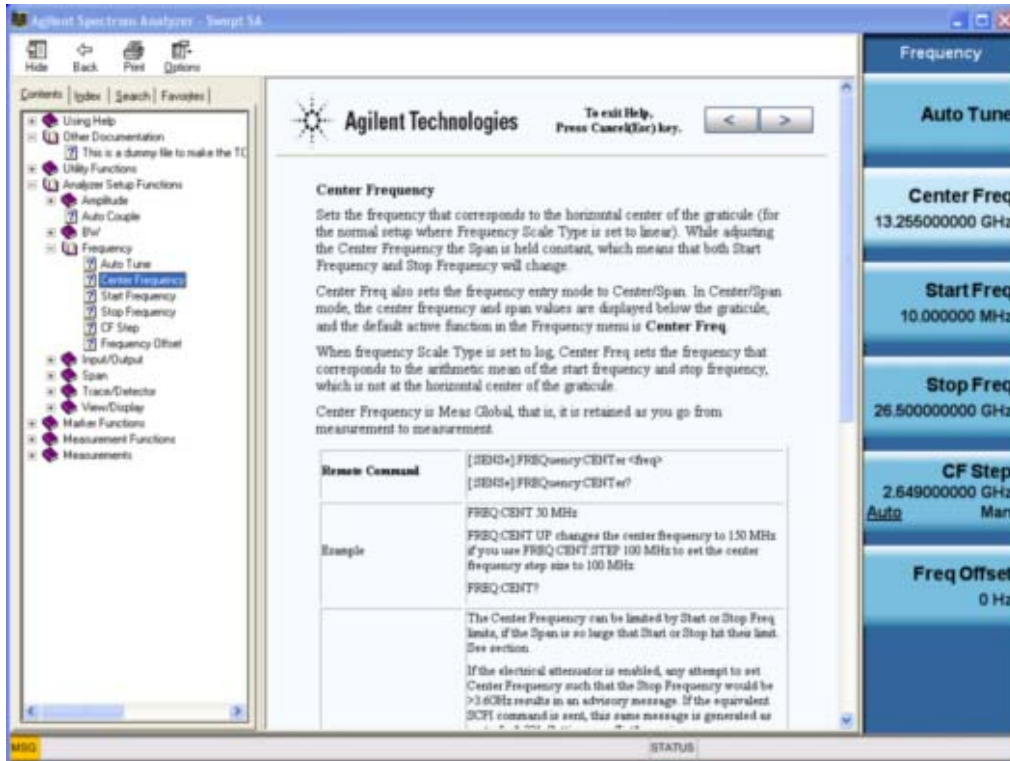

The Help Window appears on top of, and to the left of, the measurement display. You can still see and use the current softkey menu when the Help Window is open.

The Help Window itself consists of two panes. On the left is the Navigation Pane, and on the right is the Topic Pane. The Navigation Pane is further divided into four tabs: Contents, Index, Search and Favorites.

With a Mouse - Navigating the Help Window

The online Help Window provides detailed information on how to navigate its content when a mouse is attached to the instrument. To access the online Help information, do the following:


- Press the green **Help** key on the Front Panel, to open the Help window.



- Choose the desired topic from the list in the Navigation Pane, then click on the topic title to display the first page of the topic.

Using Help The Embedded Help System

- To expand the listing of a topic, click on the + icon to the left of the topic's book icon. A list of subtopics and pages appears.

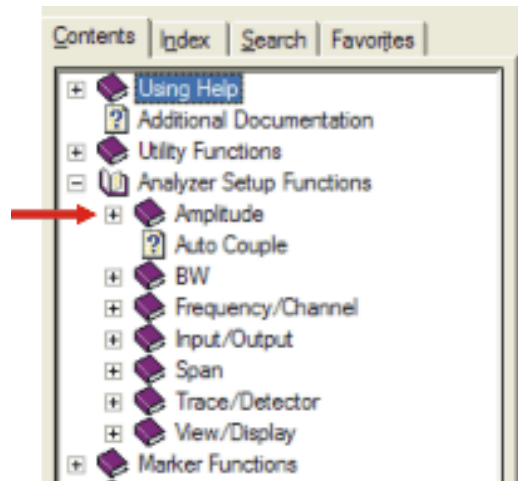

- To move to the Next or Previous page within the Topic Pane, click the right or left Pointer Keys (at the top right of the Topic Pane).



Without a Mouse - Navigating the Help Window

Most features of the Help system can be accessed and navigated without the necessity to attach a mouse or keyboard to the instrument. There are, however, a few exceptions to this rule, which are noted in this section.

To perform this action

Close the Help Window

Do the following:

Press the **Cancel (Esc)** key.



Open the Help Window

Press the green **Help** key.



Toggle focus between the Navigation Pane and the Topic Pane

Press the **Next Window** key.



Switch active tab within the Navigation Pane

Hold down the **Ctrl** key, then press either the **Forward Tab** key, *or* the **Backward Tab** key.



To perform this action

Scroll up or down the list of Topics and subtopics within the Contents *or* Index Tabs of the Navigation Pane

Do the following:

With the focus in the Navigation Pane, press the **Up Arrow** or **Down Arrow** keys.



Expand a selected topic within the Contents Tab of the Navigation Pane

With the focus in the Navigation Pane, press the **Right Arrow** key.



Collapse a selected topic within the Contents Tab of the Navigation Pane

With the focus in the Navigation Pane, press the **Left Arrow** key.



Display a selected Help topic in the Topic Pane from the Contents Tab of the Navigation Pane

With the focus in the Contents Tab of the Navigation Pane, press the **Enter** key. If the selected topic was not already expanded, it expands in the Navigation Pane.



Display a Help topic in the Topic Pane from the Index Tab of the Navigation Pane

With the focus in the Index Tab of the Navigation Pane, press the **Enter** key.



Scroll up or down within a topic in the Topic Pane

With the focus in the Topic Pane, press either the **Up Arrow** key or **Down Arrow** key.



Using Help The Embedded Help System

To perform this action

Go to the next page in the Topic Pane

Do the following:

With the focus in the Topic Pane, press either **Forward Tab** or **Backward Tab** keys



to select the > (right pointer) key at the top right of the Pane.



Press **Enter**.



Go to the previous page in the Topic Pane

With the focus in the Topic Pane, press either **Forward Tab** or **Backward Tab** keys



to select the < (left pointer) key at the top right of the Pane.




Press **Enter**.



Go Back: display the previous Topic in the Topic Pane

Hold down the **Alt** key, then press the **Left Arrow** key.

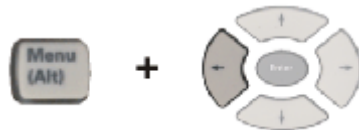

This is equivalent to the operation of the Back button in the Help Window menu

To perform this action

Go Forward: display the next Topic in the Topic Pane

Do the following:

Hold down the **Alt** key, then press the **Right Arrow** key.



(This operation has no effect unless there have been previous “Go Back” operations)

Scroll horizontally within the Contents Tab of the Navigation Pane

With the focus in the Contents Tab of the Navigation Pane, hold down the **Ctrl** key, then press either the **Left Arrow** or **Right Arrow** keys.



Scroll vertically within the Contents Tab of the Navigation Pane

With the focus in the Contents Tab of the Navigation Pane, *either* hold down the **Ctrl** key, then press either the **Up Arrow** or **Down Arrow** keys,




or rotate the **Knob**.



Print the topic currently displayed

Press the **Print** key




The following parts of the Help Window *cannot* easily be used without a mouse or keyboard attached to the instrument.

- The menu options at the top of the Help Window, consisting of: **Hide**, **Back**, **Print** and **Options**.
- The functionality of the Search Tab of the Navigation Pane.
- The functionality of the Favorites Tab of the Navigation Pane.

Navigating Acrobat (PDF)

Adobe Reader Window

When an Adobe Acrobat file is open and being viewed, the instrument display appears as below.

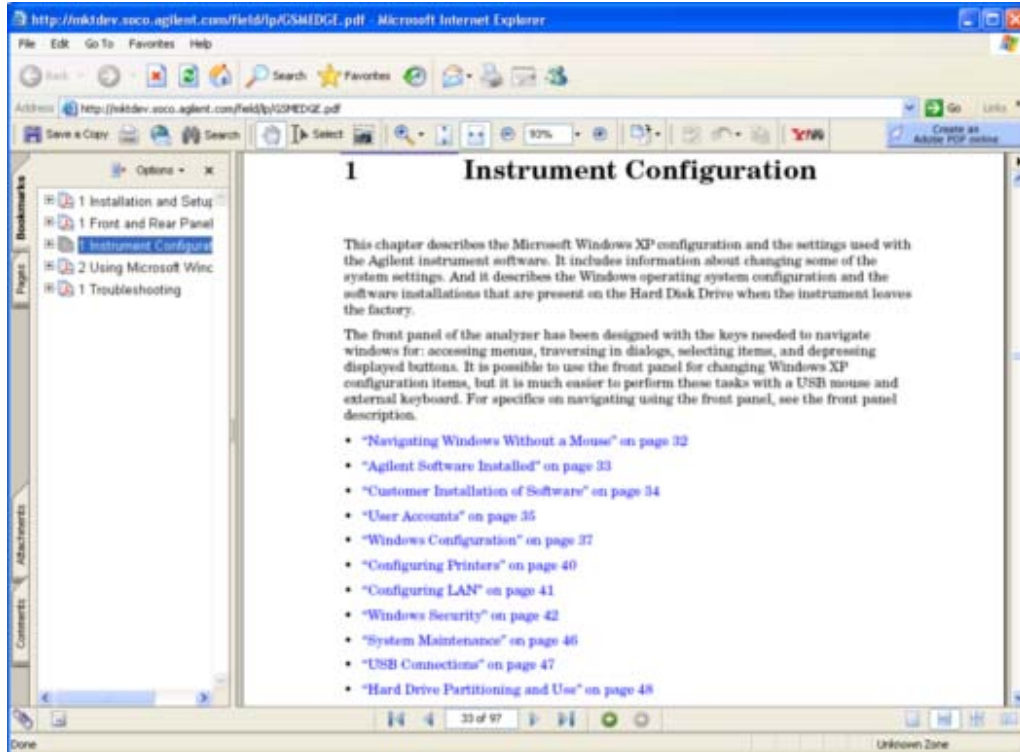

The Adobe Reader Window itself consists of two panes. On the left is the Navigation Pane (which may be hidden), and on the right is the Document Pane. The Navigation Pane is further subdivided into four tabs: Bookmarks, Pages, Attachments and Comments.


Navigating the Acrobat Reader Window with a Mouse

The online Help for Adobe Reader provides detailed information on how to use the Reader when a mouse is attached to the instrument. To access the online Help, do the following:

- With the Adobe Reader window open, click **Help, Adobe Reader Help** in the menu at the top of the screen. This opens the Help window on top of the document window.
- To close the Help window, *either* click the Red **X** at the top right of the window, *or* right-click



anywhere in the title bar, then select **Close** from the popup menu.

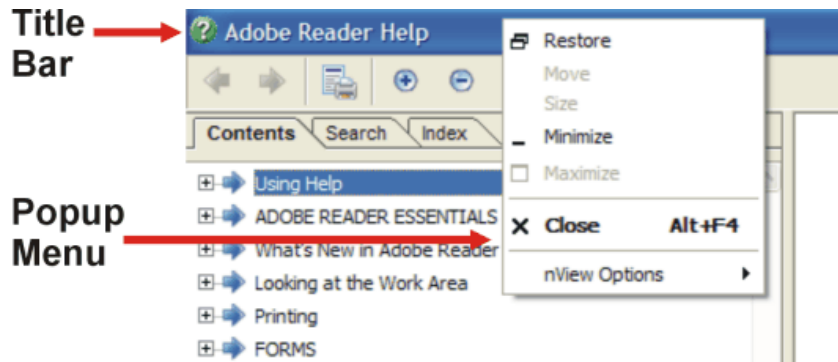

Navigating the Acrobat Reader Window Without a Mouse

IMPORTANT

To navigate PDF files effectively, Agilent recommends that you should attach a mouse and keyboard to the instrument. When no mouse or keyboard is available, some Acrobat Reader functionality is not available. The information in this section is provided to assist in situations where a mouse and keyboard *cannot* be attached

Using Help The Embedded Help System

to the instrument.

To perform this action


Exit the Adobe Reader

Do the following:

Press **Alt+Select** to open the drop-down File menu of Acrobat Reader. Press the **Down Arrow** repeatedly,



until the **Exit** menu item (at the bottom of the menu) is selected.

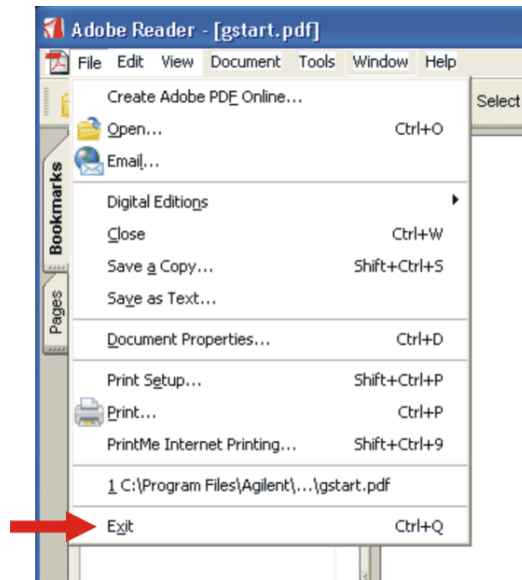

Press **Enter**.



Scroll up or down within a page

Press the **Up Arrow** or **Down Arrow** keys.



To perform this action

Do the following:

Forward to the end of the Acrobat file

Hold down **Alt**, then press the **Down Arrow** key.



Go back to the beginning of the Acrobat file

Hold down **Alt**, then press the **Up Arrow** key.



Zoom In

Hold down **Alt**, then press the **Left Arrow** key.



Zoom Out

Hold down **Alt**, then press the **Right Arrow** key.



Zoom to Page Actual Size

Hold down **Ctrl**, then press **1**.



Zoom to Fit Page in Width

Hold down **Ctrl**, then press **2**.



Zoom to Fit Visible Text/Object

Hold down **Ctrl**, then press **3**.



Using Help The Embedded Help System

To perform this action

Go to a Specific Page

Do the following:

Press the **Next Window** key to open the Go To Page dialog.



Enter the desired page number using the Numeric Keypad, then press **Enter**.



To dismiss the Go To Page dialog without changing the page, press the **Cancel (Esc)** key.

Maximize the viewable area of the document window within the Acrobat Reader

Press the **Single/Multiple Window** key.



Go to Next Bookmark

With the focus in the Bookmark tab of the Navigation Pane, press the **Down Arrow**.



Go to Previous Bookmark

With the focus in the Bookmark tab of the Navigation Pane, press the **Up Arrow** key.



Expand Selected Bookmark

With the focus in the Bookmark tab of the Navigation Pane, press the **Right Arrow** key.



Collapse Selected Bookmark

With the focus in the Bookmark tab of the Navigation Pane, press the **Left Arrow** key.



To perform this action

Do the following:

Jump to Selected Bookmark
(and display its content)

With the focus in the Bookmark tab of the Navigation Pane, and the desired topic selected, press the **Enter** key



Open Pages tab of Navigation
Pane (to display thumbnails)

With the Navigation Pane open, and the focus in the Navigation Pane, press **Ctrl+Tab** until the Pages tab is selected.



Go to Next Thumbnail

Press the **Right Arrow** or **Down Arrow** keys.



Go to Previous Thumbnail

Press the **Left Arrow** or **Up Arrow** keys.




Select a Thumbnail for
viewing

Press **Enter**.



Print the Acrobat file

Press the **Print** key.



For details of available Print options, see the Section [“Printing Acrobat Files”](#) on page 110.

NOTE

The driver for the appropriate printer must be installed in the instrument before using this key.

The following parts of the Adobe Reader Window *cannot* easily be used without a mouse or keyboard attached to the instrument.

- The text menu at the top of the screen.

- The toolbar at the top of the screen.
- The navigation arrows and scroll bars at the right-hand side and bottom of the screen.

Printing Acrobat Files

NOTE The driver for the appropriate printer must be installed in the instrument before any Acrobat file can be printed.

To print all or part of an open Acrobat file, do the following.


Printing with a Mouse To print all or part of an Acrobat file with a mouse attached to the Instrument, do the following:

1. *Either*,
 - a. click on the Print icon in the Acrobat Reader toolbar,



- b. *or*, select File > Print from the menu.

2. The Acrobat Reader Print dialog opens, as shown below.

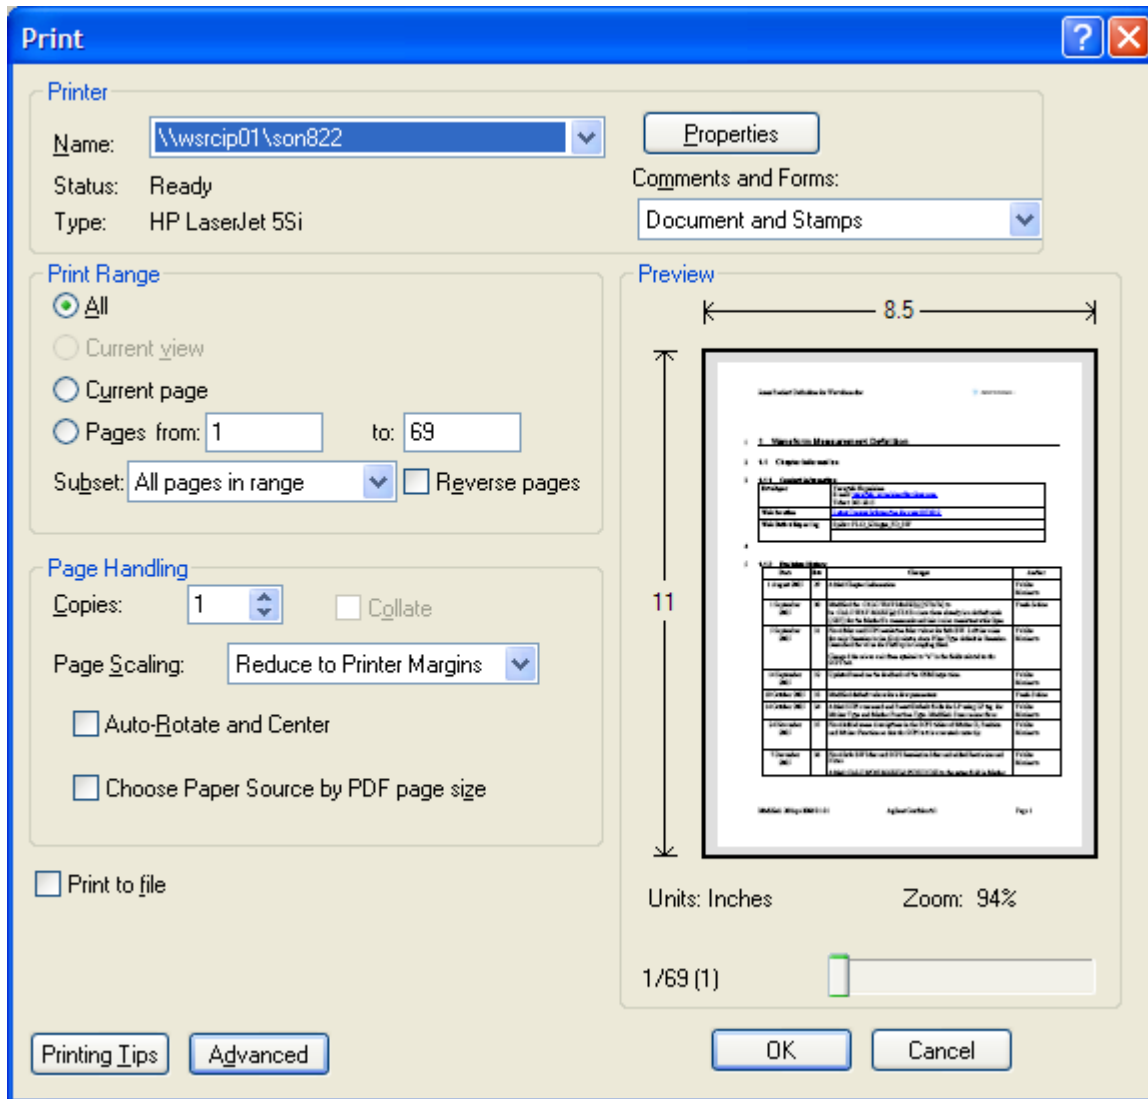

3. Choose the desired options within the Print dialog, then click OK to print (or click Cancel to cancel the printing).

NOTE Clicking the **Properties** button within the Print dialog opens a window containing controls that are specific to the printer model installed. Check the printer manufacturer's documentation for details of these capabilities.


Printing without a Mouse To print all or part of an Acrobat file without a mouse attached to the Instrument, do the following:

Using Help The Embedded Help System

1. Press **Alt+Select** to open the drop-down File menu of Acrobat Reader.




2. The drop-down menu looks similar to that shown below.

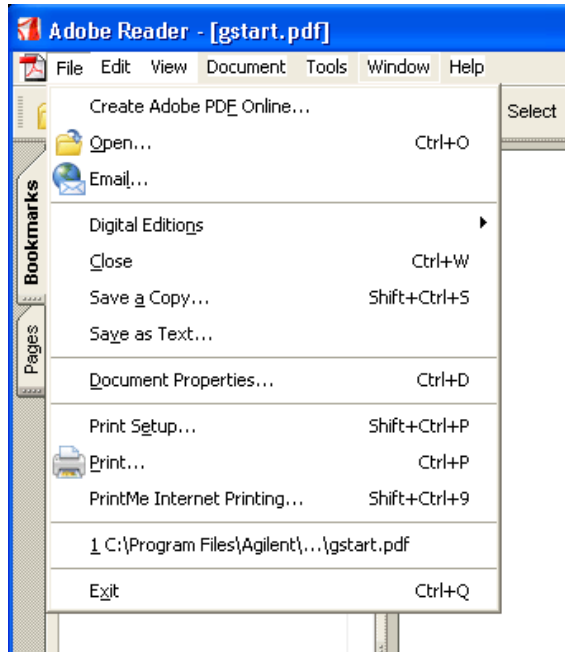

3. Press the **Down Arrow** repeatedly, until the Print menu item is selected.



4. Press **Enter**. The Acrobat Reader Print dialog opens, as shown below.

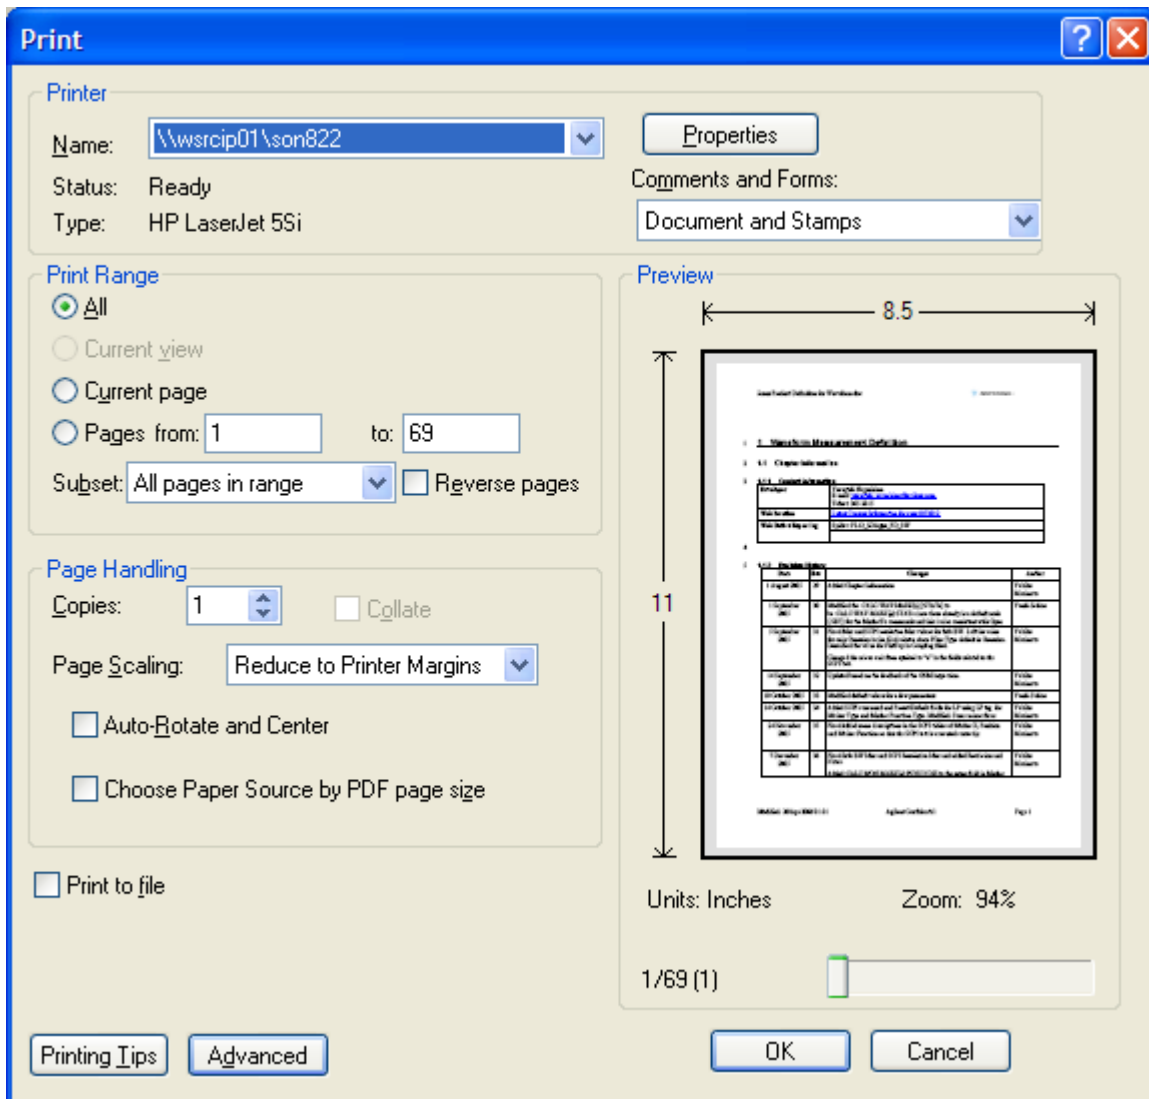

5. Choose the desired options within the Print dialog, then select **OK** to print (or select **Cancel** to cancel the printing). The following techniques can be used to access dialog options without a mouse:

- To move from one option to the next, or between radio button selections, press **Tab**.
- To toggle the state of a checkbox, press **Select**.
- To make a selection from a listbox, **Tab** to the listbox, then use the **Up Arrow** or **Down Arrow** keys to choose the desired option.
- To “click” on a button, **Tab** to the button to select it, then press **Enter** to “click” on it.

NOTE

Clicking the **Properties** button within the Print dialog opens a window containing controls that are specific to the printer model installed. Check the printer manufacturer’s documentation for details of these capabilities. *Certain items in these dialogs may be difficult or even impossible to edit without a*

Using Help
The Embedded Help System

keyboard and mouse attached to the Instrument.

Terms Used in This Help

There are many terms used throughout this Help, for example “active function block,” that are explained in detail in the Getting Started guide. It is recommended that you read the Getting Started guide first. (This is just a sample of what might be here.)

The following terms are used to describe each key. Note that a key description may not use all the terms.

Table 1-1 **Terms Used**

| Term | Meaning |
|----------------------------|---|
| Default Unit | The default measurement unit of the setting. |
| Default Terminator | Indicates the units that will be attached to the numerical value that you have entered. This default will be used from the front panel, when you terminate your entry by pressing the Enter key, rather than selecting a units key. This default will be used remotely when you send the command without specifying any units after your value(s). |
| Dependencies/ Couplings | Some commands may be unavailable when other parameters are set in certain ways. If applicable, any such limitations are described here. |
| Example | Provides command examples using the indicated remote command syntax. |
| Factory Preset | Describes the function settings after a Factory Preset . |
| History | Provides historical information about the key. |
| Key Path | The sequence of Front Panel keys that accesses the function or setting. |
| Knob Increment/Decrement | The numeric value of the minimum increment or decrement that is applied when turning the thumb wheel knob. |
| Max | The Maximum numerical value that the setting can take. |
| Meas Global | The functionality described is the same in all measurements. |
| Meas Local | The functionality described is only true for the measurement selected. |
| Min | The Minimum numerical value that the setting can take. |
| Mode Global | The functionality described is the same for all modes. |
| Preset | In some cases, a Preset operation changes the status of a parameter. If the operation of the key specified is modified by a Preset operation, the effect is described here. |
| Range | Describes the firmware revision history. <i>Only applies after first firmware release.</i> |
| Remote Command | Shows the syntax requirements for each SCPI command. |
| Remote Command Notes | Additional notes regarding Remote Commands. |

Table 1-1 **Terms Used**

| Term | Meaning |
|-----------------------------------|---|
| Resolution | Specifies the smallest change that can be made to the numeric value of a parameter. |
| SCPI Status Bits/OPC Dependencies | Pressing certain keys may affect one or more status bits. If applicable, details are given here. |
| State Saved | Indicates what happens to a particular function when the instrument state is saved (either to an external memory device or the internal D: drive). It also indicates whether the current settings of the function are maintained if the instrument is powered on or preset using Power On Last State or User Preset . |

Context Sensitive Help not Available

Help Map ID 1002

You are viewing this page because Help on the key you have selected is not available.

Finding the topic of interest “With a mouse and keyboard” on page 119.

Finding the topic of interest without a mouse and keyboard

1. The current focus is in the Table of Contents pane (left side of display). You will see the “Using Help” topic highlighted.
2. Using the up and down arrows keys, locate the topic of interest. (The Enter key expands the topics that are collapsed.)
3. Press the Enter key to view the Help in the topic pane (right side of display).

If you are having trouble finding your key of interest, see “Understanding How Help is Organized.” on page 117.

Understanding How Help is Organized.

NOTE Front-panel keys are listed alphabetically within the different labeled sections of the front-panel.









When the key has unique functionality to the measurement, the Help is located under the measurement

Using Help
Context Sensitive Help not Available

name and then under the front-panel key name. If you don't see the key there, it is located under one of the above sections of the Table of Contents entitled, Utility Functions, Analyzer Setup Functions, Marker Functions, or Measurement Functions.

Selecting links without a mouse:


(You are in the Topic Pane (right side of display) and you wish to jump to a link on this page.)

| Perform this action: | Using these keys: |
|--|--|
| <p>2. Scroll up and down the page by pressing the Up/Down Arrow keys.</p> <p>NOTE: Right Arrow and Left Arrow keys are also shown here.</p> | <p>Use these Up/Down Arrow key to scroll.</p>  |
| <p>1. Toggle the focus between the Table of Contents Pane (left side of display) and the Topic Pane (right side of display) by pressing the Next Window key.</p> | <p>Next Window key</p>  |
| <p>3. Move from link to link in the Topic Pane (right side of display) by pressing the Forward and Backward tab keys.</p> <p>Links become highlighted upon selection.</p> <p>NOTE: It is difficult to see the highlighting of the Left and Right Pointer keys in the heading of each page. After toggling to Topic Pane (see step 1), press the Right Tab three times to reach the first link available.</p> | <p>Forward and Backward Tab keys</p>  <p>Left and Right Pointer keys</p>  |
| <p>4. Next or Previous Page:</p> <p>Highlight these Pointer keys using the Forward and Backward Tab keys. (See step 2). Select these keys (by pressing Enter) to go to the next or previous page in Help.</p> | <p>Use the Tab keys to select the Left or Right Pointer keys at the top right of this pane;</p>  |
| <p>Display highlighted links by pressing the Enter key.</p> |  |

All softkeys are listed in the order they appear in their menu.

With a mouse and keyboard

1. Type the key name of interest into the Search window as shown below:

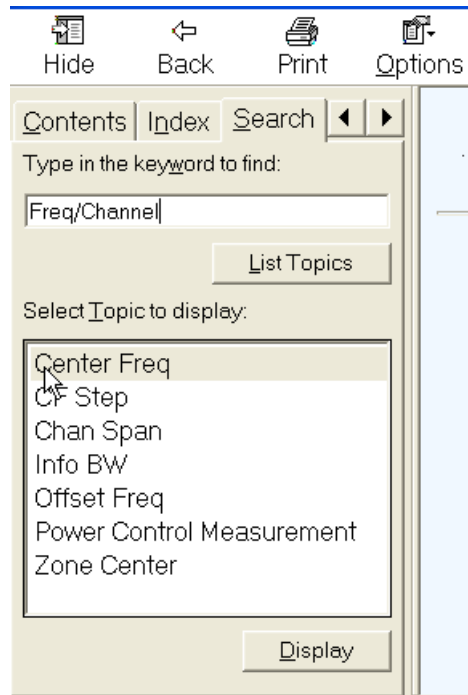

2. Mouse click on the “List Topics” button.
3. Mouse click on the key name of interest from the list.
4. The topic is then displayed in the Topic Pane (right side of display).

Using Help
Context Sensitive Help not Available

2

About the Analyzer

The MXA signal analyzer measures and monitors complex RF and microwave signals. The analyzer integrates traditional spectrum measurements with advanced vector signal analysis to optimize speed, accuracy, and dynamic range. The MXA has Windows XP Pro® built in as an operating system, which expands the usability of the analyzer.

With a broad set of applications and demodulation capabilities, an intuitive user interface, outstanding connectivity and powerful one-button measurements, the MXA is ideal for both R&D and manufacturing engineers working on cellular, emerging wireless communications, general purpose, aerospace and defense applications.

Innovative breakthroughs enable the following features:

Figure 2-1 Front-panel General Features


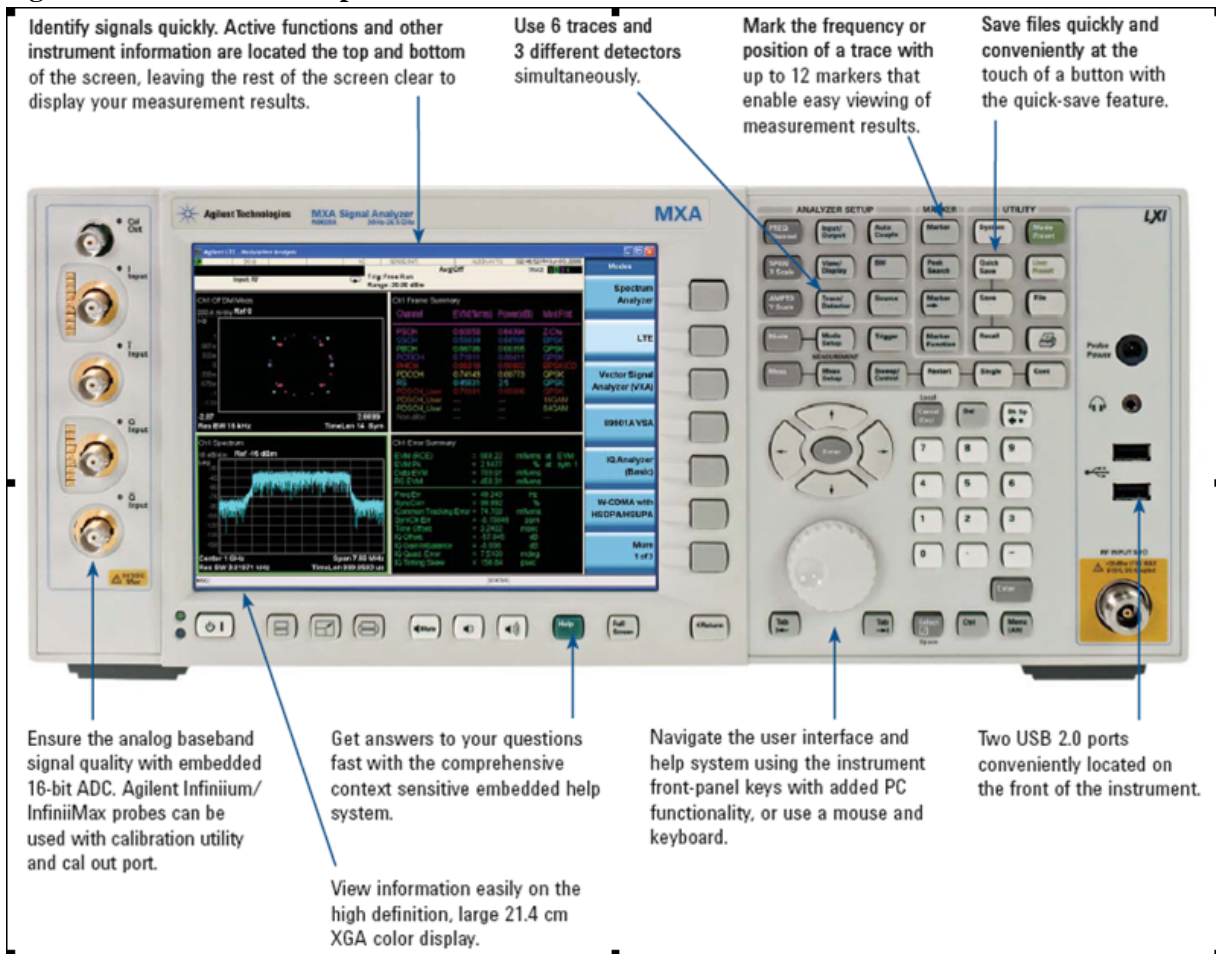


Figure 2-2 Rear-panel Features

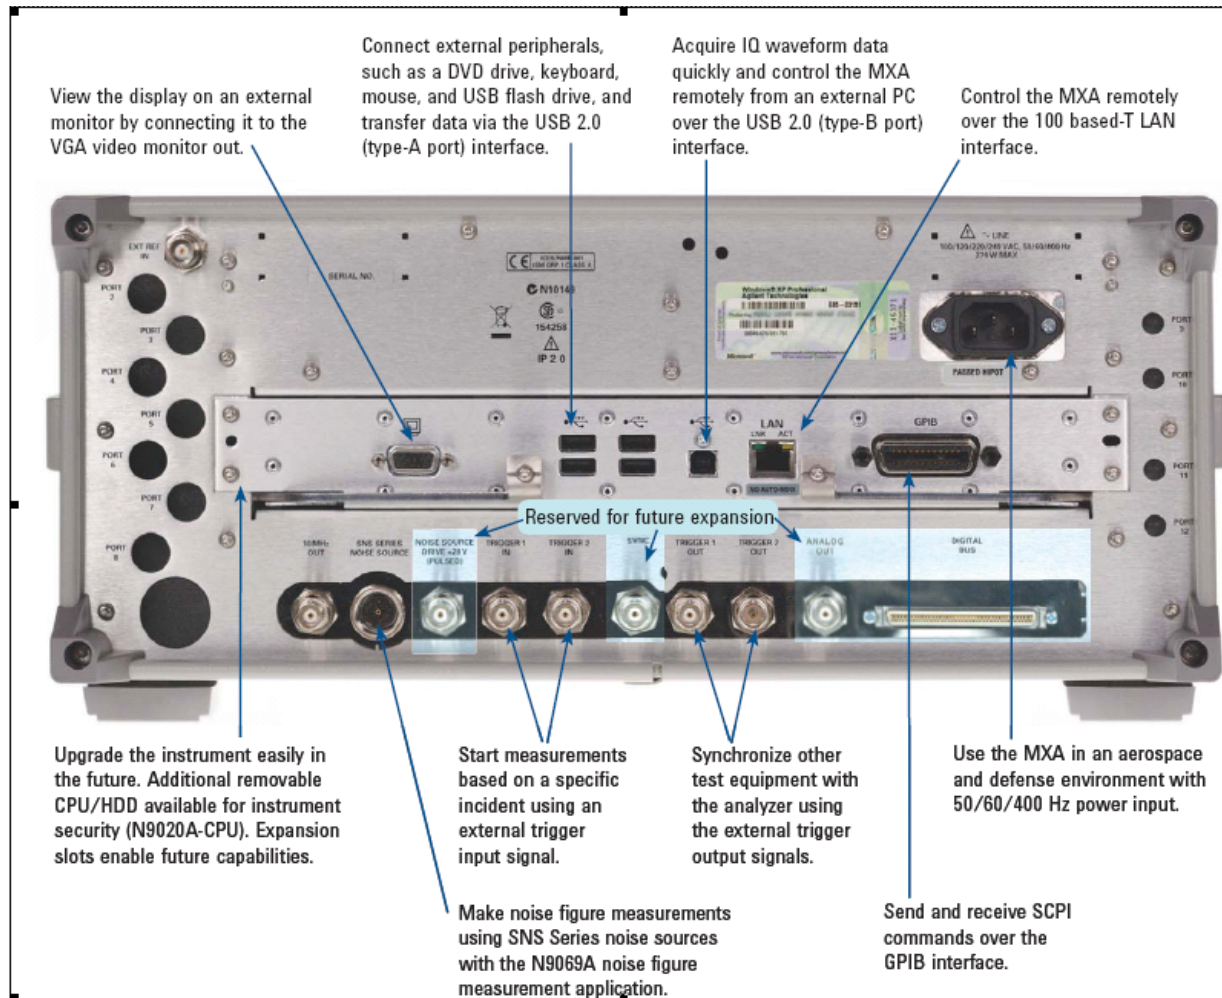

Installing Application Software

When you want to install a measurement application after your initial hardware purchase, you actually only need to license it. All of the available applications are loaded in your analyzer at the time of purchase.

So when you purchase an application, you will receive an entitlement certificate that is used to obtain a license key for that particular measurement application. Enter the license key that you obtain into the N9020A Signal Analyzer to activate the new measurement application. See below for more information.

For the latest information on Agilent Signal Analyzer measurement applications and upgrade kits, visit the following internet URL.

http://www.agilent.com/find/sa_upgrades

Viewing a License Key

Measurement personalities purchased with your instrument have been installed and activated at the factory before shipment. The instrument requires a unique **License Key** for every measurement application purchased. The license key is a hexadecimal string that is specific to your measurement application, instrument model number and serial number. It enables you to install, or reactivate that particular application.

Press **System, Show, System** to display which measurement applications are currently licensed in your analyzer.

Go to the following location to view the license keys for the installed measurement applications:

C:\Programing Files\Agilent\Licensing

NOTE You may want to keep a copy of your license key in a secure location. You can print out a copy of the display showing the license numbers to do this. If you should lose your license key, call your nearest Agilent Technologies service or sales office for assistance.

Obtaining and Installing a License Key

If you purchase an additional application that requires installation, you will receive an “Entitlement Certificate” which may be redeemed for a license key for one instrument. Follow the instructions that accompany the certificate to obtain your license key.

Installing a license key for the selected application can be done automatically using a USB memory device. To do this, you would put the license file on the USB memory device at the root level. Follow the instructions that come with your software installation kit.

Installing a license key can also be done manually using the license management application in the instrument. It is found through the instrument front panel keys at **System, Licensing. . .**, or internally at C:\Programming Files\Agilent\Licensing.

NOTE You can also use these procedures to reinstall a license key that has been accidentally deleted, or lost due to a memory failure.

Missing and Old Measurement Application Software

All the software applications were loaded at the time of original instrument manufacture. It is a good idea to regularly update your software with the latest available version. This assures that you get any improvements and expanded functionality that is available.

Because the software was loaded at the initial purchase, there may be additional measurement applications that are now available. If the application you are interested in licensing is not available, you will need to do a software update. (Press **System, Show, System.**)


Check the Agilent internet website for the latest software versions available for downloading:

http://www.agilent.com/find/mxa_software

http://www.agilent.com/find/exa_software

You must load the updated software package into the analyzer from a USB drive, or directly from the internet. An automatic loading program is included with the files.

Front-Panel Features

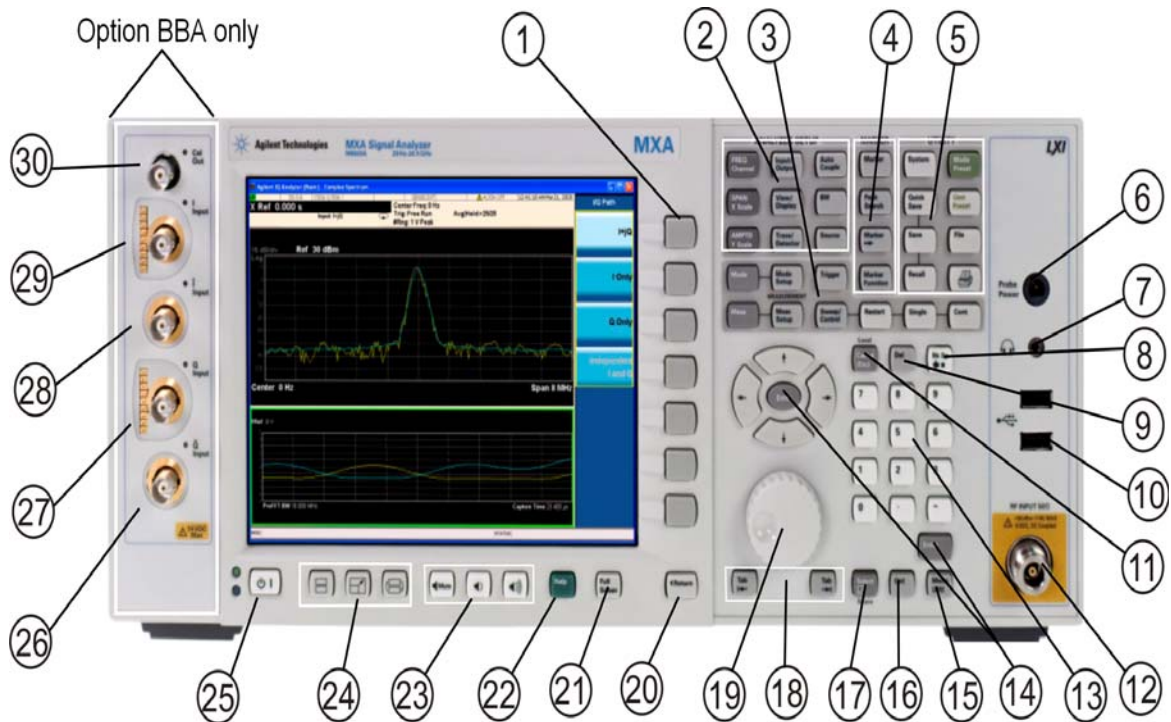

| Item | | Description |
|------|---------------------|---|
| # | Name | |
| 1 | Menu Keys | Key labels appear to the left of the menu keys to identify the current function of each key. The displayed functions are dependent on the currently selected Mode and Measurement, and are directly related to the most recent key press. |
| 2 | Analyzer Setup Keys | These keys set the parameters used for making measurements in the current Mode and Measurement. |
| 3 | Measurement Keys | These keys select the Mode, and the Measurement within the mode. They also control the initiation and rate of recurrence of measurements. |
| 4 | Marker Keys | Markers are often available for a measurement, to measure a very specific point/segment of data within the range of the current measurement data. |
| 5 | Utility Keys | These keys control system-wide functionality like: <ul style="list-style-type: none"> • instrument configuration information and I/O setup, • printer setup and printing, • file management, save and recall, • instrument presets. |
| 6 | Probe Power | Supplies power for external high frequency probes and accessories. |
| 7 | Headphones Output | Headphones can be used to hear any available audio output. |

About the Analyzer
Front-Panel Features

| Item | | Description |
|------|------------------------|--|
| # | Name | |
| 8 | Back Space Key | Press this key to delete the previous character when entering alphanumeric information. It also works as the Back key in Help and Explorer windows. |
| 9 | Delete Key | Press this key to delete files, or to perform other deletion tasks. |
| 10 | USB Connectors | Standard USB 2.0 ports, Type A. Connect to external peripherals such as a mouse, keyboard, DVD drive, or hard drive. |
| 11 | Local/Cancel/(Esc) Key | <p>If you are in remote operation, Local:</p> <ul style="list-style-type: none"> • returns instrument control from remote back to local (the front panel). • turns the display on (if it was turned off for remote operation). • can be used to clear errors. (Press the key once to return to local control, and a second time to clear error message line.) <p>If you have not already pressed the units or Enter key, Cancel exits the currently selected function without changing its value.</p> <p>Esc works the same as it does on a pc keyboard. It:</p> <ul style="list-style-type: none"> • exits Windows dialogs • clears errors • aborts printing • cancels operations. |
| 12 | RF Input | Connector for inputting an external signal. Make sure that the total power of all signals at the analyzer input does <i>not</i> exceed +30 dBm (1 watt). |
| 13 | Numeric Keypad | Enters a specific numeric value for the current function. Entries appear on the upper left of the display, in the measurement information area. |
| 14 | Enter and Arrow Keys | <p>The Enter key terminates data entry when either no unit of measure is needed, or you want to use the default unit.</p> <p>The arrow keys:</p> <ul style="list-style-type: none"> • Increment and decrement the value of the current measurement selection. • Navigate help topics. • Navigate, or make selections, within Windows dialogs. • Navigate within forms used for setting up measurements. • Navigate within tables. <hr/> <p>NOTE The arrow keys cannot be used to move a mouse pointer around on the display.</p> <hr/> |
| 15 | Menu/ (Alt) Key | Alt works the same as a pc keyboard. Use it to change control focus in Windows pull-down menus. |
| 16 | Ctrl Key | Ctrl works the same as a pc keyboard. Use it to navigate in Windows applications, or to select multiple items in lists. |
| 17 | Select / Space Key | Select is also the Space key and it has typical pc functionality. For example, in Windows dialogs, it selects files, checks and unchecks check boxes, and picks radio button choices. It opens a highlighted Help topic. |
| 18 | Tab Keys | Use these keys to move between fields in Windows dialogs. |

| Item | | Description |
|------|----------------------|---|
| # | Name | |
| 19 | Knob | Increments and decrements the value of the current active function. |
| 20 | Return Key | Exits the current menu and returns to the previous menu. Has typical pc functionality. |
| 21 | Full Screen Key | Pressing this key turns off the softkeys to maximize the graticule display area. |
| 22 | Help Key | Initiates a context-sensitive Help display for the current Mode. Once Help is accessed, pressing a front panel key brings up the help topic for that key function. |
| 23 | Speaker Control Keys | Enables you to increase or decrease the speaker volume, or mute it. |
| 24 | Window Control Keys | These keys select between single or multiple window displays. They zoom the current window to fill the data display, or change the currently selected window. They can be used to switch between the Help window navigation pane and the topic pane. |
| 25 | Power Standby/ On | <p>Turns the analyzer on. A green light indicates power on. A yellow light indicates standby mode.</p> <hr/> <p>NOTE</p> <p>The front-panel switch is a standby switch, <i>not</i> a LINE switch (disconnecting device). The analyzer continues to draw power even when the line switch is in standby.</p> <p>The main power cord can be used as the system disconnecting device. It disconnects the mains circuits from the mains supply.</p> <hr/> |
| 26 | Q Input | Input port for the Q channel when in differential mode. ^a |
| 27 | Q Input | Input port for the Q channel for either single or differential mode. ^a |
| 28 | I Input | Input port for the I channel when in differential mode. ^a |
| 29 | I Input | Input port for the I channel for either single or differential mode. ^a |
| 30 | Cal Out | Output port for probe calibration data. ^a |

- a. Status of the LED indicates whether the current state of the port is active (green) or is not in use (dark).

Overview of key types

The keys labeled **FREQ Channel**, **System**, and **Marker Functions** are all examples of front-panel keys. Most of the dark or light gray keys access menus of functions that are displayed along the right side of the display. These displayed key labels are next to a column of keys called menu keys.

Menu keys list functions based on which front-panel key was pressed last. These functions are also dependant on the current selection of measurement application (**Mode**) and measurement (**Meas**).

About the Analyzer

Front-Panel Features

If the numeric value of a menu key function can be changed, it is called an active function. The function label of the active function is highlighted after that key has been selected. For example, press **AMPTD Y Scale**. This calls up the menu of related amplitude functions. The function labeled **Ref Level** (the default selected key in the Amplitude menu) is highlighted. **Ref Level** also appears in the upper left of the display in the measurement information area. The displayed value indicates that the function is selected and its value can now be changed using any of the data entry controls.

Some menu keys have multiple choices on their label, such as **On/Off** or **Auto/Man**. The different choices are selected by pressing the key multiple times. Take an Auto/Man type of key as an example. To select the function, press the menu key and notice that Auto is underlined and the key becomes highlighted. To change the function to manual, press the key again so that Man is underlined. If there are more than two settings on the key, keep pressing it until the desired selection is underlined.

When a menu first appears, one key label is highlighted to show which key is the default selection. If you press **Marker Function**, the **Marker Function Off** key is the menu default key, and is highlighted.


Some of the menu keys are grouped together by a yellow bar running behind the keys near the left side or by a yellow border around the group of keys. When you press a key within the yellow region, such as **Marker Noise**, the highlight moves to that key to show it has been selected. The keys that are linked are related functions, and only one of them can be selected at any one time. For example, a marker can only have one marker function active on it. So if you select a different function it turns off the previous selection. If the current menu is two pages long, the yellow bar or border could include keys on the second page of keys.



In some key menus, a key label is highlighted to show which key has been selected from multiple available choices. And the menu is immediately exited when you press one of the other keys. For example, when you press the **Select Trace** key (in the **Trace/Detector** menu), it brings up its own menu of keys. The **Trace 1** key is highlighted. When you press the **Trace 2** key, the highlight moves to that key and the screen returns to the **Trace/Detector** menu.

If a displayed key label shows a small solid-black arrow tip pointing to the right, it indicates that additional key menus are available. If the arrow tip is not filled in solid then pressing the key the first time selects that function. Now the arrow is solid and pressing it again brings up an additional menu of settings.

Display Annotations

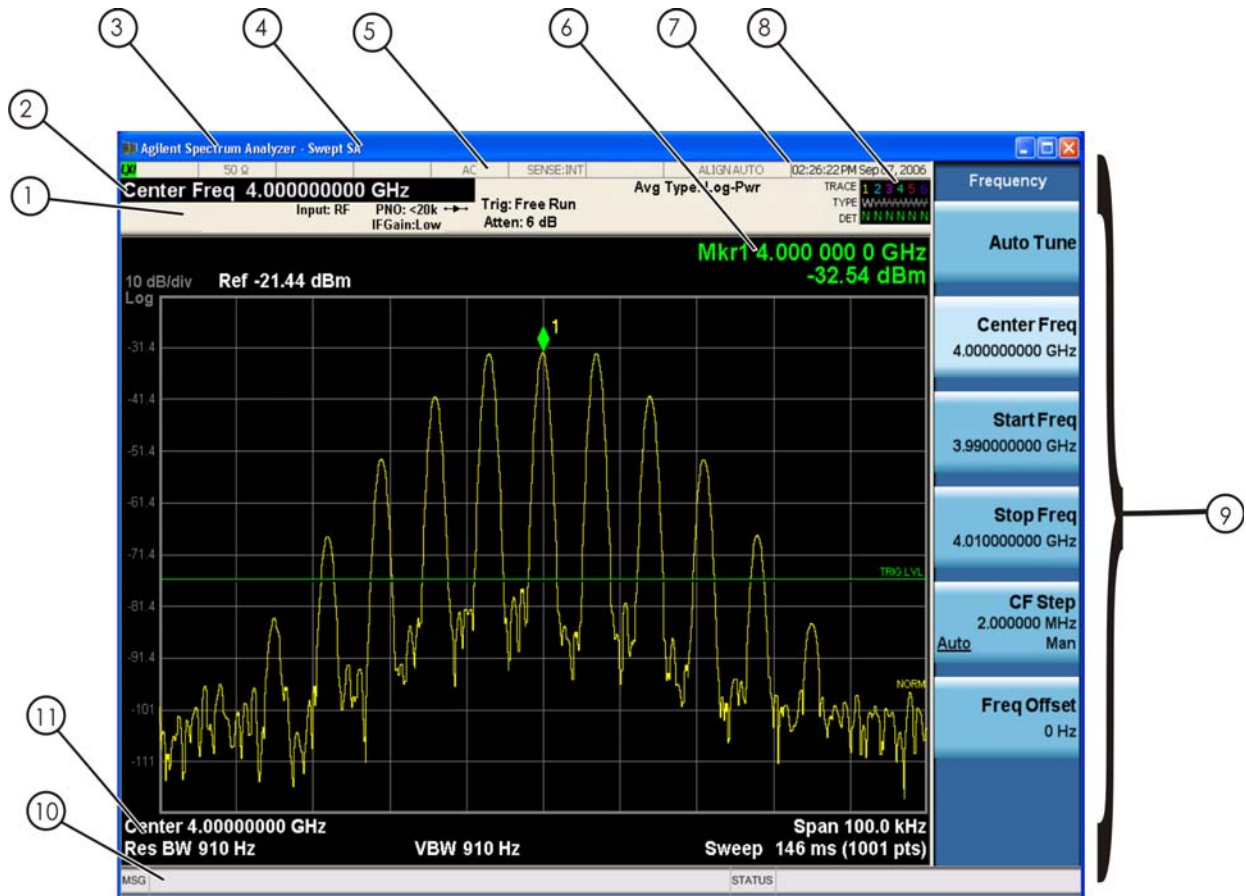This section describes the display annotation as it is on the Spectrum Analyzer Measurement Application display. Other measurement application modes have some annotation differences.




| Item | Description | Function Keys |
|------|--|---|
| 1 | Measurement bar - Shows general measurement settings and information.   Indicates single/continuous measurement. Some measurements include limits that the data is tested against. A Pass/Fail indication may be shown in the lower left of the measurement bar. | All the keys in the Analyzer Setup part of the front panel. |
| 2 | Active Function (measurement bar) - when the current active function has a settable numeric value, it is shown here. | Currently selected front panel key. |
| 3 | Banner - shows the name of the selected application that is currently running. | Mode |
| 4 | Measurement title - shows title information for the current measurement, or a title that you created for the measurement. | Meas View/Display, Display, Title |

About the Analyzer
Display Annotations

| Item | Description | Function Keys |
|------|---|---|
| 5 | Settings panel - displays system information that is not specific to any one application. <ul style="list-style-type: none"> • Input/Output status - green LXI indicates the LAN is connected. RLTS indicate Remote, Listen, Talk, SRQ • Input impedance and coupling • Selection of external frequency reference • Setting of automatic internal alignment routine | Local and System, I/O Config Input/Output, Amplitude, System and others |
| 6 | Active marker frequency, amplitude or function value | Marker |
| 7 | Settings panel - time and date display. | System, Control Panel |
| 8 | Trace and detector information | Trace/Detector, Clear Write (W) Trace Average (A) Max Hold (M) Min Hold (m) Trace/Detector, More, Detector, Average (A) Normal (N) Peak (P) Sample (S) Negative Peak (p) |
| 9 | Key labels that change based on the most recent key press. | Softkeys |
| 10 | Displays information, warning and error messages. Message area - single events, Status area - conditions | |
| 11 | Measurement settings for the data currently being displayed in the graticule area. In the example above: center frequency, resolution bandwidth, video bandwidth, frequency span, sweep time and number of sweep points. | Keys in the Analyzer Setup part of the front panel. |

Rear-Panel Features

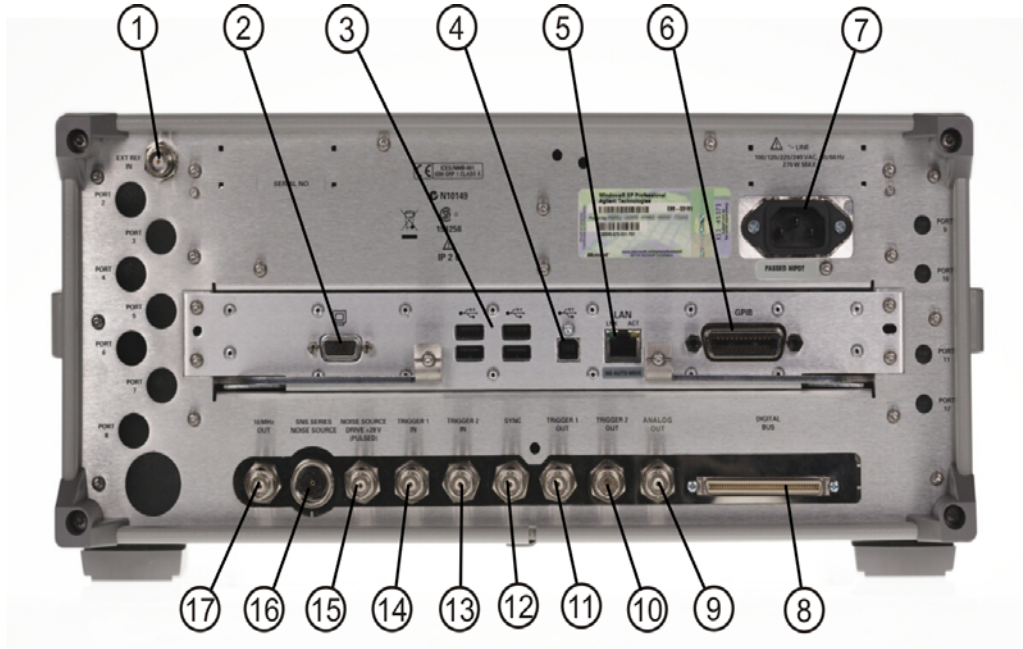


| Item | | Description |
|------|------------------|---|
| # | Name | |
| 1 | EXT REF IN | Input for an external frequency reference signal: For MXA – 1 to 50 MHz For EXA – 10 MHz. |
| 2 | MONITOR | Allows connection of an external VGA monitor. |
| 3 | USB Connectors | Standard USB 2.0 ports, Type A. Connect to external peripherals such as a mouse, keyboard, printer, DVD drive, or hard drive. |
| 4 | USB Connector | USB 2.0 port, Type B. USB TMC (test and measurement class) connects to an external pc controller to control the instrument and for data transfers over a 480 Mbps link. |
| 5 | LAN | A TCP/IP Interface that is used for remote analyzer operation. |
| 6 | GPIB | A General Purpose Interface Bus (GPIB, IEEE 488.1) connection that can be used for remote analyzer operation. |
| 7 | Line power input | The AC power connection. See the product specifications for more details. |
| 8 | Digital Bus | Reserved for future use. |
| 9 | Analog Out | For use with the Analog Demod measurement application. |
| 10 | TRIGGER 2 OUT | A trigger output used to synchronize other test equipment with the analyzer. Configurable from the Input/Output keys. |

About the Analyzer
Rear-Panel Features

| Item | | Description |
|------|--------------------------------------|---|
| # | Name | |
| 11 | TRIGGER 1 OUT | A trigger output used to synchronize other test equipment with the analyzer. Configurable from the Input/Output keys. |
| 12 | Sync | Reserved for future use. |
| 13 | TRIGGER 2 IN | Allows external triggering of measurements. |
| 14 | TRIGGER 1 IN | Allows external triggering of measurements. |
| 15 | Noise Source Drive +28 V (Pulsed) | For use with Agilent 346A, 346B, and 346C Noise Sources |
| 16 | SNS Series Noise Source | For use with Agilent N4000A, N4001A, N4002A Smart Noise Sources (SNS). |
| 17 | 10 MHz OUT | An output of the analyzer internal 10 MHz frequency reference signal. It is used to lock the frequency reference of other test equipment to the analyzer. |

Window Control Keys

The instrument provides three front-panel keys for controlling windows. They are **Multi Window**, **Zoom**, and **Next Window**. These are all “immediate action” keys.

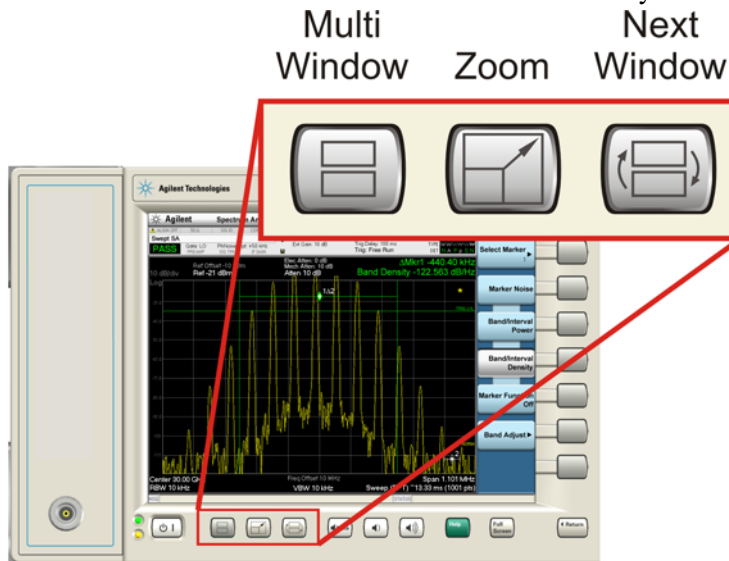

Multi-Window

The **Multi Window** front-panel key is not used at this time. It is there to support future functionality.

Key Path Front-panel key

Zoom

Zoom is a toggle function. Pressing once Zooms the selected window; pressing again un-zooms.

When Zoom is on for a window, that window gets the entire primary display area. The zoomed window, since it is the selected window, is outlined in green.

Zoom is local to each Measurement. Each Measurement remembers its Zoom state. The Zoom state of each Measurement is part of the Mode’s state.

The state of zoom, and which window is zoomed, is saved in State.

Data acquisition and processing for the other windows continues while a window is zoomed, as does all SCPI communication with the other windows.

Remote Command :DISPlay:WINDow:FORMat:TILE|ZOOM

Example :DISP:WIND:FORM:ZOOM sets zoomed
:DISP:WIND:FORM:TILE sets un-zoomed

Preset TILE

Next Window

This key selects the next window of the current view. When this key is selected in Help Mode, it toggles focus between the table of contents window and the topic pane window.

| | |
|-----------------------|---|
| Remote Command | :DISPlay:WINDow[:SElect] <number> :DISPlay:WINDow[:SElect] ? |
| Example | :DISP:WIND 1 |
| Preset | 1 |
| Min | 1 |
| Max | If <number> is greater than the number of windows, limit to <number of windows> |

Selected Window

One and only one window is always selected.

If a window is not selected, its boundary is gray. The selected window has a green boundary.

If a window in a multi-window display is zoomed it is still outlined in green. If there is only one window, the green outline is not used. This allows you to distinguish between a zoomed window and a display with only one window.

The selected window is local to each Measurement. Each Measurement remembers which window is selected. The selected window for each Measurement is remembered in Mode state.

Navigating Windows

When the Next Window key is pressed, the next window in the order of precedence (see below) becomes selected. If the selected window was zoomed, the next window will also be zoomed.


The window navigation does NOT use the arrow and select keys. Those are reserved for navigation within a window.

Mouse and Keyboard Control

If you do not have access to the instrument front-panel, there are several ways that a mouse and PC Keyboard can give you access to functions normally accessed using the front panel keys.


Right-Click

If you plug in a mouse and right-click on the analyzer screen, a menu appears as below:

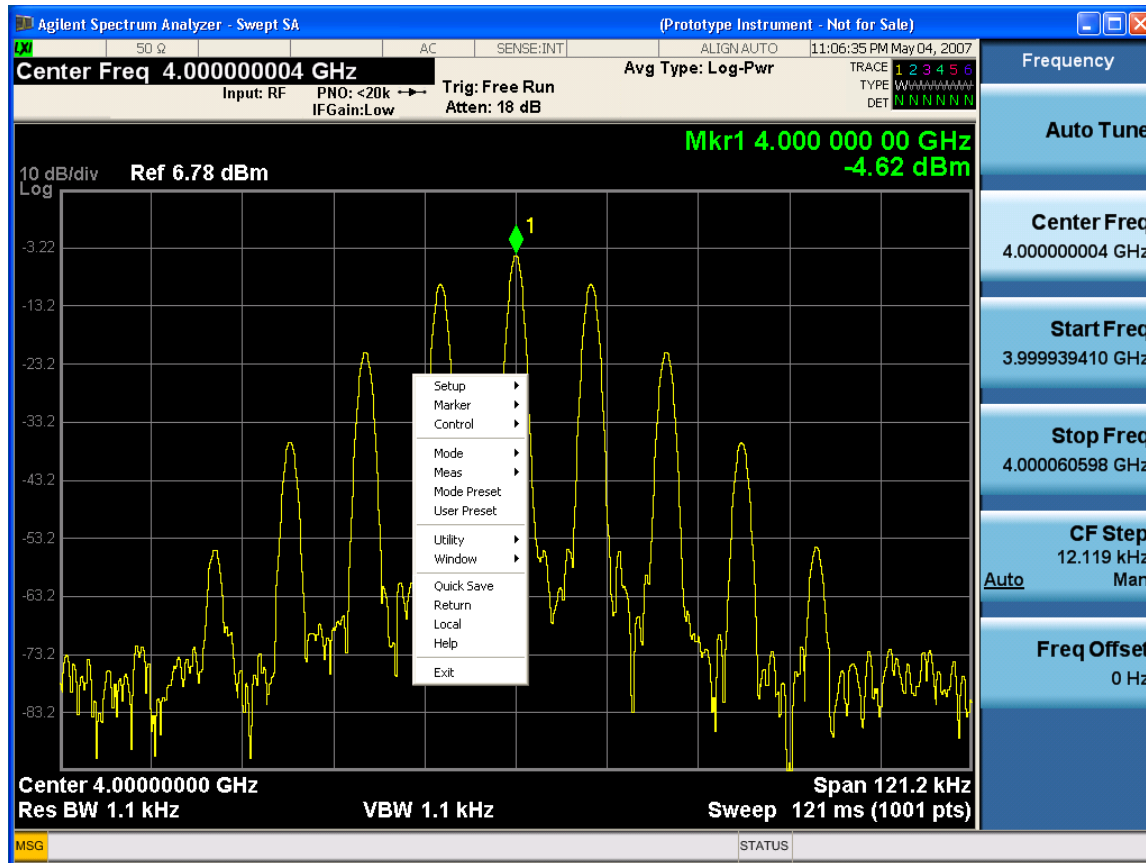


Placing the mouse on one of the rows marked with a right arrow symbol causes that row to expand, as for example below where the mouse is hovered over the “Utility” row:

About the Analyzer Mouse and Keyboard Control

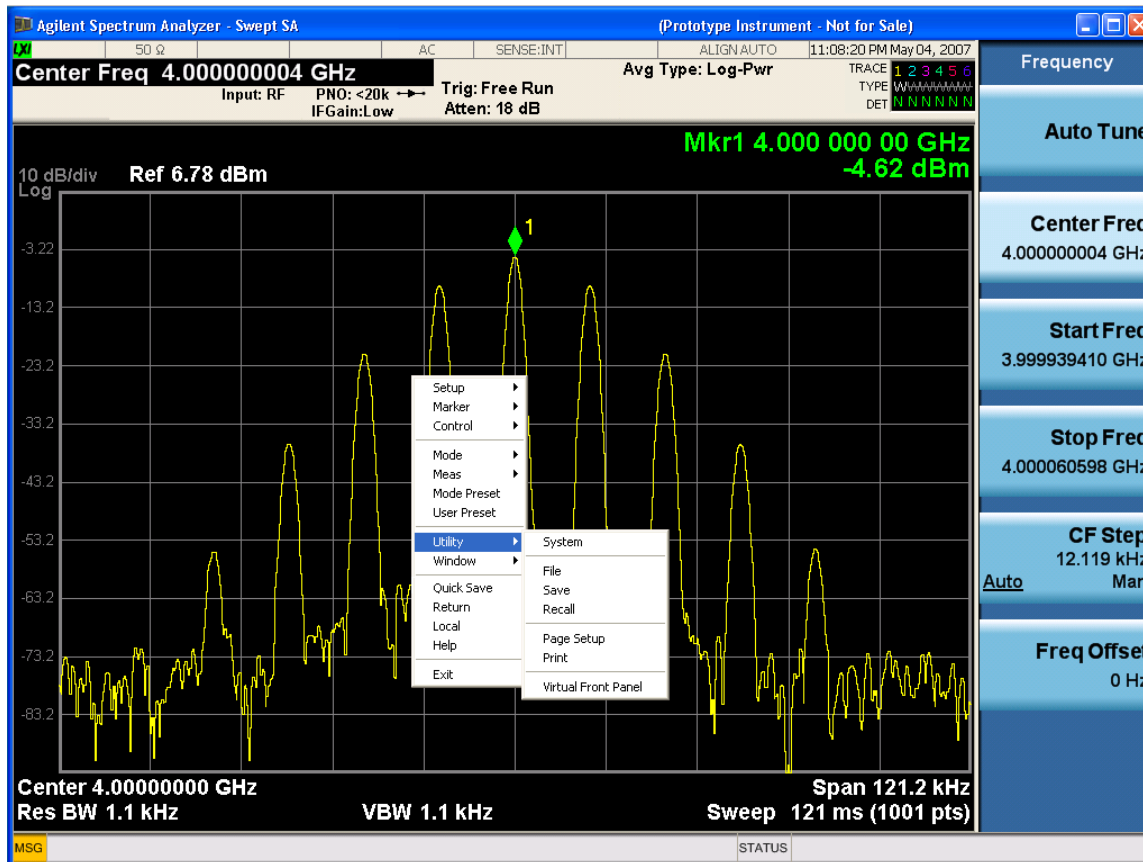

This method can be used to access any of the front-panel keys by using a mouse; as for example if you are accessing the instrument through Remote Desktop.

The array of keys thus available is shown below:

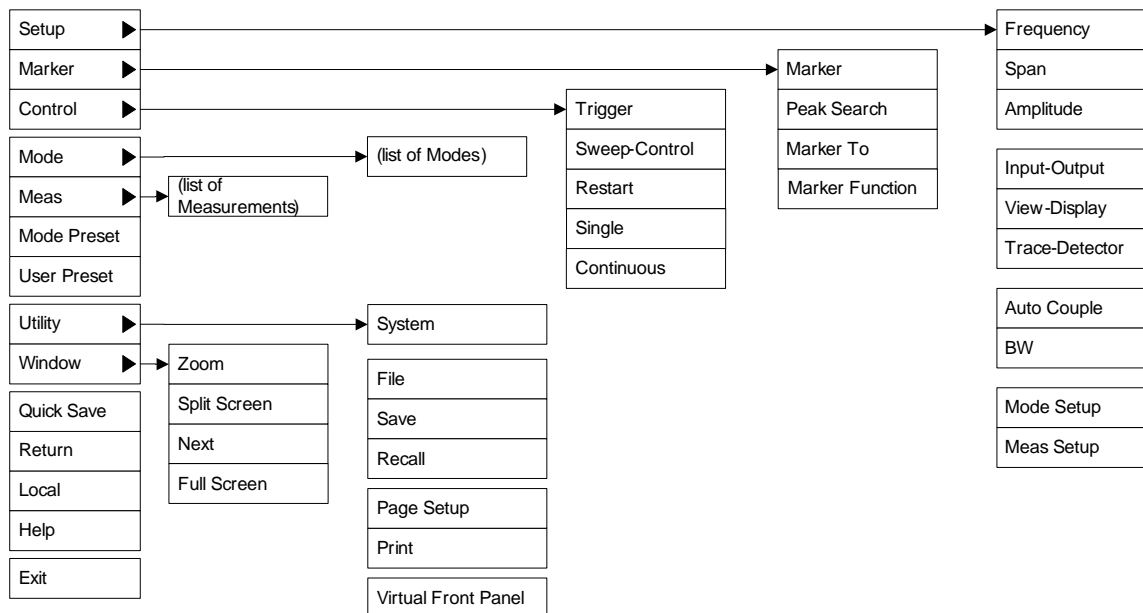

PC Keyboard

If you have a PC keyboard plugged in (or via Remote Desktop), certain key codes on the PC keyboard map to front-panel keys on the GPSA front panel. These key codes are shown below:


| | |
|-----------------|--------------|
| Frequency | CTRL+SHIFT+F |
| Span | CTRL+SHIFT+S |
| Amplitude | CTRL+SHIFT+A |
| Input/Output | CTRL+SHIFT+O |
| View/Display | CTRL+SHIFT+V |
| Trace/Detector | CTRL+ALT+T |
| Auto Couple | CTRL+SHIFT+C |
| Bandwidth | CTRL+ALT+B |
| Source | CTRL+SHIFT+E |
| Marker | CTRL+SHIFT+K |
| Peak Search | CTRL+SHIFT+P |
| Marker To | CTRL+ALT+N |
| Marker Function | CTRL+ALT+F |
| System | CTRL+SHIFT+Y |
| QuickSave | CTRL+SHIFT+Q |
| Save | CTRL+S |
| Recall | CTRL+R |
| Mode Preset | CTRL+M |
| User Preset | CTRL+U |
| Print | CTRL+P |
| File | CTRL+F |
| Mode | CTRL+SHIFT+M |
| Measure | CTRL+ALT+M |
| Mode Setup | CTRL+ALT+E |
| Meas Setup | CTRL+ALT+U |
| Trigger | CTRL+SHIFT+T |
| Sweep/Control | CTRL+SHIFT+W |
| Restart | CTRL+ALT+R |
| Single | CTRL+ALT+S |

About the Analyzer
Mouse and Keyboard Control

| | |
|-------------|---------------|
| Cont | CTRL+ALT+C |
| Zoom | CTRL+SHIFT+Z |
| NextWindow | CTRL+SHIFT+N |
| SplitScreen | CTRL+SHIFT+L |
| FullScreen | CTRL+SHIFT+B |
| Return | CTRL+SHIFT+R |
| Mute | Mute |
| Inc Audio | Volume Up |
| Dec Audio | Volume Down |
| Help | F1 |
| Control | CTRL |
| Alt | ALT |
| Enter | Return |
| Cancel | Esc |
| Del | Delete |
| Backspace | Backspace |
| Select | Space |
| Up Arrow | Up |
| Down Arrow | Down |
| Left Arrow | Left |
| Right Arrow | Right |
| Menu key1 | CTRL+SHIFT+F1 |
| Menu key2 | CTRL+SHIFT+F2 |
| Menu key3 | CTRL+SHIFT+F3 |
| Menu key4 | CTRL+SHIFT+F4 |
| Menu key5 | CTRL+SHIFT+F5 |
| Menu key6 | CTRL+SHIFT+F6 |
| Menu key7 | CTRL+SHIFT+F7 |
| Backspace | BACKSPACE |
| Enter | ENTER |
| Tab | Tab |
| 1 | 1 |

| | |
|---|---|
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |

Here is a pictorial view of the table above:

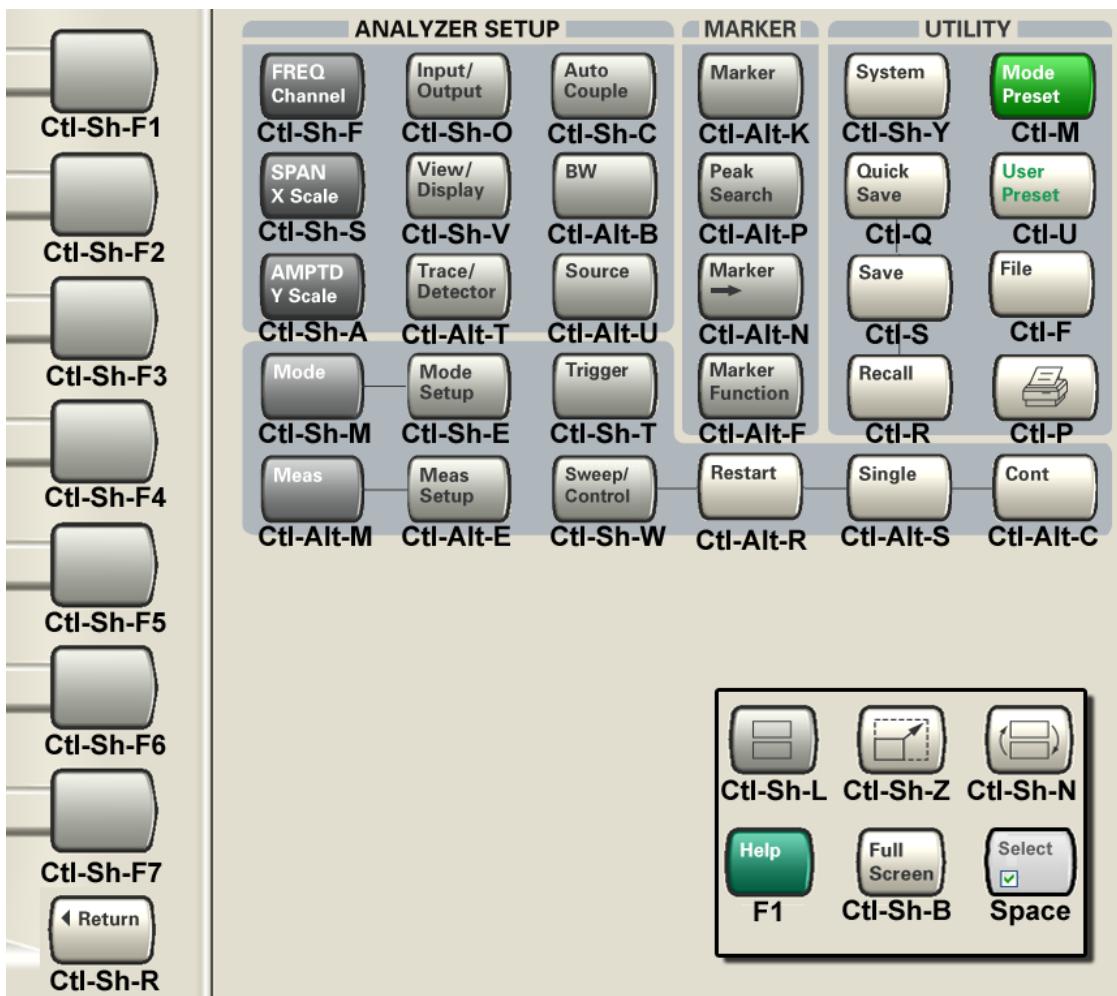

About the Analyzer
Mouse and Keyboard Control

3

About the cdma2000 Measurement Application

This chapter provides overall information on cdma2000 communications systems, and describes cdma2000 measurements made by the analyzer.

What Does the cdma2000 Application Do?

This analyzer can be used for testing a cdma2000 transmitter and IS95 signals with the Radio configuration 1 and 2. It is manufactured according to the following standards documents:

- 3GPP2 C.S0002 Physical Layer Standard for cdma2000 Spread Spectrum Systems
- 3GPP2 C. S0010 Recommended Minimum Performance Standards for cdma2000 Spread Spectrum Base Stations
- 3GPP2 C. S0011 Recommended Minimum Performance Standards for cdma2000 Spread Spectrum Mobile Stations

These documents define complex, multi-part measurements used to create and maintain an interference-free environment. For example, the documents include standardized test methods for the measurement of power in a carrier, a spectrum emission mask, and other critical measurements.

The instrument automatically makes these measurements using the measurement methods and limits defined in the documents. The detailed results displayed by the measurements enable you to analyze cdma2000 system performance. You may alter the measurement parameters for specialized analysis. For infrastructure test, the analyzer will test transmitters of base stations in a non-interfering manner using a coupler or power splitter.

This analyzer makes the following measurements of cdma2000 signals:

- Channel Power
- Adjacent Channel Power (ACP)
- Spectrum Emission Mask
- Spurious Emissions
- Occupied BW
- Code Domain
- Modulation Accuracy (Composite RHO)
- Power Stat CCDF
- QPSK EVM
- Monitor Spectrum
- IQ Waveform (Time Domain)

If the option BBA is installed, the ability to analyzer baseband I/Q signal characteristics of mobile and base station transmitters is provided. The Baseband I/Q Input is available in the following measurements:

- Code Domain
- Modulation Accuracy (Composite RHO)

- Power Stat CCDF
- QPSK EVM
- IQ Waveform (Time Domain)

This chapter provides introductory information about the programming documentation included with your product.

What Programming Information is Available?

The following resources are available to help you create programs for automating your X-Series measurements:

- X-Series Programmer's Guide (N9020-90084):
 - Chapter 1 , "Introduction to Programming X-Series Applications"
The Introduction includes sections on the following:
 - What Programming Information is Available? (Similar to this section.)
 - Using Embedded Help for Programming
 - Communicating SCPI Using Telnet
 - Chapter 2 , "Programming Fundamentals"
Programming Fundamentals includes sections on the following:
 - SCPI Language Basics
 - Improving Measurement Speed
 - Programming in C Using the VTL
 - Chapter 3 , "Measurement Synchronization with LXI-B"
 - Chapter 5 , "Installing Application Software"
 - Chapter 4 , "Programming Examples"
- Getting Started Guide (N9020-90074):

A copy of the Getting Started Guide is shipped with your analyzer, and is also available online:
<http://cp.literature.agilent.com/litweb/pdf/N9020-90074.pdf>


The Getting Started Guide has valuable sections related to programming including:

 - Configuring instrument LAN Hostname, IP Address, and Gateway
 - Using the Remote Desktop connection to operate the instrument front panel remotely
 - Using the Embedded Web Server Telnet connection to communicate SCPI
- Embedded Help in your Instrument - embedded Help provides SCPI command details associated with all front-panel and soft keys.
- User's Reference manuals - Printable PDF versions of User's References for all Measurement Applications are provided on the Documentation CD ROM, and in the instrument here:
C:\Program Files\Agilent\SignalAnalysis\Infrastructure\Help\bookfiles
- Application Notes- Printable PDF versions of many Application Notes are provided on the Documentation CD ROM, and in the instrument here:
C:\Program Files\Agilent\SignalAnalysis\Infrastructure\Help\otherdocs

STATUS Subsystem (No equivalent front panel keys)


The following graphics show the current MXA Status Register Subsystem implementation.

MXA Status Byte Register System

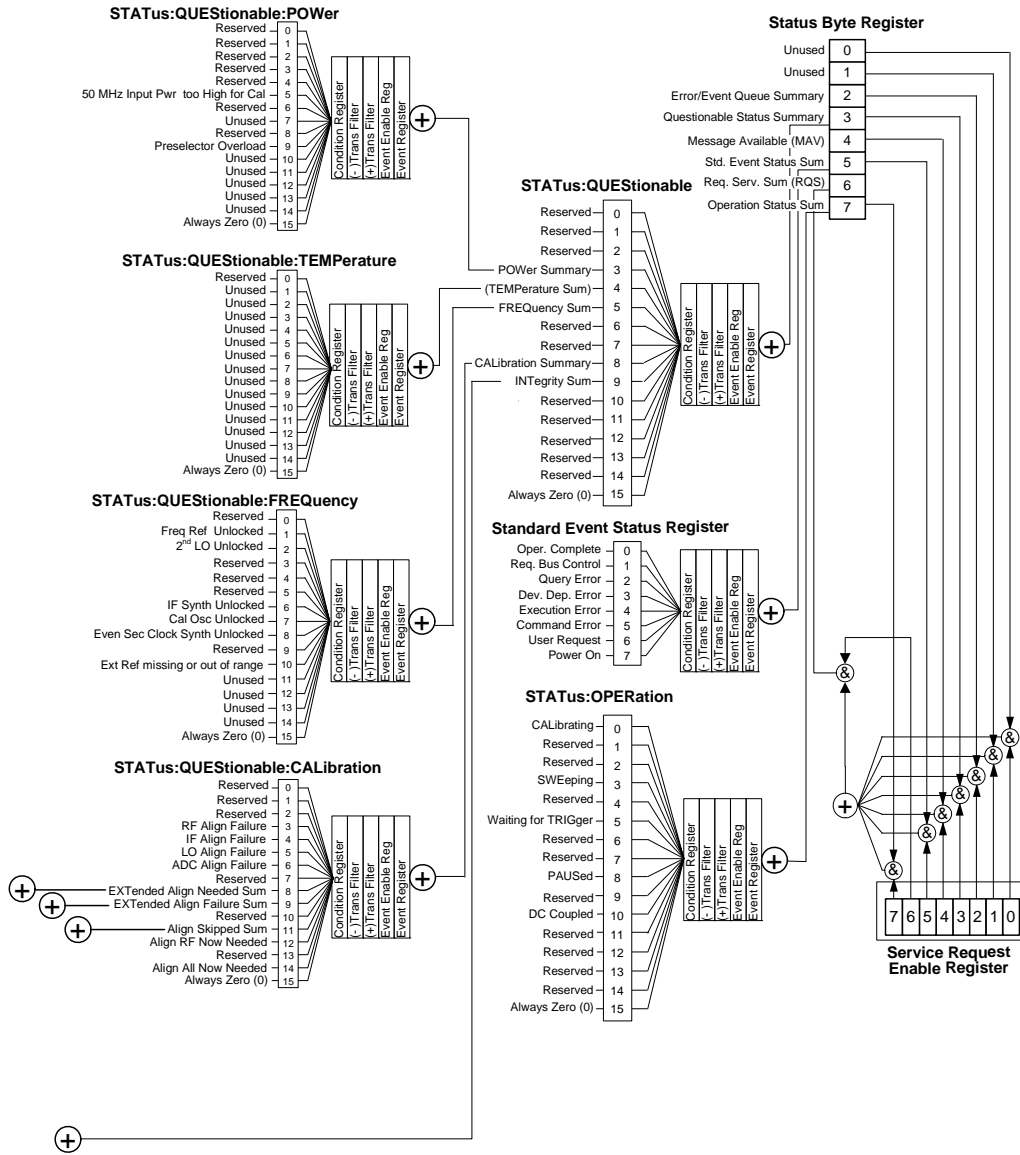

Programming the Analyzer STATus Subsystem (No equivalent front panel keys)

Additional Registers:

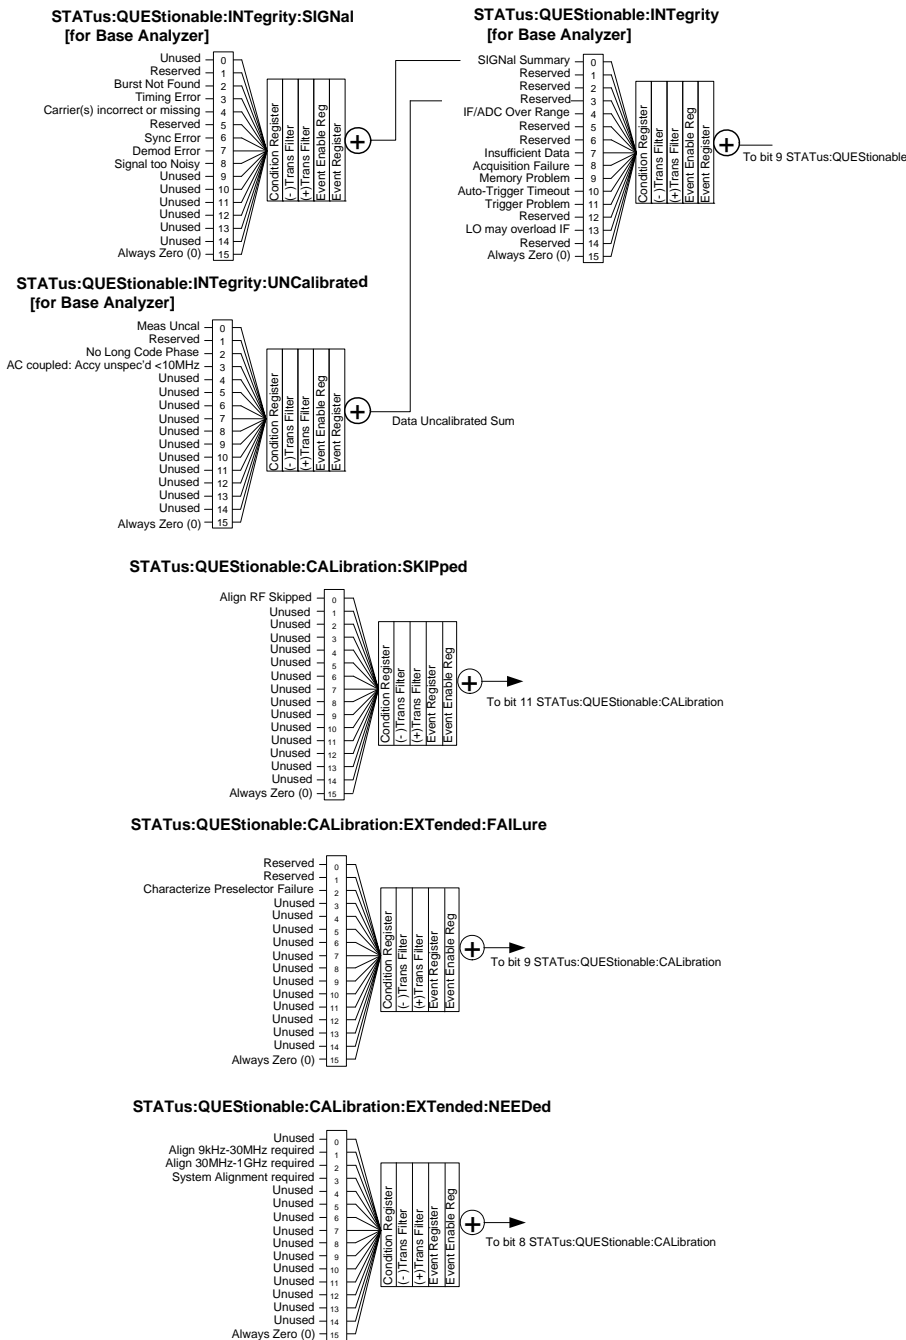

Detailed Description

The STATus subsystem remote commands set and query the status hardware registers. This system of registers monitors various events and conditions in the instrument. Software written to control the instrument may need to monitor some of these events and conditions.

All status register commands are sequential. Most commands can be started immediately and will overlap with any existing commands that are already running. This is not true of status commands. All the commands in the spectrum analyzer are assumed to be overlapped unless a command description specifically says that it is sequential.

What Are Status Registers

The status system contains multiple registers that are arranged in a hierarchical order. The lower-level status registers propagate their data to the higher-level registers in the data structures by means of summary bits. The status byte register is at the top of the hierarchy and contains general status information for the instrument's events and conditions. All other individual registers are used to determine the specific events or conditions. For a diagram of the registers and their interconnections, see above.

The operation and questionable status registers are sets of registers that monitor the overall instrument condition. They are accessed with the STATUS:OPERation and STATUS:QUEStionable commands in the STATUS command subsystem. Each register set is made up of five registers:

- **Condition Register** It reports the real-time state of the signals monitored by this register set. There is no latching or buffering for a condition register.
- **Positive Transition Register** This filter register controls which signals will set a bit in the event register when the signal makes a low to high transition (when the condition bit changes from 0 to 1).
- **Negative Transition Register** This filter register controls which signals will set a bit in the event register when the signal makes a high to low transition (when the condition bit changes from 1 to 0).
- **Event Register** It latches any signal state changes, in the way specified by the filter registers. Bits in the event register are never cleared by signal state changes. Event registers are cleared when read. They are also cleared by *CLS and by presetting the instrument.
- **Event Enable Register** It controls which of the bits, being set in the event register, will be summarized as a single output for the register set. Summary bits are then used by the next higher register.

The STATUS:QUEStionable registers report abnormal operating conditions. The status register hierarchy is:

1. The summary outputs from the six STATUS:QUEStionable:<keyword> detail registers are inputs to the STATUS:QUEStionable register.
2. The summary output from the STATUS:QUEStionable register is an input to the Status Byte Register.

The STATUS:OPERation register set has no summarized inputs. The inputs to the STATUS:OPERation:CONDition register indicate the real time state of the instrument. The STATUS:OPERation:EVENT register summary output is an input to the Status Byte Register.

What Are Status Register SCPI Commands

Most monitoring of the instrument conditions is done at the highest level using the IEEE common commands indicated below. Complete command descriptions are available in the IEEE commands section at the beginning of the language reference. Individual status registers can be set and queried using the commands in the STATUS subsystem of the language reference.

- *CLS (clear status) clears the status byte by emptying the error queue and clearing all the event

registers.

- *ESE, *ESE? (event status enable) sets and queries the bits in the enable register part of the standard event status register.
- *ESR? (event status register) queries and clears the event register part of the standard event status register.
- *OPC, *OPC? (operation complete) sets the standard event status register to monitor the completion of all commands. The query stops any new commands from being processed until the current processing is complete, then returns a '1'.
- *PSC, *PSC? (power-on state clear) sets the power-on state so that it clears the service request enable register and the event status enable register at power on.
- *SRE, *SRE? (service request enable) sets and queries the value of the service request enable register.
- *STB? (status byte) queries the value of the status byte register without erasing its contents.

How to Use the Status Registers

A program often needs to be able to detect and manage error conditions or changes in instrument status. There are two methods you can use to programmatically access the information in status registers:

- The polling method
- The service request (SRQ) method

In the polling method, the instrument has a passive role. It only tells the controller that conditions have changed when the controller asks the right question. In the SRQ method, the instrument takes a more active role. It tells the controller when there has been a condition change without the controller asking. Either method allows you to monitor one or more conditions.

The polling method works well if you do not need to know about changes the moment they occur. The SRQ method should be used if you must know immediately when a condition changes. To detect a change using the polling method, the program must repeatedly read the registers.

Use the SRQ method when:

- you need time-critical notification of changes
- you are monitoring more than one device which supports SRQs
- you need to have the controller do something else while waiting
- you can't afford the performance penalty inherent to polling

Use polling when:

- your programming language/development environment does not support SRQ interrupts
- you want to write a simple, single-purpose program and don't want the added complexity of setting up an SRQ handler
- To monitor a condition:
 1. Determine which register contains the bit that reports the condition.

2. Send the unique SCPI query that reads that register.
3. Examine the bit to see if the condition has changed.

You can monitor conditions in different ways.

- Check the current instrument hardware and firmware status.

Do this by querying the condition registers which continuously monitor status. These registers represent the current state of the instrument. Bits in a condition register are updated in real time. When the condition monitored by a particular bit becomes true, the bit is set to 1. When the condition becomes false, the bit is reset to 0.

- Monitor a particular condition (bit).


You can enable a particular bit(s), using the event enable register. The instrument will then monitor that particular condition(s). If the bit becomes true (0 to 1 transition) in the event register, it stays set until the event register is cleared. Querying the event register allows you to detect that this condition occurred even if the condition no longer exists. The event register can only be cleared by querying it or sending the *CLS command.

- Monitor a particular type of change in a condition (bit).
 - The transition registers are preset to register if the condition goes from 0 to 1 (false to true, or a positive transition).
 - This can be changed so the selected condition is detected if the bit goes from 1 to 0 (true to false, or a negative transition).
 - It can also be set for both types of transitions occurring.
 - Or it can be set for neither transition. If both transition registers are set to 0 for a particular bit position, that bit will not be set in the event register for either type of change.

Using a Status Register

Each bit in a register is represented by a numerical value based on its location. See figure below. This number is sent with the command to enable a particular bit. If you want to enable more than one bit, you would send the sum of all the bits that you want to monitor.

Figure: Status Register Bit Values

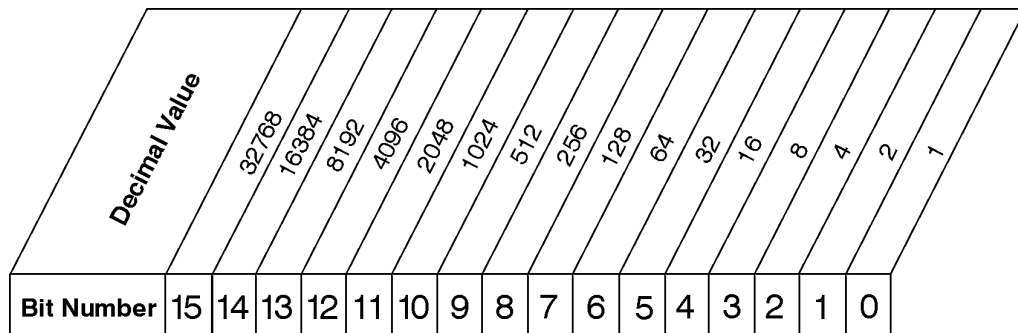

STATus:OPERation:ENABle < num >
 STATus:OPERation:ENABle?

Standard Operation Event Enable Register

ck730a

Bit 15 is not used to report status.

Example 1:

1. To enable bit 0 and bit 6 of standard event status register, you would send the command *ESE 65 because $1 + 64 = 65$.
2. The results of a query are evaluated in a similar way. If the *STB? command returns a decimal value of 140, ($140 = 128 + 8 + 4$) then bit 7 is true, bit 3 is true and bit 2 is true.

Example 2:

1. Suppose you want to know if an Auto-trigger Timeout occurs, but you only cared about that specific condition. So you would want to know what was happening with bit 10 in the Status Questionable Integrity register, and not about any other bits.
2. It's usually a good idea to start by clearing all the status registers with *CLS.
3. Sending the STAT:QUES:INT:ENAB 1024 command lets you monitor only bit 10 events, instead of the default monitoring all the bits in the register. The register default is for positive transition events (0 to 1 transition). That is, when an auto-trigger timeout occurs. If instead, you wanted to know when the Auto-trigger timeout condition is cleared, then you would set the STAT:QUES:INT:PTR 0 and the STAT:QUES:INT:NTR 32767.
4. So now the only output from the Status Questionable Integrity register comes from a bit 10 positive transition. That output goes to the Integrity Sum bit 9 of the Status Questionable register.
5. You can do a similar thing with this register to only look at bit 9 using, STAT:QUES:ENAB 512.
6. The Status Questionable register output goes to the "Status Questionable Summary" bit 3 of the Status Byte Register. The output from this register can be enabled using the *SRE 8 command.
7. Finally, you would use the serial polling functionality available for the particular bus/software that you are using to monitor the Status Byte Register. (You could also use *STB? to poll the Status Byte Register.)

Using the Service Request (SRQ) Method

Your language, bus and programming environment must be able to support SRQ interrupts. (For example, BASIC used with VXI-11.3 (GPIB over LAN). When you monitor a condition with the SRQ method, you must:

1. Determine which bit monitors the condition.
2. Determine how that bit reports to the request service (RQS) bit of the status byte.
3. Send SCPI commands to enable the bit that monitors the condition and to enable the summary bits that report the condition to the RQS bit.
4. Enable the controller to respond to service requests.

When the condition changes, the instrument sets its RQS bit. The controller is informed of the change as soon as it occurs. As a result, the time the controller would otherwise have used to monitor the condition can be used to perform other tasks. Your program determines how the controller responds to the SRQ.

Generating a Service Request To use the SRQ method, you must understand how service requests are generated. Bit 6 of the status byte register is the request service (RQS) bit. The *SRE command is used

to configure the RQS bit to report changes in instrument status. When such a change occurs, the RQS bit is set. It is cleared when the status byte register is queried using *SRE? (with a serial poll.) It can be queried without erasing the contents with *STB?.

When a register set causes a summary bit in the status byte to change from 0 to 1, the instrument can initiate the service request (SRQ) process. However, the process is only initiated if both of the following conditions are true:

- The corresponding bit of the service request enable register is also set to 1.
- The instrument does not have a service request pending. (A service request is considered to be pending between the time the instrument's SRQ process is initiated and the time the controller reads the status byte register.)

The SRQ process sets the SRQ true. It also sets the status byte's request service (RQS) bit to 1. Both actions are necessary to inform the controller that the instrument requires service. Setting the SRQ line only informs the controller that some device on the bus requires service. Setting the RQS bit allows the controller to determine which instrument requires service.

If your program enables the controller to detect and respond to service requests, it should instruct the controller to perform a serial poll when the SRQ is set true. Each device on the bus returns the contents of its status byte register in response to this poll. The device whose RQS bit is set to 1 is the device that requested service.

When you read the instrument's status byte register with a serial poll, the RQS bit is reset to 0. Other bits in the register are not affected.


If the status register is configured to SRQ on end-of-measurement and the measurement is in continuous mode, then restarting a measurement (INIT command) can cause the measuring bit to pulse low. This causes an SRQ when you have not actually reached the "end-of-measurement" condition. To avoid this:

1. Set INITiate:CONTinuous off.
2. Set/enable the status registers.
3. Restart the measurement (send INIT).

Status Register System

The hardware status registers are combined to form the instrument status system. Specific status bits are assigned to monitor various aspects of the instrument operation and status. See the diagram of the status system above for information about the bit assignments and status register interconnections.

The Status Byte Register

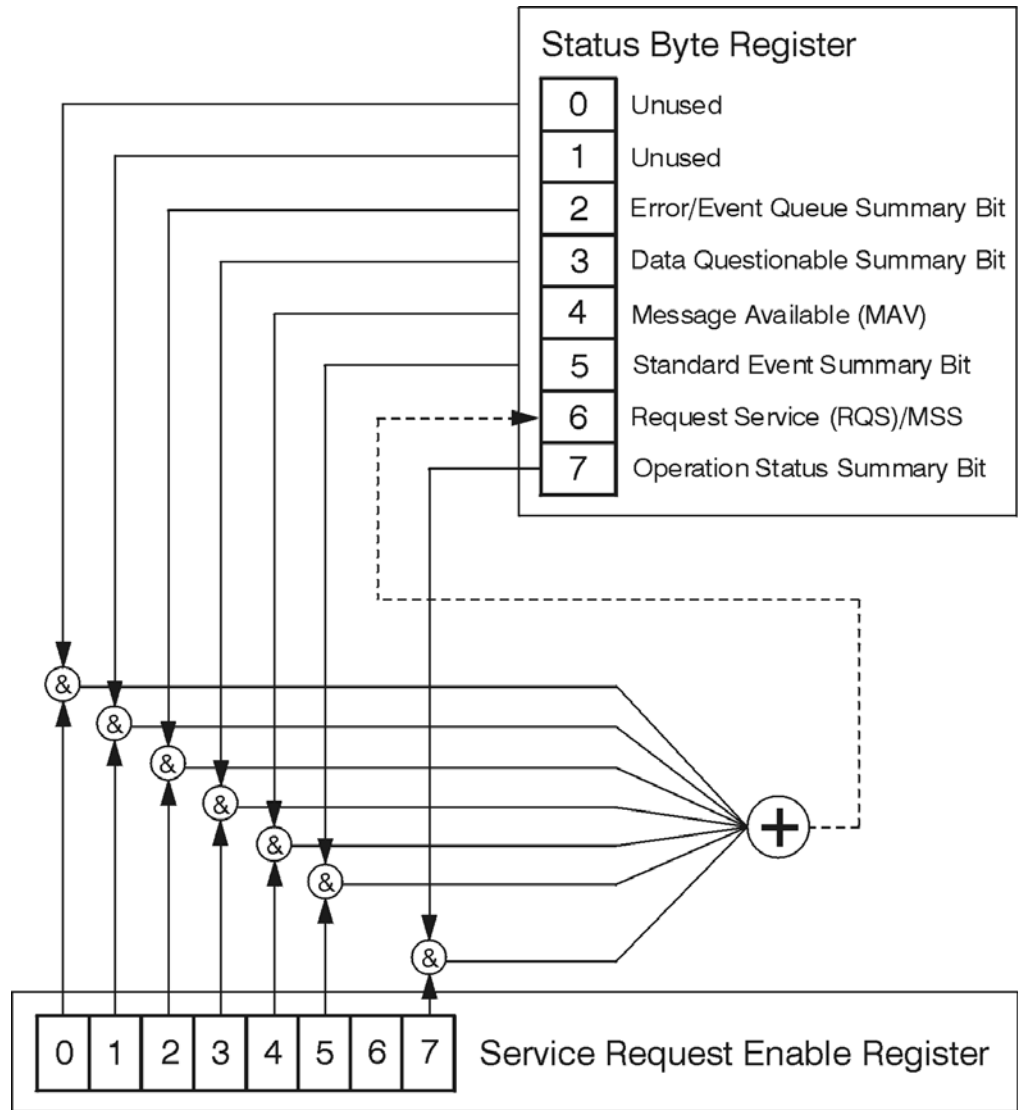

ck776a

The RQS bit is read and reset by a serial poll. The same bit position (MSS) is read, non-destructively by the *STB? command. If you serial poll bit 6 it is read as RQS, but if you send *STB it reads bit 6 as MSS. For more information refer to IEEE 488.2 standards, section 11.

STATus Subsystem (No equivalent front panel keys)

| Bit Number | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|-------------|---------------------------------------|-----------------------------------|-----------------------------------|-------------------------|--------------------------------------|-------------------------------|--------|--------|
| Description | Standard Operation Status Summary Bit | Request Service (RQS) Summary Bit | Standard Event Status Summary Bit | Message Available (MAV) | Data Questionable Status Summary Bit | Error/Event Queue Summary Bit | Unused | Unused |

*STB?

Status Byte Register

ck725a

| Bit | Description |
|------|---|
| 0, 1 | These bits are always set to 0. |
| 2 | A 1 in this bit position indicates that the SCPI error queue is not empty which means that it contains at least one error message. |
| 3 | A 1 in this bit position indicates that the data questionable summary bit has been set. The data questionable event register can then be read to determine the specific condition that caused this bit to be set. |
| 4 | A 1 in this bit position indicates that the instrument has data ready in the output queue. There are no lower status groups that provide input to this bit. |
| 5 | A 1 in this bit position indicates that the standard event summary bit has been set. The standard event status register can then be read to determine the specific event that caused this bit to be set. |
| 6 | A 1 in this bit position indicates that the instrument has at least one reason to report a status change. This bit is also called the master summary status bit (MSS). |
| 7 | A 1 in this bit position indicates that the standard operation summary bit has been set. The standard operation event register can then be read to determine the specific condition that caused this bit to be set. |

To query the status byte register, send the command *STB?. The response is the weighted decimal sum of the bits that are set to 1. For example, if bit number 7 and bit number 3 are set to 1, the weighted decimal sum of the 2 bits is 128 plus 8. So the decimal value 136 is returned. The *STB command does not clear the status register.


In addition to the status byte register, the status byte group also contains the service request enable register. This register lets you choose which bits in the status byte register will trigger a service request.

Send the *SRE <integer> command where <integer> is the sum of the decimal values of the bits you want to enable plus the decimal value of bit 6. For example, assume that you want to enable bit 7 so that whenever the standard operation status register summary bit is set to 1 it will trigger a service request. Send the command *SRE 192 (because $192 = 128 + 64$). You must always add 64 (the numeric value of

Programming the Analyzer
STATUS Subsystem (No equivalent front panel keys)

RQS bit 6) to your numeric sum when you enable any bits for a service request. The command *SRE? returns the decimal value of the sum of the bits previously enabled with the *SRE <integer> command.

The service request enable register presets to zeros (0).

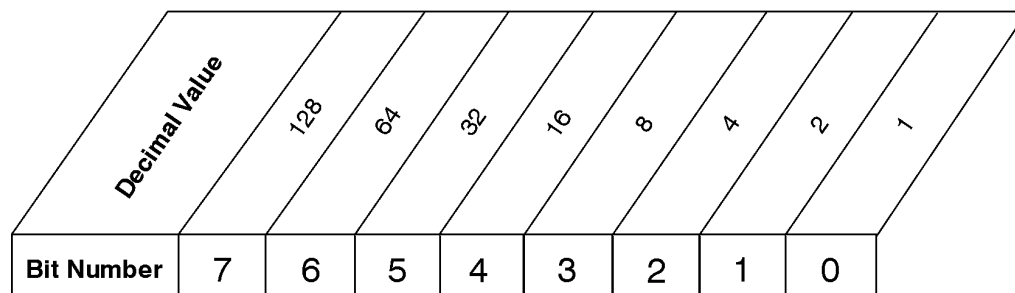


*SRE <num>
 *SRE?


Service Request Enable Register

ck726a

Standard Event Status Register

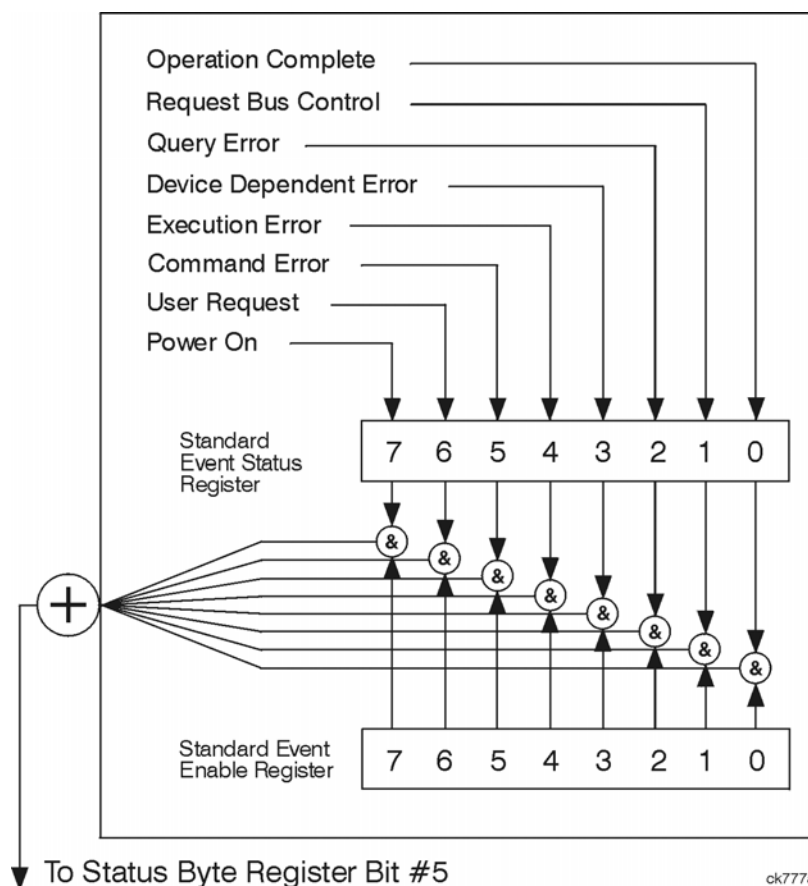

The standard event status register contains the following bits:

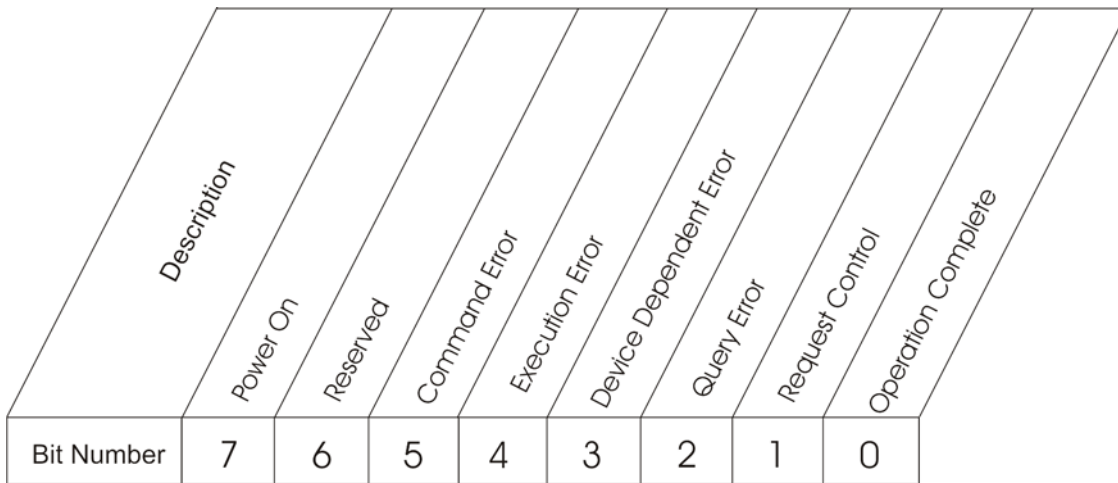

*ESR?

Standard Event Status Register

ck727a

| Bit | Description |
|-----|---|
| 0 | A 1 in this bit position indicates that all pending operations were completed following execution of the *OPC command. |
| 1 | This bit is for GPIB handshaking to request control. Currently it is set to 0 because there are no implementations where the spectrum analyzer controls another instrument. |
| 2 | A 1 in this bit position indicates that a query error has occurred. Query errors have SCPI error numbers from -499 to -400. |
| 3 | A 1 in this bit position indicates that a device dependent error has occurred. Device dependent errors have SCPI error numbers from -399 to -300 and 1 to 32767. |
| 4 | A 1 in this bit position indicates that an execution error has occurred. Execution errors have SCPI error numbers from -299 to -200. |
| 5 | A 1 in this bit position indicates that a command error has occurred. Command errors have SCPI error numbers from -199 to -100. |
| 6 | A 1 in this bit position indicates that the LOCAL key has been pressed. This is true even if the instrument is in local lockout mode. |
| 7 | A 1 in this bit position indicates that the instrument has been turned off and then on. |


The standard event status register is used to determine the specific event that set bit 5 in the status byte register. To query the standard event status register, send the command *ESR?. The response is the weighted decimal sum of the bits which are enabled (set to 1). For example, if bit number 7 and bit number 3 are enabled, the weighted decimal sum of the 2 bits is 128 plus 8. So the decimal value 136 is returned.

In addition to the standard event status register, the standard event status group also contains a standard

Programming the Analyzer
STATus Subsystem (No equivalent front panel keys)

event status enable register. This register lets you choose which bits in the standard event status register will set the summary bit (bit 5 of the status byte register) to 1. Send the *ESE <integer> command where <integer> is the sum of the decimal values of the bits you want to enable. For example, to enable bit 7 and bit 6 so that whenever either of those bits is set to 1, the standard event status summary bit of the status byte register will be set to 1, send the command *ESE 192 (128 + 64). The command *ESE? returns the decimal value of the sum of the bits previously enabled with the *ESE <integer> command.

The standard event status enable register presets to zeros (0).

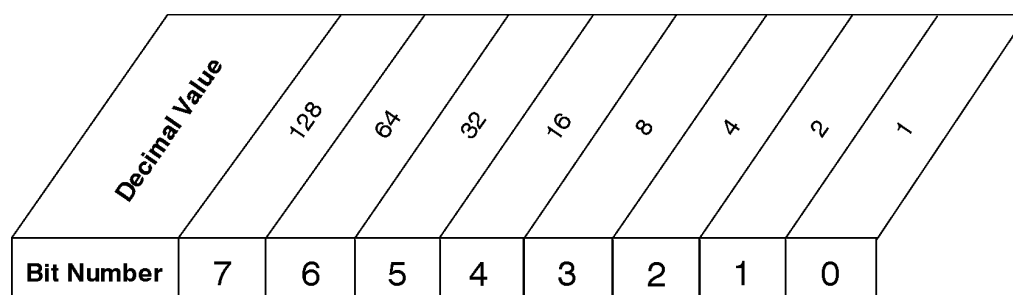

*ESE <num>
 *ESE?

Standard Event Status Enable Register

ck728a

Operation and Questionable Status Registers

The operation and questionable status registers are registers that monitor the overall instrument condition. They are accessed with the STATus:OPERation and STATus:QUESTionable commands in the STATus command subsystem

Operation Status Register The operation status register monitors the current instrument measurement state. It checks to see if the instrument is calibrating, sweeping, or waiting for a trigger. For more information see the *OPC? command located in the IEEE Common Commands section.

| Bit | Condition | Operation |
|-----|---------------------|--|
| 0 | Calibrating | The instrument is busy executing its Align Now process |
| 3 | Sweeping | The instrument is busy taking a sweep. |
| 4 | Measuring | The instrument is busy making a measurement. Measurements often require multiple sweeps. They are initiated by keys under the MEASURE key or with the MEASure group of commands. The bit is currently only valid for Modes: ESA/PSA: Spectrum Analysis, Phase Noise, and ESA: Bluetooth, cdmaOne, GSM |
| 5 | Waiting for trigger | The instrument is waiting for the trigger conditions to be met, then it will trigger a sweep or measurement. |
| 8 | Paused | The instrument is paused (waiting) because you have pressed the Pause Meas Control key or send the INITiate:PAUSE command. Bit is currently only valid for Modes: ESA/PSA: Spectrum Analysis, Phase Noise, and ESA: Bluetooth, cdmaOne, GSM |

Questionable Status Register

The questionable status register monitors the instrument's condition to see if anything questionable has happened to it. It is looking for anything that might cause an error or a bad measurement like a hardware problem, an out of calibration situation, or a unusual signal. All the bits are summary bits from lower-level event registers.

| Bit | Condition | Operation |
|-----|---------------------|---|
| 3 | Power summary | The instrument hardware has detected a power unlevelled condition. |
| 4 | Temperature summary | The instrument is still warming up. |
| 5 | Frequency summary | The instrument hardware has detected an unlocked condition or a problem with the external frequency reference. |
| 8 | Calibration summary | The instrument has detected a hardware problem while doing the automatic internal alignment process. |
| 9 | Integrity summary | The instrument has detected a questionable measurement condition such as: bad timing, bad signal/data, timeout problem, signal overload, or "meas uncal". |

STATus Subsystem Command Descriptions

The STATus subsystem controls the SCPI-defined instrument status reporting structures. Each status register has a set of five commands used for querying or masking that particular register.

Numeric values for bit patterns can be entered using decimal or hexadecimal representations. (i.e. 0 to 32767 is equivalent to #H0 to #H7FFF. It is also equal to all ones, 11111111111111) See the SCPI Basics information about using bit patterns for variable parameters.

Operation Register

Operation Condition Query This query returns the decimal value of the sum of the bits in the Status Operation Condition register.

The data in this register is continuously updated and reflects the current conditions.

| | |
|-----------------------------------|------------------------------|
| Mode | All |
| Remote Command | :STATus:OPERation:CONDition? |
| Example | STAT:OPER:COND? |
| Preset | 0 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Operation Enable This command determines which bits in the Operation Event register, will set the Operation Status Summary bit (bit 7) in the Status Byte Register. The variable <integer> is the sum of the

Programming the Analyzer
STATUS Subsystem (No equivalent front panel keys)

decimal values of the bits you want to enable.

The preset condition is to have all bits in this enable register set to 0. To have any Operation Events reported to the Status Byte Register, one or more bits need to be set to 1.

R&D: There is little reason to have any bits enabled for typical manufacturing tests. Enabling bits in this register would be of more value during test development.

| | |
|-----------------------------------|---|
| Mode | All |
| Remote Command | :STATus:OPERation:ENABle <integer> :STATus:OPERation:ENABle? |
| Example | STAT:OPER:ENAB 1 Sets the register so that Align Now operation is reported to the Status Byte Register. |
| Preset | 0 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Operation Event Query This query returns the decimal value of the sum of the bits in the Operation Event register.

The register requires that the associated PTR or NTR filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

| | |
|-----------------------------------|----------------------------|
| Mode | All |
| Remote Command | :STATus:OPERation[:EVENT]? |
| Example | STAT:OPER? |
| Preset | 0 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Operation Negative Transition This command determines which bits in the Operation Condition register will set the corresponding bit in the Operation Event register when the condition register bit has a negative transition (1 to 0). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|-----------------------|---|
| Mode | All |
| Remote Command | :STATus:OPERation:NTRansition <integer> :STATus:OPERation:NTRansition? |

| | |
|-----------------------------------|---|
| Example | STAT:OPER:NTR 1 Align Now operation complete is reported to the Status Byte Register. |
| Preset | 0 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Operation Positive Transition This command determines which bits in the Operation Condition register will set the corresponding bit in the Operation Event register when the condition register bit has a positive transition (0 to 1). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|-----------------------------------|--|
| Mode | All |
| Remote Command | :STATus:OPERation:PTRansition <integer> :STATus:OPERation:PTRansition? |
| Example | STAT:OPER:PTR 1 Align Now operation beginning is reported to the Status Byte Register. |
| Preset | 32767 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Preset the Status Byte

Sets bits in most of the enable and transition registers to their default state. It presets all the Transition Filters, Enable Registers, and the Error/Event Queue Enable. It has no effect on Event Registers, Error/Event QUEue, IEEE 488.2 ESE, and SRE Registers as described in IEEE Standard 488.2–1992, IEEE Standard Codes, Formats, Protocols and Common Commands for Use with ANSI/IEEE Std 488.1–1987. New York, NY, 1992.

| | |
|-----------------------|----------------|
| Remote Command | :STATus:PRESet |
| Example | STAT:PRES |

Questionable Register

Questionable Condition This query returns the decimal value of the sum of the bits in the Questionable Condition register.

Programming the Analyzer

STATus Subsystem (No equivalent front panel keys)

The data in this register is continuously updated and reflects the current conditions.

| | |
|-----------------------------------|---------------------------------|
| Mode | All |
| Remote Command | :STATus:QUEStionable:CONDition? |
| Example | STAT:QUES:COND? |
| Preset | 0 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Enable This command determines which bits in the Questionable Event register will set the Questionable Status Summary bit (bit3) in the Status Byte Register. The variable <integer> is the sum of the decimal values of the bits you want to enable.

The preset condition is all bits in this enable register set to 0. To have any Questionable Events reported to the Status Byte Register, one or more bits need to be set to 1. The Status Byte Event Register should be queried after each measurement to check the Questionable Status Summary (bit 3). If it is equal to 1, a condition during the test may have made the test results invalid. If it is equal to 0, this indicates that no hardware problem or measurement problem was detected by the analyzer.

| | |
|-----------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUEStionable:ENABLE 16 Sets the register so that temperature summary is reported to the Status Byte Register :STATus:QUEStionable:ENABLE? |
| Example | STAT:OPER:PTR 1 Align Now operation beginning is reported to the Status Byte Register. |
| Preset | 0 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Event Query This query returns the decimal value of the sum of the bits in the Questionable Event register.

The register requires that the associated PTR or NTR filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

| | |
|-----------------------|-------------------------------|
| Mode | All |
| Remote Command | :STATus:QUEStionable[:EVENT]? |
| Example | STAT:QUES? |
| Preset | 0 |

SCPI Status Bits/OPC Sequential command
 Dependencies

Questionable Negative Transition This command determines which bits in the Questionable Condition register will set the corresponding bit in the Questionable Event register when the condition register bit has a negative transition (1 to 0). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

Mode All

Remote Command :STATus:QUEStionable:NTRansition 16 Temperature summary
 'questionable cleared' will be reported to the Status Byte Register.
 :STATus:QUEStionable:NTRansition?

Example STAT:QUES:NTR 16 Temperature summary 'questionable cleared' is
 reported to the Status Byte Register.

Preset 0

Min 0

Max 32767

SCPI Status Bits/OPC Sequential command
 Dependencies

Questionable Positive Transition This command determines which bits in the Questionable Condition register will set the corresponding bit in the Questionable Event register when the condition register bit has a positive transition (0 to 1). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

Mode All

Remote Command :STATus:QUEStionable:PTRansition <integer>
 :STATus:QUEStionable:PTRansition?

Example STAT:QUES:PTR 16 Temperature summary 'questionable asserted'
 will be reported to the Status Byte Register.

Preset 32767

Min 0

Max 32767

SCPI Status Bits/OPC Sequential command
 Dependencies

Questionable Calibration Register

Questionable Calibration Condition This query returns the decimal value of the sum of the bits in the Questionable Calibration Condition register.

Programming the Analyzer

STATus Subsystem (No equivalent front panel keys)

The data in this register is continuously updated and reflects the current conditions.

| | |
|-----------------------|---|
| Mode | All |
| Remote Command | :STATus:QUESTionable:CALibration:CONDition? |
| Example | STAT:QUES:CAL:COND? |
| Preset | 0 |
| SCPI Status Bits/OPC | Sequential command |
| Dependencies | |

Questionable Calibration Enable This command determines which bits in the Questionable Calibration Condition Register will set bits in the Questionable Calibration Event register, which also sets the Calibration Summary bit (bit 8) in the Questionable Register. The variable <integer> is the sum of the decimal values of the bits you want to enable.

| | |
|-----------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:CALibration:ENABle <integer> :STATus:QUESTionable:CALibration:ENABle? |
| Example | STAT:QUES:CAL:ENAB 16384 Can be used to query if an alignment is needed, if you have turned off the automatic alignment process. |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC | Sequential command |
| Dependencies | |

Questionable Calibration Event Query This query returns the decimal value of the sum of the bits in the Questionable Calibration Event register.

NOTE: The register requires that the associated PTR or NTR filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

| | |
|-----------------------|---|
| Mode | All |
| Remote Command | :STATus:QUESTionable:CALibration[:EVENT]? |
| Example | STAT:QUES:CAL? |
| Preset | 0 |
| SCPI Status Bits/OPC | Sequential command |
| Dependencies | |

Questionable Calibration Negative Transition This command determines which bits in the Questionable Calibration Condition register will set the corresponding bit in the Questionable Calibration Event register when the condition register bit has a negative transition (1 to 0). The variable

<integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|--------------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUEStionable:CALibration:NTRansition <integer> :STATus:QUEStionable:CALibration:NTRansition? |
| Example | STAT:QUES:CAL:NTR 16384 Alignment is not required. |
| Preset | 0 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Calibration Positive Transition This command determines which bits in the Questionable Calibration Condition register will set the corresponding bit in the Questionable Calibration Event register when the condition register bit has a positive transition (0 to 1). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|--------------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUEStionable:CALibration:PTRansition <integer> :STATus:QUEStionable:CALibration:PTRansition? |
| Example | STAT:QUES:CAL:PTR 16384 Alignment is required. |
| Preset | 32767 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Calibration Skipped Register

Questionable Calibration Skipped Condition This query returns the decimal value of the sum of the bits in the Questionable Calibration Skipped Condition register.

NOTE The data in this register is continuously updated and reflects the current conditions.

| | |
|-----------------------|---|
| Mode | All |
| Remote Command | :STATus:QUEStionable:CALibration:SKIPped:CONDition? |
| Example | STAT:QUES:CAL:SKIP:COND? |

Programming the Analyzer
STATus Subsystem (No equivalent front panel keys)

Preset 0
 SCPI Status Bits/OPC Sequential command
 Dependencies

Questionable Calibration Skipped Enable This command determines which bits in the Questionable Calibration Skipped Condition Register will set bits in the Questionable Calibration Skipped Event register, which also sets bit 11 of the Questionable Calibration Register. The variable <integer> is the sum of the decimal values of the bits you want to enable.

Mode All
Remote Command :STATus:QUESTionable:CALibration:SKIpped:ENABle
 <integer>
 :STATus:QUESTionable:CALibration:SKIpped:ENABle?
 Example STAT:QUES:CAL:SKIP:ENAB 1 Can be used to query if an EMI
 alignment skipped condition is detected
 Preset 32767
 Min 0
 Max 32767
 SCPI Status Bits/OPC Sequential command
 Dependencies

Questionable Calibration Skipped Event Query This query returns the decimal value of the sum of the bits in the Questionable Calibration Event register.

NOTE The register requires that the associated PTR or NTR filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Mode All
Remote Command :STATus:QUESTionable:CALibration:SKIpped[:EVENT]?
 Example STAT:QUES:CAL:SKIP?
 Preset 0
 SCPI Status Bits/OPC Sequential command
 Dependencies

Questionable Calibration Skipped Negative Transition This command determines which bits in the Questionable Calibration Skipped Condition register will set the corresponding bit in the Questionable Calibration Skipped Event register when the condition register bit has a negative transition (1 to 0). The

variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|-----------------------------------|---|
| Mode | All |
| Remote Command | :STATus:QUESTionable:CALibration:SKIPped:NTRansition <integer> :STATus:QUESTionable:CALibration:SKIPped:NTRansition? |
| Example | STAT:QUES:CAL:SKIP:NTR 1 Align RF skipped is not required. |
| Preset | 0 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Calibration Skipped Positive Transition This command determines which bits in the Questionable Calibration Skipped Condition register will set the corresponding bit in the Questionable Calibration Skipped Event register when the condition register bit has a positive transition (0 to 1). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|-----------------------------------|---|
| Mode | All |
| Remote Command | :STATus:QUESTionable:CALibration:SKIPped:PTRansition <integer> :STATus:QUESTionable:CALibration:SKIPped:PTRansition? |
| Example | STAT:QUES:CAL:SKIP:PTR 1 Align RF skipped is required. |
| Preset | 32767 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Calibration Extended Failure Register

Questionable Calibration Extended Failure Condition This query returns the decimal value of the sum of the bits in the Questionable Calibration Extended Failure Condition register.

NOTE The data in this register is continuously updated and reflects the current conditions.

| | |
|------|-----|
| Mode | All |
|------|-----|

Programming the Analyzer
STATus Subsystem (No equivalent front panel keys)

Remote Command :STATus:QUESTionable:CALibration:EXTended:FAILure:CONDition?

Example STAT:QUES:CAL:EXT:FAIL:COND?

Preset 0

SCPI Status Sequential command

Bits/OPC

Dependencies

Questionable Calibration Extended Failure Enable This command determines which bits in the Questionable Calibration Extended Failure Condition Register will set bits in the Questionable Calibration Extended Failure Event register, which also sets bit 9 of the Questionable Calibration Register. The variable <integer> is the sum of the decimal values of the bits you want to enable.

Mode All

Remote Command :STATus:QUESTionable:CALibration:EXTended:FAILure:ENABle <integer>

:STATus:QUESTionable:CALibration:EXTended:FAILure:ENABle?

Example STAT:QUES:CAL:EXT:FAIL:ENAB 1 Can be used to query if an EMI conducted alignment is needed.

Preset 32767

Min 0

Max 32767

SCPI Status Bits/OPC Sequential command

Dependencies

Questionable Calibration Extended Failure Event Query This query returns the decimal value of the sum of the bits in the Questionable Calibration Extended Failure Event register.

NOTE The register requires that the associated PTR or NTR filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Mode All

Remote Command :STATus:QUESTionable:CALibration:EXTended:FAILure [:EVENT] ?

Example STAT:QUES:CAL:EXT:FAIL?

Preset 0

SCPI Status Sequential command

Bits/OPC

Dependencies

Questionable Calibration Extended Failure Negative Transition This command determines which bits in the Questionable Calibration Extended Failure Condition register will set the corresponding bit in the Questionable Calibration Extended Failure Event register when the condition register bit has a negative transition (1 to 0). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|--------------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:CALibration:EXTended:FAILure:NTRansition <integer> :STATus:QUESTionable:CALibration:EXTended:FAILure:NTRansition? |
| Example | STAT:QUES:CAL:EXT:FAIL:NTR 1 EMI conducted align failure is not required. |
| Preset | 0 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Calibration Extended Failure Positive Transition This command determines which bits in the Questionable Calibration Extended Failure Condition register will set the corresponding bit in the Questionable Calibration Extended Failure Event register when the condition register bit has a positive transition (0 to 1). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|---|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:CALibration:EXTended:FAILure:PTRansition <integer> :STATus:QUESTionable:CALibration:EXTended:FAILure:PTRansition? |
| Example | STAT:QUES:CAL:EXT:FAIL:PTR 1 EMI conducted align failure is required. |
| Preset | 32767 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Calibration Extended Needed Register

Questionable Calibration Extended Needed Condition This query returns the decimal value of the sum of the bits in the Questionable Calibration Extended Needed Condition register.

NOTE The data in this register is continuously updated and reflects the current conditions.

Mode All

Remote Command :STATus:QUESTionable:CALibration:EXTended:NEEDED:CONDition?

Example STAT:QUES:CAL:EXT:NEED:COND?

Preset 0

SCPI Status Bits/OPC Sequential command

Dependencies

Questionable Calibration Extended Needed Enable This command determines which bits in the Questionable Calibration Extended Needed Condition Register will set bits in the Questionable Calibration Extended Needed Event register, which also sets bit 14 of the Questionable Calibration Register. The variable <integer> is the sum of the decimal values of the bits you want to enable.

Mode All

Remote Command :STATus:QUESTionable:CALibration:EXTended:NEEDED:ENABle<integer>

:STATus:QUESTionable:CALibration:EXTended:NEEDED:ENABle?

Example STAT:QUES:CAL:EXT:NEED:ENAB 2 Can be used to query if an EMI conducted alignment is needed.

Preset 32767

Min 0

Max 32767

SCPI Status Bits/OPC Sequential command

Dependencies

Questionable Calibration Extended Needed Event Query This query returns the decimal value of the sum of the bits in the Questionable Calibration Extended Needed Event register.

NOTE The register requires that the associated PTR or NTR filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Mode All

Remote Command :STATus:QUESTionable:CALibration:EXTended:NEEDED[:EVENT]?

| | |
|---|-------------------------|
| Example | STAT:QUES:CAL:EXT:NEED? |
| Preset | 0 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Calibration Extended Needed Negative Transition This command determines which bits in the Questionable Calibration Extended Needed Condition register will set the corresponding bit in the Questionable Calibration Extended Needed Event register when the condition register bit has a negative transition (1 to 0). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|--------------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:CALibration:EXTended:NEEDed:NTRansition <integer> :STATus:QUESTionable:CALibration:EXTended:NEEDed:NTRansition? |
| Example | STAT:QUES:CAL:EXT:NEED:NTR 2 Align EMI conducted is not required. |
| Preset | 0 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Calibration Extended Needed Positive Transition This command determines which bits in the Questionable Calibration Extended Needed Condition register will set the corresponding bit in the Questionable Calibration Extended Needed Event register when the condition register bit has a positive transition (0 to 1). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|--------------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:CALibration:EXTended:NEEDed:PTRansition <integer> :STATus:QUESTionable:CALibration:EXTended:NEEDed:PTRansition? |
| Example | STAT:QUES:CAL:EXT:NEED:PTR 2 Align EMI conducted is required. |
| Preset | 32767 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Frequency Register

Questionable Frequency Condition This query returns the decimal value of the sum of the bits in the Questionable Frequency Condition register.

NOTE The data in this register is continuously updated and reflects the current conditions.

| | |
|-----------------------------------|---|
| Mode | All |
| Remote Command | :STATus:QUESTionable:FREQuency:CONDition? |
| Example | STAT:QUES:FREQ:COND? |
| Preset | 0 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Frequency Enable This command determines which bits in the Questionable Frequency Condition Register will set bits in the Questionable Frequency Event register, which also sets the Frequency Summary bit (bit 5) in the Questionable Register. The variable <integer> is the sum of the decimal values of the bits you want to enable.

| | |
|-----------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:FREQuency:ENABle <integer> :STATus:QUESTionable:FREQuency:ENABle? |
| Example | STAT:QUES:FREQ:ENAB 2 Frequency Reference Unlocked is reported to the Frequency Summary of the Status Questionable register. |
| Preset | 32767 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Frequency Event Query This query returns the decimal value of the sum of the bits in the Questionable Frequency Event register.

NOTE The register requires that the associated PTR or NTR filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

| | |
|-----------------------|---|
| Mode | All |
| Remote Command | :STATus:QUESTionable:FREQuency[:EVENT]? |

| | |
|--------------------------------------|--------------------|
| Example | STAT:QUES:FREQ? |
| Preset | 0 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Frequency Negative Transition This command determines which bits in the Questionable Frequency Condition register will set the corresponding bit in the Questionable Frequency Event register when the condition register bit has a negative transition (1 to 0). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|--------------------------------------|---|
| Mode | All |
| Remote Command | :STATus:QUESTionable:FREQuency:NTRansition <integer> :STATus:QUESTionable:FREQuency:NTRansition? |
| Example | STAT:QUES:FREQ:NTR 2 Frequency Reference 'regained lock' will be reported to the Frequency Summary of the Status Questionable register. |
| Preset | 0 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Frequency Positive Transition This command determines which bits in the Questionable Frequency Condition register will set the corresponding bit in the Questionable Frequency Event register when the condition register bit has a positive transition (0 to 1). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|--------------------------------------|---|
| Mode | All |
| Remote Command | :STATus:QUESTionable:FREQuency:PTRansition <integer> :STATus:QUESTionable:FREQuency:PTRansition? |
| Example | STAT:QUES:FREQ:PTR 2 Frequency Reference 'became unlocked' will be reported to the Frequency Summary of the Status Questionable register. |
| Preset | 32767 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Integrity Register

Questionable Integrity Condition This query returns the decimal value of the sum of the bits in the Questionable Integrity Condition register.

NOTE The data in this register is continuously updated and reflects the current conditions.

| | |
|-----------------------------------|---|
| Mode | All |
| Remote Command | :STATus:QUEStionable:INTEgrity:CONDition? |
| Example | STAT:QUES:INT:COND? |
| Preset | 0 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Integrity Enable This command determines which bits in the Questionable Integrity Condition Register will set bits in the Questionable Integrity Event register, which also sets the Integrity Summary bit (bit 9) in the Questionable Register. The variable <integer> is the sum of the decimal values of the bits you want to enable.

| | |
|-----------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUEStionable:INTEgrity:ENABle <integer> :STATus:QUEStionable:INTEgrity:ENABle? |
| Example | STAT:QUES:INT:ENAB 8 Measurement Uncalibrated Summary will be reported to the Integrity Summary of the Status Questionable register. |
| Preset | 32767 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Integrity Event Query This query returns the decimal value of the sum of the bits in the Questionable Integrity Event register.

NOTE The register requires that the associated PTR or NTR filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

| | |
|------|-----|
| Mode | All |
|------|-----|

Remote Command :STATus:QUEStionable:INTEgrity[:EVENT]?
 Example STAT:QUES:INT?
 Preset 0
 SCPI Status Bits/OPC Sequential command
 Dependencies

Questionable Integrity Negative Transition This command determines which bits in the Questionable Integrity Condition register will set the corresponding bit in the Questionable Integrity Event register when the condition register bit has a negative transition (1 to 0). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

Mode All
Remote Command :STATus:QUEStionable:INTEgrity:NTRansition
 <integer>
 :STATus:QUEStionable:INTEgrity:NTRansition?
 Example STAT:QUES:INT:NTR 8 Measurement 'regained calibration'
 Summary will be reported to the Integrity Summary of the Status
 Questionable register.
 Preset 0
 Min 0
 Max 32767
 SCPI Status Bits/OPC Sequential command
 Dependencies

Questionable Integrity Positive Transition This command determines which bits in the Questionable Integrity Condition register will set the corresponding bit in the Questionable Integrity Event register when the condition register bit has a positive transition (0 to 1). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

Mode All
Remote Command :STATus:QUEStionable:INTEgrity:PTRansition
 <integer>
 :STATus:QUEStionable:INTEgrity:PTRansition?
 Example STAT:QUES:INT:PTR 8 Measurement 'became uncalibrated'
 Summary will be reported to the Integrity Summary of the Status
 Questionable register.
 Preset 32767
 Min 0
 Max 32767

Programming the Analyzer
STATUS Subsystem (No equivalent front panel keys)

SCPI Status Bits/OPC Sequential command
Dependencies

Questionable Integrity Signal Register

Questionable Integrity Signal Condition This query returns the decimal value of the sum of the bits in the Questionable Integrity Signal Condition register.

NOTE The data in this register is continuously updated and reflects the current conditions.

Mode All

Remote Command :STATUS:QUESTIONABLE:INTEGRITY:SIGNAL:CONDITION?

Example STAT:QUES:INT:SIGN:COND?

Preset 0

SCPI Status Bits/OPC Sequential command
Dependencies

Questionable Integrity Signal Enable This command determines which bits in the Questionable Integrity Signal Condition Register will set bits in the Questionable Integrity Signal Event register, which also sets the Integrity Summary bit (bit 9) in the Questionable Register. The variable <integer> is the sum of the decimal values of the bits you want to enable.

Mode All

Remote Command :STATUS:QUESTIONABLE:INTEGRITY:SIGNAL:ENABLE
<integer>

 :STATUS:QUESTIONABLE:INTEGRITY:SIGNAL:ENABLE?

Example STAT:QUES:INT:SIGN:ENAB 4 Burst Not Found will be reported to
the Integrity Summary of the Status Questionable register.

Preset 32767

Min 0

Max 32767

SCPI Status Bits/OPC Sequential command
Dependencies

Questionable Integrity Signal Event Query This query returns the decimal value of the sum of the bits in the Questionable Integrity Signal Event register.

NOTE The register requires that the associated PTR or NTR filters be set before a condition register bit can set a bit in the event register. The data in this register is

latched until it is queried. Once queried, the register is cleared.

| | |
|-----------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:INTEgrity:SIGNal[:EVENT]? |
| Example | STAT:QUES:INT:SIGN? |
| Preset | 0 |
| SCPI Status Bits/OPC | Sequential command |
| Dependencies | |

Questionable Integrity Signal Negative Transition This command determines which bits in the Questionable Integrity Signal Condition register will set the corresponding bit in the Questionable Integrity Signal Event register when the condition register bit has a negative transition (1 to 0). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|-----------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:INTEgrity:SIGNal:NTRansition <integer> :STATus:QUESTionable:INTEgrity:SIGNal:NTRansition? |
| Example | STAT:QUES:INT:SIGN:NTR 4 Burst found will be reported to the Integrity Summary of the Status Questionable register. |
| Preset | 0 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC | Sequential command |
| Dependencies | |

Questionable Integrity Signal Positive Transition This command determines which bits in the Questionable Integrity Signal Condition register will set the corresponding bit in the Questionable Integrity Signal Event register when the condition register bit has a positive transition (0 to 1). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|-----------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:INTEgrity:SIGNal:PTRansition <integer> :STATus:QUESTionable:INTEgrity:SIGNal:PTRansition? |
| Example | STAT:QUES:INT:SIGN:PTR 4 Burst not found will be reported to the Integrity Summary of the Status Questionable register. |
| Preset | 32767 |
| Min | 0 |

Programming the Analyzer
STATus Subsystem (No equivalent front panel keys)

| | |
|-----------------------------------|--------------------|
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Integrity Uncalibrated Register

Questionable Integrity Uncalibrated Condition This query returns the decimal value of the sum of the bits in the Questionable Integrity Uncalibrated Condition register.

NOTE The data in this register is continuously updated and reflects the current conditions.

| | |
|-----------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUEStionable:INTEgrity:UNCalibrated:CONDition? |
| Example | STAT:QUES:INT:UNC:COND? |
| Preset | 0 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Integrity Uncalibrated Enable This command determines which bits in the Questionable Integrity Uncalibrated Condition Register will set bits in the Questionable Integrity Uncalibrated Event register, which also sets the Data Uncalibrated Summary bit (bit 3) in the Questionable Integrity Register. The variable <integer> is the sum of the decimal values of the bits you want to enable.

| | |
|-----------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUEStionable:INTEgrity:UNCalibrated:ENABle :STATus:QUEStionable:INTEgrity:UNCalibrated:ENABle ? |
| Example | STAT:QUES:INT:UNC:ENAB 1 Oversweep (Meas Uncal) will be reported to the Integrity Summary of the Status Questionable register. |
| Preset | 32767 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Integrity Uncalibrated Event Query This query returns the decimal value of the sum of the bits in the Questionable Integrity Uncalibrated Event register.

NOTE The register requires that the associated PTR or NTR filters be set before a

condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

| | |
|-----------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:INTEgrity:UNCalibrated[:EVENT]? |
| Example | STAT:QUES:INT:UNC? |
| Preset | 0 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Integrity Uncalibrated Negative Transition This command determines which bits in the Questionable Integrity Uncalibrated Condition register will set the corresponding bit in the Questionable Integrity Uncalibrated Event register when the condition register bit has a negative transition (1 to 0). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|-----------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:INTEgrity:UNCalibrated:NTRansition <integer> :STATus:QUESTionable:INTEgrity:UNCalibrated:NTRansition? |
| Example | STAT:QUES:INT:UNC:NTR 1 Oversweep cleared will be reported to the Integrity Summary of the Status Questionable register. |
| Preset | 0 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Integrity Uncalibrated Positive Transition This command determines which bits in the Questionable Integrity Uncalibrated Condition register will set the corresponding bit in the Questionable Integrity Uncalibrated Event register when the condition register bit has a positive transition (0 to 1). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|-----------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:INTEgrity:UNCalibrated:PTRansition <integer> :STATus:QUESTionable:INTEgrity:UNCalibrated:PTRansition? |
| Example | STAT:QUES:INT:UNC:PTR 1 Oversweep (Meas Uncal) occurred will be reported to the Integrity Summary of the Status Questionable register. |

Programming the Analyzer
STATus Subsystem (No equivalent front panel keys)

| | |
|-----------------------------------|--------------------|
| Preset | 32767 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Power Register

Questionable Power Condition This query returns the decimal value of the sum of the bits in the Questionable Power Condition register.

NOTE The data in this register is continuously updated and reflects the current conditions.

| | |
|-----------------------------------|---------------------------------------|
| Mode | All |
| Remote Command | :STATus:QUESTionable:POWer:CONDition? |
| Example | STAT:QUES:POW:COND? |
| Preset | 0 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Power Enable This command determines which bits in the Questionable Power Condition Register will set bits in the Questionable Power Event register, which also sets the Power Summary bit (bit 3) in the Questionable Register. The variable <integer> is the sum of the decimal values of the bits you want to enable.

| | |
|-----------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:POWer:ENABle <integer> :STATus:QUESTionable:POWer:ENABle? |
| Example | STAT:QUES:POW:ENAB 32 50 MHz Input Pwr too High for Cal will be reported to the Power Summary of the Status Questionable register. |
| Preset | 32767 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Power Event Query This query returns the decimal value of the sum of the bits in the Questionable Power Event register.

NOTE The register requires that the associated PTR or NTR filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

| | |
|-----------------------------------|-------------------------------------|
| Mode | All |
| Remote Command | :STATus:QUESTionable:POWer[:EVENT]? |
| Example | STAT:QUES:POW? |
| Preset | 0 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Power Negative Transition This command determines which bits in the Questionable Power Condition register will set the corresponding bit in the Questionable Power Event register when the condition register bit has a negative transition (1 to 0). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|-----------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:POWer:NTRansition <integer> :STATus:QUESTionable:POWer:NTRansition? |
| Example | STAT:QUES:POW:NTR 32 50 MHz Input Power became OK for Cal will be reported to the Power Summary of the Status Questionable register. |
| Preset | 0 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Power Positive Transition This command determines which bits in the Questionable Power Condition register will set the corresponding bit in the Questionable Power Event register when the condition register bit has a positive transition (0 to 1). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|-----------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:POWer:PTRansition <integer> :STATus:QUESTionable:POWer:PTRansition?> |
| Example | STAT:QUES:POW:PTR 32 50 MHz Input Power became too high for Cal will be reported to the Power Summary of the Status Questionable register. |

Programming the Analyzer
STATus Subsystem (No equivalent front panel keys)

| | |
|-----------------------------------|--------------------|
| Preset | 32767 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Temperature Register

Questionable Temperature Condition This query returns the decimal value of the sum of the bits in the Questionable Temperature Condition register.

NOTE The data in this register is continuously updated and reflects the current conditions.

| | |
|-----------------------------------|---|
| Mode | All |
| Remote Command | :STATus:QUESTIONable:TEMPerature:CONDition? |
| Example | STAT:QUES:TEMP:COND? |
| Preset | 0 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Temperature Enable This command determines which bits in the Questionable Temperature Condition Register will set bits in the Questionable Temperature Event register, which also sets the Temperature Summary bit (bit 4) in the Questionable Register. The variable <integer> is the sum of the decimal values of the bits you want to enable.

| | |
|-----------------------------------|---|
| Mode | All |
| Remote Command | :STATus:QUESTIONable:TEMPerature:ENABle <integer> :STATus:QUESTIONable:TEMPerature:ENABle? |
| Example | STAT:QUES:TEMP:ENAB 1 Reference Oscillator Oven Cold will be reported to the Temperature Summary of the Status Questionable register. |
| Preset | 32767 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Temperature Event Query This query returns the decimal value of the sum of the bits in the Questionable Temperature Event register.

NOTE The register requires that the associated PTR or NTR filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

| | |
|-----------------------------------|---|
| Mode | All |
| Remote Command | :STATus:QUESTionable:TEMPerature[:EVENT]? |
| Example | STAT:QUES:TEMP? |
| Preset | 0 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Temperature Negative Transition This command determines which bits in the Questionable Temperature Condition register will set the corresponding bit in the Questionable Temperature Event register when the condition register bit has a negative transition (1 to 0). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|-----------------------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:TEMPerature:NTRansition <integer> :STATus:QUESTionable:TEMPerature:NTRansition? |
| Example | STAT:QUES:TEMP:NTR 1 Reference Oscillator Oven not cold will be reported to the Temperature Summary of the Status Questionable register. |
| Preset | 0 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

Questionable Temperature Positive Transition This command determines which bits in the Questionable Temperature Condition register will set the corresponding bit in the Questionable Temperature Event register when the condition register bit has a positive transition (0 to 1). The variable <integer> is the sum of the decimal values of the bits that you want to enable.

| | |
|-----------------------|--|
| Mode | All |
| Remote Command | :STATus:QUESTionable:TEMPerature:PTRansition <integer> :STATus:QUESTionable:TEMPerature:PTRansition? |

Programming the Analyzer
STATus Subsystem (No equivalent front panel keys)

| | |
|-----------------------------------|---|
| Example | STAT:QUES:TEMP:PTR 1 Reference Oscillator Oven became cold will be reported to the Temperature Summary of the Status Questionable register. |
| Preset | 32767 |
| Min | 0 |
| Max | 32767 |
| SCPI Status Bits/OPC Dependencies | Sequential command |

IEEE Common GPIB Commands

Numeric values for bit patterns can be entered using decimal or hexadecimal representations. (i.e. 0 to 32767 is equivalent to #H0 to #H7FFF).

Calibration Query

*CAL? Performs a full alignment and returns a number indicating the success of the alignment. A zero is returned if the alignment is successful. A one is returned if any part of the alignment fails. The equivalent SCPI command is CALibrate[:ALL]?

See the Section “Alignments” on page 216 for details of *CAL?.

Clear Status

Clears the status byte register. It does this by emptying the error queue and clearing all bits in all of the event registers. The status byte register summarizes the states of the other registers. It is also responsible for generating service requests.

| | |
|-----------------------------------|--|
| Remote Command | *CLS |
| Example | *CLS Clears the error queue and the Status Byte Register. |
| Remote Command Notes | For related commands, see the SYSTem:ERRor[:NEXT]? command. See also the STATus:PRESet command and all commands in the STATus subsystem. |
| Key Path | No equivalent key. Related key System, Show Errors, Clear Error Queue |
| SCPI Status Bits/OPC Dependencies | Resets all bits in all event registers to 0, which resets all the status byte register bits to 0 also. |

Standard Event Status Enable

Selects the desired bits from the standard event status enable register. This register monitors I/O errors and synchronization conditions such as operation complete, request control, query error, device dependent error, status execution error, command error and power on. The selected bits are OR'd to become a summary bit (bit 5) in the byte register which can be queried.

The query returns the state of the standard event status enable register.

| | |
|-----------------------|---|
| Remote Command | *ESE <integer> *ESE? |
| Example | *ESE 36 Enables the Standard Event Status Register to monitor query and command errors (bits 2 and 5). *ESE? Returns a 36 indicating that the query and command status bits are enabled. |

Programming the Analyzer

IEEE Common GPIB Commands

| | |
|-----------------------------------|---|
| Remote Command Notes | For related commands, see the STATus subsystem and SYSTem:ERRor[:NEXT]? commands. |
| Preset | 255 |
| State Saved | Not saved in state. |
| Min | 0 |
| Max | 255 |
| Key Path | No equivalent key. Related key System, Show Errors, Clear Error Queue |
| SCPI Status Bits/OPC Dependencies | Event Enable Register of the Standard Event Status Register. |

Standard Event Status Register Query

Queries and clears the standard event status event register. (This is a destructive read.) The value returned is a hexadecimal number that reflects the current state (0/1) of all the bits in the register.

| | |
|-----------------------------------|---|
| Remote Command | *ESR? |
| Example | *ESR? Returns a 1 if there is either a query or command error, otherwise it returns a zero. |
| SCPI Status Bits/OPC Dependencies | Standard Event Status Register (bits 0 – 7). |
| Remote Command Notes | For related commands, see the STATus subsystem commands. |
| Preset | 0 |
| Min | 0 |
| Max | 255 |

Identification Query

Returns a string of instrument identification information. The string contains the model number, serial number and firmware revision.

The response is organized into four fields separated by commas. The field definitions are as follows:

- Manufacturer
- Model
- Serial number
- Firmware version

| | |
|-----------------------|-------|
| Remote Command | *IDN? |
|-----------------------|-------|

| | |
|----------|---|
| Example | *IDN? Returns instrument identification information, such as: Agilent Technologies,N9020A,US01020004,A.01.02 |
| Key Path | No equivalent key. See related key: System, Show System. |

Operation Complete

The *OPC command sets bit 0 in the standard event status register (SER) to “1” when pending operations have finished, that is when all overlapped commands are complete. It does not hold off subsequent operations. You can determine when the overlapped commands have completed either by polling the OPC bit in SER, or by setting up the status system such that a service request (SRQ) is asserted when the OPC bit is set.

The *OPC? query returns a “1” after all the current overlapped commands are complete. So it holds off subsequent commands until the “1” is returned, then the program continues. This query can be used to synchronize events of other instruments on the external bus.

| | |
|-----------------------------------|--|
| Remote Command | *OPC *OPC? |
| Example | INIT:CONT 0 Selects single sweeping. INIT:IMM Initiates a sweep. *OPC? Holds off any further commands until the sweep is complete. |
| SCPI Status Bits/OPC Dependencies | Not global to all remote ports or front panel. *OPC only considers operation that was initiated on the same port as the *OPC command was issued from. *OPC is an overlapped command, but *OPC? is sequential. |

Query Instrument Options

Returns a string of all the installed instrument options. It is a comma separated list with quotes, such as: “503,P03,PFR”.

| | |
|-----------------------|-------|
| Remote Command | *OPT? |
|-----------------------|-------|

Recall Instrument State

This command recalls the instrument state from the specified instrument memory register.

- If the state being loaded has a newer firmware revision than the revision of the instrument, no state is recalled and an error is reported.
- If the state being loaded has an equal firmware revision than the revision of the instrument, the state is loaded.
- If the state being loaded has an older firmware revision than the revision of the instrument, the

instrument only loads the parts of the state that apply to the older revision.

| | |
|-----------------------------------|--|
| Remote Command | *RCL <register #> |
| Example | *RCL 7 Recalls the instrument state that is currently stored in register 7. |
| Restriction and Notes | Registers 0 through 6 are accessible from the front panel in menu keys for Recall Registers. |
| SCPI Status Bits/OPC Dependencies | The command is sequential. |
| Min | 0 |
| Max | 127 |

Save Instrument State

This command saves the current instrument state and mode to the specified instrument memory register.

| | |
|-----------------------------------|--|
| Remote Command | *SAV <register #> |
| Example | *SAV 9 Saves the instrument state in register 9. |
| Restriction and Notes | Registers 0 through 6 are accessible from the front panel in menu keys for Save Registers. |
| SCPI Status Bits/OPC Dependencies | The command is sequential. |
| Min | 0 |
| Max | 127 |

Service Request Enable

This command enables the desired bits of the service request enable register.

The query returns the value of the register, indicating which bits are currently enabled.

| | |
|-----------------------------------|---|
| Remote Command | *SRE <integer> *SRE? |
| Example | *SRE 22 Enables bits 1, 2, and 4 in the service request enable register. |
| SCPI Status Bits/OPC Dependencies | Service Request Enable Register (all bits, 0 – 7). |
| Remote Command Notes | For related commands, see the STATus subsystem and SYSTem:ERRor[:NEXT]? commands. |
| Preset | 255 |
| Min | 0 |

Max 255

Status Byte Query

Returns the value of the status byte register without erasing its contents.

| | |
|-----------------------------------|---|
| Remote Command | *STB? |
| Example | *STB? Returns a decimal value for the bits in the status byte register. For example, if a 16 is returned, it indicates that bit 5 is set and one of the conditions monitored in the standard event status register is set. |
| SCPI Status Bits/OPC Dependencies | Status Byte Register (all bits, 0 – 7). |
| Remote Command Notes | See related command *CLS, in the Section “Clear Status” on page 183 . |

Trigger

This command triggers the instrument. Use the :TRIGger[:SEquence]:SOURce command to select the trigger source.

| | |
|-----------------------|--|
| Remote Command | *TRG |
| Example | *TRG Triggers the instrument to take a sweep or start a measurement, depending on the current instrument settings. |
| Remote Command Notes | See related command :INITiate:IMMediate, in the Section “Restart” on page 1167 . |
| Key Path | No equivalent key. See related keys Single and Restart . |

Self Test Query

This query performs the internal self-test routines and returns a number indicating the success of the testing. A zero is returned if the test is successful, 1 if it fails.

| | |
|-----------------------|---|
| Remote Command | *TST? |
| Example | *TST? Runs the self-test routines and returns 0=passed, 1=some part failed. |

Wait-to-Continue

This command causes the instrument to wait until all overlapped commands are completed before executing any additional commands. There is no query form for the command.

| | |
|-----------------------|------|
| Remote Command | *WAI |
|-----------------------|------|

Programming the Analyzer
IEEE Common GPIB Commands

Example

INIT:CONT OFF; INIT;*WAI Sets the instrument to single sweep.
Starts a sweep and waits for its completion.

SCPI Status Bits/OPC
Dependencies

Not global to all remote ports or front panel. *OPC only considers
operation that was initiated on the same port as the *OPC command
was issued from.

File

Opens a menu of keys which access various standard and custom Windows dialogs. Pressing any other front-panel key exits any of these dialogs.

Instrument S/W Revision A.01.60 or later

File Explorer

Opens the standard Windows File Explorer. Pressing any front-panel key closes the Explorer application. File Explorer opens up in My Documents.

Instrument S/W Revision A.01.60 or later

Page Setup

Refer to your Microsoft Windows Operating System manual.

Instrument S/W Revision A.01.60 or later

Print Theme – Remote Command

The graphical user interface contains a selection for choosing the Theme to use when printing. An equivalent remote command is provided. Refer to [“Theme” on page 1279](#) in the View/Display section for more detail.


| | |
|-------------------------|---|
| Mode | All |
| Remote Command | :SYSTem:PRINT:THEME TDCOLOR TDMonochrome FCOLOR FMONochrome :SYSTem:PRINT:THEME? |
| Preset | FCOL; not part of Preset, but is reset by Restore Misc Defaults or Restore System Defaults All and survives subsequent running of the modes |
| State Saved | No |
| Example | :SYST:PRIN:THEM FCOL |
| Instrument S/W Revision | A.01.60 or later |

Print

Refer to your Microsoft Windows Operating System manual.

Exit

This key, when pressed, will exit the Instrument Application. A dialog box will be used to confirm that the user intended to exit the application:

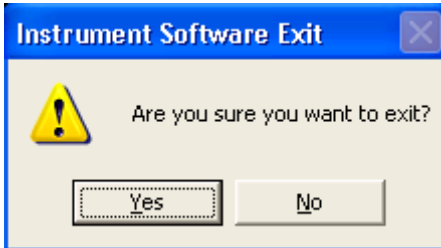

| | |
|-------------------------|------------------|
| Key Path | File, Exit |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

Preset

Mode Preset

The Mode preset is the most common way to get the active mode back to a known state. It will keep you in the currently active mode and reset the mode settings to their mode preset state. It will never cause a mode switch. It does a partial preset. It does not affect any mode persistent settings or any system settings.

The **Mode Preset** does the following for the currently active mode:

- Aborts the currently running measurement.
- Brings up the default menu for the mode, with no active function.
- Sets Measurement settings to their preset values for the active mode only.
- Activates the default measurement.
- Brings up the default menu for the mode.
- Clears the input and output buffers.
- Sets Status Byte to 0.

| | |
|-------------------------|--|
| Key Path | Front-panel key |
| Remote Command | :SYSTem:PRESet |
| Dependencies/Couplings | A Mode Preset will cause the currently running measurement to be aborted and cause the default measurement to be active. Mode Preset gets the mode to a consistent state with all of the default couplings set. |
| Restriction and Notes | Clears all pending OPC bits. The Status Byte is set to 0. |
| Remote Command Notes | *RST is preferred over :SYST:PRESet for remote operation. *RST does a Mode Preset as done by the :SYST:PRESet command and it sets the measurement mode to Single measurement rather than Continuous for optimal remote control throughput. |
| Example | :SYST:PRESet |
| Instrument S/W Revision | A.01.60 or later |

How-To Preset

The table below shows all possible presets, their corresponding SCPI commands and front panel access. Instrument settings depend on the current measurement context. Some settings are local to the current measurement, some are global (common) across all the measurement in the current mode, and some are global to all the available modes. In a similar way, restoring the settings to their preset state can be done within the different contexts.

The Auto Couple front-panel key is a Meas local key. It sets all Auto/Man parameter couplings in the measurement to Auto. Any Auto/Man selection that is local to the other measurements in the mode will

not be affected by Auto Couple.

The Meas Preset key is a Meas local key. Meas Preset resets all the variables local to the current measurement except the persistent ones.

The Mode Preset (front-panel key on front panel) resets all the current mode's Meas local and Meas global variables except the persistent ones.

The Restore Mode Defaults key resets ALL the Mode variables (and all the Meas global and Meas local variables), including the persistent ones.

| Type Of Preset | SCPI Command | Front Panel Access |
|--------------------------------|--|--|
| Auto Couple | :COUPle ALL | Auto Couple front-panel key |
| Meas Preset | :CONFigure:<Measurement> | Meas Setup Menu |
| Mode Preset | :SYSTem:PRESet | Mode Preset (green key) |
| Restore Mode Defaults | :INSTrument:DEFault | Mode Setup Menu |
| Restore All Mode Defaults | :SYSTem:DEFault MODEs | System Menu; Restore System Default Menu |
| *RST | *RST | not possible (Mode Preset with Single) |
| Restore Input/Output Defaults | :SYSTem:DEFault INPut | System Menu; Restore System Default Menu |
| Restore Power On Defaults | :SYSTem:DEFault PON | System Menu; Restore System Default Menu |
| Restore Alignment Defaults | :SYSTem:DEFault ALIGn | System Menu; Restore System Default Menu |
| Restore Miscellaneous Defaults | :SYSTem:DEFault MISC | System Menu; Restore System Default Menu |
| Restore All System Defaults | :SYSTem:DEFault [ALL] :SYSTem:PRESet:PERsistent | System Menu; Restore System Default Menu |
| User Preset | :SYSTem:PRESet:USER | User Preset Menu |
| User Preset All Modes | :SYSTem:PRESet:USER:ALL | User Preset Menu |
| Power On Mode Preset | :SYSTem:PON:TYPE MODE | System Menu |
| Power On User Preset | :SYSTem:PON:TYPE USER | System Menu |
| Power On Last State | :SYSTem:PON:TYPE LAST | System Menu |

Restore Mode Defaults

Restore Mode Defaults resets the state for the currently active mode by resetting the mode persistent settings to their factory default values, clearing mode data and by performing a Mode Preset. This function will never cause a mode switch. This function performs a full preset for the currently active

System Functions

Preset

mode; whereas, Mode Preset performs a partial preset. Restore Mode Defaults does not affect any system settings. System settings are reset by Restore System Defaults. This function does reset mode data; as well as settings.

| | |
|-------------------------|---|
| Key Path | Mode Setup |
| Remote Command | :INSTrument :DEFault |
| Dependencies/Couplings | A Restore Mode Defaults will cause the currently running measurement to be aborted and causes the default measurement to be active. It gets the mode to a consistent state with all of the default couplings set. |
| Restriction and Notes | A pop-up message comes up saying: "If you are sure, press key again". |
| Remote Command Notes | Clears all pending OPC bits. The Status Byte is set to 0. |
| Example | :INST:DEF |
| Instrument S/W Revision | A.01.60 or later |

***RST (Remote Command Only)**

*RST is equivalent to :SYST:PRES::INIT:CONT OFF which is a Mode Preset in Single measurement state. This remote command is preferred over Mode Preset remote command - :SYST:PRES, as optimal remote programming occurs with the instrument in single measurement state.

| | |
|--------------------------|---|
| Remote Command: | *RST |
| Dependencies/Couplings: | A *RST will cause the currently running measurement to be aborted and cause the default measurement to be active. *RST gets the mode to a consistent state with all of the default couplings set. |
| Restriction and Notes: | Clears all pending OPC bits and the Status Byte is set to 0. |
| Remote Command Notes: | Sequential |
| Example: | *RST |
| Instrument S/W Revision: | A.01.60 or later |

Print

The Print Front-panel key is equivalent to performing a File, Print, OK. It immediately performs the currently configured Print to the current printer.

| | |
|-------------------------|------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Quick Save

The Quick Save Front-panel key repeats the most recent save which was performed from the Save menu, with some qualification:

Quick Save pays no attention to register saves. Register saves are not remembered as Saves for the purpose of Quick Save

If the current measurement does not support the last non-register save that was performed, an informational message is generated, “File type not supported for this measurement”

Quick Save repeats the last type of qualified save (that is, a save qualified by the above criteria) in the last save directory by creating a unique filename using the Auto File Naming algorithm described below.

If Quick Save is pressed after startup and before any qualified Save has been performed, the Quick Save performs a Screen Image save using the current settings for Screen Image saves (current theme, current directory), which then becomes the “last save” for the purpose of subsequent Quick Saves.

The Auto File Naming feature automatically generates a file name for use when saving a file. The filename consists of a prefix and suffix separated by a dot, as is standard for the Windows® file system. For details on the suffix for each file type, see the documentation for the Front-panel key “Save ” on [page 205](#). A default prefix exists for each of the available file types:

| Type | Default Prefix | Menu |
|-----------------------|----------------|-----------------|
| State | State_ | (Save/Recall) |
| Trace + State | State_ | (Save/Recall) |
| Screen | Screen_ | (Save/Recall) |
| Amplitude Corrections | Ampcor_ | (Import/Export) |
| Traces | Trace_ | (Import/Export) |
| Limit Lines | LLine_ | (Import/Export) |
| Measurement Result | MeasR_ | (Import/Export) |
| Capture Buffer | CapBuf_ | (Import/Export) |

A four digit number is appended to the prefix to create a unique file name. The numbering sequence starts at 0000 within each Mode for each file type and works its way up to 9999, then wraps to 0000 again. It remembers where it was through a Mode Preset and when leaving and returning to the Mode. It is reset by Restore Misc Defaults and Restore System Defaults and subsequent running of the instrument application. So, for example, the first auto file name generated for State files is State_0000.state. The next is State_0001, and so forth.

One of the key features of Auto File Name is that we guarantee that the Auto File Name will never conflict with an existing file. This is because the whole point of Auto File Name is to relieve the user from having to pick a file name. The algorithm looks for the next available number. If it gets to 9999, then it looks for holes. If it find no holes; i.e. no more numbers are available, it gives an error.

For example, if when we get to State_0010.state there is already a State_0010.state file in the current

directory, we advance the counter to State_0011.state to ensure that no conflict will exist (and then we verify that State_0011.state also doesn't exist in the current directory and advance again if it does, et cetera).

If you enter a file name for a given file type, then the prefix becomes the filename you entered instead of the default prefix, followed by an underscore. The last four letters (the suffix) are the 4-digit number.

For example, if you save a Meas Results file as "fred.csv", then the next auto file name chosen for a Meas Results save will be fred_0000.csv.

NOTE Although 0000 is used in the example above, the number that is used is actually the current number in the Meas Results sequence, that is, the number that would have been used if the user had not entered their own file name.

If the filename you entered ends with _dddd, where d=any number, making it look just like an auto file name, then the next auto file name picks up where you left off with the suffix being dddd + 1.

| | |
|-------------------------|--|
| Key Path | Quick Save |
| Remote Command Notes | No remote command for this key specifically. |
| Instrument S/W Revision | A.01.60 or later |

Recall

Operation of this key is identical across several measurements. For details about this key, see [“Recall” on page 1149](#).

Save

Operation of this key is identical across several measurements. For details about this key, see [“Save” on page 1169](#).

System

Opens a menu of keys that access various configuration menus and dialogs.

| | |
|-------------------------|--|
| Key Path | Front-panel key |
| Remote Command Notes | No remote command for this key specifically. |
| Instrument S/W Revision | A.01.60 or later |

Show

Opens a menu of choices that enable you to select the information window you want to view.

| | |
|-------------------------|--|
| Key Path | System |
| Mode | All |
| Remote Command | :SYSTem:SHOW OFF ERRor SYSTem HARDware LXI HWSTatistics ALIGNment SOFTware :SYSTem:SHOW? |
| Preset | OFF |
| State Saved | No |
| Range | OFF ERRor SYSTem HARDware LXI HWSTatistics ALIGNment SOFTware |
| Remote Command Notes | This command displays (or exits) the various System information screens. |
| Example | :SYST:SHOW SYST |
| Instrument S/W Revision | A.01.60 or later |

Errors

There are two modes for the Errors selection, History and Status.

The list of errors displayed in the Errors screen does not automatically refresh; you must press the Refresh button or leave the screen and return to it to refresh it.

History brings up a screen displaying the event log in chronological order, with the newest event at the top. The history queue can hold up to 100 messages (if a message has a repeat count greater than 1 it only counts once against this number of 100). Note that this count bears no relation to the size of the SCPI queue. If the queue extends onto a second page, a scroll bar appears to allow scrolling with a mouse. Time is displayed to the second.

Status brings up a screen summarizing the status conditions currently in effect. Note that time is displayed to the second.

The fields on the Errors display are:

Type (unlabeled) - Displays the icon identifying the event or condition as an error or warning.

ID - Displays the error number.

Message - Displays the message text.

Repeat (RPT) - This field shows the number of consecutive instances of the event, uninterrupted by other events. In other words, if an event occurs 5 times with no other intervening event, the value of repeat will be 5.

If the value of Repeat is 1 the field does not display. If the value of Repeat is >1, the time and date shown are those of the most recent occurrence. If the value of repeat reaches 999,999 it stops there.

Time - Shows the most recent time (including the date) at which the event occurred.

| | |
|-------------------------|--|
| Remote Command | :SYSTem:ERRor [:NEXT] ? |
| Restriction and Notes | The return string has the format: “<Error Number>,<Error>” Where <Error Number> and <Error> are defined in the Master Error Messages document. |
| Example | :SYST:ERR? |
| Key Path | System, Show |
| Mode | All |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |

Next Page Next Page and Previous Page menu keys move the user between pages of the log, if it fills more than one page. These keys are grayed out in some cases:

If on the last page of the log, the Next Page key is grayed out

If on the first page of the log, the Previous Page key is grayed out.

If there is only one page, both keys are grayed out.

| | |
|-------------------------|---------------------------|
| Key Path | System, Show, Show Errors |
| Instrument S/W Revision | A.01.60 or later |

Previous Page See “Next Page” on page 207.

History The History and Status keys select the Errors view. The Status key has a second line which shows a number in [square brackets]. This is the number of currently open status items.

| | |
|-------------------------|---------------------------|
| Key Path | System, Show, Show Errors |
| Instrument S/W Revision | A.01.60 or later |

Status See “History” on page 207.

System Functions

System

Verbose SCPI On/Off This is a capability that will allow the SCPI data stream to be displayed when a SCPI error is detected, showing the characters which stimulated the error and several of the characters preceding the error.

| | |
|-------------------------|---|
| Remote Command | :SYSTem:ERRor:VERBoSe OFF ON 0 1 :SYSTem:ERRor:VERBoSe? |
| Example | :SYST:ERR:VERB ON |
| Key Path | System, Show, Show Errors |
| Mode | All |
| Preset | This is unaffected by Preset but is set to OFF on a “Restore System Defaults->Misc” |
| State Saved | No |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Refresh When pressed, refreshes the Show Errors display.

| | |
|-------------------------|---------------------------|
| Key Path | System, Show, Show Errors |
| Instrument S/W Revision | A.01.60 or later |

Clear Error Queue This clears all errors in all error queues.

Clear Error Queue does not affect the current status conditions.

Mode Preset does not clear the error queue.

Restore System Defaults will clear all error queues.

*CLS only clears the queue if it is sent remotely and *RST does not affect any error queue.

Switching modes does not affect any error queues.

| | |
|-------------------------|---------------------------|
| Key Path | System, Show, Show Errors |
| Instrument S/W Revision | A.01.60 or later |

System

The System screen is formatted into three groupings: product descriptive information, options tied to the hardware, and software products:

```

<Product Name> <Product Description>
Product Number: N9020A
Serial Number: US46220924
Firmware Revision: A.01.01
Computer Name: <hostname>
Host ID: N9020A,US44220924

N9020A-503      Frequency Range to 3.6 GHz
N9020A-PFR     Precision Frequency Reference
N9020A-P03     Preamp 3.6 GHz

N9060A-2FP     Spectrum Analysis Measurement Suite  1.0.0.0
N9073A-1FP     WCDMA                               1.0.0.0
N9073A-2FP     WCDMA with HSDPA                     1.0.0.0

```

The Previous Page is grayed-out if the first page of information is presently displayed. The Next Page menu key is grayed-out if the last page is information is presently displayed.

| | |
|-------------------------|------------------|
| Example | SYST:SHOW SYST |
| Key Path | System, Show |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

Hardware

The show hardware screen is used to view details of the installed hardware. This information can be used to determine versions of hardware assemblies and field programmable devices, in the advent of future upgrades or potential repair needs.

The screen is formatted into two groupings: product descriptive information and hardware information. The hardware information is listed in a table format:

System Functions System

Hardware Information

MXA Signal Analyzer
 Product Number: N9020A
 Serial Number: US46220107
 Firmware Revision: A.01.14

| Assembly Name | Part # | Serial # | Matl Rev | Rev | OF Rev | Hw Id | Misc |
|----------------------|------------|-------------|----------|-----|--------|-------|------|
| Analog IF | E441060104 | 78060200131 | 003 | 0 | C | 15 | |
| YIG Tuned Filter | 50877305 | 11061500550 | 005 | 0 | A | 11 | |
| Digital IF | E441060105 | 78060100559 | 003 | 0 | F | 14 | |
| Front End Controller | E441060101 | 78060100147 | 004 | 2 | A | 8 | |
| Low Band Switch | E441060170 | 78060800346 | 005 | 1 | A | 10 | |
| LO Synthesizer | E441060102 | 78060100226 | 003 | 3 | G | 2 | |
| Reference | E441060108 | 78060300420 | 004 | 1 | C | 16 | |
| Front End | E441060154 | 13062800820 | 010 | 2 | B | 9 | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

The Previous Page is grayed-out if the first page of information is presently displayed. The Next Page menu key is grayed-out if the last page is information is presently displayed.

| | |
|-------------------------|------------------|
| Example | SYST:SHOW HARD |
| Key Path | System, Show |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

LXI

This key shows you the product number, serial number, firmware revision, computer name, IP address, Host ID, LXI Class, LXI Version, MAC Address, and the Auto-MDIX Capability.

TIP For information about setting up measurements using LXI, refer to the "Programmer's Guide" located in your analyzer at: C:/Program Files/Agilent/Signal Analysis/Help/Bookfiles/x_series_prog.pdf. It is also available by selecting the "Additional Documentation" page of the Help.

| | |
|-------------------------|------------------|
| Key Path | System, Show |
| Instrument S/W Revision | A.01.60 or later |

LXI Event Log The event log records all of the LXI LAN event activity. As LXI LAN events are sent or received, the activity is noted in the Event Log with an IEEE 1588 timestamp. When the event log is selected, the current contents of the event log are displayed in the system information screen.

The fields recorded in the Event Log are:

- The date the event occurred (GMT)
- The time the event occurred (GMT)
- The type of event: LAN Input, LAN Output, Status, Alarm, Trigger Alarm, Trigger LAN
- The name of the event
- The edge associated with the event
- The event's identifier: This is the string that appears on the LAN.
- The source event: This is only valid for LAN Output, Trigger LAN, and Trigger Alarm event types.
- The source address: This is only valid for LAN Input event types. It is the address from which the message originated.
- The destination address: This is only valid for LAN Output event types. It is the address (or addresses) that the message will be sent to. For UDP messages, this field reads "ALL."

| | |
|-------------------------|-------------------|
| Key Path | System, Show, LXI |
| Instrument S/W Revision | A.01.60 or later |

Circular Sets the behavior for entries that occur while the LXI Event Log is full.

- If Circular is set to 1, incoming events overwrite the oldest events in the log.
- If Circular is set to 0, incoming events are discarded.

| | |
|----------------|--|
| Key Path | System, Show, LXI, LXI Event Log |
| Remote Command | :LXI:EVENT:LOG:CIRCular[:ENABLE] ON OFF 1 0 :LXI:EVENT:LOG:CIRCular[:ENABLE]? |
| Example | :LXI:EVENT:LOG:CIRC 1 |
| Preset | Not affected by a Preset. The default value of "ON" can be restored by pressing System, Restore Defaults, Misc. |
| State Saved | Saved in instrument state. |
| Range | OFF ON 0 1 |

System Functions

System

Instrument S/W Revision A.01.60 or later

Clear Clears the event log of all entries.

Key Path System, Show, LXI, LXI Event Log
Remote Command :LXI:EVENT:LOG:CLEAR
Example :LXI:EVEN:LOG:CLE
Instrument S/W Revision A.01.60 or later

Size Sets the maximum number of entries the LXI Event Log can hold.

Key Path System, Show, LXI, LXI Event Log
Remote Command :LXI:EVENT:LOG:SIZE <size>
 :LXI:EVENT:LOG:SIZE?
Example :LXI:EVEN:LOG:SIZE 256
Preset Not affected by a Preset. The default value of "64" can be restored by pressing
System, Restore Defaults, Misc.
State Saved Saved in instrument state.
Range >= 0
Instrument S/W Revision A.01.60 or later

Enabled Enables and disables the logging of LXI Events.

Key Path System, Show, LXI, LXI Event Log
Remote Command :LXI:EVENT:LOG:ENABLE ON|OFF|1|0
 :LXI:EVENT:LOG:ENABLE?
Example :LXI:EVEN:LOG:ENAB ON
Preset Not affected by a Preset. The default value of "ON" can be restored by
pressing **System, Restore Defaults, Misc.**
State Saved Saved in instrument state.
Range ON|OFF|0|1
Instrument S/W Revision A.01.60 or later

Count (Remote Only) Returns the number of entries currently in the LXI Event Log.

Remote Command: :LXI:EVENT:LOG:COUNT?
Example: :LXI:EVEN:LOG:COUN?

Range: 0 – Size
Instrument S/W Revision: A.01.60 or later

Next Entry (Remote Only) Returns the oldest entry from the LXI Event Log and removes it from the log. If the log is empty, an empty string is returned.

Remote Command: :LXI:EVENT:LOG[:NEXT]?
Example: :LXI:EVENT:LOG?
Instrument S/W Revision: A.01.60 or later

All (Remote Only) Non-destructively retrieves the entire contents of the event log. Entries are returned as separate strings, surrounded by double quote marks, and separated by a comma. Fields within each entry are also comma delimited.

Remote Command: :LXI:EVENT:LOG:ALL?
Example: :LXI:EVENT:LOG:ALL? Returns the entire event log contents.

An example may look like the following:

```
"11/12/2007,18:14:10.770385,Error,LogOverwrite,Rise,,,","11/12/2007,18:14:10.592105,Status,Measuring,Rise,,,","11/12/2007,18:14:10.597758,Status,Measuring,Fall,,,","11/12/2007,18:14:10.597786,Status,Sweeping,Fall,,,","11/12/2007,18:14:10.599030,Status,WaitingForTrigger,Rise,,,"
```

The contents of the Event Log vary, based on the operation of the instrument.

Instrument S/W Revision: A.01.60 or later

Specific Entry (Remote Only) Non-destructively retrieves a specifically indexed entry from the event log. Fields within an entry are comma delimited.

Remote Command: :LXI:EVENT:LOG:ENTRY? <intIndex>
Example: :LXI:EVENT:LOG:ENTRY? 0 Returns the first entry in the event log.

An example may look like the following:

```
"11/12/2007,18:14:10.770385,Error,LogOverwrite,Rise,,,"
```

The contents of the Event Log vary, based on the operation of the instrument.

Instrument S/W Revision: A.01.60 or later

Beginning Entry (Remote Only) Sets or freezes the beginning entry of the log when in circular mode to the most recently added entry at the time of the command. This is so that the :LXI:EVENT:LOG:ENTRY? command has a reference entry for indexing individual entries in the log.

Remote Command: :LXI:EVENT:LOG:CIRCULAR:FBENTRY
Example: :LXI:EVENT:LOG:CIRC:FBEN
Instrument S/W Revision: A.01.60 or later

Power On

The Power On menu key enables you to select how the instrument should power on. The options are: Mode and Input/Output Defaults, User Preset and Last State.

| | |
|-------------------------|---|
| Remote Command | :SYSTem:PON:TYPE MODE USER LAST PRESet :SYSTem:PON:TYPE? |
| Example | :SYST:PON:TYPE MODE |
| Key Path | System |
| Mode | All |
| Preset | This is unaffected by Preset but is set to Mode on a “Restore System Defaults->All” |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |

Mode and Input/Output Defaults

When the analyzer is powered on in Mode and Input/Output Defaults, it will perform a Restore Mode Defaults to all modes in the instrument and a Restore Input/Output Defaults as well.

| | |
|-------------------------|--------------------|
| Example | SYST:PON:TYPE MODE |
| Key Path | System, Power On |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

User Preset

Sets **Power On to User Preset**. When the analyzer is powered on in User Preset, it will User Preset each mode and switch to the power-on mode. Power On User Preset will not affect any settings beyond what a normal User Preset affects.

NOTE An instrument could never power up for the first time in User Preset.

| | |
|-------------------------|--------------------|
| Example | SYST:PON:TYPE USER |
| Key Path | System, Power On |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

Last State

Sets **Power On to Last**. When the analyzer is powered on, it will put all modes in the last state they were

in prior to when the analyzer was put into Power Standby and it will wake up in the mode it was last in prior to powering off the instrument. The saving of the active mode prior to shutdown happens behind the scenes when a controlled shutdown is requested by using the front panel power **Standby** key or by using the remote command `SYSTem:PDOWn`. The non-active modes are saved as they are deactivated and recalled by Power On Last State.

NOTE An instrument could never power up for the first time in Last.

If line power to the analyzer is interrupted, for example by pulling the line cord plug or by switching off power to a test rack, Power On Last State will not work properly.

| | |
|-------------------------|---|
| Restriction and Notes | Power on Last State only works if the user has done a controlled shutdown prior to powering on in Last. If a controlled shutdown is not done when in Power On Last State, the instrument will power up in the last active mode, but it may not power up in the active mode's last state. If an invalid mode state is detected, a Mode Preset will occur. To control the shutdown under remote control use the <code>:SYSTem:PDOWn</code> command. |
| Example | <code>SYST:PON:TYPE LAST</code> |
| Key Path | System, Power On |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

Power On Mode

This menu key brings up a Mode Menu that lists the available modes and lets you select which Mode is to be the power-on mode.

This Mode is used for Power On Mode and Input/Output Defaults and Restore System Defaults All.


| | |
|-----------------------|---|
| Remote Command | <code>:SYSTem: PON: MODE</code> SA BASIC ADEMOD NFIGURE PNOISE CDMA2K TDSCDMA VSA VSA89 601 WCDMA WIMAXOFDMA <code>:SYSTem: PON: MODE?</code> |
| Restriction and Notes | The list of possible modes (and remote parameters) to choose from is dependent on which modes are installed in the instrument. |
| Example | <code>SYST:PON:MODE SA</code> |
| Key Path | System, Power On |
| Mode | All |
| Preset | This is unaffected by Preset but is set on a "Restore System Defaults->All" to SA unless Spectrum Analysis mode is not installed in the instrument in which case the factory will load the default power-on mode. |
| State Saved | No |

System Functions System

Instrument S/W Revision A.01.60 or later

Restore Power On Defaults

This selection causes the Power On Type and Power On Mode settings to be a reset to their default value. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch. The Power On menu key under the Restore System Defaults menu causes the same action.

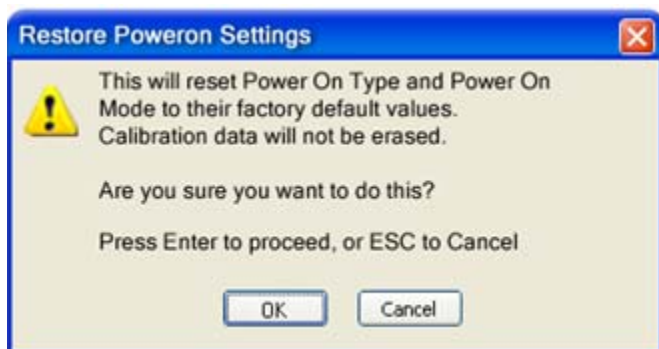

If you press any key other than OK or Enter, it is construed as a Cancel, because the only path that will actually cause the reset to be executed is through OK or Enter.

Key Path System, Power On
Example :SYST:DEF PON
Instrument S/W Revision A.01.60 or later

Alignments

The Alignments Menu controls and displays the automatic alignment of the instrument, and provides the ability to restore the default alignment values.

The current setting of the alignment system is displayed in the system Settings Panel along the top of the display, including a warning icon for conditions that may cause specs to be impacted, for example:



Key Path System
Instrument S/W Revision A.01.60 or later

Auto Align

Configures the method for which the automatic background alignment is run.

Automatic background alignments are run periodically between measurement acquisitions. The instrument's software determines when alignments are to be performed to maintain warranted operation. The recommended setting for **Auto Align** is **Normal**.

An Auto Align execution cannot be aborted with the Cancel (ESC) key. To interrupt an Auto Align execution, select **Auto Align Off**.

| | |
|-----------------------------------|--|
| Remote Command | :CALibration:AUTO ON PARTial OFF ALERT :CALibration:AUTO? |
| SCPI Status Bits/OPC Dependencies | When Auto Align is executing Bit 0 in the Status Operational register is set. |
| Dependencies/Couplings | Auto Align is set to Off if Restore Align Data is invoked. |
| Restriction and Notes | While Auto Align is executing, bit 0 of Status Operation register is set. |
| Example | :CAL:AUTO ON |
| Key Path | System, Alignments |
| Mode | All |
| Preset | This is unaffected by Preset but is set to ON upon a “Restore System Defaults->Align”. |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |

Normal Auto Align, Normal turns on the automatic alignment of all measurement systems. **Auto Align, Normal** maintains the instrument in warranted operation across varying temperature and over time.

If the condition “Align Now, All required” is set, transition to **Auto Align, Normal** will perform the required alignments and clear the “Align Now, All required” condition and then continue with further alignments as required to maintain the instrument adequately aligned for warranted operation.

When **Auto Align, Normal** is selected the Auto Align Off time is set to zero.

When **Auto Align, Normal** is selected the Settings Panel indicates ALIGN AUTO.

| | |
|-----------------------------------|---|
| SCPI Status Bits/OPC Dependencies | An interfering user signal may prevent automatic alignment of the RF subsystem. If this occurs, the Error Condition “Align skipped: 50 MHz interference” or “Align skipped: 4.8 GHz interference” is reported, the Status Questionable Calibration bit 11 is set, and the alignment proceeds. When a subsequent alignment of the RF subsystem succeeds, either by the next cycle of automatic alignment or from an Align Now, RF , the Error Condition and Status Questionable Calibration bit 11 are cleared. |
|-----------------------------------|---|

System Functions

System

| | |
|-------------------------|---|
| Restriction and Notes | Alignment processing as a result of the transition to Normal will be executed sequentially. Thus, *OPC? or *WAI following CAL:AUTO ON will return when the alignment processing is complete. The presence of an external signal may interfere with the RF portion of the alignment. If so, the Error Condition “Align skipped: 50 MHz interference” or “Align skipped: 4.8 GHz interference” is reported, and bit 11 is set in the Status Questionable Calibration register. After the interfering signal is removed, subsequent alignment of the RF will clear the condition, and clear bit 11 in the Status Questionable Calibration register. |
| Example | :CAL:AUTO ON |
| Key Path | System, Alignments, Auto Align |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

Partial Auto Align, Partial disables the full automatic alignment and the maintenance of warranted operation for the benefit of improved measurement throughput. Accuracy is retained for the Resolution Bandwidth filters and the IF Passband which is critical to FFT accuracy, demodulation, and many measurement applications. With Auto Align set to **Partial**, you are now responsible for maintaining warranted operation by updating the alignments when they expire. The **Auto Align, Alert** mechanism will notify you when alignments have expired. One solution to expired alignments is to perform the **Align All, Now** operation. Another is to return the **Auto Align** selection to **Normal**.

Auto Align, Partial is recommended for measurements where the throughput is so important that a few percent of improvement is more valued than an increase in the accuracy errors of a few tenths of a decibel. One good application of **Auto Align, Partial** would be an automated environment where the alignments can be called during overhead time when the device-under-test is exchanged.

When **Auto Align, Partial** is selected the elapsed time counter begins for Auto Align Off time.

When **Auto Align, Partial** is selected the Settings Panel indicates ALIGN PARTIAL with a warning icon. The warning icon is to inform the operator that they are responsible for maintaining the warranted operation of the instrument

| | |
|-------------------------|---|
| Restriction and Notes | Auto Align Partial begins the elapsed time counter for Auto Align Off time. |
| Example | :CAL:AUTO PART |
| Key Path | System, Alignments, Auto Align |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

Off Auto Align, Off disables automatic alignment and the maintenance of warranted operation, for the benefit of maximum measurement throughput. With Auto Align set to **Off**, you are now responsible for maintaining warranted operation by updating the alignments when they expire. The **Auto Align, Alert** mechanism will notify you when alignments have expired. One solution to expired alignments is to

perform the **Align All, Now** operation. Another is to return the **Auto Align** selection to **Normal**.

The **Auto Align, Off** setting is rarely the best choice, because **Partial** gives almost the same improvement in throughput while maintaining the warranted performance for a much longer time. The **Off** choice is intended for unusual circumstances such as the measurement of radar pulses where you might like the revisit time to be as consistent as possible.

When **Auto Align, Off** is selected the Auto Align Off time is initialized and the elapsed time counter begins.

When **Auto Align, Off** is selected the Settings Panel indicates ALIGN OFF with a warning icon. The warning icon is to inform the operator that they are responsible for maintaining the warranted operation of the instrument:

| | |
|-------------------------|---|
| Dependencies/Couplings | Auto Align is set to Off if Restore Align Data is invoked. |
| Restriction and Notes | Auto Align Off begins the elapsed time counter for Auto Align Off time. |
| Example | :CAL:AUTO OFF |
| Key Path | System, Alignments, Auto Align |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

All but RF Auto Align, All but RF, configures automatic alignment to include or exclude the RF subsystem. (Eliminating the automatic alignment of the RF subsystem prevents the input impedance from changing. The normal input impedance of 50 ohms can change to an open circuit when alignments are being used. Some devices under test do not behave acceptably under such circumstances, for example by showing instability.) When **Auto Align, All but RF ON** is selected, the operator is responsible for performing an **Align Now, RF** when RF-related alignments expire. The **Auto Align, Alert** mechanism will notify the operator to perform an **Align Now, All** when the combination of time and temperature variation is exceeded.

When **Auto Align, All but RF ON** is selected the Settings Panel indicates ALIGN AUTO/NO RF with a warning icon (warning icon is intended to inform the operator they are responsible for the maintaining the RF alignment of the instrument):

| | |
|-------------------------|---|
| Remote Command | :CALibration:AUTO:MODE ALL NRF :CALibration:AUTO:MODE? |
| Example | :CAL:AUTO:MODE NRF |
| Key Path | System, Alignments, Auto Align |
| Mode | All |
| Preset | This is unaffected by Preset but is set to ALL on a “Restore System Defaults->Align”. |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |

System Functions System

Alert The instrument will signal an Alert when conditions exist such that you will need to perform a full alignment (for example, **Align Now, All**). The Alert can be configured in one of four settings; **Time & Temperature, 24 hours, 7 days, or None**. A confirmation is required when a selection other than **Time & Temperature** is chosen. This prevents accidental deactivation of alerts.

With **Auto Align** set to **Normal**, the configuration of **Alert** is not relevant because the instrument's software maintains the instrument in warranted operation.


| | |
|-----------------------------------|---|
| Remote Command | :CALibration:AUTO:ALERt TTEMperature DAY WEEK NONE :CALibration:AUTO:ALERt? |
| Remote Command Notes | The alert that alignment is needed is the setting of bit 14 in the Status Questionable Calibration register. |
| SCPI Status Bits/OPC Dependencies | The alert is the Error Condition "Align Now, All required" and bit 14 is set in the Status Questionable Calibration register. |
| Example | :CAL:AUTO:ALER TTEM |
| Key Path | System, Alignments, Auto Align |
| Mode | All |
| Preset | This is unaffected by Preset but is set to TTEMperature on a "Restore System Defaults->Align". |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |

Time & Temperature With Auto Align Alert set to **Time & Temperature** the instrument will signal an alert when alignments expire due to the combination of the passage of time and changes in temperature. The alert is the Error Condition "Align Now, All required". If this choice for Alert is selected, the absence of an alert means that the analyzer alignment is sufficiently up-to-date to maintain warranted accuracy.

| | |
|-----------------------------------|--|
| SCPI Status Bits/OPC Dependencies | Bit 14 is set in the Status Questionable Calibration register. |
| Example | :CAL:AUTO:ALER TTEM |
| Key Path | System, Alignments, Auto Align, Alert |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

24 hours With Auto Align Alert set to **24 Hours** the instrument will signal an alert after a time span of 24 hours since the last successful full alignment (for example, **Align Now, All** or completion of a full Auto Align). You may choose this selection in an environment where the temperature is stable on a daily basis at a small risk of accuracy errors in excess of the warranted specifications. The alert is the Error Condition "Align Now, All required".

For front panel operation, confirmation is required to transition into this setting of Alert. The confirmation dialog is:

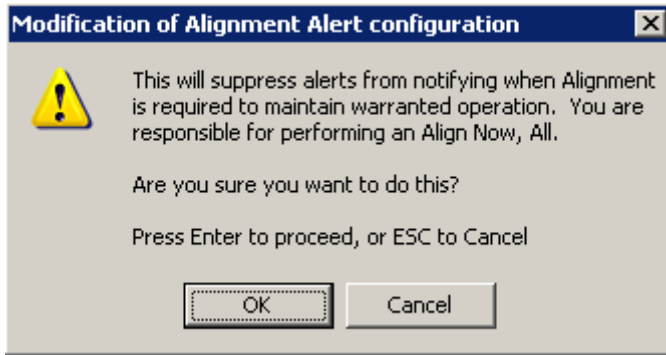


No confirmation is required when Alert is configured through a remote command.

| | |
|-----------------------------------|--|
| SCPI Status Bits/OPC Dependencies | Bit 14 is set in the Status Questionable Calibration register. |
| Example | :CAL:AUTO:ALER DAY |
| Key Path | System, Alignments, Auto Align, Alert |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

7 days With Auto Align Alert is set to **7 days** the instrument will signal an alert after a time span of 168 hours since the last successful full alignment (for example, **Align Now, All** or completion of a full Auto Align). You may choose this selection in an environment where the temperature is stable on a weekly basis, at a modest risk of accuracy degradations in excess of warranted performance. The alert is the Error Condition “Align Now, All required”.

For front panel operation, confirmation is required for the customer to transition into this setting of Alert. The confirmation dialog is:

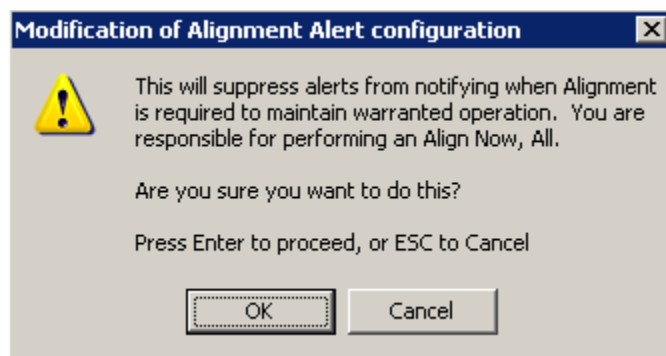

No confirmation is required when Alert is configured through a remote command.


| | |
|-----------------------------------|--|
| SCPI Status Bits/OPC Dependencies | Bit 14 is set in the Status Questionable Calibration register. |
| Example | :CAL:AUTO:ALER WEEK |

System Functions System

| | |
|-------------------------|---------------------------------------|
| Key Path | System, Alignments, Auto Align, Alert |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

None With Auto Align Alert set to **None** the instrument will not signal an alert. This is provided for rare occasions where you are making a long measurement which cannot tolerate Auto Align interruptions, and must have the ability to capture a screen image at the end of the measurement without an alert posted to the display. Agilent does not recommend using this selection in any other circumstances, because of the risk of accuracy performance drifting well beyond expected levels without the operator being informed.

For front panel operation, confirmation is required to transition into this setting of Alert. The confirmation dialog is:

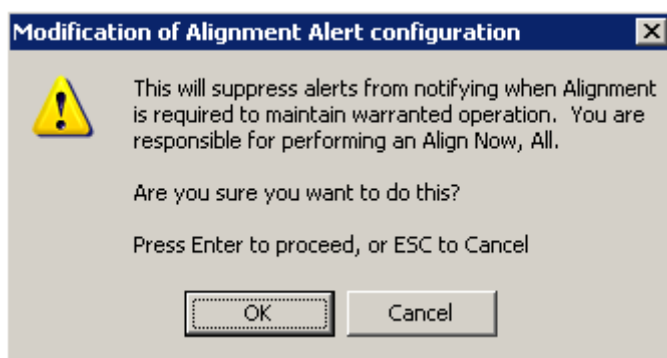

No confirmation is required when Alert is configured through a remote command.

| | |
|-------------------------|---------------------------------------|
| Example | :CAL:AUTO:ALER NONE |
| Key Path | System, Alignments, Auto Align, Alert |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

Align Now

Accesses alignment processes that are immediate action operations. They perform complete operations and run until they are complete.

| | |
|-------------------------|--------------------|
| Key Path | System, Alignments |
| Instrument S/W Revision | A.01.60 or later |

All Immediately executes an alignment of all subsystems. The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

If an interfering user signal is present at the RF Input, the alignment is performed on all subsystems except the RF. After completion, the Error Condition “Align skipped: 50 MHz interference” or “Align skipped: 4.8 GHz interference” is set. In addition the Error Condition “Align Now, RF required” is set,

and bits 11 and 12 are set in the Status Questionable Calibration register.

The query form of the remote commands (:CALibration[:ALL]? or *CAL?) invokes the alignment of all subsystems and returns a success or failure value. An interfering user signal is not grounds for failure; if the alignment was able to succeed on all portions but unable to align the RF because of an interfering signal, the resultant will be the success value.

Successful completion of **Align Now, All** will clear the “Align Now, All required” Error Condition, and clear bit 14 in the Status Questionable Calibration register. It will also begin the elapsed time counter for Last Align Now, All Time, and capture the Last Align Now, All Temperature.

If the Align RF subsystem succeeded in aligning (no interfering signal present), the elapsed time counter begins for Last Align Now, RF Time, and the temperature is captured for the Last Align Now, RF Temperature. In addition the Error Conditions “Align skipped: 50 MHz interference” and “Align skipped: 4.8 GHz interference” are cleared, the Error Condition “Align Now, RF required” is cleared, and bits 11 and 12 are cleared in the Status Questionable Calibration register

Align Now, All can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORt SCPI command. When this occurs the Error Condition “Align Now, All required” is set, and bit 14 is set in the Status Questionable Condition register. This is because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

In many cases, you might find it more convenient to change alignments to **Normal**, instead of executing **Align Now, All**. When the Auto Align process transitions to **Normal**, the analyzer will immediately start to update only the alignments that have expired, thus efficiently restoring the alignment process.

| | |
|-----------------------------------|--|
| SCPI Status Bits/OPC Dependencies | Bits 11, 12, or 14 may be set in the Status Questionable Calibration register. |
| Remote Command | :CALibration[:ALL] :CALibration[:ALL]? |
| Dependencies/Couplings | Initializes the time for the Last Align Now, All Time. Records the temperature for the Last Align Now, All Temperature. If Align RF component succeeded, initializes the time for the Last Align Now, RF Time. If Align RF component succeeded, records the temperature for the Last Align Now, RF Temperature. |
| Restriction and Notes | An interfering user supplied signal will result in the instrument requiring an Align Now, RF with the interfering signal removed. |

System Functions

System

| | |
|-------------------------|---|
| Remote Command Notes | <p>:CALibration[:ALL]? returns 0 if successful</p> <p>:CALibration[:ALL]? returns 1 if failed</p> <p>:CALibration[:ALL]? is the same as *CAL?</p> <p>While Align Now, All is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register.</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORt command.</p> <p>Successful completion will clear bit 14 in the Status Questionable Calibration register.</p> <p>An interfering user signal is not grounds for failure of Align Now, All. However, bits 11 and 12 are set in the Status Questionable Calibration register to indicate Align Now, RF is required.</p> |
| Example | :CAL |
| Key Path | System, Alignments, Align Now |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |
| Mode | All |
| Remote Command | *CAL? |
| Restriction and Notes | Everything about :CALibration[:ALL]? is synonymous with *CAL? including all conditions, status register bits, and couplings |
| Remote Command Notes | <p>*CAL? returns 0 if successful</p> <p>*CAL? returns 1 if failed</p> <p>:CALibration[:ALL]? is the same as *CAL?</p> <p>See additional remarks described with :CALibration[:ALL]?</p> |
| Example | *CAL? |
| Instrument S/W Revision | A.01.60 or later |

All but RF Immediately executes an alignment of all subsystems except the RF subsystem. The instrument will stop any measurement currently underway, perform the alignment, and then restart the measurement from the beginning (similar to pressing the **Restart** key). This can be used to align portions of the instrument that are not impacted by an interfering user input signal.

This operation might be chosen instead of **All** if you do not want the device under test to experience a large change in input impedance, such as a temporary open circuit at the analyzer input.

The query form of the remote commands (:CALibration:NRF?) will invoke the alignment and return a success or failure value.

Successful completion of **Align Now, All but RF** will clear the “Align Now, All required” Error Condition, and clear bit 14 in the Status Questionable Calibration register. If “Align Now, All required” was in effect prior to executing the All but RF, the Error Condition “Align Now, RF required” is asserted and bit 12 in the Status Questionable Calibration register is set. It will also begin the elapsed time counter for Last Align Now, All Time, and capture the Last Align Now, All Temperature.

Align Now, All but RF can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORt SCPI command. When this occurs the Error Condition “Align Now, All required” is set, and bit 14 is set in the Status Questionable Condition register. This is because new alignment data may be used for an individual subsystem, but not a full new set of data for all subsystems.

| | |
|-----------------------------------|---|
| Remote Command | :CALibration:NRF :CALibration:NRF? |
| SCPI Status Bits/OPC Dependencies | Bits 12 or 14 may be set in the Status Questionable Calibration register. |
| Dependencies/Couplings | Initializes the time for the Last Align Now, All Time. Records the temperature for the Last Align Now, All Temperature. |
| Remote Command Notes | :CALibration:NRF? returns 0 if successful :CALibration:NRF? returns 1 if failed While Align Now, All but RF is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register. This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORt command. Successful completion will clear bit 14 in the Status Questionable Calibration register and set bit 12 if invoked with “Align Now, All required”. |
| Example | :CAL:NRF |
| Key Path | System, Alignments, Align Now |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

RF Immediately executes an alignment of the RF subsystem. The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

This operation might be desirable if the alignments had been set to not include RF alignments, or if previous RF alignments could not complete because of interference which has since been removed.

If an interfering user signal is present at the RF Input, the alignment will terminate and raise the Error Condition “Align skipped: 50 MHz interference” or “Align skipped: 4.8 GHz interference”, and Error Condition “Align Now, RF required”. In addition, bits 11 and 12 will be set in the Status Questionable Calibration register.

System Functions System

The query form of the remote commands (:CALibration:RF?) will invoke the alignment of the RF subsystem and return a success or failure value. An interfering user signal is grounds for failure.

A failure encountered during alignment will set the Error Condition “Align RF failed” and set bit 3 in the Status Questionable Calibration register.

Successful completion of **Align Now, RF** clears the Error Conditions “Align skipped: 50 MHz interference” and “Align skipped: 4800 MHz interference” and the Error Conditions “Align RF failed” and “Align Now, RF required”, and clears bits 3, 11, and 12 in the Status Questionable Calibration register. It will also begin the elapsed time counter for Last Align Now, RF Time, and capture the Last Align Now, RF Temperature.

Align Now, RF can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORt SCPI command. When this occurs, the Error Condition “Align Now, RF required” is set, and bit 12 is set in the Status Questionable Condition register. None of the new alignment data is used.

| | |
|-----------------------------------|---|
| Remote Command | :CALibration:RF :CALibration:RF? |
| SCPI Status Bits/OPC Dependencies | Bits 11, 12, or 14 may be set in the Status Questionable Calibration register. |
| Dependencies/Couplings | Initializes the time for the Last Align Now, RF Time. Records the temperature for the Last Align Now, RF Temperature. |
| Restriction and Notes | An interfering user supplied signal will result in the instrument requiring an Align Now, RF with the interfering signal removed. |
| Remote Command Notes | :CALibration:RF? returns 0 if successful :CALibration:RF? returns 1 if failed (including interfering user signal) While Align Now, RF is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register. This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORt command. Successful completion will clear bits 3, 11, and 12 in the Status Questionable Calibration register. A failure encountered during alignment will set the Error Condition “Align RF failed” and set bit 3 in the Status Questionable Calibration register. An interfering user signal will result in bits 11 and 12 to be set in the Status Questionable Calibration register to indicate Align Now, RF is required. |
| Example | :CAL:RF |
| Key Path | System, Alignments, Align Now |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

Advanced

Advanced accesses alignment processes that are immediate action operations that perform operations that run until complete. Advanced alignments are performed on an irregular basis, or require additional operator interaction

| | |
|-------------------------|--------------------|
| Key Path | System, Alignments |
| Instrument S/W Revision | A.01.60 or later |

Characterize Preselector (Only with Option 507, 508, 513, or 526) The Preselector tuning curve drifts over temperature and time. Recognize that the **Amplitude, Presel Center** function adjusts the preselector for accurate amplitude measurements at an individual frequency. **Characterize Preselector** improves the amplitude accuracy by ensuring the Preselector is approximately centered at all frequencies without the use of the **Amplitude, Presel Center** function. **Characterize Preselector** can be useful in situations where absolute amplitude accuracy is not of utmost importance, and the throughput savings or convenience of not performing a **Presel Center** is desired. **Presel Center** is required prior to any measurement for best (and warranted) amplitude accuracy.

Agilent recommends that the **Characterize Preselector** operation be performed yearly as part of any calibration, but performing this operation every three months can be worthwhile.

Characterize Preselector immediately executes a characterization of the Preselector, which is a YIG-tuned filter (YTF). The instrument stops any measurement currently underway, performs the characterization, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

The query form of the remote commands (:CALibration:YTF?) will invoke the alignment of the YTF subsystem and return a success or failure value.

A failure encountered during alignment will set the Error Condition “Characterize YTF failed” and set bit 9 in the Status Questionable Calibration register.

Successful completion of **Advanced, Characterize Preselector** will clear the Error Condition “Characterize YTF failed”, and clear bit 9 in the Status Questionable Calibration register. It will also begin the elapsed time counter for Last Characterize Preselector Time, and capture the Last Characterize Preselector Temperature.

The last Characterize Preselector Time and Temperature must survive across the power cycle as this operation is performed infrequently.

Advanced, Characterize Preselector can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the :ABORT SCPI command. None of the new characterization data is then used.

| | |
|------------------------|--|
| Remote Command | :CALibration:YTF :CALibration:YTF? |
| Dependencies/Couplings | Initializes the time for the Last Characterize Preselector Time. Records the temperature for the Last Characterize Preselector Temperature. |
| Restriction and Notes | For Option 507, 508, 513, and 526 only. |

System Functions

System


| | |
|-------------------------|---|
| Remote Command Notes | <p>:CALibration:YTF? returns 0 if successful</p> <p>:CALibration:YTF? returns 1 if failed (including interfering user signal)</p> <p>While Advanced, Characterize Preselector is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register.</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the :ABORt command.</p> <p>Successful completion will clear bit 9 in the Status Questionable Calibration register.</p> <p>A failure encountered during alignment will set the Error Condition “Characterize Preselector failed” and set bit 9 in the Status Questionable Calibration register.</p> |
| Example | :CAL:YTF |
| Key Path | System, Alignments, Align Now |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

Show Alignment Statistics

Shows alignment information you can use to ensure that the instrument is operating in a specific manner. The Show Alignment Statistics screen is where you can view time and temperature information.

Values which are displayed are only updated when the Show Alignment Statistics screen is invoked, they are not updated while the Show Alignment Statistics screen is being displayed. The remote commands which access this information obtain current values.

An example of the Show Alignment Statistics screen would be similar to:

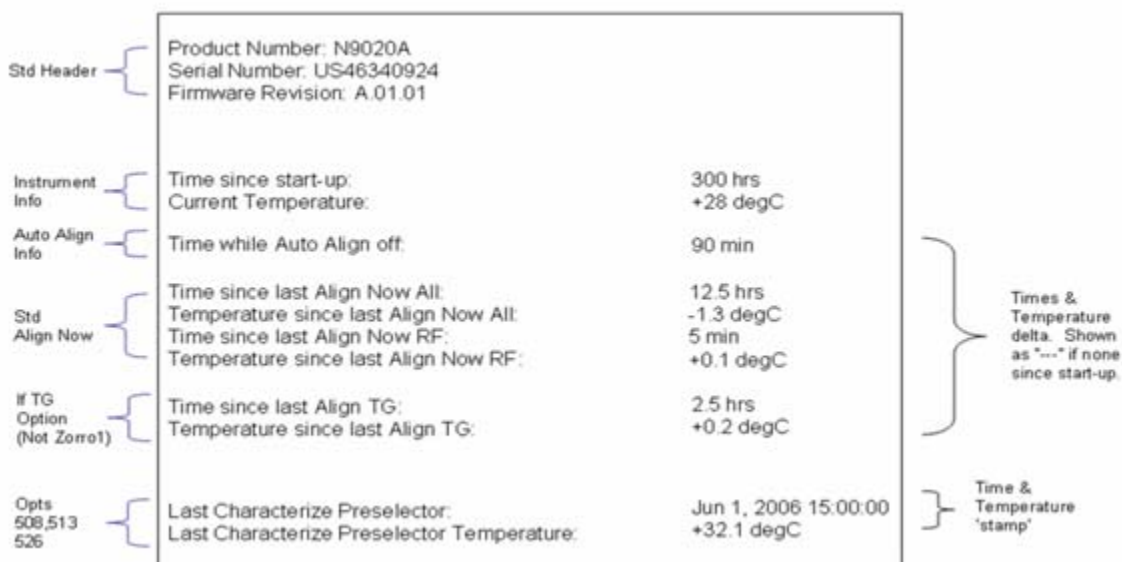

A successful Align Now, RF will set the Last Align RF temperature to the current temperature, and reset the Last Align RF time. A successful Align Now, All or Align Now, All but RF will set the Last Align Now All temperature to the current temperature, and reset the Last Align Now All time. A successful Align Now, All will also reset the Last Align RF items if the RF portion of the Align Now succeeded.

Restriction and Notes The values displayed on the screen are only updated upon entry to the screen and not updated while the screen is being displayed.

Key Path System, Alignments

Mode All

Instrument S/W Revision A.01.60 or later

Remote Command :SYSTem: PON: TIME?

Restriction and Notes Value is the time since the most recent start-up in seconds.

Example :SYST: PON: TIME?

Key Path Visual annotation in the Show Alignment Statistics screen

Mode All

State Saved No

Instrument S/W Revision A.01.60 or later

Remote Command :CALibration: TEMPerature: CURRent?

Restriction and Notes Value is in degrees Centigrade.

Value is invalid if using default alignment data (Align Now, All required)

System Functions System

| | |
|-------------------------|---|
| Example | :CAL:TEMP:CURR? |
| Key Path | Visual annotation in the Show Alignment Statistics screen |
| Mode | All |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |
| Remote Command | :CALibration:TIME:LALL? |
| Restriction and Notes | Value is the elapsed time, in seconds, since the last successful Align Now, All or Align Now, All but RF was executed. |
| Example | :CAL:TIME:LALL? |
| Key Path | Visual annotation in the Show Alignment Statistics screen |
| Mode | All |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |
| Remote Command | :CALibration:TEMPerature:LALL? |
| Restriction and Notes | Value is in degrees Centigrade at which the last successful Align Now, All or Align Now, All but RF was executed. |
| Example | :CAL:TEMP:LALL? |
| Key Path | Visual annotation in the Show Alignment Statistics screen |
| Mode | All |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |
| Remote Command | :CALibration:TIME:LRF? |
| Restriction and Notes | Value is the elapsed time, in seconds, since the last successful Align Now, RF was executed, either individually or as a component of Align Now, All. |
| Example | :CAL:TIME:LRF? |
| Key Path | Visual annotation in the Show Alignment Statistics screen |
| Mode | All |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |
| Remote Command | :CALibration:TEMPerature:LRF? |

| | |
|-------------------------|--|
| Restriction and Notes | Value is in degrees Centigrade at which the last successful Align Now, RF was executed, either individually or as a component of Align Now, All. |
| Example | :CAL:TEMP:LRF? |
| Key Path | Visual annotation in the Show Alignment Statistics screen |
| Mode | All |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |
| Remote Command | :CALibration:TIME:LPreselector? |
| Restriction and Notes | Value is date and time the last successful Characterize Preselector was executed. The date is separated from the time by a space character. Returns "" if no Characterize Preselector has ever been performed on the instrument. |
| Example | :CAL:TIME:LPR? |
| Key Path | Visual annotation in the Show Alignment Statistics screen |
| Mode | All |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |
| Remote Command | :CALibration:TEMPerature:LPreselector? |
| Restriction and Notes | Value is in degrees Centigrade at which the last successful Characterize Preselector was executed. |
| Example | :CAL:TEMP:LPR? |
| Key Path | Visual annotation in the Show Alignment Statistics screen |
| Mode | All |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |
| Remote Command | :CALibration:AUTO:TIME:OFF? |
| Restriction and Notes | Value is the elapsed time, in seconds, since Auto Align has been set to Off or Off with Alert. The value is 0 if Auto Align is ALL or NORF. |
| Example | :CAL:AUTO:TIME:OFF? |
| Key Path | Visual annotation in the Show Alignment Statistics screen |
| Mode | All |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |

Timebase DAC

Allows control of the internal 10 MHz reference oscillator timebase. This may be used to adjust for minor frequency alignment between the signal and the internal frequency reference. This adjustment has no effect if the instrument is operating with an External Frequency Reference.

If the value of the Timebase DAC changes (by switching to Calibrated from User with User set to a different value, or in User with a new value entered) an alignment may be necessary. The alignment system will take appropriate action; which will either invoke an alignment or cause an Alert.

| | |
|-------------------------|--|
| Remote Command | :CALibration:FREQuency:REFerence:MODE CALibrated USER :CALibration:FREQuency:REFerence:MODE? |
| Remote Command Notes | If the value of the timebase is changed the alignment system automatically performs an alignment or alerts that an alignment is due. |
| Restriction and Notes | If the value of the timebase is changed the alignment system automatically performs an alignment or alerts that an alignment is due. |
| Example | :CAL:FREQ:REF:MODE CAL |
| Key Path | System, Alignments |
| Mode | All |
| Preset | This is unaffected by Preset but is set to CALibrated on a “Restore System Defaults->Align”. |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |

Calibrated Sets the Timebase DAC to the value established during factory or field calibration. The value displayed on the menu key is the calibrated value.

| | |
|-------------------------|----------------------------------|
| Example | :CAL:FREQ:REF:MODE CAL |
| Key Path | System, Alignments, Timebase DAC |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

User Allows setting the Timebase DAC to a value other than the value established during the factory or field calibration. The value displayed on the menu key is the calibrated value.


| | |
|-------------------------|----------------------------------|
| Example | :CAL:FREQ:REF:MODE USER |
| Key Path | System, Alignments, Timebase DAC |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

| | |
|--------------------------|--|
| Remote Command | :CALibration:FREQuency:REFerence:FINE <integer> :CALibration:FREQuency:REFerence:FINE? |
| Dependencies/Couplings | Setting :CAL:FREQ:REF:FINE sets :CAL:FREQ:REF:MODE USER |
| Restriction and Notes | If the value of the timebase is changed the alignment system automatically performs an alignment or alerts that an alignment is due. |
| Example | :CAL:FREQ:REF:FINE 8191 |
| Key Path | System, Alignments, Timebase DAC |
| Mode | All |
| Preset | This is unaffected by Preset but is set to the factory setting on a “Restore System Defaults->Align”. |
| State Saved | No |
| Min | 0 |
| Max | 16383 |
| Instrument S/W Revision | A.01.60 or later |
| Remote Command: | :CALibration:FREQuency:REFerence:COARse <integer> :CALibration:FREQuency:REFerence:COARse? |
| Remote Command Notes: | This is an alias for CAL:FREQ:REF:FINE any change to COARse is reflected in FINE and vice-versa. See CAL:FREQ:REF:FINE for description of functionality. |
| Dependencies/Couplings: | Setting :CAL:FREQ:REF:COAR sets :CAL:FREQ:REF:MODE USER |
| Example: | :CAL:FREQ:REF:COAR 8191 |
| Instrument S/W Revision: | A.01.60 or later |

Restore Align Defaults

Initializes the alignment user interface settings, not alignment data, to the factory default values. Align Now, All must be executed if the value of the Timebase DAC results in a change.

For front panel operation, you are prompted to confirm action before setting the alignment parameters to factory defaults:

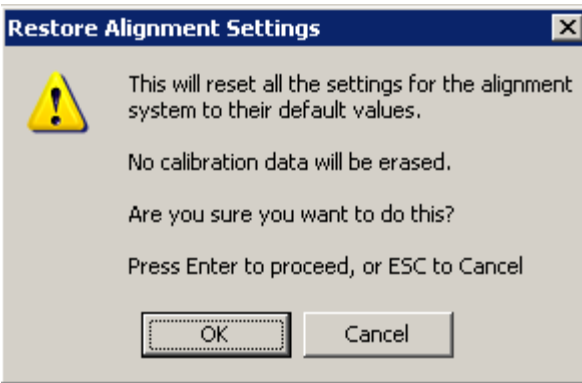


The parameters affected are:

| Parameter | Setting |
|-------------------------|--|
| Timebase DAC | Calibrated |
| Timebase DAC setting | Calibrated value |
| Auto Align State | Normal (if the instrument is not operating with default alignment data, Off otherwise) |
| Auto Align All but RF | Off |
| Auto Align Alert | Time & Temperature |
| Restriction and Notes | Alignment processing that results as the transition to Auto Alignment Normal will be executed sequentially; thus *OPC? or *WAI will wait until the alignment processing is complete. |
| Example | :SYST:DEF ALIG |
| Key Path | System, Alignments |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

Restore Align Data

Initializes the alignment data to the factory default values. This action is normally not necessary. It is recommended if alignment errors occur. If alignment errors continue to occur after Restore Align Data, the instrument is in need of repair. Align Now, All must be executed to regain warranted operation, and the user is responsible for configuring Auto Align thereafter.

For front panel operation, confirmation is required before setting the alignment data to factory defaults. The confirmation dialog is:

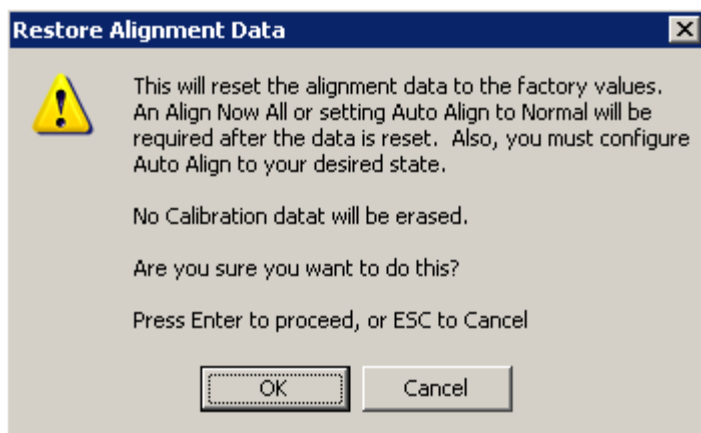

The Error Condition “Align Now, All required” is set, and bit 14 in the Status Questionable Calibration register is set. Auto Align is set to Off.

| | |
|-------------------------|--|
| Remote Command | :CALibration:DATA:Default |
| Dependencies/Couplings | Sets Auto Align to Off. Sets bit 14 in the Status Questionable Calibration register. The Error Condition “Align Now, All required” is set. |
| Example | :CAL:DATA:DEF |
| Key Path | System, Alignments |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

I/O Config

Activates a menu for identifying and changing the I/O configuration for remote control.

| | |
|-------------------------|------------------|
| Key Path | System |
| Instrument S/W Revision | A.01.60 or later |

GPIB Address

Select the GPIB remote address.

| | |
|----------------------|---|
| Remote Command | :SYSTem:COMMunicate:GPIB [1] [:SELF] :ADDRess <integer> :SYSTem:COMMunicate:GPIB [1] [:SELF] :ADDRess? |
| Remote Command Notes | Note: Changing the Address on the GPIB port requires all further communication to use the new address. |
| Example | :SYST:COMM:GPIB:ADDR 17 |
| Key Path | System, I/O Config |
| Mode | All |

System Functions

System

| | |
|-------------------------|--|
| Preset | This is unaffected by Preset but is set to 18 on a “Restore System Defaults->Misc” |
| State Saved | No |
| Range | 0 to 30 |
| Instrument S/W Revision | A.01.60 or later |

SCPI LAN Menu

Activates a menu for identifying and changing the SCPI over LAN configuration. There are a number of different ways to send SCPI remote commands to the instrument over LAN. It can be a problem to have multiple users simultaneously accessing the instrument over the LAN. These keys limit that somewhat by disabling the telnet, socket, and/or SICL capability.

| | |
|-------------------------|--------------------|
| Key Path | System, I/O Config |
| Instrument S/W Revision | A.01.60 or later |

SCPI Telnet Turns the SCPI LAN telnet capability On or Off allowing you to limit SCPI access over LAN through telnet.

| | |
|-------------------------|--|
| Remote Command | :SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle OFF ON 0 1 :SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle? |
| Example | :SYST:COMM:LAN:SCPI:TELN:ENAB OFF |
| Key Path | System, I/O Config, SCPI LAN |
| Mode | All |
| Preset | This is unaffected by Preset but is set to ON with a “Restore System Defaults->Misc” |
| State Saved | No |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

SCPI Socket Turns the capability of establishing Socket LAN sessions On or Off. This allows you to limit SCPI access over LAN through socket sessions.

| | |
|----------------|--|
| Remote Command | :SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle OFF ON 0 1 :SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle? |
| Example | :SYST:COMM:LAN:SCPI:SOCK:ENAB OFF |
| Key Path | System, I/O Config, SCPI LAN |
| Mode | All |

| | |
|-------------------------|--|
| Preset | This is unaffected by Preset but is set to ON with a “Restore System Defaults->Misc” |
| State Saved | No |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

SCPI Socket Control Port (remote command only) Returns the TCP/IP port number of the control socket associated with the SCPI socket session. This query enables you to obtain the unique port number to open when a device clear is to be sent to the instrument. Every time a connection is made to the SCPI socket, the instrument creates a peer control socket. The port number for this socket is random. The user must use this command to obtain the port number of the control socket. To force a device clear on this socket, open the port and send the string “DCL” to the instrument.

If this SCPI command is sent to a non SCPI Socket interface, then 0 is returned.

| | |
|-------------------------|--|
| Mode | All |
| Remote Command | :SYSTem:COMMunicate:LAN:SCPI:SOCKet:CONTRol? |
| Preset | This is unaffected by Preset or “Restore System Defaults->Misc”. |
| State Saved | No |
| Range | 0 to 65534 |
| Example | :SYST:COMM:LAN:SCPI:SOCK:CONT? |
| Instrument S/W Revision | A.01.60 or later |

SICL Server Turns the SICL server capability On or Off, enabling you to limit SCPI access over LAN through the SICL server. (SICL IEEE 488.2 protocol.)

| Parameter | Description | Setting |
|----------------------------|--|---------|
| Maximum Connections | The maximum number of connections that can be accessed simultaneously | 5 |
| Instrument Name | The name (same as the remote SICL address) of your analyzer | inst0 |
| Instrument Logical Unit | The unique integer assigned to your analyzer when using SICL LAN | 8 |
| Emulated GPIB Name | The name (same as the remote SICL address) of the device used when communicating with your analyzer | gpib7 |
| Emulated GPIB Logical Unit | The unique integer assigned to your device when it is being controlled using SICL LAN | 8 |
| Emulated GPIB Address | The emulated GPIB address assigned to your transmitter tester when it is a SICL server (the same as your GPIB address) | 18 |

System Functions

System

| | |
|-------------------------|--|
| Remote Command | :SYSTem:COMMunicate:LAN:SCPI:SICL:ENABle OFF ON 0 1 :SYSTem:COMMunicate:LAN:SCPI:SICL:ENABle? |
| Example | :SYST:COMM:LAN:SCPI:SICL:ENAB OFF |
| Key Path | System, I/O Config, SCPI LAN |
| Mode | All |
| Preset | This is unaffected by Preset, but is set to ON with a “Restore System Defaults->Misc” |
| State Saved | No |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Query USB Connection (Remote Command Only)

Enables you to determine the speed of USB connection.

| | |
|-------------------------|---|
| Mode | All |
| Remote Command | :SYSTem:COMMunicate:USB:CONNectioN? |
| State Saved | No |
| Range | NONE LSPeed HSPeed FSPeed |
| Remote Command Notes | NONE – Indicates no USB connection has been made. LSPeed – Indicates a USB low speed connection (1.5 Mbps). Note: this is reserved for future use, the T+M488 protocol is not supported on low speed connections. HSPeed – Indicates that a USB high speed connection (480 Mbps) has been negotiated. FSPeed – Indicates that a USB full speed connection (12 Mbps) has been negotiated. |
| Example | :SYST:COMM:USB:CONN? |
| Instrument S/W Revision | A.01.60 or later |

USB Connection Status (Remote Command Only)

Enables you to determine the current status of the USB connection.

| | |
|----------------|---------------------------------|
| Mode | All |
| Remote Command | :SYSTem:COMMunicate:USB:STATus? |
| State Saved | No |
| Range | SUSPended ACTive |

| | |
|-------------------------|--|
| Remote Command Notes | <p>SUSPended – Indicates that the USB bus is currently in its suspended state. The bus is in the suspended state when:</p> <p>The bus is not connected to any controller</p> <p>The controller is currently powered off</p> <p>The controller has explicitly placed the USB device into the suspended state.</p> <p>When in the suspended state, no USB activity, including start of frame packets are received.</p> <p>ACTive – Indicates that the USB device is in the active state. When the device is in the active state, it is receiving periodic start of frames but it isn't necessarily receiving or transmitting data.</p> |
| Example | :SYST:COMM:USB:STAT? |
| Instrument S/W Revision | A.01.60 or later |

USB Packet Count (Remote Command Only)

Enables you to determine the number of packets received and transmitted on the USB bus.

| | |
|-------------------------|--|
| Mode | All |
| Remote Command | :SYSTem:COMMunicate:USB:PACKets? |
| State Saved | No |
| Remote Command Notes | <p>Two integers are returned. The first is the number of packets received since application invocation, the second is the number of packets transmitted since application invocation. If no packets have been received or transmitted the response is 0,0.</p> <p>The packet count is initialized to 0,0 when the instrument application is started.</p> |
| Example | :SYST:COMM:USB:PACK? |
| Instrument S/W Revision | A.01.60 or later |

LXI Configuration

Pressing this key opens a menu that allows you to access the various LXI configuration properties.

TIP For information about setting up measurements using LXI, refer to the "Programmer's Guide" located in your analyzer at: C:/Program Files/Agilent/Signal Analysis/Help/Bookfiles/x_series_prog.pdf. It is also available by selecting the "Additional Documentation" page of the Help.

| | |
|-------------------------|--------------------|
| Key Path | System, I/O Config |
| Instrument S/W Revision | A.01.60 or later |

System Functions System

LAN Reset This key resets the LAN connection.

| | |
|-------------------------|-------------------------|
| Key Path | System, I/O Config, LXI |
| Instrument S/W Revision | A.01.60 or later |

LXI Domain The instrument only receives LXI LAN Events sent by members of the same LXI Domain. Conversely, LXI Output LAN Events sent by the instrument can only be received by members of the same LXI Domain. This is not the same as the IEEE 1588 domain (see “[Domain \(Remote Only\)](#)” on page 254).

| | |
|-------------------------|--|
| Key Path | System, I/O Config, LXI |
| Remote Command | :LXI:EVENT:DOMain <intDomain> :LXI:EVENT:DOMain? |
| Example | :LXI:EVEN:DOM 128 :LXI:EVEN:DOM? |
| Preset | Not affected by a Preset. The default value of "0" can be restored by pressing Restore Defs, Input/Output Settings |
| State Saved | Saved in instrument state. |
| Range | 0–255 |
| Instrument S/W Revision | A.01.60 or later |

LXI Output LAN Events The device can be configured to send LXI LAN Events as the instrument’s state changes. Specifically, it can notify other devices as the status signals WaitingForTrigger, Sweeping, Measuring, OperationComplete, and Recalling transition. Additionally, Output LAN Events can be sent in response to the receipt of any of the Input LAN Events.

This is the entry point for the LXI Output LAN Event system. This key branches to a list of events that can be sent out on the LAN in response to instrument events.

| | |
|-------------------------|---------------------------|
| Key Path | System, I/O Config |
| Instrument S/W Revision | A.01.60 or later |

Disable All This command causes the Enable property of all members of the LXI Output LAN Event List to be set to OFF.

| | |
|-------------------------|--|
| Key Path | System, I/O Config, LXI, LXI Output LAN Events |
| Remote Command | :LXI:EVENT[:OUTPUT]:LAN:DISable:ALL |
| Example | :LXI:EVEN:LAN:DIS:ALL |
| Instrument S/W Revision | A.01.60 or later |

Output LAN Event List This is the list of LXI Output LAN events that can be sent in response to an instrument event such as sweeping or waiting for a trigger. Each member of this list has a key in the LXI Output LAN Events

panel. The list can grow and shrink in response to Add and Remove commands respectively. New pages must be added and removed automatically as the list size changes. Only the first 14 characters of an LXI Output LAN Event name are displayed on the key.

| | |
|-------------------------|--|
| Remote Command | :LXI:EVENT[:OUTPut]:LAN:LIST? |
| Example | :LXI:EVEN:LAN:LIST? Returns the complete list of Output LAN Events which is, at minimum: “LAN0”, “LAN1”, “LAN2”, “LAN3”, “LAN4”, “LAN5”, “LAN6”, “LAN7”, “WaitingForTrigger”, “Measuring”, “Sweeping”, “OperationComplete”, “Recalling” |
| Key Path | System, I/O Config, LXI, LXI Output LAN Events |
| Preset | Not affected by a Preset. The default values can be restored by pressing Restore Defs, Input/Output Settings. Preset/Default values: “LAN0”, “LAN1”, “LAN2”, “LAN3”, “LAN4”, “LAN5”, “LAN6”, “LAN7”, “WaitingForTrigger”, “Measuring”, “Sweeping”, “OperationComplete”, “Recalling” |
| State Saved | Saved in instrument state. |
| Instrument S/W Revision | A.01.60 or later |

Add (Remote Only) Adds the provided string to the list of possible LAN events to output as a response to instrument events. As new LAN events are added, keys are generated in the LXI Output LAN Events menu. New key panels are generated as the number of possible LAN events increases past a multiple of six, and the “More” keys are updated to reflect the new number of key panels in the LXI Output LAN Events menu.

| | |
|--------------------------|---|
| Remote Command: | :LXI:EVENT[:OUTPut]:LAN:ADD “LANEVENT” |
| Example: | :LXI:EVEN:LAN:ADD “LANEVENT” |
| State Saved: | No |
| Range: | Uppercase, Lowercase, Numeric, Symbol except for comma or semicolon |
| Restriction and Notes: | The maximum length of the string is 16 characters. Longer strings are concatenated and added to the LXI Output LAN Event list. No event is added if the LAN Event already exists. |
| Instrument S/W Revision: | A.01.60 or later |

Remove (Remote Only) Removes the provided string from the list of possible LAN events to output as a response to instrument events. As new LAN events are removed, keys are removed from the LXI Output LAN Events menu. Key panels are removed as the number of possible LAN events decreases past a multiple of six, and the “More” keys are updated to reflect the new number of key panels in the LXI Output LAN Events menu. Events from the default list cannot be removed.

| | |
|-----------------|---|
| Remote Command: | :LXI:EVENT[:OUTPut]:LAN:REMOve[:EVENT] “LANEVENT” |
| Example: | :LXI:EVEN:LAN:REM “LANEVENT” |

System Functions System

| | |
|--------------------------|--|
| State Saved: | No |
| Range: | Uppercase, Lowercase, Numeric, Symbol |
| Restriction and Notes: | The maximum length of the string is 16 characters. Longer strings are concatenated and the resulting LAN Event is removed from the LXI Output LAN Event list. Nothing happens if the LAN event was not introduced using the Add command. |
| Instrument S/W Revision: | A.01.60 or later |

Remove All (Remote Only) Clears the list of custom LAN events (those introduced using the Add command) that are available to output as a response to instrument events. As new LAN events are removed, keys are removed from the LXI Output LAN Events menu. Key panels are removed as the number of possible LAN events decreases past a multiple of six, and the “More” keys are updated to reflect the new number of key panels in the LXI Output LAN Events menu.

| | |
|--------------------------|--|
| Remote Command: | :LXI:EVENT [:OUTPut] :LAN:REMOve:ALL |
| Example: | :LXI:EVEN:LAN:REM:ALL |
| Restriction and Notes: | Only LAN Events added with the Add command are removed. Default events cannot be removed. |
| Instrument S/W Revision: | A.01.60 or later |

Source Sets the instrument event that this LXI Output LAN event is tied to.

The possible instrument events are “WaitingForTrigger”, “Sweeping”, “Measuring”, “OperationComplete”, and “Recalling”.

The key is labeled with the value of the selected source.

For the instrument event specific LXI Output LAN Events “WaitingForTrigger,” “Sweeping,” “Measuring,” “OperationComplete,” and “Recalling,” this parameter is set to the corresponding source value and cannot be changed. For these events, the Source key does not appear.

WaitingForTrigger, Measuring, and Sweeping correspond to the standard trigger state machine activities for which they are named.

OperationComplete is low when a measurement operation is underway. For example, OperationComplete is low throughout a list sweep measurement, even though Sweeping, Measuring, and WaitingForTrigger will undergo a number of transitions. In this case, OperationComplete goes high when the entire list sweep is finished.

Recalling is high while the instrument is actively recalling a state.

Additionally, the Source parameter can be set to the name of any Input LAN Event. This causes the Output LAN Event to be sent upon receipt of the named Input LAN Event. There is no front panel support for these events.

The default list of available Input LAN Events is:

- “LAN0”
- “LAN1”
- “LAN2”

- “LAN3”
- “LAN4”
- “LAN5”
- “LAN6”
- “LAN7”

| | |
|-------------------------|---|
| Remote Command | :LXI:EVENT[:OUTPut]:LAN[:SET]:SOURCE "LANEVENT", "SourceEvent" :LXI:EVENT[:OUTPut]:LAN[:SET]:SOURCE? "LANEVENT" |
| Example | :LXI:EVEN:LAN:SOUR "LANEVENT", "WaitingForTrigger" |
| Restriction and Notes | The maximum length of the string is 45 characters. |
| Key Path | System, I/O Config, LXI, LXI Output LAN Events, LAN[n] |
| Preset | Not affected by a Preset. The default values can be restored by pressing Restore Defs, Input/Output Settings. Preset/Default values: "Sweeping" (The Output LAN Events "WaitingForTrigger", "Sweeping", "Measuring", "OperationComplete", and "Recalling" all have default source parameters that match their names) |
| State Saved | Saved in instrument state. |
| Range | "WaitingForTrigger" "Sweeping" "Measuring" "OperationComplete" "Recalling" "LAN0" "LAN1" "LAN2" "LAN3" "LAN4" "LAN5" "LAN6" "LAN7" any user-added Input LAN Event |
| Instrument S/W Revision | A.01.60 or later |

Destination (Remote Only) Outgoing LAN events are sent to the hosts enumerated in the destination expression. This expression takes the form of “host1:port1, host2:port2, ...” where port numbers are optional, and default to the IANA assigned TCP port (5044). To designate a UDP broadcast at the default port, set the destination string to “” or “ALL”. To designate a UDP broadcast at a specific port, set the destination string to “:port” or “ALL:port”.

Examples:

- “192.168.0.1:23”
- “agilent.com, soco.agilent.com”
- “agilent.com:80, 192.168.0.1”

| | |
|-----------------|---|
| Remote Command: | :LXI:EVENT[:OUTPut]:LAN[:SET]:DESTINATION "LANEVENT", "destinationExpression" :LXI:EVENT[:OUTPut]:LAN[:SET]:DESTINATION? "LANEVENT" |
| Example: | :LXI:EVEN:LAN:DEST "LANEVENT", "host1, 192.168.0.1:80" |
| Preset: | Not affected by a Preset. The default value of "ALL" can be restored by using the command: :SYSTem:DEFault INPut |

System Functions System

| | |
|--------------------------|--|
| State Saved: | Saved in instrument state. |
| Range: | Uppercase, Lowercase, Numeric, Symbol |
| Restriction and Notes: | The maximum length of the string is 45 characters. |
| Instrument S/W Revision: | A.01.60 or later |

Drive Determines the behavior of an output event.

- Normal designates typical operation, where both edges of the instrument event are transmitted,
- Off disables the LAN event.
- Wired-OR causes only one edge to be transmitted.

| | |
|-------------------------|--|
| Key Path | System, I/O Config, LXI, LXI Output LAN Events, LAN[n] |
| Remote Command | :LXI:EVENT[:OUTPut]:LAN[:SET]:DRIVE "LANEVENT", OFF NORMAl WOR :LXI:EVENT[:OUTPut]:LAN[:SET]:DRIVE? "LANEVENT" |
| Example | :LXI:EVENT:LAN:DRIVE "LANEVENT",WOR |
| Preset | Not affected by a Preset. The default value of "NORMAl" can be restored by using the command: :SYSTEM:DEFAULT INPUT |
| State Saved | Saved in instrument state. |
| Range | OFF NORMAl WOR |
| Instrument S/W Revision | A.01.60 or later |

Slope Slope determines which instrument event transition results in a LAN packet being sent and whether or not that edge is inverted.

When the Drive parameter is set to Normal, a Slope of Negative causes both edges to be inverted before they are transmitted. A Positive Slope transmits the edges unaltered.

When the Drive parameter is set to WOR, only Positive edges are transmitted. When the Slope is Negative, a falling edge is inverted and sent as a rising edge. When the Slope is Positive, a rising edge is sent normally.

The following table illustrates the effects of the Slope and Drive parameters.

| Instrument Event Edge | Slope Parameter | Drive Parameter | Action |
|-----------------------|-----------------|-----------------|----------|
| 0 | Negative | Off | Not sent |
| 0 | Positive | Off | Not sent |
| 1 | Negative | Off | Not sent |
| 1 | Positive | Off | Not sent |
| 0 | Negative | Normal | 1 |

| | | | |
|---|----------|----------|----------|
| 0 | Positive | Normal | 0 |
| 1 | Negative | Normal | 0 |
| 1 | Positive | Normal | 1 |
| 0 | Negative | Wired OR | 1 |
| 0 | Positive | Wired OR | Not sent |
| 1 | Negative | Wired OR | Not sent |
| 1 | Positive | Wired OR | 0 |

| | |
|-------------------------|--|
| Key Path | System, I/O Config, LXI, LXI Output LAN Events, LAN[n] |
| Remote Command | :LXI:EVENT[:OUTPut]:LAN[:SET]:SLOPe "LANEVENT", POSitive NEGative :LXI:EVENT[:OUTPut]:LAN[:SET]:SLOPe? "LANEVENT" |
| Example | :LXI:EVEN:LAN:SLOP "LANEVENT",POS |
| Preset | Not affected by a Preset. The default value of "Positive" can be restored by using the command: :SYSTem:DEFault INPut |
| State Saved | Saved in instrument state. |
| Range | POSitive NEGative |
| Instrument S/W Revision | A.01.60 or later |

Timestamp Delta This parameter represents a time in seconds to add to the timestamp of the Output LAN Event. This timestamp delta allows the receiving instrument to delay its response until the time specified in the timestamp.

| | |
|-------------------------|---|
| Key Path | System, I/O Config, LXI, LXI Output LAN Events, LAN[n] |
| Remote Command | :LXI:EVENT[:OUTPut]:LAN[:SET]:TSDelta "LANEVENT", <seconds> :LXI:EVENT[:OUTPut]:LAN[:SET]:TSDelta? "LANEVENT" |
| Example | :LXI:EVEN:LAN:TSD "LANEVENT",10.5 s |
| Preset | Not affected by a Preset. The default value of "0.0 s" can be restored by using the command: :SYSTem:DEFault INPut |
| State Saved | Saved in instrument state. |
| Range | 0.0 – 1.7976931348623157 x 10308 s (Max Double) |
| Instrument S/W Revision | A.01.60 or later |

Enabled If this parameter is set to ON, this LAN Event is sent when the selected Source instrument event occurs.

System Functions System

Otherwise, this LAN Event is never output.

| | |
|-------------------------|--|
| Key Path | System, I/O Config, LXI, LXI Output LAN Events, LAN[n] |
| Remote Command | :LXI:EVENT[:OUTPUT]:LAN[:SET]:ENABLED "LANEVENT", ON OFF 1 0 :LXI:EVENT[:OUTPUT]:LAN[:SET]:ENABLED? "LANEVENT" |
| Example | :LXI:EVEN:LAN:ENAB "LAN0",ON |
| Preset | Not affected by a Preset. The default value of "OFF" can be restored by using the command: :SYSTEM:DEFAULTINPUT |
| State Saved | Saved in instrument state. |
| Range | OFF ON 0 1 |
| Instrument S/W Revision | A.01.60 or later |

Count (Remote Only) Returns the number of items in the LXI Output LAN Event List.

| | |
|--------------------------|--------------------------------|
| Remote Command: | :LXI:EVENT[:OUTPUT]:LAN:COUNT? |
| Example: | :LXI:EVEN:LAN:COUN? |
| Instrument S/W Revision: | A.01.60 or later |

Configure (Remote Only) Allows the configuration of some of the above parameters from a single SCPI command.

| | |
|--------------------------|---|
| Remote Command: | :LXI:EVENT[:OUTPUT]:LAN[:SET]:CONFIGURE "lanEvent", <enabled>, <source>, <slope>, <drive>, <destination> |
| Example: | :LXI:EVEN:LAN:CONF "LAN0",1,"WaitingForTrigger",POS,NORM,"ALL" |
| Instrument S/W Revision: | A.01.60 or later |

Send (Remote Only) Forces the instrument to send the requested LAN Event. The LAN Event must be enabled, otherwise this command is ignored.

| | |
|--------------------------|--|
| Remote Command: | :LXI:EVENT[:OUTPUT]:LAN:SEND "LANEVENT", RISE FALL |
| Example: | :LXI:EVEN:LAN:SEND "LANEVENT", FALL |
| Instrument S/W Revision: | A.01.60 or later |

Identifier (Remote Only) Sets the string that will be placed in the peer-to-peer packet when the Output LAN Event is transmitted. The Identifier is variable to allow for easier system debugging. The Identifier must be unique,

for example the “LAN0” and “LAN1” output events cannot have identical identifiers.

| | |
|--------------------------|--|
| Remote Command: | :LXI:EVENT[:OUTPut]:LAN[:SET]:IDENTifier "LANEVENT", "identifier" :LXI:EVENT[:OUTPut]:LAN[:SET]:IDENTifier? "LANEVENT" |
| Example: | :LXI:EVEN:LAN:IDEN"LAN0","debugstring" |
| State Saved: | Saved in instrument state. |
| Range: | Uppercase, Lowercase, Numeric, Symbol |
| Restriction and Notes: | The maximum length of the string is 16 characters. Nothing happens if the LAN event does not exist. The default value is that the identifier is equivalent to the name of the LAN Event. |
| Instrument S/W Revision: | A.01.60 or later |

IEEE 1588 Time (Remote Only)

Time Epoch Time (Remote Only) If the device is selected as the IEEE 1588 master clock, this sets the clock using the number of seconds elapsed since January, 1 1970 at 00:00:00 in International Atomic Time (TAI). Epoch time is time zone invariant. Otherwise, this allows the user to query the epoch time.

| | |
|--------------------------|---|
| Remote Command: | :LXI:CLOCK[:TIME][:VALue] <seconds>,<fractionalSeconds> |
| Example: | :LXI:CLOC 10020304.0 s,0.123456 s |
| Preset: | Not affected by a Preset. The default value of "System Time" can be restored by using the command: :SYSTem:DEFault INPut |
| State Saved: | No |
| Range: | Seconds: 0.0 – 1.7976931348623157 x 10308 s (Max Double) Fraction: 0.0 s – 0.999999 s |
| Restriction and Notes: | The seconds argument must only contain values representing whole seconds. For example 1243.0 s is acceptable, but 1243.01 results in an error. Ignored when the device is not selected as the IEEE 1588 master clock. The fractional portion is only accurate to the microseconds position. Error generated if the seconds argument contains a fractional portion. |
| Instrument S/W Revision: | A.01.60 or later |
| Remote Command: | :LXI:CLOCK[:TIME][:VALue]? |
| Example: | :LXI:CLOC? |
| Preset: | System time |

System Functions

System

| | |
|--------------------------|---|
| State Saved: | No |
| Range: | Seconds: 0.0 – 1.7976931348623157 x 10308 s (Max Double) Fraction: 0.0 s – 0.999999 s |
| Restriction and Notes: | The seconds argument must only contain values representing whole seconds. For example 1243.0 s is acceptable, but 1243.01 results in an error. Ignored when the device is not selected as the IEEE 1588 master clock. The fractional portion is only accurate to the microseconds position. Error generated if the seconds argument contains a fractional portion. |
| Instrument S/W Revision: | A.01.60 or later |

Seconds (Remote Only) If the device is selected as the IEEE 1588 master clock, this sets the seconds portion of the clock. Otherwise, this allows the user to query the seconds portion of the epoch time. Valid values are in discrete increments of whole seconds.

| | |
|--------------------------|---|
| Remote Command: | :LXI:CLOCK[:TIME]:SECONDS <seconds> :LXI:CLOCK[:TIME]:SECONDS? |
| Example: | :LXI:CLOC:SEC 10020304.0 |
| Preset: | Not affected by a Preset. The default value of "System Time" can be restored by using the command: :SYSTEM:DEFAULT INPUT |
| State Saved: | No |
| Range: | 0.0 – 1.7976931348623157 x 10308 s (Max Double) |
| Restriction and Notes: | Ignored when the device is not selected as the IEEE 1588 master clock. Error generated if the argument contains a fractional portion. For example 1243.0 s is acceptable, but 1243.01 results in an error. |
| Instrument S/W Revision: | A.01.60 or later |

Fraction (Remote Only) If the device is selected as the IEEE 1588 master clock, this sets the sub-second value of the clock. Otherwise, this allows the user to query the sub-second value of the epoch time.

| | |
|-----------------|--|
| Remote Command: | :LXI:CLOCK[:TIME]:FRACTION <fraction> :LXI:CLOCK[:TIME]:FRACTION? |
| Example: | :LXI:CLOC:FRAC 10 ms |
| Preset: | Sub-second value of system time |
| State Saved: | No |
| Range: | [0.0,1.0) |

Restriction and Notes: Ignored when the device is not selected as the IEEE 1588 master clock.
Only accurate to the microseconds position.

Instrument S/W Revision: A.01.60 or later

Local Time (Remote Only) Returns the current local time formatted as a date time string.

Remote Command: :LXI:CLOCK[:TIME]:LOCAL?

Example: :LXI:CLOC:LOC? Returns "5/15/2007 6:23:34.123456"

Notes: LXI:CLOCK[:TIME]:LOCAL? Returns Any string constituting a valid date and time

Instrument S/W Revision: A.01.60 or later

Leap Second Offset (Remote Only) Enables you to set the leap second offset between the UTC and TAI time standards.

Remote Command: :LXI:CLOCK[:TIME]:LSOFFSET <integer>
:LXI:CLOCK[:TIME]:LSOFFSET?

Example: :LXI:CLOC:LSOF 55

Range: 0 – 2147483647 (Max Integer)

Instrument S/W Revision: A.01.60 or later

International Atomic Time (Remote Only) Retrieves the current time using the TAI format.

Remote Command: :LXI:CLOCK[:TIME]:TAI?

Example: :LXI:CLOC:TAI? "5/15/2007 6:23:34.123456"

Notes: :LXI:CLOCK[:TIME]:TAI? Returns Any string constituting a valid date and time

Instrument S/W Revision: A.01.60 or later

Time Zone (Remote Only) Retrieves the current local time zone as an offset in hours, minutes, and seconds from Greenwich Mean Time.

Remote Command: :LXI:CLOCK[:TIME]:TZON?

Example: :LXI:CLOC:TZON?

Notes: :LXI:CLOC:TZON? returns "01:00:00" if the current local time zone is 1 hour ahead from Greenwich Mean Time

Instrument S/W Revision: A.01.60 or later

Daylight Savings (Remote Only) Retrieves the current status of the Windows System setting for Daylight

System Functions System

Savings Time. Whether or not daylight savings time is in effect influences the time zone parameter.

Remote Command: : LXI : CLOCk [: TIME] : DLSavings?
Example: : LXI: CLOC: DLS?
Notes: : LXI: CLOC: DLS? Returns 1 when Daylight Savings Time is On and 0 if the
 when Daylight Savings Time is Off
Preset: The Windows system Daylight Savings setting.
Instrument S/W Revision: A.01.60 or later

Coordinated Universal Time (Remote Only) Retrieves the current time using the UTC format.

Remote Command: : LXI : CLOCk [: TIME] : UTC?
Example: : LXI: CLOC: UTC? "5/15/2007 6:23:34.123456"
Notes: : LXI: CLOC: UTC? Returns Any string constituting a valid date and time
Instrument S/W Revision: A.01.60 or later

Time Marker (Remote Only) Records the PTP time as a marker that can later be measured against the current PTP time. Typical use is to time the length of a sequence of instrument operations. There are 9 available markers with indices 1 – 9.

Remote Command: : LXI : CLOCk [: TIME] : MARKer [1] | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 [: SET]
Example: : LXI: CLOC: MARK1
 : LXI: CLOC: MARK2
 : LXI: CLOC: MARK3
 : LXI: CLOC: MARK4
 : LXI: CLOC: MARK5
 : LXI: CLOC: MARK6
 : LXI: CLOC: MARK7
 : LXI: CLOC: MARK8
 : LXI: CLOC: MARK9
 : LXI: CLOC: MARK
Instrument S/W Revision: A.01.60 or later

Time Marker Clear (Remote Only) Clears the recorded PTP time marker used to measure against the current PTP time. There are 9 available markers with indices 1 – 9.

Remote Command: : LXI : CLOCk [: TIME] : MARKer [1] | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 : CLEAR

Example: : LXI:CLOC:MARK1:CLEA
 : LXI:CLOC:MARK2:CLEA
 : LXI:CLOC:MARK3:CLEA
 : LXI:CLOC:MARK4:CLEA
 : LXI:CLOC:MARK5:CLEA
 : LXI:CLOC:MARK6:CLEA
 : LXI:CLOC:MARK7:CLEA
 : LXI:CLOC:MARK8:CLEA
 : LXI:CLOC:MARK9:CLEA
 : LXI:CLOC:MARK:CLEA

Instrument S/W Revision: A.01.60 or later

Time Marker Delta (Remote Only) Calculates and returns the delta time from the marker to the present PTP time. Also returns the seconds and sub-seconds portions of the start and end times. There are 9 available markers with indices 1 – 9.

Remote Command: : LXI : CLOCk [: TIME] : MARKer [1] | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 : DELTa?

Example: : LXI:CLOC:MARK1:DELT? returns
 <deltaTime>,<startSeconds>,<startFractionalSeconds>,<endSeconds>,<endF
 ractionalSeconds>
 : LXI:CLOC:MARK2:DELT?
 : LXI:CLOC:MARK3:DELT?
 : LXI:CLOC:MARK4:DELT?
 : LXI:CLOC:MARK5:DELT?
 : LXI:CLOC:MARK6:DELT?
 : LXI:CLOC:MARK7:DELT?
 : LXI:CLOC:MARK8:DELT?
 : LXI:CLOC:MARK9:DELT?
 : LXI:CLOC:MARK:DELT?

Notes: : LXI:CLOCk[:TIME]:MARKer[1]|2|3|4|5|6|7|8|9:DELTA? Returns a value
 between 0.0 – 1.7976931348623157 x 10308 s (Max Double)

Range: 0.0 – 1.7976931348623157 x 10308 s (Max Double)

Instrument S/W Revision: A.01.60 or later

Measurement Data Timestamp (Remote Only) Returns the beginning and ending times of the last measurement cycle. This command also returns the duration of the measurement cycle. These values correspond to the last rising and falling transition of the Measuring instrument event.

Remote Command: : LXI : CLOCk [: TIME] : MEASure [: DELTa] ?

System Functions System

Example: :LXI:CLOC:MEAS? Returns 2.0,1145902.0,0.123456, ,1145904.0,0.123456

Notes: :LXI:CLOCK[:TIME]:MARKer[1]|2|3|4|5|6|7|8|9:DELTA? Returns a value between 0.0 – 1.7976931348623157 x 10308 s (Max Double)

Instrument S/W Revision: A.01.60 or later

Clear Measurement Data Timestamp (Remote Only) Forces the return values of the Measurement Data Timestamp to zero until the next measurement cycle occurs. This command need not be issued for the Measurement Data Timestamp to be refreshed.

Remote Command: :LXI:CLOCK[:TIME]:MEASURE:CLEAR

Example: :LXI:CLOC:MEAS:CLE

Instrument S/W Revision: A.01.60 or later

Precision Time Protocol Precision Time Protocol, as defined by IEEE 1588, is a method for synchronizing the time across a network. Instruments participating in the PTP network can coordinate activities using this common time base.

Accuracy (Remote Only) Sets the typical offset from the correct time that a user can expect from the instrument PTP clock. This parameter is used when the instrument is selected as the Master clock. It should be set along with the time when configuring a master clock.

The value should be chosen by judging how precisely the clock can be set to the exact TAI time and the accuracy and drift of the clock's underlying oscillator.

This is an input to the IEEE 1588 Best Master Clock algorithm.

Remote Command: :LXI:CLOCK:PTP:ACCURACY
NS25|NS100|NS250|NS1000|NS2500|US10|US25|US100|US250|US
1000|US2500|MS10|MS25|MS100|MS1000|S10|GT10S|UNKNOWN
:LXI:CLOCK:PTP:ACCURACY?

Example: :LXI:CLOC:PTP:ACC US25

Range: NS25|NS100|NS250|NS1000|NS2500|US10|US25|US100|US250|US1000|US
2500|MS10|MS25|MS100|MS1000|S10|GT10S|UNKNOWN

Preset: Not affected by a Preset. The default value of "GT10S" can be restored by using the command:
SYSTEM:DEFAULT INPUT

Instrument S/W Revision: A.01.60 or later

Announce Interval (Remote Only) Sets the time in seconds between PTP announce packets. A shorter interval makes the system more responsive to changes in the master clock at the cost of network bandwidth and packet processing time. The announce interval should be constant across all the instruments in the network. The announce

interval will be rounded to the nearest non-negative integer power of two, with a maximum value of 16.

Remote Command: : LXI : CLOCk : PTP : ANNounce : INTerval <interval>
 : LXI : CLOCk : PTP : ANNounce : INTerval?

Example: : LXI : CLOC : PTP : ANN : INT 1

Range: 1|2|4|8|16

Preset: Not affected by a Preset. The default value of "4" can be restored by using the command:
 SYSTem:DEFault INPut

Instrument S/W Revision: A.01.60 or later

Announce Receipt Time Out (Remote Only) Sets the number of announce intervals that the instrument waits to receive an announce packet while in the Slave or Listening. After this number of announce intervals, the instrument will transition to the Master state.

Remote Command: : LXI : CLOCk : PTP : ANNounce : RTOut <numberOfIntervals>
 : LXI : CLOCk : PTP : ANNounce : RTOut?

Example: : LXI : CLOC : PTP : ANN : RTO 5

Min: 2

Max: 10

Preset: Not affected by a Preset. The default value of "3" can be restored by using the command:
 SYSTem:DEFault INPut

Instrument S/W Revision: A.01.60 or later

Clock Class (Remote Only) Returns a ranking of master clock suitability relative to other clocks on the network. A lower value represents a more suitable clock.

Suitability is defined by the IEEE 1588 standard section 7.6.2.4

Remote Command: : LXI : CLOCk : PTP : CCLass?

Example: : LXI : CLOC : PTP : CCL?

Min: 6

Max: 248

Preset: Not affected by a Preset. The default value of "248" can be restored by using the command:
 SYSTem:DEFault INPut

Instrument S/W Revision: A.01.60 or later

Deviation (Remote Only) Returns the standard deviation of the instrument's PTP time from the Grandmaster's

System Functions

System

PTP time.

Remote Command: :LXI:CLOCK:PTP:DEVIation?

Example: :LXI:CLOC:PTP:DEV?

Instrument S/W Revision: A.01.60 or later

Domain (Remote Only) The instrument synchronizes its clock only with other clocks in the same domain.

Remote Command: :LXI:CLOCK:PTP:DOMain <domainNumber>

:LXI:CLOCK:PTP:DOMain?

Example: :LXI:CLOC:PTP:DOM 0

Min: 0

Max: 127

Preset: Not affected by a Preset. The default value of "0" can be restored by using the command:

SYSTem:DEFault INPut

Instrument S/W Revision: A.01.60 or later

Offset (Remote Only) Returns the difference between the instrument clock PTP time and the Master clock PTP time.

Remote Command: :LXI:CLOCK:PTP:OFFSet?

Example: :LXI:CLOC:PTP:OFFS?

Range: 0.0 to - 1.7976931348623157 x 10308 s (Min Double)

Instrument S/W Revision: A.01.60 or later

First Priority (Remote Only) Setting this parameter overrides the IEEE 1588 Best Master Clock algorithm. If an instrument's First Priority parameter is smaller than all other clocks in its domain, it is chosen as the Master clock.

Remote Command: :LXI:CLOCK:PTP:PRIority:FIRSt <priority>

:LXI:CLOCK:PTP:PRIority:FIRSt?

Example: :LXI:CLOC:PTP:PRI:FIRS 50

Min: 0

Max: 255

Preset: Not affected by a Preset. The default value of "128" can be restored by using the command:

SYSTem:DEFault INPut

Instrument S/W Revision: A.01.60 or later

Second Priority (Remote Only) When two or more clocks are determined to be equally good by the Best Master Clock algorithm, the clock with the lowest Second Priority value is chosen to be the Master Clock.

Remote Command: : LXI : CLOcK : PTP : PRIority : SECond <priority>
 : LXI : CLOcK : PTP : PRIority : SECond?

Example: : LXI : CLOcK : PTP : PRI : SEC 50

Min: 0

Max: 255

Preset: Not affected by a Preset. The default value of "128" can be restored by using the command:
 SYSTem : DEFault INPut

Instrument S/W Revision: A.01.60 or later

State (Remote Only) Returns the current state of the instrument's PTP clock as defined in the IEEE 1588 standard.

Remote Command: : LXI : CLOcK : PTP : STATe?

Example: : LXI : CLOcK : PTP : STAT?

Range: INITializing|FAULty|DISabled|LISTening|PREMaster|
 MASter|PASSive|UNCalibrated|SLAVE

Instrument S/W Revision: A.01.60 or later

Traceability (Remote Only) Returns the quality of the instrument's PTP clock source of time when chosen as the Grand Master clock.

This parameter is used by the Best Master Clock algorithm.

Remote Command: : LXI : CLOcK : PTP : TRACeability?

Example: : LXI : CLOcK : PTP : TRAC?

Range: ATOMic|GPS|RADio|PTP|NTP|HANDset|OTHer|OSCillator

Instrument S/W Revision: A.01.60 or later

Variance (Remote Only) Returns the variance of the instrument's PTP clock time relative to the Master's PTP clock time.

Remote Command: : LXI : CLOcK : PTP : VARiance?

Example: : LXI : CLOcK : PTP : VAR?

Range: 0.0 – 1.7976931348623157 x 10308 (Max Double)

Instrument S/W Revision: A.01.60 or later

System Functions System

Sync Interval (Remote Only) Sets the rate at which PTP sync packets are transmitted when this instrument is acting as a Master PTP clock. The values must be integer powers of 2.

Remote Command: : LXI : CLOcK : PTP : SINTerval <seconds>
Example: : LXI : CLOC : PTP : SINT 0.25s
Range: 0.0625s|0.125s|0.25s|0.5s|1s|2s
Preset: Not affected by a Preset. The default value of "1" can be restored by using the command:
 SYSTem:DEFault INPut
Instrument S/W Revision: A.01.60 or later

Remote Command: : LXI : CLOcK : PTP : SINTerval?
Example: : LXI : CLOC : PTP : SINT?
Range: 0.0625s|0.125s|0.25s|0.5s|1s|2s
Preset: 1
Instrument S/W Revision: A.01.60 or later

Delay Request Interval (Remote Only) This property is used by the master clock to specify the interval between delay request packets sent from the slave to the master clock. Slaves use a randomly-chosen interval, with mean equal to this property.

The value for this parameter must be an integer power of two.

Remote Command: : LXI : CLOcK : PTP : DRINterval <seconds>
Example: : LXI : CLOC : PTP : DRIN 15 ms
Range: 1 s | 2 s | 4 s | 8 s | 16 s | 32 s
Preset: Not affected by a Preset. The default value of "8 s" can be restored by using the command:
 SYSTem:DEFault INPut
Instrument S/W Revision: A.01.60 or later

Remote Command: : LXI : CLOcK : PTP : DRINterval?
Example: : LXI : CLOC : PTP : DRIN 15 ms
Min: 0.0 s
Max: $2^{32} = 4294967296$ s
Preset: 8 s
Instrument S/W Revision: A.01.60 or later

Grand Master Accuracy (Remote Only) Returns the relative accuracy of the Grand Master clock.

Remote Command: :LXI:CLOCK:PTP:GMASter:ACCuracy?
 Example: :LXI:CLOC:PTP:GMAS:ACC? For example, this might return GT10S.
 Range: 25NS|100NS|250NS|1US|2.5US|10US|25US|100US|250US|1MS|2.5MS|10MS|25MS|100MS|1S|10S|GT10S|UNKNown
 Instrument S/W Revision: A.01.60 or later

MAC Address (Remote Only) Returns the Grand Master's MAC Address.

Remote Command: :LXI:CLOCK:PTP:GMASter:MADAddress?
 Example: :LXI:CLOC:PTP:GMAS:MADD? For example, this might return "00-00-50-1e-ca-ad".
 Range: Uppercase, Lowercase, Numeric, Symbol
 Instrument S/W Revision: A.01.60 or later

Traceability (Remote Only) Describes the quality of the Grand Master PTP clock's source of time.

Remote Command: :LXI:CLOCK:PTP:GMASter:TRACeability?
 Example: :LXI:CLOC:PTP:GMAS:TRAC? For example, this might return OSC.
 Range: ATOMIC|GPS|RADIO|PTP|NTP|HANDset|OTHER|OSCillator
 Instrument S/W Revision: A.01.60 or later

Master MAC Address (Remote Only) Returns the Master's MAC Address.

Remote Command: :LXI:CLOCK:PTP:MASter:MADAddress?
 Example: :LXI:CLOC:PTP:MASt:MADD?
 Range: Uppercase, Lowercase, Numeric, Symbol
 Instrument S/W Revision: A.01.60 or later

Servo Algorithm (Remote Only) The Servo Algorithm parameters are considered advanced settings for tweaking IEEE 1588 performance.

Log (Remote Only) The Servo Log records measurements of the offset between the instrument's PTP clock and the Master's PTP clock. It also records the packet travel time for Master-to-Slave and Slave-to-Master transactions.

Next (Remote Only) Retrieves and removes the oldest entry from the Servo Log. The format for a servo log entry is as follows

Sample Index: integer representing entry order
 Time Seconds: seconds portion of the entry timestamp

System Functions

System

Time Fraction: sub-second portion of the entry timestamp
Offset Seconds: offset between the instrument's PTP clock and the Master's PTP clock
Average Delay Seconds: the average measured transmission delay
Master Delay Seconds: Master-to-Slave packet travel time
Slave Delay Seconds: Slave-to-Master packet travel time

Remote Command: :LXI:CLOCK:SALGORITHM:LOG[:NEXT]?

Example: :LXI:CLOCK:SALG:LOG?

Range: Uppercase, Lowercase, Numeric, Symbol

Instrument S/W Revision: A.01.60 or later

Circular (Remote Only) Sets the behavior for entries occurring while the Servo Log is full.

- If Circular is set to 1, incoming events overwrite the oldest events in the log.
- If Circular is set to 0, incoming events are discarded.

Remote Command: :LXI:CLOCK:SALGORITHM:LOG:CIRCULAR[:ENABLED] ON|OFF|0|1
:LXI:CLOCK:SALGORITHM:LOG:CIRCULAR[:ENABLED]?

Example: :LXI:CLOCK:SALG:LOG:CIRC 1

Range: ON|OFF|0|1

Preset: Not affected by a Preset. The default value of "1" can be restored by using the command:

SYSTEM:DEFAULT INPUT

Instrument S/W Revision: A.01.60 or later

Beginning Entry (Remote Only) Sets or freezes the beginning entry of the log when in circular mode to the most recently added entry at the time of the command. This is so that the :LXI:EVENT:LOG:ENTRY? command has a reference entry for indexing individual entries in the log.

Remote Command: :LXI:CLOCK:SALGORITHM:LOG:CIRCULAR:FBENTRY

Example: LXI:CLOCK:SALG:LOG:CIRC:FBEN

Instrument S/W Revision: A.01.60 or later

Clear (Remote Only) Clears all entries from the Servo Log.

Remote Command: :LXI:CLOCK:SALGORITHM:LOG:CLEAR

Example: :LXI:CLOCK:SALG:LOG:CLEAR

Instrument S/W Revision: A.01.60 or later

Count (Remote Only) Returns the number of unread entries in the Servo Log.

Remote Command: : LXI : CLOCk : SALGorithm : LOG : COUNT ?
 Example: : LXI : CLOC : SALG : LOG : COUN?
 Range: 0 - IEEE 1588 Servo Log Size
 Instrument S/W Revision: A.01.60 or later

Enabled (Remote Only)

- When the Servo Log is disabled, no events are recorded.
- When it is enabled, the Servo Log is active.

Remote Command: : LXI : CLOCk : SALGorithm : LOG : ENABled ON | OFF | 0 | 1
 : LXI : CLOCk : SALGorithm : LOG : ENABled ?
 Example: : LXI : CLOC : SALG : LOG : ENAB 1
 Range: ON | OFF | 0 | 1
 Preset: Not affected by a Preset. The default value of "0" can be restored by using the command:
 SYSTem : DEFault INPut
 Instrument S/W Revision: A.01.60 or later

Size (Remote Only) Sets the maximum number of entries to store in the Servo Log.

Remote Command: : LXI : CLOCk : SALGorithm : LOG : SIZE <maxLogEntries>
 : LXI : CLOCk : SALGorithm : LOG : SIZE ?
 Example: : LXI : CLOC : SALG : LOG : SIZE 100
 Min: 0
 Max: 1024
 Preset: Not affected by a Preset. The default value of "256" can be restored by using the command:
 SYSTem : DEFault INPut
 Instrument S/W Revision: A.01.60 or later

All (Remote Only) Non-destructively returns the entire contents of the Servo Log.

Remote Command: : LXI : CLOCk : SALGorithm : LOG : ALL ?
 Example: : LXI : CLOC : SALG : LOG ?
 Range: Uppercase, Lowercase, Numeric, Symbol

System Functions System

Instrument S/W Revision: A.01.60 or later

Specific Entry (Remote Only) Non-destructively returns a specifically indexed entry from within the Servo Log.

Remote Command: :LXI:CLOCK:SALGORITHM:LOG:ENTRY? <intIndex>

Example: :LXI:CLOC:SALG:LOG? 0 Returns the oldest entry in the Servo Log.

Example of result :

"1,1208978798,139644871,0.000000000,3.393600e+038,0.000000000,0.000000000,0.000000000"

Range: Uppercase, Lowercase, Numeric, Symbol

Instrument S/W Revision: A.01.60 or later

Statistics (Remote Only) Returns the long-term statistics of the servo log that characterizes the performance of the instrument PTP clock's offset from the master PTP clock. The statistics include the following values:

- Number of samples (an integer)
- Mean offset (a double)
- Standard deviation of the offset (a double)
- Maximum offset (a double)
- Minimum offset (a double)

Remote Command: :LXI:CLOCK:SALGORITHM:LOG:STATISTICS[:DATA]?

Example: :LXI:CLOC:SALG:LOG:STAT? Example of result :

"3643,0.000000000,0.000000000,0.000000000,0.000000000"

Instrument S/W Revision: A.01.60 or later

Clear Statistics (Remote Only) Resets the long-term servo performance statistics.

Remote Command: :LXI:CLOCK:SALGORITHM:LOG:STATISTICS:CLEAR

Example: :LXI:CLOC:SALG:LOG:STAT? Example of result :

"3643,0.000000000,0.000000000,0.000000000,0.000000000"

Instrument S/W Revision: A.01.60 or later

Asymmetry (Remote Only) Sets the difference in seconds between the Master-to-Slave packet travel time and the Slave-to-Master packet travel time.

Remote Command: :LXI:CLOCK:SALGORITHM[:SET]:ASYMMETRY <seconds>

:LXI:CLOCK:SALGORITHM[:SET]:ASYMMETRY?

Example: :LXI:CLOC:SALG:ASYM 15 ns

Min: -1

Max: 1

Preset: Not affected by a Preset. The default value of "0.0 s " can be restored by using the command:
 SYSTem:DEFault INPut

Instrument S/W Revision: A.01.60 or later

Coarse/Fine Threshold (Remote Only) Determines when the PTP clock Servo algorithm uses the 'Fine' or 'Coarse' parameters for adjusting the instrument's PTP clock time. The threshold is measured against a running estimate of the servo variance.

Coarse mode causes a slave clock to converge with the master clock more quickly, but it is more sensitive to noise, while Fine mode filters out noise more effectively, but takes longer to converge.

Remote Command: :LXI:CLOCK:SALGorithm[:SET]:CFThreshhold
 <secondsSquared>
 :LXI:CLOCK:SALGorithm[:SET]:CFThreshhold?

Example: :LXI:CLOC:SALG:CFTH 0.25

Min: 0

Max: 1

Preset: Not affected by a Preset. The default value of "1.0e-11 " can be restored by using the command:
 SYSTem:DEFault INPut

Instrument S/W Revision: A.01.60 or later

Coarse Proportional Constant (Remote Only) This constant is used by the servo when above the Coarse/Fine Threshold variance. Decreasing this constant causes the servo to become less responsive to both noise in the system and changes in the Master Clock's rate. Conversely, increasing this constant causes the servo to respond more energetically to both system noise and changes in the Master Clock's rate.

The ratio between the Proportional and Integral constants should remain roughly constant.

Remote Command: :LXI:CLOCK:SALGorithm[:SET]:CPConstant <servoConstant>
 :LXI:CLOCK:SALGorithm[:SET]:CPConstant?

Example: :LXI:CLOC:SALG:CPC 0.5

Min: 0

Max: 1

Preset: Not affected by a Preset. The default value of "0.4 " can be restored by using the command:
 SYSTem:DEFault INPut

Instrument S/W Revision: A.01.60 or later

Coarse Integral Constant (Remote Only) This constant is used by the servo when above the Coarse/Fine Threshold variance. Decreasing this constant causes the servo to become less responsive to both noise in the system

System Functions

System

and changes in the Master Clock's rate. Conversely, increasing this constant causes the servo to respond more energetically to both system noise and changes in the Master Clock's rate.

The ratio between the Proportional and Integral constants should remain roughly constant.

Remote Command: : LXI: CLOCk: SALGorithm[:SET]: CIconstant <servoConstant>
 : LXI: CLOCk: SALGorithm[:SET]: CIconstant?

Example: : LXI: CLOC: SALG: CIC 0.5

Min: 0

Max: 1

Preset: Not affected by a Preset. The default value of "0.2 " can be restored by using the command:
 SYSTem: DEFault INPut

Instrument S/W Revision: A.01.60 or later

Fine Proportional Constant (Remote Only) This constant is used by the servo when below the Coarse/Fine Threshold variance. Decreasing this constant causes the servo to become less responsive to both noise in the system and changes in the Master Clock's rate. Conversely, increasing this constant causes the servo to respond more energetically to both system noise and changes in the Master Clock's rate.

The ratio between the Proportional and Integral constants should remain roughly constant.

Remote Command: : LXI: CLOCk: SALGorithm[:SET]: FPConstant <servoConstant>
 : LXI: CLOCk: SALGorithm[:SET]: FPConstant?

Example: : LXI: CLOC: SALG: FPC 1

Min: 0

Max: 1

Preset: Not affected by a Preset. The default value of "0.35 " can be restored by using the command:
 SYSTem: DEFault INPut

Instrument S/W Revision: A.01.60 or later

Fine Integral Constant (Remote Only) This constant is used by the servo when below the Coarse/Fine Threshold variance. Decreasing this constant causes the servo to become less responsive to both noise in the system and changes in the Master Clock's rate. Conversely, increasing this constant causes the servo to respond more energetically to both system noise and changes in the Master Clock's rate.

The ratio between the Proportional and Integral constants should remain roughly constant.

Remote Command: : LXI: CLOCk: SALGorithm[:SET]: FIconstant <servoConstant>
 : LXI: CLOCk: SALGorithm[:SET]: FIconstant?

Example: : LXI: CLOC: SALG: FIC 0.6

Min: 0
 Max: 1
 Preset: Not affected by a Preset. The default value of "0.05" can be restored by using the command:
 SYSTem:DEFault INPut
 Instrument S/W Revision: A.01.60 or later

Maximum Outlier Discard Count (Remote Only) Sets the maximum number of outlier packets to ignore. After this maximum is exceeded, the next packet is accepted, regardless of whether or not it is flagged as an outlier.

Remote Command: :LXI:CLOCK:SALGorithm[:SET]:OMAXimum
 <consecutiveSamples>
 :LXI:CLOCK:SALGorithm[:SET]:OMAXimum?
 Example: :LXI:CLOC:SALG:OMAX 3
 Min: 0
 Max: 25
 Preset: Not affected by a Preset. The default value of "5" can be restored by using the command:
 SYSTem:DEFault INPut
 Instrument S/W Revision: A.01.60 or later

Outlier Threshold (Remote Only) Defines the threshold for determining whether a packet is considered a statistical outlier. If a sync or delay request is held up in a switch for a significant amount of time, the quality of synchronization will be perturbed. The servo ignores anything outside the outlier threshold. This parameter is expressed as a number of standard deviations from the currently measured average packet latency. Note that the value can be set to fractional standard deviations.

Remote Command: :LXI:CLOCK:SALGorithm[:SET]:OTHReshold
 <standardDeviations>
 :LXI:CLOCK:SALGorithm[:SET]:OTHReshold?
 Example: :LXI:CLOC:SALG:OTHR 1.0
 Min: 0.25
 Max: 6.0
 Preset: Not affected by a Preset. The default value of "5.0" can be restored by using the command:
 SYSTem:DEFault INPut
 Instrument S/W Revision: A.01.60 or later

Outlier Threshold Enable (Remote Only) Enables the outlier threshold to determine whether or not outliers are

System Functions System

discarded.

Remote Command: : LXI : CLOcK : SALGorithm [: SET] : OTENable ON | OFF | 1 | 0
 : LXI : CLOcK : SALGorithm [: SET] : OTENable?

Example: : LXI : CLOC : SALG : OTEN OFF

Preset: Not affected by a Preset. The default value of "OFF" can be restored by using the command:
 SYSTem : DEFault INPut

Instrument S/W Revision: A.01.60 or later

Set/Steer Threshold (Remote Only) If the instrument's clock deviates from the master by an amount equal to or greater than this threshold, it is reset to match the master rather than being gradually steered toward it.

Remote Command: : LXI : CLOcK : SALGorithm [: SET] : STHReshold <seconds>
 : LXI : CLOcK : SALGorithm [: SET] : STHReshold?

Example: : LXI : CLOC : SALG : STHR 15 ms

Min: 0.0001

Max: 10.0

Preset: Not affected by a Preset. The default value of "0.1 s" can be restored by using the command:
 SYSTem : DEFault INPut

Instrument S/W Revision: A.01.60 or later

Configure (Remote Only) Allows the configuration of some of the above parameters from a single SCPI command.

Remote Command: : LXI : CLOcK : SALGorithm [: SET] : CONFigure <asymmetry> ,
 <coarse fine threshold> , <cpc> , <cic> , <fpc> , <fic> ,
 <maximum outlier discard> , <outlier threshold> ,
 <set/steer threshold>

Example: : LXI : CLOC : SALG : CONF 0.0, 2.0E-13, 0.4, 0.2, 0.35, 0.05, 5, 2.0E-4, 0.1s

Instrument S/W Revision: A.01.60 or later

Synchronization (Remote Only) Master (Remote Only) Reports whether or not the device has been selected as the PTP master clock.

Remote Command: : LXI : CLOcK : SYNC : MASTer?

Example: : LXI : CLOC : SYNC : MAST?

Range: ON | OFF | 0 | 1

Instrument S/W Revision: A.01.60 or later

Local Enabled (Remote Only) Enable steering of the local clock with the PTP IEEE 1588 clock.

Remote Command: : LXI : CLOCk : SYNC : LOCAl : ENABled ON | OFF | 0 | 1
 : LXI : CLOCk : SYNC : LOCAl : ENABled?

Example: : LXI : CLOC : SYNC : LOC : ENAB ON

Range: ON | OFF | 0 | 1

Preset: Not affected by a Preset. The default value of "ON" can be restored by using the command:
 SYSTem : DEFault INPut

Instrument S/W Revision: A.01.60 or later

Local Interval (Remote Only) The local clock is updated after the time set in the Local Interval elapses.

Remote Command: : LXI : CLOCk : SYNC : LOCAl : INTerval
 : LXI : CLOCk : SYNC : LOCAl : INTerval?

Example: : LXI : CLOC : SYNC : LOC : INT 60

Min: 0

Max: 3600

Preset: Not affected by a Preset. The default value of "60 " can be restored by using the command:
 SYSTem : DEFault INPut

Instrument S/W Revision: A.01.60 or later

Instrument Status Events

Enable (Remote Only) Setting the enabled parameter to ON enables the selected instrument event to be used as a source for Output LAN Events. Enabling an Instrument Status Event also causes the event to appear in the Event Log.

Remote Command: : LXI : EVENT : STATus [: ENABled] "STATUSEVENT" , ON | OFF | 1 | 0

Example: : LXI : EVEN : STAT "WaitingForTrigger", 1

Preset: Not affected by a Preset. The default value of "1" can be restored by using the command, : SYSTem : DEFault INPut.

State Saved: Saved in instrument state.

Range: 1 | 0 | ON | OFF

Instrument S/W Revision: A.01.60 or later

Remote Command: : LXI : EVENT : STATus [: ENABled] ? "STATUSEVENT"

System Functions System

| | |
|--------------------------|--|
| Example: | :LXI:EVENT:STAT? "WaitingForTrigger" Returns 1 if previously enabled. Otherwise, returns 0. |
| Preset: | ON |
| State Saved: | Saved in instrument state. |
| Range: | 1 0 ON OFF |
| Instrument S/W Revision: | A.01.60 or later |

LXI State Recall

Location (Remote Only) This parameter is used to store the file paths of the state files to be recalled when each Input LAN Event is received. Since each LAN Event has its own Location entry, a given state is capable of branching to at least 8 different states. If custom Input events are added, an even greater branching factor is possible.

When setting up state transitions, it is important to set the location of the next state before saving. This way, when the saved state is recalled, the next state locations are also automatically recalled.

| | |
|--------------------------|--|
| Remote Command: | :LXI:EVENT:INPut:LAN:LOCation "LANEVENT", "path" |
| Example: | :LXI:EVENT:INP:LAN:LOC "LANEVENT", "c:\states\state01.state" |
| State Saved: | Saved in instrument state. |
| Range: | Uppercase, Lowercase, Numeric, Symbol |
| Restriction and Notes: | The maximum length of the string is 512 characters. |
| Instrument S/W Revision: | A.01.60 or later |

| | |
|--------------------------|--|
| Remote Command: | :LXI:EVENT:INPut:LAN:LOCation? "LANEVENT" |
| Example: | :LXI:EVENT:INP:LAN:LOC? "LANEVENT" Returns "c:\states\state01.state" if that value was previously entered |
| State Saved: | Saved in instrument state. |
| Range: | Uppercase, Lowercase, Numeric, Symbol |
| Restriction and Notes: | The maximum length of the string is 512 characters. |
| Instrument S/W Revision: | A.01.60 or later |

Disable All (Remote Only) Causes all LXI Input LAN Events to go into the disabled state (Enabled = OFF).

| | |
|--------------------------|----------------------------------|
| Remote Command: | :LXI:EVENT:INPut:LAN:DISable:ALL |
| Example: | :LXI:EVENT:INP:LAN:DIS:ALL |
| Instrument S/W Revision: | A.01.60 or later |

Add (Remote Only) Adds the provided string to the list of possible LAN events to Input as a response to instrument events. As new LAN events are added, keys are generated in the LXI Input LAN Events menu. New key panels are generated as the number of possible LAN events increases past a multiple of six, and the “More” keys are updated to reflect the new number of key panels in the LXI Input LAN Events menu.

Remote Command: : LXI : EVENt : INPut : LAN : ADD "LANEVENT"

Example: : LXI:EVEN:INP:LAN:ADD "LANEVENT"

State Saved: No

Range: Uppercase, Lowercase, Numeric, Symbol except for comma or semicolon

Restriction and Notes: The maximum length of the string is 16 characters.
Longer strings are concatenated and added to the LXI Input LAN Event list.
No event is added if the LAN Event already exists.

Instrument S/W Revision: A.01.60 or later

Remove (Remote Only) Removes the provided string from the list of LXI Input LAN Events. As new LAN events are removed, keys are removed from the LXI Input LAN Events menu. Key panels are removed as the number of possible LAN events decreases past a multiple of six, and the “More” keys are updated to reflect the new number of key panels in the LXI Input LAN Events menu. Events from the default list cannot be removed.

Remote Command: : LXI : EVENt : INPut : LAN : REMove [: EVENt] "LANEVENT"

Example: : LXI:EVEN:INP:LAN:REM "LANEVENT"

State Saved: No

Range: Uppercase, Lowercase, Numeric, Symbol

Restriction and Notes: The maximum length of the string is 16 characters.
Longer strings are concatenated and the resulting LAN Event is removed from the LXI Input LAN Event list.
Nothing happens if the LAN event was not introduced using the Add command.

Instrument S/W Revision: A.01.60 or later

Remove All (Remote Only) Clears the list of custom LAN events (those introduced using the Add command). As new LAN events are removed, keys are removed from the LXI Input LAN Events menu. Key panels are removed as the number of possible LAN events decreases past a multiple of six, and the “More” keys are updated to reflect the new number of key panels in the LXI Input LAN Events menu.

Remote Command: : LXI : EVENt : INPut : LAN : REMove : ALL

Example: : LXI:EVEN:INP:LAN:REM:ALL

System Functions

System

Restriction and Notes: Only LAN Events added with the Add command are removed. Default events cannot be removed.

Instrument S/W Revision: A.01.60 or later

Filter (Remote Only) Only LXI Input LAN Events coming from hosts matching the filter string are processed. There is no front panel access to this command

The syntax for specifying a filter is as follows:

Filter == ([host[:port]] | [ALL[:port]]) [,Filter]

Specifying an empty string means that LXI trigger packets are accepted as an Input from any port on any host on the network via either TCP or UDP.

Specifying only the port means that any host communicating over that port can send events.

Specifying ALL indicates that UDP multicast packets are accepted if they are directed to the IANA assigned multicast address on the IANA assigned default port, or the designated port if specified.

Examples:

- “192.168.0.1:23”
- “agilent.com, soco.agilent.com”
- “agilent.com:80, 192.168.0.1”

Remote Command: :LXI:EVENT:INPut:LAN:FILTer "LANEVENT", "filterString"
:LXI:EVENT:INPut:LAN:FILTer?

Example: :LXI:EVEN:INP:LAN:FILT "LAN0", "agilent.com"
:LXI:EVEN:INP:LAN:FILT?

State Saved: Saved in instrument state.

Range: Uppercase, Lowercase, Numeric, Symbol

Restriction and Notes: The maximum length of the string is 45 characters. Nothing happens if the LAN event does not exist.

Instrument S/W Revision: A.01.60 or later

Identifier (Remote Only) Sets the string that is expected to arrive over the LAN for a given Input LAN Event to occur. The Identifier is variable to allow for easier system debugging.

Remote Command: :LXI:EVENT:INPut:LAN:IDENtifier "LANEVENT", "identifier"
:LXI:EVENT:INPut:LAN:IDENtifier? "LANEVENT"

Example: :LXI:EVEN:INP:LAN:IDEN "LAN0", "debugstring"

State Saved: Saved in instrument state.

Range: Uppercase, Lowercase, Numeric, Symbol

Restriction and Notes: The maximum length of the string is 16 characters.
Nothing happens if the LAN event does not exist.
The default value is that the identifier is equivalent to the name of the LAN Event.

Instrument S/W Revision: A.01.60 or later

Detection (Remote Only) Pressing this button brings up the Detection menu.

- Selecting “Rise” causes the instrument to trigger on the receipt of a signal low LAN Event followed by a signal high LAN Event.
- Selecting “Fall” causes the instrument to trigger on the receipt of a signal high LAN Event followed by a signal low LAN Event.
- Selecting “High” causes the instrument to trigger on every signal high LAN Event.
- Selecting “Low” causes the instrument to trigger on every signal low LAN Event.

Remote Command: :LXI:EVENT:INPut:LAN[:SET]:DETection "LANEVENT",
HIGH|LOW|RISE|FALL

Example: :LXI:EVENT:INP:LAN:DET "LANEVENT",HIGH

Preset: Not affected by a Preset. The default value of "HIGH" can be restored by using the remote command:

:SYSTem:DEFault INPut

State Saved: Saved in instrument state.

Range: HIGH | LOW | RISE | FALL

Restriction and Notes: If a non existent LAN event is passed in the lanEvent argument, the command is ignored

Instrument S/W Revision: A.01.60 or later

Remote Command: :LXI:EVENT:INPut:LAN[:SET]:DETection? "LANEVENT"

Example: :LXI:EVEN:INP:LAN:DET? "LANEVENT"

Preset: HIGH

State Saved: Saved in instrument state.

Range: HIGH | LOW | RISE | FALL

Restriction and Notes: If a non existent LAN event is passed in the lanEvent argument, the command is ignored

Instrument S/W Revision: A.01.60 or later

Enabled (Remote Only) When the Enabled parameter is set to ON, receiving the given LAN Event causes the instrument to transition to the state held in the Next State Slot.

System Functions System

When the Enabled parameter is OFF, the Input LAN Event is ignored.

Remote Command: : LXI : EVENT : INPut : LAN [: SET] : ENABled
 "LANEVENT" , ON | OFF | 1 | 0

Example: : LXI : EVEN : INP : LAN : ENAB "LAN0", 1

Preset: Not affected by a Preset. The default value of "OFF" can be restored by using
 the remote command:
 : SYSTem : DEFault INPut

State Saved: Saved in instrument state.

Range: 1 | 0

Instrument S/W Revision: A.01.60 or later

Remote Command: : LXI : EVENT : INPut : LAN [: SET] : ENABled? "LANEVENT"

Example: : LXI : EVEN : INP : LAN : ENAB? "LAN0"

Preset: OFF

State Saved: Saved in instrument state.

Range: 1 | 0

Instrument S/W Revision: A.01.60 or later

Count (Remote Only) Returns the number of items in the LXI Input LAN Event List.

Remote Command: : LXI : EVENT : INPut : LAN : COUNT?

Example: : LXI : EVEN : INP : LAN : COUN?

Instrument S/W Revision: A.01.60 or later

List (Remote Only) Returns a list of all of the valid LXI Input LAN Event names.

Remote Command: : LXI : EVENT : INPut : LAN : LIST?

Example: : LXI : EVEN : INP : LAN : LIST?
 Returns "LAN0", "LAN1", "LAN2", "LAN3", "LAN4", "LAN5", "LAN6",
 "LAN7"

Preset: "LAN0", "LAN1", "LAN2", "LAN3", "LAN4", "LAN5", "LAN6", "LAN7"

State Saved: Saved in instrument state.

Instrument S/W Revision: A.01.60 or later

Configure (Remote Only) Allows the configuration of some of the above parameters from a single

SCPI command.

Remote Command: :LXI:EVENT:INPut:LAN[:SET]:CONFigure "lanEvent",
<enab>, <detection>, <filter>, <identifier>

Example: :LXI:EVEN:INP:LAN:CONF "LAN0",1,FALL,"FILTER","DEBUG"

Instrument S/W Revision: A.01.60 or later

Restore Defaults

Provides incremental initialization of the system setting groups along with supporting a comprehensive reset of the entire instrument back to a factory default state. The menu selections are the groups of system settings and when one is selected, that particular group of system settings is reset back to their default values.

Remote Command :SYSTem:DEFault [ALL] | ALIGn | INPut | MISC | MODes | PON

Example SYST:DEF

Key Path System

Mode All


State Saved No

Instrument S/W Revision A.01.60 or later

Restore Input/Output Defaults

Causes the group of settings and data associated with Input/Output front-panel key to be a reset to their default values. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch.

Confirmation is required to restore the Input/Output setting. The confirmation dialog is:

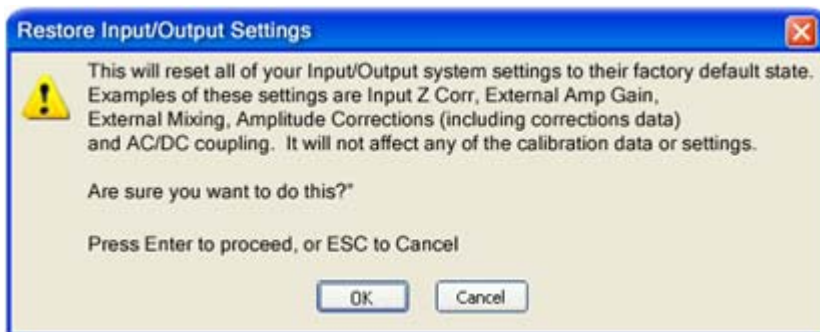

Key Path System, Restore System Defaults

Example :SYST:DEF INP

Instrument S/W Revision A.01.60 or later

Restore Power On Defaults

This selection causes the Power On settings to be a reset to their default value. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch. The Power On settings and their default values are Power On Type reset to Mode and Input/Output Defaults and Power On Mode reset to whatever the factory set as its default value.

Confirmation is required to restore the factory default values. The confirmation dialog is:




| | |
|-------------------------|---------------------------------|
| Key Path | System, Restore System Defaults |
| Example | :SYST:DEF PON |
| Instrument S/W Revision | A.01.60 or later |

Restore Align Defaults

This selection causes the Alignment system settings to be a reset to their default values. This does not affect any Alignment data stored in the system. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch.

After performing this function, it may impact the auto-alignment time of the instrument until a new alignment baseline has been established.

Confirmation is required to restore the factory default values. The confirmation dialog is:

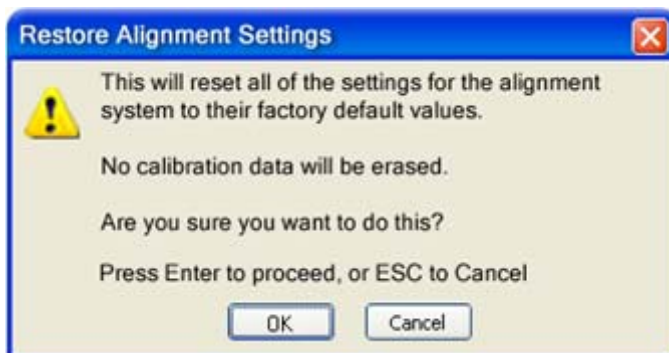

| | |
|----------|---------------------------------|
| Key Path | System, Restore System Defaults |
| Example | :SYST:DEF ALIG |

Instrument S/W Revision A.01.60 or later


Restore Misc Defaults

This selection causes miscellaneous system settings to be reset to their default values. With this reset, you lose the GPIB address and it is reset to 18, so this should be used with caution. This level of Restore System Defaults does not affect any other system settings, mode settings and does not cause a mode switch. This miscellaneous group contains the rest of the settings that have not been part of the other Restore System Defaults groups. The following table is a complete list of settings associated with this group:

| Miscellaneous Setting | Default Value |
|-----------------------|---------------|
| Verbose SCPI | Off |
| GPIB Address | 18 |
| Auto File Name Number | 000 |
| Save Type | State |
| State Save To | Register 1 |
| Screen Save To | SCREEN000.png |
| DISP:ENABle | ON |
| Full Screen | Off |
| SCPI Telnet | ON |
| SCPI Socket | ON |
| SICL Server | ON |
| Display Intensity | 100 |
| Display Backlight | ON |
| Display Theme | TDColor |
| System Annotation | ON |
| The SYST:PRES:TYPE | MODE |

Confirmation is required to restore the factory default values. The confirmation dialog is:

System Functions System

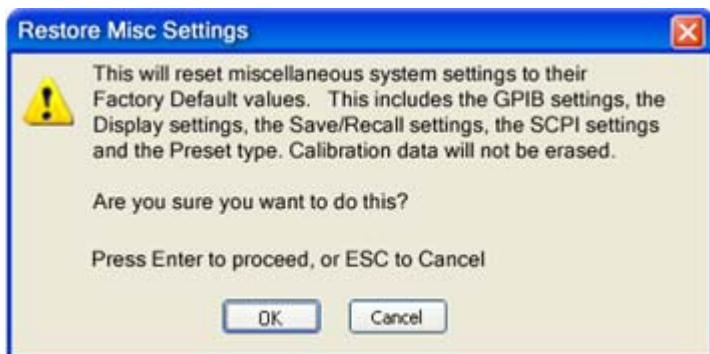

| | |
|-------------------------|---------------------------------|
| Key Path | System, Restore System Defaults |
| Example | :SYST:DEF MISC |
| Instrument S/W Revision | A.01.60 or later |

Restore Mode Defaults (All Modes)

This selection resets all of the modes in the instrument back to their default state just as a Restore Mode Defaults does and it switches the instrument to the power-on mode and causes the default measurement for the power-on mode to be active. This level of Restore System Defaults does not affect any system settings, but it does affect the state of all modes and does cause a mode switch unless the instrument was already in the power-on mode.

Confirmation is required to restore the factory default values. The confirmation dialog is:




| | |
|-------------------------|--|
| Key Path | System, Restore System Defaults |
| Dependencies/Couplings | An All Mode will cause the currently running measurement to be aborted, mode switch to the power-on mode and activate the default measurement for the power-on mode. It gets the mode to a consistent state with all of the default couplings set. |
| Example | :SYST:DEF MOD |
| Instrument S/W Revision | A.01.60 or later |

All

This is the catastrophic function that does a comprehensive reset of ALL analyzer settings to their factory default values. It resets all of the system setting groups, causes a Restore Mode Defaults for all modes in the instrument, and switches back to the power-on mode. It does not affect the User Preset file or any user saved files.

Confirmation is required to restore the factory default values. The confirmation dialog is:

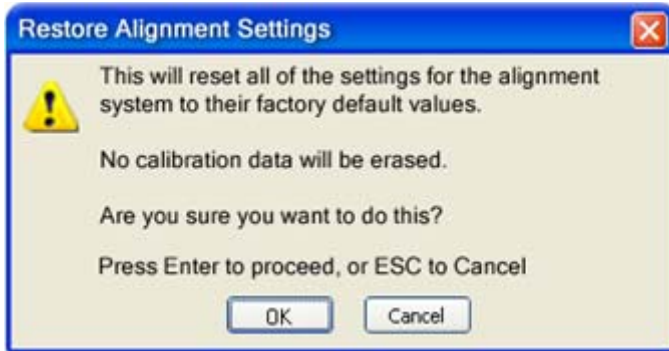

| | |
|-------------------------|---|
| Key Path | System, Restore System Defaults |
| Dependencies/Couplings | An All will cause the currently running measurement to be aborted and get all modes to a consistent state, so it is unnecessary to couple any settings. |
| Example | :SYST:DEF ALL |
| Instrument S/W Revision | A.01.60 or later |

Control Panel...

Opens the Windows Control Panel.

Pressing any key will cause the Control Panel to exit.

| | |
|-------------------------|---------------------------------|
| Key Path | System |
| Remote Command Notes | No remote command for this key. |
| Instrument S/W Revision | A.01.60 or later |

Licensing...

Opens the license explorer.

For Help on this key, select Help in the menu bar at the top of the license explorer window.

| | |
|----------------------|--|
| Key Path | System |
| Remote Command Notes | No equivalent remote command for this key. |

System Functions

System

Instrument S/W Revision A.01.60 or later

There are five remote commands available for licensing.

Remote Command: :SYSTem:LKEY <"OptionInfo">, <"LicenseInfo">

Remote Command Notes: The <"OptionInfo"> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one, since the system knows which version is supported for each feature.

The <"LicenseInfo"> contains the signature, the expiration date, and serial number for transport if transportable. You must specify the signature, but you can omit the other information. If you omit the expiration date, the system regards it as permanent. If you omit the serial number, the system regards it as non-transportable. As a result, this supports backward compatibility.

Example: SYST:LKEY
 "N9073A-1FP", "027253AD27F83CDA5673A9BA5F427FDA5E4F25AEB1
 017638211AC9F60D9C639FE539735909C551DE0A91"

Instrument S/W Revision: A.01.60 or later

Remote Command: :SYSTem:LKEY:DELeTe <"OptionInfo">, <"LicenseInfo">

Remote Command Notes: The <"OptionInfo"> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one, if more than one version is installed.

The <"LicenseInfo"> contains the signature, the expiration date, and whether or not be transportable. You must specify the signature, but you can omit the other information. If you omit the expiration date, the system regards it as permanent. If you omit the transportability, the system regards it as non-transportable. As a result, this supports backward compatibility.

Example: SYST:LKEY:DEL
 "N9073A-1FP", "027253AD27F83CDA5673A9BA5F427FDA5E4F25AEB1
 017638211AC9F60D9C639FE539735909C551DE0A91"

Instrument S/W Revision: A.01.60 or later

Remote Command: :SYSTem:LKEY:LIST?

| | |
|--------------------------|--|
| Remote Command Notes: | <p>Return Value:</p> <p>An <arbitrary block data> of all the installed instrument licenses.</p> <p>The format of each license is as follows.</p> <p><Feature>,<Version>,<Signature>,<Expiration Date>,<Serial Number for Transport></p> <p>Return Value Example:</p> <p>#3136</p> <p>N9073A-1FP,1.000,B043920A51CA</p> <p>N9060A-2FP,1.000,4D1D1164BE64</p> <p>N9020A-508,1.000,389BC042F920</p> <p>N9073A-1F1,1.000,5D71E9BA814C,13-aug-2005</p> <p><arbitrary block data> is:</p> <p>#NMMM<data></p> <p>Where:</p> <p>N is the number of digits that describes the number of MMM characters. For example if the data was 55 bytes, N would be 2.</p> <p>MMM would be the ASCII representation of the number of bytes. In the previous example, N would be 55.</p> <p><data> ASCII contents of the data</p> |
| Instrument S/W Revision: | A.01.60 or later |
| Remote Command: | :SYSTem:LKEY? <"OptionInfo" > |
| Remote Command Notes: | <p>The <"OptionInfo"> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one.</p> <p>Return Value:</p> <p><"LicenseInfo"> if the license is valid, null otherwise.</p> <p><"LicenseInfo"> contains the signature, the expiration date, and serial number if transportable.</p> <p>Return Value Example:</p> <p>"B043920A51CA"</p> |
| Example: | SYST:LKEY? "N9073A-1FP" |
| Instrument S/W Revision: | A.01.60 or later |
| Remote Command: | :SYSTem:HID? |
| Remote Command Notes: | Return value is the host ID as a string |
| Instrument S/W Revision: | A.01.60 or later |

Service

Accesses capabilities performed in the factory or under instructions from repair procedures. This menu key is only visible when the logged-in user is “advanceduser” or “saservice”. The first access to the Service Menu after invoking the instrument application will require an authentication Service Code.

| | |
|-------------------------|------------------|
| Key Path | System |
| Instrument S/W Revision | A.01.60 or later |

Diagnostics

The Diagnostics key in the System menu gives you access to basic diagnostic capabilities of the instrument.

| | |
|-------------------------|------------------|
| Key Path | System |
| Instrument S/W Revision | A.01.60 or later |

Show Hardware Statistics

Provides a display of various hardware statistics. The statistics include the following:

Mechanical relay cycles

High and Low temperature extremes

Elapsed time that the instrument has been powered-on (odometer)

The display should appear listing the statistics, product number, serial number, and firmware revision.

| | | |
|-------------------------------|-------------------------------------|-----------|
| Std Header | Product Number: N9020A | |
| | Serial Number: US46340924 | |
| | Firmware Revision: A.01.01 | |
| Mechanical relays | Calibrator Switch Cycles: | 1800 |
| | AC/DC Switch Cycles: | 60 |
| | 2 dB #1 Mechanical Atten Cycles | 23489 |
| | 2 dB #2 Mechanical Atten Cycles | 23400 |
| | 6 dB Mechanical Atten Cycles | 500000 |
| | 10 dB Mechanical Atten Cycles | 1000000 |
| | 20 dB Mechanical Atten Cycles | 2500 |
| 30 dB Mechanical Atten Cycles | 60000 | |
| | | 4339 |
| | High operating temperature extreme: | +37.2degC |
| | Low operating temperature extreme | +18.1degC |
| Odometer | Elapsed Time (on time) (hours): | 1600 |

The data will be updated only when the Show Hardware Statistics menu key is pressed, it will not be updated while the screen is displayed.

The tabular data should be directly printable.

| | |
|-------------------------|---|
| Restriction and Notes | The values displayed on the screen are only updated upon entry to the screen and not updated while the screen is being displayed. |
| Key Path | System, Diagnostics |
| Mode | All |
| Instrument S/W Revision | A.01.60 or later |

Query the Mechanical Relay Cycle Count Returns the count of mechanical relay cycles.

| | |
|------------------------|---|
| Remote Command: | :SYSTem:MRELAY:COUNT? |
| Remote Command Notes: | Query Only |
| Restriction and Notes: | The return value is a comma separated list of the individual counts for each mechanical relay. The position of the relays in the list is: “<Cal Signal>,<AC/DC>,<2dB #1 Atten>,<2dB #2 Atten>,<6dB Atten>,<10dB Atten>,<20dB Atten>,<30dB Atten>” |

System Functions System

Example: :SYST:MREL:COUN?
Instrument S/W Revision: A.01.60 or later

Query the Operating Temperature Extremes Returns the low operating temperature extreme value. The value survives a power-cycle and is the temperature extreme encountered since the value was reset by the factory or service center.

Mode All
Remote Command :SYSTem:TEMPerature:LEXTreme?
Restriction and Notes Value is in degrees Celsius at which the lowest operating temperature has been recorded since 1st power-up.
State Saved No
Example :SYST:TEMP:LEXT?
Instrument S/W Revision A.01.60 or later

Returns the high operating temperature extreme value. The value survives a power-cycle and is the temperature extreme encountered since the value was reset by the factory or service center.

Mode All
Remote Command :SYSTem:TEMPerature:HEXTreme?
Restriction and Notes Value is in degrees Celsius at which the highest operating temperature has been recorded since 1st power-up.
State Saved No
Example :SYST:TEMP:HEXT?
Instrument S/W Revision A.01.60 or later


Query the Elapsed Time since 1st power on Returns the elapsed on-time in minutes since 1st power-on.

Remote Command: :SYSTem:PON:ETIMe?
Remote Command Notes: Query Only
Example: :SYST:PON:ETIM?
Instrument S/W Revision: A.01.60 or later


Advanced

Accesses advanced diagnostic capabilities performed in the factory or under instructions from repair procedures. This menu key is only visible when the logged-in user is "saservice". The first access to the Advanced Diagnostic Menu after invoking the instrument application will require an authentication, which is to enter the Service Code. Subsequent accesses to the Advanced Diagnostic Menu are

unimpeded. The Authentication dialog looks like:

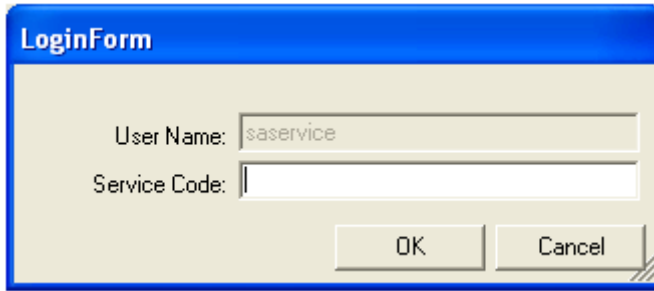

“OK” is the default key thus the Enter key is used to complete the entry. If invalid Service Code is entered authentication is not granted and the user is provided the following dialog:

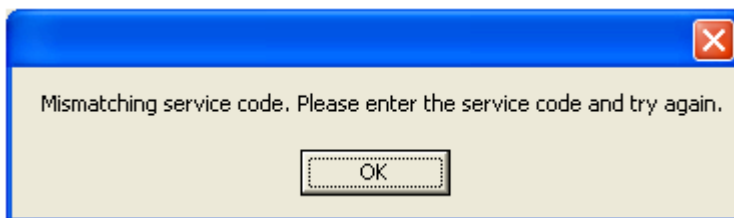

| | |
|-------------------------|---|
| Key Path | System, Diagnostics |
| Restriction and Notes | Password is required to access this menu. |
| Instrument S/W Revision | A.01.60 or later |

List installed Options (Remote Command Only)

Lists the installed options that pertain to the instrument (signal analyzer).

| | |
|-------------------------|---|
| Mode | All |
| Remote Command | :SYSTem:OPTions? |
| Restriction and Notes | The return string is a comma separated list of the installed options. For example: “503,P03,PFR” :SYSTem:OPTions? and *OPT? are the same. |
| State Saved | No |
| Example | :SYST:OPT? |
| Instrument S/W Revision | A.01.60 or later |

Lock the Front Panel keys (Remote Command Only)

Disables the instrument keyboard to prevent local input when the instrument is controlled remotely.

System Functions

System

Annunciation showing a “K” for ‘Klock’ (keyboard lock) alerts the local user that the keyboard is locked. Klock is similar to the GPIB Local Lockout function; namely that no front-panel keys are active with the exception of the Power Standby key. (The instrument is allowed to be turned-off if Klock is ON.) The Klock command is used in remote control situations where Local Lockout cannot be used.

Although primary intent of Klock is to lock-out the front panel, it will lock-out externally connected keyboards through USB. Klock has no effect on externally connected pointing devices (mice).

The front panel ‘Local’ key (Cancel/Esc) has no effect if Klock is ON.

| | |
|-------------------------|--|
| Mode | All |
| Remote Command | :SYSTem:KLOCK OFF ON 0 1 :SYSTem:KLOCK? |
| Preset | Initialized to OFF at startup, unaffected by Preset |
| State Saved | No |
| Remote Command Notes | Keyboard lock remains in effect until turned-off or the instrument is power-cycled |
| Example | :SYST:KLOC ON |
| Instrument S/W Revision | A.01.60 or later |

List SCPI Commands (Remote Command Only)

Outputs a list of the valid SCPI commands for the currently selected Mode.

| | |
|--------------------------|---|
| Remote Command: | :SYSTem:HELP:HEADers? |
| Remote Command Notes: | The output is an IEEE Block format with each command separated with the New-Line character (hex 0x0A) |
| Example: | :SYST:HELP:HEAD? |
| Instrument S/W Revision: | A.01.60 or later |

SCPI Version Query (Remote Command Only)

Returns the SCPI version number with which the instrument complies. The SCPI industry standard changes regularly. This command indicates the version used when the instrument SCPI commands were defined.

| | |
|--------------------------|------------------|
| Remote Command: | :SYSTem:VERSion? |
| Example: | :SYST:VERS? |
| Instrument S/W Revision: | A.01.60 or later |

Date (Remote Command Only)

The recommended access to the Date, Time, and Time zone of the instrument is through the Windows native control (Control Panel or accessing the Task Bar). You may also access this information remotely, as shown in this command and Time (below).

Sets or queries the date in the instrument.

| | |
|-------------------------|--|
| Mode | All |
| Remote Command | :SYSTem:DATE "<year>, <month>, <day>" :SYSTem:DATE? |
| Remote Command Notes | <year> is the four digit representation of year. (for example, 2006) <month> is the two digit representation of year. (for example. 01 to 12) <day> is the two digit representation of day. (for example, 01 to 28, 29, 30, or 31) depending on the month and year |
| Example | :SYST:DATE "2006,05,26" |
| Instrument S/W Revision | A.01.60 or later |

Time (Remote Command Only)

Sets or queries the time in the instrument.

| | |
|-------------------------|--|
| Mode | All |
| Remote Command | :SYSTem:TIME "<hour>, <minute>, <second>" :SYSTem:TIME? |
| Remote Command Notes | <hour> is the two digit representation of the hour in 24 hour format <minute> is the two digit representation of minute <second> is the two digit representation of second |
| Example | :SYST:TIME "13,05,26" |
| Instrument S/W Revision | A.01.60 or later |

User Preset

The User Preset key opens up a menu that gives you three choices – execute the **User Preset** by pressing the **User Preset** key, User Preset all of the modes in the analyzer by pressing the **User Preset All Modes** key, and save the current state for the current mode by pressing the **Save User Preset** key.

Instrument S/W Revision A.01.60 or later

User Preset

User Preset behaves similarly to **Recall State** in that it recalls a hidden Save State file. However, since each Mode has its own **User Preset** file, **User Preset** will never cause a mode switch, whereas recalling a Save State file may cause a mode switch, if the Save State file was saved while in a different mode.

The User Preset file is a Save State file. **User Preset** sets the state of the currently active mode back to the state that was previously saved for this mode using the **Save User Preset** menu key or the SCPI command, `SYST:PRESet:USER:SAV`. So for any given Mode, the only way to perform a User Preset is from that Mode, not from any other Mode. The user has no control over the user preset filename and has no direct access to the user preset file.

User Preset recalls a mode's state which includes all of the variables affected by doing a Mode Preset. It not only recalls Mode Preset settings, but it also recalls all of the mode persistent settings. User Preset also recalls all of the Input/Output system settings that existed at the time **Save User Preset** was executed.

If a **Save User Preset** has not been done at any time, **User Preset** recalls the default user preset file for the currently active mode. The default user preset files are created if, at power-on, a mode detects there is no user preset file, so there will never be a scenario when there is no user preset file to restore. For each mode, the default user preset state is the same state that would be saved if a **Save User Preset** is performed in each mode right after doing a Restore Mode Default and after a Restore Input/Output Defaults.

User Preset does the following:

- Aborts the currently running measurement.
- Sets the mode state to the values defined by **Save User Preset**.
- Makes the saved measurement for the currently running mode the active measurement.
- Brings up the saved menu for the power-on mode.
- Clears the input and output buffers.
- Sets the Status Byte to 0.

| | |
|----------------|---------------------|
| Key Path | User Preset |
| Remote Command | :SYSTem:PRESet:USER |

| | |
|-------------------------|--|
| Dependencies/Couplings | A user preset will cause the currently running measurement to be aborted and cause the saved measurement to be active. Recalling a User Preset file has the same issues that recalling a Save State file has. Some settings may need to be limited and therefore re-coupled, since the capabilities of the mode may have changes when the User Preset file was last saved. |
| Restriction and Notes | Clears all pending OPC bits. The Status Byte is set to 0. |
| Remote Command Notes | :SYST:PRES:USER:SAVE is used to save the current state as the user preset state. |
| Example | :SYST:PRES:USER:SAVE :SYST:PRES:USER |
| Instrument S/W Revision | A.01.60 or later |

User Preset All Modes

User Preset All Modes behaves similarly to Power On User Preset, since it recalls all of the User Preset files for each mode, switches to the power-on mode and activates the saved measurement from the power-on mode User Preset file.

NOTE When the instrument is secured, all of the user preset files are converted back to their default user preset files.

User Preset does the following:

- Aborts the currently running measurement.
- Switches the Mode to the power-on mode.
- Restores the User Preset files for each mode.
- Makes the saved measurement for the power-on mode the active measurement.
- Brings up the saved menu for the power-on mode.
- Clears the input and output buffers.
- Sets the Status Byte to 0.

| | |
|------------------------|--|
| Key Path | User Preset |
| Remote Command | :SYSTem:PRESet:USER:ALL |
| Dependencies/Couplings | A user preset will cause the currently running measurement to be aborted, cause a mode switch to the power-on mode, and cause the saved measurement to be active in the power-on mode. Recalling a User Preset file has the same issues that recalling a Save State file has. Some settings may need to be limited and therefore re-coupled, since the capabilities of the mode may have changes when the User Preset file was last saved. |
| Restriction and Notes | Clears all pending OPC bits. The Status Byte is set to 0. |

System Functions

User Preset

| | |
|-------------------------|--|
| Remote Command Notes | :SYST:PRES:USER:SAVE is used to save the current state as the user preset state. |
| Example | :SYST:PRES:USER:SAVE :SYST:PRES:USER:ALL |
| Instrument S/W Revision | A.01.60 or later |

Save User Preset


Save User Preset saves the currently active mode and its state. The way the user recalls this User Preset file is by pressing the User Preset menu key or sending the SYST:PRES:USER remote command. This same state is also saved by the Save State function.

| | |
|-------------------------|---|
| Key Path | User Preset |
| Remote Command | :SYSTem:PRESet:USER:SAVE |
| Restriction and Notes | :SYST:PRES:SAVE creates the same file as if the user requested a *SAV or a MMEM:STOR:STAT, except User Preset Save does not allow the user to specify the filename or the location of the file. |
| Example | :SYST:PRES:USER:SAVE |
| Instrument S/W Revision | A.01.60 or later |

Measurement Display Windows

Window Control Keys

The instrument provides three front-panel keys for controlling windows. They are **Multi Window**, **Zoom**, and **Next Window**. These are all “immediate action” keys.

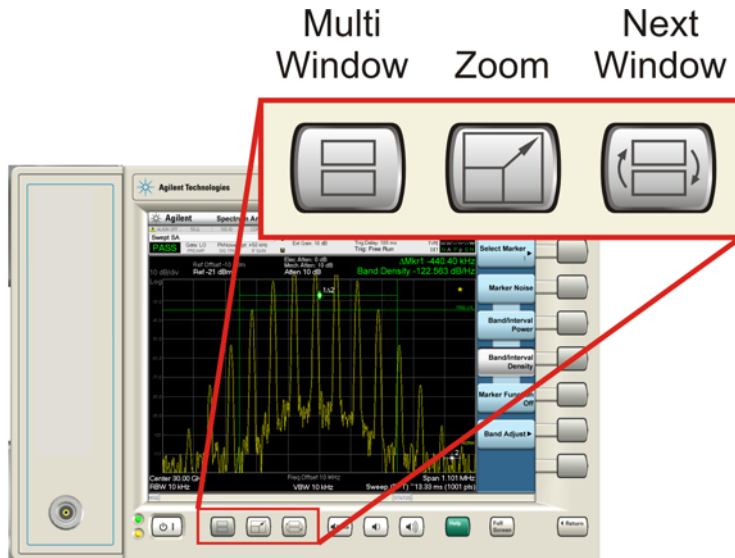

Multi-Window

The **Multi Window** front-panel key is not used at this time. It is there to support future functionality.

| | |
|-------------------------|------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Zoom

Zoom is a toggle function. Pressing once Zooms the selected window; pressing again un-zooms.

When Zoom is on for a window, that window will get the entire primary display area. The zoomed window, since it is the selected window, is outlined in green.

Zoom is local to each Measurement. Each Measurement remembers its Zoom state. The Zoom state of each Measurement is part of the Mode’s state.

NOTE Data acquisition and processing for the other windows continues while a window is zoomed, as does all SCPI communication with the other windows.

System Functions

Measurement Display Windows

Remote Command: :DISPlay:WINDow:FORMat:ZOOM
Remote Command: :DISPlay:WINDow:FORMat:TILE
Preset: TILE
Example: :DISP:WIND:FORM:ZOOM sets zoomed
 :DISP:WIND:FORM:TILE sets un-zoomed
Instrument S/W Revision: A.01.60 or later

Next Window

This key selects the next window of the current view.

When this key is selected in Help Mode, it toggles focus between the table of contents window and the topic pane window.

Remote Command: :DISPlay:WINDow[:SElect] <number>
 :DISPlay:WINDow[:SElect]?
Min: 1
Max: If <number> is greater than the number of windows, limit to <number of windows>
Preset: 1
Example: :DISP:WIND 1
Instrument S/W Revision: A.01.60 or later

Selected Window One and only one window is always selected. The selected window has the focus; as far as the user is concerned, all key presses are going to that window.

If a window is not selected, its boundary is gray. The selected window has a green boundary.

If a window in a multi-window display is zoomed it is still outlined in green. If there is only one window, the green outline is not used. This allows the user to distinguish between a zoomed window and a display with only one window.

The selected window is local to each Measurement. Each Measurement remembers which window is selected. The selected window for each Measurement is remembered in Mode state.

Navigating Windows When the Next Window key is pressed, the next window in the order of precedence (see below) becomes selected. If the selected window was zoomed, the next window will also be zoomed.


The window navigation does NOT use the arrow and select keys. Those are reserved for navigation within a window.

Mouse and Keyboard Control

If you do not have access to the instrument front-panel, there are several ways that a mouse and PC Keyboard can give you access to functions normally accessed using the front-panel keys.


Right-Click

If the user plugs in a mouse and right-clicks on the analyzer screen, a menu will appear as below:

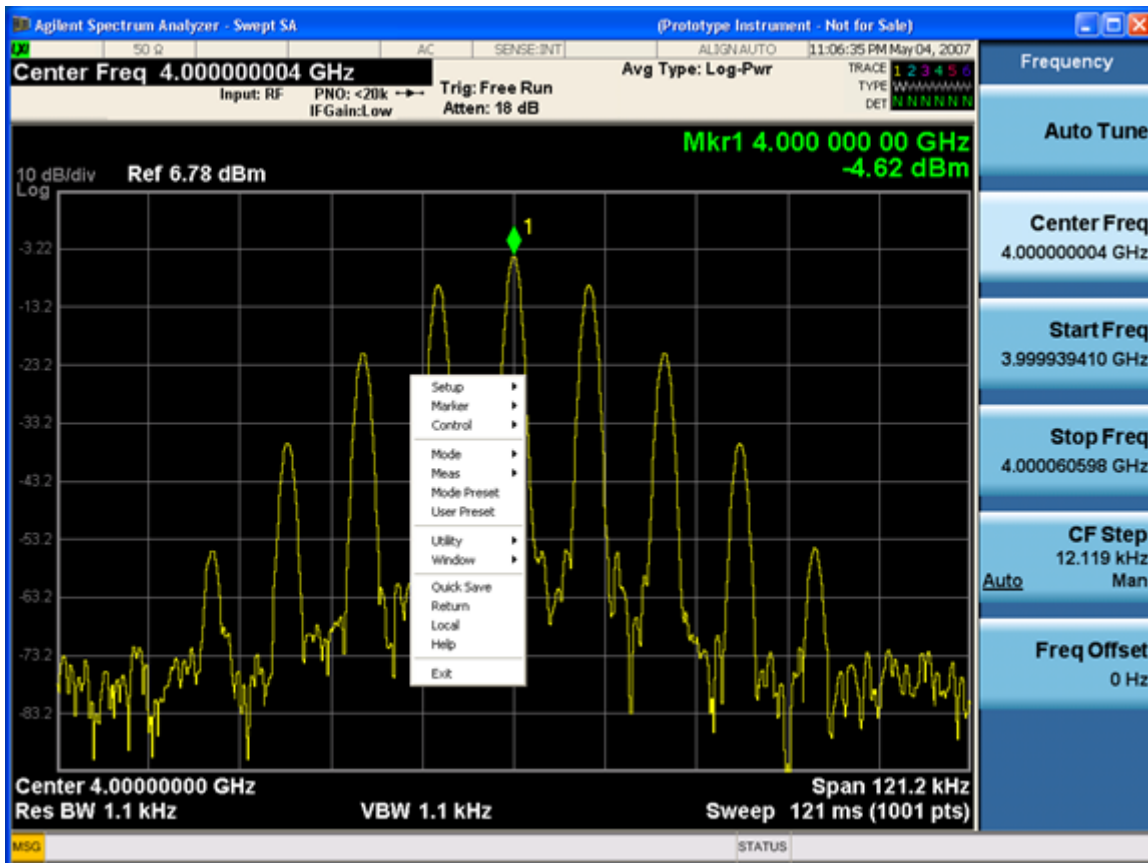


Placing the mouse on one of the rows marked with a right arrow symbol will cause that row to expand, as for example below where the mouse is hovered over the “Utility” row:

System Functions Measurement Display Windows

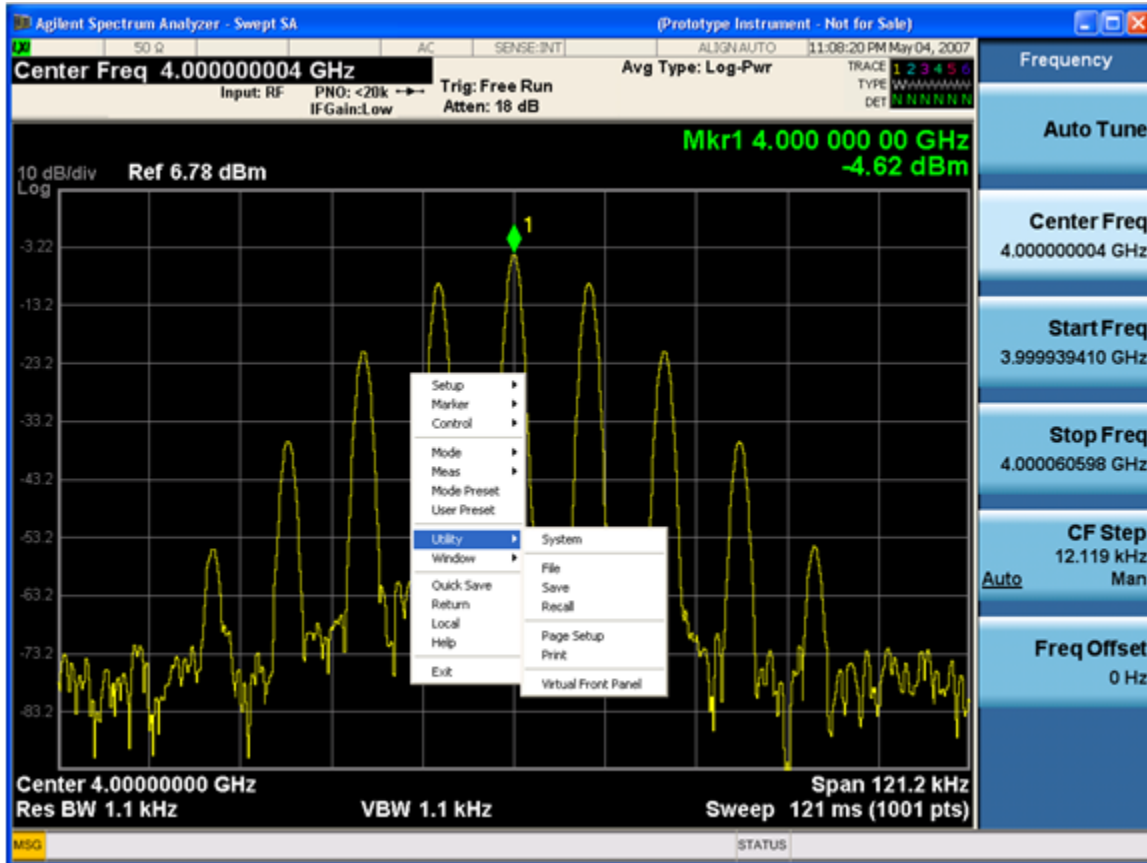

This method can be used to access any of the front-panel keys by using a mouse; as for example if the user is accessing the instrument through Remote Desktop.

The array of keys thus available is shown below :

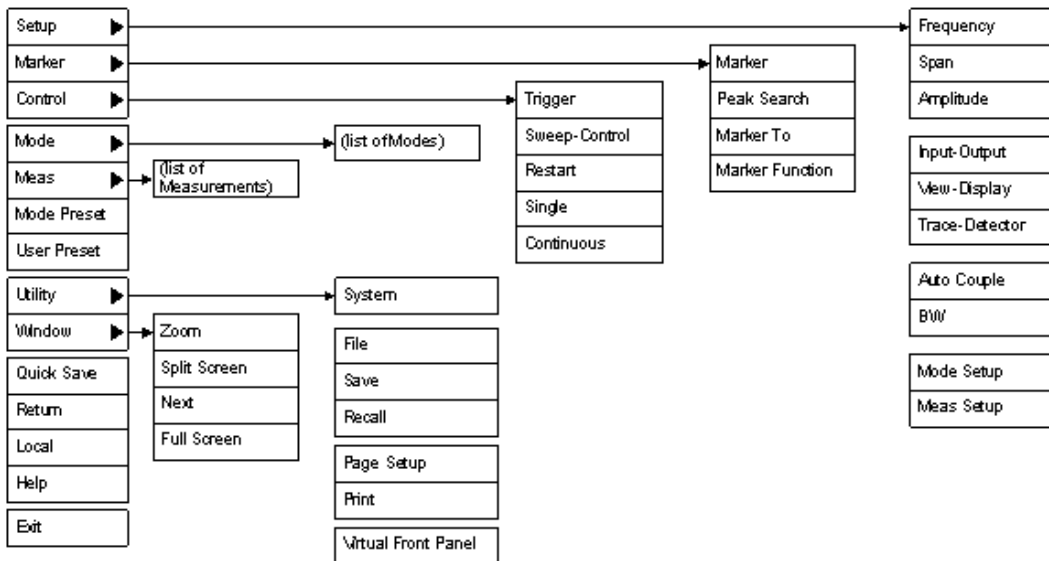

PC Keyboard

If you have a PC keyboard plugged in (or via Remote Desktop), certain key codes on the PC keyboard map to front-panel keys on the GPSA front panel. These key codes are shown below:


| | |
|-----------------|--------------|
| Frequency | CTRL+SHIFT+F |
| Span | CTRL+SHIFT+S |
| Amplitude | CTRL+SHIFT+A |
| Input/Output | CTRL+SHIFT+O |
| View/Display | CTRL+SHIFT+V |
| Trace/Detector | CTRL+ALT+T |
| Auto Couple | CTRL+SHIFT+C |
| Bandwidth | CTRL+ALT+B |
| Source | CTRL+SHIFT+E |
| Marker | CTRL+SHIFT+K |
| Peak Search | CTRL+SHIFT+P |
| Marker To | CTRL+ALT+N |
| Marker Function | CTRL+ALT+F |
| System | CTRL+SHIFT+Y |
| Quick Save | CTRL+SHIFT+Q |
| Save | CTRL+S |
| Recall | CTRL+R |
| Mode Preset | CTRL+M |
| User Preset | CTRL+U |
| Print | CTRL+P |
| File | CTRL+F |
| Mode | CTRL+SHIFT+M |
| Measure | CTRL+ALT+M |
| Mode Setup | CTRL+ALT+E |
| Meas Setup | CTRL+ALT+U |
| Trigger | CTRL+SHIFT+T |
| Sweep/Control | CTRL+SHIFT+W |
| Restart | CTRL+ALT+R |
| Single | CTRL+ALT+S |

System Functions
Measurement Display Windows

| | |
|--------------|---------------|
| Cont | CTRL+ALT+C |
| Zoom | CTRL+SHIFT+Z |
| Next Window | CTRL+SHIFT+N |
| Split Screen | CTRL+SHIFT+L |
| Full Screen | CTRL+SHIFT+B |
| Return | CTRL+SHIFT+R |
| Mute | Mute |
| Inc Audio | Volume Up |
| Dec Audio | Volume Down |
| Help | F1 |
| Control | CTRL |
| Alt | ALT |
| Enter | Return |
| Cancel | Esc |
| Del | Delete |
| Backspace | Backspace |
| Select | Space |
| Up Arrow | Up |
| Down Arrow | Down |
| Left Arrow | Left |
| Right Arrow | Right |
| Menu key 1 | CTRL+SHIFT+F1 |
| Menu key 2 | CTRL+SHIFT+F2 |
| Menu key 3 | CTRL+SHIFT+F3 |
| Menu key 4 | CTRL+SHIFT+F4 |
| Menu key 5 | CTRL+SHIFT+F5 |
| Menu key 6 | CTRL+SHIFT+F6 |
| Menu key 7 | CTRL+SHIFT+F7 |
| Backspace | BACKSPACE |
| Enter | ENTER |
| Tab | Tab |
| 1 | 1 |

| | |
|---|---|
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |

Here is a pictorial view of the table above:

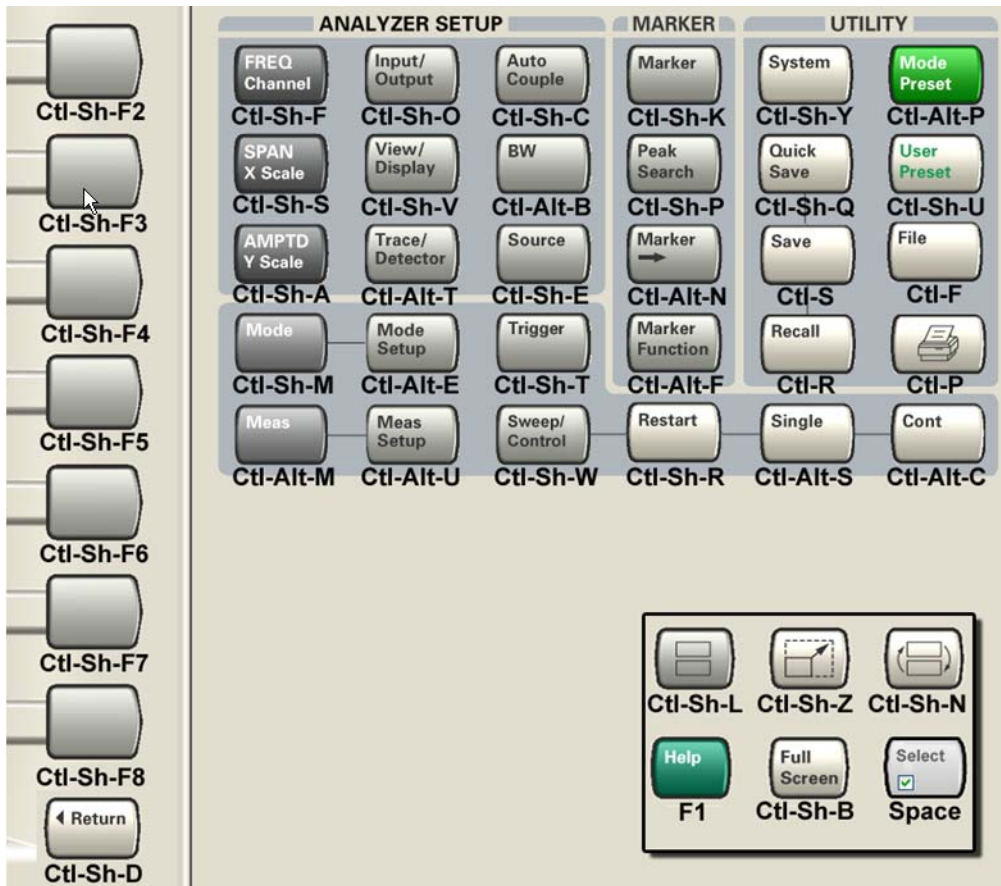

System Functions
Measurement Display Windows

The Channel Power measurement is used to find the total power present in a specified bandwidth. The power spectral density (the power in the signal normalized to 1 Hz) is also reported. For measurement results and views, see [“View/Display” on page 341](#).

This topic contains the following sections:

[“Measurement Commands for Channel Power” on page 295](#)

[“Remote CommandResults for Channel Power Measurement” on page 295](#)

Measurement Commands for Channel Power

These commands are used to measure the total rms power in a specified integration bandwidth. You must be in the Spectrum Analysis, cdma2000, 1xEVDO, or W-CDMA mode to use these commands.

Use :INSTrument:SELEct to set the mode.

```
:CONFigure:CHPower
:CONFigure:CHPower:NDEFault
:INITiate:CHPower
:FETCh:CHPower [n] ?
:MEASure:CHPower [n] ?
:READ:CHPower [n] ?
:FETCh:CHPower:CHPower?
:MEASure:CHPower:CHPower?
:READ:CHPower:CHPower?
:FETCh:CHPower:DENSity?
:MEASure:CHPower:DENSity?
:READ:CHPower:DENSity
```

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1115](#).

Remote CommandResults for Channel Power Measurement

| Command | Return Value |
|---------------------|---------------------------|
| FETCh:CHPower[n]? | Refer to the table below. |
| MEASure:CHPower[n]? | |
| READ:CHPower[n]? | |

Channel Power Measurement

| | |
|--------------------------|---|
| FETCh:CHPower:CHPower? | Returns the Channel Power (dBm) |
| MEASure:CHPower:CHPower? | (BW compatibility functionality) |
| READ:CHPower:CHPower? | |
| FETCh:CHPower:DENSity? | Returns the Power Spectral Density (dBm/Hz) |
| MEASure:CHPower:DENSity? | (BW compatibility functionality) |
| READ:CHPower:DENSity? | |

n **Results Returned**

| | |
|------------------------|---|
| n=1 (or not specified) | Returns scalar results: <ol style="list-style-type: none">1. Channel Power is a floating point number representing the total channel power in the specified integration bandwidth.2. PSD (Power Spectral Density) is the power in the specified unit bandwidth. The unit bandwidth is selected by the PSD Unit parameter in either dBm/Hz or dBm/MHz. |
| 2 | Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal. The frequency span of the captured trace data is specified by the Span key. |

| | |
|-------------------------|-------------------------------------|
| Key Path | Meas |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Instrument S/W Revision | A.01.60 or later |

AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. The parameter values are measurement independent, except all Attenuation values and the Internal Preamp selection, which are the same across all measurements.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Ref Value

Sets the value for the absolute power reference. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Remote Command | :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEV e1 <real> :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEV e1? |
| Example | DISP:CHP:VIEW:WIND:TRAC:Y:RLEV 10 dBm DISP:CHP:VIEW:WIND:TRAC:Y:RLEV? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off. |
| Preset | All except CDMA1xEVDO:10.00 dBm CDMA1xEVDO: -10.00dBm |
| State Saved | Saved in instrument state. |
| Min | -250.00 dBm |
| Max | 250.00 dBm |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Attenuation

Accesses a menu of functions that enable you to change the attenuation settings. This key has read-back

Channel Power Measurement AMPTD Y Scale

text that describes the total attenuator value.

See AMPTD Y Scale, “Attenuation” on page 1037 in the “Common Measurement Functions” section for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD/Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div

Sets the units per division of the vertical scale in the logarithmic display. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:PDIV ision <rel_ampl> :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:PDIV ision? |
| Example | DISP:CHP:VIEW:WIND:TRAC:Y:PDIV 2 DISP:CHP:VIEW:WIND:TRAC:Y:PDIV? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off. |
| Preset | 10.00 dB |
| State Saved | Saved in instrument state. |
| Min | 0.10 dB |
| Max | 20.00 dB |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Presel Center

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the frequency of the selected marker.

See “Presel Center” on page 1048 under AMPTD Y Scale in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD/Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Presel Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when Presel Center is available.

See “[Preselector Adjust](#)” on page 1050 under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

This is only available when the selected input is RF.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD/Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See AMPTD Y Scale, “[Internal Preamp](#)” on page 1051 in the “Analyzer Setup Functions” section for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD/Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

| | |
|-----------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | :DISPlay:CHPower:VIEW [1] :WINDow [1] :TRACe:Y [:SCALe] :RPOS ition TOP CENTer BOTTom :DISPlay:CHPower:VIEW [1] :WINDow [1] :TRACe:Y [:SCALe] :RPOS ition? |
| Example | DISP:CHP:VIEW:WIND:TRAC:Y:RPOS CENT DISP:CHP:VIEW:WIND:TRAC:Y:RPOS? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |

Channel Power Measurement
AMPTD Y Scale

| | |
|-------------------------|----------------------------|
| Preset | TOP |
| State Saved | Saved in instrument state. |
| Range | Top Ctr Bot |
| Instrument S/W Revision | A.01.60 or later |

Auto Scaling

Toggles the Auto Scaling function between On and Off.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPl le 0 1 OFF ON :DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPl le? |
| Example | DISP:CHP:VIEW:WIND:TRAC:Y:COUP OFF DISP:CHP:VIEW:WIND:TRAC:Y:COUP? |
| Dependencies/Couplings | When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off. |
| Preset | 1 |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Auto Couple

See “[AUTO COUPLE](#)” on page 1055 in the section "Common Measurement Functions" for more information.

BW

Accesses a menu of functions that enable you to specify and control the video and resolution bandwidths. You can also select the type of filter for the measurement and set the filter bandwidth.

Key Path **Front-panel key**

Instrument S/W Revision A.01.60 or later

Res BW

Sets the value of the resolution bandwidth (RBW). If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Remote Command `[:SENSE] :CHPower:BANDwidth[:RESolution] <bandwidth>`
`[:SENSE] :CHPower:BANDwidth[:RESolution] ?`
`[:SENSE] :CHPower:BANDwidth[:RESolution] :AUTO ON|OFF|1|0`
`[:SENSE] :CHPower:BANDwidth[:RESolution] :AUTO?`

Example `CHP:BAND 5 MHz`
`CHP:BAND?`
`CHP:BAND:AUTO ON`
`CHP:BAND:AUTO?`

Dependencies/Couplings Sweep time is coupled to the RBW. As the RBW changes, the sweep time (if set to Auto) is changed to maintain amplitude calibration.

Video bandwidth (VBW) is coupled to the RBW. As the resolution bandwidth changes, the video bandwidth (if set to Auto) changes to maintain the ratio of VBW/RBW (10:1).

When the Res BW is set to Auto, the resolution bandwidth is auto-coupled to the span. The ratio of Span/RBW is approximately 106:1 when auto coupled. When Res BW is set to Man, and the bandwidths are entered manually, these bandwidths are used regardless of other analyzer settings.

Instrument S/W Revision A.01.60 or later

Key Path **BW**

Mode SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO

Notes You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use `:INSTrument:SElect` to set the mode.

| | |
|------------------|--|
| Preset | SA: Auto WCDMA: 240 kHz C2K: 24 kHz WIMAX OFDMA: 100kHz 1xEVDO: 30kHz WCDMA, C2K, 1xEVDO , WIMAX OFDMA: OFF SA: ON |
| State Saved | Saved in instrument state. |
| Min | 1 Hz |
| Max | 8 MHz |
| Test MIN/MAX/DEF | Yes |

Video BW

Changes the analyzer post-detection filter (VBW).

| | |
|-----------------------|---|
| Remote Command | [:SENSE] :CHPower: BANDwidth: VIDEo <bandwidth> [:SENSE] :CHPower: BANDwidth: VIDEo? [:SENSE] :CHPower: BANDwidth: VIDEo: AUTO ON OFF 1 0 [:SENSE] :CHPower: BANDwidth: VIDEo: AUTO? |
| Example | CHP: BAND: VID 2.4 MHz CHP: BAND: VID? CHP: BAND: VID: AUTO OFF CHP: BAND: VID: AUTO? |

Channel Power Measurement BW

| | |
|-------------------------|--|
| Dependencies/Couplings | <p>See Couplings</p> <p>Video bandwidth (VBW) is coupled to the RBW. As the resolution bandwidth changes, the video bandwidth (if set to Auto) changes to maintain the ratio set by VBW/RBW.</p> <p>Sweep Time is coupled to the Video Bandwidth (VBW). As the VBW is changed, the sweep time (when set to Auto) is changed to maintain amplitude calibration. This occurs because of common hardware between the two circuits, even though the Video BW filter is not actually “in-circuit” when the detector is set to Average. Because the purpose of the average detector and the VBW filter are the same, either can be used to reduce the variance of the result.</p> <p>Although the VBW filter is not “in-circuit” when using the average detector, the Video BW key can have an effect on (Auto) sweep time, and is not disabled. In this case, reducing the VBW setting increases the sweep time, which increases the averaging time, producing a lower-variance trace.</p> <p>When using the average detector with either Sweep Time set to Man, or in zero span, the VBW setting has no effect and is disabled (grayed out).</p> <p>When the video bandwidth is AUTO coupled, the video bandwidth value is set to:</p> <p style="text-align: center;">Resolution Bandwidth * Video Bandwidth to Resolution Bandwidth Ratio</p> |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | BW |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | <p>SA: Auto</p> <p>WCDMA: 2.4MHz</p> <p>C2K: 240 kHz</p> <p>WIMAX OFDMA: Auto</p> <p>1xEVDO: 300 kHz</p> <p>ON</p> |
| State Saved | Saved in instrument state. |
| Min | 1 Hz |
| Max | 50 MHz |
| Test MIN/MAX/DEF | Yes |

Filter Type

Selects the type of bandwidth filter that is used. The choices are Gaussian or Flat top.

| | |
|-------------------------|--|
| Key Path | BW |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | [:SENSe] :CHPower :BANDwidth :SHAPE GAUSSian FLATtop [:SENSe] :CHPower :BANDwidth :SHAPE? |
| Example | CHP:BAND:SHAP GAUS CHP:BAND:SHAP? |
| Preset | GAUSSian |
| State Saved | Saved in instrument state. |
| Range | Gaussian Flattop |
| Instrument S/W Revision | A.01.60 or later |

Cont

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1063 in the section "Common Measurement Functions" for more information.

FREQ Channel

See “[FREQ/Channel](#)” on page 1059 in the section "Common Measurement Functions" for more information.

Input/Output

See “[Input/Output](#)” on page 1065 in the section "Common Measurement Functions" for more information.

Marker

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Marker Type

Sets the marker control mode to **Normal**, **Delta**, **Fixed** or **Off**. All interactions and dependencies detailed under the key description are enforced when the remote command is sent. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is Off, there is no active function and the active function is turned off.

| | |
|-------------------------|--|
| Key Path | Marker |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | :CALCulate:CHPower:MARKer[1 2 3 4 5 6 7 8 9 10 11 12:MODE POSITION DELTA OFF :CALCulate:CHPower:MARKer[1 2 3 4 5 6 7 8 9 10 11 12:MODE? |
| Example | CALC:CHP:MARK3:MODE POS CALC:CHP:MARK3:MODE? |
| Notes | If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X Axis Value appears on the Active Function area. Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off. Active Function Display: the marker X axis value entered in the active function area displays the marker value to its full entered precision. |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Normal Delta Off |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal**, **Delta**, or **Fixed**.

| | |
|-------------------------|--|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | :CALCulate:CHPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X <real> :CALCulate:CHPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X ? |
| Example | CALC:CHP:MARK3:X 0 CALC:CHP:MARK3:X? |
| Notes | The query returns the marker's absolute X Axis value if the control mode is Normal , or the offset from the marker's reference marker if the control mode is Delta . The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency . |
| Preset | After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN). |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Position (Remote Command only)

Sets the marker X Axis Scale position in trace points. This setting has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta**. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

| | |
|-----------------------|--|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | :CALCulate:CHPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition <real> :CALCulate:CHPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition? |
| Example | CALC:CHP:MARK10:X:POS 0 CALC:CHP:MARK10:X:POS? |
| Notes | The query returns the marker's absolute X Axis value in trace points if the control mode is Normal , or the offset from the marker's reference marker in trace points if the control mode is Delta . |

| | |
|-------------------------|--|
| Preset | After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN). |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Marker Y Axis Value (Remote Command only)

Returns the marker Y Axis value in the current marker Y Axis unit.

| | |
|-------------------------|---|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | :CALCulate:CHPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :Y ? |
| Example | CALC:CHP:MARK11:Y? |
| Preset | Result dependent on Markers setup and signal source. |
| State Saved | No |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Properties

Accesses the marker properties menu.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Relative To

Selects the desired marker. The selected marker is relative to its reference marker.

| | |
|----------|---------------------------|
| Key Path | Marker, Properties |
|----------|---------------------------|

Channel Power Measurement Marker

| | |
|-------------------------|--|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | :CALCulate:CHPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R EFerence <integer> :CALCulate:CHPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R EFerence? |
| Example | CALC:CHP:MARK:REF 5 CALC:CHP:MARK:REF? |
| Notes | A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself." When queried, a single value is returned (the specified marker numbers relative marker). You must be in the Spectrum Analysis or WCDMA mode to use this command. Use :INSTrument:SELEct to set the mode. |
| Preset | 2 3 4 5 6 7 8 9 10 11 12 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 12 |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

All Markers Off

Turns off all markers.

| | |
|-------------------------|-------------------------------------|
| Key Path | Marker |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | :CALCulate:CHPower:MARKer :AOFF |
| Example | CALC:CHP:MARK:AOFF |
| Instrument S/W Revision | A.01.60 or later |

Marker Function

There are no 'Marker Functions' supported in Channel Power, so this front-panel key displays a blank menu key when pressed.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Marker To

There is no 'Marker To' functionality supported in Channel Power, so this front-panel key displays a blank menu key when pressed.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Meas

See “[Meas](#)” on page 1115 in the section "Common Measurement Functions" for more information.

Meas Setup

Displays the setup menu for the currently selected measurement. The parameters included in the measurement setup include the following:

Averaging

IF Gain

Channel Power Span

Integrated Bandwidth

Filter Bandwidth

Root Raised Cosine (RRC) Filter

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Avg/Hold Num

Specifies the number of measurement averages used to calculate the measurement result. The average is displayed at the end of each sweep. After the specified number of average counts, the averaging mode (terminal control) setting determines the averaging action.

| | |
|-----------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | [:SENSe]:CHPower:AVERage:COUNT <integer> [:SENSe]:CHPower:AVERage:COUNT? [:SENSe]:CHPower:AVERage[:STATe] ON OFF 1 0 [:SENSe]:CHPower:AVERage[:STATe]? |
| Example | CHP:AVER:COUN 15 CHP:AVER:COUN? CHP:AVER ON CHP:AVER? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |

| | |
|-------------------------|--|
| Preset | SA: 10 WCDMA: 200 WIMAX OFDMA: 200 1xEVDO: 20 ON |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 10000 |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Avg Mode

Allows you to select the type of termination control used for the averaging function. This determines the averaging action after the specified number of data acquisitions (average count) is reached.

When set to Exponential (Exp) the measurement averaging continues using the specified number of averages to compute each exponentially-weighted averaged value. The average is displayed at the end of each sweep.

When set to Repeat, the measurement resets the average counter each time the specified number of averages is reached.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | [:SENSE] :CHPower:AVERage:TCONtrol EXPonential REPeat [:SENSE] :CHPower:AVERage:TCONtrol? |
| Example | CHP:AVER:TCON EXP CHP:AVER:TCON? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | EXP |
| State Saved | Saved in instrument state. |
| Range | Exp Repeat |
| Instrument S/W Revision | A.01.60 or later |

Integ BW

Specifies the range of integration used in calculating the power in the channel. The integration

Channel Power Measurement Meas Setup

bandwidth (IBW) is displayed on the trace as two markers connected by an arrow.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | [:SENSe] :CHPower:BANDwidth:INTEgration <bandwidth> [:SENSe] :CHPower:BANDwidth:INTEgration? |
| Example | CHP:BAND:INT 10MHz CHP:BAND:INT? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | The minimum value of the span is coupled with the integration bandwidth. |
| Preset | SA: 2 MHz WCDMA: 5 MHz C2K: 1.23 MHz WIMAX OFDMA: 10 MHz 1xEVDO: 1.23 MHz |
| State Saved | Saved in instrument state. |
| Min | 100 Hz |
| Max | 1 GHz |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

IF Gain

Sets the IF Gain function to Auto, Low Gain or High Gain. These settings affect sensitivity and IF overloads.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

IF Gain Auto

Activates the auto rules for IF Gain. When Auto is active, the IF Gain is set to High Gain under any of the following conditions:

- The input attenuator is set to 0 dB
- The preamp is turned On and the frequency range is under 3.6 GHz

For other settings, Auto sets the IF Gain to Low Gain.

| | |
|-------------------------|---|
| Key Path | Meas Setup, IF Gain |
| Remote Command | [:SENSe] :CHPower:IF:GAIN:AUTO[:STATe] ON OFF 1 0 [:SENSe] :CHPower:IF:GAIN:AUTO[:STATe] ? |
| Example | CHP:IF:GAIN:AUTO ON CHP:IF:GAIN:AUTO? |
| Dependencies/Couplings | When the auto attenuation exists (for example, with an electrical attenuator), the IF Gain setting is changed using the following rule. Auto sets IF Gain to High Gain under any of the following conditions: the input attenuator is set to 0 dB, or the preamp is turned on and the frequency range is under 3.6 GHz. For other settings, Auto sets IF Gain to Low Gain. |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Off On |
| Instrument S/W Revision | A.01.60 or later |

IF Gain State

Selects the range of the IF Gain.

| | |
|-------------------------|--|
| Key Path | Meas Setup, IF Gain |
| Remote Command | [:SENSe] :CHPower:IF:GAIN[:STATe] ON OFF 1 0 [:SENSe] :CHPower:IF:GAIN[:STATe] ? |
| Example | CHP:IF:GAIN ON CHP:IF:GAIN? |
| Notes | ON = high gain OFF = low gain |
| Dependencies/Couplings | When the auto attenuation exists (for example, with an electrical attenuator), the IF Gain setting is changed as following rule. Auto sets IF Gain to High Gain under any of the following conditions: the input attenuator is set to 0 dB, or the preamp is turned on and the frequency range is under 3.6 GHz. For other settings, Auto sets IF Gain to Low Gain. |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Low Gain High Gain |
| Instrument S/W Revision | A.01.60 or later |

RRC Filter

Turns the Root Raised Cosine (RRC) filter On or Off. The α value (roll off) for the filter is set to the value of the Filter Alpha parameter, and the RRC filter bandwidth is set to the Filter BW parameter.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA |
| Remote Command | [:SENSe] :CHPower:FILTer [:RRC] [:STATe] OFF ON 0 1 [:SENSe] :CHPower:FILTer [:RRC] [:STATe] ? |
| Example | CHP:FILT OFF CHP:FILT? |
| Notes | This parameter is normally used when TETRA is selected as the Radio Std. You must be in the Spectrum Analysis mode or W-CDMA mode to use this command. Use :INSTrument:SELEct to set the mode. |
| Dependencies/Couplings | For CDMA2K mode, this key is blank. For 1xEVDO mode, this key is blank. |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Filter BW

Inputs the Root Raised Cosine (RRC) filter bandwidth. Normally, the filter bandwidth is the same as the symbol rate of the signal.

| | |
|-------------------------|--|
| Remote Command | [:SENSe] :CHPower:FILTer [:RRC] :BANDwidth <real> [:SENSe] :CHPower:FILTer [:RRC] :BANDwidth? |
| Example | CHP:FILT:BAND 10MHz CHP:FILT:BAND? |
| Dependencies/Couplings | For CDMA2K mode, this key is blank. For 1xEVDO mode, this key is blank. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Meas Setup |
| Mode | SA, WCDMA, WIMAX OFDMA |

| | |
|------------------|---|
| Notes | This parameter is normally used when TETRA is selected as the Radio Std. You must be in the Spectrum Analysis mode or W-CDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | SA: 3.84MHz WCDMA: 3.84MHz WIMAX OFDMA: 10MHz |
| State Saved | Saved in instrument state. |
| Min | 100 Hz |
| Max | 100 MHz |
| Test MIN/MAX/DEF | Yes |

Filter Alpha

Inputs the alpha value for the Root Raised Cosine (RRC) filter.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA |
| Remote Command | [:SENSE] :CHPower:FILTer [:RRC] :ALPHa <real> [:SENSE] :CHPower:FILTer [:RRC] :ALPHa? |
| Example | CHP:FILT:ALPH 0.5 CHP:FILT:ALPH? |
| Notes | This parameter is normally used when TETRA is selected as the Radio Std. You must be in the Spectrum Analysis mode or W-CDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | For CDMA2K mode, this key is blank. |
| Preset | 0.22 |
| State Saved | Saved in instrument state. |
| Min | 0.01 |
| Max | 1.00 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 0.10 |
| Instrument S/W Revision | A.01.60 or later |

PSD Unit

Sets the unit bandwidth for Power Spectral Density. The available units are dBm/Hz and dBm/MHz.

| | |
|-------------------------|--|
| Key Path | Meas Setup, More |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | :UNIT:CHPower:POWer:PSD DBMHZ DBMMHZ :UNIT:CHPower:POWer:PSD? |
| Example | UNIT:CHP:POW:PSD DBMMHZ UNIT:CHP:POW:PSD? |
| Dependencies/Couplings | When the PSD unit is changed, the PSD result of the “MEAS READ FETCH:CHP1?” is also changed by the PSD unit basis (in either dBm/Hz or dBm/MHz). |
| Preset | DBMHZ |
| State Saved | Saved in instrument state. |
| Range | dBm/Hz dBm/MHz |
| Instrument S/W Revision | A.01.60 or later |

Meas Preset

Restores all the measurement parameters to their default values.

| | |
|-------------------------|-------------------------------------|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | :CONFigure:CHPower |
| Example | CONF:CHP |
| Instrument S/W Revision | A.01.60 or later |

Mode

See “[Mode](#)” on page 1133 in the section "Common Measurement Functions" for more information.

Mode Setup

See “[Mode Setup](#)” on page 1145 in the section "Common Measurement Functions" for more information.

Peak Search

Places the selected marker on the trace point with the maximum y-axis value. Pressing Peak Search with the selected marker Off causes the selected marker to be set to Normal, then a peak search is immediately performed.

| | |
|-------------------------|---|
| Key Path | Front panel key |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | :CALCulate:CHPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M AXimum |
| Example | CALC:CHP:MARK2:MAX |
| Instrument S/W Revision | A.01.60 or later |

Recall

See “[Recall](#)” on page 1149 in the section "Common Measurement Functions" for more information.

Restart

See “Restart” on page 1167 in the section "Common Measurement Functions" for more information.

Save

See “[Save](#)” on page 1169 in the section "Common Measurement Functions" for more information.

Single

See “[Single \(Single Measurement/Sweep\)](#)” on page 1191 in the section "Common Measurement Functions" for more information.

Source

See “[Source](#)” on page 1193 in the section "Common Measurement Functions" for more information.

Span X Scale

Accesses a menu of functions that enable you set the horizontal scale parameters.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Span

Changes the frequency range symmetrically about the center frequency.

The default (and minimum) Span is calculated using the number of carriers and the carrier width where;

$$\text{Span} = (\text{Upper Carrier Freq} + (\text{max offset IBW} * (1 + \alpha)) / 2) - (\text{Lower Carrier Freq} - (\text{max offset IBW} * (1 + \alpha)) / 2)$$

The span is increased by a factor of 1 + Filter Alpha if the RRC Filter is on.

| | |
|------------------------|--|
| Key Path | Span X Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | [:SENSe] :CHPower:FREQuency:SPAN <freq> [:SENSe] :CHPower:FREQuency:SPAN? |
| Example | CHP:FREQ:SPAN 10 MHz CHP:FREQ:SPAN? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | When Res BW is set to Auto, the resolution bandwidth is auto-coupled to span. The ratio of span /RBW is approximately 106:1. When the Res BW is set to Man, bandwidths are entered by the user, and these bandwidths are used regardless of other analyzer settings. Since Span is coupled to Integ BW in the factory default condition, if you change the integration bandwidth setting, the span setting changes by a proportional amount until a limit value is reached. However, the span can be individually set. The minimum value of the span is coupled with the integration bandwidth. |
| Preset | SA: 3 MHz WCDMA: 7.5 MHz C2K: 1.845 MHz WIMAX OFDMA: 20 MHz 1xEVDO: 2.0MHz |

Channel Power Measurement

Span X Scale

| | |
|-------------------------|----------------------------|
| State Saved | Saved in instrument state. |
| Min | 100 Hz |
| Max | 1 GHz |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Full Span

Changes the span to show the full frequency range of the spectrum analyzer.

| | |
|-------------------------|---|
| Key Path | Span X Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | [:SENSe] :CHPower :FREQuency :SPAN :FULL |
| Example | CHP:FREQ:SPAN:FULL |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | Selecting full span changes the measurement span value. |
| Instrument S/W Revision | A.01.60 or later |

Last Span

Changes the span to the previous span setting. If no previous span value exists, then the span remains unchanged.

| | |
|-------------------------|---|
| Key Path | Span X Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | [:SENSe] :CHPower :FREQuency :SPAN :PREVious |
| Example | CHP:FREQ:SPAN:PREV |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | Selecting last span changes the measurement span value. |
| Instrument S/W Revision | A.01.60 or later |

Sweep/Control

Accesses a menu of functions that enable you to set up and control the sweep time and source for the current measurement. See “Sweep / Control” on page 1197 in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Sweep Time

Selects the length of time that the spectrum analyzer sweeps the displayed frequency span. Additional overhead time, which impacts the sweep rate, is not calculated as part of the sweep time. In fact:

sweep rate = span/sweep time

update rate = 1/(sweep time + overhead)

sweep cycle time = sweep time + overhead

Sweep time is coupled to RBW and VBW, and is impacted by the number of sweep points, so changing those parameters may change the sweep time.

| | |
|------------------------|--|
| Key Path | Sweep/Control |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | [:SENSe] :CHPower:SWEep:TIME <time> [:SENSe] :CHPower:SWEep:TIME? [:SENSe] :CHPower:SWEep:TIME:AUTO OFF ON 0 1 [:SENSe] :CHPower:SWEep:TIME:AUTO? |
| Example | CHP:SWE:TIME 25ms CHP:SWE:TIME? CHP:SWE:TIME:AUTO OFF CHP:SWE:TIME:AUTO? |
| Dependencies/Couplings | When the user manually changes the Sweep Time, this state automatically goes to ‘Man’. |
| Preset | SA, WIMAX OFDMA: Automatically Calculated WCDMA: 1.0 ms CDMA2K: 9.4ms 1xEVDO: 2.66ms |
| State Saved | Saved in instrument state. |

Channel Power Measurement Sweep/Control

| | |
|-------------------------|------------------|
| Min | 1 ms |
| Max | 4000 s |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Sweep Setup

Accesses a menu that enables you to set the sweep state for the current measurement.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Auto Sweep Time Rules

Switches the analyzer between normal and accuracy sweep states.

Setting **Auto Sweep Time** to **Accy** results in slower sweep times, usually about three times as long, but yields better amplitude accuracy for CW signals. The instrument amplitude accuracy specifications only apply when **Auto Sweep Time** is set to **Accy**.

Additional amplitude errors which occur when **Auto Sweep Time** is set to **Norm** are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, **Norm** is the preferred setting of **Auto Sweep Time**. **Auto Sweep Time** is set to **Norm** on a **Preset** or **Auto Couple**. This means that in the Preset or Auto Coupled state, instrument amplitude accuracy specifications do not apply.

| | |
|-------------------------|---|
| Key Path | Sweep/Control, Sweep Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | [:SENSe] :CHPower:SWEep:TIME:AUTO:RULEs NORMal ACCuracy [:SENSe] :CHPower:SWEep:TIME:AUTO:RULEs? |
| Example | CHP:SWE:TIME:AUTO:RUL NORM CHP:SWE:TIME:AUTO:RUL? |
| Notes | In Zero Span, this key is irrelevant and inaccessible (because the whole Sweep Setup menu is grayed out in Zero Span), however its settings can be changed remotely with no error indication. Set to Norm when Auto Couple is pressed or sent remotely |
| Preset | NORMal |
| State Saved | Saved in instrument state. |
| Range | Norm Accy |
| Instrument S/W Revision | A.01.60 or later |

Pause

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing the Resume key resumes the measurement at the point it was at when paused. See “Pause/Resume” on page 1198 in “Common Measurement Functions” section for more details.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Gate

Accesses a menu that enables you to control the gating function. See “Gate” on page 417 in "Common Measurement Functions" section for more details.

The Gate functionality is used to view signals best viewed by qualifying them with other events.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Points

Sets the number of points per sweep. The resolution of setting the sweep time depends on the number of points selected. If Preset is selected, the number of points per sweep defaults to 1001. The current value of points is displayed parenthetically, next to the sweep time in the lower-right corner of the display.

Changing the number of points has several effects on the analyzer. Since markers are read at the point location, the marker reading may change. All trace data is cleared.

| | |
|-----------------------|---|
| Key Path | Sweep/Control |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | [:SENSe] :CHPower:SWEep:POINts <integer> [:SENSe] :CHPower:SWEep:POINts? |
| Example | CHP:SWE:POIN 501 CHP:SWE:POIN? |
| Notes | Whenever the number of sweep points change: All trace data is erased Any traces with Update Off also go to Display Off (like going from View to Blank in the older analyzers) Sweep time is re-quantized Any limit lines that are on are updated If averaging/hold is on, averaging/hold starts over |

Channel Power Measurement Sweep/Control

| | |
|-------------------------|---|
| Dependencies/Couplings | Whenever the number of sweep points change, the sweep time is re-quantized. |
| Preset | 1001 |
| State Saved | Saved in instrument state. |
| Min | 101 |
| Max | 20001 |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Trace/Detector

Accesses a menu of functions that enable you to control the detectors for the current measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Trace Type

Allows you to select the type of trace you want to use for the current measurement. The first page of this menu contains a 1-of-N selection of the trace type (**Clear Write, Average, Max Hold, Min Hold**) for the selected trace.

| | |
|-------------------------|---|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | :TRACe:CHPower:TYPE WRITe AVERAge MAXHold MINHold :TRACe:CHPower:TYPE? |
| Example | TRAC:CHP:TYPE WRIT TRAC:CHP:TYPE? |
| Notes | WRITe = Clear Write AVERAge = Average MAXHold = Maximum Hold MINHold = Minimum Hold |
| Dependencies/Couplings | When Detector setting is “Auto” (:SENSe]:CHPower:DETEctor:AUTO?), Detector (:SENSe]:CHPower:DETEctor[:FUNctioN]?) switches aligning with the switch of this parameter: “NORMal” with WRITe (Clear Write), “AVERAge” with AVERAge, “POSitive (peak)” with MAXHold, and “NEGative (peak)” with MINHold. |
| Preset | AVERAge |
| State Saved | Saved in instrument state. |
| Range | ClearWrite Average MaxHold MinHold |
| Instrument S/W Revision | A.01.60 or later |

Detector

Accesses a menu of functions that enable you to control the detectors for the current measurement. The following choices are available:

- Auto- the detector selected depends on marker functions, trace functions, average type, and the trace averaging function.

Channel Power Measurement Trace/Detector

- Normal-the detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.
- Average-the detector determines the average of the signal within the sweep points. The averaging method depends upon the Average Type selection (voltage, power or log scales).
- Peak-the detector determines the maximum of the signal within the sweep points.
- Sample-the detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.
- Negative Peak-the detector determines the minimum of the signal within the sweep points.
-

| | |
|-------------------------|------------------|
| Key Path | Detector |
| Instrument S/W Revision | A.01.60 or later |

Detector Selection

Selects a detector to be used by the analyzer for the current measurement.

| | |
|-----------------------|---|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | [:SENSe]:CHPower:DETEctor[:FUNction] NORMal AVERage POSitive SAMPlE NEGative [:SENSe]:CHPower:DETEctor[:FUNction]? |
| Example | CHP:DET NORM CHP:DET? |
| Notes | <p>When you manually select a detector (instead of selecting Auto), that detector is used regardless of other analyzer settings.</p> <p>The Normal detector determines the peak of CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This method of detection is also referred to as Rosenfell detection.</p> <p>The Average detector determines the average of the signal within the sweep points. The averaging method is Power Average (RMS).</p> <p>The Peak detector determines the maximum of the signal within the sweep points.</p> <p>The Sample detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.</p> <p>The Negative Peak detector determines the minimum of the signal within the sweep points.</p> |

| | |
|-------------------------|---|
| Dependencies/Couplings | When Detector setting is “Auto” ([:SENSe]:CHPower:DETECTOR:AUTO?), Detector ([:SENSe]:CHPower:DETECTOR[:FUNCTION]?) switches aligning with the switch of this parameter: “NORMAl” with Clear Write, “AVERAge” with AVERAge, “POSitive (peak)” with MAXHold, and “NEGative (peak)” with MINHold. |
| Preset | AVERAge |
| State Saved | Saved in instrument state. |
| Range | Normal Average Peak Sample Negative Peak |
| Instrument S/W Revision | A.01.60 or later |

Auto

Sets the detector for the currently selected trace to Auto.

| | |
|-------------------------|---|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | [:SENSe] :CHPower:DETECTOR:AUTO ON OFF 1 0 [:SENSe] :CHPower:DETECTOR:AUTO? |
| Example | CHP:DET:AUTO ON CHP:DET:AUTO? |
| Dependencies/Couplings | When Detector setting is “Auto” ([:SENSe]:CHPower:DETECTOR:AUTO?), Detector ([:SENSe]:CHPower:DETECTOR[:FUNCTION]?) switches aligning with the switch of this parameter: “NORMAl” with Clear Write, “AVERAge” with AVERAge, “POSitive (peak)” with MAXHold, and “NEGative (peak)” with MINHold. |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Instrument S/W Revision | A.01.60 or later |

Trigger

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement. See [“Trigger” on page 1221](#) in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |


View/Display

Accesses a menu of functions that enable you to control the instrument display as well as turn the bar graph On and Off.

The front panel views contain one view: Spectrum View. It can be displayed as a single spectrum trace view or displayed with a Bar Graph trace on the spectrum trace

The results of the measurement can be displayed as a single spectrum trace view or displayed with a Bar Graph trace on the spectrum trace.

Spectrum View with Bar Graph off

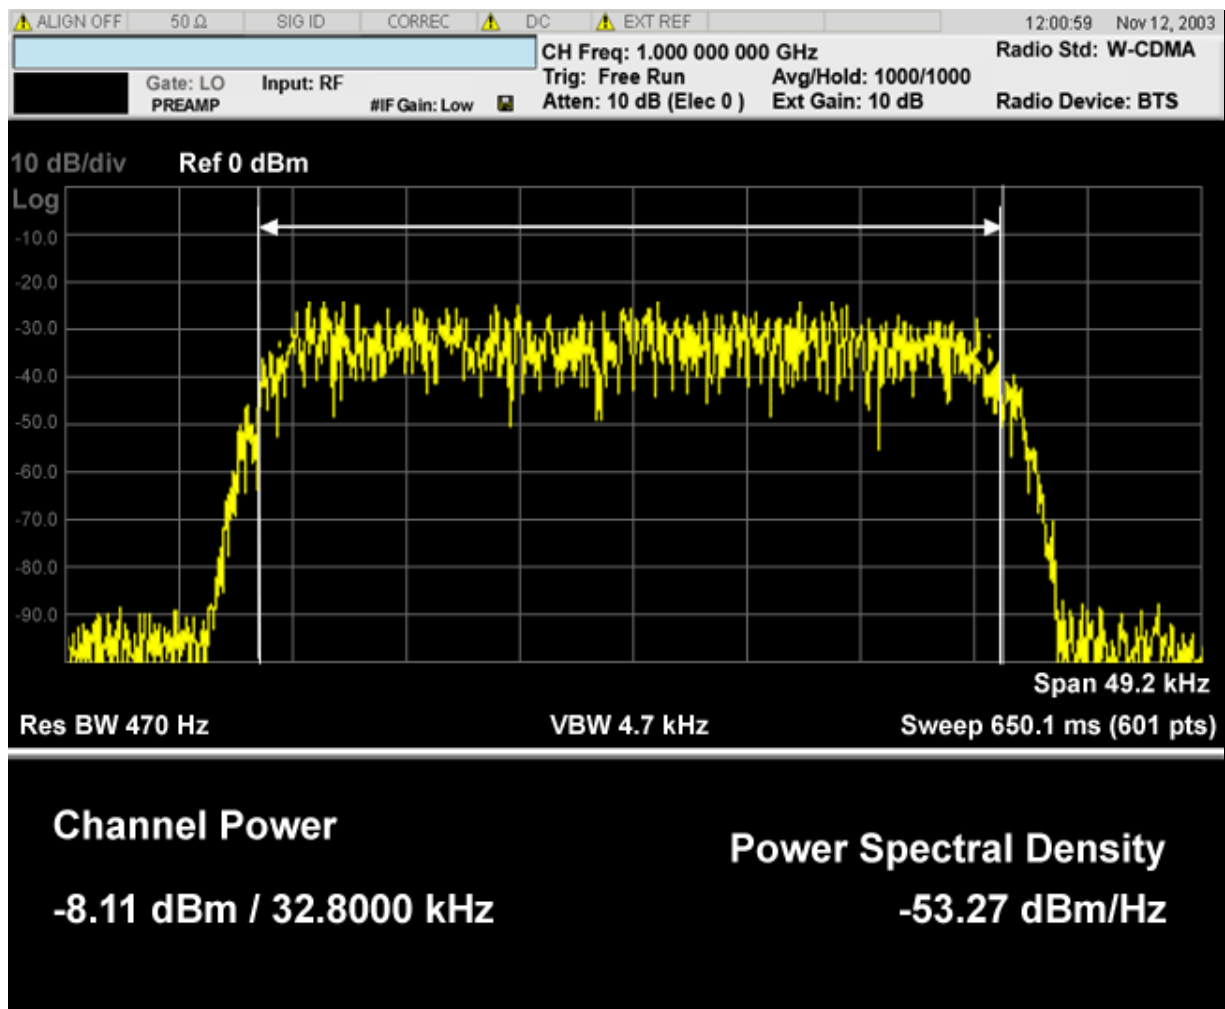


Spectrum View with Bar Graph on

This View is the same as the 'Spectrum' view, but has a blue bar between the markers that indicates the measured output power level. The bar graph is activated when the "Bar Graph" Soft Key is set to ON under the View/Display menu. The actual measured output power level is displayed on the display at the

Channel Power Measurement View/Display

bottom of the bar.

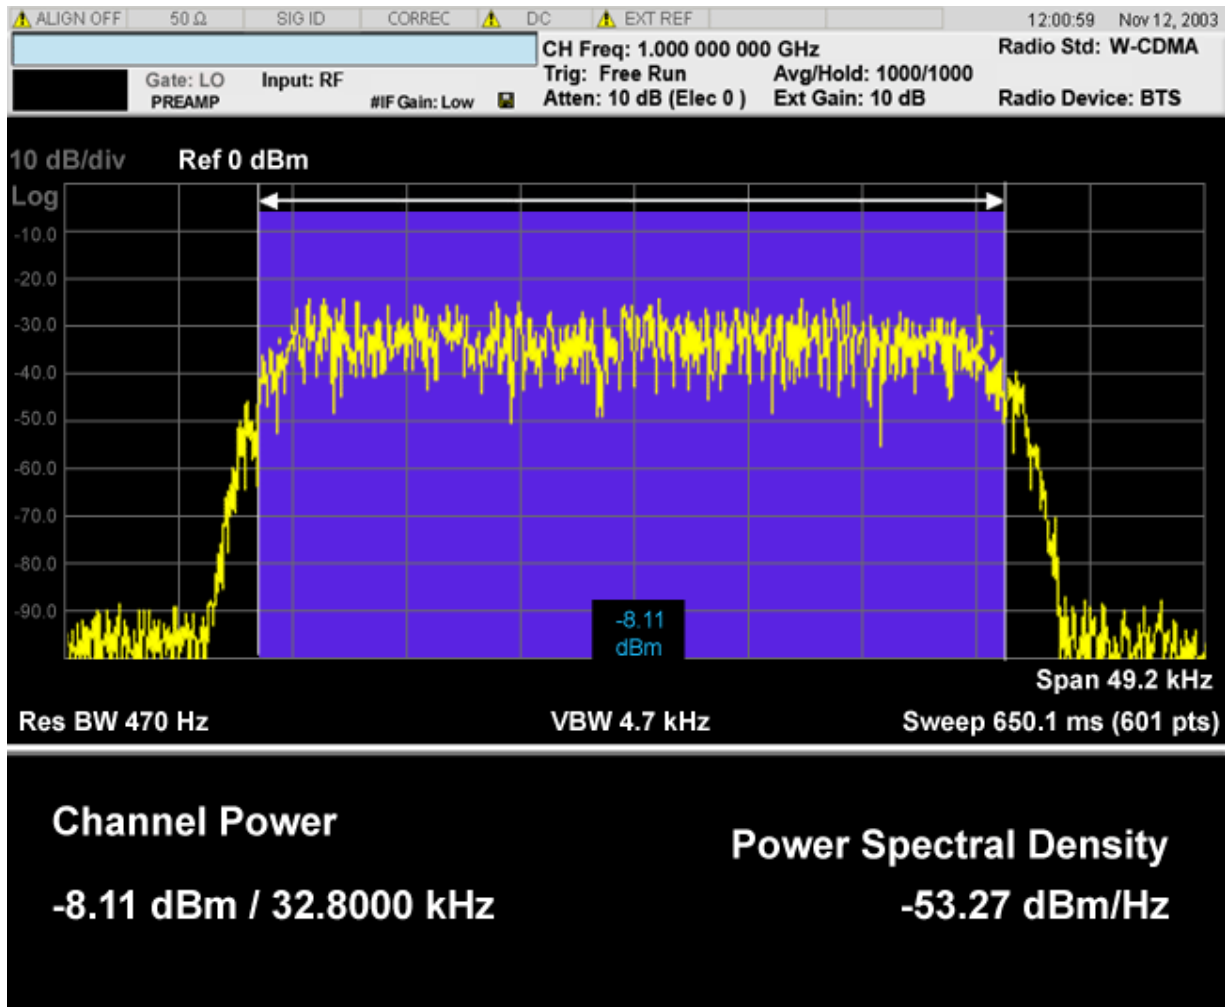

| | |
|-------------------------|------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Display

Accesses a menu of functions that enable you to set the display parameters.

See “Display” on page 1273 in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

Bar Graph

Turns the Bar Graph On and Off.

| | |
|-------------------------|---|
| Key Path | View/Display |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | :DISPlay:CHPower:VIEW[1]:WINDow[1]:BGRaph ON OFF 1 0 :DISPlay:CHPower:VIEW[1]:WINDow[1]:BGRaph? |
| Example | DISP:CHP:VIEW:WIND:BGR ON DISP:CHP:VIEW:WIND:BGR? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Channel Power Measurement
View/Display

ACP is a measurement of the amount of interference, or power, in an adjacent frequency channel. The results are displayed as a bar graph or as spectrum data, with measurement data at specified offsets. For measurement results and views, see [“View/Display” on page 426](#).

This topic contains the following sections:

[“Measurement Commands for ACP” on page 345](#)

[“Remote Command Results for ACP Measurement” on page 345](#)

Measurement Commands for ACP

The following commands are used to retrieve the measurement results:

:CONFigure:ACP

:CONFigure:ACP:NDEFault

:INITiate:ACP

:FETCh:ACP [n] ?

:READ:ACP [n] ?

:MEASure:ACP [n] ?

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1115](#).

Remote Command Results for ACP Measurement

| Condition | N | Results Returned |
|--|----------------------|--|
| Mode = SA mode, Radio Std = None, Number of carriers = 1 and only offset A is on | Not specified or n=1 | Returns 3 comma-separated values that correspond to: Reference carrier power, lower-adjacent channel power (dBc), and upper-adjacent channel power (dBc). |

ACP Measurement

| | | |
|---|-------------------------|--|
| Meas Type = Total power reference | Not specified or n=1 | Returns 28 comma-separated scalar results, in the following order. <ol style="list-style-type: none">1. 0.02. Total carrier power (dBm)3. 0.04. Reference carrier power (dBm)5. Lower offset A - relative power (dB)6. Lower offset A - absolute power (dBm)7. Upper offset A - relative power (dB)8. Upper offset A - absolute power (dBm)9. Lower offset B - relative power (dB)10. Lower offset B - absolute power (dBm)11. Upper offset B - relative power (dB)12. Upper offset B - absolute power (dBm)...25. Lower offset F - relative power (dB)26. Lower offset F - absolute power (dBm)27. Upper offset F - relative power (dB)28. Upper offset F - absolute power (dBm) If the results are not available, -999.0 is returned. |
|---|-------------------------|--|

| | | |
|---|-------------------------|---|
| Meas Type = Power spectral density reference | not specified or n=1 | <p>Returns 28 comma-separated scalar results, in the following order.</p> <ol style="list-style-type: none"> 1. 0.0 2. Total carrier power (dBm/Hz or dBm/MHz) 3. 0.0 4. Reference carrier power (dBm/Hz or dBm/MHz) 5. Lower offset A - relative power (dB) 6. Lower offset A - absolute power (dBm/Hz or dBm/MHz) 7. Upper offset A - relative power (dB) 8. Upper offset A - absolute power (dBm/Hz or dBm/MHz) 9. Lower offset B - relative power (dB) 10. Lower offset B - absolute power (dBm/Hz or dBm/MHz) 11. Upper offset B - relative power (dB) 12. Upper offset B - absolute power (dBm/Hz or dBm/MHz) ... 25. Lower offset F - relative power (dB) 26. Lower offset F - absolute power (dBm/Hz or dBm/MHz) 27. Upper offset F - relative power (dB) 28. Upper offset F - absolute power (dBm/Hz or dBm/MHz) <p>If the results are not available, -999.0 is returned.</p> |
| Meas Method = FAST | not specified or n=1 | <p>Returns 5 comma-separated results, in the following order:</p> <ol style="list-style-type: none"> 1. Reference carrier - absolute power (dBm) 2. Lower offset A - absolute power (dBm) 3. Upper offset A - absolute power (dBm) 4. Lower offset B - absolute power (dBm) 5. Upper offset B - absolute power (dBm) |

Meas Type = 2
Total power
reference

Returns 48 scalar results, in the following order:

1. Channel (1) - relative power (dB)
2. Channel (1) - absolute power (dBm)
3. Channel (2) - relative power (dB)
4. Channel (2) - absolute power (dBm)
- ...
23. Channel (12) - relative power (dB)
24. Channel (12) - absolute power (dBm)
25. Lower offset A - relative power (dB)
26. Lower offset A - absolute power (dBm)
27. Upper offset A - relative power (dB)
28. Upper offset A - absolute power (dBm)
29. Lower offset B - relative power (dB)
30. Lower offset B - absolute power (dBm)
31. Upper offset B - relative power (dB)
32. Upper offset B - absolute power (dBm)
- ...
45. Lower offset F - relative power (dB)
46. Lower offset F - absolute power (dBm)
47. Upper offset F - relative power (dB)
48. Upper offset F - absolute power (dBm)

If the results are not available, -999.0 is returned.

Meas Type = 2
Power spectral
density
reference

Returns 48 scalar results, in the following order:

1. Channel (1) - relative power (dB)
2. Channel (1) - absolute power (dBm/Hz or dBm/MHz)
3. Channel (2) - relative power (dB)
4. Channel (2) - absolute power (dBm/Hz or dBm/MHz)
- ...
23. Channel (12) - relative power (dB)
24. Channel (12) - absolute power (dBm/Hz or dBm/MHz)
25. Lower offset A - relative power (dB)
26. Lower offset A - absolute power (dBm/Hz or dBm/MHz)
27. Upper offset A - relative power (dB)
28. Upper offset A - absolute power (dBm/Hz or dBm/MHz)
29. Lower offset B - relative power (dB)
30. Lower offset B - absolute power (dBm/Hz or dBm/MHz)
31. Upper offset B - relative power (dB)
32. Upper offset B - absolute power (dBm/Hz or dBm/MHz)
- ...
45. Lower offset F - relative power (dB)
46. Lower offset F - absolute power (dBm/Hz or dBm/MHz)
47. Upper offset F - relative power (dB)
48. Upper offset F - absolute power (dBm/Hz or dBm/MHz)

If the results are not available, -999.0 is returned.

ACP Measurement

| | | |
|---|---|--|
| Meas Type = Total power reference | 3 | Returns 24 scalar values of the pass/fail (0 = passed, or 1 = failed) determined by testing the relative to the reference carrier and by testing the absolute power limit of the offset frequencies (measured as total power in dB): 1. Lower offset A - relative limit result 2. Lower offset A - absolute limit result 3. Upper offset A - relative limit result 4. Upper offset A - absolute limit result 5. Lower offset B - relative limit result 6. Lower offset B - absolute limit result 7. Upper offset B - relative limit result 8. Upper offset B - absolute limit result ... 21 Lower offset F - relative limit result 22 Lower offset F - absolute limit result 23 Upper offset F - relative limit result 24 Upper offset F - absolute limit result |
| Meas Type = Power spectral density reference | 3 | Returns 24 scalar values of the pass/fail (0 = passed, or 1 = failed) determined by testing the relative to the reference carrier and by testing the absolute power limit of the offset frequencies (measured as power spectral density in dB): 1. Lower offset A - relative limit result 2. Lower offset A - absolute limit result 3. Upper offset A - relative limit result 4. Upper offset A - absolute limit result 5. Lower offset B - relative limit result 6. Lower offset B - absolute limit result 7. Upper offset B - relative limit result 8. Upper offset B - absolute limit result ... 21 Lower offset F - relative limit result 22 Lower offset F - absolute limit result 23 Upper offset F - relative limit result 24 Upper offset F - absolute limit result |
| | 4 | Returns <Num Pts> comma-separated scalar values representing the Y values in Trace 1 |

- 5 Returns <Num Pts> comma-separated scalar values representing the Y values in Trace 2
- 6 Returns <Num Pts> comma-separated scalar values representing the Y values in Trace 3

Key Path

Front-panel key

Instrument S/W Revision

A.01.60 or later

AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. The parameter values are measurement independent, except all Attenuation values and the Internal Preamp selections, which are the same across all measurements.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Ref Value

Sets the value for the absolute power reference. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV el <real> :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV el? |
| Example | DISP:ACP:VIEW:WIND:TRAC:Y:RLEV 100 DISP:ACP:VIEW:WIND:TRAC:Y:RLEV? |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off. |
| Preset | All Except CDMA1xEVDO:10.00 dBm CDMA1xEVDO: -10dBm |
| State Saved | Saved in instrument state. |
| Min | -250.00 dBm |
| Max | 250.00 dBm |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | UP/DOWN Parameters supported. Step value is same as Scale/Div |
| Instrument S/W Revision | A.01.60 or later |

Attenuation

Accesses a menu of functions that enable you to change attenuation settings. This key has read-back text that describes the total attenuator value.

See AMPTD Y Scale, “Attenuation” on page 1037 in the “Common Measurement Functions” section for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div

Sets the units-per-division of the vertical scale in the logarithmic display. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision <rel_ampl> :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision? |
| Example | DISP:ACP:VIEW:WIND:TRAC:Y:PDIV 5 DISP:ACP:VIEW:WIND:TRAC:Y:PDIV? |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SELect to set the mode. |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off. |
| Preset | 10.00 dB |
| State Saved | Saved in instrument state. |
| Min | 0.10 dB |
| Max | 20.00 dB |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1, 2, 5, 10... |
| Instrument S/W Revision | A.01.60 or later |

Presel Center

See AMPTD Y Scale, “Presel Center” on page 1048 in the “Common Measurement Functions” section

for more information.

Presel Adjust

See AMPTD Y Scale, “[Preselector Adjust](#)” on page 1050 in the “Common Measurement Functions” section for more information.

Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See AMPTD Y Scale, “[Internal Preamp](#)” on page 1051 in the “Common Measurement Functions” section for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Ref Position

Positions the reference level at the top, center, or bottom of the Y- scale display. Changing the reference position does not change the reference level value.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISPlay:ACPpower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOSITION TOP CENTer BOTTom :DISPlay:ACPpower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOSITION? |
| Example | DISP:ACP:VIEW:WIND:TRAC:Y:RPOS CENT DISP:ACP:VIEW:WIND:TRAC:Y:RPOS? |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode. |
| Preset | TOP |
| State Saved | Saved in instrument state. |
| Range | Top Ctr Bot |
| Instrument S/W Revision | A.01.60 or later |

Auto Scaling

Toggles the Auto Scaling function between On and Off.

| | |
|----------|----------------------|
| Key Path | AMPTD Y Scale |
|----------|----------------------|

| | |
|-------------------------|--|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUP le 0 1 OFF ON :DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUP le? |
| Example | DISP:ACP:VIEW:WIND:TRAC:Y:COUP ON DISP:ACP:VIEW:WIND:TRAC:Y:COUP? |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode. |
| Dependencies/Couplings | When Auto Scaling is On and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off. |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Auto Couple

See “[AUTO COUPLE](#)” on page 1055 in the section "Common Measurement Functions" for more information.

BW

Accesses a menu of functions that enable you to specify and control the video and resolution bandwidths. You can also select the type of filter for the measurement and set the filter bandwidth.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Res BW

Sets the value of the resolution bandwidth. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

| | |
|------------------------|--|
| Key Path | BW |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | <pre>[:SENSe] :ACPower:BA NDwidth[:RESolution] <bandwidth> [:SENSe] :ACPower:BA NDwidth[:RESolution]? [:SENSe] :ACPower:BA NDwidth[:RESolution] :AUTO ON OFF 1 0 [:SENSe] :ACPower:BA NDwidth[:RESolution] :AUTO?</pre> |
| Example | <pre>ACP:BA ND 25kHz ACP:BA ND? ACP:BA ND:AUTO ON ACP:BA ND:AUTO?</pre> |
| Notes | <p>This key is available only in IBW mode.</p> <p>This parameter is preset by the Meas Method selection. Preset values are as follows:</p> <p>IBW: 100 kHz</p> <p>IBWR: 27 kHz</p> <p>FAST (WCDMA): 390 kHz</p> <p>You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SElect to set the mode.</p> |
| Dependencies/Couplings | The resolution bandwidth is coupled to the video bandwidth based on the video to resolution bandwidth ratio setting if AUTO is selected. |

ACP Measurement BW

| | |
|-------------------------|---|
| Preset | SA: 220 kHz WCDMA: 100 kHz WIMAX OFDMA: 100 kHz C2K: Method RBW: grayed out(1.2MHz) Method IBW: 15kHz TD-SCDMA: 30 kHz 1xEVDO: 30 kHz 0 |
| State Saved | Saved in instrument state. |
| Min | 1 Hz |
| Max | 8 MHz |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | See GPSA PD for details. |
| Instrument S/W Revision | A.01.60 or later |

Video BW

Changes the analyzer post-detection filter (VBW).

| | |
|-----------------------|--|
| Key Path | BW |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | <code>[:SENSE] :ACPower: BANDwidth: VIDEO <freq></code> <code>[:SENSE] :ACPower: BANDwidth: VIDEO?</code> <code>[:SENSE] :ACPower: BANDwidth: VIDEO: AUTO OFF ON 0 1</code> <code>[:SENSE] :ACPower: BANDwidth: VIDEO: AUTO?</code> |
| Example | ACP: BAND: VID 1kHz ACP: BAND: VID? ACP: BWID: VID: AUTO ON ACP: BWID: VID: AUTO? |
| Notes | The values shown in this table reflect the conditions after a Mode Preset. |

| | |
|-------------------------|---|
| Preset | SA: 22 kHz WCDMA, WIMAX OFDMA: 1MHz C2K: Method RBW: grayed out(1.2MHz) Method IBW: 150 kHz TD-SCDMA: 300 kHz 1xEVDO: 300kHz SA: ON WCDMA:OFF WIMAX OFDMA: OFF TD-SCDMA: OFF CDMA1xEVDO: OFF |
| State Saved | Saved in instrument state. |
| Min | 1 Hz |
| Max | 50 MHz |
| Test UP/DOWN | 1, 3, 10... |
| Instrument S/W Revision | A.01.60 or later |

RBW Control

Accesses a menu that enables you to select the filter bandwidth and type.

| | |
|-------------------------|------------------|
| Key Path | BW |
| Instrument S/W Revision | A.01.60 or later |

Filter Type

Selects the type of bandwidth filter that is used. The choices are Gaussian or Flat top.

| | |
|-----------------------|--|
| Key Path | BW, RBW Control |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :ACPower: BANDwidth: SHAPe GAUSSian FLATtop [:SENSE] :ACPower: BANDwidth: SHAPe? |
| Example | ACP: BAND: SHAP GAUS ACP: BAND: SHAP? |
| Preset | GAUSSian |
| State Saved | Saved in instrument state. |

ACP Measurement BW

| | |
|-------------------------|---------------------------|
| Range | Gaussian (Normal) Flattop |
| Instrument S/W Revision | A.01.60 or later |

Filter BW

Selects a Gaussian filter based on its -3 dB (Normal) bandwidth or its -6 dB bandwidth.

| | |
|-------------------------|--|
| Key Path | BW, RBW Control |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | <code>[:SENSe] :ACPower:BAWdth:TYPE DB3 DB6</code> <code>[:SENSe] :ACPower:BAWdth:TYPE?</code> |
| Example | ACP:BAW:TYPE DB3 ACP:BAW:TYPE? |
| Dependencies/Couplings | Grayed out when Meas Method is RBW. |
| Preset | DB3 |
| State Saved | Saved in instrument state. |
| Range | -3 dB (Normal) -6 dB |
| Instrument S/W Revision | A.01.60 or later |

Cont

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1063 in the section "Common Measurement Functions" for more information.

FREQ Channel

See “[FREQ/Channel](#)” on page 1059 in the section "Common Measurement Functions" for more information.

Input/Output

See “[Input/Output](#)” on page 1065 in the section “Common Measurement Functions” for more information.

Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Marker Type

Sets the marker control mode to **Normal**, **Delta**, **Fixed** or **Off**. All interactions and dependencies detailed under the key description are enforced when the remote command is sent. If the selected marker is **Off**, pressing **Marker** sets it to **Normal** and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **Off**, there is no active function and the active function is turned off.

| | |
|-----------------------|---|
| Key Path | Marker |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M ODE POSition DELTa OFF :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M ODE? |
| Example | CALC:ACP:MARK2:MODE DELT CALC:ACP:MARK2:MODE? |
| Notes | If the selected marker is Off , pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X Axis Value appears on the Active Function area. Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off , there is no active function and the active function is turned off. Active Function Display: the marker X axis value entered in the active function area will display the marker value to its full entered precision. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELect to set the mode. |

| | |
|-------------------------|---|
| Preset | OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF |
| State Saved | Saved in instrument state. |
| Range | Normal Delta Off |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Value (Remote Command only)

Sets the marker X axis value in the current marker X Axis Scale unit. This value has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal**, **Delta** or **Fixed**.

| | |
|-------------------------|--|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X <freq> :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X ? |
| Example | CALC:ACP:MARK3:X 0 CALC:ACP:MARK3:X? |
| Notes | The query returns the marker's absolute X Axis value if the control mode is Normal , or the offset from the marker's reference marker if the control mode is Delta . If the marker is Off the response is not a number. |
| Preset | After a preset, all Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN). |
| State Saved | No |
| MIN/MAX/DEF Support | Yes |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | Not tested in SCPI test |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal**, **Delta** or **Fixed**. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

| | |
|------|---|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
|------|---|

ACP Measurement Marker

| | |
|-------------------------|--|
| Remote Command | :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition <real> :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition? |
| Example | CALC:ACP:MARK10:X:POS 0 CALC:ACP:MARK10:X:POS? |
| Notes | The query returns the marker's absolute X Axis value in trace points if the control mode is Normal , or the offset from the marker's reference marker in trace points if the control mode is Delta . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points (see "Fractional Trace Points"). If the marker is Off the response is not a number. When a Marker is turned on, it is placed center of the screen on the trace. Therefore the default value depends on instrument condition, although the Preset/Default is defined as 500 (this value might be expected value when all offset is on). |
| Preset | After a preset, all Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN). |
| State Saved | No |
| MIN/MAX/DEF Support | Yes |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | Not tested in SCPI test |
| Instrument S/W Revision | A.01.60 or later |

Marker Y Axis Value (Remote Command only)

Returns the marker Y axis value in the current marker Y axis unit.

| | |
|-----------------------|--|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :Y ? |
| Example | CALC:ACP:MARK11:Y? |
| Notes | Since the result value is always calculated from acquisition data, the default value is arbitrary. Although the Preset/Default values are defined. |
| Preset | Result dependent on markers setup and signal source. |
| State Saved | No |
| Test MIN/MAX/DEF | No |

Instrument S/W Revision A.01.60 or later

Properties

Accesses the marker properties menu.

Key Path **Marker**
Instrument S/W Revision A.01.60 or later

Select Marker

Displays 12 markers available for selection.

Key Path **Marker**
Instrument S/W Revision A.01.60 or later

Relative To

Selects the desired marker. The selected marker will be relative to its reference marker.

| | |
|-----------------------|--|
| Key Path | Marker, Properties |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R EFerence <integer> :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R EFerence? |
| Example | CALC:ACP:MARK2:REF 6 CALC:ACP:MARK2:REF? |
| Notes | A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error –221: “Settings conflict; marker cannot be relative to itself.” When queried a single value will be returned (the specified marker numbers relative marker). You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | 2 3 4 5 6 7 8 9 10 11 12 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 12 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1 |

ACP Measurement Marker

Instrument S/W Revision A.01.60 or later

Marker Trace

Selects the trace that you want your marker to be placed on. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X Axis Scale of the marker. All markers have an associated trace, even **Fixed** markers; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become Normal or Delta markers.

| | |
|-------------------------|--|
| Key Path | Marker, Properties |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :T RACe 1 2 3 :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :T RACe? |
| Example | CALC:ACP:MARK2:TRAC 2 CALC:ACP:MARK2:TRAC? |
| Notes | If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X Axis Value appears on the Active Function area. Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off. Active Function Display: the marker X axis value entered in the active function area will display the marker value to its full entered precision. |
| Dependencies/Couplings | This is not affected by Auto Coupling. Sending the remote command causes the addressed marker to become selected. |
| Preset | All Markers Off |
| State Saved | Saved in instrument state. |
| Range | 1 2 3 |
| Instrument S/W Revision | A.01.60 or later |

Couple Markers

When this function is On, moving any marker causes an equal X axis movement of every other marker which is not **Off**. By "equal X axis movement" we mean that we preserve the difference between each marker's X axis value (in the fundamental x-axis units of the trace that marker is on) and the X axis value of the marker being moved (in the same fundamental x-axis units).

| | |
|----------|---------------|
| Key Path | Marker |
|----------|---------------|

| | |
|-------------------------|--|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:ACPower:MARKer:COUPle[:STATe] ON OFF 1 0 :CALCulate:ACPower:MARKer:COUPle[:STATe]? |
| Example | CALC:ACP:MARK:COUP ON |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Marker All Off

Turns all active markers off.

| | |
|-------------------------|---|
| Key Path | Marker |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:ACPower:MARKer:AOFF |
| Example | CALC:ACP:MARK:AOFF |
| Instrument S/W Revision | A.01.60 or later |

Marker Function

There are no 'Marker Functions' supported in ACP. The front-panel key will display a blank menu key when pressed.

| Key Path | Front Panel |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Marker To

There is no 'Marker To' functionality supported in ACP. The front-panel key will display a blank menu key when pressed.

| Key Path | Front Panel |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Meas

See “[Meas](#)” on page 1115 in the section "Common Measurement Functions" for more information.

Meas Setup

Displays the setup menu for the currently selected measurement. The functions included in the measurement setup menu include setting the parameters for the carriers, offsets, bandwidths, measurement methods and types. This menu also allows you to turn noise correction on and off.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Average/Hold Number

Specifies the number of measurement averages used to calculate the measurement result. The average will be displayed at the end of each sweep. After the specified number of average counts, the average mode (termination control) setting determines the average action.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :ACPower:AVERage:COUNT <integer> [:SENSE] :ACPower:AVERage:COUNT? [:SENSE] :ACPower:AVERage[:STATe] OFF ON 0 1 [:SENSE] :ACPower:AVERage[:STATe]? |
| Example | ACP:AVER:COUN 250 ACP:AVER:COUN? ACP:AVER OFF ACP:AVER? |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | 10 ON |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 1000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 10 |
| Instrument S/W Revision | A.01.60 or later |

Avg Mode

Enables you to set the averaging mode. This determines the averaging action after the specified number of data acquisitions (average count) is reached.

When set to Exponential (Exp) the measurement averaging continues using the specified number of averages to compute each averaged value. The average will be displayed at the end of each sweep.

When set to Repeat, the measurement resets the average counter each time the specified number of averages is reached.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe] :ACPower:AVERage:TCONtrol EXPonential REPEAT [:SENSe] :ACPower:AVERage:TCONtrol? |
| Example | ACP:AVER:TCON EXP ACP:AVER:TCON? |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode. |
| Preset | EXPonential |
| State Saved | Saved in instrument state. |
| Range | Exp Repeat |
| Instrument S/W Revision | A.01.60 or later |

Carrier Setup

Accesses a menu that contains Carriers, Ref Carrier, Ref Car Freq, Ref Car Pwr and Configure Carriers.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

Carriers

Specifies the number of carriers to be measured.

| | |
|-----------------------|---|
| Key Path | Meas Setup, Carrier Setup, Configure Carriers |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, TD-SCDMA |
| Remote Command | [:SENSe] :ACPower:CARRier [1] 2:COUNT <integer> [:SENSe] :ACPower:CARRier [1] 2:COUNT? |
| Example | ACP:CARR:COUN 1 ACP:CARR:COUN? |

| | |
|------------------------|--|
| Notes | Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | When Number of Carriers is 1, Ref Carrier is grayed out. Changing this parameter might affect to the Span.. |
| Preset | 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 12 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1 |

Ref Carrier

Sets the reference carrier. Relative power measurements are made from the reference carrier.

If set to Auto, the measurement selects the carrier with the highest power as the reference carrier and the Ref Carrier parameter is updated. If a value is entered when Ref Carrier Mode is set to Auto, the mode changes to Man.

If set to Man, the value that you enter for the Ref Carrier is used as the reference carrier.

| | |
|------------------------|---|
| Key Path | Meas Setup, Carrier Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, TD-SCDMA |
| Remote Command | [:SENSe] :ACPower:CARRier [1] 2:RCARrier <integer> [:SENSe] :ACPower:CARRier [1] 2:RCARrier? [:SENSe] :ACPower:CARRier [1] 2:RCARrier:AUTO OFF ON 0 1 [:SENSe] :ACPower:CARRier [1] 2:RCARrier:AUTO? |
| Example | ACP:CARR:RCAR 1 ACP:CARR:RCAR? ACP:CARR:RCAR:AUTO OFF ACP:CARR:RCAR:AUTO? |
| Notes | Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | If there is only one carrier, this key will be grayed out. If you enter a carrier value that is currently configured as having no power present, that carrier will be changed to having power present. If you enter a ref carrier this parameter will be set to manual. |

ACP Measurement Meas Setup

| | |
|-------------------------|------------------------------|
| Preset | Auto determined |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | Number of available carriers |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | 1 |
| Instrument S/W Revision | A.01.60 or later |

Ref Car Freq

Sets the reference carrier frequency.

| | |
|-----------------------|--|
| Key Path | Meas Setup, Carrier Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, TD-SCDMA |
| Remote Command | <code>[:SENSe] :ACPpower:CARRier [1] 2:RCFRrequency <freq></code> <code>[:SENSe] :ACPpower:CARRier [1] 2:RCFRrequency?</code> <code>[:SENSe] :ACPpower:CARRier [1] 2:RCFRrequency:AUTO</code> <code>OFF ON 0 1</code> <code>[:SENSe] :ACPpower:CARRier [1] 2:RCFRrequency:AUTO?</code> |
| Example | ACP:CARR:RCFR 250 MHz ACP:CARR:RCFR? ACP:CARR:RCFR:AUTO OFF ACP:CARR:RCFR:AUTO? |
| Notes | Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |

| | |
|-------------------------|---|
| Dependencies/Couplings | <p>Coupled to the Center Frequency.</p> <p>If the center frequency changes, the Ref Carrier Frequency is calculated using the following three steps;</p> $\text{Ref Freq1} = \text{Ctr Freq} - (\text{Total of all Carrier Widths} / 2)$ $\text{Ref Freq2} = \text{Ref Freq1} + (\text{Total of all Carrier Widths up to Ref Carrier})$ $\text{Ref Freq} = \text{Ref Freq2} + (0.5 * \text{Carrier Width of Ref Carrier})$ <p>If reference carrier frequency changes the Center Frequency is calculated using the following three steps;</p> $\text{Ctr Freq1} = \text{Ref Freq} - (0.5 * \text{Carrier Width of Ref Carrier})$ $\text{Ctr Freq2} = \text{Ctr Freq1} - (\text{Total of all Carrier Widths up to Ref Carrier})$ $\text{Ctr Freq} = \text{Ctr Freq2} + (\text{Total of all Carrier Widths} / 2)$ <p>This ensures that the carriers are always centered on the screen.</p> <p>If there is only one carrier present the Reference Carrier Frequency will be the same as the Center Frequency.</p> |
| Preset | Calculated based on the current Center Frequency |
| State Saved | Saved in instrument state. |
| Min | -79.999995 MHz |
| Max | <p>Hardware Dependent:</p> <p>Option 503 = 3.699999995 GHz</p> <p>Option 508 = 8.499999995 GHz</p> <p>Option 513 = 13.799999995 GHz</p> <p>Option 526 = 26.999999995 GHz</p> |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Same as CF Step |
| Instrument S/W Revision | A.01.60 or later |

Power Ref

Sets the multi-carrier power reference.

When set to Auto, the carrier power result reflects the measured power value in the selected reference carrier.

When set to Man, the result is referenced to the last measured value, or you may specify the reference for the multi-carrier power measurement. Relative values are displayed, referenced to the "Power Reference" value.

| | |
|----------|---------------------------------------|
| Key Path | Meas Setup, Carrier Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA |

ACP Measurement Meas Setup

| | |
|-------------------------|---|
| Remote Command | [:SENSe]:ACPower:CARRier [1] 2[:POWer] <real> [:SENSe]:ACPower:CARRier [1] 2[:POWer] ? [:SENSe]:ACPower:CARRier [1] 2:AUTO[:STATe] OFF ON 0 1 [:SENSe]:ACPower:CARRier [1] 2:AUTO[:STATe] ? |
| Example | ACP:CARR 10 ACP:CARR? ACP:CARR:AUTO OFF ACP:CARR:AUTO? |
| Notes | Although the default value is defined, the value is recalculated by the measurement result just after measurement. Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. This key is available only when the Meas Type is TPRef. |
| Dependencies/Couplings | See Notes |
| Preset | 0.0 ON |
| State Saved | Saved in instrument state. |
| Min | -200 dBm |
| Max | 200 dBm |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Same as current Scale/Div |
| Instrument S/W Revision | A.01.60 or later |

PSD Ref

Sets the power spectral density in the carrier (main channel) that is used to compute the relative power spectral density values for the offsets when Meas Type is set to PSD Ref. When the PSD Ref state is set to Auto, this will be set to the measured carrier power spectral density.

| | |
|-----------------------|---|
| Key Path | Meas Setup, Carrier Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA |
| Remote Command | [:SENSe]:ACPower:CARRier [1] 2:CPSD <real> [:SENSe]:ACPower:CARRier [1] 2:CPSD ? |
| Example | ACP:CARR:CPSD 25 ACP:CARR:CPSD ? |

| | |
|-------------------------|--|
| Notes | Although the default value is defined, the value is recalculated by the measurement result just after measurement. Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS. You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SElect to set the mode. |
| Dependencies/Couplings | This key is available only when the Meas Type is PSDRef. The value of PSD Ref is automatically converted when PSD Unit is changed. |
| Preset | 0.0 |
| State Saved | Saved in instrument state. |
| Min | -999 |
| Max | 999 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Scale/Div |
| Instrument S/W Revision | A.01.60 or later |

Configure Carriers

Accesses a menu that contains Carrier, Carrier Pwr Present, Carrier Width and Carrier Integ BW parameters.

| | |
|-------------------------|----------------------------------|
| Key Path | Meas Setup, Carrier Setup |
| Instrument S/W Revision | A.01.60 or later |

Carrier Selects the carrier to configure for the current measurement.

| | |
|-------------------------|---|
| Key Path | Meas Setup, Carrier Setup, Configure Carriers |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, TD-SCDMA |
| Dependencies/Couplings | Max value is the number of available carriers, so this value might change when the number of carriers is changed. |
| Preset | 1 |
| State Saved | No |
| Min | 1 |
| Max | Number of available carriers |
| Instrument S/W Revision | A.01.60 or later |

Carrier Coupling Couples carrier settings to carrier #1. The coupled parameters are Carrier Power Present,

ACP Measurement Meas Setup

Carrier Spacing, Measurement Noise Bandwidth, Method and Filter Alpha.

| | |
|-------------------------|--|
| Key Path | Meas Setup, Carrier Setup, Configure Carriers |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, TD-SCDMA |
| Remote Command | [:SENSE] :ACPpower:CARRier [1] 2:LIST:COUPLE OFF ON 0 1, ... [:SENSE] :ACPpower:CARRier [1] 2:LIST:COUPLE? |
| Example | ACP:CARR:LIST:COUP OFF ACP:CARR:LIST:COUP? |
| Notes | Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS. You must be in the mode that includes ACP measurements to use this command. Use :INSTRUMENT:SELEct to set the mode. |
| Dependencies/Couplings | When Couple is selected, the carrier settings are coupled to carrier #1. Coupled parameters are Carrier Power Present, Carrier Spacing, Measurement Noise Bandwidth, Method and Filter Alpha. When a setting is changed, the couple is set to Man automatically. Carrier #1 is always set to couple and cannot be changed. Couple/Man selection on the Carrier key is not displayed when selected carrier number is #1. |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | Couple Man |
| Instrument S/W Revision | A.01.60 or later |

Carrier Pwr Present Configures the carriers for this measurement. It allows spaces to be inserted between carriers. Carriers with the power present parameter set to Yes are carriers, and those with the power present parameter set to No are spaces. Each carrier power present is set to Yes or No. The individual carriers can be set by selecting the desired carrier on the carrier menu key using the up down arrows, the knob, or numeric keypad, then toggling the carrier power present using the carrier power present menu key.

The query for this parameter returns the current values for all of the carriers. If a carrier is defined as having no power present, the power displayed will be relative to the reference carrier, otherwise the absolute power will be displayed.

If you change the carrier power present to no and that carrier is currently configured as the reference carrier, the next carrier to the left (or the right if there are no carriers to the left) will be assigned as the reference carrier. This also applies to the scenario where there are only two carriers configured as having power present and you configure only one carrier to have no power present.

| | |
|----------|--|
| Key Path | Meas Setup, Carrier Setup, Configure Carriers |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, TD-SCDMA |

| | |
|-------------------------|---|
| Remote Command | <code>[:SENSe] :ACPower:CARRier [1] 2 :LIST:PPResent YES NO, ...</code> <code>[:SENSe] :ACPower:CARRier [1] 2 :LIST:PPResent?</code> |
| Example | ACP:CARR2:LIST:PPR YES ACP:CARR2:LIST:PPR? |
| Notes | Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS. When setting these values remotely, the position in the list sent corresponds to the carrier. Missing values are not permitted, therefore if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values will be ignored. |
| Dependencies/Couplings | If there are only one or two carriers, this key will be greyed out as they both need to have power present. Coupled to the number of carriers. When the SCPI command is sent, the number of carriers will be set to the number of entries in the parameter list. |
| Preset | YES |
| State Saved | Saved in instrument state. |
| Range | Yes No |
| Instrument S/W Revision | A.01.60 or later |

Carrier Spacing Sets the width of the carrier spacing. This will be the value applied to all the current slots, whether they are carriers or spaces.

Enter each carrier spacing value individually by selecting the desired carrier on the carrier menu key using the up down arrows, the knob, or the numeric keypad, then enter the carrier width using the carrier spacing menu key.

| | |
|-----------------------|--|
| Key Path | Meas Setup, Carrier Setup, Configure Carriers |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, TD-SCDMA |
| Remote Command | <code>[:SENSe] :ACPower:CARRier [1] 2 :LIST:WIDTh <bandwidth>, ...</code> <code>[:SENSe] :ACPower:CARRier [1] 2 :LIST:WIDTh?</code> |
| Example | ACP:CARR2:LIST:WIDT 25kHz ACP:CARR2:LIST:WIDT? |
| Notes | Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS. When setting these values remotely, the position in the list sent corresponds to the carrier. Missing values are not permitted, therefore if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values will be ignored. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode. |

ACP Measurement Meas Setup

| | |
|-------------------------|---|
| Dependencies/Couplings | Coupled to the number of carriers. When the SCPI command is sent, the number of carriers will be set to the number of entries in the parameter list. Changing Carrier Spacing might affect the Span. |
| Preset | SA, WCDMA: 5 MHz WIMAX OFDMA: 10MHz C2K: 1.25MHz 1xEVDO: 1.25MHz TD-SCDMA: 1.6MHz |
| State Saved | Saved in instrument state. |
| Min | 0 Hz |
| Max | 1 GHz |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Not supported in Zorro-1. UP/DOWN Parameters supported. The series is: 1, 1.5, 2, 3, 5, 7.5, 10,... |
| Instrument S/W Revision | A.01.60 or later |

Measurement Noise Bandwidth Specifies the Measurement Noise Bandwidth used to calculate the power in the carriers.

Each Measurement Noise Bandwidth value is entered individually by selecting the desired carrier on the carrier menu key using the up down arrows, the knob, or the numeric keypad. Then enter the measurement noise bandwidth using the measurement noise bandwidth softkey.

| | |
|-----------------------|---|
| Key Path | Meas Setup, Carrier Setup, Configure Carriers |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe] :ACPower:CARRier [1] 2:LIST:BANDwidth[:INTegrati on] <freq>, ... [:SENSe] :ACPower:CARRier [1] 2:LIST:BANDwidth[:INTegrati on] ? |
| Example | ACP:CARR2:LIST:BAND 25kHz ACP:CARR2:LIST:BAND? |

| | |
|-------------------------|---|
| Notes | <p>In the WCDMA mode, the preset/default value is defined as 3.84 MHz. But internally, 4.6848 MHz is used as the default value.</p> <p>Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS.</p> <p>When setting these values remotely, the position in the list sent corresponds to the carrier. Missing values are not permitted, therefore if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values will be ignored.</p> <p>You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode.</p> |
| Dependencies/Couplings | Coupled to the number of carriers. When the SCPI command is sent, the number of carriers is set to the number of entries in the parameter list. |
| Preset | <p>SA: 2 MHz</p> <p>WCDMA: 3.84 MHz</p> <p>WIMAX OFDMA: 10MHz</p> <p>C2K: 1.23MHz</p> <p>TD-SCDMA: 1.28MHz</p> <p>1xEVDO: 1.23MHz</p> |
| State Saved | Saved in instrument state. |
| Min | 10 Hz |
| Max | 1 GHz |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | <p>Not supported in Zorro-1.</p> <p>UP/DOWN parameters supported.</p> <p>The series is: 1, 1.5, 2, 3, 5, 7.5, 10,...</p> |
| Instrument S/W Revision | A.01.60 or later |

Method Accesses the carrier configuration method settings.

| | |
|----------------|--|
| Key Path | Meas Setup, Carrier Setup, Configure Carriers |
| Mode | SA, WCDMA, TD-SCDMA |
| Remote Command | <pre>[:SENSe] :ACPower:CARRier [1] 2 :LIST:MEthod IBW RRC, ... [:SENSe] :ACPower:CARRier [1] 2 :LIST:MEthod?</pre> |
| Example | <pre>ACP:CARR2:LIST:MEth RRC ACP:CARR2:LIST:MEth?</pre> |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |

ACP Measurement Meas Setup

| | |
|-------------------------|--|
| Preset | SA: IBW WCDMA: RRC WIMAX OFDMA: IBW TD-SCDMA: RRC |
| State Saved | Saved in instrument state. |
| Range | IntegBW RRC Weight |
| Instrument S/W Revision | A.01.60 or later |

Filter Alpha Inputs the alpha value for the filter used in the current carrier configuration.

| | |
|-------------------------|--|
| Key Path | Meas Setup, Carrier Setup, Configure Carriers |
| Mode | SA, WCDMA, TD-SCDMA |
| Remote Command | [:SENSe] :ACPower:CARRier [1] 2:LIST:FILTer:ALPHa <real>, ... [:SENSe] :ACPower:CARRier [1] 2:LIST:FILTer:ALPHa? |
| Example | ACP:CARR2:LIST:FILT:ALPH 0.5 ACP:CARR2:LIST:FILT:ALPH? |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | 0.22 C2K: No |
| State Saved | Saved in instrument state. |
| Min | 0.01 |
| Max | 1.0 |
| Test UP/DOWN | Not supported in Zorro-1. 0.1 |
| Instrument S/W Revision | A.01.60 or later |

Offset/Limits

Accesses a menu of functions that contains Offset, Offset Freq/Offset To Edge, Offset Integ BW, Upper Offset Limit and Lower Offset parameters.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

Offset

Selects the offset to configure.

| | |
|-------------------------|---|
| Key Path | Meas Setup, Offset/Limit |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Preset | A |
| State Saved | Saved in instrument state. |
| Range | A B C D E F |
| Instrument S/W Revision | A.01.60 or later |

Offset Freq

This parameter determines the frequency difference between the center of the main channel and the center of the carrier.

Each Offset Freq state value is entered individually by selecting the desired carrier on the carrier menu key using the up down arrows, RPG or numeric keypad. Then enter the Offset Freq State using the Offset Frequency softkey.

The list contains up to six (6) entries, depending on the mode selected, for offset frequencies. Each offset frequency in the list corresponds to a reference bandwidth in the bandwidth list.

An offset frequency of zero turns the display of the measurement for that offset off, but the measurement is still made and reported. You can turn off (not use) specific offsets with the [:SENSe]:ACP:OFFSet:LIST:STATe command

Turning the offset off has the same effect as setting the frequency of the offset to 0 Hz and will cause it to be removed from the results screen.

| | |
|-----------------------|---|
| Key Path | Meas Setup, Offset/Limit |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | <pre>[:SENSe]:ACPower:OFFSet [1] 2:LIST[:FREQuency] <freq>, <freq>, <freq>, <freq>, <freq> [:SENSe]:ACPower:OFFSet [1] 2:LIST[:FREQuency]? [:SENSe]:ACPower:OFFSet [1] 2:LIST:STATe OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 [:SENSe]:ACPower:OFFSet [1] 2:LIST:STATe?</pre> |
| Example | <pre>ACP:OFFS1:LIST 0,0,0,0,0,0 ACP:OFFS1:LIST? ACP:OFFS2:LIST:STAT 1,1,0,0,0,0 ACP:OFFS2:LIST:STAT?</pre> |

ACP Measurement Meas Setup

| | |
|-------------------------|---|
| Notes | <p>The label for this menu key will change depending on the currently selected radio standard or mode. For cdma2000 the label for the menu key will be Offset to Edge. For all other supported standards the label will be Offset Freq.</p> <p>When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, unless the number of values sent is greater than the number of carriers, then subsequent values will be ignored.</p> <p>Offset sub op code. 1 for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode.</p> |
| Dependencies/Couplings | Changing Offset Frequency might affect the Span. See the Span key section for details. |
| Preset | <p>SA: 3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</p> <p>WCDMA: 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</p> <p>WIMAX OFDMA: 10MHz, 20MHz, 0Hz, 0Hz, 0Hz, 0Hz 10MHz, 20MHz, 0Hz, 0Hz, 0Hz, 0Hz</p> <p>C2K:765KHz, 1.995MHz, 0Hz, 0Hz, 0Hz, 0Hz 900KHz, 1.995MHz, 0Hz, 0Hz, 0Hz, 0Hz</p> <p>TD-SCDMA: 1.6 MHz, 3.2 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz 1.6 MHz, 3.2 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</p> <p>1xEVDO: 765KHz, 1.995MHz, 3.125MHz, 4.000MHz, 7.500MHz, 7.500MHz 765KHz, 1.995MHz, 3.125MHz, 4.000MHz, 7.500MHz, 7.500MHz</p> <p>SA: ON, OFF, OFF, OFF, OFF, OFF ON, OFF, OFF, OFF, OFF, OFF</p> <p>WCDMA: ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</p> <p>WIMAX OFDMA: ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</p> <p>TD-SCDMA: ON, ON, OFF, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</p> <p>CDMA1xEVDO: ON,ON,OFF,OFF,OFF,OFF ON,ON,OFF,OFF,OFF,OFF</p> |
| State Saved | Saved in instrument state. |
| Min | 0 Hz |
| Max | 500 MHz |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | Not supported in Zorro-1. |
| Instrument S/W Revision | A.01.60 or later |

Offset Integ BW

Sets the Integration Bandwidth for the offsets. If there is more than one bandwidth, the list must contain six (6) entries. Each resolution bandwidth in the list corresponds to an offset frequency in the list defined by [:SENSe]:ACP:OFFSet[n]:LIST[:FREQuency].

Enter each value individually by selecting the desired offset on the offset menu key using the up down arrows, the knob, or the numeric keypad, then enter the Offset Integration Bandwidth using the Offset Integration Bandwidth menu key.

You can turn off (not use) specific offsets with the [:SENSe]:ACP:OFFSet[n]:LIST:STATe command."

| | |
|------------------------|--|
| Key Path | Meas Setup, Offset/Limit |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe]:ACPower:OFFSet [1] 2:LIST:BANDwidth[:INTEgratio n] <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth> [:SENSe]:ACPower:OFFSet [1] 2:LIST:BANDwidth[:INTEgratio n] ? |
| Example | ACP:OFFS2:LIST:BAND 2MHz,2MHz,2MHz,2MHz,2MHz,2MHz ACP:OFFS2:LIST:BAND? |
| Notes | When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted i.e. if you want to change values 2 you must send all values up to 2. Subsequent values will remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values will be ignored. Offset sub op code. 1 for BTS, 2 for MS. Default is BTS. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | Changing Offset Integ BW might affect to the Span. See Span section for details. |
| Preset | SA: 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz WCDMA: 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz WIMAX OFDMA: 10MHz, 10MHz, 10MHz, 10MHz, 10MHz, 10MHz 10MHz, 10MHz, 10MHz, 10MHz, 10MHz, 10MHz C2K: 30KHz, 30KHz, 30KHz, 30KHz, 30KHz, 30KHz 30KHz, 30KHz, 30KHz, 30KHz, 30KHz, 30KHz TD-SCDMA: 1.28 MHz, 1.28 MHz, 1.28 MHz, 1.28 MHz, 1.28 MHz, 1.28 MHz 1xEVDO: C2K: 30KHz, 30KHz, 30KHz, 30KHz, 30KHz, 30KHz 30KHz, 30KHz, 30KHz, 30KHz, 30KHz, 30KHz |
| State Saved | Saved in instrument state. |
| Min | 10 Hz |
| Max | 1 GHz |
| Test MIN/MAX/DEF | MIN MAX |

ACP Measurement
Meas Setup

| | |
|-------------------------|---|
| Test UP/DOWN | Not supported in Zorro-1. UP/DOWN Parameters supported. The series is: 1, 1.5, 2, 3, 5, 7.5, 10,... |
| Instrument S/W Revision | A.01.60 or later |

Offset BW

Accesses the offset bandwidth menu.

| | |
|-------------------------|---------------------------------|
| Key Path | Meas Setup, Offset/Limit |
| Instrument S/W Revision | A.01.60 or later |

Res BW Sets the resolution bandwidth. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

| | |
|------------------------|---|
| Key Path | Meas Setup, Offset/Limits |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | <pre>[:SENSE] :ACPower:OFFSet [1] 2:LIST:BANDwidth:RESolution <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth> [:SENSE] :ACPower:OFFSet [1] 2:LIST:BANDwidth:RESolution? [:SENSE] :ACPower:OFFSet [1] 2:LIST:BANDwidth:RESolution: AUTO ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0 [:SENSE] :ACPower:OFFSet [1] 2:LIST:BANDwidth:RESolution: AUTO?</pre> |
| Example | <pre>ACP:OFFS2:LIST:BAND:RES 220kHz,220kHz,220kHz,220kHz,220kHz,220kHz ACP:OFFS2:LIST:BAND:RES? ACP:OFFS2:LIST:BAND:RES:AUTO 1,1,1,1,1,1 ACP:OFFS2:LIST:BAND:RES:AUTO?</pre> |
| Notes | <p>This key is available only in the IBW mode.</p> <p>Offset sub op code. 1 for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SELect to set the mode.</p> |
| Dependencies/Couplings | When Res BW Mode is AUTO, this value is exactly same as Res BW under BW key. And when this value is changed by user, Res BW Mode is also changed to Man. |

| | |
|-------------------------|--|
| Preset | SA: 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz WCDMA: 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz WIMAX OFDMA: 100KHz, 100KHz, 100KHz, 100KHz, 100KHz, 100KHz C2K: Method:RBW 30K Method: IBW C2K: 15KHz, 15KHz, 15KHz, 15KHz,15KHz, 15KHz 15KHz, 15KHz, 15KHz, 15KHz,15KHz, 15KHz TD-SCDMA: 30 kHz, 30 kHz, 30 kHz, 30 kHz, 30 kHz, 30 kHz 1xEVDO: 3KHz, 30KHz, 30KHz, 30KHz,30KHz, 30KHz 3KHz, 30KHz, 30KHz, 30KHz,30KHz, 30KHz 1, 1, 1, 1, 1, 1 |
| State Saved | Saved in instrument state. |
| Min | 1 Hz |
| Max | 8 MHz |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | Not supported in Zorro-1. |
| Instrument S/W Revision | A.01.60 or later |

Video BW Enables you to change the analyzer post-detection filter (VBW).

| | |
|-----------------------|---|
| Key Path | Meas Setup, Offset/Limit, Offset BW |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :ACPower:OFFSet [1] 2:LIST:BANDwidth:VIDeo <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSE] :ACPower:OFFSet [1] 2:LIST:BANDwidth:VIDeo? [:SENSE] :ACPower:OFFSet [1] 2:LIST:BANDwidth:VIDeo:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 [:SENSE] :ACPower:OFFSet [1] 2:LIST:BANDwidth:VIDeo:AUTO? |
| Example | ACP:OFFS2:LIST:BAND:VID 5MHz,5MHz,5MHz,5MHz,5MHz,5MHz ACP:OFFS2:LIST:BAND:VID? ACP:OFFS2:LIST:BAND:VID:AUTO 0,0,0,0,1,1 ACP:OFFS2:LIST:BAND:VID:AUTO? |

ACP Measurement Meas Setup

| | |
|-------------------------|--|
| Notes | The values shown in this table reflect the conditions after a Mode Preset. Offset sub op code. 1 for BTS, 2 for MS. Default is BTS. You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SELEct to set the mode. . |
| Preset | SA: 22kHz, 22kHz, 22kHz, 22kHz, 22kHz, 22kHz WCDMA, WIMAX OFDMA: 1MHz, 1MHz, 1MHz, 1MHz, 1MHz, 1MHz C2K: 150KHz, 150KHz, 150KHz, 150KHz, 150KHz, 150KHz 150KHz, 150KHz, 150KHz, 150KHz, 150KHz TD-SCDMA: 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz 1xEVDO: 30KHz, 300KHz, 300KHz, 300KHz, 300KHz, 300KHz 30KHz, 300KHz, 300KHz, 300KHz, 300KHz ON, ON, ON, ON, ON, ON |
| State Saved | Saved in instrument state. |
| Min | 1 Hz |
| Max | 50 MHz |
| Test MIN/MAX/DEF | MIN MAX |
| Instrument S/W Revision | A.01.60 or later |

RBW Control Accesses the resolution bandwidth control menu.

| | |
|-------------------------|--|
| Key Path | Meas Setup, Offset/Limit, Offset BW |
| Instrument S/W Revision | A.01.60 or later |

Filter Type Selects the type of bandwidth filter that is used.

| | |
|-----------------------|--|
| Key Path | Meas Setup, Offset/Limit, Offset BW, RBW Control |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :ACPpower:OFFSet [1] 2:LIST:BANDwidth:SHAPE GAUSSian FLATtop, GAUSSian FLATtop, GAUSSian FLATtop, GAUSSian FLATtop, GAUSSian FLATtop, GAUSSian FLATtop [:SENSE] :ACPpower:OFFSet [1] 2:LIST:BANDwidth:SHAPE? |
| Example | ACP:OFFS2:LIST:BAND:SHAP FLAT,GAUS,GAUS,GAUS,GAUS,GAUS ACP:OFFS2:LIST:BAND:SHAP? |
| Notes | Offset sub op code. 1 for BTS, 2 for MS. Default is BTS. You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SELEct to set the mode. |

| | |
|-------------------------|--|
| Dependencies/Couplings | See the description above |
| Preset | GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian |
| State Saved | Saved in instrument state. |
| Range | GAUSSian FLATtop |
| Instrument S/W Revision | A.01.60 or later |

Filter BW Selects a Gaussian filter based on its –3 dB (Normal) bandwidth or its –6 dB bandwidth.

| | |
|-------------------------|---|
| Key Path | Meas Setup, Offset/Limit, Offset BW, RBW Control |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :ACPower:OFFSet [1] 2 :LIST: BANDwidth: TYPE DB3 DB6, DB3 DB6, DB3 DB6, DB3 DB6, DB3 DB6, DB3 DB6 [:SENSE] :ACPower:OFFSet [1] 2 :LIST: BANDwidth: TYPE? |
| Example | ACP:OFFS2:LIST:BAND:TYPE DB3,DB3,DB3,DB3,DB3 ACP:OFFS2:LIST:BAND:TYPE? |
| Notes | Offset sub op code. 1 for BTS, 2 for MS. Default is BTS. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | Grayed out unless the Gaussian filter type is selected |
| Preset | DB3, DB3, DB3, DB3, DB3, DB3 |
| State Saved | Saved in instrument state. |
| Range | –3 dB (Normal) –6 dB |
| Instrument S/W Revision | A.01.60 or later |

Abs Limit

Enters an absolute limit value, which sets the absolute amplitude levels to test against for each of the custom offsets. The list must contain six (6) entries. If there is more than one offset, the offset closest to the carrier channel is the first one in the list. [:SENSE]:ACP:OFFSet[n]:LIST:TEST selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with the [:SENSE]:ACP:OFFSet[n]:LIST:STATe command.

The query returns the six (6) sets of real numbers that are the current absolute amplitude test limits.

| | |
|-----------------------|---|
| Key Path | Meas Setup, Offset/Limit |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :ACPower:OFFSet [1] 2 :LIST: ABSolute <real>, <real>, <real>, <real>, <real>, <real> [:SENSE] :ACPower:OFFSet [1] 2 :LIST: ABSolute? |

ACP Measurement Meas Setup

| | |
|-------------------------|---|
| Example | ACP:OFFS2:LIST:ABS -10,-10,-10,-10,-10,-10 ACP:OFFS2:LIST:ABS? |
| Notes | Offset sub op code. 1 for BTS, 2 for MS. Default is BTS. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode. |
| Preset | SA: 0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm 0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm WCDMA: 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm C2K: 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm WIMAX OFDMA: 50,50,50,50,50,50 TD-SCDMA: 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm 1xEVDO: -27dBm, -27dBm, -13dBm, -13dBm, -13dBm, -13dBm -27dBm, -27dBm, -13dBm, -13dBm, -13dBm, -13dBm |
| State Saved | Saved in instrument state. |
| Min | -200.0 dBm |
| Max | 50.0 dBm |
| Test MIN/MAX/DEF | MIN MAX |
| Instrument S/W Revision | A.01.60 or later |

Fail

Accesses a menu that enables you to select one of the logic keys for the fail conditions between the measurement results and the test limits. The setting defines the type of testing to be done at any custom offset frequencies. The measured powers are tested against the absolute values defined with [:SENSE]:ACP:OFFSet[n]:LIST:ABSolute, or the relative values defined with [:SENSE]:ACP:OFFSet:LIST:RPSDensity and [:SENSE]:ACP:OFFSet:LIST:RCARrier.

You can turn off (not use) specific offsets with the [:SENS]:ACP:OFFSet:LIST:STATe command.

- Absolute – Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit.
- Relative – Fail is shown if one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD).
- AND – Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit AND one of the relative ACPR measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD).
- OR – Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit OR one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or

Rel Lim (PSD).

| | |
|-------------------------|---|
| Key Path | Meas Setup, Offset/Limit |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe]:ACPower:OFFSet [1] 2:LIST:TEST ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative [:SENSe]:ACPower:OFFSet [1] 2:LIST:TEST? |
| Example | ACP:OFFS2:LIST:TEST ABS,ABS,ABS,ABS,ABS,ABS ACP:OFFS2:LIST:TEST? |
| Notes | Offset sub op code. 1 for BTS, 2 for MS. Default is BTS. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | SA, WCDMA, C2K, TD-SCDMA: REL, REL, REL, REL, REL, REL REL, REL, REL, REL, REL, REL WIMAX OFDMA: REL, REL, REL, REL, REL, REL CDMA1xEVDO: REL, REL, ABS, REL, REL, REL REL, REL, ABS, REL, REL, REL |
| State Saved | Saved in instrument state. |
| Range | AND OR Absolute Relative |
| Instrument S/W Revision | A.01.60 or later |

Rel Lim (Car)

Enters a relative limit value for the carrier level. This sets the amplitude levels to test against for the specified offsets. The

amplitude level is relative to the carrier amplitude. If multiple offsets are available, the list contains six (6) entries. The offset closest to the carrier channel is the first one in the list.

[:SENSe]:ACP:OFFSet:LIST:TEST selects the type of testing to be done at each offset.

[:SENSe]:ACP:OFFSet[n]:LIST[n]:TEST selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with the [:SENSe]:ACP:OFFSet[n]:LIST[n]:STATe command.

The query returns the six (6) sets of real numbers that are the current amplitude test limits, relative to the carrier, for each offset.

Offset[n] n=1 is base station and 2 is mobiles. The default is base station (1).

| | |
|----------|---|
| Key Path | Meas Setup, Offset/Limit |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |

ACP Measurement Meas Setup

| | |
|-------------------------|---|
| Remote Command | <code>[[:SENSe]:ACPower:OFFSet [1] 2:LIST:RCARrier <real>, <real>, <real>, <real>, <real></code> <code>[[:SENSe]:ACPower:OFFSet [1] 2:LIST:RCARrier?</code> |
| Example | <code>ACP:OFFS2:LIST:RCAR 0,0,0,0,0</code> <code>ACP:OFFS2:LIST:RCAR?</code> |
| Notes | <code>:CALCulate:ACPower:OFFSet[1] 2:LIST:LIMit:POSitive[:UPPer]:DATA</code> and <code>:CALCulate:ACPower:OFFSet[1] 2:LIST:LIMit:NEGative[:UPPer]:DATA</code> are expanded to support subop code. Offset sub op code. 1 for BTS, 2 for MS. Default is BTS. You must be in the mode that includes ACP measurements to use this command. Use <code>:INSTrument:SElect</code> to set the mode. |
| Dependencies/Couplings | None |
| Preset | <code>SA: -45, -60, 0, 0, 0, 0 -45, -60, 0, 0, 0, 0</code> <code>WCDMA: -44.2, -49.2, -49.2, -49.2, -49.2, -49.2 -32.2, -42.2, -42.2, -42.2, -42.2, -42.2</code> <code>C2K: 0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0</code> <code>WIMAX OFDMA: -50,-60,0,0,0,0</code> <code>TD-SCDMA: -40, -45, -45, -45, -45, -45 -33, -43, -43, -43, -43, -43</code> <code>1xEVDO: -45, -55, -55, -55, -55, -55 -45, -55, -55, -55, -55, -55</code> |
| State Saved | Saved in instrument state. |
| Min | -150 |
| Max | 50.0 |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | Not supported in Zorro-1. 5.0 |
| Instrument S/W Revision | A.01.60 or later |

Rel Lim (PSD)

Enters a relative limit value for the level of the power spectral density. This sets the amplitude levels to test against for any custom offsets. The amplitude level is relative to the power spectral density. If multiple offsets are available, the list contains six (6) entries. The offset closest to the carrier channel is the first one in the list.

`[[:SENSe]:ACP:OFFSet[n]:LIST[n]:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with the `[[:SENSe]:ACP:OFFSet[n]:LIST:STATe` command.

The query returns the six (6) sets of real numbers that are the current amplitude test limits, relative to the power spectral density, for each offset.

Offset[n] n=1 is base station and 2 is mobiles. The default is base station (1).

| | |
|-------------------------|---|
| Key Path | Meas Setup, Offset/Limit |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe] :ACPower:OFFSet [1] 2:LIST:RPSDdensity <rel_amp1>, <rel_amp1>, <rel_amp1>, <rel_amp1>, <rel_amp1>, <rel_amp1> [:SENSe] :ACPower:OFFSet [1] 2:LIST:RPSDdensity? |
| Example | ACP:OFFS2:LIST:RPSD 10,10,10,10,10,10 ACP:OFFS2:LIST:RPSD? |
| Notes | Offset sub op code. 1 for BTS, 2 for MS. Default is BTS. You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | SA: -28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB -28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB WCDMA: -44.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB -32.2 dB, -42.2 dB, -42.2 dB, -42.2 dB, -42.2 dB, -42.2 dB C2K: 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB 0 dB, 0 dB, 0 dB, 0 dB, 0 dB, 0 dB WIMAX OFDMA: -25,-35,0,0,0,0 TD-SCDMA: -40 dB, -45 dB, -45 dB, -45 dB, -45 dB, -45 dB -33 dB, -43 dB, -43 dB, -43 dB, -43 dB, -43 dB 1xEVDO: -45, -55, -55, -55, -55, -55 -45, -55, -55, -55, -55, -55 |
| State Saved | Saved in instrument state. |
| Min | -150.0 dB |
| Max | 50.0 dB |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | Not supported in Zorro-1. 5.0 |
| Instrument S/W Revision | A.01.60 or later |

Carrier Result

Allows you to view and scroll through the carrier power results.

| | |
|------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA. 1xEVDO |
| Dependencies/Couplings | This key will be grayed out if there is only one carrier. |
| Preset | 1 |

ACP Measurement Meas Setup

| | |
|-------------------------|---------------------|
| State Saved | No |
| Min | 1 |
| Max | Number of carriers. |
| Test UP/DOWN | 1 |
| Instrument S/W Revision | A.01.60 or later |

PhNoise Opt

Selects the LO (local oscillator) phase noise behavior for various operating conditions.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

PhNoise Opt Auto

Selects the LO (local oscillator) phase noise behavior for various operating conditions.

Auto will choose:

Fast Tuning whenever Span > 12.34 MHz or RBW > 250 kHz

otherwise, if center frequency is < 25 kHz OR ALL of the following are true:

CF >= 1 MHz AND Span <= 141.4 kHz AND RBW <= 5 kHz

then **Best Phase Noise at Offset < 20 kHz;**

otherwise, **Best Phase Noise at Offset > 30 kHz.**

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA. 1xEVDO |
| Remote Command | [:SENSe] :ACPower:FREQuency:SYNTHeSis:AUTO[:STATe] OFF ON 0 1 [:SENSe] :ACPower:FREQuency:SYNTHeSis:AUTO[:STATe] ? |
| Example | ACP:FREQ:SYNT:AUTO 1 ACP:FREQ:SYNT:AUTO? |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | Auto Man |
| Instrument S/W Revision | A.01.60 or later |

PhNoise Opt State

Selects the LO (local oscillator) phase noise behavior for various operating conditions.

| | |
|-------------------------|--|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA. 1xEVDO |
| Remote Command | [:SENSe] :ACPower:FREQuency:SYNThesis [:STATE] 1 2 3 [:SENSe] :ACPower:FREQuency:SYNThesis [:STATE] ? |
| Example | ACP:FREQ:SYNT 1 ACP:FREQ:SYNT? |
| Notes | Parameter key: 1 - optimizes phase noise for frequencies offset <20 kHz from the carrier. 2 - optimizes phase noise for frequencies offset >30 kHz from the carrier. 3 - optimizes LO for tuning speed. |
| Preset | Because this function is in Auto after preset, the state of this function after Preset will be automatically calculated. |
| State Saved | Saved in instrument state. |
| Range | BestPhase Noise at offset < 20 kHz BestPhase Noise at offset > 30 kHz Fast Tuning |
| Instrument S/W Revision | A.01.60 or later |

Meas Method

Sets the desired method to measure ACP.

Integration BW — one sweep of the trace is taken, and the band power for each offset is computed. Depending on the status of the Meas Type parameter (Total Power Reference or PSD Reference), results are displayed relative to the total power or the power spectral density. The display reflects either the current trace or a bar graph view.

Filtered IBW (max dynamic range) — ACP Path is used to compute ACP when an ACP path is available. This method increases dynamic range, but increases measurement time as it limits the resolution bandwidth. This method is useful for improving dynamic range on W-CDMA signal because of a sharp cutoff band pass filter is used. The accuracy of the adjacent channel power ratio is not degraded by this method, but the absolute accuracy of both adjacent channel power and carrier power are degraded by up to about 0.5 dB.

RBW — the algorithm uses zero-span and an appropriate RBW setting to capture all of the power in the carrier channel and the offsets. The zero-span algorithm (RBW method) is slower than the IBW method, but greatly improves repeatability.

Fast (in WCDMA mode or SA mode with 3GPP WCDMA radio standard selected) — this provides the same method as the Integration BW method, but with optimized for speed to measure W-CDMA signal.

In the TD-SCDMA mode, only the Integration BW method is available. Therefore, the Meas Method

ACP Measurement Meas Setup

key is not displayed in the TD-SCDMA mode.

| | |
|-------------------------|--|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO |
| Remote Command | [:SENSe] :ACPower :METHod IBW IBWRange FAST RBW [:SENSe] :ACPower :METHod? |
| Example | ACP:METH IBW ACP:METH? |
| Dependencies/Couplings | IBW (Range) restricts the Res BW available for making this measurement to 30kHz. When selected the Res Bw will be clipped to this value if required and an error number displayed. |
| Preset | SA: IBW WCDMA: IBW C2K: RBW WIMAX OFDMA: IBW 1xEVDO: IBW |
| State Saved | Saved in instrument state. |
| Range | Integration BW Filtered IBW (max dynamic range) RBW Fast |
| Instrument S/W Revision | A.01.60 or later |

Meas Type

Changes the reference used for the measurement. This allows you to make absolute and relative power measurements of either total power or the power normalized to the measurement bandwidth.

Total Pwr Ref (TPR) sets the reference to the total carrier power. PSD Ref (PSDR) sets the reference to the power spectral density of the carrier.

| | |
|-----------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe] :ACPower :TYPE TPRef PSDRef [:SENSe] :ACPower :TYPE? |
| Example | ACP:TYPE PSDR ACP:TYPE? |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode. |
| Preset | TPRef |
| State Saved | Saved in instrument state. |

| | |
|-------------------------|-------------------------|
| Range | Total Power Ref PSD Ref |
| Instrument S/W Revision | A.01.60 or later |

PSD Ref

Sets the unit bandwidth for Power Spectral Density. The available units are dBm/Hz and dBm/MHz.

| | |
|-------------------------|--|
| Key Path | Meas Setup |
| Mode | A, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :UNIT:ACPower:POWer:PSD DBMHZ DBMMHZ :UNIT:ACPower:POWer:PSD? |
| Example | UNIT:ACP:POW:PSD DBMMHZ UNIT:ACP:POW:PSD? |
| Dependencies/Couplings | When the PSD unit is changed, the PSD reference result of the “MEAS READ FETCH:ACP[n]?” is also changed by the PSD unit basis (in either dBm/Hz or dBm/MHz). |
| Preset | DBMHZ |
| State Saved | Saved in instrument state. |
| Range | dBm/Hz dBm/MHz |
| Instrument S/W Revision | A.01.60 or later |

Limit Test

Turns limit checking for each offset On or Off. The limits may be specified within the Offset menu, for each offset, both sides of the carrier. For results that fail the limit, a red F is appended. In Combined view, the bar turns red.

| | |
|-----------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:ACPower:LIMit:STATe OFF ON 0 1 :CALCulate:ACPower:LIMit:STATe? |
| Example | CALC:ACP:LIM OFF CALC:ACP:LIM? |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELect to set the mode. |

ACP Measurement Meas Setup

| | |
|-------------------------|---|
| Preset | SA: OFF WCDMA: ON C2K: ON WIMAX OFDMA: OFF TD-SCDMA: ON 1xEVDO: ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Offset RRC Weighting

Allows you to turn RRC filtering of the carriers and all adjacent channels on or off. The α value (roll off) for the filter will be set to the value of the Filter Alpha parameter.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, TD-SCDMA |
| Remote Command | [:SENSe] :ACPoweR:FILTeR [:RRC] [:STATe] OFF ON 0 1 [:SENSe] :ACPoweR:FILTeR [:RRC] [:STATe] ? |
| Example | ACP:FILT OFF ACP:FILT? |
| Notes | This parameter is not available for cdma2000 You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELeCt to set the mode. |
| Preset | SA: OFF WCDMA: ON C2K: NO WIMAX OFDMA: OFF TD-SCDMA: ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Offset Filter Alpha

Sets the alpha value for the RRC Filter.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, TD-SCDMA |
| Remote Command | [:SENSE] :ACPower :FILTer [:RRC] :ALPHa <real> [:SENSE] :ACPower :FILTer [:RRC] :ALPHa? |
| Example | ACP:FILT:ALPH 0.5 ACP:FILT:ALPH? |
| Notes | This parameter is not available for cdma2000 You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | SA: 0.22 WCDMA: 0.22 WIMAX OFDMA: 0.22 C2K: NO TD-SCDMA: 0.22 |
| State Saved | Saved in instrument state. |
| Min | 0.01 |
| Max | 1.00 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 0.1 |
| Instrument S/W Revision | A.01.60 or later |

Meas Preset

Restores all the measurement parameters to their default values.

| | |
|------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CONFigure:ACPower |
| Example | CONF:ACP |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | Selecting Meas Preset will restore all measurement parameters to their default values. |

ACP Measurement Meas Setup

Instrument S/W Revision A.01.60 or later

Noise Correction

Sets the noise floor correction function to On or Off. On enables measurement noise correction when the measured power in the reference channel or any offset is close to the noise floor of the analyzer. Off turns these corrections off.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | <code>[:SENSE] :ACPpower:CORRection:NOISe [:AUTO] OFF ON 0 1</code> <code>[:SENSE] :ACPpower:CORRection:NOISe [:AUTO] ?</code> |
| Example | ACP:CORR:NOIS OFF ACP:CORR:NOIS? |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELEct to set the mode. |
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Mode

See “[Mode](#)” on page [1133](#) in the section "Common Measurement Functions" for more information.

Mode Setup

See “[Mode Setup](#)” on page 1145 in the section "Common Measurement Functions" for more information.

Peak Search

Accesses a menu that enables you to control the peak search function.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Peak Search

Places the selected marker on the trace point with the maximum y-axis value.

| | |
|-------------------------|---|
| Key Path | Peak Search |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M AXimum |
| Example | CALC:ACP:MARK2:MAX |
| Instrument S/W Revision | A.01.60 or later |

Next Peak

Moves the selected marker to the peak that has the next highest amplitude.

| | |
|-------------------------|--|
| Key Path | Peak Search |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M AXimum:NEXT |
| Example | CALC:ACP:MARK2:MAX:NEXT |
| Instrument S/W Revision | A.01.60 or later |

Next Pk Right

Moves the selected marker to the nearest peak to the right of the current marker that meets all enabled peak criteria.

| | |
|-----------------------|---|
| Key Path | Peak Search |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M AXimum:RIGHT |
| Example | CALC:ACP:MARK2:MAX:RIGH |

ACP Measurement Peak Search

Instrument S/W Revision A.01.60 or later

Next Pk Left

Moves the selected marker to the nearest peak to the left of the current marker that meets all enabled peak criteria.

| | |
|-------------------------|--|
| Key Path | Peak Search |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M AXimum:LEFT |
| Example | CALC:ACP:MARK2:MAX:LEFT |
| Instrument S/W Revision | A.01.60 or later |

Marker Delta

Sets the control mode for the selected marker to Delta mode.

See Marker Delta in the "Marker Functions" section for more information.

| | |
|-------------------------|--------------------|
| Key Path | Peak Search |
| Instrument S/W Revision | A.01.60 or later |

Pk-Pk Search

Finds and displays the amplitude and frequency (or time, if in zero span) differences between the highest and lowest y-axis value.

| | |
|-------------------------|--|
| Key Path | Peak Search |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :P TPeak |
| Example | CALC:ACP:MARK:PTP |
| Notes | Turns on the Marker Δ active function. |
| Dependencies/Couplings | This key is not available (key is grayed out) when Coupled Markers is on. |
| Instrument S/W Revision | A.01.60 or later |

Min Search

Moves the selected marker to the minimum y-axis value on the current trace.

| | |
|-------------------------|---|
| Key Path | Peak Search |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:ACPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M INimum |
| Example | CALC:ACP:MARK:MIN |
| Instrument S/W Revision | A.01.60 or later |

Recall

See “[Recall](#)” on page 1149 in the section "Common Measurement Functions" for more information.

Restart

See “Restart” on page 1167 in the section "Common Measurement Functions" for more information.

Save

See “[Save](#)” on page 1169 in the section "Common Measurement Functions" for more information.

Single

See “[Single \(Single Measurement/Sweep\)](#)” on page 1191 in the section "Common Measurement Functions" for more information.

Source

See “[Source](#)” on page 1193 in the section "Common Measurement Functions" for more information.

SPAN X Scale

Accesses a menu of functions that enable you set the horizontal scale parameters.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Span

Changes the frequency range symmetrically about the center frequency.

The default (and minimum) span is calculated using the number of carriers and the carrier width where;

$$\text{Span} = (\text{Upper Carrier Freq} + (\text{max offset IBW} * (1 + \alpha)) / 2) - (\text{Lower Carrier Freq} - (\text{max offset IBW} * (1 + \alpha)) / 2)$$

The span is increased by a factor of 1 + Filter Alpha if the RRC Filter is on.

| | |
|------------------------|--|
| Key Path | Span X Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe] :ACPower:FREQuency:SPAN <freq> [:SENSe] :ACPower:FREQuency:SPAN? |
| Example | ACP:FREQ:SPAN 25MHz ACP:FREQ:SPAN? |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SELect to set the mode. |
| Dependencies/Couplings | The span value is clipped when the carrier settings and/or the offset settings are changed. The value is changed to satisfy following formula: Span = (Upper Carrier Freq + (max offset IBW * (1 + alpha)) / 2) - (Lower Carrier Freq - (max offset IBW * (1 + alpha)) / 2) |
| Preset | SA: 8 MHz WCDMA: 24.6848 MHz WIMAX OFDMA: 50MHz C2K: 4.5 MHz TD-SCDMA: 8MHz 1xEVDO: 4.05 MHz |
| State Saved | Saved in instrument state. |
| Min | 10 Hz |

ACP Measurement

SPAN X Scale

| | |
|-------------------------|---|
| Max | Hardware Dependent: Option 503 = 3.7 GHz Option 507 = 7.1 GHz Option 508 = 8.5 GHz Option 513 = 13.8 GHz Option 526 = 27.0 GHz |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1, 2, 5, 10... |
| Instrument S/W Revision | A.01.60 or later |

Full Span

Changes the span to show the full frequency range of the spectrum analyzer.

| | |
|-------------------------|---|
| Key Path | Span X Scale |
| Mode | SA, WCDMA, C2K, WiMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :ACPpower :FREQuency :SPAN :FULL |
| Example | ACP:FREQ:SPAN:FULL |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SElect to set the mode. |
| Instrument S/W Revision | A.01.60 or later |

Last Span

Changes the span to the previous span setting. If no previous span value exists, then the span will remain unchanged.

| | |
|-------------------------|---|
| Key Path | Span X Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :ACPpower :FREQuency :SPAN :PREVIOUS |
| Example | ACP:FREQ:SPAN:PREV |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTRument:SElect to set the mode. |
| Instrument S/W Revision | A.01.60 or later |

Sweep/Control

Accesses a menu of functions that enable you to set up and control the sweep time, and source.

See “Sweep / Control” on page 1197 in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Sweep Time

Selects the length of time in which the spectrum analyzer sweeps the displayed frequency span. In swept spans, the sweep time varies from 1 millisecond to 2000 seconds. Additional overhead time, which impacts the sweep rate, is not calculated as part of the sweep time. In fact:

sweep rate = span/sweep time

update rate = 1/(sweep time + overhead)

sweep cycle time = sweep time + overhead

Sweep time is coupled to RBW and VBW, and is impacted by the number of sweep points, so changing those parameters may change the sweep time.

If you increase the sweep time, you increase the length of the time data captured and the number of points measured. You might need to specify a specific sweep speed to accommodate a specific condition in your transmitter. For example, you may have a burst signal and need to measure an exact portion of the burst.

Selecting a specific sweep time may result in a long measurement time since the resulting number of data points may not be the optimum 2n. Use [:SENSe]:ACP:OFFSet:LIST:SWEep:TIME to set the number of points used for measuring the offset channels for Basic and cdmaOne.

For cdma2000 and W-CDMA, this command sets the sweep time when using the sweep mode. See [:SENSe]:ACP:SWEep:TYPE

| | |
|-----------------------|--|
| Key Path | Sweep/Control |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe]:ACP:Power:SWEep:TIME <time> [:SENSe]:ACP:Power:SWEep:TIME? [:SENSe]:ACP:Power:SWEep:TIME:AUTO OFF ON 0 1 [:SENSe]:ACP:Power:SWEep:TIME:AUTO? |

ACP Measurement Sweep/Control

| | |
|-------------------------|---|
| Example | ACP:SWE:TIME 50ms ACP:SWE:TIME? ACP:SWE:TIME:AUTO OFF ACP:SWE:TIME:AUTO? |
| Notes | This parameter is preset by Meas Method selection. Preset values are as follows: IBW: 29 ms IBWR: 108 ms FAST (WCDMA): 7.5 ms |
| Dependencies/Couplings | When you manually change the Sweep Time, this state automatically goes to 'Man'. |
| Preset | SA: Automatically calculated WCDMA: 29 ms WIMAX OFDMA: Automatically calculated C2K: Automatically calculated TD-SCDMA: Automatically calculated 1xEVDO: Automatically calculated SA: ON WCDMA: OFF C2K: OFF(mehtod IBW) WIMAX OFDMA: ON TD-SCDMA: ON |
| State Saved | Saved in instrument state. |
| Min | 1 ms |
| Max | 4000 s |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1,1.5,2,3,5,7.5,10 sequence |
| Instrument S/W Revision | A.01.60 or later |

Sweep Setup

Accesses the sweep setup menu.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Auto Sweep Time Rules

Switches the analyzer between normal and accuracy sweep states.

| | |
|-------------------------|---|
| Key Path | Sweep/Control, Sweep Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :ACPower :SWEep :TIME :AUTO :RULes NORMal ACCuracy [:SENSE] :ACPower :SWEep :TIME :AUTO :RULes? |
| Example | ACP:SWE:TIME:AUTO:RUL NORM ACP:SWE:TIME:AUTO:RUL? |
| Notes | Set to Norm when Auto Couple is pressed or sent remotely. |
| Preset | SA, WCDMA, C2K, TD-SCDMA, 1xEVDO: ACCuracy WIMAX OFDMA: NORMal |
| State Saved | Saved in instrument state. |
| Range | Norm Accy |
| Instrument S/W Revision | A.01.60 or later |

Pause

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing the Resume key resumes the measurement at the point it was at when paused. See [“Pause/Resume” on page 1198](#) in “Common Measurement Functions” for more details.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Gate

Accesses a menu that enables you to control the gating function .The Gate functionality is used to view signals best viewed by qualifying them with other events.

Gate Method that lets you choose one of the three different types of gating is not available in this measurement.

See [“Gate” on page 417](#) in “common Measurement Functions” for more details.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Points

Sets the number of points per sweep, from 1 to 20001. The sweep time resolution setting will depend on

ACP Measurement Sweep/Control

the number of points selected.

| | |
|-------------------------|--|
| Key Path | Sweep/Control |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe] :ACPower:SWEep:POINts <integer> [:SENSe] :ACPower:SWEep:POINts? |
| Example | ACP:SWE:POIN 500 ACP:SWE:POIN? |
| Notes | Whenever the number of sweep points changes: <ul style="list-style-type: none">• All trace data is erased• Any traces with Update Off will also go to Display Off (like going from View to Blank in the older analyzers)• Sweep time is re-quantized• Any limit lines that are on will be updated• If averaging/hold is on, averaging/hold starts over |
| Dependencies/Couplings | Whenever the number of sweep points changes, the sweep time is re-quantized. |
| Preset | 1001 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 20001 |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Trace/Detector

Accesses a menu of functions that enable you to control the detectors for the current measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Trace Type

Allows you to select the type of trace for the current measurement. The first page of this menu contains a selection of the trace type (Clear Write, Trace Average, Max Hold, Min Hold) for the selected trace.

| | |
|-------------------------|---|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :TRACe:ACPower[:TRACe1 2 3]:TYPE WRITe AVERAge MAXHold MINHold :TRACe[1] 2 3:ACPower:TYPE WRITe AVERAge MAXHold MINHold :TRACe:ACPower[:TRACe1 2 3]:TYPE? :TRACe[1] 2 3:ACPower:TYPE? |
| Example | TRAC:ACP:TYPE MINH TRAC:ACP:TYPE? |
| Notes | WRITe = Clear Write AVERAge = Average MAXHold = Maximum Hold MINHold = Minimum Hold |
| Dependencies/Couplings | When Detector setting is “Auto” (:SENSe]:ACPower:DETEctor:AUTO?), Detector is set to what the Radio Standard defaults states (see detector section below) for all conditions of Trace Type and for all traces. When set to Manual, all Traces use the same detector type. When Average State = Off then Trace Types AVERAge, MaxHold and MinHold will not function, since Averaging is required to be ‘on’ for them to operate. |
| Preset | AVERAge |
| State Saved | Saved in instrument state. |
| Range | WRITe AVERAge MAXHold MINHold |
| Instrument S/W Revision | A.01.60 or later |

Detector

Accesses a menu of functions that enables you to control the detectors for the current measurement. The following choices are available:

- Auto- the detector selected is set to AVERage, unless the Radio Standard defaults state otherwise e.g. it is set to Peak for Radio Standard = PDC when Device = both MS and BTS, and when Radio Standard = NADC and Device = MS .
- Normal-the detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.
- Average-the detector determines the average of the signal within the sweep points. The averaging method is Power (RMS).).
- Peak-the detector determines the maximum of the signal within the sweep points.
- Sample-the detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.
- Negative Peak-the detector determines the minimum of the signal within the sweep points.

In swept analysis, the time interval of the data collection for the display sweep points also represents a frequency interval. In FFT analysis, the sweep points represents just a frequency interval. The detector determines the relationship between the spectrum computed by the FFT and the single data point displayed for the sweep points.

| | |
|-------------------------|------------------|
| Key Path | Detector |
| Instrument S/W Revision | A.01.60 or later |

Detector Selection

Selects a detector to be used by the analyzer for the current measurement. All traces will use the same detector type, similar to Monitor Spectrum measurement

| | |
|-----------------------|---|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe] :ACPower:DETEctor [:FUNction] AVERage NEGative NORMal POSitive SAMPlE [:SENSe] :ACPower:DETEctor [:FUNction] ? |
| Example | ACP:DET NORM ACP:DET? |

Notes When you manually select a detector (instead of selecting Auto), that detector is used regardless of other analyzer settings.

The detector choices are:

- The Normal detector determines the peak of CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.
- The Average detector determines the average of the signal within the data range. The averaging method method is Power (RMS).
- The Peak detector determines the maximum of the signal within the data range.
- The Sample detector indicates the instantaneous level of the signal at the center of the data represented by each display point.
- The Negative Peak detector determines the minimum of the signal within the data range.

Because they may not find a spectral component's true peak, neither average nor sample detectors measure amplitudes of CW signals as accurately as peak or normal, but they do measure noise without the biases of peak detection.

When a detector selection is made, the menu returns to the previous menu.

Dependencies/Couplings

When Detector setting is "Auto" (:SENSe]:ACPower:DETECTOR:AUTO?), Detector is set to what the Radio Standard defaults states (see detector section) for all conditions of Trace Type and for all traces. When set to Manual, all Traces use the same detector type. When Average State = Off then Trace Types AVERage, MaxHold and MinHold will not function, since Averaging is required to be 'on' for them to operate.

Only one detector type for all 3 traces is allowed.

Preset

AVERage

State Saved

Saved in instrument state.

Range

Normal|Average|Peak|Sample|Negative Peak

Test MIN/MAX/DEF

No

Instrument S/W Revision

A.01.60 or later

Auto

Sets the detector for the currently selected trace to auto.

Key Path

Trace/Detector

Mode

SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO

Remote Command

[:SENSe] :ACPower:DETECTOR:AUTO ON|OFF|1|0

[:SENSe] :ACPower:DETECTOR:AUTO?

ACP Measurement Trace/Detector

| | |
|-------------------------|--|
| Example | ACP:DET:AUTO 1 ACP:DET? |
| Dependencies/Couplings | When Detector setting is “Auto” ([:SENSe]:ACPower:DETECTOR:AUTO?), Detector is set to what the Radio Standard defaults states (see detector section) for all conditions of Trace Type and for all traces. When set to Manual, all Traces use the same detector type. When Average State = Off then Trace Types AVERage, MaxHold and MinHold will not function, since Averaging is required to be ‘on’ for them to operate. |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | ON OFF |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Select Trace (frontpanel only)

This key selects which trace the other parameters under the Trace/Detector menu will apply to.

| | |
|-------------------------|----------------------------|
| Key Path | Trace/Detector |
| Mode | NF |
| Notes | No SCPI. Front panel only. |
| Preset | 1 |
| State Saved | Saved in instrument state. |
| Range | 1 2 3 |
| Instrument S/W Revision | A.01.60 or later |

View / Blank

| | |
|----------|----------------------------|
| Key Path | Trace/Detector |
| Mode | SA |
| Notes | No SCPI. Front panel only. |

| | |
|-------------------------|---|
| Dependencies/Couplings | <p>The four states of this 1-of-N actually set two variables, Update and Display, to their four possible combinations (only 2 will be implemented):</p> <p>Trace On: Update and Display both On</p> <p>View: Update Off and Display On (Not implemented)</p> <p>Blank: Update Off and Display Off</p> <p>Background: Update On, Display Off (Not implemented)</p> <p>See tables below for detail on the SCPI to control these two variables.</p> <p>Selecting a trace type (Clear Write, Trace Average, Max Hold, Min Hold) for a trace (pressing the key or sending the equivalent SCPI command) puts the trace in 'Trace On' state (Update On and Display On), even if that trace type was already selected.</p> |
| Preset | Trace On |
| State Saved | Saved in instrument state. |
| Range | Trace On Blank |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trace/Detector |
| Remote Command | :TRACe [1] 2 3 :ACPower:UPDate [:STATe] ON OFF 0 1 :TRACe [1] 2 3 :ACPower:UPDate [:STATe] ? |
| Example | TRAC:ACP:UPD ON TRAC:ACP:UPD? |
| Dependencies/Couplings | Whenever you set Update to On for any trace, the Display is set to On for that trace. |
| Preset | 1 0 0 (On for Trace 1; Off for 2 &3) |
| State Saved | Saved in instrument state. |
| Range | 0 1 |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trace/Detector |
| Remote Command | :TRACe [1] 2 3 :ACPower:DISPlay [:STATe] ON OFF 0 1 :TRACe [1] 2 3 :ACPower:DISPlay [:STATe] ? |
| Example | TRAC:ACP:DISP ON TRAC:ACP:DISP? |
| Dependencies/Couplings | Whenever you set Update to On for any trace, the Display is set to On for that trace. |
| Preset | 1 0 0 (On for Trace 1; Off for 2 &3) |

ACP Measurement
Trace/Detector

| | |
|-------------------------|----------------------------|
| State Saved | Saved in instrument state. |
| Range | 0 1 |
| Instrument S/W Revision | A.01.60 or later |

Trigger

Accesses a menu functions that enable you to select and control the trigger source for the current measurement. See [“Trigger” on page 1221](#) in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |


View/Display

Accesses a menu of functions that enable you to control the instrument display as well as turn the bar graph On and Off.

The view consists of the following two windows:

“Spectrum Window” on page 426

“Results Window” on page 427

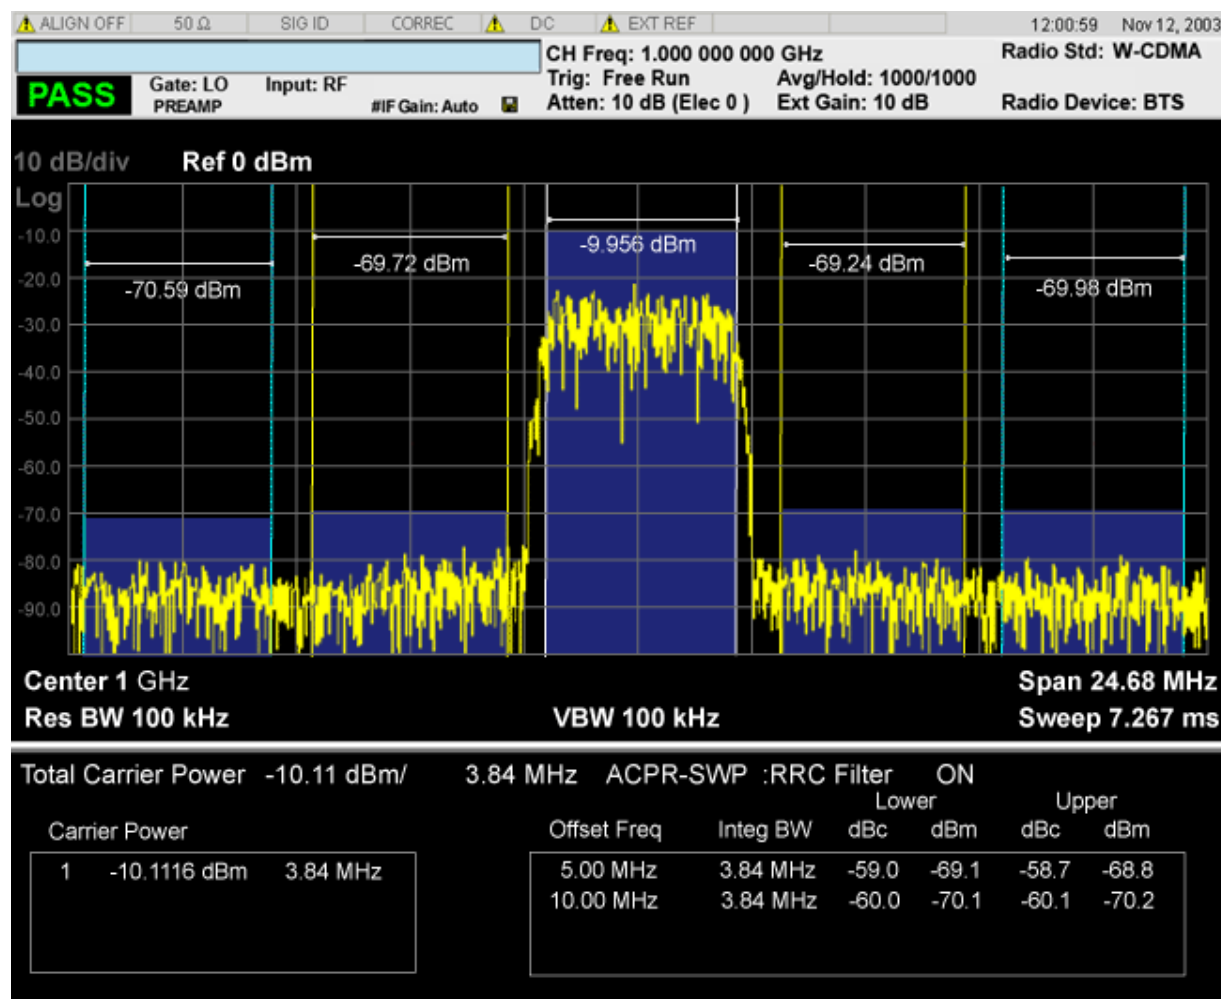

Spectrum Window

When the Bar Graph is On and Limit Test is On, the color of each bar graph reflects the limit test result. When the limit test fails, the bar color is red, and when limit test passes, the bar color is blue.

When RBW is selected as the measurement method, the spectrum trace is not displayed, only the bar graph is displayed. In addition, the Bar Graph key (under the View/Display front panel key) is set to ON

and is grayed out.

The RRC Filter display item is only displayed when RRC filter is on.

Results Window

The text window displays the following results:

Total Carrier Power

This is the total power of all the carriers with carrier power present set to yes. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter for each carrier and then totaling the sums. The total integration bandwidth is shown as part of the result. This will be the total of the Carrier Integ Bw of the carriers used in calculating the total carrier power. If the RRC Filter is on, then the integration bandwidth used is $(1 + \alpha)/T$ where $T = 1/(\text{Carrier Integ Bw})$ multiplied by the number of carriers with carrier power present set to yes.

Ref Carrier Power

This is the power in the reference carrier. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter for that carrier. The integration bandwidth is shown as part of the result. This is the value of the Carrier Integ Bw for that carrier unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is $(1 + \alpha)/T$ where $T = 1/(\text{Carrier Integ Bw})$.

Carrier Power

This is the power in all the currently defined carriers. If the carrier has carrier power present, the power will be absolute. If the carrier is defined as not having power present, the power will be relative to the reference carrier. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter. The integration bandwidth is shown as part of the result. This is the value of the Carrier Integ Bw for the carrier unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is $(1 + \alpha)/T$ where $T = 1/(\text{Carrier Integ Bw})$.

As there are potentially more results than can be easily viewed on the display, a scrollable list is used to display all results. The Carrier Results menu key is used to index the carrier amplitude results. This key is grayed out unless the measurement is in single mode (as in continual measurement mode). The display is continuously updating and will not need to be accessed. The currently selected Carrier Result is displayed on the last line of the carrier power result list unless:

- The selected Carrier Result is 4 or less in normal multi carrier power results view. In this case the first 4 carrier power results will be displayed.
- The selected Carrier Result is 9 or greater in normal multi carrier power results view. In this case the last 4 carrier power results will be displayed.
- The zoom mode is selected. In this case all carrier power ranges can be displayed.

Offset Relative Power

This is the power in the offsets relative to the reference carrier. The power is calculated by integrating across the bandwidth declared by the Offset Integ Bw parameter. The offset integration bandwidth is shown as part of the result. This is the value on the Offset Integ Bw menu key unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is $(1 + \alpha)/T$ where $T = 1/(\text{Offset Integ Bw})$.

Offset Absolute Power

This is the absolute power in the offsets. The power is calculated by integrating across the bandwidth declared by the Offset Integ Bw parameter. The offset integration bandwidth is shown as part of the result. This is the value on the Offset Integ Bw menu key unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is $(1 + \alpha)/T$ where $T = 1/(\text{Offset Integ Bw})$.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Display

Accesses a menu of functions that enable you to set the display parameters.

See “[Display](#)” on page 1273 in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|---------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

Bar Graph

Turns the Bar Graph On and Off.

| | |
|-------------------------|---|
| Key Path | View/Display |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISPlay:ACPpower:VIEW[1]:WINDow[1]:BGRaph OFF ON 0 1 :DISPlay:ACPpower:VIEW[1]:WINDow[1]:BGRaph? |
| Example | DISP:ACP:VIEW:WIND:BGR OFF DISP:ACP:VIEW:WIND:BGR? |
| Notes | You must be in the mode that includes ACP measurements to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | When the method is RBW, this key is always set to On and grayed out. |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

The spectrum emission mask measures spurious signal levels in up to six pairs of offset frequencies and relates them to the carrier power. For measurement results and views, see [“View/Display” on page 502](#).

This topic contains the following sections:

[“Measurement Commands for Spectrum Emission Mask” on page 429](#)

[“Remote Command Results for Spectrum Emission Mask Measurement” on page 429](#)

Measurement Commands for Spectrum Emission Mask

Offsets that are turned off (inactive) will return -999.0 when their results are queried over SCPI.

:CONFigure:SEMask

:CONFigure:SEMask:NDEFault

:INITiate:SEMask

:FETCh:SEMask [n] ?

:MEASure:SEMask [n] ?

:READ:SEMask [n] ?

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1115](#).

Remote Command Results for Spectrum Emission Mask Measurement

Command

Return Value

Spectrum Emission Mask Measurement

| | | |
|--------------------|-----|---|
| FETCh:SEMask[n]? | N=1 | In case the Meas Type is: Total Power Reference |
| MEASure:SEMask[n]? | | Returns 82 comma-separated scalar results, in the following order: |
| READ:SEMask[n]? | | <ol style="list-style-type: none">1. Reserved for the future use, returns -999.02. Absolute power at the center frequency (reference) area (dBm)3. Reserved for the future use, returns -999.04. Reserved for the future use, returns -999.05. Peak frequency in the center frequency (reference) area (Hz)6. Reserved for the future use, returns -999.07. Reserved for the future use, returns -999.08. Reserved for the future use, returns -999.09. Reserved for the future use, returns -999.010. Reserved for the future use, returns -999.011. Relative integrated power on the negative offset A (dBc)12. Absolute integrated power on the negative offset A (dBm)13. Relative peak power on the negative offset A (dBc)14. Absolute peak power on the negative offset A (dBm)15. Peak power offset frequency from the center frequency in the negative offset A (Hz)16. Relative integrated power on the positive offset A (dBc)17. Absolute integrated power on the positive offset A (dBm)18. Relative peak power on the positive offset A (dBc)19. Absolute peak power on the positive offset A (dBm)20. Peak power offset frequency from the center frequency in the positive offset A (Hz)21. Relative integrated power on the negative offset B (dBc)...69. Absolute peak power on the positive offset F (dBm)70. Peak power offset frequency from the center frequency in the positive offset F (Hz) |

- N=1
71. Minimum margin from limit line on the negative offset A (dB)
 72. Minimum margin from limit line on the positive offset A (dB)
 73. Minimum margin from limit line on the negative offset B (dB)
 74. Minimum margin from limit line on the positive offset B (dB)
 75. Minimum margin from limit line on the negative offset C (dB)
 76. Minimum margin from limit line on the positive offset C (dB)
 77. Minimum margin from limit line on the negative offset D (dB)
 78. Minimum margin from limit line on the positive offset D (dB)
 79. Minimum margin from limit line on the negative offset E (dB)
 80. Minimum margin from limit line on the positive offset E (dB)
 81. Minimum margin from limit line on the negative offset F (dB)
 82. Minimum margin from limit line on the positive offset F (dB)

- N=1 In case the Meas Type is: Power Spectral Density Reference
- Returns 82 comma-separated scalar results, in the following order:
1. Reserved for the future use, returns -999.0
 2. Absolute power at the center frequency (reference) area (dBm)
 3. Reserved for the future use, returns -999.0
 4. Reserved for the future use, returns -999.0
 5. Peak frequency in the center frequency (reference) area (Hz)
 6. Reserved for the future use, returns -999.0
 7. Reserved for the future use, returns -999.0
 8. Reserved for the future use, returns -999.0
 9. Reserved for the future use, returns -999.0
 10. Reserved for the future use, returns -999.0
 11. Relative integrated power on the negative offset A (dB).
 12. Absolute integrated power on the negative offset A (dBm/Hz).
 13. Relative peak power on the negative offset A (dB)
 14. Absolute peak power on the negative offset A (dBm/Hz)
 15. Peak power offset frequency from the center frequency in the negative offset A (Hz)
 16. Relative integrated power on the positive offset A (dB).
 17. Absolute integrated power on the positive offset A (dBm/Hz).
 18. Relative peak power on the positive offset A (dB)
 19. Absolute peak power on the positive offset A (dBm/Hz)
 20. Peak power offset frequency from the center frequency in the positive offset A (Hz)
 21. Relative integrated power on the negative offset B (dB).
 - ...
 69. Absolute peak power on the positive offset F (dBm/Hz)
 70. Peak power offset frequency from the center frequency in the positive offset F (Hz)

- N=1
71. Minimum margin from limit line on the negative offset A (dB)
 72. Minimum margin from limit line on the positive offset A (dB)
 73. Minimum margin from limit line on the negative offset B (dB)
 74. Minimum margin from limit line on the positive offset B (dB)
 75. Minimum margin from limit line on the negative offset C (dB)
 76. Minimum margin from limit line on the positive offset C (dB)
 77. Minimum margin from limit line on the negative offset D (dB)
 78. Minimum margin from limit line on the positive offset D (dB)
 79. Minimum margin from limit line on the negative offset E (dB)
 80. Minimum margin from limit line on the positive offset E (dB)
 81. Minimum margin from limit line on the negative offset F (dB)
 82. Minimum margin from limit line on the positive offset F (dB)

- N=1 In case the Meas Type is: Spectrum Peak Reference
- Returns 82 comma-separated scalar results, in the following order:
1. Reserved for the future use, returns –999.0
 2. Peak power at the center frequency (reference) area (dBm)
 3. Reserved for the future use, returns –999.0
 4. Reserved for the future use, returns –999.0
 5. Peak frequency in the center frequency (reference) area (Hz)
 6. Reserved for the future use, returns –999.0
 7. Reserved for the future use, returns –999.0
 8. Reserved for the future use, returns –999.0
 9. Reserved for the future use, returns –999.0
 10. Reserved for the future use, returns –999.0
 11. Reserved for the future use, returns –999.0
 12. Reserved for the future use, returns –999.0
 13. Relative peak power on the negative offset A (dB)
 14. Absolute peak power on the negative offset A (dBm)
 15. Peak power offset frequency from the center frequency in the negative offset A (Hz)
 16. Reserved for the future use, returns –999.0
 17. Reserved for the future use, returns –999.0
 18. Relative peak power on the positive offset A (dB)
 19. Absolute peak power on the positive offset A (dBm)
 20. Peak power offset frequency from the center frequency in the positive offset A (Hz)
 21. Reserved for the future use, returns –999.0
 - ...
 69. Absolute peak power on the positive offset F (dBm)
 70. Peak power offset frequency from the center frequency in the positive offset F (Hz)

- N=1
- 71. Minimum margin from limit line on the negative offset A (dB)
 - 72. Minimum margin from limit line on the positive offset A (dB)
 - 73. Minimum margin from limit line on the negative offset B (dB)
 - 74. Minimum margin from limit line on the positive offset B (dB)
 - 75. Minimum margin from limit line on the negative offset C (dB)
 - 76. Minimum margin from limit line on the positive offset C (dB)
 - 77. Minimum margin from limit line on the negative offset D (dB)
 - 78. Minimum margin from limit line on the positive offset D (dB)
 - 79. Minimum margin from limit line on the negative offset E (dB)
 - 80. Minimum margin from limit line on the positive offset E (dB)
 - 81. Minimum margin from limit line on the negative offset F (dB)
 - 82. Minimum margin from limit line on the positive offset F (dB)
- N=2
- Returns the displayed frequency domain spectrum trace data separated by comma. The number of data is 2001.
- N=3
- Returns the displayed frequency domain absolute limit trace data separated by comma. The number of data is determined 2001.
- N=4
- Returns the displayed frequency domain relative limit trace data separated by comma. The number of data is 2001.
- N=5
- In case the Meas Type is: Total Power Reference
- Returns 14 comma-separated scalar values (in dBm) of the absolute integrated power of the segment frequencies:
- 1. Total power reference (dBm)
 - 2. Reserved for the future use, returns -999.0
 - 3. Absolute integrated power at negative offset frequency (A)
 - 4. Absolute integrated power at positive offset frequency (A)
 - ...
 - 13. Absolute integrated power at negative offset frequency (F)
 - 14. Absolute integrated power at positive offset frequency (F)

- N=5 In case the Meas Type is: Power Spectral Density Reference
- Returns 14 comma-separated scalar values (in dBm/Hz) of the absolute integrated power of the segment frequencies. Returns -999.0 for the offsets if in WLAN:
1. Power spectral density reference (dBm/Hz)
 2. Reserved for the future use, returns -999.0
 3. Absolute integrated power at negative offset frequency (A)
 4. Absolute integrated power at positive offset frequency (A)
 - ...
 13. Absolute integrated power at negative offset frequency (F)
 14. Absolute integrated power at positive offset frequency (F)
- N=5 In case the Meas Type is: Spectrum Peak Reference
- Returns 14 comma-separated scalar values (in dBm) of the absolute peak power of the segment frequencies.
1. Spectrum Peak Power reference (dBm)
 2. Reserved for the future use, returns -999.0
 3. Absolute peak power at negative offset frequency (A)
 4. Absolute peak power at positive offset frequency (A)
 - ...
 13. Absolute peak power at negative offset frequency (F)
 14. Absolute peak power at positive offset frequency (F)
- N=6 In case the Meas Type is: Total Power Reference
- Returns 14 comma-separated scalar values (in dBc) of the integrated power relative to the carrier at the segment frequencies:
1. Reserved for the future use, returns -999.0
 2. Reserved for the future use, returns -999.0
 3. Relative integrated power at negative offset frequency (A)
 4. Relative integrated power at positive offset frequency (A)
 - ...
 13. Relative integrated power at negative offset frequency (F)
 14. Relative integrated power at positive offset frequency (F)

- N=6 In case the Meas Type is: Power Spectral Density Reference
- Returns 14 comma-separated scalar values (in dBc/Hz) of the integrated power relative to the carrier at the segment frequencies. Returns -999.0 for the offsets if in WLAN:
1. Reserved for the future use, returns -999.0
 2. Reserved for the future use, returns -999.0
 3. Relative integrated power at negative offset frequency (A)
 4. Relative integrated power at positive offset frequency (A)
 - ...
 13. Relative integrated power at negative offset frequency (F)
 14. Relative integrated power at positive offset frequency (F)
- N=6 In case the Meas Type is: Spectrum Peak Reference
- Returns 14 comma-separated scalar values (in dB) of the integrated power relative to the carrier at the segment frequencies.
1. Reserved for the future use, returns -999.0
 2. Reserved for the future use, returns -999.0
 3. Relative peak power at negative offset frequency (A)
 4. Relative peak power at positive offset frequency (A)
 - ...
 13. Relative peak power at negative offset frequency (F)
 14. Relative peak power at positive offset frequency (F)
- N=7 Returns 14 comma-separated pass/fail test results (0=passed, or 1=failed) determined by testing the minimum margin point from the limit line that is determined each offset's Limits setting.
1. Reserved for the future use, returns -999.0
 2. Reserved for the future use, returns -999.0
 3. At negative offset frequency (A)
 4. At positive offset frequency (A)
 - ...
 13. At negative offset frequency (F)
 14. At positive offset frequency (F)

N=8 Returns 14 comma-separated pass/fail test results (0=passed, or 1=failed) determined by testing the minimum margin point from the limit line that is determined each offset's Limits setting.

Note: This results (N=8) are the same as N=7 result.

1. Reserved for the future use, returns -999.0
2. Reserved for the future use, returns -999.0
3. At negative offset frequency (A)
4. At positive offset frequency (A)

...

13. At negative offset frequency (F)
14. At positive offset frequency (F)

N=9 Returns 14 comma-separated scalar values of frequency (in Hz) that have peak power in each offset:

1. Reserved for the future use, returns -999.0
2. Reserved for the future use, returns -999.0
3. Negative offset frequency (A)
4. Positive offset frequency (A)

...

13. Negative offset frequency (F)
14. Positive offset frequency (F)

N=10 Returns 14 comma-separated scalar values (in dBm) of the absolute peak power of the segment frequencies:

1. Reserved for the future use, returns -999.0
2. Reserved for the future use, returns -999.0
3. At negative offset frequency (A)
4. At positive offset frequency (A)

...

13. At negative offset frequency (F)
14. At positive offset frequency (F)

- N=11 Returns 14 comma-separated scalar values in dBc (dB if MeasType = PSD) of the peak power relative to the carrier at the segment frequencies:
1. Reserved for the future use, returns -999.0
 2. Reserved for the future use, returns -999.0
 3. At negative offset frequency (A)
 4. At positive offset frequency (A)
 - ...
 13. At negative offset frequency (F)
 14. At positive offset frequency (F)
- N=12 Returns the band power result (the peak power of the signal in the ref channel) when Meas Type is Spectrum Peak reference. Otherwise, the value returned will be -999.0

| | |
|-------------------------|------------------|
| Key Path | Meas |
| Instrument S/W Revision | A.01.60 or later |

AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. The parameter values are measurement independent except all Attenuation values and Internal Preamp selections that are measurement global.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Ref Value

Sets the value for the absolute power reference. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEVe l <real> :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEVe l? |
| Example | DISP:SEM:VIEW:WIND:TRAC:Y:RLEV 100 DISP:SEM:VIEW:WIND:TRAC:Y:RLEV? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRument:SElect to set the mode. |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changed to Off. |
| Preset | All except CDMA 1xEVDO: 10.0 dBm CDMA 1xEVDO: -10.0 dBm |
| State Saved | Saved in instrument state. |
| Min | -250 dBm |
| Max | 250 dBm |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 10.0 dB |
| Instrument S/W Revision | A.01.60 or later |

Attenuation

Accesses a menu of functions that enable you to change attenuation settings. This key has read-back text that describes the total attenuator value.

See AMPTD Y Scale, “Attenuation” on page 1037 in the “Analyzer Setup Functions” section for more information.

| | |
|-------------------------|-----------------------------------|
| Key Path | AMPTD Y Scale, Attenuation |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div

Sets the units-per-division of the vertical scale in the logarithmic display. When Auto Scaling is On, the scale per division value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|--|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:PDIVi sion <rel_ampl> :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:PDIVi sion? |
| Example | DISP:SEM:VIEW:WIND:TRAC:Y:PDIV 15dB DISP:SEM:VIEW:WIND:TRAC:Y:PDIV? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELect to set the mode. |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off. |
| Preset | 10 dB |
| State Saved | Saved in instrument state. |
| Min | 0.10 dB |
| Max | 20.00 dB |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1, 2, 5, 10... |
| Instrument S/W Revision | A.01.60 or later |

Presel Center

See AMPTD Y Scale, “Presel Center” on page 1048 in the “Common Measurement Functions” section for more information.

Presel Adjust

See AMPTD Y Scale, “Preselector Adjust” on page 1050 in the “Common Measurement Functions” section for more information.

Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See “Internal Preamp” on page 1051 under AMPTD Y Scale in the “Common Measurement Functions” section for more information.

Ref Position

Positions the reference level at the top, center or bottom of the Y scale display. Changing the reference position does not affect the reference level value.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOSi tion TOP CENTer BOTTom :DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOSi tion? |
| Example | DISP:SEM:VIEW:WIND:TRAC:Y:RPOS BOTT DISP:SEM:VIEW:WIND:TRAC:Y:RPOS? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use INSTRument:SElect to set the mode. |
| Preset | TOP |
| State Saved | Saved in instrument state. |
| Range | Top Ctr Bot |
| Instrument S/W Revision | A.01.60 or later |

Auto Scaling

Toggles the Auto Scaling function between On and Off.

When Auto Scaling is On and the Restart front-panel key is pressed, the analyzer automatically determines the scale per division and reference values based on the measurement results. When you set a

value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|--|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISP:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPL e 0 1 ON OFF :DISP:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPL e? |
| Example | DISP:SEM:VIEW:WIND:TRAC:Y:COUP OFF DISP:SEM:VIEW:WIND:TRAC:Y:COUP? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | When Auto Scaling is On, upon pressing the Restart front-panel key, this function automatically determines the scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off. |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Auto Couple

See “**AUTO COUPLE**” on page 1055 in the section “Common Measurement Functions” for more information.

BW

This key is unavailable for this measurement. The BW key will display a blank key menu when pressed.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Cont

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1063 in the section "Common Measurement Functions" for more information.

FREQ Channel

See “[FREQ/Channel](#)” on page 1059 in the section "Common Measurement Functions" for more information.

Input/Output

See “[Input/Output](#)” on page 1065 in the section "Common Measurement Functions" for more information.

Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to Normal and places it at the center of the display. You can turn on and control up to 12 markers.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Marker Type

Sets the marker control mode to Normal and Off. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area. The marker X axis value entered in the active function area will display the marker value to its full entered precision. If the current control mode for the measurement is Off, there is no active function and the active function is turned off.

| | |
|-----------------------|--|
| Key Path | Marker |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:SEMask:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSITION OFF :CALCulate:SEMask:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE? |
| Example | CALC:SEM:MARK:MODE POS CALC:SEM:MARK:MODE? |
| Notes | If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X Axis Value appears on the Active Function area. Default Active Function: the active function for the selected marker's current control mode. Note that if the current control mode is Off, there is no active function and the active function is turned off. Active Function Display: the marker X axis value entered in the active function area will display the marker value to its full entered precision. |
| Preset | OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF OFF |

Spectrum Emission Mask Measurement Marker

| | |
|-------------------------|----------------------------|
| State Saved | Saved in instrument state. |
| Range | Normal Off |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is Off, but is the SCPI equivalent of entering an X value if the control mode is **Normal**.

| | |
|-------------------------|--|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:SEMAsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : X <freq> :CALCulate:SEMAsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : X? |
| Example | CALC:SEM:MARK3:X 1.0 GHz CALC:SEM:MARK3:X? |
| Notes | If no suffix is sent it will use the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error “Invalid suffix” will be generated. The query returns the marker’s absolute X Axis value if the control mode is Normal . The query is returned in the fundamental units for the current marker X Axis scale. If the marker is Off the response is not a number. When a Marker is turned on, it is placed center of the screen on the trace. Therefore the default value depends on instrument condition, although the Preset/Default is defined as 1.5 GHz. |
| Preset | After a preset, all Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN). |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | No |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal**, except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for setting

the value of the marker.

| | |
|-------------------------|---|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:SEMask:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X: POSITION <real> :CALCulate:SEMask:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X: POSITION? |
| Example | CALC:SEM:MARK10:X:POS 1001 CALC:SEM:MARK10:X:POS? |
| Notes | The query returns the marker's absolute X Axis value in trace points if the control mode is Normal . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points. If the marker is Off the response is not a number. When a Marker is turned on, it is placed center of the screen on the trace. Therefore the default value depends on the instrument condition although the Preset/Default is defined as 6507 (this value might be the expected value when all the offsets are on). |
| Preset | After a preset, all Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN). |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | No |
| Instrument S/W Revision | A.01.60 or later |

Marker Y Axis Value (Remote Command only)

Returns the marker Y Axis value in the current marker Y Axis unit.

| | |
|-----------------------|---|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:SEMask:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :Y? |
| Example | CALC:SEM:MARK11:Y 10 dBm CALC:SEM:MARK11:Y? |
| Notes | Since the result value is always calculated from acquisition data, the default value is arbitrary, although the Preset/Default values is defined. |
| Preset | Result dependent on markers setup and signal source |
| State Saved | No |

Spectrum Emission Mask Measurement Marker

| | |
|-------------------------|------------------|
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Couple Markers

When this function is true, moving any marker causes an equal X Axis movement of every other marker which is not **Off**. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

| | |
|-------------------------|--|
| Key Path | Marker |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:SEMask:MARKer:COUPle[:STATe] ON OFF 1 0 :CALCulate:SEMask:MARKer:COUPle[:STATe]? |
| Example | CALC:SEM:MARK:COUP ON CALC:SEM:MARK:COUP? |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

All Markers Off

Turns all active markers off in all views.

| | |
|-------------------------|---|
| Key Path | Marker |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:SEMask:MARKer:AOff |
| Example | CALC:SEM:MARK:AOff |
| Instrument S/W Revision | A.01.60 or later |

Marker Function

There are no 'Marker Functions' supported in Spectrum Emission Mask so this front-panel key will display a blank menu key when pressed.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Marker To

There is no 'Marker To' functionality supported in Spectrum Emission Mask so this front-panel key will display a blank menu key when pressed.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Meas

See “[Meas](#)” on page 1115 in the section "Common Measurement Functions" for more information.

Meas Setup

Displays the setup menu for the currently selected measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Avg/Hold Num

Toggles averaging On or Off in addition to enabling you to set the number of measurement averages used to calculate the measurement result. The average will be displayed at the end of each sweep. After the specified number of average counts, the average mode (termination control) setting determines the average action.

In the remote mode, use the Average State command to turn averaging on or off.

| | |
|-------------------------|--|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe]:SEMAsk:AVERAge:COUNT <integer> [:SENSe]:SEMAsk:AVERAge:COUNT? [:SENSe]:SEMAsk:AVERAge[:STATe] ON OFF 1 0 [:SENSe]:SEMAsk:AVERAge[:STATe]? |
| Example | SEM:AVER:COUN 100 SEM:AVER:COUN? SEM:AVER ON SEM:AVER? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELect to set the mode. |
| Preset | 10 OFF |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 10000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Yes |
| Instrument S/W Revision | A.01.60 or later |

Meas Type

Accesses a menu that enables you to select one of the following measurement reference types:

Total Pwr Ref – Sets the reference to the total carrier power and the measured data is shown in dBc and dBm.

PSD Ref – Sets the reference to the mean power spectral density of the carrier and the measured data is shown in dB and dBm/Hz.

Spectrum Peak Ref – Sets the reference to the spectrum peak power of the carrier and the measured data is shown in dB and dBm.

| | |
|-------------------------|--|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe] :SEMAsk:TYPE PSDRef TPreF SPRef [:SENSe] :SEMAsk:TYPE ? |
| Example | SEM:TYPE PSDR SEM:TYPE? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | SA, WCDMA, C2K, TD-SCDMA, 1xEVDO: TPreF WIMAX OFDMA: SPRef |
| State Saved | Saved in instrument state. |
| Range | Total Pwr Ref PSD Ref Spectrum Peak Ref |
| Instrument S/W Revision | A.01.60 or later |

Ref Channel

Accesses a menu that enables you to set up the measurement parameters used to calculate the power in the reference channel.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

Integ BW

Specifies the integration bandwidth used to calculate the power in the reference channel.

| | |
|----------|---|
| Key Path | Meas Setup, Ref Chan |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |

Spectrum Emission Mask Measurement Meas Setup

| | |
|-------------------------|--|
| Remote Command | [:SENSe]:SEMask:BANDwidth[1] 2:INTEgration <bandwidth> [:SENSe]:SEMask:BANDwidth[1] 2:INTEgration? |
| Example | SEM:BAND:INT 10 MHz SEM:BAND:INT? |
| Notes | 10% . 100% of Channel Span Parameter Value Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode or cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRument:SElect to set the mode. |
| Dependencies/Couplings | Cannot be higher than the channel Span. If lower than 1/10 of channel Span, then the channel Span is reduced to be 10 times the Integ BW. |
| Preset | SA: 3.84 MHz WCDMA: 3.84 MHz 3.84 MHz C2K: 1.23 MHz 1.23 MHz WIMAX OFDMA: 10 MHz 10 MHz TD-SCDMA: 1.28 MHz 1.28 MHz 1xEVDO: 1.23MHz |
| State Saved | Saved in instrument state. |
| Min | 100.0 kHz |
| Max | 50 MHz |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1,1.5,2,3,5,7.5,10...sequence |
| Instrument S/W Revision | A.01.60 or later |

Span

Specifies the span used to calculate the power in the reference channel.

| | |
|-----------------------|--|
| Key Path | Meas Setup, Ref Chan |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe]:SEMask:FREQuency[1] 2:SPAN <freq> [:SENSe]:SEMask:FREQuency[1] 2:SPAN? |
| Example | SEM:FREQ:SPAN 3MHz SEM:FREQ:SPAN? |

| | |
|-------------------------|---|
| Notes | Frequency sub op code, 1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRument:SElect to set the mode. |
| Dependencies/Couplings | Range 1 kHz to 50 MHz (although restricted by Integ BW). If you set the channel Span lower than channel Integ BW, they will both track each other. As you increase the channel Span, the Integ BW will also increase if it is less than 1/10 of the channel Span. |
| Preset | SA: 5.0 MHz WCDMA: 5.0 MHz 5.0 MHz C2K: 1.25 MHz 1.25 MHz WIMAX OFDMA: 10 MHz 10 MHz TD-SCDMA: 1.6 MHz 1.6 MHz 1xEVDO: 1.25MHz |
| State Saved | Saved in instrument state. |
| Min | 1 kHz |
| Max | 50 MHz |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1,1.5,2,3,5,7.5,10...sequence |
| Instrument S/W Revision | A.01.60 or later |

Sweep Time

Sets the sweep time used to calculate the power in the reference channel. Sweep Time can be set manually or put in auto mode.

| | |
|-----------------------|--|
| Key Path | Meas Setup, Ref Chan |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :SEMask :SWEep [1] 2:TIME <time> [:SENSE] :SEMask :SWEep [1] 2:TIME? [:SENSE] :SEMask :SWEep [1] 2:TIME:AUTO OFF 0 ON 1 [:SENSE] :SEMask :SWEep [1] 2:TIME:AUTO? |
| Example | SEM:SWE:TIME 9ms SEM:SWE:TIME? SEM:SWE:TIME:AUTO OFF SEM:SWE:TIME:AUTO? |

Spectrum Emission Mask Measurement Meas Setup

| | |
|-------------------------|---|
| Notes | Sweep Time sub op code, 1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | When the Sweep Time is set manually, Auto is set to OFF. Value is coupled with Channel Detector selection, Channel Resolution BW, Channel Video BW if the state is Auto. When set to Auto, the Sweep Time is automatically calculated |
| Preset | Automatically calculated ON |
| State Saved | Saved in instrument state. |
| Min | 1 ms |
| Max | 10 s |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1,1.5,2,3,5,7.5,10...sequence |
| Instrument S/W Revision | A.01.60 or later |

Res BW

Sets the resolution bandwidth used to calculate the power in the reference channel. The Channel Resolution BW can be set manually or put in to auto mode.

| | |
|-----------------------|---|
| Key Path | Meas Setup, Ref Chan |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :SEMAsk:BA NDwidth [1] 2 [:RESolution] <bandwidth> [:SENSe] :SEMAsk:BA NDwidth [1] 2 [:RESolution] ? [:SENSe] :SEMAsk:BA NDwidth [1] 2 [:RESolution] :AUTO OFF ON 1 0 [:SENSe] :SEMAsk:BA NDwidth [1] 2 [:RESolution] :AUTO? |
| Example | SEM:BA ND 100 kHz SEM:BA ND? SEM:BA ND:AUTO ON SEM:BA ND:AUTO? |
| Notes | Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |

| | |
|-------------------------|---|
| Dependencies/Couplings | When Res BW is set manually, Channel Resolution BW Mode is set to MANual. Value is coupled with Channel Detector selection, Channel Sweep Time, Channel Video BW. When set to Auto, the resolution bandwidth is automatically calculated. |
| Preset | SA: 100 kHz WCDMA: 75 kHz C2K: 24 kHz WIMAX OFDMA: 100 kHz TD-SCDMA: 30 kHz 1xEVDO: 30.0KHz OFF |
| State Saved | Saved in instrument state. |
| Min | 1 Hz |
| Max | 8 MHz |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1,3,10 sequence |
| Instrument S/W Revision | A.01.60 or later |

Video BW

Sets the video bandwidth used to calculate the power in the reference channel. The Channel Video BW can be set manually or put in to auto mode.

| | |
|-----------------------|---|
| Key Path | Meas Setup, Ref Chan |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :SEMAsk :BANDwidth [1] 2 :VIDEo <bandwidth> [:SENSE] :SEMAsk :BANDwidth [1] 2 :VIDEo? [:SENSE] :SEMAsk :BANDwidth [1] 2 :VIDEo :AUTO OFF ON 1 0 [:SENSE] :SEMAsk :BANDwidth [1] 2 :VIDEo :AUTO? |
| Example | SEM:BAND:VID 100 kHz SEM:BAND:VID? SEM:BAND:VID:AUTO ON SEM:BAND:VID:AUTO? |

Spectrum Emission Mask Measurement Meas Setup

| | |
|-------------------------|--|
| Notes | Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | When Video BW is set manually, Channel Video BW Mode is set to MANual Value is coupled with Channel Detector selection, Channel Sweep Time, Channel Resolution BW. When set to Auto, the video bandwidth is automatically calculated. |
| Preset | SA: 100 kHz WCDMA: 75 kHz C2K: 24 kHz WIMAX OFDMA: 30 kHz TD-SCDMA: 300 kHz 1xEVDO: 300.0kHz ON |
| State Saved | Saved in instrument state. |
| Min | 1 Hz |
| Max | 50 MHz |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1,3,10 sequence |
| Instrument S/W Revision | A.01.60 or later |

VBW/RBW

Sets the Video BW/Resolution BW Ratio to calculate the Channel Resolution BW and Channel Video BW. The VBW/RBW Ratio can be set manually or put in to auto mode.

| | |
|-----------------------|--|
| Key Path | Meas Setup, Ref Chan |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA mode, 1xEVDO |
| Remote Command | [:SENSe] :SEMAsk :BANDwidth [1] 2 :VIDeo :RATio <real> [:SENSe] :SEMAsk :BANDwidth [1] 2 :VIDeo :RATio [:SENSe] :SEMAsk :BANDwidth [1] 2 :VIDeo :RATio :AUTO OFF ON 1 0 [:SENSe] :SEMAsk :BANDwidth [1] 2 :VIDeo :RATio :AUTO? |

| | |
|-------------------------|--|
| Example | SEM:BAND:VID:RAT 0.1 SEM:BAND:VID:RAT? SEM:BAND:VID:RAT:AUTO ON SEM:BAND:VID:RATIO:AUTO? |
| Notes | Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode. |
| Dependencies/Couplings | When Res BW is set manually, Mode coupling is set to MANual When set to Auto, the VBW/RBW Ratio is automatically calculated. |
| Preset | SA, WCDMA, C2K: 1.0 WIMAX OFDMA: 0.3 TD-SCDMA: 10 1xEVDO: 10.0 OFF |
| State Saved | Saved in instrument state. |
| Min | 0.00001 |
| Max | 3000000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1,3,10 sequence |
| Instrument S/W Revision | A.01.60 or later |

Power Ref

Sets the power reference in the carrier that will be used to compute the relative values for the offsets.

| | |
|-------------------------|----------------------------|
| Key Path | Meas Setup Ref Chan |
| Instrument S/W Revision | A.01.60 or later |

Total Pwr Ref

Sets the power in the carrier (ref channel) that will be used to compute the relative power values for the offsets. When the state is set to auto, this value is set to the measured carrier reference power. When set to manual, the result takes on the last measured value, or can be manually entered.

| | |
|----------|---|
| Key Path | Meas Setup, Ref Chan, Power Ref |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |

Spectrum Emission Mask Measurement Meas Setup

| | |
|-------------------------|---|
| Remote Command | <pre>[:SENSe]:SEMask:CARRier[:POWer] <real> [:SENSe]:SEMask:CARRier[:POWer]? [:SENSe]:SEMask:CARRier:AUTO[:STATe] OFF ON 1 0 [:SENSe]:SEMask:CARRier:AUTO[:STATe]?</pre> |
| Example | <pre>SEM:CARR 100dBm SEM:CARR? SEM:CARR:AUTO OFF SEM:CARR:AUTO?</pre> |
| Notes | <p>The min and max values given are for Meas Type = Total Pwr Ref.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRument:SElect to set the mode.</p> <p>This BAF SCPI command is available in all the Meas Type case.</p> |
| Dependencies/Couplings | <p>This "Total Power Ref" parameter is coupled with the "Meas Type" parameter. The softkey would be active if the Meas Type is set to Total Power Ref. Otherwise, grayout.</p> |
| Preset | Measured carrier reference power |
| State Saved | Saved in instrument state. |
| Min | -200 dBm |
| Max | 200 dBm |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

PSD Ref

Sets the power spectral density in the carrier that is used to compute the relative power spectral density values for the offsets when Meas Type is set to PSD Ref. When the state is set to auto, this will be set to the measured carrier power spectral density.

| | |
|-----------------------|--|
| Key Path | Meas Setup, Ref Chan, Power Ref |
| Mode | SA, WCDMA, C2K , WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | <pre>[:SENSe]:SEMask:CARRier:CPSD <real> [:SENSe]:SEMask:CARRier:CPSD?</pre> |
| Example | <pre>SEM:CARR:CPSD -80 SEM:CARR:CPSD?</pre> |

| | |
|-------------------------|---|
| Notes | <p>Although the default value is defined, the value is recalculated by the measurement result just after completing the measurement.</p> <p>Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode.</p> |
| Dependencies/Couplings | <p>See Couplings</p> <p>This "PSD Ref" parameter is coupled with the "Meas Type" parameter. The softkey will be active if the Meas Type is set to PSD Ref. Otherwise, grayout.</p> |
| Preset | Measured carrier PSD reference power |
| State Saved | Saved in instrument state. |
| Min | -200 |
| Max | 200 |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Spectrum Peak Ref

Sets the spectrum peak power in the carrier that is used to compute the relative power spectral density values for the offsets when Meas Type is set to Spectrum Peak Ref. When the state is set to auto, this will be set to the measured carrier spectrum peak power. When set to manual, the result takes on the last measured value, or can be manually entered

| | |
|------------------------|---|
| Key Path | Meas Setup, Ref Chan, Power Ref |
| Mode | SA, WCDMA, C2K , WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | <pre>[:SENSE] :SEMAsk :CARRier :PEAK [:POWER] <real> [:SENSE] :SEMAsk :CARRier :PEAK [:POWER] ?</pre> |
| Example | <pre>SEM:CARR:PEAK -80 SEM:CARR:PEAK:POWER?</pre> |
| Notes | <p>Although the default value is defined, the value is recalculated by the measurement result just after completing the measurement.</p> <p>Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode.</p> |
| Dependencies/Couplings | <p>See Couplings</p> <p>This "Spectrum Peak Ref" parameter is coupled with the "Meas Type" parameter. This softkey would be active if the "Meas Type" is set to "Spectrum Peak Ref". Otherwise, grayout.</p> |

Spectrum Emission Mask Measurement Meas Setup

| | |
|-------------------------|--|
| Preset | Measured carrier Spectrum Peak reference power |
| State Saved | Saved in instrument state. |
| Min | -200 |
| Max | 200 |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Offsets/Limits

Accesses a menu that enables you to set up the measurement parameters for the offset pairs. For example, you can assign the start and stop frequencies, select the resolution bandwidth, and set the sweep time.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

Offset

Selects the offset pairs (upper and lower) that affect the menu keys, and displays the memory selection menu from A to F. The memory selection menu allows you to store up to 5 sets of parameter values for the offset pairs, such as Start Freq, Stop Freq, Sweep Time, Res BW, Meas BW, Abs Start, and Abs Stop. Press Offset until the letter of the desired offset (A, B, C, D, E, or F) is underlined. Only one selection at a time is shown on this menu key label.

| | |
|-------------------------|---|
| Key Path | Meas Setup, Offsets/Limits |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Preset | A |
| Range | A B C D E F |
| Instrument S/W Revision | A.01.60 or later |

Start Freq

Specifies the start frequency for the currently selected offset and enables you to toggle this function On or Off for each offset.

| | |
|----------|---|
| Key Path | Meas Setup, Offset/Limits |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |

| | |
|------------------------|---|
| Remote Command | <pre>[:SENSe] :SEMask:OFFSet [1] 2 :LIST:FREQuency:STARt <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSe] :SEMask:OFFSet [1] 2 :LIST:FREQuency:STARt? [:SENSe] :SEMask:OFFSet [1] 2 :LIST:STATe ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0 [:SENSe] :SEMask:OFFSet [1] 2 :LIST:STATe?</pre> |
| Example | <pre>SEM:OFFS2:LIST:FREQ:STAR 100 kHz SEM:OFFS2:LIST:FREQ:STAR? SEM:OFFS:LIST:STAT ON SEM:OFFS:LIST:STAT?</pre> |
| Notes | <p>Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.</p> |
| Dependencies/Couplings | <p>Coupled to Stop Freq. Start cannot go above the stop freq less 100Hz. Similarly Stop freq cannot go below Start Freq plus 100Hz.</p> |

Spectrum Emission Mask Measurement Meas Setup

| | |
|-------------------------|--|
| Preset | <p>SA: 2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz</p> <p>WCDMA: 2.515 MHz, 2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz 2.515MHz, 4.000 MHz, 7.500 MHz, 8.500 MHz, 12.5 MHz, 15 MHz</p> <p>C2K: 765.0 kHz, 795.0 kHz, 1.995 MHz, 3.2531 MHz, 7.500 MHz, 7.5 MHz 900.0 kHz, 1.995 MHz, 2.2531 MHz, 8.500 MHz, 12.50 MHz, 12.5 MHz</p> <p>WIMAX OFDMA: 4.75MHz,5.45MHz,9.75MHz,14.75MHz,19.75MHz,24.75MHz 4.75MHz,5.45MHz,9.75MHz,14.75MHz,19.75MHz,24.75MHz</p> <p>TD-SCDMA: 815kHz,1015kHz,1815kHz,2.3MHz, ,2.3MHz,,2.3MHz 815kHz,1815kHz,2.9MHz, 2.9MHz,2.9MHz,2.9MHz</p> <p>1xEVDO: 765.0kHz, 795.0kHz, 1.995MHz, 3.253125MHz, 7.5MHz, 7.5MHz 900.0kHz, 1.995MHz, 1.995MHz, 1.995MHz, 1.995MHz, 1.995MHz, 1.995MHz</p> <p>SA: ON, ON, ON, ON, ON, OFF</p> <p>WCDMA: ON, ON, ON, ON, ON, OFF ON, ON, ON, ON, OFF, OFF</p> <p>C2K: ON, ON, ON, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</p> <p>WIMAX OFDMA: ON, ON, ON, OFF, OFF, OFF ON, ON, ON, OFF, OFF, OFF</p> <p>TD-SCDMA: ON, ON, ON, ON, OFF, OFF ON, ON, ON, OFF, OFF, OFF</p> <p>1xEVDO: ON, ON, ON, OFF, OFF, OFF ON, ON, OFF, OFF, OFF, OFF</p> |
| State Saved | Saved in instrument state. |
| Min | 0 Hz |
| Max | Stop Freq minus (-) 100 Hz (for that offset) |
| Test UP/DOWN | Not supported in Zorro-1. 100 kHz |
| Instrument S/W Revision | A.01.60 or later |

Stop Freq

Specifies the stop frequency for the currently selected offset.

| | |
|----------------|---|
| Key Path | Meas Setup, Offset/Limits |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA |
| Remote Command | <pre>[:SENSE] :SEMAsk:OFFSet [1] 2 :LIST:FREQuency:STOP <freq>, <freq>, <freq>, <freq>, <freq>, <freq></pre> <pre>[:SENSE] :SEMAsk:OFFSet [1] 2 :LIST:FREQuency:STOP?</pre> |

| | |
|-------------------------|---|
| Example | SEM:OFFS:LIST:FREQ:STOP 100 kHz SEM:OFFS:LIST:FREQ:STOP? |
| Notes | Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode. |
| Dependencies/Couplings | Coupled to Start Freq. Start cannot go above the stop freq less 100Hz. Similarly Stop freq cannot go below Start Freq plus 100Hz. |
| Preset | SA: 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz WCDMA:2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz, 15.0 MHz 3.485 MHz, 7.500 MHz, 8.500 MHz, 12.00 MHz, 15.00 MHz, 18.0 MHz C2K: 795.0 kHz, 1.995 MHz, 4.015 MHz, 4.0031 MHz, 12.50 MHz, 12.5 MHz 1.995 MHz, 4.015 MHz, 4.0031 MHz, 12.00 MHz, 15.00 MHz, 15.0 MHz WIMAX OFDMA: 5.45MHz,9.75MHz,14.75MHz,19.75MHz,24.75MHz,29.75MHz 5.45MHz,9.75MHz,14.75MHz,19.75MHz,24.75MHz,29.75MHz TD-SCDMA: 1015kHz,1815kHz,2.3MHz,4MHz, 4MHz,4MHz 1785kHz,2385kHz,3.5MHz, 3.5MHz ,3.5MHz ,3.5MHz 1xEVDO: 795.0kHz, 1.995MHz, 4.015MHz, 4.003125MHz, 12.5MHz, 12.5MHz 1.995MHz, 4.015MHz, 4.015MHz, 4.015MHz, 4.015MHz, 4.015MHz |
| State Saved | Saved in instrument state. |
| Min | Start Freq plus (+) 100 Hz (for that offset) |
| Max | 500 MHz |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Not supported in Zorro-1. 100 kHz |
| Instrument S/W Revision | A.01.60 or later |

Sweep Time

Specifies the sweep time for the currently selected offset and enables you to toggle this function On or Off for each offset.

| | |
|----------|---|
| Key Path | Meas Setup, Offset/Limits |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |

Spectrum Emission Mask Measurement Meas Setup

| | |
|-------------------------|---|
| Remote Command | <pre>[:SENSe] :SEMask:OFFSet [1] 2 :LIST:SWEep:TIME <time>, <time>, <time>, <time>, <time>, <time> [:SENSe] :SEMask:OFFSet [1] 2 :LIST:SWEep:TIME? [:SENSe] :SEMask:OFFSet [1] 2 :LIST:SWEep:TIME:AUTO ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0 [:SENSe] :SEMask:OFFSet [1] 2 :LIST:SWEep:TIME:AUTO?</pre> |
| Example | <pre>SEM:OFFS2:LIST:SWE:TIME 1.0 ms, 3.4 ms, 2.08 ms, 1.0 ms, 1.0 ms, 1.0 ms SEM:OFFS2:LIST:SWE:TIME? SEM:OFFS2:LIST:SWE:TIME:AUTO ON, ON, ON, ON, OFF, OFF SEM:OFFS2:LIST:SWE:TIME:AUTO?</pre> |
| Notes | <p>Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.</p> |
| Dependencies/Couplings | When the sweep time is set manually, Mode coupling is set to MANual |
| Preset | Automatically calculated ON,ON,ON,ON,ON,ON |
| State Saved | Saved in instrument state. |
| Min | 1 ms |
| Max | 10 s |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Not supported in Zorro-1. 1,1.5,2,3,5,7.5,10...sequence |
| Instrument S/W Revision | A.01.60 or later |

Offset Side

Specifies which offset side to measure.

You can turn off (not use) specific offsets with [:SENSe]:SEMask:OFFSet[n]:LIST:STATe.

BOTH - both of the negative (lower) and positive (upper) sidebands

NEGative - negative (lower) sideband only

POSitive - positive (upper) sideband only

Key Path **Meas Setup, Offset/Limits**

| | |
|-------------------------|---|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :SEMAsk:OFFSet [1] 2 :LIST:SIDE BOTH NEGative POSitive,BOTH NEGative POSitive,BOTH NEGative POSitive,BOTH NEGative POSitive,BOTH NEGative POSitive,BOTH NEGative POSitive,BOTH NEGative POSitive [:SENSE] :SEMAsk:OFFSet [1] 2 :LIST:SIDE? |
| Example | SEM:OFFS:LIST:SIDE BOTH SEM:OFFS:LIST:SIDE? |
| Notes | OFFSet1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | BOTH, BOTH, BOTH, BOTH, BOTH, BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH |
| State Saved | Saved in instrument state. |
| Range | Neg Both Pos |
| Instrument S/W Revision | A.01.60 or later |

Res BW

Specifies which Resolution BW filter to use when measuring the currently selected offset.

Offset Res BW Mode allows the instrument to determine the optimum Resolution BW filter to use when measuring the currently selected offset.. When changing the Meas BW parameter, if the Res BW needs to be changed to adhere to the rule

$$(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset}),$$

where N is the multiplier, this setting will automatically be changed to manual.

| | |
|-----------------------|--|
| Key Path | Meas Setup, Offset/Limits |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO mode |
| Remote Command | [:SENSE] :SEMAsk:OFFSet [1] 2 :LIST:BANDwidth[:RESolution] <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth>, <bandwidth> [:SENSE] :SEMAsk:OFFSet [1] 2 :LIST:BANDwidth[:RESolution] ? [:SENSE] :SEMAsk:OFFSet [1] 2 :LIST:BANDwidth[:RESolution] :AUTO OFF ON 1 0, OFF ON 1 0, OFF ON 1 0, OFF ON 1 0, OFF ON 1 0, OFF ON 1 0 [:SENSE] :SEMAsk:OFFSet [1] 2 :LIST:BANDwidth[:RESolution] :AUTO? |

Spectrum Emission Mask Measurement Meas Setup

| | |
|-------------------------|---|
| Example | SEM:OFFS2:LIST:BAND 30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz SEM:OFFS2:LIST:BAND? SEM:OFFS:LIST:BAND:AUTO 1,1,1,1,1,1 SEM:OFFS:LIST:BAND:AUTO? |
| Notes | Comma separated list of 6 values. Sub op code OFFSet1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRument:SElect to set the mode. |
| Dependencies/Couplings | Coupled to Start and Stop offset and Meas BW multiplier. This parameter must adhere to the rule $(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset})$, where N is the multiplier. If the multiplier is changed, the Res BW will be changed to ensure this. When set manually, Res BW Coupling is set to manual. |
| Preset | SA: 30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz WCDMA: 30.00 kHz, 30.00 kHz, 30.00 kHz, 100.00 kHz, 1.000 MHz, 1.00 MHz 30.00 kHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.00 MHz C2K: 3.00 kHz, 30.00 kHz, 30.00 kHz, 6.2 kHz, 1.000 MHz, 1.00 MHz 30.00 kHz, 30.00 kHz, 6.2 kHz, 1.000 MHz, 1.000 MHz, 1.00 MHz WIMAX OFDMA: 100 KHz, 100 KHz, 100 KHz, 100 KHz, 100 KHz, 100 KHz 100 KHz, 100 KHz, 100 KHz, 100 KHz, 100 KHz, 100 KHz TD-SCDMA: 30 kHz, 30 kHz, 30 kHz, 50 kHz, 1 MHz, 1 MHz 30 kHz, 30 kHz, 50 kHz, 1 MHz, 1 MHz, 1 MHz 1xEVDO: 30.00 kHz, 30.00 kHz, 30.00 kHz, 6.2 kHz, 1.000 MHz, 1.000 MHz 30.00 kHz, 30.00 kHz, 30.00 kHz, 30.00 kHz, 30.00 MHz, 30.00 MHz OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF |
| State Saved | Saved in instrument state. |
| Min | 1 Hz |
| Max | 8 MHz |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Not supported in Zorro-1. 1,3,10 sequence |
| Instrument S/W Revision | A.01.60 or later |

Meas BW

Allows you to specify a multiplier of Res BW for the measurement integration bandwidth.

Meas BW is multiplier integer number. It shows a ratio between Integration BW and Resolution BW of the measurement result.

$$\text{Integ BW} = \text{Meas BW} * \text{Resolution BW}$$

Integration BW is desired resolution bandwidth and Resolution BW is actual bandwidth for sweep. Measurement sweeps with Resolution BW and Meas BW compensates sweep resolution bandwidth to Integration BW.

If you set this parameter greater than 1, you can set Resolution BW narrower to avoid carrier power leakage effect to the offset power integration.

| | |
|-------------------------|---|
| Key Path | Meas Setup, Offset/Limits |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe]:SEMask:OFFSet [1] 2:LIST:BANDwidth:IMULti <integer>, <integer>, <integer>, <integer>, <integer>, <integer> [:SENSe]:SEMask:OFFSet [1] 2:LIST:BANDwidth:IMULti? |
| Example | SEM:OFFS2:LIST:BAND:IMUL 1,1,1,1,1,1 SEM:OFFS2:LIST:BAND:IMUL? |
| Notes | Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode. |
| Dependencies/Couplings | This parameter must adhere to the rule $(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset})$, where N is the multiplier. If the Res Bw is changed, the multiplier will be changed to ensure this. |
| Preset | SA: 1, 1, 1, 1, 1, 1 WCDMA: 1, 1, 1, 10, 1, 1 1, 1, 1, 1, 1, 1 C2K: 10, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1 WIMAX OFDMA: 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1 TD-SCDMA:1, 1, 1, 20, 1, 1 1, 1, 20, 1, 1, 1 1xEVDO: 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 1000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Not supported in Zorro-1. 1 |
| Instrument S/W Revision | A.01.60 or later |

Spectrum Emission Mask Measurement
Meas Setup

Video BW

Changes the analyzer post-detection filter.

| | |
|-----------------------|---|
| Key Path | Meas Setup, Offset/Limits |
| Mode | SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | <pre>[:SENSE] :SEMAsk:OFFSet [1] 2 :LIST:BA NDwidth:VIDeo <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSe] :SEMAsk:OFFSet [1] 2 :LIST:BA NDwidth:VIDeo? [:SENSe] :SEMAsk:OFFSet [1] 2 :LIST:BA NDwidth:VIDeo:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 [:SENSe] :SEMAsk:OFFSet [1] 2 :LIST:BA NDwidth:VIDeo:AUTO?</pre> |
| Example | <pre>SEM:OFFS2:LIST:BA ND:VID 3.00 kHz, 3.00 kHz, 3.00 kHz, 100.0 kHz,100.0 kHz, 100.0 kHz SEM:OFFS2:LIST:BA ND:VID? SEM:OFFS2:LIST:BA ND:VID:AUTO ON, ON, ON, ON, ON, ON SEM:OFFS2:LIST:BA ND:VID:AUTO?</pre> |
| Notes | <p>Comma separated list of 6 values. Sub op code OFFSet1is for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode.</p> |
| Preset | <pre>SA: 300 Hz, 300 Hz, 300 Hz, 10 kHz, 10 kHz, 10 kHz WCDMA: 300 Hz, 300 Hz, 300 Hz, 1 kHz, 10 kHz, 10 kHz 300 Hz, 10 kHz, 10 kHz, 10 kHz, 10 kHz, 10 kHz C2K: 30 Hz, 300 Hz, 300 Hz, 62 Hz, 10 kHz, 10 kHz 300 Hz, 300 Hz, 62 Hz, 10 kHz, 10 kHz, 10 kHz WIMAX OFDMA: 30 kHz, 30 kHz, 30 kHz, 30 kHz, 30 kHz, 30 kHz TD-SCDMA: 300 kHz, 300 kHz, 300 kHz, 500 kHz, 1 MHz, 1 MHz 300 kHz, 300 kHz, 500 kHz, 1 MHz, 1 MHz, 1 MHz 1xEVDO: 300kHz, 300kHz, 300kHz, 62.5kHz, 10MHz, 10MHz 300kHz, 300kHz, 300kHz, 300kHz, 300kHz ON, ON, ON, ON, ON, ON ON, ON, ON, ON, ON, ON</pre> |
| State Saved | Saved in instrument state. |
| Min | 1 Hz |
| Max | 50 MHz |
| Test MIN/MAX/DEF | Yes |

| | |
|-------------------------|--|
| Test UP/DOWN | Not supported in Zorro-1. 1,3,10 sequence |
| Instrument S/W Revision | A.01.60 or later |

VBW/RBW

Selects the ratio between the video and resolution bandwidths.

| | |
|------------------|---|
| Key Path | Meas Setup, Offset/Limits |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | <pre>[:SENSE] :SEMask:OFFSet [1] 2 :LIST:BANDwidth:VIDeo:RATio <real>, <real>, <real>, <real>, <real>, <real> [:SENSe] :SEMask:OFFSet [1] 2 :LIST:BANDwidth:VIDeo:RATio? [:SENSE] :SEMask:OFFSet [1] 2 :LIST:BANDwidth:VIDeo:RATio: AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 [:SENSe] :SEMask:OFFSet [1] 2 :LIST:BANDwidth:VIDeo:RATio: AUTO?</pre> |
| Example | <pre>SEM:OFFS2:LIST:BAND:VID:RAT 0.1, 0.1, 0.1, 0.1, 0.1, 0.1 SEM:OFFS2:LIST:BAND:VID:RAT? SEM:OFFS2:LIST:BAND:VID:RAT:AUTO ON, ON, ON, ON, ON, ON SEM:OFFS2:LIST:BAND:VID:RAT:AUTO?</pre> |
| Notes | <p>Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode.</p> |
| Preset | <pre>SA, WCDMA, C2K: 0.01, 0.01, 0.01, 0.01, 0.01, 0.01 0.01, 0.01, 0.01, 0.01, 0.01, 0.01 WIMAX OFDMA: 0.3, 0.3, 0.3, 0.3, 0.3, 0.3 TD-SCDMA: 10, 10, 10, 10, 1, 1 10, 10, 10, 1, 1, 1 1xEVDO: 10, 10, 10, 10, 10, 10 10, 10, 10, 10, 10, 10 OFF, OFF, OFF, OFF, OFF, OFF OFF, OFF, OFF, OFF, OFF, OFF</pre> |
| State Saved | Saved in instrument state. |
| Min | 0.00001 |
| Max | 3000000 |
| Test MIN/MAX/DEF | Yes |

Spectrum Emission Mask Measurement Meas Setup

| | |
|-------------------------|--|
| Test UP/DOWN | Not supported in Zorro-1. 1,3,10...sequence |
| Instrument S/W Revision | A.01.60 or later |

Limits

Accesses a menu that enables you to set the power limits for start and stop frequencies of the selected offsets.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

Abs Start Sets the absolute power level limit at the start frequency for the selected offset. The absolute power level limit ranges from -200 to +50 dBm.

The fail condition for each offset channel is set remotely by [:SENSe]:SEMAsk:OFFSet[n]:LIST:TEST.

You can turn off (not use) specific offset channels remotely with [:SENSe]:SEMAsk:OFFSet[n]:LIST:STATe.

The SCPI query returns the five (5) sets of real values currently set to the absolute power test limits.

| | |
|------------------------|---|
| Key Path | Meas Setup, Offset/Limits, Limits |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe]:SEMAsk:OFFSet [1] 2:LIST:STARt:ABSolute <real>, <real>, <real>, <real>, <real>, <real> [:SENSe]:SEMAsk:OFFSet [1] 2:LIST:STARt:ABSolute? |
| Example | SEM:OFFS2:LIST:STAR:ABS -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm SEM:OFFS2:LIST:STAR:ABS? |
| Notes | Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | Coupled to Abs Stop if coupling set to "Couple", that is, the Start value is equal to the Stop value. |

| | |
|-------------------------|---|
| Preset | SA, WIMAX OFDMA: -14.00 dBm , -14.00 dBm , -26.00 dBm , -13.00 dBm , -13.00 dBm, -13.00 dBm WCDMA: -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm C2K: -27.00 dBm, -27.00 dBm, -27.00 dBm, -46.00 dBm, -13.00 dBm, -13.00 dBm -70.13 dBm, -70.13 dBm, -35.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm TD-SCDMA: -28 dBm, -28 dBm, -36 dBm, -21 dBm, -21 dBm, -21 dBm -71.3 dBm, -71.3 dBm, -56.07 dBm, -56.07 dBm, -56.07 dBm, -56.07 dBm 1xEVDO: -27.0dBm, -27.00 dBm, -27.00 dBm, -46.00 dBm, -13.00 dBm, -13.00 dBm -70.13 dBm, -70.13 dBm, -70.13 dBm, -70.13 dBm, -70.13 dBm, -70.13 dBm, -70.13 dBm |
| State Saved | Saved in instrument state. |
| Min | -200 dBm |
| Max | 50 dBm |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Not supported in Zorro-1. 10 dB |
| Instrument S/W Revision | A.01.60 or later |

Abs Stop Sets the absolute power level limit at the stop frequency for the selected offset. The absolute power level limit ranges from -200 to +50 dBm. You can also toggle this function between couple and manual. If set to Couple, the **Abs Stop** power level limit is coupled to **Abs Start** to result in a flat limit line. If set to Man, Abs Start and Abs Stop take different values to result in a sloped limit line.

The SCPI query returns the five (5) sets of real values currently set to the offset stop absolute power limits.

| | |
|-----------------------|---|
| Key Path | Meas Setup, Offset/Limits, Limits |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :SEMAsk:OFFSet [1] 2:LIST:STOP:ABSolute <real>, <real>, <real>, <real>, <real>, <real> [:SENSe] :SEMAsk:OFFSet [1] 2:LIST:STOP:ABSolute? [:SENSE] :SEMAsk:OFFSet [1] 2:LIST:STOP:ABSolute:COUPle ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0 [:SENSe] :SEMAsk:OFFSet [1] 2:LIST:STOP:ABSolute:COUPle? |

Spectrum Emission Mask Measurement Meas Setup

| | |
|-------------------------|--|
| Example | <pre>SEM:OFFS:LIST:STOP:ABS -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm SEM:OFFS1:LIST:STOP:ABS? SEM:OFFS:LIST:STOP:ABS:COUP ON, OFF, ON, ON, ON, ON SEM:OFFS:LIST:STOP:ABS:COUP?</pre> |
| Notes | <p>Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRument:SElect to set the mode.</p> |
| Dependencies/Couplings | Coupled to Abs Start if coupling set to “Couple”, that is, the Stop value is equal to the Start value. |
| Preset | <pre>SA, WIMAX OFDMA: -14.00 dBm, -26.00 dBm, -26.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm WCDMA: -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm C2K: -27.00 dBm, -27.00 dBm, -27.00 dBm, -46.00 dBm, -13.00 dBm, -13.00 dBm -70.13 dBm, -70.13 dBm, -35.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm TD-SCDMA: -28 dBm, -36 dBm, -36 dBm, -21 dBm, -21 dBm, -21 dBm -71.3 dBm, -71.3 dBm, -56.07 dBm, -56.07 dBm, -56.07 dBm, -56.07 dBm 1xEVDO: -27dBm, -27.00 dBm, -27.00 dBm, -46.00 dBm, -13.00 dBm, -13.00 dBm -70.13 dBm, -70.13 dBm, -70.13 dBm, -70.13 dBm, -70.13 dBm, -70.13 dBm SA, WIMAX OFDMA: ON, OFF, ON, ON, ON, ON WCDMA: ON, OFF, ON, ON, ON, ON ON, ON, ON, ON, ON, ON C2K: ON, ON, ON, ON, ON, OFF ON, ON, ON, ON, ON, OFF TD-SCDMA: ON, OFF, ON, ON, ON, ON ON, ON, ON, ON, ON, ON 1xEVDO: ON, ON, ON, ON, ON, OFF ON, ON, ON, ON, ON, OFF</pre> |
| State Saved | Saved in instrument state. |
| Min | -200 dBm |
| Max | 50 dBm |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Not supported in Zorro-1. 10 |
| Instrument S/W Revision | A.01.60 or later |

Rel Start Sets a relative power level limit at the start frequency for the selected offset. The relative power level limit ranges from -200 to +50 dBc.

The fail condition is set remotely by [:SENSE]:SEMask:OFFSet[n]:LIST:TEST for each offset channel test.

You can turn off (not use) specific offset channels remotely with [:SENSE]:SEMask:OFFSet[n]:LIST:STATE.

The SCPI query returns the five (5) sets of real values currently set to the relative power test limits.

| | |
|------------------------|--|
| Key Path | Meas Setup, Offset/Limits, Limits |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE]:SEMask:OFFSet [1] 2:LIST:STARt:RCARrier <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl> [:SENSE]:SEMask:OFFSet [1] 2:LIST:STARt:RCARrier? |
| Example | SEM:OFFS:LIST:STAR:RCAR -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB SEM:OFFS:LIST:STAR:RCAR? |
| Notes | See the following table for the default values for each Radio Standard. Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode. |
| Dependencies/Couplings | Coupled to Rel Stop is coupling set to "Couple", that is, Start is made the same as Stop. |
| Preset | SA: -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB WCDMA: -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -33.73 dB, -34.00 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB C2K: -45.00 dB, -45.00 dB, -55.00 dB, -55.00 dB, -55.00 dB, -55.00 dB, -55.00 dB, -42.00 dB, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB WIMAX OFDMA: 0 dB, -25 dB, -32 dB, -50 dB, -50 dB, -50 dB TD-SCDMA: -54.00 dB, -54.00 dB, -62.00 dB, -47.00 dB, -47.00 dB, -47.00 dB, -35.00 dB, -49.00 dB, -49.00 dB, -49.00 dB, -49.00 dB, -49.00 dB 1xEVDO: -45dBc, -45.00 dB, -55.00 dB, -55.00 dB, -55.00 dB, -55.00 dB, -55.00 dB, -42dBc, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB |
| State Saved | Saved in instrument state. |
| Min | -200 dB |
| Max | 50 dB |

Spectrum Emission Mask Measurement Meas Setup

| | |
|-------------------------|---------------------------|
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Not supported in Zorro-1. |
| | 10 |
| Instrument S/W Revision | A.01.60 or later |

Rel Stop Sets a relative power level limit at the stop frequency for the selected offset. The relative power level limit ranges from –200 to +50 dBc.

The fail condition is set remotely by [:SENSE]:SEMAsk:OFFSet[n]:LIST:TEST for each offset channel.

You can turn off (not use) specific offset channels remotely with [:SENSe]:SEMAsk:OFFSet[n]:LIST:STATe.

The SCPI query returns the five (5) sets of real values currently set to the offset stop relative power limits.

| | |
|------------------------|---|
| Key Path | Meas Setup, Offset/Limits, Limits |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | <pre>[:SENSe]:SEMAsk:OFFSet [1] 2:LIST:STOP:RCARrier <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl> [:SENSe]:SEMAsk:OFFSet [1] 2:LIST:STOP:RCARrier? [:SENSe]:SEMAsk:OFFSet [1] 2:LIST:STOP:RCARrier:COUple ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0, ON OFF 1 0 [:SENSe]:SEMAsk:OFFSet [1] 2:LIST:STOP:RCARrier:COUple?</pre> |
| Example | <pre>SEM:OFFS:LIST:STOP:RCAR -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB SEM:OFFS:LIST:STOP:RCAR? SEM:OFFS:LIST:STOP:RCAR:COUP ON, ON, ON, ON, ON, ON SEM:OFFS:LIST:STOP:RCAR:COUP?</pre> |
| Notes | <p>See the following table for the default values for each Radio Standard.</p> <p>Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS.</p> <p>You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRument:SELEct to set the mode.</p> |
| Dependencies/Couplings | Coupled to Rel Start if coupling set to “Couple”, that is, Start is made the same as Stop. |

| | |
|-------------------------|---|
| Preset | <p>SA: -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB</p> <p>WCDMA: -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -48.28 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB, -47.50 dB</p> <p>C2K: -45.00 dB, -45.00 dB, -55.00 dB, -55.00 dB, -55.00 dB, -55.00 dB -42.00 dB, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB</p> <p>WIMAX OFDMA: -25 dB, -32 dB, -50 dB, -50 dB, -50 dB, -50 dB</p> <p>TD-SCDMA: -54.00 dB, -62.00 dB, -62.00 dB, -47.00 dB, -47.00 dB, -47.00 dB -49.00 dB, -64.00 dB, -49.00 dB, -49.00 dB, -49.00 dB, -49.00 dB</p> <p>1xEVDO: -45dB, -45.00 dB, -55.00 dB, -55.00 dB, -55.00 dB, -55.00 dB -42dB, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB, -54.00 dB</p> <p>SA: ON, ON, ON, ON, ON, ON, ON</p> <p>WCDMA: ON, ON, ON, ON, ON, ON, ON OFF, OFF, OFF, ON, ON, ON</p> <p>C2K: ON, ON, ON, ON, ON, OFF ON, ON, ON, ON, ON, OFF</p> <p>WIMAX OFDMA: OFF, OFF, OFF, ON, ON, ON OFF, OFF, OFF, ON, ON, ON</p> <p>TD-SCDMA: ON, OFF, ON, ON, ON, ON OFF,OFF,ON,ON,ON,ON</p> <p>1xEVDO: ON, ON, ON, ON, ON, OFF ON, ON, ON, ON, ON, OFF</p> |
| State Saved | Saved in instrument state. |
| Min | -200 dB |
| Max | 50 dB |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Not supported in Zorro-1. 10 |
| Instrument S/W Revision | A.01.60 or later |

Fail Mask Selects one of the logic keys for fail conditions between the measurement results and the test limits:

Absolute and **Relative** both check the results against the respective limit.

OR checks against both limits, failing if either of the limits is broken.

AND will only display a fail if both of the limits are broken.

The absolute or relative power limit value for each offset channel can be set remotely with [:SENSe]:SEMask:OFFSet[n]:LIST:ABSolute or [:SENSe]:SEMask:OFFSet[n]:LIST:RCARrier.

You can turn off (not use) specific offset channels remotely with [:SENSe]:SEMask:OFFSet[n]:LIST:STAtE.

Key Path **Meas Setup, Offset/Limits, Limits**

Spectrum Emission Mask Measurement Meas Setup

| | |
|-------------------------|---|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | <code>[:SENSE] :SEMask:OFFSet [1] 2 :LIST:TEST ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative, ABSolute AND OR RELative [:SENSE] :SEMask:OFFSet [1] 2 :LIST:TEST?</code> |
| Example | <code>SEM:OFFS:LIST:TEST ABS, ABS, ABS, ABS, ABS, ABS</code> <code>SEM:OFFS:LIST:TEST?</code> |
| Notes | See the following table for the default values for each Radio Standard. Comma separated list of 6 values. OFFSet1 is for BTS, 2 for MS. Default is BTS. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTRUMENT:SElect to set the mode. |
| Dependencies/Couplings | None |
| Preset | SA: ABS, ABS, ABS, ABS, ABS, ABS WCDMA: ABS, ABS, ABS, ABS, ABS, ABS, ABS AND, AND, AND, AND, AND, AND C2K: REL, REL, REL, ABS, REL, REL AND, AND, ABS, REL, REL, REL WIMAX OFDMA: REL, REL, REL, REL, REL, REL REL, REL, REL, REL, REL, REL TD-SCDMA: ABS, ABS, ABS, ABS, ABS, ABS, ABS AND, AND, AND, AND, AND, AND 1xEVDO: REL, REL, REL, ABS, REL, REL AND, AND, AND, OR, AND, AND |
| State Saved | Saved in instrument state. |
| Range | Absolute Relative Abs AND Rel Abs OR Rel |
| Instrument S/W Revision | A.01.60 or later |

Method

Sets the measurement method

Integ BW-enables you to set the channel integration bandwidth.

RRC Weight-selects Root Raised Cosine (RRC) filtering of the carriers and all adjacent channels. The α value (rolloff) for the filter is set to the value of the Filter Alpha parameter.

| | |
|----------|----------------------------------|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, WIMAX OFDMA, TD-SCDMA |

| | |
|-------------------------|--|
| Remote Command | [:SENSE] :SEMAsk:FILTer[:RRC] [:STATE] OFF ON 0 1 [:SENSE] :SEMAsk:FILTer[:RRC] [:STATE] ? |
| Example | SEM:FILT ON SEM:FILT? |
| Notes | For the CDMA2K and CDMA1xEVDO mode, this key is not available. 1 ON = RRC Weight, 0 OFF = IntegBW You must be in the Spectrum Analysis mode, W-CDMA mode or TD-SCDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | SA, WIMAX OFDMA: OFF WCDMA, TD-SCDMA: ON |
| State Saved | Saved in instrument state. |
| Range | RRCWeight IntegBW |
| Instrument S/W Revision | A.01.60 or later |

Filter Alpha

Sets the alpha value for the RRC Filter.

| | |
|-------------------------|--|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, WIMAX OFDMA, TD-SCDMA |
| Remote Command | [:SENSE] :SEMAsk:FILTer[:RRC] :ALPHa <real> [:SENSE] :SEMAsk:FILTer[:RRC] :ALPHa? |
| Example | SEM:FILT:ALPH 0.3 SEM:FILT:ALPH? |
| Notes | For the CDMA2K and CDMA1xEVDO mode, this key is not available. You must be in the Spectrum Analysis mode, W-CDMA mode or TD-SCDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | 0.22 |
| State Saved | Saved in instrument state. |
| Min | 0.01 |
| Max | 1.0 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 0.01 |
| Instrument S/W Revision | A.01.60 or later |

Meas Preset

Restores all the measurement parameters to their default values.

| | |
|-------------------------|--|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CONFIgure:SEMAsk |
| Example | CONF:SEM |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | Selecting Meas Preset will restore all measurement parameters to their default values. |
| Instrument S/W Revision | A.01.60 or later |

Limits State

The key “Limits State” is only displayed in the TD-SCDMA mode. The mask lines could be drawn in two different ways, according to the 3GPP standard for the base station when the key’s value is “Std”; or by the user-defined specifications listed in the Offset/Limits menu.

| | |
|------------------------|--|
| Key Path | Meas Setup |
| Mode | TD-SCDMA |
| Remote Command | [:SENSE] :SEMAsk:LIMIts STD MAN [:SENSE] :SEMAsk:LIMIts? |
| Example | SEM:LIM STD SEM:LIM? |
| Notes | You must be in the TD-SCDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | See Couplings When the value of the “Limits” key is Std, the parameters displayed on the Offset/Limits panel will be modified depending on the carrier power, which corresponds to the measurement standard of the base station. On top of that, all the keys except “Offset”, “Relative Atten”, “Offset Side” and “Limits” displayed on the “Offset/Limits” panel will be grayed out. Meanwhile all the keys displayed on the “Limits” panel will be grayed out as well. When the value of the “Limits” key is Man, all of the previous manual specifications will be restored, and the keys which previously grayed out will be enabled again. |
| Preset | MAN |
| State Saved | Saved in instrument state. |

| | |
|-------------------------|------------------|
| Range | STD MAN |
| Instrument S/W Revision | A.01.60 or later |

Mode

See “[Mode](#)” on page 1133 in the section "Common Measurement Functions" for more information.

Mode Setup

See “[Mode Setup](#)” on page 1145 in the section "Common Measurement Functions" for more information.

Peak Search

There is no 'Peak Search' supported in Spectrum Emission Mask so this front-panel key will display a blank menu key when pressed.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Recall

See “[Recall](#)” on page 1149 in the section "Common Measurement Functions" for more information.

Restart

See “Restart” on page 1167 in the section "Common Measurement Functions" for more information.

Save

See “[Save](#)” on page 1169 in the section "Common Measurement Functions" for more information.

Single

See “[Single \(Single Measurement/Sweep\)](#)” on page 1191 in the section "Common Measurement Functions" for more information.

Source

See “[Source](#)” on page 1193 in the section "Common Measurement Functions" for more information.

Span X Scale

Span X Scale functionality is not supported in Spectrum Emission Mask, so this front panel key will display a blank key menu when pressed.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Sweep/Control

Displays a menu that enables you to set up and control the sweep time, gate method, and source of the current measurement. See [“Sweep / Control” on page 1197](#) in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Pause

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing the Resume key resumes the measurement at the point it was at when paused. See [“Pause/Resume” on page 1198](#) in “Common Measurement Functions” for more details.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Gate

Accesses a menu that enables you to control the gating function .See Measurement Functions for more details.

The Gate functionality is used to view signals best viewed by qualifying them with other events. See [“Gate” on page 417](#) in “common Measurement Functions” for more details.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Trace/Detector

Accesses a menu of functions that enable you to control trace and detector for the current measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Trace Type

Allows you to select the type of trace for the current measurement. The menu contains a 1-of-N selection of the trace type (Clear Write, Average, Max Hold, Min Hold).

| | |
|-------------------------|---|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :TRACe:SEMask:TYPE WRITE AVERAge MAXHold MINHold :TRACe:SEMask:TYPE? |
| Example | TRAC:SEM:TYPE MINH TRAC:SEM:TYPE? |
| Notes | WRITe = Clear Write AVERAge = Average MAXHold = Maximum Hold MINHold = Minimum Hold |
| Dependencies/Couplings | When Detector setting is “Auto” ([:SENSe]:SEMask:DETECTOR:AUTO?), Detector ([:SENSe]:SEMask:DETECTOR[:FUNCTION]?) switches aligning with the switch of this parameter: “NORMal” with WRITe (Clear Write), “AVERAge” with AVERAge, “POSitive (peak)” with MAXHold, and “NEGative (peak)” with MINHold. |
| Preset | AVERAge |
| State Saved | Saved in instrument state. |
| Range | WRITe AVERAge MAXHold MINHold |
| Instrument S/W Revision | A.01.60 or later |

Chan Detector

Accesses a menu of functions that enable you to control the detectors for reference channel. The following choices are available:

- Auto- the detector selected depends on marker functions, trace functions, average type, and the trace averaging function.

- Normal-the detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.
- Average-the detector determines the average of the signal within the sweep points. The averaging method depends upon the Average Type selection (voltage, power or log scales).
- Peak-the detector determines the maximum of the signal within the sweep points.
- Sample-the detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.
- Negative Peak-the detector determines the minimum of the signal within the sweep points.

| | |
|-------------------------|-----------------------|
| Key Path | Trace/Detector |
| Instrument S/W Revision | A.01.60 or later |

Chan Detector Selection

Selects the detector mode for the reference channel.

| | |
|-------------------------|--|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSe] :SEMAsk:DETEctor:CARRier[:FUNCTION] AVERAge NEGAtive NORMAl POSitive SAMPLe [:SENSe] :SEMAsk:DETEctor:CARRier[:FUNCTION]? |
| Example | SEM:DET:CARR NEG SEM:DET:CARR? |
| Notes | When you manually select a detector (instead of selecting Auto), that detector is used regardless of other analyzer settings. Note: This detector setting affects the reference channel. There is not a per trace detector. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode. |
| Dependencies/Couplings | See Couplings in the Trace Type section. |
| Preset | AVERAge |
| State Saved | Saved in instrument state. |
| Range | Normal Average Peak Sample Negative Peak |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Chan Detector Auto

Sets the detector to the default detection mode for the reference channel. This mode is dependent upon

Spectrum Emission Mask Measurement Trace/Detector

the current reference channel conditions.

| | |
|-------------------------|---|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :SEMAsk:DETEctor:CARRier:AUTO ON OFF 1 0 [:SENSE] :SEMAsk:DETEctor:CARRier:AUTO? |
| Example | SEM:DET:CARR:AUTO OFF SEM:DET:CARR:AUTO? |
| Notes | See Couplings in the Trace Type section. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use INSTRument:SELEct to set the mode. |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Offset Detector

Accesses a menu of functions that enable you to control the detector for offsets. The following choices are available.

- Auto- the detector selected depends on marker functions, trace functions, average type, and the trace averaging function.
- Normal-the detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.
- Average-the detector determines the average of the signal within the sweep points. The averaging method depends upon the Average Type selection (voltage, power or log scales).
- Peak-the detector determines the maximum of the signal within the sweep points.
- Sample-the detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.
- Negative Peak-the detector determines the minimum of the signal within the sweep points.

| | |
|-------------------------|-----------------------|
| Key Path | Trace/Detector |
| Instrument S/W Revision | A.01.60 or later |

Offset Detector Selection

Selects the detector mode for the offsets.

| | |
|-------------------------|--|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :SEMAsk:DETEctor:OFFSet [:FUNction] AVERAge NEGAtive NORMAl POSitive SAMPlE [:SENSe] :SEMAsk:DETEctor:OFFSet [:FUNction] ? |
| Example | SEM:DET:OFFS AVER SEM:DET:OFFS? |
| Notes | When you manually select a detector (instead of selecting Auto), that detector is used regardless of other analyzer settings. Note: This detector setting has effects all offsets. There is not a per trace detector. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SELEct to set the mode. |
| Dependencies/Couplings | See Couplings in the Trace Type section. |
| Preset | SA, WCDMA, C2K, 1xEVDO: POSitive WIMAX OFDMA, TD-SCDMA: AVERAge |
| State Saved | Saved in instrument state. |
| Range | Normal Average Peak Sample Negative Peak |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Offset Detector Auto

Sets the detector to the default detection mode for the offsets. This mode is dependent upon the current signal conditions of the offsets.

| | |
|-----------------------|--|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :SEMAsk:DETEctor:OFFSet :AUTO ON OFF 1 0 [:SENSe] :SEMAsk:DETEctor:OFFSet :AUTO? |
| Example | SEM:DET:OFFS:AUTO OFF SEM:DET:OFFS:AUTO? |

Spectrum Emission Mask Measurement Trace/Detector

| | |
|-------------------------|--|
| Notes | See Couplings in the Trace Type section. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Trigger

Accesses a menu that enables you to select and control the trigger source for the current measurement.

See [“Trigger” on page 1221](#) in the "Common Measurement Functions" section for more information.

View/Display

Accesses a menu of functions that enable you to control the instrument display.

The following keys select how the results are displayed:

Abs Pwr Freq-displays the absolute power levels in dBm and the corresponding frequencies in the text window.

Rel Pwr Freq-displays the relative power levels in dBc and the corresponding frequencies in the text window.

Integrated Power-displays the absolute and relative power levels integrated throughout the bandwidths between the start and stop frequencies in the text window.

[“View Selection by name \(SCPI only\)” on page 502](#)

[“Views Selection by Number \(SCPI Only\)” on page 502](#)

View Selection by name (SCPI only)

| | |
|-------------------------|--|
| Key Path | View/Display |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISPlay:SEMask:VIEW[:SElect] APFReq RPFReq IPOWER :DISPlay:SEMask:VIEW[:SElect]? |
| Example | DISP:SEM:VIEW IPOW DISP:SEM:VIEW? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | In the SA mode, when "Radio Standard" is set to WLAN, IPOWer is not available and the key is grayed out. |
| Preset | SA, WCDMA, C2K, TD-SCDMA, 1xEVDO: APFReq WIMAX OFDMA: RPFReq |
| State Saved | Saved in instrument state. |
| Range | Abs Pwr & Freq Rel Pwr & Freq Integrated Power |
| Instrument S/W Revision | A.01.60 or later |

Views Selection by Number (SCPI Only)

The following numerical selections select how the results are displayed:

- 1- displays the absolute power levels in dBm and the corresponding frequencies in the text window.
- 2- displays the relative power levels in dBc and the corresponding frequencies in the text window.

3- displays the absolute and relative power levels integrated throughout the bandwidths between the start and stop frequencies in the text window.

| | |
|-------------------------|---|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISPlay:SEMask:VIEW:NSElect <integer> :DISPlay:SEMask:VIEW:NSElect? |
| Example | DISP:SEM:VIEW:NSEL 2 DISP:SEM:VIEW:NSEL? |
| Notes | In the SA mode, when "Radio Standard" is set to WLAN, 3 is not available. You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Preset | SA, WCDMA, C2K, TD-SCDMA, 1xEVDO: 1 WIMAX OFDMA: 2 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 3 |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Display

Accesses a menu of functions that enable you to set the display parameters.

See [“Display” on page 1273](#) in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|---------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

Abs Pwr Freq


Abs Peak Pwr & Freq (PSD Ref)

This view consists of the following two windows:

[“Trace Window” on page 505](#)

[“Results Window” on page 505](#)

Spectrum Emission Mask Measurement
View/Display

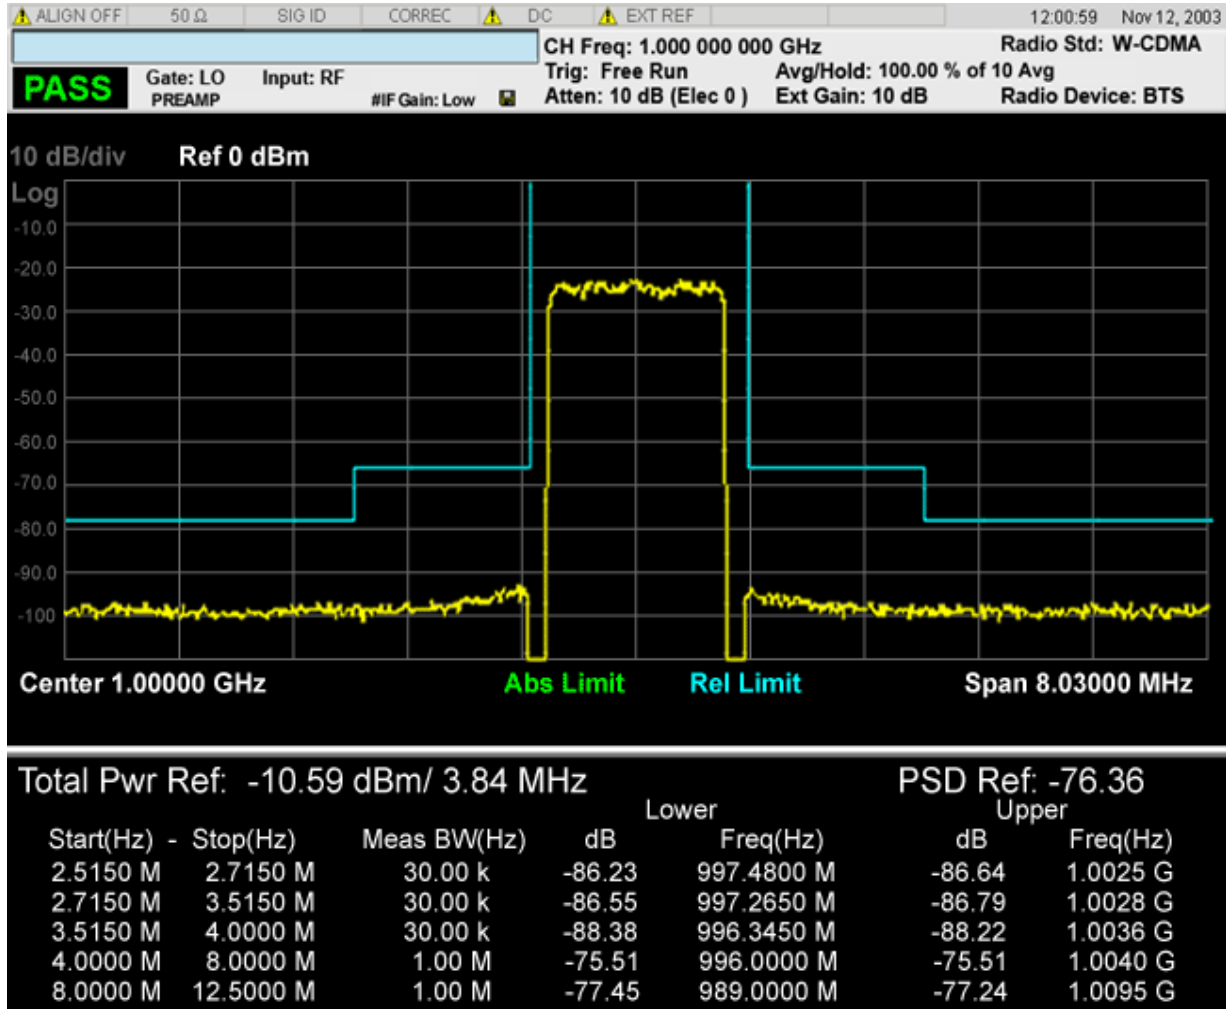

Trace Window

Corresponding Trace yellow - Combined trace from carrier and each offset

Results Window

| Name | Corresponding Results |
|-------------------------|---|
| Total Pwr Ref | n=1 2nd element Absolute power at the reference area. Channel Integration Bandwidth |
| PSD Ref | n=5 1st element Power spectral density reference at the reference area |
| Start(Hz) | Start frequency for offset |
| Stop(Hz) | Stop frequency for offset |
| Meas BW(Hz) | Measurement bandwidth for offset |
| Lower(dBm/Hz) | Absolute peak power on minimum margin point of the negative offset |
| Lower Lim(dB) | Minimum margin from limit line which is decided by Fail Mask setting on the negative offset |
| Lower Freq(Hz) | Frequency on minimum margin point of the negative offset |
| Upper(dBm/Hz) | Absolute peak power on minimum margin point of the positive offset |
| Upper Lim(dB) | Minimum margin from limit line which is decided by Fail Mask setting on the positive offset |
| Upper Freq(Hz) | Frequency on minimum margin point of the positive offset |
| Key Path: | View/Display |
| Instrument S/W Revision | A.01.60 or later |

Rel Pwr Freq


Rel Peak Pwr & Freq (PSD Ref)

This view consists of the following two windows:

“Trace Window” on page 507

“Results Window” on page 507

Spectrum Emission Mask Measurement
View/Display

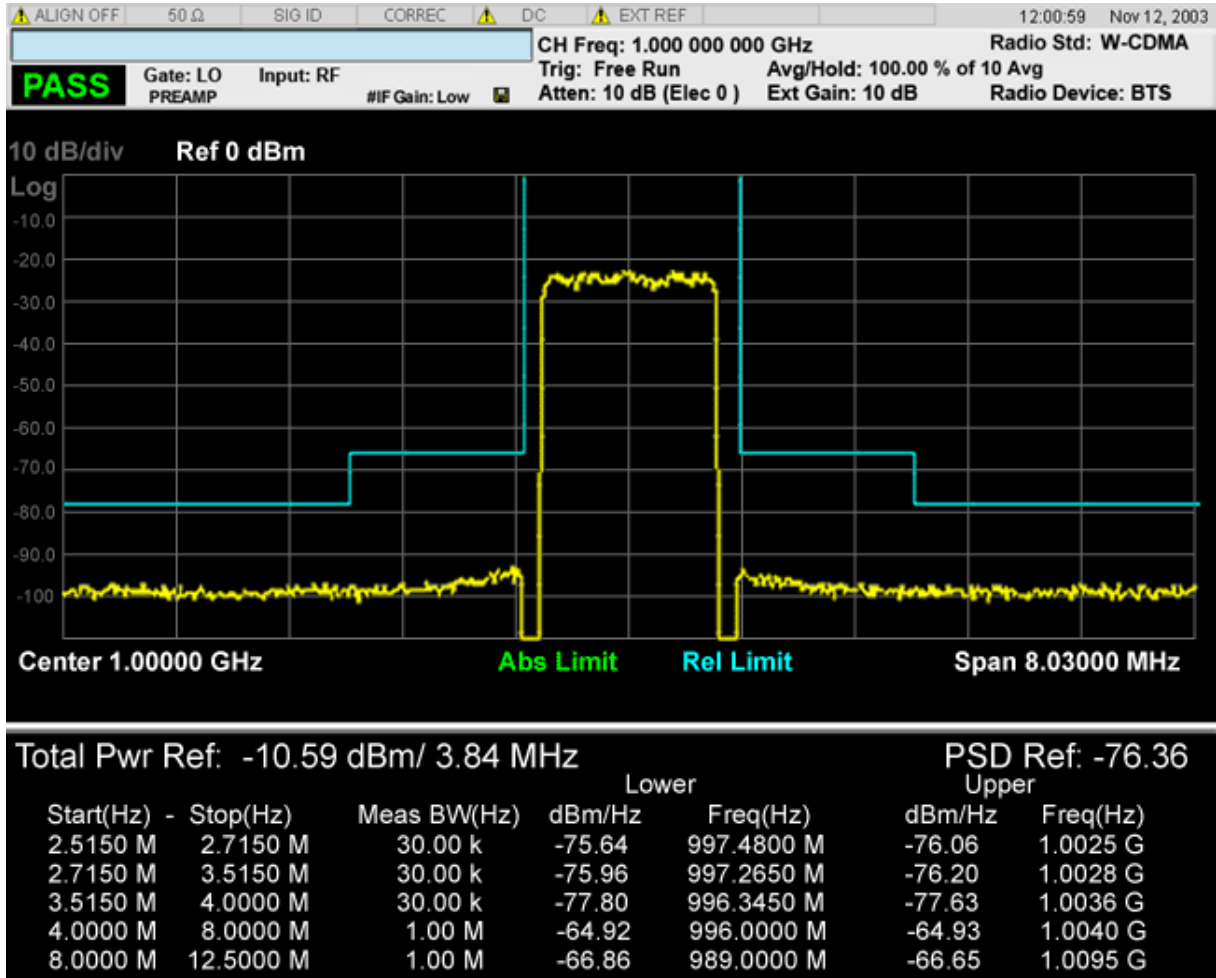

Trace Window

Corresponding Trace yellow - Combined trace from carrier and each offset

Results Window

| Name | Corresponding Results |
|-------------------------|---|
| Total Pwr Ref | n=1 2nd element Absolute power at the reference area. Channel Integration Bandwidth |
| PSD Ref | n=5 1st element Power spectral density reference at the reference area |
| Start(Hz) | Start frequency for offset |
| Stop(Hz) | Stop frequency for offset |
| Meas BW(Hz) | Measurement bandwidth for offset |
| Lower(dB) | Relative peak power on minimum margin point of the negative offset |
| Lower Lim(dB) | Minimum margin from limit line which is decided by Fail Mask setting on the negative offset |
| Lower Freq(Hz) | Frequency on minimum margin point of the negative offset |
| Upper(dB) | Relative peak power on minimum margin point of the positive offset |
| Upper Lim(dB) | Minimum margin from limit line which is decided by Fail Mask setting on the positive offset |
| Upper Freq(Hz) | Frequency on minimum margin point of the positive offset |
| Key Path: | View/Display |
| Instrument S/W Revision | A.01.60 or later |


Integrated Power

Integrated Power (PSD Ref)

“Trace Window” on page 509

“Results Window” on page 509

Spectrum Emission Mask Measurement
View/Display

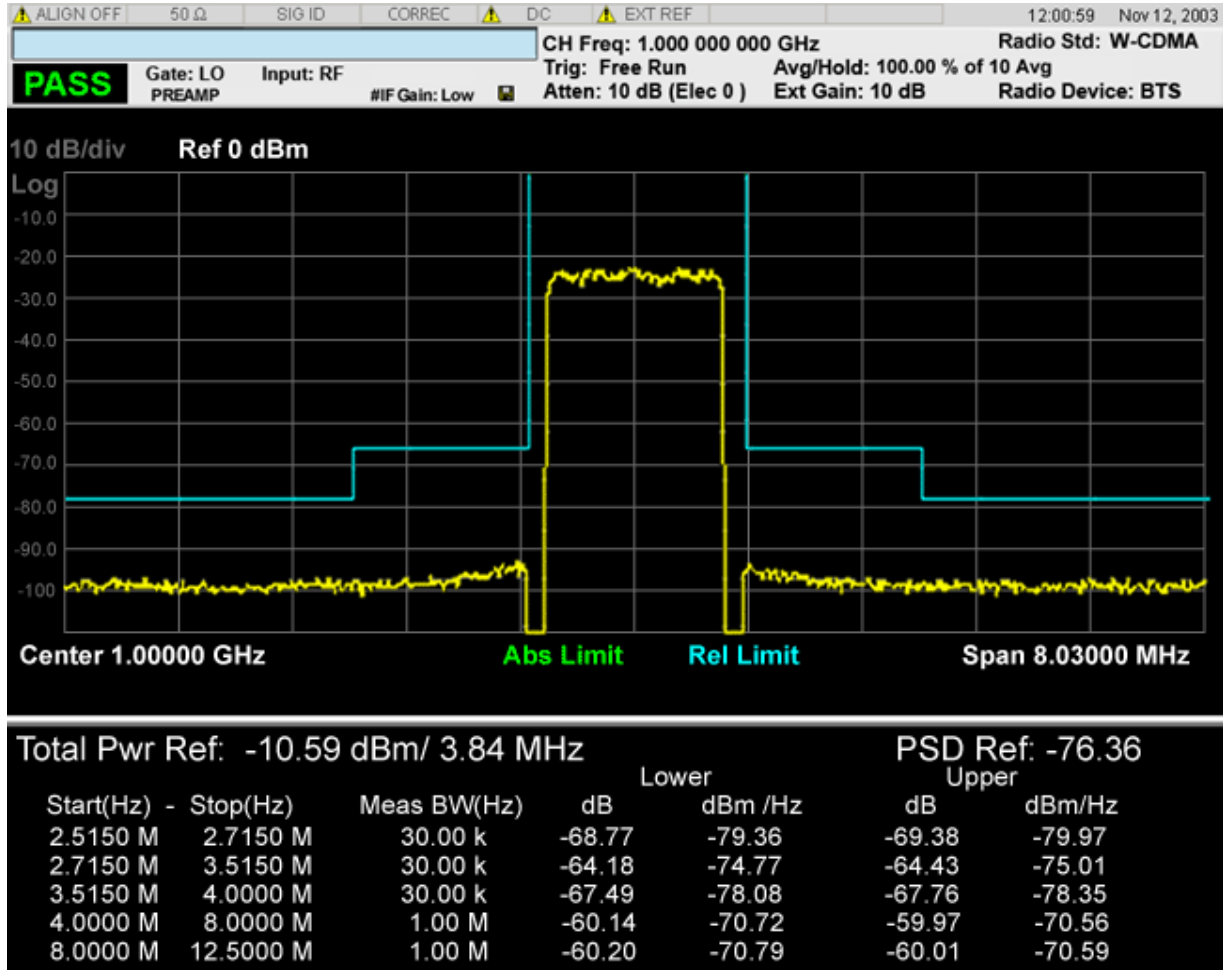

Trace Window

Corresponding Trace yellow - Combined trace from carrier and each offset

Results Window

| | |
|-------------------------|---|
| Name | Corresponding Results |
| Total Pwr Ref | n=1 2nd element Absolute power at the reference area. Channel Integration Bandwidth |
| PSD Ref | n=5 1st element Power spectral density reference at the reference area |
| Start(Hz) | Start frequency for offset |
| Stop(Hz) | Stop frequency for offset |
| Meas BW(Hz) | Measurement bandwidth for offset |
| Lower(dB) | Relative integrated power on minimum margin point of the negative offset |
| Lower Lim(dB) | Minimum margin from limit line which is decided by Fail Mask setting on the negative offset |
| Lower(dBm/Hz) | Absolute integrated power on minimum margin point of the negative offset |
| Upper(dB) | Relative integrated power on minimum margin point of the positive offset |
| Upper Lim(dB) | Minimum margin from limit line which is decided by Fail Mask setting on the positive offset |
| Upper(dBm/Hz) | Absolute integrated power on minimum margin point of the negative offset |
| Key Path: | View/Display |
| Instrument S/W Revision | A.01.60 or later |

Limit Lines

Toggles the limit lines display function for the spectrum emission mask measurements On and Off.

| | |
|----------|---|
| Key Path | View/Display |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |

Spectrum Emission Mask Measurement View/Display

| | |
|-------------------------|---|
| Remote Command | <code>:CALCulate:SEMask:LLINe:STATe ON OFF 1 0</code> <code>:CALCulate:SEMask:LLINe:STATe?</code> |
| Example | <code>CALC:SEM:LLIN:STAT OFF</code> <code>CALC:SEM:LLIN:STAT?</code> |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use <code>:INSTrument:SElect</code> to set the mode. |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

The Spurious Emissions measurement identifies and determines the power level of spurious emissions in certain frequency bands. For measurement results and views, see [“View/Display” on page 576](#).

This topic contains the following sections:

[“Measurement Commands for Spurious Emissions” on page 511](#)

[“Remote Command Results for Spurious Emissions Measurement” on page 511](#)

Measurement Commands for Spurious Emissions

The following commands can be used to retrieve the measurement results:

```
:CONFigure:SPURious
:CONFigure:SPURious:NDEFault
:INITiate:SPURious
:FETCh:SPURious [n] ?
:READ:SPURious [n] ?
:MEASure:SPURious [n] ?
```

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1115](#).

Remote Command Results for Spurious Emissions Measurement

| Command | Return Value |
|--|--|
| CONFigure:SPURious | N/A |
| INITiate:SPURious | |
| FETCh:SPURious [n]? | n = 1 (or not supplied) |
| MEASure:SPURious [n]? | Returns a variable-length (1+6*Spurs – up to 1201 entries) comma separated list containing detailed information in the following format: |
| READ:SPURious [n]? | Number of spurs in following list (Integer) |
| (Note – these commands are not available when viewing the Range Table) | [Repeat the following for each spur] |
| | Spur # |
| | Range # Spur was located (Integer) |
| | Frequency of Spur (Hz, Float64) |
| | Amplitude of Spur (dBm, Float32) |
| | Absolute Limit (dBm, Float32) |
| | Pass or Fail (1 0, Boolean) |

Spurious Emissions Measurement

n = 2 – 21

Returns a comma separated list of the trace data for the selected range (where range number = n – 1) using Detector 1. If selected range is not active SCPI_NAN is returned for each trace data element where SCPI_NAN = 9.91E37.

n = 22

Returns the number of spurs found.

n = 23 – 42

Returns a comma separated list of the trace data for the selected range (where range number = n – 22) using Detector 2. If selected range is not active or Detector 2 selection is off, SCPI_NAN is returned for each trace data element where SCPI_NAN = 9.91E37.

Key Path

Meas

Instrument S/W Revision

A.01.60 or later

AMPTD Y Scale

AMPTD Y Scale opens a menu of functions that enable you to modify the Amplitude parameters.

See AMPTD Y Scale in the "Analyzer Setup Functions: section for more information.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Ref Value

Sets the value for the absolute power reference. When Auto Scaling for the Y-axis is off, the measurement uses the current reference level settings. When Auto Scaling for the Y-axis is on, the analyzer will set the reference level such that the absolute limit will be positioned two divisions down from the top of the display.

| | |
|------------------------|---|
| Key Path | AMPTD/Y Scale |
| Mode | SA, WCDMA, WIMAX OFDMA, TD-SCDMA,C2k, 1xEV-DO |
| Remote Command | :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel < real> :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? |
| Example | DISP:SPUR:VIEW:WIND:TRAC:Y:RLEV -50 dBm DISP:SPUR:VIEW:WIND:TRAC:Y:RLEV? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode or WiMAX mode to use this command. Use INSTRument:SElect to set the mode. |
| Dependencies/Couplings | When the Y Auto Scaling is off, the measurement uses the current reference level settings. When the Y Auto Scaling is on, the analyzer automatically sets the reference level such that the absolute limit is positioned two divisions down from the top of the display. This is the most useful setting when searching for spurs. The algorithm used for determining the ref level is Ref Level = Absolute Limit + (2 * Scale/Div). All other reference level settings are left as the current base instrument settings. |
| Preset | 0.00 dBm |
| State Saved | Saved in instrument state. |
| Min | -250.0 dBm |
| Max | 250.0 dBm |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 10.0 dB (Scale/Div) |

Spurious Emissions Measurement AMPTD Y Scale

Instrument S/W Revision A.01.60 or later

Attenuation

This menu controls both the electrical and mechanical attenuators and their interactions. The value read back on the key in square brackets is the current Total (Elec + Mech) attenuation. When in Pre-Adjust for Min Clip mode, this value can change at the start of every measurement.

See “[Attenuation](#)” on page 1037 under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

Key Path **AMPTD Y Scale**
Instrument S/W Revision A.01.60 or later

Scale/Div

Sets the units per division of the vertical scale in the logarithmic display. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|---|
| Key Path | AMPTD/Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA |
| Remote Command | :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDI Vision <rel_ampl> :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDI Vision? |
| Example | DISP:SPUR:VIEW:WIND:TRAC:Y:PDIV 10 dB DISP:SPUR:VIEW:WIND:TRAC:Y:PDIV? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA or WiMAX mode to use this command. Use INSTrument:SElect to set the mode. |
| Dependencies/Couplings | When the Scale Coupling is On, this value is automatically determined by the measurement result. When you set a value manually, Scale Coupling automatically changes to Off. |
| Preset | 10.00 dB |
| State Saved | Saved in instrument state. |
| Range | 0.10 dB to 20.00 dB |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1, 2, 5, 10... |
| Instrument S/W Revision | A.01.60 or later |

Presel Center

See AMPTD Y Scale, “[Presel Center](#)” on page 1048 in the “Common Measurement Functions” section for more information.

Presel Adjust

See AMPTD Y Scale, “[Preselector Adjust](#)” on page 1050 in the “Common Measurement Functions” section for more information.

Internal Preamp

Accesses a menu that enables you to control the internal preamplifiers. Turning Internal Preamp on gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your particular measurement.

See “[Internal Preamp](#)” on page 1051 under AMPTD Y Scale in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Auto Scaling

Toggles the Auto Scaling function between On and Off.

| | |
|-----------------------|--|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA |
| Remote Command | :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON :DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle? |
| Example | DISP:SPUR:VIEW:WIND:TRAC:Y:COUP OFF DISP:SPUR:VIEW:WIND:TRAC:Y:COUP? |

Spurious Emissions Measurement AMPTD Y Scale

| | |
|-------------------------|--|
| Dependencies/Couplings | <p>When Auto Scaling is On and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results.</p> <p>When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.</p> <p>When the Y Auto Scaling is off, the measurement uses the current reference level settings. When the Y Auto Scaling is on, the analyzer automatically sets the reference level such that the absolute limit is positioned two divisions down from the top of the display. This is the most useful setting when searching for spurs. The algorithm used for determining the ref level is $\text{Ref Level} = \text{Absolute Limit} + (2 * \text{Scale/Div})$. All other reference level settings are left as the current base instrument settings.</p> |
| Preset | 1 |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Auto Couple

See “**AUTO COUPLE**” on page 1055 in the section "Common Measurement Functions" for more information.

BW

BW is unavailable in the Spurious Emissions measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Cont

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1063 in the section "Common Measurement Functions" for more information.

Frequency/Channel

Frequency/Channel is unavailable in the Spurious Emissions measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Input/Output

See “[Input/Output](#)” on page 1065 in the section “Common Measurement Functions” for more information.

Marker

Displays the menu keys that enable you to select, set up and control the markers for the current measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Marker Type

Sets the marker control mode to **Normal**, **Delta** and **Off**. Normal enables you to activate the selected marker to read the power level and time. Delta enables you to read the differences in the power levels and time scales between the selected marker and the next marker. Off enables you to turn off the selected marker.

All interactions and dependencies detailed under the key description are enforced when the remote command is sent.

| | |
|-----------------------|--|
| Key Path | Marker |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:SPURious:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : MODE POSition DELTa OFF :CALCulate:SPURious:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : MODE? |
| Example | CALC:SPUR:MARK:MODE POS CALC:SPUR:MARK:MODE? |

| | |
|-------------------------|--|
| Notes | <p>If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X Axis Value appears on the Active Function area.</p> <p>Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.</p> <p>Active Function Display: the marker X axis value entered in the active function area will display the marker value to its full entered precision.</p> <p>You must be in the cdma2000 mode, 1xEV-DO mode, TD-SCDMA mode, W-CDMA mode, GSM/EDGE mode or WiMAX mode to use this command. Use INSTRUMENT:SElect to set the mode.</p> |
| Dependencies/Couplings | No |
| Preset | =OFF |
| State Saved | Saved in instrument state. |
| Range | Normal Delta Off |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Value (Remote Command only)

Sets the Marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

| | |
|-----------------------|--|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA |
| Remote Command | <pre>:CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: X <freq> :CALCulate:SPURious:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12: X?</pre> |
| Example | <pre>CALC:SPUR:MARK2:X 25 kHz CALC:SPUR:MARK3:X?</pre> |
| Notes | <p>If no suffix is sent it will use the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" will be generated.</p> <p>The query returns the absolute X Axis marker value if the control mode is Normal, or the offset from the reference marker if the control mode is Delta. The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time, seconds for Period and Time. If the marker is Off, the response is not a number.</p> |
| Preset | 1 GHz |
| State Saved | No |
| Min | -9.9E+37 |

Spurious Emissions Measurement Marker

| | |
|-------------------------|-------------------------|
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | Not tested in SPCI test |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Position (Remote Command only)

Sets the Marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** - except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

| | |
|-------------------------|---|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:SPURious:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : X:POSition <integer> :CALCulate:SPURious:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : X:POSition? |
| Example | CALC:SPUR:MARK10:X:POS? |
| Notes | The query returns the absolute X Axis marker value in trace points if the control mode is Normal , or the offset from the reference marker in trace points if the control mode is Delta . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points. If the marker is Off the response is not a number. |
| Preset | 300 |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | Not tested in SCPI test |
| Instrument S/W Revision | A.01.60 or later |

Marker Y Axis Value (Remote Command only)

Returns the marker Y Axis value in the current marker Y Axis unit.

| | |
|-----------------------|---|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:SPURious:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : Y? |

| | |
|-------------------------|---|
| Example | CALC:SPUR:MARK11:Y? |
| Notes | If no suffix is sent, it will use the current Y Axis unit. If a suffix is sent that does not have units of absolute amplitude, an error "Invalid suffix" will be generated. |
| Preset | Depends on Y axis range of selected Trace. |
| State Saved | No |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Properties

Accesses the Properties menu to set certain properties of the selected marker.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Relative To

Selects the marker the selected marker will be relative to (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the "reference marker" for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

| | |
|-----------------------|---|
| Key Path | Marker, Properties |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:SPURious:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : REFerence <integer> :CALCulate:SPURious:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : REFerence? |
| Example | CALC:SPUR:MARK3:REF 5 CALC:SPUR:MARK:REF? |

Spurious Emissions Measurement Marker

| | |
|-------------------------|--|
| Notes | <p>A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: “Settings conflict; marker cannot be relative to itself.”</p> <p>When queried a single value will be returned (the specified marker numbers relative marker).</p> <p>You must be in the Spectrum Analysis mode, GSM mode or WiMAX mode or TD-SCDMA mode to use this command. Use INSTRUMENT:SELEct to set the mode.</p> |
| Preset | 2 3 4 5 6 7 8 9 10 11 12 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 12 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1 |
| Instrument S/W Revision | A.01.60 or later |

Couple Markers

When this function is true, moving any marker causes an equal X Axis movement of every other marker which is not **Off**. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

| | |
|-------------------------|--|
| Key Path | Marker |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:SPURious:MARKer:COUPle[:STATE] ON OFF 1 0 :CALCulate:SPURious:MARKer:COUPle[:STATE]? |
| Example | CALC:SPUR:MARK:COUP ON CALC:SPUR:MARK:COUP? |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

All Markers Off

Turns off all markers.

| | |
|-------------------------|--|
| Key Path | Marker |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:SPURious:MARKer:AOff |
| Example | CALC:SPUR:MARK:AOff |
| Instrument S/W Revision | A.01.60 or later |

Marker Function

There are no 'Marker Functions' supported in Spurious Emissions so this front-panel key will display a blank menu key when pressed.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Marker To

There is no 'Marker To' functionality supported in Spurious Emissions so this front-panel key will display a blank menu key when pressed.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Meas

See “[Meas](#)” on page 1115 in the section "Common Measurement Functions" for more information.

Meas Setup

Displays the measurement setup menu for the currently selected measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Avg/Hold Num

Specifies the number of measurement averages used to calculate the measurement result. The average is displayed at the end of each sweep.

Average State allows you to turn averaging On or Off.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, CDMA1xEVDO, TD-SCDMA |
| Remote Command | [:SENSE]:SPURious:AVERage:COUNT <integer> [:SENSe]:SPURious:AVERage:COUNT? [:SENSe]:SPURious:AVERage[:STATe] ON OFF 1 0 [:SENSe]:SPURious:AVERage[:STATe]? |
| Example | SPUR:AVER:COUN 2500 SPUR:AVER:COUN? SPUR:AVER ON SPUR:AVER? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode or WiMAX mode to use this command. Use INSTRument:SElect to set the mode. |
| Preset | 10 OFF |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 10000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1 |
| Instrument S/W Revision | A.01.60 or later |

Avg Mode

Enables you to set the averaging mode.

When set to Exponential (Exp) the measurement averaging continues using the specified number of averages to compute each averaged value. The average will be displayed at the end of each sweep.

When set to Repeat, the measurement resets the average counter each time the specified number of averages is reached.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, WIMAX OFDMA, TD-SCDMA |
| Remote Command | [:SENSE] :SPURious:AVERage:TCONtrol EXPOnential REPEAT [:SENSE] :SPURious:AVERage:TCONtrol? |
| Example | SPUR:AVER:TCON REP SPUR:AVER:TCON? |
| Notes | You must be in the cdma2000 mode, TD-SCDMA mode, W-CDMA mode, GSM/EDGE mode or WiMAX mode to use this command. Use INSTRument:SElect to set the mode. |
| Preset | EXPOnential |
| State Saved | Saved in instrument state. |
| Range | Exp Repeat |
| Instrument S/W Revision | A.01.60 or later |

Range Table

The range table is used to enter the settings for up to twenty ranges.

Upon entering the range table (front panel only) the measurement is stopped and the analyzer is set to a constantly sweeping idle state. The analyzer will be set to the current values of range 1, regardless if it is on or off. If a range is outside the values in the current range table for that range, "---" will appear to indicate this range is currently inactive.

To change a parameter, select the appropriate menu key and enter the value using the numeric keypad, or the knob. The analyzer settings will be updated with the new parameter values. Although no measurements are being made, this allows you to preview the range they will be measuring.

If the range is changed, the analyzer will change its settings to reflect the currently selected range. The selected range will be displayed on the last line of the range table view unless; the selected range is 5 or less in the normal range table view. In this case, the first 5 entries of the range table will be displayed and the zoom mode is selected. In the zoom mode all 20 ranges can be displayed.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

Range

Changing the range will update the values on the other menu keys so that they reflect the settings for the selected range. If Range is turned on, it will be used as part of the measurement. If it is off, it will be excluded. A range is made up of the next eleven parameters. This parameter can send up to 20 values. The location in the list sent corresponds to the range the value is associated with. Missing values are not permitted. In other words, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

| | |
|-------------------------|--|
| Key Path | Meas Setup, Range Table |
| Mode | SA, WCDMA, C2K, 1xEV-DO, WIMAX OFDMA, TD-SCDMA |
| Notes | You must be in cdma2000 mode, TD-SCDMA mode, W-CDMA mode, GSM/EDGE mode or WiMAX mode to use this command. Use INSTRUMENT:SELEct to set the mode. |
| Preset | 1 SA, WIMAX OFDMA:ON,ON,ON,ON,ON,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF WCDMA:ON,ON,ON,ON,ON,ON,ON,ON,ON,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF C2k, 1xEV-DO: ON,ON,ON,ON, OFF,OFF, OFF,OFF OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF TD-SCDMA: ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF |
| Min | 1 |
| Max | 20 |
| Example | SPUR:STAT ON SPUR:STAT? |
| Instrument S/W Revision | A.01.60 or later |

Start Freq

Sets the start frequency of the analyzer. This parameter can send up to 20 values. The location of where the start frequency occurs in the list sent to the measurement corresponds to the range the value is associated with.

Missing values are not permitted. In other words, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

| | |
|----------|--|
| Key Path | Meas Setup, Range Table |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |

Spurious Emissions Measurement Meas Setup

| | |
|-------------------------|---|
| Remote Command | <pre>[:SENSe] :SPURious [:RANGe] [:LIST] :FREQuency:STARt <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSe] :SPURious [:RANGe] [:LIST] :FREQuency:STARt?</pre> |
| Example | <pre>SPUR:FREQ:STAR 9 kHz, 150 kHz, 30 MHz, 1GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz SPUR:FREQ:STAR?</pre> |
| Notes | You must be in cdma2000 mode, TD-SCDMA mode, W-CDMA mode, GSM/EDGE mode or WiMAX mode to use this command. Use INSTRument:SELEct to set the mode. |
| Preset | <pre>SA, WIMAX OFDMA:+1.92000000E+009,+1.89350000E+009,+2.10000000E+009,+2.17 500000E+009,+8.00000000E+008,+1.50000000E+009,+1.50000000E+009,+ 1.50000000E+009,+1.50000000E+009,+1.50000000E+009,+1.50000000E+0 09,+1.50000000E+009,+1.50000000E+009,+1.50000000E+009,+1.500000 0E+009,+1.50000000E+009,+1.50000000E+009,+1.50000000E+009,+1.500 00000E+009,+1.50000000E+009 WCDMA:9kHz,150kHz,30MHz,1GHz,2.1GHz,2.1GHz,2.1774GHz,2.18GH z,1.5GHz,1.5GHz,1.5GHz,1.5GHz,1.5GHz,1.5GHz,1.5GHz, 1.5GHz,1.5GHz,1.5GHz,1.5GHz,1.5GHz C2K,1xEV-DO: 9kHz, 150kHz, 30 MHz, 1GHz, 2.5GHz, 2.5GHz, 2.5GHz , 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz TD-SCDMA: 9 kHz, 150 kHz, 30 MHz, 1GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz,1.5 GHz</pre> |
| State Saved | Saved in instrument state. |
| Min | -80 MHz |
| Max | <p>Hardware Dependent:</p> <p>Option 503: 3699999990</p> <p>Option 508: 8499999990</p> <p>Option 513: 13799999990</p> <p>Option 526: 26999999990</p> |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | (stopFreq - startFreq) / 10 |
| Instrument S/W Revision | A.01.60 or later |

Stop Freq

Sets the stop frequency of the analyzer. This parameter can send up to 20 values.

The location of where the stop frequency occurs in the list sent to the measurement corresponds to the range the value is associated with.

Missing values are not permitted. If you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

| | |
|-----------------------|--|
| Key Path | Meas Setup, Range Table |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | <pre>[:SENSE] :SPURious [:RANGE] [:LIST] :FREQuency:STOP <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSE] :SPURious [:RANGE] [:LIST] :FREQuency:STOP?</pre> |
| Example | <pre>SPUR:FREQ:STOP 150kHz,30MHz,1GHz,2.1GHz,2.1GHz,2.1774GHz,2.18GHz,12.75GHz,2.5 GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5G Hz,2.5GHz,2.5GHz SPUR:FREQ:STOP?</pre> |
| Notes | You must be in cdma2000 mode, TD-SCDMA mode, W-CDMA mode, GSM/EDGE mode or WiMAX mode to use this command. Use INSTRument:SElect to set the mode. |
| Preset | <pre>SA, WIMAX OFDMA:+1.98000000E+009,+1.91960000E+009,+2.10150000E+009,+2.18 000000E+009,+1.00000000E+009,+2.50000000E+009,+2.50000000E+009,+ 2.50000000E+009,+2.50000000E+009,+2.50000000E+009,+2.50000000E+0 09,+2.50000000E+009,+2.50000000E+009,+2.50000000E+009,+2.500000 0E+009,+2.50000000E+009,+2.50000000E+009,+2.50000000E+009,+2.500 0000E+009,+2.50000000E+009 WCDMA:150kHz,30MHz,1GHz,2.1GHz,2.1GHz,2.1774GHz,2.18GHz,12.7 5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5GHz,2.5 GHz,2.5GHz,2.5GHz,2.5GHz C2K, 1xEV-DO: 150kHz, 30 MHz, 1GHz, 5GHz,2.5GHz, 2.5GHz, 2.5GHz , 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz TD-SCDMA: 150kHz, 30 MHz, 1GHz, 12.75GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz , 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz</pre> |
| State Saved | Saved in instrument state. |
| Min | -79999990 |

Spurious Emissions Measurement Meas Setup

| | |
|-------------------------|---|
| Max | Hardware Dependent: Option 503: 3.7 GHz Option 508: 8.5 GHz Option 513: 13.8 GHz Option 526: 27.0 GHz |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | Not supported in Zorro-1. (stopFreq - startFreq) / 10 |
| Instrument S/W Revision | A.01.60 or later |

Res BW

Sets the resolution bandwidth of the analyzer. This parameter can send up to 20 values.

The location of where the resolution bandwidth occurs in the list sent to the measurement corresponds to the range the value is associated with.

Missing values are not permitted. In other words, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

| | |
|----------------|--|
| Key Path | Meas Setup, Range Table |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | <pre>[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth[:RESolution] <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth[:RESolution] ? [:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth[:RESolution] :AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 [:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth[:RESolution] :AUTO?</pre> |

| | |
|-------------------------|---|
| Example | <p>SPUR:BWND 1kHz,10kHz,100kHz,1MHz,1MHz,1MHz,1MHz, 3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz, 3MHz,3MHz</p> <p>SPUR:BWND?</p> <p>SPUR:BWID:AUTO ON, ON, ON, OFF, OFF, OFF, OFF, OFF, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, ON, ON</p> <p>SPUR:BWID:AUTO?</p> |
| Notes | <p>You must be in cdma2000 mode, TD-SCDMA mode, W-CDMA mode, GSM/EDGE mode or WiMAX mode to use this command. Use INSTrument:SElect to set the mode.</p> |
| Preset | <p>SA, WIMAX OFDMA:1.2MHz,0.51MHz,0.1MHz,0.1MHz,4MHz,3MHz,3MHz,3MHz,3 MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3 MHz</p> <p>WCDMA:1kHz,10kHz,100kHz,1MHz,1MHz,1MHz,1MHz,1MHz,3MHz,3M Hz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz</p> <p>C2k, 1xEV-DO: 1kHz,10kHz,100kHz,1MHz,1MHz,1MHz,1MHz, 3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz, 3MHz,3MHz</p> <p>TD-SCDMA: 1kHz,10kHz,100kHz,1MHz, 3MHz, 3MHz,3MHz, 3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz, 3MHz,3MHz</p> <p>SA, WIMAX OFDMA:OFF,OFF,OFF,OFF,OFF,ON,ON,ON,ON,ON,ON,ON,ON,ON, ON,ON,ON,ON,ON</p> <p>WCDMA:OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,ON,ON,ON,ON,ON,ON,O N,ON,ON,ON,ON,ON</p> <p>C2k, 1xEV-DO:OFF,OFF,OFF,OFF,OFF,OFF,OFF,ON,ON,ON,ON, ON,ON,ON,ON,ON,ON,ON,ON,ON</p> <p>TD-SCDMA: OFF,OFF,OFF,OFF,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,O N,ON,ON</p> |
| State Saved | <p>Saved in instrument state.</p> |
| Min | <p>1 Hz</p> |
| Max | <p>8 MHz</p> |
| Test MIN/MAX/DEF | <p>MIN MAX</p> |
| Test UP/DOWN | <p>Not supported in Zorro-1. See GPSA PD for Details</p> |
| Instrument S/W Revision | <p>A.01.60 or later</p> |

Video BW

Sets the Video BW mode of the analyzer. This can be Auto, where the analyzer determines the optimum setting, or Manual, where you determine the setting. This parameter can send up to 20 values. The location in the list sent corresponds to the range the value is associated with. Missing values are not permitted, in other words, if you want to change values 2 and 6 you must sent all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

| | |
|-----------------------|---|
| Key Path | Meas Setup, Range Table |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | <pre>[:SENSE] :SPURious [:RANGE] [:LIST] :BANDwidth:VIDeo <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq>, <freq> [:SENSE] :SPURious [:RANGE] [:LIST] :BANDwidth:VIDeo? [:SENSE] :SPURious [:RANGE] [:LIST] :BANDwidth:VIDeo:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 [:SENSE] :SPURious [:RANGE] [:LIST] :BANDwidth:VIDeo:AUTO?</pre> |
| Example | <pre>SPUR:BAND:VID 1kHz,10kHz,100kHz,1MHz,1MHz,1MHz,1MHz, 3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz,3MHz, 3MHz,3MHz SPUR:BAND:VID? SPUR:BAND:VID:AUTO ON, ON, OFF, OFF, OFF, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, ON, ON, ON, ON, ON SPUR:BAND:VID:AUTO?</pre> |
| Notes | You must be in the cdma2000 mode, 1xEV-DO mode, TD-SCDMA mode, W-CDMA mode, GSM/EDGE mode or WiMAX mode to use this command. Use INSTRUMENT:SELEct to set the mode. |
| Preset | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO: Automatically calculated ON,ON |
| State Saved | Saved in instrument state. |
| Min | 1 Hz |
| Max | 50 MHz |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | Not supported in Zorro-1. 1, 3, 10,... |

Instrument S/W Revision A.01.60 or later

Filter Type

Besides the Gaussian filter shape, there are certain special filter types, such as Flat Top, that are desirable under certain conditions. The **Filter Type** menu gives you control over these parameters.

| | |
|-------------------------|--|
| Key Path | Meas Setup, Range Table |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:SHAPE GAUSSian FLATtop, GAUSSian FLATtop [:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:SHAPE? |
| Example | SPUR:BAND:SHAP GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, FLAT, FLAT, FLAT, FLAT, FLAT, GAUS, GAUS, GAUS, GAUS, GAUS, FLAT, FLAT, GAUS, GAUS SPUR:BAND:SHAP? |
| Preset | GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS, GAUS |
| State Saved | Saved in instrument state. |
| Range | Gaussian (Normal) Flattop |
| Instrument S/W Revision | A.01.60 or later |

Abs Start Limit

Determines the limit above which spurs will report a failing. If Abs Stop Limit Mode is set to Auto, this is coupled to Abs Stop Limit to make a flat limit line. If set to Man, Abs Start Limit and Abs Stop Limit can take different values to make a sloped limit line.

If the Limit Line Test parameter is off then any spurs which are found to be above the current 'Peak Excursion' will be added to the results table. From these spurs, the amplitude will be checked using the abs limit start and abs limit stop parameters and then calculate the limit. An 'F' will be appended to the amplitude value of the spur if the measured amplitude is above the limit. If the Limit Line Test is on, only the spurs whose amplitudes exceed the limit will be reported.

This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. Missing values are not permitted. If you want to change values 2 and 6 you must sent all values up to 6. Subsequent values will remain as they were. The query for this parameter always

Spurious Emissions Measurement Meas Setup

returns 20 values.

| | |
|--------------------------------|---|
| Key Path | Meas Setup, Range Table |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:SPURious[:RANGE][:LIST]:LIMit:ABSolute[:UPPe r]:DATA[:START] <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl> :CALCulate:SPURious[:RANGE][:LIST]:LIMit:ABSolute[:UPPe r]:DATA[:START]? |
| Example | CALC:SPUR:LIM:ABS:DATA 0,0 CALC:SPUR:LIM:ABS:DATA? |
| Preset | SA, WIMAX OFDMA: -5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001,-5.00000000E+001 WCDMA: -36dBm,-36dBm,-36dBm,-30dBm,-25dBm,-15dBm,-25dBm,-30dBm,-50dBm,-50dBm,-50dBm,-50dBm,-50dBm,-50dBm,-50dBm,-50dBm,-50dBm,-50dBm,-50dBm,-50dBm,-50dBm,-50dBm C2K, 1xEV-DO: -13 dBm, -13dBm, -13 dBm, -13 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm TD-SCDMA: -13 dBm, -13dBm, -13 dBm, -13 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm, -50 dBm |
| State Saved | Saved in instrument state. |
| Min | -150.0 dBm |
| Max | 50.0 dBm |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | Not supported in Zorro-1. 1 |
| Instrument S/W Revision | A.01.60 or later |

Abs Stop Limit

Abs Stop Limit is used to determine the limit above which spurs will report a failing. If Abs Stop Limit Mode is set to Auto, this is coupled to Abs Start Limit to make a flat limit line. If set to Man, Abs Start Limit and Abs Stop Limit can take different values to make a sloped limit line.

This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. Missing values are not permitted. If you want to change values 2 and 6 you must sent all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

Abs Stop Limit Mode, when set to Couple, couples Abs Start Limit and Abs Stop Limit to make a flat limit line. If set to Man, Abs Start and Abs Stop can take different values to make a sloped limit line.

This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. Missing values are not permitted, in other words, if you want to change values 2 and 6 you must sent all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

| | |
|-----------------------|---|
| Key Path | Meas Setup, Range Table |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | <pre>:CALCulate:SPURious[:RANGE][:LIST]:LIMit:ABSolute[:UPPe r]:DATA:STOP <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl>, <ampl></pre> <pre>:CALCulate:SPURious[:RANGE][:LIST]:LIMit:ABSolute[:UPPe r]:DATA:STOP?</pre> <pre>:CALCulate:SPURious[:RANGE][:LIST]:LIMit:ABSolute[:UPPe r]:DATA:STOP:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1</pre> <pre>:CALCulate:SPURious[:RANGE][:LIST]:LIMit:ABSolute[:UPPe r]:DATA:STOP:AUTO?</pre> |
| Example | <pre>CALC:SPUR:LIM:ABS:DATA:STOP -25,-25,-25,-25,-25,-25,-25,-25,-25,-25,-25,-25,-25,-25,-25,-25,-25,-25,-25,-25</pre> <pre>CALC:SPUR:LIM:ABS:DATA:STOP?</pre> <pre>CALC:SPUR:LIM:ABS:DATA:STOP:AUTO ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON</pre> <pre>CALC:SPUR:LIM:ABS:DATA:STOP:AUTO?</pre> |

Spurious Emissions Measurement
Meas Setup

| | |
|-------------------------|---|
| Preset | <p>SA, WIMAX OFDMA: $-5.00000000E+001,-5.00000000E+001$</p> <p>WCDMA: $-36\text{dBm},-36\text{dBm},-36\text{dBm},-30\text{dBm},-25\text{dBm},-15\text{dBm},-25\text{dBm},-30\text{dBm},-50\text{dBm},-50\text{dBm},-50\text{dBm},-50\text{dBm},-50\text{dBm},-50\text{dBm},-50\text{dBm},-50\text{dBm},-50\text{dBm},-50\text{dBm},-50\text{dBm},-50\text{dBm},-50\text{dBm},-50\text{dBm}$</p> <p>C2K, 1xEV-DO: $-13\text{ dBm}, -13\text{dBm}, -13\text{ dBm}, -13\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}$</p> <p>TD-SCDMA: $-13\text{ dBm}, -13\text{dBm}, -13\text{ dBm}, -13\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}, -50\text{ dBm}$</p> <p>ON,ON</p> |
| State Saved | Saved in instrument state. |
| Min | -150.0 dBm |
| Max | 50.0 dBm |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | Not supported in Zorro-1. |
| | 1 |
| Instrument S/W Revision | A.01.60 or later |

Peak Excursion

Sets the minimum amplitude variation of signals that can be identified as peaks. If a value of 6 dB is selected, peaks that rise and fall more than 6 dB above the peak threshold value are identified. This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. Missing values are not permitted. If you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

| | |
|----------|--|
| Key Path | Meas Setup, Range Table |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |

| | |
|-------------------------|---|
| Remote Command | [:SENSe]:SPURious[:RANGe][:LIST]:PEAK:EXCursion <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl> [:SENSe]:SPURious[:RANGe][:LIST]:PEAK:EXCursion? |
| Example | SPUR:PEAK:EXC 20,20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20, 20 SPUR:PEAK:EXC? |
| Preset | +6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+ 000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.000000 00E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00 000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+ 6.00000000E+000,+6.00000000E+000,+6.00000000E+000,+6.00000000E+0 00,+6.00000000E+000 |
| State Saved | Saved in instrument state. |
| Min | 0.0 dB |
| Max | 100.0 dB |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | 1 |
| Instrument S/W Revision | A.01.60 or later |

Pk Threshold

Sets the minimum amplitude of signals that can be identified as peaks. For example, if a value of -90 dBm is selected, only peaks that rise and fall more than the peak excursion value which are above -90 dBm are identified. This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. Missing values are not permitted. If you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

| | |
|-----------------------|---|
| Key Path | Meas Setup, Range Table |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [:SENSe]:SPURious[:RANGe][:LIST]:PEAK:THReshold <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real>, <real> [:SENSe]:SPURious[:RANGe][:LIST]:PEAK:THReshold? |
| Example | SPUR:PEAK:THR 0,0,0 SPUR:PEAK:THR? |

Spurious Emissions Measurement Meas Setup

| | |
|-------------------------|---|
| Preset | <code>-9.00000000E+001,-9.00000000E+001</code> |
| State Saved | Saved in instrument state. |
| Min | -100 |
| Max | 0 |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | Not supported in Zorro-1. 1 |
| Instrument S/W Revision | A.01.60 or later |

Attenuation

Defines attenuation value for each range. When Auto state is ON, attenuation value under AMPTD Y Scale is used. When Auto state is OFF, this value is used as mechanical attenuation value without electric attenuation.

| | |
|----------------|--|
| Key Path | Meas Setup, Range Table |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | <pre>[:SENSe] :SPURious [:RANGE] [:LIST] :ATTenuation <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl>, <rel_ampl> [:SENSe] :SPURious [:RANGE] [:LIST] :ATTenuation? [:SENSe] :SPURious [:RANGE] [:LIST] :ATTenuation:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 [:SENSe] :SPURious [:RANGE] [:LIST] :ATTenuation:AUTO?</pre> |
| Example | <pre>SPUR:ATT 10dB, 10dB SPUR:ATT? SPUR:ATT:AUTO 0,0 SPUR:ATT:AUTO?</pre> |

Spurious Emissions Measurement Meas Setup

| | |
|-------------------------|---|
| Remote Command | <pre>[:SENSe]:SPURious[:RANGe][:LIST]:DETEctor[1][:FUNction] AVERage NEGative NORMal POSitive SAMPlE RMS, AVERage NEGative NORMal POSitive SAMPlE RMS [:SENSe]:SPURious[:RANGe][:LIST]:DETEctor[1][:FUNction] ?</pre> |
| Example | <pre>SPUR:DET NORM, NORM, NORM, NORM, NORM, NORM, NORM, NORM, NORM, NORM, NORM, NORM, NORM, NORM, NORM, NORM, NORM, NORM, NORM SPUR:DET?</pre> |
| Notes | <p>For backward compatibility, “NORMal” is available as a SCPI command parameter. However this is treated the same as “RMS” internally, so the query never returns “NORMal” as its results.</p> |
| Preset | <pre>POS,POS,POS,POS,POS,POS,POS,POS,POS,POS,POS,POS,POS,POS,POS ,POS,POS,POS,POS,POS</pre> |
| State Saved | Saved in instrument state. |
| Range | Normal Average Peak Sample Negative Peak |
| Instrument S/W Revision | A.01.60 or later |

Detector 2

Sets the detector to be used by the trace for display purposes only.

| | |
|----------|--|
| Key Path | Meas Setup, Range Table |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |

Spurious Emissions Measurement Meas Setup

| | |
|--------------------------------|--|
| Remote Command | <pre>[:SENSe]:SPURious[:RANGe][:LIST]:SWEep:TIME <seconds>, <seconds>, <seconds>, <seconds>, <seconds>, <seconds>, <seconds>, <seconds>, <seconds>, <seconds>, <seconds>, <seconds>, <seconds>, <seconds>, <seconds>, <seconds>, <seconds>, <seconds>, <seconds> [:SENSe]:SPURious[:RANGe][:LIST]:SWEep:TIME? [:SENSe]:SPURious[:RANGe][:LIST]:SWEep:TIME:AUTO OFF ON 0 1,OFF ON 0 1,OFF ON 0 1,OFF ON 0 1,OFF ON 0 1, OFF ON 0 1,OFF ON 0 1,OFF ON 0 1,OFF ON 0 1,OFF ON 0 1, OFF ON 0 1,OFF ON 0 1,OFF ON 0 1,OFF ON 0 1,OFF ON 0 1, OFF ON 0 1,OFF ON 0 1,OFF ON 0 1,OFF ON 0 1,OFF ON 0 1 [:SENSe]:SPURious[:RANGe][:LIST]:SWEep:TIME:AUTO?</pre> |
| Example | <pre>SPUR:SWE:TIME 10,10,10,10,10,10,10,10,10,10,10,10,10,10,10,10,10,10,10,10 SPUR:SWE:TIME? SPUR:SWE:TIME:AUTO ON,ON</pre> |
| Notes | You must be in cdma2000 mode, TD-SCDMA mode, W-CDMA mode, SA mode or WiMAX mode to use this command. Use INSTRUMENT:SELect to set the mode. |
| Preset | Automatically calculated |
| State Saved | Saved in instrument state. |
| Min | 1.0E-3 |
| Max | 2.0E+3 |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | Not supported in Zorro-1. |
| Instrument S/W Revision | A.01.60 or later |

Points

Sets the number of points per sweep for the measurement. This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. Missing values are not permitted. If you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

The Points mode can be manual, where you determine the setting or auto, where the analyzer determines the number of trace points to ensure the sweep points resolution equals RBW/2. This is calculated using the following algorithm:

Points = (Stop Freq – Start Freq) / (ResBW / 2), with the computed values being clipped to a minimum of 101 and a maximum of 8192.

This parameter can send up to 20 values. The location in the list sent corresponds to the range the value is associated with. Missing values are not permitted, in other words, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were. The query for this parameter always returns 20 values.

| | |
|-------------------------|---|
| Key Path | Meas Setup, Range Table |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | <pre>[:SENSE] :SPURious [:RANGE] [:LIST] :SWEep:POINts <integer> [:SENSE] :SPURious [:RANGE] [:LIST] :SWEep:POINts? [:SENSe] :SPURious [:RANGE] [:LIST] :SWEep:POINts:AUTO OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 [:SENSe] :SPURious [:RANGE] [:LIST] :SWEep:POINts:AUTO?</pre> |
| Example | <pre>SPUR:SWE:POIN 1001,1001,1001 SPUR:SWE:POIN? SPUR:SWE:POIN:AUTO ON,ON,ON SPUR:SWE:POIN:AUTO?</pre> |
| Preset | <p>SA, WIMAX OFDMA: +601,+601</p> <p>WCDMA: 601,2985,9700,1100,601,601,601,10570,601,601,601,601,601,601,601,601,601,601,601</p> <p>C2K: 601,601,9970,11750,,601,601,601,601,601,601,601,601,601,601,601,601,601,601,601</p> <p>CDMA 1xEVDO: 601,601,9970,11750,601,601,601,10570,601,601,601,601,601, 601,601,601,601,601,601,601</p> <p>TD-SCDMA: 601, 5970, 19400, 20001, 601,601,601,601,601,601,601,601,601,601,601,601,601, 601,601,601,601</p> <p>OFF,OFF</p> |
| State Saved | Saved in instrument state. |
| Min | 101 |
| Max | 20001 |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

IF Gain

Sets the IF Gain function to Auto, On (the extra 10 dB) or Off. These settings affect sensitivity and IF overloads. A switched IF amplifier with approximately 10 dB of gain is available. This amplifier takes full advantage of the RF dynamic range of the analyzer. When it can be turned on without an overload, the dynamic range is always better with the amplifier on than off.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

IF Gain Auto Activates the rules for auto IF Gain.

| | |
|-------------------------|---|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | <pre>[:SENSE] :SPURious:IF:GAIN:AUTO[:STATE] OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 [:SENSE] :SPURious:IF:GAIN:AUTO[:STATE] ?</pre> |
| Example | <pre>SPUR:IF:GAIN:AUTO ON,ON SPUR:IF:GAIN:AUTO?</pre> |
| Dependencies/Couplings | When the sweep type is Swept, 'Auto' sets IF Gain to High Gain under any of the following conditions: the input attenuator is set to 0 dB, the preamp is turned on, or the Max Mixer Level is 20 dBm or lower. For other settings using the swept sweep type, auto sets IF Gain to Low Gain. |
| Preset | OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF |
| State Saved | Saved in instrument state. |
| Range | Auto Man |
| Instrument S/W Revision | A.01.60 or later |

IF Gain State Selects the range of IF Gain.

| | |
|------------------------|---|
| Remote Command: | <pre>[:SENSE] :SPURious:IF:GAIN[:STATE] OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1, OFF ON 0 1 [:SENSE] :SPURious:IF:GAIN[:STATE] ?</pre> |
| Example: | <pre>SPUR:IF:GAIN ON,ON SPUR:IF:GAIN?</pre> |

Preset: OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF,OFF

State Saved: Saved in instrument state.

Range: Low Gain (Best for Large Signals)|High Gain (Best Noise Level)

Instrument S/W Revision: A.01.60 or later

Meas Type

Selects either Examine or Full measurement type. This parameter is coupled to the average mode. Therefore, if the examine measurement type is selected, the measurement sets the average mode to exponential. If the full measurement type is selected, the measurement sets the average mode to repeat. The behavior of each measurement type is described in the table below. When averaging is on, trace averaging is used as each active range is measured. Averaging is not used at any other time.

| | Single | | Continuous | |
|----------|---|---|---|--|
| | No Spurs Found | Spurs Found | No Spurs Found | Spurs Found |
| Examine | All active ranges are measured. On completion the measurement is set to the idle state and the 'No Spurs' happening is displayed. | All active ranges are measured and the spurs found reported. On completion the measurement is set to the idle state and the trace containing the worst spur restored. The spur menu key is enabled. A marker is also added which is set to the frequency of the worst spur. | All active ranges are measured. On completion the measurement is set to the idle state and the 'No Spurs' happening is displayed. | All active ranges are measured and the spurs found reported. On completion the SA is set to the range containing the worst spur found and continually sweeps this range. The spur menu key is enabled. A marker is also added which is set to the frequency of the worst spur. |
| Full | All active ranges are measured. On completion measurement is set to idle state and the 'No Spurs' happening is displayed. | All active ranges are measured and spurs found reported. On completion the measurement is set to the idle state, displaying the trace of the last active range. | Measurement continually cycles through all active ranges. | All active ranges are measured and spurs found reported. On each cycle of the active ranges the spurs found are reset. This ensures any remote queries retrieve the trace data that matches the currently displayed results. |
| Key Path | Meas Setup | | | |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO | | | |

Spurious Emissions Measurement Meas Setup

| | |
|-------------------------|--|
| Remote Command | <code>[:SENSe] :SPURious:TYPE EXAMine FULL</code> <code>[:SENSe] :SPURious:TYPE?</code> |
| Example | <code>SPUR:TYPE FULL</code> <code>SPUR:TYPE?</code> |
| Preset | EXAMine |
| State Saved | Saved in instrument state. |
| Range | Examine Full |
| Instrument S/W Revision | A.01.60 or later |

Spur

Displays any spurs found. It is only enabled when the measurement type is set to examine and will turn on upon completion of a measurement. Once the Spur menu key has been enabled, you can view any spur. The measurement sets the analyzer to the range in which the currently selected spur was found. The range settings only changes if the spur selected is in a range which is different from the current range settings. A marker is used to identify the currently selected spur on the trace.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, CDMA1xEVDO, TD-SCDMA |
| Remote Command | <code>[:SENSe] :SPURious:SPUR <integer></code> <code>[:SENSe] :SPURious:SPUR?</code> |
| Example | <code>SPUR:SPUR 55</code> <code>SPUR:SPUR?</code> |
| Preset | 1 |
| State Saved | No |
| Min | 1 |
| Max | 200 |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Spurious Report Mode

Sets the spurious report mode to either Limit Line Test Only or All.

Select the Limit Line Test (LIMTest) option to report only spurs above the limit line. Any spurs reported will cause the measurement to fail. See Abs Start Limit for more information.

Select All (ALL) to report all spurs detected by Peak Threshold and Peak Excursion.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [:SENSe] :SPURious:REPT:MODE ALL LIMTest [:SENSe] :SPURious:REPT:MODE? |
| Example | SPUR:REPT:MODE LIMIT SPUR:REPT:MODE? |
| Preset | ALL |
| State Saved | Saved in instrument state. |
| Range | All Limit Test |
| Instrument S/W Revision | A.01.60 or later |

Meas Preset

Restores all measurement parameters to their default values.

| | |
|-------------------------|--|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CONFigure:SPURious |
| Example | CONF:SPUR |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Range Preset (for TD-SCDMA only)

Sets the specific range parameters to meet the requirement of the BS mandatory limits (Category A), the BS mandatory limits (Category B) and the MS mandatory and optional limits in the TD-SCDMA mode. This key only shows up in the TD-SCDMA mode.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

Category A (for TD-SCDMA only)

Sets the range parameters to meet the requirement of the BS mandatory spurious emissions limits (Category A).

Spurious Emissions Measurement Meas Setup

BS Mandatory spurious emissions limits, Category A

| Band | Maximum level | Measurement bandwidth | Note |
|-------------------|---------------|-----------------------|--|
| 9 kHz – 150 kHz | –13 dBm | 1 kHz | Bandwidth as in ITU-R SM.329–9, s4.1 |
| 150 kHz – 30 MHz | | 10 kHz | Bandwidth as in ITU-R SM.329–9, s4.1 |
| 30 MHz – 1 GHz | | 100 kHz | Bandwidth as in ITU-R SM.329–9, s4.1 |
| 1 GHz – 12,75 GHz | | 1 MHz | Upper frequency as in ITU-R SM.329–9, s2.5 table 1 |

(The requirement applies at frequencies within the specified frequency ranges which are more than 4 MHz under the first carrier frequency used or more than 4 MHz above the last carrier frequency used.)

| Key Path | Meas Setup, Range Preset |
|-------------------------|---|
| Mode | TD-SCDMA |
| Remote Command | [:SENSE] :SPURious :CATegory :A |
| Example | SPUR:CAT:A |
| Dependencies/Couplings | This key is grayed out when the radio device is MS. |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Category B (for TD-SCDMA only)

Sets the range parameters to meet the requirement of the BS mandatory spurious emissions limits (Category B).

BS Mandatory spurious emissions limits, Category B

| Band | Maximum Level | Measurement Bandwidth | Note |
|----------------|---------------|-----------------------|------------------------------------|
| 9kHz – 150kHz | –36 dBm | 1 kHz | Bandwidth as in ITU SM.329–9, s4.1 |
| 150kHz – 30MHz | – 36 dBm | 10 kHz | Bandwidth as in ITU SM.329–9, s4.1 |
| 30MHz – 1GHz | –36 dBm | 100 kHz | Bandwidth as in ITU SM.329–9, s4.1 |
| 1GHz | –30 dBm | 1 MHz | Bandwidth as in ITU SM.329–9, s4.1 |

Fc1–19,2 MHz or F1–10 MHz
whichever is the higher

| | | | |
|--|---------|-------|---|
| Fc1 – 19,2 MHz or Fl –10 MHz whichever is the higher / | –25 dBm | 1 MHz | Specification in accordance with ITU-R SM.329–9, s4.1 |
| Fc1 – 16 MHz or Fl –10 MHz whichever is the higher | | | |
| Fc1 – 16 MHz or Fl –10 MHz whichever is the higher / | –15 dBm | 1 MHz | Specification in accordance with ITU-R SM.329–9, s4.1 |
| Fc2 + 16 MHz or Fu +10 MHz whichever is the lower | | | |
| Fc2 + 16 MHz or Fu + 10 MHz whichever is the lower / | –25 dBm | 1 MHz | Specification in accordance with ITU-R SM.329–9, s4.1 |
| Fc2 +19,2 MHz or Fu + 10 MHz whichever is the lower | | | |
| Fc2 + 19,2 MHz or Fu +10 MHz whichever is the lower / | –30 dBm | 1 MHz | Bandwidth as in ITU-R SM.329–9, s4.1. Upper frequency as in ITU-R SM.329–9, s2.5 table 1 |
| 12,75 GHz | | | |

(The requirement applies at frequencies within the specified frequency ranges which are more than 4 MHz under the first carrier frequency used or more than 4 MHz above the last carrier frequency used.)

| | |
|-------------------------|---|
| Key Path | Meas Setup, Range Preset |
| Mode | TD-SCDMA |
| Remote Command | [:SENSe] :SPURious:CATegory:B |
| Example | SPUR:CAT:B |
| Dependencies/Couplings | This key is grayed out when the radio device is MS. |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Mobile (for TD-SCDMA only)

Sets the range parameters to meet the requirement of both the MS general and additional spurious emissions limits.

Spurious Emissions Measurement Meas Setup

General Spurious emissions requirements

| Frequency Bandwidth | Resolution Bandwidth | Minimum requirement |
|--|----------------------|---------------------|
| $9 \text{ kHz} \leq f < 150 \text{ kHz}$ | 1 kHz | -36 dBm |
| $150 \text{ kHz} \leq f < 30 \text{ MHz}$ | 10 kHz | -36 dBm |
| $30 \text{ MHz} \leq f < 1000 \text{ MHz}$ | 100 kHz | -36 dBm |
| $1 \text{ GHz} \leq f < 12.75 \text{ GHz}$ | 1 MHz | -30 dBm |

Additional Spurious emissions requirements

| Frequency Bandwidth | Resolution Bandwidth | Minimum requirement |
|---|----------------------|---------------------|
| $925 \text{ MHz} \leq f \leq 935 \text{ MHz}$ | 100 KHz | -67 dBm* |
| $935 \text{ MHz} < f \leq 960 \text{ MHz}$ | 100 KHz | -79 dBm* |
| $1805 \text{ MHz} \leq f \leq 1880 \text{ MHz}$ | 100 KHz | -71 dBm* |

* The measurements are made on frequencies which are integer multiples of 200 kHz.

(These requirements are only applicable for frequencies which are greater than 4 MHz away from the UE center carrier frequency.)

| | |
|-------------------------|--|
| Key Path | Meas Setup, Range Preset |
| Mode | TD-SCDMA |
| Remote Command | [:SENSE] :SPURious:CATegory:MOBile |
| Example | SPUR:CAT:MOB |
| Dependencies/Couplings | This key is grayed out when the radio device is BTS. |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Frequency Setup (for TD-SCDMA only)

Sets the required frequency parameters for the calculation of the start/stop frequency of the spurious emissions limits in TD-SCDMA mode.

The measurement does not restart when changing the values of the setup parameters. These parameters are used for calculating the range start and stop frequency in the measurement only. If you are going to perform a measurement with the newly-input values,, one of the soft key in the “Range Preset” menu should also be pressed afterwards.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

Center Frequency of the First Carrier (Fc1) (for TD-SCDMA only) Sets the center frequency of emission of the first carrier transmitted by the base station. This parameter is used for calculating the start/stop frequency of the range for base station when the softkey “Category A” or “Category B” under the range preset menu pressed.

| | |
|-------------------------|--|
| Key Path | Meas Setup, Freq Setup |
| Mode | TD-SCDMA |
| Remote Command | [:SENSE] :SPURious:CARRier:FREQuency:STARt <freq> [:SENSe] :SPURious:CARRier:FREQuency:STARt? |
| Example | SPUR:CARR:FREQ:STAR 2GHz SPUR:CARR:FREQ:STAR? |
| Notes | You must be in the TD-SCDMA mode. Use INSTRument:SELEct to set the mode. |
| Dependencies/Couplings | Coupled with Fc2 and Fl. The value of Fc1 is always not greater than the value of Fc2, and greater than the value of Fl. The following inequation for Fl, Fc1, Fc2 and Fu is satisfied: $Fl + 0.8MHz \leq Fc1 \leq Fc2 \leq Fu - 0.8 MHz$; This key is grayed out when the radio device is MS. |
| Preset | 2.0156 GHz |
| State Saved | Saved in instrument state. |
| Min | See Coupling |
| Max | See Coupling |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | 1.0 MHz |
| Instrument S/W Revision | A.01.60 or later |

Center Frequency of the Last Carrier (Fc2) (for TD-SCDMA only) Sets the center frequency of emission of the last carrier transmitted by the base station. This parameter is used for calculating the start/stop frequency of the range for base station when the softkey “Category A” or “Category B” under the range preset menu pressed.

| | |
|-----------------------|--|
| Key Path | Meas Setup, Freq Setup |
| Mode | TD-SCDMA |
| Remote Command | [:SENSE] :SPURious:CARRier:FREQuency:STOP <freq> [:SENSe] :SPURious:CARRier:FREQuency:STOP? |
| Example | SPUR:CARR:FREQ:STOP 10GHz SPUR:CARR:FREQ:STOP? |
| Notes | You must be in the TD-SCDMA mode. Use INSTRument:SELEct to set the mode. |

Spurious Emissions Measurement Meas Setup

| | |
|-------------------------|---|
| Dependencies/Couplings | This key is grayed out when the radio device is MS. Coupled with Fc1 and Fu. The value of Fc2 is always not less than the value of Fc1, and less than the value of Fu. The following inequation for Fl, Fc1, Fc2 and Fu is satisfied: $F_l + 0.8\text{MHz} \leq F_{c1} \leq F_{c2} \leq F_u - 0.8\text{MHz}$; |
| Preset | 2.0236 GHz |
| State Saved | Saved in instrument state. |
| Min | See Coupling |
| Max | See Coupling |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | 1.0 MHz |
| Instrument S/W Revision | A.01.60 or later |

TDD Lower Frequency (Fl) (for TD-SCDMA only) Sets the lower frequency of the band in which TDD operates. This parameter is used for calculating the start/stop frequency of the range for base station when the softkey “Category B” under the range preset menu pressed.

| | |
|-------------------------|--|
| Key Path | Meas Setup, Freq Setup |
| Mode | TD-SCDMA |
| Remote Command | [:SENSE] :SPURious:TDD:FREQuency:STARt <freq> [:SENSE] :SPURious:TDD:FREQuency:STARt? |
| Example | SPUR:TDD:FREQ:STAR 1GHz SPUR:TDD:FREQ:STAR? |
| Notes | You must be in the TD-SCDMA mode. Use INSTRument:SElect to set the mode. |
| Dependencies/Couplings | This key is grayed out when the radio device is MS. Coupled with Fc1. The value of Fl is always less than the value of Fc1. The following inequation for Fl, Fc1, Fc2 and Fu is satisfied: $F_l + 0.8\text{MHz} \leq F_{c1} \leq F_{c2} \leq F_u - 0.8\text{MHz}$; |
| Preset | 2.010 GHz |
| State Saved | Saved in instrument state. |
| Min | 1.011 GHz |
| Max | See Coupling |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | 1.0 MHz |
| Instrument S/W Revision | A.01.60 or later |

TDD Upper Frequency (Fu) (for TD-SCDMA only) Sets the upper frequency of the band in which

TDD operates. This parameter is used for calculating the start/stop frequency of the range for base station when the softkey “Category B” under the range preset menu pressed.

| | |
|-------------------------|---|
| Key Path | Meas Setup, Freq Setup |
| Mode | TD-SCDMA |
| Remote Command | [:SENSe] :SPURious:TDD:FREQuency:STOP <freq> [:SENSe] :SPURious:TDD:FREQuency:STOP? |
| Example | SPUR:TDD:FREQ:STOP 1GHz SPUR:TDD:FREQ:STOP? |
| Notes | You must be in the TD-SCDMA mode. Use INSTRument:SElect to set the mode. |
| Dependencies/Couplings | This key is grayed out when the radio device is MS. Coupled with Fc2. The value of Fu is always greater than the value of Fc2. The following inequation for Fl, Fc1, Fc2 and Fu is satisfied: $F_l + 0.8\text{MHz} \leq F_{c1} \leq F_{c2} \leq F_u - 0.8\text{MHz}$; |
| Preset | 2.025 GHz |
| State Saved | Saved in instrument state. |
| Min | See Coupling |
| Max | 3.689 GHz |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | 1.0 MHz |
| Instrument S/W Revision | A.01.60 or later |

Center Frequency for Mobile (for TD-SCDMA only) Sets the center frequency of the mobile. This parameter is used for calculating the start/stop frequency of the range for mobile after the softkey “Mobile” under the range preset menu pressed.

| | |
|------------------------|--|
| Key Path | Meas Setup, Freq Setup |
| Mode | TD-SCDMA |
| Remote Command | [:SENSe] :SPURious:CARRier:FREQuency:MOBil <freq> [:SENSe] :SPURious:CARRier:FREQuency:MOBil? |
| Example | SPUR:CARR:FREQ:MOB 2GHz SPUR:CARR:FREQ:MOB? |
| Notes | You must be in the TD-SCDMA mode. Use INSTRument:SElect to set the mode. |
| Dependencies/Couplings | This key is grayed out when the radio device is BTS. |
| Preset | 2.0204 GHz |

Spurious Emissions Measurement Meas Setup

| | |
|-------------------------|----------------------------|
| State Saved | Saved in instrument state. |
| Min | 1.005 GHz |
| Max | 3.695 GHz |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | 1.0 MHz |
| Instrument S/W Revision | A.01.60 or later |

Mode

See “[Mode](#)” on page [1133](#) in the section "Common Measurement Functions" for more information.

Mode Setup

See “[Mode Setup](#)” on page 1145 in the section "Common Measurement Functions" for more information.

Peak Search

Performs a peak search and opens the Peak Search menu. The Peak Search functions allow you to define specific search criteria to determine which signals can be considered peaks, excluding unwanted signals from the search.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Peak Search

Places the selected marker on the trace point with the maximum y-axis value for that marker's trace.

| | |
|-------------------------|--|
| Key Path | Peak Search |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEV-DO |
| Remote Command | :CALCulate:SPURious:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : MAXimum |
| Example | CALC:SPUR:MARK2:MAX |
| Instrument S/W Revision | A.01.60 or later |

Next Peak

Moves the selected marker to the peak that has the next highest amplitude less than the current marker value.

| | |
|-------------------------|---|
| Key Path | Peak Search |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:SPURious:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : MAXimum:NEXT |
| Example | CALC:SPUR:MARK2:MAX:NEXT |
| Instrument S/W Revision | A.01.60 or later |

Next Pk Right

Moves the selected marker to the nearest peak to the right of the current marker which meets all enabled peak criteria.

| | |
|----------|--|
| Key Path | Peak Search |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |

Spurious Emissions Measurement Peak Search

| | |
|-------------------------|--|
| Remote Command | :CALCulate:SPURious:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : MAXimum:RIGHT |
| Example | CALC:SPUR:MARK2:MAX:RIGH |
| Instrument S/W Revision | A.01.60 or later |

Next Pk Left

Moves the selected marker to the nearest peak to the left of the current marker which meets all enabled peak criteria.

| | |
|-------------------------|---|
| Key Path | Peak Search |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:SPURious:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : MAXimum:LEFT |
| Example | CALC:SPUR:MARK2:MAX:LEFT |
| Instrument S/W Revision | A.01.60 or later |

Marker Delta

Performs the same function as the Delta 1-of-N selection key in the Marker menu. This sets the control mode for the selected marker to Delta mode. See the Marker section for the complete description of this function. The key is duplicated here in the Peak Search Menu to allow you to conveniently perform a peak search and change the control of the Marker mode to Delta without having to access two separate menus.

| | |
|-------------------------|--------------------|
| Key Path | Peak Search |
| Instrument S/W Revision | A.01.60 or later |

Pk-Pk Search

Finds and displays the amplitude and frequency (or time, if in zero span) differences between the highest and lowest y-axis value.

| | |
|------------------------|---|
| Key Path | Peak Search |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:SPURious:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : PTPeak |
| Example | CALC:SPUR:MARK:PTP |
| Notes | Turns on the Marker Δ |
| Dependencies/Couplings | This key is not available (key is grayed out) when Coupled Markers is on. |

Instrument S/W Revision A.01.60 or later

Min Search

Moves the selected marker to the minimum y-axis value on the current trace.

| | |
|-------------------------|--|
| Key Path | Peak Search |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:SPURious:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : MINimum |
| Example | CALC:SPUR:MARK:MIN |
| Instrument S/W Revision | A.01.60 or later |

Recall

See “[Recall](#)” on page 1149 in the section "Common Measurement Functions" for more information.

Restart

See “Restart” on page 1167 in the section "Common Measurement Functions" for more information.

Save

See “[Save](#)” on page 1169 in the section "Common Measurement Functions" for more information.

Single

See “[Single \(Single Measurement/Sweep\)](#)” on page 1191 in the section "Common Measurement Functions" for more information.

Source

See “[Source](#)” on page 1193 in the section "Common Measurement Functions" for more information.

Span X Scale

Span X Scale is unavailable in the Spurious Emissions measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Sweep/Control

Accesses the Sweep/Control menu keys used to set up and control the sweep time and source.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Sweep Setup

Sets the sweep functions that control the sweep state and time.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Auto Sweep Time Rules

Switches the analyzer between normal and accuracy sweep states. Setting **Auto Sweep Time** to **Accy** will result in slower sweep times, usually about three times as long, but better amplitude accuracy for CW signals. The instrument amplitude accuracy specifications only apply when **Auto Sweep Time** is set to **Accy**.

Additional amplitude errors which occur when **Auto Sweep Time** is set to **Norm** are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, **Norm** is the preferred setting of **Auto Sweep Time**. **Auto Sweep Time** is set to **Norm** on a **Preset** or **Auto Couple**. This means that in the Preset or Auto Coupled state, instrument amplitude accuracy specifications do not apply.

| | |
|-----------------------|---|
| Key Path | Sweep/Control, Sweep Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | <code>[[:SENSE]:SPURious:SWEep:TIME:AUTO:RULEs NORMal ACCuracy [:SENSE]:SPURious:SWEep:TIME:AUTO:RULEs?</code> |
| Example | SPUR:SWE:TIME:AUTO:RUL ACC SPUR:SWE:TIME:AUTO:RUL? |
| Notes | In Zero Span, this key is irrelevant and inaccessible (because the whole Sweep Setup menu is grayed out), however, Sweep Setup settings can be changed remotely with no error indication. This command is implemented as “[:SENSE]:SPURious[:RANGe][:LIST]:SWEep:TIME:AUTO:RULEs” to avoid illegal SCPI node definition. So, this command should be used as “[:SENSE]:SPURious:SWEep:TIME:AUTO:RULEs”. |
| Preset | NORMal |
| State Saved | Saved in instrument state. |

| | |
|-------------------------|------------------|
| Range | Norm Accy |
| Instrument S/W Revision | A.01.60 or later |

Pause

Pauses a measurement after the current data acquisition is complete.

When Paused, the label on the key changes to Resume. Pressing the Resume resumes the measurement at the point it was at when paused.

See Pause/Resume in the "Measurement Setup Functions" section for more information.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Trace/Detector

Trace/Detector is unavailable in the Spurious Emissions measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Trigger


Accesses the Trigger menu which contains keys to control the 1-of-N selection of the Trigger source.

The trigger functions let you select the trigger settings for a sweep or measurement.

See [“Trigger” on page 1221](#) in the "Common Measurement Functions" section for more information.

View/Display

Standard Result Screen

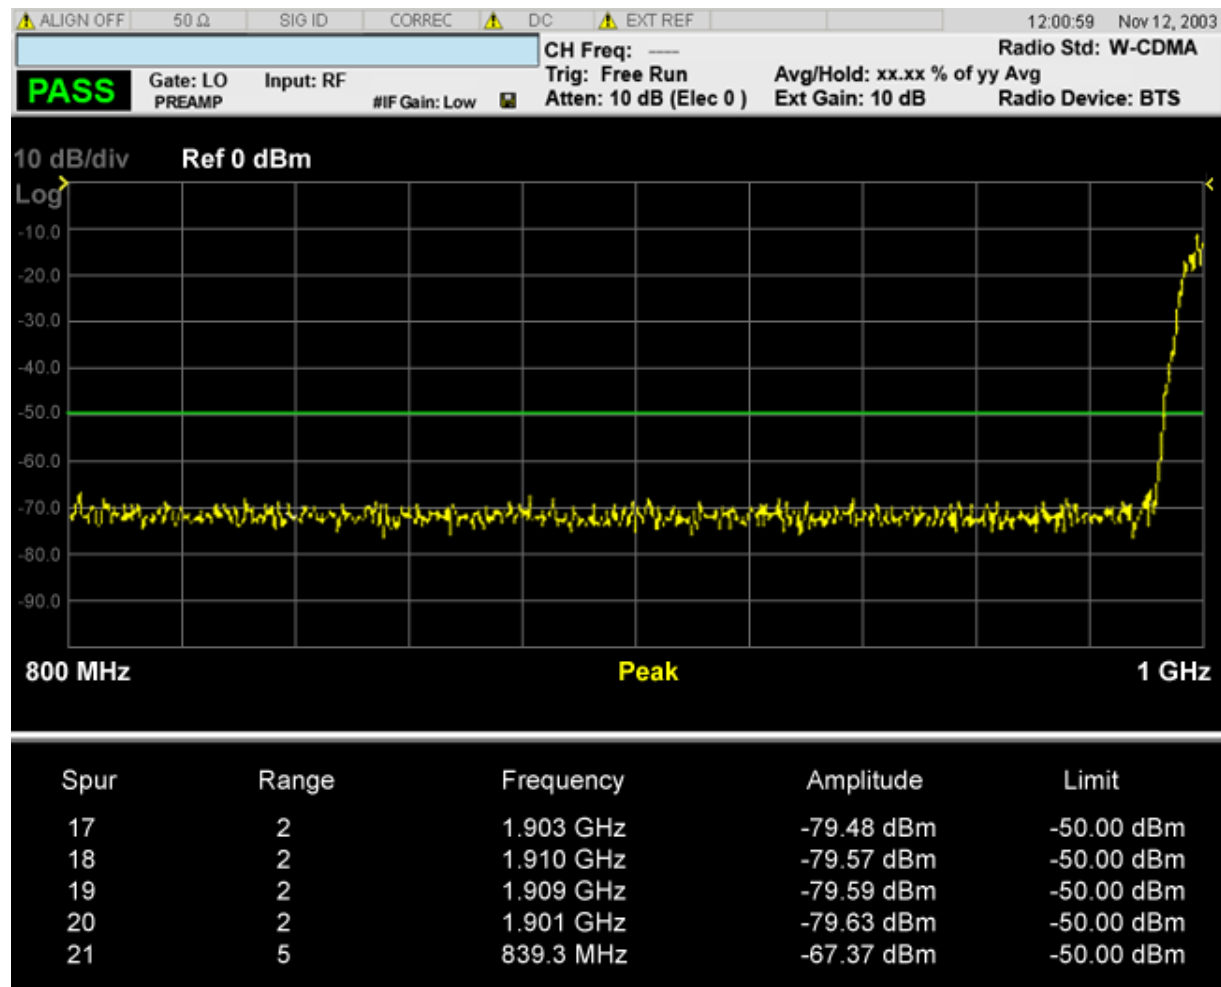

| Result | Units | Min | Max |
|-------------------------|------------------|--------------|--------------|
| Spur | N/A | 0 | 200 |
| Range | N/A | 1 | 20 |
| Frequency | Hz | Analyzer Min | Analyzer Max |
| Amplitude | dBm | -150 | 50 |
| Limit | dBm | -150 | 50 |
| Instrument S/W Revision | A.01.60 or later | | |

The spurs listed are within the current value of the Marker Peak Excursion setting of the absolute limit. All of the spurs listed passed. Any spur that has failed the absolute limit will have an 'F' beside it.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Display

Accesses a menu of functions that enable you to set the display parameters.

See [“Display” on page 1273](#) in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|---------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

The Occupied Bandwidth measurement computes and displays the bandwidth occupied by a given percentage of the total mean power of a signal.

This topic contains the following sections:

[“Remote Commands for Occupied Bandwidth ” on page 579](#)

[“Remote Command Results for Occupied Bandwidth Measurement” on page 579](#)

Remote Commands for Occupied Bandwidth

```
:CONFigure:OBWidth
:CONFigure:OBWidth:NDEFault
:INITiate:OBWidth
:FETCh:OBWidth [n]?
:MEASure:OBWidth [n]?
:READ:OBWidth [n]?
:FETCh:OBWidth:OBWidth?
:MEASure:OBWidth:OBWidth?
:READ:OBWidth:OBWidth?
:FETCh:OBWidth:FERRor?
:MEASure:OBWidth:FERRor?
:READ:OBWidth:FERRor?
:FETCh:OBWidth:XDB?
:MEASure:OBWidth:XDB?
:READ:OBWidth:XDB?
```

See also the section, [“Remote Measurement Functions” on page 1115](#).

Remote Command Results for Occupied Bandwidth Measurement

For descriptions of the results, see [“Measurement Results” on page 581](#).

| n | Results Returned |
|---|------------------|
|---|------------------|

Occupied Bandwidth

n=1 (or not specified)

Returns 6 scalar results, in the following order:

1. Occupied bandwidth – Hz
2. Total Power – dBm (Total Power will be obsolete in TD-SCDMA mode, this place will be replaced by NaN)
3. Span - Hz
4. Spectrum Trace Points - points
5. Res BW – Hz
6. Transmit Frequency Error Hz
7. x DB Bandwidth - Hz

2

Returns the frequency-domain spectrum trace (data array) for the entire frequency range being measured.

Key Path

Meas

Instrument S/W Revision

A.01.60 or later

Measurement Results

Measurement results are described in this section. Views are described under the Section “View/Display” on page 619, “View/Display” on page 619 key.

The following result descriptions are available:

“Occupied Bandwidth” on page 581

“Total Power” on page 581

“Transmit Freq Error” on page 581

“x dB Bandwidth” on page 581

Occupied Bandwidth

The occupied bandwidth result is $f_2 - f_1$, where f_1 and f_2 are calculated .

Total Power

The total power is the power integrated in the specified span setting.

Transmit Freq Error

The transmit freq error (transmit frequency error) result is calculated as the difference between $(f_2+f_1)/2$ and the tuned center frequency of the signal, where f_1 and f_2 are calculated.

x dB Bandwidth

The x dB result is a bandwidth measured between two points on the signal which are a certain number of dBs down from the highest signal point within the OBW Span. For example, If the ‘x dB’ parameter is set to -26dB, and the ‘Occupied BW Span’ is set to 10 MHz, then the maximum signal power level is first determined from the 10MHz wide trace sweep. Next, the two furthest frequencies below (xdb_f1) and above (xdb_f2) the frequency of the maximum level occurrence are found where the signal level is 26dB below the peak level. This calculation also uses linear interpolation to find the lower and upper carrier boundary point within the width of a sweep point (the span divided by the number of sweep points).

The x dB bandwidth is calculated to be $xdb_f_2 - xdb_f_1$.

AMPTD Y Scale (Amplitude/Y Scale)

Activates the Reference Value function and displays the Amplitude menu keys. These functions control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis. See “AMPTD Y Scale (Amplitude Y Scale)” on page 1037 for more information.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Ref Value

Sets the absolute power reference value. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV el <real> :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV el? |
| Example | DISP:OBW:VIEW:WIND:TRAC:Y:RLEV 125 DISP:OBW:VIEW:WIND:TRAC:Y:RLEV? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTRument:SELEct to set the mode. |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off. |
| Preset | 10.00 dBm |
| State Saved | Saved in instrument state. |
| Min | -250.00 dBm |
| Max | 250.00 dBm |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Attenuation

Accesses a menu of functions that enable you to change the attenuation settings. This key has read-back

text that describes the total attenuator value.

See [“Attenuation” on page 1037](#) for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div

Sets the logarithmic units per vertical graticule division on the display. When the Auto Scaling is On, the Scale/Div is automatically determined by the measurement result. When you set a value manually, Auto Scaling is automatically toggled to Off.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIv ision <rel_ampl> :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIv ision? |
| Example | DISP:OBW:VIEW:WIND:TRAC:Y:PDIv 5 DISP:OBW:VIEW:WIND:TRAC:Y:PDIv? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SELEct to set the mode. |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off. |
| Preset | 10.00 dB |
| State Saved | Saved in instrument state. |
| Min | 0.10 dB |
| Max | 20.00 dB |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See [“Internal Preamp” on page 1051](#) for more information.

| | |
|----------|----------------------|
| Key Path | AMPTD Y Scale |
|----------|----------------------|

Occupied Bandwidth
AMPTD Y Scale (Amplitude/Y Scale)

Instrument S/W Revision A.01.60 or later

Ref Position

Positions the reference level at the top, center or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOS ition TOP CENTer BOTTom :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOS ition? |
| Example | DISP:OBW:VIEW:WIND:TRAC:Y:RPOS BOTT DISP:OBW:VIEW:WIND:TRAC:Y:RPOS? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTRument:SELEct to set the mode. |
| Preset | TOP |
| State Saved | Saved in instrument state. |
| Range | Top Ctr Bot |
| Instrument S/W Revision | A.01.60 or later |

Auto Scaling

Allows you to toggle the Auto Scaling function between On and Off.

| | |
|------------------------|--|
| Key Path | AMPTD Y Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUP le 0 1 OFF ON :DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUP le? |
| Example | DISP:OBW:VIEW:WIND:TRAC:Y:COUP ON DISP:OBW:VIEW:WIND:TRAC:Y:COUP? |
| Dependencies/Couplings | When Auto Scaling is On, upon pressing the Restart front-panel key, this function automatically sets the scale per division to 10 dB and determines reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off. |

| | |
|-------------------------|----------------------------|
| Preset | 1 |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Auto Couple

Operation of this key is identical across several measurements. For details about this key, see “[AUTO COUPLE](#)” on page 1055.

BW

Accesses a menu of functions that enable you to specify and control the video and resolution bandwidths. You can also select the type of filter for the measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Res BW

Sets the resolution bandwidth for the current measurement. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

| | |
|------------------------|--|
| Key Path | BW |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE]:OBWidth:BANDwidth[:RESolution] <bandwidth> [:SENSE]:OBWidth:BANDwidth[:RESolution]? [:SENSE]:OBWidth:BANDwidth[:RESolution]:AUTO ON OFF 1 0 [:SENSE]:OBWidth:BANDwidth[:RESolution]:AUTO? |
| Example | OBW:BAND 250000 OBW:BAND? OBW:BAND:AUTO OFF OBW:BAND:AUTO? |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SElect to set the mode. |
| Dependencies/Couplings | Sweep time is coupled to RBW. As the RBW changes, the sweep time (if set to Auto) is changed to maintain amplitude calibration. Video bandwidth (VBW) is coupled to RBW. As the resolution bandwidth changes, the video bandwidth (if set to Auto) changes to maintain the ratio of VBW/RBW (10:1). When Res BW is set to Auto, the resolution bandwidth is auto-coupled to span. The ratio of Span/RBW is approximately 106:1 when auto coupled. When Res BW is set to Man, bandwidths are entered manually, and these bandwidths are used regardless of other analyzer settings. Refer to epsg1024075 for AUTO coupling rules for the resolution bandwidth. |

Occupied Bandwidth BW

| | |
|-------------------------|--|
| Preset | SA: Auto WCDMA: 30 kHz CDMA2K: 12 kHz WIMAX OFDMA: 100kHz TD-SCDMA: 30kHz 1xEVDO: 30kHz SA: ON WCDMA, C2K,TD-SCDMA,WIMAX OFDMA, 1xEVDO: OFF |
| State Saved | Saved in instrument state. |
| Min | 1 Hz |
| Max | 8 MHz |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Video BW

Changes the analyzer post-detection filter.

| | |
|-----------------------|---|
| Key Path | BW |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | <code>[:SENSE] :OBWidth: BANDwidth: VIDEo <bandwidth></code> <code>[:SENSe] :OBWidth: BANDwidth: VIDEo?</code> <code>[:SENSe] :OBWidth: BANDwidth: VIDEo: AUTO ON OFF 1 0</code> <code>[:SENSe] :OBWidth: BANDwidth: VIDEo: AUTO?</code> |
| Example | <code>OBW: BAND: VID 5 MHz</code> <code>OBW: BAND: VID?</code> <code>OBW: BAND: VID: AUTO ON</code> <code>OBW: BAND: VID: AUTO?</code> |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use: <code>INSTRument: SElect</code> to set the mode. |

| | |
|-------------------------|---|
| Dependencies/Couplings | <p>When using the average detector with either Sweep Time set to Man, or in zero span, the VBW setting has no effect and is disabled (grayed out).</p> <p>Video bandwidth (VBW) is coupled to RBW. As the resolution bandwidth changes, the video bandwidth (if set to Auto) changes to maintain the ratio set by VBW/RBW.</p> <p>Sweep Time is coupled to Video Bandwidth (VBW). As the VBW is changed, the sweep time (when set to Auto) is changed to maintain amplitude calibration. This occurs because of common hardware between the two circuits, even though the Video BW filter is not actually “in-circuit” when the detector is set to Average. Because the purpose of the average detector and the VBW filter are the same, either can be used to reduce the variance of the result.</p> <p>Although the VBW filter is not “in-circuit” when using the average detector, the Video BW key can have an effect on (Auto) sweep time, and is not disabled. In this case, reducing the VBW setting increases the sweep time, which increases the averaging time, producing a lower-variance trace.</p> <p>When the video bandwidth is AUTO coupled, the video bandwidth value is set to:</p> <p>Resolution Bandwidth * Video Bandwidth to Resolution Bandwidth Ratio</p> |
| Preset | <p>SA: Auto</p> <p>WCDMA: 300 kHz</p> <p>CDMA2K:120 kHz</p> <p>WIMAX OFDMA: 1MHz</p> <p>TD-SCDMA: 300kHz</p> <p>1xEVDO: 300kHz</p> <p>ON</p> |
| State Saved | Saved in instrument state. |
| Min | 1 Hz |
| Max | 50 MHz |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Filter Type

Allows you to select the type of filter to be used for the current measurement. Besides the Gaussian filter shape, there are certain special filter types, such as Flat Top, that are desirable under certain conditions.

| | |
|----------|---|
| Key Path | BW |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |

Occupied Bandwidth BW

| | |
|-------------------------|--|
| Remote Command | <code>[:SENSe] :OBWidth:BAWdth:SHApe GAUSSian FLATtop</code> <code>[:SENSe] :OBWidth:BAWdth:SHApe?</code> |
| Example | <code>OBW:BAWdth:SHApe GAUS</code> <code>OBW:BAWdth:SHApe?</code> |
| Preset | GAUSSian |
| State Saved | Saved in instrument state. |
| Range | Gaussian Flattop |
| Instrument S/W Revision | A.01.60 or later |

Cont (Continuous)

Operation of this key is identical across several measurements. For details about this key, see “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1063.

FREQ/Channel (Frequency or Channel)

Operation of this key is identical across several measurements. For details about this key, see cdma2000“FREQ/Channel” on page 1059.

Input/Output

Operation of this key is identical across several measurements. For details about this key, see [“Input/Output” on page 1065](#).

Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

For more information, see “Marker” on page 1109.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays the menu keys that enable you to select, set up and control the markers for the current measurement

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**.

| | |
|-------------------------|--|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:OBWidth:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X <real> :CALCulate:OBWidth:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X ? |
| Example | CALC:OBW:MARK3:X 0 CALC:OBW:MARK3:X? |
| Notes | The query returns the marker’s absolute X Axis value if the control mode is Normal , or the offset from the marker’s reference marker if the control mode is Delta . The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency . |
| Preset | After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN). |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**.

| | |
|-------------------------|--|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:OBWidth:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition <real> :CALCulate:OBWidth:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition? |
| Example | CALC:OBW:MARK10:X:POS 0 CALC:OBW:MARK10:X:POS? |
| Notes | The query returns the marker's absolute X Axis value in trace points if the control mode is Normal , or the offset from the marker's reference marker in trace points if the control mode is Delta . |
| Preset | After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN). |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Marker Y Axis Value (Remote Command only)

Returns the marker Y Axis value in the current marker Y Axis unit.

| | |
|-------------------------|--|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:OBWidth:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :Y ? |
| Example | CALC:OBW:MARK11:Y? |
| Preset | Result dependent on Markers setup and signal source. |
| State Saved | No |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Marker Type

Sets the marker control mode to **Normal**, **Delta** or **Off**. If the selected marker is Off, pressing Marker sets it to Normal and places a single marker at the center of the display. At the same time, **Marker X Axis**

Occupied Bandwidth Marker

Value appears on the Active Function area.

| | |
|-------------------------|--|
| Key Path | Marker |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:OBwidth:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M ODE POSition DELTa OFF :CALCulate:OBwidth:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M ODE? |
| Example | CALC:OBW:MARK:MODE POS CALC:OBW:MARK:MODE? |
| Notes | If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X Axis Value appears on the Active Function area. Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off. Active Function Display: the marker X axis value entered in the active function area displays the marker value to its full entered precision. |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Normal Delta Off |
| Instrument S/W Revision | A.01.60 or later |

Properties

Accesses the marker properties menu.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|---------------------------|
| Key Path | Marker, Properties |
| Instrument S/W Revision | A.01.60 or later |

Relative To

Selects the desired marker. The selected marker will be relative to its reference marker.

| | |
|----------|---------------------------|
| Key Path | Marker, Properties |
|----------|---------------------------|

| | |
|-------------------------|---|
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:OBWidth:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R EFerence <integer> :CALCulate:OBWidth:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R EFerence? |
| Example | CALC:OBW:MARK:REF 2 CALC:OBW:MARK:REF? |
| Notes | A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself." When queried a single value is returned (the specified marker numbers relative marker). You must be in the Spectrum Analysis mode, WCDMA mode, TD-SCDMA mode, 1xEVDO mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SELEct to set the mode. |
| Preset | 2 3 4 5 6 7 8 9 10 11 12 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 12 |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

All Markers Off

Turns off all markers.

| | |
|-------------------------|---|
| Key Path | Marker |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:OBWidth:MARKer:AOFF |
| Example | CALC:OBW:MARK:AOFF |
| Instrument S/W Revision | A.01.60 or later |

Marker Function

There are no 'Marker Functions' supported in Occupied Bandwidth so this front-panel key displays a blank key menu when pressed.

| Key Path | Front panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Marker To

There is no 'Marker To' functionality supported in Occupied Bandwidth so this front-panel key displays a blank key menu when pressed.

| Key Path | Front panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Meas

Operation of this key is identical across several measurements. For details about this key, see [“Meas” on page 1115](#).

Mode

Operation of this key is identical across several measurements. For details about this key, see [“Mode” on page 1133](#).

Mode Setup

Operation of this key is identical across several measurements. For details about this key, see [“Mode Setup”](#) on page 1145.

Peak Search

Places the selected marker on the trace point with the maximum y-axis value for that marker's trace. Pressing Peak Search with the selected marker off causes the selected marker to be set to Normal, then a peak search is immediately performed.

| | |
|-------------------------|---|
| Key Path | Front panel key |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :CALCulate:OBWidth:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M AXimum |
| Example | CALC:OBW:MARK2:MAX |
| Instrument S/W Revision | A.01.60 or later |

Recall

Operation of this key is identical across several measurements. For details about this key, see [“Recall”](#) on page 1149.

Restart

Operation of this key is identical across several measurements. For details about this key, see [“Restart” on page 1167](#).

Save

Operation of this key is identical across several measurements. For details about this key, see [“Save” on page 1169](#).

Single

Operation of this key is identical across several measurements. For details about this key, see “[Single \(Single Measurement/Sweep\)](#)” on page 1191.

Source

Operation of this key is identical across several measurements. For details about this key, see “[Source](#)” on page 1193.

Span X Scale

Activates the Span function and displays the menu of span functions. The parameter values are measurement independent.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Span

Set the frequency of the occupied bandwidth span for the current measurement.

| | |
|-------------------------|--|
| Key Path | Span X Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :OBWidth:FREQUENCY:SPAN <freq> [:SENSE] :OBWidth:FREQUENCY:SPAN? |
| Example | OBW:FREQ:SPAN 2.4 MHz OBW:FREQ:SPAN? |
| Dependencies/Couplings | When changing the Occupied Bandwidth Span, the Resolution Bandwidth and Video Bandwidth are set to AUTO to prevent the span from clipping. |
| Preset | SA: 3 MHz WCDMA: 10 MHz WIMAX OFDMA: 20MHz CDMA2K:2MHz TD-SCDMA: 4.8MHz 1xEVDO: 3.75MHz |
| State Saved | Saved in instrument state. |
| Min | 100 Hz |
| Max | 1GHz |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | HW DEPENDENT |
| Instrument S/W Revision | A.01.60 or later |

Full Span

Changes the Occupied Bandwidth Span to show the full frequency range of the analyzer. When using external mixing, it changes the displayed frequency span to the frequency range specified for the

Occupied Bandwidth Span X Scale

selected external mixing band.

| | |
|-------------------------|--|
| Key Path | Span X Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA |
| Remote Command | [:SENSe] :OBWidth:FREQuency:SPAN:FULL |
| Example | OBW:FREQ:SPAN:FULL |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SELEct to set the mode. |
| Dependencies/Couplings | Selecting full span changes the measurement span value. |
| Instrument S/W Revision | A.01.60 or later |

Last Span

Changes the measurement frequency span to previous measurement span setting. If there is no existing previous span value then the span remains unchanged.

| | |
|-------------------------|--|
| Key Path | Span X Scale |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA |
| Remote Command | [:SENSe] :OBWidth:FREQuency:SPAN:PREVious |
| Example | OBW:FREQ:SPAN:PREV |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode or WIMAX OFDMA mode to use this command. Use:INSTrument:SELEct to set the mode. |
| Dependencies/Couplings | Selecting last span changes the measurement span value. |
| Instrument S/W Revision | A.01.60 or later |

Sweep/Control

Displays a menu of functions that enable you to set up and control the sweep time and source for the current measurement.

For details about this key, see [“Sweep / Control” on page 1197](#).

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Sweep Time

Selects the length of time in which the spectrum analyzer sweeps the displayed frequency span. Additional overhead time, which impacts the sweep rate, is not calculated as part of the sweep time. In fact:

sweep rate = span/sweep time

update rate = 1/(sweep time + overhead)

sweep cycle time = sweep time + overhead

Sweep time is coupled to RBW and VBW, and is impacted by the number of sweep points, so changing those parameters may change the sweep time.

This is not available when the selected input is I/Q.

| | |
|------------------------|--|
| Key Path | Sweep/Control |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE]:OBWidth:SWEep:TIME <time> [:SENSE]:OBWidth:SWEep:TIME? [:SENSE]:OBWidth:SWEep:TIME:AUTO OFF ON 0 1 [:SENSE]:OBWidth:SWEep:TIME:AUTO? |
| Example | OBW:SWE:TIME 50 ms OBW:SWE:TIME? OBW:SWE:TIME:AUTO ON OBW:SWE:TIME:AUTO? |
| Dependencies/Couplings | When you manually change the Sweep Time, this state automatically goes to ‘Man’. |

Occupied Bandwidth Sweep/Control

| | |
|-------------------------|--|
| Preset | SA, WIMAX OFDMA, C2K, TD-SCDMA, 1xEVDO: Automatically Calculated WCDMA: 32.6 ms SA, WIMAX OFDMA, C2K, TD-SCDMA, 1xEVDO: ON WCDMA: OFF |
| State Saved | Saved in instrument state. |
| Min | 1 ms |
| Max | 4000 s |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | TBD |
| Instrument S/W Revision | A.01.60 or later |

Sweep Setup

Accesses the sweep setup settings for the current measurement.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Auto Sweep Time Rules

Switches the analyzer between normal and accuracy sweep states.

Setting Auto Sweep Time to Accy results in slower sweep times, usually about three times as long, but better amplitude accuracy for CW signals. The instrument amplitude accuracy specifications only apply when Auto Sweep Time is set to Accy.

Additional amplitude errors which occur when Auto Sweep Time is set to Norm are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, Norm is the preferred setting of Auto Sweep Time. Auto Sweep Time is set to Norm on a Preset or Auto Couple. This means that in the Preset or Auto Coupled state, instrument amplitude accuracy specifications do not apply.

| | |
|-----------------------|--|
| Key Path | Sweep/Control, Sweep Setup |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [[:SENSE]:OBWidth:SWEep:TIME:AUTO:RULEs NORMal ACCuracy [:SENSE]:OBWidth:SWEep:TIME:AUTO:RULEs? |
| Example | OBW:SWE:TIME:AUTO:RUL NORM OBW:SWE:TIME:AUTO:RUL? |
| Notes | Set to Norm when Auto Couple is pressed or sent remotely. |
| Preset | NORMal |

| | |
|-------------------------|----------------------------|
| State Saved | Saved in instrument state. |
| Range | Norm Accy |
| Instrument S/W Revision | A.01.60 or later |

Pause

Pauses the measurement after the current data acquisition is complete.

When Paused, the label on the key changes to Resume. Pressing the Resume key resumes the measurement at the point where it had been paused.

See [“Pause/Resume” on page 1198](#) for more information.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Gate

Accesses a menu that enables you to control the gating function .

The Gate functionality is used to view signals best viewed by qualifying them with other events.

This function is not available when the selected input is I/Q.

.For details about this key, see [“Gate” on page 417](#).

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Points

Sets the number of points per sweep. The resolution of setting the sweep time depends on the number of points selected. The current value of points is displayed parenthetically, next to the sweep time in the lower-right corner of the display.

| | |
|-----------------------|---|
| Key Path | Sweep/Control |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | [:SENSE] :OBWidth:SWEep:POINts <integer> [:SENSe] :OBWidth:SWEep:POINts? |
| Example | OBW:SWE:POIN 1500 OBW:SWE:POIN? |

Occupied Bandwidth Sweep/Control

| | |
|-------------------------|--|
| Notes | <p>This function is not available when signal identification is set to On (external mixing).</p> <p>Affected by:</p> <p>log sweep, segmented sweep</p> <p>Grayed out in measurements that don't support swept</p> <p>Blanked in modes that do not support swept.</p> <p>Whenever the number of sweep points change:</p> <ul style="list-style-type: none">- All trace data is erased- Any traces with Update Off also go to Display Off (like going from View to Blank in the older analyzers)- Sweep time is re-quantized- Any limit lines that are on are updated- If averaging/hold is on, averaging/hold starts over |
| Dependencies/Couplings | Whenever the number of sweep points change, the sweep time is re-quantized. |
| Preset | 1001 |
| State Saved | Saved in instrument state. |
| Min | 101 |
| Max | 20001 |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Trace/Detector

Accesses a menu of functions that enable you to control the detectors for the current measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Trace Type

Allows you to select the type of trace you want to you use for the current measurement.

The first page of this menu contains a 1-of-N selection of the trace type (Clear Write, Average, Max Hold, Min Hold) for the selected trace.

| | |
|-------------------------|---|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | :TRACe:OBWidth:TYPE WRITe AVERAge MAXHold MINHold :TRACe:OBWidth:TYPE? |
| Example | TRAC:OBW:TYPE MINH TRAC:OBW:TYPE? |
| Notes | WRITe = Clear Write AVERAge = Average MAXHold = Maximum Hold MINHold = Minimum Hold |
| Dependencies/Couplings | When Detector setting is “Auto” (:SENSe]:OBWidth:DETEctor:AUTO?), Detector (:SENSe]:OBWidth:DETEctor[:FUNCTion]?) switches aligning with the switch of this parameter: “NORMal” with WRITe (Clear Write), “AVERAge” with AVERAge, “POSitive (peak)” with MAXHold, and “NEGative (peak)” with MINHold. |
| Preset | AVERAge |
| State Saved | Saved in instrument state. |
| Range | WRITe AVERAge MAXHold MINHold |
| Instrument S/W Revision | A.01.60 or later |

Detector

Accesses a menu of functions that enables you to control the detectors for the current measurement. The following choices are available:

— Auto- the detector selected depends on marker functions, trace functions, average type, and the trace

Occupied Bandwidth Trace/Detector

averaging function.

- Normal-the detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.
- Average-the detector determines the average of the signal within the sweep points. The averaging method depends upon the Average Type selection (voltage, power or log scales).
- Peak (Positive)-the detector determines the maximum of the signal within the sweep points.
- Sample-the detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.
- Negative Peak-the detector determines the minimum of the signal within the sweep points.

| | |
|-------------------------|------------------|
| Key Path | Detector |
| Instrument S/W Revision | A.01.60 or later |

Detector Selection

Allows you to select a specific detector for the current measurement. When the detector choice is Auto, the analyzer selects the detector. The selected detector depends on marker functions, trace functions, and trace averaging functions for the current measurement.

| | |
|-----------------------|--|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Remote Command | <code>[:SENSe] :OBWidth:DETECTOR [:FUNction]</code> <code>NORMAL AVERAGE POSITIVE SAMPLE NEGATIVE</code> <code>[:SENSe] :OBWidth:DETECTOR [:FUNction] ?</code> |
| Example | <code>OBW:DET NORM</code> <code>OBW:DET?</code> |
| Notes | <p>When you manually select a detector (instead of selecting Auto), that detector is used regardless of other analyzer settings.</p> <p>The detector choices are:</p> <p>The Normal detector determines the peak of CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.</p> <p>The Average detector determines the average of the signal within the sweep points. The averaging method is Power Average (RMS).</p> <p>The Peak detector determines the maximum of the signal within the sweep points.</p> <p>The Sample detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.</p> <p>The Negative Peak detector determines the minimum of the signal within the sweep points.</p> |

| | |
|-------------------------|---|
| Dependencies/Couplings | When Detector setting is “Auto” (:SENSe]:OBWidth:DETEctor:AUTO?), Detector (:SENSe]:OBWidth:DETEctor[:FUNCTion]?) switches aligning with the switch of this parameter: “NORMal” with Clear Write, “AVERage” with AVERage, “POSitive (peak)” with MAXHold, and “NEGative (peak)” with MINHold. |
| Preset | AVERage |
| State Saved | Saved in instrument state. |
| Range | Normal Average Peak Sample Negative Peak |
| Instrument S/W Revision | A.01.60 or later |

Auto

When the detector choice is Auto, the analyzer selects the detector. The selected detector depends on marker functions, trace functions, and trace averaging functions for the current measurement.

| | |
|-------------------------|---|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO mode |
| Remote Command | [:SENSe] :OBWidth:DETEctor:AUTO ON OFF 1 0 [:SENSe] :OBWidth:DETEctor:AUTO? |
| Example | OBW:DET:AUTO ON OBW:DET:AUTO? |
| Dependencies/Couplings | When Detector setting is “Auto” (:SENSe]:OBWidth:DETEctor:AUTO?), Detector (:SENSe]:OBWidth:DETEctor[:FUNCTion]?) switches aligning with the switch of this parameter: “NORMal” with Clear Write, “AVERage” with AVERage, “POSitive (peak)” with MAXHold, and “NEGative (peak)” with MINHold. |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Instrument S/W Revision | A.01.60 or later |

Trigger

Operation of this key is identical across several measurements. For details about this key, see [“Trigger” on page 1221](#).

View/Display

Accesses a menu of functions that enable you to set the view and display parameters for the current measurement.

View


There is a single results view available for this measurement.

Spectrum View


NOTE An asterisk next to the x dB bandwidth value indicates the results may not have been determined with optimal analyzer settings. If this result (emission bandwidth) is your primary interest, select Meas Setup, Max Hold, On. Then change the detector mode to peak. Acquiring peak data ensures accuracy of the result.

For SA, WCDMA, C2K, 1xEVDO, WIMAX OFDMA mode:

Occupied Bandwidth
View/Display

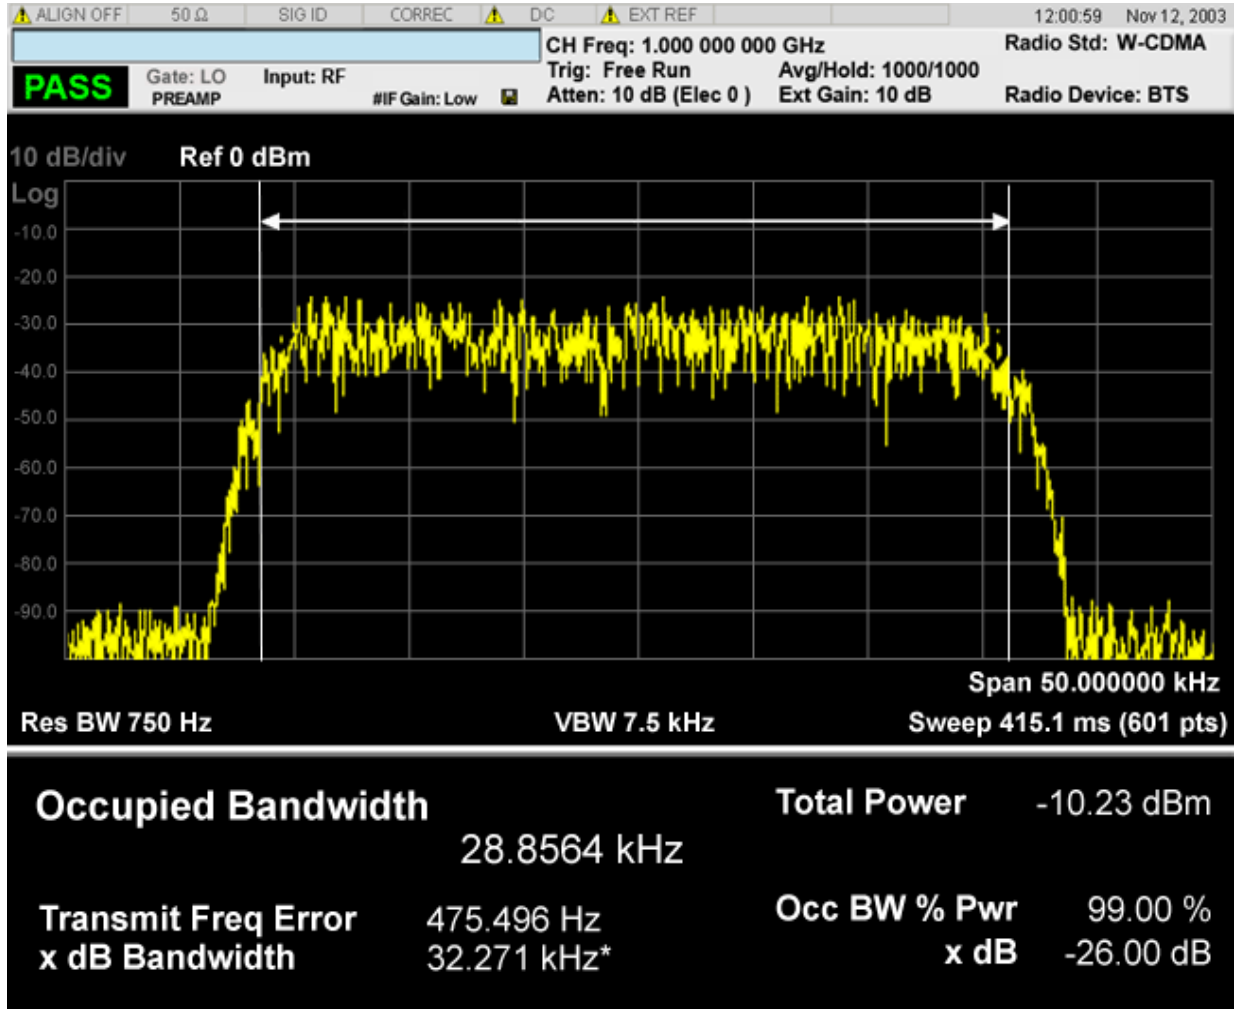

For TD-SCDMA mode only:

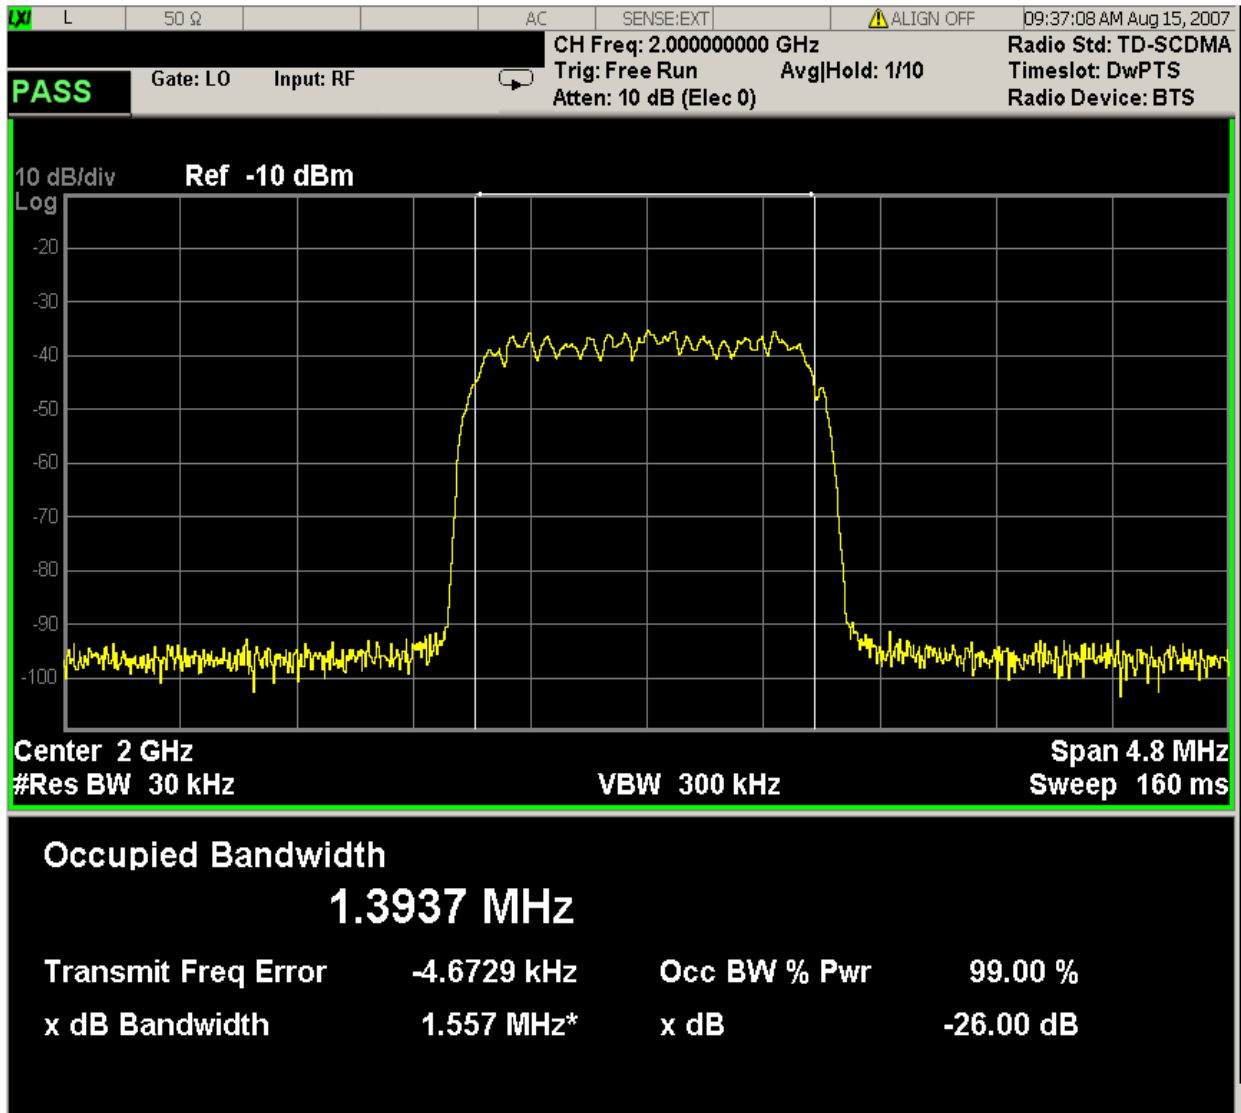

Key Path **Front-panel key**

Instrument S/W Revision A.01.60 or later

Display

Accesses a menu of functions that enable you to set the display parameters.

Operation of this key is identical across several measurements. For details about this key, see [“Display” on page 1273](#).

Key Path **View/Display**

Instrument S/W Revision A.01.60 or later

Occupied Bandwidth
View/Display

Many of the digitally modulated signals now look noise-like in the time and frequency domain. This means that statistical measurements of the signals can be a useful characterization. Power Complementary Cumulative Distribution Function (CCDF) curves characterize the higher level power statistics of a digitally modulated signal. The curves can be useful in determining design parameters for digital communications systems. For more information, see [“Power Stat CCDF Measurement Description” on page 625](#). For measurement results and views, see [“View/Display” on page 660](#).

This topic contains the following sections:

[“Measurement Commands for Power Stat CCDF” on page 623](#)

[“Remote Command Results for Power Stat CCDF” on page 624](#)

Measurement Commands for Power Stat CCDF

The general functionality of CONFigure, FETCh, MEASure, and READ are described at the beginning of this section. See the SENSE:PStat commands for more measurement related commands.

:CONFigure:PStatistic

:CONFigure:PStatistic:NDEFault

:INITiate:PStatistic

:FETCh:PStatistic [n] ?

:READ:PStatistic [n] ?

:MEASure:PStatistic[n]?

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1115](#).

Remote Command Results for Power Stat CCDF

| | |
|--------------------|--|
| n | Results Returned |
| 0 | Returns unprocessed I/Q trace data, as a series of trace point values, in volts. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values, |
| not specified or 1 | Returns 10 scalar results: <ol style="list-style-type: none"> 1. Average input power (in dBm) 2. Probability at the average input power level (in %) 3. Power level that has 10% of the power 4. Power level that has 1% of the power 5. Power level that has 0.1% of the power 6. Power level that has 0.01% of the power 7. Power level that has 0.001% of the power 8. Power level that has 0.0001% of the power 9. Peak power (in dB) 10.Count |
| 2 | Returns a series of 5001 floating the current measured power stat trace. This is the probability at particular power levels (average power), in the following order: <ol style="list-style-type: none"> 1. Probability at 0.0 dB power 2. Probability at 0.01 dB power 3. Probability at 0.02 dB power ... 1. Probability at 49.9 dB power 2. Probability at 50.0 dB power |
| 3 | Returns a series of 5001 floating point numbers (in percent) that represent the Gaussian trace. This is the probability at particular power levels (average power), in the following order: <ol style="list-style-type: none"> 1. Probability at 0.0 dB power 2. Probability at 0.01 dB power 3. Probability at 0.02 dB power ... 1. Probability at 49.9 dB power 2. Probability at 50.0 dB power |

- 4 Returns a series of 5001 floating point numbers (in percent) that represent the user-definable reference trace. This is the probability at particular power levels (average power), in the following order:
1. Probability at 0.0 dB power
 2. Probability at 0.01 dB power
 3. Probability at 0.02 dB power
 - ...
 1. Probability at 49.9 dB power
 2. Probability at 50.0 dB power

Power Stat CCDF Measurement Description

The power statistics CCDF measurement can be affected by many factors. For example, modulation filtering, modulation format, combining the multiple signals at different frequencies, number of active codes, and correlation between symbols on different codes with spread spectrum systems will all affect measurement results. These factors are all related to modulation and signal parameters. External factors such as signal compression and expansion by nonlinear components, group delay distortion from filtering, and power control within the observation interval also affect the measurement.

The power measured in power statistics CCDF curves is actually instantaneous envelope power defined by the equation:

$$P = (I^2 + Q^2) / Z_0$$

(Where I&Q are the quadrature voltage components of the waveform and Z_0 is the characteristic impedance).

A CCDF curve is defined by how much time the waveform spends at or above a given power level. The percent of time the signal spends at or above the level defines the probability for that particular power level. For capturing a lower probability down to 0.0001%, this measurement is made in the single mode by pressing Single. To make the power statistics CCDF measurement, the instrument uses digital signal processing (DSP) to sample the input signal in the channel bandwidth. The Gaussian distribution line as the band-limited Gaussian noise CCDF reference line, the user-definable reference trace, and the currently measured trace can be displayed on a semi-log graph. If the currently measured trace is above the user reference trace, it means that the higher peak power levels against the average power are included in the input signal.

| Key Path | Meas |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. The parameter values are measurement independent except all Attenuation values, and the Internal Preamp selection, which are the same across all measurements.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Attenuation

Accesses a menu of functions that enable you to change the attenuation settings. This key has read-back text that describes the total attenuator value.

See AMPTD Y Scale, “[Attenuation](#)” on page 1037 in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Range

Accesses the Range menu to change baseband I/Q gain settings. This key has a readback text that describes gain range value. Refer to “[Range](#)” on page 1043 in the “Common Measurement Functions” for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD/Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Presel Center

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the frequency of the selected marker.

See AMPTD Y Scale, “[Presel Center](#)” on page 1048 in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD/Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Presel Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when Presel Center is available.

See AMPTD Y Scale, [“Preselector Adjust” on page 1050](#) in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD/Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See AMPTD Y Scale, [“Internal Preamp” on page 1051](#) in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Auto Couple

See “**AUTO COUPLE**” on page 1055 in the section “Common Measurement Functions” for more information.

BW

Opens the BW menu, which contains keys to control the information bandwidth functions of the instrument.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Info BW

Allows you to enter a frequency value to set the channel bandwidth that will be used for data acquisition.

| | |
|-------------------------|--|
| Key Path | BW |
| Mode | SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [:SENSE] :PStatistic:BA ^N Dwidth <freq> [:SENSE] :PStatistic:BA ^N Dwidth? |
| Example | PST:BA ^N D 8 MHz PST:BA ^N D? |
| Dependencies/Couplings | WiMAX OFDMA: The default value depends on the Radio Standard selection.. |
| Preset | SA, WCDM: 5 MHz C2K:1.5 MHz 1xEV-DO:1.3 MHz WiMAX OFDMA: 25 MHz TD-SCDMA: 1.3 MHz |
| State Saved | Saved in instrument state. |
| Min | 10.0 kHz |
| Max | Hardware Dependent: No Option = 10 MHz Option B25 = 25 MHz |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | same as RPG |
| Instrument S/W Revision | A.01.60 or later |

Cont

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1063 in the section "Common Measurement Functions" for more information.

FREQ Channel

See “[FREQ/Channel](#)” on page 1059 in the section "Common Measurement Functions" for more information.

Input/Output

See “[Input/Output](#)” on page 1065 in the section "Common Measurement Functions" for more information.

Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

See the "Marker Functions" section for more information

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Accesses a menu that allows you to select one of 12 markers for control and function

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Marker Type

Sets the marker control mode to **Normal**, **Delta**, **Fixed** or **Off**.

If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The Active function for the selected marker's current control mode is the default active function. If the current control mode is Off, there is no active function and the active function is turned off. The active function display is the marker X axis value entered in the active function area will display the marker value to its full entered precision.

All interactions and dependencies detailed under the key description are enforced when the remote command is sent.

| | |
|-----------------------|--|
| Key Path | Marker |
| Mode | SA, WCDMA, C2K, WiMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:PSTatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSITION DELTA OFF :CALCulate:PSTatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE? |
| Example | CALC:PST:MARK:MODE POS CALC:PST:MARK:MODE? |

| | |
|-------------------------|---|
| Notes | <p>If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X Axis Value appears on the Active Function area.</p> <p>Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.</p> <p>Active Function Display: the marker X axis value entered in the active function area will display the marker value to its full entered precision.</p> |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Normal Delta Off |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Value

Sets the marker X Axis value in the current marker X Axis Scale unit. This function has no effect if the control mode is **Off**, but is the remote command equivalent of entering an X value if the control mode is **Normal** or **Delta**.

| | |
|-----------------------|---|
| Mode | SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | <pre>:CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12 :X <rel_amp1></pre> <pre>:CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12 :X?</pre> |
| Example | <pre>CALC:PST:MARK3:X 0</pre> <pre>CALC:PST:MARK3:X?</pre> |
| Notes | <p>If no suffix is sent, it will use the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" will be generated. If the specified marker is Fixed and a Marker Function is on, error -221 "Settings conflict; cannot adjust Fixed marker while Marker Function is on" is generated.</p> <p>The query returns the marker's absolute X Axis value if the control mode is Normal, or the offset from the marker's reference marker if the control mode is Delta. The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time, seconds for Period and Time. If the marker is Off the response is not a number.</p> |
| Preset | After a preset, all Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN). |
| State Saved | No |
| Min | -9.9E+37 |

| | |
|-------------------------|--|
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | Not tested in SCPI test but it is supported. The actual step is 0.1. |
| Instrument S/W Revision | A.01.60 or later |

Marker Y Axis Value

Queries the marker Y Axis value in the current marker Y Axis unit.

| | |
|-------------------------|--|
| Mode | SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y? |
| Example | CALC:PST:MARK11:Y? |
| Notes | The query returns the marker Y-axis result, if the control mode is Normal , or Delta . If the marker is Off the response is not a number. |
| Preset | 0 |
| State Saved | No |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Properties

Accesses the marker properties menu.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Accesses a menu that allows you to select one of 12 markers for control and function

| | |
|-------------------------|---------------------------|
| Key Path | Marker, Properties |
| Instrument S/W Revision | A.01.60 or later |

Relative To

Sets the reference marker that the selected marker will be relative to.

| | |
|----------|---|
| Key Path | Marker, Properties |
| Mode | SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO |

Power Stat CCDF Measurement Marker

| | |
|-------------------------|---|
| Remote Command | :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence <integer> :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:REFerence? |
| Example | CALC:PST:MARK:REF 3 CALC:PST:MARK:REF? |
| Notes | A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself." When queried a single value will be returned (the specified marker numbers relative marker). |
| Preset | 2 3 4 5 6 7 8 9 10 11 12 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 12 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1 |
| Instrument S/W Revision | A.01.60 or later |

Marker Trace

Assigns the specified marker to the designated trace. The trace choices are: Measured, Gaussian, or Reference.

| | |
|-------------------------|---|
| Key Path | Marker |
| Mode | SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe MEASured GAUSSian REFerence :CALCulate:PStatistic:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe? |
| Example | CALC:PST:MARK3:TRAC MEAS CALC:PST:MARK:TRACE? |
| Preset | MEASured |
| State Saved | Saved in instrument state. |
| Range | Measured Gaussian Reference |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Couple Markers

When this function is true, moving any marker causes an equal X axis movement of every other marker which is not **Off**. By “equal X axis movement” we mean that we preserve the difference between each marker’s X axis value (in the fundamental x-axis units of the trace that marker is on) and the X axis value of the marker being moved (in the same fundamental x-axis units).

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

All Markers Off

Turns off all markers.

| | |
|-------------------------|---|
| Key Path | Marker, More |
| Mode | SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:PStatistic:MARKer:AOFF |
| Example | CALC:PST:MARK:AOFF |
| Instrument S/W Revision | A.01.60 or later |

Marker To

There is no 'Marker To' functionality supported in Power Stat CCDF. The front-panel key will display a blank menu when pressed.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Marker Function

There are no 'Marker Function' supported in Power Stat CCDF. The front-panel key will display a blank menu when pressed.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Meas

See “[Meas](#)” on page 1115 in the section "Common Measurement Functions" for more information.

Meas Setup

Accesses the functions that allow you to change the settings for your measurement requirements.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Counts

Sets the accumulated number of sampling points for data acquisition. The range is 1.000 kpt (k point) to 2.00000 Gpt (G point) with 1 kpt resolution. Counts couples to Meas Cycles. When the value for counts is changed, the Meas Cycles value will be $(\text{Counts} / \text{SamplingFrequency} * \text{MeasInterval})$.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | <code>[:SENSE] :PStatistic:COUNTs <integer></code> <code>[:SENSE] :PStatistic:COUNTs?</code> |
| Example | PST:COUN 5001 PST:COUN? |
| Dependencies/Couplings | This value is coupled to Meas Cycles. When Counts is changed, the MeasCycles value will be $(\text{Counts} / \text{SamplingFrequency} * \text{MeasInterval})$. TD-SCDMA: When Counts is changed, the MeasCycles value will be $(\text{Counts} / (\text{Sampling Frequency} * \text{Time duration of measured time slots} / 5 \text{ msec}))$, Time duration of measured time slots is determined by Analysis Time Slot and Measure Interval. |
| Preset | 10000000 |
| State Saved | Saved in instrument state. |
| Min | 1000 |
| Max | 2000000000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1000 |
| Default Unit | Kpt |
| Instrument S/W Revision | A.01.60 or later |

Meas Cycles

Set the number of measurement cycles to calculate power statistic data. This number couples to Counts. The Counts value is $(\text{MeasCycles} * \text{Sampling Frequency} * \text{MeasInterval})$.

Power Stat CCDF Measurement Meas Setup

When the counts value cannot be divided by (Sampling Frequency * MeasInterval), this value is displayed as a decimal fraction.

| | |
|-------------------------|--|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WiMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [[:SENSE]:PStatistic:SWEep:CYCLes <integer> [:SENSE]:PStatistic:SWEep:CYCLes? |
| Example | PST:SWE:CYCL 1001 PST:SWE:CYCL? |
| Notes | . |
| Dependencies/Couplings | The Counts value will be (MeasCycles * Sampling Frequency * MeasInterval). TD-SCDMA: The Counts value will be (MeasCycles * Sampling Frequency * Time duration of measured time slots / 5 msec), Time duration of measured time slots is determined by Analysis Time Slot and Measure Interval. |
| Preset | Depends on the sampling frequency. |
| Min | 1 |
| Max | Depends on the sampling frequency. |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | 1 |
| Instrument S/W Revision | A.01.60 or later |

Meas Interval (When the application is NOT CDMA1xEVDO)

Sets the number of data points to be used as the measurement interval. This value couples to Counts. The Counts value is (MeasCycles * Sampling Frequency * MeasInterval).

| | |
|-----------------------|---|
| Key Path | Meas Setup |
| Mode | SA, WCDMA, C2K, WiMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [[:SENSE]:PStatistic:SWEep:TIME <time> [:SENSE]:PStatistic:SWEep:TIME? |
| Example | PST:SWE:TIME 2 ms PST:SWE:TIME? |

| | |
|-------------------------|--|
| Dependencies/Couplings | <p>The Counts value will be $(\text{MeasCycles} * \text{Sampling Frequency} * \text{MeasInterval})$.</p> <p>WiMAX OFDMA: The default value depends on Radio Device status.</p> <p>TD-SCDMA: The Counts value will be $(\text{MeasCycles} * \text{Sampling Frequency} * \text{Time duration of measured time slots} / 5 \text{ msec})$, Time duration of measured time slots is determined by Analysis Time Slot and Measure Interval.</p> <p>When TriggerSource is RFBurst, this button is grayed.</p> |
| Preset | <p>Others: 1.0 ms</p> <p>TD-SCDMA: 1 slot</p> |
| Min | <p>Others: 100.0 us</p> <p>TD-SCDMA: 1 slot</p> |
| Max | <p>Others: 10.0 ms</p> <p>TD-SCDMA: 9 slot</p> |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | <p>Others: 1 us</p> <p>TD-SCDMA: 1 slot</p> |
| Instrument S/W Revision | A.01.60 or later |

Meas Interval (CDMA1xEVDO Only)

Sets the value of time to be used as the measurement interval. This value couples to Counts. The Counts value is $(\text{MeasCycles} * \text{Sampling Frequency} * \text{MeasInterval})$.

| | |
|------------------------|---|
| Key Path | Meas Setup |
| Mode | 1xEV-DO |
| Remote Command | <p><code>[:SENSE] :PStatistic:SWEep:TIME <time></code></p> <p><code>[:SENSe] :PStatistic:SWEep:TIME?</code></p> |
| Example | <p><code>PST:SWE:TIME 2 ms</code></p> <p><code>PST:SWE:TIME?</code></p> |
| Dependencies/Couplings | The Counts value will be $(\text{MeasCycles} * \text{Sampling Frequency} * \text{MeasInterval})$. |
| Preset | 182.29 us |
| State Saved | true |
| Min | 1.0 us |
| Max | 10.0 ms |
| Test MIN/MAX/DEF | Yes |

Power Stat CCDF Measurement Meas Setup

| | |
|-------------------------|------------------|
| Test UP/DOWN | 1.0 us |
| Instrument S/W Revision | A.01.60 or later |

Meas Offset (CDMA1xEVDO Only)

Sets the value of time to be used as the measurement interval start.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | CDMA1xEVDO |
| Remote Command | [[:SENSE]:PStatistic:SWEep:OFFSet <time> [:SENSE]:PStatistic:SWEep:OFFSet? |
| Example | PST:SWE:OFFS 2 ms PST:SWE:OFFS? |
| Preset | 325.52 us |
| State Saved | true |
| Min | 1.0 us |
| Max | 10.0 ms |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1.0 us |
| Instrument S/W Revision | A.01.60 or later |

IF Gain

Sets the IF Gain function to Auto, Low Gain or High Gain. These settings affect sensitivity and IF overloads.

This only applies to the RF input. It does not apply to baseband I/Q input.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

IF Gain Auto

Activates the Auto Rules for IF Gain When Auto is active, the IF Gain is set to High Gain under any of the following conditions:

- the input attenuator is set to 0 dB
- the preamp is turned On
- the Max Mixer Level is -20 dBm or lower

For other settings, Auto sets IF Gain to Off.

| | |
|-------------------------|---|
| Key Path | Meas Setup,More,IF Gain |
| Mode | SA, WCDMA, C2K, WiMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [:SENSe] :PStatistic:IF:GAIN:AUTO [:STATe] ON OFF 1 0 [:SENSe] :PStatistic:IF:GAIN:AUTO [:STATe] ? |
| Example | PST:IF:GAIN:AUTO ON PST:IF:GAIN:AUTO? |
| Notes | IF Gain only applies to the RF input. It does not apply to baseband I/Q input. |
| Dependencies/Couplings | When either the auto attenuation is active (for example, with electrical attenuator), or the optimize mechanical attenuator range is requested, the IF Gain setting is changed using the following rule. The Auto selection sets IF Gain On under any of the following conditions: <ul style="list-style-type: none"> • the input attenuator is set to 0 dB • the preamp is turned on, • the Max Mixer Level is –20 dBm or lower. For other settings, Auto sets IF Gain to Off. |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Auto Man |
| Instrument S/W Revision | A.01.60 or later |

IF Gain State

Selects the range of IF gain. On sets the high gain option, which allows for better noise level measurements and Off sets low gain when measuring large signals.

| | |
|-----------------------|--|
| Key Path | Meas Setup, More, IF Gain |
| Mode | SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [:SENSe] :PStatistic:IF:GAIN [:STATe] ON OFF 1 0 [:SENSe] :PStatistic:IF:GAIN [:STATe] ? |
| Example | PST:IF:GAIN ON PST:IF:GAIN? |
| Notes | IF Gain only applies to the RF input. It does not apply to baseband I/Q input. where ON = high gain OFF = low gain |

Power Stat CCDF Measurement Meas Setup

| | |
|-------------------------|--|
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Low Gain (Best for Large Signals) High Gain (Best Noise Level) |
| Instrument S/W Revision | A.01.60 or later |

Meas Preset

Restores all measurement settings to their default values.

| | |
|-------------------------|--|
| Key Path | Meas Setup, More |
| Mode | SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CONFigure:PStatistic |
| Example | CONF:PST |
| Notes | You must be in the Spectrum Analysis mode, W-CDMA mode, cdma2000 mode, TD-SCDMA mode or WIMAXOFDMA mode to use this command. Use :INSTrument:SElect to set the mode. |
| Dependencies/Couplings | Selecting Meas Preset will restore all measurement parameters to their default values. |
| Instrument S/W Revision | A.01.60 or later |

Mode

See “[Mode](#)” on page 1133 in the section "Common Measurement Functions" for more information.

Mode Setup

See “[Mode Setup](#)” on page 1145 in the section "Common Measurement Functions" for more information.

Peak Search

There is no 'Peak Search' functionality supported in Power Stat CCDF. The front-panel key will display a blank menu when pressed.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Recall

See “[Recall](#)” on page 1149 in the section "Common Measurement Functions" for more information.

Restart

See “Restart” on page 1167 in the section "Common Measurement Functions" for more information.

Save

See “[Save](#)” on page 1169 in the section "Common Measurement Functions" for more information.

Single

See “[Single \(Single Measurement/Sweep\)](#)” on page 1191 in the section "Common Measurement Functions" for more information.

Source

See “[Source](#)” on page 1193 in the section "Common Measurement Functions" for more information.

Span X Scale

The SPAN X Scale key accesses the menu to set the desired horizontal scale.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div

Enables you to enter a time value to change the horizontal scale.

| | |
|-------------------------|--|
| Key Path | Power Statistic CCDF - Span X Scale |
| Key Path | Span X Scale |
| Mode | SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :DISPlay:PStatistic:VIEW[1]:WINDow2:TRACe:X[:SCALe]:PDI Vision <rel_ampl> :DISPlay:PStatistic:VIEW[1]:WINDow2:TRACe:X[:SCALe]:PDI Vision? |
| Example | DISP:PST:VIEW:WIND2:TRAC:X:PDIV 10 DISP:PST:VIEW:WIND2:TRAC:X:PDIV? |
| Notes | CCDF measurement has the trace display only at Window 2. |
| Dependencies/Couplings | See Notes |
| Preset | 2.00 |
| State Saved | Saved in instrument state. |
| Min | 0.1 |
| Max | 20 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 0.10, 0.15, 0.20, 0.30, 0.50, 0.75, 1.00, 1.50, 2.00, 3.00, 5.00, 7.50, 10.00, 15.00, 20.00 |
| Instrument S/W Revision | A.01.60 or later |

Sweep/Control

Enables you to pause the power statistics CCDF measurement after the current data acquisition is complete. When Paused, the label on the menu key changes to Resume. Press the Resume key to resume the measurement where it was when it was paused.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Pause/Resume

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Press the Resume key to resume the measurement where it was when it was paused. See [“Pause/Resume” on page 1198](#) in the “Common Measurement Functions” section for details.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Trace/Detector

Accesses a menu of functions that enable you to control the storage and manipulation of the reference trace, as well as controls the display of the trace data.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Store Ref Trace

Copies the currently measured curve as the user-definable reference trace. The captured data remains until the other mode is chosen. Pressing this key also refreshes the reference trace.

No query command is available.

| | |
|-------------------------|---|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:PStatistic:STORe:REFerence |
| Example | CALC:PST:STOR:REF |
| Instrument S/W Revision | A.01.60 or later |

Ref Trace

Toggles the reference trace display between On and Off.

| | |
|-------------------------|---|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [:SENSe] :PStatistic:RTRace [:STAtE] OFF ON 0 1 [:SENSe] :PStatistic:RTRace [:STAtE] ? |
| Example | PST:RTR OFF PST:RTR? |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Gaussian Line

Toggles the Gaussian trace display between On and Off.

| | |
|-------------------------|---|
| Key Path | Trace/Detector |
| Mode | SA, WCDMA, C2K, WIMAXOFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | <code>[:SENSe] :PStatistic:GAUSSian[:STATe] OFF ON 0 1</code> <code>[:SENSe] :PStatistic:GAUSSian[:STATe] ?</code> |
| Example | PST:GAUS OFF PST:GAUS? |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Trigger

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement. See [“Trigger” on page 1221](#) in the "Common Measurement Functions" section for more information.

View/Display

Accesses a menu of functions that enable you to control the instrument display as well as turn the bar graph On and Off.


The Power Stat CCDF measurement consists of single view. This is common for both Uplink (MS) and Downlink (BTS). The view consists of the following windows: Metrics (left) and graph display (right).

“Metrics window” on page 662


“Graph window” on page 662

“Wave window (TD-SCDMA only)” on page 662

View for Power Start CCDF Measurement

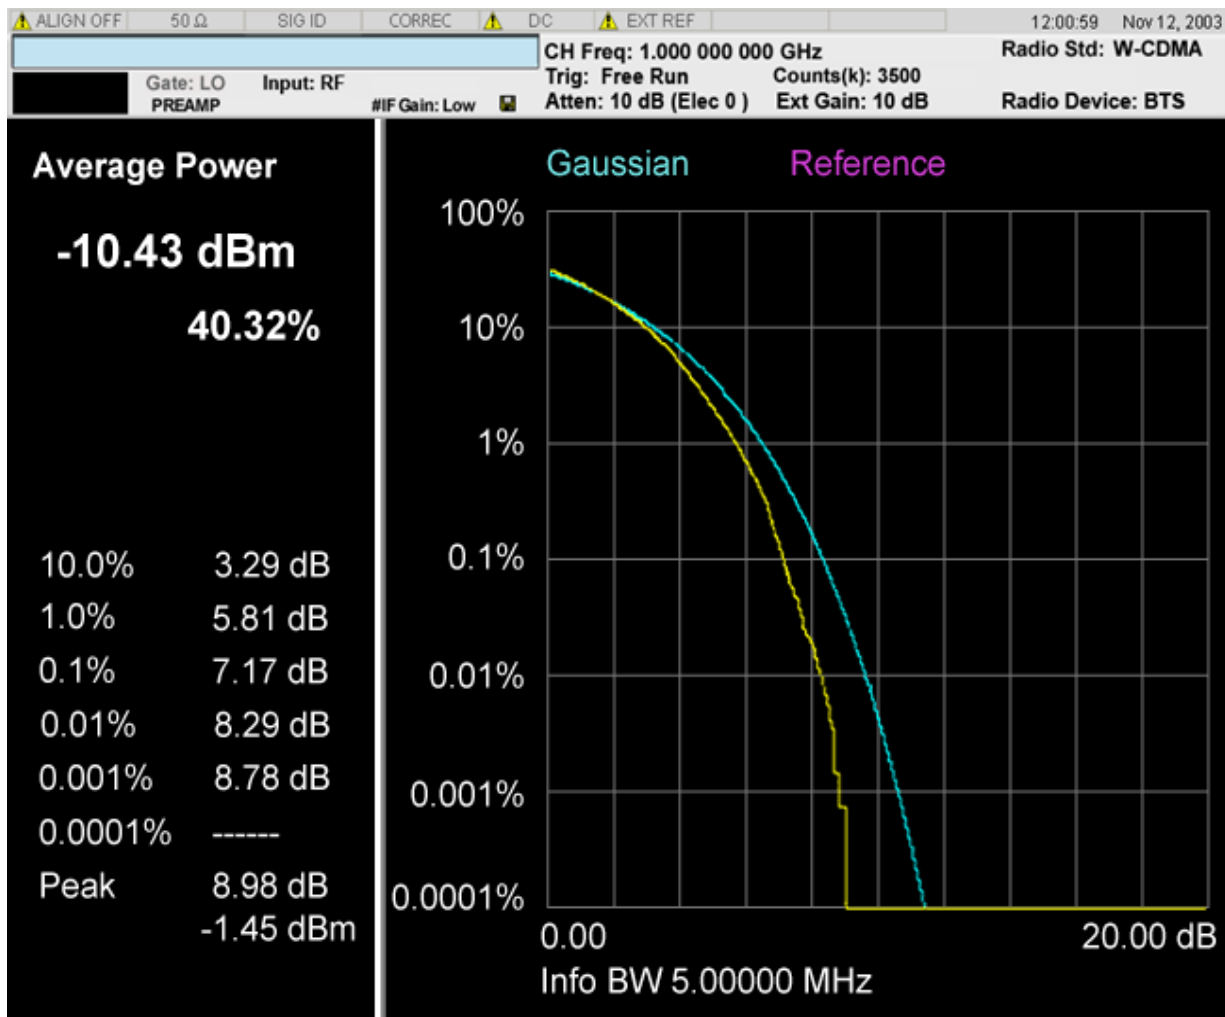

Slot View for Power Stat CCDF Measurement in TD-SCDMA mode

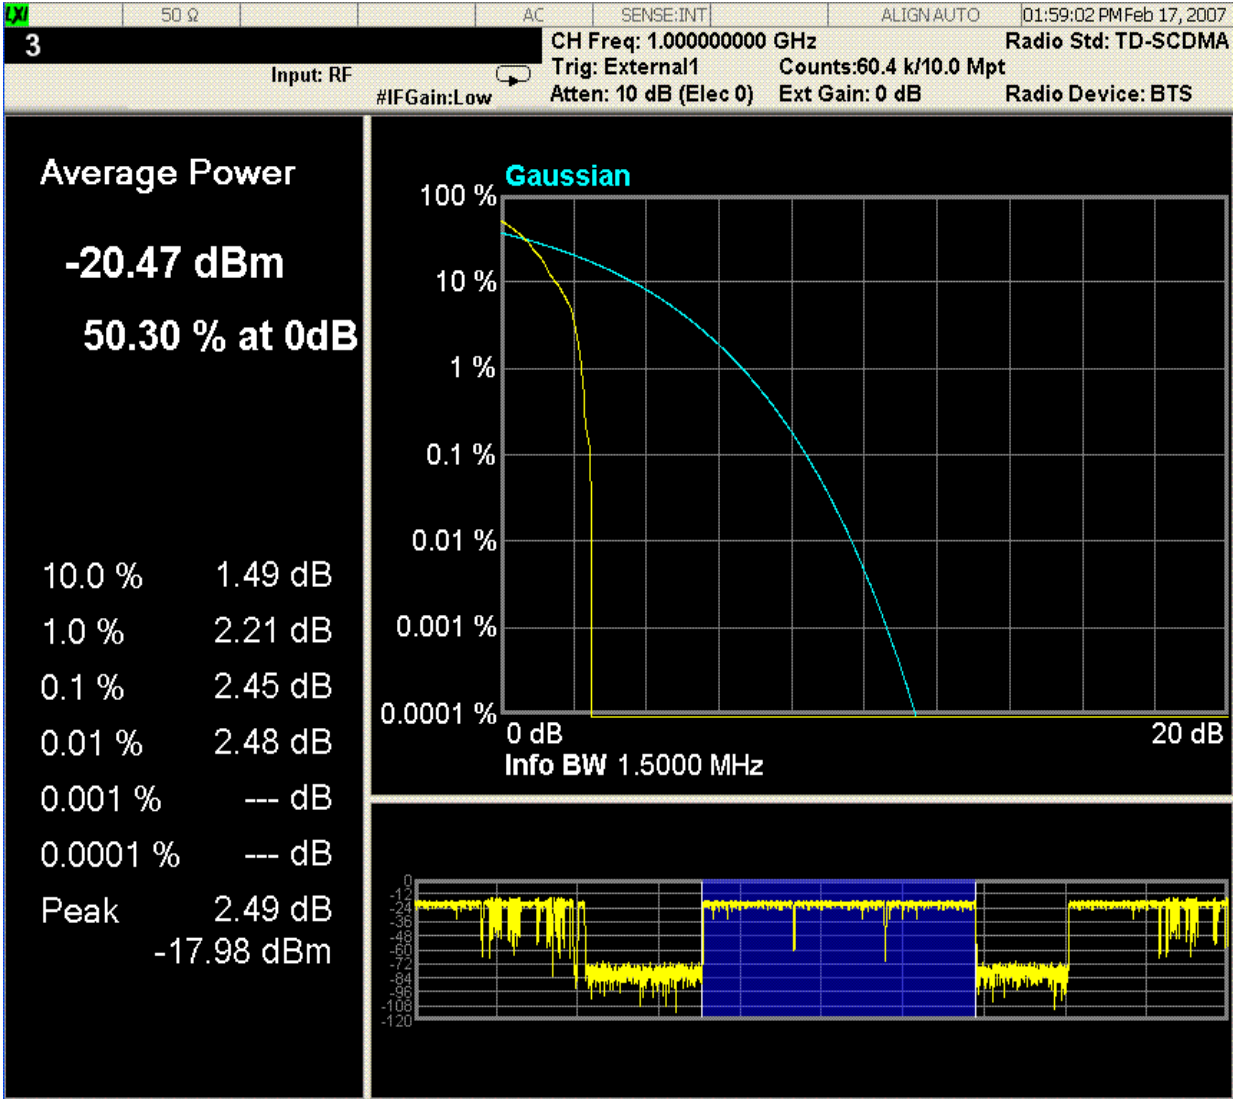

Metrics window

| Name | Corresponding Results | Explanation |
|---------------------|---|-------------|
| Average Power [dBm] | n=1 1st Average input power | 99.99 dBm |
| Average Power [%] | n=1 2nd Probability at the average input power level | 99.99 % |
| 10.0% [dB] | n=1 3rd Power level that has 10% of the power | 99.99 dB |
| 1.0% [dB] | n=1 4th Power level that has 1% of the power | 99.99 dB |
| 0.1% [dB] | n=1 5th Power level that has 0.1% of the power | 99.99 dB |
| 0.01% [dB] | n=1 6th Power level that has 0.01% of the power | 99.99 dB |
| 0.001% [dB] | n=1 7th Power level that has 0.001% of the power | 99.99 dB |
| 0.0001% [dB] | n=1 8th Power level that has 0.0001% of the power | 99.99 dB |
| Peak [dB] | n=1 9th Peak power | 99.99 dB |
| Peak[dBm] | This is not available using remote commands. | 99.99 dBm |

Graph window

| | |
|---------------------|---|
| Marker Operation | Yes |
| Corresponding Trace | <p>Yellow: Series of 5001 floating the current measured power stat trace. (n=2) Initially all markers refer this trace.</p> <p>Light Blue: Series of 5001 floating point numbers (in percent) that represent the Gaussian trace. (n=3)</p> <p>Violet: series of 5001 floating point numbers (in percent) that represent the user-definable reference trace. (n=4)</p> <p>The Gaussian and Reference trace/line can be removed using the features under the Trace/Detector key</p> |

Wave window (TD-SCDMA only)

This window is only available under TD-SCDMA mode, and by default this window is closed, it could

be turn of/off by soft key "SlotView", refer to section "Slot View (TD-SCDMA only)" on page 663.

| | |
|-------------------------|--|
| Marker Operation | No |
| Corresponding Trace | Yellow: Wave form of entire TD-SCDMA frame. If measurement range specified by Analysis Time Slot and Measured Time Slot is out of the first frame, the display range will extend to two TD-SCDMA frames. Blue: Indicate current measurement range |
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Display

Accesses a menu of functions that enable you to set the display parameters...

See "Display" on page 1273 in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|---------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

Slot View (TD-SCDMA only)

Switch between normal CCDF view and Slot view with additional wave window, this is available only under TD-SCDMA mode.

| | |
|-------------------------|--|
| Key Path | View/Display |
| Mode | TD-SCDMA |
| Remote Command | [:SENSE] :PStatistic:SLTView[:STATE] OFF ON 0 1 [:SENSE] :PStatistic: SLTView[:STATE] ? |
| Example | PST:SLTV OFF PST:SLTV? |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Power Stat CCDF Measurement
View/Display

The code domain measurement displays the power for each of the de-spread channels, relative to the total power within the 1.230 MHz channel bandwidth centered at the center frequency. Each de-spread channel level is displayed as an individual vertical bar with a different width determined by a spread rate. This allows a comparison of signal levels between the Pilot and Traffic channels. For more details, see [“Code Domain Measurement Description” on page 671](#) below. For measurement results and views, see [“View/Display” on page 749](#).

This topic contains the following sections:

[“Measurement Commands for Code Domain” on page 665](#)

[“Remote Command Results for Code Domain Measurement” on page 665](#)

Measurement Commands for Code Domain

The general functionality of CONFigure, FETCh, MEASure, and READ are described at the beginning of this section. See the SENSE:CDPower commands for more measurement related commands.

:CONFigure:CDPower

:INITiate:CDPower

:FETCh:CDPower [n] ?

:READ:CDPower [n] ?

:MEASure:CDPower [n] ?

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1115](#)

Remote Command Results for Code Domain Measurement

This measures the power levels of the spread channels in RF channel(s). You must be in the CDMA2000 to use these commands. Use INSTRument:SELEct to set the mode.

| Index: n | Results Returned |
|----------|--|
| 0 | Returns unprocessed I/Q trace data, as a series of comma-separated trace points, in volts. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values. |

Code Domain Measurement

not specified
or n = 1

Returns the following 19 comma-separated scalar results:

Result Name: (type of number) [unit] <explanation>

1. RMS symbol EVM: (floating) [percent]
The despreading (symbol) RMS EVM of the selected code(Walsh code length and code number) over the selected measurement period by Meas Offset and Meas Interval.
2. Peak symbol EVM: (floating) [percent]
The despreading (symbol) peak EVM of the selected code(Walsh code length and code number) over the selected measurement period by Meas Offset and Meas Interval.
3. Symbol magnitude error: (floating) [percent]
The RMS-averaged magnitude error of symbol I/Q Polar Vector of the selected code over the selected measurement period by Meas Offset and Meas Interval.
4. Symbol phase error: (floating) [degree]
The RMS-averaged Phase error of symbol I/Q Polar Vector of the selected code over the selected measurement period by Meas Offset and Meas Interval.
5. Total Power: (floating) [dBm]
The total RF power over the selected measurement period by Meas Offset and Meas Interval.
6. Channel Power: (floating) [dBc or dBm]
The absolute or relative (relative to Total Power) power of the selected code over the measurement period selected by Meas Offset and Meas Interval.
7. Total active power: (floating) [dBc or dBm]
The sum of the active code channel powers over one PCG specified by Meas Offset.
8. Pilot power: (floating) [dBc or dBm]
The average power of the pilot code (absolute or relative to Total Power) over one PCG specified by Meas Offset.
9. Sync power: (floating) [dBc or dBm]
The average power of the pilot code (absolute or relative to Total Power) one PCG specified by Meas Offset.
In MS mode, the value returned is -999.0.
10. Maximum active traffic power: (floating) [dBc or dBm]
The maximum power of active code (absolute or relative to Total Power) over one PCG specified by Meas Offset.
If no active codes are detected, the value returned is -999.0.
In MS mode, the value returned is -999.0.

11. Average active traffic power: (floating) [dBc or dBm]
The average power of active code (absolute or relative to Total Power) over one PCG specified by Meas Offset.
If no active codes are detected, the value returned is –999.0.
In MS mode, the value returned is –999.0.
12. Maximum inactive traffic power: (floating) [dBc or dBm]
The maximum power of inactive code (absolute or relative to Total Power) over one PCG specified by Meas Offset.
In MS mode, the value returned is –999.0.
13. Average inactive traffic power: (floating) [dBc or dBm]
The average power of inactive code (absolute or relative to Total Power) over one PCG specified by Meas Offset.
In MS mode, the value returned is –999.0.
14. Number of active channels: (integer) [no unit]
The total number of active codes.
In MS mode, the value returned is –999.
15. I channel average active power: (floating) [dBc or dBm]
The average power of the active I channels (absolute or relative to Total Power).
If no active codes are detected, the value returned is –999.0.
In BTS mode, the value returned is –999.0.
16. I channel maximum inactive power: (floating) [dBc or dBm]
The maximum power of the inactive I channels (absolute or relative to Total Power).
In BTS mode, the value returned is –999.0
17. Q channel average active power: (floating) [dBc or dBm]
The average power of the active Q channels (absolute or relative to Total Power).
If no active codes are detected, the value returned is –999.0.
In BTS mode, the value returned is –999.0.
18. Q channel maximum inactive : (floating) [dBc or dBm]
The maximum power of the inactive Q channels (absolute or relative to Total Power).
In BTS mode, the value returned is –999.0
19. Time between trigger to PN offset: (floating) [µs]
The time from the trigger point to the PN offset.
In the MS mode, the valued returned is –999.0.

Code Domain Measurement

2 Code Domain Power:

<CDPower> Returns series of floating point numbers (in dB or dBm depend on the Meas Type) that represent all code domain powers.

In BTS mode, there are 64 or 128 numbers depending on
CALCulate:CDPower:WCODE:BASE

1st number = 1st code power over one PCG specified by Meas Offset.

2nd number = 2nd code power over one PCG specified by Meas Offset.

....

Nth number = Nth code power over one PCG specified by Meas Offset

In MS Mode, there are total 32 IQ pairs. I and Q results are returned alternatively. If the active channel occupies more than max spreading factor, the power is duplicated.

1st number = 1st In Phase code power over one PCG specified by Meas Offset.

2nd number = 1st Quad Phase code power over one PCG specified by Meas Offset.

....

(2xN-1)th number = Nth In Phase code power over one PCG specified by Meas Offset.

(2xN)th number = Nth Quad Phase code power over one PCG specified by Meas Offset.

N = the number of codes detected. The total number of codes varies because of the different symbol rates of each code.

3 Symbol Rate:

Returns series of floating point numbers (in symbol rate) that represent all code domain symbol rate. When In BTS Mode, total is 64 or 128 depending on CALCulate:CDPower:WCODE:BASE.

1st number = 1st code symbol rate over one PCG specified by Meas Offset.

2nd number = 2nd code symbol rate over one PCG specified by Meas Offset.

....

Nth number = Nth code symbol rate over one PCG specified by Meas Offset.

In MS Mode, I and Q results are returned alternatively. Total IQ pairs are 32. If the active channel occupies more than max spreading factor, the Symbol rate is duplicated

1st number = 1st In Phase code symbol rate over one PCG specified by Meas Offset.

2nd number = 1st Quad Phase code symbol rate one PCG specified by Meas Offset.

....

(2xN-1)th number = Nth In Phase code symbol rate over one PCG specified by Meas Offset.

(2xN)th number = Nth Quad Phase code symbol rate over one PCG specified by Meas Offset.

- 4 Active Status:
- Returns series of floating point numbers that show either active or inactive of each code returned in $n=2$ and 3. When the code is inactive, the result is 0.0, otherwise more than 0.0
- In BTS mode, IQ combined results are returned.
- 1st number = Active or inactive flag of the 1st code.
-
- Nth number = Active or inactive flag of the Nth code.
- In MS mode, I and Q results are returned alternatively.
- 1st number = 1st In Phase code active flag.
- 2nd number = 1st Quad Phase code active flag.
-
- ($2xN-1$)th number = Nth In Phase code active flag
- ($2xN$)th number = Nth Quad Phase code active flag
- 5 Symbol EVM:
- <EVM> Returns series of floating point numbers (in percent) that represent each sample in the EVM trace. The first number is the symbol 0 decision point. There are X points per symbol ($X=\text{points}/\text{chip}$). Therefore, the decision points are at 0, $1*X$, $2*X$, ...
- 6 Symbol Magnitude error:
- <MERRor> Returns series of floating point numbers (in percent) that represent each sample in the magnitude error trace. The first number is the symbol 0 decision point. There are X points per symbol ($X=\text{points}/\text{chip}$). Therefore, the decision points are at 0, $1*X$, $2*X$, ...
- 7 Symbol Phase error:
- <PERRor> Returns series of floating point numbers (in percent) that represent each sample in the phase error trace. The first number is the symbol 0 decision point. There are X points per symbol ($X=\text{points}/\text{chip}$). Therefore, the decision points are at 0, $1*X$, $2*X$, ...

8 I/Q Corrected Measured Trace:

Returns series of floating point numbers that alternately represent I and Q pairs of the corrected measured trace of the selected code channel. The first number is the in-phase(I) sample of symbol 1 decision point and the second is the quadrature-phase(Q) sample of symbol 1 decision point. As in the EVM, there are X points per symbol, so that:

1st number = I of the 1st symbol decision point

2nd number = Q of the 1st symbol decision point

...

$(2 \times X) + 1$ number = I of the 2nd symbol decision point

$(2 \times X) + 2$ number = Q of the 2nd symbol decision point

...

$(2 \times X) \times (N - 1) + 1$ number = I of the Nth symbol decision point

$(2 \times X) \times (N - 1) + 2$ number = Q of the Nth symbol decision point

Where X = the number of points per symbol, and

N = the number of symbols.

Note: The values of "I" and "Q" in the measured trace are normalized by the maximum value of the magnitude ($=\text{SQRT}(I^2 + Q^2)$) of the reference trace. For QPSK modulation, the magnitude of each I/Q pair is scaled to $\text{SQRT}(2.0)$, and for BPSK modulation, it is scaled to $\text{SQRT}(1.0)$.

9 Symbol Power vs. Time:

<SPOWer> Returns series of floating point number (in dBm) that represent the trace data of the symbol power vs. time of the selected code channel.

10 Chip Power vs. Time:

<CPOWer> Returns series of floating point numbers (in dBm) that represent the entire trace data of Chip Chip vs. Time.

- 11 Demod Bits:
- Returns series of floating point numbers of symbol values for the selected code channel for the entire capture length.
- If a channel's spreading has been done on only I or Q branch, queried data represents the sequence of corresponding I or Q data.
- If a channel's spreading has been done on both I and Q branch and its modulation scheme is QPSK, queried data represents alternating I and Q sequences as follows:
- 1st number = in-phase bit of the 1st I/Q pair
 2nd number = quad-phase bit of the 1st I/Q pair
 3rd number = in-phase bit of the 2nd I/Q pair
 4th number = quad-phase bit of the 2nd I/Q pair

 (2×N-1) th number = in-phase bit of the Nth I/Q pair
 (2×N) th number = quad-phase bit of the Nth I/Q pair
 where N is the number of the symbols in the entire capture length.
- 12 Code Domain Error:
- Returns a series of floating point numbers (in dB or dBm) that represents all the code domain errors.
- In BTS mode, there are 64 or 128 numbers depending on Base Code Length.
- 1st number = 1st code domain error over one PCG specified by Meas Offset
 2nd number = 2nd code domain error over one PCG specified by Meas Offset...
 N th number = N th code domain error over one PCG specified by Meas Offset
- In MS mode, there are 32 I/Q pairs.
- 1st number = 1st in-phase code domain error over one PCG specified by Meas Offset
 2nd number = 1st quad-phase code domain error over one PCG specified by Meas Offset.
 ...
 (2×N -1) number = N th in-phase code domain error over one PCG specified by Meas Offset.
 (2×N) number = N th quad-phase code domain error over one PCG specified by Meas Offset.

Code Domain Measurement Description

If Device is set as MS, the demodulated I and Q signals are individually shown in the code domain power graph window. Depending on the test equipment for MS, it is recommended that you use the trigger output signal from the instrument for synchronization.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

AMPTD Y Scale

Accesses a menu of functions that enable you to set the desired vertical scale parameters for the current measurement.

Numbers and default numbers are independent for each window.

Metrics window and I/Q Symbol Polar Vector and Demod Bits window does not have this menu (Blank menu).

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Y Ref Value

Set the value for the absolute power reference. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| Key Path | AMPTD Y Scale |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Power Graph & Metrics View CDP Window Y Ref Value

Sets the absolute power reference value in the CDP window.

| | |
|------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV e1 <real> :DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEV e1? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | Unit is sensitive for Meas Type (Abs/Rel) as follows: Abs: dBm Rel: dB Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW:WIND:TRAC:Y:RLEV -10.0 DISP:CDP:VIEW:WIND:TRAC:Y:RLEV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.00 |

| | |
|-------------------------|----------------------------|
| State Saved | Saved in instrument state. |
| Min | -250.0 |
| Max | 250.0 |
| Instrument S/W Revision | A.01.60 or later |

CDP Graph & CDE Graph View CDP Window Y Ref Value

Sets the absolute power reference value for Code Domain Power and Code Domain Error graph views in the CDP window.

| | |
|-------------------------|---|
| Remote Command | :DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVel ? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | IUnit is sensitive for Meas Type (Abs/Rel) as follows: Abs: dBm Rel: dB Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW2:WIND:TRAC:Y:RLEV -10.0 DISP:CDP:VIEW2:WIND:TRAC:Y:RLEV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.00 |
| State Saved | Saved in instrument state. |
| Min | -250.0 |
| Max | 250.0 |
| Instrument S/W Revision | A.01.60 or later |

CDP Graph & CDE Graph View CDE Window Y Ref Value

Sets the absolute power reference value for the Code Domain Power and Code Domain Error graph views in the CDE window.

| | |
|----------------|---|
| Remote Command | :DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel? |
|----------------|---|

Code Domain Measurement
AMPTD Y Scale

| | |
|-------------------------|--|
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | Unit is sensitive for Meas Type (Abs/Rel) as follows: Abs: dBm Rel: dB Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW2:WIND2:TRAC:Y:RLEV -10.0 DISP:CDP:VIEW2:WIND2:TRAC:Y:RLEV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.00 |
| State Saved | Saved in instrument state. |
| Min | -250.0 |
| Max | 250.0 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Mag Error Window Y Ref Value

Sets the absolute power reference value for the magnitude error window in the I/Q Error view.

| | |
|------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow [1] :TRACe:Y [:SCALE] :RLEVel <real> :DISPlay:CDPower:VIEW3:WINDow [1] :TRACe:Y [:SCALE] :RLEVel ? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW3:WIND:TRAC:Y:RLEV 0.0 DISP:CDP:VIEW3:WIND:TRAC:Y:RLEV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.00 |
| State Saved | Saved in instrument state. |
| Min | -500 |

| | |
|-------------------------|------------------|
| Max | 500 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Phase Error Window Y Ref Value

Sets the absolute power reference value for the phase error window in the I/Q Error view.

| | |
|-------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALE]:RLEVel <real> :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALE]:RLEVel? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW3:WIND2:TRAC:Y:RLEV 1.0 DISP:CDP:VIEW3:WIND2:TRAC:Y:RLEV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.00 |
| State Saved | Saved in instrument state. |
| Min | -360 |
| Max | 360 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View EVM Window Y Ref Value

Sets the absolute power reference value for the EVM window in the I/Q Error view.

| | |
|------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALE]:RLEVel <real> :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALE]:RLEVel? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW3:WIND3:TRAC:Y:RLEV 1.0 DISP:CDP:VIEW3:WIND3:TRAC:Y:RLEV? |

Code Domain Measurement AMPTD Y Scale

| | |
|-------------------------|----------------------------|
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.00 |
| State Saved | Saved in instrument state. |
| Min | -500 |
| Max | 500 |
| Instrument S/W Revision | A.01.60 or later |

Code Domain View CDP Window Y Ref Value

Sets the absolute power reference value for the code domain power view in the CDP window.

| | |
|-------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALe]:RLEVel ? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | Unit is sensitive for Meas Type (Abs/Rel) as follows: Abs: dBm Rel: dB Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW4:WIND:TRAC:Y:RLEV 1.0 DISP:CDP:VIEW4:WIND:TRAC:Y:RLEV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.00 |
| State Saved | Saved in instrument state. |
| Min | -250.0 |
| Max | 250.0 |
| Instrument S/W Revision | A.01.60 or later |

Code Domain View Symb Power Window Y Ref Value

Sets the absolute power reference value for the symbol power window in the CDP view.

| | |
|-------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:RLEVel? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW4:WIND2:TRAC:Y:RLEV 1.0 DISP:CDP:VIEW4:WIND2:TRAC:Y:RLEV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.00 |
| State Saved | Saved in instrument state. |
| Min | -250.0 |
| Max | 250.0 |
| Instrument S/W Revision | A.01.60 or later |

Demod Bits View CDP Window Y Ref Value

Sets the absolute power reference value for the Demod Bits view in the CDP window.

| | |
|------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALe]:RLEVel? ? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | Unit is sensitive for Meas Type (Abs/Rel) as follows: Abs: dBm Rel: dB Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW5:WIND:TRAC:Y:RLEV 1.0 DISP:CDP:VIEW5:WIND:TRAC:Y:RLEV? |

Code Domain Measurement AMPTD Y Scale

| | |
|-------------------------|----------------------------|
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.00 |
| State Saved | Saved in instrument state. |
| Min | -250.0 |
| Max | 250.0 |
| Instrument S/W Revision | A.01.60 or later |

Demod Bits View Symb Power Window Y Ref Value

Sets the absolute power reference value for the symbol power window of the Demod Bits view.

| | |
|-------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALE]:RLEVel <real> :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALE]:RLEVel? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW5:WIND2:TRAC:Y:RLEV 1.0 DISP:CDP:VIEW5:WIND2:TRAC:Y:RLEV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.00 |
| State Saved | Saved in instrument state. |
| Min | -250.0 |
| Max | 250.0 |
| Instrument S/W Revision | A.01.60 or later |

Attenuation

Accesses a menu of functions that enable you to change the attenuation settings. This key has read-back text that describes the total attenuator value.

This is only available when the selected input is RF Input.

See AMPTD Y Scale, “[Attenuation](#)” on page 1037 in the section “Common Measurement Functions” for

more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Range

Accesses the Range menu to change baseband I/Q gain settings. This key has a readback text that describes gain range value.

See AMPTD Y Scale, “[Range](#)” on page 1043 in the “Common Measurement Functions” for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Y Scale/Div

Sets the units per division of vertical scale in the logarithmic display. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Power Graph & Metrics View CDP Window Y Scale/Div

Sets the vertical display sensitivity measurement result in the Power Graph & Metrics window of the CDP view.

| | |
|-----------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision <real> :DISPlay:CDPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision? |
| Restriction and Notes | Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW:WIND:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW:WIND:TRAC:Y:PDIV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 10.00 |
| State Saved | Saved in instrument state. |

Code Domain Measurement AMPTD Y Scale

| | |
|-------------------------|------------------|
| Min | 0.10 |
| Max | 20.00 |
| Instrument S/W Revision | A.01.60 or later |

CDP Graph & CDE Graph View CDP Window Y Scale/Div

Sets the vertical display sensitivity measurement result for Code Domain Power and Code Domain Error graph views in the CDP window.

| | |
|-------------------------|--|
| Remote Command | <code>:DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:PDIVis ion <real></code> <code>:DISPlay:CDPower:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:PDIVis ion?</code> |
| Restriction and Notes | Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | <code>DISP:CDP:VIEW2:WIND:TRAC:Y:PDIV 5.0</code> <code>DISP:CDP:VIEW2:WIND:TRAC:Y:PDIV?</code> |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 10.00 |
| State Saved | Saved in instrument state. |
| Min | 0.10 |
| Max | 20.00 |
| Instrument S/W Revision | A.01.60 or later |

CDP Graph & CDE Graph View CDE Window Y Scale/Div

Sets the vertical display sensitivity measurement result for Code Domain Power and Code Domain Error graph views in the CDE window.

| | |
|-----------------------|--|
| Remote Command | <code>:DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALE]:PDIVisio n <real></code> <code>:DISPlay:CDPower:VIEW2:WINDow2:TRACe:Y[:SCALE]:PDIVisio n?</code> |
| Restriction and Notes | Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | <code>DISP:CDP:VIEW2:WIND2:TRAC:Y:PDIV 5.0</code> <code>DISP:CDP:VIEW2:WIND2:TRAC:Y:PDIV?</code> |
| Key Path | AMPTD Y Scale |

| | |
|-------------------------|----------------------------|
| Mode | CDMA2000 |
| Preset | 10.00 |
| State Saved | Saved in instrument state. |
| Min | 0.10 |
| Max | 20.00 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Mag Error Window Y Scale/Div

Sets the sensitivity measurement result for the magnitude error window in the I/Q Error view.

| | |
|-------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion <real> :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW3:WIND:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW3:WIND:TRAC:Y:PDIV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.2 |
| State Saved | Saved in instrument state. |
| Min | 0.100 |
| Max | 50.0 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Phase Error Window Y Scale/Div

Sets the sensitivity measurement result for the phase error window in the I/Q Error view.

| | |
|----------------|--|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:PDIVisio n <real> :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:PDIVisio n? |
|----------------|--|

Code Domain Measurement
AMPTD Y Scale

| | |
|-------------------------|--|
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW3:WIND2:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW3:WIND2:TRAC:Y:PDIV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.1 |
| State Saved | Saved in instrument state. |
| Min | 0.01 |
| Max | 360 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Evm Window Y Scale/Div

Sets the sensitivity measurement result for the EVM window in the I/Q Error view.

| | |
|------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALE]:PDIVisio n <real> :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALE]:PDIVisio n? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW3:WIND3:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW3:WIND3:TRAC:Y:PDIV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.1 |
| State Saved | Saved in instrument state. |
| Min | 0.100 |

| | |
|-------------------------|------------------|
| Max | 50.0 |
| Instrument S/W Revision | A.01.60 or later |

Code Domain View CDP Window Y Scale/Div

Sets the sensitivity measurement result for the CDP window in the Code domain view.

| | |
|-------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion <real> :DISPlay:CDPower:VIEW4:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion? |
| Restriction and Notes | Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW4:WIND:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW4:WIND:TRAC:Y:PDIV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 10.00 |
| State Saved | Saved in instrument state. |
| Min | 0.10 |
| Max | 20.00 |
| Instrument S/W Revision | A.01.60 or later |

Code Domain View Symbol Power Window Y Scale/Div

Sets the sensitivity measurement result for the symbol power window in the code domain view.

| | |
|------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:PDIVisio n <real> :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:PDIVisio n? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW4:WIND2:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW4:WIND2:TRAC:Y:PDIV? |

Code Domain Measurement
AMPTD Y Scale

| | |
|-------------------------|----------------------------|
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 5 |
| State Saved | Saved in instrument state. |
| Min | 0.10 |
| Max | 20.00 |
| Instrument S/W Revision | A.01.60 or later |

Demod Bits View CDP Window Y Scale/Div

Sets the sensitivity measurement result for the CDP window of the Demod Bits view.

| | |
|-------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion <real> :DISPlay:CDPower:VIEW5:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion? |
| Restriction and Notes | Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW5:WIND:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW5:WIND:TRAC:Y:PDIV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 10.00 |
| State Saved | Saved in instrument state. |
| Min | 0.10 |
| Max | 20.00 |
| Instrument S/W Revision | A.01.60 or later |

Demod Bits View Symbol Power Window Y Scale/Div

Sets the sensitivity measurement result for the symbol power window of demod bits view.

| | |
|------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:PDIVisio n <real> :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALe]:PDIVisio n? |
| Dependencies/Couplings | See Restriction and Notes |

| | |
|-------------------------|--|
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW5:WIND2:TRAC:Y:PDIV 5.0 DISP:CDP:VIEW5:WIND2:TRAC:Y:PDIV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 5 |
| State Saved | Saved in instrument state. |
| Min | 0.10 |
| Max | 20.00 |
| Instrument S/W Revision | A.01.60 or later |

Presel Center

See AMPTD Y Scale, “[Presel Center](#)” on page 1048 in the “Common Measurement Functions” section for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Presel Adjust

See AMPTD Y Scale, “[Preselector Adjust](#)” on page 1050 in the “Common Measurement Functions” section for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

This is only available when the selected input is RF Input.

See AMPTD Y Scale, “[Internal Preamp](#)” on page 1051 in the “Common Measurement Functions” section for more information.

| | |
|----------|----------------------|
| Key Path | AMPTD Y Scale |
|----------|----------------------|

Code Domain Measurement
AMPTD Y Scale

Instrument S/W Revision A.01.60 or later

YRef Position

Positions the Y-axis scale reference level at the top, center or bottom of the display. Changing the reference position does not change the reference level value.

Key Path **AMPTD Y Scale**

Instrument S/W Revision A.01.60 or later

I/Q Error View Mag Error Window Y Ref Position

Positions the Y-axis scale reference level at the top, center or bottom of the display in the magnitude error window of the I/Q Error view.

Remote Command :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:RPOSit
 ion TOP|CENTer|BOTTom

:DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:RPOSit
 ion?

Restriction and Notes Target window to control depends on the SubOpCode.

Remote Command Notes Target window to control depends on the SubOpCode.

Example DISP:CDP:VIEW3:WIND:TRAC:Y:RPOS CENT
 DISP:CDP:VIEW3:WIND:TRAC:Y:RPOS?

Key Path **AMPTD Y Scale**

Mode CDMA2000

Preset CENTer

State Saved Saved in instrument state.

Range Top|Ctr|Bot

Instrument S/W Revision A.01.60 or later

I/Q Error View Phase Error Window Y Ref Position

Positions the Y-axis scale reference level at the top, center or bottom of the display in the phase error window of the I/Q Error view.

Remote Command :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:RPOSitio
 n TOP|CENTer|BOTTom

:DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:RPOSitio
 n?

Restriction and Notes Target window to control depends on the SubOpCode.

Remote Command Notes Target window to control depends on the SubOpCode.

| | |
|-------------------------|--|
| Example | DISP:CDP:VIEW3:WIND2:TRAC:Y:RPOS CENT DISP:CDP:VIEW3:WIND2:TRAC:Y:RPOS? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | CENTer |
| State Saved | Saved in instrument state. |
| Range | Top Ctr Bot |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Evm Window Y Ref Position

Positions the Y-axis scale reference level at the top, center or bottom of the display in the EVM window of the I/Q Error view.

| | |
|-------------------------|---|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:RPOSitio n TOP CENTer BOTTom :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALe]:RPOSitio n? |
| Restriction and Notes | Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW3:WIND3:TRAC:Y:RPOS CENT DISP:CDP:VIEW3:WIND3:TRAC:Y:RPOS? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | BOTTom |
| State Saved | Saved in instrument state. |
| Range | Top Ctr Bot |
| Instrument S/W Revision | A.01.60 or later |

Code Domain View Symbol Power Window Y Ref Position

Positions the Y-axis scale reference level at the top, center or bottom of the display in the symbol power window of the code domain view.

| | |
|-----------------------|---|
| Remote Command | :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:RPOSitio n TOP CENTer BOTTom :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALe]:RPOSitio n? |
| Restriction and Notes | Target window to control depends on the SubOpCode. |

Code Domain Measurement

AMPTD Y Scale

| | |
|-------------------------|--|
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW4:WIND2:TRAC:Y:RPOS CENT DISP:CDP:VIEW4:WIND2:TRAC:Y:RPOS? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | CENTer |
| State Saved | Saved in instrument state. |
| Range | Top Ctr Bot |
| Instrument S/W Revision | A.01.60 or later |

Demod Bits View Symbol Power Window Y Ref Position

Positions the Y-axis scale reference level at the top, center or bottom of the display in the symbol power window of the Demod Bits view.

| | |
|-------------------------|---|
| Remote Command | :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALE]:RPOSitio n TOP CENTer BOTTom :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALE]:RPOSitio n? |
| Restriction and Notes | Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW5:WIND2:TRAC:Y:RPOS CENT DISP:CDP:VIEW5:WIND2:TRAC:Y:RPOS? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | CENTer |
| State Saved | Saved in instrument state. |
| Range | Top Ctr Bot |
| Instrument S/W Revision | A.01.60 or later |

Auto Scaling

Toggles the Auto Scaling function between On and Off. When the **Restart** front panel key or **Restart** menu key under the **Meas Control** menu is pressed, this function automatically determines the scale per division and reference values based on the measurement results.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Mag Error Window Y Auto Scaling

Toggles the Auto Scaling function between On and Off for the magnitude error window of the I/Q Error view.

| | |
|-------------------------|---|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0 1 OFF ON :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:Y[:SCALe]:COUPlE ? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | Upon pressing the Restart front-panel key or Restart menu key under the Meas Control menu, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW3:WIND:TRAC:Y:COUP ON DISP:CDP:VIEW3:WIND:TRAC:Y:COUP? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | Off On |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Phase Error Window Y Auto Scaling

Toggles the Auto Scaling function between On and Off in the phase error window of the I/Q Error view.

| | |
|------------------------|---|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:COUPlE 0 1 OFF ON :DISPlay:CDPower:VIEW3:WINDow2:TRACe:Y[:SCALe]:COUPlE? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | Upon pressing the Restart front-panel key or Restart menu key under the Meas Control menu, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |

Code Domain Measurement AMPTD Y Scale

| | |
|-------------------------|--|
| Example | DISP:CDP:VIEW3:WIND2:TRAC:Y:COUP ON DISP:CDP:VIEW3:WIND2:TRAC:Y:COUP? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | Off On |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Evm Window Y Auto Scaling

Toggles the Auto Scaling function between On and Off in the EVM window of the I/Q Error view

| | |
|-------------------------|---|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALE]:COUPle 0 1 OFF ON :DISPlay:CDPower:VIEW3:WINDow3:TRACe:Y[:SCALE]:COUPle? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | Upon pressing the Restart front-panel key or Restart menu key under the Meas Control menu, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW3:WIND3:TRAC:Y:COUP ON DISP:CDP:VIEW3:WIND3:TRAC:Y:COUP? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | Off On |
| Instrument S/W Revision | A.01.60 or later |

Code Domain View Symbol Power Window Y Auto Scaling

Toggles the Auto Scaling function between On and Off in the symbol power window of the code domain

view.

Remote Command :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALE]:COUPlE
 0|1|OFF|ON
 :DISPlay:CDPower:VIEW4:WINDow2:TRACe:Y[:SCALE]:COUPlE?

Dependencies/Couplings See Restriction and Notes

Restriction and Notes Upon pressing the Restart front-panel key or Restart menu key under the Meas Control menu, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
 Target window to control depends on the SubOpCode.

Remote Command Notes Target window to control depends on the SubOpCode.

Example DISP:CDP:VIEW4:WIND2:TRAC:Y:COUP ON
 DISP:CDP:VIEW4:WIND2:TRAC:Y:COUP?

Key Path **AMPTD Y Scale**

Mode CDMA2000

Preset ON

State Saved Saved in instrument state.

Range Off|On

Instrument S/W Revision A.01.60 or later

Demod Bits View Symbol Power Window Y Auto Scaling

Toggles the Auto Scaling function between On and Off in the symbol power window of the Demod Bits function view.

Remote Command :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALE]:COUPlE
 0|1|OFF|ON
 :DISPlay:CDPower:VIEW5:WINDow2:TRACe:Y[:SCALE]:COUPlE?

Dependencies/Couplings See Restriction and Notes

Restriction and Notes Upon pressing the Restart front-panel key or Restart menu key under the Meas Control menu, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.
 Target window to control depends on the SubOpCode.

Remote Command Notes Target window to control depends on the SubOpCode.

Code Domain Measurement
AMPTD Y Scale

| | |
|-------------------------|--|
| Example | DISP:CDP:VIEW5:WIND2:TRAC:Y:COUP ON DISP:CDP:VIEW5:WIND2:TRAC:Y:COUP? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | Off On |
| Instrument S/W Revision | A.01.60 or later |

Auto Couple

See [“AUTO COUPLE” on page 1055](#) in the section "Common Measurement Functions" for more information.

BW

There is no BW functionality supported in the Code Domain measurement. The front-panel key will display a blank menu key when pressed.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Cont

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1063 in the section "Common Measurement Functions" for more information.

FREQ Channel

See “[FREQ/Channel](#)” on page 1059 in the section "Common Measurement Functions" for more information.

Input/Output

See “[Input/Output](#)” on page 1065 in the section “Common Measurement Functions” for more information.

Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

See the "Marker Functions" section for more information

| Key Path | Front Panel Key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Marker Symbol Value (Remote Command only)

Sets the marker symbol value in the current marker for the trace of I/Q symbol polar vector. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal**.

This command is only valid when Marker Trace is 'POLar' (I/Q symbol polar vector). And, for other Marker Trace, it's not valid and ignored.

| | |
|-----------------------|--|
| Mode | CDMA2000 |
| Remote Command | :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :SYMBOL <real> :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :SYMBOL? |
| Preset | Start point of the trace on the display window |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Restriction and Notes | If no suffix is sent it will use 'symbols'. If a suffix is not 'symbols', an error "Invalid suffix" will be generated. The query returns the marker's 'symbol' value in the trace if the control mode is Normal . The query is returned in ' symbols '. If the marker is Off the response is not a number. The description provided in the MIN/MAX/DEF Support field is only for the SCPI tester. The remote command supports all the MIN/MAX/DEF parameters. |
| Remote Command Notes | This parameter has different meaning between the cases where the marker trace is set to Symbol I/Q Polar Vector and others. In the Symbol I/Q Polar Vector Graph, X Axis Value is also the measured value, so this parameter is meaningful only when the control mode is set to Normal |
| Example | CALC:CDP:MARK:SYMB 1.0 CALC:CDP:MARK:SYMB? |

Instrument S/W Revision A.01.60 or later

Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

This command is not valid when Marker Trace is 'POLar'(I/Q symbol polar vector) and ignored. For Marker Trace 'POLar'(I/Q symbol polar vector), Marker Symbol Value is supported instead.

| | |
|-------------------------|--|
| Mode | CDMA2000 |
| Remote Command | :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X <real> :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X ? |
| Preset | After a preset, all Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN). |
| State Saved | No |
| Min | ñ9.9E+37 |
| Max | 9.9E+37 |
| Restriction and Notes | If no suffix is sent it will use the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" will be generated. The query returns the marker's absolute X Axis value if the control mode is Normal , or the offset from the marker's reference marker if the control mode is Delta . The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time , seconds for Period and Time . If the marker is Off the response is not a number. |
| Example | CALC:CDP:MARK3:X 0.0 CALC:CDP:MARK3:X? |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** - except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

Mode CDMA2000

Code Domain Measurement Marker

| | |
|-------------------------|--|
| Remote Command | :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition <real> :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition? |
| Preset | After a preset, all Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN). |
| State Saved | No |
| Min | ñ9.9E+37 |
| Max | 9.9E+37 |
| Restriction and Notes | <p>The query returns the marker's absolute X Axis value in trace points if the control mode is Normal, or the offset from the marker's reference marker in trace points if the control mode is Delta. The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points (see "Fractional Trace Points", above). If the marker is Off the response is not a number.</p> <p>The description provided in the MIN/MAX/DEF Support field is only for the SCPI tester. The remote command supports all the MIN/MAX/DEF parameters.</p> |
| Example | CALC:CDP:MARK10:X:POS 0.0 CALC:CDP:MARK10:X:POS? |
| Instrument S/W Revision | A.01.60 or later |

Marker Y Axis Value (Remote Command only)

Queries the marker Y Axis value in the current marker Y Axis unit.

| | |
|-------------------------|--|
| Mode | CDMA2000 |
| Remote Command | :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :Y ? |
| Preset | Result dependant on markers setup and signal source |
| State Saved | No |
| Example | CALC:CDP:MARK11:Y? |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Marker Type

Sets the marker control mode. If the selected marker is Off, pressing Marker sets it to Normal and places it at the start of the screen on the trace determined by the **Marker Trace** rules. At the same time, reference value of the selected marker appears on the Active Function area.

Active Function Display:

Marker symbol value at I/Q Symbol Polar Vector graph

Marker X-axis value at other graphs

Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.

The marker X axis value entered in the active function area will display the marker value to its full entered precision.

When Marker Trace is 'POLar'(I/Q Polar), 'Delta' is not supported.

| Key Path | Marker |
|-------------------------|---|
| Remote Command | :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE POSITION DELTA OFF :CALCulate:CDPower:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:MODE? |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Normal Delta Off |
| Restriction and Notes | If the selected marker is Off, pressing Marker sets it to Normal and places it at the start of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X Axis Value appears on the Active Function area. Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off. Active Function Display: Marker symbol value at I/Q Symbol Polar Vector graph Marker X-axis value at other graphs The marker X axis value entered in the active function area will display the marker value to its full entered precision. |
| Remote Command Notes | NORMAL is changed to POSITION in the new SA. |
| Example | CALC:CDP:MARK:MODE POS CALC:CDP:MARK:MODE? |
| Instrument S/W Revision | A.01.60 or later |

Properties

Access a menu that enables you to select a relative marker and marker trace

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Relative To

Selects the marker the selected marker will be relative to (its reference marker).

| | |
|----------------|---|
| Remote Command | :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R EFerence <integer> :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R EFerence? |
|----------------|---|

| | |
|-----------------------|---|
| Restriction and Notes | A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself." |
|-----------------------|---|

| | |
|----------------------|--|
| Remote Command Notes | When queried a single value will be returned (the specified marker numbers relative marker). A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself." You must be in the Spectrum Analysis mode, GSM mode to use this command. Use INSTRument:SElect to set the mode. |
|----------------------|--|

| | |
|---------|---|
| Example | CALC:CDP:MARK:REF 4 CALC:CDP:MARK:REF? |
|---------|---|

| | |
|-------------------------|----------------------------|
| Key Path | Marker, Properties |
| Mode | CDMA2000 |
| Preset | 2 3 4 5 6 7 8 9 10 11 12 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 12 |
| Instrument S/W Revision | A.01.60 or later |

Marker Trace

Assigns the specified marker to the designated trace.

| | |
|-------------------------|--|
| Remote Command | :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :T RACe CDPower EVM MERRor PERRor SPOwer CPOwer CDError POLar :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :T RACe? |
| Example | CALC:CDP:MARK:TRACE POL CALC:CDP:MARK:TRACE? |
| Key Path | Marker,Properties |
| Mode | CDMA2000 |
| Preset | CDPower |
| State Saved | Saved in instrument state. |
| Range | Code Domain Power Code Domain Error Symbol Power Chip Power EVM Phase Error Mag Error Polar |
| Instrument S/W Revision | A.01.60 or later |

Couple Markers

Toggles the state of the markers to be coupled On or Off. When this function is true (On), moving any marker causes an equal X-axis movement of every other marker except those located to the polar trace, and Chip value of the marker located to the polar trace, which is not **Off**, including **Fixed** markers. "Equal X Axis movement" refers to the difference between each marker's X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units). This may result in markers going offscreen

See Couple Marker in the "Marker" section for more information.

| | |
|-------------------------|---|
| Remote Command | :CALCulate:CDPower:MARKer:COUPlE [:STATE] ON OFF 1 0 :CALCulate:CDPower:MARKer:COUPlE [:STATE] ? |
| Example | CALC:CDP:MARK:COUP ON CALC:CDP:MARK:COUP? |
| Key Path | Marker |
| Mode | CDMA2000 |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

All Markers Off

Turns off all markers.

| | |
|-------------------------|--------------------------------|
| Remote Command | :CALCulate:CDPower:MARKer:AOFF |
| Example | CALC:CDP:MARK:AOFF |
| Key Path | Marker |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Backward Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker which is OFF to state ON or 1 puts it in Normal mode and places it at the left of the screen.

| | |
|-------------------------|--|
| Mode | CDMA2000 |
| Remote Command | :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :S TATe OFF ON 0 1 :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :S TATe? |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Example | CALC:CDP:MARK3:STATe ON CALC:CDP:MARK3:STAT? |
| Instrument S/W Revision | A.01.60 or later |

Marker Function

There are no Marker Function operations supported in the Code Domain measurement. The front-panel key will display a blank menu when pressed.

| | |
|-------------------------|------------------------|
| Key Path | Front panel key |
| Instrument S/W Revision | A.01.60 or later |

Marker To

Accesses menu keys that can copy the current marker value into other instrument parameter, for example Despread. If the currently selected marker is not on when the front panel key is pressed, it will be turned on at the center of the screen as a normal type marker.

| | |
|-------------------------|------------------------|
| Key Path | Front panel key |
| Instrument S/W Revision | A.01.60 or later |

Mkr -> Despread

Executes post process for selected marker.

| | |
|-------------------------|---|
| Remote Command | :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 [:SET] :DESPread |
| Restriction and Notes | This function is available only when the marker trace is 'CDPower' |
| Example | CALC:CDP:MARK4:SET:DESP |
| Key Path | Marker ->, Mkr->Despread |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Meas

See [“Meas” on page 1115](#) in the section "Common Measurement Functions" for more information.

Meas Setup

Displays the setup menu for the currently selected measurement either BTS or MS.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Meas Type

Sets the code domain power computation type to either the absolute power or the relative value to the mean power.

| | |
|-------------------------|---|
| Remote Command | :CALCulate:CDPower:TYPE RELative ABSolute :CALCulate:CDPower:TYPE? |
| Example | CALC:CDP:TYPE REL CALC:CDP:TYPE? |
| Key Path | Meas Setup |
| Mode | CDMA2000 |
| Preset | RELative |
| State Saved | Saved in instrument state. |
| Range | Abs Rel |
| Instrument S/W Revision | A.01.60 or later |

Walsh Code Length

Sets spread code length.

| | |
|------------------------|---|
| Remote Command | CALCulate:CDPower:WCODE:LENGth <integer> CALCulate:CDPower:WCODE:LENGth? |
| Dependencies/Couplings | Walsh Code Lenth must be power of 2. If the input is not equal to the power of 2, it will be clipped to the nearest value available. |
| Restriction and Notes | Walsh Code Length allows you to change Code Layer and Code Number of the code you select. It is equivalent with Spread Factor(SF). The Default value ,Min value and Max vaule depend on radio device . For BTS, default = 64, max =128, min= 4 For Ms, default = 32, max = 32, min = 2 |

| | |
|-------------------------|--|
| Remote Command Notes | You must be in the CDMA2000 mode to use this command. Use INSTRUMENT:SElect to set the mode. |
| Example | CALCulate:CDPower:WCODE:LENGth 64 CALCulate:CDPower:WCODE:LENGth? |
| Key Path | Meas Setup |
| Mode | CDMA2000 |
| Preset | 64 32 |
| State Saved | Saved in instrument state. |
| Min | 4 2 |
| Max | 128 32 |
| Instrument S/W Revision | A.01.60 or later |

Walsh Code Number

Specifies the Walsh code number.

| | |
|-------------------------|---|
| Remote Command | CALCulate:CDPower:WCODE[:NUMBER] <integer> CALCulate:CDPower:WCODE[:NUMBER]? |
| Dependencies/Couplings | Walsh Code Number must be smaller than Walsh Code Length |
| Restriction and Notes | Set the Walsh code number depending on the channel type. |
| Remote Command Notes | You must be in the CDMA2000 mode to use this command. |
| Example | CALCulate:CDPower:WCODE 1 CALCulate:CDPower:WCODE? |
| Key Path | Meas Setup |
| Mode | CDMA2000 |
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | Walsh Code Length – 1 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Branch (MS only)

Select the I phase or Q phase for the demodulation axis.

| | |
|----------------|--|
| Remote Command | :CALCulate:CDPower:AXIS[:MS] IPH QPH IQCombined :CALCulate:CDPower:AXIS[:MS]? |
|----------------|--|

Code Domain Measurement Meas Setup

| | |
|-------------------------|---|
| Restriction and Notes | IPH – I Phase QPH – Q Phase IQC – Combined I and Q Phase This command is effective when [:SENSe]:RADio:DEVIce is set to MS. (This menu label is blank when [:SENSe]:RADio:DEVIce is set to BTS.) |
| Example | CALC:CDP:AXIS IPH CALC:CDP:AXIS? |
| Key Path | Meas Setup |
| Mode | CDMA2000 |
| Preset | QPH |
| State Saved | Saved in instrument state. |
| Range | I Q IQC |
| Instrument S/W Revision | A.01.60 or later |

Meas Interval

Sets the length of the measurement interval in PCG (power control group), 1 PCG = 1536chips.

| | |
|-------------------------|---|
| Remote Command | :CALCulate:CDPower:SWEep:TIME <integer> :CALCulate:CDPower:SWEep:TIME? |
| Dependencies/Couplings | Max value is dependent on Capture Interval and Meas Offset |
| Restriction and Notes | Set the length of the measurement interval that will be used. If summation of Meas Interval and Meas Offset exceeds 32 after changing Meas Interval (or Meas Offset), then Meas Offset (or Meas Interval) decreases automatically to make the summation 32. |
| Example | CALC:CDP:SWE:TIME 2 CALC:CDP:SWE:TIME? |
| Key Path | Meas Setup |
| Mode | CDMA2000 |
| Preset | 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | Capture Interval |
| Instrument S/W Revision | A.01.60 or later |

Meas Offset

Sets the timing offset of measurement interval in PCG (power control group), 1 PCG = 1536chips

| | |
|-------------------------|---|
| Remote Command | :CALCulate:CDPower:SWEep:OFFSet <integer> :CALCulate:CDPower:SWEep:OFFSet? |
| Dependencies/Couplings | Max value is dependent [:SENSe]:CDPwer:CAPTure:TIME and CALCulate:CDPower:SWEep:TIME |
| Restriction and Notes | If summation of Meas Interval and Meas Offset exceeds 32 after changing Meas Interval (or Meas Offset), then Meas Offset (or Meas Interval) decreases automatically to make the summation 32. |
| Example | CALC:CDP:SWE:OFFS 2 CALC:CDP:SWE:OFFS? |
| Key Path | Meas Setup |
| Mode | CDMA2000 |
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | Capture Interval – 1 |
| Instrument S/W Revision | A.01.60 or later |

PN Offset

| | |
|-----------------------|--|
| Key Path | Meas Setup, More |
| Remote Command | :CALCulate:CDPower:PNOFFset <integer> :CALCulate:CDPower:PNOFFset? |
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | 511 |
| Restriction and Notes | Sets value for the pseudo-random noise offset. Different pseudo-random noise offsets are used for different base stations. By setting the pseudo-random noise offset to the value that your specific base station is set to, you get the correct time offset value displayed and returned back to you when you query READ:CDPower? The instrument, by default, assumes an offset of 0. So, if you do not use this command, you will have to manually calculate the time offset when the value is other than 0. |

Code Domain Measurement Meas Setup

| | |
|-------------------------|---|
| Remote Command Notes | You must be in CDMA2000 mode to use this command. |
| Example | CALC:CDP:PNOF 5 CALC:CDP:PNOF? |
| Instrument S/W Revision | A.01.60 or later |

Sync Type(BTS only)

Opens a menu that enables you to set the channel type to be used for synchronization.

| | |
|-------------------------|---|
| Remote Command | <code>[[:SENSE]:CDPower:SYNC[:BTS] PICH DPICH</code> <code>[[:SENSE]:CDPower:SYNC[:BTS] ?</code> |
| Restriction and Notes | This command is effective when <code>[[:SENSE]:RADio:DEvice</code> is set to BTS. |
| Example | CDP:SYNC DPIC CDP:SYNC? |
| Key Path | Meas Setup |
| Mode | CDMA2000 |
| Preset | PICH |
| State Saved | Saved in instrument state. |
| Range | F-PICH TxDiv F-PICH |
| Instrument S/W Revision | A.01.60 or later |

Long Code Mask (MS only)

| | |
|------------------------|---|
| Remote Command | <code>[[:SENSE]:CDPower:SYNC:LCMask <integer></code> <code>[[:SENSE]:CDPower:SYNC:LCMask?</code> |
| Dependencies/Couplings | Only available when <code>[[:SENSE]:RADio:DEvice</code> is MS. |
| Restriction and Notes | Set the long code mask for MS measurement. By the key only 2000000000(hex) and 0 is avalabe. |
| Remote Command Notes | You must be in CDMA2000 to use this command |
| Example | CDP:SYNC:LCM 0 CDP:SYNC:LCM ? |
| Key Path | Meas Setup |
| Mode | CDMA2000 |
| Preset | 0 |

| | |
|-------------------------|--------------------------------|
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | 4,398,046,511,103 (3FFFFFFFFF) |
| Instrument S/W Revision | A.01.60 or later |

Capture Interval

Sets the data capture length in PCG (1PCG = 1.25 ms) that will be used in the acquisition.

| | |
|-------------------------|---|
| Remote Command | [:SENSe] :CDPower:CAPTure:TIME <integer> [:SENSe] :CDPower:CAPTure:TIME? |
| Remote Command Notes | You must be in CDMA2000 to use this command |
| Example | CDP:CAPT:TIME 32 CDP:CAPT:TIME? |
| Key Path | Meas Setup |
| Mode | CDMA2000 |
| Preset | 5 |
| State Saved | Saved in instrument state. |
| Min | 2 |
| Max | 32 |
| Instrument S/W Revision | A.01.60 or later |

Spectrum Inversion

Toggles the spectrum function between Normal and Invert.

Invert : This function conjugates the spectrum, which is equivalent to taking the negative of the quadrature component in demodulation. The correct setting (Normal or Invert) depends on whether the signal at the input of the instrument has a high or low side mix.

| | |
|----------------|--|
| Remote Command | [:SENSe] :CDPower:SPECTrum INVert NORMal [:SENSe] :CDPower:SPECTrum? |
| Example | CDP:SPEC INV CDP:SPEC? |
| Key Path | Meas Setup |
| Mode | CDMA2000 |
| Preset | NORMal |

Code Domain Measurement Meas Setup

| | |
|-------------------------|----------------------------|
| State Saved | Saved in instrument state. |
| Range | Normal Invert |
| Instrument S/W Revision | A.01.60 or later |

Meas Preset

Restores all the measurement parameters to their default values.

| | |
|-------------------------|---|
| Remote Command | :CONFigure:CDPower |
| Dependencies/Couplings | Selecting Restore Measurement Defaults will restore all measurement parameters to their default values. |
| Example | CONF:CDP |
| Key Path | Meas Setup |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Advanced

Accesses a menu of functions that enable you to set up more specific parameters for the measurement.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

Active Threshold

Toggles the active channel identification function between Auto and Man. If set to Auto, the active channels are determined automatically by the internal algorithm. If set to Man, the active channel identification is determined by a user definable threshold ranging from 0.00 to -100.00 dB.

| | |
|----------------|--|
| Remote Command | :CALCulate:CDPower:ASET:THReshold <real> :CALCulate:CDPower:ASET:THReshold? :CALCulate:CDPower:ASET:THReshold:AUTO OFF ON 0 1 :CALCulate:CDPower:ASET:THReshold:AUTO? |
| Example | CALC:CDP:ASET:THR -50.0 CALC:CDP:ASET:THR? CALC:CDP:ASET:THR:AUTO ON CALC:CDP:ASET:THR:AUTO? |

| | |
|-------------------------|--|
| Remote Command Notes | Turn the automatic mode On or Off, for the active channel identification function. OFF – The active channel identification for each code channel is determined by a value set by CALCulate:CDPower:ASET:THReshold. ON – The internal algorithm determines the active channels automatically. |
| Key Path | Meas Setup |
| Mode | CDMA2000 |
| Preset | 0.0 ON |
| State Saved | Saved in instrument state. |
| Min | -100.0 |
| Max | 0.0 |
| Instrument S/W Revision | A.01.60 or later |

Filter Alpha

Specifies the alpha value of the RX filter.

| | |
|-------------------------|--|
| Remote Command | [:SENSe] :CDPower:ALPHa <real> [:SENSe] :CDPower:ALPHa? |
| Example | CDP:ALPH 0.2 CDP:ALPH? |
| Key Path | Meas Setup, Advanced |
| Mode | CDMA2000 |
| Preset | 0.15 |
| State Saved | Saved in instrument state. |
| Min | 0.05 |
| Max | 0.20 |
| Instrument S/W Revision | A.01.60 or later |

Chip Rate

Allows you to Changes the chip rate.

| | |
|----------------|--|
| Remote Command | [:SENSe] :CDPower:CRATe <freq> [:SENSe] :CDPower:CRATe? |
|----------------|--|

Code Domain Measurement

Meas Setup

| | |
|-------------------------|-------------------------------|
| Example | CDP:CRAT 1228800 CDP:CRAT? |
| Key Path | Meas Setup, Advanced |
| Mode | CDMA2000 |
| Preset | 1.2288 MHz |
| State Saved | Saved in instrument state. |
| Min | 1.105920 MHz |
| Max | 1.351680 MHz |
| Instrument S/W Revision | A.01.60 or later |

Walsh Code QOF (BTS only)

Opens a menu to set the QOF number.

| | |
|-------------------------|--|
| Key Path | Meas Setup, Advanced |
| Remote Command | [:SENSe] :CDPower:QOF 0 1 2 3 [:SENSe] :CDPower:QOF? |
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | 3 |
| Dependencies/Couplings | Only available when [:SENS2]:RADio:DEvice is BTS. when [:SENS2]:RADio:DEvice is MS, This Menu is grayed out. |
| Restriction and Notes | Choose among QOF = 0,1,2or 3 for the specific Walsh Code that is selected. This key is available only on the BTS Mode. When QOF = 1,2 or 3, only Power Graph & Metrics view is available. |
| Example | CDP:QOF 2 CDP:QOF? |
| Instrument S/W Revision | A.01.60 or later |

IF Gain

Enables you to control an internally switched IF amplifier with approximately 10 dB of gain. When it can be turned on without an overload, the dynamic range is always better with the amplifier on than off. The **IF Gain** key can be used to set the IF Gain function to Auto, or to On (the extra 10 dB) or Off. These settings affect sensitivity and IF overloads.

his is only available when the selected input is RF Input.

| | |
|-------------------------|-----------------------------|
| Key Path | Meas Setup, Advanced |
| Instrument S/W Revision | A.01.60 or later |

IF Gain Auto Activates the auto rules for IF Gain.

| | |
|-------------------------|---|
| Remote Command | [:SENSe] :CDPower:IF:GAIN:AUTO[:STATe] OFF ON 0 1 [:SENSe] :CDPower:IF:GAIN:AUTO[:STATe] ? |
| Dependencies/Couplings | When either the auto attenuation works (for example, with electrical attenuator), or the optimize mechanical attenuator range is requested, the IF Gain setting is changed as following rule. 'auto' sets IF Gain 'High Gain' under any of the following conditions: the input attenuator is set to 0 dB, the preamp is turned on, or the Max Mixer Level is 20 dBm or lower. For other settings, auto sets IF Gain to 'Low Gain'. |
| Restriction and Notes | IF Gain menu key is not available when IQ Input is selected. |
| Example | CDP:IF:GAIN:AUTO ON CDP:IF:GAIN:AUTO? |
| Key Path | Meas Setup, Advanced, IF Gain |
| Mode | CDMA2000 |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Off On |
| Instrument S/W Revision | A.01.60 or later |

IF Gain State Selects the range of IF gain between Low Gain and High Gain.

| | |
|------------------------|---|
| Remote Command | [:SENSe] :CDPower:IF:GAIN[:STATe] ON OFF 1 0 [:SENSe] :CDPower:IF:GAIN[:STATe] ? |
| Dependencies/Couplings | When either the auto attenuation works (for example, with electrical attenuator), or the optimize mechanical attenuator range is requested, the IF Gain setting is changed as following rule. 'auto' sets IF Gain 'High Gain' under any of the following conditions: the input attenuator is set to 0 dB, the preamp is turned on, or the Max Mixer Level is 20 dBm or lower. For other settings, auto sets IF Gain to 'Low Gain'. |
| Restriction and Notes | IF Gain menu key is not available when IQ Input is selected. |
| Remote Command Notes | Where ON = high gain OFF = low gain |

Code Domain Measurement Meas Setup

| | |
|-------------------------|--|
| Example | CDP:IF:GAIN ON CDP:IF:GAIN? |
| Key Path | Meas Setup, Advanced, IF Gain |
| Mode | CDMA2000 |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Low Gain (Best for Large Signals) High Gain (Best Noise Level) |
| Instrument S/W Revision | A.01.60 or later |

Mode

See [“Mode” on page 1133](#) in the section "Common Measurement Functions" for more information.

Mode Setup

See “[Mode Setup](#)” on page 1145 in the section "Common Measurement Functions" for more information.

Peak Search

Places the selected marker on the trace point with the maximum y-axis value for that marker's trace.

| | |
|-------------------------|---|
| Remote Command | :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MAXimum |
| Example | CALC:CDP:MARK2:MAX |
| Key Path | Front panel key |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Next Peak

Moves the selected marker to the peak that has the next highest amplitude less than the marker's current value.

| | |
|-------------------------|--|
| Remote Command | :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MAXimum:NEXT |
| Example | CALC:CDP:MARK2:MAX:NEXT |
| Key Path | Peak Search |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Next Pk Right

Moves the selected marker to the nearest peak right of the current marker which meets all enabled peak criteria.

| | |
|-------------------------|---|
| Remote Command | :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MAXimum:RIGHT |
| Example | CALC:CDP:MARK2:MAX:RIGH |
| Key Path | Peak Search |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Next Pk Left

Moves the selected marker to the nearest peak left of the current marker which meets all enabled peak

criteria.

| | |
|-------------------------|--|
| Remote Command | :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M AXimum:LEFT |
| Example | CALC:CDP:MARK2:MAX:LEFT |
| Key Path | Peak Search |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Marker Delta

Sets the control mode for the selected marker to **Delta** mode.

| | |
|-------------------------|--------------------|
| Key Path | Peak Search |
| Instrument S/W Revision | A.01.60 or later |

Pk-Pk Search

Finds and displays the amplitude and frequency (or time, if in zero span) differences between the highest and lowest y-axis value.

| | |
|-------------------------|--|
| Remote Command | :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :P TPeak |
| Dependencies/Couplings | This key is not available (key is grayed out) when Coupled Markers is on. |
| Restriction and Notes | Turns on the Marker Δ active function. |
| Example | CALC:CDP:MARK:PTP |
| Key Path | Peak Search |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Min Search

Moves the selected marker to the minimum y-axis value on the current trace.

| | |
|----------------|---|
| Remote Command | :CALCulate:CDPower:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M INimum |
| Example | CALC:CDP:MARK:MIN |
| Key Path | Peak Search |
| Mode | CDMA2000 |

Instrument S/W Revision A.01.60 or later

Recall

See “[Recall](#)” on page 1149 in the section "Common Measurement Functions" for more information.

Restart

See [“Restart” on page 1167](#) in the section "Common Measurement Functions" for more information.

Save

See “[Save](#)” on page 1169 in the section "Common Measurement Functions" for more information.

Single

See “[Single \(Single Measurement/Sweep\)](#)” on page 1191 in the section "Common Measurement Functions" for more information.

Source

See [“Source”](#) on page 1193 in the section "Common Measurement Functions" for more information.

SPAN X Scale

Accesses a menu of functions that enable you to set the desired horizontal scale parameters.

Numbers and default numbers are independent for each window.

Metrics window and I/Q Symbol Polar Vector and Demod Bits window do not have this menu (Blank menu).

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Code Span

Accesses a menu that enables you to set the start and stop values for the code range of the code domain power graph, if the display window is a Power Bar graph or CDE graph.

Start Code Number

Sets the start value of the code range for the code domain power graph (CDP) and CDE graph

| | |
|------------------------|---|
| Remote Command | :DISPlay:CDPower:CDOMain:SPAN:START <integer> :DISPlay:CDPower:CDOMain:SPAN:START? |
| Dependencies/Couplings | Start Code Number and Stop Code Number are coupled to each other, according to: (A) Stop Code Number > Start Code Number and (B) Stop Code Number – Start Code Number >= 63 When changing the start code number, if it does not satisfy the above conditions, the stop code number is changed to satisfy (A) and (C). (C) Stop Code Number – Start Code Number = 63; |
| Restriction and Notes | This button is only available when BTS is the selected mode and Basecodelength equal to 128. |
| Example | DISP:CDP:CDOM:SPAN:STAR 5 DISP:CDP:CDOM:SPAN:STAR? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Min | 0 |

Code Domain Measurement
SPAN X Scale

| | |
|-------------------------|------------------|
| Max | 64 |
| Instrument S/W Revision | A.01.60 or later |

Stop Code Number

Sets the stop value of the code range for the code domain power graph (CDP) and CDE graph.

| Key Path | Span X Scale |
|-------------------------|--|
| Remote Command | :DISPlay:CDPower:CDOMain:SPAN:STOP <integer> :DISPlay:CDPower:CDOMain:SPAN:STOP? |
| Preset | 63 |
| State Saved | Saved in instrument state. |
| Min | 63 |
| Max | 127 |
| Dependencies/Couplings | 1.6.2.1.1 Start Code Number and 1.6.2.1.2 Stop Code Number are coupled to each other, according to: (A) Stop Code Number > Start Code Number and (B) Stop Code Number – Start Code Number >= 63 When changing the stop code number, if it does not satisfy the above, the start code number is changed to satisfy (A) and (C). (C) Stop Code Number – Start Code Number = 63; |
| Restriction and Notes | Default value is sensitive to the Base Code Length and Radio device. If Base Code Length is set 64, the stop code number is always 63, it can't be changed.If radio device is MS, it is always 31. when basecodelength equal to 64 or in MS mode,, This key is grayed out. |
| Example | DISP:CDP:CDOM:SPAN:STOP 127 DISP:CDP:CDOM:SPAN:STOP? |
| Instrument S/W Revision | A.01.60 or later |

X Scale

X Ref Value

Controls the reference value of the X scale of the current measurement.

| Key Path | Span X Scale |
|-------------------------|---------------------|
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Mag Error Window X Ref Value Sets the symbol reference value on the horizontal axis in the magnitude error window of the I/Q Error view.

| | |
|-------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:RLEVel <real> :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALe]:RLEVel ? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. |
| Remote Command Notes | You must be in the CDMA2000 mode to use this command. Use INSTRument:SElect to set the mode. |
| Example | DISP:CDP:VIEW3:WIND:TRAC:X:RLEV 10.0 DISP:CDP:VIEW3:WIND:TRAC:X:RLEV? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | 0.000 |
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | 5000000.0 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Phase Error Window X Ref Value Sets the symbol reference value on the horizontal axis in the phase error window of the I/Q Error view.

| | |
|------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:RLEVel <real> :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:RLEVel? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. |
| Remote Command Notes | You must be in the CDMA2000 mode to use this command. Use INSTRument:SElect to set the mode. |

Code Domain Measurement
SPAN X Scale

| | |
|-------------------------|--|
| Example | DISP:CDP:VIEW3:WIND2:TRAC:X:RLEV 10.0 DISP:CDP:VIEW3:WIND2:TRAC:X:RLEV? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | 0.000 |
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | 5000000.0 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Evm Window X Ref Value Sets the symbol reference value on the horizontal axis in the EVM window of the I/Q Error view.

| | |
|-------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALE]:RLEVel <real> :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALE]:RLEVel? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. |
| Remote Command Notes | You must be in the CDMA2000 mode to use this command. Use INSTrument:SElect to set the mode. |
| Example | DISP:CDP:VIEW3:WIND3:TRAC:X:RLEV 10.0 DISP:CDP:VIEW3:WIND3:TRAC:X:RLEV? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | 0.000 |
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | 5000000.0 |
| Instrument S/W Revision | A.01.60 or later |

Code Domain View Symb Power Window X Ref Value Sets the symbol reference value on the

horizontal axis of the symbol power window in the code domain (Quad view)..

| | |
|-------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALE]:RLEVel <real> :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALE]:RLEVel? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW4:WIND2:TRAC:X:RLEV 10.0 DISP:CDP:VIEW4:WIND2:TRAC:X:RLEV? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | 0.000 |
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | 5000000.0 |
| Instrument S/W Revision | A.01.60 or later |

Demod Bits View Symb Power Window X Ref Value Sets the symbol reference value on the horizontal axis in the symbol power window of the demod bits view.

| | |
|------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALE]:RLEVel <real> :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALE]:RLEVel? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW5:WIND2:TRAC:X:RLEV 10.0 DISP:CDP:VIEW5:WIND2:TRAC:X:RLEV? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | 0.000 |
| State Saved | Saved in instrument state. |

Code Domain Measurement
SPAN X Scale

| | |
|-------------------------|------------------|
| Min | 0 |
| Max | 5000000.0 |
| Instrument S/W Revision | A.01.60 or later |

X Scale/Div

Sets the horizontal scale by changing a value per division.

| | |
|-------------------------|---------------------|
| Key Path | Span X Scale |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Mag Error Window X Scale/Div Sets the horizontal scale by changing a symbol value per division in the magnitude error window of the I/Q Error view .

| | |
|----------------|--|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALE]:PDIVis ion <real> :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALE]:PDIVis ion? |
|----------------|--|

Dependencies/Couplings See Restriction and Notes

Restriction and Notes If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.

Target window to control depends on the SubOpCode.

Default value is Device sensitive as follows:

BTS: 2.3

MS: 4.7

Remote Command Notes Target window to control depends on the SubOpCode.

Example
 DISP:CDP:VIEW3:WIND:TRAC:X:PDIV 1.0
 DISP:CDP:VIEW3:WIND:TRAC:X:PDIV?

Key Path **Span X Scale**

Mode CDMA2000

Preset 2.3|4.7

State Saved Saved in instrument state.

Min 0.1

Max 500000.0

Instrument S/W Revision A.01.60 or later

I/Q Error View Phase Error Window X Scale/Div Sets the horizontal scale by changing a symbol

value per division in the phase error window of the I/Q Error view.

| | |
|-------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:PDIVisio n <real> :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:PDIVisio n? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. Target window to control depends on the SubOpCode. Default value is Device sensitive as follows: BTS: 2.3 MS: 4.7 |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | DISP:CDP:VIEW3:WIND2:TRAC:X:PDIV 1.0 DISP:CDP:VIEW3:WIND2:TRAC:X:PDIV? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | 2.3 4.7 |
| State Saved | Saved in instrument state. |
| Min | 0.1 |
| Max | 500000.0 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View EVM Window X Scale/Div Sets the horizontal scale by changing a symbol value per division in the EVM window of the I/Q Error view.

| | |
|------------------------|--|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:PDIVisio n <real> :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:PDIVisio n? |
| Dependencies/Couplings | See Restriction and Notes |

Code Domain Measurement
SPAN X Scale

| | |
|-------------------------|---|
| Restriction and Notes | <p>If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.</p> <p>Target window to control depends on the SubOpCode.</p> <p>Default value is Device sensitive as follows:</p> <p>BTS: 2.3</p> <p>MS: 4.7</p> |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | <pre>DISP:CDP:VIEW3:WIND3:TRAC:X:PDIV 1.0</pre> <pre>DISP:CDP:VIEW3:WIND3:TRAC:X:PDIV?</pre> |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | 2.3 4.7 |
| State Saved | Saved in instrument state. |
| Min | 0.1 |
| Max | 500000.0 |
| Instrument S/W Revision | A.01.60 or later |

Code Domain View Symb Power Window X Scale/Div Sets the horizontal scale by changing a symbol value per division in the symbol power window of the code domain (Quad view).

| | |
|------------------------|---|
| Remote Command | <pre>:DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALE]:PDIVisio</pre> <pre>n <real></pre> <pre>:DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALE]:PDIVisio</pre> <pre>n?</pre> |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | <p>If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off.</p> <p>Default value is Device sensitive as follows:</p> <p>BTS: 11.9</p> <p>MS: 23.9</p> <p>Target window to control depends on the SubOpCode.</p> |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | <pre>DISP:CDP:VIEW4:WIND2:TRAC:X:PDIV 1.0</pre> <pre>DISP:CDP:VIEW4:WIND2:TRAC:X:PDIV?</pre> |
| Key Path | Span X Scale |

| | |
|-------------------------|----------------------------|
| Mode | CDMA2000 |
| Preset | 11.9 23.9 |
| State Saved | Saved in instrument state. |
| Min | 0.1 |
| Max | 500000.0 |
| Instrument S/W Revision | A.01.60 or later |

Demod Bits View Symb Power Window X Scale/Div Sets the horizontal scale by changing a symbol value per division in the symbol power window of demod bits view.

| | |
|-------------------------|--|
| Remote Command | <code>:DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALE]:PDIVision <real></code> <code>:DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALE]:PDIVision?</code> |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. Default value is Device sensitive as follows: BTS: 11.9 MS: 23.9 Target window to control depends on the SubOpCode. |
| Remote Command Notes | Target window to control depends on the SubOpCode. |
| Example | <code>DISP:CDP:VIEW5:WIND2:TRAC:X:PDIV 1.0</code> <code>DISP:CDP:VIEW5:WIND2:TRAC:X:PDIV?</code> |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | 11.9 23.9 |
| State Saved | Saved in instrument state. |
| Min | 0.1 |
| Max | 500000.0 |
| Instrument S/W Revision | A.01.60 or later |

Ref Position

Sets the reference position of the X axis on the display. The reference position can be set to Left, Ctr

Code Domain Measurement
SPAN X Scale

(center) or Right.

| | |
|-------------------------|---------------------|
| Key Path | Span X Scale |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Mag Error Window Ref Position Sets the reference position of the X axis in the magnitude error window of the I/Q Error view .

| | |
|-------------------------|---|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALE]:RPOSit ion LEFT CENTer RIGHT :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALE]:RPOSit ion? |
| Example | DISP:CDP:VIEW3:WIND:TRAC:X:RPOS LEFT DISP:CDP:VIEW3:WIND:TRAC:X:RPOS? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | LEFT |
| State Saved | Saved in instrument state. |
| Range | Left Ctr Right |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Phase Error Window Ref Position Sets the reference position of the X axis in the phase error window of the I/Q Error view.

| | |
|-------------------------|---|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALE]:RPOSitio n LEFT CENTer RIGHT :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALE]:RPOSitio n? |
| Example | DISP:CDP:VIEW3:WIND2:TRAC:X:RPOS LEFT DISP:CDP:VIEW3:WIND2:TRAC:X:RPOS? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | LEFT |
| State Saved | Saved in instrument state. |
| Range | Left Ctr Right |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Evm Window Ref Position Sets the X axis reference position in the EVM window of

the I/Q Error view.

| | |
|-------------------------|---|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALE]:RPOSitio n LEFT CENTer RIGHT :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALE]:RPOSitio n? |
| Example | DISP:CDP:VIEW3:WIND3:TRAC:X:RPOS LEFT DISP:CDP:VIEW3:WIND3:TRAC:X:RPOS? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | LEFT |
| State Saved | Saved in instrument state. |
| Range | Left Ctr Right |
| Instrument S/W Revision | A.01.60 or later |

Code Domain View Symb Power Window Ref Position Sets the X axis reference position in the symbol power window of the code domain(Quad View).

| | |
|-------------------------|---|
| Remote Command | :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALE]:RPOSitio n LEFT CENTer RIGHT :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALE]:RPOSitio n? |
| Example | DISP:CDP:VIEW4:WIND2:TRAC:X:RPOS LEFT DISP:CDP:VIEW4:WIND2:TRAC:X:RPOS? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | LEFT |
| State Saved | Saved in instrument state. |
| Range | Left Ctr Right |
| Instrument S/W Revision | A.01.60 or later |

Demod Bits View Symb Power Window Ref Position Sets the X axis reference position for the symbol power window of Demod Bits view.

| | |
|----------------|---|
| Remote Command | :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALE]:RPOSitio n LEFT CENTer RIGHT :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALE]:RPOSitio n? |
|----------------|---|

Code Domain Measurement
SPAN X Scale

| | |
|-------------------------|--|
| Example | DISP:CDP:VIEW5:WIND2:TRAC:X:RPOS LEFT DISP:CDP:VIEW5:WIND2:TRAC:X:RPOS? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | LEFT |
| State Saved | Saved in instrument state. |
| Range | Left Ctr Right |
| Instrument S/W Revision | A.01.60 or later |

Auto Scaling

Determines the scale per division and reference value for the X axis based on the current measurement results.

| | |
|-------------------------|---------------------|
| Key Path | Span X Scale |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Mag Error Window Auto Scaling When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically displays the scale per division and reference value results in the magnitude error window of the I/Q Error view.

| | |
|----------------|---|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALE]:COUPle 0 1 OFF ON :DISPlay:CDPower:VIEW3:WINDow[1]:TRACe:X[:SCALE]:COUPle ? |
|----------------|---|

Dependencies/Couplings See Restriction and Notes

Restriction and Notes Upon pressing the Restart front-panel key or Restart menu key under the Meas Control menu, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.

| | |
|---------|--|
| Example | DISP:CDP:VIEW3:WIND1:TRAC:X:COUP ON DISP:CDP:VIEW3:WIND1:TRAC:X:COUP? |
|---------|--|

| | |
|-------------------------|----------------------------|
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | Off On |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Phase Error Window Auto Scaling When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically displays the scale per division and reference value results in the phase error window of the I/Q Error view.

| | |
|-------------------------|---|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:COUPlE0 1 OFF ON :DISPlay:CDPower:VIEW3:WINDow2:TRACe:X[:SCALe]:COUPlE? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | Upon pressing the Restart front-panel key or Restart menu key under the Meas Control menu, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off. |
| Example | DISP:CDP:VIEW3:WIND2:TRAC:X:COUP ON DISP:CDP:VIEW3:WIND2:TRAC:X:COUP? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | Off On |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View Evm Window Auto Scaling When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically displays the scale per division and reference value results in the EVM window of the I/Q Error window.

| | |
|------------------------|---|
| Remote Command | :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:COUPlE0 1 OFF ON :DISPlay:CDPower:VIEW3:WINDow3:TRACe:X[:SCALe]:COUPlE? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | Upon pressing the Restart front-panel key or Restart menu key under the Meas Control menu, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off. |
| Example | DISP:CDP:VIEW3:WIND3:TRAC:X:COUP ON DISP:CDP:VIEW3:WIND3:TRAC:X:COUP? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |

Code Domain Measurement
SPAN X Scale

| | |
|-------------------------|----------------------------|
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | Off On |
| Instrument S/W Revision | A.01.60 or later |

Code Domain View Symb Power Window Auto Scaling When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically displays the scale per division and reference value results in the symbol power window of the code domain (quad view).

| | |
|----------------|---|
| Remote Command | :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALE]:COUPl e0 1 OFF ON :DISPlay:CDPower:VIEW4:WINDow2:TRACe:X[:SCALE]:COUPl e? |
|----------------|---|

Dependencies/Couplings See Restriction and Notes

Restriction and Notes Upon pressing the Restart front-panel key or Restart menu key under the Meas Control menu, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.

Example
DISP:CDP:VIEW4:WIND2:TRAC:X:COUP ON
DISP:CDP:VIEW4:WIND2:TRAC:X:COUP?

Key Path **Span X Scale**

Mode CDMA2000

Preset ON

State Saved Saved in instrument state.

Range Off|On

Instrument S/W Revision A.01.60 or later

Demod Bits View Symb Power Window Auto Scaling When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically displays the scale per division and reference value results for the symbol power window of demod bits view.

| | |
|----------------|---|
| Remote Command | :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALE]:COUPl e0 1 OFF ON :DISPlay:CDPower:VIEW5:WINDow2:TRACe:X[:SCALE]:COUPl e? |
|----------------|---|

Dependencies/Couplings See Restriction and Notes

Restriction and Notes Upon pressing the Restart front-panel key or Restart menu key under the Meas Control menu, the Auto Scaling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|--|
| Example | DISP:CDP:VIEW5:WIND2:TRAC:X:COUP ON DISP:CDP:VIEW5:WIND2:TRAC:X:COUP? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | Off On |
| Instrument S/W Revision | A.01.60 or later |

Sweep/Control

Accesses a menu that enables you to pause and restart the measurement. See [“Sweep / Control” on page 1197](#) in the “Common Measurement Functions” for more information.

| | |
|-------------------------|------------------------|
| Key Path | Front Panel Key |
| Instrument S/W Revision | A.01.60 or later |

Pause/Resume

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing the Resume key resumes the measurement at the point it was at when paused. See [“Pause/Resume” on page 1198](#) in the “Common Measurement Functions” section for details.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Trace/Detector

There is no Trace/Detector functionality supported in the Code Domain measurement. The front-panel key will display a blank menu key when pressed.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Trigger

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement

.See “Trigger” on page 1221 in the "Common Measurement Functions" section for more information.

Trigger Source (Selected Input)

Selects a trigger source. Trigger settings are mode global. Refer to Measurement FunctionsMode functionality section for trigger settings.

| | |
|-------------------------|---|
| Remote Command | :TRIGger:CDPower[:SEquence]:SOURce EXTernal[1] EXTernal2 IMMediate LINE FRAME RFBurst VIDeo o IF IQMag IDEMod QDEMod IINPut QINPut AIQMag :TRIGger:CDPower[:SEquence]:SOURce? |
| Restriction and Notes | <ol style="list-style-type: none"> 1. IF in SCPI selection is the same as VIDEO. IF is kept because of backward compatibility. 2. Video and RF Burst are available only when in RF input and those selection menu keys are blank when in I/Q Input. 3. Baseband I/Q key is available only when in I/Q input, otherwise blank. IQMag, IDEMod, QDEMod, IINPut, QINPut and AIQMag are valid only when in I/Q input. |
| Remote Command Notes | You must be in the CDMA2000 mode to use this command. Use INSTRument:SElect to set the mode. |
| Example | TRIG:CDP:SOUR RFB TRIG:CDP:SOUR? |
| Key Path | Front panel key |
| Mode | CDMA2000 |
| Preset | IMMediate |
| State Saved | Saved in instrument state. |
| Range | Free Run Video IF Line External 1 External 2 RF Burst (Wideband) Periodic Timer(Frame Trigger) I/Q Mag I (Demodulated) Q (Demodulated) Input I Input Q Auxiliary Channel I/Q Mag |
| Instrument S/W Revision | A.01.60 or later |

RF Trigger Source

SCPI command for specifying the RF Trigger Source. This will always access the RF value, even when

the selected input is not RF.

| | |
|-------------------------|---|
| Remote Command | :TRIGger:CDPower[:SEquence]:RF:SOURce EXTernal[1] EXTernal2 IMMediate LINE FRAME RFBurst VIDeo IF : :TRIGger:CDPower[:SEquence]:RF:SOURce? |
| Restriction and Notes | IF in SCPI selection is the same as VIDEO. IF is kept because of backward compatibility. |
| Remote Command Notes | You must be in the CDMA2000 mode to use this command. Use INSTRUMENT:SElect to set the mode. |
| Example | TRIG:CDP:RF:SOUR RFB TRIG:CDP:RF:SOUR? |
| Key Path | Front panel key |
| Mode | CDMA2000 |
| Preset | IMMediate |
| State Saved | Saved in instrument state. |
| Range | Free Run Video IF Line External 1 External 2 RF Burst (Wideband) Periodic Timer(Frame Trigger) |
| Instrument S/W Revision | A.01.60 or later |

I/Q Trigger Source

SCPI command for specifying the I/Q Trigger Source. This will always access the I/Q value, even when the selected input is not I/Q.

| | |
|----------------------|--|
| Remote Command | :TRIGger:CDPower[:SEquence]:IQ:SOURce EXTernal[1] EXTernal2 IMMediate IQMag IDEMod QDEMod IINPut QINPut AIQMag : :TRIGger:CDPower[:SEquence]:IQ:SOURce? |
| Remote Command Notes | You must be in the CDMA2000 mode to use this command. Use INSTRUMENT:SElect to set the mode. |
| Example | TRIG:CDP:IQ:SOUR RFB TRIG:CDP:IQ:SOUR? |
| Key Path | Front panel key |
| Mode | CDMA2000 |
| Preset | IMMediate |
| State Saved | Saved in instrument state. |
| Range | Free Run External 1 External 2 I/Q Mag I (Demodulated) Q (Demodulated) Input I Input Q Auxiliary Channel I/Q Mag |

Code Domain Measurement
Trigger

Instrument S/W Revision A.01.60 or later

View/Display

Accesses a menu of functions that enable you to control the instrument display.

The topic contains the following sections:

[“View Selection by name \(SCPI only\)” on page 749](#)

[“View Selection by number \(SCPI only\)” on page 750](#)

View Selection by name (SCPI only)

Selects the desired measurement view from the following selections:

- PGRaph(1) – Power Graph & Metrics provides a combination view of the code domain power graph and the summary data.
- CDE(2) – Power Graph & CDE Graph provides a combination view of the code domain power graph and the code domain error. Not available if the [:SENSe]:CDPower:CAPTURE:TIME(Capture Interval) is 4.0 or 8.0 or 16.0(Long Mode).
- SEVM(3) – I/Q Error (Quad View) - Symbol EVM provides a combination view of magnitude error, phase error, Symbol EVM, and the summary data.
- QUAD(4) – Code Domain (Quad View) provides a combination view for the code domain power symbol power, I/Q symbol polar vector and the summary data.
- DBITs(5) – Demod Bits provides a combination view of the graphs for the code domain power and symbol power, and the I/Q demodulated bit stream data for the symbol power slots selected by the measurement interval and measurement offset

| | |
|-------------------------|---|
| Mode | CDMA2000 |
| Remote Command | :DISPlay:CDPower:VIEW[:SElect] PGRaph CDE SEVM QUAD DBITs :DISPlay:CDPower:VIEW[:SElect]? |
| Preset | PGRaph |
| State Saved | Saved in instrument state. |
| Range | Power Graph & Metrics CDP Graph & CDE Graph I/Q Error (Quad View) Code Domain (Quad View) Demod Bits Long Demod |
| Remote Command Notes | You must be in the CDMA2000 mode to use this command. Use INSTRument:SElect to set the mode. |
| Example | DISP:CDP:VIEW PGR DISP:CDP:VIEW? |
| Instrument S/W Revision | A.01.60 or later |

View Selection by number (SCPI only)

Displays the numeric values of the measurement results. This function is available by SCPI command only

| | |
|--------------------------|--|
| Remote Command: | :DISPlay:CDPower:VIEW:NSElect <integer> :DISPlay:CDPower:VIEW:NSElect? |
| Preset: | 1 |
| State Saved: | Saved in instrument state. |
| Min: | 1 |
| Max: | 5 |
| Remote Command Notes: | You must be in the CDMA2000 mode to use this command. Use INSTRument:SElect to set the mode. |
| Example: | DISP:CDP:VIEW:NSEL 2 DISP:CDP:VIEW:NSEL? |
| Instrument S/W Revision: | A.01.60 or later |
| Key Path | Front panel key |
| Instrument S/W Revision | A.01.60 or later |

Display

Accesses a menu of functions that enable you to set the display parameters.

See [“Display” on page 1273](#) in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|---------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

Power Graph & Metrics

Provides a combination view of the code domain power graph and the summary data.

[“Radio Device: BTS” on page 750](#)

[“Radio Device: MS” on page 753](#)

Radio Device: BTS

There are two windows: Power Bar Graph window (upper) and Metrics window (lower):

[“CDP\(Code Domain Power\) Graph window” on page 752](#)

[“Numeric Results window” on page 752](#)



CDP(Code Domain Power) Graph window

| | |
|---------------------|---------------|
| Marker Operation | Yes |
| Corresponding Trace | CDPower (n=2) |

Numeric Results window

| Name | Corresponding | Description | Unit | Format |
|--------------------------------|---------------|---|---|----------------|
| Total Power | n=1, 5th | the total RF power over the measurement interval. | dBm | nn.nn dBm |
| Total active channel power | n=1, 7th | the sum of the active channel power. | dBc or dBm (depending on the measurement type) | nn.nnn dBc/dBm |
| Pilot power | n=1, 8th | the average of the pilot code. | dBc or dBm (depending on the measurement type) | nn.nnn dBc/dBm |
| Sync power | n=1, 9th | power of the Sync code. In the MS mode, -999 shall be returned as a value. | dBc or dBm (depending on the measurement type) | nn.nnn dBc/dBm |
| Maximum active traffic power | n=1, 10th | maximum average power of the active code. If no active codes are detected, the value returned is -999. In the MS mode, -999 shall be returned as a value. | dBc or dBm (depending on the measurement type) | nn.nnn dBc/dBm |
| Average active traffic power | n=1, 11 th | the average power of all the active code. If no active codes are detected, the value returned is -999. In the MS mode, -999 shall be returned as a value. | dBc or dBm (depending on the measurement type) | nn.nnn dBc/dBm |
| Maximum inactive traffic power | n=1 12th | the maximum average power of the inactive traffic channels. In the MS mode, -999 shall be returned as a value. | dBc or dBm (depending on the measurement type) | nn.nnn dBc/dBm |
| Average inactive traffic power | n=1 13th | the average power of all the inactive traffic channels. In the MS mode, -999 shall be returned as a value. | dBc or dBm (depending on the measurement type) | nn.nnn dBc/dBm |

| | | | | |
|-----------------------------------|-----------|---|------|----------------|
| Number of active channels | n=1, 14th | active codes. In the MS mode, -999 shall be returned as a value. | None | Integer format |
| Time between trigger to PN offset | n=1, 19th | The time from the trigger point to the PN offset. In the MS mode, the value return is -999. | us | nn.nnn us |

Radio Device: MS

There are two windows: Power Bar Graph window (upper) and Metrics window (lower):

“CDP(Code Domain Power) Graph window” on page 754

“Numeric Results window” on page 754



CDP(Code Domain Power) Graph window

| | |
|---------------------|---------------|
| Marker Operation | Yes |
| Corresponding Trace | CDPower (n=2) |

Numeric Results window

| Name | Corresponding | Description | Unit | Format |
|----------------------------------|---------------|---|---|----------------|
| Total Power | n=1, 5th | the total RF power over the measurement interval. | dBm | nn.nn dBm |
| Total active power | n=1, 7th | the sum of the active power. | dBc or dBm (depending on the measurement type) | nn.nnn dBc/dBm |
| Pilot power | n=1, 8th | the average of the pilot code. | dBc or dBm (depending on the measurement type) | nn.nnn dBc/dBm |
| I channel average active power | n=1, 15th | the average power of the active I channels. If no active codes are detected, the value returned is -999. In the BS mode, -999 shall be returned as a value. | dBc or dBm (depending on the measurement type) | nn.nnn dBc/dBm |
| I channel maximum inactive power | n=1, 16th | the maximum average power of the active I channels. In the BS mode, the value returned is -999. | dBc or dBm (depending on the measurement type) | nn.nnn dBc/dBm |
| Q channel average active power | n=1, 17th | the average power of the active Q channels. If no active codes are detected, the value returned is -999. In the BS mode, -999 shall be returned as a value. | dBc or dBm (depending on the measurement type) | nn.nnn dBc/dBm |
| Q channel maximum inactive power | n=1, 18th | the maximum average power of the active Q channels. In the BS mode, the value returned is -999. | dBc or dBm (depending on the measurement type) | nn.nnn dBc/dBm |

Key Path **View/Display**

Instrument S/W Revision A.01.60 or later

Code Order

Access the selection menu for the Walsh code order function. Set the Walsh code order function to Hadamard or Bit Reverse.

The Code Order key for Power Bar Graph and CDE Graph functions are coupled to each other.

| | |
|-------------------------|---|
| Remote Command | CALCulate:CDPower:WCODe:ORDer HADMrd BREVerse CALCulate:CDPower:WCODe:ORDer? |
| Dependencies/Couplings | This command is effective only when the CDP window is selected. |
| Example | CALCulate:CDPower:WCODe:ORDer HADMrd CALCulate:CDPower:WCODe:ORDer? |
| Key Path | View/Display, Power Graph & Metrics |
| Mode | CDMA2000 |
| Preset | HADMrd |
| State Saved | Saved in instrument state. |
| Range | Hadamard Bit Reverse |
| Instrument S/W Revision | A.01.60 or later |

Base Code Length

Toggle the Walsh base code length between 64 and 128.

The Base Code Length for Power Bar Graph and CDE Graph functions are coupled to each other.

| | |
|------------------------|--|
| Remote Command | CALCulate:CDPower:WCODe:BASE <integer> CALCulate:CDPower:WCODe:BASE? |
| Dependencies/Couplings | This command is effective only when the CDP window is selected. |
| Restriction and Notes | Set the base code length (64 or 128) This key is grayed out when MS is selected as Radio device |
| Example | CALCulate:CDPower:WCODe:BASE 64 CALCulate:CDPower:WCODe:BASE? |
| Key Path | View/Display, Power Graph & Metrics |
| Mode | CDMA2000 |
| Preset | 64 |
| State Saved | Saved in instrument state. |
| Range | 64, 128 |

Code Domain Measurement View/Display

Instrument S/W Revision A.01.60 or later

Consolidated Marker

Toggle the consolidated marker function between On and Off.

The Consolidated Marker for Power Bar Graph and CDE Graph functions are coupled to each other.

| | |
|-------------------------|---|
| Key Path | View/Display, Power Graph & Metrics |
| Remote Command | DISPlay:CDPower:MARKer:CONSolidated ON OFF 1 0 DISPlay:CDPower:MARKer:CONSolidated? |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | Off On |
| Restriction and Notes | This softkey is displayed only when the CDP window is selected. This key shall be grayed out when the Code Order Bit Reverse key is selected. If set to On, the corresponding Walsh code channel power will be marked in the different color upon placing the marker at the consolidated Walsh code channel power |
| Remote Command Notes | You must be in the CDMA2000 mode to use this command. Use INSTrument:SELEct to set the mode. |
| Example | DISPlay:CDPower:MARKer:CONSolidated ON DISPlay:CDPower:MARKer:CONSolidated? |
| Instrument S/W Revision | A.01.60 or later |

CDP Graph & CDE Graph

Provides a combination view of the code domain power graph and the code domain error. These two windows have the same view settings as the Power Graph & Metrics view.

[“Radio Device: BTS” on page 756](#)

[“Radio Device: MS” on page 757](#)


Radio Device: BTS

There are two windows, the two windows of Power Bar Graph and CDE graph are coupled in terms of:

X/Y Scaling, Code order, Base code length and consolidate marker.

[“CDP\(Code Domain Power\) Graph window” on page 757](#)

[“CDE\(Code Domain Error\) Graph window” on page 757](#)

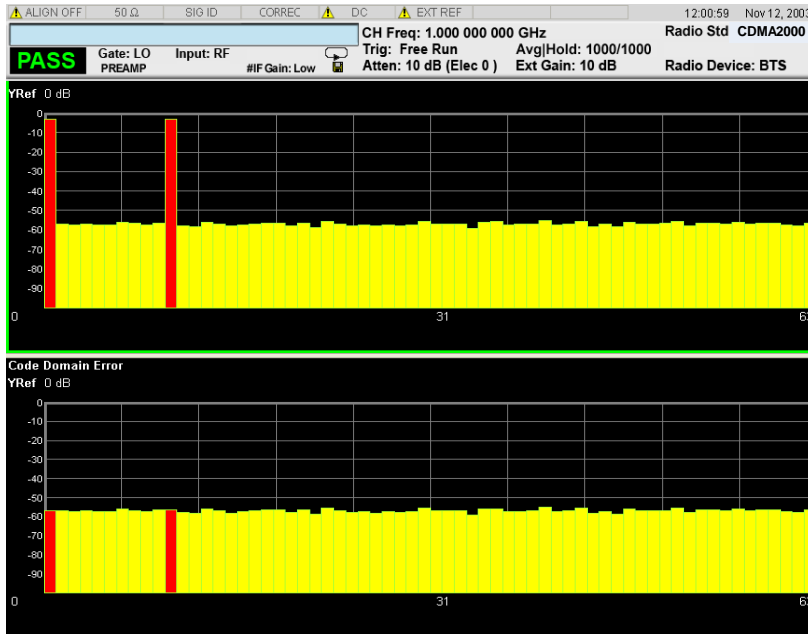

CDP(Code Domain Power) Graph window

| | |
|---------------------|---------------|
| Marker Operation | Yes |
| Corresponding Trace | CDPower (n=2) |

Note: These traces and scalar results are of the slot specified by the Meas Offset. (Not averaged over Meas Interval.)

CDE(Code Domain Error) Graph window

| | |
|---------------------|----------------|
| Marker Operation | Yes |
| Corresponding Trace | CDError (n=13) |

Note: These traces and scalar results are of the slot specified by the Meas Offset. (Not averaged over Meas Interval.)


Radio Device: MS

There are two windows, the two windows of Power Bar Graph and CDE graph are coupled in terms of: X/Y Scaling, Code order, Base code length and consolidate marker.

[“CDP\(Code Domain Power\) Graph window” on page 758](#)

[“CDE\(Code Domain Error\) Graph window” on page 758](#)

Code Domain Measurement View/Display

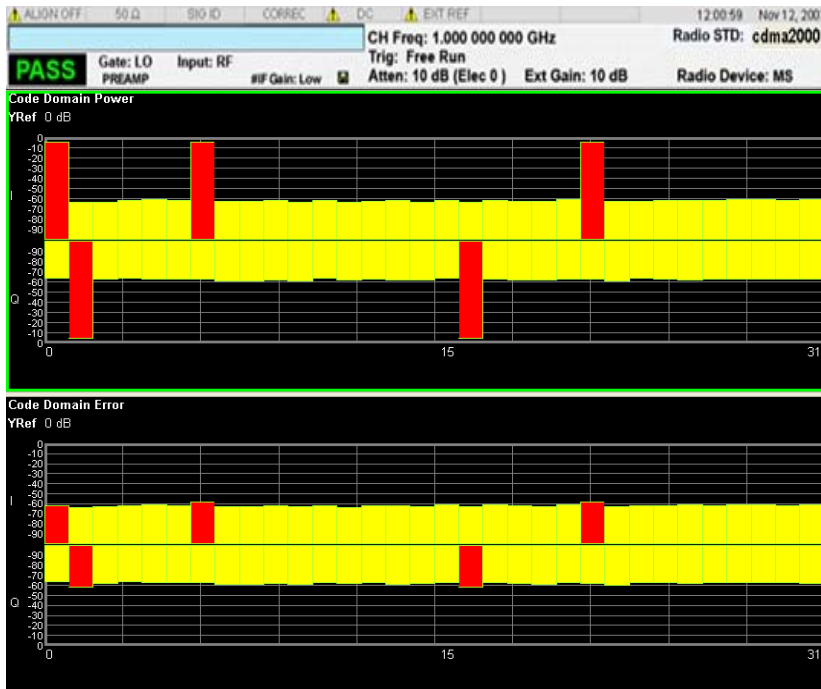

CDP(Code Domain Power) Graph window

| | |
|---------------------|---------------|
| Marker Operation | Yes |
| Corresponding Trace | CDPower (n=2) |

Note: These traces and scalar results are of the slot specified by the Meas Offset. (Not averaged over Meas Interval.)

CDE(Code Domain Error) Graph window

| | |
|---------------------|----------------|
| Marker Operation | Yes |
| Corresponding Trace | CDError (n=13) |

Note: These traces and scalar results are of the slot specified by the Meas Offset. (Not averaged over Meas Interval.)

| | |
|-------------------------|---------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error (Quad View)

Provides a combination view of magnitude error, phase error, Symbol EVM, and the summary data. There is no view settings for this view.

“Radio Device: BTS” on page 759

“Radio Device: MS” on page 760

Radio Device: BTS


There are four windows:

“Magnitude Error window” on page 760

“Phase Error window” on page 760

“EVM window” on page 760

“Numeric Results window” on page 760

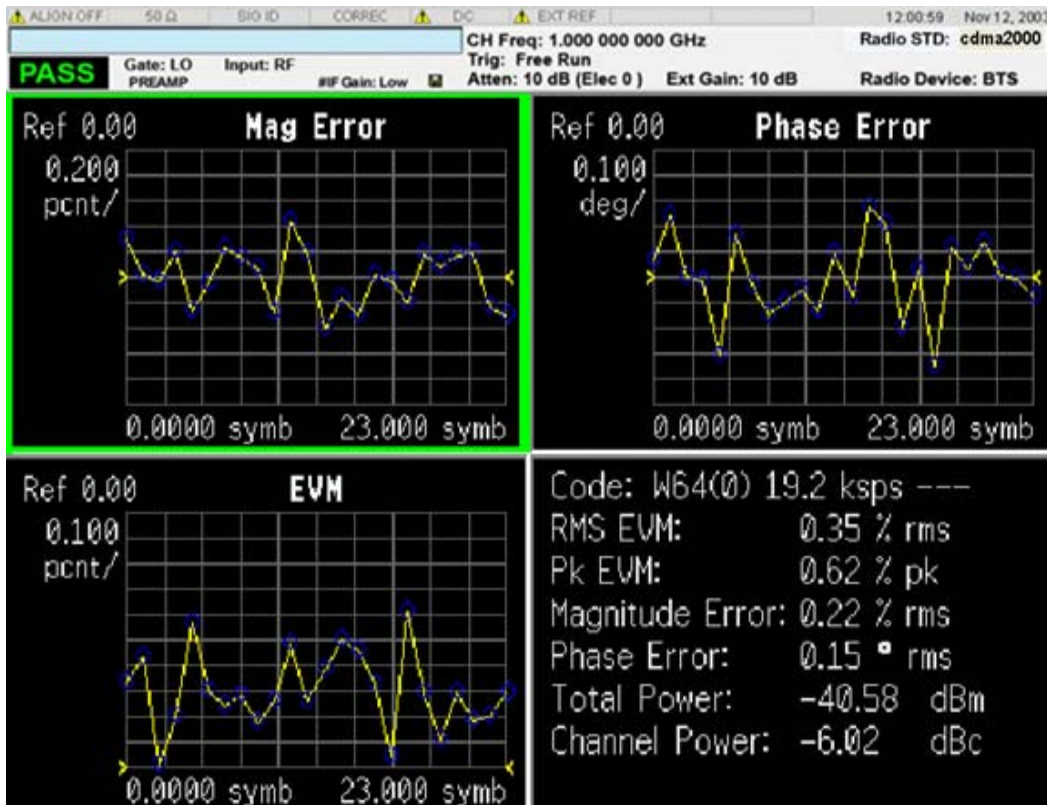

Magnitude Error window

| | |
|---------------------|--------------|
| Marker Operation | Yes |
| Corresponding Trace | MERRor (n=6) |

Phase Error window

| | |
|---------------------|--------------|
| Marker Operation | Yes |
| Corresponding Trace | PERRor (n=7) |

EVM window

| | |
|---------------------|-----------|
| Marker Operation | Yes |
| Corresponding Trace | EVM (n=5) |

Numeric Results window

| Name | Corresponding | Description | Unit | Format |
|-----------------|---------------|---|---|---|
| Code Number | NA | NA | | WX(Y) N ksps X: Walsh code level (2,4,8,...128) Y: Walsh code number (0... X) N: 9.6, 14.4, 153.6 ..., 230.4 ksps |
| RMS EVM | n=1 1st | RMS symbol EVM | % | nn.nn % rms |
| Pk EVM | n=1 2nd | Peak symbol EVM | % | nn.nn % pk |
| Magnitude Error | n=1 3rd | Symbol magnitude error | % | nn.nn % rms |
| Phase Error | n=1 4th | Symbol phase error | degree | nn.nn °rms |
| Total Power | n=1 5th | total RF power over measurement interval. | dBm | -nn.nn dBm |
| Channel Power | n=1 6th | Channel Power | dBc or dBm (depending on the measurement type) | -nn.nn dBc/dBm |


Radio Device: MS

“Magnitude Error window Note 1” on page 762

“Phase Error window (Note 1, 2)” on page 762

“EVM window Note 1” on page 762

“Numeric Results window” on page 762

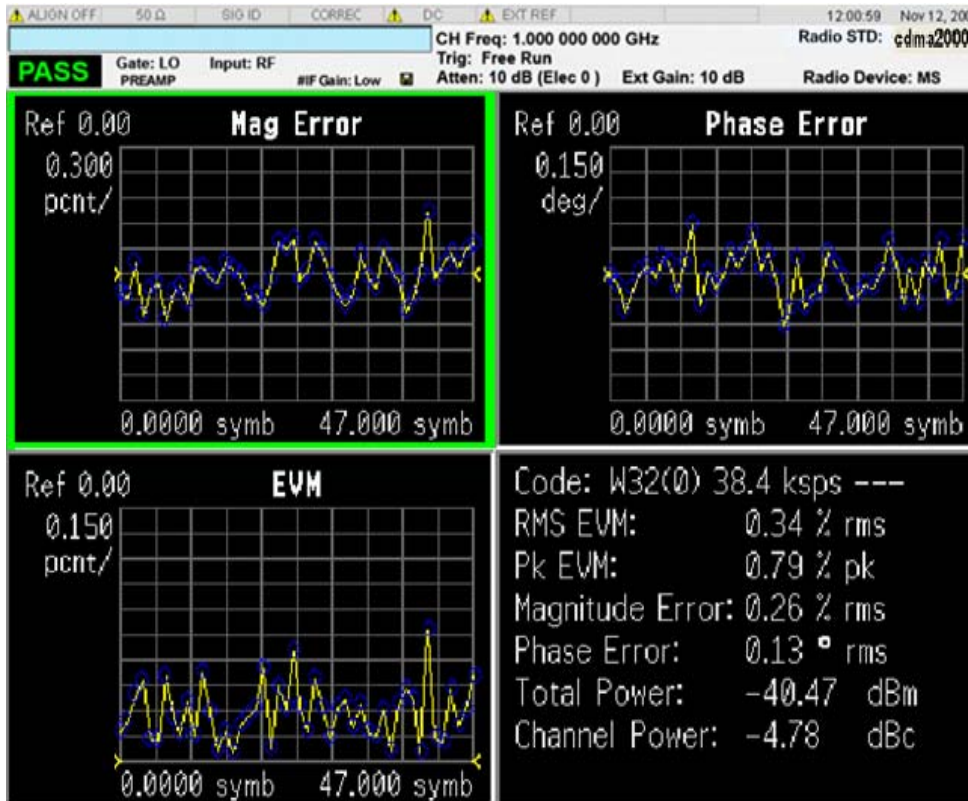

Magnitude Error window Note 1

| | |
|---------------------|--------------|
| Marker Operation | Yes |
| Corresponding Trace | MERRor (n=6) |

Phase Error window (Note 1, 2)

| | |
|---------------------|-------------|
| Marker Operation | Yes |
| Corresponding Trace | PERRor(n=7) |

EVM window Note 1

| | |
|---------------------|-----------|
| Marker Operation | Yes |
| Corresponding Trace | EVM (n=5) |

Numeric Results window

| Name | Corresponding | Description | Unit | Format |
|-----------------|---------------|---|---|---|
| Code Number | NA | NA | | WX(Y) N ksps X: Walsh code level (2,4,8,...128) Y: Walsh code number (0... X) N: 9.6, 14.4, 153.6 ..., 230.4 ksps |
| RMS EVM | n=1 1st | RMS symbol EVM (Note 1) | % | nn.nn % rms |
| Pk EVM | n=1 2nd | Peak symbol EVM (Note 1) | % | nn.nn % pk |
| Magnitude Error | n=1 3rd | Symbol magnitude error (Note 1) | % | nn.nn % rms |
| Phase Error | n=1 4th | Symbol phase error (Note 2) | degree | nn.nn °rms |
| Total Power | n=1 5th | Total RF power over measurement interval. | dBm | -nn.nn dBm |
| Channel Power | n=1 6th | Channel Power | dBc or dBm (depending on the measurement type) | -nn.nn dBc/dBm |

Note 1:

When I/Q Branch is either I (-BPSK) or Q (-BPSK):

EVM of single code Channel is calculated independently between I and Q each other.

When I/Q Branch is IQC (-Combined)

EVM is calculated based on combined symbol vector of I and Q decision point.

Note 2:

When I/Q Branch is either I (-BPSK) or Q (-BPSK)

IQ Phase error is no meaning.

When I/Q Branch is IQ (-Combined):

IQ Phase error is calculated based on combined symbol vector of I and Q decision point.

| Key Path | View/Display |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Code Domain (Quad View)

Provides a combination view of magnitude error, phase error, Symbol EVM, and the summary data. There is no view settings for this view.

[“Radio Device: BTS” on page 763](#)

[“Radio Device: MS” on page 766](#)

Radio Device: BTS

There are four windows:


[“Power Bar Graph window” on page 765](#)

[“Symbol Power vs Time window” on page 765](#)

[“I/Q Symbol Polar Vector window” on page 765](#)

[“Numeric Results window” on page 765](#)

Code Domain Measurement
View/Display

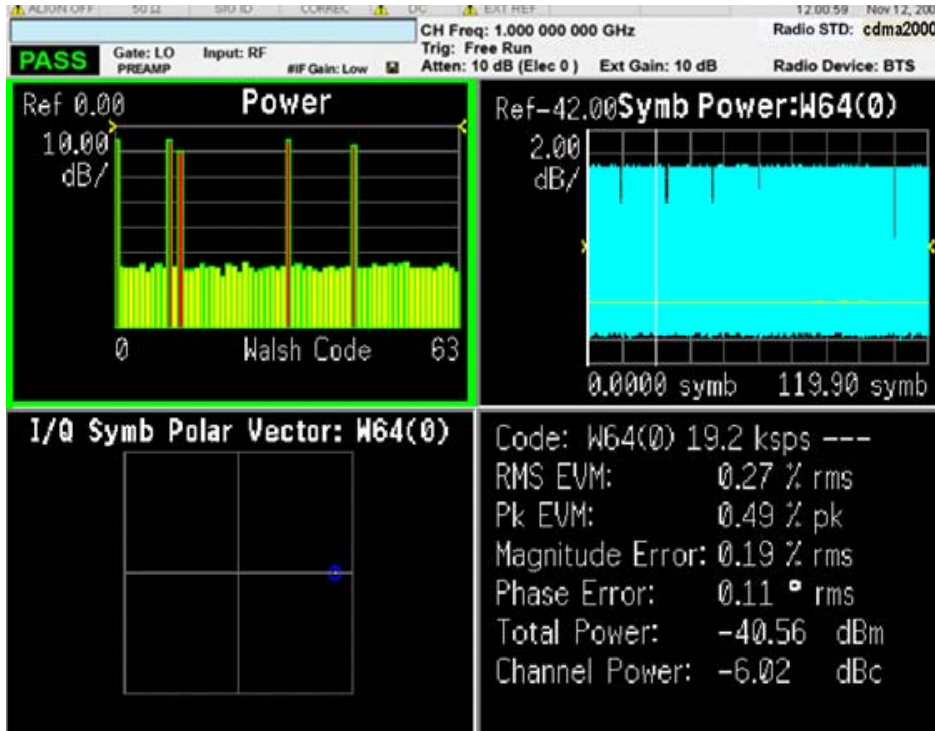

Power Bar Graph window

| | |
|---------------------|---------------|
| Marker Operation | Yes |
| Corresponding Trace | CDPower (n=2) |

Symbol Power vs Time window

| | |
|---------------------|-----------------------------|
| Marker Operation | Yes |
| Corresponding Trace | SPOWer (n=9), CPOWer (n=10) |

I/Q Symbol Polar Vector window

| | |
|---------------------|-------|
| Marker Operation | Yes |
| Corresponding Trace | (n=8) |

Numeric Results window

| Name | Corresponding | Description | Unit | Format |
|-----------------|---------------|--|--|--|
| Code Number | NA | NA | | WX(Y) N ksp X: Walsh code level (2,4,8,... 128) Y: Walsh code number (0 ... X) N: 9.6, 14.4, 153.6 ..., 230.4 ksp |
| RMS EVM | n=1 1st | RMS symbol EVM | % | nn.nn % rms |
| Pk EVM | n=1 2nd | Peak symbol EVM | % | nn.nn % pk |
| Magnitude Error | n=1 3rd | Symbol magnitude error | % | nn.nn % rms |
| Phase Error | n=1 4th | Symbol phase error | degree | nn.nn °rms |
| Total Power | n=1 5th | Total RF power over measurement interval. | dBm | -nn.nn dBm |
| Channel Power | n=1 6th | Channel Power | dBc or dBm (depending on the measurement type) | -nn.nn dBc/dBm |

Radio Device: MS


There are four windows:

“Power Bar Graph window” on page 766

“Symbol Power vs Time window” on page 767

“I/Q Symbol Polar Vector window” on page 767

“Numeric Results window” on page 768

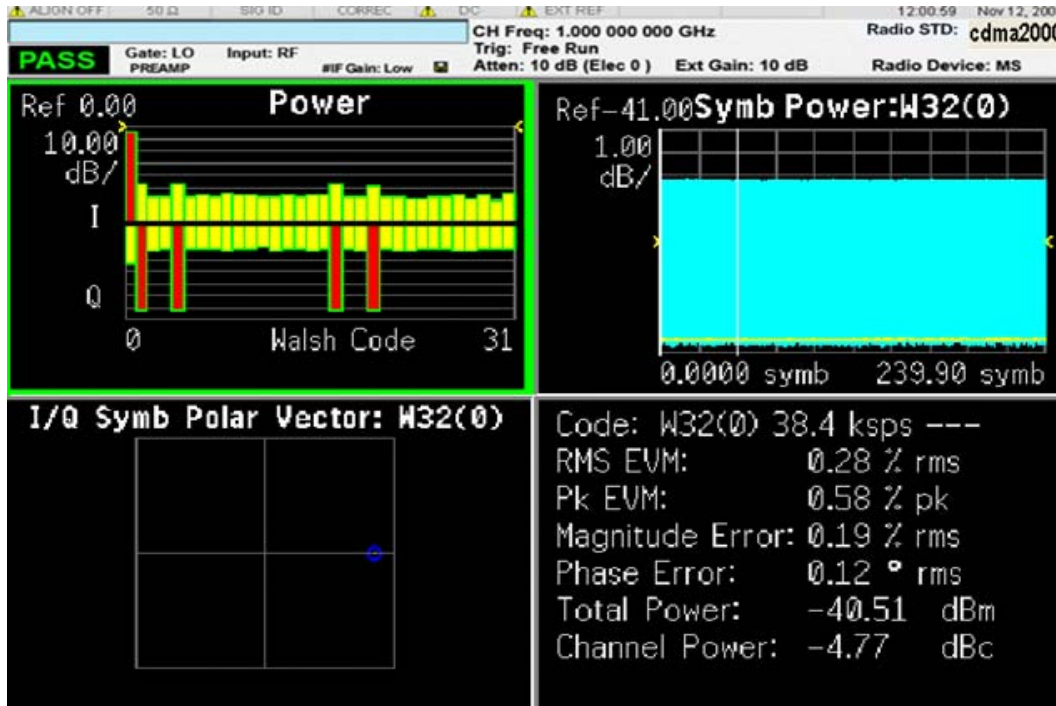

Power Bar Graph window

| | |
|---------------------|---------------|
| Marker Operation | Yes |
| Corresponding Trace | CDPower (n=2) |

Note: These traces and scalar results are of the slot specified by the Meas Offset. (Not averaged over Meas Interval.)

Symbol Power vs Time window

| | |
|---------------------|-----------------------------|
| Marker Operation | Yes |
| Corresponding Trace | SPOWer (n=9), CPOWer (n=10) |

I/Q Symbol Polar Vector window

| | |
|---------------------|--|
| Marker Operation | Yes |
| Corresponding Trace | IQ Corrected Measured Trace (n=8) Note 1 |

Note:

When I/Q Branch is either I (-BPSK) or Q (-BPSK):

Symbol Vector is independent between I and Q each other.

When I/Q Branch is IQC (-Combined)

Symbol vector is combined between I and Q.

See “HPSK (Hybrid PSK) analysis” in “Measurement Algorithm”.

Code Domain Measurement
View/Display

Numeric Results window

| Name | Corresponding | Description | Unit | Format |
|-----------------|---------------|---|---|--|
| Code Number | NA | NA | | WX(Y) N ksps X: Walsh code level (2,4,8,...128) Y: Walsh code number (0 ... X) N: 9.6, 14.4, 153.6 ..., 230.4 ksps |
| RMS EVM | n=1 1st | RMS symbol EVM | % | nn.nn % rms |
| Pk EVM | n=1 2nd | Peak symbol EVM | % | nn.nn % pk |
| Magnitude Error | n=1 3rd | Symbol magnitude error | % | nn.nn % rms |
| Phase Error | n=1 4th | Symbol phase | degree | nn.nn °rms |
| Total Power | n=1 5th | Total RF power over measurement interval. | dBm | -nn.nn dBm |
| Channel Power | n=1 6th | Channel Power | dBc or dBm (depending on the measurement type) | -nn.nn dBc/dBm |

Key Path **View/Display**
Instrument S/W Revision A.01.60 or later

Composite Chip Power

Toggles the composite chip power display function between On and Off.

Remote Command :DISPlay:CDPower:CPOWER[:STATE] 0|1|OFF|ON
:DISPlay:CDPower:CPOWER[:STATE] ?

Restriction and Notes Only valid for Symbol/Chip Power vs. Time window.

Example DISP:CDP:CPOW ON
DISP:CDP:CPOW?

Key Path **View/Display, Code Domain (Quad View)**

Mode CDMA2000

Preset ON

| | |
|-------------------------|----------------------------|
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Demod Bits

There are three windows. The Code Domain Power window has the same view settings as the Power Graph & Metrics. The Symbol Power window has the view setting of Composite Chip Power. The Demod Bits window is to allow the following controls to read the bit stream measurement results:

- Prev Page - Returns one page back to the previous page of the measurement results.
- Next Page - Moves one page forward to the next page of the measurement results.
- Scroll Up - Moves one line upward from the current page of the measurement results by each pressing.
- Scroll Down - Moves one line downward from the current page of the measurement results by each pressing.
- First Page - Moves from the current page to the first page of the measurement results.
- Last Page - Moves from the current page to the last page of the measurement results.

[“Radio Device: BTS” on page 769](#)

[“Radio Device: MS” on page 770](#)

Radio Device: BTS


There are three windows:

[“CDP\(Code Domain Power\) Graph window ” on page 770](#)

[“Symbol Power vs Time window” on page 770](#)

[“Demod Bits window” on page 770](#)

Code Domain Measurement View/Display

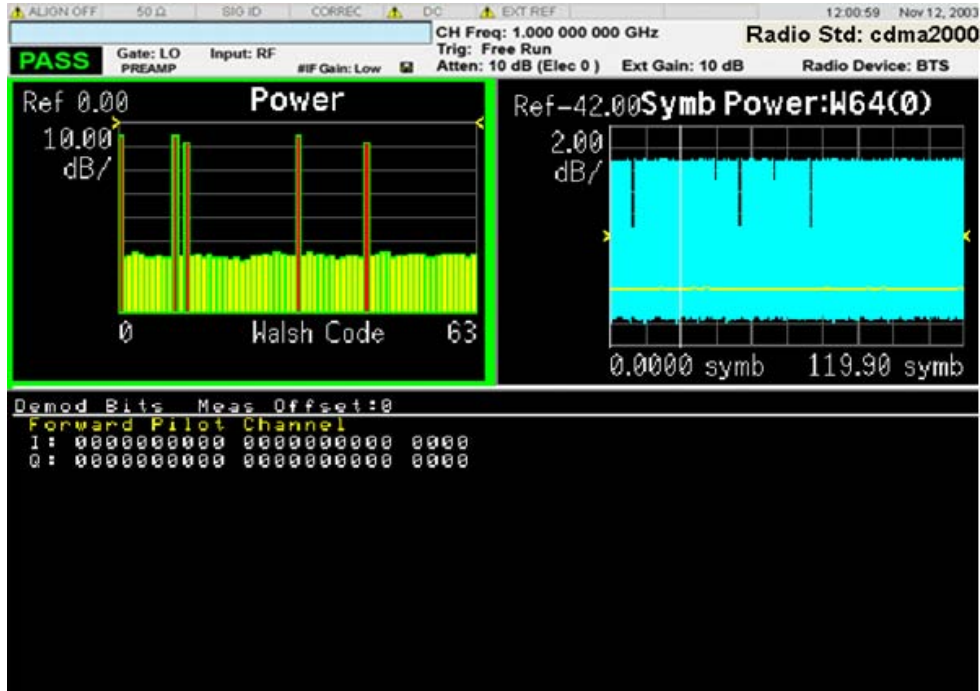

CDP(Code Domain Power) Graph window

| | |
|---------------------|---------------|
| Marker Operation | Yes |
| Corresponding Trace | CDPower (n=2) |

Symbol Power vs Time window

| | |
|---------------------|-----------------------------|
| Marker Operation | Yes |
| Corresponding Trace | SPOWer (n=9), CPOWer (n=10) |

Demod Bits window

| | |
|---------------------|---|
| Marker Operation | No |
| Corresponding Trace | Selected Demod Bits by Meas Offset and Meas Interval (n=12) |


Radio Device: MS

There are three windows:

“CDP(Code Domain Power) Graph window” on page 771

“Symbol Power vs Time window” on page 771

“Demod Bits window ” on page 771

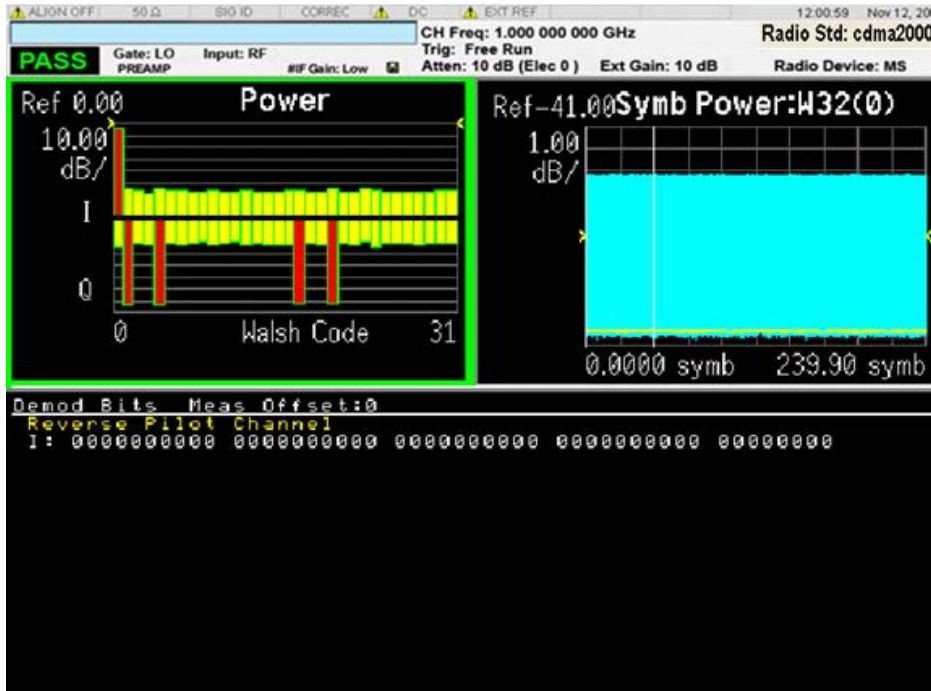

CDP(Code Domain Power) Graph window

| | |
|---------------------|---------------|
| Marker Operation | Yes |
| Corresponding Trace | CDPower (n=2) |

Symbol Power vs Time window

| | |
|---------------------|-----------------------------|
| Marker Operation | Yes |
| Corresponding Trace | SPOWER (n=9), CPOWER (n=10) |

Demod Bits window

| | |
|---------------------|---|
| Marker Operation | No |
| Corresponding Trace | Selected Demod Bits by Meas Offset and Meas Interval (n=12) |

| | |
|-------------------------|---------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

Prev Page

Returns the current page back to the previous page of the measurement results.

| | |
|-----------------------|---|
| Restriction and Notes | The Demod Bits window must be the focused window. |
|-----------------------|---|

Code Domain Measurement View/Display

| | |
|-------------------------|---------------------------------|
| Remote Command Notes | NO SCPI |
| Key Path | View/Display, Demod Bits |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Next Page

Moves the current page forward to the next page of the measurement results.

| | |
|-------------------------|---|
| Restriction and Notes | The Demod Bits window must be the focused window. |
| Remote Command Notes | NO SCPI |
| Key Path | View/Display, Demod Bits |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Scroll Up

Moves one line upward from the current page of the measurement results by each pressing.

| | |
|-------------------------|---|
| Restriction and Notes | The Demod Bits window must be the focused window. |
| Remote Command Notes | NO SCPI |
| Key Path | View/Display, Demod Bits |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Scroll Down

Moves one line downward from the current page of the measurement results by each press.

| | |
|-------------------------|---|
| Restriction and Notes | The Demod Bits window must be the focused window. |
| Remote Command Notes | NO SCPI |
| Key Path | View/Display, Demod Bits |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

First Page

Moves from the current page to the first page of the measurement results.

| | |
|-----------------------|---|
| Restriction and Notes | The Demod Bits window must be the focused window. |
|-----------------------|---|

| | |
|-------------------------|---------------------------------|
| Remote Command Notes | NO SCPI |
| Key Path | View/Display, Demod Bits |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Last Page

Moves from the current page to the last page of the measurement results.

| | |
|-------------------------|---|
| Restriction and Notes | The Demod Bits window must be the focused window. |
| Remote Command Notes | NO SCPI |
| Key Path | View/Display, Demod Bits |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Modulation Accuracy (Composite Rho) Measurement

Rho is one of the key modulation quality metrics, along with EVM. Rho is the ratio of the correlated power in a multi coded channel to the total signal power. This measurement takes into account all possible error mechanisms in the entire transmission chain including: baseband filtering, I/Q modulation anomalies, filter amplitude and phase non-linearity, and power amplifier distortions.

This provides an overall indication of the performance level of the transmitter of the unit under test (UUT).

For measurements results and views, see [“View/Display” on page 839](#).

This section contains the following topics:

[“Measurement Commands for Modulation Accuracy” on page 775](#)

[“Remote Command Results for Modulation Accuracy Measurement” on page 775](#)

Measurement Commands for Modulation Accuracy

You must be in the CDMA2000 to use these commands. Use INSTRUMENT:SELEct to set the mode.

:CONFigure:RHO

:FETCh:RHO [n] ?

:READ:RHO [n] ?

:MEASure:RHO [n] ?

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1115](#).

Remote Command Results for Modulation Accuracy Measurement

| n | Results Returned |
|---|--|
| 0 | Returns unprocessed I/Q trace data, as a series of comma-separated trace points, in volts. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values. |

Modulation Accuracy (Composite Rho) Measurement

- not specified
or $n = 1$
- Returns the following 11 scalar results:
1. RMS EVM (Average) is a floating point number (in percent) of EVM over the entire measurement area
 2. Peak EVM (Peak Hold) is a floating point number (in percent) of the peak EVM in the measurement area
 3. Magnitude error (Average) is a floating point number (in percent) of the average magnitude error over the entire measurement area
 4. Phase error (Average) is a floating point number (in degree) of the average phase error over the entire measurement area
 5. I/Q origin offset (Average) is a floating point number (in dB) of the I and Q error (magnitude squared) offset from the origin
 6. Frequency error (Average) is a floating point number (in Hz) of the frequency error in the measured signal
 7. Rho (Average) is a floating point number of Rho
 8. Peak Code Domain Error (Peak Hold) is a floating point number (in dB) of the Peak Code Domain Error relative to the mean reference power
 9. Peak Code Domain Error Channel Number (Peak Hold) is the channel number in which the peak code domain error is detected.
 10. Number of active channels.
 11. Time offset (Average) is a floating point number (in chips) of the pilot phase timing from the acquisition trigger point.
- 2 EVM trace – returns series of floating point numbers (in percent) that represent each sample in the EVM trace. The first number is the symbol 0 decision point. There are X points per symbol ($X = \text{points}/\text{chip}$). Therefore, the decision points are at 0, $1 * X$, $2 * X$, ...
- 3 Magnitude error trace – returns series of floating point numbers (in percent) that represent each sample in the magnitude error trace. The first number is the symbol 0 decision point. There are X points per symbol ($X = \text{points}/\text{chip}$). Therefore, the decision points are at 0, $1 * X$, $2 * X$, ...
- 4 Phase error trace – returns series of floating point numbers (in percent) that represent each sample in the phase error trace. The first number is the symbol 0 decision point. There are X points per symbol ($X = \text{points}/\text{chip}$). Therefore, the decision points are at 0, $1 * X$, $2 * X$, ...

- 5 Corrected measured trace – returns series of floating point numbers that alternately represent I and Q pairs of the corrected measured trace. The magnitude of each I and Q pair are normalized to 1.0. The first number is the I sample of symbol 0 decision point and the second number is the Q sample of symbol 0 decision point. There are X points per symbol ($X = \text{points/chip}$). Therefore, the series of numbers is:
- 1st number = I of the symbol 0 decision point
 2nd number = Q of the symbol 0 decision point
 ...
 $(2 * X) + 1$ number = I of the symbol 1 decision point
 $(2 * X) + 2$ number = Q of the symbol 1 decision point
 ...
 $(2 * X) * N + 1$ th number = I of the symbol N decision point
 $(2 * X) * N + 2$ th number = Q of the symbol N decision point
- 6 Returns 6 scalar values of the pass/fail (0=passed, or 1=failed) results determined by testing the EVM, the peak EVM, Rho, the peak code domain error, the time offset, and the phase error.
- 7 Returns series of floating point numbers of code level, code index, power (in dB), time offset (in ns), phase offset (in rad), and code domain error (in dB). The total number of results are six times of “number of active channels”. The number of active channels can be obtained by the 10th result of READ:RHO1 command.

| Key Path | Meas |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

AMPTD Y Scale

Accesses the AMPTD Y Scale menu that allows you to set the desired vertical scale and associated settings. The menus under this menu are available when in “I/Q Error” view. And only Attenuation is available when in the following views:

“I/Q Measured Polar Graph”

“Power, Timing and Phase”.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Ref Value

Sets the absolute power reference value ranging from –500.00 to 500.00 dBm with 0.01 dB resolution. However, since Auto Scaling defaults to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| Key Path | AMPTD Y Scale |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View - EVM Window

Sets the absolute power reference value in the EVM window.

| | |
|------------------------|---|
| Remote Command | :DISPlay:RHO:VIEW2:WINDow [1] :TRACe:Y[:SCALe] :RLEVEl <real> :DISPlay:RHO:VIEW2:WINDow [1] :TRACe:Y[:SCALe] :RLEVEl? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off. |
| Remote Command Notes | WINDow[1]: Evm window on I/Q Error view |
| Example | DISP:RHO:VIEW2:WIND:TRAC:Y:RLEV 0.0 DISP:RHO:VIEW2:WIND:TRAC:Y:RLEV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.00 |
| State Saved | Saved in instrument state. |
| Min | –500.0 |

Max 500.0
 Instrument S/W Revision A.01.60 or later

I/Q Error View – Mag Error Window

Sets the absolute power reference value in the magnitude error window.

Remote Command :DISP:RHO:VIEW2:WINDow2:TRACe:Y[:SCALE]:RLEVel
 <real>
 :DISP:RHO:VIEW2:WINDow2:TRACe:Y[:SCALE]:RLEVel?

Dependencies/Couplings See Restriction and Notes

Restriction and Notes If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.

Remote Command Notes WINDow2: Mag Error window on I/Q Error view

Example DISP:RHO:VIEW2:WIND2:TRAC:Y:RLEV 0.0
 DISP:RHO:VIEW2:WIND2:TRAC:Y:RLEV?

Key Path **AMPTD Y Scale**

Mode CDMA2000

Preset 0.00

State Saved Saved in instrument state.

Min -500.0

Max 500.0

Instrument S/W Revision A.01.60 or later

I/Q Error View – Phase Error Window

Sets the absolute power reference value in the phase error window.

Remote Command :DISP:RHO:VIEW2:WINDow3:TRACe:Y[:SCALE]:RLEVel
 <real>
 :DISP:RHO:VIEW2:WINDow3:TRACe:Y[:SCALE]:RLEVel?

Dependencies/Couplings See Restriction and Notes

Restriction and Notes If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.

Remote Command Notes WINDow3: Phase Error window on I/Q Error view

Example DISP:RHO:VIEW2:WIND3:TRAC:Y:RLEV 0.0
 DISP:RHO:VIEW2:WIND3:TRAC:Y:RLEV?

Modulation Accuracy (Composite Rho) Measurement AMPTD Y Scale

| | |
|-------------------------|----------------------------|
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.00 |
| State Saved | Saved in instrument state. |
| Min | -36000.0 |
| Max | 36000.0 |
| Instrument S/W Revision | A.01.60 or later |

Attenuation

Accesses a menu of functions that enable you to change the attenuation settings. This key has read-back text that describes the total attenuator value.

See AMPTD Y Scale, “[Attenuation](#)” on page 1037 in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Range

Accesses the Range menu to change baseband I/Q gain settings. This key has a readback text that describes gain range value.

See AMPTD Y Scale, “[Range](#)” on page 1043 in the “Common Measurement Functions” for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD/Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div

Sets the sensitivity for the vertical axis. The range is 0.10 to 50.00 dB with 0.01 dB resolution. However, since Auto Scaling defaults to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View - EVM Window

Sets the sensitivity measurement result in the EVM window.

| | |
|-------------------------|---|
| Remote Command | :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:PDIVision <real> :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:PDIVision? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off. |
| Example | DISP:RHO:VIEW2:WIND:TRAC:Y:PDIV 10.0 DISP:RHO:VIEW2:WIND:TRAC:Y:PDIV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.5 |
| State Saved | Saved in instrument state. |
| Min | 0.100 |
| Max | 50.0 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View – Mag Error Window

Sets the sensitivity measurement result in the magnitude error window.

| | |
|------------------------|---|
| Remote Command | :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALE]:PDIVision <real> :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALE]:PDIVision? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off. |
| Example | DISP:RHO:VIEW2:WIND2:TRAC:Y:PDIV 10.0 DISP:RHO:VIEW2:WIND2:TRAC:Y:PDIV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 1.0 |
| State Saved | Saved in instrument state. |

Modulation Accuracy (Composite Rho) Measurement AMPTD Y Scale

| | |
|-------------------------|------------------|
| Min | 0.100 |
| Max | 50.0 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View – Phase Error Window

Sets the sensitivity measurement result in the phase error window.

| | |
|-------------------------|---|
| Remote Command | <code>:DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVision<real></code> <code>:DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVision?</code> |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off. |
| Example | DISP:RHO:VIEW2:WIND3:TRAC:Y:PDIV 10.0 DISP:RHO:VIEW2:WIND3:TRAC:Y:PDIV? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | 0.5 |
| State Saved | Saved in instrument state. |
| Min | 0.0100 |
| Max | 360.0 |
| Instrument S/W Revision | A.01.60 or later |

Presel Center

See AMPTD Y Scale, “[Presel Center](#)” on page 1048 in the “Common Measurement Functions” section for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Presel Adjust

See AMPTD Y Scale, “[Preselector Adjust](#)” on page 1050 in the “Common Measurement Functions” section for more information.

| | |
|----------|----------------------|
| Key Path | AMPTD Y Scale |
|----------|----------------------|

Instrument S/W Revision A.01.60 or later

Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See AMPTD Y Scale, “[Internal Preamp](#)” on page 1051 in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

Key Path **AMPTD Y Scale**
 Instrument S/W Revision A.01.60 or later

Ref Position

Positions the Y-axis scale reference level at the top, center or bottom of the display. Changing the reference position does not change the reference level value.

Key Path **AMPTD Y Scale**
 Instrument S/W Revision A.01.60 or later

I/Q Error View - EVM Window

Sets the reference position of the vertical axis in the EVM window.

Remote Command :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition
 TOP|CENTer|BOTTom
 :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?

Example DISP:RHO:VIEW2:WIND:TRAC:Y:RPOS TOP
 DISP:RHO:VIEW2:WIND:TRAC:Y:RPOS?

Key Path **AMPTD Y Scale**

Mode CDMA2000

Preset BOTTom

State Saved Saved in instrument state.

Range Top|Ctr|Bot

Instrument S/W Revision A.01.60 or later

I/Q Error View – Mag Error Window

Sets the reference position of the vertical axis in the magnitude error window.

| | |
|-------------------------|--|
| Remote Command | :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:RPOSition? |
| Example | DISP:RHO:VIEW2:WIND2:TRAC:Y:RPOS TOP DISP:RHO:VIEW2:WIND2:TRAC:Y:RPOS? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | CENTer |
| State Saved | Saved in instrument state. |
| Range | Top Ctr Bot |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View – Phase Error Window

Sets the reference position of the vertical axis in the phase error window.

| | |
|-------------------------|--|
| Remote Command | :DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:RPOSition TOP CENTer BOTTom :DISPlay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:RPOSition? |
| Example | DISP:RHO:VIEW2:WIND3:TRAC:Y:RPOS TOP DISP:RHO:VIEW2:WIND3:TRAC:Y:RPOS? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | CENTer |
| State Saved | Saved in instrument state. |
| Range | Top Ctr Bot |
| Instrument S/W Revision | A.01.60 or later |

Auto Scaling

Toggles the Auto Scaling function between On and Off. When Auto Scaling is On, pressing the Restart front-panel key results in automatically determining scale per division and reference values based on the measurement results.

When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to

Off.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View - EVM Window

When Auto Scaling is On, pressing the Restart front-panel key results in automatically displaying the scale per division and reference value results for the vertical axis in the EVM window.

| | |
|-------------------------|---|
| Remote Command | :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:COUPle? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | When this parameter is set to On, pressing the front-panel Restart key, or the Restart softkey in the Meas Control menu, activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off. |
| Remote Command Notes | WINDow[1]: EVM window on I/Q Error view |
| Example | DISP:RHO:VIEW2:WIND:TRAC:Y:COUP ON DISP:RHO:VIEW2:WIND:TRAC:Y:COUP? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View – Mag Error Window

When Auto Scaling is On, pressing the Restart front-panel key results in automatically displaying the scale per division and reference value results for the vertical axis in the magnitude error window.

| | |
|------------------------|---|
| Remote Command | :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON :DISPlay:RHO:VIEW2:WINDow2:TRACe:Y[:SCALe]:COUPle? |
| Dependencies/Couplings | See Restriction and Notes |

Modulation Accuracy (Composite Rho) Measurement AMPTD Y Scale

| | |
|-------------------------|---|
| Restriction and Notes | When this parameter is set to On, pressing the front-panel Restart key, or the Restart softkey in the Meas Control menu, based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off. |
| Remote Command Notes | WINDow2: Mag Error window on I/Q Error view |
| Example | DISP:RHO:VIEW2:WIND2:TRAC:Y:COUP ON DISP:RHO:VIEW2:WIND2:TRAC:Y:COUP? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View – Phase Error Window

When Auto Scaling is On, pressing the Restart front-panel key will result in automatically displaying the scale per division and reference value results for the vertical axis in the phase error window.

| | |
|-------------------------|---|
| Remote Command | :DISP:lay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:COUPle 0 1 OFF ON :DISP:lay:RHO:VIEW2:WINDow3:TRACe:Y[:SCALe]:COUPle? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | When this parameter is set to On, pressing the front-panel Restart key, or the Restart softkey in the Meas Control menu, activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off. |
| Remote Command Notes | WINDow3: Phase Error window on I/Q Error view |
| Example | DISP:RHO:VIEW2:WIND3:TRAC:Y:COUP ON DISP:RHO:VIEW2:WIND3:TRAC:Y:COUP? |
| Key Path | AMPTD Y Scale |
| Mode | CDMA2000 |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Auto Couple

See “**AUTO COUPLE**” on page 1055 in the section "Common Measurement Functions" for more information.

BW

There is no BW functionality supported in the Mod Accuracy measurement. The front-panel key will display a blank menu when pressed.

| | |
|-------------------------|------------------|
| Key Path | BW |
| Instrument S/W Revision | A.01.60 or later |

Cont

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1063 in the section "Common Measurement Functions" for more information.

FREQ Channel

See “[FREQ/Channel](#)” on page 1059 in the section "Common Measurement Functions" for more information.

Input/Output

See “[Input/Output](#)” on page 1065 in the section "Common Measurement Functions" for more information.

Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

| Key Path | Front Panel Key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| Key Path | Marker |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Marker Type

Sets the marker control mode. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, reference value of the selected marker appears on the Active Function area.

Active Function Display:

Marker symbol value at I/Q Symbol Polar Vector graph

Marker X-axis value at other graphs

Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.

The marker X axis value entered in the active function area will display the marker value to its full entered precision.

| | |
|-----------------------|--|
| Remote Command | :CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MODE POSition DELTa OFF |
| | :CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MODE? |

| | |
|-------------------------|--|
| Restriction and Notes | <p>If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X Axis Value appears on the Active Function area.</p> <p>Default Active Function:</p> <p>The active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.</p> <p>Active Function Display:</p> <p>- the marker X axis value for any other graph</p> <p>The value entered in the active function area will display the marker value to its full entered precision.</p> |
| Example | <p>CALC:RHO:MARK:MODE POS</p> <p>CALC:RHO:MARK:MODE?</p> |
| Key Path | Marker |
| Mode | CDMA2000 |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Normal Delta Off |
| Instrument S/W Revision | A.01.60 or later |

Marker Chip Value (Remote Command only)

Sets the marker Chip value in the current marker for the I/Q Polar trace. It has no effect if the control mode is **Off**, but if the control mode is Normal, this is the SCPI equivalent of entering a Chip value.

This command is valid only when Marker Trace 'POLar' (I/Q Polar) is active. For any other Marker Trace, the command is ignored.

| | |
|-----------------------|--|
| Mode | CDMA2000 |
| Remote Command | <p>:CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :CHIP <real></p> <p>:CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :CHIP?</p> |
| Preset | Start point of the trace in the display window |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37 |

Modulation Accuracy (Composite Rho) Measurement Marker

| | |
|-------------------------|---|
| Restriction and Notes | <p>If no suffix is sent, 'chips' will be used. If a suffix is sent that does not match 'chips', an error "Invalid suffix" will be generated.</p> <p>The query returns the marker's 'chips' value in the trace if the control mode is Normal. The query is returned in 'chips'. If the marker is Off the response is not a number (NAN).</p> |
| Remote Command Notes | <p>This parameter has different meanings when the marker trace is set to I/Q Polar and others cases. In the case of the I/Q Polar Graph, the X Axis Value is also the measured value, so this parameter is meaningful only when the control mode is set to Normal.</p> |
| Example | <p>CALC:RHO:MARK:CHIP 0</p> <p>CALC:RHO:MARK:CHIP?</p> |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

| | |
|-------------------------|--|
| Remote Command | <pre>:CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X <real> :CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X?</pre> |
| Restriction and Notes | <p>If no suffix is sent, the fundamental units for the current marker X Axis Scale will be used. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" will be generated.</p> <p>The query returns the marker's absolute X Axis value if the control mode is Normal, or the offset from the marker's reference marker, if the control mode is Delta. The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time, seconds for Period and Time. If the marker is Off the response is not a number (NAN).</p> |
| Example | <p>CALC:RHO:MARK3:X 0.0</p> <p>CALC:RHO:MARK3:X?</p> |
| Key Path | NA |
| Mode | CDMA2000 |
| Preset | After a preset, all Markers are turned OFF, so a Marker X Axis Value query will return a not a number (NAN). |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37. |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** - except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

| | |
|-------------------------|--|
| Mode | CDMA2000 |
| Remote Command | :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POS ition <real> :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:X:POS ition? |
| Preset | After a preset, all Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN). |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Restriction and Notes | The query returns the marker's absolute X Axis value in trace points if the control mode is Normal , or the offset from the marker's reference marker in trace points, if the control mode is Delta . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points (see "Fractional Trace Points", above). If the marker is Off the response is not a number (NAN). |
| Remote Command Notes | This command is not available when Marker Trace of the selected marker (:CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?) is set to POLar. In this case, this command is ignored. |
| Example | CALC:RHO:MARK10:X:POS 0.0 CALC:RHO:MARK10:X:POS? |
| Instrument S/W Revision | A.01.60 or later |

Marker Y Axis Value (Remote Command only)

Queries the marker Y Axis value in the current unit for the marker Y Axis.

| | |
|-----------------------|--|
| Mode | CDMA2000 |
| Remote Command | :CALCulate:RHO:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y? |
| Preset | Result dependent on Markers setup and signal source |
| State Saved | No |

Modulation Accuracy (Composite Rho) Measurement Marker

| | |
|-------------------------|---|
| Restriction and Notes | If no suffix is sent, the current Y Axis unit will be used. If a suffix is sent that is not expressed in units of absolute amplitude, an “Invalid suffix” error will be generated. The query returns the marker Y-axis result if the control mode is Normal or Delta . If the marker is Off the response is not a number (NAN). |
| Example | CALC:RHO:MARK11:Y? |
| Instrument S/W Revision | A.01.60 or later |

Properties

Accesses a menu that enables you to select a reference marker and marker trace.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Relative To

Selects the marker that the selected marker will be relative to (its reference marker).

| | |
|-----------------------|--|
| Remote Command | :CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :REFerence <integer> :CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :REFerence? |
| Restriction and Notes | A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error –221: “Settings conflict; marker cannot be relative to itself.” |
| Remote Command Notes | When queried a single value will be returned (the specified marker number’s relative marker). A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error –221: “Settings conflict; marker cannot be relative to itself.” |
| Example | CALC:RHO:MARK:REF 3 CALC:RHO:MARK:REF? |
| Key Path | Marker, Properties |
| Mode | CDMA2000 |

| | |
|-------------------------|----------------------------|
| Preset | 2 3 4 5 6 7 8 9 10 11 12 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 12 |
| Instrument S/W Revision | A.01.60 or later |

Marker Trace

Assigns the specified marker to the designated trace.

| | |
|-------------------------|---|
| Remote Command | :CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :TRACe POLar EVM MERRor PERRor CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :TRACe? |
| Example | CALC:RHO:MARK2:TRAC EVM CALC:RHO:MARK2:TRACE? |
| Key Path | Marker |
| Mode | CDMA2000 |
| Preset | EVM |
| State Saved | Saved in instrument state. |
| Range | POLar EVM MERRor PERRor |
| Instrument S/W Revision | A.01.60 or later |

Couple Markers

Toggles the state of the markers to be coupled On or Off. When this function is true (On), moving any marker causes an “equal X Axis movement” of every other marker which is active. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

See Couple Markers in the "Marker" section for more information.

This may result in markers going offscreen.

| | |
|-----------------------|---|
| Remote Command | :CALCulate:RHO:MARKer:COUPle [:STATe] ON OFF 1 0 :CALCulate:RHO:MARKer:COUPle [:STATe] ? |
| Restriction and Notes | When the marker is assigned to the IQ Measured Polar graph, a Chip value is coupled instead of an X Axis value. |
| Example | CALC:RHO:MARK:COUP ON CALC:RHO:MARK:COUP ? |

Modulation Accuracy (Composite Rho) Measurement Marker

| | |
|-------------------------|----------------------------|
| Key Path | Marker |
| Mode | CDMA2000 |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

All Markers Off

Turns off all markers.

| | |
|-------------------------|----------------------------|
| Remote Command | :CALCulate:RHO:MARKer:AOff |
| Example | CALC:RHO:MARK:AOff |
| Key Path | Marker |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Marker Function

There are no 'Marker Functions' supported in Mod Accuracy. The front-panel key will display a blank menu when pressed.

Marker To

There is no 'Marker To' functionality supported in Mod Accuracy. The front-panel key will display a blank menu when pressed.

Meas

See “[Meas](#)” on page 1115 in the section "Common Measurement Functions" for more information.

Meas Setup

Displays the measurement setup menu for the currently selected measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front panel key |
| Instrument S/W Revision | A.01.60 or later |

Avg Number

Sets the number of data acquisitions that will be averaged. After the specified number of average counts is reached, the averaging mode (termination control) setting determines the averaging action.

| | |
|-------------------------|---|
| Remote Command | [:SENSe]:RHO:AVERAge:COUNT <integer> [:SENSe]:RHO:AVERAge:COUNT? [:SENSe]:RHO:AVERAge[:STATe] OFF ON 0 1 [:SENSe]:RHO:AVERAge[:STATe]? |
| Example | RHO:AVER:COUN 100 RHO:AVER:COUN? RHO:AVER OFF RHO:AVER? |
| Remote Command Notes | You must be in the CDMA2000 mode to use this command. Use INSTRument:SElect to set the mode. |
| Key Path | Meas Setup |
| Mode | CDMA2000 |
| Preset | 10 ON |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 10000 |
| Instrument S/W Revision | A.01.60 or later |

Avg Mode

Selects the type of termination control used for the averaging function. This determines the averaging action after the specified number of data acquisitions (average count) is reached. You can select between the **Exp** (exponential) and **Repeat** averaging modes. This selection only affects the averaging result after the number of N averages is reached. You can use the **Avg Number** key to set N.

KEYExponential averaging
 SCPIEXPonential

When Measure is set at Cont, data acquisitions will continue indefinitely. After N averages, exponential averaging is used with a weighting factor of N (the displayed average count stops at N). Exponential averaging weights new data more than old data, which allows tracking of slow-changing signals.

KEYRepeat averaging
 SCPIREPeat

When Measure is set at Cont, data acquisitions will continue indefinitely. After N averages is reached, all previous result data is cleared and the average count is set back to 1. This is equivalent to being in Measure Single and pressing the Restart key when the Single measurement finishes.

Remote Command [:SENSe]:RHO:AVErAge:TCONtrol EXPonential|REPeat
 [:SENSe]:RHO:AVErAge:TCONtrol?

Example RHO:AVER:TCON EXP
 RHO:AVER:TCON?

Key Path **Meas Setup**

Mode CDMA2000

Preset REPeat

State Saved Saved in instrument state.

Range Exp|Repeat

Instrument S/W Revision A.01.60 or later

Limits

Accesses a menu that allows you to set the following limits:

RMS EVM (Composite)

Peak EVM (Composite)

Rho (Composite)

Peak Code Domain Error

Timing Error

Phase Error

Key Path **Meas Setup**

Instrument S/W Revision A.01.60 or later

RMS EVM (Composite)

Sets the limit for the composite RMS EVM measurement pass/fail test.

| | |
|-------------------------|--|
| Remote Command | :CALCulate:RHO:LIMit:RMS <real> :CALCulate:RHO:LIMit:RMS? |
| Example | CALC:RHO:LIM:RMS 10.0 CALC:RHO:LIM:RMS? |
| Key Path | Meas Setup, Limits |
| Mode | CDMA2000 |
| Preset | 100.0 |
| State Saved | Saved in instrument state. |
| Min | 0.00 |
| Max | 100.00 |
| Instrument S/W Revision | A.01.60 or later |

Peak EVM (Composite)

Sets the limit for the composite peak EVM measurement pass/fail test.

| | |
|-------------------------|--|
| Remote Command | :CALCulate:RHO:LIMit:PEAK <real> :CALCulate:RHO:LIMit:PEAK? |
| Example | CALC:RHO:LIM:PEAK 50.0 CALC:RHO:LIM:PEAK? |
| Key Path | Meas Setup, Limits |
| Mode | CDMA2000 |
| Preset | 200.0 |
| State Saved | Saved in instrument state. |
| Min | 0.0 |
| Max | 200.0 |
| Instrument S/W Revision | A.01.60 or later |

Rho (Composite)

Sets the limit for the composite Rho measurement pass/fail test.

| | |
|-----------------------|--|
| Remote Command | :CALCulate:RHO:LIMit:RHO <real> :CALCulate:RHO:LIMit:RHO? |
|-----------------------|--|

| | |
|-------------------------|--|
| Restriction and Notes | The default value of BTS is 0.912 and MS is 0.944. |
| Example | CALC:RHO:LIM:RHO 0.9 CALC:RHO:LIM:RHO? |
| Key Path | Meas Setup, Limits |
| Mode | CDMA2000 |
| Preset | BS: 0.912 MS: 0.944 |
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | 1 |
| Instrument S/W Revision | A.01.60 or later |

Peak Code Domain Error

Sets the limit for the composite Peak Code Domain Error measurement pass/fail test.

| | |
|-------------------------|--|
| Remote Command | :CALCulate:RHO:LIMit:CDERror <real> :CALCulate:RHO:LIMit:CDERror? |
| Example | CALC:RHO:LIM:CDER -50.0 CALC:RHO:LIM:CDER? |
| Key Path | Meas Setup, Limits |
| Mode | CDMA2000 |
| Preset | 0.0 |
| State Saved | Saved in instrument state. |
| Min | -100 |
| Max | 0 |
| Instrument S/W Revision | A.01.60 or later |

Timing Error

Sets limit of Timing Offset from Pilot.

| | |
|-----------------------|---|
| Remote Command | :CALCulate:RHO:LIMit:TIMing <float> :CALCulate:RHO:LIMit:TIMing? |
|-----------------------|---|

Modulation Accuracy (Composite Rho) Measurement Meas Setup

| | |
|-------------------------|---|
| Restriction and Notes | Set limits of Timing Offset from Pilot which is used to judge the result of Pilot Time Offset passes or fails. If a measured Timing Offset from Pilot is not larger than limit value, the result is PASS. Otherwise, the result is FAIL. The default value of BTS is 50 ns, and MS is 10 ns. |
| Example | CALC:RHO:LIM:TIM 0.000000005 CALC:RHO:LIM:TIM? |
| Key Path | Meas Setup, Limits |
| Mode | CDMA2000 |
| Preset | BS: 50 ns MS: 10 ns |
| State Saved | Saved in instrument state. |
| Min | 0.0 s |
| Max | 500 ns |
| Instrument S/W Revision | A.01.60 or later |

Phase Error

Sets the limit of Phase Offset from Pilot.

| | |
|-------------------------|--|
| Remote Command | :CALCulate:RHO:LIMit:PHASe <float> :CALCulate:RHO:LIMit:PHASe? |
| Restriction and Notes | Set limits of Phase Offset from Pilot which is used to judge the result of Pilot Phase Offset passes or fails. If a measured Timing Offset from Pilot is not larger than limit value, the result is PASS. Otherwise, the result is FAIL. |
| Example | CALC:RHO:LIM:PHAS 0.05 CALC:RHO:LIM:PHAS? |
| Key Path | Meas Setup, Limits |
| Mode | CDMA2000 |
| Preset | 0.05 |
| State Saved | Saved in instrument state. |
| Min | 0.0 |
| Max | 3.0 |
| Instrument S/W Revision | A.01.60 or later |

PN Offset

| | |
|-------------------------|---|
| Key Path | Meas Setup, More |
| Remote Command | :CALCulate:RHO:PNOffset <integer> :CALCulate:RHO:PNOffset? |
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | 511 |
| Restriction and Notes | Sets value for the pseudo-random noise offset. Different pseudo-random noise offsets are used for different base stations. By setting the pseudo-random noise offset to the value that your specific base station is set to, you get the correct time offset value displayed and returned back to you when you query READ:RHO?. The instrument, by default, assumes an offset of 0. So, if you do not use this command, you will have to manually calculate the time offset when the value is other than 0. |
| Remote Command Notes | You must be in CDMA2000 mode to use this command. |
| Example | CALC:RHO:PNOF 5 CALC:RHO:PNOF? |
| Instrument S/W Revision | A.01.60 or later |

Sync Type

Accesses a menu that enables you to select the channel to synchronize with.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

Sync Type BTS

Accesses the menu that enables you to select the channel to synchronize with, and to set features, such as Symbol Rate, that may affect synchronization. You can select from the following types of channels and features listed in the menu:

F-PICH: Forward Pilot Channel.

Tx-Div F-PICH: Tx dirveristy forward Pilot Channel.

.

| | |
|-----------------------|---|
| Remote Command | [:SENSe] :RHO:SYNC [:BTS] PICH DPICH [:SENSe] :RHO:SYNC [:BTS] ? |
|-----------------------|---|

Modulation Accuracy (Composite Rho) Measurement Meas Setup

| | |
|-------------------------|---|
| Remote Command Notes | This command is effective when [:SENSe]:RADio:DEvice is set to BTS. |
| Example | RHO:SYNC PICH RHO:SYNC? |
| Key Path | Meas Setup, More 1 of 2 |
| Mode | CDMA2000 |
| Preset | PICH |
| State Saved | Saved in instrument state. |
| Range | F-PICH[TxDiv F-PICH |
| Instrument S/W Revision | A.01.60 or later |

Long Code Mask MS

Accesses a menu that enables you to select long code mask for MS. You can select from the following types listed in the menu.

| | |
|-------------------------|---|
| Remote Command | <code>[:SENSe]:RHO:SYNC:LCMask <integer></code> <code>[:SENSe]:RHO:SYNC:LCMask?</code> |
| Remote Command Notes | This command is effective when [:SENSe]:RADio:DEvice is set to MS. |
| Example | RHO:SYNC:LCM 0 RHO:SYNC:LCM? |
| Key Path | Meas Setup, More 1 of 2 |
| Mode | CDMA2000 |
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Range | 0 to 4,398,046,511,103 (0h to 3F,FFF,FFF,FFFh) |
| Instrument S/W Revision | A.01.60 or later |

Radio Config

This key is only available when the radio device is MS.

Radio Configuration means a set of Forward Traffic Channel and Reverse Traffic Channel transmission formats that are characterized by physical layer parameters such as data rates, modulation characteristics, and spreading rate, its abbreviation is RC. And the n of RCn means the index of Radio Configuration. Different RCn is coupled to different data rate, spreading rate and modulation format. Currently, there are 9 Radio Configurations defined in the IS-2000 system. CDMA2000 only support RC1-RC5 under SR1 mode operation (1.28 MHz chip rate). Both RC1 and RC2 are used for backwards compatible with IS95. RC3, RC4 and RC5 are new Radio Configurations that use the IS-2000 coding scheme in the SR1 mode of operation (1.2288 MHz chip rate). When the Radio Config is set as CDMA2000, it means the current Radio Configuration is RC3, RC4, RC5, or their combination. When the Radio Config is set as

IS95, it means the current Radio Configuration is RC1, RC2 or their combination.

For the forward link, the CDMA2000 can be coexisting with IS95 and the tester supports them automatically. But for reverse link, there is great difference between CDMA2000 and IS95 and also they are separate in the test, so the tester has the radio configuration selection.

For IS95, the reverse link cannot support a pilot channel for synchronous demodulation. Due to this limitation, the reverse link has less capacity than the forward link. To aid reverse link performance, the 9600 bps voice data uses a one-third rate convolution coded for more powerful error correction. Then six data bits at a time are taken to point at one of the 64 available Walsh codes, that is 64-ary orthogonal Modulator. And then XOR'ed with the long code to reach the full 1.2288 Mbps data rate.. This unique long code is the channelization code for the reverse link. The modulation is QPSK in the base station, and Offset QPSK in the mobile station.

And For CDMA2000, in the reverse link, each mobile now has its own Pilot channel, the reverse link uses I and Q long codes scrambled with I and Q short codes to produce a new modulation format called HPSK (Hybrid Phase Shift Keying). HPSK reduces the dynamic range of the modulation to allow a less expensive output amplifier for mobiles.

| | |
|-------------------------|--|
| Remote Command | <code>[:SENSe] :RHO:RCONfig CDMA2000 IS95</code> <code>[:SENSe] :RHO:RCONfig?</code> |
| Dependencies/Couplings | If Radio Config is toggled to IS95, it will be dashed out for Pk CDE, Pk CDE Position, Time Offset and Active Channels Number will be dashed out, and the view of Power, Timing and Phase will be grayed out, and the limits of Peak Code Domain Error, Timing Error and Phase Error will be grayed out also. If Radio Config is toggled to IS95, the trace of view1 and view2 is 4 samples/ chip, which is required by HPSK. |
| Restriction and Notes | This key is available only if the Radio Device is MS. And if Radio Config is set to IS95, it only supports the case that there is only 1 traffic channel or access channel. |
| Remote Command Notes | This command is effective when <code>[:SENSe] :RADio:DEVIce</code> is set to MS. |
| Example | <code>:RHO:RCON CDMA2000</code> <code>:RHO:RCON?</code> |
| Key Path | Meas Setup, More 1 of 2 |
| Mode | CDMA2000 |
| Preset | CDMA2000 |
| State Saved | Saved in instrument state. |
| Range | CDMA2000 IS95 |
| Instrument S/W Revision | A.01.60 or later |

Spectrum

Sets a spectrum to either normal or inverted for demodulation related measurements. If set to INVert, the

Modulation Accuracy (Composite Rho) Measurement Meas Setup

upper and lower spectrums are swapped.

The Invert function conjugates the spectrum, which is equivalent to taking the negative of the quadrature component in demodulation. The correct setting (Normal or Invert) depends on whether the signal at the input of the instrument has a high or low side mix.

| | |
|-------------------------|---|
| Remote Command | <code>[:SENSE] :RHO:SPECTrum INVert NORMAl</code> <code>[:SENSE] :RHO:SPECTrum?</code> |
| Example | <code>RHO:SPEC INV</code> <code>RHO:SPEC?</code> |
| Key Path | Meas Setup, More 1 of 2 |
| Mode | CDMA2000 |
| Preset | NORMAl |
| State Saved | Saved in instrument state. |
| Range | Normal Invert |
| Instrument S/W Revision | A.01.60 or later |

Advanced

Accesses the menu that allows you to set the I/Q origin offset function, active channel identification function, alpha value of the Root Raised Cosine (RRC) filter, and chip rate.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

EVM Result I/Q Offset

Toggles the I/Q origin offset function between Include (standard) and Exclude.

Include: The measurement results for EVM, Rho, and Modulation Accuracy (Rho) error take into account the I/Q origin offset.

Exclude: The measurement results for EVM, Rho, and Modulation Accuracy (Rho) error do not take into account the I/Q origin offset, and the message “EVM excludes I/Q Offset” is displayed in the lower right-hand graph display area.

Turns the automatic mode On or Off, for the I/Q origin offset function.

Exclude: OFF – The measurement results for EVM and Rho do not take into account the I/Q origin offset.

Include: ON – The measurement results for EVM and Rho take into account the I/Q origin offset.

| | |
|-----------------------|--|
| Remote Command | <code>:CALCulate:RHO:IQOffset:INCLude OFF ON 0 1</code> <code>:CALCulate:RHO:IQOffset:INCLude?</code> |
|-----------------------|--|

| | |
|-------------------------|--|
| Example | CALC:RHO:IQOF:INCL ON CALC:RHO:IQOF:INCL? |
| Key Path | Meas Setup, Advanced |
| Mode | CDMA2000 |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | Include Exclude |
| Instrument S/W Revision | A.01.60 or later |

Active Threshold

Toggles the active channel identification function between Auto and Man. If set to Auto, the active channels are determined automatically by the internal algorithm. If set to Man, the active channel identification is determined by a user definable threshold ranging from 0.00 to –100.00 dB.

| | |
|-----------------------|---|
| Remote Command | :CALCulate:RHO:ASET:THReshold <rel_ampl> :CALCulate:RHO:ASET:THReshold? CALCulate:RHO:ASET:THReshold:AUTO OFF ON 0 1 CALCulate:RHO:ASET:THReshold:AUTO? |
| Restriction and Notes | This command is effective when [:SENSe]:RHO:SBOundary[:BTS] is set to AUTO. (For MS, this command is always effective.) |
| Example | CALC:RHO:ASET:THR –20.0 CALC:RHO:ASET:THR? CALC:RHO:ASET:THR:AUTO ON CALC:RHO:ASET:THR:AUTO? |
| Remote Command Notes | Turn the automatic mode On or Off, for the active channel identification function. OFF – The active channel identification for each code channel is determined by a value set by CALCulate:RHO:ASET:THReshold. ON – The active channels are determined automatically by the internal algorithm. |
| Key Path | Meas Setup, Advanced |
| Mode | CDMA2000 |
| Preset | 0.0 ON |
| State Saved | Saved in instrument state. |
| Min | –100.0 |

Modulation Accuracy (Composite Rho) Measurement Meas Setup

| | |
|-------------------------|------------------|
| Max | 0.0 |
| Instrument S/W Revision | A.01.60 or later |

Filter Alpha

Specifies the alpha value of the complimentary filter.

| | |
|-------------------------|--|
| Remote Command | <code>[:SENSe] :RHO:ALPHa <real></code> <code>[:SENSe] :RHO:ALPHa?</code> |
| Example | <code>RHO:ALPH 0.15</code> <code>RHO:ALPH?</code> |
| Key Path | Meas Setup, Advanced |
| Mode | CDMA2000 |
| Preset | 0.15 |
| State Saved | Saved in instrument state. |
| Min | 0.05 |
| Max | 0.20 |
| Instrument S/W Revision | A.01.60 or later |

Chip Rate

Sets the chip rate.

| | |
|-------------------------|--|
| Remote Command | <code>[:SENSe] :RHO:CRATe <freq></code> <code>[:SENSe] :RHO:CRATe?</code> |
| Example | <code>RHO:CRAT 1228800</code> <code>RHO:CRAT?</code> |
| Key Path | Meas Setup, Advanced |
| Mode | CDMA2000 |
| Preset | 1.2288 MHz |
| State Saved | Saved in instrument state. |
| Min | 1.105925 MHz |
| Max | 1.351680 MHz |
| Instrument S/W Revision | A.01.60 or later |

Multi Channel Estimator

Sets the Multi Channel Estimator On or Off.

| | |
|-------------------------|--|
| Remote Command | <code>[:SENSe] :RHO:MCEStimator OFF ON 0 1</code> <code>[:SENSe] :RHO:MCEStimator?</code> |
| Dependencies/Couplings | Only if Multi Channel Estimator is On, the view of Power, Timing and Phase can work. If Multi Channel Estimator is Off , there will be a message “Press Meas Setup, Advanced and turn Multi Channel Estimation On to see the data” appears on the view of Power, Timing and Phase. |
| Example | RHO: MCES: ON RHO: MCES? |
| Key Path | Meas Setup, Advanced |
| Mode | CDMA2000 |
| Preset | Off |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

IF Gain

Enables you to control an internally switched IF amplifier with approximately 10 dB of gain. This amplifier takes full advantage of the RF dynamic range of the analyzer. When it can be turned on without an overload, the dynamic range is always better when the amplifier is set to On, than when it is set to Off. The **IF Gain** key can be used to set the IF Gain function to Auto, or to On (the extra 10 dB) or Off. These settings affect sensitivity and IF overloads.

This is only available when the selected input is RF.

| | |
|-------------------------|-----------------------------|
| Key Path | Meas Setup, Advanced |
| Instrument S/W Revision | A.01.60 or later |

IF Gain Auto Activates the Auto Rules for IF Gain When Auto is active, the IF Gain is set to High Gain under any of the following conditions:

- the input attenuator is set to 0 dB
- the preamp is turned On
- the Max Mixer Level is –20 dBm or lower

For other settings, Auto sets IF Gain to Off. And there are only two choice: Low Gain and High Gain. Low Gain is best for large signals and High Gain is best for small signals.

| | |
|----------|--------------------------------------|
| Key Path | Meas Setup, Advanced, IF Gain |
|----------|--------------------------------------|

Modulation Accuracy (Composite Rho) Measurement Meas Setup

| | |
|-------------------------|--|
| Remote Command | <code>[:SENSE] :RHO:IF:GAIN:AUTO [:STATe] OFF ON 0 1</code> <code>[:SENSE] :RHO:IF:GAIN:AUTO [:STATe] ?</code> |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Off On |
| Dependencies/Couplings | When either the auto attenuation works (for example, with the electrical attenuator) or optimize mechanical attenuator range is requested, the IF Gain setting is changed according to the following rule. 'Auto' sets IF Gain to 'High Gain' under any of the following conditions: the input attenuator is set to 0 dB, the preamp is turned on, or the Max Mixer Level is -20 dBm or lower. For other settings, 'Auto' sets IF Gain to 'Low Gain'. |
| Restriction and Notes | IF Gain menu key is not available when IQ Input is selected. |
| Example | <code>RHO:IF:GAIN:AUTO OFF</code> <code>RHO:IF:GAIN:AUTO?</code> |
| Instrument S/W Revision | A.01.60 or later |

IF Gain State Selects the range of IF gain. On sets the high gain option, which allows for better noise level measurements and Off sets low gain when measuring large signals.

| | |
|------------------------|---|
| Key Path | Meas Setup, Advanced, IF Gain |
| Remote Command | <code>[:SENSE] :RHO:IF:GAIN [:STATe] ON OFF 1 0</code> <code>[:SENSE] :RHO:IF:GAIN [:STATe] ?</code> |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Low Gain (Best for Large Signals) High Gain (Best Noise Level) |
| Dependencies/Couplings | When either the auto attenuation works (for example, with the electrical attenuator) or optimize mechanical attenuator range is requested, the IF Gain setting is changed according to the following rule. 'Auto' sets IF Gain to 'High Gain' under any of the following conditions: the input attenuator is set to 0 dB, the preamp is turned on, or the Max Mixer Level is 20 dBm or lower. For other settings, 'Auto' sets IF Gain to 'Low Gain'. |
| Restriction and Notes | IF Gain menu key is not available when IQ Input is selected. |
| Remote Command Notes | Where ON = high gain OFF = low gain |
| Example | <code>RHO:IF:GAIN OFF</code> <code>RHO:IF:GAIN?</code> |

Instrument S/W Revision A.01.60 or later

Meas Preset

Restores all measurement parameters to their default values.

| | |
|-------------------------|--------------------------------|
| Remote Command | :CONFigure:RHO |
| Example | CONF:RHO |
| Key Path | Meas Setup, More 1 of 2 |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Mode

See “[Mode](#)” on page 1133 in the section "Common Measurement Functions" for more information.

Mode Setup

See “[Mode Setup](#)” on page 1145 in the section "Common Measurement Functions" for more information.

Peak Search

Accesses a menu that enables you to control the peak search function and places a marker on the trace point with highest peak.

| | |
|-------------------------|---|
| Remote Command | :CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MAXimum |
| Example | CALC:RHO:MARK2:MAX |
| Key Path | Front panel key |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Next Peak

Moves the selected marker to the peak that has the next highest amplitude that is less than the marker's current value.

| | |
|-------------------------|--|
| Remote Command | :CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MAXimum:NEXT |
| Example | CALC:RHO:MARK2:MAX:NEXT |
| Key Path | Peak Search |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Next Pk Right

Moves the selected marker to the nearest peak to the right of the current marker that meets all enabled peak criteria.

| | |
|-------------------------|---|
| Remote Command | :CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MAXimum:RIGHT |
| Example | :CALC:RHO:MARK2:MAX:RIGH |
| Key Path | Peak Search |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Next Pk Left

Moves the selected marker to the nearest peak to the left of the current marker that meets all enabled

peak criteria.

| | |
|-------------------------|--|
| Remote Command | :CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MAXimum:LEFT |
| Example | CALC:RHO:MARK2:MAX:LEFT |
| Key Path | Peak Search |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Marker Delta

Sets the control mode for the selected marker to **Delta** mode.

| | |
|-------------------------|--------------------|
| Key Path | Peak Search |
| Instrument S/W Revision | A.01.60 or later |

Pk-Pk Search

Finds and displays the amplitude and frequency (or time, if in zero span) differences between the highest and lowest y-axis value.

| | |
|-------------------------|--|
| Remote Command | :CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :PTPeak |
| Dependencies/Couplings | This key is not available (key is grayed out) when Coupled Markers is on. |
| Restriction and Notes | Turns on the Marker Δ active function. |
| Example | CALC:RHO:MARK:PTP |
| Key Path | Peak Search |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Min Search

Moves the selected marker to the minimum y-axis value on the current trace.

| | |
|-----------------------|---|
| Remote Command | :CALCulate:RHO:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :MINimum |
| Example | CALC:RHO:MARK:MIN |
| Key Path | Peak Search |
| Mode | CDMA2000 |

Modulation Accuracy (Composite Rho) Measurement
Peak Search

Instrument S/W Revision

A.01.60 or later

Recall

See [“Recall” on page 1149](#) in the section "Common Measurement Functions" for more information.

Restart

See “[Restart](#)” on page 1167 in the section "Common Measurement Functions" for more information.

Save

See “[Save](#)” on page 1169 in the section "Common Measurement Functions" for more information.

Single

See “[Single \(Single Measurement/Sweep\)](#)” on page 1191 in the section "Common Measurement Functions" for more information.

Source

See “[Source](#)” on page 1193 in the section "Common Measurement Functions" for more information.

SPAN X Scale

Accesses a menu of functions that enable you set the horizontal scale parameters.

This menu is available when in the “I/Q Error” view. It is not available when in the following views:

“I/Q Measured Polar Graph”

“Power, Timing and Phase”

| | |
|-------------------------|------------------------|
| Key Path | Front panel key |
| Instrument S/W Revision | A.01.60 or later |

Ref Value

Sets the chip reference value on the horizontal axis. The default setting is 0.000 chips. When Auto Scaling is set to On, the displayed graphs use a Scale/Div value determined by the analyzer, based on the measurement result.

| | |
|-------------------------|---------------------|
| Key Path | Span X Scale |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View - EVM Window

Sets the chip reference value on the horizontal axis in the EVM window.

| | |
|------------------------|---|
| Remote Command | :DISPlay:RHO:VIEW2:WINDow [1] :TRACe:X[:SCALe] :RLEVel <real> :DISPlay:RHO:VIEW2:WINDow [1] :TRACe:X[:SCALe] :RLEVel? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off. |
| Remote Command Notes | WINDow 1: Evm Error window on I/Q Error view |
| Example | DISP:RHO:VIEW2:WIND:TRAC:X:RLEV 0.0 DISP:RHO:VIEW2:WIND:TRAC:X:RLEV? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | 0.0 |
| State Saved | Saved in instrument state. |
| Min | 0.0 |

Max 5000000.0
 Instrument S/W Revision A.01.60 or later

I/Q Error View - Mag Error Window

Sets the chip reference value on the horizontal axis in the magnitude error window.

| | |
|-------------------------|---|
| Remote Command | :DISP:lay:RHO:VIEW2:WINDow2:TRACe:X[:SCALE]:RLEVel <real> :DISP:lay:RHO:VIEW2:WINDow2:TRACe:X[:SCALE]:RLEVel? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off. |
| Remote Command Notes | WINDow2: Mag Error window on I/Q Error view |
| Example | DISP:RHO:VIEW2:WIND2:TRAC:X:RLEV 0.0 DISP:RHO:VIEW2:WIND2:TRAC:X:RLEV? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | 0.0 |
| State Saved | Saved in instrument state. |
| Min | 0.0 |
| Max | 5000000.0 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View - Phase Error Window

Sets the chip reference value on the horizontal axis in the phase error window.

| | |
|------------------------|---|
| Remote Command | :DISP:lay:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:RLEVel <real> :DISP:lay:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:RLEVel? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off. |
| Remote Command Notes | WINDow3: Phase window on I/Q Error view |
| Example | DISP:RHO:VIEW2:WIND3:TRAC:X:RLEV 0.0 DISP:RHO:VIEW2:WIND3:TRAC:X:RLEV? |

Modulation Accuracy (Composite Rho) Measurement
SPAN X Scale

| | |
|-------------------------|----------------------------|
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | 0.0 |
| State Saved | Saved in instrument state. |
| Min | 0.0 |
| Max | 5000000.0 |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div

Sets the horizontal scale by changing a chip value per division. When the Scale Coupling default setting On is active, the displayed plots use a Scale/Div value determined by the analyzer, which is based on the measurement result.

| | |
|-------------------------|---------------------|
| Key Path | Span X Scale |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View - EVM Window

Sets the horizontal scale by changing a chip value per division in the EVM window.

| | |
|-----------------------|---|
| Remote Command | :DISP:play:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALE]:PDIVision <real> :DISP:play:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALE]:PDIVision? |
|-----------------------|---|

Dependencies/Couplings See Restriction and Notes

Restriction and Notes If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off.

Remote Command Notes WINDow1: EVM window on I/Q Error view

Example DISP:RHO:VIEW2:WIND:TRAC:X:PDIV 100.0
 DISP:RHO:VIEW2:WIND:TRAC:X:PDIV?

| | |
|-------------------------|----------------------------|
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | 153.5 |
| State Saved | Saved in instrument state. |
| Min | 1.0 |
| Max | 500000.0 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View - Mag Error Window

Sets the horizontal scale by changing a chip value per division in the magnitude error window.

| | |
|-------------------------|---|
| Remote Command | :DISP:lay:RHO:VIEW2:WINDow2:TRACe:X[:SCALE]:PDIVision <real> :DISP:lay:RHO:VIEW2:WINDow2:TRACe:X[:SCALE]:PDIVision? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off. |
| Remote Command Notes | WINDow2: Mag Error window on I/Q Error view |
| Example | DISP:RHO:VIEW2:WIND2:TRAC:X:PDIV 100.0 DISP:RHO:VIEW2:WIND2:TRAC:X:PDIV? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | 153.5 |
| State Saved | Saved in instrument state. |
| Min | 1.0 |
| Max | 500000.0 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View - Phase Error Window

Sets the horizontal scale by changing a chip value per division in the phase error window.

| | |
|------------------------|---|
| Remote Command | :DISP:lay:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:PDIVision <real> :DISP:lay:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:PDIVision? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | If Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling is automatically set to Off. |
| Remote Command Notes | WINDow3: Phase Error window on I/Q Error view |
| Example | DISP:RHO:VIEW2:WIND3:TRAC:X:PDIV 100.0 DISP:RHO:VIEW2:WIND3:TRAC:X:PDIV? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |

Modulation Accuracy (Composite Rho) Measurement SPAN X Scale

| | |
|-------------------------|----------------------------|
| Preset | 153.5 |
| State Saved | Saved in instrument state. |
| Min | 1.0 |
| Max | 500000.0 |
| Instrument S/W Revision | A.01.60 or later |

Ref Position

Sets the reference position for the X axis to the left, center, or right of the display.

| | |
|-------------------------|---------------------|
| Key Path | Span X Scale |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View - EVM Window

Sets the X axis reference position in the EVM window.

| | |
|-------------------------|---|
| Remote Command | <code>:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOStion LEFT CENTer RIGHT</code> <code>:DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOStion?</code> |
| Remote Command Notes | Any value smaller than 0 will be clipped to 0. Any value larger than 10 will be clipped to 10. |
| Example | <code>DISP:RHO:VIEW2:WIND:TRAC:X:RPOS LEFT</code> <code>DISP:RHO:VIEW2:WIND:TRAC:X:RPOS?</code> |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | LEFT |
| State Saved | Saved in instrument state. |
| Range | Left Ctr Right |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View - Mag Error Window

Sets the X axis reference position in the magnitude error window.

| | |
|-----------------------|---|
| Remote Command | <code>:DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:RPOStion LEFT CENTer RIGHT</code> <code>:DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:RPOStion?</code> |
|-----------------------|---|

| | |
|-------------------------|--|
| Example | DISP:RHO:VIEW2:WIND2:TRAC:X:RPOS LEFT DISP:RHO:VIEW2:WIND2:TRAC:X:RPOS? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | LEFT |
| State Saved | Saved in instrument state. |
| Range | Left Ctr Right |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View - Phase Error Window

Sets the X axis reference position in the phase error window.

| | |
|-------------------------|--|
| Remote Command | :DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:RPOSition LEFT CENTer RIGHT :DISPlay:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:RPOSition? |
| Example | DISP:RHO:VIEW2:WIND3:TRAC:X:RPOS LEFT DISP:RHO:VIEW2:WIND3:TRAC:X:RPOS? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | LEFT |
| State Saved | Saved in instrument state. |
| Range | Left Ctr Right |
| Instrument S/W Revision | A.01.60 or later |

Auto Scaling

Toggles the Auto Scaling function between On and Off. When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results.

When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|---------------------|
| Key Path | Span X Scale |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View - EVM Window

When Auto Scaling is On and the Restart front-panel key is pressed, will result in automatically

Modulation Accuracy (Composite Rho) Measurement

SPAN X Scale

displaying the scale per division and reference value results in the EVM window.

| | |
|-------------------------|---|
| Remote Command | :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUPle 0 1 OFF ON :DISPlay:RHO:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUPle? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | When this parameter is set to On, pressing the front-panel Restart key, or the Restart softkey in the Meas Control menu, activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off. |
| Remote Command Notes | WINDow[1]: Evm Error window on I/Q Error view |
| Example | DISP:RHO:VIEW2:WIND:TRAC:X:COUP ON DISP:RHO:VIEW2:WIND:TRAC:X:COUP? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View – Mag Error Window

When Auto Scaling is On and the Restart front-panel key is pressed, will result in automatically displaying the scale per division and reference value results in the magnitude error window.

| | |
|------------------------|---|
| Remote Command | :DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:COUPle 0 1 OFF ON :DISPlay:RHO:VIEW2:WINDow2:TRACe:X[:SCALe]:COUPle? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | When this parameter is set to On, pressing the front-panel Restart key, or the Restart softkey in the Meas Control menu, activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off. |
| Remote Command Notes | WINDow2: Mag Error window on I/Q Error view |
| Example | DISP:RHO:VIEW2:WIND2:TRAC:X:COUP ON DISP:RHO:VIEW2:WIND2:TRAC:X:COUP? |
| Key Path | Span X Scale |

| | |
|-------------------------|----------------------------|
| Mode | CDMA2000 |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View – Phase Error Window

When Auto Scaling is On and the Restart front-panel key is pressed, results in automatically displaying the scale per division and reference value results in the phase error window.

| | |
|-------------------------|---|
| Remote Command | :DISP:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:COUPle 0 1 OFF ON :DISP:RHO:VIEW2:WINDow3:TRACe:X[:SCALE]:COUPle? |
| Dependencies/Couplings | See Restriction and Notes |
| Restriction and Notes | When this parameter is set to On, pressing the front-panel Restart key, or the Restart softkey in the Meas Control menu, activates the scale coupling function, that automatically determines scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling is automatically set to Off. |
| Remote Command Notes | WINDow3: Phase window on I/Q Error view |
| Example | DISP:RHO:VIEW2:WIND3:TRAC:X:COUP ON DISP:RHO:VIEW2:WIND3:TRAC:X:COUP? |
| Key Path | Span X Scale |
| Mode | CDMA2000 |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Sweep/Control

Accesses a menu that enables you to pause and restart the measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front Panel Key |
| Instrument S/W Revision | A.01.60 or later |

Pause/Resume

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing Resume un-pauses the measurement. See [“Pause/Resume” on page 1198](#) in the “Common Measurement Functions” section for details.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Trace/Detector

There is no Trace/Detector functionality supported in the Mod Accuracy measurement. The front-panel key will display a blank menu when pressed.

| | |
|-------------------------|-----------------------|
| Key Path | Trace/Detector |
| Instrument S/W Revision | A.01.60 or later |

Trigger

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement

.See “Trigger” on page 1221 in the "Common Measurement Functions" section for more information.

Trigger Source (Selected Input)

Selects a trigger source. Trigger settings are mode global. Refer to Measurement Functions Mode functionality section for trigger settings.

| | |
|-------------------------|---|
| Remote Command | :TRIGger:RHO[:SEQuence]:SOURce EXTernal[1] EXTernal2 IMMediate LINE FRAMe RFBurst VIDEo IF IQMag IDEMod QDEMod IINPut QINPut AIQMag :TRIGger:RHO[:SEQuence]:SOURce? |
| Restriction and Notes | <ol style="list-style-type: none"> 1. IF in SCPI selection is the same as VIDEO. IF is kept because of backward compatibility. 2. Video and RF Burst are available only when in RF input and those selection menu keys are blank when in I/Q Input. 3. Baseband I/Q key is available only when in I/Q input, otherwise blank. IQMag, IDEMod, QDEMod, IINPut, QINPut and AIQMag are valid only when in I/Q input. |
| Remote Command Notes | You must be in the CDMA2000 mode to use this command. Use INSTRument:SElect to set the mode. |
| Example | TRIG:RHO:SOUR RFB TRIG:RHO:SOUR? |
| Key Path | Front panel key |
| Mode | CDMA2000 |
| Preset | IMMediate |
| State Saved | Saved in instrument state. |
| Range | Free Run Video IF Line External 1 External 2 RF Burst (Wideband) Periodic Timer(Frame Trigger) I/Q Mag I (Demodulated) Q (Demodulated) Input I Input Q Auxiliary Channel I/Q Mag |
| Instrument S/W Revision | A.01.60 or later |

RF Trigger Source

SCPI command for specifying the RF Trigger Source. This will always access the RF value, even when

the selected input is not RF.

| | |
|-------------------------|---|
| Remote Command | :TRIGger:RHO[:SEQuence]:RF:SOURce EXTernal[1] EXTernal2 IMMediate LINE FRAME RFBurst VIDeo IF : :TRIGger:RHO[:SEQuence]:RF:SOURce? |
| Restriction and Notes | IF in SCPI selection is the same as VIDEo. IF is kept because of backward compatibility. |
| Remote Command Notes | You must be in the CDMA2000 mode to use this command. Use INSTRument:SELEct to set the mode. |
| Example | TRIG:RHO:RF:SOUR RFB TRIG:RHO:RF:SOUR? |
| Key Path | Front panel key |
| Mode | CDMA2000 |
| Preset | IMMediate |
| State Saved | Saved in instrument state. |
| Range | Free Run Video IF Line External 1 External 2 RF Burst (Wideband) Periodic Timer(Frame Trigger) |
| Instrument S/W Revision | A.01.60 or later |

I/Q Trigger Source

SCPI command for specifying the I/Q Trigger Source. This will always access the I/Q value, even when the selected input is not I/Q.

| | |
|-----------------------|--|
| Remote Command | :TRIGger:RHO[:SEQuence]:IQ:SOURce EXTernal[1] EXTernal2 IMMediate IQMag IDEMod QDEMod IINPut QINPut AIQMag : :TRIGger:RHO[:SEQuence]:IQ:SOURce? |
| Remote Command Notes | You must be in the CDMA2000 mode to use this command. Use INSTRument:SELEct to set the mode. |
| Example | TRIG:RHO:IQ:SOUR RFB TRIG:RHO:IQ:SOUR? |
| Key Path | Front panel key |
| Mode | CDMA2000 |
| Preset | IMMediate |
| State Saved | Saved in instrument state. |
| Range | Free Run External 1 External 2 I/Q Mag I (Demodulated) Q (Demodulated) Input I Input Q Auxiliary Channel I/Q Mag |

Modulation Accuracy (Composite Rho) Measurement
Trigger

Instrument S/W Revision

A.01.60 or later

View/Display

The Mod Accuracy measurement consists of three views, which are common for both Reverse Link (MS) and Forward Link (BTS) measurements.

| NO | View | Multiple/Single PCG Note 1 | NO. of Windows | Window No. | Window |
|----|-------------------------------------|-------------------------------|----------------------|---------------------------------|---------------------------------------|
| 1 | VIEW[1] I/Q Measured Polar Graph | Single PCG | Dual (Horizontal) | WINDow[1] WINDow2 | I/Q Measured Polar Vector Metrics |
| 2 | VIEW2 I/Q Error | Single PCG | Tri (Vertical) | WINDow[1] WINDow2 WINDow3 | EVM Magnitude Error Phase Error |
| 3 | VIEW3 Power, Timing and Phase | Single PCG | One | WINDow[1] | Metrics |

Note 1: Single PCG (Power Control Group) means the range to display the trace on view is 1 PCG. When average is on, the measured results are averaged PCG by PCG.

This topic contains the following sections:

[“View Selection by name \(SCPI only\)” on page 839](#)

[“View Selection by number \(SCPI only\)” on page 840](#)

View Selection by name (SCPI only)

Allows you to select the desired measurement view from the following selections:

POLar(1): I/Q Measured Polar Graph - Provides a combination view of an I/Q measured polar vector graph and the summary data as shown below.

ERRor(2): I/Q Error (Tri View) - Provides a combination view of the EVM, magnitude error, and phase error graphs.

TPHase(3): Power, Timing and Phase-Provides the power of the code channels, and time/phase of the code channels to pilot channel, and also CDE of each code channel.

XXX...X(n) in the above,

XXX...X : Enum ID for :DISP:RHO:VIEW:SEL

Modulation Accuracy (Composite Rho) Measurement View/Display

n : Numeric ID for :DISP:RHO:VIEW:NSEL

| | |
|-------------------------|--|
| Mode | CDMA2000 |
| Remote Command | :DISPlay:RHO:VIEW[:SElect] POLar ERRor TPHase :DISPlay:RHO:VIEW[:SElect]? |
| Preset | POLar |
| State Saved | Saved in instrument state. |
| Range | Polar Graph I/Q Error Power, Timing and Phase |
| Dependencies/Couplings | TPHase(3) is available only if Multi Channel Estimator is On. |
| Example | DISP:RHO:VIEW:SEL POL DISP:RHO:VIEW:SEL? |
| Instrument S/W Revision | A.01.60 or later |

View Selection by number (SCPI only)

Displays the numeric values of the measurement results.

| | |
|-------------------------|--|
| Mode | CDMA2000 |
| Remote Command | :DISPlay:RHO:VIEW:NSElect <integer> :DISPlay:RHO:VIEW:NSElect? |
| Preset | 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 3 |
| Remote Command Notes | You must be in CDMA2000 mode to use this command. Use INSTRument:SElect to set the mode. |
| Example | DISP:RHO:VIEW:NSEL 1 DISP:RHO:VIEW:NSEL? |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Front panel key |
| Instrument S/W Revision | A.01.60 or later |

Display

Accesses a menu of functions that enable you to set the display parameters.

See [“Display” on page 1273](#) in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|---------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

I/Q Measured Polar Graph

Provides a combination view of the I/Q polar graph and the Metric Result summary

[“I/Q Measured Polar Graph view for Radio Device: BTS” on page 841](#)

[“I/Q Measured Polar Graph view for Radio Device: MS” on page 843](#)

I/Q Measured Polar Graph view for Radio Device: BTS


There are two windows, Metrics (left) and I/Q Measured Polar Vector graph display (right).

The traces and results of this view are only for one PCG. The traces are not averaged, even if the average is on.

[“I/Q Measured Polar Vector window \(Note 1\)” on page 842](#)

[“Numeric Results window \(Note 1\)” on page 843](#)

Modulation Accuracy (Composite Rho) Measurement View/Display

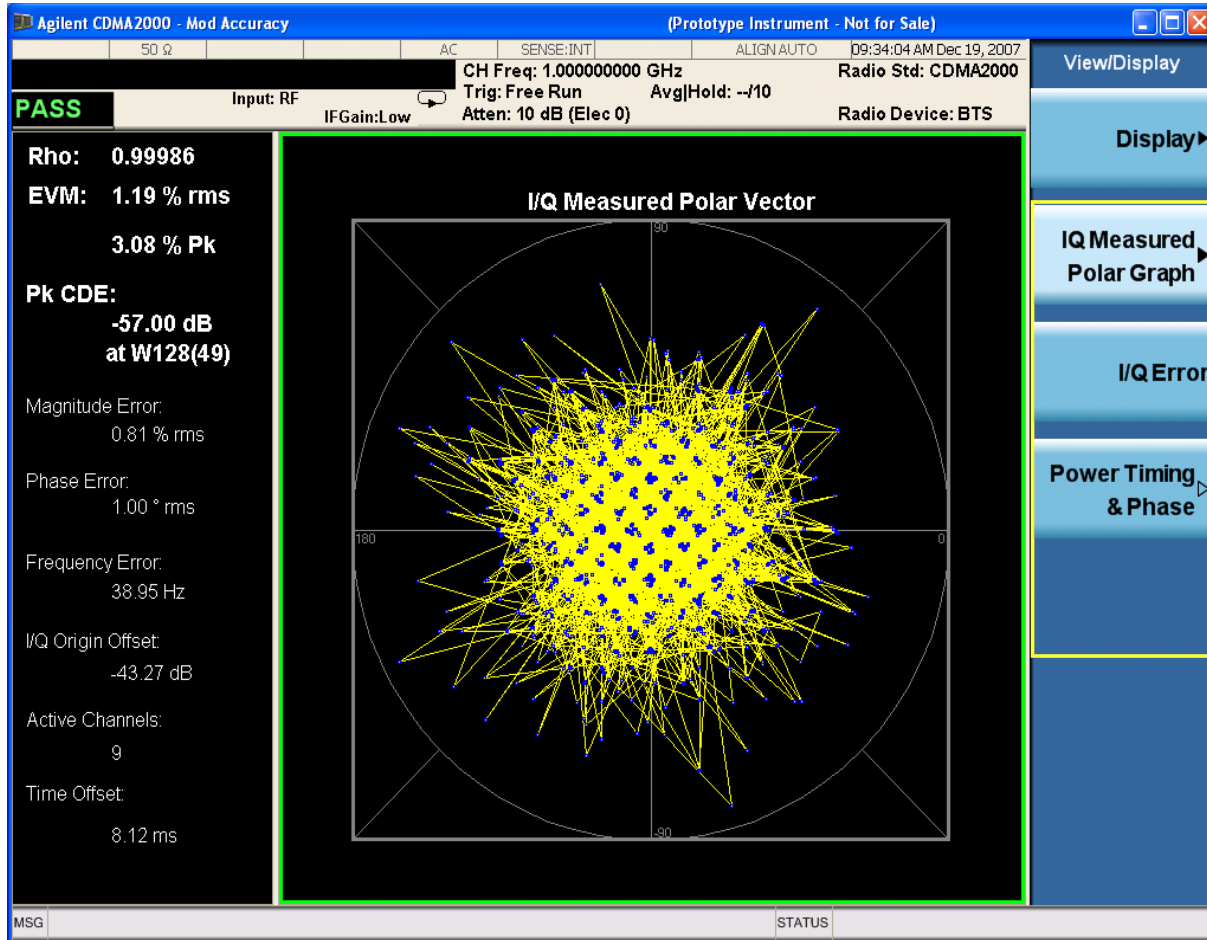

I/Q Measured Polar Vector window (Note 1)

| | |
|---------------------|---------------------------------------|
| Marker Operation | None |
| Corresponding Trace | Corrected measured trace (n=5) |
| Active Channels | n=1 10th a Number of Active Channels. |

Note 1: These traces and scalar results are of one PCG. If averaged toggled to On, the scalar results are averaged PVG by PCG, but traces aren't averaged.

Numeric Results window (Note 1)

| Name | Corresponding Results | Display Format |
|------------------------|--|--|
| Rho | n=1 7th rho | 9.99999 |
| EVM (rms) | n=1 1st EVM over the entire measurement area | 99.99 % rms |
| EVM (pk) | n=1 2nd peak EVM in the measurement area | 99.99 % pk |
| Pk CDE (dB) | n=1 8th Peak Code Domain Error relative to the mean reference power | -99.99 dB |
| Pk CDE Position | n=1 9th Channel number in which the peak code domain error is detected at the max spreading factor. | Wx(Y) x=128 for Forward Link Y: OVSF code number (0 ... 127) |
| Magnitude Error | n=1 3rd Average magnitude error over the entire measurement area | 99.99 % rms |
| Phase Error | n=1 4th Average phase error over the entire measurement area | 99.99 °rms |
| Freq Error | n=1 6th Frequency error in the measured signal | 99.99 Hz |
| I/Q Origin Offset | n=1 5th I and Q error (magnitude squared) offset from the origin. | -99.99 dB |
| Active Channels Number | n=1 10th Number of active channels. | 10 |
| Time Offset | N=1 11th Pilot phase timing from the acquisition trigger point. | 9999.99 us |

Note 1: These traces and scalar results are of one PCG. If averaged toggled to On, the scalar results are averaged PVG by PCG, but traces aren't averaged.

I/Q Measured Polar Graph view for Radio Device: MS


There are two windows, Metrics (left) and I/Q Measured Polar Vector graph display (right).

Modulation Accuracy (Composite Rho) Measurement View/Display

The traces and results of this view are only for one PCG. The traces are not averaged, even if the average is on.

“I/Q Measured Polar Vector window (Note 1)” on page 844

“Numeric Results window (Note 1)” on page 845

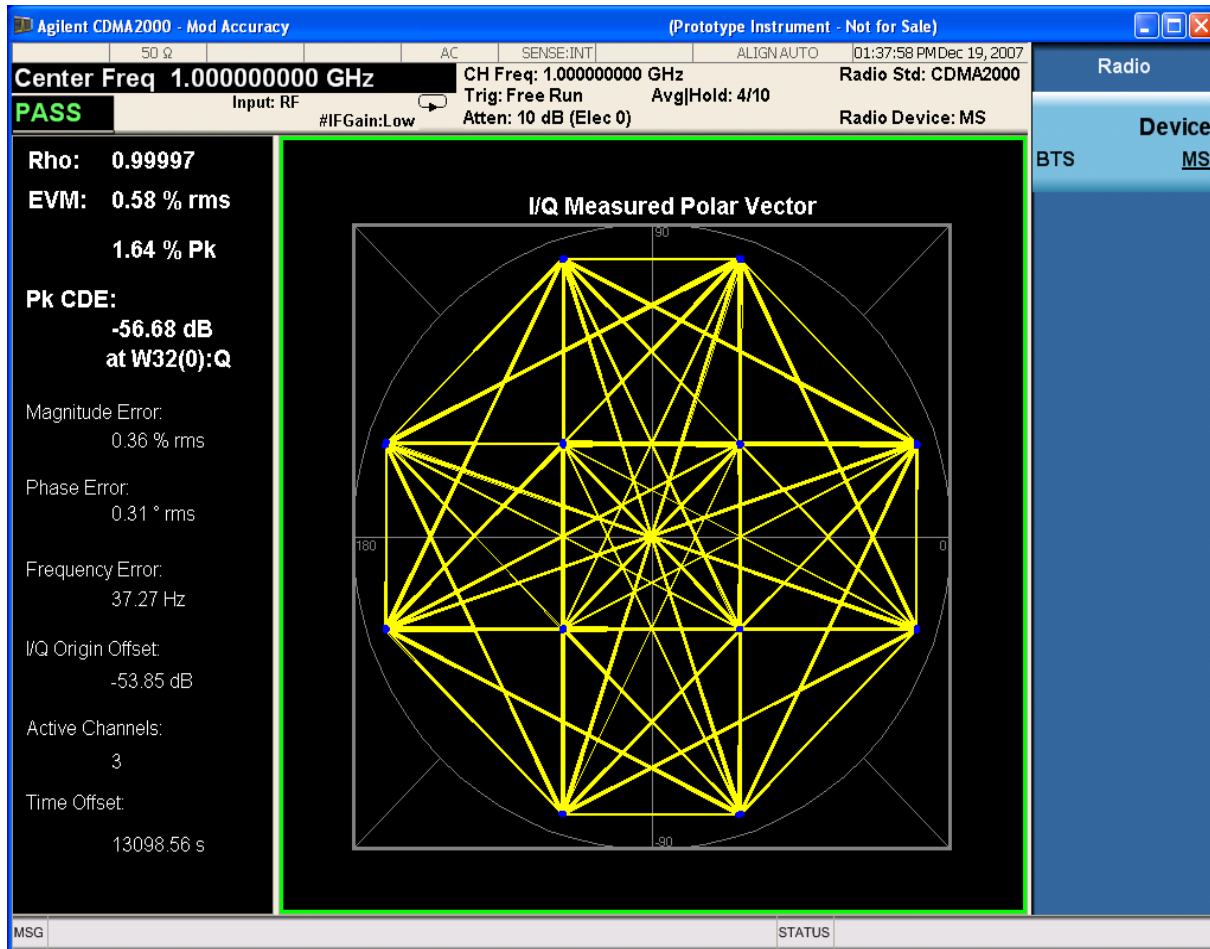

I/Q Measured Polar Vector window (Note 1)

| | |
|---------------------|---------------------------------------|
| Marker Operation | No |
| Corresponding Trace | Corrected measured trace (n=5) |
| Active Channels | n=1 10th a Number of Active Channels. |

Note 1: These traces and scalar results are of one PCG. If averaged toggled to On, the scalar results are averaged PVG by PCG, but traces aren't averaged.

Numeric Results window (Note 1)

| Name | Corresponding Results | Display Format |
|------------------------|--|--|
| Rho | n=1 7th rho | 9.99999 |
| EVM (rms) | n=1 1st EVM over the entire measurement area | 99.99 % rms |
| EVM (pk) | n=1 2nd peak EVM in the measurement area | 99.99 % pk |
| Pk CDE (dB) | n=1 8th Peak Code Domain Error relative to the mean reference power | -99.99 dB |
| Pk CDE Position | n=1 9th Channel number in which the peak code domain error is detected at the max spreading factor. | W _x (Y) x=128 for Forward Link Y: Walsh code number (0 ... 127) |
| Magnitude Error | n=1 3rd Average magnitude error over the entire measurement area | 99.99 % rms |
| Phase Error | n=1 4th Average phase error over the entire measurement area | 99.99 °rms |
| Freq Error | n=1 6th Frequency error in the measured signal | 99.99 Hz |
| I/Q Origin Offset | n=1 5th I and Q error (magnitude squared) offset from the origin. | -99.99 dB |
| Active Channels Number | n=1 10th Number of active channels. | 10 |
| Time Offset | n=1 11th Pilot phase timing from the acquisition trigger point. | 9999.99 us |

Note 1: These traces and scalar results are of one PCG. If averaged toggled to On, the scalar results are averaged PVG by PCG, but traces aren't averaged.

| | |
|-------------------------|---------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

I/Q Polar Vec/ConstIn

Specifies the format of the Polar Vector graph display. You can select one of the following formats:

Vec ConstIn (Vector and Constellation)

Vector (Vector only)

Constellation (Constellation only)

| | |
|-------------------------|--|
| Remote Command | :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:POLar VC VECTor CONSTln :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:POLar? |
| Example | DISP:RHO:VIEW:WIND1:TRAC:POL CONS DISP:RHO:VIEW:WIND1:TRAC:POL? |
| Key Path | View/Display, Display |
| Mode | CDMA2000 |
| Preset | VC |
| State Saved | Saved in instrument state. |
| Range | Vec & ConstIn Vector Constellation |
| Instrument S/W Revision | A.01.60 or later |

Chip Offset

Specifies the number of chips offset from the first chip in a captured PCG.

| | |
|-------------------------|---|
| Remote Command | :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:COFFset <integer> :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:COFFset? |
| Example | DISP:RHO:VIEW:WIND1:TRAC:COFF 100 DISP:RHO:VIEW:WIND1:TRAC:COFF? |
| Key Path | View/Display, Display |
| Mode | CDMA2000 |
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | 1535 – I/Q chips |
| Instrument S/W Revision | A.01.60 or later |

I/Q Chips

Specifies the number of I/Q chips displayed for the I/Q waveforms.

| | |
|-------------------------|---|
| Remote Command | :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:IQCHips <integer> :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:IQCHips? |
| Example | DISP:RHO:VIEW:WIND1:TRAC:IQCH 10 DISP:RHO:VIEW:WIND1:TRAC:IQCH? |
| Key Path | View/Display, Display |
| Mode | CDMA2000 |
| Preset | 1536 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 1536 |
| Instrument S/W Revision | A.01.60 or later |

+45° Rotation

Toggles the display rotation function between On and Off. If set to On, the I/Q polar vector or I/Q polar constellation graph is rotated by +45° to provide a rectangular display.

| | |
|-------------------------|---|
| Remote Command | :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:ROTQpi[:STATe] 0 1 OFF ON :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:ROTQpi[:STATe]? |
| Example | DISP:RHO:VIEW:WIND1:TRAC:ROTQ ON DISP:RHO:VIEW:WIND1:TRAC:ROTQ? |
| Key Path | View/Display, Display |
| Mode | CDMA2000 |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Full Vector

Toggles the full vector display function between On and Off. If set to On, the full vector traces, that are shown in gray, are displayed in the background of the polar vector solid traces, which are shown in

Modulation Accuracy (Composite Rho) Measurement View/Display

yellow. Both traces can be interpolated by using the Interpolation key.

| | |
|-------------------------|--|
| Remote Command | :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:FVEctor[:STATE] 0 1 OFF ON :DISPlay:RHO:VIEW[1]:WINDow[1]:TRACe:FVEctor[:STATE]? |
| Restriction and Notes | This key is grayed out if the selected view is I/Q Measured Polar Graph and the selected I/Q Polar Vec/Constln is Constellation. |
| Example | DISP:RHO:VIEW:WIND1:TRAC:FVEC ON DISP:RHO:VIEW:WIND1:TRAC:FVEC? |
| Key Path | View/Display, Display |
| Mode | CDMA2000 |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error

Provides a combination view of magnitude error, phase error, and EVM. There is no view settings for this view.

[“I/Q Error view for Radio Device: BTS” on page 848](#)

[“I/Q Error view for Radio Device: MS” on page 850](#)

I/Q Error view for Radio Device: BTS

There are three windows, EVM window (upper), Magnitude Error window (middle), Phase Error window (lower),


The traces of this view are not averaged, even if the average function is on.

[“EVM window” on page 850](#)

[“Magnitude Error window” on page 850](#)

[“Phase Error window” on page 850](#)

Modulation Accuracy (Composite Rho) Measurement
View/Display

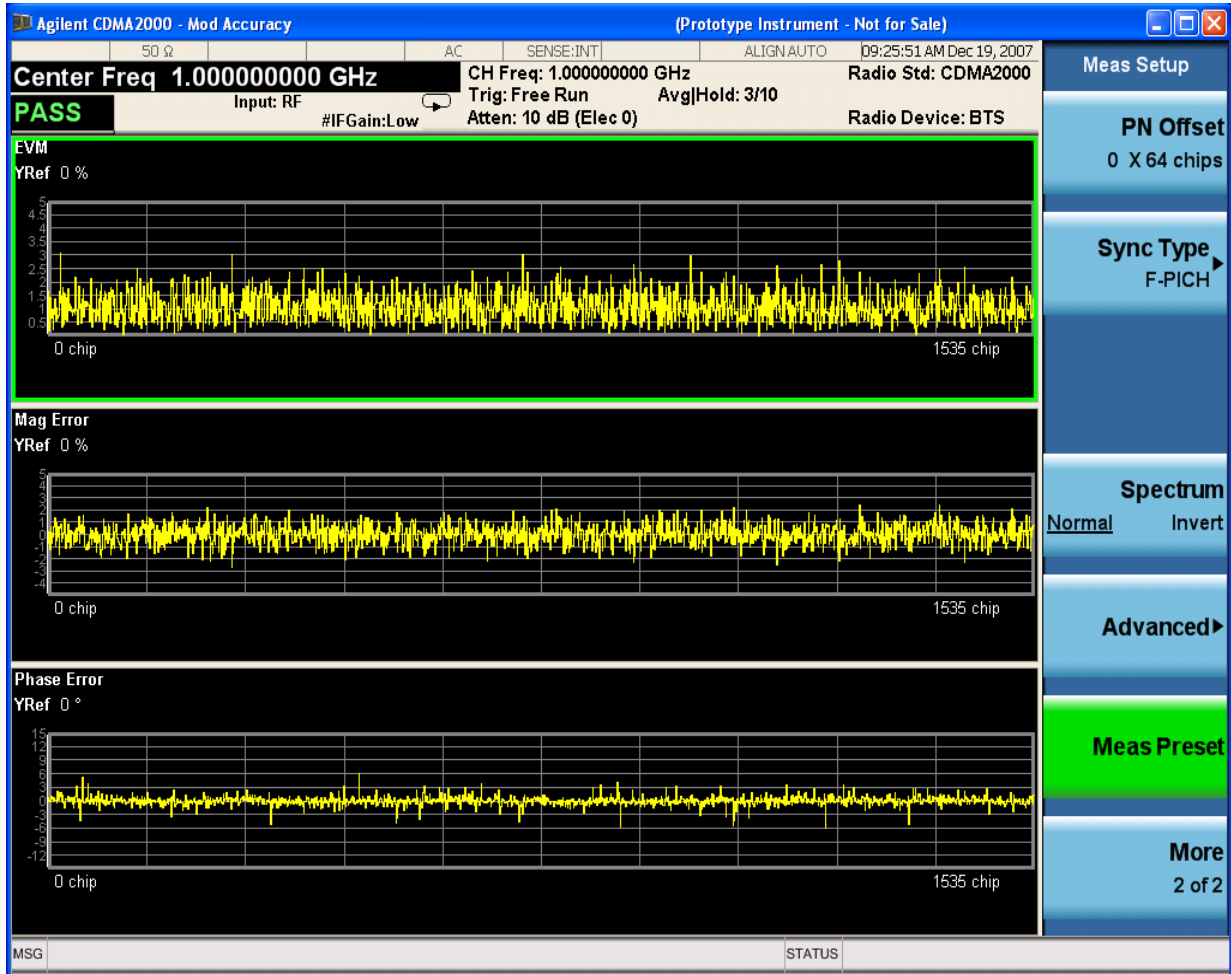

EVM window

| | |
|---------------------|-----------------|
| Marker Operation | Yes |
| Corresponding Trace | EVM trace (n=2) |

Magnitude Error window

| | |
|---------------------|-----------------------------|
| Marker Operation | Yes |
| Corresponding Trace | Magnitude error trace (n=3) |

Phase Error window

| | |
|---------------------|-------------------------|
| Marker Operation | Yes |
| Corresponding Trace | Phase error trace (n=4) |

I/Q Error view for Radio Device: MS


There are three windows, EVM window (upper), Magnitude Error window (middle), Phase Error window (lower),

The traces of this view are not averaged, even if the average function is on.

[“EVM window” on page 852](#)

[“Magnitude Error window” on page 852](#)

[“Phase Error window” on page 852](#)

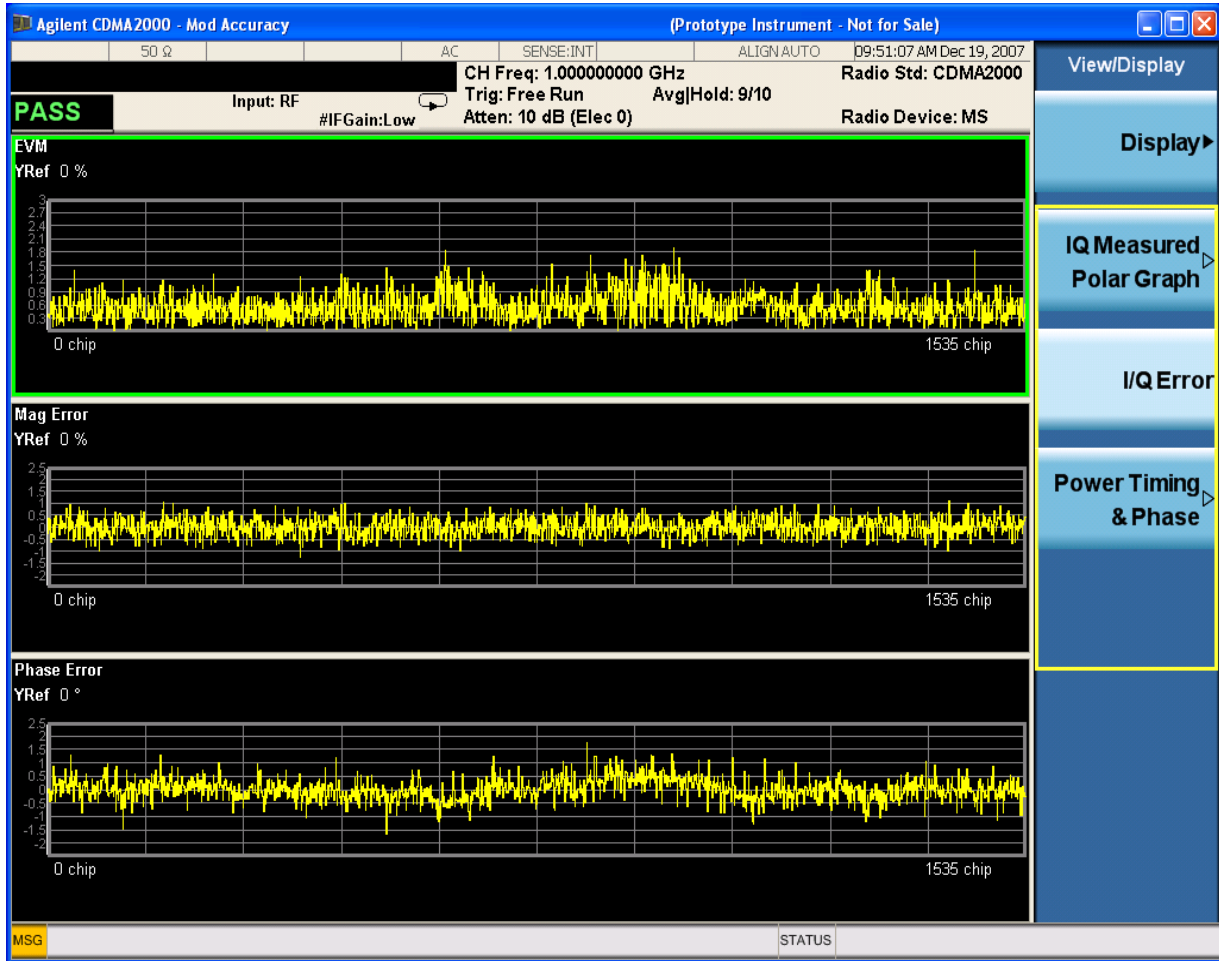

EVM window

| | |
|---------------------|-----------------|
| Marker Operation | Yes |
| Corresponding Trace | EVM trace (n=2) |

Magnitude Error window

| | |
|---------------------|-----------------------------|
| Marker Operation | Yes |
| Corresponding Trace | Magnitude error trace (n=3) |

Phase Error window

| | |
|---------------------|-------------------------|
| Marker Operation | Yes |
| Corresponding Trace | Phase error trace (n=4) |

| | |
|-------------------------|---------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

Power Timing & Phase

Power, Timing and Phase view displays the power of the code channels, and time/phase of the code channels to pilot channel, and also CDE of each code channel using the Multi Channel Estimator. The results of this view are not averaged, even if the average function is on. If Multi Channel Estimator is Off, there will be a message “Press Meas Setup, Advanced and turn Multi Channel Estimation On to see the data” appears on the view of Power, Timing and Phase.

[“Power, Timing and Phase view for Radio Device: BTS” on page 852](#) view for Radio Device: BTS

[“Power, Timing and Phase view for Radio Device: MS” on page 853](#) view for Radio Device: MS

Power, Timing and Phase view for Radio Device: BTS

There is only one window in this view. If you need to see the metric result of power, timing and phase in channel level, you need first turn the Multi-Channel Estimator option to “ON”.

- Prev Page - Returns one page back to the previous page of the measurement results.
- Next Page - Moves one page forward to the next page of the measurement results.
- Scroll Up - Moves one line upward from the current page of the measurement results by each pressing.
- Scroll Down - Moves one line downward from the current page of the measurement results by each pressing.
- First Page - Moves from the current page to the first page of the measurement results.
- Last Page - Moves from the current page to the last page of the measurement results.



Power, Timing and Phase view for Radio Device: MS

There is only one window in this view. If you need to see the metric result of power, timing and phase in channel level, you need first turn the Multi-Channel Estimator option to “ON”.

- Prev Page - Returns one page back to the previous page of the measurement results.
- Next Page - Moves one page forward to the next page of the measurement results.
- Scroll Up - Moves one line upward from the current page of the measurement results by each pressing.
- Scroll Down - Moves one line downward from the current page of the measurement results by each pressing.
- First Page - Moves from the current page to the first page of the measurement results.
- Last Page - Moves from the current page to the last page of the measurement results.

Modulation Accuracy (Composite Rho) Measurement View/Display



Key Path **View/Display**
 Instrument S/W Revision A.01.60 or later

Prev Page

Returns the current page back to the previous page of the measurement results.

Remote Command Notes NO SCPI
 Key Path **View/Display, Power Timing & Phase**
 Mode CDMA2000
 Instrument S/W Revision A.01.60 or later

Next Page

Moves the current page forward to the next page of the measurement results.

| | |
|-------------------------|---|
| Remote Command Notes | NO SCPI |
| Key Path | View/Display, Power Timing & Phase |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Scroll Up

Moves one line upward from the current page of the measurement results by each pressing.

| | |
|-------------------------|---|
| Remote Command Notes | NO SCPI |
| Key Path | View/Display, Power Timing & Phase |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Scroll Down

Moves one line downward from the current page of the measurement results by each press.

| | |
|-------------------------|---|
| Remote Command Notes | NO SCPI |
| Key Path | View/Display, Power Timing & Phase |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

First Page

Moves from the current page to the first page of the measurement results.

| | |
|-------------------------|---|
| Remote Command Notes | NO SCPI |
| Key Path | View/Display, Power Timing & Phase |
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

Last Page

Moves from the current page to the last page of the measurement results.

| | |
|----------------------|---|
| Remote Command Notes | NO SCPI |
| Key Path | View/Display, Power Timing & Phase |

Modulation Accuracy (Composite Rho) Measurement
View/Display

| | |
|-------------------------|------------------|
| Mode | CDMA2000 |
| Instrument S/W Revision | A.01.60 or later |

The quadrature phase shift keying (QPSK) error vector magnitude (EVM) measurement is a measure of phase and amplitude modulation quality that relates the performance of the actual signal compared to an ideal signal as a percentage, as calculated over the course of the ideal constellation. These phase and frequency errors are measures of modulation quality for the W-CDMA (3GPP) system, and can be quantified through QPSK EVM measurements. For measurement results and views, see [“View/Display” on page 916](#).

This topic contains the following sections:

[“Measurement Commands for QPSK EVM” on page 857](#)

[“Remote CommandResults for QPSK EVM Measurement” on page 857](#)

Measurement Commands for QPSK EVM

The general functionality of CONFigure, FETCh, MEASure, and READ are described at the beginning of this section. See the SENSE:EVMQpsk commands for more measurement related commands.

:CONFigure:EVMQpsk

:CONFigure:EVMQpsk:NDEFault

:FETCh:EVMQpsk [n] ?

:READ:EVMQpsk [n] ?

:MEASure:EVMQpsk [n] ?

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1115](#).

Remote CommandResults for QPSK EVM Measurement

| | |
|---|--|
| n | Results Returned |
| 0 | Returns unprocessed I/Q trace data, as a series of comma-separated trace points, in volts. |

QPSK EVM Measurement

- not specified
or $n = 1$
- Returns the following 11 scalar results:
- RMS EVM is a floating point number (in percent) of EVM over the entire measurement area.
 - RMS EVM maximum is the maximum RMS EVM over the average counts.
 - Peak EVM is a floating point number (in percent) of peak EVM in the measurement area.
 - Peak EVM maximum is the maximum peak EVM over the average counts.
 - Magnitude Error is a floating point number (in percent) of averaged magnitude error over the entire measurement area.
 - Magnitude Error maximum is a floating point number over the average counts.
 - Phase Error is a floating point number (in degrees) of the averaged phase error over the entire measurement area.
 - Phase Error maximum is the maximum phase error over the average counts.
 - Frequency Error is a floating point number (in Hz) of the frequency error in the measured signal.
 - Frequency Error maximum is the maximum frequency error over the average counts.
 - I/Q Origin Offset is a floating point number (in dB) of the I and Q error (magnitude squared) offset from the origin.
- 2 EVM trace – returns a series of floating point numbers (in percent) that represent each sample in the EVM trace. The first number is the symbol 0 decision point. There are X points per symbol ($X = \text{points}/\text{chip}$). Therefore, the decision points are at 0, $1 * X$, $2 * X$, and so on.
- 3 Magnitude error trace – returns a series of floating point numbers (in percent) that represent each sample in the magnitude error trace. The first number is the symbol 0 decision point. There are X points per symbol ($X = \text{points}/\text{chip}$). Therefore, the decision points are at 0, $1 * X$, $2 * X$, ...
- 4 Phase error trace – returns a series of floating point numbers (in percent) that represent each sample in the phase error trace. The first number is the symbol 0 decision point. There are X points per symbol ($X = \text{points}/\text{chip}$). Therefore, the decision points are at 0, $1 * X$, $2 * X$, ...
- 5 Corrected measured trace – returns a series of floating point numbers that alternately represent I and Q pairs of the corrected measured trace. The magnitude of each I and Q pair are normalized to 1.0. The first number is the I sample of symbol 0 decision point and the second number is the Q sample of symbol 0 decision point. There are X points per symbol ($X = \text{points}/\text{chip}$). Therefore, the series of numbers is:
- 1st number = I of the symbol 0 decision point
 - 2nd number = Q of the symbol 0 decision point
 - ...
 - $(2 * X) + 1$ number = I of the symbol 1 decision point
 - $(2 * X) + 2$ number = Q of the symbol 1 decision point
 - ...
 - $(2 * X) * N + 1$ th number = I of the symbol N decision point
 - $(2 * X) * N + 2$ th number = Q of the symbol N decision point

Key Path

Meas

Instrument S/W Revision

A.01.60 or later

AMPTD Y Scale

Accesses the AMPTD Y Scale menu that allows you to set the desired vertical scale and associated settings for the current measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Ref Value

Enables you to set the absolute power reference value. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Ref Value (Magnitude Error Window)

Sets the absolute power reference value in the magnitude error window.

| | |
|------------------------|--|
| Key Path | AMPTD Y Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow [1] :TRACe:Y[:SCALE] :RLEVel <real> :DISPlay:EVMQpsk:VIEW2:WINDow [1] :TRACe:Y[:SCALE] :RLEVel ? |
| Example | DISP:EVMQ:VIEW2:WIND:TRAC:Y:RLEV 90 DISP:EVMQ:VIEW2:WIND:TRAC:Y:RLEV? |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When the value is set manually, Auto Scaling automatically changes to Off. |
| Preset | 0.0 |
| State Saved | Saved in instrument state. |
| Min | -500 |
| Max | 500 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 0.5 |

Instrument S/W Revision A.01.60 or later

Ref Value (Phase Error Window)

Sets the absolute power reference value in the phase error window.

| | |
|-------------------------|--|
| Key Path | AMPTD Y Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALe]:RLEVel? |
| Example | DISP:EVMQ:VIEW2:WIND2:TRAC:Y:RLEV 90 DISP:EVMQ:VIEW2:WIND2:TRAC:Y:RLEV? |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When the value is set manually, Auto Scaling automatically changes to Off. |
| Preset | 0.0 |
| State Saved | Saved in instrument state. |
| Min | -36000 |
| Max | 36000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 0.5 |
| Instrument S/W Revision | A.01.60 or later |

Ref Value (EVM Window)

Sets the absolute power reference value in the EVM window.

| | |
|------------------------|--|
| Key Path | AMPTD Y Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALe]:RLEVel <real> :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALe]:RLEVel? |
| Example | DISP:EVMQ:VIEW2:WIND3:TRAC:Y:RLEV 120 DISP:EVMQ:VIEW2:WIND3:TRAC:Y:RLEV? |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When the value is set manually, Auto Scaling automatically changes to Off. |

QPSK EVM Measurement AMPTD Y Scale

| | |
|-------------------------|----------------------------|
| Preset | 0.0 |
| State Saved | Saved in instrument state. |
| Min | -500 |
| Max | 500 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 0.5 |
| Instrument S/W Revision | A.01.60 or later |

Attenuation

Accesses a menu of functions that enable you to change the attenuation settings. This key has read-back text that describes the total attenuator value.

See [“Attenuation” on page 1037](#) under the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Range

Accesses the Range menu to change baseband I/Q gain settings. This key has a readback text that describes gain range value. Refer to [“Range” on page 1043](#) in the “Common Measurement Functions” section for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD/Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div

Sets the units per division of vertical scale in the logarithmic display. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div (Magnitude Error Window)

Sets the sensitivity measurement result in the magnitude error window.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion <real> :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVis ion? |
| Example | DISP:EVMQ:VIEW2:WIND:TRAC:Y:PDIV 25 DISP:EVMQ:VIEW2:WIND:TRAC:Y:PDIV? |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When the user sets a value manually, Auto Scaling automatically changes to Off. |
| Preset | 1 |
| State Saved | Saved in instrument state. |
| Min | 0.1 |
| Max | 50 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 0.5 |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div (Phase Error Window)

Sets the sensitivity measurement result in the phase error window.

| | |
|-----------------------|--|
| Key Path | AMPTD Y Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVisio n <real> :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:Y[:SCALe]:PDIVisio n? |
| Example | DISP:EVMQ:VIEW2:WIND2:TRAC:Y:PDIV 25.5 DISP:EVMQ:VIEW2:WIND2:TRAC:Y:PDIV? |

QPSK EVM Measurement AMPTD Y Scale

| | |
|-------------------------|---|
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When the user sets a value manually, Auto Scaling automatically changes to Off. |
| Preset | 0.5 |
| State Saved | Saved in instrument state. |
| Min | 0.1 |
| Max | 360 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 0.5 |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div (Evm Window)

Sets the sensitivity measurement result in the EVM window.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVisio n <real> :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:Y[:SCALe]:PDIVisio n? |
| Example | DISP:EVMQ:VIEW2:WIND3:TRAC:Y:PDIV 20 DISP:EVMQ:VIEW2:WIND3:TRAC:Y:PDIV? |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When the user sets a value manually, Auto Scaling automatically changes to Off. |
| Preset | 0.5 |
| State Saved | Saved in instrument state. |
| Min | 0.1 |
| Max | 50 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 0.5 |
| Instrument S/W Revision | A.01.60 or later |

Presel Center

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the frequency of the selected marker.

See AMPTD Y Scale, [“Presel Center” on page 1048](#) in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD/Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Presel Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when Presel Center is available.

See AMPTD Y Scale, [“Preselector Adjust” on page 1050](#) in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD/Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See AMPTD Y Scale, [“Internal Preamp” on page 1051](#) in the “Common Measurement Functions” section for more information.

This is only available when the selected input is RF.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Ref Position

Positions the Y-axis scale reference level at the top, center or bottom of the display. Changing the reference position does not change the reference level value. This function can be used for all three QPSK EVM measurement results graphs.

| | |
|----------|----------------------|
| Key Path | AMPTD Y Scale |
| Mode | WCDMA, C2K, 1xEVDO |

QPSK EVM Measurement

AMPTD Y Scale

| | |
|-------------------------|---|
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow [1] 2 3 :TRACe:Y[:SCALE] :RPOStion TOP CENTer BOTTom :DISPlay:EVMQpsk:VIEW2:WINDow [1] 2 3 :TRACe:Y[:SCALE] :RPOStion? |
| Example | DISP:EVMQ:VIEW2:WIND3:TRAC:Y:RPOS TOP DISP:EVMQ:VIEW2:WIND3:TRAC:Y:RPOS? |
| Notes | Subop codes denote: 1: Mag error graph 2: Phase error graph 3: EVM error graph |
| Dependencies/Couplings | When Auto Scaling is On and this parameter is changed, Ref Value will change to adjust the trace to one that is most suitable for the window. |
| Preset | CENTer CENTer BOTTom |
| State Saved | Saved in instrument state. |
| Range | Top Ctr Bot |
| Instrument S/W Revision | A.01.60 or later |

Auto Scaling

Toggles the Auto Scaling function between On and Off. Upon pressing the **Restart front-panel key**, this function automatically determines the scale per division and reference values based on the measurement results.

| | |
|------------------------|--|
| Key Path | AMPTD Y Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow [1] 2 3 :TRACe:Y[:SCALE] :COUPle ON OFF 1 0 :DISPlay:EVMQpsk:VIEW2:WINDow [1] 2 3 :TRACe:Y[:SCALE] :COUPle? |
| Example | DISP:EVMQ:VIEW2:WIND:TRAC:Y:COUP ON DISP:EVMQ:VIEW2:WIND:TRAC:Y:COUP? |
| Dependencies/Couplings | When Auto Scaling is On and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off. |
| Preset | ON |
| State Saved | Saved in instrument state. |

| | |
|-------------------------|------------------|
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Auto Couple

See “**AUTO COUPLE**” on page 1055 in the section “Common Measurement Functions” for more information.

BW

Accesses a menu of functions that enable you to specify and control the Info BW.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Info BW

Activates the **Info BW** function, which enables you to manually set the information bandwidth of the analyzer. This is used to set the hardware filter of the ADC.

| | |
|-------------------------|--|
| Key Path | BW |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | [:SENSE] :EVMQpsk :BANDwidth[:RESolution] <freq> [:SENSE] :EVMQpsk :BANDwidth[:RESolution] ? |
| Example | EVMQ:BAND 1 kHz EVMQ:BAND? |
| Notes | The values shown in this table reflect the conditions after a Mode Preset. |
| Preset | WCDMA, C2K: 6 MHz CDMA 1xEVDO: 1.5MHz |
| State Saved | Saved in instrument state. |
| Min | 1kHz |
| Max | Hardware Dependent: RF Input: No Option = 10 MHz OptionB25 = 25 MHz I/Q Input (for I+jQ) No Option = 20 MHz OptionB25 = 50 MHz |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Hardware Dependent: |
| Instrument S/W Revision | A.01.60 or later |

Info BW Control

Accesses a menu that enables you to select either A Gaussian or Flat Top filter.

| | |
|-------------------------|------------------|
| Key Path | BW |
| Instrument S/W Revision | A.01.60 or later |

Filter Type

Selects the type of bandwidth filter that is used. The choices are Gaussian or Flat top.

| | |
|-------------------------|--|
| Key Path | BW, RBW Control |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | [:SENSE] :EVMQpsk :BANDwidth :SHAPE GAUSSian FLATtop [:SENSE] :EVMQpsk :BANDwidth :SHAPE? |
| Example | EVMQ:BAND:SHAP GAUS EVMQ:BAND:SHAP? |
| Preset | FLATtop |
| State Saved | Saved in instrument state. |
| Range | Gaussian FlatTop |
| Instrument S/W Revision | A.01.60 or later |

Cont

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1063 in the section "Common Measurement Functions" for more information.

FREQ Channel

See “[FREQ/Channel](#)” on page 1059 in the section "Common Measurement Functions" for more information.

Input/Output

See “[Input/Output](#)” on page 1065 in the section "Common Measurement Functions" for more information.

Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. See “[Marker](#)” on page 1109 in “Common Measurement Functions” for more information.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Accesses a menu of functions that enable you to specify and control markers for the current measurement.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Marker Type

Sets the marker control mode. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, reference value of the selected marker appears on the Active Function area. It is:

Marker Chip Value, at I/Q Polar

Marker X Axis Value, at EVM, Phase Error and Mag Error

Default Active Function: the active function for the selected marker’s current control mode. If the current control mode is Off, there is no active function and the active function is turned off.

| | |
|-----------------------|--|
| Key Path | Marker |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M ODE POSition DELTa OFF :CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M ODE? |
| Example | CALC:EVMQ:MARK:MODE POS CALC:EVMQ:MARK:MODE? |

| | |
|-------------------------|---|
| Notes | <p>If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, reference value of the selected marker appears on the Active Function area. It is:</p> <p>Marker Chip Value, at I/Q Polar</p> <p>Marker X Axis Value, at EVM, Phase Error and Mag Error</p> <p>Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.</p> <p>If the selected marker's trace is I/Q Polar, Delta is not supported. If DELTA is selected on the marker of the I/Q Polar, the command is ignored.</p> |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Normal Delta Off |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

This parameter has different meaning between the cases where the marker trace is set to I/Q Polar and others. In the I/Q Polar Graph, X Axis Value is also the measured value and this command is query only.

| | |
|-----------------------|--|
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | <pre>:CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X <real></pre> <pre>:CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X ?</pre> |
| Example | <pre>CALC:EVMQ:MARK3:X 1280</pre> <pre>CALC:EVMQ:MARK3:X?</pre> |

QPSK EVM Measurement Marker

| | |
|-------------------------|--|
| Notes | <p>If no suffix is sent it will use the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error “Invalid suffix” will be generated. If the specified marker is Fixed and a Marker Function is on, error –221 “Settings conflict; cannot adjust Fixed marker while Marker Function is on” is generated.</p> <p>The query returns the marker’s absolute X Axis value if the control mode is Normal, or the offset from the marker’s reference marker if the control mode is Delta. The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time, seconds for Period and Time. If the marker is Off the response is not a number.</p> <p>This parameter has different meaning between the cases where the marker trace is set to I/Q Polar and others. In the I/Q Polar Graph, X Axis Value is also the measured value and the command is query only.</p> |
| Preset | After a preset, all Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN). |
| State Saved | No |
| Min | –9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | Not tested in SCPI test. |
| Instrument S/W Revision | A.01.60 or later |

Marker Chip Value (Remote Command only)

Sets the marker Chip value in the current marker for the trace of I/Q Polar. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an Chip value if the control mode is **Normal** or **Delta**.

In other traces than I/Q Polar, this command is meaningless and ignored.

| | |
|-----------------------|---|
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | <pre>:CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :C HIP <real> :CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :C HIP?</pre> |
| Example | <pre>CALC:EVMQ:MARK3:X 0 CALC:EVMQ:MARK3:X?</pre> |

| | |
|-------------------------|--|
| Notes | <p>If no suffix is sent it will use the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error “Invalid suffix” will be generated. If the specified marker is Fixed and a Marker Function is on, error –221 “Settings conflict; cannot adjust Fixed marker while Marker Function is on” is generated.</p> <p>The query returns the marker’s absolute X Axis value if the control mode is Normal, or the offset from the marker’s reference marker if the control mode is Delta. The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time, seconds for Period and Time. If the marker is Off the response is not a number.</p> <p>This parameter is only available in the case where the marker trace is set to I/Q Polar.</p> |
| Preset | 0 |
| State Saved | No |
| Min | –9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | Not tested in SCPI test. |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

If the Marker Trace is set to I/Q Polar (POLar), this command provides no effects.

| | |
|-----------------------|---|
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | <pre>:CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition <real> :CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition?</pre> |
| Example | <pre>CALC:EVMQ:MARK:X:POS 0.0 CALC:EVMQpsk:MARK10:X:POS?</pre> |

QPSK EVM Measurement Marker

| | |
|-------------------------|---|
| Notes | <p>If the specified marker is Fixed and a Marker Function is on, error –221 “Settings conflict; cannot adjust Fixed marker while Marker Function is on” is generated.</p> <p>The query returns the marker’s absolute X Axis value in trace points if the control mode is Normal, or the offset from the marker’s reference marker in trace points if the control mode is Delta. The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points (see “Fractional Trace Points”, above). If the marker is Off the response is not a number.</p> <p>This command is not available when Marker Trace of the selected marker (:CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:TRACe?) is set to POLar. In this case, this command is ignored.</p> |
| Preset | After a preset, all Markers are turned OFF, so Marker X Axis Value query will return a not a number (NAN). |
| State Saved | No |
| Min | –9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | Not tested in SCPI test |
| Instrument S/W Revision | A.01.60 or later |

Marker Y Axis Value (Query Only)

Returns the Marker Y Axis value, in the current marker Y Axis unit.

| | |
|-------------------------|--|
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CALCulate:EVMQpsk:MARKer[1] 2 3 4 5 6 7 8 9 10 11 12:Y? |
| Example | CALC:EVMQ:MARK11:Y? |
| Notes | The query returns the marker Y-axis result, if the control mode is Normal or Delta . If the marker is Off , the response is not a number. |
| Preset | Result dependant on markers setup and signal source |
| State Saved | No |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Marker Properties

Accesses a menu of functions that enable you to specify and control markers for the current

measurement.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Accesses a menu of functions that enable you to specify and control markers for the current measurement.

| | |
|-------------------------|---------------------------|
| Key Path | Marker, Properties |
| Instrument S/W Revision | A.01.60 or later |

Relative To

Selects the marker the selected marker will be relative to (its reference marker).

| | |
|-------------------------|---|
| Key Path | Marker, Properties |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R EFerence <integer> :CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R EFerence? |
| Example | CALC:EVMQ:MARK:REF 4 CALC:EVMQ:MARK:REF? |
| Notes | A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself." When queried a single value will be returned (the specified marker numbers relative marker). |
| Preset | 2 3 4 5 6 7 8 9 10 11 12 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 12 |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Marker Trace

Assigns the specified marker to the designated trace.

| | |
|-------------------------|---|
| Key Path | Marker |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :T RACe POLar EVM PERRor MERRor :CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :T RACe? |
| Example | CALC:EVMQ:MARK:TRAC MERR CALC:EVMQ:MARK:TRAC? |
| Notes | Assigns the specified marker to the designated trace. |
| Preset | EVM |
| State Saved | Saved in instrument state. |
| Range | I/Q Polar EVM Phase Error Mag Error |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Couple Marker

Toggles the state of the markers to be coupled On or Off. When this function is true (On), moving any marker causes an equal X-axis movement of every other marker except those located to the polar trace, and Chip value of the marker located to the polar trace, which is not **Off**, including **Fixed** markers. "Equal X Axis movement" refers to the difference between each marker's X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units). This may result in markers going off screen

See Couple Marker in the "Marker" section for more information.

| | |
|-----------------------|--|
| Key Path | Marker |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CALCulate:EVMQpsk:MARKer:COUple [:STATE] ON OFF 1 0 :CALCulate:EVMQpsk:MARKer:COUple [:STATE] ? |
| Example | CALC:EVMQ:MARK:COUP ON CALC:EVMQ:MARK:COUP? |
| Notes | In QPSK EVM, this marker behaves specially. Coupled values are "Chips" of the markers located to the polar trace, and "X" of the markers located to the other traces than the polar trace. |
| Preset | OFF |

| | |
|-------------------------|----------------------------|
| State Saved | Saved in instrument state. |
| Range | On Off |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

All Markers Off

Turns off all markers.

| | |
|-------------------------|--------------------------------|
| Key Path | Marker |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CALCulate:EVMQpsk:MARKer:AOff |
| Example | CALC:EVMQ:MARK:AOff |
| Instrument S/W Revision | A.01.60 or later |

Marker Function

There is no Marker Function functionality supported in QPSK EVM. This front panel key will display a blank menu when pressed.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Marker To

There is no Marker To functionality supported in QPSK EVM. This front panel key will display a blank menu when pressed.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Meas

See “[Meas](#)” on page 1115 in the section "Common Measurement Functions" for more information.

Meas Setup

Displays the setup menu for the currently selected measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Avg/Hold Number

Specifies the number of N averages that will be used for the measurement. After the specified number (average counts) have been averaged, the averaging mode (termination control) setting determines the averaging action.

| | |
|-------------------------|--|
| Key Path | Meas Setup |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | [:SENSE] :EVMQpsk:AVERAge:COUNT <integer> [:SENSE] :EVMQpsk:AVERAge:COUNT? [:SENSE] :EVMQpsk:AVERAge [:STATe] OFF ON 0 1 [:SENSE] :EVMQpsk:AVERAge [:STATe] ? |
| Example | EVMQ:AVER:COUN 1001 EVMQ:AVER:COUN? EVMQ:AVER OFF EVMQ:AVER? |
| Preset | 10 ON |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 10000 |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Avg Mode

Toggles the averaging mode between Exp (exponential) and Repeat. This selection only affects the averaging result after the number of N averages is reached. The N is set using the Avg/Hold Number key.

| | |
|-------------|---|
| Exponential | Each successive data acquisition after the average count is reached, is exponentially weighted and then combined with the existing average. |
|-------------|---|

QPSK EVM Measurement Meas Setup

| | |
|-------------------------|--|
| Repeat | After reaching the average count, the averaging is reset and a new average is started. |
| Key Path | Meas Setup |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | [:SENSE] :EVMQpsk:AVERAge:TCONtrol EXPonential REPEAT [:SENSE] :EVMQpsk:AVERAge:TCONtrol? |
| Example | EVMQ:AVER:TCON REP EVMQ:AVER:TCON? |
| Notes | Selects the type of termination control used for averaging. This determines the averaging action after the specified number of frames (average count) is reached. Exponential - Each successive data acquisition after the average count is reached, is exponentially weighted and combined with the existing average. Repeat - After reaching the average count, the averaging is reset and a new average is started. |
| Preset | REPEAT |
| State Saved | Saved in instrument state. |
| Range | Exp Repeat |
| Instrument S/W Revision | A.01.60 or later |

Meas Interval

Sets the length of the measurement interval (number of data points) that are used.

| | |
|-----------------------|---|
| Key Path | Meas Setup |
| Mode | WCDMA, C2K |
| Remote Command | [:SENSE] :EVMQpsk:SWEep:POINTs <integer> [:SENSE] :EVMQpsk:SWEep:POINTs? |
| Example | EVMQ:SWE:POIN 1001 EVMQ:SWE:POIN? |
| Preset | WCDMA: 2560 C2K: 512 |
| State Saved | Saved in instrument state. |
| Min | 128 |
| Max | WCDMA: 5120 C2K: 1536 |

| | |
|-------------------------|------------------|
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 10 |
| Instrument S/W Revision | A.01.60 or later |

Limits

Accesses a menu that enables you to change the RMS EVM and Frequency Error limits settings.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

RMS EVM

Sets the limit for the RMS EVM measurement. This value is used to judge whether the measurement passes or fails the RMS EVM limit.

| | |
|-------------------------|---|
| Key Path | Meas Setup, Limits |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CALCulate:EVMQpsk:LIMit:RMS <real> :CALCulate:EVMQpsk:LIMit:RMS? |
| Example | CALC:EVMQ:LIM:RMS 50 CALC:EVMQ:LIM:RMS? |
| Notes | Sets the limits of RMS EVM which is used to judge the result of RMS EVM passes or fails. If a measured RMS EVM value is not larger than the limit value, the result is PASS. Otherwise, the result is FAIL. You must be in the W-CDMA mode to use this command. Use INSTRument:SElect to set the mode. |
| Preset | WCDMA: 17.5 C2K: 100.0 1xEVDO: 100.0 |
| Min | 0.0 |
| Max | 100.0 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 0.1 |
| Instrument S/W Revision | A.01.60 or later |

Freq Error

Sets the limit, in Hz, for the frequency error measurement. This value is used to judge whether the measurement passes or fails the Frequency Error limit.

| | |
|-------------------------|---|
| Key Path | Meas Setup, Limits |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CALCulate:EVMQpsk:LIMit:FERRor <freq> :CALCulate:EVMQpsk:LIMit:FERRor? |
| Example | CALC:EVMQ:LIM:FERR 100 CALC:EVMQ:LIM:FERR? |
| Notes | Sets the limits of the Frequency Error, which is used to judge the result of the Frequency Error, whether it passes or fails. If the measured Frequency Error value is not larger than the limit value, the result is PASS. Otherwise, the result is FAIL. |
| Preset | 100.0 |
| State Saved | Saved in instrument state. |
| Min | 0.0 |
| Max | 300000 |
| Test UP/DOWN | 100 Hz |
| Instrument S/W Revision | A.01.60 or later |

Meas Offset & Interval

This key is active only in 1xEVDO mode.

Allows you to measure the signal occupying different time domain respectively, such as the pilot in first half slot.

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

Meas Offset

Specifies how long after the data capture the signal is observed.

| | |
|-----------------------|---|
| Key Path | Meas Setup, Meas Offset & Interval |
| Mode | 1xEVDO |
| Remote Command | [:SENSe] :EVMQpsk:MEAS:OFFSet <integar> [:SENSe] :EVMQpsk:MEAS:OFFSet? |

| | |
|-------------------------|---|
| Example | EVMQ:MEAS:OFFS 464 EVMQ:MEAS:OFFS? |
| Dependencies/Couplings | Coupled with Pre-Defined Ofs/Intvl. It will change according to the selected type. And Meas Offset + Meas Interval <=2048 |
| Preset | 400 chips |
| State Saved | Saved in instrument state. |
| Min | 0 chips |
| Max | 2047 chips |
| Test UP/DOWN | 10 |
| Instrument S/W Revision | A.01.60 or later |

Meas Interval

Specifies how long the signal is observed.

| | |
|-------------------------|---|
| Key Path | Meas Setup, Meas Offset & Interval |
| Mode | 1xEVDO |
| Remote Command | [:SENSe] :EVMQpsk:MEAS:LENGth < integar > [:SENSe] :EVMQpsk:MEAS:LENGth? |
| Example | EVMQ:MEAS:LENG 96 EVMQ:MEAS:LENG? |
| Dependencies/Couplings | Coupled with Pre-Defined Ofs/Intvl. It will change according to the selected type. And Meas Offset + Meas Interval <=2048 |
| Preset | 224 chips |
| State Saved | Saved in instrument state. |
| Min | 1 chips |
| Max | 2048 chips |
| Test UP/DOWN | 10. |
| Instrument S/W Revision | A.01.60 or later |

Spectrum

Toggles the spectrum function between Normal and Invert. If set to Invert, this function conjugates the spectrum. It is equivalent to taking the negative of the quadrature component in demodulation.

| | |
|----------|--------------------|
| Key Path | Meas Setup |
| Mode | WCDMA, C2K, 1xEVDO |

QPSK EVM Measurement Meas Setup

| | |
|-------------------------|---|
| Remote Command | <code>[:SENSe] :EVMQpsk :SPECTrum NORMal INVert</code> <code>[:SENSe] :EVMQpsk :SPECTrum?</code> |
| Example | <code>EVMQ:SPEC NORM</code> <code>EVMQ:SPEC?</code> |
| Preset | NORMal |
| State Saved | Saved in instrument state. |
| Range | Normal Invert |
| Instrument S/W Revision | A.01.60 or later |

Advanced

Accesses a menu of functions that enable you to set up more specific parameters for the measurement. These parameters include:

- EVM Result I/Q Offset
- IF Gain
- RRC Filter Control
- Filter Alpha
- Chip Rate

| | |
|-------------------------|-------------------|
| Key Path | Meas Setup |
| Instrument S/W Revision | A.01.60 or later |

EVM Result I/Q Offset

Toggles the I/Q Offset to be included or excluded in the measurement result. When it is set as "Standard" (ON), EVM is calculated without any compensation of I/Q offset. When it is set as "Exclude" (OFF), I/Q offset is compensated.

| | |
|-----------------------|--|
| Key Path | Meas Setup, Advanced |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | <code>:CALCulate:EVMQpsk:IQOFFset:INCLude OFF ON 0 1</code> <code>:CALCulate:EVMQpsk:IQOFFset:INCLude?</code> |
| Example | <code>CALC:EVMQ:IQOF:INCL OFF</code> <code>CALC:EVMQ:IQOF:INCL?</code> |
| Preset | ON |
| State Saved | Saved in instrument state. |

| | |
|-------------------------|------------------|
| Range | Std Exclude |
| Instrument S/W Revision | A.01.60 or later |

RRC Filter Control

Allows you to change the status (ON/OFF) of the Root Raised Cosine (RRC) filter. This ON/OFF state change involve measurement restart.

| | |
|-------------------------|---|
| Key Path | Meas Setup, Advanced |
| Mode | WCDMA |
| Remote Command | [:SENSE] :EVMQpsk :FILTer [:RRC] [:STATe] OFF ON 0 1 [:SENSE] :EVMQpsk :FILTer [:RRC] [:STATe] ? |
| Example | EVMQ:FILT ON EVMQ:FILT? |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Filter Alpha

Sets the alpha value for the root raised cosine (RRC) filter. This key is available only in WCDMA mode and while employing an RRC filter.

| | |
|-----------------------|--|
| Key Path | Meas Setup, Advanced |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | [:SENSE] :EVMQpsk :FILTer :ALPHA <real> [:SENSE] :EVMQpsk :FILTer :ALPHA? |
| Example | EVMQ:FILT:ALPH 0.5 EVMQ:FILT:ALPH? |
| Notes | This parameter is available only in the WCDMA mode. In other modes, this key is invisible. |
| Preset | 0.22 |
| State Saved | Saved in instrument state. |
| Min | 0.01 |
| Max | 0.5 |
| Test UP/DOWN | 0.05 |

QPSK EVM Measurement Meas Setup

Instrument S/W Revision A.01.60 or later

Chip Rate

Changes the chip rate for the measurement.

| | |
|-------------------------|--|
| Key Path | Meas Setup, Advanced |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | <code>[:SENSE] :EVMQpsk:CRATe <freq></code> <code>[:SENSE] :EVMQpsk:CRATe?</code> |
| Example | EVMQ:CRAT 2.5 MHz EVMQ:CRAT? |
| Notes | Enter a frequency value to set the chip rate. |
| Preset | WCDMA: 3.84 MHz C2K: 1.2288 MHz 1xEVDO: 1.2288 MHz |
| State Saved | Saved in instrument state. |
| Min | 100 kHz |
| Max | 20 MHz |
| Test UP/DOWN | 1 kHz |
| Instrument S/W Revision | A.01.60 or later |

IF Gain

In order to take full advantage of the RF dynamic range of the analyzer, we will offer a switched IF amplifier with approximately 10 dB of gain. When it can be turned on without an overload, the dynamic range is always better with it on than off. The IF Gain key can be used to set the IF Gain function to Auto, or to On (the extra 10 dB) or Off. These settings affect sensitivity and IF overloads.

Sets the IF Gain function to Auto, Low Gain or High Gain. These settings affect sensitivity and IF overloads.

| | |
|-------------------------|-----------------------------|
| Key Path | Meas Setup, Advanced |
| Instrument S/W Revision | A.01.60 or later |

IF Gain Auto Activates the auto rules for IF Gain

| | |
|----------|--------------------------------------|
| Key Path | Meas Setup, Advanced, IF Gain |
| Mode | WCDMA, C2K, 1xEVDO |

| | |
|-------------------------|--|
| Remote Command | [:SENSE] :EVMQpsk : IF :GAIN :AUTO [:STATe] ON OFF 1 0 [:SENSE] :EVMQpsk : IF :GAIN :AUTO [:STATe] ? |
| Example | EVMQ : IF :GAIN :AUTO OFF EVMQ : IF :GAIN :AUTO ? |
| Dependencies/Couplings | 'When either the auto attenuation works (for example, with electrical attenuator), or the optimize mechanical attenuator range is requested, the IF Gain setting is changed as following rule. Auto sets IF Gain to On under any of the following conditions: the input attenuator is set to 0 dB, the preamp is turned on, or the Max Mixer Level is -20 dBm or lower. For other settings, Auto sets IF Gain to Off. |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | Auto Man |
| Instrument S/W Revision | A.01.60 or later |

IF Gain State Selects the range of IF gain.

| | |
|-------------------------|---|
| Key Path | Meas Setup, Advanced, IF Gain |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | [:SENSE] :EVMQpsk : IF :GAIN [:STATe] ON OFF 1 0 [:SENSE] :EVMQpsk : IF :GAIN [:STATe] ? |
| Example | EVMQ:IF:GAIN ON EVMQ:IF:GAIN ? |
| Notes | where ON = high gain OFF = low gain |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Low Gain (Best for Large Signals) High Gain (Best Noise Level) |
| Instrument S/W Revision | A.01.60 or later |

Meas Preset

Restores all the measurement parameters to their default values.

| | |
|-----------------------|--------------------|
| Key Path | Meas Setup |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CONFigure:EVMQpsk |

QPSK EVM Measurement Meas Setup

| | |
|-------------------------|-------------------------------------|
| Example | CONF:EVMQ |
| Notes | Restore all defaults of parameters. |
| Instrument S/W Revision | A.01.60 or later |

Mode

See “[Mode](#)” on page 1133 in the section "Common Measurement Functions" for more information.

Mode Setup

See “[Mode Setup](#)” on page 1145 in the section "Common Measurement Functions" for more information.

Peak Search

Accesses a menu that enables you to control the peak search function and places a marker on the trace point with highest peak.

| | |
|-------------------------|--|
| Key Path | Front panel key |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M AXimum |
| Example | CALC:EVMQ:MARK2:MAX |
| Notes | This command does not work when the selected marker is located on the polar trace. In this case, the command is ignored. |
| Instrument S/W Revision | A.01.60 or later |

Next Peak

Moves the selected marker to the peak that has the next highest amplitude that is less than the marker's current value.

| | |
|-------------------------|--|
| Key Path | Peak Search |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M AXimum:NEXT |
| Example | CALC:EVMQ:MARK2:MAX:NEXT |
| Notes | This command does not work when the selected marker is located on the polar trace. In this case, the command is ignored. |
| Instrument S/W Revision | A.01.60 or later |

Next Pk Right

Moves the selected marker to the nearest peak to the right of the current marker that meets all enabled peak criteria.

| | |
|-----------------------|---|
| Key Path | Peak Search |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M AXimum:RIGHT |
| Example | CALC:EVMQ:MARK2:MAX:RIGH |

QPSK EVM Measurement

Peak Search

| | |
|-------------------------|--|
| Notes | This command does not work when the selected marker is located on the polar trace. In this case, the command is ignored. |
| Instrument S/W Revision | A.01.60 or later |

Next Pk Left

Moves the selected marker to the nearest peak to the left of the current marker that meets all enabled peak criteria.

| | |
|-------------------------|--|
| Key Path | Peak Search |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M AXimum:LEFT |
| Example | CALC:EVMQ:MARK2:MAX:LEFT |
| Notes | This command does not work when the selected marker is located on the polar trace. In this case, the command is ignored. |
| Instrument S/W Revision | A.01.60 or later |

Marker Delta

Sets the control mode for the selected marker to **Delta** mode. This menu key performs the same function as the Delta 1-of-N selection key in the Marker menu. It is duplicated in the Peak Search Menu to allow you the convenience to simultaneously perform a peak search and change the marker control mode to Delta without having to access two separate menus.

| | |
|-------------------------|--------------------|
| Key Path | Peak Search |
| Instrument S/W Revision | A.01.60 or later |

Pk-Pk Search

Finds and displays the amplitude and frequency (or time, if in zero span) differences between the highest and lowest value on the y-axis.

| | |
|------------------------|--|
| Key Path | Peak Search |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :P TPeak |
| Example | CALC:EVMQ:MARK:PTP |
| Notes | This command does not work when the selected marker is located on the polar trace. In this case, the command is ignored. |
| Dependencies/Couplings | This key is not available (key is grayed out) when Coupled Markers is on. |

Instrument S/W Revision A.01.60 or later

Min Search

Moves the selected marker to the minimum value on the y-axis of the current trace.

| | |
|-------------------------|--|
| Key Path | Peak Search |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :CALCulate:EVMQpsk:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M INimum |
| Example | CALC:EVMQ:MARK:MIN |
| Notes | This command does not work when the selected marker is located on the polar trace. In this case, the command is ignored. |
| Instrument S/W Revision | A.01.60 or later |

Recall

See “[Recall](#)” on page 1149 in the section "Common Measurement Functions" for more information.

Restart

See “Restart” on page 1167 in the section "Common Measurement Functions" for more information.

Save

See “[Save](#)” on page 1169 in the section "Common Measurement Functions" for more information.

Single

See “[Single \(Single Measurement/Sweep\)](#)” on page 1191 in the section "Common Measurement Functions" for more information.

Source

See “[Source](#)” on page 1193 in the section "Common Measurement Functions" for more information.

SPAN X Scale

Accesses a menu of functions that enable you set the horizontal scale parameters.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

X Ref Value

Controls the reference value of the X scale of the current measurement

| | |
|-------------------------|---------------------|
| Key Path | SPAN X Scale |
| Instrument S/W Revision | A.01.60 or later |

Ref Value (X Scale, Magnitude Error Window)

Sets the chip reference value on the horizontal axis in the magnitude error window.

| | |
|-------------------------|---|
| Key Path | SPAN X Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RLEVel <real> :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RLEVel ? |
| Example | DISP:EVMQ:VIEW2:WIND:TRAC:X:RLEV 1001 DISP:EVMQ:VIEW2:WIND:TRAC:X:RLEV? |
| Notes | This key is for control of the reference value of the X scale of the focused window of the selected view. |
| Dependencies/Couplings | When this parameter has been set, XScaleAutoMag turns off. |
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Min | -5000000 |
| Max | 5000000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 10 |
| Instrument S/W Revision | A.01.60 or later |

QPSK EVM Measurement SPAN X Scale

Ref Value (X Scale, Phase Error Window)

Sets the chip reference value on the horizontal axis in the phase error window.

| | |
|-------------------------|---|
| Key Path | SPAN X Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALE]:RLEVe1 <real> :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALE]:RLEVe1? |
| Example | DISP:EVMQ:VIEW2:WIND2:TRAC:X:RLEV 1001 DISP:EVMQ:VIEW2:WIND2:TRAC:X:RLEV? |
| Notes | This key is for control of the reference value of the X scale of the focused window of the selected view. |
| Dependencies/Couplings | When this parameter has been set, XScaleAutoMag turns off. |
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Min | -5000000 |
| Max | 5000000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 10 |
| Instrument S/W Revision | A.01.60 or later |

Ref Value (X Scale, EVM Window)

Sets the chip reference value on the horizontal axis in the EVM window.

| | |
|------------------------|---|
| Key Path | SPAN X Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALE]:RLEVe1 <real> :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALE]:RLEVe1? |
| Example | DISP:EVMQ:VIEW2:WIND3:TRAC:X:RLEV 1001 DISP:EVMQ:VIEW2:WIND3:TRAC:X:RLEV? |
| Notes | This key is for control of the reference value of the X scale of the focused window of the selected view. The mode must be in W-CDMA, 1xEVDO or cdma2000 to use this function. Use INSTRument:SElect to set this mode. |
| Dependencies/Couplings | When this parameter has been set, XScaleAutoEvm turns off. |

| | |
|-------------------------|----------------------------|
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Min | -5000000 |
| Max | 5000000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 10 |
| Instrument S/W Revision | A.01.60 or later |

X Scale/Div

Sets the horizontal scale by changing a value per division.

| | |
|-------------------------|---------------------|
| Key Path | SPAN X Scale |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div (X Scale, Magnitude Error Window)

Sets the horizontal scale by changing a chip value per division in the magnitude error window.

| | |
|------------------------|--|
| Key Path | SPAN X Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDIVis ion <real> :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:PDIVis ion? |
| Example | DISP:EVMQ:VIEW2:WIND:TRAC:X:PDIV 1001 DISP:EVMQ:VIEW2:WIND:TRAC:X:PDIV? |
| Notes | This key is for Scale/Div control. |
| Dependencies/Couplings | When this parameter has been set, XScaleAutoMag turns off. |
| Preset | WCDMA : 256 C2K : 51.2 1xEVDO : 25.6 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 500000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 10 |

QPSK EVM Measurement SPAN X Scale

Instrument S/W Revision A.01.60 or later

Scale/Div (X Scale, Phase Error Window)

Sets the horizontal scale by changing a chip value per division in the phase error window.

| | |
|-------------------------|--|
| Key Path | SPAN X Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISP:play:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALE]:PDIVisio n <real> :DISP:play:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALE]:PDIVisio n? |
| Example | DISP:EVMQ:VIEW2:WIND2:TRAC:X:PDIV 1001 DISP:EVMQ:VIEW2:WIND2:TRAC:X:PDIV? |
| Notes | This key is for Scale/Div control. |
| Dependencies/Couplings | When this parameter has been set, XScaleAutoPhase turns off. |
| Preset | WCDMA : 256 C2K : 51.2 1xEVDO : 25.6 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 500000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 10 |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div (X Scale, EVM Window)

Sets the horizontal scale by changing a chip value per division in the EVM window.

| | |
|-----------------------|--|
| Key Path | SPAN X Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISP:play:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALE]:PDIVisio n <real> :DISP:play:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALE]:PDIVisio n? |
| Example | DISP:EVMQ:VIEW2:WIND3:TRAC:X:PDIV 1001 DISP:EVMQ:VIEW2:WIND3:TRAC:X:PDIV? |

| | |
|-------------------------|--|
| Notes | This key is for Scale/Div control. |
| Dependencies/Couplings | When this parameter has been set, XScaleAutoEvm turns off. |
| Preset | WCDMA : 256 C2K : 51.2 1xEVDO : 25.6 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 500000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 10 |
| Instrument S/W Revision | A.01.60 or later |

X Ref Position

Sets the reference position of the X axis on the display. The reference position can be set to Left, Ctr (center) or Right.

| | |
|-------------------------|---------------------|
| Key Path | SPAN X Scale |
| Instrument S/W Revision | A.01.60 or later |

Ref Position (X Scale, Magnitude Error Window)

Sets the reference position of the X axis for the magnitude error result on the display.

| | |
|------------------------|--|
| Key Path | SPAN X Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOSit ion LEFT CENTer RIGHT :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:RPOSit ion? |
| Example | DISP:EVMQ:VIEW2:WIND:TRAC:X:RPOS CENT DISP:EVMQ:VIEW2:WIND:TRAC:X:RPOS? |
| Dependencies/Couplings | If X Scale Auto Mag is On and the parameter is changed, X Scale Ref Mag will change to automatically adjust the trace to one that is most suitable for the window. |
| Preset | LEFT |
| State Saved | Saved in instrument state. |
| Range | Left Center Right |

QPSK EVM Measurement SPAN X Scale

Instrument S/W Revision A.01.60 or later

Ref Position (X Scale, Phase Error Window)

Sets the reference position of the X axis for the phase error result on the display.

| | |
|-------------------------|--|
| Key Path | SPAN X Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:RPOSitio n LEFT CENTer RIGHT :DISPlay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALe]:RPOSitio n? |
| Example | DISP:EVMQ:VIEW2:WIND2:TRAC:X:RPOS RIGH DISP:EVMQ:VIEW2:WIND2:TRAC:X:RPOS? |
| Dependencies/Couplings | If X Scale Auto Phase is On and the parameter is changed, X Scale Ref Phase will change to automatically adjust the trace to one that is most suitable for the window. |
| Preset | LEFT |
| State Saved | Saved in instrument state. |
| Range | Left Center Right |
| Instrument S/W Revision | A.01.60 or later |

Ref Position (X Scale, EVM Window)

Sets the X axis reference position in the EVM window.

| | |
|------------------------|--|
| Key Path | SPAN X Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:RPOSitio n LEFT CENTer RIGHT :DISPlay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALe]:RPOSitio n? |
| Example | DISP:EVMQ:VIEW2:WIND3:TRAC:X:RPOS RIGH DISP:EVMQ:VIEW2:WIND3:TRAC:X:RPOS? |
| Dependencies/Couplings | If X Scale Auto EVM is On and the parameter is changed, X Scale Ref EVM will change to automatically adjust the trace to one that is most suitable for the window. |
| Preset | LEFT |
| State Saved | Saved in instrument state. |
| Range | Left Center Right |

Instrument S/W Revision A.01.60 or later

X Auto Scaling

Determines the scale per division and reference value for the X axis based on the current measurement results.

Key Path **SPAN X Scale**

Instrument S/W Revision A.01.60 or later

Auto Scaling (X Scale, Magnitude Error Window)

When Auto Scaling is On and the Restart front-panel key is pressed, this function automatically displays the scale per division and reference value results in the magnitude error window.

Key Path **SPAN X Scale**

Mode WCDMA, C2K, 1xEVDO

Remote Command :DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUPLE
ON|OFF|0|1
:DISPlay:EVMQpsk:VIEW2:WINDow[1]:TRACe:X[:SCALe]:COUPLE
?

Example DISP:EVMQ:VIEW2:WIND:TRAC:X:COUP ON
DISP:EVMQ:VIEW2:WIND:TRAC:X:COUP?

Notes When On, the Scale/Div, Ref Value, and Ref Position are reset to the default values.

The mode must be W-CDMA, 1xEVDO or cdma2000 to use this function.
Use :INSTrument:SELEctto set this mode.

Dependencies/Couplings Upon pressing the Restart front-panel key, the scale coupling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Scale Coupling automatically changes to Off.

Preset ON

State Saved Saved in instrument state.

Range On|Off

Instrument S/W Revision A.01.60 or later

Auto Scaling (X Scale, Phase Error Window)

When Auto Scaling is On, upon pressing the Restart front-panel key, this function automatically displays

QPSK EVM Measurement

SPAN X Scale

the scale per division and reference value results in the phase error window.

| | |
|-------------------------|---|
| Key Path | SPAN X Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISP:lay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALE]:COUPle ON OFF 0 1 :DISP:lay:EVMQpsk:VIEW2:WINDow2:TRACe:X[:SCALE]:COUPle? |
| Example | DISP:EVMQ:VIEW2:WIND2:TRAC:X:COUP OFF DISP:EVMQ:VIEW2:WIND2:TRAC:X:COUP? |
| Notes | When ON, the Scale/Div, Ref Value, and Ref Position are turned back to the default values. The mode must be in W-CDMA, 1xEVDO or cdma2000 to use this function. Use :INSTrument:SElectto set this mode. |
| Dependencies/Couplings | Upon pressing the Restart front-panel key, the scale coupling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Scale Coupling automatically changes to Off. |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Auto Scaling (X Scale, Evm Window)

When Auto Scaling is On and the Restart front-panel key is pressed, this function automatically displays the scale per division and reference value results in the EVM window.

| | |
|-----------------------|--|
| Key Path | SPAN X Scale |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISP:lay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALE]:COUPle ON OFF 0 1 :DISP:lay:EVMQpsk:VIEW2:WINDow3:TRACe:X[:SCALE]:COUPle? |
| Example | DISP:EVMQ:VIEW2:WIND3:TRAC:X:COUP ON DISP:EVMQ:VIEW2:WIND3:TRAC:X:COUP? |
| Notes | When ON, the Scale/Div, Ref Value, and Ref Position are reset to the default values. The mode must be in W-CDMA, 1xEVDO or cdma2000 to use this function. Use :INSTrument:SElectto set this mode. |

| | |
|-------------------------|---|
| Dependencies/Couplings | Upon pressing the Restart front-panel key, the scale coupling function automatically determines the scale per division and reference values based on the measurement results if this parameter is set to On. When you set a value to either Scale/Div or Ref Value manually, Scale Coupling automatically changes to Off. |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Sweep/Control

Accesses a menu that enables you to pause and restart the measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front panel key |
| Instrument S/W Revision | A.01.60 or later |

Pause

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing the Resume key resumes the measurement from the point it was at when paused. See [“Pause/Resume” on page 1198](#) in “Common Measurement Functions” section for more details.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Trace/Detector

There is no Trace/Detector functionality supported in QPSK EVM. This front panel key will display a blank menu when pressed.

| | |
|-------------------------|------------------------|
| Key Path | Front Panel Key |
| Instrument S/W Revision | A.01.60 or later |

View/Display

Accesses a menu of functions that enable you to set up and control the display parameters for the current measurement.

This topic contains the following sections:

[“View Selection by name \(SCPI Only\)” on page 916](#)

[“View Selection by number \(SCPI only\)” on page 916](#)

View Selection by name (SCPI Only)

Selects the format for the measurement results view.

| | |
|-------------------------|--|
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW[:SElect] POLar ERRor :DISPlay:EVMQpsk:VIEW[:SElect]? |
| Example | DISP:EVMQ:VIEW ERR DISP:EVMQ:VIEW? |
| Dependencies/Couplings | Changing parameter of "ViewNum" (:DISPlay:EVMQpsk:VIEW:NSElect) also changes this parameter. |
| Preset | POLar |
| State Saved | Saved in instrument state. |
| Range | I/Q Measured Polar Vector I/Q Error |
| Instrument S/W Revision | A.01.60 or later |

View Selection by number (SCPI only)

Displays the numeric values of the measurement results.

| | |
|------------------------|--|
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW:NSElect <integer> :DISPlay:EVMQpsk:VIEW:NSElect? |
| Example | DISP:EVMQ:VIEW:NSEL 2 DISP:EVMQ:VIEW:NSEL? |
| Dependencies/Couplings | Changing parameter of "View" (:DISPlay:EVMQpsk:VIEW[:SElect]) also changes this parameter. |
| Preset | 1 |
| State Saved | Saved in instrument state. |

| | |
|-------------------------|------------------------|
| Min | 1 |
| Max | 2 |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Display

Accesses a menu of functions that enable you to set the display parameters.

See [“Display” on page 1273](#) in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|---------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

I/Q Measured Polar Graph

Provides a combination view of the I/Q demodulated signals using vector lines to connect the chip dots. IQ Measured Polar Graph accesses a menu that enables you to select more advanced settings.

The view consists of the following windows:

[“Polar Graph Window” on page 920](#)

[“Numeric Results Window” on page 920](#)

Figure 14-1 **I/Q Measured Polar Vector & Constln**

QPSK EVM Measurement
View/Display

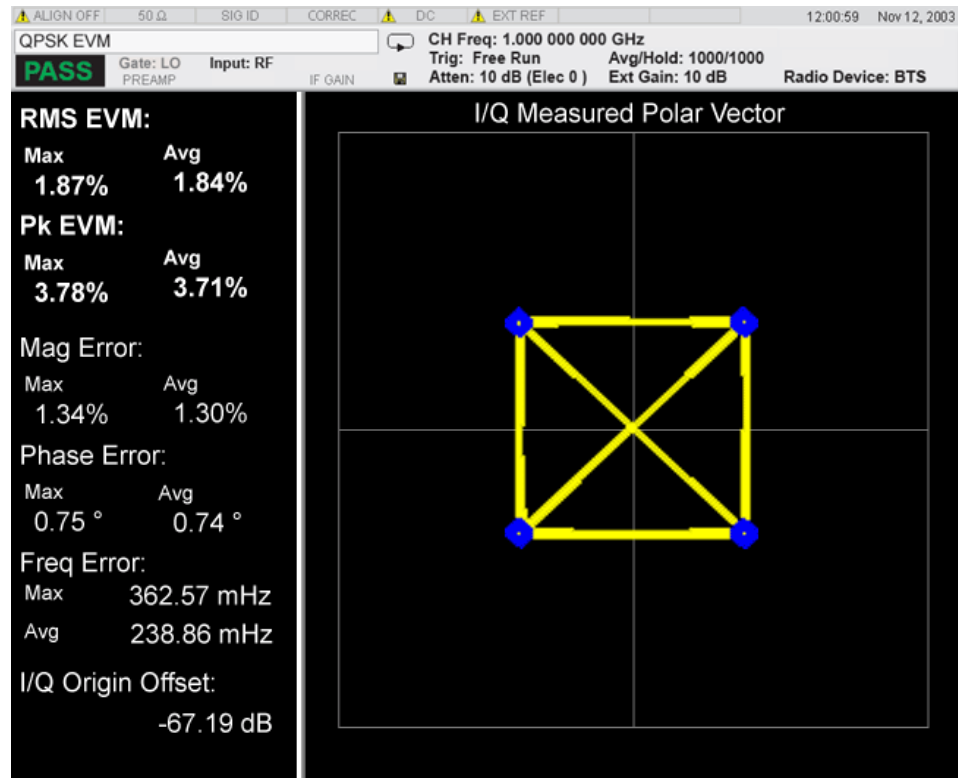


Figure 14-2 I/Q Measured Polar Constln


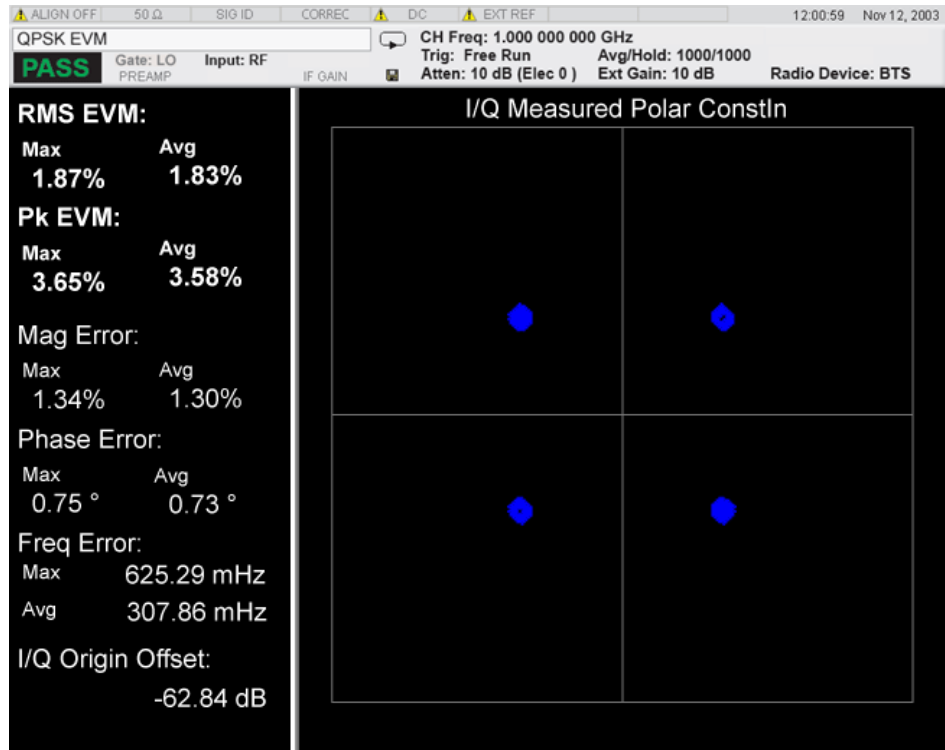


Figure 14-3 I/Q Measured Polar Vector

QPSK EVM Measurement
View/Display

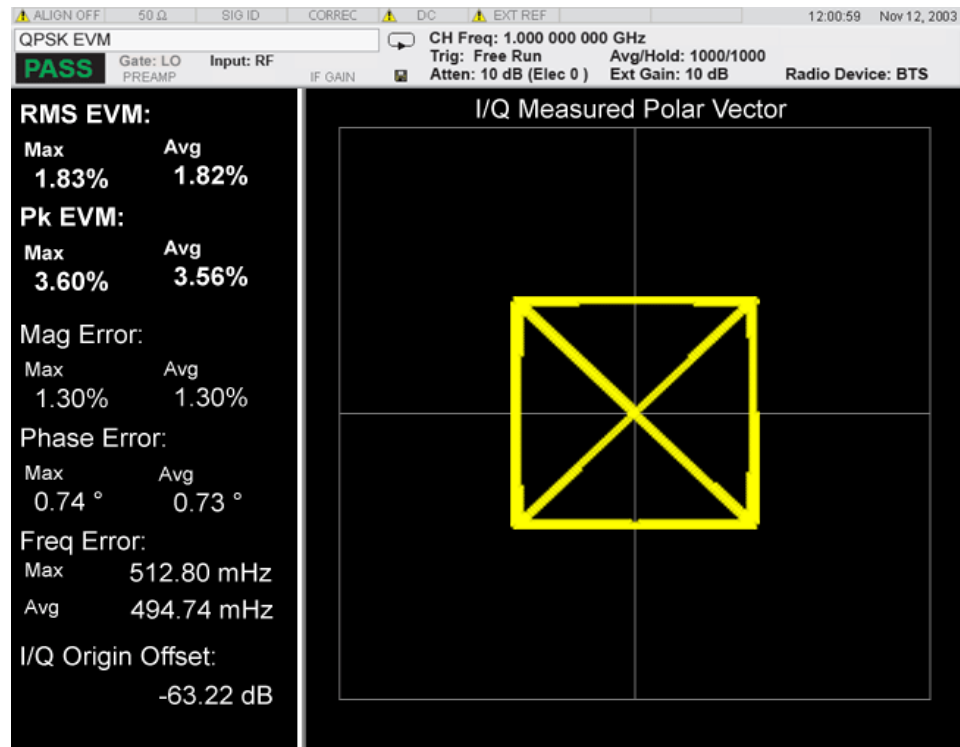

Polar Graph Window

Polar Graph consists of Constellation points and Vector line.

| | |
|---------------------|-------------------------|
| Marker Trace | Yes |
| Corresponding Trace | Display I/Q trace (n=5) |

Numeric Results Window

Shows numeric results of the I/Q polar graph.

| Name | Type | Description | Unit | Format |
|----------|---------|--------------------------------------|---------|---------|
| RMS EVM | float64 | EVM over the entire measurement area | percent | XX.XX % |
| Peak EVM | float64 | peak EVM in the measurement area. | percent | XX.XX % |

| | | | | | |
|-------------------|-----|---------|---|---------|----------|
| Mag Error | Avg | float64 | averaged magnitude error over the entire measurement area | percent | XX.XX % |
| | Max | float64 | maximum magnitude error over the entire measurement area | percent | XX.XX % |
| Phase Error | Avg | float64 | averaged phase error over the entire measurement area | ° | XX.XX ° |
| | Max | float64 | maximum phase error over the entire measurement area | ° | XX.XX ° |
| Freq Error | Avg | float64 | averaged frequency error in the measured signal. | Hz | XX.XX Hz |
| | Max | float64 | maximum frequency error in the measured signal | Hz | XX.XX Hz |
| I/Q Origin Offset | | float64 | the I and Q error (magnitude squared) offset from the origin. | dB | XX.XX dB |

Key Path **View/Display**
Instrument S/W Revision A.01.60 or later

I/Q Polar Vec/Constln

Specifies the format of the polar vector graph display. The following display options are available:

- Vector and Constellation
- Vector Only
- Constellation Only

Key Path **View/Display**
Mode WCDMA, C2K, 1xEVDO
Remote Command :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:POLar VC|VECTor|CONStln
:DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:POLar?
Example DISP:EVMQ:VIEW:WIND2:TRAC:POL VECT
DISP:EVMQ:VIEW:WIND2:TRAC:POL?

QPSK EVM Measurement View/Display

| | |
|-------------------------|---|
| Notes | Allows to specify the format of the polar vector graph display by: Vector and Constellation Vector Only Constellation Only |
| Preset | VC |
| State Saved | Saved in instrument state. |
| Range | Vec & Constln Vector Constellation |
| Instrument S/W Revision | A.01.60 or later |

Chip Offset

Sets the chip offset number from the first chip in a measured signal.

| | |
|-------------------------|--|
| Key Path | View/Display, Display |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:COFFset <integer> :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:COFFset? |
| Example | DISP:EVMQ:VIEW:WIND2:TRAC:COFF 1001 DISP:EVMQ:VIEW:WIND2:TRAC:COFF? |
| Notes | The number of chip offset from the first chip in a measured signal. |
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | Meas Interval – I/Q Chips |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1 |
| Instrument S/W Revision | A.01.60 or later |

I/Q Chips

Specifies the number of I/Q chips used to display the I/Q waveforms.

| | |
|----------|------------------------------|
| Key Path | View/Display, Display |
| Mode | WCDMA, C2K, 1xEVDO |

| | |
|-------------------------|--|
| Remote Command | :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:IQCHips <integer> :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:IQCHips? |
| Example | DISP:EVMQ:VIEW:WIND2:TRAC:IQCH 1001 DISP:EVMQ:VIEW:WIND2:TRAC:IQCH? |
| Dependencies/Couplings | This parameter is dependent on Meas Interval and cannot be set to a value greater than Meas Interval. |
| Preset | C2K: 512 WCDMA: 2560 1xEVDO: 2560 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | WCDMA: 5120 C2K:1536 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1 |
| Instrument S/W Revision | A.01.60 or later |

Interpolation

Toggles the interpolation function from On to Off. If set to On, the vector lines between chip dots are converted into smooth curves by the interpolation function.

| | |
|-------------------------|---|
| Key Path | View/Display, Display |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:INTPolation[:STATe] OFF ON 0 1 :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:INTPolation[:STATe] ? |
| Example | DISP:EVMQ:VIEW:WIND2:TRAC:INTP ON DISP:EVMQ:VIEW:WIND2:TRAC:INTP? |
| Notes | If set to ON, the vector lines between chip dots are converted into smoothed curves by the interpolation function. |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

+45° Rotation

Toggles the state of the rotation of the I/Q polar trace. If set to On, the I/Q polar trace is rotated by 45 degrees to provide a rectangular display.

| | |
|-------------------------|---|
| Key Path | View/Display, Display |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:ROTQpi[:STATE] OFF ON 0 1 :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:ROTQpi[:STATE]? |
| Example | DISP:EVMQ:VIEW:WIND2:TRAC:ROTQ ON DISP:EVMQ:VIEW:WIND2:TRAC:ROTQ? |
| Notes | Enables you to toggle whether the I/Q polar trace is rotated by 45 degrees to provide a rectangular display. |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Full Vector

Toggles the gray background from On to Off when displaying the full measured trace or the selected vector on the display.

| | |
|-------------------------|---|
| Key Path | View/Display, Display |
| Mode | WCDMA, C2K, 1xEVDO |
| Remote Command | :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:FVEctor[:STATE] OFF ON 0 1 :DISPlay:EVMQpsk:VIEW[1]:WINDow2:TRACe:FVEctor[:STATE]? |
| Example | DISP:EVMQ:VIEW:WIND2:TRAC:FVEC ON DISP:EVMQ:VIEW:WIND2:TRAC:FVEC? |
| Notes | This is useful when you want to observe the full vector and the selected vector set by I/Q Chips and Chip Offset simultaneously. |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

I/Q Error View


Provides a combination view. This view consists of four windows:

“Mag Error vs. Symbol Window” on page 925

“Phase Error vs. Symbol Window” on page 926

“EVM vs. Symbol Window” on page 926

“Numeric Results Window” on page 926

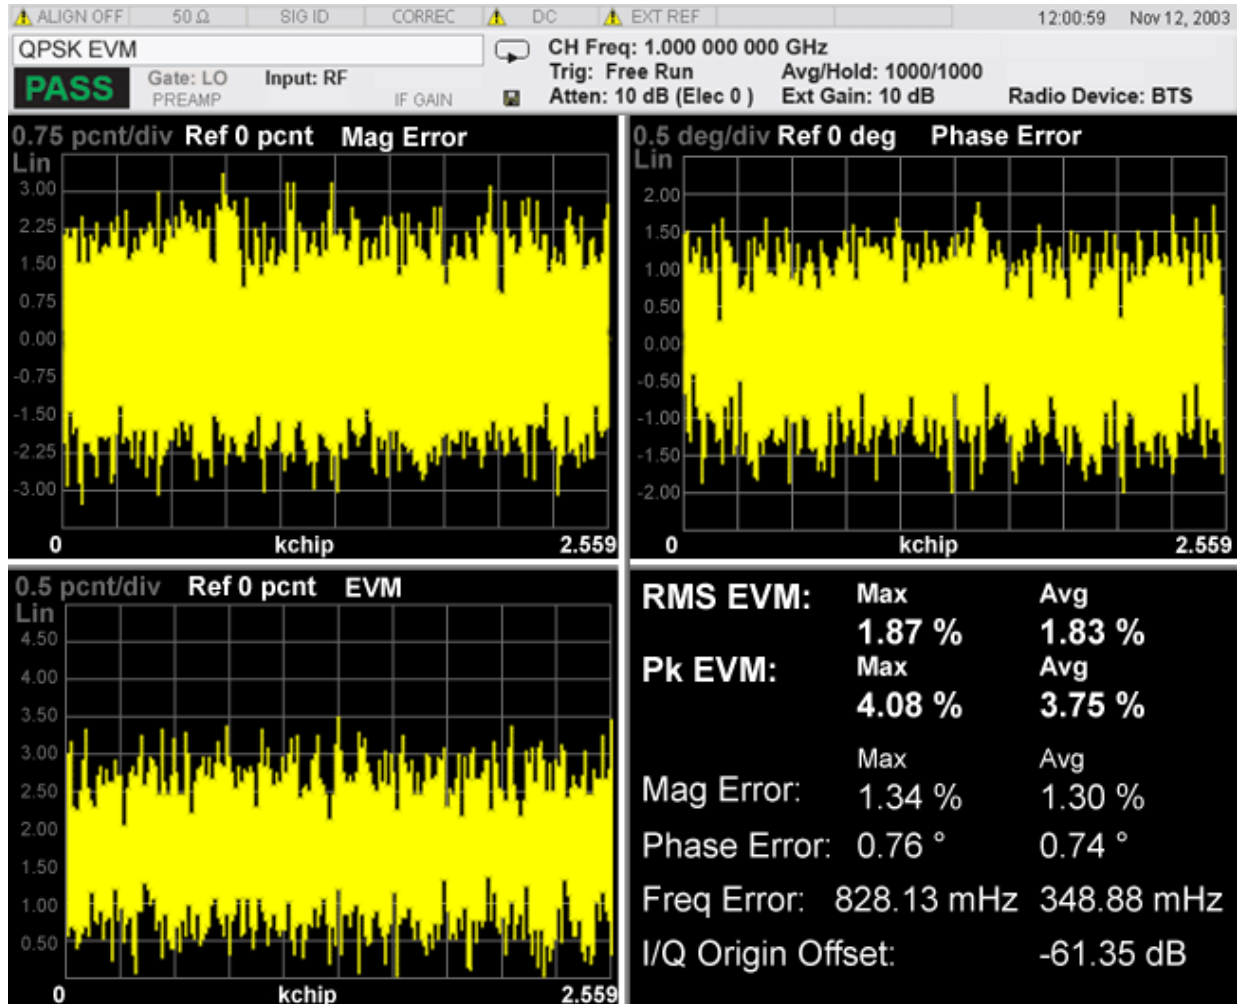

Mag Error vs. Symbol Window

Provides Magnitude Error vs. Symbol results.

| | |
|---------------------|-----------------------------|
| Marker Trace | Yes |
| Corresponding Trace | Magnitude Error trace (n=3) |

Phase Error vs. Symbol Window

Provides Magnitude Error vs. Symbol results.

| | |
|---------------------|-------------------------|
| Marker Trace | Yes |
| Corresponding Trace | Phase Error trace (n=4) |

EVM vs. Symbol Window

Provides EVM vs. Symbol results.

| | |
|---------------------|-----------------|
| Marker Trace | Yes |
| Corresponding Trace | EVM trace (n=2) |

Numeric Results Window

Shows numeric results as the same as the numeric results of the I/Q polar graph.

| | |
|-------------------------|---------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

The monitor spectrum measurement is used as a quick, convenient means of looking at the entire spectrum. While the look and feel are similar to the Spectrum Analyzer mode, the functionality is greatly reduced for easy operation. The main purpose of the measurement is to show the spectrum. The default span should cover an appropriate frequency range of the application. For measurement results and views, see [“View/Display” on page 970](#).

This topic contains the following sections:

[“Measurement Commands for Monitor Spectrum” on page 927](#)

[“Remote Command Results for Monitor Spectrum Measurement” on page 927](#)

Measurement Commands for Monitor Spectrum

The following commands can be used to retrieve the measurement results:

```
:CONFigure:MONitor
```

```
:CONFigure:MONitor:NDEFault
```

```
:INITiate:MONitor
```

```
:FETCh:MONitor [n] ?
```

```
:READ:MONitor [n] ?
```

```
:MEASure:MONitor [n] ?
```

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1115](#).

Remote Command Results for Monitor Spectrum Measurement

| n | Results Returned |
|------------------------|---|
| n=1 (or not specified) | Returns trace1 data with comma separated floating numbers |
| n=2 | Returns trace2 data with comma separated floating numbers |
| n=3 | Returns trace3 data with comma separated floating numbers |

| Key Path | Meas |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters. These functions control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Ref Value

Sets the absolute power reference value. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | All except SA and BASIC |
| Remote Command | :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEV el <real> :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEV el? |
| Example | DISP:MON:VIEW:WIND:TRAC:Y:RLEV 2.0 DISP:MON:VIEW:WIND:TRAC:Y:RLEV? |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off. |
| Preset | 10.00 dBm |
| State Saved | Saved in instrument state. |
| Min | -250.00 dBm |
| Max | 250.00 dBm |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 10.0 dB |
| Instrument S/W Revision | A.01.60 or later |

Attenuation

Accesses a menu of functions that enable you to change the attenuation settings.

See AMPTD Y Scale, “[Attenuation](#)” on page 1037 in the “Common Measurement Functions” section

for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div

Sets the logarithmic units per vertical graticule division on the display. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | All except SA and BASIC |
| Remote Command | :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision <rel_ampl> :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIV ision? |
| Example | DISP:MON:VIEW:WIND:TRAC:Y:PDIV 5.0 dB DISP:MON:VIEW:WIND:TRAC:Y:PDIV? |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off. |
| Preset | 10.00 dB |
| State Saved | Saved in instrument state. |
| Min | 0.10 dB |
| Max | 20.00 dB |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1, 2, 5, 10... |
| Instrument S/W Revision | A.01.60 or later |

Presel Center

See AMPTD Y Scale, “[Presel Center](#)” on page 1048 in the “Common Measurement Functions” section for more information.

Presel Adjust

See AMPTD Y Scale, “[Preselector Adjust](#)” on page 1050 in the “Common Measurement Functions” section for more information.

Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See AMPTD Y Scale, “Internal Preamp” on page 1051 in the “Common Measurement Functions” section for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Ref Position

Positions the reference level at the top, center or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | All except SA and BASIC |
| Remote Command | :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOS ition TOP CENTer BOTTom :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOS ition? |
| Example | DISP:MON:VIEW:WIND:TRAC:Y:RPOS CENT DISP:MON:VIEW:WIND:TRAC:Y:RPOS? |
| Preset | TOP |
| State Saved | Saved in instrument state. |
| Range | Top Ctr Bot |
| Instrument S/W Revision | A.01.60 or later |

Auto Scaling

Toggles the Auto Scaling function between On and Off.

| | |
|-----------------------|--|
| Key Path | AMPTD Y Scale |
| Mode | All except SA and BASIC |
| Remote Command | :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:COUP le 0 1 OFF ON :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:COUP le? |
| Example | DISP:MON:VIEW:WIND:TRAC:Y:COUP ON DISP:MON:VIEW:WIND:TRAC:Y:COUP? |

| | |
|-------------------------|--|
| Dependencies/Couplings | <p>When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results.</p> <p>When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.</p> |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Auto Couple

See “**AUTO COUPLE**” on page 1055 in the section “Common Measurement Functions” for more information.

BW

Accesses a menu that enables you to specify the resolution bandwidth functions that control the bandwidth and filter selection.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Res BW

Sets the resolution bandwidth for the current measurement. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

| | |
|-------------------------|--|
| Key Path | BW |
| Mode | All except SA and BASIC |
| Remote Command | [:SENSE]:MONitor:BANDwidth[:RESolution] <freq> [:SENSE]:MONitor:BANDwidth[:RESolution]? [:SENSE]:MONitor:BANDwidth[:RESolution]:AUTO OFF ON 0 1 [:SENSE]:MONitor:BANDwidth[:RESolution]:AUTO? |
| Example | MON:BAND 2.4 MHz MON:BAND? MON:BAND:AUTO ON MON:BAND:AUTO? |
| Preset | WCDMA: Automatically calculated WIMAX OFDMA: 100kHz C2K: Automatically calculated PN: Automatically calculated GSM/EDGE: Automatically calculated TD-SCDMA: Automatically calculated 1xEVDO: 30kHz |
| State Saved | Saved in instrument state. |
| Min | 1.0 Hz |
| Max | 8.0 MHz |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | Yes |
| Instrument S/W Revision | A.01.60 or later |

Video BW

Changes the analyzer post-detection filter.

| | |
|-------------------------|---|
| Key Path | BW |
| Mode | All except SA and BASIC |
| Remote Command | [:SENSE]:MONitor:BANDwidth:VIDeo <bandwidth> [:SENSE]:MONitor:BANDwidth:VIDeo? [:SENSE]:MONitor:BANDwidth:VIDeo:AUTO ON OFF 1 0 [:SENSE]:MONitor:BANDwidth:VIDeo:AUTO? |
| Example | MON:BAND:VID 10 MHz MON:BAND:VID? MON:BAND:VID:AUTO OFF MON:BAND:VID:AUTO? |
| Preset | WCDMA: Automatically calculated WIMAX OFDMA: 1MHz C2K: Automatically calculated PN: Automatically calculated GSM/EDGE: Automatically calculated TD-SCDMA: Automatically calculated 1xEVDO: 300kHz |
| State Saved | Saved in instrument state. |
| Min | 1 Hz |
| Max | 50 MHz |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | Yes |
| Instrument S/W Revision | A.01.60 or later |

VBW:3dB RBW

Selects the ratio between the video bandwidth and the equivalent 3 dB resolution bandwidth to be used for setting the VBW when VBW is in Auto.

| | |
|----------|-------------------------|
| Key Path | BW |
| Mode | All except SA and BASIC |

| | |
|-------------------------|--|
| Remote Command | [:SENSe]:MONitor:BANDwidth:VIDeo:RATio <real> [:SENSe]:MONitor:BANDwidth:VIDeo:RATio? [:SENSe]:MONitor:BANDwidth:VIDeo:RATio:AUTO OFF ON 0 1 [:SENSe]:MONitor:BANDwidth:VIDeo:RATio:AUTO? |
| Example | MON:BAND:VID:RAT 2 MON:BAND:VID:RAT? MON:BAND:VID:RAT:AUTO 0 MON:BAND:VID:RAT:AUTO? |
| Preset | 1 ON |
| State Saved | Saved in instrument state. |
| Min | 0.00001 |
| Max | 3000000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1...3...10 sequence |
| Instrument S/W Revision | A.01.60 or later |

Span:3dB RBW

Selects the ratio between span and resolution bandwidth.

The default setting is Auto with a Span:3 dB RBW ratio of 106:1. You can manually change this ratio by pressing the key, entering a new value, and pressing Enter.

| | |
|-----------------------|---|
| Key Path | BW |
| Mode | All except SA and BASIC |
| Remote Command | [:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]: RATio <integer> [:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]: RATio? [:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]: RATio:AUTO OFF ON 0 1 [:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]: RATio:AUTO? |
| Example | MON:FREQ:SPAN:BAND:RAT 200 MON:FREQ:SPAN:BAND:RAT? MON:FREQ:SPAN:BAND:RAT:AUTO ON MON:FREQ:SPAN:BAND:RAT:AUTO? |

Monitor Spectrum Measurement BW

| | |
|-------------------------|----------------------------|
| Preset | 106 |
| | ON |
| State Saved | Saved in instrument state. |
| Min | 2 |
| Max | 10000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1...3...10 sequence |
| Instrument S/W Revision | A.01.60 or later |

Cont

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1063 in the section "Common Measurement Functions" for more information.

FREQ Channel

See “[FREQ/Channel](#)” on page 1059 in the section "Common Measurement Functions" for more information.

Input/Output

See “[Input/Output](#)” on page 1065 in the section "Common Measurement Functions" for more information.

Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement.

See the "Marker Functions" section for more information

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Marker Type

Sets the marker control mode to **Normal**, **Delta** or **Off**. If the selected marker is Off, pressing Marker sets it to Normal and places a single marker at the center of the display. At the same time, **Marker X Axis Value** appears on the Active Function area.

| | |
|-----------------------|--|
| Key Path | Marker |
| Mode | All except SA and BASIC |
| Remote Command | :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M ODE POSition DELta OFF :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :M ODE? |
| Example | CALC:MON:MARK:MODE POS CALC:MON:MARK:MODE? |
| Notes | If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X Axis Value appears on the Active Function area. Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off. Active Function Display: the marker X axis value entered in the active function area displays the marker value to its full entered precision. |
| Preset | OFF |
| State Saved | Saved in instrument state. |

| | |
|-------------------------|------------------|
| Range | Normal Delta Off |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

| | |
|-------------------------|--|
| Remote Command | :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X <freq> :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X ? |
| Example | CALC:MON:MARK3:X 0 CALC:MON:MARK3:X? |
| Instrument S/W Revision | A.01.60 or later |
| Mode | All except SA and BASIC |
| Notes | If no suffix is sent, uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error “Invalid suffix” is generated. The query returns the marker’s absolute X Axis value if the control mode is Normal , or the offset from the marker’s reference marker if the control mode is Delta . The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time , seconds for Period and Time . If the marker is Off the response is not a number. |
| Preset | After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN). |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | Not tested in SCPI test. |

Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** – except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for

Monitor Spectrum Measurement Marker

setting the value of the marker.

| | |
|-------------------------|--|
| Remote Command | :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition <real> :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :X :POSition? |
| Example | CALC:MON:MARK:X:POS 0 CALC:MON:MARK:X:POS? |
| Instrument S/W Revision | A.01.60 or later |
| Mode | All except SA and BASIC |
| Notes | The query returns the marker's absolute X Axis value in trace points if the control mode is Normal , or the offset from the marker's reference marker in trace points if the control mode is Delta . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points. If the marker is Off the response is not a number. |
| Preset | After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN). |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | Not supported. |

Marker Y Axis Value (Remote Command only)

Returns the marker Y Axis value in the current marker.

| | |
|-------------------------|--|
| Mode | All except SA and BASIC |
| Remote Command | :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :Y ? |
| Example | CALC:MON:MARK11:Y? |
| Preset | Result dependant on markers setup and signal source |
| Instrument S/W Revision | A.01.60 or later |

Properties

Accesses a menu that enables you to select the active marker, the reference marker and the trace for the

current measurement.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Relative To

Selects the desired marker. The selected marker is relative to its reference marker

| | |
|-------------------------|---|
| Key Path | Marker, Properties |
| Mode | All except SA and BASIC |
| Remote Command | :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R EFerence <integer> :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :R EFerence? |
| Example | CALC:MON:MARK:REF 1 CALC:MON:MARK:REF? |
| Notes | A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself." When queried a single value is returned (the specified marker number's relative marker). |
| Preset | 2 3 4 5 6 7 8 9 10 11 12 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 12 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1 |
| Instrument S/W Revision | A.01.60 or later |

Marker Trace

Assigns the specified marker to the designated trace.

| | |
|-------------------------|---|
| Key Path | Marker, Properties |
| Mode | All except SA and BASIC |
| Remote Command | :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :TRACe <integer> :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :TRACe? |
| Example | CALC:MON:MARK:TRAC 1 CALC:MON:MARK:TRAC? |
| Preset | 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 3 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1 |
| Instrument S/W Revision | A.01.60 or later |

Couple Markers

When this function is true, moving any marker causes an equal X Axis movement of every other marker which is not **Off**. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

| | |
|-----------------------|--|
| Key Path | Marker |
| Mode | All except SA and BASIC |
| Remote Command | :CALCulate:MONitor:MARKer:COUPle[:STATE] ON OFF 1 0 :CALCulate:MONitor:MARKer:COUPle[:STATE]? |
| Example | CALC:MON:MARK:COUP ON CALC:MON:MARK:COUP? |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Test MIN/MAX/DEF | Yes |

Instrument S/W Revision A.01.60 or later

All Markers Off

Turns off all markers on the current measurement.

| | |
|-------------------------|--------------------------------|
| Key Path | Marker |
| Mode | All except SA and BASIC |
| Remote Command | :CALCulate:MONitor:MARKer:AOff |
| Example | CALC:MON:MARK:AOff |
| Instrument S/W Revision | A.01.60 or later |

Marker Function

Accesses special marker functions such as marker noise, and power in a specified bandwidth or time interval.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Selects one of the 12 available markers.

| | |
|-------------------------|------------------------|
| Key Path | Marker Function |
| Instrument S/W Revision | A.01.60 or later |

Marker Function Type

Sets the marker control function type to, Marker Noise, Band/Interval Power, Band Interval Density, or Marker Function Off.

| | |
|-------------------------|---|
| Key Path | Marker Function |
| Mode | All except SA and BASIC |
| Remote Command | :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : F UNcTion NOISe BPOWer BDENsity OFF :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : F UNcTion? |
| Example | CALC:MON:MARK:FUNC NOIS CALC:MON:MARK:FUNC? |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Marker Noise Band/Interval Power Band Interval Density Marker Function Off |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Band Adjust

Accesses a menu that enables you to set the frequency span width and the left and right edge, or time

values, for the band or interval of the selected marker.

| Key Path | Marker Function |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Band/Interval Span for Frequency Domain

Sets the width of the frequency span for the selected marker.

| Key Path | Marker Function |
|-------------------------|--|
| Mode | All except SA and BASIC |
| Remote Command | :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :F UNction:BAND:SPAN <freq> :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :F UNction:BAND:SPAN? |
| Example | CALC:MON:MARK12:FUNC:BAND:SPAN 20 MHz CALC:MON:MARK12:FUNC:BAND:SPAN? |
| Dependencies/Couplings | Changing the Band/Interval Span necessarily changes the Band/Interval Left and Band/Interval Right values. |
| Preset | Depends on X axis range of selected Trace. |
| State Saved | Saved in instrument state. |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | Not supported. |
| Instrument S/W Revision | A.01.60 or later |

Band/Interval Left for Frequency Domain

Sets the left edge frequency or time value for the band of the selected marker.

| Key Path | Marker Function |
|-----------------------|--|
| Mode | All except SA and BASIC |
| Remote Command | :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :F UNction:BAND:LEFT <freq> :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :F UNction:BAND:LEFT? |
| Example | CALC:MON:MARK12:FUNC:BAND:LEFT 20 GHz CALC:MON:MARK12:FUNC:BAND:LEFT? |

Monitor Spectrum Measurement Marker Function

| | |
|-------------------------|--|
| Dependencies/Couplings | Changing the Band/Interval Left necessarily changes the Band/Interval Span and Band/Interval Right values. |
| Preset | Depends on X axis range of selected Trace. |
| State Saved | Saved in instrument state. |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | Not supported. |
| Instrument S/W Revision | A.01.60 or later |

Band/Interval Right for Frequency Domain

Sets the right edge frequency or time value for the band of the selected marker.

| | |
|-------------------------|--|
| Key Path | Marker Function |
| Mode | All except SA and BASIC |
| Remote Command | :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :F UNction: BAND: RIGHt <freq> :CALCulate:MONitor:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 :F UNction: BAND: RIGHt? |
| Example | CALC:MON:MARK12:FUNC:BAND:RIGH 20 GHz CALC:MON:MARK12:FUNC:BAND:RIGH? |
| Dependencies/Couplings | Changing the Band/Interval Right necessarily changes the Band/Interval Left and Band/Interval Span values |
| Preset | Depends on X axis range of selected Trace. |
| State Saved | Saved in instrument state. |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | Not supported. |
| Instrument S/W Revision | A.01.60 or later |

Marker To

There is no 'Marker To' functionality supported in Monitor Spectrum. The front-panel key displays a blank menu key when pressed.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Meas

See “[Meas](#)” on page 1115 in the section "Common Measurement Functions" for more information.

Meas Setup

Displays the setup menu for the current measurement. The measurement setup parameters include the number of measurement averages used to calculate the measurement result and the averaging mode. The setup menu also includes the option to reset the measurement settings to their factory defaults.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Avg/Hold Num

Specifies the number of measurement averages used when calculating the measurement result. The average is displayed at the end of each sweep.

After the specified number of average counts, the averaging mode (terminal control) setting determines the averaging action.

| | |
|-------------------------|--|
| Key Path | Meas Setup |
| Mode | All except SA and BASIC |
| Remote Command | [:SENSe] :MONitor:AVERage:COUNT <integer> [:SENSe] :MONitor:AVERage:COUNT? [:SENSe] :MONitor:AVERage [:STATe] OFF ON 0 1 [:SENSe] :MONitor:AVERage [:STATe] ? |
| Example | MON:AVER:COUN 25 MON:AVER:COUN? MON:AVER ON MON:AVER? |
| Preset | 10 OFF |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 1000 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1 |
| Instrument S/W Revision | A.01.60 or later |

Avg Mode

Toggles the average mode between exponential (Exp) and Repeat.

Exp- continues measurement averaging, using the specified number of averages to compute each averaged value. The average is displayed at the end of each sweep.

Repeat- causes the measurement to reset the average counter each time the specified number of averages is reached.

| Key Path | Meas Setup |
|-------------------------|--|
| Mode | All except SA and BASIC |
| Remote Command | <code>[:SENSE] :MONitor:AVERage:TCONtrol EXPonential REPEAT</code> <code>[:SENSE] :MONitor:AVERage:TCONtrol?</code> |
| Example | <code>MON:AVER:TCON EXP</code> <code>MON:AVER:TCON?</code> |
| Preset | EXPonential |
| State Saved | Saved in instrument state. |
| Range | ExpRepeat |
| Instrument S/W Revision | A.01.60 or later |

Meas Preset

Restores all the measurement parameters to their default values.

| Key Path | Meas Setup |
|-------------------------|---------------------------------|
| Mode | All except SA and BASIC |
| Remote Command | <code>:CONFigure:MONitor</code> |
| Example | <code>CONF:MON</code> |
| Instrument S/W Revision | A.01.60 or later |

Mode

See “Mode” on page 1133 in the section "Common Measurement Functions" for more information.

Mode Setup

See “[Mode Setup](#)” on page 1145 in the section "Common Measurement Functions" for more information.

Peak Search

There is no 'Peak Search' functionality supported in Monitor Spectrum. The front-panel key displays a blank menu key when pressed.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Recall

See “[Recall](#)” on page 1149 in the section "Common Measurement Functions" for more information.

Restart

See “Restart” on page 1167 in the section "Common Measurement Functions" for more information.

Save

See “[Save](#)” on page 1169 in the section "Common Measurement Functions" for more information.

Single

See “[Single \(Single Measurement/Sweep\)](#)” on page 1191 in the section "Common Measurement Functions" for more information.

Source

See “[Source](#)” on page 1193 in the section "Common Measurement Functions" for more information.

Span X Scale

Accesses a menu of functions that enable you to set the horizontal scale parameters.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Span

Changes the frequency range symmetrically about the center frequency.

| | |
|------------------------|--|
| Key Path | Span X Scale |
| Mode | All except SA, BASIC |
| Remote Command | [:SENSe] :MONitor:FREQuency:SPAN <freq> [:SENSe] :MONitor:FREQuency:SPAN? |
| Example | MON:FREQ:SPAN 1 MHz MON:FREQ:SPAN? |
| Dependencies/Couplings | Changing the span causes the resolution bandwidth to change automatically, and affects data acquisition time. |
| Preset | WCDMA: 10.0 MHz WIMAX OFDMA: 50.0 MHz C2K: 2.5MHz PN: 1.0 MHz GSM/EDGE: 1.0 MHz TD-SCDMA: 3.2 MHz 1xEVDO: 2.0MHz |
| State Saved | Saved in instrument state. |
| Min | 10 Hz |
| Max | Hardware Dependent: Option 503 = 3.7 GHz Option 507 = 7.1GHz Option 508 = 8.5 GHz Option 513 = 13.8 GHz Option 526 = 27.0 GHz |
| Test MIN/MAX/DEF | Yes |

Monitor Spectrum Measurement

Span X Scale

| | |
|-------------------------|--|
| Test UP/DOWN | UP/DOWN parameters supported. The step value follows the 1, 2, 5, 10...increment rule. |
| Instrument S/W Revision | A.01.60 or later |

Full Span

Changes the Span to show the full frequency range of the analyzer.

| | |
|-------------------------|--|
| Key Path | Span X Scale |
| Mode | All except SA and BASIC |
| Remote Command | [:SENSE] :MONitor:FREQuency:SPAN:FULL |
| Example | MON:FREQ:SPAN:FULL |
| Dependencies/Couplings | Sets the span to the full frequency range, and adjusts the center frequency accordingly. |
| Instrument S/W Revision | A.01.60 or later |

Last Span

Changes the measurement span to the span setting of the previous measurement. If there is no existing previous span value, then the span remains unchanged.

| | |
|-------------------------|---|
| Key Path | Span X Scale |
| Mode | All except SA and BASIC |
| Remote Command | [:SENSe] :MONitor:FREQuency:SPAN:PREVious |
| Example | MON:FREQ:SPAN:PREV |
| Dependencies/Couplings | Selecting last span changes the measurement span value. |
| Instrument S/W Revision | A.01.60 or later |

Sweep/Control

Access a menu of functions that enable you to set up and control the sweep time for the current measurement

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Sweep Time

Selects the length of time in which the spectrum analyzer sweeps the displayed frequency span. Additional overhead time is required by the analyzer. It impacts the sweep rate, but is not calculated as part of the sweep time. Reducing the sweep time increases the rate of sweeps.

| | |
|-------------------------|--|
| Key Path | Sweep/Control |
| Mode | All except SA and BASIC |
| Remote Command | [:SENSe]:MONitor:SWEep:TIME <time> [:SENSe]:MONitor:SWEep:TIME? [:SENSe]:MONitor:SWEep:TIME:AUTO OFF ON 0 1 [:SENSe]:MONitor:SWEep:TIME:AUTO? |
| Example | MON:SWE:TIME 100 ms MON:SWE:TIME? MON:SWE:TIME:AUTO ON MON:SWE:TIME:AUTO? |
| Dependencies/Couplings | When the user manually changes the Sweep Time, this set automatically goes to 'Man'. |
| Preset | Automatically Calculated |
| State Saved | Saved in instrument state. |
| MIN/MAX/DEF Support | Yes |
| Min | 1 ms |
| Max | 4000 s |
| Test MIN/MAX/DEF | MIN MAX |
| Test UP/DOWN | The same as SA PD defines |
| Instrument S/W Revision | A.01.60 or later |

Pause

Pauses a measurement after the current data acquisition is complete.

When Paused, the label on the key changes to Resume. Pressing Resume continues the measurement at the point where it had been paused.

See “Pause/Resume” on page 1198 under Sweep/Control in the "Common Measurement Functions" section for more information.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Gate

Accesses a menu that enables you to control the gating function .

The Gate functionality is used to view signals best viewed by qualifying them with other events.

See “Gate” on page 417 in “common Measurement Functions” for more details.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Points

Sets the number of points per sweep. The resolution of setting the sweep time depends on the number of points selected. If Preset is selected, the number of points per sweep defaults to 1001. The current value of points is displayed parenthetically, next to the sweep time in the lower right corner of the display.

| | |
|-------------------------|---|
| Key Path | Sweep/Control |
| Mode | All except SA and BASIC |
| Remote Command | <code>[[:SENSE]:MONitor:SWEep:POINTs <integer></code> <code>[[:SENSe]:MONitor:SWEep:POINTs?</code> |
| Example | <code>:MON:SWE:POIN 1000</code> <code>:MON:SWE:POIN?</code> |
| Dependencies/Couplings | Whenever the number of sweep points changes, the sweep time is re-quantized. |
| Preset | 1001 |
| State Saved | Saved in instrument state. |
| Range | 1 to 20001 |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Trace/Detector

Accesses a menu that enables you to control the display, storage, detection and manipulation of trace data. Each trace is comprised of a series of data points in which X and Y axis information is stored. The analyzer updates the information for the active trace with each sweep of the current measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Select Trace

Allows you to select which trace you want to use for the current measurement. You can select one of three traces. Monitor Spectrum supports 3 traces, numbered 1 through 3.

| | |
|-------------------------|---|
| Key Path | Trace/Detector |
| Mode | All except SA and BASIC |
| Preset | Trace 1 |
| State Saved | The number of the selected trace is saved in Instrument State |
| Instrument S/W Revision | A.01.60 or later |

Trace Type

Allows you to select the type of trace you want to you use for the current measurement. You can assign a trace type to one of the three available traces.

The first page of this menu contains a 1-of-N selection of the trace type (**Clear Write, Average, Max Hold, Min Hold**) for the selected trace.

| | |
|-----------------------|--|
| Key Path | Trace/Detector |
| Mode | All except SA and BASIC |
| Remote Command | :TRACe [1] 2 3 :MONitor:TYPE WRITe AVERAge MAXHold MINHold :TRACe [1] 2 3 :MONitor:TYPE? |
| Example | TRAC:MON:TYPE WRIT TRAC:MON:TYPE? |
| Notes | WRITe = Clear Write AVERAge = Average MAXHold = Maximum Hold MINHold = Minimum Hold |

Monitor Spectrum Measurement Trace/Detector

| | |
|-------------------------|--|
| Preset | WRITe |
| State Saved | Saved in instrument state. |
| Range | WRITe AVERAge MAXHold MINHold for traces 1 through 3 |
| Instrument S/W Revision | A.01.60 or later |

Update

Toggles a trace state between Update and Off. The Off selection makes the trace inactive (or a stored trace). This does not affect whether the trace is visible or not. Use the Display Show/Blank function to change the trace visibility.

| | |
|-------------------------|---|
| Key Path | Trace/Detector |
| Mode | All except SA and BASIC |
| Remote Command | :TRACe [1] 2 3 :MONitor:UPDate [:STATE] ON OFF 0 1 :TRACe [1] 2 3 :MONitor:UPDate [:STATE] ? |
| Example | TRAC3:MON:UPD OFF TRAC3:MON:UPD? |
| Preset | ON |
| State Saved | Saved in instrument state. |
| Range | On Off (View) |
| Instrument S/W Revision | A.01.60 or later |

Display

Controls the visibility of a trace. In **Blank**, traces do not display nor appear on printouts but are otherwise unaffected. They may be queried and markers may be placed on them

| | |
|-------------------------|---|
| Key Path | Trace/Detector |
| Mode | All except SA and BASIC |
| Remote Command | :TRACe [1] 2 3 :MONitor:DISPlay [:STATE] ON OFF 0 1 :TRACe [1] 2 3 :MONitor:DISPlay [:STATE] ? |
| Example | TRAC:MON:DISP ON TRAC:MON:DISP? |
| Preset | ON OFF OFF |
| State Saved | Saved in instrument state. |
| Range | Show Blank |
| Instrument S/W Revision | A.01.60 or later |

Detector

Accesses a menu of functions that enable you to control the detectors for the current measurement. The following choices are available:

Auto — the detector selected depends on marker functions, trace functions, average type, and the trace averaging function.

- Normal — the detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection.
- Average — the detector determines the average of the signal within the sweep points. The averaging method depends upon the Average Type selection (voltage, power or log scales).
- Peak — the detector determines the maximum of the signal within the sweep points.
- Sample — the detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point.
- Negative Peak — the detector determines the minimum of the signal within the sweep points.

In swept analysis, the time interval of the data collection for the display sweep points also represents a frequency interval. In FFT analysis, the sweep points represent just a frequency interval. The detector determines the relationship between the spectrum computed by the FFT and the single data point displayed for the sweep points.

| | |
|-----------------------|--|
| Key Path | Trace/Detector |
| Mode | All except SA and BASIC |
| Remote Command | [:SENSE] :MONitor:DETEctor:TRACe AVERAge NEGAtive NORMAl POSitive SAMPlE [:SENSe] :MONitor:DETEctor:TRACe? |
| Example | MON:DET:TRAC NORM MON:DET:TRAC? |

Monitor Spectrum Measurement Trace/Detector

| | |
|-------------------------|---|
| Notes | The query returns a name that corresponds to the detector type as shown below. String Returned Definition NORM Normal AVER Average POS Peak SAMP Sample NEG Negative Peak |
| Dependencies/Couplings | When the Detector choice is Auto, the detector selected depends on average type. |
| Preset | NORMal |
| State Saved | Saved in instrument state. |
| Range | Normal Average(RMS) Peak Sample Negative Peak |
| Instrument S/W Revision | A.01.60 or later |

Auto

Sets the detector for the currently selected trace to Auto. When the detector choice is Auto, the analyzer selects the detector. The selected detector depends on marker functions, trace functions, and trace averaging functions for the current measurement.

| | |
|------------------------|--|
| Key Path | Trace/Detector Trace/Detector, Detector |
| Mode | All except SA and BASIC |
| Remote Command | [:SENSe] :MONitor:DETEctor:AUTO ON OFF 1 0 [:SENSe] :MONitor:DETEctor:AUTO? |
| Example | MON:DET:AUTO OFF MON:DET:AUTO? |
| Dependencies/Couplings | When the Detector choice is Auto, the detector selected depends on average state and trace type. |
| Preset | ON |

| | |
|-------------------------|----------------------------|
| State Saved | Saved in instrument state. |
| Range | Auto Man |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |

Clear Trace

Clears the selected trace from the display.

| | |
|-------------------------|---|
| Key Path | Trace/Detector |
| Mode | All except SA and BASIC |
| Remote Command | :TRACe:MONitor:CLEar [TRACE1] TRACE2 TRACE3 |
| Example | TRAC:MON:CLE |
| Instrument S/W Revision | A.01.60 or later |
| Mode | All except SA and BASIC |
| Remote Command | :DISPlay:MONitor:VIEW:WINDow:TRACe [1] 2 3 :CLEar |
| Example | DISP:MON:VIEW:WIND:TRAC:CLE |
| Instrument S/W Revision | A.01.60 or later |

Clear All Traces


Clears all traces from the display.

| | |
|-------------------------|--------------------------|
| Key Path | Trace/Detector |
| Mode | All except SA and BASIC |
| Remote Command | :TRACe:MONitor:CLEar:ALL |
| Example | TRAC:MON:CLE:ALL |
| Instrument S/W Revision | A.01.60 or later |


View/Display

Accesses a menu of functions that enable you to control certain functions related to the display of the analyzer.

There is a single trace view for this measurement.

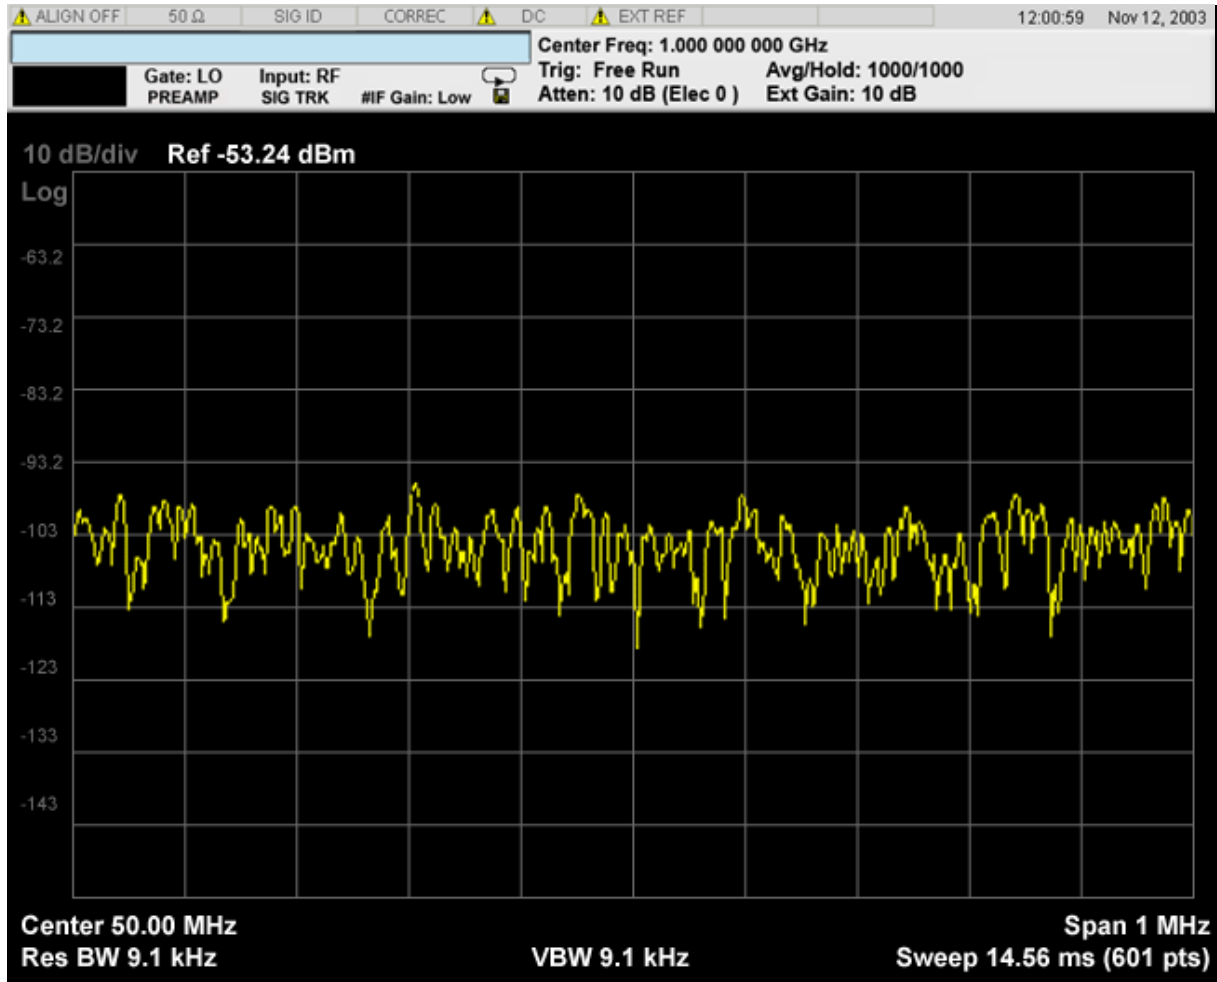

When the mode is CDMA1xEVDO, the view will be like

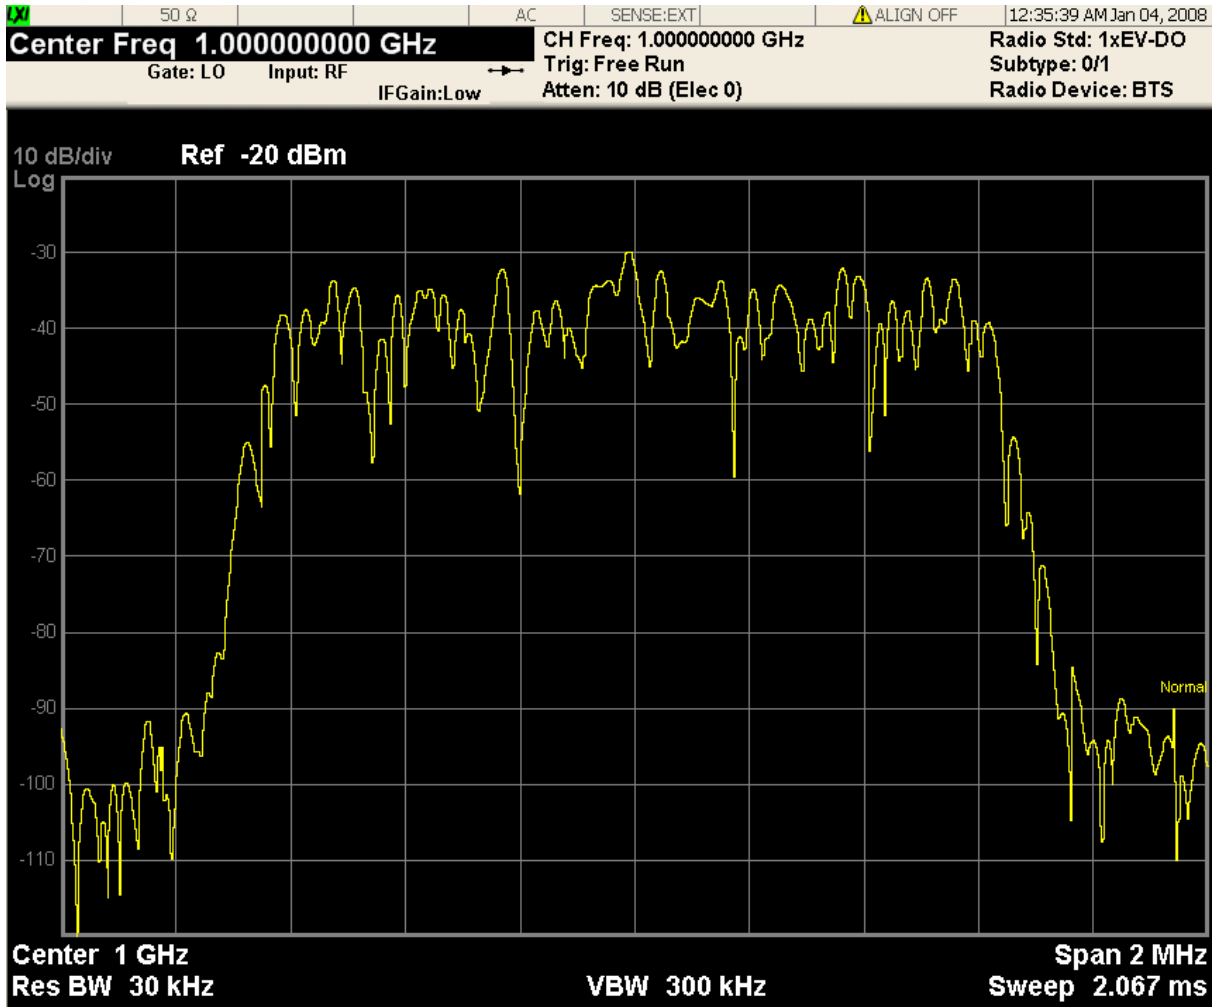

The measurement has no results, but has a number of features that make it flexible and simple to use.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Display

Accesses a menu of functions that enable you to set the display parameters.

See “[Display](#)” on page 1273 in the “Common Measurement Functions” section for more information.

| | |
|-------------------------|---------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

The waveform measurement is a generic measurement for viewing the input signal waveforms in the time domain. This measurement is how the instrument performs the zero span functionality found in traditional spectrum analyzers. For more details, see [“Waveform Measurement Description” on page 974](#) below. For measurement results and views, see [“View/Display” on page 1030](#).

This topic contains the following sections:

[“Measurement Commands for Waveform” on page 973](#)

[“Remote Command Results for Waveform Measurement” on page 973](#)

Measurement Commands for Waveform

The general functionality of CONFigure, INITiate, FETCh, MEASure, and READ are described at this section.

:CONFigure:WAVEform

:CONFigure:WAVEform:NDEFault

:INITiate:WAVEform

:FETCh:WAVEform [n]

:MEASure:WAVEform [n]

:READ:WAVEform [n]

For more measurement related commands, see the SENSE subsystem, and the section [“Remote Measurement Functions” on page 1115](#).

Remote Command Results for Waveform Measurement

The following table denotes the returned results from the FETCh|MEASure|READ commands:

| n | Results Returned |
|----------|--|
| 0 | Returns unprocessed I/Q trace data, as a series of trace point values, in volts. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values. |

Waveform Measurement

- 1 Returns the following scalar results:
 - Sample Time is a floating point number representing the time between samples when using the trace queries (n=0, 2, and so forth).
 - Mean Power is the mean power (in dBm). This is the power across the entire trace. If averaging is on, the power is for the latest acquisition.
 - Mean Power Averaged is the power (in dBm) for N averages, if averaging is on. This is the power across the entire trace. If averaging is on, the power is for the latest acquisition. If averaging is off, the value of the mean power averaged is the same as the value of the mean power.
 - Number of samples is the number of data points in the captured signal. This number is useful when performing a query on the signal (i.e. when n=0,2,etc.).
 - Peak-to-mean ratio has units of dB. This is the ratio of the maximum signal level to the mean power. Valid values are only obtained with averaging turned off. If averaging is on, the peak-to-mean ratio is calculated using the highest peak value, rather than the displayed average peak value.
 - Maximum value is the maximum of the most recently acquired data (in dBm).
 - Minimum value is the minimum of the most recently acquired data (in dBm).
- 2 Returns trace point values of the entire captured signal envelope trace data. These data points are floating point numbers representing the power of the signal (in dBm). There are N data points, where N is the number of samples. The period between the samples is defined by the sample time.

Waveform Measurement Description

Also available under basic Waveform measurement is an I/Q window, which shows the I and Q signal waveforms in parameters of voltage versus time to disclose the voltages which comprise the complex modulated waveform of a digital signal.

The waveform measurement can also be used to perform general purpose power measurements to a high degree of accuracy.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

AMPTD Y Scale

Accesses a menu of functions that enable you to set the vertical scale parameters.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Ref Value

Sets the absolute power reference value. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Ref Value (RF Envelope View)

Sets the Y Scale reference value (in dBm) when the RF Envelope View is active. By default, the measurement determines the reference value with Auto Scaling. Entering a reference value manually turns Auto Scaling off.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEVel <ampl> :DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEVel? |
| Example | DISP:WAV:VIEW:WIND:TRAC:Y:RLEV -50 dBm DISP:WAV:VIEW:WIND:TRAC:Y:RLEV? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off. |
| Preset | 10.00 dBm |
| State Saved | Saved in instrument state. |
| Range | -250.00 dBm to 250.00 dBm |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Y Scale/Div value |
| Instrument S/W Revision | A.01.60 or later |

Waveform Measurement

AMPTD Y Scale

Ref Value (I/Q Waveform View)

Sets the Y Scale reference value (in volts) when the I/Q Waveform View is active. By default, the measurement determines the reference value with Auto Scaling. Entering a reference value manually turns Auto Scaling off.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVDO, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVe l <voltage> :DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RLEVe l? |
| Example | DISP:WAV:VIEW2:WIND:TRAC:Y:RLEV 25 V DISP:WAV:VIEW2:WIND:TRAC:Y:RLEV? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off. |
| Preset | 0 V |
| State Saved | Saved in instrument state. |
| Min | -250 V |
| Max | 250 V |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | YScalePerDiv value |
| Instrument S/W Revision | A.01.60 or later |

Attenuation

Accesses a menu of functions that enable you to change the attenuation settings. This key has a readback text that describes total attenuator value

This is only available when the selected input is RF.

See AMPTD Y Scale, “Attenuation” on page 1037 in the section “Common Measurement Functions” for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Range

Accesses the Range menu to change baseband I/Q gain settings. This key has a readback text that describes gain range value. Refer to “[AMPTD Y Scale \(Amplitude Y Scale\)](#)” on page 1037 in the section “Common Measurement Functions” for more information.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div

Sets the units per division of vertical scale in the logarithmic display. However, since the Auto Scaling is defaulted to On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.

Scale/Div (RF Envelope View)

Sets the scale per division for the RF Envelope result waveform (time domain) measurements in the graph window.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDI Vision <rel_amp1> :DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDI Vision? |
| Example | DISP:WAV:VIEW:WIND:TRAC:Y:PDIV 5 DISP:WAV:VIEW:WIND:TRAC:Y:PDIV? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off. |
| Preset | 10.00 dB |
| State Saved | Saved in instrument state. |
| Range | 0.10 dB to 20.00 dB |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Y Scale/Div value |
| Instrument S/W Revision | A.01.60 or later |

Waveform Measurement AMPTD Y Scale

Scale/Div (I/Q Waveform View)

Sets the scale per division for the I/ Q signal waveform graph.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVDO, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :DISPlay:WAVEform:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:PDIVi sion <voltage> :DISPlay:WAVEform:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:PDIVi sion? |
| Example | DISP:WAV:VIEW2:WIND:TRAC:Y:PDIV 25mV DISP:WAV:VIEW2:WIND:TRAC:Y:PDIV? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Dependencies/Couplings | When the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off. |
| Preset | 100.0 mV |
| State Saved | Saved in instrument state. |
| Min | 1.0 nV |
| Max | 20 V |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Step follows the 3PointsPerDecade (1,2.5, 5, 10) Rule |
| Instrument S/W Revision | A.01.60 or later |

Scale Type

LP Note: There is no description for this key here or in Meas Common, even though it is shown in the MXA6 menu map.

| | |
|-------------------------|-------------------------|
| Key Path | AMPTD/Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Presel Center

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the frequency of the selected marker.

See [“Presel Center” on page 1048](#) under AMPTD Y Scale in the section "Common Measurement Functions" for more information.

This key is only available when the selected input is RF.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD/Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Presel Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when Presel Center is available.

See “[Preselector Adjust](#)” on page 1050 under AMPTD Y Scale in the section “Common Measurement Functions” for more information.

This key is only available when the selected input is RF.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD/Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Internal Preamp

Accesses a menu of functions that enable you to control the internal preamplifiers.

See AMPTD Y Scale, “[Internal Preamp](#)” on page 1051 in the section “Common Measurement Functions” for more information.

This key is only available when the selected input is RF.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale |
| Instrument S/W Revision | A.01.60 or later |

Ref Position

Positions the reference level at the top, center or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Ref Position (RF Envelope View)

Positions the reference level at the top, center or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

| | |
|-----------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPO Sition TOP CENTEr BOTTom :DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPO Sition? |

Waveform Measurement

AMPTD Y Scale

| | |
|-------------------------|--|
| Example | DISP:WAV:VIEW:WIND:TRAC:Y:RPOS CENT DISP:WAV:VIEW:WIND:TRAC:Y:RPOS? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRUMENT:SELEct to set the mode. |
| Preset | TOP |
| State Saved | Saved in instrument state. |
| Range | Top Ctr Bot |
| Instrument S/W Revision | A.01.60 or later |

Ref Position (I/Q Waveform View)

Positions the reference level at the top, center or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:RPOSi tion TOP CENTer BOTTom :DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:RPOSi tion? |
| Example | DISP:WAV:VIEW2:WIND:TRAC:Y:RPOS CENT DISP:WAV:VIEW2:WIND:TRAC:Y:RPOS? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRUMENT:SELEct to set the mode. |
| Preset | CENT |
| State Saved | Saved in instrument state. |
| Range | Top Ctr Bot |
| Instrument S/W Revision | A.01.60 or later |

Auto Scaling

Toggles the Auto Scaling function between On and Off. When the **Restart** front panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results.

| | |
|----------|--|
| Key Path | AMPTD Y Scale |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |

| | |
|-------------------------|---|
| Remote Command | :DISPlay:WAVEform:VIEW[1] 2:WINDow[1] :TRACe:Y[:SCALE] :COUPle 0 1 OFF ON :DISPlay:WAVEform:VIEW[1] 2:WINDow[1] :TRACe:Y[:SCALE] :COUPle? |
| Example | DISP:WAV:VIEW:WIND:TRAC:Y:COUP OFF DISP:WAV:VIEW:WIND:TRAC:Y:COUP? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Dependencies/Couplings | When Auto Scaling is On, upon pressing the Restart front-panel key, this function automatically switches the scale per division and reference values into the defaults. When the user sets a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off. |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Auto Couple

See “**AUTO COUPLE**” on page 1055 in the section “Common Measurement Functions” for more information.

BW

Accesses a menu that enables you to control the information bandwidth functions of the instrument. You can also select the filter type for the measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Info BW

Enables you to set the information bandwidth (Info BW) of the analyzer.

| | |
|-----------------------|--|
| Key Path | BW |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [:SENSE] :WAVEform:BANDwidth[:RESolution] <freq> [:SENSE] :WAVEform:BANDwidth[:RESolution] ? |
| Example | WAV:BAND 1kHz WAV:BAND? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Preset | All except GSM/EDGE: 100 kHz GSM/EDGE: 510kHz TDSCDMA: 1.3MHZ CDMA1xEVDO: 1.3MHz |
| State Saved | Saved in instrument state. |
| Min | 10 Hz |
| Max | Hardware Dependent: RF Input: No Option = 10 MHz Option B25 = 25 MHz I/Q Input: No Option = 10 MHz per channel (20 MHz for I+jQ) Option B25 = 25 MHz per channel (50 MHz for I+jQ) |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Hardware Dependent: |

Waveform Measurement BW

Instrument S/W Revision A.01.60 or later

IBW Control

Accesses the Filter Type key

Key Path **BW**

Instrument S/W Revision A.01.60 or later

Filter Type

Selects the type of bandwidth filter that is used. The choices are Gaussian or Flat top.

Key Path **BW, RBW Control**

Mode BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA,
TD-SCDMA, 1xEV-DO

Remote Command [:SENSe]:WAVeform:BANDwidth:SHApe GAUSSian|FLATtop
[:SENSe]:WAVeform:BANDwidth:SHApe?

Example WAV:BAND:SHAP GAUS
WAV:BAND:SHAP?

Notes You must be in the mode that includes Waveform measurement to use this
command. Use INSTRument:SElect to set the mode.

Preset GAUSSian

State Saved Saved in instrument state.

Range Gaussian|FlatTop

Instrument S/W Revision A.01.60 or later

Gaussian The table in the section [“Gaussian filters” on page 985](#) lists all 160 Gaussian filter types.

Gaussian filters

| Normal (-3 dB) | -6 dB | Noise | Impulse |
|-------------------|---------|---------|---------|
| 1.0 Hz | 1.41 Hz | 1.06 Hz | 1.49 Hz |
| 1.1 Hz | 1.55 Hz | 1.16 Hz | 1.63 Hz |
| 1.2 Hz | 1.69 Hz | 1.27 Hz | 1.77 Hz |
| 1.3 Hz | 1.83 Hz | 1.37 Hz | 1.92 Hz |
| 1.5 Hz | 2.11 Hz | 1.59 Hz | 2.22 Hz |
| 1.6 Hz | 2.25 Hz | 1.69 Hz | 2.37 Hz |
| 1.8 Hz | 2.53 Hz | 1.90 Hz | 2.66 Hz |
| 2.0 Hz | 2.81 Hz | 2.12 Hz | 2.96 Hz |
| 2.2 Hz | 3.09 Hz | 2.33 Hz | 3.25 Hz |
| 2.4 Hz | 3.38 Hz | 2.54 Hz | 3.55 Hz |
| 2.7 Hz | 3.80 Hz | 2.86 Hz | 3.99 Hz |
| 3.0 Hz | 4.22 Hz | 3.17 Hz | 4.44 Hz |
| 3.3 Hz | 4.64 Hz | 3.49 Hz | 4.88 Hz |
| 3.6 Hz | 5.06 Hz | 3.81 Hz | 5.32 Hz |
| 3.9 Hz | 5.49 Hz | 4.12 Hz | 5.77 Hz |
| 4.3 Hz | 6.05 Hz | 4.55 Hz | 6.36 Hz |
| 4.7 Hz | 6.61 Hz | 4.97 Hz | 6.95 Hz |
| 5.1 Hz | 7.17 Hz | 5.39 Hz | 7.54 Hz |
| 5.6 Hz | 7.87 Hz | 5.92 Hz | 8.27 Hz |
| 6.2 Hz | 8.72 Hz | 6.56 Hz | 9.17 Hz |
| 6.8 Hz | 9.55 Hz | 7.18 Hz | 10.0 Hz |
| 7.5 Hz | 10.5 Hz | 7.93 Hz | 11.1 Hz |
| 8.2 Hz | 11.5 Hz | 8.66 Hz | 12.1 Hz |
| 9.1 Hz | 12.8 Hz | 9.64 Hz | 13.5 Hz |
| 10 Hz | 14.0 Hz | 10.6 Hz | 14.8 Hz |
| 11 Hz | 15.4 Hz | 11.6 Hz | 16.2 Hz |
| 12 Hz | 16.9 Hz | 12.7 Hz | 17.7 Hz |
| 13 Hz | 18.3 Hz | 13.7 Hz | 19.2 Hz |
| 15 Hz | 21.1 Hz | 15.9 Hz | 22.2 Hz |

Waveform Measurement
BW

| | | | |
|--------|---------|---------|---------|
| 16 Hz | 22.5 Hz | 16.9 Hz | 23.7 Hz |
| 18 Hz | 25.3 Hz | 19.1 Hz | 26.6 Hz |
| 20 Hz | 28.1 Hz | 21.1 Hz | 29.5 Hz |
| 22 Hz | 30.9 Hz | 23.2 Hz | 32.5 Hz |
| 24 Hz | 33.8 Hz | 25.4 Hz | 35.5 Hz |
| 27 Hz | 38.0 Hz | 28.6 Hz | 40.0 Hz |
| 30 Hz | 42.3 Hz | 31.8 Hz | 44.5 Hz |
| 33 Hz | 46.3 Hz | 34.8 Hz | 48.7 Hz |
| 36 Hz | 50.7 Hz | 38.1 Hz | 53.3 Hz |
| 39 Hz | 54.9 Hz | 41.3 Hz | 57.7 Hz |
| 43 Hz | 60.5 Hz | 45.5 Hz | 63.6 Hz |
| 47 Hz | 66.1 Hz | 49.7 Hz | 69.5 Hz |
| 51 Hz | 71.7 Hz | 53.9 Hz | 75.3 Hz |
| 56 Hz | 78.9 Hz | 59.3 Hz | 83.0 Hz |
| 62 Hz | 87.3 Hz | 65.6 Hz | 91.7 Hz |
| 68 Hz | 95.5 Hz | 71.8 Hz | 100 Hz |
| 75 Hz | 106 Hz | 79.4 Hz | 111 Hz |
| 82 Hz | 115 Hz | 86.8 Hz | 121 Hz |
| 91 Hz | 128 Hz | 96.4 Hz | 135 Hz |
| 100 Hz | 141 Hz | 106 Hz | 148 Hz |
| 110 Hz | 154 Hz | 116 Hz | 162 Hz |
| 120 Hz | 169 Hz | 127 Hz | 178 Hz |
| 130 Hz | 183 Hz | 137 Hz | 192 Hz |
| 150 Hz | 211 Hz | 159 Hz | 222 Hz |
| 160 Hz | 225 Hz | 169 Hz | 237 Hz |
| 180 Hz | 253 Hz | 190 Hz | 266 Hz |
| 200 Hz | 281 Hz | 211 Hz | 295 Hz |
| 220 Hz | 309 Hz | 232 Hz | 325 Hz |
| 240 Hz | 337 Hz | 254 Hz | 355 Hz |
| 270 Hz | 380 Hz | 286 Hz | 400 Hz |
| 300 Hz | 422 Hz | 317 Hz | 444 Hz |
| 330 Hz | 463 Hz | 348 Hz | 487 Hz |

| | | | |
|---------|----------|----------|----------|
| 360 Hz | 507 Hz | 381 Hz | 533 Hz |
| 390 Hz | 550 Hz | 413 Hz | 578 Hz |
| 430 Hz | 605 Hz | 455 Hz | 636 Hz |
| 470 Hz | 662 Hz | 498 Hz | 696 Hz |
| 510 Hz | 718 Hz | 540 Hz | 755 Hz |
| 560 Hz | 789 Hz | 593 Hz | 829 Hz |
| 620 Hz | 872 Hz | 655 Hz | 916 Hz |
| 680 Hz | 958 Hz | 720 Hz | 1.01 kHz |
| 750 Hz | 1.06 kHz | 794 Hz | 1.11 kHz |
| 820 Hz | 1.15 kHz | 866 Hz | 1.21 kHz |
| 910 Hz | 1.28 kHz | 964 Hz | 1.35 kHz |
| 1.0 kHz | 1.41 kHz | 1.06 kHz | 1.48 kHz |
| 1.1 kHz | 1.55 kHz | 1.17 kHz | 1.63 kHz |
| 1.2 kHz | 1.69 kHz | 1.27 kHz | 1.78 kHz |
| 1.3 kHz | 1.83 kHz | 1.38 kHz | 1.93 kHz |
| 1.5 kHz | 2.11 kHz | 1.59 kHz | 2.22 kHz |
| 1.6 kHz | 2.26 kHz | 1.70 kHz | 2.37 kHz |
| 1.8 kHz | 2.54 kHz | 1.91 kHz | 2.67 kHz |
| 2.0 kHz | 2.82 kHz | 2.12 kHz | 2.96 kHz |
| 2.2 kHz | 3.10 kHz | 2.33 kHz | 3.26 kHz |
| 2.4 kHz | 3.38 kHz | 2.54 kHz | 3.56 kHz |
| 2.7 kHz | 3.80 kHz | 2.86 kHz | 4.00 kHz |
| 3.0 kHz | 4.23 kHz | 3.18 kHz | 4.44 kHz |
| 3.3 kHz | 4.65 kHz | 3.49 kHz | 4.89 kHz |
| 3.6 kHz | 5.06 kHz | 3.81 kHz | 5.32 kHz |
| 3.9 kHz | 5.48 kHz | 4.12 kHz | 5.76 kHz |
| 4.3 kHz | 6.07 kHz | 4.56 kHz | 6.38 kHz |
| 4.7 kHz | 6.62 kHz | 4.98 kHz | 6.96 kHz |
| 5.1 kHz | 7.16 kHz | 5.38 kHz | 7.53 kHz |
| 5.6 kHz | 7.87 kHz | 5.92 kHz | 8.27 kHz |
| 6.2 kHz | 8.74 kHz | 6.57 kHz | 9.18 kHz |
| 6.8 kHz | 9.58 kHz | 7.20 kHz | 10.1 kHz |

Waveform Measurement
BW

| | | | |
|---------|----------|----------|----------|
| 7.5 kHz | 10.5 kHz | 7.92 kHz | 11.1 kHz |
| 8.2 kHz | 11.5 kHz | 8.66 kHz | 12.1 kHz |
| 9.1 kHz | 12.8 kHz | 9.64 kHz | 13.5 kHz |
| 10 kHz | 14.1 kHz | 10.6 kHz | 14.8 kHz |
| 11 kHz | 15.4 kHz | 11.6 kHz | 16.2 kHz |
| 12 kHz | 16.9 kHz | 12.7 kHz | 17.8 kHz |
| 13 kHz | 18.3 kHz | 13.7 kHz | 19.2 kHz |
| 15 kHz | 21.2 kHz | 15.9 kHz | 22.3 kHz |
| 16 kHz | 22.4 kHz | 16.8 kHz | 23.5 kHz |
| 18 kHz | 25.2 kHz | 19.0 kHz | 26.5 kHz |
| 20 kHz | 28.4 kHz | 21.3 kHz | 29.8 kHz |
| 22 kHz | 31.2 kHz | 23.4 kHz | 32.8 kHz |
| 24 kHz | 33.8 kHz | 25.4 kHz | 35.6 kHz |
| 27 kHz | 38.1 kHz | 28.7 kHz | 40.1 kHz |
| 30 kHz | 42.1 kHz | 31.7 kHz | 44.3 kHz |
| 33 kHz | 46.8 kHz | 35.2 kHz | 49.2 kHz |
| 36 kHz | 50.1 kHz | 37.7 kHz | 52.7 kHz |
| 39 kHz | 54.8 kHz | 41.2 kHz | 57.6 kHz |
| 43 kHz | 61.1 kHz | 46.0 kHz | 64.3 kHz |
| 47 kHz | 66.2 kHz | 49.8 kHz | 69.6 kHz |
| 51 kHz | 72.3 kHz | 54.3 kHz | 76.0 kHz |
| 56 kHz | 79.5 kHz | 59.8 kHz | 83.6 kHz |
| 62 kHz | 86.3 kHz | 64.9 kHz | 90.8 kHz |
| 68 kHz | 96.5 kHz | 72.6 kHz | 101 kHz |
| 75 kHz | 106 kHz | 79.7 kHz | 111 kHz |
| 82 kHz | 114 kHz | 86.0 kHz | 120 kHz |
| 91 kHz | 129 kHz | 97.3 kHz | 136 kHz |
| 100 kHz | 140 kHz | 105 kHz | 147 kHz |
| 110 kHz | 154 kHz | 116 kHz | 162 kHz |
| 120 kHz | 169 kHz | 127 kHz | 178 kHz |
| 130 kHz | 182 kHz | 137 kHz | 192 kHz |
| 150 kHz | 210 kHz | 158 kHz | 221 kHz |

| | | | |
|---------|----------|----------|----------|
| 160 kHz | 223 kHz | 168 kHz | 235 kHz |
| 180 kHz | 253 kHz | 190 kHz | 266 kHz |
| 200 kHz | 280 kHz | 211 kHz | 295 kHz |
| 220 kHz | 308 kHz | 232 kHz | 324 kHz |
| 240 kHz | 336 kHz | 253 kHz | 353 kHz |
| 270 kHz | 380 kHz | 286 kHz | 400 kHz |
| 300 kHz | 420 kHz | 316 kHz | 441 kHz |
| 330 kHz | 467 kHz | 352 kHz | 491 kHz |
| 360 kHz | 506 kHz | 380 kHz | 532 kHz |
| 390 kHz | 550 kHz | 414 kHz | 578 kHz |
| 430 kHz | 599 kHz | 451 kHz | 629 kHz |
| 470 kHz | 660 kHz | 497 kHz | 693 kHz |
| 510 kHz | 715 kHz | 538 kHz | 750 kHz |
| 560 kHz | 786 kHz | 592 kHz | 826 kHz |
| 620 kHz | 867 kHz | 653 kHz | 912 kHz |
| 680 kHz | 952 kHz | 717 kHz | 1.00 MHz |
| 750 kHz | 1.05 MHz | 791 kHz | 1.10 MHz |
| 820 kHz | 1.14 MHz | 859 kHz | 1.19 MHz |
| 910 kHz | 1.27 MHz | 960 kHz | 1.34 MHz |
| 1.0 MHz | 1.40 MHz | 1.06 MHz | 1.47 MHz |
| 1.1 MHz | 1.53 MHz | 1.15 MHz | 1.61 MHz |
| 1.2 MHz | 1.66 MHz | 1.26 MHz | 1.75 MHz |
| 1.3 MHz | 1.80 MHz | 1.36 MHz | 1.89 MHz |
| 1.5 MHz | 2.06 MHz | 1.56 MHz | 2.17 MHz |
| 1.6 MHz | 2.19 MHz | 1.66 MHz | 2.29 MHz |
| 1.8 MHz | 2.51 MHz | 1.91 MHz | 2.63 MHz |

Waveform Measurement
BW

| | | | |
|---------|----------|----------|----------|
| 2.0 MHz | 2.75 MHz | 2.10 MHz | 2.88 MHz |
| 2.2 MHz | 3.00 MHz | 2.30 MHz | 3.14 MHz |
| 2.4 MHz | 3.30 MHz | 2.54 MHz | 3.45 MHz |
| 2.7 MHz | 3.63 MHz | 2.81 MHz | 3.78 MHz |
| 3.0 MHz | 4.09 MHz | 3.18 MHz | 4.22 MHz |
| 4 MHz | 5.30 MHz | 4.23 MHz | 5.30 MHz |
| 5 MHz | 5.78 MHz | 4.81 MHz | 5.41 MHz |
| 6 MHz | 6.31 MHz | 5.50 MHz | 5.82 MHz |
| 8 MHz | 8.07 MHz | 7.21 MHz | 6.90 MHz |

Flattop The table in the section “[Flattop Filters](#)” on page 991 lists all 134 Flattop filter types.

Flattop Filters

| | | | |
|---------|---------|---------|---------|
| 3.0 Hz | 3.3 Hz | 3.6 Hz | 3.9 Hz |
| 4.3 Hz | 4.7 Hz | 5.1 Hz | 5.6 Hz |
| 6.2 Hz | 6.8 Hz | 7.5 Hz | 8.2 Hz |
| 9.1 Hz | 10 Hz | 11 Hz | 12 Hz |
| 13 Hz | 15 Hz | 16 Hz | 18 Hz |
| 20 Hz | 22 Hz | 24 Hz | 27 Hz |
| 30 Hz | 33 Hz | 36 Hz | 39 Hz |
| 43 Hz | 47 Hz | 51 Hz | 56 Hz |
| 62 Hz | 68 Hz | 75 Hz | 82 Hz |
| 91 Hz | 100 Hz | 110 Hz | 120 Hz |
| 130 Hz | 150 Hz | 160 Hz | 180 Hz |
| 200 Hz | 220 Hz | 240 Hz | 270 Hz |
| 300 Hz | 330 Hz | 360 Hz | 390 Hz |
| 430 Hz | 470 Hz | 510 Hz | 560 Hz |
| 620 Hz | 680 Hz | 750 Hz | 820 Hz |
| 910 Hz | 1.0 kHz | 1.1 kHz | 1.2 kHz |
| 1.3 kHz | 1.5 kHz | 1.6 kHz | 1.8 kHz |
| 2.0 kHz | 2.2 kHz | 2.4 kHz | 2.7 kHz |
| 3.0 kHz | 3.3 kHz | 3.6 kHz | 3.9 kHz |
| 4.3 kHz | 4.7 kHz | 5.1 kHz | 5.6 kHz |
| 6.2 kHz | 6.8 kHz | 7.5 kHz | 8.2 kHz |
| 9.1 kHz | 10 kHz | 11 kHz | 12 kHz |
| 13 kHz | 15 kHz | 16 kHz | 18 kHz |
| 20 kHz | 22 kHz | 24 kHz | 27 kHz |
| 30 kHz | 33 kHz | 36 kHz | 39 kHz |
| 43 kHz | 47 kHz | 51 kHz | 56 kHz |
| 62 kHz | 68 kHz | 75 kHz | 82 kHz |
| 91 kHz | 100 kHz | 110 kHz | 120 kHz |
| 130 kHz | 150 kHz | 160 kHz | 180 kHz |
| 200 kHz | 220 kHz | 240 kHz | 270 kHz |

Waveform Measurement
BW

| | | | |
|---------|---------|---------|---------|
| 300 kHz | 330 kHz | 390 kHz | 430 kHz |
| 510 kHz | 620 kHz | 750 kHz | 1.0 MHz |
| 1.5 MHz | 3.0 MHz | 4 MHz | 5 MHz |
| 6 MHz | 8 MHz | | |

Cont

See “[Cont \(Continuous Measurement/Sweep\)](#)” on page 1063 in the section "Common Measurement Functions" for more information.

FREQ Channel

See “[FREQ/Channel](#)” on page 1059 in the section "Common Measurement Functions" for more information.

Input/Output

See “[Input/Output](#)” on page 1065 in the section “Common Measurement Functions” for more information.

Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. See “[Marker](#)” on page 1109 in the section "Common Measurement Functions" for more information

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Marker Type

Sets the marker control mode to **Normal**, **Delta**, **Fixed** or **Off**. All interactions and dependencies detailed under the key description are enforced when the remote command is sent. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is Off, there is no active function and the active function is turned off.

| | |
|-----------------------|--|
| Key Path | Marker |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:WAVeform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : MODE POSition DELTA OFF :CALCulate:WAVeform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : MODE? |
| Example | CALC:WAV:MARK:MODE OFF CALC:WAV:MARK:MODE? |

| | |
|-------------------------|--|
| Notes | <p>If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X Axis Value appears on the Active Function area.</p> <p>Default Active Function: the active function for the selected marker's current control mode. If the current control mode is Off, there is no active function and the active function is turned off.</p> <p>Active Function Display: the marker X axis value entered in the active function area displays the marker value to its full entered precision.</p> <p>You must be in the mode that Waveform measurement is included to use this command. Use INSTRument:SElect to set the mode.</p> |
| Preset | =OFF |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Normal Delta Off |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Value (Remote Command only)

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

| | |
|-----------------------|---|
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | <pre>:CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : X <time></pre> <pre>:CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : X?</pre> |
| Example | <pre>CALC:WAV:MARK:X 50 ms</pre> <pre>CALC:WAV:MARK:X?</pre> |
| Notes | <p>If no suffix is sent, uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" is generated. If the specified marker is Fixed and a Marker Function is on, error -221 "Settings conflict; cannot adjust Fixed marker while Marker Function is on" is generated.</p> <p>The query returns the marker's absolute X Axis value if the control mode is Normal, or the offset from the marker's reference marker if the control mode is Delta. The query is returned in the fundamental units for the current marker X Axis scale: Hz for Frequency and Inverse Time, seconds for Period and Time. If the marker is Off the response is not a number.</p> <p>You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode.</p> |

Waveform Measurement Marker

| | |
|-------------------------|--|
| Preset | 0 |
| Preset | After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN). |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | Not tested in SCPI test, although it is supported. |
| Instrument S/W Revision | A.01.60 or later |

Marker X Axis Position (Remote Command only)

Sets the marker X position in trace points. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta**. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

| | |
|-----------------------|--|
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : X:POSition <real> :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : X:POSition? |
| Example | CALC:WAV:MARK:X:POS 500 CALC:WAV:MARK:X:POS? |
| Notes | The query returns the marker's absolute X Axis value in trace points if the control mode is Normal or the offset from the marker's reference marker in trace points if the control mode is Delta . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points. You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SELEct to set the mode. |
| Preset | 0 |
| Preset | After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN). |
| State Saved | No |
| Min | -9.9E+37 |
| Max | 9.9E+37 |
| Test MIN/MAX/DEF | No |

| | |
|-------------------------|---|
| Test UP/DOWN | Not tested in SCPI test, although it is supported and the actual step is “1”. |
| Instrument S/W Revision | A.01.60 or later |

Marker Y Axis Value (Remote Command only)

Queries the marker Y Axis value in the current marker Y Axis unit.

| | |
|-------------------------|---|
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:WAVeform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : Y? |
| Example | CALC:WAV:MARK11:Y? |
| Notes | <p>When the marker is on, IQ waveform returns I and Q values.</p> <p>Case #1 - Trace RF: returns a single double value.</p> <pre>>:CALC:WAV:MARK1:Y? -2.402406506109E+001</pre> <p>Case #2 - Trace IQ: returns a double array of two values, the first is X, and the second is Y.</p> <pre>>:CALC:WAV:MARK1:Y? -3.006944493834E-003,+9.9870666467354E-004</pre> <p>You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode.</p> |
| Preset | Result dependant on markers setup and signal source |
| State Saved | No |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Properties

Accesses the marker properties menu.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Waveform Measurement Marker

Relative To

Selects the marker that the selected marker is relative to (its reference marker).

| | |
|-------------------------|---|
| Key Path | Marker, Properties |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : REFerence <integer> :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : REFerence? |
| Example | CALC:WAV:MARK:REF 8 CALC:WAV:MARK:REF? |
| Notes | A marker cannot be relative to itself so that choice is grayed out, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself." When queried a single value is returned (the specified marker numbers relative marker). You must be in the mode that Waveform measurement is included to use this command. Use INSTRument:SElect to set the mode. |
| Preset | 2 3 4 5 6 7 8 9 10 11 12 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 12 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1 |
| Instrument S/W Revision | A.01.60 or later |

Marker Trace

Assigns the specified marker to the designated trace.

| | |
|-----------------------|---|
| Key Path | Marker |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : TRACe RFENvelope IQ :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : TRACe? |

| | |
|-------------------------|---|
| Example | CALC:WAV:MARK:TRAC RFEN CALC:WAV:MARK:TRAC? |
| Notes | Assigns the specified marker to the designated trace. You must be in the mode that includes Waveform measurement to use this command. Use INSTRUMENT:SElect to set the mode. |
| Preset | RFEN |
| State Saved | Saved in instrument state. |
| Range | RF Envelope IQ Waveform |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

Couple Markers

Toggles the state of the markers to be coupled On or Off. When this function is true (On), moving any marker causes an equal X axis movement of every other marker which is not **Off**. “Equal X axis movement” refers to the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units) are preserved.

| | |
|-------------------------|--|
| Key Path | Marker |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:WAVEform:MARKer:COUple[:STATe] ON OFF 1 0 :CALCulate:WAVEform:MARKer:COUple[:STATe]? |
| Example | CALC:WAV:MARK:COUP ON CALC:WAV:MARK:COUP ON |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRUMENT:SElect to set the mode. |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Test MIN/MAX/DEF | No |
| Instrument S/W Revision | A.01.60 or later |

All Markers Off

Turns off all markers.

| | |
|-------------------------|--|
| Key Path | Marker |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:WAVeform:MARKer:AOFF |
| Example | CALC:WAV:MARK:AOFF |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Instrument S/W Revision | A.01.60 or later |

Marker Function

Accesses a menu of marker functions that perform post-processing operations on markers based on the measurement specifications. Marker functions are distinct from Measurement functions, which automatically perform complex sequences of setup, data acquisition, and display operations in order to measure specified signal characteristics. Marker Functions are specified for each individual marker and may be turned on individually for each marker.

The **Marker Function** menu controls which marker functions are turned on and allows you to adjust the setup parameters for each function. These parameters include the following, but only one parameter can be assigned to a given marker:

- **Marker Noise**
- **Band/Interval Power**
- **Band/Interval Density**
- **Marker Function Off**
-

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Select Marker

Displays 12 markers available for selection.

| | |
|-------------------------|------------------|
| Key Path | Marker |
| Instrument S/W Revision | A.01.60 or later |

Marker Function Type

Sets the marker control function type to, Marker Noise, Band/Interval Power, Band Interval Density, or Marker Function Off

| | |
|-----------------------|---|
| Key Path | Marker Function |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : FUNction BPOwer BDENsity OFF :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : FUNction? |

Waveform Measurement Marker Function

| | |
|-------------------------|--|
| Example | CALC:WAV:MARK:FUNC BPOW CALC:WAV:MARK:FUNC? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRUMENT:SELEct to set the mode. |
| Preset | =OFF |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Band/Interval Power Band Interval Density Marker Function Off |
| Instrument S/W Revision | A.01.60 or later |

Band Adjust

Accesses a menu that enables you to set the frequency span width and the left and right edge, or time values, for the band or interval of the selected marker.

| | |
|-------------------------|------------------------|
| Key Path | Marker Function |
| Instrument S/W Revision | A.01.60 or later |

Band/Interval Span for Time Domain

Sets the width of the frequency span for the selected marker.

| | |
|------------------------|--|
| Key Path | Marker Function |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : FUNction: BAND: SPAN <time> :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : FUNction: BAND: SPAN? |
| Example | CALC:WAV:MARK:FUNC:BAND:SPAN 20 ms CALC:WAV:MARK:FUNC:BAND:SPAN? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRUMENT:SELEct to set the mode. |
| Dependencies/Couplings | Changing the Band/Interval Span necessarily changes the Band/Interval Left and Band/Interval Right values |
| Preset | 0 |
| Preset | 10% of Meas Time |
| State Saved | Saved in instrument state. |

| | |
|-------------------------|------------------|
| Min | 0 |
| Max | 100s |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | 200 μ s |
| Instrument S/W Revision | A.01.60 or later |

Band/Interval Left for Time Domain

Sets the left edge frequency or time value for the band of the selected marker.

| | |
|-------------------------|--|
| Key Path | Marker Function |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVDO, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : FUNction:BAND:LEFT <time> :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : FUNction:BAND:LEFT? |
| Example | CALC:WAV:MARK12:FUNC:BAND:LEFT 1 s CALC:WAV:MARK12:FUNC:BAND:LEFT? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Dependencies/Couplings | Changing the Band/Interval Left necessarily changes the Band/Interval Span and Band/Interval Right values |
| Preset | 0 |
| Preset | 5% of Meas Time |
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | 100s |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | 200 μ s |
| Instrument S/W Revision | A.01.60 or later |

Band/Interval Right for Time Domain

Sets the right edge frequency or time value for the band of the selected marker.

| | |
|----------|--|
| Key Path | Marker Function |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVDO, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |

Waveform Measurement Marker Function

| | |
|-------------------------|--|
| Remote Command | <code>:CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : FUNction:BAND:RIGHT <time></code> <code>:CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : FUNction:BAND:RIGHT?</code> |
| Example | <code>CALC:WAV:MARK12:FUNC:BAND:RIGH 1 s</code> <code>CALC:WAV:MARK12:FUNC:BAND:RIGH?</code> |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Dependencies/Couplings | Changing the Band/Interval Left necessarily changes the Band/Interval Span and Band/Interval Right values |
| Preset | 0 |
| Preset | 5% of Meas Time |
| State Saved | Saved in instrument state. |
| Min | 0 |
| Max | 100s |
| Test MIN/MAX/DEF | No |
| Test UP/DOWN | 200 μ s |
| Instrument S/W Revision | A.01.60 or later |

Marker To

There is no 'Marker To' functionality supported in Waveform measurements. The front-panel key displays a blank menu key when pressed.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Meas

See “[Meas](#)” on page 1115 in the section "Common Measurement Functions" for more information.

Meas Setup

Displays the setup menu keys that enable you to control the parameters for the current measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Average/Hold Number

Sets the number of sweeps (average counts) that are averaged. After the specified number of sweeps, the averaging mode (terminal control) setting determines the averaging action.

| | |
|-------------------------|---|
| Key Path | Meas Setup |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [:SENSe]:WAVEform:AVERage:COUNT <integer> [:SENSe]:WAVEform:AVERage:COUNT? [:SENSe]:WAVEform:AVERage[:STATe] OFF ON 0 1 [:SENSe]:WAVEform:AVERage[:STATe]? |
| Example | WAV:AVER:COUN 1001 WAV:AVER:COUN? WAV:AVER ON WAV:AVER? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Preset | 10 OFF |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 20001 |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 10 |
| Instrument S/W Revision | A.01.60 or later |

Avg Mode

Enables you to set the averaging mode.

Waveform Measurement Meas Setup

When set to Exponential (Exp) the measurement averaging continues using the specified number of averages to compute each averaged value. The average is displayed at the end of each sweep.

When set to Repeat, the measurement resets the average counter each time the specified number of averages is reached.

| | |
|-------------------------|--|
| Key Path | Meas Setup |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVDO, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [:SENSe] :WAVeform:AVERage:TCONtrol EXPOnential REPeat [:SENSe] :WAVeform:AVERage:TCONtrol? |
| Example | WAV:AVER:TCON REP WAV:AVER:TCON? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SELEct to set the mode. |
| Preset | EXPOnential |
| State Saved | Saved in instrument state. |
| Range | Exp Repeat |
| Instrument S/W Revision | A.01.60 or later |

Avg Type

Selects the type of averaging.

| | |
|-----------------------|---|
| Key Path | Meas Setup |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVDO, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [:SENSe] :WAVeform:AVERage:TYPE LOG MAXimum MINimum RMS SCALar [:SENSe] :WAVeform:AVERage:TYPE? |
| Example | WAV:AVER:TYPE MAX WAV:AVER:TYPE? |
| Notes | The SCPI selection of MAX and MIN are kept because of BWCC reason, but they are removed from the front panel access because they are not Average. You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SELEct to set the mode. |
| Preset | RMS |
| State Saved | Saved in instrument state. |
| Range | Pwr Avg(RMS) Log-Pwr Avg(Video) Voltage Avg |

Instrument S/W Revision A.01.60 or later

Meas Time

Sets how long the measurement is performed. X Scale only changes the representation of the display.

| | |
|-------------------------|--|
| Key Path | Meas Setup |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [:SENSe] :WAVeform:SWEep:TIME <time> [:SENSe] :WAVeform:SWEep:TIME? |
| Example | WAV:SWE:TIME 50 ms WAV:SWE:TIME? |
| Notes | Specifies and returns how long the measurement is performed. It is the time record length of the measurement waveform. The Max time may be reduced when the sample frequency is high due to the memory limitation. You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Preset | 2.000000 ms |
| State Saved | Saved in instrument state. |
| Range | 1.000 (s to 100.00 s) |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 1.000 μ s |
| Instrument S/W Revision | A.01.60 or later |

Meas Preset

Restores all the measurement parameters to their default values.

| | |
|-----------------------|---|
| Key Path | Meas Setup |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CONFigure:WAVeform |
| Example | CONF:WAV |
| Notes | Restore default values of all parameters. You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Test MIN/MAX/DEF | No |

Waveform Measurement Meas Setup

Instrument S/W Revision A.01.60 or later

Advanced

Accesses a menu of “advanced” functions that are used for specific applications. These settings should not be changed for most measurements.

Key Path **Meas Setup**
Instrument S/W Revision A.01.60 or later

ADC Dither

Accesses the ADC Dither control menu.

Key Path **Meas Setup, Advanced**
Instrument S/W Revision A.01.60 or later

ADC Dither Auto Sets ADC dithering to automatically select whether dithering is needed.

Key Path **Meas Setup, Advanced, ADC Dither**
Mode BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA,
TD-SCDMA, 1xEV-DO

Remote Command [:SENSe]:WAVeform:ADC:DITHer:AUTO[:STATe] OFF|ON|0|1
[:SENSe]:WAVeform:ADC:DITHer:AUTO[:STATe] ?

Example WAV:ADC:DITH:AUTO ON
WAV:ADC:DITH:AUTO?

Notes The dither function improves linearity for low level signals, at the expense of a higher noise floor. This table is for SCPI definition purpose only.
You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode.

Preset OFF
State Saved Saved in instrument state.
Range On|Off
Instrument S/W Revision A.01.60 or later

ADC Dither Toggles the dither function On and Off. The dither function improves linearity for low level signals, at the expense of a higher noise floor.

The reduced clipping-to-noise ratio results in higher noise, because the clipping level of the ADC relative to the front terminals remains unchanged with the introduction of dither. The enhanced linearity is mostly improved scale fidelity.

With dither on, the third-order distortions are usually invisible for mixer levels below –35 dBm. With dither off, these distortions can be visible, with typical power levels of –110 dBm referred to the mixer. Detection nonlinearity can reach 1 dB for dither off at mixer levels around –70 dBm and lower, while the specified nonlinearity is many times smaller with dither on.

| | |
|-------------------------|---|
| Key Path | Meas Setup, Advanced, ADC Dither |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | [:SENSE] :WAVEform:ADC:DITHer [:STATe] OFF ON 0 1 [:SENSe] :WAVEform:ADC:DITHer [:STATe] ? |
| Example | WAV:ADC:DITH ON WAV:ADC:DITH? |
| Notes | The dither function improves linearity for low level signals, at the expense of a higher noise floor. You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | Auto Man |
| Instrument S/W Revision | A.01.60 or later |

IF Gain

Sets the IF Gain function to Auto, Low Gain or High Gain. These settings affect sensitivity and IF overloads.

This only applies to the RF input. It does not apply to baseband I/Q input.

| | |
|-------------------------|-----------------------------|
| Key Path | Meas Setup, Advanced |
| Instrument S/W Revision | A.01.60 or later |

IF Gain Auto Activates the auto rules for IF Gain. When Auto is active, the IF Gain is set to High Gain under and of the following conditions:

- The input attenuator is set to 0 dB
- the preamp is turned On and the frequency range is under 3.6 GHz

For other settings, Auto sets the IF Gain to Low Gain.

| | |
|----------|--|
| Key Path | Meas Setup, Advanced, IF Gain |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |

Waveform Measurement Meas Setup

Remote Command [:SENSe]:WAVeform:IF:GAIN:AUTO[:STATe] ON|OFF|1|0
[:SENSe]:WAVeform:IF:GAIN:AUTO[:STATe]?

Example WAV:IF:GAIN:AUTO ON
WAV:IF:GAIN:AUTO?

Notes This only applies to the RF input. It does not apply to baseband I/Q input.
You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SELEct to set the mode.

Preset ON

State Saved Saved in instrument state.

Range On|Off

Instrument S/W Revision A.01.60 or later

IF Gain State Selects the range of IF gain.

Key Path **Meas Setup, Advanced, IF Gain**

Mode BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO

Remote Command [:SENSe]:WAVeform:IF:GAIN[:STATe] AUTOrange|LOW|HIGH
[:SENSe]:WAVeform:IF:GAIN[:STATe]?

Example WAV:IF:GAIN HIGH
WAV:IF:GAIN?

Notes This only applies to the RF input and does not apply to baseband I/Q input.
You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SELEct to set the mode.

Preset AUTO

State Saved Saved in instrument state.

Range Autorange (Slower Follows Signals)|Low (Best for Large Signals)|High (Best Noise Level)

Instrument S/W Revision A.01.60 or later

Mode

See “[Mode](#)” on page [1133](#) in the section "Common Measurement Functions" for more information.

Mode Setup

See “[Mode Setup](#)” on page 1145 in the section "Common Measurement Functions" for more information.

Peak Search

Places the selected marker on the trace point with the maximum y-axis value for that marker's trace and accesses a menu that enables you to select to do a minimum peak search.

| | |
|-------------------------|--|
| Key Path | Front-panel key |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : MAXimum |
| Example | CALC:WAV:MARK2:MAX |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRUMENT:SElect to set the mode. |
| Instrument S/W Revision | A.01.60 or later |

Next Peak

Moves the selected marker to the next highest local maximum with a value less than the current marker's.

| | |
|-------------------------|--|
| Key Path | Peak Search |
| Mode | BASIC |
| Remote Command | :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : MAXimum:NEXT |
| Example | CALC:WAV:MARK:MAX:NEXT |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRUMENT:SElect to set the mode. |
| Instrument S/W Revision | A.01.60 or later |

Min Search

Moves the selected marker to the minimum y-axis value on the current trace.

| | |
|-----------------------|--|
| Key Path | Peak Search |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :CALCulate:WAVEform:MARKer [1] 2 3 4 5 6 7 8 9 10 11 12 : MINimum |
| Example | CALC:WAV:MARK:MIN |

Waveform Measurement
Peak Search

| | |
|-------------------------|--|
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Instrument S/W Revision | A.01.60 or later |

Recall

See [“Recall” on page 1149](#) in the section "Common Measurement Functions" for more information.

Restart

See “[Restart](#)” on page 1167 in the section "Common Measurement Functions" for more information.

Save

See “[Save](#)” on page 1169 in the section "Common Measurement Functions" for more information.

Single

See “[Single \(Single Measurement/Sweep\)](#)” on page 1191 in the section "Common Measurement Functions" for more information.

Source

See [“Source” on page 1193](#) in the section "Common Measurement Functions" for more information.

Span X Scale

Accesses a menu of functions that enable you to set the horizontal scale parameters.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Ref Value

Sets the reference value for time on the horizontal axis. When Auto Scaling is set to On, the displayed plots use a Scale/Div value determined by the analyzer, based on the measurement result.

| | |
|-------------------------|--|
| Key Path | SPAN X Scale |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVDO, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :DISPlay:WAVEform:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALE]:R LEVel <time> :DISPlay:WAVEform:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALE]:R LEVel? |
| Example | DISP:WAV:VIEW:WIND:TRAC:X:RLEV 10 ms DISP:WAV:VIEW:WIND:TRAC:X:RLEV? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Dependencies/Couplings | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. |
| Preset | 0.00 s |
| State Saved | Saved in instrument state. |
| Min | -1.000 s |
| Max | 10.00 s |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | 200.0 μ s |
| Instrument S/W Revision | A.01.60 or later |

Scale/Div

Sets the horizontal scale by changing a time value per division.

| | |
|----------|---------------------|
| Key Path | SPAN X Scale |
|----------|---------------------|

| | |
|-------------------------|--|
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :DISPlay:WAVeform:VIEW[1] 2:WINDow[1] :TRACe:X[:SCALe] :PDIVision <time> :DISPlay:WAVeform:VIEW[1] 2:WINDow[1] :TRACe:X[:SCALe] :PDIVision? |
| Example | DISP:WAV:VIEW:WIND:TRAC:X:PDIV 500 us DISP:WAV:VIEW:WIND:TRAC:X:PDIV? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Dependencies/Couplings | If the Auto Scaling is set to On, this value is automatically determined by the measurement result. When you set this value manually, Auto Scaling automatically changes to Off. |
| Preset | 200.0 us |
| State Saved | Saved in instrument state. |
| Min | 1.000 ns |
| Max | 1.000 s |
| Test MIN/MAX/DEF | Yes |
| Test UP/DOWN | Step follows the “1,2,5,10 ... Rule” |
| Instrument S/W Revision | A.01.60 or later |

Ref Position

Sets the reference position for the X axis to Left, Center or Right.

| | |
|-----------------------|--|
| Key Path | SPAN X Scale |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :DISPlay:WAVeform:VIEW[1] 2:WINDow[1] :TRACe:X[:SCALe] :RPOSITION LEFT CENTer RIGHT :DISPlay:WAVeform:VIEW[1] 2:WINDow[1] :TRACe:X[:SCALe] :RPOSITION? |
| Example | DISP:WAV:VIEW:WIND:TRAC:X:RPOS LEFT DISP:WAV:VIEW:WIND:TRAC:X:RPOS? |
| Notes | Allows you to set the reference position to Left, Ctr (center) or Right. You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Preset | LEFT |

Waveform Measurement

Span X Scale

| | |
|-------------------------|----------------------------|
| State Saved | Saved in instrument state. |
| Range | Left Ctr Right |
| Instrument S/W Revision | A.01.60 or later |

Auto Scaling

Toggles the scale coupling function between On and Off.

| | |
|-------------------------|--|
| Key Path | SPAN X Scale |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVD0, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :DISPlay:WAVeform:VIEW[1] 2 :WINDow[1] :TRACe:X[:SCALe] :COUPle 0 1 OFF ON :DISPlay:WAVeform:VIEW[1] 2 :WINDow[1] :TRACe:X[:SCALe] :COUPle? |
| Example | DISP:WAV:VIEW:WIND:TRAC:X:COUP ON DISP:WAV:VIEW:WIND:TRAC:X:COUP? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SELEct to set the mode. |
| Dependencies/Couplings | When Auto Scaling is On and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results. When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off. |
| Preset | 1 |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

Sweep/Control

Accesses the Sweep menu that allows you to pause and restart the measurement.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Pause and Resume

Pauses a measurement after the current data acquisition is complete. When Paused, the label on the key changes to Resume. Pressing the Resume key resumes the measurement at the point it was at when paused.

See [“Sweep / Control” on page 1197](#) in the section "Common Measurement Functions" for more information.

| | |
|-------------------------|----------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Trace/Detector

There is no 'Trace/Detector' functionality supported in the Waveform measurement. The front-panel key displays a blank menu key when pressed.

| Key Path | Front-panel key |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |

Trigger

Accesses a menu of functions that enable you to select and control the trigger source for the current measurement

See [“Trigger” on page 1221](#) in the section "Common Measurement Functions" for information about all keys in this menu.

| | |
|-------------------------|------------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

View/Display

Accesses a menu of functions that enable you to set up and control the display parameters for the current measurement.

This topic contains the following sections:

[“View Selection by name \(SCPI only\)” on page 1030](#)

[“View Selection by number \(SCPI only\)” on page 1030](#)

View Selection by name (SCPI only)

Selects the results view.

| | |
|-------------------------|--|
| Key Path | View/Display |
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVDO, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :DISPlay:WAVeform:VIEW[:SElect] RFENvelope IQ :DISPlay:WAVeform:VIEW[:SElect]? |
| Example | DISP:WAV:VIEW RFEN DISP:WAV:VIEW? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |
| Preset | RFENveloper |
| State Saved | Saved in instrument state. |
| Range | RF Envelope IQ Waveform |
| Instrument S/W Revision | A.01.60 or later |

View Selection by number (SCPI only)

Displays the numeric values of the measurement results.

| | |
|-----------------------|--|
| Mode | BASIC, PN, WCDMA, C2K, CDMA1XEVDO, GSM, WIMAX OFDMA, TD-SCDMA, 1xEV-DO |
| Remote Command | :DISPlay:WAVeform:VIEW:NSElect <integer> :DISPlay:WAVeform:VIEW:NSElect? |
| Example | DISP:WAV:VIEW:NSEL 1 DISP:WAV:VIEW:NSEL? |
| Notes | You must be in the mode that includes Waveform measurement to use this command. Use INSTRument:SElect to set the mode. |

| | |
|-------------------------|----------------------------|
| Preset | 1 |
| State Saved | Saved in instrument state. |
| Min | 1 |
| Max | 2 |
| Test MIN/MAX/DEF | Yes |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Display

Accesses a menu of functions that enable you to set the display parameters.


See [“Display” on page 1273](#) in the section "Common Measurement Functions" for more information.

| | |
|-------------------------|---------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |

RF Envelop

The view below shows an example of the RF Envelope result for the waveform (time domain) measurements in the graph window. The measured values for the mean power and peak-to-mean power are shown in the text window.

Waveform Measurement
View/Display

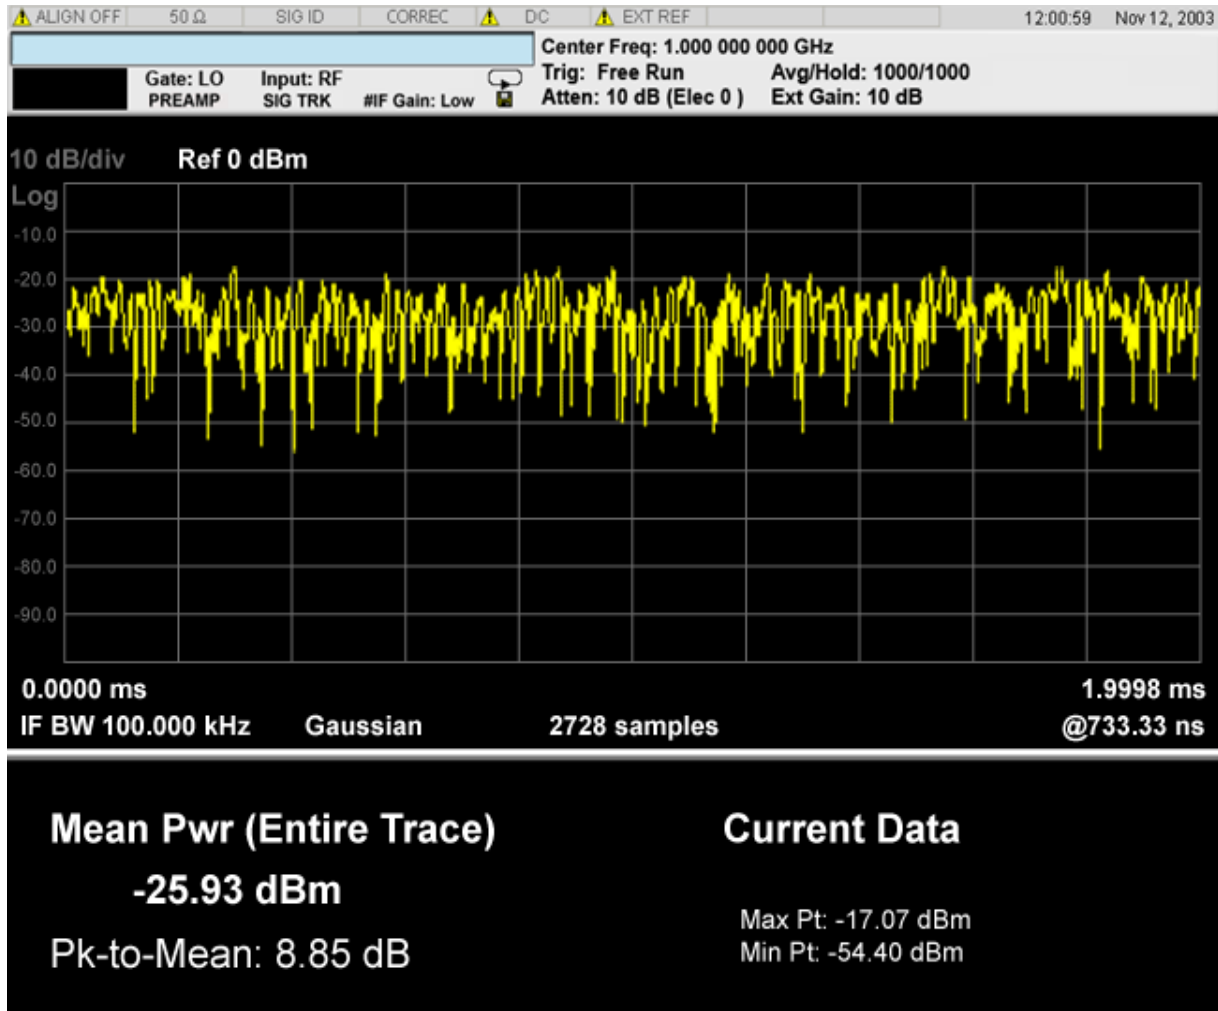


Numeric Results

| Name | Type | Description | Unit | Format |
|------------|---------|--|------|-----------|
| Mean Pwr | Float64 | The mean power (dBm). This is either the power across the entire trace, or the power between markers if the markers are enabled. | dBm | XX.XX dBm |
| Pk-to-Mean | Float64 | This is the ratio of the maximum signal level to the mean power. | dB | XX.XX dB |
| Max Pt | Float64 | The maximum of the most recently acquired data. | dBm | XX.XX dBm |
| Min Pt | Float64 | The minimum of the most recently acquired data. | dBm | XX.XX dBm |

Key Path **View/Display**
Instrument S/W Revision A.01.60 or later

I/Q Waveform

The view below shows the I and Q signal waveforms in parameters of voltage versus time.

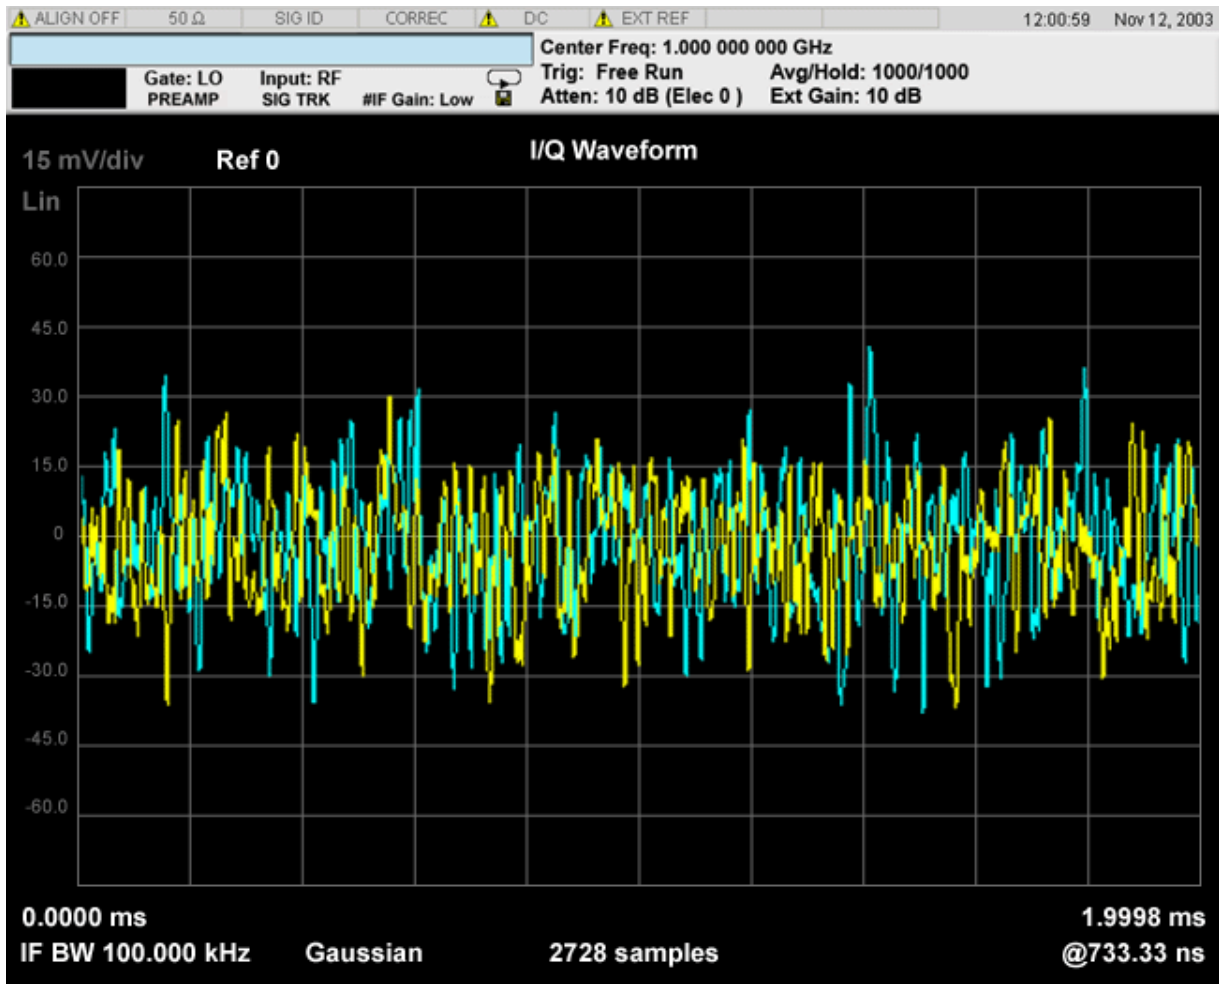

Key Path **View/Display**
Instrument S/W Revision A.01.60 or later

The key and command descriptions in this section describe functions that operate the same in multiple measurements and/or modes. This section is a library of functions that is referenced by many measurements and modes

To find the exact description and parameters for functions in a specific measurement, always look in the measurement section of this documentation. Pressing the front-panel key or softkey and then pressing the green Help key also provides the correct information.

NOTE

If you want to print the documentation, be sure to select this section and the measurement of interest to ensure having all the information you need. See [“Printing Acrobat Files” on page 110](#) for further instructions about printing.

AMPTD Y Scale (Amplitude Y Scale)

Some Amplitude features are common across multiple Modes and Measurements. These common features are described in this section. See the Measurement description for information on features that are unique.

The Amplitude key activates the Amplitude menu and selects Reference Level as the active function.

Instrument S/W Revision A.01.60 or later

Attenuation

This key is unavailable when I/Q is the selected input, and is replaced by the Range key in that case.

This menu controls both the electrical and mechanical attenuators and their interactions. The value read back on the key in square brackets is the current Total (Elec + Mech) attenuation. Note that when in “Pre-Adjust for Min Clip” this value can change at the start of every measurement.

All parameters in the Attenuation menus are Meas Global, meaning they are common to all the measurements and are unaffected by Meas Preset.

Key Path AMPTD
Instrument S/W Revision A.01.60 or later

Mech Atten Auto/Man

You can modify the mechanical attenuation applied to the RF input signal path. This value is normally auto coupled to the Ref Level, the Internal Preamp Gain, any External Gain that is entered, and the Max Mixer Level, as described in the table below. However, when the electrical attenuator is enabled, there is no Auto/Man functionality for the mechanical attenuator, and the third line of the key disappears. The Auto/Man state of the key is remembered and restored when the electrical attenuator is once again disabled.

Some measurement applications have functionality that can pre-adjust the input signal for minimum clipping. That is, it attenuates the input so it does not over-drive the analyzer. When this functionality is available, the Auto/Man selection is not available.

Remote Command: [:SENSE]:POWER[:RF]:ATTenuation <rel_ampl>
 [:SENSE]:POWER[:RF]:ATTenuation?
 [:SENSE]:POWER[:RF]:ATTenuation:AUTO OFF|ON|0|1
 [:SENSE]:POWER[:RF]:ATTenuation:AUTO?

Example: POW:ATT 20
 Sets the attenuator to manual mode, and sets the value to 20 dB.

AMPTD Y Scale (Amplitude Y Scale)

| | |
|--------------------------|--|
| Dependencies/Couplings: | <p>When the electrical attenuator is enabled, the mechanical attenuator has no auto setting and Auto/Man line on the key disappears. The state of Auto/Man is remembered and restored when the electrical attenuator is once again disabled. If it is restored to man, the mechanical attenuation is set to the sum of the current values of mechanical and electrical attenuation, but if it is restored to Auto it recouples according to the Couplings, below.</p> <p>When the Input Attenuator is in 'auto', it uses the following algorithm to determine a value.</p> <p>Calculate a new value = ReferenceLevel + PreAmpGain + ExternalGain – RefLevelOffset - MaxMixerLevel + IF Gain.</p> <p>Limit this new value to be between 6 and 70 dB for MXA (or 60 dB for EXA). No value below 6 dB can ever be chosen by Auto.</p> <p>The resulting value should be rounded up to the largest value possible given the attenuation step setting. That is, 50.01 dB would change to 60 dB (for a 10 dB attenuation step).</p> |
| Preset: | Auto (usually 10 dB, On) |
| State Saved: | Saved in State |
| Min: | 0 dB |
| | <p>The mechanical attenuation cannot be decreased below 6 dB with the knob or step keys. To get to a value below 6 dB it has to be directly entered from the keypad or via SCPI. This protects from adjusting the attenuation to a dangerously small value which can put the instrument at risk of damage to input circuitry. However, if the current mechanical attenuation is below 6 dB it can be increased with the knob and step keys, but not decreased.</p> |
| Max: | EXA: 60 dB MXA: 70 dB |
| Key Path: | AMPTD, Attenuation |
| Instrument S/W Revision: | A.01.60 or later |

Enable Elec Atten

You can enable or disable the Electrical Attenuator. The Electrical Attenuator offers no significant advantage over the Mechanical Attenuator for front-panel operation. Therefore it is assumed you will use the Mechanical Attenuator when operating the analyzer from the front-panel.

The electronic attenuator is unavailable above 3.6 GHz. Therefore, if the Stop Frequency of the analyzer is > 3.6 GHz then Enable Elec Atten is grayed out. If the Elec Atten is enabled, then the Stop Freq of the analyzer is limited to 3.6 GHz, which is to say the UI start, stop, center frequency and span values are all limited to a maximum of 3.6 GHz + Frequency Offset.

Remote Command: `[[:SENSE]:POWER[:RF]:EATTenuation:STATE OFF|ON|0|1`
`[[:SENSE]:POWER[:RF]:EATTenuation:STATE?`

Example: `POW:EATT:STAT ON`

Dependencies/Couplings: The electronic attenuator is unavailable above 3.6 GHz. Therefore, if the Stop Frequency of the analyzer is > 3.6 GHz then the Elec Atten is grayed out.

If the Internal Preamp is on, meaning it is set to Low Band or Full, the electronic attenuator is unavailable. In this case the Enable Elec Atten key will be OFF and grayed out.

If either of the above is true, if the SCPI command is sent, a generic error indicating that the electronic attenuator is unavailable will be sent.

If the Electronic Attenuator is enabled, then the Stop Freq of the analyzer is limited to 3.6 GHz and the Internal Preamp is unavailable.

Preset: OFF

State Saved: Saved in instrument state.

Key Path: AMPTD, Attenuation

Instrument S/W Revision: A.01.60 or later

When the Electrical Attenuator is enabled, the Mechanical Attenuator transitions to a state in which it has no Auto function. Here are the rules for transitioning the Mechanical Attenuator:

When the Electrical Attenuator is enabled:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or RPG, and it behaves as it normally would in manual mode
- The Auto/Man state of Mech Atten is saved
- The Auto/Man line on the Mech Atten key disappears and the auto rules are disabled
- The Electrical Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation.

Examples:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elect Atten set to 10 dB. New total attenuation equals value before Elec Atten enabled.
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elect Atten set to 0 dB. New total attenuation does not equal value before Elec Atten enabled.
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elect Atten set to 24 dB. New total attenuation does not equal value before Elec Atten enabled.

When the Electrical Attenuator is disabled:

- The Elec Atten key is grayed out

AMPTD Y Scale (Amplitude Y Scale)

- The Auto/Man state of Mech Atten is restored
- If now in Auto, Mech Atten recouples
- If now in man, Mech Atten sets to the value of total atten that existed before the Elec Atten was disabled. The resulting value should be rounded up to the smallest value possible given the Mech Atten Step setting - (That is, 57 dB would change to 58 dB when Mech Atten Step is 2 dB.)

Elec Atten

You can modify the electrical attenuation using this function

| | |
|--------------------------|--|
| Remote Command: | <code>[:SENSe] :POWer [:RF] :EATTenuation <rel_ampl></code> <code>[:SENSe] :POWer [:RF] :EATTenuation?</code> |
| Restriction and Notes: | Electrical Attenuation's spec is defined only when Mechanical Attenuation is 6 dB. |
| Dependencies/Couplings: | When Enable Elec Atten is off, Elec Atten key is grayed out. |
| Preset: | 0 dB |
| State Saved: | Saved in instrument state. |
| Min: | 0 dB |
| Max: | 24 dB |
| Key Path: | AMPTD, Attenuation |
| Instrument S/W Revision: | A.01.60 or later |

Adjust Atten for Min Clip


This function is similar to the "Optimize Ref Level" function in some measurements. Its purpose is to set the combination of mechanical and electrical attenuation based on the current measured signal level so that clipping will be at a minimum.

This is a "one-time" function, that is, it executes once, when the key is pressed.

This key is grayed out in measurements that do not support this functionality. The spectrum analyzer measurement, Swept SA, does not support this functionality.

| | |
|--------------------------|--|
| Remote Command: | <code>[:SENSe] :POWer [:RF] :RANGe:OPTimize IMMEDIATE</code> |
| Key Path: | AMPTD, Attenuation |
| Instrument S/W Revision: | A.01.60 or later |

The algorithm to be used is as follows:

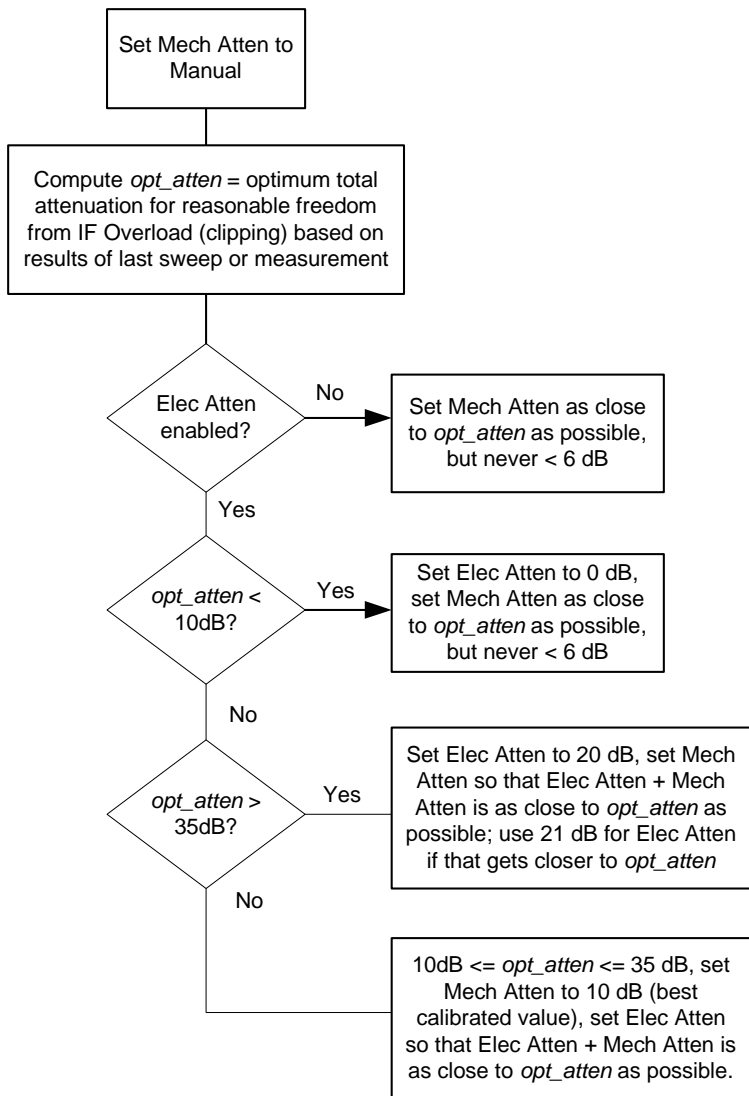

vsd04

Pre-Adjust for Min Clip

This adjustment executes each time a measurement restarts. Therefore, in Continuous, it only executes before the first measurement.

This key is grayed out in measurements that do not support this functionality. The spectrum analyzer measurement, Swept SA, does not support this functionality.

Remote Command: [:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation
OFF|ELECTrical|COMBined
[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?

State Saved: Saved in State

Key Path: AMPTD, Attenuation

Instrument S/W Revision: A.01.60 or later

AMPTD Y Scale (Amplitude Y Scale)

Remote Command: `[:SENSe] :POWer [:RF] :RANGe :AUTO ON | OFF | 1 | 0`
`[:SENSe] :POWer [:RF] :RANGe :AUTO ?`

Remote Command Notes: ON aliases to “Elec Atten Only”
OFF aliases to “Off”
The query returns true if not “Off”

Instrument S/W Revision: A.01.60 or later

Off

Example: `:POW:RANGe:OPT:ATT OFF`

Key Path: AMPTD, Attenuation, Pre-Adjust for Min Clip

Instrument S/W Revision: A.01.60 or later

Elec Atten Only

Example: `:POW:RANGe:OPT:ATT ELEC`

Key Path: AMPTD, Attenuation, Pre-Adjust for Min Clip

Instrument S/W Revision: A.01.60 or later

Mech + Elec Atten

Example: `:POW:RANGe:OPT:ATT COMB`

Key Path: AMPTD, Attenuation, Pre-Adjust for Min Clip

Instrument S/W Revision: A.01.60 or later

Mech Atten Step

This controls what step size is used when making adjustments to the Input Attenuation.

Remote Command: `[:SENSe] :POWer [:RF] :ATTenuation:STEP [:INCRement] 10 dB | 2 dB`
`[:SENSe] :POWer [:RF] :ATTenuation:STEP [:INCRement] ?`

Example: `POW:ATT:STEP 2`

Dependencies/Couplings: Blanked in EXA if option FSA (2 dB steps) is not present. Attempts to set it via SCPI will yield the “Option not present” error.

When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB

| | |
|--------------------------|---|
| Remote Command Notes: | Note this feature works like a 1-N choice from the front panel, but it takes a specific value (in dB) when used remotely. The only valid values are 2 and 10. |
| Preset: | MXA: 2 dB EXA: 10 dB (2 dB with option FSA) |
| State Saved: | Saved in State |
| Key Path: | AMPTD, Attenuation |
| Instrument S/W Revision: | A.01.60 or later |

Max Mixer Level

The Max Mixer Level controls the limitation on the Ref Level for a given attenuation setting, and therefore also interacts with the Auto rules for selecting the attenuation as a coupling from the reference level.

| | |
|--------------------------|---|
| Remote Command: | [:SENSE] :POWER [:RF] :MIXer:RANGe [:UPPer] <real> [:SENSe] :POWEr [:RF] :MIXer:RANGe [:UPPer] ? |
| Example: | POW:MIX:RANG -15 dBm |
| Preset: | -10 dBm |
| State Saved: | Saved in State |
| Min: | -50 dBm |
| Max: | -10 dBm |
| Key Path: | AMPTD, Attenuation |
| Default Unit: | Depends on the current selected Y axis unit, see Swept SA discussion of Y Axis Unit |
| Instrument S/W Revision: | A.01.60 or later |

Range

This key is only available when I/Q is the selected input. It replaces the Attenuation key in that case.

Each input channel (I and Q) has four internal gain ranges. The maximum allowed voltage in each gain range is slightly more than the nominal value, so the break point between ranges is a couple millivolts higher than the nominal (setting a peak voltage of 0.502 mV will still map to the 0.5 V Peak range).

| Gain Setting | Volts RMS | Volts Peak | Volts Peak - Peak | dBm (50Ω) | Break Point |
|--------------|-----------|------------|-------------------|-----------|--------------|
| 0 dB | 0.7071 | 1.0 | 2.0 | 10 | n/a |
| 6 dB | 0.3536 | 0.5 | 1.0 | 4 | 0.502 V Peak |
| 12 dB | 0.1768 | 0.25 | 0.5 | -2 | 0.252 V Peak |

AMPTD Y Scale (Amplitude Y Scale)

18 dB 0.0884 0.125 0.25 -8 0.127 V Peak

Key Path AMPTD Y Scale
 State Saved No
 Restriction and Notes Visible only when the selected input is I/Q.
 Instrument S/W Revision A.01.60 or later

Range Auto/Man

The Auto setting for Range will cause the range to be set based on the Y Scale settings. When Range is “Auto”, the I & Q Range are set based on the top of the Y Scale when the Y scale is in dB units (for example, power), or to the max(abs(top), abs(bottom)) when the Y scale reference is not at top of screen.

Not all measurements support Range Auto/Man. If Auto is not supported in the current measurement, this key is grayed out and shows “Man” and MAN is returned to a SCPI query; but this does NOT change the Meas Global Auto/Man for Range, so when you go to a measurement that supports Auto, it goes back to Auto if it was previously in Auto.

Key Path AMPTD Y Scale, Range
Remote Command [:SENSe]:VOLTage:IQ:RANGe:AUTO OFF|ON|0|1
 [:SENSe]:VOLTage:IQ:RANGe:AUTO?
 Preset ON
 State Saved Saved in instrument state.
 Range Auto | Man
 Dependencies/Couplings When in Auto, both I Range and Q Range are set to the same value, computed as follows:
 Maximum absolute value is computed for the Y Scale. The top and bottom of the graph are computed based on Ref Value, Scale/Div, and Ref Position.
 Formula: YMax = max(abs(top), abs(bottom)).
 The I Range and Q Range are then set to YMax.
 If Auto is not supported, sending the SCPI command will generate an error.
 Example Put the I Range and Q Range in manual.
 VOLT:IQ:RANG:AUTO OFF
 Instrument S/W Revision A.01.60 or later

This is an alternate form of the SCPI command to match the POWER form of the I Range and Q Range SCPI.

Remote Command: [:SENSe]:POWER:IQ:RANGe:AUTO OFF|ON|0|1
 [:SENSe]:POWER:IQ:RANGe:AUTO?

| | |
|--------------------------|--|
| Preset: | ON |
| Range: | Auto Man |
| Remote Command Notes: | The POW:IQ:RANG:AUTO is an alternate form of the VOLT:IQ:RANG:AUTO command. This is to maintain consistency with I Range and Q Range, which support both the POWER and VOLTage forms of the command. |
| Example: | Put the I Range and Q Range in manual. POW:IQ:RANG:AUTO OFF |
| Instrument S/W Revision: | A.01.60 or later |

I Range

This is the internal gain range for the I channel when Input Path is I Only or Ind I/Q, and it is used for both the I and Q channels when Input Path is I+jQ. See [“I/Q Gain Ranges” on page 1048](#).

| | |
|-------------------------|--|
| Key Path | AMPTD Y Scale, Range |
| Remote Command | [:SENSE] :VOLTage : IQ [: I] :RANGe [:UPPer] <voltage> [:SENSE] :VOLTage : IQ [: I] :RANGe [:UPPer] ? |
| Preset | 1 V Peak |
| State Saved | Saved in instrument state. |
| Range | 1 V Peak 0.5 V Peak 0.25 V Peak 0.125 V Peak |
| Dependencies/Couplings | When Q Same as I is On, the I Range value will be copied to the Q Range. Changing the value will also set Range = Man. |
| Remote Command Notes | The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V. |
| Example | Set the I Range to 0.5 V Peak VOLT:IQ:RANG 0.5 V |
| Instrument S/W Revision | A.01.60 or later |

This is an alternate form of the SCPI command to allow entry as a power.

| | |
|------------------------|---|
| Remote Command: | [:SENSE] :POWER : IQ [: I] :RANGe [:UPPer] <ampl> [:SENSE] :POWER : IQ [: I] :RANGe [:UPPer] ? |
| Preset: | 10.0 dBm |
| Range: | -20 dBm to 10 dBm |
| Min: | -20 dBm |
| Max: | 10 dBm |

AMPTD Y Scale (Amplitude Y Scale)

| | |
|--------------------------|---|
| Remote Command Notes: | <p>The POWer form of the command is provided for convenience. It maps to the same underlying gain range parameter as the VOLTage form of the command.</p> <p>The Reference Z (not the I channel Input Z) is used to convert the power to peak voltage, which is then used to set the I Range as with the VOLTage form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples:</p> <p>50Ω: 10, 4, -2, -8</p> <p>75Ω: 8.2, 2.2, -3.8, -9.8</p> <p>600Ω: -0.8, -6.8, -12.8, -18.9</p> |
| Example: | <p>Set the I Range to 0.5 V Peak when Reference Z is 50Ω, and to 1.0 V Peak when Reference Z is 75Ω</p> <p>POW:IQ:RANG 4 dBm</p> |
| Instrument S/W Revision: | A.01.60 or later |

Q Range

Bring up the Q Range menu.

| | |
|-------------------------|----------------------|
| Key Path | AMPTD Y Scale, Range |
| Instrument S/W Revision | A.01.60 or later |

Q Same as I Many, but not all, usages require the I and Q channels have an identical setup. To simplify channel setup, the Q Same as I will cause the Q channel range to be mirrored from the I channel. That way you only needs to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time Q Same as I is “Off” the I and Q channel setups will be identical.

| | |
|-------------------------|---|
| Key Path | AMPTD Y Scale, Range, Q Range |
| Remote Command | <pre>[:SENSe] :VOLTage POWer : IQ : MIRRored OFF ON 0 1 [:SENSe] :VOLTage POWer : IQ : MIRRored ?</pre> |
| Preset | On |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Dependencies/Couplings | When On, the I Range value is mirrored (copied) to the Q Range. |
| Example | <p>Turn off the mirroring of I Range to Q Range.</p> <pre>VOLT:IQ:MIRR OFF POW:IQ:MIRR OFF</pre> |
| Instrument S/W Revision | A.01.60 or later |

Q Range Value This is the internal gain range for the Q channel. See “I/Q Gain Ranges” on page 1048.

The Q Range only applies to Input Path Q Only and Ind I/Q. For input I+jQ the I Range determines both I and Q channel range settings.

| | |
|-------------------------|--|
| Key Path | AMPTD Y Scale, Range |
| Remote Command | [:SENSE] :VOLTage:IQ:Q:RANGe [:UPPer] <voltage> [:SENSE] :VOLTage:IQ:Q:RANGe [:UPPer] ? |
| Preset | 1 V Peak |
| State Saved | Saved in instrument state. |
| Range | 1 V Peak 0.5 V Peak 0.25 V Peak 0.125 V Peak |
| Dependencies/Couplings | When Q Same as I is On, the I Range value will be copied to the Q Range and the range value keys are disabled. Changing the value will also set Range = Man. |
| Remote Command Notes | The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V. The Q Range is only used for Input Path Q Only and Ind I/Q. For input I+jQ the I Range determines both I and Q channel range settings. |
| Example | Set the Q Range to 0.5 V Peak VOLT:IQ:Q:RANG 0.5 V |
| Instrument S/W Revision | A.01.60 or later |

This is an alternate form of the SCPI command to allow entry as a power.

| | |
|------------------------|---|
| Remote Command: | [:SENSE] :POWer:IQ:Q:RANGe [:UPPer] <ampl> [:SENSE] :POWer:IQ:Q:RANGe [:UPPer] ? |
| Preset: | 10.0 dBm |
| Range: | -20 dBm to 10 dBm |
| Min: | -20 dBm |
| Max: | 10 dBm |

AMPTD Y Scale (Amplitude Y Scale)

Remote Command Notes: The POWER form of the command is provided for convenience. It maps to the same underlying gain range parameter as the VOLTage form of the command.

The Reference Z (not the Q channel Input Z) is used to convert the power to peak voltage, which is then used to set the Q Range as with the VOLTage form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples:

50Ω: 10, 4, -2, -8

75Ω: 8.2, 2.2, -3.8, -9.8

600Ω: -0.8, -6.8, -12.8, -18.9

Example: Will set the Q Range to 0.5 V Peak when Reference Z is 50Ω, and to 1.0 V Peak when Reference Z is 75Ω

POW:IQ:Q:RANG 4 dBm

Instrument S/W Revision: A.01.60 or later

I/Q Gain Ranges

1 V Peak Set the channel gain state to 1 Volt Peak.

Key Path AMPTD Y Scale, I Range | Q Range

Instrument S/W Revision A.01.60 or later

0.5 V Peak Set the channel gain state to 1 Volt Peak.

Key Path AMPTD Y Scale, I Range | Q Range

Instrument S/W Revision A.01.60 or later

0.25 V Peak Set the channel gain state to 1 Volt Peak.

Key Path AMPTD Y Scale, I Range | Q Range

Instrument S/W Revision A.01.60 or later

0.125 V Peak Set the channel gain state to 1 Volt Peak.

Key Path AMPTD Y Scale, I Range | Q Range

Instrument S/W Revision A.01.60 or later

Presel Center

When this key is pressed, the centering of the preselector filter is adjusted to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when Presel Center is pressed, the analyzer will turn on the selected marker, perform a peak search, and then perform centering

on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the analyzer, the analyzer performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range between Start Freq and Stop Freq, the analyzer will first perform a peak search, then perform centering on the marker's center frequency.

A number of considerations should be observed to ensure proper operation:

If the selected marker is already on, the analyzer will attempt the centering at that marker's frequency.

There is no preselector for signals below about 3.6 GHz

The preselector can be bypassed (see **Input/Output, Preselector On/Off**). If it is bypassed, no centering will be attempted in that range (error 229).

When centering the preselector, *OPC will not return true until the process is complete and a subsequent measurement has completed, nor will results be returned to a READ or MEASure command. Note further that if the box is in a measurement such as averaging when this happens, the act of centering the preselector will restart averaging but the first average trace will not be taken until the centering is completed.

Remote Command: [:SENSe] :POWer [:RF] :PCENter

Example: POW:PCEN

- Dependencies/Couplings:
- Grayed out if microwave preselector is off (see **Input/Output, Microwave Preselector On/Off**)
 - If the selected marker's frequency is below Band 1, advisory message is generated and no action is taken.
 - Grayed out if entirely in Band 0.
 - Blank in models that do not include a preselector, such as option 503. If the SCPI is sent in such models, it generates an error.
 - Active marker position determines where the centering will be attempted.

Remote Command Notes: Note that the rules outlined above under the key description apply for the remote command as well as the key. Hence, the result of the command is dependent on marker position, etc. Any message shown by the key press is also shown in response to the remote command.

Key Path: AMPTD

SCPI Status Bits/OPC Dependencies: The Measuring bit should remain set while this command is operating and should not go false until the subsequent sweep/measurement has completed.

AMPTD Y Scale (Amplitude Y Scale)

Instrument S/W Revision: A.01.60 or later

Preselector Adjust

Allows you to manually adjust the preselector filter frequency to optimize its response to the signal of interest. This function is only available when **Presel Center** is available (see **Presel Center**, above), that is, the same gray-out rules apply.

For general purpose signal analysis, using Presel Center is recommended. Centering the filter minimizes the impact of long-term preselector drift. Presel Adjust can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

Preselector Adjust is a Meas Global parameter.

Remote Command: [:SENSe]:POWer[:RF]:PADJust <freq>
[:SENSe]:POWer[:RF]:PADJust?

Example: POW:PADJ 100KHz
POW:PADJ?

Dependencies/Couplings:

- Grayed out if microwave preselector is off (see **Input/Output, Microwave Preselector On/Off**)
- Grayed out if entirely in Band 0.
- Blank in models that do not include a preselector, such as option 503. If the SCPI is sent in these instruments, it generates an error.

Preset: 0 MHz

State Saved: The **Presel Adjust** value set by **Presel Center**, or by manually adjusting **Presel Adjust**, is not saved in Instrument State, and does not survive Preset or power cycle.

Min: -500 MHz

Max: 500 MHz

Key Path: AMPTD

Default Unit: Hz

Instrument S/W Revision: A.01.60 or later

Remote Command: `[:SENSe] :POWer [:RF] :PADJust :PRESelector
MWAVE | MMWave | EXTernal`
`[:SENSe] :POWer [:RF] :PADJust :PRESelector?`

Remote Command Notes: `[:SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE|MMWave|EXTernal`
where: MWAV = 3–26 GHz
MMWave = 26–50 GHz
EXTernal = External

Preselector Selection - PSA had multiple preselectors, and you could select which preselector to center. Since MXA will have only one preselector, the preselector selection key will no longer be available. However, in order to provide backward compatibility, we will support the remote command.

The command form is a NOP

The query will return MWAVE

Instrument S/W Revision: A.01.60 or later

Internal Preamp

Accesses keys that control the internal preamps. Turning on the preamp gives a better noise figure, but a poorer TOI to noise floor dynamic range. You can optimize this setting for your particular measurement.

Preamp on/off and Preamp Band are Meas Global parameters.

Remote Command: `[:SENSe] :POWer [:RF] :GAIN [:STAtE] OFF | ON | 0 | 1`
`[:SENSe] :POWer [:RF] :GAIN [:STAtE] ?`

Dependencies/Couplings: Preamp is not available on all hardware platforms. If the preamp is not present or is unlicensed, the key is not shown.

The preamp is not available when the electronic attenuator is enabled.

Preset: OFF

State Saved: Saved in state

Key Path: AMPTD

Instrument S/W Revision: A.01.60 or later

AMPTD Y Scale (Amplitude Y Scale)

Remote Command: [:SENSE]:POWER[:RF]:GAIN:BAND LOW|FULL
[:SENSE]:POWER[:RF]:GAIN:BAND?

Dependencies/Couplings: Preamp is not available on all hardware platforms. If the preamp is not present or is unlicensed, the key is not shown.

If a POW:GAIN:BAND FULL command is sent when a low band preamp is available, the preamp band parameter is to LOW instead of FULL, and an “Option not installed” message is generated.

Preset: LOW
State Saved: Saved in state
Key Path: AMPTD, Internal Preamp
Instrument S/W Revision: A.01.60 or later

Off

Turns the internal preamp off

Example: :POW:GAIN OFF
Key Path: AMPTD, Internal Preamp
Instrument S/W Revision: A.01.60 or later

Low Band

Sets the internal preamp to use only the low band (0–3 GHz)

Example: :POW:GAIN ON
:POW:GAIN:BAND LOW
Key Path: AMPTD, Internal Preamp
Instrument S/W Revision: A.01.60 or later

Full Range

Sets the internal preamp to use its full range. The low band (0–3 GHz) is supplied by the low band preamp and the frequencies above 3.6 GHz are supplied by the high band preamp.

The instrument compensates for the preamp gain(s) as it sweeps. For the value of “Int Preamp Gain” in the Ref Level equations, we assume a preamp gain of 20 dB in Low Band Preamp mode and 35 dB in Full Range preamp mode. These gain rules are not dependent on start and stop frequencies. These gains are the maximum gain of the preamp hardware; we will always have the same or less actual gain, providing clipping margin.

The frequency range of the installed (optional) preamp is displayed in square brackets on the key label. If

the high band option is not installed the Full Range key does not appear.

Example: :POW:GAIN ON
 :POW:GAIN:BAND FULL
Key Path: AMPTD, Internal Preamp
Instrument S/W Revision: A.01.60 or later

AMPTD Y Scale (Amplitude Y Scale)

AUTO COUPLE

The Auto Couple feature provides a quick and convenient way to automatically couple multiple instrument settings. This helps ensure accurate measurements and optimum dynamic range. When the Auto Couple feature is activated, either from the front panel or remotely, all parameters of the current measurement which have an Auto/Manual mode are set to Auto mode and all measurement settings dependent on (or coupled to) the Auto/Man parameters are automatically adjusted for optimal performance.

However, the Auto Couple key is meas local key, so its actions are confined to the current measurement only. It does not affect other measurements in the mode, and it does not affect markers, marker functions, or trace or display attributes.

Remote Command: :COUPLe ALL|NONE

Example: :COUP ALL

Remote Command Notes: :COUPLe ALL puts all Auto/Man parameters in Auto mode (equivalent to pressing the **Auto Couple** key).
 :COUPLE NONE puts all Auto/Man parameters in manual mode. It decouples all the coupled instrument parameters and is not recommended for making measurements.

Instrument S/W Revision: A.01.60 or later

AUTO COUPLE

BW

Bandwidth features are unique to each Measurement. See the specific Measurement for more information.

The front-panel key accesses keys to control measurement bandwidth settings.

| | |
|-------------------------|------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

BW

FREQ/Channel

The key accesses a menu allowing you to set Frequency parameters for the current measurement. All measurements in cdma2000 mode has same menu structure under FREQ/Channel hardkey. See the information of Center Freq and CF Step under this key.

Key Path Front-panel key

Center Freq (Selected Input)

The front panel displays and sets the Center Freq for the selected input. Changing the selected input will update the displayed value to match. The SCPI will also get or set Center Freq for the selected input.

| | |
|-----------------------|---|
| Mode | cdma2000 |
| Remote Command | [:SENSe] :FREQuency:CENTer <freq> [:SENSe] :FREQuency:CENTer? |
| Example | FREQ:CENT 30 MHz |
| Remote Command Notes | This command sets either the RF or I/Q Center Frequency depending on the selected input. For RF input it is equivalent to FREQ:RF:CENT For I/Q input it is equivalent to FREQ:IQ:CENT |
| Preset | Varies with selected input (see RF Center Freq and I/Q Center Freq) |
| State Saved | Varies with selected input (see RF Center Freq and I/Q Center Freq) |
| Min | Varies with selected input (see RF Center Freq and I/Q Center Freq) |
| Max | Varies with selected input (see RF Center Freq and I/Q Center Freq) |

RF Center Freq

SCPI command for specifying the RF Center Frequency. This will always access the RF value, even when the selected input is not RF. The front panel always uses the Freq Center (Selected Input).

| | |
|-----------------------|--|
| Mode | cdma2000 |
| Remote Command | [:SENSe] :FREQuency:RF:CENTer <freq> [:SENSe] :FREQuency:RF:CENTer? |
| Example | FREQ:RF:CENT 30 MHz |

FREQ/Channel

| | |
|----------------------|--|
| Remote Command Notes | This command is the same in all modes, but the parameter is Measurement Global. So the value is independent in each mode and common across all the measurements in the mode. |
| Preset | 1.0 GHz |
| State Saved | Saved in instrument state. |
| Min | -79.999995 MHz |
| Max | Hardware Dependent: Opt503 = 3.699999995 GHz Opt508 = 8.499999995 GHz Opt513 = 13.799999995 GHz Opt526 = 26.999999995 GHz |

I/Q Center Freq

SCPI command for specifying the I/Q Center Frequency. This will always access the I/Q value, even when the selected input is not I/Q. The front panel always uses the Freq Center (Selected Input).

| | |
|-----------------------|--|
| Mode | cdma2000 |
| Remote Command | [:SENSe] :FREQuency:IQ:CENTer <freq> [:SENSe] :FREQuency:IQ:CENTer? |
| Example | FREQ:IQ:CENT: 30 MHz |
| Remote Command Notes | This command is the same in all modes, but the parameter is Measurement Global. So the value is independent in each mode and common across all the measurements in the mode. |
| Preset | 0 Hz |
| State Saved | Saved in instrument state. |
| Min | -39.999995 MHz |
| Max | 39.999995 MHz |

CF Step

CF Step changes the step size for the center frequency.

| | |
|-----------------------|--|
| Mode | cdma2000 |
| Remote Command | [:SENSe]:FREQuency:CENTer:STEP[:INCRement] <freq> [:SENSe]:FREQuency:CENTer:STEP[:INCRement]? [:SENSe]:FREQuency:CENTer:STEP:AUTO ON OFF 1 0 [:SENSe]:FREQuency:CENTer:STEP:AUTO? |
| Example | :FREQ:CENT:STEP:AUTO 0 |
| Preset | 1.25 MHz, Auto On |
| State Saved | Saved in instrument state. |
| Min | 1000 |
| Max | 1 GHz |
| Key Path | FREQ/Channel |

FREQ/Channel

Cont (Continuous Measurement/Sweep)

Cont Sets the analyzer for Continuous measurement operation. The single/continuous state is Meas Global so the setting will affect all measurements. If you are Paused, pressing Cont does a Resume.

| | |
|--------------------------|---|
| Remote Command: | :INITiate:CONTinuous OFF ON 0 1 :INITiate:CONTinuous? |
| Example: | :INIT:CONT 0 puts analyzer in Single measurement operation. :INIT:CONT 1 puts analyzer in Continuous measurement operation |
| Preset: | ON (Note that SYST:PRESet sets INIT:CONT to ON but *RST sets INIT:CONT to OFF) |
| State Saved: | Saved in Instrument State |
| Key Path: | Front-panel key |
| Instrument S/W Revision: | A.01.60 or later |

In Swept SA Measurement (Spectrum Analysis Mode):

The analyzer takes repetitive sweeps, averages, measurements, etc. when in Continuous mode. When the average count reaches the **Average/Hold Number** the count stops incrementing but the analyzer keeps sweeping. See the Trace/Detector section for the averaging formula used both before and after the **Average/Hold Number** is reached. The trigger condition must be met prior to each sweep. The type of trace processing for multiple sweeps, is set under the Trace/Detector key, with choices of **Trace Average, Max Hold, or Min Hold**.

In Other Measurements/Modes:

With **Avg Number** (in **Meas Setup** menu) set to **Off** or set to **On** with a value of 1, a sweep is taken after the trigger condition is met; and the analyzer continues to take new sweeps after the current sweep has completed and the trigger condition is again met. However, with **Avg Number** set to On with a value >1, multiple sweeps (data acquisitions) are taken for the measurement. The trigger condition must be met prior to each sweep. The sweep is not stopped when the average count k equals the number N set for Avg Number is reached, but the number k stops incrementing. A measurement average usually applies to all traces, marker results, and numeric results. But sometimes it only applies to the numeric results.

If the analyzer is in Single measurement, pressing the **Continuous** key does not change k and does not cause the sweep to be reset; the only action is to put the analyzer into Continuous measurement operation.

If it's already in continuous sweep:

the INIT:CONT 1 command has no effect

the INIT:CONT 0 command will place the analyzer in Single Sweep but will have no effect on the current sequence until k = N, at which point the current sequence will stop and the instrument will go to

Cont (Continuous Measurement/Sweep)

the idle state.

Input/Output

The Input/Output features are common across multiple Modes and Measurements. These common features are described in this section. See the Measurement description for information on features that are unique.

The Input/Output key accesses the keys that control the Input/Output parameters of the instrument.

Other functions related to the input/output connections can be found under **Trig** (trigger input controls) and **System** (LAN and other I/O bus configurations) and **Amplitude** (optional internal preamp).

NOTE The functions in the Input/Output menu are common to all Modes (applications). They are “global”. But individual functions are only available in a mode if they make sense. They will be grayed out (as opposed to not showing them at all). This is a special behavior of the Input/Output Menu, which is the only menu that is common across all applications.

| | |
|--------------------------|--|
| Remote Command: | [:SENSE] :FEED RF AIQ IQ IONLY QONLY INDEPENDENT REFERENCE [:SENSE] :FEED? |
| Remote Command Notes: | The parameter EXTMixer is for future use and is not supported at this time; sending it generates an error. |
| Preset: | This setting is unaffected by a Preset or power cycle. It survives Mode Preset and mode changes. It is set to RF on a “Restore Input/Output Defaults” or “Restore System Defaults->All” |
| State Saved: | Saved in state |
| Instrument S/W Revision: | A.01.60 or later |

Virtually all the input/output settings are NOT a part of mode preset. They can be set to their default value by one of the three ways - by using the Restore Input/Output Defaults key on the first page of the input/output menu, by using the System->Restore System Defaults->Input/Output Settings or by using the System -> Restore System Defaults->All. Also, they survive Preset and Power cycle.

A very few of the Input/Output settings do respond to a Mode Preset; for example, if the Calibrator is on it turns off on a Preset, and if DC coupling is in effect it switches to AC on a Preset. These exceptions are made in the interest of reliability and usability, which overrides the need for absolute consistency. Exceptions are noted in the SCPI table for the excepted functions.

Input/Output

RF Input

Selects the front panel RF input port to be the analyzer signal input. If RF is already selected, pressing this key accesses the RF input setup functions.

Example: [:SENSe]:FEED RF
Key Path: Input/Output
Instrument S/W Revision: A.01.60 or later

Input Z Correction

Sets the input impedance for unit conversions. This affects the results when the y axis unit is voltage or current units (dBmV, dB μ V, dB μ A, V, A) but not when it is power units (dBm, W). The impedance you select is for computational purposes only, since the actual impedance is set by internal hardware to 50 ohm. Setting the computational input impedance to 75 ohm is useful when using a 75 ohm to 50 ohm adapter to measure a 75 ohm device on an analyzer with 50 ohm input impedance.

There are a variety ways to make 50 to 75 ohm transitions, such as impedance transformers or minimum loss pads. The choice of the solution that is best for your measurement situation requires balancing the amount of loss that you can tolerate with the amount of measurement frequency range that you need. If you are using one of these pads/adaptors with the **Input Z Corr** function, you might also want to use the **Ext Gain** key. This function is used to set a correction value to compensate for the gain (loss) through your pad. This correction factor is applied to the displayed measurement values.

Remote Command: [:SENSe]:CORRection:IMPedance[:INPut][:MAGNitude] 50|75
 [:SENSe]:CORRection:IMPedance[:INPut][:MAGNitude]?

Example: CORR:IMP 75 sets the input impedance correction to 75 ohms.
 CORR:IMP?

Preset: This is unaffected by Preset but is set to 50 ohms on a “Restore Input/Output Defaults” or “Restore System Defaults->All”
 Some instruments/options may have 75 ohms available.

State Saved: Saved in State
Key Path: Input/Output, RF
Instrument S/W Revision: A.01.60 or later

RF Coupling

Specifies alternating current (AC) or direct current (DC) coupling at the analyzer RF input port. Selecting AC coupling switches in a blocking capacitor that blocks any DC voltage present at the analyzer input. This decreases the input frequency range of the analyzer, but prevents damage to the input circuitry of the analyzer if there is a DC voltage present at the RF input.

In AC coupling mode, you can view signals less than 10 MHz but the amplitude accuracy is not specified. To accurately see a signal of less than 10 MHz, you must switch to DC coupling.

Some amplitude specifications apply only when coupling is set to DC. Refer to the appropriate amplitude specifications and characteristics for your analyzer.

When operating in DC coupled mode, ensure protection of the analyzer input circuitry by limiting the DC part of the input level to within 200 mV of 0 Vdc. In AC or DC coupling, limit the input RF power to +30 dBm (1 Watt).

Selecting Input Coupling

| X-Series Option | AC Frequency Range | N9010A DC Frequency Range | N9020A DC Frequency Range |
|-----------------|--------------------|---------------------------|---------------------------|
| Option 503 | 10 MHz to 3.6 GHz | 9 kHz to 3.6 GHz | 3 Hz to 3.6 GHz |
| Option 507 | 10 MHz to 7.0 GHz | 9 kHz to 7.0 GHz | |
| Option 508 | 10 MHz to 8.4 GHz | | 3 Hz to 8.4 GHz |
| Option 513 | 10 MHz to 13.6 GHz | 9 kHz to 13.6 GHz | 3 Hz to 13.6 GHz |
| Option 526 | 10 MHz to 26.5 GHz | 9 kHz to 26.5 GHz | 3 Hz to 26.5 GHz |

Remote Command: :INPut:COUPling AC|DC
:INPut:COUPling?

Example: INP:COUP DC

Preset: AC

State Saved: Saved in State

Key Path: Input/Output, RF

Instrument S/W Revision: A.01.60 or later

I/Q

This feature is not available unless the Baseband I/Q option (BBA) is installed.

Selects the front panel I/Q input ports to be the analyzer signal input. If I/Q is already selected, pressing this key accesses the I/Q setup menu.

Restriction and Notes Not all measurements support the use of the I/Q signal input. When I/Q is selected in a measurement that does not support it, the “Meas invalid with I/Q inputs” error condition occurs.

Input/Output

| | |
|-------------------------|--|
| Remote Command Notes | <p>The parameters IQ IONLy QONLy are only supported for backwards compatibility. The E44406 SCPI has the following that corresponds to FEED:IQ:TYPE for MXA.</p> <p>[[:SENSe]:FEED IQ IONLy QONLy</p> <p>[[:SENSe]:FEED?</p> <p>[[:SENSe]:FEED IQ will set the I/Q path to IQ</p> <p>[[:SENSe]:FEED IQN Ly will set the I/Q path to I Only</p> <p>[[:SENSe]:FEED IQN Ly will set the I/Q path to Q Only</p> <p>Note [[:SENSe]:FEED? will not be backward compatible.</p> <p>The query [[:SENSe]:FEED? will always returns AIQ whatever the type of legacy parameters IQ IONLy QONLy has been used.</p> |
| Example | FEED AIQ |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Input/Output |
| Mode | BASIC, CDMA2K, EDGE GSM, TDSCMDA, VSA89601, WIMAXOFDMA |

The Baseband I/Q functionality is a hardware option. It is option BBA. If the option is not installed, none of the I/Q functionality is enabled.

The Baseband I/Q has four input ports and one output port. The input ports are I, I-bar, Q, and Q-bar. The I and I-bar together compose the I channel and the Q and Q-bar together compose the Q channel. Each channel has two modes of operation, Single-Ended (also called “unbalanced”) and Differential Input (also called “balanced”). When in Single-Ended operation, only the main port (I or Q) is used and the complementary port (I-bar or Q-bar) is ignored. When in Differential Input mode, both main and complementary ports are used.

The input settings (range, attenuation, skew, impedance, external gain) apply to the channels, not the individual ports.

The system supports a variety of 1 M Ω input passive probes as well as the Agilent 113x Series active differential probes using the Infinimax probe interface.

The Agilent 113x Series active probes can be used for both single ended and differential measurements. In either case a single connection is made for each channel (on either the I or Q input). The input is automatically configured to 50 Ω single ended and the probe power is supplied through the Infinimax interface. The probe can be configured for a variety of input coupling and low frequency rejection modes. In addition, a wide range of offset voltages and probe attenuation accessories are supported at the probe interface. The active probe has the advantage that it does not significantly load the circuit under test, even with unity gain probing.

With passive 1 M Ω probes, the probe will introduce a capacitive load on the circuit, unless higher attenuation is used at the probe interface. Higher attenuation reduces the signal level and degrades the signal-to-noise-ratio of the measurement. Passive probes are available with a variety of attenuation values for a moderate cost. Most Agilent passive probes can be automatically identified by the system, setting the input impedance setting required as well as the nominal attenuation. For single ended

measurements a single probe is used for each channel. Other passive probes can be used, with the attenuation and impedance settings configured manually.

For full differential measurements, the system supports probes on each of the four inputs. The attenuation of the probes should be the same for good common mode rejection and channel match.

Both active and passive probes in single ended and differential configurations can be calibrated. This calibration uses the Cal Out BNC connection and a probe connection accessory. The calibration achieves excellent absolute gain flatness in a probed measurement. It matches both the gain and frequency response of the I and Q channels as well as any delay skew, resulting in high accuracy in derived measurements such as Error Vector Magnitude (EVM).

When a probe is connected a status message will be displayed. The message will indicate if calibration data is available or not. Calibration data is saved for each type of probe (including “none”) for each port and will be reapplied whenever that type of probe is re-connected to the same port. For probes with EEPROM identification, the calibration data will be stored based on the unique probe identifier and will reapply data for that particular probe if it is available. The data will not follow a probe from one port to another. For probes without EEPROM identification, the instrument cannot distinguish between different probes of the same type and it will use the data from the last calibration for that probe type on that port.

When in differential mode, both the main and complementary probes are expected to be of the same type.

In some situations, the I and Q channels should be configured identically. In other situations it is convenient to control them independently. Some menus have a “Q Same as I” setting that will cause the Q channel configuration to mirror the I channel configuration, avoiding the overhead of double data entry when the channels should be the same.

The output port is for calibrating the I/Q input ports, although it can also be manually controlled.

There are two types of calibrations available: cable calibration and probe calibration. The cable calibration will guide you through connecting each input port in turn. All ports must be calibrated together. The probe calibration is done for a specific channel (I or Q). If in Single-Ended mode, only the main port is calibrated. When in Differential Input mode, you are guided through calibrating both main and complementary ports.

The front panel I/Q port LEDs indicate the current state of that port. On (green) indicates it is active, and off (dark) indicates it is not in use. For example, the Cal Out port LED is on if and only if there is signal coming out of that port.

The input is a context and some parameters have separate values for each context. The SCPI for these parameters has an optional “[:RF|IQ]” node. If the specific context is omitted, the command acts on the current input context's value. Here are the parameters that are input context sensitive:

- Center Frequency
- Trigger Source

It is important to distinguish between the I and Q input ports and the displayed I and Q data values. The I and Q input ports feed into a digital receiver that does digital tuning and filtering. The I and Q data seen by you (either on the display or through SCPI) corresponds to the real (“I”) and the imaginary (“Q”) output from the digital receiver. When the input path is $I+jQ$ or I Only and the center frequency is 0 Hz the I input ends up in as the real output from the receiver and appears as “I” data. Likewise, when the

Input/Output

input path is $I+jQ$ and the center frequency is 0 Hz, the Q input ends up as the imaginary output from the receiver and appears as “Q” data. However, when the input path is Q Only, the Q input is sent to the receiver as $Q+j0$, so the receiver output has the Q input coming out on the real output, and so in Q Only, the signal from the Q input port appears as the “I” data. Another situation where the I and Q data do not necessarily correspond directly to the I and Q inputs is when the center frequency is non-zero. The digital processing involved in the tuning is a complex operation. This will result in I Only data appearing as both “I” and “Q” data, the same as that signal would appear if seen through the RF input port.

I/Q Path

Select which I/Q input channels are active. The LED next to each I/Q input port will be on when that port is active.

The analysis bandwidth for each channel is the same as that of the instrument. So, for example, the base N09020A has a bandwidth of 10 MHz. With I/Q input the I and Q channels would each have an analysis bandwidth of 10 MHz, giving 20 MHz of bandwidth when the I/Q Path is $I+jQ$. With option B25, the available bandwidth becomes 25 MHz, giving 25 MHz each to I and Q and 50 MHz to $I+jQ$.

I/Q voltage to power conversion processing is dependent on the I/Q Path selected.

- With $I+jQ$ input we know that the input signal may not be symmetrical about 0 Hz, because it has a complex component. Therefore, above 0 Hz only the positive frequency information is displayed, and below 0 Hz only the negative frequency information is displayed.
- With all other Input Path selections, the input signal has no complex component and therefore is always symmetrical about 0 Hz. In this case, by convention, the power conversion shows the combined voltage for both the positive and negative frequencies. The information displayed below 0 Hz is the mirror of the information displayed above 0 Hz. This results in a power reading 6.02 dB higher (for both) than would be seen with only the positive frequency voltage. Note also that, in this case the real signal may have complex modulation embedded in it, but that must be recovered by further signal processing.

•

| | |
|-------------------------|---|
| Key Path | Input/Output, I/Q |
| Remote Command | [:SENSE] :FEED:IQ:TYPE IQ IONLY QONLY INDEPENDENT [:SENSE] :FEED:IQ:TYPE? |
| Preset | IQ |
| State Saved | Yes |
| | This is unaffected by Preset but is set to the default value on a “Restore Input/Output Defaults” or “Restore System Defaults->All” |
| Range | $I+jQ$ I Only Q Only Independent I and Q |
| Restriction and Notes | The Independent I and Q selection is only available in GPVSA |
| Example | Set the input to be both the I and Q channels, combined as $I + j * Q$. FEED:IQ:TYPE IQ |
| Instrument S/W Revision | A.01.60 or later |

Remote Command: :INPut[1]:IQ:TYPE IQ|I|Q
:INPut[1]:IQ:TYPE?

Preset: IQ

Instrument S/W Revision: A.01.60 or later

I+jQ Set the signal input to be both the I and Q channels. The I and Q channel data will be combined as $I + j * Q$.

Key Path Input/Output, I/Q, I/Q Path

Example Set the input to be both the I and Q channels, combined as $I + j * Q$.

FEED:IQ:TYPE IQ

Instrument S/W Revision A.01.60 or later

I Only Set the signal input to be only the I channel. The Q channel will be ignored. The data collected is still complex. When the center frequency is 0 the imaginary part will always be zero, but for any other center frequency both the real and imaginary parts will be significant.

Key Path Input/Output, I/Q, I/Q Path

Example Set the input to be only the I channel.

FEED:IQ:TYPE IONL

Instrument S/W Revision A.01.60 or later

Q Only Set the signal input to be only the Q channel. The I channel will be ignored. The Q channel will be sent to the digital receiver block as $Q+j0$. The receiver's output is still complex. When the center frequency is 0 the imaginary part will always be zero, but for any other center frequency both the real and imaginary parts will be significant. Note that since the receiver's real output is displayed as the "I" data, when the center frequency is 0, the Q Only input appears as the "I" data.

Key Path Input/Output, I/Q, I/Q Path

Example Set the input to be only the Q channel.

FEED:IQ:TYPE QONL

Instrument S/W Revision A.01.60 or later

Independent I and Q Set the signal input to be both the I and Q channels, but as independent inputs. It is equivalent to treating I as channel 1 and Q as channel 2 in an oscilloscope. Each channel's data is still complex. When the center frequency is 0 the imaginary part will always be zero, but for any other center frequency both the real and imaginary parts will be significant.

This selection is only available in VXA.

Key Path Input/Output, I/Q, I/Q Path

Input/Output

| | |
|-------------------------|--|
| Restriction and Notes | The Independent I and Q selection is only available in GPVSA |
| Example | Turn on both I and Q channels and treat I as channel 1 and Q as channel 2. FEED:IQ:TYPE IND |
| Instrument S/W Revision | A.01.60 or later |

I Setup

Access the channel setup parameters for the I channel.

| | |
|-------------------------|-------------------|
| Key Path | Input/Output, I/Q |
| Instrument S/W Revision | A.01.60 or later |

I Differential Input Select differential input on or off for the I channel. For differential input (also called balanced input), the analyzer uses both main and complementary ports. When differential input is off (also called single-ended or unbalanced input), the analyzer uses only the main port.

| | |
|-------------------------|---|
| Key Path | Input/Output, I/Q, I Setup |
| Remote Command | :INPut:IQ[:I]:DIFFerential OFF ON 0 1 :INPut:IQ[:I]:DIFFerential? |
| Preset | Off |
| State Saved | Yes This is unaffected by Preset but is set to the default value on a “Restore Input/Output Defaults” or “Restore System Defaults->All” |
| Range | Off On |
| Dependencies/Couplings | Some active probes include built-in differential capability. When one of these probes is sensed, this key is disabled. Since the differential capability is handled in the probe, the Analyzer will use only the main port and the key will show that the Analyzer's Differential Input mode is Off (indicating that the complementary port not in use). When Q Same as I is On, the value set for I will also be copied to Q. |
| Restriction and Notes | When Differential Input = On, the analyzer will check for attenuation mismatches between the I and I-bar ports. If the difference in attenuation values exceeds 0.5 dB an error condition will be set. |
| Example | Put the I channel in Differential Input mode INP:IQ:DIFF ON |
| Instrument S/W Revision | A.01.60 or later |
| Remote Command: | :INPut[1]:IQ:BALanced[:STATE] OFF ON 0 1 :INPut[1]:IQ:BALanced[:STATE]? |

| | |
|--------------------------|---|
| Preset: | OFF |
| Remote Command Notes: | This backwards compatibility SCPI command was for an instrument without independent settings for the I and Q channels. Therefore, it is tied only to the I channel and does not provide an equivalent for the Q channel. For proper operation of the backwards compatibility command Q Same as I should be set to On. |
| Instrument S/W Revision: | A.01.60 or later |

I Input Z Select the input impedance for the I channel. The impedance applies to both the I and I-bar ports.

The input impedance controls the hardware signal path impedance match. It is not used for converting voltage to power. The voltage to power conversion always uses the Reference Z parameter. The Reference Z parameter applies to both I and Q channels.

| | |
|-------------------------|--|
| Remote Command | :INPut[1]:IQ[:I]:IMPedance LOW HIGH :INPut[1]:IQ[:I]:IMPedance? |
| Dependencies/Couplings | Input impedance is a built-in characteristic of a probe. Therefore, whenever a probe is sensed, this key is disabled and the value is set to match the probe. When no probe is sensed on Q and Q Same as I is On, the value set for I will also be copied to Q. |
| Remote Command Notes | LOW = 50 Ω HIGH = 1 M Ω |
| Example | Set the I channel input impedance to 1 M Ω INP:IQ:IMP HIGH |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Input/Output, I/Q, I Setup |
| Preset | LOW |
| State Saved | Yes This is unaffected by Preset but is set to the default value on a “Restore Input/Output Defaults” or “Restore System Defaults->All” |
| Range | 50 Ω 1 M Ω |

I Skew This command sets the skew factor for the I channel. The skew will shift the channel's data in time. Use this to compensate for differences in the electrical lengths of the input paths due to cabling.

| | |
|-----------------------|---|
| Key Path | Input/Output, I/Q, I Setup |
| Remote Command | [:SENSe]:CORRection:IQ[:I]:SKEW <seconds> [:SENSe]:CORRection:IQ[:I]:SKEW? |
| Preset | 0 |

Input/Output

| | |
|-------------------------|---|
| State Saved | Yes |
| | This is unaffected by Preset but is set to the default value on a “Restore Input/Output Defaults” or “Restore System Defaults->All” |
| Range | 0 s to 100 ns |
| Example | Delay the data for the I channel by 10 ns. CORR:IQ:SKEW 10 ns |
| Instrument S/W Revision | A.01.60 or later |

I Probe Access the probe setup parameters for the I channel. See [“I/Q Probe Setup” on page 1077](#).

| | |
|-------------------------|----------------------------|
| Key Path | Input/Output, I/Q, I Setup |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |

Combined Differential/Input Z This is SCPI only (no front panel) and is for backwards compatibility only. It combines the Differential Input and Input Z selections into a single SCPI command.

Remote Command: INPut:IMPedance:IQ U50|B50|U1M|B1M
INPut:IMPedance:IQ?

Preset: U50

Remote Command Notes: The enum values translate as follows:
U50: Differential Input = Off, Input Z = 50Ω
B50: Differential Input = On, Input Z = 50Ω
U1M: Differential Input = Off, Input Z = 1 MΩ
B1M: Differential Input = On, Input Z = 1 MΩ

This command is for backwards compatibility. It combines the Input Z (50Ω or 1 MΩ) parameter with the Differential Input (Off = “Unbalanced”, On = “Balanced”) parameter into a single enumeration.

This backwards compatibility SCPI command was for an instrument without independent settings for the I and Q channels. Therefore, it is tied only to the I channel and does not provide an equivalent for the Q channel. For proper operation of the backwards compatibility command Q Same as I should be set to On.

Also, note the subtle difference between this SCPI command and the backwards compatibility command for Input Z. The Input Z SCPI has “IQ” before “IMP” while this command has that order reversed.

Dependencies/Couplings: This command does not have an independent parameter, but instead is tied to the Differential Input and Input Z parameters. The coupling for those parameters apply to this command too.

| | |
|--------------------------|--|
| Example: | INPut:IMPedance:IQ U50 This is equivalent to the following two SCPI commands: INP:IQ:DIFF OFF INP:IQ:IMP 50 |
| Instrument S/W Revision: | A.01.60 or later |

Q Setup

Access the channel setup parameters for the Q channel.

| | |
|-------------------------|-------------------|
| Key Path | Input/Output, I/Q |
| Instrument S/W Revision | A.01.60 or later |

Q Same as I Many, but not all, usages require the I and Q channels have an identical setup. To simplify channel setup, the Q Same as I will cause the Q channel parameters to be mirrored from the I channel. That way you only needs to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time Q Same as I is turned off the I and Q channel setups will be identical. This does not apply to Probe settings or to parameters that determined by the probe.

| | |
|-------------------------|---|
| Key Path | Input/Output, I/Q, Q Setup |
| Remote Command | : INPut : IQ : MIRROred OFF ON 0 1 : INPut : IQ : MIRROred ? |
| Preset | This is unaffected by Preset but is set to the default value (Q Same as I set to “On”) on a “Restore Input/Output Defaults” or “Restore System Defaults->All” |
| State Saved | Saved in instrument state. |
| Range | On Off |
| Dependencies/Couplings | Only displayed for the Q channel. When Yes, the I channel values for some parameters are mirrored (copied) to the Q channel. However, when a parameter is determined by the type of probe and a probe is sensed, the probe setting is always used and the I channel setting is ignored. The following parameters are mirrored: Differential Input (when not determined by probe) Input Z (when not determined by probe) |
| Example | Turn off the mirroring of parameters from I to Q. INP:IQ:MIRR OFF |
| Instrument S/W Revision | A.01.60 or later |

Q Differential Input Select differential input on or off for the Q channel. For differential input (also called balanced input), the analyzer uses both the Q and Q-bar ports. When differential input is off (also

Input/Output

called single-ended or unbalanced input), the analyzer uses only the Q port.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, Q Setup |
| Remote Command | : INPut : IQ : Q : DIFFerential OFF ON 0 1 : INPut : IQ : Q : DIFFerential? |
| Preset | Off |
| State Saved | On This is unaffected by Preset but is set to the default value on a “Restore Input/Output Defaults” or “Restore System Defaults->All” |
| Range | Off On |
| Dependencies/Couplings | Some active probes include built-in differential capability. When one of these probes is sensed, this key is disabled. Since the differential capability is handled in the probe, the Analyzer will use only the main port and the key will show that the Analyzer's Differential Input mode is Off (indicating that the complementary port not in use). When a differential probe is not sensed and Q Same as I is On, the value set for I will be copied to Q. This key is disabled when Q Same as I is On. |
| Restriction and Notes | When Differential Input = On, the analyzer will check for attenuation mismatches between the Q and Q-bar ports. If the difference in attenuation values exceeds 0.5 dB an error condition will be set. |
| Example | Put the Q channel in Differential Input mode INP:IQ:Q:DIFF ON |
| Instrument S/W Revision | A.01.60 or later |

Q Input Z Select the input impedance for the Q channel. The impedance applies to both the Q and Q-bar ports.

The input impedance controls the hardware signal path impedance match. It is not used for converting voltage to power. The voltage to power conversion always uses the Reference Z parameter. The Reference Z parameter applies to both I and Q channels.

| | |
|------------------------|--|
| Remote Command | : INPut [1] : IQ : Q : IMPedance LOW HIGH : INPut [1] : IQ : Q : IMPedance? |
| Dependencies/Couplings | Input impedance is a built-in characteristic of a probe. Therefore, whenever a probe is sensed, this key is disabled and the value is set to match the probe. When no probe is sensed and Q Same as I is On, the value set for I will also be copied to Q. This key is disabled when Q Same as I is On. |
| Remote Command Notes | LOW = 50 Ω , HIGH = 1 M Ω |
| Example | Set the Q channel input impedance to 1 M Ω INP:IQ:Q:IMP HIGH |

| | |
|-------------------------|---|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Input/Output, I/Q, Q Setup |
| Preset | LOW |
| State Saved | On |
| | This is unaffected by Preset but is set to the default value on a “Restore Input/Output Defaults” or “Restore System Defaults->All” |
| Range | 50 Ω 1 M Ω |

Q Skew This command sets the skew factor for the Q channel. The skew will shift the channel's data in time. Use this to compensate for differences in the electrical lengths of the input paths due to cabling and probes.

| | |
|-------------------------|---|
| Key Path | Input/Output, I/Q, Q Setup |
| Remote Command | [:SENSE] :CORREction:IQ:Q:SKEW <seconds> [:SENSe] :CORREction:IQ:Q:SKEW? |
| Preset | 0 |
| State Saved | Yes |
| | This is unaffected by Preset but is set to the default value on a “Restore Input/Output Defaults” or “Restore System Defaults->All” |
| Range | 0 s to 100 ns |
| Example | Delay the data for the Q channel by 10 ns. CORR:IQ:Q:SKEW 10 ns |
| Instrument S/W Revision | A.01.60 or later |

Q Probe Access the probe setup parameters for the Q channel. See **I/Q Probe Setup**, below

| | |
|-------------------------|----------------------------|
| Key Path | Input/Output, I/Q, Q Setup |
| State Saved | No |
| Instrument S/W Revision | A.01.60 or later |

I/Q Probe Setup

The set of I/Q probe setup parameters will change based on the type of probe that is sensed. All probe types have the Attenuation parameter, and all probe types can be calibrated. The remaining parameters are only available for some probe types and will not be shown when not available. The probe type is determined by and reported for only for the I and Q ports, never the I-bar or Q-bar ports. The menu title will be “<ch>: <probe id>”, where “<ch>” is either “I” or “Q” and “<probe id>” is the type of probe. For example, for the I Probe setup with an Agilent 1130A probe connected to the I port, the title will be “I: 1130A”.

Probe calibration data is stored for each probe type for each channel. When no probe is sensed, the probe

Input/Output

type “Unknown” is used, and this is also is treated like a probe type with its own calibration data. When a probe is changed, the calibration data for that probe type for that port is restored. An advisory message will be displayed showing the new probe type and the calibration status. The calibration data is stored permanently (survives power cycle) and is not affected by Preset or any of the Restore commands. When the probe has EEPROM identification (most newer Agilent probes have this), the calibration data is stored by probe serial number and port, so if you has two probes of the same type, the correct calibration data will be used for each. For probes that do not have EEPROM identification, the calibration data is stored by probe type and port and the instrument cannot distinguish between different probes of the same type. In all cases (with or without EEPROM identification), the calibration data is port specific, so it will not follow a specific probe from port to port if the probe is moved.

The “Unknown” probe type is used whenever no probe is sensed. When no calibration data exists for “Unknown” the latest cable calibration data is used (see [“I/Q Guided Calibration” on page 1097](#)).

Attenuation The attenuation is part of the calibration data stored with the probe type and is initially the value that was returned by the last calibration. You is able to modify this value and any changes will be stored with the calibration data and will survive power cycles and presets. When a probe calibration is performed the attenuation value will be overwritten by the calibration.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, I Setup Q Setup, I Probe Q Probe |
| Remote Command | [:SENSE]:CORRection:IQ:I Q:ATTenuation:RATio <real> [:SENSE]:CORRection:IQ:I Q:ATTenuation:RATio? |
| Preset | Each probe type has its own default. The default for the “Unknown” probe type is 1:1. |
| State Saved | Saved with probe calibration data. It survives power cycle and is not affected by Preset or Restore. |
| Range | 0.001 to 10000 |
| Restriction and Notes | Each probe type has its own attenuation setting. As probes are changed the attenuation value will reflect the new probe's setting. Changing the attenuation affects only the current probe type's setting and leaves all others unchanged. |
| Example | Set the attenuation for the current I probe to 100.00:1. CORR:IQ:I:ATT:RAT 100 |
| Instrument S/W Revision | A.01.60 or later |

This is an alternate form of the SCPI that allows input as a power instead of a ratio.

| | |
|--------------------------|--|
| Remote Command: | [:SENSE]:CORRection:IQ:I Q:ATTenuation <rel_ampl> [:SENSE]:CORRection:IQ:I Q:ATTenuation? |
| Range: | -60 dB to +80 dB |
| Example: | Set the attenuation for the current I probe type to 100.00:1. CORR:IQ:I:ATT 20 dB |
| Instrument S/W Revision: | A.01.60 or later |

Offset Some active probes have DC offset capability. When one of these probes is connected this control will be visible. The signal is will be adjusted for the DC offset before entering the analyzer's port. This allows for removal of a DC offset before hitting the analyzer's input port voltage limits. For example, a signal that varies 1 V peak-to-peak with a DC offset equal to the analyzer's max input voltage would exceed the input limits of the analyzer for half its cycle. Removing the DC offset allows the analyzer to correctly process the entire signal.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, I Setup Q Setup, I Probe Q Probe |
| Remote Command | :INPut:OFFSet:I Q <voltage> :INPut:OFFSet:I Q? |
| Preset | 0 V |
| State Saved | Saved with probe calibration data. It survives power cycle and is not affected by Preset or Restore. |
| Range | -18 V to +18 V |
| Restriction and Notes | Only some probe types support Offset. For those that do, each probe type has its own Offset setting. As probes are changed the Offset value will reflect the new probe's setting. Changing the Offset affects only the current probe type's setting and leaves all others unchanged. |
| Example | Remove a DC offset of -0.5 V from the I channel input. INP:OFF:I -0.5 |
| Instrument S/W Revision | A.01.60 or later |

Coupling Some probe types allow coupling to reject low frequencies. This will filter out the DC component of a signal that is composed of a DC bias plus some AC signal. This control is visible only for probe types that have this capability.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, I Setup Q Setup, I Probe Q Probe |
| Remote Command | :INPut:COUPling:I Q DC LFR1 LFR2 :INPut:COUPling:I Q? |
| Preset | DC |
| State Saved | Saved with probe calibration data. It survives power cycle and is not affected by Preset or Restore. |
| Range | DC AC 1.7 Hz LFR1 AC 0.14 Hz LFR2 |
| Restriction and Notes | Only some probe types support Coupling. For those that do, each probe type has its own Coupling setting. As probes are changed the Coupling value will reflect the new probe's setting. Changing the Coupling affects only the current probe type's setting and leaves all others unchanged. |
| Example | Set the probe to low frequency rejection below 1.7 Hz. INP:COUP:I LFR1 |
| Instrument S/W Revision | A.01.60 or later |

Input/Output

DC Turn off low frequency rejection, allowing signals down to DC.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, I Setup Q Setup, I Probe Q Probe, Coupling |
| Example | Turn off low frequency rejection on the I channel INP:COUP:I DC |
| Instrument S/W Revision | A.01.60 or later |

LFR1 Turn on low frequency rejection, rejecting signal component lower than 1.7 Hz.

| | |
|-------------------------|---|
| Key Path | Input/Output, I/Q, I Setup Q Setup, I Probe Q Probe, Coupling |
| Example | Turn on low frequency rejection on the I channel for frequencies lower than 1.7 Hz INP:COUP:I LFR1 |
| Instrument S/W Revision | A.01.60 or later |

LFR2 Turn on low frequency rejection, rejecting signal component lower than 0.14 Hz.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, I Setup Q Setup, I Probe Q Probe, Coupling |
| Example | Turn on low frequency rejection on the I channel for frequencies lower than 0.14 Hz INP:COUP:I LFR2 |
| Instrument S/W Revision | A.01.60 or later |

Calibrate Invoke the guided probe calibration. The guided probe calibration is context sensitive and depends on the channel (I or Q) and the Differential Input state. The calibration is only performed on the selected channel. When Differential Input is on, both the probe attached to the main port and the probe attached to the complementary port are calibrated. When Differential Input is off, only the probe attached to the main port is calibrated. See [“I/Q Guided Calibration” on page 1097](#).

| | |
|-------------------------|---|
| Key Path | Input/Output, I/Q, I Setup Q Setup, I Probe Q Probe, Coupling |
| Instrument S/W Revision | A.01.60 or later |

Clear Calibration Clear the calibration data for the current port and probe. It does not clear the data for other probe types or other ports. If the sensed probe has EEPROM identification, only the data for that specific probe is cleared. After this command has completed, the probe calibration state will be the same as if no probe calibration had ever been performed for the specified channel and probe; the probe attenuation will be the default value for that probe type and the Cable Calibration frequency response corrections will be used. This command is dependent on the Differential Input state. When Differential Input is on, both the data for the probe attached to the main port and the data for the probe attached to the complementary port are cleared. When Differential Input is off, only data for the probe attached to the

main port is cleared.

| | |
|-------------------------|---|
| Key Path | Input/Output, I/Q, I Setup Q Setup, I Probe Q Probe, Coupling |
| Remote Command | :CALibration:IQ:PROBe:I Q:CLEAr |
| Example | Clear the calibration data for the I channel and the current probe (with EEPROM identification) or probe type (without EEPROM identification). :CAL:IQ:PROBe:I:CLE |
| Instrument S/W Revision | A.01.60 or later |

Reference Z

Set the value of the impedance to be used in converting voltage to power for the I and Q channels. This does not change the hardware's path impedance (see [“I Input Z” on page 1073](#)).

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q |
| Remote Command | :INPut:IMPedance:REFErence <integer> :INPut:IMPedance:REFErence? |
| Preset | 50 Ω |
| State Saved | Yes This is unaffected by Preset but is set to the default value on a “Restore Input/Output Defaults” or “Restore System Defaults->All” |
| Range | 1 Ω to 1 M Ω |
| Example | Set the I/Q reference impedance to 50 Ω INP:IMP:REF 50 |
| Instrument S/W Revision | A.01.60 or later |

RF Calibrator

Lets you choose a calibrator signal to look at or turns the calibrator “off” (meaning switches back to the selected input). If one of the three calibrator signals (50 MHz, -25 dBm, the 4.8 GHz internal amplitude reference or the 300 MHz comb signal) is chosen (as opposed to OFF), the analyzer routes the selected internal amplitude reference as the input signal, while leaving the input selection in the menus (RF, Ext Mix or I/Q) unchanged.

The 50 MHz internal reference and the 300 MHz comb signal are available with all the frequency options. The 4.8 GHz internal reference is only available with 507, 508, 513, 526, 544, and 550.

This function presets to OFF on a Mode Preset, which causes the internal circuitry to switch back to the selected input (RF, Ext Mix or I/Q).

| | |
|------------------------|--|
| Remote Command: | [:SENSe] :FEED:AREFErence REF50 REF4800 COMB OFF [:SENSe] :FEED:AREFErence? |
|------------------------|--|

Input/Output

| | |
|--------------------------|--|
| Example: | FEED:AREF REF50 selects the 50 MHz amplitude reference as the signal input. FEED:AREF REF4800 selects the 4.8 GHz amplitude reference as the signal input FEED:AREF COMB selects the 300 MHz comb modulated signal as the signal input FEED:AREF OFF turns the calibrator “off” (meaning switches back to the selected input – RF, ExtMix or I/Q) |
| Dependencies/Couplings: | Selecting an input (RF, Ext Mix or I/Q) turns the Calibrator OFF. This is true whether the input is selected by the keys or with the [:SENSe]:FEED command. |
| Preset: | OFF |
| State Saved: | Saved in State |
| Key Path: | Input/Output |
| Instrument S/W Revision: | A.01.60 or later |

50 MHz

| | |
|-------------------------|-----------------------------|
| Key Path | Input/Output, RF Calibrator |
| Instrument S/W Revision | A.01.60 or later |

4.8 GHz

Selects the 4.8 GHz internal reference as the input signal.

| | |
|-------------------------|-------------------------|
| Key Path | Input/Output, Amptd Ref |
| Instrument S/W Revision | A.01.60 or later |

Comb

| | |
|-------------------------|-----------------------------|
| Key Path | Input/Output, RF Calibrator |
| Instrument S/W Revision | A.01.60 or later |

Off

Switches the input back to the selected input (RF, Ext Mix or I/Q)

| | |
|-------------------------|-----------------------------|
| Key Path | Input/Output, RF Calibrator |
| Instrument S/W Revision | A.01.60 or later |

External Gain

Compensates for gain/loss in the measurement system outside the spectrum analyzer. The External Gain is subtracted from the amplitude readout (or the loss is added to the amplitude readout). So, the displayed signal level represents the signal level at the output of the device-under-test, which can be the input of an external device that provides gain/loss.

Entering an External Gain value does not affect the Reference Level, therefore the trace position on screen changes, as do all of values represented by the trace data. Thus, the values of exported trace data, queried trace data, marker amplitudes, trace data used in calculations such as N dB points, trace math, peak threshold, etc., are all affected by External Gain. Changing the External Gain, even on a trace which is not updating, will immediately change all of the above, without new data needing to be taken.

NOTE Changing the External Gain causes the analyzer to immediately stop the current sweep and prepare to begin a new sweep, but the data will not change until the trace data updates, because the offset is applied to the data as it is taken. If a trace is exported with a nonzero External Gain, the exported data will contain the trace data with the offset applied.

In the Spectrum Analyzer mode, a Preamp is the common external device providing gain/loss. In a measurement application mode like GSM or W-CDMA, the gain/loss could be from a BTS (Base Transceiver Station) or an MS (Mobile Station). So in the Spectrum Analyzer mode MS and BTS would be grayed out and the only choice would be Ext Preamp. Similarly in some of the digital communications applications, Ext Preamp will be grayed out and you would have a choice of MS or BTS.

Dependencies/Couplings: The Ext Preamp, MS, and BS keys may be grayed out depending on which measurement is currently selected. If any of the grayed out keys are pressed, or the equivalent SCPI command is sent, an advisory message is generated.

Key Path: Input/Output

Instrument S/W Revision: A.01.60 or later

Ext Preamp

This function is similar to the reference level offset function. Both affect the displayed signal level. Ref Lvl Offset is a mathematical offset only, no analyzer configuration is affected. Ext Preamp gain is used when determining the auto-coupled value of the Attenuator. The External Gain value and the Maximum Mixer Level settings are both part of the automatic setting equation for the RF attenuation setting. (10 dB of Attenuation is added for every 10 dB of External Gain.)

Please note that the Ref Lvl Offset and Maximum Mixer Level are described in the Amplitude section. They are reset by the instrument Preset. The External Preamp Gain is reset by the “Restore Input/Output Defaults” or “Restore System Defaults->All functions”. The External Gain is subtracted from the amplitude readout so that the displayed signal level represents the signal level at the output of the

Input/Output

device-under-test, which is the input of the external device that is providing gain/loss.

| | |
|--------------------------|---|
| Remote Command: | <code>[:SENSE]:CORRection:SA[:RF]:GAIN <rel_amp1></code> <code>[:SENSE]:CORRection:SA[:RF]:GAIN?</code> |
| Example: | <code>CORR:SA:GAIN 10</code> sets the Ext Gain value to 10 dB <code>CORR:SA:GAIN -10</code> sets the Ext Gain value to -10 dB (that is, an attenuation of 10 dB) |
| Dependencies/Couplings: | The reference level limits are determined in part by the External Gain/Atten, Max Mixer Level, and RF Atten. This key is grayed out in many application Modes. |
| Preset: | This is unaffected by Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All" |
| State Saved: | Saved in State |
| Min: | -81.90 dB |
| Max: | 81.90 dB |
| Key Path: | Input/Output, Ext Gain |
| Instrument S/W Revision: | A.01.60 or later |

MS

Sets an external gain/attenuation value for MS (Mobile Station) tests.

| | |
|-------------------------|--|
| Remote Command: | <code>[:SENSE]:CORRection:MS[:RF]:GAIN <rel_amp1></code> <code>[:SENSE]:CORRection:MS[:RF]:GAIN?</code> |
| Example: | <code>CORR:MS:GAIN 10</code> sets the Ext Gain value to 10 dB <code>CORR:MS:GAIN -10</code> sets the Ext Gain value to -10 dB (that is, a loss of 10 dB.) |
| Dependencies/Couplings: | The reference level limits are determined in part by the External Gain, Max Mixer Level, RF Atten This key is grayed out in the SA Mode. |
| Preset: | This is unaffected by Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All" |
| State Saved: | Saved in State |
| Min: | -50 dB |
| Max: | 50 dB |

Key Path: Input/Output, Ext Gain
 Instrument S/W Revision: A.01.60 or later

BTS

Sets an external attenuation value for BTS (Base Transceiver Station) tests.

Remote Command: [:SENSe] :CORRection :BTS [:RF] :GAIN <rel_ampl>
 [:SENSe] :CORRection :BTS [:RF] :GAIN?

Example: CORR:BTS:GAIN 10 sets the Ext Gain value to 10 dB
 CORR:BTS:GAIN -10 sets the Ext Gain value to -10 dB (that is, a loss of 10 dB.)

Dependencies/Couplings: The reference level limits are determined in part by the External Gain, Max Mixer Level, RF Atten
 This key is grayed out in the SA Mode.

Preset: This is unaffected by Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All"

State Saved: Saved in State

Min: -50 dB

Max: 50 dB

Key Path: Input/Output, Ext Gain

Instrument S/W Revision: A.01.60 or later

I Ext Gain

This function affects only the I channel input, except when the Input Path is I+jQ. In I+jQ this setting is applied to both I and Q channel inputs. It is not available unless the Baseband I/Q option (BBA) is installed.

Key Path Input/Output, External Gain

Remote Command [:SENSe] :CORRection :IQ :I :GAIN <rel_ampl>
 [:SENSe] :CORRection :IQ :I :GAIN?

Preset 0 dB
 This is unaffected by Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All"

State Saved Saved in instrument state.

Min -100 dB

Max 100 dB

Input/Output

| | |
|-------------------------|--|
| Restriction and Notes | Not available unless option BBA is installed |
| Example | Set the I Ext Gain to 10 dB CORR:IQ:I:GAIN 10 Set the I Ext Gain to -10 dB (that is, a loss of 10 dB.) CORR:IQ:I:GAIN -10 |
| Instrument S/W Revision | A.01.60 or later |

Q Ext Gain

This function affects only the Q channel input and only when the Input Path is not I+jQ. It is not available unless the Baseband I/Q option (BBA) is installed.

| | |
|-------------------------|--|
| Key Path | Input/Output, External Gain |
| Remote Command | [:SENSE]:CORRection:IQ:Q:GAIN <rel_ampl> [:SENSE]:CORRection:IQ:Q:GAIN? |
| Preset | 0 dB This is unaffected by Preset but is set to 0 dB on a "Restore Input/Output Defaults" or "Restore System Defaults->All" |
| State Saved | Saved in instrument state. |
| Min | -100 dB |
| Max | 100 dB |
| Restriction and Notes | Not available unless option BBA is installed |
| Example | Set the Q Ext Gain to 10 dB CORR:IQ:Q:GAIN 10 Set the Q Ext Gain to -10 dB (that is, a loss of 10 dB.) CORR:IQ:Q:GAIN -10 |
| Instrument S/W Revision | A.01.60 or later |

Restore Input/Output Defaults

This selection causes the group of settings and data associated with **Input/Output** key to be a reset to their default values. This level of Restore System Defaults does not affect any other system settings or mode settings and does not cause a mode switch. All the features described in this section are reset using this key.

| | |
|----------|---|
| Example: | :SYST:DEF INP presets all the Input/Output variables to their factory default values. |
|----------|---|

| | |
|--------------------------|---|
| Remote Command Notes: | Please refer to the Utility Functions for information about Restore System Defaults and the complete description of the :SYSTem:DEFault INPut: command. |
| Key Path: | Input/Output |
| Instrument S/W Revision: | A.01.60 or later |

Data Source

Gives you the choice of either using a hardware input signal as the input or raw data stored in a data storage buffer from an earlier acquisition. You can also share raw data across certain measurements that support this feature. The measurements must be capable of storing raw data. There are three choices under this menu. You can select "Inputs" which is the same as selecting one of the inputs from the input port, for example RF, AREF, I/Q, EXTMixer or IFALign. Selecting "Capture Buffer" allows you to use data that has been stored earlier in the same measurement or from a previous measurement using the "Current Meas -> Capture Buffer" feature. Selecting "Recorded Data" allows you to playback long data capture records stored in the record buffer.

When you make a recording (see **Record Data Now** below) or when you recall a recording (see the Recall section) the data source is automatically set to Recorded Data. You can toggle the data source between Inputs and the current Recording (if there is one). That is, the recording remains in memory until it is replaced by a new recording, or the application is closed.

| | |
|-------------------------|---|
| Remote Command: | [:SENSE] :FEED:DATA INPut STORed RECorded [:SENSe] :FEED:DATA? |
| Example: | FEED:DATA REC FEED:DATA? |
| Dependencies/Couplings: | Not all inputs are available in all modes. Unavailable keys are grayed out. |

| | |
|-----------------------|---|
| Remote Command Notes: | INPutS = Inputs STORed = Capture Buffer RECorded = Record Data Buffer |
| Preset: | This is unaffected by Preset but is set to INPut on a "Restore Input/Output Defaults" or "Restore System Defaults->All" |
| State Saved: | Saved in state |
| Key Path: | Input/Output |

Input/Output

Instrument S/W Revision: A.01.60 or later

Inputs

Sets the measurement to use the input selections (RF, AREF, EXTMix, I/Q)

Example: FEED:DATA INP causes the measurement to look at the input selection

Key Path: Input/Output, Data Source

Instrument S/W Revision: A.01.60 or later

Capture Buffer

Some WCDMA and demod measurements support this feature. This allows sharing of the raw data across certain measurements. If you want to make another measurement on the same signal, you would store that raw data using the "Current Meas -> Capture Buffer" key. Then the data is available for the next measurement to use. You must have raw data stored in the instrument memory before the Capture Buffer choice is available for use.

If you switch to a measurement that does not support this feature, then the instrument switches to use "Inputs" and grays out this key. If the grayed out key is pressed, it generates a message.

Example: FEED:DATA STOR causes stored measurement data to be used with a different measurement that supports this.

Dependencies/Couplings: Grayed out in the SA measurement.

Key Path: Input/Output, Data Source

Instrument S/W Revision: A.01.60 or later

Recorded Data

Directs the instrument to get data from the record data buffer in the measurement, rather than from the RF Input Signal.

Example: FEED:DATA REC causes the measurement to extract data from the record data buffer

Dependencies/Couplings: Grayed out in the SA measurement.

Key Path: Input/Output, Data Source

Instrument S/W Revision: A.01.60 or later

Current Meas -> Capture Buffer

Pressing this key stores the raw data of one measurement in the internal memory of the instrument where it can then be used by a different measurement by pressing "Stored Data". When raw data is stored, then data source selection switch automatically changes to "Stored Data". Stored raw data cannot be directly accessed by a user. There is no save/recall function to save the raw data in an external media. However if you want to get the stored raw data, you must first perform a measurement using the stored raw data.

Now you can access the used raw data, which is the same as stored raw data, using the FETch or READ commands.

| | |
|--------------------------|---|
| Remote Command: | [:SENSE] :FEED:DATA:STORe |
| Example: | FEED:DATA:STOR stores recorded data |
| Dependencies/Couplings: | Grayed out in the SA measurement. |
| Remote Command Notes: | This is command only, there is no query |
| Key Path: | Input/Output, Data Source |
| Instrument S/W Revision: | A.01.60 or later |

Record Data Now

This causes the data source to change to Inputs (if it is not already set) and a recording is made with the current instrument setup. The length of the recording must be specified in advance.

This key changes to **Abort Recording** once the recording process has started. It changes back when the recording is complete.

The following dialogs show the progress of the recording:

This key is also available in the Sweep/Control menu.

| | |
|-------------------------|--|
| Remote Command | [:SENSE] :RECORDing:INITiate[:IMMediate] |
| Example | REC:INIT |
| Dependencies/Couplings | Changes Data source to Recorded Data. Grayed out in the SA measurement. |
| Remote Command Notes | This is command only, there is no query. See the Recall functionality to access previously saved data. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Input/Output, Data Source |
| Mode | VSA |

| | |
|--------------------------|---|
| Remote Command: | [:SENSE] :RECORDing:ABORt |
| Example: | REC:ABOR |
| Key Path: | Input/Output, Data Source |
| Remote Command Notes: | This is command only, there is no query. The command does nothing if it is sent when there is no recording in progress. |
| Instrument S/W Revision: | A.01.60 or later |

Record Length

Input/Output

This specifies the length of the next recording. (You cannot use this to modify the length of the current recording.) The length defaults to seconds, but you can also specify it in points at the current sample rate, or in time records at the current time record length.

Remote Command [:SENSE]:RECORDing:LENGth <real>,SECONDS|RECORDs|POINTs
 [:SENSE]:RECORDing:LENGth:STATe MAX|MANual
 [:SENSE]:RECORDing:LENGth:STATe?

Example REC:LENG 20,REC
 REC:LENG 4.1E-4,SEC
 REC:LENG:STAT MAX
 REC:LENG:STAT?

Remote Command Notes There is no default unit. The unit must be specified.
 The length command does not have a query form. Length information is queried using the two commands following this table.
 If set to MAX, all of the available "recording memory" is used.

Instrument S/W Revision A.01.60 or later
 Key Path Input/Output, Data Source
 Mode VSA
 Preset 50 Records, Manual
 State Saved No
 Min 0
 Max Depends on memory available

Mode VSA
Remote Command [:SENSE]:RECORDing:LENGth:VALue?

Example REC:LENG:VAL?
 Preset 50 Records
 Remote Command Notes Query Only
 Returns the first (numeric) parameter of the most recent [:SENSE]:RECORDing:LENGth command.

Instrument S/W Revision A.01.60 or later

Mode VSA
Remote Command [:SENSE]:RECORDing:LENGth:UNIT?

| | |
|-------------------------|---|
| Example | REC:LENG:UNIT? |
| Preset | RECOords |
| Remote Command Notes | Query Only Returns the second parameter of the most recent [:SENSe]:RECOrding:LENGth command. Possible values are SEC REC POIN. If no second parameter was sent, then the return value is SEC. |
| Instrument S/W Revision | A.01.60 or later |

Freq Ref In

Specifies the frequency reference as being the internal reference, external reference or sensing the presence of an external reference.

When the frequency reference is set to internal, the internal 10 MHz reference is used even if an external reference is connected.

When the frequency reference is set to external, the instrument will use the external reference. However, if there is no external signal present, or it is not within the proper amplitude range, an error condition detected message is generated. When the external signal becomes valid, the error is cleared.

If Sense is selected, the instrument checks whether a signal is present at the external reference connector and will automatically switch to the external reference when a signal is detected. When no signal is present, it automatically switches to the internal reference. No message is generated as the reference switches between external and internal. The monitoring of the external reference occurs approximately on 1 millisecond intervals, and never occurs in the middle of a measurement acquisition, only at the end of the measurement (end of the request).

If for any reason the instrument's frequency reference is not able to obtain lock, Status bit 2 in the Questionable Frequency register will be true and an error condition detected message is generated. When lock is regained, Status bit 2 in the Questionable Frequency register will be cleared and an error message is cleared will be sent.

If an external frequency reference is being used, you must enter the frequency of the external reference if it is not exactly 10 MHz. The External Ref Freq key is provided for this purpose.

| | |
|------------------------------------|--|
| Remote Command: | [:SENSe] :ROSCillator :SOURce :TYPE INTernal EXTernal SENSe [:SENSe] :ROSCillator :SOURce :TYPE? |
| Preset: | This is unaffected by Preset but is set to SENSe on a "Restore Input/Output Defaults" or "Restore System Defaults->All". |
| State Saved: | Saved in State. |
| Key Path: | Input/Output |
| SCPI Status Bits/OPC Dependencies: | STATus:QUEStionable:FREQuency bit 2 set if unlocked. |

Input/Output

Instrument S/W Revision: A.01.60 or later

Remote Command: [:SENSe]:ROSCillator:SOURce?

Remote Command Notes: The query [SENSe]:ROSCillator:SOURce? returns the current switch setting. This means:

1. If it was set to SENSe but there is no external reference so the instrument is actually using the internal reference, then this query returns INTernal and not SENSe.
2. If it was set to SENSe and there is an external reference present, the query returns EXTernal and not SENSe.
3. If it was set to EXTernal, then the query returns "EXTernal"
4. If it was set to INTernal, then the query returns INTernal

Preset: SENSe

Instrument S/W Revision: A.01.60 or later

Remote Command: [:SENSe]:ROSCillator:SOURce INTernal|EXTernal

Instrument S/W Revision: A.01.60 or later

Sense

The external reference is used if a valid signal is sensed at the Ext Ref input. Otherwise the internal reference is used.

Example: :ROSC:SOUR:TYPE SENS

Key Path: Input/Output, Freq Ref In

Instrument S/W Revision: A.01.60 or later

Internal

The internal reference is used.

Example: :ROSC:SOUR:TYPE INT

Key Path: Input/Output, Freq Ref In

Instrument S/W Revision: A.01.60 or later

External

The external reference is used.

Example: :ROSC:SOUR:TYPE EXT

Key Path: Input/Output, Freq Ref In

Instrument S/W Revision: A.01.60 or later

Ext Ref Freq

This key tells the analyzer the frequency of the external reference. When the external reference is in use (either because the reference has been switched to External or because the Reference has been switched to Sense and there is a valid external reference present). This information is used by the analyzer to determine the internal settings needed to lock to that particular external reference signal or external reference.)

For the instrument to stay locked, the value entered must be within 5 ppm of the actual ext ref frequency. So it is important to get it close, or you risk an unlock condition.

Note that this value only affects the instrument's ability to lock. It does not affect any calculations or measurement results. See "Freq Offset" in the Frequency section for information on how to offset frequency values.

| | |
|--------------------------|---|
| Remote Command: | [:SENSe]:ROSCillator:EXTernal:FREQUENCY <freq> [:SENSe]:ROSCillator:EXTernal:FREQUENCY? |
| Example: | ROSC:EXT:FREQ 20 MHz sets the external reference frequency to 20 MHz, but does not select the external reference. ROSC:SOUR:TYPE EXT selects the external reference. |
| Preset: | This is unaffected by Preset but is set to 10 MHz on a "Restore Input/Output Defaults" or "Restore System Defaults->All" |
| Min: | EXA: 10 MHz MXA: 1 MHz |
| Max: | EXA: 10 MHz MXA: 50 MHz |
| Key Path: | Input/Output, Freq Ref In |
| Default Unit: | Hz |
| Instrument S/W Revision: | A.01.60 or later |

Output Config

Accesses keys that configure various output settings, like the frequency reference output, trigger output and analog output.

Instrument S/W Revision A.01.60 or later

Trig Out (1 and 2)

Select the type of output signal that will be output from the rear panel Trig 1 Out or Trig 2 Out

Input/Output

connectors.

Remote Command: :TRIGger|TRIGger1|TRIGger2[:SEQuence]:OUTPut
HSWP|MEASuring|MAIN|GATE|GTRigger|OEVEN
:TRIGger|TRIGger1|TRIGger2[:SEQuence]:OUTPut?

Example: TRIG:OUTP HSWP

Preset: Trigger 1: Sweeping (HSWP)
 Trigger 2: Gate

This is unaffected by Preset but is preset to the above values on a "Restore Input/Output Defaults" or "Restore System Defaults->All"

State Saved: Saved in instrument state

Key Path: Input/Output, Output Config

Instrument S/W Revision: A.01.60 or later

Polarity Sets the output to the Trig 1 Out connector to trigger on either the positive or negative polarity.

Remote Command: :TRIGger|TRIGger1|TRIGger2[:SEQuence]:OUTPut:POLarity
POSitive|NEGative
:TRIGger|TRIGger1|TRIGger2[:SEQuence]:OUTPut:POLarity?

Example: TRIG1:OUTP:POL POS

Preset: This is unaffected by Preset but is set to POSitive on a "Restore Input/Output Defaults" or "Restore System Defaults->All"

State Saved: Saved in state

Key Path: Input/Output, Output Config, Trig 1 Output

Instrument S/W Revision: A.01.60 or later

Sweeping (HSWP) Selects the Sweeping trigger signal to be output to the Trig 1 Out connector. This signal has historically been known as "HSWP" but care should be taken to understand that in this analyzer, its function does not exactly match other products behavior.

Example: TRIG1:OUTP HSWP

Key Path: Input/Output, Output Config, Trig 1 Output

Instrument S/W Revision: A.01.60 or later

Measuring Selects the Measuring trigger signal to be output to the Trig 1 Out connector. This signal is

true while the Measuring status bit is true.

Example: TRIG1:OUTP MEAS
 Key Path: Input/Output, Output Config, Trig 1 Output
 Instrument S/W Revision: A.01.60 or later

Main Trigger Selects the current instrument trigger signal to be output to the Trig 1 Out connector.

Example: TRIG1:OUTP MAIN
 Key Path: Input/Output, Output Config, Trig 1 Output
 Instrument S/W Revision: A.01.60 or later

Gate Trigger Selects the gate trigger signal to be output to the Trig 1 Out connector. This is the source of the gate timing, not the actual gate signal.

Example: TRIG1:OUTP GTR
 Key Path: Input/Output, Output Config, Trig 1 Output
 Instrument S/W Revision: A.01.60 or later

Gate Selects the gate signal to be output to the Trig 1 Out connector. The gate signal has been delayed and its length determined by delay and length settings. When the polarity is positive, a high on the Trig 1 Out represents the time the gate is configured to pass the signal.

Example: TRIG1:OUTP GATE
 Key Path: Input/Output, Output Config, Trig 1 Output
 Instrument S/W Revision: A.01.60 or later

Odd/Even Trace Point Selects either the odd or even trace points as the signal to be output to the Trig 1 Out connector when performing swept spectrum analysis. When the polarity is positive, this output goes high during the time the analyzer is sweeping past the first point (Point 0) and every other following trace point. The opposite is true if the polarity is negative.

Example: TRIG1:OUTP OEV
 Key Path: Input/Output, Output Config, Trig 1 Output
 Instrument S/W Revision: A.01.60 or later

Off Selects no signal to be output to the Trig 1 Out connector.

Example: TRIG1:OUTP OFF
 Key Path: Input/Output, Output Config, Trig 1 Output

Input/Output

Instrument S/W Revision: A.01.60 or later

Digital Bus

Opens a menu that allows you to select options for configuring the digital bus output(s) of the analyzer.

Key Path Input/Output, Output Config

Instrument S/W Revision A.01.60 or later

Bus Out The Digital Bus is a connector located on the rear panel of the instrument. It is a unidirectional link of real time raw ADC data at a 90 MHz rate. No corrections are applied. The ADC is sampling a 22.5 MHz IF. When Bus Out is on, all acquisitions are streamed to the output port including acquisitions for internal purposes such as Alignment; internal processing and routing of acquisitions continues as usual and is unaffected by the state of Bus Out. This port is intended for use with the Agilent N5105 and N5106 products only. It is not available for general purpose use.

Remote Command :OUTPut:DBUS[1][:STATe] ON|OFF|1|0

:OUTPut:DBUS[1][:STATe]?

Example OUTP:DBUS ON

Instrument S/W Revision A.01.60 or later

Key Path Input/Output, Output Config, Digital Bus

Scope Mode Global

Preset This is unaffected by Preset but is set to Off on a "Restore Input/Output Defaults" or "Restore System Defaults -> All"

State Saved Saved in instrument state.

I/Q Cal Out

The Baseband I/Q "Cal Out" port can be turned on with either a 1 kHz or a 250 kHz square wave. This can be turned on independent of the input selection. A Preset will reset this to Off.

Key Path Input/Output, Output Config

Remote Command :OUTPut:IQ:OUTPut IQ1|IQ250|OFF

:OUTPut:IQ:OUTPut?

Preset Off

State Saved Saved in instrument state.

Range 1 kHz Square Wave|250 kHz Square Wave|Off

Dependencies/Couplings An I/Q Cable Calibration or an I/Q Probe Calibration will change the state of the Cal Out port as needed by the calibration routine. When the calibration is finished the I/Q Cal Out is restored to the pre-calibration state.

Example OUTP:IQ:OUTP IQ1

Instrument S/W Revision A.01.60 or later

1 kHz Square Wave Turn on the 1 kHz square wave signal at the Cal Out port. This choice is only available with option BBA.

Key Path Input/Output, Output Config, I/Q Cal Out

Instrument S/W Revision A.01.60 or later

250 kHz Square Wave Turn on the 250 kHz square wave signal at the Cal Out port. This choice is only available with option BBA.

Key Path Input/Output, Output Config, I/Q Cal Out

Instrument S/W Revision A.01.60 or later

Off Turn off the signal at the Cal Out port. This choice is only available with option BBA.

Key Path Input/Output, Output Config, I/Q Cal Out

Instrument S/W Revision A.01.60 or later

I/Q Guided Calibration

Calibrating the Baseband I/Q ports requires several steps and manual connections. The Guided Calibration will interactively step a user through the required steps, displaying diagrams to help with the connections. The steps will vary depending on the setup.

In the Guided Calibration windows, the date and time of the last calibration are displayed. If any of the items listed are displayed in yellow, this indicates that the calibration for that item is inconsistent with the latest calibration, and you should complete the entire calibration process before you exit the calibration.

I/Q Isolation Calibration

The I/Q Isolation Calibration must be run before calibrating any port with either the I/Q Cable Calibration or I/Q Probe Calibration. This calibration is performed with nothing connected to any of the front panel I/Q ports. This is the first step in both the I/Q Cable Calibration and the I/Q Probe Calibration.

Next Perform the I/Q Isolation calibration.

Key Path Input/Output, I/Q, I/Q Cable Calibration

State Saved No.

Remote Command :CALibration:IQ:ISOLation

Restriction and Notes All front panel I/Q ports must not be connected to anything.

Input/Output

| | |
|-------------------------|--|
| Remote Command Notes | All cables and probes should be disconnected from the I/Q ports before issuing the SCPI command. |
| Example | CAL:IQ:ISOL |
| Instrument S/W Revision | A.01.60 or later |

Exit Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, I/Q Cable Calibration |
| Restriction and Notes | Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. When the calibration may be left in an inconsistent state, a confirmation dialog will be displayed (see “Exit Confirmation” on page 1107). |
| Instrument S/W Revision | A.01.60 or later |

I/Q Cable Calibration

The I/Q cable calibration creates correction data for each of the front panel I/Q ports. This calibration data is used whenever no probe specific calibration data is available. It is important that all ports are calibrated using the same short BNC cable so that the data is comparable from port to port.

The guided calibration (front panel only) will show connection diagrams and guide you through the isolation calibration and calibrating each port. The calibration data for each port is stored separately, so as soon as a port is calibrated that data is saved and will be used. If a user presses "Exit" to exit the calibration process, the data for the ports already completed will still be used. It is recommended that a calibration be completed once started, or if exited, that it be properly done before the next use of the I/Q ports. The "Next" button will perform the calibration for the current port and then proceed to the next step in the calibration procedure. The "Back" button will return to the prior port in the procedure. Both keys and dialog buttons are supplied for ease of use. The dialog buttons are for mouse use and the keys for front panel use.

The calibration can also be done via SCPI, but no connection diagrams will be shown. You will have to make the correct connections before issuing each port calibration command. Again, it is recommended that all ports be calibrated at the same time.

The instrument state remains as it was prior to entering the calibration procedure except while a port is actually being calibrated. Once a port is calibrated it returns to the prior state. A port calibration is in process only from the time the "Next" button is pressed until the next screen is shown. For SCPI, this corresponds to the time from issuing the CAL:IQ:FLAT:I|IB|Q|QB command until the operation is complete.

For example, if the prior instrument state is Cal Out = Off, Input = I+jQ, and Differential = Off, then up until the time the "Next" button is pressed the I Input and Q Input LEDs are on and the Cal Out, I-bar Input and Q-bar Input LEDs are off. Once the "Next" button is pressed for the I port calibration, only the Cal Out and I Input LEDs will be on and the others will be off. When the screen progresses to the next step ("Next" button again enabled), the prior state is restored and only the I Input and Q Input LEDs are on (Cal Out is off again).

The last calibration date and time for each port will be displayed. Any calibrations that are more than a day older than the most recent calibration will be displayed with the color amber.

I Port The I port calibration is performed with the front panel's I port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

Back Return to the prior step in the calibration procedure.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, Q Setup, Q Probe, Calibrate |
| Instrument S/W Revision | A.01.60 or later |

Next Perform the I port calibration.

| | |
|-------------|--|
| Key Path | Input/Output, I/Q, I/Q Cable Calibration |
| State Saved | No. |

Remote Command :CALibration:IQ:FLATness:I

Restriction and Notes The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure.

The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands.

Remote Command Notes The I port must be connected to the Cal Out port before issuing the SCPI command.

Example CAL:IQ:FLAT:I

Instrument S/W Revision A.01.60 or later

Exit Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

Key Path Input/Output, I/Q, I/Q Cable Calibration

Restriction and Notes Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step.

When the calibration may be left in an inconsistent state, a confirmation dialog will be displayed (see [“Exit Confirmation” on page 1107](#)).

Instrument S/W Revision A.01.60 or later

I-bar Port The I-bar port calibration is performed with the front panel's I-bar port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

Back Return to the prior step in the calibration procedure.

Key Path Input/Output, I/Q, I/Q Cable Calibration

Input/Output

| | |
|-------------------------|--|
| Restriction and Notes | Using the Back button will not restore the calibration data to a prior state. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. The Back button allows you to go back to a prior step to redo that calibration step. |
| Instrument S/W Revision | A.01.60 or later |

Next Perform the I-bar port calibration.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, I/Q Cable Calibration |
| State Saved | No |
| Remote Command | :CALibration:IQ:FLATness:IBar |
| Restriction and Notes | The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure. The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands. |
| Remote Command Notes | The I-bar port must be connected to the Cal Out port before issuing the SCPI command. |
| Example | CAL:IQ:FLAT:IB |
| Instrument S/W Revision | A.01.60 or later |

Exit Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

| | |
|-------------------------|---|
| Key Path | Input/Output, I/Q, I/Q Cable Calibration |
| Restriction and Notes | Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. When the calibration may be left in an inconsistent state, a confirmation dialog will be displayed (see “Exit Confirmation” on page 1107). |
| Instrument S/W Revision | A.01.60 or later |

Q Port The Q port calibration is performed with the front panel's Q port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

Back Return to the prior step in the calibration procedure.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, I/Q Cable Calibration |
| Restriction and Notes | Using the Back button will not restore the calibration data to a prior state. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. The Back button allows you to go back to a prior step to redo that calibration step. |
| Instrument S/W Revision | A.01.60 or later |

Next Perform the Q port calibration.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, I/Q Cable Calibration |
| State Saved | No |
| Remote Command | :CALibration:IQ:FLATness:Q |
| Restriction and Notes | The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure. The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands. |
| Remote Command Notes | The Q port must be connected to the Cal Out port before issuing the SCPI command. |
| Example | CAL:IQ:FLAT:Q |
| Instrument S/W Revision | A.01.60 or later |

Exit Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

| | |
|-------------------------|---|
| Key Path | Input/Output, I/Q, I/Q Cable Calibration |
| Restriction and Notes | Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. When the calibration may be left in an inconsistent state, a confirmation dialog will be displayed (see “Exit Confirmation” on page 1107). |
| Instrument S/W Revision | A.01.60 or later |

Q-bar Port The Q-bar port calibration is performed with the front panel's Q-bar port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

Back Return to the prior step in the calibration procedure.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, I/Q Cable Calibration |
| Restriction and Notes | Using the Back button will not restore the calibration data to a prior state. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. The Back button allows you to go back to a prior step to redo that calibration step. |
| Instrument S/W Revision | A.01.60 or later |

Next Perform the Q-bar port calibration.

| | |
|-------------|--|
| Key Path | Input/Output, I/Q, I/Q Cable Calibration |
| State Saved | No |

Input/Output

| | |
|-------------------------|--|
| Remote Command | :CALibration:IQ:FLATness:QBar |
| Restriction and Notes | The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure. The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands. |
| Remote Command Notes | The Q-bar port must be connected to the Cal Out port before issuing the SCPI command. |
| Example | CAL:IQ:FLAT:QB |
| Instrument S/W Revision | A.01.60 or later |

Exit Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

| | |
|-------------------------|---|
| Key Path | Input/Output, I/Q, I/Q Cable Calibration |
| Restriction and Notes | Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. When the calibration may be left in an inconsistent state, a confirmation dialog will be displayed (see “Exit Confirmation” on page 1107). |
| Instrument S/W Revision | A.01.60 or later |

I/Q Probe Calibration

The I/Q probe calibration creates correction data for one of the front panel I/Q channels. When the probe has EEPROM identification, the data is unique to that specific probe. When the probe does not have EEPROM identification, the data will be used for all probes of the same type. The data is also unique to the channel, so calibration data for the I channel will not be used for the Q channel and vice versa.

The guided calibration (front panel only) will show connection diagrams and guide you through the I/Q Isolation Calibration and through calibrating each port. The calibration data for each port is stored separately, so as soon as a port is calibrated that data is saved and will be used. If a user presses "Exit" to exit the calibration process, the data for the port already completed will still be used. It is recommended that a calibration be completed once started, or if exited, that it be properly done before the next use of the probe. The "Next" button will perform the calibration for the current port and then proceed to the next step in the calibration procedure. The "Back" button will return to the prior port in the procedure. Both keys and dialog buttons are supplied for ease of use. The dialog buttons are for mouse use and the keys for front panel use.

The calibration can also be done via SCPI, but no connection diagrams will be shown. You have to make the correct connections before issuing each port calibration command. Again, it is recommended that all ports be calibrated at the same time.

For Active probes or when Differential is Off, only the main port is calibrated, otherwise both the main and complementary ports are calibrated.

The instrument state remains as it was prior to entering the calibration procedure except while a port is actually being calibrated. Once a port is calibrated it returns to the prior state. A port calibration is in

process only from the time the "Next" button is pressed until the next screen is shown. For SCPI, this corresponds to the time from issuing the CAL:IQ:PROB:I|IB|Q|QB command until the operation is complete.

For example, if the prior instrument state is Cal Out = Off, Input = I+jQ, and Differential = Off, then up until the time the "Next" button is pressed the I Input and Q Input LEDs are on and the Cal Out, I-bar Input and Q-bar Input LEDs are off. Once the "Next" button is pressed for the I port calibration, only the Cal Out and I Input LEDs are on and the others are off. When the screen progresses to the next step ("Next" button again enabled), the prior state is restored and only the I Input and Q Input LEDs are on (Cal Out is off again).

The last calibration date and time for each relevant port is displayed. For passive probes with Differential On, any calibration that is more than a day older than the most recent calibration is displayed with the color amber.

I Port The I port calibration is performed with the probe body attached to the front panel's I port and the probe tip connected via an adapter to the Cal Out port. The guided calibration shows a diagram of the required connections.

Show Adapter Show a connection diagram and instructions for the probe and adapter. See ["Show Adapter Screen" on page 1107](#).

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, I Setup, I Probe, Calibrate |
| Restriction and Notes | Either a passive or an active probe adapter diagram is shown, depending on the type of probe attached. |
| Instrument S/W Revision | A.01.60 or later |

Back Return to the prior step in the calibration procedure.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, Q Setup, Q Probe, Calibrate |
| Instrument S/W Revision | A.01.60 or later |

Next Perform the I port calibration.

| | |
|-------------------------|---|
| Key Path | Input/Output, I/Q, I Setup, I Probe, Calibrate |
| State Saved | No |
| Remote Command | :CALibration:IQ:PROBe:I |
| Remote Command Notes | The I port must be connected to the Cal Out port before issuing the SCPI command. The calibration data is saved as soon as the port is calibrated and survives power cycles. It is not reset by any preset or restore data commands. |
| Example | CAL:IQ:PROB:I |
| Instrument S/W Revision | A.01.60 or later |

Exit Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired

Input/Output

calibration data.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, I Setup, I Probe, Calibrate |
| Restriction and Notes | Using the Exit button will not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. When the calibration may be left in an inconsistent state, a confirmation dialog is displayed (see “Exit Confirmation” on page 1107). |
| Instrument S/W Revision | A.01.60 or later |

I-bar Port The I-bar port calibration is performed with the probe body attached to the front panel's I-bar port and the probe tip connected via an adapter to the Cal Out port. The I-bar probe calibration is only available for passive probes with Differential On. The guided calibration shows a diagram of the required connections.

Show Adapter Show a connection diagram and instructions for the probe and adapter. See [“Show Adapter Screen” on page 1107](#).

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, I Setup, I Probe, Calibrate |
| Restriction and Notes | Either a passive or an active probe adapter diagram is shown, depending on the type of probe attached. |
| Instrument S/W Revision | A.01.60 or later |

Back Return to the prior step in the calibration procedure.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, I Setup, I Probe, Calibrate |
| Restriction and Notes | Using the Back button does restore the calibration data to a prior state. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. The Back button allows you to go back to a prior step to redo that calibration step. |
| Instrument S/W Revision | A.01.60 or later |

Next Perform the I-bar port calibration.

| | |
|-----------------------|---|
| Key Path | Input/Output, I/Q, I Setup, I Probe, Calibrate |
| State Saved | No |
| Remote Command | :CALibration:IQ:PROBe:IBar |
| Remote Command Notes | The I-bar port must be connected to the Cal Out port before issuing the SCPI command. The calibration data is saved as soon as the port is calibrated and survives power cycles. It is not reset by any preset or restore data commands. |
| Example | CAL:IQ:PROB:IB |

Instrument S/W Revision A.01.60 or later

Exit Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

Key Path Input/Output, I/Q, I Setup, I Probe, Calibrate

Restriction and Notes Using the Exit button does not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step.

When the calibration may be left in an inconsistent state, a confirmation dialog is displayed (see [“Exit Confirmation” on page 1107](#)).

Instrument S/W Revision A.01.60 or later

Q Port The Q port calibration is performed with the probe body attached to the front panel's Q port and the probe tip connected via an adapter to the Cal Out port. The guided calibration shows a diagram of the required connections.

Show Adapter Show a connection diagram and instructions for the probe and adapter. See [“Show Adapter Screen” on page 1107](#).

Key Path Input/Output, I/Q, Q Setup, Q Probe, Calibrate

Restriction and Notes Either a passive or an active probe adapter diagram is shown, depending on the type of probe attached.

Instrument S/W Revision A.01.60 or later

Back Return to the prior step in the calibration procedure.

Key Path Input/Output, I/Q, Q Setup, Q Probe, Calibrate

Instrument S/W Revision A.01.60 or later

Next Perform the Q port calibration.

Key Path Input/Output, I/Q, Q Setup, Q Probe, Calibrate

State Saved No

Remote Command :CALibration:IQ:PROBe:Q

Remote Command Notes The Q port must be connected to the Cal Out port before issuing the SCPI command.

The calibration data is saved as soon as the port is calibrated and survives power cycles. It is not reset by any preset or restore data commands.

Example CAL:IQ:PROB:Q

Instrument S/W Revision A.01.60 or later

Input/Output

Exit Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, Q Setup, Q Probe, Calibrate |
| Restriction and Notes | Using the Exit button does not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. When the calibration may be left in an inconsistent state, a confirmation dialog is displayed (see “Exit Confirmation” on page 1107). |
| Instrument S/W Revision | A.01.60 or later |

Q-bar Port The Q-bar port calibration is performed with the probe body attached to the front panel's Q-bar port and the probe tip connected via an adapter to the Cal Out port. The Q-bar probe calibration is only available for passive probes with Differential On. The guided calibration shows a diagram of the required connections.

Show Adapter Show a connection diagram and instructions for the probe and adapter. See [“Show Adapter Screen” on page 1107](#).

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, Q Setup, Q Probe, Calibrate |
| Restriction and Notes | Either a passive or an active probe adapter diagram is shown, depending on the type of probe attached. |
| Instrument S/W Revision | A.01.60 or later |

Back Return to the prior step in the calibration procedure.

| | |
|-------------------------|--|
| Key Path | Input/Output, I/Q, Q Setup, Q Probe, Calibrate |
| Restriction and Notes | Using the Back button does not restore the calibration data to a prior state. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step. The Back button allows you to go back to a prior step to redo that calibration step. |
| Instrument S/W Revision | A.01.60 or later |

Next Perform the Q-bar port calibration.

| | |
|-----------------------|---|
| Key Path | Input/Output, I/Q, Q Setup, Q Probe, Calibrate |
| State Saved | No |
| Remote Command | :CALibration:IQ:PROBe:QBar |
| Remote Command Notes | The Q-bar port must be connected to the Cal Out port before issuing the SCPI command. The calibration data is saved as soon as the port is calibrated and survives power cycles. It is not reset by any preset or restore data commands. |
| Example | CAL:IQ:PROB:QB |

Instrument S/W Revision A.01.60 or later

Exit Exit the calibration procedure. All ports calibrated before pressing Exit will use the newly acquired calibration data.

Key Path Input/Output, I/Q, Q Setup, Q Probe, Calibrate

Restriction and Notes Using the Exit button does not restore the calibration data to the state prior to entering the guided calibration. Once a port is calibrated the data is stored immediately and the only way to change it is to redo the calibration step.

When the calibration may be left in an inconsistent state, a confirmation dialog is displayed (see [“Exit Confirmation” on page 1107](#)).

Instrument S/W Revision A.01.60 or later

Show Adapter Screen When one of the Probe Calibration Show Adapter buttons is pressed, a diagram of the probe with its adapter is shown. Depending on the type of probe attached, either the Passive Probe Adapter or the Active Probe Adapter diagram is shown.

Exit Confirmation

When Exit is pressed on one during one of the calibration routines, the calibration may be in an inconsistent state with some of the ports having newly measured calibration data and others with old data. If this is the case, a dialog box appears to confirm that you really wants to exit. A "Yes" answer exits the calibration procedure, leaving potentially inconsistent calibration data in place. A "No" answer returns to the calibration procedure.

Marker

Some Marker operation is common across multiple Modes and Measurements. These common features are described in this section. See the Measurement description for information on features that are unique.

The Marker key accesses the Marker menu. A marker can be placed on a trace to allow the value of the trace at the marker point to be determined precisely. The functions in this menu include a 1-of-N selection of the control mode Normal, Delta, Fixed, or Off for the selected marker. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the Marker Trace rules.

Markers may also be used in pairs to read the difference (or delta) between two data points. They can be used in Marker Functions to do advanced data processing, or to specify operating points in functions like Signal Track and N dB Points.

| | |
|-------------------------|------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Marker

Marker Function

Some Marker Functions are common across multiple Modes and Measurements. These common features are described in this section. See the Measurement description for information on features that are unique.

The Marker Function key opens up a menu of keys that allow you to control the Marker Functions of the instrument. Marker Functions perform post-processing operations on marker data. Band Functions are Marker Functions that allow you to define a band of frequencies around the marker. The band defines the region of data used for the numerical calculations. These marker functions also allow you to perform mathematical calculations on trace and marker data and report the results of these calculations in place of the normal marker result.

Unlike regular markers, marker function markers are not placed directly on the trace. They are placed at a location which is relative to the result of the function calculation.

| | |
|-------------------------|------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Marker Function

Marker To

Some Marker operation is common across multiple Modes and Measurements. These common features are described in this section. See the Measurement description for information on features that are unique.

| | |
|-------------------------|------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Marker To

Meas

The information in this section is common to all measurements. For key and remote command information on each measurement, refer to the section which describes the measurement of interest.

Measurements available under the Meas key are specific to the current Mode.

When viewing Help for measurements, note the following:

NOTE Operation for some keys differs between measurements. The information displayed in Help pertains to the current measurement. To see how a key operates in a different measurement, exit Help (press the Cancel Esc key), select the measurement, then reenter Help (press the Help key) and press that key.

| | |
|-------------------------|------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Remote Measurement Functions

This section contains the following topics:

[“Measurement Group of Commands” on page 1116](#)

[“Current Measurement Query \(Remote Command Only\)” on page 1119](#)

[“Limit Test Current Results \(Remote Command Only\)” on page 1120](#)

[“Data Query \(Remote Command Only\)” on page 1120](#)

[“Calculate/Compress Trace Data Query \(Remote Command Only\)” on page 1120](#)


[“Calculate Peaks of Trace Data \(Remote Command Only\)” on page 1125](#)

[“Format Data: Numeric Data \(Remote Command Only\)” on page 1127](#)

[“Format Data: Byte Order \(Remote Command Only\)” on page 1129](#)

| | |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |
|-------------------------|------------------|

Measurement Group of Commands

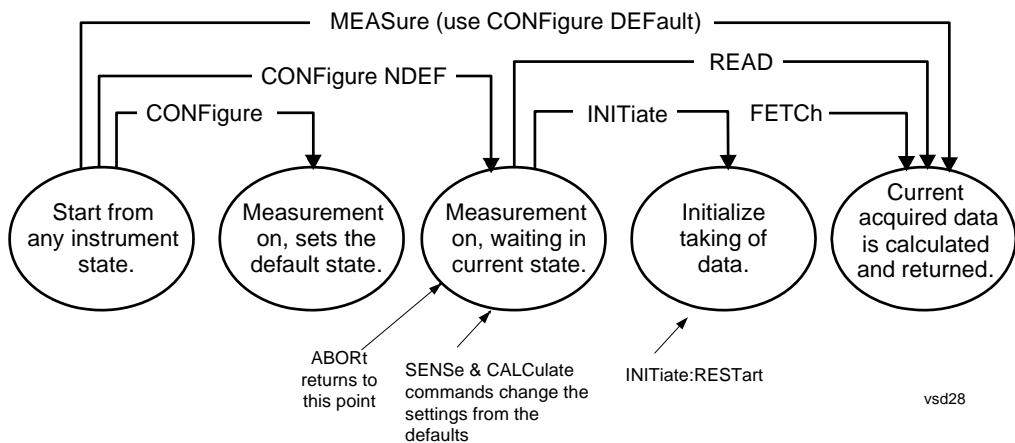

Measure Commands:**:MEASure:<measurement>[n]?**

This is a fast single-command way to make a measurement using the factory default instrument settings. These are the settings and units that conform to the Mode Setup settings (for example, radio standard) that you have currently selected.

- Stops the current measurement (if any) and sets up the instrument for the specified measurement using the factory defaults
- Initiates the data acquisition for the measurement
- Blocks other SCPI communication, waiting until the measurement is complete before returning results.
- If the function does averaging, it is turned on and the number of averages is set to 10.
- After the data is valid it returns the scalar results, or the trace data, for the specified measurement. The type of data returned may be defined by an [n] value that is sent with the command.

The scalar measurement result are returned if the optional [n] value is not included, or is set to 1. If the [n] value is set to a value other than 1, the selected trace data results are returned. See each command for details of what types of scalar results or trace data results are available.

ASCII is the default format for the data output. (Older versions of Spectrum Analysis and Phase Noise mode measurements only use ASCII.) The binary data formats should be used for handling large blocks of data since they are smaller and faster than the ASCII format. Refer to the FORMat:DATA command for more information.

If you need to change some of the measurement parameters from the factory default settings you can set up the measurement with the CONFIgure command. Use the commands in the SENSE:<measurement> and CALCulate:<measurement> subsystems to change the settings. Then you can use the READ? command to initiate the measurement and query the results.

If you need to repeatedly make a given measurement with settings other than the factory defaults, you can use the commands in the SENSE:<measurement> and CALCulate:<measurement> subsystems to set up the measurement. Then use the READ? command to initiate the measurement and query results.

Measurement settings persist if you initiate a different measurement and then return to a previous one. Use READ:<measurement>? if you want to use those persistent settings. If you want to go back to the default settings, use MEASure:<measurement>?.

Configure Commands:

:CONFigure:<measurement>

This command stops the current measurement (if any) and sets up the instrument for the specified measurement using the factory default instrument settings. It does not initiate the taking of measurement data unless INIT:CONTinuous is ON. If you change any measurement settings after using the CONFigure command, the READ command can be used to initiate a measurement without changing the settings back to their defaults.

In the Swept SA measurement in Spectrum Analyzer mode the CONFigure command also turns the averaging function on and sets the number of averages to 10 for all measurements.

:CONFigure:NDEFault<measurement> stops the current measurement and changes to the specified measurement. It does not change the settings to the defaults. It does not initiate the taking of measurement data unless INIT:CONTinuous is ON.

The **CONFigure?** query returns the current measurement name.

Fetch Commands:

:FETCh:<measurement>[n]?

This command puts selected data from the most recent measurement into the output buffer. Use FETCh if you have already made a good measurement and you want to return several types of data (different [n] values, for example, both scalars and trace data) from a single measurement. FETCh saves you the time of re-making the measurement. You can only FETCh results from the measurement that is currently active, it does not change to a different measurement. An error is reported if a measurement other than the current one, is specified.

If you need to get new measurement data, use the READ command, which is equivalent to an INITiate followed by a FETCh.

The scalar measurement results are returned if the optional [n] value is not included, or is set to 1. If the [n] value is set to a value other than 1, the selected trace data results are returned. See each command for details of what types of scalar results or trace data results are available. The binary data formats should be used for handling large blocks of data since they are smaller and transfer faster than the ASCII format. (FORMat:DATA)

FETCh may be used to return results other than those specified with the original READ or MEASure command that you sent.

INITiate Commands:

:INITiate:<measurement>

This command is not available for measurements in all the instrument modes:

- Initiates a trigger cycle for the specified measurement, but does not output any data. You must then use the FETCh<meas> command to return data. If a measurement other than the current one is specified, the instrument switches to that measurement and then initiate it.
- For example, suppose you have previously initiated the ACP measurement, but now you are running the channel power measurement. If you send INIT:ACP? it changes from channel power to ACP and initiates an ACP measurement.
- Does not change any of the measurement settings. For example, if you have previously started the ACP measurement and you send INIT:ACP? it initiates a new ACP measurement using the same instrument settings as the last time ACP was run.
- If your selected measurement is currently active (in the idle state) it triggers the measurement, assuming the trigger conditions are met. Then it completes one trigger cycle. Depending upon the measurement and the number of averages, there may be multiple data acquisitions, with multiple trigger events, for one full trigger cycle. It also holds off additional commands on GPIB until the acquisition is complete.

READ Commands:**:READ:<measurement>[n]?**

- Does not preset the measurement to the factory default settings. For example, if you have previously initiated the ACP measurement and you send READ:ACP? it initiates a new measurement using the same instrument settings.
- Initiates the measurement and puts valid data into the output buffer. If a measurement other than the current one is specified, the instrument switches to that measurement before it initiates the measurement and returns results.

For example, suppose you have previously initiated the ACP measurement, but now you are running the channel power measurement. Then you send READ:ACP? It changes from channel power back to ACP and, using the previous ACP settings, initiates the measurement and return results.

- Blocks other SCPI communication, waiting until the measurement is complete before returning the results

If the optional [n] value is not included, or is set to 1, the scalar measurement results are returned. If the [n] value is set to a value other than 1, the selected trace data results are returned. See each command for details of what types of scalar results or trace data results are available. The binary data formats should be used when handling large blocks of data since they are smaller and faster than the ASCII format.

(FORMat:DATA)

Instrument S/W Revision A.01.60 or later

Current Measurement Query (Remote Command Only)

This command returns the name of the measurement that is currently running.

Remote Command: :CONFigure?

Example: CONF?

Meas

Instrument S/W Revision: A.01.60 or later

Limit Test Current Results (Remote Command Only)

Queries the status of the current measurement limit testing. It returns a 0 if the measured results pass when compared with the current limits. It returns a 1 if the measured results fail any limit tests.

Remote Command: :CALCulate:CLIMits:FAIL?

Example: CALC:CLIM:FAIL? queries the current measurement to see if it fails the defined limits.

Returns a 0 or 1: 0 it passes, 1 it fails.

Instrument S/W Revision: A.01.60 or later

Data Query (Remote Command Only)

Returns the designated measurement data for the currently selected measurement and subopcode.

n = any valid subopcode for the current measurement. See the measurement command results table for your current measurement, for information about what data is returned for the subopcodes.

This command uses the data setting specified by the FORMat:BORDER and FORMat:DATA commands and can return real or ASCII data. (See the format command descriptions under Input/Output in the Analyzer Setup section.)

Remote Command: :CALCulate:DATA[n]?

Notes: The return trace depends on the measurement.

In CALCulate:<meas>:DATA[n], n is any valid subopcode for the current measurement. It returns the same data as the FETCh:<measurement>? query where <measurement> is the current measurement.

Instrument S/W Revision: A.01.60 or later

Calculate/Compress Trace Data Query (Remote Command Only)

Returns compressed data for the currently selected measurement and sub-opcode [n].

n = any valid sub-opcode for that measurement. See the MEASure:<measurement>? command description of your specific measurement for information on the data that can be returned.

The data is returned in the current Y Axis Unit of the analyzer. The command is used with a sub-opcode <n> (default=1) to specify the trace. With trace queries, it is best if the analyzer is not sweeping during the query. Therefore, it is generally advisable to be in Single Sweep, or Update=Off.

This command is used to compress or decimate a long trace to extract and return only the desired data. A typical example would be to acquire N frames of GSM data and return the mean power of the first burst

in each frame. The command can also be used to identify the best curve fit for the data.

Remote Command: :CALCulate:DATA<n>:COMPRESS?
 BLOCK|CFIT|MAXimum|MINimum|MEAN|DMEan|RMS|RMSCubed|SAMPLE|SDEVIation|PPHase
 [,<soffset>[,<length>[,<roffset>[,<rlimit>]]]]

Remote Command Notes: The command supports 5 parameters. Note that the last 4 (<soffset>,<length>,<roffset>,<rlimit>) are optional. But these optional parameters must be entered in the specified order. For example, if you want to specify <length>, then you must also specify <soffset>. See details below for a definition of each of these parameters.

This command uses the data in the format specified by FORMat:DATA, returning either binary or ASCII data.

Example: To query the mean power of a set of GSM bursts:
 Supply a signal that is a set of GSM bursts.
 Select the IQ Waveform measurement (in IQ Analyzer Mode).
 Set the sweep time to acquire at least one burst.
 Set the triggers such that acquisition happens at a known position relative to a burst.
 Then query the mean burst levels using, CALC:DATA2:COMP?
 MEAN,24e-6,526e-6 (These parameter values correspond to GSM signals, where 526e-6 is the length of the burst in the slot and you just want 1 burst.)

Instrument S/W Revision: A.01.60 or later

- **BLOCK** or block data - returns all the data points from the region of the trace data that you specify. For example, it could be used to return the data points of an input signal over several timeslots, excluding the portions of the trace data that you do not want. (This is x,y pairs for trace data and I,Q pairs for complex data.)
- **CFIT** or curve fit - applies curve fitting routines to the data. <soffset> and <length> are required to define the data that you want. <roffset> is an optional parameter for the desired order of the curve equation. The query returns the following values: the x-offset (in seconds) and the curve coefficients ((order + 1) values).

MIN, MAX, MEAN, DME, RMS, RMSC, SAMP, SDEV and PPH return one data value for each specified region (or <length>) of trace data, for as many regions as possible until you run out of trace data (using <roffset> to specify regions). Or they return the number of regions you specify (using <rlimit>) ignoring any data beyond that.

- **MINimum** - returns the minimum data point (x,y pair) for the specified region(s) of trace data. For I/Q trace data, the minimum magnitude of the I/Q pairs is returned.
- **MAXimum** - returns the maximum data point (x,y pair) for the specified region(s) of trace data. For I/Q trace data, the maximum magnitude of the I/Q pairs is returned.

MEAN - returns a single value that is the arithmetic mean of the data point values (in dB/ dBm) for the specified region(s) of trace data. For I/Q trace data, the mean of the magnitudes of the I/Q pairs is

returned. See the following equations.

NOTE If the original trace data is in dB, this function returns the arithmetic mean of those log values, not log of the mean power which is a more useful value. The mean of the log is the better measurement technique when measuring CW signals in the presence of noise. The mean of the power, expressed in dB, is useful in power measurements such as Channel Power. To achieve the mean of the power, use the RMS option.

Equation 1
Mean Value of Data Points for Specified Region(s)

$$\text{MEAN} = \frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i \quad \text{vsd27-1}$$

where X_i is a data point value, and n is the number of data points in the specified region(s).

Equation 2
Mean Value of I/Q Data Pairs for Specified Region(s)

$$\text{MEAN} = \frac{1}{n} \sum_{X_i \in \text{region}(s)} |X_i| \quad \text{vsd27-2}$$

where $|X_i|$ is the magnitude of an I/Q pair, and n is the number of I/Q pairs in the specified region(s).

- DMEan - returns a single value that is the mean power (in dB/ dBm) of the data point values for the specified region(s) of trace data. See the following equation:

Equation 3
DMEan Value of Data Points for Specified Region(s)

$$\text{DME} = 10 \times \log_{10} \left(\frac{1}{n} \sum_{X_i \in \text{region}(s)} \frac{X_i}{10} \right) \quad \text{vsd27-3}$$

- RMS - returns a single value that is the average power on a root-mean-squared voltage scale (arithmetic rms) of the data point values for the specified region(s) of trace data. See the following equation.

For I/Q trace data, the rms of the magnitudes of the I/Q pairs is returned. See the following equation.

NOTE This function is very useful for I/Q trace data. However, if the original trace data is in dB, this function returns the rms of the log values which is not usually needed.

Equation 4
RMS Value of Data Points for Specified Region(s)

$$\text{RMS} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i^2}$$

vsd27-4

where X_i is a data point value, and n is the number of data points in the specified region(s).

Equation 5

RMS Value of I/Q Data Pairs for Specified Region(s)

$$\text{RMS} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i X_i^*}$$

vsd27-5

where X_i is the complex value representation of an I/Q pair, X_i^* its conjugate complex number, and n is the number of I/Q pairs in the specified region(s).

Once you have the rms value for a region of trace data (linear or I/Q), you may want to calculate the mean power. You must convert this rms value (peak volts) to power in dBm:

$$10 \times \log[10 \times (\text{rms value})^2]$$

- **SAMPLE** - returns the first data value (x,y pair) for the specified region(s) of trace data. For I/Q trace data, the first I/Q pair is returned.
- **SDEViation** - returns a single value that is the arithmetic standard deviation for the data point values for the specified region(s) of trace data. See the following equation.

For I/Q trace data, the standard deviation of the magnitudes of the I/Q pairs is returned. See the following equation.

Equation 6

Standard Deviation of Data Point Values for Specified Region(s)

$$\text{SDEV} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} (X_i - \bar{X})^2}$$

vsd27-7

where X_i is a data point value, \bar{X} is the arithmetic mean of the data point values for the specified region(s), and n is the number of data points in the specified region(s).

$$\text{SDEV} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} (|X_i| - \bar{X})^2}$$

vsd27-8

where $|X_i|$ is the magnitude of an I/Q pair, \bar{X} is the mean of the magnitudes for the specified region(s), and n is the number of data points in the specified region(s).

- **PPHase** - returns the x,y pairs of both rms power (dBm) and arithmetic mean phase (radian) for every specified region and frequency offset (Hz). The number of pairs is defined by the specified number of

Meas

regions. This parameter can be used for I/Q vector (n=0) in Waveform (time domain) measurement and all parameters are specified by data point in PPHase.

The rms power of the specified region may be expressed as:

$$\text{Power} = 10 \times \log [10 \times (\text{RMS I/Q value})] + 10.$$

The RMS I/Q value (peak volts) is:

$$\sqrt{\frac{1}{n} \sum_{X_i \in \text{region}} X_i X_i^*}$$

vsd27-9

where X_i is the complex value representation of an I/Q pair, X_i^* its conjugate complex number, and n is the number of I/Q pairs in the specified region.

The arithmetic mean phase of the specified region may be expressed as:

$$\frac{1}{n} \sum_{Y_i \in \text{region}} Y_i$$


vsd27-10

where Y_i is the unwrapped phase of I/Q pair with applying frequency correction and n is the number of I/Q pairs in the specified region.

The frequency correction is made by the frequency offset calculated by the arithmetic mean of every specified region's frequency offset. Each frequency offset is calculated by the least square method against the unwrapped phase of I/Q pair.


Sample Trace Data - Constant Envelope

(See below for explanation of variables.)

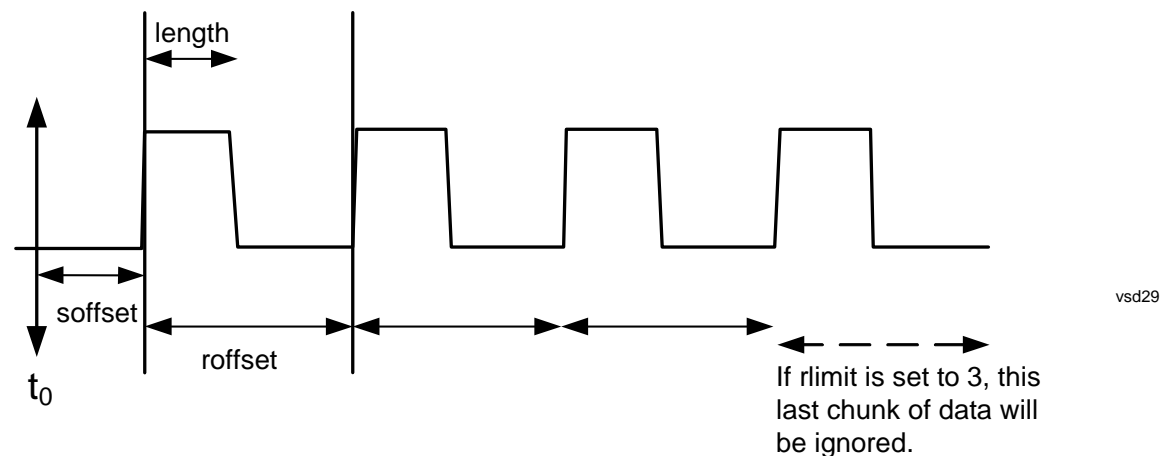

Sample Trace Data - Not Constant Envelope

(See below for explanation of variables.)

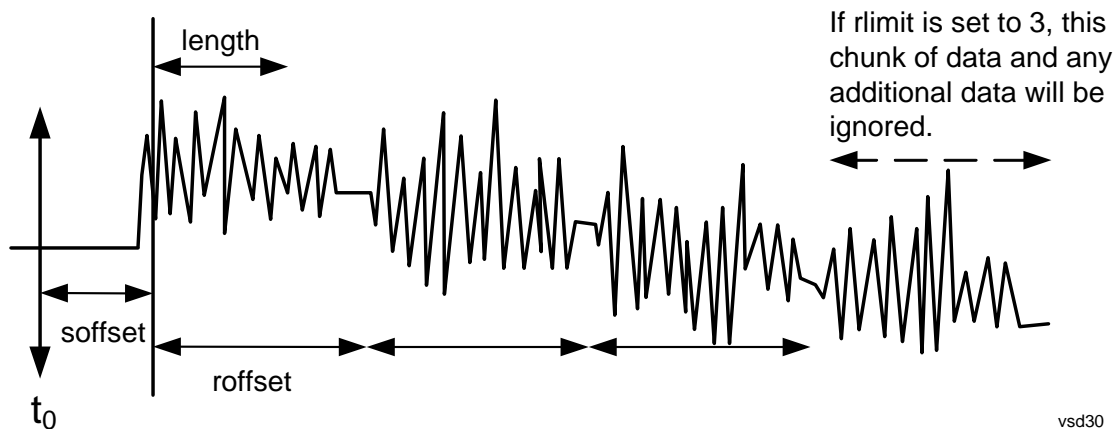

<soffset> - start offset is an optional real number. (It is in seconds for time-domain traces, and is a dimensionless index 0 to Npoints – 1, for frequency-domain traces). It specifies the amount of data at the beginning of the trace that will be ignored before the decimation process starts. It is the time or frequency change from the start of the trace to the point where you want to start using the data. The default value is zero.

<length> - is an optional real number. (It is in seconds for time-domain traces, and is a dimensionless index 0 to Npoints – 1, for frequency-domain traces). It defines how much data will be compressed into one value. This parameter has a default value equal to the current trace length.

<roffset> - repeat offset is an optional real number. (It is in seconds for time-domain traces, and is a dimensionless index 0 to Npoints – 1, for frequency-domain traces). It defines the beginning of the next field of trace elements to be compressed. This is relative to the beginning of the previous field. This parameter has a default value equal to the <length> variable. Note that this parameter is used for a completely different purpose when curve fitting (see CFIT above).

<rlimit> - repeat limit is an optional integer. It specifies the number of data items that you want returned. It will ignore any additional items beyond that number. You can use the Start offset and the Repeat limit to pick out exactly what part of the data you want to use. The default value is all the data.

Calculate Peaks of Trace Data (Remote Command Only)

Returns a list of all the peaks for the currently selected measurement and sub-opcode [n]. The peaks must meet the requirements of the peak threshold and excursion values.

n = any valid sub-opcode for the current measurement. See the MEASure:<measurement> command description of your specific measurement for information on the data that can be returned.

The command can only be used with specific sub-opcodes with measurement results that are trace data. Both real and complex traces can be searched, but complex traces are converted to magnitude in dBm. In many measurements the sub-opcode n=0, is the raw trace data which cannot be searched for peaks. And Sub-opcode n=1, is often calculated results values which also cannot be searched for peaks.

This command uses the data setting specified by the FORMat:BORDER and FORMat:DATA commands and can return real or ASCII data. If the format is set to INT,32, it returns REAL,32 data.

The command has four types of parameters:

- Threshold (in dBm)

Meas

- Excursion (in dB)
- Sorting order (amplitude, frequency, time)
- Optional in some measurements: Display line use (all, > display line, < display line)

Remote Command:

For Swept SA measurement:

```
:CALCulate:DATA[1]|2|3|4|5|6:PEAKs?  
<threshold>,<excursion>[,AMPLitude|FREQuency|TIME[,ALL|  
GTDLine|LTDLine]]
```

For most other measurements:

```
:CALCulate:DATA[1]|2|3|4|5|6:PEAKs?  
<threshold>,<excursion>[,AMPLitude|FREQuency|TIME]
```

Example:

Example for Swept SA measurement in Spectrum Analyzer Mode:

CALC:DATA4:PEAK? -40,10,FREQ,GTDL This will identify the peaks of trace 4 that are above -40 dBm, with excursions of at least 10 dB. The peaks are returned in order of increasing frequency, starting with the lowest frequency. Only the peaks that are above the display line are returned.

Query Results 1:

With FORMat:DATA REAL,32 selected, it returns a list of floating-point numbers. The first value in the list is the number of peak points that are in the following list. A peak point consists of two values: a peak amplitude followed by its corresponding frequency (or time).

If no peaks are found the peak list will consist of only the number of peaks, (0).

Dependencies/Couplings:

Values must be provided for threshold and excursion. The sorting and display line parameters are optional (defaults are AMPLitude and ALL).

Note that there is always a Y-axis value for the display line, regardless of whether the display line state is on or off. It is the current Y-axis value of the display line which is used by this command to determine whether a peak should be reported.

Notes:

<n> - is the trace that will be used

<threshold> - is the level below which trace data peaks are ignored. Note that the threshold value is required and is always used as a peak criterion. To effectively disable the threshold criterion for this command, provide a substantially low threshold value such as -200 dBm. Also note that the threshold value used in this command is independent of and has no effect on the threshold value stored under the Peak Criteria menu.

<excursion> - is the minimum amplitude variation (rise and fall) required for a signal to be identified as peak. Note that the excursion value is required and is always used as a peak criterion. To effectively disable the excursion criterion for this command, provide the minimum value of 0.0 dB. Also note that the excursion value used in this command is independent of and has no effect on the excursion value stored under the Peak Criteria menu.

Sorting order:

AMPLitude - lists the peaks in order of descending amplitude, with the highest peak first (default if optional parameter not sent)

FREQuency - lists the peaks in order of occurrence, left to right across the x-axis.

TIME - lists the peaks in order of occurrence, left to right across the x-axis.

Peaks vs. Display Line:

ALL - lists all of the peaks found (default if optional parameter not sent).

GTDLine (greater than display line) - lists all of the peaks found above the display line.

LTDLine (less than display line) - lists all of the peaks found below the display line.

Instrument S/W Revision: A.01.60 or later

Format Data: Numeric Data (Remote Command Only)

This command specifies the format of the trace data input and output. It specifies the formats used for trace data during data transfer across any remote port. It affects only the data format for setting and querying trace data for the :TRACe[:DATA], TRACe[:DATA]?, :CALCulate:DATA[n]? and FETCh:SANalyzer[n]? commands and queries.

Remote Command: :FORMat[:TRACe][:DATA] ASCii|INTeger,32|REAL,32 |REAL,64
:FORMat[:TRACe][:DATA]?

Meas

| | |
|--------------------------|---|
| Remote Command Notes: | <p>The query response is:</p> <p>ASCii: ASC,8</p> <p>REAL,32: REAL,32</p> <p>REAL,64: REAL,64</p> <p>INTeger,32: INT,32</p> <p>When the numeric data format is REAL or ASCii, data is output in the current Y Axis unit. When the data format is INTeger, data is output in units of m dBm (.001 dBm).</p> <p>Note that the INT,32 format is only applicable to the command, TRACe:DATA. This preserves backwards compatibility for the Swept SA measurement. For all other commands/queries which honor FORMat:DATA, if INT,32 is sent the analyzer will behave as though it were set to REAL,32.</p> <p>The INT,32 format returns binary 32-bit integer values in internal units (m dBm), in a definite length block.</p> |
| Dependencies/Couplings: | <p>Sending a data format spec with an invalid number (for example, INT,48) generates no error. The analyzer simply uses the default (8 for ASCii, 32 for INTeger, 32 for REAL).</p> <p>Sending data to the analyzer which does not conform to the current FORMat specified, results in an error.</p> |
| Preset: | ASCii |
| Instrument S/W Revision: | A.01.60 or later |

The specs for each output type follow:

ASCii - Amplitude values are in ASCII, in the current Y Axis Unit, one ASCII character per digit, values separated by commas, each value in the form:

SX.YYYYYEsZZ

Where:

S = sign (+ or -)

X = one digit to left of decimal point

Y = 5 digits to right of decimal point

E = E, exponent header

s = sign of exponent (+ or -)

ZZ = two digit exponent

REAL,32 - Binary 32-bit real values in the current Y Axis Unit, in a definite length block.

REAL,64 - Binary 64-bit real values in the current Y Axis Unit, in a definite length block.

Format Data: Byte Order (Remote Command Only)

This command selects the binary data byte order for data transfer and other queries. It controls whether binary data is transferred in normal or swapped mode. This command affects only the byte order for setting and querying trace data for the :TRACe[:DATA], TRACe[:DATA]?, :CALCulate:DATA[n]? and FETCh:SANalyzer[n]? commands and queries.

By definition any command that says it uses FORMat:DATA uses any format supported by FORMat:DATA.

The NORMal order is a byte sequence that begins with the most significant byte (MSB) first, and ends with the least significant byte (LSB) last in the sequence: 1|2|3|4. SWAPped order is when the byte sequence begins with the LSB first, and ends with the MSB last in the sequence: 4|3|2|1.

| | |
|--------------------------|---------------------------------|
| Remote Command: | :FORMat:BORDER NORMAL SWAPped |
| | :FORMat:BORDER? |
| Preset: | NORMal |
| Instrument S/W Revision: | A.01.60 or later |

Meas

Meas Setup

Meas Control features are unique to each Measurement. See the specific Measurement for more information.

| | |
|-------------------------|------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Meas Setup

Mode

The Mode key allows you to select the available measurement applications. The application software must be loaded and license for it to be available. Measurement applications are a collection of measurement capabilities packaged together to provide an instrument personality that is specific to your measurement needs. Each mode software product is ordered separately by Model Number. The default measurement mode is the first listing in the menu.

NOTE Key operation can be different between modes. The information displayed in Help is about the current mode.

To access Help for a different Mode you must first exit Help (by pressing the Cancel (Esc) key). Then select the desired mode and re-access Help.

A list of the valid mode choices is returned with the INST:CAT? Query.

Once an instrument mode is selected, only the commands that are valid for that mode can be executed.

| | |
|-------------------------|--|
| Key Path | Mode |
| Remote Command | :INSTrument [:SElect] SA BASIC ADEM0D NFIGURE PNOISE CDMA2K TDSCDMA VSA VSA89 601 WCDMA WIMAXOFDMA GSM CDMA1XEV RLC :INSTrument [:SElect]? |
| Example | :INST SA |
| Remote Command Notes | The available parameters are dependent upon installed and licensed applications resident in the instrument. Parameters given here are an example, specific parameters are in the individual Application. Once an instrument mode is selected, only the commands that are valid for that mode can be executed. |
| Preset | Not affected by Preset. Set to SA following Restore System Defaults, if SA is the default mode. |
| State Saved | Saved in state |
| Instrument S/W Revision | A.01.60 or later |

Mode

Application Mode Number Selection (Remote Command only)

Select the measurement mode by its mode number. The actual available choices depend upon which applications are installed in your instrument.

| Mode | :INSTrument:NSElect <integer> | :INSTrument[:SElect] <parameter> |
|-------------------------------|-------------------------------|-------------------------------------|
| Spectrum Analyzer | 1 | SA |
| I/Q Analyzer (Basic) | 8 | BASIC |
| WCDMA with HSDPA/HSUPA | 9 | WCDMA |
| cdma2000 | 10 | CDMA2K |
| GSM & EDGE | 13 | EDGE GSM |
| Phase Noise | 14 | PNOISE |
| 1xEV-DO | 15 | CDMA1XEV |
| 802.16 OFDMA (WiMAX/WiBro) | 75 | WIMAXOFDMA |
| Vector Signal Analyzer | 100 | VSA |
| 89601 VSA | 101 | VSA89601 |
| LTE | 102 | LTE |
| TD-SCDMA with HSPA/8PSK | 211 | TDSCDMA |
| Noise Figure | 219 | NFIGURE |
| Analog Demod | 234 | ADEMOD |
| Remote Language Compatibility | 266 | RLC |
| Instrument S/W Revision | A.01.60 or later | |

Remote Command: :INSTrument:NSElect <integer>

:INSTrument:NSElect?

Example: :INST:NSEL 1

Remote Command Notes: SA mode is 1

The command must be sequential: i.e. continued parsing of commands cannot proceed until the instrument select is complete and the resultant SCPI trees are available.

Preset: Not affected by Preset. Set to default mode (1 for SA mode) following Restore System Defaults.

State Saved: Saved in state

Instrument S/W Revision: A.01.60 or later

Application Mode Catalog Query (Remote Command only)

Returns a string containing a comma separated list of names of all the installed and licensed measurement modes (applications). These names can only be used with the :INSTrument[:SElect] command.

Remote Command: :INSTrument:CATalog?

Example: :INST:CAT?

Remote Command Notes: Query returns a quoted string of the installed and licensed modes separated with a comma. Example:

"SA,PNOISE,WCDMA"

Instrument S/W Revision: A.01.60 or later

Application Identification (Remote Commands only)

Each entry in the Mode Menu will have a Model Number and associated information: Version, and Options.

This information is displayed in the Show System screen. The corresponding SCPI remote commands are defined here.

Current Application Model

Returns a string which is the Model Number of the currently selected application (mode).

Remote Command: :SYSTem:APPLication[:CURRent][:NAME]?

Example: :SYST:APPL?

Remote Command Notes: Query returns a quoted string which is the Model Number of the currently selected application (Mode). Example:

"N9060A"

String length is 6 characters.

Preset: Not affected by Preset

State Saved: Not saved in state, the value will be the selected application when Save is done.

Instrument S/W Revision: A.01.60 or later

Current Application Revision

Returns a string which is the Revision of the currently selected application (mode).

Remote Command: :SYSTem:APPLication[:CURRent]:REvision?

Mode

| | |
|--------------------------|---|
| Example: | :SYST:APPL:REV? |
| Remote Command Notes: | Query returns a quoted string which is the Revision of the currently selected application (Mode). Example: "1.0.0.0" String length is a maximum of 23 characters. (each numeral can be an integer + 3 decimal points) |
| Preset: | Not affected by Preset |
| State Saved: | Not saved in state, the value will be the selected application when Save is done. |
| Instrument S/W Revision: | A.01.60 or later |

Current Application Options

Returns a string which is the Options list of the currently selected application (mode).

| | |
|--------------------------|--|
| Remote Command: | :SYSTem:APPLication[:CURRent]:OPTion? |
| Remote Command Notes: | Query returns a quoted string which is the Option list of the currently selected application (Mode). The format is the name as the *OPT? or SYSTem:OPTion command: a comma separated list of option identifiers. Example: "1FP,2FP" String length is a maximum of 255 characters. |
| Preset: | Not affected by Preset |
| State Saved: | Not saved in state per se, value will be the selected application when Save is invoked |
| Example: | :SYST:APPL:OPT? |
| Instrument S/W Revision: | A.01.60 or later |

Application Identification Catalog (Remote Commands only)

A catalog of the installed and licensed applications (Modes) can be queried for their identification.

Application Catalog number of entries

Returns the number of installed and licensed applications (Modes).

| | |
|------------------------|---|
| Remote Command: | :SYSTem:APPLication:CATalog[:NAME]:COUNT? |
| Example: | :SYST:APPL:CAT:COUN? |

Preset: Not affected by Preset
 State Saved: Not saved in state.
 Instrument S/W Revision: A.01.60 or later

Application Catalog Model Numbers

Returns a list of Model Numbers for the installed and licensed applications (Modes).

Remote Command: :SYSTem:APPLication:CATalog[:NAME]?
 Example: :SYST:APPL:CAT?
 Remote Command Notes: Returned value is a quoted string of a comma separated list of Model Numbers. Example, if SAMS and Phase Noise are installed and licensed:
 "N9060A,N9068A"
 String length is COUNT * 7 - 1. (7 = Model Number length + 1 for comma. -1 = no comma for the 1st entry.)

Preset: Not affected by Preset
 State Saved: Not saved in state.
 Instrument S/W Revision: A.01.60 or later

Application Catalog Revision

Returns the Revision of the provided Model Number.

Remote Command: :SYSTem:APPLication:CATalog:REVision? <model>
 Example: :SYST:APPL:CAT:REV? 'N9060A'
 Remote Command Notes: Returned value is a quoted string of revision for the provided Model Number. The revision will be a null-string ("") if the provided Model Number is not installed and licensed. Example, if SAMS is installed and licensed:
 "1.0.0.0"

Preset: Not affected by Preset
 State Saved: Not saved in state.
 Instrument S/W Revision: A.01.60 or later

Mode

Application Catalog Options

Returns a list of Options for the provided Model Number

| | |
|--------------------------|---|
| Remote Command: | :SYSTem:APPLication:CATalog:OPTion? <model> |
| Example: | :SYST:APPL:CAT:OPT? 'N9060A' |
| Remote Command Notes: | Returned value is a quoted string of a comma separated list of Options, in the same format as *OPT? or :SYSTem:OPTion?. If the provided Model Number is not installed and licensed a null-string ("") will be returned. Example, if SAMS is installed and licensed: "2FP" String length is a maximum of 255 characters. |
| Preset: | Not affected by Preset |
| State Saved: | Not saved in state. |
| Instrument S/W Revision: | A.01.60 or later |

Spectrum Analyzer

Selects the Spectrum Analyzer mode for general purpose measurements. There are several measurements available in this mode. General spectrum analysis measurements, in swept and zero span, can be done using the first key in the Meas menu, labeled Swept SA. Other measurements in the Meas Menu are designed to perform specialized measurement tasks, including power and demod measurements.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

| | |
|-------------------------|----------------------------|
| Key Path | Mode |
| Example | INST:SEL SA INST:NSEL 1 |
| Instrument S/W Revision | A.01.60 or later |

IQ Analyzer (Basic)

The IQ Analyzer Mode makes general purpose frequency domain and time domain measurements. These measurements often use alternate hardware signal paths when compared with a similar measurement in the Signal Analysis Mode using the Swept SA measurement. These frequency domain and time domain measurements can be used to output I/Q data results when measuring complex modulated digital signals.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

| | |
|----------|------|
| Key Path | Mode |
|----------|------|

| | |
|-------------------------|-------------------------------|
| Example | INST:SEL BASIC INST:NSEL 8 |
| Instrument S/W Revision | A.01.60 or later |

Phase Noise

The Phase Noise mode provides pre-configured measurements for making general purpose measurements of device phase noise.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

| | |
|-------------------------|---------------------------------------|
| Key Path | Mode |
| Example | INST:SEL PNOISE or INST:NSEL 14 |
| Instrument S/W Revision | A.01.60 or later |

Noise Figure

The Noise Figure mode provides pre-configured measurements for making general purpose measurements of device noise figure.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

| | |
|-------------------------|---|
| Key Path | Mode |
| Example | INST:SEL NFIGURE Or INST:NSEL 219 |
| Instrument S/W Revision | A.01.60 or later |

Remote Language Compatibility

The Remote Language Compatibility (RLC) mode provides remote command backwards compatibility for the 8560 series of spectrum analyzers, known as legacy spectrum analyzers.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

| | |
|----------|------|
| Key Path | Mode |
|----------|------|

Mode

| | |
|-------------------------|------------------|
| Example | INST:SEL RLC |
| | Or |
| | INST:NSEL 266 |
| Instrument S/W Revision | A.01.60 or later |

Analog Demod

Selects the Analog Demod mode for making measurements of AM, FM and phase modulated signals.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

| | |
|-------------------------|------------------|
| Key Path | Mode |
| Example | INST:SEL ADEMOM |
| | INST:NSEL 234 |
| Instrument S/W Revision | A.01.60 or later |

W-CDMA with HSDPA/HSUPA

Selects the W-CDMA with HSDPA/HSUPA mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

| | |
|-------------------------|------------------|
| Key Path | Mode |
| Example | INST:SEL WCDMA |
| | INST:NSEL 9 |
| Instrument S/W Revision | A.01.60 or later |

802.16 OFDMA (WiMAX/WiBro)

Selects the OFDMA mode for general purpose measurements of WiMAX signals. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

| | |
|-------------------------|---------------------|
| Key Path | Mode |
| Example | INST:SEL WIMAXOFDMA |
| | INST:NSEL 75 |
| Instrument S/W Revision | A.01.60 or later |

GSM with EDGE

Selects the GSM with EDGE mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

| | |
|-------------------------|----------------------------------|
| Key Path | Mode |
| Example | INST:SEL EDGEGSM INST:NSEL 13 |
| Instrument S/W Revision | A.01.60 or later |

cdma2000

Selects the cdma2000 mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

| | |
|-------------------------|---------------------------------|
| Key Path | Mode |
| Example | INST:SEL CDMA2K INST:NSEL 10 |
| Instrument S/W Revision | A.01.60 or later |

TD-SCDMA with HSPA/8PSK

Selects the TD-SCDMA mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

| | |
|-------------------------|-----------------------------------|
| Key Path | Mode |
| Example | INST:SEL TDSCDMA INST:NSEL 211 |
| Instrument S/W Revision | A.01.60 or later |

Vector Signal Analyzer

The 89601X Vector Signal Analyzer (VSA) provides vector-signal analysis measurement capability. It provides 3 main measurements that allow you to measure the signal quality of all varieties of RF modulation:

Mode

- Digital Demodulation
- Analog Demodulation
- Vector Signal Analysis

There are advanced modulation analysis and troubleshooting capabilities including the following communications formats: AM, FM, PM, WiMAX, W-CDMA, 2G, 3G, 3.5G, WLAN, digital video, and more. It also provides standard-specific measurements for analysis of iDEN, WiDEN, and MotoTalk signals with Option H09.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

| | |
|-------------------------|-------------------------------|
| Key Path | Mode |
| Example | INST:SEL VSA INST:NSEL 100 |
| Instrument S/W Revision | A.01.60 or later |

89601 VSA

Selecting the 89601 VSA mode will start the 89600-Series VSA software application. The 89600 VSA software is powerful, PC-based software, offering the industry's most sophisticated general purpose and standards specific signal evaluation and troubleshooting tools for the R&D engineer. Reach deeper into signals, gather more data on signal problems, and gain greater insight.

- Over 30 general-purpose analog and digital demodulators ranging from 2FSK to 1024QAM
- Standards specific modulation analysis including:
 - Cell: GSM, cdma2000, WCDMA, TD-SCDMA and more
 - Wireless networking: 802.11a/b/g, 802.11n, 802.16 WiMAX (fixed/mobile), UWB
 - RFID
 - Digital satellite video and other satellite signals, radar, LMDS
- Up to 400K bin FFT, for the highest resolution spectrum analysis
- A full suite of time domain analysis tools, including signal capture and playback, time gating, and CCDF measurements
- Six simultaneous trace displays and the industry's most complete set of marker functions
- Easy-to-use Microsoft ® Windows ® graphical user interface

For more information see the Agilent 89600 Series VSA web site at www.agilent.com/find/89600

To learn more about how to use the 89600 VSA running in the MXA, after the 89600 VSA application is running, open the 89600 VSA Help and open the "About Agilent X-Series Signal Analyzers (MXA/EXA) with 89600-Series Software" help topic.

| | |
|----------|------|
| Key Path | Mode |
|----------|------|

| | |
|-------------------------|------------------------------------|
| Example | INST:SEL VSA89601 INST:NSEL 101 |
| Instrument S/W Revision | A.01.60 or later |

LTE

Selects the LTE mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

| | |
|-------------------------|-------------------------------|
| Key Path | Mode |
| Example | INST:SEL LTE INST:NSEL 102 |
| Instrument S/W Revision | A.01.60 or later |

1xEV-DO

Selects the 1xEV-DO mode for general purpose measurements of signals following this standard. There are several measurements available in this mode.

If you are using the Help feature, this mode must be currently active to access its detailed information. If it is not active, exit the Help feature (Esc key), select the mode, and re-access Help.

| | |
|-------------------------|-----------------------------------|
| Key Path | Mode |
| Example | INST:SEL CDMA1XEV INST:NSEL 15 |
| Instrument S/W Revision | A.01.60 or later |

Mode

Mode Setup

This key accesses a menu to allow you to select mode parameters. These settings will be in effect for all measurements in the current mode. See the information of Radio and Restore Mode Default under this key.

Key Path **Front Panel**

Radio

Accesses a key that enables you to select either a base transceiver station (BTS) or a mobile station (MS) as the device under test.

Key Path **Mode Setup**

Device

Allows you to specify the device to be used.

| | |
|-----------------------|--|
| Mode | cdma2000 |
| Remote Command | [:SENSE] :RADio:STANdard:DEVice BTS MS [:SENSE] :RADio:STANdard:DEVice? |
| Example | RADio:DEVice BTS RADio:DEVice? |
| Preset | BTS |
| State Saved | Saved in instrument state. |
| Range | BTS MS |
| Key Path | Mode Setup, Radio |

Restore Mode Defaults

Resets the state of the currently active mode by resetting the mode persistent settings to their factory default values, clearing mode data and by performing a Mode Preset.

See also the Preset section in the System Functions section.

Mode Setup

Key Path

Mode Setup

Peak Search

Pressing the Peak Search key displays the Peak Search menu and places the selected marker on the trace point with the maximum y-axis value for that marker's trace. The Peak Search features allow you to define specific search criteria to determine which signals can be considered peaks, excluding unwanted signals from the search.

If **Same as "Next Peak" Criteria** is selected, and either **Pk Excursion** or **Pk Threshold** are on, a signal must meet those criteria. If no valid peak is found, a message is generated and the marker is not moved. When **Highest Peak** is on, or both **Pk Excursion** and **Pk Threshold** are off, the marker is always placed at the point on the trace with the maximum y-axis value, even if that point is on the very edge of the trace (exception: negative frequencies and signals close to the LO are not searched at all).

Pressing Peak Search with the selected marker off causes the selected marker to be set to **Normal** at the center of the screen, then a peak search is immediately performed.

| | |
|-------------------------|------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Peak Search

Recall

Recall functionality is common across multiple Modes and Measurements. These common features are described in this section.

The Recall feature prompts you to answer the questions: What do you want to recall? And to where do you want to recall it? Once these questions are answered the recall can occur. The options in this menu answer the question "What do you want to Recall?"

The options are State, Trace and Data. (Screen Image can be saved, but not recalled.) The default paths for Recall are data type dependent and are the same as for Save.

| | |
|-------------------------|---|
| Key Path | Recall |
| Remote Command Notes | No remote command directly controls the Recall Type that this key controls. The Recall type is a node in the :MMEM:LOAD command. An example is :MMEM:LOAD:STATE <filename>. |
| Instrument S/W Revision | A.01.60 or later |

State

Accesses a menu that enables you to recall a State that has previously been saved. Recalling a saved state returns the analyzer as close as possible to the mode context and may cause a mode switch if the file selected is not for the current active mode. A State file can be recalled from either a register or a file. Once you pick the source of the recall in the State menu, the recall will occur.

When this key is pressed, you has determined what they want to recall is **State**. Recalling **State** is used to return as close as possible to the mode context of the save. Recalling State may cause a mode switch if the file selected is not for the currently active mode. This menu key will not actually cause the recall, since the recall feature still needs to know from where to recall the state. **State** can be recalled from either a register or a file. Pressing this key will bring up the State menu that provides you with the options of where to retrieve the state. For quick recalls, the State menu lists 6 registers to recall from or you can select a file to recall from.

| | |
|-------------------------|--|
| Example | MMEM:LOAD:STAT "MyStateFile.state" This loads the state file data (on the default file directory path) into the instrument state. |
| Remote Command Notes | See "Open" on page 1151 . |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall |
| Mode | All |

In measurements that support saving Traces, for example, Swept SA, the Trace data is saved along with

Recall

the State in the State file. When recalling the State, the Trace data is recalled as well. Traces are recalled exactly as they were stored, including the writing mode and update and display modes; so if a Trace was updating and visible when the State was saved, it will come back updating and visible; hence its data will be rewritten right away. So if using State to save and recall traces, any trace whose data must be preserved should be placed in View or Blank before saving.

This creates the following table describing the Trace Save/Recall possibilities:

| | | |
|---|--|--|
| You want to recall state and one trace's data, leaving other traces unaffected. | Save Trace+State from 1 trace. Make sure that no other traces are updating (they should all be in View or Blank) when the save is performed. | On Recall, specify the trace you want to load the one trace's data into. This trace will load in View. All other traces' data will be unaffected, although their trace mode will be as it was when the state save was performed. |
| You want to recall all traces | Save Trace+State from ALL traces. | On Recall, all traces will come back in View (or Blank if they were in Blank or Background when saved) |
| You want all traces to load exactly as they were when saved. | Save State | On recall, all traces' mode and data will be exactly as they were when saved. Any traces that were updating will, of course, have their data immediately overwritten. |

Register 1 thru Register 6

Selecting any one of these register keys causes the State of the mode from the specified Register to be recalled. Each of the register keys annotates whether it is empty or at what date and time it was last modified.

Registers are shared by all modes, so recalling from any one of the 6 registers may cause a mode switch to the mode that was active when the save to the Register occurred.

After the recall completes, the message "Register <register number> recalled" appears in the message bar.

Selecting any one of these register menu keys: **Register 1**, **Register 2**, **Register 3**, **Register 4**, **Register 5**, **Register 6** causes the state of the mode from the specified Register to be recalled. The registers are provided for easy saving and recalling, since you does not have to specify a filename or navigate to a specific file. The date will follow the format specified in the Date Format setting under the **Control Panel**. The time will show hours, minutes and seconds.

| | |
|-------------------------|------------------|
| Key Path | Recall, State |
| Example | *RCL 1 |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, State |

| | |
|-------------------------|------------------|
| Example | *RCL 2 |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, State |
| Example | *RCL 3 |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, State |
| Example | *RCL 4 |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, State |
| Example | *RCL 5 |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, State |
| Example | *RCL 6 |
| Instrument S/W Revision | A.01.60 or later |

From File\ File Open

Brings up the File Open standard Windows® dialog and its corresponding **File Open** key menu.

When you first enter this dialog, the State File default path is in the Look In: box in this File Open dialog. The File Open dialog is loaded with the file information related to the State Save Type. The first *.state file is highlighted. The only files that are visible are the *.state files and the Files of type is *.state, since .state is the file suffix for the State Save Type. For more details, refer to [“File Open Dialog and Menu” on page 1162](#).

| | |
|-------------------------|---|
| Key Path | Recall, State |
| Restriction and Notes | Brings up Open dialog for recalling a State Save Type |
| Instrument S/W Revision | A.01.60 or later |

Open Recalling State function first must verify the file is recallable in the current instrument by checking the software version and model number of the instrument. If everything matches, a full recall proceeds by aborting the currently running measurement, and then loading the State from the saved state file to as close as possible to the context in which the save occurred. You can open state files from any mode, so recalling a State File switches to the mode that was active when the save occurred. After switching to the mode of the saved state file, mode settings and data (if any for the mode) are loaded with values from the saved file. The saved measurement of the mode becomes the newly active measurement and the data relevant to the measurement (if there is any) is recalled.

Recall

If there is a mismatch between file version or model number or instrument version or model number, the recall still tries to recall as much as possible and it returns a warning message of what it did.

NOTE No Trace data is loaded when recalling a State File. Measurements that support loading of trace data will include a Trace key in the Recall menu and will load State + Trace data from .trace files under that key.

Remote Command: :MMEMory:LOAD:STATe <filename>

Example: :MMEM:LOAD:STAT "myState.state" recalls the file myState.state on the default path

Restriction and Notes: Auto return to the State menu and the Open dialog goes away.
Advisory Event "Recalled File <file name>" after recall is complete.

Remote Command Notes: Although the trace data is included in the .state file it is not recalled; that is left for .trace files only for measurements that support recalling of trace data. Errors are generated if the specified file is empty or does not exist, or there is a file type mismatch.

Key Path: Recall, State, From File...

Instrument S/W Revision: A.01.60 or later

The state of a mode includes all of the variables affected by doing a full preset. It not only recalls Mode Preset settings, but it also recalls all of the mode persistent settings and data if the mode has either. Each mode determines whether data is part of mode state and if the mode has any persistent settings. **Recall State** also recalls all of the **Input/Output** system settings, since they are saved with each State File for each mode.

The Recall State function does the following:

Verifies that the file is recallable on this instrument using the version number and model number.

Aborts the currently running measurement.

Clears any pending operations.

Switches to the mode of the selected Save State file.

Sets mode State and Input/Output system settings to the values in the selected Saved State file.

Limits settings that differ based on model number, licensing or version number.

Makes the saved measurement for the mode the active measurement.

Clears the input and output buffers.

Status Byte is set to 0.

Executes a *CLS

Trace (+State)

When this key is pressed, you has determined what they want to recall is **Trace**. Trace files include the state of the mode they were saved from as well as the trace data, with internal flags to indicate which trace you was trying to save which may include ALL traces. They are otherwise identical to State files. Recalling **Trace** may cause a mode switch if the file selected is not for the currently active mode.

Not all modes support saving of trace data with the state; and for modes that do, not all measurements do. The Trace key is grayed out for measurements that do not support trace recall. It is blanked for modes that do not support trace recall.

This key will not actually cause the recall, since the recall feature still needs to know from which file to recall the trace and which trace to recall it into. Pressing this key will bring up the Recall Trace menu that provides you with the options of where to retrieve the trace.

For quick recalls, the Trace menu lists 5 registers to recall from or you can select a file to recall from.

| | |
|-------------------------|---|
| Example | MMEM:LOAD:TRAC TRACE2,"MyTraceFile.trace" |
| | This loads the trace file data (on the default file directory path) into the specified trace. |
| | :MMEM:LOAD:TRAC:REG TRACE1,2 |
| | Restores the trace data in register 2 to Trace 1 |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall |
| Mode | SA |

Register 1 thru Register 5

Selecting any one of these register keys causes the Traces and State from the specified Register to be recalled. Each of the register keys annotates whether it is empty or at what date and time it was last modified.

Trace registers are shared by all modes, so recalling from any one of the 5 registers may cause a mode switch to the mode that was active when the save to the Register occurred.

After the recall completes, the message "Trace Register <register number> recalled" appears in the message bar.

Recall

Selecting any one of these register menu keys: **Register 1**, **Register 2**, **Register 3**, **Register 4**, **Register 5** causes the traces and state of the mode from the specified Register to be recalled. The registers are provided for easy saving and recalling, since you does not have to specify a filename or navigate to a specific file. The date will follow the format specified in the Date Format setting under the **Control Panel**. The time will show hours, minutes and seconds.

| | |
|-------------------------|------------------|
| Key Path | Recall, Trace |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, Trace |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, Trace |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, Trace |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, Trace |
| Instrument S/W Revision | A.01.60 or later |

To Trace

These key selections let you pick which Trace to recall the saved trace into; either 1, 2, 3, 4, 5, or 6. Not all modes have the full 6 traces available. The default is the currently selected trace, selected in this menu or in the Trace/Det, Export Data, Import Data, or Save Trace menus, except if you have chosen All then it remains chosen until you specifically change it to a single trace.

If the .trace file is an "all trace" file, "**To Trace**" is ignored and the traces each go back to the trace they were saved from.

Once selected, the key returns back to the Recall Trace menu and the selected Trace number is annotated on the key. Now you have selected exactly where the trace needs to be recalled. In order to trigger a recall of the selected Trace, you must select the **Open** key in the Recall Trace menu.

| | |
|-------------------------|-------------------|
| Key Path | Save, Data, Trace |
| Mode | SA |
| Instrument S/W Revision | A.01.60 or later |

Open...

Pressing **Open** brings up the File Open standard Windows dialog and its corresponding File Open key menu. When you navigates to this selection, they have already determined they are recalling Trace and now they want to specify from which file to do the recall.

When you first enters this dialog, the State File default path is in the Look In: box in this File Open dialog. The File Open dialog is loaded with the file information related to the State Save Type. The first *.trace file is highlighted. Also, the only files that are visible are the *.trace files and the Files of type is *.trace, since .trace is the file suffix for the Trace Save Type. For more details, refer to [“File Open Dialog and Menu” on page 1162](#).

| | |
|-------------------------|---|
| Restriction and Notes | Brings up Open dialog for recalling a Trace Save Type |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, Trace |
| Mode | SA |

Open Recalling Trace first must verify the file is recallable in this instrument by checking instrument software version and model number, since it includes State. If everything matches, a full recall proceeds by aborting the currently running measurement, loads the state from the saved state file to as close as possible to the context in which the save occurred. Users can open .trace files from any mode that supports them, so recalling a Trace File switches to the mode that was active when the save occurred. After switching to the mode of the saved state file, mode settings and data (if any for the mode) are loaded with values from the saved file and the saved measurement of the mode becomes the newly active measurement and the data relevant to the measurement (if there is any) is recalled.

Once the state is loaded the trace data must be loaded. The internal flags are consulted to see which trace to load and the "To Trace" setting to see where to load it. Trace data is always loaded with the specified trace set to View, so that the data is visible and not updating (so as not to wipe out the recalled data). If the file is an "all trace" file, all traces are loaded with the saved data (to the original trace the data was saved from) and set to View. Traces whose data is not loaded are restored to the update state that existed when they were saved.

In every other way a Trace load is identical to a State load. See section [“Open” on page 1151](#) for details.

| | |
|-----------------------|--|
| Key Path | Recall, Trace, Open... |
| Restriction and Notes | Auto return to the Trace menu and the Open dialog goes away. Advisory Event "Recalled File <file name>" after recall is complete. |
| Remote Command | :MMEMory:LOAD:TRACe TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 , <filename> :MMEMory:LOAD:TRACe:REGister TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 , <integer> |

Recall

| | |
|-------------------------|---|
| Remote Command Notes | <p>Some modes and measurements do not have available all 6 traces. Phase Noise mode command, for example, is: <code>MMEMory:LOAD:TRACe TRACE1 TRACE2 TRACE3,<filename></code></p> <p>The load trace command actually performs a load state, which in the Swept SA measurement includes the trace data. However it looks in the recalled state file to see how it was flagged at save time. The possibilities are:</p> <p>If the trace file was saved using one of the TRACE# enums, it is flagged as a single trace save file. The trace that was flagged as the one that was saved, is loaded to the trace specified. The trace is loaded with update off and display on, and none of the other traces are loaded.</p> <p>If the trace file was saved using one the ALL enum, it is flagged as an "all traces" file. And all traces will be loaded. All of the traces are loaded with Update=Off to keep them from updating, regardless of the setting of "Recall State w/Trace Update".</p> |
| Example | <p><code>:MMEM:LOAD:TRAC TRACE2,"myState.trace"</code> recalls the file myState.trace on the default path; if it is a "single trace" save file, that trace is loaded to trace 2, and will is set to be not updating.</p> <p><code>:MMEM:LOAD:TRAC:REG TRACE1,2</code> restores the trace data in register 2 to Trace 1</p> |
| Instrument S/W Revision | A.01.60 or later |

Data (Mode Specific)

Importing a data file loads data that was previously saved from the current measurement or from other measurements and/or modes that produce the same type of data. The Import Menu only contains Data Types that are supported by the current measurement.

For any given mode, the Export Data and Import Data menus match, but keys in Import Data are blanked if the data type is supported for Save but not for Recall.

Since the commonly exported data files are in .csv format, the data can be edited by you prior to importing. This allows you to export a data file, manipulate the data in Excel (the most common PC Application for manipulating .csv files) and then import it.

Importing Data loads measurement data from the specified file into the specified or default destination, depending on the data type selected. Selecting an Import Data menu key will not actually cause the importing to occur, since the analyzer still needs to know from where to get the data. Pressing the Open key in this menu brings up the Open dialog and Open menu that provides you with the options from where to recall the data. Once a filename has been selected or entered in the Open menu, the recall will occur as soon as the Open key is pressed. See [“File Open Dialog and Menu” on page 1162](#) for more details.

| | |
|-------------------------|--|
| Remote Command Notes | No SCPI command directly controls the Data Type that this key controls. The Data Type is included in the MMEM:LOAD commands. |
| Instrument S/W Revision | A.01.60 or later |

| | |
|----------|---|
| Key Path | Recall |
| Mode | SA VSA |
| Preset | <mode specific>; Is not affected by Preset, but is reset during Restore Mode Defaults and survives subsequent running of the mode |

Trace

This key selects the Traces as the data type to be imported with this recall request. It brings up the Trace Menu that lets you select which Trace to import the data into.

This key is grayed out when measurements are running that do not support trace importing.

For Vector Signal Analyzer Mode:

the trace data is loaded into the selected data register. Trace data registers are temporary storage places for trace data. They allow you to view past results next to current measurement results, and are also used in some functions like user defined filters. They are measurement global, so you can import data into a register while in the Digital Demod measurement and view it later while in the Vector measurement. Data registers are cleared when the measurement application is terminated, but not when you change Modes and return.

If the recalled file was saved with header information, the trace will initially be displayed with the same formatting and scaling as it had when it was saved. If headers are not saved, the scaling and format are set to defaults when the trace is recalled.

The following trace data formats may be imported:

- Text and comma-separated variable (CSV)

- Text

- SDF.

Option 200 also allows import of these additional formats:

- Matlab 4

- Matlab 5

- Matlab HDF5

- N5110A compatible binary

| | |
|------------------------|---|
| Example | <pre>MMEM:LOAD:TRAC:DATA TRACE2,"MyTraceFile.csv"</pre> <p>This loads the trace file data (on the default file directory path) into the specified trace.</p> |
| Dependencies/Couplings | <p>Trace data is not available from all Measurements. In that case, the key will be grayed out. The key will not show if no measurements in the Mode support it.</p> <p>For SA measurements, traces cannot be recalled from a trace file that was saved with ALL traces selected.</p> |

Recall

| | |
|-------------------------|--|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, Data |
| Mode | SA Analog Demod VSA |
| Preset | 1; not part of Preset, but is reset by Restore Mode Defaults and survives power cycles |
| State Saved | Saved in State |

Trace 1, 2, 3, 4, 5, 6 These keys let you pick which Trace to import the data into; either 1, 2, 3, 4, 5 or 6. The default is the currently selected trace, selected in this menu or in the Trace/Det, Export Data, Recall Trace, or Save Trace menus, except if you have chosen All then it remains chosen until you specifically change it to a single trace.

Once selected, the key returns back to the Import Data menu and the selected Trace number is annotated on the key. Now you have selected exactly what needs to be imported. In order to trigger a import of the selected trace, you must select the Open key in the Import Data menu.

An example of using this menu is: If you select 4 and continue to the File Open dialog, then import Trace 4 from the file selected or entered in File Name option in the File Open dialog.

| | |
|-------------------------|---------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, Data, Trace |
| Mode | SA VSA |

Display in Selected Trace In Vector Signal Analyzer Mode, data registers are used as temporary storage places for trace data.

A register may be displayed in any trace. If "Display in Selected Trace" key is set to "Yes" then the data register into which the file is recalled is then assigned to the currently selected trace.

| | |
|---------|--|
| Example | Related command: MMEM:LOAD:TRAC:DATA D1,"TRC1.TXT",TXT This command explicitly puts the data in the specified trace. |
|---------|--|

| | |
|-------------------------|-----------------------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, Data (Import), Trace (to) |
| Mode | VSA |

Capture Buffer

Capture Buffer functionality is not available for all measurements. The captured data is raw data

(unprocessed).

| | |
|-------------------------|--|
| Example | MMEM:LOAD:CAPT "MyCaptureData.bin" |
| | This loads the file of capture data (on the default file directory path) into the instrument. |
| Dependencies/Couplings | Capture buffer data is not available from all Measurements. In that case, the key will be grayed out. The key will not show if no measurements in the Mode support it. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, Data |
| Mode | WCDMA |

Zone map

A map file contains zone definitions that will help simplify making measurements of frequently used signals. The OFDMA frame structure can contain multiple-zone definitions for the uplink and downlink subframes and multiple data burst allocations. You can recall map files in which you have saved complicated OFDMA frame analysis zone definitions; this can save you time and ensure the accuracy of repeat measurements. map files are also useful for recreating measurement settings so they can be used by other users.

| | |
|-------------------------|--|
| Example | MMEM:LOAD:ZMAP "MyZonemapFile.omf" |
| | This loads the file of zone map data (on the default file directory path) into the custom map. |
| Dependencies/Couplings | Zone map data is not available from all Measurements. In that case, the key will be grayed out. The key will not show if no measurements in the Mode support it. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, Data |
| Mode | OFDMA WIMAX |

Recorded Data

This allows you to recall previously saved, recorded data for analysis.

This feature is only available with 89601X VSA Option 200 and Option G01.

| | |
|-------------------------|---------------------------------|
| Example | MMEM:LOAD:REC "MyRecording.sdf" |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, Data (Import) |
| Mode | VSA |

Recall

Notes

Available file types are:

- CSV (Comma delimited) (*.csv)
- MAT-File (*.mat)
- MAT-File (Version 4) (*.mat)
- MAT-File (HDF5) (*.mat;*.hdf;*.h5)
- N5110A Waveform (*.bin)
- SDF (Fast) (*.sdf;*.dat)
- SDF (Export) (*.sdf;*.dat)
- Text (Tab delimited) (*.txt)

Open...

Pressing **File Open** brings up the File Open standard Windows dialog and the File Open key menu. When you navigates to this selection, they have already determined they are recalling a specific Data Type and now they want to specify which file to open.

When you first enter this dialog, the path is in the Look In: field in this File Open dialog depends on which import data type you navigated here from.

The only files that are visible are those specific to the file type being recalled.

| | |
|-------------------------|---|
| Key Path | Recall, Data |
| Restriction and Notes | Brings up Open dialog for recalling a <mode specific> Save Type |
| Instrument S/W Revision | A.01.60 or later |

Open The import starts by checking for errors. Then the import can start. For all data types, the actual import starts by aborting the currently running measurement. Then the import does data type specific behavior:

Trace Import: A trace cannot be imported if the trace points in the file do not match the sweep points in the mode. If this happens, an error is generated. When a trace is imported, then **Trace Update** is always turned OFF for that trace and **Trace Display** is always turned ON. The trace file has meta data. If the meta data in the file does not match the corresponding SA state, the dirty marker is displayed.

| | |
|-----------------------|--|
| Mode | SA |
| Remote Command | :MMEMory:LOAD:TRACe:DATA TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6, <filename> |
| Example | :MMEM:LOAD:TRAC DATA TRACE2,"myTrace2.csv" imports the 2nd trace from the file myTrace2.csv in the default path. |

Remote Command Notes Traces cannot be recalled from a trace data file that was saved with ALL traces selected.
Errors are reported if the file is empty or missing, or if the file type does not match.

Instrument S/W Revision A.01.60 or later

Remote Command `MMEMory:LOAD:TRACe:DATA
D1|D2|D3|D4|D5|D6,<filename>[,CSV|TXT|SDF]`

Example `MMEM:LOAD:TRAC:DATA D1,"TRC1.TXT",TXT`

Restriction and Notes If you are not licensed to recall a particular file type, then an error -203.9010 will be returned. If the file format cannot be determined or the file cannot be recalled successfully, then an error -250.5290 is returned. If the recall is successful, then advisory message is shown.

Remote Command Notes If the file format parameter is not included in the SCPI command, the file format is determined by the file name extension. If this is not sufficient, the file is scanned to determine the format.

Instrument S/W Revision A.01.60 or later

Key Path Recall, Data (Import), Trace (to), Open . . .

Mode VSA

Recall captured data for reuse in demod measurements using the Load Capture Buffer functionality. This function is enabled for ‘Code Domain’ and ‘Modulation Accuracy’ measurements only.

Remote Command `:MMEMory:LOAD:CAPTured <filename>`

Restriction and Notes Errors are reported if the file is empty or missing, or if the file type does not match.

Example `:MMEM:LOAD:CAPT "My
Documents\WCDMA\data\IQ\captureBuffer\myCaptureBuffer.bin"`

Recall

| | |
|-------------------------|-------------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Recall, Data, File Open |
| Mode | WCDMA |

Remote Command MMEMory:LOAD:RECORDing <filename>

Example MMEM:LOAD:REC "MyRecording.sdf"

Remote Command Notes SCPI reflects the action performed when this key is selected and File Open is pressed.

Instrument S/W Revision A.01.60 or later

Key Path Recall, Data (Import), Recorded Data, Open . . .

Mode VSA

Remote Command :MMEMory:LOAD:ZMAP <filename>

Example :MMEM:LOAD:ZMAP "myZoneMap.omf" recalls the Zone map data from the file myZoneMap.omf on the default directory to the Custom map for Modulation Analysis measurement.

Instrument S/W Revision A.01.60 or later

Key Path Recall, Data, Zone map

Mode WIMAXOFDMA

File Open Dialog and Menu

The **File Open** is a standard Windows dialog and has a **File Open** key menu. Each key in this menu corresponds to the selectable items in the **File Open** dialog box. The menu keys can be used for easy navigation between the selections within the dialog or the standard **Tab** and **Arrow** keys can be used for dialog navigation. When you navigate to this selection, you have already limited the file recall type and now you want to specify which file to open.

Instrument S/W Revision A.01.60 or later

Open

This selection and the **Enter** key when a filename has been selected or specified actually cause the load to occur. **Open** loads the specified or selected file to the previously selected recall type of either **State** or a specific import data type.

Restriction and Notes: Advisory Event "File <file name> recalled" after recall is complete.

Instrument S/W Revision: A.01.60 or later

File/Folder List

This menu key navigates to the center of the dialog that contains the list of files and folders. Once here you can get information about the file.

| | |
|-------------------------|--|
| Key Path | Recall, <various>, Open... |
| Restriction and Notes | Pressing this key navigates you to the files and folders list in the center of the dialog. |
| Instrument S/W Revision | A.01.60 or later |

Sort

Pressing this key brings up the Sort menu that allows you a way to sort the files within the File Open scope. Only one sorting type can be selected at a time and the sorting happens immediately.

| | |
|-------------------------|--|
| Key Path | Recall, <various>, Open... |
| Remote Command Notes | No SCPI command directly controls the sorting. |
| Instrument S/W Revision | A.01.60 or later |

By Date This allows you to sort the list of files within the scope of the File Open dialog in ascending or descending data order. The date is the last data modified.

| | |
|-------------------------|--|
| Key Path | Recall, <various>, Open..., Sort |
| Restriction and Notes | Files in File Open dialog are sorted immediately in the selected order |
| Instrument S/W Revision | A.01.60 or later |

By Name This allows you to sort the list of files within the scope of the File Open dialog in ascending or descending order based on the filename.

| | |
|-------------------------|--|
| Key Path | Recall, <various>, Open..., Sort |
| Restriction and Notes | Files in File Open dialog are sorted immediately in the selected order |
| Instrument S/W Revision | A.01.60 or later |

By Extension This allows you to sort the list of files within the scope of the File Open dialog in ascending or descending order based on the file extension for each file.

| | |
|-------------------------|--|
| Key Path | Recall, <various>, Open..., Sort |
| Restriction and Notes | Files in File Open dialog are sorted immediately in the selected order |
| Instrument S/W Revision | A.01.60 or later |

Recall

By Size This allows you to sort the list of files within the scope of the File Open dialog in ascending or descending order based on file size.

| | |
|-------------------------|--|
| Key Path | Recall, <various>, Open..., Sort |
| Restriction and Notes | Files in File Open dialog are sorted immediately in the selected order |
| Instrument S/W Revision | A.01.60 or later |

Ascending This causes the display of the file list to be sorted, according to the sort criteria above, in Ascending order.

| | |
|-------------------------|--|
| Key Path | Recall, <various>, Open..., Sort |
| Restriction and Notes | Files in File Open dialog are sorted immediately in the selected order |
| Instrument S/W Revision | A.01.60 or later |

Descending This causes the display of the file list to be sorted, according to the sort criteria above, in Descending order.

| | |
|-------------------------|--|
| Key Path | Recall, <various>, Open..., Sort |
| Restriction and Notes | Files in File Open dialog are sorted immediately in the selected order |
| Instrument S/W Revision | A.01.60 or later |

Files Of Type

This menu key corresponds to the Files Of Type selection in the dialog. It follows the standard Windows supported Files Of Type behavior. It shows the current file suffix that corresponds to the type of file you has selected to save. If you navigated here from recalling State, "State File (*.state)" is in the dialog selection and is the only type available in the pull down menu. If you navigated here from recalling Trace, "Trace+State File (*.trace)" is in the dialog selection and is the only type available under the pull down menu. If you navigated here from importing a data file, "Data File (*.csv)" is in the dialog and is the only type available in the pull down menu. Modes can have other data file types and they would also be listed in the pull down menu.

| | |
|-------------------------|--|
| Key Path | Recall, <various>, Open... |
| Restriction and Notes | Pressing this key causes the pull down menu to list all possible file types available in this context. |
| Instrument S/W Revision | A.01.60 or later |

Up One Level

This menu key corresponds to the icon of a folder with the up arrow that is in the tool bar of the dialog. It follows the standard Windows supported Up One Level behavior. When pressed, it causes the file and

folder list to navigate up one level in the directory structure.

| | |
|-------------------------|--|
| Key Path | Recall, <various>, Open... |
| Restriction and Notes | When pressed, the file and folder list is directed up one level of folders and the new list of files and folders is displayed. |
| Instrument S/W Revision | A.01.60 or later |

Cancel

This menu key corresponds to the Cancel selection in the dialog. It causes the current File Open request to be cancelled. It follows the standard Windows supported Cancel behavior.

| | |
|-------------------------|--|
| Key Path | Recall, <various>, Open... |
| Restriction and Notes | Pressing this key causes the Open dialog to go away and auto return. |
| Instrument S/W Revision | A.01.60 or later |

Recall

Restart

The Restart function restarts the current sweep, or measurement, or set of averaged/hold sweeps or measurements. If you are Paused, pressing Restart does a Resume.

The Restart function is accessed in several ways:

- Pressing the Restart key
- Sending the remote command INIT:IMMEDIATE
- Sending the remote command INIT:RESTART

| | |
|------------------------------------|--|
| Remote Command: | :INITiate[:IMMEDIATE] |
| Example: | :INIT:IMM |
| Dependencies/Couplings: | Resets average/hold count k. For the first sweep overwrites all active (update=on) traces with new current data. For application modes, it resets other parameters as required by the measurement. |
| Remote Command Notes: | :INITiate:RESTART :INITiate:IMMEDIATE Either of the above commands perform exactly the same function. |
| SCPI Status Bits/OPC Dependencies: | This is an Overlapped command. The STATUS:OPERation register bits 0 through 8 are cleared. The STATUS:QUESTIONable register bit 9 (INTEGRity sum) is cleared. The SWEEPING bit is set. The MEASURING bit is set. |
| Instrument S/W Revision: | A.01.60 or later |
| Remote Command: | :INITiate:RESTART |
| Example: | :INIT:REST |
| Dependencies/Couplings: | Resets average/hold count k. For the first sweep overwrites all active (update=on) traces with new current data. For application modes, it resets other parameters as required by the measurement. |
| Remote Command Notes: | :INITiate:RESTART :INITiate:IMMEDIATE Either of the above commands perform exactly the same function. |

Restart

| | |
|------------------------------------|--|
| SCPI Status Bits/OPC Dependencies: | This is an Overlapped command. The STATUS:OPERation register bits 0 through 8 are cleared. The STATUS:QUEStionable register bit 9 (INTEgrity sum) is cleared. The SWEEPING bit is set. The MEASURING bit is set. |
| Instrument S/W Revision: | A.01.60 or later |

The **Restart** function first aborts the current sweep/measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the analyzer is in the process of aligning when **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for Single operation, multiple sweeps may be taken when Restart is pressed (for example, when averaging/holding is on). Thus when we say that **Restart** "restarts a measurement," we may mean:

- It restarts the current sweep
- It restarts the current measurement
- It restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- It restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement
- depending on the current settings.

With **Average/Hold Number** (in **Meas Setup** menu) set to 1, or Averaging off, or no trace in Trace Average or Hold, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the analyzer stops sweeping once that sweep has completed. However, with **Average/Hold Number** >1 and at least one trace set to **Trace Average, Max Hold, or Min Hold (SA Measurement)** or **Averaging on (most other measurements)**, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Number**. A measurement average usually applies to all traces, marker results, and numeric results; but sometimes it only applies to the numeric results.

Once the full set of sweeps has been taken, the analyzer will go to idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the step up key while **Average/Hold Number** is the active function, or sending the remote command CALC:AVER:TCON UP.

Save

Save functionality is common across multiple Modes and Measurements. These common features are described in this section.

The Save feature prompts you to essentially answer the questions: What do you want to save? And where do you want to save it? Once these questions are answered the save can occur. The options in this menu answer the question, "What do you want to save?"

Accesses a menu that provides the save type options. The **Save Type** options are **State**, **Trace**, **Data**, or a **Screen Image** depending on the active mode.

| | |
|-------------------------|--|
| Remote Command Notes | No remote command for this key specifically. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save |
| Mode | All |

State

Selects **State** as the save type and accesses a menu that provides the options of where to save. You can save either to a register or a file. This menu key will not actually cause the save until the location is chosen.

Saving the state is the only way to save this exact measurement context for the current active mode. The entire state of the active mode is saved in a way that when a recall is requested, the mode will return to as close as possible the context in which the save occurred. This includes all settings and data for only the current active mode.

It should be noted that the Input/Output settings will be saved when saving State, since these settings plus the state of the mode best characterize the current context of the mode, but the mode independent System settings will not be saved.

This key will not actually cause the save, since the save feature still needs to know where to save the state. Pressing this key will bring up the Save State menu that provides you with these options.

For rapid saving, the State menu lists registers to save to, or you can select a file to save to. Once they pick the destination of the save in the State menu, the save will occur.

| | |
|-------------------------|--|
| Example | MMEM:STOR:STATe "MyStateFile.state" This stores the current instrument state data in the file MyStateFile.state in the default directory. |
| Remote Command Notes | See "Save" on page 1171 . |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save |
| Mode | All |

Save

Register 1 thru Register 6

Selecting any one of these register menu keys causes the State of the currently active mode to be saved to the specified Register. The registers are provided for rapid saving and recalling, since you do not need to specify a filename or navigate to a file. Each of the register menu keys annotates whether it is empty or at what date and time it was last modified.

These 6 registers are all that is available from the front panel for all modes in the instrument. There are not 6 registers available for each mode. From remote, 127 Registers are available. Registers are files that are visible to you in the My Documents\System folder.

| | |
|-------------------------|------------------|
| Example | *SAV 1 |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, State |
| Mode | All |

| | |
|-------------------------|------------------|
| Example | *SAV 2 |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, State |
| Mode | All |

| | |
|-------------------------|------------------|
| Example | *SAV 3 |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, State |
| Mode | All |

| | |
|-------------------------|------------------|
| Example | *SAV 4 |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, State |
| Mode | All |

| | |
|-------------------------|------------------|
| Example | *SAV 5 |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, State |
| Mode | All |

| | |
|-------------------------|------------------|
| Example | *SAV 6 |
| Instrument S/W Revision | A.01.60 or later |

| | |
|----------|-------------|
| Key Path | Save, State |
| Mode | All |

To File . . .

Accesses a menu that enables you to select the location for saving the State. This menu is similar to a standard Windows® **Save As** dialog.

The default path for all State Files is:

My Documents\<<mode name>\state

where <mode name> is the parameter used to select the mode with the INST:SEL command (for example, SA for the Spectrum Analyzer). This path is the **Save In:** path in the **Save As** dialog for all State Files when they first enter this dialog.

| | |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, State |
| Mode | All |

Save As . . .

This menu lets you select the location where you can save the State. This menu is a standard Windows® dialog with Save As menu keys. The "File Name" field in the Save As dialog is initially loaded with an automatically generated filename specific to the appropriate Save Type. The automatically generated filename is guaranteed not to conflict with any filename currently in the directory. You may replace or modify this filename using the File Name key. See the Quick Save key documentation for more on the automatic file naming algorithm.

The default path for all State Files is:

My Documents\<<mode name>\state

where <mode name> is the parameter used to select the mode with the INST:SEL command (for example, SA for the Spectrum Analyzer).

When you first enter this dialog, the path in the **Save In:** field depends on the data type. The only files that are visible are the *.state files and the Save As type is *.state, since .state is the file suffix for the State Save Type.

| | |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, State |
| Mode | All |

Save Saves all of the State of the currently active mode plus the system level Input/Output settings to the specified file.

While the save is being performed, the floppy icon shows up in the settings bar near the Continuous/Single sweep icon. After the save completes, the Advisory Event "File <register number>

Save

saved" is displayed.

| | |
|-------------------------|--|
| Remote Command | :MMEMory:STORe:STATe <filename> |
| Example | :MMEM:STOR:STAT "myState.state" saves the file myState.state on the default path |
| Restriction and Notes | If the file already exists, the file will be overwritten. Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during a instrument software upgrade. Both single and double quotes are supported for any filename parameter over remote. Auto return to the State menu and the Save As dialog goes away. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, State, To File... |
| Mode | All |

Trace (+State)

Selects a state file which includes trace data for recalling as the save type and accesses a menu that enables you to select which trace to save. You can save to either a register or a file. Not all modes support saving trace data with the state; and for modes that do, not all measurements do. This key is grayed out for measurements that do not support trace saves. It is blanked for modes that do not support trace saves. Saving **Trace** is identical to saving State except a .trace extension is used on the file instead of .state, and internal flags are set in the file indicating which trace was saved. You may also select to save ALL traces.

This key will not actually cause the save, since the save feature still needs to know which trace to save and where to save it. Pressing this key will bring up the Save Trace menu that provides you with these options.

For rapid saving, the Trace menu lists registers to save to, or you can select a file to save to. Once you pick the destination of the save in the Trace menu, the save will occur.

| | |
|-------------------------|---|
| Example | MMEM:STOR:STATe TRACE2,"MyTraceFile.trace" This stores trace 2 data in the file MyTraceFile.trace in the default directory. :MMEM:STOR:TRAC:REG TRACE1,2 stores trace 1 data in trace register 2 :MMEM:STOR:TRAC:REG ALL,3 saves the data for all 6 traces in trace register 3 |
| Remote Command Notes | See "Save" on page 1174 . |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save |
| Mode | SA |

Register 1 thru Register 5

Selecting any one of these register menu keys causes the Trace(s) specified under From Trace, along with the state of the currently active mode, to be saved to the specified Trace Register. The registers are provided for rapid saving and recalling, since you do not need to specify a filename or navigate to a file. Each of the register menu keys annotates whether it is empty or at what date and time it was last modified.

These 5 trace registers are all that is available for all modes in the instrument. At present, only the Swept SA measurement of the Spectrum Analyzer mode supports saving to Trace+State files. Registers are files that are visible to you in the My Documents\System folder.

| | |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Trace |
| Mode | SA |

| | |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Trace |
| Mode | SA |

| | |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Trace |
| Mode | SA |

| | |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Trace |
| Mode | SA |

| | |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Trace |
| Mode | SA |

From Trace

Accesses a menu that enables you to select the trace to be saved. You can choose either 1, 2, 3, 4, 5, 6 or All. Not all modes have the full six traces. Once a trace is selected, the key returns back to the Save Trace menu and the selected trace number is annotated on the key. The default is the currently selected trace, selected in this menu or in the Trace/Det, Export Data, Import Data or Recall Trace menus, except if you have chosen All then it remains chosen until you specifically change it to a single trace. To save the Trace you must select **Save As**.

These keys let you pick which trace to save. Now you have selected exactly what needs to be saved. In

Save

order to trigger a save of the selected **Trace**, you must select the **Save As** key in the Save Trace menu.

| | |
|-------------------------|---------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Trace + State |
| Mode | SA |

Save As . . .

This menu lets you select the location where you can save the Trace. It is a standard Windows® dialog with Save As menu keys.

The "File Name" field in the Save As dialog is initially loaded with an automatically generated filename specific to the appropriate Save Type. The automatically generated filename is guaranteed not to conflict with any filename currently in the directory. You may replace or modify this filename using the File Name key. See the Quick Save key documentation for more on the automatic file naming algorithm.

The default path for all State Files including .trace files is:

My Documents\<<mode name>\state

where <mode name> is the parameter used to select the mode with the INST:SEL command (for example, SA for the Spectrum Analyzer).

When you first enter this dialog, the path in the Save In: field depends on the data type. The only files that are visible are the *.trace files and the Save As type is *.trace, since .trace is the file suffix for the Trace Save Type.

| | |
|-------------------------|---|
| Restriction and Notes | Brings up Save As dialog for saving a Trace Save Type |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Trace (+State) |
| Mode | SA |

Save This key initiates the save of the .trace file. All of the State of the currently active mode plus the system level Input/Output settings are saved to the specified file as well as all of the trace data, including internal flags set in the file indicating which trace is to be saved.

While the save is being performed, the floppy icon shows up in the settings bar near the Continuous/Single sweep icon. After the save completes, the Advisory Event "File <register number> saved" is displayed.

```
Remote Command          :MMEMory:STORe:TRACe
                           TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6 | ALL, <filename>
                           >
                           :MMEMory:STORe:TRACe:REGister
                           TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6 | ALL, <integer>
```

| | |
|-------------------------|--|
| Example | <p>:MMEM:STOR:TRAC TRACE1,“myState.trace” saves the file myState.trace on the default path and flags it as a “single trace” file with Trace 1 as the single trace (even though all of the traces are in fact stored).</p> <p>:MMEM:STOR:TRAC ALL,“myState.trace” saves the file myState.trace on the default path and flags it as an “all traces” file</p> <p>:MMEM:STOR:TRAC:REG TRACE1,2 stores trace 1 data in trace register 2</p> |
| Remote Command Notes | <p>Some modes and measurements do not have available all 6 traces. The Phase Noise mode command, for example, is: MMEMory:STORe:TRACe TRACE1 TRACE2 TRACE3 ALL,<filename></p> <p>This command actually performs a save state, which in the Swept SA measurement includes the trace data. However it flags it (in the file) as a “save trace” file of the specified trace (or all traces).</p> <p>The range for the register parameter is 1–5</p> |
| Restriction and Notes | <p>If the file already exists, the file will be overwritten. Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during a instrument software upgrade. Both single and double quotes are supported for any filename parameter over remote.</p> <p>Auto return to the State menu and the Save As dialog goes away.</p> |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Trace, Save As... |
| Mode | SA |

Data (Mode Specific)

Exporting a data file stores data from the current measurement to mass storage files. The Export Menu only contains data types that are supported by the current measurement.

For any given mode, the Export Data and Import Data menus match, but keys in Import Data are blanked if the data type is supported for Save but not for Recall.

Since the commonly exported data files are in .csv format, the data can be edited by you prior to importing. This allows you to export a data file, manipulate the data in Excel (the most common PC Application for manipulating .csv files) and then import it.

Selecting an Export Data menu key will not actually cause the exporting to occur, since the analyzer still needs to know where you wish to save the data. Pressing the Save As key in this menu brings up the Save As dialog and Save As menu that allows you to specify the destination file and directory. Once a filename has been selected or entered in the Open menu, the export will occur as soon as the Save key is pressed. See section “[Save As . . .](#)” on page 1186 for more details.

| | |
|----------------------|---|
| Remote Command Notes | No SCPI command directly controls the Data Type that this key controls. The Data Type is included in the MMEM:STORe commands. |
|----------------------|---|

Save

| | |
|-------------------------|---|
| Dependencies/Couplings | If a file type is not used by a certain measurement, that type is grayed out for that measurement. The key for a file type will not show if there are no measurements in Mode that supports it. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save |
| Mode | All |
| Preset | <mode specific>; Is not affected by Preset, but is reset during Restore Mode Defaults and survives subsequent running of the mode. |

Trace

Pressing this key selects Traces as the data type to be exported with this save request. Pressing this key when it is already selected brings up the Trace Menu, which allows you to select which Trace to save. This is the same as the Select Trace menu under Trace. The trace selected on that menu appears selected here, and selecting a trace here causes the same trace to be selected on the Select Trace menu. (That is, there is only one "selected trace".) This key is grayed out when measurements are running that do not support trace exporting.

| | |
|-------------------------|---|
| Example | <pre>MMEM:STOR:TRAC:DATA TRACE3,"MyTraceFile.csv"</pre> <p>This stores the specified trace data in the file MyTraceFile.csv in the default directory.</p> <p>VSA Example: <pre>MMEM:STOR:TRAC:DATA TRACE1,"Trc1.txt",TXT,ON</pre></p> |
| Remote Command Notes | See |
| Dependencies/Couplings | <p>Trace data is not available from all Measurements. In that case, the key will be grayed out. The key will not show if no measurements in the Mode support it.</p> <p>For SA measurements, traces cannot be recalled from a trace file that was saved with ALL traces selected.</p> |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Data |
| Mode | SA Analog Demod VSA |
| Preset | Not part of Preset, but is reset by Restore Mode Defaults and survives power cycles. |
| State Saved | Saved in State |

Trace selection These keys let you pick which Trace to save. The traces may have names, or they may be labeled 1, 2, 3, 4, 5, or 6, depending on the current mode. Once selected, the key returns back to the Export Data menu and the selected trace name/number is annotated on the key. The default is the currently selected trace, selected in this menu or in the Trace/Det, Import Data, Recall Trace or Save

Trace menus, except if you have chosen All then it remains chosen until you specifically change it to a single trace.

In order to trigger a save of the selected trace, you must select the Save As key in the Export Data menu.

Some measurements have an "ALL" selection. This saves all six traces in one .csv file with the x-axis data in the first column and the individual trace data in succeeding columns. The header data and x-axis data in this file reflect the current settings of the measurement. Note that any traces which are in View or Blank may have different x-axis data than the current measurement settings; but this data will not be output to the file.

| | |
|-------------------------|----------------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Data, Trace |
| Mode | SA Analog Demod VSA |
| Preset | The first trace key shown. |

Include Header The trace header information includes enough state information to display the trace data with the same formatting and scaling when it is recalled. However, no other instrument state information is saved. If headers are not saved, the scaling and format are set to defaults when the trace is recalled.

| | |
|-------------------------|---|
| Example | MMEM:STOR:TRAC:DATA TRACE1,"Trc1.txt",TXT,ON The On/Off setting is the last variable passed in the MMEMory:STORe:TRACe:DATA command. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Data, Trace |
| Mode | VSA |
| Preset | On |

Measurement Results

Different types of results are available for each particular measurement. The results that are available are documented under the individual measurements. These measurement results are the same as the results that are returned when using the MEASure:<measurement> command (usually for sub-opcode 1).

Measurement results may not be available for all measurements.

| | |
|-------------------------|---|
| Example | MMEM:STOR:RES "MyResultsFile.xml" This stores the measurement results data in the file MyResultsFile.xml in the default directory. |
| Remote Command Notes | See |
| Dependencies/Couplings | The key will not show if no measurements in the Mode support it. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Data |

Save

| | |
|------|--|
| Mode | SA ADEMOD BASIC(IQ Analyzer) CDMA2K GSMEDGE PNOISE WCDMA WIMAXOFDMA TDS CDMA |
|------|--|

Capture Buffer

Capture Buffer functionality is not available for all measurements. The captured data is raw data (unprocessed).

| | |
|-------------------------|--|
| Example | MMEM:STOR:CAPT "MyCaptureData.bin" This stores the capture data in the file MyCaptureData.bin in the default directory. |
| Remote Command Notes | See |
| Dependencies/Couplings | The key will not show if no measurements in the Mode support it. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Data |
| Mode | WCDMA |

Zone map

A map file contains zone definitions that will help simplify making measurements of frequently used signals. The OFDMA frame structure can contain multiple-zone definitions for the uplink and downlink subframes and multiple data burst allocations. You can store map files in which you have saved complicated OFDMA frame analysis zone definitions. This can save you time and ensure the accuracy of repeated measurements. map files are also useful for recreating measurement settings so they can be used by other users.

| | |
|-------------------------|---|
| Example | MMEM:STOR:ZMAP "MyZonemapFile.omf" This stores the zone map data in the file MyZonemapFile.omf in the default directory. |
| Remote Command Notes | See |
| Dependencies/Couplings | The key will not show if no measurements in the Mode support it. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Data |
| Mode | OFDMA WiMAX |

Recorded Data

Saving recorded data is not available for all measurements. Recorded data, and the optional header info, may be recalled later (or transferred to another instrument) for analysis.

This function is available in 89601X VSA Option 200, but not in Option 205.

| | |
|-------------------------|---|
| Example | MMEM:STOR:REC "MyRecording.sdf",SDF,ON,ON,OFF |
| Restriction and Notes | Grayed out unless there is recorded data in the buffer. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Data (Export) |
| Mode | VSA |

Save As . . .

This menu lets you select the location where you can save Data Type files. It is a standard Windows® dialog with Save As menu keys. The "File Name" field in the Save As dialog is initially loaded with an automatically generated filename specific to the appropriate Save Type. The automatically generated filename is guaranteed not to conflict with any filename currently in the directory. You may replace or modify this filename using the File Name key. See the Quick Save key documentation for more on the automatic file naming algorithm.

When you first enter this dialog, the path in the Save In: field depends on the data type. The only files that are visible are the files with the corresponding data type suffix, and the **Save As** type lists the same suffix.

For example, if the Data Type is **Amplitude Corrections**, the file suffix is .csv and the *.csv files are the only visible files in the **Save As** dialog and .csv is the Save As Type.

The default path for saving files is:

For all of the Trace Data Files:

My Documents\<<mode name>\data\traces

For all of the Limit Data Files:

My Documents\<<mode name>\data\limits

For all of the Measurement Results Data Files:

My Documents\<<mode name>\data\<<measurement name>\results

For all of the Capture Buffer Data Files:

My Documents\<<mode name>\data\captureBuffer

| | |
|-------------------------|---|
| Restriction and Notes | Brings up Save As dialog for saving a <mode specific> Save Type |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Data |
| Mode | All |

Save Saves the specified Data Type. This section describes any specific save behavior relevant to Data

Save

that is common to all modes.

When a Save of a specific Data File is requested, the specified data is saved to the specified or selected file. The save is performed immediately and does not wait until the measurement is complete.

If the file already exists, a dialog will popup that allows you to replace the existing file by selecting an **OK** or you can **Cancel** the request.

While the save is being performed, the floppy icon will show up in the settings bar near the Continuous/Single icon. After a register save completes, the corresponding register key annotation is updated with the date the time and an advisory message that the file was saved appears in the message bar.

| | |
|-------------------------|---|
| Key Path | Save, Data, Save As... |
| Restriction and Notes | If the file already exists, the file will be overwritten. Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during a instrument software upgrade. Both single and double quotes are supported for any filename parameter over remote. |
| Instrument S/W Revision | A.01.60 or later |
| Mode | SA ADEMOD BASIC(IQ Analyzer) CDMA2K GSMEDGE PNOISE WCDMA WIMAXOFDMA TDSCDMA |
| Remote Command | :MMEMory:STORe:RESults <filename> |
| Example | :MMEM:STOR:RES "myResults.csv" saves the results from the current measurement to the file myResults.csv in the default path. :MMEM:STOR:RES "MyDocuments\Basic\data\ComplexSpectrum\results\myResults.xml" saves the results from the current measurement (Complex Spectrum) to the file myResults.xml in the default path for IQ Analyzer (Basic) Mode. This command form is not supported for the Swept SA measurement; see below. |
| Instrument S/W Revision | A.01.60 or later |
| Remote Command | :MMEMory:STORe:RESults:MTABle PTABle <filename> |
| Example | :MMEM:STOR:RES:MTAB "myResults.csv" saves the results from the current marker table to the file myResults.csv in the default path. :MMEM:STOR:RES:PTAB "myResults.csv" saves the results from the current peak table to the file myResults.csv in the default path. This command form is only supported for the Swept SA measurement; see above. |

| | |
|-------------------------|--|
| Dependencies/Couplings | <p>If a save of Marker Table results is requested and the Marker Table is not on, no file is saved an error is generated:</p> <p>Mass Storage error; Mkr Table must be on to save Mkr Table as Meas Results</p> <p>If a save of Peak Table results is requested and the Peak Table is not on, no file is saved an error is generated:</p> <p>Mass Storage error; Pk Table must be on to save Pk Table as Meas Results</p> |
| Instrument S/W Revision | A.01.60 or later |
| Mode | SA |
| Preset | Peak Table |
| State Saved | Saved in State |
| Range | Peak Table Marker Table |
| Mode | SA Analog Demod |
| Remote Command | <pre>:MMEMory:STORe:TRACe:DATA TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 ALL, <filename ></pre> |
| Example | :MMEM:STOR:TRAC:DATA TRACE2,"myTrace2.csv" exports the 2nd trace to the file myTrace2.csv in the default path. |
| Remote Command Notes | <p>Not all measurements have the ALL selection. Traces cannot be recalled from files that were saved using the ALL selection.</p> <p>If the save is initiated via SCPI, and the file already exists, the file will be overwritten.</p> <p>Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade. Both single and double quotes are supported for any filename parameter over remote.</p> |
| Instrument S/W Revision | A.01.60 or later |
| Trace Number | Analog Demod Mode: Trace Names |
| TRACE1 | RF Spectrum |
| TRACE2 | Demod |
| TRACE3 | Demod Ave |
| TRACE4 | Demod Max |
| TRACE5 | Demod Min |
| TRACE6 | AF Spectrum |

Save

| | |
|-------------------------|---|
| Mode | VSA |
| Remote Command | <code>:MMEMory:STORe:TRACe:DATA TRACE1 TRACE2 TRACE3 TRACE4 TRACE5 TRACE6 , "<filename>" [, CSV TXT SDF [, OFF ON 0 1]]</code> |
| Example | <code>MMEM:STOR:TRAC:DATA TRACE1,"Trc1.txt",TXT,ON</code> |
| Restriction and Notes | <p>If you are not licensed to save a particular file type, then an error will be returned. If an invalid file format is specified or the file cannot be saved successfully, then an error is returned.</p> <p>8901X Option 205 allows export in TXT, CSV, and SDF formats.</p> <p>8901X Option 200 allows the Option 205 formats and additionally: Matlab 4, 5 and HDF5, and an N5110A compatible binary format.</p> |
| Remote Command Notes | <p>File format is selected by the second parameter, but no default extension is appended to the filename. If the second parameter is not supplied, then the filename extension is used to determine the format. *.mat selects Matlab 5 format. *.sdf, or an unrecognized extension chooses the SDF fast format.</p> <p>The optional Boolean determines if the file is saved with headers. By default the headers are saved.</p> |
| Instrument S/W Revision | A.01.60 or later |
| Remote Command | <code>:MMEMory:STORe:CAPTured <filename></code> |
| Example | <code>:MMEM:STOR:CAPT</code> "MyDocuments\WCDMA\data\captureBuffer\myCaptureBuffer.bin" saves the capture buffer data from the current measurement to the file myCaptureBuffer.bin in the default path. |
| Restriction and Notes | <p>If the file already exists, the file will be overwritten.</p> <p>Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during a instrument software upgrade. Both single and double quotes are supported for any filename parameter over remote.</p> |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Data, Save As |
| Mode | WCDMA |
| Remote Command | <code>:MMEMory:STORe:ZMAP <filename></code> |
| Example | <code>:MMEM:STOR:ZMAP "myZoneMap.omf"</code> saves current Zone map as 89601 compatible file type. |

| | |
|-------------------------|--|
| Restriction and Notes | <p>If a file with the same name already exists, the file will be overwritten. Using the C: drive is strongly discouraged, since it runs the risk of overwriting the file during a instrument software upgrade. Both single and double quotes are supported for any filename parameter over remote.</p> <p>Once a save is complete, the Export Data menu will appear, and the Save As dialog will disappear.</p> <p>The message "File <file name> saved" will appear after the save is complete.</p> |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save, Data, Zone map |
| Mode | WIMAXOFDMA |
| Mode | VSA |
| Remote Command | <pre>:MMEMory:STORe:RECOrding <filename>[,SDF SDFX CSV TXT MAT4 MAT HDF5 BIN[,OFF ON 0 1[,OFF ON 0 1[,OFF ON 0 1]]]</pre> |
| Example | MMEM:STOR:REC "MyRecording.sdf",SDF,ON,ON,OFF |
| Remote Command Notes | <p>Recorded data must be available in the buffer.</p> <p>File format is selected by the second parameter, but no default extension is appended to the filename. If the second parameter is not supplied, then the filename extension is used to determine the format. *.mat selects Matlab 5 format. *.sdf, or an unrecognized extension chooses the SDF fast format.</p> <p>The three optional Booleans determine if:</p> <ol style="list-style-type: none"> 1. file is saved with headers 2. data is resampled to the current span before saving 3. player position settings limit the data saved |
| Instrument S/W Revision | A.01.60 or later |

Screen Image


Accesses a menu of functions that enable you to specify a format and location for the saved screen image.

Pressing Screen Image brings up a menu which allows you to specify the color scheme of the Screen Image (Themes) or navigate to the Save As dialog to perform the actual save.

Screen Image files contain an exact representation of the analyzer display. They cannot be loaded back onto the analyzer, but they can be loaded into your PC for use in many popular applications.

The image to be saved is actually captured when the **Save** front-panel key is pressed, and kept in temporary storage to be used if you ask for a Screen Image save. When the Screen Image key is pressed, a "thumbnail" of the captured image is displayed, as shown below:

Save

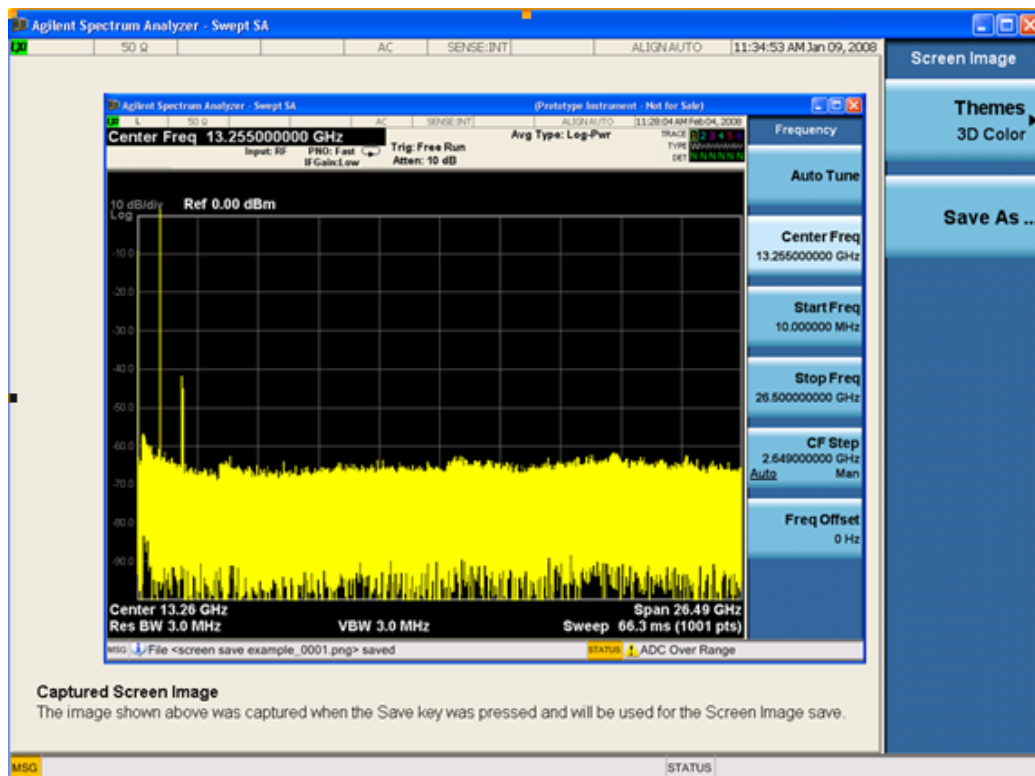

When you continue on into the **Save As** menu and complete the Screen Image save, the image depicted in the thumbnail is the one that gets saved, showing the menus that were on the screen before going into the **Save** menus.

After you have completed the save, the **Quick Save** front-panel key lets you quickly repeat the last save performed, using an auto-named file, with the current screen data.

NOTE For versions previous to A.01.55, if you initiate a screen image save by navigating through the Save menus, the image that is saved will contain the Save menu keys, not the menus and the active function that were on the screen when you first pressed the Save front-panel key.

| | |
|-------------------------|---|
| Example | MMEM:STOR:SCR "MyScreenFile.png" |
| | This stores the current screen image in the file MyScreenFile.png in the default directory. |
| Remote Command Notes | See |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Save |
| Mode | All |

Themes

Accesses a menu of function that enable you to choose the theme to be used when saving the screen image.

The **Themes** option is the same as the **Themes** option under the **Display** and **Page Setup** dialogs. It allows you to pick between themes to be used when saving the screen image.

| | |
|-------------------------|--|
| Key Path | Save, Screen Image |
| Remote Command | :MMEMory:STORe:SCReen:THEME TDCoLor TDMonochrome FCoLoR FMONochrome :MMEMory:STORe:SCReen:THEME? |
| Preset | 3D Color; Is not part of Preset, but is reset by Restore Misc Defaults or Restore System Defaults All and survives subsequent running of the modes |
| Example | :MMEM:STOR:SCR:THEM TDM |
| Instrument S/W Revision | A.01.60 or later |

3D Color Selects a standard color theme with each object filled, shaded and colored as designed.

| | |
|-------------------------|----------------------------|
| Key Path | Save, Screen Image, Themes |
| Example | MMEM:STOR:SCR:THEM TDC |
| Instrument S/W Revision | A.01.60 or later |

3D Monochrome Selects a format that is like 3D color but shades of gray are used instead of colors.

| | |
|-------------------------|----------------------------|
| Key Path | Save, Screen Image, Themes |
| Example | MMEM:STOR:SCR:THEM TDM |
| Instrument S/W Revision | A.01.60 or later |

Flat Color Selects a format that is best when the screen is to be printed on an ink printer.

| | |
|-------------------------|----------------------------|
| Key Path | Save, Screen Image, Themes |
| Example | MMEM:STOR:SCR:THEM FCOL |
| Instrument S/W Revision | A.01.60 or later |

Flat Monochrome Selects a format that is like Flat Color. But only black is used (no colors, not even gray), and no fill.

| | |
|----------|----------------------------|
| Key Path | Save, Screen Image, Themes |
| Example | MMEM:STOR:SCR:THEM FMON |

Save

Instrument S/W Revision A.01.60 or later

Save As...

Accesses a menu that enables you to select the location where you can save the Screen Image. This menu is a standard Windows® dialog with Save As menu keys. The **Save As** dialog is loaded with the file information related to the Screen Image Type. The filename is filled in using the auto file naming algorithm for the Screen Image Type and is highlighted. The only files that are visible are the *.png files and the Save As Type is *.png, since .png is the file suffix for the Screen Image Type.

The default path for Screen Images is

My Documents\<<mode name>\screen.

where <mode name> is the parameter used to select the mode with the INST:SEL command (for example, SA for the Spectrum Analyzer).

This path is the **Save In:** path in the **Save As** dialog for all Screen Files when you first enters this dialog.

| | |
|-------------------------|--|
| Key Path | Save, Screen Image |
| Restriction and Notes | Brings up Save As dialog for saving a Screen Image Save Type |
| Instrument S/W Revision | A.01.60 or later |

Save Saves the screen image to the specified file using the selected theme. The image that is saved is the measurement display prior to when the **Save As** dialog appeared. The save is performed immediately and does not wait until the measurement is complete.

Remote Command: :MMEMory:STORe:SCReen <filename>

Example: :MMEM:STOR:SCR "myScreen.png"

Restriction and Notes: If the file already exists, the file will be overwritten. Using the C: drive is strongly discouraged, since it runs the risk of being overwritten during a instrument software upgrade. Both single and double quotes are supported for any filename parameter over remote.

Auto return to the Screen Image menu and the Save As dialog goes away.

Advisory Event "File <file name> saved" after save is complete.

Key Path: Save, Screen Image, Save As...

Instrument S/W Revision: A.01.60 or later

Save As . . .

The **Save As** is a standard Windows dialog and with the **Save As** key menu. The "File Name" field in the Save As dialog is initially loaded with an automatically generated filename specific to the appropriate Save Type. The automatically generated filename is guaranteed not to conflict with any filename currently in the directory. You may replace or modify this filename using the File Name key. See the

Quick Save key documentation for more on the automatic file naming algorithm.

The **Save As** dialog will have the last path loaded in **Save In:** for this particular file type. User specified paths are remembered and persist through subsequent runs of the mode. These remembered paths are mode specific and are reset back to the default using **Restore Mode Defaults**.

Instrument S/W Revision A.01.60 or later

Save

Performs the actual save to the specified file of the selected type. The act of saving does not affect the currently running measurement and does not require you to be in single measurement mode to request a save. It performs the save as soon as the currently running measurement is in the idle state; when the measurement completes. This ensures the State or Data that is saved includes complete data for the current settings. The save only waits for the measurement to complete when the state or data that depends on the measurement setup is being saved. The save happens immediately when exporting corrections or when saving a screen image.

If the file already exists, a dialog will popup with corresponding menu keys that allows you to replace the existing file with an **OK** or to **Cancel** the request.

While the save is being performed, the floppy icon shows up in the settings bar near the Continuous/Single icon. After the save completes, the corresponding register menu key annotation is updated with the date the time and the message "File <file name> saved" appears in the message bar.

Restriction and Notes: If the file already exists, the File Exist dialog pops up and allows you to replace it or not by selecting the Yes or No menu keys that appear with the dialog. Then the key causes an auto return and Save As dialog goes away.
Advisory Event "File <file name> saved" after save is complete.

Instrument S/W Revision: A.01.60 or later

File/Folder List

Enables you to navigate to the center of the dialog that contains the list of files and folders. Once here you can get information about the file.

Key Path Save, <various>, Save As...

Restriction and Notes Pressing this key navigates you to the files and folders list in the center of the dialog.

Instrument S/W Revision A.01.60 or later

File Name

Brings up the Alpha Editor as shown in the screen image. Use the knob to choose the letter to add and the Enter front-panel key to add the letter to the file name. In addition to the list of alpha characters, this editor includes a **Space** menu key and a **Done** menu key. The **Done** menu key completes the filename, removes the Alpha Editor and returns back to the **File Open** dialog and menu, but does not cause the

Save

save to occur. You can also use **Enter** to complete the file name entry and this will cause the save to occur.

| | |
|-------------------------|--|
| Key Path | Save, <various>, Save As... |
| Restriction and Notes | Brings up the Alpha Editor. Editor created file name is loaded in the File name field of the Save As dialog. |
| Instrument S/W Revision | A.01.60 or later |

Save As Type

This key corresponds to the **Save As Type** selection in the dialog. It follows the standard Windows® supported **Save As Type** behavior. It shows the current file suffix that corresponds to the type of file you have selected to save. If you navigated here from saving State, "State File (*.state)" is in the dialog selection and is the only type available under the pull down menu. If you navigated here from saving Trace, "Trace+State File (*.trace)" is in the dialog selection and is the only type available under the pull down menu. If you navigated here from exporting a data file, "Data File (*.csv)" is in the dialog and is available in the pull down menu. Modes can have other data file types and they would also be listed in the pull down menu.

| | |
|-------------------------|---|
| Key Path | Save, <various>, Save As... |
| Restriction and Notes | Pressing this key causes the pull down menu to list all possible file types available in this context. All types available are loaded in a 1-of-N menu key for easy navigation. |
| Instrument S/W Revision | A.01.60 or later |

Up One Level

This key corresponds to the icon of a folder with the up arrow that is in the tool bar of the dialog. It follows the standard Windows® supported **Up One Level** behavior. When pressed, it causes the file and folder list to navigate up one level in the directory structure.

| | |
|-------------------------|---|
| Key Path | Save, <various>, Save As... |
| Restriction and Notes | When pressed, the file and folder list is directed up one level of folders and the new list of files and folders is displayed |
| Instrument S/W Revision | A.01.60 or later |

Create New Folder

This key corresponds to the icon of a folder with the "*" that is in the tool bar of the dialog. It follows the standard Windows® supported **Create New Folder** behavior. When pressed, a new folder is created in the current directory with the name **New Folder** and allows you to enter a new folder name using the Alpha Editor.

| | |
|----------|-----------------------------|
| Key Path | Save, <various>, Save As... |
|----------|-----------------------------|

| | |
|-------------------------|---|
| Restriction and Notes | Creates a new folder in the current folder and lets you fill in the folder name using the Alpha Editor. |
| Instrument S/W Revision | A.01.60 or later |

Save

Cancel

This key corresponds to the **Cancel** selection in the dialog. It follows the standard Windows supported **Cancel** behavior. It causes the current **Save As** request to be cancelled.

| | |
|-------------------------|---|
| Key Path | Save, <various>, Save As... |
| Restriction and Notes | Pressing this key causes the Save As dialog to go away and auto return. |
| Instrument S/W Revision | A.01.60 or later |

Single (Single Measurement/Sweep)

Single sets the analyzer for Single measurement operation. The single/continuous state is Meas Global, so the setting will affect all the measurements. If you are Paused, pressing **Single** does a Resume.

| | |
|--------------------------|----------------------------------|
| Example: | :INIT:CONT OFF |
| Remote Command Notes: | See Cont key description. |
| Key Path: | Front-panel key |
| Instrument S/W Revision: | A.01.60 or later |

Single (Single Measurement/Sweep)

Source

This mode does not have any Source control functionality.

| | |
|-------------------------|------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Source

SPAN X Scale

Span features are unique to each Measurement. See the specific Measurement for more information.

The front-panel key accesses keys to control span (or X-axis) settings.

| | |
|-------------------------|------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

SPAN X Scale

Sweep / Control

This section describes the keys in the Sweep, Control and Capture menu that are common to multiple Modes and Measurements. See the Measurement descriptions for information on features that are unique.

NOTE The Meas Uncal (measurement uncalibrated) warning is given in the Status Bar in the lower right corner of the screen when the manual sweep time entered is too fast to give accurate measurements with the current setting of Res BW. When this happens, increase the Sweep Time or the Res BW.

| | |
|-------------------------|------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Abort (Remote Command Only)

This command is used to stop the current measurement. It aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the analyzer is in the process of aligning when ABORt is sent, the alignment finishes before the abort function is performed. So ABORt does not abort an alignment.

If the analyzer is set for Continuous measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the analyzer is set for Single measurement, it remains in the "idle" state until an :INIT:IMM command is received.

| | |
|-------------------------|---|
| Remote Command: | :ABORt |
| Example: | :ABOR |
| Dependencies/Couplings: | For continuous measurement, ABORt is equivalent to the Restart key. Not all measurements support the abort command. |
| Remote Command Notes: | If :INITiate:CONTinuous is ON, then a new continuous measurement will start immediately; with sweep (data acquisition) occurring once the trigger condition has been met. If :INITiate:CONTinuous is OFF, then :INITiate:IMMEDIATE is used to start a single measurement; with sweep (data acquisition) occurring once the trigger condition has been met. |

Sweep / Control

SCPI Status Bits/OPC Dependencies: The STATus:OPERation register bits 0 through 8 are cleared.
The STATus:QUEStionable register bit 9 (INTEgrity sum) is cleared.
Since all the bits that feed into OPC are cleared by the ABORt, the ABORt will cause the *OPC query to return true.

Instrument S/W Revision: A.01.60 or later

Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When Paused, the label on the key changes to Resume. Pressing Resume un-pauses the measurement. When you are Paused, pressing **Restart**, **Single** or **Cont** does a Resume.

Remote Command: :INITiate:PAUSE

Dependencies/Couplings: Grayed out in Measurements that don't support Pausing.
Blanked in Modes that don't support Pausing.

Key Path: Sweep/Control

Instrument S/W Revision: A.01.60 or later

Remote Command: :INITiate:RESume

Dependencies/Couplings: Grayed out in Measurements that don't support Pausing.
Blanked in Modes that don't support Pausing.

Key Path: Sweep/Control

Instrument S/W Revision: A.01.60 or later

Record Data Now

This key makes a data recording using input at the current frequency settings. This key is a duplicate of the Record Data Now key in the Input/Output, Data Source menu. It is included in this menu as a convenience to be near the playback and pause functions that it is often used with. [“Record Data Now” on page 1198](#)

Some settings of the recorded data can be queried remotely, like center frequency, span, rate, length, and data type. See [“Querying Recording Information” on page 1201](#).

Key Path: Sweep/Control

Instrument S/W Revision: A.01.60 or later

Playback (Recorded Data)

Accesses controls for the playback of a recording. A recording is a long buffer of contiguous time samples together with meta-data about the sample rate and other related state properties at the time it was made. It may be saved and recalled from a file. A recording is typically much longer than a single measurement time record.

When the instrument data source is recorded data (see Input/Output, Data Source), a measurement takes a complete time record from the recording buffer starting at the current playback position. Then the playback position pointer is moved ahead from 1 to 100% of the current time record length, depending on whether overlap processing is allowed. Data is taken sequentially from the recording until the play position is less than a time record length away from the time stored in the Stop Time property. The measurement can be made to pause at this point, or to loop back to the beginning and continue if more time records are needed. (It resets the play position to the Start Time for this loop back functionality.) Initially the Start Time and Stop Time properties are set to the beginning and end of the recording, but they can be restricted to a portion of it.

Some settings of the recorded data can be queried remotely, like center frequency, span, rate, length, and data type. See [“Querying Recording Information” on page 1201](#).

| | |
|-------------------------|------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Playback Position

This lets you to view or change the current playback position. It is not an active function, so the arrow keys and knob have no effect on it. It must be entered numerically.

| | |
|--------------------------|---|
| Remote Command: | [:SENSe]RECOrding:PLAYback:POSition <time> [:SENSe]RECOrding:PLAYback:POSition? |
| Example: | REC:PLAY:POS 1 US |
| Dependencies/Couplings: | Measurement restart sets this back to the Start Time (minus any points needed for settling the measurement) |
| Preset: | 0 |
| Min: | 0 |
| Max: | End of recording |
| Key Path: | Sweep/Control, Playback |
| Instrument S/W Revision: | A.01.60 or later |

Start Time

This is where the playback position is set to when a measurement is restarted, or loops back from the end

Sweep / Control

of the recording.

Remote Command: [:SENSe]RECOrding:PLAYback:STARt <time>
[:SENSe]RECOrding:PLAYback:STARt?
[:SENSe]RECOrding:PLAYback:STARt:AUTO OFF|ON|0|1
[:SENSe]RECOrding:PLAYback:STARt:AUTO?

Example: REC:PLAY:STAR 2 US
REC:PLAY:STAR:AUTO ON

Dependencies/Couplings: If Start Time is set after the current play position, then the play position is updated to the new start time at the next measurement. If this is set greater than the stop time and a measurement is started, an error is generated.
Setting the start time via front panel or SCPI forces this to Man. Recalling a recording file or making a new recording sets this to Auto

Remote Command Notes: Selecting Auto sets the Start Time to 0
Preset: On, 0 s
State Saved: No
Min: 0
Max: End of recording
Key Path: Sweep/Control, Playback
Instrument S/W Revision: A.01.60 or later

Stop Time

No measurement data will be taken after this position in the recording buffer. If there is not a complete time record length between the playback position and the stop time, the measurement either pauses or loops back to the start time setting. The Loop at End setting determines which of these it does.

Remote Command: [:SENSe]RECOrding:PLAYback:STOP <time>
[:SENSe]RECOrding:PLAYback:STOP?
[:SENSe]RECOrding:PLAYback:STOP:AUTO OFF|ON|0|1
[:SENSe]RECOrding:PLAYback:STOP:AUTO?

Example: REC:PLAY:STOP 2 US
REC:PLAY:STOP:AUTO ON

| | |
|--------------------------|---|
| Dependencies/Couplings: | If Stop Time is set prior to the current play position plus time record length, then the play position loops back to the Start time at the next measurement. If this is set less than the start time and a measurement is started, an error is generated Setting the stop time via front panel or SCPI forces this to Manual. Recalling a recording file or making a new recording sets this to auto |
| Remote Command Notes: | Selecting Auto sets the Stop Time to the end of the data. |
| Preset: | End of recording, Auto On |
| State Saved: | No |
| Min: | 0 |
| Max: | End of recording |
| Key Path: | Sweep/Control, Playback |
| Instrument S/W Revision: | A.01.60 or later |

Loop at End

This setting determines whether the measurement stops, or resets the play position back to the start time, when there is not enough data left between the playback position and the stop time.

| | |
|--------------------------|--|
| Remote Command: | [:SENSE]RECORDing:PLAYback:LOOP OFF ON 0 1 [:SENSE]RECORDing:PLAYback:LOOP? |
| Example: | REC:PLAY:LOOP ON |
| Preset: | ON |
| State Saved: | No |
| Range: | Off On |
| Key Path: | Sweep/Control, Playback |
| Instrument S/W Revision: | A.01.60 or later |

Querying Recording Information

Various information about the recording is saved with the recording and can be queried remotely:

- Measurement center frequency when recording was made
- Span setting when recording was made
- Span of the recording (may be larger than the measurement span setting)
- Sample rate of recording
- Time length of recording

Sweep / Control

- Whether recording is complex or real

Remote Command: [:SENSE] :RECORDing:PLAYback:FREQuency:CENTer?

Remote Command Notes: Query Only

Returns the center frequency at which the recording was made

Instrument S/W Revision: A.01.60 or later

Remote Command: [:SENSE] :RECORDing:PLAYback:FREQuency:SPAN?

Remote Command Notes: Query Only

Returns the span setting when the recording was initiated. The actual recording span may be greater.

Instrument S/W Revision: A.01.60 or later

Remote Command: [:SENSE] :RECORDing:PLAYback:FREQuency:SPAN:MAX?

Remote Command Notes: Query Only

Returns the actual span at which the recording was made. The actual recording span may be greater than the span that was displayed when the recording was initiated.

Instrument S/W Revision: A.01.60 or later

Remote Command: [:SENSE] :RECORDing:PLAYback:LENGth?

Remote Command Notes: Query Only

Returns the length (in seconds) of the recording.

Instrument S/W Revision: A.01.60 or later

Remote Command: [:SENSE] :RECORDing:PLAYback:SRATe?

Remote Command Notes: Query Only

Returns the sample rate (in Hz) of the data in the recording.

Instrument S/W Revision: A.01.60 or later

| | |
|--------------------------|--|
| Remote Command: | [:SENSe] :RECOrding:PLAYback:ZOOM? |
| Remote Command Notes: | Query Only Always returns 1 currently (0 means data is real, 1 means it is complex) |
| Instrument S/W Revision: | A.01.60 or later |

Gate

The Gate key in the Sweep/Control menu accesses a menu that enables you to control the gating function.

The Gate functionality is used to view signals best viewed by qualifying them with other events. Gate setup parameters are meas global, so the settings will be the same in all the measurements.

Sweep Time autocoupling rules and annotation are changed by Gate being on.


| | |
|-------------------------|------------------|
| Key Path | Sweep/Control |
| Instrument S/W Revision | A.01.60 or later |

Gate On/Off

Turns the gate function on and off.

When the Gate Function is on, the selected Gate Method is used along with the gate settings and the signal at the gate source to control the sweep and video system with the gate signal. Not all measurements allow every type of Gate Methods.

When Gate is on, the annunciation in the Meas Bar reflects that it is on and what method is used, as seen in the "Gate: LO" annunciator below.

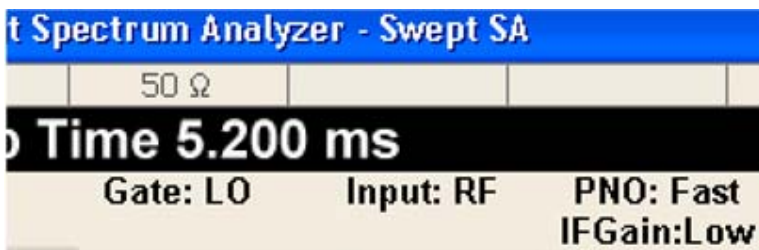

| | |
|------------------------|---|
| Remote Command: | [:SENSe] :SWEep:EGATe [:STATe] OFF ON 0 1 [:SENSe] :SWEep:EGATe [:STATe] ? |
| Example: | SWE:EGAT ON SWE:EGAT ? |

Sweep / Control

| | |
|--------------------------|--|
| Dependencies/Couplings: | <p>The function is unavailable (grayed out) and Off when:</p> <ul style="list-style-type: none">Gate Method is LO or Video and FFT Sweep Type is manually selected.Gate Method is FFT and Swept Sweep Type is manually selected.Marker Count is ON. <p>When Meas Method is RBW or FAST, this function is unavailable and the key is grayed out.</p> <p>Whenever Gate is on, Meas Method, RBW or FAST is unavailable and keys for those are grayed out.</p> <p>When Gate is on, Offset Res BW and Offset Video BW is ignored (if user sets these values) and measurement works like as all Offset Res BW and all Offset Video BW are coupled with Res BW and Video BW under BW menu. When Gate is on, Offset BW key in Offset/Limit menu is grayed out.</p> |
| Preset: | Off |
| Range: | On Off |
| State Saved: | Saved in State |
| Key Path: | Sweep/Control, Gate |
| Instrument S/W Revision: | A.01.60 or later |

Gate View On/Off

Turning on Gate View in the Swept SA measurement provides a single-window gate view display.

Turning on Gate View in other measurements shows the split-screen Gate View. In these measurements, when the Gate View is on, the regular view of the current measurement traces and results are reduced vertically to about 70% of the regular height. The Zero Span window showing the positions of the Gate is shown between the Measurement Bar and the reduced measurement window. By reducing the height of the measurement window, some of the annotation on the Data Display may not fit and is not shown.

| | |
|-----------------------|--|
| Key Path | Sweep/Control, Gate |
| Remote Command | [:SENSe] :SWEp:EGATe:VIEW ON OFF 1 0 [:SENSe] :SWEp:EGATe:VIEW? |
| Example | SWE:EGAT:VIEW ON turns on the gate view. |

Dependencies/Couplings

These couplings apply to the Swept SA measurement:

- When Gate View is turned on, the instrument is set to Zero Span.
- Gate View automatically turns off whenever a Span other than Zero is selected.
- Gate View automatically turns off if you presses Last Span while in Gate View, and the instrument returns to the Span it was in before entering Gate View (even if that is Zero Span).

When Gate View is turned on, the sweep time used is the gate view sweep time. This is set according to the rules in [“Gate View Sweep Time” on page 1208](#).

- When Gate View is turned off, Sweep Time is set to the normal Swept SA measurement sweep time.
- If Gate View is on and Gate is off, then turning on Gate turns off Gate View.

In the Swept SA measurement:

In Gate View, the regular Sweep Time key is grayed out, to avoid confusing you who wants to set Gate View Sweep Time.

In the other measurements:


When you turn Gate View on, the lower window takes on the current state of the instrument. Upon leaving Gate View, the instrument takes on the state of the lower window.

- When you turn Gate View on, the upper window Sweep Time is set to the gate view sweep time.


| | |
|-------------------------|------------------|
| Preset | OFF |
| State Saved | Saved in state |
| Range | On Off |
| Instrument S/W Revision | A.01.60 or later |

A sample of the Gate View screen in the Swept SA measurement is shown below:

Sweep / Control

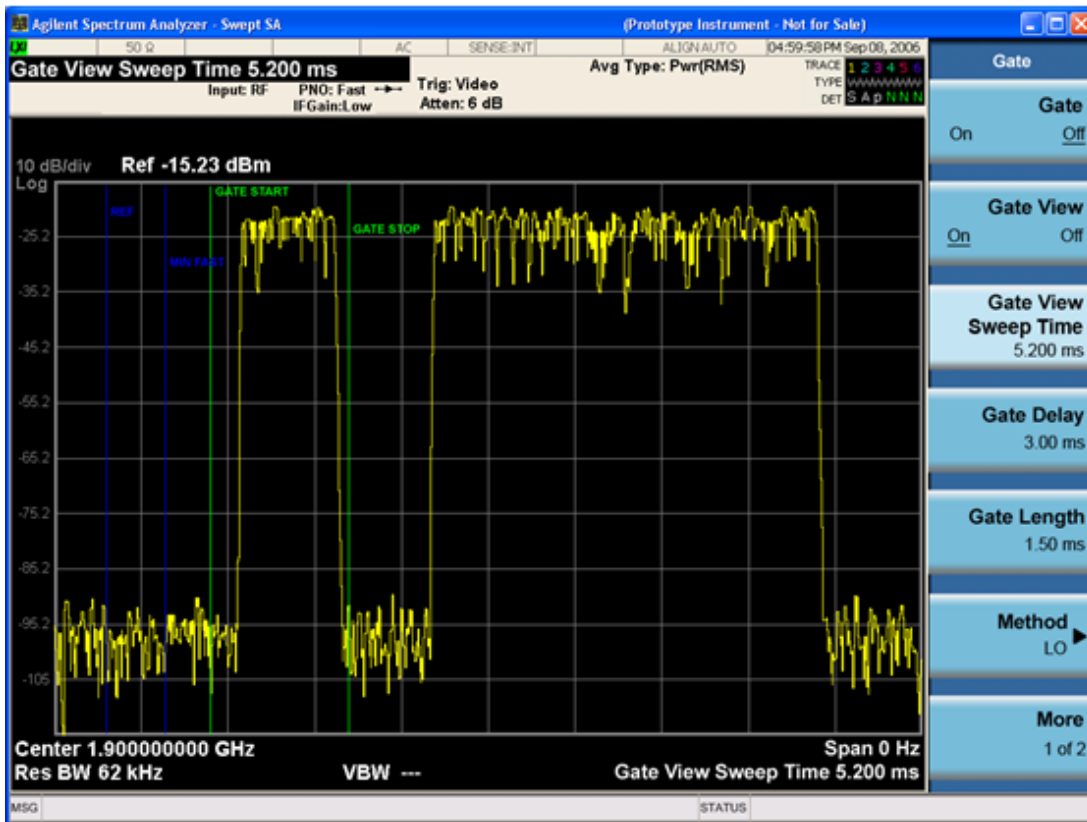

A sample of the Gate View screen in other measurements is shown below. This example is for the ACP measurement:

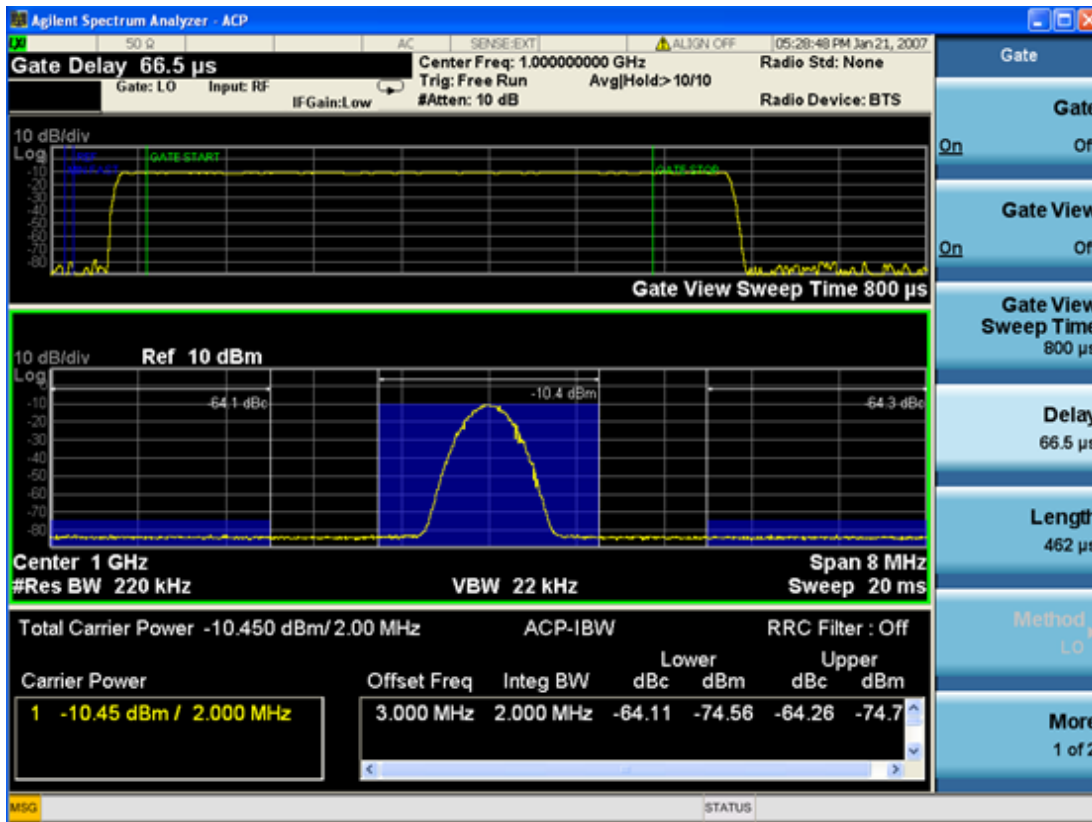

Turning Gate View off returns the analyzer to the Normal measurement view.

In the Swept SA, the normal measurement view is the single-window Swept SA view. When returning to this view, the Swept SA measurement returns to the Span it was in before entering **Gate View** (even if that is Zero Span).

The **Gate View** window is triggered from the Gate Source, with zero trigger delay. Also, when updating the **Gate View** window, the Gate itself must not operate. So it is internally shut off while the gate view window is being updated. For the Swept SA measurement, this means that the Gate is internally shut off whenever the gate view window is displayed. The Meas Bar and keys continue to show the Trigger source for the main sweep window and give no indication that the Gate is shut off or that the Gate View window is triggered from the Gate Source.

When in **Gate View**, vertical lines are displayed in the Gate View window as follows:

- Green lines are displayed at the gate edges as follows: in Edge Gate, a line is shown for Delay and one for the end of the Gate period (defined by Length, even in FFT. In Level Gate a line is shown only for Delay. You can adjust the position of the green lines by adjusting the gate length and the gate delay. These lines update in the Gate View window as the active function changes, even if the window is not being updated. In Gated LO and Gated Video, these lines are positioned relative to the delay reference line (not relative to 0 time). In Gated FFT, their location is relative to the left edge of the screen.
- A blue line is displayed showing the delay reference, that is, the reference point for the Gate Delay within the Zero Span window. The blue line represents where (in time) the effective location of the gate start would be if the gate were programmed to zero delay.

Sweep / Control

- The second blue line is labeled "MIN FAST" as shown in the figure above because it represents the minimum Gate Delay for fast Gated LO operation. This line is only displayed in Gated LO. You cannot scroll (knob) or decrement (down key) the Gate Delay to less than that represented by the position of this line, it can only be set below this position manually, although once there it can be moved freely with the knob while below the line.
- A yellow line in the Gated Video case only, is displayed at Blength, where Blength is the bucket length for the swept trace, which is given by the sweep time for that trace divided by number of Points – 1. So it is referenced to 0 time, not to the delay reference. This line is labeled NEXT PT (it is not shown in the figure above because the figure above is for Gated LO). The yellow line represents the edge of a display point (bucket). Normally in Gated Video, the bucket length must be selected so that it exceeds the off time of the burst. There is another way to use the analyzer in Gated Video measurements, and that is to set the bucket width much shorter than the off time of the burst. Then use the Max Hold trace function to fill in "missing" buckets more slowly. This allows you to see some of the patterns of the Gated Video results earlier, though seeing a completely filled-in spectrum later.

Gate View Sweep Time

Controls the sweep time in the Gate View window. In order to provide an optimal view of the gate signal, the analyzer initializes Gate View Sweep Time based on the current settings of Gate Delay and Gate Length.

Remote Command: [:SENSe]:SWEep:EGATe:TIME <time>
 [:SENSe]:SWEep:EGATe:TIME?

Example: SWE:EGAT:TIME 500 ms

Dependencies/Couplings:

Gate View Sweep Time is initialized:

- on Preset (after initializing delay and length).

- every time the Gate Method is set/changed.

Additionally, in the Swept SA measurement, whenever you do a Preset, or leave Gate View, the analyzer remembers the Gate Delay and Gate Length settings. Then, when returning to Gate View, if the current Gate Delay and/or Gate Length do not match the remembered values Gate View Sweep Time is re-initialized.

1. Compute the location of the "gate stop" line, which you know is at time $t = t_{min} + \text{GateDelay} + \text{GateLength}$.

| | |
|--------------------------|---------------------|
| Preset: | 519.3 μ s |
| | WiMAX OFDMA: 5 ms |
| | GSM/EDGE: 1 ms |
| State Saved: | Saved in state |
| Min: | 1 μ s |
| Max: | 6000 s |
| Key Path: | Sweep/Control, Gate |
| Instrument S/W Revision: | A.01.60 or later |

Gate Delay

Controls the length of time from the time the gate condition goes True until the gate is turned on.

Remote Command: [:SENSe] :SWEep:EGATe:DELay <time>
 [:SENSe] :SWEep:EGATe:DELay?

Example: SWE:EGAT:DELay 500ms
 SWE:EGAT:DELay?

Sweep / Control

| | |
|--------------------------|--|
| Remote Command Notes: | Units of time are required or no units; otherwise an invalid suffix error will be generated. See error –131. |
| Preset: | 57.7 us WiMAX OFDMA: 71 us GSM/EDGE: 600 us |
| State Saved: | Saved in state |
| Min: | 0.0 us |
| Max: | 100 s |
| Key Path: | Sweep/Control, Gate |
| Instrument S/W Revision: | A.01.60 or later |

Gate Length

Controls the length of time that the gate is on after it opens.

Remote Command: [:SENSE] :SWEep:EGATe:LENGth <time>
[:SENSE] :SWEep:EGATe:LENGth?

Example: SWE:EGAT:LENG 1
SWE:EGAT:LENG?

Dependencies/Couplings: Grayed out when Gate Method is set to FFT in which case the label changes to that shown below.

Gate Length
(=1.83/RBW)
2.8 ms

vsd 39-1

The key is also grayed out if Gate Control = Level.

| | |
|-----------------------|--|
| Remote Command Notes: | Units of time are required or no units; otherwise an invalid suffix will be generated. |
| Preset: | 461.6 us WiMAX OFDMA: 50 us GSM/EDGE: 200 us |
| State Saved: | Saved in state |
| Min: | 100 ns |
| Max: | 5 s |
| Key Path: | Sweep/Control, Gate |

Instrument S/W Revision: A.01.60 or later

Method

This lets you choose one of the three different types of gating.

Not all types of gating are available for all measurements.

Remote Command: [:SENSe] :SWEep :EGATe :METHod LO | VIDEo | FFT
[:SENSe] :SWEep :EGATe :METHod?

Example: SWE:EGAT:METH FFT

Preset: LO

State Saved: Saved in state

Key Path: Sweep/Control, Gate

Instrument S/W Revision: A.01.60 or later

LO When set to Gate (On), the LO sweeps whenever the gate conditions as specified in the Gate menu are satisfied by the signal at the Gate Source.

This form of gating is more sophisticated, and results in faster measurements. With Gated LO, the analyzer only sweeps while the gate conditions are satisfied. This means that a sweep could take place over several gate events. It would start when the gate signal goes true and stop when it goes false, then continue when it goes true again. But since the LO is sweeping as long as the gate conditions are satisfied, the sweep typically finishes much more quickly than with Gated Video.

When in zero span, there is no actual sweep performed. But data is only taken while the gate conditions are satisfied. So even though there is no sweep, the gate settings will impact when data is acquired.

Dependencies/Couplings: Key is unavailable when Gate is On and FFT Sweep Type manually selected.
When selected, Sweep Type is forced to Swept and the FFT key in Sweep Type is grayed out.

Key Path: Sweep/Control, Gate, Method

Instrument S/W Revision: A.01.60 or later

Video When set to Gate (On), the video signal is allowed to pass through whenever the gate conditions as specified in the Gate menu are satisfied by the signal at the Gate Source.

This form of gating may be thought of as a simple switch, which connects the signal to the input of the spectrum analyzer. When the gate conditions are satisfied, the switch is closed, and when the gate conditions are not satisfied, the switch is open. So we only look at the signal while the gate conditions are satisfied.

With this type of gating, you usually set the analyzer to sweep very slowly. In fact, a general rule is to sweep slowly enough that the gate is guaranteed to be closed at least once per bucket (data measurement

Sweep / Control

interval). Then if the peak detector is used, each bucket will represent the peak signal as it looks with the gate closed.

| | |
|--------------------------|--|
| Dependencies/Couplings: | Key is unavailable when Gate is On and FFT Sweep Type manually selected. When selected, Sweep Type is forced to Swept and the FFT key in Sweep Type is grayed out |
| Key Path: | Sweep/Control, Gate, Method |
| Instrument S/W Revision: | A.01.60 or later |

FFT When set to Gate (On), the an FFT is performed whenever the gate conditions as specified in the Gate menu are satisfied by the signal at the Gate Source. This is an FFT measurement which begins when the gate conditions are satisfied. Since the time period of an FFT is approximately $1.83/\text{RBW}$, you get a measurement which starts under predefined conditions and takes place over a predefined period. So, in essence, this is a gated measurement. You have limited control over the gate length but it works in FFT sweeps, which the other two methods do not.

Gated FFT cannot be done in zero span since the instrument is not sweeping. So in zero span the Gated LO method is used. Data is still only taken while the gate conditions are satisfied, so the gate settings do impact when data is acquired.

The Gate Length will be $1.83/\text{RBW}$.

This is a convenient way to make a triggered FFT measurement under control of an external gating signal.

| | |
|--------------------------|---|
| Dependencies/Couplings: | Key is unavailable when Gate is On and Swept Sweep Type manually selected. Key is unavailable when gate Control is set to Level. When selected, Sweep Type is forced to FFT and the Swept key in Sweep Type is grayed out Forces Gate Length to $1.83/\text{RBW}$ (see Length key description above) |
| Key Path: | Sweep/Control, Gate |
| Instrument S/W Revision: | A.01.60 or later |

Gate Source

The menus under the **Gate Source** key follow the same pattern as those under **Trigger**, with the exception that neither **Free Run** nor **Video** are available as Gate Source selections. Any changes to the settings in the setup menus under each Gate Source selection key (for example: **Trigger Level**) also affect the settings under the Trigger menu keys. Note that the selected Trigger Source does not have to

match the Gate Source.

| | |
|--------------------------|--|
| Remote Command: | [:SENSe] :SWEep :EGATe :SOURce EXTernal1 EXTernal2 LINE FRAME RFBurst TV [:SENSe] :SWEep :EGATe :SOURce? |
| Preset: | EXTernal 1 GSM/EDGE: FRAME |
| Key Path: | Sweep/Control, Gate |
| Dependencies/Couplings: | TV triggering is not available yet. |
| Instrument S/W Revision: | A.01.60 or later |

Control Edge/Level

Sets the method of controlling the gating function from the gating signal.

Edge

In Edge triggering, the gate opens (after the Delay) on the selected edge (for example, positive) of the gate signal and closes on the alternate edge (for example, negative).

Level

In Level triggering, the gate opens (after the Delay) when the gate signal has achieved a certain level and stays open as long as that level is maintained.

| | |
|--------------------------|---|
| Remote Command: | [:SENSe] :SWEep :EGATe :CONTRol EDGE LEVel [:SENSe] :SWEep :EGATe :CONTRol? |
| Example: | SWE:EGAT:CONT EDGE |
| Dependencies/Couplings: | If the Gate Method is FFT the Control key is grayed out and Edge is selected. If the Gate Source is TV, Frame or Line, the Control key is grayed out and Edge is selected. |
| Preset: | EDGE |
| State Saved: | Saved in stat |
| Key Path: | Sweep/Control, Gate |
| Instrument S/W Revision: | A.01.60 or later |


Gate Holdoff

Lets you increase or decrease the wait time after a gate event ends before the analyzer will respond to the next gate signal.

After any Gate event finishes, the analyzer must wait for the sweep system to settle before it can respond to another Gate signal. The analyzer calculates a "wait time," taking into account a number of factors,

Sweep / Control

including RBW and Phase Noise Optimization setting. The goal is to achieve the same accuracy when gated as in ungated operation. The figure below illustrates this concept:

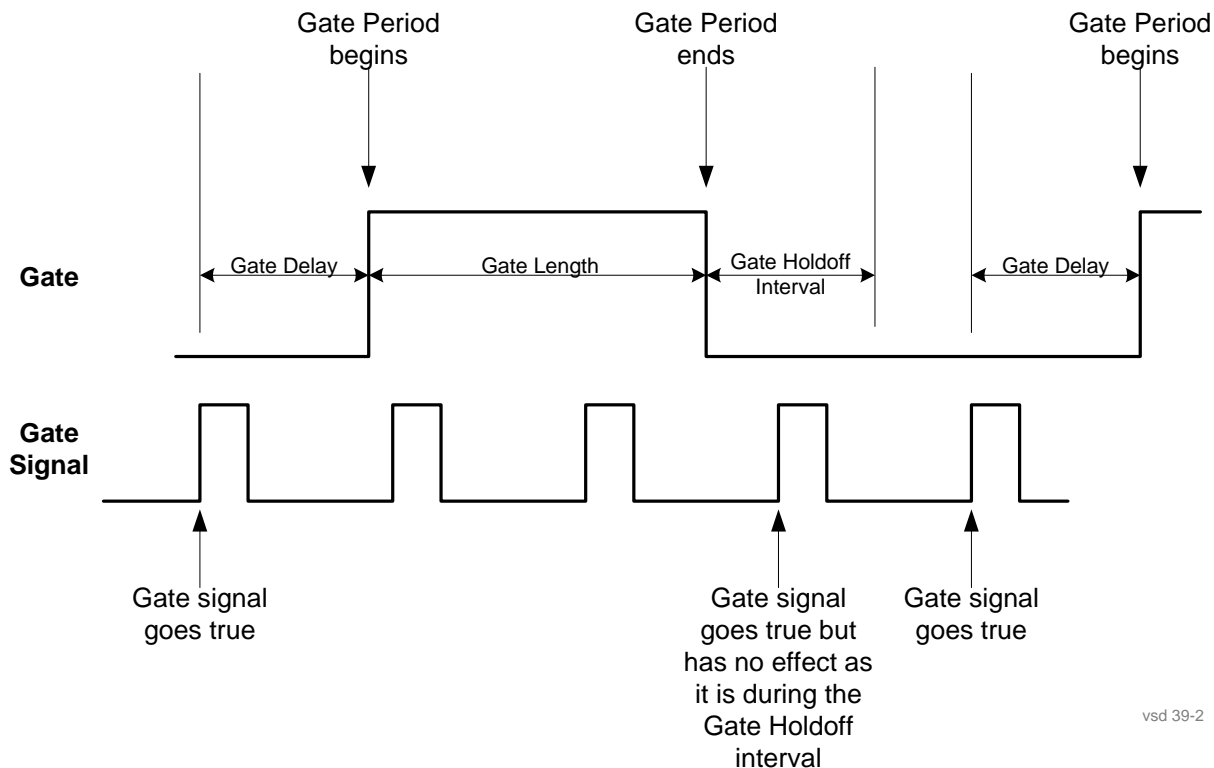

vsd 39-2

When Gate Holdoff is in Auto, the wait time calculated by the analyzer is used. When Gate Time is in Manual, you may adjust the wait time, usually decreasing it in order to achieve greater speed, but at the risk of decreasing accuracy.

When **Method** is set to **Video** or **FFT**, the **Gate Holdoff** function has no effect.

In measurements that do not support Auto, the value shown when Auto is selected is "---" and ??? is returned to a query.

Remote Command

```
[ :SENSe ] :SWEep:EGATe:HOLDoff <time>  
[ :SENSe ] :SWEep:EGATe:HOLDoff?  
[ :SENSe ] :SWEep:EGATe:HOLDoff:AUTO OFF|ON|0|1  
[ :SENSe ] :SWEep:EGATe:HOLDoff:AUTO?
```

| | |
|-------------------------|---|
| Dependencies/Couplings | <p>When Gate Holdoff is Auto, the Gate Holdoff key shows the value calculated by the analyzer for the wait time.</p> <p>Pressing the Gate Holdoff key while it is in Auto and not selected, causes the key to become selected and allows you to adjust the value. If the value is adjusted, the setting changes to Man.</p> <p>Pressing the Gate Holdoff key, while it is in Auto and selected, does not change the value of Gate Holdoff, but causes the setting to change to Man. Now you can adjust the value.</p> <p>Pressing the key while it is in Man and selected, cause the value to change back to Auto.</p> <p>Pressing the key while it is in Man and not selected, causes the key to become selected and allows you to adjust the value.</p> <p>When Method is set to Video or FFT, the Gate Holdoff function has no effect.</p> <p>See Coupling, above</p> |
| Example | <pre>SWE:EGAT:HOLD 0.0002 SWE:EGAT:HOLD? SWE:EGAT:HOLD:AUTO ON SWE:EGAT:HOLD:AUTO?</pre> |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Sweep/Control, Gate |
| Mode | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO |
| Preset | Auto Auto/On |
| State Saved | Saved in instrument state. |
| Min | 1 μ sec |
| Max | 1 sec |

Gate Delay Compensation

This function allows you to select an RBW-dependent value by which to adjust the gate delay, to compensate for changes in the delay caused by RBW effects. The intent is to make it unnecessary for you to worry about the effects that RBW will have on the gate circuitry, by automatically compensating for them.

You can select between uncompensated operation and two types of compensation, **Delay Until RBW Settled** and **Compensate for RBW Group Delay**.

Sweep / Control

See “More Information” on page 1216

| | |
|--------------------------|--|
| Remote Command: | [:SENSe] :SWEep:EGATe:DELay:COMPensation:TYPE OFF SETTled GDELay [:SENSe] :SWEep:EGATe:DELay:COMPensation:TYPE? |
| Example: | SWE:EGAT:DEL:COMP:TYPE SETT SWE:EGAT:DEL:COMP:TYPE? |
| Scope: | Meas Global |
| Range: | Uncompensated Delay Until RBW Settled Compensate for RBW Group Delay |
| Preset: | TD-SCDMA mode: Compensate for RBW Group Delay All other modes: Delay Until RBW Settled |
| State Saved: | Saved in state |
| Key Path: | Sweep/Control, Gate |
| Notes: | Although this function is Meas Global, there are some measurements that do not support this function. In those measurements the operation will be Uncompensated. Going into one of those measurements will not change the Meas Global selection; it will simply display the grayed-out menu key with “Uncompensated” showing as the selection, the SCPI command is still accepted. If Gate Delay Compensation is not supported at all within a particular mode, the key is not displayed, and if the SCPI command is sent while in a measurement within that mode, an “Undefined Header” error is generated. Measurements that do not support this function include: Swept SA |
| Instrument S/W Revision: | A.01.60 or later |

More Information

Selecting **Uncompensated** means that the actual gate delay is as you sets it.

Selecting **Delay Until RBW Settled** causes the gate delay to be increased above you setting by an amount equal to $3.06/\text{RBW}$. This compensated delay causes the GATE START and GATE STOP lines on the display to move by the compensation amount, and the actual hardware gate delay to be increased by the same amount. All the other gate lines (fro example, MIN FAST) are unaffected. If the RBW subsequently changes, the compensation is readjusted for the new RBW. The value shown on the **Gate Delay** key does NOT change.

Delay Until RBW Settled allows excellent measurements of gated signals, by allowing the IF to settle following any transient that affects the burst. Excellent measurements also require that the analysis region not extend into the region affected by the falling edge of the burst. Thus, excellent measurements can only be made over a width that declines with narrowing RBWs. Therefore, for general purpose compensation, you will still want to change the gate length with changes in RBW even if the gate delay is compensated.

Selecting **Compensate for RBW Group Delay** causes the gate delay to be increased above you setting by an amount equal to $1.81/\text{RBW}$. This compensated delay causes the GATE START, GATE STOP lines on the display to move by the compensation amount, and the actual hardware gate delay to be increased by the same amount. All the other gate lines (for example, MIN FAST) are unaffected. If the RBW subsequently changes, the compensation is readjusted for the new RBW. The value shown on the **Gate Delay** key does NOT change. **Compensate for RBW Group Delay** also includes gate length compensation; the gate length itself is adjusted as necessary to attempt to compensate for delay effects imposed by the RBW.

Compensate for RBW Group Delay is similar to **Delay Until RBW Settled**, but compensates for the group delay of the RBW filter, rather than the filter settling time. As the RBW gets narrow, this can allow the settling tail of the RBW to affect the beginning part of the gated measurement, and allow the beginning of the RBW settling transient to affect the end of the gated measurement. These two effects are symmetric because the RBW response is symmetric. Because the gate length is not automatically compensated, some users might find this compensation to be more intuitive than compensation for RBW settling.

Min Fast Position Query (Remote Command Only)

This command queries the position of the MIN FAST line, relative to the delay reference (REF) line. See section “[Gate View On/Off](#)” on page 1204. If this query is sent while not in gate view, the MinFast calculation is performed based on the current values of the appropriate parameters and the result is returned. Knowing this value lets you to set an optimal gate delay value for the current measurement setup.

Remote Command: [:SENSe] :SWEep:EGATe:MINFast?

Example: SWE:EGAT:MIN?

Instrument S/W Revision: A.01.60 or later

Sweep / Control

Trace / Detector

Trace/Detector features are unique to each Measurement. See the specific Measurement for more information.

The front-panel key accesses keys to control Trace and Detector settings.

| | |
|-------------------------|------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Trigger

The Trig front-panel key accesses a menu of keys to control the selection of the trigger source and the setup of each of the trigger sources. The analyzer is designed to allow triggering from a number of different sources, for example, Free Run, Video, External, RF Burst, etc.

The TRIG:SOURce command (below) will specify the trigger source for the currently selected input (RF or I/Q). If you change inputs, the new input remembers the trigger source it was last programmed to for the current measurement, and uses that trigger source. You can directly set the trigger source for each input using the TRIGger:RF:SOURce and TRIGger:IQ:SOURce commands (later in this section).

Note the inclusion of the <measurement> parameter in the command below. Because each measurement remembers its own Trigger Source, the command must be qualified with the measurement name. Note that for the Swept SA measurement this is not the case; for backwards compatibility, no <measurement> parameter is used when setting the Trigger Source for the Swept SA measurement.

See [“Trigger Source Presets” on page 1222](#)

See [“RF Trigger Source” on page 1225](#)

See [“I/Q Trigger Source” on page 1226](#)

See [“More Information” on page 1227](#)

| | |
|-----------------------|--|
| Key Path | Front-panel key |
| Remote Command | :TRIGger:<measurement>[:SEquence]:SOURce EXTernal1 EXTernal2 IMMediate LINE FRAME RFBurst VIDeo IF ALARm LAN IQMag IDEMod QDEMod IINPut QINPut AIQMag :TRIGger:<measurement>[:SEquence]:SOURce? |
| Example | TRIG:ACP:SOUR EXT1 Selects the external 1 trigger input for the ACP measurement and the selected input TRIG:SOUR VID Selects video triggering for the SANalyzer measurement in the Spectrum Analyzer mode. For SAN, do not use the <measurement> keyword. |

Trigger

| | |
|-----------------------------------|--|
| Remote Command Notes | <p>Not all measurements have all the trigger sources available to them. Check the trigger source documentation for your specific measurement to see what sources are available.</p> <p>Not all trigger sources are available for each input. See the “RF Trigger Source” on page 1225 and “I/Q Trigger Source” on page 1226 commands (below) for detailed information on which trigger sources are available for each input.</p> <p>Other trigger-related commands are found in the INITiate and ABORt SCPI command subsystems.</p> <p>*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned.</p> <p>Available ranges and presets can vary from mode to mode.</p> |
| Preset | See table below |
| SCPI Status Bits/OPC Dependencies | The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears. |
| Instrument S/W Revision | A.01.60 or later |

Trigger Source Presets

Here are the Trigger Source Presets for the various measurements:

| Meas | Mode | Preset for RF | Preset for IQ | Notes |
|----------|--|---------------|------------------|-------|
| Swept SA | SA | IMM | IQ not supported | |
| CHP | SA, WCDMA, C2K, WIMAX OFDMA, 1xEVDO, DVB-T/H, DTMB | IMM | IQ not supported | |

| | | | | |
|----------|---|---|--|--|
| OBW | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO | 1xEVDO: EXT1 others: IMM | IQ not supported | For 1xEVDO mode, the trigger source is coupled with the gate state, as well as the gate source. When the trigger source changes to RFBurst, External1 or External2, the gate state is set to on, and the gate source is set identically with the trigger source. When the trigger source changes to IMMEDIATE, VIDEO, LINE, FRAME or IF, the gate state is set to off. |
| CCDF | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO, DVB-T/H, DTMB | SA, WCDMA, C2K: IMMEDIATE WIMAX OFDMA : RFBurst TD-SCDMA: BTS: External 1 MS: RFBurst | TD-SCDMA: BTS: External 1 MS: IQMAG Others: IMM | For TD-SCDMA: Trigger source is coupled with radio device. When radio device changes to BTS, trigger source will be changed to EXTERNAL1. When radio device changes to MS, trigger source will be set as RFBurst for RF or IQ Mag for BBIQ. When Trigger Source is RFBurst or IQ Mag, Measure Interval is grayed out. |
| ACP | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO, DVB-T/H, DTMB | IMM | IQ not supported | |
| Tx Power | SA, GSM, TD-SCDMA | SA, GSM: RFBurst TD-SCDMA: EXTERNAL | IMM | TD-SCDMA doesn't support the Line and Periodic Timer parameters. When the mode is TD-SCDMA, if the Radio Device is switched to BTS, the value will be changed to External 1 and if the Radio device is switched to MS, the value will be changed to RFBurst |
| SPUR | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEV-DO | IMM | IQ not supported | |

Trigger

| | | | | |
|-----------|---|---|------------------|--|
| SEM | SA, WCDMA, C2K, WIMAX OFDMA, TD-SCDMA, 1xEVDO | SA, WCDMA, C2K, TD-SCDMA, WIMAX OFDMA: IMMEDIATE 1xEVDO(BTS): EXTERNAL1 | IQ not supported | |
| CDP | WCDMA | IMM | | |
| RHO | WCDMA | IMM | | |
| PCON | WCDMA | IMM | | |
| QPSK | WCDMA, C2K, 1xEVDO | All except CDMA1xEVDO: IMMEDIATE CDMA1xEVDO: EXT1 | | |
| MON | All except SA and BASIC | IMM | IQ not supported | |
| WAV | | All except GSM/EDGE: IMMEDIATE GSM/EDGE: RFBURST | IQMAG | |
| PVT | WIMAXOFDMA | RFB | IMM | |
| EVM | WIMAXOFDMA | IMM | IMM | |
| SPEC | BASIC | IMM | IMM | |
| LOG Plot | PN | IMM | IQ not supported | |
| Spot Freq | PN | IMM | IQ not supported | |
| GMSK PVT | EDGE/GSM | RFB | IMM | |
| GMSK PFER | EDGE/GSM | RFB | IQMAG | |
| GMSK ORFS | EDGE/GSM | RFB | IQ not supported | |
| EDGE PVT | EDGE/GSM | RFB | IMM | |
| EDGE EVM | EDGE/GSM | RFB | IQMAG | |
| EDGE ORFS | EDGE/GSM | RFB | IQ not supported | |

| | | | | |
|-----------------------|--------------------|-----|------------------|--|
| Combine d WCDMA | WCDMA | IMM | IQ not supported | |
| Combine d GSM | EDGE/GSM | RFB | IQ not supported | |
| List Power Step | WCDMA, EDGE/GSM | IMM | IQ not supported | |

RF Trigger Source

The **RF Trigger Source** command (below) selects the trigger to be used for the specified measurement when RF is the selected input. The RF trigger source can be queried and changed even while another input is selected, but it is inactive until RF becomes the selected input.

Note the inclusion of the <measurement> parameter in the command below. Because each measurement remembers its own Trigger Source, the command must be qualified with the measurement name. Note that for the Swept SA measurement this is not the case; for backwards compatibility, no <measurement> parameter is used when setting the Trigger Source for the Swept SA measurement.

Remote Command: :TRIGger:<measurement>[:SEquence]:RF:SOURce
 EXTernal1|EXTernal2|IMMEDIATE|LINE|FRAME|RFBurst|VIDeo|
 IF|ALARm|LAN
 :TRIGger:<measurement>[:SEquence]:RF:SOURce?

Example: TRIG:ACP:RF:SOUR EXT1
 Selects the external 1 trigger input for the ACP measurement and the RF input
 TRIG:RF:SOUR VID
 Selects video triggering for the SANalyzer measurement and the RF input.
 For SAN, do not use the <measurement> keyword.

Trigger

Remote Command Notes: Not all measurements have all the trigger sources available to them. Check the trigger source documentation for your specific measurement to see what sources are available.

Not all trigger sources are available for each input. For the **RF Trigger Source**, the following trigger sources are available:

- IMMEDIATE - free run triggering
- VIDEO - triggers on the video signal level
- LINE - triggers on the power line signal
- EXTERNAL1 - triggers on an externally connected trigger source on the rear panel
- EXTERNAL2 - triggers on an externally connected trigger source on the front panel
- RFBURST - triggers on the bursted frame
- FRAME - triggers on the periodic timer
- IF (video) - same as video, for backwards compatibility only
- ALARM – LXI Alarm
- LAN – LXI LAN event

*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned.

Available ranges, and presets can vary from mode to mode.

SCPI Status Bits/OPC Dependencies:

The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.

Instrument S/W Revision: A.01.60 or later

I/Q Trigger Source

The **I/Q Trigger Source** command (below) selects the trigger to be used for the specified measurement when I/Q (which requires option BBA) is the selected input. The I/Q trigger source can be queried and changed even while another input is selected, but it is inactive until I/Q becomes the selected input.

Remote Command: :TRIGger:<measurement>[:SEQUENCE]:IQ:SOURce
EXTernal1|EXTernal2|IMMEDIATE|IQMag|IDEMod|QDEMod|IINPu
t|QINPut|AIQMag
:TRIGger:<measurement>[:SEQUENCE]:IQ:SOURce?

Example: TRIG:WAVEform:SOUR IQM
Selects I/Q magnitude triggering for the IQ Waveform measurement and the I/Q input

Remote Command Notes: Not all measurements have all the trigger sources available to them. Check the trigger source documentation for your specific measurement to see what sources are available.

Not all trigger sources are available for each input. For the **I/Q Trigger Source**, the following trigger sources are available:

- IMMEDIATE - free run triggering
- EXTERNAL1 - triggers on an externally connected trigger source on the rear panel
- EXTERNAL2 - triggers on an externally connected trigger source on the front panel
- IQMAG - triggers on the magnitude of the I/Q signal
- IDEMOD - triggers on the I/Q signal's demodulated I voltage
- QDEMOD - triggers on the I/Q signal's demodulated Q voltage
- IINPUT - triggers on the I channel's ADC voltage
- QINPUT - triggers on the Q channel's ADC voltage
- AIQMAG - triggers on the magnitude of the auxiliary receiver channel I/Q signal

*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned.

Available ranges, and presets can vary from mode to mode.

SCPI Status Bits/OPC Dependencies:

The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.

Instrument S/W Revision: A.01.60 or later

More Information

The trigger menus let you select the trigger source and trigger settings for a sweep or measurement. In triggered operation (basically, any trigger source other than Free Run), the analyzer will begin a sweep or measurement only with the selected trigger conditions are met, generally when your trigger source signal meets the specified trigger level and polarity requirements. (In FFT measurements, the trigger controls when the data acquisition begins for FFT conversion.)

For each of the trigger sources, you may define a set of operational parameters or settings which will be applied when that source is selected as the current trigger source. Examples of these settings are Trigger Level, Trigger Delay, and Trigger Slope. You may apply different settings for each source; so, for example, you could have a Trigger Level of 1v for External 1 trigger and -10 dBm for Video trigger.

Once you have established the settings for a given trigger source, they generally will remain unchanged for that trigger source as you go from measurement to measurement within a Mode (although the settings do change as you go from Mode to Mode). Furthermore, the trigger settings within a Mode are the same

Trigger

for the **Trigger** menu, the **Gate Source** menu, and the **Sync Source** menu that is part of the **Periodic Timer Trigger Setup** menu. That is, if **Ext1** trigger level is set to 1v in the **Trigger** menu, it will appear as 1v in both the **Gate Source** and the **Sync Source** menus. For these reasons the trigger settings commands are not qualified with the measurement name, the way the trigger source commands are.


The settings setup menu can be accessed by pressing the key for the current trigger source a second time. For example, one press of Video selects the Video trigger as the source. The Video key becomes highlighted and the hollow arrow on the key turns black. Now a second press of the key takes you into the Video Trigger Setup menu.

Trigger Setup Parameters:

The following examples show trigger setup parameters using an external trigger source.

Example 1 illustrates the trigger conditions with negative slope and no trigger occurs during trigger Holdoff time.

Example 2 illustrates the trigger conditions with positive slope, trigger delay, and auto trigger time.

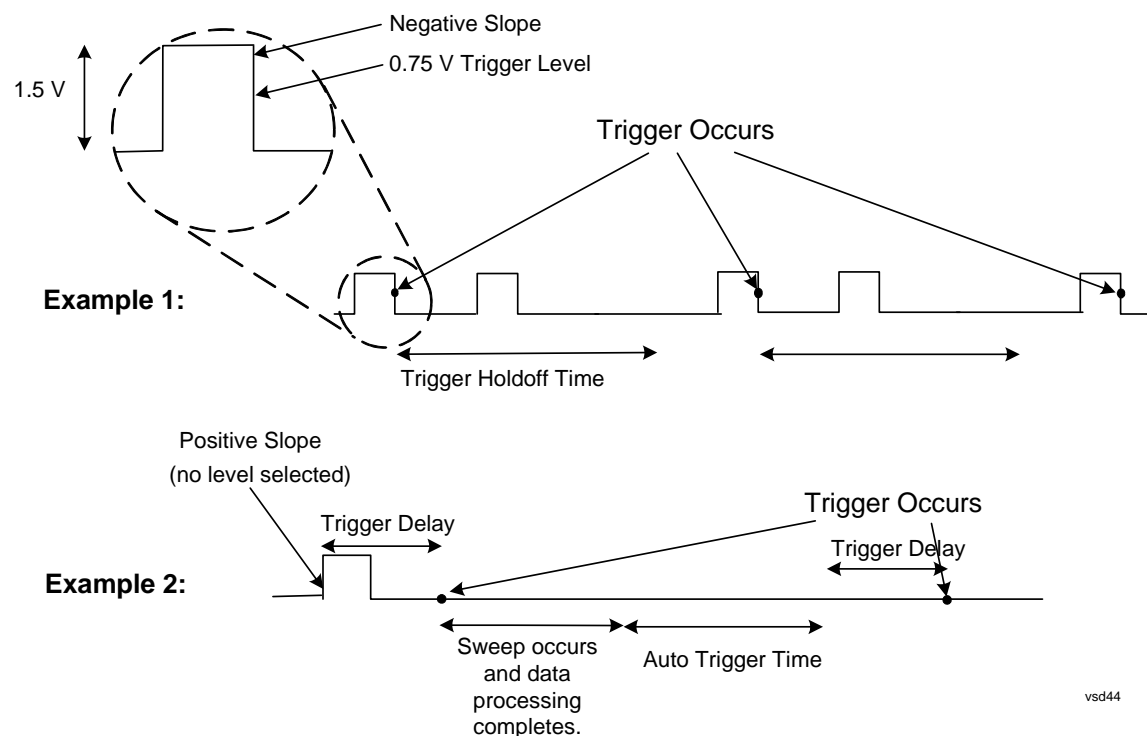

Free Run

Pressing this key, when it is not selected, selects free-run triggering. Free run triggering occurs immediately after the sweep/measurement is initiated.

Example: TRIG:SOUR IMM Swept SA measurement
 TRIG:<meas>:SOUR IMM Measurements other than Swept SA

State Saved: Saved in instrument state.

| | |
|------------------------------------|--|
| Key Path: | Trig |
| SCPI Status Bits/OPC Dependencies: | The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears. |
| Instrument S/W Revision: | A.01.60 or later |

Video (IF Envelope)

Pressing this key, when it is not selected, selects the video signal as the trigger. The Video trigger condition is met when the video signal (the filtered and detected version of the input signal, including both RBW and VBW filtering) crosses the video trigger level.

NOTE When the detector selected for all active traces is the average detector, the video signal for triggering does not include any VBW filtering.

The video trigger level is shown as a labeled line on the display. The line is displayed as long as video is the selected trigger source.

Pressing this key, when it is already selected, accesses the video trigger setup functions.

| | |
|------------------------------------|--|
| Example: | TRIG:SOUR VID Swept SA measurement TRIG:<meas>:SOUR VID Measurements other than Swept SA |
| Dependencies/Couplings: | Video trigger is allowed in average detector mode. |
| State Saved: | Saved in instrument state. |
| Key Path: | Trig |
| Notes: | Log Plot and Spot Frequency measurements do not support Video Trigger |
| SCPI Status Bits/OPC Dependencies: | The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears. |
| Instrument S/W Revision: | A.01.60 or later |

Trigger

Trigger Level

Sets a level for the video signal trigger. When the video signal crosses this level, with the chosen slope, the trigger occurs. This level is displayed with a horizontal line only if **Video** is the selected trigger source.

| | |
|--------------------------|--|
| Remote Command: | :TRIGger[:SEQuence]:VIDeo:LEVel <amp1> :TRIGger[:SEQuence]:VIDeo:LEVel? |
| Example: | TRIG:VID:LEV -40 dBm |
| Dependencies/Couplings: | This same level is used for the Video trigger source in the Trigger menu and for the Video selection in the Gate Source menu. The range of the Video Trigger Level is dependent on the Reference Level. |
| Preset: | Set the Video Trigger Level -25 dBm on Preset. When the Video Trigger Level becomes the active function, if the value is off screen, set it to either the top or bottom of screen, depending on which direction off screen it was. |
| State Saved: | Saved in instrument state. |
| Min: | Same as reference level |
| Max: | Same as reference level |
| Key Path: | Trig, Video |
| Default Unit: | depends on the current selected Y axis unit |
| Instrument S/W Revision: | A.01.60 or later |

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

| | |
|--------------------------|---|
| Remote Command: | :TRIGger[:SEQuence]:VIDeo:SLOPe POSitive NEGative :TRIGger[:SEQuence]:VIDeo:SLOPe? |
| Example: | TRIG:VID:SLOP NEG |
| Preset: | POSitive |
| State Saved: | Saved in instrument state. |
| Key Path: | Trig, Video |
| Instrument S/W Revision: | A.01.60 or later |

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT, but not in swept

spans.

Remote Command: :TRIGger[:SEquence]:VIDeo:DELAy <time>
 :TRIGger[:SEquence]:VIDeo:DELAy?
 :TRIGger[:SEquence]:VIDeo:DELAy:STATe OFF|ON|0|1
 :TRIGger[:SEquence]:VIDeo:DELAy:STATe?

Example: TRIG:VID:DEL:STAT ON
 TRIG:VID:DEL 100 ms

Preset: Off, 1 us

State Saved: Saved in instrument state.

Min: -150 ms

Max: +500 ms

Key Path: Trig, Video

Default Unit: s

Instrument S/W Revision: A.01.60 or later

Line

Pressing this key, when it is not selected, selects the line signal as the trigger. A new sweep/measurement will start synchronized with the next cycle of the line voltage. Pressing this key, when it is already selected, access the line trigger setup menu.

Example: TRIG:SOUR LINE Swept SA measurement
 TRIG:<meas>:SOUR LINE Measurements other than Swept SA

Dependencies/Couplings: Line trigger is not available when operating from a "dc power source", for example, when the instrument is powered from batteries.

State Saved: Saved in instrument state.

Key Path: Trig

SCPI Status Bits/OPC
 Dependencies: The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears.

Instrument S/W Revision: A.01.60 or later

Trigger

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

| | |
|--------------------------|---|
| Remote Command: | <code>:TRIGger[:SEquence]:LINE:SLOPe POSitive NEGative</code> <code>:TRIGger[:SEquence]:LINE:SLOPe?</code> |
| Example: | <code>TRIG:LINE:SLOP NEG</code> |
| Preset: | POSitive |
| State Saved: | Saved in instrument state. |
| Key Path: | Trig, Line |
| Instrument S/W Revision: | A.01.60 or later |

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT, but not in swept spans.

| | |
|--------------------------|--|
| Remote Command: | <code>:TRIGger[:SEquence]:LINE:DELay <time></code> <code>:TRIGger[:SEquence]:LINE:DELay?</code> <code>:TRIGger[:SEquence]:LINE:DELay:STATe OFF ON 0 1</code> <code>:TRIGger[:SEquence]:LINE:DELay:STATe?</code> |
| Example: | <code>TRIG:LINE:DEL:STAT ON</code> <code>TRIG:LINE:DEL 100 ms</code> |
| Preset: | Off, 1.000 us |
| State Saved: | Saved in instrument state. |
| Min: | -150 ms |
| Max: | 500 ms |
| Key Path: | Trig, Line |
| Default Unit: | S |
| Instrument S/W Revision: | A.01.60 or later |

External 1

Pressing this key, when it is not selected, selects an external input signal as the trigger. A new sweep/measurement will start when the external trigger condition is met using the external 1 input connector on the rear panel.

Pressing this key, when it is already selected, accesses the external 1 trigger setup menu.

| | |
|------------------------------------|--|
| Example: | TRIG:SOUR EXT1 Swept SA measurement TRIG:<meas>:SOUR EXT1 Measurements other than Swept SA |
| State Saved: | Saved in instrument state. |
| Key Path: | Trig |
| SCPI Status Bits/OPC Dependencies: | The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears. |
| Instrument S/W Revision: | A.01.60 or later |

Trigger Level

Sets the value where the external 1 trigger input will trigger a new sweep/measurement.

| | |
|--------------------------|---|
| Remote Command: | :TRIGger[:SEQuence]:EXTernal1:LEVel <level> :TRIGger[:SEQuence]:EXTernal1:LEVel? |
| Example: | TRIG:EXT1:LEV 0.4 V |
| Dependencies/Couplings: | This same level is used for the Ext1 trigger source in the Trigger menu, for the Ext1 selection in the Periodic Timer sync source (in the Trigger menu and in the Gate Source menu), and also for the Ext1 selection in the Gate Source menu. |
| Preset: | 1.2 V |
| State Saved: | Saved in instrument state. |
| Min: | -5 V |
| Max: | 5 V |
| Key Path: | Trig, External 1 |
| Default Unit: | V |
| Instrument S/W Revision: | A.01.60 or later |

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a

Trigger

falling edge.

| | |
|--------------------------|--|
| Remote Command: | :TRIGger[:SEquence]:EXTernal1:SLOPe POSitive NEGative :TRIGger[:SEquence]:EXTernal1:SLOPe? |
| Example: | TRIG:EXT1:SLOP NEG |
| Dependencies/Couplings: | This same slope is used in the Ext1 selection for the trigger source in the Trigger menu and for the period timer sync source (in the Trigger menu and in the Gate Source menu). |
| Preset: | POSitive |
| State Saved: | Saved in instrument state. |
| Key Path: | Trig, External 1 |
| Instrument S/W Revision: | A.01.60 or later |

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT, but not in swept spans.

| | |
|--------------------------|--|
| Remote Command: | :TRIGger[:SEquence]:EXTernal1:DELay <time> :TRIGger[:SEquence]:EXTernal1:DELay? :TRIGger[:SEquence]:EXTernal1:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:EXTernal1:DELay:STATe? |
| Example: | TRIG:EXT1:DEL:STAT ON TRIG:EXT1:DEL 100 ms |
| Preset: | Off, 1.000 us |
| State Saved: | Saved in instrument state. |
| Min: | -150 ms |
| Max: | +500 ms |
| Key Path: | Trig, External 1 |
| Default Unit: | s |
| Instrument S/W Revision: | A.01.60 or later |

External 2

Pressing this key, when it is not selected, selects an external input signal as the trigger. A new sweep/measurement will start when the external trigger condition is met using the external 2 input connector. The external trigger 2 input connector is on the rear panel.

Pressing this key, when it is already selected, accesses the external 2 trigger setup menu.

| | |
|------------------------------------|--|
| Example: | TRIG:SOUR EXT2 Swept SA measurement TRIG:<meas>:SOUR EXT2 Measurements other than Swept SA |
| State Saved: | Saved in instrument state. |
| Key Path: | Trig |
| SCPI Status Bits/OPC Dependencies: | The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears. |

Instrument S/W Revision: A.01.60 or later

Trigger Level

Sets the value where the external 2 trigger input will trigger a new sweep/measurement.

| | |
|--------------------------|---|
| Remote Command: | :TRIGger[:SEQuence]:EXTernal2:LEVel :TRIGger[:SEQuence]:EXTernal2:LEVel? |
| Example: | TRIG:EXT2:LEV 1.1 V |
| Dependencies/Couplings: | This same level is used for the Ext2 trigger source in the Trigger menu, for the Ext2 selection in the Periodic Timer sync source (in the Trigger menu and in the Gate Source menu), and also for the Ext2 selection in the Gate Source menu. |
| Preset: | 1.2 V |
| State Saved: | Saved in instrument state. |
| Min: | -5 V |
| Max: | 5 V |
| Key Path: | Trig, External 2 |
| Default Unit: | V |
| Instrument S/W Revision: | A.01.60 or later |

Trig Slope

Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a

Trigger

falling edge.

Remote Command: :TRIGger[:SEquence]:EXTernal2:SLOPe POSitive|NEGative
:TRIGger[:SEquence]:EXTernal2:SLOPe?

Example: TRIG:EXT2:SLOP NEG

Dependencies/Couplings: This same slope is used in the Ext2 selection for the trigger source in the Trigger menu and for the period timer sync source (in the Trigger menu and in the Gate Source menu).

Preset: POSitive

State Saved: Saved in instrument state.

Key Path: Trig, External 2

Instrument S/W Revision: A.01.60 or later

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT, but not in swept spans.

Remote Command: :TRIGger[:SEquence]:EXTernal2:DELay <time>
:TRIGger[:SEquence]:EXTernal2:DELay?
:TRIGger[:SEquence]:EXTernal2:DELay:STATe OFF|ON|0|1
:TRIGger[:SEquence]:EXTernal2:DELay:STATe?

Example: TRIG:EXT2:DEL:STAT ON

TRIG:EXT2:DEL 100 ms

Preset: Off, 1.000 us

State Saved: Saved in instrument state.

Min: -150 ms

Max: 500 ms

Key Path: Trig, External 2

Default Unit: s

Instrument S/W Revision: A.01.60 or later

RF Burst (Wideband)

Pressing this key, when it is not selected, selects the RF Burst as the trigger. A new sweep/measurement will start when an RF burst envelope signal is identified from the signal at the RF Input connector.

Pressing this key, when it is already selected, accesses the RF Burst trigger setup menu.

| | | |
|------------------------------------|--|----------------------------------|
| Example: | TRIG:SOUR RFB | Swept SA measurement |
| | TRIG:<meas>:SOUR RFB | Measurements other than Swept SA |
| Key Path: | Trig | |
| State Saved: | Saved in instrument state. | |
| SCPI Status Bits/OPC Dependencies: | The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears. | |

Instrument S/W Revision: A.01.60 or later

Trigger Level

Sets the trigger level for the RF burst envelope.

In some measurements, both absolute and relative burst trigger functions are available. When Relative is available, this key will display a toggle between **Abs** and **Rel** on the third line. When **Abs** is selected, the value on the key is the absolute trigger level; when **Rel** is selected, the value is the relative trigger level.

If no toggle appears on the key, the measurement only supports absolute trigger level.

The relative RF Burst trigger is implemented as follows:

The measurement starts with the absolute RF Burst trigger setting. If it can not get a trigger with that level, auto trigger fires and the acquisition starts anyway. After the acquisition, the measurement searches for the peak in the acquired waveform and saves it.

Now, in the next cycle of the measurement, the measurement determines a new absolute RF Burst level based on the peak value from the first measurement and the Relative RF Burst Trigger Level (always 0 or negative dB) set by you. The following formula is used:

absolute RF Burst level = peak level of the previous acquisition + relative RF Burst level

If the new absolute RF Burst level differs from the previous by more than 0.5 dB, the new level is sent to the hardware; otherwise it is not updated (to avoid slowing down the acquisition)

Trigger

Steps 2 and 3 repeat for subsequent measurements.

Remote Command: :TRIGger[:SEquence]:RFBurst:LEVel:ABSolute <ampl>
 :TRIGger[:SEquence]:RFBurst:LEVel:RELative <ampl>
 :TRIGger[:SEquence]:RFBurst:LEVel:ABSolute?
 :TRIGger[:SEquence]:RFBurst:LEVel:RELative?
 :TRIGger[:SEquence]:RFBurst:LEVel:TYPE
 ABSolute|RELative
 :TRIGger[:SEquence]:RFBurst:LEVel:TYPE?

Example: TRIG:RFB:LEV:ABS 10 dBm sets the trigger level of the RF burst envelope signal to the absolute level of 10 dBm.

Dependencies/Couplings: This same level is used for the RF Burst trigger source in the Trigger menu, for the RF Burst selection in the Periodic Timer sync source (in the Trigger menu and in the Gate Source menu), and also for the RF Burst selection in the Gate Source menu.

Preset: Absolute: -20 dBm
 Relative: -6 dB
 GSM: -25 dB
 ABSolute

State Saved: Saved in instrument state.

Min: Absolute: -200 dBm
 Relative: -45 dB

Max: Absolute: 100 dBm
 Relative: 0 dB

Key Path: Trig, RF Burst

Default Unit: Absolute: depends on the current selected Y-Axis unit
 Relative: dB or dBc

Instrument S/W Revision: A.01.60 or later

Trigger Slope

It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Remote Command: :TRIGger[:SEquence]:RFBurst:SLOPe POSitive|NEGative
 :TRIGger[:SEquence]:RFBurst:SLOPe?

Example: TRIG:RFB:SLOP NEG

| | |
|--------------------------|--|
| Dependencies/Couplings: | This same slope is used in the RF Burst selection for the trigger source in the Trigger menu and for the period timer sync source (in the Trigger menu and in the Gate Source menu). |
| Preset: | POSitive |
| State Saved: | Saved in instrument state. |
| Key Path: | Trig, RF Burst |
| Instrument S/W Revision: | A.01.60 or later |

Trig Delay

Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT, but not in swept spans.

Remote Command:

```
:TRIGger[:SEquence]:RFBurst:DElay <time>
:TRIGger[:SEquence]:RFBurst:DElay?
:TRIGger[:SEquence]:RFBurst:DElay:STATe OFF|ON|0|1
:TRIGger[:SEquence]:RFBurst:DElay:STATe?
```

Example:

```
TRIG:RFB:DEL:STAT ON
TRIG:RFB:DEL 100 ms
```

| | |
|--------------------------|----------------------------|
| Preset: | Off, 1.000 us |
| State Saved: | Saved in instrument state. |
| Min: | -150 ms |
| Max: | 500 ms |
| Key Path: | Trig, RF Burst |
| Default Unit: | s |
| Instrument S/W Revision: | A.01.60 or later |

Periodic Timer (Frame Trigger)

Pressing this key, when it is not selected, selects the internal periodic timer signal as the trigger. Triggering occurrences are set by the **Period** parameter, which is modified by the **Sync Source** and **Offset**. Pressing this key, when it is already selected, accesses the periodic timer trigger setup functions.

If you do not have a sync source selected (it is Off), then the internal timer will not be synchronized with any external timing events.

| | | |
|--------------|----------------------------|----------------------------------|
| Example: | TRIG:SOUR FRAM | Swept SA measurement |
| | TRIG:<meas>:SOUR FRAM | Measurements other than Swept SA |
| State Saved: | Saved in instrument state. | |

Trigger

| | |
|------------------------------------|--|
| Key Path: | Trig |
| SCPI Status Bits/OPC Dependencies: | The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears. |
| Instrument S/W Revision: | A.01.60 or later |

Periodic Timer Triggering:

This feature selects the internal periodic timer signal as the trigger. Trigger occurrences are set by the **Periodic Timer** parameter, which is modified by the **Sync Source** and **Offset**.


The figure below shows the action of the periodic timer trigger. Before reviewing the figure, we'll explain some uses for the periodic trigger.

A common application is measuring periodic burst RF signals for which a trigger signal is not easily available. For example, we might be measuring a TDMA radio which bursts every 20 ms. Let's assume that the 20 ms period is very consistent. Let's also assume that we do not have an external trigger source available that is synchronized with the period, and that the signal-to-noise ratio of the signal is not high enough to provide a clean RF burst trigger at all of the analysis frequencies. For example, we might want to measure spurious transmissions at an offset from the carrier that is larger than the bandwidth of the RF burst trigger. In this application, we can set the Periodic Timer to a 20.00 ms period and adjust the offset from that timer to position our trigger just where we want it. If we find that the 20.00 ms is not exactly right, we can adjust the period slightly to minimize the drift between the period timer and the signal to be measured.

A second way to use this feature would be to use **Sync Source** temporarily, instead of **Offset**. In this case, we might tune to the signal in a narrow span and use the RF Burst trigger to synchronize the periodic timer. Then we would turn the sync source off so that it would not mis-trigger. Mis-triggering can occur when we are tuned so far away from the RF burst trigger that it is no longer reliable.

A third example would be to synchronize to a signal that has a reference time element of much longer period than the period of interest. In some CDMA applications, it is useful to look at signals with a short periodicity, by synchronizing that periodicity to the "even-second clock" edge that happens every two seconds. Thus, we could connect the even-second clock trigger to Ext1 and use then Ext1 as the sync source for the periodic timer.

The figure below illustrates this third example. The top trace represents the even-second clock. It causes the periodic timer to synchronize with the leading edge shown. The analyzer trigger occurs at a time delayed by the accumulated offset from the period trigger event. The periodic timer continues to run, and triggers continue to occur, with a periodicity determined by the analyzer time base. The timer output (labeled "late event") will drift away from its ideal time due to imperfect matching between the time base of the signal being measured and the time base of the analyzer, and also because of imperfect setting of the period parameter. But the synchronization is restored on the next even-second clock event. ("Accumulated offset" is described in the in the **Offset** function section.)

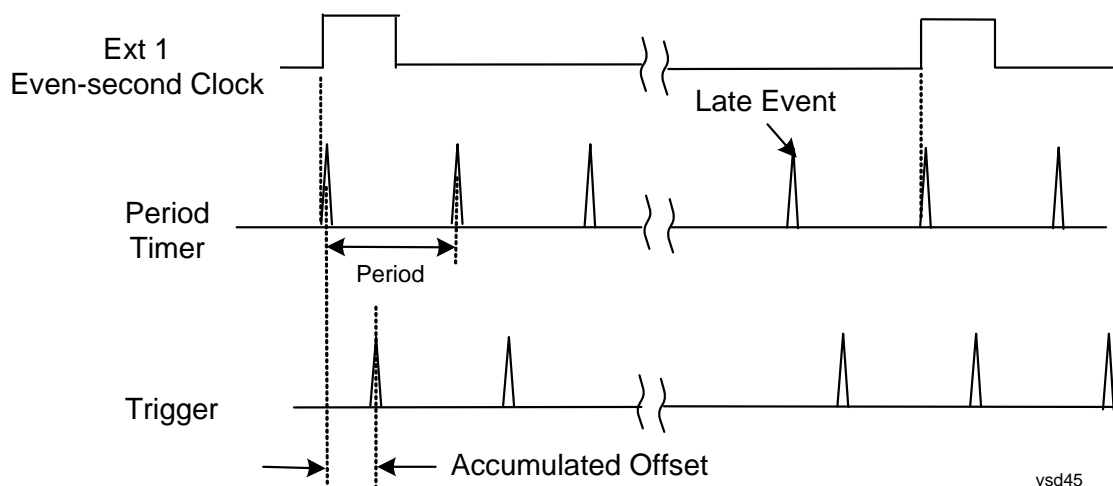

Period

Sets the period of the internal periodic timer clock. For digital communications signals, this is usually set to the frame period of your current input signal. In the case that sync source is not set to OFF, and the external sync source rate is changed for some reason, the periodic timer is synchronized at the every external synchronization pulse by resetting the internal state of the timer circuit.

Remote Command: :TRIGger[:SEquence]:FRAMe:PERiod <time>
:TRIGger[:SEquence]:FRAMe:PERiod?

Example: TRIG:FRAM:PER 100 ms

Dependencies/Couplings: The invalid data indicator turns on when the period is changed, until the next sweep/measurement completes.

The same period is used in the Gate Source selection of the period timer.

Preset: 20 ms

GSM: 4.615383

State Saved: Saved in instrument state.

Min: 100.000 ns

Max: 559.0000 ms

Key Path: Trig, Periodic Timer

Default Unit: S

Instrument S/W Revision: A.01.60 or later

Offset

Adjusts the accumulated offset between the periodic timer events and the trigger event. Adjusting the accumulated offset is different than setting an offset, and requires explanation.

The periodic timer is usually not synchronized with any external events, so the timing of its output events has no absolute meaning. Since the timing relative to external events (RF signals) is important,

Trigger

you need to be able to adjust (offset) it. However, you have no direct way to see when the periodic timer events occur. All that you can see is the trigger timing. When you want to adjust the trigger timing, you will be changing the internal offset between the periodic timer events and the trigger event. Because the absolute value of that internal offset is unknown, we will just call that the accumulated offset. Whenever the Offset parameter is changed, you are changing that accumulated offset. You can reset the displayed offset using Reset Offset Display. Changing the display does not change the value of the accumulated offset, and you can still make additional changes to accumulated offset.

To avoid ambiguity, we define that an increase in the "offset" parameter, either from the RPG or the SCPI adjust command, serves to delay the timing of the trigger event.

| | |
|--------------------------|--|
| Remote Command: | <code>:TRIGger[:SEquence]:FRAMe:OFFSet <time></code> <code>:TRIGger[:SEquence]:FRAMe:OFFSet?</code> |
| Example: | TRIG:FRAM:OFFS 1.2 ms |
| Dependencies/Couplings: | The invalid data indicator turns on when the offset is changed, until the next sweep/measurement completes. The same offset is used in the Gate Source selection of the period timer. |
| Remote Command Notes: | When the SCPI command is sent the value shown on the key (and the Active Function, if this happens to be the active function) is updated with the new value. However, the actual amount sent to the hardware is the delta value, that is, the current accumulated offset value minus the previous accumulated offset value. The SCPI query simply returns the value currently showing on the key. |
| Preset: | 0 s |
| State Saved: | Saved in instrument state. |
| Min: | -10.000 s |
| Max: | 10.000 s |
| Key Path: | Trig, Periodic Timer |
| Default Unit: | S |
| Instrument S/W Revision: | A.01.60 or later |

Offset Adjust (Remote Command only) This remote command does not work at all like the related front-panel keys. This command lets you advance the phase of the frame trigger by the amount you specify.

It does not change the period of the trigger waveform. If the command is sent multiple times, it advances the phase of the frame trigger an additional amount each time it is sent. Negative numbers are permitted.

| | |
|------------------------|--|
| Remote Command: | <code>:TRIGger[:SEquence]:FRAMe:ADJust <time></code> |
| Example: | TRIG:FRAM:ADJ 1.2 ms |

| | |
|--------------------------|--|
| Dependencies/Couplings: | The invalid data indicator turns on when the offset is changed, until the next sweep/measurement completes. The same offset is used in the Gate Source selection of the period timer. |
| Remote Command Notes: | The front panel interface (for example, the knob) and the :TRIG:FRAM:OFFS command adjust the accumulated offset, which is shown on the active function display. However, the actual amount sent to the hardware is the delta value, that is, the current offset value minus the previous offset value. When the SCPI command is sent the value shown on the key (and the Active Function, if this happens to be the active function) is updated by increasing it (or decreasing it if the value sent is negative) by the amount specified in the SCPI command. This is a "command only" SCPI command, with no query. |
| Preset: | 0 s |
| State Saved: | Saved in instrument state. |
| Min: | -10.000 s |
| Max: | 10.000 s |
| Default Unit: | S |
| Instrument S/W Revision: | A.01.60 or later |

Reset Offset Display

Resets the value of the periodic trigger offset display setting to 0.0 seconds. The current displayed trigger location may include an offset value defined with the **Offset** key. Pressing this key redefines the currently displayed trigger location as the new trigger point that is 0.0 s offset. The **Offset** key can then be used to add offset relative to this new timing.

| | |
|--------------------------|--|
| Remote Command: | :TRIGger[:SEquence]:FRAMe:OFFSet:DISPlay:RESet |
| Example: | TRIG:FRAM:OFFS:DISP:RES |
| Key Path: | Trig, Periodic Timer |
| Instrument S/W Revision: | A.01.60 or later |

Sync Source

Selects a signal source for you to synchronize your periodic timer trigger to, otherwise you are triggering at some arbitrary location in the frame. Synchronization reduces the precision requirements on the setting of the period.

For convenience you may adjust the level and slope of the selected sync source in a conditional branch setup menu accessed from the Sync Source menu. Note that these settings match those in the **Trigger** and **Gate Source** menus; that is, each trigger source has only one value of level and slope, regardless of

Trigger

which menu it is accessed from.

Remote Command: :TRIGger[:SEQuence]:FRAMe:SYNC
EXTernal1|EXTernal2|RFBurst|OFF
:TRIGger[:SEQuence]:FRAMe:SYNC?

Example: TRIG:FRAM:SYNC EXT2

Preset: Off
GSM/EDGE: RFBurst

State Saved: Saved in instrument state.

Key Path: Trig, Periodic Timer

Instrument S/W Revision: A.01.60 or later

Off Turns off the sync source for your periodic trigger. With the sync source off, the timing will drift unless the signal source frequency is locked to the analyzer frequency reference.

Example: TRIG:FRAM:SYNC OFF

Key Path: Trig, Periodic Timer, Sync Source

Instrument S/W Revision: A.01.60 or later

External 1 Pressing this key, when it is not selected, selects the external input port that you will use for the periodic trigger synchronization. Pressing this key, when it is already selected, accesses the external 1 sync source setup menu.

Example: TRIG:FRAM:SYNC EXT

Dependencies/Couplings: Same as External 1 trigger source.

Key Path: Trig, Periodic Timer, Sync Source

Instrument S/W Revision: A.01.60 or later

External 2 Pressing this key, when it is not selected, selects the external input port that you will use for the periodic frame trigger synchronization.

Pressing this key, when it is already selected, accesses the external 2 sync source setup menu.

Example: TRIG:FRAM:SYNC EXT2

Dependencies/Couplings: Same as External 2 trigger source.

Key Path: Trig, Periodic Timer, Sync Source

Instrument S/W Revision: A.01.60 or later

RF Burst (Wideband) Pressing the key once selects the RF burst envelope signal to be used for the periodic timer trigger synchronization.

Press the key a second time to access the RF burst sync source setup menu.

| | |
|--------------------------|-----------------------------------|
| Example: | TRIG:FRAM:SYNC RFB |
| Dependencies/Couplings: | Same as RF Burst trigger source. |
| Key Path: | Trig, Periodic Timer, Sync Source |
| Instrument S/W Revision: | A.01.60 or later |

Trig Delay

This setting delays the measurement timing relative to the Periodic Timer.

| | |
|--------------------------|--|
| Remote Command: | :TRIGger[:SEquence]:FRAME:DElay <time> :TRIGger[:SEquence]:FRAME:DElay? :TRIGger[:SEquence]:FRAME:DElay:STATE OFF ON 0 1 :TRIGger[:SEquence]:FRAME:DElay:STATE? |
| Preset: | Off, 1.000 us |
| State Saved: | Saved in instrument state. |
| Min: | -150 ms |
| Max: | +500 ms |
| Key Path: | Trig, Periodic Timer |
| Default Unit: | s |
| Instrument S/W Revision: | A.01.60 or later |

Sync Holdoff

Sync Holdoff specifies the duration that the sync source signal must be kept false before the transition to true to be recognized as the sync timing. The periodic timer phase is aligned when the sync source signal becomes true, after the Holdoff time is satisfied.

A holdoff of 2 ms will work with most WiMAX signals, but there may be cases where the burst off duration is less than 1 ms and this value will need to be changed.

| | |
|------------------------|--|
| Remote Command: | :TRIGger[:SEquence]:FRAME:SYNC:HOLDoff <time> :TRIGger[:SEquence]:FRAME:SYNC:HOLDoff? :TRIGger[:SEquence]:FRAME:SYNC:HOLDoff:STATE OFF ON 0 1 :TRIGger[:SEquence]:FRAME:SYNC:HOLDoff:STATE? |
| Preset: | On, 1.000 ms |
| State Saved: | Saved in instrument state. |
| Min: | 0 ms |

Trigger

| | |
|--------------------------|----------------------|
| Max: | +500 ms |
| Key Path: | Trig, Periodic Timer |
| Default Unit: | s |
| Instrument S/W Revision: | A.01.60 or later |

LXI Trigger

Pressing this key when it is not selected selects the LXI system as the trigger. Pressing the key when it is already selected accesses the LXI trigger type selection menu, where either LAN Event or Alarm can be chosen. The key is annotated to display which of the two is currently selected.

| | |
|------------|---|
| TIP | For information about setting up measurements using LXI, refer to the Programmer's Guide located in your analyzer at: C:/Program Files/Agilent/Signal Analysis/Help/Bookfiles/x_series_prog.pdf. It is also available by selecting the "Additional Documentation" page of the Help. |
|------------|---|

| | |
|-------------------------|----------------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig |
| Mode | SA, IQ (Basic) |
| Preset | ON |
| State Saved | Saved in instrument state. |

LAN Event

Pressing this key when it is not selected selects the LAN event system as the LXI trigger. A new sweep/measurement starts when the pre-configured LAN message arrives if the LXI trigger is selected (see "[LXI Trigger](#)" on page 1246). Pressing this key when it is already selected accesses the LAN trigger setup menu.

| | |
|-------------|---|
| NOTE | Pressing this button causes Enabled LXI Alarm Triggers to be ignored, since the Trigger source is changed to LXI LAN Event. |
|-------------|---|

| | |
|-----------------------------------|--|
| Example | TRIG:SOUR LAN Swept SA measurement TRIG:<meas>:SOUR LAN Measurements other than Swept SA |
| SCPI Status Bits/OPC Dependencies | The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears. |
| Instrument S/W Revision | A.01.60 or later |

| | |
|-------------|----------------------------|
| Key Path | Trig, LXI Trigger |
| Mode | SA, IQ (Basic) |
| Preset | ON |
| State Saved | Saved in instrument state. |
| State Saved | Saved in instrument state. |

Disable All Sets the Enable parameter of every member of the LXI LAN Event list to OFF.

| | |
|-------------------------|---|
| Remote Command | :TRIGger[:SEQuence]:LXI:LAN:DISable:ALL |
| Example | :TRIG:LXI:LAN:DIS:ALL |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig, LXI Trigger, LAN Event |
| Mode | SA, IQ (Basic) |

LAN Event List After selecting LAN as the trigger source, you is presented with a list of LXI Trigger LAN Events to be configured. By default, LAN0-LAN7 are available. Using the TRIG:LXI:LAN:ADD and TRIG:LXI:LAN:REM commands, the size of this list can be changed arbitrarily. Pressing a LAN event branches to that event's setup menu.

| | |
|-------------------------|--|
| Remote Command | :TRIGger[:SEQuence]:LXI:LAN:LIST? |
| Example | :TRIG:LXI:LAN:LIST? Returns the complete list of Trigger LAN Events which is, at minimum: "LAN0", "LAN1", "LAN2", "LAN3", "LAN4", "LAN5", "LAN6", "LAN7" |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig LXI Trigger, LAN Event |
| Mode | SA, IQ (Basic) |
| Preset | "LAN0", "LAN1", "LAN2", "LAN3", "LAN4", "LAN5", "LAN6", "LAN7" |
| State Saved | Saved in instrument state. |

Detection Pressing this button brings up the Trigger Detection menu.

Selecting "Rise" causes the instrument to trigger on the receipt of a signal low LAN Event followed by a signal high LAN Event.

Selecting "Fall" caused the instrument to trigger on the receipt of a signal high LAN Event followed by a signal low LAN Event.

Selecting "High" causes the instrument to trigger on every signal high LAN Event.

Trigger

Selecting "Low" causes the instrument to trigger on every signal low LAN Event.

| | |
|-------------------------|---|
| Remote Command | <code>:TRIGger[:SEquence]:LXI:LAN[:SET]:DETection "LANEVENT", HIGH LOW RISE FALL</code> |
| Example | <code>:TRIG:LXI:LAN:DET "LAN0",HIGH</code> |
| Restriction and Notes | If a non existent LAN event is passed in the lanEvent argument, the command is ignored |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig LXI Trigger, LAN Event, <lanEvent> |
| Mode | SA, IQ (Basic) |
| Preset | HIGH |
| State Saved | Saved in instrument state. |
| Range | HIGH LOW RISE FALL |

| | |
|-------------------------|--|
| Remote Command | <code>:TRIGger[:SEquence]:LXI:LAN[:SET]:DETection? "LANEVENT"</code> |
| Example | <code>:TRIG:LXI:LAN:DET? "LAN0"?</code> |
| Restriction and Notes | If a non existent LAN event is passed in the lanEvent argument, the command is ignored |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig LXI Trigger, LAN Event, <lanEvent> |
| Mode | SA, IQ (Basic) |
| Preset | HIGH |
| State Saved | Saved in instrument state. |
| Range | HIGH LOW RISE FALL |

Delay Sets the amount of delay that should pass between receiving a LXI Trigger LAN Event Trigger and the trigger action. A Delay of 0.0 s indicates that the instrument will trigger as soon as possible after receiving the proper LXI LAN Event.

| | |
|-------------------------|--|
| Remote Command | <code>:TRIGger[:SEquence]:LXI:LAN[:SET]:DELay "LANEVENT",<time></code> |
| Example | <code>:TRIG:LXI:LAN:DEL "LAN0",5S</code> |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig, LXI Trigger, LAN Event, <lanEvent> |
| Mode | SA, IQ (Basic) |
| Preset | 0.0 s |

| | |
|-------------------------|---|
| State Saved | Saved in instrument state. |
| Range | 0.0 – 1.7976931348623157 x 10308 (Max Double) |
| Remote Command | :TRIGger[:SEquence]:LXI:LAN[:SET]:DElay? "lanEvent" |
| Example | :TRIG:LXI:LAN:DEL? "LAN0" |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig, LXI Trigger, LAN Event, <lanEvent> |
| Mode | SA, IQ (Basic) |
| Preset | 0.0 s |
| State Saved | Saved in instrument state. |
| Range | 0.0 – 1.7976931348623157 x 10308 (Max Double) |

Enabled/Disabled When the Trigger Source is set to LXI Trigger LAN Event, the instrument triggers upon receiving any event from the LXI Trigger LAN Event List whose Enabled parameter is set to ON.

If the Enabled parameter is set to OFF, the event is ignored.

| | |
|-------------------------|--|
| Remote Command | :TRIGger[:SEquence]:LXI:LAN[:SET]:ENABled "LANEVENT",ON OFF 1 0 |
| Example | :TRIG:LXI:LAN:ENAB "LAN0",ON |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig, LXI Trigger, LAN Event, <lanEvent> |
| Mode | SA, IQ (Basic) |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | OFF ON 0 1 |
| Remote Command | :TRIGger[:SEquence]:LXI:LAN[:SET]:ENABled? "LANEVENT" |
| Example | :TRIG:LXI:LAN:ENAB? "LAN0" |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig, LXI Trigger, LAN Event, <lanEvent> |
| Mode | SA, IQ (Basic) |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | OFF ON 0 1 |

Trigger

Add (Remote Only) Adds the provided string to the list of possible LAN events to trigger on. As new LAN events are added, keys are generated in the LAN source menu. New key panels are generated as the number of possible LAN events increases past a multiple of six, and the "More" keys are updated to reflect the new number of key panels in the LAN source menu.

| | |
|-------------------------|--|
| Mode | SA, IQ (Basic) |
| Remote Command | :TRIGger [:SEquence] :LXI :LAN :ADD "LANEVENT" |
| Example | :TRIG:LXI:LAN:ADD "LANEVENT" |
| State Saved | No |
| Range | Uppercase, Lowercase, Numeric, Symbol except for comma or semicolon |
| Restriction and Notes | The maximum length of the string is 16 characters. Longer strings are concatenated to 16 characters and added. No event is added if the LAN Event already exists. This command modifies the LXI Trigger LAN Event List Parameter. |
| Instrument S/W Revision | A.01.60 or later |

Remove (Remote Only) Removes the provided string from the list of possible LAN events to trigger on. As LAN events are removed, keys are removed from the LAN source menu. Key panels are removed as the number of possible LAN events decreases past a multiple of six, and the "More" keys are updated to reflect the new number of key panels in the LAN source menu. It is not possible to remove the "LAN0" – "LAN7" events.

| | |
|-------------------------|--|
| Mode | SA, IQ (Basic) |
| Remote Command | :TRIGger [:SEquence] :LXI :LAN :REMOve [:EVENT] "LANEVENT" |
| Example | :TRIG:LXI:LAN:REM "LANEVENT" |
| State Saved | No |
| Range | Uppercase, Lowercase, Numeric, Symbol except for comma or semicolon |
| Restriction and Notes | The maximum length of the string is 16 characters. Longer strings are concatenated and the corresponding LAN Event is removed. Nothing happens if the LAN event does not exist. This command modifies the LXI Trigger LAN Event List Parameter. |
| Instrument S/W Revision | A.01.60 or later |

Remove All (Remote Only) Clears the list of customer added LAN events that can cause the instrument to trigger. Events LAN0-LAN7 are not affected. As LAN events are removed, keys are removed from the LAN source menu. Key panels are removed as the number of possible LAN events decreases past a multiple of six, and the "More" keys are updated to reflect the new number of key panels in the LAN source menu.

It is not possible to remove the "LAN0" – "LAN7" events.

| | |
|-------------------------|---|
| Mode | SA, IQ (Basic) |
| Remote Command | :TRIGger[:SEquence]:LXI:LAN:REMove:ALL |
| Example | :TRIG:LXI:LAN:REM:ALL |
| Restriction and Notes | This command modifies the LXI Trigger LAN Event List Parameter. |
| Instrument S/W Revision | A.01.60 or later |

Event Filter (Remote Only) Only LXI Trigger LAN Events coming from hosts matching the filter string are processed. There is no front panel access to this command

The syntax for specifying a filter is as follows:

Filter == ([host[:port]] | [ALL[:port]]) [,Filter]

Specifying an empty string means that LXI trigger packets are accepted as a Trigger from any port on any host on the network via either TCP or UDP.

Specifying only the port means that any host communicating over that port can send events.

Specifying ALL indicates that UDP multicast packets are accepted if they are directed to the Internet Assigned Numbers Authority (IANA) assigned multicast address on the IANA assigned default port, or the designated port if specified.

Examples:

"192.168.0.1:23"

"agilent.com, soco.agilent.com"

"agilent.com:80, 192.168.0.1"

| | |
|-------------------------|---|
| Mode | SA, IQ (Basic) |
| Remote Command | :TRIGger[:SEquence]:LXI:LAN[:SET]:FILTer "LANEVENT", "filterString" :TRIGger[:SEquence]:LXI:LAN[:SET]:FILTer? |
| Example | :TRIG:LXI:LAN:FILT "LAN0","agilent.com" :TRIG:LXI:LAN:FILT? |
| Preset | "" (empty string) |
| State Saved | Saved in instrument state. |
| Range | Uppercase, Lowercase, Numeric, Symbol |
| Restriction and Notes | The maximum length of the string is 45 characters. Nothing happens if the LAN event does not exist. |
| Instrument S/W Revision | A.01.60 or later |

Trigger

Count (Remote Only) Returns the number of items in the LXI Trigger LAN Event List.

| | |
|-------------------------|------------------------------------|
| Mode | SA, IQ (Basic) |
| Remote Command | :TRIGger[:SEquence]:LXI:LAN:COUNT? |
| Example | :TRIG:LXI:LAN:COUN? |
| Instrument S/W Revision | A.01.60 or later |

Identifier (Remote Only) Sets the string that is expected to arrive over the LAN for a given Trigger LAN Event to occur. The Identifier is variable to allow for easier system debugging.

| | |
|-------------------------|--|
| Mode | SA, IQ (Basic) |
| Remote Command | :TRIGger[:SEquence]:LXI:LAN[:SET]:IDENTifier "LANEVENT", "identifier" :TRIGger[:SEquence]:LXI:LAN[:SET]:IDENTifier? "LANEVENT" |
| Example | :TRIG:LXI:LAN:IDEN "LAN0", "debugstring" |
| State Saved | Saved in instrument state. |
| Range | Uppercase, Lowercase, Numeric, Symbol |
| Restriction and Notes | The maximum length of the string is 16 characters. Nothing happens if the LAN event does not exist. The default value is that the identifier is equivalent to the name of the LAN Event. |
| Instrument S/W Revision | A.01.60 or later |

Configure (Remote Only) Allows the configuration of some of the above parameters from a single SCPI command.

| | |
|-------------------------|---|
| Mode | SA, IQ (Basic) |
| Remote Command | :TRIGger[:SEquence]:LXI:LAN[:SET]:CONFigure "lanEvent", <enable>, <detection>, <delay>, <filter>, <identifier> |
| Example | :TRIG:LXI:LAN:CONF "LAN0", 1, FALL, 0.0, "ALL", "debugIdentifier" |
| Instrument S/W Revision | A.01.60 or later |

Alarm

Pressing this key when it is not selected selects the alarm system as the LXI trigger. A new sweep/measurement starts when the configured IEEE 1588 time occurs if the LXI trigger is selected as the active trigger (see [“LXI Trigger” on page 1246](#)). Pressing this key when it is already selected accesses the alarm source selection menu.

| | |
|---------|--------------------|
| Example | TRIG:ACP:SOUR ALAR |
|---------|--------------------|

| | |
|-----------------------------------|--|
| SCPI Status Bits/OPC Dependencies | The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig LXI Trigger |
| Mode | SA, IQ (Basic) |
| Preset | ON |
| State Saved | Saved in instrument state. |

Disable All This key causes all Alarms in the trigger alarm list to go into the disabled state.

(Enabled = OFF)

| | |
|-------------------------|---|
| Remote Command | :TRIGger[:SEQuence]:LXI:ALARm:DISable:ALL |
| Example | :TRIG:LXI:ALAR:DIS:ALL |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig LXI Trigger, Alarm |
| Mode | SA, IQ (Basic) |

Alarm List After selecting Alarm as the trigger source, you is presented with a list of possible alarms. Pressing an alarm (for example, "ALARM0") branches to the alarm setup menu.

| | |
|-------------------------|--|
| Remote Command | :TRIGger[:SEQuence]:LXI:ALARm:LIST? |
| Example | :TRIG:LXI:ALAR:LIST? Returns the complete list of Alarm events which is: "ALARM0" |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig LXI Trigger, Alarm |
| Mode | SA, IQ (Basic) |
| Preset | "ALARM0" |
| State Saved | Saved in instrument state. |

Date/Time Absolute alarm time sets an alarm for one specific time using the date and time of day (for example, 12/14/2007 at 11:45:15.3456). The Date and Time are represented in the instrument's local time. This is the only way to set an alarm from the front panel.

Epoch time is another type of absolute alarm time. A specific time is identified by the number of seconds it occurs after January 1, 1970 00:00:00 in International Atomic Time (TAI). Epoch Time is time zone invariant. Epoch time is only set via remote; see ["Epoch Time Value \(Remote Only\)" on page 1256](#).

Trigger

The date and time the alarm is scheduled to go off is noted on the branch key.

NOTE The Epoch Time Second and Epoch Time Fraction are the ultimate source of alarm information. The Absolute Time and Date may be changed from the front panel without being applied. When querying the Absolute Time and Date parameters from SCPI, if the Absolute Time and Date have not been applied (and therefore do not match the Epoch Time Second and Epoch Time Fraction), the string "(epoch time not set)" is added to the return value.

Instrument S/W Revision A.01.60 or later

Key Path Trig LXI Trigger, Alarm, <alarmEvent>

Mode SA, IQ (Basic)

Remote Command :TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:ABSolu
te "alarmEvent", "date", "time"

Example :TRIG:LXI:ALAR:TIME:ABS "ALARM0","2007/4/6", "15:45:02.123456"

Remote Command Notes "date" is a representation of the date the alarm should occur in the form of "YYYY/MM/DD" where:
YYYY is the four digit representation of year. (for example, 2007)
MM is the two digit representation of month. (for example. 01 to 12)
DD is the two digit representation of day. (for example, 01 to 28, 29, 30, or 31 depending on the month and year)
"time" is a representation of the time of day the alarm should occur in the form of "HH:MM:SS.SSSSSS" where:
HH is the two digit representation of the hour in 24 hour format
MM is the two digit representation of minute
SS.SSSSSS is a real representing seconds (for example 02.123456)

Instrument S/W Revision A.01.60 or later

Key Path Trig LXI Trigger, Alarm, <alarmEvent>,Time

Mode SA, IQ (Basic)

Preset Current date at initialization at 00:00:00.000000

State Saved Saved in instrument state.

Remote Command :TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:ABSolu
te? "alarmEvent"

| | |
|-------------------------|---|
| Example | :TRIG:LXI:ALAR:TIME:ABS? "ALARM0" This query returns data using the following format "YYYY/MM/DD HH:MM:SS.SSSSSS" If the Absolute time has been changed from the front panel, but has not been applied, the return value is of the form "YYYY/MM/DD HH:MM:SS.SSSSSS (epoch time not set)". |
| Remote Command Notes | <date> is a representation of the date the alarm should occur in the form of YYYY/MM/DD where: YYYY is the four digit representation of year. (for example, 2007) MM is the two digit representation of month. (for example. 01 to 12) DD is the two digit representation of day. (for example, 01 to 28, 29, 30, or 31 depending on the month and year) <time> is a representation of the time of day the alarm should occur in the form of HH:MM:SS.SSSSSS where: HH is the two digit representation of the hour in 24 hour format MM is the two digit representation of minute SS.SSSSSS is a real representing seconds (for example 02.123456) |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig LXI Trigger, Alarm, <alarmEvent>,Time |
| Mode | SA, IQ (Basic) |
| Preset | Current date at initialization at 00:00:00.000000 |
| State Saved | Saved in instrument state. |

Date The date the alarm should occur. All absolute alarm time parameters are set using the same SCPI command; however they each have their own front panel control.

When setting alarm values from the front panel, the new alarm time is not registered with the alarm system until the "Set" key is pressed.

| | |
|-------------------------|---|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig LXI Trigger, Alarm, <alarmEvent>,Time |
| Mode | SA, IQ (Basic) |
| Preset | Current date |
| State Saved | Saved in instrument state. |
| Range | current date – 214748/12/31. Values representing a time in the past result in an error. |

Time The time of the day, in the instrument's local time (this takes into account time zones and daylight savings time), the alarm should occur. This parameter is based on a 24 hour clock.

All absolute alarm time parameters are set using the same SCPI command; however they each have their own front panel control.

Trigger

When setting alarm values from the front panel, the new alarm time is not registered with the alarm system until the "Set" key is pressed.

| | |
|-------------------------|--|
| Restriction and Notes | Uses a 24 hour clock. Values representing a time in the past result in an error. Only valid time values are accepted. The <second> field accepts a decimal number, and is valid to the microsecond position. The <year>, <month>, <hour>, and <minute> fields all accept integers. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig LXI Trigger, Alarm, <alarmEvent>,Time |
| Mode | SA, IQ (Basic) |
| Preset | 00:00:00.000000 |
| State Saved | Saved in instrument state. |
| Range | 00:00:00.000000 – 23:59:59.999999 |

Apply (Front Panel Only) Causes the Absolute Alarm Time values to be converted into an Epoch time (see [“Epoch Time Value \(Remote Only\)” on page 1256](#)), compared to the current time, and sent to the Alarm Trigger subsystem. This key can only be pressed when the epoch time and the absolute time are out of sync.

| | |
|-------------------------|---|
| Restriction and Notes | Alarm times are settable to microsecond resolution. |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig LXI Trigger, Alarm, <alarmEvent>,Time |
| Mode | SA, IQ (Basic) |

Epoch Time Value (Remote Only) Sets the LXI Alarm Time. This represents the number of seconds after January 1, 1970 00:00:00, in TAI time, that the alarm should go off.

| | |
|-----------------------|---|
| Mode | SA, IQ (Basic) |
| Remote Command | :TRIGger[:SEquence] :LXI :ALARm[:SET] :TIME[:VALue] "alarmEvent" ,<seconds> , <fractionalSeconds> |
| Example | :TRIG:LXI:ALAR:TIME "ALARM0",123456.0 S, 0.123456 |
| Preset | Seconds: The number of whole seconds between Jan. 1, 1970 at 00:00:00 (in TAI time) and the current date at initialization at 00:00:00 (in TAI time) Fractional Seconds: 0 |
| State Saved | Saved in instrument state. |
| Range | Seconds: Epoch time of current date at 00:00:00 (in TAI time) – 253402300800 + number of seconds local time zone offset from UTC Fractional Seconds: 0.0 – 0.999999 |

| | |
|-------------------------|---|
| Restriction and Notes | Values representing a time in the past result in an error. |
| Instrument S/W Revision | A.01.60 or later |
| Mode | SA, IQ (Basic) |
| Remote Command | :TRIGger[:SEquence]:LXI:ALARm[:SET]:TIME[:VALue]? |
| Example | :TRIG:LXI:ALAR:TIME? |
| Preset | Seconds: The number of whole seconds between Jan. 1, 1970 at 00:00:00 (in TAI time) and the current date at initialization at 00:00:00 (in TAI time) Fractional Seconds: 0 |
| State Saved | Saved in instrument state. |
| Range | Seconds: Epoch time of current date at 00:00:00 (in TAI time) – 253402300800 + number of seconds local time zone offset from UTC Fractional Seconds: 0.0 – 0.999999 |
| Restriction and Notes | Values representing a time in the past result in an error. |
| Instrument S/W Revision | A.01.60 or later |

Epoch Time Seconds (Remote only) Sets the seconds portion of the LXI Alarm time. This represents the number of seconds after January 1, 1970 00:00:00 (in TAI time) that the alarm should go off.

Values must be in the form of whole seconds; decimal values result in an error.

| | |
|-------------------------|---|
| Mode | SA, IQ (Basic) |
| Remote Command | :TRIGger[:SEquence]:LXI:ALARm[:SET]:TIME:SEConds "alarmEvent" , <seconds> |
| Example | :TRIG:LXI:ALAR:TIME:SEC "ALARM0",123456.0 S |
| Preset | The number of whole seconds between Jan. 1, 1970 at 00:00:00 (in TAI time) and the current date at initialization at 00:00:00 (in TAI time) |
| State Saved | Saved in instrument state. |
| Range | Epoch time of current date at 00:00:00 (in TAI time) – 253402300800 + number of seconds local time zone offset from UTC |
| Restriction and Notes | Values representing a time in the past result in an error. Values containing a decimal portion result in an error. |
| Instrument S/W Revision | A.01.60 or later |
| Mode | SA, IQ (Basic) |
| Remote Command | :TRIGger[:SEquence]:LXI:ALARm[:SET]:TIME:SEConds? "alarmEvent" |
| Example | :TRIG:LXI:ALAR:TIME:SEC "ALARM0"? |

Trigger

| | |
|-------------------------|---|
| Preset | The number of seconds between Jan. 1, 1970 at 00:00:00 (in TAI time) and the current date at initialization at 00:00:00 (in TAI time) |
| State Saved | Saved in instrument state. |
| Range | Epoch time of current date at 00:00:00 (in TAI time) – 253402300800 + number of seconds local time zone offset from UTC |
| Restriction and Notes | Values representing a time in the past result in an error. Values containing a decimal portion result in an error. |
| Instrument S/W Revision | A.01.60 or later |

Epoch Time Fraction (Remote Only) Sets the sub-second value of the Epoch time.

| | |
|-------------------------|--|
| Mode | SA, IQ (Basic) |
| Remote Command | :TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:FRACti on "alarmEvent", <fractionalSeconds> |
| Example | :TRIG:LXI:ALAR:TIME:FRAC "ALARM0",0.123456 S |
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Range | 0.0 – 0.999999 |
| Restriction and Notes | Values representing a time in the past result in an error. |
| Instrument S/W Revision | A.01.60 or later |

| | |
|-------------------------|--|
| Mode | SA, IQ (Basic) |
| Remote Command | :TRIGger[:SEQuence]:LXI:ALARm[:SET]:TIME[:VALue]:FRACti on? "alarmEvent" |
| Example | :TRIG:LXI:ALAR:TIME:FRAC "ALARM0"? |
| Preset | 0 |
| State Saved | Saved in instrument state. |
| Min | 0.0 |
| Max | 0.999999 |
| Restriction and Notes | Values representing a time in the past result in an error. |
| Instrument S/W Revision | A.01.60 or later |

Relative Time (Remote Only) Sets the values of Epoch Time Seconds and Epoch Time Fraction by adding an offset to the time when the command is issued. For example, if the Relative Time command is issued with an argument of 60s, the alarm will occur 1 minute in the future.

| | |
|------|----------------|
| Mode | SA, IQ (Basic) |
|------|----------------|

| | |
|-------------------------|---|
| Remote Command | :TRIGger[:SEquence]:LXI:ALARm[:SET]:TIME[:VALue]:RELati ve "alarmEvent", <seconds> |
| Example | :TRIG:LXI:ALAR:TIME:REL "ALARM0",60.0s |
| Range | 0.0 – 1.7976931348623157 x 10308 (Max Double) |
| Instrument S/W Revision | A.01.60 or later |

Mode SA, IQ (Basic)

| | |
|-------------------------|---|
| Remote Command | :TRIGger[:SEquence]:LXI:ALARm[:SET]:TIME[:VALue]:RELati ve? "alarmEvent" |
| Example | :TRIG:LXI:ALAR:TIME:REL "ALARM0"? |
| Range | 0.0 – 1.7976931348623157 x 10308 (Max Double) |
| Instrument S/W Revision | A.01.60 or later |

Period Sets the amount of time that should elapse between alarms in a repeating alarm trigger.

| | |
|-------------------------|--|
| Remote Command | :TRIGger[:SEquence]:LXI:ALARm[:SET]:PERiod "alarmEvent", <seconds> |
| Example | :TRIG:LXI:ALAR:PER "ALARM0",1.2345 s |
| Restriction and Notes | A period of 0.0s effectively causes the trigger to occur only once, since all repetitions are fired simultaneously |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig LXI Trigger, Alarm, <alarmEvent> |
| Mode | SA, IQ (Basic) |
| Preset | 0.0 s |
| State Saved | Saved in instrument state. |
| Range | 0.0 – 1.7976931348623157 x 10308 (Max Double) |

| | |
|-------------------------|--|
| Remote Command | :TRIGger[:SEquence]:LXI:ALARm[:SET]:PERiod? "alarmEvent" |
| Example | :TRIG:LXI:ALAR:PER "ALARM0"? |
| Restriction and Notes | A period of 0.0s effectively causes the trigger to occur only once, since all repetitions are fired simultaneously |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig LXI Trigger, Alarm, <alarmEvent> |
| Mode | SA, IQ (Basic) |
| Preset | 0.0 s |

Trigger

| | |
|-------------|---|
| State Saved | Saved in instrument state. |
| Range | 0.0 – 1.7976931348623157 x 10308 (Max Double) |

Repetitions Sets the number of times a repeating alarm should fire once the initial alarm time has occurred.

Remote Command :TRIGger[:SEQuence]:LXI:ALARm[:SET]:REPeat
"alarmEvent", <repetitions>

Example :TRIG:LXI:ALAR:REP "ALARM0",10

Instrument S/W Revision A.01.60 or later

Key Path Trig LXI Trigger, Alarm, <alarmEvent>

Mode SA, IQ (Basic)

Preset 1

State Saved Saved in instrument state.

Range 1 – 2,147,483,647

Remote Command :TRIGger[:SEQuence]:LXI:ALARm[:SET]:REPeat?
"alarmEvent "

Example :TRIG:LXI:ALAR:REP "ALARM0",10

Instrument S/W Revision A.01.60 or later

Key Path Trig LXI Trigger, Alarm, <alarmEvent>

Mode SA, IQ (Basic)

Preset 1

State Saved Saved in instrument state.

Min 1

Max 2,147,483,647

Enabled If Enabled is set to ON and the trigger source is set to ALARm, this alarm causes the instrument to trigger.

If Enabled is set to OFF, this alarm is ignored

Remote Command :TRIGger[:SEQuence]:LXI:ALARm[:SET]:ENABled
"alarmEvent", ON|OFF|1|0

Example :TRIG:LXI:ALAR:ENAB "ALARM0",ON

Instrument S/W Revision A.01.60 or later

Key Path Trig LXI Trigger, Alarm, <alarmEvent>

Mode SA, IQ (Basic)

| | |
|-------------------------|--|
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | 1 0 |
| Remote Command | :TRIGger[:SEquence]:LXI:ALARm[:SET]:ENABled? "alarmEvent" |
| Example | :TRIG:LXI:ALAR:ENAB "ALARM0"? |
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig LXI Trigger, Alarm, <alarmEvent> |
| Mode | SA, IQ (Basic) |
| Preset | OFF |
| State Saved | Saved in instrument state. |
| Range | 1 0 |

Configure (Remote Only) Allows the configuration of some of the above parameters from a single SCPI command.

| | |
|-------------------------|---|
| Mode | SA, IQ (Basic) |
| Remote Command | :TRIGger[:SEquence]:LXI:ALARm[:SET]:CONFigure "alarmEvent", <enable>, <epochSeconds>, <epochFraction>, <period>, <repeat> |
| Example | :TRIG:LXI:ALAR:CONF "ALARM0",1,1000000.0,0.123456,1.2,3 |
| Instrument S/W Revision | A.01.60 or later |

Count (Remote Only) Returns the number of alarms in the LXI Trigger Alarm List.

| | |
|--------------------------|---|
| Remote Command: | :TRIGger1 TRIGger[:SEquence]:LXI:ALARm:COUNT? |
| Example: | :TRIG:LXI:ALAR:COUN? |
| Instrument S/W Revision: | A.01.60 or later |

Baseband I/Q

Pressing this key when it is not selected selects Baseband I/Q as the trigger. Pressing the key when it is already selected accesses the Baseband I/Q trigger type selection menu. The key is annotated to display which of the Baseband I/Q trigger types is currently selected.

| | |
|-------------------------|------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | Trig |
| Mode | SA, IQ (Basic) |

Trigger

State Saved No

I/Q Mag

Pressing this key, when it is not selected, selects the I/Q magnitude signal as the trigger. The I/Q Magnitude trigger condition is met when the I/Q magnitude crosses the I/Q magnitude trigger level. The magnitude is measured at the output of the main I/Q digital receiver.

Key Path Trigger, Baseband I/Q
Example TRIG:<meas>:SOUR IQM
Instrument S/W Revision A.01.60 or later

Trigger Level Sets a level for the I/Q magnitude trigger. When the signal crosses this level, with the chosen slope, the trigger occurs. If the specific Measurement displays the signal from the chosen sampling point a green line will be displayed to indicate the trigger level.

Key Path Trigger, Baseband I/Q, I/Q Mag
Remote Command :TRIGger[:SEquence]:IQMag:LEVel <ampl >
 :TRIGger[:SEquence]:IQMag:LEVel?
Preset -25 dBm
State Saved Saved in instrument state.
Range -200 dBm to 100 dBm
Remote Command Notes The I/Q reference impedance is used for converting between power and voltage.
Example TRIG:IQM:LEV -30 dBm
Instrument S/W Revision A.01.60 or later

Trig Slope Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path Trigger, Baseband I/Q, I/Q Mag
Remote Command :TRIGger[:SEquence]:IQMag:SLOPe POSitive | NEGative
 :TRIGger[:SEquence]:IQMag:SLOPe?
Preset POSitive
State Saved Saved in instrument state.
Example TRIG:IQM:SLOP POS
Instrument S/W Revision A.01.60 or later

Trig Delay Controls a time delay during which the analyzer will wait to begin a sweep after meeting the

trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

| | |
|-------------------------|--|
| Key Path | Trigger, Baseband I/Q, I/Q Mag |
| Remote Command | :TRIGger[:SEquence]:IQMag:DELay <time> :TRIGger[:SEquence]:IQMag:DELay? :TRIGger[:SEquence]:IQMag:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:IQMag:DELay:STATe? |
| Preset | 1 us OFF |
| State Saved | Saved in instrument state. |
| Range | -2.5 s to +10 s |
| Example | TRIG:IQM:DEL 10 ms TRIG:IQM:DEL:STAT ON |
| Instrument S/W Revision | A.01.60 or later |

I (Demodulated)

Pressing this key, when it is not selected, selects the main receiver's output I voltage as the trigger. The I (Demodulated) trigger condition is met when the I voltage crosses the I voltage trigger level.

| | |
|-------------------------|-----------------------|
| Key Path | Trigger, Baseband I/Q |
| Example | TRIG:<meas>:SOUR IDEM |
| Instrument S/W Revision | A.01.60 or later |

Trigger Level Sets a level for the I (Demodulated) trigger. When the signal crosses this level, with the chosen slope, the trigger occurs. If the specific Measurement displays the signal from the chosen sampling point a green line will be displayed to indicate the trigger level.

| | |
|-------------------------|---|
| Key Path | Trigger, Baseband I/Q, I (Demodulated) |
| Remote Command | :TRIGger[:SEquence]:IDEMod:LEVEl <voltage> :TRIGger[:SEquence]:IDEMod:LEVEl? |
| Preset | 0.25 V |
| State Saved | Saved in instrument state. |
| Range | -1 to 1 V |
| Example | TRIG:IDEM:LEV 0.5 V |
| Instrument S/W Revision | A.01.60 or later |

Trig Slope Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to

Trigger

trigger on a falling edge.

| | |
|-------------------------|---|
| Key Path | Trigger, Baseband I/Q, I (Demodulated) |
| Remote Command | :TRIGger[:SEquence]:IDEMod:SLOPe POSitive NEGative :TRIGger[:SEquence]:IDEMod:SLOPe? |
| Preset | POSitive |
| State Saved | Saved in instrument state. |
| Example | TRIG:IDEM:SLOP POS |
| Instrument S/W Revision | A.01.60 or later |

Trig Delay Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

| | |
|-------------------------|--|
| Key Path | Trigger, Baseband I/Q, I (Demodulated) |
| Remote Command | :TRIGger[:SEquence]:IDEMod:DELay <time> :TRIGger[:SEquence]:IDEMod:DELay? :TRIGger[:SEquence]:IDEMod:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:IDEMod:DELay:STATe? |
| Preset | 1 us OFF |
| State Saved | Saved in instrument state. |
| Range | -2.5 s to +10 s |
| Example | TRIG:IDEM:DEL 10 ms TRIG:IDEM:DEL:STAT ON |
| Instrument S/W Revision | A.01.60 or later |

Q (Demodulated)

Trigger Level Sets a level for the Q (Demodulated) trigger. When the signal crosses this level, with the chosen slope, the trigger occurs. If the specific Measurement displays the signal from the chosen sampling point a green line will be displayed to indicate the trigger level.

| | |
|-----------------------|---|
| Key Path | Trigger, Baseband I/Q, Q (Demodulated) |
| Remote Command | :TRIGger[:SEquence]:QDEMod:LEVel <voltage> :TRIGger[:SEquence]:QDEMod:LEVel? |
| Preset | 0.25 V |
| State Saved | Saved in instrument state. |

| | |
|-------------------------|---------------------|
| Range | -1 to 1 V |
| Example | TRIG:QDEM:LEV 0.5 V |
| Instrument S/W Revision | A.01.60 or later |

Trig Slope Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

| | |
|-------------------------|---|
| Key Path | Trigger, Baseband I/Q, Q (Demodulated) |
| Remote Command | :TRIGger[:SEquence]:QDEMod:SLOPe POSitive NEGative :TRIGger[:SEquence]:QDEMod:SLOPe? |
| Preset | POSitive |
| State Saved | Saved in instrument state. |
| Example | TRIG:QDEM:SLOP POS |
| Instrument S/W Revision | A.01.60 or later |

Trig Delay Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

| | |
|-------------------------|--|
| Key Path | Trigger, Baseband I/Q, Q (Demodulated) |
| Remote Command | :TRIGger[:SEquence]:QDEMod:DELay <time> :TRIGger[:SEquence]:QDEMod:DELay? :TRIGger[:SEquence]:QDEMod:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:QDEMod:DELay:STATe? |
| Preset | 1 us OFF |
| State Saved | Saved in instrument state. |
| Range | -2.5 s to +10 s |
| Example | TRIG:QDEM:DEL 10 ms TRIG:QDEM:DEL:STAT ON |
| Instrument S/W Revision | A.01.60 or later |

Input I

Pressing this key, when it is not selected, selects the I channel's ADC voltage as the trigger. The Input I trigger condition is met when the voltage crosses the trigger level.

| | |
|----------|-----------------------|
| Key Path | Trigger, Baseband I/Q |
| Example | TRIG:<meas>:SOUR IINP |

Trigger

Instrument S/W Revision A.01.60 or later

Trigger Level Sets a level for the Input I trigger. When the signal crosses this level, with the chosen slope, the trigger occurs.

Key Path Trigger, Baseband I/Q, Input I

Remote Command :TRIGger[:SEQuence]:IINPut:LEVel <voltage>
 :TRIGger[:SEQuence]:IINPut:LEVel?

Preset 0.25 V

State Saved Saved in instrument state.

Range -1 to 1 V

Example TRIG:IINP:LEV 0.5 V

Instrument S/W Revision A.01.60 or later

Trig Slope Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

Key Path Trigger, Baseband I/Q, Input I

Remote Command :TRIGger[:SEQuence]:IINPut:SLOPe POSitive | NEGative
 :TRIGger[:SEQuence]:IINPut:SLOPe?

Preset POSitive

State Saved Saved in instrument state.

Example TRIG:IINP:SLOP POS

Instrument S/W Revision A.01.60 or later

Trig Delay Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

Key Path Trigger, Baseband I/Q, Input I

Remote Command :TRIGger[:SEQuence]:IINPut:DELay <time>
 :TRIGger[:SEQuence]:IINPut:DELay?
 :TRIGger[:SEQuence]:IINPut:DELay:STATe OFF|ON|0|1
 :TRIGger[:SEQuence]:IINPut:DELay:STATe?

Preset 1 us
 OFF

State Saved Saved in instrument state.

Range -2.5 s to +10 s

| | |
|-------------------------|--|
| Example | TRIG:IINP:DEL 10 ms TRIG:IINP:DEL:STAT ON |
| Instrument S/W Revision | A.01.60 or later |

Input Q

Pressing this key, when it is not selected, selects the Q channel's ADC voltage as the trigger. The Input Q trigger condition is met when the voltage crosses the trigger level.

| | |
|-------------------------|-----------------------|
| Key Path | Trigger, Baseband I/Q |
| Example | TRIG:<meas>:SOUR QINP |
| Instrument S/W Revision | A.01.60 or later |

Trigger Level Sets a level for the Input Q trigger. When the signal crosses this level, with the chosen slope, the trigger occurs.

| | |
|-------------------------|---|
| Key Path | Trigger, Baseband I/Q, Input Q |
| Remote Command | :TRIGger[:SEQuence]:QINPut:LEVel <voltage> :TRIGger[:SEQuence]:QINPut:LEVel? |
| Preset | 0.25 V |
| State Saved | Saved in instrument state. |
| Range | -1 to 1 V |
| Example | TRIG:QINP:LEV 0.5 V |
| Instrument S/W Revision | A.01.60 or later |

Trig Slope Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

| | |
|-------------------------|---|
| Key Path | Trigger, Baseband I/Q, Input Q |
| Remote Command | :TRIGger[:SEQuence]:QINPut:SLOPe POSitive NEGative :TRIGger[:SEQuence]:QINPut:SLOPe? |
| Preset | POSitive |
| State Saved | Saved in instrument state. |
| Example | TRIG:QINP:SLOP POS |
| Instrument S/W Revision | A.01.60 or later |

Trig Delay Controls a time delay during which the analyzer will wait to begin a sweep after meeting the

Trigger

trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

| | |
|-------------------------|--|
| Key Path | Trigger, Baseband I/Q, Input Q |
| Remote Command | :TRIGger[:SEquence]:QINPut:DELay <time> :TRIGger[:SEquence]:QINPut:DELay? :TRIGger[:SEquence]:QINPut:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:QINPut:DELay:STATe? |
| Preset | 1 us OFF |
| State Saved | Saved in instrument state. |
| Range | -2.5 s to +10 s |
| Example | TRIG:QINP:DEL 10 ms TRIG:QINP:DEL:STAT ON |
| Instrument S/W Revision | A.01.60 or later |

Auxiliary Channel I/Q Mag

Pressing this key, when it is not selected, selects the Auxiliary Channel I/Q magnitude signal as the trigger. The Auxiliary Channel I/Q Magnitude trigger condition is met when the auxiliary receiver's I/Q magnitude output crosses the Auxiliary I/Q magnitude trigger level.

| | |
|-------------------------|-----------------------|
| Key Path | Trigger, Baseband I/Q |
| Example | TRIG:<meas>:SOUR AIQM |
| Instrument S/W Revision | A.01.60 or later |

Trigger Level Sets a level for the I/Q magnitude trigger. When the signal crosses this level, with the chosen slope, the trigger occurs.

| | |
|-------------------------|---|
| Key Path | Trigger, Baseband I/Q, Aux Channel I/Q Mag |
| Remote Command | :TRIGger[:SEquence]:AIQMag:LEVel <ampl > :TRIGger[:SEquence]:AIQMag:LEVel? |
| Preset | -25 dBm |
| State Saved | Saved in instrument state. |
| Range | -200 dBm to 100 dBm |
| Remote Command Notes | The I/Q reference impedance is used for converting between power and voltage. |
| Example | TRIG:AIQM:LEV -30 dBm |
| Instrument S/W Revision | A.01.60 or later |

Trig Slope Controls the trigger polarity. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

| | |
|-------------------------|---|
| Key Path | Trigger, Baseband I/Q, Aux Channel I/Q Mag |
| Remote Command | :TRIGger[:SEquence]:AIQMag:SLOPe POSitive NEGative :TRIGger[:SEquence]:AIQMag:SLOPe? |
| Preset | POSitive |
| State Saved | Saved in instrument state. |
| Example | TRIG:AIQM:SLOP POS |
| Instrument S/W Revision | A.01.60 or later |

Trig Delay Controls a time delay during which the analyzer will wait to begin a sweep after meeting the trigger criteria. You can use negative delay to pre-trigger the instrument in time domain or FFT.

| | |
|-------------------------|--|
| Key Path | Trigger, Baseband I/Q, Aux Channel I/Q Mag |
| Remote Command | :TRIGger[:SEquence]:AIQMag:DELay <time> :TRIGger[:SEquence]:AIQMag:DELay? :TRIGger[:SEquence]:AIQMag:DELay:STATe OFF ON 0 1 :TRIGger[:SEquence]:AIQMag:DELay:STATe? |
| Preset | 1 us OFF |
| State Saved | Saved in instrument state. |
| Range | -2.5 s to +10 s |
| Example | TRIG:AIQM:DEL 10 ms TRIG:AIQM:DEL:STAT ON |
| Instrument S/W Revision | A.01.60 or later |

Trigger Center Frequency This key sets the center frequency to be used by the auxiliary receiver.

| | |
|-----------------------|--|
| Key Path | Trigger, Baseband I/Q, Aux Channel I/Q Mag |
| Remote Command | :TRIGger[:SEquence]:AIQMag:CENTer <freq> :TRIGger[:SEquence]:AIQMag:CENTer? |
| Preset | 0 Hz |
| State Saved | Saved in instrument state. |
| Range | -40 MHz to 40 MHz |

Trigger

| | |
|-------------------------|--|
| Restriction and Notes | Trigger CF + 1/2 Trigger BW < Max Trigger CF – 1/2 Trigger BW > Min |
| Example | :TRIG:AIQM:CENT 10 MHz |
| Instrument S/W Revision | A.01.60 or later |

Trigger Bandwidth This key sets the information bandwidth used by the auxiliary receiver for the Auxiliary Channel I/Q Magnitude trigger.

| | |
|-------------------------|--|
| Key Path | Trigger, Baseband I/Q, Aux Channel I/Q Mag |
| Remote Command | :TRIGger [:SEquence] :AIQMag :BANDwidth <freq> :TRIGger [:SEquence] :AIQMag :BANDwidth? |
| Preset | Bandwidth option dependent: No Opt: 10 MHz Opt B25: 25 MHz Opt S40: 40 MHz |
| State Saved | Saved in instrument state. |
| Range | 10 Hz to Maximum |
| Restriction and Notes | The combined sample rate for the main and auxiliary receivers cannot exceed 100 MSa/sec. The bandwidth available to the Trigger BW is limited to what is available after the main receiver's bandwidth (Info BW, sometimes pre-FFT BW) is set. Because of this limitation, the Max is not always achievable. The combination of Trigger Center Freq and Trigger BW is also limited: Trigger CF + 1/2 Trigger BW < Max Trigger CF – 1/2 Trigger BW > Min |
| Example | :TRIG:AIQM:BAND 8 MHz |
| Instrument S/W Revision | A.01.60 or later |

Auto Trig

Sets the time that the analyzer will wait for the trigger conditions to be met. If they are not met after that much time, then the analyzer is triggered anyway.

| | |
|------------------------|--|
| Remote Command: | :TRIGger [:SEquence] :ATRigger <time> :TRIGger [:SEquence] :ATRigger? :TRIGger [:SEquence] :ATRigger :STATE OFF ON 0 1 :TRIGger [:SEquence] :ATRigger :STATE? |
| Example: | TRIG:ATR:STAT ON TRIG:ATR 100 ms |

| | |
|--------------------------|----------------------------|
| Preset: | Off, 100 ms |
| State Saved: | Saved in instrument state. |
| Min: | 1 ms |
| Max: | 100 s |
| Key Path: | Trig |
| Default Unit: | s |
| Instrument S/W Revision: | A.01.60 or later |

Trig Holdoff

Sets the holdoff time between triggers. When the trigger condition is satisfied, the trigger occurs, the delay begins, and the holdoff time begins. New trigger conditions will be ignored until the holdoff time expires. For a free-running trigger, the holdoff value is the minimum time between triggers.

Remote Command:

```
:TRIGger[:SEquence]:HOLDoff <time>
:TRIGger[:SEquence]:HOLDoff?
:TRIGger[:SEquence]:HOLDoff:STATe OFF|ON|0|1
:TRIGger[:SEquence]:HOLDoff:STATe?
```

Example:

```
TRIG:HOLD:STAT ON
TRIG:HOLD 100 ms
Supplemental Information
```

| | |
|--------------------------|----------------------------|
| Preset: | Off, 100 ms |
| State Saved: | Saved in instrument state. |
| Min: | 0 s |
| Max: | 0.5 s |
| Key Path: | Trig |
| Default Unit: | s |
| Instrument S/W Revision: | A.01.60 or later |

Trigger

View/Display

The View/Display key opens up the View menu for the current measurement. This menu includes the **Display** key for controlling items on the display. The Display functions are common across multiple Modes and Measurements and are described in this section. See each measurement description for information on data views that are unique to that Measurement.

Views are different ways of looking at data, usually different ways of looking at the same data, especially when the data represents a time record that is being digitally processed with an FFT and/or other digital signal processing algorithms. In some modes, like the Spectrum Analyzer mode, we are mostly concerned with swept spectrum analysis, and those views may represent different ways of looking at the same signal.

| | |
|-------------------------|------------------|
| Key Path | Front-panel key |
| Instrument S/W Revision | A.01.60 or later |

Display

This is a menu common to all measurements for configuring items on the display. Keys not relevant to a given measurement should be grayed out. Keys not relevant to any measurement in a mode should be blanked. The Display menu settings are specific to the measurement selected under the **Meas** key, except for those settings under the **System Display Settings** key.

| | |
|-------------------------|------------------|
| Key Path | View/Display |
| Instrument S/W Revision | A.01.60 or later |


Annotation

Turns on/off various parts of the display annotation. The annotation is divided up into four categories:

1. **Meas Bar:** This is the measurement bar at the top of the screen. It does not include the settings panel or the Active Function. Turning off the Meas Bar turns off the settings panel and the Active Function. When the Meas Bar is off, the graticule area expands to fill the area formerly occupied by the Meas Bar.
2. **Screen Annotation:** this is the annotation and annunciation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) This does NOT include the marker number or the N dB result. When off, the graticule expands to fill the entire graticule area.
3. **Trace annotation:** these are the labels on the traces, showing their detector (or their math mode).
4. **Active Function annotation:** this is the active function display in the meas bar, and all of the active function values displayed on keys.

See the figure below. Each type of annotation can be turned on and off individually.

View/Display

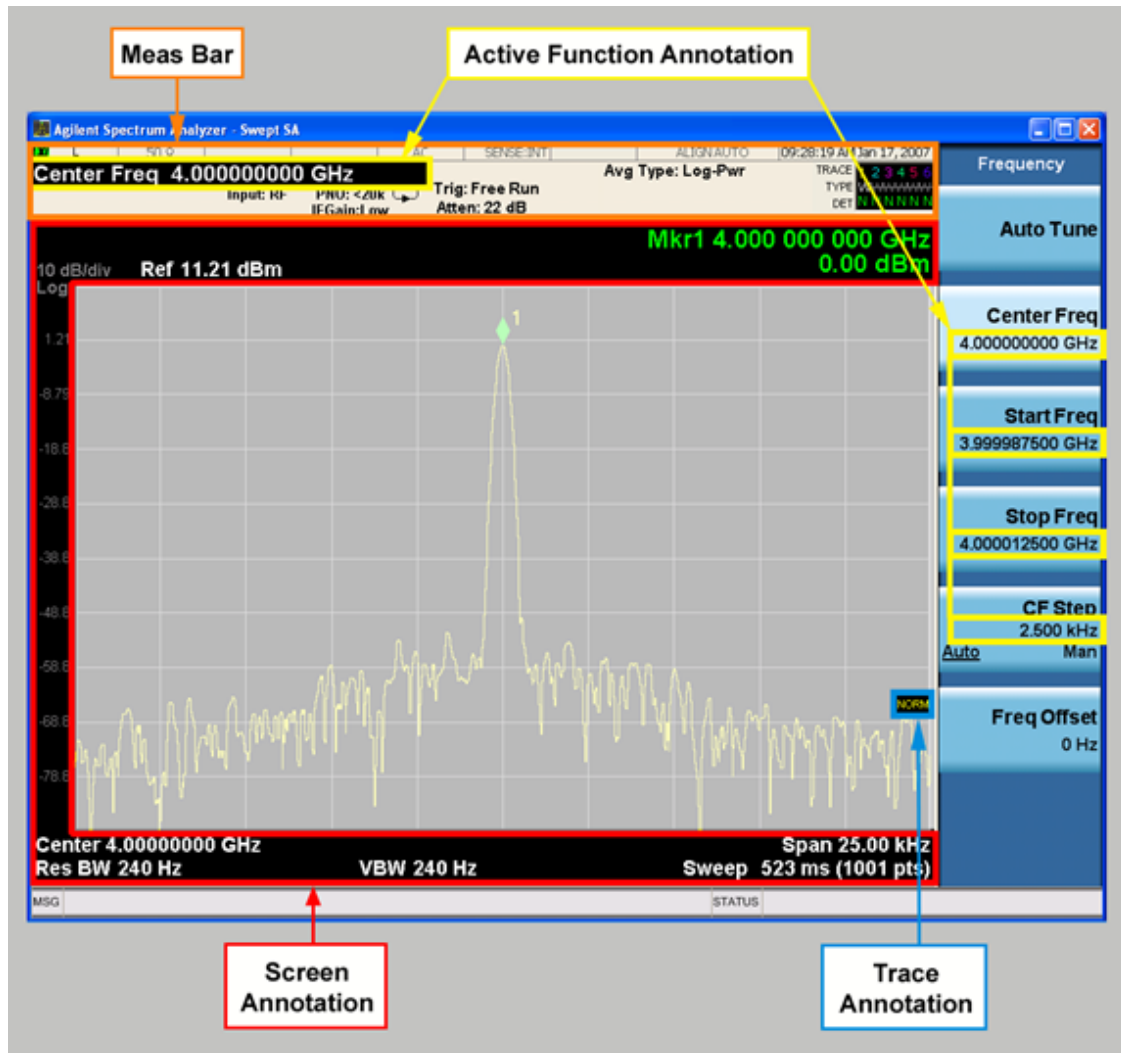

Key Path View/Display, Display

Instrument S/W Revision A.01.60 or later

Meas Bar On/Off This function turns the Measurement Bar on and off, including the settings panel. When off, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command: :DISPlay:ANNotation:MBAR[:STATE] OFF|ON|0|1
:DISPlay:ANNotation:MBAR[:STATE]?

Example: DISP:ANN:MBAR OFF

Dependencies/Couplings: Grayed out and forced to OFF when **System Display Settings, Annotation** is set to Off.

| | |
|--------------------------|--|
| Preset: | On This should remain Off through a Preset when System Display Settings, Annotation is set to Off. |
| State Saved: | Saved in instrument state. |
| Key Path: | View/Display, Display, Annotation |
| Instrument S/W Revision: | A.01.60 or later |

Screen This controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the y-axis annotation. This does NOT include marker annotation (or the N dB result). When off, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule as described in the Trace/Detector chapter.

| | |
|--------------------------|---|
| Remote Command: | :DISPlay:ANNOtation:SCREen[:STATe] OFF ON 0 1 :DISPlay:ANNOtation:SCREen[:STATe]? |
| Example: | DISP:ANN:SCR OFF |
| Dependencies/Couplings: | Grayed out and forced to OFF when System Display Settings, Annotation is set to Off. |
| Preset: | On This should remain Off through a Preset when System Display Settings, Annotation is set to Off |
| State Saved: | Saved in instrument state. |
| Key Path: | View/Display, Display, Annotation |
| Instrument S/W Revision: | A.01.60 or later |

Trace Turns on and off the labels on the traces, showing their detector (or their math mode) as described in the Trace/Detector section.

If trace math is being performed with a trace, then the trace math annotation will replace the detector annotation.


| | |
|--------------------------|--|
| Remote Command: | :DISPlay:ANNOtation:TRACe[:STATe] ON OFF 1 0 :DISPlay:ANNOtation:TRACe[:STATe]? |
| Example: | DISP:ANN:TRAC OFF |
| Preset: | Off |
| State Saved: | Saved in instrument state. |
| Key Path: | View/Display, Display, Annotation |
| Instrument S/W Revision: | A.01.60 or later |

Active Function Values On/Off Turns on/off the active function display in the Meas Bar, and all of the

View/Display

active function values displayed on the keys.

Note that all of the keys that have active functions have these numeric values blanked when this function is on. This is a security feature.

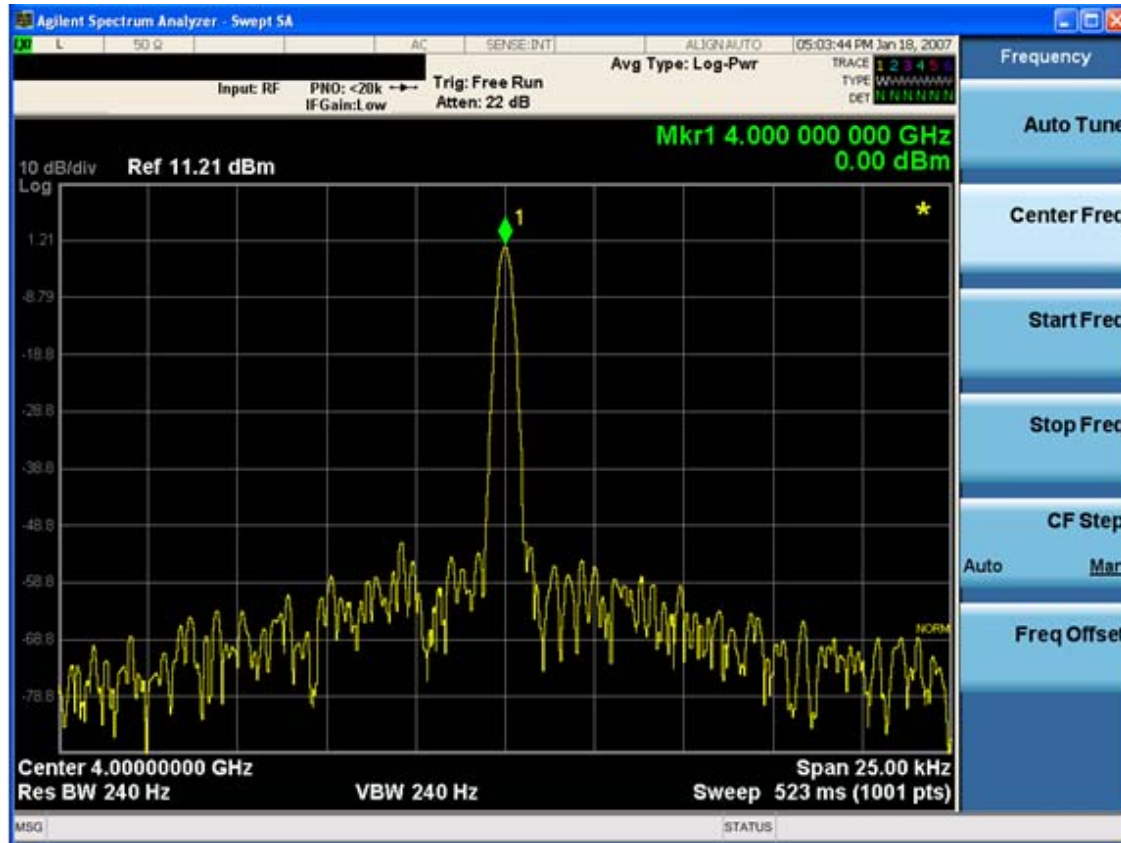

Remote Command: :DISPlay:ACTivefunc[:STATe] ON|OFF|1|0
 :DISPlay:ACTivefunc[:STATe]?

Example: DISP:ACT OFF

Dependencies/Couplings: Grayed out and forced to OFF when **System Display Settings, Annotation** is set to Off.

Preset: On
 This should remain Off through a Preset when **System Display Settings, Annotation** is set to Off

State Saved: Saved in instrument state.

Key Path: View/Display, Display, Annotation

Instrument S/W Revision: A.01.60 or later

Title

Displays menu keys that enable you to change or clear a title on your display.

| | |
|-------------------------|-----------------------|
| Key Path | View/Display, Display |
| Instrument S/W Revision | A.01.60 or later |

Change Title Writes a title into the "measurement name" field in the banner, for example, "Swept SA".

Press Change Title to enter a new title through the alpha editor. Press Enter or Return to complete the entry. Press ESC to cancel the entry and preserve your existing title.

The display title will replace the measurement name. It remains for this measurement until you press **Change Title** again, or you recall a state, or a Preset is performed. A title can also be cleared by pressing **Title, Clear Title**.

NOTE Notice the inclusion of the <measurement> parameter in the command below. Because each measurement remembers the Display Title, the command must be qualified with the measurement name. For the Swept SA measurement this is not the case; for backwards compatibility, no <measurement> parameter is used when changing the Display Title for the Swept SA measurement.

Remote Command :DISPlay:<measurement>:ANNotation:TITLe:DATA <string>
:DISPlay:<measurement>:ANNotation:TITLe:DATA?

Example DISP:ANN:TITL:DATA "This Is My Title"
This example is for the Swept SA measurement in the Spectrum Analyzer mode. The SANalyzer <measurement> name is not used.
DISP:ACP:ANN:TITL:DATA "This Is My Title"
This example is for Measurements other than Swept SA.
Both set the title to: This Is My Title

| | |
|-------------------------|-------------------------------------|
| Instrument S/W Revision | A.01.60 or later |
| Key Path | View/Display, Display, Title |
| Mode | All |
| Preset | No title (measurement name instead) |
| State Saved | Saved in instrument state. |

Clear Title Clears a title from the front-panel display. Once cleared, the title cannot be retrieved. After the title is cleared, the current Measurement Name replaces it in the title bar.

Example: DISP:ANN:TITL:DATA "" clears any existing title characters.

Remote Command Notes: Use the :DISPlay:ANNotation:TITLe:DATA <string> command with an empty string.

View/Display

| | |
|--------------------------|------------------------------|
| Preset: | Performed on Preset. |
| Key Path: | View/Display, Display, Title |
| Instrument S/W Revision: | A.01.60 or later |

Graticule

Pressing Graticule turns the display graticule On or Off. It also turns the graticule y-axis annotation on and off.

| | |
|--------------------------|--|
| Remote Command: | <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF ON 0 1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> |
| Example: | <code>DISP:WIND:TRAC:GRAT:GRID OFF</code> |
| Preset: | On |
| State Saved: | saved in instrument state |
| Key Path: | View/Display, Display |
| Instrument S/W Revision: | A.01.60 or later |

Display Line

Activates an adjustable horizontal line that is used as a visual reference line. The line's vertical position corresponds to its amplitude value. The value of the display line (for example, "-20.3 dBm") appears above the line itself on the right side of the display in the appropriate font.

The display line can be adjusted using the step keys, knob, or numeric keypad. The unit of the Display Line is determined by the **Y axis unit** setting under **Amplitude**. If more than one window has a display line, the display line of the selected window is controlled.

If the display line is off the screen, it shows as a line at the top/bottom of the screen with an arrow pointing up or down. As with all such lines (Pk Thresh, Trigger Level, etc.) it is drawn on top of all traces.

The display line is unaffected by Auto Couple.

| | |
|------------------------|---|
| Remote Command: | <code>:DISPlay:WINDow[1]:TRACe:Y:DLINe <amp;l></code> <code>:DISPlay:WINDow[1]:TRACe:Y:DLINe?</code> <code>:DISPlay:WINDow[1]:TRACe:Y:DLINe:STATe OFF ON 0 1</code> <code>:DISPlay:WINDow[1]:TRACe:Y:DLINe:STATe?</code> |
| Example: | <code>DISP:WIND:TRAC:Y:DLIN:STAT ON</code> <code>DISP:WIND:TRAC:Y:DLIN:STAT -32 dBm</code> |

| | |
|--------------------------|---|
| Preset: | Set the Display Line to Off and –25 dBm on Preset. When the Display Line goes from Off to On, if it is off screen, set it to either the top or bottom of screen, depending on which direction off screen it was. The Display Line's value does not change when it is turned off. |
| State Saved: | Saved in instrument state. |
| Min: | – (minus infinity) in current units |
| Max: | + (plus infinity) in current units |
| Key Path: | View/Display, Display |
| Default Unit: | Depends on the current selected Y axis unit |
| Instrument S/W Revision: | A.01.60 or later |

System Display Settings

These settings are "Mode Global" – they affect all modes and measurements and are reset only by **Restore Misc Defaults** or **Restore System Defaults** under System.

| | |
|-------------------------|--|
| Key Path | View/Display, Display, System Display Settings |
| Instrument S/W Revision | A.01.60 or later |

Annotation Local Settings/All Off This is a Mode Global override of the meas local annotation settings. When it is **All Off**, it forces **Screen Annotation, Meas Bar, Trace, and Active Function Values** settings to be **OFF** for all measurements in all modes. This provides the security based "annotation off" function of previous analyzers; hence it uses the legacy SCPI command.

When it is **All Off, Screen, Meas Bar, Trace, and Active Function Values** keys under the **Display, Annotation** menu are grayed out and forced to **Off**. When **Local Settings** has been selected, you are able to set the local annotation settings on a measurement by measurement basis.

| | |
|--------------------------|--|
| Remote Command: | :DISPlay:WINDow[1]:ANNotation[:ALL] OFF ON 0 1 :DISPlay:WINDow[1]:ANNotation[:ALL]? |
| Example: | :DISP:WIND:ANN OFF |
| Preset: | On (Set by Restore Misc Defaults) |
| State Saved: | Not saved in instrument state. |
| Key Path: | View/Display, Display, System Display Settings, Annotation |
| Instrument S/W Revision: | A.01.60 or later |

Theme This key allows you to change the Display theme. This is similar to the Themes selection under

View/Display

Page Setup and Save Screen Image. The four themes are detailed below.

| | |
|--------------------------|---|
| Remote Command: | :DISPlay:THEME TDCOLOR TDMonochrome FCOLOR FMONochrome :DISPlay:THEME? |
| Preset: | TDCOLOR (Set by Restore Misc Defaults) |
| State Saved: | Not saved in instrument state. |
| Key Path: | View/Display, Display, System Display Settings |
| Remote Command Notes: | TDCOLOR – 3D is the standard color theme with filling and shading TDMonochrome – is similar to 3D color, but only black is used FCOLOR – flat color is intended for inkjet printers to conserve ink. It uses a white background instead of black. FMONochrome – is like flat color, but only black is used |
| Example: | DISP:THEM TDM sets the display theme to 3D Monochrome. |
| Instrument S/W Revision: | A.01.60 or later |

Backlight Accesses the display backlight on/off keys. This setting may interact with settings under the Windows "Power" menu.

When the backlight is off, pressing ESC, TAB, SPACE, ENTER, UP, DOWN, LEFT, RIGHT, DEL, BKSP, CTRL, or ALT turns the backlight on without affecting the application. Pressing any other key will turn backlight on and could potentially perform the action as well.

| | |
|--------------------------|--|
| Remote Command: | :DISPlay:BACKlight ON OFF :DISPlay:BACKlight? |
| Preset: | ON (Set by Restore Misc Defaults) |
| Key Path: | View/Display, Display, System Display Settings |
| Instrument S/W Revision: | A.01.60 or later |

On Turns the display backlight on.

| | |
|--------------------------|---|
| Example: | DISP:BACK ON |
| Key Path: | View/Display, Display, System Display Settings, Backlight |
| Instrument S/W Revision: | A.01.60 or later |


Off Turns the display backlight off.

| | |
|--------------------------|---|
| Example: | DISP:BACK OFF |
| Key Path: | View/Display, Display, System Display Settings, Backlight |
| Instrument S/W Revision: | A.01.60 or later |

Backlight Intensity An active function used to set the backlight intensity. It goes from 0 to 100 where 100 is full on and 0 is off. This value is independent of the values set under the Backlight on/off key.

| | |
|--------------------------|---|
| Remote Command: | :DISPlay:BACKlight:INTensity <integer> :DISPlay:BACKlight:INTensity? |
| Example: | DISP:BACK:INT 50 |
| Preset: | 100 (Set by Restore Misc Defaults) |
| Min: | 0 |
| Max: | 100 |
| Key Path: | View/Display, Display, System Display Settings |
| Instrument S/W Revision: | A.01.60 or later |

Full Screen



When **Full Screen** is pressed the measurement window expands horizontally over the entire instrument display. The screen graticule area expands to fill the available display area.

It turns off the display of the key labels, however the menus and active functions still work. (Though it would obviously be very hard to navigate without the key labels displayed.) Pressing **Full Screen** again while Full Screen is in effect cancels Full Screen.

Note that the banner and status lines are unaffected. You can get even more screen area for your data display by turning off the Meas Bar (in the Display menu) which also turns off the settings panel.

Full Screen is a Meas Global function. Therefore it is cancelled by the **Preset** key.

| | |
|--------------------------|--|
| Remote Command: | :DISPlay:FSCREEN[:STATe] OFF ON 0 1 :DISPlay:FSCREEN[:STATe]? |
| Preset: | Off |
| State Saved: | Not saved in state. |
| Key Path: | Display |
| Instrument S/W Revision: | A.01.60 or later |

Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit so you can tell that the instrument is on. The display enable setting is mode global. The reasons for turning the display off are three:

View/Display

- To increase speed as much as possible by freeing the instrument from having to update the display
- To reduce emissions from the display, drive circuitry
- For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending the `SYSTEM:DEFAULTS MISC` command or the `DISPLAY:ENABLE ON` (neither `*RST` nor `SYSTEM:PRESET` enable the display.)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys or by sending the `SYSTEM:DEFAULTS MISC` command or the `DISPLAY:ENABLE ON` (neither `*RST` nor `SYSTEM:PRESET` enable the display.)

and you are using either the `SYSTEM:KLOCK` command or GPIB local lockout, then no front-panel key press will turn the display back on. You must turn it back on remotely.

| | |
|--------------------------|---|
| Remote Command: | <code>:DISPLAY:ENABLE OFF ON 0 1</code> <code>:DISPLAY:ENABLE?</code> |
| Example: | <code>DISP:ENAB OFF</code> |
| Dependencies/Couplings: | <code>DISP:ENAB OFF</code> turns Backlight OFF and <code>DISP:ENAB ON</code> turns Backlight ON. However, settings of Backlight do not change the state of <code>DISP:ENAB</code> |
| Preset: | On Set by <code>SYST:DEF MISC</code> , but Not affected by <code>*RST</code> or <code>SYSTEM:PRESET</code> . |
| State Saved: | Not saved in instrument state. |
| Instrument S/W Revision: | A.01.60 or later |