






Agilent U1241B and U1242B Handheld Digital Multimeter

Quick Start Guide



The following items are included with your multimeter:

- ✓ Silicone test leads , 19 mm probes , and 4mm probes 
- ✓ Printed Quick Start Guide
- ✓ Four 1.5 V AAA alkaline batteries
- ✓ Certificate of Calibration

If anything is missing or damaged, please contact the nearest Agilent Sales Office.


For more detailed information, please refer to the *Agilent U1241B and U1242B Handheld Digital Multimeter User's and Service Guide* on Agilent Web site (www.agilent.com/find/handheld-tools).

WARNING


Ensure the terminal connections are correct for that particular measurement selection before starting any measurement. To avoid damage to the device, do not exceed the input limit.



U1241B

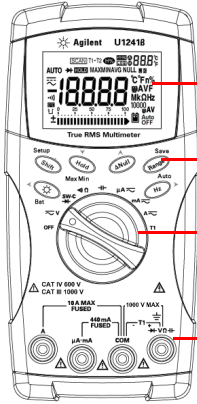

U1242B

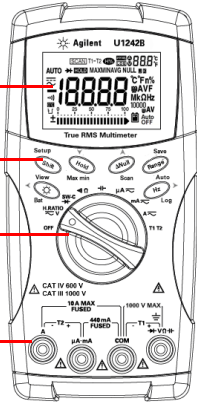

Annunciator


Keypad

Rotary Switch

Input terminal

Measurement Functions	Input Terminal		Overload Protection
Voltage	$\rightarrow \nabla \Omega \nabla \nabla$	COM	1000 V R.M.S
Diode			1000 V R.M.S
Resistance			< 0.3 A short circuit current
Capacitance			
Current (μA and mA)	$\mu\text{A.mA}$	COM	440 mA/1000 V 30 kA/fast-acting fuse
Current (A)	A	COM	11 A/1000 V 30 kA/fast-acting fuse
Temperature	+T1	-T1	1000 V R.M.S
Temperature (for U1242B)	+T2	-T2	440 mA/1000 V 30 kA/fast-acting fuse

Annunciator Display

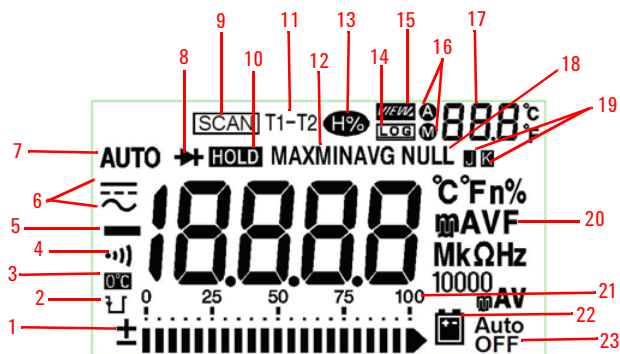


No.	Descriptions	No.	Descriptions
1	21-segment analog bar graph display	12	MINMAX Recording mode
2	Capacitor discharge indicator	13	Harmonic Ratio mode (for U1242B)
3	Cold junction of ambient temperature	14	Data logging mode (for U1242B)
4	Audible continuity for resistance and diode function	15	Data logging viewing mode (for U1242B)
5	Primary display 1888.8	16	Auto or manual data logging mode and datalog viewing mode
6	AC or DC measurement mode	17	Secondary display (temperature display)
7	Auto range	18	Null math function
8	Diode / Audible continuity	19	Thermocouple type for temperature measurement
9	T1, T2 and T1 – T2 temperature measurements scan (for U1242B)	20	Primary measurement units
10	Data hold	21	Measurement range
11	T1, T2* and T1 – T2* temperature measurements	22	Low battery indicator
		23	Auto power off indicator


*T2 temperature measurement and delta (T1 – T2) are only available for U1242B.









Functions and Features

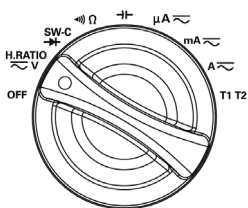



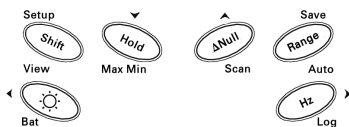





Rotary Switch




Keypad




Function	First level functions	Range	Second level functions (press )	Range
OFF	Turn off the meter			
H.RATIO 	DCV measurement	0.1 mV to 1000 V	ACV measurement	0.1 mV to 1000 V
			Harmonic ratio (for U1242B)	0.0% to 99.9%
SW-C 	Diode measurement		Switch counter measurement	
	Resistance measurement	0.1 Ω to 100 MΩ	Audible continuity measurement	
	Capacitance measurement	0.1 nF to 10 mF		
μA 	DCμA	0.1 μA to 10 mA	ACμA measurement	0.1 μA to 10 mA
mA 	DCmA	0.01 mA to 440 mA	ACmA measurement	0.01 mA to 440 mA
			mA% scale	
A 	DCA	0.001 A to 10 A	ACA measurement	0.001 A to 10 A
T1	T1 temperature	-40 °C to 1000 °C	T2 and T1-T2 temperature measurements (for U1242B)	-40 °C to 1000 °C

Action	Steps
Turns ON backlight	Press  .
Checks battery capacity	Press and hold  for >1 s.
Freezes the measured value	Press  .
Starts MIN/MAX/AVG recording	Press and hold  for >1 s.
Offsets the measured value	Press  .
Scan the measured temperature (for U1242B only)	Press and hold  for > 1 s.
Changes the measuring range	Press  .
Turns on auto range	Press and hold  for > 1 s.
Measures frequency for AC signal	Press  .
Starts manual data logging	Press and hold  for > 1 s.

Tilt Stand

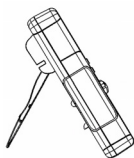

Tilt stand at 60 °



Tilt stand at 30 °

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

Safety Information

The Agilent U1241B and U1242B are safety-certified in compliance with the following safety and EMC requirements:

- IEC 61010-1:2001 / EN61010-1:2001
- USA: UL 61010-1:2004
- Canada: CSA C22.2 No. 61010-1:2004
- IEC 61326-1:2005/ EN 61326-1:2006
- Canada: ICES/NMB-001:2004
- Australia/New Zealand: AS/NZS CISPR11:2004

Safety Symbols

	Earth (ground) terminal
	Equipment protected throughout by double insulation or reinforced insulation
	Caution, risk of electric shock
	Caution, risk of danger (refer to the instrument manual for specific Warning or Caution information)
CAT III 1000 V	Category III 1000 V overvoltage protection
CAT IV 600 V	Category IV 600 V overvoltage protection

**For further safety information details, refer to the
Agilent U1241B and U1242B Handheld Digital Multimeter
User's and Service Guide.**

Printed in Malaysia



U1241-90055

First Edition, December 1, 2009

© Agilent Technologies, Inc., 2009



Agilent Technologies