

---

# Installation Guide

Publication number E5361-92001  
June 1997


© Copyright Hewlett-Packard Company 1997  
All Rights Reserved

---

## Elastomeric Probing System for 144-Pin 0.65 mm QFP

---

## Installation at a Glance

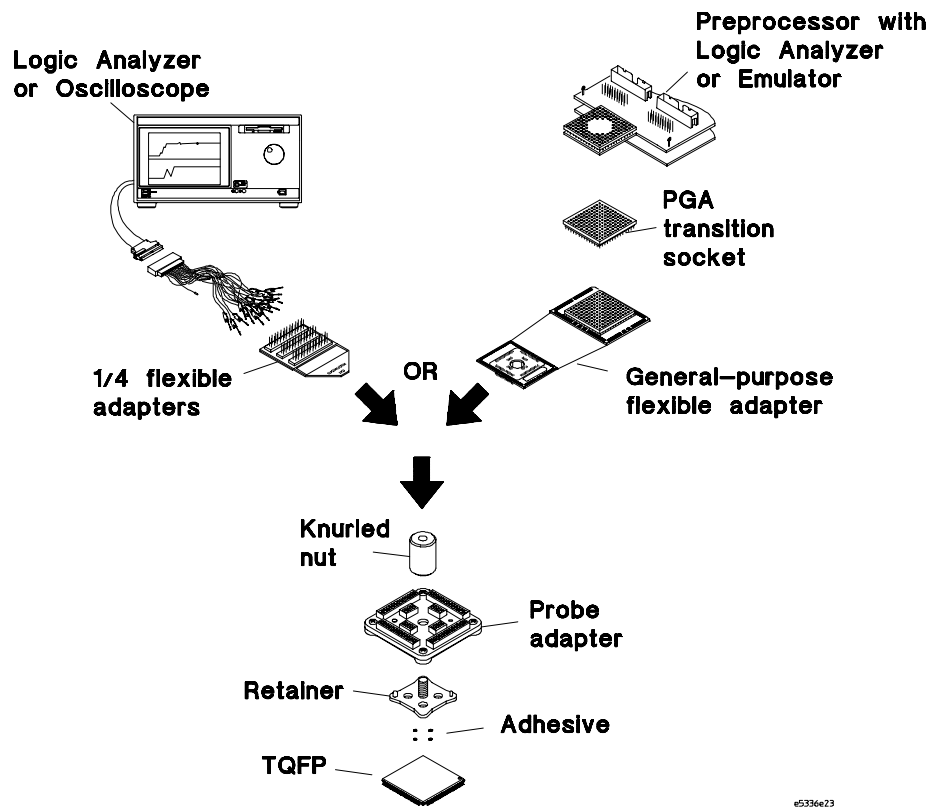

This Installation Guide explains how to use Hewlett-Packard's advanced probing system for 0.65 mm pitch Quad Flat Pack (QFP) surface-mounted integrated circuits. This probing system provides a quick and reliable connection from these devices to Hewlett-Packard oscilloscopes, logic analyzers, and emulators.

This information also explains how to use optional accessories that will enhance the adapter's use in particular probing situations. Also, drawings are included that instruct you in laying out printed circuit boards with the proper component spacing to allow correct use of the adapter.

---

## In This Book

<b>1</b>	<b>Installing the probe adapter</b>	
<b>2</b>	<b>Installing optional flexible adapters</b>	
<b>3</b>	<b>Reference</b>	

This manual is organized in three chapters.

Chapter 1 contains the procedure for installing the probe adapter onto your QFP.

Chapter 2 contains the instructions for installing optional flexible adapters.

Chapter 3 contains reference information such as pinout and cross-reference maps, additional or replaceable parts lists, retainer and adhesive removal.





This chapter includes the procedure for installing the probe adapter onto your QFP. The major steps are:

- 1 Prepare to attach the retainer to the QFP 1-3
- 2 Test the alignment before adhering the retainer 1-4
- 3 Adhere the retainer to your QFP 1-7
- 4 Install the probe adapter 1-10


---

## Installation of the Elastomeric Probe Adapter

---

# To install the QFP elastomeric probe adapter

You should have the items shown in the following illustration to install the probe adapter. Installation will take about 20 minutes.

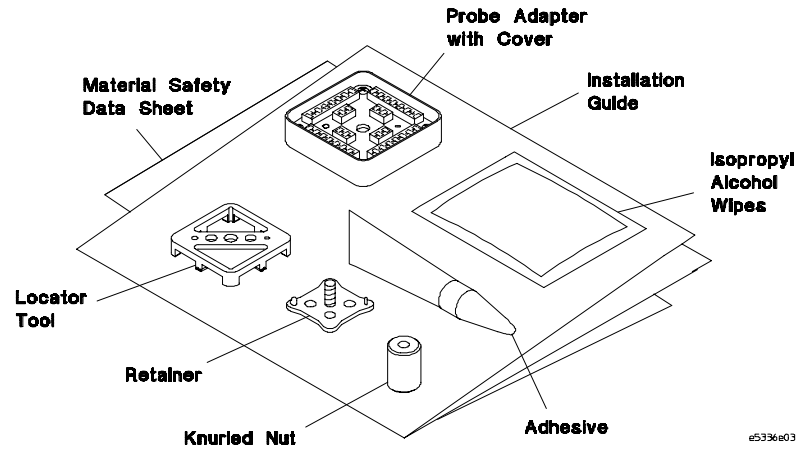

## Electrical Characteristics


Operating Voltage	< 40 V (dc + Peak ac)
Operating Current	0.5 Amps Maximum
Insulation Resistance	> 100 M $\Omega$

## Model Parameters:

Capacitance between Contacts	0.5 pF (Typical)
Self-Inductance	10 nH (Typical)
Contact Resistance	< 0.25 $\Omega$ (Typical)
Operating Bandwidth	dc - 750 MHz (Typical)


## Environmental Characteristics

Operating Temperature	0 $^{\circ}$ C to 55 $^{\circ}$ C
Maximum Operating Humidity	75% Relative Humidity




## Prepare to attach the retainer to the QFP

- 1 Check the area around the package to be probed. The minimum required clearance from the package and any components is shown in the illustration below. The probe will work within the parameters shown.

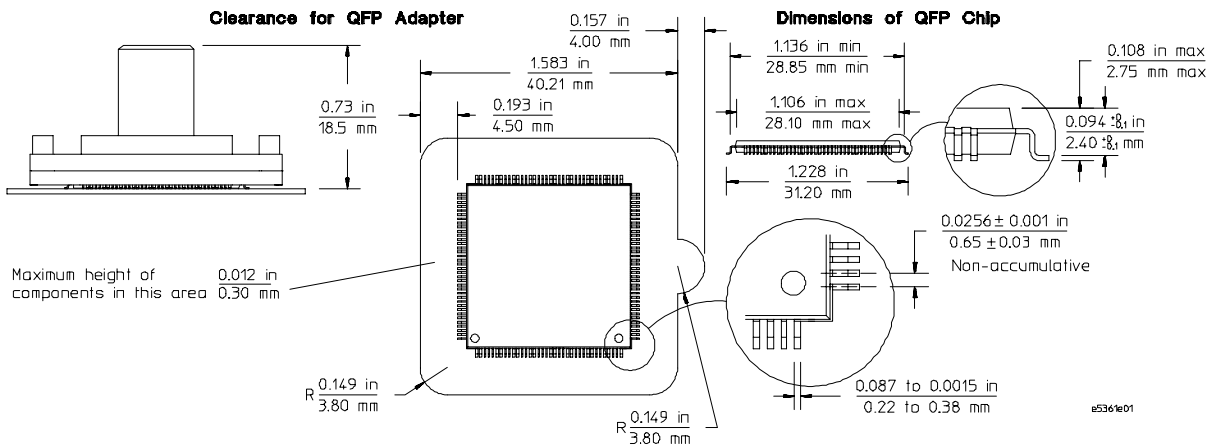

- 2 Assemble the locator and the retainer, using the knurled nut to hold them together.

Align the big and little pins of the retainer with the big and little holes of the locator tool.

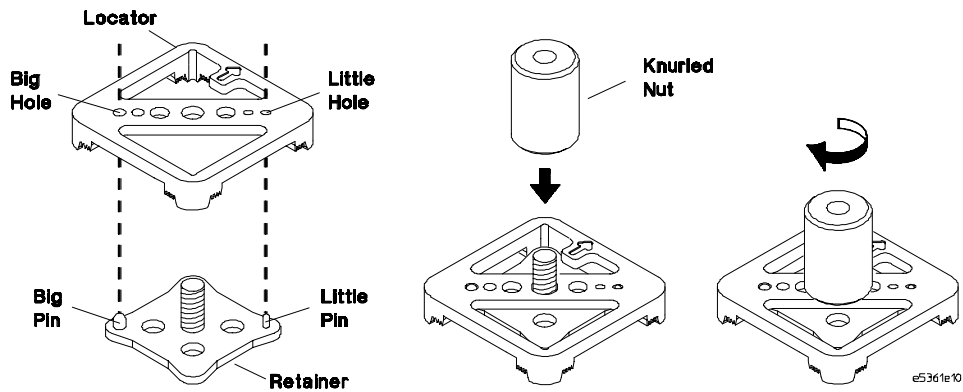

---

## Test the alignment before adhering the retainer

---

### CAUTION


Turn off the power to your QFP when using the metal locator tool. Failure to do so could cause damage to your IC.

---

### CAUTION


Use grounded wrist straps and mats when installing or performing any service to your probe adapter. Electrostatic discharge can damage electronic components.

- 1 Align the little pin corner of the assembled locator tool with the pin 1 corner on the QFP.

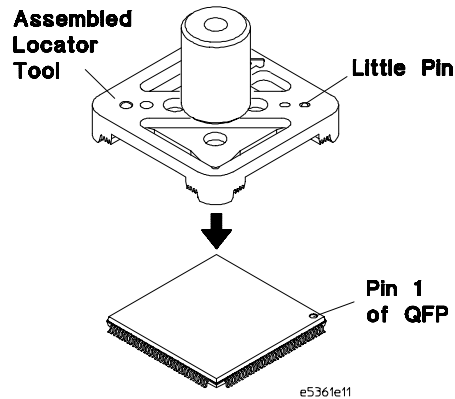


It is possible that the bump on the side of the probe adapter may interfere with components on your target system if the locator is mounted as described in this section. If so, then rotate the locator tool. Keep in mind as you proceed with the following steps that your pin 1 location will be different from the instructions in this manual.







- 2 Place the assembled locator tool on the QFP, making sure that it aligns squarely. You will feel the teeth drop between the QFP legs when it is aligned.

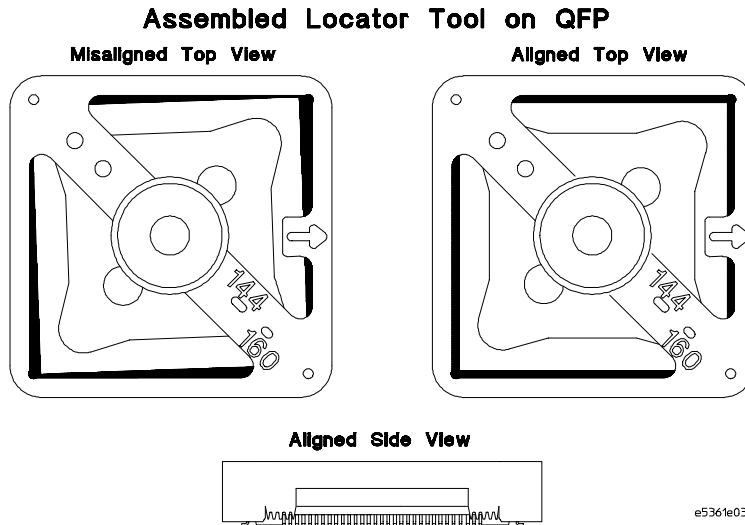

- 3 Press down on the middle of both sides of the locator tool.  
If the tool is down far enough, it will not rock when pressed on the sides.

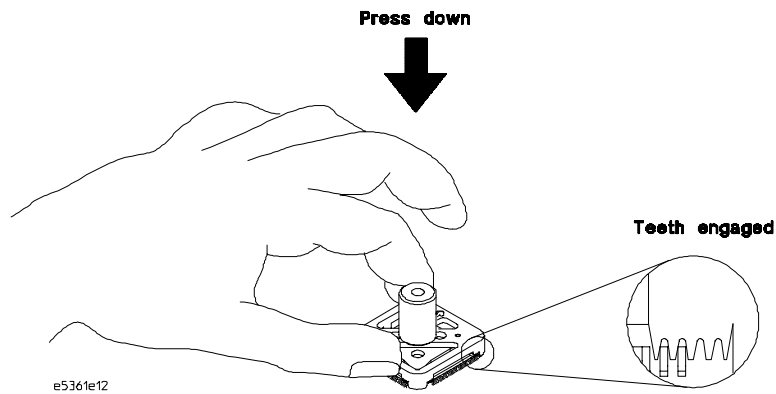

- 4 Remove the assembled locator tool and prepare surfaces before applying adhesive.
  - a Use a single edged razor (or equivalent) to remove foreign material, such as stickers or adhesive, from the top surface of the QFP.
  - b Remove any remaining debris from the top surface and legs of the QFP with precision dusting cleaner (also known as inert dusting gas or compressed air in a can).
  - c Clean the the bottom of the retainer, and the top surface and legs of the QFP by wiping with an Isopropyl Alcohol wipe provided in the Retainer Kit. Do not use other cleaners or solvents.

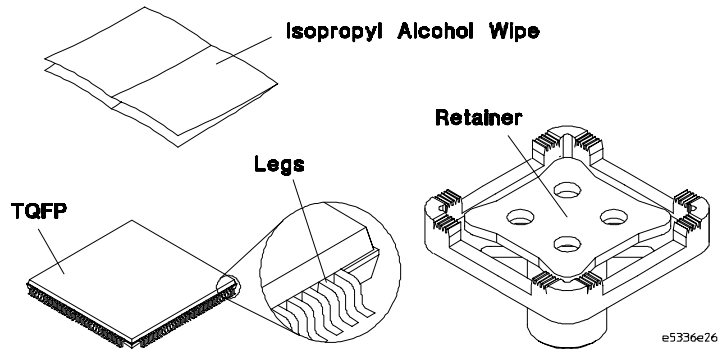



---

## Adhere the retainer to your QFP

---

### CAUTION

You will use adhesive to attach a retainer to the top of the QFP. The retainer ensures precise alignment between the probe adapter and the device. Read the following steps to understand the process of applying adhesive before doing them.

---

### CAUTION

Make sure you can control the amount of adhesive. Excess adhesive can cause problems, so it is better to use too little than too much. Follow the manufacturer's recommended temperature parameters for the adhesive.


---

### WARNING

Read the Material Safety Data Sheet enclosed for handling precautions on the Loctite Prism 405 White Toughened Instant Adhesive or call Loctite Corporation at (203) 571-5100.

Cyanoacrylate adhesive is a very fast setting and strong adhesive. It bonds human tissue including skin in seconds. Experience has shown that accidents due to cyanoacrylates are handled best by passive, nonsurgical first aid. Treatment of specific types of accidents are given in the data sheet.

- 1 Apply four small drops of adhesive to the underneath side of the retainer as shown.

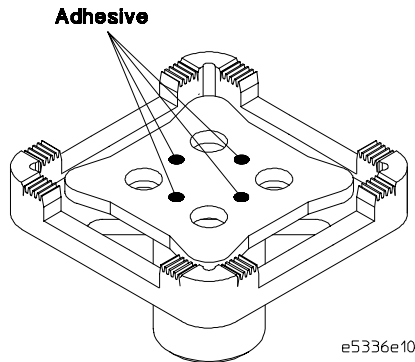


Installation of the Elastomeric Probe Adapter  
Adhere the retainer to your QFP

**CAUTION**


Turn off the power to your QFP when using the metal locator tool. Failure to do so could cause damage to your IC


- 2 Place the locator tool on top of the QFP as you did to test the alignment.

The adhesive on the retainer will not touch the QFP until the next step and the adhesive will not solidify until the retainer and QFP touch, so there is plenty of time to adjust the tool if necessary.

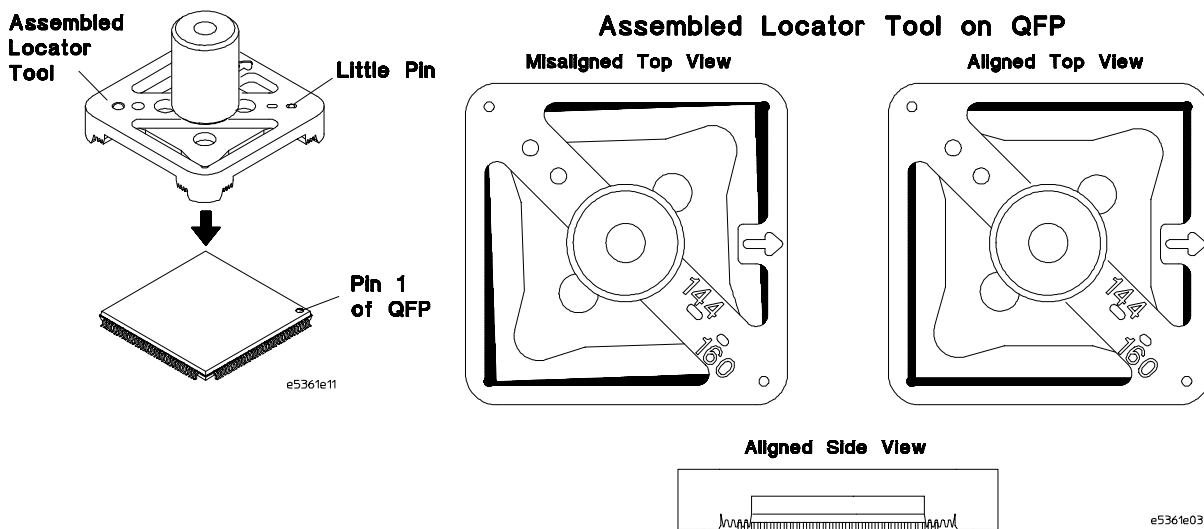


- 3 Hold down on the sides of the locator tool and loosen the knurled nut two turns. Continue to hold down on the sides of the locator tool and press down on the knurled nut to drop the retainer onto the top of the QFP. Hold for 30 seconds.

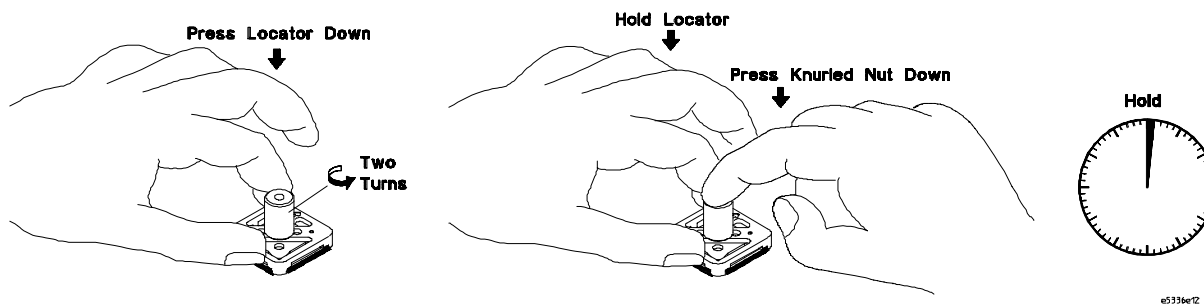





4 Wait 15 minutes for the adhesive to cure.

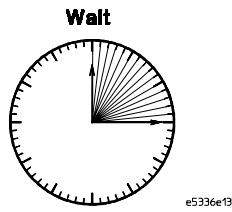

5 Remove the locator tool, by completely unscrewing the knurled nut and lifting the locator off the QFP.

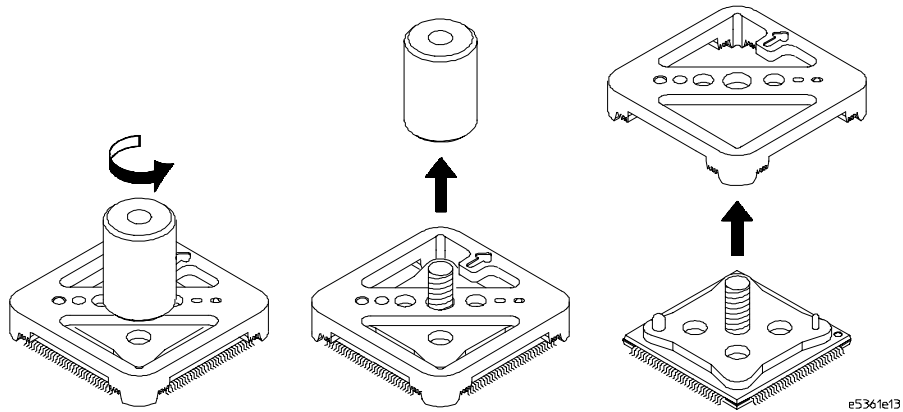

6 Remove any adhesive that leaked out the edges of the retainer, using a knife, so that the probe adapter will seat properly.

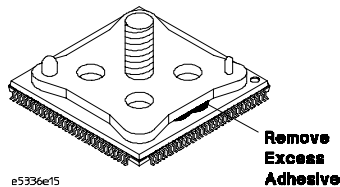


If a retainer ever breaks off of the QFP, a new retainer can be re-attached. There are some contaminants that are not removed with Isopropyl Alcohol in preparing the surfaces before adhering. If a retainer breaks off, the adhesive from the initial installation usually removes any remaining contamination. The bond strength of a second retainer is usually higher than the bond strength of the first. Repeat all steps in this section to re-attach a new retainer.

---

## Install the probe adapter


- 1 If the probe adapter is already attached to the preprocessor or emulator, go to the preprocessor or emulator documentation for installation instructions.
- 2 Remove the cover.  
When you store the probe adapter, put the cover back on to protect the conductive elastomer from dust or damage.

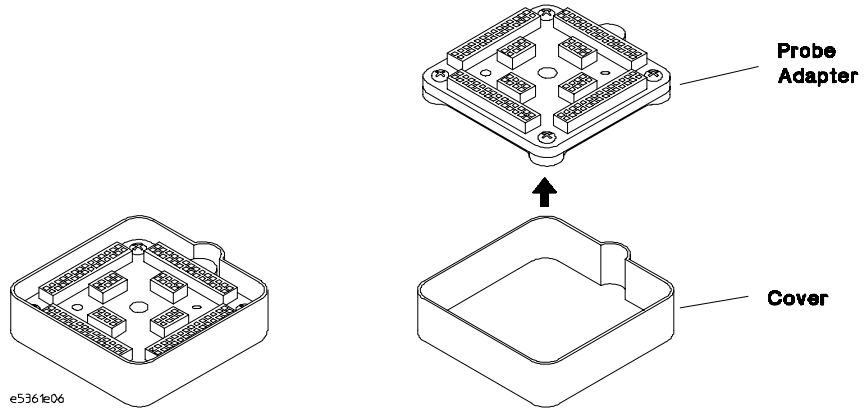


---

### CAUTION

Do not touch the contact area on the conductive elastomer, which is on the bottom of the probe adapter. Contamination or damage to the conductive elastomer will cause shorts or poor contact.

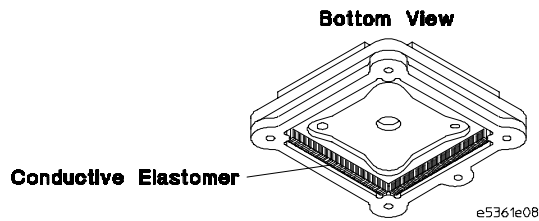




- 3 Install the elastomeric probe adapter on the retainer.
  - a Place the probe adapter over the retainer so that the threaded stud passes through the center hole of the adapter, and the dowel pins of the retainer enter the holes in the adapter.
  - b Avoid touching the elastomers to the threaded stud or dowel pins of the retainer as the probe is inserted.
  - c Make sure the dowels on the retainer are inserted in the holes on the probe adapter and that it is laying flat against the QFP before tightening the nut.
- 4 Turn the knurled nut until it stops.

---

**CAUTION**

---

Do not over-tighten the knurled nut. Over-tightening the nut will make it difficult to remove.

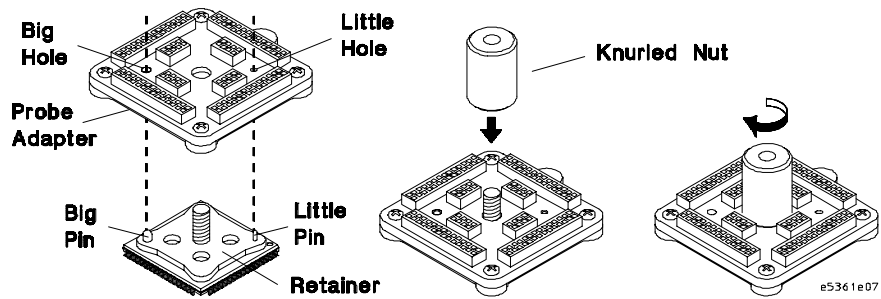

A pinout map showing the pin numbers of the probe adapter and your QFP is in the Reference chapter of this document.







This chapter includes procedures to install optional flexible adapters for use with Hewlett-Packard logic analyzers, oscilloscopes, and emulators.

- The HP E5340A 1/4 flexible adapters, 2-2
- The HP E5338A general-purpose flexible adapter, 2-5

---

## Installation of Optional Flexible Adapters

---

## The HP E5340A 1/4 flexible adapters

The HP E5340A 1/4 flexible adapters can be used with any Hewlett-Packard oscilloscope or logic analyzer. They provide a flexible mechanical interface while maintaining the electrical performance to the probe tip. They allow you to probe selected pins or every pin on your QFP. Use one to four flexible adapters depending on your needs.

---

### Performance characteristics of the HP E5340A 1/4 flexible adapters

---

**Elastomeric Probe Adapter** HP E5361A 144-pin 0.65 mm

#### Electrical Characteristics


Operating Voltage	< 40 V (dc + Peak ac)
Operating Current	0.5 Amps Maximum
Insulation Resistance	> 100 M $\Omega$

#### Model Parameters

Pin-to-Ground Capacitance	3 pF Typical First Row 4 pF Typical Second Row 6 pF Typical Third Row
Pin-to-Pin Capacitance	2 pF Typical
Self-Inductance	15 nH Typical First Row 25 nH Typical Second Row 35 nH Typical Third Row
Operating Band width	350 Mhz Typical

#### Environmental Characteristics

Operating Temperature	0 °C to 55 °C
Maximum Operating Humidity	75% Relative Humidity

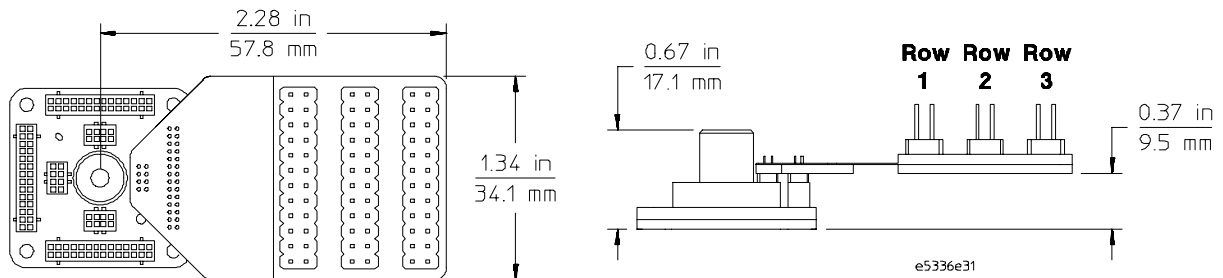



**To connect an HP logic analyzer or oscilloscope using a 1/4 flexible adapter**

- 1 Power-off the preprocessor, logic analyzer, and target system.
- 2 Follow the steps in chapter 1 to install the elastomeric probe adapter.

**CAUTION**


**Damage to the QFP.** Once the 1/4 flexible adapter has had its common pins connected to ground it should not be used in any other quadrant of the elastomeric probe adapter or in any other device. Remove the solder connecting the common pins to ground before reuse.

- 3 Apply a small amount of solder across the gap between the signal pins that are ground on your device under test and the common pins of the 1/4 flexible adapter. This will facilitate the connection of the HP logic analyzer or oscilloscope probe ground.


All of the common pins are connected together through a grid on the bottom of the flexible adapter as shown below.

The pin numbers printed on the flexible adapter correspond to the pins in one quadrant of the probe adapter. Refer to the pinout and cross-reference maps in the Reference chapter of this document when using multiple 1/4 flexible adapters.

**Top View of 1/4 Flex**

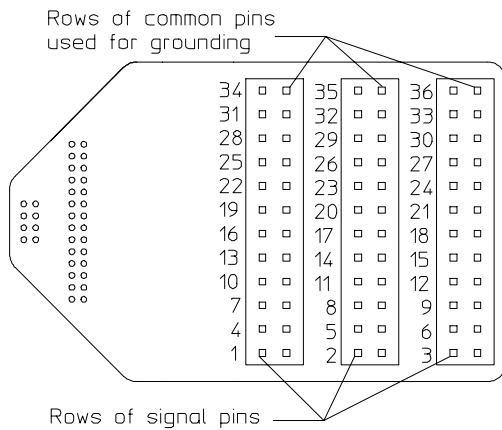

**Bottom View of 1/4 Flex**

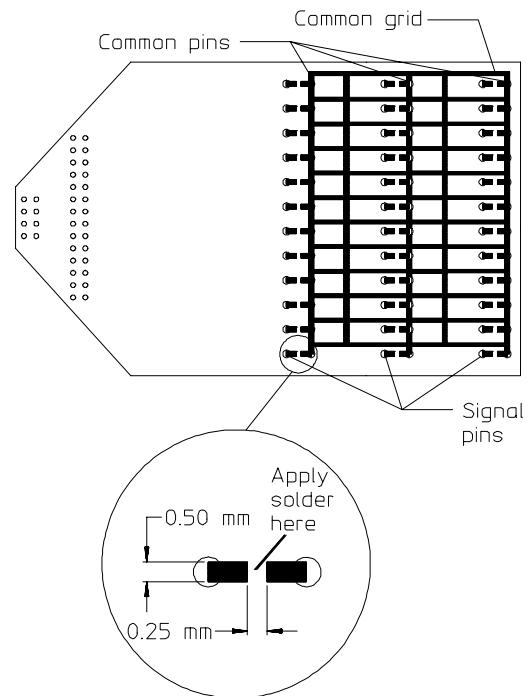

e5361e05


---

**CAUTION**


---

To prevent pin damage and ensure a proper connection, make sure the pins of the flexible adapter are aligned and seated correctly in the sockets on the probe adapter.

- 4 Plug 1 to 4 flexible adapters into the sockets on the top of the probe adapter assembly as shown in the following illustration.

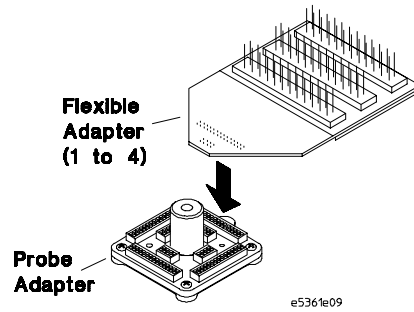

- 5 Connect the appropriate logic analyzer or oscilloscope probe to the correct circuit as indicated by the adapter pin numbers.

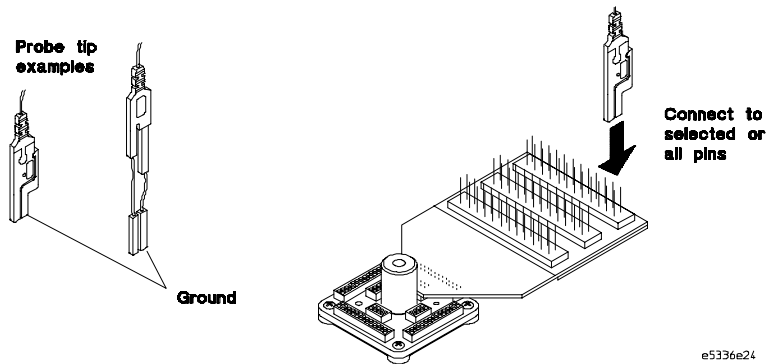


## The HP E5338A general-purpose flexible adapter

The HP E5338A general-purpose adapter gives you access to predefined processor support for a Hewlett-Packard preprocessor and logic analyzer or emulator.

### Performance characteristics of the HP E5338A general-purpose flexible adapter

<b>Elastomeric Probe Adapter</b>		HP E5361A 144-pin 0.65 mm
<b>Electrical Characteristics</b>	Signal loading per line in addition to emulator or preprocessor load	25 pF maximum
	Maximum operating frequency	25 MHz
<b>Environmental Characteristics</b>	Operating Temperature	0 °C to 55°C
	Maximum Operating Humidity	75% Relative Humidity

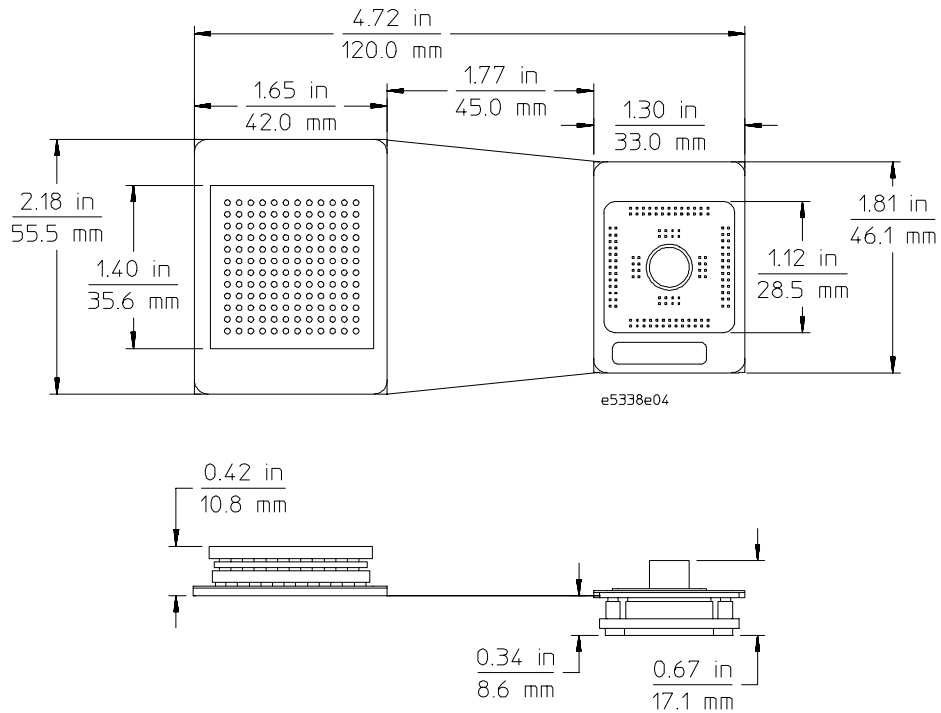

**To connect an HP logic analyzer or oscilloscope using a general-purpose flexible adapter**

- 1 Power-off the target system, preprocessor and logic analyzer, or emulator.
- 2 Follow the steps in chapter 1 to install the elastomeric probe adapter.

---

**CAUTION**

---

**Serious equipment damage.** Ensure that the preprocessor or emulator probe is aligned with the proper pins when connecting to the general-purpose flexible adapter. Serious equipment damage can result from improper connection. The final connection should match the orientation you select from your HP preprocessor or emulator manual.

- 3 Refer to the orientation illustration in your HP preprocessor or emulator manual to select one of four possible orientations.

The general-purpose flexible adapter can be attached to the probe adapter in one of four orientations to avoid interfering with tall components on the target system.

---

**CAUTION**

---

To prevent pin damage and ensure a proper connection, make sure the pins of the preprocessor probe, transition board, general-purpose flexible adapter, and elastomeric probe adapter are aligned and seated correctly in the sockets.

- 4 Connect the preprocessor, transition board, general-purpose flexible adapter, and elastomeric probe adapter using the orientation selected in the previous step.


Refer to the pinout and cross-reference maps in the Reference chapter of this document for pin numbers on the general-purpose flexible adapter.

**See Also**

Refer to your HP preprocessor or emulator manual for information on connecting to and using the preprocessor or emulator.

**Example**

The following illustration shows one of four possible orientations for connecting the QFP elastomeric probing system using the general-purpose flexible adapter.

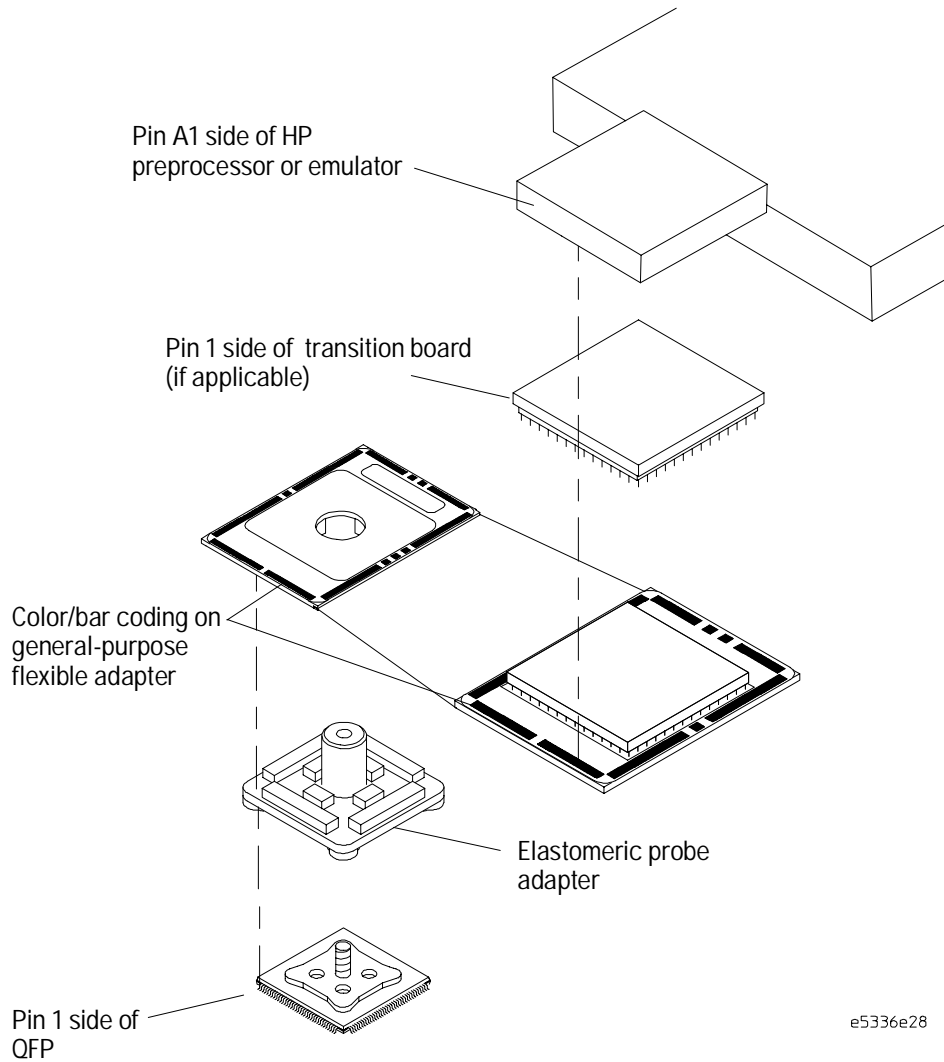

e5336e28

Refer to your HP preprocessor or emulator manual to select the orientation which allows the best access to your target system.





This chapter includes the following reference information:


- Pinout and cross-reference maps
- Parts for probing additional QFPs
- Replaceable parts
- Removing retainers

---

## Reference

# Pinout and cross-reference maps


## Probe adapter and QFP pinout maps

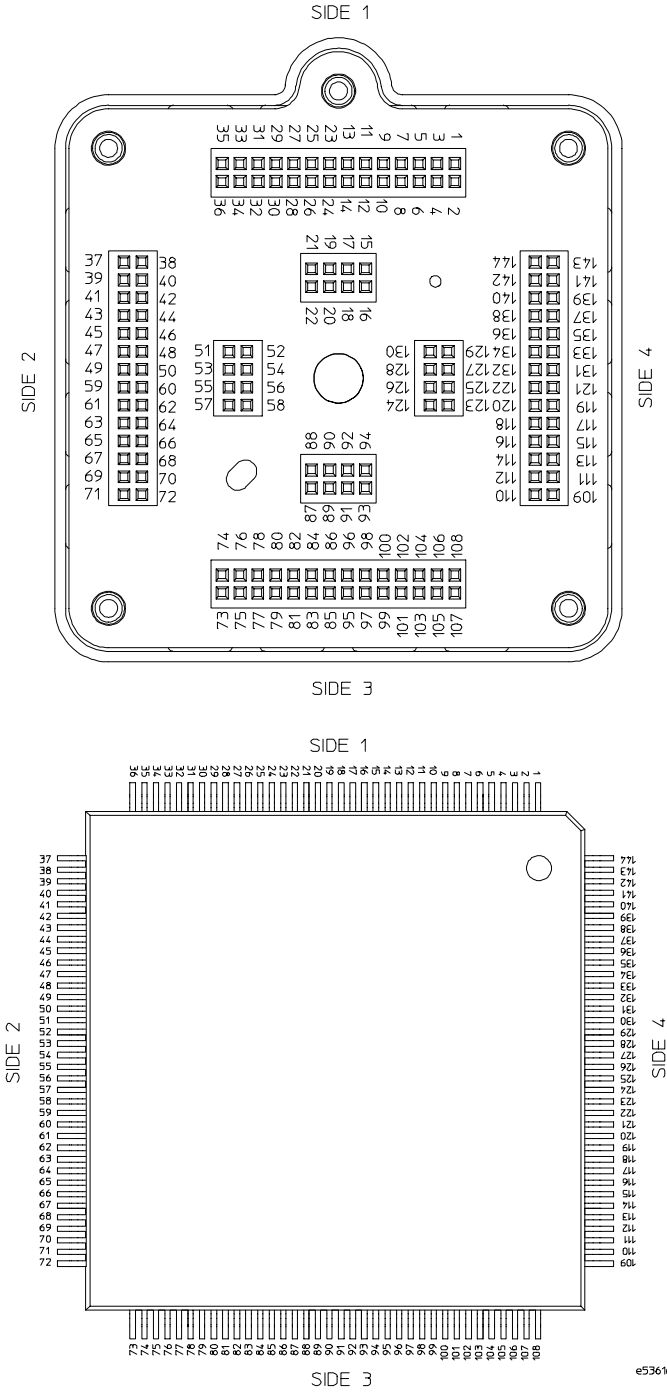

e5361e04

**Cross reference for multiple 1/4 flexible adapters and QFP**

**144-pin QFP and 1/4 flexible adapters**




Side 1						Side 2					
QFP	FLEX	QFP	FLEX	QFP	FLEX	QFP	FLEX	QFP	FLEX	QFP	FLEX
34	34	35	35	36	36	70	34	71	35	72	36
31	31	32	32	33	33	67	31	68	32	69	33
28	28	29	29	30	30	64	28	65	29	66	30
25	25	26	26	27	27	61	25	62	26	63	27
22	22	23	23	24	24	58	22	59	23	60	24
19	19	20	20	21	21	55	19	56	20	57	21
16	16	17	17	18	18	52	16	53	17	54	18
13	13	14	14	15	15	49	13	50	14	51	15
10	10	11	11	12	12	46	10	47	11	48	12
7	7	8	8	9	9	43	7	44	8	45	9
4	4	5	5	6	6	40	4	41	5	42	6
1	1	2	2	3	3	37	1	38	2	39	3

Side 3						Side 4					
QFP	FLEX	QFP	FLEX	QFP	FLEX	QFP	FLEX	QFP	FLEX	QFP	FLEX
106	34	107	35	108	36	142	34	143	35	144	36
103	31	104	32	105	33	139	31	140	32	141	33
100	28	101	29	102	30	136	28	137	29	138	30
97	25	98	26	99	27	133	25	134	26	135	27
94	22	95	23	96	24	130	22	131	23	132	24
91	19	92	20	93	21	127	19	128	20	129	21
88	16	89	17	90	18	124	16	125	17	126	18
85	13	86	14	87	15	121	13	122	14	123	15
82	10	83	11	84	12	118	10	119	11	120	12
79	7	80	8	81	9	115	7	116	8	117	9
76	4	77	5	78	6	112	4	113	5	114	6
73	1	74	2	75	3	109	1	110	2	111	3

e5361b01

Reference  
Pinout and cross-reference maps

**Cross reference for general-purpose flexible adapter and QFP**

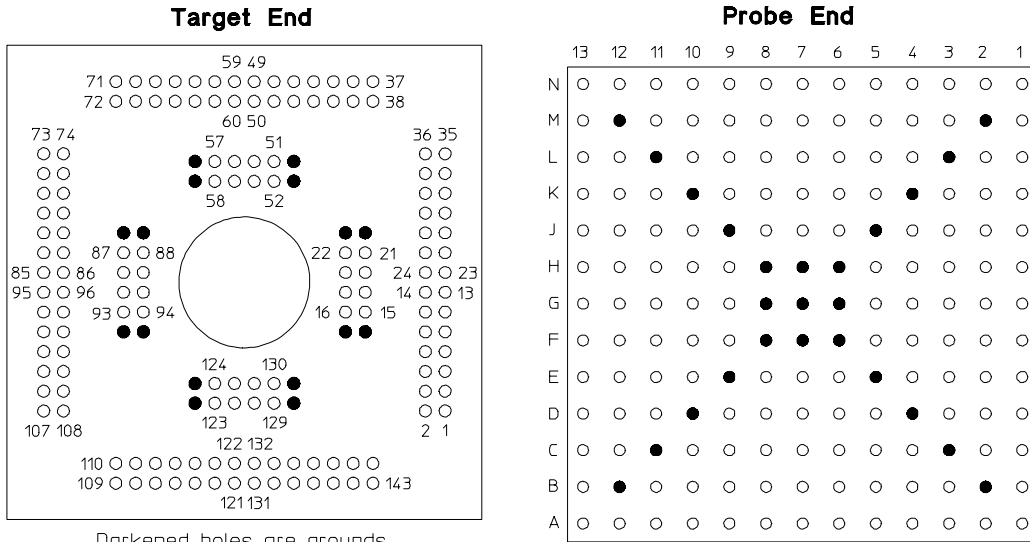

QFP PIN	13x13 PIN
1	B13
2	C13
3	C12
4	D13
5	D12
6	D11
7	E12
8	E11
9	F13
10	F12
11	F10
12	F9
13	G12
14	G11
15	E10
16	E13
17	G13
18	F11
19	G10
20	H12
21	H9
22	J11
23	G9
24	H13
25	H11
26	H10
27	J13
28	J12
29	J10
30	K13
31	K12
32	K11
33	L13
34	L12
35	M13
36	N13


QFP PIN	13x13 PIN
37	N12
38	N11
39	M11
40	N10
41	M10
42	L10
43	M9
44	L9
45	N8
46	M8
47	K8
48	J8
49	M7
50	L7
51	K9
52	N9
53	N7
54	L8
55	K7
56	M6
57	J6
58	L5
59	J7
60	N6
61	L6
62	K6
63	N5
64	M5
65	K5
66	N4
67	M4
68	L4
69	N3
70	M3
71	N2
72	N1

QFP PIN	13x13 PIN
73	M1
74	L1
75	L2
76	K1
77	K2
78	K3
79	J2
80	J3
81	H1
82	H2
83	H4
84	H5
85	G2
86	G3
87	J4
88	J1
89	G1
90	H3
91	G4
92	F2
93	F5
94	E3
95	G5
96	F1
97	F3
98	F4
99	E1
100	E2
101	E4
102	D1
103	D2
104	D3
105	C1
106	C2
107	B1
108	A1

QFP PIN	13x13 PIN
109	A2
110	A3
111	B3
112	A4
113	B4
114	C4
115	B5
116	C5
117	A6
118	B6
119	D6
120	E6
121	B7
122	C7
123	D5
124	A5
125	A7
126	C6
127	D7
128	B8
129	E8
130	C9
131	E7
132	A8
133	C8
134	D8
135	A9
136	B9
137	D9
138	A10
139	B10
140	C10
141	A11
142	B11
143	A12
144	A13

## Parts for probing additional QFPs

Kits containing additional retainers, knurled nuts, adhesive, and locator tools are available. Contents of these kits are shown in the following illustration

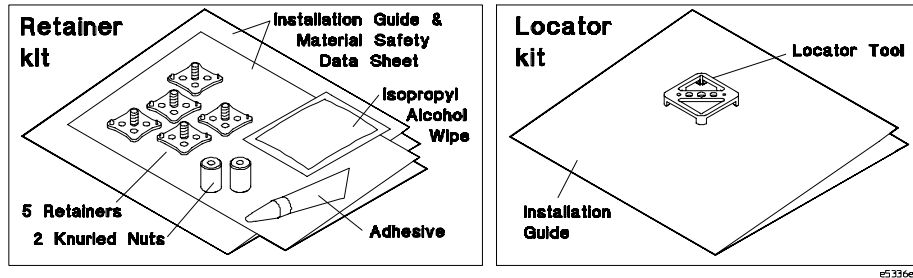

and their part numbers are in the following table.

	Retainer kit	Locator kit
144-pin 0.65 mm QFP	HP E5361A opt. 201	HP E5361A opt. 202

## Replaceable Parts

144-Pin Part Description	HP Part Number
Elastomeric Probe Adapter (Includes retainers and locators)	E5361A
1/4 flexible adapter	E5340A
General-purpose flexible adapter	E5338A

---

## To remove a retainer and adhesive

---

**WARNING**

**Eye injury.** Use protective eye-wear during removal to avoid injury.

---

**CAUTION**


The following procedure could cause damage to some QFPs, depending upon the construction of the part and surface condition.

Power off the device under test before attempting to remove a retainer.

- 1 Use a semi-flush or full-flush cutting plier with approximately 5-inch handles, such as HP part number 8170-0006, to remove the retainer.


### End view of diagonal cutting plier blades

**Preferred**




**Full-flush**

**Acceptable**



**Semi-flush**


**Do not use**




**Typical**

e5321e38

- 2 Place the tip of the plier against the slanted edge of the retainer.

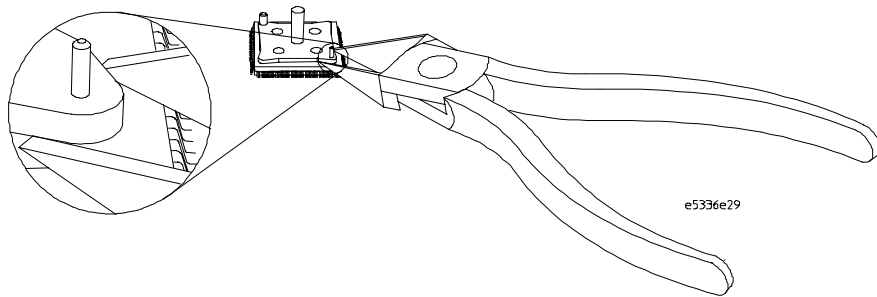


- 3 Ensure that the tip edge of the plier is as nearly parallel as possible and resting on the surface of the QFP.

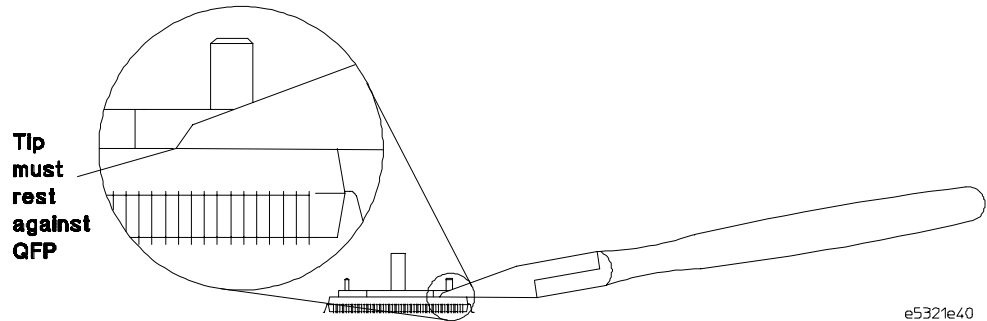

**WARNING** **Possible injury.** Exercise care when using any sharp cutting tool.

- 4 Hold your hand over the QFP during removal to prevent the part from flying when it pops off.

**CAUTION** Prevent the retainer from landing on any electrical circuits which might cause shorting.

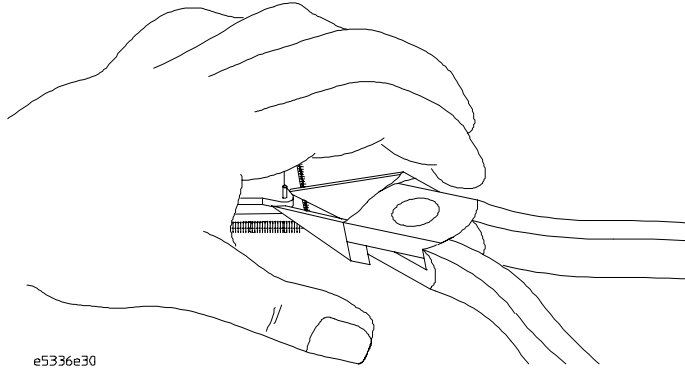

- 5 Squeeze the pliers to pop the retainer off.
- 6 Discard the retainer.

**WARNING** **Possible injury.** Exercise care when using any sharp cutting tool.

- 7 Scrape the adhesive off the top of your QFP using a single-edge razor blade or similar tool.

Do not use solvent because the solvent might dissolve the adhesive onto the leads of your QFP causing unreliable probing.

- 8 Make sure all adhesive has been removed and that there are no rough spots on the top of the QFP.
- 9 If you want to attach another retainer to your QFP, follow the installation procedure in chapter 1.





---

# Index

---

0.65 mm QFP, ii

## A

additional parts, 3-5  
adhesive, 1-7  
adhesive removal, 3-6 to 3-7  
advanced probing system, ii  
alignment  
    flexible adapter to  
        preprocessor/emulator, 2-6  
    locator tool to QFP, 1-4 to 1-5  
assembled locator tool, 1-4

## B

bandwidth  
    1/4 flexible adapter, 2-2  
    QFP probe adapter, 1-2

## C

capacitance  
    1/4 flexible adapter, 2-2  
    QFP probe adapter, 1-2  
Caution  
    Alignment of preprocessor or  
        emulator, 2-6  
    Control the amount of adhesive, 1-7  
    Damage to the QFP, 2-3  
    Do not over-tighten knurled nut, 1-11  
    Do not touch the conductive  
        elastomer, 1-10  
    Power-off the device under test, 3-6  
    Prevent pin damage, 2-4, 2-6  
    Prevent shorting, 3-7  
    Turn off the power, 1-4, 1-8  
    Use grounded wrist straps, 1-4  
characteristics  
    1/4 flexible adapters, 2-2 to 2-4  
    general-purpose flexible  
        adapters, 2-5 to 2-7  
    QFP probe adapter, 1-2  
cleaning the QFP, 1-6, 3-7  
clearance  
    QFP probe adapter, 1-3

color/bar coding, 2-7  
conductive elastomer, 1-10  
contact resistance  
    QFP probe adapter, 1-2  
contamination, 1-10  
cover, 1-10  
current  
    1/4 flexible adapters, 2-2  
    QFP probe adapter, 1-2  
cutting plier, 3-6

## D

damage to elastomer, 1-10  
dimensions  
    1/4 flexible adapter, 2-2  
    general-purpose flexible adapter, 2-5  
    QFP probe adapter, 1-3  
dowels, 1-11

## E

elastomer, 1-10  
electrical characteristics  
    1/4 flexible adapter, 2-2  
    general-purpose flexible adapter, 2-5  
    QFP probe adapter, 1-2  
electrostatic discharge, 1-4  
environmental characteristics  
    1/4 flexible adapter, 2-2  
    general-purpose flexible adapter, 2-5  
    QFP probe adapter, 1-2  
equipment damage, 2-6  
eye protection, 3-6

## F

flexible adapters  
    HP E5338A general-purpose, 2-5 to 2-7  
    HP E5340A, 1/4 flexible, 2-2 to 2-4  
frequency  
    general-purpose flexible adapter, 2-5  
full-flush cutting plier, 3-6

## G

glue, 1-7

## H

HP E5338A  
    general-purpose flexible  
        adapter, 2-5 to 2-7  
HP E5340A  
    1/4 flexible adapter, 2-2 to 2-4  
humidity  
    1/4 flexible adapter, 2-2  
    general-purpose flexible adapter, 2-5  
    QFP probe adapter, 1-2

## I

inductance  
    1/4 flexible adapter, 2-2  
    QFP probe adapter, 1-2  
insulation resistance  
    1/4 flexible adapter, 2-2  
    QFP probe adapter, 1-2  
Isopropyl Alcohol wipe, 1-6

## K

knurled nut, 1-3

## L

locator, 1-3  
locator tool, 1-4

## M

minimum clearance  
    QFP probe adapter, 1-3  
model parameters  
    1/4 flexible adapters, 2-2  
    QFP probe adapter, 1-2

## O

operating bandwidth  
    1/4 flexible adapter, 2-2  
    QFP probe adapter, 1-2  
operating current  
    1/4 flexible adapter, 2-2  
    QFP probe adapter, 1-2  
operating frequency  
    general-purpose flexible adapter, 2-5

- 
- operating temperature  
1/4 flexible adapter, 2-2  
general-purpose flexible adapter, 2-5  
QFP probe adapter, 1-2
- operating voltage  
1/4 flexible adapter, 2-2  
QFP probe adapter, 1-2
- overview  
probe adapter parts, 1-2  
probing system, ii
- P**
- parameters  
1/4 flexible adapters, 2-2 to 2-4  
general-purpose flexible adapters, 2-5 to 2-7  
QFP probe adapter, 1-2
- parts  
additional, 3-5  
replaceable, 3-5
- performance characteristics  
1/4 flexible adapter, 2-2  
general-purpose flexible adapter, 2-5  
QFP probe adapter, 1-2
- Pin 1, 1-4
- pin-to-ground capacitance  
1/4 flexible adapter, 2-2
- pin-to-pin capacitance  
1/4 flexible adapter, 2-2
- Probe adapter installation, 1-10 to 1-11
- probing system, ii
- Q**
- QFP probe adapter, 1-2  
Quad Flat Pack, ii
- R**
- relative humidity  
general-purpose flexible adapter, 2-5  
QFP probe adapter, 1-2
- removing  
adhesive, 3-6 to 3-7  
retainers, 3-6 to 3-7
- replaceable parts, 3-5
- resistance  
1/4 flexible adapter, 2-2  
QFP probe adapter, 1-2
- retainer  
adhering to QFP, 1-7 to 1-9  
discard used, 3-7  
prepare to attach, 1-3  
removal, 3-6 to 3-7  
test alignment, 1-4 to 1-6
- S**
- self-inductance  
1/4 flexible adapter, 2-2  
QFP probe adapter, 1-2
- semi-flush cutting plier, 3-6
- signal loading  
general-purpose flexible adapter, 2-5
- T**
- teeth, locator, 1-4
- temperature  
1/4 flexible adapter, 2-2  
general-purpose flexible adapter, 2-5  
QFP probe adapter, 1-2
- V**
- voltage  
1/4 flexible adapters, 2-2  
QFP probe adapter, 1-2
- W**
- Warning  
Eye injury, 3-6  
Handling precautions for adhesive, 1-7  
Possible injury, 3-7
-

© Copyright Hewlett-Packard Company 1997  
All Rights Reserved.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

### Restricted Rights Legend

Use, duplication, or disclosure by the U.S. Government is subject to restrictions set forth in subparagraph (C) (1) (ii) of the Rights in Technical Data and Computer Software Clause in DFARS 252.227-7013.

Hewlett-Packard Company,  
3000 Hanover Street, Palo Alto, CA 94304 U.S.A.  
Rights for non-DOD U.S. Government Departments and Agencies are set forth in FAR 52.227-19(c)(1,2).

### Document Warranty

The information contained in this document is subject to change without notice.

**Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability or fitness for a particular purpose.**

Hewlett-Packard shall not be liable for errors contained herein or for damages in connection with the furnishing, performance, or use of this material.

### Safety

This apparatus has been designed and tested in accordance with IEC Publication 348, Safety Requirements for Measuring Apparatus, and has been supplied in a safe condition. This is a Safety Class I instrument (provided with terminal for protective earthing). Before applying power, verify that the correct safety precautions are taken (see the following warnings). In addition, note the external markings on the instrument that are described under "Safety Symbols."

### Warning

- Before turning on the instrument, you must connect the protective earth terminal of the instrument to the protective conductor of the (mains) power cord. The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. You must not negate the protective action by using an extension cord (power cable) without a protective conductor (grounding). Grounding one conductor of a two-conductor outlet is not sufficient protection.
- Only fuses with the required rated current, voltage, and specified type (normal blow, time delay, etc.) should be used. Do not use repaired fuses or short-circuited fuseholders. To do so could cause a shock or fire hazard.

- Service instructions are for trained service personnel. To avoid dangerous electric shock, do not perform any service unless qualified to do so. Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

- If you energize this instrument by an auto transformer (for voltage reduction), make sure the common terminal is connected to the earth terminal of the power source.

- Whenever it is likely that the ground protection is impaired, you must make the instrument inoperative and secure it against any unintended operation.

- Do not operate the instrument in the presence of flammable gasses or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

- Do not install substitute parts or perform any unauthorized modification to the instrument.

- Capacitors inside the instrument may retain a charge even if the instrument is disconnected from its source of supply.

- Use caution when exposing or handling the CRT. Handling or replacing the CRT shall be done only by qualified maintenance personnel.

### Safety Symbols



Instruction manual symbol: the product is marked with this symbol when it is necessary for you to refer to the instruction manual in order to protect against damage to the product.



Hazardous voltage symbol.



Earth terminal symbol: Used to indicate a circuit common connected to grounded chassis.

### WARNING

The Warning sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a Warning sign until the indicated conditions are fully understood and met.

### CAUTION

The Caution sign denotes a hazard. It calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product. Do not proceed beyond a Caution symbol until the indicated conditions are fully understood or met.

---

**Product Warranty**

This Hewlett-Packard system product is warranted against defects in material and workmanship for a period of 90 days from date of purchase. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products that prove to be defective. Products must be returned to a service facility designated by HP.

For products returned to Hewlett-Packard for warranty service, the Buyer shall prepay shipping charges to Hewlett-Packard and Hewlett-Packard shall pay shipping charges to return the product to the Buyer. However, the Buyer shall pay all shipping charges, duties, and taxes for products returned to Hewlett-Packard from another country.

Hewlett-Packard warrants that its software and firmware designated by Hewlett-Packard for use with an instrument will execute its programming instructions when properly installed on that instrument.

Hewlett-Packard does not warrant that the operation of the instrument software, or firmware will be uninterrupted or error free.

**Limitation of Warranty**

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by the Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

**No other warranty is expressed or implied. Hewlett-Packard specifically disclaims the implied warranties of**

**merchantability or fitness for a particular purpose.****Exclusive Remedies**

The remedies provided herein are the buyer's sole and exclusive remedies. Hewlett-Packard shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any other legal theory.

**Assistance**

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales Office.

**Certification**

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology, to the extent allowed by the Institute's calibration facility, and to the calibration facilities of other International Standards Organization members.

**About this edition**

This is the first edition of the *Elastomeric Probing System for 144-Pin 0.65 mm QFP User's Guide*.

Publication number

E5361-92001

Printed in USA.

Edition dates are as follows:

E5361-92000, April 1997

E5361-92001, June 1977

New editions are complete revisions of the manual.

Many product updates do not require manual changes and manual corrections may be done without accompanying product changes. Therefore, do not expect a one-to-one correspondence between product updates and manual updates.









HP Part Number E5361-92001  
Printed June, 1997