

Installation Note

8753E, 8753ET, and 8753ES Network Analyzer Option 1D5 High Stability Frequency Reference Upgrade Kit

Network Analyzer Model Number	Applicable Upgrade Kit Model Number
8753E	8753EU Option 1D5
8753ET	8753ETU Option 1D5
8753ES	8753ESU Option 1D5




Agilent Part Number: 08753-90416

Printed in USA

April 2002

Supersedes December 1999

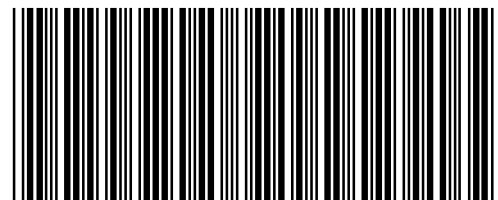

08753-90416

Notice.

The information contained in this document is subject to change without notice.

Agilent Technologies makes no warranty of any kind with regard to this material, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

About the Upgrade Kit

Products affected.	8753E and all options 8753ET and all options 8753ES and all options
Installation to be performed by	Agilent service center, personnel qualified by Agilent, or customer
Estimated Installation Time	1 hour
Estimated Verification Time.	1 hour

If you need assistance, refer to [“Getting Assistance from Agilent” on page 14](#).

Purpose

The Option 1D5 Upgrade Kit provides a 50 MHz ± 5 Hz (at 25 °C ± 5 °C) reference signal for the network analyzer. This installation note describes the installation and performance verification procedures for the upgrade kit.

Items Included in the Kit

Table 1 describes the parts included in this upgrade kit. Check the contents of this kit against Table 1.

Table 1 **Option 1D5 Upgrade Kit Contents**

Quantity	Description	Part Number
1	A26 High Frequency Reference Board	08753-60158
1	Bracket	08753-00078
1	Adapter, coaxial	1250-1859
1	W30 Cable assembly, frequency reference	8120-6458
1	Screw, 5 mm 3.0 X 10 CW-PN-TX	0515-0374
1	Screw, 5 mm 3.0 X 6 CW-PN-TX	0515-0430
1	Washer, flat	3050-1546
1	Washer lock	2190-0068
1	Nut, specialty	0590-1310
1	Installation note	08753-90416

Required Equipment

Table 2 Required Equipment

Item	Part/Model Number
Frequency counter	5343A
BNC to BNC cable assembly	8120-1840
Adapter, Type-N (m) to BNC (f)	1250-1535
T-10 TORX screwdriver	8710-1623
T-15 TORX screwdriver	8710-1622
Flat-head screwdriver, narrow	
Flat-head screwdriver, narrow	
3/16-inch hex-nut driver	
9/16-inch hex-nut driver	
ESD (electrostatic discharge) grounding wrist strap and mat	
Additional Equipment for Standard 8753E and Standard 8753ES	
Adapter, APC-7 to Type-N(f)	85054-60031
Additional Equipment for 8753E Option 011 and 8753ES Option 011	
RF cable	8120-4781
Power splitter	11667A Option 001

Safety Considerations

WARNING	Before you disassemble the instrument, turn the power switch OFF and unplug the instrument. Failure to unplug the instrument can result in personal injury.
----------------	--

CAUTION	Electrostatic discharge (ESD) can damage or destroy electronic components. Perform these procedures only at a static-safe workstation and wear a grounding strap. Refer to the documentation that pertains to your instrument for information about static-safe workstations and ordering static-safe accessories.
----------------	--

Conventions

This installation note uses the following conventions for front-panel keys and softkeys.

Front-Panel Key represents a key physically located on the instrument. **SOFTKEY** represents a “softkey,” a key whose label is determined by the instrument’s firmware.

Installation Procedure for the Upgrade Kit

The network analyzer must be in proper working condition prior to installing this option. Any necessary repairs must be made before proceeding with this installation.


NOTE The 8753E network analyzer is shown in the illustrations of this installation procedure. If you have an 8753ET or an 8753ES network analyzer, the details of these illustrations may vary slightly. However, these slight differences will not affect the procedures of this installation.

Remove Covers

Refer to Figure 1.

1. Disconnect the power cord.
2. Remove the top cover:
 - a. Remove both of the upper rear feet (item 1) by loosening the TORX T-10 screws (item 2).
 - b. Loosen the top cover screw (item 3).
 - c. Slide the cover off towards the rear of the analyzer.
3. Remove the bottom cover:
 - a. Remove both lower rear feet (item 4) by loosening the TORX T-10 screws (item 5).
 - b. Loosen the bottom cover screw (item 6).
 - c. Slide the cover off towards the rear of the analyzer.

Figure 1 Removing the Top and Bottom Covers

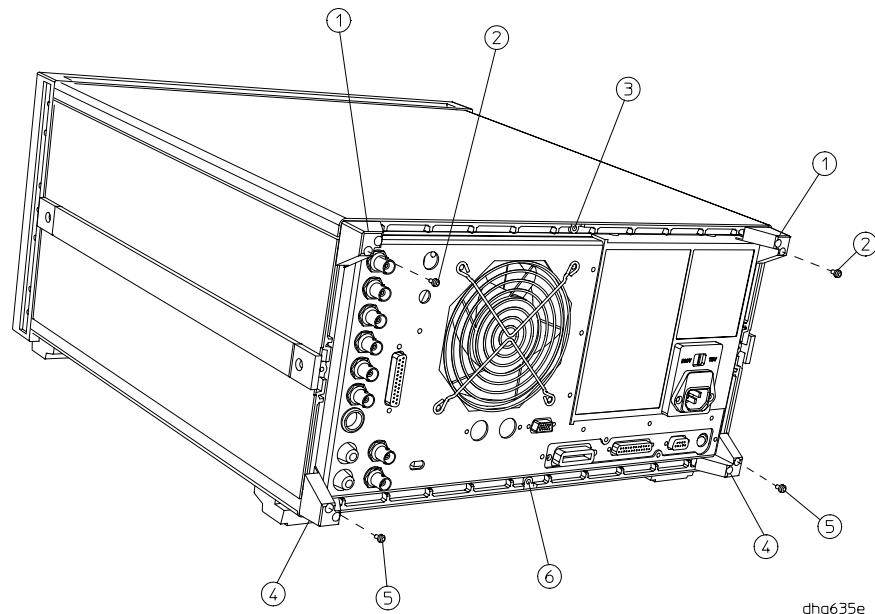


Remove the Rear Panel Assembly

Refer to Figure 2.

4. Remove the four screws (item 7) that attach the interface bracket to the rear panel.
5. Remove the six screws (items 8 and 9) that attach the preregulator to the rear panel.
6. Remove the six screws (item 10) from the rear frame: two from the top edge and four from the bottom edge.

Figure 2 **Disconnecting the Rear Panel**

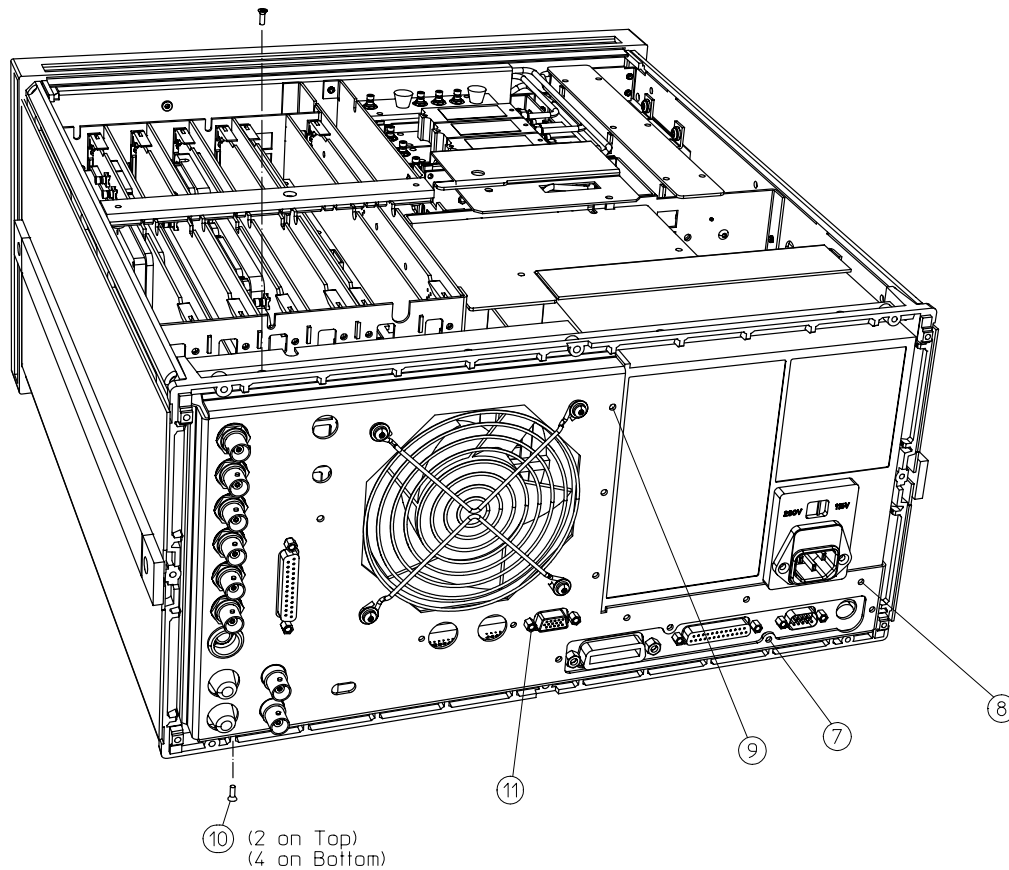


dhg636e

Refer to Figure 3.

7. Remove the screw (item 12) from the PC board stabilizer and remove the stabilizer.
8. Gently pull the rear panel away from the frame. Lift the reference board A12 (item 13 with the red extractors) from its motherboard connector. Disconnect the flexible RF cable leading back to the rear panel from its connector on A12.
9. Identify the wiring harness leading to the VGA connector (item 11 of [Figure 2](#) and [Figure 3](#)). Follow this harness back to its connection on the motherboard. Remove the air flow cover, attached by two screws, to get to this connection. Disconnect the VGA wire harness at this point.
10. Pull the rear panel away from the frame. Disconnect the ribbon cable (item 14) from the motherboard connector, pressing down and out on the connector locks. Disconnect the wiring harness (item 15) from the motherboard.

Figure 3 Removing the Rear Panel

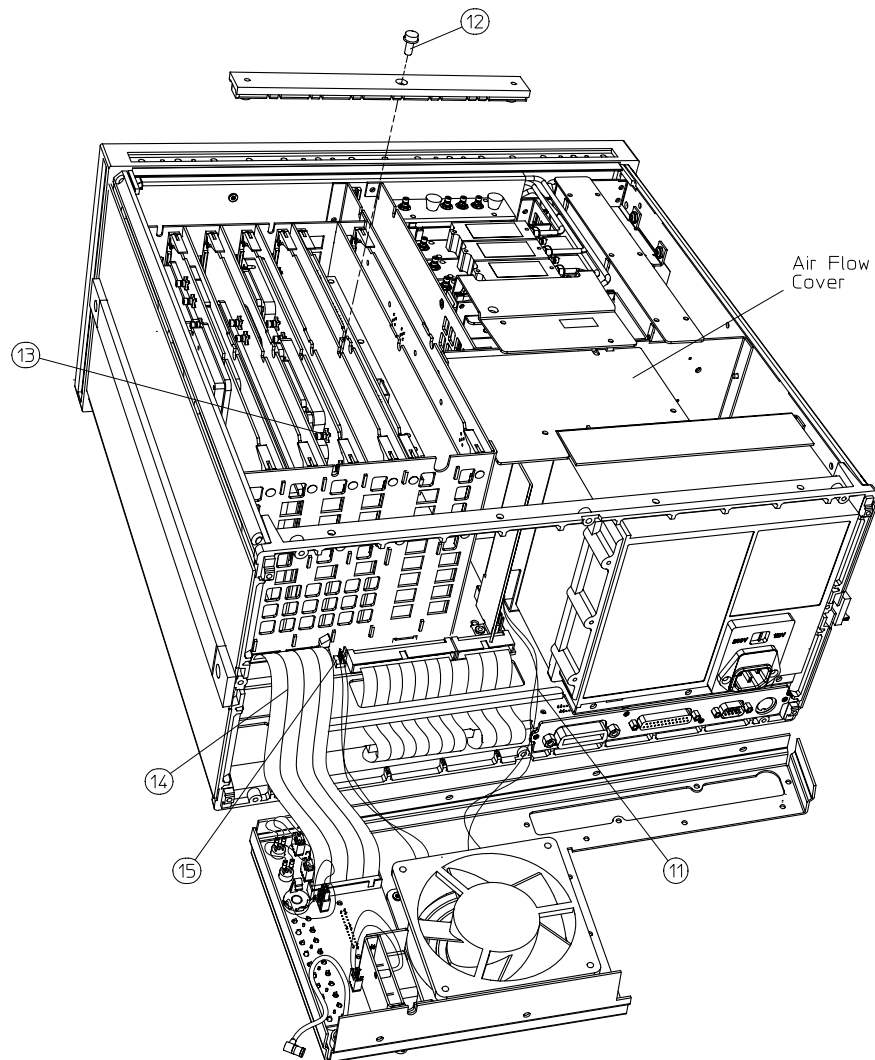

dhg637e

Attach the Frequency Reference Assembly

11. Remove the two plastic hole plugs from the rear panel holes that are labeled: "10 MHz PRECISION REFERENCE" and "ADJ." This is the location on the rear panel where the high-stability frequency reference assembly will be installed.

Refer to Figure 4.

12. Fasten the bracket (item 16) to the inside of the rear panel (item 17) with a screw (item 18) in the location shown.


13. Place the plastic spacer washer (item 19) over the female BNC connector (item 20) on the high-stability frequency reference board (A26J1).

14. Slide the high-stability frequency reference board (A26) into the bracket (item 16) and secure it with the attaching screw (item 21).

15. Finish securing the assembly to the rear panel by attaching a washer (item 22) and nut (item 23) to the female BNC connector that protrudes through the "10 MHz PRECISION REFERENCE" hole.

16. Connect the three-wire harness (W30) from the rear-panel interface board (A16J3) to the high-stability frequency reference board (A26J1).

Figure 4 Assembling the High Stability Frequency Reference

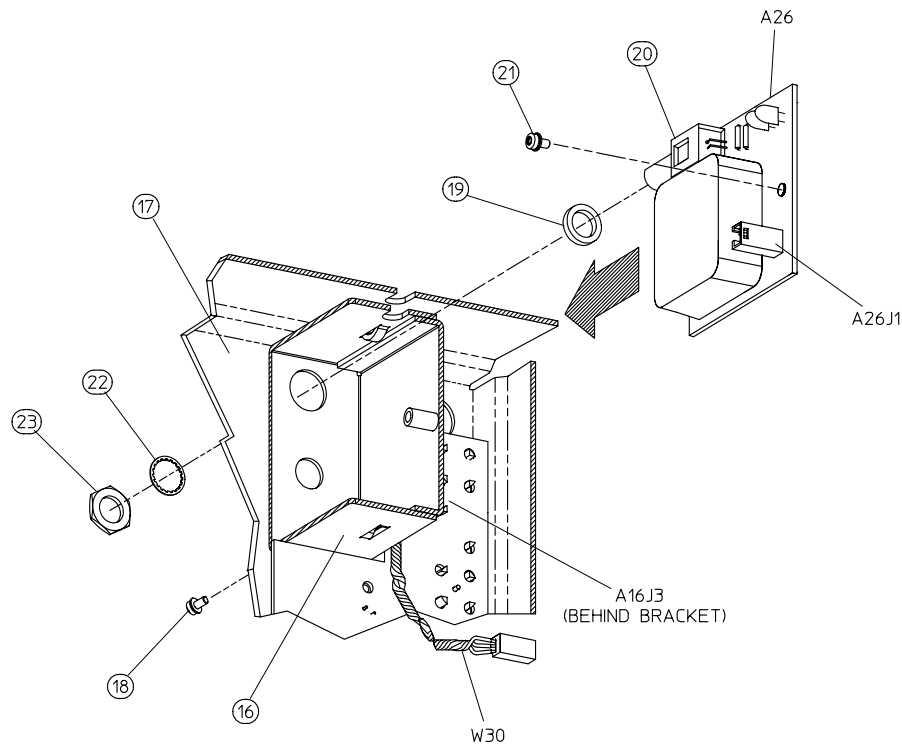

dhg639e

Reassemble the Rear Panel

Refer to *Figure 3*.

17. Connect the wiring harness (item 15) to the motherboard.
18. Connect the ribbon cable (item 14) to the motherboard connector.
19. Connect the wiring harness (item 11) leading from the VGA connector to its connection on the motherboard.
20. Replace the air flow cover and attach with two screws.
21. Carefully fit the rear panel into the rear frame.

CAUTION Make sure W30 is not trapped or pinched while installing the rear panel into the rear frame. Refer to *Figure 4*.

22. Reconnect the flexible RF cable to its connector on A12 and reseal the reference board.
23. Replace the PC board stabilizer and attach with its screw.
24. Secure the rear panel by replacing the six screws in the top and bottom edges of the rear frame.
25. Replace the six screws that attach the preregulator to the rear panel.
26. Replace the four screws that attach the interface bracket to the rear panel.
27. Replace the top cover.


Set the A9 Switch

28. Turn the analyzer upside down.

29. Locate the A9 switch on the A9 CPU assembly at location S400. Refer to Figure 5.

30. Set the A9 switch to the Alter mode.

Figure 5 A9 Switch Location

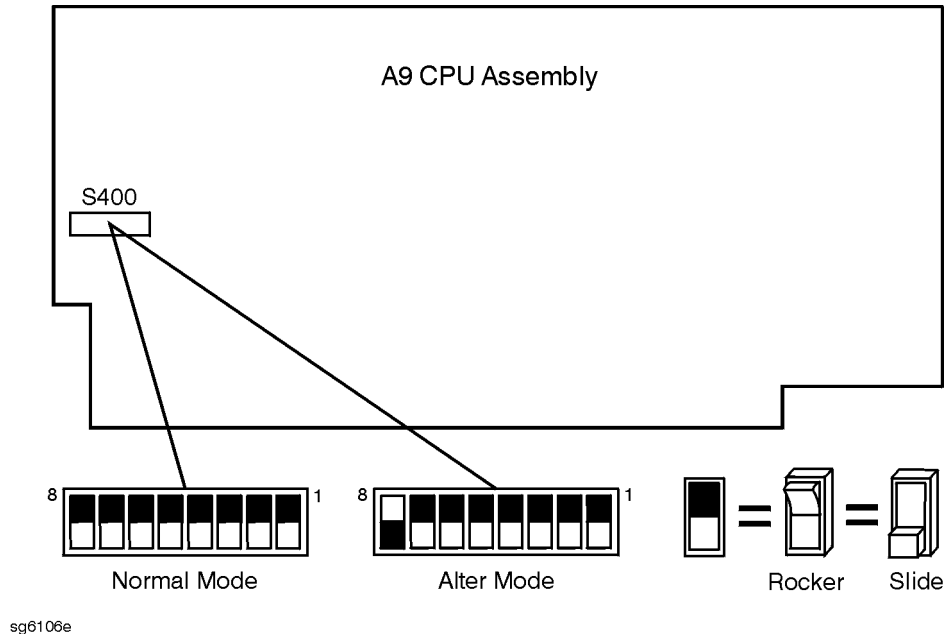

Make an Addition to the Displayed Options List

31. Press **(System) SERVICE MENU PEEK/POKE PEEK/POKE ADDRESS (1619001529) (x1) POKE (1) (x1) (Preset)**.

32. Verify that the analyzer displays **OPTION 1D5** by pressing **(System) SERVICE MENU FIRMWARE REVISION**.

Return the A9 Switch

Refer to Figure 5.


33. Return the A9 switch to Normal mode.

34. Replace the analyzer bottom cover, and all the rear panel feet.

Verify the High Stability Frequency Reference Operation

35. Connect the equipment as shown in [Figure 6](#).

Figure 6 High Stability Frequency Reference Operation Test

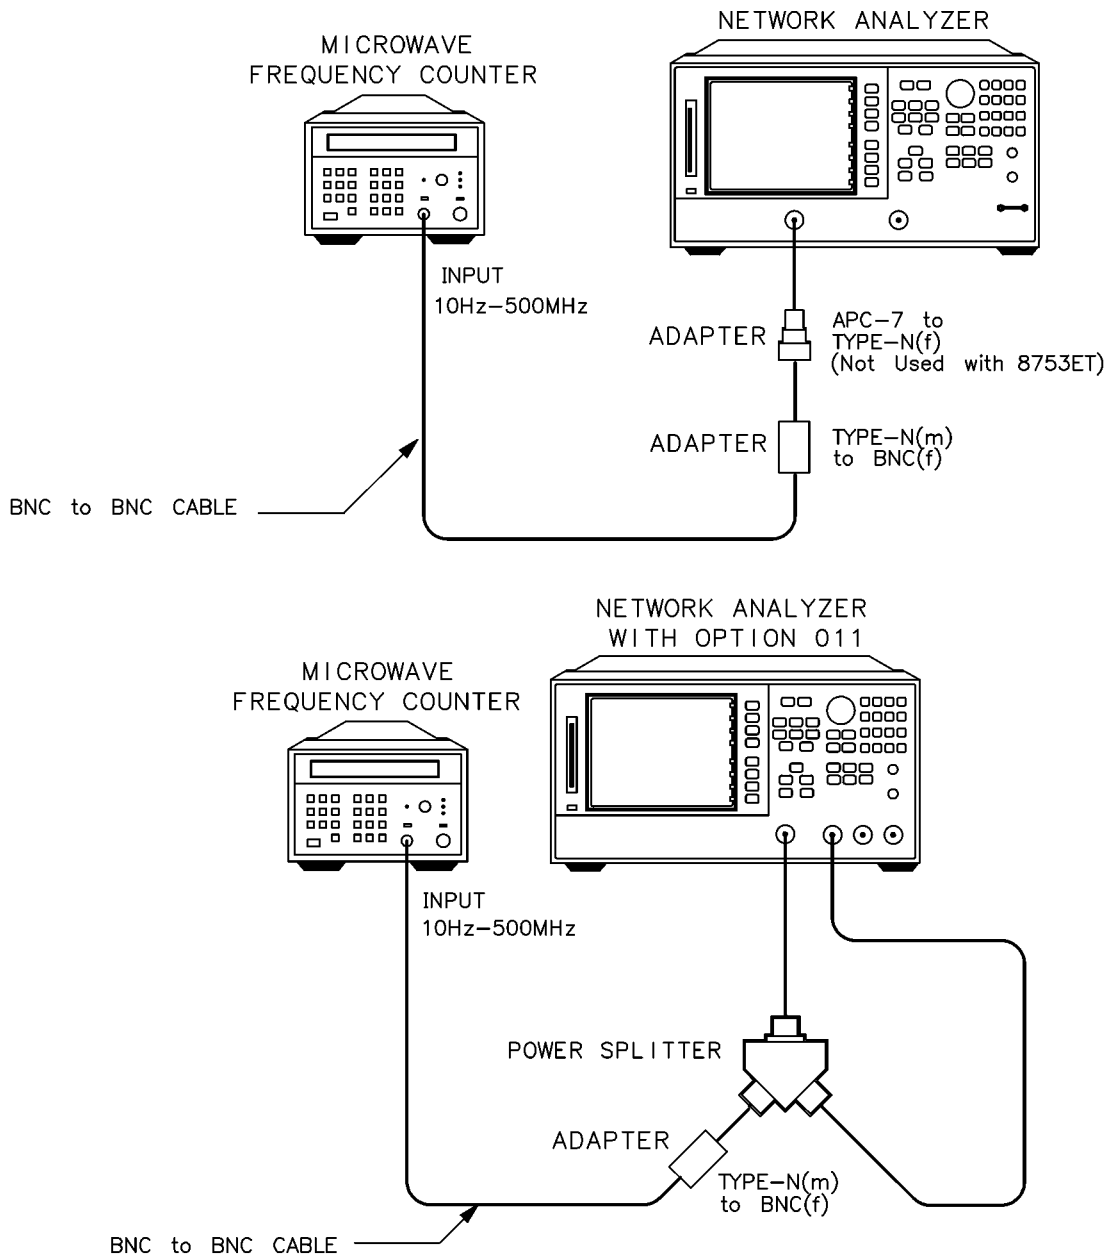


36. Press the following keys:

- On the 8753E, press **Preset** **Menu** **CW FREQ** **50** **M/μ**.
- On the 8753ET/ES, press **Preset** **Sweep Setup** **CW FREQ** **50** **M/μ**.

37. Connect the BNC to BNC jumper (supplied with the upgrade kit) between the EXT REF and the 10 MHz High Stability Reference connectors. Refer to Figure 7.

Figure 7 Location of the BNC to BNC Jumper

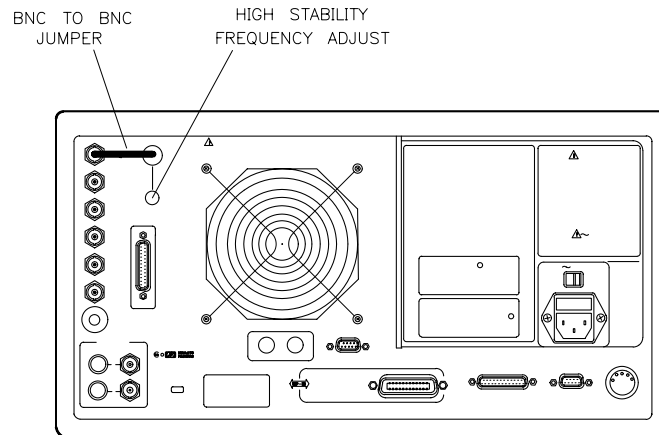


sg642e

38. Use a flat-head screwdriver to remove the screw that secures the high-stability frequency adjustment as shown in Figure 7. Insert a narrow screwdriver and adjust the high-stability, frequency reference potentiometer for a frequency counter reading of $50 \text{ MHz} \pm 5 \text{ Hz}$.

In Case of Difficulty

1. Make sure that you have moved the A9 switch, and then returned it to Normal mode at the appropriate times.
2. Remove the BNC to BNC jumper.
3. Press the following keys:
 - On the 8753E, press **Preset** **Menu** **CW FREQ** **50** **M/μ**.
 - On the 8753ET/ES, press **Preset** **Sweep Setup** **CW FREQ** **50** **M/μ**.
4. Locate the A12 Reference board assembly (board with red extractors). Refer to Figure 8. Adjust the VCXO ADJ for a frequency counter reading of 50 MHz \pm 500 Hz.

Figure 8 VCXO ADJ Adjustment Location

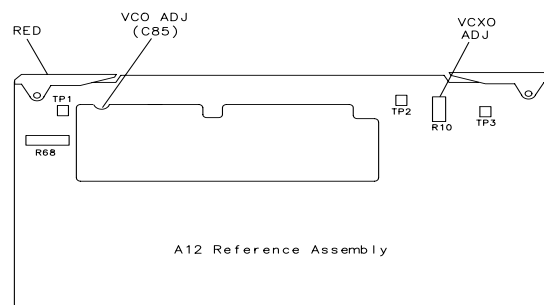

5. If you cannot adjust the A12 board assembly to the frequency as specified, replace the A12 assembly.
6. Reconnect the BNC to BNC jumper as shown in Figure 7. Insert a narrow screwdriver and adjust the high-stability, frequency reference potentiometer for a reading of 50 MHz \pm 5 Hz.
7. If you cannot adjust for a frequency reading of 50 MHz \pm 5 Hz, replace the A26 assembly. Refer to Figure 4.
8. Repeat the procedure “Verify the High Stability Frequency Reference Operation” on page 11.

Getting Assistance from Agilent

By internet, phone, or fax, get assistance with all your test and measurement needs.

Table 3 Contacting Agilent

Online assistance: www.agilent.com/find/assist		
United States <i>(tel)</i> 1 800 452 4844	Latin America <i>(tel)</i> (305) 269 7500 <i>(fax)</i> (305) 269 7599	Canada <i>(tel)</i> 1 877 894 4414 <i>(fax)</i> (905) 282-6495
Europe <i>(tel)</i> (+31) 20 547 2323 <i>(fax)</i> (+31) 20 547 2390	Australia <i>(tel)</i> 1 800 629 485 <i>(fax)</i> (+61) 3 9210 5947	New Zealand <i>(tel)</i> 0 800 738 378 <i>(fax)</i> (+64) 4 495 8950
Japan <i>(tel)</i> (+81) 426 56 7832 <i>(fax)</i> (+81) 426 56 7840	Singapore <i>(tel)</i> 1 800 375 8100 <i>(fax)</i> (65) 836 0252	Malaysia <i>(tel)</i> 1 800 828 848 <i>(fax)</i> 1 800 801 664
India <i>(tel)</i> 1 600 11 2929 <i>(fax)</i> 000 800 650 1101	Hong Kong <i>(tel)</i> 800 930 871 <i>(fax)</i> (852) 2506 9233	Taiwan <i>(tel)</i> 0800 047 866 <i>(fax)</i> (886) 2 25456723
Philippines <i>(tel)</i> (632) 8426802 <i>(tel)</i> (PLDT subscriber only) 1 800 16510170 <i>(fax)</i> (632) 8426809 <i>(fax)</i> (PLDT subscriber only) 1 800 16510288	Thailand <i>(tel)</i> (outside Bangkok) (088) 226 008 <i>(tel)</i> (within Bangkok) (662) 661 3999 <i>(fax)</i> (66) 1 661 3714	People's Republic of China <i>(tel)</i> (preferred) 800 810 0189 <i>(tel)</i> (alternate) 10800 650 0021 <i>(fax)</i> 10800 650 0121