## **Installation Note**

## **Configurable Test Set Upgrade Kit**

### For PNA Series Microwave Network Analyzers (E8362A)

Network Analyzer	Upgrade Kit	
Model Number	Part Number	
E8362A	E8362-60101	



Agilent Part Number: E8362-90001 Printed in USA April 2004 Supersedes Print Date: June 2002 © Agilent Technologies, Inc. 2002, 2004



E8362-9000

## WARRANTY STATEMENT

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AGILENT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. AGILENT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD AGILENT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

## **DFARS/Restricted Rights Notice**

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

## **Safety Notes**

The following safety notes are used throughout this document. Familiarize yourself with each of these notes and its meaning before performing any of the procedures in this document.

WARNING	Warning denotes a hazard. It calls attention to a procedure which, if not correctly performed or adhered to, could result in injury or loss of life. Do not proceed beyond a warning note until the indicated conditions are fully understood and met.	
CAUTION	Caution denotes a hazard. It calls attention to a procedure that, if not correctly performed or adhered to, could result in damage to or destruction of the instrument. Do not proceed beyond a caution sign until the indicated conditions are fully understood and met.	

## **Getting Assistance from Agilent**

By internet, phone, or fax, get assistance with all your test and measurement needs.

Americas					
<b>Brazil</b> ( <i>tel</i> ) (+55) 11 4197 3600 ( <i>fax</i> ) (+55) 11 4197 3800	<b>Canada</b> ( <i>tel</i> ) 877 894 4414 ( <i>fax</i> ) (+1) 905 282-6495	Mexico ( <i>tel</i> ) (+52) 55 5081 9469 ( <i>alt</i> ) 01800 5064 800 ( <i>fax</i> ) (+52) 55 5081 9467	United States (tel) 800 829 4444 (alt) (+1) 303 662 3998 (fax) 800 829 4433		
	Asia Pacif	ic and Japan			
Australia ( <i>tel</i> ) 1800 629 485 ( <i>alt</i> ) 1800 143 243 ( <i>fax</i> ) 1800 142 134	China           (tel) 800 810 0189           (alt) (+86) 10800 650 0021           (fax) 800 820 2816	Hong Kong ( <i>tel</i> ) 800 930 871 ( <i>alt</i> ) (+852) 3197 7889 ( <i>fax</i> ) (+852) 2 506 9233	India ( <i>tel</i> ) 1600 112 929 ( <i>fax</i> ) 000800 650 1101		
<b>Japan</b> ( <i>tel</i> ) 0120 421 345 ( <i>alt</i> ) (+81) 426 56 7832 ( <i>fax</i> ) 0120 421 678	Malaysia ( <i>tel</i> ) 1800 888 848 ( <i>alt</i> ) 1800 828 848 ( <i>fax</i> ) 1800 801 664	Singapore ( <i>tel</i> ) 1800 375 8100 ( <i>alt</i> ) (+65) 6 375 8100 ( <i>fax</i> ) (+65) 6836 0252	South Korea ( <i>tel</i> ) 080 769 0800 ( <i>alt</i> ) (+82) 2 2004 5004 ( <i>fax</i> ) (+82) 2 2004 5115		
<b>Taiwan</b> ( <i>tel</i> ) 0800 047 866 ( <i>alt</i> ) 00801 651 317 ( <i>fax</i> ) 0800 286 331	<b>Thailand</b> ( <i>tel</i> ) 1800 226 008 ( <i>alt</i> ) (+66) 2 268 1345 ( <i>fax</i> ) (+66) 2 661 3714				
	Eu	rope			
Austria ( <i>tel</i> ) 0820 87 44 11* ( <i>fax</i> ) 0820 87 44 22	Belgium ( <i>tel</i> ) (+32) (0)2 404 9340 ( <i>alt</i> ) (+32) (0)2 404 9000 ( <i>fax</i> ) (+32) (0)2 404 9395	Denmark ( <i>tel</i> ) (+45) 7013 1515 ( <i>alt</i> ) (+45) 7013 7313 ( <i>fax</i> ) (+45) 7013 1555	<b>Finland</b> ( <i>tel</i> ) (+358) 10 855 2100 ( <i>fax</i> ) (+358) 10 855 2923		
France (tel) 0825 010 700* (alt) (+33) (0)1 6453 5623 (fax) 0825 010 701*	Germany ( <i>tel</i> ) 01805 24 6333* ( <i>alt</i> ) 01805 24 6330* ( <i>fax</i> ) 01805 24 6336*	Ireland ( <i>tel</i> ) (+353) (0)1 890 924 204 ( <i>alt</i> ) (+353) (0)1 890 924 206 ( <i>fax</i> )(+353) (0)1 890 924 024	<b>Israel</b> ( <i>tel</i> ) (+972) 3 9288 500 ( <i>fax</i> ) (+972) 3 9288 501		
<b>Italy</b> ( <i>tel</i> ) (+39) (0)2 9260 8484 ( <i>fax</i> ) (+39) (0)2 9544 1175	Luxemburg ( <i>tel</i> ) (+32) (0)2 404 9340 ( <i>alt</i> ) (+32) (0)2 404 9000 ( <i>fax</i> ) (+32) (0)2 404 9395	Netherlands ( <i>tel</i> ) (+31) (0)20 547 2111 ( <i>alt</i> ) (+31) (0)20 547 2000 ( <i>fax</i> ) (+31) (0)20 547 2190	<b>Russia</b> ( <i>tel</i> ) (+7) 095 797 3963 ( <i>alt</i> ) (+7) 095 797 3900 ( <i>fax</i> ) (+7) 095 797 3901		
<b>Spain</b> ( <i>tel</i> ) (+34) 91 631 3300 ( <i>alt</i> ) (+34) 91 631 3000 ( <i>fax</i> ) (+34) 91 631 3301	Sweden           (tel) 0200 88 22 55*           (alt) (+46) (0)8 5064 8686           (fax) 020 120 2266*	Switzerland (French)           (tel) 0800 80 5353 opt. 2*           (alt) (+33) (0)1 6453 5623           (fax) (+41) (0)22 567 5313	Switzerland (German) ( <i>tel</i> ) 0800 80 5353 opt. 1* ( <i>alt</i> ) (+49) (0)7031 464 633 ( <i>fax</i> ) (+41) (0)1 272 7373		
Switzerland (Italian) ( <i>tel</i> ) 0800 80 5353 opt. 3* ( <i>alt</i> ) (+39) (0)2 9260 8484 ( <i>fax</i> ) (+41) (0)22 567 5314	United Kingdom ( <i>tel</i> ) (+44) (0)7004 666666 ( <i>alt</i> ) (+44) (0)7004 123123 ( <i>fax</i> ) (+44) (0)7004 444555				

04/04

## About Installing the Upgrade Kit

Products affected	. E8362A; all options
Installation to be performed by	. Agilent service center or personnel qualified by Agilent
Estimated installation time	. 2 hours
Estimated verification time	. 5 minutes

## **Description of Option 014**

An Option 014 analyzer can be configured to measure high-power devices and devices that require high dynamic range.

For a high-power measurement, external amplifiers and high power attenuators or isolators can be added to complete the test setup. In this configuration, test port output power up to 1 Watt (+30 dBm) can be applied to the device under test (DUT). Additionally, there is an external reference input that allows the external amplifier's frequency response and drift to be ratioed out.

For high dynamic range measurements, front panel jumpers are configured to reverse the signal path through one of the couplers. This allows for a 15 dB improvement in transmitted signal sensitivity in one direction only. These jumpers can also be configured on both ports, allowing the user to perform high dynamic range measurements in both the forward and reverse directions.

## Items Included in the Upgrade Kit

Table 1 lists the parts included in this upgrade kit, Agilent part number E8362-60101. Check the contents of your kit against this list. If any item is missing or damaged, contact Agilent Technologies. Refer to "Getting Assistance from Agilent" on page 3.

Ref Desig.	Description	Qty	Part Number	
	The following parts are required for ALL analyze	ers	•	
	Installation note (this document)	1	E8362-90001	
	Cable clamp	1	1400-1439	
W60	Front-panel jumper	6	08720-20098	
W65	RF cable, ch R1 attenuator to REFERENCE 1 SOURCE OUT	1	E8362-20007	
W66	RF cable, ch R2 attenuator to REFERENCE 2 SOURCE OUT	1	E8362-20008	
W67	RF cable, A25 test port 1 coupler to PORT 1 CPLR ARM	1	E8362-20020	
W68	RF cable, A26 test port 2 coupler to PORT 2 CPLR ARM	1	E8362-20021	
W69	RF cable, PORT 1 RCVR A IN to A27 ch A mixer	1	E8362-20022	
W72	RF cable, PORT 2 RCVR B IN to A30 ch B mixer	1	E8362-20023	
The following parts are required only for analyzers WITHOUT Option UNL installed				
	Lower front panel overlay (Option 014)	1	E8364-80003	
W61	RF cable, A22 switch splitter to PORT 1 SOURCE OUT	1	E8362-20016	
W62	RF cable, A22 switch splitter to PORT 2 SOURCE OUT	1	E8362-20017	
W63	RF cable, PORT 1 CPLR THRU to A25 test port 1 coupler	1	E8362-20018	
W64	RF cable, PORT 2 CPLR THRU to A26 test port 2 coupler	1	E8362-20019	
W70	RF cable, REFERENCE 1 RCVR R1 IN to A28 ch R1 mixer	1	E8362-20029	
W71	RF cable, REFERENCE 2 RCVR R2 IN to A29 ch R2 mixer	1	E8362-20030	
The following parts are required only for analyzers WITH Option UNL installed				
	Lower front panel overlay (Option UNL/014)	1	E8364-80011	
W70	RF cable, REFERENCE 1 RCVR R1 IN to A28 ch R1 mixer	1	E8362-20014	
W71	RF cable, REFERENCE 2 RCVR R2 IN to A29 ch R2 mixer	1	E8362-20015	
W81	RF cable, A36 step attenuator to PORT 1 SOURCE OUT	1	E8362-20024	
W82	RF cable, A37 step attenuator to PORT 2 SOURCE OUT	1	E8362-20025	
W83	RF cable, PORT 1 CPLR THRU to A38 bias tee	1	E8362-20012	
W84	RF cable, PORT 2 CPLR THRU to A39 bias tee	1	E8362-20013	

 Table 1
 Contents of Option 014 Upgrade Kit (E8362-60101)

## Installation Procedure for the Upgrade Kit

The network analyzer must be in proper working condition prior to installing this option. Any necessary repairs must be made before proceeding with this installation.

# WARNING This installation requires the removal of the analyzer's protective outer covers. The analyzer must be powered down and disconnected from the mains supply before performing this procedure.

#### **Electrostatic Discharge Protection**


Protection against electrostatic discharge (ESD) is essential while removing or connecting cables or assemblies within the network analyzer.

Static electricity can build up on your body and can easily damage sensitive internal circuit elements when discharged. Static discharges too small to be felt can cause permanent damage. To prevent damage to the instrument:

- *always* wear a grounded wrist strap having a  $1 M\Omega$  resistor in series with it when handling components and assemblies.
- *always* use a grounded, conductive table mat while working on the instrument.
- *always* wear a heel strap when working in an area with a conductive floor. If you are uncertain about the conductivity of your floor, wear a heel strap.

Figure 1 shows a typical ESD protection setup using a grounded mat and wrist strap. Refer to "Tools and Equipment Required for the Installation" on page 7 for part numbers.

#### Figure 1 ESD Protection Setup

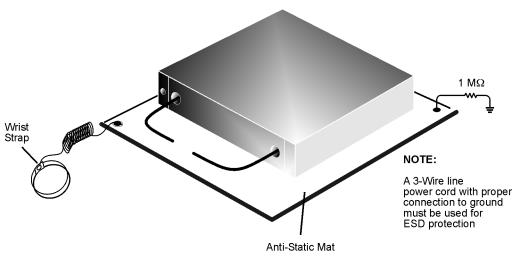

esd\_setup

#### **Overview of the Installation Procedure**

- Step 1. Remove the Outer Cover
- Step 2. Remove the Front Panel Assembly
- Step 3. Raise the Receiver Deck
- Step 4. Remove the Existing Cables
- Step 5. Install the Option 014 Cables
- Step 6. Lower and Fasten the Receiver Deck
- Step 7. Replace the Lower Front Panel Overlay
- Step 8. Reinstall the Front Panel Assembly and Install the Front Panel Jumpers
- Step 9. Reinstall the Outer Cover
- Step 10. Enable Option 014

#### **Tools and Equipment Required for the Installation**

Description	Qty	Part Number
T-10 TORX driver (set to 9 in-lbs)	1	N/A
T-20 TORX driver (set to 21 in-lbs)	1	N/A
5/16 in torque wrench (set to 10 in-lbs)	1	N/A
5/16 in torque wrench (set to 21 in-lbs)	1	N/A
ESD grounding wrist strap	1	9300-1367
5 ft grounding cord for wrist strap	1	9300-0980
2 x 4 ft conductive table mat and 15 ft grounding wire	1	9300-0797
ESD heel strap (for use with conductive floors)	1	9300-1308

**CAUTION** Use a 5/16-in torque wrench set to 10 in-lbs on all cable connections except the front-panel adapters to which the front-panel jumpers attach. Use a 5/16-in torque wrench set to 21 in-lbs for these connections.


#### Step 1. Remove the Outer Cover

**CAUTION** This procedure is best performed with the analyzer resting on its front handles in the vertical position. *Do not place the analyzer on its front panel without the handles*. This will damage the front panel assemblies.

Refer to Figure 2 for this procedure.

- 1. Disconnect the power cord (if it has not already been disconnected).
- 2. With a T-20 TORX driver, remove the strap handles (item ①) by loosening the screws (item ②) at the ends until the handle is free of the analyzer.
- 3. With a T-20 TORX driver, remove the four rear panel feet (item (3)) by removing the center screws (item (4)).
- 4. Slide the four bottom feet (item (5)) off the cover.
- 5. Slide the cover off of the frame.

#### Figure 2 Outer Cover Removal

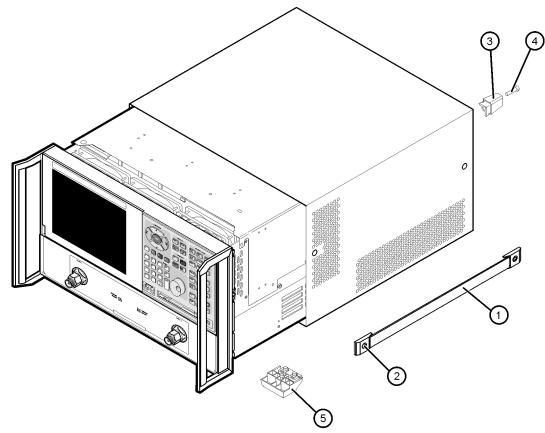

dt501a

#### Step 2. Remove the Front Panel Assembly


Refer to Figure 3 for this procedure.

1. With a T-10 TORX driver, remove the eight screws (item ①) from the sides of the frame.

**CAUTION** Before removing the front panel from the analyzer, lift and support the front of the analyzer chassis.

- 2. Slide the front panel over the test port connectors.
- 3. Disconnect the front panel interface ribbon cable (item 2). The front panel is now free from the analyzer.


Figure 3 Front Panel Assembly Removal

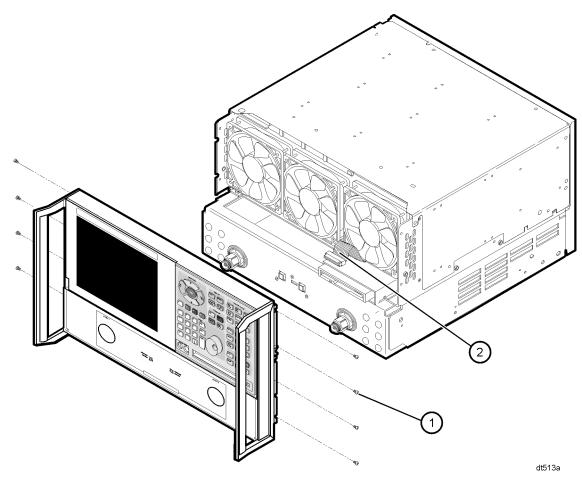


#### Step 3. Raise the Receiver Deck

Refer to Figure 4 for this procedure.

- 1. Place the analyzer bottom-side up on a flat surface.
- 2. With a T-10 TORX driver, remove the four screws, (item 1), that secure the receiver deck.
- 3. Pull the latch pin (item <sup>(2)</sup>) towards the center of the analyzer to release the receiver deck. Be sure to pull only item <sup>(2)</sup>. The other two latch pins are the pivot pins for the receiver deck. Pulling them will result in complete removal of the deck from the analyzer.
- 4. Lift the receiver deck to partially raise it, then release the latch pin (item 2). Lift the receiver deck to its fully raised position and ensure that the latch pin latches in the raised position.



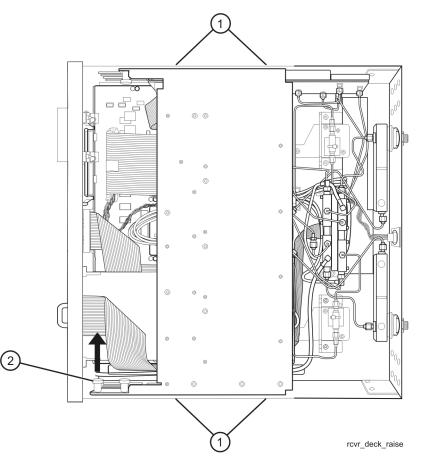

#### Step 4. Remove the Existing Cables


#### **Analyzers without Option UNL**

Refer to Figure 5 for the following procedure.

If you are installing Option 014 on an analyzer that does not have Option UNL installed, remove the following cables in the order listed:

- W7 E8362-20005 Channel R1 attenuator to A28 channel R1 mixer
- W8 E8362-20006 Channel R2 attenuator to A29 channel R2 mixer
- W9 E8364-20019 A25 test port 1 coupler to A27 channel A mixer
- W10 E8364-20020 A26 test port 2 coupler to A30 channel B mixer
- W5 E8364-20021 A22 switch splitter to A25 test port 1 coupler
- W6 E8364-20022 A22 switch splitter to A26 test port 2 coupler

Figure 5 Cable Removal, Analyzers without Option UNL

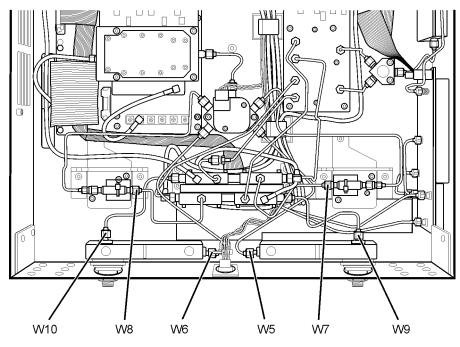

cbl\_rmv\_std


#### **Analyzers with Option UNL**

Refer to Figure 6 for the following procedure.

If you are installing Option 014 on an analyzer that has Option UNL installed, remove the following cables in the order listed:

- W8 E8362-20028 Channel R2 attenuator to A29 channel R2 mixer
- W7 E8362-20027 Channel R1 attenuator to A28 channel R1 mixer
- W53 E8362-20009 A36 step attenuator to A38 bias tee
- W54 E8362-20009 A37 step attenuator to A39 bias tee
- W10 E8364-20020 A26 test port 2 coupler to A30 channel B mixer
- W9 E8364-20019 A25 test port 1 coupler to A27 channel A mixer

#### Figure 6 Cable Removal, Analyzers with Option UNL

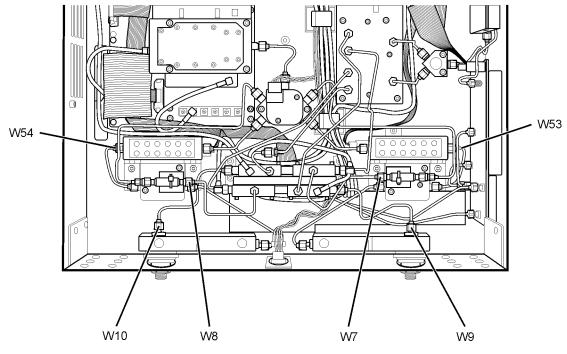

cbl\_rmv\_unl

#### Step 5. Install the Option 014 Cables


#### Analyzers without Option UNL

Refer to Figure 7 for the following procedure. The new parts referenced in this procedure are listed in Table 1 on page 5.

If you are installing Option 014 on an analyzer that does not have Option UNL installed, install the following cables in the order listed. Use a 5/16-in torque wrench set to 10 in-lbs.

- W70 E8362-20029 REFERENCE 1 RCVR R1 IN to A28 channel R1 mixer
- W71 E8362-20030 REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer
- W68 E8362-20021 A26 test port 2 coupler to PORT 2 CPLR ARM
- W72 E8362-20023 PORT 2 RCVR B IN to A30 channel B mixer
- W62 E8362-20017 A22 switch splitter to PORT 2 SOURCE OUT
- W64 E8362-20019 PORT 2 CPLR THRU to A26 test port 2 coupler
- W66 E8362-20008 Channel R2 attenuator to REFERENCE 2 SOURCE OUT
- W67 E8362-20020 A25 test port 1 coupler to PORT 1 CPLR ARM
- W69 E8362-20022 PORT 1 RCVR A IN to A27 channel A mixer
- W61 E8362-20016 A22 switch splitter to PORT 1 SOURCE OUT
- W63 E8362-20018 PORT 1 CPLR THRU to A25 test port 1 coupler
- W65 E8362-20007 Channel R1 attenuator to REFERENCE 1 SOURCE OUT

#### Figure 7 Option 014 Cable Installation, Analyzers without Option UNL

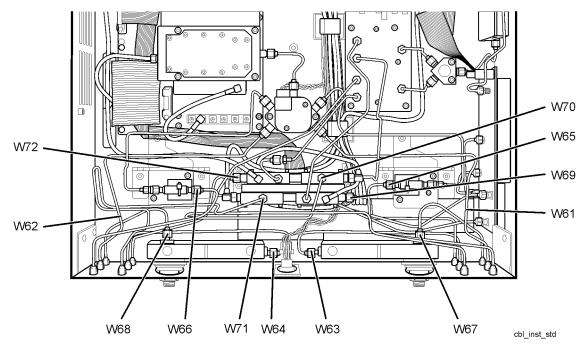


#### **Analyzers with Option UNL**

Refer to Figure 8 for the following procedure. The new parts referenced in this procedure are listed in Table 1 on page 5.

If you are installing Option 014 on an analyzer that has Option UNL installed, install the following cables in the order listed. Use a 5/16-in torque wrench set to 10 in-lbs.

- W71 E8362-20015 REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer
- W70 E8362-20014 REFERENCE 1 RCVR R1 IN to A28 channel R1 mixer
- W68 E8362-20021 A26 test port 1 coupler to PORT 2 CPLR ARM
- W72 E8362-20023 PORT 2 RCVR B IN to A30 channel B mixer
- W82 E8362-20025 A37 step attenuator to PORT 2 SOURCE OUT
- W84 E8362-20013 PORT 2 CPLR THRU to A39 bias tee
- W66 E8362-20008 Channel R2 attenuator to REFERENCE 2 SOURCE OUT
- W67 E8362-20020 A25 test port 1 coupler to PORT 1 CPLR ARM
- W69 E8362-20022 PORT 1 RCVR A IN to A27 channel A mixer
- W81 E8362-20024 A36 step attenuator to PORT 1 SOURCE OUT
- W83 E8362-20012 PORT 1 CPLR THRU to A38 bias tee
- W65 E8362-20007 Channel R1 attenuator to REFERENCE 1 SOURCE OUT

#### Figure 8 Option 014 Cable Installation, Analyzers with Option UNL

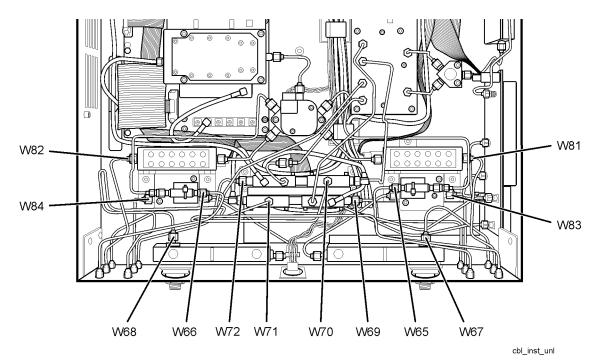


#### Step 6. Lower and Fasten the Receiver Deck

Refer to Figure 9 for this procedure.

- 1. Pull the latch pin (item 2) toward the center of the analyzer to release the receiver deck.
- 2. Lift the receiver deck to partially lower it, then release the latch pin (item 2). Lower the receiver deck to its fully lowered position and ensure that the latch pin latches in the lowered position.
- 3. With a T-10 TORX driver, install the four screws (item 1) to secure the receiver deck.

Figure 9 Receiver Deck, Lowering

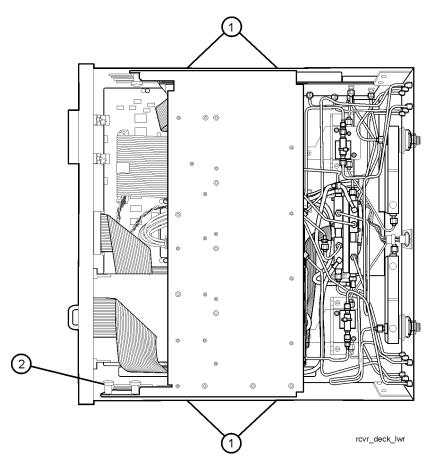


#### Step 7. Replace the Lower Front Panel Overlay

**NOTE** The new parts referenced in this procedure are listed in Table 1 on page 5.

Refer to Figure 10 for this procedure.

- 1. From the back side of the front panel, use a blunt object in one of the cutouts in the lower frame to push the overlay (item ①) and separate it from the front panel.
- 2. From the front side of the front panel, pull the overlay completely off and discard it.
- 3. Remove any adhesive remaining on the front panel.
- 4. Remove the protective backing from the new front panel overlay (item ①). Note that there are two overlays provided: one for Option 014 only and one for Option 014 in combination with Option UNL. Make sure you install the proper one for your analyzer:
  - The Port 1 and 2 SOURCE OUT labels for the Option 014 only overlay reads 40 VDC.
  - The Port 1 and 2 SOURCE OUT labels for the Option UNL/014 overlay reads 0 VDC.
- 5. Starting from either the left or right side, *loosely* place the overlay in the recess on the lower front panel, ensuring that it fits tightly against the recess edges.
- 6. Once the overlay is in place, press it firmly onto the frame to secure it.

#### Figure 10 Lower Front Panel Overlay Replacement

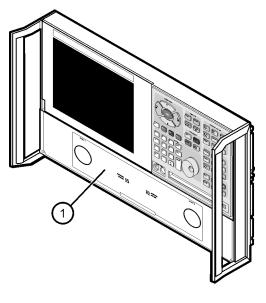

dt519a


#### Step 8. Reinstall the Front Panel Assembly and Install the Front Panel Jumpers

**CAUTION** Before installing the front panel assembly onto the analyzer, lift and support the front of the analyzer chassis.

Refer to Figure 11 for this procedure.

- 1. Tighten all 12 of the front-panel feed-through connectors using a 5/16-in torque wrench set to 21-in lbs.
- 2. Reconnect the ribbon cable (item ①) to the A3 front panel interface board.
- 3. Slide the front panel over the test port connectors being careful to align the power switch and floppy disk drive to their corresponding front panel cutouts. Ensure that the ribbon cable ① is located below the fan to prevent it from being damaged by the fan blades.
- 4. With a T-10 TORX driver, install the eight screws (item 2) in the sides of the frame.
- 5. Install the six semirigid jumpers (item (3)) on the front panel, and tighten to 10-in lbs.

#### Figure 11 Front Panel Assembly Reinstallation

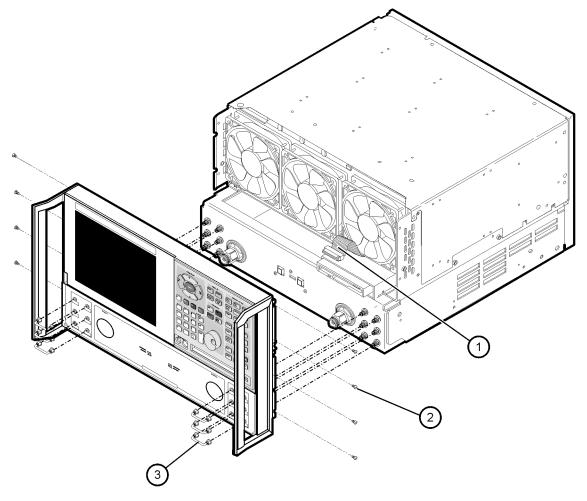

dt511a


#### Step 9. Reinstall the Outer Cover

**CAUTION** This procedure is best performed with the analyzer resting on its front handles in the vertical position. *Do not place the analyzer on its front panel without the handles*. This will damage the front panel assemblies.

Refer to Figure 12 for this procedure.

- 1. Slide the cover over the analyzer frame.
- 2. With a T-20 TORX driver, install the four rear panel feet (item 1) by installing the center screws (item 2).
- 3. Slide the four bottom feet (item (3)) into position on the cover.
- 4. With a T-20 TORX driver, install the strap handles (item ④) by installing the screws (item ⑤) at the ends of the handles.

#### Figure 12 Outer Cover Reinstallation

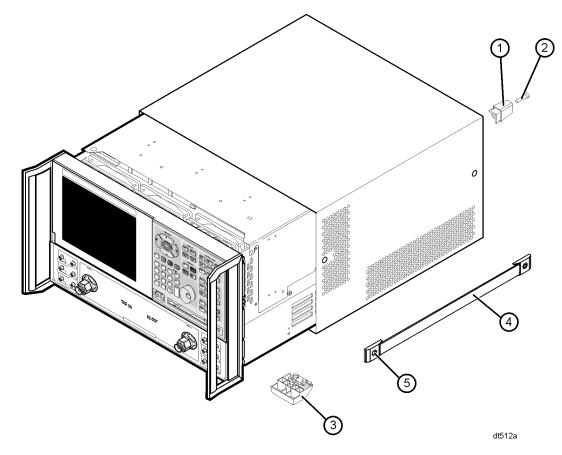

#### Step 10. Enable Option 014

#### **Procedure Requirements**

- The analyzer must be powered up and operating to perform this procedure.
- The Network Analyzer program must be running.
- A mouse must be connected to the analyzer for this procedure.

#### **Enable Option 014**

- 1. On the analyzer's **System** menu, point to **Service**, and then click **Option Enable**.
- 2. In the Select Desired Option list, click 014 Configurable Test Set.
- 3. Click Enable.
- 4. Click Yes in answer to the displayed question in the Restart Analyzer? box.
- 5. When the installation is complete, click **Exit**.

#### Verify that Option 014 is Enabled

- 1. On the analyzer's Help menu, click About Network Analyzer.
- 2. Verify that "014" is listed after "Options:" in the display.
- 3. Click OK.

NOTE If Option 014 has not been enabled, perform step 10 again. If the option is still not enabled, contact Agilent Technologies. Refer to "Getting Assistance from Agilent" on page 3.