

Installation Note

Configurable Test Set Upgrade Kit

For E8362B PNA Series Microwave Network Analyzers

Network Analyzer Model Number	Upgrade Kit Part Number
E8362B	E8362-60106



Agilent Part Number: E8362-90007

Printed in USA September 2007

Supersedes print date: March 2007

© Agilent Technologies, Inc. 2003, 2005, 2007



WARRANTY STATEMENT

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED “AS IS,” AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AGILENT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. AGILENT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD AGILENT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

DFARS/Restricted Rights Notice

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Notes

The following safety notes are used throughout this document. Familiarize yourself with each of these notes and its meaning before performing any of the procedures in this document.

WARNING	Warning denotes a hazard. It calls attention to a procedure which, if not correctly performed or adhered to, could result in injury or loss of life. Do not proceed beyond a warning note until the indicated conditions are fully understood and met.
----------------	---

CAUTION	Caution denotes a hazard. It calls attention to a procedure that, if not correctly performed or adhered to, could result in damage to or destruction of the instrument. Do not proceed beyond a caution sign until the indicated conditions are fully understood and met.
----------------	---

Printing Copies of Documentation from the Web

To print copies of documentation from the Web, download the PDF file from the Agilent web site:

- Go to www.agilent.com.
- Enter the document's part number (located on the title page) in the Search box and click **Search**.
- Open the PDF and print the document.

Contacting Agilent

Assistance with test and measurements needs and information or finding a local Agilent office are available on the Web at:

www.agilent.com/find/assist

If you do not have access to the Internet, please contact your Agilent field engineer.

NOTE In any correspondence or telephone conversation, refer to the Agilent product by its model number and full serial number. With this information, the Agilent representative can determine whether your product is still within its warranty period.

About Installing the Upgrade Kit

IMPORTANT Option 014 can only be installed on analyzers with the option combinations listed below as “Products affected”. If your analyzer does not have the proper options (as listed below), it will be necessary to install those options **BEFORE** installing this option (Option 014).

Products affected.	E8362B; without Option UNL or 016 E8362B; Option UNL E8362B; Options UNL and 016
Installation to be performed by	Agilent service center or personnel qualified by Agilent
Estimated installation time	2.0 hours
Estimated adjustment time	0.5 hours
Estimated full instrument calibration time	4.5 hours

Description of Option 014

An Option 014 analyzer can be configured to measure high-power devices and devices that require high dynamic range.

For a high-power measurement, external amplifiers and high power attenuators or isolators can be added to complete the test setup. In this configuration, test-port output-power up to 1 Watt (+30 dBm) can be applied to the device under test (DUT). Additionally, there is an external reference input that allows the external amplifier’s frequency response and drift to be ratioed out.

For high dynamic range measurements, front panel jumpers are configured to reverse the signal path through one of the couplers. This allows for a 15 dB improvement in transmitted signal sensitivity in one direction only. These jumpers can also be configured on both ports, allowing the user to perform high dynamic range measurements in both the forward and reverse directions.

Items Included in the Upgrade Kit

Check the contents of your kit against this list. If any item is missing or damaged, contact Agilent Technologies. Refer to [“Contacting Agilent” on page 3](#).

Table 1 Contents of Option 014 Upgrade Kit (E8362-60106)

Ref Desig.	Description	Qty	Part Number
These parts are for ALL analyzers			
	Installation note (this document)	1	E8362-90007
	Cable clamp	1	1400-1439
W60	Front-panel jumper	6	08720-20098
W65	RF cable, channel R1 attenuator to REFERENCE 1 SOURCE OUT	1	E8362-20007
W66	RF cable, channel R2 attenuator to REFERENCE 2 SOURCE OUT	1	E8362-20053
W67	RF cable, A25 test port 1 coupler to PORT 1 CPLR ARM	1	E8362-20020
W68	RF cable, A26 test port 2 coupler to PORT 2 CPLR ARM	1	E8362-20021
These parts are for analyzers WITHOUT Option UNL OR Option 016			
	Lower front panel overlay (Option 014)	1	E8364-80003
W61	RF cable, A22 switch splitter to PORT 1 SOURCE OUT	1	E8362-20016
W62	RF cable, A22 switch splitter to PORT 2 SOURCE OUT	1	E8362-20017
W63	RF cable, PORT 1 CPLR THRU to A25 test port 1 coupler	1	E8362-20018
W64	RF cable, PORT 2 CPLR THRU to A26 test port 2 coupler	1	E8362-20019
W69	RF cable, PORT 1 RCVR A IN to A27 channel A mixer	1	E8362-20022
W70	RF cable, REFERENCE 1 RCVR R1 IN to A28 channel R1 mixer	1	E8362-20029
W71	RF cable, REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer	1	E8362-20030
W72	RF cable, PORT 2 RCVR B IN to A30 channel B mixer	1	E8362-20023
These parts are for analyzers WITH Option UNL but WITHOUT Option 016			
	Lower front panel overlay (Option UNL/014)	1	E8364-80011
W69	RF cable, PORT 1 RCVR A IN to A27 channel A mixer	1	E8362-20022
W70	RF cable, REFERENCE 1 RCVR R1 IN to A28 channel R1 mixer	1	E8362-20014
W71	RF cable, REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer	1	E8362-20015
W72	RF cable, PORT 2 RCVR B IN to A30 channel B mixer	1	E8362-20023
W81	RF cable, A36 step attenuator to PORT 1 SOURCE OUT	1	E8362-20024
W82	RF cable, A37 step attenuator to PORT 2 SOURCE OUT	1	E8362-20025
W83	RF cable, PORT 1 CPLR THRU to A38 bias tee	1	E8362-20012

Table 1 Contents of Option 014 Upgrade Kit (E8362-60106)

Ref Desig.	Description	Qty	Part Number
W84	RF cable, PORT 2 CPLR THRU to A39 bias tee	1	E8364-20013
These parts are for analyzers WITH Option UNL AND Option 016			
	Lower front panel overlay (Option UNL/014/016)	1	E8364-80024
W49	PORT 1 RCVR A IN to A43 channel A step attenuator	1	E8362-20035
W50	PORT 2 RCVR B IN to A44 channel B step attenuator	1	E8362-20036
W70	REFERENCE 1 RCVR R1 IN to A28 channel R1 mixer	1	E8362-20041
W71	REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer	1	E8362-20038
W81	A36 step attenuator to PORT 1 SOURCE OUT	1	E8362-20024
W82	A37 step attenuator to PORT 2 SOURCE OUT	1	E8362-20025
W83	PORT 1 CPLR THRU to A38 bias tee	1	E8362-20012
W84	PORT 2 CPLR THRU to A39 bias tee	1	E8362-20013

Installation Procedure for the Upgrade Kit

The network analyzer must be in proper working condition prior to installing this option. Any necessary repairs must be made before proceeding with this installation.

WARNING **This installation requires the removal of the analyzer’s protective outer covers. The analyzer must be powered down and disconnected from the mains supply before performing this procedure.**

Electrostatic Discharge Protection


Protection against electrostatic discharge (ESD) is essential while removing or connecting cables or assemblies within the network analyzer.

Static electricity can build up on your body and can easily damage sensitive internal circuit elements when discharged. Static discharges too small to be felt can cause permanent damage. To prevent damage to the instrument:

- *always* wear a grounded wrist strap having a 1 M Ω resistor in series with it when handling components and assemblies.
- *always* use a grounded, conductive table mat while working on the instrument.
- *always* wear a heel strap when working in an area with a conductive floor. If you are uncertain about the conductivity of your floor, wear a heel strap.
- *always* ground yourself before you clean, inspect, or make a connection to a static-sensitive device or test port. You can, for example, grasp the grounded outer shell of the test port or cable connector briefly.

Figure 1 shows a typical ESD protection setup using a grounded mat and wrist strap. Refer to “Tools and Equipment Required for the Installation” on page 8 for part numbers.

Figure 1 **ESD Protection Setup**

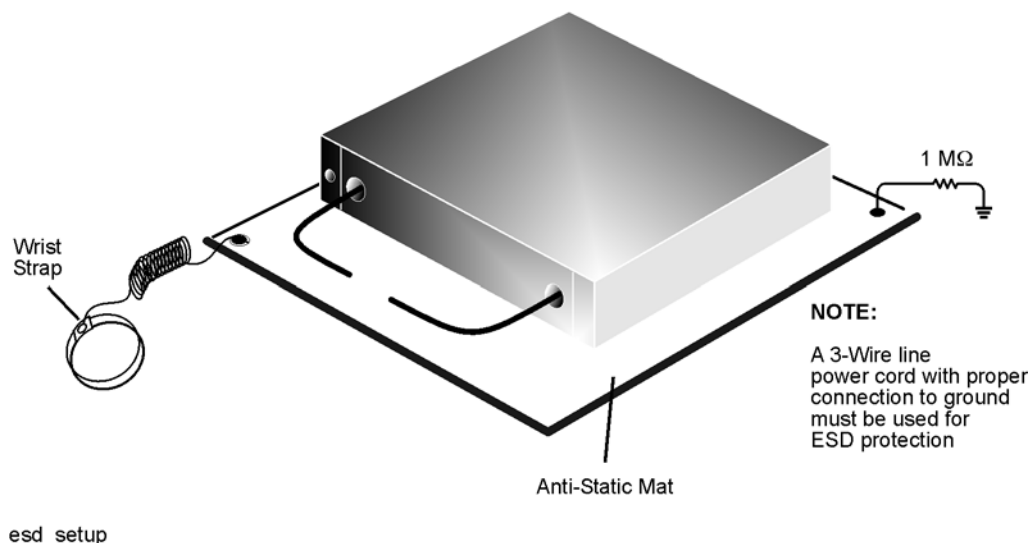

Overview of the Installation Procedure

Step 1. Remove the Outer Cover.

Step 2. Remove the Front Panel Assembly.

Step 3. Raise the Receiver Deck.

Step 4. Remove the Existing Cables.

Step 5. Install the Option 014 Cables.

Step 6. Lower and Fasten the Receiver Deck.

Step 7. Replace the Lower Front Panel Overlay.

Step 8. Reinstall the Front Panel Assembly and Install the Front Panel Jumpers.

Step 9. Reinstall the Outer Cover.

Step 10. Enable Option 014.

Step 12. Perform Post-Upgrade Adjustments and Calibration.

Tools and Equipment Required for the Installation

Description	Qty	Part Number
T-10 TORX driver (set to 9 in-lbs)	1	N/A
T-20 TORX driver (set to 21 in-lbs)	1	N/A
5/16-in torque wrench (set to 10 in-lbs)	1	N/A
5/16-in torque wrench (set to 21 in-lbs)	1	N/A
ESD grounding wrist strap	1	9300-1367
5-ft grounding cord for wrist strap	1	9300-0980
2 x 4 ft conductive table mat and 15-ft grounding wire	1	9300-0797
ESD heel strap (for use with conductive floors)	1	9300-1308

CAUTION Use a 5/16-in torque wrench set to 10 in-lbs on all cable connections except the front-panel adapters to which the front-panel jumpers attach. Use a 5/16-in torque wrench set to 21 in-lbs for these connections.

Equipment Required for Post-Upgrade Adjustments

Equipment Type	Model or Part Number	Alternate Model or Part Number
Power meter	E4418B/E4419B	E4418A/E4419A
Power sensor, 3.5 mm	E4413A	8485A
Adapter, 3.5 mm (f) to 3.5 mm (f)	83059B	85052-60012
RF cable, 3.5 mm (f) to 3.5 mm (f)	85131C	85131E


Step 1. Remove the Outer Cover

CAUTION This procedure is best performed with the analyzer resting on its front handles in the vertical position. *Do not place the analyzer on its front panel without the handles.* This will damage the front panel assemblies.

Refer to [Figure 2](#) for this procedure.

1. Disconnect the power cord (if it has not already been disconnected).
2. With a T-20 TORX driver, remove the strap handles (item ①) by loosening the screws (item ②) on both ends until the handle is free of the analyzer.
3. With a T-20 TORX driver, remove the four rear panel feet (item ③) by removing the center screws (item ④).
4. Slide the four bottom feet (item ⑤) off the cover.
5. Slide the cover off of the frame.

Figure 2 Outer Cover Removal

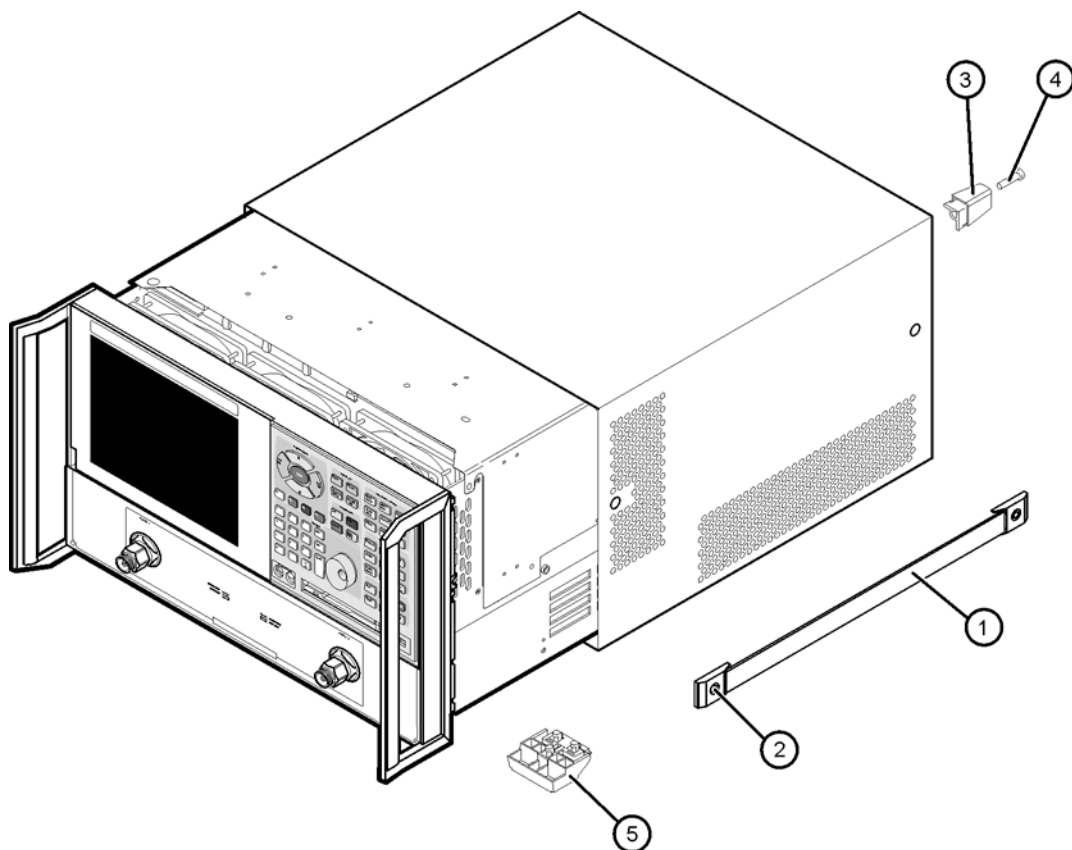

dt501a

Step 2. Remove the Front Panel Assembly


Refer to [Figure 3](#) for this procedure.

1. With a T-10 TORX driver, remove the eight screws (item ①) from the sides of the frame.

CAUTION Before removing the front panel from the analyzer, lift and support the front of the analyzer chassis.

2. Slide the front panel over the test port connectors.
3. Disconnect the front panel interface ribbon cable (item ②). The front panel is now free from the analyzer.

Figure 3 Front Panel Assembly Removal

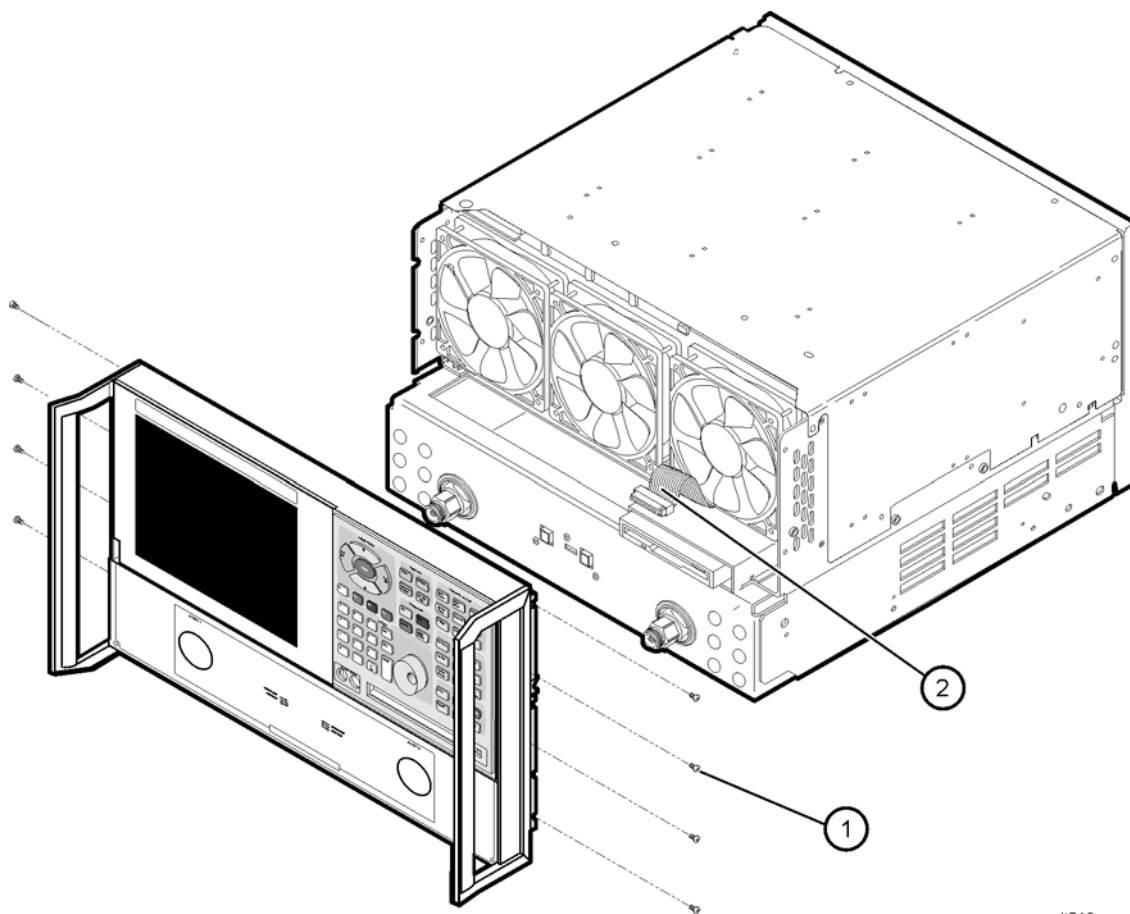


dt513a

Step 3. Raise the Receiver Deck

Refer to [Figure 4](#) for this procedure.

1. Place the analyzer bottom-side up on a flat surface.
2. With a T-10 TORX driver, remove the four screws, (item ①), that secure the receiver deck.
3. Pull the latch pin (item ②) towards the center of the analyzer to release the receiver deck. Be sure to pull only item ②. The other two latch pins are the pivot pins for the receiver deck. Pulling them will result in complete removal of the deck from the analyzer.
4. Lift the receiver deck to partially raise it, then release the latch pin (item ②). Lift the receiver deck to its fully raised position and ensure that the latch pin latches in the raised position.

Figure 4 Receiver Deck, Raising

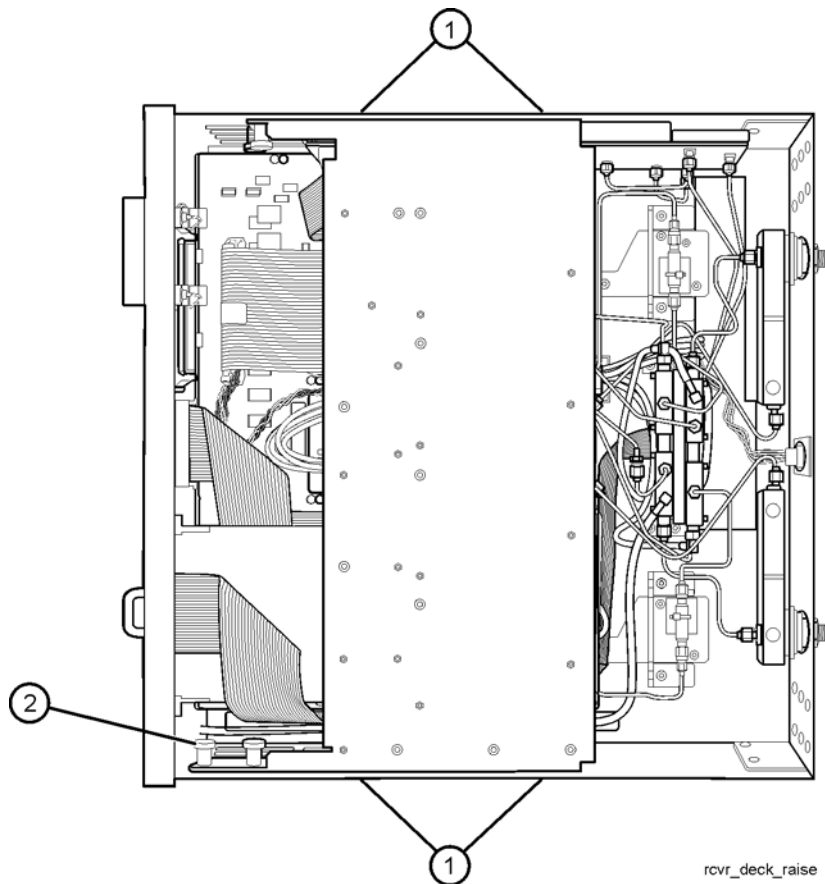

Step 4. Remove the Existing Cables


Analyzers WITHOUT Option UNL OR 016

Refer to [Figure 5](#) for this procedure.

Remove the following cables in the order listed:

- W7 E8362-20005 Channel R1 attenuator to A28 channel R1 mixer
- W8 E8362-20006 Channel R2 attenuator to A29 channel R2 mixer
- W9 E8364-20019 A25 test port 1 coupler to A27 channel A mixer
- W10 E8364-20020 A26 test port 2 coupler to A30 channel B mixer
- W5 E8364-20021 A22 switch splitter to A25 test port 1 coupler
- W6 E8364-20022 A22 switch splitter to A26 test port 2 coupler

Figure 5 Cable Removal, Analyzers without Option UNL or 016

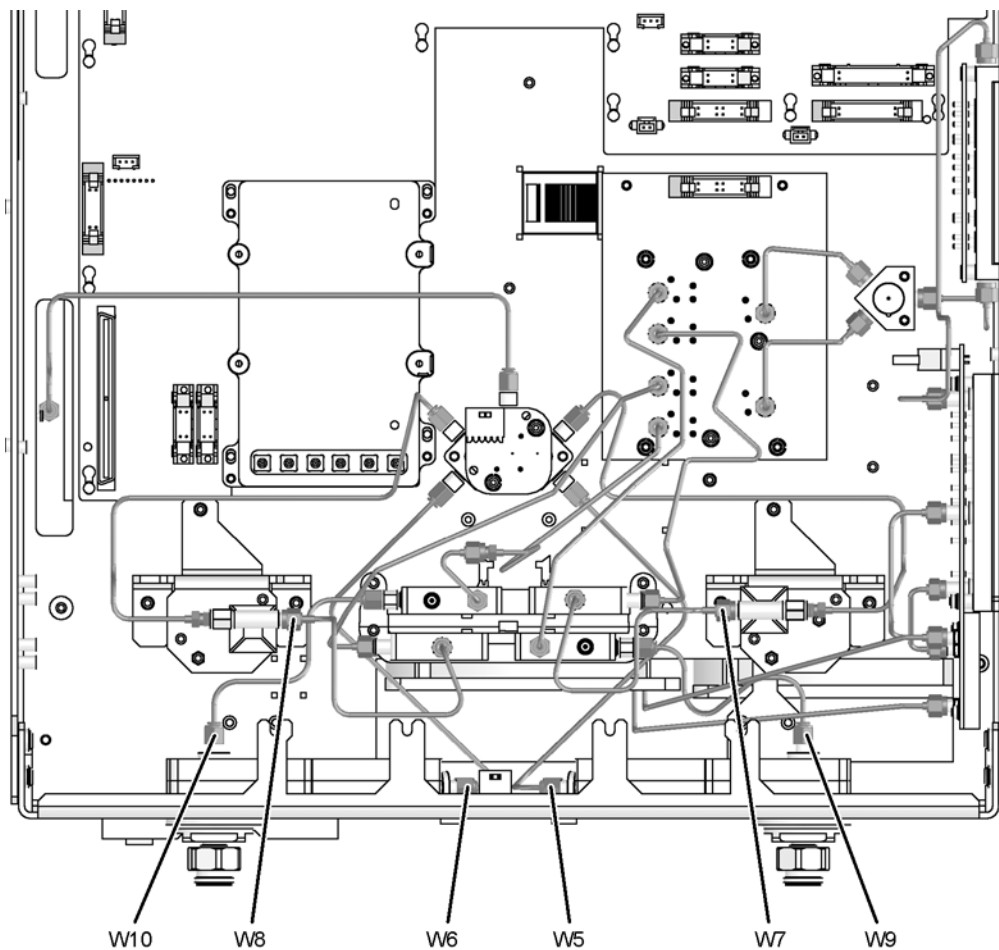

8362_007_01


Analyzers WITH Option UNL but WITHOUT Option 016

Refer to [Figure 6](#) for the following procedure.

If you are installing Option 014 on an analyzer that has Option UNL installed, remove the following cables in the order listed:

- W8 E8362-20028 Channel R2 attenuator to A29 channel R2 mixer
- W7 E8362-20027 Channel R1 attenuator to A28 channel R1 mixer
- W53 E8364-20077 A36 step attenuator to A38 bias tee
- W54 E8364-20077 A37 step attenuator to A39 bias tee
- W10 E8364-20020 A26 test port 2 coupler to A30 channel B mixer
- W9 E8364-20019 A25 test port 1 coupler to A27 channel A mixer

Figure 6 Cable Removal, Analyzers with Option UNL but without Option 016

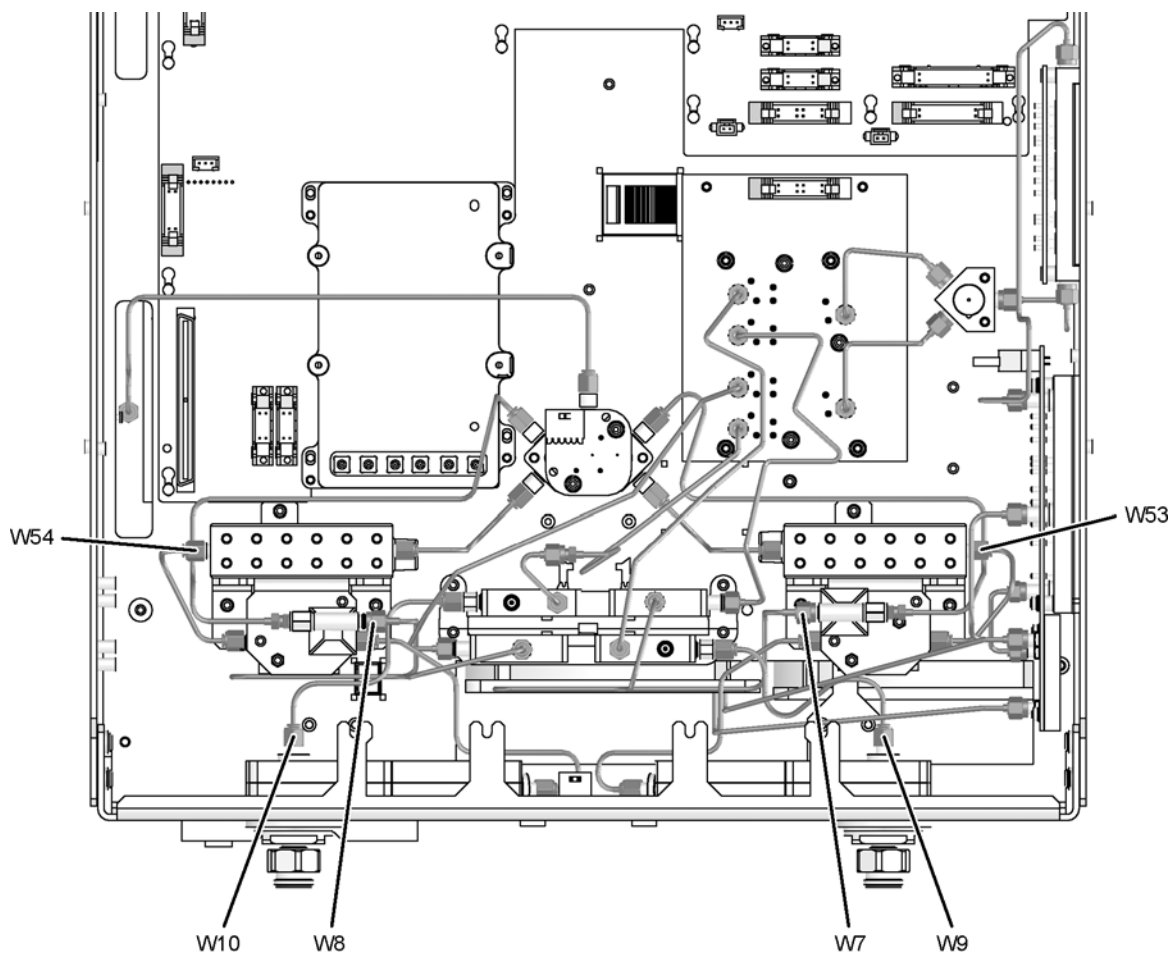

8362_007_02


Analyzers WITH Options UNL AND 016

Refer to [Figure 7](#) for the following procedure.

If you are installing Option 014 on an analyzer that has Option UNL installed, remove the following cables in the order listed:

- W8 E8362-20028 Channel R2 attenuator to A29 channel R2 mixer
- W7 E8362-20027 Channel R1 attenuator to A28 channel R1 mixer
- W53 E8364-20077 A36 step attenuator to A38 bias tee
- W54 E8364-20077 A37 step attenuator to A39 bias tee
- W46 E8364-20148 A26 test port 2 coupler to A44 step attenuator
- W45 E8364-20147 A25 test port 1 coupler to A43 step attenuator

Figure 7 Cable Removal, Analyzers with Options UNL and 016

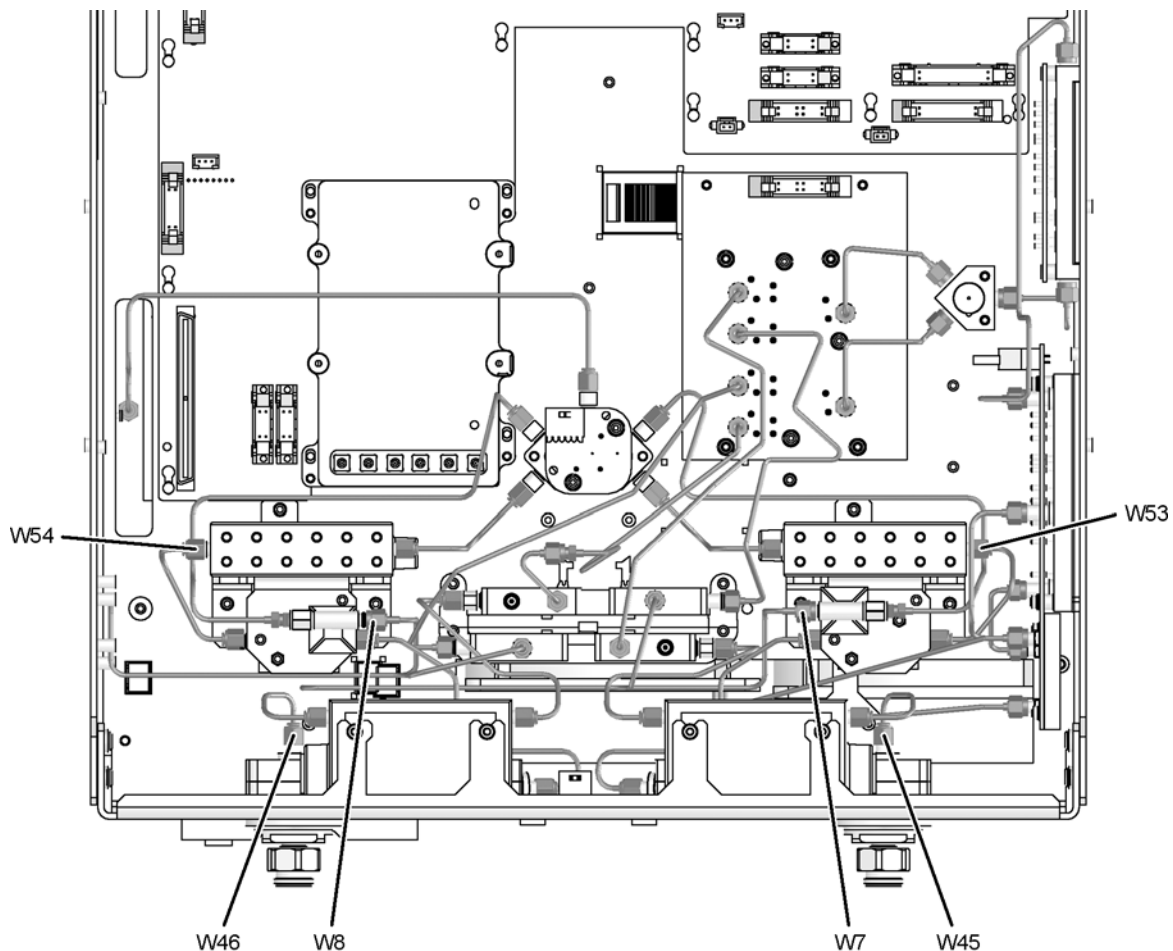

8362_007_03

Step 5. Install the Option 014 Cables


Analyzers WITHOUT Option UNL OR 016

Refer to [Figure 8](#) for the following procedure. The new parts referenced in this procedure are listed in [Table 1 on page 5](#).

If you are installing Option 014 on an analyzer that does not have Option UNL installed, install the following cables in the order listed. Use a 5/16-in torque wrench set to 10 in-lbs.

- W70 E8362-20029 REFERENCE 1 RCVR R1 IN to A28 channel R1 mixer
- W71 E8362-20030 REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer
- W68 E8362-20021 A26 test port 2 coupler to PORT 2 CPLR ARM
- W72 E8362-20023 PORT 2 RCVR B IN to A30 channel B mixer
- W62 E8362-20017 A22 switch splitter to PORT 2 SOURCE OUT
- W64 E8362-20019 PORT 2 CPLR THRU to A26 test port 2 coupler
- W66 E8362-20053 Channel R2 attenuator to REFERENCE 2 SOURCE OUT
- W67 E8362-20020 A25 test port 1 coupler to PORT 1 CPLR ARM
- W69 E8362-20022 PORT 1 RCVR A IN to A27 channel A mixer
- W61 E8362-20016 A22 switch splitter to PORT 1 SOURCE OUT
- W63 E8362-20018 PORT 1 CPLR THRU to A25 test port 1 coupler
- W65 E8362-20007 Channel R1 attenuator to REFERENCE 1 SOURCE OUT

Figure 8 Cable Installation, Analyzers without Option UNL or 016

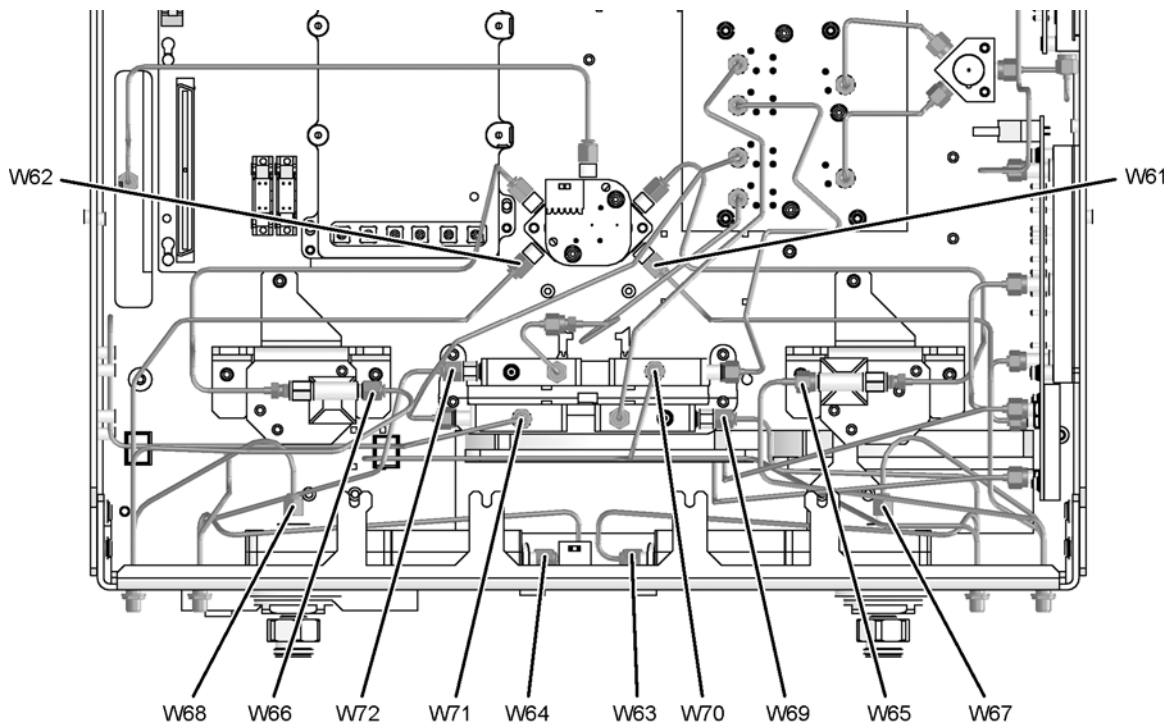

8362_007_04


Analyzers WITH Option UNL but WITHOUT Option 016

Refer to [Figure 9](#) for the following procedure. The new parts referenced in this procedure are listed in [Table 1 on page 5](#).

If you are installing Option 014 on an analyzer that has Option UNL installed, install the following cables in the order listed. Use a 5/16-in torque wrench set to 10 in-lbs.

- W71 E8362-20015 REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer
- W70 E8362-20014 REFERENCE 1 RCVR R1 IN to A28 channel R1 mixer
- W68 E8362-20021 A26 test port 1 coupler to PORT 2 CPLR ARM
- W72 E8362-20023 PORT 2 RCVR B IN to A30 channel B mixer
- W82 E8362-20025 A37 step attenuator to PORT 2 SOURCE OUT
- W84 E8362-20013 PORT 2 CPLR THRU to A39 bias tee
- W66 E8362-20053 Channel R2 attenuator to REFERENCE 2 SOURCE OUT
- W67 E8362-20020 A25 test port 1 coupler to PORT 1 CPLR ARM
- W69 E8362-20022 PORT 1 RCVR A IN to A27 channel A mixer
- W81 E8362-20024 A36 step attenuator to PORT 1 SOURCE OUT
- W83 E8362-20012 PORT 1 CPLR THRU to A38 bias tee
- W65 E8362-20007 Channel R1 attenuator to REFERENCE 1 SOURCE OUT

Figure 9 Cable Installation, Analyzers with Option UNL but without Option 016

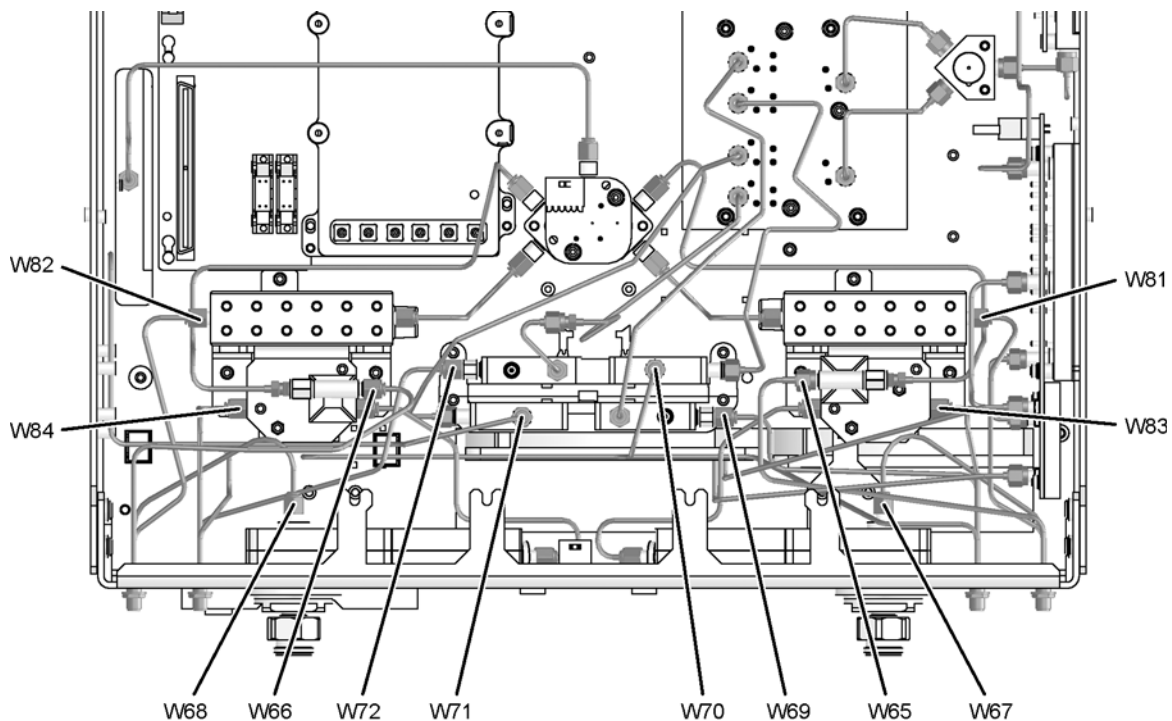

8362_007_05


Analyzers WITH Options UNL AND 016

Refer to [Figure 10](#) for the following procedure. The new parts referenced in this procedure are listed in [Table 1 on page 5](#).

If you are installing Option 014 on an analyzer that has Option UNL installed, install the following cables in the order listed. Use a 5/16-in torque wrench set to 10 in-lbs.

- W71 E8362-20038 REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer
- W70 E8362-20041 REFERENCE 1 RCVR R1 IN to A28 channel R1 mixer
- W68 E8362-20021 A26 test port 1 coupler to PORT 2 CPLR ARM
- W50 E8362-20036 PORT 2 RCVR B IN to A44 step attenuator
- W82 E8362-20025 A37 step attenuator to PORT 2 SOURCE OUT
- W84 E8362-20013 PORT 2 CPLR THRU to A39 bias tee
- W66 E8362-20053 Channel R2 attenuator to REFERENCE 2 SOURCE OUT
- W67 E8362-20020 A25 test port 1 coupler to PORT 1 CPLR ARM
- W49 E8362-20035 PORT 1 RCVR A IN to A43 step attenuator
- W81 E8362-20024 A36 step attenuator to PORT 1 SOURCE OUT
- W83 E8362-20012 PORT 1 CPLR THRU to A38 bias tee
- W65 E8362-20007 Channel R1 attenuator to REFERENCE 1 SOURCE OUT

Figure 10 Cable Installation, Analyzers with Options UNL and 016

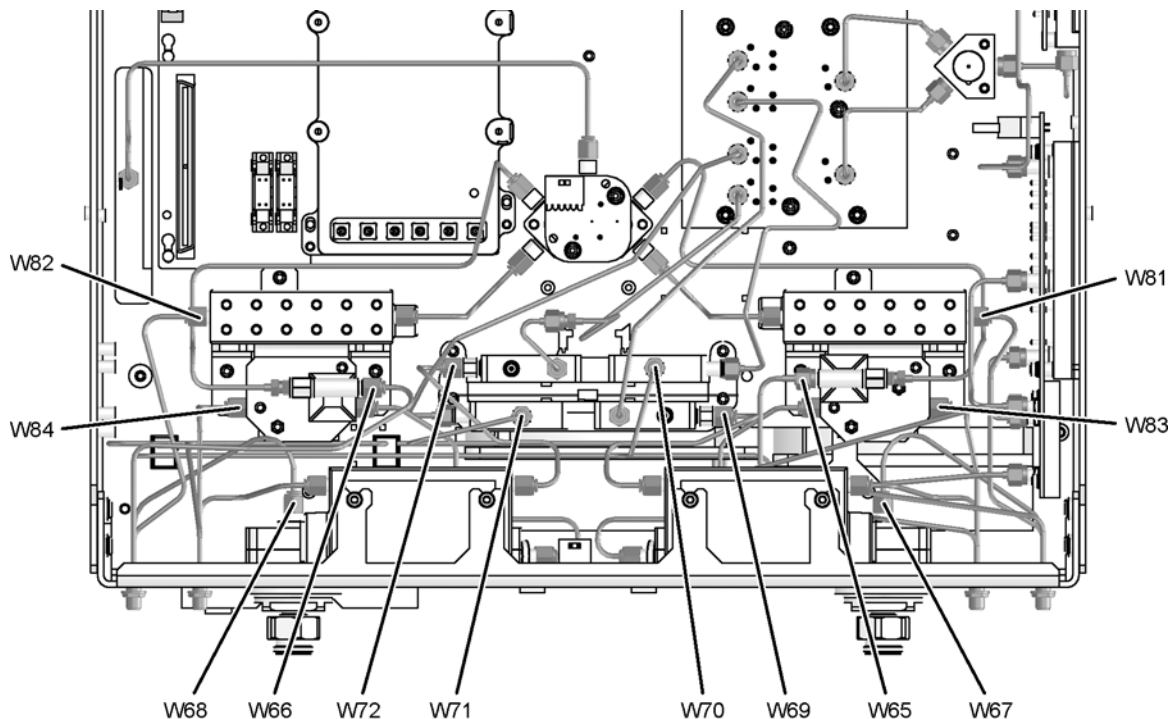


8362_007_06

Step 6. Lower and Fasten the Receiver Deck

Refer to [Figure 11](#) for this procedure.

1. Pull the latch pin (item ②) toward the center of the analyzer to release the receiver deck.
2. Lift the receiver deck to partially lower it, then release the latch pin (item ②). Lower the receiver deck to its fully lowered position and ensure that the latch pin latches in the lowered position.
3. With a T-10 TORX driver, install the four screws (item ①) to secure the receiver deck.

Figure 11 Receiver Deck, Lowering

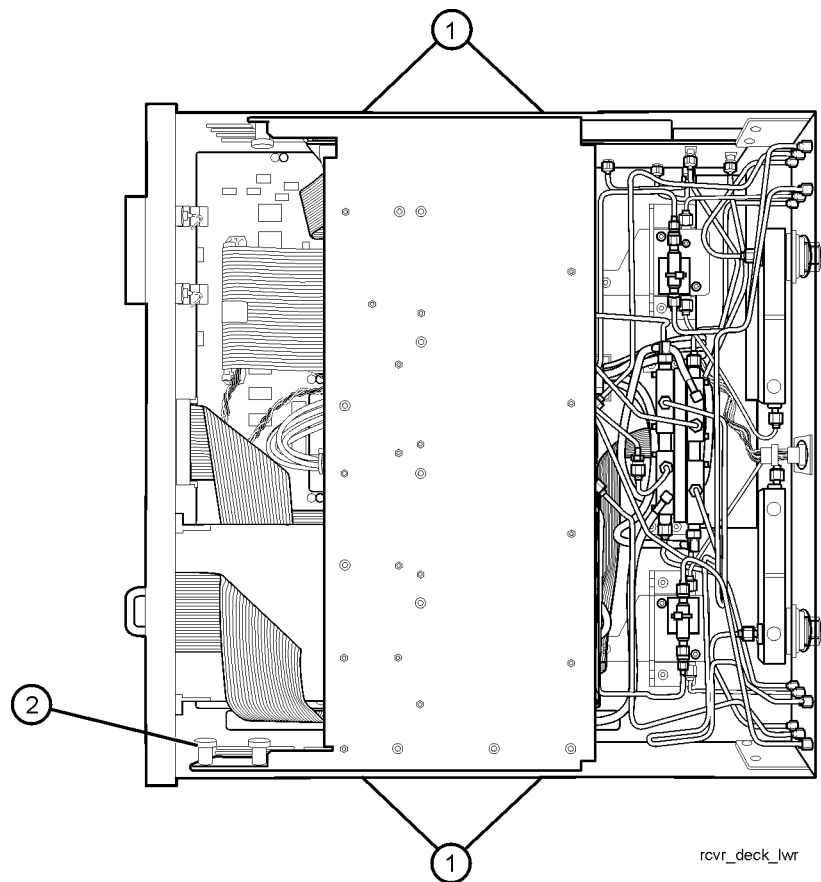


Step 7. Replace the Lower Front Panel Overlay

NOTE The new parts referenced in this procedure are listed in [Table 1 on page 5](#).

Refer to [Figure 12](#) for this procedure.

1. From the back side of the front panel, use a blunt object in one of the cutouts in the lower frame to push the overlay (item ①) and separate it from the front panel.
2. From the front side of the front panel, pull off the overlay completely and discard it.
3. Remove any adhesive remaining on the front panel.
4. Remove the protective backing from the new front panel overlay (item ①). Make sure you select the proper overlay for your analyzer. There are three overlays provided:
 - One for Option 014 only:
The port SOURCE OUT labels read 40 VDC and the port RCVR IN labels read 15 VDC.
 - One for Option UNL/014:
The port SOURCE OUT labels read 0 VDC and the port RCVR IN labels read 15 VDC.
 - One for Option UNL/014/016:
The port SOURCE OUT labels read 0 VDC and the port RCVR IN labels read 0 VDC.
5. Starting from either the left or right side, *loosely* place the overlay in the recess on the lower front panel, ensuring that it fits tightly against the recess edges.
6. Once the overlay is in place, press it firmly onto the frame to secure it.

Figure 12 Lower Front Panel Overlay Replacement

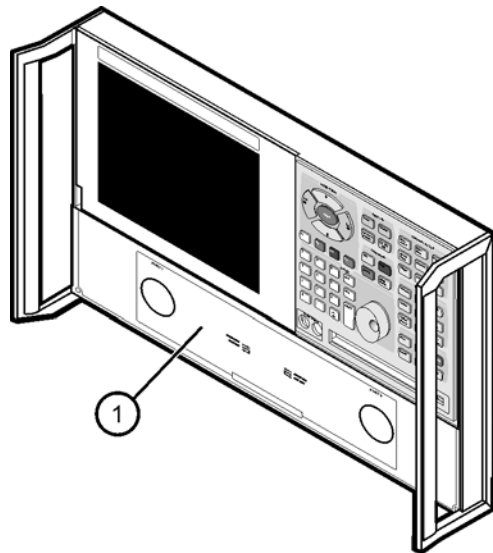

dt519a


Step 8. Reinstall the Front Panel Assembly and Install the Front Panel Jumpers

CAUTION Before installing the front panel assembly onto the analyzer, lift and support the front of the analyzer chassis.

Refer to [Figure 13](#) for this procedure.

1. Tighten all 12 of the front-panel feed-through connectors using a 5/16-in torque wrench set to 21-in lbs.
2. Reconnect the ribbon cable (item ①) to the A3 front panel interface board.
3. Slide the front panel over the test port connectors being careful to align the power switch and floppy disk drive to their corresponding front panel cutouts. Ensure that the ribbon cable (item ①) is located below the fan to prevent it from being damaged by the fan blades.
4. With a T-10 TORX driver, install the eight screws (item ②) in the sides of the frame.
5. Install the six semirigid jumpers (item ③) on the front panel, and tighten to 10-in lbs.

Figure 13 Front Panel Assembly Reinstallation

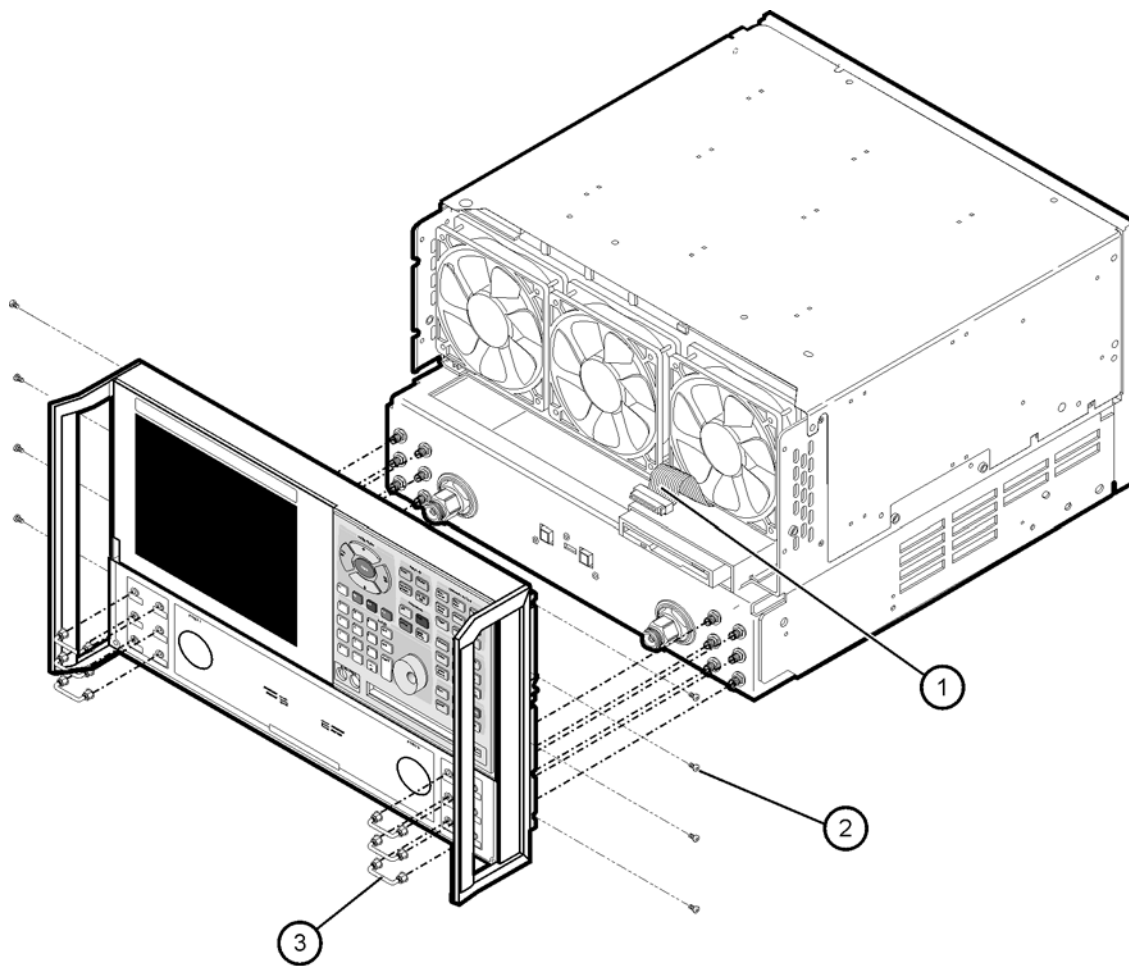

d511a


Step 9. Reinstall the Outer Cover

CAUTION This procedure is best performed with the analyzer resting on its front handles in the vertical position. *Do not place the analyzer on its front panel without the handles.* This will damage the front panel assemblies.

Refer to [Figure 14](#) for this procedure.

1. Slide the cover over the analyzer frame.
2. With a T-20 TORX driver, install the four rear panel feet (item ①) by installing the center screws (item ②).
3. Slide the four bottom feet (item ③) into position on the cover.
4. With a T-20 TORX driver, install the strap handles (item ④) by installing the screws (item ⑤) on both ends of the handles.

Figure 14 Outer Cover Reinstallation

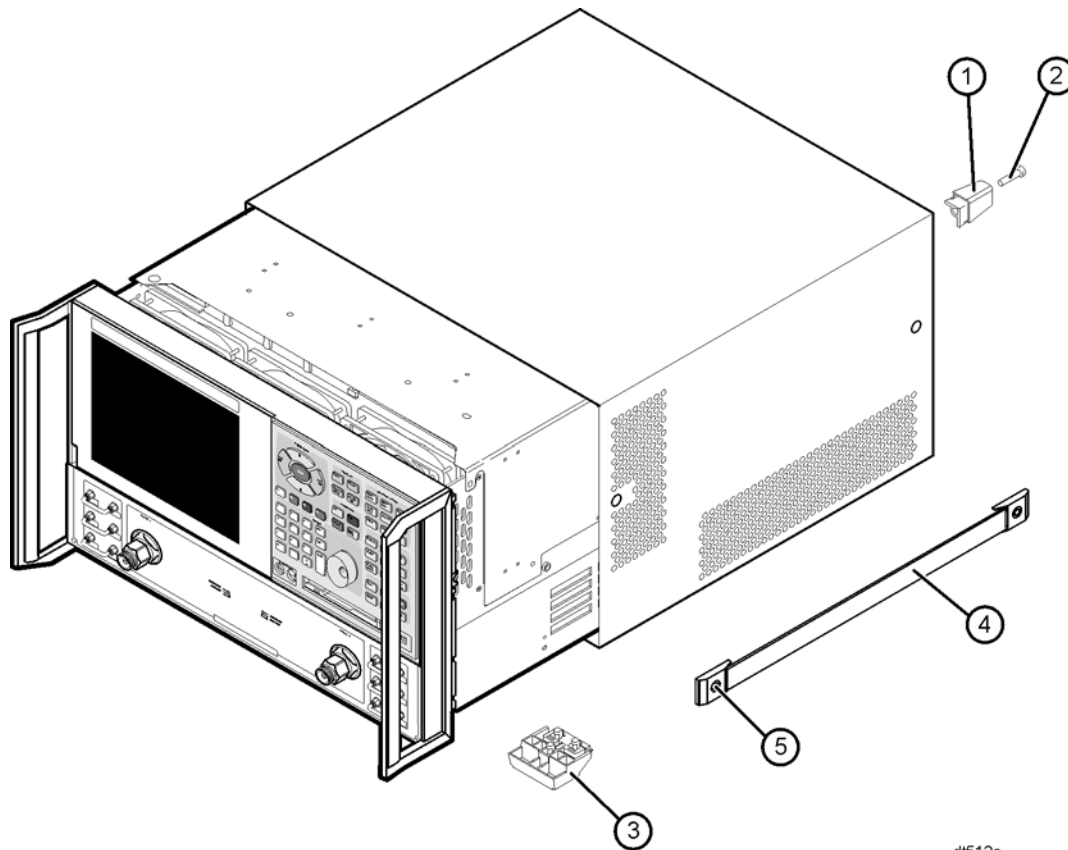

dt512a

Step 10. Enable Option 014

Procedure Requirements

- The analyzer must be powered up and operating to perform this procedure.
- The Network Analyzer program must be running.
- A mouse is required.

Enable Option 014

1. On the analyzer's **System** menu, point to **Service**, and then click **Option Enable**.
2. In the **Select Desired Option** list, click **014 - Configurable Test Set**.
3. Click **Enable**.
4. Click **Yes** in answer to the displayed question in the **Restart Analyzer?** box.
5. When the installation is complete, click **Exit**.

Verify that Option 014 is Enabled

1. On the analyzer's **Help** menu, click **About Network Analyzer**.
2. Verify that "014" is listed after "Options:" in the display.
3. Click OK when done.

NOTE If Option 014 has not been enabled, perform "[Enable Option 014](#)" again. If the option is still not enabled, contact Agilent Technologies. Refer to "[Contacting Agilent](#)" on page 3.

Step 12. Perform Post-Upgrade Adjustments and Calibration

Adjustments

The following adjustments must be made due to the hardware changes of the analyzer.

- source calibration
- receiver calibration

These adjustments are described in the PNA service guide and in the PNA on-line HELP. A list of equipment required to perform these adjustments can be found at [“Equipment Required for Post-Upgrade Adjustments” on page 8.](#)

Calibration

The analyzer should now operate and phase lock over its entire frequency range.

NOTE If you experience difficulty with the basic functioning of the analyzer, contact Agilent. Refer to [“Contacting Agilent” on page 3.](#)

- Although the analyzer functions, its performance relative to its specifications has not been verified.
- It is recommended that a full instrument calibration be performed using the PNA performance test software.
- Refer to the analyzer’s service guide for information on the performance test software.

