

---

# HP 355C, HP 355 D, HP 355E, and HP 355F VHF Attenuators

Operating and Service  
Manual

---



HP part number: 00355-90051  
Printed in USA  
February 1997

Revision 2.0

---

## Notice

The information contained in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without prior written consent of Hewlett-Packard Company.

### Restricted Rights Legend

Use, duplication, or disclosure by the U.S. Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 for DOD agencies, and subparagraphs (c)(1) and (c)(2) of the Commercial Computer Software Restricted Rights clause at FAR 52.227-19 for other agencies.

### Serial Number Prefix

The specifications in this manual apply to the instruments with the following serial numbers or greater:

Model	Serial Numbers (min.)
HP 355C	2524A44630
HP 355D	2522A46649
HP 355E	1205A38159
HP 355F	1203A03244

Hewlett-Packard Company  
Santa Rosa Systems Division  
1400 Fountaingrove Parkway  
Santa Rosa, CA 95403-1799, U.S.A.

© Copyright Hewlett-Packard Company 1997

---

## **What You'll Find in This Manual...**

This operating and service manual contains the following:

- Instrument Description and Specifications
- Replaceable Parts and Accessories
- Installation Instructions
- Operating Instructions
- Schematics and Diagrams

---

## Warranty

Custom systems are warranted by contractual agreement between Hewlett-Packard Company and the Customer

### Certification

*Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology (NIST, formerly NBS), to the extent allowed by the Institute's calibration facility, and to the calibration facilities of other International Standards Organization members.*

### Warranty

This Hewlett-Packard system product is warranted against defects in materials and workmanship for a period corresponding to the individual warranty periods of its component products. Instruments are warranted for a period of one year. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products that prove to be defective.

Warranty service for products installed by HP and certain other products designated by HP will be performed at Buyer's facility at no charge within HP service travel areas. Outside HP service travel areas, warranty service will be performed at Buyer's facility only upon HP's prior agreement and Buyer shall pay HP's round trip travel expenses. In all other areas, products must be returned to a service facility designated by HP.

For products returned to HP for warranty service, Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

**LIMITATION OF WARRANTY.** The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

**NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.**

**EXCLUSIVE REMEDIES.** THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

## **Assistance**

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For assistance, call your local Hewlett-Packard Sales and Service Office (refer to "Support and Service").

---

## Support and Service

Any adjustment, maintenance, or repair of this product must be performed by qualified personnel. contact your local HP sales and service office.

### US Field Operation Headquarters

Hewlett-Packard Company  
19320 Pruneridge Avenue  
Cupertino, CA 95014  
USA  
(800) 752-0900

### Southern California

Hewlett-Packard Company  
1421 South Manhattan Avenue  
Fullerton, CA 92631  
(714) 999-6700

### Northern California

Hewlett-Packard Company  
301 E. Evelyn  
Mountain View, CA 94041  
(415) 694-2000

### Colorado

Hewlett-Packard Company  
24 Inverness Place, East  
Englewood, CO 80112  
(303) 649-5000

### Georgia

Hewlett-Packard Company  
2000 South Park Place  
Atlanta, GA 30339  
(404) 9554-1500

### Illinois

Hewlett-Packard Company  
5201 Tollview Drive  
Rolling Meadows, IL 60008  
(708) 342-2000

### New Jersey

Hewlett-Packard Company  
West 120 Century Road  
Paramus, NJ 07653  
(201) 599-5000

### Texas

Hewlett-Packard Company  
930 E. Campbell Road  
Richardson, TX 75081  
(214) 231-6101

### European Operations Headquarters

Hewlett-Packard S.A  
150, route du Nant-d'Avril  
1217 Meyrin 2/Geneva  
Switzerland  
(41 22) 780.8111

### France

Hewlett-Packard France  
1 avenue du Canada  
Zone d'Activite de Courtaboeuf  
F-91947 Les Ulis Cedex  
France  
(33 1) 69 82 60 60

### Germany

Hewlett-Packard GmbH  
Hewlett-Packard-Strasse  
61352 Bad Homburg  
Germany  
(+49 6172) 16-0

### Great Britain

Hewlett-Packard Ltd.  
Eskdale Road  
Winnersh Triangle  
Wokingham, Berkshire RG11 5DZ  
England  
(44 734) 696622

### Intercon Operations Headquarters

Hewlett-Packard Company  
3495 Deer Creek Road  
Palo Alto, CA 94304-1316  
USA  
(415) 857-5027

### Australia

Hewlett-Packard Australia, Ltd.  
31-41 Joseph Street  
Post Office Box 221  
Blackburn, Victoria 3130  
Australia  
(61 3) 895-2895

### Canada

Hewlett-Packard (Canada), Ltd.  
17500 South Service Road  
Trans-Canada Highway  
Kirkland, Quebec H9J 2X8  
Canada  
(514) 697-4232

### China

China Hewlett-Packard Co., Ltd.  
38 Bei San Huan Road  
Shuang Yu Shu  
Hai Dian District, Beijing  
China  
(86 1) 256-6888

### Japan

Yokogawa-Hewlett-Packard, Ltd.  
1-27-15 Yabe  
Sagamihara  
Kanagawa 229  
Japan  
(81 427) 59-1311

### Singapore

Hewlett-Packard Singapore (Pte.), Ltd.  
Alexandra Post Office Box 87  
Singapore 9115  
(65) 271-9444

### Taiwan

Hewlett-Packard Company  
8th Floor  
337 Fu Hsing North Road  
Taipei  
Taiwan  
(866 2) 712-0404

---

## Safety and Regulatory Information

Review this product and related documentation to familiarize yourself with safety markings and instructions before you operate the instrument. This product has been designed and tested in accordance with international standards.

---

### WARNING

---

The **WARNING** notice denotes a hazard. It calls attention to a procedure, practice, or the like, that, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

---

### CAUTION

---

The **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

## Instrument Markings



When you see this symbol on your instrument, you should refer to the instrument's instruction manual for important information.



This symbol indicates hazardous voltages.



The laser radiation symbol is marked on products that have a laser output.



This symbol indicates that the instrument requires alternating current (ac) input.



The CE mark is a registered trademark of the European Community. If it is accompanied by a year, it indicates the year the design was proven.



The CSA mark is a registered trademark of the Canadian Standards Association.

---

1SM1-A

This text indicates that the instruments are an Industrial Scientific and Medical Group 1 Class A product (CISPER 11, Clause 4).



This symbol indicates that the power line switch is ON.



This symbol indicates that the power line switch is OFF or in STANDBY position.

---

## **Safety Earth Ground**



This is a Safety Class I product (provided with a protective earthing terminal). An uninterruptible safety earth ground must be provided from the main power source to the product input wiring terminals, power cord, or supplied power cord set. Whenever it is likely that the protection has been impaired, the product must be made inoperative and secured against any unintended operation.

## **Before Applying Power**

Verify that the product is configured to match the available main power source as described in the input power configuration instructions in this manual. If this product is to be powered by autotransformer, make sure the common terminal is connected to the neutral (grounded) side of the ac power supply.



---

## Typeface Conventions

### Italics

- Used to emphasize important information:  
Use this software *only* with the HP xxxxxX system.
- Used for the title of a publication:  
Refer to the *HP xxxxxX System-Level User's Guide*.
- Used to indicate a variable:  
Type LOAD BIN *filename*.

### Instrument Display

- Used to show on-screen prompts and messages that you will see on the display of an instrument:  
The HP xxxxxX will display the message **CAL1 SAVED**.

### [Keycap]

- Used for labeled keys on the front panel of an instrument or on a computer keyboard:  
Press **[Return]**.

### {Softkey}

- Used for simulated keys that appear on an instrument display:  
Press **{Prior Menu}**.

### User Entry

- Used to indicate text that you will enter using the computer keyboard; text shown in this typeface must be typed *exactly* as printed:  
Type LOAD PARMFILE
- Used for examples of programming code:  
#endif // ifndef NO\_CLASS

### Path Name

- Used for a subdirectory name or file path:  
Edit the file *usr/local/bin/sample.txt*

### Computer Display

- Used to show messages, prompts, and window labels that appear on a computer monitor:  
The **Edit Parameters** window will appear on the screen.
- Used for menus, lists, dialog boxes, and button boxes on a computer monitor from which you make selections using the mouse or keyboard:  
Double-click **EXIT** to quit the program.



---

# Contents

General Information .....	3
Description .....	3
Specifications .....	7
Power Rating .....	8
Accessories Supplied .....	8
Attenuator Options .....	8
Attenuator Options .....	9
Installation .....	10
Initial Inspection .....	10
Mating Connectors .....	10
Operating Environment .....	10
Storage and Shipment .....	10
Operating Instructions .....	11
Operator's Check .....	11
Performance Tests .....	14
Replaceable Parts .....	15



---

## General Information

This manual contains operating instructions for HP 355C, HP 355D, HP 355E, and HP 355F VHF Attenuators. Included in the manual is the information required to install and test these attenuators.

### Description

The Hewlett-Packard Model HP 355C, HP 355D, HP 355E, and HP 355F attenuators are 50-ohm, coaxial step attenuators usable from dc to 1 GHz. Models HP 355C and HP 355E provide 0 to 12 dB of attenuation in 1 dB steps.

Models HP 355D and HP 355F provide 0 to 120 dB of attenuation in 10 dB steps. The HP 355C and HP 355D are manual attenuators. The HP 355E and HP 355F are programmable. The schematic for the Model HP 355C/D is shown in Figure 1. and that of the Model HP 355E/F in Figure 2.

The attenuator sections consist of resistor pi networks which are switched in or bypassed by microswitches. In the HP 355C and HP 355D the microswitches are actuated by cams (see Figure 1). In the HP 355E and HP 355F the microswitches are actuated by solenoids (see Figure 2). The standard RF connectors are BNC type.

In the HP 355E and HP 355F power must be continuously applied to the solenoid to actuate the microswitch (i.e., to insert an attenuator section). Each solenoid draws approximately 0.1A at 15 Vdc.

Dimensions for the individual instruments are provided in Table 1.

## General Information

---


**NOTE**

---


Dimensions are for general information *only*. If accurate dimensions are required for building special enclosures, contact your nearest Hewlett-Packard office.

**Table 1** *Dimensions*


	<b>HP 355C, D</b>	<b>HP 355E, F</b>
Length	152 mm (5.98 in)	137 mm (5.39 in)
Height	69 mm (2.72 in)	72 mm (2.83 in)
Width (without RF connectors)	45 mm (1.77 in)	45 mm (1.77 in)
Width (with connectors):		
Standard (BNC)	73 mm (2.88 in)	73 mm (2.88 in)
Option 001 (Type N)	94 mm (3.70 in)	121 mm (4.76 in)
Option 005 (TNC)	69 mm (2.72 in)	24 mm (0.94 in)
Protrusion of connectors:		
BNC	14.06 mm (0.55 in)	14.06 mm (0.55 in)
Type N	24.5 mm (1.00 in)	24.5 mm (1.00 in)
TNC	12 mm (0.47 in)	12 mm (0.47 in)

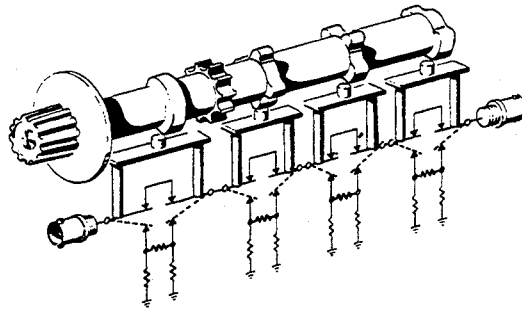

MODEL 355C

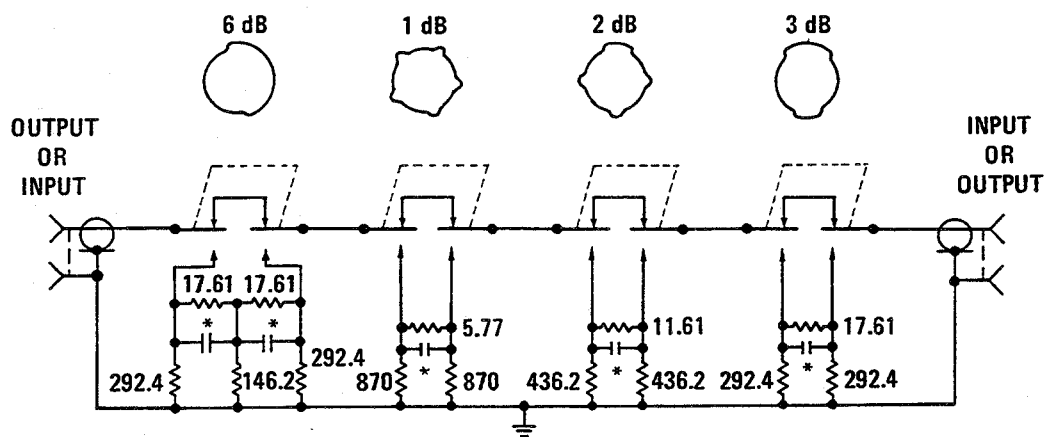

MODEL 355D

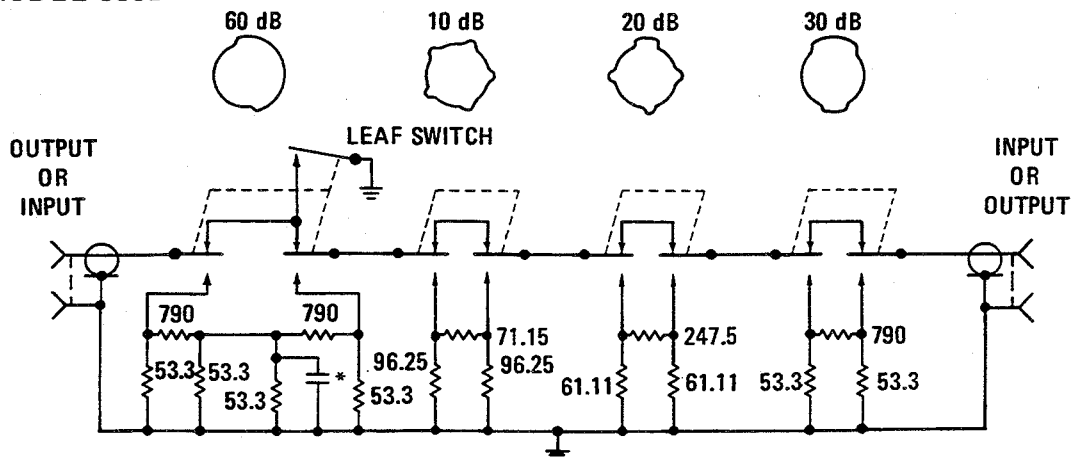


NOTES


1. Microswitches shown in 0 dB position.
2. Resistances in ohms ( $\pm 1/2\%$ ).
3. Capacitance values factory-adjusted.
4. \*Asterisk denotes factory selected value.

Figure 1 HP 355C and HP 355D Schematic Diagram


General Information

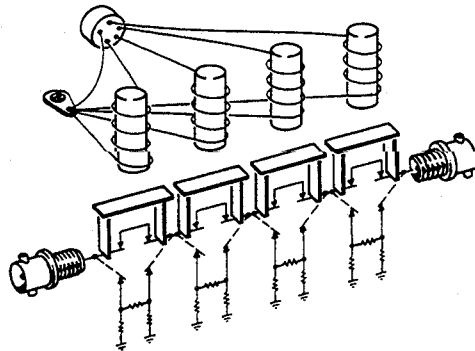

MODEL 355E

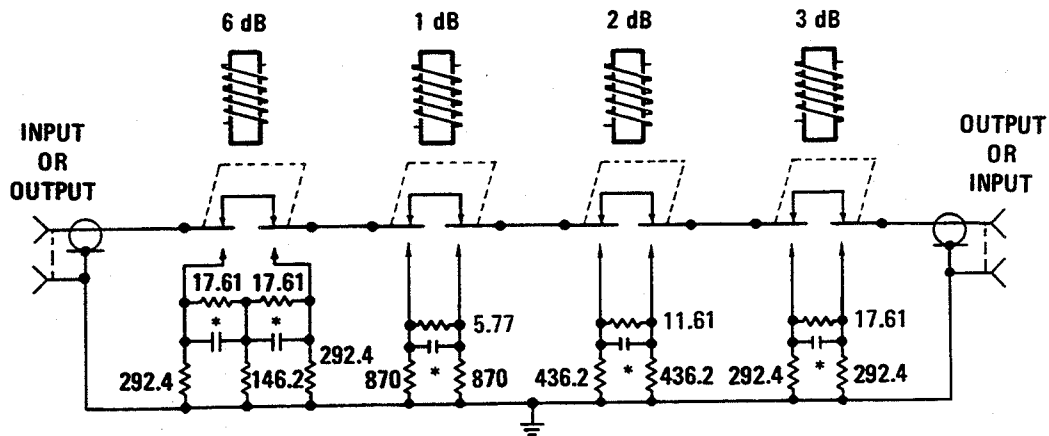

MODEL 355F

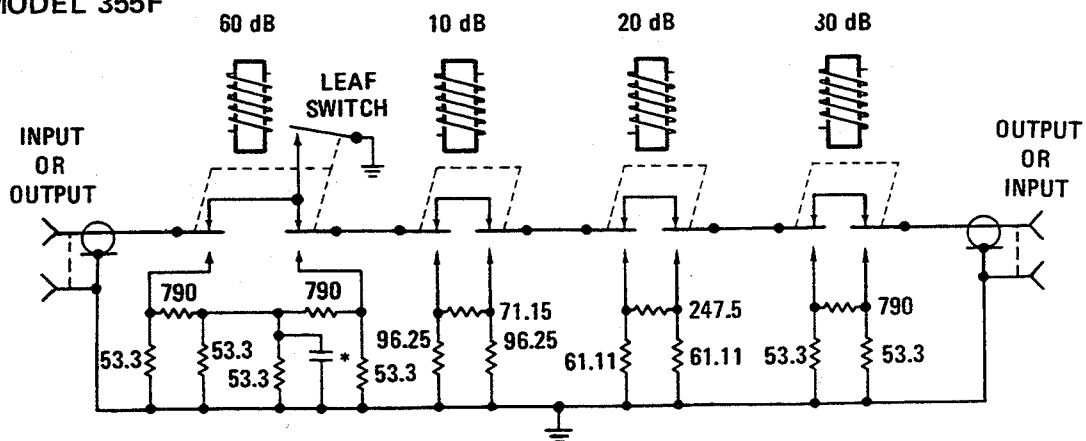

NOTES

1. Microswitches shown in 0 dB position.
2. Resistances in ohms ( $\pm 1/2\%$ ).
3. Capacitance values factory-adjusted.
4. \*Asterisk denotes factory selected value.

Figure 2 HP 355E and HP 355F, Schematic Diagram



## Specifications

Instrument specifications are listed in Table 2. These specifications are the performance standards or limits against which the instruments may be tested.

**Table 2** *Specifications*

<b>MODELS HP 355C and HP 355E</b>	
Attenuation Range	0 to 12 dB
Attenuation Steps	1 dB
Overall Accuracy:	
at 1000 Hz	±0.1 dB
dc to 500 MHz	±0.25 dB
dc to 1000 MHz	±0.35 dB
<b>MODELS HP 355D and HP 355F</b>	
Attenuation Range	0 to 120 dB
Attenuation Steps	10 dB
Overall Accuracy:	
at 1000 Hz	0 to 120 dB ± 0.3 dB
below 1000 MHz	0 to 90 dB ± 1.5 dB
	90 to 120 dB ± 3 dB
<b>MODELS HP 355E and HP 355F</b>	
Switching Speed	65 ms
Required Solenoid Power	+15 to +18 Vdc, 1/8 A
<b>MODELS HP 355C/E and 355D/F</b>	
Frequency Range	dc to 1000 MHz
Impedance	50 ohms (nominal)
Maximum SWR (input and output):	
below 250 MHz	1.2
below 500 MHz	1.3
below 1000 MHz	1.5
Maximum residual attenuation (insertion loss at 0 dB)	0.20 dB + 2.30 dB/GHz
Maximum power dissipation	0.5W (average)
Maximum pulse voltage	350 Vpk 200 µsec
Connectors	
Standard	BNC (female)
Option 001	Type - N (female)
Option 005	TNC (female)

## Power Rating

---

**CAUTION**

---

Do not exceed the RF power rating of 0.5W average, or 2450W peak with a maximum pulse width of 200  $\mu$ s. Do not connect an attenuator RF input or output connector to greater than  $\pm 5$  Vdc. If the attenuator must be connected to a device with a potential greater than  $\pm 5$  Vdc, use a blocking capacitor.



## Accessories Supplied

The HP 355E and HP 355F programmable attenuators are supplied with a 7-pin, male connector (HP 1251-1037) for the solenoid drive input.

## Attenuator Options

Figure 3 shows solenoid and connector wiring diagrams available under Option 007 for HP 355E and HP 355F.

# Attenuator Options

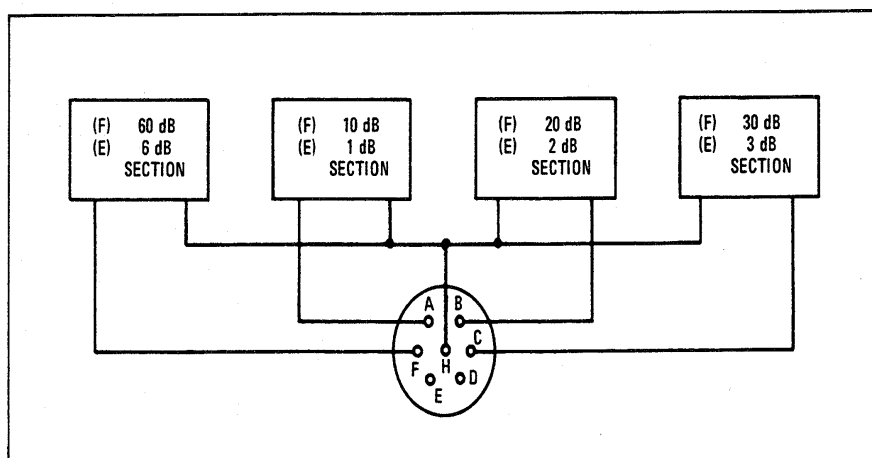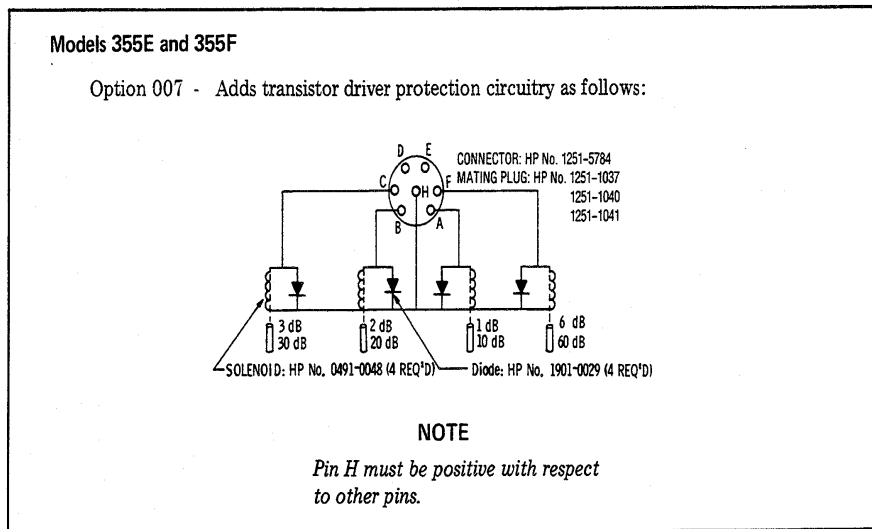

To obtain attenuation settings given below, apply +15 to +18 Vdc between Pin H (common) and Pins:

355E	355F	Pins	355E	355F	Pins
1 dB	10 dB	A	7 dB	70 dB	F, A
2 dB	20 dB	B	8 dB	80 dB	F, B
3 dB	30 dB	C	9 dB	90 dB	F, C
4 dB	40 dB	C, A	10 dB	100 dB	F, C, A
5 dB	50 dB	C, B	11 dB	110 dB	F, C, B
6 dB	60 dB	F	12 dB	120 dB	F, C, B, A

Figure 3 HP355E and HP 355F, Solenoid and Connector Wiring Diagrams

---

## Installation

### Initial Inspection

Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked mechanically and electrically. A procedure for checking electrical performance is given under "Operator's Check" (see Performance Tests). If the contents of the shipment are incomplete, if there is mechanical damage or defect, or if the instrument does not pass the electrical performance test, notify the nearest Hewlett-Packard office. If the shipping container is damaged, or the cushioning material shows signs of stress, notify the carrier as well as Hewlett-Packard. Keep the shipping materials for the carrier's inspection.

### Mating Connectors

Mating RF input and output connectors used with the attenuators should be:

- Standard . . . . . Type BNC
- Option 001 . . . . . Type N
- Option 005 . . . . . Type TNC

For the HP 355E and HP 355F, the solenoid drive connector plug is 7-pin male connector (HP 1251-1037).

### Operating Environment

The operating environment of the instrument should be within the following limitations:

- Temperature . . . . . 0° to +55° C
- Humidity . . . . . <95% relative
- Altitude. . . . . <4,570 m (15,000 ft)

### Storage and Shipment

#### Environment

The instrument should be stored in a clean, dry environment. The following environmental limitations apply to both storage and shipment:

- Temperature . . . . . -40° C to +75° C
- Humidity . . . . . < 95% relative
- Altitude. . . . . < 7,620 m (25,000 ft)

#### Original Packaging

Containers and materials identical to original packaging are available from Hewlett-Packard. If the instrument is being returned to Hewlett-Packard, attach a tag indicating the type of service required, return address, model number, and serial number. Also, mark the container FRAGILE to assure careful handling. In any correspondence, refer to the instrument by model number and full serial number.

---

## Operating Instructions

---

### CAUTION

---

Do not apply RF power greater than 0.5W average, or 2450W peak with a maximum pulse width of 200  $\mu$ s. If these limits are exceeded, the attenuator may be damaged.

Either RF connector may be used as the input or output connector, except in the case of the HP 355D/F driven from a low impedance source. This is because the leaf switch (Figures 1 and 2) may be closed before the microswitch opens when the dial is switched from 50 dB to 60 dB. Should this occur, a momentary short is placed across the connector, inviting damage to either the microswitch or the signal source. Therefore, if the signal source is subject to damage by a short, use the rear most connector for the input. (The dial or solenoid connector is at the front of the attenuator.) This pads the momentary short with 50 dB of isolation. For the HP 355E and HP 355F, wire the solenoid drive plug supplied using Figure 3 as a wiring guide. An un-energized attenuator solenoid section is 0 dB. Apply +1.5 to +18 Vdc (with respect to pin H) to energize an attenuator solenoid. A programming table is also given in Figure 3.

### Operator's Check

This section describes the procedures for the operator to make a quick check of the attenuator prior to use or if a failure is suspected.

---

### NOTE

---

Troubleshooting consists of performing the following Operator's Check. If the instrument does not perform within limits, return the instrument to the nearest Hewlett-Packard office.

### Description

The attenuator is driven from a 50-ohm signal source at 1 kHz. The output level from the attenuator is detected by a narrow-bandwidth voltmeter (that is, the SWR meter). The attenuator and detector range switches are stepped together and the variations in level noted. This verifies that each attenuator section is being properly switched and checks the low frequency accuracy of the attenuator.

## Operating Instructions

---


### NOTE

---

The SWR Meter used in this check is calibrated for a square-law detector and therefore the range changes and errors (read in dB) are twice that indicated by the meter.

### Quick-check Procedures

1. Connect equipment as shown in Figure 4, with the Attenuator set to 0 dB attenuation.
2. Set Test Oscillator to 0.3 Vrms at 1 kHz.
3. Set the SWR Meter input to XTAL IMPED LOW and the range to 2 dB (expanded) for HP 355D or HP 355F or to 10 dB (with 0 dB expand) for HP 355C or HP 355E. Adjust its bandwidth to the center of the adjustment range. Fine tune oscillator frequency to obtain the maximum meter indication.
4. Set attenuator and SWR meter range switch as listed in Figure 3, and verify that the SWR meter indicates within the limits shown.

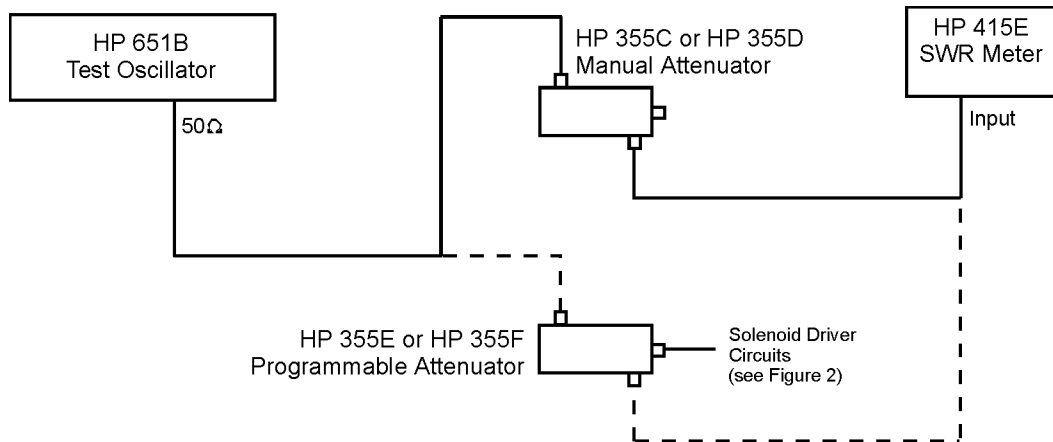

*Figure 4 Operator's Check Schematic*

Table 3 Operator's Checks

355C And 355E				
SWR Meter Range (dB)	Attenuation (dB)	Meter Indication (dB)		
		Min.	Actual	Max.
10	0		Set to 0.0	
10	1	0.45	_____	0.55
10	2	0.95	_____	1.05
10	3	1.45	_____	1.55
10*	4	1.95	_____	2.05
12	5	0.45	_____	0.55
12	6	0.95	_____	1.05
12	7	1.45	_____	1.55
12*	8	1.95	_____	2.05
14	9	0.45	_____	0.55
14	10	0.95	_____	1.05
14	11	1.45	_____	1.55
14*	12	1.95	_____	2.05
355D And 355F				
SWR Meter Range (dB)	Attenuation (dB)	Meter Indication (dB)		
		Min.	Actual	Max.
2	0		Set to 0.5	
6	10	1.35	_____	1.65
12	20	0.35	_____	0.65
16	30	1.35	_____	1.65
22	40	0.35	_____	0.65
26	50	1.35	_____	1.65
32	60	0.35	_____	0.65
36	70	1.35	_____	1.65
42	80	0.35	_____	0.65
46	90	1.35	_____	1.65
52	100	0.35	_____	0.65
56	110	1.35	_____	1.65
62	120	0.35	_____	0.65
*Adjust range by 2 dB, if needed to obtain an on-scale indication.				

## Operating Instructions

### Performance Tests

The attenuator can be tested to the accuracy of the specifications in Table 1 with an Automatic Network Analyzer or equivalent equipment of suitable accuracy. If an Automatic Network Analyzer is available, test the attenuator using the procedures in the analyzer's operating manual. The HP 355E and HP 355F attenuators must be programmed by a suitable circuit to provide the various values of attenuation (see Figure 3 ).

### Adjustments

The attenuators have no internal adjustments and should not be opened. If defective, the attenuator should be returned to the nearest Hewlett-Packard office for repair.

---

### CAUTION

---

The solenoids in the HP 355E and HP 355F have been precisely adjusted at the factory. No attempt should be made to replace them except by factory approved service representatives. The operation of the attenuators will be unreliable if plungers are not kept with their proper solenoids. Do not interchange or "swap" them.



---

## Replaceable Parts

Table 3 lists the replaceable parts which are the only parts that can be replaced without access to the interior of the attenuator. Any parts not listed in Table 3 needing replacement, return the instrument to Hewlett-Packard.

---

### CAUTION

Due to special fixtures necessary for assembly, do NOT attempt to replace any parts not listed in Table 3. If the instrument is opened, the warranty is void.

---

**Table 4** *Replaceable Parts*

Description	Part Number	Quantity
<b>HP 355C</b>		
Glide (feet)	HP 0403-0026	4
Dial Assembly	HP 0370-3070	1
Dial Assembly (Option 003)	HP 00355-00001	1
<b>HP 355D</b>		
Glide (feet)	HP 0403-0026	4
Dial Assembly	HP 0370-3071	1
Dial Assembly (Option 003)	HP 00355-00002	1
<b>HP 355E and F</b>		
Glide (feet)	HP 0403-0026	4
Connector (7-pin, male)	HP 1251-1037	1