

Reference Guide

Agilent Technologies

**85097B VNA Interface Kit
for Electronic Calibration**



Agilent Technologies

Manufacturing Part Number: 85091-90010

Printed in USA

Print Date: March 2003

Supersedes: October 2001

© Copyright 2001, 2003 Agilent Technologies, Inc. All rights reserved.

Documentation Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AGILENT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. AGILENT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD AGILENT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

Assistance

Product maintenance agreements and other customer assistance agreements are available for Agilent products.

For any assistance, contact the nearest Agilent Technologies sales or service office. Refer to [Table 2-1 on page 2-4](#) for a list of Agilent offices.

Contents

| | |
|---|------|
| 1. General Information | |
| VNA Interface Kit Overview | 1-2 |
| Option 100 | 1-2 |
| Compatible Network Analyzers | 1-2 |
| VNA Interface Kit Contents | 1-3 |
| Description of the VNA Interface Kit Contents | 1-4 |
| VNA Interface Kit Setup and Operation | 1-6 |
| Setup Procedure | 1-6 |
| VNA Interface Kit Characteristics | 1-8 |
| Environmental Requirements | 1-8 |
| Electrical and Mechanical Characteristics | 1-9 |
| Electrostatic Discharge | 1-10 |
| 2. Troubleshooting | |
| General Information | 2-2 |
| Returning a VNA Interface Kit to Agilent | 2-2 |
| Contacting Agilent | 2-4 |
| 3. Safety and Regulatory Information | |
| Safety Information | 3-2 |
| Before Applying Power | 3-2 |
| Instrument Markings | 3-3 |
| Safety Earth Ground | 3-3 |
| Regulatory Information | 3-4 |
| Compliance Notices | 3-4 |

1 General Information

VNA Interface Kit Overview

This manual provides reference information for the Agilent 85097B vector network analyzer (VNA) interface kit for electronic calibration (ECal).

The VNA interface kit is part of the VNA-based ECal system. The interface kit provides the hardware to connect and allow data transfer between ECal modules and compatible network analyzers. See [Table 1-1](#) below.

ECal modules are precision, single-connection devices that provide consistent calibrations for your network analyzer. ECal uses fully traceable and verifiable electronic standards. The interface kit does not include the ECal modules, but they can be ordered separately. For ordering information, see “[Contacting Agilent](#)” on [page 2-4](#).

NOTE For more information about ECal modules, refer to the *Electronic Calibration Module Reference Guide* (included with the VNA interface kit).

Option 100

Adds an adapter cable that allows the interface kit to connect to N469x (microwave) ECal modules. The Option 100 adapter cable can also be ordered separately.

Compatible Network Analyzers

Refer to [Table 1-1](#) for network analyzers and ECal modules compatible with the 85097B VNA interface kit. The network analyzer must have the appropriate firmware revision installed to operate with the ECal models shown.

Table 1-1 Supported Network Analyzers and ECal Models

| Network Analyzer | ECal Model | Firmware Revision |
|------------------|---------------------|-------------------|
| 8753ES/ET | 8509xB/C | 7.68 or higher |
| 8719D/ES/ET | 8506x | |
| 8720D/ES/ET | N4431A ^a | |
| 8722D/ES/ET | N469x | 7.74 or higher |

a. Ports A and B only

NOTE PNA network analyzers are not compatible with the 85097B VNA interface kit. PNA analyzers allow direct connection of the ECal modules through a USB connector interface. Refer to the PNA analyzer on-line help system for more details.


VNA Interface Kit Contents

The following table and illustration identify the contents of the 85097B VNA interface kit.

Table 1-2 Contents of the VNA Interface Kit

| Description | Quantity | Part Number |
|---|----------|-------------|
| Interface Unit | 1 | 85097-60002 |
| Shielded Cable, DB25 to DB25 | 3 | 8120-8710 |
| Adapter Cable, DB25 to AMP Champ (Option 100) | 1 | 8120-1047 |
| Power Supply | 1 | 0950-3331 |
| VNA Interface Kit Reference Guide (this manual) | 1 | 85091-90010 |
| Electronic Calibration Module Reference Guide | 1 | N4693-90001 |

Figure 1-1 85097B Kit Contents

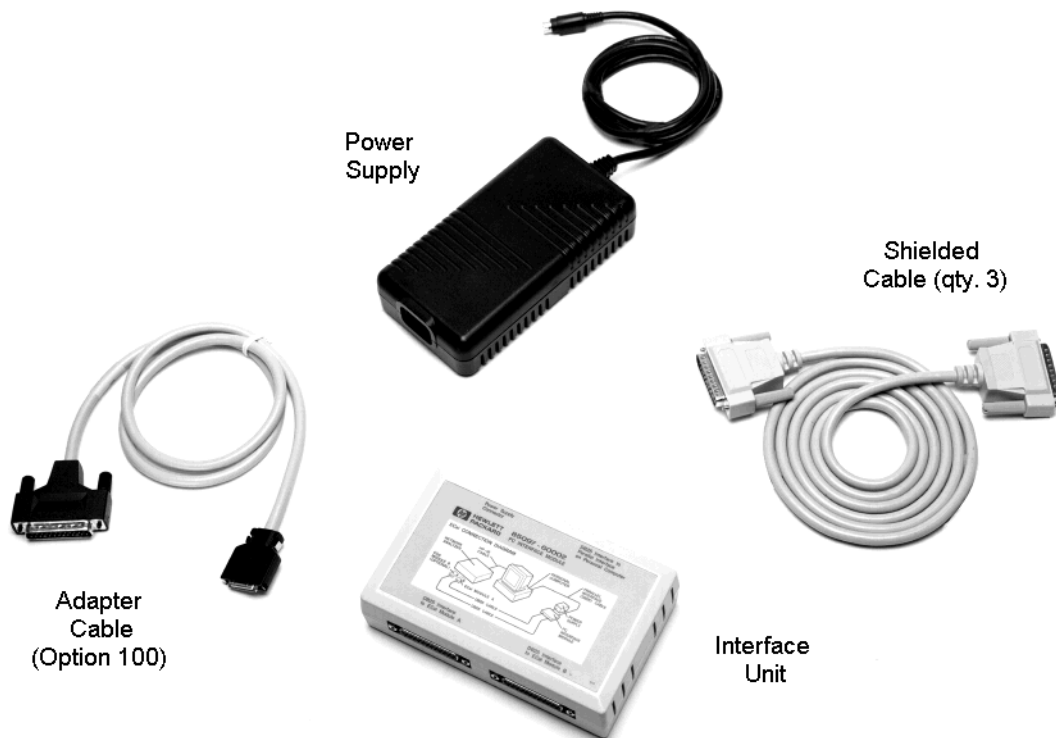

Description of the VNA Interface Kit Contents

This section describes the contents of the 85097B VNA interface kit. Refer to [Figure 1-3 on page 1-7](#) for a system setup diagram using the kit contents.

NOTE ECal modules are not included in the 85097B VNA interface kit, but are ordered separately. Refer to the *Electronic Calibration Module Reference Guide* (part number N4693-90001) for information on the types and specifications of ECal modules.

Interface Unit

The interface unit (shown in [Figure 1-1](#)) functions as the digital interface and power source for ECal modules. The interface can connect to one or two ECal modules. Power is automatically turned off when an ECal module is disconnected.

NOTE If you are using an 8506xA microwave module with a serial number below 800, a jumper must be installed in the module to make it compatible with the interface unit. Contact Agilent for information about returning your module for this modification. Contact information can be found in [Table 2-1 on page 2-4](#).

Shielded Cables, DB25 to DB25

The shielded cables (shown in [Figure 1-1](#)) are male to male RS-232 cables. Three shielded cables are included in the kit. The cables connect between the VNA and the interface unit and between the interface unit and one or two ECal modules (except N469x series). The length of each shielded cable is 1.8 m.

Adapter Cable, DB25 to AMP Champ (Option 100)

The adapter cable (shown in [Figure 1-1](#)) is configured with a DB25 to AMP Champ (36-pin) connector. The adapter cable connects N469x (microwave) ECal modules to the interface unit. The adapter cable (part no. 8121-1047) can be ordered separately or by adding Option 100 to the interface kit. The length of the adapter cable is 1.0 m.

CAUTION Use only the interface cables supplied with this kit. Other cables may cause the system to fail EMC specifications.

ECal Power Supply Unit

The ECal power supply unit (shown in [Figure 1-1](#)) provides 24 Vdc to the interface unit and power to the ECal modules through the interface unit.

WARNING **To prevent electrical shock, disconnect from mains before cleaning. Use a dry cloth or one slightly dampened with water to clean the external case parts. Do not attempt to clean internally.**

CAUTION Always use the three-prong ac power cord supplied with this product. Failure to insure adequate earth grounding by not using this cord may cause product damage.

WARNING **The detachable power cord is the instrument disconnecting device. It disconnects the mains circuits from the mains supply before other parts of the instrument.**

VNA Interface Kit Setup and Operation

The VNA-based ECal system requires the following components:

- VNA (with appropriate firmware revision) — functions as the ECal system controller
- ECal module — acts as the calibration device for the ECal system
- VNA Interface kit — provides an interface between the ECal module and the VNA

Setup Procedure

Refer to the graphics on the following page for all connections.

CAUTION Exercise the necessary ESD precautions before connecting the devices. Refer to [“Electrostatic Discharge” on page 1-10](#).

Connect Interface Unit to VNA (DB25 to DB25 Cable)

1. Connect one end of the DB25 to DB25 cable to the connector on the interface unit labeled “DB25 Interface to Parallel Interface on Network Analyzer.”
2. Connect the other end of the DB25 to DB25 cable to the connector on the rear panel of the VNA labeled “Parallel Port”.

CAUTION Connecting the interface cable to an unspecified connector on the VNA will cause damage.

Connect RF Module to Interface Unit (DB25 to DB25 Cable)

1. Connect one end of the DB25 to DB25 cable to the parallel port on the ECal module.
2. Connect the other end of the DB25 to DB25 cable to the connector on the interface unit labeled “DB25 Interface to ECal Module A” or “DB25 Interface to ECal Module B”.

Connect Microwave Module to Interface Unit (DB25 to AMP Champ Cable)

1. Connect the AMP Champ end of the adapter cable to the parallel port on the ECal module. Press the tabs on the connector housing to engage the connector.
2. Connect the DB25 end of the adapter cable to the connector on the interface unit labeled “DB25 Interface to ECal Module A” or “DB25 Interface to ECal Module B”.

Connect Interface Unit to Power Supply

1. Connect the interface power supply to the interface unit and then connect to AC power.
2. Allow the ECal module to warm up for 15 minutes (20 minutes for a four-port module) or until the module indicates READY.
3. ECal module is ready to perform a calibration. Press the **Cal** button on the VNA to access the calibration types available with ECal.

Figure 1-2 Interface Connection to ECal Module


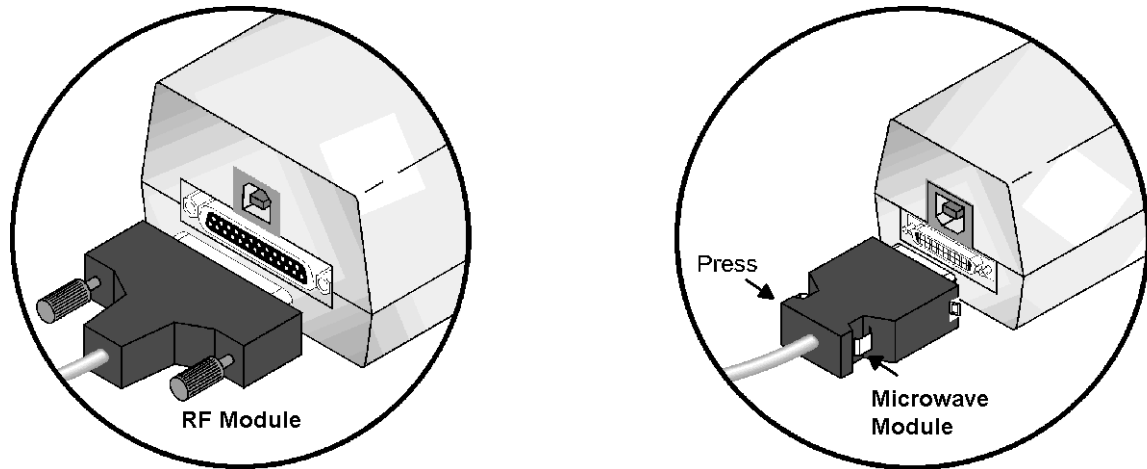


Figure 1-3 VNA-Based ECal System

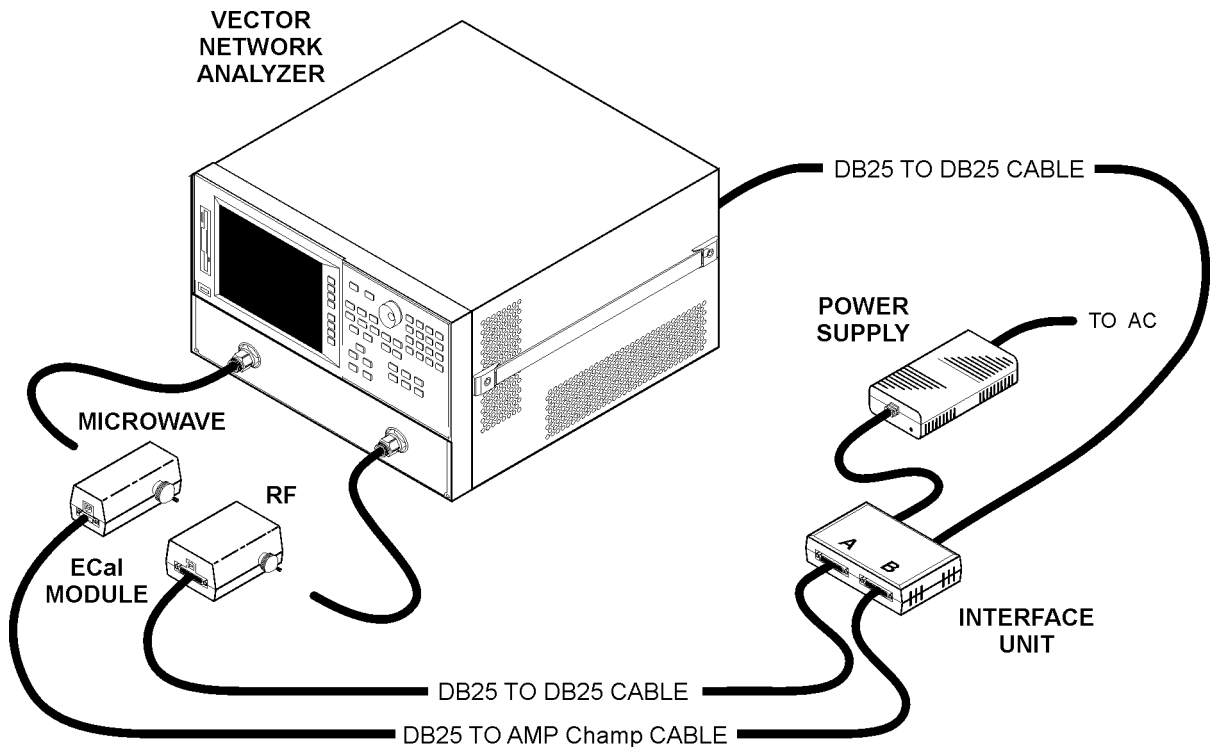

- ECal modules can be connected (or disconnected) when the analyzer is turned on or off, but must remain connected while data transfer is in progress.
- After completing a calibration, the ECal module or modules can remain connected to the interface unit.
- With the appropriate interface cable, RF or microwave ECal modules can be connected to position A or B of the interface unit.

VNA Interface Kit Characteristics

CAUTION This product is designed for use in INSTALLATION CATEGORY II and POLLUTION DEGREE 2, per IEC 1010 and 664 respectively. Enclosure protection according to IEC 529, IP Code 2 0.

Environmental Requirements

CAUTION When installing the product in a cabinet, the convection in and out of the product must not be restricted. The ambient temperature (outside the cabinet) must be less than the maximum operating temperature of the system by 4 °C for every 100 watts dissipated in the cabinet. If the total power dissipated in the cabinet is greater than 800 watts, then forced convection must be used.

CAUTION Install the instrument according to the enclosure protection provided. This instrument does not protect against the ingress of water. This instrument protects against finger access to hazardous parts within the enclosure.

Table 1-3 Environmental Requirements (indoor use only)

| Characteristics | Limits |
|--|--|
| Altitude: | up to 3000 meters (10,000 feet) |
| Temperature: | 5 °C to 40 °C (41 °F to 104 °F) |
| Maximum Relative Humidity: decreasing linearly to | 80% for temperatures up to 31 °C (88 °F) 50% for temperatures to 40 °C (104 °F) |

Electrical and Mechanical Characteristics

CAUTION The power supply has auto-ranging line voltage input; be sure the supply voltage is within the specified range.

Table 1-4 Power Supply Electrical and Mechanical Characteristics

| Characteristics | Limits |
|----------------------------|------------------|
| Power Requirements: | |
| Line Voltage | 100 to 240 Vac |
| Line Frequency | 50 to 60 Hz |
| Power Output: | 24 Vdc 1 A |
| Power Dissipation: | 192 VA Maximum |
| Safety: | IEC 950 |
| Weights: | |
| Net Weight | 0.7 kg (1.5 lbs) |
| Shipping Weight | 3 kg (6.5 lbs) |
| Dimensions: | |
| Height | 41 mm (1.6 in) |
| Width | 158 mm (6.2 in) |
| Length | 97 mm (3.8 in) |

Electrostatic Discharge


Protection against ESD (electrostatic discharge) is essential while connecting, inspecting, or cleaning connectors attached to a static-sensitive circuit (such as those found in test sets).

Static electricity can build up on your body and can easily damage sensitive internal circuit elements when discharged. Static discharges too small to be felt can cause permanent damage. Devices such as calibration components and devices under test (DUTs), can also carry an electrostatic charge. To prevent damage to the test set, components, and devices:

- *always* wear a grounded wrist strap having a 1 M Ω resistor in series with it when handling components and devices or when making connections to the test set.
- *always* use a grounded, conductive table mat while making connections.
- *always* wear a heel strap when working in an area with a conductive floor. If you are uncertain about the conductivity of your floor, wear a heel strap.
- *always* ground yourself before you clean, inspect, or make a connection to a static-sensitive device or test port. You can, for example, grasp the grounded outer shell of the test port or cable connector briefly.
- *always* ground the center conductor of a test cable before making a connection to the analyzer test port or other static-sensitive device. This can be done as follows:
 1. Connect a short (from your calibration kit) to one end of the cable to short the center conductor to the outer conductor.
 2. While wearing a grounded wrist strap, grasp the outer shell of the cable connector.
 3. Connect the other end of the cable to the test port.
 4. Remove the short from the cable.

Figure 1-4 shows a typical ESD protection setup using a grounded mat and wrist strap. For parts numbers of ESD protection supplies, refer to “Replaceable Parts” in chapter 6 of the *Electronic Calibration Module Reference Guide*.

Figure 1-4 ESD Protection Setup

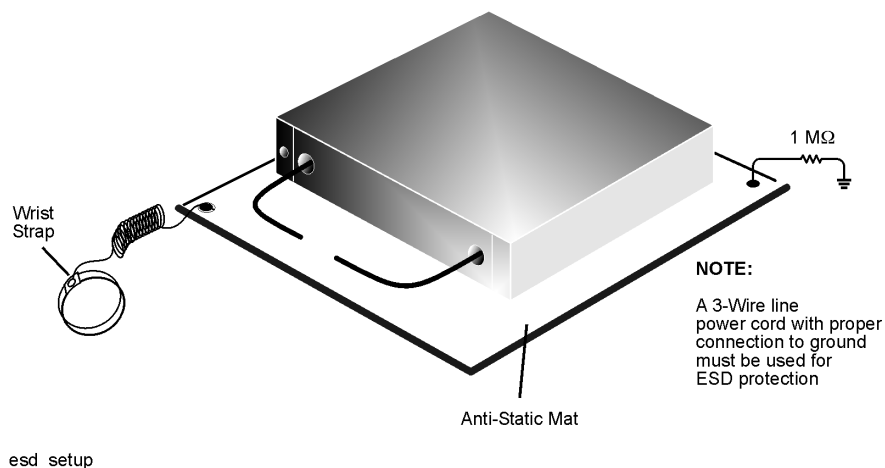

2 Troubleshooting

General Information

WARNING **No operator serviceable parts inside. Refer servicing to qualified personnel.**

If you suspect a bad calibration, or if your VNA does not pass the performance verification, follow the steps as shown in [Figure 2-1](#).


NOTE This manual contains limited information about VNA system operation. For information about the VNA's operation, refer to the VNA's documentation. If you need additional information, contact Agilent. See [Table 2-1 on page 2-4](#).

Returning a VNA Interface Kit to Agilent

If any device in the interface kit requires service, contact Agilent for information on where to send it. See [Table 2-1 on page 2-4](#). When transporting the kit, use original or comparable packaging. Please include the following information with your returned interface kit.

- your company name and address
- a technical contact person within your company, and the person's complete telephone number including country code and area code
- the model number and serial number of the interface kit
- the part number and serial number of each device
- type of service required
- a detailed description of the problem and how the device was being used when the problem occurred (such as calibration or measurement)

Figure 2-1 Troubleshooting Flowchart

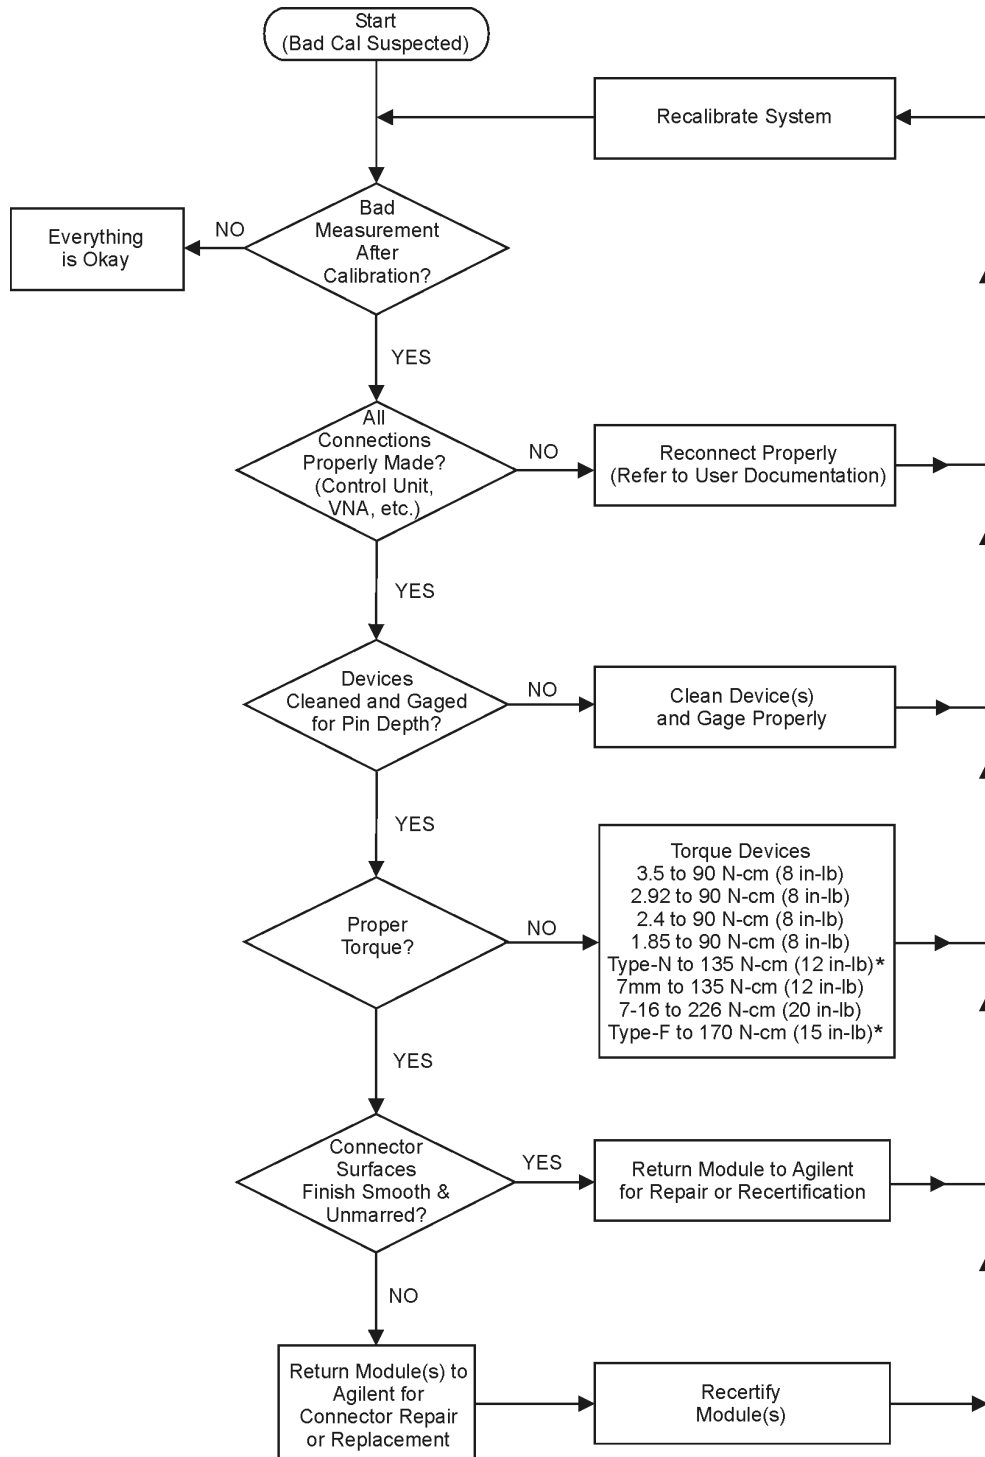

* Agilent does not supply torque wrenches for 75 Ω type-N or Type-F connectors. Finger tighten if no torque wrench is available.

pu31a

Contacting Agilent

Using the following table, contact Agilent Technologies by internet, telephone, or fax, to get assistance with your test and measurement needs.

Table 2-1 Contacting Agilent

Online assistance: www.agilent.com/find/assist

| | | | |
|---|--|---|---|
| United States <i>(tel)</i> 1 800 452 4844 | Latin America <i>(tel)</i> (305) 269 7500 <i>(fax)</i> (305) 269 7599 | Canada <i>(tel)</i> 1 877 894 4414 <i>(fax)</i> (905) 282-6495 | Europe <i>(tel)</i> (+31) 20 547 2323 <i>(fax)</i> (+31) 20 547 2390 |
| New Zealand <i>(tel)</i> 0 800 738 378 <i>(fax)</i> (+64) 4 495 8950 | Japan <i>(tel)</i> (+81) 426 56 7832 <i>(fax)</i> (+81) 426 56 7840 | Australia <i>(tel)</i> 1 800 629 485 <i>(fax)</i> (+61) 3 9210 5947 | Singapore <i>(tel)</i> 1 800 375 8100 <i>(fax)</i> (65) 836 0252 |
| Malaysia <i>(tel)</i> 1 800 828 848 <i>(fax)</i> 1 800 801 664 | Philippines <i>(tel)</i> (632) 8426802 <i>(tel) (PLDT subscriber only):</i> 1 800 16510170 <i>(fax)</i> (632) 8426809 <i>(fax) (PLDT subscriber only):</i> 1 800 16510288 | Thailand <i>(tel) outside Bangkok:</i> (088) 226 008 <i>(tel) within Bangkok:</i> (662) 661 3999 <i>(fax)</i> (66) 1 661 3714 | Hong Kong <i>(tel)</i> 800 930 871 <i>(fax)</i> (852) 2506 9233 |
| Taiwan <i>(tel)</i> 0800-047-866 <i>(fax)</i> (886) 2 25456723 | People's Republic of China <i>(tel) (preferred):</i> 800-810-0189 <i>(tel) (alternate):</i> 10800-650-0021 <i>(fax)</i> 10800-650-0121 | India <i>(tel)</i> 1-600-11-2929 <i>(fax)</i> 000-800-650-1101 | |

3 Safety and Regulatory Information

Safety Information

Review this product and related documentation to familiarize yourself with safety markings and instructions before you operate the instrument. This product has been designed and tested in accordance with international standards.

WARNING **The WARNING notice denotes a hazard. It calls attention to a procedure, practice, or the like, that, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.**

CAUTION The CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.










Before Applying Power

Verify that the product is configured to match the available main power source as described in [Table 1-4 on page 1-9](#). If this product is to be powered by autotransformer, make sure the common terminal is connected to the neutral (grounded) side of the ac power supply.

WARNING **Install the instrument so that the detachable power cord is readily identifiable and is easily reached by the operator. The detachable power cord is the instrument disconnecting device. It disconnects the mains circuit from the mains supply before other parts of the instrument.**

WARNING **If this product is not used as specified, the protection provided by the equipment could be impaired. This product must be used in a normal condition (in which all means for protection are intact) only.**

Instrument Markings

| | |
|--|---|
|  | When you see this symbol on your instrument, you should refer to the instrument's instruction manual for important information. |
|  | This symbol indicates hazardous voltages. |
|  | The laser radiation symbol is marked on products that have a laser output. |
|  | This symbol indicates that the instrument requires alternating current (ac) input. |
|  | The CE mark is a registered trademark of the European Community. If it is accompanied by a year, it indicates the year the design was proven. |
|  | The CSA mark is a registered trademark of the Canadian Standards Association. |
| ISM1-A | This text indicates that the instrument is an Industrial Scientific and Medical Group 1 Class A product (CISPER 11, Clause 4). |
|  | This symbol indicates that the power line switch is ON. |
|  | This symbol indicates that the power line switch is OFF or in STANDBY position. |
|  N10149 <small>jc84a</small> | The C-Tick mark is a registered trademark of the Australian Spectrum Management Agency. |

Safety Earth Ground

WARNING **This is a Safety Class 1 Product (provided with a protective earthing ground incorporated in the power cord). The mains shall only be inserted in a socket outlet provided with a protective earth contact. Any interruption of the protective conductor inside or outside of the product is likely to make the product dangerous. Intentional interruption is prohibited.**

NOTE This product has been designed and tested in accordance with IEC Publication 1010, Safety Requirements for Electronic Measuring Apparatus, and has been supplied in a safe condition. The instruction documentation contains information and warnings which must be followed by the user to ensure safe operation and to maintain the product in a safe condition.

Regulatory Information

Compliance Notices

This product has been designated and tested in accordance with the standards listed on the Manufacturer's Declaration of Conformity, and has been supplied in a safe condition. The documentation contains information and warnings that must be followed by the user to ensure safe operation and to maintain the product in a safe conditions.

Compliance with Canadian EMC Requirements


This ISM device complies with Canadian ICES-001.

Cet appareil ISM est conforme a la norme NMB du Canada.

Compliance With EEC Directives

See the declaration of conformity on the following page.

VNA Interface Kit Declaration of Conformity

| DECLARATION OF CONFORMITY | |
|---|---|
| According to ISO/IEC Guide 22 and CEN/CENELEC EN 45014 | |
| Manufacturer's Name: | Agilent Technologies, Inc. |
| Manufacturer's Address: | 1400 Fountaingrove Parkway Santa Rosa, CA 95403-1799 USA |
| Declares that the products | |
| Product Name: | Electronic Calibration (ECal) VNA Interface Kit |
| Model Number: | 85097B |
| Product Options: | This declaration covers all options of the above products. |
| Conform to the following product specifications: | |
| EMC: IEC 61326-1:1997+A1:1998 / EN 61326-1:1997+A1:1998 | |
| <u>Standard</u> | <u>Limit</u> |
| CISPR 11:1990 / EN 55011-1991 | Group 1, Class A |
| IEC 61000-4-2:1995+A1998 / EN 61000-4-2:1995 | 4 kV CD, 8 kV AD |
| IEC 61000-4-3:1995 / EN 61000-4-3:1995 | 3 V/m, 80 - 1000 MHz |
| IEC 61000-4-4:1995 / EN 61000-4-4:1995 | 0.5 kV sig., 1 kV power |
| IEC 61000-4-5:1995 / EN 61000-4-5:1996 | 0.5 kV L-L, 1 kV L-G |
| IEC 61000-4-6:1996 / EN 61000-4-6:1998 | 3 V, 0.15 - 80 MHz |
| IEC 61000-4-11:1994 / EN 61000-4-11:1998 | 1 cycle, 100% |
| Safety: IEC 61010-1:1990 + A1:1992 + A2:1995 / EN 61010-1:1993 +A2:1995 CAN/CSA-C22.2 No. 1010.1-92 | |
| Supplementary Information: The products herewith comply with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carry the CE-marking accordingly. | |
| These modules were tested with Agilent Technologies Network Analyzers. | |
| Santa Rosa, CA, USA |  Greg Pfeiffer/Quality Engineering Manager |
| 31 Aug. 2001 | |
| For further information, please contact your local Agilent Technologies sales office, agent, or distributor. | |

Rev. A

Index

Numerics

85097B VNA interface kit
characteristics, [1-8](#)
contents, [1-3](#)
overview, [1-2](#)
setup and operation, [1-6](#)

A

adapter cable
description, [1-4](#)
part number, [1-4](#)
Agilent Technologies
contacting, [2-4](#)
fax and phone numbers, [2-4](#)
online assistance, [2-4](#)

C

characteristics
85097B interface kit, [1-8](#)
electrical, [1-9](#)
mechanical, [1-9](#)
compatible
ECal model, [1-2](#)
VNA, [1-2](#)
compliance
EEC directives, [3-4](#)
compliance notices, [3-4](#)
configurations
VNA-Based system, [1-6](#)
conformity
declaration of, [3-5](#)
connections, [1-10](#)
contents of VNA interface kit, [1-3](#)

D

DB25 cable description, [1-4](#)
declaration of conformity
product specifications, [3-5](#)
supplementary information, [3-5](#)
documentation warranty, [1-ii](#)

E

ECal
compatible VNA, [1-2](#)
PNA interface, [1-2](#)
VNA system configuration
information, [1-6](#)
ECal module
where to get information on, [1-4](#)
EEC directives
compliance, [3-4](#)
electrical characteristics, [1-9](#)
electrostatic discharge, [1-10](#)
environmental requirements, [1-8](#)
ESD, [1-10](#)

precautions, [1-10](#)

F

firmware, revisions compatible, [1-2](#)

I

instrument marking descriptions, [3-3](#)
interface kit
content descriptions, [1-4](#)
option 100, [1-2](#)
replaceable parts, [1-3](#)
interface kit contents, [1-3](#)
interface unit description, [1-4](#)

M

maintenance, [1-10](#)
mechanical characteristics, [1-9](#)

O

online assistance, [2-4](#)
option 100, [1-2](#)

P

PNA
ECal interface, [1-2](#)
power supply unit description, [1-5](#)

R

regulatory information, [3-4](#)
replaceable parts, [1-3](#)
requirements
requirements, [1-8](#)
returning an interface kit to Agilent
shipping instructions, [2-2](#)

S

safety
before applying power, [3-2](#)
earth ground, [3-3](#)
information, [3-2](#)
instrument marking definitions, [3-3](#)
sales centers, [2-4](#)
service centers, [2-4](#)
setup and operation, [1-6](#)
shielded DB25 cable description, [1-4](#)
shipping instructions, [2-2](#)
static discharge, [1-10](#)
symbols
instrument marking descriptions, [3-3](#)
system configuration
VNA information, [1-6](#)

T

troubleshooting, [2-2](#)

flowchart, [2-3](#)

V

VNA compatibility, [1-2](#)
VNA interface kit contents, [1-3](#)
VNA-based system configuration, [1-6](#)

W

warranty, documentation, [1-ii](#)