

SCPI Command Reference, Volume 1

Agilent Technologies ESG Vector Signal Generator

This guide applies to the following signal generator model:

E4438C ESG Vector Signal Generator

Due to our continuing efforts to improve our products through firmware and hardware revisions, signal generator design and operation may vary from descriptions in this guide. We recommend that you use the latest revision of this guide to ensure you have up-to-date product information. Compare the print date of this guide (see bottom of page) with the latest revision, which can be downloaded from the following website:

www.agilent.com/find/esg



Agilent Technologies

Manufacturing Part Number: E4400-90506

Printed in USA

May 2004

© Copyright 2001–2004 Agilent Technologies, Inc.

Notice

The material contained in this document is provided “as is”, and is subject to being changed, without notice, in future editions.

Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied with regard to this manual and to any of the Agilent products to which it pertains, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or any of the Agilent products to which it pertains. Should Agilent have a written contract with the User and should any of the contract terms conflict with these terms, the contract terms shall control.

Questions or Comments about our Documentation?

We welcome any questions or comments you may have about our documentation. Please send us an E-mail at sources_manuals@am.exch.agilent.com.

SCPI Command Reference, Volume 1

1. SCPI Basics	1
Command Reference Information	2
SCPI Command Listings	2
Key and Data Field Cross Reference	2
Supported Field	2
SCPI Basics	3
Common Terms	3
Command Syntax	4
Command Types	5
Command Tree	6
Command Parameters and Responses	7
Program Messages	12
File Name Variables	13
MSUS (Mass Storage Unit Specifier) Variable	14
Quote Usage with SCPI Commands	15
Binary, Decimal, Hexadecimal, and Octal Formats	15
2. Basic Function Commands	17
Correction Subsystem ([:SOURce]:CORRection)	18
:FLATness:LOAD	18
:FLATness:PAIR	18
:FLATness:POINts	18
:FLATness:PRESet	19
:FLATness:STORe	19
[:STATe]	20
Digital Modulation Subsystem ([:SOURce])	21
:BURSt:SOURce	21
:BURSt:STATe	21
:DM:EXTernal:ALC:Bandwidth BWIDth	21
:DM:EXTernal:HCRest[:STATe]	22
:DM:EXTernal:FILTer	22
:DM:EXTernal:FILTer:AUTO	23
:DM:EXTernal:POLarity	23
:DM:EXTernal:SOURce	23
:DM:IQADjustment:EXTernal:COFFset	24

Contents

:DM:IQADjustment:EXTernal:DIOFFset	24
:DM:IQADjustment:EXTernal:DQOFFset	25
:DM:IQADjustment:EXTernal:GAIN	25
:DM:IQADjustment:EXTernal:IOFFset	26
:DM:IQADjustment:EXTernal:IQATten	26
:DM:IQADjustment:EXTernal:QOFFset	26
:DM:IQADjustment:GAIN	27
:DM:IQADjustment:IOFFset	27
:DM:IQADjustment:QOFFset	28
:DM:IQADjustment:QSKew	28
:DM:IQADjustment:SKEW	29
:DM:IQADjustment[:STATe]	29
:DM:MODulation:FILTer	30
:DM:MODulation:FILTer:AUTO	30
:DM:MODulation:ATTen	31
:DM:MODulation:ATTen:AUTO	31
:DM:POLarity[:ALL]	31
:DM:SKEW:PATH	32
:DM:SKEW[:STATe]	32
:DM:SOURce	33
:DM:SRATio	33
:DM:STATe	34
Frequency Subsystem ([:SOURce])	35
:FREQuency:CHANnels:BAND	35
:FREQuency:CHANnels:NUMBer	36
:FREQuency:CHANnels[:STATe]	37
:FREQuency:FIXed	38
:FREQuency:MODE	38
:FREQuency:MULTiplier	39
:FREQuency:OFFSet	39
:FREQuency:OFFSet:STATe	40
:FREQuency:REFErence	40
:FREQuency:REFErence:STATe	41
:FREQuency:START	41
:FREQuency:STOP	41
:FREQuency:SYNTHeSis	42
:FREQuency[:CW]	42
:PHASe:REFErence	43

:PHASe[:ADJust]	43
:ROSCillator:SOURce	44
:ROSCillator:SOURce:AUTO	44
List/Sweep Subsystem ([:SOURce])	45
:LIST:DIRection	45
:LIST:DWELI	46
:LIST:DWELI:POINts	46
:LIST:DWELI:TYPE	47
:LIST:FREQuency	47
:LIST:FREQuency:POINts	48
:LIST:MANual	48
:LIST:MODE	48
:LIST:POWer	49
:LIST:POWer:POINts	49
:LIST:RETRace	50
:LIST:TRIGger:SOURce	50
:LIST:TYPE	51
:LIST:TYPE:LIST:INITialize:FSTep	51
:LIST:TYPE:LIST:INITialize:PRESet	52
:SWEep:DWELI	52
:SWEep:POINts	53
Power Subsystem ([:SOURce]:POWer)	54
:ALC:BANdwidth	54
:ALC:SEARch	54
:ALC:SEARch:REFerence	55
:ALC:SEARch:SPAN:START	55
:ALC:SEARch:SPAN:STOP	56
:ALC:SEARch:SPAN:TYPE	56
:ALC:SEARch:SPAN[:STATe]	57
:ALC[:STATe]	57
:ALTerminate:AMPLitude	57
:ALTerminate:MANual	58
:ALTerminate:STATe	58
:ALTerminate:TRIGger[:SOURce]	59
:ATTenuation:AUTO	59
:MODE	60
:REFerence	60
:REFerence:STATe	61

Contents

:START	61
:STOP	62
[:LEVel][:IMMediate]:OFFSet	62
[:LEVel][:IMMediate][:AMPLitude]	63
Pulse Subsystem ([:SOURce]:PULSe)	64
:FREQuency:STEP	64
3. System Commands	65
Calibration Subsystem (:CALibration)	66
:DCFM	66
:IQ	66
:IQ:DC	66
:IQ:DEFault	67
:IQ:FULL	68
:IQ:START	68
:IQ:STOP	69
Communication Subsystem (:SYSTem:COMMunicate)	70
:GPIB:ADDRess	70
:GTLocal	70
:LAN:GATEway	70
:LAN:HOSTname	71
:LAN:IP	71
:LAN:SUBNet	71
:PMETer:ADDRess	72
:PMETer:CHANnel	72
:PMETer:IDN	73
:PMETer:TIMEout	73
:SERial:BAUD	74
:SERial:ECHO	74
:SERial:RESet	74
:SERial:TOUT	75
Diagnostic Subsystem (:DIAGnostic[:CPU]:INFORmation)	76
:BOARds	76
:CCOunt:ATTenuator	76
:CCOunt:PON	76
:CCOunt:PROTection	77
:DISPlay:OTIME	77
:OPTions	77

:OPTions:DETail	78
:OTIME	78
:REVision	78
:SDATe	79
Display Subsystem (:DISPlay)	80
:ANNotation:AMPLitude:UNIT	80
:ANNotation:CLOCK:DATE:FORMat	80
:ANNotation:CLOCK[:STATe]	80
:BRIGHtness	81
:CAPTure.	81
:CONTrast.	82
:INVerse.	82
:REMote	82
[:WINDow][:STATe].	83
IEEE 488.2 Common Commands.	84
*CLS	84
*ESE	84
*ESE?	84
*ESR?	85
*IDN?	85
*OPC	86
*OPC?	86
*PSC	86
*PSC?	87
*RCL	87
*RST	87
*SAV	88
*SRE	88
*SRE?	88
*STB?	89
*TRG	89
*TST?	89
*WAI	90
Memory Subsystem (:MEMory).	91
:CATalog:BINary	91
:CATalog:BIT	91
:CATalog:CDMa	92
:CATalog:DMOD	92

Contents

:CATalog:DWCDma	93
:CATalog:FCDMa	93
:CATalog:FIR	94
:CATalog:FSK	94
:CATalog:IQ	95
:CATalog:LIST	95
:CATalog:MCDMa	95
:CATalog:MDMod	96
:CATalog:MDWCdma	96
:CATalog:MFCdma	97
:CATalog:MTONe	97
:CATalog:RCDMa	98
:CATalog:SEQ	98
:CATalog:SHAPE	99
:CATalog:STATe	99
:CATalog:UFLT	100
:CATalog:UWCDma	100
:CATalog[:ALL]	101
:COPY[:NAME]	101
:DATA	102
:DATA:APPend	102
:DATA:BIT	103
:DATA:FIR	104
:DATA:FSK	104
:DATA:IQ	105
:DATA:PRAM?	106
:DATA:PRAM:BLOCK	107
:DATA:PRAM:LIST	107
:DATA:SHAPE	107
:DElete:ALL	108
:DElete:BINary	108
:DElete:BIT	109
:DElete:CDMa	109
:DElete:DMOD	109
:DElete:DWCDma	110
:DElete:FCDMa	110
:DElete:FIR	110
:DElete:FSK	111

:DElete:IQ	111
:DElete:LIST	111
:DElete:MCDMa	112
:DElete:MDDMod	112
:DElete:MDWCdma	112
:DElete:MFCdma	112
:DElete:MTONe	113
:DElete:RCDMa	113
:DElete:SEQ	113
:DElete:SHApe	114
:DElete:STATe	114
:DElete:UFLT	114
:DElete:UWCDma	115
:DElete[:NAME]	115
:FREE[:ALL]	115
:LOAD:LIST	116
:MOVE	116
:STATe:COMMeNt	116
:STORe:LIST	117
Mass Memory Subsystem (:MMEMory)	118
:CATalog	118
:COPY	119
:DATA	120
:DElete:NVWFm	120
:DElete:WFM	120
:DElete:WFM1	121
:DElete[:NAME]	121
:HEADer:CLEar	121
:HEADer:DESCRiption	122
:LOAD:LIST	122
:MOVE	122
:STORe:LIST	123
Output Subsystem (:OUTPut)	124
:BLANKing:AUTO	124
:BLANKing:STATe	124
:MODulation[:STATe]	124
[:STATe]	125

Contents

Route Subsystem (:ROUte:HARDware:DGENerator)	126
:INPut:BPOLarity	126
:INPut:CPOLarity	126
:INPut:DPOLarity	126
:INPut:SPOLarity	127
:IPOLarity:BGATe	127
:IPOLarity:CLOCK	127
:IPOLarity:DATA	128
:IPOLarity:SSYNc	128
:OPOLarity:CLOCK	128
:OPOLarity:DATA	129
:OPOLarity:EVENT[1] 2 3 4	129
:OPOLarity:SSYNc	129
:OUTPut:CPOLarity	130
:OUTPut:DCS[:STATe]	130
:OUTPut:DPOLarity	130
:OUTPut:EPOL[1] 2 3 4	131
:OUTPut:SPOLarity	131
Status Subsystem (:STATus)	132
:OPERation:BASeband:CONDition	132
:OPERation:BASeband:ENABle	132
:OPERation:BASeband:NTRansition	132
:OPERation:BASeband:PTRansition	133
:OPERation:BASeband[:EVENT]	133
:OPERation:CONDition	134
:OPERation:ENABle	134
:OPERation:NTRansition	134
:OPERation:PTRansition	135
:OPERation[:EVENT]	135
:PRESet	136
:QUEStionable:BERT:CONDition	136
:QUEStionable:BERT:ENABle	136
:QUEStionable:BERT:NTRansition	137
:QUEStionable:BERT:PTRansition	137
:QUEStionable:BERT[:EVENT]	138
:QUEStionable:CALibration:CONDition	138
:QUEStionable:CALibration:ENABle	139
:QUEStionable:CALibration:NTRansition	139

:QUESTionable:CALibration:PTRansition	139
:QUESTionable:CALibration[:EVENT]	140
:QUESTionable:CONDition	140
:QUESTionable:ENABle	141
:QUESTionable:FREQuency:CONDition	141
:QUESTionable:FREQuency:ENABle	141
:QUESTionable:FREQuency:NTRansition	142
:QUESTionable:FREQuency:PTRansition	142
:QUESTionable:FREQuency[:EVENT]	143
:QUESTionable:MODulation:CONDition	143
:QUESTionable:MODulation:ENABle	143
:QUESTionable:MODulation:NTRansition	144
:QUESTionable:MODulation:PTRansition	144
:QUESTionable:MODulation[:EVENT]	145
:QUESTionable:NTRansition	145
:QUESTionable:POWer:CONDition	145
:QUESTionable:POWer:ENABle	146
:QUESTionable:POWer:NTRansition	146
:QUESTionable:POWer:PTRansition	147
:QUESTionable:POWer[:EVENT]	147
:QUESTionable:PTRansition	148
:QUESTionable[:EVENT]	148
System Subsystem (:SYSTEM)	149
:CAPability	149
:DATE	149
:ERRor[:NEXT]	150
:ERRor:SCPI[:SYNTAX]	150
:HELP:MODE	150
:IDN	151
:LANGuage	151
:PON:TYPE	152
:PRESet	152
:PRESet:ALL	153
:PRESet:LANGuage	153
:PRESet:PERsistent	154
:PRESet:PN9	154
:PRESet:TYPE	154
:PRESet[:USER]:SAVE	155

Contents

:SECurity:DISPlay ON OFF 1 0	155
:SECurity:ERASeall	156
:SECurity:LEVel NONE ERASe OVERwrite SANitize	156
:SECurity:LEVel:STATe ON OFF 1 0	157
:SECurity:OVERwrite	157
:SECurity:SANitize	158
:SSAVer:DELay	158
:SSAVer:MODE	159
:SSAVer:STATe	159
:TIME	159
:VERSiOn	160
Trigger Subsystem	161
:ABORt	161
:INITiate:CONTInuous[:ALL]	161
:INITiate[:IMMediate][:ALL]	161
:TRIGger:OUTPut:POLarity	162
:TRIGger[:SEQuence]:SLOPe	162
:TRIGger[:SEQuence]:SOURce	163
:TRIGger[:SEQuence][:IMMediate]	163
Unit Subsystem (:UNIT)	164
:POWer	164
4. Analog Commands	165
Amplitude Modulation Subsystem ([:SOURce])	166
:AM[1] 2...	166
:AM:INTernal:FREQuency:STEP[:INCRement]	166
:AM:WIDeband:STATe	167
:AM[1] 2:EXTeRnal[1] 2:COUPling	167
:AM[1] 2:INTernal[1]:FREQuency	168
:AM[1] 2:INTernal[1]:FREQuency:ALTeRnate	168
:AM[1] 2:INTernal[1]:FREQuency:ALTeRnate:AMPLitude:PERCent	168
:AM[1] 2:INTernal[1]:FUNCTion:SHAPE	169
:AM[1] 2:INTernal[1]:SWEep:TIME	169
:AM[1] 2:INTernal[1]:SWEep:TRIGger	170
:AM[1] 2:SOURce	170
:AM[1] 2:STATe	171
:AM[1] 2[:DEPT]h	171
:AM[1] 2[:DEPT]h:TRACk	172

:AM[:DEPT]h[:STEP[:INCR]ement]	172
Frequency Modulation Subsystem ([:SOUR]ce)	173
:FM[1]2...	173
:FM:INTErnal:FREQuency:STEP[:INCR]ement]	173
:FM[1]2:EXTErnal[1]2:COUPLing	174
:FM[1]2:INTErnal[1]:FREQuency	174
:FM[1]2:INTErnal[1]:FREQuency:ALTErnate	175
:FM[1]2:INTErnal[1]:FREQuency:ALTErnate:AMPLitude:PERCent	175
:FM[1]2:INTErnal[1]:FUNCTion:SHAPE	175
:FM[1]2:INTErnal[1]:SWEep:TIME	176
:FM[1]2:INTErnal[1]:SWEep:TRIGger	176
:FM[1]2:SOURce	177
:FM[1]2:STATe	177
:FM[1]2[:DEVI]ation]	178
:FM[1]2[:DEVI]ation]:TRACk	178
Low Frequency Output Subsystem ([:SOUR]ce[:LFO]utput)	179
:AMPLitude	179
:FUNCTion[1]:FREQuency	179
:FUNCTion[1]:FREQuency:ALTErnate	180
:FUNCTion[1]:FREQuency:ALTErnate:AMPLitude:PERCent	180
:FUNCTion[1]:PERiod	180
:FUNCTion[1]:PWIDth	181
:FUNCTion[1]:SHAPE	181
:FUNCTion[1]:SWEep:TIME	181
:FUNCTion[1]:SWEep:TRIGger	182
:SOURce	182
:STATe	183
Phase Modulation Subsystem ([:SOUR]ce)	184
:PM[1]2...	184
:PM:INTErnal:FREQuency:STEP[:INCR]ement]	184
:PM[1]2:BANdwidth BWIDth	185
:PM[1]2:EXTErnal[1]:COUPLing	185
:PM[1]2:INTErnal[1]:FREQuency	186
:PM[1]2:INTErnal[1]:FREQuency:ALTErnate	186
:PM[1]2:INTErnal[1]:FREQuency:ALTErnate:AMPLitude:PERCent	186
:PM[1]2:INTErnal[1]:FUNCTion:SHAPE	187
:PM[1]2:INTErnal[1]:SWEep:TIME	187
:PM[1]2:INTErnal[1]:SWEep:TRIGger	188

Contents

:PM[1]2:SOURce	188
:PM[1]2:STATe	189
:PM[1]2[:DEVIation]	189
:PM[1]2[:DEVIation]:TRACk	190
:PM[:DEVIation]:STEP[:INCRement]	190
Pulse Modulation Subsystem ([:SOURce]:PULM)	192
:INTernal[1]:FREQuency	192
:INTernal[1]:FUNCTion:SHAPE	192
:INTernal[1]:PERiod	192
:INTernal[1]:PERiod:STEP[:INCRement]	193
:INTernal[1]:PWIDth	193
:INTernal[1]:PWIDth:STEP	194
:SOURce	194
:STATe	194
5. Component Test Digital Commands	197
All Subsystem–Option 001/601 or 002/602 ([:SOURce])	198
:RADio:ALL:OFF	198
AWGN ARB Subsystem–Option 403 ([:SOURce]:RADio:AWGN:ARB)	199
:BWIDth	199
:IQ:EXTernal:FILTer	199
:IQ:EXTernal:FILTer:AUTO	199
:HEADer:CLEar	200
:HEADer:SAVE	200
:IQ:MODulation:ATTen	200
:IQ:MODulation:ATTen:AUTO	201
:IQ:MODulation:FILTer	201
:IQ:MODulation:FILTer:AUTO	202
:MDESTination:PULSe	202
:MDESTination:AAMPLitude	202
:MDESTination:ALCHold	203
:MPOLarity:MARKer1	203
:MPOLarity:MARKer2	203
:MPOLarity:MARKer3	204
:MPOLarity:MARKer4	204
:LENgth	204
:REFerence:EXTernal:FREQuency	204
:REFerence[:SOURce]	205

:SCLock:RATE	205
:SEED	206
[:STATe]	206
CDMA ARB Subsystem–Option 401 ([:SOURce]:RADio:CDMA:ARB)	207
:CLIPping:I	207
:CLIPping:POSition	207
:CLIPping:Q	207
:CLIPping:TYPE	208
:CLIPping[:IJQ]	208
:CRATe	208
:IQ:EXTernal:FILTer	209
:IQ:EXTernal:FILTer:AUTO	209
:FILTer	210
:FILTer:ALPHa	211
:FILTer:BBT	211
:FILTer:CHANnel	211
:HEADer:CLEar	212
:HEADer:SAVE	212
:IQMap	212
:IQ:MODulation:ATTen	213
:IQ:MODulation:ATTen:AUTO	213
:IQ:MODulation:FILTer	214
:IQ:MODulation:FILTer:AUTO	214
:MDESTination:PULSe	214
:MDESTination:AAMPLitude	215
:MDESTination:ALCHold	215
:MPOLarity:MARKer1	215
:MPOLarity:MARKer2	216
:MPOLarity:MARKer3	216
:MPOLarity:MARKer4	216
:OSAMple	217
:REFerence:EXTernal:FREQuency	217
:REFerence[:SOURce]	217
:RETRigger	218
:SCLock:RATE	218
:SETup	219
:SETup:CHANnel	220
:SETup:MCARrier	221

Contents

:SETup:MCARrier:STORE	221
:SETup:MCARrier:TABLE	222
:SETup:STORE	222
:TRIGger:TYPE	223
:TRIGger:TYPE:CONTinuous[:TYPE]	224
:TRIGger:TYPE:GATE:ACTive	224
:TRIGger[:SOURce]	225
:TRIGger[:SOURce]:EXTernal[:SOURce]	225
:TRIGger[:SOURce]:EXTernal:DELay	226
:TRIGger[:SOURce]:EXTernal:DELay:STATe	226
:TRIGger[:SOURce]:EXTernal:SLOPe	227
:WLENgth	227
[:STATe]	227
CDMA2000 ARB Subsystem–Option 401 ([:SOURce]:RADio:CDMA2000:ARB)	229
:CLIPping:I	229
:CLIPping:POSition	229
:CLIPping:Q	229
:CLIPping:TYPE	230
:CLIPping[:IJQ]	230
:IQ:EXTernal:FILTer	230
:IQ:EXTernal:FILTer:AUTO	231
:FILTer	231
:FILTer:ALPHa	232
:FILTer:BBT	233
:FILTer:CHANnel	233
:HEADer:CLear	234
:HEADer:SAVE	234
:IQ:MODulation:ATTen	234
:IQ:MODulation:ATTen:AUTO	234
:IQ:MODulation:FILTer	235
:IQ:MODulation:FILTer:AUTO	235
:IQMap	236
:LINK	236
:LINK:FORWard:SETup	236
:LINK:FORWard:SETup:MCARrier	237
:LINK:FORWard:SETup:MCARrier:STORE	238
:LINK:FORWard:SETup:MCARrier:TABLE	238
:LINK:FORWard:SETup:MCARrier:TABLE:NCARriers	239

:LINK:FORWARD:SETUP:STORE	240
:LINK:FORWARD:SETUP:TABLE:APPLY	241
:LINK:FORWARD:SETUP:TABLE:CHANNEL	241
:LINK:FORWARD:SETUP:TABLE:NCHANNELS	242
:LINK:FORWARD:SETUP:TABLE:PADJUST	242
:LINK:REVERSE:RCONFIG	243
:LINK:REVERSE:SETUP	243
:LINK:REVERSE:SETUP:STORE	243
:LINK:REVERSE:SETUP:TABLE:APPLY	244
:LINK:REVERSE:SETUP:TABLE:CHANNEL	245
:LINK:REVERSE:SETUP:TABLE:NCHANNELS	246
:LINK:REVERSE:SETUP:TABLE:PADJUST	246
:MDESTINATION:PULSE	246
:MDESTINATION:AAMPLITUDE	247
:MDESTINATION:ALCHOLD	247
:MPOLARITY:MARKER1	247
:MPOLARITY:MARKER2	247
:MPOLARITY:MARKER3	248
:MPOLARITY:MARKER4	248
:REFERENCE:EXTERNAL:FREQUENCY	248
:REFERENCE[:SOURCE]	249
:RETRIGGER	249
:REVISION	250
:SLOCK:RATE	250
:SPREADING:RATE	250
:SPREADING:TYPE	251
:SPREADING:TYPE:MCARRIER:SPACING	251
:TRIGGER:TYPE	252
:TRIGGER:TYPE:CONTINUOUS[:TYPE]	252
:TRIGGER:TYPE:GATE:ACTIVE	253
:TRIGGER[:SOURCE]	253
:TRIGGER[:SOURCE]:EXTERNAL[:SOURCE]	254
:TRIGGER[:SOURCE]:EXTERNAL:DELAY	254
:TRIGGER[:SOURCE]:EXTERNAL:DELAY:STATE	255
:TRIGGER[:SOURCE]:EXTERNAL:SLOPE	255
[:STATE]	255
Dmodulation Subsystem—Option 001/601 or 002/602 ([:SOURCE]:RADIO:DMODULATION:ARB)	257
:IQ:EXTERNAL:FILTER	257

Contents

:IQ:EXternal:FILTer:AUTO	257
:FILTer	258
:FILTer:ALPHa	259
:FILTer:BBT	259
:FILTer:CHANnel	259
:HEADer:CLEar	260
:HEADer:SAVE	260
:IQ:MODulation:ATTen	260
:IQ:MODulation:ATTen:AUTO	261
:IQ:MODulation:FILTer	261
:IQ:MODulation:FILTer:AUTO	262
:MDEStination:PULSe	262
:MDEStination:AAMPlitude	262
:MDEStination:ALCHold	263
:MODulation:FSK[:DEViation]	263
:MODulation[:TYPE]	263
:MPOLarity:MARKer1	264
:MPOLarity:MARKer2	264
:MPOLarity:MARKer3	264
:MPOLarity:MARKer4	265
:REFeRence:EXternal:FREQuency	265
:REFeRence[:SOURce]	266
:RETRigger	266
:SCLock:RATE	266
:SETup	267
:SETup:MCARrier	267
:SETup:MCARrier:PHASe	268
:SETup:MCARrier:STORe	268
:SETup:MCARrier:TABLE	269
:SETup:MCARrier:TABLE:NCARriers	270
:SETup:STORe	270
:SRATe	270
:TRIGger:TYPE	272
:TRIGger:TYPE:CONTinuous[:TYPE]	272
:TYPE:GATE:ACTivE	273
:TRIGger[:SOURce]	273
:TRIGger[:SOURce]:EXternal:DELay	274
:TRIGger[:SOURce]:EXternal:DELay:STATe	274

:TRIGger[:SOURce]:EXTernal:SLOPe	274
:TRIGger[:SOURce]:EXTernal[:SOURce]	275
[:STATe]	275
Dual ARB Subsystem–Option 001/601 or 002/602 ([:SOURce]:RADio:ARB)	277
:CLIPping	277
:GENerate:SINE	277
:HEADer:CLEar	278
:HEADer:SAVE	278
:HCRest[:STATe]	278
:IQ:EXTernal:FILTer	279
:IQ:EXTernal:FILTer:AUTO	279
:IQ:MODulation:ATTen	280
:IQ:MODulation:ATTen:AUTO	280
:IQ:MODulation:FILTer	281
:IQ:MODulation:FILTer:AUTO	281
:MARKer:CLEar	281
:MARKer:CLEar:ALL	282
:MARKer:ROTate	282
:MARKer:[SET]	283
:MDESTination:PULSe	284
:MDESTination:AAMPLitude	284
:MDESTination:ALCHold	284
:MPOLarity:MARKer1	285
:MPOLarity:MARKer2	285
:MPOLarity:MARKer3	285
:MPOLarity:MARKer4	285
:REFerence:EXTernal:FREQuency	286
:REFerence[:SOURce]	286
:RETRigger	287
:RSCALing	287
:SCALing	287
:SCLock:RATE	288
:SEQuence	288
:TRIGger:TYPE	289
:TRIGger:TYPE:CONTinuous[:TYPE]	289
:TRIGger:TYPE:GATE:ACTive	290
:TRIGger:TYPE:SADVance[:TYPE]	290
:TRIGger[:SOURce]	291

Contents

:TRIGger[:SOURce]:EXTernal[:SOURce]	291
:TRIGger[SOURce]:EXTernal:DELay	292
:TRIGger[:SOURce]:EXTernal:DELay:STATe	292
:TRIGger[:SOURce]:EXTernal:SLOPe	293
:WAVeform	293
[:STATe]	293
Multitone Subsystem—Option 001/601 or 002/602 ([:SOURce]:RADio:MTONe:ARB)	294
Creating a Multitone Waveform	294
:HEADer:CLEar	294
:HEADer:SAVE	294
:IQ:EXTernal:FILTer	295
:IQ:EXTernal:FILTer:AUTO	295
:IQ:MODulation:ATTen	295
:IQ:MODulation:ATTen:AUTO	296
:IQ:MODulation:FILTer	296
:IQ:MODulation:FILTer:AUTO	297
:MDESTination:PULSe	297
:MDESTination:AAMPLitude	297
:MDESTination:ALCHold	298
:MPOLarity:MARKer1	298
:MPOLarity:MARKer2	298
:MPOLarity:MARKer3	299
:MPOLarity:MARKer4	299
:REFerence:EXTernal:FREQuency	299
:REFerence[:SOURce]	300
:ROW	300
:SCLock:RATE	301
:SETup	301
:SETup:STORe	302
:SETup:TABLE	302
:SETup:TABLE:FSPacing	303
:SETup:TABLE:NTONes	303
:SETup:TABLE:PHASe:INITialize	304
:SETup:TABLE:PHASe:INITialize:SEED	304
[:STATe]	304
Wideband CDMA ARB Subsystem—Option 400 ([:SOURce]:RADio:WCDMa:TGPP:ARB)	306
:CLIPping:I	306
:CLIPping:POSition	306

:CLIPping:Q	306
:CLIPping:TYPE	307
:CLIPping[:IJQ]	307
:CRATe	308
:FILTer	308
:FILTer:ALPHa	309
:FILTer:BBT	309
:FILTer:CHANnel	309
:HEADer:CLEar	310
:HEADer:SAVE	310
:IQ:EXTernal:FILTer	310
:IQ:EXTernal:FILTer:AUTO	311
:IQMap	311
:IQ:MODulation:ATTen	312
:IQ:MODulation:ATTen:AUTO	312
:IQ:MODulation:FILTer	312
:IQ:MODulation:FILTer:AUTO	313
:LINK	313
:LINK:DOWN:OACP	314
:LINK:DOWN:SETup	314
:LINK:DOWN:SETup:MCARrier	315
:LINK:DOWN:SETup:MCARrier:CLIPping:I	316
:LINK:DOWN:SETup:MCARrier:CLIPping:Q	317
:LINK:DOWN:SETup:MCARrier:CLIPping:TYPE	317
:LINK:DOWN:SETup:MCARrier:CLIPping[:IJQ]	317
:LINK:DOWN:SETup:MCARrier:SCODE:AINCrement	318
:LINK:DOWN:SETup:MCARrier:STORE	318
:LINK:DOWN:SETup:MCARrier:TABLE	319
:LINK:DOWN:SETup:MCARrier:TABLE:NCARriers	321
:LINK:DOWN:SETup:MCARrier:TOFFset:AINCrement	321
:LINK:DOWN:SETup:STORE	321
:LINK:DOWN:SETup:TABLE:APPLY	322
:LINK:DOWN:SETup:TABLE:CHANnel	323
:LINK:DOWN:SETup:TABLE:NCHannels?	327
:LINK:DOWN:SETup:TABLE:PADJust	328
:LINK:DOWN:TFCI	328
:LINK:UP:OACP	328
:LINK:UP:SCRAMBLE	329

Contents

:LINK:UP:SDPDch	329
:LINK:UP:SETup	329
:LINK:UP:SETup:STORE	330
:LINK:UP:SETup:TABLE:APPLy	331
:LINK:UP:SETup:TABLE:CHANnel	331
:LINK:UP:SETup:TABLE:GUNit	332
:LINK:UP:SETup:TABLE:NCHannel	333
:LINK:UP:TFCI	333
:MDEStination:PULSe	333
:MDEStination:AAMPLitude	334
:MDEStination:ALCHold	334
:MPOLarity:MARKer1	334
:MPOLarity:MARKer2	334
:MPOLarity:MARKer3	335
:MPOLarity:MARKer4	335
:REFerence:EXTernal:FREQuency	335
:REFerence[:SOURce]	336
:RETRigger	336
:REVision	337
:SCLock:RATE	337
:TRIGger:TYPE:CONTinuous[:TYPE]	337
:TRIGger:TYPE	338
:TRIGger:TYPE:GATE:ACTive	338
:TRIGger[:SOURce]	339
:TRIGger[:SOURce]:EXTernal:DELay	339
:TRIGger[:SOURce]:EXTernal:DELay:STATe	340
:TRIGger[:SOURce]:EXTernal:SLOPe	340
:TRIGger[:SOURce]:EXTernal[:SOURce]	340
[:STATe]	341

SCPI Command Reference, Volume 2

6. Bit Error Rate Test (BERT) Commands	343
Calculate Subsystem–Option UN7 and 300 (:CALCulate:BERT)	344
:BTS:LOOPback:EDGE:ETCH:F43:COMParator:CRITeria:ERATe	344
:BTS:LOOPback:EDGE:ETCH:F43:COMParator:CRITeria[:SElect]	344
:BTS:LOOPback:EDGE:MCS5:COMParator:CRITeria:ERATe	344
:BTS:LOOPback:EDGE:MCS5:COMParator:CRITeria[:SElect]	345
:BTS:LOOPback:EDGE:MCS9:COMParator:CRITeria:ERATe	345
:BTS:LOOPback:EDGE:MCS9:COMParator:CRITeria[:SElect]	346
:BTS:LOOPback:EDGE:UNCoded:COMParator:CRITeria:ERATe	346
:BTS:LOOPback:EDGE:UNCoded:COMParator:CRITeria[:SElect]	346
:BTS:LOOPback:GSM:CS1:COMParator:CRITeria:ERATe	347
:BTS:LOOPback:GSM:CS1:COMParator:CRITeria[:SElect]	347
:BTS:LOOPback:GSM:CS4:COMParator:CRITeria:ERATe	348
:BTS:LOOPback:GSM:CS4:COMParator:CRITeria[:SElect]	348
:BTS:LOOPback:GSM:MCS1:COMParator:CRITeria:ERATe	349
:BTS:LOOPback:GSM:MCS1:COMParator:CRITeria[:SElect]	349
:BTS:LOOPback:GSM:COMParator:CRITeria:CIB	349
:BTS:LOOPback:GSM:COMParator:CRITeria:CII	350
:BTS:LOOPback:GSM:COMParator:CRITeria:FERasure	350
:BTS:LOOPback:GSM:COMParator:CRITeria[:SElect]	350
[:BAsEband]:COMParator:MODE	351
[:BAsEband]:COMParator:THReshold	352
[:BAsEband]:COMParator[:STATe]	352
[:BAsEband]:DISPlay:MODE:	352
[:BAsEband]:DISPlay:UPDate:	353
Data Subsystem–Option UN7 and 300 (:DATA)	354
:BERT:BTS:LOOPback:EDGE:ETCH:F43[:DATA]	354
:BERT:BTS:LOOPback:EDGE:MCS5[:DATA]	355
:BERT:BTS:LOOPback:EDGE:MCS9[:DATA]	356
:BERT:BTS:LOOPback:EDGE:UNCoded[:DATA]	356
:BERT:BTS:LOOPback:GSM[:DATA]	357
:BERT:BTS:LOOPback:GSM:CS1[:DATA]	359
:BERT:BTS:LOOPback:GSM:CS4[:DATA]	359
:BERT:BTS:LOOPback:GSM:MCS1[:DATA]	360
:BERT:AUXout	360
[:DATA]	362

Contents

Input Subsystem–Option UN7 (:INPut:BERT[: BASeband])	363
:CGATe:DELay:CLOCK	363
:CGATe:DELay:MODE	363
:CGATe:DELay:TIME	364
:CGATe:DELay[::STATe]	364
:CGATe:POLarity	364
:CGATe[::STATe].	365
:CLOCK:DELay:RESolution	365
:CLOCK:DELay:TIME	366
:CLOCK:DELay[::STATe].	366
:CLOCK:POLarity	366
:DATA:POLarity	367
:IMPedance	367
:THReshold	368
Measure Subsystem–Option 300 (:MEASure[:SCALar]:BERT:BTS:LOOPback)	369
:EDGE:MCS5[:SENSitivity]	369
:EDGE:MCS9[:SENSitivity]	369
:EDGE:UNCoded[:SENSitivity]	370
:GSM[:SENSitivity]	371
Sense Subsystem–Options UN7 and 300 ([:SOURce]:SENSe:BERT)	372
:BTS:LOOPback:EDGE:ETCH:F43:BLOCK:COUNt	372
:BTS:LOOPback:EDGE:ETCH:F43:CONTAin	372
:BTS:LOOPback:EDGE:ETCH:F43:STOP:CRITeria:EBLock	372
:BTS:LOOPback:EDGE:ETCH:F43:STOP:CRITeria[:SElect]	373
:BTS:LOOPback:EDGE:FTRigger:EXTernal:DELay	373
:BTS:LOOPback:EDGE:FTRigger:EXTernal:POLarity	374
:BTS:LOOPback:EDGE:FTRigger[SElect]	374
:BTS:LOOPback:EDGE:MCS5:BLOCK:COUNt	374
:BTS:LOOPback:EDGE:MCS5:CONTAin	375
:BTS:LOOPback:EDGE:MCS5:ESENSitivity	375
:BTS:LOOPback:EDGE:MCS5:HAMPLitude	375
:BTS:LOOPback:EDGE:MCS5:LAMPLitude	376
:BTS:LOOPback:EDGE:MCS5:PAMPLitude	376
:BTS:LOOPback:EDGE:MCS5:SBLock:COUNt	377
:BTS:LOOPback:EDGE:MCS5:SBLock:INITial	377
:BTS:LOOPback:EDGE:MCS5:STOP:CRITeria:EBLock	377
:BTS:LOOPback:EDGE:MCS5:STOP:CRITeria[:SElect]	378
:BTS:LOOPback:EDGE:MCS9:BLOCK:COUNt	378

:BTS:LOOPback:EDGE:MCS9:CONTain	378
:BTS:LOOPback:EDGE:MCS9:ESEnsitivity	379
:BTS:LOOPback:EDGE:MCS9:HAMPplitude	379
:BTS:LOOPback:EDGE:MCS9:LAMPplitude.	379
:BTS:LOOPback:EDGE:MCS9:PAMPplitude	380
:BTS:LOOPback:EDGE:MCS9:SBLock:COUNT	380
:BTS:LOOPback:EDGE:MCS9:SBLock:INITial.	381
:BTS:LOOPback:EDGE:MCS9:STOP:CRITeria:EBLock	381
:BTS:LOOPback:EDGE:MCS9:STOP:CRITeria[:SElect]	381
:BTS:LOOPback:EDGE:MEASurement:STOP	382
:BTS:LOOPback:EDGE:MEASurement:TSLot.	382
:BTS:LOOPback:EDGE:MEASurement[:MODE].	383
:BTS:LOOPback:EDGE:SINVert	383
:BTS:LOOPback:EDGE:SYNC:AGain.	383
:BTS:LOOPback:EDGE:SYNC:RF	384
:BTS:LOOPback:EDGE:SYNC[:SOURce]	384
:BTS:LOOPback:EDGE:TRIGger[:SOURce]	385
:BTS:LOOPback:EDGE:ULINK:OFFSet	385
:BTS:LOOPback:EDGE:UNCoded:BIT:COUNT.	386
:BTS:LOOPback:EDGE:UNCoded:ESEnsitivity	386
:BTS:LOOPback:EDGE:UNCoded:HAMPplitude	386
:BTS:LOOPback:EDGE:UNCoded:LAMPplitude.	387
:BTS:LOOPback:EDGE:UNCoded:PAMPplitude	387
:BTS:LOOPback:EDGE:UNCoded:SBIT:COUNT.	387
:BTS:LOOPback:EDGE:UNCoded:SBIT:INITial	388
:BTS:LOOPback:EDGE:UNCoded:STOP:CRITeria:EBIT	388
:BTS:LOOPback:EDGE:UNCoded:STOP:CRITeria[:SElect]	388
:BTS:LOOPback:EDGE[:STATe].	389
:BTS:LOOPback:GSM:CS1:BLock:COUNT	389
:BTS:LOOPback:GSM:CS1:CONTain.	390
:BTS:LOOPback:GSM:CS1:STOP:CRITeria:EBLock	390
:BTS:LOOPback:GSM:CS1:STOP:CRITeria[:SElect].	390
:BTS:LOOPback:GSM:CS4:BLock:COUNT	391
:BTS:LOOPback:GSM:CS4:CONTain.	391
:BTS:LOOPback:GSM:CS4:STOP:CRITeria:EBLock	391
:BTS:LOOPback:GSM:CS4:STOP:CRITeria[:SElect].	392
:BTS:LOOPback:GSM:ESEnsitivity	392
:BTS:LOOPback:GSM:FRAMe:CIB	393

Contents

:BTS:LOOPback:GSM:FRAMe:CII	393
:BTS:LOOPback:GSM:FRAMe:COUNT	393
:BTS:LOOPback:GSM:HAMPLitude	394
:BTS:LOOPback:GSM:LAMPLitude	394
:BTS:LOOPback:GSM:MCS1:BLOCK:COUNT	394
:BTS:LOOPback:GSM:MCS1:CONTain	395
:BTS:LOOPback:GSM:MCS1:STOP:CRITeria:EBLock	395
:BTS:LOOPback:GSM:MCS1:STOP:CRITeria[:SElect]	395
:BTS:LOOPback:GSM:MEASurement:STOP	396
:BTS:LOOPback:GSM:MEASurement:TSLot	396
:BTS:LOOPback:GSM:MEASurement[:MODE]	397
:BTS:LOOPback:GSM:PAMPLitude	397
:BTS:LOOPback:GSM:SFRame:COUNT	397
:BTS:LOOPback:GSM:SFRame:INITial	398
:BTS:LOOPback:GSM:SINVert	398
:BTS:LOOPback:GSM:STOP:CRITeria:CIB	398
:BTS:LOOPback:GSM:STOP:CRITeria:CII	399
:BTS:LOOPback:GSM:STOP:CRITeria:FERasure	399
:BTS:LOOPback:GSM:STOP:CRITeria[:SElect]	399
:BTS:LOOPback:GSM:SYNC:RF	400
:BTS:LOOPback:GSM:SYNC[:SOURce]	401
:BTS:LOOPback:GSM:TRIGger[:SOURce]	401
:BTS:LOOPback:GSM:ULINK:OFFSet	402
:BTS:LOOPback:GSM[:STATe]	402
[:BAsEband]:PRBS:FUNCTion:SPIgnore:DATA	402
[:BAsEband]:PRBS:FUNCTion:SPIgnore[:STATe]	403
[:BAsEband]:PRBS[:DATA]	403
[:BAsEband]:RSYNc:THReshold	404
[:BAsEband]:RSYNc[:STATe]	404
[:BAsEband]:STATe	404
[:BAsEband]:STOP:CRITeria:EBIT	405
[:BAsEband]:STOP:CRITeria[:SElect]	405
[:BAsEband]:TBITs	406
[:BAsEband]:TRIGger:BDELay	406
[:BAsEband]:TRIGger:BDELay:STATe	406
[:BAsEband]:TRIGger:COUNT	407
[:BAsEband]:TRIGger:POLarity	407
[:BAsEband]:TRIGger[:SOURce]	407

7. Receiver Test Digital Commands	409
All Subsystem–Option 001/601 or 002/602 ([:SOURce])	410
:RADio:ALL:OFF.	410
AWGN Real-Time Subsystem–Option 403 ([:SOURce]:RADio:AWGN:RT)	411
:BWIDth	411
[:STATe]	411
Bluetooth Subsystem–Option 406 ([:SOURce]:RADio:BLUEtooth:ARB).	412
:AMADdr	412
:BDADdr	412
:BURSt[:STATe]	412
:CGDelay.	413
:DATA	413
:IQ:EXternal:FILTer	414
:IQ:EXternal:FILTer:AUTO	414
:HEADer:CLEar	415
:HEADer:SAVE.	415
:IMPairments	415
:IMPairments:AWGN	416
:IMPairments:AWGN:CNr	416
:IMPairments:AWGN:NSEed	416
:IMPairments:DDEVIation	417
:IMPairments:FDType.	417
:IMPairments:FOFFset	418
:IMPairments:MINdex	418
:IMPairments:STERror	419
:IQ:MODulation:ATTen	419
:IQ:MODulation:ATTen:AUTO	420
:IQ:MODulation:FILTer	420
:IQ:MODulation:FILTer:AUTO	421
:MDEStination:PULSe	421
:MDEStination:AAMPLitude.	421
:MDEStination:ALCHold	422
:MPOLarity:MARKer1	422
:MPOLarity:MARKer2	422
:MPOLarity:MARKer3	423
:MPOLarity:MARKer4	423
:PACKet.	423
:REFerence:EXternal:FREQuency	423

Contents

:REfERENCE[:SOURce]	424
:RSYMBOLS	424
:SCLock:RATE	425
[:STATe]	425
CDMA2000 BBG Subsystem–Option 401 ([:SOURce]:RADio:CDMA2000[:BBG])	426
:LMODE	426
[:FORWard]:BBCLOCK	426
[:FORWard]:CHIPrate	427
[:FORWard]:ESDdelay	427
[:FORWard]:FILTer	428
[:FORWard]:FILTer:ALPHa	428
[:FORWard]:FILTer:BBT	429
[:FORWard]:FILTer:CHANnel	429
[:FORWard]:LCState	430
[:FORWard]:FFCH:DATA	430
[:FORWard]:FFCH:DATA:FIX4	430
[:FORWard]:FFCH:EBNO	431
[:FORWard]:FFCH:FOFFset	432
[:FORWard]:FFCH:LCMask	432
[:FORWard]:FFCH:LCMask:ESN	432
[:FORWard]:FFCH:LCMask:HEADer	433
[:FORWard]:FFCH:POWER	433
[:FORWard]:FFCH:PRAMp	433
[:FORWard]:FFCH:PRTime	434
[:FORWard]:FFCH:QOF	434
[:FORWard]:FFCH:RATE	435
[:FORWard]:FFCH:RCONfig	435
[:FORWard]:FFCH:WALSh	435
[:FORWard]:FFCH[:STATe]	436
[:FORWard]:FPCH:DATA	436
[:FORWard]:FPCH:EBNO	436
[:FORWard]:FPCH:LCMask	437
[:FORWard]:FPCH:LCMask:F1	437
[:FORWard]:FPCH:LCMask:F2	437
[:FORWard]:FPCH:LCMask:F3	438
[:FORWard]:FPCH:MESSAge	438
[:FORWard]:FPCH:POWER	439
[:FORWard]:FPCH:RATE	439

[:FORWARD]:FPCH:WALSh	439
[:FORWARD]:FPCH[:STATe]	440
[:FORWARD]:FPICH:ECNO	440
[:FORWARD]:FPICH:POWer	440
[:FORWARD]:FPICH[:STATe]	441
[:FORWARD]:FSCH[1]2:DATA	441
[:FORWARD]:FSCH[1]2:DATA:FIX4	441
[:FORWARD]:FSCH[1]2:EBNO	442
[:FORWARD]:FSCH[1]2:FOFFset	442
[:FORWARD]:FSCH[1]2:LCMask	443
[:FORWARD]:FSCH[1]2:LCMask:ESN	443
[:FORWARD]:FSCH[1]2:LCMask:HEADer	443
[:FORWARD]:FSCH[1]2:POWer	444
[:FORWARD]:FSCH[1]2:QOF	444
[:FORWARD]:FSCH[1]2:RATE	444
[:FORWARD]:FSCH[1]2:RCONfig	445
[:FORWARD]:FSCH[1]2:TCODE	445
[:FORWARD]:FSCH[1]2:WALSh	445
[:FORWARD]:FSCH[1]2[:STATe]	446
[:FORWARD]:FSYNc:CFRequency	446
[:FORWARD]:FSYNc:DAYLt	447
[:FORWARD]:FSYNc:EBNO	447
[:FORWARD]:FSYNc:ECFRequency	447
[:FORWARD]:FSYNc:LPSec	448
[:FORWARD]:FSYNc:LTMoff	448
[:FORWARD]:FSYNc:MPREv	449
[:FORWARD]:FSYNc:MSGType	449
[:FORWARD]:FSYNc:NID	449
[:FORWARD]:FSYNc:POWer	450
[:FORWARD]:FSYNc:PRATe	450
[:FORWARD]:FSYNc:PREV	450
[:FORWARD]:FSYNc:RESERved	451
[:FORWARD]:FSYNc:SID	451
[:FORWARD]:FSYNc:STYPe	451
[:FORWARD]:FSYNc:SYSTime	452
[:FORWARD]:FSYNc:WALSh	452
[:FORWARD]:FSYNc[:STATe]	452
[:FORWARD]:NOISe:CN	453

Contents

[:FORWard]:NOISe[:STATe]	453
[:FORWard]:OCNS:EBNO	454
[:FORWard]:OCNS:POWer	454
[:FORWard]:OCNS:WALSh	455
[:FORWard]:OCNS[:STATe]	455
[:FORWard]:PADJust	455
[:FORWard]:POLarity	456
[:FORWard]:QPCH:CCI	456
[:FORWard]:QPCH:EBNO	456
[:FORWard]:QPCH:PI	457
[:FORWard]:QPCH:POWer	457
[:FORWard]:QPCH:RATE	458
[:FORWard]:QPCH:WALSh	458
[:FORWard]:QPCH[:STATe]	458
[:FORWard]:SRATe	459
:PNOFfset	459
:REVerse:BBCLock	459
:REVerse:CHIPrate	460
:REVerse:ESDelay	460
:REVerse:FILTer	460
:REVerse:FILTer:ALPHa	461
:REVerse:FILTer:BBT	462
:REVerse:FILTer:CHANnel	462
:REVerse:LCMask	462
:REVerse:LCSTate	463
:REVerse:PADJust	463
:REVerse:POLarity[:ALL]	464
:REVerse:NOISe:CN	464
:REVerse:NOISe[:STATe]	464
:REVerse:RC12:ACCess:RACH:DATA	465
:REVerse:RC12:ACCess:RACH:DATA:FIX4	465
:REVerse:RC12:ACCess:RACH:EBNO	466
:REVerse:RC12:ACCess:RACH:FLENgth	466
:REVerse:RC12:ACCess:RACH:FOFFset	467
:REVerse:RC12:ACCess:RACH:POWer	467
:REVerse:RC12:ACCess:RACH:RCONfig	467
:REVerse:RC12:ACCess:RACH:RATE	468
:REVerse:RC12:ACCess:RACH[:STATe]	468

:REVerse:RC12:TRAFfic:RSCH:DATA	468
:REVerse:RC12:TRAFfic:RSCH:DATA:FIX4	469
:REVerse:RC12:TRAFfic:RSCH:FLENgth	469
:REVerse:RC12:TRAFfic:RSCH:FOFFset	469
:REVerse:RC12:TRAFfic:RSCH:POWer	470
:REVerse:RC12:TRAFfic:RSCH:RATE	470
:REVerse:RC12:TRAFfic:RSCH:RCONfig	470
:REVerse:RC12:TRAFfic:RSCH[:STATe]	471
:REVerse:RC34:CCONtrol:RCCCh:DATA	471
:REVerse:RC34:CCONtrol:RCCCh:DATA:FIX4	471
:REVerse:RC34:CCONtrol:RCCCh:EBNO	472
:REVerse:RC34:CCONtrol:RCCCh:FLENgth	472
:REVerse:RC34:CCONtrol:RCCCh:FOFFset	472
:REVerse:RC34:CCONtrol:RCCCh:POWer	473
:REVerse:RC34:CCONtrol:RCCCh:RCONfig	473
:REVerse:RC34:CCONtrol:RCCCh:RATE	474
:REVerse:RC34:CCONtrol:RCCCh:WALSh	474
:REVerse:RC34:CCONtrol:RCCCh[:STATe]	474
:REVerse:RC34:CCONtrol:RPICH:ECNO	474
:REVerse:RC34:CCONtrol:RPICH:GRATe	475
:REVerse:RC34:CCONtrol:RPICH:POWer	475
:REVerse:RC34:CCONtrol:RPICH:WALSh	476
:REVerse:RC34:CCONtrol:RPICH[:STATe]	476
:REVerse:RC34:EACCess:REACH:DATA	476
:REVerse:RC34:EACCess:REACH:DATA:FIX4	477
:REVerse:RC34:EACCess:REACH:EBNO	477
:REVerse:RC34:EACCess:REACH:FOFFset	478
:REVerse:RC34:EACCess:REACH:POWer	478
:REVerse:RC34:EACCess:REACH:RCONfig	478
:REVerse:RC34:EACCess:REACH:RATE	479
:REVerse:RC34:EACCess:REACH:WALSh	479
:REVerse:RC34:EACCess:REACH[:STATe]	479
:REVerse:RC34:EACCess:RPICH:ECNO	480
:REVerse:RC34:EACCess:RPICH:GRATe	480
:REVerse:RC34:EACCess:RPICH:POWer	481
:REVerse:RC34:EACCess:RPICH:WALSh	481
:REVerse:RC34:EACCess:RPICH[:STATe]	481
:REVerse:RC34:TRAFfic:RDCCh:DATA	482

Contents

:REVerse:RC34:TRAFfic:RDCCh:DATA:FIX4	482
:REVerse:RC34:TRAFfic:RDCCh:EBNO	482
:REVerse:RC34:TRAFfic:RDCCh:FLENgth	483
:REVerse:RC34:TRAFfic:RDCCh:FOFFset	483
:REVerse:RC34:TRAFfic:RDCCh:POWer	484
:REVerse:RC34:TRAFfic:RDCCh:RATE	484
:REVerse:RC34:TRAFfic:RDDCh:RCONfig	484
:REVerse:RC34:TRAFfic:RDCCh:WALSh	485
:REVerse:RC34:TRAFfic:RDCCh[:STATe]	485
:REVerse:RC34:TRAFfic:RFCH:DATA	485
:REVerse:RC34:TRAFfic:RFCH:DATA:FIX4	486
:REVerse:RC34:TRAFfic:RFCH:EBNO	486
:REVerse:RC34:TRAFfic:RFCH:FLENgth	487
:REVerse:RC34:TRAFfic:RFCH:FOFFset	487
:REVerse:RC34:TRAFfic:RFCH:POWer	487
:REVerse:RC34:TRAFfic:RFCH:RCONfig	488
:REVerse:RC34:TRAFfic:RFCH:RATE	488
:REVerse:RC34:TRAFfic:RFCH:WALSh	488
:REVerse:RC34:TRAFfic:RFCH[:STATe]	489
:REVerse:RC34:TRAFfic:RSCH[1]2:DATA	489
:REVerse:RC34:TRAFfic:RSCH[1]2:DATA:FIX4	489
:REVerse:RC34:TRAFfic:RSCH[1]2:DATA:EBNO	490
:REVerse:RC34:TRAFfic:RSCH[1]2:FLENgth	490
:REVerse:RC34:TRAFfic:RSCH[1]2:FOFFset	490
:REVerse:RC34:TRAFfic:RSCH[1]2:POWer	491
:REVerse:RC34:TRAFfic:RSCH[1]2:RCONfig	491
:REVerse:RC34:TRAFfic:RSCH[1]2:RATE	492
:REVerse:RC34:TRAFfic:RSCH[1]2:TCODE	492
:REVerse:RC34:TRAFfic:RSCH[1]2:WALSh	492
:REVerse:RC34:TRAFfic:RSCH[1]2[:STATe]	493
:REVerse:REFeRence:EXTeRnal:FREQuency	493
:REVerse:REFeRence[:SOURce]	493
:REVerse:TADVance	494
:REVerse:TEDGE	494
:REVerse:SRATE	495
[:STATe]	495
Custom Subsystem–Option 001/601 or 002/602 ([:SOURce]:RADio:CUSTom)	496
:ALPha	496

:BBCLock	496
:BBT	497
:BRATe	497
:BURSt:SHAPe:FALL:DELay	498
:BURSt:SHAPe:FALL:TIME	499
:BURSt:SHAPe:FDELay	499
:BURSt:SHAPe:FTIME	500
:BURSt:SHAPe:RDELay	500
:BURSt:SHAPe:RISE:DELay	501
:BURSt:SHAPe:RISE:TIME	501
:BURSt:SHAPe:RTIME	502
:BURSt:SHAPe[:TYPE]	502
:CHANnel	503
:DATA	503
:DATA:FIX4	504
:DENCode	504
:EDATa:DELay	504
:EDCLock	505
:EREFerence	505
:EREFerence:VALue	506
:FILTer	506
:IQ:SCALE	507
:MODulation:FSK[:DEViation]	507
:MODulation:MSK[:PHASe]	508
:MODulation:UFSK	508
:MODulation:UIQ	509
:MODulation[:TYPE]	509
:POLarity[:ALL]	509
:SRATe	510
:STANdard:SELEct	511
:TRIGger:TYPE	512
:TRIGger:TYPE:CONTInuous[:TYPE]	512
:TRIGger:TYPE:GATE:ACTive	513
:TRIGger[:SOURce]	513
:TRIGger[:SOURce]:EXTErnal[:SOURce]	514
:TRIGger[:SOURce]:EXTErnal:DELay	514
:TRIGger[:SOURce]:EXTErnal:DELay:STATe	515
:TRIGger[:SOURce]:EXTErnal:SLOPe	515

Contents

[:STATe]	515
DECT Subsystem–Option 402 ([:SOURce]:RADio:DECT)	517
:ALPha	517
:BBCLock	517
:BBT	518
:BRATe	518
:BURSt:PN9	519
:BURSt:SHAPe:FALL:DELay	520
:BURSt:SHAPe:FALL:TIME	520
:BURSt:SHAPe:FDELay	521
:BURSt:SHAPe:FTIME	521
:BURSt:SHAPe:RDELay	522
:BURSt:SHAPe:RISE:DELay	522
:BURSt:SHAPe:RISE:TIME	523
:BURSt:SHAPe:RTIME	523
:BURSt:SHAPe[:TYPE]	524
:BURSt[:STATe]	524
:CHANnel	525
:DATA	525
:DATA:FIX4	526
:DEFault	526
:EDATa:DELay	526
:EDCLock	527
:EREFerence	527
:EREFerence:VALue	528
:FILTer	528
:IQ:SCALe	529
:MODulation:FSK[:DEViation]	529
:MODulation:MSK[:PHASe]	530
:MODulation:UFSK	530
:MODulation:UIQ	531
:MODulation[:TYPE]	531
:POLarity[:ALL]	531
:PPart:SLOT0 [1] 2 3 4[:TYPE]	532
:PPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:CUSTom	532
:PPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:CUSTom:FIX4	533
:PPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:LCAPacity:A	533
:PPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:LCAPacity:P	533

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:LCAPacity:S 534

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:LCAPacity[:B] 534

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:LCAPacity[:B]:FIX4 535

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:LCAPacity:POWer 535

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:STATe 536

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:TRAFfic:A 536

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:TRAFfic:P 536

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:TRAFfic:S 537

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:TRAFfic[:B] 537

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:TRAFfic[:B]:FIX4 537

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:ZLCapacity:A 538

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:ZLCapacity:P 538

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:ZLCapacity:A 539

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:ZLCapacity[:B] 539

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:ZLCapacity[:B]:FIX4 539

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:ZTRAffic:A 540

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:ZTRAffic:P 540

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:ZTRAffic:S 541

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:ZTRAffic[:B] 541

:PPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:ZTRAffic[:B]:FIX4 541

:RFPart:SLOT0|[1]|2|3|4[:TYPE] 542

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:CUSTom 542

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:CUSTom:FIX4 543

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:DUMM2:A 543

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:DUMM2:P 543

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:DUMM2:S 544

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:DUMM[1]:A 544

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:DUMM[1]:P 545

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:DUMM[1]:S 545

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:LCAPacity:A 545

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:LCAPacity:P 546

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:LCAPacity:S 546

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:LCAPacity[:B] 546

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:LCAPacity[:B]:FIX4 547

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:LCAPacity:POWer 547

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:STATe 548

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:TRAFfic:A 548

:RFPart:SLOT0|[1]|2|3|4|5|6|7|8|9|10|11:TRAFfic:P 548

Contents

:RFPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:TRAFfic:S	549
:RFPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:TRAFfic[:B]	549
:RFPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:TRAFfic[:B]:FIX4	549
:RFPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:ZLCapacity:A	550
:RFPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:ZLCapacity:P	550
:RFPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:ZLCapacity:S	551
:RFPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:ZLCapacity[:B]	551
:RFPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:ZLCapacity[:B]:FIX4	552
:RFPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:ZTRAffic:A	552
:RFPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:ZTRAffic:P	552
:RFPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:ZTRAffic:S	553
:RFPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:ZTRAffic[:B]	553
:RFPart:SLOT0 [1] 2 3 4 5 6 7 8 9 10 11:ZTRAffic[:B]:FIX4	554
:SECondary:RECall	554
:SECondary:SAVE	554
:SECondary:TRIGger[:SOURce]	555
:SECondary[:STATE]	555
:SOUT	556
:SOUT:OFFSet	556
:SOUT:SLOT	557
:SRATe	557
:TRIGger:TYPE	558
:TRIGger:TYPE:CONTInuous[:TYPE]	559
:TRIGger:TYPE:GATE:ACTive	559
:TRIGger[:SOURce]	560
:TRIGger[:SOURce]:EXTernal[:SOURce]	560
:TRIGger[:SOURce]:EXTernal:DELay	561
:TRIGger[:SOURce]:EXTernal:SLOPe	561
:TRIGger[:SOURce]:EXTernal:DELay:STATe	562
[:STATE]	562
EDGE Subsystem–Option 402 ([:SOURce]:RADio:EDGE)	563
:ALPHa	563
:BBCLock	563
:BBT	564
:BURSt:SHAPe:FALL:DELay	564
:BURSt:SHAPe:FDELay	565
:BURSt:SHAPe:FALL:TIME	565
:BURSt:SHAPe:FTIME	566

:BURSt:SHAPE:RDElay	566
:BURSt:SHAPE:RISE:DElay	567
:BURSt:SHAPE:RISE:TIME	568
:BURSt:SHAPE:RTIME	568
:BURSt:SHAPE[:TYPE]	569
:BURSt[:STATe]	569
:CHANnel	570
:DATA	570
:DATA:FIX4	571
:DEFault	571
:EDATa:DElay	571
:EDCLock	572
:EREFerence	572
:EREFerence:VALue	573
:FILTer	573
:IQ:SCALE	574
:MODulation:FSK[:DEViation]	574
:MODulation:MSK[:PHASe]	575
:MODulation:UFSK	575
:MODulation:UIQ	576
:MODulation[:TYPE]	576
:POLarity[:ALL]	576
:SECondary:RECall	577
:SECondary:SAVE	577
:SECondary:TRIGger[:SOURce]	578
:SECondary[:STATe]	578
:SLOT0[1]2 3 4 5 6 7:CUSTom	578
:SLOT0[1]2 3 4 5 6 7:CUSTom:FIX4	579
:SLOT0[1]2 3 4 5 6 7:CUSTom:GUARd	579
:SLOT0[1]2 3 4 5 6 7:GMSK:ENCryption	580
:SLOT0[1]2 3 4 5 6 7:GMSK:ENCryption:CS1:DATA	581
:SLOT0[1]2 3 4 5 6 7:GMSK:ENCryption:CS4:DATA	582
:SLOT0[1]2 3 4 5 6 7:GMSK:ENCryption:DLINK:MCS1:DATA	582
:SLOT0[1]2 3 4 5 6 7:GMSK:ENCryption:FIX4	582
:SLOT0[1]2 3 4 5 6 7:GMSK:ENCryption:TCH:FS:DATA	583
:SLOT0[1]2 3 4 5 6 7:GMSK:ENCryption:ULINK:MCS1:DATA	583
:SLOT0[1]2 3 4 5 6 7:GMSK:STEal	584
:SLOT0[1]2 3 4 5 6 7:GMSK:TSEQuence	584

Contents

:SLOT0[1]2 3 4 5 6 7:MULTIslot	585
:SLOT0[1]2 3 4 5 6 7:NORMAl:ENCryption	585
:SLOT0:NORMAl:ENCryption:BCH:BCC	588
:SLOT0:NORMAl:ENCryption:BCH:CELLId	588
:SLOT0:NORMAl:ENCryption:BCH:LAC	588
:SLOT0:NORMAl:ENCryption:BCH:MCC	589
:SLOT0:NORMAl:ENCryption:BCH:MNC	589
:SLOT0:NORMAl:ENCryption:BCH:PLMN	589
:SLOT0[1]2 3 4 5 6 7:NORMAl:ENCryption:DLINK:MCS5:DATA	590
:SLOT0[1]2 3 4 5 6 7:NORMAl:ENCryption:DLINK:MCS9:DATA	590
:SLOT0[1]2 3 4 5 6 7:NORMAl:ENCryption:ETCH:F43:DATA	590
:SLOT0[1]2 3 4 5 6 7:NORMAl:ENCryption:FIX4	591
:SLOT0[1]2 3 4 5 6 7:NORMAl:ENCryption:ULINK:MCS5:DATA	591
:SLOT0[1]2 3 4 5 6 7:NORMAl:ENCryption:ULINK:MCS9:DATA	592
:SLOT0[1]2 3 4 5 6 7:NORMAl:ENCryption:UNCoded	592
:SLOT0[1]2 3 4 5 6 7:NORMAl:GUARd.	592
:SLOT0[1]2 3 4 5 6 7:NORMAl:T1	593
:SLOT0[1]2 3 4 5 6 7:NORMAl:T2	593
:SLOT0[1]2 3 4 5 6 7:NORMAl:TSEquence.	594
:SLOT0[1]2 3 4 5 6 7:LCAPacity:POWer	594
:SLOT0[1]2 3 4 5 6 7:STATe	594
:SLOT0[1]2 3 4 5 6 7[:TYPE]	595
:SOUT:	595
:SOUT:OFFSet	596
:SOUT:SLOT	596
:SRATe	597
:TRIGger:TYPE	598
:TRIGger:TYPE:CONTInuous[:TYPE]	598
:TRIGger:TYPE:GATE:ACTive.	599
:TRIGger[:SOURce].	599
:TRIGger[:SOURce]:EXTernal[:SOURce]	600
:TRIGger[:SOURce]:EXTernal:DELay	600
:TRIGger[:SOURce]:EXTernal:DELay:FINe	601
:TRIGger[:SOURce]:EXTernal:DELay:STATe	601
:TRIGger[:SOURce]:EXTernal:SLOPe	602
[:STATe]	602

SCPI Command Reference, Volume 3

8. Receiver Test Digital Commands (continued)	603
GPS Subsystem–Option409	
([:SOURCE]:RADio[1] 2 3 4:GPS)	604
:DATA	604
:DMODE	604
:DSHift	605
:FILTer	605
:FILTer:ALPHa	606
:FILTer:BBT	606
:FILTer:CHANnel	607
:IQPHase	607
:PCODE	608
:RCODE	608
:REFClk	608
:REFFreq	609
:SATid	609
[:STATE]	610
GSM Subsystem–Option 402 ([:SOURCE]:RADio:GSM)	611
:ALPha	611
:BBCLock	611
:BBT	612
:BRATe	612
:BURSt:PN9	613
:BURSt:SHAPe:FALL:DELay	614
:BURSt:SHAPe:FALL:TIME	614
:BURSt:SHAPe:FDELay	615
:BURSt:SHAPe:FTIME	616
:BURSt:SHAPe:RDELay	616
:BURSt:SHAPe:RISE:DELay	617
:BURSt:SHAPe:RISE:TIME	617
:BURSt:SHAPe:RTIME	618
:BURSt:SHAPe[:TYPE]	619
:BURSt[:STATE]	619
:CHANnel	620
:DATA	620
:DATA:FIX4	620

Contents

:DEFault	621
:DENCode	621
:EDATa:DELay	621
:EDCLock	622
:EREFerence	622
:EREFerence:VALue	623
:FILTer	623
:IQ:SCALe	624
:MODulation:FSK[:DEViation]	624
:MODulation:MSK[:PHASe]	625
:MODulation:UFSK	625
:MODulation:UIQ	626
:MODulation[:TYPE]	626
:POLarity[:ALL]	627
:SECondary:RECall	627
:SECondary:SAVE	627
:SECondary:TRIGger[:SOURce]	628
:SECondary[:STATe]	628
:SLOT0[1]2 3 4 5 6 7:ACCess:ENCRyption	628
:SLOT0[1]2 3 4 5 6 7:ACCess:ENCRyption:FIX4	629
:SLOT0[1]2 3 4 5 6 7:ACCess:ETAil	629
:SLOT0[1]2 3 4 5 6 7:ACCess:SSEQuence	630
:SLOT0[1]2 3 4 5 6 7:ACCess:CUSTom	630
:SLOT0[1]2 3 4 5 6 7:CUSTom:FIX4	630
:SLOT0[1]2 3 4 5 6 7:DUMMy:TSEQuence	631
:SLOT0[1]2 3 4 5 6 7:MULTIslot	631
:SLOT0[1]2 3 4 5 6 7:NORMal:ENCRyption	631
:SLOT0:NORMal:ENCRyption:BCH:BCC	633
:SLOT0:NORMal:ENCRyption:BCH:CELLid	634
:SLOT0:NORMal:ENCRyption:BCH:LAC	634
:SLOT0:NORMal:ENCRyption:BCH:MCC	634
:SLOT0:NORMal:ENCRyption:BCH:MNC	635
:SLOT0:NORMal:ENCRyption:BCH:PLMN	635
:SLOT0[1]2 3 4 5 6 7:NORMal:ENCRyption:CS1:DATA	635
:SLOT0[1]2 3 4 5 6 7:NORMal:ENCRyption:CS4:DATA	636
:SLOT0[1]2 3 4 5 6 7:NORMal:ENCRyption:DLINK:MCS1:DATA	636
:SLOT0[1]2 3 4 5 6 7:NORMal:ENCRyption:FIX4	636
:SLOT0[1]2 3 4 5 6 7:NORMal:ENCRyption:TCH:FS:DATA	637

:SLOT0[1]2 3 4 5 6 7:NORMAl:ENCRYption:ULINK:MCS1:DATA	637
:SLOT0[1]2 3 4 5 6 7:NORMAl:STeal	637
:SLOT0[1]2 3 4 5 6 7:NORMAl:TSEquence	638
:SLOT0[1]2 3 4 5 6 7:POWer	638
:SLOT0[1]2 3 4 5 6 7:STATe	638
:SLOT0[1]2 3 4 5 6 7:SYNC:ENCRYption	639
:SLOT0[1]2 3 4 5 6 7:SYNC:ENCRYption:FIX4	639
:SLOT0[1]2 3 4 5 6 7:SYNC:TSEquence	639
:SLOT0[1]2 3 4 5 6 7[:TYPE]	640
:SOUT	640
:SOUT:OFFSet	641
:SOUT:SLOT	641
:SRATe	642
:TRIGger:EXTeRnal:DELay	643
:TRIGger:TYPE	643
:TRIGger:TYPE:CONTInuous[:TYPE]	644
:TRIGger:TYPE:GATE:ACTive	644
:TRIGger[:SOURce]	645
:TRIGger[:SOURce]:EXTeRnal[:SOURce]	645
:TRIGger[:SOURce]:EXTeRnal:DELay	646
:TRIGger[:SOURce]:EXTeRnal:DELay:FINe	646
:TRIGger[:SOURce]:EXTeRnal:DELay:STATe	647
:TRIGger[:SOURce]:EXTeRnal:SLOPe	647
[:STATe]	647
HSDPA over W-CDMA Subsystem–Option 418 ([:SOURce]:RADio:WCDMa:HSDPa[:BBG])	648
File Overview	648
Managing ESG Setting Conflicts and Error Messages	650
:DLINK:APPLY	650
:DLINK:AWGN:CN	650
:DLINK:AWGN[:STATe]	651
:DLINK:BBCLock[:SOURce]	651
:DLINK:CPICH:CCODE	651
:DLINK:CPICH:POWer	652
:DLINK:CPICH[:STATe]	652
:DLINK:DPCH:CCODE	652
:DLINK:DPCH:DATA	653
:DLINK:DPCH:DATA:FIX4	653
:DLINK:DPCH:DCH[1]2 3 4 5 6:BSIZe	653

Contents

:DLINK:DPCH:DCH[1] 2 3 4 5 6:CTYPe.	654
:DLINK:DPCH:DCH[1] 2 3 4 5 6:CRC.	654
:DLINK:DPCH:DCH[1] 2 3 4 5 6:DATA	655
:DLINK:DPCH:DCH[1] 2 3 4 5 6:DATA:FIX4.	655
:DLINK:DPCH:DCH[1] 2 3 4 5 6:NBLocks	655
:DLINK:DPCH:DCH[1] 2 3 4 5 6:RMATtribute	656
:DLINK:DPCH:DCH[1] 2 3 4 5 6:TTI	656
:DLINK:DPCH:DCH2 3 4 5 6[:STATe].	657
:DLINK:DPCH:POWer	657
:DLINK:DPCH:SFORmat	657
:DLINK:DPCH:SSCOffset	658
:DLINK:DPCH:TFCI	658
:DLINK:DPCH:TOFFset.	658
:DLINK:DPCH:TPC:NSTeps	659
:DLINK:DPCH:TPC:PATtern	659
:DLINK:DPCH:TRPosition.	660
:DLINK:DPCH[:STATe]	660
:DLINK:FILTer	660
:DLINK:FILTer:ALPHa	661
:DLINK:FILTer:BBT	661
:DLINK:FILTer:CHANnel	662
:DLINK:HSBurst.	662
:DLINK:HSDPa:AMC:CQIMapping:UECategory	663
:DLINK:HSDPa:AMC:CPATtern	663
:DLINK:HSDPa:FCONtrol	664
:DLINK:HSDPa:HARQ:APATtern	664
:DLINK:HSDPa:HARQ:MNHTrans.	665
:DLINK:HSDPa:HARQ:RVSequence[1] 2 3 4 5 6 7 8	666
:DLINK:HSDPa[1] 2 3 4:BSINfo	666
:DLINK:HSDPa[1] 2 3 4:HSPDSch:COFFset	667
:DLINK:HSDPa[1] 2 3 4:HSPDSch:DATA	667
:DLINK:HSDPa[1] 2 3 4:HSPDSch:DATA:FIX4	668
:DLINK:HSDPa:HSPDSch:DSCH:DATA	668
:DLINK:HSDPa:HSPDSch:DSCH:DATA:FIX4.	668
:DLINK:HSDPa:HSPDSch:DSCH:IRBSize	669
:DLINK:HSDPa:HSPDSch:NCODe	669
:DLINK:HSDPa[1] 2 3 4:HSPDSch:POWer	670
:DLINK:HSDPa[1] 2 3 4:HSPDSch:SFORmat	670

:DLINK:HSDPa[1] 2 3 4:HSPDsch[:STATe]	670
:DLINK:HSDPa[1] 2 3 4:HSSCch:CCODE	671
:DLINK:HSDPa[1] 2 3 4:HSSCch:DATA	671
:DLINK:HSDPa[1] 2 3 4:HSSCch:DATA:FIX4	672
:DLINK:HSDPa[1] 2 3 4:HSSCch:POWer	672
:DLINK:HSDPa[1] 2 3 4:ITTI	672
:DLINK:HSDPa:NHPRocess.	673
:DLINK:HSDPa[1] 2 3 4:RVParameter	673
:DLINK:HSDPa[1] 2 3 4:UEID	673
:DLINK:HSDPa[1] 2 3 4[:STATe]	674
:DLINK:OCNS[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:CCODE	674
:DLINK:OCNS[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:DATA	675
:DLINK:OCNS[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:POWer	675
:DLINK:OCNS[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:SSCOffset	675
:DLINK:OCNS[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:TOFFset.	676
:DLINK:OCNS[1] 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16[:STATe]	676
:DLINK:PCCPch:BCH:DATA	677
:DLINK:PCCPch:BCH:DATA:FIX4	677
:DLINK:PCCPch:CCODE	677
:DLINK:PCCPch:POWer	678
:DLINK:PCCPch[:STATe]	678
:DLINK:PICH:CCODE	678
:DLINK:PICH:DATA	679
:DLINK:PICH:DATA:FIX4	679
:DLINK:PICH:POWer	680
:DLINK:PICH[:STATe]	680
:DLINK:POLarity	680
:DLINK:PSCH:POWer	681
:DLINK:PSCH[:STATe]	681
:DLINK:SCRamblecode	681
:DLINK:SSCH:POWer	682
:DLINK:SSCH[:STATe]	682
:DLINK:TXDiversity	682
:LINK	683
:ULINK:APPLY	683
:ULINK:AWGN:CN	683
:ULINK:AWGN[:STATe]	684
:ULINK:BBReference:EXternal:MRATE	684

Contents

:ULINK:BBReference[:SOURce]	684
:ULINK:DPCCh:CCODE	685
:ULINK:DPCCh:DATA	685
:ULINK:DPCCh:DATA:FIX4	685
:ULINK:DPCCh:FBI:PATtern	686
:ULINK:DPCCh:FBI:PATtern:FIX	686
:ULINK:DPCCh:POWer	686
:ULINK:DPCCh:SFORmat	687
:ULINK:DPCCh[:STATe]	687
:ULINK:DPCCh:TFCI	687
:ULINK:DPCCh:TPC:NSTeps	688
:ULINK:DPCCh:TPC:PATtern	688
:ULINK:DPDCh:CCODE	689
:ULINK:DPDCh:DATA	689
:ULINK:DPDCh:DATA:FIX4	690
:ULINK:DPDCh:DCH[1] 2 3 4 5 6:BSIZE	690
:ULINK:DPDCh:DCH[1] 2 3 4 5 6:CRC	690
:ULINK:DPDCh:DCH[1] 2 3 4 5 6:CTYPe	691
:ULINK:DPDCh:DCH[1] 2 3 4 5 6:DATA	691
:ULINK:DPDCh:DCH[1] 2 3 4 5 6:DATA:FIX4	692
:ULINK:DPDCh:DCH[1] 2 3 4 5 6:NBLocks	692
:ULINK:DPDCh:DCH[1] 2 3 4 5 6:RMATtribute	692
:ULINK:DPDCh:DCH[1] 2 3 4 5 6:TTI	693
:ULINK:DPDCh:DCH2 3 4 5 6[:STATe]	693
:ULINK:DPDCh:POWer	694
:ULINK:DPDCh:SFORmat	694
:ULINK:DPDCh[:STATe]	694
:ULINK:FCLock:INTerval	695
:ULINK:FCLock:POLarity	695
:ULINK:FILTer	695
ULINK:FILTer:ALPHa	696
:ULINK:FILTer:BBT	696
:ULINK:FILTer:CHANnel	697
:ULINK:FOFFset	697
:ULINK:HSDPcch:APATtern	698
:ULINK:HSDPcch:APOWer	698
:ULINK:HSDPcch:CCODE	699
:ULINK:HSDPcch:CPATtern	699

:ULINK:HSDPcch:CPOWer	699
:ULINK:HSDPcch:NPOWer	700
:ULINK:HSDPcch:SFDelay	700
:ULINK:HSDPcch[:STATe]	700
:ULINK:POLarity	701
:ULINK:SCRamblecode	701
:ULINK:SDElay	701
:ULINK:SFNRst:POLarity	702
:ULINK:SYNC:MODE	702
:ULINK:SYNC[:SOURce]	702
:ULINK:TOFFset	703
[:STATe]	703
NADC Subsystem–Option 402 ([:SOURce]:RADio[:NADC])	704
:ALPha	704
:BBClock	704
:BBT	705
:BRATe	705
:BURSt:PN9	706
:BURSt:SHApe[:TYPE]	707
:BURSt:SHApe:FALL:DElay	707
:BURSt:SHApe:FALL:TIME	708
:BURSt:SHApe:FDElay	708
:BURSt:SHApe:FTIME	709
:BURSt:SHApe:RDElay	709
:BURSt:SHApe:RISE:DElay	710
:BURSt:SHApe:RISE:TIME	711
:BURSt:SHApe:RTIME	711
:BURSt[:STATe]	712
:BURSt:SHApe[:TYPE]	712
:CHANnel	713
:DATA	713
:DATA:FIX4	714
:DEFault	714
:EDATa:DElay	714
:EDCLock	715
:EREFerence	715
:EREFerence:VALue	716
:FILTer	716

Contents

:FRATe	717
:IQ:SCALe	717
:MODulation:FSK[:DEViation]	718
:MODulation:MSK[:PHASe]	718
:MODulation:UFSK	719
:MODulation:UIQ	719
:MODulation[:TYPE]	719
:REPeat	720
:POLarity[:ALL]	720
:SECondary:RECall	721
:SECondary:SAVE	721
:SECondary:TRIGger[:SOURce]	721
:SECondary[:STATe]	722
:SLOT[1] 2 3 4 5 6:DCUStom	722
:SLOT[1] 2 3 4 5 6:DCUStom:FIX4	723
:SLOT[1] 2 3 4 5 6:DTCHannel:CDLocator	723
:SLOT[1] 2 3 4 5 6:DTCHannel:CDVCcode	723
:SLOT[1] 2 3 4 5 6:DTCHannel:SACChannel	724
:SLOT[1] 2 3 4 5 6:DTCHannel:SWORd	724
:SLOT[1] 2 3 4 5 6:DTCHannel[:DATA]	724
:SLOT[1] 2 3 4 5 6:DTCHannel[:DATA]FIX4	725
:SLOT[1] 2 3 4 5 6:POWer	725
:SLOT[1] 2 3 4 5 6:STATe	726
:SLOT[1] 2 3 4 5 6:UCUStom	726
:SLOT[1] 2 3 4 5 6:UCUStom:FIX4	726
:SLOT[1] 2 3 4 5 6:UTCHannel:CDVCcode	727
:SLOT[1] 2 3 4 5 6:UTCHannel:SACChannel	727
:SLOT[1] 2 3 4 5 6:UTCHannel:SWORd	727
:SLOT[1] 2 3 4 5 6:UTCHannel[:DATA]	728
:SLOT[1] 2 3 4 5 6:UTCHannel[:DATA]:FIX4	728
:SLOT[1] 2 3 4 5 6[:TYPE]	729
:SOUT	729
:SOUT:OFFSet	729
:SOUT:SLOT	730
:SRATe	730
:TRIGger[:SOURce]	732
:TRIGger:TYPE	732
:TRIGger:TYPE:CONTInuous[:TYPE]	733

:TRIGger:TYPE:GATE:ACTive	733
:TRIGger[:SOURce]:EXTernal[:SOURce]	734
:TRIGger[:SOURce]:EXTernal:DELay	734
:TRIGger[:SOURce]:EXTernal:DELay:STATe	735
:TRIGger[:SOURce]:EXTernal:SLOPe	735
[:STATe]	735
PDC Subsystem–Option 402 ([:SOURce]:RADio:PDC)	736
:ALPha	736
:BBCLock	736
:BBT	737
:BRATe	737
:BURSt:PN9	738
:BURSt:SHAPE:FALL:DELay	739
:BURSt:SHAPE:FALL:TIME	739
:BURSt:SHAPE:FDELay	740
:BURSt:SHAPE:FTIME	740
:BURSt:SHAPE:RDELay	741
:BURSt:SHAPE:RISE:DELay	742
:BURSt:SHAPE:RISE:TIME	742
:BURSt:SHAPE:RTIME	743
:BURSt:SHAPE[:TYPE]	743
:BURSt[:STATe]	744
:CHANnel	744
:DATA	745
:DATA:FIX4	745
:DEFault	746
:EDATa:DELay	746
:EDCLock	746
:EREFerence	747
:EREFerence:VALue	747
:FILTer	748
:FRATe	748
:IQ:SCALE	749
:MODulation:FSK[:DEViation]	749
:MODulation:MSK[:PHASe]	750
:MODulation:UFSK	750
:MODulation:UIQ	751
:MODulation[:TYPE]	751

Contents

:POLarity[:ALL].	751
:SECondary:RECall	752
:SECondary:SAVE	752
:SECondary:TRIGger[:SOURce]	753
:SECondary[:STATe]	753
:SLOT0 [1] 2 3 4 5:DCUStom.	753
:SLOT0 [1] 2 3 4 5:DCUSTom:FIX4	754
:SLOT0 [1] 2 3 4 5:DTCHannel:CCODe	754
:SLOT0 [1] 2 3 4 5:DTCHannel:SACChannel	755
:SLOT0 [1] 2 3 4 5:DTCHannel:SWORd	755
:SLOT0 [1] 2 3 4 5:DTCHannel[:TCHannel]	755
:SLOT0 [1] 2 3 4 5:DTCHannel[:TCHannel]:FIX4	756
:SLOT0 [1] 2 3 4:POWer.	756
:SLOT0 [1] 2 3 4 5:STATe.	756
:SLOT0 [1] 2 3 4 5:UCUStom.	757
:SLOT0 [1] 2 3 4 5:UCUStom:FIX4	757
:SLOT0 [1] 2 3 4 5:UTCHannel:CCODe	757
:SLOT0 [1] 2 3 4 5:UTCHannel:SACChannel	758
:SLOT0 [1] 2 3 4 5:UTCHannel:SWORd	758
:SLOT0 [1] 2 3 4 5:UTCHannel[:TCHannel]	758
:SLOT0 [1] 2 3 4 5:UTCHannel[:TCHannel]:FIX4	759
:SLOT0 [1] 2 3 4 5:UVOX:CCODe	759
:SLOT0 [1] 2 3 4 5:UVOX:SACChannel	760
:SLOT0 [1] 2 3 4 5:UVOX:SWORd	760
:SLOT0 [1] 2 3 4 5[:TYPE].	760
:SOUT.	761
:SOUT:OFFSet	761
:SOUT:SLOT	762
:SRATe	762
:TRIGger:TYPE	764
:TRIGger:TYPE:CONTinuous[:TYPE]	764
:TRIGger:TYPE:GATE:ACTive.	765
:TRIGger[:SOURce].	765
:TRIGger[:SOURce]:EXTernal[:SOURce]	765
:TRIGger[:SOURce]:EXTernal:DELay	766
:TRIGger[:SOURce]:EXTernal:DELay:STATe	767
:TRIGger[:SOURce]:EXTernal:SLOPe	767
[:STATe]	767

PHS Subsystem–Option 402 ([:SOURce]:RADio:PHS)	768
:ALPha	768
:BBCLock	768
:BBT	769
:BRATe	769
:BURSt:PN9	770
:BURSt:SCRamble:SEED	771
:BURSt:SCRamble[:STATe]	771
:BURSt:SHAPE:FALL:DELay	771
:BURSt:SHAPE:FALL:TIME	772
:BURSt:SHAPE:FDELay	773
:BURSt:SHAPE:FTIME	773
:BURSt:SHAPE:RDELay	774
:BURSt:SHAPE:RISE:DELay	774
:BURSt:SHAPE:RISE:TIME	775
:BURSt:SHAPE:RTIME	775
:BURSt:SHAPE[:TYPE]	776
:BURSt[:STATe]	776
:CHANnel	777
:DATA	777
:DATA:FIX4	778
:DEFault	778
:DLINK:SLOT[1] 2 3 4:CUSTom	778
:DLINK:SLOT[1] 2 3 4:CUSTom:FIX4	779
:DLINK:SLOT[1] 2 3 4:POWer	779
:DLINK:SLOT[1] 2 3 4:SCHannel:CSID	780
:DLINK:SLOT[1] 2 3 4:SCHannel:IDLE	780
:DLINK:SLOT[1] 2 3 4:SCHannel:PSID	780
:DLINK:SLOT[1] 2 3 4:SCHannel:UWORD	781
:DLINK:SLOT[1] 2 3 4:STATe	781
:DLINK:SLOT[1] 2 3 4:TCHannel:SACChannel	781
:DLINK:SLOT[1] 2 3 4:TCHannel:UWORD	782
:DLINK:SLOT[1] 2 3 4:TCHannel[:TCHannel]	782
:DLINK:SLOT[1] 2 3 4:TCHannel[:TCHannel]:FIX4	783
:DLINK:SLOT[1] 2 3 4[:TYPE]	783
:EDATa:DELay	783
:EDCLock	784
:EREFerence	784

Contents

:EReFereNce:VALue	784
:FILTer	785
:IQ:SCALe	786
:MODulation:FSK[:DEVIation]	786
:MODulation:MSK[:PHASe]	787
:MODulation:UFSK	787
:MODulation:UIQ	787
:MODulation[:TYPE]	788
:POLarity[:ALL]	788
:SECOndary:RECall	789
:SECOndary:SAVE	789
:SECOndary:TRIGger[:SOURce]	789
:SECOndary[:STATe]	790
:SOUT	790
:SOUT:OFFSet	791
:SOUT:SLOT	791
:SRATe	792
:TRIGger:TYPE	793
:TRIGger:TYPE:CONTInuous[:TYPE]	793
:TRIGger:TYPE:GATE:ACTive	794
:TRIGger[:SOURce]	794
:TRIGger[:SOURce]:EXTernal[:SOURce]	795
:TRIGger[:SOURce]:EXTernal:DELay	795
:TRIGger[:SOURce]:EXTernal:DELay:STATe	796
:TRIGger[:SOURce]:EXTernal:SLOPe	796
:ULINK:SLOT[1] 2 3 4:CUSTom	796
:ULINK:SLOT[1] 2 3 4:CUSTom:FIX4	797
:ULINK:SLOT[1] 2 3 4:POWeR	797
:ULINK:SLOT[1] 2 3 4:SCHannel:CSID	798
:ULINK:SLOT[1] 2 3 4:SCHannel:IDLE	798
:ULINK:SLOT[1] 2 3 4:SCHannel:PSID	798
:ULINK:SLOT[1] 2 3 4:SCHannel:UWORd	799
:ULINK:SLOT[1] 2 3 4:STATe	799
:ULINK:SLOT[1] 2 3 4:TCHannel:SACChannel	799
:ULINK:SLOT[1] 2 3 4:TCHannel:UWORd	800
:ULINK:SLOT[1] 2 3 4:TCHannel[:TCHannel]	800
:ULINK:SLOT[1] 2 3 4:TCHannel[:TCHannel:FIX4]	801
:ULINK:SLOT[1] 2 3 4[:TYPE]	801

[:STATe]	801
TETRA Subsystem–Option 402 ([:SOURce]:RADio:TETRa)	802
:ALPha	802
:BBCLock	802
:BBT	803
:BRATe	803
:BURSt:PN9	804
:BURSt:SCRamble:SEED	805
:BURSt:SCRamble[:STATe]	805
:BURSt:SHAPE:FALL:DELay	806
:BURSt:SHAPE:FALL:TIME	806
:BURSt:SHAPE:FDELay	807
:BURSt:SHAPE:FTIME	807
:BURSt:SHAPE:RDELay	808
:BURSt:SHAPE:RISE:DELay	809
:BURSt:SHAPE:RISE:TIME	809
:BURSt:SHAPE:RTIME	810
:BURSt:SHAPE[:TYPE]	810
:BURSt[:STATe]	811
:CHANnel	811
:DATA	812
:DATA:FIX4	812
:DEFault	813
:EDATa:DELay	813
:EDCLock	813
:EREFerence	814
:EREFerence:VALue	814
:FILTer	815
:IQ:SCALE	816
:MODulation:FSK[:DEViation]	816
:MODulation:MSK[:PHASe]	816
:MODulation:UFSK	817
:MODulation:UIQ	817
:MODulation[:TYPE]	818
:POLarity[:ALL]	818
:SECondary:RECall	819
:SECondary:SAVE	819
:SECondary:TRIGger[:SOURce]	819

Contents

:SECondary[:STATe]	820
:SLOT[1] 2 3 4:DCCustom	820
:SLOT[1] 2 3 4:DCCustom:FIX4	821
:DCNormal:B1	821
:DCNormal:B2	821
:SLOT[1] 2 3 4:DCNormal:TSEquence	822
:SLOT[1] 2 3 4:DCNormal[:DATA]	822
:SLOT[1] 2 3 4:DCNormal[:DATA]:FIX4	822
:SLOT[1] 2 3 4:DCSync:B	823
:SLOT[1] 2 3 4:DCSync:FCOR	823
:SLOT[1] 2 3 4:DCSync:SSB	823
:SLOT[1] 2 3 4:DCSync:STS	824
:SLOT[1] 2 3 4:DCSync[:DATA]	824
:SLOT[1] 2 3 4:DCSync[:DATA]:FIX4	825
:SLOT[1] 2 3 4:DDCustom	825
:SLOT[1] 2 3 4:DDCustom:FIX4	825
:SLOT[1] 2 3 4:DDNormal:B1	826
:SLOT[1] 2 3 4:DDNormal:B2	826
:SLOT[1] 2 3 4:DDNormal:TSEquence	826
:SLOT[1] 2 3 4:DDNormal[:DATA]	827
:SLOT[1] 2 3 4:DDNormal[:DATA]:FIX4	827
:SLOT[1] 2 3 4:DDSync:B	827
:SLOT[1] 2 3 4:DDSync:FCOR	828
:SLOT[1] 2 3 4:DDSync:SSB	828
:SLOT[1] 2 3 4:DDSync:STS	829
:SLOT[1] 2 3 4:DDSync[:DATA]	829
:SLOT[1] 2 3 4:DDSync[:DATA]:FIX4	829
:SLOT[1] 2 3 4:POWer	830
:SLOT[1] 2 3 4:STATe	830
:SLOT[1] 2 3 4:UC1:TSEquence	830
:SLOT[1] 2 3 4:UC1[:DATA]	831
:SLOT[1] 2 3 4:UC1[:DATA]:FIX4	831
:SLOT[1] 2 3 4:UC2:TSEquence	831
:SLOT[1] 2 3 4:UC2[:DATA]	832
:SLOT[1] 2 3 4:UC2[:DATA]:FIX4	832
:SLOT[1] 2 3 4:UCUStom	833
:SLOT[1] 2 3 4:UCUStom:FIX4	833
:SLOT[1] 2 3 4:UNORmal:TSEquence	833

:SLOT[1] 2 3 4:UNORmal[:DATA]	834
:SLOT[1] 2 3 4:UNORmal[:DATA]:FIX4	834
:SLOT[1] 2 3 4[:TYPE]	834
:SOUT	835
:SOUT:OFFSet	836
:SOUT:SLOT	836
:SRATe	837
:TRIGger:TYPE	838
:TRIGger:TYPE:CONTInuous[:TYPE]	838
:TRIGger:TYPE:GATE:ACTive	839
:TRIGger[:SOURce]	839
:TRIGger[:SOURce]:EXTernal[:SOURce]	840
:TRIGger[:SOURce]:EXTernal:DELay	841
:TRIGger[:SOURce]:EXTernal:DELay:STATe	841
:TRIGger[:SOURce]:EXTernal:SLOPe	841
[:STATe]	842
Wideband CDMA Base Band Generator Subsystem–Option 400	
([:SOURce]:RADio:WCDMa:TGPP[:BBG])	843
:BBCLock	843
:BBCLock:EXT:RATE	843
:DLINK:APPLy	843
:DLINK:AWGN:CN	844
:DLINK:AWGN:CPOWer	844
:DLINK:AWGN:ECNO	844
:DLINK:AWGN:ECRPower	845
:DLINK:AWGN:ECRef	845
:DLINK:AWGN:FNBW	846
:DLINK:AWGN:NPOWer	846
:DLINK:AWGN:TICPower	846
:DLINK:AWGN[:STATe]	847
:DLINK:BBCLock	847
:DLINK:CARB:CMODE:CCODE	847
:DLINK:CARB:CMODE:DATA	848
:DLINK:CARB:CMODE:FOFFset	848
:DLINK:CARB:CMODE:FSTRuct	848
:DLINK:CARB:CMODE:POWer	849
:DLINK:CARB:CMODE:PRATio	849
:DLINK:CARB:CMODE:SCTYpe	849
:DLINK:CARB:CMODE:SFORmat	850

Contents

:DLINK:CARB:CMODE:SSCodeos	850
:DLINK:CARB:CMODE:TFIRst	851
:DLINK:CARB:CMODE:TGL	851
:DLINK:CARB:CMODE[:STATe]	851
:DLINK:CPICH:CCODE	852
:DLINK:CPICH:POWer	852
:DLINK:CPICH[:STATe]	852
:DLINK:CRATe	853
:DLINK:DPCH[1]:BALance	853
:DLINK:DPCH[1]:BINitialize	853
:DLINK:DPCH[1]2:ALL[:STATe]	854
:DLINK:DPCH[1]2:CCODE	854
:DLINK:DPCH[1]2:DATA	855
:DLINK:DPCH[1]2:DATA:FIX4	855
:DLINK:DPCH[1]2:POWer	856
:DLINK:DPCH[1]2:RCSetup	856
:DLINK:DPCH[1]2:SLOTformat	857
:DLINK:DPCH[1]2:SRATe	857
:DLINK:DPCH[1]2:SSCodeos	858
:DLINK:DPCH[1]2:TFCI:PATtern	858
:DLINK:DPCH[1]2:TOFFset	859
:DLINK:DPCH[1]2:TPC:NUMSteps	859
:DLINK:DPCH[1]2:TPC:PATtern	860
:DLINK:DPCH[1]2[:STATe]	860
:DLINK:FILTer	860
:DLINK:FILTer:ALPHa	861
:DLINK:FILTer:BBT	862
:DLINK:FILTer:CHANnel	862
:DLINK:MSYNc	863
:DLINK:OCNS[1]2 3 4 5 6 7 8 9 10 11 12 13 14 15 16: ALL[:STATe]	863
:DLINK:OCNS[1]2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:CCODE	863
:DLINK:OCNS[1]2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:DATA	864
:DLINK:OCNS[1]2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:POWer	864
:DLINK:OCNS[1]2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:SRATe	864
:DLINK:OCNS[1]2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:SSCodeos	865
:DLINK:OCNS[1]2 3 4 5 6 7 8 9 10 11 12 13 14 15 16:TOFFset	865
:DLINK:OCNS[1]2 3 4 5 6 7 8 9 10 11 12 13 14 15 16[:STATe]	866
:DLINK:OOSTest[:STATe]	866

:DLINK:OOSTest:DTXGate:POLarity	866
:DLINK:PADJust	867
:DLINK:PCCPch:BCHData.	867
:DLINK:PCCPch:BCHData:FIX4.	868
:DLINK:PCCPch:CCODE	868
:DLINK:PCCPch:POWer.	868
:DLINK:PCCPch[:STATe].	869
:DLINK:PICH:CCODE	869
:DLINK:PICH:DATA.	869
:DLINK:PICH:DATA:FIX4.	870
:DLINK:PICH:PIBits	870
:DLINK:PICH:PINDicator	870
:DLINK:PICH:POWer	871
:DLINK:PICH[:STATe]	871
:DLINK:POLarity	871
:DLINK:PSCH:POWer	872
:DLINK:PSCH[:STATe].	872
:DLINK:RPANel:INPut:ALTPower.	872
:DLINK:RPANel:INPut:BBGRef	873
:DLINK:RPANel:INPut:BGATe	873
:DLINK:RPANel:INPut:PTRigger1	873
:DLINK:RPANel:INPut:PTRigger2.	874
:DLINK:RPANel:OUTPut:DCLock	874
:DLINK:RPANel:OUTPut:DOUT.	876
:DLINK:RPANel:OUTPut:EVENT1	877
:DLINK:RPANel:OUTPut:EVENT2	877
:DLINK:RPANel:OUTPut:EVENT3	878
:DLINK:RPANel:OUTPut:EVENT4	878
:DLINK:RPANel:OUTPut:SSYNc	878
:DLINK:SCH[:STATe].	879
:DLINK:SCRamblecode	879
:DLINK:SDElay	880
:DLINK:SSCH:POWer	880
:DLINK:SSCH:SSGRoup	880
:DLINK:SSCH[:STATe].	881
:DLINK:TGAP:FSTRuct.	881
:DLINK:TGAP:POFFset	881
:DLINK:TGAP:PSI[1]:CFN	882

Contents

:DLINK:TGAP:PSI[1]:CMMethod	882
:DLINK:TGAP:PSI[1]:D.	883
:DLINK:TGAP:PSI[1]:L1	883
:DLINK:TGAP:PSI[1]:L2	883
:DLINK:TGAP:PSI[1]:PL1	884
:DLINK:TGAP:PSI[1]:PL2	884
:DLINK:TGAP:PSI[1]:PRC	885
:DLINK:TGAP:PSI[1]:PS	885
:DLINK:TGAP:PSI[1]:SN	885
:DLINK:TGAP:RPARameter	886
:DLINK:TGAP:SCFN	886
:DLINK:TGAP:STARt:TRIGger.	887
:DLINK:TGAP:STARt:TRIGger:POLarity.	887
:DLINK:TGAP:STOP:TRIGger	887
:DLINK:TGAP:STOP:TRIGger:POLarity	888
:DLINK:TGAP[:STATe]	888
:DLINK:TSETup	888
:DLINK:TXDV	889
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6:BLKSize	890
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6:BPFRame	890
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6:BRATe.	891
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6:BSSize.	891
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6:CODE	891
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6:CRc.	892
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6:DATA	892
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6:DATA:EINsert	893
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6:DATA:FIX4.	893
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6:NBLocks	894
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6:POSition	894
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6:PPERcentage.	895
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6:RMATch	895
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6:TTI	896
:DLINK[:TGRoup [A]B]:DCH[1]2 3 4 5 6[:STATe]	896
:LINK	896
:POLarity[:ALL].	897
:ULINK:APPLy	897
:ULINK:AWGN:CN	898
:ULINK:AWGN:CPOWer	898

:ULINK:AWGN:DRATe	898
:ULINK:AWGN:EBNO	899
:ULINK:AWGN:EBRef	899
:ULINK:AWGN:FNBW	900
:ULINK:AWGN:NPOWer	900
:ULINK:AWGN:TICPower	900
:ULINK:AWGN[:STATe]	901
:ULINK:CRATe	901
:ULINK:DPCCh:BETA	902
:ULINK:DPCCh:CCODe	902
:ULINK:DPCCh:DATA	902
:ULINK:DPCCh:DATA:FIX4	903
:ULINK:DPCCh:FBI:PATtern	903
:ULINK:DPCCh:FBI:PATtern:FIX	904
:ULINK:DPCCh:FBI[:STATe]	904
:ULINK:DPCCh:POWer	905
:ULINK:DPCCh:RATE	905
:ULINK:DPCCh:SLOTformat	905
:ULINK:DPCCh:TFCI:PATtern	906
:ULINK:DPCCh:TFCI:PATtern:FIX	906
:ULINK:DPCCh:TFCI[:STATe]	907
:ULINK:DPCCh:TPC:NSTeps	907
:ULINK:DPCCh:TPC:PATtern	908
:ULINK:DPCCh:TPC:PATtern:FIX4	908
:ULINK:DPCCh:TPC:PATtern:TRIGger:POLarity	909
:ULINK:DPCCh:TPC:PATtern:TRIGger[:STATe]	909
:ULINK:DPCCh:TPOWer	910
:ULINK:DPCCh[:STATe]	910
:ULINK:DPDCh:BETA	910
:ULINK:DPDCh:CCODe	911
:ULINK:DPDCh:DATA	912
:ULINK:DPDCh:DATA:FIX4	912
:ULINK:DPDCh:POWer	913
:ULINK:DPDCh:RATE	913
:ULINK:DPDCh:RBER	914
:ULINK:DPDCh:SLOTformat	915
:ULINK:DPDCh:TBER[:CLENgth]	916
:ULINK:DPDCh:TBER:ELENgth	916

Contents

:ULINK:DPDCh:TPOWer	916
:ULINK:DPDCh[:STATe]	917
:ULINK:FCLock:INTErval	917
:ULINK:FCLock:POLarity	918
:ULINK:FILTer	918
:ULINK:FILTer:ALPHa	919
:ULINK:FILTer:BBT	919
:ULINK:FILTer:CHANnel	920
:ULINK:FOFFset	920
:ULINK:PADJust	921
:ULINK:PHYSical[1]:TYPE	921
:ULINK:PMODE:TPControl:HOLD	921
:ULINK:PMODE:TPControl:POWER:INITIAL	922
:ULINK:PMODE:TPControl:POWER:MAXimum	922
:ULINK:PMODE:TPControl:POWER:MINimum	923
:ULINK:PMODE:TPControl:POWER:RESet	923
:ULINK:PMODE:TPControl:POWER:STEP	924
:ULINK:PMODE:TPControl:TRIGger:POLarity	924
:ULINK:PMODE[:SElect]	925
:ULINK:PRACH:AICH:NUMBer	925
:ULINK:PRACH:AICH:POLarity	925
:ULINK:PRACH:AWGN:CN	926
:ULINK:PRACH:AWGN:CPOWer	926
:ULINK:PRACH:AWGN:DRATE	927
:ULINK:PRACH:AWGN:EBNO	927
:ULINK:PRACH:AWGN:ECNO	927
:ULINK:PRACH:AWGN:EREF	928
:ULINK:PRACH:AWGN:NPOWer	928
:ULINK:PRACH:AWGN:TICPower	929
:ULINK:PRACH:AWGN[:STATe].	929
:ULINK:PRACH:MESSAge:CPART:BETA	929
:ULINK:PRACH:MESSAge:CPART:DATA	930
:ULINK:PRACH:MESSAge:CPART:DATA:FIX4	930
:ULINK:PRACH:MESSAge:CPART:POWER	931
:ULINK:PRACH:MESSAge:CPART:RATE	931
:ULINK:PRACH:MESSAge:CPART:SLOTformat	932
:ULINK:PRACH:MESSAge:CPART:TFCI:PATtern	932
:ULINK:PRACH:MESSAge:CPART:TFCI:PATtern:FIX	932

:ULINK:PRACH:MESSAGE:CPART:TFCI[:STATE]	933
:ULINK:PRACH:MESSAGE:DPART:BETA	933
:ULINK:PRACH:MESSAGE:DPART:DATA	934
:ULINK:PRACH:MESSAGE:DPART:DATA:FIX4	934
:ULINK:PRACH:MESSAGE:DPART:POWER	935
:ULINK:PRACH:MESSAGE:DPART:RATE	935
:ULINK:PRACH:MESSAGE:DPART:SLOTformat	936
:ULINK:PRACH:MODE[:SELECT]	937
:ULINK:PRACH:MULTI:MESSAGE:TPOWER	938
:ULINK:PRACH:MULTI:MESSAGE[:STATE]	938
:ULINK:PRACH:MULTI:NUMBER	938
:ULINK:PRACH:MULTI:PREAmble:NUMBER	939
:ULINK:PRACH:MULTI:PREAmble:POWER:INITIAL	939
:ULINK:PRACH:MULTI:PREAmble:POWER:MAX	940
:ULINK:PRACH:MULTI:PREAmble:POWER:RSTep	940
:ULINK:PRACH:MULTI:PREAmble:PPM	940
:ULINK:PRACH:MULTI:UE[1] 2 3 4 5 6 7 8:MESSAGE:CPART:CCODE	941
:ULINK:PRACH:MULTI:UE[1] 2 3 4 5 6 7 8:MESSAGE:DPART:CCODE	941
:ULINK:PRACH:MULTI:UE[1] 2 3 4 5 6 7 8:PREAmble:SIGNature	942
:ULINK:PRACH:MULTI:UE[1] 2 3 4 5 6 7 8:SPOSITION[1] 2 3 4 5 6 7 8[:ASLot]	942
:ULINK:PRACH:MULTI:UE[1] 2 3 4 5 6 7 8[:STATE]	943
:ULINK:PRACH:PREAmble:POWER:AVERAge	943
:ULINK:PRACH:PREAmble:POWER:MODE	944
:ULINK:PRACH:RPARAmeter	944
:ULINK:PRACH:SCRAmblecode	945
:ULINK:PRACH:SDELay	945
:ULINK:PRACH:SUBChannel	946
:ULINK:PRACH:TOFFset	946
:ULINK:PRACH:TPA	947
:ULINK:PRACH:TPM	948
:ULINK:PRACH:TPOWER	948
:ULINK:PRACH:TPP	948
:ULINK:PRACH:TRIGger	949
:ULINK:PRACH:TRIGger:POLarity	949
:ULINK:PRACH:TRIGger:SOURce	950
:ULINK:PRACH:TTI	950
:ULINK:PRACH[:SINGLE]:MESSAGE[:STATE]	951
:ULINK:PRACH[:SINGLE]:NUMBER	951

Contents

:ULINK:PRACH[:SINGLE]:MESSAGE:CPART:CCODE	952
:ULINK:PRACH[:SINGLE]:MESSAGE:DPART:CCODE	952
:ULINK:PRACH[:SINGLE]:MESSAGE:TPOWER	953
:ULINK:PRACH[:SINGLE]:NUMBER	954
:ULINK:PRACH[:SINGLE]:PREAMBLE:NUMBER	954
:ULINK:PRACH[:SINGLE]:PREAMBLE:POWER:INITIAL	955
:ULINK:PRACH[:SINGLE]:PREAMBLE:POWER:MAX	955
:ULINK:PRACH[:SINGLE]:PREAMBLE:POWER:RSTEP	956
:ULINK:PRACH[:SINGLE]:PREAMBLE:PPM	956
:ULINK:PRACH[:SINGLE]:PREAMBLE:SIGNATURE	957
:ULINK:RMCHANNEL	957
:ULINK:RPANEL:DPCH:INPUT:ALTPower	958
:ULINK:RPANEL:DPCH:INPUT:BBGRef	958
:ULINK:RPANEL:DPCH:INPUT:BGATE	959
:ULINK:RPANEL:DPCH:INPUT:PTRigger1	959
:ULINK:RPANEL:DPCH:INPUT:PTRigger2	959
:ULINK:RPANEL:DPCH:OUTPUT:DCLOCK	960
:ULINK:RPANEL:DPCH:OUTPUT:DOUT	961
:ULINK:RPANEL:DPCH:OUTPUT:EVENT1	961
:ULINK:RPANEL:DPCH:OUTPUT:EVENT2	962
:ULINK:RPANEL:DPCH:OUTPUT:EVENT3	962
:ULINK:RPANEL:DPCH:OUTPUT:EVENT4	963
:ULINK:RPANEL:DPCH:OUTPUT:SSYNc	963
:ULINK:RPANEL:PRACH:INPUT:ALTPower	964
:ULINK:RPANEL:PRACH:INPUT:BBGRef	964
:ULINK:RPANEL:PRACH:INPUT:BGATE	965
:ULINK:RPANEL:PRACH:INPUT:PTRigger1	965
:ULINK:RPANEL:PRACH:INPUT:PTRigger2	965
:ULINK:RPANEL:PRACH:OUTPUT:DCLOCK	966
:ULINK:RPANEL:PRACH:OUTPUT:DOUT	967
:ULINK:RPANEL:PRACH:OUTPUT:EVENT1	968
:ULINK:RPANEL:PRACH:OUTPUT:EVENT2	969
:ULINK:RPANEL:PRACH:OUTPUT:EVENT3	969
:ULINK:RPANEL:PRACH:OUTPUT:EVENT4	970
:ULINK:RPANEL:PRACH:OUTPUT:SSYNc	971
:ULINK:SCRAMBLECODE	971
:ULINK:SDELAY	972
:ULINK:SFNRst:POLarity	972

:ULINK:SYNC:MODE	973
:ULINK:SYNC[:SOURce]	973
:ULINK:TGAP:POFFset	973
:ULINK:TGAP:PSI[1] 2 3 4 5 6:CFN	974
:ULINK:TGAP:PSI[1]:CMMethod	974
:ULINK:TGAP:PSI[1] 2 3 4 5 6:D	975
:ULINK:TGAP:PSI[1] 2 3 4 5 6:L1	975
:ULINK:TGAP:PSI[1] 2 3 4 5 6:L2	976
:ULINK:TGAP:PSI[1] 2 3 4 5 6:PL1	976
:ULINK:TGAP:PSI[1] 2 3 4 5 6:PL2	976
:ULINK:TGAP:PSI[1] 2 3 4 5 6:POWer	977
:ULINK:TGAP:PSI[1] 2 3 4 5 6:PRC	977
:ULINK:TGAP:PSI[1] 2 3 4 5 6:PS	978
:ULINK:TGAP:PSI[1] 2 3 4 5 6:SN	978
:ULINK:TGAP:RPAMeter	978
:ULINK:TGAP:SCFN	979
:ULINK:TGAP[:STATe]	980
:ULINK:TGAP:START:TRIGger	980
:ULINK:TGAP:START:TRIGger:POLarity	980
:ULINK:TGAP:STOP:TRIGger	981
:ULINK:TGAP:STOP:TRIGger:POLarity	981
:ULINK:TOFFset	981
:ULINK:TSTATUS:COMPRESSED	982
:ULINK:TSTATUS:RACH	982
:ULINK:TSTATUS:RECeive	982
:ULINK:TSTATUS:SYNC	983
:ULINK[:TGRoup[1]]:DCH[1] 2 3 3 5 6:BLKSize	983
:ULINK[:TGRoup[1]]:DCH[1] 2 3 4 5 6:BPFRame	984
:ULINK[:TGRoup[1]]:DCH[1] 2 3 4 5 6:BRATE	984
:ULINK[:TGRoup[1]]:DCH[1] 2 3 3 5 6:CODE	984
:ULINK[:TGRoup[1]]:DCH[1] 2 3 3 5 6:CRC	985
:ULINK[:TGRoup[1]]:DCH[1] 2 3 3 5 6:DATA	985
:ULINK[:TGRoup[1]]:DCH[1] 2 3 4 5 6:DATA:BER:ACTual	986
:ULINK[:TGRoup[1]]:DCH[1] 2 3 4 5 6:DATA:BER:ERRor:BIT	986
:ULINK[:TGRoup[1]]:DCH[1] 2 3 4 5 6:DATA:BER:TOTAL:BIT	986
:ULINK[:TGRoup[1]]:DCH[1] 2 3 4 5 6:DATA:BER[:VALue]	987
:ULINK[:TGRoup[1]]:DCH[1] 2 3 4 5 6:DATA:BLER:ACTual	987
:ULINK[:TGRoup[1]]2:DCH[1] 2 3 4 5 6:DATA:BLER:ERRor:BLOCK	987

Contents

:ULINK[:TGRoup[1]]2:DCH[1]2 3 4 5 6:DATA:BLER:TOTal:BLOCK	988
:ULINK[:TGRoup[1]]:DCH[1]2 3 4 5 6:DATA:BLER[:VALue]	988
:ULINK[:TGRoup[1]]:DCH[1]2 3 4 5 6:DATA:EINSert	989
:ULINK[:TGRoup[1]]:DCH[1]2 3 4 5 6:DATA:FIX4	989
:ULINK[:TGRoup[1]]:DCH[1]2 3 4 5 6:NBLock	990
:ULINK[:TGRoup [1]]:DCH[1]2 3 4 5 6:PPERcentage	990
:ULINK[:TGRoup[1]]:DCH[1]2 3 4 5 6:RMATch	990
:ULINK[:TGRoup[1]]:DCH[1]2 3 4 5 6:TTI	991
:ULINK[:TGRoup[1]]:DCH[1]2 3 4 5 6[:STATe]	991
:ULINK[:TGRoup[1]]:RACH[1]:BLKSize	991
:ULINK[:TGRoup [1]]:RACH[1]:BPFRame	992
:ULINK[:TGRoup [1]]:RACH[1]:BRATe	992
:ULINK[:TGRoup[1]]:RACH[1]:CODE	993
:ULINK[:TGRoup[1]]:RACH[1]:CRC	993
:ULINK[:TGRoup[1]]:RACH[1]:DATA	993
:ULINK[:TGRoup[1]]:RACH[1]:DATA:BER:ACTual	994
:ULINK[:TGRoup[1]]:RACH[1]:DATA:BER:ERRor:BIT	994
:ULINK[:TGRoup[1]]:RACH[1]:DATA:BER:TOTal:BIT	994
:ULINK[:TGRoup[1]]:RACH[1]:DATA:BER[:VALue]	995
:ULINK[:TGRoup[1]]:RACH[1]:DATA:BLER:ACTual	995
:ULINK[:TGRoup[1]]:RACH[1]:DATA:BLER:ERRor:BLOCK	995
:ULINK[:TGRoup[1]]:RACH[1]:DATA:BLER:TOTal:BLOCK	996
:ULINK[:TGRoup[1]]:RACH[1]:DATA:BLER[:VALue]	996
:ULINK[:TGRoup[1]]:RACH[1]:DATA:EINSert	997
:ULINK[:TGRoup[1]]:RACH[1]:DATA:FIX4	997
:ULINK[:TGRoup[1]]:RACH[1]:NBLock	998
:ULINK[:TGRoup [1]]:RACH[1]:PPERcentage	998
:ULINK[:TGRoup[1]]:RACH[1]:RMATch	998
:ULINK[:TGRoup[1]]:RACH[1]:TTI	999
:ULINK[:TGRoup[1]]:RACH[1][:STATe]	999
[:STATe]	999

1 SCPI Basics

This chapter describes how SCPI information is organized and presented in this guide. An overview of the SCPI language is also provided. This chapter contains the following major sections:

- [“Command Reference Information” on page 2](#)
- [“SCPI Basics” on page 3](#)

Command Reference Information

SCPI Command Listings

The Table of Contents lists the Standard Commands for Programmable Instruments (SCPI) without the parameters. The SCPI subsystem name will generally have the first part of the command in parenthesis that is repeated in all commands within the subsystem. The title(s) beneath the subsystem name is the remaining command syntax. The following example demonstrates this listing:

```
Communication Subsystem (:SYSTem:COMMunicate)
:PMETer:CHANnel
:SERial:ECHO
```

The following examples show the complete commands from the above Table of Contents listing:

```
:SYSTem:COMMunicate:PMETer:CHANnel
:SYSTem:COMMunicate:SERial:ECHO
```

Key and Data Field Cross Reference

The index is set up so applicable key and data field names can be cross-referenced to the appropriate SCPI command. There are two headings in the index where the key and data field names can be found:

- individual softkey, hardkey, or data field name
- subsystem name

Supported Field

Within each command section, the Supported heading describes which signal generator configurations are supported by the SCPI command. When “All” is shown next to this heading, all signal generator configurations are supported by the SCPI command. When “All with Option xxx” is shown next to this heading, only the stated option(s) is supported.

SCPI Basics

This section describes the general use of the SCPI language for the ESG. It is not intended to teach you everything about the SCPI language; the SCPI Consortium or IEEE can provide that level of detailed information. For a list of the specific commands available for the signal generator, refer to the table of contents.

For additional information, refer to the following publications:

- IEEE Standard 488.1-1987, IEEE Standard Digital Interface for Programmable Instrumentation. New York, NY, 1998.
- IEEE Standard 488.2-1992, IEEE Standard Codes, Formats, Protocols and Command Commands for Use with ANSI/IEEE Standard 488.1-1987. New York, NY, 1998.

Common Terms

The following terms are used throughout the remainder of this section:

Command	A command is an instruction in SCPI consisting of mnemonics (keywords), parameters (arguments), and punctuation. You combine commands to form messages that control instruments.
Controller	A controller is any device used to control the signal generator, for example a computer or another instrument.
Event Command	Some commands are events and cannot be queried. An event has no corresponding setting; it initiates an action at a particular time.
Program Message	A program message is a combination of one or more properly formatted commands. Program messages are sent by the controller to the signal generator.
Query	A query is a special type of command used to instruct the signal generator to make response data available to the controller. A query ends with a question mark. Generally you can query any command value that you set.
Response Message	A response message is a collection of data in specific SCPI formats sent from the signal generator to the controller. Response messages tell the controller about the internal state of the signal generator.

Command Syntax

A typical command is made up of keywords prefixed with colons (:). The keywords are followed by parameters. The following is an example syntax statement:

```
[ :SOURce ] :POWer [ :LEVel ] MAXimum | MINimum
```

In the example above, the [:LEVel] portion of the command immediately follows the :POWer portion with no separating space. The portion following the [:LEVel], MINimum | MAXimum, are the parameters (argument for the command statement). There is a separating space (white space) between the command and its parameter.

Additional conventions in syntax statements are shown in [Table 1-1](#) and [Table 1-2](#).

Table 1-1 Special Characters in Command Syntax

Characters	Meaning	Example
	A vertical stroke between keywords or parameters indicates alternative choices. For parameters, the effect of the command varies depending on the choice.	[:SOURce] :AM: MOD DEEP NORMAl DEEP or NORMAl are the choices.
[]	Square brackets indicate that the enclosed keywords or parameters are optional when composing the command. These implied keywords or parameters will be executed even if they are omitted.	[:SOURce] :FREQuency [:CW] ? SOURce and CW are optional items.
< >	Angle brackets around a word (or words) indicate they are not to be used literally in the command. They represent the needed item.	[:SOURce] :FREQuency : STARt <val> <unit> In this command, the words <val> and <unit> should be replaced by the actual frequency and unit. :FREQuency :STARt 2.5GHZ
{ }	Braces indicate that parameters can optionally be used in the command once, several times, or not at all.	[:SOURce] :LIST : POWer <val> { , <val> } a single power listing: LIST :POWer 5 a series of power listings: LIST :POWer 5 , 10 , 15 , 20

Table 1-2 Command Syntax

Characters, Keywords, and Syntax	Example
Upper-case lettering indicates the minimum set of characters required to execute the command.	[:SOURce] :FREQuency [:CW] ?, FREQ is the minimum requirement.
Lower-case lettering indicates the portion of the command that is optional; it can either be included with the upper-case portion of the command or omitted. This is the flexible format principle called forgiving listening. Refer to “Command Parameters and Responses” on page 7 for more information.	:FREQuency Either :FREQ, :FREQuency, or :FREQUENCY is correct.
When a colon is placed between two command mnemonics, it moves the current path down one level in the command tree. Refer to “Command Tree” on page 6 more information on command paths.	:TRIGger :OUTPut :POLarity? TRIGger is the root level keyword for this command.
If a command requires more than one parameter, you must separate adjacent parameters using a comma. Parameters are not part of the command path, so commas do not affect the path level.	[:SOURce] :LIST: DWELl <val> { , <val> }
A semicolon separates two commands in the same program message without changing the current path.	:FREQ 2.5GHZ ; :POW 10DBM
White space characters, such as <tab> and <space>, are generally ignored as long as they do not occur within or between keywords. However, you must use white space to separate the command from the parameter, but this does not affect the current path.	:FREQ uency or :POWER :LEVel are not allowed. A <space> between :LEVel and 6.2 is mandatory. :POWER :LEVel 6.2


Command Types

Commands can be separated into two groups: common commands and subsystem commands. [Figure 1-1](#), shows the separation of the two command groups.

Common commands are used to manage macros, status registers, synchronization, and data storage and are defined by IEEE 488.2. They are easy to recognize because they all begin with an asterisk. For example *IDN?, *OPC, and *RST are common commands. Common commands are not part of any subsystem and the signal generator interprets them in the same way, regardless of the current path setting.

Subsystem commands are distinguished by the colon (:). The colon is used at the beginning of a command statement and between keywords, as in :FREQUency[:CW?]. Each command subsystem is a set of commands that roughly correspond to a functional block inside the signal generator. For example, the power subsystem (:POWer) contains commands for power generation, while the status subsystem (:STATus) contains commands for controlling status registers.

Figure 1-1

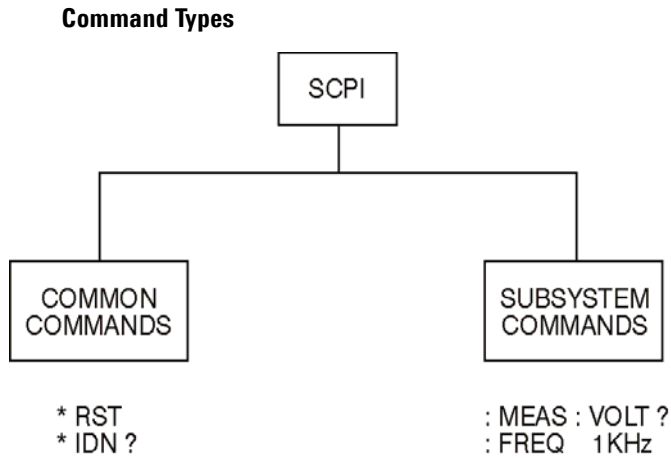


ck709e

Command Tree

Most programming tasks involve subsystem commands. SCPI uses a structure for subsystem commands similar to the file systems on most computers. In SCPI, this command structure is called a command tree and is shown in Figure 1-2.

Figure 1-2

Simplified Command Tree

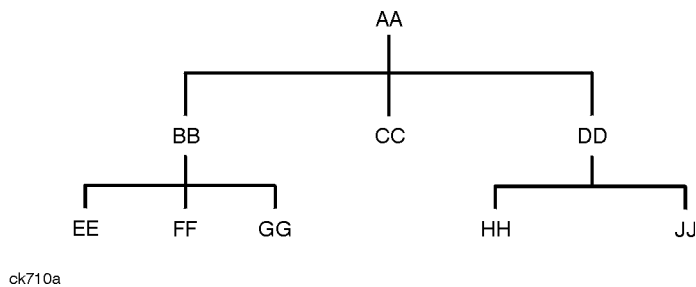

ck710a

The command closest to the top is the root command, or simply “the root.” Notice that you must follow a particular path to reach lower level commands. In the following example, :POWer represents AA, :ALC

represents BB, :SOURCE represents GG. The complete command path is :POWER:ALC:SOURCE? (:AA:BB:GG).

Paths Through the Command Tree

To access commands from different paths in the command tree, you must understand how the signal generator interprets commands. The parser, a part of the signal generator firmware, decodes each message sent to the signal generator. The parser breaks up the message into component commands using a set of rules to determine the command tree path used. The parser keeps track of the current path (the level in the command tree) and where it expects to find the next command statement. This is important because the same keyword may appear in different paths. The particular path is determined by the keyword(s) in the command statement.

A message terminator, such as a <new line> character, sets the current path to the root. Many programming languages have output statements that automatically send message terminators.

NOTE The current path is set to the root after the line-power is cycled or when *RST is sent.

Command Parameters and Responses

SCPI defines different data formats for use in program and response messages. It does this to accommodate the principle of forgiving listening and precise talking. For more information on program data types refer to IEEE 488.2.

Forgiving listening means the command and parameter formats are flexible.

For example, with the :FREQUENCY:REFERENCE:STATE ON|OFF|1|0 command, the signal generator accepts :FREQUENCY:REFERENCE:STATE ON, :FREQUENCY:REFERENCE:STATE 1, :FREQ:REF:STAT ON, :FREQ:REF:STAT 1 to turn on the frequency reference mode.

Each parameter type has one or more corresponding response data types. A setting that you program using a numeric parameter returns either real or integer response data when queried. Response data (data returned to the controller) is more concise and restricted, and is called precise talking.

Precise talking means that the response format for a particular query is always the same.

For example, if you query the power state (:POWER:ALC:STATE?) when it is on, the response is always 1, regardless of whether you previously sent :POWER:ALC:STATE 1 or :POWER:ALC:STATE ON. [Table 1-3](#) shows the response for a given parameter type.

Table 1-3 Parameter and Response Types

Parameter Types	Response Data Types
Numeric	Real, Integer
Extended Numeric	Real, Integer
Discrete	Discrete
Boolean	Numeric Boolean
String	String

Numeric Parameters

Numeric parameters are used in both common and subsystem commands. They accept all commonly used decimal representations of numbers including optional signs, decimal points, and scientific notation.

If a signal generator setting is programmed with a numeric parameter which can only assume a finite value, it automatically rounds any entered parameter which is greater or less than the finite value. For example, if a signal generator has a programmable output impedance of 50 or 75 ohms, and you specified 76.1 for the output impedance, the value is rounded to 75. The following are examples of numeric parameters:

- 100 no decimal point required
- 100. fractional digits optional
- 1.23 leading signs allowed
- 4.56E<space>3 space allowed after the E in exponential
- 7.89E-001 use either E or e in exponential
- +256 leading + allowed
- .5 digits left of decimal point optional

Extended Numeric Parameters

Most subsystems use extended numeric parameters to specify physical quantities. Extended numeric parameters accept all numeric parameter values and other special values as well.

The following are examples of extended numeric parameters:

100	any simple numeric value
1.2GHZ	GHZ can be used for exponential (E009)
200MHZ	MHZ can be used for exponential (E006)
-100mV	negative 100 millivolts
10DEG	10 degrees

Extended numeric parameters also include the following special parameters:

DEFault	resets the parameter to its default value
UP	increments the parameter
DOWN	decrements the parameter
MINimum	sets the parameter to the smallest possible value
MAXimum	sets the parameter to the largest possible value

Discrete Parameters

Discrete parameters use mnemonics to represent each valid setting. They have a long and a short form, just like command mnemonics. You can mix upper and lower case letters for discrete parameters.

The following examples of discrete parameters are used with the command
:TRIGger[:SEQUence]:SOURce BUS|IMMediate|EXTernal.

BUS	GPIB, LAN, or RS-232 triggering
IMMediate	immediate trigger (free run)
EXTernal	external triggering

Although discrete parameters look like command keywords, do not confuse the two. In particular, be sure to use colons and spaces properly. Use a colon to separate command mnemonics from each other and a space to separate parameters from command mnemonics.

The following are examples of discrete parameters in commands:

```
TRIGger:SOURce BUS
TRIGger:SOURce IMMediate
TRIGger:SOURce EXTernal
```

Boolean Parameters

Boolean parameters represent a single binary condition that is either true or false. The two-state boolean parameter has four arguments. The following list shows the arguments for the two-state boolean parameter:

ON	boolean true, upper/lower case allowed
OFF	boolean false, upper/lower case allowed
1	boolean true
0	boolean false

String Parameters

String parameters allow ASCII strings to be sent as parameters. Single or double quotes are used as delimiters.

The following are examples of string parameters:

```
'This is valid'  
"This is also valid"  
'SO IS THIS'
```

Real Response Data

Real response data represent decimal numbers in either fixed decimal or scientific notation. Most high-level programming languages that support signal generator input/output (I/O) handle either decimal or scientific notation transparently.

The following are examples of real response data:

```
+4.000000E+010, -9.990000E+002  
-9.990000E+002  
+4.00000000000000E+010  
+1  
0
```

Integer Response Data

Integer response data are decimal representations of integer values including optional signs. Most status register related queries return integer response data.

The following are examples of integer response data:

0	signs are optional
+100	leading + allowed
-100	leading – allowed
256	never any decimal point

Discrete Response Data

Discrete response data are similar to discrete parameters. The main difference is that discrete response data only returns the short form of a particular mnemonic, in all upper case letters.

The following are examples of discrete response data:

```

IMM
EXT
INT
NEG
  
```

Numeric Boolean Response Data

Boolean response data returns a binary numeric value of one or zero.

String Response Data

String response data are similar to string parameters. The main difference is that string response data returns double quotes, rather than single quotes. Embedded double quotes may be present in string response data. Embedded quotes appear as two adjacent double quotes with no characters between them.

The following are examples of string response data:

```

"This is a string"
"one double quote inside brackets: [""]"
>Hello!"
  
```

Program Messages

The following commands will be used to demonstrate the creation of program messages:

```
[ :SOURce ] :FREQuency :START      [ :SOURce ] :FREQuency :STOP  
[ :SOURce ] :FREQuency [ :CW ]     [ :SOURce ] :POWer [ :LEVel ] :OFFSet
```

Example 1

```
:FREQuency :START 500MHZ ; STOP 1000MHZ
```

This program message is correct and will not cause errors; `START` and `STOP` are at the same path level. It is equivalent to sending the following message:

```
FREQuency :START 500MHZ ; FREQuency :STOP 1000MHZ
```

Example 2

```
:POWer 10DBM ; :OFFSet 5DB
```

This program message will result in an error. The message makes use of the default `POWER [:LEVel]` node (root command). When using a default node, there is no change to the current path position. Since there is no command `OFFSet` at the root level, an error results.

The following example shows the correct syntax for this program message:

```
:POWer 10DBM ; :POWer :OFFSet 5DB
```

Example 3

```
:POWer :OFFSet 5DB ; POWer 10DBM
```

This program message results in a command error. The path is dropped one level at each colon. The first half of the message drops the command path to the lower level command `OFFSet`; `POWer` does not exist at this level.

The `POWer 10DBM` command is missing the leading colon and when sent, it causes confusion because the signal generator cannot find `POWer` at the `POWer :OFFSet` level. By adding the leading colon, the current path is reset to the root. The following shows the correct program message:

```
:POWer :OFFSet 5DB ; :POWer 10DBM
```

Example 4

```
FREQ 500MHZ ; POW 4DBM
```

In this example, the keyword short form is used. The program message is correct because it utilizes the default nodes of `:FREQ [:CW]` and `:POW [:LEVel]`. Since default nodes do not affect the current path, it is not necessary to use a leading colon before `FREQ` or `POW`.

File Name Variables

File name variables, such as "<file name>", represent three formats, "<file name>", "<file name@file type>", and "</user/file type/file name>". The following shows the file name syntax for the three formats, but uses "FLATCAL" as the file name in place of the variable "<file name>":

Format 1 "FLATCAL"
 Format 2 "FLATCAL@USERFLAT"
 Format 3 "/USER/USERFLAT/FLATCAL"

Format 2 uses the file type extension (@USERFLAT) as part of the file name syntax. Format 3 uses the directory path which includes the file name and file type. Use Formats 2 and 3 when the command does not specify the file type. This generally occurs in the Memory (:MEMORY) or Mass Memory (:MMEMORY) subsystems.

The following examples demonstrate a command where Format 1 applies:

Command Syntax with the file name variable

```
:MEMORY:STORE:LIST "<file name>"
```

Command Syntax with the file name

```
:MEMORY:STORE:LIST "SWEEP_1"
```

This command has :LIST in the command syntax. This denotes that "SWEEP_1" will be saved in the :List file type location as a list type file.

The following examples demonstrate a command where Format 2 applies:

Command Syntax with the file name variable

```
:MMEMORY:COPY "<file name>","<file name>"
```

Command Syntax with the file name

```
:MMEMORY:COPY "FLATCAL@USERFLAT", "FLAT_2CAL@USERFLAT"
```

This command cannot distinguish which file type "FLATCAL" belongs to without the file type extension (@USERFLAT). If this command were executed without the extension, the command would assume the file type was Binary.

The following examples demonstrate a command where format 3 applies:

Command Syntax with the file name variable

```
:MMEMory:DATA "/USER/BBG1/WAVEFORM/<file name>" ,#ABC
```

Command Syntax with the file name

```
:MMEMory:DATA "/USER/BBG1/WAVEFORM/FLATCAL" ,#ABC
```

This command gives the directory path name where the file "FLATCAL" is stored.

- A the number of decimal digits to follow in B.
- B a decimal number specifying the number of data bytes in C.
- C the binary waveform data.

Refer to [Table 3-1 on page 118](#) for a listing of the file systems and types. The entries under file type are used in the directory path.

MSUS (Mass Storage Unit Specifier) Variable

The variable "<msus>" enables a command to be file type specific when working with user files. Some commands use it as the only command parameter, while others can use it in conjunction with a file name when a command is not file type specific. When used with a file name, it is similar to Format 2 in the ["File Name Variables"](#) section on [page 13](#). The difference is the file type specifier (msus) occupies its own variable and is not part of the file name syntax.

The following examples illustrate the usage of the variable "<msus>" when it is the only command parameter:

Command Syntax with the msus variable

```
:MMEMory:CATalog? "<msus>"
```

Command Syntax with the file system

```
:MMEMory:CATalog? "LIST:"
```

The variable "<msus>" is replaced with "LIST:". When the command is executed, the output displays only the files from the List file system.

The following examples illustrate the usage of the variable "<file name>" with the variable "<msus>":

Command Syntax with the file name and msus variables

```
:MMEMory:DELEte[:NAME] "<file name>" [, ["<msus>"]]
```

Command Syntax with the file name and file system

```
:MMEMory:DELEte:NAME "LIST_1" , "LIST: "
```

The command from the above example cannot discern which file system LIST_1 belongs to without a file system specifier and will not work without it. When the command is properly executed, LIST_1 is deleted from the List file system.

The following example shows the same command, but using Format 2 from the [“File Name Variables”](#) section on [page 13](#):

```
:MMEMory:DELEte:NAME "LIST_1@LIST"
```

When a file name is a parameter for a command that is not file system specific, either format ("`<file name>`", "`<msus>`" or "`<file name@file system>`") will work.

Refer to [Table 1-1 on page 4](#) for a listing of the file systems and types.

Quote Usage with SCPI Commands

As a general rule, programming languages require that SCPI commands be enclosed in double quotes as shown in the following example:

```
" :FM:EXTernal:IMPedance 600 "
```

However when a string is the parameter for a SCPI command, additional quotes or other delimiters may be required to identify the string. Your programming language may use two sets of double quotes, one set of single quotes, or back slashes with quotes to signify the string parameter. The following examples illustrate these different formats:

```
"MEMory:LOAD:LIST "myfile" " " used in BASIC programming languages
```

```
"MEMory:LOAD:LIST \"myfile\" \" \" used in C, C++, Java, and PERL
```

```
"MEMory:LOAD:LIST 'myfile' " accepted by most programming languages
```

Consult your programming language reference manual to determine the correct format.

Binary, Decimal, Hexadecimal, and Octal Formats

Command values may be entered using a binary, decimal, hexadecimal, or octal format. When the binary, hexadecimal, or octal format is used, their values must be preceded with the proper identifier. The decimal format (default format) requires no identifier and the signal generator assumes this format when a numeric value is entered without one. The following list shows the identifiers for the formats that require them:

SCPI Basics

SCPI Basics

- #B identifies the number as a binary numeric value (base-2).
- #H identifies the number as a hexadecimal alphanumeric value (base-16).
- #Q identifies the number as a octal alphanumeric value (base-8).

The following are examples of SCPI command values and identifiers for the decimal value 45:

#B101101	binary equivalent
#H2D	hexadecimal equivalent
#Q55	octal equivalent

The following example sets the RF output power to 10 dBm (or the equivalent value for the currently selected power unit, such as DEUV or DEUVEFMF) using the hexadecimal value 000A:

```
:POW #H000A
```

A unit of measure, such as DBM or mV, will not work with the values when using a format other than decimal.

The following example sets the bluetooth board address to FFBF7 (hexadecimal):

```
:RADIO:BLUETOOTH:ARB:BDADDR #HFFBF7
```

2 Basic Function Commands

This chapter provides SCPI descriptions for subsystems dedicated to signal generator operations common to all ESG Vector Signal Generators. This chapter contains the following major sections:

- “Correction Subsystem ([:SOURce]:CORRection)” on page 18
- “Digital Modulation Subsystem ([:SOURce])” on page 21
- “Frequency Subsystem ([:SOURce])” on page 35
- “List/Sweep Subsystem ([:SOURce])” on page 45
- “Power Subsystem ([:SOURce]:POWer)” on page 54
- “Pulse Subsystem ([:SOURce]:PULSe)” on page 64

Correction Subsystem ([:SOURce]:CORRection)

:FLATness:LOAD

Supported All

```
[ :SOURce ] :CORRection :FLATness :LOAD "<file name>"
```

This command loads a user-flatness correction file.

***RST** N/A

Range N/A

Key Entry Load From Selected File

Remarks N/A

:FLATness:PAIR

Supported All

```
[ :SOURce ] :CORRection :FLATness :PAIR <freq.>[<freq suffix>],  
<corr.>[<corr suffix>]
```

This command sets a frequency and amplitude correction pair.

<corr.> This variable is the power correction.

***RST** N/A

Range	Frequency	Standard	Option UNB
	<i>Option 501:</i> 100kHz–1GHZ	–136 to 20DB	–136 to 25DB
	<i>Option 502:</i> 100kHz–2GHZ	–136 to 20DB	–136 to 25DB
	<i>Option 503:</i> 100kHz–3GHZ	–136 to 20DB	–136 to 25DB
	<i>Option 504:</i> 100kHz–4GHZ	–136 to 20DB	–136 to 25DB
	<i>Option 506:</i> 100kHz–6GHZ	–136 to 25DB	N/A

Key Entry Configure Cal Array

Remarks The maximum number of points that can be entered is 1601.

:FLATness:POINTS

Supported All

[:SOURCE] :CORREction :FLATness :POINTs?

This query returns the number of points in the user-flatness correction file.

*RST	N/A
Range	N/A
Key Entry	N/A
Remarks	N/A

:FLATness:PRESet

Supported	All
------------------	-----

CAUTION The current correction data will be overwritten once this command is executed. Save the current data if needed. Refer to [“:FLATness:STORe” on page 19](#) for storing user-flatness files.

[:SOURCE] :CORREction :FLATness :PRESet

This command presets the user-flatness correction to a factory-defined setting that consists of one point.

*RST	N/A
Range	N/A
Key Entry	Preset List
Remarks	N/A

:FLATness:STORe

Supported	All
------------------	-----

[:SOURCE] :CORREction :FLATness :STORe "<file name>"

This command stores the current user-flatness correction data to a file.

*RST	N/A
Range	N/A
Key Entry	Store To File
Remarks	For information on file name syntax, refer to “File Name Variables” on page 13 .

Basic Function Commands

Correction Subsystem ([:SOURce]:CORRection)

[:STATe]

Supported All

[:SOURce]:CORRection[:STATe] ON|OFF|1|0

[:SOURce]:CORRection[:STATe]?

This command enables or disables the user-flatness corrections.

***RST** 0

Key Entry Flatness Off On

Remarks N/A

Digital Modulation Subsystem ([:SOURce])

:BURSt:SOURce

Supported All

```
[ :SOURce ] :BURSt :SOURce EXT[ 1 ] | INT[ 1 ]
[ :SOURce ] :BURSt :SOURce?
```

This command selects either an internally generated or an externally supplied burst source.

***RST** EXT

Key Entry Burst Envelope Int Ext Off

Remarks The external burst source is applied to the EXT 1 INPUT connector.
 The INTernal[1] choice will not work unless an internal burst source is active.

:BURSt:STATe

Supported All

```
[ :SOURce ] :BURSt :STATe ON | OFF | 1 | 0
[ :SOURce ] :BURSt :STATe?
```

This command enables or disables the burst envelope function.

***RST** 0

Key Entry Burst Envelope Int Ext Off

Remarks N/A

:DM:EXTernal:ALC:BANDwidth | BWIDth

Supported All

```
[ :SOURce ] :DM :EXTernal :ALC :BANDwidth | BWIDth NORMAL | NARRow
[ :SOURce ] :DM :EXTernal :ALC :BANDwidth | BWIDth?
```

This command sets the bandwidth of the automatic leveling control (ALC) loop.

NORMAL This choice enables the signal generator to automatically select the ALC bandwidth for the current test conditions.

NARRow This choice sets the narrowest possible ALC bandwidth and is useful when an

Digital Modulation Subsystem ([:SOURCE])

external I/Q source is connected.

*RST	NORM
Key Entry	ALC BW Normal Narrow
Remarks	N/A

:DM:EXTeRnal:HCRest[:STATe]

Supported All

```
[ :SOURCE ] :DM:EXTeRnal:HCRest [ :STATe ] ON | OFF | 1 | 0
[ :SOURCE ] :DM:EXTeRnal:HCRest [ :STATe ] ?
```

This command changes the operating condition to accommodate I/Q inputs with a high crest factor.

ON(1) This choice turns high crest mode on for externally applied signals with high crest factors. High crest mode allows the signal generator to process these signals with less distortion. For crest factors higher than 4 dB, I/Q drive levels should be reduced by 1 dB for each dB above that level. In high crest mode, the maximum output level is reduced and power level accuracy is degraded.

OFF(0) This choice disables the high crest mode.

*RST	0
Key Entry	High Crest Mode Off On
Remarks	N/A

:DM:EXTeRnal:FILTer

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] :DM:EXTeRnal:FILTer 40e6 | THRough
[ :SOURCE ] :DM:EXTeRnal:FILTer ?
```

This command selects the filter or through path for I/Q signals routed to the rear panel I and Q outputs. Selecting a filter using this command will automatically set “:DM:EXTeRnal:FILTer:AUTO” on [page 23](#) to OFF(0) mode.

40e6 This choice applies a 40 MHz baseband filter.

THRough This choice bypasses filtering.

*RST	THR
Key Entry	40.000 MHz Through
Remarks	N/A

:DM:EXTernal:FILTer:AUTO

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :DM:EXTernal:FILTer:AUTO ON|OFF|1|0
[ :SOURce ] :DM:EXTernal:FILTer:AUTO?
```

This command enables or disables the automatic selection of the filters for I/Q signals routed to the rear panel outputs.

ON(1) This choice will automatically select a digital modulation filter optimized for the current signal generator settings.

OFF(0) This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “[:DM:EXTernal:FILTer](#)” on page 22 for selecting a filter or through path.

***RST** 1

Key Entry I/Q Output Filter Manual Auto

Remarks N/A

:DM:EXTernal:POLarity

Supported All

```
[ :SOURce ] :DM:EXTernal:POLarity NORMal|INVert
[ :SOURce ] :DM:EXTernal:POLarity?
```

This command sets the phase polarity for the I/Q signal.

***RST** NORM

Key Entry Int Phase Polarity Normal Invert

Remarks This command is for backward compatibility with the appropriate ESG E44xxB.

:DM:EXTernal:SOURce

Supported All

```
[ :SOURce ] :DM:EXTernal:SOURce EXTernal|INTernal|BBG1|EXT600|OFF|SUM
[ :SOURce ] :DM:EXTernal:SOURce?
```

This command selects the I/Q signal source that is routed to the rear panel I and Q output connectors.

EXTernal This choice routes a portion of the externally applied signals at the 50 ohm I and Q input connectors to the rear panel I and Q output connectors.

Digital Modulation Subsystem ([:SOURce])

INTernal	This choice is for backward compatibility with the appropriate ESG E44xxB and performs the same function as the BBG1 selection.
BBG1	This choice routes a portion of the baseband generator I/Q signals to the rear panel I and Q connectors and requires Option 001/601 or 002/602.
EXT600	This choice routes a portion of the externally applied signals at the 600 ohm I and Q input connectors to the rear panel I and Q output connectors.
OFF	This choice disables the output to the rear panel I and Q output connectors.
SUM	This choice routes a portion of the summed I/Q signals from source one and two, to the rear panel I and Q output connectors. See “:DM:SRATio” on page 33 for setting the summing ratio of the I/Q signals between source one and two.
*RST	EXT
Key Entry	Ext 50 Ohm BBG1 Ext 600 Ohm Off Sum
Remarks	The output is the analog component of the I and Q signals. For selecting the I/Q source, refer to “:DM:SOURce” on page 33

:DM:IQADjustment:EXTernal:COFFset

Supported	All
	[:SOURce] :DM: IQADjustment :EXTernal :COFFset <val> [:SOURce] :DM: IQADjustment :EXTernal :COFFset ?
	This command sets the common mode offset voltage for both the in-phase (I) and quadrature-phase (Q) signals going to the rear panel I and Q output connectors.
	The variable <val> is expressed in units of volts (mV–V).
*RST	+0.00000000E+000
Range	–3 to 3
Key Entry	Common Mode I/Q Offset
Remarks	This command is effective only if the state of the I/Q adjustment function is set to ON. Refer to “:DM:IQADjustment[:STATe]” on page 29.

:DM:IQADjustment:EXTernal:DIOFFset

Supported	All
	[:SOURce] :DM: IQADjustment :EXTernal :DIOFFset <val> [:SOURce] :DM: IQADjustment :EXTernal :DIOFFset ?

This command sets the differential offset voltage for an in-phase (I) signal routed to the I output connectors.

The variable <val> is expressed in units of volts (mV–V).

***RST** +0.00000000E+000

Range –3 to 3

Key Entry **Diff. Mode I Offset**

Remarks This command is effective only if the state of the I/Q adjustment function is set to ON. Refer to “:DM:IQADjustment[:STATe]” on page 29.

:DM:IQADjustment:EXTernal:DQOffset

Supported All

[:SOURce] :DM: IQADjustment :EXTernal :DQOffset <val>

[:SOURce] :DM: IQADjustment :EXTernal :DQOffset?

This command sets the differential offset voltage for a quadrature-phase (Q) signal routed to the Q output connectors.

***RST** +0.00000000E+000

Range –4 to 4

Key Entry **Diff. Mode Q Offset**

Remarks This command is effective only if the state of the I/Q adjustment function is set to ON. Refer to “:DM:IQADjustment[:STATe]” on page 29.

:DM:IQADjustment:EXTernal:GAIN

Supported All

[:SOURce] :DM: IQADjustment :EXTernal :GAIN <val>

[:SOURce] :DM: IQADjustment :EXTernal :GAIN?

This command sets the I/Q gain ratio for signals routed to the rear panel I and Q output connectors.

The variable <val> is expressed in units of decibels (dB).

***RST** +0.00000000E+000

Range –4 to 4

Key Entry **I/Q Out Gain Balance**

Remarks This command is effective only if the state of the I/Q adjustment function is set to

ON. Refer to “:DM:IQADjustment[:STATe]” on page 29.

:DM:IQADjustment:EXTernal:IOFFset

Supported All

[:SOURce] :DM:IQADjustment:EXTernal:IOFFset <val>

[:SOURce] :DM:IQADjustment:EXTernal:IOFFset?

This command sets the offset voltage for a signal applied to the 600 ohm I input connector.

The variable <val> is expressed in units of volts (mV–V).

***RST** +0.00000000E+000

Range –5 to 5

Key Entry Ext In 600 Ohm I Offset

Remarks This command is effective only if the state of the I/Q adjustment function is set to ON. Refer to “:DM:IQADjustment[:STATe]” on page 29.

:DM:IQADjustment:EXTernal:IQATten

Supported All

[:SOURce] :DM:IQADjustment:EXTernal:IQATten <val>

[:SOURce] :DM:IQADjustment:EXTernal:IQATten?

This command sets the I/Q output attenuation level.

The variable <val> is expressed in units of decibels (dB).

***RST** +6.00000000E+000

Range 0–40

Key Entry I/Q Output Atten

Remarks The value set by this command is active even if the I/Q adjustment function is off.

:DM:IQADjustment:EXTernal:QOFFset

Supported All

[:SOURce] :DM:IQADjustment:EXTernal:QOFFset <val>

[:SOURce] :DM:IQADjustment:EXTernal:QOFFset?

This command sets the offset voltage for a signal applied to the 600 ohm Q input connector.

The variable <val> is expressed in units of volts (mV–V).

*RST	+0.00000000E+000
Range	-5 to 5
Key Entry	Ext In 600 Ohm Q Offset
Remarks	This command is effective only if the state of the I/Q adjustment function is set to ON. Refer to “:DM:IQADjustment[:STATe]” on page 29.

:DM:IQADjustment:GAIN

Supported	All
[:SOURce]:DM:IQADjustment:GAIN <val>	
[:SOURce]:DM:IQADjustment:GAIN?	
This command sets the gain for the I signal relative to the Q signal.	
The variable <val> is expressed in units of decibels (dB).	
*RST	+0.00000000E+000
Range	-4 to 4
Key Entry	I/Q Gain Balance Source 1
Remarks	This command is effective only if the state of the I/Q adjustment function is set to ON. Refer to “:DM:IQADjustment[:STATe]” on page 29.

:DM:IQADjustment:IOFFset

Supported	All
[:SOURce]:DM:IQADjustment:IOFFset <val>	
[:SOURce]:DM:IQADjustment:IOFFset?	
This command adjusts the I channel offset value.	
The variable <val> is expressed in units of percent with a minimum resolution of 0.025.	
*RST	+0.00000000E+000
Range	-50.000 to 50.000
Key Entry	I Offset
Remarks	When using this command to minimize the LO feedthrough signal, optimum performance is achieved when the command is sent after all other I/Q path commands are executed, such as those that change the internal phase polarity or adjust the modulator attenuator. If other adjustments are made after minimizing is performed, the LO feedthrough signal may increase.

This command is effective only if the state of the I/Q adjustment function is set to ON. Refer to “:DM:IQADjustment[:STATE]” on page 29.

:DM:IQADjustment:QOFFset

Supported All

[:SOURCE] :DM:IQADjustment:QOFFset <val>

[:SOURCE] :DM:IQADjustment:QOFFset?

This command adjusts the Q channel offset value.

The variable <val> is expressed in units of percent with a minimum resolution of 0.025.

***RST** +0.00000000E+000

Range -50.000 to 50.000

Key Entry Q Offset

Remarks When using this command to minimize the LO feedthrough signal, optimum performance is achieved when the command is sent after all other I/Q path commands are executed, such as those that change the internal phase polarity or adjust the modulator attenuator. If other adjustments are made after minimizing is performed, the LO feedthrough signal may increase.

This command is effective only if the state of the I/Q adjustment function is set to ON. Refer to “:DM:IQADjustment[:STATE]” on page 29.

:DM:IQADjustment:QSKew

Supported All

[:SOURCE] :DM:IQADjustment:QSKew <val>

[:SOURCE] :DM:IQADjustment:QSKew?

This command adjusts the phase angle between the I and Q vectors.

The variable <val> is expressed in units of degrees with a minimum resolution of 0.1.

***RST** +0.00000000E+000

Range -10.0 to 10.0

Key Entry Quadrature Skew

Remarks If the signal generator is operating at frequencies greater than 3.3 GHz, quadrature skew settings greater than ± 5 degrees will not be within specifications.

Positive skew increases the angle from 90 degrees while negative skew decreases the angle from 90 degrees.

When the quadrature skew is zero, the phase angle is 90 degrees.

This command is effective only if the state of the I/Q adjustment function is set to ON. Refer to “:DM:IQADjustment[:STATe]” on page 29.

:DM:IQADjustment:SKEW

Supported All

```
[ :SOURce ] :DM :IQADjustment :SKEW <val><unit>
[ :SOURce ] :DM :IQADjustment :SKEW?
```

This command changes the input skew to the I and Q paths. Equal and opposite skew is applied to both paths (RF Output path and I/Q output paths) simultaneously. A positive value delays the I signal relative to the Q signal, and a negative value delays the Q signal relative to the I signal.

If the internal I/Q correction path is set to RF or BB the I/Q signals are already optimized and adjusting I/Q skew would add an impairment to the signals. If the internal I/Q correction path is set to Off, then adjusting the I/Q skew could improve the I/Q signals. The I/Q skew adjustment cannot be performed on the MSK, FSK, and C4FM constant envelope modulations.

I/Q skew adjustments are preserved when the instrument state is saved. I/Q skew adjustment are also preserved when instrument settings are changed. If the signal generator is calibrated, the skew adjustments are added to the calibration value used for the given signal generator state. If the signal generator is uncalibrated, the skew adjustments re applied directly.

Using I/Q skew while playing a user FIR file greater than 32 symbols will generate an error.

The variable <val> is expressed in units of picoseconds or nanoseconds.

***RST** +0.00000000E+000

Range -5.0 to 5.0

Key Entry I/Q Skew

Remarks N/A

:DM:IQADjustment[:STATe]

Supported All

```
[ :SOURce ] :DM :IQADjustment [ :STATe ] ON | OFF | 1 | 0
[ :SOURce ] :DM :IQADjustment [ :STATe ] ?
```

This command enables or disables the I/Q adjustments.

Digital Modulation Subsystem ([:SOURce])

*RST	0
Key Entry	I/Q Adjustments Off On
Remarks	N/A

:DM:MODulation:FILTer

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :DM:MODulation:FILTer 2.1e6 | 40e6 | THROugh
[ :SOURce ] :DM:MODulation:FILTer?
```

This command enables you to select a filter or through path for I/Q signals modulated onto the RF carrier. Selecting a filter with this command automatically sets “**:DM:MODulation:FILTer:AUTO**” to OFF(0).

2.1E6 This choice applies a 2.1 MHz baseband filter to the I/Q signals.

40E6 This choice applies a 40 MHz baseband filter to the I/Q signals.

THROugh This choice bypasses filtering.

***RST** THR

Key Entry 2.100 MHz 40.000 MHz Through

Remarks N/A

:DM:MODulation:FILTer:AUTO

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :DM:MODulation:FILTer:AUTO ON | OFF | 1 | 0
[ :SOURce ] :DM:MODulation:FILTer:AUTO?
```

This command enables or disables the automatic selection of the filters for I/Q signals modulated onto the RF carrier.

ON(1) This choice will automatically select a digital modulation filter.

OFF(0) This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “**:DM:MODulation:FILTer**” on page 30 for selecting a filter or through path.

***RST** 1

Key Entry I/Q Mod Filter Manual Auto

Remarks N/A

:DM:MODulation:ATTen

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :DM:MODulation:ATTen <val>
[ :SOURce ] :DM:MODulation:ATTen?
```

This command attenuates the I/Q signals being modulated through the signal generator RF path.

The variable <val> is expressed in units of decibels (dB).

***RST** +2.00000000E+000

Range 0–40

Key Entry Modulator Atten Manual Auto

Remarks N/A

:DM:MODulation:ATTen:AUTO

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :DM:MODulation:ATTen:AUTO ON|OFF|1|0
[ :SOURce ] :DM:MODulation:ATTen:AUTO?
```

This command enables or disables the I/Q attenuation auto mode.

ON (1) This choice enables the attenuation auto mode which optimizes the modulator attenuation for the current conditions.

OFF (0) This choice holds the attenuator at its current setting or at a selected value. Refer to “:DM:MODulation:ATTen” on page 31 for setting the attenuation value.

***RST** 1

Key Entry Modulator Atten Manual Auto

Remarks N/A

:DM:POLarity[:ALL]

Supported All

```
[ :SOURce ] :DM:POLarity[:ALL] NORMal|INVert
[ :SOURce ] :DM:POLarity?
```

This command sets the digital modulation phase polarity.

NORMal This choice selects normal phase polarity for the I and Q signals.

INVert This choice flips the I and Q signals by routing the I signal to the Q input of the

	I/Q modulator and the Q signal to the I input.
*RST	NORM
Key Entry	Int Phase Polarity Normal Invert
Remarks	N/A

:DM:SKEW:PATH

Supported	All
	[:SOURce] :DM:SKEW:PATH RF BB
	[:SOURce] :DM:SKEW:PATH?

This command selects the skew path.

RF	When RF is selected, the skew is optimized for the I/Q signal applied to the RF Output. The BB output will be functional, but the I/Q skew applied will be optimized for the RF path. When using this choice, seven symbols of latency are added to the Arb based waveform. While in real-time mode, the maximum number of user symbols for the FIR is limited to 32.
BB	When BB is selected, the skew is optimized for the I/Q signal outputs on the rear panel. The RF Output will be functional, but the I/Q skew applied will be optimized for the BB path. When using this choice, seven symbols of latency are added to the Arb based waveform. While in real-time mode, the maximum number of user symbols for the FIR is limited to 32.
*RST	INT
Key Entry	Int I/Q Skew Corrections RF BB Off
Remarks	N/A

:DM:SKEW[:STATe]

Supported	All
	[:SOURce] :DM:SKEW[:STATe] ON OFF 1 0
	[:SOURce] :DM:SKEW[:STATe]?

This command enables or disables the I/Q skew correction function.

*RST	1
Key Entry	Int I/Q Skew Corrections RF BB Off
Remarks	N/A

:DM:SOURce

Supported All

```
[ :SOURce ] :DM:SOURce [ 1 ] | 2  EXTERNAL | INTERNAL | BBG1 | EXT600 | OFF
[ :SOURce ] :DM:SOURce?
```

This command selects the I/Q modulator source.

EXTERNAL	This choice selects a 50 ohm impedance for the I and Q input connectors and routes the applied signals to the I/Q modulator.
INTERNAL	This choice is for backward compatibility with the appropriate ESG E44xxB and performs the same function as the BBG1 selection.
BBG1	This choice selects the baseband generator as the source for the I/Q modulator and requires Option 001/601 or 002/602.
EXT600	This choice selects a 600 ohm impedance for the I and Q input connectors and routes the applied signals to the I/Q modulator.
OFF	This choice disables the digital modulation source.
*RST	EXT
Key Entry	Ext 50 Ohm BBG1 Ext 600 Ohm Off
Remarks	N/A

:DM:SRATio

Supported All

```
[ :SOURce ] :DM:SRATio <val><unit>
[ :SOURce ] :DM:SRATio?
```

This command sets the power level difference (ratio) between the source one and source two signals when the two signals are summed together. A positive ratio value reduces the amplitude for source two, while a negative ratio value reduces the amplitude for source one.

The range for the summing ratio is dependent on the modulator attenuator (mod atten) setting for the signal generator that is summing the signals together. The minimum range is achieved when the modulator attenuator setting is zero and the maximum range is reached when the maximum attenuator value is used. The range can be calculated using the following formula:

$$\pm \text{Range} = 50 \text{ dB} + \text{Mod Atten}$$

***RST** +0.00000000E+000

Range *Min:* ± 50 dB *Max:* ± 90 dB

Digital Modulation Subsystem (:SOURce)

Key Entry	Summing Ratio (SRC1/SRC2) x.xx dB
Remarks	For real-time modulation format modulator attenuator settings, see “:DM:MODulation:ATTen” on page 31 and “:DM:MODulation:ATTen:AUTO” on page 31. For an Arb modulation format modulator attenuator setting, refer to the SCPI command subsystem for the Arb format being used and find the commands that contain the command mnemonics IQ:MODulation:ATTen.

:DM:STATe

Supported All

```
[ :SOURce ] :DM:STATe ON | OFF | 1 | 0
[ :SOURce ] :DM:STATe?
```

This command enables or disables the I/Q modulator.

- ON (1) This choice enables the internal I/Q modulator.
- OFF (0) This choice disables the internal I/Q modulator. You can turn off the I/Q modulation with this choice even though a digital modulation format is enabled. With this configuration, the RF output signal will not be modulated, but the I/Q signals may be present at the rear panel I and Q outputs depending on the rear panel output selection.

***RST** 0

Key Entry I/Q Off On

Remarks The I/Q modulator is enabled whenever a digital format is turned on.
The I/Q annunciator will be shown on the signal generator display whenever the I/Q modulator is on.

Frequency Subsystem ([:SOURce])

:FREQuency:CHANnels:BAND

Supported

All

```
[ :SOURce ] :FREQuency:CHANnels:BAND NBASe | NMOBile | BPGSm | MPGSm | BEGSm | MEGSm |
BRGSm | MRGSm | BDCS | MDCS | BPCS | MPCS | B450 | GM450 | B480 | M480 | B850 | M850 | B8 | M8 | B15
|M15 | B390 | B420 | B460 | B915 | M380 | M410 | M450 | M870 | PHS | DECT
[ :SOURce ] :FREQuency:CHANnels:BAND?
```

This command sets the frequency of the signal generator by specifying a frequency channel band.

NBASe	This choice selects Standard Base as the frequency band for NADC.
NMOBile	This choice selects Standard Mobile as the frequency band for NADC.
BPGSm	This choice selects P-Gsm 900 Base as the frequency band for GSM.
MPGSm	This choice selects P-Gsm 900 Mobile as the frequency band for GSM.
BEGSm	This choice selects E-Gsm 900 Base as the frequency band for GSM.
MEGSm	This choice selects E-Gsm 900 Mobile as the frequency band for GSM.
BRGSm	This choice selects R-Gsm 900 Base as the frequency band for GSM.
MRGSm	This choice selects R-Gsm 900 Mobile as the frequency band for GSM.
BDCS	This choice selects DCS 1800 Base as the frequency band for GSM.
MDCS	This choice selects DCS 1800 Mobile as the frequency band for GSM.
BPCS	This choice selects PCS 1900 Base as the frequency band for GSM.
MPCS	This choice selects PCS 1900 Mobile as the frequency band for GSM.
B450	This choice selects Gsm 450 Base as the frequency band for GSM.
GM450	This choice selects Gsm 450 Mobile as the frequency band for GSM.
B480	This choice selects Gsm 480 Base as the frequency band for GSM.
M480	This choice selects Gsm 480 Mobile as the frequency band for GSM.
B850	This choice selects Gsm 850 Base as the frequency band for GSM.
M850	This choice selects Gsm 850 Mobile as the frequency band for GSM.
B8	This choice selects 800MHz Base as the frequency band for PDC.

Basic Function Commands

Frequency Subsystem ([:SOURce])

M8	This choice selects 800MHz Mobile as the frequency band for PDC.
B15	This choice selects 1500MHz Base as the frequency band for PDC.
M15	This choice selects 1500MHz Mobile as the frequency band for PDC.
B390	This choice selects Base 390-400 as the frequency band for TETRA.
B420	This choice selects Base 420-430 as the frequency band for TETRA.
B460	This choice selects Base 460-470 as the frequency band for TETRA.
B915	This choice selects Base 915-921 as the frequency band for TETRA.
M380	This choice selects Mobile 380-390 as the frequency band for TETRA.
M410	This choice selects Mobile 410-420 as the frequency band for TETRA.
M450	This choice selects Mobile 450-460 as the frequency band for TETRA.
M870	This choice selects Mobile 870-876 as the frequency band for TETRA.
PHS	This choice selects Standard PHS as the frequency band.
DECT	This choice selects Standard DECT as the frequency band.

***RST**

BPGS

Key Entry

P-GSM Base	E-GSM Base	R-GSM Base	DCS Base
PCS Base	GSM 450 Base	GSM 480 Base	GSM 850 Base
NADC Base	800MHZ Base	1500MHZ Base	
Tetra Base 390/400	Tetra Base 420/430	Tetra Base 460/470	
Tetra Base 915/921	PHS Standard	DECT Standard	
P-GSM Mobile	E-GSM Mobile	R-GSM Mobile	DCS Mobile
PCS Mobile	GSM 450 Mobile	GSM 480 Mobile	GSM 850 Mobile
NADC Mobile	800MHZ Mobile	1500MHZ Mobile	
Tetra Mobile 380/390	Tetra Mobile 410/420	Tetra Mobile 450/460	
Tetra Mobile 870/876			

Remarks

The frequency channel state must be enabled for this command to work. Refer to “:FREQuency:CHANnels[:STATe]” on page 37.

:FREQuency:CHANnels:NUMBER

Supported All

[:SOURce] :FREQuency:CHANnels:NUMBER <number>
[:SOURce] :FREQuency:CHANnels:NUMBER?

This command sets the frequency of the signal generator by specifying a channel number of a given frequency band.

*RST	+1	
Range	P-GSM Base/Mobile:	1–24
	E-GSM and R-GSM Base/Mobile:	1–1023
	DCS Base/Mobile:	512–885
	PCS Base/Mobile:	512–900
	GSM-450 Base/Mobile:	259–293
	GSM-480 Base/Mobile:	306–340
	GSM-850 Base/Mobile:	128–251
	NADC Base/Mobile:	1–1023
	800MHZ Base/Mobile:	0–640
	1500MHZ Base/Mobile:	0–960
	TETRA 380/390 Mobile:	3600–4000
	TETRA 390/4000 Base:	3600–4000
	TETRA 410/420 Mobile:	800–1200
	TETRA 420/430 Base:	800–1200
	TETRA 460/470: 2400 through 2800	2400–2800
	TETRA 870/876 Mobile:	600–640
	TETRA 915/921 Base:	600–940
	PHS Standard:	1–255
	DECT Standard:	0–9

Key Entry **Channel Number**

Remarks The frequency channel state must be enabled for this command to work. Refer to “:FREQuency:CHANnels[:STATe]” on page 37.

:FREQuency:CHANnels[:STATe]

Supported All

[:SOURce] :FREQuency:CHANnels [:STATe] ON | OFF | 1 | 0

Basic Function Commands

Frequency Subsystem ([:SOURce])

[:SOURce] :FREQuency:CHANnels[:STATe] ?

This command enables or disables the frequency channel and band selection to set the output frequency.

***RST** 0

Key Entry Freq Channels Off On

Remarks To set frequency channels band refer to “[:FREQuency:CHANnels:BAND]” on page 35.

:FREQuency:FIXed

Supported All

[:SOURce] :FREQuency:FIXed <val><unit>

[:SOURce] :FREQuency:FIXed?

This command sets the signal generator output frequency.

***RST** *Option 501:* +10000000000000E+09

Option 502: +20000000000000E+09

Option 503: +30000000000000E+09

Option 504: +40000000000000E+09

Option 506: +60000000000000E+09

Range *Option 501:* 100kHz–1GHZ

Option 502: 100kHz–2GHZ

Option 503: 100kHz–3GHZ

Option 504: 100kHz–4GHZ

Option 506: 100kHz–6GHZ

Key Entry N/A

Remarks A frequency change may affect the current output power. Refer to “[:LEVel][:IMMediate][:AMPLitude]” on page 63 for the correct specified frequency and amplitude settings. To set the frequency mode refer to “[:FREQuency:MODE]” on page 38.

:FREQuency:MODE

Supported All

[:SOURce] :FREQuency:MODE CW|FIXed|LIST

[:SOURce] :FREQuency:MODE?

This command sets the frequency mode of the signal generator to CW or swept.

CW and FIXed	These choices are synonymous with one another and stops a frequency sweep, allowing the ESG to operate at a set frequency. Refer to “:FREQuency[:CW]” on page 42 for setting the frequency in the CW mode and to “:FREQuency:FIXed” on page 38 for setting the frequency in the FIXed mode.
LIST	This choice selects the swept frequency mode. If sweep triggering is set to immediate along with continuous sweep mode, executing the command starts the LIST or STEP frequency sweep.

NOTE To perform a frequency and amplitude sweep, you must also select LIST as the power mode. See “:MODE” on page 60 for selecting the list mode for an amplitude sweep.

*RST	CW
Key Entry	Frequency Freq Off
Remarks	N/A

:FREQuency:MULTiplier

Supported All

```
[ :SOURce ]:FREQuency:MULTiplier <val>
[ :SOURce ]:FREQuency:MULTiplier?
```

This command sets the multiplier for the signal generator carrier frequency.

*RST	+1.00000000E+000
Range	Negative Values: -100 to -.001 Positive Values: .001-1000
Key Entry	Freq Multiplier
Remarks	For any multiplier other than one, the MULT indicator is shown in the frequency area of the display.

:FREQuency:OFFSet

Supported All

```
[ :SOURce ]:FREQuency:OFFSet <val><unit>
[ :SOURce ]:FREQuency:OFFSet?
```

This command sets the frequency offset.

The query of this command returns a value equal to the original output frequency times the multiplier

Basic Function Commands

Frequency Subsystem ([:SOURce])

value, plus the frequency offset value.

***RST** +0.0000000000000E+00

Range -200GHZ to 200GHZ

Key Entry Freq Offset

Remarks When an offset has been entered, the OFFS indicator is turned on in the frequency area of the display.

The frequency offset state is turned on when any non-zero value is entered; entering zero will turn it off. Refer to “:FREQuency:OFFSet:STATe” for setting the offset state independent of entering offset values.

:FREQuency:OFFSet:STATe

Supported All

[:SOURce] :FREQuency:OFFSet:STATe ON|OFF|1|0

[:SOURce] :FREQuency:OFFSet:STATe?

This command enables or disables the offset frequency.

***RST** 0

Key Entry Freq Offset

Remarks Entering OFF (0) will set the frequency offset to 0 Hz.

:FREQuency:REFerence

Supported All

[:SOURce] :FREQuency:REFerence <val><unit>

[:SOURce] :FREQuency:REFerence?

This command sets the output reference frequency.

***RST** +0.0000000000000E+00

Range *Option 501:* 0HZ–1GHZ

Option 502: 0HZ–2GHZ

Option 503: 0HZ–3GHZ

Option 504: 0HZ–4GHZ

Option 506: 0HZ–6GHZ

Key Entry Freq Ref Set

Remarks N/A

:FREQuency:REFErence:STATe

Supported All

```
[ :SOURce ]:FREQuency:REFErence:STATe ON|OFF|1|0
[ :SOURce ]:FREQuency:REFErence:STATe?
```

This command enables or disables the frequency reference mode.

***RST** 0

Key Entry Freq Ref Off On

Remarks When the frequency reference mode is on, subsequent frequency parameters are set relative to the reference value.

:FREQuency:START

Supported All

```
[ :SOURce ]:FREQuency:START <val><unit>
[ :SOURce ]:FREQuency:START?
```

This command sets the first frequency point in a step sweep.

***RST** *Option 501: +10000000000000E+09*
Option 502: +20000000000000E+09
Option 503: +30000000000000E+09
Option 504: +40000000000000E+09
Option 506: +60000000000000E+09

Range *Option 501: 100kHz–1GHZ*
Option 502: 100kHz–2GHZ
Option 503: 100kHz–3GHZ
Option 504: 100kHz–4GHZ
Option 506: 100kHz–6GHZ

Key Entry Freq Start

Remarks N/A

:FREQuency:STOP

Supported All

```
[ :SOURce ]:FREQuency:STOP <val><unit>
```

Basic Function Commands

Frequency Subsystem ([:SOURce])

[:SOURce] :FREQuency :STOP?

This command sets the last frequency point in a step sweep.

*RST	<i>Option 501:</i> +10000000000000E+09 <i>Option 502:</i> +20000000000000E+09 <i>Option 503:</i> +30000000000000E+09 <i>Option 504:</i> +40000000000000E+09 <i>Option 506:</i> +60000000000000E+09
Range	<i>Option 501:</i> 100kHz–1GHZ <i>Option 502:</i> 100kHz–2GHZ <i>Option 503:</i> 100kHz–3GHZ <i>Option 504:</i> 100kHz–4GHZ <i>Option 506:</i> 100kHz–6GHZ
Key Entry	Freq Stop
Remarks	N/A

:FREQuency:SYNThesis

Supported All except Option UNJ

[:SOURce] :FREQuency :SYNThesis 1 | 2
[:SOURce] :FREQuency :SYNThesis?

This command sets the phase-lock loop (PLL) bandwidth to optimize phase noise for offsets above and below 10 kHz.

- | | |
|---|---|
| 1 | This choice will select mode 1 which optimize phase noise at offsets below 10 kHz. |
| 2 | This choice will select mode 2 which optimizes phase noise at offsets above 10 kHz. |

***RST** +1

Key Entry **Mode 1 Optimize <10kHz Offset** **Mode 2 Optimize >10kHz Offset**

Remarks N/A

:FREQuency[:CW]

Supported All

[:SOURce] :FREQuency [:CW] <val><unit>

[:SOURce] :FREQuency [:CW] ?

This command sets the signal generator output frequency for the CW frequency mode.

***RST** *Option 501:* +10000000000000E+09
 Option 502: +20000000000000E+09
 Option 503: +30000000000000E+09
 Option 504: +40000000000000E+09
 Option 506: +60000000000000E+09

Range *Option 501:* 100kHz–1GHZ
 Option 502: 100kHz–2GHZ
 Option 503: 100kHz–3GHZ
 Option 504: 100kHz–4GHZ
 Option 506: 100kHz–6GHZ

Key Entry **Frequency**

Remarks To set the frequency mode to CW, refer to “:FREQuency:MODE” on page 38.

:PHASe:REFerence

Supported All

[:SOURce] :PHASe :REFerence

This command sets the current output phase as a zero reference.

***RST** N/A

Range N/A

Key Entry **Phase Ref Set**

Remarks Subsequent phase adjustments are set relative to the new reference.

:PHASe[:ADJust]

Supported All

[:SOURce] :PHASe [:ADJust] <val><unit>

[:SOURce] :PHASe [:ADJust] ?

This command adjusts the phase of the modulating signal.

The query will only return values in radians.

Basic Function Commands

Frequency Subsystem ([:SOURce])

*RST	+0.00000000E+000
Range	<i>Radians:</i> -3.14 to 3.14RAD <i>Degrees:</i> -180 to 179DEG
Key Entry	Adjust Phase
Remarks	N/A

:ROSCillator:SOURce

Supported	All
------------------	-----

[:SOURce]:ROSCillator:SOURce?

This command queries the source of the reference oscillator. It returns either INT (internal) or EXT (external).

*RST	N/A
Range	N/A
Key Entry	N/A
Remarks	N/A

:ROSCillator:SOURce:AUTO

Supported	All except signal generators with Option UNJ
------------------	--

[:SOURce]:ROSCillator:SOURce:AUTO ON|OFF|1|0
[:SOURce]:ROSCillator:SOURce:AUTO?

This command enables or disables the ability of the signal generator to automatically select between the internal and an external reference oscillator.

ON (1) This choice enables the signal generator to detect when a valid reference signal is present at the 10 MHz IN connector and automatically switches from internal to external frequency reference.

OFF (0) This choice selects the internal reference oscillator and disables the switching capability between the internal and an external frequency reference.

*RST	1
Key Entry	Ref Oscillator Source Auto Off On
Remarks	N/A

List/Sweep Subsystem ([:SOURce])

To complete a sweep setup, requires commands from other subsystems. [Table 2-1](#) shows the function and location of these other commands.

Table 2-1 Location of Commands from the other Subsystems

Sweep Type	Function	Command Location	Key Entry under Sweep/List key
List and Step	Start/stop frequency sweep	“:FREQuency:MODE” on page 38	Freq Off
	Start/stop amplitude sweep	“:MODE” on page 60	Ampl Off
	Start/stop frequency and amplitude sweep ¹	“:MODE” on page 60 “:FREQuency:MODE” on page 38	Freq & Ampl Off
	Set up and control sweep triggering ²	“Trigger Subsystem” on page 161	See the “Trigger Subsystem”
Step	Start frequency sweep	“:FREQuency:START” on page 41	Freq Start
	Stop frequency sweep	“:FREQuency:STOP” on page 41	Freq Stop
	Start amplitude sweep	“:START” on page 61	Ampl Start
	Stop amplitude sweep	“:STOP” on page 62	Ampl Stop

1. Execute both commands to start or stop a frequency and amplitude sweep.
2. For point to point triggering, see “:LIST:TRIGger:SOURce” on page 50.

:LIST:DIRection

Supported All

```
[ :SOURce ] :LIST:DIRection UP|DOWN
[ :SOURce ] :LIST:DIRection?
```

This command sets the direction of a list or step sweep.

UP This choice enables a sweep in an ascending order:

- first to last point for a list sweep
- start to stop for a step sweep

Basic Function Commands

List/Sweep Subsystem (:SOURce)

DOWN	This choice reverses the direction of the sweep.
*RST	UP
Key Entry	Sweep Direction Down Up
Remarks	N/A

:LIST:DWELL

Supported All

```
[ :SOURce ] :LIST:DWELL <val> { , <val> }
```

```
[ :SOURce ] :LIST:DWELL ?
```

This command sets the dwell time for the current list sweep points.

The variable <val> is expressed in units of seconds with a 0.001 resolution.

NOTE The dwell time (<val>) does not begin until the signal generator has settled for the current frequency and/or amplitude change.

*RST N/A

Range 0.001–60

Key Entry N/A

Remarks Dwell time is used when IMMEDIATE is the trigger source. Refer to [“:LIST:TRIGGER:SOURce” on page 50](#) for the trigger setting.

The dwell time is the amount of time the sweep is guaranteed to pause after setting the frequency and/or power for the current point.

The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:LIST:DWELL:POINTS

Supported All

```
[ :SOURce ] :LIST:DWELL :POINTS ?
```

This command queries the signal generator for the number of dwell points in the current list sweep file.

*RST N/A

Range N/A

Key Entry N/A

Remarks N/A

:LIST:DWELL:TYPE

Supported All

[:SOURCE] :LIST:DWELL:TYPE LIST | STEP

[:SOURCE] :LIST:DWELL:TYPE?

This command toggles the dwell time for the list sweep points between the values defined in the list sweep and the value for the step sweep.

LIST This choice selects the dwell times from the list sweep. Refer to “:LIST:DWELL” on page 46 for setting the list dwell points.

STEP This choice selects the dwell time from the step sweep. Refer to “:SWEep:DWELL” on page 52 for setting the step dwell.

***RST** LIST

Key Entry Dwell Type List Step

Remarks N/A

:LIST:FREQuency

Supported All

[:SOURCE] :LIST:FREQuency <val>{ , <val> }

[:SOURCE] :LIST:FREQuency?

This command sets the frequency values for the current list sweep points.

The variable <val> is expressed in units of Hertz.

***RST** N/A

Range *Option 501:* 100E3–1E9

Option 502: 100E3–2E9

Option 503: 100E3–3E9

Option 504: 100E3–4E9

Option 506: 100E3–6E9

Key Entry N/A

Remarks The setting enabled by this command is not affected by signal generator

power-on, preset, or *RST.

The maximum number of list sweep points is 1,601.

:LIST:FREQuency:POINts

Supported All

[:SOURce] :LIST:FREQuency:POINts?

This command queries the current list sweep file for the number of frequency points.

***RST** N/A

Range N/A

Key Entry N/A

Remarks N/A

:LIST:MANual

Supported All

[:SOURce] :LIST:MANual <val>

[:SOURce] :LIST:MANual?

This command sets a list or step sweep point as the current sweep point controlling the frequency and power output.

***RST** N/A

Range *List Sweep:* 1–1601 *Step Sweep:* 2-65535

Key Entry **Manual Point**

Remarks If list or step mode is controlling frequency or power, or both, then the indexed point in the respective list(s) will be used.

Entering a value with this command will have no effect, unless MANual is the selected mode. Refer to “[:LIST:MODE](#)” on page 48 for setting the proper mode.

If the point selected is beyond the length of the longest enabled list, then the point will be set to the maximum possible point, and an error will be generated.

:LIST:MODE

Supported All

[:SOURce] :LIST:MODE AUTO|MANual

[:SOURce] :LIST:MODE?

This command sets the operating mode for the current list or step sweep.

AUTO	This choice enables the selected sweep type to perform a sweep of all points.
MANual	This choice enables you to select a single sweep point. The selected point controls the frequency and/or amplitude according to the sweep type. Refer to “[:LIST:MANual]” on page 48 for selecting a sweep point.
*RST	AUTO
Key Entry	Manual Mode Off On
Remarks	N/A

:LIST:POWer

Supported All

[:SOURce] :LIST:POWer <val>{ ,<val> }

[:SOURce] :LIST:POWer?

This command sets the amplitude for the current list sweep points.

***RST** N/A

Range Refer to [“\[:LEVel\]\[:IMMediate\]\[:AMPLitude\]” on page 63](#) for output power ranges.

Key Entry N/A

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

During an amplitude sweep operation, signal generators with Option UNB protect the step attenuator by automatically switching to attenuator hold (OFF) mode. The attenuator is locked at its current setting and the amplitude sweep range is limited to 40 dB.

The maximum number of list sweep points is 1,601.

:LIST:POWer:POINts

Supported All

[:SOURce] :LIST:POWer:POINts?

This command queries the number of power points in the current list sweep file.

Basic Function Commands

List/Sweep Subsystem ([:SOURce])

*RST	N/A
Range	N/A
Key Entry	N/A
Remarks	N/A

:LIST:RETRace

Supported	All
------------------	-----

```
[ :SOURce ] :LIST:RETRace ON|OFF|1|0  
[ :SOURce ] :LIST:RETRace?
```

This command resets the single sweep to the first sweep point, or leaves it at the last sweep point upon completion of the sweep operation.

On (1) The sweep resets to the first sweep point.

Off (0) The sweep stays at the last sweep point.

*RST	1
-------------	---

Key Entry	Sweep Retrace Off On
------------------	-----------------------------

Remarks	N/A
----------------	-----

:LIST:TRIGger:SOURce

Supported	All
------------------	-----

```
[ :SOURce ] :LIST:TRIGger:SOURce BUS|IMMEDIATE|EXTERNAL|KEY  
[ :SOURce ] :LIST:TRIGger:SOURce?
```

This command sets the point trigger source for a list or step sweep event.

BUS This choice enables GPIB triggering using the *TRG or GET command or LAN and RS-232 triggering using the *TRG command.

IMMEDIATE This choice enables immediate triggering of the sweep event.

EXTERNAL This choice enables the triggering of a sweep event by an externally applied signal at the TRIG IN connector.

KEY This choice enables triggering through front panel interaction by pressing the **Trigger** hardkey.

*RST	IMM
-------------	-----

Key Entry	Bus	Free Run	Ext	Trigger Key
------------------	------------	-----------------	------------	--------------------

Remarks To set the sweep trigger, see “:TRIGger[:SEQuence]:SOURce” on page 163.

:LIST:TYPE

Supported All

[:SOURce] :LIST:TYPE LIST|STEP

[:SOURce] :LIST:TYPE?

This command toggles between the two types of sweep.

LIST This type of sweep has arbitrary frequencies and amplitudes.

STEP This type of sweep has equally spaced frequencies and amplitudes.

***RST** STEP

Key Entry Sweep Type List Step

Remarks N/A

:LIST:TYPE:LIST:INITialize:FSTep

Supported All

CAUTION The current list sweep data will be overwritten once this command is executed. If needed, save the current data. Refer to “:STORe:LIST” on page 117 for storing list sweep files.

[:SOURce] :LIST:TYPE:LIST:INITialize:FSTep

This command replaces the loaded list sweep data with the settings from the current step sweep data points.

***RST** N/A

Range N/A

Key Entry Load List From Step Sweep

Remarks You can have only one sweep list at a time.

The maximum number of list sweep points is 1,601. When copying the step sweep settings over to a list sweep, ensure that the number of points in the step sweep do not exceed the maximum list sweep points.

:LIST:TYPE:LIST:INITialize:PRESet**Supported** All

CAUTION The current list sweep data will be overwritten once this command is executed. If needed, save the current data. Refer to “:STORe:LIST” on page 117 for storing list sweep files.

[:SOURce]:LIST:TYPE:LIST:INITialize:PRESet

This command replaces the current list sweep data with a factory-defined file consisting of one point at a frequency, amplitude, and dwell time.

RST** N/A**Range** N/A**Key Entry** Preset List**Remarks** N/A**:SWEep:DWELl*Supported** All

[:SOURce]:SWEep:DWELl <val>

[:SOURce]:SWEep:DWELl?

This command enables you to set the dwell time for a step sweep.

The variable <val> is expressed in units of seconds with a 0.001 resolution.

NOTE The dwell time (<val>) does not begin until the signal generator has settled for the current frequency and/or amplitude change.

***RST** +2.00000000E-003**Range** 0.001-60**Key Entry** Step Dwell**Remarks** Dwell time is used when the trigger source is set to IMMEDIATE. Refer to “:LIST:TRIGger:SOURce” on page 50 for the trigger setting.

The dwell time is the amount of time the sweep is guaranteed to pause after setting the frequency and/or power for the current point.

:SWEep:POINts

Supported All

[:SOURce] :SWEep:POINts <val>

[:SOURce] :SWEep:POINts?

This command defines the number of step sweep points.

***RST** 2

Range 2–65535

Key Entry # Points

Remarks N/A

Power Subsystem ([:SOURce]:POWer)

:ALC:BANDwidth

Supported All

```
[ :SOURce ] : POWer : ALC : BANDwidth | BWIDth NORMAl | NARROW  
[ :SOURce ] : POWer : ALC : BANDwidth | BWIDth?
```

This command sets the bandwidth of the automatic leveling control (ALC) loop.

NORMAl This choice enables the signal generator to automatically select the ALC bandwidth for the current test conditions.

NARROW This choice sets the narrowest possible ALC bandwidth and is useful when an external I/Q source is connected.

***RST** NORM

Key Entry ALC BW Normal Narrow

Remarks The bandwidth choices for this command are not effective if an internal I/Q source is being used.

:ALC:SEARCh

Supported All

```
[ :SOURce ] : POWer : ALC : SEARCh ON | OFF | 1 | 0 | ONCE  
[ :SOURce ] : POWer : ALC : SEARCh?
```

This command enables or disables the internal power search calibration. A power search is recommended for pulse-modulated signals with pulse widths less than one microsecond.

ON (1) This choice executes the power search automatically with each change in RF frequency or power.

OFF (0) This choice disables the automatic power search routine.

ONCE This choice executes a single power search of the current RF output signal.

***RST** 0

Key Entry Power Search Manual Auto Do Power Search

Remarks Use this command when the ALC state is set to OFF (0). Refer to “:ALC[:STATe]” on page 57 for setting the ALC state.

If ON was previously selected, executing ONCE will cause OFF to be the current selection after the power search is completed.

:ALC:SEARCh:REFeRence

Supported All

```
[ :SOURce ] :POWer :ALC :SEARCh :REFeRence FIXed |MODulated  
[ :SOURce ] :POWer :ALC :SEARCh :REFeRence?
```

This command sets either fixed or modulated modes of power search.

FIXed This choice uses a 0.5 volt reference.

MODulated This choice uses the RMS value of the current I/Q modulation.

***RST** MOD

Key Entry Power Search Reference Fixed Mod

Remarks N/A

:ALC:SEARCh:SPAN:START

Supported All

```
[ :SOURce ] :POWer :ALC :SEARCh :SPAN :START  
[ :SOURce ] :POWer :ALC :SEARCh :SPAN :START?
```

This command sets the start frequency for a span power search over a user specified range.

***RST** N/A

Range N/A

Key Entry Start Frequency

Remarks The start frequency has no default value. The start frequency value will be the last value set before powering off the instrument.

:ALC:SEARCh:SPAN:STOP

Supported All

```
[ :SOURce ] :POWER:ALC:SEARCh:SPAN:STOP  
[ :SOURce ] :POWER:ALC:SEARCh:SPAN:STOP?
```

This command sets the stop frequency for a span power search over a user specified range.

***RST** N/A

Range N/A

Key Entry Stop Frequency

Remarks The stop frequency has no default value. The stop frequency value will be the last value set before powering off the instrument.

:ALC:SEARCh:SPAN:TYPE

Supported All

```
[ :SOURce ] :POWER:ALC:SEARCh:SPAN:TYPE FULL|USER  
[ :SOURce ] :POWER:ALC:SEARCh:SPAN:TYPE?
```

This command enables you to select the frequency range for a span power search. You can specify the range (User) or you can select the full range (Full) of the signal generator.

***RST** N/A

Range N/A

Key Entry Span Type User Full

Remarks N/A

:ALC:SEARch:SPAN[:STATe]

Supported All

```
[ :SOURce ] :POWer :ALC :SEARch :SPAN [ :STATe ] ON | OFF | 1 | 0
[ :SOURce ] :POWer :ALC :SEARch :SPAN [ :STATe ] ?
```

This command enables (1) or disables (0) the span mode, allowing you to perform power searches over a selected range of frequencies. The power search corrections are then stored and used whenever the signal generator is tuned within the selected range.

***RST** N/A

Range N/A

Key Entry N/A

Remarks N/A

:ALC[:STATe]

Supported All

```
[ :SOURce ] :POWer :ALC [ :STATe ] ON | OFF | 1 | 0
[ :SOURce ] :POWer :ALC [ :STATe ] ?
```

This command enables or disables the automatic leveling control (ALC) circuit.

***RST** 1

Key Entry ALC Off On

Remarks The purpose of the ALC circuit is to hold output power at the desired level in spite of drift due to temperature and time.

:ALternate:AMPLitude

Supported All except signal generators with Option UNB or 506.

```
[ :SOURce ] :POWer :ALternate :AMPLitude <val>
[ :SOURce ] :POWer :ALternate :AMPLitude ?
```

This command sets the delta value for the alternate amplitude.

The variable <val> is expressed in units of decibels (dB).

***RST** +0.00000000E+000

Range -156 to 156

Key Entry Alt Amp Delta

Remarks The actual RF output amplitude is equal to the Alternate Amplitude Delta value plus the RF output amplitude; this sum cannot exceed the minimum and maximum amplitude limits of the signal generator. For example, if the Alternate Amplitude Delta is set to -156 dB and the RF output amplitude is set to 20 dB, the sum is equal to -136 dB.

:ALternate:MANual

Supported All

```
[ :SOURce ] :POWer:ALternate:MANual MAIN|DELTA
[ :SOURce ] :POWer:ALternate:MANual?
```

This command toggles the alternate amplitude manual trigger source between main and alternate (delta).

MAIN The main power is present at the RF output.

DELTA The alternate power is present at the RF output.

***RST** MAIN

Key Entry Manual Trigger Main Delta

Remarks This command is effective only if MANual is the selection for the trigger source. Refer to “:ALternate:TRIGger[:SOURce]” on page 59 for more information.

:ALternate:STATe

Supported All

```
[ :SOURce ] :POWer:ALternate:STATe ON|OFF|1|0
[ :SOURce ] :POWer:ALternate:STATe?
```

This command enables or disables the alternate amplitude.

***RST** 0

Key Entry Alt Ampl Off On

Remarks N/A

:ALternate:TRIGger[:SOURce]

Supported All

```
[ :SOURce ] :POWER:ALternate:TRIGger [ :SOURce ] INTernal | EXTernal | MANual  
[ :SOURce ] :POWER:ALternate:TRIGger [ :SOURce ] ?
```

This command sets the trigger source for the alternate amplitude signal.

INTernal	This choice requires a baseband generator option. Each timeslot is allowed to output power with a user-selected main or alternate amplitude.
EXTernal	This choice requires an external trigger to the TRIG IN rear panel connector to toggle the RF output power between main and alternate amplitudes.
MANual	This choice enables the RF output power to be toggled between main and alternate amplitudes.
*RST	MAN
Key Entry	Int Ext Manual
Remarks	N/A

:ATTenuation:AUTO

Supported All

```
[ :SOURce ] :POWER:ATTenuation:AUTO ON | OFF | 1 | 0  
[ :SOURce ] :POWER:ATTenuation:AUTO ?
```

This command sets the state of the attenuator hold function.

ON (1)	This choice enables the attenuator to operate normally.
OFF (0)	This choice holds the attenuator at its current setting or at a selected value that will not change during power adjustments.
*RST	1
Key Entry	Atten Hold Off On
Remarks	<p>The OFF (0) choice eliminates the power discontinuity normally associated with the attenuator switching during power adjustments.</p> <p>During an amplitude sweep operation, signal generators with Option UNB protect the step attenuator by automatically switching to attenuator hold (OFF) mode. The attenuator is locked at its current setting and the amplitude sweep range is limited to 40 dB.</p>

:MODE

Supported All

[:SOURce] :POWer :MODE FIXed | LIST

[:SOURce] :POWer :MODE?

This command sets the signal generator power mode to fixed or swept.

FIXed This choice stops a power sweep, allowing the signal generator to operate at a fixed power level. Refer to “[:LEVel][:IMMediate][:AMPLitude]” on page 63 for setting the output power level.

LIST This choice selects the swept power mode. If sweep triggering is set to immediate along with continuous sweep mode, executing the command starts the LIST or STEP power sweep.

NOTE To perform a frequency and amplitude sweep, you must also select LIST as the frequency mode. See “:FREQuency:MODE” on page 38 for selecting the list mode for a frequency sweep.

***RST** FIX

Key Entry Amplitude Ampl Off

Remarks N/A

:REFerence

Supported All

[:SOURce] :POWer :REFerence <val><unit>

[:SOURce] :POWer :REFerence?

This command sets the power level for the signal generator RF output reference.

***RST** +0.00000000E+000

Range -400 to 300DBM

Key Entry Ampl Ref Set

Remarks The RF output power is referenced to the value entered in this command.

:REFeRence:STATe

Supported All

```
[ :SOURce ] :POWer :REFeRence :STATe ON | OFF | 1 | 0
[ :SOURce ] :POWer :REFeRence :STATe ?
```

This command enables or disables the RF output reference.

ON(1) This choice will set the power reference state to ON. The unit displayed for commands, “:ANNOtation:AMPLitude:UNIT” on page 80 and “:POWer” on page 164 will be expressed in DB.

OFF(0) This choice will set the power reference state to OFF.

***RST** 0

Key Entry **Ampl Ref Off On**

Remarks Once the reference state is ON, all subsequent output power settings are set relative to the reference value.

Amplitude offsets can be used with the amplitude reference mode.

:START

Supported All

```
[ :SOURce ] :POWer :START <val><unit>
[ :SOURce ] :POWer :START ?
```

This command sets the first amplitude point in a step sweep.

***RST** -1.35000000E+002

Range Refer to “[:LEVel][:IMMediate][:AMPLitude]” on page 63 for the output power ranges.

Key Entry **Ampl Start**

Remarks During an amplitude sweep operation, signal generators with Option UNB protect the step attenuator by automatically switching to attenuator hold (ON) mode. The attenuator is locked at its current setting and the amplitude sweep range is limited to 40 dB.

:STOP**Supported** All

[:SOURce]:POWer:STOP <val><unit>

[:SOURce]:POWer:STOP?

This command sets the last amplitude point in a step sweep.

RST** -1.35000000E+002**Range** Refer to “[[:LEVel][:IMMediate][:AMPLitude]” on page 63 for the output power ranges.**Key Entry** **Ampl Stop*Remarks** During an amplitude sweep operation, signal generators with Option UNB protect the step attenuator by automatically switching to attenuator hold (ON) mode. The attenuator is locked at its current setting and the amplitude sweep range is limited to 40 dB.**[:LEVel][:IMMediate]:OFFSet****Supported** All

[:SOURce]:POWer[:LEVel][:IMMediate]:OFFSet <val><unit>

[:SOURce]:POWer[:LEVel][:IMMediate]:OFFSet?

This command sets the power offset value.

RST** +0.00000000E+000**Range** -200DB to 200DB**Key Entry** **Ampl Offset*Remarks** This simulates a power level at a test point beyond the RF OUTPUT connector without changing the actual RF output power. The offset value only affects the displayed amplitude setting.

You can enter an amplitude offset any time in either normal operation or amplitude reference mode.

[[:LEVel]][:IMMediate]][:AMPLitude]

Supported All

```
[ :SOURce ]:POWer[ :LEVel ][ :IMMediate ][ :AMPLitude ] <val><unit>
[ :SOURce ]:POWer[ :LEVel ][ :IMMediate ][ :AMPLitude ]?
```

This command sets the RF output power.

***RST** -1.35000000E+002

Range	<i>Frequency</i>	<i>Standard</i>	<i>Option UNB</i>	<i>Option 506</i>
	250kHz–1GHZ	-136 to 13DBM	-136 to 17DBM	-136 to 14DBM
	> 1–3GHZ	-136 to 10DBM	-136 to 16DBM	-136 to 13DBM
	> 3–4GHZ	-136 to 7DBM	-136 to 13DBM	-136 to 10DBM
	> 4–6GHZ	N/A	N/A	-136 to 10DBM

Key Entry **Amplitude**

Remarks The ranges for this command are specified values from the data sheet.

Pulse Subsystem ([:SOURce]:PULSe)

:FREQuency:STEP

Supported All

[:SOURce] :PULSe :FREQuency :STEP [:INCRement] freq

[:SOURce] :PULSe :FREQuency :STEP [:INCRement] ?

This command sets the step increment for the pulse frequency.

***RST** +1.00000000E+005

Range 0–100

Key Entry N/A

Remarks N/A

3 System Commands

This chapter provides SCPI descriptions for subsystems dedicated to peripheral signal generator operations common to all ESG models. This chapter contains the following major sections:

- “Calibration Subsystem (:CALibration)” on page 66
- “Communication Subsystem (:SYSTem:COMMunicate)” on page 70
- “Diagnostic Subsystem (:DIAGnostic[:CPU]:INFORMation)” on page 76
- “Display Subsystem (:DISPlay)” on page 80
- “IEEE 488.2 Common Commands” on page 84
- “Memory Subsystem (:MEMory)” on page 91
- “Mass Memory Subsystem (:MMEMory)” on page 118
- “Output Subsystem (:OUTPut)” on page 124
- “Route Subsystem (:ROUte:HARDware:DGENerator)” on page 126
- “Status Subsystem (:STATus)” on page 132
- “System Subsystem (:SYSTem)” on page 149
- “Trigger Subsystem” on page 161
- “Unit Subsystem (:UNIT)” on page 164

Calibration Subsystem (:CALibration)

:DCFM

Supported All

:CALibration:DCFM

This command initiates a DCFM or DC Φ M calibration depending on the currently active modulation. This calibration eliminates any dc or modulation offset of the carrier signal.

NOTE If the calibration is performed with a dc signal applied, any deviation provided by the dc signal will be removed and the new zero reference point will be at the applied dc level. The calibration will have to be performed again when the dc signal is disconnected to reset the carrier signal to the correct zero reference.

***RST** N/A

Range N/A

Key Entry DCFM/DCFM Cal

Remarks Use this calibration for externally applied signals. While the calibration can also be performed for internally generated signals, dc offset is not a normal characteristic for them.

:IQ

Supported All

:CALibration:IQ

This command initiates an I/Q calibration.

***RST** N/A

Range N/A

Key Entry Execute Cal

Remarks N/A

:IQ:DC

Supported All

`:CALibration:IQ:DC`

This command performs a one to two second adjustment that is not traceable to a standard. However, it will minimize errors associated with offset voltages. This adjustment minimizes errors for the current signal generator setting and at a single frequency. The DC adjustment is volatile and must be repeated with each signal generator setting change. This command can be sent while the RF On/Off is set to Off and the adjustment will still be valid when the RF is enabled.

The I/Q DC adjustment is dependent upon a number of instrument settings. If any of the instrument settings change, the adjustment will become invalid. The dependent instrument settings are:

- RF frequency
- I/Q attenuation level
- Baseband generator settings
- I/Q polarity settings
- Baseband filter settings
- Path settings (Internal I/Q Mux Path 1 or Path 2)
- I/Q calibration (the I/Q DC calibration will be invalidated if any other I/Q calibration is executed or if the **Revert to Factory Default** key is pressed)
- Temperature (± 5 degrees)

The following instrument states will not invalidate the I/Q DC calibration:

- Power level changes
- I/Q Impairments

***RST** N/A

Key Entry **Execute Cal** (with **Calibration Type User Full** set to DC)

Remarks N/A

:IQ:DEfault

Supported All

`:CALibration:IQ:DEfault`

This command will restore the original factory calibration data for the internal I/Q modulator.

***RST** N/A

Range N/A

Calibration Subsystem (:CALibration)

Key Entry Revert to Default Cal Settings

Remarks N/A

:IQ:FULL

Supported All

:CALibration:IQ:FULL

This command performs an adjustment to the I/Q offset, gain and quadrature for the full-frequency range (regardless of the start and stop frequency settings) and stores the results in the signal generator's firmware.

***RST** N/A

Range N/A

Key Entry Execute Cal (with **Calibration Type User Full** set to Full)

Remarks Start and stop frequencies will default to the full frequency range of the signal generator.

:IQ:START

Supported All

:CALibration:IQ:START <val><unit>

:CALibration:IQ:START?

This command sets the start frequency and automatically sets the calibration type to User for an I/Q calibration.

***RST** N/A

Range Option 501: 100kHz–1GHz
 Option 502: 100kHz–2GHz
 Option 503: 100kHz–3GHz
 Option 504: 100kHz–4GHz
 Option 506: 100kHz–6GHz

Key Entry Start Frequency

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:IQ:STOP

Supported All

:CALibration:IQ:STOP <val><unit>

:CALibration:IQ:STOP?

This command sets the stop frequency and automatically sets the calibration type to User for an I/Q calibration.

***RST** N/A

Range Option 501: 100kHz–1GHz
Option 502: 100kHz–2GHz
Option 503: 100kHz–3GHz
Option 504: 100kHz–4GHz
Option 506: 100kHz–6GHz

Key Entry Stop Frequency

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

Communication Subsystem (:SYSTem:COMMunicate)

:GPIB:ADDRes

Supported All

```
:SYSTem:COMMunicate:GPIB:ADDRes <number>
```

```
:SYSTem:COMMunicate:GPIB:ADDRes?
```

This command sets the signal generator's GPIB address.

***RST** N/A

Range 0–30

Key Entry GPIB Address

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:GTLocal

Supported All

```
:SYSTem:COMMunicate:GTLocal
```

This command sets the signal generator to local mode from remote mode, enabling front panel operation.

***RST** N/A

Range N/A

Key Entry Local

Remarks N/A.

:LAN:GATEway

Supported All

```
:SYSTem:COMMunicate:LAN:GATEway "<ipstring>"
```

```
:SYSTem:COMMunicate:LAN:GATEway?
```

This command sets the gateway for local area network (LAN) access to the signal generator from outside the current sub-network.

*RST	N/A
Range	N/A
Key Entry	Default Gateway
Remarks	Using an empty string restricts access to the signal generator to local hosts on the LAN.

:LAN:HOSTname

Supported	All
:SYSTem:COMMunicate:LAN:HOSTname "<string>"	
:SYSTem:COMMunicate:LAN:HOSTname?	
This command sets the signal generator's local area network (LAN) connection hostname.	
*RST	N/A
Range	N/A
Key Entry	Hostname
Remarks	The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:LAN:IP

Supported	All
:SYSTem:COMMunicate:LAN:IP "<ipstring>"	
:SYSTem:COMMunicate:LAN:IP?	
This command sets the signal generator's local area network (LAN) internet protocol (IP) address for your IP network connection.	
*RST	N/A
Range	N/A
Key Entry	IP Address
Remarks	The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:LAN:SUBNet

Supported	All
------------------	-----

Communication Subsystem (:SYSTEM:COMMunicate)

```
:SYSTEM:COMMunicate:LAN:SUBNet "<ipstring>"
:SYSTEM:COMMunicate:LAN:SUBNet?
```

This command sets the signal generator's local area network (LAN) subnet mask address for your internet protocol (IP) network connection.

*RST	N/A
Range	N/A
Key Entry	Subnet Mask
Remarks	The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:PMETer:ADDRess

```
Supported All
:SYSTEM:COMMunicate:PMETer:ADDRess
:SYSTEM:COMMunicate:PMETer:ADDRess?
```

This command sets the address for a power meter that is controlled by the signal generator.

*RST	N/A
Range	0–30
Key Entry	Meter Address
Remarks	The setting enabled by this command is not affected by signal generator power-on, preset, or *RST. The power meter is controlled only through a GPIB cable. Ensure that the power meter address is different from the signal generator address.

:PMETer:CHANnel

```
Supported All
:SYSTEM:COMMunicate:PMETer:CHANnel A|B
:SYSTEM:COMMunicate:PMETer:CHANnel?
```

This command sets the measurement channel on the power meter that is controlled by the signal generator.

*RST	N/A
Key Entry	Meter Channel A B

Remarks A single-channel power meter uses channel A and selecting channel B will have no effect.

 The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

 The power meter is controlled only through a GPIB cable.

:PMETer:IDN

Supported All

```
:SYSTem:COMMunicate:PMETer:IDN E4418B|E4419B|E4416A|E4417A
:SYSTem:COMMunicate:PMETer:IDN?
```

This command sets the model number of the power meter that is controlled by the signal generator.

***RST** N/A

Key Entry **Power Meter**

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

 The power meter is controlled only through a GPIB cable.

:PMETer:TIMEout

Supported All

```
:SYSTem:COMMunicate:PMETer:TIMEout <num>[<time suffix>]
:SYSTem:COMMunicate:PMETer:TIMEout?
```

This command sets the period of time which the signal generator will wait for a valid reading from the power meter.

The variable <num> has a resolution of 0.001.

***RST** N/A

Range 1mS–100S

Key Entry **Meter Timeout**

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

 The power meter is controlled only through a GPIB cable.

 If a time-out occurs, the signal generator reports an error message.

:SERial:BAUD**Supported** All

:SYSTEM:COMMunicate:SERial:BAUD <number>

:SYSTEM:COMMunicate:SERial:BAUD?

This command sets the baud rate for the rear panel RS-232 interface labeled RS-232.

RST** N/A**Key Entry** RS-232 Baud Rate**Remarks** The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.**:SERial:ECHO*Supported** All

:SYSTEM:COMMunicate:SERial:ECHO ON|OFF

:SYSTEM:COMMunicate:SERial:ECHO?

This command enables or disables the RS-232 echo.

RST** N/A**Key Entry** RS-232 ECHO Off On**Remarks** The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.**:SERial:RESet*Supported** All

:SYSTEM:COMMunicate:SERial:RESet

This event command resets the RS-232 buffer and will discard any unprocessed SCPI input received by the RS-232 port.

***RST** N/A**Range** N/A**Key Entry** Reset RS-232**Remarks** N/A

:SERial:TOUT

Supported All

:SYSTem:COMMunicate:SERial:TOUT <val>

:SYSTem:COMMunicate:SERial:TOUT?

This command sets the RS-232 serial port time-out value.

If further input is not received within the time-out period specified, while a SCPI command is being processed, the command is aborted and the input buffer is cleared.

The variable <val> is entered in units of seconds.

***RST** N/A

Range 1–25

Key Entry RS-232 Timeout

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

Diagnostic Subsystem (:DIAGnostic[:CPU]:INFORMATION)

:BOARDs

Supported All

:DIAGnostic[:CPU]:INFORMATION:BOARDs?

This query returns a list of the installed boards in the signal generator. The information will be returned in the following format:

"<board name,part number,serial number,version number,status>"

This information format will repeat with as many iterations as the number of detected boards in the signal generator.

***RST** N/A

Range N/A

Key Entry Installed Board Info

Remarks N/A

:CCOunt:ATTenuator

Supported All

:DIAGnostic[:CPU]:INFORMATION:CCOunt:ATTenuator?

This query returns the cumulative number of times that the attenuator has been switched.

***RST** N/A

Range N/A

Key Entry Diagnostic Info

Remarks N/A

:CCOunt:PON

Supported All

:DIAGnostic[:CPU]:INFORMATION:CCOunt:PON?

This query returns the cumulative number of times the signal generator has been powered-on.

*RST	N/A
Range	N/A
Key Entry	Diagnostic Info
Remarks	N/A

:CCOut:PROTECTION

Supported All

:DIAGnostic[:CPU]:INFORMATION:CCOut:PROTECTION?

This query returns the cumulative number of times the reverse power protection has been cycled.

*RST	N/A
Range	N/A
Key Entry	Diagnostic Info
Remarks	N/A

:DISPlay:OTIME

Supported All

:DIAGnostic[:CPU]:INFORMATION:DISPlay:OTIME?

This query returns the cumulative number of hours the display has been on.

*RST	N/A
Range	N/A
Key Entry	Diagnostic Info
Remarks	N/A

:OPTions

Supported All

:DIAGnostic[:CPU]:INFORMATION:OPTions?

This query returns a list of internally installed signal generator options.

*RST	N/A
Range	N/A

Diagnostic Subsystem (:DIAGnostic[:CPU]:INFORMATION)

Key Entry **Options Info**

Remarks N/A

:OPTions:DETail

Supported All

`:DIAGnostic[:CPU]:INFORMATION:OPTions:DETail?`

This query returns the options that are installed along with the option revision and DSP version if applicable.

***RST** N/A

Range N/A

Key Entry **Options Info**

Remarks N/A

:OTIME

Supported All

`:DIAGnostic[:CPU]:INFORMATION:OTIME?`

This query returns the cumulative number of hours that the signal generator has been on.

***RST** N/A

Range N/A

Key Entry **Diagnostic Info**

Remarks N/A

:REVISION

Supported All

`:DIAGnostic[:CPU]:INFORMATION:REVISION?`

This query returns the CPU bootstrap read only memory (boot ROM) revision date. In addition, the query returns the revision, creation date, and creation time of the main firmware.

***RST** N/A

Range N/A

Key Entry **Diagnostic Info**

Remarks N/A

:SDATE

Supported All

:DIAGnostic[:CPU]:INFORMATION:SDATE?

This query returns the date and time of the main firmware.

***RST** N/A

Range N/A

Key Entry Diagnostic Info

Remarks N/A

Display Subsystem (:DISPlay)

:ANNotation:AMPLitude:UNIT

Supported All

```
:DISPlay:ANNotation:AMPLitude:UNIT DBM|DBUV|DBUVEFMF|V|VEMF|DB  
:DISPlay:ANNotation:AMPLitude:UNIT?
```

This command sets the displayed front panel amplitude units.

If the amplitude reference state is set to on, the query returns units expressed in DB. Setting any other unit will cause a setting conflict error stating that the amplitude reference state must be set to off. Refer to, “[:REFerence:STATE](#)” on page 61 for more information.

***RST** DBM

Key Entry N/A

Remarks N/A

:ANNotation:CLOCK:DATE:FORMat

Supported All

```
:DISPlay:ANNotation:CLOCK:DATE:FORMat MDY|DMY  
:DISPlay:ANNotation:CLOCK:DATE:FORMat?
```

This command enables the selection of the date format. The choices are month-day-year (MDY) or day-month-year (DMY) format.

***RST** N/A

Key Entry N/A

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:ANNotation:CLOCK[:STATe]

Supported All

```
:DISPlay:ANNotation:CLOCK[:STATe] ON|OFF|1|0  
:DISPlay:ANNotation:CLOCK[:STATe]?
```

This command enables or disables the digital clock view in the lower right side of the front panel

display.

***RST** N/A

Key Entry N/A

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:BRIGhtness

Supported All

:DISPlay:BRIGhtness <value>

:DISPlay:BRIGhtness?

This command sets the display brightness (intensity). The brightness can be set to the minimum level (0.02), maximum level (1), or in between by using fractional numeric values (0.03–0.99).

***RST** N/A

Range 0.02–1

Key Entry **Brightness**

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:CAPTure

Supported All

:DISPlay:CAPTure

This event command enables the user to capture the current display and store it in the signal generator's memory.

***RST** N/A

Range N/A

Key Entry N/A

Remarks The display capture is stored as DISPLAY.BMP in the Binary file system. This file is overwritten with each subsequent display capture. The file can be down-loaded in the following manner:

1. Log on to the signal generator using ftp.
2. Change (cd) to the BIN directory.

3. Retrieve the file by using the get command.

:CONTrast

Supported All

:DISPlay:CONTrast <value>

:DISPlay:CONTrast?

This command sets the contrast of the LCD display. The contrast can be set to the maximum level (1), minimum level (0), or in between by using fractional numeric values (0.001–0.999).

***RST** N/A

Range 0–1

Key Entry Display contrast hardkeys are located below the display.

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:INVerse

Supported All

:DISPlay:INVerse ON|OFF|1|0

:DISPlay:INVerse?

This command sets the display of the source to inverse video mode.

***RST** N/A

Key Entry Inverse Video Off On

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:REMOte

Supported All

:DISPlay:REMOte ON|OFF|1|0

:DISPlay:REMOte?

This command enables or disables the display updating when the signal generator is remotely controlled.

ON (1) This choice updates the signal generator display so you can see the settings as the commands are executed, however, this will degrade the signal generator speed.

OFF (0)	This choice turns off the display updating while further optimizing the signal generator for speed.
*RST	N/A
Key Entry	Update in Remote Off On
Remarks	The setting enabled by this command is not affected by signal generator preset or *RST. However, cycling the signal generator power will reset it to zero.

[:WINDow][:STATe]

Supported All

:DISPlay[:WINDow][:STATe] ON|OFF|1|0

:DISPlay[:WINDow][:STATe]?

This command is used to either blank out (OFF or 0) the display screen or turn it on (ON or 1).

*RST N/A

Key Entry N/A

Remarks The setting enabled by this command is not affected by *RST. However, presetting the signal generator or cycling the power will turn the display on.

IEEE 488.2 Common Commands

*CLS

Supported All

*CLS

The Clear Status (CLS) command clears the Status Byte Register, the Data Questionable Event Register, the Standard Event Status Register, the Standard Operation Status Register and any other registers that are summarized in the status byte.

***RST** N/A

Range N/A

Key Entry N/A

Remarks N/A

*ESE

Supported All

*ESE <data>

The Standard Event Status Enable (ESE) command sets the Standard Event Status Enable Register.

The variable <data> represents the sum of the bits that will be enabled.

***RST** N/A

Range 0–255

Key Entry N/A

Remarks The setting enabled by this command is not affected by signal generator preset or *RST. However, cycling the signal generator power will reset this register to zero. Refer to chapter 3 of the *Programming Guide* for more information.

*ESE?

Supported All

*ESE?

The Standard Event Status Enable (ESE) query returns the value of the Standard Event Status Enable

Register.

***RST** N/A

Range N/A

Key Entry N/A

Remarks Refer to chapter 3 of the *Programming Guide* for more information.

*ESR?

Supported All

CAUTION This is a destructive read. The data in the register is latched until it is queried. Once queried, the data is cleared.

*ESR?

The Standard Event Status Register (ESR) query returns the value of the Standard Event Status Register.

***RST** N/A

Range N/A

Key Entry N/A

Remarks Refer to chapter 3 of the *Programming Guide* for more information.

*IDN?

Supported All

*IDN?

The Identification (IDN) query outputs an identifying string. The response will show the following information:

`<company name>, <model number>, <serial number>, <firmware revision>`

***RST** N/A

Range N/A

Key Entry Diagnostic Info

Remarks The identification information can be modified. Refer to [“:IDN” on page 151](#) for more information.

OPC*Supported** All

*OPC

The Operation Complete (OPC) command sets bit 0 in the Standard Event Status Register when all pending operations have finished.

RST** N/A**Range** N/A**Key Entry** N/A**Remarks** N/AOPC?****Supported** All

*OPC?

The Operation Complete (OPC) query returns the ASCII character 1 in the Standard Event Status Register when all pending operations have finished.

RST** N/A**Range** N/A**Key Entry** N/A**Remarks** N/APSC****Supported**

*PSC ON|OFF|1|0

The Power-On Status Clear (PSC) command controls the automatic power-on clearing of the Service Request Enable Register, the Standard Event Status Enable Register, and device-specific event enable registers.

ON (1) This choice enables the power-on clearing of the listed registers.

OFF (0) This choice disables the clearing of the listed registers and they retain their status when a power-on condition occurs.

***RST** N/A**Key Entry** N/A

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

*PSC?

Supported All

*PSC?

The Power-On Status Clear (PSC) query returns the flag setting as enabled by the *PSC command.

***RST** N/A

Range N/A

Key Entry N/A

Remarks N/A

*RCL

Supported All

*RCL <reg> , <seq>

The Recall (RCL) command recalls the state from the specified memory register <reg> of the specified sequence <seq>.

***RST** N/A

Range *Registers: 0–99 Sequences: 0–9*

Key Entry **RECALL Reg Select Seq:**

Remarks N/A

*RST

Supported All

*RST

The Reset (RST) command resets most signal generator functions to factory-defined conditions.

***RST** N/A

Range N/A

Key Entry N/A

Remarks Each command shows the *RST value if the setting is affected.

*SAV

Supported All

*SAV <reg> , <seq>

The Save (SAV) command saves the state of the signal generator to the specified memory register <reg> of the specified sequence <seq>.

***RST** N/A

Range Registers: 0–99 Sequences: 0–9

Key Entry Save Reg Save Seq[n] Reg[nn]

Remarks N/A

*SRE

Supported All

*SRE <data>

The Service Request Enable (SRE) command sets the value of the Service Request Enable Register.

The variable <data> is the decimal sum of the bits that will be enabled. Bit 6 (value 64) is ignored and cannot be set by this command.

***RST** N/A

Range 0–255

Key Entry N/A

Remarks Refer to chapter 3 of the *Programming Guide* for more information.

Entering values from 64 to 127 is equivalent to entering values from 0 to 63.

The setting enabled by this command is not affected by signal generator preset or *RST. However, cycling the signal generator power will reset it to zero.

*SRE?

Supported All

*SRE?

The Service Request Enable (SRE) query returns the value of the Service Request Enable Register.

***RST** N/A

Range 0–63 or 128–191

Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

***STB?**

Supported	All
------------------	-----

*STB?

The Read Status Bye (STB) query returns the value of the status byte including the master summary status (MSS) bit.

*RST	N/A
-------------	-----

Range	0–255
--------------	-------

Key Entry	N/A
------------------	-----

Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.
----------------	--

***TRG**

Supported	All
------------------	-----

*TRG

The Trigger (TRG) command triggers the device if BUS is the selected trigger source, otherwise, *TRG is ignored.

*RST	N/A
-------------	-----

Range	N/A
--------------	-----

Key Entry	N/A
------------------	-----

Remarks	N/A
----------------	-----

***TST?**

Supported	All
------------------	-----

*TST?

The Self-Test (TST) query initiates the internal self-test and returns one of the following results:

0	This shows that all tests passed.
---	-----------------------------------

1	This shows that one or more tests failed.
---	---

*RST	N/A
-------------	-----

Range	N/A
Key Entry	Run Complete Self Test
Remarks	N/A

***WAI**

Supported	All
------------------	-----

*WAI

The Wait-to-Continue (WAI) command causes the signal generator to wait until all pending commands are completed, before executing any other commands.

*RST	N/A
-------------	-----

Range	N/A
--------------	-----

Key Entry	N/A
------------------	-----

Remarks	N/A
----------------	-----

Memory Subsystem (:MEMory)

:CATalog:BINary

Supported All

:MEMory:CATalog:BINary?

This command outputs a list of the binary files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry **Binary**

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:BIT

Supported All with Option 001/601 or 002/602

:MEMory:CATalog:BIT?

This command outputs a list of the bit files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry **Bit**

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:CDMa

Supported All with Option 401

:MEMory:CATalog:CDMa?

This command outputs a list of the arbitrary waveform CDMA files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry CDMA

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:DMOD

Supported All with Option 001/601 or 002/602

:MEMory:CATalog:DMOD?

This command outputs a list of the arbitrary waveform digital modulation files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry DMOD

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:DWCDma

Supported All with Option 400

:MEMory:CATalog:DWCDma?

This command outputs a list of the arbitrary waveform downlink W-CDMA files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry DWCDMA

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:FCDMa

Supported All with Option 401

:MEMory:CATalog:FCDMa?

This command outputs a list of the arbitrary waveform forward link cdma2000 files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry FCDMA

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:FIR

Supported All with Option 001/601 or 002/602

:MEMory:CATalog:FIR?

This command outputs a list of the finite impulse response filter files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry FIR

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:FSK

Supported All with Option 001/601 or 002/602

:MEMory:CATalog:FSK?

This command outputs a list of the FSK files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry FSK

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:IQ

Supported All with Option 001/601 or 002/602

:MEMory:CATalog:IQ?

This command outputs a list of the IQ files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry I/Q

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:LIST

Supported All

:MEMory:CATalog:LIST?

This command outputs a list of the list sweep files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry List

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:MCDMa

Supported All with Option 401

Memory Subsystem (:MEMory)

```
:MEMory:CATalog:MCDMa?
```

This command outputs a list of the arbitrary waveform multicarrier IS-95 CDMA files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry MCDMA

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:MDMod

Supported All with Option 001/601 or 002/602

```
:MEMory:CATalog:MDMod?
```

This command outputs a list of the arbitrary waveform multicarrier digital modulation files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry MDMOD

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:MDWCdma

Supported All with Option 400

```
:MEMory:CATalog:MDWCdma?
```

This command outputs a list of the arbitrary waveform multicarrier downlink W-CDMA files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry MDWCDMA

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:MFCdma

Supported All with Option 401

```
:MEMory:CATalog:MFCdma?
```

This command outputs a list of the arbitrary waveform multicarrier forward link cdma2000 files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry MFCDMA

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:MTONe

Supported All with Option 001/601 or 002/602

```
:MEMory:CATalog:MTONe?
```

This command outputs a list of the arbitrary waveform multitone files. The return data will be in the

System Commands

Memory Subsystem (:MEMory)

following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry MTONE

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:RCDMa

Supported All with Option 401

```
:MEMory:CATalog:RCDMa?
```

This command outputs a list of the arbitrary waveform files for reverse link cdma2000. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry RCDMA

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:SEQ

Supported All with Option 001/601 or 002/602

```
:MEMory:CATalog:SEQ?
```

This command outputs a list of the arbitrary waveform sequence files. The return data will be in the following form:


```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry SEQ

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:SHAPE

Supported All with Option 001/601 or 002/602

```
:MEMory:CATalog:SHAPE?
```

This command outputs a list of the burst shape files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

***RST** N/A

Range N/A

Key Entry SHAPE

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:STATe

Supported All

```
:MEMory:CATalog:STATe?
```

This command outputs a list of the state files. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

Memory Subsystem (:MEMory)

"<file name,file type,file size>"

***RST** N/A

Range N/A

Key Entry State

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:UFLT

Supported All

:MEMory:CATalog:UFLT?

This command outputs a list of the user-flatness correction files. The return data will be in the following form:

<mem used>,<mem free>{,"<file listing>"}

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

"<file name,file type,file size>"

***RST** N/A

Range N/A

Key Entry User Flatness

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:CATalog:UWCDma

Supported All with Option 400

:MEMory:CATalog:UWCDma?

This command outputs a list of the arbitrary waveform uplink W-CDMA files. The return data will be in the following form:

<mem used>,<mem free>{,"<file listing>"}

The signal generator will return the two memory usage parameters and as many file listings as there are files in the directory list. Each file listing parameter will be in the following form:

"<file name,file type,file size>"

*RST	N/A
Range	N/A
Key Entry	UWCDMA
Remarks	Refer to “File Name Variables” on page 13 for information on the file name syntax.

:CATalog[:ALL]

Supported All

:MEMory:CATalog[:ALL]?

This command outputs a list of all the files in the memory subsystem. However it does not include files stored on the Option 001/601 or 002/602 baseband generator. The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the memory subsystem. Each file listing parameter will be in the following form:

```
"<file name,file type,file size>"
```

*RST	N/A
Range	N/A
Key Entry	All
Remarks	Refer to Table 3-1 on page 118 for a listing of the file types and “File Name Variables” on page 13 for information on the "<file name>" syntax.

:COPY[:NAME]

Supported All

:MEMory:COPY[:NAME] "<file name>","<file name>"

This command makes a duplicate of the requested file.

*RST	N/A
Range	N/A
Key Entry	Copy File
Remarks	Refer to “File Name Variables” on page 13 for information on the file name syntax.

When copying a waveform file from volatile to non-volatile memory, the marker and header files associated with the waveform file will automatically be copied at the same time.

:DATA

Supported All

```
:MEMory:DATA "<file name>", <datablock>
```

```
:MEMory:DATA? "<file name>"
```

This command creates a user data file and stores it in the signal generator non-volatile binary memory catalog.

<file name> This variable represents the file name for the user file being stored in the signal generator non-volatile memory.

<datablock> This variable represents the block-formatted data.

Example:

```
:MEMory:DATA "userfile", #1912S407897
```

userfile This is the user file as it appears in the signal generator.

1 This variable defines the number of decimal digits to follow.

9 This variable defines how many bytes of data are to follow.

12S407897 This example is an ASCII representation of the data that is downloaded to the signal generator. Refer to the *ESG Programming Guide* for more information.

***RST** N/A

Range N/A

Key Entry N/A

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:DATA:APPend

Supported All

```
:MEMory:DATA:APPend "<file name>", <datablock>
```

This commands appends new data to an existing binary user file stored in non-volatile signal generator memory.

<file name> This variable represents the name of the existing user file.

<datablock> This variable represents the block-formatted data.

Example:

```
:MEMory:DATA:APPend "userfile", #141249
```

userfile This name represents the user file name as it appears in the signal generator.

1 This variable defines the number of decimal digits to follow.

4 This variable defines how many bytes of data are to follow.

1249 This example is an ASCII representation of the data that is downloaded to the signal generator. Refer to the *ESG Programming Guide* for more information.

***RST** N/A

Range N/A

Key Entry N/A

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:DATA:BIT

Supported All with Option 001/601 or 002/602

```
:MEMory:DATA:BIT "<file name>", <bit_count>, <datablock>
```

```
:MEMory:DATA:BIT? "<file name>"
```

This command creates a bit file and stores it in the signal generator non-volatile memory.

"<file name>" This variable represents the user file name as it will appear in the signal generator memory.

<bit_count> This variable represents the number of significant bits in the data block.

<datablock> This variable represents the block-formatted data.

Example:

```
:MEMory:DATA:BIT "userfile1", 16, #12Qz
```

"userfile1" This is the name of the user file as it appears in the signal generator.

16 This variable defines the actual number of data bits contained in the datablock.

1 This variable defines the number of decimal digits to follow.

2 This variable defines how many bytes of data are to follow.

Qz This variable defines the ASCII representation of the 16 bits of data that are

Memory Subsystem (:MEMory)

downloaded to the signal generator. Refer to the *ESG Programming Guide* for more information.

***RST** N/A

Range N/A

Key Entry N/A

Remarks Refer to “[File Name Variables](#)” on page 13 for information on the file name syntax.

:DATA:FIR

Supported All with Option 001/601 or 002/602

```
:MEMory:DATA:FIR "<file name>",osr,coefficient{,coefficient}
```

```
:MEMory:DATA:FIR? "<file name>"
```

This command creates a user-defined finite impulse response (FIR) file and stores it in the signal generator non-volatile memory.

osr The oversample ratio (osr) is the number of filter taps per symbol.

coefficient This variable is the FIR coefficient. The maximum total number of coefficients is 1024.

{,coefficient} This optional variable is used when you enter additional coefficients.

***RST** N/A

Range osr: 1–32
coefficient: –1000 to 1000

Key Entry Oversample Ratio

Remarks Refer to “[File Name Variables](#)” on page 13 for information on the file name syntax.

:DATA:FSK

Supported All with Option 001/601 or 002/602

```
:MEMory:DATA:FSK "<file name>",<num_states>,<f0>,<f1>,...<f(n)>
```

```
[,<diff_state>,<num_diff_states>,<diff1>,...<diff(n)>]
```

```
:MEMory:DATA:FSK? "<file name>"
```

This command creates a custom FSK file and stores it in the signal generator non-volatile memory.

The query returns data in the following form:

<num_states>, <f0>, <f1>, ... <f(n)>, <diff_state>, <num_diff_states>, <diff1>, ... <diff(n)>

"<file name>" This variable string identifies the name of the FSK file.

<num_states> This variable identifies the number of frequency states.

<f0> This variable identifies the value of the first frequency state.

<f1>, ... <f(n)> This variable identifies the value of the second and subsequent frequency states with a frequency resolution of 0.1Hz.

<diff_state> This variable enables or disables differential encoding.

<num_diff_states> This variable identifies the number of differential states.

<diff0> This variable identifies the value of the first differential state.

<diff1>, ... <diff(n)> This variable identifies the value of the second and subsequent differential states.

The following example creates and stores a four-level FSK file named 4FSK that has four states (frequencies): -2kHz, -1kHz, 2kHz, 1kHz; differential encoding is toggled ON, and there are two differential states 1 and 0.

```
:MEM:DATA:FSK "4FSK",4,-2kHz,-1kHz,2kHz,1kHz,ON,2,1,0
*RST N/A
```

Range num_diff_states: 0–256
num_states: 2–16
f0–f(n): -20MHZ to 20MHZ
diff0–diff(n): -128 to 127

Key Entry N/A

Remarks N/A

:DATA:IQ

Supported All with Option 001/601 or 002/602

```
:MEMory:DATA:IQ "<file name>",<offsetQ>,<num_states>,<i0>,<q0>,<i1>,<q1>,...<i(n)>,<q(n)>
[,<diff_state>,<num_diff_states>,<diff0>,<diff1>,...<diff(n)>]
:MEMory:DATA:IQ? "<file name>"
```

This command creates a custom I/Q file and stores it in the signal generator non-volatile memory.

Memory Subsystem (:MEMory)

The query returns data in the following form:

```
<offsetQ>, <num_states>, <i0>, <q0>, <i1>, <q1>, ... <i(n)>, <q(n)>, <diff_state>
, <num_diff_states>, <diff0>, <diff1>, ... <diff(n)>
```

"<file name>"	This variable string identifies the name of the I/Q file.
<offsetQ>	This variable enables or disables the Q output delay by 1/2 symbol from the I output.
<num_states>	This variable identifies the number of symbols.
<i0>...<i(n)>	This variable identifies the I value of the first and subsequent I symbols.
<q0>...<q(n)>	This variable identifies the Q value of the first and subsequent Q symbols.
<diff_state>	This variable enables and disables differential encoding.
<num_diff_states>	This variable identifies the number of differential states.
<diff0>	This variable identifies the value of the first differential state.
<diff1,...diff(n)>	This variable identifies the value of the second and subsequent differential states.

The following example creates and stores a two-symbol I/Q file named `testBPSK` that has the Q offset.

```
:MEM:DATA:IQ "testBPSK",1,2,1,0,0,0
```

*RST	N/A
Range	num_states: 2–256 i0–i(n): –1 to 1 q0–q(n): –1 to 1 num_diff_states: 0–256 diff0–diff(n): –128 to 127
Key Entry	N/A
Remarks	N/A

:DATA:PRAM?

Supported All with Option 001/601 or 002/602

```
:MEMory:DATA:PRAM?
```

This query determines whether there is a user-defined pattern in the pattern RAM (PRAM).

***RST** 0

Range	N/A
Key Entry	N/A
Remarks	N/A

:DATA:PRAM:BLOCK

Supported All with Option 001/601 or 002/602

```
:MEMory:DATA:PRAM:BLOCK <datablock>
```

This command downloads the block-formatted data directly into pattern RAM.

***RST** N/A

Range N/A

Key Entry N/A

Remarks N/A

:DATA:PRAM:LIST

Supported All with Option 001/601 or 002/602

```
:MEMory:DATA:PRAM:LIST <uint8>[ ,<uint8>,<...>]
```

This command downloads the list-formatted data directly into pattern RAM.

<uint8> This variable is any of the valid 8-bit, unsigned integer values between 0 and 255.

[,<uint8>,<...>] This variable identifies the value of the second and subsequent 8-bit unsigned integer variables.

***RST** N/A

Range 0–255

Key Entry N/A

Remarks N/A

:DATA:SHAPE

Supported All with Option 001/601 or 002/602

```
:MEMory:DATA:SHAPE <"filename">,<num_rise_points>,<rp0>,<rp1>,  
...<num_fall_points>,<fp0>,<fp1>,...<fp(n)>  
:MEMory:DATA:SHAPE? <"filename">
```

Memory Subsystem (:MEMory)

This command creates a new burst shape file and stores it in the signal generator non-volatile memory.

"<file name>"	This variable string identifies the name of the burst shape file.
num_rise_points	This variable specifies how many rise points used in the command.
rp0,...rp(n)	This variable defines each successive rise point, where 0 is no power and 1 is full power.
num_fall_points	This variable specifies how many fall points used in the command.
fp0,...fp(n)	This variable defines each successive fall point, where 0 is no power and 1 is full power.
*RST	N/A
Range	num_rise_points: 2–256 num_fall_points: 2–256 rp0–rp(n): 0.0–1.0 fp0–fp(n): 0.0–1.0
Key Entry	N/A
Remarks	N/A

:DElete:ALL

Supported All

CAUTION Using this command deletes all user files including binary, list, state, and flatness correction files, and any saved setups which use the front panel table editor. However, this does not include files stored on the Option 001/601 or 002/602 baseband generator. You cannot recover the files after executing this command.

:MEMory:DElete:ALL

This command clears the file system of all user files.

*RST	N/A
Range	N/A
Key Entry	Delete All Files
Remarks	N/A

:DElete:BINary

Supported All

:MEMory:DElete:BINary

This command deletes all binary files.

*RST	N/A
Range	N/A
Key Entry	Delete All Binary Files
Remarks	N/A

:DElete:BIT

Supported All with Option 001/601 or 002/602

:MEMory:DElete:BIT

This command deletes all bit files.

*RST	N/A
Range	N/A
Key Entry	Delete All Bit Files
Remarks	N/A

:DElete:CDMa

Supported All with Option 401

:MEMory:DElete:CDMa

This command deletes all arbitrary waveform IS-95 CDMA files.

*RST	N/A
Range	N/A
Key Entry	Delete All ARB CDMA Files
Remarks	N/A

:DElete:DMOD

Supported All with Option 001/601 or 002/602

:MEMory:DElete:DMOD

This command deletes all arbitrary waveform digital modulation files.

*RST	N/A
-------------	-----

Memory Subsystem (:MEMory)

Range	N/A
Key Entry	Delete All ARB DMOD Files
Remarks	N/A

:DElete:DWCDma

Supported All with Option 400

:MEMory:DELeTe:DWCDma

This command deletes all arbitrary waveform downlink W-CDMA files.

*RST	N/A
Range	N/A
Key Entry	Delete All ARB DWCDMA Files
Remarks	N/A

:DElete:FCDMa

Supported All with Option 401

:MEMory:DELeTe:FCDMa

This command deletes all arbitrary waveform forward link W-CDMA files.

*RST	N/A
Range	N/A
Key Entry	Delete All ARB FCDMA Files
Remarks	N/A

:DElete:FIR

Supported All with Option 001/601 or 002/602

:MEMory:DELeTe:FIR

This command deletes all finite impulse response filter files.

*RST	N/A
Range	N/A
Key Entry	Delete All FIR Files

Remarks N/A

:DElete:FSK

Supported All with Option 001/601 or 002/602

:MEMory:DELeTe:FSK

This command deletes all FSK files.

***RST** N/A

Range N/A

Key Entry Delete All FSK Files

Remarks N/A

:DElete:IQ

Supported All with Option 001/601 or 002/602

:MEMory:DELeTe:IQ

This command deletes all I/Q files.

***RST** N/A

Range N/A

Key Entry Delete All I/Q Files

Remarks N/A

:DElete:LIST

Supported All

:MEMory:DELeTe:LIST

This command deletes all List files.

***RST** N/A

Range N/A

Key Entry Delete All List Files

Remarks N/A

:DELeTe:MCDMa

Supported All with Option 401

:MEMory:DELeTe:MCDMa

This command deletes all arbitrary waveform multicarrier IS-95 CDMA files.

***RST** N/A

Range N/A

Key Entry Delete All ARB MCDMA Files

Remarks N/A

:DELeTe:MDMod

Supported All with Option 001/601 or 002/602

:MEMory:DELeTe:MDMod

This command deletes all arbitrary waveform multicarrier digital modulation files.

***RST** N/A

Range N/A

Key Entry Delete All ARB MDMOD Files

Remarks N/A

:DELeTe:MDWCdma

Supported All with Option 400

:MEMory:DELeTe:MDWCdma

This command deletes all arbitrary waveform multicarrier downlink W-CDMA files.

***RST** N/A

Range N/A

Key Entry Delete All ARB MDWCdma Files

Remarks N/A

:DELeTe:MFCdma

Supported All with Option 401

:MEMory:DELeTe:MFCdma

This command deletes all arbitrary waveform multicarrier forward link cdma2000 files.

*RST	N/A
Range	N/A
Key Entry	Delete All ARB MFCDMA Files
Remarks	N/A

:DELeTe:MTONE

Supported All with Option 001/601 or 002/602

:MEMory:DELeTe:MTONE

This command deletes all arbitrary waveform multitone files.

*RST	N/A
Range	N/A
Key Entry	Delete All ARB MTONE Files
Remarks	N/A

:DELeTe:RCDMa

Supported All with Option 401

:MEMory:DELeTe:RCDMa

This command deletes all arbitrary waveform reverse link cdma2000 files.

*RST	N/A
Range	N/A
Key Entry	Delete All ARB RCDMA Files
Remarks	N/A

:DELeTe:SEQ

Supported All with Option 001/601 or 002/602

:MEMory:DELeTe:SEQ

This command deletes all sequence files.

Memory Subsystem (:MEMory)

*RST	N/A
Range	N/A
Key Entry	Delete All Sequence Files
Remarks	N/A

:DElete:SHAPE

Supported All with Option 001/601 or 002/602

:MEMory:DELeTe:SHAPE

This command deletes all burst shape files.

*RST	N/A
Range	N/A
Key Entry	Delete All Shape Files
Remarks	N/A

:DElete:STATE

Supported All

:MEMory:DELeTe:STATE

This command deletes all state files.

*RST	N/A
Range	N/A
Key Entry	Delete All State Files
Remarks	N/A

:DElete:UFLT

Supported All

:MEMory:DELeTe:UFLT

This command deletes all user-flatness correction files.

*RST	N/A
Range	N/A

Key Entry Delete All UFLT Files

Remarks N/A

:DELeTe:UWCDma

Supported All with Option 400

:MEMory:DELeTe:UWCDma

This command deletes all arbitrary waveform uplink W-CDMA files.

***RST** N/A

Range N/A

Key Entry Delete All ARB UWCDMA Files

Remarks N/A

:DELeTe[:NAME]

Supported All

:MEMory:DELeTe[:NAME] "<file name>"

This command clears the user file system of "<file name>".

***RST** N/A

Range N/A

Key Entry Delete File

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

When deleting a waveform (WFM1) file from memory, the marker and headers file associated with the waveform file will also be deleted.

:FREE[:ALL]

Supported All

:MEMory:FREE[:ALL]?

This command returns the number of bytes left in the user file system.

***RST** N/A

Range N/A

Memory Subsystem (:MEMory)

Key Entry	All
Remarks	N/A

:LOAD:LIST

Supported	All
:MEMory:LOAD:LIST "<file name>"	
This command loads a list sweep file.	
*RST	N/A
Range	N/A
Key Entry	Load From Selected File
Remarks	N/A

:MOVE

Supported	All
:MEMory:MOVE "<src_file>", "<dest_file>"	
This command renames the requested file in the memory catalog.	
*RST	N/A
Range	N/A
Key Entry	Rename File
Remarks	Refer to “File Name Variables” on page 13 for information on the file name syntax.

:STATE:COMMENT

Supported	All
:MEMory:STATE:COMMENT <reg_num>, <seq_num>, "<comment>"	
:MEMory:STATE:COMMENT? <reg_num>, <seq_num>	
This command lets you to add a descriptive comment to the saved state <reg_num>, <seq_num>. Comments can be up to 55 characters long.	
*RST	N/A
Range	N/A

Key Entry **Add Comment To Seq[n] Reg[nn]**

Remarks N/A

:STORe:LIST

Supported All

:MEMory:STORe:LIST "<file name>"

This command stores the current list sweep data to a file.

***RST** N/A

Range N/A

Key Entry **Store To File**

Remarks N/A

Mass Memory Subsystem (:MMEMory)

:CATalog

Supported All

```
:MMEMory:CATalog? "<msus>"
```

This command outputs a list of the files from the specified file system.

The variable "<msus>" (mass storage unit specifier) represents "<file system>:". The file systems and types are shown in [Table 3-1](#).

Table 3-1

File System	File Type
BINARY	BIN
BIT	BIT
CDMA	CDMA
DMOD - ARB digital modulation file	DMOD
DWCDMA - ARB downlink W-CDMA file	DWCD
FCDMA - ARB forward link cdma2000 file	FCDM
FIR - finite impulse response filter file	FIR
FSK - frequency shift keying modulation file	FSK
I/Q - modulation file	IQ
LIST - sweep list file	LIST
MCDMA - ARB multicarrier CDMA file	MCDM
MDMOD - ARB multicarrier digital modulation file	MDM
MDWCDMA - ARB multicarrier downlink W-CDMA file	MDWC
MFCDMA - ARB multicarrier forward link cdma2000 file	MFCD
MTONE - ARB multitone file	MTON

Table 3-1

File System	File Type
NVMKR - non-volatile arbitrary waveform marker file	NVMKR
NVWFM - non-volatile arbitrary waveform file	NVWFM
RCDMA - ARB reverse link cdma2000 file	RCDM
SEQ - ARB sequence file	SEQ
SHAPE - burst shape file	SHAP
STATE	STAT
USERFLAT - user-flatness file	UFLT
UWCDMA - ARB uplink W-CDMA file	UWCD
WFM1 - waveform file	WFM1

The return data will be in the following form:

```
<mem used>,<mem free>{,"<file listing>"}
```

The signal generator will return the two memory usage parameters and as many file listings as there are files in the specified file system. Each file listing will be in the following format:

```
"<file name>,file type,file size"
```

*RST	N/A									
Key Entry	Binary	List	State	User Flatness	FIR	Shape	Bit	FSK		
	IQ	Seq	DMOD	MTONE	MDMOD	CDMA	MCDMA	FCDMA		
	MFCDMA	RCDMA	WCDMA	FWCDMA	MFWCDMA	RWCDMA				
	DWCDMA	MDWCDMA	UWCDMA	WFM1	NVMKR	NVWFM				
Remarks	Refer to “ MSUS (Mass Storage Unit Specifier) Variable ” on page 14 for information on the use of the "<msus>" variable.									

:COPY

Supported All

```
:MMEMory:COPY "<file name>","<file name>"
```

This command makes a duplicate of the requested file.

Mass Memory Subsystem (:MMEMory)

*RST	N/A
Key Entry	Copy File
Remarks	Refer to “File Name Variables” on page 13 for information on the file name syntax. When copying a waveform file from volatile to non-volatile memory, the marker and header files associated with the waveform file will automatically be copied at the same time.

:DATA

Supported	All
	<code>:MMEMory:DATA "<file name>" ,<datablock></code> <code>:MMEMory:DATA? "<file name>"</code>
	This command loads <datablock> into the memory location "<file name>". The query returns the <datablock> associated with the "<file name>".
*RST	N/A
Key Entry	N/A
Remarks	Refer to “File Name Variables” on page 13 for information on the file name syntax.

:DELeTe:NVWFm

Supported	All with Option 001/601 or 002/602
	<code>:MMEMory:DELeTe:NVWFm</code>
	This command clears the user file system of all non-volatile arbitrary waveform files.
*RST	N/A
Key Entry	Delete All NVWFM Files
Remarks	N/A

:DELeTe:WFM

Supported	All with Option 001/601 or 002/602
	<code>:MMEMory:DELeTe:WFM</code>
	This command clears the user file system of all arbitrary waveform files.

*RST	N/A
Key Entry	Delete All WFM1 Files
Remarks	This command performs the same function as DELEte:WFM1.

:DELEte:WFM1

Supported	All with Option 001/601 or 002/602
------------------	------------------------------------

:MMEMory:DELEte:WFM1

This command clears the user file system of all arbitrary waveform files.

*RST	N/A
Key Entry	Delete All WFM1 Files
Remarks	This command performs the same function as DELEte:WFM.

:DELEte[:NAME]

Supported	All
------------------	-----

:MMEMory:DELEte[:NAME] "<file name>" [, "<msus>"]

This command clears the user file system of "<file name>" with the option of specifying the file system separately.

The variable "<msus>" (mass storage unit specifier) represents "<file system>:". For a list of the file systems refer to [Table 3-1 on page 118](#).

*RST	N/A
Range	N/A
Key Entry	Delete File
Remarks	If the optional variable "<msus>" is omitted, the file name needs to include the file system extension. Refer to “File Name Variables” on page 13 and “MSUS (Mass Storage Unit Specifier) Variable” on page 14 for information on the use of the file variables. When deleting a waveform file from memory, the marker and headers file associated with the waveform file will also be deleted.

:HEADer:CLEAr

Supported	All
------------------	-----

System Commands

Mass Memory Subsystem (:MMEMory)

```
:MMEMory:HEADer:CLEAr "<file name>"
```

This command deletes the header file for the waveform file named.

***RST** N/A

Key Entry Clear Header

Remarks This command does not require a personality modulation to be on.

:HEADer:DESCRiption

Supported All

```
:MMEMory:HEADer:DESCRiption "<file name>","<description>"
```

```
:MMEMory:HEADer:DESCRiption? "<file name>"
```

This command inserts a description for the header file named.

***RST** N/A

Key Entry Edit Description

Remarks The header description is limited to 32 characters.

:LOAD:LIST

Supported All

```
:MMEMory:LOAD:LIST "<file name>"
```

This command loads a List sweep file.

***RST** N/A

Key Entry Load From Selected File

Remarks N/A

:MOVE

Supported All

```
:MMEMory:MOVE "<src_file>","<dest_file>"
```

This command renames the requested file in the memory catalog.

***RST** N/A

Key Entry Rename File

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:STORe:LIST

Supported All

:MMEMory:STORe:LIST "<file name>"

This command stores the current list sweep data to a file.

***RST** N/A

Key Entry Store To File

Remarks N/A

Output Subsystem (:OUTPut)

:BLANking:AUTO

Supported All

:OUTPut:BLANking:AUTO ON|OFF|1|0

:OUTPut:BLANking:AUTO?

This command enables or disables the RF output blanking during frequency changes.

ON This choice causes the RF to always blank.

OFF This choice causes the RF to not blank.

***RST** 1

Key Entry Output Blanking Off On Auto

Remarks N/A

:BLANking:STATe

Supported All

:OUTPut:BLANking:STATe ON|OFF|1|0

:OUTPut:BLANking:STATe?

This command enables or disables the RF output blanking state.

***RST** 1

Key Entry N/A

Remarks N/A

:MODulation[:STATe]

Supported All

:OUTPut:MODulation[:STATe] ON|OFF|1|0

:OUTPut:MODulation[:STATe]?

This command enables or disables the modulation of the RF output with the currently active modulation type(s).

***RST** 1

Key Entry **Mod On/Off**

Remarks Most modulation types can be simultaneously enabled except FM with Φ M.

An annunciator on the signal generator is always displayed to indicate whether modulation is switched on or off.

[:STATe]

Supported All

:OUTPut [:STATe] ON | OFF | 1 | 0

:OUTPut [:STATe] ?

This command enables or disables the RF output.

***RST** 0

Key Entry **RF On/Off**

Remarks Although you can configure and engage various modulations, no signal is available at the RF OUTPUT connector until this command is executed.

An annunciator is always displayed on the signal generator to indicate whether the RF output is switched on or off.

Route Subsystem (:ROUTE:HARDware:DGENERator)

:INPut:BPOLarity

Supported All

```
:ROUTE:HARDware:DGENERator:INPut:BPOLarity POSitive|NEGative
:ROUTE:HARDware:DGENERator:INPut:BPOLarity?
```

This command configures the polarity of the TTL input signal at the BURST GATE IN connector. POSitive refers to normal logic, while NEGative refers to inverted logic.

***RST** POS

Key Entry Burst Gate In Polarity Neg Pos

Remarks This command performs the same function as [“:IPOLarity:BGATE”](#) on page 127.

:INPut:CPOLarity

Supported All

```
:ROUTE:HARDware:DGENERator:INPut:CPOLarity POSitive|NEGative
:ROUTE:HARDware:DGENERator:INPut:CPOLarity?
```

This command configures the polarity of the TTL input signal at the DATA CLOCK connector. POSitive refers to normal logic, while NEGative refers to inverted logic.

***RST** POS

Key Entry Data Clock Polarity Neg Pos

Remarks This command performs the same function as [“:IPOLarity:CLOCK”](#) on page 127.

:INPut:DPOLarity

Supported All

```
:ROUTE:HARDware:DGENERator:INPut:DPOLarity POSitive|NEGative
:ROUTE:HARDware:DGENERator:INPut:DPOLarity?
```

This command configures the polarity of the TTL input signal at the DATA connector. POSitive refers to normal logic, while NEGative refers to inverted logic.

***RST** POS

Key Entry Data Polarity Neg Pos

Remarks This command performs the same function as “:IPOLarity:DATA” on page 128.

:INPut:SPOLarity

Supported All

```
:ROUTE:HARDware:DGENerator:INPut:SPOLarity POSitive|NEGative  
:ROUTE:HARDware:DGENerator:INPut:SPOLarity?
```

This command configures the polarity of the TTL input signal at the SYMBOL SYNC connector. POSitive refers to normal logic, while NEGative refers to inverted logic.

***RST** POS

Key Entry Symbol Sync Polarity Neg Pos

Remarks This command performs the same function as “:IPOLarity:SSYNc” on page 128.

:IPOLarity:BGATe

Supported All

```
:ROUTE:HARDware:DGENerator:IPOLarity:BGATe POSitive|NEGative  
:ROUTE:HARDware:DGENerator:IPOLarity:BGATe?
```

This command configures the polarity of the input signal at the BURST GATE IN connector. POSitive refers to normal logic, while NEGative refers to inverted logic.

***RST** POS

Key Entry Burst Gate In Polarity Neg Pos

Remarks This command performs the same function as “:INPut:BPOLarity” on page 126.

:IPOLarity:CLOCK

Supported All

```
:ROUTE:HARDware:DGENerator:IPOLarity:CLOCK POSitive|NEGative  
:ROUTE:HARDware:DGENerator:IPOLarity:CLOCK?
```

This command configures the polarity of the TTL input signal at the DATA CLOCK connector. POSitive refers to normal logic, while NEGative refers to inverted logic.

***RST** POS

Key Entry Data Clock Polarity Neg Pos

Remarks This command performs the same function as [“:INPut:CPOLarity”](#) on page 126.

:IPOLarity:DATA

Supported All

```
:ROUTE:HARDware:DGENERator:IPOLarity:DATA POSitive|NEGative
:ROUTE:HARDware:DGENERator:IPOLarity:DATA?
```

This command configures the polarity of the TTL input signal at the DATA connector. POSitive refers to normal logic, while NEGative refers the inverted logic.

***RST** POS

Key Entry Data Polarity Neg Pos

Remarks This command performs the same function as [“:INPut:DPOLarity”](#) on page 126.

:IPOLarity:SSYNc

Supported All

```
:ROUTE:HARDware:DGENERator:IPOLarity:SSYNc POSitive|NEGative
:ROUTE:HARDware:DGENERator:IPOLarity:SSYNc?
```

This command configures the polarity of the TTL input signal at the SYMBOL SYNC connector. POSitive refers to normal logic, while NEGative refers to inverted logic.

***RST** POS

Key Entry Symbol Sync Polarity Neg Pos

Remarks This command performs the same function as [“:INPut:SPOLarity”](#) on page 127.

:OPOLarity:CLOCK

Supported All

```
:ROUTE:HARDware:DGENERator:OPOLarity:CLOCK POSitive|NEGative
:ROUTE:HARDware:DGENERator:OPOLarity:CLOCK?
```

This command configures the polarity of the TTL output Data Clock Out signal at the DATA CLK OUT pin on the rear panel AUX I/O connector. POSitive refers to normal logic, while the NEGative refers to inverted logic.

***RST** POS

Key Entry Data Clock Out Neg Pos

Remarks This command performs the same function as “:OUTPut:CPOLarity” on page 130.

:OPOLarity:DATA

Supported All

```
:ROUTE:HARDware:DGENerator:OPOLarity:DATA POSitive|NEGative
:ROUTE:HARDware:DGENerator:OPOLarity:DATA?
```

This command configures the polarity of the TTL output DATA OUT signal at the DATA OUT pin on the rear panel AUX I/O connector. POSitive refers to normal logic, while NEGative refers to inverted logic.

***RST** POS

Key Entry Data Out Polarity Neg Pos

Remarks This command performs the same function as “:OUTPut:DPOLarity” on page 130.

:OPOLarity:EVENT[1] | 2 | 3 | 4

Supported All

```
:ROUTE:HARDware:DGENerator:OPOLarity:EVENT[1] | 2 | 3 | 4 POSitive|NEGative
:ROUTE:HARDware:DGENerator:OPOLarity:EVENT[1] | 2 | 3 | 4?
```

This command configures the polarity of the TTL output signal at the EVENT 1 or EVENT 2 connector. POSitive refers to normal logic, while NEGative refers to inverted logic.

***RST** POS

Key Entry Event 1 Polarity Neg Pos Event 2 Polarity Neg Pos

Remarks This command performs the same function as “:OUTPut:EPOL[1]|2|3|4” on page 131.

:OPOLarity:SSYNc

Supported All

```
:ROUTE:HARDware:DGENerator:OPOLarity:SSYNc POSitive|NEGative
:ROUTE:HARDware:DGENerator:OPOLarity:SSYNc?
```

This command configures the polarity of the TTL output SYMBOL SYNC signal at the SYM SYNC OUT pin on the rear panel AUX I/O connector. POSitive refers to normal logic, while NEGative refers to inverted logic.

Route Subsystem (:ROUTE:HARDware:DGENERator)

*RST	POS
Key Entry	Symbol Sync Out Polarity Neg Pos
Remarks	This command performs the same function as “:OUTPut:SPOLarity” on page 131.

:OUTPut:CPOLarity

Supported	All
:ROUTE:HARDware:DGENERator:OUTPut:CPOLarity POSitive NEGative	
:ROUTE:HARDware:DGENERator:OUTPut:CPOLarity?	

This command configures the polarity of the TTL output DATA CLOCK OUT signal at the DATA CLK OUT pin on the rear panel AUX I/O connector. POSitive refers to normal logic, while NEGative refers to inverted logic.

*RST	POS
Key Entry	Data Clock Polarity Neg Pos
Remarks	This command performs the same function as “:OPOLarity:CLOCK” on page 128.

:OUTPut:DCS[:STATe]

Supported	All
:ROUTE:HARDware:DGENERator:OUTPut:DCS[:STATe] ON OFF 1 0	
:ROUTE:HARDware:DGENERator:OUTPut:DCS[:STATe]?	

This command is used to enable or disable the output DATA OUT, DATA CLK OUT, and SYM SYNC OUT signals from the rear panel AUX I/O connector. Normally, these output signals should be enabled (On). However, disabling these outputs will decrease the spurs that are sometimes present when operating at high symbol rates.

*RST	1
Key Entry	DATA/CLK/SYNC Rear Outputs Off On
Remarks	N/A

:OUTPut:DPOLarity

Supported	All
:ROUTE:HARDware:DGENERator:OUTPut:DPOLarity POSitive NEGative	

:ROUTE:HARDware:DGENerator:OUTPut:DPOLarity?

This command configures the polarity of the TTL output signal at the DATA OUT connector. POSitive refers to normal logic, while NEGative refers to inverted logic.

***RST** POS

Key Entry Data Out Polarity Neg Pos

Remarks This command performs the same function as [“:OPOLarity:DATA” on page 129.](#)

:OUTPut:EPOL[1]|2|3|4

Supported All

:ROUTE:HARDware:DGENerator:OUTPut:EPOL[1]|2|3|4 POSitive|NEGative

:ROUTE:HARDware:DGENerator:OUTPut:EPOL[1]|2|3|4?

This command configures the polarity of the TTL output signal at the EVENT1 or EVENT 2 connector. POSitive refers to normal logic, while NEGative refers to inverted logic.

***RST** POS

Key Entry Event 1 Polarity Neg Pos

Event 2 Polarity Neg Pos

Remarks This command performs the same function as [“:OPOLarity:EVENT\[1\]|2|3|4” on page 129.](#)

:OUTPut:SPOLarity

Supported All

:ROUTE:HARDware:DGENerator:OUTPut:SPOLarity POSitive|NEGative

:ROUTE:HARDware:DGENerator:OUTPut:SPOLarity?

This command configures the polarity of the TTL input signal at the SYMBOL SYNC connector. POSitive refers to normal logic, while NEGative refers to inverted logic.

***RST** POS

Key Entry Symbol Sync Out Polarity Neg Pos

Remarks N/A

Status Subsystem (:STATus)

:OPERation:BASEband:CONDition

Supported All with Option 001/601 or 002/602

:STATus:OPERation:BASEband:CONDition?

This query returns the decimal sum of the bits in the Baseband Operation Condition Register. For example, if the baseband is busy (bit 0), the value 1 is returned.

***RST** N/A

Range 0–32767

Key Entry N/A

Remarks The data in this register is continuously updated and reflects the current conditions.

Refer to chapter 3 of the *Programming Guide* for more information.

:OPERation:BASEband:ENABLE

Supported All with Option 001/601 or 002/602

:STATus:OPERation:BASEband:ENABLE <val>

:STATus:OPERation:BASEband:ENABLE?

This command determines which bits in the Baseband Operation Event Register will set the Baseband is Busy bit (bit 10) in the Standard Operation Condition Register.

The variable <num> is the sum of the decimal values of the bits you want to enable.

***RST** N/A

Range 0–32767

Key Entry N/A

Remarks Refer to chapter 3 of the *Programming Guide* for more information.

:OPERation:BASEband:NTRansition

Supported All with Option 001/601 or 002/602

:STATus:OPERation:BASEband:NTRansition <val>

:STATus:OPERation:BASEband:NTRansition?

This command determines which bits in the Baseband Operation Condition Register will set the corresponding bit in the Baseband Operation Event Register when that bit has a negative transition (1 to 0).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:OPERation:BASEband:PTRansition

Supported All with Option 001/601 or 002/602

```
:STATus:OPERation:BASEband:PTRansition <val>
:STATus:OPERation:BASEband:PTRansition?
```

This command determines which bits in the Baseband Operation Condition Register will set the corresponding bit in the Baseband Operation Event Register when that bit has a positive transition (0 to 1).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:OPERation:BASEband[:EVENT]

Supported All with Option 001/601 or 002/602

```
:STATus:OPERation:BASEband[:EVENT]?
```

CAUTION This is a destructive read. The data in the register is latched until it is queried. Once queried, the data is cleared.

This query returns the decimal sum of the bits in the Standard Operation Baseband Event Register.

*RST	N/A
Range	0–32767

Key Entry	N/A
Remarks	The equivalent PTR and NTR filters must be set before the condition register can set the corresponding bit in the event register. Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:OPERation:CONDition

Supported	All
	:STATus:OPERation:CONDition?
	This query returns the decimal sum of the bits for the registers that are set to one and are part of the Standard Operation Status Group. For example, if a sweep is in progress (bit 3), the value 8 is returned.
*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	The data in this register is continuously updated and reflects current conditions. Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:OPERation:ENABle

Supported	All
	:STATus:OPERation:ENABle <val>
	:STATus:OPERation:ENABle?
	This command determines which bits in the Standard Operation Event Register will set the Standard Operation Status Summary bit (bit 7) in the Status Byte Register.
	The variable <val> is the sum of the decimal values of the bits that you want to enable.
*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:OPERation:NTRansition

Supported	All
------------------	-----

```
:STATUS:OPERation:NTRansition <val>
:STATUS:OPERation:NTRansition?
```

This command determines which bits in the Standard Operation Condition Register will set the corresponding bit in the Standard Operation Event Register when that bit has a negative transition (1 to 0).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:OPERation:PTRansition

Supported	All
------------------	-----

```
:STATUS:OPERation:PTRansition <val>
:STATUS:OPERation:PTRansition?
```

This command determines which bits in the Standard Operation Condition Register will set the corresponding bit in the Standard Operation Event Register when that bit has a positive transition (0 to 1).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:OPERation[:EVENT]

Supported	All
------------------	-----

CAUTION	This is a destructive read. The data in the register is latched until it is queried. Once queried, the data is cleared.
----------------	---

```
:STATUS:OPERation[:EVENT]?
```

This query returns the decimal sum of the bits in the Standard Operation Event Register.

Status Subsystem (:STATus)

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	The equivalent PTR or NTR filters must be set before the condition register can set the corresponding bit in the event register. Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:PRESet

Supported	All
:STATus:PRESet	
This command presets all transition filters, enable registers, and error/event queue enable registers.	
*RST	N/A
Range	N/A
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUESTIONable:BERT:CONDition

Supported	All with Option UN7
:STATus:QUESTIONable:BERT:CONDition?	
This query returns the decimal sum of the bits in the Data Questionable BERT Condition Register. For example, if no clock signal has been input for more than three seconds during the bit error rate measurement (bit 0), then a value of 1 is returned.	
*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	The data in this register is continuously updated and reflects the current conditions. Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUESTIONable:BERT:ENABLE

Supported	All with Option UN7
------------------	---------------------

```
:STATus:QUEStionable:BERT:ENABle <val>
:STATus:QUEStionable:BERT:ENABle?
```

This command determines which bits in the Data Questionable BERT Event Register will set the Data Questionable BERT Summary bit (bit 12) in the Data Questionable Condition Register.

The variable <val> is the sum of the decimal values of the bits you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUEStionable:BERT:NTRansition

Supported All with Option UN7

```
:STATus:QUEStionable:BERT:NTRansition <val>
:STATus:QUEStionable:BERT:NTRansition?
```

This command determines which bits in the Data Questionable BERT Condition Register will set the corresponding bit in the Data Questionable BERT Event Register when that bit has a negative transition (1 to 0).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	The data in this register is continuously updated and reflects the current conditions. Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUEStionable:BERT:PTRansition

Supported All with Option UN7

```
:STATus:QUEStionable:BERT:PTRansition <val>
:STATus:QUEStionable:BERT:PTRansition?
```

This command determines which bits in the Data Questionable BERT Condition Register will set the corresponding bit in the Data Questionable BERT Event Register when that bit has a positive transition (0 to 1).

System Commands

Status Subsystem (:STATus)

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUESTionable:BERT[:EVENT]

Supported All with Option UN7

CAUTION This is a destructive read. The data in the register is latched until it is queried. Once queried, the data is cleared.

:STATus:QUESTionable:BERT[:EVENT]?

This command returns the decimal value of the sum of the bits in the Data Questionable BERT Event Register.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Note that the register requires that the equivalent PTR or NTR filters be set before a condition register bit can set a bit in the Event register. Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUESTionable:CALibration:CONDition

Supported All

:STATus:QUESTionable:CALibration:CONDition?

This query returns the decimal sum of the bits in the Data Questionable Calibration Condition Register. For example, if the DCFM or DCΦM zero calibration fails (bit 0), a value of 1 is returned.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	The data in this register is continuously updated and reflects the current

conditions.

Refer to chapter 3 of the *Programming Guide* for more information.

:QUESTIONable:CALibration:ENABLE

Supported All

```
:STATus:QUESTIONable:CALibration:ENABLE <val>
:STATus:QUESTIONable:CALibration:ENABLE?
```

This command determines which bits in the Data Questionable Calibration Event Register will set the calibration summary bit (bit 8) in the Data Questionable Condition Register.

The variable <val> is the sum of the decimal values of the bits that you want to enable.

***RST** N/A

Range 0–32767

Key Entry N/A

Remarks Refer to chapter 3 of the *Programming Guide* for more information.

:QUESTIONable:CALibration:NTRansition

Supported All

```
:STATus:QUESTIONable:CALibration:NTRansition <val>
:STATus:QUESTIONable:CALibration:NTRansition?
```

This command determines which bits in the Data Questionable Calibration Condition Register will set the corresponding bit in the Data Questionable Calibration Event Register when that bit has a negative transition (1 to 0).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

***RST** N/A

Range 0–32767

Key Entry N/A

Remarks Refer to chapter 3 of the *Programming Guide* for more information.

:QUESTIONable:CALibration:PTRansition

Supported All

```
:STATus:QUESTIONable:CALibration:PTRansition <val>
:STATus:QUESTIONable:CALibration:PTRansition?
```

Status Subsystem (:STATUS)

This command determines which bits in the Data Questionable Calibration Condition Register will set the corresponding bit in the Data Questionable Calibration Event Register when that bit has a positive transition (0 to 1).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUESTIONable:CALibration[:EVENT]

Supported All

CAUTION This is a destructive read. The data in the register is latched until it is queried. Once queried, the data is cleared.

:STATUS:QUESTIONable:CALibration[:EVENT]?

This command returns the decimal sum of the bits in the Data Questionable Calibration Event Register.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	The equivalent PTR or NTR filters must be set before the condition register can set the corresponding bit in the event register. Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUESTIONable:CONDition

Supported All

:STATUS:QUESTIONable:CONDition?

This query returns the decimal sum of the bits in the Data Questionable Condition Register. For example, if the reference oscillator oven is cold (bit 4), a value of 16 is returned.

*RST	N/A
Range	0–32767

Key Entry	N/A
Remarks	The data in this register is continuously updated and reflects current conditions. Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUESTIONable:ENABLE

Supported	All
	:STATUS:QUESTIONable:ENABLE <val>
	:STATUS:QUESTIONable:ENABLE?

This command determines which bits in the Data Questionable Event Register will set the Data Questionable Status Group Summary bit (bit 3) in the Status Byte Register.

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUESTIONable:FREQuency:CONDition

Supported	All
	:STATUS:QUESTIONable:FREQuency:CONDition?

This query returns the decimal sum of the bits in the Data Questionable Frequency Condition Register. For example, if the 1 GHz internal reference clock is unlocked (bit 2), a value of 4 is returned.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	The data in this register is continuously updated and reflects current conditions. Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUESTIONable:FREQuency:ENABLE

Supported	All
	:STATUS:QUESTIONable:FREQuency:ENABLE <val>
	:STATUS:QUESTIONable:FREQuency:ENABLE?

Status Subsystem (:STATus)

This command determines which bits in the Data Questionable Frequency Event Register will set the frequency summary bit (bit 5) in the Data Questionable Condition Register.

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUESTIONable:FREQuency:NTRansition

Supported All

```
:STATus:QUEStionable:FREQuency:NTRansition <val>
:STATus:QUEStionable:FREQuency:NTRansition?
```

This command determines which bits in the Data Questionable Frequency Condition Register will set the corresponding bit in the Data Questionable Frequency Event Register when that bit has a negative transition (1 to 0).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUESTIONable:FREQuency:PTRansition

Supported All

```
:STATus:QUEStionable:FREQuency:PTRansition <val>
:STATus:QUEStionable:FREQuency:PTRansition?
```

This command determines which bits in the Data Questionable Frequency Condition Register will set the corresponding bit in the Data Questionable Frequency Event Register when that bit has a positive transition (0 to 1).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A

Remarks Refer to chapter 3 of the *Programming Guide* for more information.

:QUESTionable:FREQuency[:EVENT]

Supported All

CAUTION This is a destructive read. The data in the register is latched until it is queried. Once queried, the data is cleared.

:STATUS:QUESTionable:FREQuency[:EVENT]?

This query returns the decimal sum of the bits in the Data Questionable Frequency Event Register.

***RST** N/A

Range 0–32767

Key Entry N/A

Remarks The equivalent PTR or NTR filters must be set before the condition register can set the corresponding bit in the event register.

Refer to chapter 3 of the *Programming Guide* for more information.

:QUESTionable:MODulation:CONDition

Supported All

:STATUS:QUESTionable:MODulation:CONDition?

This command returns the decimal sum of the bits in the Data Questionable Modulation Condition Register. For example, if the modulation is uncalibrated (bit 4), a value of 16 is returned.

***RST** N/A

Range 0–32767

Key Entry N/A

Remarks The data in this register is continuously updated and reflects current conditions.

Refer to chapter 3 of the *Programming Guide* for more information.

:QUESTionable:MODulation:ENABle

Supported All

:STATUS:QUESTionable:MODulation:ENABle <val>

:STATUS:QUESTionable:MODulation:ENABle?

Status Subsystem (:STATus)

This command determines which bits in the Data Questionable Modulation Event Register will set the modulation summary bit (bit 7) in the Data Questionable Condition Register.

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUESTIONable:MODulation:NTRansition

Supported All

:STATus:QUEStionable:MODulation:NTRansition <val>
:STATus:QUEStionable:MODulation:NTRansition?

This command determines which bits in the Data Questionable Modulation Condition Register will set the corresponding bit in the Data Questionable Modulation Event Register when that bit has a negative transition (1 to 0).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUESTIONable:MODulation:PTRansition

Supported All

:STATus:QUEStionable:MODulation:PTRansition <val>
:STATus:QUEStionable:MODulation:PTRansition?

This command determines which bits in the Data Questionable Modulation Condition Register will set the corresponding bit in the Data Questionable Modulation Event Register when that bit has a positive transition (0 to 1).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A

Remarks Refer to chapter 3 of the *Programming Guide* for more information.

:QUESTionable:MODulation[:EVENT]

Supported All

CAUTION This is a destructive read. The data in the register is latched until it is queried. Once queried, the data is cleared.

:STATus:QUESTionable:MODulation[:EVENT]?

This query returns the decimal sum of the bits in the Data Questionable Modulation Event Register.

***RST** N/A

Range 0–32767

Key Entry N/A

Remarks The equivalent PTR or NTR filters must be set before the condition register can set the corresponding bit in the event register.

Refer to chapter 3 of the *Programming Guide* for more information.

:QUESTionable:NTRansition

Supported All

:STATus:QUESTionable:NTRansition <val>

:STATus:QUESTionable:NTRansition?

This command determines which bits in the Data Questionable Condition Register will set the corresponding bit in the Data Questionable Event Register when that bit has a negative transition (1 to 0).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

***RST** N/A

Range 0–32767

Key Entry N/A

Remarks Refer to chapter 3 of the *Programming Guide* for more information.

:QUESTionable:POWer:CONDition

Supported All

Status Subsystem (:STATus)

```
:STATus:QUEStionable:POWer:CONDition?
```

This query returns the decimal sum of the bits in the Data Questionable Power Condition Register. For example, if the RF output signal is unlevelled (bit 1), a value of 2 is returned.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	The data in this register is continuously updated and reflects current conditions. Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUEStionable:POWer:ENABle

Supported All

```
:STATus:QUEStionable:POWer:ENABle <val>
:STATus:QUEStionable:POWer:ENABle?
```

This command determines which bits in the Data Questionable Power Event Register will set the power summary bit (bit 3) in the Data Questionable Condition Register.

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767
Key Entry	N/A
Remarks	Refer to chapter 3 of the <i>Programming Guide</i> for more information.

:QUEStionable:POWer:NTRansition

Supported All

```
:STATus:QUEStionable:POWer:NTRansition <val>
:STATus:QUEStionable:POWer:NTRansition?
```

This command determines which bits in the Data Questionable Power Condition Register will set the corresponding bit in the Data Questionable Power Event Register when that bit has a negative transition (1 to 0).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

*RST	N/A
Range	0–32767

Key Entry N/A
Remarks Refer to chapter 3 of the *Programming Guide* for more information.

:QUESTIONable:POWER:PTRansition

Supported All

```
:STATus:QUEStionable:POWer:PTRansition <val>  

:STATus:QUEStionable:POWer:PTRansition?
```

This command determines which bits in the Data Questionable Power Condition Register will set the corresponding bit in the Data Questionable Power Event Register when that bit has a positive transition (0 to 1).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

***RST** N/A

Range 0–32767

Key Entry N/A

Remarks Refer to chapter 3 of the *Programming Guide* for more information.

:QUESTIONable:POWER[:EVENT]

Supported All

CAUTION This is a destructive read. The data in the register is latched until it is queried. Once queried, the data is cleared.

```
:STATus:QUEStionable:POWer[:EVENT]?
```

This query returns the decimal sum of the bits in the Data Questionable Power Event Register.

***RST** N/A

Range 0–32767

Key Entry N/A

Remarks The equivalent PTR or NTR filters must be set before the condition register can set the corresponding bit in the event register.

Refer to chapter 3 of the *Programming Guide* for more information.

:QUEStionable:PTRansition

Supported All

```
:STATus:QUEStionable:PTRansition <val>  
:STATus:QUEStionable:PTRansition?
```

This command determines which bits in the Data Questionable Condition Register will set the corresponding bit in the Data Questionable Event Register when that bit has a positive transition (0 to 1).

The variable <val> is the sum of the decimal values of the bits that you want to enable.

***RST** N/A

Range 0–32767

Key Entry N/A

Remarks Refer to chapter 3 of the *Programming Guide* for more information.

:QUEStionable[:EVENT]

Supported All

CAUTION This is a destructive read. The data in the register is latched until it is queried. Once queried, the data is cleared.

```
:STATus:QUEStionable[:EVENT]?
```

This query returns the decimal sum of the bits in the Data Questionable Event Register.

***RST** N/A

Range 0–32767

Key Entry N/A

Remarks The equivalent PTR or NTR filters must be set before the condition register can set the corresponding bit in the event register.

Refer to chapter 3 of the *Programming Guide* for more information.

System Subsystem (:SYSTem)

:CAPability

Supported All

:SYSTem:CAPability?

This query returns the signal generator's capabilities and outputs the appropriate specifiers:

```
(RFSOURCE WITH( (AM|FM|PULM|PM|LFO)&(FSSWEEP|FLIST)&(PSSWEEP|PLIST)
&TRIGGER&REFERENCE))
```

This is a list of the SCPI-defined basic functionality of the signal generator and the additional capabilities it has in parallel (a&b) and singularly (a|b).

***RST** N/A

Range N/A

Key Entry N/A

Remarks N/A

:DATE

Supported All

:SYSTem:DATE <year>, <month>, <day>

:SYSTem:DATE?

This command sets the date as shown in the lower right area of the signal generator display.

<year> This variable requires a four digit integer.

The query returns the date in the following format:

```
<+year>, <+month>, <+day>
```

***RST** N/A

Range <month>: 1-12 <day>: 1-31

Key Entry Time/Date

Remarks N/A

:ERRor[:NEXT]

Supported All

:SYSTem:ERRor[:NEXT]?

This query returns the most recent error message from the signal generator error queue. If there are no error messages, the query returns the following output:

```
+0, "No error"
```

When there is more than one error message, the query will need to be sent for each message.

***RST** N/A

Range N/A

Key Entry Error Info View Next Error Message

Remarks The ESG deletes the error messages after viewing the last message.

:ERRor:SCPI[:SYNTax]

Supported All

:SYSTem:ERRor:SCPI[:SYNTax] ON|OFF|1|0

:SYSTem:ERRor:SCPI[:SYNTax]?

This command enables or disables the reporting of SCPI syntax errors to the error queue.

***RST** 1

Key Entry N/A

Remarks N/A

:HELP:MODE

Supported All

:SYSTem:HELP:MODE SINGLE|CONTInuous

:SYSTem:HELP:MODE?

This command sets the help function mode of the signal generator.

SINGLE Help is provided only for the next key that you press.

CONTInuous Help is provided for each key you press. In addition, the function of the key is executed.

When the help dialog box is displayed, pressing the **Help** hardkey in either mode will turn help off.

*RST	N/A
Key Entry	Help Mode Single Cont
Remarks	The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:IDN

Supported All

:SYSTem: IDN "string"

This command modifies the identification string that the *IDN? query returns. Sending an empty string returns the query output of *IDN? to its factory shipped setting. The maximum string length is 72 characters.

***RST** N/A

Key Entry N/A

Remarks Modification of the *IDN? query output enables the signal generator to identify itself as another signal generator when used as a replacement.

The display diagnostic information, shown by pressing the **Diagnostic Info** softkey, is not affected by this command.

:LANGuage

Supported All

:SYSTem: LANGuage "SCPI" | "COMP" | "NADC" | "PDC" | "PHS" | "8648"
:SYSTem: LANGuage?

This command sets the remote language for the signal generator.

SCPI This choice provides compatibility for SCPI commands.

COMP This choice provides compatibility for the 8656B, 8657A/B signal generator which is supported by using the GPIB interface.

NADC This choice provides compatibility for the 8657D NADC personality which is supported only through a GPIB interface.

PDC This choice provides compatibility for the 8657D PDC personality which is supported only through a GPIB interface.

PHS This choice provides compatibility for the 8657J PHS personality which is supported only through a GPIB interface.

8648 This choice provides compatibility for the 8648A/B/C/D signal generator which is

System Commands
 System Subsystem (:SYSTem)

supported only through a GPIB interface.

*RST	N/A				
Key Entry	SCPI	8656B,8657A/B	8657D NADC	8657D PDC	8657J PHS
	8648A/B/C/D				
Remarks	The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.				
	For more information on supported SCPI commands and programming codes, refer to the Programming Compatibility Guide.				

:PON:TYPE

Supported	All
	:SYSTem: PON:TYPE PRESet LAST
	:SYSTem: PON:TYPE?
	This command sets the defined conditions for the signal generator at power on.
PRESet	This choice sets the conditions to factory- or user-defined as determined by the choice for the preset type. Refer to “:PRESet:TYPE” on page 154 for selecting the type of preset.
LAST	This choice retains the settings at the time the signal generator was last powered down.

NOTE When LAST is selected, no signal generator interaction can occur for at least 3 seconds prior to cycling the power for the current settings to be saved.

*RST	N/A
Key Entry	Power On Last Preset
Remarks	The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:PRESet

Supported	All
	SYSTem: PRESet
	This command returns the signal generator to a set of defined conditions. It is equivalent to pressing the front panel Preset hardkey.

*RST	N/A
Range	N/A
Key Entry	Preset
Remarks	The defined conditions are either factory- or user-defined. Refer to “:PRESet:TYPE” on page 154 for selecting the type of defined conditions.

:PRESet:ALL

Supported	All
:SYSTem:PRESet:ALL	

This command sets all states of the signal generator back to their factory default settings, including states that are not normally affected by signal generator power-on, preset, or *RST.

*RST	N/A
Range	N/A
Key Entry	N/A
Remarks	N/A

:PRESet:LANGUage

Supported	All
:SYSTem:PRESet:LANGUage "SCPI" "COMP" "NADC" "PDC" "PHS" "8648"	
:SYSTem:PRESet:LANGUage?	

This command sets the remote language that is available when the signal generator is preset.

SCPI	This choice provides compatibility for SCPI commands.
COMP	This choice provides compatibility for the 8656B, 8657A/B signal generator which is supported by using the GPIB interface.
NADC	This choice provides compatibility for the 8657D NADC personality which is supported only through a GPIB interface.
PDC	This choice provides compatibility for the 8657D PDC personality which is supported only through a GPIB interface.
PHS	This choice provides compatibility for the 8657J PHS personality which is supported only through a GPIB interface.
8648	This choice provides compatibility for the 8648A/B/C/D signal generator which is supported only through a GPIB interface.

System Commands

System Subsystem (:SYSTem)

*RST	"SCPI"
Key Entry	SCPI 8656B,8657A/B 8657D NADC 8657D PDC 8657J PHS 8648A/B/C/D
Remarks	N/A

:PRESet:PERSistent

Supported All
:SYSTem:PRESet:PERSistent

This command sets the states that are not affected by signal generator power-on, preset, or *RST to their factory default settings.

*RST	N/A
Range	N/A
Key Entry	Restore Sys Defaults
Remarks	N/A

:PRESet:PN9

Supported All
:SYSTem:PRESet:PN9 NORMAl | QUICk
:SYSTem:PRESet:PN9?

This command sets the preset length of the PN9 sequence for personalities that require software PRBS generation.

NORMAl	This choice produces a maximal length PN9 sequence.
QUICk	This choice produces a truncated (216 bits) PN9 sequence.
*RST	NORM
Key Entry	PN9 Mode Preset
Remarks	N/A

:PRESet:TYPE

Supported All
:SYSTem:PRESet:TYPE NORMAl | USER
:SYSTem:PRESet:TYPE?

This command toggles the preset state between factory- and user-defined conditions.

***RST** N/A

Key Entry Preset Normal User

Remarks Refer to “:PRESet[:USER]:SAVE” for saving the USER choice preset settings.
The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:PRESet[:USER]:SAVE

Supported All

:SYSTem:PRESet[:USER]:SAVE

This command saves your user-defined preset conditions to a state file.

***RST** N/A

Range N/A

Key Entry Save User Preset

Remarks Only one user-defined preset file can be saved. Subsequent saved user-defined preset files will overwrite the previously saved file.

:SECurity:DISPlay ON|OFF|1|0

Supported All

:SYSTem:SECurity:DISPlay ON|OFF|1|0
:SYSTem:SECurity:DISPlay?

This command turns the display on (1) or off (0).

***RST** 1

Range N/A

Key Entry N/A

Remarks N/A

:SECurity:ERASeall**Supported** All

:SYSTEM:SECurity:ERASeall

This command removes all user files, table editor files, flatness correction files, and baseband generator files.

***RST** N/A**Range** N/A**Key Entry** Erase All

Remarks This command differs from the :DELeTE:ALL command, which does not remove table editor files.

:SECurity:LEVel NONE | ERASe | OVERwrite | SANitize**Supported** All:SYSTEM:SECurity:LEVel NONE | ERASe | OVERwrite | SANitize
:SYSTEM:SECurity:LEVel?

This command selects the secure mode and enables you to select a level of security. SECurity:LEVel:STATe must be set to ON to activate the selected security level, and power must be cycled to perform the selected cleaning operation. Selecting NONE will preset the signal generator to the factory state. For other cleaning operation descriptions, see SECurity:ERASeall, SECurity:OVERwrite, and SECurity:SANitize.

***RST** NONE**Range** N/A**Key Entry** Security Level

Remarks SECurity:LEVel:STATe must be set to ON to activate the selected security level.

:SECurity:LEVel:STATe ON|OFF|1|0

Supported All

:SYSTem:SECurity:LEVel:STATe ON|OFF|1|0

:SYSTem:SECurity:LEVel:STATe?

When this command is enabled (1) it activates the selected security level. When disabled (0) it executes the selected security level. Once the secure mode is entered, the security level can only be increased.

***RST** N/A

Range N/A

Key Entry Enter Secure Mode

Remarks You can exit the secure mode by entering SYST:SECurity:LEVel NONE, or by cycling the power.

:SECurity:OVERwrite

Supported All

:SYSTem:SECurity:OVERwrite

This command removes all user files, table editor files, flatness correction files, and baseband generator files. The memory is then overwritten with random data as follows:

SRAM All addressable locations will be overwritten with random characters.

HARD DISK All addressable locations will be overwritten with random characters.

FLASH MEMORY The flash blocks will be erased.

***RST** N/A

Range N/A

Key Entry Erase and Overwrite All

Remarks N/A

:SECurity:SANitize

Supported All

:SYSTem:SECurity:SANitize

This command removes all user files, table editor files, flatness correction files, and baseband generator files. The memory is then overwritten with a sequence of data as follows:

SRAM All addressable locations will be overwritten with random characters.

HARD DISK All addressable locations will be overwritten with a single character and then a random character.

FLASH MEMORY The flash blocks will be erased.

***RST** N/A

Range N/A

Key Entry Erase and Sanitize All

Remarks N/A

:SSAVer:DELAy

Supported All

:SYSTem:SSAVer:DELAy <val>

:SYSTem:SSAVer:DELAy?

This command sets the amount of time before the display light or display light and text is switched off. This will occur if there is no input via the front panel during the delay period.

The variable <val> is a whole number measured in hours.

***RST** N/A

Range 1–12

Key Entry Screen Saver Delay:

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

Refer to “:SSAVer:MODE” on page 159 for selecting the screen saver mode.

:SSAVer:MODE

Supported All

:SYSTem:SSAVer:MODE LIGHT|TEXT

:SYSTem:SSAVer:MODE?

This command toggles the screen saver mode between light only or light and text.

LIGHT This choice enables only the light to turn off during the screen saver operation while leaving the text visible on the darkened screen.

TEXT This choice enables both the display light and text to turn off during the screen saver operation.

***RST** N/A

Key Entry Screen Saver Mode

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:SSAVer:STATe

Supported All

:SYSTem:SSAVer:STATe ON|OFF|1|0

:SYSTem:SSAVer:STATe?

This command enables or disables the display screen saver.

***RST** N/A

Key Entry Screen Saver Off On

Remarks The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:TIME

Supported All

:SYSTem:TIME <hour>, <minute>, <second>

:SYSTem:TIME?

This command sets the time displayed in the lower right area of the signal generator's display.

***RST** N/A

Range <hour>: 0–23 <minute>: 0–59 <second>: 0–59

System Commands

System Subsystem (:SYSTem)

Key Entry	Time/Date
------------------	-----------

Remarks	N/A
----------------	-----

:VERSion

Supported	All
------------------	-----

:SYSTem:VERSion?

This command returns the SCPI version number with which the signal generator complies.

*RST	N/A
-------------	-----

Range	N/A
--------------	-----

Key Entry	N/A
------------------	-----

Remarks	N/A
----------------	-----

Trigger Subsystem

:ABORt

Supported All

:ABORt

This command causes the list or step sweep in progress to abort.

***RST** N/A

Range N/A

Key Entry N/A

Remarks If INIT:CONT[:ALL] is set to ON, the sweep will immediately re-initiate.

The pending operation flag affecting *OPC, *OPC?, and *WAI will undergo a transition once the sweep has been reset.

:INITiate:CONTInuous[:ALL]

Supported All

:INITiate:CONTInuous[:ALL] ON|OFF|1|0

:INITiate:CONTInuous[:ALL]?

This command selects either a continuous or single list or step sweep.

ON (1) This choice selects continuous sweep where, after the completion of the previous sweep, the current sweep will restart automatically or wait until the appropriate trigger source is received.

OFF (0) This choice selects a single sweep. Refer to “:INITiate:IMMediate[:ALL]” on [page 161](#) for single sweep triggering information.

***RST** 0

Key Entry Sweep Repeat Single Cont

Remarks Execution of this command will not affect a sweep in progress.

:INITiate[:IMMediate][:ALL]

Supported All

`:INITiate[:IMMediate][:ALL]`

This command either arms or arms and starts a single list or step sweep, depending on the trigger type.

The command performs the following:

- arms a single sweep when `BUS`, `EXternal`, or `KEY` is the trigger source selection
- arms and starts a single sweep when `IMMediate` is the trigger source selection

***RST** N/A

Range N/A

Key Entry **Single Sweep**

Remarks This command is ignored if a sweep is in progress.

Refer to [“:INITiate:CONTinuous\[:ALL\]” on page 161](#) for setting continuous or single sweep.

Refer to [“:TRIGger\[:SEQuence\]:SOURce” on page 163](#) to select the trigger source.

:TRIGger:OUTPut:POLarity

Supported All

`:TRIGger:OUTPut:POLarity POSitive|NEGative`

`:TRIGger:OUTPut:POLarity?`

This command sets the polarity of the TTL signal present at the TRIG OUT connector.

***RST** POS

Key Entry **Trigger Out Polarity Neg Pos**

Remarks The trigger out is asserted after the frequency and/or power is set while the sweep is waiting for its step trigger. In addition, the swept-sine sends a pulse to the TRIG OUT at the beginning of each sweep.

:TRIGger[:SEQuence]:SLOPe

Supported All

`:TRIGger[:SEQuence]:SLOPe POSitive|NEGative`

`:TRIGger[:SEQuence]:SLOPe?`

This command sets the polarity of the ramp or sawtooth waveform slope present at the TRIG IN connector that will trigger a list or step sweep.

*RST	POS
Key Entry	Trigger In Polarity Neg Pos
Remarks	N/A

:TRIGger[:SEQuence]:SOURce

Supported	All
------------------	-----

:TRIGger[:SEQuence]:SOURce BUS|IMMEDIATE|EXTernal|KEY
:TRIGger[:SEQuence]:SOURce?

This command sets the sweep trigger source for a list or step sweep.

BUS This choice enables GPIB triggering using the *TRG or GET command or LAN and RS-232 triggering using the *TRG command.

IMMEDIATE This choice enables immediate triggering of the sweep event.

EXTernal This choice enables the triggering of a sweep event by an externally applied signal at the TRIG IN connector.

KEY This choice enables triggering through front panel interaction by pressing the **Trigger** hardkey.

*RST	IMM
-------------	-----

Key Entry	Bus Free Run Ext Trigger Key
------------------	--

Remarks The wait for the BUS, EXTernal, or KEY trigger can be bypassed by sending the :TRIGger[:SEQuence][:IMMEDIATE] command.

:TRIGger[:SEQuence][:IMMEDIATE]

Supported	All
------------------	-----

:TRIGger[:SEQuence][:IMMEDIATE]

This event command causes an armed list or step sweep to immediately start without the selected trigger occurring.

*RST	N/A
-------------	-----

Range	N/A
--------------	-----

Key Entry	N/A
------------------	-----

Remarks	N/A
----------------	-----

Unit Subsystem (:UNIT)

:POWer

Supported All

:UNIT:POWer DBM|DBuV|DBuVemf|V|Vemf|DB

:UNIT:POWer?

This command terminates an amplitude value in the selected unit of measure.

If the amplitude reference state is set to on, the query returns units expressed in DB and the DB choice will be displayed. Setting any other unit will cause a setting conflict error stating that the amplitude reference state must be set to off. Refer to, “[:REFerence:STATe](#)” on page 61 for more information.

***RST** DBM

Key Entry dBm dBuV dBuVemf mV uV mVemf uVemf DB

Remarks All power values in this chapter are shown with DBM as the unit of measure. If a different unit of measure is selected, replace DBM with the newly selected unit whenever it is indicated for the value.

4 Analog Commands

This chapter provides SCPI descriptions for subsystems dedicated to analog commands for the ESG Vector Signal Generator. This chapter contains the following major sections:

- “Amplitude Modulation Subsystem ([:SOURce])” on page 166
- “Frequency Modulation Subsystem ([:SOURce])” on page 173
- “Low Frequency Output Subsystem ([:SOURce]:LFOOutput)” on page 179
- “Phase Modulation Subsystem ([:SOURce])” on page 184
- “Pulse Modulation Subsystem ([:SOURce]:PULM)” on page 192

Amplitude Modulation Subsystem ([:SOURce])

:AM[1] | 2...

Supported All

[:SOURce] :AM[1] | 2 . . .

This prefix enables the selection of the AM path and is part of most SCPI commands associated with this subsystem. The two paths are equivalent to the **AM Path 1 2** softkey.

AM[1] **AM Path 1 2** with 1 selected

AM2 **AM Path 1 2** with 2 selected

When just AM is shown in a command, this means the command applies globally to both paths.

Each path is set up separately. When a SCPI command uses AM[1], only path one is affected. Consequently, when AM2 is selected, only path two is set up. However, the depth of the signals for the two paths can be coupled.

Depth coupling links the depth value of AM[1] to AM2. Changing the deviation value for one path will change it for the other path.

These two paths can be on at the same time provided the following conditions have been met:

- DUALsine or SWEPTSine is not the selection for the waveform type
- each path uses a different source (Internal 1, Ext1, or Ext2)

:AM:INTernal:FREQuency:STEP[:INCRement]

Supported All

[:SOURce] :AM: INTernal : FREQuency : STEP[: INCRement] <num>

[:SOURce] :AM: INTernal : FREQuency : STEP[: INCRement] ?

This command sets the step increment for the amplitude modulation internal frequency.

The variable <num> is expressed in units of Hertz.

***RST** N/A

Range 0.5–1E6

Key Entry Incr Set

Remarks The value set by this command is used with the UP and DOWN choices for the

AM frequency setting. Refer to “:AM[1]|2:INTernal[1]:FREQuency” on page 168 for more information.

The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:AM:WIDeband:STATe

Supported All

[:SOURce] :AM:WIDeband:STATe ON | OFF | 1 | 0

[:SOURce] :AM:WIDeband:STATe?

This command enables or disables the wideband amplitude modulation for the selected path.

***RST** 0

Key Entry AM Off On

Remarks The RF carrier is modulated when the modulation state of the signal generator is set to ON, see “:MODulation[:STATe]” on page 124 for more information.

Whenever amplitude modulation is enabled, the AM annunciator is turned on in the display

The two paths for amplitude modulation can be simultaneously enabled. Refer to “:AM[1]|2...” on page 166 for more information.

:AM[1] | 2:EXTernal[1] | 2:COUPling

Supported All

[:SOURce] :AM[1] | 2:EXTernal[1] | 2:COUPling AC | DC

[:SOURce] :AM[1] | 2:EXTernal[1] | 2:COUPling?

This command sets the coupling for the amplitude modulation source through the selected external input connector.

AC This choice will only pass ac signal components.

DC This choice will pass both ac and dc signal components.

***RST** DC

Key Entry Ext Coupling DC AC

Remarks The command does not change the currently active source or switch the current modulation on or off. The modulating signal may be the sum of several signals, either internal or external sources.

:AM[1] | 2:INternal[1]:FREQuency**Supported** All

```
[ :SOURce ] :AM[ 1 ] | 2 :INternal[ 1 ] :FREQuency <val><unit> | UP | DOWN
[ :SOURce ] :AM[ 1 ] | 2 :INternal[ 1 ] :FREQuency?
```

This command sets the internal amplitude modulation rate for the following applications:

- the first tone of a dual-sine waveform
- the start frequency for a swept-sine waveform
- the frequency rate for all other waveforms

***RST** +4.00000000E+002

Range Dual Sine, Swept-Sine & Sine: 0.1HZ–100kHZ
All Other Waveforms: 0.1HZ–20kHZ

Key Entry AM Tone 1 Rate AM Start Rate AM Rate

Remarks N/A**:AM[1] | 2:INternal[1]:FREQuency:ALternate****Supported** All

```
[ :SOURce ] :AM[ 1 ] | 2 :INternal[ 1 ] :FREQuency:ALternate <val><unit>
[ :SOURce ] :AM[ 1 ] | 2 :INternal[ 1 ] :FREQuency:ALternate?
```

This command sets the frequency for the alternate signal.

***RST** +4.00000000E+002

Range *Dual-Sine*: 0.1HZ–100kHZ *Swept-Sine*: 0.1HZ–100kHZ

Key Entry AM Tone 2 Rate AM Stop Rate

Remarks The alternate signal frequency is the second tone of a dual-sine or the stop frequency of a swept-sine waveform.

Refer to “[:AM\[1\] | 2:INternal\[1\]:FUNCTION:SHAPE](#)” on page 169 for the waveform selection.

:AM[1] | 2:INternal[1]:FREQuency:ALternate:AMPLitude:PERCent**Supported** All

```
[ :SOURce ] :AM[ 1 ] | 2 :INternal[ 1 ] :FREQuency:ALternate:AMPLitude:
PERCent <val><unit>
```

```
[ :SOURCE ] :AM[ 1 ] | 2 :INTernal[ 1 ] :FREQuency:ALTErnate:AMPLitude:PERCent?
```

This command sets the amplitude of the second tone for a dual-sine waveform as a percentage of the total amplitude. For example, if the second tone makes up 30% of the total amplitude, then the first tone is 70% of the total amplitude.

***RST** +5.00000000E+001

Range 0–100PCT

Key Entry **AM Tone 2 Ampl Percent Of Peak**

Remarks Refer to “[:AM\[1\]2:INTernal\[1\]:FUNCTION:SHAPE](#)” on page 169 for the waveform selection.

:AM[1] | 2:INTernal[1]:FUNCTION:SHAPE

Supported All

```
[ :SOURCE ] :AM[ 1 ] | 2 :INTernal[ 1 ] :FUNctIon:SHAPE SINE | TRIangle | SQUare | RAMP |
NOISe | DUALsine | SWEPTsine
```

```
[ :SOURCE ] :AM[ 1 ] | 2 :INTernal[ 1 ] :FUNctIon:SHAPE?
```

This command sets the AM waveform type.

***RST** SINE

Key Entry **Sine Triangle Square Ramp Noise Dual-Sine Swept-Sine**

Remarks N/A

:AM[1] | 2:INTernal[1]:SWEep:TIME

Supported All

```
[ :SOURCE ] :AM[ 1 ] | 2 :INTernal[ 1 ] :SWEep:TIME <val><unit>
```

```
[ :SOURCE ] :AM[ 1 ] | 2 :INTernal[ 1 ] :SWEep:TIME?
```

This command sets the sweep rate for the amplitude-modulated, swept-sine waveform.

***RST** +1.00000000E–001

Range 1mS–65.535S

Key Entry **AM Sweep Time**

Remarks N/A

:AM[1] | 2:INTernal[1]:SWEep:TRIGger**Supported** All

```
[ :SOURce ] :AM[ 1 ] | 2:INTernal[ 1 ] :SWEep:TRIGger BUS | IMMEDIATE | EXTernal | KEY
[ :SOURce ] :AM[ 1 ] | 2:INTernal[ 1 ] :SWEep:TRIGger?
```

This command sets the trigger source for the amplitude modulated swept-sine waveform.

BUS This choice enables GPIB triggering using the *TRG or GET command or LAN and RS-232 triggering using the *TRG command.

IMMEDIATE This choice enables immediate triggering of the sweep event.

EXTernal This choice enables the triggering of a sweep event by an externally applied signal at the TRIG IN connector.

KEY This choice enables triggering through front panel interaction by pressing the **Trigger** hardkey.

***RST** IMM

Key Entry Bus Free Run Ext Trigger Key

Remarks Refer to “[:AM\[1\]2:INTernal\[1\]:FUNCTION:SHAPE](#)” on page 169 for the waveform selection.

:AM[1] | 2:SOURce**Supported** All

```
[ :SOURce ] :AM[ 1 ] | 2:SOURce INT[ 1 ] | EXT[ 1 ] | EXT2
[ :SOURce ] :AM[ 1 ] | 2:SOURce?
```

This command sets the source to generate the amplitude modulation.

INT This choice selects the internal source to provide an ac-coupled signal.

EXT This choice selects the EXT 1 INPUT or the EXT 2 INPUT connector to provide an externally applied signal that can be ac- or dc-coupled.

***RST** INT

Key Entry Internal Ext1 Ext2

Remarks A 1.0 V_p input is required for calibrated AM depth settings.

The externally applied, ac-coupled input signal is tested for a voltage level and a display annunciator will report a high or low condition if that voltage is > ±3% of 1 V_p.

:AM[1] | 2:STATe

Supported All

[:SOURce] :AM[1] | 2 :STATe ON | OFF | 1 | 0

[:SOURce] :AM[1] | 2 :STATe?

This command enables or disables the amplitude modulation for the selected path.

***RST** 0

Key Entry AM Off On

Remarks The RF carrier is modulated when you have set the signal generator's modulation state to ON, see [“:MODulation\[:STATe\]” on page 124](#) for more information.

Whenever amplitude modulation is enabled, the AM annunciator is turned on in the display

The two paths for amplitude modulation can be simultaneously enabled. Refer to [“:AM\[1\]2...” on page 166](#) for more information.

:AM[1] | 2[:DEPTh]

Supported All

[:SOURce] :AM[1] | 2 [:DEPTh] <val><unit> | UP | DOWN

[:SOURce] :AM[1] | 2 [:DEPTh]?

This commands sets the amplitude modulation depth in percent.

***RST** +1.00000000E-001

Range 0.00–100PCT

Key Entry AM Depth

Remarks The value of AM depth applies only to whichever AM path configuration (AM[1]2) you have currently selected.

When the depth values are coupled, a change made to one path is applied to both. Refer to [“:AM\[1\]2\[:DEPTh\]:TRACK” on page 172](#) for AM depth value coupling.

Refer to [“:AM\[:DEPTh\]:STEP\[:INCRement\]” on page 172](#) for setting the value associated with UP and DOWN choices.

:AM[1] | 2[:DEPTh]:TRACK**Supported** All

[:SOURce]:AM[1] | 2[:DEPTh]:TRACK ON|OFF|1|0

[:SOURce]:AM[1] | 2[:DEPTh]:TRACK?

This command enables or disables the coupling of the AM depth values between the paths (AM[1] and AM2).

ON (1) This choice will link the depth value of AM[1] with AM2; AM2 will assume the AM[1] depth value. For example, if AM[1] depth is set to 15% and AM2 is set to 11%, enabling the depth tracking will cause the AM2 depth value to change to 15%. This applies regardless of the path (AM[1] or AM2) selected in this command

OFF (0) This choice disables the coupling and both paths will have independent depth values.

RST** 0**Key Entry** AM Depth Couple Off On**Remarks** When the depth values are coupled, a change made to one path is applied both.**:AM[:DEPTh]:STEP[:INCRement]*Supported** All

[:SOURce]:AM[:DEPTh]:STEP[:INCRement] <val><unit>

[:SOURce]:AM[:DEPTh]:STEP[:INCRement]?

This command sets the AM depth step increment.

***RST** N/A**Range** 0.1–100PCT**Key Entry** Incr Set

Remarks The value set by this command is used with the UP and DOWN choices for the AM depth setting. Refer to “:AM[1]2[:DEPTh]” on page 171 for more information.

The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

Frequency Modulation Subsystem ([:SOURce])

:FM[1] | 2...

Supported All

[:SOURce] :FM [1] | 2 . . .

This prefix enables the selection of the FM path and is part of most SCPI commands associated with this subsystem. The two paths are equivalent to the **FM Path 1 2** softkey.

FM[1] **FM Path 1 2** with 1 selected

FM2 **FM Path 1 2** with 2 selected

When just FM is shown in a command, this means the command applies globally to both paths.

Each path is set up separately. When a SCPI command uses FM[1], only path one is affected. Consequently, when FM2 is selected, only path two is set up. However, the deviation of the signals for the two paths can be coupled.

Deviation coupling links the deviation value of FM[1] to FM2. Changing the deviation value for one path will change it for the other path.

These two paths can be on at the same time provided the following conditions have been met:

- DUALsine or SWEPTSine is not the selection for the waveform type
- each path uses a different source (Internal 1, Ext1, or Ext2)
- FM2 must be set to a deviation less than FM[1]

:FM:INTernal:FREQuency:STEP[:INCRement]

Supported All

[:SOURce] :FM: INTernal : FREQuency : STEP [: INCRement] <num>

[:SOURce] :FM: INTernal : FREQuency : STEP [: INCRement] ?

This command sets the step increment for the internal frequency modulation.

The variable <num> sets the entered value in units of Hertz.

***RST** +5.00000000E+002

Range 0.5–1E6

Key Entry Incr Set

Frequency Modulation Subsystem ([:SOURce])

Remarks The value set by this command is used with the UP and DOWN choices for the FM frequency setting. Refer to “[:FM[1]]2:INTernal[1]:FREQuency” on page 174 for more information.

 The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:FM[1] | 2:EXTErnal[1] | 2:COUPLing

Supported All

```
[ :SOURce ] :FM[ 1 ] | 2 :EXTErnal[ 1 ] | 2 :COUPLing AC | DC
[ :SOURce ] :FM[ 1 ] | 2 :EXTErnal[ 1 ] | 2 :COUPLing?
```

This command sets the coupling for the frequency modulation source through the selected external input connector.

AC This choice will only pass ac signal components.

DC This choice will pass both ac and dc signal components.

*RST DC

Key Entry Ext Coupling DC AC

Remarks The command does not change the currently active source or switch the current modulation on or off. The modulating signal may be the sum of several signals, either internal or external sources.

:FM[1] | 2:INTernal[1]:FREQuency

Supported All

```
[ :SOURce ] :FM[ 1 ] | 2 :INTernal[ 1 ] :FREQuency <val><unit> | UP | DOWN
[ :SOURce ] :FM[ 1 ] | 2 :INTernal[ 1 ] :FREQuency?
```

This command sets the internal frequency modulation rate for the following applications:

- the first tone of a dual-sine waveform
- the start frequency for a swept-sine waveform
- the frequency rate for all other waveforms

*RST +4.00000000E+002

Range *Dual-Sine:* 0.1HZ–100KHZ *Swept-Sine:* 0.1HZ–100KHZ
All Other Waveforms: 0.1HZ–20KHZ

Key Entry FM Tone 1 Rate FM Start Rate FM Rate

Remarks N/A

:FM[1] | 2:INTERNAL[1]:FREQUENCY:ALTERNATE

Supported All

[:SOURce] :FM[1] | 2 :INTernal[1] :FREQuency:ALTErnate <val><unit>

[:SOURce] :FM[1] | 2 :INTernal[1] :FREQuency:ALTErnate?

This command sets the frequency for the alternate signal.

***RST** +4.00000000E+002

Range *Dual-Sine:* 0.5HZ–1MHZ *Swept-Sine:* 1HZ–1MHZ

Key Entry **FM Tone 2 Rate** **FM Stop Rate**

Remarks The alternate signal frequency is the second tone of a dual-sine or the stop frequency of a swept-sine waveform.

Refer to “:FM[1]2:INTERNAL[1]:FUNCTION:SHAPE” on page 175 for the waveform selection.

:FM[1] | 2:INTERNAL[1]:FREQUENCY:ALTERNATE:AMPLITUDE:PERCENT

Supported All

[:SOURce] :FM[1] | 2 :INTernal[1] :FREQuency:ALTErnate:AMPLitude:

PERCent <val><unit>

[:SOURce] :FM[1] | 2 :INTernal[1] :FREQuency:ALTErnate:AMPLitude:PERCent?

This command sets the amplitude of the second tone for a dual-sine waveform as a percentage of the total amplitude. For example, if the second tone makes up 30% of the total amplitude, then the first tone is 70% of the total amplitude.

***RST** +1.00000000E+002

Range 0–100PCT

Key Entry **FM Tone 2 Ampl Percent Of Peak**

Remarks Refer to “:FM[1]2:INTERNAL[1]:FUNCTION:SHAPE” for the waveform selection.

:FM[1] | 2:INTERNAL[1]:FUNCTION:SHAPE

Supported All

[:SOURce] :FM[1] | 2 :INTernal[1] | :FUNctIon:SHAPE SINE | TRIangle | SQUARE | RAMP |

NOISe | DUALsine | SWEPTsine

Frequency Modulation Subsystem ([:SOURce])

```
[ :SOURce ] : FM [ 1 ] | 2 : INTernal [ 1 ] | : FUNction : SHAPe ?
```

This command sets the FM waveform type.

***RST** SINE

Key Entry Sine Triangle Square Ramp Noise Dual-Sine Swept-Sine

Remarks The waveform selection is only valid when INT[1] is the source selection. Refer to [“:FM\[1\]|2:SOURce” on page 177](#) for type source selection.

:FM[1] | 2:INTernal[1]:SWEep:TIME

Supported All

```
[ :SOURce ] : FM [ 1 ] | 2 : INTernal [ 1 ] : SWEep : TIME <val><unit>
```

```
[ :SOURce ] : FM [ 1 ] | 2 : INTernal [ 1 ] : SWEep : TIME ?
```

This command sets the sweep time for the swept-sine waveform.

***RST** +1.00000000E-001

Range 1.0mS-65.535S

Key Entry FM Sweep Time

Remarks Refer to [“:FM\[1\]|2:INTernal\[1\]:FUNction:SHAPe” on page 175](#) for the waveform selection.

:FM[1] | 2:INTernal[1]:SWEep:TRIGger

Supported All

```
[ :SOURce ] : FM [ 1 ] | 2 : INTernal [ 1 ] : SWEep : TRIGger BUS | IMMEDIATE | EXTERNAL | KEY
```

```
[ :SOURce ] : FM [ 1 ] | 2 : INTernal [ 1 ] : SWEep : TRIGger ?
```

This command sets the trigger source for the frequency modulated swept-sine waveform.

BUS This choice enables GPIB triggering using the *TRG or GET command or LAN and RS-232 triggering using the *TRG command.

IMMEDIATE This choice enables immediate triggering of the sweep event.

EXTERNAL This choice enables the triggering of a sweep event by an externally applied signal at the TRIG IN connector.

KEY This choice enables triggering through front panel interaction by pressing the **Trigger** hardkey.

***RST** IMM

Key Entry Bus Free Run Ext Trigger Key

Remarks Refer to “:FM[1]2:INTernal[1]:FUNctIon:SHAPE” on page 175 for the waveform selection.

:FM[1] | 2:SOURce

Supported All

[:SOURce] :FM[1] | 2 :SOURce INT[1] | EXT1 | EXT2
 [:SOURce] :FM[1] | 2 :SOURce?

This command sets the source to generate the frequency modulation.

INT This choice selects the internal source to provide an ac-coupled signal.

EXT This choice selects the EXT 1 INPUT or the EXT 2 INPUT connector to provide an externally applied signal that can be ac- or dc-coupled.

***RST** INT

Key Entry Internal Ext1 Ext2

Remarks The externally applied, ac-coupled input signal is tested for a voltage level and a display annunciator will report a high or low condition if that voltage is $> \pm 3\%$ of $1 V_p$.

:FM[1] | 2:STATe

Supported All

[:SOURce] :FM[1] | 2 :STATe ON | OFF | 1 | 0
 [:SOURce] :FM[1] | 2 :STATe?

This command enables or disables the frequency modulation for the selected path.

***RST** 0

Key Entry FM Off On

Remarks The RF carrier is modulated when you set the signal generator’s modulation state to ON, see “:MODulation[:STATe]” on page 124 for more information.

Whenever frequency modulation is enabled, the FM annunciator is turned on in the display

The two paths for frequency modulation can be simultaneously enabled. Refer to “:FM[1]2...” on page 173 for more information.

:FM[1] | 2[:DEVIation]**Supported** All

[:SOURce]:FM[1] | 2[:DEVIation] <val><unit>

[:SOURce]:FM[1] | 2[:DEVIation]?

This command sets the frequency modulation deviation.

***RST** +1.00000000E+003

Range	<i>Frequency</i>	<i>Deviation</i>	Deviation Option UNJ
	250kHz–249.999MHz	0–8MHz	0–1MHz
	> 249.999–500MHz	0–4MHz	0–500kHz
	> 500MHz–1GHz	0–8MHz	0–1MHz
	> 1–2GHz	0–16MHz	0–2MHz
	> 2–4GHz	0–32MHz	0–4MHz
	> 4–6GHz	0–8MHz	0–8MHz

Key Entry FM DEV

Remarks If deviation tracking is ON, a change to the deviation value on one path will apply to both. Refer to “[:FM\[1\]|2\[:DEVIation\]:TRACK](#)” on page 178 for more information and setting the deviation tracking.

:FM[1] | 2[:DEVIation]:TRACK**Supported** All

[:SOURce]:FM[1] | 2[:DEVIation]:TRACK ON|OFF|1|0

[:SOURce]:FM[1] | 2[:DEVIation]:TRACK?

This command enables or disables the deviation coupling between the paths (FM[1] and FM2).

ON (1) This choice will link the deviation value of FM[1] with FM2; FM2 will assume the FM[1] deviation value. For example, if FM[1] deviation is set to 500 Hz and FM2 is set to 2 kHz, enabling the deviation tracking will cause the FM2 deviation value to change to 500 Hz. This applies regardless of the path (FM[1] or FM2) selected in this command

OFF (0) This choice disables the coupling and both paths will have independent deviation values.

***RST** 0**Key Entry** FM Dev Couple Off On**Remarks** This command uses exact match tracking, not offset tracking.

Low Frequency Output Subsystem ([:SOURce]:LFOutput)

:AMPLitude

Supported All

[:SOURce] :LFOutput :AMPLitude <val><unit>

[:SOURce] :LFOutput :AMPLitude?

This command sets the amplitude for the signal at the LF OUTPUT connector.

***RST** 0.00

Range 0.000VP–5.0VP

Key Entry LF Out Amplitude

Remarks N/A

:FUNCTION[1]:FREQUENCY

Supported All

[:SOURce] :LFOutput :FUNCTION[1] :FREQUENCY <val><unit>

[:SOURce] :LFOutput :FUNCTION[1] :FREQUENCY?

This command sets the internal modulation frequency for the following applications:

- the first tone of a dual-sine waveform
- the start frequency for a swept-sine waveform
- the frequency rate for all other waveforms

***RST** +4.00000000E+002

Range *Sine*: 0.1HZ–100KHZ *Dual-Sine*: 0.1HZ–100KHZ

Swept-Sine: 0.1HZ–100KHZ

All Other Waveforms: 0.1HZ–20KHZ

Key Entry LF Out Tone 1 Freq LF Out Start Freq LF Out Freq

Remarks Refer to “:FUNCTION[1]:SHAPE” on page 181 for selecting the waveform type.

:FUNction[1]:FREQuency:ALternate**Supported** All

[:SOURce]:LFOuTput:FUNction[1]:FREQuency:ALternate <val><unit>

[:SOURce]:LFOuTput:FUNction[1]:FREQuency:ALternate?

This command sets the frequency for the alternate LF output signal.

***RST** +4.00000000E+002**Range** *Dual-Sine:* 0.1HZ–100KHZ *Swept-Sine:* 0.1HZ–100KHZ**Key Entry** LF Out Tone 2 Freq LF Out Stop Freq**Remarks** The alternate frequency is the second tone of a dual-sine or the stop frequency of a swept-sine waveform.

Refer to “:FUNction[1]:SHAPe” on page 181 for selecting the waveform type.

:FUNction[1]:FREQuency:ALternate:AMPLitude:PERCent**Supported** All

[:SOURce]:LFOuTput:FUNction[1]:FREQuency:ALternate:AMPLitude:

PERCent <val><unit>

[:SOURce]:LFOuTput:FUNction[1]:FREQuency:ALternate:AMPLitude:PERCent?

This command sets the amplitude of the second tone for a dual-sine waveform as a percentage of the total LF output amplitude. For example, if the second tone makes up 30% of the total amplitude, then the first tone is 70% of the total amplitude.

RST** +5.00000000E+001**Range** 0–100PCT**Key Entry** LF Out Tone 2 Ampl % of Peak**Remarks** Refer to “:FUNction[1]:SHAPe” on page 181 for selecting the waveform type.**:FUNction[1]:PERiod*Supported** All

[:SOURce]:LFOuTput:FUNction[1]:PERiod <val><unit>

[:SOURce]:LFOuTput:FUNction[1]:PERiod?

This command sets the pulse period of the internally generated pulsed low frequency waveform.

***RST** +1.60000000E–005

Range	16uS–30S
Key Entry	LF Out Period
Remarks	N/A

:FUNCTION[1]:PWIDth

Supported	All
------------------	-----

```
[ :SOURce ] :LFOutput :FUNCTION[1] :PWIDth <val><unit>
```

```
[ :SOURce ] :LFOutput :FUNCTION[1] :PWIDth?
```

This command sets the pulse width of the internally-generated pulsed low frequency waveform.

The upper limit range value is restricted by the current value of the pulse period. For example, if the pulse period value is set to 16 μ S, the pulse width is limited to a maximum range value of 16 μ S.

***RST** +8.00000000E-006

Range 8uS–30S

Key Entry LF Out Width

Remarks To change the pulse period value, refer to “:FUNCTION[1]:PERiod” on page 180.

:FUNCTION[1]:SHAPE

Supported	All
------------------	-----

```
[ :SOURce ] :LFOutput :FUNCTION[1] :SHAPE SINE | DUALsine | SWEPTsine | TRIangle |  
SQUare | RAMP | PULSe | NOISE | DC
```

```
[ :SOURce ] :LFOutput :FUNCTION[1] :SHAPE?
```

This command sets the waveform type for the generated signal at the LF output.

***RST** SINE

Key Entry Sine Dual-Sine Swept-Sine Triangle Square Ramp Pulse
Noise DC

Remarks Function Generator must be the source selection to support DUALsine or the SWEPTsine waveform. Refer to “:SOURce” on page 182.

:FUNCTION[1]:SWEep:TIME

Supported	All
------------------	-----

```
[ :SOURce ] :LFOutput :FUNCTION[1] :SWEep:TIME <val><unit>
```

Low Frequency Output Subsystem ([:SOURce]:LFOutput)

[:SOURce]:LFOutput:FUNCTion[1]:SWEep:TIME?

This command sets the sweep time for an internally generated swept-sine signal at the LF output.

***RST** +1.00000000E-001
Range 1mS-65.535S
Key Entry LF Out Sweep Time
Remarks N/A

:FUNCTion[1]:SWEep:TRIGger

Supported All

[:SOURce]:LFOutput:FUNCTion[1]:SWEep:TRIGger BUS|IMMEDIATE|EXTernal|KEY
[:SOURce]:LFOutput:FUNCTion[1]:SWEep:TRIGger?

This command sets the trigger source for the internally generated swept-sine waveform signal at the LF output.

BUS This choice enables GPIB triggering using the *TRG or GET command or LAN and RS-232 triggering using the *TRG command.

IMMEDIATE This choice enables immediate triggering of the sweep event.

EXTernal This choice enables the triggering of a sweep event by an externally applied signal at the TRIG IN connector.

KEY This choice enables triggering through front panel interaction by pressing the **Trigger** hardkey.

***RST** IMM

Key Entry Bus Free Run Ext Trigger Key

Remarks Refer to “:FUNCTion[1]:SHAPE” on page 181 for selecting the waveform type.

:SOURce

Supported All

[:SOURce]:LFOutput:SOURce INT[1]|FUNCTion
[:SOURce]:LFOutput:SOURce?

This command sets the low frequency source for the LF output.

INT[1] This choice enables you to output a signal where the frequency and shape of the signal is set by the internal source as it is being used by a modulation. For

example, if the internal source is currently assigned to an AM path configuration and AM is turned on, the signal output at the LF OUTPUT connector will have the frequency and shape of the amplitude modulating signal.

FUNCTION	This choice enables the selection of an internal function generator.	
*RST	FUNC	
Key Entry	Internal Monitor	Function Generator
Remarks	N/A	

:STATe

Supported	All
	[:SOURce] :LFOutput :STATe ON OFF 1 0
	[:SOURce] :LFOutput :STATe?

This command enables or disables the low frequency output.

*RST	0
Key Entry	LF Out Off On
Remarks	N/A

Phase Modulation Subsystem ([:SOURce])

:PM[1] | 2...

Supported All

[:SOURce] :PM [1] | 2 . . .

This prefix enables the selection of the Φ M path and is part of most SCPI commands associated with this subsystem. The two paths are equivalent to the Φ M Path 1 2 softkey.

PM[1] Φ M Path 1 2 with 1 selected

PM2 Φ M Path 1 2 with 2 selected

When just PM is shown in a command, this means the command applies globally to both paths.

Each path is set up separately. When a SCPI command uses PM[1], only path one is affected. Consequently, when PM2 is selected, only path two is set up. However, the deviation of the signals for the two paths can be coupled.

Deviation coupling links the deviation value of PM[1] to PM2. Changing the deviation value for one path will change it for the other path.

These two paths can be on at the same time provided the following conditions have been met:

- DUALsine or SWEPTSine is not the selection for the waveform type
- each path uses a different source (Internal 1, Ext1, or Ext2)
- PM2 must be set to a deviation less than or equal to PM[1]

:PM:INTernal:FREQuency:STEP[:INCRement]

Supported All

[:SOURce] :PM: INTernal : FREQuency : STEP [: INCRement] <num>

[:SOURce] :PM: INTernal : FREQuency : STEP [: INCRement] ?

This command sets the step increment of the phase modulation internal frequency.

The variable <num> sets the entered value in units of Hertz.

***RST** N/A

Range 0.5–1E6

Key Entry Incr Set

Remarks The value set by this command is used with the UP and DOWN choices for the FM frequency command. Refer to “:PM[1]:INTERNAL[1]:FREQUENCY” on page 186 for more information.

 The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

:PM[1] | 2:BANDwidth | BWIDth

Supported All

```
[ :SOURCE ] :PM[ 1 ] | 2 :BANDwidth | BWIDth NORMAL | HIGH
[ :SOURCE ] :PM[ 1 ] | 2 :BANDwidth | BWIDth?
```

This command toggles between normal phase modulation and high bandwidth phase modulation mode.

***RST** NORM

Key Entry FM Φ M Normal High BW

Remarks N/A

:PM[1] | 2:EXternal[1]:COUpling

Supported All

```
[ :SOURCE ] :PM[ 1 ] | 2 :EXternal[ 1 ] :COUpling AC | DC
[ :SOURCE ] :PM[ 1 ] | 2 :EXternal[ 1 ] :COUpling?
```

This command sets the coupling for the phase modulation source through the selected external input connector.

AC This choice will only pass ac signal components.

DC This choice will pass both ac and dc signal components.

***RST** DC

Key Entry Ext Coupling DC AC

Remarks This command does not change the currently active source or switch the current modulation on or off. The modulating signal may be the sum of several signals, either internal or external sources.

:PM[1] | 2:INteRnal[1]:FREQuency**Supported** All

[:SOURce]:PM[1] | 2:INteRnal[1]:FREQuency <val><unit> | UP | DOWN

[:SOURce]:PM[1] | 2:INteRnal[1]:FREQuency?

This command sets the internal modulation frequency rate for the following applications:

- the first tone of a dual-sine waveform
- the start frequency for a swept-sine waveform
- the frequency rate for all other waveforms

***RST** +4.00000000E+002

Range *Dual-Sine:* 0.1HZ–100KHZ *Swept-Sine:* 0.1HZ–100KHZ
All Other Waveforms: 0.1HZ–20KHZ

Key Entry Φ M Tone 1 Rate Φ M Start Rate Φ M Rate**Remarks** Refer to “:FUNction[1]:SHApe” on page 181 for selecting the waveform type.**:PM[1] | 2:INteRnal[1]:FREQuency:ALteRnate****Supported** All

[:SOURce]:PM[1] | 2:INteRnal[1]:FREQuency:ALteRnate <val><unit>

[:SOURce]:PM[1] | 2:INteRnal[1]:FREQuency:ALteRnate?

This command sets the frequency for the alternate signal.

***RST** +4.00000000E+002

Range *Dual-Sine:* 0.1HZ–100KHZ *Swept-Sine:* 0.1HZ–100KHZ

Key Entry Φ M Stop Rate Φ M Tone 2 Rate**Remarks** The alternate frequency is the second tone of a dual-sine or the stop frequency of a swept-sine waveform.

Refer to “:PM[1]2:INteRnal[1]:FUNction:SHApe” on page 187 for the waveform selection.

:PM[1] | 2:INteRnal[1]:FREQuency:ALteRnate:AMPLitude:PERCent**Supported** All[:SOURce]:PM[1] | 2:INteRnal[1]:FREQuency:ALteRnate:AMPLitude:
PERCent <val><unit>

[:SOURce] : PM [1] | 2 : INTernal [1] : FREQuency : ALTernate : AMPLitude : PERCent ?

This command sets the amplitude of the second tone for the dual-sine waveform as a percentage of the total amplitude. For example, if the second tone makes up 30% of the total amplitude, then the first tone is 70% of the total amplitude.

***RST** +5.00000000E+001
Range 0–100PCT
Key Entry Φ M Tone 2 Ampl Percent of Peak
Remarks Refer to “[:PM[1]|2:INTernal[1]:FUNCTION:SHAPE” on page 187 for the waveform selection.

:PM[1]|2:INTernal[1]:FUNCTION:SHAPE

Supported All

[:SOURce] : PM [1] | 2 : INTernal [1] : FUNCTion : SHAPe SINE | TRIangle | SQUare | RAMP | NOISe | DUALsine | SWEPTsine
 [:SOURce] : PM [1] | 2 : INTernal [1] : FUNCTion : SHAPe ?

This command sets the phase modulation waveform type.

***RST** SINE
Key Entry Sine Triangle Square Ramp Noise Dual-Sine Swept-Sine
Remarks The INTernal1 source selection does not support the DUALsine and SWEPTsine waveform choices.

:PM[1]|2:INTernal[1]:SWEep:TIME

Supported All

[:SOURce] : PM [1] | 2 : INTernal [1] : SWEep : TIME <val><unit>
 [:SOURce] : PM [1] | 2 : INTernal [1] : SWEep : TIME ?

This command sets the sweep time for a phase-modulated, swept-sine waveform.

***RST** +1.00000000E–001
Range 1.0mS–65.535S
Key Entry Φ M Sweep Time
Remarks Refer to “[:PM[1]|2:INTernal[1]:FUNCTION:SHAPE” for the waveform selection.

:PM[1] | 2:INTernal[1]:SWEep:TRIGger**Supported** All

```
[:SOURce]:PM[1] | 2:INTernal[1]:SWEep:TRIGger BUS | IMMEDIATE | EXTernal | KEY
[:SOURce]:PM[1] | 2:INTernal[1]:SWEep:TRIGger?
```

This command sets the trigger source for the phase-modulated, swept-sine waveform.

BUS This choice enables GPIB triggering using the *TRG or GET command or LAN and RS-232 triggering using the *TRG command.

IMMEDIATE This choice enables immediate triggering of the sweep event.

EXTernal This choice enables the triggering of a sweep event by an externally applied signal at the TRIG IN connector.

KEY This choice enables triggering through front panel interaction by pressing the **Trigger** hardkey.

***RST** IMM

Key Entry Bus Free Run Ext Trigger Key

Remarks Refer to “:PM[1]2:INTernal[1]:FUNCTION:SHAPE” on page 187 for the waveform selection.

:PM[1] | 2:SOURce**Supported** All

```
[:SOURce]:PM[1] | 2:SOURce INT[1] | EXT1 | EXT2
[:SOURce]:PM[1] | 2:SOURce?
```

This command sets the source to generate the phase modulation.

INT This choice selects internal source 1 to provide an ac-coupled signal.

EXT This choice selects the EXT 1 INPUT or the EXT 2 INPUT connector to provide an externally applied signal that can be ac- or dc-coupled.

***RST** INT

Key Entry Internal 1 Ext1 Ext2

Remarks The externally applied, ac-coupled input signal is tested for a voltage level and a display annunciator will report a high or low condition if that voltage is $> \pm 3\%$ of $1 V_p$.

:PM[1] | 2:STATe

Supported All

```
[ :SOURce ] :PM[ 1 ] | 2 :STATe ON | OFF | 1 | 0
```

```
[ :SOURce ] :PM[ 1 ] | 2 :STATe ?
```

This command enables or disables the phase modulation for the selected path.

***RST** 0

Key Entry Φ M Off On

Remarks The RF carrier is modulated when you set the signal generator's modulation state to ON, see [“:MODulation\[:STATe\]” on page 124](#) for more information.

Whenever phase modulation is enabled, the Φ M annunciator is turned on in the display

The two paths for phase modulation can be simultaneously enabled. Refer to [“:PM\[1\]2...” on page 184](#) for more information.

:PM[1] | 2[:DEVIation]

Supported All

```
[ :SOURce ] :PM[ 1 ] | 2 [ :DEVIation ] <val><unit> | UP | DOWN
```

```
[ :SOURce ] :PM[ 1 ] | 2 [ :DEVIation ] ?
```

This command sets the deviation of the phase modulation.

The variable <unit> will accept RAD (radians), PIRAD (pi-radians), and DEG (degrees); however, the query will only return values in radians.

***RST** +0.00000000E+000

Range	Frequency	Normal Bandwidth	High Bandwidth
	250kHz–249.999MHz	0–10RAD	0–1RAD
	> 249.999–500MHz	0–5RAD	0–0.5RAD
	> 500MHz–1GHz	0–10RAD	0–1RAD
	> 1–2GHz	0–20RAD	0–2RAD
	> 2–4GHz	0–40RAD	0–4RAD
	> 4–6GHz	0–80RAD	0–8RAD

Phase Modulation Subsystem ([:SOURce])

Key Entry	Φ M Dev
Remarks	If deviation tracking is active, a change to the deviation value on one path will apply to both. Refer to “:PM[:DEVIation]:STEP[:INCRement]” on page 190 for setting the value associated with the UP and DOWN choices.

:PM[1] | 2[:DEVIation]:TRACK

Supported	All
	[:SOURce] :PM[1] 2 [:DEVIation] :TRACK ON OFF 1 0 [:SOURce] :PM[1] 2 [:DEVIation] :TRACK?

This command enables or disables the deviation coupling between the paths (PM[1] and PM2).

ON (1)	This choice will link the deviation value of PM[1] with PM2; PM2 will assume the PM[1] deviation value. For example, if PM[1] deviation is set to 500 Hz and PM2 is set to 2 kHz, enabling the deviation tracking will cause the PM2 deviation value to change to 500 Hz. This applies regardless of the path (PM[1] or PM2) selected in this command.
OFF (0)	This choice disables the coupling and both paths will have independent deviation values.
*RST	0

Key Entry Φ M Dev Couple Off On

Remarks This command uses exact match tracking, not offset tracking.

:PM[:DEVIation]:STEP[:INCRement]

Supported	All
	[:SOURce] :PM [:DEVIation] :STEP [:INCRement] <val><unit> [:SOURce] :PM [:DEVIation] :STEP [:INCRement]?

This command sets the phase modulation deviation step increment.

*RST	N/A
Range	0.001–1E3RAD
Key Entry	Incr Set

Remarks The value set by this command is used with the UP and DOWN choices for the FM deviation command. Refer to “:PM[1]2[:DEVIation]” on page 189 for more

information.

The setting enabled by this command is not affected by signal generator power-on, preset, or *RST.

Pulse Modulation Subsystem ([:SOURce]:PULM)

:INteRnal[1]:FREQuency

Supported All

```
[ :SOURce ] :PULM :INteRnal [ 1 ] :FREQuency <val><unit> |UP|DOWN
```

```
[ :SOURce ] :PULM :INteRnal [ 1 ] :FREQuency?
```

This command sets the rate of the internal square wave pulse modulation source.

***RST** +4.00000000E+002

Range 0.1HZ–20.0kHz

Key Entry Pulse Rate

Remarks This command is used when SQUare is the current pulse modulation type. Refer to “[:SOURce]” on page 194 for the pulse modulation type selection.

:INteRnal[1]:FUNctIon:SHAPE

Supported All

```
[ :SOURce ] :PULM :INteRnal [ 1 ] :FUNctIon :SHAPE PULSe |SQUare
```

```
[ :SOURce ] :PULM :INteRnal [ 1 ] :FUNctIon :SHAPE?
```

This command sets the internal pulse modulation waveform type.

***RST** PULS

Key Entry Internal Square Internal Pulse

Remarks N/A

:INteRnal[1]:PERiod

Supported All

```
[ :SOURce ] :PULM :INteRnal [ 1 ] :PERiod <val><unit> |UP|DOWN
```

```
[ :SOURce ] :PULM :INteRnal [ 1 ] :PERiod?
```

This command sets the period for the internally generated pulse modulation source.

***RST** +8.00000000E-005

Range 8uS–30S

Key Entry	Pulse Period
Remarks	If the entered value for the pulse period is equal to or less than the value for the pulse width, the pulse width changes to a value that is equal to the pulse period. Refer to “:INTErnal[1]:PERiod:STEP[:INCRement]” on page 193 for setting the value associated with the UP and DOWN choices.

:INTErnal[1]:PERiod:STEP[:INCRement]

Supported	All
	<code>[:SOURCE] :PULM :INTErnal [1] :PERiod :STEP [: INCRement] <val><unit> UP DOWN</code> <code>[:SOURCE] :PULM :INTErnal [1] :PERiod :STEP [: INCRement] ?</code>
	This command sets the period time step increment for the internally-generated pulse modulation source.
*RST	+1.00000000E-006
Range	4uS-30S
Key Entry	Incr Set
Remarks	The value set by this command is used with the UP and DOWN choices for the pulse period command. Refer to “:INTErnal[1]:PERiod” on page 192 for more information.

:INTErnal[1]:PWIDTH

Supported	All
	<code>[:SOURCE] :PULM :INTErnal [1] :PWIDTH <val><unit> UP DOWN</code> <code>[:SOURCE] :PULM :INTErnal [1] :PWIDTH ?</code>
	This command sets the pulse width for the internally generated pulse modulation source.
<hr/>	
NOTE	A power search is recommended for signals with pulse widths less than one microsecond. Refer to “:ALC:SEARCh” on page 54.
<hr/>	
*RST	+4.00000000E-005
Range	4uS-30S
Key Entry	Pulse Width
Remarks	If the entered value for the pulse width is equal to or greater than the value for the

Pulse Modulation Subsystem ([:SOURce]:PULM)

pulse period, the pulse width will change to a value that is equal to the pulse period.

Refer to “:INTErnal[1]:PWIDth:STEP” on page 194 for setting the value associated with the UP and DOWN choices.

:INTErnal[1]:PWIDth:STEP

Supported All

[:SOURce] :PULM :INTErnal [1] :PWIDth :STEP <num> [<time suffix>]

[:SOURce] :PULM :INTErnal [1] :PWIDth :STEP?

This command sets the step increment for the pulse width.

The optional variable [<time suffix>] accepts nS (nano-seconds) to S (seconds).

***RST** +1.00000000E-006

Range 4uS-30S

Key Entry N/A

Remarks The value set by this command is used by the UP and DOWN choices for the pulse width command. Refer to “:INTErnal[1]:PWIDth” on page 193 for more information.

:SOURce

Supported All

[:SOURce] :PULM :SOURce INT | EXT [1] | EXT2

[:SOURce] :PULM :SOURce?

This command sets the source that will generate the pulse modulation.

***RST** INT

Key Entry Internal Square Internal Pulse Ext1 DC-Coupled Ext2 DC-Coupled

Remarks N/A

:STATe

Supported All

[:SOURce] :PULM :STATe ON | OFF | 1 | 0

[:SOURce] :PULM :STATe?

This command enables or disables the operating state of the pulse modulation source.

***RST** 0

Key Entry **Pulse Off On**

Remarks When pulse modulation is enabled, the PULSE annunciator is shown in the display

Analog Commands

Pulse Modulation Subsystem ([:SOURce]:PULM)

5 Component Test Digital Commands

This chapter provides SCPI descriptions for subsystems dedicated to digital component testing for the ESG Vector Signal Generator. This chapter contains the following major sections:

- “All Subsystem–Option 001/601 or 002/602 ([:SOURce])” on page 198
- “AWGN ARB Subsystem–Option 403 ([:SOURce]:RADio:AWGN:ARB)” on page 199
- “CDMA ARB Subsystem–Option 401 ([:SOURce]:RADio:CDMA:ARB)” on page 207
- “CDMA2000 ARB Subsystem–Option 401 ([:SOURce]:RADio:CDMA2000:ARB)” on page 229
- “Dmodulation Subsystem–Option 001/601 or 002/602 ([:SOURce]:RADio:DMODulation:ARB)” on page 257
- “Dual ARB Subsystem–Option 001/601 or 002/602 ([:SOURce]:RADio:ARB)” on page 277
- “Multitone Subsystem–Option 001/601 or 002/602 ([:SOURce]:RADio:MTONe:ARB)” on page 294
- “Wideband CDMA ARB Subsystem–Option 400 ([:SOURce]:RADio:WCDMa:TGPP:ARB)” on page 306

All Subsystem–Option 001/601 or 002/602 ([:SOURce])

:RADio:ALL:OFF

Supported All with Option 001/601 or 002/602

[[:SOURce]:RADio:ALL:OFF

This command disables all digital modulation personalities on a particular baseband.

***RST** N/A

Range N/A

Key Entry N/A

Remarks This command does not affect analog modulation.

AWGN ARB Subsystem–Option 403 ([:SOURce]:RADio:AWGN:ARB)

:BWIDth

Supported All with Option 403

```
[ :SOURce ] :RADio :AWGN :ARB :BWIDth <val>
[ :SOURce ] :RADio :AWGN :ARB :BWIDth?
```

This command adjusts the bandwidth of the AWGN waveform.

The variable <val> is expressed in units of Hertz (Hz–MHz).

***RST** +1.00000000E+006

Range 5E4–1.5E7

Key Entry Bandwidth

Remarks N/A

:IQ:EXTernal:FILTer

Supported All with Option 403

```
[ :SOURce ] :RADio :AWGN :ARB :IQ :EXTernal :FILTer 40e6 |THRough
[ :SOURce ] :RADio :AWGN :ARB :IQ :EXTernal :FILTer?
```

This command selects the filter or through path for I/Q signals routed to the rear panel I and Q outputs. Selecting a filter setting with this command will automatically set the “[:IQ:EXTernal:FILTer:AUTO](#)” on page 199 command to Off mode.

40e6 This choice applies a 40 MHz baseband filter.

THRough This choice bypasses filtering.

***RST** THR

Key Entry 40.000 MHz Through

Remarks N/A

:IQ:EXTernal:FILTer:AUTO

Supported All with Option 403

```
[ :SOURce ] :RADio :AWGN :ARB :IQ :EXTernal :FILTer :AUTO ON | OFF | 1 | 0
[ :SOURce ] :RADio :AWGN :ARB :IQ :EXTernal :FILTer :AUTO?
```

This command enables or disables the automatic selection of the filters for I/Q signals routed to the rear panel I/Q outputs.

ON(1)	This choice will automatically select a digital modulation filter optimized for the current signal generator settings.
OFF(0)	This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “:IQ:EXTERNAL:FILTER” on page 199 for selecting a filter or through path.
*RST	ON
Key Entry	I/Q Output Filter Manual Auto
Remarks	N/A

:HEADer:CLEAr

Supported All with Option 403

[:SOURce] :RADio:AWGN:ARB:HEADer:CLEAr

This command clears the header information from the header file used by this modulation format.

***RST** N/A

Key Entry Clear Header

Remarks The **AWGN Off On** softkey must be set to On for this command to function.

:HEADer:SAVE

Supported All with Option 403

[:SOURce] :RADio:AWGN:ARB:HEADer:SAVE

This command saves the header information to the header file used by this modulation format.

***RST** N/A

Key Entry Save Setup To Header

Remarks The **AWGN Off On** softkey must be set to On for this command to function.

:IQ:MODulation:ATTen

Supported All with Option 403

[:SOURce] :RADio:AWGN:ARB:IQ:MODulation:ATTen <val>

[:SOURce] :RADio:AWGN:ARB:IQ:MODulation:ATTen?

This command attenuates the I/Q signals being modulated through the signal generator RF path.

The variable <val> is expressed in units of decibels (dB).

***RST** +2.00000000E+000
Range 0–40
Key Entry **Modulator Atten Manual Auto**
Remarks N/A

:IQ:MODulation:ATTen:AUTO

Supported All with Option 403

```
[ :SOURCE ] :RADio:AWGN:ARB:IQ:MODulation:ATTen:AUTO ON|OFF|1|0
[ :SOURCE ] :RADio:AWGN:ARB:IQ:MODulation:ATTen:AUTO?
```

This command enables or disables the I/Q attenuation auto mode.

ON (1) This choice enables the attenuation auto mode which optimizes the modulator attenuation for the current conditions.

OFF (0) This choice holds the attenuator at its current setting or at a selected value. Refer to “[:IQ:MODulation:ATTen](#)” on page 200 for setting the attenuation value.

***RST** 1
Key Entry **Modulator Atten Manual Auto**
Remarks N/A

:IQ:MODulation:FILTer

Supported All with Option 403

```
[ :SOURCE ] :RADio:AWGN:ARB:IQ:MODulation:FILTer 2.1e6|40e6|THROUGH
[ :SOURCE ] :RADio:AWGN:ARB:IQ:MODulation:FILTer?
```

This command enables you to select a filter or through path for I/Q signals modulated onto the RF carrier. Selecting a filter with this command will automatically set “[:IQ:MODulation:ATTen:AUTO](#)” on page 201 to Off(0) mode.

2.1E6 This choice applies a 2.1 MHz baseband filter to the I/Q signals.

40E6 This choice applies a 40 MHz baseband filter to the I/Q signals.

THROUGH This choice bypasses filtering.

*RST	THR			
Key Entry	2.100 MHz	40.000 MHz	Through	
Remarks	N/A			

:IQ:MODulation:FILTer:AUTO

Supported All with Option 403

```
[ :SOURce ] :RADio :AWGN :ARB :IQ :MODulation :FILTer :AUTO ON | OFF | 1 | 0
[ :SOURce ] :RADio :AWGN :ARB :IQ :MODulation :FILTer :AUTO ?
```

This command enables or disables the automatic selection of the filters for I/Q signals modulated onto the RF carrier.

ON(1) This choice will automatically select a digital modulation filter.

OFF(0) This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “[:IQ:MODulation:FILTer](#)” on page 281 for selecting a filter or through path.

*RST	1
Key Entry	I/Q Mod Filter Manual Auto
Remarks	N/A

:MDEStination:PULSe

Supported All with Option 403

```
[ :SOURce ] :RADio :AWGN :ARB :MDEStination :PULSe NONE | M1 | M2 | M3 | M4
[ :SOURce ] :RADio :AWGN :ARB :MDEStination :PULSe ?
```

This command routes the selected marker to the Pulse/RF Blanking function. The NONE parameter clears the marker for the Pulse/RF Blanking functions.

*RST	NONE				
Key Entry	None	Marker 1	Marker 2	Marker 3	Marker 4
Remarks	N/A				

:MDEStination:AAMPLitude

Supported All with Option 403

```
[ :SOURce ] :RADio :AWGN :ARB :MDEStination :AAMPLitude NONE | M1 | M2 | M3 | M4
[ :SOURce ] :RADio :AWGN :ARB :MDEStination :AAMPLitude ?
```


This command routes the selected marker to the Alternate Amplitude function. The NONE parameter clears the marker for the Alternate Amplitude function.

*RST	NONE				
Key Entry	None	Marker 1	Marker 2	Marker 3	Marker 4
Remarks	N/A				

:MDEStination:ALCHold

Supported All with Option 403

```
[ :SOURce ] :RADio :AWGN :ARB :MDEStination :ALCHold NONE | M1 | M2 | M3 | M4
[ :SOURce ] :RADio :AWGN :ARB :MDEStination :ALCHold?
```

This command routes the selected marker to the ALC Hold function. The NONE parameter clears the marker for the ALC Hold function.

*RST	NONE				
Key Entry	None	Marker 1	Marker 2	Marker 3	Marker 4
Remarks	N/A				

:MPOLarity:MARKer1

Supported All with Option 403

```
[ :SOURce ] :RADio :AWGN :ARB :MPOLarity :MARKer1 NEGative | POSitive
[ :SOURce ] :RADio :AWGN :ARB :MPOLarity :MARKer1?
```

This command sets the polarity for marker 1.

*RST	POS				
Key Entry	Marker 1 Polarity Neg Pos				
Remarks	N/A				

:MPOLarity:MARKer2

Supported All with Option 403

```
[ :SOURce ] :RADio :AWGN :ARB :MPOLarity :MARKer2 NEGative | POSitive
[ :SOURce ] :RADio :AWGN :ARB :MPOLarity :MARKer2?
```

This command sets the polarity for marker 2.

*RST	POS				
Key Entry	Marker 2 Polarity Neg Pos				

Remarks N/A

:MPOLarity:MARKer3

Supported All with Option 403

```
[ :SOURce ] :RADio:AWGN:ARB:MPOLarity:MARKer3 NEGative | POSitive
[ :SOURce ] :RADio:AWGN:ARB:MPOLarity:MARKer3?
```

This command sets the polarity for marker 3.

***RST** POS

Key Entry Marker 3 Polarity Neg Pos

Remarks N/A

:MPOLarity:MARKer4

Supported All with Option 403

```
[ :SOURce ] :RADio:AWGN:ARB:MPOLarity:MARKer4 NEGative | POSitive
[ :SOURce ] :RADio:AWGN:ARB:MPOLarity:MARKer4?
```

This command sets the polarity for marker 4.

***RST** POS

Key Entry Marker 4 Polarity Neg Pos

Remarks N/A

:LENGth

Supported All with Option 403

```
[ :SOURce ] :RADio:AWGN:ARB:LENGth 1048576 | 524288 | 262144 | 131072 | 65536 |
32768 | 16384
[ :SOURce ] :RADio:AWGN:ARB:LENGth?
```

This command specifies the length (number of points) of the AWGN waveform.

***RST** +524288

Key Entry 1048576 524288 262144 131072 65536 32768 16384

Remarks A longer waveform yields a statistically more correct waveform.

:REFerence:EXTernal:FREQuency

Supported All with Option 403

```
[ :SOURCE ] :RADio:AWGN:ARB:REFerence:EXTernal:FREQuency <val>
[ :SOURCE ] :RADio:AWGN:ARB:REFerence:EXTernal:FREQuency?
```

This command allows you to enter the frequency of the applied external reference.

The variable <val> is expressed in units of Hertz (Hz–MHz).

***RST** +1.00000000E+007

Range 2.5E5–1E8

Key Entry Reference Freq

Remarks The value specified by this command is effective only when you are using an external ARB reference applied to the BASEBAND GEN REF IN rear panel connector.

To specify external as the ARB reference source type, refer to “:REFerence[:SOURCE]” on page 266.

:REFerence[:SOURCE]

Supported All with Option 403

```
[ :SOURCE ] :RADio:AWGN:ARB:REFerence[ :SOURCE ] INTernal | EXTernal
[ :SOURCE ] :RADio:AWGN:ARB:REFerence[ :SOURCE ]?
```

This command selects either an internal or external reference for the waveform clock.

***RST** INT

Key Entry ARB Reference Ext Int

Remarks If the EXTernal choice is selected, the external frequency *value must* be entered and the signal must be applied to the BASEBAND GEN REF IN rear panel connector.

Refer to “:REFerence:EXTernal:FREQuency” on page 265 to enter the external reference frequency.

:SCLock:RATE

Supported All with Option 403

```
[ :SOURCE ] :RADio:AWGN:ARB:SCLock:RATE <val>
[ :SOURCE ] :RADio:AWGN:ARB:SCLock:RATE?
```

This command sets the sample clock rate for the AWGN modulation format.

The variable <val> is expressed in units of hertz.

AWGN ARB Subsystem–Option 403 ([:SOURce]:RADio:AWGN:ARB)

*RST	+1.00000000E+008
Range	1–1E8
Key Entry	ARB Sample Clock
Remarks	The modulation format should be active before executing this command. If this command is executed before the modulation format is active, the entered value will be overridden by a calculated factory default value. Refer to “[:STATe]” on page 206 to activate the modulation format.

:SEED

Supported	All with Option 403
	[:SOURce] :RADio :AWGN :ARB :SEED FIXed RANDom [:SOURce] :RADio :AWGN :ARB :SEED?
	This command toggles the AWGN waveform noise seed value type.
FIXed	This choice selects a fixed noise seed value.
RANDom	This choice selects a randomly generated noise seed value.
*RST	FIX
Key Entry	Noise Seed Fixed Random
Remarks	N/A

[:STATe]

Supported	All with Option 403
	[:SOURce] :RADio :AWGN :ARB [:STATe] ON OFF 1 0 [:SOURce] :RADio :AWGN :ARB [:STATe]?
	This command enables or disables the AWGN generator function.
*RST	0
Key Entry	Arb AWGN Off On
Remarks	N/A

CDMA ARB Subsystem–Option 401 ([:SOURce]:RADio:CDMA:ARB)

:CLIPping:I

Supported All with Option 401

[:SOURce] :RADio:CDMA:ARB:CLIPping:I <val>

[:SOURce] :RADio:CDMA:ARB:CLIPping:I?

This command clips (limits) the modulation level of the waveform’s I component to a percentage of full scale.

The variable <val> is expressed in units of percent.

***RST** +1.00000000E+002

Range 10–100

Key Entry Clip |I| To

Remarks N/A

:CLIPping:POSition

Supported All with Option 401

[:SOURce] :RADio:CDMA:ARB:CLIPping:POSition PRE|POST

[:SOURce] :RADio:CDMA:ARB:CLIPping:POSition?

This command specifies whether a waveform is clipped before (PRE) or after (POST) FIR filtering.

***RST** PRE

Key Entry Clip At PRE POST FIR Filter

Remarks N/A

:CLIPping:Q

Supported All with Option 401

[:SOURce] :RADio:CDMA:ARB:CLIPping:Q <val>

[:SOURce] :RADio:CDMA:ARB:CLIPping:Q?

This command clips (limits) the modulation level of the waveform’s Q component to a percentage of full scale.

The variable <val> is expressed in units of percent.

***RST** +1.00000000E+002
Range 10–100
Key Entry Clip |Q| To
Remarks N/A

:CLIPping:TYPE

Supported All with Option 401

[:SOURce] :RADio:CDMA:ARB:CLIPping:TYPE IJQ | IORQ
 [:SOURce] :RADio:CDMA:ARB:CLIPping:TYPE?

This command selects either IJQ or IORQ as the clipping type.

IJQ The combined I and Q waveform will be clipped (*circular clipping*).

IORQ The I and Q components of the waveform are clipped independently (*rectangular clipping*). I and Q can be clipped to different levels using this mode.

***RST** IJQ
Key Entry Clipping Type |I+jQ| |I|,|Q|
Remarks N/A.

:CLIPping[:IJQ]

Supported All with Option 401

[:SOURce] :RADio:CDMA:ARB:CLIPping[:IJQ] <val>
 [:SOURce] :RADio:CDMA:ARB:CLIPping[:IJQ]?

This command clips (limits) the modulation level of the combined I and Q waveform to a percentage of full scale.

The variable <val> is expressed in units of percent.

***RST** +1.00000000E+002
Range 10–100
Key Entry Clip |I+jQ| To
Remarks N/A

:CRATe

Supported All with Option 401

```
[ :SOURce ]:RADio:CDMA:ARB:CRATe <val>
[:SOURce]:RADio:CDMA:ARB:CRATe?
```

This command sets the chip rate value.

The variable <val> is expressed as chips per second (cps–Mcps).

*RST	+1.22880000E+006
Range	10–8E6
Key Entry	Chip Rate
Remarks	N/A

:IQ:EXTernal:FILTer

Supported All with Option 401

```
[ :SOURce ]:RADio:CDMA:ARB:IQ:EXTernal:FILTer 40e6 | THRough
[:SOURce]:RADio:CDMA:ARB:IQ:EXTernal:FILTer?
```

This command selects the filter or through path for I/Q signals routed to the rear panel I and Q outputs. Selecting a filter using this command will automatically set “:IQ:EXTernal:FILTer:AUTO” on [page 209](#) to OFF(0) mode.

40e6	This choice applies a 40 MHz baseband filter.	
THRough	This choice bypasses filtering.	
*RST	THR	
Key Entry	40.000 MHz	Through
Remarks	N/A	

:IQ:EXTernal:FILTer:AUTO

Supported All with Option 401

```
[ :SOURce ]:RADio:CDMA:ARB:IQ:EXTernal:FILTer:AUTO ON | OFF | 1 | 0
[:SOURce]:RADio:CDMA:ARB:IQ:EXTernal:FILTer:AUTO?
```

This command enables or disables the automatic selection of the filters for I/Q signals routed to the rear panel I/Q outputs.

ON(1)	This choice will automatically select a digital modulation filter optimized for the current signal generator settings.
OFF(0)	This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “:IQ:EXTernal:FILTer” on page 209 for selecting a

filter or through path.

***RST** 1

Key Entry I/Q Output Filter Manual Auto

Remarks N/A

:FILTer

Supported All with Option 401

```
[:SOURCE]:RADIO:CDMA:ARB:FILTer RNYquist|NYquist|GAUSSian|RECTangle|
IS95|IS95_EQ|IS95_MOD|IS95_MOD_EQ|WCDMA|AC4Fm|IS2000SR3DS|UGGaussian|
"<user FIR>"
[:SOURCE]:RADIO:CDMA:ARB:FILTer?
```

This command selects the pre-modulation filter type.

- IS95 This choice selects a filter that meets the criteria of the IS-95 standard.
- IS95_EQ This choice selects a filter which is a combination of the IS-95 filter (above) and the equalizer filter described in the IS-95 standard. This filter is only used for IS-95 baseband filtering.
- IS95_MOD This choice selects a filter that meets the criteria of the IS-95 error function (for improved adjacent channel performance) with lower passband rejection than the filter specified in the IS-95 standard.
- IS95_MOD_EQ This choice selects a filter which is a combination of the equalizer filter described in the IS-95 standard and a filter that meets the criteria of the IS-95 error function (for improved adjacent channel performance), with lower passband rejection.
- WCDMA This choice selects a 0.22 Nyquist filter optimized for ACP.
- AC4Fm This choice selects a predefined Association of Public Safety Communications Officials (APCO) specified compatible 4-level frequency modulation (C4FM) filter.
- IS2000SR3DS This choice selects an IS-2000 standard, spread rate 3 direct spread filter.
- UGGaussian This choice selects a backwards compatible GSM Gaussian filter (Gaussian filter with a fixed BbT value of 0.300) for the ESG E44xxB Option UN3 or UN4.
- "<user FIR>" This variable is any filter file that you have stored into memory.

***RST** GUAS

Key Entry Root Nyquist Nyquist Gaussian Rectangle IS-95 IS-95 w/EQ
 IS-95 Mod IS-95 Mod w/EQ WCDMA APCO 25 C4FM IS-2000 SR3 DS

	UN3/4 GSM Gaussian User FIR
Remarks	Refer to “ File Name Variables ” on page 13 for information on the file name syntax.

:FILTer:ALPHa

Supported All with Option 401

[:SOURce] :RADio :CDMA :ARB :FILTer :ALPHa <val>

[:SOURce] :RADio :CDMA :ARB :FILTer :ALPHa?

This command changes the Nyquist or root Nyquist filter’s alpha value.

The filter alpha value can be set to the minimum level (0), the maximum level (1), or in between by using fractional numeric values (0.001–0.999).

***RST** +5.00000000E–001

Range 0.000–1.000

Key Entry Filter Alpha

Remarks To change the current filter type, refer to “[:FILTer](#)” on page 210.

:FILTer:BBT

Supported All with Option 401

[:SOURce] :RADio :CDMA :ARB :FILTer :BBT <val>

[:SOURce] :RADio :CDMA :ARB :FILTer :BBT?

This command changes the bandwidth-multiplied-by-bit-time (BbT) filter parameter.

The filter BbT value can be set to the minimum level (0), the maximum level (1), or in between by using fractional numeric values (0.001–0.999).

***RST** +5.00000000E–001

Range 0.000–1.000

Key Entry Filter BbT

Remarks This command is effective only after choosing a Gaussian filter. It does not have an effect on other types of filters.

To change the current filter type, refer to “[:FILTer](#)” on page 210.

:FILTer:CHANnel

Supported All with Option 401

CDMA ARB Subsystem–Option 401 ([:SOURce]:RADio:CDMA:ARB)

```
[ :SOURce ] :RADio:CDMA:ARB:FILTer:CHANnel EVM|ACP
[ :SOURce ] :RADio:CDMA:ARB:FILTer:CHANnel?
```

This command optimizes the Nyquist and root Nyquist filters to minimize error vector magnitude (EVM) or to minimize adjacent channel power (ACP).

- EVM** This choice provides the most ideal passband.
- ACP** This choice improves stopband rejection.
- *RST** EVM
- Key Entry** **Optimize FIR For EVM ACP**
- Remarks** To change the current filter type, refer to “:FILTer” on page 210.

:HEADer:CLEAr

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA:ARB:HEADer:CLEAr
```

This command clears the header information from the header file used by this modulation format.

- *RST** N/A
- Key Entry** **Clear Header**
- Remarks** The **CDMA Off On** softkey must be set to On for this command to function.

:HEADer:SAVE

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA:ARB:HEADer:SAVE
```

This command saves the header information to the header file used by this modulation format.

- *RST** N/A
- Key Entry** **Save Setup To Header**
- Remarks** The **CDMA Off On** softkey must be set to On for this command to function.

:IQMap

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA:ARB:IQMap NORMAl|INVerted
[ :SOURce ] :RADio:CDMA:ARB:IQMap?
```

This command selects whether the Q output will be normal or inverted.

NORMAL	This choice selects normal polarity.
INVERTed	This choice inverts the internal Q signal.
*RST	NORM
Key Entry	I/Q Mapping Normal Invert
Remarks	Inverting the Q output inverts the RF spectrum after the modulation.

:IQ:MODulation:ATTen

Supported	All with Option 401
	<code>[:SOURce] :RADio :CDMA :ARB :IQ :MODulation :ATTen <val></code>
	<code>[:SOURce] :RADio :CDMA :ARB :IQ :MODulation :ATTen?</code>

This command attenuates the I/Q signals being modulated through the signal generator RF path. The variable <val> is expressed in units of decibels (dB).

*RST	+2.00000000E+000
Range	0–40
Key Entry	Modulator Atten Manual Auto
Remarks	N/A

:IQ:MODulation:ATTen:AUTO

Supported	All with Option 401
	<code>[:SOURce] :RADio :CDMA :ARB :IQ :MODulation :ATTen :AUTO ON OFF 1 0</code>
	<code>[:SOURce] :RADio :CDMA :ARB :IQ :MODulation :ATTen :AUTO?</code>

This command enables or disables the I/Q attenuation auto mode.

ON (1)	This choice enables the attenuation auto mode which optimizes the modulator attenuation for the current conditions.
OFF (0)	This choice holds the attenuator at its current setting or at a selected value. Refer to “:IQ:MODulation:ATTen” on page 213 for setting the attenuation value.
*RST	1
Key Entry	Modulator Atten Manual Auto
Remarks	N/A

:IQ:MODulation:FILTer**Supported** All with Option 401

```
[ :SOURCE ]:RADio:CDMA:ARB:IQ:MODulation:FILTer 2.1e6|40e6|THROUGH
[:SOURCE]:RADio:CDMA:ARB:IQ:MODulation:FILTer?
```

This command enables you to select a filter or through path for I/Q signals modulated onto the RF carrier. Selecting a filter using this command will automatically set “[:IQ:MODulation:ATTen:AUTO](#)” on [page 213](#) to OFF(0) mode.

2.1E6 This choice applies a 2.1 MHz baseband filter to the I/Q signals.

40E6 This choice applies a 40 MHz baseband filter to the I/Q signals.

THROUGH This choice bypasses filtering.

***RST** THR

Key Entry 2.100 MHz 40.000 MHz Through

Remarks N/A

:IQ:MODulation:FILTer:AUTO**Supported** All with Option 401

```
[ :SOURCE ]:RADio:CDMA:ARB:IQ:MODulation:FILTer:AUTO ON|OFF|1|0
[:SOURCE]:RADio:CDMA:ARB:IQ:MODulation:FILTer:AUTO?
```

This command enables or disables the automatic selection of the filters for I/Q signals modulated onto the RF carrier.

ON(1) This choice will automatically select a digital modulation filter.

OFF(0) This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “[:IQ:MODulation:FILTer](#)” on [page 281](#) for selecting a filter or through path.

***RST** 1

Key Entry I/Q Mod Filter Manual Auto

Remarks N/A

:MDESTination:PULSe**Supported** All with Option 401

```
[ :SOURCE ]:RADio:CDMA:ARB:MDESTination:PULSe NONE|M1|M2|M3|M4
[:SOURCE]:RADio:CDMA:ARB:MDESTination:PULSe?
```

This command routes the selected marker to the Pulse/RF Blanking function. The NONE parameter clears the marker for the Pulse/RF Blanking functions.

*RST	NONE				
Key Entry	None	Marker 1	Marker 2	Marker 3	Marker 4
Remarks	N/A				

:MDEStination:AAMPlitude

Supported All with Option 401

```
[:SOURCE]:RADio:CDMA:ARB:MDEStination:AAMPlitude NONE|M1|M2|M3|M4
[:SOURCE]:RADio:CDMA:ARB:MDEStination:AAMPlitude?
```

This command routes the selected marker to the Alternate Amplitude function. The NONE parameter clears the marker for the Alternate Amplitude function.

*RST	NONE				
Key Entry	None	Marker 1	Marker 2	Marker 3	Marker 4
Remarks	N/A				

:MDEStination:ALCHold

Supported All with Option 401

```
[:SOURCE]:RADio:CDMA:ARB:MDEStination:ALCHold NONE|M1|M2|M3|M4
[:SOURCE]:RADio:CDMA:ARB:MDEStination:ALCHold?
```

This command routes the selected marker to the ALC Hold function. The NONE parameter clears the marker for the ALC Hold function.

*RST	NONE				
Key Entry	None	Marker 1	Marker 2	Marker 3	Marker 4
Remarks	N/A				

:MPOLarity:MARKer1

Supported All with Option 401

```
[:SOURCE]:RADio:CDMA:ARB:MPOLarity:MARKer1 NEGative|POSitive
[:SOURCE]:RADio:CDMA:ARB:MPOLarity:MARKer1?
```

This command sets the polarity for marker 1.

*RST	POS
-------------	-----

Key Entry **Marker 1 Polarity Neg Pos**

Remarks N/A

:MPOLarity:MARKer2

Supported All with Option 401

[:SOURCE] :RADIo:CDMA:ARB:MPOLarity:MARKer2 NEGative | POSitive
[:SOURCE] :RADIo:CDMA:ARB:MPOLarity:MARKer2?

This command sets the polarity for marker 2.

***RST** POS

Key Entry **Marker 2 Polarity Neg Pos**

Remarks N/A

:MPOLarity:MARKer3

Supported All with Option 401

[:SOURCE] :RADIo:CDMA:ARB:MPOLarity:MARKer3 NEGative | POSitive
[:SOURCE] :RADIo:CDMA:ARB:MPOLarity:MARKer3?

This command sets the polarity for marker 3.

***RST** POS

Key Entry **Marker 3 Polarity Neg Pos**

Remarks N/A

:MPOLarity:MARKer4

Supported All with Option 401

[:SOURCE] :RADIo:CDMA:ARB:MPOLarity:MARKer4 NEGative | POSitive
[:SOURCE] :RADIo:CDMA:ARB:MPOLarity:MARKer4?

This command sets the polarity for marker 4.

***RST** POS

Key Entry **Marker 4 Polarity Neg Pos**

Remarks N/A

:OSAMple

Supported All with Option 401

`[:SOURce]:RADio:CDMA:ARB:OSAMple <val>`

`[:SOURce]:RADio:CDMA:ARB:OSAMple?`

This command sets the oversampling ratio (number of filter taps per symbol) for CDMA modulation.

***RST** +5

Range 2–8

Key Entry **Oversample Ratio**

Remarks The upper limit of the oversample ratio is adjusted based on the waveform length and chip rate.

Using larger oversample ratios result in more completely filtered images, but this action also uses up more waveform memory.

The maximum oversample ratio is the smaller of 8, 40 Mcps/Chip Rate, or 32/Waveform Length (number of CDMA short codes).

:REFerence:EXTernal:FREQuency

Supported All with Option 401

`[:SOURce]:RADio:CDMA:ARB:REFerence:EXTernal:FREQuency <val>`

`[:SOURce]:RADio:CDMA:ARB:REFerence:EXTernal:FREQuency?`

This command allows you to enter the frequency of the applied external reference.

The variable <val> is expressed in units of Hertz (Hz–MHz).

***RST** +1.00000000E+007

Range 2.5E5–1E8

Key Entry **Reference Freq**

Remarks The value specified by this command is effective only when you are using an external ARB reference applied to the BASEBAND GEN REF IN rear panel connector.

To specify external as the ARB reference source type, refer to [“:REFerence\[:SOURce\]” on page 217](#).

:REFerence[:SOURce]

Supported All with Option 401

CDMA ARB Subsystem–Option 401 ([:SOURCE]:RADio:CDMA:ARB)

```
[ :SOURCE ] :RADio:CDMA:ARB:REFEreNce[ :SOURCE ] INTernal | EXTernal
[ :SOURCE ] :RADio:CDMA:ARB:REFEreNce[ :SOURCE ] ?
```

This command selects either an internal or external reference for the waveform clock.

***RST** INT

Key Entry ARB Reference Ext Int

Remarks If the EXTernal choice is selected, the external frequency value *must* be entered and the signal must be applied to the BASEBAND GEN REF IN rear panel connector.

Refer to “:REFerence:EXTernal:FREQUency” on page 217 to enter the external reference frequency.

:RETRigger

Supported All with Option 401

```
[ :SOURCE ] :RADio:CDMA:ARB:RETRigger ON | OFF | IMMEDIATE
[ :SOURCE ] :RADio:CDMA:ARB:RETRigger ?
```

This command enables or disables the ARB retriggering mode; the retrigger mode controls how the retriggering function performs while a waveform is playing.

ON(1) This choice specifies that if a trigger occurs while a waveform is playing, the waveform will retrigger at the end of the current waveform sequence and play once more.

OFF(0) This choice specifies that if a trigger occurs while a waveform is playing, the trigger will be ignored.

IMMEDIATE This choice specifies that if a trigger occurs while a waveform is playing, the waveform will reset and replay from the start immediately upon receiving a trigger.

***RST** ON

Key Entry On Off Immediate

Remarks N/A

:SCLock:RATE

Supported All with Option 401

```
[ :SOURCE ] :RADio:CDMA:ARB:SCLock:RATE <val>
[ :SOURCE ] :RADio:CDMA:ARB:SCLock:RATE ?
```


This command sets the sample clock rate for the CDMA modulation format.

The variable <val> is expressed in units of hertz.

***RST** +1.00000000E+008

Range 1–1E8

Key Entry **ARB Sample Clock**

Remarks The modulation format should be active before executing this command. If this command is executed before the modulation format is active, the entered value will be overridden by a calculated factory default value. Refer to “[:STATe]” on [page 227](#) to activate the modulation format.

:SETup

Supported All with Option 401

```
[ :SOURce ] :RADio :CDMA :ARB :SETup FWD9 | FWD32 | FWD64 | PILot | REVerse | MCARrier |
"<file name>"
[ :SOURce ] :RADio :CDMA :ARB :SETup?
```

This command selects a pre-defined CDMA channel setup.

FWD9 This CDMA setup consists of 9 forward channels (pilot, paging, sync, and 6 traffic channels) at IS-97-defined power levels.

FWD32 This CDMA setup consists of 32 forward channels (pilot, paging, sync, and 29 traffic channels) at IS-97-defined power levels.

FWD64 This CDMA setup consists of 64 forward channels (pilot, 7 paging, sync, and 55 traffic channels) at IS-97-defined power levels.

PILot This choice selects single pilot channel.

REVerse A single reverse link traffic channel.

MCARrier This choice activates Multicarrier mode (3 carrier setup) and deactivates any other mode that was previously selected. To change multicarrier setup, refer to “[:SETup:MCARrier]” on [page 221](#).

***RST** FWD9

Key Entry 9 Ch Fwd 32 Ch Fwd 64 Ch Fwd Pilot Reverse Multicarrier Off On
 Multicarrier Off On Custom CDMA State

Remarks Refer to “File Name Variables” on [page 13](#) for information on the file name syntax.

:SETup:CHANnel**Supported** All with Option 401

```
[ :SOURCE ]:RADio:CDMA:ARB:SETup:CHANnel IS97|EQUal|SCALe|NONE { ,PILot |
SYNC|PAGing|TRAFfic, <walsh_value>, <power_value>, <pn_offset>, RANDom |
<data_value> }
```

```
[ :SOURCE ]:RADio:CDMA:ARB:SETup:CHANnel?
```

This command defines the channel parameters of the CDMA signal. This allows for customizing of the channel type, the channel parameters, and the data value.

The variable <power_value> is expressed in units of decibels (dB).

IS97	This choice sets the channel power levels to IS-97-defined power levels.
EQUAL	This choice sets the channel power levels so that all channels are of equal power and the total power equals 0 dBm.
SCALe	This choice scales all of the current channel powers so that the total power equals 0 dB while keeping the previous power ratios between the individual channels.
NONE	This choice bypasses the power level setting.
PILot	This choice selects a single traffic channel.
SYNC	This choice selects a sync channel.
PAGing	This choice selects a paging channel.
TRAFfic	This choice selects a traffic channel.
RANDom	This choice selects a randomly generated data value.

The channel type, walsh code, power, PN offset, and data values are returned when a query is initiated. The output format is as follows:

```
<channel_type>, <walsh_value>, <power>, <pn_offset>, <data_value>
```

*RST	Channel #	Channel Type	Walsh Code	Power	PN Offset	Data
	1	PIL	+0	-7.00000000E+000	+0	+0
	2	PAG	+1	-7.26000023E+000	+0	RAND
	3	TRAF	+8	-1.02600002E+001	+0	RAND
	4	TRAF	+9	-1.02600002E+001	+0	RAND
	5	TRAF	+10	-1.02600002E+001	+0	RAND
	6	TRAF	+11	-1.02600002E+001	+0	RAND
	7	TRAF	+12	-1.02600002E+001	+0	RAND
	8	TRAF	+13	-1.02600002E+001	+0	RAND
	9	SYNC	+32	-1.02600002E+001	+0	RAND

Range	<power_value>: -40 to 0	<walsh_value>: 0–63	<pn_offset>: 0–511
Key Entry	IS-97 Levels	Equal Powers	Scale to 0dB Sync Pilot Paging Traffic
Remarks	N/A		

:SETup:MCARrier

Supported All with Option 401

```
[ :SOURce ]:RADio:CDMA:ARB:SETup:MCARrier CAR3 | CAR4 | "<file name>"
[ :SOURce ]:RADio:CDMA:ARB:SETup:MCARrier?
```

This command selects a pre-defined type of multicarrier CDMA setup required for your application.

CAR3 This choice selects three 9 channel forward carriers with a power level of 0.00 dB, the first with a -1.25 MHz frequency offset, the second with no frequency offset, and the third with +1.25 MHz frequency offset.

CAR4 This choice selects four 9 channel forward carriers with a power level of 0.00 dB, the first with a -1.875 MHz frequency offset, the second with a -625 kHz frequency offset, the third with +625 kHz frequency offset, and the fourth with a +1.875 MHz frequency offset.

***RST** CAR3

Key Entry 3 Carriers 4 Carriers Custom CDMA Multicarrier

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:SETup:MCARrier:STORE

Supported All with Option 401

```
[ :SOURce ]:RADio:CDMA:ARB:SETup:MCARrier:STORE "<file name>"
```

This command stores the current multicarrier setup information.

The stored file contains information including the digital modulation format, number of carriers, frequency spacing, and power settings for the multicarrier setup.

***RST** N/A

Range N/A

Key Entry Store Custom Multicarrier

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:SETup:MCARrier:TABLE**Supported** All with Option 401

```
[ :SOURCE ]:RADio:CDMA:ARB:SETup:MCARrier:TABLE { FWD9 | FWD32 | FWD64 | PILot |
CUSTom, "<file name>" | " ", <freq_offset>, <power> }
[ :SOURCE ]:RADio:CDMA:ARB:SETup:MCARrier:TABLE?
```

This command defines the multicarrier CDMA waveform.

The variable <freq_offset> is expressed in units of Hertz (kHz to MHz).

The variable <power> is expressed in units of decibels (dB).

The carrier type, carrier name, frequency offset, and power level are returned when a query is initiated.

The output format is as follows:

```
<carrier type>, <carrier_name>, <freq_offset>, <power>
```

FWD9 This CDMA setup consists of 9 forward channels (pilot, paging, sync, and 6 traffic channels) at IS-97-defined power levels.

FWD32 This CDMA setup consists of 32 forward channels (pilot, paging, sync, and 29 traffic channels) at IS-97-defined power levels.

FWD64 This CDMA setup consists of 64 forward channels (pilot, 7 paging, sync, and 55 traffic channels) at IS-97-defined power levels.

PILot This choice selects single pilot channel.

" " A null string, entered for any non-custom carrier.

***RST** *carrier type:* FWD9 *<freq_offset>:* +1.25000000E+006
<power>: +0.00000000E+000

Range *<freq_offset>:* -7.5E6 to 7.5E6 *<power>:* -40 to 0

Key Entry **9 Ch Fwd** **32 Ch Fwd** **64 Ch Fwd** **Pilot** **Custom CDMA State**

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax. To store a multicarrier setup refer to [“:SETup:MCARrier:STORE” on page 221](#)

The file name specified must be a single carrier CDMA file.

:SETup:STORE**Supported** All with Option 401

```
[ :SOURCE ]:RADio:CDMA:ARB:SETup:STORE "<file name>"
```

This command stores the current custom CDMA state, using a designated file name, to the signal

generator non-volatile memory.

Along with the contents of the CDMA channel table editor (channel types, Walsh code, power levels, PN offset, and data), this command stores the following information to the signal generator non-volatile memory:

- FIR filter
- FIR filter file name
- FIR filter alpha
- FIR filter BbT
- FIR filter channel (EVM or ACP)
- chip rate
- waveform length
- oversample ratio
- ARB reference clock source (internal or external)
- ARB reference clock frequency

***RST** N/A

Range N/A

Key Entry **Store Custom CDMA State**

Remarks Recall the stored file by executing the following command:

[:SOURCE]:RADio:CDMA:ARB:SETup: "<file name>"

Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:TRIGger:TYPE

Supported All with Option 401

[:SOURCE]:RADio:CDMA:ARB:TRIGger:TYPE CONTInuous | SINGle | GATE

[:SOURCE]:RADio:CDMA:ARB:TRIGger:TYPE?

This command sets the trigger type.

CONTInuous The waveform repeats continuously; the waveform restarts every time the previous playback is completed. To customize continuous triggering, refer to [“:TRIGger:TYPE:CONTInuous\[:TYPE\]” on page 224](#).

SINGle The waveform segment or sequence plays once for every trigger received.

GATE An external trigger signal interrupts the playback while the gating signal is in the active state. Playback resumes when the external control signal returns to the inactive state. The active state can be set high or low.

*RST	CONT
Key Entry	Continuous Single Gated
Remarks	To change the polarity of the gated trigger, refer to “:TRIGger:TYPE:GATE:ACTive” on page 224.

:TRIGger:TYPE:CONTInuous[:TYPE]

Supported	All with Option 401
	[:SOURCE] :RADio:CDMA:ARB:TRIGger:TYPE:CONTInuous [:TYPE] FREE TRIGger RESet
	[:SOURCE] :RADio:CDMA:ARB:TRIGger:TYPE:CONTInuous [:TYPE] ?
	This command customizes the continuous trigger selection.
FREE	This choice immediately transmits a waveform that is continuously repeated.
TRIGger	This choice causes the waveform to wait for a trigger. Once a trigger is received, the transmission of a continuously repeated waveform begins.
RESet	This choice immediately restarts a continuously repeated waveform upon receiving a trigger.
*RST	FREE
Key Entry	Free Run Trigger & Run Reset & Run
Remarks	To select CONTInuous as the trigger type, refer to “:TRIGger:TYPE” on page 223.

:TRIGger:TYPE:GATE:ACTive

Supported	All with Option 401
	[:SOURCE] :RADio:CDMA:ARB:TRIGger:TYPE:GATE:ACTive LOW HIGH
	[:SOURCE] :RADio:CDMA:ARB:TRIGger:TYPE:GATE:ACTive?
	This command toggles the polarity of the active state of the external gating input signal; GATE must be selected as the arb trigger type.
LOW	The waveform stops playing while the selected external control gating signal is low and restarts when the gate returns to the high level.
HIGH	The waveform stops playing while the selected external control gating signal is high and restarts when the gate returns to the low level.
*RST	HIGH
Key Entry	Gate Active Low High

Remarks To select GATE as the ARB trigger type, refer to “:TRIGger:TYPE” on page 223.

:TRIGger[:SOURce]

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA:ARB:TRIGger [ :SOURce ] KEY | EXT | BUS
[ :SOURce ] :RADio:CDMA:ARB:TRIGger [ :SOURce ] ?
```

This command sets the trigger source.

- | | |
|------------|--|
| KEY | This choice enables triggering by pressing the front panel Trigger hardkey. |
| EXT | This choice enables triggering using an externally applied signal at the PATT TRIG IN rear panel connector or the PATT TRIG IN 2 pin on the rear panel AUX I/O connector. To select the appropriate connector, refer to “:TRIGger[:SOURce]:EXTErnal[:SOURce]” on page 225. |
| BUS | This choice enables GPIB triggering using the *TRG or GET command or LAN and RS-232 triggering using the *TRG command. |

***RST** KEY

Key Entry	Trigger Key	Ext	Bus
------------------	--------------------	------------	------------

Remarks N/A

:TRIGger[:SOURce]:EXTErnal[:SOURce]

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA:ARB:TRIGger [ :SOURce ] :EXTErnal [ :SOURce ] EPT1 | EPT2 |
EPTRIGGER1 | EPTRIGGER2
[ :SOURce ] :RADio:CDMA:ARB:TRIGger [ :SOURce ] :EXTErnal [ :SOURce ] ?
```

This command specifies which PATT TRIG IN connection, rear panel connector or AUX I/O connector, will be used to accept an externally applied trigger signal.

- | | |
|-------------------|--|
| EPT1 | This choice is synonymous with EPTRIGGER1 and selects the PATT TRIG IN rear panel connector for the external signal connection. |
| EPT2 | This choice is synonymous with EPTRIGGER2 and selects the PATT TRIG IN 2 pin on the rear panel AUX I/O connector for the external signal connection. |
| EPTRIGGER1 | This choice is synonymous with EPT1 and selects the PATT TRIG IN rear panel connector for the external signal connection. |
| EPTRIGGER2 | This choice is synonymous with EPT2 and selects the PATT TRIG IN 2 pin on the rear panel AUX I/O connector for the external signal connection. |

*RST	EPT1
Key Entry	Patt Trig In 1 Patt Trig In 2
Remarks	This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURCE]” on page 225. For more information about the rear panel AUX I/O connector pin configuration, refer to the <i>User’s Guide</i> .

:TRIGger[:SOURCE]:EXtErnal:DELay

Supported	All with Option 401
	[:SOURCE] :RADio:CDMA:ARB:TRIGger[:SOURCE] :EXtErnal:DELay <val> [:SOURCE] :RADio:CDMA:ARB:TRIGger[:SOURCE] :EXtErnal:DELay?
	This command specifies the time (seconds) for the external trigger delay. The variable <val> is expressed as seconds (μ sec–sec).
*RST	+1.00000000E–003
Range	1E–8 to 4E1
Key Entry	Ext Delay Time
Remarks	This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURCE]” on page 225.

:TRIGger[:SOURCE]:EXtErnal:DELay:STATe

Supported	All with Option 401
	[:SOURCE] :RADio:CDMA:ARB:TRIGger[:SOURCE] :EXtErnal:DELay:STATe ON OFF 1 0 [:SOURCE] :RADio:CDMA:ARB:TRIGger[:SOURCE] :EXtErnal:DELay:STATe?
	This command enables or disables the operating state of the external trigger delay function.
*RST	0
Key Entry	Ext Delay Off On
Remarks	This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURCE]” on page 225.

:TRIGger[:SOURce]:EXTernal:SLOPe

Supported All with Option 401

```
[:SOURCE]:RADio:CDMA:ARB:TRIGger[:SOURCE]:EXTernal:SLOPe POSitive|
NEGative
[:SOURCE]:RADio:CDMA:ARB:TRIGger[:SOURCE]:EXTernal:SLOPe?
```

This command sets the polarity of the external trigger.

***RST** NEG

Key Entry Ext Polarity Neg Pos

Remarks This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURCE]” on page 225.

:WLENgth

Supported All with Option 401

```
[:SOURCE]:RADio:CDMA:ARB:WLENgth <val>
[:SOURCE]:RADio:CDMA:ARB:WLENgth?
```

This command specifies the waveform length (in short codes).

***RST** +1

Range 1–6

Key Entry Waveform Length

Remarks The upper limit is adjusted based on the oversample ratio to fit the signal within the available memory.

The maximum waveform length is 32/oversample ratio.

[:STATe]

Supported All with Option 401

```
[:SOURCE]:RADio:CDMA:ARB[:STATe] ON|OFF|1|0
[:SOURCE]:RADio:CDMA:ARB[:STATe]?
```

This command enables or disables the CDMA modulation format.

Executing the command [:SOURCE]:RADio:CDMA:ARB[:STATe] ON sets up the internal hardware to generate the currently selected CDMA signal selection. This also activates the I/Q state and sets the I/Q source to internal.

ON (1) This choice sets up the internal hardware to generate the currently selected

	CDMA signal selection. This also activates the I/Q state and sets the I/Q source to internal.
OFF (0)	This choice disables the CDMA modulation format.
*RST	0
Key Entry	CDMA Off On
Remarks	<p>The enabled modulation is not present on RF carrier until you have activated the modulation by executing the command :OUTPut:MODulation[:STATe] ON.</p> <p>Overriding the I/Q state and I/Q source functions can be achieved by using the I/Q menu.</p>

CDMA2000 ARB Subsystem–Option 401 ([:SOURce]:RADio:CDMA2000:ARB)

:CLIPping:I

Supported All with Option 401

[:SOURce] :RADio:CDMA2000:ARB:CLIPping:I <val>

[:SOURce] :RADio:CDMA2000:ARB:CLIPping:I?

This command clips (limits) the modulation level of the waveform's I component to a percentage of full scale.

The variable <val> is expressed in units of percent.

***RST** +1.00000000E+002

Range 10–100

Key Entry Clip |I| To

Remarks N/A

:CLIPping:POSition

Supported All with Option 401

[:SOURce] :RADio:CDMA2000:ARB:CLIPping:POSition PRE|POST

[:SOURce] :RADio:CDMA2000:ARB:CLIPping:POSition?

This command specifies whether a waveform is clipped before (PRE) or after (POST) FIR filtering.

***RST** PRE

Key Entry Clip At PRE POST FIR Filter

Remarks N/A

:CLIPping:Q

Supported All with Option 401

[:SOURce] :RADio:CDMA2000:ARB:CLIPping:Q <val>

[:SOURce] :RADio:CDMA2000:ARB:CLIPping:Q?

This command clips (limits) the modulation level of the waveform's Q component to a percentage of full scale.

The variable <val> is expressed in units of percent.

***RST** +1.00000000E+002
Range 10–100
Key Entry Clip |Q| To
Remarks N/A

:CLIPping:TYPE

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA2000:ARB:CLIPping:TYPE IJQ | IORQ
[ :SOURce ] :RADio:CDMA2000:ARB:CLIPping:TYPE?
```

This command selects either IJQ or IORQ as the clipping type.

IJQ This choice clips (circular clipping) the combined I and Q waveform.

IORQ This choice independently clips (rectangular clipping) I and Q components of the waveform. I and Q can be clipped to different levels using this mode.

***RST** IORQ
Key Entry Clipping Type |I+jQ| |I|,|Q|
Remarks N/A

:CLIPping[:IJQ]

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA2000:ARB:CLIPping[ :IJQ ] <val>
[ :SOURce ] :RADio:CDMA2000:ARB:CLIPping[ :IJQ ]?
```

This command clips (limits) the modulation level of the combined I and Q waveform to a percentage of full scale.

The variable <val> is expressed in units of percent.

***RST** +1.00000000E+002
Range 10–100
Key Entry Clip |I+jQ| To
Remarks N/A

:IQ:EXTeRnal:FILTeR

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA2000:ARB:IQ:EXTErnal:FILTer 40e6 | THROugh
[ :SOURce ] :RADio:CDMA2000:ARB:IQ:EXTErnal:FILTer?
```

This command selects the filter or through path for I/Q signals routed to the rear panel I and Q outputs. Selecting a filter using this command will automatically set “:IQ:EXTErnal:FILTer:AUTO” on [page 231](#) to OFF(0) mode.

40e6 This choice applies a 40 MHz baseband filter.

THROugh This choice bypasses filtering.

***RST** THR

Key Entry 40.000 MHz Through

Remarks N/A

:IQ:EXTErnal:FILTer:AUTO

Supported All with Option 401

```
[ :SOURce ] :RADio:ARB:IQ:EXTErnal:FILTer:AUTO ON|OFF|1|0
[ :SOURce ] :RADio:ARB:IQ:EXTErnal:FILTer:AUTO?
```

This command enables or disables the automatic selection of the filters for I/Q signals routed to the rear panel I/Q outputs.

ON(1) This choice will automatically select a digital modulation filter optimized for the current signal generator settings.

OFF(0) This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “:IQ:EXTErnal:FILTer” on [page 230](#) for selecting a filter or through path.

***RST** 1

Key Entry I/Q Output Filter Manual Auto

Remarks N/A

:FILTer

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA2000:ARB:FILTer RNYQuist | NYQuist | GAUSSsian | RECTangle |
IS95 | IS95_EQ | IS95_MOD | IS95_MOD_EQ | AC4Fm | WCDMA | IS2000SR3DS | UGGaussian |
" <user FIR> "
[ :SOURce ] :RADio:CDMA2000:ARB:FILTer?
```

This command selects the pre-modulation filter type.

IS95	This choice selects a filter that meets the criteria of the IS-95 standard.																		
IS95_EQ	This choice selects a filter which is a combination of the IS-95 filter (above) and the equalizer filter described in the IS-95 standard. This filter is only used for IS-95 baseband filtering.																		
IS95_MOD	This choice selects a filter that meets the criteria of the IS-95 error function (for improved adjacent channel performance) with lower passband rejection than the filter specified in the IS-95 standard.																		
IS95_MOD_EQ	This choice selects a filter which is a combination of the equalizer filter described in the IS-95 standard and a filter that meets the criteria of the IS-95 error function (for improved adjacent channel performance), with lower passband rejection.																		
WCDMa	This choice selects a 0.22 Nyquist filter optimized for ACP.																		
AC4Fm	This choice selects a predefined Association of Public Safety Communications Officials (APCO) specified compatible 4-level frequency modulation (C4FM) filter.																		
IS2000SR3DS	This choice selects an IS-2000 standard, spread rate 3 direct spread filter.																		
UGGaussian	This choice selects a backwards compatible GSM Gaussian filter (Gaussian filter with a fixed BbT value of 0.300) for the ESG E44xxB Option UN3 or UN4.																		
"<user FIR>"	This variable is any filter file that you have stored into memory.																		
*RST	IS95_MOD_EQ																		
Key Entry	<table border="0"> <tr> <td>Root Nyquist</td> <td>Nyquist</td> <td>Gaussian</td> <td>Rectangle</td> <td>IS-95</td> <td>IS-95 w/EQ</td> </tr> <tr> <td>IS-95 Mod</td> <td>IS-95 Mod w/EQ</td> <td>APCO 25 C4FM</td> <td>WCDMA</td> <td></td> <td></td> </tr> <tr> <td>UN3/4 GSM Gaussian</td> <td>IS-2000 SR3 DS</td> <td>User FIR</td> <td></td> <td></td> <td></td> </tr> </table>	Root Nyquist	Nyquist	Gaussian	Rectangle	IS-95	IS-95 w/EQ	IS-95 Mod	IS-95 Mod w/EQ	APCO 25 C4FM	WCDMA			UN3/4 GSM Gaussian	IS-2000 SR3 DS	User FIR			
Root Nyquist	Nyquist	Gaussian	Rectangle	IS-95	IS-95 w/EQ														
IS-95 Mod	IS-95 Mod w/EQ	APCO 25 C4FM	WCDMA																
UN3/4 GSM Gaussian	IS-2000 SR3 DS	User FIR																	
Remarks	Refer to “File Name Variables” on page 13 for information on the file name syntax.																		

:FILTer:ALPHa

Supported All with Option 401

```
[ :SOURce ]:RADio:CDMA2000:ARB:FILTer:ALPHa <val>
[ :SOURce ]:RADio:CDMA2000:ARB:FILTer:ALPHa?
```

This command changes the Nyquist or root Nyquist filter alpha value.

The filter alpha value can be set to the minimum level (0), the maximum level (1), or in between by using fractional numeric values (0.001–0.999).

***RST** +5.00000000E–001

Range	0.000–1.000
Key Entry	Filter Alpha
Remarks	To change the current filter type, refer to “:FILTer” on page 231.

:FILTer:BBT

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA2000:ARB:FILTer:BBT <val>
[ :SOURce ] :RADio:CDMA2000:ARB:FILTer:BBT?
```

This command changes the bandwidth-multiplied-by-bit-time (BbT) filter parameter.

The filter BbT value can be set to the minimum level (0), the maximum level (1), or in between by using fractional numeric values (0.001–0.999).

***RST** +5.00000000E–001

Range 0.000–1.000

Key Entry **Filter BbT**

Remarks This command is effective only after choosing a Gaussian filter. It does not have an effect on other types of filters.

To change the current filter type, refer to “:FILTer” on page 231.

:FILTer:CHANnel

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA2000:ARB:FILTer:CHANnel EVM|ACP
[ :SOURce ] :RADio:CDMA2000:ARB:FILTer:CHANnel?
```

This command optimizes the Nyquist and root Nyquist filters to minimize error vector magnitude (EVM) or to minimize adjacent channel power (ACP).

EVM This choice provides the most ideal passband.

ACP This choice improves stopband rejection.

***RST** EVM

Key Entry **Optimize FIR For EVM ACP**

Remarks To change the current filter type, refer to “:FILTer” on page 231.

:HEADer:CLEAr**Supported** All with Option 401

[:SOURce]:RADio:CDMA2000:ARB:HEADer:CLEAr

This command clears the header information from the header file used by this modulation format.

RST** N/A**Key Entry** Clear Header**Remarks** The CDMA2000 Off On softkey must be set to On for this command to function.**:HEADer:SAVE*Supported** All with Option 401

[:SOURce]:RADio:CDMA2000:ARB:HEADer:SAVE

This command saves the header information to the header file used by this modulation format.

RST** N/A**Key Entry** Save Setup To Header**Remarks** The CDMA2000 Off On softkey must be set to On for this command to function.**:IQ:MODulation:ATTen*Supported** All with Option 401

[:SOURce]:RADio:CDMA2000:ARB:IQ:MODulation:ATTen <val>

[:SOURce]:RADio:CDMA2000:ARB:IQ:MODulation:ATTen?

This command attenuates the I/Q signals being modulated through the signal generator RF path.

The variable <val> is expressed in units of decibels (dB).

RST** +2.00000000E+000**Range** 0–40**Key Entry** Modulator Atten Manual Auto**Remarks** N/A**:IQ:MODulation:ATTen:AUTO*Supported** All with Option 401

[:SOURce]:RADio:CDMA2000:ARB:IQ:MODulation:ATTen:AUTO ON|OFF|1|0

[:SOURce]:RADio:CDMA2000:ARB:IQ:MODulation:ATTen:AUTO?

This command enables or disables the I/Q attenuation auto mode.

ON (1)	This choice enables the attenuation auto mode which optimizes the modulator attenuation for the current conditions.
OFF (0)	This choice holds the attenuator at its current setting or at a selected value. Refer to “:IQ:MODulation:ATTen” on page 234 for setting the attenuation value.
*RST	1
Key Entry	Modulator Atten Manual Auto
Remarks	N/A

:IQ:MODulation:FILTer

Supported All with Option 401

[:SOURce]:RADio:CDMA2000:ARB:IQ:MODulation:FILTer 2.1e6|40e6|THROUGH
[:SOURce]:RADio:CDMA2000:ARB:IQ:MODulation:FILTer?

This command enables you to select a filter or through path for I/Q signals modulated onto the RF carrier. Selecting a filter using this command will automatically set “:IQ:MODulation:FILTer:AUTO” on page 235 to OFF(0) mode.

2.1E6	This choice applies a 2.1 MHz baseband filter to the I/Q signals.
40E6	This choice applies a 40 MHz baseband filter to the I/Q signals.
THROUGH	This choice bypasses filtering.
*RST	THR
Key Entry	2.100 MHz 40.000 MHz Through
Remarks	N/A

:IQ:MODulation:FILTer:AUTO

Supported All with Option 401

[:SOURce]:RADio:CDMA2000:ARB:IQ:MODulation:FILTer:AUTO ON|OFF|1|0
[:SOURce]:RADio:CDMA2000:ARB:IQ:MODulation:FILTer:AUTO?

This command enables or disables the automatic selection of the filters for I/Q signals modulated onto the RF carrier.

ON(1)	This choice will automatically select a digital modulation filter.
OFF(0)	This choice disables the auto feature which lets you select a digital modulation

filter or through path. Refer to “:IQ:MODulation:FILTer” on page 281 for selecting a filter or through path.

***RST** 1
Key Entry I/Q Mod Filter Manual Auto
Remarks N/A

:IQMap

Supported All with Option 401
[:SOURce]:RADio:CDMA2000:ARB:IQMap NORMal|INVerted
[:SOURce]:RADio:CDMA2000:ARB:IQMap?

This command selects whether the Q output will be normal or inverted.

NORMal This choice selects normal polarity.
INVerted This choice inverts the internal Q signal.

***RST** NORM
Key Entry I/Q Mapping Normal Invert
Remarks Inverting the Q output inverts the RF spectrum after the modulation.

:LINK

Supported All with Option 401
[:SOURce]:RADio:CDMA2000:ARB:LINK FORWard|REVerse
[:SOURce]:RADio:CDMA2000:ARB:LINK?

This command selects the CDMA2000 forward or reverse link channel setup.

FORW This choice selects a basestation to mobile configuration.
REV This choice selects a mobile to basestation configuration.

***RST** FORW
Key Entry Link Forward Reverse
Remarks N/A

:LINK:FORWard:SETup

Supported All with Option 401
[:SOURce]:RADio:CDMA2000:ARB:LINK:FORWard:SETup S1Pilot|S3DPilot|

```
S3MPilot | S19Chan | S3D9chan | S3M9chan | MCARrier | "<file name>"
[:SOURCE]:RADIO:CDMA2000:ARB:LINK:FORWARD:SETup?
```

This command selects a previously defined channel configuration for the CDMA2000 forward link.

- S1Pilot This choice selects a spread rate 1, pilot-channel setup.
- S3DPilot This choice selects a spread rate 3, direct spread, pilot-channel setup.
- S3MPilot This choice selects a spread rate 3, multicarrier spread, pilot-channel setup.
- S19Chan This choice selects a spread rate 1, 9-channel setup.
- S3D9Chan This choice selects a spread rate 3, direct spread, 9-channel setup.
- S3M9Chan This choice selects a spread rate 3, multicarrier spread, 9-channel setup.
- MCARrier This choice enables the multicarrier mode. To set the CDMA2000 multicarrier type, refer to “:LINK:FORWARD:SETup:MCARrier” on page 237.

***RST** S19C

Key Entry **Pilot 9 Channel Spread Rate 1 Spread Rate 3 Multicarrier Off On**
Spreading Type Direct Mcarrier Custom CDMA2000 Carrier

Remarks Refer to “File Name Variables” on page 13 for information on the file name syntax.

:LINK:FORWARD:SETup:MCARrier

Supported All with Option 401

```
[ :SOURCE ] :RADIO:CDMA2000:ARB:LINK:FORWARD:SETup:MCARrier CAR2 | CAR3 | CAR4 |
"<file name>"
[:SOURCE]:RADIO:CDMA2000:ARB:LINK:FORWARD:SETup:MCARrier?
```

This command defines the type of multicarrier CDMA2000 setup.

- CAR2 This choice specifies the following standard 2-carrier setup:
Carrier 1: spread rate 3, direct spread, 9 channel; –2.5 MHz frequency offset; 0 dB power
Carrier 2: spread rate 3, direct spread, 9 channel; 2.5 MHz frequency offset; 0 dB power
- CAR3 This choice specifies the following standard 3-carrier setup:
Carrier 1: spread rate 1, 9 channel; –1.25 MHz frequency offset; 0 dB power
Carrier 2: spread rate 1, 9 channel; 0 kHz frequency offset; 0 dB power

CAR4	<p><i>Carrier 3:</i> spread rate 1, 9 channel; 1.25 MHz frequency offset; 0 dB power</p> <p>This choice specifies the following standard 2-carrier setup:</p> <p><i>Carrier 1:</i> spread rate 1, 9 channel; –1.875 MHz frequency offset; 0 dB power</p> <p><i>Carrier 2:</i> spread rate 1, 9 channel; –625 kHz frequency offset; 0 dB power</p> <p><i>Carrier 3:</i> spread rate 1, 9 channel; 625 kHz frequency offset; 0 dB power</p> <p><i>Carrier 4:</i> spread rate 1, 9 channel; 1.875 MHz frequency offset; 0 dB power</p>
*RST	CAR2
Key Entry	2 SR3 Carriers 3 Carriers 4 Carriers Custom CDMA2000 Multicarrier
Remarks	Refer to “ File Name Variables ” on page 13 for information on the file name syntax.

:LINK:FORWARD:SETup:MCARrier:STORE

Supported All with Option 401

```
[ :SOURce ] :RADio :CDMA2000 :ARB :LINK :FORWARD :SETup :MCARrier :
STORE "<file name>"
```

This command stores the current multicarrier setup information.

The stored file contains information including the digital modulation format, number of carriers, frequency spacing, and power settings for the multicarrier setup.

***RST** N/A

Range N/A

Key Entry Store Custom Multicarrier

Remarks Recall stored files from memory by executing the following command:

```
[ :SOURce ] :RADio :CDMA2000 :ARB :LINK :FORWARD :SETup :
MCARrier "<file name>"
```

Refer to “[File Name Variables](#)” on page 13 for information on the file name syntax.

:LINK:FORWARD:SETup:MCARrier:TABLE

Supported All with Option 401

```
[ :SOURce ] :RADio :CDMA2000 :ARB :LINK :FORWARD :SETup :MCARrier :TABLE INIT |
APPend |<chan_num> , S1Pilot | S3DPilot | S3MPilot | S19Chan | S3D9chan | S3M9chan |
"<file name>" , <freq_offset> , <power>
```

[:SOURce] :RADio :CDMA2000 :ARB :LINK :FORWard :SETup :MCArrier :
 TABLE? <chan_num>

This command defines the multicarrier CDMA2000 waveform.

The variable <freq_offset> is expressed in units of Hertz (MHz).

The variable <power> is expressed in units of decibels (dB).

Channel type, frequency offset, and power level are returned when a query is initiated. The output format is as follows:

<channel type> , <freq_offset> , <power>

INIT	This choice clears the current information and creates a new one-row table, allowing for further definition using additional parameters.
APPend	This choice adds rows to an existing table. The maximum number of rows for one table is 25.
S1Pilot	This choice sets a single SR1 Pilot forward channel.
S3DPilot	This choice sets a single direct spread pilot forward channel.
S3MPilot	This choice sets a single SR3 multicarrier spread pilot forward channel.
S19Chan	This choice sets a SR1 9 forward channel.
S3D9chan	This choice sets a SR3 direct spread forward channel.
S3M9chan	This choice sets a SR3 multicarrier spread 9 forward channel.
*RST	<i>channel type</i> : S3D9CHAN <i><freq_offset></i> : -2.50000000E+006 <i><power></i> : +0.00000000E+000
Range	<i><freq_offset></i> : -15E6 to 15E6 <i><power></i> : -40 to 0
Key Entry	Select File Insert Row SR1 Pilot SR3 Direct Pilot SR3 Mcarrier Pilot SR3 Mcarrier Pilot SR1 9 Channel SR3 Direct 9 Channel SR3 Mcarrier 9 Channel Custom CDMA2000 Carrier
Field Entry	Freq Offset Power
Remarks	Refer to “ File Name Variables ” on page 13 for information on the file name syntax.

:LINK:FORWard:SETup:MCArrier:TABLE:NCARriers

Supported All with Option 401

[:SOURce] :RADio :CDMA2000 :ARB :LINK :FORWard :SETup :MCArrier :TABLE :
 NCARriers?

This command queries the number of carriers specified for the multicarrier CDMA2000 waveform.

*RST	+2
Range	N/A
Key Entry	N/A
Remarks	N/A

:LINK:FORWARD:SETup:STORe

Supported All with Option 401

```
[ :SOURce ]:RADio:CDMA2000:ARB:LINK:FORWARD:SETup:STORe "<file name>"
```

This command stores the current custom CDMA2000 state, using a designated file name, to the signal generator memory.

Along with the contents of the CDMA2000 channel table editor (channel types, Walsh code, power levels, PN offset, and data), this command stores the following information to the signal generator memory:

- FIR filter
- FIR filter file name
- FIR filter alpha
- FIR filter BbT
- FIR filter channel (EVM or ACP)
- I/Q mapping
- link
- spread type
- spread rate
- ARB reference clock source (internal or external)
- ARB reference clock frequency
- clipping
- multicarrier spacing
- radio configuration

*RST	N/A
-------------	-----

Range	N/A
--------------	-----

Key Entry	Store Custom CDMA State
------------------	--------------------------------

Remarks	Recall this stored file by executing the following command:
----------------	---

```
[ :SOURce ]:RADio:CDMA2000:ARB:LINK:FORWARD:
SETup "<file name>"
```

Refer to “File Name Variables” on page 13 for information on the file name syntax.

:LINK:FORWARD:SETup:TABLE:APPLY

Supported All with Option 401

[:SOURce] :RADio :CDMA2000 :ARB :LINK :FORWARD :SETup :TABLE :APPLY

This command generates a CDMA2000 signal based on the current values in the CDMA2000 channel setup table editor.

***RST** N/A

Range N/A

Key Entry Apply Channel Setup

Remarks N/A

:LINK:FORWARD:SETup:TABLE:CHANnel

Supported All with Option 401

[:SOURce] :RADio :CDMA2000 :ARB :LINK :FORWARD :SETup :TABLE :CHANnel INIT | APPend | <chan_num> , <chan_type> , <config> , <data_rate> , <walsh> , <power> , <pn_offset> , RANDOM | <data_val>

[:SOURce] :RADio :CDMA2000 :ARB :LINK :FORWARD :SETup :TABLE :CHANnel? <chan_num>

This command defines the channel parameters of the CDMA2000 signal.

The variable <power> is expressed in units of decibels (dB).

The variable <data_rate> is expressed in units bits per second (bps).

The channel type, configuration type, data rate, walsh code, power, pn offset, and data value are returned when a query is initiated. The output format is as follows:

<chan_type>,<config>,<data_rate>,<walsh>,<power>,<pn_offset>,<data_val>

INIT This choice clears the current information and creates a new one-row table, allowing for further definition using additional parameters.

APPend This choice adds rows to an existing table.

RANDom This choice selects a randomly generated data value.

<data_val> This variable specifies a specific data value.

***RST** *channel type: PIL <config>: +3 <data_rate>: +3.84000000E+004*

CDMA2000 ARB Subsystem–Option 401 ([:SOURce]:RADio:CDMA2000:ARB)

	<walsh>: +0	<power>: -7.00000000E+000	<pn_offset>: +0
	<data_val>: 0		
Range	<data_rate>: 1500–307200	<walsh>: 0–63	<power>: –40 to 0
	<pn_offset>: 0–511	<data_val>: 0000000–11111111	
Key Entry	Edit Channel Setup	Insert Row	Config Rate
	Walsh Code	PN Offset	
Remarks	Queries initiated for this command must be followed by a specific channel number.		
	The above *RST value represents a query of channel one.		

:LINK:FORWARD:SETup:TABLE:NCHannels

Supported	All with Option 401
	[:SOURce] :RADio:CDMA2000:ARB:LINK:FORWARD:SETup:TABLE:NCHannels?
	This command queries the number of channels specified for the CDMA2000 link setup.
*RST	+9
Range	N/A
Key Entry	N/A
Remarks	N/A

:LINK:FORWARD:SETup:TABLE:PADJust

Supported	All with Option 401
	[:SOURce] :RADio:CDMA2000:ARB:LINK:FORWARD:SETup:TABLE:PADJust EQUal SCALE
	This command sets the code domain power (the relative power in each of the channels).
EQUal	Sets all channels to equal power, and the total power to 0 dB.
SCALE	Scales all of the current channel powers so that the total power equals 0 dB, keeping the previous power ratios between the individual channels.
*RST	N/A
Key Entry	Equal Powers Scale To 0dB
Remarks	N/A

:LINK:REVerse:RCONfig

Supported All with Option 401

```
[ :SOURce ]:RADio:CDMA2000:ARB:LINK:REVerse:RCONfig <val>
[ :SOURce ]:RADio:CDMA2000:ARB:LINK:REVerse:RCONfig?
```

This command sets the radio configuration for all reverse link channels.

***RST** +1

Range 1–4

Key Entry **Radio Config**

Remarks Changing the radio configuration results in changes to the channel data rate.

:LINK:REVerse:SETup

Supported All with Option 401

```
[ :SOURce ]:RADio:CDMA2000:ARB:LINK:REVerse:SETup S1Pilot|S3Pilot|
S15Chan|S35Chan|S18Chan| "<file name>"
[ :SOURce ]:RADio:CDMA2000:ARB:LINK:REVerse:SETup?
```

This command selects a previously defined channel configuration for the CDMA2000 reverse link.

S1Pilot This choice selects a spread rate 1, pilot-channel setup.

S3Pilot This choice selects a spread rate 3, pilot-channel setup.

S15Chan This choice selects a spread rate 1, 5-channel setup.

S35Chan This choice selects a spread rate 3, 5-channel setup.

S18Chan This choice selects a spread rate 1, 8-channel setup.

***RST** S15Chan

Key Entry **Pilot 5 Channel 8 Channel Custom CDMA2000 State**
Spread Rate 1 Spread Rate 3

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:LINK:REVerse:SETup:STORE

Supported All with Option 401

```
[ :SOURce ]:RADio:CDMA2000:ARB:LINK:REVerse:SETup:STORE "<file name>"
```

This command stores the current custom CDMA2000 state, using a designated file name, to the signal

generator memory.

Along with the contents of the CDMA2000 channel table editor (channel types, Walsh code, power levels, PN offset, and data), this command stores the following information to the signal generator memory:

- FIR filter
- FIR filter file name
- FIR filter alpha
- FIR filter BbT
- FIR filter channel (EVM or ACP)
- I/Q mapping
- link
- spread type
- spread rate
- ARB reference clock source (internal or external)
- ARB reference clock frequency
- clipping
- multicarrier spacing
- radio configuration

***RST** N/A

Range N/A

Key Entry **Store Custom CDMA State**

Remarks Recall this stored file by executing the following command:

```
[ :SOURce ] :RADio :CDMA2000 :ARB :LINK :REVerse :
SETup "<file name>"
```

Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:LINK:REVerse:SETup:TABLE:APPLY

Supported All with Option 401

```
[ :SOURce ] :RADio :CDMA2000 :ARB :LINK :REVerse :SETup :TABLE :APPLY
```

This command generates a CDMA2000 signal based on the current values in the CDMA2000 channel setup table editor.

***RST** N/A

Range	N/A
Key Entry	Apply Channel Setup
Remarks	N/A

:LINK:REVerse:SETup:TABLE:CHANnel

Supported All with Option 401

```
[ :SOURce ] :RADio :CDMA2000 :ARB :LINK :REVerse :SETup :TABLE :CHANnel INIT |
APPend | <chan_num> , <chan_type> , <data_rate> , <power> , RANDom | <data_val>
[ :SOURce ] :RADio :CDMA2000 :ARB :LINK :REVerse :SETup :TABLE :
CHANnel? <chan_num>
```

This command defines the channel parameters for the CDMA2000 signal.

The channel number, configuration type, data rate, walsh code, power, pn offset, and data value are returned when a query is initiated. The output format is as follows:

<chan_type>,<data_rate>,<power>,<data_val>

The variable <data_rate> is expressed as bits per second (bps).

The variable <power> is expressed in units of decibels (dB).

INIT	This choice clears the current information and creates a new one-row table, allowing for further definition using additional parameters.
APPend	This choice adds rows to an existing table. The maximum number of channels in a table is eight.
RANDom	This choice selects a randomly generated data value.
<data_val>	This variable customizes a specific data value.
*RST	<i>channel type:</i> PIL <i><data_rate>:</i> +3.84000000E+004 <i><power>:</i> -7.00000000E+000 <i><pn_offset>:</i> +0 <i><data_val>:</i> 0
Range	<i><data_rate>:</i> 1500–9600 <i><power>:</i> –40 to 0 <i><data_val>:</i> 0000000–11111111
Key Entry	Edit Channel Setup Insert Row Config Rate Walsh Code PN Offset

Remarks Queries initiated for this command must be followed by a specific channel number.

The above *RST value represents a query of channel one.

:LINK:REverse:SETup:TABLE:NCHannels**Supported** All with Option 401

[:SOURCE]:RADIO:CDMA2000:ARB:LINK:REverse:SETup:TABLE:NCHannels?

This command query returns the number of channels for the CDMA2000 link reverse setup.

RST** +5**Range** N/A**Key Entry** N/A**Remarks** N/A**:LINK:REverse:SETup:TABLE:PADJust*Supported** All with Option 401

[:SOURCE]:RADIO:CDMA2000:ARB:LINK:REverse:SETup:TABLE:PADJust EQUAL | SCALE

This command customizes the code domain power (the relative power in each of the channels).

EQUAL This choice changes all channels to equal power, and the total power to 0 dB.

SCALE This choice scales all of the current channel powers so that the total power equals 0 dB, keeping the previous power ratios between the individual channels.

RST** N/A**Key Entry** Equal Powers Scale To 0dB**Remarks** N/A**:MDESTination:PULSe*Supported** All with Option 401[:SOURCE]:RADIO:CDMA2000:ARB:MDESTination:PULSe NONE | M1 | M2 | M3 | M4
[:SOURCE]:RADIO:CDMA2000:ARB:MDESTination:PULSe?

This command routes the selected marker to the Pulse/RF Blanking function. The NONE parameter clears the marker for the Pulse/RF Blanking function.

***RST** NONE**Key Entry** None Marker 1 Marker 2 Marker 3 Marker 4**Remarks** N/A

:MDESTINATION:AAMPLITUDE

Supported All with Option 401

```
[ :SOURCE ]:RADIO:CDMA2000:ARB:MDESTINATION:AAMPLITUDE NONE | M1 | M2 | M3 | M4
[ :SOURCE ]:RADIO:CDMA2000:ARB:MDESTINATION:AAMPLITUDE?
```

This command routes the selected marker to the Alternate Amplitude function. The NONE parameter clears the marker for the Alternate Amplitude function.

***RST** NONE

Key Entry None Marker 1 Marker 2 Marker 3 Marker 4

Remarks N/A

:MDESTINATION:ALCHOLD

Supported All with Option 401

```
[ :SOURCE ]:RADIO:CDMA2000:ARB:MDESTINATION:ALCHOLD NONE | M1 | M2 | M3 | M4
[ :SOURCE ]:RADIO:CDMA2000:ARB:MDESTINATION:ALCHOLD?
```

This command routes the selected marker to the ALC Hold function. The NONE parameter clears the marker for the ALC Hold function.

***RST** NONE

Key Entry

Remarks N/A

:MPOLARITY:MARKER1

Supported All with Option 401

```
[ :SOURCE ]:RADIO:CDMA2000:ARB:MPOLARITY:MARKER1 NEGATIVE | POSITIVE
[ :SOURCE ]:RADIO:CDMA2000:ARB:MPOLARITY:MARKER1?
```

This command sets the polarity for marker 1.

***RST** POS

Key Entry Marker 1 Polarity Neg Pos

Remarks N/A

:MPOLARITY:MARKER2

Supported All with Option 401

```
[ :SOURce ]:RADio:CDMA2000:ARB:MPOLarity:MARKer2 NEGative|POSitive
[ :SOURce ]:RADio:CDMA2000:ARB:MPOLarity:MARKer2?
```

This command sets the polarity for marker 2.

***RST** POS

Key Entry **Marker 2 Polarity Neg Pos**

Remarks N/A

:MPOLarity:MARKer3

Supported All with Option 401

```
[ :SOURce ]:RADio:CDMA2000:ARB:MPOLarity:MARKer3 NEGative|POSitive
[ :SOURce ]:RADio:CDMA2000:ARB:MPOLarity:MARKer3?
```

This command sets the polarity for marker 3.

***RST** POS

Key Entry **Marker 3 Polarity Neg Pos**

Remarks N/A

:MPOLarity:MARKer4

Supported All with Option 401

```
[ :SOURce ]:RADio:CDMA2000:ARB:MPOLarity:MARKer4 NEGative|POSitive
[ :SOURce ]:RADio:CDMA2000:ARB:MPOLarity:MARKer4?
```

This command sets the polarity for marker 4.

***RST** POS

Key Entry **Marker 4 Polarity Neg Pos**

Remarks N/A

:REFerence:EXTernal:FREQuency

Supported All with Option 401

```
[ :SOURce ]:RADio:CDMA2000:ARB:REFerence:EXTernal:FREQuency <val>
[ :SOURce ]:RADio:CDMA2000:ARB:REFerence:EXTernal:FREQuency?
```

This command allows you to enter the frequency of the applied external reference.

The variable <val> is expressed in units of Hertz (KHz–MHz).

*RST	+1.00000000E+007
Range	2.5E5–1E8
Key Entry	Reference Freq
Remarks	The value specified by this command is effective only when you are using an external ARB reference applied to the BASEBAND GEN REF IN rear panel connector. To specify external as the ARB reference source type, refer to “:REFerence[:SOURce]” on page 249 .

:REFerence[:SOURce]

Supported	All with Option 401
	[:SOURce]:RADio:CDMA2000:ARB:REFerence[:SOURce] INTernal EXTernal [:SOURce]:RADio:CDMA2000:ARB:REFerence[:SOURce]?

This command selects either an internal or external reference for the waveform clock.

*RST	INT
Key Entry	ARB Reference Ext Int
Remarks	If the EXTernal choice is selected, the external frequency value <i>must</i> be entered and the signal must be applied to the BASEBAND GEN REF IN rear panel connector. Refer to “:REFerence:EXTernal:FREQuency” on page 248 to enter the external reference frequency.

:RETRigger

Supported	All with Option 401
	[:SOURce]:RADio:CDMA:ARB:RETRigger ON OFF IMMediate [:SOURce]:RADio:CDMA:ARB:RETRigger?

This command enables or disables the ARB retriggering mode; the retrigger mode controls how the retriggering function performs while a waveform is playing.

ON (1)	This choice specifies that if a trigger occurs while a waveform is playing, the waveform will retrigger at the end of the current waveform sequence and play once more.
OFF (0)	This choice specifies that if a trigger occurs while a waveform is playing, the trigger will be ignored.

IMMediate	This choice specifies that if a trigger occurs while a waveform is playing, the waveform will reset and replay from the start immediately upon receiving a trigger.
*RST	ON
Key Entry	On Off Immediate
Remarks	N/A

:REvision

Supported All with Option 401

[:SOURce] :RADio :CDMA2000 :ARB :REvision ?

This command queries the revision number of the current CDMA2000 format.

*RST	8
Range	N/A
Key Entry	N/A
Remarks	N/A

:SCLock:RATE

Supported All with Option 401

[:SOURce] :RADio :CDMA2000 :ARB :SCLock :RATE <val>

[:SOURce] :RADio :CDMA2000 :ARB :SCLock :RATE ?

This command sets the sample clock rate for the CDMA2000 modulation format.

The variable <val> is expressed in units of hertz.

*RST	+1.00000000E+008
Range	1–1E8
Key Entry	ARB Sample Clock
Remarks	The modulation format should be active before executing this command. If this command is executed before the modulation format is active, the entered value will be overridden by a calculated factory default value. Refer to “[:STATe]” on page 255 to activate the modulation format.

:SPReading:RATE

Supported All with Option 401


```
[ :SOURCE ] :RADIo:CDMA2000:ARB:SPReading:RATE 1 | 3
[ :SOURCE ] :RADIo:CDMA2000:ARB:SPReading:RATE?
```

This command opens a submenu that provides the available spread rate choices for the CDMA2000 waveform.

***RST** +1

Key Entry **Spread Rate 1 Spread Rate 3**

Remarks The spread rate multiplied by 1.2288 MHz is equal to the chip rate. For example, spread rate 3 equals a 3.6864 Mcps chip rate.

Higher data rates can be achieved using spread rate 3, though offset by greater bandwidth/spectrum usage.

Changing the spread rate to either 1 or 3 will also change the initial setup menu, resulting in a configuration that is specific to the current spread rate.

:SPReading:TYPE

Supported All with Option 401

```
[ :SOURCE ] :RADIo:CDMA2000:ARB:SPReading:TYPE DIRECT | MCArrier
[ :SOURCE ] :RADIo:CDMA2000:ARB:SPReading:TYPE?
```

This command selects the spreading type for a CDMA2000 waveform.

***RST** DIR

Key Entry **Spreading Type Direct Mcarrier**

Remarks Multicarrier is not available in the reverse link setup.

Note that changing the spreading type will result in the setup changing to a setup for the current spreading type.

:SPReading:TYPE:MCARrier:SPACing

Supported All with Option 401

```
[ :SOURCE ] :RADIo:CDMA2000:ARB:SPReading:TYPE:MCARrier:SPACing 1.23MHz |
1.25MHz
[ :SOURCE ] :RADIo:CDMA2000:ARB:SPReading:TYPE:MCARrier:SPACing?
```

This command selects the multicarrier frequency spacing.

***RST** +1.25000000E+006

Key Entry **1.23 MHz 1.25 MHz**

Remarks Cellular band uses 1.23 MHz and PCS band uses 1.25 MHz.

:TRIGger:TYPE

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA2000:ARB:TRIGger:TYPE CONTInuous | SINGle | GATE
[ :SOURce ] :RADio:CDMA2000:ARB:TRIGger:TYPE?
```

Execute this command to set the trigger type.

CONTInuous The waveform repeats continuously; the waveform restarts every time the previous playback is completed. To customize continuous triggering, refer to [“:TRIGger:TYPE:CONTInuous\[:TYPE\]” on page 252](#).

SINGle The waveform segment or sequence plays once for every trigger received.

GATE An external trigger signal interrupts the playback while the gating signal is in the inactive state. Playback resumes when the external control signal returns to the active state. The active state can be set high or low.

***RST** CONT

Key Entry Continuous Single Gated

Remarks To change the polarity of the gated trigger, refer to [“:TRIGger:TYPE:GATE:ACTIve” on page 253](#).

:TRIGger:TYPE:CONTInuous[:TYPE]

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA2000:ARB:TRIGger:TYPE:CONTInuous [ :TYPE ] FREE |
TRIGger | RESet
[ :SOURce ] :RADio:CDMA2000:ARB:TRIGger:TYPE:CONTInuous [ :TYPE ]?
```

This command customizes the continuous trigger selection.

FREE This choice immediately transmits a waveform that is continuously repeated.

TRIGger This choice causes the waveform to wait for a trigger. Once a trigger is received, the transmission of a continuously repeated waveform begins.

RESet This choice immediately restarts a continuously repeated waveform upon receiving a trigger.

***RST** FREE

Key Entry Free Run Trigger & Run Reset & Run

Remarks To select CONTInuous as the trigger type, refer to [“:TRIGger:TYPE” on](#)

page 252.

:TRIGger:TYPE:GATE:ACTive

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA2000:ARB:TRIGger:TYPE:GATE:ACTive LOW|HIGH
[ :SOURce ] :RADio:CDMA2000:ARB:TRIGger:TYPE:GATE:ACTive?
```

This command toggles the polarity of the active state of the external gating input signal; GATE must be selected as the arb trigger type.

LOW The waveform stops playing while the selected external control gating signal is low and restarts when the gate returns to the high level.

HIGH The waveform stops playing while the selected external control gating signal is high and restarts when the gate returns to the low level.

***RST** HIGH

Key Entry Gate Active Low High

Remarks Refer to “:TRIGger:TYPE” on page 252 to select GATE as the trigger.

:TRIGger[:SOURce]

Supported All with Option 401

```
[ :SOURce ] :RADio:CDMA2000:ARB:TRIGger[ :SOURce ] KEY|EXT|BUS
[ :SOURce ] :RADio:CDMA2000:ARB:TRIGger[ :SOURce ]?
```

This command changes the characteristics of the trigger source.

KEY This choice enables triggering by pressing the front panel **Trigger** hardkey.

EXT This choice enables triggering using an externally applied signal at the PATT TRIG IN rear panel connector or the PATT TRIG IN 2 pin on the rear panel AUX I/O connector. To select the appropriate connector, refer to “:TRIGger[:SOURce]:EXTernal[:SOURce]” on page 254.

BUS This choice enables GPIB triggering using the *TRG or GET command or LAN and RS-232 triggering using the *TRG command.

***RST** EXT

Key Entry Trigger Key Ext Bus

Remarks N/A

:TRIGger[:SOURce]:EXTErnal[:SOURce]**Supported** All with Option 401

```
[ :SOURce ] :RADio:CDMA2000:ARB:TRIGger [ :SOURce ] :EXTErnal [ :SOURce ] EPT1 |
EPT2 | EPTRIGGER1 | EPTRIGGER2
[ :SOURce ] :RADio:CDMA2000:ARB:TRIGger [ :SOURce ] :EXTErnal [ :SOURce ] ?
```

This command specifies which PATT TRIG IN connection, rear panel connector or AUX I/O connector, will be used to accept an externally applied trigger signal.

EPT1 This choice is synonymous with EPTRIGGER1 and selects the PATT TRIG IN rear panel connector for the external signal connection.

EPT2 This choice is synonymous with EPTRIGGER2 and selects the PATT TRIG IN 2 pin on the rear panel AUX I/O connector for the external signal connection.

EPTRIGGER1 This choice is synonymous with EPT1 and selects the PATT TRIG IN rear panel connector for the external signal connection.

EPTRIGGER2 This choice is synonymous with EPT2 and selects the PATT TRIG IN 2 pin on the rear panel AUX I/O connector for the external signal connection.

***RST** EPT1

Key Entry Patt Trig In 1 Patt Trig In 2

Remarks This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURce]” on page 253.

For more information about the rear panel AUX I/O connector pin configuration, refer to the *User’s Guide*.

:TRIGger[:SOURce]:EXTErnal:DELAy**Supported** All with Option 401

```
[ :SOURce ] :RADio:CDMA2000:ARB:TRIGger [ :SOURce ] :EXTErnal:DELAy <val>
[ :SOURce ] :RADio:CDMA2000:ARB:TRIGger [ :SOURce ] :EXTErnal:DELAy?
```

This command specifies the time (seconds) for the external trigger delay.

The variable <val> is expressed as seconds (μ sec–Msec).

***RST** +1.00000000E–003

Range 1E–8 to 4E1

Key Entry Ext Delay Time

Remarks This command is effective only if an external trigger is selected as the trigger

source. Refer to “:TRIGger[:SOURCE]” on page 253.

:TRIGger[:SOURCE]:EXTErnal:DELay:STATe

Supported All with Option 401

```
[ :SOURCE ] :RADio:CDMA2000:ARB:TRIGger [ :SOURCE ] :EXTErnal:DELay:STATe ON | OFF | 1 | 0
[ :SOURCE ] :RADio:CDMA2000:ARB:TRIGger [ :SOURCE ] :EXTErnal:DELay:STATe?
```

This command enables or disables the operating state of the external trigger delay function.

***RST** 0

Key Entry Ext Delay Off On

Remarks This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURCE]” on page 253.

:TRIGger[:SOURCE]:EXTErnal:SLOPe

Supported All with Option 401

```
[ :SOURCE ] :RADio:CDMA2000:ARB:TRIGger [ :SOURCE ] :EXTErnal:SLOPe POSitive | NEGative
[ :SOURCE ] :RADio:CDMA2000:ARB:TRIGger [ :SOURCE ] :EXTErnal:SLOPe?
```

This command sets the polarity of the external trigger.

***RST** NEG

Key Entry Ext Polarity Neg Pos

Remarks This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURCE]” on page 253.

[:STATE]

Supported All with Option 401

```
[ :SOURCE ] :RADio:CDMA2000:ARB [ :STATE ] ON | OFF | 1 | 0
[ :SOURCE ] :RADio:CDMA2000:ARB [ :STATE ] ?
```

This command enables or disables the CDMA2000 modulation format.

ON (1) This choice enables the CDMA2000 modulation capability and sets up the internal hardware to generate the currently selected CDMA2000 signal selection. This choice also activates the I/Q state and sets the I/Q source to internal.

Component Test Digital Commands

CDMA2000 ARB Subsystem–Option 401 ([:SOURce]:RADio:CDMA2000:ARB)

OFF (0)	This choice disables the CDMA2000 baseband signal capability.
*RST	0
Key Entry	CDMA2000 Off On
Remarks	N/A

Dmodulation Subsystem–Option 001/601 or 002/602 [:SOURce]:RADio:DMODulation:ARB)

:IQ:EXTernal:FILTer

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:DMODulation:ARB:IQ:EXTernal:FILTer 40e6|THROUGH
```

```
[ :SOURce ]:RADio:DMODulation:ARB:IQ:EXTernal:FILTer?
```

This command selects the filter or through path for I/Q signals routed to the rear panel I and Q outputs. Selecting a filter using this command will automatically set “:IQ:EXTernal:FILTer:AUTO” on [page 257](#) to OFF(0) mode.

40e6 This choice applies a 40 MHz baseband filter.

THROUGH This choice bypasses filtering.

***RST** THR

Key Entry 40.000 MHz Through

Remarks N/A

:IQ:EXTernal:FILTer:AUTO

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:DMODulation:ARB:IQ:EXTernal:FILTer:AUTO ON|OFF|1|0
```

```
[ :SOURce ]:RADio:DMODulation:ARB:IQ:EXTernal:FILTer:AUTO?
```

This command enables or disables the automatic selection of the filters for I/Q signals routed to the rear panel I/Q outputs.

ON(1) This choice will automatically select a digital modulation filter optimized for the current signal generator settings.

OFF(0) This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “:IQ:EXTernal:FILTer” on [page 257](#) for selecting a filter or through path.

***RST** 1

Key Entry I/Q Output Filter Manual Auto

Remarks N/A

:FILTer

Supported All with Option 001/601 or 002/602

```
[ :SOURCE]:RADio:DMODulation:ARB:FILTer RNYQuist|NYQuist|GAUSSian|
RECTangle|IS95|IS95_EQ|IS95_MOD|IS95_MOD_EQ|WCDMa|AC4Fm|IS2000SR3DS|
UGGaussian|"<user FIR>"
[:SOURCE]:RADio:DMODulation:ARB:FILTer?
```

This command specifies the pre-modulation filter type.

- IS95 This choice selects a filter that meets the criteria of the IS-95 standard.
- IS95_EQ This choice selects a filter which is a combination of the IS-95 filter (above) and the equalizer filter described in the IS-95 standard. This filter is only used for IS-95 baseband filtering.
- IS95_MOD This choice selects a filter that meets the criteria of the IS-95 error function (for improved adjacent channel performance) with lower passband rejection than the filter specified in the IS-95 standard.
- IS95_MOD_EQ This choice selects a filter which is a combination of the equalizer filter described in the IS-95 standard and a filter that meets the criteria of the IS-95 error function (for improved adjacent channel performance), with lower passband rejection.
- WCDMa This choice selects a 0.22 Nyquist filter optimized for ACP.
- AC4Fm This choice selects a predefined Association of Public Safety Communications Officials (APCO) specified compatible 4-level frequency modulation (C4FM) filter.
- IS2000SR3DS This choice selects an IS-2000 standard, spread rate 3 direct spread filter.
- UGGaussian This choice selects a backwards compatible GSM Gaussian filter (Gaussian filter with a fixed BbT value of 0.300) for the ESG E44xxB Option UN3 or UN4.
- "<User FIR>" This variable is any filter file that you have stored into memory.

***RST**

Key Entry

RNYQuist
 Root Nyquist Nyquist Gaussian Rectangle IS-95 IS-95 w/EQ
 IS-95 Mod IS-95 Mod w/EQ WCDMA IS-2000 SR3 DS APCO 25 C4FM
 UN3/4 GSM Gaussian User FIR

Remarks

Refer to “File Name Variables” on page 13 for information on the file name syntax.

:FILTer:ALPHa

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:DMODulation:ARB:FILTer:ALPHa <val>
[ :SOURce ]:RADio:DMODulation:ARB:FILTer:ALPHa?
```

This command changes the Nyquist or root Nyquist filter alpha value.

The filter alpha value can be set to the minimum level (0), the maximum level (1), or in between by using fractional numeric values (0.001–0.999).

***RST** +3.50000000E–001

Range 0.000–1.000

Key Entry **Filter Alpha**

Remarks To change the current filter type, refer to “[:FILTer](#)” on page 258.

:FILTer:BBT

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:DMODulation:ARB:FILTer:BBT <val>
[ :SOURce ]:RADio:DMODulation:ARB:FILTer:BBT?
```

This command changes the bandwidth-multiplied-by-bit-time (BbT) filter parameter.

The filter BbT value can be set to the minimum level (0), the maximum level (1), or in between by using fractional numeric values (0.001–0.999).

***RST** +5.00000000E–001

Range 0.000–1.000

Key Entry **Filter BbT**

Remarks This command is effective only after choosing a Gaussian filter. It does not have an effect on other types of filters.

To change the current filter type, refer to “[:FILTer](#)” on page 258.

:FILTer:CHANnel

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:DMODulation:ARB:FILTer:CHANnel EVM|ACP
[ :SOURce ]:RADio:DMODulation:ARB:FILTer:CHANnel?
```

This command optimizes the Nyquist and root Nyquist filters to minimize error vector magnitude

(EVM) or to minimize adjacent channel power (ACP).

EVM This choice provides the most ideal passband.

ACP This choice improves stopband rejection.

***RST** EVM

Key Entry Optimize FIR For EVM ACP

Remarks To change the current filter type, refer to “:FILTer” on page 258.

:HEADer:CLEAr

Supported All with Option 001/601 or 002/602

[:SOURce] :RADio:DMODulation:ARB:HEADer:CLEAr

This command clears the header information from the header file used by this modulation format.

***RST** N/A

Key Entry Clear Header

Remarks The **Digital Modulation Off On** softkey must be set to On for this command to function.

:HEADer:SAVE

Supported All with Option 001/601 or 002/602

[:SOURce] :RADio:DMODulation:ARB:HEADer:SAVE

This command saves the header information to the header file used by this modulation format.

***RST** N/A

Key Entry Save Setup To Header

Remarks The **Digital Modulation Off On** softkey must be set to On for this command to function.

:IQ:MODulation:ATTen

Supported All with Option 001/601 or 002/602

[:SOURce] :RADio:DMODulation:ARB:IQ:MODulation:ATTen <val>

[:SOURce] :RADio:DMODulation:ARB:IQ:MODulation:ATTen?

This command sets the attenuation level of the I/Q signals being modulated through the signal generator RF path.

The variable <val> is expressed in units of decibels (dB).

*RST	+2.00000000E+000
Range	0–40
Key Entry	Modulator Atten Manual Auto
Remarks	N/A

:IQ:MODulation:ATTen:AUTO

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] :RADio:DMODulation:ARB:IQ:MODulation:ATTen:AUTO ON|OFF|1|0
[ :SOURCE ] :RADio:DMODulation:ARB:IQ:MODulation:ATTen:AUTO?
```

This command enables or disables the I/Q attenuation auto mode.

- ON (1) This choice enables the attenuation auto mode which optimizes the modulator attenuation for the current conditions.
- OFF (0) This choice holds the attenuator at its current setting or at a selected value. Refer to “:IQ:MODulation:ATTen” on page 260 for setting the attenuation value.

*RST	1
Key Entry	Modulator Atten Manual Auto
Remarks	N/A

:IQ:MODulation:FILTer

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] :RADio:DMODulation:ARB:IQ:MODulation:FILTer 2.1e6|40e6|THROUGH
[ :SOURCE ] :RADio:DMODulation:ARB:IQ:MODulation:FILTer?
```

This command enables you to select a filter or through path for I/Q signals modulated onto the RF carrier. Selecting a filter using this command will automatically set “:IQ:MODulation:FILTer:AUTO” on page 262 to OFF(0) mode.

2.1E6	This choice applies a 2.1 MHz baseband filter to the I/Q signals.
40E6	This choice applies a 40 MHz baseband filter to the I/Q signals.
THROUGH	This choice bypasses filtering.
*RST	THR
Key Entry	2.100 MHz 40.000 MHz Through

Remarks N/A

:IQ:MODulation:FILTer:AUTO

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:DMODulation:ARB:IQ:MODulation:FILTer:AUTO ON|OFF|1|0
[:SOURce]:RADio:DMODulation:ARB:IQ:MODulation:FILTer:AUTO?
```

This command enables or disables the automatic selection of the filters for I/Q signals modulated onto the RF carrier.

ON(1) This choice will automatically select a digital modulation filter.

OFF(0) This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “:IQ:MODulation:FILTer” on page 281 for selecting a filter or through path.

***RST** 1

Key Entry I/Q Mod Filter Manual Auto

Remarks N/A

:MDESTination:PULSe

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:DMODulation:ARB:MDESTination:PULSe NONE|M1|M2|M3|M4
[:SOURce]:RADio:DMODulation:ARB:MDESTination:PULSe?
```

This command routes the selected marker to the Pulse/RF Blanking function. The NONE parameter clears the marker for the Pulse/RF Blanking function.

***RST** NONE

Key Entry None Marker 1 Marker 2 Marker 3 Marker 4

Remarks N/A

:MDESTination:AAMPLitude

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:DMODulation:ARB:MDESTination:AAMPLitude NONE|M1|M2|M3|M4
[:SOURce]:RADio:DMODulation:ARB:MDESTination:AAMPLitude?
```

This command routes the selected marker to the Alternate Amplitude function. The NONE parameter clears the marker for the Alternate Amplitude function.

*RST	NONE				
Key Entry	None	Marker 1	Marker 2	Marker 3	Marker 4
Remarks	N/A				

:MDEStination:ALCHold

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] :RADio:DMODulation:ARB:MDEStination:ALCHold NONE | M1 | M2 | M3 | M4
[ :SOURCE ] :RADio:DMODulation:ARB:MDEStination:ALCHold?
```

This command routes the selected marker to the ALC Hold function. The `NONE` parameter clears the marker for the ALC Hold function.

*RST	NONE				
Key Entry	None	Marker 1	Marker 2	Marker 3	Marker 4
Remarks	N/A				

:MODulation:FSK[:DEVIation]

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] :RADio:DMODulation:ARB:MODulation:FSK[:DEVIation] <val>
[ :SOURCE ] :RADio:DMODulation:ARB:MODulation:FSK[:DEVIation]?
```

This command sets the symmetric FSK frequency deviation value.

The variable `<val>` is expressed in units of Hertz and the maximum range value equals the current symbol rate value multiplied by ten, limited to 20 MHz.

*RST	+4.00000000E+002
Range	0–2E7
Key Entry	Freq Dev
Remarks	To change the modulation type, refer to “:MODulation[:TYPE]” on page 263. Refer to “:SRATe” on page 270 for a list of the minimum and maximum symbol rate values. To set an asymmetric FSK deviation value, refer to the <i>User’s Guide for more information</i> .

:MODulation[:TYPE]

Supported All with Option 001/601 or 002/602

Dmodulation Subsystem—Option 001/601 or 002/602 ([:SOURCE]:RADio:DMODulation:ARB)

```
[ :SOURce ]:RADio:DMODulation:ARB:MODulation[ :TYPE] BPSK|QPSK|IS95QPSK|
GRAYQPSK|OQPSK|IS95OQPSK|P4DQPSK|PSK8|PSK16|D8PSK|EDGE|MSK|FSK2|FSK4|
FSK8|FSK16|C4FM|QAM4|QAM16|QAM32|QAM64|QAM128|QAM256
[:SOURce]:RADio:DMODulation:ARB:MODulation[:TYPE]?
```

This command sets the modulation type for the digital modulation personality.

*RST	P4DQPSK							
Key Entry	BPSK	QPSK	IS-95 QPSK	Gray Coded QPSK		OQPSK		
	IS-95 OQPSK	$\pi/4$ DQPSK	8PSK	16PSK	D8PSK	EDGE	MSK	
	2-Lvl FSK	4-Lvl FSK	8-Lvl FSK	16-Lvl FSK	C4FM	4QAM	16QAM	
	32QAM	64QAM	128QAM	256QAM				
Remarks	N/A							

:MPOLarity:MARKer1

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:DMODulation:ARB:MPOLarity:MARKer1 NEGative|POSitive
[:SOURce]:RADio:DMODulation:ARB:MPOLarity:MARKer1?
```

This command sets the polarity for marker 1.

*RST	POS
Key Entry	Marker 1 Polarity Neg Pos
Remarks	N/A

:MPOLarity:MARKer2

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:DMODulation:ARB:MPOLarity:MARKer2 NEGative|POSitive
[:SOURce]:RADio:DMODulation:ARB:MPOLarity:MARKer2?
```

This command sets the polarity for marker 2.

*RST	POS
Key Entry	Marker 2 Polarity Neg Pos
Remarks	N/A

:MPOLarity:MARKer3

Supported All with Option 001/601 or 002/602

Dmodulation Subsystem—Option 001/601 or 002/602 ([:SOURce]:RADio:DMODulation:ARB)

```
[ :SOURce ] :RADio:DMODulation:ARB:MPOLarity:MARKer3 NEGative|POSitive
[ :SOURce ] :RADio:DMODulation:ARB:MPOLarity:MARKer3?
```

This command sets the polarity for marker 3.

***RST** POS

Key Entry **Marker 3 Polarity Neg Pos**

Remarks N/A

:MPOLarity:MARKer4

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:DMODulation:ARB:MPOLarity:MARKer4 NEGative|POSitive
[ :SOURce ] :RADio:DMODulation:ARB:MPOLarity:MARKer4?
```

This command sets the polarity for marker 4.

***RST** POS

Key Entry **Marker 4 Polarity Neg Pos**

Remarks N/A

:REFerence:EXTernal:FREQuency

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:DMODulation:ARB:REFerence:EXTernal:FREQuency <val>
[ :SOURce ] :RADio:DMODulation:ARB:REFerence:EXTernal:FREQuency?
```

This command conveys the expected reference frequency value of an externally applied reference the signal generator.

The variable <val> is expressed in units of Hertz (Hz–MHz).

***RST** +1.00000000E+007

Range 2.5E5–1E8

Key Entry **Reference Freq**

Remarks The value specified by this command is effective only when you are using an external ARB reference applied to the BASEBAND GEN REF IN rear panel connector.

To specify external as the ARB reference source type, refer to “:REFerence[:SOURce]” on page 266.

:REference[:SOURCE]

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] :RADio:DMODulation:ARB:REference[ :SOURCE ] INTernal | EXTernal
[ :SOURCE ] :RADio:DMODulation:ARB:REference[ :SOURCE ] ?
```

This command selects either an internal or external reference for the waveform clock.

***RST** INT

Key Entry ARB Reference Ext Int

Remarks If the EXTernal choice is selected, the external frequency value *must* be entered and the signal must be applied to the BASEBAND GEN REF IN rear panel connector.

Refer to “[:REference:EXTernal:FREQUENCY](#)” on page 265 to enter the external reference frequency.

:RETRigger

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] :RADio:DMODulation:ARB:RETRigger ON | OFF | IMMEDIATE
[ :SOURCE ] :RADio:DMODulation:ARB:RETRigger ?
```

This command enables or disables the ARB retriggering mode; the retrigger mode controls how the retriggering function performs while a waveform is playing.

ON (1) This choice specifies that if a trigger occurs while a waveform is playing, the waveform will retrigger at the end of the current waveform sequence and play once more.

OFF (0) This choice specifies that if a trigger occurs while a waveform is playing, the trigger will be ignored.

IMMEDIATE This choice specifies that if a trigger occurs while a waveform is playing, the waveform will reset and replay from the start immediately upon receiving a trigger.

***RST** ON

Key Entry On Off Immediate

Remarks N/A

:SCLock:RATE

Supported All with Option 001/601 or 002/602

Dmodulation Subsystem—Option 001/601 or 002/602 ([:SOURCE]:RADio:DMODulation:ARB)

```
[ :SOURCE ]:RADio:DMODulation:ARB:SClock:RATE <val>
```

```
[ :SOURCE ]:RADio:DMODulation:ARB:SClock:RATE?
```

This command sets the sample clock rate.

The variable <val> is expressed in units of Hertz (Hz – MHz)

***RST** +1.00000000E+008

Range 1–1E8

Key Entry ARB Sample Clock

Remarks The modulation format should be active before executing this command. If this command is executed before the modulation format is active, the entered value will be overridden by a calculated factory default value. Refer to “[:STATe]” on [page 275](#) to activate the modulation format.

:SETup

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ]:RADio:DMODulation:ARB:SETup GSM|NADC|PDC|PHS|DECT|AC4Fm|
```

```
ACQPsk|CDPD|PWT|EDGE|TETRA|MCARrier|"<file name>"
```

```
[ :SOURCE ]:RADio:DMODulation:ARB:SETup?
```

This command selects the digital modulation format type.

***RST** NADC

Key Entry GSM NADC PDC PHS DECT APCO 25 w/C4FM APCO w/CQPSK
CDPD PWT EDGE TETRA Multicarrier Off On Select File

Remarks Refer to “File Name Variables” on [page 13](#) for information on the file name syntax.

:SETup:MCARrier

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ]:RADio:DMODulation:ARB:SETup:MCARrier (GSM|NADC|PDC|PHS|DECT|
```

```
AC4Fm|ACQPsk|CDPD|PWT|EDGE|TETRA,<num carriers>,<freq spacing>)|
```

```
"<file name>"
```

```
[ :SOURCE ]:RADio:DMODulation:ARB:SETup:MCARrier?
```

This command builds a table with the specified number of carriers and frequency spacing or retrieves the setup stored in the specified user file.

The carrier type, number of carriers, and frequency spacing value are returned when a query is

initiated. The output format is as follows:

<carrier type>, <num carriers>, <freq spacing>

If a specific file is loaded and then queried, only the file name is returned.

The variable <freq spacing> is expressed in units of Hertz (kHz–MHz).

*RST	<i>Carrier:</i> NADC <num carriers>: 2 <freq spacing>: +1.0000000000000E+06
Range	<num carriers>: 2–100 <freq spacing>: $2 \div (\text{num carriers} - 1) \times 80$ MHz
Key Entry	GSM NADC PDC PHS DECT APCO 25 w/C4FM APCO w/CQPSK CDPD PWT EDGE TETRA # of Carriers Freq Spacing Custom Digital Mod State
Remarks	Refer to “File Name Variables” on page 13 for information on the file name syntax. The file specified must be a single carrier CDMA file. To store a multicarrier setup refer to “:SETup:MCARrier:STORe” on page 221.

:SETup:MCARrier:PHASe

Supported	All with Option 001/601 or 002/602
	[:SOURce] :RADio:DMODulation:ARB:SETup:MCARrier:PHASe FIXed RANDom [:SOURce] :RADio:DMODulation:ARB:SETup:MCARrier:PHASe?
	This command toggles the phase settings for multicarrier digital modulation.
FIXed	This choice sets the phase of all carriers to 0.
RANDom	This choice sets random phase values for all of the carriers.
*RST	FIX
Key Entry	Carrier Phases Fixed Random
Remarks	N/A

:SETup:MCARrier:STORe

Supported	All with Option 001/601 or 002/602
	[:SOURce] :RADio:DMODulation:ARB:SETup:MCARrier:STORe "<file name>"
	This command stores the current multicarrier setup information.

Dmodulation Subsystem—Option 001/601 or 002/602 ([:SOURce]:RADio:DMODulation:ARB)

The stored file contains information that includes the digital modulation format, number of carriers, frequency spacing, and power settings for the multicarrier setup.

*RST	N/A
Range	N/A
Key Entry	Load/Store
Remarks	The setting enabled by this command is not affected by signal generator power-on, preset, or *RST. Refer to “File Name Variables” on page 13 for information on the file name syntax.

:SETup:MCARrier:TABLE

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio :DMODulation :ARB :SETup :MCARrier :TABLE INIT | APPend |
<carrier_num> , GSM | NADC | PDC | PHS | DECT | AC4Fm | ACQPsk | CDPD | PWT | EDGE | TETRA |
"<file name>" , <freq_offset> , <power>
[ :SOURce ] :RADio :DMODulation :ARB :SETup :MCARrier :TABLE? <carrier_num>
```

This command modifies the parameters of one of the available multicarrier digital modulation formats.

The variable <freq_offset> is expressed in units of Hertz (kHz–MHz).

The variable <power> is expressed in units of decibels (dB).

INIT	This choice clears the current information and creates a new one-row table, allowing for further definition using additional parameters.
APPend	This choice adds rows to an existing table.
<carrier_num>	This variable specifies the number of the carriers in the multicarrier table that will be modified. The value of the variable <carrier_num> must be specified prior to selecting the digital modulation format.

Carrier type, frequency offset, and power level are returned when a query is initiated. The output format is as follows:

```
<carrier type> , <freq_offset> , <power>
*RST carrier type: NADC <freq_offset>: -5.00000000E+004
<power>: +0.00000000E+000
Range <freq_offset>: -1E5 to 1E6 <power>: -40 to 0
```

Key Entry	Initialize Table	Insert Row	GSM	NADC	PDC	PHS	DECT
	APCO 25 w/C4FM	APCO w/CQPSK		CDPD	PWT	EDGE	TETRA
	Custom Digital Mod State						

Remarks Refer to “File Name Variables” on page 13 for information on the file name syntax.

The file specified must be a single carrier CDMA file. To store a multicarrier setup refer to “:SETup:MCARrier:STORe” on page 221.

:SETup:MCARrier:TABLE:NCARriers

Supported All with Option 001/601 or 002/602

`[:SOURce] :RADio:DMODulation:ARB:SETup:MCARrier:TABLE:NCARriers?`

This query returns the number of carriers in the current multicarrier setup.

***RST** +2

Range 1–100

Key Entry # of Carriers

Remarks N/A

:SETup:STORe

Supported All with Option 001/601 or 002/602

`[:SOURce] :RADio:DMODulation:ARB:SETup:STORe "<file name>"`

This command stores the current custom digital modulation state.

The saved file contains information that includes the modulation type, filter and symbol rate for the custom modulation setup.

***RST** N/A

Range N/A

Key Entry Store Custom Dig Mod State

Remarks Refer to “File Name Variables” on page 13 for information on the file name syntax.

:SRATe

Supported All with Option 001/601 or 002/602

Dmodulation Subsystem—Option 001/601 or 002/602 ([:SOURCE]:RADio:DMODulation:ARB)

[:SOURCE]:RADio:DMODulation:ARB:SRATe <val>

[:SOURCE]:RADio:DMODulation:ARB:SRATe?

This command sets the transmission symbol rate.

The variable <val> is expressed in units of bits per second (bps–Mbps) and the maximum range value is dependent upon the source of data (internal or external), the modulation type, and filter.

***RST** +2.43000000E+004

Range	<i>Modulation Type</i>	<i>Bits per Symbol</i>	<i>Internal Data</i>	<i>External Serial Data</i>
	BPSK	1	1–50 Msps	1–50 Msps
	FSK2			
	MSK			
	C4FM	2	1–50 Msps	1–25 Msps
	FSK4			
	OQPSK			
	OQPSK195			
	P4QPPSK			
	QAM4			
	QPSK			
	QPSKIS95			
	QPSKISAT			
	D8PSK			
	EDGE			
	FSK8			
	PSK8			
	FSK16	4	1–25 Msps	1–12.5 Msps
	PSK16			
	QAM16			
	QAM32	5	1–20 Msps	1–10 Msps
	QAM64	6	1–16.67 Msps	1–8.33 Msps
	QAM256	7	1–12.50 Msps	1–6.25 Msps

Key Entry Symbol Rate

Remarks When user-defined filters are selected using the command in section “:FILTer” on page 258, the upper bit rate will be restricted in line with the following symbol rate restriction:

- FIR filter length > 32 symbols: upper limit is 12.5 Msps
- FIR filter length > 16 symbols: upper limit is 25 Msps

When internal FIR filters are used, the limits of the above table always apply. For higher symbol rates, the FIR filter length will be truncated as follows:

- Above 12.5 Msps, the FIR length will be truncated to 32 symbols
 - Above 25 Msps, the FIR length will be truncated to 16 symbols
- This will impact the relative timing of the modulated data, as well as the actual filter response.

To change the modulation type, refer to “:MODulation[:TYPE]” on page 263.

:TRIGger:TYPE

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio :DMODulation :ARB :TRIGger :TYPE CONTinuous | SINGle | GATE
[ :SOURce ] :RADio :DMODulation :ARB :TRIGger :TYPE?
```

This command sets the trigger type.

CONTinuous The waveform repeats continuously; the sequence restarts every time the previous playback is completed. To customize continuous triggering, refer to “:TRIGger:TYPE:CONTinuous[:TYPE]” on page 272.

SINGle The waveform segment or sequence plays once for every trigger received.

GATE An external trigger signal interrupts the playback while the gating signal is in the active state. Playback resumes when the external control signal returns to the inactive state. The active state can be set high or low.

***RST** CONT

Key Entry Continuous Single Gated

Remarks To change the polarity of the gated trigger, refer to “:TYPE:GATE:ACTive” on page 273.

:TRIGger:TYPE:CONTinuous[:TYPE]

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio :DMODulation :ARB :TRIGger :TYPE :CONTinuous [ :TYPE ] FREE |
TRIGger | RESet
[ :SOURce ] :RADio :DMODulation :ARB :TRIGger :TYPE :CONTinuous [ :TYPE ]?
```

This command customizes the continuous trigger selection.

FREE This choice immediately transmits a waveform that is continuously repeated.

TRIGger This choice causes the waveform to wait for a trigger. Once a trigger is received, the transmission of a continuously repeated waveform begins.

RESet This choice immediately restarts a continuously repeated waveform upon

receiving a trigger.

*RST	FREE
Key Entry	Free Run Trigger & Run Reset & Run
Remarks	To select CONTinuous as the trigger type, refer to “:TRIGger:TYPE” on page 272.

:TYPE:GATE:ACTive

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:DMODulation:ARB:TRIGger:TYPE:GATE:ACTive LOW|HIGH
[ :SOURce ] :RADio:DMODulation:ARB:TRIGger:TYPE:GATE:ACTive?
```

This command sets the arb trigger gate polarity; GATE must first be selected as the trigger type.

LOW The waveform stops playing while the selected external control gating signal is low and restarts when the gate returns to the high level.

HIGH The waveform stops playing while the selected external control gating signal is high and restarts when the gate returns to the low level.

***RST** HIGH

Key Entry Gate Active Low High

Remarks To select a GATE as the trigger type, refer to “:TRIGger:TYPE” on page 272.

:TRIGger[:SOURce]

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:DMODulation:ARB:TRIGger[:SOURce] KEY|EXT|BUS
[ :SOURce ] :RADio:DMODulation:ARB:TRIGger[:SOURce]?
```

This command sets the trigger source.

KEY This choice enables triggering by pressing the front panel **Trigger** hardkey.

EXT This choice enables triggering using an externally applied signal at the PATT TRIG IN rear panel connector or the PATT TRIG IN 2 pin on the rear panel AUX I/O connector. To select the appropriate connector, refer to “:TRIGger[:SOURce]:EXTernal[:SOURce]” on page 275.

BUS This choice enables GPIB triggering using the *TRG or GET command or LAN and RS-232 triggering using the *TRG command.

*RST	EXT		
Key Entry	Trigger Key	Ext	Bus
Remarks	N/A		

:TRIGger[:SOURCE]:EXTernal:DELay

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] : RADio : DMODulation : ARB : TRIGger [ : SOURCE ] : EXTernal : DELay <val>
[ : SOURCE ] : RADio : DMODulation : ARB : TRIGger [ : SOURCE ] : EXTernal : DELay?
```

This command sets the time for the external trigger delay.

The variable <val> is expressed as seconds (μ sec–sec).

***RST** +1.00000000E–003

Range 1E–8 to 4E1

Key Entry Ext Delay Time

Remarks This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURCE]” on page 273.

:TRIGger[:SOURCE]:EXTernal:DELay:STATe

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] : RADio : DMODulation : ARB : TRIGger [ : SOURCE ] : EXTernal : DELay :
STATe ON | OFF | 1 | 0
[ : SOURCE ] : RADio : DMODulation : ARB : TRIGger [ : SOURCE ] : EXTernal : DELay : STATe?
```

This command enables or disables the external trigger delay function.

***RST** 0

Key Entry Ext Delay Off On

Remarks This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURCE]” on page 273.

:TRIGger[:SOURCE]:EXTernal:SLOPe

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] : RADio : DMODulation : ARB : TRIGger [ : SOURCE ] : EXTernal :
SLOPe POSitive | NEGative
[ : SOURCE ] : RADio : DMODulation : ARB : TRIGger [ : SOURCE ] : EXTernal : SLOPe?
```


Dmodulation Subsystem—Option 001/601 or 002/602 ([:SOURCE]:RADio:DMODulation:ARB)

This command sets the polarity for the external trigger.

***RST** NEG

Key Entry Ext Polarity Neg Pos

Remarks This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURCE]” on page 273.

:TRIGger[:SOURCE]:EXternal[:SOURCE]

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] : RADio : DMODulation : ARB : TRIGger [ : SOURCE ] :
EXTernal [ : SOURCE ] EPT1 | EPT2 | EPTRIGGER1 | EPTRIGGER2
[ : SOURCE ] : RADio : DMODulation : ARB : TRIGger [ : SOURCE ] : EXTernal [ : SOURCE ] ?
```

This command specifies which PATT TRIG IN connection, rear panel connector or AUX I/O connector, will be used to accept an externally applied trigger signal.

EPT1 This choice is synonymous with EPTRIGGER1 and selects the PATT TRIG IN rear panel connector for the external signal connection.

EPT2 This choice is synonymous with EPTRIGGER2 and selects the PATT TRIG IN 2 pin on the rear panel AUX I/O connector for the external signal connection.

EPTRIGGER1 This choice is synonymous with EPT1 and selects the PATT TRIG IN rear panel connector for the external signal connection.

EPTRIGGER2 This choice is synonymous with EPT2 and selects the PATT TRIG IN 2 pin on the rear panel AUX I/O connector for the external signal connection.

***RST** EPT1

Key Entry **Patt Trig In 1** **Patt Trig In 2**

Remarks This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURCE]” on page 273.

For more information about the rear panel AUX I/O connector pin configuration, refer to the *User's Guide*.

[:STATe]

Supported All with Option 001/601 or 002/602

```
[ : SOURCE ] : RADio : DMODulation : ARB [ : STATe ] ON | OFF | 1 | 0
[ : SOURCE ] : RADio : DMODulation : ARB [ : STATe ] ?
```

This command enables or disables the digital modulation capability.

Component Test Digital Commands

Dmodulation Subsystem—Option 001/601 or 002/602 ([:SOURce]:RADio:DMODulation:ARB)

ON (1)	This choice sets up the internal hardware to generate the currently selected digital modulation format signal selection.
OFF (0)	This choice disables the digital modulation capability.
*RST	0
Key Entry	Digital Modulation Off On
Remarks	When ON is selected, the I/Q state is activated and the I/Q source is set to internal.

Dual ARB Subsystem–Option 001/601 or 002/602 ([:SOURce]:RADio:ARB)

:CLIPping

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio :ARB :CLIPping "<file name>" , IJQ | IORQ , <val> [ , <val> ]
```

This command sets the clipping level of the selected waveform segment to a percentage of its highest peak.

The variable <val> is expressed in units of percent.

IJQ This choice clips the composite I/Q waveform.

IORQ This choice clips I and Q separately. When this choice is enabled, percentage values for both I and Q must be specified.

***RST** IJQ <val>: +100

Range <val>: 10–100 (0.1% resolution)

Key Entry Clipping Type | I+jQ | | I | , | Q |

Remarks A value of 100 percent equates to no clipping.

Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:GENerate:SINE

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio :ARB :GENerate :SINE [ "<filename>" ] [ , <osr> ] [ , <scale> ] [ , I | Q | IQ ]
```

This command creates a file (using a specific file name) and stores a generated sine wave.

<osr> This variable sets the oversample ratio, which must be a value that is ≥ 4 . If the specified over sample ratio is < 60 (the minimum number of samples), multiple periods are generated to create a waveform with at least 60 samples. The number of periods that will be created is $60 \div \text{osr}$ (quotient will round off to a whole number). A waveform with an oversample ratio ≥ 60 has one period.

The maximum value for the range below is determined by the option and available baseband memory.

***RST** N/A

Range <osr> Option 001: 4–8Msamples

Option 002: 4–32Msamples

Key Entry N/A

Remarks Executing this command without the "<file name>" variable will generate a factory default SINE_TEST_WFM file.

When using the variable "<file name>" for this command, the "@" or ":" character is not allowed.

The file is always generated as "WFM#: <file name>", where "#" is replaced by the baseband generator number.

:HEADer:CLEAr

Supported All with Option 001/601 or 002/602

[:SOURce] :RADio :ARB :HEADer :CLEAr

This command clears the header information from the header file used by this modulation format.

***RST** N/A

Key Entry Clear Header

Remarks The ARB Off On softkey must be set to On for this command to function.

:HEADer:SAVE

Supported All with Option 001/601 or 002/602

[:SOURce] :RADio :ARB :HEADer :SAVE

This command saves the header information to the header file used by this modulation format.

***RST** N/A

Key Entry Save Setup To Header

Remarks The ARB Off On softkey must be set to On for this command to function.

:HCRest[::STATe]

Supported All with Option 001/601 or 002/602

[:SOURce] :RADio :ARB :HCRest [:STATe] ON | OFF | 1 | 0

[:SOURce] :RADio :ARB :HCRest [:STATe] ?

This command enables or disables the operating state of the high crest mode.

ON(1) This choice turns high crest mode on for arbitrary I/Q waveforms with high crest

factors (such as downloaded Signal Studio for 802.11 signals). High crest mode reduces the ALC vernier level by 7.5 dB, allowing the signal generator to process these signals with less distortion and improved EVM. For crest factors higher than 4 dB, I/Q drive levels should be reduced by 1 dB for each dB above that level. In high crest mode, the maximum output level is reduced and power level accuracy is degraded.

OFF(0) This choice disables the high crest mode.

*RST 0

Key Entry High Crest Mode Off On

Remarks The high crest mode is automatically turned on by some Signal Studio applications. You can manually override this automatic selection at any time.

:IQ:EXtErnal:FiLTer

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:ARB: IQ: EXtErnal: FiLTer 40e6 | THRough
[ :SOURce ] :RADio:ARB: IQ: EXtErnal: FiLTer?
```

This command selects the filter or through path for I/Q signals routed to the rear panel I and Q outputs. The filter has not effect on the modulated RF signal. Selecting a filter using this command will automatically set “:IQ:EXtErnal:FiLTer:AUTO” on page 279 to OFF(0) mode.

40e6 This choice applies a 40 MHz baseband filter.

THRough This choice bypasses filtering.

*RST THR

Key Entry 40.000 MHz Through

Remarks N/A

:IQ:EXtErnal:FiLTer:AUTO

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:ARB: IQ: EXtErnal: FiLTer: AUTO ON | OFF | 1 | 0
[ :SOURce ] :RADio:ARB: IQ: EXtErnal: FiLTer: AUTO?
```

This command enables or disables the automatic selection of the filters for I/Q signals routed to the rear panel I/Q outputs.

ON(1) This choice will automatically select a digital modulation filter optimized for the current signal generator settings.

OFF(0)	This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “:IQ:EXtErnal:FiLTer” on page 279 for selecting a filter or through path.
*RST	1
Key Entry	I/Q Output Filter Manual Auto
Remarks	N/A

:IQ:MODulation:ATTen

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:ARB:IQ:MODulation:ATTen <val>
[ :SOURce ] :RADio:ARB:IQ:MODulation:ATTen?
```

This command sets the attenuation level of the I/Q signals being modulated through the signal generator RF path.

The variable <val> is expressed in units of decibels (dB).

*RST	+2.00000000E+000
Range	0–40
Key Entry	Modulator Atten Manual Auto
Remarks	N/A

:IQ:MODulation:ATTen:AUTO

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:ARB:IQ:MODulation:ATTen:AUTO ON|OFF|1|0
[ :SOURce ] :RADio:ARB:IQ:MODulation:ATTen:AUTO?
```

This command enables or disables the I/Q attenuation auto mode.

ON (1)	This choice enables the attenuation auto mode which optimizes the modulator attenuation for the current conditions.
OFF (0)	This choice holds the attenuator at its current setting or at a selected value. Refer to “:IQ:MODulation:ATTen” on page 280 for setting the attenuation value.
*RST	1
Key Entry	Modulator Atten Manual Auto
Remarks	N/A

:IQ:MODulation:FILTer

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:ARB:IQ:MODulation:FILTer 2.1e6 | 40e6 | THROugh
[ :SOURce ]:RADio:ARB:IQ:MODulation:FILTer?
```

This command enables you to select a filter or through path for I/Q signals modulated onto the RF carrier. This filter has no effect on the I/Q signal out the rear panel. Selecting a filter using this command will automatically set “:IQ:MODulation:FILTer:AUTO” on page 281 to OFF(0) mode.

2.1E6 This choice applies a 2.1 MHz baseband filter to the I/Q signals.

40E6 This choice applies a 40 MHz baseband filter to the I/Q signals.

THROugh This choice bypasses filtering.

***RST** THR

Key Entry 2.100 MHz 40.000 MHz Through

Remarks N/A

:IQ:MODulation:FILTer:AUTO

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:ARB:IQ:MODulation:FILTer:AUTO ON | OFF | 1 | 0
[ :SOURce ]:RADio:ARB:IQ:MODulation:FILTer:AUTO?
```

This command enables or disables the automatic selection of the filters for I/Q signals modulated onto the RF carrier.

ON(1) This choice will automatically select a digital modulation filter.

OFF(0) This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “:IQ:MODulation:FILTer” on page 281 for selecting a filter or through path.

***RST** 1

Key Entry I/Q Mod Filter Manual Auto

Remarks N/A

:MARKer:CLEar

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:ARB:MARKer:CLEar "<filename>" , <mkr1 | 2 | 3 | 4> ,
<first_point> , <last_point>
```

This command clears markers from a waveform segment.

"<file name>"	This variable specifies the name of the waveform segment file.
<mkr1 2 3 4>	This variable designates which marker is to be cleared (1, 2, 3, or 4).
<first_point>	This variable defines the first point in a range of points (must be ≥ 1 , and \leq the total number of waveform points).
<last_point>	This variable defines the last point in a range of points (must be ≥ 1 , and \leq the total number of waveform points).
*RST	N/A
Range	<first_Point>: 1–# of waveform points <last_point>: 1–# of waveform points
Key Entry	Marker 1 2 3 4 First Mkr Point Last Mkr Point
Remarks	Refer to “File Name Variables” on page 13 for information on the file name syntax.

:MARKer:CLEar:ALL

Supported All with Option 001/601 or 002/602

[:SOURce]:RADio:ARB:MARKer:CLEar:ALL "<file name>" ,<mkr1 | 2 | 3 | 4>

This command clears all markers from a waveform segment simultaneously.

"<file name>"	This variable specifies the name of the waveform segment file.
<mkr1 2 3 4>	This variable designates which marker is to be cleared (1, 2, 3, or 4).
*RST	N/A
Range	N/A
Key Entry	Set Marker Off All Points
Remarks	Refer to “File Name Variables” on page 13 for information on the file name syntax.

:MARKer:ROtate

Supported All with Option 001/601 or 002/602

[:SOURce]:RADio:ARB:MARKer:ROtate "<file name>" ,<rotate_count>

This command shifts the marker bits in a waveform segment.

*RST	N/A
-------------	-----

Range	<rotate_count>: number of points in the waveform – 1
Key Entry	N/A
Remarks	To define the maximum allowable points in a waveform, refer to “:MARKer:[SET]” on page 283. Refer to “File Name Variables” on page 13 for information on the file name syntax.

:MARKer:[SET]

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] :RADio:ARB:MARKer: [SET] "<filename>" , <mkr1|2|3|4> ,  
<first_point> , <last_point> , <skip_count>
```

This command defines a marker over a range of points on a waveform segment.

"<file name>" This choice specifies the name of the waveform segment file.

<mkr1|2|3|4> This variable designates which marker is to be set (1, 2, 3, or 4).

<first_point> This variable defines the first point in the range over which the marker will be placed. This number must be greater than or equal to 1, and less than or equal to the total number of waveform points.

If you enter a value for either the first marker point or the last marker point that would make the first marker point occur after the last, the last marker point is automatically adjusted to match the first marker point.

<last_point> This variable defines the last point in the range over which the marker will be placed. This value must be greater than or equal to 1, and less than or equal to the total number of waveform points.

<skip_count> This variable creates a repeating pattern of markers.

Defining a skip count causes the marker to appear on the first point in the defined range, disappear over the number of points defined as the skip count, then reappear for one point. The pattern repeats until the end of the defined range. This enables you to set repetitively spaced markers. For example, a skip of 2 produces two points between each marker across the defined range.

***RST** N/A

Range <first_Point>: 1–# of waveform points

<last_point>: 1–# of waveform points <skip_count>: 0–65535

Key Entry **Marker 1 2 3 4** **First Mkr Point** **Last Mkr Point** **# Skipped Points**

Remarks Refer to “File Name Variables” on page 13 for information on the file name syntax.

:MDEStination:PULSe

Supported All with Option 001/601 or 002/602

[:SOURce] :RADio :ARB :MDEStination :PULSe NONE | M1 | M2 | M3 | M4
 [:SOURce] :RADio :ARB :MDEStination :PULSe?

This command routes the selected marker to the Pulse/RF Blanking function. The NONE parameter clears the marker for the Pulse/RF Blanking function.

***RST** NONE

Key Entry None Marker 1 Marker 2 Marker 3 Marker 4

Remarks N/A

:MDEStination:AAMPLitude

Supported All with Option 001/601 or 002/602

[:SOURce] :RADio :ARB :MDEStination :AAMPLitude NONE | M1 | M2 | M3 | M4
 [:SOURce] :RADio :ARB :MDEStination :AAMPLitude?

This command routes the selected marker to the Alternate Amplitude function. The NONE parameter clears the marker for the Alternate Amplitude function.

***RST** NONE

Key Entry None Marker 1 Marker 2 Marker 3 Marker 4

Remarks N/A

:MDEStination:ALCHold

Supported All with Option 001/601 or 002/602

[:SOURce] :RADio :ARB :MDEStination :ALCHold NONE | M1 | M2 | M3 | M4
 [:SOURce] :RADio :ARB :MDEStination :ALCHold?

This command routes the selected marker to the ALC Hold function. The NONE parameter clears the marker for the ALC Hold function.

***RST** NONE

Key Entry None Marker 1 Marker 2 Marker 3 Marker 4

Remarks N/A

:MPOLarity:MARKer1

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:ARB:MPOLarity:MARKer1 NEGative|POSitive  
[ :SOURce ]:RADio:ARB:MPOLarity:MARKer1?
```

This command sets the polarity for marker 1.

***RST** POS

Key Entry Marker 1 Polarity Neg Pos

Remarks N/A

:MPOLarity:MARKer2

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:ARB:MPOLarity:MARKer2 NEGative|POSitive  
[ :SOURce ]:RADio:ARB:MPOLarity:MARKer2?
```

This command sets the polarity for marker 2.

***RST** POS

Key Entry Marker 2 Polarity Neg Pos

Remarks N/A

:MPOLarity:MARKer3

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:ARB:MPOLarity:MARKer3 NEGative|POSitive  
[ :SOURce ]:RADio:ARB:MPOLarity:MARKer3?
```

This command sets the polarity for marker 3.

***RST** POS

Key Entry Marker 3 Polarity Neg Pos

Remarks N/A

:MPOLarity:MARKer4

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:ARB:MPOLarity:MARKer4 NEGative|POSitive  
[ :SOURce ]:RADio:ARB:MPOLarity:MARKer4?
```

This command sets the polarity for marker 4.

*RST	POS
Key Entry	Marker 4 Polarity Neg Pos
Remarks	N/A

:REfERENCE:EXtERnal:FREQUency

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:ARB:REfERENCE:EXtERnal:FREQUency <val>
[ :SOURce ]:RADio:ARB:REfERENCE:EXtERnal:FREQUency?
```

This command allows you to enter the frequency of the applied external reference.

The variable <val> is expressed in units of Hertz (Hz–MHz).

*RST	+1.00000000E+007
Range	2.5E5–1E8
Key Entry	Reference Freq
Remarks	The value specified by this command is effective only when you are using an external ARB reference applied to the BASEBAND GEN REF IN rear panel connector.

To specify external as the ARB reference source type, refer to “:REfERENCE[:SOURce]” on page 286.

:REfERENCE[:SOURce]

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:ARB:REfERENCE[ :SOURce ] INTernal | EXtERnal
[ :SOURce ]:RADio:ARB:REfERENCE[ :SOURce ]?
```

This command selects either an internal or external reference for the waveform clock.

*RST	INT
Key Entry	ARB Reference Ext Int
Remarks	If the EXtERnal choice is selected, the external frequency value <i>must</i> be entered and the signal must be applied to the BASEBAND GEN REF IN rear panel connector.
	Refer to “:REfERENCE:EXtERnal:FREQUency” on page 286 to enter the external reference frequency.

:RETRigger

Supported All with Option 001/601 or 002/602

```
[:SOURce]:RADio:ARB:RETRigger ON|OFF|IMMEDIATE
[:SOURce]:RADio:ARB:RETRigger?
```

This command enables or disables the ARB retriggering mode; the retrigger mode controls how the retriggering function performs while a waveform is playing.

ON (1) This choice specifies that if a trigger occurs while a waveform is playing, the waveform will retrigger at the end of the current waveform sequence and play once more.

OFF (0) This choice specifies that if a trigger occurs while a waveform is playing, the trigger will be ignored.

IMMEDIATE This choice specifies that if a trigger occurs while a waveform is playing, the waveform will reset and replay from the start immediately upon receiving a trigger.

***RST** ON

Key Entry On Off Immediate

Remarks N/A

:RSCALing

Supported All with Option 001/601 or 002/602

```
[:SOURce]:RADio:ARB:RSCALing <val>
[:SOURce]:RADio:ARB:RSCALing?
```

This command adjusts the scaling value that is applied to a waveform while it is playing.

The variable <val> is expressed in units of percent.

***RST** +7.00000000E+001

Range 1–100

Key Entry Waveform Runtime Scaling

Remarks Runtime scaling does not alter the waveform data file.

:SCALing

Supported All with Option 001/601 or 002/602

```
[:SOURce]:RADio:ARB:SCALing "<file name>",<val>
```

This command sets the scaling value of the selected waveform segment.

The variable <val> is expressed in units of percent.

*RST	N/A
Range	<val>: 1–100
Key Entry	Scaling
Remarks	Refer to “File Name Variables” on page 13 for information on the file name syntax.

:SCLock:RATE

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:ARB:SCLock:RATE <val>
[ :SOURce ]:RADio:ARB:SCLock:RATE?
```

This command sets the sample clock rate for the Dual ARB format.

The variable <val> is expressed in units of hertz.

*RST	+1.00000000E+008
Range	1–1E8
Key Entry	ARB Sample Clock
Remarks	N/A

:SEQuence

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:ARB:SEQuence "<file name>","<waveform>",<reps>,NONE|M1|
M2|M3|M4|M1M2|M1M3|M1M4|M2M3|M2M4|M3M4|M1M2M3|M1M2M4|M1M3M4|M2M3M4|
M1M2M3M4|ALL,{,,NONE|M1|M2|M3|M4|M1M2|M1M3|M1M4|M2M3|M2M4|M3M4|M1M2M3|
M1M2M4|M1M3M4|M2M3M4|M1M2M3M4|ALL,}
[ :SOURce ]:RADio:ARB:SEQuence? "<file name>"
```

This command creates or defines a waveform sequence. The waveform file consists of the subsequent waveform segment files (combined in the same order in which the variables are listed above).

"<file name>"	This variable specifies the name of the waveform sequence file.
"<waveform>"	This variable specifies the exact name of the waveform file.
<reps>	This variable edits the number times the waveform should repeat.
M1–4	This variable designates the marker number to be toggled on.

*RST	N/A
Range	<reps>: 1–65535
Key Entry	Build New Waveform Sequence Edit Selected Waveform Sequence Toggle Marker 1 Toggle Marker 2 Toggle Marker 3 Toggle Marker 4 Edit Repetitions
Remarks	Refer to “ File Name Variables ” on page 13 for information on the file name syntax. compilations.

:TRIGger:TYPE

Supported	All with Option 001/601 or 002/602
	[:SOURce] :RADio:ARB:TRIGger:TYPE CONTInuous SINGle GATE SADVance [:SOURce] :RADio:ARB:TRIGger:TYPE?

This command sets the trigger type.

CONTInuous	The waveform repeats continuously; the sequence restarts every time the previous playback is completed.
SINGle	The waveform segment or sequence plays once for every trigger received.
GATE	An external trigger signal interrupts the playback while the gating signal is in the active state. Playback resumes when the external control signal returns to the inactive state. The active state can be set high or low.
SADVance	The selected trigger controls the advance to the next segment in the sequence. To customize segment advance, refer to “ :TRIGger:TYPE:SADVance[:TYPE] ” on page 290 .

*RST	CONT
Key Entry	Continuous Single Gate Segment Advance
Remarks	N/A

:TRIGger:TYPE:CONTInuous[:TYPE]

Supported	All with Option 001/601 or 002/602
	[:SOURce] :RADio:ARB:TRIGger:TYPE:CONTInuous[:TYPE] FREE TRIGger RESet [:SOURce] :RADio:ARB:TRIGger:TYPE:CONTInuous[:TYPE]?

This command customizes the Continuous type trigger selection.

FREE	This choice immediately transmits a waveform that is continuously repeated.
------	---

TRIGger	This choice causes the waveform to wait for a trigger. After a trigger is received, the transmission of a continuously repeated waveform begins.		
RESet	This choice immediately restarts a continuously repeated waveform upon receiving a trigger.		
*RST	FREE		
Key Entry	Free Run	Trigger & Run	Reset & Run
Remarks	To select CONTinuous as the trigger type, refer to “:TRIGger:TYPE” on page 289.		

:TRIGger:TYPE:GATE:ACTive

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio :ARB :TRIGger :TYPE :GATE :ACTive LOW | HIGH
[ :SOURce ] :RADio :ARB :TRIGger :TYPE :GATE :ACTive ?
```

This command toggles the polarity of the active state of the external gating input signal; GATE must be selected as the arb trigger type.

LOW The waveform stops playing while the selected external control gating signal is low and restarts when the gate returns to the high level.

HIGH The waveform stops playing while the selected external control gating signal is high and restarts when the gate returns to the low level.

***RST** HIGH

Key Entry Gate Active Low High

Remarks To select GATE as the trigger type, refer to “:TRIGger:TYPE” on page 289.

:TRIGger:TYPE:SADVance[:TYPE]

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio :ARB :TRIGger :TYPE :SADVance [ :TYPE ] SINGLE | CONTinuous
[ :SOURce ] :RADio :ARB :TRIGger :TYPE :SADVance [ :TYPE ] ?
```

This command customizes the segment advance trigger type setting.

SINGLE This choice will play the next segment in the sequence only once.

CONTinuous This choice will instruct the sequencer to continually play the next segments in the waveform sequence in a continuous pattern.

*RST	CONT
Key Entry	Single Continuous
Remarks	This command is valid when SADVance has been selected as the trigger type. To select SADVance as the trigger type, refer to “:TRIGger:TYPE” on page 289.

:TRIGger[:SOURce]

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:ARB:TRIGger [ :SOURce ] KEY | EXT | BUS
[ :SOURce ] :RADio:ARB:TRIGger [ :SOURce ] ?
```

This command sets the trigger source.

KEY	This choice enables triggering by pressing the front panel Trigger hardkey.
EXT	This choice enables triggering using an externally applied signal at the PATT TRIG IN rear panel connector or the PATT TRIG IN 2 pin on the rear panel AUX I/O connector. To select the appropriate connector, refer to “:TRIGger[:SOURce]:EXTErnal[:SOURce]” on page 291.
BUS	This choice enables GPIB triggering using the *TRG or GET command or LAN and RS-232 triggering using the *TRG command.

*RST	EXT
Key Entry	Trigger Key Ext Bus
Remarks	N/A

:TRIGger[:SOURce]:EXTErnal[:SOURce]

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:ARB:TRIGger [ :SOURce ] :EXTErnal [ :SOURce ] EPT1 | EPT2 |
EPTRIGGER1 | EPTRIGGER2
[ :SOURce ] :RADio:ARB:TRIGger [ :SOURce ] :EXTErnal [ :SOURce ] ?
```

This command specifies which PATT TRIG IN connection, rear panel connector or AUX I/O connector, will be used to accept an externally applied trigger signal.

EPT1	This choice is synonymous with EPTRIGGER1 and selects the PATT TRIG IN rear panel connector for the external signal connection.
EPT2	This choice is synonymous with EPTRIGGER2 and selects the PATT TRIG IN 2 pin on the rear panel AUX I/O connector for the external signal connection.
EPTRIGGER1	This choice is synonymous with EPT1 and selects the PATT TRIG IN rear panel

connector for the external signal connection.

EPTRIGGER2 This choice is synonymous with EPT2 and selects the PATT TRIG IN 2 pin on the rear panel AUX I/O connector for the external signal connection.

***RST** EPT1

Key Entry Patt Trig In 1 Patt Trig In 2

Remarks This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURce]” on page 291.

For more information about the rear panel AUX I/O connector pin configuration, refer to the *User’s Guide*.

:TRIGger[:SOURce]:EXTErnal:DELay

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:ARB:TRIGger [ :SOURce ] :EXTErnal:DELay <val>
[ :SOURce ] :RADio:ARB:TRIGger [ :SOURce ] :EXTErnal:DELay?
```

This command specifies the value for the external trigger delay.

The variable <val> is expressed as seconds (μ sec–sec).

***RST** +1.00000000E–003

Range 1E–8 to 4E1

Key Entry Ext Delay Time

Remarks This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURce]” on page 291.

:TRIGger[:SOURce]:EXTErnal:DELay:STATe

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:ARB:TRIGger [ :SOURce ] :EXTErnal:DELay:STATe ON|OFF|1|0
[ :SOURce ] :RADio:ARB:TRIGger [ :SOURce ] :EXTErnal:DELay:STATe?
```

This command enables or disables the operating state of the external trigger delay function.

***RST** 0

Key Entry Ext Delay Off On

Remarks This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURce]” on page 291.

:TRIGger[:SOURce]:EXTErnal:SLOPe

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:ARB:TRIGger[ :SOURce]:EXTErnal:SLOPe POSitive|NEGative
[ :SOURce ]:RADio:ARB:TRIGger[ :SOURce]:EXTErnal:SLOPe?
```

This command sets the polarity of the external trigger.

***RST** NEG

Key Entry Ext Polarity Neg Pos

Remarks This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURce]” on page 291.

:WAVEform

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:ARB:WAVEform "WFM1|SEQ:<file_name>"
[ :SOURce ]:RADio:ARB:WAVEform?
```

This command selects the waveform type and file to be played by the dual arbitrary waveform generator.

WFM1 This choice selects a single waveform segment.

SEQ This choice selects a sequence of segments.
 The appropriate file name of the sequence replaces the <file name> variable.

***RST** N/A

Key Entry Select Waveform

Remarks N/A

[:STATe]

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:ARB[:STATe] ON|OFF|1|0
[ :SOURce ]:RADio:ARB[:STATe]?
```

This command enables or disables the arbitrary waveform generator function.

***RST** 0

Key Entry ARB Off On

Remarks N/A

Multitone Subsystem–Option 001/601 or 002/602 ([:SOURce]:RADio:MTONe:ARB)

Creating a Multitone Waveform

Use the following steps to create a multitone waveform:

1. Initialize the phase for the multitone waveform. Refer to “:SETup:TABLE:PHASe:INITialize” on page 304.
2. Assign the frequency spacing between the tones. Refer to “:SETup:TABLE:FSPacing” on page 303.
3. Define the number of tones within the waveform. Refer to “:SETup:TABLE:NTONes” on page 303.
4. Modify the power level, phase, and state of any individual tones. Refer to “:ROW” on page 300.

:HEADer:CLEAr

Supported All with Option 001/601 or 002/602

[:SOURce] :RADio :MTONe :ARB :HEADer :CLEAr

This command clears the header information from the header file used by this modulation format.

***RST** N/A

Key Entry Clear Header

Remarks The **Multitone Off On** softkey must be set to On for this command to function.

:HEADer:SAVE

Supported All with Option 001/601 or 002/602

[:SOURce] :RADio :MTONe :ARB :HEADer :SAVE

This command saves the header information to the header file used by this modulation format.

***RST** N/A

Key Entry Save Setup To Header

Remarks The **Multitone Off On** softkey must be set to On for this command to function.

:IQ:EXtErnal:FILTer**Supported** All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:MTONE:ARB:IQ:EXtErnal:FILTer 40e6 | THROugh
[ :SOURce ] :RADio:MTONE:ARB:IQ:EXtErnal:FILTer?
```

This command selects the filter or through path for I/Q signals routed to the rear panel I and Q outputs. Selecting a filter using this command will automatically set “:IQ:EXtErnal:FILTer:AUTO” on [page 295](#) to OFF(0) mode.

40e6 This choice applies a 40 MHz baseband filter.

THROugh This choice bypasses filtering.

***RST** THR

Key Entry 40.000 MHz Through

Remarks N/A

:IQ:EXtErnal:FILTer:AUTO**Supported** All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:MTONE:ARB:IQ:EXtErnal:FILTer:AUTO ON | OFF | 1 | 0
[ :SOURce ] :RADio:MTONE:ARB:IQ:EXtErnal:FILTer:AUTO?
```

This command enables or disables the automatic selection of the filters for I/Q signals routed to the rear panel I/Q outputs.

ON(1) This choice will automatically select a digital modulation filter optimized for the current signal generator settings.

OFF(0) This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “:IQ:EXtErnal:FILTer” on [page 295](#) for selecting a filter or through path.

***RST** 1

Key Entry I/Q Output Filter Manual Auto

Remarks N/A

:IQ:MODulation:ATTen**Supported** All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:MTONE:ARB:IQ:MODulation:ATTen <val>
[ :SOURce ] :RADio:MTONE:ARB:IQ:MODulation:ATTen?
```

This command attenuates the I/Q signals being modulated through the signal generator RF path.

The variable <val> is expressed in units of decibels (dB).

*RST	+2.00000000E+000
Range	0–40
Key Entry	Modulator Atten Manual Auto
Remarks	N/A

:IQ:MODulation:ATTen:AUTO

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:MTONE:ARB:IQ:MODulation:ATTen:AUTO ON|OFF|1|0
[ :SOURce ] :RADio:MTONE:ARB:IQ:MODulation:ATTen:AUTO?
```

This command enables or disables the I/Q attenuation auto mode.

- ON (1) This choice enables the attenuation auto mode which optimizes the modulator attenuation for the current conditions.
- OFF (0) This choice holds the attenuator at its current setting or at a selected value. Refer to “:IQ:MODulation:ATTen” on page 295 for setting the attenuation value.

*RST	1
Key Entry	Modulator Atten Manual Auto
Remarks	N/A

:IQ:MODulation:FILTer

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:MTONE:ARB:IQ:MODulation:FILTer 2.1e6|40e6|THROUGH
[ :SOURce ] :RADio:MTONE:ARB:IQ:MODulation:FILTer?
```

This command enables you to select a filter or through path for I/Q signals modulated onto the RF carrier. Selecting a filter using this command will automatically set “:IQ:MODulation:FILTer:AUTO” on page 297 to OFF(0) mode.

- 2.1E6 This choice applies a 2.1 MHz baseband filter to the I/Q signals.
- 40E6 This choice applies a 40 MHz baseband filter to the I/Q signals.
- THROUGH This choice bypasses filtering.

*RST	THR
Key Entry	2.100 MHz 40.000 MHz Through
Remarks	N/A

:IQ:MODulation:FILTer:AUTO

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio :MTONE :ARB :IQ :MODulation :FILTer :AUTO ON | OFF | 1 | 0
[ :SOURce ] :RADio :MTONE :ARB :IQ :MODulation :FILTer :AUTO ?
```

This command enables or disables the automatic selection of the filters for I/Q signals modulated onto the RF carrier.

ON(1) This choice will automatically select a digital modulation filter.

OFF(0) This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “[:IQ:MODulation:FILTer](#)” on page 281 for selecting a filter or through path.

*RST	1
Key Entry	I/Q Mod Filter Manual Auto
Remarks	N/A

:MDEStination:PULSe

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio :MTONE :ARB :MDEStination :PULSe NONE | M1 | M2 | M3 | M4
[ :SOURce ] :RADio :MTONE :ARB :MDEStination :PULSe ?
```

This command routes the selected marker to the Pulse/RF Blanking function. The NONE parameter clears the marker for the Pulse/RF Blanking function.

*RST	NONE
Key Entry	None Marker 1 Marker 2 Marker 3 Marker 4
Remarks	N/A

:MDEStination:AAMPlitude

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio :MTONE :ARB :MDEStination :AAMPlitude NONE | M1 | M2 | M3 | M4
[ :SOURce ] :RADio :MTONE :ARB :MDEStination :AAMPlitude ?
```

This command routes the selected marker to the Alternate Amplitude function. The NONE parameter clears the marker for the Alternate Amplitude function.

*RST	NONE				
Key Entry	None	Marker 1	Marker 2	Marker 3	Marker 4
Remarks	N/A				

:MDEStination:ALCHold

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] : RADio : MTONE : ARB : MDEStination : ALCHold NONE | M1 | M2 | M3 | M4
[ :SOURCE ] : RADio : MTONE : ARB : MDEStination : ALCHold?
```

This command routes the selected marker to the ALC Hold function. The NONE parameter clears the marker for the ALC Hold function.

*RST	NONE				
Key Entry	None	Marker 1	Marker 2	Marker 3	Marker 4
Remarks	N/A				

:MPOLarity:MARKer1

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] : RADio : MTONE : ARB : MPOLarity : MARKer1 NEGative | POSitive
[ :SOURCE ] : RADio : MTONE : ARB : MPOLarity : MARKer1?
```

This command sets the polarity for marker 1.

*RST	POS				
Key Entry	Marker 1 Polarity Neg Pos				
Remarks	N/A				

:MPOLarity:MARKer2

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ] : RADio : MTONE : ARB : MPOLarity : MARKer2 NEGative | POSitive
[ :SOURCE ] : RADio : MTONE : ARB : MPOLarity : MARKer2?
```

This command sets the polarity for marker 2.

*RST	POS				
Key Entry	Marker 2 Polarity Neg Pos				

Remarks N/A

:MPOLarity:MARKer3

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:MTONE:ARB:MPOLarity:MARKer3 NEGative | POSitive  
[ :SOURce ] :RADio:MTONE:ARB:MPOLarity:MARKer3?
```

This command sets the polarity for marker 3.

***RST** POS

Key Entry Marker 3 Polarity Neg Pos

Remarks N/A

:MPOLarity:MARKer4

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:MTONE:ARB:MPOLarity:MARKer4 NEGative | POSitive  
[ :SOURce ] :RADio:MTONE:ARB:MPOLarity:MARKer4?
```

This command sets the polarity for marker 4.

***RST** POS

Key Entry Marker 4 Polarity Neg Pos

Remarks N/A

:REFerence:EXTernal:FREQuency

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:MTONE:ARB:REFerence:EXTernal:FREQuency <val>  
[ :SOURce ] :RADio:MTONE:ARB:REFerence:EXTernal:FREQuency?
```

This command allows you to enter the frequency of the applied external reference.

The variable <val> is expressed in units of Hertz (Hz–MHz).

***RST** +1.00000000E+007

Range 2.5E5–1E8

Key Entry Reference Freq

Remarks The value specified by this command is effective only when you are using an external ARB reference applied to the BASEBAND GEN REF IN rear panel

connector.

To specify external as the ARB reference source type, refer to “:REFerence[:SOURce]” on page 300.

:REFerence[:SOURce]

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:MTONE:ARB:REFerence [ :SOURce ] INTernal | EXTernal
[ :SOURce ] :RADio:MTONE:ARB:REFerence [ :SOURce ] ?
```

This command selects either an internal or external reference for the waveform clock.

***RST** INT

Key Entry ARB Reference Ext Int

Remarks If the EXTernal choice is selected, the external frequency *value must* be entered and the signal must be applied to the BASEBAND GEN REF IN rear panel connector.

Refer to “:REFerence:EXTernal:FREQuency” on page 299 to enter the external reference frequency.

:ROW

Supported All with Option 001/601 or 002/602

```
[ :SOURce ] :RADio:MTONE:ARB:SETup:TABLE:ROW <row_number> , <power> ,
<phase> , <state>
[ :SOURce ] :RADio:MTONE:ARB:SETup:TABLE:ROW? <row_number>
```

This command modifies the indicated tone (row) of the multitone waveform.

<row_number> The number of rows for this variable are determined by the :SETup:TABLE command.

The variable <power> is expressed in units of decibels (dB).

The variable <phase> is expressed in units of degrees (deg).

Frequency offset, power, phase, and state value are returned when a query is initiated. The output format is as follows:

```
<frequency offset> , <power> , <phase> , <state>
```

***RST** *frequency offset*: -3.50000000E+004 <power>: +0.00000000E+000
 <phase>: +0.00000000E+000 <state>: 1

Range *frequency offset*: -4E7 to 4E7 <power>: -80 to 0 <phase>: 0-359

Multitone Subsystem—Option 001/601 or 002/602 ([:SOURce]:RADio:MTONE:ARB)

<state>: 1

Key Entry**Goto Row Toggle State****Remarks**

Refer to “[:SETup:TABLE]” on page 302 for information on how to change the number of rows.

This command is the final step in creating a multitone waveform. Refer to “Creating a Multitone Waveform” on page 294 for all four steps.

:SCLock:RATE**Supported**

All with Option 001/601 or 002/602

[:SOURce]:RADio:MTONE:ARB:SCLock:RATE <val>

[:SOURce]:RADio:MTONE:ARB:SCLock:RATE?

This command sets the sample clock rate for the Multitone modulation format.

The variable <val> is expressed in units of hertz.

***RST**

+1.00000000E+008

Range

1–1E8

Key Entry**ARB Sample Clock****Remarks**

The modulation format should be active before executing this command. If this command is executed before the modulation format is active, the entered value will be overridden by a calculated factory default value. Refer to “[:STATe]” on page 304 to activate the modulation format.

:SETup**Supported**

All with Option 001/601 or 002/602

[:SOURce]:RADio:MTONE:ARB:SETup "<file name>"

[:SOURce]:RADio:MTONE:ARB:SETup?

This command retrieves a multitone waveform file.

***RST**

N/A

Range

N/A

Key Entry**Load From Selected File****Remarks**

The name of a multitone waveform file is stored in the signal generator file system of MTONE files. This information is held in memory until you send the command that turns the waveform on.

Refer to “File Name Variables” on page 13 for information on the file name syntax.

:SETup:STORe

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:MTONE:ARB:SETup:STORe "<file name>"
```

This command stores the current multitone waveform setup in the signal generator file system of MTONE files.

***RST** N/A

Range N/A

Key Entry Store To File

Remarks N/A

:SETup:TABLE

Supported All with Option 001/601 or 002/602

```
[ :SOURce ]:RADio:MTONE:ARB:SETup:TABLE <freq_spacing> ,
<num_tones> , { <phase> , <state> }
[ :SOURce ]:RADio:MTONE:ARB:SETup:TABLE?
```

This command creates and configures a multitone waveform.

The frequency offset, power, phase, and state value are returned when a query is initiated. The output format is as follows:

```
<frequency offset> , <power> , <phase> , <state>
```

The variable <freq_spacing> is expressed in units of Hertz (Hz–MHz).

The variable <power> is expressed in units of decibels (dB).

*RST	Tone	<frequency offset>	<power>	<phase>	<state>
	Tone 1	-35000	+0.00000000E+000	+0	+1
	Tone 2	-25000	+0.00000000E+000	+0	+1
	Tone 3	-15000	+0.00000000E+000	+0	+1
	Tone 4	-5000	+0.00000000E+000	+0	+1
	Tone 5	+5000	+0.00000000E+000	+0	+1
	Tone 6	+15000	+0.00000000E+000	+0	+1
	Tone 7	+25000	+0.00000000E+000	+0	+1
	Tone 8	+35000	+0.00000000E+000	+0	+1

Range <freq_spacing> (2 tones): 1E4–8E7 <num_tones>: 2–64

Multitone Subsystem—Option 001/601 or 002/602 ([:SOURce]:RADio:MTONE:ARB)

<freq_spacing> (>2 tones): 1E4 to (80 MHz ÷ (num_tones – 1))

<phase>: 0–359

Key Entry **Freq Spacing** **Number Of Tones** **Toggle State**

Remarks To set the frequency spacing, refer to “:SETup:TABLE:FSPacing” on page 303.

:SETup:TABLE:FSPacing

Supported All with Option 001/601 or 002/602

[:SOURce] :RADio:MTONE:ARB:SETup:TABLE:FSPacing <freq_spacing>

[:SOURce] :RADio:MTONE:ARB:SETup:TABLE:FSPacing?

This command sets the frequency spacing between the tones.

The variable <freq_spacing> is expressed in units of Hertz (Hz–MHz).

***RST** +1.00000000E+004

Range <freq_spacing> (2 tones): 1E4–8E7

<freq_spacing> (>2 tones): 1E4 to (80 MHz ÷ (num_tones – 1))

Key Entry **Freq Spacing**

Remarks To set frequency spacing and additional parameters required to create or configure a multitone waveform, refer to “:SETup:TABLE” on page 302.

This command is the second step in creating a multitone waveform. Refer to “Creating a Multitone Waveform” on page 294 for all four steps.

:SETup:TABLE:NTONES

Supported All with Option 001/601 or 002/602

[:SOURce] :RADio:MTONE:ARB:SETup:TABLE:NTONES <num_tones>

[:SOURce] :RADio:MTONE:ARB:SETup:TABLE:NTONES?

This command defines the number of tones in the multitone waveform.

***RST** +8

Range 2–64

Key Entry **Number Of Tones**

Remarks To specify the number of tones and additional parameters required to create or configure a multitone waveform, refer to “:SETup:TABLE” on page 302.

This command is the third step in creating a multitone waveform. Refer to “Creating a Multitone Waveform” on page 294 for all four steps.

:SETup:TABLE:PHASe:INITialize

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ]:RADio:MTONE:ARB:SETup:TABLE:PHASe:INITialize FIXed|RANDom
[ :SOURCE ]:RADio:MTONE:ARB:SETup:TABLE:PHASe:INITialize?
```

This command initializes the phase in the multitone waveform table.

FIXed This choice sets the phase of all tones to the fixed value of 0 degrees.

RANDom This choice sets the phase of all tones to random values based on the setting on the random seed generator.

***RST** FIX

Key Entry Initialize Phase Fixed Random

Remarks To change the random number generator seed value, refer to
“:SETup:TABLE:PHASe:INITialize:SEED” on page 304.

This command is the first step in creating a multitone waveform. Refer to
“Creating a Multitone Waveform” on page 294 for all four steps.

:SETup:TABLE:PHASe:INITialize:SEED

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ]:RADio:MTONE:ARB:SETup:TABLE:PHASe:INITialize:SEED FIXed|RANDom
[ :SOURCE ]:RADio:MTONE:ARB:SETup:TABLE:PHASe:INITialize:SEED?
```

This command initializes the random number generator seed that is used to generate the random phase values for the multitone waveform.

FIXed This choice sets the random number generator seed to a fixed value.

RANDom This choice sets the random number generator seed to a random value. This changes the phase value after each initialization of the phase.

***RST** FIX

Key Entry Random Seed Fixed Random

Remarks N/A

[:STATe]

Supported All with Option 001/601 or 002/602

```
[ :SOURCE ]:RADio:MTONE:ARB[:STATe] ON|OFF|1|0
[ :SOURCE ]:RADio:MTONE:ARB[:STATe]?
```

Multitone Subsystem–Option 001/601 or 002/602 ([:SOURce]:RADio:MTONe:ARB)

This command enables or disables the multitone waveform generator function.

*RST	0
Key Entry	Multitone Off On
Remarks	N/A

Wideband CDMA ARB Subsystem–Option 400 ([:SOURce]:RADio:WCDMa:TGPP:ARB)

:CLIPping:I

Supported All with Option 400

```
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:CLIPping:I <val>
```

```
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:CLIPping:I?
```

This command limits the modulation level of the waveform's I component to a percentage of full scale.

The variable <val> is expressed in units of percent.

***RST** +1.00000000E+002

Range 10–100

Key Entry Clip III To

Remarks N/A

:CLIPping:POStion

Supported All with Option 400

```
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:CLIPping:POStion PRE|POST
```

```
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:CLIPping:POStion?
```

This command specifies whether a waveform is clipped before (PRE) or after (POST) FIR filtering.

***RST** PRE

Key Entry Clip At PRE POST FIR Filter

Remarks N/A

:CLIPping:Q

Supported All with Option 400

```
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:CLIPping:Q <val>
```

```
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:CLIPping:Q?
```

This command limits the modulation level of the waveform's Q component to a percentage of full

scale.

The variable <val> is expressed in units of percent.

*RST	+1.00000000E+002
Range	10–100
Key Entry	Clip Q To
Remarks	N/A

:CLIPping:TYPE

Supported All with Option 400

```
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:CLIPping:TYPE IJQ | IORQ
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:CLIPping:TYPE?
```

This command selects either IJQ or IORQ as the clipping type.

IJQ	The combined I and Q waveform will be clipped (<i>circular clipping</i>).
IORQ	The I and Q components of the waveform are clipped independently (<i>rectangular clipping</i>). I and Q can be clipped to different levels using this mode.
*RST	IJQ
Key Entry	Clipping Type I+jQ I , Q
Remarks	N/A

:CLIPping[:IJQ]

Supported All with Option 400

```
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:CLIPping[ :IJQ ] <val>
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:CLIPping[ :IJQ ]?
```

This command clips (limits) the modulation level of the combined I and Q waveform to a percentage of full scale.

The variable <val> is expressed in units of percent.

*RST	+1.00000000E+002
Range	10–100
Key Entry	Clip I+jQ To
Remarks	N/A

:CRATe**Supported** All with Option 400

[:SOURce]:RADio:WCDMa:TGPP:ARB:CRATe <val>

[:SOURce]:RADio:WCDMa:TGPP:ARB:CRATe?

This command sets the chip rate value.

RST** +3.84000000E+006**Range** 3456000–4224000**Key Entry** Chip Rate**Remarks** N/A**:FILTer*Supported** All with Option 400

[:SOURce]:RADio:WCDMa:TGPP:ARB:FILTer RNYQuist|NYQuist|GAUSSian|RECTangle|WCDMA|AC4Fm|IS2000SRDS|UGGaussian|"<User FIR>"

[:SOURce]:RADio:WCDMa:TGPP:ARB:FILTer?

This command selects the pre-modulation filter type.

WCDMA This choice selects a 0.22 Nyquist filter optimized for ACP.

AC4Fm This choice selects a predefined Association of Public Safety Communications Officials (APCO) specified compatible 4-level frequency modulation (C4FM) filter.

IS2000SR3DS This choice selects an IS-2000 standard, spread rate 3 direct spread filter.

UGGaussian This choice selects a backwards compatible GSM Gaussian filter (Gaussian filter with a fixed BbT value of 0.300) for the ESG E44xxB Option UN3 or UN4.

"<User FIR>" This variable is any filter file that you have stored into memory.

***RST** WCDMA

Key Entry	Root Nyquist	Nyquist	Gaussian	Rectangle	WCDMA
	APCO 25 C4FM	IS-95	UN3/4 GSM Gaussian	IS-2000 SR3 DS	
	User FIR				

Remarks Refer to [“File Name Variables” on page 13](#) for information on the file name syntax.

:FILTER:ALPHA

Supported All with Option 400

```
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:FILTER:ALPHA <val>
```

```
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:FILTER:ALPHA?
```

This command sets the alpha value for the Nyquist or root Nyquist filter.

The filter alpha value can be set to the minimum level (0), the maximum level (1), or in between by using fractional numeric values (0.001–0.999).

***RST** +2.20000000E–001

Range 0.000–1.000

Key Entry Filter Alpha

Remarks To change the current filter type, refer to “:FILTER” on page 308.

:FILTER:BBT

Supported All with Option 400

```
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:FILTER:BBT <val>
```

```
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:FILTER:BBT?
```

This command changes the bandwidth-multiplied-by-bit-time (BbT) filter parameter.

The filter BbT value can be set to the minimum level (0), the maximum level (1), or in between by using fractional numeric values (0.001–0.999).

***RST** +5.00000000E–001

Range 0.000–1.000

Key Entry Filter BbT

Remarks This command is effective only after choosing a Gaussian filter. It does not have an effect on other types of filters.

To change the current filter type, refer to “:FILTER” on page 308.

:FILTER:CHANnel

Supported All with Option 400

```
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:FILTER:CHANnel EVM|ACP
```

```
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:FILTER:CHANnel?
```

This command optimizes the Nyquist and root Nyquist filters to minimize error vector magnitude

(EVM) or to minimize adjacent channel power (ACP).

EVM This choice provides the most ideal passband.

ACP This choice improves stopband rejection.

***RST** ACP

Key Entry Optimize FIR For EVM ACP

Remarks To change the current filter type, refer to “:FILTer” on page 308.

:HEADer:CLEAr

Supported All with Option 400

[:SOURce] :RADio:WCDMa:TGPP:ARB:HEADer:CLEAr

This command clears the header information from the header file used by this modulation format.

***RST** N/A

Key Entry Clear Header

Remarks The **W-CDMA Off On** softkey must be set to On for this command to function.

:HEADer:SAVE

Supported All with Option 400

[:SOURce] :RADio:WCDMa:TGPP:ARB:HEADer:SAVE

This command saves the header information to the header file used by this modulation format.

***RST** N/A

Key Entry Save Setup To Header

Remarks The **W-CDMA Off On** softkey must be set to On for this command to function.

:IQ:EXTernal:FILTer

Supported All with Option 400

[:SOURce] :RADio:WCDMa:TGPP:ARB:IQ:EXTernal:FILTer 40e6 | THROUGH
[:SOURce] :RADio:WCDMa:TGPP:ARB:IQ:EXTernal:FILTer?

This command selects the filter or through path for I/Q signals routed to the rear panel I and Q outputs. Selecting a filter using this command will automatically set “:IQ:EXTernal:FILTer:AUTO” on page 311 to OFF(0) mode.

40e6 This choice applies a 40 MHz baseband filter.

THRough	This choice bypasses filtering.	
*RST	THR	
Key Entry	40.000 MHz	Through
Remarks	N/A	

:IQ:EXTERNAL:FILTER:AUTO

Supported All with Option 400

```
[ :SOURCE ] : RADIO : WCDMA : TGPP : ARB : IQ : EXTERNAL : FILTER : AUTO ON | OFF | 1 | 0
[ :SOURCE ] : RADIO : WCDMA : TGPP : ARB : IQ : EXTERNAL : FILTER : AUTO ?
```

This command enables or disables the automatic selection of the filters for I/Q signals routed to the rear panel I/Q outputs.

ON(1) This choice will automatically select a digital modulation filter optimized for the current signal generator settings.

OFF(0) This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “[:IQ:EXTERNAL:FILTER](#)” on page 310 for selecting a filter or through path.

***RST** 1

Key Entry I/Q Output Filter Manual Auto

Remarks N/A

:IQMap

Supported All with Option 400

```
[ :SOURCE ] : RADIO : WCDMA : TGPP : ARB : IQMap NORMAL | INVERT
[ :SOURCE ] : RADIO : WCDMA : TGPP : ARB : IQMap ?
```

This command selects whether or not the I/Q outputs will be inverted.

NORMAL This choice selects normal polarity.

INVERTED This choice inverts the internal Q signal.

***RST** NORM

Key Entry I/Q Mapping Normal Invert

Remarks N/A

:IQ:MODulation:ATTen**Supported** All with Option 400

[:SOURce]:RADio:WCDMa:TGPP:ARB:IQ:MODulation:ATTen <val>

[:SOURce]:RADio:WCDMa:TGPP:ARB:IQ:MODulation:ATTen?

This command attenuates the I/Q signals being modulated through the signal generator RF path.

The variable <val> is expressed in units of decibels (dB).

RST** +2.00000000E+00**Range** 0–40**Key Entry** Modulator Atten Manual Auto**Remarks** N/A**:IQ:MODulation:ATTen:AUTO*Supported** All with Option 400

[:SOURce]:RADio:WCDMa:TGPP:ARB:IQ:MODulation:ATTen:AUTO ON|OFF|1|0

[:SOURce]:RADio:WCDMa:TGPP:ARB:IQ:MODulation:ATTen:AUTO?

This command enables or disables the I/Q attenuation auto mode.

ON (1) This choice enables the attenuation auto mode which optimizes the modulator attenuation for the current conditions.

OFF (0) This choice holds the attenuator at its current setting or at a selected value. Refer to “:IQ:MODulation:ATTen” on page 312 for setting the attenuation value.

RST** 1**Key Entry** Modulator Atten Manual Auto**Remarks** N/A**:IQ:MODulation:FILTer*Supported** All with Option 400

[:SOURce]:RADio:WCDMa:TGPP:ARB:IQ:MODulation:FILTer 2.1e6|40e6|THROUGH

[:SOURce]:RADio:WCDMa:TGPP:ARB:IQ:MODulation:FILTer?

This command enables you to select a filter or through path for I/Q signals modulated onto the RF carrier. Selecting a filter using this command will automatically set “:IQ:MODulation:FILTer:AUTO” on page 313 to OFF(0) mode.

2.1E6	This choice applies a 2.1 MHz baseband filter to the I/Q signals.		
40E6	This choice applies a 40 MHz baseband filter to the I/Q signals.		
THRough	This choice bypasses filtering.		
*RST	THR		
Key Entry	2.100 MHz	40.000 MHz	Through
Remarks	N/A		

:IQ:MODulation:FILTer:AUTO

Supported All with Option 400

```
[ :SOURCE ] : RADIo : WCDMa : TGPP : ARB : IQ : MODulation : FILTer : AUTO ON | OFF | 1 | 0
[ :SOURCE ] : RADIo : WCDMa : TGPP : ARB : IQ : MODulation : FILTer : AUTO ?
```

This command enables or disables the automatic selection of the filters for I/Q signals modulated onto the RF carrier.

ON(1)	This choice will automatically select a digital modulation filter.		
OFF(0)	This choice disables the auto feature which lets you select a digital modulation filter or through path. Refer to “ :IQ:MODulation:FILTer ” on page 281 for selecting a filter or through path.		
*RST	1		
Key Entry	I/Q Mod Filter Manual Auto		
Remarks	N/A		

:LINK

Supported All with Option 400

```
[ :SOURCE ] : RADIo : WCDMa : TGPP : ARB : LINK DOWN | UP
[ :SOURCE ] : RADIo : WCDMa : TGPP : ARB : LINK ?
```

This command selects either a downlink or uplink channel configuration.

*RST	DOWN		
Key Entry	Link Down Up		
Remarks	N/A		

:LINK:DOWN:OACP

Supported All with Option 400

```
[ :SOURce ] :RADio :WCDMa :TGPP :ARB :LINK :DOWN :OACP ADJ | ALT
[ :SOURce ] :RADio :WCDMa :TGPP :ARB :LINK :DOWN :OACP ?
```

This command selects the channel power optimization type for any downlink channel W-CDMA setup.

ADJ This choice optimizes for adjacent channel power.

ALT This choice optimizes for alternate channel power.

*RST ADJ

Key Entry Optimize ACP ADJ ALT

Remarks This command is operational for any downlink channel W-CDMA setup.

To change the current W-CDMA setup information, refer to
[“:LINK:DOWN:SETup” on page 314.](#)

:LINK:DOWN:SETup

Supported All with Option 400

```
[ :SOURce ] :RADio :WCDMa :TGPP :ARB :LINK :DOWN :SETup DPCH1 | DPCH3 | PPSCH |
PPDPCH1 | PPDPCH3 | TM1D16 | TM1D32 | TM1D64 | TM2 | TM3D16 | TM3D32 | TM4 | TM5H2 | TM5H4 |
TM5H8 | MCArrier | "<file name>"
[ :SOURce ] :RADio :WCDMa :TGPP :ARB :LINK :DOWN :SETup ?
```

This command defines the multicarrier waveform.

DPCH1 This choice selects 1 dedicated physical channel.

DPCH3 This choice selects 3 dedicated physical channels.

PPSCH This choice selects a primary command control physical channel (PCCPCH) with a synchronization channel (SCH).

PPDPCH1 This choice selects a primary command control physical channel (PCCPCH) with a dedicated physical channel (DPCH).

PPDPCH3 This choice selects a primary command control physical channel (PCCPCH) with 3 dedicated physical channels.

TM1D16 This choice selects a Test Model 1 with 16 dedicated physical channels.

TM1D32 This choice selects a Test Model 1 with 32 dedicated physical channels.

TM1D64	This choice selects a Test Model 1 with 64 dedicated physical channels.																								
TM2	This choice selects a Test Model 2 downlink W-CDMA setup.																								
TM3D16	This choice selects a Test Model 3 with 16 dedicated physical channels.																								
TM3D32	This choice selects a Test Model 3 with 32 dedicated physical channels.																								
TM4	This choice selects a Test Model 4 downlink W-CDMA setup.																								
TM5H2	This choice selects a Test Model 5 with 6 DPCH and 2 HS-PDSCH (high speed physical shared channel) channels downlink W-CDMA setup.																								
TM5H4	This choice selects a Test Model 5 with 14 DPCH and 4 HS-PDSCH (high speed-physical downlink shared channel) channels downlink W-CDMA setup.																								
TM5H8	This choice selects a Test Model 5 with 30 DPCH and 8 HS-PDSCH (high speed physical shared channel) channels downlink WCDMA setup.																								
*RST	DPCH1																								
Key Entry	<table border="0"> <tr> <td>1 DPCH</td> <td>3 DPCH</td> <td>PCCPCH + SCH</td> <td>PCCPCH + SCH + 1 DPCH</td> </tr> <tr> <td>PCCPCH + SCH + 3 DPCH</td> <td colspan="3">Test Model 1 w/ 16 DPCH</td> </tr> <tr> <td>Test Model 1 w/ 32 DPCH</td> <td>Test Model 1 w/ 64 DPCH</td> <td colspan="2">Test Model 2</td> </tr> <tr> <td>Test Model 3 w/ 16 DPCH</td> <td>Test Model 3 w/ 32 DPCH</td> <td colspan="2">Test Model 4</td> </tr> <tr> <td>Test Model 5 w/2HSPDSCH</td> <td colspan="3">Test Model 5 w/4HSPDSCH</td> </tr> <tr> <td>Test Model 5 w/8HSPDSCH</td> <td colspan="3"></td> </tr> </table>	1 DPCH	3 DPCH	PCCPCH + SCH	PCCPCH + SCH + 1 DPCH	PCCPCH + SCH + 3 DPCH	Test Model 1 w/ 16 DPCH			Test Model 1 w/ 32 DPCH	Test Model 1 w/ 64 DPCH	Test Model 2		Test Model 3 w/ 16 DPCH	Test Model 3 w/ 32 DPCH	Test Model 4		Test Model 5 w/2HSPDSCH	Test Model 5 w/4HSPDSCH			Test Model 5 w/8HSPDSCH			
1 DPCH	3 DPCH	PCCPCH + SCH	PCCPCH + SCH + 1 DPCH																						
PCCPCH + SCH + 3 DPCH	Test Model 1 w/ 16 DPCH																								
Test Model 1 w/ 32 DPCH	Test Model 1 w/ 64 DPCH	Test Model 2																							
Test Model 3 w/ 16 DPCH	Test Model 3 w/ 32 DPCH	Test Model 4																							
Test Model 5 w/2HSPDSCH	Test Model 5 w/4HSPDSCH																								
Test Model 5 w/8HSPDSCH																									
Remarks	Refer to “File Name Variables” on page 13 for information on the file name syntax.																								

:LINK:DOWN:SETup:MCARrier

Supported All with Option 400

```
[ :SOURCE ]:RADIO:WCDMA:TGPP:ARB:LINK:DOWN:SETup:MCARrier CAR2|CAR3|CAR4|
CAR4TM1D64| "<file name>"
[:SOURCE]:RADIO:WCDMA:TGPP:ARB:LINK:DOWN:SETup:MCARrier?
```

This command defines the type of multicarrier W-CDMA setup.

CAR2 a standard 2-carrier setup with the following settings:

Carrier 1: PCCPCH + SCH, -7.5 MHz frequency offset, 0 dB power

Carrier 2: PCCPCH + SCH, 7.5 MHz frequency offset, 0 dB power

CAR3 a standard 3-carrier setup with the following settings:

	Carrier 1: PCCPCH + SCH, –5 MHz frequency offset, 0 dB power
	Carrier 2: PCCPCH + SCH, 0 kHz frequency offset, 0 dB power
	Carrier 3: PCCPCH + SCH, 5 MHz frequency offset, 0 dB power
CAR4	a standard 4-carrier setup with the following settings: Carrier 1: PCCPCH + SCH, –7.5 MHz frequency offset, 0 dB power Carrier 2: PCCPCH + SCH, –2.5 MHz frequency offset, 0 dB power Carrier 3: PCCPCH + SCH, 2.5 MHz frequency offset, 0 dB power Carrier 4: PCCPCH + SCH, 7.5 MHz frequency offset, 0 dB power
CAR4TM1D64	a standard 4-carrier test model 1 with 64 dedicated physical channels setup with the following settings: Carrier 1: Test Model 1 w/64 DPCH, –7.5 MHz frequency offset, 0 dB power Carrier 2: Test Model 1 w/64 DPCH, –2.5 MHz frequency offset, 0 dB power Carrier 3: Test Model 1 w/64 DPCH, 2.5 MHz frequency offset, 0 dB power Carrier 4: Test Model 1 w/64 DPCH, 7.5 MHz frequency offset, 0 dB power
*RST	CAR2
Key Entry	2 Carriers 3 Carriers 4 Carriers
Remarks	Refer to “File Name Variables” on page 13 for information on the file name syntax.

:LINK:DOWN:SETup:MCARrier:CLIPping:I

Supported All with Option 400

[:SOURce] :RADio:WCDMa:TGPP:ARB:LINK:DOWN:SETup:MCARrier:CLIPping:I <val>
[:SOURce] :RADio:WCDMa:TGPP:ARB:LINK:DOWN:SETup:MCARrier:CLIPping:I?

This command limits the modulation level of the waveform’s I component to a percentage of full scale.

The variable <val> is expressed in units of percent.

***RST** +1.00000000E+002

Range	10–100
Key Entry	Clip III To
Remarks	N/A

:LINK:DOWN:SETup:MCARrier:CLIPping:Q

Supported All with Option 400

```
[ :SOURCE ] :RADio:WCDMa:TGPP:ARB:LINK:DOWN:SETup:MCARrier:CLIPping:Q <val>
[ :SOURCE ] :RADio:WCDMa:TGPP:ARB:LINK:DOWN:SETup:MCARrier:CLIPping:Q?
```

This command limits the modulation level of the waveform's Q component to a percentage of full scale.

The variable <val> is expressed in units of percent.

***RST** +1.00000000E+002

Range 10–100

Key Entry Clip |Q| To

Remarks N/A

:LINK:DOWN:SETup:MCARrier:CLIPping:TYPE

Supported All with Option 400

```
[ :SOURCE ] :RADio:WCDMa:TGPP:ARB:LINK:DOWN:SETup:MCARrier:CLIPping:
TYPE IJQ | IORQ
[ :SOURCE ] :RADio:WCDMa:TGPP:ARB:LINK:DOWN:SETup:MCARrier:CLIPping:TYPE?
```

This command selects either IJQ or IORQ as the clipping type.

IJQ The combined I and Q waveform will be clipped (*circular clipping*).

IORQ The I and Q components of the waveform are clipped independently (*rectangular clipping*). I and Q can be clipped to different levels using this mode.

***RST** IJQ

Key Entry Clipping Type |I+jQ| |I|,|Q|

Remarks N/A

:LINK:DOWN:SETup:MCARrier:CLIPping[:IJQ]

Supported All with Option 400

```
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:LINK:DOWN:SETup:MCARrier:
CLIPping[ :IJQ] <val>
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:LINK:DOWN:SETup:MCARrier:CLIPping[ :IJQ]?
```

This command clips (limits) the modulation level of the combined I and Q waveform to a percentage of full scale.

The variable <val> is expressed in units of percent.

***RST** +1.00000000E+002

Range 10–100

Key Entry Clip |I+jQ| To

Remarks N/A

:LINK:DOWN:SETup:MCARrier:SCODE:AINCrement

Supported All with Option 400

```
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:LINK:DOWN:SETup:MCARrier:SCODE:AINCrement
```

This command will sort carriers by frequency offset and auto-increment scramble codes starting from the current scramble code value for the lowest frequency carrier.

***RST** N/A

Range N/A

Key Entry Increment Scramble Code

Remarks If the lowest frequency carrier has a scramble code value of N/A, the auto-increment value will start at 0.

:LINK:DOWN:SETup:MCARrier:STORE

Supported All with Option 400

```
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:LINK:DOWN:SETup:MCARrier:STORE "<file name>"
```

This command stores the current multicarrier setup information.

The stored file contains information including the digital modulation format, number of carriers, frequency spacing, and power settings for the multicarrier setup.

***RST** N/A

Key Entry Store Custom Multicarrier

Remarks User defined files created using firmware prior to C.02.40 did not save the setting

for Increment Scramble Code, Increment Timing Offset, and Clipping Type settings. When loading user defined files created with firmware prior to C.02.40, Increment Scramble Code and Increment Timing Offset will default to Off and the Clipping Type settings will default to 100%. Firmware C.02.40 will save the Increment Scramble Code, Increment Timing Offset and Clipping Type settings.

Refer to “File Name Variables” on page 13 for information on the file name syntax.

:LINK:DOWN:SETup:MCARrier:TABLE

Supported All with Option 400

```
[ :SOURCE ] :RADIo:WCDMA:TGPP:ARB:LINK:DOWN:SETup:MCARrier:TABLE INIT |
APPend | <carrier_num> , DPCH1 | DPCH3 | PPSCH | PPDPCH1 | PPDPCH3 | TM1D16 | TM1D32 |
TM1D64 | TM2 | TM3D16 | TM3D32 | TM4 | TM5H2 | TM5H4 | TM5H8 | "<filename>" , <freq_offset
> , <power> [ , <scramble code> , <timing offset> , <initial phase> ,
<pre-FIR circular clipping> [ <clipping units {pct} | dB ] ,
<post-FIR circularclipping> [ <clipping units {pct} | dB ] ]
[ :SOURCE ] :RADIo:WCDMA:TGPP:ARB:LINK:DOWN:SETup:MCARrier:
TABLE? <carrier_num>
```

This command defines the multicarrier format and waveform.

Use INIT to clear the table and define the parameters for the first carrier; use APPend to add new channels. To edit an existing carrier, use its carrier number (<carrier_num>).

The variable <freq_offset> is expressed in units of Hertz (kHz–MHz).

The variable <power> is expressed in units of decibels (dB).

The carrier type, frequency offset, and power level are returned when a query is initiated. The output format is as follows:

```
<carrier type> , <freq_offset> , <power>
```

INIT	This choice clears the current information and creates a new one-row table, allowing for further definition using additional parameters.
APPend	This choice adds rows to an existing table. The maximum number of rows for one table is 16.
DPCH1	This choice selects 1 dedicated physical channel.
DPCH3	This choice selects 3 dedicated physical channels.
PPSCH	This choice selects a primary command control physical channel (PCCPCH) with a synchronization channel (SCH).

PPDPCH1	This choice selects a primary command control physical channel (PCCPCH) with a dedicated physical channel (DPCH).
PPDPCH3	This choice selects a primary command control physical channel (PCCPCH) with 3 dedicated physical channels.
TM1D16	This choice selects a test model 1 with 16 dedicated physical channels.
TM1D32	This choice selects a test model 1 with 32 dedicated physical channels.
TM1D64	This choice selects a test model 1 with 64 dedicated physical channels.
TM2	This choice selects a test model 2.
TM3D16	This choice selects a test model 3 with 16 dedicated physical channels.
TM3D32	This choice selects a test model 3 with 32 dedicated physical channels.
TM4	This choice selects a test model 4.
TM5H2	This choice selects a Test Model 5 with 6 DPCH and 2 HS-PDSCH (high speed physical shared channel) channels downlink W-CDMA setup.
TM5H4	This choice selects a Test Model 5 with 14 DPCH and 4 HS-PDSCH (high speed-physical downlink shared channel) channels downlink W-CDMA setup.
TM5H8	This choice selects a Test Model 5 with 30 DPCH and 8 HS-PDSCH (high speed physical shared channel) channels downlink W-CDMA setup.
<scramble code>	This variable sets the scramble code value.
<timing offset>	This variable sets the timing offset value.
<initial phase>	This variable sets the initial phase value. The units are not specified but the value represents degrees.
<clipping>	This variable sets the clipping value. If the units are not specified, the value will default to percent.
<carrier_num>	This variable specifies the number of multicarriers.
*RST	<i>carrier type</i> : PPSCH <i><freq_offset></i> : +7.50000000E+006 <i><power></i> : +0.00000000E+000
Range	<i><freq_offset></i> : -37.5E6 to 37.5E6 <i><power></i> : -40 to 0 <i>scramble code</i> : 0–511 <i>timing offset</i> : 0–149 <i>initial phase</i> : 0–359 <i>clipping(in units of percent)</i> : 0.0–100.0 or 0.0 to -20.0 (if units are dB)
Key Entry	1 DPCH 3 DPCH PCCPCH + SCH PCCPCH + SCH + 1 DPCH PCCPCH + SCH + 3 DPCH Test Model 1 w/ 16 DPCH Test Model 1 w/ 32 DPCH Test Model 1 w/ 64 DPCH Test Model 2

	Test Model 3 w/ 16 DPCH	Test Model 3 w/ 32 DPCH	Test Model 4
	Test Model 5 w/2HSPDSCH	Test Model 5 w/4HSPDSCH	
	Test Model 5 w/8HSPDSCH		
Remarks	Refer to “File Name Variables” on page 13 for information on the file name syntax.		
	If the parameter set by this command is changed while the signal is active, the apply command must be executed for the change to occur. Refer to “:LINK:DOWN:SETup:TABLE:APPLY” on page 322.		

:LINK:DOWN:SETup:MCARrier:TABLE:NCARriers

Supported	All with Option 400
	[:SOURCE] :RADIO:WCDMA:TGPP:ARB:LINK:DOWN:SETup:MCARrier:TABLE:NCARriers?
	This command queries the number of carriers specified for the W-CDMA multicarrier waveform.
*RST	+2
Choices	N/A
Key Entry	N/A
Remarks	N/A

:LINK:DOWN:SETup:MCARrier:TOFFset:AInCrement

Supported	All with Option 400
	[:SOURCE] :RADIO:WCDMA:TGPP:ARB:LINK:DOWN:SETup:MCARrier:TOFFset:AInCrement
	This command will sort carriers by frequency offset and auto-increment timing offsets. The new values will start with the current timing offset for the lowest frequency carrier and increment by one for each subsequent carrier.
*RST	N/A
Range	N/A
Key Entry	Increment Timing Offset
Remarks	N/A

:LINK:DOWN:SETup:STORe

Supported	All with Option 400
------------------	---------------------

```
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:LINK:DOWN:SETup:STORE "<file name>"
```

This command stores the current downlink setup information into the memory catalog with the entered file name.

Along with the contents of the W-CDMA channel table editor (channel types, Walsh code, power levels, PN offset, and data), this command stores the following information to the signal generator memory:

- FIR filter
- FIR filter file name
- FIR filter alpha
- FIR filter BbT
- FIR filter channel (EVM or ACP)
- I/Q mapping
- increment scramble code
- increment timing offset
- link
- spread type
- spread rate
- ARB reference clock source (internal or external)
- ARB reference clock frequency
- clipping
- multicarrier spacing
- radio configuration

***RST** N/A

Range N/A

Key Entry **Store Custom W-CDMA State**

Remarks Refer to “[File Name Variables](#)” on page 13 for information on the file name syntax.

:LINK:DOWN:SETup:TABLE:APPLY

Supported All with Option 400

```
[ :SOURce ] :RADio:WCDMa:TGPP:ARB:LINK:DOWN:SETup:TABLE:APPLY
```

This command generates a W-CDMA signal based on the current values in the W-CDMA channel setup table editor.

***RST** N/A

Choices N/A

Key Entry **Apply Channel Setup**

Remarks N/A

:LINK:DOWN:SETup:TABLE:CHANnel

Supported All with Option 400

```
[ :SOURCE ] :RADIO :WCDMA :TGPP :ARB :LINK :DOWN :SETup :TABLE :CHANnel INIT |
APPend | <chan_num> , <chan_type> , <symbol_rate> , <spread_code> , <power> ,
<timing_offset> , <TFCI> , <TPC> , <scramble_code> , STANdard | RALternate |
LALternate , <scramble_offset> , RANDom | PN9 | PINDicator |
<data_val> , <TFCI_power> , <TPC_power> , <pilot_power> , <pilot_bits>
[ :SOURCE ] :RADIO :WCDMA :TGPP :ARB :LINK :DOWN :SETup :TABLE :CHANnel? <chan_num>
```

This command sets up the W-CDMA downlink channel type parameters.

Use INIT to clear the table editor and define the parameters for the first channel; use APPend to add new channels. To edit an existing channel, use its channel number <chan_num>.

The <power>, <TFCI_power>, <TPC_power>, and <pilot_power> variables are expressed in units of decibels (dB).

The channel type, symbol rate, spread code, power, timing offset, TFCI value, TPC value, scramble code, scramble type, scramble offset, data type, TFCI power, TPC power, pilot power, and the number of pilot bits are returned when a query is initiated. The output format is as follows:

```
<chan_type> , <symbol_rate> , <spread_code> , <power> , <tDPCH_offset> , <TFCI> ,
<TPC> , <scramble_code> , <scramble_type> , <scramble_code> , <scramble_offset> ,
<data_type> , <TFCI_power> , <TPC_power> , <pilot_power> , <pilot_bits>
```

INIT This choice clears the current information and creates a new one-row table, allowing for further definition using additional parameters.

APPend This choice adds a row to an existing table.

<chan_num> This variable sets the physical channel number.

<chan_type> This variable sets the channel type.

<timing_offset> This variable sets the symbol offset.

<TFCI> This variable sets the transport format combination indicator.

<TPC> This variable sets the transmit power control.

STANdard This choice sets the scramble type to standard.

RALternate This choice sets the scramble type to right alternate.

LALternate This choice sets the scramble type to left alternate.

- RANdOm This choice sets a randomly generated pseudo-random sequence pattern as output data.
- PN9 This choice sets an internally generated 9-bit pseudo-random sequence pattern as output data.
- PINdicator This choice sets the paging indicator channel (PICH).
- <data_val> This variable sets the data value.
- <TFCI_power> This variable sets the transport format combination indicator power offset.
- <TPC_power> This variable sets the transport power control power offset.
- <pilot_power> This variable sets the pilot power offset.
- <pilot_bits> This variable sets the number of pilot bits that will be in the dedicated physical channel (DPCH).

Table 5-1 Variables and Channel Types

	SSCH	CPICH	PCCPCH	SCCPCH	PICH	DPCH	OCNS	PSCH
Channel number	X	X	X	X	X	X	X	X
Symbol rate	N/A	N/A	N/A	X	N/A	X	X	N/A
Spread code	N/A	X	X	X	X	X	X	N/A
Power	X	X	X	X	X	X	X	X
Symbol offset	N/A	N/A	N/A	N/A	X	X	N/A	N/A
TFCI	N/A	N/A	N/A	X	N/A	X	N/A	N/A
TPC	N/A	N/A	N/A	N/A	N/A	X	N/A	N/A
Scramble code	X	X	X	X	X	X	X	N/A
Standard	X	X	X	N/A	X	X	X	N/A
Right alternate	X	X	X	N/A	X	X	X	N/A
Left alternate	X	X	X	N/A	X	X	X	N/A
Scramble offset	X	X	X	X	X	X	X	N/A
Random	N/A	N/A	X	X	X	X	X	N/A
PN9	N/A	N/A	X	X	X	X	X	N/A

Table 5-1 **Variables and Channel Types**

	SSCH	CPICH	PCCPCH	SCCPCH	PICH	DPCH	OCNS	PSCH
Paging Indicator	N/A	N/A	N/A	N/A	X	N/A	N/A	N/A
Data value	N/A	N/A	X	N/A	X	X	X	N/A
TFCI power	N/A	N/A	N/A	N/A	X	N/A	N/A	N/A
Pilot power offset	N/A	N/A	N/A	N/A	X	N/A	N/A	N/A
Pilot bits	N/A	N/A	N/A	X	X	N/A	N/A	N/A

Table 5-2 **Variables and Channel Types**

	HSPDSCH	HSSCCH
Channel number	X	X
Symbol rate	N/A (fixed to 30ksps)	N/A (fixed to 240ksps)
Spread code	X	X
Power	X	X
Symbol offset	X	X
TFCI	N/A	N/A
TPC	N/A	N/A
Scramble code	X	X
Standard	X	X
Right alternate	X	X
Left alternate	X	X
Scramble offset	X	X
Random	X	X
PN9	X	X

Table 5-2 Variables and Channel Types

	HSPDSCH	HSSCCH
Paging Indicator	N/A	N/A
Data value	X	X
TFCI power	N/A	N/A
Pilot power offset	N/A	N/A
Pilot bits	N/A	N/A

***RST** <chan_type>: DPCH <symbol_rate>: +3.00000000E+004
 <spread_code>: +8 <scramble_offset>: +0.00000000E+000
 power: +0.00000000E+000 <tDPCH_offset>: +0 <TFCI>: +0
 <TPC>: #H5555 <scramble_code>: +0 scramble type: STAN
 <TFCI_power>: +0.00000000E+000
 <TPC_power>: +0.00000000E+000 <pilot_power>: +0.00000000E+000
 <pilot_bits>: +4

Range <chan_type>: PSCH SSCH CPICH PCCPch SCCPch
 DPCH PICH OCNS HSSCch HSPDsch
 <power>: -40 to 0 <tDPCH_offset>: 0-149 <TFCI>: 0-1023
 <TPC>: 0000-7FFF <scramble_code>: 0-511
 <scramble_offset>: 0-15 <data_val>: 00000000-11111111
 <TFCI_power>: -20 to 20 <TPC_power>: -20 to 20
 <pilot_power>: 0000-7FFF <pilot_bits>: 0-511

SCCPCH Channel

<symbol_rate>	<spread_code>	*<pilot_bits>
15 ksps	0-256	0,8
30 ksps	0-128	0,8
60 ksps	0-64	0,8
120 ksps	0-32	0,8
240 ksps	0-16	0,16
480 ksps	0-8	0,16
960 ksps	0-4	0,16

All Other Channels

<symbol_rate>	<spread_code>	<pilot_bits>
7.5 ksps	0–511	4
15 ksps	0–255	2,4,8
30 ksps	0–127	4,8
60 ksps	0–63	8
120 ksps	0–31	8
240 ksps	0–15	16
480 ksps	0–7	16
960 ksps	0–3	16

Key Entry	Channel	Type	Symbol Rate	First Spread Code	Power			
	Spread Code	TFCI Field	Off On	Scramble Code	Scramble Offset			
	Random	PN9	Standard	Left Alternate	Right Alternate			
	PCCPCH	SCCPCH	PSCH	SSCH	CPICH	DPCH	PICH	OCNS
	HSPDSCH	HSSCCH						
Field Entry	Spread Code	Power	Timing	TFCI	Scramble Code			
			Offset					
	TFCI	TPC	Pilot Power	Pilot Bits	Data			
	Power	Power						
	Scramble	Scramble						
	Type	Offset						

Remarks For additional information, refer to the 3GPP TS 25.211 (V 3.7) standard.

If the parameter set by this command is changed while the signal is active, the apply command must be executed for the change to occur. Refer to “:LINK:DOWN:SETup:TABLE:APPLY” on page 322.

:LINK:DOWN:SETup:TABLE:NChannels?

Supported All with Option 400

[:SOURCE] :RADIO:WCDMA:TGPP:ARB:LINK:DOWN:SETup:TABLE:NChannel?

This command queries the number of channels being used for the carrier.

***RST** 1

Key Entry N/A

Remarks N/A

:LINK:DOWN:SETup:TABLE:PADJust**Supported** All with Option 400

[:SOURce]:RADio:WCDMa:TGPP:ARB:LINK:DOWN:SETup:TABLE:PADJust EQUal|SCALE

This command sets the code domain power.

EQUal This choice will adjust all channel powers to have equal energy per symbol, referenced to 7.5 ksp/s and increasing by 3 dB for each doubling of the symbol rate.

SCALE This choice will scale the channel power levels so that the sum of the powers are equal to 0 dB.

RST** N/A**Key Entry** Equal Energy per Symbol Scale To 0dB**Remarks** This command is available in downlink only.**:LINK:DOWN:TFCI*Supported** All with Option 400

[:SOURce]:RADio:WCDMa:TGPP:ARB:LINK:DOWN:TFCI ON|OFF|1|0

[:SOURce]:RADio:WCDMa:TGPP:ARB:LINK:DOWN:TFCI?

This command enables or disables the transport format combination indicator (TFCI) field for all channels.

RST** 1**Key Entry** TCFI Field Off On**Remarks** N/A**:LINK:UP:OACP*Supported** All with Option 400

[:SOURce]:RADio:WCDMa:TGPP:ARB:LINK:UP:OACP ADJ|ALT

[:SOURce]:RADio:WCDMa:TGPP:ARB:LINK:UP:OACP?

This command selects the channel power optimization type for any uplink channel W-CDMA setup.

ADJ This choice optimizes for adjacent channel power.

ALT This choice optimizes for alternate channel power.

***RST** ADJ

Key Entry **Optimize ACP ADJ ALT**

Remarks This command is only operational for any uplink channel W-CDMA setup.

To change the current W-CDMA setup information, refer to “:LINK:UP:SETup” on page 329.

:LINK:UP:SCRAMBLE

Supported All with Option 400

```
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:LINK:UP:SCRAMBLE <val>
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:LINK:UP:SCRAMBLE?
```

This command sets the scramble code for the uplink.

***RST** #H000000

Range #H0–FFFFFFF

Key Entry **Scramble Code**

Remarks N/A

:LINK:UP:SDPDch

Supported All with Option 400

```
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:LINK:UP:SDPDch I | Q
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:LINK:UP:SDPDch?
```

This command selects whether the second dedicated physical data channel (SDPDCH) will be put onto I or Q.

***RST** Q

Key Entry **Second DPDCH I Q**

Remarks N/A

:LINK:UP:SETup

Supported All with Option 400

```
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:LINK:UP:SETup DPCCH|DDPDCH1|DDPDCH2|
DDPDCH3|DDPDCH4|DDPDCH5|"<file name>"
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:LINK:UP:SETup?
```

This command selects a dedicated physical control channel (DPCCH) for uplink with the option to add one or more dedicated physical data channel (DPDCH) or a previously stored setup.

DPCCH	This choice selects 1 dedicated physical control channel.			
DDPDCH1	This choice selects 1 dedicated physical control channel and 1 dedicated physical data channel.			
DDPDCH2	This choice selects 1 dedicated physical control channel and 2 dedicated physical data channel.			
DDPDCH3	This choice selects 1 dedicated physical control channel and 3 dedicated physical data channel.			
DDPDCH4	This choice selects 1 dedicated physical control channel and 4 dedicated physical data channel.			
DDPDCH5	This choice selects 1 dedicated physical control channel and 5 dedicated physical data channel.			
*RST	DPCCH			
Key Entry	DPCCH	DPCCH + 1 DPDCH	DPCCH + 2 DPDCH	DPCCH + 3 DPDCH
	DPCCH + 4 DPDCH	DPCCH + 5 DPDCH	Custom WCDMA State	
Remarks	Refer to “ File Name Variables ” on page 13 for information on the file name syntax.			
	If the parameter set by this command is changed while the signal is active, the apply command must be executed for the change to occur. Refer to “ :LINK:UP:SETup:TABLE:APPLY ” on page 331.			

:LINK:UP:SETup:STORE

Supported All with Option 400

[:SOURce] :RADio:WCDMa:TGPP:ARB:LINK:UP:SETup:STORE "<file name>"

This command stores the current state into a designated file name.

***RST** N/A

Range N/A

Key Entry Store To File

Remarks You can recall a saved state from signal generator memory (non-volatile) by executing the following commands (using a designated file name):

For downlink, refer to “[:LINK:DOWN:SETup](#)” on page 314.

For uplink, refer to “[:LINK:UP:SETup](#)” on page 329.

Refer to “[File Name Variables](#)” on page 13 for information on the file name

syntax.

:LINK:UP:SETup:TABLE:APPLy

Supported All with Option 400

```
[ :SOURCE ] :RADio:WCDMa:TGPP:ARB:LINK:UP:SETup:TABLE:APPLy
```

This command applies the signal based on the current values in the W-CDMA channel setup table editor.

***RST** N/A

Range N/A

Key Entry Apply Channel Setup

Remarks Refer to “File Name Variables” on page 13 for information on the file name syntax.

:LINK:UP:SETup:TABLE:CHANnel

Supported All with Option 400

```
[ :SOURCE ] :RADio:WCDMa:TGPP:ARB:LINK:UP:SETup:TABLE:CHANnel
INIT|APPend <chan_num> , <chan_type> , <symbol_rate> , <spread_code> ,
<power> , <TFCI> , <TCP> , RANDom| <data_val> , <fbi_bits_count> , <fbi_bits_value>
[ :SOURCE ] :RADio:WCDMa:TGPP:ARB:LINK:UP:SETup:TABLE:CHANnel? <chan_num>
```

This command defines the channel parameters of the signal.

Use INIT to clear the table editor and define the parameters for the first channel; use APPend to add new channels. To edit an existing channel, use its channel number <chan_num>.

The variable <power> is expressed in units of decibels (dB).

The channel type, symbol rate, spread code, power, TFCI value, TPC value, data value, FBI bit count, and FBI bit value are returned when a query is initiated. The output format is as follows:

```
<chan_type> , <symbol_rate> , <spread_code> , <power> , <TFCI> , <TCP> , <data_val> ,
<fbi_bits_count> , <fbi_bits_value>
```

INIT This choice clears the current information and creates a new one-row table, allowing for further definition using additional parameters.

APPend This choice adds a row to an existing table.

RANDom This choice selects random data format for the digital modulation signal.

<fbi_bits_count> This variable sets the number of feedback information (FBI) bits.

<fbi_bits_value> This variable sets the value of the FBI bits.
***RST** <chan_type>: DPCH <symbol_rate>: +1.50000000E+
 <spread_code>: +0 <power>: +0.00000000E+000 <TFCI>: +0
 <TPC>: #H5555 <data_val>: RAND <FBI Bits Count: +0
 <FBI Bit Count: +0

Range <power>: -40 to 0 <data_val>: 00000000-11111111
 <fbi_bits_count>: 0-2 <fbi_bits_value>: 0-3

<symbol_rate>	<spread_rate>
7.5 ksps	0-511
15 ksps	0-255
30 ksps	0-127
60 ksps	0-63
120 ksps	0-31
240 ksps	0-15
480 ksps	0-7
960 ksps	0-3

Key Entry Channel Type Symbol Rate First Spread Code Power
 Spread Code TFCI Field Off On Scramble Code Scramble Offset
 Random

Remarks If the parameter set by this command is changed while the signal is active, the apply command must be executed for the change to occur. Refer to “:LINK:UP:SETup:TABLE:APPLY” on page 331.

:LINK:UP:SETup:TABLE:GUNit

Supported All with Option 400

[:SOURce] :RADio:WCDMa:TGPP:ARB:LINK:UP:SETup:TABLE:GUNit DB|LINear|INDEX
 [:SOURce] :RADio:WCDMa:TGPP:ARB:LINK:UP:SETup:TABLE:GUNit?

This command selects the uplink power measurement units.

DB The power is set in decibels-exponential.

LINear The power is set to increase linearly.

INDEX The power is set at an index level - steps.

***RST** DB

Key Entry Gain Unit dB Lin Index

Remarks If the parameter set by this command is changed while the signal is active, the

apply command must be executed for the change to occur. Refer to “:LINK:UP:SETup:TABLE:APPLY” on page 331.

:LINK:UP:SETup:TABLE:NCHannel

Supported All with Option 400

[:SOURCE] :RADio:WCDMA:TGPP:ARB:LINK:UP:SETup:TABLE:NCHannels?

This command queries the setup table for the number of uplink channels.

***RST** 1

Key Entry N/A

Remarks N/A

:LINK:UP:TFCI

Supported All with Option 400

[:SOURCE] :RADio:WCDMA:TGPP:ARB:LINK:UP:TFCI ON|OFF|1|0

[:SOURCE] :RADio:WCDMA:TGPP:ARB:LINK:UP:TFCI?

This command enables or disables the transport format combination indicator (TFCI) field for all channels in the table.

***RST** 1

Key Entry TCFI Field Off On

Remarks N/A

:MDESTination:PULSe

Supported All with Option 400

[:SOURCE] :RADio:WCDMA:TGPP:ARB:MDESTination:PULSe NONE|M1|M2|M3|M4

[:SOURCE] :RADio:WCDMA:TGPP:ARB:MDESTination:PULSe?

This command routes the selected marker to the Pulse/RF Blanking function. The NONE parameter clears the marker for the Pulse/RF Blanking function.

***RST** NONE

Key Entry None Marker 1 Marker 2 Marker 3 Marker 4

Remarks N/A

:MDEStination:AAMPlitude**Supported** All with Option 400

```
[ :SOURce ]:RADio:WCDMa:TGPP:ARB:MDEStination:AAMPlitude NONE |M1 |M2 |M3 |M4
[:SOURce]:RADio:WCDMa:TGPP:ARB:MDEStination:AAMPlitude?
```

This command routes the selected marker to the Alternate Amplitude function. The NONE parameter clears the marker to the Alternate Amplitude function.

RST** NONE**Key Entry** None Marker 1 Marker 2 Marker 3 Marker 4**Remarks** N/A**:MDEStination:ALCHold*Supported** All with Option 400

```
[ :SOURce ]:RADio:WCDMa:TGPP:ARB:MDEStination:ALCHold NONE |M1 |M2 |M3 |M4
[:SOURce]:RADio:WCDMa:TGPP:ARB:MDEStination:ALCHold?
```

This command routes the selected marker to the ALC Hold function. The NONE parameter clears the marker for the ALC Hold function.

RST** NONE**Key Entry** None Marker 1 Marker 2 Marker 3 Marker 4**Remarks** N/A**:MPOLarity:MARKer1*Supported** All with Option 400

```
[ :SOURce ]:RADio:WCDMa:TGPP:ARB:MPOLarity:MARKer1 NEGative |POSitive
[:SOURce]:RADio:WCDMa:TGPP:ARB:MPOLarity:MARKer1?
```

This command sets the polarity for marker 1.

RST** POS**Key Entry** Marker 1 Polarity Neg Pos**Remarks** N/A**:MPOLarity:MARKer2*Supported** All with Option 400

```
[ :SOURCE ] :RADIo:WCDMa:TGPP:ARB:MPOLarity:MARKer2 NEGative|POSitive
[ :SOURCE ] :RADIo:WCDMa:TGPP:ARB:MPOLarity:MARKer2?
```

This command sets the polarity for marker 2.

***RST** POS

Key Entry **Marker 2 Polarity Neg Pos**

Remarks N/A

:MPOLarity:MARKer3

Supported All with Option 400

```
[ :SOURCE ] :RADIo:WCDMa:TGPP:ARB:MPOLarity:MARKer3 NEGative|POSitive
[ :SOURCE ] :RADIo:WCDMa:TGPP:ARB:MPOLarity:MARKer3?
```

This command sets the polarity for marker 3.

***RST** POS

Key Entry **Marker 3 Polarity Neg Pos**

Remarks N/A

:MPOLarity:MARKer4

Supported All with Option 400

```
[ :SOURCE ] :RADIo:WCDMa:TGPP:ARB:MPOLarity:MARKer4 NEGative|POSitive
[ :SOURCE ] :RADIo:WCDMa:TGPP:ARB:MPOLarity:MARKer4?
```

This command sets the polarity for marker 4.

***RST** POS

Key Entry **Marker 4 Polarity Neg Pos**

Remarks N/A

:REFerence:EXTernal:FREQuency

Supported All with Option 400

```
[ :SOURCE ] :RADIo:WCDMa:TGPP:ARB:REFerence:EXTernal:FREQuency <val>
[ :SOURCE ] :RADIo:WCDMa:TGPP:ARB:REFerence:EXTernal:FREQuency?
```

This command sets the external reference frequency.

The variable <val> is expressed in Hertz (Hz).

*RST	+1.00000000E+007
Range	2.5E5–1E8
Key Entry	Reference Freq
Remarks	The value specified by this command is effective only when you are using an external ARB reference applied to the BASEBAND GEN REF IN rear panel connector. To specify external as the ARB reference source type, refer to “:REfERENCE[:SOURce]” on page 336 .

:REfERENCE[:SOURce]

Supported	All with Option 400
	[:SOURce] :RADio:WCDMa:TGPP:ARB:REfERENCE [:SOURce] INTernal EXTernal [:SOURce] :RADio:WCDMa:TGPP:ARB:REfERENCE [:SOURce] ?

This command selects either an internal or external reference for the waveform clock.

*RST	0
Key Entry	ARB Reference Ext Int
Remarks	If the EXTernal choice is selected, the external frequency value <i>must</i> be entered and the signal must be applied to the BASEBAND GEN REF IN rear panel connector. Refer to “:REfERENCE[:SOURce]” on page 336 to enter the external reference frequency.

:RETRigger

Supported	All with Option 400
	[:SOURce] :RADio:WCDMa:TGPP:ARB:RETRigger ON OFF IMMEDIATE [:SOURce] :RADio:WCDMa:TGPP:ARB:RETRigger ?

This command sets the retrigger mode.

ON	This choice specifies that if a trigger occurs while a waveform is initiated, the waveform will retrigger at the end of the previous waveform sequence and play once more.
OFF	This choice specifies that if a trigger occurs while a waveform is initiated, the action will be ignored.
IMMEDIATE	This choice specifies that if a trigger occurs while a waveform is playing, the

waveform will reset and replay from the start immediately upon receiving a trigger.

*RST	0
Key Entry	Retrigger Mode Off On
Remarks	N/A

:REVISION

Supported All with Option 400

```
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:REVISION?
```

This command checks the version for the arbitrary waveform generator firmware.

*RST	3GPP 06-2001
Key Entry	N/A
Remarks	N/A

:SLOCK:RATE

Supported All with Option 400

```
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:SLOCK:RATE <val>
```

```
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:SLOCK:RATE?
```

This command sets the sample clock rate for the W-CDMA modulation format.

The variable <val> is expressed in units of hertz.

*RST	+1.00000000E+008
Range	1–1E8
Key Entry	ARB Sample Clock

Remarks The modulation format should be active before executing this command. If this command is executed before the modulation format is active, the entered value will be overridden by a calculated factory default value. Refer to “[:STATE]” on [page 341](#) to activate the modulation format.

:TRIGGER:TYPE:CONTINUOUS[:TYPE]

Supported All with Option 400

```
[ :SOURCE ] :RADIO:WCDMA:TGPP:ARB:TRIGGER:CONTINUOUS[ :TYPE ] FREE |
```

TRIGger | RESet

[:SOURce] :RADio:WCDMa:TGPP:ARB:TRIGger:CONTInuous[:TYPE] ?

This command sets the trigger type.

FREE	This choice immediately transmits a waveform that is continuously repeated.
TRIGger	This choice causes the waveform to wait for a trigger. Once a trigger is received, the transmission of a continuously repeated waveform begins.
RESet	This choice immediately restarts a continuously repeated waveform upon receiving a trigger.
*RST	FREE
Key Entry	Free Run Trigger & Run Reset & Run
Remarks	To select CONTInuous as the trigger type, refer to “:TRIGger:TYPE” on page 338.

:TRIGger:TYPE

Supported All with Option 400

[:SOURce] :RADio:WCDMa:TGPP:ARB:TRIGger:TYPE CONTInuous | SINGLE | GATE

[:SOURce] :RADio:WCDMa:TGPP:ARB:TRIGger:TYPE ?

This command sets the arbitrary waveform trigger type.

CONTInuous	The waveform repeats continuously; the sequence restarts every time the previous playback is completed. To customize continuous triggering, refer to “:TRIGger:TYPE:CONTInuous[:TYPE]” on page 337.
SINGLE	The waveform segment or sequence plays once for every trigger received.
GATE	An external trigger signal interrupts the playback while the gating signal is in the active state. Playback resumes when the external control signal returns to the inactive state. The active state can be set high or low. To change the polarity of the gated trigger, refer to “:TRIGger:TYPE:GATE:ACTive” on page 338.

*RST	CONT
Key Entry	Continuous Single Gated
Remarks	N/A

:TRIGger:TYPE:GATE:ACTive

Supported All with Option 400


```
[ :SOURCE ] :RADio:WCDMA:TGPP:ARB:TRIGger:TYPE:GATE:ACTIVE LOW|HIGH
[ :SOURCE ] :RADio:WCDMA:TGPP:ARB:TRIGger:TYPE:GATE:ACTIVE?
```

This command sets the arb trigger gate polarity; GATE must be selected as the trigger type.

LOW The waveform stops playing while the selected external control gating signal is low and restarts when the gate returns to the high level.

HIGH The waveform stops playing while the selected external control gating signal is high and restarts when the gate returns to the low level.

***RST** HIGH

Key Entry Gate Active Low High

Remarks To select a GATE as the trigger type, refer to “:TRIGger:TYPE” on page 338.

:TRIGger[:SOURCE]

Supported All with Option 400

```
[ :SOURCE ] :RADio:WCDMA:TGPP:ARB:TRIGger[ :SOURCE ] KEY|EXT|BUS
[ :SOURCE ] :RADio:WCDMA:TGPP:ARB:TRIGger[ :SOURCE ]?
```

This command sets the trigger source.

KEY This choice enables triggering by pressing the front panel **Trigger** hardkey.

EXT This choice enables triggering using an externally applied signal at the PATT TRIG IN rear panel connector or the PATT TRIG IN 2 pin on the rear panel AUX I/O connector. To select the appropriate connector, refer to “:TRIGger[:SOURCE]:EXternal[:SOURCE]” on page 340.

BUS This choice enables GPIB triggering using the *TRG or GET command or LAN and RS-232 triggering using the *TRG command.

Key Entry **Trigger Key** **Bus** **Ext**

Remarks N/A

:TRIGger[:SOURCE]:EXternal:DElay

Supported All with Option 400

```
[ :SOURCE ] :RADio:WCDMA:TGPP:ARB:TRIGger[ :SOURCE ] :EXternal:DElay <val>
[ :SOURCE ] :RADio:WCDMA:TGPP:ARB:TRIGger[ :SOURCE ] :EXternal:DElay?
```

This command sets the arbitrary waveform generator’s external trigger delay.

The variable <val> is expressed in units of seconds (μ sec–ksec).

*RST	+1.00000000E–003
Range	1E–8 to 4E1
Key Entry	Ext Delay Time
Remarks	This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURce]” on page 339.

:TRIGger[:SOURce]:EXTErnal:DELay:STATe

Supported	All with Option 400
[:SOURce]:RADio:WCDMa:TGPP:ARB:TRIGger[:SOURce]:EXTErnal:DELay:STATe ON OFF 1 0	
[:SOURce]:RADio:WCDMa:TGPP:ARB:TRIGger[:SOURce]:EXTErnal:DELay:STATe?	

This command enables or disables the arbitrary waveform generator’s external trigger delay.

*RST	0
Key Entry	Ext Delay Off On
Remarks	This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURce]” on page 339.

:TRIGger[:SOURce]:EXTErnal:SLOPe

Supported	All with Option 400
[:SOURce]:RADio:WCDMa:TGPP:ARB:TRIGger[:SOURce]:EXTErnal:SLOPe POSitive NEGative	
[:SOURce]:RADio:WCDMa:TGPP:ARB:TRIGger[:SOURce]:EXTErnal:SLOPe?	

This command sets the polarity for the external trigger.

*RST	NEG
Key Entry	Ext Polarity Neg Pos
Remarks	This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURce]” on page 339.

:TRIGger[:SOURce]:EXTErnal[:SOURce]

Supported	All with Option 400
[:SOURce]:RADio:WCDMa:TGPP:ARB:TRIGger[:SOURce]:EXTErnal	
[:SOURce] EPT1 EPT2 EPTRIGGER1 EPTRIGGER2	

```
[ :SOURCE ] :RADIo:WCDMA:TGPP:ARB:TRIGger [ :SOURCE ] :EXTeRnaL [ :SOURCE ] ?
```

This command specifies which PATT TRIG IN connection, rear panel connector or AUX I/O connector, will be used to accept an externally applied trigger signal.

EPT1	This choice is synonymous with EPTRIGGER1 and selects the PATT TRIG IN rear panel connector for the external signal connection.
EPT2	This choice is synonymous with EPTRIGGER2 and selects the PATT TRIG IN 2 pin on the rear panel AUX I/O connector for the external signal connection.
EPTRIGGER1	This choice is synonymous with EPT1 and selects the PATT TRIG IN rear panel connector for the external signal connection.
EPTRIGGER2	This choice is synonymous with EPT2 and selects the PATT TRIG IN 2 pin on the rear panel AUX I/O connector for the external signal connection.
*RST	EPT1
Choices	EPT1 EPT2 EPTRIGGER1 EPTRIGGER2
Remarks	This command is effective only if an external trigger is selected as the trigger source. Refer to “:TRIGger[:SOURCE]” on page 339. For more information about the rear panel AUX I/O connector pin configuration, refer to the <i>User’s Guide</i> .

[:STATe]

Supported All with Option 400

```
[ :SOURCE ] :RADIo:WCDMA:TGPP:ARB [ :STATe ] ON | OFF | 1 | 0  
[ :SOURCE ] :RADIo:WCDMA:TGPP:ARB [ :STATe ] ?
```

This command enables or disables the W-CDMA modulation format.

ON (1)	This choice enables the W-CDMA modulation capability and sets up the internal hardware to generate the currently selected W-CDMA signal selection.
OFF (0)	This choice disables the W-CDMA baseband signal capability.
*RST	0
Key Entry	W-CDMA Off On
Remarks	This choice also activates the I/Q state and sets the I/Q source to internal.

Symbols

of Blocks field, [894](#)
 # of Carriers softkey, [267](#), [270](#)
 # Points softkey, [53](#)
 # Skipped Points softkey, [283](#)
 ΦM Dev, [189](#)
 ΦM Dev Couple Off On, [190](#)
 FM ΦM Normal High BW, [185](#)
 ΦM Off On, [189](#)
 ΦM Path 1 2, [184](#)
 ΦM Stop Rate, [186](#)
 ΦM Sweep Time, [187](#)
 ΦM Tone 2 Ampl Percent of Peak, [186](#)

Numerics

0.7V,1.4V,1.65V,2.5V softkey, [368](#)
 1 DPCH softkey, [314](#), [319](#)
 1.23 MHz softkey, [251](#)
 1.25 MHz softkey, [251](#)
 1/2 Conv softkey, [891](#), [893](#), [984](#)
 1/3 Conv softkey, [891](#), [893](#), [984](#)
 10 msec softkey, [917](#)
 1048576 softkey, [204](#)
 10ms Frame Pulse (DRPS11) softkey, [874](#), [876](#),
 [877](#), [878](#)
 10ms Frame Pulse (RPS6) softkey
 See wideband CDMA base band generator
 subsystem keys and fields
 12.2 kbps (34.121 v3.8) softkey, [856](#)
 128QAM softkey
 See custom subsystem keys
 See DECT subsystem keys
 See Dmodulation subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
 131072 softkey, [204](#)
 144 kbps (34.121 v3.8) softkey, [856](#)
 16 1's & 16 0's softkey
 See custom subsystem keys
 See DECT subsystem keys

16 1's & 16 0's softkey (continued)
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
 16384 softkey, [204](#)
 16-Lvl FSK softkey
 See DECT subsystem keys
 See PHS subsystem keys
 16PSK softkey
 See custom subsystem keys
 See DECT subsystem keys
 See Dmodulation subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
 16QAM softkey
 See custom subsystem keys
 See DECT subsystem keys
 See Dmodulation subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
 2 Carriers softkey, [315](#)
 2 SR3 Carriers softkey, [237](#)
 2.100 MHz softkey, [30](#), [201](#), [214](#), [235](#), [261](#), [281](#),
 [296](#), [312](#), [420](#)
 20 msec softkey, [917](#)
 2560 msec softkey, [917](#)
 256QAM softkey
 See custom subsystem keys
 See DECT subsystem keys
 See Dmodulation subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys

Index

256QAM softkey (*continued*)

See PHS subsystem keys

See TETRA subsystem keys

262144 softkey, [204](#)

2-Lvl FSK softkey

See custom subsystem keys

See DECT subsystem keys

See Dmodulation subsystem keys

See EDGE subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

2nd Scr Offset field, [858](#), [865](#)

3 Carriers softkey, [221](#), [237](#), [315](#)

3 DPCH softkey, [314](#), [319](#)

3.84MHz chip-clk (DRPS4) softkey, [874](#), [876](#), [877](#),
[878](#)

32 1's & 32 0's softkey

See custom subsystem keys

See DECT subsystem keys

See EDGE subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

32 Ch Fwd softkey, [219](#), [222](#)

32768 softkey, [204](#)

32QAM softkey

See custom subsystem keys

See DECT subsystem keys

See Dmodulation subsystem keys

See EDGE subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

384 kbps (34.121 v3.8) softkey, [856](#)

4 1's & 4 0's softkey

See custom subsystem keys

See DECT subsystem keys

See EDGE subsystem keys

4 1's & 4 0's softkey (*continued*)

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

4 Carriers softkey, [221](#), [237](#), [315](#)

40 msec softkey, [917](#)

40.000 MHz softkey, [30](#), [199](#), [201](#), [209](#), [214](#), [230](#),
[235](#), [257](#), [261](#), [279](#), [281](#), [295](#), [296](#), [310](#), [312](#),
[414](#), [420](#)

4-Lvl FSK softkey

See custom subsystem keys

See DECT subsystem keys

See Dmodulation subsystem keys

See EDGE subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

4QAM softkey

See custom subsystem keys

See DECT subsystem keys

See Dmodulation subsystem keys

See EDGE subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

5 Channel softkey, [243](#)

524288 softkeys, [204](#)

64 1's & 64 0's softkey

See custom subsystem keys

See DECT subsystem keys

See EDGE subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

64 Ch Fwd softkey, [219](#), [222](#)

64 kbps (34.121 v3.8) softkey, [856](#)

- 64QAM softkey
 - See custom subsystem keys
 - See DECT subsystem keys
 - See Dmodulation subsystem keys
 - See EDGE subsystem keys
 - See GSM subsystem keys
 - See NADC subsystem keys
 - See PDC subsystem keys
 - See PHS subsystem keys
 - See TETRA subsystem keys
 - 65536 softkey, [204](#)
 - 8 1's & 8 0's softkey
 - See custom subsystem keys
 - See DECT subsystem keys
 - See EDGE subsystem keys
 - See GSM subsystem keys
 - See NADC subsystem keys
 - See PDC subsystem keys
 - See PHS subsystem keys
 - See TETRA subsystem keys
 - 8 Bit Pattern softkey, [413](#)
 - 8 Channel softkey, [243](#)
 - 80 msec softkey, [917](#)
 - 80ms Frame Pulse (DRPS13) softkey, [874](#), [876](#), [877](#), [878](#)
 - 80ms Frame Pulse (RPS20) softkey
 - See wideband CDMA base band generator subsystem keys and fields
 - 8648A/B/C/D softkey, [151](#), [153](#)
 - 8656B,8657A/B softkey, [151](#), [153](#)
 - 8657D NADC softkey, [151](#), [153](#)
 - 8657D PDC softkey, [151](#), [153](#)
 - 8657J PHS softkey, [151](#), [153](#)
 - 8-Lvl FSK softkey
 - See DECT subsystem keys
 - See PHS subsystem keys
 - 8PSK softkey
 - See custom subsystem keys
 - See DECT subsystem keys
 - See Dmodulation subsystem keys
 - See EDGE subsystem keys
 - See GSM subsystem keys
 - See NADC subsystem keys
 - See PDC subsystem keys
 - See PHS subsystem keys
 - 8PSK softkey (continued)
 - See TETRA subsystem keys
 - 9 Ch Fwd softkey, [219](#), [222](#)
 - 9 Channel softkey, [236](#)
- ## A
- A field softkey
 - See DECT subsystem keys
 - A softkey, [848](#)
 - Access softkey, [640](#)
 - ACS softkey, [888](#)
 - Active softkey, [885](#)
 - Actual BER softkey, [994](#)
 - Actual BLER field, [987](#), [995](#)
 - Add Comment To Seq[n] Reg[nn] softkey, [116](#)
 - Adjust Gain softkey, [383](#)
 - Adjust Phase softkey, [43](#)
 - AICH softkey, [951](#)
 - AICH Trigger Polarity Pos Neg softkey, [925](#)
 - ALC BW Normal Narrow, [54](#)
 - ALC BW Normal Narrow softkey, [21](#)
 - ALC Off On softkey, [57](#)
 - All Down softkey, [860](#), [908](#)
 - All softkey, [101](#), [115](#)
 - All Timeslots softkey
 - See DECT subsystem keys
 - See EDGE subsystem keys
 - See GSM subsystem keys
 - See NADC subsystem keys
 - See PDC subsystem keys
 - See PHS subsystem keys
 - See TETRA subsystem keys
 - All Up softkey, [860](#), [908](#)
 - Alt Amp Delta softkey, [57](#)
 - Alt Ampl Off On softkey, [58](#)
 - Alt power in field, [964](#)
 - AM softkeys
 - AM Depth, [171](#)
 - AM Depth Couple Off On, [172](#)
 - AM Off On, [171](#)
 - AM Off On softkey, [167](#)
 - AM Path 1 2, [166](#)
 - AM Stop Rate, [168](#)
 - AM Sweep Rate, [169](#)
 - AM Tone 2 Ampl Percent Of Peak, [168](#)

Index

- AM softkeys (*continued*)
 - AM Tone 2 Rate, [168](#)
- AM_ADDR softkey, [412](#)
- Ampl softkeys
 - Ampl, [45](#), [60](#)
 - Ampl Offset, [62](#)
 - Ampl Ref Off On, [61](#)
 - Ampl Ref Set, [60](#)
 - Ampl Start, [45](#), [61](#)
 - Ampl Stop, [45](#), [62](#)
- Amplitude hardkey, [60](#), [63](#)
- amplitude modulation subsystem keys
 - AM Depth, [171](#)
 - AM Depth Couple Off On, [172](#)
 - AM Off On, [167](#), [171](#)
 - AM Path 1 2, [166](#)
 - AM Stop Rate, [168](#)
 - AM Sweep Rate, [169](#)
 - AM Tone 2 Ampl Percent Of Peak, [168](#)
 - AM Tone 2 Rate, [168](#)
 - Bus, [170](#)
 - Dual-Sine, [169](#)
 - Ext, [170](#)
 - Ext Coupling DC AC, [167](#)
 - Ext1, [170](#)
 - Ext2, [170](#)
 - Free Run softkey, [170](#)
 - Incr Set, [166](#), [172](#)
 - Internal, [170](#)
 - Noise, [169](#)
 - Ramp, [169](#)
 - Sine, [169](#)
 - Square, [169](#)
 - Swept-Sine, [169](#)
 - Triangle, [169](#)
 - Trigger Key, [170](#)
- AMR 12.2 kbps softkey, [856](#), [957](#)
- APCO 25 C4FM softkey
 - See* CDMA ARB subsystem keys
 - See* CDMA2000 ARB subsystem keys
 - See* CDMA2000 BBG subsystem keys and fields
 - See* custom subsystem keys
 - See* DECT subsystem keys
 - See* Dmodulation subsystem keys
 - See* EDGE subsystem keys
- APCO 25 C4FM softkey (*continued*)
 - See* GPS subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* TETRA subsystem keys
 - See* wideband CDMA ARB subsystem keys
 - See* wideband CDMA base band generator subsystem keys and fields
- APCO 25 w/C4FM softkey, [267](#), [269](#)
- APCO 25 w/C4QPSK softkey, [267](#), [269](#)
- APCO 25 w/CQPSK softkey, [511](#)
- Apply Channel Setup softkey, [241](#), [244](#), [322](#), [331](#), [843](#), [897](#)
- Arb AWGN Off On softkey, [206](#)
- ARB Off On softkey, [293](#)
- ARB Reference Ext Int softkey
 - See* AWGN subsystem keys
 - See* bluetooth subsystem keys
 - See* CDMA ARB subsystem keys
 - See* CDMA2000 ARB subsystem keys
 - See* Dmodulation subsystem keys
 - See* dual ARB subsystem keys
 - See* multitone subsystem keys
 - See* wideband CDMA ARB subsystem keys
- ARB Sample Clock softkey, [205](#), [218](#), [250](#), [266](#), [288](#), [301](#), [337](#), [425](#)
- Atten Hold Off On softkey, [59](#)
- automatic leveling control, [57](#)
- Aux I/O Trigger Polarity Pos Neg softkey, [407](#)
- Aux softkey
 - See* sense subsystem keys
- AWGN Off On softkey, [416](#)
- AWGN subsystem keys
 - 1048576, [204](#)
 - 131072, [204](#)
 - 16384, [204](#)
 - 2.100 MHz, [201](#)
 - 262144, [204](#)
 - 32768, [204](#)
 - 40.000 MHz, [199](#), [201](#)
 - 524288, [204](#)
 - 65536, [204](#)
 - Arb AWGN Off On, [206](#)

AWGN subsystem keys (*continued*)

ARB Reference Ext Int, [205](#)
 ARB Sample Clock, [205](#)
 Bandwidth, [199](#)
 Clear Header, [200](#)
 I/Q Mod Filter Manual Auto, [202](#)
 I/Q Output Filter Manual Auto, [199](#)
 Marker 1, [202](#), [203](#)
 Marker 1 Polarity Neg Pos, [203](#)
 Marker 2, [202](#), [203](#)
 Marker 2 Polarity Neg Pos, [203](#)
 Marker 3, [202](#), [203](#)
 Marker 3 Polarity Neg Pos, [204](#)
 Marker 4, [202](#), [203](#)
 Marker 4 Polarity Neg Pos, [204](#)
 Modulator Atten Manual Auto, [200](#), [201](#)
 Noise Seed Fixed Random, [206](#)
 None, [202](#), [203](#)
 Reference Freq, [204](#)
 Save Setup To Header, [200](#)
 Through, [199](#), [201](#)
 Waveform Length, [204](#)

B

B softkey, [823](#), [827](#), [848](#)
 B1 softkey, [821](#), [826](#)
 B2 softkey, [821](#), [826](#)
 Bandwidth softkey, [199](#), [411](#)
 Base Delay Tp-a softkey, [947](#)
 BBG Chip Clock Ext Int softkey
 See wideband CDMA base band generator
 subsystem keys and fields
 BBG Data Clock Ext Int softkey
 See custom subsystem keys
 See DECT subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
 BBG Data Clock field, [426](#)
 BBG Ref Ext Int softkey
 See custom subsystem keys
 See DECT subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys

BBG Ref Ext Int softkey (continued)

See NADC subsystem keys
See PDC subsystem keys
See PHS subsystem keys
See TETRA subsystem keys
 BBG1 softkey, [23](#), [33](#)
 BD_ADDR softkey, [412](#)
 Begin Data Format Pattern Framed softkey
 See DECT subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
 Begin Frame softkey
 See DECT subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
 Begin Timeslot # softkey
 See DECT subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
 BER Display % Exp softkey, [352](#)
 BER field, [987](#), [995](#)
 BER Mode Off On softkey
 See sense subsystem keys
 BER softkey, [989](#), [997](#)
 BERT Off On softkey, [404](#)
 BERT Resync Off On softkey, [404](#)
 Beta field, [902](#), [910](#)
 Binary softkey, [91](#), [118](#)
 binary values, [15](#)
 Bit Count softkey
 See sense subsystem keys
 Bit Delay Off On softkey, [406](#)

Index

Bit Rate field

See CDMA2000 BBG subsystem keys and fields

Bit softkey, [91](#)

BLER field, [988](#), [996](#)

BLER softkey, [989](#), [997](#)

Blk Set Size field, [891](#)

Blk Size field, [890](#), [983](#), [991](#)

Block Count softkey

See calculate subsystem keys

See sense subsystem keys

Block Erasure softkey

See sense subsystem keys

Blocking softkey, [888](#)

Bluetooth Off On softkey, [425](#)

Bluetooth softkey, [511](#)

bluetooth subsystem keys

[2.100 MHz](#), [420](#)

[40.000 MHz](#), [414](#), [420](#)

[8 Bit Pattern](#), [413](#)

[AM_ADDR](#), [412](#)

[ARB Reference Ext Int](#), [424](#)

[ARB Sample Clock](#), [425](#)

[AWGN Off On](#), [416](#)

[BD_ADDR](#), [412](#)

[Bluetooth Off On](#), [425](#)

[Burst Off On](#), [412](#)

[Burst Power Ramp](#), [424](#)

[C/N\[1 MHz\]](#), [416](#)

[Clear Header](#), [415](#)

[Clock/Gate Delay](#), [413](#)

[Continuous PN9](#), [413](#)

[Drift Deviation](#), [417](#)

[Freq Drift Type Linear Sine](#), [417](#)

[Freq Offset](#), [418](#)

[I/Q Mod Filter Manual Auto](#), [421](#)

[I/Q Output Filter Manual Auto](#), [414](#)

[Impairments Off On](#), [415](#)

[Marker 1](#), [421](#), [422](#)

[Marker 1 Polarity Neg Pos](#), [422](#)

[Marker 2](#), [421](#), [422](#)

[Marker 2 Polarity Neg Pos](#), [422](#)

[Marker 3](#), [421](#), [422](#)

[Marker 3 Polarity Neg Pos](#), [423](#)

[Marker 4](#), [421](#), [422](#)

[Marker 4 Polarity Neg Pos](#), [423](#)

bluetooth subsystem keys (*continued*)

[Mod Index](#), [418](#)

[Modulator Atten Manual Auto](#), [419](#), [420](#)

[Noise Seed](#), [416](#)

[None](#), [421](#), [422](#)

[Packet \(DH1\)](#), [423](#)

[Reference Freq](#), [423](#)

[Save Setup To Header](#), [415](#)

[Symbol Timing Err](#), [419](#)

[Through](#), [414](#), [420](#)

[Truncated PN9](#), [413](#)

boolean SCPI parameters, [10](#)

boolean, numeric response data, [11](#)

BPSK softkey

See custom subsystem keys

See DECT subsystem keys

See Dmodulation subsystem keys

See EDGE subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

Brightness softkey, [81](#)

Build New Waveform Sequence softkey, [288](#)

Burst Envelope Int Ext Off softkey, [21](#)

Burst gate in field, [965](#)

Burst Gate In Polarity Neg Pos softkey, [126](#), [127](#)

Burst Off On softkey, [412](#)

Burst Power Ramp softkey, [424](#)

Bus softkey

See amplitude modulation subsystem keys

See CDMA ARB subsystem keys

See CDMA2000 ARB subsystem keys

See DECT subsystem keys

See Dmodulation subsystem keys

See dual ARB subsystem keys

See EDGE subsystem keys

See frequency modulation subsystem keys

See GSM subsystem keys

See list/sweep subsystem keys

See low frequency output subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See phase modulation subsystem keys

- Bus softkey (continued)*
 See PHS subsystem keys
 See sense subsystem keys
 See TETRA subsystem keys
 See trigger subsystem keys
 See wideband CDMA ARB subsystem keys
- C**
- C Power field, 898, 926
 C/N softkey, 453, 464
 C/N value field, 844, 898, 926
 C/N[1 MHz] softkey, 416
 C4FM softkey, 788
 calculate subsystem keys
 BER Display % Exp, 352
 Block Count, 372
 Class II RBER, 350
 Class 1b RBER, 349, 350
 Cycle End, 351
 Error Rate, 344, 346, 347, 348, 349
 Exceeds Any Limit, 350
 Fail Hold, 351
 Frame Erasure, 350
 No Limits, 345, 348, 349, 350
 Pass/Fail Limits, 352
 Pass/Fail Off On, 352
 Update Display Cycle End Cont, 353
 calibration subsystem keys
 DCFM/DCΦM Cal, 66
 Execute Cal, 66, 68
 I/Q Calibration, 66
 Revert to Default Cal Settings, 67
 Start Frequency, 68
 Stop Frequency, 69
 Carrier Phases Fixed Random softkey, 268
 CC softkey, 754, 757, 759
 CDL softkey, 723
 CDMA ARB subsystem keys
 2.100 MHz, 214
 3 Carriers, 221
 32 Ch Fwd, 219, 222
 4 Carriers, 221
 40.000 MHz, 209, 214
 64 Ch Fwd, 219, 222
 9 Ch Fwd, 219, 222
 CDMA ARB subsystem keys (*continued*)
 APCO 25 C4FM, 210
 ARB Reference Ext Int, 217
 ARB Sample Clock, 218
 Bus, 225
 CDMA Off On, 227
 Chip Rate, 208
 Clear Header, 212
 Clip |I+jQ| To, 208
 Clip |I| To, 207
 Clip |Q| To, 207
 Clip At PRE POST FIR Filter, 207
 Clipping Type |I+jQ| |I|,|Q|, 208
 Continuous, 223
 CPICH, 324
 Custom CDMA Multicarrier, 221
 Custom CDMA State, 219, 222
 Equal Powers, 220
 Ext, 225
 Ext Delay Off On, 226
 Ext Delay Time, 226
 Ext Polarity Neg Pos, 227
 Filter Alpha, 211
 Filter BbT, 211
 Free Run, 224
 Gate Active Low High, 224
 Gated, 223
 Gaussian, 210
 I/Q Mapping Normal Invert, 212
 I/Q Mod Filter Manual Auto, 214
 I/Q Output Filter Manual Auto, 209
 Immediate, 218
 IS-2000 SR3 DS, 210
 IS-95, 210
 IS-95 Mod, 210
 IS-95 Mod w/EQ, 210
 IS-95 w/EQ, 210
 IS-97 Levels, 220
 Marker 1, 214, 215
 Marker 1 Polarity Neg Pos, 215
 Marker 2, 214, 215
 Marker 2 Polarity Neg Pos, 216
 Marker 3, 214, 215
 Marker 3 Polarity Neg Pos, 216
 Marker 4, 214, 215

Index

CDMA ARB subsystem keys (*continued*)

- Marker 4 Polarity Neg Pos, [216](#)
- Modulator Atten Manual Auto, [213](#)
- Multicarrier Off On, [219](#)
- None, [214](#), [215](#)
- Nyquist, [210](#)
- Off, [218](#)
- On, [218](#)
- Optimize FIR For EVM ACP, [211](#)
- Oversample Ratio, [217](#)
- Paging, [220](#)
- Patt Trig In 1, [225](#)
- Patt Trig In 2, [225](#)
- Pilot, [219](#), [220](#), [222](#)
- Rectangle, [210](#)
- Reference Freq, [217](#)
- Reset & Run, [224](#)
- Reverse, [219](#)
- Root Nyquist, [210](#)
- Save Setup To Header, [212](#)
- Scale to 0dB, [220](#)
- Single, [223](#)
- Store Custom CDMA State, [222](#)
- Store Custom Multicarrier, [221](#)
- Sync, [220](#)
- Through, [209](#), [214](#)
- Traffic, [220](#)
- Trigger & Run, [224](#)
- Trigger Key, [225](#)
- UN3/4 GSM Gaussian, [210](#)
- User FIR, [210](#)
- Waveform Length, [227](#)
- WCDMA, [210](#)

CDMA Freq field, [446](#)

CDMA Off On softkey, [227](#)

CDMA softkey, [92](#)

CDMA2000 ARB subsystem keys

- 1.23 MHz, [251](#)
- 1.25 MHz, [251](#)
- 2 SR3 Carriers, [237](#)
- 2.100 MHz, [235](#)
- 3 Carriers, [237](#)
- 4 Carriers, [237](#)
- 40.000 MHz, [230](#), [235](#)
- 5 Channel, [243](#)

CDMA2000 ARB subsystem keys (*continued*)

- 8 Channel, [243](#)
- 9 Channel, [236](#)
- APCO 25 C4FM, [231](#)
- Apply Channel Setup, [241](#), [244](#)
- ARB Reference Ext Int, [249](#)
- ARB Sample Clock, [250](#)
- Bus, [253](#)
- CDMA2000 Off On, [255](#)
- Clear Header, [234](#)
- Clip $|I+jQ|$ To, [230](#)
- Clip $|I|$ To, [229](#)
- Clip $|Q|$ To, [229](#)
- Clip At PRE POST FIR Filter, [229](#)
- Clipping Type $|I+jQ| |I|,|Q|$, [230](#)
- Config, [241](#), [245](#)
- Continuous, [252](#)
- Custom CDMA2000 Carrier, [236](#), [238](#)
- Custom CDMA2000 Multicarrier, [237](#)
- Custom CDMA2000 State, [243](#)
- Edit Channel Setup, [241](#), [245](#)
- Equal Powers, [242](#), [246](#)
- Ext, [253](#)
- Ext Delay Off On, [255](#)
- Ext Delay Time, [254](#)
- Ext Polarity Neg Pos, [255](#)
- Filter Alpha, [232](#)
- Filter BbT, [233](#)
- Free Run, [252](#)
- Gate Active Low High, [253](#)
- Gated, [252](#)
- Gaussian, [231](#)
- I/Q Mapping Normal Invert, [236](#)
- I/Q Mod Filter Manual Auto, [235](#)
- I/Q Output Filter Manual Auto, [231](#)
- Immediate, [249](#)
- Insert Row, [241](#), [245](#)
- IS-2000 SR3 DS, [231](#)
- IS-95, [231](#)
- IS-95 Mod, [231](#)
- IS-95 Mod w/EQ, [231](#)
- IS-95 w/EQ, [231](#)
- Link Forward Reverse, [236](#)
- Marker 1, [246](#), [247](#)
- Marker 1 Polarity Neg Pos, [247](#)

CDMA2000 ARB subsystem keys (*continued*)

Marker 2, 246, 247
Marker 2 Polarity Neg Pos, 247
Marker 3, 246, 247
Marker 3 Polarity Neg Pos, 248
Marker 4, 246, 247
Marker 4 Polarity Neg Pos, 248
Modulator Atten Manual Auto, 234
Multicarrier Off On, 236
None, 246, 247
Nyquist, 231
Off, 249
On, 249
Optimize FIR For EVM ACP, 233
Patt Trig In 1, 254
Patt Trig In 2, 254
Pilot, 236, 243
PN Offset, 241, 245
Radio Config, 243
Rate, 241, 245
Rectangle, 231
Reference Freq, 248
Reset & Run, 252
Root Nyquist, 231
Save Setup To Header, 234
Scale to 0dB, 242, 246
Single, 252
Spread Rate 1, 236, 243, 250
Spread Rate 3, 236, 243, 250
Spreading Type Direct Mcarrier, 236, 251
SR1 9 Channel, 238
SR1 Pilot, 238
SR3 Direct 9 Channel, 238
SR3 Direct Pilot, 238
SR3 Mcarrier 9 Channel, 238
SR3 MCarrier Pilot, 238
Store Custom CDMA State, 240, 243
Store Custom Multicarrier, 238
Through, 230, 235
Trigger & Run, 252
Trigger Key, 253
UN3/4 GSM Gaussian, 231
User FIR, 231
Walsh Code, 241, 245
WCDMA, 231

CDMA2000 BBG subsystem keys and fields

APCO 25 C4FM, 428, 460
BBG Data Clock, 426
Bit Rate, 435, 439, 444, 458, 468, 470, 474, 479, 484, 488, 492
C/N, 453, 464
CDMA Freq, 446
CDMA2000 Off On, 495
Change, 456
Chip Rate, 427, 460
DAYLT, 447
EbNo, 431, 436, 442, 447, 454, 456, 466, 472, 473, 477, 482, 486, 490
EcNo, 440, 474, 480
Equal Powers, 455, 463
Even Second Delay, 427, 460
Ext, 430, 441, 468
Ext CDMA Freq, 447
External, 459
Falling, 494
Field 1, 437
Field 2, 437
Field 3, 438
Filter Alpha, 428, 461
Filter BbT, 429, 432, 462
FIX4, 430, 441, 465, 468, 469, 471, 476, 477, 482, 486, 489
Frame Length, 466, 469, 472, 483, 487, 490
Frame Offset, 442, 467, 469, 472, 478, 483, 487, 490
FSYNCH Type, 451
Full, 475, 480
Gaussian, 428, 460
Half, 475, 480
Header, 433, 443
Internal, 459
Inverted, 464
IS-95, 428, 460
IS-95 MOD, 460
IS-95 Mod, 428
IS-95 MOD w/EQ, 460
IS-95 Mod w/EQ, 428
IS-95 w/EQ, 428, 460
Leap Seconds, 448
Link Forward Reverse, 426

Index

CDMA2000 BBG subsystem keys and fields

(continued)

Long Code Mask, 462
Long Code State, 430, 463
LTM OFF, 448
Message Type, 449
Network ID, 449
Noise Off On, 453, 464
Normal, 464
Nyquist, 428, 460
Optimize FIR For EVM ACP, 429, 462
P Rev, 450
P Rev Min, 449
Paging Indicator, 457
Permuted ESN, 432, 443
Phase Polarity, 456
PN Offset, 459
PN15, 430, 441, 465, 468, 471, 476, 482, 485, 489
PN9, 430, 441, 465, 468, 471, 476, 482, 485, 489
Power, 433, 439, 440, 444, 450, 454, 457, 467,
470, 473, 475, 478, 481, 484, 487, 491
PRAT, 450
QOF, 434, 444
Quarter, 475, 480
Radio Config, 435, 445, 467, 470, 478, 484, 488,
491
RadioConfig 1/2 Access, 426
RadioConfig 1/2 Traffic, 426
RadioConfig 3/4 Common Control, 426
RadioConfig 3/4 Enhanced Access, 426
RadioConfig 3/4 Traffic, 426
Ramp, 433
Ramp Time, 434
Rectangle, 428, 460
Reserved, 451
Rising, 494
Root Nyquist, 428, 460
Scale to 0dB, 455, 463
Spread Rate, 459
State, 440, 441, 446, 452, 455, 458, 468, 471, 474,
476, 479, 481, 485, 489, 493
State field, 436
System ID, 451
Time, 452
Trigger Advance, 494

CDMA2000 BBG subsystem keys and fields

(continued)

Turbo Coding, 445, 492
UN3/4 GSM Gaussian, 428, 460
User File, 430, 436, 441, 465, 468, 471, 476, 482,
485, 489
User FIR, 428, 460
Walsh, 439, 445, 452, 455, 458, 474, 476, 479,
481, 485, 488, 492
Walsh field, 435
CDMA2000 Off On softkey, 255, 495
CDPD softkey, 267, 269, 511
CDVCC softkey, 723, 727
CFN #0 Frame Pulse (RPS10) softkey
See wideband CDMA base band generator
subsystem keys and fields
Chan Code field, 854, 863
Chan Code softkey, 853
Change field, 456
Channel Code field, 911, 952
See wideband CDMA base band generator
subsystem keys and fields
Channel Number softkey, 36
Channel softkey, 323, 331
Channel State field, 910, 917
Channel State Off On softkey, 929
See wideband CDMA base band generator
subsystem keys and fields
ChCode Ctl field, 941
ChCode Dat field, 941
Chip Clock (RPS1) softkey
See wideband CDMA base band generator
subsystem keys and fields
Chip Rate field, 427, 460, 853, 901
Chip Rate softkey, 208, 308
Class Ib Bit Error softkey, 398, 399
Class II Bit Error softkey, 399
Class II RBER softkey, 350
Class Ib RBER softkey, 349, 350
Clear Header softkey, 200, 212, 234, 260, 278, 294,
310, 415
Clip |I+jQ| To softkey, 208, 230
Clip |I| To softkey, 207, 229, 306, 316
Clip |Q| To softkey, 207, 229, 306, 317
Clip At PRE POST FIR Filter, 207

- Clip At PRE POST FIR Filter softkey, 229, 306
- Clip Type |I+jQ| To softkey, 307, 317
- Clipping Type |I+jQ| |I|,|Q| softkey, 208, 230, 277, 307, 317
- Clock Delay Off On softkey, 366
- Clock Polarity Neg Pos softkey, 366
- Clock Time Delay softkey, 366
- Clock/Gate Delay softkey, 413
- command tree, SCPI, 6, 7
- Common Mode I/Q Offset softkey, 24
- communication subsystem keys
- Default Gateway, 70
 - GPIB Address, 70
 - Hostname, 71
 - IP Address, 71
 - Meter Address, 72
 - Meter Channel A B, 72
 - Meter Timeout, 73
 - Power Meter, 73
 - Reset RS-232, 74
 - RS-232 Baud Rate, 74
 - RS-232 ECHO Off On, 74
 - RS-232 Timeout, 75
 - Subnet Mask, 71
- Comp Mode Start Trigger Polarity Neg Pos softkey, 980
- Comp Mode Start Trigger Polarity Pos Neg softkey, 887, 888
- Comp Mode Stop Trigger Polarity Neg Pos softkey, 981
- Comp Mode Stop Trigger Polarity Pos Neg softkey, 888
- Compressed Frame (RPS8) softkey
- See wideband CDMA base band generator subsystem keys and fields
- Compressed Mode Off On softkey, 980
- Compressed Mode Start Trigger softkey, 863, 887, 980
- Compressed Mode Stop Trigger softkey, 887, 981
- Config softkey, 241, 245
- Configure Cal Array softkey, 18
- Continuous PN9 softkey, 413
- Continuous softkey
- See CDMA ARB subsystem keys
 - See CDMA2000 ARB subsystem keys
- Continuous softkey (continued)*
- See custom subsystem keys
 - See DECT subsystem keys
 - See Dmodulation subsystem keys
 - See dual ARB subsystem keys
 - See EDGE subsystem keys
 - See GSM subsystem keys
 - See NADC subsystem keys
 - See PDC subsystem keys
 - See PHS subsystem keys
 - See TETRA subsystem keys
 - See wideband CDMA ARB subsystem keys
- Copy File softkey, 101, 106, 107, 119
- correction subsystem keys
- Configure Cal Array, 18
 - Flatness Off On, 20
 - Load From Selected File, 18
 - Preset List, 19
 - Store To File, 19
- CPICH softkey, 324
- CRC Size field, 892, 985, 993
- creating a waveform, multitone, 294
- CS-1 softkey, 580, 581, 631
- CS-4 softkey, 580, 582, 636
- CSID softkey, 780, 798
- Ctrl Beta field, 929
- Ctrl Pwr field, 931
- Custom CDMA Multicarrier softkey, 221
- Custom CDMA State softkey, 219, 222
- Custom CDMA2000 Carrier softkey, 236, 238
- Custom CDMA2000 Multicarrier softkey, 237
- Custom CDMA2000 State softkey, 243
- Custom Digital Mod State softkey, 267, 269
- Custom Off On softkey, 515
- Custom softkey, 532, 542, 595, 640, 783
- custom subsystem keys
- 128QAM, 509
 - 16 1's & 16 0's, 503
 - 16PSK, 509
 - 16QAM, 509
 - 256QAM, 509
 - 2-Lvl FSK, 509
 - 32 1's & 32 0's, 503
 - 32QAM, 509
 - 4 1's & 4 0's, 503

Index

custom subsystem keys (*continued*)

- 4-Lvl FSK, [509](#)
- 4QAM, [509](#)
- 64 1's & 64 0's, [503](#)
- 64QAM, [509](#)
- 8 1's & 8 0's, [503](#)
- 8PSK, [509](#)
- APCO 25 C4FM, [506](#)
- APCO 25 w/CQPSK, [511](#)
- BBG Data Clock Ext Int, [496](#)
- BBG Ref Ext Int, [505](#)
- Bluetooth, [511](#)
- BPSK, [509](#)
- Bus, [513](#)
- CDPD, [511](#)
- Continuous, [512](#)
- Custom Off On, [515](#)
- D8PSK, [509](#)
- Diff Data Encode Off On, [504](#)
- Ext, [503](#), [513](#)
- Ext BBG Ref Freq, [506](#)
- Ext Data Clock Normal Symbol, [505](#)
- Ext Delay Bits, [514](#)
- Ext Delay Off On, [515](#)
- Ext Polarity Neg Pos, [515](#)
- Fall Delay, [498](#), [499](#)
- Fall Time, [499](#), [500](#)
- Filter Alpha, [496](#)
- Filter BbT, [497](#)
- FIX4, [503](#), [504](#)
- Free Run, [512](#)
- Freq Dev, [507](#)
- Gate Active Low High, [513](#)
- Gated, [512](#)
- Gaussian, [506](#)
- Gray Coded QPSK, [509](#)
- I/Q Scaling, [507](#)
- IS-95, [506](#)
- IS-95 Mod, [506](#)
- IS-95 Mod w/EQ, [506](#)
- IS-95 OQPSK, [509](#)
- IS-95 QPSK, [509](#)
- IS-95 w/EQ, [506](#)
- MSK, [509](#)
- None, [511](#)

custom subsystem keys (*continued*)

- Nyquist, [506](#)
- Optimize FIR For EVM ACP, [503](#)
- OQPSK, [509](#)
- $\pi/4$ DQPSK, [509](#)
- Patt Trig In 1, [514](#)
- Patt Trig In 2, [514](#)
- Phase Dev, [508](#)
- Phase Polarity Normal Invert, [509](#)
- PN11, [503](#)
- PN15, [503](#)
- PN20, [503](#)
- PN23, [503](#)
- PN9, [503](#)
- QPSK, [509](#)
- Rectangle, [506](#)
- Reset & Run, [512](#)
- Rise Delay, [500](#), [501](#)
- Rise Time, [501](#), [502](#)
- Root Nyquist, [506](#)
- Single, [512](#)
- Symbol Rate, [510](#)
- Trigger & Run, [512](#)
- Trigger Key, [513](#)
- UN3/4 GSM Gaussian, [506](#)
- User File, [503](#)
- User FIR, [506](#)
- User FSK, [508](#), [509](#)
- User I/Q, [509](#)
- Custom TS softkey, [584](#), [594](#), [631](#), [638](#)
- Custom WCDMA State softkey, [329](#)
- Cycle Count softkey, [407](#)
- Cycle End softkey, [351](#)

D

D8PSK softkey

- See* custom subsystem keys
- See* DECT subsystem keys
- See* Dmodulation subsystem keys
- See* EDGE subsystem keys
- See* GSM subsystem keys
- See* NADC subsystem keys
- See* PDC subsystem keys
- See* PHS subsystem keys
- See* TETRA subsystem keys

- Data Beta field, 933
- Data Clock Out Neg Pos softkey, 128
- Data Clock Polarity Neg Pos softkey, 126, 127, 130
- Data field, 912, 997
- Data Mode Raw Enc TLM softkey, 604
- Data Out Polarity Neg Pos softkey, 129, 130
- Data Polarity Neg Pos softkey, 126, 128, 367
- Data Pwr field, 935
- Data Rate field, 864
- data subsystem keys
 - Error Out, 360
 - PN9, 360
 - Reference Out, 360
- DATA/CLK/SYNC Rear Outputs Off On softkey, 130
- DAYLT field, 447
- dBm softkey, 164
- dBuV softkey, 164
- dBuVemf softkey, 164
- DC softkey, 181
- DCFM/DCΦM Cal softkey, 66
- DCH1 softkey, 899
- DCH2 softkey, 899
- DCH3 softkey, 899
- DCH4 softkey, 899
- DCH5 softkey, 899
- DCH6 softkey, 899
- decimal values, 15
- Dect Off On softkey, 562
- DECT softkey, 267, 269
- DECT subsystem keys
 - 128QAM, 531
 - 16 1's & 16 0's, 525, 532, 534, 537, 539, 541, 542, 546, 549, 551, 553
 - 16-Lvl FSK, 525
 - 16PSK, 531
 - 16QAM, 531
 - 256QAM, 531
 - 2-Lvl FSK, 531
 - 32 1's & 32 0's, 525, 532, 534, 537, 539, 541, 542, 546, 549, 551, 553
 - 32QAM, 531
 - 4 1's & 4 0's, 525, 532, 534, 537, 539, 541, 542, 546, 549, 551, 553
 - 4-Lvl FSK, 531
- DECT subsystem keys (*continued*)
 - 4QAM, 531
 - 64 1's & 64 0's, 525, 532, 534, 537, 539, 541, 542, 546, 549, 551, 553
 - 64QAM, 531
 - 8 1's & 8 0's, 525, 532, 534, 537, 539, 541, 542, 546, 549, 551, 553
 - 8-Lvl FSK, 525
 - 8PSK, 531
 - A field, 533, 536, 538, 540, 543, 544, 545, 548, 550, 552
 - All Timeslots, 556
 - APCO 25 C4FM, 528
 - BBG Data Clock Ext Int, 517
 - BBG Ref Ext Int, 527
 - Begin Frame, 556
 - Begin Timeslot #, 556, 557
 - BPSK, 531
 - Bus, 555, 560
 - Continuous, 558
 - Custom, 532, 542
 - D8PSK, 531
 - Data Format Pattern Framed, 524
 - Dect Off On, 562
 - DM0, 532, 534, 537, 539, 541, 542, 546, 549, 551, 553
 - DM1, 532, 534, 537, 539, 541, 542, 546, 549, 551, 553
 - Dummy Bearer 1, 542
 - Dummy Bearer 2, 542
 - Ext, 525, 532, 534, 537, 539, 541, 542, 546, 549, 551, 553, 555, 560
 - Ext Data Clock Normal Symbol, 527
 - Ext Delay Bits, 561
 - Ext Delay Off On, 562
 - Ext Polarity Neg Pos, 561
 - FACC, 532, 534, 537, 539, 541, 542, 546, 549, 551, 553
 - Fall Delay, 520, 521
 - Fall Time, 520, 521
 - FDEVI_FS, 532, 534, 537, 539, 541, 542, 546, 549, 551, 553
 - FDEVI_HS, 532, 534, 537, 539, 541, 542, 546, 549, 551, 553

Index

DECT subsystem keys (*continued*)

FDEV2_FS, [532](#), [534](#), [537](#), [539](#), [541](#), [542](#), [546](#),
[549](#), [551](#), [553](#)
Filter Alpha, [517](#)
Filter BbT, [518](#)
FIX4, [525](#), [526](#), [532](#), [533](#), [534](#), [535](#), [537](#), [539](#), [541](#),
[542](#), [543](#), [546](#), [547](#), [549](#), [551](#), [552](#), [553](#), [554](#)
Free Run, [559](#)
Freq Dev, [529](#)
Gate Active Low High, [559](#)
Gated, [558](#)
Gaussian, [528](#)
Gray Coded QPSK, [531](#)
I/Q Scaling, [529](#)
IS-95, [528](#)
IS-95 Mod, [528](#)
IS-95 Mod w/EQ, [528](#)
IS-95 OQPSK, [531](#)
IS-95 QPSK, [531](#)
IS-95 w/EQ, [528](#)
Low Capacity, [532](#), [542](#)
Low Capacity with Z field, [532](#), [542](#)
MSK, [531](#)
Nyquist, [528](#)
Optimize FIR For EVM ACP, [525](#)
OQPSK, [531](#)
P, [533](#), [536](#), [538](#), [540](#), [543](#), [545](#), [546](#), [548](#), [550](#), [552](#)
 $\pi/4$ DQPSK, [531](#)
Patt Trig In 1, [560](#)
Patt Trig In 2, [560](#)
Phase Dev, [530](#)
Phase Polarity Normal Invert, [531](#)
PN11, [525](#), [532](#), [534](#), [537](#), [539](#), [541](#), [542](#), [549](#), [551](#),
[553](#)
PN15, [525](#), [532](#), [534](#), [537](#), [539](#), [541](#), [542](#), [546](#), [549](#),
[551](#), [553](#)
PN20, [525](#), [532](#), [534](#), [537](#), [539](#), [541](#), [542](#), [549](#), [551](#),
[553](#)
PN23, [525](#), [532](#), [534](#), [537](#), [539](#), [541](#), [542](#), [549](#), [551](#),
[553](#)
PN9, [525](#), [532](#), [534](#), [537](#), [539](#), [541](#), [542](#), [546](#), [549](#),
[551](#), [553](#)
PN9 Mode Normal Quick, [519](#)
QPSK, [531](#)
Recall Secondary Frame State, [554](#)

DECT subsystem keys (*continued*)

Rectangle, [528](#)
Reset & Run, [559](#)
Restore DECT Factory Default, [526](#)
Rise Delay, [522](#)
Rise Time, [523](#)
Root Nyquist, [528](#)
S, [534](#), [537](#), [539](#), [541](#), [544](#), [545](#), [546](#), [549](#), [551](#), [553](#)
Save Secondary Frame State, [554](#)
Secondary Frame Off On, [555](#)
Sine, [502](#), [524](#)
Single, [558](#)
Symbol Rate, [557](#)
Sync Out Offset, [556](#)
Timeslot Ampl Main Delta, [535](#), [547](#)
Timeslot Off On, [536](#), [548](#)
Traffic Bearer, [532](#), [542](#)
Traffic Bearer with Z field, [532](#), [542](#)
Trigger & Run, [559](#)
Trigger Key, [555](#), [560](#)
UN3/4 GSM Gaussian, [528](#)
User File, [502](#), [524](#), [525](#), [532](#), [534](#), [537](#), [539](#), [541](#),
[542](#), [546](#), [549](#), [551](#), [553](#)
User FIR, [528](#)
User FSK, [530](#), [531](#)
User I/Q, [531](#)
Default Gateway softkey, [70](#)
Delay Bits softkey, [406](#)
Delete All NVWFM Files softkey, [120](#)
Delete All WFM Files softkey, [120](#)
Delete All WFM1 Files softkey, [121](#)
Delete File softkey, [121](#)
Delete softkeys
Delete All ARB CDMA Files, [109](#)
Delete All ARB DMOD Files, [109](#)
Delete All ARB DWCDMA Files, [110](#)
Delete All ARB FCDMA Files, [110](#)
Delete All ARB MCDMA Files, [112](#)
Delete All ARB MDMOD Files, [112](#)
Delete All ARB MDWCDMA Files, [112](#)
Delete All ARB MFCDMA Files, [112](#)
Delete All ARB MTONE Files, [113](#)
Delete All ARB RCDMA Files, [113](#)
Delete All ARB UWCDMA Files, [115](#)
Delete All Binary Files, [108](#)

- Delete softkeys (*continued*)
 - Delete All Bit Files, [109](#)
 - Delete All Files, [108](#)
 - Delete All FIR Files, [110](#)
 - Delete All FSK Files, [111](#)
 - Delete All I/Q Files, [111](#)
 - Delete All List Files, [111](#)
 - Delete All SEQ Files, [113](#)
 - Delete All SHAPE Files, [114](#)
 - Delete All State Files, [114](#)
 - Delete All UFLT Files, [114](#)
 - Delete File, [115](#)
- Diagnostic Info softkey, [76](#), [77](#), [78](#), [79](#), [85](#)
- diagnostic subsystem keys
 - Diagnostic Info, [76](#), [77](#), [78](#), [79](#)
 - Installed Board Info, [76](#)
 - Options Info, [77](#), [78](#)
- Diff Data Encode Off On softkey, [504](#), [621](#)
- Diff. Mode I Offset softkey, [24](#)
- Diff. Mode Q Offset softkey, [25](#)
- Digital Modulation Off On softkey, [275](#)
- digital modulation subsystem keys
 - 2.100 MHz, [30](#)
 - 40.000 MHz, [30](#)
 - ALC BW Normal Narrow, [21](#)
 - BBG1, [23](#), [33](#)
 - Burst Envelope Int Ext Off, [21](#)
 - Common Mode I/Q Offset, [24](#)
 - Diff. Mode I Offset, [24](#)
 - Diff. Mode Q Offset, [25](#)
 - Ext 50 Ohm, [23](#), [33](#)
 - Ext 600 Ohm, [23](#), [33](#)
 - Ext In 600 Ohm I Offset, [26](#)
 - Ext In 600 Ohm Q Offset, [26](#)
 - High Crest Mode Off On, [22](#)
 - I Offset, [27](#)
 - I/Q Adjustments Off On, [29](#)
 - I/Q Gain Balance Source 1, [27](#)
 - I/Q Mod Filter Manual Auto, [30](#)
 - I/Q Off On, [34](#)
 - I/Q Out Gain Balance, [25](#)
 - I/Q Output Atten, [26](#)
 - I/Q Skew, [29](#)
 - Int I/Q Skew Corrections RF BB Off, [32](#)
 - Int Phase Polarity Normal Invert, [23](#), [31](#)
- digital modulation subsystem keys (*continued*)
 - Modulator Atten Manual Auto, [31](#)
 - Off, [23](#), [33](#)
 - Q Offset, [28](#)
 - Quadrature Skew, [28](#)
 - Sum, [23](#)
 - Summing Ratio (SRC1/SRC2) x.xx dB, [33](#)
 - Through, [30](#)
- discrete response data, [11](#)
- discrete SCPI parameters, [9](#)
- display contrast hardkeys, [82](#)
- display subsystem keys
 - Brightness, [81](#)
 - display contrast, [82](#)
 - Inverse Video Off On, [82](#)
 - Update in Remote Off On, [82](#)
- DL Reference 1.1 softkey, [978](#)
 - wideband CDMA base band generator subsystem softkeys
 - DL Reference 1.1, [886](#)
- DL Reference 1.2 softkey, [978](#)
 - wideband CDMA base band generator subsystem softkeys
 - DL Reference 1.2, [886](#)
- DL Reference 2.1 softkey, [978](#)
 - wideband CDMA base band generator subsystem softkeys
 - DL Reference 2.1, [886](#)
- DL Reference 2.2 softkey, [978](#)
 - wideband CDMA base band generator subsystem softkeys
 - DL Reference 2.2, [886](#)
- DM0 softkey
 - See* DECT subsystem keys
- DM1 softkey
 - See* DECT subsystem keys
- DMOD softkey, [92](#)
- Dmodulation subsystem keys
 - # of Carriers, [267](#), [270](#)
 - 128QAM, [263](#)
 - 16PSK, [263](#)
 - 16QAM, [263](#)
 - 2.100 MHz, [261](#)
 - 256QAM, [263](#)
 - 2-Lvl FSK, [263](#)

Index

Dmodulation subsystem keys (*continued*)

32QAM, 263
40.000 MHz, 257, 261
4-Lvl FSK, 263
4QAM, 263
64QAM, 263
8PSK, 263
APCO 25 C4FM, 258
APCO 25 w/C4FM, 267, 269
APCO 25 w/C4QPSK, 267, 269
ARB Reference Ext Int, 266
ARB Sample Clock, 266
BPSK, 263
Bus, 273
Carrier Phases Fixed Random, 268
CDPD, 267, 269
Clear Header, 260
Continuous, 272
Custom Digital Mod State, 267, 269
D8PSK, 263
DECT, 267, 269
Digital Modulation Off On, 275
EDGE, 267, 269
Ext, 273
Ext Delay Off On, 274
Ext Delay Time, 274
Ext Polarity Neg Pos, 274
Filter Alpha, 259
Filter BbT, 259
Free Run, 272
Freq Dev, 263
Freq Spacing, 267
Gate Active Low High, 273
Gated, 272
Gaussian, 258
Gray Coded QPSK, 263
GSM, 267, 269
I/Q Mod Filter Manual Auto, 262
I/Q Output Filter Manual Auto, 257
Immediate, 266
Initialize Table, 269
Insert Row, 238, 269
IS-2000 SR3 DS, 258
IS-95, 258
IS-95 Mod, 258

Dmodulation subsystem keys (*continued*)

IS-95 Mod w/EQ, 258
IS-95 OQPSK, 263
IS-95 QPSK, 263
IS-95 w/EQ, 258
Load/Store, 268
Marker 1, 262, 263
Marker 1 Polarity Neg Pos, 264
Marker 2, 262, 263
Marker 2 Polarity Neg Pos, 264
Marker 3, 262, 263
Marker 3 Polarity Neg Pos, 264
Marker 4, 262, 263
Marker 4 Polarity Neg Pos, 265
Modulator Atten Manual Auto, 260, 261
MSK, 263
Multicarrier Off On, 267
NADC, 267, 269
None, 262, 263
Nyquist, 258
Off, 266
On, 266
Optimize FIR For EVM ACP, 259
OQPSK, 263
 $\pi/4$ DQPSK, 263
Patt Trig In 1, 275
Patt Trig In 2, 275
PDC, 267, 269
PHS, 267, 269
PWT, 267, 269
QPSK, 263
Rectangle, 258
Reference Freq, 204, 265
Reset & Run, 272
Root Nyquist, 258
Save Setup To Header, 260
Select File, 238, 267
Single, 272
Store Custom Dig Mod State, 270
Symbol Rate, 270
TETRA, 267, 269
Through, 257, 261
Trigger & Run, 272
Trigger Key, 273
UN3/4 GSM Gaussian, 258

- Dmodulation subsystem keys (*continued*)
 - User FIR, 258
 - WCDMA, 258
- Dn Custom Cont softkey, 834
- Dn Normal Cont softkey, 834
- Dn Normal Disc softkey, 834
- Dn Sync Cont softkey, 834
- Dn Sync Disc softkey, 834
- Do Power Search softkey, 54, 55, 56, 57
- Doppler Shift softkey, 605
- Down Custom softkey, 729, 760
- Down TCH All softkey, 729, 760
- Down TCH softkey, 729, 760
- Down/Up softkey, 860, 908
- Downlink MCS-1 softkey, 580, 582, 631
- Downlink MCS-5 softkey, 585
- Downlink MCS-9 softkey, 585
- DPCCH + 1 DPDCH softkey, 329
- DPCCH + 2 DPDCH softkey, 329
- DPCCH + 3 DPCCH softkey, 329
- DPCCH + 4 DPDCH softkey, 329
- DPCCH + 5 DPDCH softkey, 329
- DPCCH Pilot data-clk (DRPS23) softkey, 874, 876, 877, 878
- DPCCH Power field, 905
- DPCCH Raw Data (RPS4) softkey
 - See* wideband CDMA base band generator subsystem keys and fields
- DPCCH Raw Data Clock (RPS5) softkey
 - See* wideband CDMA base band generator subsystem keys and fields
- DPCCH softkey, 329, 899, 921
- DPCCH TFC I data-clk (DRPS22) softkey, 874, 876, 877, 878
- DPCCH TPC indicator (DRPS21) softkey, 874, 876, 877, 878
- DPCH + 1 softkey, 845, 846
- DPCH + 2 softkey, 845, 846
- DPCH Channel Balance softkey, 853
- DPCH Compressed Frame Indicator (DRPS32) softkey, 874, 876, 877, 878
- DPCH data stream (DRPS24) softkey, 874, 876, 877, 878
- DPCH data-clk (0) (DRPS28) softkey, 874, 876, 877, 878
- DPCH Gap Indicator (DRPS33) softkey, 874, 876, 877, 878
- DPCH softkey, 324
- DPCH TimeSlot pulse (DRPS25) softkey, 874, 876, 877, 878
- DPCH10ms Frame-Pulse (DRPS26) softkey, 874, 876, 877, 878
- DPDCH data-clk withDTX (DRPS20) softkey, 874, 876, 877, 878
- DPDCH data-clk WithOutDTX (DRPS30) softkey, 874, 876, 877, 878
- DPDCH Power field, 913
- DPDCH Raw Data (RPS2) softkey
 - See* wideband CDMA base band generator subsystem keys and fields
- DPDCH Raw DataClock (RPS3) softkey
 - See* wideband CDMA base band generator subsystem keys and fields
- DPDCH softkey, 899
- Drift Deviation softkey, 417
- dual ARB subsystem
 - Through, 279
- dual ARB subsystem keys
 - # Skipped Points, 283
 - 2.100 MHz, 281
 - 40.000 MHz, 279, 281
 - ARB Off On, 293
 - ARB Reference Ext Int, 22, 23, 286
 - ARB Sample Clock, 288
 - Build New Waveform Sequence, 288
 - Bus, 291
 - Clear Header, 278
 - Clipping Type |I+jQ| |I|,|Q|, 277
 - Continuous, 290
 - Edit Repetitions, 288
 - Edit Selected Waveform Sequence, 288
 - Ext, 291
 - Ext Delay Off On, 292
 - Ext Delay Time, 292
 - Ext Polarity Neg Pos, 293
 - First Mkr Point, 281, 283
 - Free Run, 289
 - Gate Active Low High, 290
 - Gated, 289
 - I/Q Mod Filter Manual Auto, 281

Index

dual ARB subsystem keys (*continued*)

I/Q Output Filter Manual Auto, 278, 279
Immediate, 287
Last Mkr Point, 281, 283
Marker 1, 284
Marker 1 2, 281, 283
Marker 1 Polarity Neg Pos, 285
Marker 2, 284
Marker 2 Polarity Neg Pos, 285
Marker 3, 284
Marker 3 Polarity Neg Pos, 285
Marker 4, 284
Marker 4 Polarity Neg Pos, 285
Modulator Atten Manual Auto, 280
None, 284
Off, 287
On, 287
Patt Trig In 1, 291
Patt Trig In 2, 291
Reference Freq, 286
Reset & Run, 289
Save Setup To Header, 278
Scaling, 287
Segment Advance, 289
Select Waveform, 293
Set Marker Off All Points, 282
Single, 289, 290
Through, 279, 281
Toggle Marker 1, 288
Trigger & Run, 289
Trigger Key, 291
Waveform Runtime Scaling, 287
Dual-Sine softkey, 169, 175, 181, 187
Dummy Bearer 1 softkey, 542
Dummy Bearer 2 softkey, 542
Dummy softkey, 640
DWCDMA softkey, 93
Dwell Type List Step softkey, 47

E

Eb/No field, 927
Eb/No value (dB) field, 899
EbNo field, 454
See CDMA2000 BBG subsystem keys and fields
Ec/No value field, 844, 927

EcNo field, 440, 474, 480
EDGE BERT Off On softkey, 389
EDGE Off On softkey, 602
EDGE softkey, 267, 269, 573
EDGE subsystem keys
 128QAM, 576
 16 1's & 16 0's, 570, 578, 580, 585
 16PSK, 576
 16QAM, 576
 256QAM, 576
 2-Lvl FSK, 576
 32 1's & 32 0's, 570, 578, 580, 585
 32QAM, 576
 4 1's & 4 0's, 570, 578, 580, 585
 4-Lvl FSK, 576
 4QAM, 576
 64 1's & 64 0's, 570, 578, 580, 585
 64QAM, 576
 8 1's & 8 0's, 570, 578, 580, 585
 8PSK, 576
 All Timeslots, 595
 APCO 25 C4FM, 573
 BBG Ref Ext Int, 572
 Begin Frame, 595
 Begin Timeslot #, 595, 596
 BPSK, 576
 Bus, 578, 599
 Continuous, 598
 CS-1, 580, 581
 CS-4, 580, 582
 Custom, 595
 Custom TS, 584, 594
 D8PSK, 576
 Data Format Pattern Framed, 569
 Downlink MCS-1, 580, 582
 Downlink MCS-5, 585
 Downlink MCS-9, 585
 EDGE, 573
 EDGE Off On, 602
 E-TCH/F43.2, 585
 Ext, 570, 578, 585, 599
 Ext BBG Ref Freq, 573
 Ext Data Clock Ext Int, 563
 Ext Data Clock Normal Symbol, 572
 Ext Delay Bits, 600

EDGE subsystem keys (*continued*)

Ext Delay Off On, 601
 Ext Polarity Neg Pos, 602
 Fall Delay, 564, 565
 Fall Time, 565, 566
 Filter Alpha, 563
 Filter BbT, 564
 FIX4, 570, 571, 578, 579, 580, 582, 585, 591
 Free Run, 598
 Freq Dev, 574
 G, 579, 592
 Gate Active Low High, 599
 Gated, 598
 Gaussian, 573
 GMSK, 595
 Gray Coded QPSK, 576
 I/Q Scaling, 574
 IS-95, 573
 IS-95 Mod, 573
 IS-95 Mod w/EQ, 573
 IS-95 OQPSK, 576
 IS-95 QPSK, 576
 IS-95 w/EQ, 573
 MSK, 576
 Multislot Off On, 585
 Normal, 595
 Normal All, 595
 Nyquist, 573
 Optimize FIR For EVM ACP, 570
 OQPSK, 576
 $\pi/4$ DQPSK, 576
 Patt Trig In 1, 600
 Patt Trig In 2, 600
 Phase Dev, 575
 Phase Polarity Normal Invert, 576
 PN11, 570, 578, 585
 PN15, 570, 578, 580, 581, 582, 583, 585, 590, 591, 592
 PN20, 570, 578, 585
 PN23, 570, 578, 585
 PN9, 570, 578, 580, 581, 582, 583, 585, 590, 591, 592
 QPSK, 576
 Recall Secondary Frame State, 577
 Rectangle, 573

EDGE subsystem keys (*continued*)

Reset & Run, 598
 Restore EDGE Factory Default, 571
 Rise Delay, 566, 567
 Rise Time, 568
 Root Nyquist, 573
 S, 584
 Save Secondary Frame State, 577
 Secondary Frame Off On, 578
 Sine, 569
 Single, 598
 Symbol Rate, 597
 Sync Out Offset, 596
 T1, 593
 T2, 593
 TCH/FS, 580, 583
 Timeslot Ampl Main Delta, 594
 Timeslot Off On, 594
 Trigger & Run, 598
 Trigger Key, 578, 599
 TSC0, 584, 594
 TSC1, 584, 594
 TSC2, 584, 594
 TSC3, 584, 594
 TSC4, 584, 594
 TSC5, 584, 594
 TSC6, 584, 594
 TSC7, 584, 594
 UN3/4 GSM Gaussian, 573
 Uncoded, 585
 Uplink MCS-1, 580, 583
 Uplink MCS-5, 585
 Uplink MCS-9, 585
 User File, 569, 570, 578, 580, 585
 User FIR, 573
 User FSK, 575, 576
 User I/Q, 576
 Edit Channel Setup softkey, 241, 245
 Edit Repetitions softkey, 288
 Edit Selected Waveform Sequence softkey, 288
 Equal Energy per Symbol softkey, 328
 Equal Powers softkey
 See CDMA ARB subsystem keys
 See CDMA2000 ARB subsystem keys
 See CDMA2000 BBG subsystem keys and fields

Index

Equal Powers softkey (continued)

See wideband CDMA base band generator
subsystem keys and fields

Error BER softkey, [994](#)

Error Bits softkey, [986](#)

Error Blocks field, [987](#)

Error Count softkey, [388](#)

See sense subsystem keys

Error Info softkey, [150](#)

error messages, resolving, [650](#)

Error Out softkey, [360](#)

Error Rate softkey

See calculate subsystem keys

See calculate subsystem keys

ESG file overview, [648](#)

ET softkey, [629](#)

E-TCH/F43.2 softkey, [585](#)

Even Second Delay field, [427](#), [460](#)

Event 1 Polarity Neg Pos softkey, [129](#), [131](#)

Event 2 Polarity Neg Pos softkey, [129](#), [131](#)

Exceeds Any Limit softkey, [350](#)

Exceeds Any Thresholds softkey

See sense subsystem keys

Execute Cal softkey, [66](#), [68](#)

Ext 50 Ohm softkey, [23](#), [33](#)

Ext 600 Ohm softkey, [23](#), [33](#)

Ext BBG Ref Freq softkey

See custom subsystem keys

See EDGE subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

Ext CDMA Freq field, [447](#)

Ext Clock Rate x1 x2 x4 softkey, [843](#)

Ext Data Clock Ext Int softkey

See EDGE subsystem keys

See PDC subsystem keys

Ext Data Clock Normal Symbol softkey

See custom subsystem keys

See DECT subsystem keys

See EDGE subsystem keys

See GSM subsystem keys

See NADC subsystem keys

Ext Data Clock Normal Symbol softkey (continued)

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

Ext Delay Bits softkey

See custom subsystem keys

See DECT subsystem keys

See EDGE subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

Ext Delay Off On softkey

See CDMA ARB subsystem keys

See CDMA2000 ARB subsystem keys

See custom subsystem keys

See DECT subsystem keys

See Dmodulation subsystem keys

See dual ARB subsystem keys

See EDGE subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

See wideband CDMA ARB subsystem keys

Ext Delay Time softkey, [226](#), [254](#), [274](#), [292](#), [339](#)

Ext Frame Trigger Delay softkey, [373](#)

Ext In 600 Ohm I Offset softkey, [26](#)

Ext In 600 Ohm Q Offset softkey, [26](#)

Ext Polarity Neg Pos softkey

See CDMA ARB subsystem keys

See CDMA2000 ARB subsystem keys

See custom subsystem keys

See DECT subsystem keys

See Dmodulation subsystem keys

See dual ARB subsystem keys

See EDGE subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

See wideband CDMA ARB subsystem keys

- Ext softkey
 - See amplitude modulation subsystem keys
 - See CDMA ARB subsystem keys
 - See CDMA2000 ARB subsystem keys
 - See CDMA2000 BBG subsystem keys and fields
 - See custom subsystem keys
 - See DECT subsystem keys
 - See Dmodulation subsystem keys
 - See dual ARB subsystem keys
 - See EDGE subsystem keys
 - See frequency modulation subsystem keys
 - See GSM subsystem keys
 - See list/sweep subsystem keys
 - See low frequency output subsystem keys
 - See NADC subsystem keys
 - See PDC subsystem keys
 - See phase modulation subsystem keys
 - See PHS subsystem keys
 - See sense subsystem keys
 - See TETRA subsystem keys
 - See trigger subsystem keys
 - See wideband CDMA ARB subsystem keys
 - See wideband CDMA base band generator subsystem keys and fields
- Ext softkeys
 - Ext Coupling DC AC, [167](#), [174](#), [185](#)
 - Ext Detector, [58](#)
 - Ext Pulse, [194](#)
 - Ext1, [170](#), [177](#), [188](#)
 - Ext2, [170](#), [177](#), [188](#)
- extended numeric SCPI parameter, [8](#)
- External Frame Trigger Polarity Neg Pos softkey, [374](#)
- External softkey, [459](#)
- F**
- FACC softkey
 - See DECT subsystem keys
- Fail Hold softkey, [351](#)
- Fall Delay softkey
 - See custom subsystem keys
 - See DECT subsystem keys
 - See EDGE subsystem keys
 - See GSM subsystem keys
 - See NADC subsystem keys
- Fall Delay softkey (continued)
 - See PDC subsystem keys
 - See PHS subsystem keys
 - See TETRA subsystem keys
- Fall Time softkey
 - See custom subsystem keys
 - See DECT subsystem keys
 - See EDGE subsystem keys
 - See GSM subsystem keys
 - See NADC subsystem keys
 - See PDC subsystem keys
 - See PHS subsystem keys
 - See TETRA subsystem keys
- Falling softkey, [494](#)
- FBI State field, [904](#)
- FCDMA softkey, [93](#)
- FCOR softkey, [823](#), [828](#)
- FCorr softkey, [640](#)
- FDEV1_FS softkey
 - See DECT subsystem keys
- FDEV1_HS softkey
 - See DECT subsystem keys
- FDEV2_FS softkey
 - See DECT subsystem keys
- Field 1 field, [437](#)
- Field 2 field, [437](#)
- Field 3 field, [438](#)
- file
 - systems, [118](#)
 - types, [118](#)
- file overview, HDSPA, [648](#)
- Filter Alpha softkey, [919](#)
 - See CDMA ARB subsystem keys
 - See CDMA2000 ARB subsystem keys
 - See CDMA2000 BBG subsystem keys and fields
 - See custom subsystem keys
 - See DECT subsystem keys
 - See Dmodulation subsystem keys
 - See EDGE subsystem keys
 - See GPS subsystem keys
 - See GSM subsystem keys
 - See NADC subsystem keys
 - See PDC subsystem keys
 - See PHS subsystem keys
 - See TETRA subsystem keys

Index

Filter Alpha softkey, 919 (continued)

See wideband CDMA ARB subsystem keys

*See wideband CDMA base band generator
subsystem keys and fields*

Filter BbT softkey, 919

See CDMA ARB subsystem keys

See CDMA2000 ARB subsystem keys

See CDMA2000 BBG subsystem keys and fields

See custom subsystem keys

See DECT subsystem keys

See Dmodulation subsystem keys

See EDGE subsystem keys

See GPS subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

See wideband CDMA ARB subsystem keys

*See wideband CDMA base band generator
subsystem keys and fields*

FIR softkey, 94

First Mkr Point softkey, 281, 283

First Spread Code softkey, 323, 331

FIX softkey, 904

FIX4 softkey, 582, 903, 930, 934

See CDMA2000 BBG subsystem keys and fields

See custom subsystem keys

See DECT subsystem keys

See EDGE subsystem keys

See GPS subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

*See wideband CDMA baseband generator
subsystem keys and fields*

Flat Noise BW field, 900

Flatness Off On softkey, 20

FM softkeys

FM Dev, 178

FM Dev Couple Off On, 178

FM Off On, 177

FM Path 1 2, 173

FM softkeys (continued)

FM Stop Rate, 175

FM Sweep Rate, 176

FM Tone 2 Amp Percent of Peak, 175

FM Tone 2 Rate, 175

forgiving listening and precise talking, 7

Frame Clock Polarity Neg Pos softkey, 918

Frame Count softkey

See sense subsystem keys

Frame Erasure softkey, 399

See calculate subsystem keys

Frame Length field

See CDMA2000 BBG subsystem keys and fields

Frame Offset field

See CDMA2000 BBG subsystem keys and fields

Frame offset field, 483

Frame Repeat Single Cont softkey, 720

Frame Struct field, 881

Frame Sync Trigger Mode Single Cont softkey, 973

Frame Trigger Source Int Ext softkey, 374

Free Run softkey

See amplitude modulation subsystem keys

See CDMA ARB subsystem keys

See CDMA2000 ARB subsystem keys

See custom subsystem keys

See DECT subsystem keys

See Dmodulation subsystem keys

See dual ARB subsystem keys

See EDGE subsystem keys

See frequency modulation subsystem keys

See GSM subsystem keys

See list/sweep subsystem keys

See low frequency output subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See phase modulation subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

See trigger subsystem keys

See wideband CDMA ARB subsystem keys

Freq Dev softkey

See custom subsystem keys

See DECT subsystem keys

See Dmodulation subsystem keys

See EDGE subsystem keys

Freq Dev softkey (continued)

- See* GSM subsystem keys
- See* NADC subsystem keys
- See* PDC subsystem keys
- See* TETRA subsystem keys

Freq softkeys

- Freq, [38, 45](#)
- Freq & Ampl, [45](#)
- Freq Channels Off On, [37](#)
- Freq Drift Type Linear Sine, [417](#)
- Freq Multiplier, [39](#)
- Freq Offset, [39, 40, 418](#)
- Freq Ref Off On, [41](#)
- Freq Ref Set, [40](#)
- Freq Spacing, [267, 302, 303](#)
- Freq Start, [41, 45](#)
- Freq Stop, [41, 45](#)

Frequency hardkey, [35, 38, 42](#)

frequency modulation subsystem keys

- Bus, [176](#)
- Dual-Sine, [175](#)
- Ext, [176](#)
- Ext Coupling DC AC, [174](#)
- Ext1, [177](#)
- Ext2, [177](#)
- FM Dev, [178](#)
- FM Dev Couple Off On, [178](#)
- FM Off On, [177](#)
- FM Path 1 2, [173](#)
- FM Stop Rate, [175](#)
- FM Sweep Rate, [176](#)
- FM Tone 2 Amp Percent of Peak, [175](#)
- FM Tone 2 Rate, [175](#)
- Free Run, [176](#)
- Incr Set, [173](#)
- Internal 1, [177](#)
- Internal 2, [177](#)
- Noise, [175](#)
- Ramp, [175](#)
- Sine, [175](#)
- Square, [175](#)
- Swept-Sine, [175](#)
- Triangle, [175](#)
- Trigger Key, [176](#)

frequency subsystem keys

- Adjust Phase, [43](#)
- Channel Number, [36](#)
- Freq, [38, 45](#)
- Freq Channels Off On, [37](#)
- Freq Multiplier, [39](#)
- Freq Offset, [39, 40](#)
- Freq Ref Off On, [41](#)
- Freq Ref Set, [40](#)
- Freq Start, [41, 45](#)
- Freq Stop, [41, 45](#)
- Frequency, [35, 38, 42](#)
- Off, [38, 45](#)
- Phase Ref Set, [43](#)
- Ref Oscillator Source Auto Off On, [44](#)

FSK softkey, [94](#)

FSYNCH Type field, [451](#)

Full softkey, [475, 480](#)

Function Generator softkey, [182](#)

G

G softkey, [579, 592](#)

Gain Unit dB Lin Index softkey, [332](#)

Gate Active Low High softkey

- See* CDMA ARB subsystem keys
- See* CDMA2000 ARB subsystem keys
- See* custom subsystem keys
- See* DECT subsystem keys
- See* Dmodulation subsystem keys
- See* dual ARB subsystem keys
- See* EDGE subsystem keys
- See* GSM subsystem keys
- See* NADC subsystem keys
- See* PDC subsystem keys
- See* PHS subsystem keys
- See* TETRA subsystem keys
- See* wideband CDMA ARB subsystem keys

Gate Clk Delay softkey, [363](#)

Gate Delay Off On softkey, [364](#)

Gate Mode Time Clk softkey, [363](#)

Gate Off On softkey, [365](#)

Gate Polarity Neg Pos softkey, [364](#)

Gate Time Delay softkey, [364](#)

Gated softkey

- See* CDMA ARB subsystem keys

Index

Gated softkey (continued)

- See* CDMA2000 ARB subsystem keys
- See* custom subsystem keys
- See* DECT subsystem keys
- See* Dmodulation subsystem keys
- See* dual ARB subsystem keys
- See* EDGE subsystem keys
- See* GSM subsystem keys
- See* NADC subsystem keys
- See* PDC subsystem keys
- See* PHS subsystem keys
- See* TETRA subsystem keys
- See* wideband CDMA ARB subsystem keys

Gaussian softkey

- See* CDMA ARB subsystem keys
- See* CDMA2000 ARB subsystem keys
- See* CDMA2000 BBG subsystem keys and fields
- See* custom subsystem keys
- See* DECT subsystem keys
- See* Dmodulation subsystem keys
- See* EDGE subsystem keys
- See* GPS subsystem keys
- See* GSM subsystem keys
- See* NADC subsystem keys
- See* PDC subsystem keys
- See* PHS subsystem keys
- See* TETRA subsystem keys
- See* wideband CDMA ARB subsystem keys
- See* wideband CDMA base band generator subsystem keys and fields

GMSK softkey, 595

Goto Row softkey, 300

GPIB Address softkey, 70

GPS Ref (f0) softkey, 609

GPS Ref Clk Ext Int softkey, 608

GPS subsystem

- Data Mode Raw Enc TLM, 604

GPS subsystem keys

- APCO 25 C4FM, 605
- Data Mode Raw Enc TLM, 604
- Doppler Shift, 605
- Filter Alpha, 606
- Filter BbT, 606
- FIX4, 604
- Gaussian, 605

GPS subsystem keys (continued)

- GPS Ref (f0), 609
- GPS Ref Clk Ext Int, 608
- IQ Phase Normal Invert, 607
- IS-95, 605
- IS-95 Mod, 605
- IS-95 Mod w/EQ, 605
- IS-95 w/EQ, 605
- Nyquist, 605
- Optimize FIR For EVM ACP, 607
- P Code Pwr, 608
- PN15, 604
- PN9, 604
- Ranging Code C/A P C/A+P, 608
- Real-time GPS Off On, 610
- Rectangle, 605
- Root Nyquist, 605
- Satellite ID, 609
- UN3/4 GSM Gaussian, 605
- User File, 604
- User FIR, 605

Gray Coded QPSK softkey

- See* custom subsystem keys
- See* DECT subsystem keys
- See* Dmodulation subsystem keys
- See* EDGE subsystem keys
- See* GSM subsystem keys
- See* NADC subsystem keys
- See* PDC subsystem keys
- See* PHS subsystem keys
- See* TETRA subsystem keys

GSM BERT Off On softkey, 402

GSM Off On softkey, 647

GSM softkey, 267, 269

GSM subsystem keys

- 128QAM, 626
- 16 1's & 16 0's, 620, 628, 630, 631, 639
- 16PSK, 626
- 16QAM, 626
- 256QAM, 626
- 2-Lvl FSK, 626
- 32 1's & 32 0's, 620, 628, 630, 631, 639
- 32QAM, 626
- 4 1's & 4 0's, 620, 628, 630, 631, 639
- 4-Lvl FSK, 626

GSM subsystem keys (*continued*)

4QAM, 626
64 1's & 64 0's, 620, 628, 630, 631, 639
64QAM, 626
8 1's & 8 0's, 620, 628, 630, 631, 639
8PSK, 626
Access, 640
All Timeslots, 640
APCO 25 C4FM, 623
BBG Data Clock Ext Int, 611
BBG Ref Ext Int, 622
Begin Frame, 640
Begin Timeslot #, 640, 641
BPSK, 626
Bus, 628, 645
Continuous, 643
CS-1, 631
CS-4, 636
Custom, 640
Custom TS, 631, 638
D8PSK, 626
Data Format Pattern Framed, 619
Diff Data Encode Off On, 621
Downlink MCS-1, 631
Dummy, 640
ET, 629
Ext, 620, 628, 630, 639, 645
Ext BBG Ref Freq, 528, 623
Ext Data Clock Normal Symbol, 622
Ext Delay Bits, 646
Ext Delay Off On, 647
Ext Polarity Neg Pos, 647
Fall Delay, 614, 615
Fall Time, 614, 616
FCorr, 640
Filter Alpha, 611
Filter BbT, 612
FIX4, 620, 628, 629, 630, 631, 636, 639
Free Run, 644
Freq Dev, 624
Gate Active Low High, 644
Gated, 643
Gaussian, 623
Gray Coded QPSK, 626
GSM Off On, 647

GSM subsystem keys (*continued*)

I/Q Scaling, 624
IS-95, 623
IS-95 Mod, 623
IS-95 Mod w/EQ, 623
IS-95 OQPSK, 626
IS-95 QPSK, 626
IS-95 w/EQ, 623
MSK, 626
Multislot Off On, 631
Normal, 640
Normal All, 640
Nyquist, 623
Optimize FIR For EVM ACP, 620
OQPSK, 626
 $\pi/4$ DQPSK, 626
Patt Trig In 1, 645
Patt Trig In 2, 645
Phase Dev, 625
Phase Polarity Normal Invert, 627
PN11, 620, 639
PN15, 620, 628, 630, 631, 635, 636, 637, 639
PN20, 620, 639
PN23, 620, 639
PN9, 620, 628, 630, 631, 635, 636, 637, 639
PN9 Mode Normal Quick, 613
QPSK, 626
Recall Secondary Frame State, 627
Rectangle, 623
Reset & Run, 644
Restore Factory Default, 621
Rise Delay, 616, 617
Rise Time, 617, 618
Root Nyquist, 623
S, 637
Save Secondary Frame State, 627
Secondary Frame Off On, 628
Sine, 619
Single, 643
SS, 630
Symbol Rate, 642
Sync, 640
Sync Out Offset, 641
TCH/FS, 631
Timeslot Ampl Main Delta, 638

Index

GSM subsystem keys (*continued*)

Timeslot Off On, 638
Trigger & Run, 644
Trigger Key, 628, 645
TS, 639
TSC0, 631, 638
TSC1, 631, 638
TSC2, 631, 638
TSC3, 631, 638
TSC4, 631, 638
TSC5, 631, 638
TSC6, 631, 638
TSC7, 631, 638
UN3/4 GSM Gaussian, 623
Uplink MCS-1, 631
User File, 619, 620, 628, 630, 631, 639
User FIR, 623
User FSK, 625, 626
User I/Q, 626

H

Half softkey, 475, 480
Header field, 433, 443
Help Mode Single Cont softkey, 150, 151
hexadecimal values, 15
High Amplitude softkey
 See sense subsystem keys
High Crest Mode Off On softkey, 22
Higher Layer softkey, 974
Hostname softkey, 71
HSDPA file overview, 648
HSDPA over W-CDMA SCPI commands, 648
HSDPA user files, 648

I

I Offset softkey, 27
I/Q Adjustments Off On softkey, 29
I/Q Calibration softkey, 66
I/Q Gain Balance Source 1 softkey, 27
I/Q Mapping Normal Invert softkey, 212, 236, 311
I/Q Mod Filter Manual Auto softkey, 30, 202, 214,
 235, 262, 281, 297, 313, 421
I/Q Off On softkey, 34
I/Q Out Gain Balance softkey, 25

I/Q Output Atten softkey, 26
I/Q Output Filter Manual Auto softkey, 199, 209,
 231, 257, 278, 279, 295, 311, 414
I/Q Scaling softkey
 See custom subsystem keys
 See DECT subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
I/Q Skew softkey, 29
I/Q softkey, 95
IDLE softkey, 780, 798
IEEE 488.2 common command keys
 Diagnostic Info, 85
 RECALL Reg, 87
 Run Complete Self Test, 89
 Save Reg, 88
 Save Seq[n] Reg[nn], 88
 Select Seq, 87
Immediate softkey, 218, 249, 266, 287
 See sense subsystem keys
Impairments Off On softkey, 415
Impedance 75 Ohm High softkey, 367
Incr Set hardkey
 See amplitude modulation subsystem keys
 See frequency modulation subsystem keys
 See phase modulation subsystem keys
Increment Scramble Code softkey, 318
Increment Timing Offset softkey, 321
Infinity softkey, 885, 977
Init Power field, 922
Init Pwr field, 939, 955
Initial Bit Count softkey, 388
Initial Block Count softkey, 377, 381
Initial Frame Count softkey, 398
Initialize Phase Fixed Random softkey, 304
Initialize Table softkey, 269
input subsystem keys
 0.7V, 368
 1.4V, 368
 1.6V, 368
 2.5V, 368

- input subsystem keys (*continued*)
 - Clock Delay Off On, 366
 - Clock Polarity Neg Pos, 366
 - Clock Time Delay, 366
 - Data Polarity Neg Pos, 367
 - Gate Clk Delay, 363
 - Gate Delay Off On, 364
 - Gate Mode Time Clk, 363
 - Gate Off On, 365
 - Gate Polarity Neg Pos, 364
 - Gate Time Delay, 364
 - Impedance 75 Ohm High, 367
 - Resolution, 365
- Insert Row softkey, 238, 241, 245, 269
- Installed Board Info softkey, 76
- Int I/Q Skew Corrections RF BB Off softkey, 32
- Int softkeys
 - Int Doublet, 194
 - Int Free-Run, 194
 - Int Gated, 194
 - Int Phase Polarity Normal Invert, 23, 31
 - Int Triggered, 194
- integer response data, 10
- Intermod softkey, 888
- Internal softkeys
 - Internal, 58, 170, 459
 - Internal 1, 177, 188
 - Internal 2, 177, 188
 - Internal Monitor, 182
 - Internal Square, 194
- Inverse Video Off On softkey, 82
- Inverted softkey, 464
- IP Address softkey, 71
- IQ Phase Normal Invert softkey, 607
- IS-2000 SR3 DS softkey
 - See* CDMA ARB subsystem keys
 - See* CDMA2000 ARB subsystem keys
 - See* Dmodulation subsystem keys
 - See* wideband CDMA ARB subsystem keys
- IS-95 Mod softkey
 - See* CDMA ARB subsystem keys
 - See* CDMA2000 ARB subsystem keys
 - See* CDMA2000 BBG subsystem keys and fields
 - See* custom subsystem keys
 - See* DECT subsystem keys
- IS-95 Mod softkey (*continued*)
 - See* Dmodulation subsystem keys
 - See* EDGE subsystem keys
 - See* GPS subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* TETRA subsystem keys
 - See* wideband CDMA ARB subsystem keys
 - See* wideband CDMA base band subsystem keys and fields
- IS-95 Mod w/EQ softkey
 - See* CDMA ARB subsystem keys
 - See* CDMA2000 ARB subsystem keys
 - See* CDMA2000 BBG subsystem keys and fields
 - See* custom subsystem keys
 - See* DECT subsystem keys
 - See* Dmodulation subsystem keys
 - See* EDGE subsystem keys
 - See* GPS subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* TETRA subsystem keys
 - See* wideband CDMA ARB subsystem keys
 - See* wideband CDMA base band generator subsystem keys and fields
- IS-95 OQPSK softkey
 - See* custom subsystem keys
 - See* DECT subsystem keys
 - See* Dmodulation subsystem keys
 - See* EDGE subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* TETRA subsystem keys
- IS-95 QPSK softkey
 - See* custom subsystem keys
 - See* DECT subsystem keys
 - See* Dmodulation subsystem keys
 - See* EDGE subsystem keys
 - See* GSM subsystem keys

Index

IS-95 QPSK softkey (continued)

- See NADC subsystem keys
- See PDC subsystem keys
- See PHS subsystem keys
- See TETRA subsystem keys

IS-95 softkey

- See CDMA ARB subsystem keys
- See CDMA2000 ARB subsystem keys
- See CDMA2000 BBG subsystem keys and fields
- See custom subsystem keys
- See DECT subsystem keys
- See Dmodulation subsystem keys
- See EDGE subsystem keys
- See GPS subsystem keys
- See GSM subsystem keys
- See NADC subsystem keys
- See PDC subsystem keys
- See PHS subsystem keys
- See TETRA subsystem keys
- See wideband CDMA ARB subsystem keys
- See wideband CDMA base band generator subsystem keys and fields

IS-95 w/EQ softkey

- See CDMA ARB subsystem keys
- See CDMA2000 ARB subsystem keys
- See CDMA2000 BBG subsystem keys and fields
- See custom subsystem keys
- See DECT subsystem keys
- See Dmodulation subsystem keys
- See EDGE subsystem keys
- See GPS subsystem keys
- See GSM subsystem keys
- See NADC subsystem keys
- See PDC subsystem keys
- See PHS subsystem keys
- See TETRA subsystem keys
- See wideband CDMA ARB subsystem keys

IS-97 Levels softkey, 220

L

- Last Mkr Point softkey, 281, 283
- Leap Seconds field, 448
- Left Alternate softkey, 323
- Left softkey, 849

LF Out softkeys

- LF Out Amplitude, 179
- LF Out Off On, 183
- LF Out Stop Freq, 179, 180, 186
- LF Out Sweep Rate, 180, 181
- LF Out Sweep Time, 181
- LF Out Tone 2 Ampl % of Peak, 180
- LF Out Tone 2 Freq, 179, 180, 186

Link Down Up softkey, 313, 896

Link Forward Reverse softkey, 236, 426

List softkey, 95, 118

list/sweep subsystem keys

- # Points, 53
- Ampl, 45, 60
- Ampl Start, 45, 61
- Ampl Stop, 45, 62
- Bus, 50
- Dwell Type List Step, 47
- Ext, 50
- Free Run softkey, 50
- Freq, 38, 45
- Freq & Ampl, 45
- Freq Start, 41, 45
- Freq Stop, 41, 45
- Load List From Step Sweep, 51
- Manual Mode Off On, 48
- Manual Point, 48
- Off, 38, 45, 60
- Preset List, 52
- Step Dwell, 52
- Sweep Direction Down Up, 45
- Sweep Retrace Off On, 50
- Sweep Type List Step, 51
- Trigger Key, 50

Load From Selected File softkey, 18, 116, 122, 301

Load List From Step Sweep softkey, 51

Load/Store softkey, 268

Long Code Mask field, 462

Long Code State field, 430, 463

Low Amplitude softkey, 376, 379

- See sense subsystem keys

Low Capacity softkey, 532, 542

Low Capacity with Z field softkey, 532, 542

low frequency output subsystem keys

- Bus, 182

low frequency output subsystem keys (*continued*)

DC, [181](#)
 Dual-Sine, [181](#)
 Ext, [182](#)
 Free Run, [182](#)
 Function Generator, [182](#)
 Internal Monitor, [182](#)
 LF Out Amplitude, [179](#)
 LF Out Off On, [183](#)
 LF Out Stop Freq, [179](#), [180](#), [186](#)
 LF Out Sweep Rate, [180](#), [181](#)
 LF Out Sweep Time, [181](#)
 LF Out Tone 2 Ampl % of Peak, [180](#)
 LF Out Tone 2 Freq, [179](#), [180](#), [186](#)
 Noise, [181](#)
 Ramp, [181](#)
 Sine, [181](#)
 Square, [181](#)
 Swept-Sine, [181](#)
 Triangle, [181](#)
 Trigger Key, [182](#)
 LTM OFF field, [448](#)

M

Manual Mode Off On softkey, [48](#)
 Manual Point softkey, [48](#)
 Marker 1 2 softkey, [281](#), [283](#)
 Marker 1 Polarity Neg Pos softkey, [203](#), [215](#), [247](#),
[264](#), [285](#), [298](#), [334](#), [422](#)
 Marker 1 softkey, [202](#), [203](#), [214](#), [215](#), [246](#), [247](#), [262](#),
[263](#), [284](#), [297](#), [298](#), [333](#), [334](#), [421](#), [422](#)
 Marker 2 Polarity Neg Pos softkey, [203](#), [216](#), [247](#),
[264](#), [285](#), [298](#), [334](#), [422](#)
 Marker 2 softkey, [202](#), [203](#), [214](#), [215](#), [246](#), [247](#), [262](#),
[263](#), [284](#), [297](#), [298](#), [333](#), [334](#), [421](#), [422](#)
 Marker 3 Polarity Neg Pos softkey, [204](#), [216](#), [248](#),
[264](#), [285](#), [299](#), [335](#), [423](#)
 Marker 3 softkey, [202](#), [203](#), [214](#), [215](#), [246](#), [247](#), [262](#),
[263](#), [284](#), [297](#), [298](#), [333](#), [334](#), [421](#), [422](#)
 Marker 4 Polarity Neg Pos softkey, [204](#), [216](#), [248](#),
[265](#), [285](#), [299](#), [335](#), [423](#)
 Marker 4 softkey, [202](#), [203](#), [214](#), [215](#), [246](#), [247](#), [262](#),
[263](#), [284](#), [297](#), [298](#), [333](#), [334](#), [421](#), [422](#)
 mass memory subsystem keys
 Binary, [118](#)

mass memory subsystem keys (*continued*)

Copy File, [119](#)
 Delete All NVWFM Files, [120](#)
 Delete All WFM Files, [120](#)
 Delete All WFM1 Files, [121](#)
 Delete File, [121](#)
 List, [118](#)
 Load From Selected File, [122](#)
 Rename File, [122](#)
 State, [118](#)
 Store To File, [123](#)
 User Flatness, [118](#)
 Max Input softkey, [888](#)
 Max Power field, [922](#)
 Max Pwr field, [940](#), [955](#)
 MCDMA softkey, [95](#)
 MDMOD softkey, [96](#)
 MDWCDMA softkey, [96](#)
 Measurement Mode BER% Search softkey, [397](#)
 Measurement Mode BLER% Search softkey, [383](#)
 memory subsystem keys
 Add Comment To Seq[n] Reg[nn], [116](#)
 All, [101](#), [115](#)
 Binary, [91](#)
 Bit, [91](#)
 CDMA, [92](#)
 Copy File, [101](#), [106](#), [107](#)
 Delete All ARB CDMA Files, [109](#)
 Delete All ARB DMOD Files, [109](#)
 Delete All ARB DWCDMA Files, [110](#)
 Delete All ARB FCDMA Files, [110](#)
 Delete All ARB MCDMA Files, [112](#)
 Delete All ARB MDWCDMA Files, [112](#)
 Delete All ARB MTONE Files, [113](#)
 Delete All ARB RCDMA Files, [113](#)
 Delete All ARB UWCDMA Files, [115](#)
 Delete All Binary Files, [108](#)
 Delete All Bit Files, [109](#)
 Delete All Files, [108](#)
 Delete All FIR Files, [110](#)
 Delete All FSK Files, [111](#)
 Delete All I/Q Files, [111](#)
 Delete All List Files, [111](#)
 Delete All MDMOD Files, [112](#)
 Delete All MFCDMA Files, [112](#)

Index

memory subsystem keys (*continued*)

Delete All SEQ Files, 113
Delete All SHAPE Files, 114
Delete All State Files, 114
Delete All UFLT Files, 114
Delete File, 115
DMOD, 92
DWCDMA, 93
FCDMA, 93
FIR, 94
FSK, 94
I/Q, 95
List, 95
Load From Selected File, 116
MCDMA, 95
MDMOD, 96
MDWCDMA, 96
MFCDMA, 97
MTONE, 97
Oversample Ratio, 104
RCDMA, 98
Rename File, 116
SEQ, 98
SHAPE, 99
State, 99
Store To File, 117
User Flatness, 100
UWCDMA, 100
Message Data Raw Data (RPS11) softkey
 See wideband CDMA base band generator
 subsystem keys and fields
Message Part field, 938
Message Pulse (RPS22) softkey
 See wideband CDMA base band generator
 subsystem keys and fields
Message Type field, 449
Message-Control Raw Data Clock (RPS12) softkey
 See wideband CDMA base band generator
 subsystem keys and fields
Meter Address softkeys, 72
Meter Channel A B softkey, 72
Meter Timeout softkey, 73
MFCDMA softkey, 97
Min Power field, 923
Mod Index softkey, 418

Mod On/Off hardkey, 124
Modulator Atten Manual Auto softkey, 31, 200,
 201, 213, 234, 260, 261, 280, 295, 296, 312,
 419, 420
Msg Ctrl softkey, 928
Msg Data softkey, 928
Msg Pwr field, 938, 953
MSK softkey
 See custom subsystem keys
 See DECT subsystem keys
 See Dmodulation subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
MTONE softkey, 97
Multicarrier Off On softkey, 219, 236, 267
Multislot Off On softkey, 585, 631
Multitone Off On softkey, 304
multitone subsystem keys
 2.100 MHz, 296
 40.000 MHz, 295, 296
 ARB Reference Ext Int, 300
 ARB Sample Clock, 301
 Clear Header, 294
 Freq Spacing, 302, 303
 Goto Row, 300
 I/Q Mod Filter Manual Auto, 297
 I/Q Output Filter Manual Auto, 295
 Initialize Phase Fixed Random, 304
 Load From Selected File, 301
 Marker 1, 297, 298
 Marker 1 Polarity Neg Pos, 298
 Marker 2, 297, 298
 Marker 2 Polarity Neg Pos, 298
 Marker 3, 297, 298
 Marker 3 Polarity Neg Pos, 299
 Marker 4, 297, 298
 Marker 4 Polarity Neg Pos, 299
 Modulator Atten Manual Auto, 295, 296
 Multitone Off On, 304
 None, 297, 298
 Number Of Tones, 302, 303

multitone subsystem keys (*continued*)

Random Seed Fixed Random, 304

Reference Freq, 299

Save Setup To Header, 294

Store To File, 302

Through, 295, 296

Toggle State, 300, 302

mV softkey, 164

mVemf softkey, 164

N

N Power field, 900, 928

NADC Off On softkey, 735

NADC softkey, 267, 269

NADC subsystem keys

128QAM, 719

16 1's & 16 0's, 713, 722, 724, 726, 728

16PSK, 719

16QAM, 719

256QAM, 719

2-Lvl FSK, 719

32 1's & 32 0's, 713, 722, 724, 726, 728

32QAM, 719

4 1's & 4 0's, 713, 722, 724, 726, 728

4-Lvl FSK, 719

4QAM, 719

64 1's & 64 0's, 713, 722, 724, 726, 728

64QAM, 719

8 1's & 8 0's, 713, 722, 724, 726, 728

8PSK, 719

All Timeslots, 729

APCO 25 C4FM, 716

BBG Data Clock Ext Int, 704

BBG Ref Ext Int, 715

Begin Frame, 729

Begin Timeslot #, 729, 730

BPSK, 719

Bus, 721, 732

CDL, 723

CDVCC, 723, 727

Continuous, 732

D8PSK, 719

Data Format Pattern Framed, 712

Down Custom, 729

Down TCH, 729

NADC subsystem keys (*continued*)

Down TCH All, 729

Ext, 713, 721, 722, 724, 726, 728, 732

Ext BBG Ref Freq, 716

Ext Data Clock Normal Symbol, 715

Ext Delay Bits, 734

Ext Delay Off On, 735

Ext Polarity Neg Pos, 735

Fall Delay, 707, 708

Fall Time, 708, 709

Filter Alpha, 704

Filter BbT, 705

FIX4, 713, 714, 722, 723, 724, 725, 726, 728

Frame Repeat Single Cont, 720

Free Run, 733

Freq Dev, 718

Gate Active Low High, 733

Gated, 732

Gaussian, 716

Gray Coded QPSK, 719

I/Q Scaling, 717

IS-95, 716

IS-95 Mod, 716

IS-95 Mod w/EQ, 716

IS-95 OQPSK, 719

IS-95 QPSK, 719

IS-95 w/EQ, 716

MSK, 719

NADC Off On, 735

Nyquist, 716

Optimize FIR For EVM ACP, 713

OQPSK, 719

$\pi/4$ DQPSK, 719

Patt Trig In 1, 734

Patt Trig In 2, 734

Phase Dev, 718

PN11, 713, 722, 724, 726, 728

PN15, 713, 722, 724, 726, 728

PN20, 713, 722, 724, 726, 728

PN23, 713, 722, 724, 726, 728

PN9, 713, 722, 724, 726, 728

PN9 Mode Normal Quick, 706

Polarity Normal Invert, 720

QPSK, 719

Rate Full Half, 717

Index

- NADC subsystem keys (*continued*)
 - Recall Secondary Frame State, [721](#)
 - Rectangle, [716](#)
 - Reset & Run, [733](#)
 - Restore NADC Factory Default, [714](#)
 - Rise Delay, [709](#), [710](#)
 - Rise Time, [711](#)
 - Root Nyquist, [716](#)
 - SACCH, [724](#), [727](#)
 - Save Secondary Frame State, [721](#)
 - Secondary Frame Off On, [722](#)
 - Sine, [707](#), [712](#)
 - Single, [732](#)
 - Symbol Rate, [730](#)
 - SYNC, [724](#), [727](#)
 - Sync Out Offset, [729](#)
 - Timeslot Ampl Main Delta, [725](#)
 - Timeslot Off On, [726](#)
 - Trigger & Run, [733](#)
 - Trigger Key, [721](#), [732](#)
 - UN3/4 GSM Gaussian, [716](#)
 - Up Custom, [729](#)
 - Up TCH, [729](#)
 - Up TCH All, [729](#)
 - User File, [707](#), [712](#), [713](#), [722](#), [724](#), [726](#), [728](#)
 - User FIR, [716](#)
 - User FSK, [719](#)
 - User I/Q, [719](#)
 - Network ID field, [449](#)
 - No Limits softkey
 - See* calculate subsystem keys
 - No Thresholds softkey
 - See* sense subsystem keys
 - Noise Off On softkey, [453](#), [464](#)
 - Noise Seed Fixed Random softkey, [206](#)
 - Noise Seed softkey, [416](#)
 - Noise softkey, [169](#), [175](#), [181](#), [187](#)
 - NONE (RPS0) softkey
 - See* wideband CDMA base band generator subsystem keys and fields
 - NONE softkey, [984](#)
 - None softkey, [202](#), [203](#), [214](#), [215](#), [246](#), [247](#), [262](#), [263](#), [284](#), [297](#), [298](#), [333](#), [334](#), [421](#), [422](#), [511](#), [891](#), [893](#), [989](#), [997](#)
 - Normal All softkey, [595](#), [640](#)
 - Normal softkey, [464](#), [595](#), [640](#), [849](#)
 - Num of Blk field, [990](#), [998](#)
 - Num of Pre field, [939](#), [954](#)
 - Number of AICH field, [925](#)
 - Number of PRACH 80ms field, [938](#)
 - Number of PRACH field, [951](#), [954](#)
 - Number of Preamble field, [954](#)
 - Number Of Tones softkey, [302](#), [303](#)
 - numeric boolean response data, [11](#)
 - numeric SCPI parameter, [8](#)
 - numeric, extended SCPI parameter, [8](#)
 - Nyquist softkey
 - See* CDMA ARB subsystem keys
 - See* CDMA2000 ARB subsystem keys
 - See* CDMA2000 BBG subsystem keys and fields
 - See* custom subsystem keys
 - See* DECT subsystem keys
 - See* Dmodulation subsystem keys
 - See* EDGE subsystem keys
 - See* GPS subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* TETRA subsystem keys
 - See* wideband CDMA ARB subsystem keys
 - See* wideband CDMA base band generator subsystem keys and fields
- ## 0
- OCNS softkey, [324](#)
 - octal values, [15](#)
 - Off softkey, [23](#), [33](#), [38](#), [45](#), [60](#), [218](#), [249](#), [266](#), [287](#), [951](#)
 - Omitted softkey, [884](#), [976](#)
 - On softkey, [218](#), [249](#), [266](#), [287](#), [951](#)
 - On/Off field, [866](#), [943](#)
 - OpenLoop Ant1 SCH TSTD OFF softkey, [889](#)
 - OpenLoop Ant1 softkey, [889](#)
 - OpenLoop Ant2 SCH TSTD OFF softkey, [889](#)
 - OpenLoop Ant2 softkey, [889](#)
 - Optimize ACP ADJ ALT softkey, [314](#), [328](#)
 - Optimize FIR For EVM ACP softkey, [920](#)
 - See* CDMA ARB subsystem keys
 - See* CDMA2000 ARB subsystem keys

- Optimize FIR For EVM ACP softkey*, 920
 (continued)
 See CDMA2000 BBG subsystem keys and fields
 See custom subsystem keys
 See DECT subsystem keys
 See Dmodulation subsystem keys
 See EDGE subsystem keys
 See GPS subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
 See wideband CDMA ARB subsystem keys
 See wideband CDMA base band generator
 subsystem keys and fields
- options
 001/002
 all subsystem, 198, 410
 custom subsystem, 496
 Dmodulation subsystem, 257
 dual ARB subsystem, 277
 multitone subsystem, 294
- 400
 wideband CDMA ARB subsystem, 306
 wideband CDMA base band generator
 subsystem, 843
- 401
 CDMA ARB subsystem, 207
 CDMA2000 ARB subsystem, 229
 CDMA2000 BBG subsystem, 426
- 402
 DECT subsystem, 517
 EDGE subsystem, 563
 GSM subsystem, 611
 NADC subsystem, 704
 PDC subsystem, 736
 PHS subsystem, 768
 TETRA subsystem, 802
- 403
 AWGN real-time subsystem, 411
 AWGN subsystem, 199
- 406
 bluetooth subsystem, 412
- options (continued)
 409
 GPS subsystem, 604
 UN7/300
 calculate subsystem, 344
 data subsystem, 354
 input subsystem, 363, 369
 sense subsystem, 372
- Options Info softkey, 77, 78
- OQPSK softkey
 See custom subsystem keys
 See DECT subsystem keys
 See Dmodulation subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
- Output Blanking Off On Auto softkey, 124
- output subsystem keys
 Mod On/Off, 124
 Output Blanking Off On Auto, 124
 RF On/Off, 125
- Oversample Ratio softkey, 104, 217
- P**
- P Code Pwr softkey, 608
- P Rev field, 450
- P Rev Min field, 449
- P softkey, 533
- $\pi/4$ DQPSK softkey
 See custom subsystem keys
 See DECT subsystem keys
 See Dmodulation subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
- Packet (DH1) softkey, 423
- Paging Indicator field, 457, 870
- Paging softkey, 220

Index

- parameter types. *See* SCPI commands parameter types
- Pass Amplitude softkey, [376](#), [380](#)
 - See* sense subsystem keys
- Pass/Fail Limits softkey, [352](#)
- Pass/Fail Off On softkey, [352](#)
- paths, SCPI command tree, [7](#)
- Patt Trig In 1 softkey
 - See* CDMA ARB subsystem keys
 - See* CDMA2000 ARB subsystem keys
 - See* custom subsystem keys
 - See* DECT subsystem keys
 - See* Dmodulation subsystem keys
 - See* dual ARB subsystem keys
 - See* EDGE subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* TETRA subsystem keys
 - See* wideband CDMA ARB subsystem keys subsystem keys
- Patt Trig In 2 softkey
 - See* CDMA ARB subsystem keys
 - See* CDMA2000 ARB subsystem keys
 - See* custom subsystem keys
 - See* DECT subsystem keys
 - See* Dmodulation subsystem keys
 - See* dual ARB subsystem keys
 - See* EDGE subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* TETRA subsystem keys
 - See* wideband CDMA ARB subsystem keys subsystem keys
- Pattern trigger in 1 field, [965](#)
- Pattern trigger in 2 field, [965](#)
- PCCPCH + SCH + 3 DPCH softkey, [314](#), [319](#)
- PCCPCH + SCH +1 DPCH softkey, [314](#), [319](#)
- PCCPCH + SCH softkey, [314](#), [319](#)
- P-CCPCH data (DRPS39) softkey, [874](#), [876](#), [877](#), [878](#)
- P-CCPCH data-clk (DRPS38) softkey, [874](#), [876](#), [877](#), [878](#)
- PCCPCH softkey, [845](#), [846](#)
- PDC Off On softkey, [767](#)
- PDC softkey, [267](#), [269](#)
- PDC subsystem keys
 - 128QAM, [751](#)
 - 16 1's & 16 0's, [745](#), [753](#), [755](#), [757](#), [758](#)
 - 16PSK, [751](#)
 - 16QAM, [751](#)
 - 256QAM, [751](#)
 - 2-Lvl FSK, [751](#)
 - 32 1's & 32 0's, [745](#), [753](#), [755](#), [757](#), [758](#)
 - 32QAM, [751](#)
 - 4 1's & 4 0's, [745](#), [753](#), [755](#), [757](#), [758](#)
 - 4-Lvl FSK, [751](#)
 - 4QAM, [751](#)
 - 64 1's & 64 0's, [745](#), [753](#), [755](#), [757](#), [758](#)
 - 64QAM, [751](#)
 - 8 1's & 8 0's, [745](#), [753](#), [755](#), [757](#), [758](#)
 - 8PSK, [751](#)
 - All Timeslots, [761](#)
 - APCO 25 C4FM, [748](#)
 - BBG Ref Ext Int, [747](#)
 - Begin Frame, [761](#)
 - Begin Timeslot #, [761](#), [762](#)
 - BPSK, [751](#)
 - Bus, [753](#), [765](#)
 - CC, [754](#), [757](#), [759](#)
 - Continuous, [764](#)
 - D8PSK, [751](#)
 - Data Format Pattern Framed, [744](#)
 - Down Custom, [760](#)
 - Down TCH, [760](#)
 - Down TCH All, [760](#)
 - Ext, [745](#), [753](#), [755](#), [757](#), [758](#), [765](#)
 - Ext BBG Ref Freq, [747](#)
 - Ext Data Clock Ext Int, [736](#)
 - Ext Data Clock Normal Symbol, [746](#)
 - Ext Delay Bits, [766](#)
 - Ext Delay Off On, [767](#)
 - Ext Polarity Neg Pos, [767](#)
 - Fall Delay, [739](#), [740](#)
 - Fall Time, [739](#), [740](#)
 - Filter Alpha, [736](#)

PDC subsystem keys (*continued*)

Filter BbT, 737
 FIX4, 745, 753, 754, 755, 756, 757, 758, 759
 Free Run, 764
 Freq Dev, 749
 Gate Active Low High, 765
 Gated, 764
 Gaussian, 748
 Gray Coded QPSK, 751
 I/Q Scaling, 749
 IS-95, 748
 IS-95 Mod, 748
 IS-95 Mod w/EQ, 748
 IS-95 OQPSK, 751
 IS-95 QPSK, 751
 IS-95 w/EQ, 748
 MSK, 751
 Nyquist, 748
 Optimize FIR For EVM ACP, 744
 OQPSK, 751
 $\pi/4$ DQPSK, 751
 Patt Trig In 1, 765
 Patt Trig In 2, 765
 PDC Off On, 767
 Phase Dev, 750
 Phase Polarity Normal Invert, 751
 PN11, 745, 755, 757, 758
 PN15, 745, 753, 755, 757, 758
 PN20, 745, 755, 757, 758
 PN23, 745, 755, 757, 758
 PN9, 745, 753, 755, 757, 758
 PN9 Mode Normal Quick, 738
 QPSK, 751
 Rate Full Half, 748
 Recall Secondary Frame State, 752
 Rectangle, 748
 Reset & Run, 764
 Restore PDC Factory Default, 746
 Rise Delay, 741, 742
 Rise Time, 742, 743
 Root Nyquist, 748
 SACCH, 755, 758, 760
 Save Secondary Frame State, 752
 Secondary Frame Off On, 753
 Sine, 743

PDC subsystem keys (*continued*)

Single, 764
 SW, 755, 758, 760
 Symbol Rate, 762
 Sync Out Offset, 761
 Timeslot Ampl Main Delta, 756
 Timeslot Off On, 756
 Trigger & Run, 764
 Trigger Key, 753, 765
 UN3/4 GSM Gaussian, 748
 Up Custom, 760
 Up TCH, 760
 Up TCH All, 760
 Up VOX, 760
 User File, 743, 745, 753, 755, 757, 758
 User FIR, 748
 User FSK, 750, 751
 User I/Q, 751
 Performance Req softkey, 888
 Permuted ESN field, 432, 443
 Phase Dev softkey
 See custom subsystem keys
 See DECT subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
 phase modulation subsystem keys
 Φ M Sweep Time softkey, 187
 FM Φ M Normal High BW softkey, 185
 Φ M Dev Couple Off On, 190
 Φ M Dev softkey, 189
 Φ M Off On softkey, 189
 Φ M Path 1 2, 184
 Φ M Tone 2 Ampl Percent of Peak, 186
 Φ M Tone 2 Rate, 186
 Bus, 188
 Dual-Sine, 187
 Ext, 188
 Ext Coupling DC AC, 185
 Ext1, 188
 Ext2, 188
 Free Run, 188

Index

phase modulation subsystem keys (*continued*)

- Incr Set, [184](#), [190](#)
- Internal 1, [188](#)
- Internal 2, [188](#)
- Noise, [187](#)
- Ramp, [187](#)
- Sine, [187](#)
- Square, [187](#)
- Swept-Sine, [187](#)
- Triangle, [187](#)
- Trigger Key, [188](#)

Phase Polarity field, [456](#)

Phase Polarity Normal Invert softkey

- See* custom subsystem keys
- See* DECT subsystem keys
- See* EDGE subsystem keys
- See* GSM subsystem keys
- See* PDC subsystem keys
- See* PHS subsystem keys
- See* TETRA subsystem keys
- See* wideband CDMA base band generator subsystem keys and fields

Phase Polarity Normal Inverted softkey, [897](#)

Phase Ref Set softkey, [43](#)

PHS Off On softkey, [801](#)

PHS softkey, [267](#), [269](#)

PHS subsystem keys

- 128QAM, [788](#)
- 16 1's & 16 0's, [777](#), [778](#), [782](#), [796](#), [800](#)
- 16-Lvl FSK, [788](#)
- 16PSK, [788](#)
- 16QAM, [788](#)
- 256QAM, [788](#)
- 2-Lvl FSK, [788](#)
- 32 1's & 32 0's, [777](#), [778](#), [782](#), [796](#), [800](#)
- 32QAM, [788](#)
- 4 1's & 4 0's, [777](#), [778](#), [782](#), [796](#), [800](#)
- 4-Lvl FSK, [788](#)
- 4QAM, [788](#)
- 64 1's & 64 0's, [777](#), [778](#), [782](#), [796](#), [800](#)
- 64QAM, [788](#)
- 8 1's & 8 0's, [777](#), [778](#), [782](#), [796](#), [800](#)
- 8-Lvl FSK, [788](#)
- 8PSK, [788](#)
- All Timeslots, [790](#)

PHS subsystem keys (*continued*)

- APCO 25 C4FM, [785](#)
- BBG Data Clock Ext Int, [768](#)
- BBG Ref Ext Int, [784](#)
- Begin Frame, [790](#)
- Begin Timeslot #, [790](#), [791](#)
- BPSK, [788](#)
- Bus, [789](#), [794](#)
- C4FM, [788](#)
- Continuous, [793](#)
- CSID, [780](#), [798](#)
- Custom, [783](#)
- D8PSK, [788](#)
- Data Format Pattern Framed, [776](#)
- Ext, [777](#), [778](#), [782](#), [789](#), [794](#), [796](#), [800](#)
- Ext BBG Ref Freq, [784](#)
- Ext Data Clock Normal Symbol, [784](#)
- Ext Delay Bits, [795](#)
- Ext Delay Off On, [796](#)
- Ext Polarity Neg Pos, [796](#)
- Fall Delay, [771](#), [773](#)
- Fall Time, [772](#), [773](#)
- Filter Alpha, [768](#)
- Filter BbT, [769](#)
- FIX4, [777](#), [778](#), [779](#), [782](#), [783](#), [796](#), [797](#), [800](#), [801](#)
- Free Run, [793](#)
- Gate Active Low High, [794](#)
- Gated, [793](#)
- Gaussian, [785](#)
- Gray Coded QPSK, [788](#)
- I/Q Scaling, [786](#)
- IDLE, [780](#), [798](#)
- IS-95, [785](#)
- IS-95 Mod, [785](#)
- IS-95 Mod w/EQ, [785](#)
- IS-95 OQPSK, [788](#)
- IS-95 QPSK, [788](#)
- IS-95 w/EQ, [785](#)
- MSK, [788](#)
- Nyquist, [785](#)
- Optimize FIR For EVM ACP, [777](#)
- OQPSK, [788](#)
- $\pi/4$ DQPSK, [788](#)
- Patt Trig In 1, [795](#)
- Patt Trig In 2, [795](#)

- PHS subsystem keys (*continued*)
- Phase Dev, [786](#), [787](#)
 - Phase Polarity Normal Invert, [788](#)
 - PHS Off On, [801](#)
 - PN11, [777](#), [778](#), [782](#), [796](#), [800](#)
 - PN15, [777](#), [778](#), [782](#), [796](#), [800](#)
 - PN20, [777](#), [778](#), [782](#), [796](#), [800](#)
 - PN23, [777](#), [778](#), [782](#), [796](#), [800](#)
 - PN9, [777](#), [778](#), [782](#), [796](#), [800](#)
 - PN9 Mode Normal Quick, [770](#)
 - PSID, [780](#), [798](#)
 - QPSK, [788](#)
 - Recall Secondary Frame State, [789](#)
 - Rectangle, [785](#)
 - Reset & Run, [793](#)
 - Restore PHS Factory Default, [778](#)
 - Rise Delay, [774](#)
 - Rise Time, [775](#)
 - Root Nyquist, [785](#)
 - SA, [781](#), [799](#)
 - Save Secondary Frame State, [789](#)
 - Scramble Off On, [771](#)
 - Scramble Seed, [771](#)
 - Secondary Frame Off On, [790](#)
 - Sine, [776](#)
 - Single, [793](#)
 - Symbol Rate, [792](#)
 - SYNC, [783](#)
 - Sync Out Offset, [791](#)
 - TCH, [783](#)
 - TCH All, [783](#)
 - Timeslot Ampl Main Delta, [779](#), [797](#)
 - Timeslot Off On, [781](#), [799](#)
 - Timeslot Type, [801](#)
 - Trigger & Run, [793](#)
 - Trigger Key, [789](#), [794](#)
 - UN3/4 GSM Gaussian, [785](#)
 - User File, [776](#), [777](#), [778](#), [782](#), [796](#), [800](#)
 - User FIR, [785](#)
 - User FSK, [787](#), [788](#)
 - User I/Q, [787](#), [788](#)
 - UW, [781](#), [782](#), [799](#), [800](#)
 - PI Bits field, [870](#)
 - PICH 10ms FramePulse (DRPS37) softkey, [874](#), [876](#), [877](#), [878](#)
 - PICH data (DRPS35) softkey, [874](#), [876](#), [877](#), [878](#)
 - PICH data-clk (DRPS34) softkey, [874](#), [876](#), [877](#), [878](#)
 - PICH softkey, [324](#), [845](#), [846](#)
 - PICH TimeSlot Pulse (DRPS36) softkey, [874](#), [876](#), [877](#), [878](#)
 - Pilot softkey, [219](#), [220](#), [222](#), [236](#), [243](#)
 - Playback Ratio field, [849](#)
 - PN Offset field, [459](#)
 - PN Offset softkey, [241](#), [245](#)
 - PN11 softkey
 - See* custom subsystem keys
 - See* DECT subsystem keys
 - See* EDGE subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* sense subsystem keys
 - See* TETRA subsystem keys
 - PN15 softkey
 - See* CDMA2000 BBG subsystem keys and fields
 - See* custom subsystem keys
 - See* DECT subsystem keys
 - See* EDGE subsystem keys
 - See* GPS subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* sense subsystem keys
 - See* TETRA subsystem keys
 - See* wideband CDMA base band generator subsystem keys and fields
 - PN20 softkey
 - See* custom subsystem keys
 - See* DECT subsystem keys
 - See* EDGE subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* sense subsystem keys
 - See* TETRA subsystem keys

Index

- PN23 softkey
 - See* custom subsystem keys
 - See* DECT subsystem keys
 - See* EDGE subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* sense subsystem keys
 - See* TETRA subsystem keys
- PN9 Mode Normal Quick softkey
 - See* DECT subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* TETRA subsystem keys
- PN9 Mode Preset softkey, [154](#)
- PN9 softkey
 - See* CDMA2000 BBG subsystem keys and fields
 - See* custom subsystem keys
 - See* data subsystem keys
 - See* DECT subsystem keys
 - See* EDGE subsystem keys
 - See* GPS subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* sense subsystem keys
 - See* TETRA subsystem keys
 - See* wideband CDMA base band generator subsystem keys and fields
- Polarity Normal Invert softkey, [720](#)
- Power Control Signal Polarity Neg Pos softkey, [924](#)
- Power field
 - See* CDMA2000 BBG subsystem keys and fields
 - See* wideband CDMA baseband generator subsystem keys and fields
- Power Hold Off On softkey, [921](#)
- Power Meter softkey, [73](#)
- Power Mode Norm TPC softkey, [925](#)
- Power On Last Preset softkey, [152](#)
- Power Search Manual Auto softkey, [54](#), [55](#), [56](#), [57](#)
- Power softkey, [331](#)
- power subsystem keys
 - ALC BW Normal Narrow, [54](#)
 - ALC Off On, [57](#)
 - Alt Amp Delta, [57](#)
 - Alt Ampl Off On, [58](#)
 - Ampl, [45](#), [60](#)
 - Ampl Offset, [62](#)
 - Ampl Ref Off On, [61](#)
 - Ampl Ref Set, [60](#)
 - Ampl Start, [45](#), [61](#)
 - Ampl Stop, [45](#), [62](#)
 - Amplitude, [60](#), [63](#)
 - Atten Hold Off On, [59](#)
 - Do Power Search, [54](#), [55](#), [56](#), [57](#)
 - Ext Detector, [58](#)
 - Internal, [58](#)
 - Off, [45](#), [60](#)
 - Power Search Manual Auto, [54](#), [55](#), [56](#), [57](#)
 - Source Module, [58](#)
- PPCCPCH softkey, [324](#), [325](#)
- Pp-m field, [940](#), [956](#)
- PRACH Mode Single Multi softkey, [937](#)
- PRACH Power Setup Mode Pp-m Total softkey, [944](#)
- PRACH Processing (RPS19) softkey
 - See* wideband CDMA base band generator subsystem keys and fields
- PRACH Scrambling Code field, [945](#)
- PRACH softkey, [921](#)
- PRACH Trigger Polarity Neg Pos softkey, [949](#)
- PRACH Trigger softkey, [949](#)
- PRACH Trigger Source Immedi Trigger softkey, [950](#)
- PRAT field, [450](#)
- Pre Sig field, [942](#)
- Preamble power average field, [943](#)
- Preamble Pulse (RPS21) softkey
 - See* wideband CDMA base band generator subsystem keys and fields
- Preamble Raw Data (RPS15) softkey
 - See* wideband CDMA base band generator subsystem keys and fields
- Preamble Raw Data Clock (RPS16) softkey
 - See* wideband CDMA base band generator subsystem keys and fields

Preamble softkey, 928
 precise talking and forgiving listening, 7
 Preset hardkey, 152
 Preset List softkey, 19, 52
 Preset Normal User softkey, 154
 PSCH softkey, 324
 PSCH State field, 872
 PSID softkey, 780, 798
 pulse modulation subsystem keys
 Ext Pulse, 194
 Int Doublet, 194
 Int Free-Run, 194
 Int Gated, 194
 Int Triggered, 194
 Internal Square, 194
 Pulse Delay, 64
 Pulse Off On, 194
 Pulse Period, 192
 Pulse Rate, 192
 Pulse Width, 193
 Pulse softkeys
 Pulse Delay, 64
 Pulse Off On, 194
 Pulse Period, 192
 Pulse Rate, 192
 Pulse Width, 193
 Puncture fields, 990, 998
 Puncture softkey, 882
 PwrOffs field, 881, 973
 PWT softkey, 267, 269

Q

Q Offset softkey, 28
 QOF field, 434, 444
 QPSK softkey
 See custom subsystem keys
 See DECT subsystem keys
 See Dmodulation subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
 Quadrature Skew softkey, 28

Quarter softkey, 475, 480
 quotes, SCPI command use of, 15

R

RACH TrCH softkey, 928
 Radio Config field
 See CDMA2000 BBG subsystem keys and fields
 Radio Config softkey, 243
 RadioConfig 1/2 Access softkey, 426
 RadioConfig 1/2 Traffic softkey, 426
 RadioConfig 3/4 Common Control softkey, 426
 RadioConfig 3/4 Enhanced Access softkey, 426
 RadioConfig 3/4 Traffic softkey, 426
 Ramp field, 433
 Ramp softkey, 169, 175, 181, 187
 Ramp Step field, 940, 956
 Ramp Time field, 434
 Random Seed Fixed Random softkey, 304
 Random softkey, 323, 331
 Ranging Code C/A P C/A+P softkey, 608
 Rate Full Half softkey, 717, 748
 Rate Match Attr field, 895, 990, 998
 Rate softkey, 241, 245
 RCDMA softkey, 98
 real response data, 10
 Real-time AWGN Off On softkey, 411
 real-time AWGN subsystem keys
 Bandwidth, 411
 Real-time AWGN Off On, 411
 Real-time GPS Off On softkey, 610
 RECALL Reg softkey, 87
 Recall Secondary Frame State softkey
 See DECT subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
 Rectangle softkey
 See CDMA ARB subsystem keys
 See CDMA2000 ARB subsystem keys
 See CDMA2000 BBG subsystem keys and fields
 See custom subsystem keys
 See DECT subsystem keys

Index

Rectangle softkey (continued)

See Dmodulation subsystem keys
See EDGE subsystem keys
See GPS subsystem keys
See GSM subsystem keys
See NADC subsystem keys
See PDC subsystem keys
See PHS subsystem keys
See TETRA subsystem keys
See wideband CDMA ARB subsystem keys
See wideband CDMA base band generator subsystem keys and fields

Ref Data Rate field, [898, 927](#)

Ref Oscillator Source Auto Off On softkey, [44](#)

Ref Sensitivity softkey, [888](#)

Reference Freq softkey, [423](#)

See AWGN subsystem keys
See bluetooth subsystem keys
See CDMA ARB subsystem keys
See CDMA2000 ARB subsystem keys
See Dmodulation subsystem keys
See dual ARB subsystem keys
See multitone subsystem keys
See wideband CDMA ARB subsystem keys

Reference Out softkey, [360](#)

Rename File, [116](#)

Rename File softkey, [122](#)

Reserved field, [451](#)

Reset & Run softkey

See CDMA ARB subsystem keys
See CDMA2000 ARB subsystem keys
See custom subsystem keys
See DECT subsystem keys
See Dmodulation subsystem keys
See dual ARB subsystem keys
See EDGE subsystem keys
See GSM subsystem keys
See NADC subsystem keys
See PDC subsystem keys
See PHS subsystem keys
See TETRA subsystem keys
See wideband CDMA ARB subsystem keys

Reset RS-232 softkey, [74](#)

Reset to Initial Power softkey, [923](#)

Resolution softkey, [365](#)

resolving error messages/setting conflicts, [650](#)

response data types. *See* SCPI commands response types

Restore DECT Factory Default softkey, [526](#)

Restore EDGE Factory Default softkey, [571](#)

Restore Factory Default softkey, [621](#)

Restore NADC Factory Default softkey, [714](#)

Restore PDC Factory Default softkey, [746](#)

Restore PHS Factory Default softkey, [778](#)

Restore Sys Defaults softkey, [154](#)

Restore TETRA Factory Default softkey, [813](#)

Resync Limits softkey, [404](#)

Retrigger Mode Off On softkey, [336](#)

Reverse softkey, [219](#)

Revert to Default Cal Settings softkey, [67](#)

RF On/Off hardkey, [125](#)

Right Alternate softkey, [323](#)

Right softkey, [849](#)

Rise Delay softkey

See custom subsystem keys
See DECT subsystem keys
See EDGE subsystem keys
See GSM subsystem keys
See NADC subsystem keys
See PDC subsystem keys
See PHS subsystem keys
See TETRA subsystem keys

Rise Time softkey

See custom subsystem keys
See DECT subsystem keys
See EDGE subsystem keys
See GSM subsystem keys
See NADC subsystem keys
See PDC subsystem keys
See PHS subsystem keys
See TETRA subsystem keys

Rising softkey, [494](#)

RMC 144 kbps (25.141 v3.9) softkey, [957](#)

RMC 384 kbps (25.141 v3.9) softkey, [957](#)

RMC 64 kbps (25.141 v3.9) softkey, [957](#)

RMC122 kbps (25.141 v3.9) softkey, [957](#)

Root Nyquist softkey

See CDMA ARB subsystem keys
See CDMA2000 ARB subsystem keys
See CDMA2000 BBG subsystem keys and fields

Root Nyquist softkey (continued)

See custom subsystem keys
See DECT subsystem keys
See Dmodulation subsystem keys
See EDGE subsystem keys
See GPS subsystem keys
See GSM subsystem keys
See NADC subsystem keys
See PDC subsystem keys
See PHS subsystem keys
See TETRA subsystem keys
See wideband CDMA ARB subsystem keys
See wideband CDMA base band generator subsystem keys and fields

route subsystem keys

Burst Gate In Polarity Neg Pos, 126, 127
Data Clock Out Neg Pos, 128
Data Clock Polarity Neg Pos, 126, 127, 130
Data Out Polarity Neg Pos, 129, 130
Data Polarity Neg Pos, 126, 128
DATA/CLK/SYNC Rear Outputs Off On, 130
Event 1 Polarity Neg Pos, 129, 131
Event 2 Polarity Neg Pos, 129, 131
Symbol Sync Out Polarity Neg Pos, 129, 131
Symbol Sync Polarity Neg Pos, 127, 128

RS-232 Baud Rate softkey, 74

RS-232 ECHO Off On softkeys, 74

RS-232 Timeout softkeys, 75

Run Complete Self Test softkey, 89

S

S softkey, 584, 637

See DECT subsystem keys

SA softkey, 781, 799

SACCH softkey, 724, 727, 755, 758, 760

Satellite ID softkey, 609

Save Reg softkey, 88

Save Secondary Frame State softkey

See DECT subsystem keys
See EDGE subsystem keys
See GSM subsystem keys
See NADC subsystem keys
See PDC subsystem keys
See PHS subsystem keys
See TETRA subsystem keys

Save Seq[n] Reg[nn] softkey, 88

Save Setup To Header softkey, 200, 212, 234, 260, 278, 294, 310, 415

Save User Preset softkey, 155, 156, 157, 158

Scale to 0dB softkey

See CDMA ARB subsystem keys*See* CDMA2000 ARB subsystem keys*See* CDMA2000 BBG subsystem keys and fields*See* wideband CDMA ARB subsystem keys*See* wideband CDMA base band generator subsystem keys and fields

Scaling softkey, 287

SCCPCH softkey, 324, 325

SCFN field, 886, 979

SCH slot-pulse (DRPS10) softkey, 874, 876, 877, 878

SCPI command subsystems

all, 198, 410

amplitude modulation, 166

AWGN, 199

AWGN real-time, 411

bluetooth, 412

calculate, 344

calibration, 66

CDMA ARB, 207

CDMA2000 ARB, 229

CDMA2000 BBG, 426

communication, 70

correction, 18

custom, 496

data, 354

DECT, 517

diagnostic, 76

digital modulation, 21

display, 80

Dmodulation, 257

Dual ARB, 277

EDGE, 563

frequency, 35

frequency modulation, 173

GPS subsystem, 604

GSM, 611

HSDPA over W-CDMA, 648

IEEE 488.2 common commands, 84

input, 363, 369

Index

SCPI command subsystems (*continued*)

- list/sweep, 45
- low frequency output, 179
- mass memory, 118
- memory, 91
- multitone, 294
- NADC, 704
- output, 124
- PDC, 736
- phase modulation, 184
- PHS, 768
- power, 54
- pulse, 64
- pulse modulation, 192
- route, 126
- sense, 372
- status, 132
- system, 149
- TETRA, 802
- trigger, 161
- unit, 164
- wideband CDMA ARB, 306
- wideband CDMA base band generator, 843

SCPI commands

- command tree paths, 7
- parameter and response types, 7
- parameter types
 - boolean, 10
 - discrete, 9
 - extended numeric, 8
 - numeric, 8
 - string, 10
- response data types
 - discrete, 11
 - integer, 10
 - numeric boolean, 11
 - real, 10
 - string, 11
- root command, 6

SCPI softkey, 151, 153

- Scramble Code softkey, 323, 329, 331
- Scramble Off On softkey, 771, 805
- Scramble Offset softkey, 323, 331
- Scramble Seed softkey, 771, 805
- Scrambling Code field, 879, 880, 971

- Screen Saver Delay
 - 1 hr softkey, 158
- Screen Saver Mode softkeys, 159
- Screen Saver Off On softkeys, 159
- Second DPDCH I Q softkey, 329
- Secondary Frame Off On softkey
 - See* DECT subsystem keys
 - See* EDGE subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* TETRA subsystem keys
- Segment Advance softkey, 289
- Select File softkey, 238, 267
- Select Seq softkey, 87
- Select Waveform softkey, 293
- sense subsystem keys
 - Adjust Gain, 383
 - Aux, 385, 401, 407
 - Aux I/O Trigger Polarity Pos Neg, 407
 - BER Mode Off On, 372, 375, 395
 - BERT Off On, 404
 - BERT Resync Off On, 404
 - Bit Count, 386, 387
 - Bit Delay Off On, 406
 - Block Count, 374, 377, 378, 391, 394
 - Block Erasure, 372, 373, 377, 378, 390, 391, 392, 395
 - Bus, 385, 401, 407
 - Class Ib Bit Error, 398, 399
 - Class II Bit Error, 399
 - Cycle Count, 407
 - Delay Bits, 406
 - EDGE BERT Off On, 389
 - Error Count, 388, 405
 - Exceeds Any Thresholds, 399
 - Ext, 385, 401, 407
 - Ext Frame Trigger Delay, 373
 - External Frame Polarity Net Pos, 374
 - Frame Count, 393, 397
 - Frame Erasure, 399
 - Frame Trigger Source Int Ext, 374
 - GSM BERT Off On, 402
 - High Amplitude, 375, 379, 386

- sense subsystem keys (*continued*)
- Immediate, [385, 401, 407](#)
 - Initial Bit Count, [388](#)
 - Initial Block Count, [377, 381](#)
 - Initial Frame Count, [398](#)
 - Low Amplitude, [376, 379, 387, 394](#)
 - Measurement Mode BER% Search, [397](#)
 - Measurement Mode BLER% Search, [383](#)
 - No Thresholds, [373, 378, 392, 395, 399, 405](#)
 - Pass Amplitude, [376, 380, 387](#)
 - PN11, [403](#)
 - PN15, [403](#)
 - PN20, [403](#)
 - PN23, [403](#)
 - PN9, [403](#)
 - Resync Limits, [404](#)
 - Spcl Pattern 0's 1's, [402](#)
 - Spcl Pattern Ignore Off On, [403](#)
 - Spectrum Invert Off On, [383, 398](#)
 - Stop Measurement, [382, 396](#)
 - Sync Source BCH PDCH, [384](#)
 - Sync Source BCH TCH, [401](#)
 - Synchronize to BCH/PDCH, [384](#)
 - Synchronize to BCH/TCH, [400](#)
 - Target BER %, [375, 379](#)
 - Timeslot, [382, 396](#)
 - Total Bits, [406](#)
 - Trigger Key, [385, 401, 407](#)
 - Uplink Timing Advance, [385, 402](#)
- SEQ softkey, [98](#)
- Set Marker Off All Points softkey, [282](#)
- setting conflicts, resolving, [650](#)
- setup sweep, [45](#)
- SF/2 softkey, [974](#)
- SF2 softkey, [882](#)
- SFN reset-signal (DRPS5) softkey, [874, 876, 877, 878](#)
- SFN RST Polarity softkey, [972](#)
- SFN-CFN Frame Offset softkey, [920](#)
- SHAPE softkey, [99](#)
- Signature field, [957](#)
- Sine softkey
- See* amplitude modulation subsystem keys
 - See* DECT subsystem keys
 - See* EDGE subsystem keys
- Sine softkey (continued)*
- See* frequency modulation subsystem keys
 - See* GSM subsystem keys
 - See* low frequency output subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* phase modulation subsystem keys
 - See* PHS subsystem keys
 - See* TETRA subsystem keys
- Single softkey
- See* CDMA ARB subsystem keys
 - See* CDMA2000 ARB subsystem keys
 - See* custom subsystem keys
 - See* DECT subsystem keys
 - See* Dmodulation subsystem keys
 - See* dual ARB subsystem keys
 - See* EDGE subsystem keys
 - See* GSM subsystem keys
 - See* NADC subsystem keys
 - See* PDC subsystem keys
 - See* PHS subsystem keys
 - See* TETRA subsystem keys
 - See* wideband CDMA ARB subsystem keys
- Single Sweep softkey, [161](#)
- Slot Format field, [850, 857, 905, 915, 932, 936](#)
- softkey, [116](#)
- Source Module softkey, [58](#)
- Spcl Pattern 0's 1's softkey, [402](#)
- Spcl Pattern Ignore Off On softkey, [403](#)
- Spectrum Invert Off On softkey
- See* sense subsystem keys
- Spread Rate 1 softkey, [236, 243, 250](#)
- Spread Rate 3, [243](#)
- Spread Rate 3 softkey, [236, 250](#)
- Spread Rate field, [459](#)
- Spreading Type Direct Mcarrier, [236](#)
- Spreading Type Direct Mcarrier softkey, [251](#)
- Spurious Response softkey, [888](#)
- Square softkey, [169, 175, 181, 187](#)
- SR1 9 Channel softkey, [238](#)
- SR1 Pilot softkey, [238](#)
- SR3 Direct 9 Channel softkey, [238](#)
- SR3 Direct Pilot softkey, [238](#)
- SR3 Mcarrier 9 Channel softkey, [238](#)
- SR3 MCarrier Pilot softkey, [238](#)

Index

- SS softkey, 630
- SSB softkey, 823, 828
- SSCH 2nd Scramble Group field, 880
- SSCH Power field, 880
- SSCH softkey, 324
- SSCH State field, 881
- Standard softkey, 323
- Start Access Slot Position in 80ms Period field, 942
- Start Frequency softkey, 68
- Start Sub-Channel# field, 946
- State field
 - See CDMA2000 BBG subsystem keys and fields
- State softkey, 99, 118
- STD softkey, 902
- Step Dwell softkey, 52
- Step Power field, 924
- Stop Frequency softkey, 69
- Stop Measurement softkey
 - See sense subsystem keys
- Store Custom CDMA State softkey, 222, 240, 243
- Store Custom Dig Mod State softkey, 270
- Store Custom Multicarrier softkey, 221, 238
- Store Custom W-CDMA State softkey, 318, 321
- Store To File softkey, 19, 117, 123, 302, 330
- string response data, 11
- string SCPI parameter, 10
- strings, quote usage, 15
- STS softkey, 824, 829
- Sub Channel Timing (RPS17) softkey
 - See wideband CDMA base band generator subsystem keys and fields
- Subnet Mask softkey, 71
- subsystems, SCPI commands
 - See SCPI command subsystems
- Sum softkey, 23
- Summing Ratio (SRC1/SRC2) x.xx dB softkey, 33
- SW softkey, 755, 758, 760
- Sweep Direction Down Up softkey, 45
- Sweep Repeat Single Cont softkey, 161
- Sweep Retrace Off On softkey, 50
- sweep setup, 45
- Sweep Type List Step softkey, 51
- Swept-Sine softkey, 169, 175, 181, 187
- Symbol Out Polarity Neg Pos softkey, 129
- Symbol Rate field, 905, 913, 935
- Symbol Rate softkey, 270, 323, 331, 597, 931
- Symbol Sync Out Polarity Neg Pos softkey, 131
- Symbol Sync Polarity Neg Pos softkey, 127, 128
- Symbol Timing Err softkey, 419
- Sync Out Offset softkey, 556, 596, 641, 729, 761, 791, 836
- SYNC softkey, 724, 727, 783
- Sync softkey, 220, 640
- Sync Source BCH PDCH softkey, 384
- Sync Source BCH TCH softkey, 401
- Sync Source SFN FCIk ESG softkey, 973
- Synchronize to BCH/PDCH softkey, 384
- Synchronize to BCH/TCH softkey, 400
- System ID field, 451
- system subsystem keys
 - 8648A/B/C/D, 151, 153
 - 8656B,8657A/B, 151, 153
 - 8657D NADC, 151, 153
 - 8657D PDC, 151, 153
 - 8657J PHS, 151, 153
 - Error Info, 150
 - Help Mode Single Cont, 150, 151
 - PN9 Mode Preset, 154
 - Power On Last Preset, 152
 - Preset, 152
 - Preset Normal User, 154
 - Restore Sys Defaults, 154
 - Save User Preset, 155, 156, 157, 158
 - SCPI, 151, 153
 - Screen Saver Delay
 - 1 hr, 158
 - Screen Saver Mode, 159
 - Screen Saver Off On, 159
 - Time/Date, 149, 159
 - View Next Error Message, 150

T

- T1 softkey, 593
- T2 softkey, 593
- Target BER % softkey
 - See sense subsystem keys
- TCH All softkey, 783
- TCH softkey, 783
- TCH/FS softkey, 580, 583, 631
- tDPCH Offset field, 859

- Test Model 1 w/16 DPCH softkey, 314, 319
- Test Model 1 w/32 DPCH softkey, 314, 319
- Test Model 1 w/64 DPCH softkey, 314, 319
- Test Model 2 softkey, 314, 319
- Test Model 3 w/16 DPCH softkey, 314, 319
- Test Model 3 w/32 DPCH softkey, 314, 319
- Test Model 4 softkey, 314, 319
- Test Model 5 w/2HSPDSCH softkey, 314, 319
- Test Model 5 w/4HSPDSCH softkey, 314, 319
- Test Model 5 w/8HSPDSCH softkey, 314, 319
- TETRA Off On softkey, 842
- TETRA softkey, 267, 269
- TETRA subsystem keys
 - 128QAM, 818
 - 16 1's & 16 0's, 812, 820, 822, 824, 825, 827, 829, 831, 832, 833, 834
 - 16PSK, 818
 - 16QAM, 818
 - 256QAM, 818
 - 2-Lvl FSK, 818
 - 32 1's & 32 0's, 812, 820, 822, 824, 825, 827, 829, 831, 832, 833, 834
 - 32QAM, 818
 - 4 1's & 4 0's, 812, 820, 822, 824, 825, 827, 829, 831, 832, 833, 834
 - 4-Lvl FSK, 818
 - 4QAM, 818
 - 64 1's & 64 0's, 812, 820, 822, 824, 825, 827, 829, 831, 832, 833, 834
 - 64QAM, 818
 - 8 1's & 8 0's, 812, 820, 822, 824, 825, 827, 829, 831, 832, 833, 834
 - 8PSK, 818
 - All Timeslots, 835
 - APCO 25 C4FM, 815
 - B, 823, 827
 - B1, 821, 826
 - B2, 821, 826
 - BBG Data Clock Ext Int, 802
 - BBG Ref Ext Int, 814
 - Begin Frame, 835
 - Begin Timeslot #, 835, 836
 - BPSK, 818
 - Bus, 819, 839
 - Continuous, 838
- TETRA subsystem keys (*continued*)
 - D8PSK, 818
 - Data Format Pattern Framed, 811
 - Dn Custom Cont, 834
 - Dn Normal Cont, 834
 - Dn Normal Disc, 834
 - Dn Sync Cont, 834
 - Dn Sync Disc, 834
 - Ext, 812, 819, 820, 822, 824, 825, 827, 829, 831, 832, 833, 834, 839
 - Ext BBG Ref Freq, 814
 - Ext Data Clock Normal Symbol, 813
 - Ext Delay Bits, 841
 - Ext Delay Off On, 841
 - Ext Polarity Neg Pos, 841
 - Fall Delay, 806, 807
 - Fall Time, 806, 807
 - FCOR, 823, 828
 - Filter Alpha, 802
 - Filter BbT, 803
 - FIX4, 812, 820, 821, 822, 824, 825, 827, 829, 831, 832, 833, 834
 - Free Run, 838
 - Freq Dev, 816
 - Gate Active Low High, 839
 - Gated, 838
 - Gaussian, 815
 - Gray Coded QPSK, 818
 - I/Q Scaling, 816
 - IS-95, 815
 - IS-95 Mod, 815
 - IS-95 Mod w/EQ, 815
 - IS-95 OQPSK, 818
 - IS-95 QPSK, 818
 - IS-95 w/EQ, 815
 - MSK, 818
 - Nyquist, 815
 - Optimize FIR For EVM ACP, 811
 - OQPSK, 818
 - $\pi/4$ DQPSK, 818
 - Patt Trig In 1, 840
 - Patt Trig In 2, 840
 - Phase Dev, 816
 - Phase Polarity Normal Invert, 818

Index

TETRA subsystem keys (*continued*)

PN11, 812, 820, 822, 824, 825, 827, 829, 831, 832, 833, 834
PN15, 812, 820, 822, 824, 825, 827, 829, 831, 832, 833, 834
PN20, 812, 820, 822, 824, 825, 827, 829, 831, 832, 833, 834
PN23, 812, 820, 822, 824, 825, 827, 829, 831, 832, 833, 834
PN9, 812, 820, 822, 824, 825, 827, 829, 831, 832, 833, 834
PN9 Mode Normal Quick, 804
QPSK, 818
Recall Secondary Frame State, 819
Rectangle, 815
Reset & Run, 838
Restore TETRA Factory Default, 813
Rise Delay, 808, 809
Rise Time, 809, 810
Root Nyquist, 815
Save Secondary Frame State, 819
Scramble Off On, 805
Scramble Seed, 805
Secondary Frame Off On, 820
Sine, 810
Single, 838
SSB, 823, 828
STS, 824, 829
Symbol Rate, 837
Sync Out Offset, 836
TETRA Off On, 842
Timeslot Ampl Main Delta, 830
Timeslot Off On, 830
Trigger & Run, 838
Trigger Key, 819, 839
TS, 822, 826, 830, 831, 833
UN3/4 GSM Gaussian, 815
Up Control 1, 834
Up Control 2, 834
Up Custom, 834
Up Normal, 834
User File, 810, 812, 820, 822, 824, 825, 827, 829, 831, 832, 833, 834
User FIR, 815
User FSK, 817, 818

TETRA subsystem keys (*continued*)

User I/Q, 817, 818
TFCI Field Off On softkey, 323, 328, 331, 333
TFCI Pat field, 858
TFCI Pattern field, 906, 932
TFCI State field, 907, 933
Tfirst field, 851
TGCFN field, 882, 974
TGD field, 883, 975
Tgl field, 851
TGL1 field, 883, 975
TGL2 field, 883, 976
TGPL1 field, 884, 976
TGPRC field, 977
TGPS Inactive Active softkey, 978
TGSN field, 885, 978
Through softkey, 30, 199, 201, 209, 214, 230, 235, 257, 261, 279, 281, 295, 296, 310, 312, 414, 420
Time field, 452
Time/Date softkey, 149, 159
Timeslot Ampl Main Delta softkey
 See DECT subsystem keys
 See EDGE subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
Timeslot Off On softkey
 See DECT subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
Timeslot Offset softkey, 945
Timeslot softkey
 See sense subsystem keys
Timeslot Type softkey, 801
Timing Offset softkey, 946, 972, 981
tOCNS Offset field, 865
Toggle Marker 1 softkey, 288
Toggle State softkey, 300, 302
Total Bits field, 986
Total Bits softkey, 406
Total Block field, 988

- TotalPwr field, 900, 929
TPC Pat Steps field, 907
TPC Pat Trig Polarity Neg Pos softkey, 909
TPC Pattern field, 908
TPC Steps field, 859
TPC UserFile Trig field, 909
Tp-m field, 948
Tp-p field, 948
Traffic Bearer softkey, 532, 542
Traffic Bearer with Z field softkey, 532, 542
Traffic softkey, 220
Transp Chan A softkey, 855
Transp Chan B softkey, 855
Transp Position Flexible Fixed softkey, 894
Transport CH softkey, 867
TrCH BER field, 914
TrCh BlkSize 168 softkey, 944
TrCh BlkSize 360 softkey, 944
TrCH State Off On softkey, 999
TrCHI State Off On softkey, 896
Triangle softkey, 169, 175, 181, 187
Trigger & Run softkey
 See CDMA ARB subsystem keys
 See CDMA2000 ARB subsystem keys
 See custom subsystem keys
 See DECT subsystem keys
 See Dmodulation subsystem keys
 See dual ARB subsystem keys
 See EDGE subsystem keys
 See GSM subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See PHS subsystem keys
 See TETRA subsystem keys
 See wideband CDMA ARB subsystem keys
Trigger Advance field, 494
Trigger In Polarity Neg Pos softkey, 162
Trigger Key softkey
 See amplitude modulation subsystem keys
 See CDMA ARB subsystem keys
 See CDMA2000 ARB subsystem keys
 See DECT subsystem keys
 See Dmodulation subsystem keys
 See dual ARB subsystem keys
 See EDGE subsystem keys
 Trigger Key softkey (continued)
 See frequency modulation subsystem keys
 See GSM subsystem keys
 See list/sweep subsystem keys
 See low frequency output subsystem keys
 See NADC subsystem keys
 See PDC subsystem keys
 See phase modulation subsystem keys
 See PHS subsystem keys
 See sense subsystem keys
 See TETRA subsystem keys
 See trigger subsystem keys
 See wideband CDMA ARB subsystem keys
Trigger Out Polarity Neg Pos softkey, 162
trigger subsystem keys
 Bus, 163, 493
 Ext, 163, 493
 Free Run, 163, 493
 Single Sweep, 161
 Sweep Repeat Single Cont, 161
 Trigger In Polarity Neg Pos, 162
 Trigger Key, 163, 493
 Trigger Out Polarity Neg Pos, 162
Trigger Sync Reply (RPS7) softkey
 See wideband CDMA base band generator
 subsystem keys and fields
Truncated PN9 softkey, 413
TS softkey, 639, 822, 826, 830, 831, 833
TSC0 softkey, 584, 594, 631, 638
TSC1 softkey, 584, 594, 631, 638
TSC2 softkey, 584, 594, 631, 638
TSC3 softkey, 584, 594, 631, 638
TSC4 softkey, 584, 594, 631, 638
TSC5 softkey, 584, 594, 631, 638
TSC6 softkey, 584, 594, 631, 638
TSC7, 584, 631, 638
TSC7 softkey, 584, 594, 631, 638
TTI field, 896, 950, 991, 999
TTI Frame Clock (RPS9) softkey
 See wideband CDMA base band generator
 subsystem keys and fields
Turbo Coding field, 445, 492
Turbo softkey, 891, 893, 984
Type softkey, 323, 331

Index

U

UDI 64 kbps softkey, [957](#)

UDI ISDN (25.101 v3.5) softkey, [856](#)

UN3/4 GSM Gaussian softkey

See CDMA ARB subsystem keys

See CDMA2000 ARB subsystem keys

See CDMA2000 BBG subsystem keys and fields

See custom subsystem keys

See DECT subsystem keys

See Dmodulation subsystem keys

See EDGE subsystem keys

See GPS subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

See wideband CDMA ARB subsystem keys

See wideband CDMA base band generator
subsystem keys and fields

Uncoded softkey, [585](#)

unit subsystem keys

dBm, [164](#)

dBuV, [164](#)

dBuVemf, [164](#)

mV, [164](#)

mVemf, [164](#)

uV, [164](#)

uVemf, [164](#)

Up Control 1 softkey, [834](#)

Up Control 2 softkey, [834](#)

Up Custom softkey, [729](#), [760](#), [834](#)

Up Normal softkey, [834](#)

Up TCH All softkey, [729](#), [760](#)

Up TCH softkey, [729](#), [760](#)

Up VOX softkey, [760](#)

Up/Down softkey, [860](#), [908](#)

Update Display Cycle End Cont softkey, [353](#)

Update in Remote Off On softkey, [82](#)

Uplink MCS-1 softkey, [580](#), [583](#), [631](#)

Uplink MCS-5 softkey, [585](#)

Uplink MCS-9 softkey, [585](#)

Uplink Timing Advance softkey

See sense subsystem keys

User File softkey

See CDMA2000 BBG subsystem keys and fields

See custom subsystem keys

See DECT subsystem keys

See EDGE subsystem keys

See GPS subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

See wideband CDMA base band generator
subsystem keys and fields

user files, HSDPA, [648](#)

User FIR softkey

See CDMA ARB subsystem keys

See CDMA2000 ARB subsystem keys

See CDMA2000 BBG subsystem keys and fields

See custom subsystem keys

See DECT subsystem keys

See Dmodulation subsystem keys

See EDGE subsystem keys

See GPS subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

See wideband CDMA ARB subsystem keys
See wideband CDMA base band generator
subsystem keys and fields

User Flatness softkey, [100](#), [118](#)

User FSK softkey

See custom subsystem keys

See DECT subsystem keys

See EDGE subsystem keys

See GSM subsystem keys

See NADC subsystem keys

See PDC subsystem keys

See PHS subsystem keys

See TETRA subsystem keys

User I/Q softkey

See custom subsystem keys

See DECT subsystem keys

See EDGE subsystem keys

User I/Q softkey (continued)

- See GSM subsystem keys
- See NADC subsystem keys
- See PDC subsystem keys
- See PHS subsystem keys
- See TETRA subsystem keys

uV softkey, 164

uVemf softkey, 164

UW softkey, 781, 782, 799, 800

UWCDMA softkey, 100

V

View Next Error Message softkey, 150

W

Walsh Code softkey, 241, 245

Walsh field

- See CDMA2000 BBG subsystem keys and fields

Waveform Length softkey, 204, 227

Waveform Runtime Scaling softkey, 287

waveform, creating a multitone, 294

W-CDMA Off On softkey, 341, 999

WCDMA softkey

- See CDMA ARB subsystem keys
- See CDMA2000 ARB subsystem keys
- See Dmodulation subsystem keys
- See wideband CDMA ARB subsystem keys

wideband CDMA ARB subsystem keys

1 DPCH, 314, 319

2 Carriers, 315

2.100 MHz, 312

3 Carriers, 315

3 DPCH, 314, 319

4 Carriers, 315

40.000 MHz, 310, 312

APCO 25 C4FM, 308

Apply Channel Setup, 322, 331

ARB Reference Ext Int, 336

ARB Sample Clock, 337

Bus, 339

Channel, 323, 331

Chip Rate, 308

Clear Header, 310

Clip |I| To, 306, 316

wideband CDMA ARB subsystem keys (*continued*)

Clip |Q| To, 306, 317

Clip At PRE POST FIR Filter, 306

Clip Type |I+jQ| To, 307, 317

Clipping Type |I|,|Q|, 307, 317

Continuous, 338

Custom WCDMA State, 329

DPCCH, 329

DPCCH + 1 DPDCH, 329

DPCCH + 2 DPDCH, 329

DPCCH + 3 DPDCH, 329

DPCCH + 4 DPDCH, 329

DPCCH + 5 DPDCH, 329

DPCH, 324

Equal Energy per Symbol, 328

Ext Delay Off On, 340

Ext Delay Time, 339

Ext Key, 339

Ext Polarity Neg Pos, 340

Filter Alpha, 309

Filter BbT, 309

First Spread Code, 323, 331

Free Run, 337

Gain Unit dB Lin Index, 332

Gate Active Low High, 338

Gated, 338

Gaussian, 308

I/Q Mapping Norma Invert, 311

I/Q Mod Filter Manual Auto, 313

I/Q Output Filter Manual Auto, 311

Increment Scramble Code, 318

Increment Timing Offset, 321

IS-2000 SR3 DS, 308

IS-95, 308

IS-95 Mod, 308

IS-95 Mod w/EQ, 308

IS-95 w/EQ, 308

Left Alternate, 323

Link Down Up, 313

Marker 1, 333, 334

Marker 1 Polarity Neg Pos, 334

Marker 2, 333, 334

Marker 2 Polarity Neg Pos, 334

Marker 3, 333, 334

Marker 3 Polarity Neg Pos, 335

Index

wideband CDMA ARB subsystem keys (*continued*)

Marker 4, 333, 334
Marker 4 Polarity Neg Pos, 335
Modulator Atten Manual Auto, 312
None, 333, 334
Nyquist, 308
OCNS, 324
Optimize ACP ADJ ALT, 314, 328
Optimize FIR For EVM ACP, 309
Patt Trig In 1, 340
Patt Trig In 2, 340
PCCPCH + SCH, 314, 319
PCCPCH + SCH + 1 DPCH, 314, 319
PCCPCH + SCH + 3 DPCH, 314, 319
PICH, 324
Power, 331
PPCCPCH, 324, 325
PSCH, 324
Random, 323, 331
Rectangle, 308
Reference Freq, 335
Reset & Run, 337
Retrigger Mode Off On, 336
Right Alternate, 323
Root Nyquist, 308
Save Setup To Header, 310
Scale to 0dB, 328
SCCPCH, 324, 325
Scramble Code, 323, 329, 331
Scramble Offset, 323, 331
Second DPDCH I Q, 329
Single, 338
SSCH, 324
Standard, 323
Store Custom W-CDMA State, 318, 321
Store To File, 330
Symbol Rate, 323, 331
Test Model 1 w/16 DPCH, 314, 319
Test Model 1 w/32 DPPCH, 314, 319
Test Model 1 w/64 DPCH, 314, 319
Test Model 2, 314, 319
Test Model 3 w/16 DPCH, 314, 319
Test Model 3 w/32 DPCH, 314, 319
Test Model 4, 314, 319
Test Model 5 w/2HSPDSCH, 314, 319

wideband CDMA ARB subsystem keys (*continued*)

Test Model 5 w/4HSPDSCH, 314, 319
Test Model 5 w/8HSPDSCH, 314, 319
TFCI Field Off On, 323, 328, 331, 333
Through, 310, 312
Trigger & Run, 337
Trigger Key, 339
Type, 323, 331
UN3/4 GSM Gaussian, 308
User FIR, 308
WCDMA, 308
W-CDMA Off On, 341

wideband CDMA base band generator subsystem

keys and fields
of Blocks, 894
1/2 Conv, 891, 893, 984
1/3 Conv, 891, 893, 984
10 msec, 917
10ms Frame Pulse (DRPS11), 874, 876, 877, 878
10ms Frame Pulse (RPS6), 966, 967, 968, 969, 970, 971
12.2 kbps (34.121 v3.8), 856
144 kbps (34.121 v3.8), 856
20 msec, 917
2560 msec, 917
2nd Scr Offset, 858, 865
3.84MHz chip-clk (DRPS4), 874, 876, 877, 878
384 kbps (34.121 v3.8), 856
40 msec, 917
64 kbps (34.121 v3.8), 856
80 msec, 917
80ms Frame Pulse (DRPS13), 874, 876, 877, 878
80ms Frame Pulse (RPS20), 966, 967, 968, 969, 970, 971
A, 848
ACS, 888
Active, 885
Actual BER, 994
Actual BLER, 987, 995
AICH, 951
AICH Trigger Polarity Pos Neg, 925
All Down, 860, 908
All Up, 860, 908
Alt power in, 964
AMR 12.2 kbps, 856, 957

- wideband CDMA base band generator subsystem
 keys and fields (*continued*)
 APCO 25 C4FM, 860, 918
 Apply Channel Setup, 843, 897
 B, 848
 Base Delay Tp-a, 947
 BBG Chip Clock Ext Int, 843
 BBG Data Clock Ext In, 847
 BER, 987, 989, 995, 997
 Beta, 902, 910
 BLER, 988, 989, 996, 997
 Blk Set Size, 891
 Blk Size, 890, 983, 991
 Blocking, 888
 Burst gate in, 965
 C Power, 898
 C Power value, 926
 C/N value, 844, 898, 926
 CFN #0 Frame Pulse (RPS10), 960
 Chan Code, 853, 854, 863
 Channel Code, 869, 902, 911, 952
 Channel Code field, 868
 Channel State, 910, 917
 Channel State Off On, 847, 851, 852, 854, 860, 863, 866, 869, 871, 879, 901, 929, 984, 991, 992
 ChCode Ctl, 941
 ChCode Dat, 941
 Chip Clock (RPS1), 960, 966, 967, 968, 969, 970, 971
 Chip Rate, 853, 901
 Comp Mode Start Trigger Polarity Neg Pos, 980
 Comp Mode Start Trigger Polarity Pos Neg, 887, 888
 Comp Mode Stop Trigger Polarity Neg Pos, 981
 Comp Mode Stop Trigger Polarity Pos Neg, 888
 Compressed Mode Off On, 980
 Compressed Mode Start Trigger, 863, 887, 980
 Compressed Mode Stop Trigger, 887, 981
 CRC Size, 892, 985, 993
 Ctrl Beta, 929
 Ctrl Pwr, 931
 Data, 912
 Data Beta, 933
 Data field, 997
- wideband CDMA base band generator subsystem
 keys and fields (*continued*)
 Data Pwr, 935
 Data Rate, 864
 DCH1, 899
 DCH2, 899
 DCH3, 899
 DCH4, 899
 DCH5, 899
 DCH6, 899
 DL Reference 1.1, 978
 DL Reference 1.2, 978
 DL Reference 2.1, 978
 DL Reference 2.2, 978
 Down/Up, 860, 908
 DPCCCH, 899, 921
 DPCCCH Pilot data-clk (DRPS23), 874, 876, 877, 878
 DPCCCH Power, 905
 DPCCCH Raw Data (RPS4), 960
 DPCCCH Raw Data Clock (RPS5), 960
 DPCCCH TFCI data-clk (DRPS22), 874, 876, 877, 878
 DPCCCH TPC indicator (DRPS21), 874, 876, 877, 878
 DPCH + 1, 845, 846
 DPCH + 2, 845, 846
 DPCH 10ms Frame-Pulse (DRPS26), 874, 876, 877, 878
 DPCH Channel Balance, 853
 DPCH Compressed Frame Indicator (DRPS32), 874, 876, 877, 878
 DPCH data stream (DRPS24), 874, 876, 877, 878
 DPCH data-clk (0) (DRPS28), 874, 876, 877, 878
 DPCH Gap Indicator (DRPS33), 874, 876, 877, 878
 DPCH TimeSlot pulse (DRPS25), 874, 876, 877, 878
 DPDCH, 899
 DPDCH data-clk withDTX (DRPS20), 874, 876, 877, 878
 DPDCH data-clk WithOutDTX (DRPS30), 874, 876, 877, 878
 DPDCH Power, 913
 DPDCH Raw Data (RPS2), 960

Index

wideband CDMA base band generator subsystem
 keys and fields (*continued*)
 DPDCH Raw Data Clock (RPS3), 960
 Eb/No, 927
 Eb/No value (dB), 899
 Ec/No value, 844, 927
 Equal Powers, 867, 921
 Error BER, 994
 Error Bits, 986
 Error Blocks, 987
 Ext, 860
 Ext Clock Rate x1 x2 x4, 843
 FBI State, 904
 Filter Alpha, 861, 919
 Filter BbT, 862, 919
 FIX, 904
 FIX4, 855, 867, 868, 869, 870, 892, 893, 903, 912, 930, 932, 934, 989, 993
 Flat Noise BW, 900
 Frame Clock Polarity Neg Pos, 918
 Frame Struct, 881
 Frame Sync Trigger Mode Single Cont, 973
 Gaussian, 860, 918
 Higher Layer, 974
 Infinity, 885, 977
 Init Power, 922
 Init Pwr, 939, 955
 Intermod, 888
 IS-95, 860, 918
 IS-95 Mod, 860, 918
 IS-95 Mod w/EQ, 860, 918
 IS-95 w/EQ, 918
 Left, 849
 Link Down Up, 896
 Max Input, 888
 Max Power, 922
 Max Pwr, 940, 955
 Message Data Raw Data (RPS11), 966, 967, 968, 969, 970, 971
 Message Part, 938
 Message Pulse (RPS22), 966, 967, 968, 969, 970, 971
 Message-Control Raw Data (RPS13), 967, 968, 969, 970, 971

wideband CDMA base band generator subsystem
 keys and fields (*continued*)
 Message-Control Raw Data Clock (RPS12), 966, 967, 968, 969, 970, 971
 Min Power, 923
 Msg Ctrl, 928
 Msg Data, 928
 Msg Pwr, 938, 953
 N Power, 900, 928
 NONE, 984
 None, 891, 893, 989, 997
 NONE (RPS0), 960, 966, 967, 968, 969, 970, 971
 Normal, 849
 Num of Blk, 990, 998
 Num of Pre, 939, 954
 Number of AICH, 925
 Number of PRACH, 951, 954
 Number of PRACH 80ms, 938
 Number of Preamble, 954
 Nyquist, 860, 918
 Off, 951
 Omitted, 884, 976
 On, 951
 On/Off, 866, 943
 OpenLoop Ant1, 889
 OpenLoop Ant1 SCH TSTD OFF, 889
 OpenLoop Ant2, 889
 OpenLoop Ant2 SCH TSTD OFF, 889
 Optimize FIR For EVM ACP, 862, 920
 Paging Indicator, 870
 Pattern trigger in 1, 965
 Pattern trigger in 2, 965
 PCCPCH, 845, 846
 P-CCPCH data (DRPS39), 874, 876, 877, 878
 P-CCPCH data-clk (DRPS38), 874, 876, 877, 878
 Performance Req, 888
 Phase Polarity Normal Invert, 871
 Phase Polarity Normal Inverted, 897
 PI Bits, 870
 PICH, 845, 846
 PICH 10ms FramePulse (DRPS37), 874, 876, 877, 878
 PICH data (DRPS35), 874, 876, 877, 878
 PICH data-clk (DRPS34), 874, 876, 877, 878

- wideband CDMA base band generator subsystem
 keys and fields (*continued*)
 PICH TimeSlot Pulse (DRPS36), 874, 876, 877, 878
 Playback Ratio, 849
 PN15, 848, 855, 864, 867, 869, 902, 903, 906, 908, 912, 930, 932, 934
 PN9, 848, 855, 864, 867, 869, 892, 902, 903, 906, 908, 912, 930, 932, 934, 985, 993
 Power, 849, 852, 856, 864, 868, 871, 872
 Power Control Signal Polarity Neg Pos, 924
 Power Hold Off On, 921
 Power Mode Norm TPC, 925
 Pp-m, 940, 956
 PRACH, 921
 PRACH Mode Single Multi, 937
 PRACH Power Setup Mode Pp-m Total, 944
 PRACH Processing (RPS19), 966, 967, 968, 969, 970, 971
 PRACH Scrambling Code, 945
 PRACH Trigger, 949
 PRACH Trigger Polarity Neg Pos, 949
 PRACH Trigger Source Immedi Trigger, 950
 Pre Sig, 942
 Preamble, 928
 Preamble power average, 943
 Preamble Pulse (RPS21), 966, 967, 968, 969, 970, 971
 Preamble Raw Data (RPS15), 966, 967, 968, 969, 970, 971
 Preamble Raw Data Clock (RPS16), 966, 967, 968, 969, 970, 971
 PSCH State, 872
 Puncture, 882, 990, 998
 PwrOffs, 881, 973
 RACH TrCH, 928
 Ramp Step, 940, 956
 Rate Match Attr, 895, 990, 998
 Rectangle, 860, 918
 Ref Data Rate, 898, 927
 Ref Sensitivity, 888
 Reset to Initial Power, 923
 Right, 849
 RMC 144 kbps (25.141 v3.9), 957
 RMC 384 kbps (25.141 v3.9), 957
- wideband CDMA base band generator subsystem
 keys and fields (*continued*)
 RMC 64 kbps (25.141 v3.9), 957
 RMC122 kbps (25.141 v3.9), 957
 Root Nyquist, 860, 918
 Scale to 0dB, 867, 921
 SCFN, 886, 979
 SCH slot-pulse (DRPS10), 874, 876, 877, 878
 Scrambling Code, 879, 880, 971
 SF/2, 974
 SF2, 882
 SFN reset-signal (DRPS5), 874, 876, 877, 878
 SFN RST Polarity, 972
 SFN-CFN Frame Offset, 920
 Signature, 957
 Slot Format, 850, 857, 905, 915, 932, 936
 Spurious Response, 888
 SSCH 2nd Scramble Group, 880
 SSCH Power, 880
 SSCH State, 881
 Start Access Slot Position in 80ms Period, 942
 Start Sub-Channel#, 946
 STD, 902
 Step Power, 924
 Sub Channel Timing (RPS17), 966, 967, 968, 969, 970, 971
 Symbol Rate, 905, 913, 931, 935
 Sync Source SFN FClk ESG, 973
 tDPCH Offset, 859
 TFCI Pat, 858
 TFCI Pattern, 906, 932
 TFCI State, 907, 933
 Tfirst, 851
 TGCFN, 882, 974
 TGD, 883, 975
 Tgl, 851
 TGL1, 883, 975
 TGL2, 883, 976
 TGPL1, 884, 976
 TGPL2, 976
 TGPRC, 977
 TGPS Inactive Active, 978
 TGSN, 885, 978
 Timeslot Offset, 945
 Timing Offset, 946, 972, 981

Index

wideband CDMA base band generator subsystem
 keys and fields (*continued*)
tOCNS Offset, 865
Total Bits, 986
Total Blocks, 988
TotalPwr, 900, 929
TPC Pat Steps, 907
TPC Pat Trig Polarity Neg Pos, 909
TPC Pattern, 908
TPC Steps, 859
TPC UserFile Trig, 909
Tp-m, 948
Tp-p, 948
Transp Chan A, 855
Transp Chan B, 855
Transp Position Flexible Fixed, 894
Transport CH, 867
TrCH BER, 914
TrCh BlkSize 168, 944
TrCh BlkSize 360, 944
TrCH State Off On, 896, 999
Trigger Sync Reply (RPS7), 966, 967, 968, 969,
 970, 971
TTI, 896, 950, 991, 999
TTI Frame Clock (RPS9), 960
Turbo, 891, 893, 984
UDI 64 kbps, 957
UDI ISDN (25.101 v3.5), 856
UN3/4 GSM Gaussian, 860
Up/Down, 860, 908
User File, 855, 860, 867, 869, 892, 902, 903, 906,
 912, 930, 932, 934, 985, 993
User FIR, 860, 918
W-CDMA Off On, 999