

Measurement Guide

Agilent Technologies ESA-E Series Spectrum Analyzers Bluetooth™ Measurement Personality

This manual provides documentation for the following instruments:

ESA-E Series

E4402B (9 kHz - 3.0 GHz)
E4404B (9 kHz - 6.7 GHz)
E4405B (9 kHz - 13.2 GHz)
E4407B (9 kHz - 26.5 GHz)



Agilent Technologies

Manufacturing Part Number: E4402-90054

Supersedes: E4402-90014

Printed in USA

May 2001

© Copyright 2001 Agilent Technologies, Inc.

Notice

The information contained in this document is subject to change without notice.

Agilent Technologies makes no warranty of any kind with regard to this material, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Agilent Technologies shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Bluetooth™ is a trademark owned by its proprietor and used by Agilent Technologies under license.

Warranty

This Agilent Technologies instrument product is warranted against defects in material and workmanship for a period of three years from date of shipment. During the warranty period, Agilent Technologies Company will, at its option, either repair or replace products that prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by Agilent Technologies. Buyer shall prepay shipping charges to Agilent Technologies and Agilent Technologies shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to Agilent Technologies from another country.

Agilent Technologies warrants that its software and firmware designated by Agilent Technologies for use with an instrument will execute its programming instructions when properly installed on that instrument. Agilent Technologies does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error-free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. AGILENT TECHNOLOGIES SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Safety Information

The following safety notes are used throughout this manual. Familiarize yourself with these notes before operating this instrument.

WARNING **Warning denotes a hazard. It calls attention to a procedure which, if not correctly performed or adhered to, could result in injury or loss of life. Do not proceed beyond a warning note until the indicated conditions are fully understood and met.**

CAUTION Caution denotes a hazard. It calls attention to a procedure that, if not correctly performed or adhered to, could result in damage to or destruction of the instrument. Do not proceed beyond a caution sign until the indicated conditions are fully understood and met.

WARNING **This is a Safety Class 1 Product (provided with a protective earth ground incorporated in the power cord). The mains plug shall be inserted only in a socket outlet provided with a protected earth contact. Any interruption of the protective conductor inside or outside of the product is likely to make the product dangerous. Intentional interruption is prohibited.**

WARNING **No operator serviceable parts inside. Refer servicing to qualified personnel. To prevent electrical shock do not remove covers.**

CAUTION Always use the three-prong AC power cord supplied with this product. Failure to ensure adequate grounding may cause product damage.

Contents

1. Bluetooth™ Use Model	
Bluetooth™ System Overview	2
2. Preparing to Make Bluetooth™ Measurements	
Bluetooth™ Measurements	6
Hardware Availability	7
Basic Key Use	8
Preparing to Make Measurements	9
Initial Settings	9
How to Make a Measurement	9
How to Save Measurement Results	11
3. Making Bluetooth™ Measurements	
Chapter Contents	14
Making the Modulation Overview Measurement	15
Purpose	15
Measurement Method	15
Making the Measurement	15
Results	16
Troubleshooting Hints	16
Making the Output Power Measurement	17
Purpose	17
Measurement Method	17
Making the Measurement	18
Results	19
Troubleshooting Hints	19
Making the Carrier Frequency Drift Measurement	20
Purpose	20
Measurement Method	20
Making the Measurement	20
Results	21
Troubleshooting Hints	21
Making the Monitor Band/Channel Measurement	22
Purpose	22
Measurement Method	22
Making the Measurement	22
Results	23
Troubleshooting Hints	24
Making the Initial Carrier Frequency Tolerance Measurement	25
Purpose	25
Measurement Method	25
Making the Measurement	25
Results	26
Troubleshooting Hints	26
Making the Modulation Characteristics Measurement	27
Purpose	27
Measurement Method	27
Making the Measurement	28

Results	28
Troubleshooting Hints.....	29
Making the Output Spectrum Bandwidth Measurement	30
Purpose	30
Measurement Method.....	30
Making the Measurement	30
Results	31
Troubleshooting Hints.....	31
Adjacent Channel Power (ACP) Measurement	32
Purpose	32
Measurement Method.....	32
Making the Measurement	32
Results	33
Troubleshooting Hints.....	34


1 Bluetooth™ Use Model

Bluetooth™ System Overview

Bluetooth™ radios may operate as either master or slave units. The link manager sets up the connection between master and slave units and also determines the slave's power saving mode. A master can be actively communicating with up to seven slaves, while another 200+ slaves can be registered and in a non-communicating, power-saving mode.

This area of control is defined as a piconet. A master in one piconet may be a slave to a master from a different piconet. Similarly, multiple masters from different piconets may control a single slave. This network of piconets is referred to as a scatternet. Figure 1-1 depicts two piconets comprising a scatternet. Units that are not part of either piconet remain in standby mode.

Figure 1-1 Bluetooth™ Network Topology

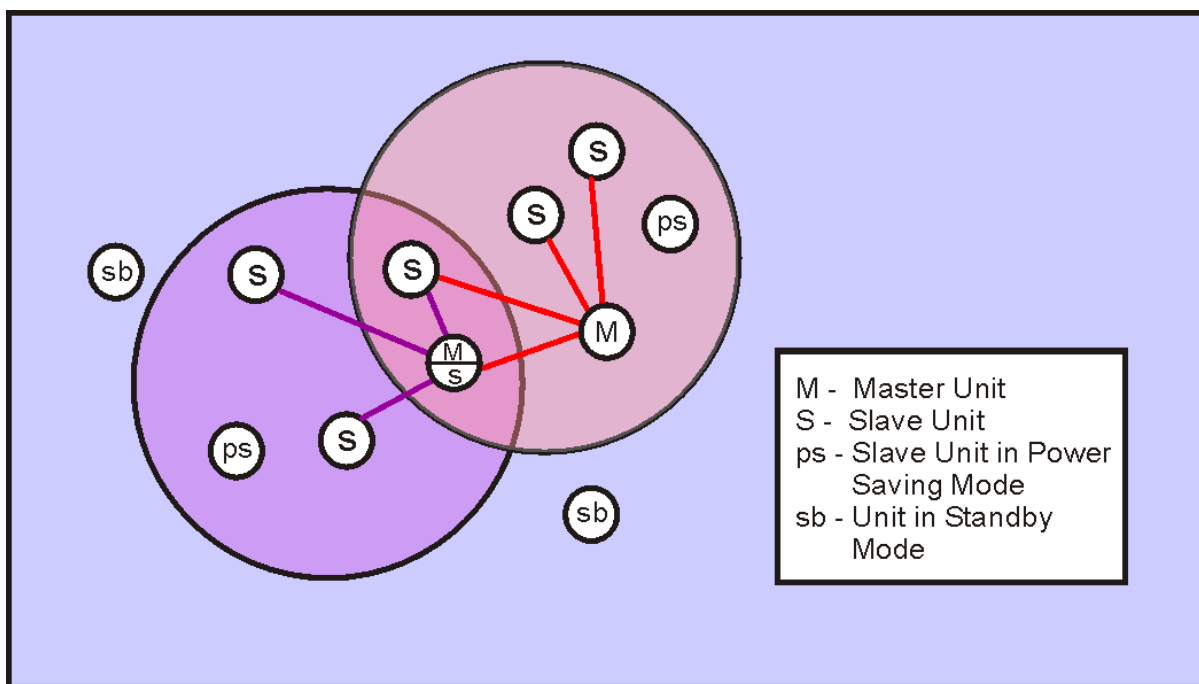

topology

A Bluetooth™ channel is divided into timeslots, each 625 μs in length. In the Time-Division Duplex (TDD) scheme used, the master transmits in even-numbered timeslots, and the slave in odd-numbered timeslots. Voice or data communication within piconets is transmitted in packets. Data packets may extend over one, three, or five time slots, whereas voice packets are limited to a single time slot. An RF hop occurs at the end of the last time slot associated with the packet.

A packet, shown in Figure 1-2, contains an access code, header and payload. The access code consists of a preamble, a sync word, and an optional trailer. The header contains piconet member address and packet information. The payload data, consisting of payload header, payload data and CRC, carries the user’s voice or data information. The payload CRC (Cyclic Redundancy Check) is a 16-bit field at the end of the payload that is used for a data integrity check. Depending on the packet type, a payload starts with a 1 (DH1) or 2 (DH3/5) byte header, and finishes with a 2 byte CRC.

Figure 1-2 Bluetooth™ General Packet Format

Packet Format:

Access Code	Header	Payload Header	Payload Data	Payload CRC
-------------	--------	----------------	--------------	-------------

bt82b

The link manager needs to support the Bluetooth™ test modes. These test modes should provide key capabilities for testing Bluetooth™ devices. These capabilities include the ability to place the device into test loopback mode and the ability to define transmit and receive frequencies, power control, and other key parameters.

Bluetooth™ Measurements

The following Bluetooth™ measurements are available in Bluetooth™ mode and described in this document:

Modulation Overview	provides a quick indication of overall modulation behavior
Output Power	power measurements in the time domain
Carrier Frequency Drift	tests the frequency drift of the signal
Monitor Band/Channel	view specific channels or the entire band
Initial Carrier Frequency Tolerance	tests accuracy of the transmitter's carrier frequency
Modulation Characteristics	frequency deviation measurement
Output Spectrum Bandwidth	verifies the emissions bandwidth inside the operating frequency
Adjacent Channel Power	verifies the emissions power level inside the operating range

These are referred to as one-button measurements.

When you press the key to select the measurement it becomes the active measurement, using settings and a display unique to that measurement. Data acquisitions automatically begin provided trigger requirements, if any, are met.

Hardware Availability

If the RF Comms hardware (Option B7E) is installed in the instrument, the measurements will provide support for all of the hardware triggering methods including RF Burst, External, and Free Run. Video triggering is available for the Output Power measurement only.

If the RF Comms hardware (Option B7E) is not installed in the instrument, the measurements cannot provide the full flexibility described in the following pages. Triggering is limited to Free Run or External, with External being the default.

The FM demod hardware (Option 106) must be present to make the measurements. If the FM demod hardware is not installed in the instrument, the demod measurement softkeys:

- Modulation Overview
- Carrier Freq Drift
- ICFT
- Modulation Characteristics

will be grayed out in the Measure menu and those measurements will be unavailable. The other measurements will still be available, although the Preamble Burst Sync selection in the Output Power measurement will be grayed out and unavailable.

Basic Key Use


The **MODE** key allows you to choose basic Spectrum Analyzer, Bluetooth™, or additional loaded personalities. When you select a standard, the analyzer will set measurement parameters to meet the standard requirements. If necessary, change the global measurement settings in the analyzer based on your system using **Mode Setup**.

The **Channel Frequency** or **RF Channel** keys allow you to tune the analyzer to specific frequencies. You can do this by either setting absolute frequencies or by setting the channel number when in the Bluetooth™ mode.

You can select a number of previously-configured standards based measurements to help you troubleshoot a system using the **Measure** button. Because all measurement situations are different, **Meas Setup** allows you to quickly change some of the measurement parameters. Finally, if you need to quickly start the measurement again, press **Restart** or use **Restart** under **Meas Control**.

Figure 2-1

Basic Keys

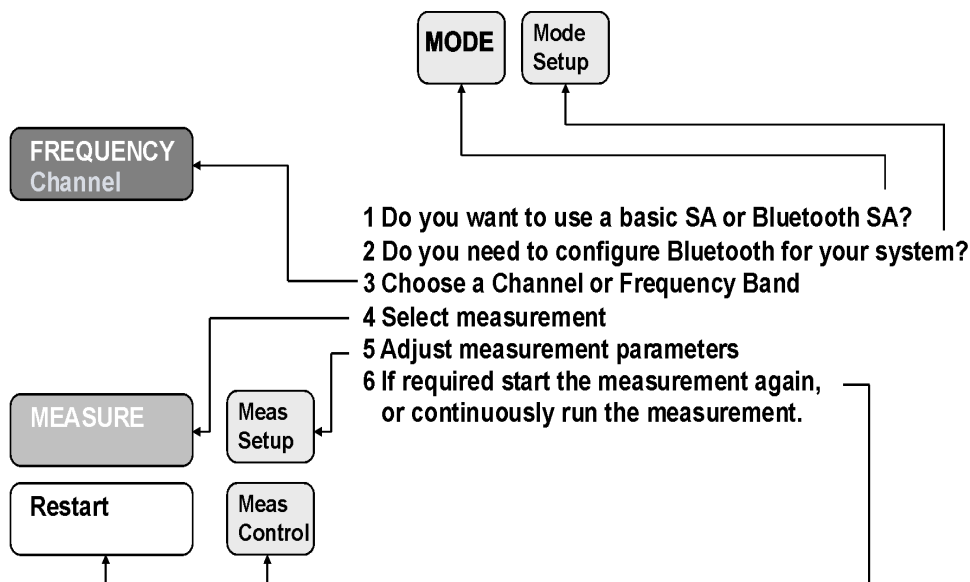

bt81b

Preparing to Make Measurements

At initial power up, the analyzer is in spectrum analyzer (SA) mode, with the Meas Off softkey selected in the **MEASURE** menu and the **FREQUENCY Channel** menu displayed.

To access the Bluetooth™ measurement personality, press the **MODE** front panel key and select the **Bluetooth** menu key.

Initial Settings

Before making a measurement, make sure the mode setup, measurement setup, and frequency channel parameters are set to the appropriate settings. For further information refer to the Mode Setup, Measurement Setup, and **FREQUENCY Channel** sections in Chapter 5 of the ESA-E Series Spectrum Analyzers Bluetooth™ Measurement Personality User's Guide.

- **Resetting all parameters:**
To set all instrument parameters (including mode setup and measurement setup parameters) to factory default values, press the **Preset** front panel key. Note that the mode is changed from Bluetooth™ to SA when the **Preset** front panel key is used. After using **Preset** you must use the **MODE** key to return to the Bluetooth™ mode.

The **Preset** front panel key can also be used to return the instrument to a set of user preset values.

- **Resetting mode setup parameters:**
Mode setup parameters apply to all measurements in the Bluetooth™ mode. To reset them to factory default values, press **Mode Setup** then **Restore Mode Setup Defaults**.
- **Resetting measurement setup parameters:**
Measurement setup parameters affect the current measurement only. To reset them to factory default values (for the current measurement only), press **Meas Setup** then **Restore Meas Defaults**.

How to Make a Measurement

Bluetooth™ measurements are intended to be used as “one button” measurements. This means the appropriate measurement can be selected and run by a single key press once the instrument has been connected to the equipment to be tested. The measurement is made automatically using default parameters defined by the selected standard and the tuning plan. It will continue to run until: a single measurement is complete, a different measurement is selected, or the analyzer is preset.


Preparing to Make Bluetooth™ Measurements
 Preparing to Make Measurements

Even though the measurements are designed as one-button measurements, you may change the default settings using various setup keys. However, changing the default settings may produce measurement results that are outside of the parameters of the selected standard.

Most measurements can be performed using the simple four-step procedure outlined in the table below. Most measurements are performed using only the primary keys listed in conjunction with a minimum of setup keys. Measurement setup keys (**Meas Setup**) can be used for non-standards compliant testing. For more information see “Initial Settings” above.

Step	Primary Key	Setup Keys	Related Keys
1. Select and setup mode	MODE	Mode Setup, FREQUENCY Channel	System
2. Select and setup measurement	MEASURE	Meas Setup, Restore Meas Defaults	Meas Control, Restart
3. Select and setup view	View/Trace	Span X Scale^a, Amplitude Y Scale^a, Display	Marker, Search
4. Saving and printing results	File Print	Print Setup	Save

a. Span and Amplitude are disabled for all measurements except Monitor Band/Channel

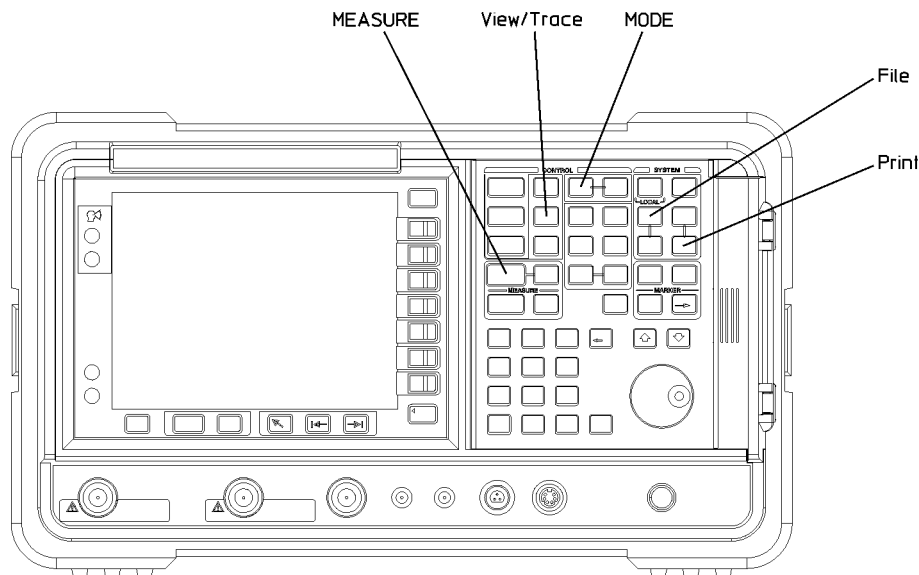

r171b

How to Save Measurement Results

To save measurement results, follow the process shown below. For additional information on file management in the spectrum analyzer, refer to the *ESA Spectrum Analyzers User's Guide*.

1. Press **File, Save, Type, More, Measurement Results**.
2. If you want to change the file name, press **Name**, and use the Alpha Editor to enter the new name. For more information on using the Alpha Editor, refer to the *ESA Spectrum Analyzers User's Guide*.
3. Press **Save Now** to complete the file saving process.
4. If you used the default file name and wish to save additional measurement results, press **Save**. The current measurement result will be saved with the next default file name.
5. If you have not used the default file name and wish to save additional measurement results, repeat steps 1 through 3.

Preparing to Make Bluetooth™ Measurements
Preparing to Make Measurements

Chapter Contents

This chapter details how to make Bluetooth™ measurements. The following measurements are described:

- o Modulation Overview on [page 15](#).
- o Output Power on [page 17](#).
- o Carrier Frequency Drift on [page 20](#).
- o Monitor Band/Channel on [page 22](#).
- o Initial Carrier Frequency Tolerance on [page 25](#).
- o Modulation Characteristics on [page 27](#).
- o Output Spectrum Bandwidth on [page 30](#).
- o Adjacent Channel Power (ACP) on [page 32](#).

Making the Modulation Overview Measurement

Purpose

The modulation overview measurement allows you to measure and report several modulation metrics on a burst of any type. This measurement measures and displays:

- Initial Carrier Frequency Tolerance
- Hi Frequency Pattern ('1010') peak deviation
- Low Frequency Pattern (3 or more 1's or 0's) peak deviation
- The ratio Peak High Frequency Dev/ Peak Low Frequency Dev

The first 8 bits of the payload are also displayed which is useful for identifying the different types of test signals (since they usually contain 8 bit repeating patterns).

Measurement Method

In order to perform these measurements to the Bluetooth™ specification, you should run the individual measurements. They will show whether the results passed or failed. This method provides results more quickly, without having to change signal types (as in the modulation characteristics measurement). It is also convenient for making adjustments in real-time.

Making the Measurement

1. Press the **Measure** key.
2. Press the **Modulation Overview** key.

NOTE

The factory default settings provide a Bluetooth™ compliant measurement. For special requirements, you may need to change some of the settings. Any changes from the default values may result in invalid measurement data.

Press **Meas Setup, More (1 of 2), Restore Meas Defaults** at any time to return all parameters for the current measurement to their default settings.

- Mode setup and frequency/channel parameters.
Use the **Mode Setup** and **Frequency Channel** keys to change these parameters for all measurements made within the current mode. For further information, refer to Chapter 1 of this document.

Making Bluetooth™ Measurements


Making the Modulation Overview Measurement

- Measurement setup parameters.
These are measurement specific parameters that are changed using the measurement setup (**Meas Setup**) menu. Parameters can be returned to default settings at any time by pressing **Meas Setup, More (1 of 2)** and **Restore Meas Defaults**. For further information on measurement setup parameters, refer to the *ESA-E Series Spectrum Analyzers Bluetooth™ Measurement Personality User's Guide*.

Results

Figure 3-1

Modulation Overview Measurement Results

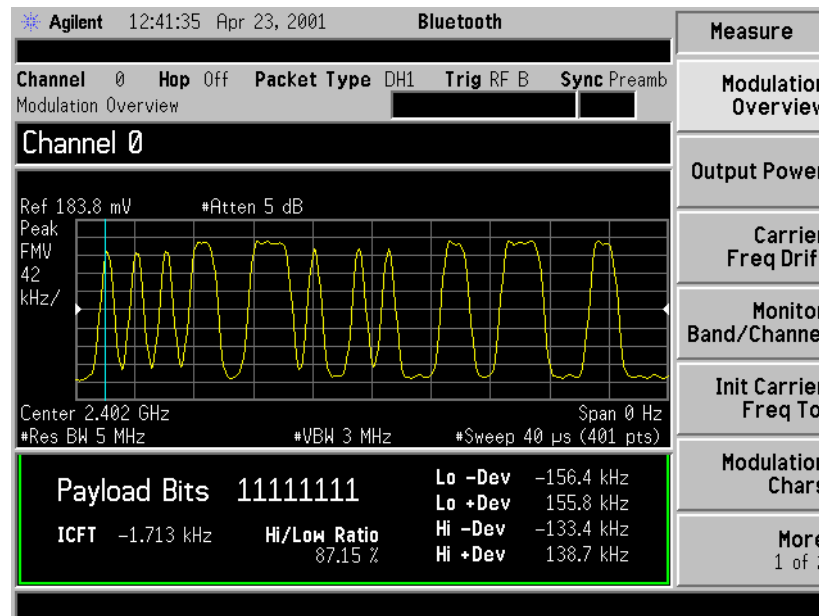

NOTE

Results are shown in numeric format beneath the trace. To view this section of the window in its entirety, press the **Next Window** menu key until it is highlighted, then press the **Zoom** menu key. This can also be used for zooming in on the trace window.

Troubleshooting Hints

- If an external attenuator is used, be sure to include the attenuation value in the measurement. This can be accessed by pressing **Input, Ext Atten**.
- If an external preamplifier is used, be sure to include the gain value in the measurement. This can be accessed by pressing **Input, Ext Gain**.

Making the Output Power Measurement

Purpose

Output power measurements are performed to ensure power levels are high enough to maintain links, yet low enough to minimize interference within the ISM band and to maximize battery life.

Measurement Method

The power measurements covered by this test are average power and peak power for the specified channel or center frequency. The analyzer is set to zero span mode with a sweep time dependent on the packet type being measured. When the analyzer is triggered, it makes a sweep over the duration of the burst.

The peak power is calculated as the highest point in the burst.

The average power is calculated as the average power over 20% to 80% of the burst duration. You can choose between two methods to determine the burst duration:


1. The position of p0 can be used to define the start of the burst, or
2. The burst duration is taken as the time between the leading and trailing 3 db points compared to the average power.

The average is calculated by converting each trace element amplitude from dBm into linear power, adding these together, then dividing by the number of trace elements included in the average. The final result is then converted back into logarithmic form (dBm) for display.

For averaged measurements, the user may specify the number of sweeps over which to average the result. This means that for an average number of 10, the power results are obtained from each trace, converted to linear power, and then averaged with the previous average result before being displayed. The running average count and the log of the true averaged linear power will be displayed after each measurement sweep.

Figure 3-2 illustrates power and timing characteristics of a signal burst in the time domain.

Figure 3-2 Time Domain Power and Timing Analysis

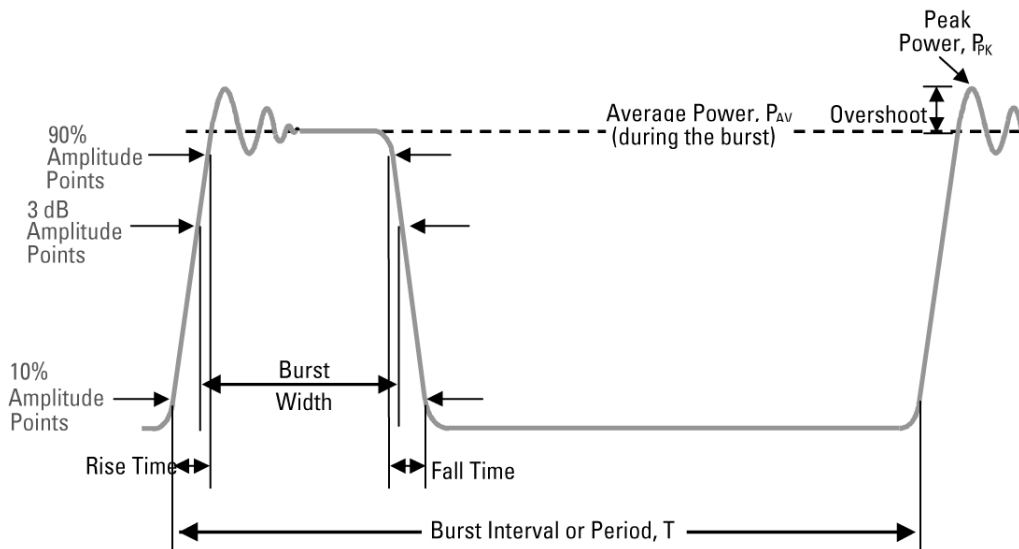

Making the Measurement

1. Press the **Measure** key.
2. Press the **Output Power** key.

NOTE

The factory default settings provide a Bluetooth™ compliant measurement. For special requirements, you may need to change some of the settings. Any changes from the default values may result in invalid measurement data.


Press **Meas Setup, More (1 of 2), Restore Meas Defaults** at any time to return all parameters for the current measurement to their default settings.

- Mode setup and frequency/channel parameters.
Use the **Mode Setup** and **Frequency Channel** keys to change these parameters for all measurements made within the current mode. For further information, refer to Chapter 1 of this document.
- Measurement setup parameters.
These are measurement specific parameters that are changed using the measurement setup (**Meas Setup**) menu. Parameters can be returned to default settings at any time by pressing **Meas Setup, More (1 of 2)** and **Restore Meas Defaults**. For further information on measurement setup parameters, refer to the *ESA-E Series Spectrum Analyzers Bluetooth™ Measurement Personality User's Guide*.

Results

Figure 3-3

Output Power Measurement Results

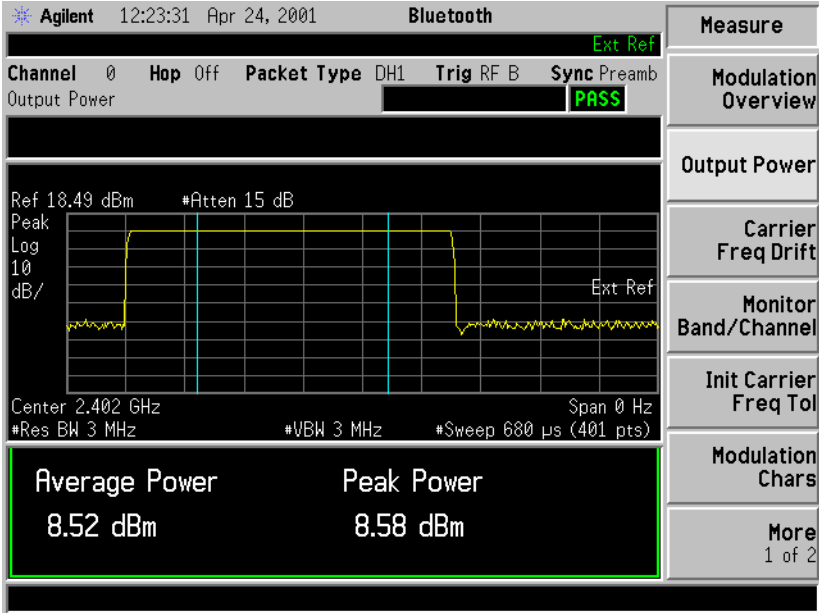

NOTE

Results are shown in numeric format beneath the trace. To view this section of the window in its entirety, press the **Next Window** menu key until it is highlighted, then press the **Zoom** menu key. This can also be used for zooming in on the trace window.

Troubleshooting Hints

- If an external attenuator is used, be sure to include the attenuation value in the measurement. This can be accessed by pressing **Input, Ext Atten**.
- If an external preamplifier is used, be sure to include the gain value in the measurement. This can be accessed by pressing **Input, Ext Gain**.

Making the Carrier Frequency Drift Measurement

Purpose

The carrier frequency drift measurement checks the performance of the modulator circuitry and the stability of the Voltage Controlled Oscillator (VCO).

Measurement Method

To make the measurement a demodulated signal is used with the payload data consisting of a repeating 4-bit 1010 sequence. The absolute frequencies of the 4 preamble bits are measured and integrated, providing the initial carrier frequency. The absolute frequencies of each successive 10-bit pattern in the payload are then measured and integrated.

The frequency drift is the maximum difference between the average frequency of the 4 preamble bits and the average frequency of any 10 bits in the payload field. The maximum drift rate applies to the difference between any two 10-bit groups separated by 50 μ s within the payload field.

Making the Measurement

1. Press the **Measure** key.
2. Press the **Carrier Freq Drift** key.

NOTE

The factory default settings provide a Bluetooth™ compliant measurement. For special requirements, you may need to change some of the settings. Any changes from the default values may result in invalid measurement data.

Press **Meas Setup, More (1 of 2), Restore Meas Defaults** at any time to return all parameters for the current measurement to their default settings.


- Mode setup and frequency/channel parameters.
Use the **Mode Setup** and **Frequency Channel** keys to change these parameters for all measurements made within the current mode. For further information, refer to Chapter 1 of this document.

- Measurement setup parameters.
 These are measurement specific parameters that are changed using the measurement setup (**Meas Setup**) menu. Parameters can be returned to default settings at any time by pressing **Meas Setup, More (1 of 2)** and **Restore Meas Defaults**. For further information on measurement setup parameters, refer to the *ESA-E Series Spectrum Analyzers Bluetooth™ Measurement Personality User's Guide*.

Results

Figure 3-4

Carrier Frequency Drift Measurement Results

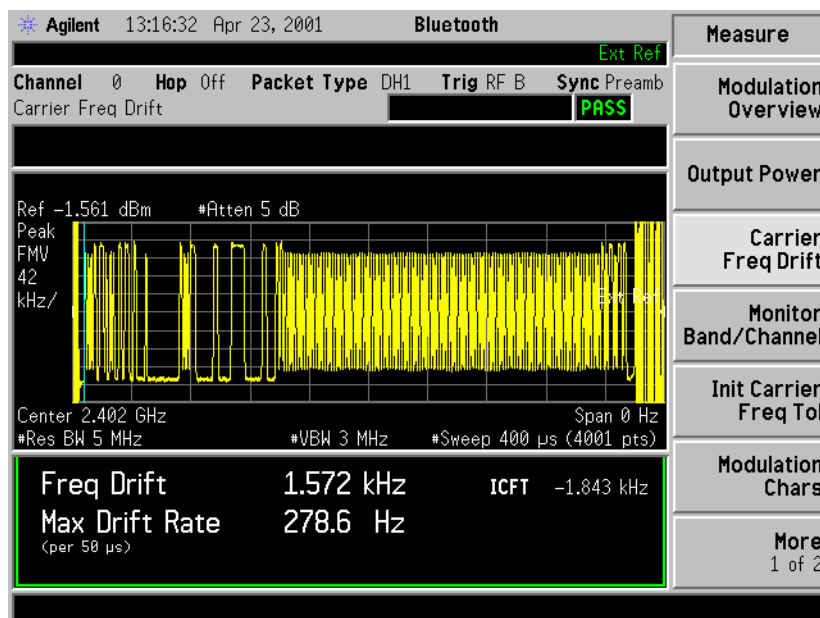

NOTE

Results are shown in numeric format beneath the trace. To view this section of the window in its entirety, press the **Next Window** menu key until it is highlighted, then press the **Zoom** menu key. This can also be used for zooming in on the trace window.

Troubleshooting Hints

- If an external attenuator is used, be sure to include the attenuation value in the measurement. This can be accessed by pressing **Input, Ext Atten**.
- If an external preamplifier is used, be sure to include the gain value in the measurement. This can be accessed by pressing **Input, Ext Gain**.

Making the Monitor Band/Channel Measurement

Purpose

This measurement can be used to visually check either the Bluetooth™ band or individual channels. In Monitor Band, you can easily check the channel occupancy and flatness when frequency hopping is on. In Monitor Channel you can verify the correct spectral shape of the selected channel.

Any interfering signals may also be apparent when using this measurement.

Measurement Method

This procedure scans the specified band or channels. By placing markers on the trace it is possible to check the band/channels for interference or other impairments. A Max Hold function enables monitoring over time. This is useful for dealing with hopping signals.

Making the Measurement

1. Press the **Measure** key.
2. Press the **Monitor Band/Channel** key.

NOTE

The factory default settings provide the optimal settings for viewing the Bluetooth™ band or channels. For special requirements, you may need to change some of the settings.


Press **Meas Setup, More (1 of 2), Restore Meas Defaults** at any time to return all parameters for the current measurement to their default settings.

- Mode setup and frequency/channel parameters.
Use the **Mode Setup** and **Frequency Channel** keys to change these parameters for all measurements made within the current mode. For further information, refer to Chapter 1 of this document.
- Measurement setup parameters.
These are measurement specific parameters that are changed using the measurement setup (**Meas Setup**) menu. Parameters can be returned to default settings at any time by pressing **Meas Setup, More (1 of 2)** and **Restore Meas Defaults**. For further information on measurement setup parameters, refer to the *ESA-E Series Spectrum Analyzers Bluetooth™ Measurement Personality User's Guide*.

Checking Individual Channels for Signs of Interference

Figure 3-6 shows the Monitor Band/Channel display with **Method** set to **Channel**, **Channel Span** set to **Three**, a hopping signal applied, and **Max Hold** turned on. **Center Freq** is set to 2402 MHz (Channel 0).

Figure 3-6

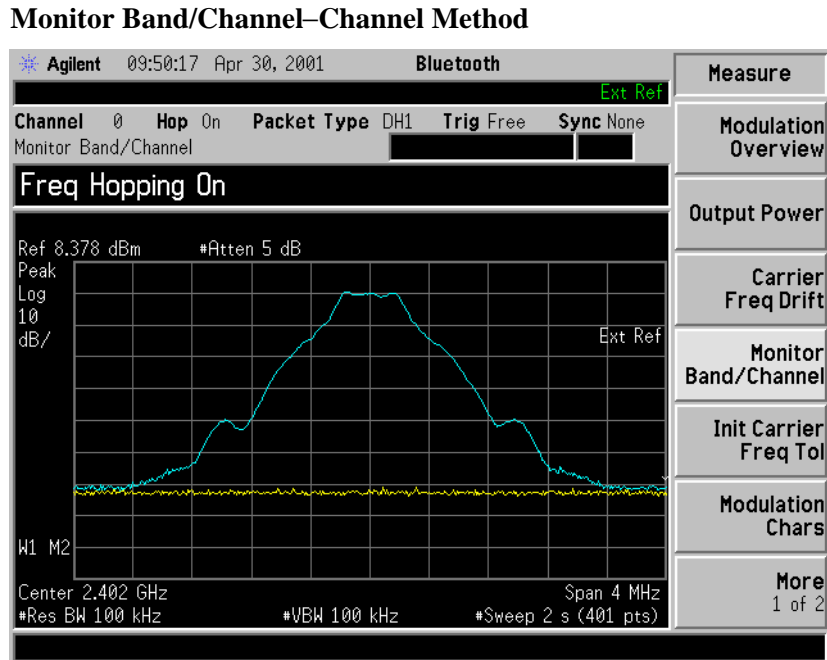

Troubleshooting Hints

- If an external attenuator is used, be sure to include the attenuation value in the measurement. This can be accessed by pressing **Input, Ext Atten**.
- If an external preamplifier is used, be sure to include the gain value in the measurement. This can be accessed by pressing **Input, Ext Gain**.

Making the Initial Carrier Frequency Tolerance Measurement

Purpose

The initial carrier frequency tolerance measurement is designed to verify the accuracy of the transmitter's initial carrier frequency.

Measurement Method

This is measured by integrating over the frequency deviations of the packets first 4 bits (the preamble bits). The result is either a positive or negative number in Hz indicating the frequency difference from the specified nominal carrier frequency.

This measurement requires the signal to be demodulated to measure the frequency deviation of each symbol. After demodulation, the frequency offset of each of the preamble bits is measured and averaged.

Making the Measurement

1. Press the **Measure** key.
2. Press the **Init Carrier Freq Tol** key.

NOTE

The factory default settings provide a Bluetooth™ compliant measurement. For special requirements, you may need to change some of the settings. Any changes from the default values may result in invalid measurement data.

Press **Meas Setup, More (1 of 2), Restore Meas Defaults** at any time to return all parameters for the current measurement to their default settings.


- Mode setup and frequency/channel parameters.
Use the **Mode Setup** and **Frequency Channel** keys to change these parameters for all measurements made within the current mode. For further information, refer to Chapter 1 of this document.
- Measurement setup parameters.
These are measurement specific parameters that are changed using the measurement setup (**Meas Setup**) menu. Parameters can be returned to default settings at any time by pressing **Meas Setup, More (1 of 2)** and **Restore Meas Defaults**. For further information on measurement setup parameters, refer to the *ESA-E Series Spectrum Analyzers Bluetooth™ Measurement Personality User's Guide*.

Results

This result is either a positive or negative number in Hz indicating the frequency difference between the measured frequency and the specified nominal carrier frequency.

Figure 3-7

Initial Carrier Frequency Tolerance Measurement Results

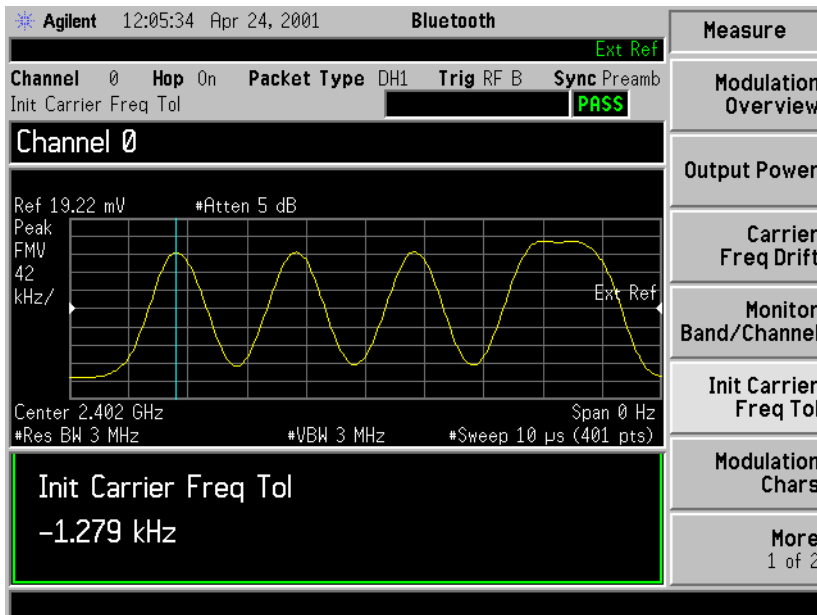

NOTE

Results are shown in numeric format beneath the trace. To view this section of the window in its entirety, press the **Next Window** menu key until it is highlighted, then press the **Zoom** menu key. This can also be used for zooming in on the trace window.

Troubleshooting Hints

- If an external attenuator is used, be sure to include the attenuation value in the measurement. This can be accessed by pressing **Input, Ext Atten**.
- If an external preamplifier is used, be sure to include the gain value in the measurement. This can be accessed by pressing **Input, Ext Gain**.

Making the Modulation Characteristics Measurement

Purpose

Modulation characteristics is a frequency deviation measurement which is designed to verify both the modulator performance and the accuracy of the pre-modulation 0.5BT Gaussian Filter.

Measurement Method

Two separate test signals are required for this measurement, each one containing an 8-bit repeating sequence in the payload. These repeating sequences are 11110000 and 10101010.

The measurement is performed in 2 stages, each stage requiring a different packet: one carrying the 11110000 payload, the other carrying the 10101010 payload.

Using the 11110000 payload

The average frequency over the first 8 bits in the payload is calculated and then the maximum deviation from this average over bits 2,3,6 & 7 is measured. The maximum for each repeating 8-bit sequence in the payload is measured in the same way, each time calculating a new average frequency over the respective 8 bits. Eventually, the average of all these maximums is calculated and shown in the results window as $\Delta f1$ Avg.

Using the 10101010 payload

The average frequency over the first 8 bits in the payload is calculated and then the maximum deviation from this average over all 8 bits is measured. The maximum for each repeating 8-bit sequence in the payload is measured in the same way, each time calculating a new average frequency over the respective 8 bits. Eventually the average of all these maximums is calculated and shown in the results window as $\Delta f2$ Avg.

Once the measurement has acquired values for $\Delta f1$ Avg and $\Delta f2$ Avg, the ratio of $\Delta f2$ Avg to $\Delta f1$ Avg is also displayed.

Since this measurement requires human interaction (to manually change test signals), it will display only either $\Delta f1$ Avg or $\Delta f2$ Avg the first time it is run, depending on the signal type. The first result must be “held” using the **Hold Result** parameter and the measurement restarted. At this point the other signal type should be supplied, and the measurement restarted.

If a remote query of all three results is requested after having obtained only one result, then 3 values will be returned, although only 1 result will be correct and the other 2 will contain NaN.

Making the Measurement

1. Press the **Measure** key.
2. Press the **Modulation Chars** key.

NOTE

The factory default settings provide a Bluetooth™ compliant measurement. For special requirements, you may need to change some of the settings. Any changes from the default values may result in invalid measurement data.


Press **Meas Setup, More (1 of 2), Restore Meas Defaults** at any time to return all parameters for the current measurement to their default settings.

- Mode setup and frequency/channel parameters.
 Use the **Mode Setup** and **Frequency Channel** keys to change these parameters for all measurements made within the current mode. For further information, refer to Chapter 1 of this document.
- Measurement setup parameters.
 These are measurement specific parameters that are changed using the measurement setup (**Meas Setup**) menu. Parameters can be returned to default settings at any time by pressing **Meas Setup, More (1 of 2)** and **Restore Meas Defaults**. For further information on measurement setup parameters, refer to the *ESA-E Series Spectrum Analyzers Bluetooth™ Measurement Personality User's Guide*.

Results

Figure 3-8

Modulation Characteristics Measurement Results

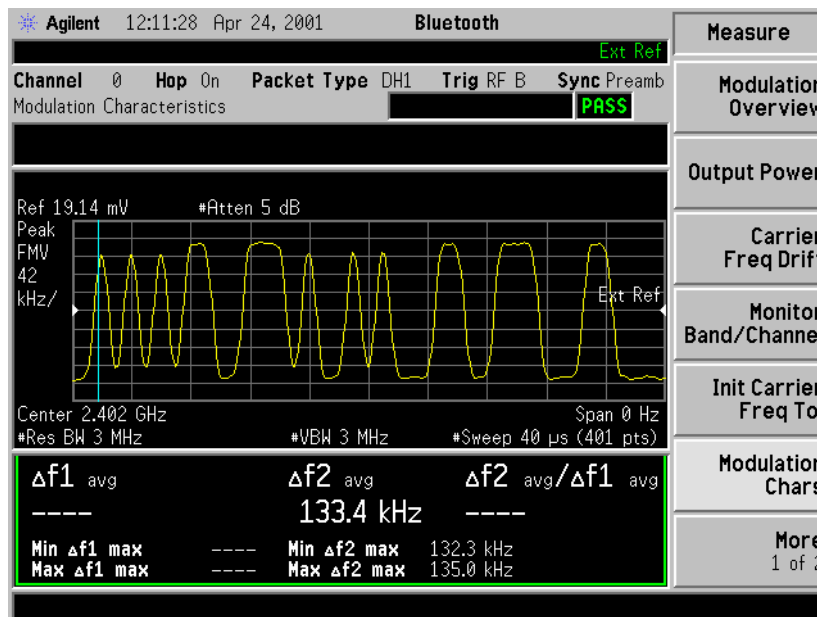

NOTE

Results are shown in numeric format beneath the trace. To view this section of the window in its entirety, press the **Next Window** menu key until it is highlighted, then press the **Zoom** menu key. This can also be used for zooming in on the trace window.

Troubleshooting Hints

- If an external attenuator is used, be sure to include the attenuation value in the measurement. This can be accessed by pressing **Input, Ext Atten**.
- If an external preamplifier is used, be sure to include the gain value in the measurement. This can be accessed by pressing **Input, Ext Gain**.

Making the Output Spectrum Bandwidth Measurement

Purpose

The output spectrum bandwidth measurement is used to verify if the emissions inside the operating frequency are within the limits.

Measurement Method

To perform this measurement the analyzer is tuned to the channel to be measured and the span is set to 2 MHz. The peak of the current trace is identified. The measurement then places markers at the points highest and lowest in frequency in the current span where the signal drops -20dB from this peak value. The frequency between these two points is measured as the output spectrum bandwidth.

Making the Measurement

1. Press the **Measure** key.
2. Press the **More** key.
3. Press the **Output Spectrum Bandwidth** key.

NOTE

The factory default settings provide a Bluetooth™ compliant measurement. For special requirements, you may need to change some of the settings. Any changes from the default values may result in invalid measurement data.


Press **Meas Setup, More (1 of 2), Restore Meas Defaults** at any time to return all parameters for the current measurement to their default settings.

- Mode setup and frequency/channel parameters.
Use the **Mode Setup** and **Frequency Channel** keys to change these parameters for all measurements made within the current mode. For further information, refer to Chapter 1 of this document.
- Measurement setup parameters.
These are measurement specific parameters that are changed using the measurement setup (**Meas Setup**) menu. Parameters can be returned to default settings at any time by pressing **Meas Setup, More (1 of 2)** and **Restore Meas Defaults**. For further information on measurement setup parameters, refer to the *ESA-E Series Spectrum Analyzers Bluetooth™ Measurement Personality User's Guide*.

Results

Figure 3-9

Output Spectrum Bandwidth Measurement Results

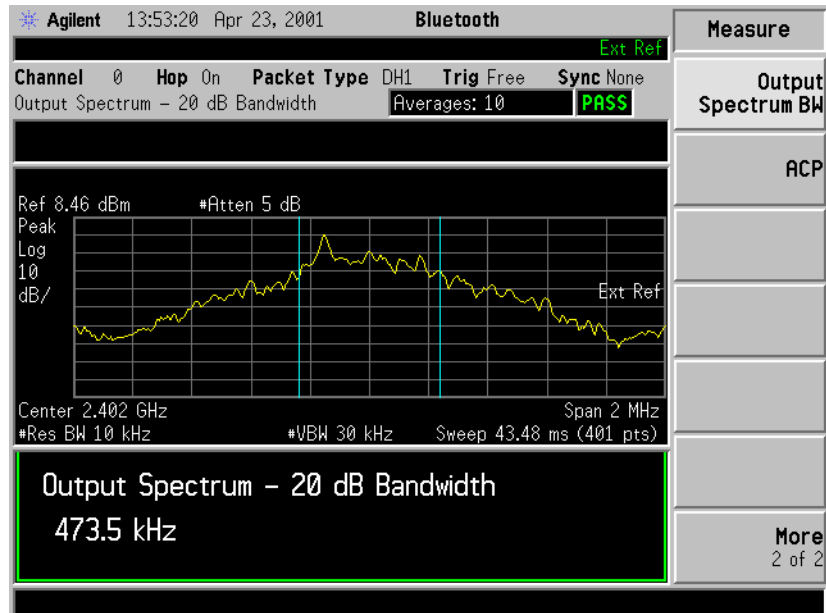

NOTE

Results are shown in numeric format beneath the trace. To view this section of the window in its entirety, press the **Next Window** menu key until it is highlighted, then press the **Zoom** menu key. This can also be used for zooming in on the trace window.

Troubleshooting Hints

- If an external attenuator is used, be sure to include the attenuation value in the measurement. This can be accessed by pressing **Input, Ext Atten**.
- If an external preamplifier is used, be sure to include the gain value in the measurement. This can be accessed by pressing **Input, Ext Gain**.

Adjacent Channel Power (ACP) Measurement

Purpose

The adjacent channel power measurement is used to verify if the emissions levels in adjacent channels are within the limits.

Measurement Method

To perform this measurement, the analyzer is tuned to the channel to be measured and the span is set to zero span with a sweep time of 210 ms and a RBW of 100 kHz. The measurement is performed in Freerun trigger. The power measurements covered by this test are average peak power and overall power for the specified channel.

Making the Measurement

1. Press the **Measure** key.
2. Press the **More** key.
3. Press the **ACP** key.

NOTE

The factory default settings provide a Bluetooth™ compliant measurement. For special requirements, you may need to change some of the settings. Any changes from the default values may result in invalid measurement data.

Press **Meas Setup, More (1 of 2), Restore Meas Defaults** at any time to return all parameters for the current measurement to their default settings.

- Mode setup and frequency/channel parameters.
Use the **Mode Setup** and **Frequency Channel** keys to change these parameters for all measurements made within the current mode. For further information, refer to Chapter 1 of this document.
- Measurement setup parameters.
These are measurement specific parameters that are changed using the measurement setup (**Meas Setup**) menu. Parameters can be returned to default settings at any time by pressing **Meas Setup, More (1 of 2)** and **Restore Meas Defaults**. For further information on measurement setup parameters, refer to the *ESA-E Series Spectrum Analyzers Bluetooth™ Measurement Personality User's Guide*.

Results

Figure 3-10

ACP Measurement Results RF Envelope View


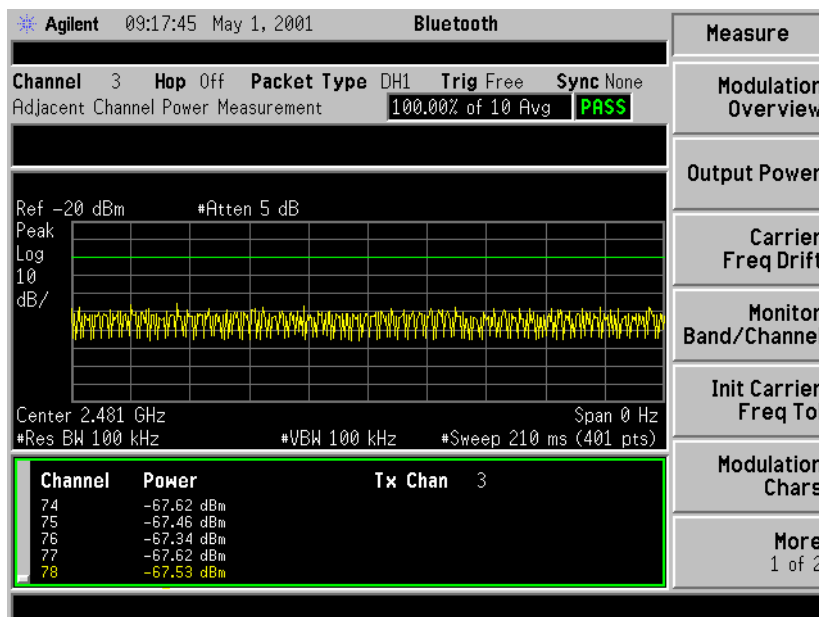


Figure 3-11

ACP Measurement Results Spectrum View

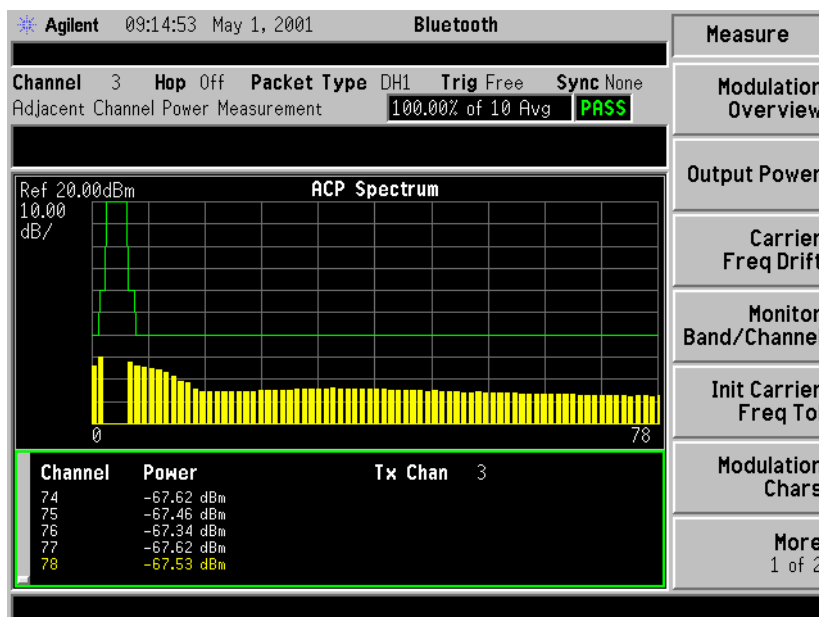


NOTE

Results are shown in numeric format beneath the trace. To view this section of the window in its entirety, press the **Next Window** menu key until it is highlighted, then press the **Zoom** menu key. This can also be used for zooming in on the trace window.

Making Bluetooth™ Measurements Adjacent Channel Power (ACP) Measurement

Figure 3-12

ACP Measurement Results Numeric Window

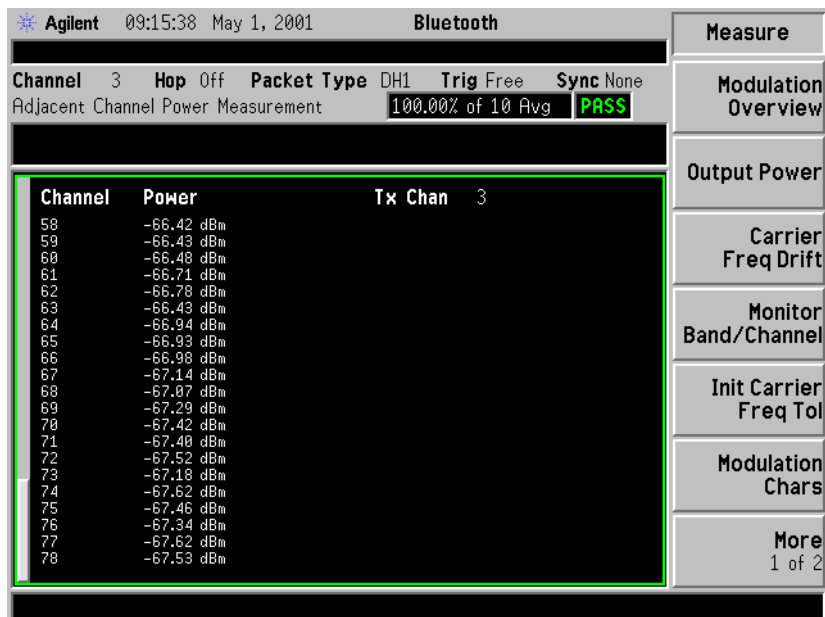

Troubleshooting Hints

- If an external attenuator is used, be sure to include the attenuation value in the measurement. This can be accessed by pressing **Input, Ext Atten**.
- If an external preamplifier is used, be sure to include the gain value in the measurement. This can be accessed by pressing **Input, Ext Gain**.