

HP 8566B/68B Code Compatibility Guide

Agilent Technologies ESA and PSA Series Spectrum Analyzers

**This manual provides documentation for the following
instruments with Option 266 installed:**

ESA-E Series

E4401B (9 kHz - 1.5 GHz)

E4402B (9 kHz - 3.0 GHz)

E4404B (9 kHz - 6.7 GHz)

E4405B (9 kHz - 13.2 GHz)

E4407B (9 kHz - 26.5 GHz)

PSA Series

E4440A (3 Hz - 26.5 GHz)

E4443A (3 Hz - 6.7 GHz)

E4445A (3 Hz - 13.2 GHz)

E4446A (3 Hz - 44.0 GHz)

E4448A (3 Hz - 50.0 GHz)



Agilent Technologies

Part Number: E4440-90223 Supersedes: E4440-90097

Printed in USA

February 2003

© Copyright 2002, 2003 Agilent Technologies, Inc.

Notice

The information contained in this document is subject to change without notice.

Agilent Technologies makes no warranty of any kind with regard to this material, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Agilent Technologies shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Warranty

This Agilent Technologies instrument product is warranted against defects in material and workmanship for a period of three years from date of shipment. During the warranty period, Agilent Technologies Company will, at its option, either repair or replace products that prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by Agilent Technologies. Buyer shall prepay shipping charges to Agilent Technologies and Agilent Technologies shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to Agilent Technologies from another country.

Agilent Technologies warrants that its software and firmware designated by Agilent Technologies for use with an instrument will execute its programming instructions when properly installed on that instrument. Agilent Technologies does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error-free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. AGILENT TECHNOLOGIES SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. AGILENT TECHNOLOGIES SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

Contents

1. Getting Started	
Option 266 Description	2
Option 266 Limitations	2
Hardware Requirements for Option 266	3
Installing/Uninstalling Option 266 - ESA-E Series Analyzers Only	4
Creating the Installation Disks from the Web	4
Installing the Option 266 Software	4
Installer Screen and Menu	6
Troubleshooting the Installer	8
Installing Option 266 - PSA Series Analyzers Only	9
Configuring Option 266 - ESA and PSA Analyzers	12
Analyzer Settings When Changing Language	14
Analyzer Settings After Powering On and Off	14
The Configure Remote Lang Screen Menu - ESA-E and PSA Analyzers	15
Differences Between Option 266 Commands and the Original HP 8566B/HP 8568B Commands	17
Differences Between HP8566B and HP8568B Remote Languages in Option 266	26
Running Software that Requires SCPI Commands	28
Service and Calibration	30
Documentation for Option 266	31
Spectrum Analyzers with Option 266	31
Spectrum Analyzer Updates	31
2. HP 8566B and HP 8568B Command List	
Table of HP 8566B and HP 8568B Commands	34
3. Hints and Tips	
A Few Helpful Hints and Tips	58
4. Programming Commands	
Command Syntax	62
Programming Command Descriptions	64
A1 [one]	
Clear Write for Trace A	65
Syntax	65
Description	65
A2 [two]	
Maximum Hold for Trace A	66
Syntax	66
Description	66
A3 [three]	
View Mode for Trace A	67
Syntax	67
Description	67
A4 [four]	
Blank Trace A	68
Syntax	68
Description	68

Contents

AMB	
A minus B into A	.69
Syntax	.69
Description	.69
AMBPL	
(A minus B) plus Display Line into A	.70
Syntax	.70
Description	.70
ANNOT	
Annotation	.71
Syntax	.71
Description	.71
APB	
A Plus B to A	.72
Syntax	.72
Description	.72
AT	
Attenuation	.73
Syntax	.73
Description	.73
AUNITS	
Amplitude Units	.75
Syntax	.75
Description	.75
AXB	
Exchange Trace A and Trace B	.76
Syntax	.76
Description	.76
B1 [one]	
Clear Write for Trace B	.77
Syntax	.77
Description	.77
B2 [two]	
Maximum Hold for Trace B	.78
Syntax	.78
Description	.78
B3 [three]	
View Mode for Trace B	.79
Syntax	.79
Description	.79
B4 [four]	
Blank Trace B	.80
Syntax	.80
Description	.80
BL	
Trace B minus Display Line to Trace B	.81
Syntax	.81
Description	.81
BLANK	

Contents

Blank Trace	82
Syntax	82
Description	82
BML	
Trace B Minus Display Line	83
Syntax	83
Description	83
BTC	
Transfer Trace B to Trace C	84
Syntax	84
Description	84
BXC	
Exchange Trace B and Trace C	85
Syntax	85
Description	85
C1 [one]	
Set A Minus B Mode Off	86
Syntax	86
Description	86
C2 [two]	
A Minus B Into A	87
Syntax	87
Description	87
CA	
Couple Attenuation	88
Syntax	88
Description	88
CF	
Center Frequency	89
Syntax	89
Description	89
CLRAVG	
Clear Average	91
Syntax	91
Description	91
CLRW	
Clear Write	92
Syntax	92
Description	92
CONTS	
Continuous Sweep	93
Syntax	93
Description	93
CR	
Couple Resolution Bandwidth	94
Syntax	94
Description	94
CS	
Couple Frequency Step Size	95

Contents

Syntax95
Description95
CT	
Couple Sweep Time96
Syntax96
Description96
CV	
Couple Video Bandwidth97
Syntax97
Description97
DA	
Display Address98
Syntax98
Description98
DET	
Detection Mode99
Syntax99
Description99
DL	
Display Line101
Syntax101
Description101
DLE	
Display Line Enable102
Syntax102
Description102
DONE	
Done103
Syntax103
Description103
E1[one]	
Peak Marker104
Syntax104
Description104
E2 [two]	
Marker to Center Frequency105
Syntax105
Description105
E3 [three]	
Delta Marker Step Size106
Syntax106
Description106
E4 [four]	
Marker to Reference Level107
Syntax107
Description107
ERR	
List Error Codes108
Syntax108

Contents

Description	108
EX	
Exchange Trace A and Trace B	109
Syntax	109
Description	109
FA	
Start Frequency	110
Syntax	110
Description	110
FB	
Stop Frequency	111
Syntax	111
Description	111
FOFFSET	
Frequency Offset	112
Syntax	112
Description	112
FPKA	
Fast Preselector Peak	114
Syntax	114
Description	114
FS	
Full Span	115
Syntax	115
Description	115
GRAT	
Graticule	117
Syntax	117
Description	117
I1 [one]	
Set RF Coupling to DC	118
Syntax	118
Description	118
I2 [two]	
Set RF Coupling to AC	120
Syntax	120
Description	120
ID	
Identify	122
Syntax	122
Description	122
IP	
Instrument Preset	123
Syntax	123
Description	123
KS,	
Mixer Level	124
Syntax	124
Description	124

Contents

KS=	
Marker Counter Resolution	125
Syntax	125
Description	125
KSA	
Amplitude in dBm	126
Syntax	126
Description	126
KSa	
Normal Detection	127
Syntax	127
Description	127
KSB	
Amplitude in dBmV	128
Syntax	128
Description	128
KSb	
Positive Peak Detection	129
Syntax	129
Description	129
KSC	
Amplitude in dBuV	130
Syntax	130
Description	130
KSc	
A Plus B to A	131
Syntax	131
Description	131
KSD	
Amplitude in Volts	132
Syntax	132
Description	132
KSd	
Negative Peak Detection	133
Syntax	133
Description	133
KSE	
Title Mode	134
Syntax	134
Description	134
KSe	
Sample Detection	135
Syntax	135
Description	135
KSG	
Video Averaging On	136
Syntax	136
Description	136
KSG	

Contents

Display Off	137
Syntax	137
Description	137
KSH	
Video Averaging Off	138
Syntax	138
Description	138
KSh	
Display On	139
Syntax	139
Description	139
KSi	
Exchange Trace B and Trace C	140
Syntax	140
Description	140
KSj	
View Trace C	141
Syntax	141
Description	141
KSK	
Marker to Next Peak	142
Syntax	142
Description	142
KSk	
Blank Trace C	143
Syntax	143
Description	143
KSL	
Marker Noise Off	144
Syntax	144
Description	144
KSI	
Transfer Trace B to Trace C	145
Syntax	145
Description	145
KSM	
Marker Noise On	146
Syntax	146
Description	146
KSm	
Graticule Off	148
Syntax	148
Description	148
KSN	
Marker Minimum	149
Syntax	149
Description	149
KSn	
Graticule On	150

Contents

Syntax	150
Description	150
KSO	
Marker Span	151
Syntax	151
Description	151
KSo	
Annotation Off	152
Syntax	152
Description	152
KSp	
Annotation On	153
Syntax	153
Description	153
KST	
Fast Preset	154
Syntax	154
Description	154
KSV	
Frequency Offset	155
Syntax	155
Description	155
KSx	
External Trigger	156
Syntax	156
Description	156
KSy	
Video Trigger	157
Syntax	157
Description	157
KSZ	
Reference Level Offset	158
Syntax	158
Description	158
LO [zero]	
Display Line Off	159
Syntax	159
Description	159
LF	
Low Frequency Preset	160
Syntax	160
Description	160
LG	
Logarithmic Scale	161
Syntax	161
Description	161
LN	
Linear Scale	162
Syntax	162

Contents

Description	162
M1 [one]	
Marker Off	163
Syntax	163
Description	163
M2 [two]	
Marker Normal	164
Syntax	164
Description	164
M3 [three]	
Delta Marker	165
Syntax	165
Description	165
MA	
Marker Amplitude Output	167
Syntax	167
Description	167
MC0 [zero]	
Marker Frequency Counter Off	168
Syntax	168
Description	168
MC1 [one]	
Marker Frequency Counter On	169
Syntax	169
Description	169
MDS	
Measurement Data Size	170
Syntax	170
Description	170
MEAN	
Trace Mean	171
Syntax	171
Description	171
MF	
Marker Frequency Output	172
Syntax	172
Description	172
MINPOS	
Minimum X Position	173
Syntax	173
Description	173
MKA	
Marker Amplitude	174
Syntax	174
Description	174
MKACT	
Activate Marker	175
Syntax	175
Description	175

Contents

MKCF	
Marker to Center Frequency	176
Syntax	176
Description	176
MKD	
Marker Delta	177
Syntax	177
Description	177
MKF	
Marker Frequency	179
Syntax	179
Description	179
MKFC	
Marker Counter	180
Syntax	180
Description	180
MKFCR	
Marker Counter Resolution	181
Syntax	181
Description	181
MKMIN	
Marker Minimum	182
Syntax	182
Description	182
MKN	
Marker Normal	183
Syntax	183
Description	183
MKNOISE	
Marker Noise	184
Syntax	184
Description	184
MKOFF	
Marker Off	186
Syntax	186
Description	186
MKP	
Marker Position	187
Syntax	187
Description	187
MKPK	
Marker Peak	188
Syntax	188
Description	188
MKPX	
Marker Peak Excursion	190
Syntax	190
Description	190
MKREAD	

Contents

Marker Readout	191
Syntax	191
Description	191
MKRL	
Marker to Reference Level	193
Syntax	193
Description	193
MKSP	
Marker to Span	194
Syntax	194
Description	194
MKSS	
Marker to Step Size	195
Syntax	195
Description	195
MKTRACE	
Marker Trace	196
Syntax	196
Description	196
MKTRACK	
Marker Track	197
Syntax	197
Description	197
ML	
Mixer Level	198
Syntax	198
Description	198
MT0 [zero]	
Marker Track Off	200
Syntax	200
Description	200
MT1 [one]	
Marker Track On	201
Syntax	201
Description	201
MXMH	
Maximum Hold	202
Syntax	202
Description	202
O1 [one]	
Format - Display Units	203
Syntax	203
Description	203
O2 [two]	
Format - Two 8-Bit Bytes	204
Syntax	204
Description	204
O3 [three]	
Format - Real Amplitude Units	205

Contents

Syntax	205
Description	205
O4 [four]	
Format - One 8-Bit Byte	206
Syntax	206
Description	206
OT	
Output Trace Annotations	207
Syntax	207
Description	207
PEAKS	
Peaks	208
Syntax	208
Description	208
PKPOS	
Peak Position	209
Syntax	209
Description	209
PLOT	
Plot	210
Syntax	210
Description	210
PP	
Preselector Peak	211
Syntax	211
Description	211
PWRBW	
Power Bandwidth	212
Syntax	212
Description	212
R1 [one]	
Illegal Command SRQ	213
Syntax	213
Description	213
R2 [two]	
End-of-Sweep SRQ	214
Syntax	214
Description	214
R3 [three]	
Hardware Broken SRQ	215
Syntax	215
Description	215
R4 [four]	
Units-Key-Pressed SRQ	216
Syntax	216
Description	216
RB	
Resolution Bandwidth	217
Syntax	217

Contents

Description	217
RC	
Recall State	218
Syntax	218
Description	218
RCLS	
Recall State	219
Syntax	219
Description	219
REV	
Revision	220
Syntax	220
Description	220
RL	
Reference Level	221
Syntax	221
Description	221
RMS	
Root Mean Square Value	223
Syntax	223
Description	223
ROFFSET	
Reference Level Offset	224
Syntax	224
Description	224
RQS	
Service Request Mask	225
Syntax	225
Description	225
S1[one]	
Continuous Sweep	226
Syntax	226
Description	226
S2 [two]	
Single Sweep	227
Syntax	227
Description	227
SAVES	
Save State	228
Syntax	228
Description	228
SMOOTH	
Smooth Trace	229
Syntax	229
Description	229
SNGLS	
Single Sweep	230
Syntax	230
Description	230

Contents

SP	
Frequency Span	231
Syntax	231
Description	231
SRQ	
User-Defined SRQ	233
Syntax	233
Description	233
SS	
Center Frequency Step Size	234
Syntax	234
Description	234
ST	
Sweep Time	235
Syntax	235
Description	235
STDEV	
Standard Deviation of Trace Amplitudes	236
Syntax	236
Description	236
SV	
Save State	237
Syntax	237
Description	237
T1 [one]	
Free Run Trigger	238
Syntax	238
Description	238
T2 [two]	
Line Trigger	239
Syntax	239
Description	239
T3 [three]	
External Trigger	240
Syntax	240
Description	240
T4 [four]	
Video Trigger	241
Syntax	241
Description	241
TA	
Trace A	242
Syntax	242
Description	242
TB	
Trace B	243
Syntax	243
Description	243
TDF	

Contents

Trace Data Format	244
Syntax	244
Description	244
TH	
Threshold	245
Syntax	245
Description	245
TM	
Trigger Mode	246
Syntax	246
Description	246
TRA	
Trace Data Input and Output	247
Syntax	247
Description	247
TRB	
Trace Data Input and Output	248
Syntax	248
Description	248
TRDSP	
Trace Display	249
Syntax	249
Description	249
TRSTAT	
Trace State	250
Syntax	250
Description	250
TS	
Take Sweep	251
Syntax	251
Description	251
VAVG	
Video Average	252
Syntax	252
Description	252
VB	
Video Bandwidth	254
Syntax	254
Description	254
VBO	
Video Bandwidth Coupling Offset	255
Syntax	255
Description	255
VIEW	
View Trace	256
Syntax	256
Description	256
XCH	
Exchange	257

Syntax	257
Description	257
5. A Brief Introduction to the SCPI Language	
SCPI Language Basics	260
Command Keywords and Syntax	260
Creating Valid Commands	261
Special Characters in Commands	262
Parameters in Commands	263
Putting Multiple Commands on the Same Line	265

1 **Getting Started**

Option 266 Description

Option 266 (HP 8566B/68B Code Compatibility) for Agilent Technologies' ESA-E series and PSA series spectrum analyzers allows the analyzer to be controlled using many of the HP 8566B and HP 8568B programming commands. It is designed to replace HP 8566B and HP 8568B analyzers in many automated systems with minimal or no modification to the currently used measurement software.

Option 266 Limitations

The Agilent Option 266 (HP 8566B/68B Code Compatibility) has been designed to emulate as closely as possible the operation of the HP 8566B and HP 8568B spectrum analyzers. It is not, however, intended as an absolute direct replacement for these analyzers.

Only a subset of the HP 8566B and HP 8568B commands is supported in this option (through a GPIB interface). These supported commands were determined by feedback from our customers combined with technical considerations and constraints.

NOTE

Installing Option 266 Code Compatibility on a PSA series analyzer automatically uninstalls all incompatible personality options. Conversely, installing any incompatible personality option will uninstall the Option 266 Code Compatibility option.

In the HP 8566B and the HP 8568B, a “predefined function” is an analyzer command that returns a number that can be operated on by other analyzer commands. “Predefined variables” follow the same idea, only the value to be passed as a parameter to the next command is stored in a variable.

Option 266 does not support this type of behavior, so any commands that originally acted as predefined functions or variables, or that allowed predefined functions or variables as arguments in the HP 8566B or HP 8568B, will not do so in this analyzer. No user-defined functions, traces, or variables (FUNCDEF, TRDEF or VARDEF) can be used as arguments or commands in programs controlling this analyzer. In addition, the behavior of certain commands that rely on the “active functions” (UP, DN, etc.) might be slightly different.

Hardware Requirements for Option 266

One of the following Agilent spectrum analyzers and associated hardware options is required to run Option 266.

Table 1-1 Compatible Agilent ESA-E Series Spectrum Analyzers

Analyzer Model Number	Upper Frequency Limit	Firmware	HP 8566B/68B Code Compatibility Personality	B72 (Extended Memory Option)	A4H (GPIB and Parallel Interface Option)
E4401B	1.5 GHz	A.10.00 or later	Option 266	Required	Required
E4402B	3.0 GHz	A.10.00 or later	Option 266	Required	Required
E4404B	6.7 GHz	A.10.00 or later	Option 266	Required	Required
E4405B	13.2 GHz	A.10.00 or later	Option 266	Required	Required
E4407B	26.5 GHz	A.10.00 or later	Option 266	Required	Required

Table 1-2 Compatible Agilent PSA Series Spectrum Analyzers

Analyzer Model Number	Upper Frequency Limit	Firmware	HP 8566B/68B Code Compatibility Personality
E4440A	26.5 GHz	A.03.01 or later	Option 266
E4443A	6.7 GHz	A.03.01 or later	Option 266
E4445A	13.2 GHz	A.03.01 or later	Option 266
E4446A	44.0 GHz	A.03.01 or later	Option 266
E4448A	50.0 GHz	A.03.01 or later	Option 266

NOTE

The upper frequency limit of the HP 8566B spectrum analyzer is 22 GHz, and the upper limit of the HP 8568B analyzer is 1.5 GHz.

Installing/Uninstalling Option 266 - ESA-E Series Analyzers Only

NOTE

These installation instructions apply only to ESA-E series analyzer models, that is model numbers E4401B, E4402B, E4404B, E4405B, and E4407B.

You may want to install Option 266 or reinstall it after servicing or calibrating the analyzer. Before you can install the option, you will need an installation diskette or set of installation diskettes. The latest version of the installation disk set, at the time of purchase, was included with this programming compatibility guide.

To update an existing, previously installed Option 266, you may order the diskette(s) from Agilent Technologies or create a set from the Agilent internet site shown under [“Spectrum Analyzer Updates”](#) on [page 31](#).

Creating the Installation Disks from the Web

To create the installation disks on-line, visit the Agilent internet site shown under [“Spectrum Analyzer Updates”](#) on [page 31](#). Follow the instructions provided on the internet site for downloading the current Option 266 software and creating an installation disk. (A firmware update may be needed to ensure that the firmware and the software are compatible.) After successfully creating the installation disk set, you are ready to install Option 266 in your ESA-E Series analyzer.

NOTE

Refer to [Table 1-1 on page 3](#) to ensure your analyzer is capable of installing and running Option 266.

Installing the Option 266 Software

This procedure gives steps to install a new software option in an ESA-E Series Spectrum Analyzer using the internal floppy drive of the instrument. Screen messages display the update progress and give directions. The instrument will not need to be re-calibrated after this procedure since no changes are made to calibration or adjustment files.

If you have a problem with the installation process, refer to [“Troubleshooting the Installer”](#) on [page 8](#).

NOTE Once the installer has begun installing the software, any error will cause the entire option (including a previously installed version) to be removed from the instrument. For this reason, it is very important that you verify the disk prior to installing it. If the disk or any of the files are corrupt, you will not be able to use the option until you obtain a new installation disk set and run the install using the new set.

NOTE *This applies only to ESA-E series analyzers:*

Option 266 - HP 8566B/68B Code Compatibility and Option 290 - 8590 Code Compatibility cannot both be installed on the same Agilent analyzer at the same time as they will conflict with each other. If one of these personalities has been installed on your analyzer, it must be removed before the other is installed.

1. Press **System, More, Personalities, and Install**. If there is no floppy disk in the drive, the incorrect disk is inserted, or there is no installer on the disk, the error “No install disk present in disk drive” will be shown.

The screen will change and the **Install Pers.** menu will be shown.

2. Select **Verify Disks**.

When Verify Disks is running, the **Install Now** and **Exit Installer** keys will be grayed out.

3. When the verification has been completed successfully, press **Install Now** and the installation of the software will begin.

While the installer is running, the **Verify Disks** and **Exit Installer** keys will be grayed out.

4. Once the installation is complete, press **Exit Installer**. If a problem occurs, refer to [“Troubleshooting the Installer” on page 8](#).


NOTE When the installer starts up, it examines the instrument to ensure that all the required software and hardware options are present. If they are not, the installer will generate an error and you will not be able to install the option.

Uninstalling Option 266

You may want to uninstall Option 266. To uninstall Option 266, press **System, More, Personalities, Uninstall**. Select the option using the up/down arrow keys on the front panel, and press **Uninstall Now**.

Installer Screen and Menu

The top portion of the install screen is a table in which the files that are about to be installed are listed. The bottom portion of the screen contains information needed to track the progress of the install.

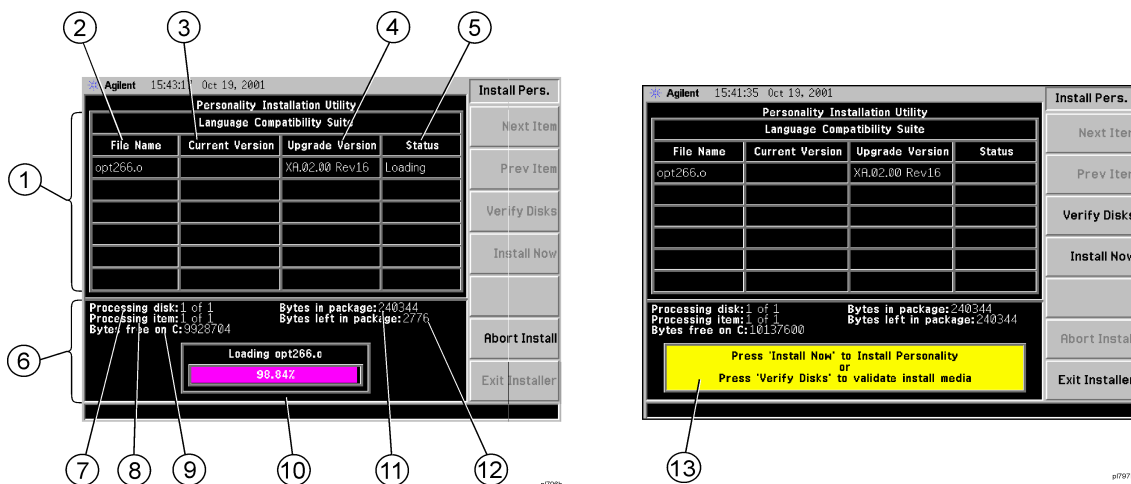

- 1 **File Table** displays the files to be installed and various file information. If there are more than six files, **Next Item** and **Prev Item** allow you to scroll the table to view additional items.
- 2 **File Name** displays the name of the files on the installation disk.
- 3 **Current Version** displays the version of the file that is currently installed in the instrument. (This field will be blank if this file is not currently installed in the instrument or if the file is a data file that has no version.)
- 4 **Upgrade Version** shows the version of the file on the install disk. This is the version of the file that will replace the currently installed version.
- 5 **Status** is updated to reflect what the installer is doing to the current file as the install progress. The valid messages seen in this column are listed in [Table 1-3 on page 7](#).
- 6 **Data Field** contains a status bar and various status information.
- 7 **Processing disk** shows the disk that is currently being read.
- 8 **Processing item** shows the file that is being processed by item number.
- 9 **Bytes free on C** is the number of bytes currently free on the instrument C: drive.

- 10 Status Bar** contains a status bar that runs from 0 to 100% and tracks the progress of the current step and a message line displays the step that is currently being executed.
- 11 Bytes in package** lists the number of bytes in the install package/ fill.
- 12 Bytes left in package** lists the number of bytes left to be read.
- 13** Message and error popup window that displays over the status bar. Information in this box will prompt you for action required to proceed to the next phase of the installation. It may also inform you of errors in the installation process and may prompt you for action required to correct the problem.

Table 1-3 **Installer Status Messages**

Failed	This means that something has gone wrong while processing this item. It is a fatal error and the installation can not be completed. The installer will try to get the system back to a good state which may entail completely removing the currently installed personality.
Loading	The file is currently being copied from the install media to the instrument's file system.
Verifying	This may mean one of two things: <ol style="list-style-type: none"> 1. If "Verify Disks" was pressed then Verifying means that the installer is currently reading the install media and comparing the known checksums to ensure the data is good. 2. If "Install Now" was pressed, then Verifying means that the installer is reading what was just loaded to ensure the checksum is correct.
Loaded	This means that the data has been placed on the instrument disk but has not yet been registered with the firmware.
Installed	This means that the data has been loaded into the instrument and registered. The install for this file is complete.
Skipping	This means that the installer has determined that this file does not need to be loaded into the instrument.

Troubleshooting the Installer

If the installation process stalls or fails in another way, follow these steps to resolve your problem.

1. If the instrument stops the update process before all the disks are loaded proceed as follows:
 - a. Press **Exit Installer** to abort the process.
 - b. Return to step 1 under [“Installing the Option 266 Software” on page 4](#).
2. If the instrument fails after repeating the installation procedure, get in touch with your nearest Agilent sales and service office for assistance. Please provide the following information:

Model Number:

Serial Number:

State that you are having trouble installing Option 266.

Installing Option 266 - PSA Series Analyzers Only

When you install Option 266, follow the process described below. See [“Loading an Optional Measurement Personality” on page 10](#)

Adding additional measurement personalities requires purchasing a retrofit kit for the desired option. The retrofit kit contains the measurement personality firmware and a license key certificate. It documents the license key number that is specific for your option and instrument serial number.

Why Aren't All the Personality Options Loaded in Memory?

There are many measurement personality options available for use with this instrument. Some versions of instrument hardware may not have enough memory to accommodate all the options that you have ordered. If this is the case you will need to swap the applications in/out of memory, as needed. It may be possible to upgrade your hardware to have more memory. Contact your local sales/service office.

Available Measurement Personality Options

To order a measurement personality option you need the instrument model number, the host ID and the serial number.

Required Information:	Front Panel Key Path:
Model #: _____	
Host ID: _____	System, Show System
Instrument Serial Number: _____	System, Show System

NOTE

The instrument must have Option B7J in order to add most of the measurement personality options. (cdmaOne, cdma2000, W-CDMA, GSM, EDGE, NADC, PDC.)

Available Personality Options ^a	Option	File Size (PSA Rev: A.02.04)
Phase noise measurement personality	226	2.6 MB
Basic measurement personality with digital demod hardware	B7J	Cannot be deleted
GSM (with EDGE) measurement personality	202	3.3 MB
cdmaOne measurement personality	BAC	2.0 MB
NADC measurement personalities (sold with PDC)	BAE	1.3 MB
PDC measurement personalities (sold with NADC)	BAE	1.4 MB
HP 8566B/68B Code Compatibility	266	0.65 MB ^b
W-CDMA measurement personality	BAF	4.2 MB ^c
cdma2000 measurement personality	B78	3.8 MB ^c
1xEV-DO measurement personality	204	6.0 MB ^c
Shared measurement library	n/a	1.5 MB

- a. Available as of the print date of this guide.
- b. This option is free and does not require a license key. Installing Option 266 Code Compatibility on a PSA series analyzer automatically uninstalls all incompatible personality options. Conversely, installing any incompatible personality option will uninstall the Option 266 Code Compatibility option.
- c. Some personality options use a shared measurement library. You have to add the memory requirements of this library to the value needed for the option. If you are loading multiple personalities that use this library, you only need to add this memory requirement once.

Loading an Optional Measurement Personality

You must load the desired personality option into the instrument memory. Loading can be done from a firmware CD-ROM or the internet location. An automatic loading program comes with the files and runs from your PC.

NOTE

When you add a new option, or update an existing option, you will get the updated version of all your current options since they are reloaded simultaneously. This process may also require you to update the instrument core firmware so that it is compatible with the new option.

You may not be able to fit all of the available measurement personalities in instrument memory at the same time. You may need to delete an existing option file from memory and load the one you want. Use the automatic update program that is provided with the files.

The approximate memory requirements for the options are listed above. These numbers are worst case examples. Some options share components and libraries, therefore the total memory usage of multiple options may not be exactly equal to the combined total.

You can install an updated version of firmware and your licensed options using a LAN connection and your PC. Instructions for loading future firmware updates are available from the following internet location: <http://www.agilent.com/find/psa/>

NOTE

There is no license key for Option 266. You therefore do not need to follow the usual license key installation process.

Configuring Option 266 - ESA and PSA Analyzers

Figure 1-1 and Figure 1-2 show the menu maps to configure Option 266 (HP 8566B/68B Code Compatibility) on your spectrum analyzer. Pressing **System, Config I/O, Configure Remote Lang, Language** on a PSA Series analyzer (or **System, Configure Remote Lang, Language** on an ESA-E Series analyzer) allows you to select the remote programming language for the instrument you are replacing.

Figure 1-1 System Menu Map for Option 266 on ESA-E Series Analyzers


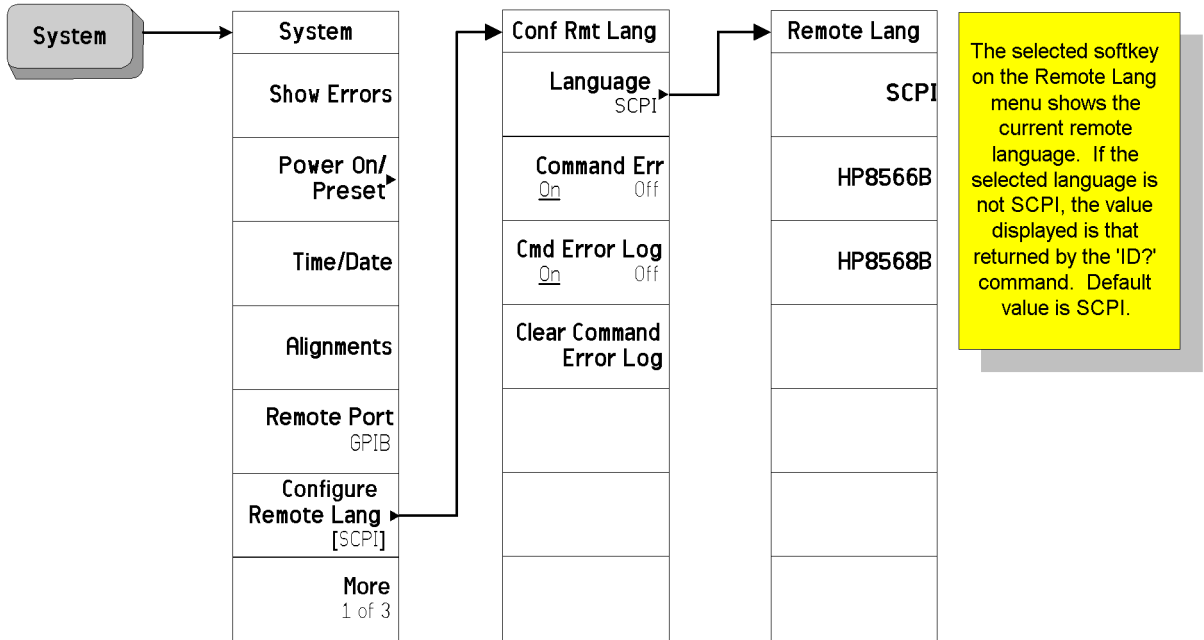


Figure 1-2 System Menu Map for Option 266 on PSA Series Analyzers

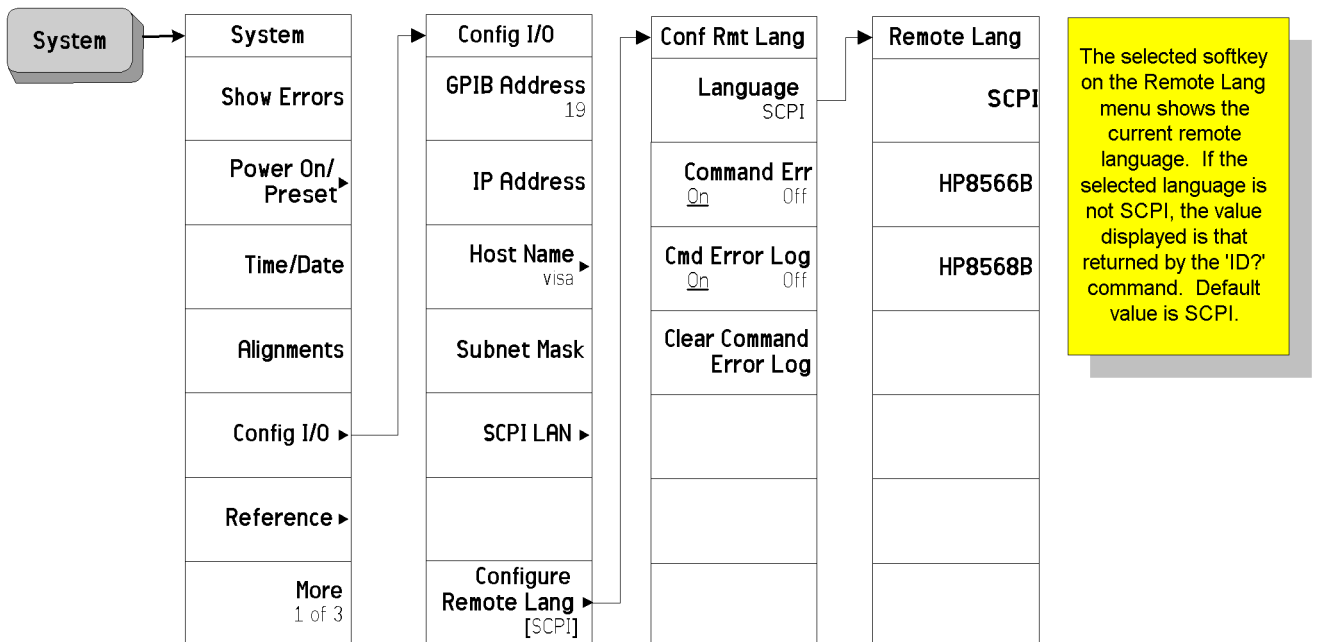

Analyzer Settings When Changing Language

When you power your ESA-E or PSA analyzer on for the first time, the language is set to SCPI. Subsequent changes of Remote Language cause the following settings to be changed:

- | | |
|----------------|--|
| SCPI | <ul style="list-style-type: none">• The analyzer is preset• The HP 8566B/68B Code Compatibility application is uncoupled |
| HP8566B | <ul style="list-style-type: none">• The analyzer is preset• Number of trace points is set to 1001• Start frequency is set to 2 GHz• Stop frequency is set to 22 GHz• RF coupling is set to DC (See Note below)• Sweep and FFT couplings are set |
| HP8568B | <ul style="list-style-type: none">• The analyzer is preset• Number of trace points is set to 1001• Start frequency is set to 0 Hz• Stop frequency is set to 1.5 GHz• RF coupling is set to AC (See Note below)• Sweep and FFT couplings are set |

NOTE	RF Coupling is only available on PSA analyzers with a maximum frequency of 26.5 MHz or lower, and on ESA analyzers that have Option UKB (Low Frequency Extension) installed.
-------------	--

Analyzer Settings After Powering On and Off

Whenever you switch your ESA-E or PSA analyzer off, its current language setting is saved. When you next switch it on, it will power up with exactly the same language setting as when you switched it off.

The Configure Remote Lang Screen Menu - ESA-E and PSA Analyzers

Configure Remote Lang	This key displays a menu allowing you to select the remote language you wish to use, and to determine how command error messages are stored and displayed.
Language	This key allows you to select which remote programming language you wish to use.
SCPI	Selects the SCPI remote programming language. This is the default setting after installation.
HP8566B	Selects the HP8566B remote programming language and sets the response to the remote programming command 'ID' to HP8566B . It also performs an instrument preset, setting Span and Trace Points appropriately.
HP8568B	Selects the HP8568B remote programming language and sets the response to the remote programming command 'ID' to HP8568B . It also performs an instrument preset, setting Span and Trace Points appropriately.

NOTE Setting the remote language to HP8566B or to HP8568B does not affect the response to the SCPI command '*IDN?' This command will still return the model number and firmware version number of the ESA-E or PSA analyzer.

Command Err This key determines whether or not command errors are displayed on the screen. When set to **On**, error messages generated by unrecognized commands or command arguments are displayed on the screen. When set to **Off**, error messages generated by unrecognized commands are not displayed. The current setting is underlined on the key label, and this setting is reversed each time the key is pressed.

NOTE Command Err is set to **On** after Option 266 has been installed. Thereafter, the latest setting will always be retained, even after a preset has been performed.

Cmd Error Log This key sets command error logging **On** or **Off**. When set to **On**, all error messages are stored in a log file, regardless of whether they have been displayed on the screen. When set to **Off**, no further command error messages are written to the log file.

The log file is an ASCII text file called LOGFILE.TXT on the C: drive. It has a maximum size of 32 KB. Once it has reached its maximum size, no further error messages will be recorded, but a message will be displayed prompting you to clear the log file. Switching **Cmd Error Log** to **Off** does not clear the log file. Only the **Clear Command Error Log** softkey will clear the error log.

NOTE Command Err Log is set to **On** after Option 266 has been installed. Thereafter, the latest setting will always be retained, even after a preset has been performed.

Clear Command Error Log This key allows you to clear all messages from the command error log file LOGFILE.TXT.

Differences Between Option 266 Commands and the Original HP 8566B/HP 8568B Commands

The following table lists commands that behave differently in Agilent Option 266 when compared to the original HP 8566B and HP 8568B analyzers:

Table 1-4 Analyzer Commands That Behave Differently in Option 266

Command	HP 8566B / HP 8568B Analyzers	ESA-E Option 266	PSA Option 266
AT	Specifies RF input annotation.	Maximum attenuation is limited to 65 dB. The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.
CF	Specifies the center frequency.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.
DET	Selects the type of detection - sample, normal, positive peak or negative peak - that is applied to the input signal.	Normal detection is not possible in the ESA, so selection of NRM command option will default to POS (Positive Peak) detection.	Normal detection is possible.
DL	Specifies the display line level.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.
FA	Specifies the start frequency value.	The OA option only returns the current start frequency value to the controller. It does not set the active function to the start frequency.	The OA option only returns the current start frequency value to the controller. It does not set the active function to the start frequency.
FB	Specifies the stop frequency value.	The OA option only returns the current stop frequency value to the controller. It does not set the active function to the stop frequency.	The OA option only returns the current stop frequency value to the controller. It does not set the active function to the stop frequency.

Table 1-4 Analyzer Commands That Behave Differently in Option 266

Command	HP 8566B / HP 8568B Analyzers	ESA-E Option 266	PSA Option 266
FOFFSET	Specifies the frequency offset.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.
FPKA	Performs a fast preselector peak and returns the measured value of the active marker.	Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the active marker frequency. This functionality is only available in ESA-E series analyzers whose frequency range extends beyond 3 GHz, that is the E4404B, the E4405B, and the E4407B analyzers.	Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the active marker frequency. This functionality is available in all PSA series analyzers.
I1 <i>[one]</i>	Sets RF coupling to DC.	This command is not supported on model number E4401B. It is only supported on model number E4407B if Option UKB has been installed. Note also that the HP 8568B analyzer has two RF ports whereas the ESA only has one.	This command is only supported on PSA analyzers with a frequency range up to 26.5 GHz, that is the E4440A, the E4443A and the E4445A. Note also that the HP 8568B analyzer has two RF ports whereas the PSA only has one.
I2 <i>[two]</i>	Sets RF coupling to AC.	This command is not supported on model number E4401B. It is only supported on model number E4407B if Option UKB has been installed. Note also that the HP 8568B analyzer has two RF ports whereas the ESA only has one.	This command is only supported on PSA analyzers with a frequency range up to 26.5 GHz, that is the E4440A, the E4443A and the E4445A. Note also that the HP 8568B analyzer has two RF ports whereas the PSA only has one.
KS,	Specifies the maximum signal level applied to the input mixer for signals at or below the reference level.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.

Table 1-4 Analyzer Commands That Behave Differently in Option 266

Command	HP 8566B / HP 8568B Analyzers	ESA-E Option 266	PSA Option 266
<i>KS= (on HP 8568B analyzers)</i>	Specifies the resolution of the marker frequency counter.	Language set to HP8566B: not supported. Language set to HP8568B: No difference.	Language set to HP8566B: not supported. Language set to HP8568B: Setting the marker frequency counter resolution changes the gate time. The gate time is calculated by: Gate Time = 1/(Res. value)
<i>KSa</i>	Selects normal detection.	Normal detection is not possible in the ESA, so selection of <i>KSa</i> command option will default to POS (Positive Peak) detection.	Normal detection is possible.
<i>KSE</i>	Activates the title mode, using '@' as the default termination character.	The only acceptable termination characters are '@' and Carriage Return. The '@' character does not appear on the screen.	The only acceptable termination characters are '@' and Carriage Return. The '@' character does not appear on the screen.
<i>KSG</i>	Enables video averaging.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.
<i>KSM</i>	Displays the noise density at the marker.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.
<i>KST (on HP 8566B analyzers)</i>	Performs a fast preset on HP 8566B analyzers.	<i>Language set to HP8566B:</i> ESA series analyzers cannot perform a fast preset. The <i>KST</i> command performs an instrument preset instead, setting the analyzer back to its factory default settings.	<i>Language set to HP8566B:</i> PSA series analyzers cannot perform a fast preset. The <i>KST</i> command performs an instrument preset instead, setting the analyzer back to its factory default settings.
<i>KSV</i>	Specifies frequency offset values.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.

Table 1-4 Analyzer Commands That Behave Differently in Option 266

Command	HP 8566B / HP 8568B Analyzers	ESA-E Option 266	PSA Option 266
KSx	Selects normal external triggering. Fast sweep times in zero span can cause the displayed trace to flicker.	The displayed trace is automatically refreshed. All flickering has been eliminated.	The displayed trace is automatically refreshed. All flickering has been eliminated.
KSy	Selects normal video triggering. Fast sweep times in zero span can cause the displayed trace to flicker.	The displayed trace is automatically refreshed. All flickering has been eliminated.	The displayed trace is automatically refreshed. All flickering has been eliminated.
KSZ	Specifies the reference level offset.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.
LG	Sets amplitude readout to logarithmic scale.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.
M2	Sets normal marker.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.
M3	Measures the amplitude and frequency differences between the active and the delta marker.	No difference if Marker Noise (MKNOISE) is switched on when the measurement is made. If MKNOISE is switched on after the measurement has been made, the amplitude measured is that between the noise density and the carrier signal. The OA option only returns the current value to the controller. It does not set the active function.	No difference if Marker Noise (MKNOISE) is switched on when the measurement is made. If MKNOISE is switched on after the measurement has been made, the amplitude measured is that between the noise density and the carrier signal. The OA option only returns the current value to the controller. It does not set the active function.

Table 1-4 Analyzer Commands That Behave Differently in Option 266

Command	HP 8566B / HP 8568B Analyzers	ESA-E Option 266	PSA Option 266
MKA	Specifies the amplitude of the active marker in dBm when the active marker is of the fixed or amplitude type.	Only supports the query option.	Only supports the query option.
MKD	Measures the amplitude and frequency differences between the active and the delta marker.	No difference if Marker Noise (MKNOISE) is switched on when the measurement is made. If MKNOISE is switched on after the measurement has been made, the amplitude measured is that between the noise density and the carrier signal. The OA option only returns the current value to the controller. It does not set the active function.	No difference if Marker Noise (MKNOISE) is switched on when the measurement is made. If MKNOISE is switched on after the measurement has been made, the amplitude measured is that between the noise density and the carrier signal. The OA option only returns the current value to the controller. It does not set the active function.
MKFCR	Specifies the resolution of the marker frequency counter.	No difference.	Setting the marker frequency counter resolution changes the gate time. The gate time is calculated by: Gate Time = 1/(Res. value)
MKREAD	Selects the type of trace information that is displayed.	Will not accept the FFT (Fast Fourier Transform) keyword.	Will not accept the FFT (Fast Fourier Transform) keyword.
MKN	Sets normal marker.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.

Table 1-4 Analyzer Commands That Behave Differently in Option 266

Command	HP 8566B / HP 8568B Analyzers	ESA-E Option 266	PSA Option 266
ML	Specifies the maximum signal level applied to the input mixer for signals at or below the reference level.	<p>The mixer level is calculated using the following equation.</p> $\text{Mixer Level} = \text{Ref. Level} - \text{Attenuation} + \text{Ext. Amp Gain.}$ <p>The external amplifier gain is not preset by doing an IP in case the instrument is measuring a large signal.</p> <p>The OA option only returns the current value to the controller. It does not set the active function.</p>	<p>The mixer level is calculated using the following equation.</p> $\text{Mixer Level} = \text{Ref. Level} - \text{Attenuation} + \text{Ext. Amp Gain.}$ <p>The external amplifier gain is not preset by doing an IP in case the instrument is measuring a large signal.</p> <p>The OA option only returns the current value to the controller. It does not set the active function.</p>
OT	Output Trace Annotations (Sends 32 character-strings, each of up to 64 characters)	String number 27 ('dirty marker' status report) is not supported.	No difference.
PLOT	Transfers trace data, graticule parameters and graticule annotation directly to a plotter.	Prints the screen display on a printer rather than transferring data to a plotter.	Prints the screen display on a printer rather than transferring data to a plotter.
PP	Peaks preselector.	<p>Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the active marker frequency.</p> <p>This functionality is only available in ESA-E series analyzers whose frequency range extends beyond 3 GHz, that is the E4404B, the E4405B, and the E4407B analyzers.</p>	<p>Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the active marker frequency.</p> <p>This functionality is available in all PSA series analyzers.</p>
PWRBW	Power Bandwidth	In the HP 8566B/8568B, the trace stops when the PWRBW command is issued. The trace does not stop in the ESA-E series analyzers.	In the HP 8566B/8568B, the trace stops when the PWRBW command is issued. The trace does not stop in the PSA series analyzers.

Table 1-4 Analyzer Commands That Behave Differently in Option 266

Command	HP 8566B / HP 8568B Analyzers	ESA-E Option 266	PSA Option 266
R4	Activates the units-key-pressed and illegal-command service requests.	The units-key-pressed service request cannot be supported since front panel interaction is not allowed.	The units-key-pressed service request cannot be supported since front panel interaction is not allowed.
RB	Specifies the resolution bandwidth.	Default values may be different to the HP 8566B. Please refer to your ESA-E or PSA User's Guide for restrictions on the resolution bandwidth range. The OA option only returns the current value to the controller. It does not set the active function.	Default values may be different to the HP 8566B. Please refer to your ESA-E or PSA User's Guide for restrictions on the resolution bandwidth range. The OA option only returns the current value to the controller. It does not set the active function.
RC	Recalls registers containing a set of instrument states.	Recalling the previous state data (RC 7) is not supported.	Recalling the previous state data (RC 7) is not supported.
RCLS	Recalls registers containing a set of instrument states.	Recalling the previous state data (RCLS 7) is not supported.	Recalling the previous state data (RCLS 7) is not supported.
REV	Returns the firmware revision number.	Returns the build date of your Option 266 (<i>in YYWW format</i>).	Returns the build date of your Option 266 (<i>in YYWW format</i>).
RL	Sets the reference level.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.
ROFFSET	Sets the reference level offset.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.
RQS	Sets a bit mask for service requests.	Some differences may be noticed in the value returned by a query.	Some differences may be noticed in the value returned by a query.
SMOOTH	Smooths the trace.	Some differences in the trace display may be noticed.	Some differences in the trace display may be noticed.

Table 1-4 Analyzer Commands That Behave Differently in Option 266

Command	HP 8566B / HP 8568B Analyzers	ESA-E Option 266	PSA Option 266
SP	Sets the frequency span.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.
SS	Sets the center frequency step size.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.
ST	Sets the sweep time.	The OA option only returns the current value to the controller. It does not set the active function.	The OA option only returns the current value to the controller. It does not set the active function.
TH	Blanks the display of signals below the threshold level.	No change will be noticed in the display. Note that the PEAKS and MKPK commands can cause all values below the threshold level to be disregarded. The OA option only returns the current value to the controller. It does not set the active function.	No change will be noticed in the display. Note that the PEAKS and MKPK commands can cause all values below the threshold level to be disregarded. The OA option only returns the current value to the controller. It does not set the active function.
VB	Specifies the video filter bandwidth.	Default values may be different to the HP 8566B. Please refer to your ESA-E or PSA User's Guide for restrictions on the video bandwidth range. The OA option only returns the current value to the controller. It does not set the active function.	Default values may be different to the HP 8566B. Please refer to your ESA-E or PSA User's Guide for restrictions on the video bandwidth range. The OA option only returns the current value to the controller. It does not set the active function.

Table 1-4 Analyzer Commands That Behave Differently in Option 266

Command	HP 8566B / HP 8568B Analyzers	ESA-E Option 266	PSA Option 266
VAVG	<p>Enables video averaging, displaying the original trace in Trace C.</p> <p>Sweep time remains unchanged.</p>	<p>Only displays the average trace in Trace A.</p> <p>Sweep time changes.</p> <p>Differences in how the average is calculated when other settings have changed.</p>	<p>Only displays the average trace in Trace A.</p> <p>Sweep time changes.</p> <p>Differences in how the average is calculated when other settings have changed.</p>
VBO	Specifies the ratio of video to resolution bandwidths when coupled.	No change.	Some differences may be noticed when VBO of 1 or of -1 is used.

Differences Between HP8566B and HP8568B Remote Languages in Option 266

The following table lists Option 266 commands that behave differently in the HP8566B remote language when compared to the HP8568B remote language:

Table 1-5

Option 266 Commands That Behave Differently in the HP8566B and HP8568B Remote Languages

Command	HP8566B Remote Language	HP8568B Remote Language
FPKA	Valid and supported	Invalid - HP 8566B command only
I1 <i>[one]</i>	Invalid - HP 8568B command only	Valid and supported (but see Table 1-4 on page 17 and “ I1 [one] Set RF Coupling to DC ” on page 118)
I2 <i>[two]</i>	Invalid - HP 8568B command only	Valid and supported (but see Table 1-4 on page 17) and “ I2 [two] Set RF Coupling to AC ” on page 120
KSK	Valid and supported	Valid command on the HP 8568B but unsupported in Option 266
KSN	Valid and supported	Valid command on the HP 8568B but unsupported in Option 266
KST	Valid and supported	Valid command on the HP 8568B but unsupported in Option 266
KS=	Valid command on the HP 8566B but unsupported in Option 266	Valid and supported
LF	Valid and supported	Invalid - HP 8566B command only
MC0 <i>[zero]</i>	Invalid - HP 8568B command only	Valid and supported
MC1 <i>[one]</i>	Invalid - HP 8568B command only	Valid and supported
MKFC	Invalid - HP 8568B command only	Valid and supported

Table 1-5 **Option 266 Commands That Behave Differently in the HP8566B and HP8568B Remote Languages**

Command	HP8566B Remote Language	HP8568B Remote Language
MKFCR	Invalid - HP 8568B command only	Valid and supported
PP	Valid and supported	Invalid - HP 8566B command only

Running Software that Requires SCPI Commands

When Remote Language HP8566B or HP8568B has been selected, you will only have access to a very small subset of SCPI commands. If you are not familiar with the SCPI remote programming language, [Chapter 5](#), “A Brief Introduction to the SCPI Language,” on page 259 contains some useful information.

The SCPI commands available while using the remote language HP8566B or HP8568B are:

- `*IDN?`
Queries and returns the instrument identification string.
- `*RST`
Performs an instrument preset.
- `:SYSTem:LANGUage SCPI|HP8566B|HP8568B`
Sets the current remote language.

This command is only available if you have Option 266 installed on your analyzer.

NOTE

Agilent Technologies recommend that you do not repeatedly swap to and from the SCPI language within your programs.

- `:SYSTem:LANGUage?`
Queries and returns the current remote language.

This command is only available if you have Option 266 installed on your analyzer.
- `[:SENSe] :SWEep:TYPE AUTO|SWEep|FFT`
Sets the Sweep Type.
- `[:SENSe] :SWEep:TYPE?`
Queries and returns the Sweep Type.
- `[:SENSe] :SWEep:TYPE:AUTO:RULEs SPEed|DRANge|DYNamicrange`
Sets the auto rule setting for FFT and Sweep Type.
- `[:SENSe] :SWEep:TYPE:AUTO:RULEs?`
Queries and returns the auto rule setting for FFT and Sweep Type.
- `:SYSTem:OPTion?`
Returns a list of installed options.

If Option 266 is installed on your analyzer, the string “266” will appear in the returned string. In the following example, options B7J, 266, and 1DS are all installed.

Example: “B7J,266,1DS”

To return the analyzer to its full ESA or PSA SCPI capability, you must specify the remote language as SCPI.

Service and Calibration

Since the Performance Verification and Adjustment Software uses the SCPI command language, you will need to set Remote Language to SCPI prior to calibration or service of your Agilent spectrum analyzer.

When your analyzer is returned from an Agilent Technologies service center, you may have to reinstall Option 266. Refer to [“Installing/Uninstalling Option 266 - ESA-E Series Analyzers Only”](#) on page 4 or [“Installing Option 266 - PSA Series Analyzers Only”](#) on page 9

Documentation for Option 266

Spectrum Analyzers with Option 266

When you purchase your ESA-E Series or PSA Series spectrum analyzer with the HP 8566B/68B Code Compatibility (Option 266), you will receive this manual - the *HP 8566B/68B Code Compatibility Guide*. For information on ESA series analyzers and other related documentation, refer to the ESA web site at <http://www.agilent.com/find/esa/>. For information on PSA series analyzers and other related documentation, refer to the PSA web site at <http://www.agilent.com/find/psa/>.

This *HP 8566B/68B Code Compatibility Guide* is not designed to be a comprehensive guide to all HP 8566B/68B commands. It gives brief descriptions of the supported commands, and highlights important functional or behavioral differences that you should be aware of when transferring existing HP 8566B or HP 8568B code to your ESA-E series or PSA analyzer. For a fuller description of the commands, refer to the HP 8566B or HP 8568B's *Operating and Programming Manual*.

Spectrum Analyzer Updates

For the latest information about this instrument, including software upgrades, application information, and product information, please visit the URL listed below.

Updating the Firmware and Software

Updated versions of the Agilent Spectrum Analyzers' firmware and software will be available via several sources. Information on the latest firmware and software revision can be accessed through the following URL.

URLs to Obtain Update Information

For ESA analyzers: <http://www.agilent.com/find/esa/>

For PSA analyzers: <http://www.agilent.com/find/psa/>

NOTE

If you have purchased Option 266 as an upgrade, the latest version of the analyzer's firmware has been included and should be loaded into your instrument before installing the Option 266.

Table of HP 8566B and HP 8568B Commands

The following table lists all HP 8566B and HP 8568B programming commands, and indicates which are supported in Option 266. Refer to the alphabetical listing of commands in [Chapter 4](#), “[Programming Commands](#),” on [page 61](#) for more detailed information about each supported command.

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
A1 <i>[one]</i>	Yes	Clear write of Trace A	See page 65 for more details
A2 <i>[two]</i>	Yes	Maximum hold for Trace A	See page 66 for more details
A3 <i>[three]</i>	Yes	View Trace A	See page 67 for more details
A4 <i>[four]</i>	Yes	Blank Trace A	See page 68 for more details
ABS	No	Puts the absolute value of the source into the destination.	Returns error - "CMD NOT SUPPORTED"
ADD	No	Operand 1 + Operand 2 into destination	Returns error - "CMD NOT SUPPORTED"
AMB	Yes	A minus B into A	See page 69 for more details
AMBPL	Yes	(A minus B) + DL into A	See page 70 for more details
ANNOT	Yes	Turns the Annotation ON or OFF	Not supported on PSA See page 71 for more details
APB	Yes	A plus B into A (Adds trace A and B point by point and sends results to A)	See page 72 for more details
AT	Yes	Specifies input attenuation	See page 73 for more details
AUNITS	Yes	Specifies amplitude units for input, output and display	See page 75 for more details
AVG	No	Operand is averaged into destination	Returns error - "CMD NOT SUPPORTED"
AXB	Yes	Exchange A and B	See page 76 for more details
B1 <i>[one]</i>	Yes	Clear write of Trace B	See page 77 for more details

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
B2 <i>[two]</i>	Yes	Maximum hold for Trace B	See page 78 for more details
B3 <i>[three]</i>	Yes	View Trace B	See page 79 for more details
B4 <i>[four]</i>	Yes	Blank Trace B	See page 80 for more details
BL	Yes	Trace B minus Display Line into B	See page 81 for more details
BLANK	Yes	Blanks traces and stops the sweep. Trace is not updated	See page 82 for more details
BML	Yes	Trace B minus Display Line into B	See page 83 for more details
BRD	No	Bus Read (Reads a 2 byte word at the internal input/output) (This is a service diagnostic function only)	Returns error - "CMD NOT SUPPORTED"
BTC	Yes	Transfers trace B to trace C	See page 84 for more details
BWR	No	Bus Write Word (Writes a 2 byte word at the internal input/output) (This is a service diagnostic function only)	Returns error - "CMD NOT SUPPORTED"
BXC	Yes	Exchanges traces B and C point by point	See page 85 for more details
C1 <i>[one]</i>	Yes	Trace A minus Trace B into Trace A On	See page 86 for more details
C2 <i>[two]</i>	Yes	Trace A minus Trace B into Trace A Off	See page 87 for more details
CA	Yes	Couple Attenuator (Resets the attenuation value so that a continuous wave signal displayed at the reference level will yield the maximum mixer level (see ML command) at the mixer input)	See page 88 for more details
CF	Yes	Center Frequency	See page 89 for more details

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
CLRAVG	Yes	Clear Average	See page 91 for more details
CLRW	Yes	Enables the Clear-Write Mode which continuously displays any signals present at the analyzer input	See page 92 for more details
CNVLOSS	No	Selects the reference level offset to amplitude calibrate the display for a mixer with a given loss	Returns error - "CMD NOT SUPPORTED"
COMPRESS	No	Compresses trace source to fit trace destination	Returns error - "CMD NOT SUPPORTED"
CONCAT	No	Concatenates operands and sends new trace to destination	Returns error - "CMD NOT SUPPORTED"
CONTS	Yes	Sets the analyzer to continuous sweep mode	See page 93 for more details
CR	Yes	Couples the resolution bandwidth with the video bandwidth and sweep time	See page 94 for more details
CS	Yes	Couples the center frequency step size to the span width (Step Size = 0.1 x Span Width) (1 major graticule division)	See page 95 for more details
CT	Yes	Couples the sweep time with the resolution and video bandwidths	See page 96 for more details
CTA	No	Converts the operand values from display units to absolute amplitude units	Returns error - "CMD NOT SUPPORTED"
CTM	No	Converts the operand values to vertical display units	Returns error - "CMD NOT SUPPORTED"
CV	Yes	Couples video bandwidth with the resolution bandwidth and sweep time	See page 97 for more details
D1 <i>[one]</i>	No	Sets the display to normal size, selected with IP.	Returns error - "CMD NOT SUPPORTED"
D2 <i>[two]</i>	No	Sets the display to full CRT size.	Returns error - "CMD NOT SUPPORTED"

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
DA	Yes	Display memory address	Only DA 1, DA 1025 and DA 3073 are supported
DD	No	Writes two 8 bytes (binary) into the current or specified memory address & advances address by 1	Returns error - "CMD NOT SUPPORTED"
DET	Yes	Input Detector	See page 99 for more details
DISPOSE	No	Clears specified operands (Trace Label, Var Identifier, Function Identifier, Key Number)	Returns error - "CMD NOT SUPPORTED"
DIV	No	Divide operand 1 by operand 2, point by point	Returns error - "CMD NOT SUPPORTED"
DL	Yes	Display Line Level (dBm)	See page 101 for more details
DLE	Yes	Enable or disables the Display Line	See page 102 for more details
DONE	Yes	A synchronizing function - sends a '1' to the controller after the command line is executed	See page 103 for more details
DR	No	Display Read - sends the contents of the current display address to the controller	Returns error - "CMD NOT SUPPORTED"
DSPLY	No	Displays the value of a variable	Returns error - "CMD NOT SUPPORTED"
DT	No	Define Terminator	Returns error - "CMD NOT SUPPORTED"
DW	No	Display Write - sends a decimal value from the controller to the display memory address	Returns error - "CMD NOT SUPPORTED"
D3 <i>[three]</i>	No	Sets the display to expanded size.	Returns error - "CMD NOT SUPPORTED"
E1 <i>[one]</i>	Yes	Moves the active marker to the maximum signal detected.	See page 104 for more details
E2 <i>[two]</i>	Yes	Moves the active marker frequency into the center frequency.	See page 105 for more details

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
E3 <i>[three]</i>	Yes	Moves the active marker frequency or the delta marker frequency into the center frequency step size.	See page 106 for more details
E4 <i>[four]</i>	Yes	Moves the active marker to the reference level.	See page 107 for more details
EE	No	Enables front panel number entry	Returns error - "CMD NOT SUPPORTED"
EK	No	Enables the data knob	Returns error - "CMD NOT SUPPORTED"
ELSE	No	Conditional command used in conjunction with an IF command	Returns error - "CMD NOT SUPPORTED"
EM	No	Erase Trace C memory addresses 3072 through 4095	Returns error - "CMD NOT SUPPORTED"
ENDIF	No	Finishing off an IF command	Returns error - "CMD NOT SUPPORTED"
ENTER	No	Enter from GPIB, allows a function definition to enter data from the GPIB port.	Returns error - "CMD NOT SUPPORTED"
ERASE	No	All user memory and save/recall registers are erased.	Returns error - "CMD NOT SUPPORTED"
ERR	Yes	Returns a list of all error codes.	See page 108 for more details
EX	Yes	Exchange Trace A and Trace B	See page 109 for more details
EXP	No	Exponential (10 raised to the power of (operand/scaling factor), to destination)	Returns error - "CMD NOT SUPPORTED"
EXTMXR	No	Presets the External Mixing Mode (setting the frequency range from 18.0 GHz to 26.5 GHz)	Returns error - "CMD NOT SUPPORTED"
FA	Yes	Specifies the start frequency value	See page 110 for more details
FB	Yes	Specifies the stop frequency value	See page 111 for more details

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
FFT	No	Fast Fourier Transform on a trace array (contains logged magnitude components only)	Returns error - "CMD NOT SUPPORTED"
FFTKNL	No	16 bit Discrete Fourier Transform on specified traces, overlaying them with the results.	Returns error - "CMD NOT SUPPORTED"
FOFFSET	Yes	Frequency Offset	See page 112 for more details
FPKA	Yes	Fast Preselector Peak	See page 114 for more details
FS	Yes	Full Span	See page 115 for more details
FULBAND	No	Sets the start & stop frequencies for the analyzer external mixing bands	Returns error - "CMD NOT SUPPORTED"
FUNCDEF	No	Function Define - defines a program routine as a function label	Returns error - "CMD NOT SUPPORTED"
GR	No	Plots GPIB inputs as graphs (in trace modes of application only)	Returns error - "CMD NOT SUPPORTED"
GRAT	Yes	Graticule on and off	See page 117 for more details
HD	No	Holds data entry (Disables)	Returns error - "CMD NOT SUPPORTED"
HNLOCK	No	Harmonic lock (LO harmonic frequency lock)	Returns error - "CMD NOT SUPPORTED"
HNUNLK	No	Harmonic Bank Unlock (tune over the whole frequency range)	Returns error - "CMD NOT SUPPORTED"
I1 <i>[one]</i>	Yes	Set RF coupling to DC.	Not supported on all ESAs. Not supported on PSAs where the maximum frequency range is greater than 26.5 GHz. See page 118 for more details

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
I2 [two]	Yes	Set RF coupling to AC.	Not supported on all ESAs. Not supported on PSAs where the maximum frequency range is greater than 26.5 GHz. See page 120 for more details
IB	No	Input to trace B memory	Returns error - "CMD NOT SUPPORTED"
ID	Yes	Instrument Identity (Identify)	See page 122 for more details
IDSTAT	No	Signal Identifier Status (Returns 1,0,-1)	Returns error - "CMD NOT SUPPORTED"
IF	No	Conditional command used in conjunction with other commands	Returns error - "CMD NOT SUPPORTED"
IFTKNL	No	16 bit Discrete Fourier Transform on specified traces, overlaying them with the results multiplied by N (length of each trace).	Returns error - "CMD NOT SUPPORTED"
INT	No	The greatest integer which is less than or equal to the source real is stored in the destination	Returns error - "CMD NOT SUPPORTED"
IP	Yes	Sets instrument parameters to preset values. (deactivates the display line)	See page 123 for more details
KEYDEF	No	Assigns function label or command list to soft key number	Returns error - "CMD NOT SUPPORTED"
KEYEXC	No	Executes specified soft key	Returns error - "CMD NOT SUPPORTED"
KS#	No	Turns off the YIG-tuned mixed (YTX) self heating correction factor	Returns error - "CMD NOT SUPPORTED"
KS(No	Lock registers	Returns error - "CMD NOT SUPPORTED"
KS)	No	Unlock registers	Returns error - "CMD NOT SUPPORTED"

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
KS,	Yes	Specifies the maximum signal level that is applied to the input mixer	Does not support the use of no parameters
KS/	No	Manual Preselector Tracking	Returns error - "CMD NOT SUPPORTED"
KS<	No	Specifies the preamp gain for signal input 1.	Returns error - "CMD NOT SUPPORTED"
KS= (HP 8566B only)	No	Reinstate Automatic Preselector Tracking	See page 125 for more details
KS= (HP 8568B only)	Yes	Specifies the resolution of the marker frequency counter	See page 125 for more details
KS>	No	Specifies the preamp gain for signal input 2.	Returns error - "CMD NOT SUPPORTED"
KS	No	Writes the instruction word or data value into the specified memory address	Returns error - "CMD NOT SUPPORTED"
KS123	No	Reads display memory	Returns error - "CMD NOT SUPPORTED"
KS125	No	Writes to display memory	Returns error - "CMD NOT SUPPORTED"
KS126	No	Reads every nth value in the memory	Returns error - "CMD NOT SUPPORTED"
KS127	No	Writes to display memory	Returns error - "CMD NOT SUPPORTED"
KS39	No	Writes to display memory	Returns error - "CMD NOT SUPPORTED"
KS43	No	Sends Service Request '102'. This queries whether the analyzer current frequency band has been exceeded (Frequency Limit SRQ)	Returns error - "CMD NOT SUPPORTED"
KS91	No	Read amplitude error	Returns error - "CMD NOT SUPPORTED"
KS92	No	Write in display units	Returns error - "CMD NOT SUPPORTED"

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
KS94	No	Read LO harmonic number	Returns error - "CMD NOT SUPPORTED"
KSA	Yes	Sets amplitude units to dBm	See page 126 for more details
KSa	Yes	Normal input detection for displaying trace information	See page 128 for more details
KSB	Yes	Sets amplitude units to dBmV	See page 128 for more details
KSb	Yes	Positive peak input detection	See page 129 for more details
KSC	Yes	Sets amplitude units to dBuV	See page 130 for more details
KSc	Yes	Trace A + Trace B into Trace A (APB)	See page 131 for more details
KSD	Yes	Sets amplitude units to Volts	See page 132 for more details
KSd	Yes	Negative peak detection	See page 133 for more details
KSE	Yes	Activates the Title Mode	See page 134 for more details
KSe	Yes	Sample detection	See page 135 for more details
KSF	No	8566B Shift YTO: Removes the IF offset from the YIG-tuned oscillator (Service Diagnostic aid). 8568B: Measures the sweep time.	Returns error - "CMD NOT SUPPORTED"
KSf	No	Protects instrument state configuration during power loss	Returns error - "CMD NOT SUPPORTED"
KSG	Yes	Video averaging On	See page 136 for more details
KSg	Yes	CRT beam off	See page 137 for more details
KSH	Yes	Video averaging Off	See page 138 for more details

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
KSh	Yes	CRT beam on	See page 139 for more details
KSI	No	Extends reference level range to maximum limits (-139.9 dBm to +60 dBm)	Returns error - "CMD NOT SUPPORTED"
KSi	Yes	Exchange Trace B and Trace C (BXC)	See page 140 for more details
KSJ	No	DAC Control	Returns error - "CMD NOT SUPPORTED"
KSj	Yes	View Trace C	See page 141 for more details
KSK	Yes	Marker to Next Peak of lower amplitude	See page 142 for more details
KSk	Yes	Blank Trace C	See page 143 for more details
KSL	Yes	Marker noise Off (disables the noise density function which displays the RMS noise density)	See page 144 for more details
KSI	Yes	Transfer Trace B to Trace C (BTC)	See page 145 for more details
KSM	Yes	Marker noise On	See page 146 for more details
KSm	Yes	Graticule Off	See page 148 for more details
KSN	Yes	Marker minimum value detected	See page 149 for more details
KSn	Yes	Graticule On	See page 150 for more details
KSO	Yes	Marker span	See page 151 for more details
KSo	Yes	Annotation Off	See page 152 for more details
KSP	No	GPIO address	Returns error - "CMD NOT SUPPORTED"

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
KSp	Yes	Annotation On	See page 153 for more details
KSQ	No	Band unlock	Returns error - "CMD NOT SUPPORTED"
KSq	No	Step gain Off	Returns error - "CMD NOT SUPPORTED"
KSR	No	Diagnostics On	Returns error - "CMD NOT SUPPORTED"
KSr	No	Service Request 102 to the controller	Returns error - "CMD NOT SUPPORTED"
KSS	No	Fast GPIB remote operation	Returns error - "CMD NOT SUPPORTED"
KST (HP 8566B only)	Yes	Fast Preset 2-22 GHz	Remote language HP8566B only. See page 154 for more details
KST (HP 8568B only)	No	Shifts second LO down	Remote language HP8568B. Returns error - "CMD NOT SUPPORTED"
KSt	No	Harmonic lock	Returns error - "CMD NOT SUPPORTED"
KSU	No	Fast preset external mixer	Returns error - "CMD NOT SUPPORTED"
KSu	No	Marker stop	Returns error - "CMD NOT SUPPORTED"
KSV	Yes	Frequency offset	See page 155 for more details
KSv	No	External mixer signal identifier	Returns error - "CMD NOT SUPPORTED"
KSW	No	Activate error correction routine	Returns error - "CMD NOT SUPPORTED"
KSw	No	Displays correction data	Returns error - "CMD NOT SUPPORTED"
KSX	No	Correction factor On (incorporates them into measurements)	Returns error - "CMD NOT SUPPORTED"

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
KSx	Yes	External trigger mode	See page 156 for more details
KSY	No	Correction factors Off	Returns error - "CMD NOT SUPPORTED"
KSy	Yes	Video trigger mode	See page 157 for more details
KSZ	Yes	Reference level offset	See page 158 for more details
KSz	No	Storage address	Returns error - "CMD NOT SUPPORTED"
L0 <i>[zero]</i>	Yes	Disables the display line	See page 159 for more details
LB	No	Writes text label	Returns error - "CMD NOT SUPPORTED"
LF (HP 8566B only)	Yes	Preset 0 - 2.5 GHz	See page 160 for more details
LG	Yes	Specifies the vertical graticule divisions as logarithmic units without changing the reference level (Log Scale)	See page 161 for more details
LL	No	Sends a voltage to the rear panel RECORDER OUTPUTS (Lower Left)	Returns error - "CMD NOT SUPPORTED"
LN	Yes	Linear Scale (scales the amplitude proportional to input voltage)	See page 162 for more details
LOG	No	Log. (Operand 1 x Scaling Factor into Destination)	Returns error - "CMD NOT SUPPORTED"
LOLIMOFF	No	Local oscillator limit off	Returns error - "CMD NOT SUPPORTED"
M1 <i>[one]</i>	Yes	Marker Off	See page 163 for more details
M2 <i>[two]</i>	Yes	Marker Normal	See page 164 for more details
M3 <i>[three]</i>	Yes	Delta Marker	See page 165 for more details

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
M4 <i>[four]</i>	No	Marker Zoom	Returns error - "CMD NOT SUPPORTED"
MA	Yes	Returns Marker Amplitude	See page 167 for more details
MBRD	No	Processor Memory Block Read	Returns error - "CMD NOT SUPPORTED"
MBWR	No	Processor Memory Block Write	Returns error - "CMD NOT SUPPORTED"
MC0 <i>[zero]</i> (HP 8568B only)	Yes	Turns off the marker frequency counter.	See page 168 for more details
MC1 <i>[one]</i> (HP 8568B only)	Yes	Turns on the marker frequency counter.	See page 169 for more details
MDS	Yes	Measurement Data Size	See page 170 for more details
MDU	No	Measurement Data Units	Returns error - "CMD NOT SUPPORTED"
MEAN	Yes	Returns the mean value of the trace, in display units	See page 171 for more details
MEM	No	Returns the amount of unused memory available for user-defined functions	Returns error - "CMD NOT SUPPORTED"
MERGE	No	Moves a portion of the source trace into the destination trace starting at a predetermined position.	Returns error - "CMD NOT SUPPORTED"
MF	Yes	Marker Frequency output	See page 172 for more details
MIN	No	Compares operand 1 and 2 and returns the minimum value	Returns error - "CMD NOT SUPPORTED"
MINPOS	Yes	Returns a value that is the x position of the minimum value in the given trace.	See page 173 for more details
MIRROR	No	Takes the mirror image of the source trace and moves it into a destination trace.	Returns error - "CMD NOT SUPPORTED"

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
MKA	Yes	Marker amplitude (in current amplitude units)	See page 174 for more details
MKACT	Yes	Marker Active	See page 175 for more details
MKCF	Yes	Marker to Center Frequency	See page 176 for more details
MKCONT	No	Marker Continue (Resumes the sweep)	Returns error - "CMD NOT SUPPORTED"
MKD	Yes	Marker Delta (Computes the frequency and amplitude difference of the active marker and the reference marker)	See page 177 for more details
MKF	Yes	Marker Frequency	See page 179 for more details
MKFC (HP 8568B only)	Yes	Marker Frequency Counter	See page 180 for more details
MKFRC (HP 8568B only)	Yes	Marker Frequency Counter Resolution	See page 181 for more details
MKMIN	Yes	Marker minimum	See page 182 for more details
MKN	Yes	Marker Normal (Moves the active marker to the specified frequency)	See page 183 for more details
MKNOISE	Yes	Marker Noise (RMS noise density at the marker)	See page 184 for more details
MKOFF	Yes	Marker Off	See page 186 for more details
MKP	Yes	Horizontal Marker Position (in Display Units)	See page 187 for more details
MKPAUSE	No	Marker Pause (pauses the sweep for the duration of the delay period)	Returns error - "CMD NOT SUPPORTED"
MKPK	Yes	Marker Peak	See page 188 for more details

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
MKPX	Yes	Marker Peak Excursion (specifies the minimum signal excursion for the analyzer internal peak identification routine)	See page 190 for more details
MKREAD	Yes	Marker Readout	See page 191 for more details
MKRL	Yes	Marker to reference level	See page 193 for more details
MKSP	Yes	Marker Span	See page 194 for more details
MKSS	Yes	Delta Marker Step Size	See page 195 for more details
MKSTOP	No	Marker stop (Stops the sweep)	Returns error - "CMD NOT SUPPORTED"
MKTRACE	Yes	Marker Trace specifies the marker to operate on data in Trace A, B, or C	See page 196 for more details
MKTRACK	Yes	Marker Track (keeps the active marker at the center of the display)	See page 197 for more details
MKTYPE	No	Marker Type	Returns error - "CMD NOT SUPPORTED"
ML	Yes	Mixer Level (specifies the maximum signal level that is applied to the input mixer for a signal that is equal to or below the reference level)	See page 198 for more details
MOD	No	Remainder of the division of source 1 by source 2 is stored in the destination.	Returns error - "CMD NOT SUPPORTED"
MOV	No	Moves the operand to the destination	Returns error - "CMD NOT SUPPORTED"
MPY	No	Multiply	Returns error - "CMD NOT SUPPORTED"
MRD	No	Memory Read Word	Returns error - "CMD NOT SUPPORTED"
MRDB	No	Memory Read Byte	Returns error - "CMD NOT SUPPORTED"

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
MT0 <i>[zero]</i>	Yes	Marker Tracking Mode Off	See page 200 for more details
MT1 <i>[one]</i>	Yes	Marker Tracking Mode On	See page 201 for more details
MWR	No	Memory Write Word	Returns error - "CMD NOT SUPPORTED"
MWRB	No	Memory Write Byte	Returns error - "CMD NOT SUPPORTED"
MXM	No	Maximum	Returns error - "CMD NOT SUPPORTED"
MXMH	Yes	Maximum Hold (updates each trace element with the maximum level detected while the trace is active and displayed)	See page 202 for more details
NSTART	No	Start Harmonic (for signal identification routine - SIGID)	Returns error - "CMD NOT SUPPORTED"
NSTOP	No	Stop Harmonic (for signal identification routine - SIGID)	Returns error - "CMD NOT SUPPORTED"
O1 <i>[one]</i>	Yes	Selects display units data format.	See page 203 for more details
O2 <i>[two]</i>	Yes	Selects two 8-bit byte data format.	See page 204 for more details
O3 <i>[three]</i>	Yes	Selects real amplitude units format.	See page 205 for more details
O4 <i>[four]</i>	Yes	Selects one 8-bit byte data format.	See page 206 for more details
OL	No	Output Learn String (transmits information to the controller that describes the state of the analyzer)	Returns error - "CMD NOT SUPPORTED"
ONEOS	No	On end of sweep	Returns error - "CMD NOT SUPPORTED"
ONSWP	No	On Sweep	Returns error - "CMD NOT SUPPORTED"
OP	No	Output Parameter	Returns error - "CMD NOT SUPPORTED"

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
OT	Yes	Output Trace Annotations (Sends 32 character-strings, each of up to 64 characters)	See page 207 for more details
OUTPUT	No	Output is provided for sending data to the GPIB port from a function definition.	Returns error - "CMD NOT SUPPORTED"
PA	No	Plot Absolute (Vector Location)	Returns error - "CMD NOT SUPPORTED"
PD	No	Pen Down (draws one or more vectors)	Returns error - "CMD NOT SUPPORTED"
PDA	No	Probability Distribution Amplitude (loads the destination trace according to the pattern of amplitude values in the source trace)	Returns error - "CMD NOT SUPPORTED"
PDF	No	Probability Distribution in Frequency (elements of the source trace that are above the threshold value cause corresponding elements in the destination trace to be increased in amplitude by one display unit.)	Returns error - "CMD NOT SUPPORTED"
PEAKS	Yes	Sorts signal peaks into frequency or amplitude order, sends results to destination trace.	See page 208 for more details
PKPOS	Yes	Returns a value that is the <i>x</i> position of the maximum value in the given trace.	See page 209 for more details
PLOT	Yes	Plot	See page 210 for more details.
PP	Yes	Preselector Peak	See page 211 for more details
PR	No	Plot Relative	Returns error - "CMD NOT SUPPORTED"
PS	No	Skip Page	Returns error - "CMD NOT SUPPORTED"
PU	No	Pen Up (Blanks the CRT beam)	Returns error - "CMD NOT SUPPORTED"

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
PWRBW	Yes	Power Bandwidth (first computes the total power of a trace, and then returns the bandwidth equal to a percentage of the total power.)	See page 212 for more details
R1 <i>[one]</i>	Yes	Resets service request 140	See page 213 for more details
R2 <i>[two]</i>	Yes	Allows service request 140 & 104	See page 214 for more details
R3 <i>[three]</i>	Yes	Allows service request 140 & 110	See page 215 for more details
R4 <i>[four]</i>	Yes	Allows service request 140 & 102	See page 216 for more details
RB	Yes	Resolution Bandwidth	See page 217 for more details
RC	Yes	Recalls State Register	See page 218 for more details
RCLS	Yes	Recalls State Register	See page 219 for more details
REPEAT	No	Repeat... Until (conditional programming)	Returns error - "CMD NOT SUPPORTED"
REV	Yes	Revision (returns the firmware revision and the Agilent Date Code)	See page 220 for more details
RL	Yes	Reference Level (amplitude value of the top CRT Graticule line)	See page 221 for more details
RMS	Yes	Root Mean Square	See page 223 for more details
ROFFSET	Yes	Reference Level Offset	See page 224 for more details
RQS	Yes	SRQ mask (sets a bit mask for the service request commands)	See page 225 for more details
S1 <i>[one]</i>	Yes	Sets the analyzer to continuous sweep mode	See page 226 for more details
S2 <i>[two]</i>	Yes	Sets the analyzer to single sweep mode	See page 227 for more details

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
SAVES	Yes	Saves the current state of the analyzer in the specified register	See page 228 for more details
SIGDEL	No	Specifies the maximum amplitude difference allowed between a signal and its image for the pair to be recognized by the signal identification routine (Default units are dB)	Returns error - "CMD NOT SUPPORTED"
SIGID	No	Identifies signals for external mixing frequency bands	Returns error - "CMD NOT SUPPORTED"
SMOOTH	Yes	Smooths the given trace over a specified number of points	See page 229 for more details
SNGLS	Yes	Sets the analyzer to single sweep mode	See page 230 for more details
SP	Yes	Frequency Span	See page 231 for more details
SQR	No	Square Root of the source trace amplitude, point by point	Returns error - "CMD NOT SUPPORTED"
SRQ	Yes	Service Request to the controller (User defined)	See page 233 for more details
SS	Yes	Center Frequency step size	See page 234 for more details
ST	Yes	Sweep Time	See page 235 for more details
STDEV	Yes	Returns standard deviation of trace amplitude in display units	See page 236 for more details
SUB	No	Subtract	Returns error - "CMD NOT SUPPORTED"
SUM	No	Returns sum of trace element amplitudes in display units	Returns error - "CMD NOT SUPPORTED"
SUMSQR	No	Squares trace element amplitudes and returns their sum	Returns error - "CMD NOT SUPPORTED"
SV	Yes	Saves State	See page 237 for more details
SW	No	Skip to next control instruction	Returns error - "CMD NOT SUPPORTED"

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
T0 <i>[zero]</i>	No	Turns the threshold level off.	Returns error - "CMD NOT SUPPORTED"
T1 <i>[one]</i>	Yes	Sets the analyzer sweep to Free Run Trigger Mode	See page 238 for more details
T2 <i>[two]</i>	Yes	Line Trigger Mode	See page 239 for more details
T3 <i>[three]</i>	Yes	External Trigger Mode	See page 240 for more details
T4 <i>[four]</i>	Yes	Video Trigger Mode	See page 241 for more details
TA	Yes	Transfer A (Trace A amplitude value from the analyzer to the controller)	See page 242 for more details
TB	Yes	Transfer B (Trace B amplitude value from the analyzer to the controller)	See page 243 for more details
TDF	Yes	Trace Data Format	See page 244 for more details
TEXT	No	Writes text on the analyzer screen	Returns error - "CMD NOT SUPPORTED"
TH	Yes	Threshold (blanks signal responses below the threshold value)	See page 245 for more details
THE	No	Threshold Enable / Disable	Returns error - "CMD NOT SUPPORTED"
THEN	No	Conditional programming	Returns error - "CMD NOT SUPPORTED"
TM	Yes	Trigger Mode	See page 246 for more details
TRDEF	No	Trace define (establishes the length and name of a user defined trace)	Returns error - "CMD NOT SUPPORTED"
TRDSP	Yes	Trace Display	See page 249 for more details
TRGRPH	No	Trace Graph display	Returns error - "CMD NOT SUPPORTED"
TRMATH	No	Trace Math (executes various command lists)	Returns error - "CMD NOT SUPPORTED"

Table 2-1 Alphanumeric List of All HP 8566B/HP 8568B Commands and Their Option 266 Support

HP8566B/ HP8568B Command	Supported in Option 266?	Command Description	Note
TRPST	No	Trace Preset (executes certain selected commands: A1, B4, C1, KSK, EM, T0, L0, DISPOSE)	Returns error - "CMD NOT SUPPORTED"
TRSTAT	Yes	Trace State	See page 250 for more details
TS	Yes	Take Sweep	See page 251 for more details
UNTIL	No	Conditional programming (Repeat... Until)	Returns error - "CMD NOT SUPPORTED"
UR	No	Upper right Recorder Output (sends a voltage to the rear panel Recorder Output)	Returns error - "CMD NOT SUPPORTED"
USTATE	No	Configures or returns configuration of user defined states by certain commands	Returns error - "CMD NOT SUPPORTED"
VARDEF	No	Variable Define	Returns error - "CMD NOT SUPPORTED"
VARIANCE	No	Returns amplitude Variance of the specified trace	Returns error - "CMD NOT SUPPORTED"
VAVG	Yes	Enables Video Averaging	See page 252 for more details
VB	Yes	Video filter Bandwidth	See page 254 for more details
VBO	Yes	Video Bandwidth Coupling Offset	See page 255 for more details
VIEW	Yes	View (displays Trace and stops the sweep)	See page 256 for more details
XCH	Yes	Exchange	See page 257 for more details

HP 8566B and HP 8568B Command List
Table of HP 8566B and HP 8568B Commands

3 Hints and Tips

This chapter includes a list of helpful hints and tips that will help you get the most from Option 266 on your ESA or PSA analyzer.

A Few Helpful Hints and Tips

These pages lists a few hints and tips that will help you get the most from your analyzer and Option 266.

- **Speed** - Option 266 will run faster on PSA series analyzers than it will on ESA series analyzers.
- **Compatibility - speed and consistency** - for best compatibility with the 22 GHz HP 8566B, Option 266 should be used on an E4440A analyzer which has an upper frequency limit of 26.5 GHz. This most closely matches the 22 GHz upper limit of the HP 8566B.
- **Compatibility and Sweep Times** - for best compatibility with the HP 8566B and HP 8568B, use the Manual Swept mode. This is the default setting.

When analyzing stationary signals, you can change to the Best Speed setting, which is accessed from the Auto Couple hardkey and the FFT & Sweep menu. This results in faster sweep times on a PSA analyzer than on the HP 8566B or HP 8568B analyzers because of the PSA's better performance. In the majority of applications, this faster speed would be desirable, but that is not always the case. When you are using the Best Speed setting, you cannot change the sweep time manually as the sweep time is always coupled to give the fastest sweep times based on the current settings.

- **Time-out (1)** - Agilent suggests that you increase the timeout when performing MA and MF commands to allow previous marker functions to complete correctly.
- **Time-out (2)** - Agilent recommends increasing the timeout on a serial poll due to differences in Sweep Times on some settings. Note, however, that this may not be necessary when using the Best Speed setting on the FFT & Sweep menu (accessed from the Auto Couple hardkey).
- **Synchronization (1)** - to synchronize after an IP command, Agilent recommends that you use the DONE command. We also suggest that the DONE command is used in conjunction with a timeout of about 5 seconds in case the analyzer starts to auto align. Alternatively, you could set auto alignment to Off.
- **Synchronization (2)** - Agilent recommends that synchronization (using the DONE command) is used with marker functions when signal tracking is turned on.

- **AC and DC Coupling** - the HP 8568B analyzer has two RF input ports:
 - DC Coupled (with a BNC connector) to handle a frequency range of 100 Hz to 1.5 GHz
 - AC Coupled (with an N Type connector) to handle a frequency range of 100 kHz to 1.5 GHz

The ESA-E and PSA series analyzers only have a single RF input port.

When using PSA models E4440A, E4443A, and E4445A, or the ESA-E model E4407B with the UKB option, you must use DC coupling to see calibrated frequencies of less than 10 MHz. Signals of less than 10 MHz are not calibrated when using AC coupling on these analyzers.

When using ESA-E series model E4402B with Option UKB, or models E4404B or E4405B, you must use DC coupling to see calibrated frequencies of less than 100 kHz. Signals of less than 100 kHz are not calibrated when using AC coupling on these analyzers.

NOTE

PSA models E4446A and E4448A do not allow AC coupling.

ESA-E model E4407B does not allow AC coupling unless Option UKB has been added.

ESA-E model E4401B does not allow DC coupling.

ESA-E model E4402B does not allow DC coupling unless Option UKB has been added.

- **Overloading** - if you are overloading the analyzer, connect a 10 dB attenuator to the RF input and set the **Ext Amp Gain** (external amplifier gain) to -10 dB. This softkey is accessed via the Amplitude hardkey.
- **Instrument Presets** - consecutive instrument presets (using the IP command, that is, issuing a command such as IP;IP;IP;) are not required.
- **SCPI Language** - Agilent recommends that you do not repeatedly swap to and from the SCPI language within your programs.


Hints and Tips
A Few Helpful Hints and Tips

4 **Programming Commands**

This chapter lists all the supported HP8566B/68B compatible commands in alphanumeric order, and gives brief details on their syntax and operation. For more detailed information on these commands, see your HP 8566B or HP 8568B *Operating and Programming Manual*.

Command Syntax

Command syntax is represented pictorially.

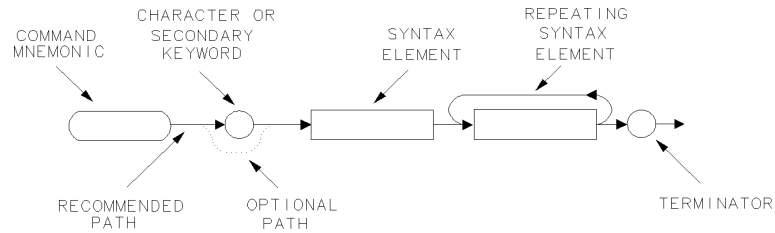

cu114e

- Ovals enclose command mnemonics. The command mnemonic must be entered exactly as shown.
- Circles and ovals surround secondary keywords or special numbers and characters. The characters in circles and ovals are considered reserved words and must be entered exactly as shown.
- Rectangles contain the description of a syntax element defined in [Table 4-1, “Syntax Elements.”](#)
- A loop above a syntax element indicates that the syntax element can be repeated.
- Solid lines represent the recommended path.
- Dotted lines indicate an optional path for bypassing secondary keywords or using alternate units.
- Arrows and curved intersections indicate command path direction.
- Semicolons are the recommended command terminators. Using semicolons makes programs easier to read, prevents command misinterpretation, and is recommended by IEEE Standard 728.

NOTE

Uppercase is recommended for entering all commands unless otherwise noted.

Syntax Elements are shown in the syntax diagrams as elements within rectangles. In the syntax diagrams, characters and secondary keywords are shown within circles or ovals. Characters and secondary keywords must be entered exactly as shown.

Table 4-1 Syntax Elements

Syntax Component	Definition/Range
Analyzer command	Any spectrum analyzer command in this chapter, with required parameters and terminators.
Character	S _p a b c d e f g h i j k l m n o p q r s t u v w x y z databyte.
Character & EOI	8-bit byte containing only character data and followed by end-or-identify (EOI) condition, where the EOI control line on GPIB is asserted to indicate the end of the transmission. END signifies the EOI condition.
Character string	A list of characters.
Data byte	8-bit byte containing numeric or character data.
Data byte & EOI	8-bit byte containing numeric or character data followed by end-or-identify (EOI) condition, where the EOI control line on GPIB is asserted to indicate the end of the transmission. END signifies the EOI condition.
Delimiter	\ @ ^ \$ % ; ! Matching characters that mark the beginning and end of a character string, or a list of spectrum analyzer commands. Choose delimiting characters that are not used within the string they delimit.
Digit	0 1 2 3 4 5 6 7 8 9
lsb length	Represents the least significant byte of a two-byte word that describes the number of bytes returned or transmitted. See msb length.
msb length	Represents the most significant byte of a two-byte word that describes the number of bytes returned or transmitted. See lsb length.
Number	Expressed as integer, decimal, or in exponential (E) form. Real Number Range: $\pm 1.797693134862315 \times 10^{308}$, including 0. Up to 15 significant figures allowed. Numbers may be as small as $\pm 2.225073858507202 \times 10^{-308}$ Integer Number Range: -32,768 through +32,767
Output termination	Carriage return(C _R) and line feed (L _F), with end-or-identify (EOI) condition. ASCII codes 13 (carriage return) and 10 (line feed) are sent via GPIB, then the end-or-identify control line on GPIB sets to indicate the end of the transmission.
Units	Represent standard scientific units. Frequency Units: GZ, MZ, KZ, HZ Amplitude Units: DB, DBMV, DM, DBMV, DBUV, V, MV, UV, Time Units: SC, MS, US

Programming Command Descriptions

All supported commands are listed here, along with their descriptions and cross-references to similar commands.

This chapter is not designed to be a comprehensive guide to all HP 8566B/68B commands. It gives brief descriptions of the supported commands, and highlights important functional or behavioral differences that you should be aware of when transferring existing HP 8566B or HP 8568B code to your ESA-E series or PSA analyzer. For a fuller description of the commands, refer to the HP 8566B or HP 8568B's *Operating and Programming Manual*.

In the descriptions of the commands, TRA corresponds to Trace 1, TRB corresponds to Trace 2, and TRC corresponds to Trace 3.


To avoid confusion between numbers and letters, all commands that incorporate numbers have had the number spelled out and placed in square brackets after the command. For example, the command 'I1' is shown as 'I1 *[one]*' - that is, the capital letter 'I' followed by the number '1', and then the word 'one' italicized in square brackets. The italicized word in brackets does not form part of the command.

NOTE

With the exception of the two commands KSG and VAVG, all commands shown in the following pages as using the ON and OFF parameters will also accept 1 and 0. The parameters ON and 1 are interchangeable and offer identical functionality. Similarly, OFF and 0 offer identical functionality and are interchangeable. Please note, however, that the query commands always return ON or OFF, and never return a 1 or a 0.

A1 [one] Clear Write for Trace A

Syntax



XA1_b

Description


The A1 command sets Trace A to clear write. That is, it continuously displays any signal present at the spectrum analyzer input. The A1 command initially clears Trace A, setting all elements to zero. The sweep trigger then signals the start of the sweep, and Trace A is continually updated as the sweep progresses. Subsequent sweeps send new amplitude information to the display addresses.

NOTE

The functions of the command A1 are identical to the CLRW TRA command ([page 92](#)).

A2 [two] Maximum Hold for Trace A

Syntax



XA2_b

Description


The A2 command updates each trace element with the maximum level detected during the period that the trace has been active.

NOTE

The functions of the command A2 are identical to the MXMH TRA command ([page 202](#)).

A3 [three] View Mode for Trace A

Syntax



XA3_b

Description


The A3 command displays Trace A and then stops the sweep if no other traces are active. Trace A does not get updated with new data.

NOTE

The functions of the command A3 are identical to the VIEW TRA command ([page 256](#)).

A4 [four] Blank Trace A

Syntax



XA4_b

Description


The A4 command blanks Trace A and stops the sweep if no other traces are active. Trace A is not updated.

NOTE

The functions of the command A4 are identical to the BLANK TRA command ([page 82](#)).

AMB A minus B into A

Syntax

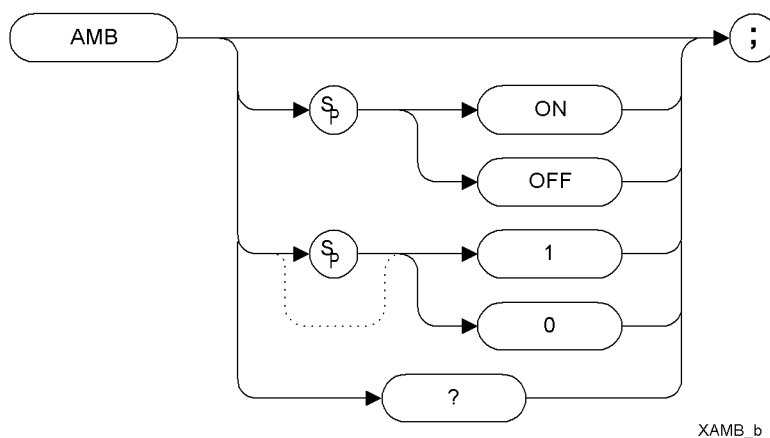

Description

The AMB command subtracts the points in Trace B from the corresponding points in Trace A, and sends the results to Trace A. Thus, AMB can restore the original trace after an APB or a KSc command has been executed.

NOTE

On HP 8566B and HP 8568B analyzers, the AMB command operates continuously. That is, it continuously updates Trace A to display the results of Trace A minus Trace B until AMB is switched off.


This is not the case with HP 8566B/68B Code Compatibility. The AMB command is performed once only, using the trace data available at the time of execution.

NOTE

The functions of the command AMB are identical to the C2 *[two]* command ([page 87](#)).

AMBPL (A minus B) plus Display Line into A

Syntax




XAMBPL_b

Description

The AMBPL command does a point-by-point subtraction of Trace B from Trace A, and then adds the display line point values to the difference. The results are sent to Trace A

ANNOT Annotation

Syntax

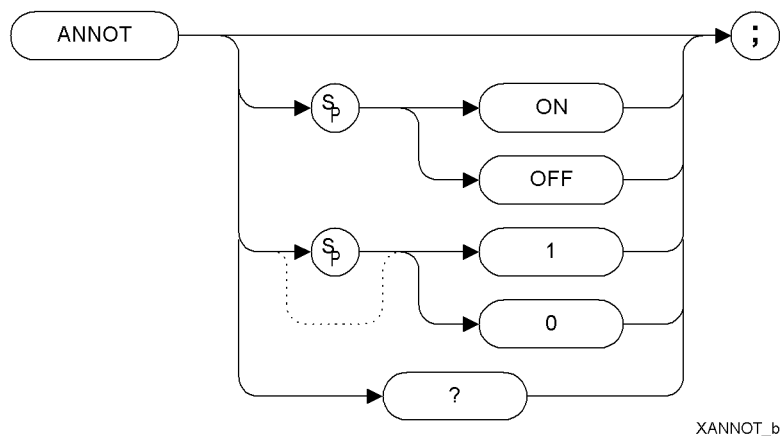

Preset State: ANNOT ON

Description


The ANNOT command turns on or off all annotation on the spectrum analyzer display. Softkey labels are not affected by this command and remain displayed.

NOTE

The functions of the command ANNOT are identical to the KSo command ([page 152](#)) and KSp command ([page 153](#)).

APB A Plus B to A

Syntax



XAP_b

Description

The APB command does a point-by-point addition of Trace A and Trace B, and sends the results to Trace A. Thus, APB can restore the original trace after an AMB or a C2 command has been executed.

NOTE

The functions of the command APB are identical to the KSc command [\(page 131\)](#)

AT Attenuation

Syntax

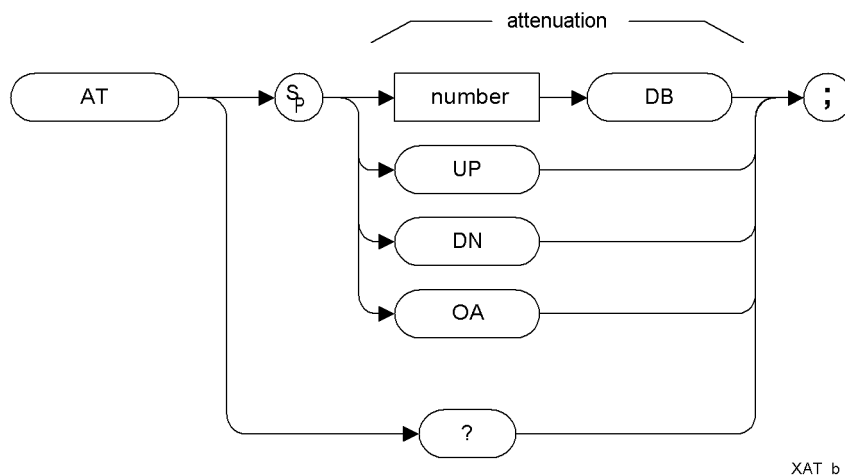


Table 4-2

Item	Description/Default	Range
Number	Any real number or integer. Default units are dB.	<i>PSA</i> - 0 to 70 dB specified absolutely and 10 to 70 dB in 10 dB steps <i>ESA</i> - 0 to 65 dB specified absolutely and 10 to 65 dB in 10 dB steps

Preset State: 10 dB

Step Increment: 10 dB

Description

Specifies the RF input attenuation.

Although any attenuation level from 0 dB to 70 dB in PSA series analyzers (0 dB to 65 dB in ESA-E series analyzers) can be specified using absolute values, you can never set attenuation below 10 dB using the DOWN steps. This is a safety feature to prevent inadvertent setting of attenuation to a level that could damage the analyzer.

CAUTION Signal levels above +30 dBm will damage the spectrum analyzer.

NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE ESA series analyzers have a range of 10 dB to 65 dB when accessed in 10 dB steps. Stepping up from the default value of 10 dB, the sequence rises in 10 dB steps until an attenuation of 60 dB is reached. The next step will only be 5 dB as the analyzer's upper limit is 65 dB will have been reached.


Stepping down from 65 dB reverses this sequence. The first step down from 65 dB is to 60 dB. Thereafter, each step is of 10 dB until an attenuation level of 10 dB is reached.

You cannot step down below 10 dB. To set levels below 10 dB, you must specify the attenuation absolutely. For example, to set attenuation to 5 dB, you must use the command `AT 5DB`.

AUNITS

Amplitude Units

Syntax

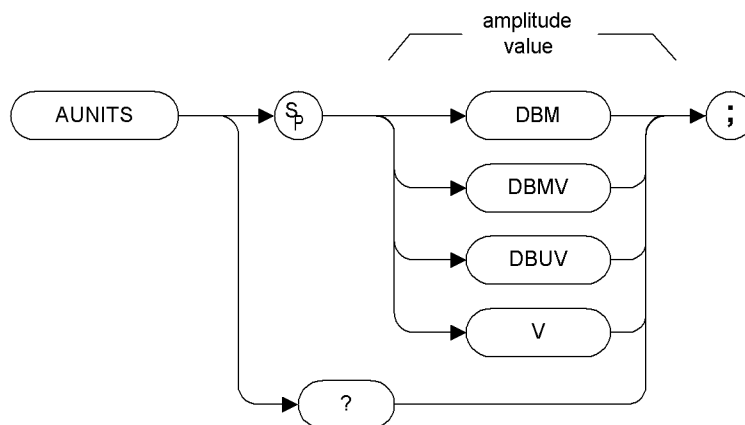

XAUNITS_b

Description


Specifies the amplitude readout units for the reference level, the marker, and the display line.

NOTE

The functions of the command AUNITS are identical to the commands KSA (page 126), KSB (page 128), KSC (page 130), and KSD (page 132).

AXB **Exchange Trace A and Trace B**

Syntax



XAXB_b

Description


This command exchanges Trace A and Trace B, point by point.

NOTE

The functions of the command AXB are identical to the EX command ([page 109](#)) and to the XCH TRA,TRB command ([page 257](#)).

B1 [one] Clear Write for Trace B

Syntax



XB1_b

Description


The B1 command sets Trace B to clear write. That is, it continuously displays any signal present at the spectrum analyzer input. The B1 command initially clears Trace B, setting all elements to zero. The sweep trigger then signals the start of the sweep, and Trace B is continually updated as the sweep progresses. Subsequent sweeps send new amplitude information to the display addresses.

NOTE

The functions of the command B1 are identical to the CLRW TRB command ([page 92](#)).

B2 [two] Maximum Hold for Trace B

Syntax



XB2_b

Description


The B2 command updates each trace element with the maximum level detected while the trace is active.

NOTE

The functions of the command B2 are identical to the MXMH TRB command ([page 202](#)).

B3 [three] View Mode for Trace B

Syntax



XB3_b

Description


The B3 command displays Trace B and then stops the sweep if no other traces are active. Trace B does not get updated.

NOTE

The functions of the command B3 are identical to the VIEW TRB command ([page 256](#)).

B4 [four] Blank Trace B

Syntax



XB4_b

Description


The B4 command blanks Trace B and stops the sweep if no other traces are active. Trace B is not updated.

NOTE

The functions of the command B4 are identical to the BLANK TRB command ([page 82](#)).

BL Trace B minus Display Line to Trace B

Syntax



XBL_b

Description


The BL command subtracts the display line from Trace B and sends the results to Trace B.

NOTE

The functions of the command BL are identical to the BML command ([page 83](#)).

BLANK Blank Trace

Syntax

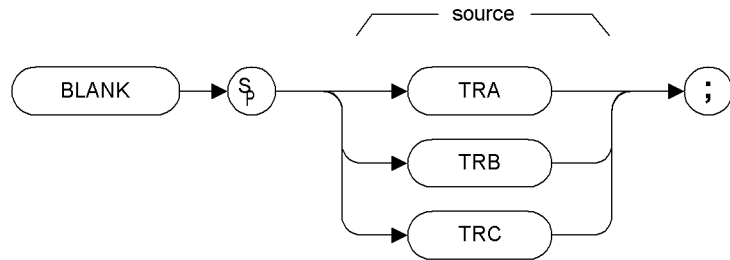

XBLANK_b

Preset State: BLANK TRB, BLANK TRC

Description


Blanks Trace 1, trace 2, or trace 3, and stops taking new data into the specified trace. TRA corresponds to Trace 1, TRB corresponds to Trace 2, and TRC corresponds to Trace 3.

NOTE

The functions of the command BLANK are identical to the A4 command (page 68), the B4 command (page 80), and KSk command (page 143).

BML Trace B Minus Display Line

Syntax



XBML_b

Description


The BML command subtracts the display line from trace B (point by point), and sends the difference to trace B. Trace B corresponds to Trace 2.

NOTE

The functions of the command BML are identical to the BL command ([page 81](#)).

BTC Transfer Trace B to Trace C

Syntax



XBTC_b

Description

The BTC command transfers Trace B data to Trace C

NOTE

Trace C cannot be an active trace. This means that the data in Trace C cannot be updated as the analyzer sweeps. To ensure that the current settings of the analyzer are reflected in the data transferred from Trace B to Trace C, you must follow the four step process below.


- Select single sweep mode (S2 or SNGLS command)
- Select the desired analyzer settings
- Take one complete sweep
- Transfer the data

NOTE

The functions of the command BTC are identical to the KSI command ([page 145](#)). The BTC command also shares some functionality with the XCH TRB, TRC command ([page 257](#)).

BXC Exchange Trace B and Trace C

Syntax



XBXC_b

Description

The BXC command exchanges Trace B data with Trace C data.

NOTE

Trace C cannot be an active trace. This means that the data in Trace C cannot be updated as the analyzer sweeps. To ensure that the current settings of the analyzer are reflected in the data exchanged between Trace B and Trace C, you must follow the four step process below.


- Select single sweep mode (S2 or SNGLS command)
- Select the desired analyzer settings
- Take one complete sweep
- Exchange the data

NOTE

The functions of the command BXC are identical to the KSi command ([page 140](#)) and to the XCH TRB,TRC command ([page 257](#)).

C1 [one] Set A Minus B Mode Off

Syntax



XC1_b

Description


The C1 command turns the A Minus B mode off. That is, it switches off the functionality that was switched on by the C2 command ([page 87](#)) or by the AMB ON command ([page 69](#)).

NOTE

The functions of the command C1 are identical to the AMB OFF command ([page 69](#)).

C2 [two] A Minus B Into A

Syntax



XC2_b

Description

The C2 command subtracts the points in Trace B from the corresponding points in Trace A, and sends the results to Trace A. Thus, if your input signal remains unchanged, C2 can restore the original trace after an APB command ([page 72](#)) or a KSc ([page 131](#)) command has been executed.


NOTE The functions of the command C2 are identical to the AMB ON command ([page 69](#)).

NOTE On HP 8566B and HP 8568B analyzers, the C2 command operates continuously. That is, it continuously updates Trace A to display the results of Trace A minus Trace B until C2 is switched off by issuing the C1 command.

This is not the case with HP 8566B/68B Code Compatibility. The C2 command is performed once only, using the trace data available at the time of execution.

CA Couple Attenuation

Syntax



XCA_b


Description

During normal operation, the spectrum analyzer's input attenuation is coupled to the reference level. This coupling keeps the mixer input at a level such that a continuous wave signal displayed at the reference level is at or below -10 dBm (or the value specified in the ML command or the 'KS,' command.)

The CA command sets the threshold to -10 dBm (or to the value specified by the ML command [\(page 198\)](#) or the KS, command [\(page 124\)](#)). The counterpart to the CA command is the AT command [\(page 73\)](#), which allows levels less than the threshold value at the mixer input.

CF Center Frequency

Syntax

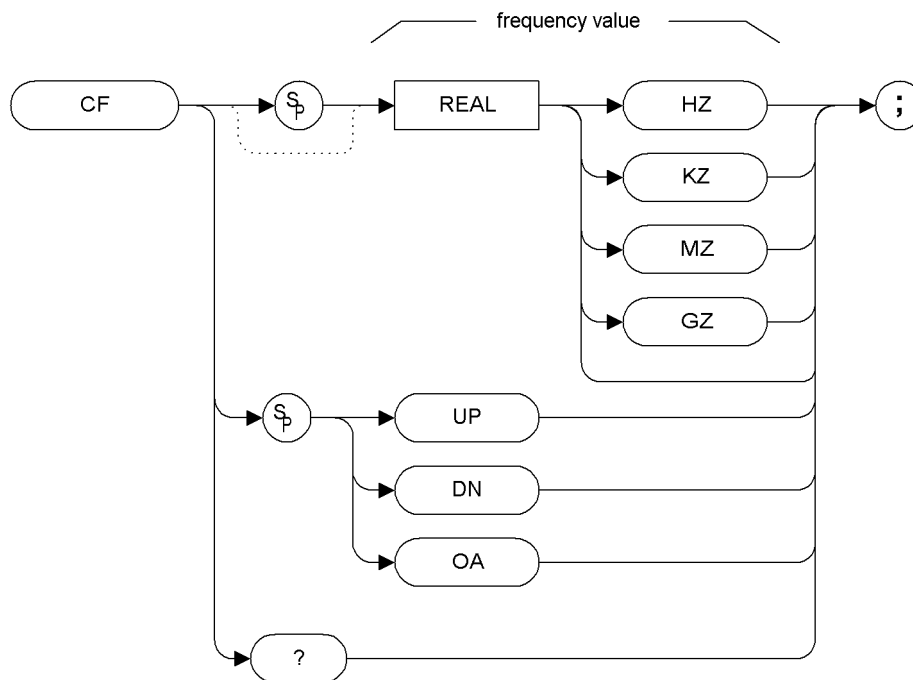

XCF_b

Table 4-3

Item	Description/Default	Range
REAL	Any real or integer number. Default unit is HZ.	Frequency range of the spectrum analyzer

Description

The CF command specifies the value of the center frequency.

The step size depends on whether the frequency has been coupled to the span width using the CS command (page 95). When coupled, the step size is 10% of the span, or one major graticule division; when uncoupled, the step size is determined by the SS command (page 234).


NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE Although the spectrum analyzer allows entry of frequencies not in the

specified frequency range, using frequencies outside the frequency span of the spectrum analyzer is not recommended and is not warranted to meet specifications.

CLRAVG Clear Average

Syntax



XCLRAVG_b


Description

The CLRAVG command restarts the VAVG command by resetting the number of averaged sweeps to one. The video averaging routine resets the number of sweeps, but does not stop video averaging. Use “VAVG OFF;” to stop video averaging.

CLRW Clear Write

Clears the specified trace and enables trace data acquisition.

Syntax

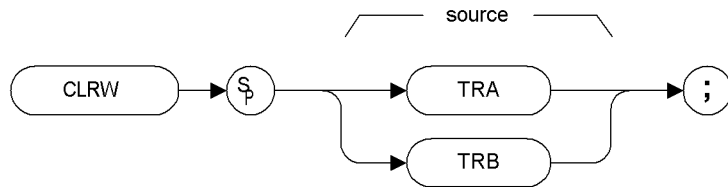

XCLRW_b

Preset State: CLRW TRA

Description

The CLRW command places the indicated trace in clear-write mode. Data acquisition begins at the next sweep. (See the TS command [\(page 251\)](#) for more information about data acquisition.)


TRA corresponds to Trace 1 and TRB corresponds to Trace 2.

NOTE

The functions of the command CLRW are identical to the A1 command [\(page 65\)](#) and B1 command [\(page 77\)](#).

CONTS Continuous Sweep

Syntax



XCONTS_b

Preset State: CONTS

Description


The CONTS command sets the spectrum analyzer to continuous sweep mode. In the continuous sweep mode, the spectrum analyzer takes its next sweep as soon as possible after the current sweep (as long as the trigger conditions are met). A sweep may temporarily be interrupted by data entries made over the remote interface or from the front panel.

NOTE

The functions of the command CONTS are identical to the S1 command ([page 226](#)).

CR Couple Resolution Bandwidth

Syntax



XCR_b

Description

The CR command couples the resolution bandwidth to the video bandwidth and to the sweep time.


The counterpart to the CR command is the RB command ([page 217](#)) which breaks the coupling. Use the CR command to re-establish coupling after executing an RB command.

NOTE

CR uses the coupling settings from the ESA-E or the PSA analyzer. These may differ from the HP 8566B and HP 8568B settings.

CS Couple Frequency Step Size

Syntax



XCS_b


Description

The CS command couples the center frequency step size to the span width so that the step size equals 10% of the span width, or one major graticule division.

The counterpart to the CS command is the SS command ([page 234](#)) which breaks the coupling. Use the CS command to re-establish coupling after an SS command has been executed.

CT Couple Sweep Time

Syntax



XCT_b


Description

The CT command couples the sweep time to the span, resolution bandwidth and video bandwidth.

The counterpart to the CT command is the ST command ([page 235](#)) which breaks the coupling. Use the CT command to re-establish coupling after an ST command has been executed.

CV Couple Video Bandwidth

Syntax



XCV_b

Description

The CV command couples the video bandwidth to the resolution bandwidth.


The counterpart to the CV command is the VB command ([page 254](#)) which breaks the coupling. Use the CV command to re-establish coupling after executing a VB command.

NOTE

CV uses the coupling settings from the ESA-E or the PSA analyzer. These may differ from the HP 8566B and HP 8568B settings.

DA Display Address

Syntax

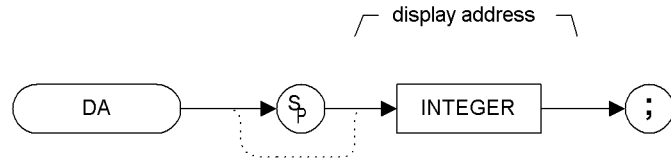

XDA_b

Description

The DA command returns the contents of the specified memory address.


.

NOTE

The DA command only supports the use of DA 1 (equivalent to the commands TA [\(page 242\)](#) and TRA? [\(page 247\)](#), DA 1025 (equivalent to the commands TB [\(page 243\)](#) and TRB? [\(page 248\)](#), and DA 3073 (equivalent to the TRC? command.) The TRC? command is not supported on Option 266.

DET Detection Mode

Syntax

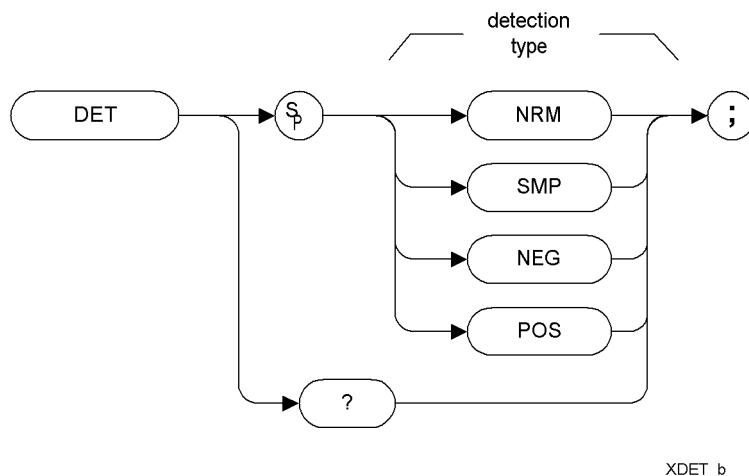

Preset State: DET POS

Description

The DET command selects the type of spectrum analyzer detection (positive-peak, negative peak, sample or normal).

- POS** enables positive-peak detection, which displays the maximum video signal detected over a number of instantaneous samples for a particular frequency.
- SMP** enables sample detection, which uses the instantaneous video signal value. Video averaging and noise-level markers, when activated, activate sample detection automatically.
- NEG** enables negative peak detection in sweep times of less than or equal to 200 ms.
- NRM (PSA)** PSA series analyzers only - enables the *'rosenfell'* detection algorithm that selectively chooses between positive and negative values.
- NRM (ESA)** ESA series analyzers only - normal detection is not possible on ESA series analyzers, so the detection will default to positive-peak detection (POS) when NRM is selected.

NOTE

The functions of the DET command are identical to the KSa command (page 127), the KSb command, (page 129) the KSd command (page 133) and KSe command (page 135).

DL Display Line

Syntax

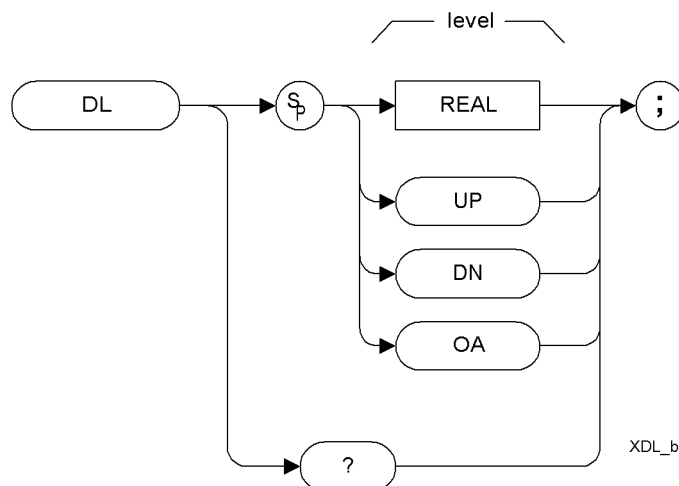


Table 4-4

Item	Description/Default	Range
REAL	Any real or integer number. Default units are dBm.	Dependent on the reference level

Preset State: DL OFF

Step Increment: 1 major graticule division

Description


Defines the level of the display line and displays it on the spectrum analyzer's screen.

NOTE

The OA option only returns the current value to the controller. It does not set the active function.

DLE Display Line Enable

Syntax

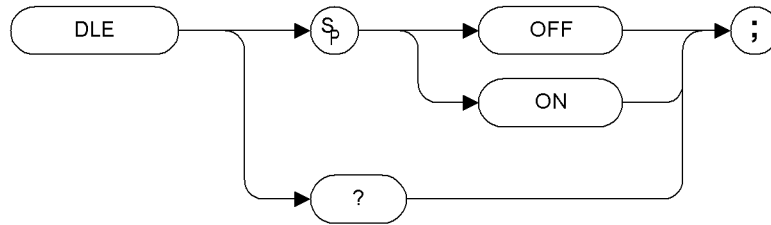


XDLE_b

Description

The DLE command enables or disables the display line.

DONE Done

Syntax

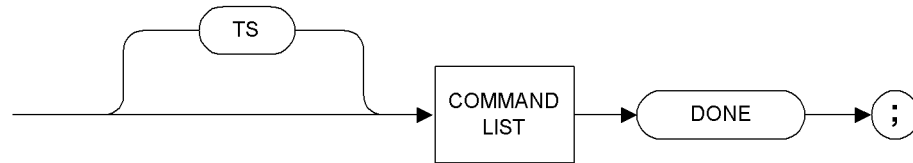

XDONE_b


Description

Allows you to determine when the spectrum analyzer has parsed a list of spectrum analyzer commands and has executed all commands prior to and including DONE. The DONE command returns a value of “1” when all commands in a command string or command list have been completed.

If a take sweep (TS command ([page 251](#))) precedes the command list, the TS command acts as a synchronizing function since the command list execution begins after the sweep has been completed.

E1 [one] Peak Marker

Syntax



XE1_b

Description


The E1 command positions the marker at the signal peak.

NOTE

The functions of the E1 command are identical to MKPK (no secondary keyword) and MKPK HI ([page 188](#)).

E2 [two] Marker to Center Frequency

Syntax



XE2_b

Description


The E2 command positions the marker on the screen at the center frequency position.

NOTE

The functions of the E2 command are identical to the MKCF command ([page 176](#)).

E3 [three] Delta Marker Step Size

Syntax



XE3_b

Description


The E3 command establishes the center frequency step size as being the frequency difference between the delta marker and the active marker.

NOTE

The functions of the E3 command are identical to the MKSS command ([page 195](#)).

E4 [four] Marker to Reference Level

Syntax



XE4_b

Description


The E4 command moves the active marker to the reference level.

NOTE

The functions of the E4 command are identical to the MKRL command ([page 193](#)).

ERR **List Error Codes**

Syntax




XERR_b

Description

This command returns an integer list of all error codes.

EX Exchange Trace A and Trace B

Syntax



XEX_b

Description

This command exchanges Trace A and Trace B, point by point.

NOTE

The functions of the EX command are identical to the AXB command ([page 76](#)) and to the XCH TRA,TRBcommand ([page 257](#)).

FA Start Frequency

Syntax

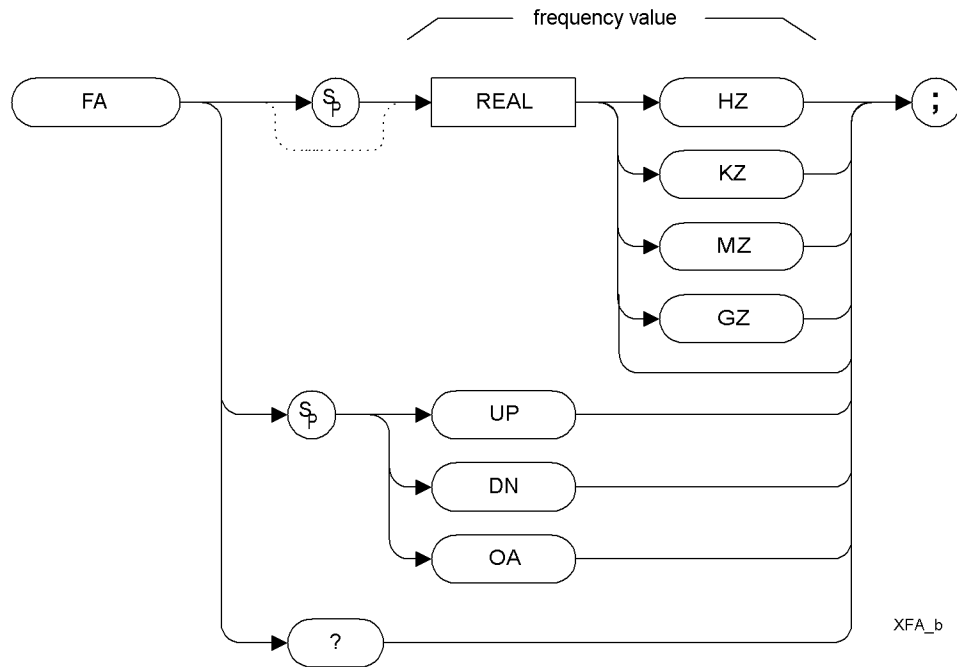


Table 4-5

Item	Description/Default	Range
REAL	Any real or integer number. Default unit is Hz.	Frequency range of the spectrum analyzer

Step Increment: Frequency span divided by 10

Description

The FA command specifies the start frequency value. The start frequency is equal to the center frequency minus (the span divided by two) ($FA = CF - SP/2$). Changing the start frequency changes the center frequency and span.

NOTE

The OA option only returns the current value to the controller. It does not set the active function to the start frequency.

FB Stop Frequency

Syntax

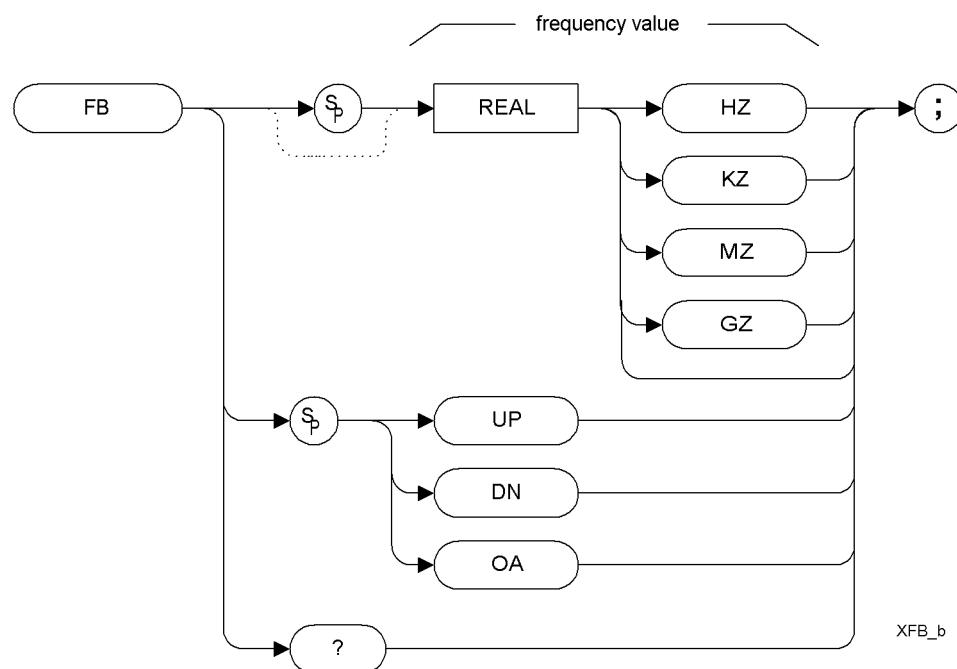


Table 4-6

Item	Description/Default	Range
REAL	Any real or integer number. Default unit is Hz.	Frequency range of the spectrum analyzer

Step Increment: Frequency span divided by 10

Description


The FB command specifies the stop frequency value. The stop frequency is equal to the center frequency plus the span divided by two ($FB = CF + SP/2$). Changing the stop frequency changes the center frequency and span.

NOTE

The OA option only returns the current value to the controller. It does not set the active function to the stop frequency.

FOFFSET Frequency Offset

Syntax

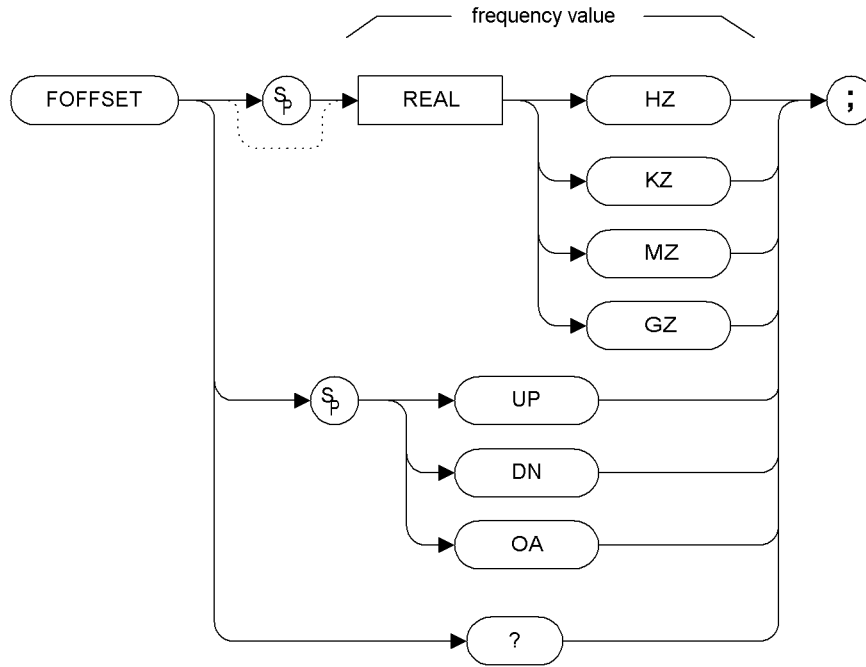

XFOFFSET_b

Table 4-7

Item	Description/Default	Range
REAL	Any real or integer number. Default unit is Hz.	

Preset State: 0 Hz

Description

Specifies the frequency offset for all absolute frequency readouts such as center frequency.

The FOFFSET command selects a value that offsets the frequency scale for all absolute frequency readouts (for example, center frequency). Relative values such as span and marker delta are not offset.

When an offset is in effect, it is displayed beneath the bottom graticule line on the spectrum analyzer screen.


Execute “FOFFSET 0;” or “IP;” to turn off the offset.

NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE The functions of the FOFFSET command are identical to the KSV command ([page 155](#)).

FPKA Fast Preselector Peak

Syntax



XFPKA_b

Description

The FPKA command automatically adjusts the preselector frequency to yield the greatest signal level at the active marker. It returns the amplitude of the active marker.

NOTE


The FPKA command is only available when the analyzer's upper frequency limit is greater than 3 GHz. The command is not supported in analyzers with an upper frequency limit of 3 GHz or less, and will return an error message when used.

NOTE

The FPKA command is not a valid HP8568B command, and is therefore not supported when the remote language is HP8568B.

FS Full Span

Syntax



XFS_b

Description

The FS command sets the frequency span of the spectrum analyzer to full span. Resolution bandwidth, video bandwidth, and sweep time are all set to auto-coupled.

NOTE The functions of the FS command are identical to the LF command ([page 160](#)).

NOTE Whenever the frequency range of the analyzer you are using does not match the remote language's own range (2 to 22 GHz for HP 8566B and 0.0 to 1.5 GHz for HP 8568B), the span will be limited by the capabilities of the analyzer. The table below lists the frequency ranges of Agilent's ESA-E series and PSA series analyzers.


Table 4-8 **Frequency ranges of the Agilent ESA and PSA spectrum analyzers**

Spectrum Analyzer Model	Start Frequency	Stop Frequency
E4401B	9 kHz	1.5 GHz
E4402B	9 kHz ^a	3.0 GHz
E4404B	9 kHz ^a	6.7 GHz
E4405B	9 kHz ^a	13.2 GHz
E4407B	9 kHz ^a	26.5 GHz
E4440A	3 Hz	26.5 GHz
E4443A	3 Hz	6.7 GHz
E4445A	3 Hz	13.2 GHz
E4446A	3 Hz	44.0 GHz
E4448A	3 Hz	50.0 GHz

a. 100 Hz with Option UKB, the Low Frequency Extension

GRAT Graticule

Syntax

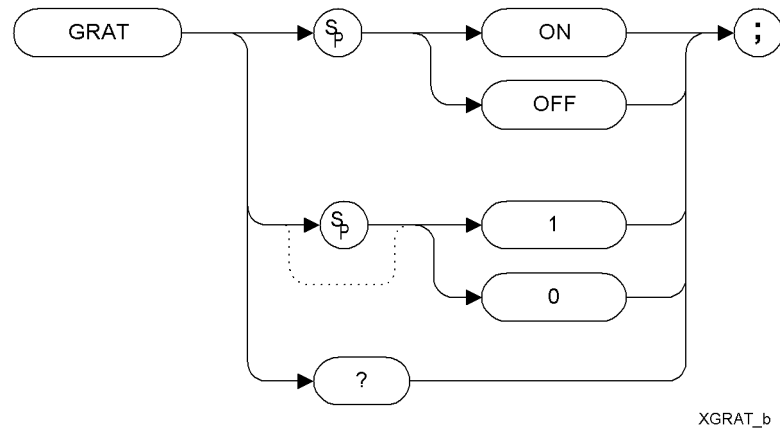

Preset State: GRAT ON

Description


Turns the graticule on or off.

NOTE

The functions of the GRAT command are identical to the KSm command ([page 148](#)) and the KSn command ([page 150](#)).

I1 [one] Set RF Coupling to DC

Syntax



XI1_b

Description

The I1 [one] command sets the RF coupling to DC if your analyzer is capable of being switched. If your analyzer cannot be switched to DC coupling, the command will have no effect but an error message will not be generated.

Whether or not your analyzer can be AC coupled, DC coupled, or both depends on both the analyzer's model number, and on whether or not Option UKB (Low Frequency Extension) has been installed. The tables below list the frequency specifications for all ESA-E series and PSA analyzers for both DC and AC coupling.

NOTE

The I1 [one] command is not supported when the remote language is HP8566B.

Table 4-9 HP 8568A/B Analyzer Frequency Coupling Specifications

Analyzer Model	DC Coupled Range		AC Coupled Range	
	Min. Freq.	Max. Freq.	Min. Freq.	Max. Freq.
HP 8568A/B	100 Hz	1.5 GHz	100 kHz	1.5 GHz

Table 4-10 PSA Series Analyzer Frequency Coupling Specifications

Analyzer Model (PSA series)	DC Coupled Range		AC Coupled Range	
	Min. Freq.	Max. Freq.	Min. Freq.	Max. Freq.
E4440A	3 Hz	26.5 GHz	10 MHz	26.5 GHz
E4443A	3 Hz	6.7 GHz	10 MHz	6.7 GHz
E4445A	3 Hz	13.2 GHz	10 MHz	13.2 GHz
E4446A	3 Hz	44 GHz	N/A	N/A
E4448A	3 Hz	50 GHz	N/A	N/A

Table 4-11 ESA-E Series Analyzer Frequency Coupling Specifications

Analyzer Model (ESA-E series)	Installed Options	DC Coupled Range		AC Coupled Range	
		Min. Freq.	Max. Freq.	Min. Freq.	Max. Freq.
E4401B		N/A	N/A	9 kHz	1.5 GHz
E4402B		N/A	N/A	9 kHz	3.0 GHz
E4402B	UKB	100 Hz	3.0 GHz	100 kHz	3.0 GHz
E4404B		9 kHz	6.7 GHz	100 kHz	6.7 GHz
E4404B	UKB	100 Hz	6.7 GHz	100 kHz	6.7 GHz
E4405B		9 kHz	13.2 GHz	100 kHz	13.2 GHz
E4405B	UKB	100 Hz	13.2 GHz	100 kHz	13.2 GHz
E4407B		9 kHz	26.5 GHz	N/A	N/A
E4407B	UKB	100 Hz	26.5 GHz	10 MHz	26.5 GHz


NOTE The ESA-E series and PSA series analyzers only have a single RF input port.

NOTE ESA-E model E4407B without Option UKB, and PSA models E4446A and E4448A, only allow DC coupling.

ESA-E model E4401B, and model E4402B without Option UKB, only allow AC coupling.

I2 [two] Set RF Coupling to AC

Syntax



XI2_b

Description

The I2 [two] command sets the RF coupling to AC if your analyzer is capable of being switched. If your analyzer cannot be switched to AC coupling, the command will have no effect but an error message will not be generated.

Whether or not your analyzer can be AC coupled, DC coupled, or both depends on both the analyzer's model number, and on whether or not Option UKB (Low Frequency Extension) has been installed. The tables below list the frequency specifications for all ESA-E series and PSA analyzers for both DC and AC coupling.

NOTE

The I2 [two] command is not supported when the remote language is HP8566B.

Table 4-12 HP 8568A/B Analyzer Frequency Coupling Specifications

Analyzer Model	DC Coupled Range		AC Coupled Range	
	Min. Freq.	Max. Freq.	Min. Freq.	Max. Freq.
HP 8568A/B	100 Hz	1.5 GHz	100 kHz	1.5 GHz

Table 4-13 PSA Series Analyzer Frequency Coupling Specifications

Analyzer Model (PSA series)	DC Coupled Range		AC Coupled Range	
	Min. Freq.	Max. Freq.	Min. Freq.	Max. Freq.
E4440A	3 Hz	26.5 GHz	10 MHz	26.5 GHz
E4443A	3 Hz	6.7 GHz	10 MHz	6.7 GHz
E4445A	3 Hz	13.2 GHz	10 MHz	13.2 GHz
E4446A	3 Hz	44 GHz	N/A	N/A
E4448A	3 Hz	50 GHz	N/A	N/A

Table 4-14 ESA-E Series Analyzer Frequency Coupling Specifications

Analyzer Model (ESA-E series)	Installed Options	DC Coupled Range		AC Coupled Range	
		Min. Freq.	Max. Freq.	Min. Freq.	Max. Freq.
E4401B		N/A	N/A	9 kHz	1.5 GHz
E4402B		N/A	N/A	9 kHz	3.0 GHz
E4402B	UKB	100 Hz	3.0 GHz	100 kHz	3.0 GHz
E4404B		9 kHz	6.7 GHz	100 kHz	6.7 GHz
E4404B	UKB	100 Hz	6.7 GHz	100 kHz	6.7 GHz
E4405B		9 kHz	13.2 GHz	100 kHz	13.2 GHz
E4405B	UKB	100 Hz	13.2 GHz	100 kHz	13.2 GHz
E4407B		9 kHz	26.5 GHz	N/A	N/A
E4407B	UKB	100 Hz	26.5 GHz	10 MHz	26.5 GHz


NOTE The ESA-E series and PSA series analyzers only have a single RF input port.

NOTE ESA-E model E4407B without Option UKB, and PSA models E4446A and E4448A, only allow DC coupling.

ESA-E model E4401B, and model E4402B without Option UKB, only allow AC coupling.

ID Identify

Syntax



XID_b

Description


The ID command returns the current remote language to the controller (for example, “HP8566B”).

NOTE

The response value is determined by your remote language selection. This is configured via the front-panel menu selection for remote ID. See [“Configuring Option 266 - ESA and PSA Analyzers” on page 12](#) for details.

IP Instrument Preset

Syntax



XIP_b

Description

Performs an instrument preset, setting the analyzer back to its factory settings.


Instrument preset automatically occurs when you turn on the spectrum analyzer. IP is a good starting point for many measurement processes. When IP is executed remotely, the spectrum analyzer does not necessarily execute a complete sweep, however. You should execute a take sweep (TS) to ensure that the trace data is valid after an IP.

NOTE The functions of the IP command are identical to the KST command ([page 154](#)).

NOTE If the external amplifier gain has been set, executing an IP command will not reset this value. This is to protect the analyzer.

KS, Mixer Level

Syntax

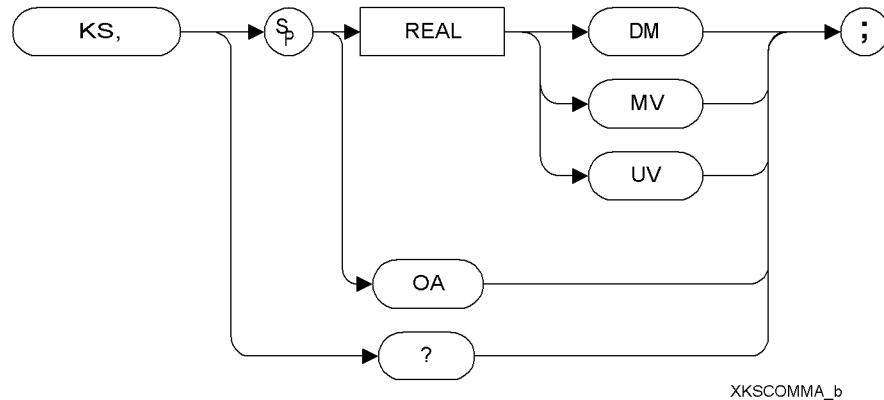

Description

The KS, command specifies the maximum signal level that is applied to the input mixer for a signal that is equal to or below the reference level.

The effective mixer level is equal to the reference level minus the input attenuator setting. When KS, is activated, the effective mixer level can be set from -10 dBm to -70 dBm in 10 dB steps.

As the reference level is changed, the coupled input attenuator automatically changes to limit the maximum signal at the mixer input to your specified setting for signals less than or equal to the reference level.


NOTE If the external amplifier gain has been set, executing an IP command will not reset this value. This is to protect the analyzer.

NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE The functions of the KS, command are identical to the ML command ([page 198](#)).

KS= Marker Counter Resolution

Syntax

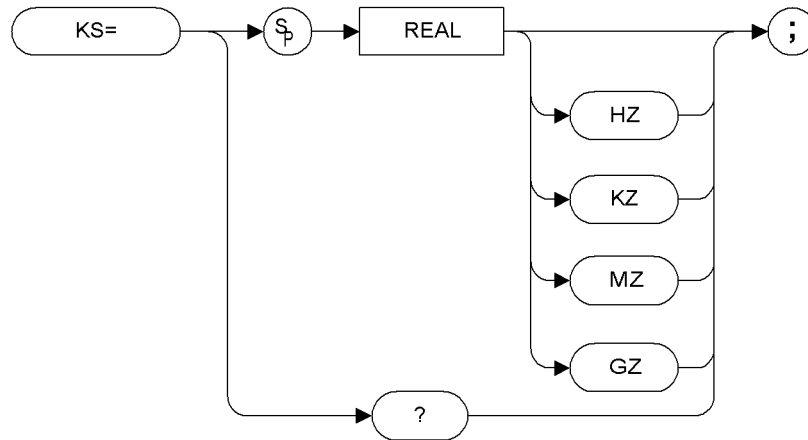

XKSEQUAL_b

NOTE The marker counter can be specified in time units when operating in the time domain.

Description

Specifies the resolution of the marker frequency counter.

NOTE This command is not supported when the remote language is HP8566B.

NOTE The functions of the KS= command are identical to the MKFCR command ([page 181](#)).


NOTE On PSA analyzers, setting the marker frequency resolution will cause the Gate Time to change. The Gate Time is calculated using the following formula:

$$\text{Gate Time} = \frac{1}{\text{Resolution Value}}$$

For restrictions on the Gate Time, refer to the *PSA User's and Programmer's Reference Guide*.

KSA Amplitude in dBm

Syntax



XKSA_b

Description


The KSA command sets the amplitude readout (reference level, marker, display line and threshold) to dBm units.

NOTE

The functions of the KSA command are identical to the AUNITS DBM command ([page 75](#)).

KSa Normal Detection

Syntax



XKSaa_b

Description


The KSa command selects normal input detection. That is, it enables the *rosenfell* detection algorithm that selectively chooses between positive and negative values.

NOTE Normal detection is only possible in PSA series analyzers. The KSa command will default to positive peak detection (KSb) ([page 129](#)) when executed on an ESA analyzer.

NOTE The functions of the KSa command are identical to the DET NRM command ([page 99](#)).

KSB Amplitude in dBmV

Syntax



XKSB_b

Description


The KSB command sets the amplitude readout (reference level, marker, display line and threshold) to dBmV units.

NOTE

The functions of the KSB command are identical to the AUNITS DBMV command ([page 75](#)).

KSb Positive Peak Detection

Syntax



XKSBB_b

Description


The KSb command enables positive peak input detection for displaying trace information. Trace elements are only updated when the detected signal level is greater than the previous signal level.

NOTE

The functions of the KSa command are identical to the DET POS command ([page 99](#)).

KSC Amplitude in dBuV

Syntax



XKSC_b

Description


The KSC command sets the amplitude readout (reference level, marker, display line and threshold) to dBuV units.

NOTE

The functions of the KSC command are identical to the AUNITS DBUV command ([page 75](#)).

KSc A Plus B to A

Syntax



XKScc_b

Description


The KSc command does a point-by-point addition of Trace A and Trace B, and sends the results to Trace A. Thus, if your input signal remains unchanged, KSc can restore the original trace after an AMB or a C2 command has been executed.

NOTE

The functions of the command KSc are identical to the APB command ([page 72](#)).

KSD Amplitude in Volts

Syntax



XKSD_b

Description


The KSD command sets the amplitude readout (reference level, marker, display line and threshold) to voltage units.

NOTE

The functions of the KSD command are identical to the AUNITS V command ([page 75](#)).

KSd Negative Peak Detection

Syntax



XKSdd_b

Description


The KSd command selects negative-peak input detection for displaying trace information. Each trace element is updated with the minimum value detected during the sweep.

NOTE

The functions of the command KSd are identical to the DET NEG command ([page 99](#)).

KSE Title Mode

Syntax

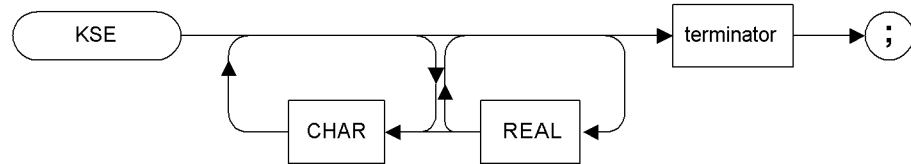

XKSE_b

Description


The KSE command activates the title mode, writing a message to the top line of the display.

NOTE

The characters that Option 266 will accept as a terminator include the 'at' sign (@), the Line Feed character (\n), and end of input. The Carriage Return (\r) character cannot be specified as a terminator, although it is accepted when Carriage Return marks the end of your input.

KSe Sample Detection

Syntax



XKSee_b

Description


The KSe command selects sample input detection for displaying trace information.

NOTE

The functions of the command KSe are identical to the DET SMP command [\(page 99\)](#).

KSG Video Averaging On

Syntax

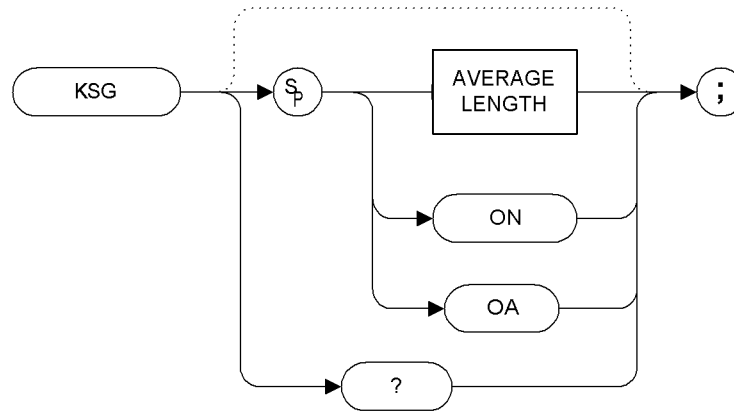

XKSG_b

Description

The KSG command enables video averaging. During video averaging, two traces are displayed simultaneously. Trace C shows the signal as seen at the input detector, while Trace A or Trace B show the same signal after averaging.


Before executing the KSG command, select Trace A or Trace B as the active trace (CLRW command [\(page 92\)](#)) and blank the remaining trace.

NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE The functions of the KSG command are identical to the VAVG ON command [\(page 252\)](#).

KSg Display Off

Syntax



XKSgg_b


Description

The KSg command turns the analyzer's display Off.

On the original HP 8566B and HP 8568B spectrum analyzers, this command turned the CRT beam power off to avoid unnecessary wear on the CRT. Although this command is supported, displays used on the ESA-E and PSA analyzers are not subject to wear.

KSH Video Averaging Off

Syntax



XKSH_b

Description

The KSH command switches video averaging off.


Before executing the KSH command, select Trace A or Trace B as the active trace (CLRW command [\(page 92\)](#)) and blank the remaining trace.

NOTE

The functions of the KSH command are identical to the VAVG OFF command [\(page 252\)](#).

KSh Display On

Syntax



XKShh_b


Description

The KSh command turns the analyzer's display On.

On the original HP 8566B and HP 8568B spectrum analyzers, CRT beam power was often switched Off to prevent wear of the CRT. This command (KSh) was used to turn the CRT beam power on again. Although this command is supported, displays used on the ESA-E and PSA analyzers are not subject to wear.

KSi Exchange Trace B and Trace C

Syntax



XKSii_b

Description

The KSi command exchanges Trace B data with Trace C data.

NOTE

Trace C cannot be an active trace. This means that the data in Trace C cannot be updated as the analyzer sweeps. To ensure that the current settings of the analyzer are reflected in the data exchanged between Trace B and Trace C, you must follow the four step process below.


- Select single sweep mode (S2 [\(page 227\)](#) or SNGLS command [\(page 230\)](#))
- Select the desired analyzer settings
- Take one complete sweep using the TS command [\(page 251\)](#)
- Exchange the data

NOTE

The functions of the command KSi are identical to the BXC command [\(page 85\)](#) and the XCH TRB,TRC command [\(page 257\)](#).

KSj View Trace C

Syntax



XKSjL_b

Description


The KSj command displays Trace C.

NOTE

The functions of the command KSj are identical to the VIEW TRC command ([page 256](#)).

KSK Marker to Next Peak

Syntax



XKSK_b

Description

If there is a marker on the screen, the KSK command moves this marker to the next signal peak of lower amplitude.

NOTE


The functions of the KSK command are similar to the MKPK NH command ([page 188](#)), except that KSK does not take into account either the marker peak excursion value or the threshold value. For more details on marker peak excursion, see the MKPX command ([page 190](#)). For more information on threshold, see the TH command ([page 245](#)).

NOTE

This command is not supported when the remote language is HP8568B.

KSk Blank Trace C

Syntax



XKSkk_b

Description


The KSk command blanks Trace C.

NOTE

The functions of the command KSk are identical to the BLANK TRC command ([page 82](#))

KSL Marker Noise Off

Syntax



XKSL_b

Description


The KSL command disables the noise density function which displays the RMS noise density at the marker. KSL does not blank the marker.

NOTE

The functions of the KSL command are identical to the MKNOISE OFF command ([page 184](#)).

KSI Transfer Trace B to Trace C

Syntax



XKSL_b

Description

The KSI command transfers Trace B data to Trace C

NOTE

Trace C cannot be an active trace. This means that the data in Trace C cannot be updated as the analyzer sweeps. To ensure that the current settings of the analyzer are reflected in the data transferred from Trace B to Trace C, you must follow the four step process below.


- Select single sweep mode (S2 [\(page 227\)](#) or SNGLS command [\(page 230\)](#))
- Select the desired analyzer settings
- Take one complete sweep using the TS command [\(page 251\)](#)
- Transfer the data

NOTE

The functions of the command KSI are identical to the BTC command [\(page 84\)](#).

KSM Marker Noise On

Syntax

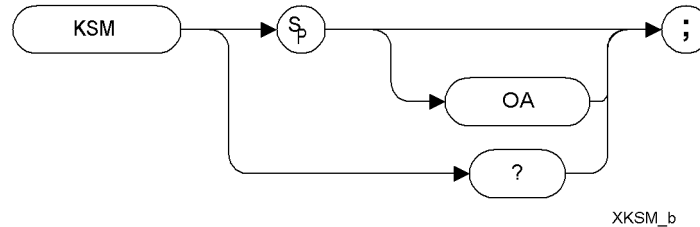

Description

The KSM command displays the noise density at the marker. The noise density is normalized to a 1Hz bandwidth.

NOTE The functions of the KSM command are identical to the MKNOISE ON command ([page 184](#)).

NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE If an MKD command or an M3 command is executed with the marker noise function active, the marker amplitude displayed and returned by the MKA? command ([page 174](#)) or the MA command ([page 167](#)) is the difference between the noise densities at the reference marker and at the delta marker.

If an MKD command or an M3 command is executed before marker noise has been activated, the marker noise amplitude that is displayed on the screen is the difference between the carrier wave power and the noise density at the delta marker position.


However, the value returned by an MKA? ([page 174](#)) command or by an MA command ([page 167](#)) will always be the difference between the noise densities at the two markers. That is, the values returned by MKA? and MA do not always agree with those displayed on the screen. These returned values will only remain correct as long as there has been no change made to either the delta marker or the marker noise from the front panel.

The nominal noise bandwidth to RBW ratio for the RBW filters used in the ESA-E series analyzers is 1.128 for RBWs of 1 kHz and higher, and 1.055 for RBWs of less than 1 kHz. The nominal ratio for PSA analyzers

is 1.055 for all RBWs. The nominal ratio for the HP 8566 family of analyzers is 1.128 for RBWs 100 kHz and higher, and 1.114 for RBWs of 30 kHz and lower.

KSm Graticule Off

Syntax



XKSmm_b

Description


The KSm command blanks the graticule on the analyzer display.

NOTE

The functions of the command KSm are identical to the GRAT OFF command ([page 117](#)).

KSN Marker Minimum

Syntax



XKSN_b

Description


The KSN command moves the marker to the minimum value detected.

NOTE The functions of the KSN command are identical to the MKMIN command ([page 182](#)).

NOTE This command is not supported when the remote language is HP8568B.

KSn Graticule On

Syntax



XKSn_b

Description


The KSn command turns on the graticule on the analyzer display.

NOTE

The functions of the command KSn are identical to the GRAT ON command ([page 117](#)).

KSO Marker Span

Syntax



XKSO_b

Description


The KSO command operates only when the delta marker is On (see MKD [\(page 177\)](#) or M3 [\(page 165\)](#)). When the delta marker is on and the KSO command is executed, the left marker specifies the start frequency, and the right marker specifies the stop frequency. If the delta marker is off, the command does nothing.

NOTE If the active marker is not a delta marker, there is no change in its position.

NOTE The functions of the KSO command are identical to the MKSP command [\(page 194\)](#).

KSo Annotation Off

Syntax



XKSoo_b

Description


The KSo command blanks the annotation on the analyzer display.

NOTE

The functions of the command KSo are identical to the ANNOT OFF command ([page 71](#)).

KSp Annotation On

Syntax



XKSp_b

Description


The KSp command activates the annotation on the analyzer display.

NOTE

The functions of the command KSp are identical to the ANNOT ON command ([page 71](#)).

KST Fast Preset

Syntax



XKST_b

Description


Performs an instrument preset, setting the analyzer back to its factory settings.

NOTE

There is no fast preset for ESA and PSA series analyzers. Instead, HP8566B/68B Code Compatibility performs an instrument preset (IP) when the KST command is issued. The functions of the command KST are therefore identical to the IP command ([page 123](#)).

KSV Frequency Offset

Syntax

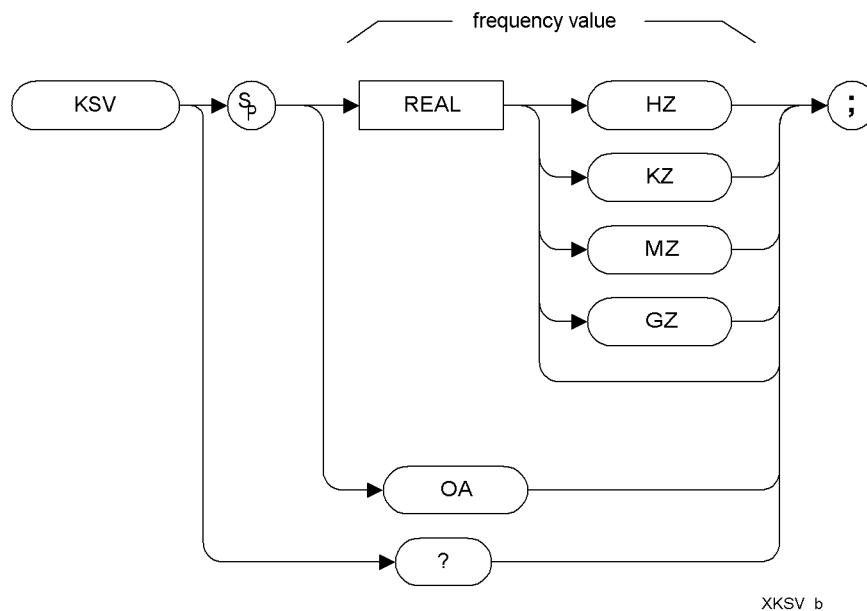

Description


The KSV command allows you to specify a value that offsets the frequency scale for all absolute frequency readouts, for example, center frequency. Relative values, for example, span and delta marker, are not offset.

NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE The functions of the KSV command are identical to the FOFFSET command ([page 112](#)).

KSx External Trigger

Syntax



XKSxx_b

Description

The KSx command activates the normal external trigger mode. When the KSx command is executed, the RF input signal is only displayed when the external trigger level exceeds the trigger threshold level.

NOTE


If an HP 8566B or an HP 8568B analyzer is in zero span and the sweep time is less than 20 msec, the display only gets refreshed when a fresh trace has been taken. This can cause the displayed trace to flicker. In Option 266, all traces are displayed continuously, so all traces are therefore free of flicker.

NOTE

The functions of the command KSx are identical to the TM EXT command ([page 246](#)).

KSy Video Trigger

Syntax



XKSyy_b

Description

The KSy command activates the normal video trigger mode. When the KSy command is executed, the RF input signal is only displayed when the video trigger signal, which is internally triggered off the input signal, exceeds the trigger threshold level.

NOTE


If an HP 8566B or an HP 8568B analyzer is in zero span and the sweep time is less than 20 msec, the display only gets refreshed when a fresh trace has been taken. This can cause the displayed trace to flicker. In Option 266, all traces are displayed continuously, so all traces are therefore free of flicker.

NOTE

The functions of the command KSy are identical to the TM VID command ([page 246](#)) and to the T4 command ([page 241](#)).

KSZ Reference Level Offset

Syntax

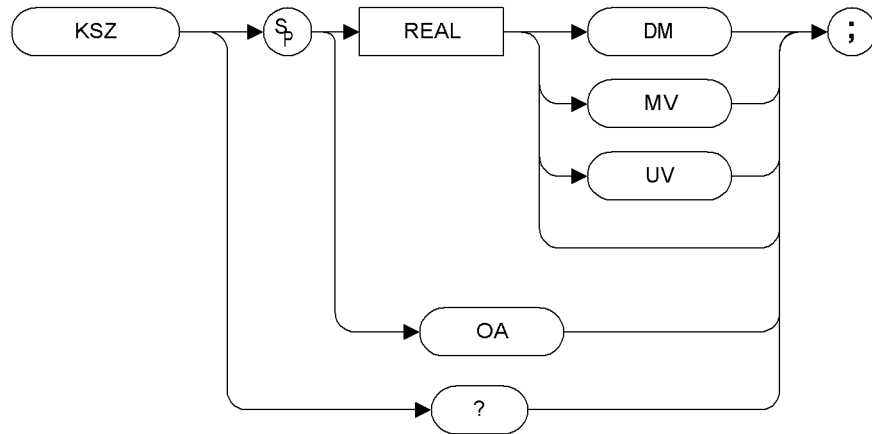

XKSZ_b

Description

The KSZ command offsets all amplitude readouts on the display but without affecting the trace.

Once activated, the KSZ command displays the amplitude offset on the left side of the screen.


Entering KSZ 0 or presetting the spectrum analyzer eliminates an amplitude offset.

NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE The functions of the KSZ command are identical to the ROFFSET command ([page 224](#)).

LO [*zero*] Display Line Off

Syntax



XLO_b

Description


The LO [*zero*] command disables the display line.

NOTE

The functions of the LO [*zero*] command are identical to the DLE OFF command ([page 102](#)).

LF Low Frequency Preset

Syntax



XLF_b

Description


Performs a low frequency preset. That is, it selects a Start Frequency of 0 Hz and a Stop Frequency of 2.5 GHz, a Reference Level of 0dBm, and sets all coupled functions to automatic.

NOTE

This command is not supported when the remote language is HP8568B.

LG Logarithmic Scale

Syntax

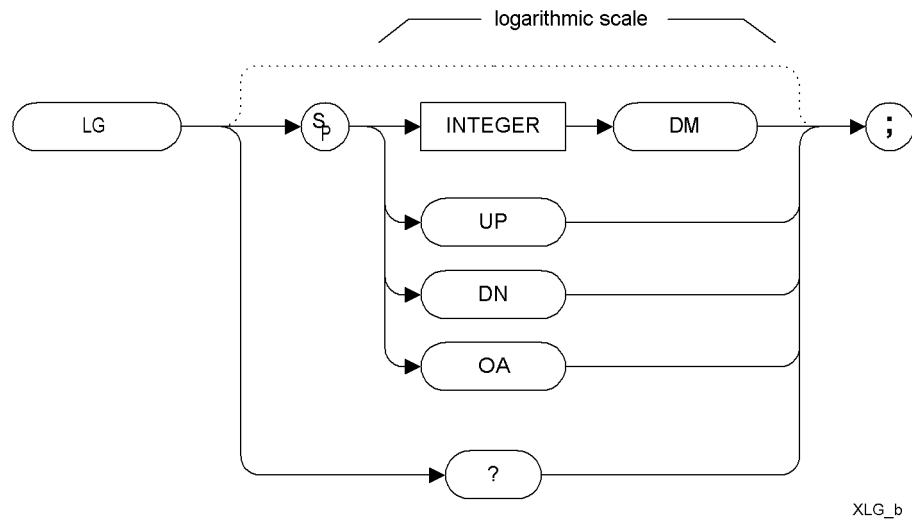

Description


Specifies the amplitude (vertical graticule divisions) as logarithmic units, without changing the reference level.

NOTE

The OA option only returns the current value to the controller. It does not set the active function.

LN Linear Scale

Syntax




XLN_b

Description

Scales the amplitude (vertical graticule divisions) proportional to the input voltage, without changing the reference level. The bottom line of the graticule represents 0 volts.

M1 *[one]* Marker Off

Syntax



XM1_b

Description


The M1 *[one]* command blanks any markers showing on the display.

NOTE

The functions of the M1 *[one]* command are identical to the MKOFF ALL command ([page 186](#)).

M2 [two] Marker Normal

Syntax

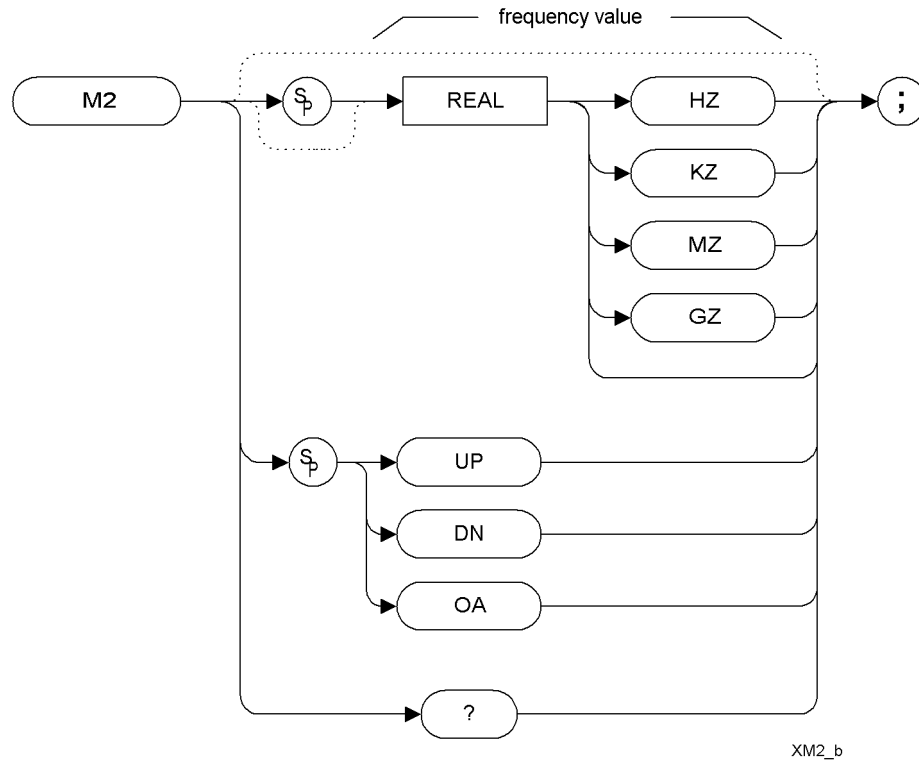

Description


The M2 [two] command moves the active marker to the marker frequency. If the active marker has not been declared with MKACT, a normal marker is turned on and this active marker is assumed to be 1. If the active marker type is not currently normal (for example, it is delta or peak), the M2 command will change it to a normal marker.

NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE The functions of the M2 command are identical to the MKN command ([page 183](#)).

M3 [three] Delta Marker

Syntax

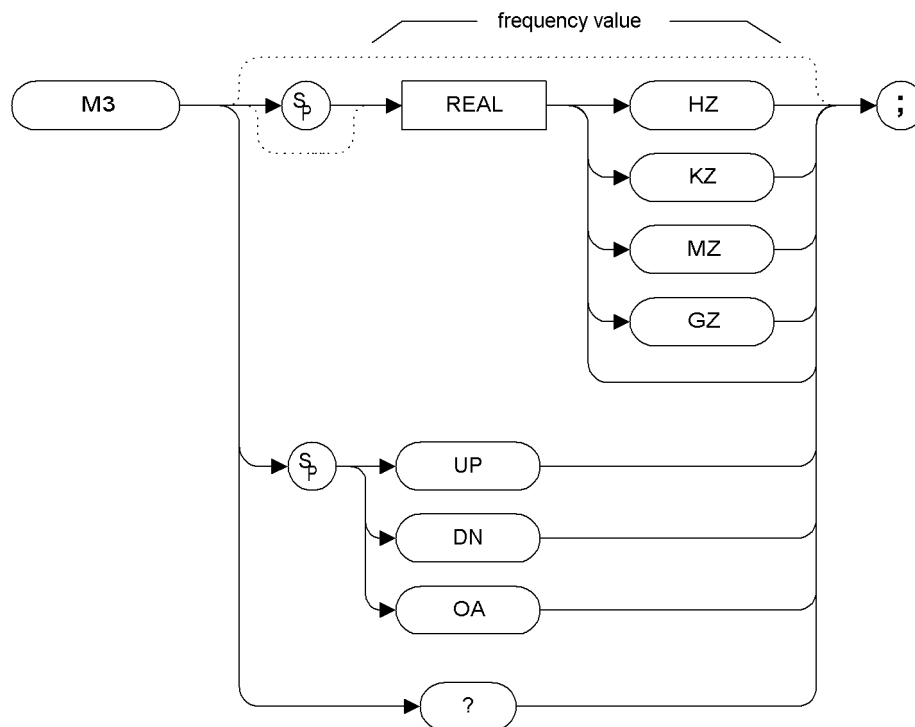

XM3_b

Description

The M3 [three] command computes the frequency and amplitude difference between the active marker and the delta (or difference) marker.

If a delta marker is not displayed on the screen, the M3 command places one at the specified frequency or on the right hand edge of the display. If an active marker is not displayed on the screen, the M3 command places an active marker at the center of the screen.

NOTE

The active marker is the number 1 marker unless otherwise specified by the MKACT command ([page 175](#)).

NOTE

If the M3 command is executed with the marker noise function active (MKNOISE ON (page 184) or KSM (page 146)), the marker amplitude displayed and returned by the MKA? command (page 174) or the MA command (page 167) is the difference between the noise densities at the reference marker and at the delta marker.

If the M3 command is executed before marker noise has been activated, the marker noise amplitude that is displayed on the screen is the difference between the carrier wave power and the noise density at the delta marker position.

However, the value returned by an MKA? (page 174) command or by an MA command (page 167) will always be the difference between the noise densities at the two markers. That is, the values returned by MKA? and MA do not always agree with those displayed on the screen. These returned values will only be correct as long as there has been no change in either the delta marker or the marker noise on the front panel.

The nominal noise bandwidth to RBW ratio for the RBW filters used in the ESA-E series analyzers is 1.128 for RBWs of 1 kHz and higher, and 1.055 for RBWs of less than 1 kHz. The nominal ratio for PSA analyzers is 1.055 for all RBWs. The nominal ratio for the HP 8566 family of analyzers is 1.128 for RBWs 100 kHz and higher, and 1.114 for RBWs of 30kHz and lower.

NOTE


The OA option only returns the current value to the controller. It does not set the active function.

NOTE

The functions of the M3 command are identical to the MKD command (page 177).

MA Marker Amplitude Output

Syntax



XMA_b

Description

The MA command returns the amplitude level of the active marker if the marker is on the screen. If both the active marker and the delta marker are displayed, the MA command returns the amplitude difference between the two markers.


The format of the returned data is determined by the TDF (Trace Data Format) ([page 244](#)) command and, if TDF B (binary data format) has been selected, by the MDS command ([page 170](#)).

NOTE

The functions of the MA command are identical to the MKA command ([page 174](#)).

MC0 [zero] Marker Frequency Counter Off

Syntax



XMC0_b

Description


The MC0 [zero] command turns the marker frequency counter off.

NOTE The functions of the MC0 [zero] command are identical to the MKFC OFF command ([page 180](#)).

NOTE This command is not supported when the remote language is HP8566B.

MC1 *[one]* Marker Frequency Counter On

Syntax



XMC1_b

Description

The MC1 *[one]* command turns the marker frequency counter on.

NOTE


The functions of the MC1 *[one]* command are identical to the MKFC ON command ([page 180](#)).

NOTE

This command is not supported when the remote language is HP8566B.

MDS Measurement Data Size

Syntax

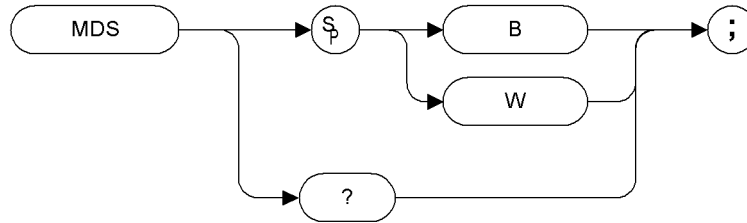

XMDS_b

Description


The MDS command formats binary data in one of the following formats:

- B** selects a data size of one 8-bit byte.
- W** selects a data size of one word, which is two 8-bit bytes.

If no keyword is specified in the command, the default value of W is assumed.

MEAN Trace Mean

Syntax

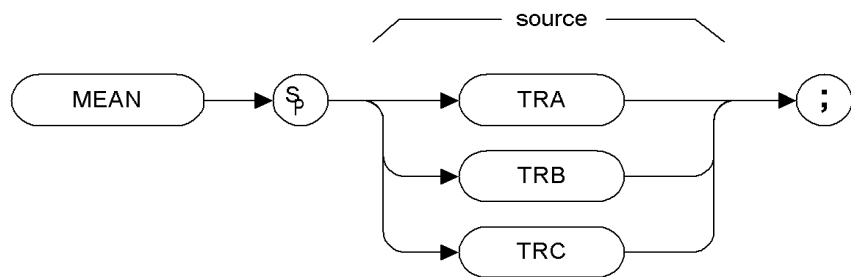

XMEAN_b

Description


Returns the mean value of the specified trace in display units.

NOTE

TRA corresponds to Trace 1, TRB corresponds to Trace 2, and TRC corresponds to Trace 3.

MF Marker Frequency Output

Syntax




XMF_b

Description

Returns the frequency (or time) of the on-screen active marker. If both an active marker and the delta marker are on the screen, the frequency difference is returned.

MINPOS Minimum X Position

Syntax

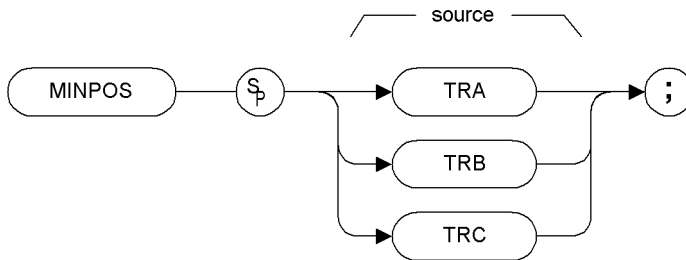


XMINPOS_b

Description

The MINPOS command returns the *X* co-ordinate value that corresponds to the minimum amplitude of the specified trace.

MKA Marker Amplitude

Syntax



XMKA_b

Description

The MKA command returns the amplitude level of the active marker if the marker is on the screen. If both the active marker and the delta marker are displayed, the MKA command returns the amplitude difference between the two markers.

The format of the returned data is determined by the TDF (Trace Data Format) ([page 244](#)) command and, if TDF B (binary data format) has been selected, by the MDS command ([page 170](#)).

NOTE The functions of the MKA command are identical to the MA command ([page 167](#)).

NOTE In HP8566B and HP8568B analyzers, the MKA command can be used with a numeric argument that places the marker at the specified amplitude on the screen. In Option 266 HP 8566B/68B Code Compatibility, MKA is a query only command. That is, the command will not accept arguments of any type, and can only be used in the form MKA?.

MKACT Activate Marker

Syntax

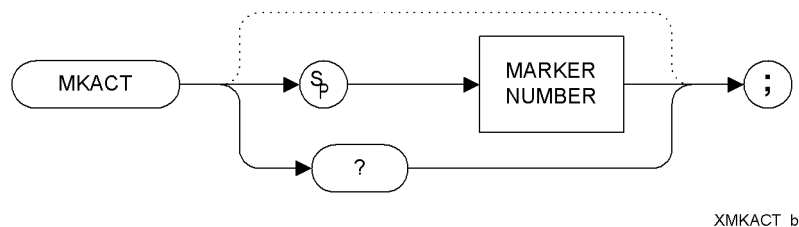


Table 4-15


Item	Description/Default	Range
Marker Number	Any valid integer. Default value is 1.	1 to 4

Description

MKACT specifies the active marker. There can be four different markers, but only one marker can be active at any time.

MKCF Marker to Center Frequency

Syntax



XMKCF_b

Description


Sets the center frequency equal to the marker frequency and moves the marker to the center of the screen.

NOTE

The functions of the MKCF command are identical to the E2 command ([page 105](#)).

MKD Marker Delta

Syntax

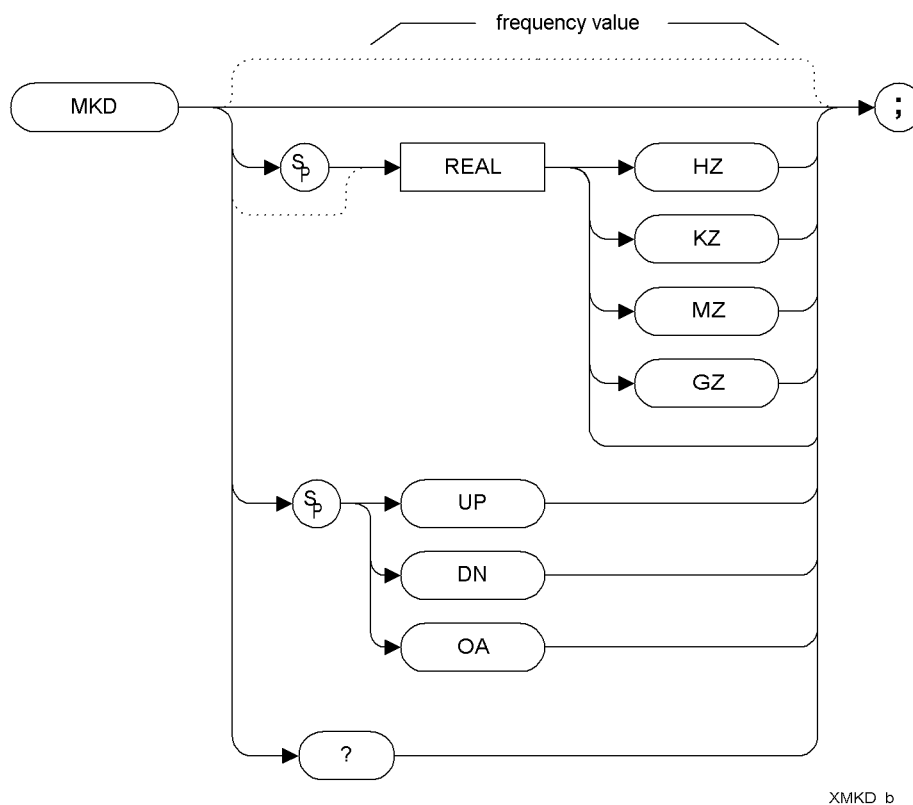

Step Increment: by 1/10 of the frequency span

Description

The MKD command computes the frequency and amplitude difference of the active marker and the delta marker. These values are displayed in the screen.

If a delta marker is not displayed on the screen, the MKD command places one at the specified frequency or on the right hand edge of the display. If an active marker is not displayed on the screen, the MKD command places an active marker at the center of the screen.

NOTE

The active marker is the number 1 marker unless otherwise specified by the MKACTION command ([page 175](#)).

NOTE If the MKD command is executed with the marker noise function active (MKNOISE ON (page 184) or KSM (page 146)), the marker amplitude displayed and returned by the MKA? command (page 174) or the MA command (page 167) is the difference between the noise densities at the reference marker and at the delta marker.

If the MKD command is executed before marker noise has been activated, the marker noise amplitude that is displayed on the screen is the difference between the carrier wave power and the noise density at the delta marker position.

However, the value returned by an MKA? (page 174) command or by an MA command (page 167) will always be the difference between the noise densities at the two markers. That is, the values returned by MKA? and MA do not always agree with those displayed on the screen. These returned values will only be correct as long as there has been no change in either the delta marker or the marker noise on the front panel.


The nominal noise bandwidth to RBW ratio for the RBW filters used in the ESA-E series analyzers is 1.128 for RBWs of 1 kHz and higher, and 1.055 for RBWs of less than 1 kHz. The nominal ratio for PSA analyzers is 1.055 for all RBWs. The nominal ratio for the HP 8566 family of analyzers is 1.128 for RBWs 100 kHz and higher, and 1.114 for RBWs of 30kHz and lower.

NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE The functions of the MKD command are identical to the M3 command (page 165).

MKF Marker Frequency

Syntax

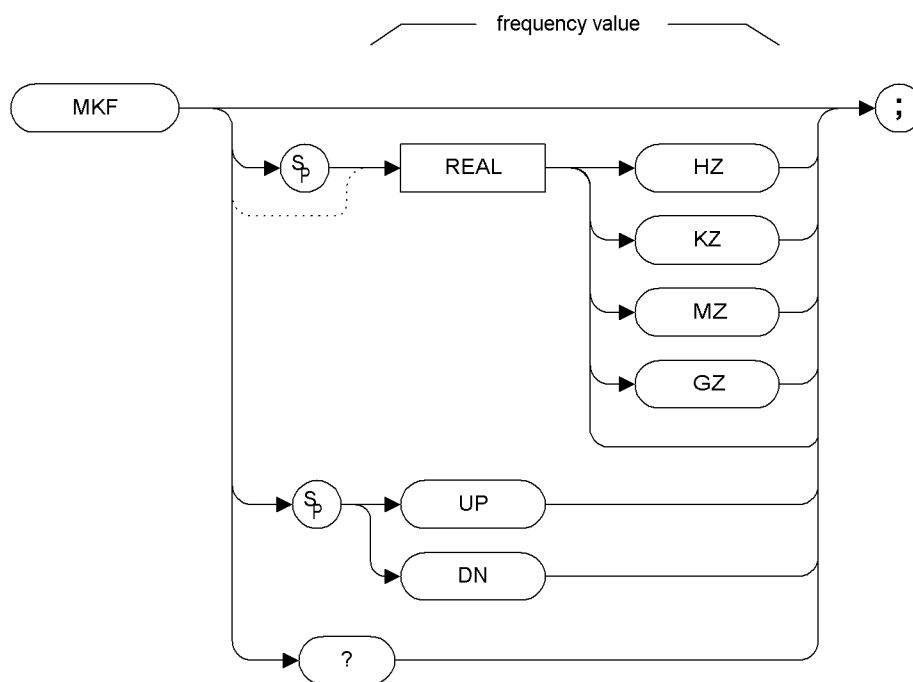

XMKF_b


Description

Specifies the frequency value of the active marker.

The format of the returned data is determined by the TDF (Trace Data Format) ([page 244](#)) command and, if TDF B (binary data format) has been selected, by the MDS command ([page 170](#)).

MKFC Marker Counter

Syntax

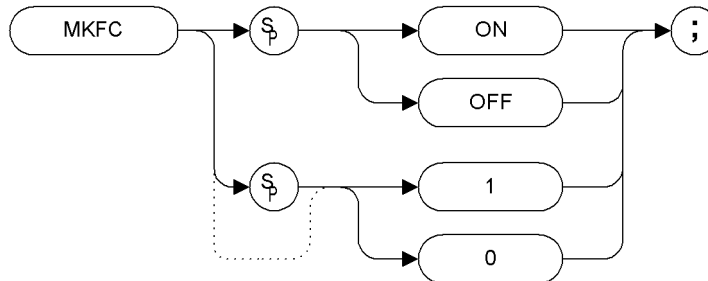

XMKFC_b

Description


Turns on or off the marker frequency counter. The resolution of the frequency marker counter is determined by the MKFCR command ([page 181](#)).

NOTE The functions of the MKFC command are identical to the MC0 *[zero]* command ([page 168](#)) and MC1 *[one]* command ([page 169](#)).

NOTE This command is not supported when the remote language is HP8566B.

MKFCR Marker Counter Resolution

Syntax

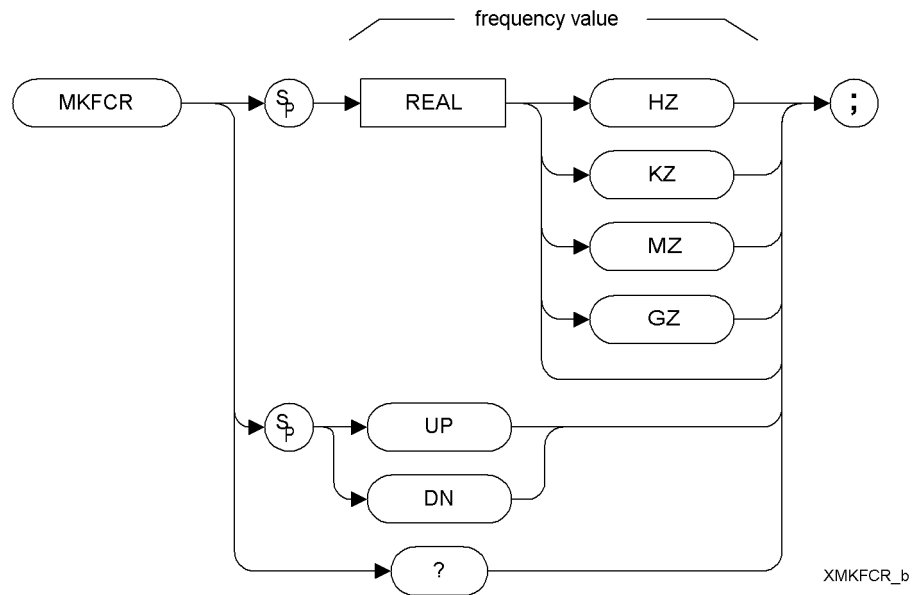

NOTE The marker counter can be specified in time units when operating in the time domain

Description

Sets the resolution of the marker frequency counter.

NOTE On PSA analyzers, setting the marker frequency resolution will cause the Gate Time to change. The Gate Time is calculated using the following formula:

$$\text{Gate Time} = \frac{1}{\text{Resolution Value}}$$


For restrictions on the Gate Time, refer to the *PSA User's and Programmer's Reference Guide*.

NOTE The functions of the MKFCR command are identical to the KS= command ([page 125](#)).

NOTE This command is not supported when the remote language is HP8566B.

MKMIN Marker Minimum

Syntax




XMKMIN_b

Description

Moves the active marker to the minimum value detected.

MKN Marker Normal

Syntax

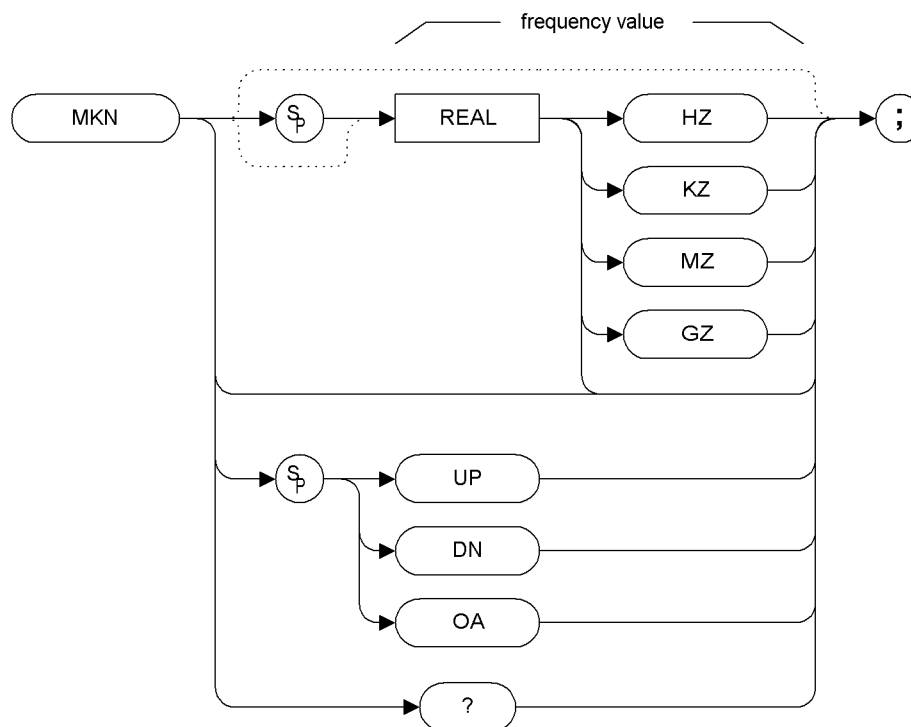

Step Increment: by 1/10 of the frequency span.

Description

The MKN command moves the active marker to the specified frequency. If the active marker has not been declared with MKACTION, a normal marker is turned on and this active marker is assumed to be 1. If the active marker type is not currently normal (for example, it is delta or peak), the MKN command will change it to a normal marker.


NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE The functions of the MKN command are identical to the M2 *[two]* command ([page 164](#)).

NOTE This command is not supported when the remote language is HP8568B.

MKNOISE Marker Noise

Syntax

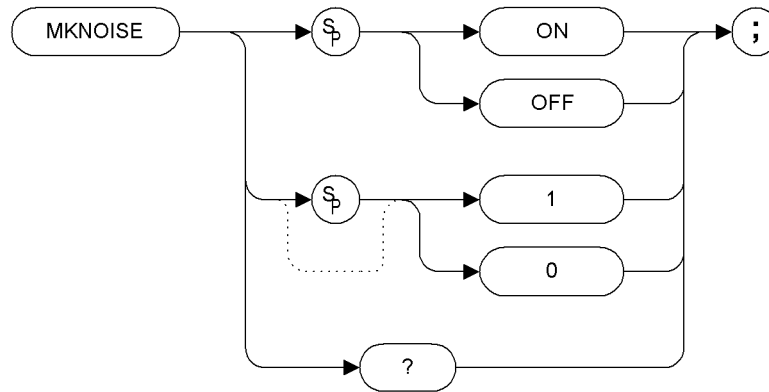

XMKNOISE_b

Description

Displays the average RMS noise density at the marker.

NOTE

The functions of the MKNOISE command are identical to the KSM command (page 146) and the KSL command (page 144).

NOTE

If an MKD command or an M3 command is executed with the marker noise function active, the marker amplitude displayed and returned by the MKA? command (page 174) or the MA command (page 167) is the difference between the noise densities at the reference marker and at the delta marker.

If an MKD command or an M3 command is executed before marker noise has been activated, the marker noise amplitude that is displayed on the screen is the difference between the carrier wave power and the noise density at the delta marker position.


However, the value returned by an MKA? (page 174) command or by an MA command (page 167) will always be the difference between the noise densities at the two markers. That is, the values returned by MKA? and MA do not always agree with those displayed on the screen. These returned values will only remain correct as long as there has been no change made to either the delta marker or the marker noise from the front panel.

The nominal noise bandwidth to RBW ratio for the RBW filters used in the ESA-E series analyzers is 1.128 for RBWs of 1 kHz and higher, and

1.055 for RBWs of less than 1 kHz. The nominal ratio for PSA analyzers is 1.055 for all RBWs. The nominal ratio for the HP 8566 family of analyzers is 1.128 for RBWs 100 kHz and higher, and 1.114 for RBWs of 30kHz and lower.

MKOFF Marker Off

Syntax

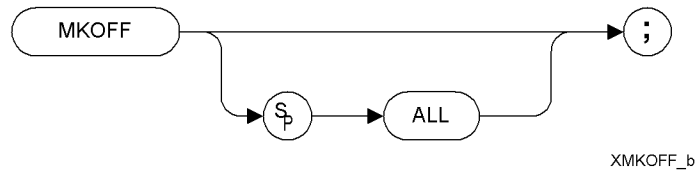


Description

Turns off either the active marker or all the markers. If the ALL parameter is omitted, only the active marker is turned off.

MKP Marker Position

Syntax

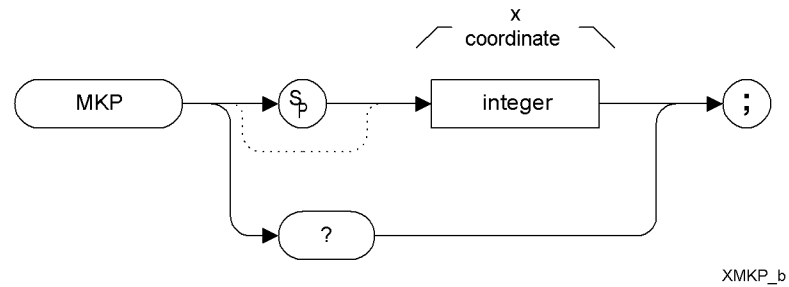


Description

Places the active marker at the specified *X* co-ordinate.

MKPK Marker Peak

Syntax

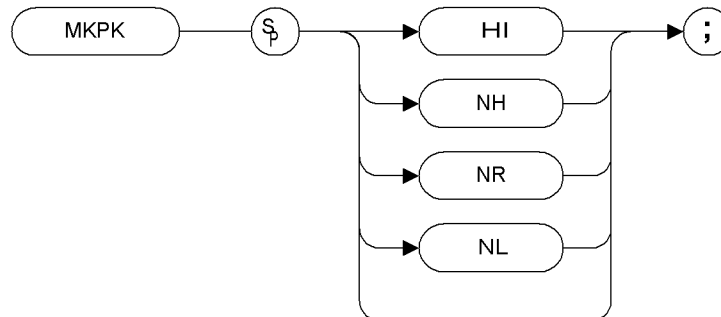

XMKPK_b

Description

The MKPK command is used to place a marker on the highest signal peak detected, or to move a marker from one signal peak to another. The secondary keywords determine which signal peak the marker is moved to.

NOTE

When executing the MKPK command, it is important to know whether you have an active marker on the screen. The result of issuing an MKPK command depends on whether a marker is already active or not.

MKPK With no secondary keyword specified, the MKPK command moves the active marker to the highest signal peak. If no marker is active, a marker is activated at the highest signal peak. This is exactly the same as when the HI keyword is used.

MKPK HI Moves the active marker to the highest signal peak. If no marker is active, a marker is activated at the highest signal peak. 'HI' equates to 'Highest (signal peak)'.

MKPK NH If there is an active marker on the screen, the NH keyword causes the marker to move down to the next highest signal peak. If there is no active marker, the command will be ignored. 'NH' equates to 'Next Highest (signal peak)'.

MKPK NR If there is an active marker on the screen, the NR keyword causes the marker to move to the next signal peak of a higher frequency. If there is no active marker,

the command will be ignored. 'NR' equates to 'Next Right (signal peak)'.

MKPK NL If there is an active marker on the screen, the NL keyword causes the marker to move to the next signal peak of a lower frequency. If there is no active marker, the command will be ignored. 'NL' equates to 'Next Left (signal peak)'.


NOTE The MKPK command with parameters **NH**, **NR**, or **NL** is ignored if there is no active marker.

NOTE The functions of the MKPK command (no secondary keyword) and the MKPK HI command are identical to the E1 commands: [\(page 104\)](#).

NOTE The functions of the MKPK NH command are similar to the KSK command [\(page 142\)](#), except that KSK does not take into account either the marker peak excursion value or the threshold value. For more details on marker peak excursion, see the MKPX command [\(page 190\)](#). For more information on threshold, see the TH command [\(page 245\)](#).

MKPX Marker Peak Excursion

Syntax

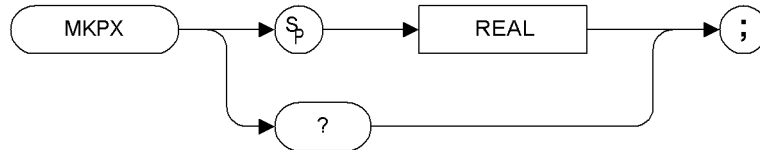

XMKPX_b

Preset State: 6 dB.

Step Increment: by 1 dB.


Description

Specifies the minimum signal excursion for the spectrum analyzer's internal peak identification routine.

The default value is 6 dB. In this case, any signal with an excursion of less than 6 dB on either side of the marker would not be identified. Thus, if an MKPK NH command were to be executed on such a signal, the analyzer would not place a marker on this signal peak.

MKREAD Marker Readout

Syntax

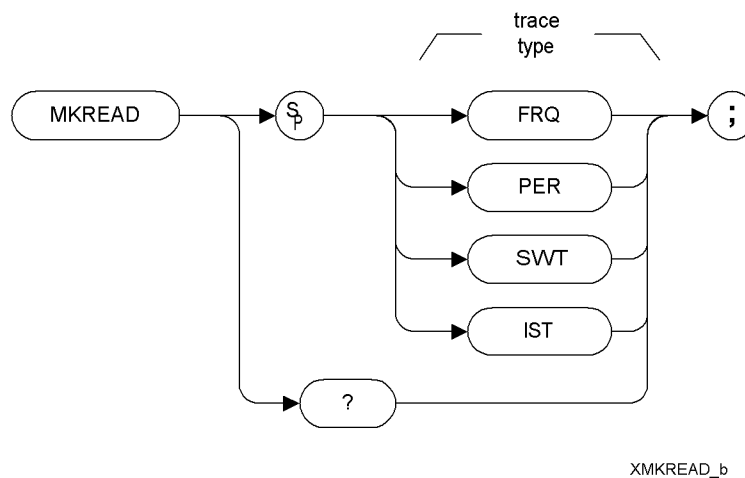

Description

Selects the type of active trace information displayed by the spectrum analyzer marker readout.

The MKREAD command can select the following types of active trace information:

FRQ	frequency
SWT	sweep time
IST	inverse sweep time
PER	period

NOTE

The Inverse Sweep Time (IST) readout is only available when using a delta marker in zero span.

The results of the data depend on the MKREAD parameter and the

frequency span, and whether the marker delta function is used.


Table 4-16

MKREAD Type	Non-Zero Span	Non-Zero Span Delta	Zero Span	Zero Span Delta
FRQ	Reads frequency	Reads delta frequency	N/A	N/A
SWT	Reads time since the start of sweep	Reads delta time between end points	Waveform measurements of detected modulation	Waveform measurements of detected modulation
IST	N/A	N/A	N/A	Computes frequency corresponding to delta of markers. Performs $1/(T_1 - T_2)$
PER	Period of frequency	(Pulse measurement) delta time	N/A	N/A

NOTE FFT (Fast Fourier Transform) is not available in the HP8566B/68B Code Compatibility option.

MKRL Marker to Reference Level

Syntax



XMKRL_b

Description


The MKRL command moves the active marker to the reference level.

NOTE

The functions of the MKRL command are identical to the E4 command ([page 107](#)).

MKSP Marker to Span

Syntax



XMKSP_b

Description


The MKSP command operates only when the delta marker is On (see MKD [\(page 177\)](#) or M3 [\(page 165\)](#).) When the delta marker is On and MKSP is executed, the delta marker and active marker determine the start and stop frequencies. The left marker specifies the start frequency, and the right marker specifies the stop frequency. If marker delta is Off, there is no operation.

NOTE If the active marker is not a delta marker, there is no change in its position.

NOTE The functions of the MKSP command are identical to the KSO command [\(page 151\)](#).

MKSS Marker to Step Size

Syntax



XMKSS_b

Description


Sets the center-frequency step-size equal to the marker frequency. If the analyzer is in the delta mode, the step size is set to the frequency difference between the active and the delta marker.

NOTE

When the marker is a delta marker, the functions of the MKSS command are identical to the E3 command ([page 106](#)).

MKTRACE Marker Trace

Syntax

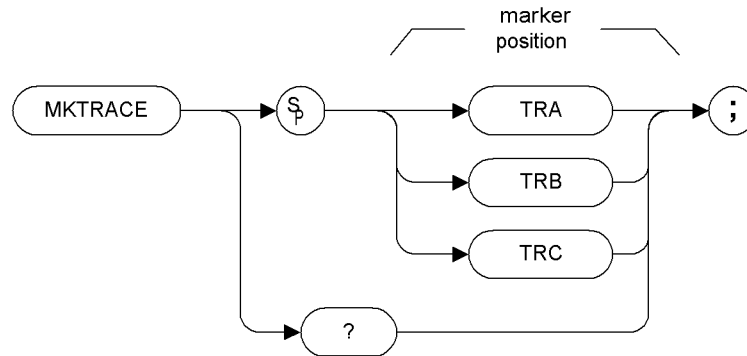

XMKTRACE_b

NOTE TRA corresponds to Trace 1, TRB corresponds to Trace 2, and TRC corresponds to Trace 3.


Description

Moves the active marker to the corresponding position in Trace 1, Trace 2, or Trace 3.

NOTE If the marker is moved to an inactive trace, the marker will move to the bottom of the screen on an ESA-E series analyzer, and to the top of the screen on a PSA analyzer.

MKTRACK Marker Track

Syntax

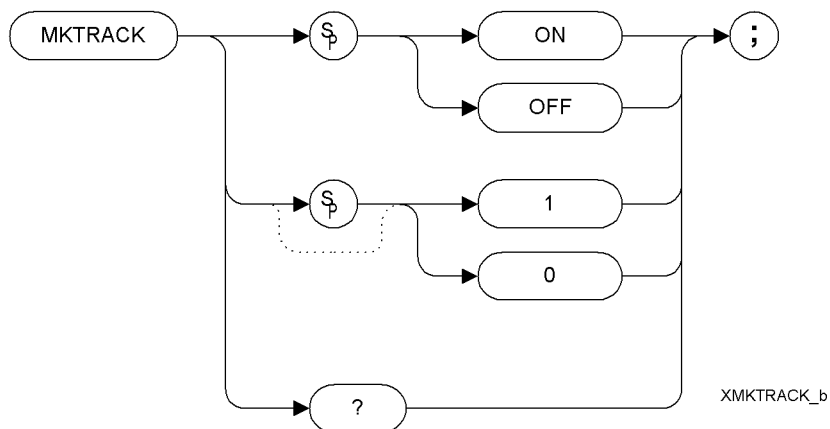

Description

Moves the signal on which the active marker is located to the center of the spectrum analyzer display and keeps the signal peak at center screen.


To keep a drifting signal at center screen, place the active marker on the desired signal before turning on MKTRACK.

NOTE

The functions of the MKTRACK command are identical to the MT0 *[zero]* command (page 200) and the MT1 *[one]* command (page 201).

ML Mixer Level

Syntax

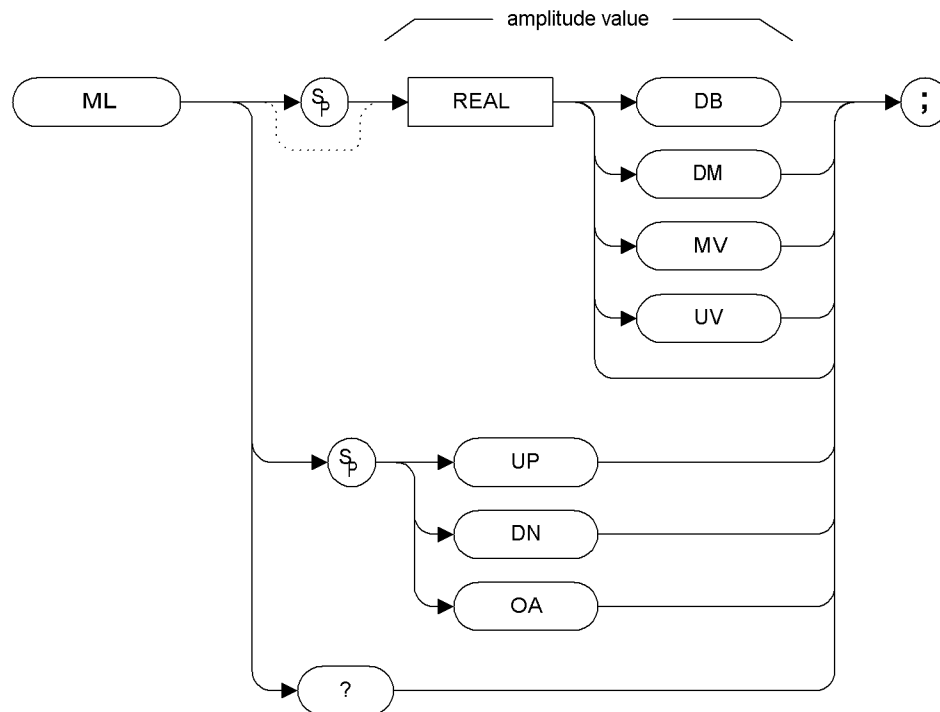

XML_b

Description

The ML command specifies the maximum signal level that is applied to the input mixer for a signal that is equal to or below the reference level.

The effective mixer level is equal to the reference level minus the input attenuator setting.

NOTE

If an external amplifier gain value is set, the mixer level is determined using the following equation:

$$\text{Mixer Level} = \text{Ref. Level} - \text{Attenuation} + \text{Ext. Amplifier Gain}$$

The external amplifier gain is not preset by doing an IP command in case the analyzer is measuring a large signal. This is to protect the analyzer from damage from a large signal. For a helpful suggestion, see


[Chapter 3 , “Hints and Tips,” on page 57.](#)

NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE The functions of the ML command are identical to the KS, command ([page 124](#)).

MT0 [*zero*] Marker Track Off

Syntax



XMT0_b

Description


The MT0 [*zero*] command disables the marker tracking mode.

NOTE

The functions of the MT0 [*zero*] command are identical to the MKTRACK OFF command ([page 197](#)).

MT1 *[one]* Marker Track On

Syntax



XMT1_b

Description

Moves the signal on which the active marker is located to the center of the spectrum analyzer display and keeps the signal peak at center screen.


To keep a drifting signal at center screen, place the active marker on the desired signal before issuing an MT1 *[one]* command.

NOTE

The functions of the MT1 command are identical to the MKTRACK ON command ([page 197](#)).

MXMH Maximum Hold

Syntax

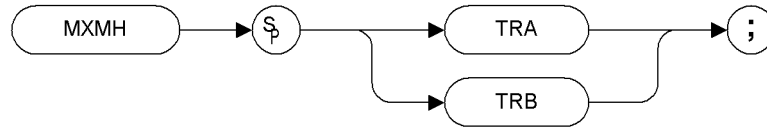

XXMH_b

Description

Updates each trace element with the maximum level detected.


MXMH updates the specified trace (either Trace A or Trace B) with a new value from a detector only if the new value is larger than the previous trace data value.

NOTE

The functions of the MXMH command are identical to the A2 command ([page 66](#)) and B2 command ([page 78](#)).

O1 [one] Format - Display Units

Syntax




XO1_b

Description

The O1 [one] command transmits trace amplitude and position information as decimal values in display units.

O2 [two] Format - Two 8-Bit Bytes

Syntax




XO2_b

Description

The O2 [two] command transmits trace amplitude and position information as two 8-bit binary numbers, or one instruction word.

O3 [three] Format - Real Amplitude Units

Syntax




XO3_b

Description

The O3 [three] command transmits trace amplitude information only, in measurement units of Hz, dBm, dB, volts or seconds.

O4 [four] Format - One 8-Bit Byte

Syntax




XO4_b

Description

The O4 [four] command transmits trace amplitude information only as a binary number.

OT Output Trace Annotations

Syntax



XOT_b

Description


The OT command sends 32 character-strings to the controller. Each character-string can be up to 64 characters long.

NOTE

The 'dirty marker' status report returned in string 27 is only supported in PSA series analyzers.

PEAKS Peaks

Syntax

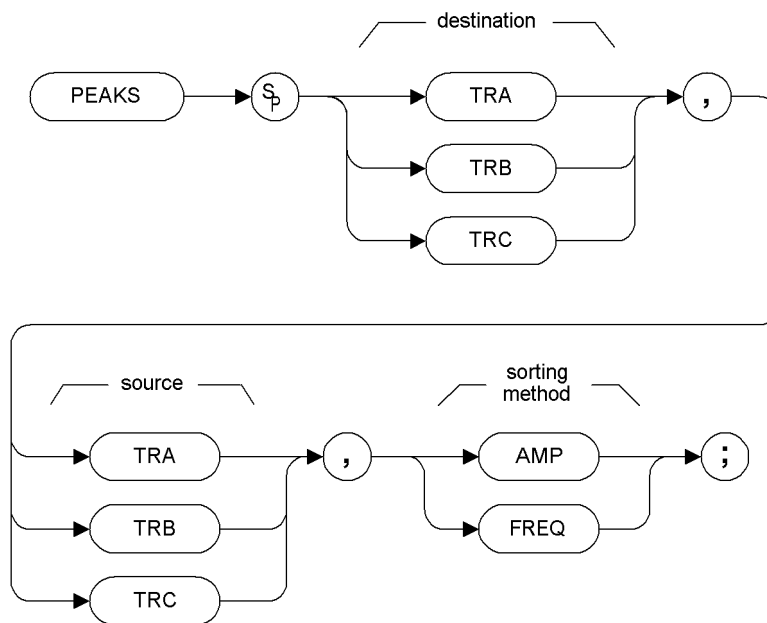

XPEAKS_b


Prerequisite Commands: TS when using trace data

Description

The PEAKS command sorts the signal peaks in the source trace by frequency or amplitude, and sends the results to destination trace.

PKPOS Peak Position

Syntax

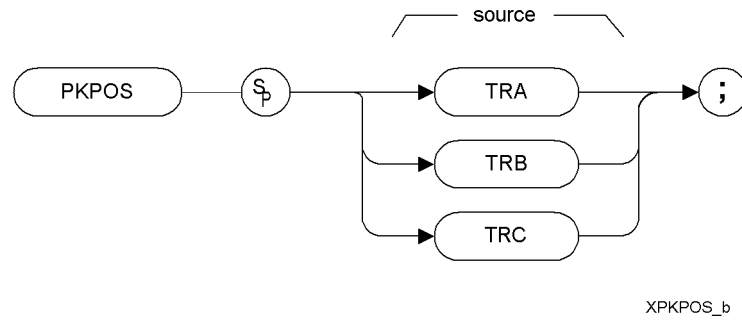


Description

The PKPOS command returns the *X* co-ordinate value of the maximum peak in the specified trace.

PLOT Plot

Syntax



XPLOT_b

Description

The PLOT command allows you transfer trace data, graticule and annotation information to a plotter.


NOTE

The HP 8566B/HP 8568B transferred data directly to a plotter via the GPIB connection. The PLOT command now transfers data to a printer, and prints the entire screen. For instructions on connecting your analyzer to a printer, see the ESA-E and PSA User's Reference and Programming Guide.

Although the PLOT command will read in plotter dimension values, these will be ignored.

PP Preselector Peak

Syntax



XPP_b

Description


The PP command optimizes preselector tracking to peak the amplitude of a signal at the active marker. If a marker is not on the screen, PP places a marker at the highest signal level, and optimizes preselector tracking at that frequency.

NOTE This command is not supported when the remote language is HP8568B.

NOTE This command is only supported when the analyzer's maximum frequency limit is greater than 3 GHz. If the command is issued on an analyzer with a maximum frequency limit of 3 GHz or less, an error message will be generated stating that the command is not supported.

PWRBW Power Bandwidth

Syntax

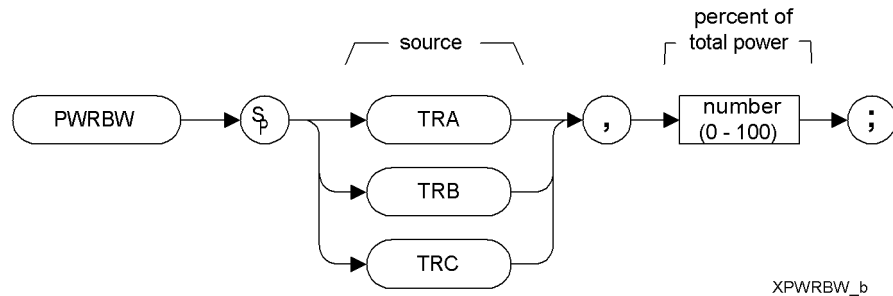

Description

The PWRBW command returns the bandwidth of the specified percentage of the total power.

The Command first computes the total power of all the signal responses contained within the trace array. It then repeatedly eliminates the trace element from each end of the trace array until the combined power of the remaining trace elements represents the specified percentage of the total power. The result is the frequency span, or power bandwidth, of these remaining trace elements.


The resulting bandwidth is therefore centered on the display, and not on the trace's peak signal.

NOTE

When this command is executed on an 8566, the trace stops. This is not the case when it is executed on either the ESA or the PSA analyzers.

R1 *[one]* Illegal Command SRQ

Syntax



XR1_b

Description


The R1 *[one]* command deactivates all analyzer service requests (SRQs) except SRQ140, the illegal-command service request.

NOTE

HP 8566B/68B Code Compatibility does not support the setting of bit 1 (units-key-pressed) of the status byte. Bit-1 of the status byte is always set to Off.

R2 [two] End-of-Sweep SRQ

Syntax



XR2_b

Description


The R2 [two] command activates the end-of-sweep and illegal-command service requests.

NOTE

HP 8566B/68B Code Compatibility does not support the setting of bit 1 (units-key-pressed) of the status byte. Bit-1 of the status byte is always set to Off.

R3 [*three*] Hardware Broken SRQ

Syntax



XR3_b

Description


The R3 [*three*] command activates the hardware-broken and illegal-command service requests.

NOTE

HP 8566B/68B Code Compatibility does not support the setting of bit 1 (units-key-pressed) of the status byte. Bit-1 of the status byte is always set to Off.

R4 [four] Units-Key-Pressed SRQ

Syntax



XR4_b

Description


The R4 [four] command activate the units-key-pressed and illegal-command SRQs.

NOTE ESA and PSA analyzers cannot replicate the units-key-pressed service request since no front panel interaction is supported.

NOTE HP 8566B/68B Code Compatibility does not support the setting of bit 1 (units-key-pressed) of the status byte. Bit-1 of the status byte is always set to Off.

RB Resolution Bandwidth

Syntax

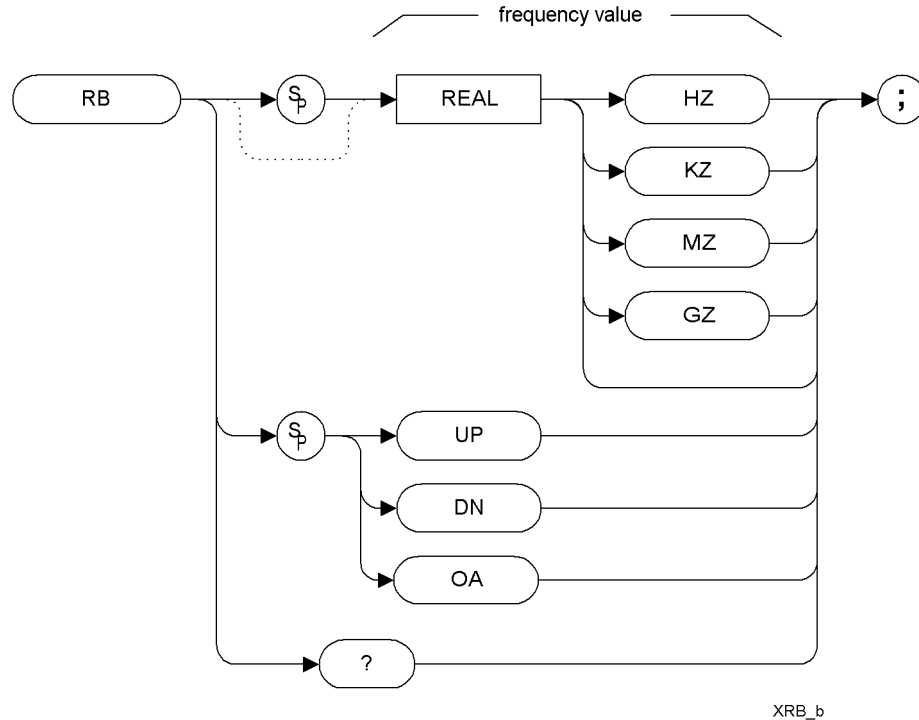

Preset State: 3 MHz.

Step Increment: In a 1, 3, 10 series.

Description


The RB command specifies the resolution bandwidth. Available bandwidths are 10 Hz, 30 Hz, 300 Hz, 1 kHz, 3kHz, 30 kHz, 100 kHz, 300 kHz, 1 MHz, and 3 MHz. The resolution bandwidths, video bandwidths, and sweep time are normally coupled. Executing RB decouples them. Execute CR (page 94) to reestablish coupling.

NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE Default values on ESA and PSA analyzers may vary from the HP 8566B and the HP 8568B analyzers. Refer to the relevant ESA-E or PSA User Guide to find out any restrictions that may apply.

RC Recall State

Syntax



XRC_b

Description

Recalls analyzer state data from the specified state register in the analyzer's memory.


Registers one through six are reserved for the user, and contain instrument states (such as front panel configuration) sorted with the SAVES command ([page 228](#)) or SV command ([page 237](#)).

NOTE Registers 7, 8 and 9 had specific uses in the HP8566B and HP 8568B analyzers. HP 8566B/68B Code Compatibility does not use these registers, so they are available for the your own use.

NOTE The functions of the RC command are identical to the RCLS command ([page 219](#)).

RCLS Recall State

Syntax



XRCLS_b

Description

Recalls analyzer state data from the specified state register in the analyzer's memory.

Registers one through six are reserved for the user, and contain instrument states (such as front panel configuration) sorted with the SAVES command (page 228) or SV command (page 237).

NOTE The functions of the RCLS command are identical to the RC command (page 218).

NOTE Registers 7, 8 and 9 had specific uses in the HP8566B and HP 8568B analyzers. HP 8566B/68B Code Compatibility does not use these registers, so they are available for the your own use.

REV Revision

Syntax



XREV_b

Description

The REV command returns the firmware revision number.


NOTE

In ESA and PSA analyzers, this command returns the build date of Option 266 that you have installed in your analyzer. The date is returned in YYWW format where YY is the number of years since 1950, and WW is the Work Week.

As an example, if your Option 266 HP 8566B/68B Code Compatibility firmware was built on May 23 2002, the number 5221 would be returned. The year 2002 is 52 years after 1950, and May 23 is the 21st week of the year, hence 5221.

RL Reference Level

Syntax

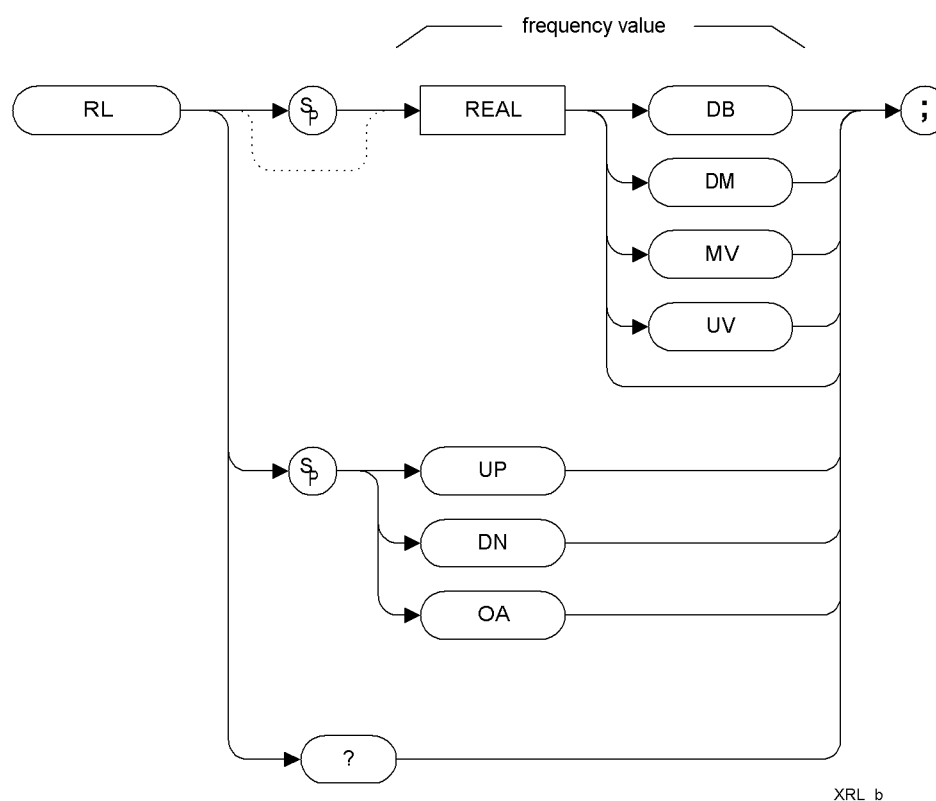

Description

Specifies the amplitude level of the top graticule line on the display. This represents the reference level.

CAUTION Signal levels above +30 dBm will damage the spectrum analyzer. For a helpful suggestion on this subject, see [Chapter 3](#), “Hints and Tips,” on [page 57](#).

NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE The Display Line is decoupled from the Reference Level. That is, if the display line is ON, changing the Reference Level does not change the


position of the Display Line, as would be the case when in SA mode.

For example, changing your Reference Level from -10 dB to 0.0 dB would change the Display Line from, for instance, -50 dB to -40 dB.

RMS Root Mean Square Value

Returns the root mean square value of the trace in measurement units.

Syntax

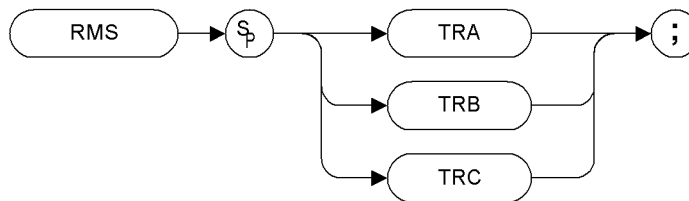

XRMS_b

Prerequisite Commands: TS when using trace data.

Description


Returns the RMS value of the trace in display units.

NOTE

TRA corresponds to Trace 1, TRB corresponds to Trace 2, and TRC corresponds to Trace 3.

ROFFSET Reference Level Offset

Syntax

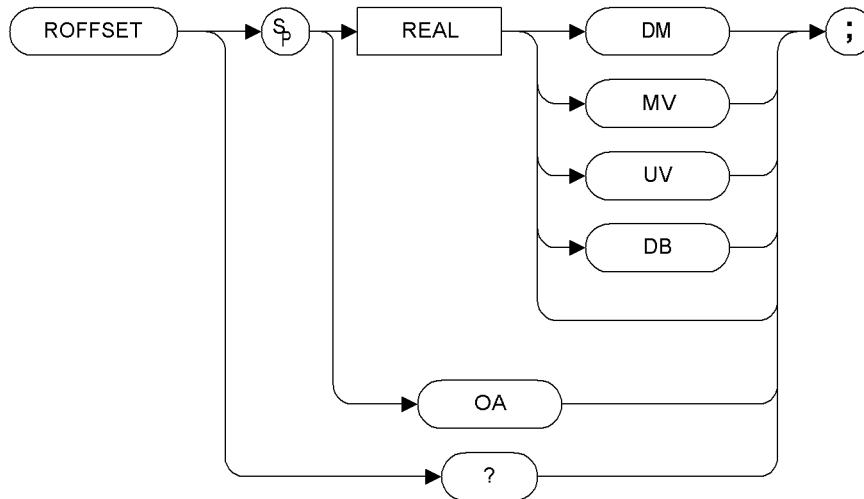

XROFFSET_b

Description

Offsets all amplitude readouts without affecting the trace.

Once activated, the ROFFSET command displays the amplitude offset on the left side of the screen.


Entering ROFFSET 0 or presetting the spectrum analyzer eliminates an amplitude offset.

NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE The functions of the ROFFSET command are identical to the KSZ command ([page 158](#)).

RQS Service Request Mask

Syntax

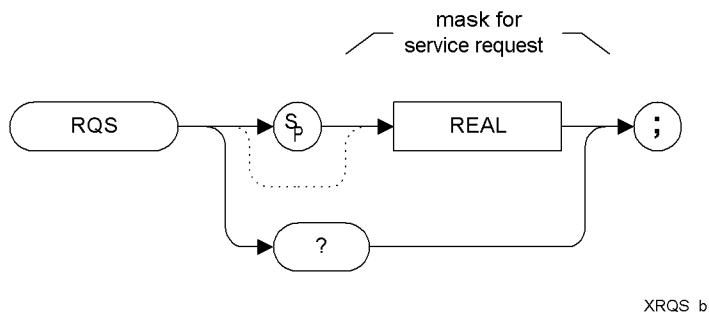

Description


Sets a bit mask for service requests.

NOTE

Some differences may be noticed in the value returned by the RQS query when compared with the value set. This is because Option 266 on ESA and PSA analyzers does not support the use of bit-1 of the status byte. Bit-1 of the status byte is always set to Off.

S1[one] Continuous Sweep

Syntax



XS1_b

Description


The S1 command sets the spectrum analyzer to continuous sweep mode. In the continuous sweep mode, the spectrum analyzer takes its next sweep as soon as possible after the current sweep (as long as the trigger conditions are met). A sweep may temporarily be interrupted by data entries made over the remote interface.

NOTE

The functions of the command S1 are identical to the CONTS command ([page 93](#)).

S2 [two] Single Sweep

Syntax



XS2_b

Description


The S2 command sets the analyzer to single sweep mode. Each subsequent time that the command S2 is sent, one sweep is started if the trigger conditions are met.

NOTE

The functions of the S2 command are similar to the SNGLS command ([page 230](#)).

SAVES Save State

Syntax



XSAVES_b

Description


Saves the current state of the spectrum analyzer in any of the registers one through six.

NOTE Registers 7, 8 and 9 had specific uses in the HP8566B and HP 8568B analyzers. HP 8566B/68B Code Compatibility does not use these registers, so they are available for the your own use.

NOTE The functions of the SAVES command are identical to the SV command ([page 237](#)).

SMOOTH Smooth Trace

Syntax

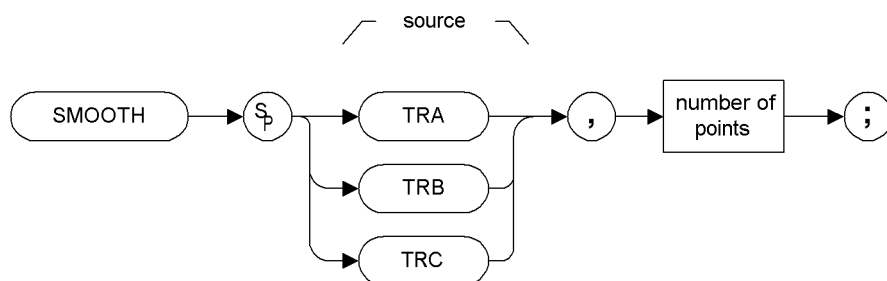

XSMOOTH_b

Prerequisite Commands: TS when using trace data.

Description

Smooths the trace according to the number of points specified for the running average.


Each point value is replaced with the average of the values (in measurement units) of the given number of points centered on it. Increasing the number of points increases smoothing at the cost of decreasing resolution. If the number of points is an even number, then the number of points is increased by one. If the number of points is larger than the size of SOURCE, then the size of SOURCE is used (unless size of SOURCE is even, in which case the size of SOURCE minus one is used). Smoothing decreases at the endpoints.

NOTE

Some differences may be noticed between the smoothed trace in HP8566B/68B analyzers and the smoothed trace using the same signal in ESA-E and PSA analyzers.

SNGLS Single Sweep

Syntax



X SNGLS_b

Description


Sets the spectrum analyzer to single-sweep mode. Each time TS (take sweep) is sent, one sweep taken as long as the trigger conditions are met.

NOTE

The functions of the SNGLS command are similar to the S2 command ([page 227](#)).

SP Frequency Span

Syntax

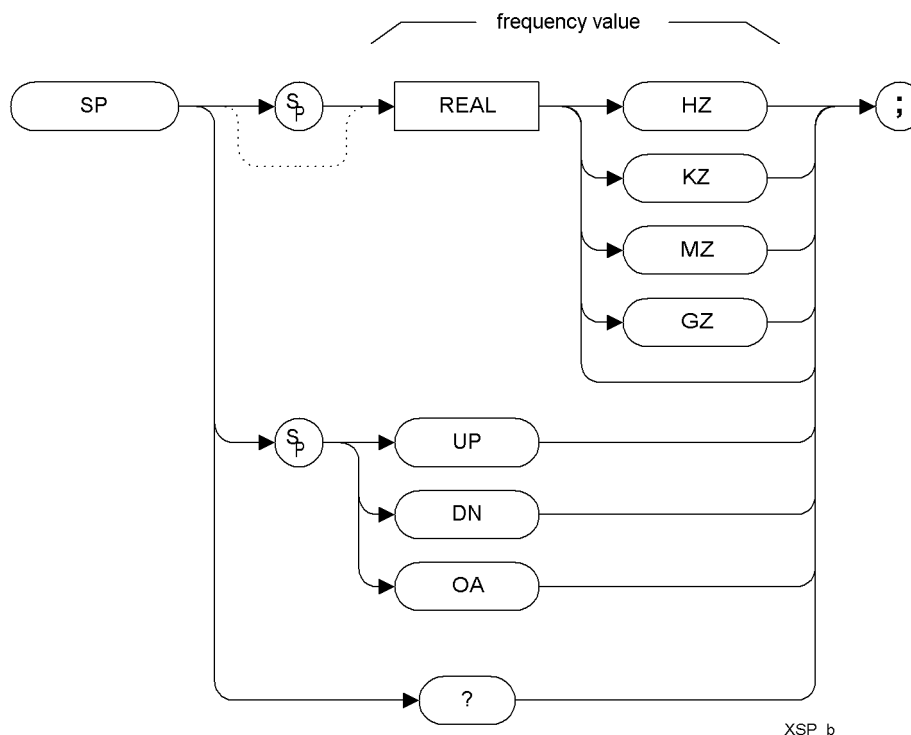

Step Increment: 1, 2, 5, 10 sequence (up to the stop frequency of the spectrum analyzer)

Description

Changes the total displayed frequency range symmetrically about the center frequency.

If resolution and video bandwidths are coupled to the span width, the bandwidths change with the span width to provide a predetermined level of resolution and noise averaging. Likewise, the sweep time changes to maintain a calibrated display, if coupled. All of these functions are normally coupled, unless RB (page 217), VB (page 254), or ST (page 235) have been executed.

NOTE


The OA option only returns the current value to the controller. It does not set the active function.

NOTE

HP 8566B/68B Code Compatibility does not mimic the exact coupling behavior of the HP8566B or HP8568B analyzers. Refer to your ESA - or PSA User's and Programmer's Reference Guide for the values used.

SRQ User-Defined SRQ

Syntax



XSRQ_b

Description


The SRQ command sends a service request to the controller when the SRQ operand fits the mask supplied with the RQS command.

NOTE

HP 8566B/68B Code Compatibility does not support the setting of bit 1 (units-key-pressed) of the status byte. Bit-1 of the status byte is always set to Off

SS Center Frequency Step Size

Syntax

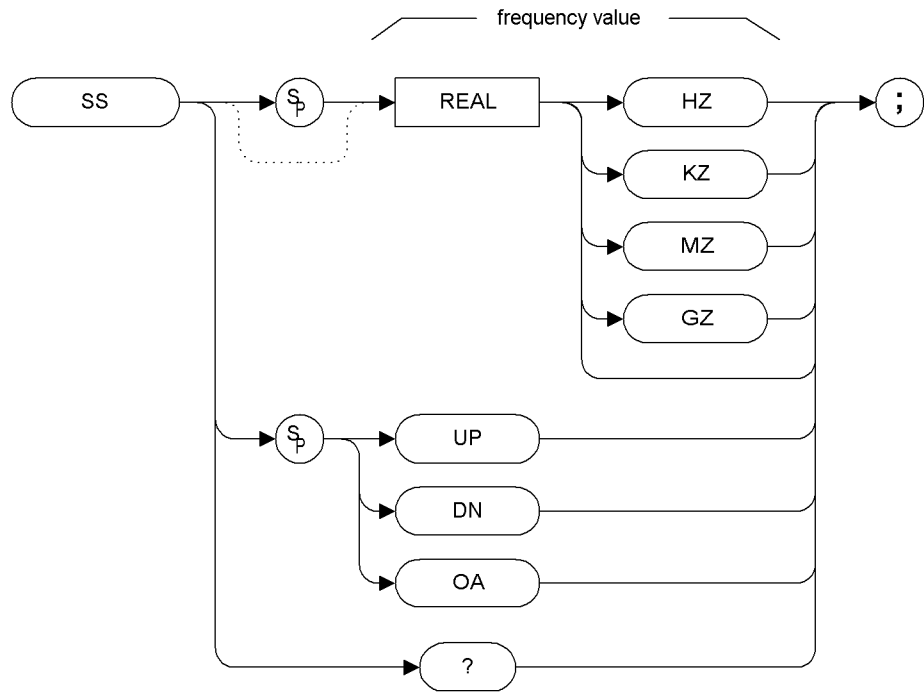

XSS_b

Description


Specifies center frequency step size.

NOTE

The OA option only returns the current value to the controller. It does not set the active function.

ST Sweep Time

Syntax

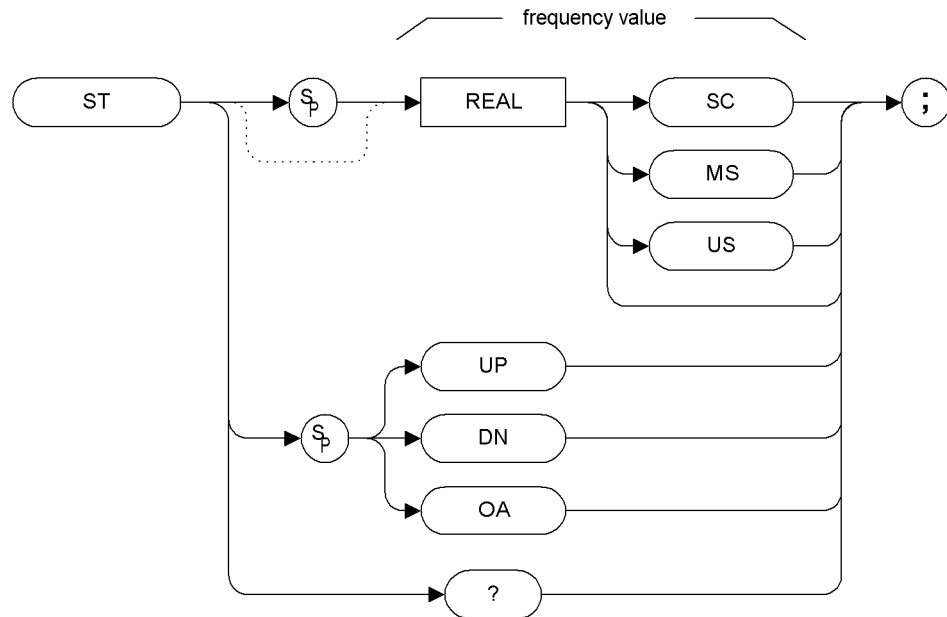

XST_b

Description


The ST command specifies the time in which the analyzer sweeps the displayed frequency or time span.

NOTE

The ST OA command and the ST? command both return the current value to the controller. However, the ST OA command does not set the active function to be Sweep Time.

STDEV Standard Deviation of Trace Amplitudes

Syntax

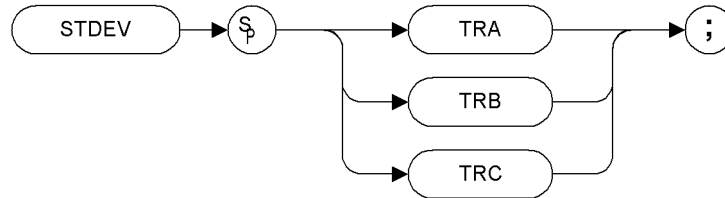

XSTDEV_b

Prerequisite Commands: TS when using trace data

NOTE


TRA corresponds to Trace 1, TRB corresponds to Trace 2, and TRC corresponds to Trace 3.

Description

Returns the standard deviation of the trace amplitude in display units.

SV Save State

Syntax



XSV_b

Description


Saves the current state of the spectrum analyzer in any of the registers one through six.

NOTE Registers 7, 8 and 9 had specific uses in the HP8566B and HP 8568B analyzers. HP 8566B/68B Code Compatibility does not use these registers, so they are available for the your own use.

NOTE The functions of the SV command are identical to the SAVES command ([page 228](#)).

T1 [one] Free Run Trigger

Syntax



XT1_b

Description


The T1 *[one]* command sets the analyzer sweep to free run trigger mode.

NOTE

The functions of the T1 *[one]* command are identical to the TM FREE command ([page 246](#)).

T2 [two] Line Trigger

Syntax



XT2_b

Description


The T2 [two] command sets the analyzer sweep to line trigger mode.

NOTE

The functions of the T2 [two] command are identical to the TM LINE command ([page 246](#)).

T3 [*three*] External Trigger

Syntax



XT3_b

Description


The T3 [*three*] command sets the analyzer sweep to external trigger mode.

NOTE

The functions of the T3 [*three*] command are identical to the TM EXT command ([page 246](#)).

T4 [four] Video Trigger

Syntax



XT4_b

Description


The T4 [four] command sets the analyzer sweep to video trigger mode.

NOTE

The functions of the T4 [four] command are identical to the TM VID command ([page 246](#)).

TA Trace A

Syntax



XTA_b


Description

Returns trace A amplitude values from the analyzer to the controller.

The display unit values are transferred in sequential order (from left to right) as seen on the screen. Display unit values can be transferred to the controller in any one of the four output formats as determined by the O1 [*one*] ([page 203](#)), O2 [*two*] ([page 204](#)), O3 [*three*] ([page 205](#)) and O4 [*four*] commands ([page 206](#)). The format of the returned data is also affected by the TDF (Trace Data Format) ([page 244](#)) command and, if TDF B (binary data format) has been selected, by the MDS command ([page 170](#)).

TB Trace B

Syntax



XTB_b


Description

Returns trace B amplitude values from the analyzer to the controller.

The display unit values are transferred in sequential order (from left to right) as seen on the screen. Display unit values can be transferred to the controller in any one of the four output formats as determined by the O1 *[one]* ([page 203](#)), O2 *[two]* ([page 204](#)), O3 *[three]* ([page 205](#)) and O4 *[four]* commands ([page 206](#)). The format of the returned data is also affected by the TDF (Trace Data Format) ([page 244](#)) command and, if TDF B (binary data format) has been selected, by the MDS command ([page 170](#)).

TDF Trace Data Format

Syntax

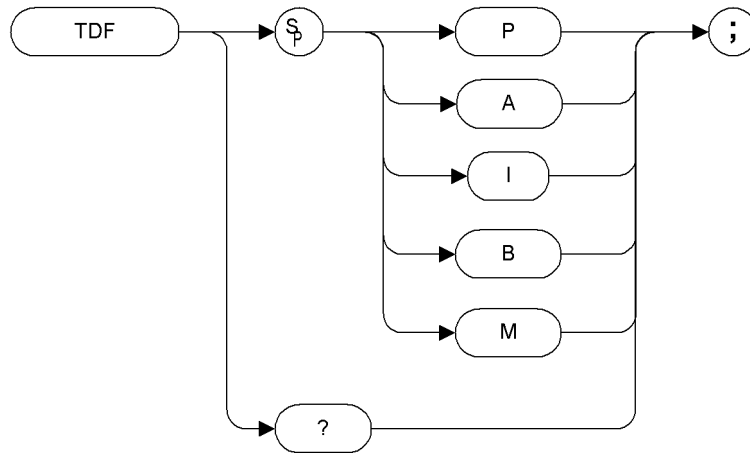

XTDF_b

Description


Formats trace information for return to the controller.

The different trace data formats are as follows:

- Specifying M enables the 01 format and returns values in display units, from 0 to 1001.
- Specifying P enables the 03 format and returns absolute measurement values, such as dBm or Hz.
- Specifying A returns data as an A-block data field. The MDS command determines whether data comprises one or two 8-bit bytes. (See MDS [\(page 170\)](#))
- Specifying I returns data as an I-block data field. The MDS command determines whether data comprises one or two 8-bit bytes. (See MDS [\(page 170\)](#))
- Specifying B enables the 02 or 04 format. The MDS command determines whether data comprises one or two 8-bit bytes

TH Threshold

Syntax

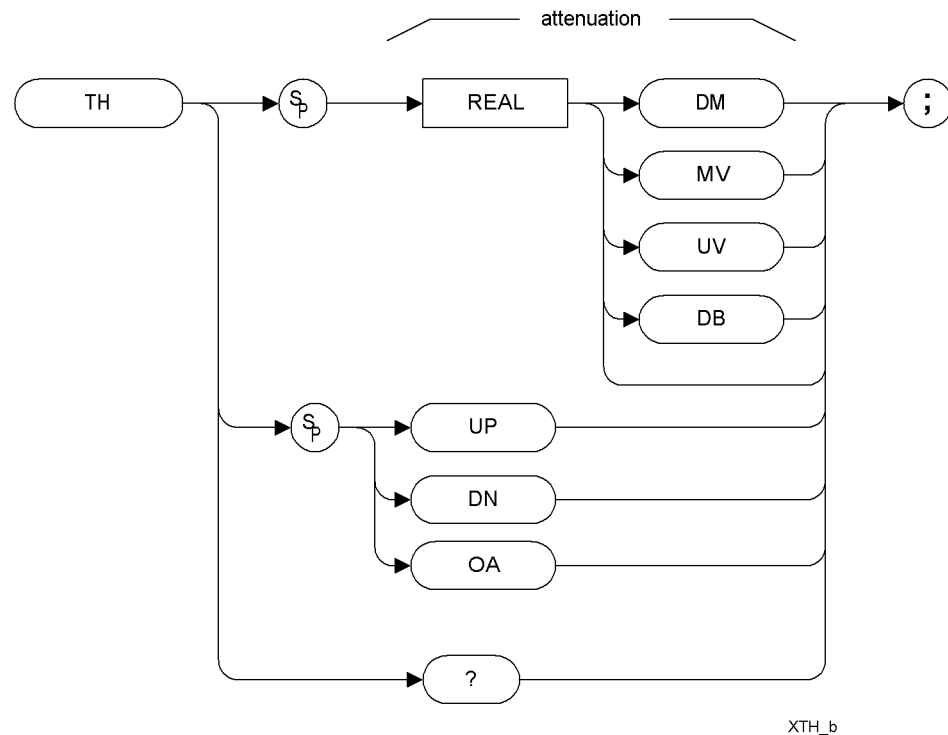

Description


The TH command blanks signal responses below the threshold level, similar to a base line clipper. The threshold level is nine major divisions below the reference level, unless otherwise specified. The UP and DN commands move the threshold 10 dB.

NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE The HP 8566B and HP 8568B both blank the display of everything below the threshold level, but this is not the case with ESA and PSA analyzers. Using the PEAKS (page 208) and MKPK (page 188) commands causes any values below the threshold level to be disregarded, even though the full trace will still be displayed.

TM Trigger Mode

Syntax

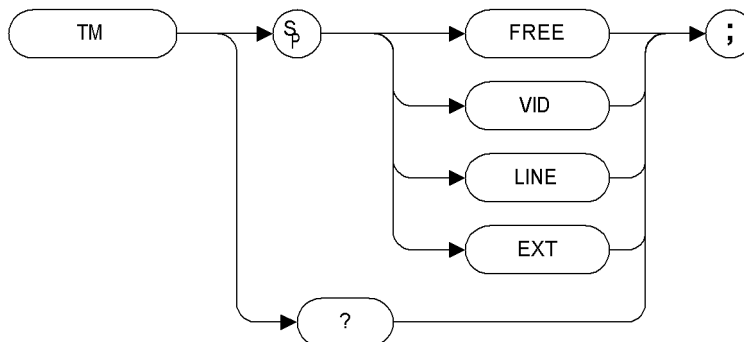

XTM_b

Description

Selects a trigger mode: free, line, video, or external.

NOTE

The functions of the TM command are identical to the T1 ([page 238](#)), T2 ([page 239](#)), T3 ([page 240](#)) and T4 ([page 241](#)) commands.

TRA Trace Data Input and Output

Syntax



XTRA_b

Description

The TRA command transfers Trace A amplitude values from the analyzer to the controller. The units are display units, and the format depends on the trace data format selected.

TRB Trace Data Input and Output

Syntax




XTRB_b

Description

The TRB command transfers Trace B amplitude values from the analyzer to the controller. The units are display units, and the format depends on the trace data format selected.

TRDSP Trace Display

Syntax

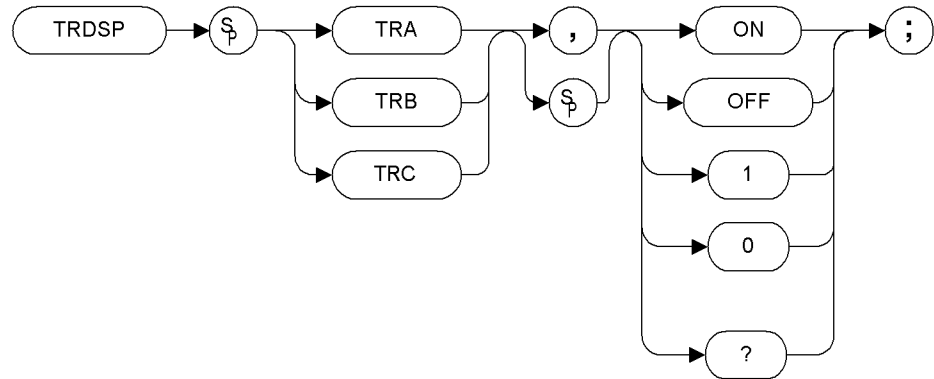


XTRDSP_b

Description

The TRDSP command turns the display of the specified trace on or off.

TRSTAT Trace State

Syntax




XTRSTAT_b

Description

The TRSTAT command returns trace states to the controller. Valid trace states are Clear-write, View, and Blank.

TS Take Sweep

Syntax



XTS_b


Description

Starts and completes one full sweep before the next command is executed.

A take sweep is required for each sweep in the single-sweep mode. TS prevents further input from the interface bus until the sweep is completed to allow synchronization with other instruments.

VAVG Video Average

Syntax

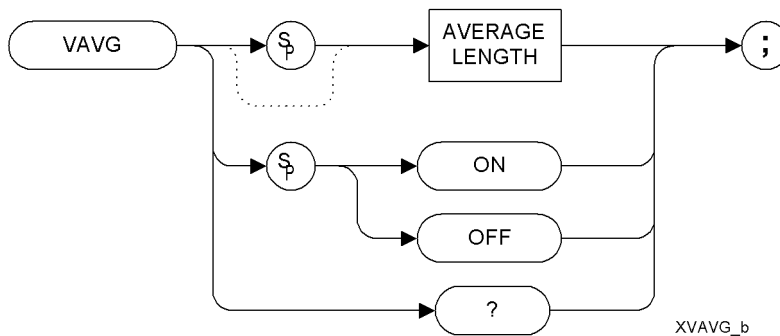

Description

Enables the video-averaging function, which averages trace points to smooth the displayed trace. When queried, the VAVG command returns the average length.

Before executing the VAVG command, select Trace A or Trace B as the active trace (CLRW command [page 92](#)) and blank the remaining trace.

NOTE The functions of the VAVG command are identical to the KSG command [page 136](#) and KSH command [page 138](#).

NOTE There are a few differences in the way video averaging works in HP 8566B/68B Code Compatibility compared to the original spectrum analyzers. See the table below for a summary of these differences.

Table 4-17 Video Averaging Behavioral Differences


Condition	Original HP 8566B and HP 8568B Spectrum Analyzers	HP 8566B/68B Code Compatibility Option
Change in center frequency or span	In single sweep mode, resets counter to zero and starts the averaging again	In single sweep mode, resets counter to zero and starts the averaging again

Table 4-17 Video Averaging Behavioral Differences

Condition	Original HP 8566B and HP 8568B Spectrum Analyzers	HP 8566B/68B Code Compatibility Option
Change in resolution bandwidth, video bandwidth, sweep time, reference level or attenuation	In single sweep mode, resets counter to zero and starts the averaging again	Continues the measurement without resetting the counter.
Change in average counter setting to a higher value	Continues counting from where the previous value left off	Resets the counter to zero and starts the measurement again
Change in average counter setting to a lower value	Updates the screen annotation with the lower averaging value	Resets the counter to zero and starts the measurement again
All conditions	Original trace is displayed in Trace C	Only displays the averaged trace. The averaged trace is displayed in Trace A
Averaging turned on	Sweep time remains unchanged	Sweep time changes due to the selection of the sample detector

VB Video Bandwidth

Syntax

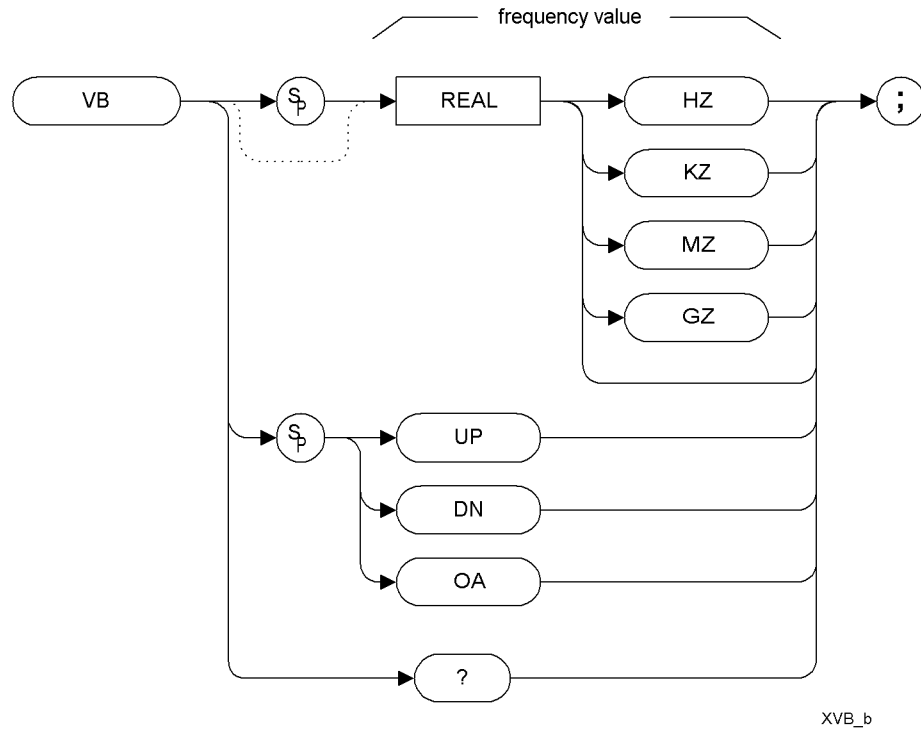

Description

Specifies the video bandwidth, which is a post-detection, low-pass filter.


NOTE The OA option only returns the current value to the controller. It does not set the active function.

NOTE Default values on the ESA and PSA analyzers may differ from the HP 8566B and HP 8568B analyzers. Refer to the relevant ESA and PSA User's and Programmer's Reference Guides for more details on the restrictions on the video bandwidth range.

When auto coupled, the video bandwidth is calculated as
Resolution Bandwidth x Video:Resolution Bandwidth Ratio

VBO Video Bandwidth Coupling Offset

Syntax

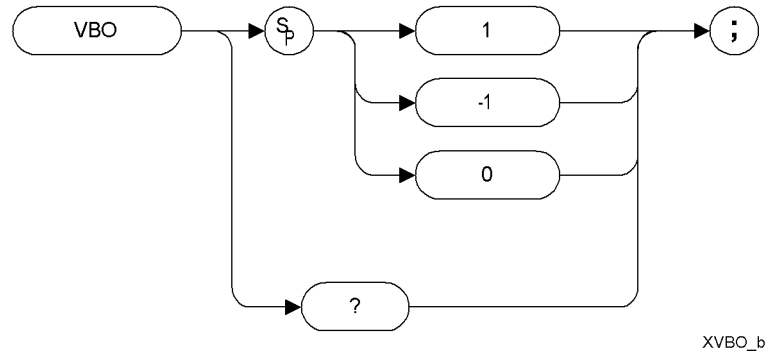


Description

The VBO command specifies the relationship between the video and resolution bandwidths which is maintained when these bandwidths are coupled. The bandwidths are usually coupled unless the RB command ([page 217](#)) or VB command ([page 254](#)) have been executed.

- When 0 is selected, the ratio remains fixed at 1. That is, the resolution bandwidth and the video bandwidth are always equal
- When 1 is selected, the video bandwidth is one step higher than the resolution bandwidth. That is, the video bandwidth:resolution bandwidth ratio is three.
- When -1 is selected, the video bandwidth is one step lower than the resolution bandwidth. That is, the video bandwidth:resolution bandwidth ratio is 0.3.

VIEW View Trace

Syntax

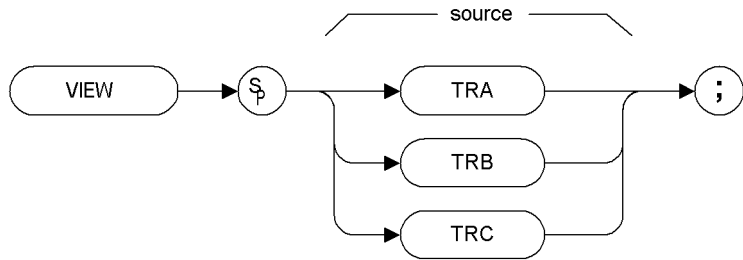

XVIEW_b

Description


Displays Trace A, trace B, or trace C, and stops taking new data into the viewed trace.

NOTE The functions of the VIEW command are identical to the A3 (page 67), B3 (page 79) and KSj (page 141) commands.

NOTE TRA corresponds to Trace 1, TRB corresponds to Trace 2, and TRC corresponds to Trace 3.

XCH Exchange

Syntax

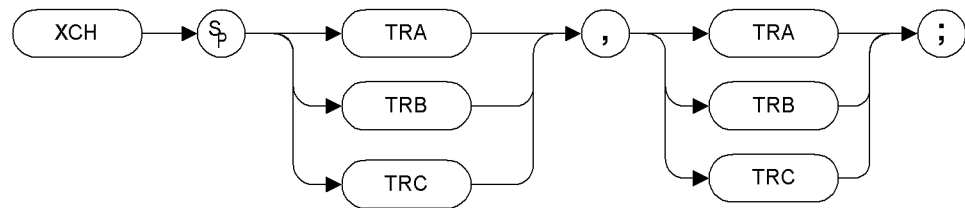

XXCH_b

Description

The XCH command exchanges the contents of the source and destination traces. The traces are analyzed and adjusted to fit the number of display points on the screen which is typically 1001 points.

NOTE

The functions of the XCH TRA,TRB command are identical to the AXB (page 76) and EX (page 109) commands.

The functions of the XCH TRB,TRC command are identical to the BXC (page 85) and KSi (page 140) commands.

SCPI Language Basics

This section is not intended to teach you everything about the SCPI (Standard Commands for Programmable Instruments) programming language. The SCPI Consortium or IEEE can provide that level of detailed information.

Topics covered in this chapter include:

- “Creating Valid Commands” on page 5-261
- “Command Keywords and Syntax” on page 5-260
- “Special Characters in Commands” on page 5-262
- “Parameters in Commands” on page 5-263
- “Putting Multiple Commands on the Same Line” on page 5-265

For more information refer to:

IEEE Standard 488.1-1987, *IEEE Standard Digital Interface for Programmable Instrumentation*. New York, NY, 1998.

IEEE Standard 488.2-1987, *IEEE Standard Codes, Formats, Protocols and Comment Commands for Use with ANSI/IEEE Std488.1-1987*. New York, NY, 1998.

Command Keywords and Syntax

A typical command is made up of keywords set off by colons. The keywords are followed by parameters that can be followed by optional units.

Example: `SENSe:FREQuency:STARt 1.5 MHZ`

The instrument does not distinguish between upper and lower case letters. In the documentation, upper case letters indicate the short form of the keyword. The lower case letters, indicate the long form of the keyword. Either form may be used in the command.

Example: `Sens:Freq:Star 1.5 mhz`

is the same as `SENSE:FREQ:start 1.5 MHz`

NOTE

The command `SENS:FREQU:STAR` is not valid because `FREQU` is neither the short, nor the long form of the command. Only the short and long forms of the keywords are allowed in valid commands.

Creating Valid Commands

Commands are not case sensitive and there are often many different ways of writing a particular command. These are examples of valid commands for a given command syntax:

Command Syntax	Sample Valid Commands
[SENSe:]BANDwidth[:RESolution] <freq>	<p>The following sample commands are all identical. They will all cause the same result.</p> <ul style="list-style-type: none"> • Sense:Band:Res 1700 • BANDWIDTH:RESOLUTION 1.7e3 • sens:band 1.7KHZ • SENS:band 1.7E3Hz • band 1.7kHz • bandwidth:RES 1.7e3Hz
MEASure:SPECTrum[n]?	<ul style="list-style-type: none"> • MEAS:SPEC? • Meas:spec? • meas:spec3? <p>The number 3 in the last meas example causes it to return different results then the commands above it. See the command description for more information.</p>
[:SENSe]:DETEctor[:FUNction] NEGative POSitive SAMPLE	<ul style="list-style-type: none"> • DET:FUNC neg • Detector:Func Pos
INITiate:CONTinuous ON OFF 1 0	<p>The sample commands below are identical.</p> <ul style="list-style-type: none"> • INIT:CONT ON • init:continuous 1

Special Characters in Commands

Special Character	Meaning	Example
	A vertical stroke between parameters indicates alternative choices. The effect of the command is different depending on which parameter is selected.	<p>Command: TRIGger:SOURCE EXternal INternal LINE</p> <p>The choices are external, internal, and line. Ex: TRIG:SOURCE INT</p> <p>is one possible command choice.</p>
	A vertical stroke between keywords indicates identical effects exist for both keywords. The command functions the same for either keyword. Only one of these keywords is used at a time.	<p>Command: SENSE:BANDwidth BWIdth:OFFSet</p> <p>Two identical commands are: Ex1: SENSE:BWIDTH:OFFSET Ex2: SENSE:BAND:OFFSET</p>
[]	keywords in square brackets are optional when composing the command. These implied keywords will be executed even if they are omitted.	<p>Command: [SENSE:]BANDwidth[:RESolution]:AUTO</p> <p>The following commands are all valid and have identical effects: Ex1: bandwidth:auto Ex2: band:resolution:auto Ex3: sense:bandwidth:auto</p>
< >	Angle brackets around a word, or words, indicates they are not to be used literally in the command. They represent the needed item.	<p>Command: SENS:FREQ <freq></p> <p>In this command example the word <freq> should be replaced by an actual frequency. Ex: SENS:FREQ 9.7MHz.</p>
{ }	Parameters in braces can optionally be used in the command either not at all, once, or several times.	<p>Command: MEASure:BW <freq>{,level}</p> <p>A valid command is: meas:BW 6 MHz, 3dB, 60dB</p>

Parameters in Commands

There are four basic types of parameters: booleans, keywords, variables and arbitrary block program data.

OFF | ON | 0 | 1

(Boolean)

This is a two state boolean-type parameter. The numeric value 0 is equivalent to OFF. Any numeric value other than 0 is equivalent to ON. The numeric values of 0 or 1 are commonly used in the command instead of OFF or ON. Queries of the parameter always return a numeric value of 0 or 1.

keyword

The keywords that are allowed for a particular command are defined in the command syntax description.

Units

Numeric variables may include units. The valid units for a command depend on the variable type being used. See the following variable descriptions. The indicated default units will be used if no units are sent. Units can follow the numerical value with, or without, a space.

Variable

A variable can be entered in exponential format as well as standard numeric format. The appropriate range of the variable and its optional units are defined in the command description.

The following keywords may also be used in commands, but not all commands allow keyword variables.

- DEFault - resets the parameter to its default value.
- UP - increments the parameter.
- DOWN - decrements the parameter.
- MINimum - sets the parameter to the smallest possible value.
- MAXimum - sets the parameter to the largest possible value.

The numeric value for the function's MINimum, MAXimum, or DEFault can be queried by adding the keyword to the command in its query form. The keyword must be entered following the question mark.

Example query: SENSE:FREQ:CENTER? MAX

Variable Parameters

<freq>	
<bandwidth>	Is a positive rational number followed by optional units. The default unit is Hz. Acceptable units include: HZ, KHZ, MHZ, GHZ.
<time>	
<seconds>	Is a rational number followed by optional units. The default units are seconds. Acceptable units include: S, MS, US.
<voltage>	Is a rational number followed by optional units. The default units are V. Acceptable units include: Volts, V, MV, UV.
<power>	
<ampl>	Is a rational number followed by optional units. The default units are dBm. Acceptable units include: DBM, DBMV, W.
<rel_power>	
<rel_ampl>	Is a positive rational number followed by optional units. The default units are dB. Acceptable units include: DB.
<angle>	
<degrees>	Is a rational number followed by optional units. The default units are degrees. Acceptable units include: DEG, RAD.
<integer>	An integer value has no units.
<real>	Is a floating point number, with no units.
<percent>	Is a rational number between 0 and 100, with no units.
<string>	Is a series of alpha numeric characters.
<bit_pattern>	Specifies a series of bits rather than a numeric value. The bit series is the binary representation of a numeric value. There are no units.

Bit patterns are most often specified as hexadecimal numbers, though octal, binary or decimal numbers may also be used. In the SCPI language these numbers are specified as:

- Hexadecimal, #Hdddd or #hdddd where 'd' represents a hexadecimal digit 0 to 9 and 'a' to 'f'. So #h14 can be used instead of the decimal number 20.
- Octal, #Odddddd or #oddddddd where 'd' represents an octal digit 0 to 7. So #o24 can be used instead of the decimal number 20.

- Binary, #Bdddddddddddddd or #bdddddddddddddd where 'd' represents a 1 or 0. So #b10100 can be used instead of the decimal number 20.

Block Program Data

Some parameters consist of a block of data. Block data There are a few standard types of block data. Arbitrary blocks of program data can also be used.

<trace> Is an array of rational numbers corresponding to displayed trace data. See FORMat:DATA for information about available data formats.

A SCPI command often refers to a block of current trace data with a variable name such as: Trace1, TRACE2, or trace3, depending on which trace is being accessed.

<arbitrary block data> Consists of a block of data bytes. The first information sent in the block is an ASCII header beginning with #. The block is terminated with a semi-colon. The header can be used to determine how many bytes are in the data block. There are no units.

For example, suppose the header is #512320.

- The first digit in the header (5) tells you how many additional digits/bytes there are in the header.
- The 12320 means 12 thousand, 3 hundred, 20 data bytes follow the header.
- Divide this number of bytes by your current data format (bytes/data point), either 8 (for real64), or 4 (for real32). For this example, if you're using real64 then there are 1540 points in the block.

Putting Multiple Commands on the Same Line

Multiple commands can be written on the same line, reducing your code space requirement. To do this:

- Commands must be separated with a semicolon (;).
- If the commands are in different subsystems, the key word for the new subsystem must be preceded by a colon (:).
- If the commands are in the same subsystem, the full hierarchy of the command key words need not be included. The second command can start at the same key word level as the command that was just executed.

SCPI Termination and Separator Syntax

A terminator must be provided when an instrument is controlled using RS-232. There are several issues to be understood about choosing the proper SCPI terminator and separator when this is the case. There is no current SCPI standard for RS-232. Although one intent of SCPI is to be interface independent, <END> is only defined for IEEE 488 operation. At the time of this writing, the RS-232 terminator issue was in the process of being addressed in IEEE standard 1174.

A semicolon (;) is not a SCPI terminator, it is a separator. The purpose of the separator is to queue multiple commands or queries in order to obtain multiple actions and/or responses. Make sure that you do not attempt to use the semicolon as a terminator when using RS-232 control.

All binary trace and response data is terminated with <NL><END>, as defined in Section 8.5 of IEEE Standard 488.2-1992, *IEEE Standard Codes, Formats, Protocols and Common Commands for Use with ANSI/IEEE Std 488.1-1987*. New York, NY, 1992.

The following are some examples of good and bad commands. The examples are created from a theoretical instrument with the simple set of commands indicated below:

```
[ :SENSe]
    :POWer
        [:RF]
            :ATTenuation 40dB

:TRIGger
    [:SEQuence]
    :EXTernal [1]
        :SLOPe
            POSitive

[:SENSe]
    :FREQuency
        :START
    :POWer
    [:RF]
        :MIXer
            :RANGe
                [:UPPer]
```

Bad Command	Good Command
PWR:ATT 40dB	POW:ATT 40dB
The short form of POWER is POW, not PWR.	
FREQ:STAR 30MHz;MIX:RANG -20dBm	FREQ:STAR 30MHz;POW:MIX:RANG -20dBm
The MIX:RANG command is in the same :SENSE subsystem as FREQ, but executing the FREQ command puts you back at the SENSE level. You must specify POW to get to the MIX:RANG command.	
FREQ:STAR 30MHz;POW:MIX RANG -20dBm	FREQ:STAR 30MHz;POW:MIX:RANG -20dBm
MIX and RANG require a colon to separate them.	
:POW:ATT 40dB;TRIG:FREQ:STAR 2.3GHz	:POW:ATT 40dB;:FREQ:STAR 2.3GHz
:FREQ:STAR is in the :SENSE subsystem, not the :TRIGGER subsystem.	
:POW:ATT?:FREQ:STAR?	:POW:ATT?;:FREQ:STAR?
:POW and FREQ are within the same :SENSE subsystem, but they are two separate commands, so they should be separated with a semicolon, not a colon.	
:POW:ATT -5dB;:FREQ:STAR 10MHz	:POW:ATT 5dB;:FREQ:STAR 10MHz
Attenuation cannot be a negative value.	

A

A minus B
 into A, 69, 87
 off, 86
 plus display line, 70
A plus B
 to A, 72, 131
A1, 35, 65
A2, 35, 66
A3, 35, 67
A4, 35, 68
ABS, 35
AC coupling, 120
AC/DC, 118, 120
activate marker, 175
ADD, 35
address
 display, 98
AMB, 35, 69
AMBPL, 35, 70
amplitude
 in dBm, 126
 in dBmV, 128
 in dBuv, 130
 in volts, 132
amplitude marker, 174
amplitude units, 63, 75
analyzer command, 63
angle parameter (variables), 264
ANNOT, 35, 71
annotation, 71
 off, 152
 on, 153, 154
 output trace, 207
APB, 35, 72
arbitrary block data, 265
AT, 17, 35, 73
attenuation, 73
 coupling, 88
AUNITS, 35, 75
average noise density at the
 marker
 MKNOISE, 184
AVG, 35
AXB, 76

B

B minus display line, 81
B1, 35, 77
B2, 36, 78
B3, 36, 79
B4, 36, 80
bandwidth
 percent of total power expressed
 as, 212
 video, 254
 video coupling offset, 255

bit_pattern parameter
 (variables), 264
BL, 36, 81
BLANK, 36, 82
blank
 trace C, 143
blank trace, 68, 80, 82
block data
 arbitrary, 265
 identifying block size, 265
 parsing output, 265
BML, 36, 83
boolean parameter (commands),
 263
BRD, 36
BTC, 36, 84
BWR, 36
BXC, 36, 85

C

C1, 36, 86
C2, 36, 87
CA, 36, 88
center frequency, 89
 marker, 176
center frequency marker, 105
center frequency step size, 234
CF, 17, 36, 89
changing the video bandwidth
 VB, 254
Chapter 6, "A Brief Introduction
 to the SCPI Language," on
 page 247, 28
character EOI, 63
characters, 62
clear average, 91
Clear Command Error Log, 16
clear write, 65, 77, 92
CLRAVG, 37, 91
CLRW, 37, 92
Cmd Error Log, 16
CNVLOSS, 37
Command Err, 15
command mnemonic, 62
command terminators, 62
commands
 boolean parameter, 263
 differences, 17, 26
 keyword parameter, 263
 multiple on a line, 265
 parameters, 263
 syntax, 260
 termination, IEEE, 266
 units parameter, 263
 valid commands, 261
 variable parameter, 263

 variable parameter keywords,
 263

COMPRESS, 37
CONCAT, 37
configure remote language, 15
continuous sweep, 93, 226
controlling the marker counter,
 180
CONTS, 37, 93
couple
 frequency step size, 95
 resolution bandwidth, 94
 sweep time, 96
 video bandwidth, 97
couple attenuation, 88
coupling
 AC/DC, 118, 120
 video bandwidth offset, 255
CR, 37, 94
CS, 37, 95
CT, 37, 96
CTA, 37
CTM, 37
current units, 63
CV, 37, 97

D

D1, 37
D2, 37
D3, 38
DA, 38, 98
data
 arbitrary blocks, 265
data byte, 63
data byte EOI, 63
data format
 display units, 203
 one 8-bit byte, 206
 real amplitude units, 205
 trace, 244
 two 8-bit bytes, 204
DC coupling, 118
DD, 38
degree parameter (variables), 264
deleting an
 application/personality, 4, 9
delimiter, 63
delta marker, 165, 177
delta marker step size, 106
DET, 17, 38, 99
detection
 negative peak, 133
 normal, 127
 positive peak, 129
 sample, 135
detection mode, 99
digit, 63

display address, 98
display line, 101
display line enable, 102
display line off, 159
display off, 137
display on, 139
display trace, 249
DISPOSE, 38
DIV, 38
DL, 17, 38, 101
DLE, 38, 102
documentation
 option, 31
DONE, 38, 103
dotted lines
 optional path, 62
DR, 38
DSPLY, 38
DT, 38
DW, 38

E

E1, 38, 104
E2, 38, 105
E3, 39, 106
E4, 39, 107
EE, 39
EK, 39
ELSE, 39
EM, 39
enable display line, 102
ENDIF, 39
end-of-sweep SRQ, 214
ENTER, 39
ERASE, 39
ERR, 39, 108
error codes
 list of, 108
errors
 clearing, 16
 displaying, 15
 storing, 16
EX, 39, 109
exchange traces, 257
 A and B, 76, 109
 B and C, 85, 140
excursion
 marker peak, 190
EXP, 39
external trigger, 156, 240
external trigger mode, 246
EXTMXR, 39

F

FA, 17, 39, 110
fast preselector peak, 114
FB, 17, 39, 111

FFT, 40
FFTKNL, 40
FOFFSET, 18, 40, 112
format
 display units, 203
 one 8-bit byte, 206
 real amplitude units, 205
 trace data, 244
 two 8-bit bytes, 204
FPKA, 18, 26, 40, 114
free run trigger, 238
free trigger mode, 246
frequency
 center, 89
 marker, 179
 marker readout, 191
 offset, 112
 start, 110
 stop, 111
frequency offset, 155
frequency parameter (variables),
 264
frequency span, 231
frequency step size
 coupling, 95
frequency units, 63
FS, 40, 115
FULBAND, 40
full span, 115
FUNCDEF, 40

G

getting started, 2
GR, 40
GRAT, 40, 117
graticule, 117
graticule off, 148
Graticule on, 150

H

hardware broken SRQ, 215
hardware requirements, 3
HD, 40
hints, 58
 compatibility, 58
 instrument presets, 59
 overloading, 59
 SCPI language, 59
 speed, 58
 sweep times, 58
 synchronization, 58, 59
 time out, 58
HNLOCK, 40
HNUNLK, 40
HP8566B remote language, 15
HP8568B remote language, 15

I

I1, 18, 26, 40, 118
I2, 18, 26, 41, 120
IB, 41
ID, 41, 122
identify, 122
IDSTAT, 41
IEEE command termination, 266
IF, 41
IFTKNL, 41
illegal command SRQ, 213
impedance units, 63
installation disk set, 4
installer troubleshooting, 8
installing measurement
 personalities, 4, 9
instrument preset, 123
INT, 41
integer variable (variables), 264
IP, 41, 123

K

KEYDEF, 41
KEYEXC, 41
keyword parameter (commands),
 263
KS#, 41
KS(, 41
KS), 41
KS,, 18, 42, 124
KS/, 42
KS<, 42
KS=, 19, 26, 42, 125
KS>, 42
KS|, 42
KS123, 42
KS125, 42
KS126, 42
KS127, 42
KS39, 42
KS43, 42
KS91, 42
KS92, 42
KS94, 43
KSA, 43, 126
KSA, 19, 43, 127
KSB, 43, 128
KSB, 43, 129
KSC, 43, 130
KSc, 43, 131
KSD, 43, 132
KSd, 43, 133
KSE, 19, 43, 134
KSe, 43, 135
KSF, 43
KSf, 43
KSG, 19, 43, 136

- KSg, 43, 137
- KSH, 43, 138
- KSh, 44, 139
- KSI, 44
- KSi, 44, 140
- KSJ, 44
- KSj, 44, 141
- KSK, 26, 44, 142
- KSk, 44, 143
- KSL, 44, 144
- KSl, 44, 145
- KSM, 19, 44, 146
- KSm, 44, 148
- KSN, 26, 44, 149
- KSn, 44, 150
- KSO, 44, 151
- KSo, 44, 152
- KSP, 44
- KSp, 45, 153, 154
- KSQ, 45
- KSq, 45
- KSR, 45
- KSr, 45
- KSS, 45
- KST, 19, 26, 45
- KSt, 45
- KSU, 45
- KSu, 45
- KSV, 19, 45, 155
- KV, 45
- KSW, 45
- KSw, 45
- KSX, 45
- KSx, 20, 46, 156
- KSY, 46
- KSy, 20, 46, 157
- KSZ, 20, 46, 158
- KSz, 46

- L**
- L0, 46, 159
- LB, 46
- LF, 26, 46
- LG, 20, 46, 161
- limitations, 2
- line trigger, 239
- line trigger mode, 246
- linear scale, 162
- LL, 46
- LN, 46, 162
- loading an
 - application/personality, 4, 9
- LOG, 46
- logarithmic scale, 161
- LOLIMOFF, 46
- lsb length, 63

- M**
- M1, 46, 163
- M2, 20, 46, 164
- M3, 20, 46, 165
- M4, 47
- MA, 47, 167
- marker
 - activate, 175
 - amplitude, 174
 - amplitude output, 167
 - center frequency, 105, 176
 - counter, 180
 - counter resolution, 181
 - delta, 165, 177
 - delta step size, 106
 - frequency, 179
 - frequency counter off, 168
 - frequency counter on, 169
 - frequency output, 172
 - minimum, 149, 182
 - next peak, 142
 - noise, 184
 - noise off, 144
 - noise on, 146
 - normal, 164, 183
 - off, 163, 186
 - peak, 104, 188
 - peak excursion, 190
 - position, 187
 - readout, 191
 - reference level, 107
 - span, 151
 - step size, 106, 195
 - to reference level, 193
 - to span, 194
 - trace, 196
 - track, 197
 - track off, 200
 - track on, 201
- marker amplitude, 174
- marker amplitude output, 167
- marker counter, 180
- marker counter resolution, 125, 181
- marker delta, 177
- marker frequency, 179
- marker frequency counter off, 168
- marker frequency counter on, 169
- marker frequency output, 172
- marker minimum, 149, 182
- marker noise, 184
- marker noise off, 144
- marker noise on, 146
- marker normal, 164, 183
- marker off, 163, 186
- marker peak, 188
- marker peak excursion, 190
- marker position, 187
- marker readout, 191
- marker readout in frequency, 191
- marker span, 151
- marker step size, 195
- marker to center frequency, 105, 176
- marker to next peak, 142
- marker to reference level, 107, 193
- marker to span, 194
- marker trace, 196
- marker track, 197
- marker track off, 200
- marker track on, 201
- maximum hold, 66, 78, 202
- MBRD, 47
- MBWR, 47
- MC0, 26, 47, 168
- MC1, 47, 169
- MDS, 47, 170
- MDU, 47
- MEAN, 47, 171
- measurement data size, 170
- MEM, 47
- memory
 - display address contents, 98
- MERGE, 47
- MF, 47, 172
- MIN, 47
- minimum marker, 149
- minimum trace value
 - MKMIN, 182
- minimum x position, 173
- MINPOS, 47, 173
- MIRROR, 47
- missing options, 9
- mixer level, 124, 198
- MKA, 21, 48, 174
- MKACT, 48, 175
- MKCF, 48, 176
- MKCONT, 48
- MKD, 21, 48, 177
- MKF, 48, 179
- MKFC, 26, 48, 180
- MKFCR, 21, 27, 48, 181
- MKMIN, 48, 182
- MKN, 21, 48, 183
- MKNOISE, 48, 184
- MKOFF, 48, 186
- MKP, 48, 187
- MKPAUSE, 48
- MKPK, 48, 188
- MKPX, 49, 190
- MKREAD, 21, 49, 191
- MKRL, 49, 193
- MKSP, 49, 194

- MKSS, 49, 195
- MKSTOP, 49
- MKTRACE, 49, 196
- MKTRACK, 49, 197
- MKTYPE, 49
- ML, 22, 49, 198
- MOD, 49
- MOV, 49
- moving the active marker
 - between traces
 - MKTRACE, 196
- MPY, 49
- MRD, 49
- MRDB, 49
- msb length, 63
- MT0, 50, 200
- MT1, 50, 201
- MWR, 50
- MWRB, 50
- MXM, 50
- MXMH, 50, 202

- N**
- negative peak detection, 133
- noise
 - marker off, 144
 - marker on, 146
 - signal to noise ratio, 184
- noise marker, 184
- noise measurement, 184
- normal detection, 127
- normal marker, 164, 183
- NSTART, 50
- NSTOP, 50
- number, 63

- O**
- O1, 50, 203
- O2, 50, 204
- O3, 50, 205
- O4, 50, 206
- offset
 - reference level, 158, 224
 - video bandwidth coupling, 255
- offset frequency, 112, 155
- OL, 50
- MC1, 26
- ONEOS, 50
- ONSWP, 50
- OP, 50
- options
 - loading/deleting, 4, 9
 - options not in instrument
 - memory, 9
- OT, 22, 51, 207
- OUTPUT, 51

- output data, identifying block
 - size, 265
- output termination, 63
- output trace annotations, 207

- P**
- PA, 51
- parameter (variables), 264
- parameters (commands), 263
- parameters, variable, 264
- PD, 51
- PDA, 51
- PDF, 51
- peak
 - fast preselector, 114
 - negative peak detection, 133
 - preselector, 211
 - peak excursion marker, 190
 - peak marker, 104, 188
 - peak position, 209
- PEAKS, 51, 208
- percent parameter (variables), 264
- personality options not in instrument, 9
- phase parameter (variables), 264
- PKPOS, 51, 209
- placing a marker
 - MKP, 187
- placing a marker on a signal peak
 - MKPK, 188
- PLOT, 22, 51, 210
- position
 - minimum x, 173
- positive peak detection, 129
- power
 - percent of total as bandwidth, 212
- power parameter (variables), 264
- powering on/off, 14
- PP, 22, 27, 51, 211
- PR, 51
- preselector peak, 114, 211
- preset instrument, 123
- programming
 - command parameters, 263
 - command syntax, 260
 - SCPI basics, 260
 - valid commands, 261
- PS, 51
- PU, 51
- PWRBW, 22, 52, 212

- R**
- R1, 52, 213
- R2, 52, 214
- R3, 52, 215
- R4, 23, 52, 216
- RB, 23, 52, 94, 217
- RC, 23, 52, 218
- RCLS, 23, 52
- recall last state, 218
- recommended path, 62
- reference level, 221
 - marker to reference level, 193
- reference level marker, 107
- reference level offset, 158, 224
- relative power parameter (variables), 264
- remote commands
 - differences, 17, 26
- remote language
 - configuring, 15
 - HP8566B, 15
 - HP8568B, 15
 - SCPI, 15, 28
- REPEAT, 52
- repeating syntax element, 62
- reserved words, 62
- resolution
 - marker counter, 125, 181
- resolution bandwidth, 217
 - coupling, 94
- results data, identifying block
 - size, 265
- returning or storing trace values, 247, 248
- returning trace data
 - changing the trace data format, 244
- REV, 23, 52, 220
- revision, 220
- RL, 23, 52, 221
- RMS, 52, 223
- ROFFSET, 23, 52, 224
- root mean square value, 223
- RQS, 23, 52, 225

- S**
- S1, 52, 226
- S2, 52, 227
- sample detection, 135
- SAVES, 53
- scale
 - linear, 162
 - logarithmic, 161
- SCPI language, 15, 28
 - basic info, 260
 - command parameters, 263
 - command syntax, 260
 - keyword parameters, 263
 - valid commands, 261
- secondary keywords, 62
- service request mask, 225

- set RF coupling to AC, 120
 - set RF coupling to DC, 118
 - setting the marker counter
 - resolution, 125, 181
 - setting the spectrum analyzer
 - trigger mode, 246
 - setting the threshold level, 245
 - setting the video bandwidth
 - VB, 254
 - shipment
 - verification list, 31
 - SIGDEL, 53
 - SIGID, 53
 - signal-to-noise ratio, 184
 - single sweep, 227, 230
 - SMOOTH, 23, 53, 229
 - smooth trace, 229
 - SNGLS, 53, 230
 - softkeys
 - Clear Command Error Log, 16
 - Cmd Error Log, 16
 - Command Err, 15
 - Config Remote Lang, 15
 - HP8566B, 15
 - HP8568B, 15
 - Language, 15
 - SCPI, 15
 - SP, 24, 53, 231
 - span, 231
 - frequency, 231
 - full, 115
 - marker, 151, 194
 - marker to span, 194
 - special, 62
 - numbers, 62
 - specified percent of power as bandwidth, 212
 - specifying the frequency of the marker
 - MKF, 179
 - SQR, 53
 - SRQ, 53, 233
 - end-of-sweep, 214
 - hardware broken, 215
 - illegal command, 213
 - units-key-pressed, 216
 - user-defined, 233
 - SS, 24, 53, 234
 - ST, 24, 53, 235
 - standard deviation of trace amplitudes, 236
 - start frequency, 110
 - state
 - recall, 218
 - trace, 250
 - STDEV, 53, 236
 - step size
 - center frequency, 234
 - marker, 195
 - marker step size, 195
 - stop frequency, 111
 - string parameter (variables), 264
 - SUB, 53
 - SUM, 53
 - SUMSQR, 53
 - SV, 53
 - SW, 53
 - sweep
 - continuous, 93, 226
 - single, 227, 230
 - take, 251
 - sweep time, 235
 - coupling, 96
 - switching on/off, 14
 - syntax elements, 62
 - syntax for commands, 62
- ## T
- T0, 54
 - T1, 54, 238
 - T2, 54, 239
 - T3, 54, 240
 - T4, 54, 241
 - TA, 54
 - take sweep, 251
 - taking a measurement sweep, 251
 - TB, 54
 - TDF, 54, 244
 - TEXT, 54
 - TH, 24, 54, 245
 - THE, 54
 - THEN, 54
 - threshold, 245
 - time parameter (variables), 264
 - time units, 63
 - tips, 58
 - compatibility, 58
 - instrument presets, 59
 - overloading, 59
 - SCPI language, 59
 - speed, 58
 - sweep times, 58
 - synchronization, 58, 59
 - time out, 58
 - title mode, 134
 - TM, 54, 246
 - TRA, 247
 - trace
 - blank, 68, 82
 - display, 249
 - exchange, 257
 - output annotations, 207
 - returning values, 247, 248
 - smooth, 229
 - standard deviation of amplitudes, 236
 - state, 250
 - storing values, 247, 248
 - view, 67
 - trace B minus display line, 83
 - trace data format, 244, 265
 - trace marker, 196
 - trace mean, 171
 - track marker, 197
 - tracking the signal
 - MKTRACK, 197
 - transfer traces
 - B to C, 84, 145
 - TRB, 248
 - TRDEF, 54
 - TRDSP, 54, 249
 - TRGRPH, 54
 - trigger
 - external, 156, 240
 - free run, 238
 - line, 239
 - mode, 246
 - video, 157, 241
 - trigger mode, 246
 - triggering the spectrum analyzer, 246
 - TRMATH, 54
 - troubleshooting
 - installer, 8
 - TRPST, 55
 - TRSTAT, 55, 250
 - TS, 55, 251
 - turning off markers
 - MKOFF, 186
 - TV trigger mode, 246
- ## U
- uninstalling measurement personalities, 4, 9
 - units, 63
 - units parameter (commands), 263
 - units-key-pressed SRQ, 216
 - UNTIL, 55
 - UR, 55
 - URL
 - firmware, 31
 - spectrum analyzer updates, 31
 - user-defined SRQ, 233
 - USTATE, 55
- ## V
- VARDEF, 55
 - variable parameter (commands), 263
 - variables
 - angle parameter, 264

Index

- bit_data parameter, [264](#)
- degree parameter, [264](#)
- frequency parameter, [264](#)
- integer parameter, [264](#)
- parameters, [264](#)
- percent parameter, [264](#)
- phase parameter, [264](#)
- power parameter, [264](#)
- relative power parameter, [264](#)
- string parameter, [264](#)
- time parameter, [264](#)
- voltage parameter, [264](#)
- VARIANCE, [55](#)
- VAVG, [25](#), [55](#), [252](#)
- VB, [24](#), [55](#), [254](#)
- VBO, [25](#), [55](#), [255](#)
- video average, [252](#)
- video averaging
 - off, [138](#)
 - on, [136](#)
- video bandwidth, [254](#)
 - coupling, [97](#)
- video bandwidth coupling offset, [255](#)
- video trigger, [157](#), [241](#)
- video trigger mode, [246](#)
- VIEW, [55](#), [256](#)
- view
 - trace C, [141](#)
- view trace, [67](#), [79](#)
- viewing a trace
 - VIEW, [256](#)
- voltage parameter (variables), [264](#)

W

- website
 - firmware updates, [31](#)

X

- XCH, [55](#), [257](#)