

Agilent Technologies
E444xA Option HN8

User's and Service Guide

Agilent Technologies E444xA Option HN8

User's and Service Guide

Use this manual with the following documents:

**PSA Series Spectrum Analyzer User's
and Programmer's Reference Guide**



Manufacturing Part Number: E4440-90547

Printed in USA

May 2005

© Copyright 2003-2005 Agilent Technologies

Warranty Statement

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED “AS IS,” AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AGILENT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. AGILENT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD AGILENT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

Safety Notes

The following safety notes are used throughout this manual. Familiarize yourself with each of the notes and its meaning before operating this instrument. All pertinent safety notes for using this product can be found in the standard manual.

WARNING	Warning denotes a hazard. It calls attention to a procedure which, if not correctly performed or adhered to, could result in injury or loss of life. Do not proceed beyond a warning note until the indicated conditions are fully understood and met.
----------------	---

CAUTION	Caution denotes a hazard. It calls attention to a procedure that, if not correctly performed or adhered to, could result in damage to or destruction of the instrument. Do not proceed beyond a caution sign until the indicated conditions are fully understood and met.
----------------	---

Certification

Agilent Technologies, Inc. certifies that this product met its published specifications at the time of shipment from the factory. Agilent Technologies, Inc. further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology, to the extent allowed by the Institute's calibration facility, and to the calibration facilities of other International Standards Organization members.

Definitions

- *Specifications* describe the performance of parameters covered by the product warranty (temperature - 0 to 55 °C, unless otherwise noted.)
- *Typical* describes additional product performance information that is not covered by the product warranty. It is performance beyond specification that 80% of the units exhibit with a 95% confidence level over the temperature range 20 to 30 °C. Typical performance does not include measurement uncertainty.
- *Nominal* values indicate expected performance, or describe product performance that is useful in the application of the product, but is not covered by the product warranty.

Where to Find the Latest Information

Documentation is updated periodically. For the latest information about Agilent Technologies PSA Analyzers, including firmware upgrades and application information, please visit the following Internet URL:

<http://www.agilent.com/find/psa>

DFARS/Restricted Rights Notice

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Contents

1. E444xA Option HN8	
Description	4
Nominal Characteristics	6
2. User Interface	
GPIB Control	8
Command Interface for the E4440A, E4443A, and E4445A	8
Command Interface for the E4446A and E4448A	10
Block Diagram	12
Test Verifications	14
HN8 Conversion Loss Test	14
Equipment	14
Nominal Characteristics	14
Test Procedures	16
Measuring the Source Output Amplitude	17
Measure the 321.4 MHz IF Out Amplitude	17
3. Service, Safety and Regulatory Information	
Service	22
Introduction	22
Cleaning Instructions	22
Shipping Instructions	22
Before Applying Power	22
Replaceable Parts for the E444xA	23
Safety, and Regulatory Information	25
Warnings	25
Cautions	26
Instrument Markings	27
Contacting Agilent	28

Contents

1 E444xA Option HN8

Description

The Agilent E444xA with Option HN8 provides a wide bandwidth IF Output signal to the rear panel for RF Input signals above 3.050 GHz and less than 26.5 GHz¹. The center frequency is 321.4 MHz with a bandwidth of at least 250 MHz.

E444xA Option HN8 may be used to provide wideband unpreselected IF signals to external digitizing hardware that is supported by the Agilent 89601A Vector Signal Analyzer software, such as the Agilent Infinium series oscilloscopes. This capability provides a convenient RF down converter for use in wideband vector signal analysis.

The wideband IF performance of Option HN8 is provided by replacing the PSA's standard front-end mixer with an unpreselected mixer. The new mixer can be switched in to and out of the RF path so that the PSA can be returned to normal operation and achieve its published (non Option HN8) specifications. Use of this mixer will result in no front end preselection, therefore; mixer responses at unintentional local oscillator harmonics and for undesired mixer image signals will be present in the IF Output signal. The user will need to remove the undesirable mixer responses through the use of input signal filtering.

E444xA Option HN8 wideband IF Output is provided on the same IF Output connector as that used by the standard PSA 321.4 MHz IF Output. This connector is located on the PSA's rear panel and is an SMA female connector.

CAUTION

The RF to IF conversion gain of Option HN8 is described in [Table 1-1, "PSA Option HN8 Characteristics," on page 6](#). The input signal at the RF Input in excess of -10 dBm with 0 dB input attenuation may result in IF gain compression.

The wideband mode can only be invoked after the PSA has been placed in zero-span mode. In addition, it is recommended that single sweep mode be selected. The Option HN8 can only be invoked for PSA center frequencies between 3.0 GHz and 26.5 GHz².

-
1. The upper frequency limit is model number dependent.
 2. The upper frequency limit is model number dependent.

CAUTION

Prior to invoking the Option HN8, the user should ensure the Auto Align routine on the PSA is turned Off. Failure to turn Off the Auto Align routine will result in several calibration error messages and the calibration files will be corrupted.

To remove the calibration errors, switch the PSA to the PRESelected mode and select:

[System] > Alignment > Align All Now.

Once the Auto Alignment routine is finished, disable the Auto Align routine before returning to UNPReselect mode.

Cycle power on the PSA instrument if the GPIB interface does not satisfy the instrument reset.

Nominal Characteristics

All specifications apply from 20 to 30 °C unless otherwise noted. The analyzer will meet its specifications after two hours of storage within the operating temperature range, 30 minutes after the analyzer is turned On and after AUTO ALIGN (ALL) has been run.

CAUTION The input signal at the RF Input in excess of –10 dBm with 0 dB input attenuation may result in IF gain compression.

Table 1-1 PSA Option HN8^a Characteristics

Band	Bandwidth	Conversion Loss ^b
Band One 2.85 to 6.6 GHz	≥ 250 MHz	2 dB (± 2 dB)
Band Two 6.2 to 13.2 GHz	≥ 250 MHz	2 dB (± 3 dB)
Band Three 12.8 to 19.2 GHz	≥ 250 MHz	7 dB (± 6 dB)
Band Four 18.7 to 26.5 GHz (E4440A)	≥ 250 MHz	10 dB (± 6 dB)
Band Four 18.7 to 26.8 GHz (E4446/48A)	≥ 250 MHz	10 dB (± 6 dB)

- a. The Unpreselected mode will only operate from 3 GHz to 26.5 GHz on the E4446A and E4448A. An Unpreselected path is not available above 26.5 GHz.
- b. Conversion Loss is degraded by a nominal 3 dB in the PSA E4446A and the E4448A models with Option HN8 installed.

NOTE If your instrument is equipped with other IF Output options (e.g. H70 or HB2) the Option HN8 IF Output Bandwidth specification will replace the other IF Output specification.

NOTE Conversion loss is the measurement from the front panel to the 321.4 MHz IF Output, with an internal attenuation setting of 0 dB. The 321.4 MHz IF Output is located in the RF path at a point where frequency response corrections are not applied. If your instrument is equipped with any IF Output option (e.g., H70 or HB2) the signal gain will be degraded by a nominal 8 dB.

2 **User Interface**

GPIB Control

The Option HN8 provides a Standard Commands for Programmable Instruments (SCPI) compliant command set, as described in the *PSA Series Spectrum Analyzers User's and Programmer's Reference Guide*, to change the PSA's mode from normal to wideband mode (UNPReselect). This mode change can only be invoked when the PSA is in the zero-span mode. Once in wideband mode the PSA's center frequency, reference level and input attenuator may be programmed as desired, within normal limits of the PSA.

Option HN8 is controllable using SPCI commands via GPIB or LAN interfaces. No front panel user keys are provided to control mode changes from normal to wideband modes. Use the following commands to control Option HN8.

Command Interface for the E4440A, E4443A, and E4445A

Command Interface with FW Rev. A.04.07

To turn on the UNPReselect mode type:¹

INPut: MIXer: TYPE UNPReselect, x (where $x = 0,1,2,3,4$)

To turn Off the UNPReselect mode type:¹

INPut: MIXer: TYPE PRESelected, x (where $x = 0,1,2,3,4$)

To run a query, type: **INput : MIXer : TYPE?**

Command Interface Example with FW Rev. Greater than A.04.07

To turn on the UNPReselect mode type:¹

[:SENSe]:POWer[:RF]:PRESelector UNPReselect, x (where $x = 0,1,2,3,4$)

To turn Off the UNPReselect mode type:¹

[:SENSe]:POWer[:RF]:PRESelector PRESelected, x (where $x = 0,1,2,3,4$)

To run a query, type: **[:SENSe]:POWer[:RF]:PRESelector?**

1. When this command is entered via the GPIB, the front panel display will show the following message in the lower portion of the LCD window. This is not an error. This message is only cleared with a power cycle of the instrument.

Diagnostic override of Firmware Control, :DIAGnostic:LATCh

NOTE The PSA only functions as a downconverter while operating the Option HN8 in UNPReselect mode.

NOTE Prior to using the Option HN8 in the UNPReselect mode, turn Off the Auto Align routine on the PSA by selecting the following front panel keys:

[System] > Alignments > Auto Align > OFF

or use the GPIB interface **:CALibration:AUTO OFF** to turn Off the Auto Align routine.

CAUTION If the Auto Align routine on the PSA is not turned Off while using the Option HN8, several error messages related to calibration will occur and the calibration files will be corrupted. To remove the calibration errors switch the PSA back to the PRESelected mode and select:

[System] > Alignment > Align All Now

Once the Auto Alignment routine is finished, disable the Auto Align routine before returning to UNPReselect mode. Cycle the power on the PSA instrument if the GPIB interface does not satisfy the instrument reset.

NOTE While in UNPReselect mode the amplitude measurement information will not be present on the front panel LCD and via GPIB command because the Option HN8 signal path does not continue through the normal spectrum analyzer signal path.

The following is a simple example of how the Option HN8 may be set up to run, as well as verify the performance:

The frequency of interest occurs at 12.7 GHz, which corresponds to Band 2 ($x=2$).

The following sequence of commands sets up the PSA to operate in the UNPReselect Mode (assuming firmware is greater than A.04.07.) Refer to the User's and Programmer's Reference for further study.

```
:CALibration:AUTO OFF  
[:SENSe]:FREQuency:CENTer 12.7 GHZ  
[:SENSe]:FREQuency:SPAN 0 HZ  
:INITiate:CONTinuous OFF  
[:SENSe]:POWer[:RF]:PRESelector: UNPReselect,2  
:INITiate[:IMMEDIATE]
```

The instrument is now in the UNPReselect mode with a center frequency of 12.7 GHz and an IF Output of 321.4 MHz.

To return to normal operation, enter the following commands:

[[:SENSe]:POWer[:RF]:PRESelector PRESelected, 0

(While the band number does not have any significance when returning to preselected mode, it is required for the PRESelect command. The number 0 is generally used).

Command Interface for the E4446A and E4448A

Command Interface with FW Rev. A.05.06

To turn On the UNPReselect mode:¹

[[:SENSe]:POWer[:RF]:PRESelector UNPReselect, *x* (where *x* = 0,1,2,3,4)

To turn Off the UNPReselect mode type:¹

[[:SENSe]:POWer[:RF]:PRESelector UNPReselect,0

[[:SENSe]:POWer[:RF]:PRESelector PRESelected,0

To run a query: **INput : MIXer : TYPE?**

Command Interface Example with FW Rev. A.05.06 or greater

To turn on the UNPReselect mode:¹

[[:SENSe]:POWer[:RF]:PRESelector UNPReselect, *x* (where *x* = 0,1,2,3,4)

To turn Off the UNPReselect mode:¹

[[:SENSe]:POWer[:RF]:PRESelector PRESelected, *x* (where *x* = 0,1,2,3,4)

To run a query: **[[:SENSe]:POWer[:RF]:PRESelector?**

NOTE

The PSA only functions as a downconverter while operating the Option HN8 in UNPReselect mode.

1. When this command is entered via the GPIB, the front panel display will show the following message in the lower portion of the LCD window. This is not an error. This message is only cleared with a power cycle of the instrument.

Diagnostic override of Firmware Control, :DIAGnostic:LATCh

NOTE Prior to using the Option HN8 in the UNPReselect mode, turn Off the Auto Align routine on the PSA by selecting the following front panel keys:

[System] > Alignments > Auto Align > OFF

or use the GPIB interface **:CALibration:AUTO OFF** to turn Off the Auto Align routine.

CAUTION If the Auto Align routine on the PSA is not turned Off while using the Option HN8, several error messages related to calibration will occur, and the calibration files will be corrupted. To remove the calibration errors, switch the PSA back to the PRESelected mode and select:

[System] > Alignment > Align All Now

Once the Auto Alignment routine is finished, disable the Auto Align routine before returning to UNPReselect mode. Cycle power on the PSA instrument if the GPIB interface does not satisfy the instrument reset.

NOTE While in UNPReselect mode the amplitude measurement information will not be present on the front panel LCD and via GPIB command because the option HN8 signal path does not continue through the normal spectrum analyzer signal path.

The following is a simple example of how the Option HN8 may be set up to run, as well as verify the performance:

The frequency of interest occurs at 12.7 GHz, which corresponds to Band 2 ($x=2$).

The following sequence of commands sets up the PSA to operate in the UNPReselect Mode (assuming firmware is A.05.07 or greater.) Refer to the User's and Programmer's Reference for further study.

```
:CALibration:AUTO OFF
[:SENSe]:FREQuency:CENTer 12.7 GHZ
[:SENSe]:FREQuency:SPAN 0 HZ
:INITiate:CONTinuous OFF
[:SENSe]:POWer[:RF]:PRESelector: UNPReselect,2
:INITiate[:IMMEDIATE]
```

The instrument is now in the UNPReselect mode with a center frequency of 12.7 GHz, with an IF output of 321.4 MHz.

To return to normal operation, enter the following command:

```
[:SENSe]:POWer[:RF]:PRESelector PRESelected, 0
```

(While the band number does not have any significance when returning to preselected mode, it is required for the PRESelect command. The number 0 is generally used.)

Block Diagram

Figure 2-1 Block Diagram of PSA Models E4440/43/45A with Option HN8

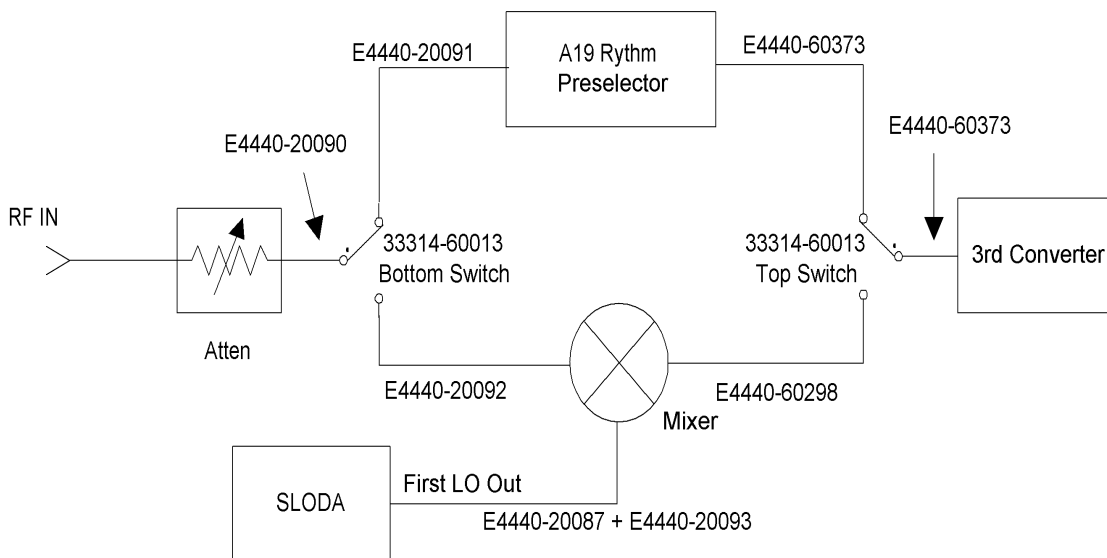


Figure 2-2 Block Diagram of PSA Models E4446/48A with Option HN8


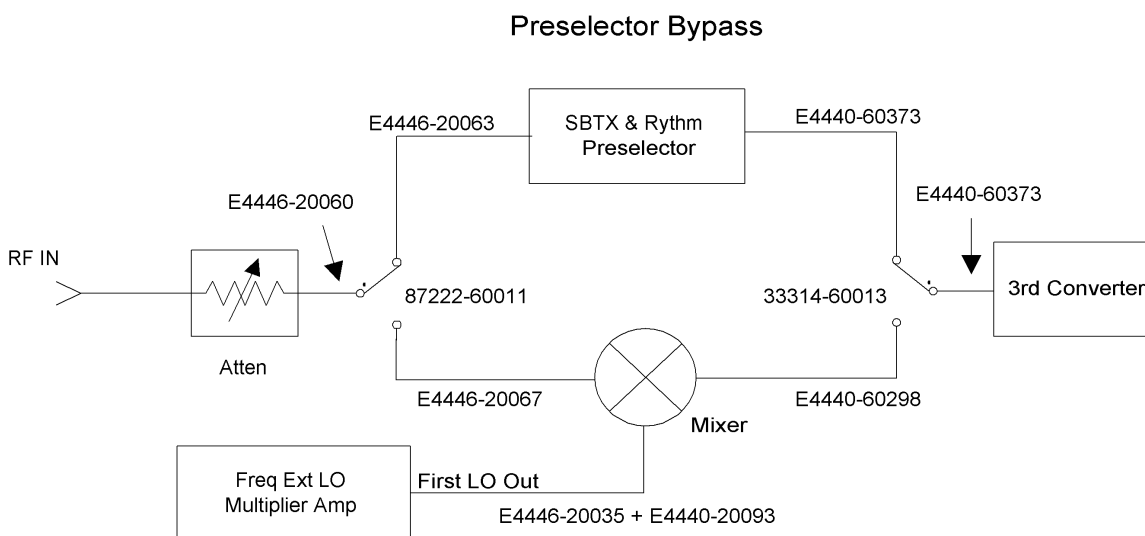


Figure 2-3 Wire Harness for PSA Models with Option HN8

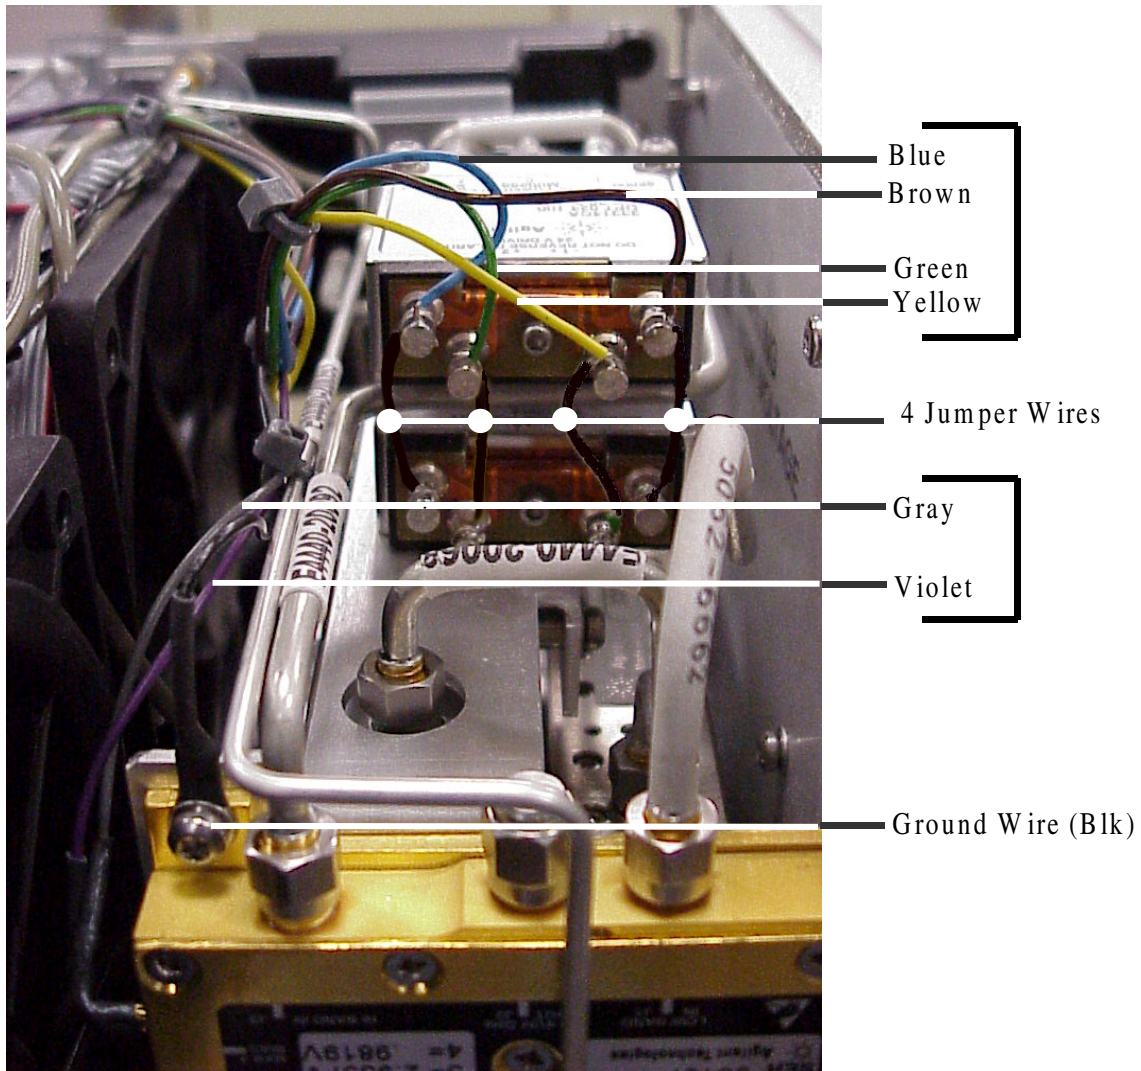

While the E4446A and E4448A use only the upper RF switch of the two RF switches shown in [Figure 2-3](#), the wiring harness is connected to the same pins in the same manner. The lower RF switch is replaced using a 50 GHz RF switch.

Test Verifications

HN8 Conversion Loss Test

A -15 dBm signal is applied to the analyzer input connector at several frequencies. At each frequency the signal level at the rear panel 321.4 MHz IF Output connector is measured to determine the conversion loss or gain from the input connector to the 321.4 MHz IF Output.

Equipment

Table , “Equipment Required,” on page 14 below lists the necessary equipment to verify the Conversion Loss for the Option HN8 in the PSA.

Table 2-1

Equipment Required

Equipment	Recommended Models
Signal Source \geq 26.5 GHz	83630B
Spectrum Analyzer \geq 26.5 GHz	856xEC Series
Cables	
APC 3.5 (m)(m)	8120-4921
SMA	5064-5458
Adapters	
Adapter, 3.5(f) to 3.5(f)	83059B
Adapter, Type N (m) to APC 3.5 (f) (2 required)	1250-1744

Nominal Characteristics

All specifications apply over 20 °C to 30 °C unless otherwise noted. The analyzer will meet its specifications after two hours of storage within the operating temperature range, 30 minutes after the analyzer is turned on, and after AUTO ALIGN (ALL) has been run. The user should be cautioned that the input signal at the RF input in excess of -10 dBm with 0 dB input attenuation may result in IF gain compression.

Table 2-2 PSA Option HN8 Characteristics

Band	Bandwidth	Conversion Loss¹
Band One 2.85 - 6.6 GHz	≥ 250 MHz	2 dB (± 2 dB)
Band Two 6.2 - 13.2 GHz	≥ 250 MHz	2 dB (± 3 dB)
Band Three 12.8 - 19.2 GHz	≥ 250 MHz	7 dB (± 6 dB)
Band Four 18.7 - 26.5 GHz (E4440A)	≥ 250 MHz	10 dB (± 6 dB)
Band Four 18.7 - 26.8 GHz (E4446/48A)	≥ 250 MHz	10 dB (± 6 dB)

1. Conversion Loss is degraded by a nominal 3 dB in PSA E4446A and E4448A models with Option HN8 installed.

Test Procedures

1. Preset the PSA and all test equipment.
2. Run Align All Now on the PSA.
[System] > Alignments > Align All Now.
3. Issue the following command to turn On Option HN8¹:
For FW revision greater than A.04.07:
[SENSe]:POWer:RF[:PRESelect UNPReselect,1]
4. Initialize the test equipment parameters as follows:

Table 2-3 856xEC Spectrum Analyzer Settings

Parameter	Setting
Center Frequency	3 GHz
Span	200 kHz
Resolution Bandwidth	3 kHz
Attenuation	10 dB

Table 2-4 Source Settings

Parameter	Setting
Function	CW or Sine
Level	-15 dBm
Frequency	3 GHz

1. Refer to “Command Interface for the E4440A, E4443A, and E4445A” on page 8 or “Command Interface for the E4446A and E4448A” on page 10 for more information regarding specific instrument firmware revisions.

Measuring the Source Output Amplitude

1. Connect the 856xEC spectrum analyzer to the end of the 3.5 mm cable that is connected to the source. Use a Type-N (m) to 3.5 mm (f) adapter between the spectrum analyzer and the cable.
2. Press [**Peak Search**] on the 856xEC to obtain a peak amplitude value.
3. Adjust the source [**amplitude**] for a spectrum analyzer reading of -15 dBm.
4. Disconnect the 856xEC spectrum analyzer from the cable and connect the cable to the PSA RF input with a Type-N (m) to 3.5 mm (f) adapter.

NOTE

If the PSA has Option BAB (APC3.5 input connector), use an APC 3.5 (F) to APC 3.5 (F) adapter between the PSA and the 3.5 mm cable.

Measure the 321.4 MHz IF Out Amplitude

5. Connect the PSA rear panel 321.4 MHz IF Out to the RF Input of the 856xEC spectrum analyzer. Use the SMA cable and appropriate adapters.

Refer to [Table 2-2, “PSA Option HN8 Characteristics,” on page 15](#) for the expected conversion loss values. Use [Table](#) and [Table](#) for each of the instruments.

Table 2-5

PSA Spectrum Analyzer Settings

Parameter	Setting
Center Frequency	See Table on page 19.
Span	0 Hz
Resolution Bandwidth	3 MHz
Attenuation	0 dB ¹

1. This setting will determine the IF Out level, with respect to the input signal.

Table 2-6 **856XEC Spectrum Analyzer Settings**

Parameter	Setting
Center Frequency	321.4 MHz
Span	5 MHz
Resolution Bandwidth	1 MHz
Reference Level	-10 dBm
Log Scale	5 dB/Div

6. View the amplitude of the 321.4 MHz Output.
 Conversion loss = measured power at 321.4 MHz Output – Input pwr

 Example: Measured Power at 321.4 MHz IF out = –17 dBm.
 Input Power = –15 dBm.
 Conversion Loss = –17 dBm – (–15 dBm) = –2 dB¹.
7. Record the calculated Conversion Loss values in [Table 2-7](#).
8. Set the source and 856xEC to the next frequency in [Table 2-7](#) and repeat Steps 1 through 6.

Table 2-7 PSA Option HN8 Calculated Conversion Loss Data

Frequency	Conversion Loss Expected	Conversion Loss Calculated
3 GHz	2 dB (± 2 dB)	
6 GHz	2 dB (± 2 dB)	
9 GHz	2 dB (± 3 dB)	
13 GHz	2 dB (± 3 dB)	
14 GHz	7 dB (± 6 dB)	
18 GHz	7 dB (± 6 dB)	
20 GHz	10 dB (± 6 dB)	
26.5 GHz	10 dB (± 6 dB)	

1. For 3 GHz and 6 GHz, the equation may yield a difference with a positive sign. A positive sign indicates conversion gain.

3 **Service, Safety and Regulatory Information**

Service

Introduction

Review this product and related documentation to familiarize yourself with safety markings and instructions before you operate the instrument. This product has been designed and tested in accordance with international standards.

Cleaning Instructions

Clean the instrument cabinet using a damp cloth only.

Shipping Instructions

Always transport or ship the instrument using the original packaging if possible. If not, comparable packaging must be used. Refer to [“Contacting Agilent” on page 28](#).

Before Applying Power

Verify that the product is configured to match the available main power source as described in the input power configuration instructions in this manual. If this product is to be powered by autotransformer, make sure the common terminal is connected to the neutral (grounded) side of the ac power supply.

Replaceable Parts for the E444xA

The assemblies listed in [Table 3-1, “Replaceable Parts for the E4440A, E4443A and E4445A”](#) and [Table 3-2, “Replaceable Parts for the E4446A and E4448A”](#) list the replaceable parts applicable to the PSA-Series Spectrum Analyzer with Option HN8. Refer to [“Contacting Agilent” on page 28](#) for further information.

Table 3-1 **Replaceable Parts for the E4440A, E4443A and E4445A**

Description	Agilent Part Number	Qty
Spacer, 8 mm	0380-1402	2
Screw, M3 × 0.5, 8 mm	0515-0372	5
Screw, M3 × 0.5, 40 mm	0515-1715	2
Termination, 50 Ω	1810-0118	1
Microwave Switch	33314-60013	2
Dual Mixer	5086-7749	1
Bracket	E4440-00020	1
Cable assy, Sloda Out to Cable from Mixer LO In	E4440-20087	1
Cable assy, Attn to Bottom Switch Port C	E4440-20090	1
Cable assy, Rythm to Bottom Switch Port 2	E4440-20091	1
Cable assy, Mixer to Bottom Switch Port 1	E4440-20092	1
Cable assy, Mixer LO In to Cable from Sloda Out	E4440-20093	1
Cable assy, Wire Harness	E4440-60077	1
Cable assy, Mixer HB Out to Top Switch Port 1	E4446-60298	1
Cable assy, 3rd Converter to Top Switch Port C	E4440-60373	1
Cable assy, Rythm to Top Switch Port 2	E4440-60373	1

Table 3-2 Replaceable Parts for the E4446A and E4448A

Description	Agilent Part Number	Qty
Screw, M3 × 0.5, 18 mm	0515-0666	2
Screw, M3 × 0.5, 8 mm	0515-0372	7
Screw, M2.5 × 0.45, 6 mm	0515-1934	3
Termination, 50 Ω	1810-0118	1
Microwave Switch	33314-60013	1
Dual Mixer	5086-7749	1
Transfer Switch, 50 GHz	87222-60015	1
Bracket	E4440-00020	1
Cable assy, Mixer LO In to Cable from Sloda Out	E4440-20093	1
Cable assy, Ribbon, switch (87222) control	E4440-60071	1
Cable assy, Wire Harness	E4440-60077	1
Cable assy, Mixer “J5 HB Out” to RF Switch Port 1	E4440-60298	1
PC board, Option Driver	E4440-60358	1
Cable assy, 3rd Converter to Transfer Switch	E4440-60373	1
Cable assy, Rhythm IF Out to Transfer Switch	E4440-60373	1
Bracket	E4446-00008	1
Cable assy, FELOMA to LO Out	E4446-20035	1
Cable assy, Atten B to 87222 Transfer Switch	E4446-20060	1
Cable assy, 87222 transfer Switch Out to SBTX	E4446-20063	1
Cable assy, 87222 transfer switch to Mixer HB In	E4446-20067	1

Safety, and Regulatory Information

Warnings

WARNING The **WARNING** notice denotes a hazard. It calls attention to a procedure, practice, or the like, which if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

Warnings applicable to this instrument are:

WARNING No operator serviceable parts inside. Refer servicing to qualified personnel. To prevent electrical shock, do not remove covers.

WARNING If this instrument is not used as specified, the protection provided by the equipment could be impaired. This instrument must be used in a normal condition (in which all means for protection are intact) only.

WARNING For continued protection against fire hazard replace line fuse only with same type and rating:

- United States—F 3A/250V, Part Number 2110-0780
- Europe—F 3.15A/250V, Part Number 2110-0655

The use of other fuses or material is prohibited.

WARNING This is a Safety Class I product (provided with a protective earthing ground incorporated in the power cord). The mains plug shall be inserted only into a socket outlet provided with a protective earth contact. Any interruption of the protective conductor, inside or outside the instrument, is likely to make the instrument dangerous. Intentional interruption is prohibited.

WARNING The power cord is connected to internal capacitors that may retain dangerous electrical charges for 5 seconds after disconnecting the plug from its power supply.

WARNING These servicing instructions are for use by qualified personnel only. To avoid electrical shock, do not perform any servicing unless you are qualified to do so.

WARNING The opening of covers or removal of parts is likely to expose dangerous voltages. Disconnect the instrument from all voltage sources while it is being opened.

WARNING **This product is designed for use in Installation Category II and Pollution Degree 2 per IEC 1010 and 664 respectively.**

Cautions

CAUTION The CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like, which if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.










Cautions applicable to this instrument are:

CAUTION Always use the three-prong ac power cord supplied with this instrument. Failure to ensure adequate earth grounding (by not using this cord) can cause instrument damage.

CAUTION This instrument has autoranging line voltage input; be sure the supply voltage is within the specified range.

CAUTION Ventilation Requirements: When installing the instrument in a cabinet, the convection into and out of the instrument must not be restricted. The ambient temperature (outside the cabinet) must be less than the maximum operating temperature of the instrument by 4 °C for every 100 watts dissipated in the cabinet. If the total power dissipated in the cabinet is greater than 800 watts, forced convection must be used.

Instrument Markings

	When you see this symbol on your instrument, you should refer to the instrument's instruction manual for important information.
	This symbol indicates hazardous voltages.
	The laser radiation symbol is marked on products that have a laser output.
	This symbol indicates that the instrument requires alternating current (ac) input.
	The CE mark is a registered trademark of the European Community. If it is accompanied by a year, it indicates the year the design was proven.
	The CSA mark is a registered trademark of the Canadian Standards Association.
ISM1-A	This text indicates that the instrument is an Industrial Scientific and Medical Group 1 Class A product (CISPER 11, Clause 4).
	This symbol indicates that the power line switch is ON.
	This symbol indicates that the power line switch is OFF or in STANDBY position.
	This symbol indicates the product meets the Australian Standards.

Safety Earth Ground

This is a Safety Class I product (provided with a protective earthing terminal). An uninterruptible safety earth ground must be provided from the main power source to the product input wiring terminals, power cord, or supplied power cord set. Whenever it is likely that the protection has been impaired, the product must be made inoperative and secured against any unintended operation.

Contacting Agilent

By internet, phone, or fax, get assistance with all your test and measurement needs.

This information supersedes all prior HP contact information.			
Online assistance: www.agilent.com/find/assist			
Americas			
Brazil (tel) (+55) 11 3351 7012 (fax) (+55) 11 3351 7024	Canada (tel) +1 877 894 4414 (fax) +1 303 662 3369	Mexico (tel) 1 800 254 2440 (fax) 1 800 254 4222	United States (tel) 800 829 4444 (alt) (+1) 303 662 3998 (fax) 800 829 4433
Asia Pacific and Japan			
Australia (tel) 1 800 225 574 (fax) 1 800 681 776 (fax) 1 800 225 539	China (tel) 800 810 0508 (alt) 800 810 0510 (fax) 800 810 0507 (fax) 800 810 0362	Hong Kong (tel) 800 933 229 (fax) 800 900 701	India (tel) 1600 112 626 (fax) 1600 112 727 (fax) 1600 113 040
Japan (Bench) (tel) 0120 32 0119 (alt) (+81) 426 56 7799 (fax) 0120 01 2144	Japan (On-Site) (tel) 0120 802 363 (alt) (+81) 426 56 7498 (fax) (+81) 426 60 8953	Singapore (tel) 1 800 275 0880 (fax) (+65) 6755 1235 (fax) (+65) 6755 1214	South Korea (tel) 080 778 0011 (fax) 080 778 0013
Taiwan (tel) 0800 047 669 (fax) 0800 047 667 (fax) 886 3492 0779	Thailand (tel) 1 800 2758 5822 (alt) (+66) 2267 5913 (fax) 1 800 656 336	Malaysia (tel) 1800 880 399 (fax) 1800 801 054	
Europe			
Austria (tel) 0820 87 44 11* (fax) 0820 87 44 22	Belgium (tel) (+32) (0)2 404 9340 (alt) (+32) (0)2 404 9000 (fax) (+32) (0)2 404 9395	Denmark (tel) (+45) 7013 1515 (alt) (+45) 7013 7313 (fax) (+45) 7013 1555	Finland (tel) (+358) 10 855 2100 (fax) (+358) (0) 10 855 2923
France (tel) 0825 010 700* (alt) (+33) (0)1 6453 5623 (fax) 0825 010 701*	Germany (tel) 01805 24 6333* (alt) 01805 24 6330* (fax) 01805 24 6336*	Ireland (tel) (+353) (0)1 890 924 204 (alt) (+353) (0)1 890 924 206 (fax) (+353) (0)1 890 924 024	Israel (tel) (+972) 3 9288 500 (fax) (+972) 3 9288 501
Italy (tel) (+39) (0)2 9260 8484 (fax) (+39) (0)2 9544 1175	Luxemburg (tel) (+32) (0)2 404 9340 (alt) (+32) (0)2 404 9000 (fax) (+32) (0)2 404 9395	Netherlands (tel) (+31) (0)20 547 2111 (alt) (+31) (0)20 547 2000 (fax) (+31) (0)20 547 2190	Russia (tel) (+7) 095 797 3963 (alt) (+7) 095 797 3900 (fax) (+7) 095 797 3901
Spain (tel) (+34) 91 631 3300 (alt) (+34) 91 631 3000 (fax) (+34) 91 631 3301	Sweden (tel) 0200 88 22 55* (alt) (+46) (0)8 5064 8686 (fax) 020 120 2266*	Switzerland (French) (tel) 0800 80 5353 opt. 2* (alt) (+33) (0)1 6453 5623 (fax) (+41) (0)22 567 5313	Switzerland (German) (tel) 0800 80 5353 opt. 1* (alt) (+49) (0)7031 464 6333 (fax) (+41) (0)1 272 7373
Switzerland (Italian) (tel) 0800 80 5353 opt. 3* (alt) (+39) (0)2 9260 8484 (fax) (+41) (0)22 567 5314	United Kingdom (tel) (+44) (0)7004 666666 (alt) (+44) (0)7004 123123 (fax) (+44) (0)7004 444555		
(tel) = primary telephone number; (alt) = alternate telephone number; (fax) = FAX number; * = in country number 11/16/04			