

About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual is the best copy we could find; it may be incomplete or contain dated information. If we find a more recent copy in the future, we will add it to the Agilent website.

Support for Your Product

Agilent no longer sells or supports this product. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available. You will find any other available product information on the Agilent Test & Measurement website, www.tm.agilent.com.

HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, semiconductor products and chemical analysis businesses are now part of Agilent Technologies. We have made no changes to this manual copy. In other documentation, to reduce potential confusion, the only change to product numbers and names has been in the company name prefix: where a product number/name was HP XXXX the current name/number is now Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A.

**Quick Start
Guide**

**HP 37717C
Communications
Performance Analyzer**

© Copyright Hewlett-Packard Ltd. 1998

All rights reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

HP Part No.
37717-90401

First edition, 03/98

Printed in U.K.

Documentation Warranty

The information contained in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose.

Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.


WARNING

For details of safety, see Safety information at the front of the Calibration manual.

Warning Symbols Used on the Product



The product is marked with this symbol when the user should refer to the instruction manual in order to protect the apparatus against damage.



The product is marked with this symbol to indicate that hazardous voltages are present



The product is marked with this symbol to indicate that a laser is fitted. The user should refer to the laser safety information in the Calibration Manual.

**HP 37717C Communications
Performance Analyzer**

About This Book

The Quick Start Guide demonstrates the basic operation of the instrument.

This guide tells you how to select the displays that you want and how to use them to modify the instrument functions.

This guide also tells you about the front panel key functions, the indicators and the connectors.

Contents





Introduction to the 37717C Front Panel	7
Selecting Displays	8
Selecting Multiple or Single Windows	9
Moving Around Multiple Windows	10
Selecting the Graph or Other Display in Multiple Windows	11
Changing the Displayed Folder	13
Changing the Instrument Settings	14
Modifying Displays with Pop-up Menus	16
Making Selections using Pictorial and Graphic Displays.	20
Using with a Monitor	24
Using the Other Front Panel Keys	25
Monitoring Status	27
Displaying Status History	27
General Alarm Indicators	28
PDH / DS _n Alarm Indicators	28
ATM Alarm Indicators	28
Jitter Alarm Indicators	28
SDH Alarm Indicators	29
SONET Alarm Indicators (Option 120)	29

Getting Started


This chapter shows you how to select and change displays

Getting Started

Getting Started shows you how to select displays and use them to change the instrument settings. Getting started includes the following:

- How to select single or multiple windows
- How to obtain the required display using the display select keys, **TRANSMIT** ; **RECEIVE** ; **RESULTS** ; **GRAPH** ; **OTHER**
- How to modify the display information, using    and  and the display softkeys or pop-up menus
- How to use the other front panel keys
- How to interpret the front panel status indicators
- How to connect to external equipment

Introduction to the 37717C Front Panel

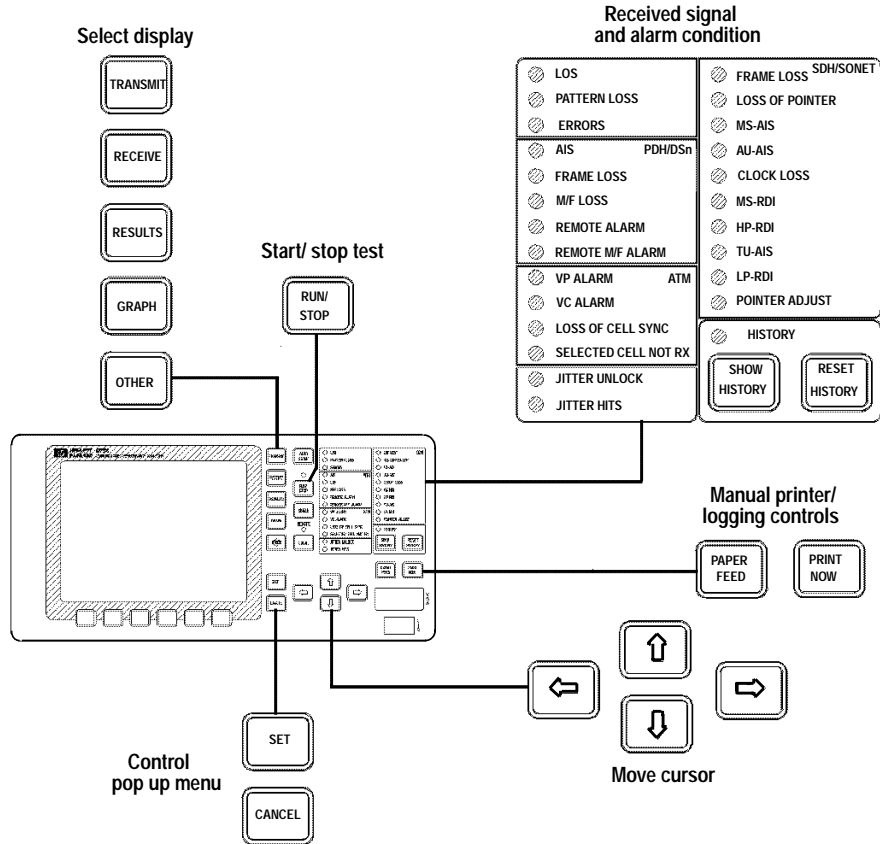

The operator interface is provided by the display and the front panel keys.

The display may be multiple windows or a single window.

When the display is multiple windows, the "active" window is indicated with a color which is different from the color of the three "inactive" windows.

Selecting Displays

A multiple window display is available. The displayed pages are: Transmitter Output, Receiver Input, Results and either Graph or Other (Function).



TRANSMIT

Allows control of the settings associated with the generated signal.

RECEIVE

Allows control of the settings associated with the received signal.

RESULTS

Allows control of the test timing and graph storage and displays the selected measurement results.

GRAPH

Allows management of the stored graphical results.

OTHER

Allows control of Stored Settings, Settings Control, Floppy Disk, Logging, Remote Control, Time & Date, Miscellaneous (Keyboard Lock, Beep on Received Error, Suspend Test on Signal Loss), Option and Option Enable, Calibration, Autoseup and Color Control.

A list of Options fitted is also displayed.

Getting Started
 Selecting Displays

Selecting Multiple or Single Windows

To select single window, use the display keys **TRANSMIT**; **RECEIVE**; **RESULTS**; **GRAPH** and **OTHER** , to select the display required and then press **SINGLE WINDOW**.

Most examples in this manual use SINGLE window. To return to multiple windows, press **MULTIPLE WINDOW**.

Example: To obtain a single window transmit display, Use **TRANSMIT** to make the transmit window active.



Getting Started

Selecting Displays

Use **SINGLE WINDOW** to obtain a single transmit window display

To change the page displayed in the single window, press the page key for the page required (e.g. RECEIVE, RESULTS, GRAPH or OTHER) .

When returning to multiple windows, the current single window display will become the active display within the multiple windows.



Moving Around Multiple Windows

To move the cursor to another of the displayed windows, press the display selection key for that window.

Example: The cursor is in the TRANSMITTER OUTPUT window at the top left of the display.



Getting Started

Selecting Displays

If you want to make changes to the receive display, you need to make the receive display "active". To move the cursor to the RECEIVER INPUT window at the top right of the display, press **RECEIVE**.

TRANSMITTER OUTPUT		SDH	
TRAIN SETTINGS	STRUCT'D PAYLOAD	JITTER	TEST OVERHEAD FUNCTION SETUP
SIGNAL	SDH-1	INTERNAL	
CLOCK	INTERNAL		
FREQUENCY OFFSET	OFF		
MAPPING	RU-4	FOREGROUND	
345 OFFSET CHANNEL	TUG3	TU-3	
		34 Mb/s	
		0 ppm	
TU PAYLOAD PATTERN	FRAMED	UNSTRUCTURED	INVERT ITU
	2*23-1 PRBS		

RECEIVER INPUT		SDH	
TRAIN SETTINGS	STRUCT'D PAYLOAD	TEST FUNCTION	OVERHEAD MONITOR
SIGNAL	SDH-1	TERMINATE	
LEVEL			
MAPPING	RU-4	TU-3	
		34 Mb/s	
CHANNEL	TUG3		
		1	
TU PAYLOAD PATTERN	FRAMED	UNSTRUCTURED	INVERT ITU
	2*23-1 PRBS		

RESULTS SDH		ERROR SUMMARY	
RESULT TYPE		COUNTS	
FRAME		
B1 BDP	HS-RES
B2 BDP	HP-RES
B3 BDP	LP-RES
HP-IEC		
TU BDP		
BIT		
RU POINTER	0	TU POINTER	0
ELAPSED TIME	...0 ..h ..M ..S		

FUNCTION		STORED SETTINGS	
STORED SETTING NUMBER	0		
SETTING	ACTION	OFF	
0	FACTORY DEFAULT SETTINGS		
1		
2		
3		
4		

STATUS:

PDH/DSn	SDH	SONET	SONET/SDH J1T	SINGLE WINDOW
---------	-----	-------	---------------	---------------

Selecting the Graph or Other Display in Multiple Windows

Press **OTHER** or **GRAPH** for the display that you want.

Example: To change the display from **OTHER** to **GRAPH**. Press **GRAPH**.

Getting Started

Selecting Displays

Display with **OTHER** FUNCTION

TRANSMITTER OUTPUT SBH		RECEIVER INPUT SBH	
TRNG	STRUCT 0	JITTER	TEST (CORRECTION)
SETTINGS	PHY/LOG	FUNCTION	POSITION
SIGNAL STM-1 INTERNAL		SIGNAL STM-1 TERMINATE	
CLOCK INTERNAL			
FREQUENCY OFFSET OFF			
MAPPING	RU-4	FORGROUND	TU-3
			34 Mb/s
241 OFFSET		CHANNEL	TUG3
			0 PPM
TU PHY/LOG	PARSED	TU PHY/LOG	PARSED
PATTERN	2-23-1 PRBS	PATTERN	UNSTRUCTURED
	INVERT		ITU
RESULTS SBH		FUNCTION	
ERROR SUMMARY		STORAGE SELECTED	
RESULT TYPE	COUNTS	STORED SETTING NUMBER	0
PARSEC	SETTING	ACTION
B1-BIP	0	FACTORY DEFAULT SETTINGS
B2-BIP	1
B3-BIP	2
HP-DEC	3
TU-BIP	4
B11		
RU POINTER	0	TU POINTER	0
SLAPSED TIME			
	..0 ..h ..m ..s		

STATUS:

STORED SETTINGS	SETTINGS CONTROL	FLOPPY DISK	LOGGING	MORE	SINGLE WINDOW
-----------------	------------------	-------------	---------	------	---------------

Press **GRAPH** to change to the graph display

TRANSMITTER OUTPUT SBH		RECEIVER INPUT SBH	
TRNG	STRUCT 0	JITTER	TEST (CORRECTION)
SETTINGS	PHY/LOG	FUNCTION	POSITION
SIGNAL STM-1 INTERNAL		SIGNAL STM-1 TERMINATE	
CLOCK INTERNAL			
FREQUENCY OFFSET OFF			
MAPPING	RU-4	FORGROUND	TU-3
			34 Mb/s
241 OFFSET		CHANNEL	TUG3
			0 PPM
TU PHY/LOG	PARSED	TU PHY/LOG	PARSED
PATTERN	2-23-1 PRBS	PATTERN	UNSTRUCTURED
	INVERT		ITU
RESULTS SBH		RESULTS	
ERROR SUMMARY		BIT ERROR COUNT	
RESULT TYPE	COUNTS	60	
PARSEC	00:00	
B1-BIP	00:00	
B2-BIP	00:00	
B3-BIP	00:00	
HP-DEC	00:00	
TU-BIP	00:00	
B11	00:00	
RU POINTER	0	00:00	
TU POINTER	0	00:00	
SLAPSED TIME			
	..0 ..h ..m ..s		

HINT: Press SET for popup application diagram

STATUS:

TEXT RESULTS	ZOOM IN	CHANGE UPPER	CHANGE LOWER	PRINT	SINGLE WINDOW
--------------	---------	--------------	--------------	-------	---------------

Getting Started
Selecting Displays

Changing the Displayed Folder

Many windows displayed with the **TRANSMIT** ; **RECEIVE** ;and **RESULTS** keys contain a number of “folders” which may be selected with **→** and **←** .

For example, in the display given below there are five “folders” MAIN SETTINGS, STRUCT'D SETTINGS, JITTER and TEST FUNCTION. In this example MAIN SETTINGS is the current selection.



Example:

To change the PDH display shown from MAIN SETTINGS to STRUCTURED SETTINGS.







Use **→**.




Changing the Instrument Settings

Settings which may be changed are displayed in a different color to those which are fixed. In this manual, variable settings are shown on the displays in [].


In each of the display areas the field currently able to be changed is marked by a highlighted cursor.

The highlighted cursor is moved around the display using    and .

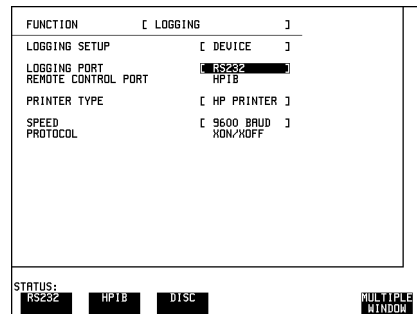

The menu of selections available, for the highlighted field, appears at the bottom of the display: **RS232**; **HP1B**; **DISK**. The choice from the menu is made using the display softkeys situated immediately below the display.


When a field has more than five choices, as in SPEED shown here, a softkey labelled **MORE** is provided.

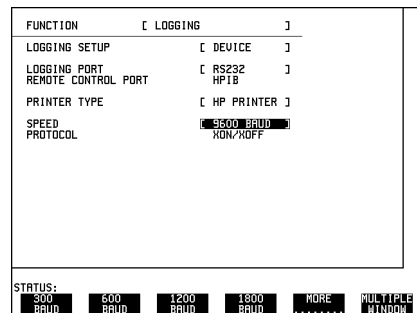

Getting Started

Changing the Instrument Settings

When **MORE** is chosen the remainder of the menu is revealed.

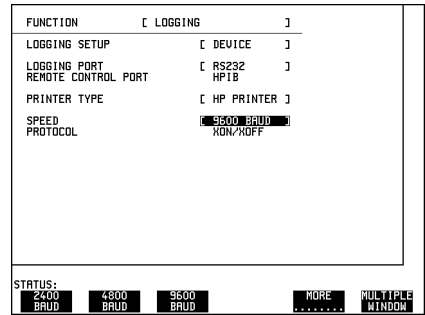

Modifying Displays with Pop-up Menus

Although the method of modifying the displays with softkeys is always available, it is easier in many cases to use the Pop-up menus.

The pop-up menus are particularly useful for:

- Text entry
- Date/time entry
- Integer, Hexadecimal and Binary entry
- Trace data entry
- Menu selection when there are a large number of choices
- SDH/SONET payload mapping
- ATM physical and adaptation layer selections
- Jitter mask selections

If an attempt is made to set out of range values, the instrument will adopt the nearest possible legal value.

Text, Trace Data, Date and Time, Integer and Hexadecimal Selection.


Move the cursor to the field to be changed.

Press **SET** for the pop-up menu.

The current selection is shown in a window at the top of the pop-up menu.



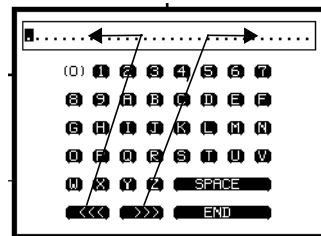

To move through the current setting in the window use **↓**, **↑**, **→** and **←** to select **<<<** or **>>>**.


Use **SET** to move to the required field.



Getting Started

Changing the Instrument Settings

Select the required character or function on the pop-up menu with    and .

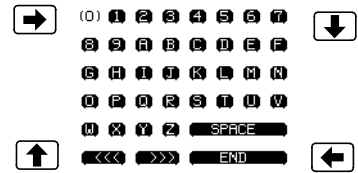


Press **SET** to set the selection in the window at the top of the pop-up menu.

When the required content is displayed in the window at the top of the pop-up menu, select **END** and press **SET** to change the instrument setting to the new value.


To exit the menu display without making the change, press **CANCEL**.

Example:

The pop-up menu provides a more convenient method of entering stored setting titles. Move the cursor into one of the title fields and press **SET**.

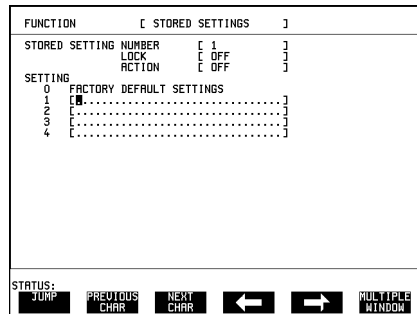

SET

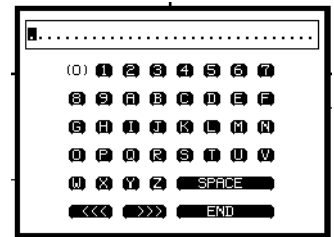

Getting Started

Changing the Instrument Settings

Binary Entry

For fields which require binary data entry, use **SET** to display the pop-up menu.

The current setting is shown in a window at the top of the pop-up menu.

To move through the selected entry with the pop-up menu use **<<<** and **>>>** see page 16.

Binary selection is achieved with **←** = 0 and **→** = 1. This operation enters the selected character, 0 or 1, and moves to the next character.

This method allows rapid setting of binary words. For example:


To set the word 11110011 Use **→ → → → ← ← → →**.

Selection of the last character changes the instrument setting to the new value.


To exit the menu display without making the change, press **CANCEL**.

Example:

The binary pop-up menu maybe used to set up a user defined word. In this example the user defined word is an ATM payload background byte.

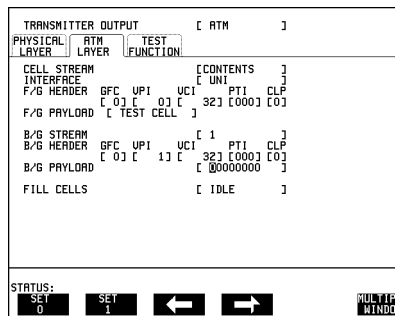

SET

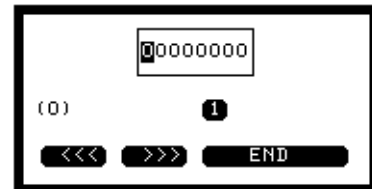

Getting Started

Changing the Instrument Settings

Menu Selection

There is a menu selection available as an alternative to any group of soft keys. Display the menu with **SET**. Use **↑** and **↓** to make the selection.

To change to the new value, press **SET**. To exit the display without making the change, press **CANCEL**.

Example:

FUNCTION		STORED SETTINGS	
STORED SETTING NUMBER	[0]		
	ACTION	[OFF]	
SETTING	FACTORY DEFAULT SETTINGS		
0	[.....]		
1	[.....]		
2	[.....]		
3	[.....]		
4	[.....]		

STATUS:

STORED SETTINGS	SETTINGS CONTROL	FLOPPY DISK	LOGGING	MORE	MULTIPLE WINDOW
-----------------	------------------	-------------	---------	------------	-----------------


SET

STORED SETTINGS
SETTINGS CONTROL
PRINTER
REMOTE CONTROL
TIME & DATE
MISCELLANEOUS
OPTIONS
OPTION ENABLE
SELF TEST
MODULE DEBUG
DEMO MODE
CALIBRATION
SELFTEST DEBUG
COLOUR PALETTE

Getting Started

Changing the Instrument Settings

Making Selections using Pictorial and Graphic Displays.



In some cases selection is simplified with a pictorial or graphic "map" display. This facility is available where the display has a  symbol. These displays are obtained in the same way as the pop-up menus using **SET**. Some of these displays include menus which allow the settings to be changed.



NOTE

Details of the pictorial display depend on the optional modules fitted to the instrument.

SDH Payload Mapping


With the cursor in the MAPPING field, press **SET** to display the payload map.

To change between AU- layer, TU-layer and Payload layer selections, use  and .

To select the mapping you want, use  and .

To change to the new value, press **SET**. To exit the map display without making the change, press **CANCEL**.

.Example:

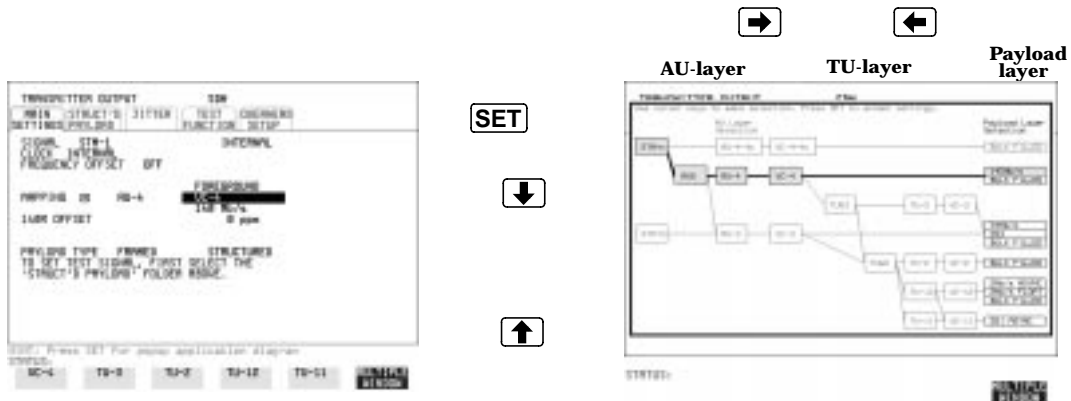

Getting Started

Changing the Instrument Settings


ATM Physical Layer Selections

With the cursor in the ATM, PHYSICAL LAYER, SIGNAL field, press **SET** to display the physical interface. Use **←** and **→** to select the interface you want.


To change to the new value, press **SET**.

To exit the map display without making the change, press **CANCEL**.

Example:

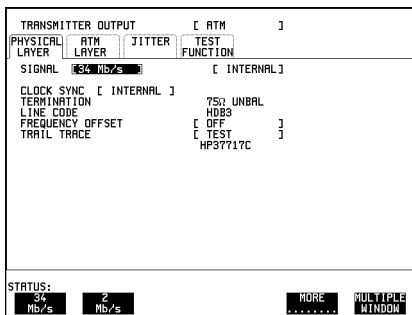

SET

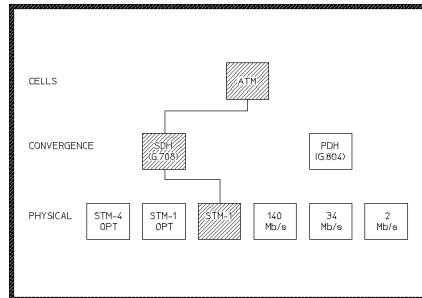

Getting Started

Changing the Instrument Settings

Jitter Mask Selection

Graphical displays of jitter mask selections are available. The current settings are shown by a marker on the graphical display.

Jitter Mask set to Off

To obtain a graphical display, move the cursor to RANGE, MODULATION FREQUENCY, or AMPLITUDE and press **SET**.

To change a value, use **←** **→** **↑** and **↓** to select the parameter you want to change, RANGE, MOD FREQ OR AMPLITUDE.

Press **SET** for a pop-up menu.


Make your selection from the pop-up menu as described in *Modifying Displays with Pop-up Menus* page 16 and press **SET** again to select the new value.

The marker on the graphical display will move to the new position and set the new value.

To exit the graphical display with the new value set, press **CANCEL**.



SET

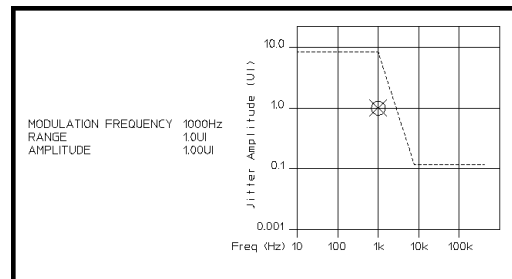

Getting Started

Changing the Instrument Settings


Jitter Mask set to Swept

To obtain a pictorial display, move the cursor to JITTER MASK [SWEPT] and press **SET**. The marker moves continuously through the sweep range.

To exit the pictorial display use **CANCEL**.



SET

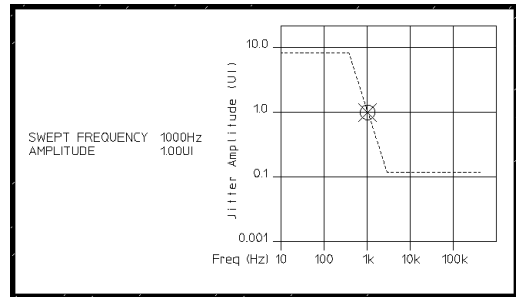

To change the frequency, press **SET** for a pop-up menu.

Use **←**, **→**, **↑** and **↓** to make your selection from the pop-up menu and press **SET** again to select the new value

To exit the graphical display with the new value set, press **CANCEL**


Getting Started Using with a Monitor

Jitter Mask set to Spot

To obtain a graphical display, move the cursor to SPOT FREQUENCY and press **SET**.



SET

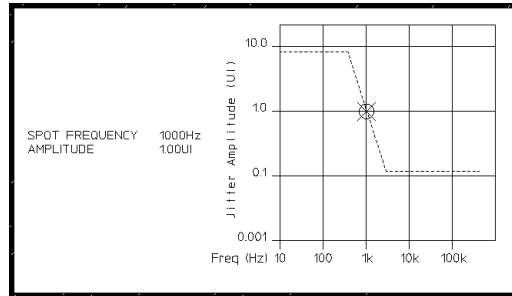

To change the frequency press **SET** for a pop-up menu of the values available.

Use **←**, **→**, **↑** and **↓** to make your selection from the pop-up menu and press **SET** again to select the new value.


The marker on the graphical display will move to the new position and update the value.

To exit the graphical display with the new value set, press **CANCEL**

Using with a Monitor

For ease of viewing at a distance, the instrument display may be presented on a monitor. The monitor should be connected to the HP 37717C front panel VGA connector.

Using the Other Front Panel Keys

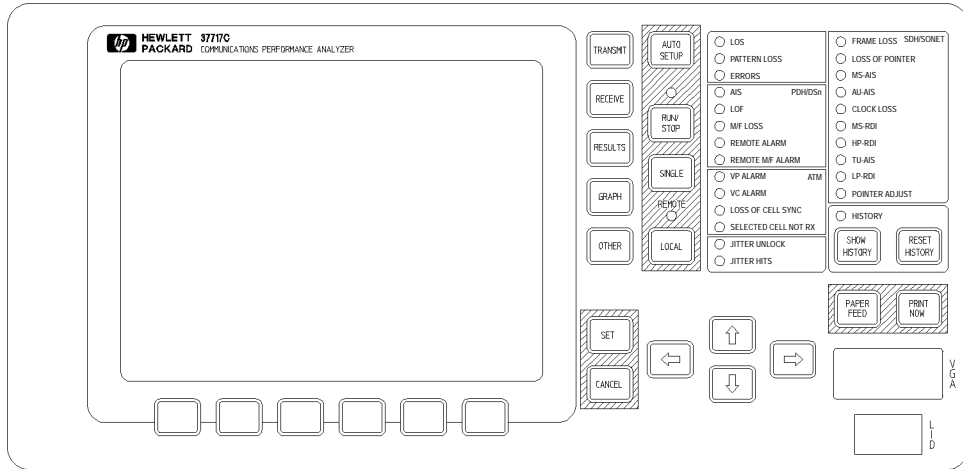

AUTO SETUP

The test set attempts to match the settings to the received signal.

RUN/STOP

Terminates the current test period if one is in progress. Starts a new test period. The indicator above the key is lit when a test period is in progress.

SINGLE

Adds a single bit error to the output data pattern each time the key is pressed.

LOCAL

Returns the instrument from remote operation to Local (keyboard) operation. The indicator above the key is lit when the instrument is under Remote Control.

SET

Displays the pop-up menu for the currently highlighted field. This key also confirms the selection made.

CANCEL

Clears the pop-up menu without changing the selection.

PRINT NOW

The selected measurement results are logged, immediately, to the selected printer.

PAPER FEED

The paper in the internal printer is advanced.

CAUTION

Do not press **PAPER FEED** while attempting to load a new roll of paper in the printer. It could result in a paper jam and disable the printer. Wait until the paper is fed through the printer mechanism before pressing **PAPER FEED**.

Monitoring Status

<input type="checkbox"/> LOSS	<input type="checkbox"/> FRAME LOSS SDH/SONET
<input type="checkbox"/> PATTERN LOSS	<input type="checkbox"/> LOSS OF POINTER
<input type="checkbox"/> ERRORS	<input type="checkbox"/> MS-AIS
<input type="checkbox"/> AIS PDH/DSn	<input type="checkbox"/> AU-AIS
<input type="checkbox"/> FRAME LOSS	<input type="checkbox"/> CLOCK LOSS
<input type="checkbox"/> M/FFRAME LOSS	<input type="checkbox"/> MS-RDI
<input type="checkbox"/> REMOTE ALARM	<input type="checkbox"/> HP-RDI
<input type="checkbox"/> REMOTE M/FFRAME ALARM	<input type="checkbox"/> TU-AIS
<input type="checkbox"/> VP ALARM ATM	<input type="checkbox"/> LP-RDI
<input type="checkbox"/> VC ALARM	<input type="checkbox"/> POINTER ADJUST
<input type="checkbox"/> LOSS OF CELLSYNC	
<input type="checkbox"/> SELECTED CELL NOT RX	
<input type="checkbox"/> JITTER UNLOCK	
<input type="checkbox"/> JITTER HITS	

Displaying Status History

The Status indicators on the front panel convey information regarding the current status of the instrument. If an alarm has occurred during the current Test Period, the indicator above **SHOW HISTORY** is lit. To view which alarms have occurred, press and hold **SHOW HISTORY**. When **SHOW HISTORY** is released the status indicators return to displaying the current status.

SHOW HISTORY

When pressed and held, the Status indicators display any alarms which have been set during the current Test Period. This continues until **SHOW HISTORY** is released at which time the current status is displayed. The indicator above the key is lit to signify that an alarm has occurred during the current Test Period.

RESET HISTORY

Resets the history store such that the historical and present status are the same. This can also be achieved by starting a new Test Period.

General Alarm Indicators

- Loss** No data transitions at the input port.
- Pattern Loss** The received data pattern is not in synchronization with the internally generated reference data.
- Errors** A measured error has occurred. The indicator will remain lit for 100 ms.

PDH / DS_n Alarm Indicators

These are active when a PDH / DS_n signal is received

- AIS** The All Ones AIS signal is detectable in the presence of a 1 in 10⁻³ error rate.
- Frame Loss** Frame alignment lost or out of alignment condition.
- M/Frame Loss** Multiframe alignment lost.
- Remote Alarm** Remote alarm, x-bit or yellow alarm bit is set.
- Remote M/
Frame Alarm** Remote Multiframe Alarm bit is set.

ATM Alarm Indicators

These are active when an ATM signal is received.

- VP Alarm** Virtual Path AIS or FERF has been detected.
- VC Alarm** Virtual Channel AIS or FERF has been detected.
- Loss of Cell
Sync** Cell Sync Loss has been detected.
- Selected Cell
Not RX** The selected cell has not been received. Selected cell not received.

Jitter Alarm Indicators

- Jitter Unlock** The jitter receiver has lost phase lock. Jitter measurement is suspended until lock is regained.
- Jitter Hits** A jitter hit has been detected.

SDH Alarm Indicators

These are active when an SDH signal is received.

FRAME LOSS	Loss Of Frame has been detected.
LOSS OF POINTER	Loss of pointer has been detected.
MS-AIS	Multiplexer Section AIS has been detected.
AU-AIS	Path AIS has been detected.
CLOCK LOSS	The transmitter clock is not synchronized to the selected reference.
MS-RDI	Multiplexer Section RDI (FERF) has been detected.
HP-RDI	Path RDI (FERF) has been detected.
TU-AIS	TU Path AIS has been detected. .
LP-RDI	TU Path RDI (FERF) has been detected. .
POINTER ADJUST	A pointer change in the foreground signal has been detected.

SONET Alarm Indicators (Option 120)

These are active when a SONET signal is received.

LOF/SEF	Loss of Frame or Severely Errored Frame has been detected. Status message on bottom of display states which has occurred.
LOP-P/LOP-V	Loss of Pointer has been detected.
AIS-L	Line AIS has been detected.
AIS-P	STS Path AIS has been detected.
CLOCK LOSS	The transmitter clock is not synchronized to the selected reference.
RDI-L	Line Remote Defect Indication (RDI) has been detected.
RDI-P	STS Path RDI has been detected.
AIS-V	Virtual Tributary path AIS has been detected.

Getting Started
Monitoring Status

RDI-V VT path RDI has been detected.

**POINTER
ADJUST** A pointer change in the foreground signal has been detected.

Index

A

AIS alarm indicator, 28

Alarm Indicator

AIS, 28

Errors, 28

Frame loss, 28

HP-RDI, 29

Jitter unlock, 28

LOF/OOF, 29

Loss of cell sync, 28

LP-RDI, 29

M/Frame loss, 28

MS-RDI, 29

Pattern Loss, 28

Pointer adjust, 29

Remote alarm, 28

Remote M/frame alarm, 28

Selected cell not received, 28

Signal Loss, 28

TU-AIS, 29

TU-LOP, 29

VC Alarm, 28

VP alarm, 28

Alarm Indicators

ATM, 28

General, 28

Jitter hits, 28

PDH / DS_n, 28

SDH, 29

ATM Alarm Indicators, 28

ATM Alarms

Loss of Cell Sync, 28

Selected Cell Not Received, 28

VC Alarm, 28

VP Alarm, 28

ATM layer selections with pop-up menus,
21

AU-AIS Alarm IndicatorAlarm Indicator

AU-AIS, 29

Auto Setup key, 25

B

Binary entry with pop-up menu, 18

C

Cancel key, 25

Changing settings on displays, 14

Changing settings with soft keys, 14

Clock Loss Alarm IndicatorAlarm Indica-
tor

Clock loss, 29

Cursor

Introduction to, 14

Moving, 14

D

Date and time entry with pop-up menu, 16

Display on a monitor, 24

Displaying list of, 8

Displays

Changing settings on, 14

DS_n Alarm Indicators, 28

E

Errors Alarm Indicator, 28

F

Folder

Selecting, 13

Frame Loss Alarm Indicator, 28

G

Graph key, 8

Graphic displays as a selection aid, 20

H

Hexadecimal entry with pop-up menu, 16

History Keys, 27

HP-RDI Alarm Indicator, 29

I

Indicators

Front Panel, 28

Integer entry with pop-up menu, 16

J

Jitter Alarm Indicators, 28

Jitter hits alarm indicator, 28

Jitter Unlock alarm indicator, 28

K

Keys

Auto Setup, 25

Cancel, 25

Graph, 8

Local, 25

Other, 8

Paper Feed, 25

Print Now, 25

Receive, 8

Reset History, 27

Results, 8

Run / Stop, 25

Set, 25

Show History, 27

Transmit, 8

L

Local key, 25

LOF alarm indicator, 29

Loss of Cell Sync Alarm Indicator, 28

Loss Of Pointer Alarm IndicatorAlarm In-
dicator

AU-LOP, 29

LP-RDI Alarm Indicator, 29

M

M/Frame Loss Alarm Indicator, 28

Menus, pop-up, obtaining, 16

Monitor,connecting, 24

MS-AIS Alarm IndicatorAlarm Indicator

MS-AIS, 29

MS-RDI Alarm Indicator, 29

Multiple windows

Moving between, 10

Selecting the undisplayed window, 11

Multiple/single window selection, 9

O

OOF alarm Indicator, 29

Options fitted, 8

Other key, 8

P

Paper Feed key, 25

Pattern Loss Alarm Indicator, 28

PDH / DS_n Alarms

AIS, 28

Frame Loss, 28

M/Frame Loss, 28

Remote Alarm, 28

Remote M/Frame Alarm, 28

PDH Alarm Indicators, 28

Pictorial displays as a selection aid, 20

Index

Pointer Adjust Indicator, 29
Pop-up menus
 As alternative to soft keys, 19
 Modifying displays with, 16
Print Now key, 25

R

Receive key, 8
Remote Alarm Indicator, 28
Remote M/Frame Alarm Indicator, 28
Reset History key, 27
Results key, 8
Run / Stop Key, 25

S

SDH Alarm Indicators, 29
SDH Alarms
 AU-AIS, 29
 Clock Loss, 29
 HP-RDI, 29
 Loss Of Pointer, 29
 LP-RDI, 29
 MS-AIS, 29
 MS-RDI, 29
 Pointer Adjust, 29
 TU-AIS, 29
SDH payload mapping with pictorial display, 20
Selectable display values, 15
Selected Cell Not Received Alarm Indicator, 28
Set key, 25
Settings
 changing with soft keys, 14
Show History key, 27
Signal Loss Alarm Indicator, 28
Single/multiple window selection, 9
Soft key alternative, pop-up menu, 19
Soft keys
 using, 14
Status Indicators, 27

T

Text entry with pop-up menu, 16
Trace data entry with pop-up menu, 16
Transmit key, 8
TU-AIS Alarm Indicator, 29

V

VC Alarm Indicator, 28
VP Alarm Indicator, 28

Hewlett-Packard Sales and Service Offices

If you need technical assistance with a Hewlett-Packard test and measurement product or application please contact the Hewlett-Packard office or distributor in your country.

Asia Pacific:

Hong Kong:

Tel: (852) 2599 7889

India:

Tel: (91-11) 682-6000

Japan:

Hewlett-Packard Japan Ltd.
Measurement Assistance Center
9-1, Takakura-Cho, Hachioji-Shi,
Tokyo 192-8510, Japan

Tel: (81) 426-56-7832

Fax: (81) 426-56-7840

Korea:

Tel: (82-2) 769 0800

Malaysia:

Tel: (60-3) 291 0213

Philippines:

Tel: (63-2) 894 1451

People's Republic of China:

Tel: (86-10) 6505 0149

Singapore:

Tel: (1800) 292 8100

Taiwan:

Tel: (886-3) 492 9666

Thailand:

Tel: (66-2) 661 3900

For countries in Asia Pacific not listed, contact:

Hewlett-Packard Asia Pacific Ltd
17-21/F Shell Tower, Times Square,
1 Matheson Street
Causeway Bay
Hong Kong
Tel: (852) 2599 7777
Fax: (852) 2506 9285

Australia/New Zealand:

Hewlett-Packard Australia Ltd.
31-41 Joseph Street
Blackburn, Victoria 3130
Australia
Tel: 1 800 629 485

Canada:

Hewlett-Packard Canada Ltd.
5150 Spectrum Way
Mississauga, Ontario
L4W 5G1
Tel: (905) 206 4725

Europe, Africa and Middle East:

Austria:

Tel: (0)1 25000-0

Belgium and Luxembourg:

Tel: (02) 778 3417

Baltic Countries:

Tel: (358) 08872 2100

Czech Republic:

Tel: 420-2-4743111

Denmark:

Tel: 45 99 10 00

Hewlett-Packard Sales and Service Offices (cont'd)

Finland:

Tel: (90) 88 721

France:

Tel: (0)1 69.82.60.60

Germany:

Tel: (0180) 532 62-33

Greece:

Tel: 30-1-7264045

Hungary:

Tel: 36-1-4618219

Ireland:

Tel: (01) 284 4633

Israel:

Tel: 972-3-5380333

Italy:

Tel: 02 - 92 122 241

Netherlands:

Tel: (020) 547 6669

Norway:

Tel: (22) 73 57 50

Poland:

Tel: 48-22-6087700

Portugal:

Tel: (11) 482 85 00

Russia:

Tel: (7/095) 928 6885

Fax: (7/095) 916 9844

South Africa:

Tel: 27-22-8061000

Spain:

Tel: (34) 1 631 1323

Sweden:

Tel: (08) 444 22 77

Switzerland:

Tel: (01) 735 7111

Turkey:

Tel: 90-212-2245925

United Kingdom:

Tel: (01344) 366 666

***For countries in Europe/Middle East
and Africa not listed, contact:***

Hewlett-Packard
International Sales Europe
Geneva, Switzerland
Tel: +41-22-780-4111
Fax: +41-22-780-4770

Latin America:

Hewlett-Packard
Latin American Region Headquarters
5200 Blue Lagoon Drive
9th Floor
Miami, Florida 33126
U.S.A.
Tel: (305) 267-4245
Tel: (305) 267-4220
Fax: (305) 267-4288

United States:

Hewlett-Packard Company
Test and Measurement Organization
5301 Stevens Creek Blvd.
Bldg. 51L-SC
Santa Clara, CA 95052-8059
Tel: 1 800 452 4844

About This Edition

This is the 1st edition of the 37717-90401 manual. It documents the product as of March 1998. Edition dates are as follows:

1st Edition, March 1998

© Copyright Hewlett-Packard Ltd. 1998. All rights reserved. Reproduction, adaption, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

In This Book

This book demonstrates the basic operation of the instrument. It tells you how to select the displays that you want and how to use them to modify the instrument functions.

This guide also tells you about the front panel key functions, the indicators and the connectors.

