

Operating and Service Manual

HP 4935A Transmission Impairment Measuring Set

Serial Numbers

This manual applies to instruments with serial numbers prefixed:

:2846A

Copyright Hewlett-Packard Co./Colorado Telecommunications Division 1987
5070 Centennial Blvd., P.O. Box 7050, Colorado Springs, Colorado 80933

ALL RIGHTS RESERVED

Manual Part No: 04935-90029
Microfiche Part No: 0493598804

Printed Nov. 1966
Printed in U.S.A.

WARNING**SAFETY**

If this instrument is to be energized via an autotransformer for voltage reduction, make sure the common terminal is connected to the earthed pole of the power source.

BEFORE SWITCHING ON THIS INSTRUMENT, the protective earth terminals of this instrument must be connected to the protective conductor of the (mains) power cord. The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. The protective action must not be negated by use of an extension cord (power cable) without a protective conductor (grounding).

Make sure that only fuses with the required rated current and of the specified type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the short-circuiting of fuse holders must be avoided.

Whenever it is likely that the protection offered by fuses has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

GROUNDING

Any interruption of the protective (grounding) conductor (inside or outside the instrument) or disconnecting the protective earth terminal can make this instrument dangerous. Intentional interruption is prohibited.

HIGH VOLTAGE

Any adjustment, maintenance, and repair of the opened instrument under voltage should be avoided as much as possible and, when inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

Capacitors inside the instrument may still be charged even if the instrument has been disconnected from its source of supply.

Adjustments and service described herein are performed with power supplied to the instrument while protective covers are removed. Energy available at many points, if contacted, result in personal injury.

CAUTION**LINE VOLTAGE**

BEFORE SWITCHING ON THIS INSTRUMENT, make sure instrument requirements match the voltage of the power source.

GROUNDING

BEFORE SWITCHING ON THIS INSTRUMENT, ensure that all devices connected to this instrument are connected to the protective (earth) ground.

BEFORE SWITCHING ON THIS INSTRUMENT, ensure that the line power (mains) plug is connected to a three-conductor line power outlet that has a protective (earth) ground. (Grounding one conductor of a two-conductor outlet is not sufficient.)

IEC SYMBOLS

The following is a list of key IEC symbols used by Hewlett-Packard. All symbols are normally applied adjacent to the device requiring the symbol. They shall not be placed on removable parts likely to be detached or lost.



Instruction Manual symbol: If necessary, to preserve the apparatus from damage (it is necessary for the user to refer to the instruction manual, then shall the apparatus be marked with this symbol (IEC 348:16a).



Terminal devices fed from the interior by live voltages that may be dangerous when connecting to or disconnecting from those devices shall be marked with the flash shown when the voltage exceeds 1 KV: The flash shall be red (IEC 348:18c).



Earth Terminals. If the use of this symbol for the protective earth terminal is not permitted by National Standards, it may be modified, for example, by being placed inside a circle (IEC 348:18a).




AC current (IEC 117-1, symbol No. 3).



DC current (IEC 117-1, symbol No. 2).



AC or DC current (IEC 117-1, symbol No. 8).



Frame or chasis connection. The hatching may be completely or partly omitted if there is no ambiguity. If the hatching is omitted, the line representing the frame or chassis shall be thicker (IEC 117-1, symbol No. 87).

A

Ampere (IEC 1174, symbol No. 356).

V

Volt (IEC 1174, symbol No. 357).

VA

Voltampere (IEC 1174, symbol No. 358).

w

Watt (IEC 1174, symbol No. 360).

Wh

Watt-hour (IEC 1174, symbol No. 361).

VAh

Voltampere-hour (IEC 1174, symbol No. 362).

Hz

Hertz (IEC 1174, symbol No. 365).



Contactor, normally closed. In order to avoid confusion with the symbol for a capacitor, the distance between the horizontal (as drawn here) lines should be at least equal to the length of those lines (IEC 117-3, symbol No. 215.21).

In addition the following describes the use of Warnings, Cautions and Notes used in HP Automatic Test System Manuals.

Warnings, cautions and notes. (All) Warnings and cautions shall precede the text to which each applies but notes may precede or follow applicable text depending on the material to be highlighted. Warnings, cautions, and notes shall not contain procedural steps nor shall they be numbered. When a warning, caution, or note consists of two or more paragraphs, the heading WARNING, CAUTION, NOTE, shall not be repeated above each paragraph. If it is ever necessary to precede a paragraph by both a warning and a note, or a caution and a note, etc. they shall appear in the sequence as noted, namely, warnings, cautions, notes. Such inserts in the text shall be short and concise and be used to emphasize important and critical instructions.



An operating procedure, practice, etc. which, if not correctly followed, could result in personal injury or loss of life.



An operating procedure, practice, etc. which, if not strictly observed, could result in damage to, or destruction of, equipment.

NOTE: An operating procedure, condition, etc. which it is essential to highlight.

Health hazards precaution data. (All) When hazardous chemicals or adverse health factors, in the environment or use of the equipment cannot be eliminated, appropriate precautionary requirements shall be included.

TABLE OF CONTENTS

Section	Title	Page	Section	Title	Page
I. GENERAL INFORMATION			3-48.	Signal Frequency Interference	3-24
1-1.	Introduction..	1-1	3-52.	Impulse Noise..	3-24
1-3.	General Description..	1-1	3-55.	Noise-to-Ground Measurement..	3-25
1-5.	Instrument Identification..	1-1	3-59.	Peak-to-Average Ratio Measurement.....	3-2 5
1-7.	Specifications..	1-1	IV. PERFORMANCE TESTS		
1-9.	Safety Considerations..	1-4	4-1.	Introduction	4-1
1-12.	Related Manuals..	1-4	4-3.	Equipment Required..	4-1
1-14.	User Repair..	1-4	4-5.	Test Record	4-1
1-16.	Options and Accessories..	1-4	4-7.	Self Check	4-1
1-19.	Warranty..	1-4	4-9.	Performance Verification..	4-1
1-21.	Recommended Test Equipment..	1-4	4-12.	Performance Tests..	4-2
1-23.	Battery Operation (Opt.s 001 & 003)	1-6	4-13.	Transmitter Flatness at +10dBm.....	4-2
1-26.	Charging the Batteries..	1-6	4-14.	Transmitter Flatness at -40dBm..	4-4
1-29.	Operating Temperature..	1-6	4-15.	Receiver Accuracy at t 11dBm & -40dBm.....	4-8
II. INSTALLATION			4-16.	Autorange Test..	4-10
2-1.	Introduction..	2-1	4-17.	Filter Tests..	4-11
2-3.	Initial Inspection..	2-1	4-18.	Impulse Noise DAC Test..	4-14
2-6.	Preparation for Use..	2-1	4-19.	Count Limit Test..	4-16
2-7.	Power Requirements..	2-1	4-20.	Termination Impedance Test	4-17
2-9.	Line Voltage Selection..	2-1	4-21.	Hold Tone Dropout Detector Test.....	4-19
2-11.	Power Cable..	2-2	4-22.	Hold Circuit Test	4-20
2-13.	Operating Environment..	2-2	4-23.	Distortion Test	4-21
2-16.	Storage and Shipment..	2-2	4-24.	P/AR Test..	4-25
2-17.	Environment..	2-2	4-25.	Noise-to-Ground(Std. & Opt. 001).....	4-26
2-19.	Instrument Packaging	2-2	V. ADJUSTMENTS/CALIBRATIONS		
III. OPERATION			5-1.	Introduction	5-1
3-1.	Introduction	3-1	5-3.	Safety Considerations..	5-1
3-3.	Self Check	3-1	5-5.	Equipment Required..	5-1
3-5.	Error Messages..	3-1	5-6.	Instrument Access..	5-1
3-7.	Operating Instructions	3-6	5-9.	Adjustment Locations..	5-1
3-9.	Measurements	3-7	5-11.	Adjustments..	5-2
3-10.	Measurement Principles	3-17	5-13.	t 5V, + 14V, and -14V Power Supply Adjustments	5-3
3-12.	Input-Output Switching	3-17	5-14.	Output Level & Transmit Monitor Loop Adjustments..	5-4
3-19.	Level and Frequency Measurements..	3-18	5-15.	Receiver Adjustments..	5-5
3-21.	1000 Hz Loss..	3-18	5-17.	Notch Filter Adjustments..	5-7
3-24.	Frequency Shift	3-18	5-18.	AI3 P/AR Filter and Latch Adjustments(Opt.s 001 & 003).	5-8
3-26.	Attenuation Distortion..	3-18	5-19.	Hold Circuit Adjustments..	5-9
3-30.	SF Skip	3-19			
3-32.	Message Circuit Noise Measurements.....	3-19			
3-40.	Noise Measurements	3-22			
3-42.	Noise-with-Tone (Notched Noise)	3-22			
3-45.	Signal-to Noise Measurement..	3-22			

TABLE OF CONTENTS (cont)

Section	Title	Page	Section	Title	Page
VI. REPLACEABLE PARTS			8-80.	Input Select/Notch Filter/ 25 dB Amp..	8-17
6-1.	Introduction..	6-1	8-85.	Noise Filter Circuitry..	8-17
6-3.	Replaceable Parts List..	6-1	8-97.	Level Detectors ..	8-19
6-5.	Ordering Information ..	6-1	8-100.	Impulse Noise Detectors..	8-19
VII. MANUAL CHANGES			8-102.	Transmitter ..	8-19
7-1.	Introduction ..	7-1	8-104.	Test Signal Generation Method..	8-20
7-3.	Manual Changes..	7-1	8-113.	Circuit Description..	8-21
7-6.	Manual Change Instructions.....	7-1	8-126.	Power Supply Theory..	8-23
VIII. SERVICE			8-128.	AC Line Supplies ..	8-23
8-1.	General Information ..	8-1	8-131.	Regulators..	8-24
8-8.	How Measurements are Made ..	8-3	8-139.	Charger Board Theory of Operation.....	8-25
8-10.	Level and Frequency..	8-4	8-141.	Battery Charging..	8-26
8-13.	Noise..	8-4	8-144.	Power Source Selection..	8-26
8-16.	Noise-with-Tone ..	8-4	8-146.	Relay Drive Circuitry..	8-26
8-19.	Signal-to-Noise..	8-5	8-148.	Inhibit Circuit ..	8-26
8-22.	Impulse Noise ..	8-5	8-153.	Maintenance ..	8-28
8-26.	Noise-to-Ground (Std & Opt. 001).....	8-6	8-155.	Periodic Maintenance..	8-28
8-29.	Peak-to-Average Ratio: P/AR (Opt.s 002 & 003) ..	8-6	8-157.	Failure Maintenance..	8-28
8-32.	Frequency Measurement..	8-6	8-159.	Component Replacement ..	8-28
8-34.	Level Measurement.....	8-7	8-164.	Soldering ..	8-28
8-38.	How to Compute Frequency and Level Measurement ..	8-8	8-166.	Cleaning..	8-28
8-39.	Level Calculation Example..	8-8	8-168.	Disassembly ..	8-29
8-42.	Control Theory of Operation..	8-11	8-169.	Remove Case..	8-29
8-44.	Microprocessor to Instrument..	8-11	8-171.	Receiver Board/Shield Plate/ Battery Charger Board Disassembly..	8-29
8-45.	System Latches..	8-11	8-173.	Switchboard/Front Panel Removal..	8-30
8-48.	Instrument to Microprocessor..	8-12	8-175.	Transmitter Board Removal..	8-30
8-51.	Operator to Microprocessor ..	8-12	8-177.	Reassembly..	8-31
8-52.	Keyboard Interrupt..	8-12	8-179.	Power Supply Troubleshooting..	8-33
8-54.	Receiver Impedance Switches..	8-12	8-181.	Minimum Core Troubleshooting..	8-34
8-57.	Microprocessor to Operator..	8-13	8-183.	Procedure ..	8-35
8-58.	Displays..	8-13	8-186.	Display Troubleshooting..	8-36
8-60.	Instrument to Operator ..	8-13	8-189.	Control Troubleshooting.....	8-36
8-62.	Monitor Amp ..	8-13	8-190.	Troubleshoot Keyscan/ Interrupt Circuitry..	8-36
8-64.	Beep Generator ..	8-13	8-192.	Control and Counting Section Troubleshooting..	8-36
8-66.	Operator to Instrument ..	8-13	8-194.	Transmitter Troubleshooting ..	8-37
8-68.	Miscellaneous Circuitry.....	8-13	8-196.	Transmit Clock Generator..	8-37
8-73.	Receiver Theory of Operation.....	8-15	8-200.	Transmitter Signature Analysis Procedure..	8-37
8-76.	I/O Switching/Hold Circuits/ Termination ..	8-16	8-202.	Digital-to-Analog Conversion ..	8-39
			8-204.	Filter and Signal Select Circuitry.....	8-40
			8-207.	Output Amplifier..	8-42
			8-210.	Transmit Monitor..	8-43
			8-212.	Receiver Troubleshooting..	8-43

TABLE OF CONTENTS

Section	Title	Page	Section	Title	Page
8-217.	Setup..	.8-44	8-259.	Relay Drive Circuitry, Low Voltage Inhibit Circuitry..	.8-53
8-219.	Overall Transmit Monitor Test8-44	8-261.	Inhibit Circuitry AC and Low Voltage..	.8-54
8-222.	Transmit Monitor Signal8-45	8-263.	Delay and Relay Drive Circuitry..	.8-54
8-225.	Noise Filter..	.8-45	8-265.	AC and Low Voltage Inhibit Troubleshooting8-55
8-227.	Simplified Autorange Check..	.8-46	8-267.	Service Aids8-57
8-229.	Detector Select..	.8-47	8-268.	Service Selection of Input/ Notch Filter/25dB Amp.8-57
8-232.	Inputs from Front Panel/ Notch Filter/ 25dB Amp/Tone Dropout Signal Path..	.8-47	8-270.	Procedure..	.8-57
8-233.	Setup..	.8-48	8-272.	Service Selection of Noise Filters by Hand..	.8-58
8-235.	Input Transformer..	.8-48	8-274.	Procedure8-58
8-237.	Noise-to-Ground Input Path (Noise-to-Ground Units only)8-48	8-276.	Service Selection of Autorange Gain for Service..	.8-58
8-239.	Tone Dropout Signal Path..	.8-49	8-278.	Procedure8-58
8-242.	Notch Filter8-49	8-279.	Hand Selection of A3C57 and A3C160 (A3C57 and A3C160 for P/AR Units) for Desired Frequency Response..	.8-59
8-246.	Noise Filters8-49	8-282.	Hand Selection of C57 and C1608-60
8-248.	Autorange8-49	8-283.	Filters: Response of Each Stage.....	.8-60
8-250.	Detector Troubleshooting..	.8-50			
8-252.	Impulse Noise Circuitry..	.8-50			
8-254.	Charger Board Troubleshooting8-52			
8-255.	Procedure8-52			
8-257.	Charge Circuitry/Charge Inhibit Circuitry8-52			

LIST OF ILLUSTRATIONS

Section	Title	Page	Section	Title	Page
1-1.	Model 4935A Transmission Impairment Measuring Set	1-0	5-1.	Output Level and Transmit Monitor Loop Adjustments..	5-4
1-2.	Charge Acceptance at Various Temperatures.....	1-6	5-2.	Receiver Adjustments..	5-5
2-1.	Line Voltage Selection..	2-1	5-3.	Hold Circuit Adjustments..	5-9
3-1.	Front and Rear Panel Controls/ Connectors/Indicators..	3-2	6-1.	Exploded View Case and Covers..	6-4
3-2.	Measurements.....	3-6	6-2.	Exploded View Assemblies and Cables.....	6- 5
3-3.	Input-Output Switching	3-17	6-3.	Exploded View Battery Option..	6-7
3-4.	Level and Frequency Measurements..	3-18	7-1.	A2 Switch Board Component Locator.. ..	7-10
3-5.	Message Circuit Noise Measurements	3-19	7-2.	A5 Charger Board Component Locator.....	7-14
3-6.	C-Message Weighting Characteristic..	3-20	7-3.	Partial A5 Charger Board Schematic.....	7-14
3-7.	3 kHz Flat Weighting Characteristic.....	3-20	7-4.	A14 Transmitter Board Component Locator	7-15
3-8.	Program Weighted filter..	3-21	7-5.	Partial A4 and A14 Schematic	7-16
3-9.	15 kHz Flat Filter	3-21	7-6.	A14 P/AR Transmitter Board Component Locator..	7-16
3-10.	50kBit Filter.....	3-22	7-7.	A4 Transmitter Board Component Locator	7-17
3-11.	C-Message Weighting with Notch Characteristic..	3-23	7-8.	Partial Power Supply Schematic.....	7-18
3-12.	Signal-to-Noise Measurement	3-23	7-9.	A13 P/AR Receiver Board Component Locator	7-19
3-13.	Impulse Noise Waveform Representation..	3-24	7-10.	A3 Receiver Board Component Locator	7-20
3-14.	Noise-to-Ground Related to Message Circuit Noise	3-25	7-11.	A3 Receiver Board Schematic (Sheet 1 of 2)	7-21
3-15.	P/AR Transmit Signal Frequency Spectrum..	3-26	7-12.	A3 Receiver Board Schematic (Sheet 2 of 2)	7-23
3-16.	P/AR Transmit Signal Envelope.....	3-26	7-13.	A13 P/AR Receiver Board Component Locator	7-25
4-1.	Transmitter Flatness Test at + 10 dBm	4-2	7-14.	A3 Receiver Board Component Locator	7-26
4-2.	Transmitter Flatness Test at -40 dBm	4-4	7-15.	A3 Receiver Board Schematic Diagram (Partial).	7-27
4-3.	Receiver Test at + 11 dBm and -40 dBm	4-8	7-16.	A4 Transmitter Board Component Locator	7-28
4-4.	Autorange Test	4-10	7-17.	A14 Transmitter Board Component Locator	7-28
4-5.	Filter Tests..	4-11	7-18.	A4 Transmitter Board Schematic Diagram	7-29
4-6.	Impulse Noise DAC Test	4-14	7-19.	A14 Transmitter Board Schematic Diagram (Partial).	7-30
4-7.	Count Limit Test	4-16	7-20.	A14 Transmitter Board Schematic Diagram (Partial).	7-30
4-8.	Termination Impedance Test.....	4-17	7-21.	A2 Switchboard Component Locator..	7-32
4-9.	Hold Tone Dropout Detector Test	4-19	7-22.	A2 Switchboard Schematic Diagram.....	7-33
4-10.	Hold Circuit Test..	4-20	7-23.	A3 Receiver Board Component	
4-11.	Distortion Test	4-21			
4-12.	-40 dBm Distortion Test..	4-22			
4-13.	Filter Circuits	4-23			
4-14.	P/AR Test..	4-25			
4-15.	Noise-to-Ground Test..	4-26			

LIST OF ILLUSTRATIONS

Section	Title	Page	Section	Title	Page
	Locator..	.7-34	8-19.	P/AR Signal Frequency Spectrum	8-41
7-24.	A13 Receiver Board Component		8-20.	P/AR Transmit Signal Envelope..	8-42
	Locator..	.7-35	8-21.	20 Hz Waveform	8-43
7-25.	Receiver Board Schematic		8-22.	Transmit Monitor Test Output	8-44
	Diagram (Sheet 1 of 2)7-36	8-23.	4935A Signal Flow Block Diagram..	8-67
7-26.	Receiver Board Schematic		8-24.	A1 Front Panel Schematic Diagram..	8-69
	Diagram (Sheet 2 of 2)7-37	8-25.	A2 Switchboard Component Locator..	8-70
7-27.	A4 Transmitter Board Component		8-26.	A2 Switchboard Schematic Diagram..	8-71
	Locator..	.7-38	8-27.	A3 Receiver Board Component	
7-28.	A14 Transmitter Board Component			Locator	8-72
	Locator7-39	8-28.	A13 Receiver Board Component	
7-29.	A4 Transmitter Board Schematic			Locator	8-72
	Diagram (Sheet 1 of 2)7-40	8-29.	A3 Receiver Board Schematic	
7-30.	A4 Transmitter Board Schematic			Diagram (Sheet 1 of 4).....	8-73
	Diagram (Sheet 2 of 2)7-41	8-30.	A3 Receiver Board Schematic	
7-31.	A5 Charger Board Component Locator	7-4 2		Diagram (Sheet 2 of 4).....	8-75
7-32.	A5 Charger Board Schematic Diagram	7-4 3	8-31.	A3 Receiver Board Schematic	
				Diagram (Sheet 3 of 4).....	8-77
8-1.	4935A Main Block Diagram..	8-1	8-32.	A3 Receiver Board Schematic	
8-2.	Voltage-to-Frequency Conversion			Diagram (Sheet 4 of 4).....	8-79
	Characteristics	8-7	8-33.	A4 Transmitter Board Component	
8-3.	Voltage-to-Frequency Conversion			Locator	8-80
	output	8-8	8-34.	A14 Transmitter Board Component	
8-4.	Frequency and Level Measurement			Locator	8-80
	Timing..	8-9	8-35.	A4 Transmitter Board Schematic	
8-5.	Control Circuitry Block Diagram.....	8-11		Diagram (Sheet 1 of 5).....	8-81
8-6.	Receiver Block Diagram..	8-14	8-36.	A4 Transmitter Board Schematic	
8-7.	Switchboard Block Diagram	8-15		Diagram (Sheet 2 of 5).....	8-83
8-8.	Input-Output Switching	8-16	8-37.	A4 Transmitter Board Schematic	
8-9.	Filter Block Diagram	8-17		Diagram (Sheet 3 of 5).....	8-85
8-10.	Autorange Block Diagram	8-18	8-38.	A4 Transmitter Board Schematic	
8-11.	Stair-Step Sinewave..	8-20		Diagram (Sheet 4 of 5).....	8-87
8-12.	Transmitter Block Diagram	8-21	8-39.	A4 Transmitter Board Schematic	
8-13.	Power Supply Block Diagram..	8-23		Diagram (Sheet 5 of 5).....	8-89
8-14.	Charger Board Block Diagram..	8-25	8-40.	A5 Charger Board Component Locator....	8-90
8-17.	Instrument Troubleshooting	8-32	8-41.	A5 Charger Board Schematic Diagram....	8-9 1
8-18.	Stair-Step Sinewave..	8-39			

LIST OF TABLES

Table	Title	Page	Table	Title	Page
1-1.	Specifications.....	1-2	7-1.	Manual Changes.....	7-1
1-2.	Recommended Test Equipment..	1-5	8-1.	Measurements Summary..	8-3
1-3.	List of Parts Used for Performance Tests	1-5	8-2.	Noise Amplification.....	8-5
2-1.	HP Plug Styles.....	2-3	8-3.	Reference Signatures..	8-38
4-1.	Transmitter Flatness at +10 dBm	4-3	8-4.	Wideband Filter Response	8-40
4-2.	Transmitter Flatness at -40 dBm	4-5	8-5.	5 kHz Low Pass Filter Response	8-40
4-3.	Abbreviated Transmitter Flatness.....	4-7	8-6.	Output Select MUX..	8-41
4-4.	Receiver Accuracy Test Table	4-9	8-7.	Transmit Monitor Test.....	8-43
4-5.	Abbreviated Receiver Accuracy Test Table.....	4-9	8-8.	A3U1B Voltages	8-51
4-6.	Autorange Test	4-10	8-9.	TP3 Voltages	8-51
4-7.	C-Message Filter Test.....	4-11	8-10.	Hand Selection of Noise Filters	8-58
4-8.	3 kHz Filter Test.....	4-12	8-11.	Autorange States.....	8-59
4-9.	15 khz flat Filter Test.....	4-12	8-12.	Hand Selection of C57 and C160.....	8-60
4-10.	Program Filter Test.....	4-12	8-13.	4935A C-Message Filter.....	8-61
4-11.	50 kBit Filter Test.....	4-13	8-14.	4935A 3kHz Filter.....	8-61
4-12.	Notch Filter Test.....	4-13	8-15.	4935A 15 kHz Filter.....	8-61
4-13.	Impulse Noise DAC Test	4-15	8-16.	4935A Program Filter.....	8-61
4-14.	Filter Circuit Parts List.....	4-23	8-17.	4935A 50 kBit Filter.....	8-62
4-15.	Abbreviated Distortion Test	4-24	8-18.	4935A Notch Filter.....	8-62
4-16.	P/AR Filter Responses	4-25	8-19.	4935A P/AR Filter	8-62
6-1.	Reference Designation and Abbreviations	6-2	8-20.	4935A 150 kHz Low Pass Filter	8-62
6-2.	Manufacturer Code List	6-8	8-21.	4935A 110 kHz Low Pass Filter	8-63
6-3.	Replaceable Parts.....	6-9	8-22.	Bell 41009 C-Message Filter.....	8-63
			8-23.	Bell 41009 3 kHz Filter.....	8-64
			8-24.	Bell 41009 15 kHz Filter.....	8-64
			8-25.	Bell 41009 Program Filter.....	8-64
			8-26.	Bell 41009 50 kBit Filter.....	8-65
			8-27.	Bell 41009 P/AR Filter	8-65
			8-28.	Bell 41009 Notch Filter.....	8-65



Figure 1-1. Model 4935A T ransmission Impairment Measuring Set

SECTION I

GENERAL INFORMATION

I-1. INTRODUCTION

1-2. This Operating and Service manual contains information to install, operate, maintain, and service the HP Model 4935A Transmission Impairment Measuring Set (TIMS). Figure 1-1 shows the HP Model 4935A with cover and power cord. The manual is divided into eight major sections which provide the following information:

SECTION I. GENERAL INFORMATION. Provides identification, specifications, related manuals, and user-repair information.

SECTION II. INSTALLATION. Contains unpacking and inspection information, power requirements, packaging, and storage instructions.

SECTION III. OPERATION. Includes an explanation of controls, connectors, indicators, and an automatic self check procedure. Describes measurement principles and front panel instructions for making each measurement.

SECTION IV. PERFORMANCE TESTS. Gives test procedures required to verify that the instrument's performance is in accordance with the specifications.

SECTION V. ADJUSTMENTS. Provides adjustment and calibration procedures.

SECTION VI. REPLACEABLE PARTS. Lists and identifies the instrument assemblies and replaceable parts.

SECTION VII. MANUAL CHANGES. Contains information to backdate the manual for instruments with earlier serial numbers.

SECTION VIII. SERVICE. Includes theory of operation, troubleshooting procedures, flowcharts, component locators, and schematic diagrams.

1-3. GENERAL DESCRIPTION

1-4. HP Model 4935A is a Transmission Impairment Measuring Set (TIMS) which measures wideband data and voice impairments. The frequency range over which measurements are made is 20 Hz to 110 kHz, in steps of 1, 10, 100, 1000, or 10,000 Hz. There are four permanently stored, fixed frequencies -404, 1004, 2804, and 2713 Hz. Any other four frequencies may be temporarily assigned and stored by the user.

1-5. INSTRUMENT IDENTIFICATION

1-6. A 10 character serial number (OOOAOOOO) is inscribed on the rear panel. The first four digits and the letter are the serial prefix. The serial prefix will change only if changes are made to the instrument; a Manual Change Sheet will be included with the manuals of any instruments affected. The last five numbers form the serial suffix which is unique to each instrument.

1-7. SPECIFICATIONS

1-8. Instrument specifications are listed in Table I-1.

Table I-I. Specifications

TRANSMITTER			RECEIVER																																																																					
Frequency			Frequency																																																																					
Frequency Range 20 Hz to 110 kHz			Frequency Range.. 20 Hz to 110 kHz																																																																					
	Resolution	Accuracy		Resolution	Accuracy																																																																			
20-99,999 Hz	1 Hz	± .005% of output frequency	20-9,999 Hz	1 Hz	±0.5 Hz																																																																			
100-110 kHz	10 Hz	± .012% of output frequency	10-110 kHz	10 Hz	±5 Hz																																																																			
Store and Recall Functions																																																																								
SK Skip . . . At power up skips a band from 2450-2750 Hz																																																																								
Frequencies At power up F1 is 404 Hz																																																																								
			F2 is 1004 Hz																																																																					
			F3 is 2804 Hz																																																																					
			F4 is 2713 Hz																																																																					
Level			Level																																																																					
Range -40 to +13 dBm			Range -60 to +13 dBm																																																																					
Resolution 0.1 dB			Resolution 0.1 dB																																																																					
Flatness (in dB)			Accuracy (in dB)																																																																					
<p style="text-align: center;">FREQUENCY, Hz</p> <table border="1"> <tr> <td></td> <td>20</td> <td>200</td> <td>15k</td> <td>60k</td> <td>85k</td> <td>110k</td> </tr> <tr> <td>Output Level (dBm)</td> <td>+13</td> <td><i>±0, -3.0</i></td> <td><i>±0.2</i></td> <td><i>±0.5</i></td> <td><i>±0.7</i></td> <td><i>±1.5</i></td> </tr> <tr> <td></td> <td>+10</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td>0</td> <td>±1.0</td> <td>±0.2</td> <td>±0.5</td> <td>±0.5</td> <td>±1.5</td> </tr> <tr> <td></td> <td>-40</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </table>				20	200	15k	60k	85k	110k	Output Level (dBm)	+13	<i>±0, -3.0</i>	<i>±0.2</i>	<i>±0.5</i>	<i>±0.7</i>	<i>±1.5</i>		+10							0	±1.0	±0.2	±0.5	±0.5	±1.5		-40						<p style="text-align: center;">FREQUENCY (Hz)</p> <table border="1"> <tr> <td></td> <td>20</td> <td>50</td> <td>200</td> <td>15k</td> <td>60k</td> <td>85k</td> <td>110k</td> </tr> <tr> <td>Input Level (dBm)</td> <td>+13</td> <td>±1.0</td> <td>±0.5</td> <td>±0.2</td> <td>±0.5</td> <td>±0.5</td> <td>±2.0</td> </tr> <tr> <td></td> <td>-40</td> <td>±1.0</td> <td>±0.8</td> <td>±0.4</td> <td>±0.8</td> <td>±1.0</td> <td>±2.0</td> </tr> <tr> <td></td> <td>-60</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </table>				20	50	200	15k	60k	85k	110k	Input Level (dBm)	+13	±1.0	±0.5	±0.2	±0.5	±0.5	±2.0		-40	±1.0	±0.8	±0.4	±0.8	±1.0	±2.0		-60						
	20	200	15k	60k	85k	110k																																																																		
Output Level (dBm)	+13	<i>±0, -3.0</i>	<i>±0.2</i>	<i>±0.5</i>	<i>±0.7</i>	<i>±1.5</i>																																																																		
	+10																																																																							
	0	±1.0	±0.2	±0.5	±0.5	±1.5																																																																		
	-40																																																																							
	20	50	200	15k	60k	85k	110k																																																																	
Input Level (dBm)	+13	±1.0	±0.5	±0.2	±0.5	±0.5	±2.0																																																																	
	-40	±1.0	±0.8	±0.4	±0.8	±1.0	±2.0																																																																	
	-60																																																																							
Distortion: (in dB from fundamental) (Includes harmonics, spurious and background noise within a filter with a 3 dB bandwidth of 4 kHz or 4 f ₀ , whichever is greater.)			Receiver accuracy not specified below 500 Hz when using 13562 termination.																																																																					
<p style="text-align: center;">FREQUENCY (Hz)</p> <table border="1"> <tr> <td></td> <td>30 Hz</td> <td>100 Hz</td> <td>4k</td> <td>110k</td> </tr> <tr> <td>Output Level (dBm)</td> <td>+13</td> <td>-20</td> <td>-45</td> <td>-45</td> </tr> <tr> <td></td> <td>+10</td> <td>-30</td> <td>-55</td> <td>-50</td> </tr> <tr> <td></td> <td>0</td> <td>-40</td> <td>-50</td> <td>-40</td> </tr> <tr> <td></td> <td>-40</td> <td></td> <td></td> <td></td> </tr> </table>				30 Hz	100 Hz	4k	110k	Output Level (dBm)	+13	-20	-45	-45		+10	-30	-55	-50		0	-40	-50	-40		-40				At 1004 kHz accuracy is ±0.1 dB from -20 to +13 dBm.																																												
	30 Hz	100 Hz	4k	110k																																																																				
Output Level (dBm)	+13	-20	-45	-45																																																																				
	+10	-30	-55	-50																																																																				
	0	-40	-50	-40																																																																				
	-40																																																																							
At 1004 Hz, 0 dBm, THD using a 4 kHz filter is more than 65 dB down from the fundamental.			Cross talk: >78 dB isolation @ 4 kHz, decreasing 6 dB per octave above 4 kHz.																																																																					
Message Circuit Noise			Message Circuit Noise																																																																					
Transmitter is quiet terminated			Range (@ 600Ω and 900Ω) 0 to 100 dBm																																																																					
			@ 13516 lower limit is 7 dB higher																																																																					
			Resolution 1 dB																																																																					
			Accuracy ±1 dB from 10 to 100 dBm																																																																					
			±2 dB from 0 to 10 dBm																																																																					
			FiltersC-Message, 3 kHz Flat, 15 kHz Flat, Program, 50 kBit																																																																					
Specifications describe the instrument's warranted performance. Supplemental characteristics shown in shaded areas or in italics are intended to provide information useful in applying the instrument by giving typical, but non-warranted performance parameters.																																																																								

Table I-I. Specifications (Continued)

TRANSMITTER	RECEIVER
<p>Noise with Tone Frequency 1004 Hz fixed tone (For other specifications, see Level and Frequency)</p>	<p>Noise with Tone Notch Filter. >50 dB rejection from 995 to 1025 Hz Range (@ 600R and 900Ω) 10-100 dB Accuracy ±1 dB from 20 to 100 dB ±2 dB from 10 to 20 dB (For other specifications, refer to Message Circuit Noise)</p>
<p>Signal-to-Noise Ratio Frequency 1004 Hz fixed tone (For other specifications, see Level and Frequency)</p>	<p>Signal-to-Noise Ratio Signal Level Range -40 to +13 dB Ratio Range 10 to 45 dB Resolution1 dB</p>
<p>3-Level Impulse Noise Frequency 1004 Hz fixed tone or quiet terminated depending on filter selection (For other specifications, see Level and Frequency)</p>	<p>3-Level Impulse Noise Level Range -40 to +13 dB Notch Filter. See Noise with Tone Threshold Ranges (@ 600Ω) Low30 to 109 dB Mid4 dB above Low to a maximum of 109 dB High8 dB above Low to a maximum of 109 dB Loss of Holding Tone Indication Minus sign Threshold Accuracy (above 40 dB) ±1 dB Count Timer 5, 15, 60 min. or non-stop Count Range 0-9999 for each threshold Count Rate 8per sec.</p>
<p>Noise-to-Ground Transmitter is quiet terminated</p>	<p>Noise-to-Ground Range (@ 600R and 900Ω)50 to 130 dB Resolution 1 dB Accuracy ±1.5 dB</p>
<p>P/AR (Optional) Frequency . . Signal spectrum is a complex pulse train of 16 frequencies between 140 Hz and 3890 Hz. Level Range -40 to 0 dB Resolution1 dB</p>	<p>P/AR (Optional) P/AR Range.0 to 120 P/AR units Resolution 1 P/AR unit Accuracy (from 30 to 110 P/AR units) . . . ±2 P/AR units Level Range -40 to +3 dB Resolution1 dB</p>
<p>GENERAL Maximum DC Output 1000 Impedance 120Ω, 600Ω, 900Ω with 750V and 900V Bridging Loss to 20 kHz <0.2 dB Receiver >30 dB from 50 Hz to 4 kHz at 900Ω, 900Ω Return Loss >30 dB from 500 Hz to 10 kHz at 135Ω Longitudinal Balance >60 dB at 60 Hz (Call = 100V) >70 dB at 100 Hz (100V) >80 dB up to 4 kHz decreasing 5 dB per octave to 20 kHz Hold Circuit 2 each drawing 25 milliamperes AC Line 100V, 120V, 220V, 240V AC - 50, 60 Hz (Add Power Cord) 45-60 Hz Battery Casing optional. Typically 25 hours of con- tinuous operation at 23°C. Capacity ranges to 12 hours.</p>	<p>Temperature Range: Operating 0°C to 50°C (32°F to 122°F) with batteries 0°C to 40°C (32°F to 104°F) Storage -20°C to 75°C (-4°F to 167°F) with batteries -20°C to 45°C (-4°F to 113°F) Warm up time @ 20°C for stated accuracy5 min. Dimensions 1.2 x 25.9 x 28.6 cm (4.4 x 10.2 x 11.25 in.) Weight 5.0 kg (11 lbs.), 6.5 kg (14 lbs.) with battery</p> <p>OPTIONS 001 Adds rechargeable battery pack 002 Adds P/AR measurement in place of Noise-to-Ground 003 Adds both battery pack and P/AR Deletes Noise-to-Ground</p> <p>ACCESSORIES: 15513A Test cord w/31 0 male at both ends 18132A 19" rack mount adapter 18134A Soft pack carrying case 18161 A Ladder bracket</p>

1-9. SAFETY CONSIDERATIONS



Before applying power, make sure that the rear power input module is set to the line voltage in use and that the correct fuse is installed.

1-10. Whenever internal circuits are exposed, caution must be used. Observe all warnings and cautions marked on the instrument or listed in the procedures.

1-11. When using AC power for test equipment, the chassis must be connected to earth ground. When the power button is on STBY (standby), AC and DC voltages are present in the instrument. To completely power down, disconnect the AC power cord from the 4935A. The batteries in options 001 and 003 provide continuous power to 4935A circuits; follow the disassembly procedures in Section VIII, Service to access the instrument.



Power switch does not turn off AC power and some DC circuits

1-12. RELATED MANUALS

1-13. Operating information is summarized on a card in the instrument cover.

1-14. USER REPAIR

1-15. Internal repairs to the instrument should be done by authorized repair shops only. For assistance, contact the nearest Hewlett-Packard Sales and Service Office listed at the rear of this manual.

1-16. OPTIONS AND ACCESSORIES

1-17. Options available are:

Option 001: Adds a rechargeable battery pack

Option 002: Adds P/AR (Peak/Average Ratio) measurement in place of Noise-to-Ground

Option 003: Adds P/AR (Peak/Average Ratio) measurement in place of Noise-to-Ground and a rechargeable battery pack.

Option 917: Adds a South Africa Power Cord.

1-18. Accessories available are:

- 15513A Test cord w/310 male at both ends
- 18132A 19" Rack Mount Adapter
- 18134A Soft-pack Carrying case
- 18161A Ladder Bracket
- 04935-60014 Diagnostic Service Kit
- 18182A 310 TO ALIBATOR

1-19. WARRANTY

1-20. Instrument warranty is as listed on the inside of the front cover. Battery warranty is 90 days

1-21. RECOMMENDED TEST EQUIPMENT

1-22. Recommended test equipment is listed in Table 1-2. Equipment with equivalent characteristics may be used

Table 1-2. Recommended Test Equipment

INSTRUMENT	CRITICAL SPECIFICATIONS	MODEL RECOMMENDED	USE*
AC CALIBRATOR	OUTPUT LEVEL 1 mV TO 1 OV FREQUENCY: 20Hz TO 110kHz ACCURACY 0.1% @ >7mV	FLUKE 5200A OR EQUIVALENT	P,A,T
OSCILLOSCOPE	> 15MHz BANDWIDTH A VS B CAPABILITY	HP 1740A	P,A,T
SYNTHESIZER / FUNCTION GENERATOR	OUTPUT LEVEL 1 mV TO 1 OV FREQUENCY: 20Hz TO 110kHz ACCURACY 0.1% @ >7mV	HP 3325A	P,T
MULTIMETER	AC AND DC FUNCTIONS AC VOLTS: 1V MIN. TO 1000V DC VOLTS: .1V TO 1000V BALANCED INPUT	HP3455A	P,A,T
DIGITAL MULTIMETER	DC CURRENT: 1 AMF' MAX	HP 3466A	P,A,T
DUAL OUTPUT POWER SUPPLY	+12 AND -12 @ 0 TO 0.2A	HP 6234A	P
DUAL RANGE DC POWER SUPPLY	0-50Vdc @ 0 TO 0.2A	HP 6218A	P,A,T
AUDIO ANALYZER	INPUT VOLTAGE RANGE 50mV-300V BANDWIDTH 500kHz FILTER 30kHz	HP 8903A	P
COUNTER	RANGE: AC COUPLED 30Hz TO 100MHz SENSITIVITY: 10mV TO 100MHz	HP 5315A	P

*P = PERFORMANCE TESTS A = ADJUSTMENTS T = TROUBLESHOOTING

Table 1-3. List of Parts Used for Performance Tests

PART NUMBER (IF APPLICABLE)	DESCRIPTION
0698-7364 0698-7408 0698-6344 HP 11095A 1250-0781 1251-3757 0493560014	135ohm 1% RESISTOR 600ohm 1% RESISTOR 900ohm 1% RESISTOR TERMINATION, 600ohm BNC-TO-BNC BNC-TEE FEMALE BNC TO TYPE 310 POMONA NO. 2798 OR EQUIVALENT BNC TO DUAL BANANA JACK POMONA NO. 1296 DUAL BANANA COMPONENT CARRIER POMONA NO. 1 330-ST DIAGNOSTIC SERVICE KIT

I-23. BATTERY OPERATION (Options 001 and 003)

I-24. Nickel-Cadmium batteries enable the 4935A to be used in areas removed from AC power. Typical operating time is 2.5 hrs when fully charged. The batteries are trickle-charged whenever the instrument is connected to an AC source and the POWER switch is in STBY.

I-25. Regular discharge-charge cycles are recommended to maintain battery capacity. The instrument should be operated until batteries are discharged (instrument stops working) then recharged, at least every 30 days. Normal recharge time is about 17 hours. Typical battery life under normal operating conditions should be at least 100 charge-discharge cycles.

charging current - 100mA (C/10)

I-26. Charging the Batteries

I-27. The internal battery pack consists of three rechargeable battery packs (+6V, +15.6V, and -15.6V). These provide typically 2.5 hours of continuous use without recharging. To recharge the battery packs, connect the HP 4935A to an AC power source and press the power switch to STBY. Normal recharge time is about 17 hours.

I-28. The batteries may be charged at temperatures between 5°C and 40°C (41°F and 104°F), but have greater charge capacity if charged between 5°C and 25°C (41°F and 77°F). At temperatures above 25°C the charge acceptance falls off as shown in Figure 1-2. For example, a cell charged at 45°C accepts about 60-70% of its rated capacity. Temperatures below 5°C cause pressure to build up within the cell as it is charged, which could result in venting of the cell. This results in a permanent degradation of the battery capacity due to loss of electrolyte.

I-29. Operating Temperature

I-30. Normal operating temperature of the I-IP 4935A with batteries (options 001 and 003) should be between -20°C and +40°C. However, there will be a loss of capacity when operating at the extremes. At low temperatures, the batteries cannot fully discharge even if they were fully charged at room temperature. At high temperatures this same effect takes place to a lesser degree, in addition to the problem of charge acceptance previously mentioned.

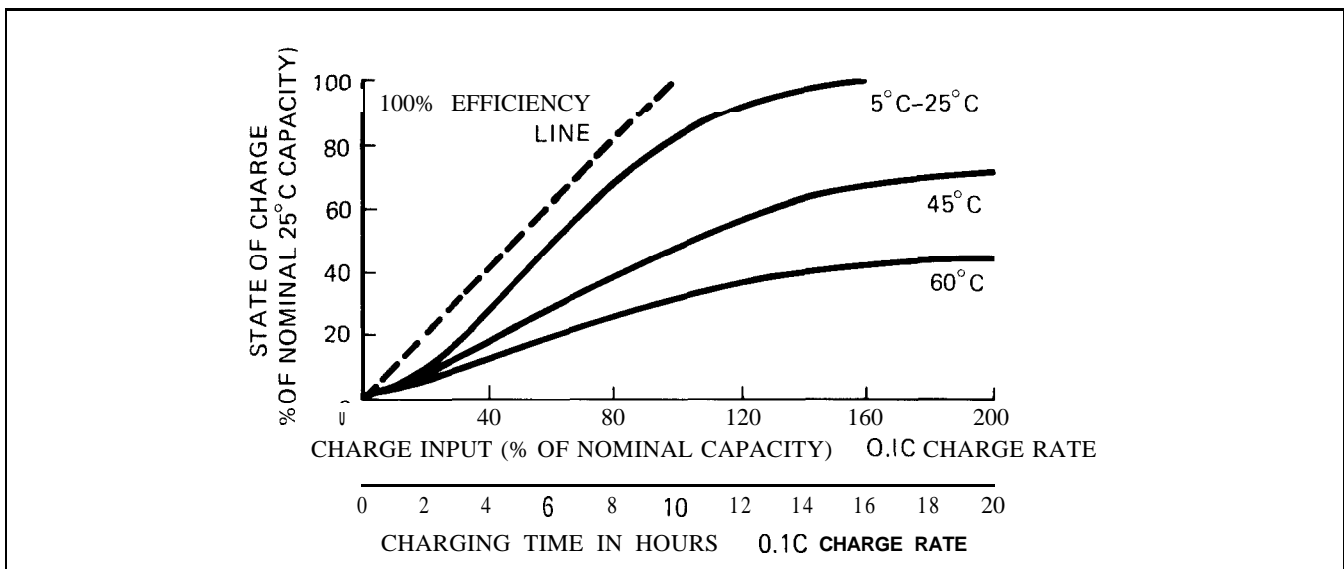


Figure 1-2. Charge Acceptance at Various Temperatures

SECTION II INSTALLATION

2-1. INTRODUCTION

2-2. This section contains information on initial inspection, preparation for use, power requirements and storage and shipment. Table 2-1 shows all power cords available.

2-3. INITIAL INSPECTION

2-4. Inspect the shipping container for damage. If the container or cushioning material is damaged, keep it. Check the contents of the shipment for completeness, then check the unit mechanically and electrically. Refer to Section IV for electrical checks.

2-5. If the unit is mechanically damaged or fails electrical tests, notify the carrier and the nearest HP office (listed at the rear of this manual). Hewlett-Packard will arrange for repair or replacement of the instrument without waiting for claim settlement.

2-6. PREPARATION FOR USE




Before connecting this instrument to an AC power source, be sure that the rear panel line module is set to the same voltage as the AC source and that the correct fuse for that AC voltage is installed (~~1.75~~ ^{2.5} Amp for 120 Vac, ~~2.00~~ ^{2.5} Amp for 220 Vac).

2-7. POWER REQUIREMENTS

2-8. This instrument requires a power source of 100, 120, 220, or 240 Vac, +5%-10%, 48 to 66 Hz single phase. Power consumption is no more than 25 Vac.

2-9. LINE VOLTAGE SELECTION

2-10. Figure 2-1 provides instructions for line voltage selection. Card and fuse are factory installed for 120 Vac operation.

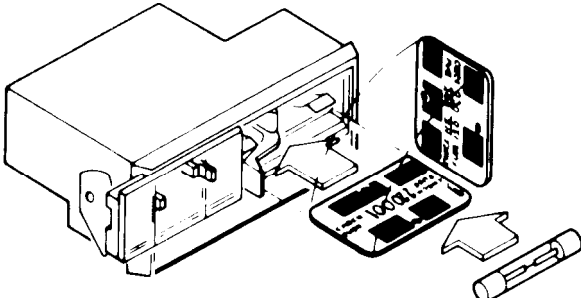

Operating voltage is shown in module window.

PROCEDURE

1. Slide cover door to left (the line power cord must be disconnected).
2. Rotate FUSE PULL to left. Remove the fuse.
3. Remove the PC board by pulling it out. Select operating voltage by positioning PC board to show the desired voltage on top-left side.
4. Reinsert the PC board.
5. Rotate FUSE-PULL back into normal position and reinsert fuse. Use caution to select correct fuse value.

Figure 2-1. Line Voltage Selection

2-11. POWER CABLE

WARNING

Any interruption of the protective (grounding) conductor (inside or outside the instrument) or disconnecting the protective earth terminal can make this instrument dangerous. Intentional interruption is prohibited.

2-12. This instrument is supplied with a three-wire power cable. When connected to an appropriate three-wire AC power receptacle, the cable grounds the instrument chassis.

2-13. OPERATING ENVIRONMENT

2-14. TEMPERATURE. The instrument may be operated in temperatures from 0° to 50°C (32°F to +122°F). Temperature for battery unit operation is 0° to 40°C (32°F to 103°F).

2-15. HUMIDITY. The instrument may be operated in environments with humidity from 5% to 95% R.H. @ 40°C. However, the instrument should be protected from temperature extremes which cause condensation within the instrument.

2-16. STORAGE AND SHIPMENT

2-17. ENVIRONMENT

2-18. The 4935A (all options) may be stored and shipped within the following environmental limits:

Temperature:	-20°C to +45°C (-4°F to +113°F)	Do not store or ship where temperature extremes will cause condensation within the instrument.
--------------	------------------------------------	--

Humidity:	90% R.H. @ 65°C
-----------	-----------------

2-19. INSTRUMENT PACKAGING




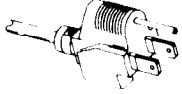
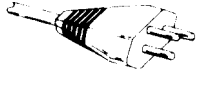

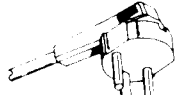

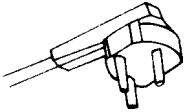
2-20. ORIGINAL PACKAGING. Containers and packing material used in factory packaging can be obtained through Hewlett-Packard sales and service offices listed at the rear of this manual. If the instrument is returned to HP for repair, attach a tag listing the type of service or repair needed. Include return address, model number, option number (if applicable) and complete serial number. Also, mark the container "FRAGILE" to ensure careful handling. In any letters, refer to the instrument by model number, option number (if applicable) and complete serial number.

2-21. OTHER PACKAGING. Use these general instructions for packaging with commercially available materials:

- a. Wrap the instrument in heavy paper or plastic. If shipping to an HP Sales or Service Office, include a tag listing type of service needed, return address, model number, option number (if applicable) and complete serial number.
- b. Use a strong shipping container such as a double-wall carton with 275 lbs. burst test.
- c. Use a layer of shock absorbing material, 70-100 mm (3-4 in.) thick. This provides a firm cushion and prevents movement inside the container. Protect the front panel with cardboard or the front cover.
- d. Seal the carton securely and mark it "FRAGILE" to ensure careful handling.

2-22. TAGGING FOR SERVICE. If the instrument is being returned to Hewlett-Packard for service, please complete one of the blue tags located at the back of this manual and attach it to the instrument.

Table 2-1. HP Plug Styles

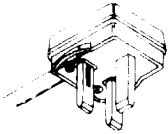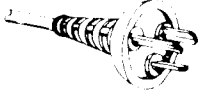Plug Type	Cable HP Part Number	C D	Plug Description	Cable Length (inches)	Cable Color	For Use In Country
250V 	8120-1351 8120-1703	0 6	Straight *BS1363A 90°	90 90	Mint Gray Mint Gray	United Kingdom, Cyprus, Nigeria, Rhodesia, Singapore
250V 	8120-1369 8120-0696	0 4	Straight *NZSS193 ASC112 90°	79 87	Gray Gray	Australia New Zealand
250V 	8120-1689 8120-1692	7 2	Straight *CEE7-Y11 90°	79 79	Mint Gray Mint Gray	East and West Europe, Saudi Arabia, Egypt, So. Africa, India unpolarized in many nations
125V 	8120-1348 8120-1398 8120-1754 8120-1378 8120-1521 8120-1676	5 5 7 1 6 2	Straight *NEMA5 15P 90° Straight *NEMA5 15P Straight *NEMA5 15P 90° Straight *NEMA5 15P	80 80 36 80 80 36	Black Black Black Jade Gray Jade Gray Jade Gray	United States Canada, Japan (100V or 200V), Mexico, Philippines, Taiwan
250V 	8120-2104	3	Straight *SEV1011 1959 24507 Type 12	79	Gray	Switzerland
250V 	8120-0698	6	Straight *NEMA6 15P			United States Canada
220V 	8120-1957 8120-2956	2 3	Straight *DHCK 107 90°	79 79	Gray Gray	Denmark
250V 	8120-1860	6	Straight *CEE22 VI Systems Cabinet use			
250V 	8120-4600 8120-4211	8 7	Straight BS 546/SABS 164 90°	98 98	Black Black	So. Africa, India

*Part number shown for plug is industry identifier for plug only. Number shown for cable is HP Part Number for complete cable including plug.
E Earth Ground, L Line, N Neutral

SECTION III OPERATION

3-1. INTRODUCTION

3-2. This section contains information on front and rear panel features, self check procedures, and error codes (Err-codes). Also covered are the principles of operation for all measurements. If any of the automatic self check procedures fail acceptable limits as specified in the checks, then adjustment or repair may be necessary.

3-3. SELF CHECK

3-4. The self check procedures are performed automatically at power-up by the instrument. Most of the major circuits are checked and any problems are identified. Self check does not verify performance specifications. Performance checks verify that the instrument meets published specifications. Failure of the instrument to pass any self check procedure indicate a malfunction that can possibly affect other measurements.

3-5. ERROR MESSAGES

3-6. When the 4935A is powered up, the instrument automatically transmits a signal into its receiver through the filters. The signal is checked after each filter, to verify that it is within acceptable limits. Errors 0 through 6 indicate there are problems during self check. Errors 7 and 8 highlight problems during a particular measurement. Other indications of errors during measurement are described by the particular measurement. After startup self-check, the instrument automatically goes into Transmit Mode, LEVEL, FREQUENCY. Even if error messages occur, the instrument continues to operate correctly except for those measurements affected by the displayed errors. Errors 0 through 5 (Err 0-Err 5) followed by Error 6 (Err 6) is indicative of a system level failure more than a filter failure.

Displayed Errors are:

- Err 0 Test signal cannot be measured through C-Message filter.
- Err 1 Test signal cannot be measured through 3 kHz flat filter.
- Err 2 - Test **signal cannot** be measured **through 15 kHz flat** filter.
- Err 3 Test **signal** cannot be measured through **Program** filter.
- Err 4 Test signal cannot be measured through 50 kBit filter.
- Err 5 - Test signal cannot **be** measured through P/AR filter. If **not a P/AR unit** refer to Err 0.
- Err 6 Error in LEVEL FREQUENCY signal path.
- Err 7 - Received **1004 Hz tone is below -16 dBm or above +13 dBm in NOISE WITH TONE or SIGNAL TO NOISE.**
- Err 8 **IMPULSE NOISE threshold is set too high. The upper limit varies with the receive impedance as follows:**

RCVΩ:	135Ω	116 dBm Upper Limit
	600Ω	109 dBm
	900Ω	107 dBm

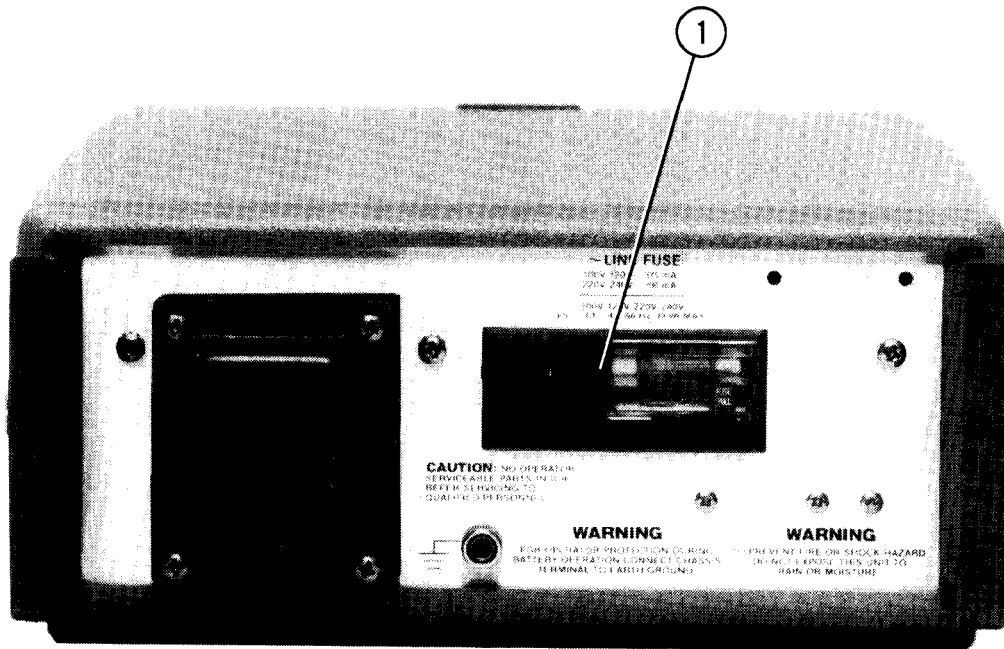
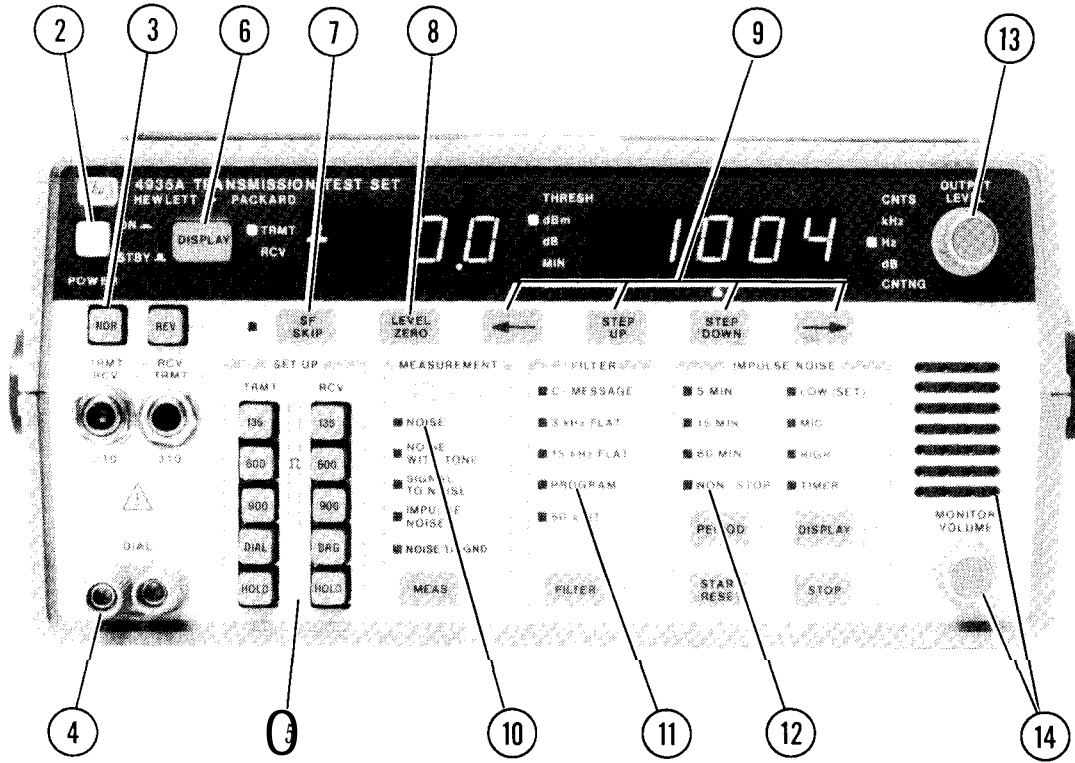


Figure 3-1. Front and Rear Panel Controls/Connectors/Indicators

CONTROLS, CONNECTORS AND INDICATORS

1. Power Cord Module. Accepts power cord supplied with instrument. Contains line fuse and PC board for selecting line voltage (see Section II, paragraph 2-9 for procedure to select line voltage).

WARNING

Always connect power cord to a properly grounded 3-wire power outlet.



Do not connect more than 200VDC signal to terminals.

2. POWER button. Switches power to front panel when in ON position. In STBY position power is still applied to some circuits. If unit has battery option there will still be power available to some internal circuits even in STBY position.
3. NOR and REV switches. NOR switch depressed connects the left 310 jack to the transmitter and the right 310 jack to the receiver. REV switch depressed connects the left 310 jack to the receiver and the right 310 jack to the transmitter. Both switches out simultaneously or depressed simultaneously internally loops the transmitter to the receiver.
4. DIAL Binding Posts. Handset can be connected to binding posts to dial-up a line through the 310 jacks.
5. SET UP Switches.

TRMT.

13512, 600Ω, 900Ω: Provides terminating impedance to match the lines' characteristic impedance.

DIAL: Disconnects TRMT-RCV 310 jack from the transmitter and connects the TRMT-RCV 310 jack to the DIAL binding posts.

HOLD: Connects the hold circuits to the TRMT-RCV 310 jacks to hold dial-up lines.

RCV.

13512, 600Ω, 900Ω: Provides terminating impedance to match the lines' characteristic impedance.

BRG: Connects the RCV-TRMT 310 jack through high impedance when the 4935A bridges the circuit under test instead of terminating the line.

HOLD: Connects the receive-hold-circuits to the RCV-TRMT 310 jack to hold the dial-up lines.

6. DISPLAY Key. TKMT-RCV. Selects either the transmitted or the received signal to be displayed. Corresponding LED will light.
7. SF SKIP Key. Prevents the transmitter from transmitting within ± 150 Hz (300 Hz band) of a designated frequency. This feature eliminates accidental disconnection by SF signaling units on dial-up lines. Operates only in LEVEL FREQUENCY. LED will light when key is pressed.
8. LEVEL ZERO Key. Sets a 0 dB reference in KCV LEVEL FREQUENCY mode. All subsequent measurements will be made in dB relative to this reference. DB LED in center of front panel will light. A "-" (minus) dB reading indicates levels higher than the reference level per the telephone industry convention.
9. STEP UP, STEP DOWN, ← and → Keys. In TRMT Mode (right display) and LEVEL FREQUENCY; ← or → selects the position of digit to be increased or decreased. Lighted cursor indicates one-of-five digit positions. Digit value is incremented by pressing STEP UP and decremented by pressing STEP DOWN. Holding the STEP UP or STEP DOWN key depressed causes the actions to repeat.

Figure 3-1. Front and Rear Panel Controls/Connectors/Indicators (Continued)

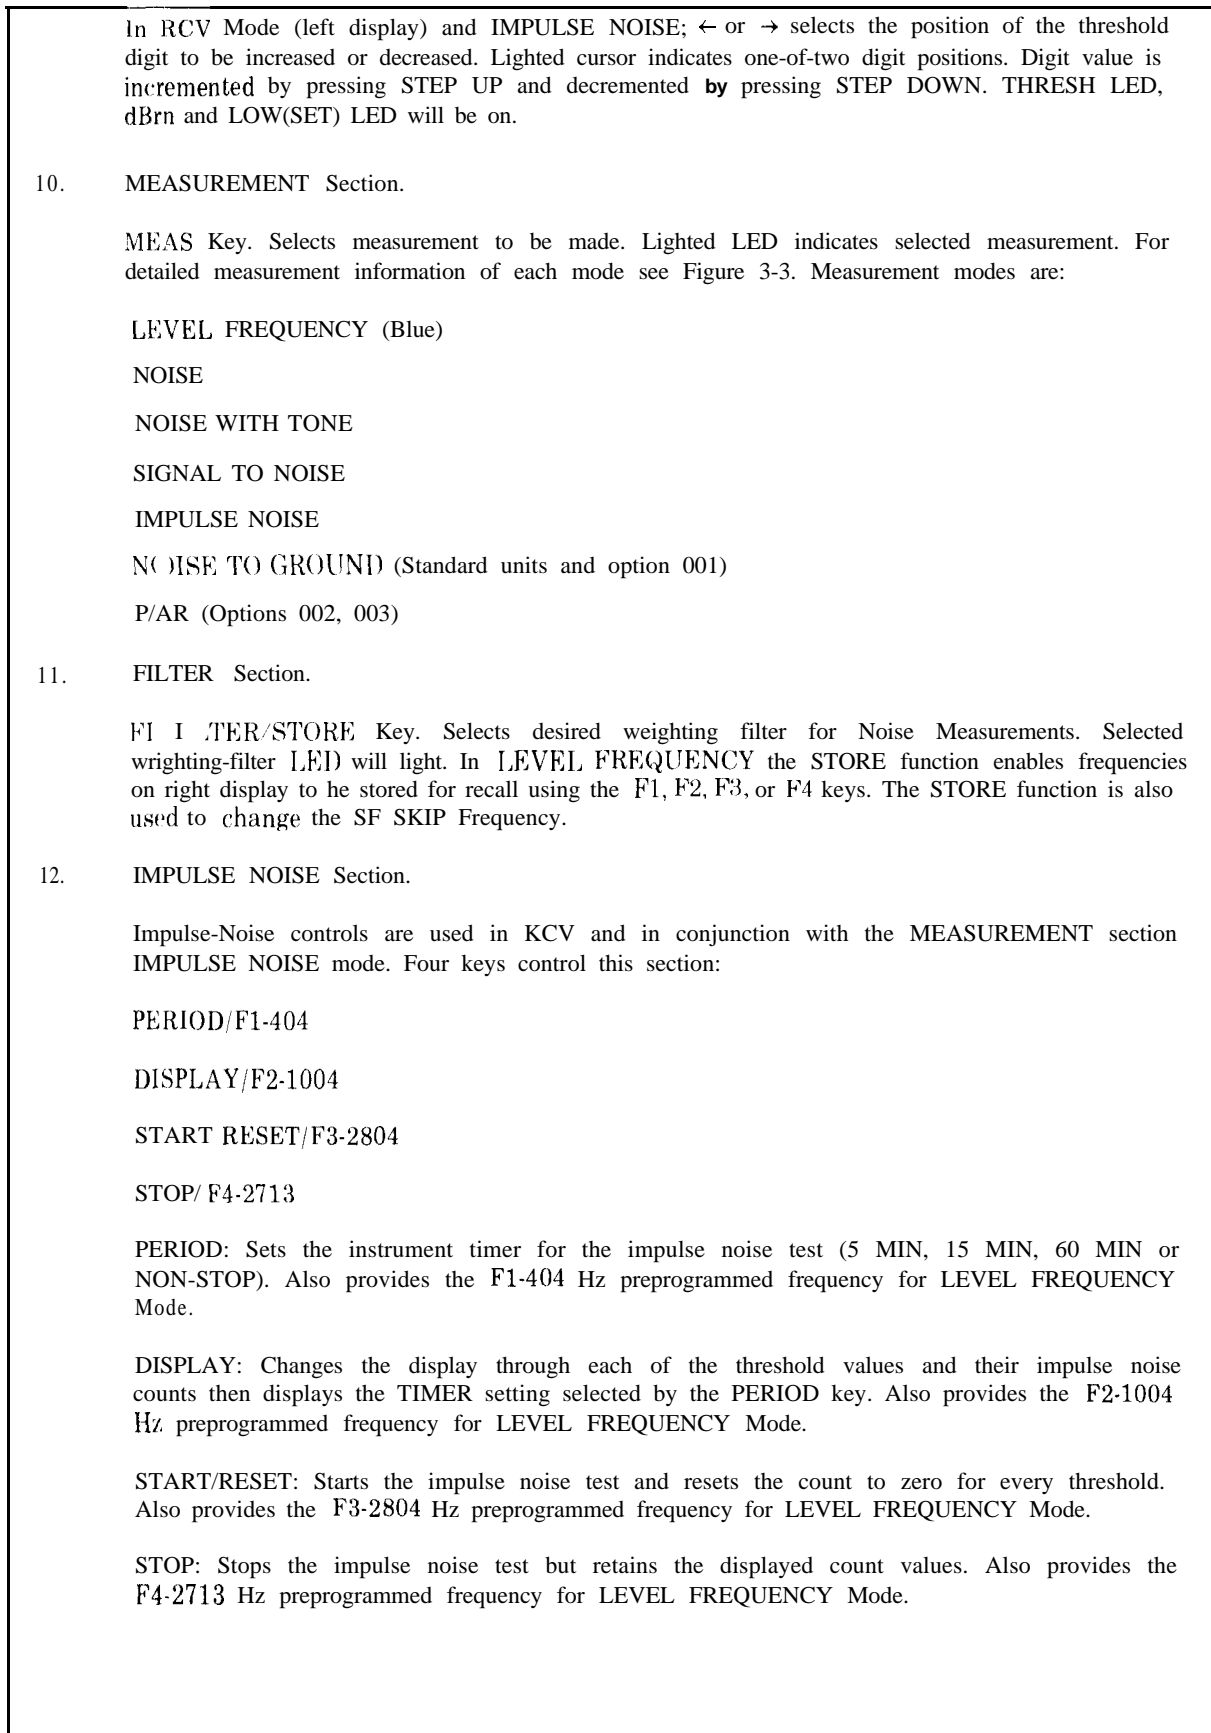


Figure 3-1. Front and Rear Panel Controls/Connectors/Indicators (Continued)

13.	OUTPUT LEVEL Control Adjusts the transmitter output level continuously from -40 dBm to +13 dBm. Output level is displayed on left display.
14.	MONITOR VOLUME Control and Speaker. Permits adjustable volume for listening to the circuit under test or to the Test Set Transmitter.

Figure 3-1. Front and Rear Panel Controls/Connectors/Indicators (Continued)

3-7. OPERATING INSTRUCTIONS

3-8. Figure 3-2 lists the various measurement modes available. A brief Power On and Set Up procedure precedes the detailed explanation. Each measurement mode is explained with a drawing and accompanying text.

POWER ON and SET UP

A.C. POWER

1. Connect power cord to the rear line module on which the correct line voltage has been selected. See paragraph 2-9 of Installation section for procedure to select line voltages.

WARNING

Always connect power cord to a properly grounded 3-wire power outlet.

2. Press POWER button ON. The 4935A will automatically do a self check of the transmitter, the filters, and the LEDs.

BATTERY POWER (Optional)

WARNING


BATTERIES MAY NOT
 BE ~~CHARGE~~ CHARGE UPON
 INITIAL OPERATION

For operator protection during battery operation, connect the chassis terminal on the rear panel to earth ground.

1. Press POWER button ON with no power cord connected. When switching between battery and A C power cycle the POWER button from STBY to ON again.

NOTE: Proper care in charging and discharging NiCad batteries can dramatically improve their lives. Consult Section I of this manual for recommended procedures.

SET UP



Connect circuit to 310 jacks. Do not connect more than 200VDC or 10 Vrms at 60 Hz to these jacks.

NOR-REV


1. Press in the NOR button to connect the left 310 jack to the transmitter and the right 310 jack to the receiver.
2. To reverse the direction of the test press the REV button IN

Impedance

1. Press the TRMT impedance button Ω that matches the impedance of the circuit on the TRMT side.
2. Press the RCV impedance button Ω that matches the impedance of the circuit on the RCV side. If the test set is to be used in the bridged mode press the BRG button also. This means that in the bridged mode two RCV Setup buttons will be pressed in \rightarrow the correct circuit impedance and the BRG button. Note: Do not leave the BRG button IN while the instrument is actually terminating the circuit as it will cause a 6 dB error.

Figure 3-2. Measurements

3-9. MEASUREMENTS

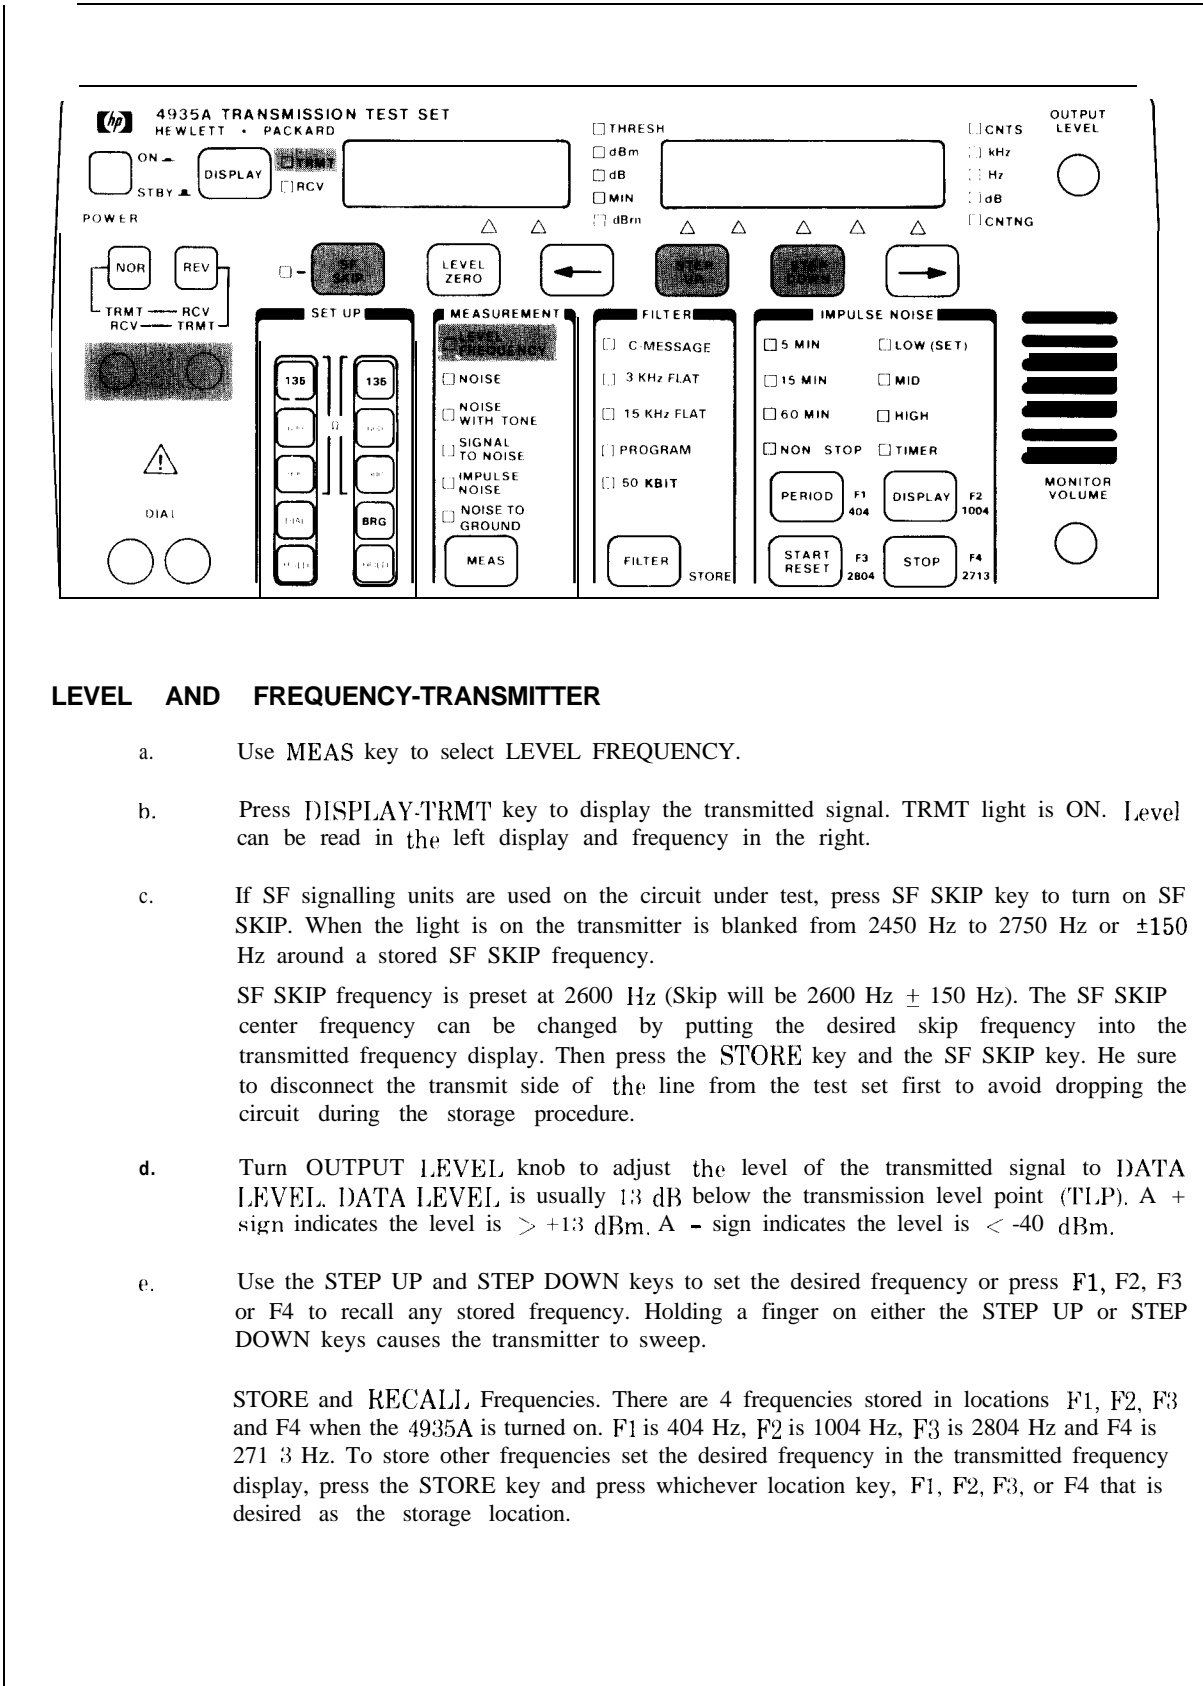


LEVEL AND FREQUENCY-TRANSMITTER

- a. Use MEAS key to select LEVEL FREQUENCY.
- b. Press DISPLAY-TRMT key to display the transmitted signal. TRMT light is ON. Level can be read in the left display and frequency in the right.
- c. If SF signalling units are used on the circuit under test, press SF SKIP key to turn on SF SKIP. When the light is on the transmitter is blanked from 2450 Hz to 2750 Hz or ± 150 Hz around a stored SF SKIP frequency.
SF SKIP frequency is preset at 2600 Hz (Skip will be $2600 \text{ Hz} \pm 150 \text{ Hz}$). The SF SKIP center frequency can be changed by putting the desired skip frequency into the transmitted frequency display. Then press the STORE key and the SF SKIP key. Be sure to disconnect the transmit side of the line from the test set first to avoid dropping the circuit during the storage procedure.
- d. Turn OUTPUT LEVEL knob to adjust the level of the transmitted signal to DATA LEVEL. DATA LEVEL is usually 13 dB below the transmission level point (TLP). A + sign indicates the level is $> +13 \text{ dBm}$. A - sign indicates the level is $< -40 \text{ dBm}$.
- e. Use the STEP UP and STEP DOWN keys to set the desired frequency or press F1, F2, F3 or F4 to recall any stored frequency. Holding a finger on either the STEP UP or STEP DOWN keys causes the transmitter to sweep.

STORE and RECALL Frequencies. There are 4 frequencies stored in locations F1, F2, F3 and F4 when the 4935A is turned on. F1 is 404 Hz, F2 is 1004 Hz, F3 is 2804 Hz and F4 is 2713 Hz. To store other frequencies set the desired frequency in the transmitted frequency display, press the STORE key and press whichever location key, F1, F2, F3, or F4 that is desired as the storage location.


Figure 3-2. Measurements (Continued)

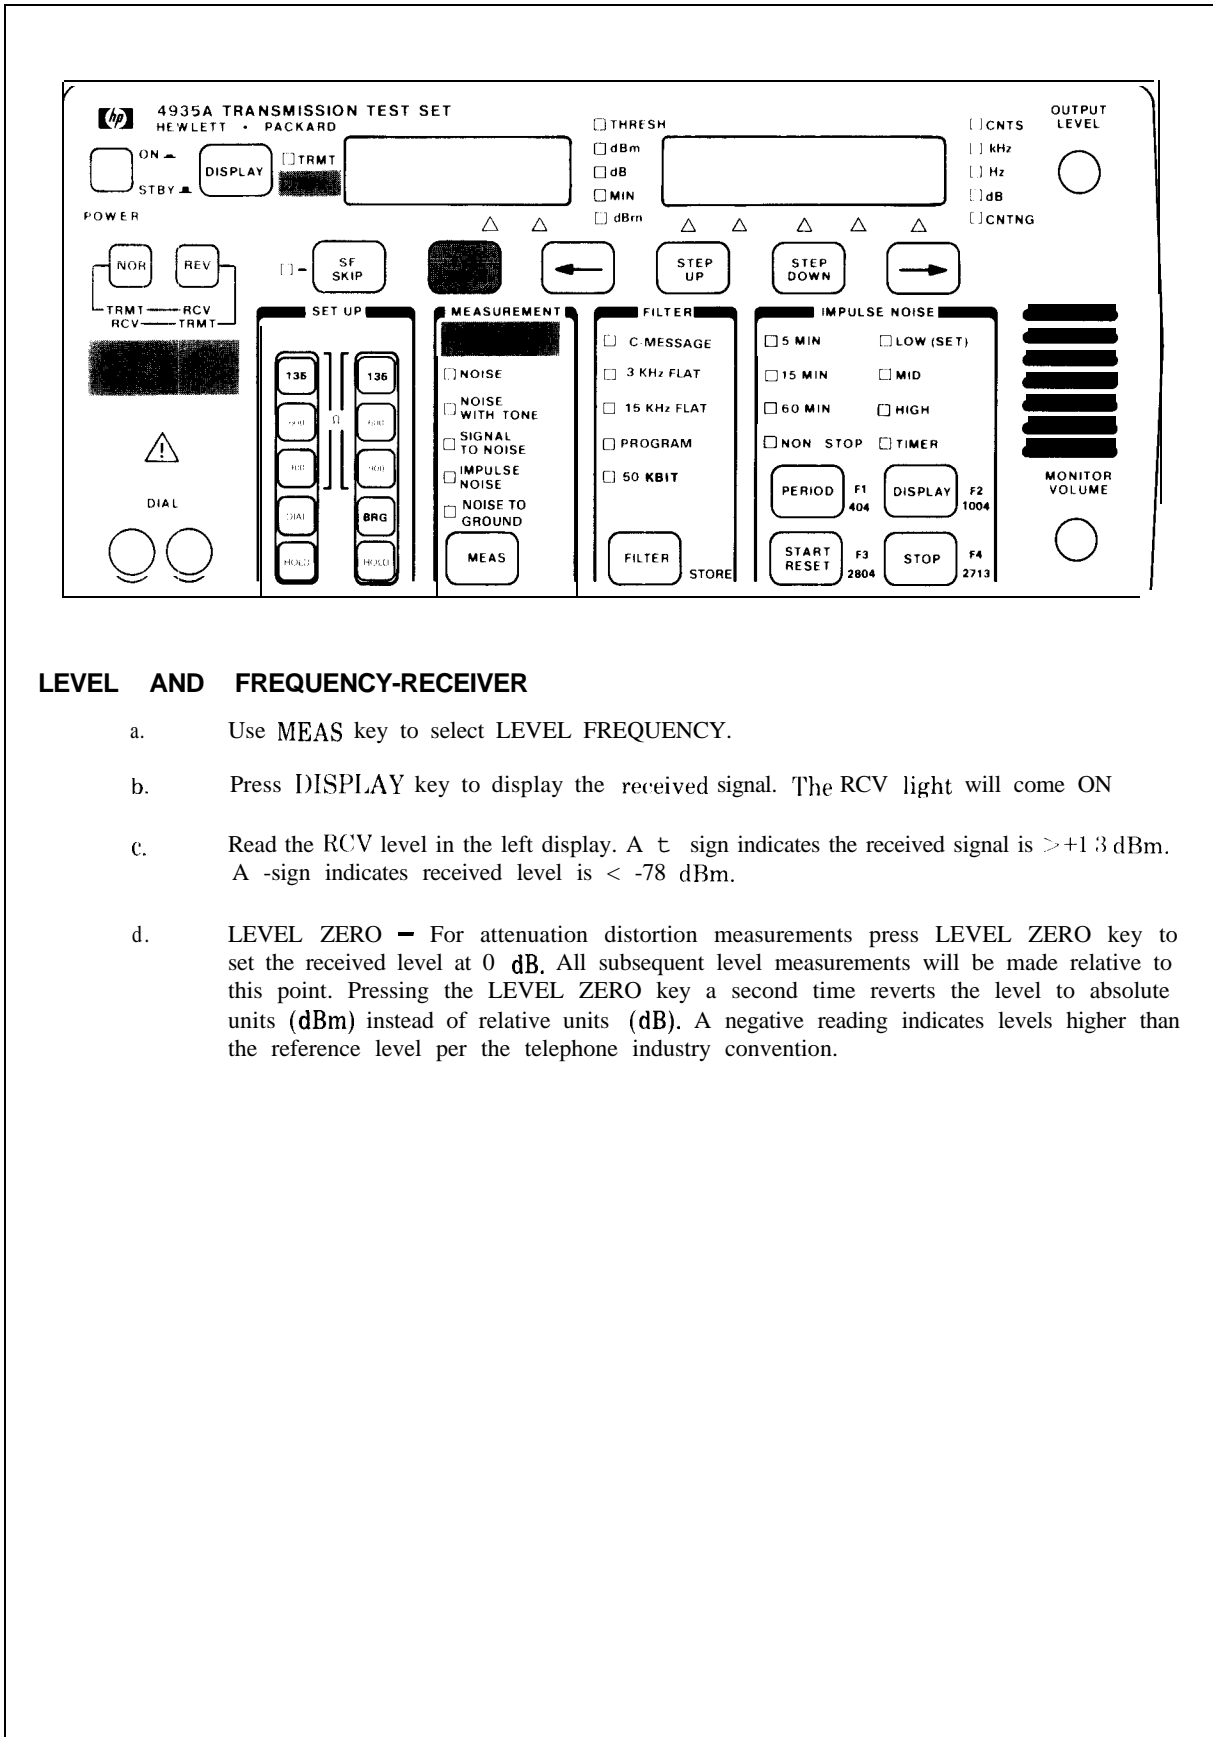

LEVEL AND FREQUENCY-RECEIVER

- a. Use MEAS key to select LEVEL FREQUENCY.
- b. Press DISPLAY key to display the received signal. The RCV light will come ON
- c. Read the RCV level in the left display. A + sign indicates the received signal is $>+13$ dBm. A -sign indicates received level is < -78 dBm.
- d. LEVEL ZERO – For attenuation distortion measurements press LEVEL ZERO key to set the received level at 0 dB. All subsequent level measurements will be made relative to this point. Pressing the LEVEL ZERO key a second time reverts the level to absolute units (dBm) instead of relative units (dB). A negative reading indicates levels higher than the reference level per the telephone industry convention.

Figure 3-2. Measurements (Continued)

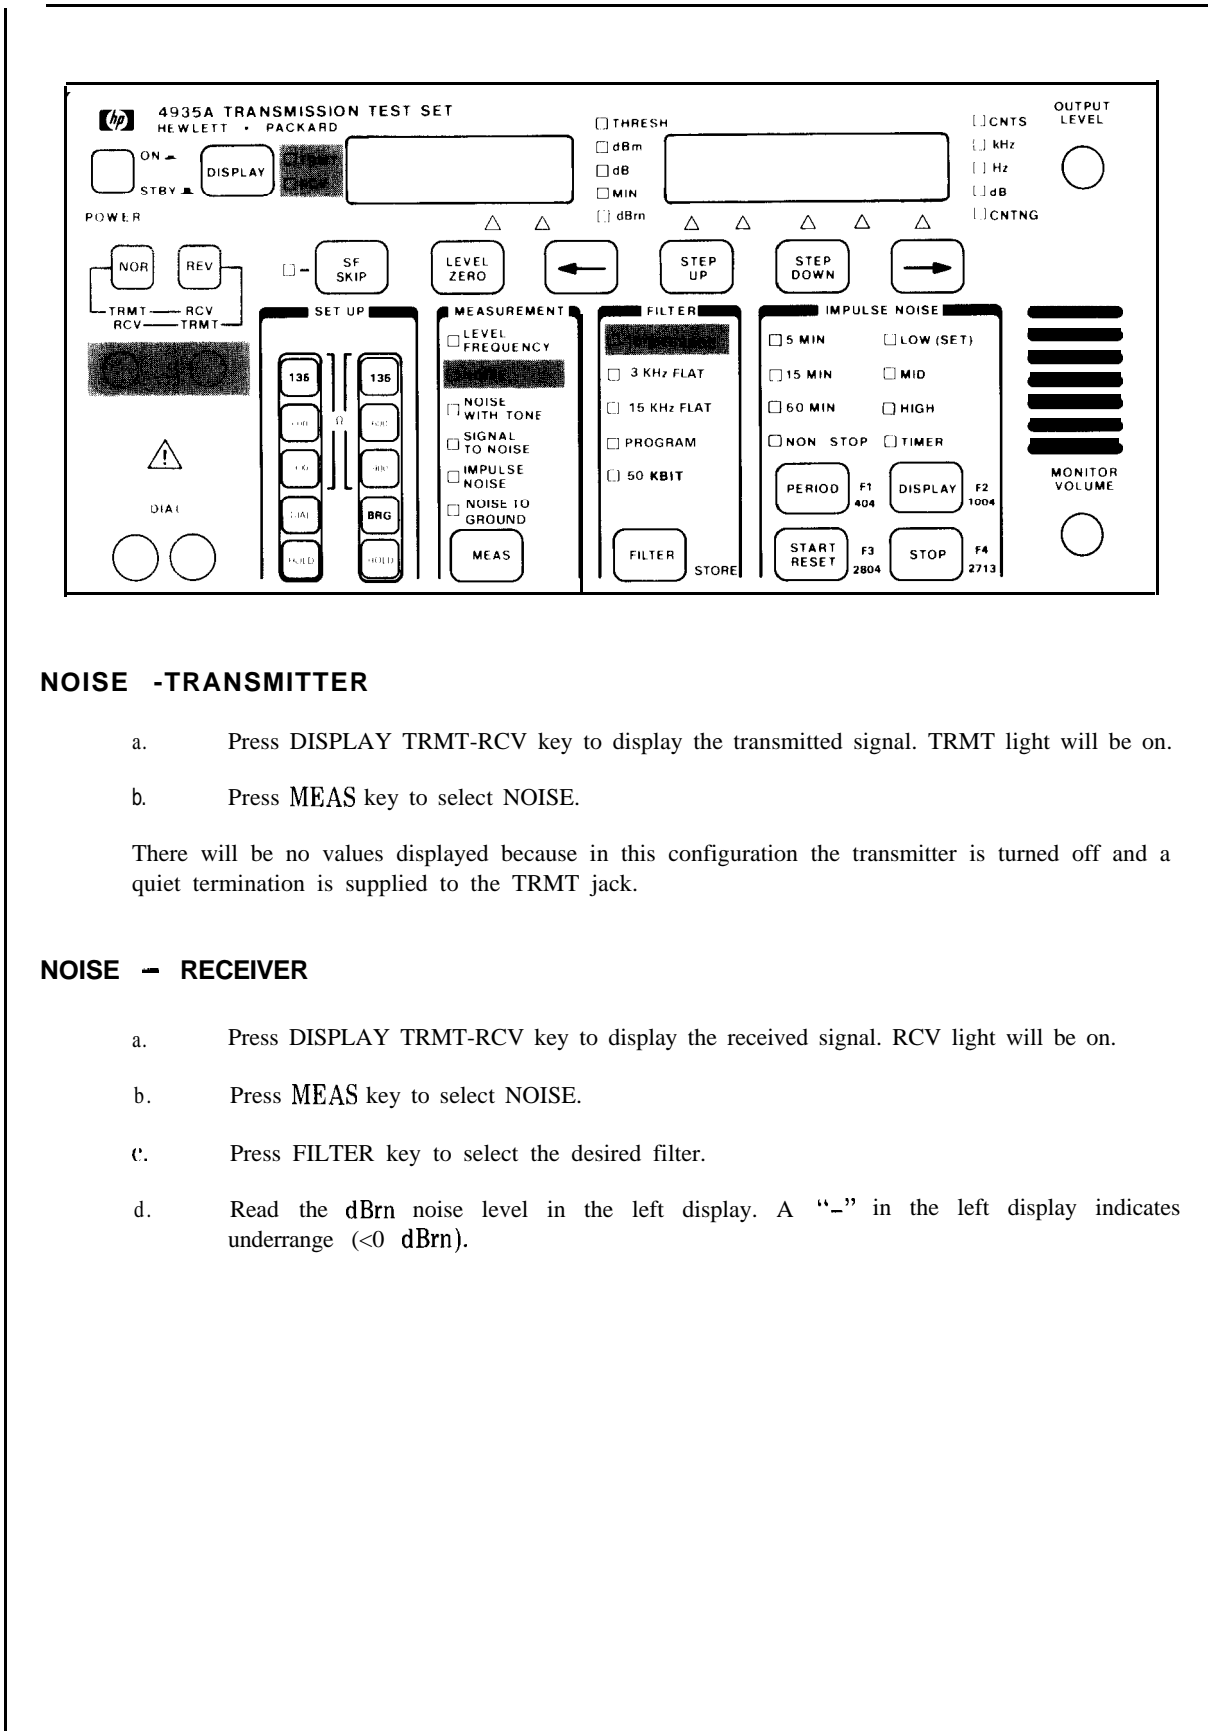

NOISE - TRANSMITTER


- a. Press DISPLAY TRMT-RCV key to display the transmitted signal. TRMT light will be on.
- b. Press MEAS key to select NOISE.

There will be no values displayed because in this configuration the transmitter is turned off and a quiet termination is supplied to the TRMT jack.

NOISE - RECEIVER

- a. Press DISPLAY TRMT-RCV key to display the received signal. RCV light will be on.
- b. Press MEAS key to select NOISE.
- c. Press FILTER key to select the desired filter.
- d. Read the dBrn noise level in the left display. A “-” in the left display indicates underrange (<0 dBrn).

Figure 3-2. Measurements (Continued)

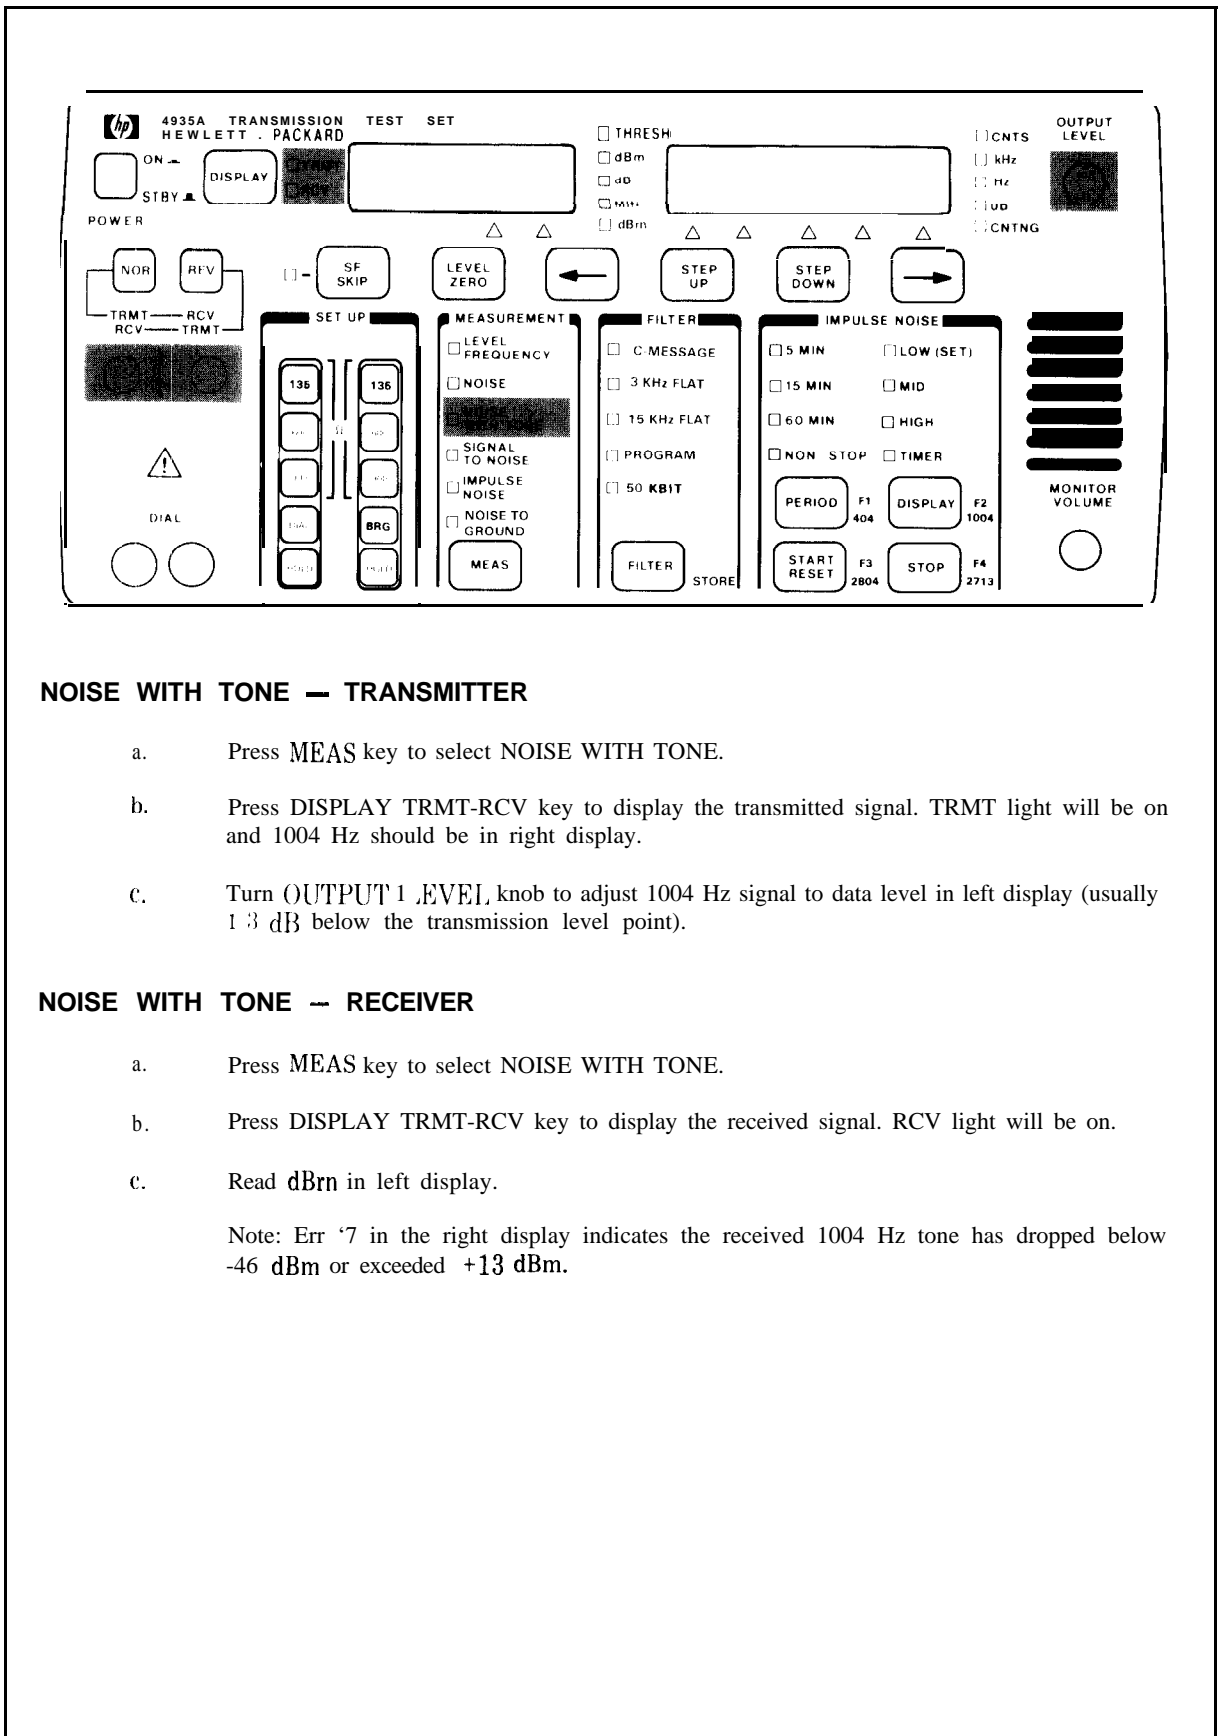

NOISE WITH TONE — TRANSMITTER


- a. Press MEAS key to select NOISE WITH TONE.
- b. Press DISPLAY TRMT-RCV key to display the transmitted signal. TRMT light will be on and 1004 Hz should be in right display.
- c. Turn OUTPUT 1 LEVEL knob to adjust 1004 Hz signal to data level in left display (usually 13 dB below the transmission level point).

NOISE WITH TONE — RECEIVER

- a. Press MEAS key to select NOISE WITH TONE.
- b. Press DISPLAY TRMT-RCV key to display the received signal. RCV light will be on.
- c. Read dB_{Rn} in left display.

Note: Err '7 in the right display indicates the received 1004 Hz tone has dropped below -46 dBm or exceeded +13 dBm.

Figure 3-2. Measurements (Continued)

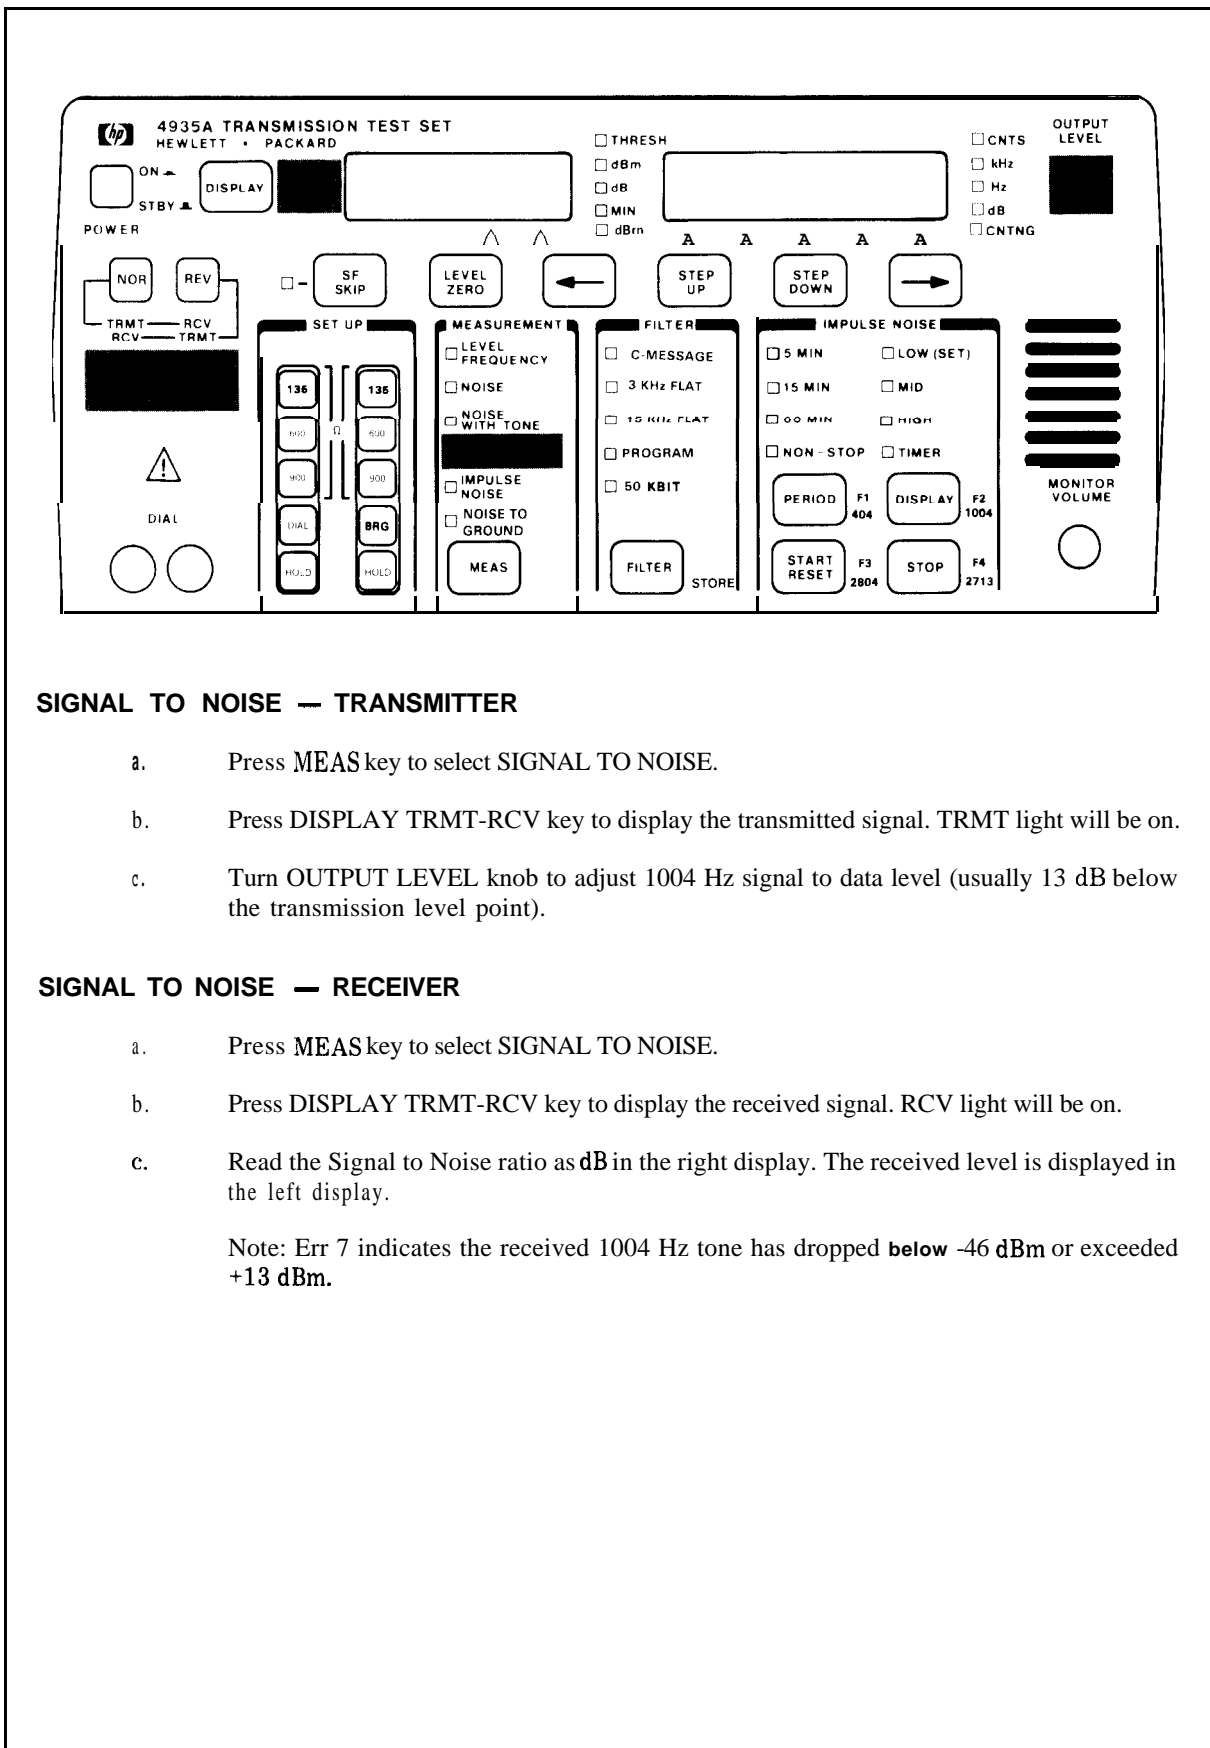

SIGNAL TO NOISE — TRANSMITTER


- a. Press **MEAS** key to select SIGNAL TO NOISE.
- b. Press **DISPLAY TRMT-RCV** key to display the transmitted signal. **TRMT** light will be on.
- c. Turn **OUTPUT LEVEL** knob to adjust 1004 Hz signal to data level (usually 13 dB below the transmission level point).

SIGNAL TO NOISE — RECEIVER

- a. Press **MEAS** key to select SIGNAL TO NOISE.
- b. Press **DISPLAY TRMT-RCV** key to display the received signal. **RCV** light will be on.
- c. Read the Signal to Noise ratio as **dB** in the right display. The received level is displayed in the left display.

Note: Err 7 indicates the received 1004 Hz tone has dropped **below -46 dBm** or exceeded **+13 dBm**.


Figure 3-2. Measurements (Continued)

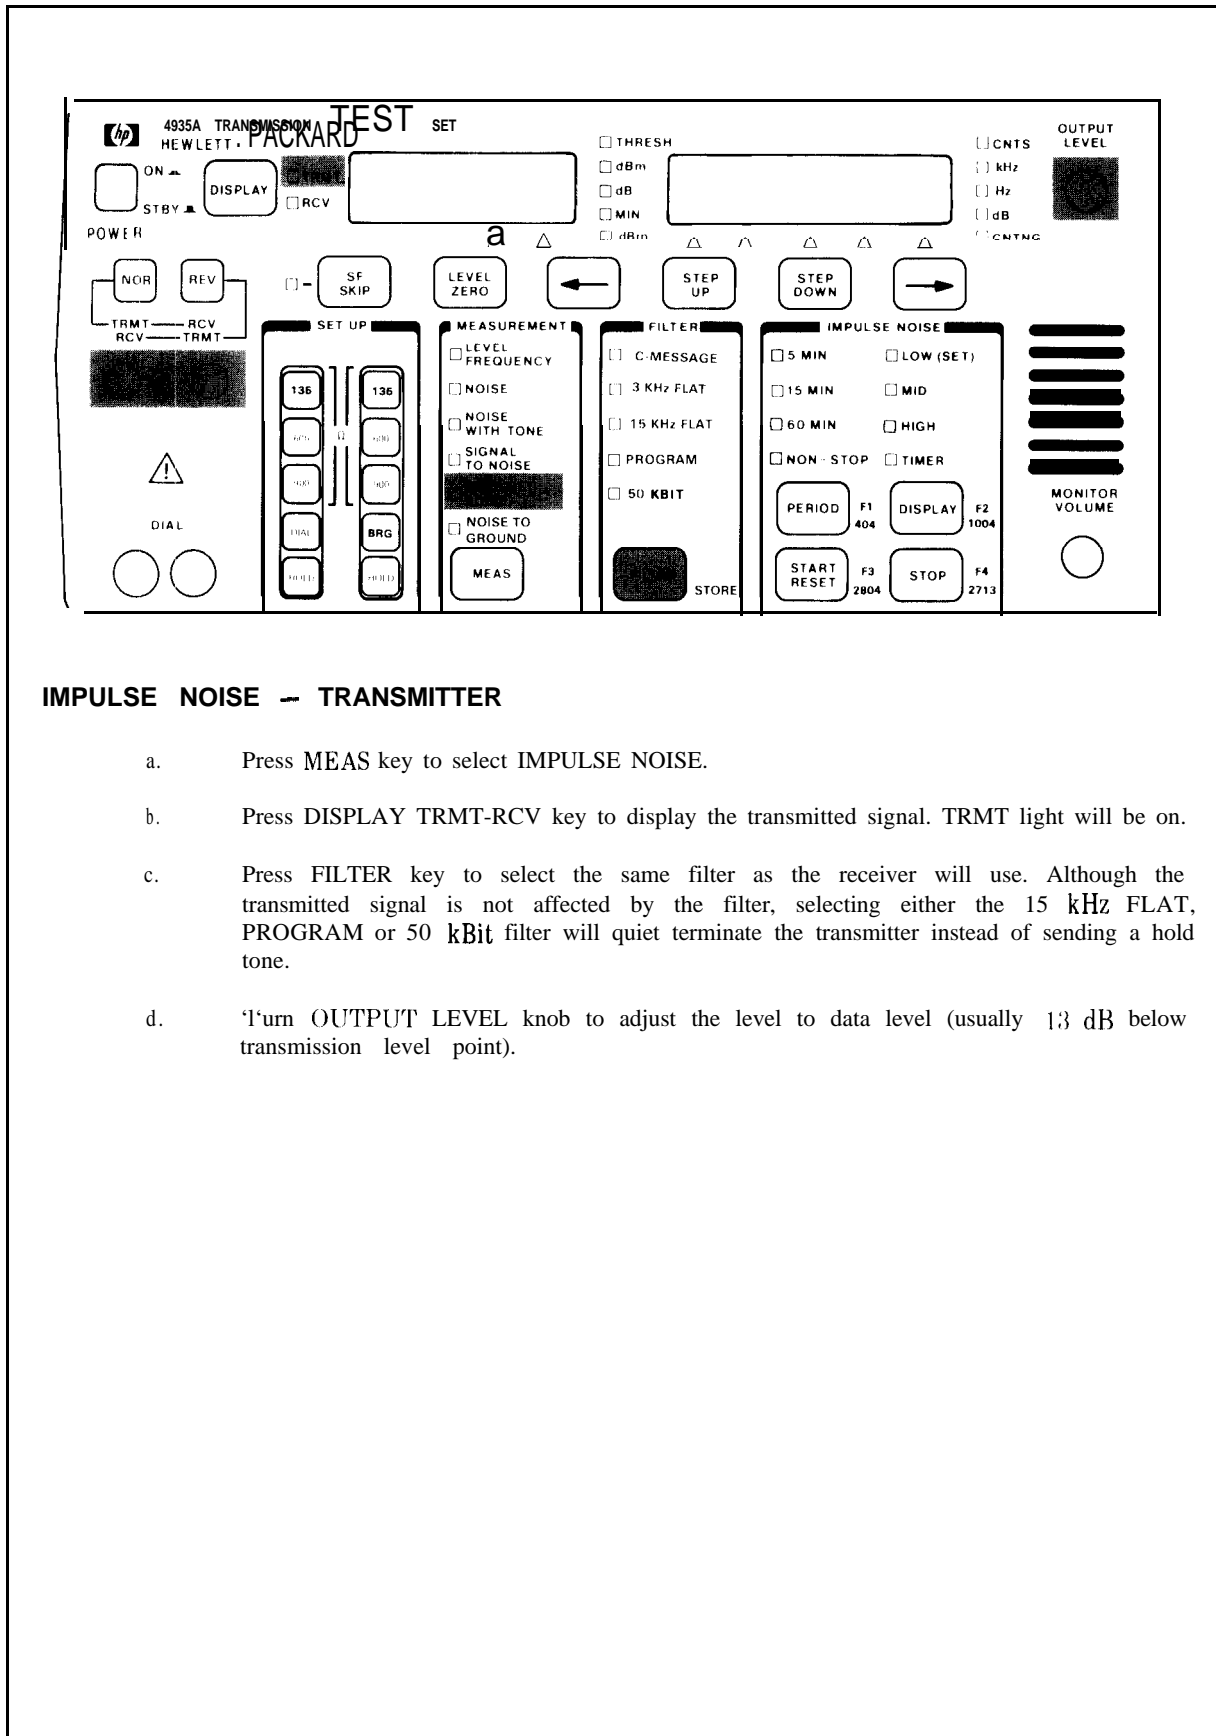

IMPULSE NOISE — TRANSMITTER

- a. Press MEAS key to select IMPULSE NOISE.
- b. Press DISPLAY TRMT-RCV key to display the transmitted signal. TRMT light will be on.
- c. Press FILTER key to select the same filter as the receiver will use. Although the transmitted signal is not affected by the filter, selecting either the 15 kHz FLAT, PROGRAM or 50 kBit filter will quiet terminate the transmitter instead of sending a hold tone.
- d. Turn OUTPUT LEVEL knob to adjust the level to data level (usually 13 dB below transmission level point).

Figure 3-2. Measurements (Continued)

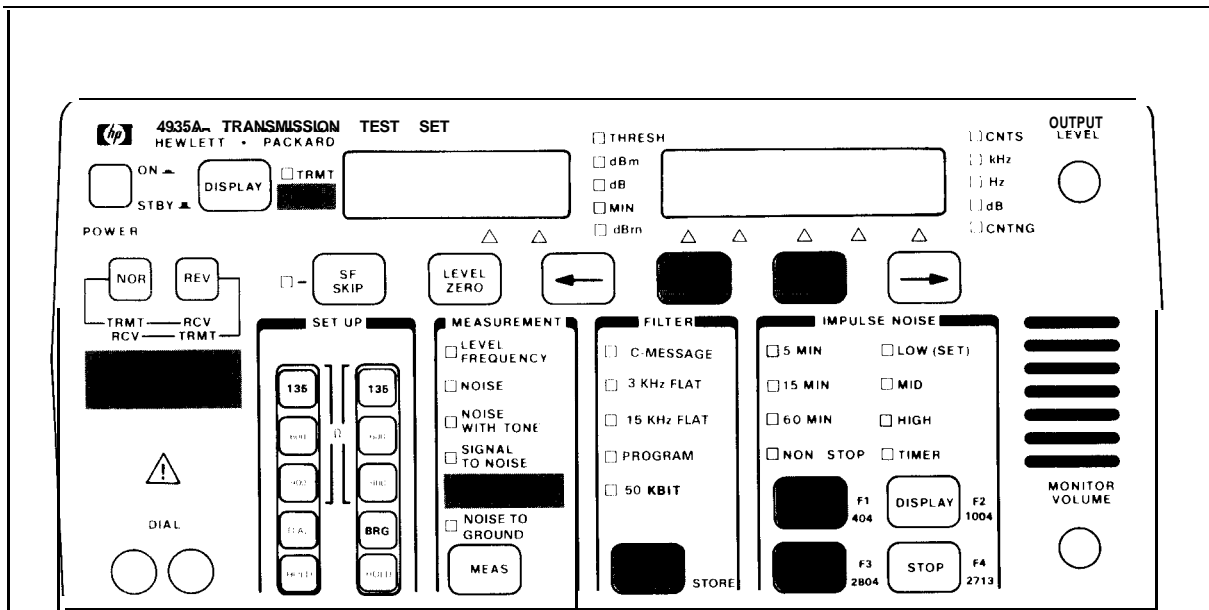

IMPULSE NOISE — RECEIVER


- a. Press MEAS key to select IMPULSE NOISE.
- b. Press DISPLAY TRMT-RCV key to display the received signal. RCV light will be on.
- c. Press FILTER key to select the appropriate filter.
- d. Use STEP UP, STEP DOWN and ← → keys to adjust the level of the LOW threshold shown in the left display. The LOW threshold may be set at any value between 30 and 109 dBm @ 600Ω.

 Note: Err 8 indicates the threshold is set out of limits. See paragraph 3-6 for limits.
- e. Press PERIOD key to set the time of the test to 5 MIN, 15 MIN, 60 MIN or NON-STOP.
- f. Press START-RESET key to start the test. The CNTNG LED by the right display will go on to indicate that the test is in progress. Note that you can see how many counts have been accumulated at each threshold by pressing DISPLAY key. When NON-STOP is selected, STOP must be pressed to stop counting.
- g. The left display shows threshold or minutes; the right display shows the number of counts for the threshold selected.

Note: The 1010 Hz notch filter is automatically used when the C Message or 3 kHz flat filter is selected, it is not used for the other filters.

Note: A minus sign in the counts display indicates that the tone has dropped below -46 dBm for more than 1 sec during the test. Tone dropout could cause invalid count totals.

Figure 3-2. Measurements (Continued)

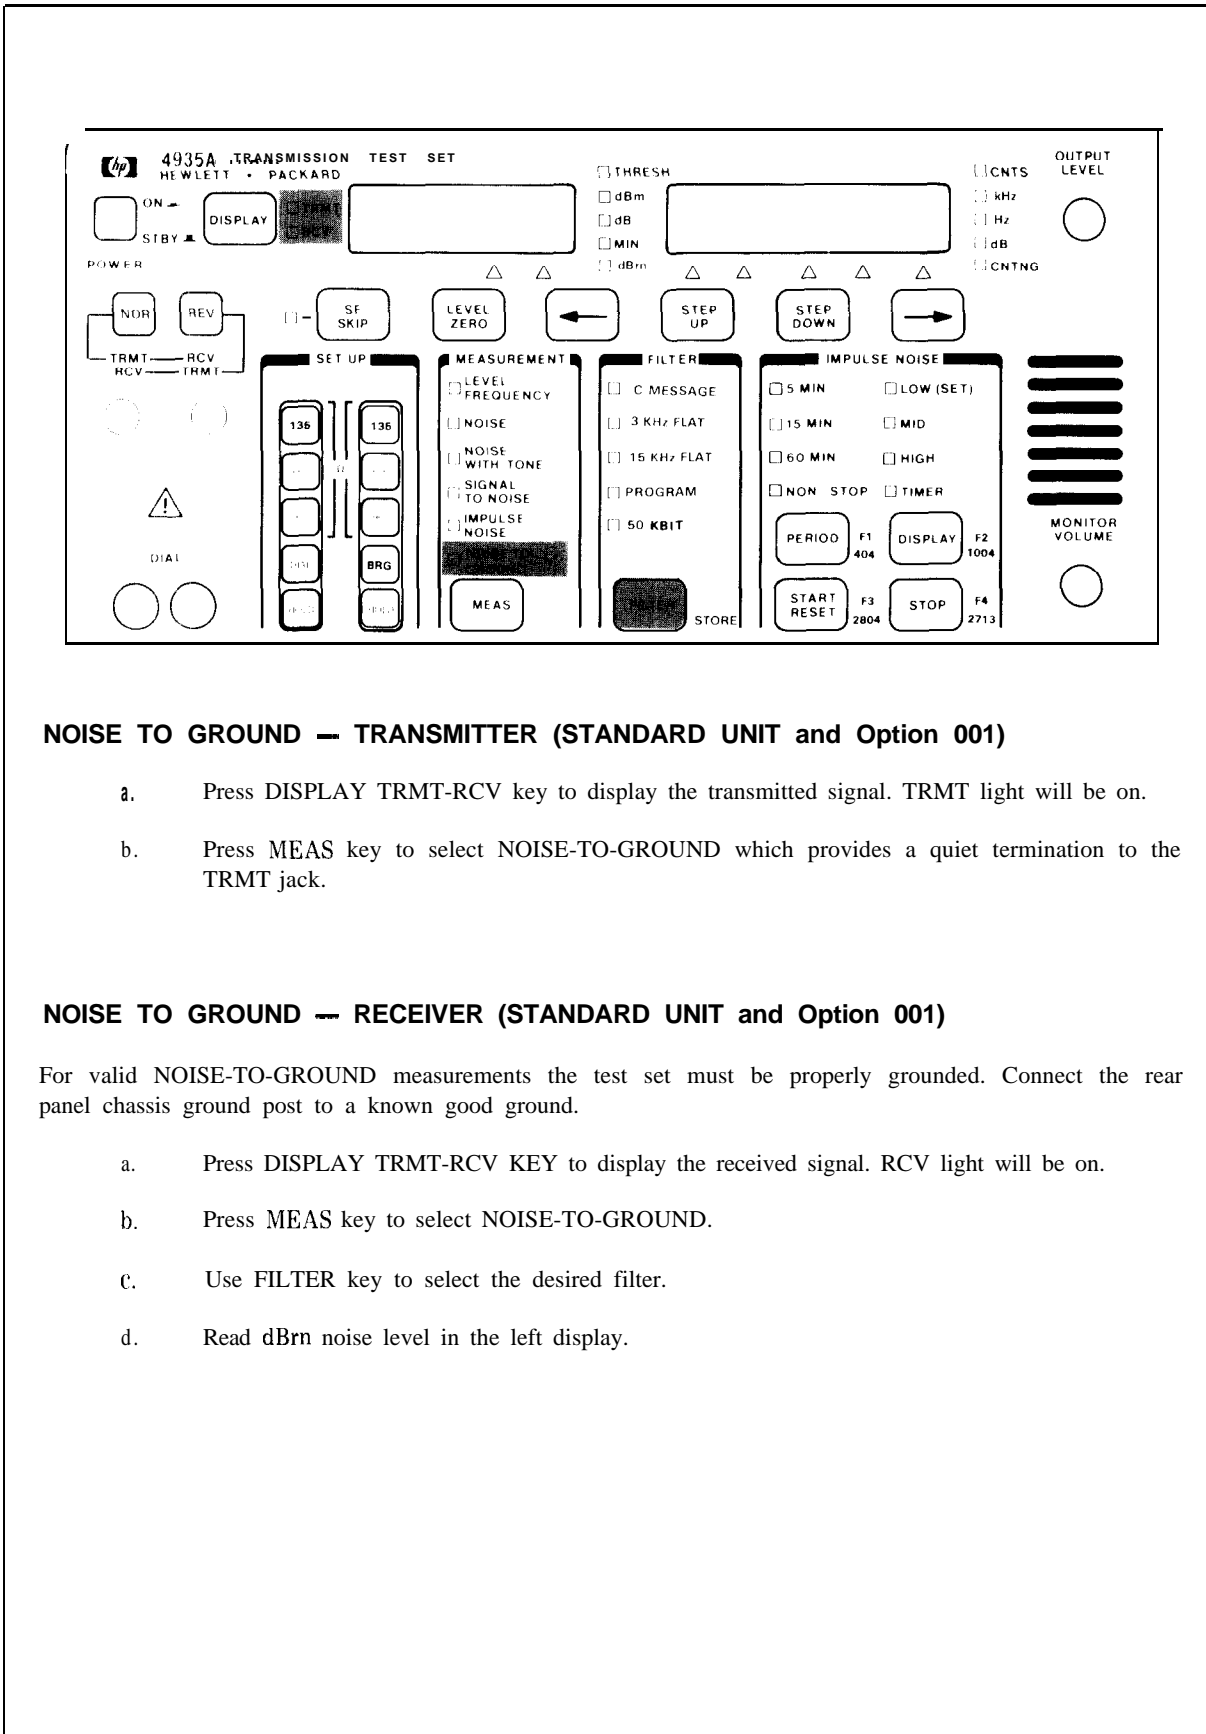

NOISE TO GROUND — TRANSMITTER (STANDARD UNIT and Option 001)


- a. Press DISPLAY TRMT-RCV key to display the transmitted signal. TRMT light will be on.
- b. Press MEAS key to select NOISE-TO-GROUND which provides a quiet termination to the TRMT jack.

NOISE TO GROUND — RECEIVER (STANDARD UNIT and Option 001)

For valid NOISE-TO-GROUND measurements the test set must be properly grounded. Connect the rear panel chassis ground post to a known good ground.

- a. Press DISPLAY TRMT-RCV KEY to display the received signal. RCV light will be on.
- b. Press MEAS key to select NOISE-TO-GROUND.
- c. Use FILTER key to select the desired filter.
- d. Read dB_{rn} noise level in the left display.

Figure 3-2. Measurements (Continued)

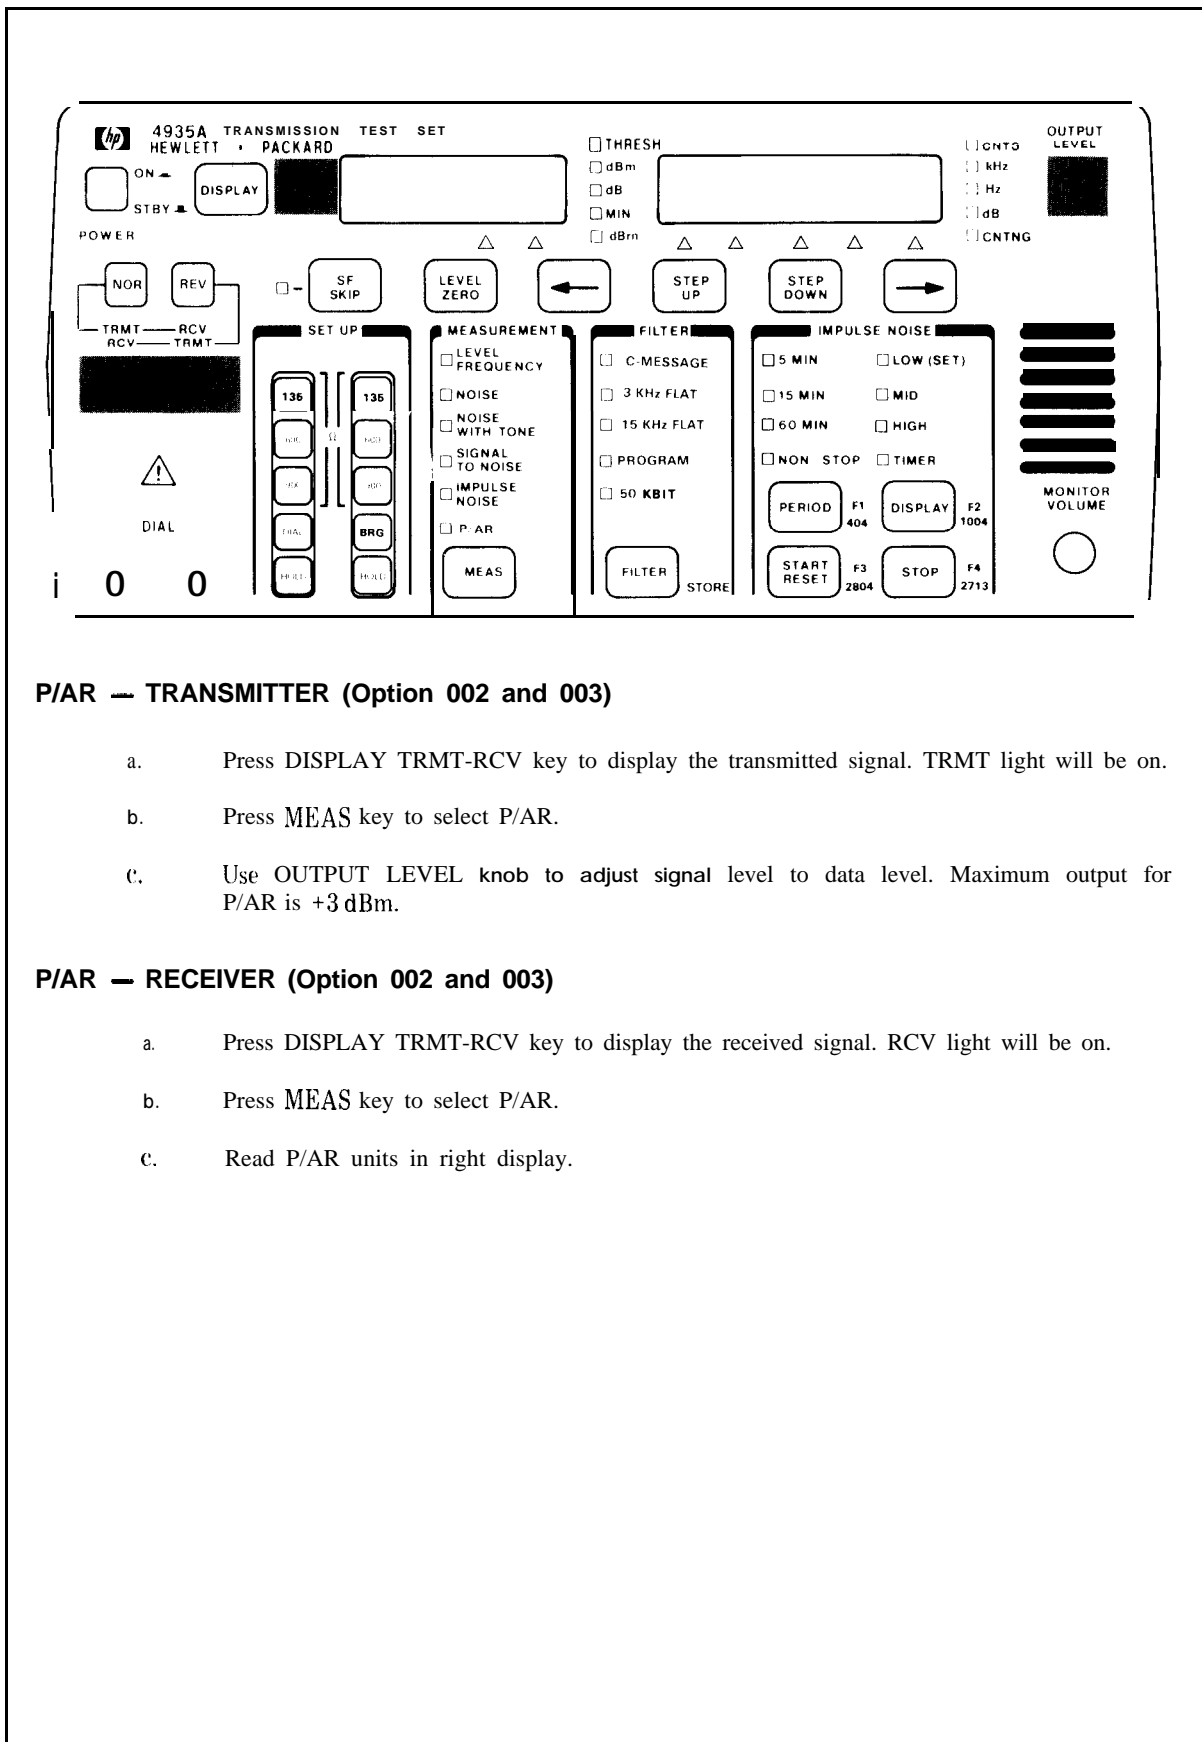


P/AR — TRANSMITTER (Option 002 and 003)

- a. Press DISPLAY TRMT-RCV key to display the transmitted signal. TRMT light will be on.
- b. Press MEAS key to select P/AR.
- c. Use OUTPUT LEVEL knob to adjust signal level to data level. Maximum output for P/AR is +3 dBm.

P/AR — RECEIVER (Option 002 and 003)

- a. Press DISPLAY TRMT-RCV key to display the received signal. RCV light will be on.
- b. Press MEAS key to select P/AR.
- c. Read P/AR units in right display.

Figure 3-2. Measurements (Continued)

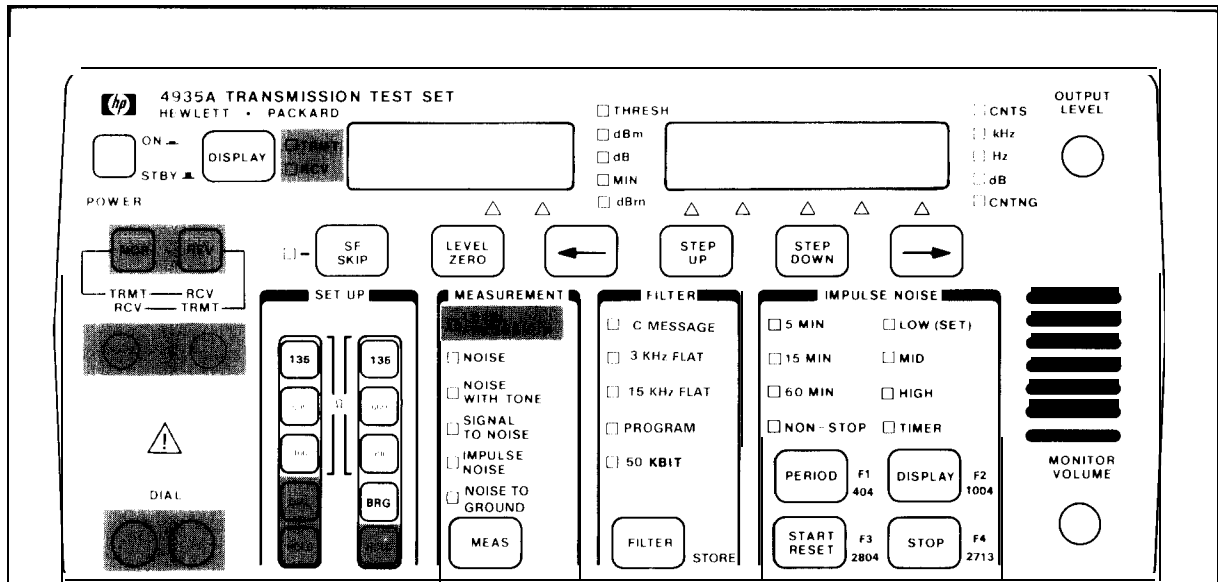

DIAL and HOLD (WET DIAL-UP and 2 two-wire circuits)

DIAL AND HOLD PROCEDURES

The 4935A has the capability to hold wet dial-up lines (lines where the central office provides battery. For example: I DDD; Direct Distance Dialing network). Dialing can be accomplished with a butt-in. The procedure is as follows:

1. Connect circuit to left 310 jack.
2. Push NOR switch to connect TRMT side to left jack.
3. Connect the butt-in handset to the DIAL binding posts.
4. Push TRMT DIAL switch. Use the butt-in to dial the remote end of the circuit.
5. After the circuit is answered, push the TRMT HOLD switch to hold the circuit.
6. Push the TRMT DIAL switch again to release it. This disengages the dial circuitry and allows testing.
7. If the 4935A is designated the receive set, press RCV HOLD switch and then push REV switch to connect RCV side to left 310 jack.

For 2 two-wire circuits, follow preceding steps 1 through 6 for the first side, then:

1. Push RCV HOLD switch.
2. Push REV switch to transfer the transmit side.
3. Push TRMT DIAL switch. Use the butt-in to dial-up the other end.
4. After the circuit is answered, push the TRMT HOLD switch to hold this circuit.
5. Release TRMT DIAL switch by pushing it again.

Figure 3-2. Measurements (Continued)

3-10. MEASUREMENT PRINCIPLES

3-11. The principles for making measurements with the 4935A are described in the following paragraphs. Included are explanations of the measurements and the effects of certain parameters on data transmission.

3-12. INPUT-OUTPUT SWITCHING

3-13. The TKMT and RCV 310 jacks provide connection between the 4935A and the circuit under test. Pressing in the NOR button selects the transmit function for the left 310 jack. The right 310 jack simultaneously performs the receive function. If the REV button is pressed in, the opposite is true as illustrated by Figure 3-3.

3-14. Pressing the two HOLD buttons allows the 4935A to simultaneously hold two DDD (Direct Distance Dialing) circuits. Used with the NOR and REV buttons this permits changing the direction of the test signal without physically changing the test cables and potentially dropping the circuits.

3-15. The input and output impedances are the standard values of 135, 600, or 900 ohms. The 4935A impedance selected must match the impedance of the circuit under test, or erroneous measurements will be obtained.

3-16. The receive input may be internally terminated or bridged across the circuit under test. The 4935A internal termination provides a resistive load which matches the impedance of the line under test. If the line is terminated externally, the internal termination is switched out of the circuit by pressing in the BRG button. The bridged mode provides a high impedance receive input (greater than 50 kohms).

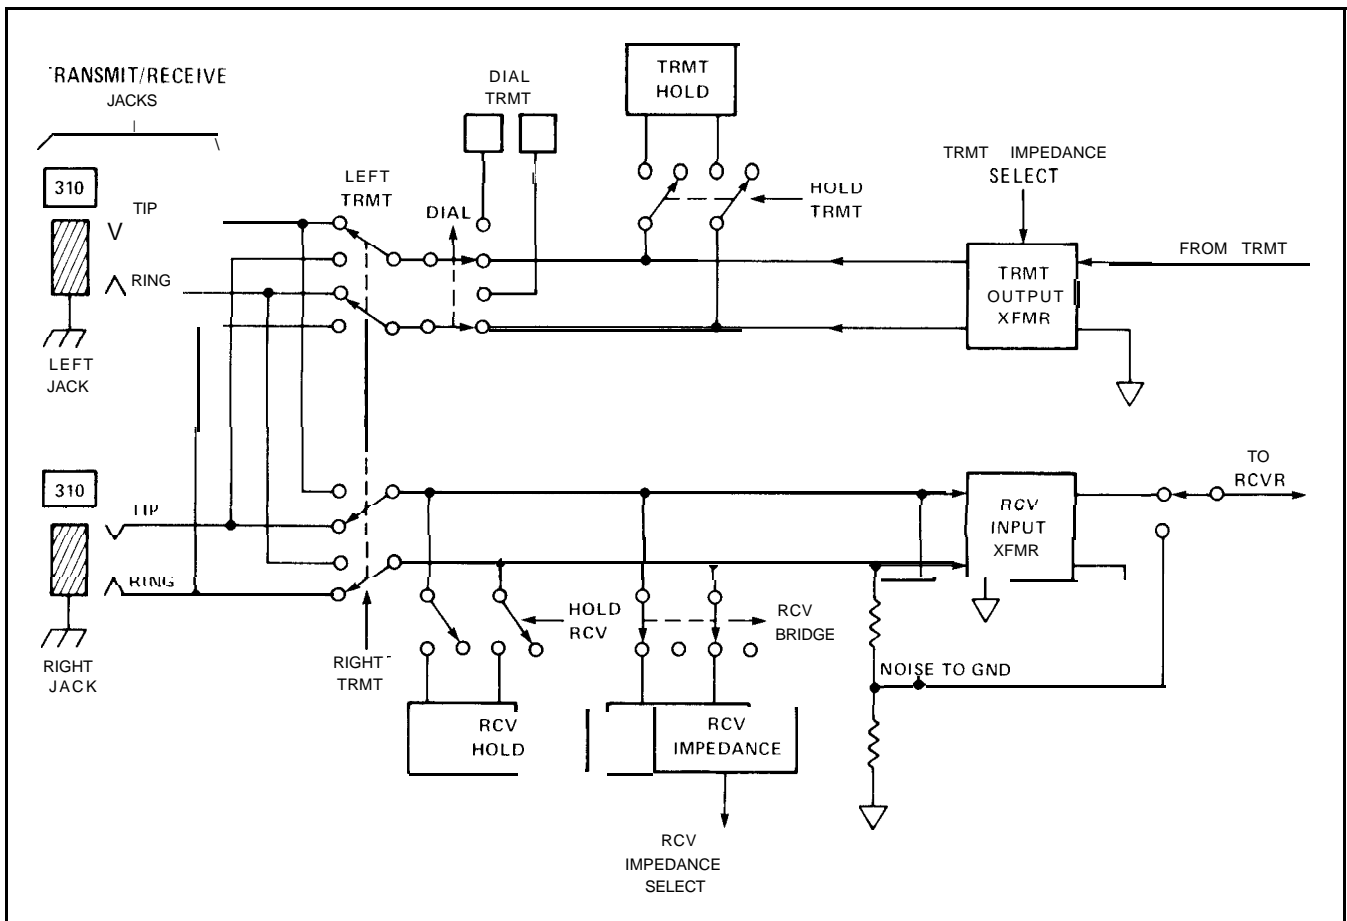


Figure 3-3. Input-Output Switching

3-17. The 4935A input and output circuits are balanced to match standard voice channel lines. A balanced line is electrically symmetrical; the two sides of the line have equal series resistance, series inductance, shunt capacitance, and leakage-to-ground.

3-18. To allow dialing, talking, and listening on the circuit under test, the lineman may plug his handset into the handset terminals (binding posts).

3-19. LEVEL AND FREQUENCY MEASUREMENTS

3-20. The LEVEL FREQUENCY measurement identifies the amplitude versus frequency response of a voice channel, 1000 Hz loss, frequency shifts, and attenuation distortion. The setup as shown in Figure 3-4 is used for all of these functions.

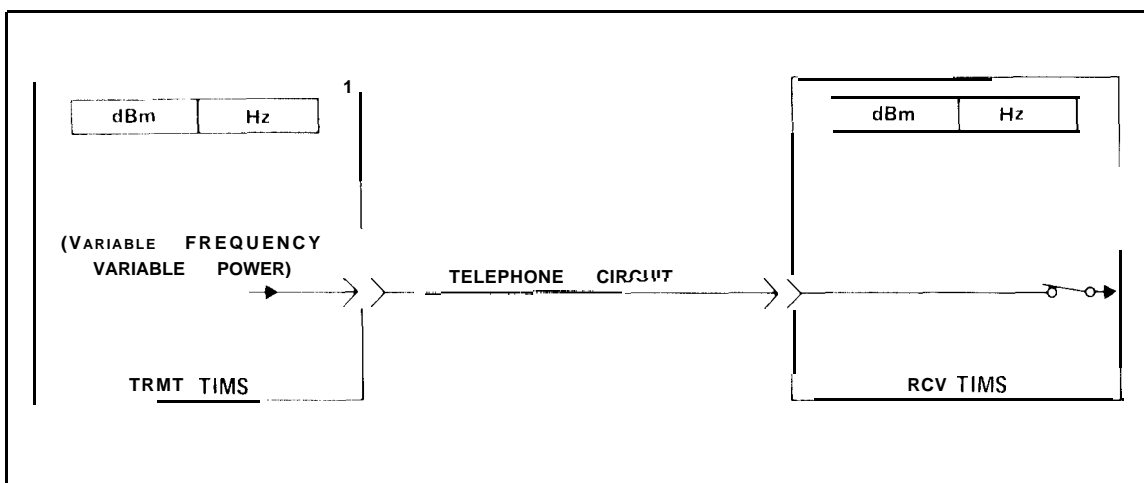


Figure 3-4. Level and Frequency Measurements

3-21. 1000 Hz LOSS

3-22. The 1000 Hz loss measurement, determines the point-to-point loss (or gain) of a 1000 Hz test tone transmitted over a voice channel. To make this measurement, a 1004 Hz test frequency is transmitted at the data level. At the receiving 4935A, the received loss or gain is measured (in dBm).

3-23. The wakeup transmit frequency is actually 1004 Hz (not 1000 Hz), to prevent errors over certain circuits. This 4 Hz offset avoids measurement errors caused by test frequencies which are submultiples of the 8 kHz "T-carrier" sampling rate. The other preset frequencies F_1 , F_3 , and F_4 are offset for the same reason.

3-24. FREQUENCY SHIFT

3-25. The frequency shift measurement checks for any difference in the received frequency with reference to the transmitted frequency (frequency translation) as caused by carrier facilities. To make this measurement, a test tone of known frequency is transmitted. At the receiving end, the received frequency is observed and compared with the transmitted frequency. Any difference between transmitted and received frequencies indicates a frequency shift in the test signal. This measurement is not valid when measured on looped-around carrier facilities, since the frequency shift in one direction (near-end to far-end) may be cancelled by the frequency shift in the other direction (far-end to near-end).

3-26. ATTENUATION DISTORTION

3-27. The attenuation distortion measurement checks the amplitude-versus-frequency characteristics of a circuit using a single frequency measurement technique and defines the circuit's usable bandwidth. To make the measurement, a 1004 Hz test frequency is transmitted at the data level. At the receiving 4935A the power is recorded as the reference level at 1004 Hz. Frequencies between 20 Hz and 110 Hz can be transmitted. The different power readings may be compared to the 1004 Hz reference to obtain the frequency attenuation characteristics of the voice channel in dBm.

3-28. To obtain loss deviations relative to 1004 Hz, the LEVELZERO button is pressed during reception of the 1004 Hz reference signal. The received power level is stored (in dBm) and simultaneously displayed as 0 dB. Level readings taken at other frequencies are compared to the 1004 Hz reference and displayed in dB. The 1004 Hz reference level will not have to be subtracted from levels at other frequencies to obtain dB readings.

3-29. According to telephone industry convention, attenuation is defined as a change in loss of a telephone circuit, compared to the loss of a nominal 1000 Hz signal on that circuit. For example, a circuit with 6 dB more loss at 2800 Hz would have an attenuation distortion of +6 dB.

3-30. SF SKIP

3-31. SF Skip (single frequency skip) automatically prevents the 4935A from transmitting frequencies in the 2450 Hz to 2750 Hz range. This feature is used when transmitting over a dial-up network with single frequency signaling units. Any skipped frequency can be programmed using the STORE capability of the 4935A (see Figure 3-1).

3-32. MESSAGE CIRCUIT NOISE MEASUREMENTS

3-33. The message circuit noise measurements determine the effects of background noise and tones. Figure 3-5 illustrates the basic setup for these measurements.

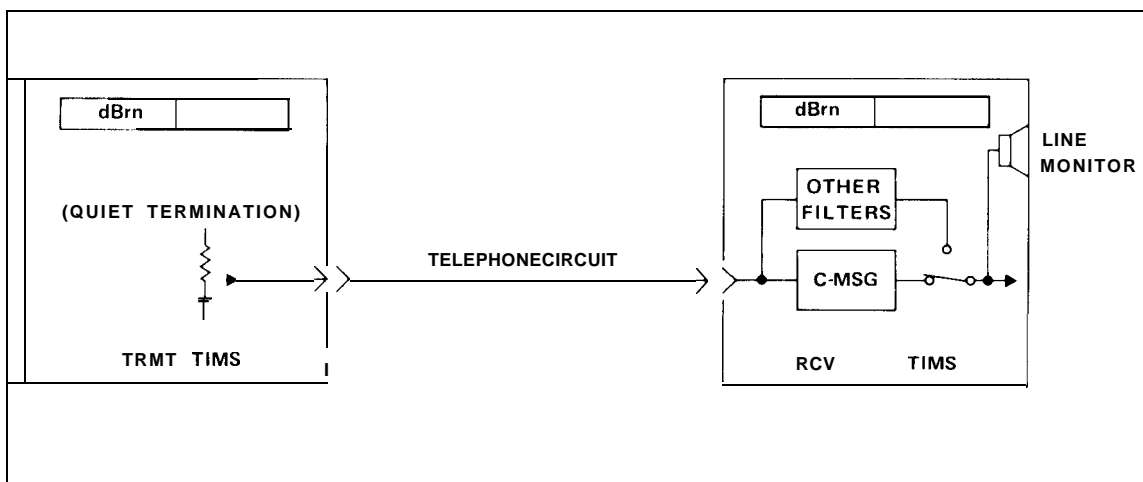


Figure 3-5. Message Circuit Noise Measurements

3-34. The message circuit measurement is obtained by measuring the noise present on a line with a quiet termination on one end (supplied by the transmitting 4935A) and a weighted measuring device on the other end (receiving 4935A).

3-35. The C-message filter measures noise signals that annoy the typical telephone service subscriber. C-message weighting is also used to evaluate the effects of noise on voice-grade data circuits. C-weighting is valid for data transmission since the response characteristic is relatively flat over most of the frequency range for data transmission (600 to 3000 Hz, see Figure 3-6).

3-36. The 3 kHz flat filter has a response that provides much less attenuation to the low frequencies (60 Hz to 500 Hz) than the C-message filter. By comparing a 3 kHz flat noise measurement to a C-message noise measurement, the relative influence of low frequency noise (60 Hz commercial power, 20 Hz ringing, etc.) can be determined (see Figure 3-7).

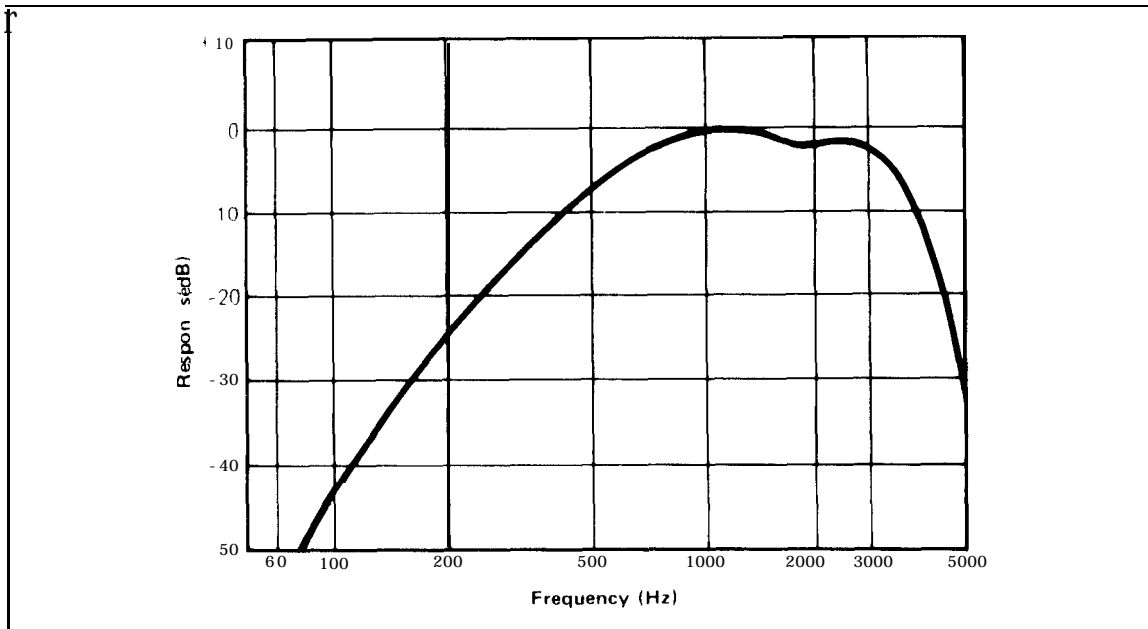


Figure 3-6. C-Message Weighting Characteristic

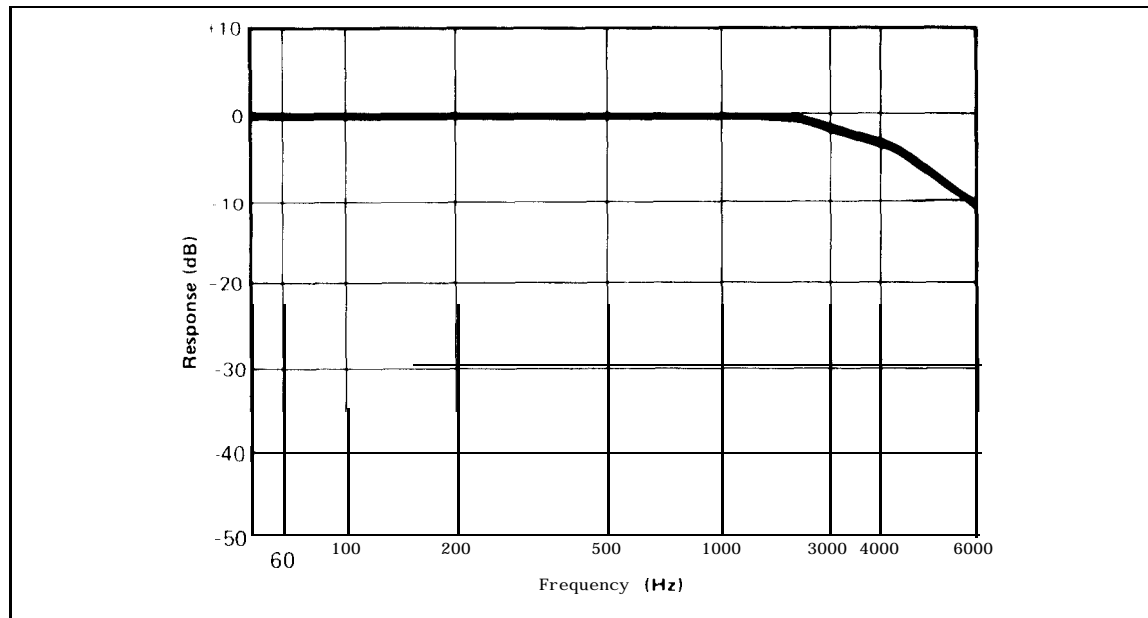


Figure 3-7. 3 kHz Flat Weighting Characteristic

3-37 The program weighted filter is designed for weighted noise measurements on program channels used primarily by the broadcast industry to communicate between studio and transmitter site (see Figure 3-8).

3-38 The 15 kHz flat filter is also designed for measurements on program channels. Like the 3 kHz flat filter, it includes low frequency noise in the measurement (see Figure 3-9).

3-39 The 50 kHz flat filter is designed to measure weighted noise on wide-band data circuits (see Figure 3-10).

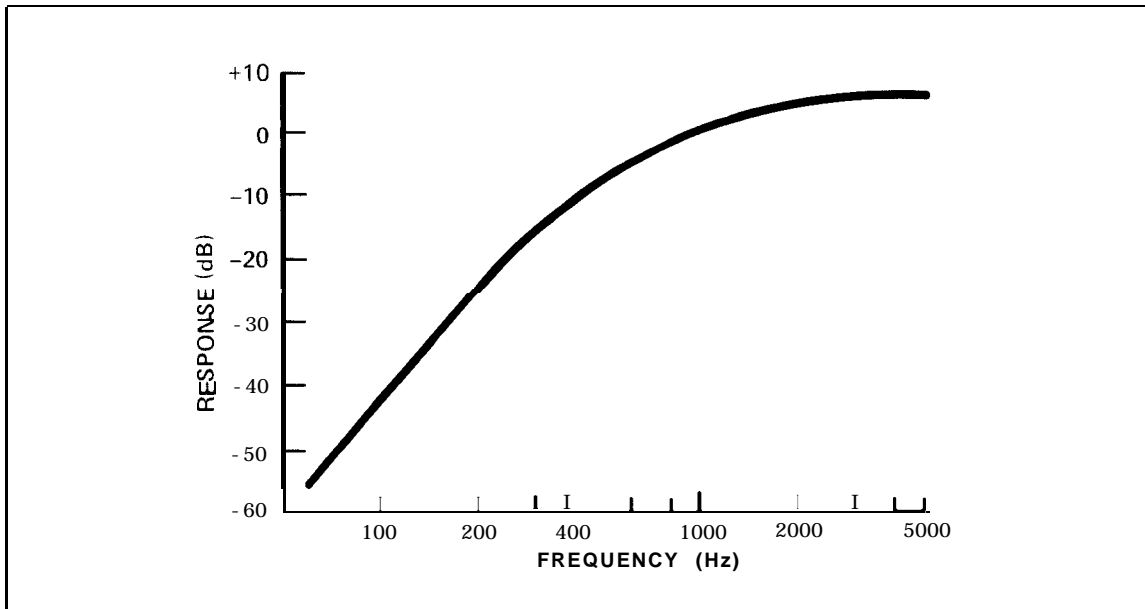


Figure 3-8. Program Weighted Filter

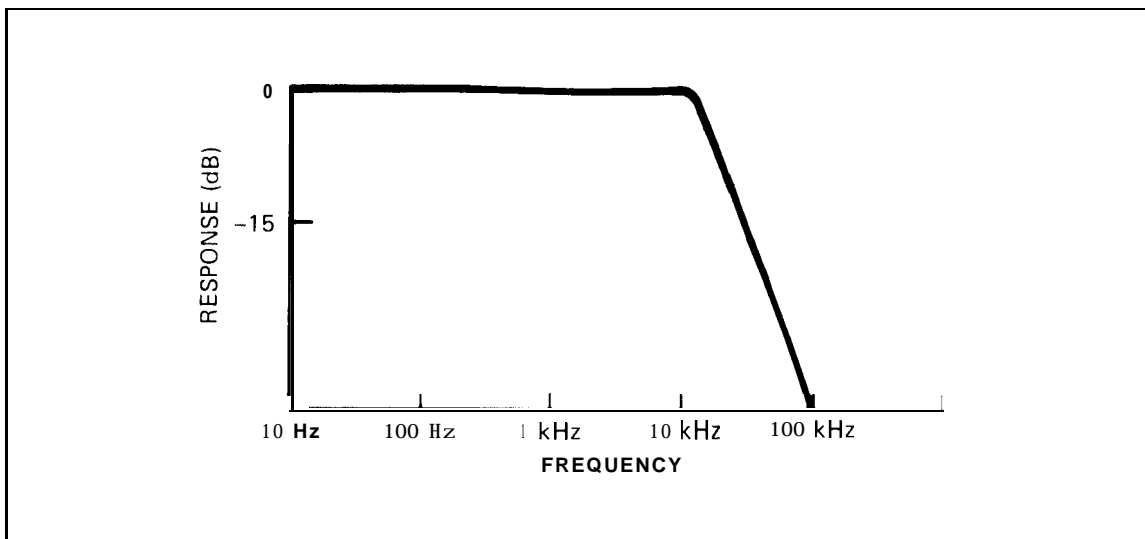


Figure 3-9. 15 kHz Flat Filter

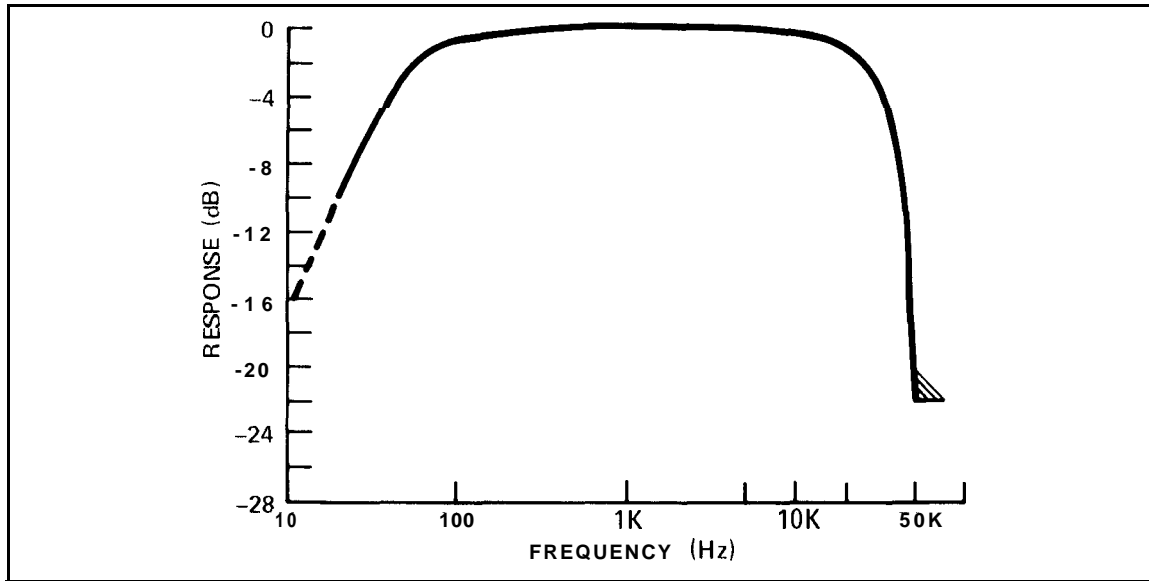


Figure 3-10. 50 kBit Filter

3-40. NOISE MEASUREMENTS

3-41. Received noise levels are displayed in units of dB_{rn}, or dB with respect to reference noise (1000 Hz tone at -90 dBm). For example, a noise reading of 20 dB_{rn} has an RMS power of -70 dBm (20 + 90 = -70). When the C-message filter is selected, readings are displayed in units of dB_{rn C} and the noise level with a C-message weighted measuring device is displayed in dBm.

3-42. NOISE-WITH-TONE (Notched Noise)

3-43. The noise-with-tone measurement technique is used to condition compandors and/or quantizers in the transmission system to their normal operating levels for continuous data signals. Therefore, noise levels are received which duplicate levels present under operating conditions.

3-44. To make this measurement, a 1004 Hz test frequency (holding tone) is transmitted at a data level. At the receiving 4935A, the 1004 Hz holding tone is selectively attenuated by 50 dB using a notch filter (all frequencies between 995 Hz and 1025 Hz are attenuated by 50 dB). The remaining received signal (noise) is passed through a filter for measurement. The received noise level is displayed in units of dB_{rn}. Figure 3-1 1 illustrates the combination of the C-message weighting and notch filter characteristics. The 4935A combines the notch with any of the five filters.

3-45. SIGNAL-TO-NOISE MEASUREMENT

3-46. The signal-to-noise mode allows measurement of the ratio of received signal-plus-noise power to noise power (S + N/N).

3-47. To make this measurement, a 1004 Hz test frequency is transmitted over the line. At the receiving 4935A, the 1004 Hz signal is selectively attenuated by 50 dB in the notch filter, usually C-message weighted. The remaining received signal (noise) is then compared with the original signal-plus-noise signal. The computed signal-to-noise ratio is displayed in units of dB. Figure 3-1 2 illustrates this measurement. This is one of the most important parameters for determining the quality of a line.

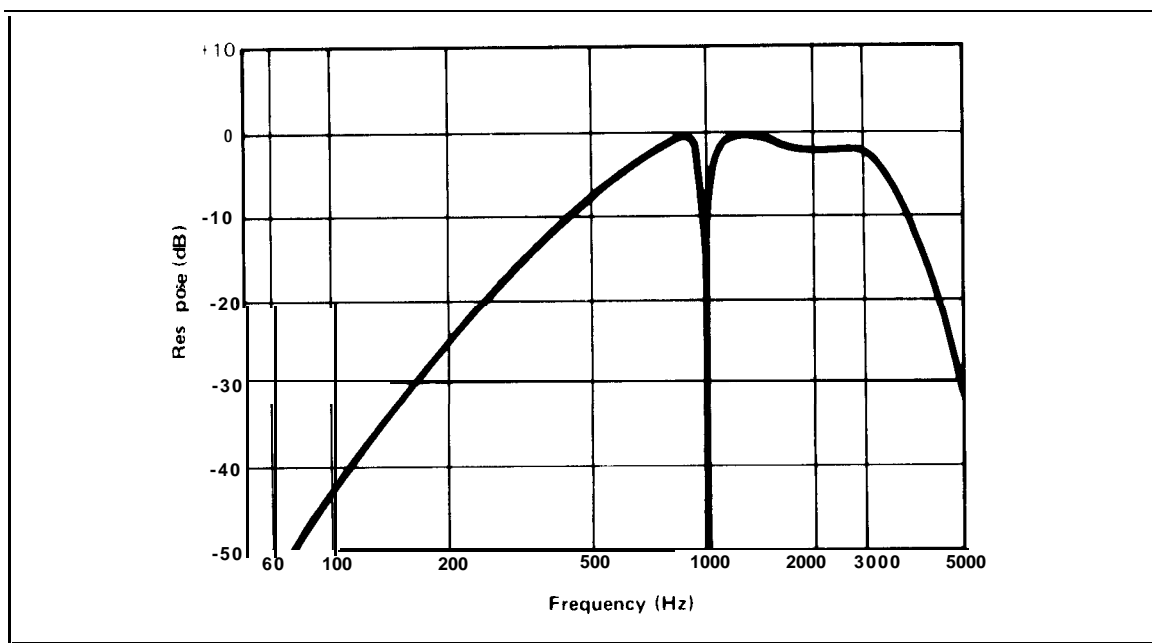


Figure 3-1 1. C-Message Weighting with Notch Characteristic

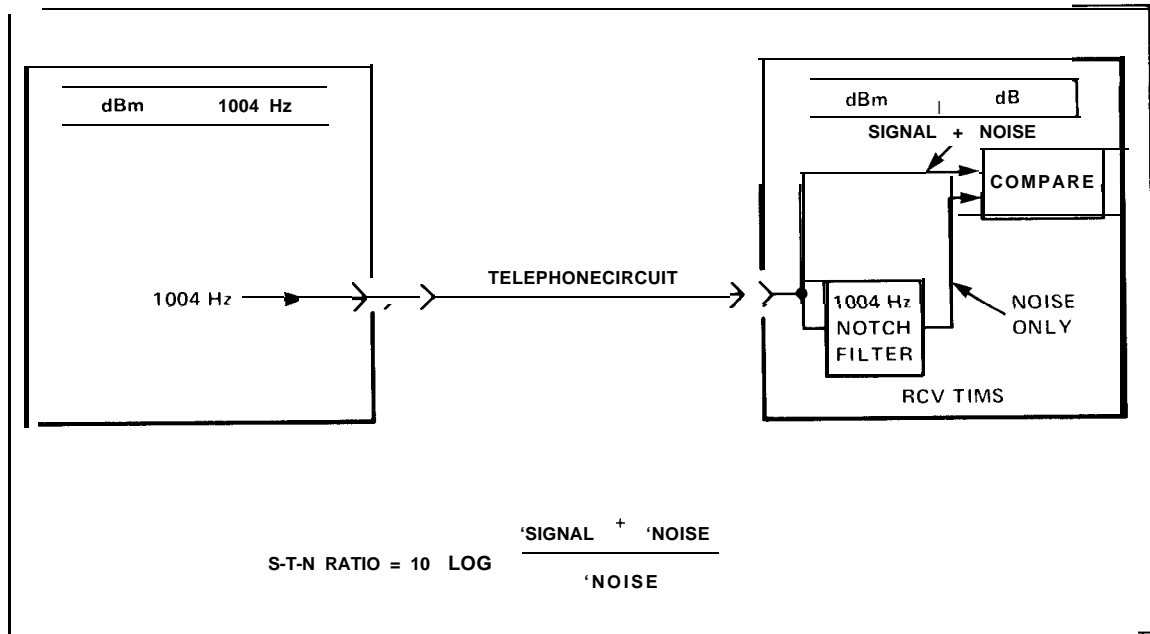


Figure 3-12. Signal-to-Noise Measurement

3-48 SINGLE FREQUENCY INTERFERENCE

3-49. Single frequency interference refers to unwanted steady tones which may appear in lines. Occasional bursts of low level tones which may occur from crosstalk of multifrequency signalling, for example, do not fall in this category. Single frequency tones may interfere with certain data signals, particularly narrowband signals which are multiplexed onto a voiceband channel.

3-50. A simple audio monitoring arrangement will usually detect this interference, since tones exceeding acceptable levels are easily heard if the C-message noise is within limits. The single frequency interference check is made with the setup shown in Figure 3-5. After the received noise signal passes through the C-message filter, the resultant signal is applied to the line monitor speaker. The 4935A operator listens for any predominant tone, which may indicate a single frequency interference problem.

3-51. If a single frequency tone (or tones) of long duration is heard, single frequency interference may be present and should be measured. To determine the frequency and level of the interfering tone, a frequency selective volt meter or spectrum analyzer must be used. Single frequency interference during a C-message filter measurement occurs if the signal is 3 dB or less below the C-message noise limits.

3-52. IMPULSE NOISE

3-53. The S-level Impulse Noise Mode measures one of the most important transient phenomena. Transient phenomena can cause data transmission errors and/or interruptions to datacom systems.

3-54. Impulse noise is that component of the received noise signal which is much greater in amplitude than the normal peaks of the message circuit noise. It occurs as short duration spikes and/or bursts of energy. Studies by Bell Telephone laboratories have shown that impulse noise spikes have a duration of less than one millisecond, and that all significant effects of the noise spike disappear within four milliseconds. Waveform (b) in Figure 3-13 illustrates a received holding tone (or test signal) that includes interfering impulse noise spikes. The impulse noise measurement counts the number of noise spikes above a selected threshold level during a specified time period.

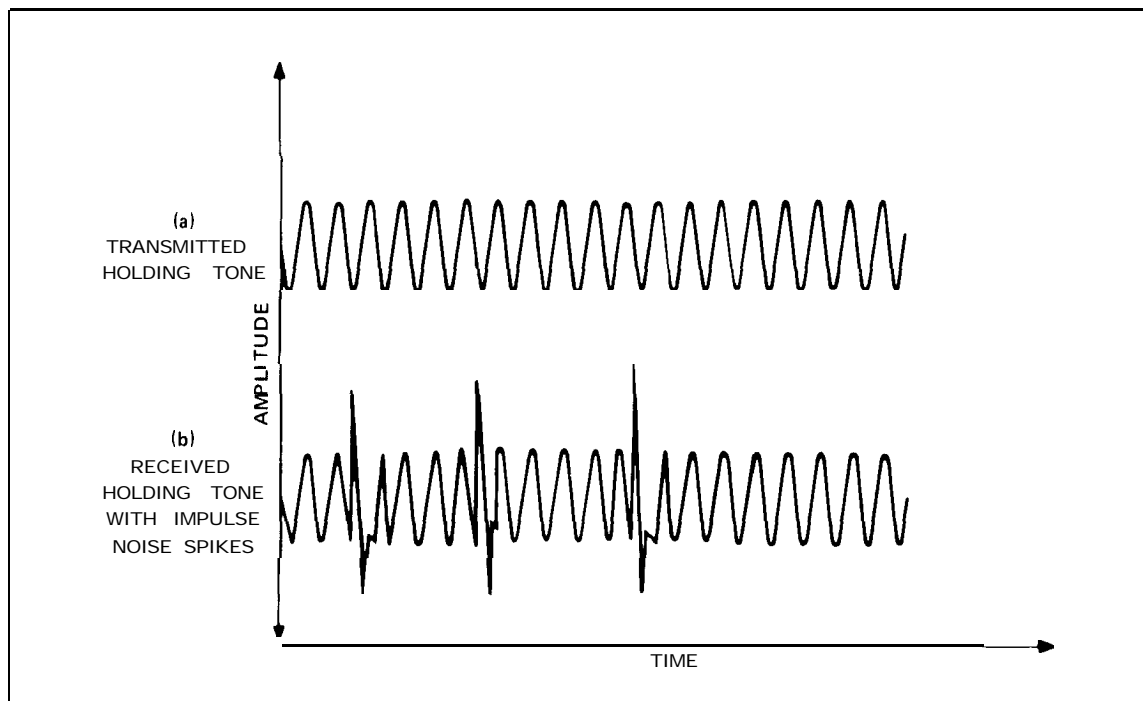


Figure 3-13. Impulse Noise Waveform Representation

3-55. NOISE-TO-GROUND MEASUREMENT

3-56. The 4935A uses noise-to-ground to measure the longitudinal noise present on a telephone circuit, with reference to ground. The transmitting 4935A provides a quiet termination at one end of the voice channel, and the receiving 4935A provides a frequency weighted filter and detector at the other end. The basic measurement technique used for the noise-to-ground measurement is very similar to the message circuit noise measurement; the main difference lies in the use of a ground reference. Figure 3-14 illustrates this difference.

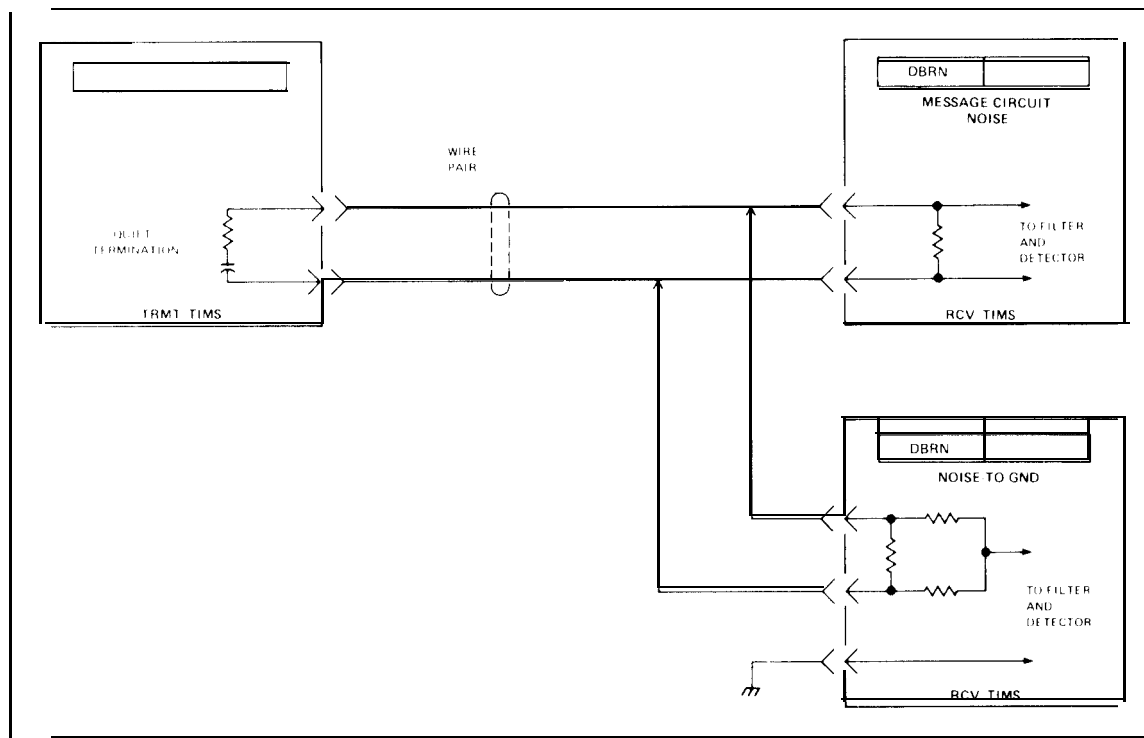


Figure 3-14. Noise-to-Ground Related to Message Circuit Noise

3-57. Noise-to-ground measurements are usually made for troubleshooting purposes; to measure the magnitude of longitudinal signals, which may indicate the susceptibility of a cable pair to electrical coupling from external sources. These measurements are also made to coordinate new installations with power companies, to minimize power line coupling.

3-58. The relative line balance of an end loop can be calculated by subtracting the measured noise-to-ground (N_g) value from the measured message circuit noise (N_m) value. This calculation is only valid if the measurements are made on a twisted pair and it is assumed that the message circuit noise is caused by longitudinal noise converted to message circuit noise by line imbalance. It is recommended that both message circuit noise and noise-to-ground be measured with the 3 kHz flat weighted filter to include the effects of power line related noise.

3-59. PEAK-TO-AVERAGE RATIO MEASUREMENT

3-60. The 4935A uses the peak-to-average ratio (P/AR) to measure the channel dispersion (spreading in time of signal amplitude) due to transmission imperfections. As the P/AR signal traverses a dispersive medium, the peak-to-average ratio will deteriorate. Then by measuring the peak-to-average ratio at the receiving end, a simple measure of dispersion is obtained. P/AR is measured as the ratio of the peak to full-wave rectified average values of a specially processed test signal transmitted over a line. The test signal has a peak-to-average ratio and a spectral content that approximates a data signal. Figure 3-15 illustrates the frequency spectrum of the transmitted P/AR test signal, and Figure 3-16 illustrates the signal envelope.

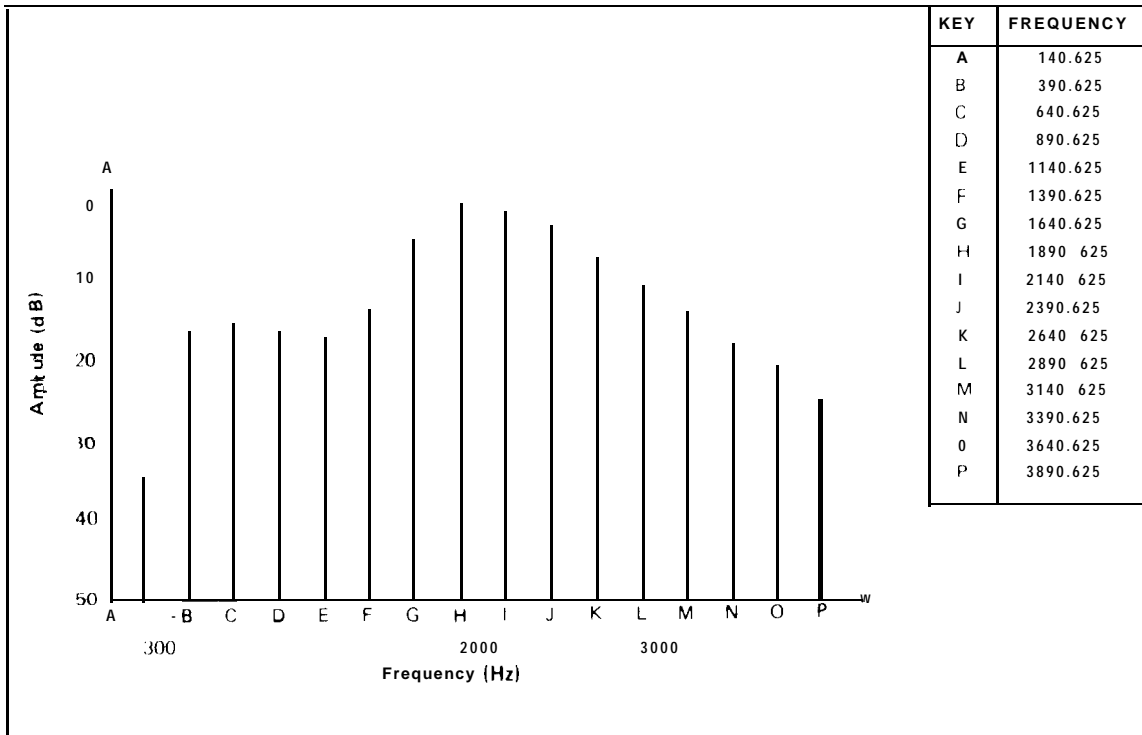


Figure 3-1 5. P/AR Transmit Signal Frequency Spectrum

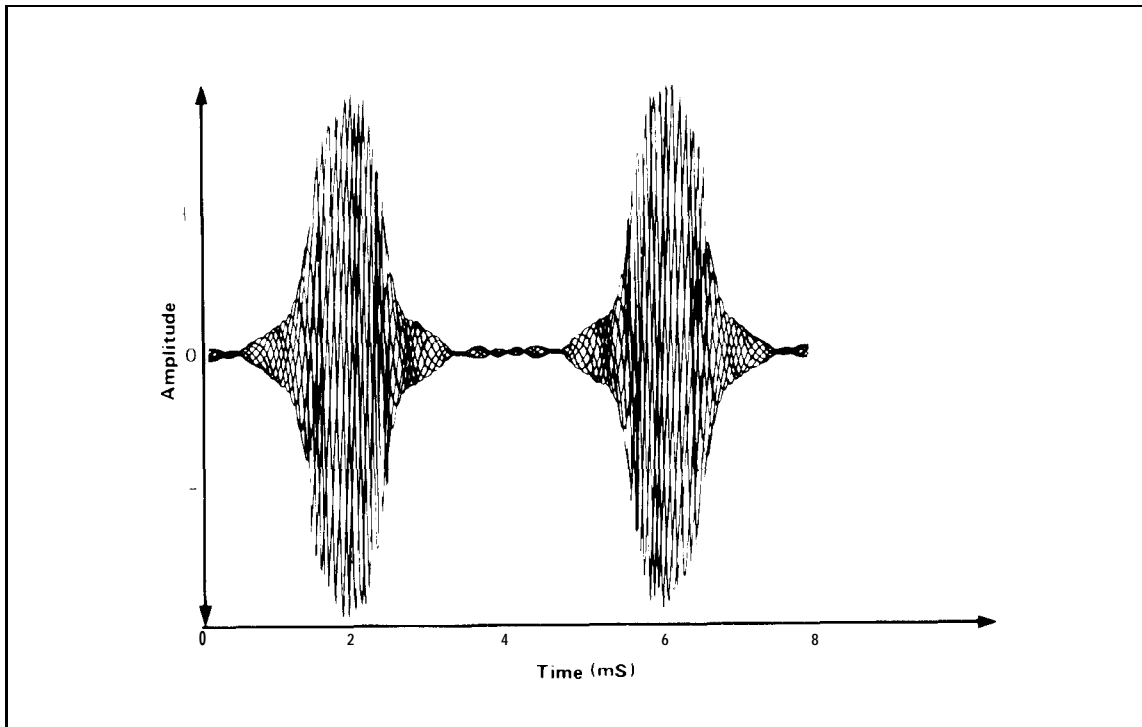


Figure 3-16. P/AR Transmit Signal Envelope

3-61. The P/AR measurement is a single number rating of the fidelity of a voiceband channel and is a weighted measure of the total attenuation, phase distortion, and noise. The P/AR rating is derived by comparing the P/AR of an ideal signal with the P/AR of the output signal of the system under test. The P/AR measurement is most sensitive to envelope delay distortion and is also affected by noise, bandwidth reduction, gain ripples, nonlinearities such as compression and clipping, and other impairments. P/AR is simpler to understand than envelope delay because it is only one number instead of a curve. Also P/AR can be measured in loop-around mode with only one instrument, unlike envelope delay. If the P/AR signal were received entirely undistorted, the P/AR rating would be 100, while a circuit that causes a 10% reduction in the peak-to-average ratio has a P/AR rating of 80.

3-62. The P/AR measurement provides little information about the nature of the fault condition in any particular case. However, since P/AR is a figure of merit for the channel, it can be used as a benchmark for future reference. After other measurements are made and a channel is considered acceptable, the P/AR rating can be recorded for future reference. In case of a suspected trouble on the channel, P/AR may be measured first and then compared to the benchmark P/AR value. Deviations in excess of ± 4 P/AR units from an initial P/AR value provides sufficient reason to suspect that some channel characteristic has changed significantly.

SECTION IV

PERFORMANCE TESTS

4-1. INTRODUCTION

4-2. Tests in this section verify instrument specifications. These tests may be used as part of incoming inspection and can be done without accessing the instrument's internal circuits. If the instrument fails the tests, refer to the Service Section.

4-3. EQUIPMENT REQUIRED

4-4. Equipment required for the performance tests is listed in Table 1-2. Test equipment with similar characteristics may be substituted.

4-5. TEST RECORD

4-6. Test results may be recorded on the test record located at the end of this section. Results of tests recorded during incoming inspection can be used for comparison in maintenance, troubleshooting, and following repairs and/or adjustments.

4-7. SELF CHECK

4-x. Self check is automatically done each time the instrument is powered up. Some circuits and filters are tested in addition to all the front panel leds and seven segment displays.

4-9. PERFORMANCE VERIFICATION

4-10. This instrument requires periodic performance verification. Depending on use and operating environment, the instrument should be checked every six months using the performance tests. Performance tests should also be made following repair or when internal adjustments are required.

4-11. To shorten testing time, the abbreviated Performance Tests may be used. The test results do not totally confirm that the instrument meets the published specifications. Perform the full test to verify that instrument's performance completely meets the specifications.

PERFORMANCE TESTS

4-12. PERFORMANCE TESTS

4-13. Transmitter Flatness at +10 dBm

SETUP:

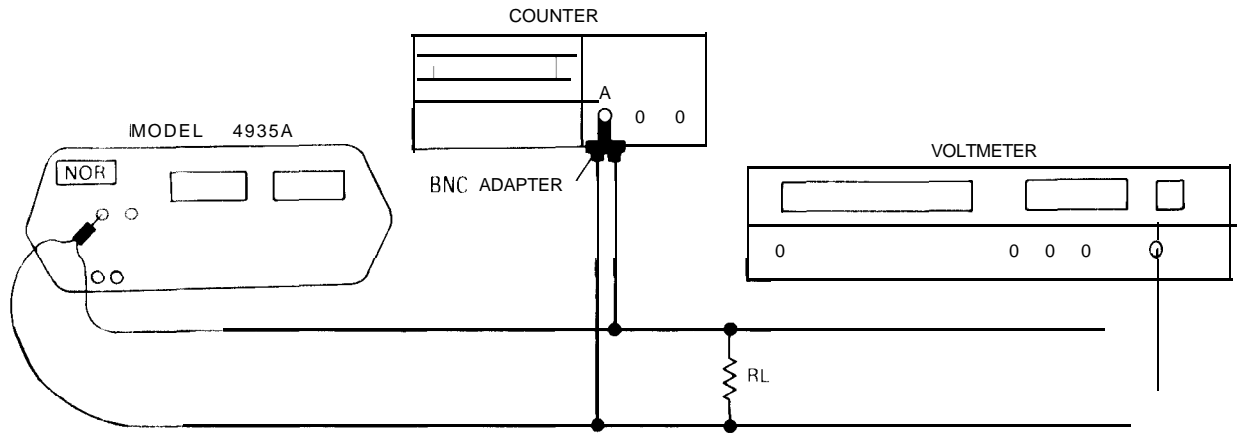


Figure 4-1. Transmitter Flatness Test at +10 dBm

EQUIPMENT:

- | | |
|--|-----------------------|
| Fluke 5200A AC Calibrator | BNC to 310 adapter |
| HP 5315 Counter | 2 BNC cables |
| HP 3490A Multimeter | BNC "P" connectors |
| 20 dB Amp (circuit shown in Figure 4-13) | 600 ohm termination |
| | 1 BNC to banana cable |

1. Connect Voltmeter to the 4935A TRMT jack as shown in Figure 4-1
2. On 4935A select:

POWER ON
DISPLAY TRMT
SET UP				press in TRMT 600Ω
MEASUREMENT ..	LEVEL			FREQUENCY
3. Set the 4935A to 1004 Hz
4. Adjust 4935A OUTPUT LEVEL until 2.435 Vrms (9.95 dBm into 600 ohms) appears on the Voltmeter (note: 4935A must be terminated as shown above).
5. Check the 4935A transmitter at the frequencies listed in Table 4-1
6. At 85 kHz verify that the 4935A frequency when measured with the counter is between 84.996 kHz and 85.004 kHz.

PERFORMANCE TESTS

Table 4-1. Transmitter Flatness at +10 dBm

FREQUENCY	ACCEPTABLE VOLTAGE RANGE
20 Hz	2.17 to 2.73 Vrms
200 Hz	2.38 to 2.49 Vrms
5 kHz	2.38 to 2.49 Vrms
15 kHz	2.38 to 2.49 Vrms
30 kHz	2.30 to 2.58 Vrms
60 kHz	2.30 to 2.58 Vrms
85 kHz	2.25 to 2.64 Vrms

ABBREVIATED TRANSMITTER FLATNESS AT +10 dBm TEST
 See the Abbreviated Transmitter Flatness Test.

PERFORMANCE TESTS

4-14. Transmitter Flatness at -40 dBm

SETUP:

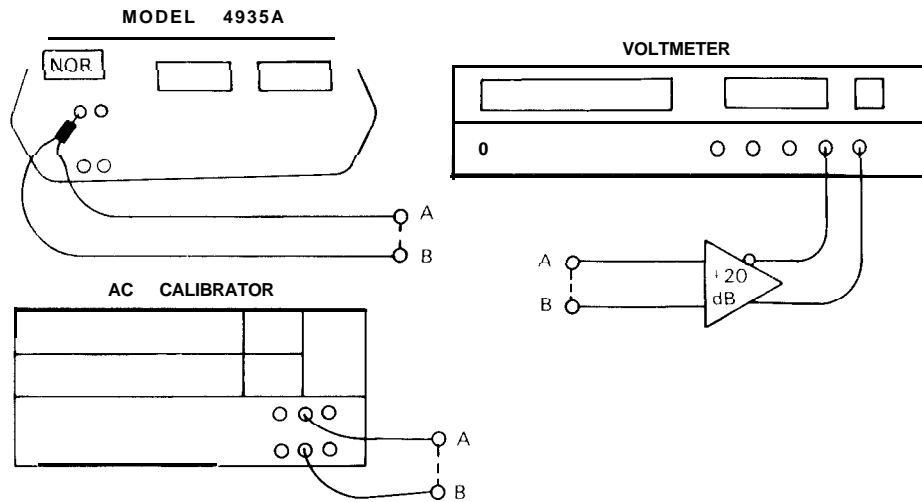


Figure 4-2. Transmitter Flatness Test at -40 dBm

EQUIPMENT:

- | | |
|------------------------------------|---------------------------|
| Fluke 5200A AC Calibrator | 3 IO to banana adapter |
| 20 dB amplifier (see figure 4-1 3) | 2 banana plug test cables |
| HP 6234A Dual Output Power Supply | HP 3490A Multimeter |

1. Set up the 4935A as follows:

POWER ON
DISPLAY TRMT
N O R	press IN
SET UP press in TRMT 600Ω
	HRG out
	DIAL out
	both HOLDS out
MEASUREMENT	.. LEVEL FREQUENCY
IMPULSE N O I S E	press DISPLAY (1004 Hz)

2. Adjust the Power Supply to provide ± 12 V to the +20 dB Amplifier
3. Set the AC Calibrator and the 4935A to exactly -40 dBm as follows.
 - a. Set the AC Calibrator to 7.746 mV (-40 dBm into 600 ohms) at 1004 Hz with the output floating.
 - b. Connect the AC Calibrator to the +20 dB amplifier input. Record the amplifier output voltage.
 - c. Connect the +20 dB amplifier input to the 4935A TRMT 310 jack. Monitor the +20 amplifier output with the voltmeter.
 - d. Adjust the 4935A OUTPUT LEVEL control until the voltmeter reading is the same as the +20 dB amplifier output voltage in step b. The AC Calibrator and the 4935A are both set to exactly -40 dBm.

NOTE: A 600 ohm termination is provided by the +20 dB amplifier in the Diagnostic Service Kit and must be added if a high impedance amplifier is used.

PERFORMANCE TESTS

4. Do not change -40 dBm setting on the AC Calibrator or the 4935A OUTPUT LEVEL settings during the rest of this test.
5. Connect the AC Calibrator to the +20dB amplifier input.
 - a. Set the AC Calibrator to 20 Hz.
 - b. Record the voltage.
 - c. From Table 4-2 locate the horizontal voltage line closest to the recorded voltage reading. Use this voltage line (see example).
 EXAMPLE: If the Voltmeter reading is 71.0 mV, locate the 71.0 mV line from the V_{out} column of Table 4-2. Locate the 20 Hz frequency column. The allowable voltage reading, when the AC Calibrator is substituted by the 4935A transmitter, is 79.7 mV to 63.3mV.
6. Substitute the 4935A TRMT output in place of the AC Calibrator. Use the STEP UP or STEP DOWN buttons in conjunction with the ← or → buttons to set the 4935A TRMT frequency to 20 Hz (do not adjust the OUTPUT LEVEL).
7. From Table 4-2, locate the voltage line identified in Step 3. In the vertical frequency column (frequency under test) identify the allowable voltage range. Verify that the +20 dB amplifier output is in this range.
8. Repeat Steps 3 to 5 for each frequency column of Table 4-2 (20 Hz through 85 kHz).

Table 4-2. Transmitter Flatness at -40 dBm

V_{out} (in mV)	± 1.0 dB 20 Hz	± 0.5 dB 50 Hz	± 0.2 dB 200 Hz & ± 0.2 dB 15 kHz	± 0.5 dB 60 kHz	± 0.5 dB 85 kHz
65 0	72.9 to 57 9	68 9 to 61.4	66 5 to 63 5	68 9 to 61 4	68.9 to 61 4
65 4	73 4 to 58 3	69 3 to 61.7	66 9 to 63 9	69 3 to 61 7	69.3 to 61.7
65.8	73 8 to 58 6	69 7 to 62.1	67 3 to 64 3	69 7 to 62 1	69.7 to 62.1
66 2	74.3 to 59.0	70.1 to 62 5	67.7 to 64 7	70 1 to 62 5	70.1 to 62.5
66 6	74 7 to 59 4	70 5 to 62 9	68 2 to 65 1	70 5 to 62.9	70 5 to 62 9
67 0	75 2 to 59 7	71 0 to 63 3	68 6 to 65.5	71 0 to 63 3	71 0 to 63.3
67 4	75 6 to 60 1	71.4 to 63.6	69 0 to 65.9	71 4 to 63 6	71 4 to 63.6
67 8	7 6 1 to 6 0 4	71 8 to 64.0	69 4 to 66 3	71 8 to 64.0	71 8 to 64.0
68 2	76 5 to 60 8	72.2 to 64.4	69 8 to 66 6	72.2 to 64.4	72.2 to 64.4
68 6	77 0 to 61 1	72.7 to 64.8	70.2 to 67 0	72 7 to 64 8	72.7 to 64 8
69.0	77 4 to 61.5	73 1 to 65.1	70.6 to 67 4	73 1 to 65.1	73.1 to 65 1
69 4	77 9 to 61 9	73.5 to 65 5	71 0 to 67 8	73 5 to 65.5	73.5 to 65.5
69.8	78 3 to 62 2	73.9 to 65.9	71 4 to 68.2	73 9 to 65.9	73.9 to 65.9
70.2	78 8 to 62 6	74.4 to 66.3	71.8 to 68.6	74 4 to 66 3	74.4 to 66.3
70 6	79 2 to 62 9	74.8 to 66.7	72 2 to 69 0	74 8 to 66 7	74.8 to 66 7
71 0	79 7 to 63 3	75 2 to 67.0	72.7 to 69 4	75 2 to 67 0	75.2 to 67.0
71 4	80 1 to 63 6	75 6 to 67 4	73 1 to 69 8	75.6 to 67 4	75.6 to 67.4
71 8	80 6 to 64 0	76 1 to 67 8	73.5 to 70.2	76 1 to 67.8	76.1 to 67 8
72 2	81 0 to 64 3	76 5 to 68 2	73.9 to 70.6	76 5 to 68.2	76.5 to 68.2
72 6	81 5 to 64 7	76 9 to 68 5	74 3 to 70 9	76 9 to 68 5	76 9 to 68.5
73 0	81 9 to 65 1	77 3 to 68 9	74.7 to 71 3	77 3 to 68 9	77.3 to 68.9
73 4	82 4 to 65 4	77 7 to 69 3	75.1 to 71 7	77 7 to 69 3	77.7 to 69.3
73 8	82.8 to 65 8	78.2 to 69.7	75.5 to 72.1	78 2 to 69.7	78.2 to 69.7
74.2	83 3 to 66 1	78.6 to 70 0	75.9 to 72.5	78 6 to 70.0	78.6 to 70.0
74 6	83 7 to 66 5	79.0 to 70.4	76 3 to 72 9	79.0 to 70.4	79.0 to 70.4

PERFORMANCE TESTS

Table 4-2. Transmitter Flatness at -40 dBm (Cont'd)

V _{out} (in mV)	±1.0 dB 20 Hz	±0.5 dB 50 Hz	±0.2 dB 200 Hz & ±0.2 dB 1.5 kHz	±0.5 dB 60 kHz	±0.5 dB 85 kHz
75.0	84.2 to 66.8	79.4 to 70.8	76.7 to 73.3	79.4 to 70.8	79.4 to 70.8
75.4	84.6 to 67.2	79.9 to 71.2	77.2 to 73.7	79.9 to 71.2	79.9 to 71.2
75.8	85.0 to 67.6	80.3 to 71.6	77.6 to 74.1	80.3 to 71.6	80.3 to 71.6
76.2	85.5 to 67.9	80.7 to 71.9	78.0 to 74.5	80.7 to 71.9	80.7 to 71.9
76.6	85.9 to 68.3	81.1 to 72.3	78.4 to 74.9	81.1 to 72.3	81.1 to 72.3
77.0	86.4 to 68.6	81.6 to 72.7	78.8 to 75.2	81.6 to 72.7	81.6 to 72.7
77.4	86.8 to 69.0	82.0 to 73.1	79.2 to 75.6	82.0 to 73.1	82.0 to 73.1
77.8	87.3 to 69.3	82.4 to 73.4	79.6 to 76.0	82.4 to 73.4	82.4 to 73.4
78.2	87.7 to 69.7	82.8 to 73.8	80.0 to 76.4	82.8 to 73.8	82.8 to 73.8
78.6	88.2 to 70.1	83.3 to 74.2	80.4 to 76.8	83.3 to 74.2	83.3 to 74.2
79.0	88.6 to 70.4	83.7 to 74.6	80.8 to 77.2	83.7 to 74.6	83.7 to 74.6
79.4	89.1 to 70.8	84.1 to 75.0	81.2 to 77.6	84.1 to 75.0	84.1 to 75.0
79.8	89.5 to 71.1	84.5 to 75.3	81.7 to 78.0	84.5 to 75.3	84.5 to 75.3
80.2	90.0 to 71.5	85.0 to 75.7	82.1 to 78.4	85.0 to 75.7	85.0 to 75.7
80.6	90.4 to 71.8	85.4 to 76.1	82.5 to 78.8	85.4 to 76.1	85.4 to 76.1
81.0	90.9 to 72.2	86.8 to 76.5	82.9 to 79.2	85.8 to 76.5	85.8 to 76.5
81.4	91.3 to 72.5	86.2 to 76.8	83.3 to 79.5	86.2 to 76.8	86.2 to 76.8
81.8	91.8 to 72.9	86.6 to 77.2	83.7 to 79.9	86.6 to 77.2	86.6 to 77.2
82.2	92.2 to 73.3	87.1 to 77.6	84.1 to 80.3	87.1 to 77.6	87.1 to 77.6
82.6	92.7 to 73.6	87.5 to 78.0	84.5 to 80.7	87.5 to 78.0	87.5 to 78.0
83.0	93.1 to 74.0	87.9 to 78.4	84.9 to 81.1	87.9 to 78.4	87.9 to 78.4
83.4	93.6 to 74.3	88.3 to 78.7	85.3 to 81.5	88.3 to 78.7	88.3 to 78.7
83.8	94.0 to 74.7	88.8 to 79.1	85.8 to 81.9	88.8 to 79.1	88.8 to 79.1
84.2	94.5 to 75.0	89.2 to 79.5	86.2 to 82.3	89.2 to 79.5	89.2 to 79.5
84.6	94.9 to 75.4	89.6 to 79.9	86.6 to 82.7	89.6 to 79.9	89.6 to 79.9
85.0	95.4 to 75.8	90.0 to 80.2	87.0 to 83.1	90.0 to 80.2	90.0 to 80.2
85.4	95.8 to 76.1	90.5 to 80.6	87.4 to 83.5	90.5 to 80.6	90.5 to 80.6
85.8	96.3 to 76.5	90.9 to 81.0	87.8 to 83.8	90.9 to 81.0	90.9 to 81.0
86.2	96.7 to 76.8	91.3 to 81.4	88.2 to 84.2	91.3 to 81.4	91.3 to 81.4
86.6	97.2 to 77.2	91.7 to 81.8	88.6 to 84.6	91.7 to 81.8	91.7 to 81.8
87.0	97.6 to 77.5	92.2 to 82.1	89.0 to 85.0	92.2 to 82.1	92.2 to 82.1
87.4	98.1 to 77.9	92.6 to 82.5	89.4 to 85.4	92.6 to 82.5	92.6 to 82.5
87.8	98.5 to 78.3	93.0 to 82.9	89.8 to 85.8	93.0 to 82.9	93.0 to 82.9
88.2	99.0 to 78.6	93.4 to 83.3	90.3 to 86.2	93.4 to 83.3	93.4 to 83.3
88.6	99.4 to 79.0	93.8 to 83.6	90.7 to 86.6	93.8 to 83.6	93.8 to 83.6
89.0	99.9 to 79.3	94.3 to 84.0	91.1 to 87.0	94.3 to 84.0	94.3 to 84.0
89.4	100.3 to 79.7	94.7 to 84.4	91.5 to 87.4	94.7 to 84.4	94.7 to 84.4
89.8	100.8 to 80.0	95.1 to 84.8	91.9 to 87.8	95.1 to 84.8	95.1 to 84.8
90.2	101.2 to 80.4	95.5 to 85.2	92.3 to 88.1	95.5 to 85.2	95.5 to 85.2
90.6	101.7 to 80.7	96.0 to 85.5	92.7 to 88.5	96.0 to 85.5	96.0 to 85.5
91.0	102.1 to 81.1	96.4 to 85.9	93.1 to 88.9	96.4 to 85.9	96.4 to 85.9
FACTOR	1.12202 to .89125	1.05925 to .94406	1.02329 to .97724	1.05925 to .94406	1.05925 to .94406

PERFORMANCE TESTS

ABBREVIATED TRANSMITTER FLATNESS TEST

1. Use test setup shown in Figure 4-2.
2. Set up the 4935A as follows:
 - POWER -ON
 - DISPLAY • TRMT
 - NOR • press in
 - SET UP • press in TRMT 600
 - BRG out
 - DIAL out
 - both HOLDS out
 - MEASUREMENT • LEVEL FREQUENCY
3. Set the 4935A to 1004Hz.
4. Adjust the OUTPUT LEVEL until 0.775V(0 dBm) appears on the Voltmeter.
5. Check the 4935A transmitter at the frequencies given in Table 4-3.

Table 4-3. Abbreviated Transmitter Flatness

FREQUENCY	VOLTAGES (VRMS)	
	MIN	MAX
20 Hz	.690	.869
200 Hz	.757	.793
15 kHz	.757	.793
85 kHz	.731	.820
110 kHz	.652	.920

PERFORMANCE TESTS

4-15. RECEIVER ACCURACY at +11 dBm and -40 dBm

SETUP:

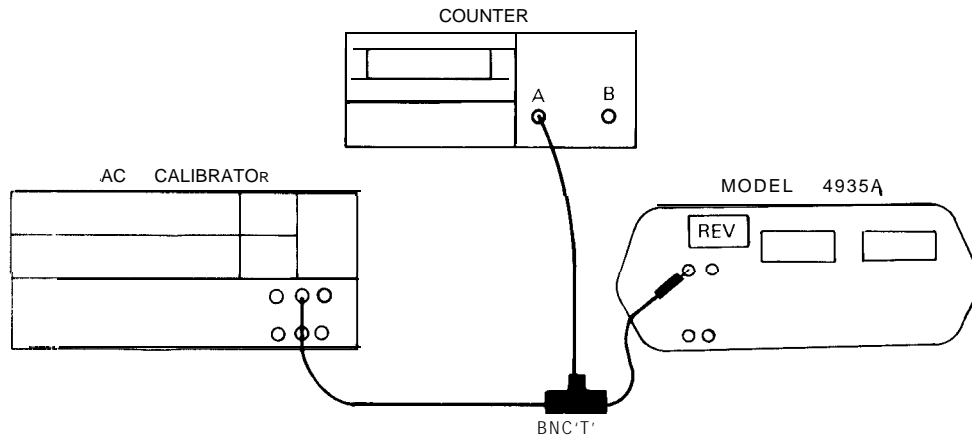


Figure 4-3. Receiver Test at +11 dBm and -40 dBm

EQUIPMENT:

- | | |
|---------------------------|------------------------|
| Fluke 5200A AC Calibrator | 3 BNC cables |
| HP5315 Frequency Counter | 2 BNC to banana cables |
| 310 to BNC adapter | 1 banana plug cable |
| BNC "T" | |

1. Connect the AC Calibrator to the 4935A RCV jack as shown in Figure 4-4.
2. Setup the 4935A as follows:

POWER	ON
DISPLAY	RCV
REV	press in
SET UP	press in RCV 600Ω
		press in BRG
MEASUREMENT		LEVEL FREQUENCY

RECEIVER ACCURACY AT +11 dBm

1. Set AC Calibrator output to 2.733 V (+10.95 dBm into 600 ohms; the 0.05 dB offset checks for round off errors in the 4935A).
2. The 4935A level and frequency displays should be within the limits shown in Table 4-3.

RECEIVER ACCURACY AT -40 dBm

1. Set the AC Calibrator output to 7.702 mV (-40.05 dBm into 600 ohms).
2. The 4935A level display should be within the limits shown in Table 4-4.

PERFORMANCE TESTS

Table 4-4. Receiver Accuracy Test Table

FREQUENCY (MONITOR AT COUNTER)	+11 DBM	-40 DBM	FREQUENCY TOLERANCE
20 Hz	10.0 to 11.9	-41.0 to -39.1	±1 Hz
50 Hz	10.5 to 11.4	-40.5 to -39.6	±1 Hz
200 Hz	10.8 to 11.1	-40.2 to -39.9	±1 Hz
500 Hz	10.8 to 11.1	-40.2 to -39.9	±1 Hz
1000 Hz	10.9 to 11.0	-40.2 to -39.9	±1 Hz
5000 Hz	10.8 to 11.1	-40.2 to -39.9	±1 Hz
15000 Hz	10.8 to 11.1	-40.2 to -39.9	±1 Hz
30000 Hz	10.5 to 11.4	-40.5 to -39.6	+ 0.1 kHz
50000 Hz	10.5 to 11.4	-40.5 to -39.6	±0.1 kHz
85000 Hz	10.5 to 11.4	-40.5 to -39.6	±0.1 kHz
110000 Hz	9.0 to 12.9	-42.0 to -38.1*	±0.1 kHz

ABBREVIATED RECEIVER ACCURACY TEST

1. Use the test setup shown in Figure 4-3.
2. Set the AC Calibrator to .7791 V (-0.05 dBm into 600 ohms).
3. Test the 4935A at each frequency given in Table 4-5.

Table 4-5. Abbreviated Receiver Accuracy Test Table

FREQUENCY	LEVEL (0.7791 V)	FREQUENCY TOLERANCE
20 Hz	-1.0 to +0.9 dBm	±1 Hz
50 Hz	-0.5 to +0.4 dBm	±1 Hz
200 Hz	-0.2 to +0.1 dBm	±1 Hz
15 kHz	-0.2 to +0.1 dBm	±0.1 kHz
85 kHz	-0.5 to +0.5 dBm	±0.1 kHz
110 kHz	-2.0 to +1.9 dBm*	±0.1 kHz

*For instruments with serial prefix 2207A and below refer to Section VII Manual Changes backdating information.

PERFORMANCE TESTS

4-16. Autorange Test

SETUP:

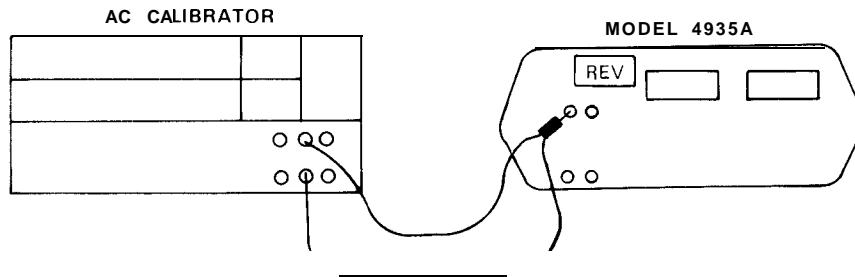


Figure 4-4. Autorange Test

EQUIPMENT:

- Fluke 5200A AC Calibrator
- 1 banana plug test cable
- 1 BNC to banana adapter

1. Connect equipment as shown in Figure 4-4. On 4935A select:

POWER. ON
 DISPLAY RCV
 SET UP press RCV 600Ω
 MEASUREMENT LEVEL FREQUENCY

2. Set the AC Calibrator to 1000 Hz.

3. For each voltage and range in Table 4-6 check that the display is within acceptable limits.

Table 4-6. Autorange Test

AC CALIBRATOR VOLTAGE	DISPLAY
86911 V	+ 0.9 to +1.1
086911 V	19.1 to -18.9
0086911 V	3.92 to -38.8
00086911 V	59.4 to -58.6
2.7484 V	+10.9 to +11.1
0.27484 V	9.1 to -8.9
0.027484 V	2.92 to -28.8
0.0027484 V	49.4 to -48.6

ABBREVIATED AUTORANGE TEST

There is **no** abbreviated Autorange Test.

PERFORMANCE TESTS

4-17. Filter Tests

SETUP:

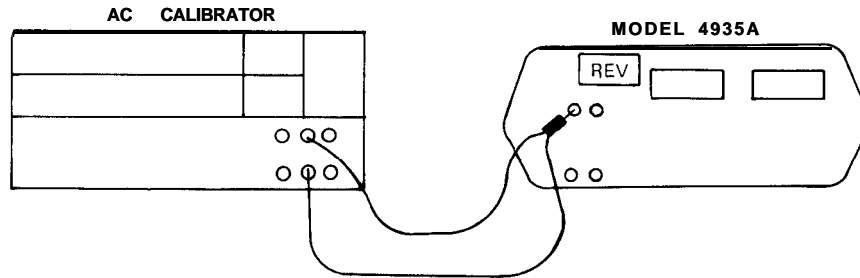


Figure 4-5. Filter Tests

EQUIPMENT:

- Fluke 5200A AC Calibrator
- IBNC to dual banana test cable
- IBNC to 310 adapter

GENERAL PROCEDURE

1. Connect equipment as shown in Figure 4-5.
2. Set AC Calibrator to .775 V (0.0 dBm across 600 ohms)
3. On 4935A select:

```

POWER . . . . . ON
DISPLAY . . . . . RCV
SETUP . . . . . RCV 600Ω
MEASUREMENT . . . . . NOISE
FILTER . . . . . select according to test
    
```

C-MESSAGE FILTER

1. Select the C-MESSAGE filter on 4935A.
2. Check the response at each frequency in Table 4-7. The 4935A should be within the range given

Table 4-7. C-Message Filter Test

FREQUENCY (in Hz)	RECEIVED LEVEL (dBm) ACCEPTABLE READINGS
300	73-74
900	89-90
1000	90
2500	88-89
3000	87-88
4500	66-71

PERFORMANCE TESTS

3 KHZ FLAT FILTER TEST

1. Select the 3 kHz FLAT Filter on the 4935A.
2. Check the response at each frequency in Table 4-8. The 4935A display should be within the range given.

Table 4-8. 3 kHz Flat Filter Test

FREQUENCY (in Hz)	RECEIVED LEVEL (dBm) ACCEPTABLE READINGS
1000	90
3000	86-88
6000	75-80

15 KHZ FLAT FILTER TEST

1. Select the 15 kHz FLAT Filter on the 4935A.
2. Check the response at each frequency in Table 4-9. The 4935A display should be within the range given.

Table 4-9. 15 kHz Flat Filter Test

FREQUENCY (in Hz)	RECEIVED LEVEL (dBm) ACCEPTABLE READINGS
1000	90
15000	86-88
30000	75-80

PROGRAM FILTER TEST

1. Select the PROGRAM filter on the 4935A.
2. Check the response at each frequency in Table 4-10. The 4935A display should be within the range given.

Table 4-10. Program Filter Test

FREQUENCY (in Hz)	RECEIVED LEVEL (dBm) ACCEPTABLE READINGS
100	62-65
500	83-84
1000	90
2000	94-95
5000	95-98
10000	78-85

PERFORMANCE TESTS

50 kBIT FILTER TEST

1. Select the 50 kBIT filter on the 4935A.
2. Check the response at each frequency in Table 4-11. The 4935A display should be within the range given.

NOTE

Test must be performed in sequence given.

Table 4-11. 50 kBIT Filter Test

FREQUENCY (in Hz)	RECEIVED LEVEL (dBm) ACCEPTABLE READINGS
1000	90
15000	89-90
25000	87-88
35000	84-86
50000	62-67

NOTCH FILTER TEST

1. Select the 15 kHz filter and NOISE WITH TONE measurement on the 4935A.
2. Check the response at each frequency in Table 4-12. The 4935A should be within the range given.

Table 4-12. Notch Filter Test

FREQUENCY (in Hz)	RECEIVED LEVEL (dBm) ACCEPTABLE READINGS
400	90
862	≥88
1000	<40
1020	<40
1182	≥88
1700	90

NOTE

At 400 Hz the DISPLAY FREQUENCY will not be stable.

ABBREVIATED FILTER TEST

There is no abbreviated Filter Test.

PERFORMANCE TESTS

4-18. IMPULSE NOISE DAC TEST

SETUP:

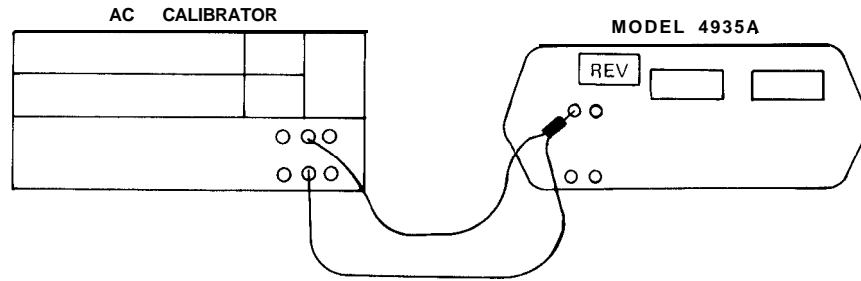


Figure 4-6. Impulse Noise DAC Test

EQUIPMENT:

- Fluke 5200A AC Calibrator
- 1 BNC to dual banana test cable
- 1 310 to BNC adapter

1. Connect equipment as shown in Figure 4-6.
2. On 4935A select:

POWER	.	.	ON
DISPLAY	..	.	RCV
SET UP	.	press both 600Ω buttons	
MEASUREMENT	.	.	IMPULSE NOISE:
FILTER			16 kHz FLAT Filter
IMPULSE NOISE	..	press PERIOD to select NON-STOP	
		press DISPLAY to select LOW(SET)	
		press START/RESET	
Left display	.	adjust threshold to 90 dBrn	
3. Set AC Calibrator signal source to 2 kHz at the levels given in Table 4-13 (start with 0.580 V)
4. The 4935A should start counting.
5. Raise the 4935A LOW THRESHOLD BY 1 dBrn.
6. The 4935A display should stop counting.
7. Repeat steps 3 through 6 for each level shown in Source in Volts Table 4-13.
8. Set the LOW(SET) threshold to 90 dBrn (0 dBm).
9. Press DISPLAY in IMPULSE NOISE to select MID threshold.
10. Set the AC Calibrator to 0.820 V; the 4935A display should not count.
11. Set the AC Calibrator to 0.920 V; the 4935A display should count.
12. Press DISPLAY in IMPULSE: NOISE to select HIGH threshold.
13. Set the AC Calibrator to 1.299 V; the 4935A display should not count.
14. Set the AC Calibrator to 1.457 V; the 4935A display should count.

PERFORMANCE TESTS

Table 4-13. Impulse Noise DAC Test

AC CALIBRATOR VOLTAGE	PEAK SIGNAL IN dBm	COUNTING THRESHOLD	NOT COUNTING THRESHOLD
0.580	0.5	90	91
0.651	1.5	91	92
0.730	2.5	92	93
0.820	3.5	93	94
0.920	4.5	94	95
1.032	5.5	95	96
1.158	6.5	96	97
1.299	7.5	97	98
1.457	8.5	98	99
1.635	9.5	99	100

ABBREVIATED IMPULSE NOISE DAC TEST

There is no abbreviated Impulse Noise DAC Test.

PERFORMANCE TESTS

4-19. Count Limit Test

SETUP:

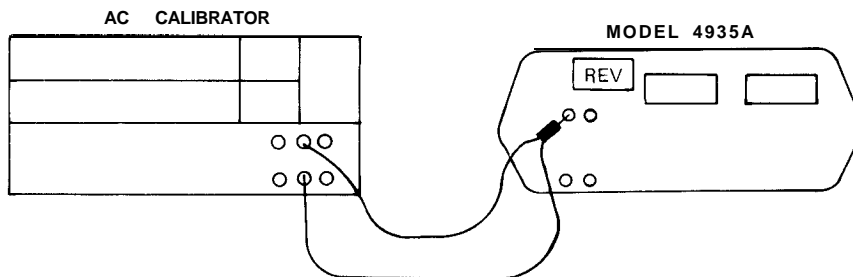


Figure 4-7. Count Limit Test

EQUIPMENT:

Fluke 5200A AC Calibrator
 1 banana plug test cable
 1 3 IO to banana adapter

1. Connect equipment as shown in Figure 4-7.
2. On 4935A select:

POWER ..	ON
DISPLAY .	RCV
MEASUREMENT ..	IMPULSE NOISE:
FILTER .	.1 kHz FLAT
IMPULSE NOISE .	LOW(SET)
3. Set AC Calibrator to 2000 Hz, .775 V (0.0 dBm into 600 ohms).
4. Adjust the 4935A threshold to 75 dBm.
5. Press the START/RESET button.
6. Wait 60 seconds and press STOP. The 4935A right display should indicate 480 ±48 counts.
8. Press Impulse Noise DISPLAY button to select MID threshold.
9. The 4935A display should indicate 480 ±48 counts.
10. Press DISPLAY button in IMPULSE NOISE to select HIGH threshold.
11. The 4935A display should indicate 480 ±48 counts.

ABBREVIATED COUNT LIMIT TEST

There is no abbreviated Count Limit Test.

PERFORMANCE TESTS

4-20. Termination Impedance Test

SETUP:

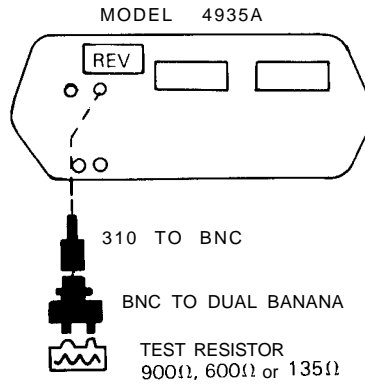


Figure 4-8. Termination Impedance Test

EQUIPMENT:

- HP 3490A Multimeter
- 1310 to BNC adapter
- 1 BNC to dual banana adaptor
- Resistors — 900Ω, 600Ω, 135Ω

1. Disconnect 4935A from AC power.
2. Connect equipment as shown in Figure 4-8.
3. On 4935A select:

POWER	STBY
NOR	}	press in simultaneously
REV		
SET UP	BRG out
		DIAL out
		Both HOLDS out
		press in RCV 900Ω
		press in TRMT 900Ω
4. Measure the resistance across the transmitter and receiver jacks. Both should be greater than 1M ohm.
 - a. As the DC blocking capacitors charge, the measured resistance may slowly rise. Set the Multimeter to the lowest resistance and increase the resistance as the meter overranges.
5. Set up 4935A as follows:

POWER	ON
DISPLAY	RCV
MEASUREMENT	LEVEL FREQUENCY
OUTPUT LEVEL	adjust to 0.0 dBm

PERFORMANCE TESTS

6. Repeat the following test three times. The procedure and the expected result remain the same. The termination impedances selected and the value of the resistor placed across the RCV jack will change. First use a 900 Ω resistor, second a 600 Ω , and finally a 135 Ω resistor.
 - a. Select equal TRMT and RCV termination impedances (900 Ω , 600 Ω , or 135 Ω)
 - b. The display should read 0.0 dBm
 - c. Press in the BRG button.
 - d. The display should read 6.1 dBm \pm 1 dBm
 - e. Connect the first resistor externally across the right jack. If the TRMT and RCV resistance buttons pressed are 900 Ω , the resistor chosen should be 900 Ω .
 - f. The display should read 0.0 dBm \pm 1 dBm
 - g. Release the BRG button and remove the resistor.
 - h. Return to step a and select the next resistor.

ABBREVIATED TERMINATION IMPEDANCE TEST

1. Setup the 4935A as follows:

```

POWER ... .. ON
DISPLAY .. .. RCV
NOK }
REV }      press in simultaneously
SET UP .. .. press in both 600 $\Omega$  buttons
MEASUREMENT .. .. LEVEL FREQUENCY
OUTPUT LEVEL .. .. adjust to 0.0 dBm
  
```

2. Press in the BRG button. The display should read 6.1 dBm \pm 1 dBm
3. Release the BRG button
4. Press in both 135 Ω impedance buttons. The display should read 0.0 dBm \pm 0.1 dBm.
5. Press in both 900 Ω impedance buttons. The display should read 0.0 dBm \pm 0.1 dBm.

PERFORMANCE TESTS

4-21. Hold Tone Dropout Detector Test

SETUP:

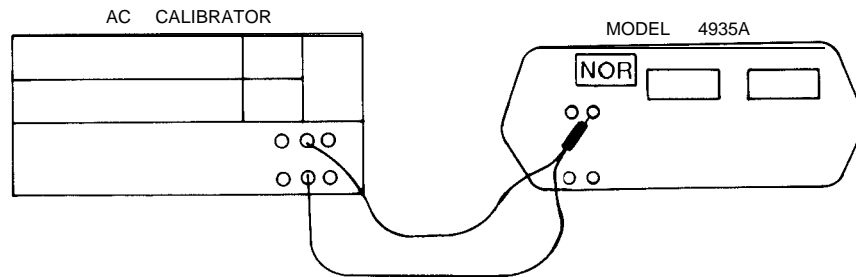


Figure 4-9. Hold Tone Dropout Detector Test

EQUIPMENT:

- Fluke 5200A AC Calibrator
- 1 BNC to dual banana test cable
- 1 310 to RNC adapter

1. Connect equipment as shown in Figure 4-9.
2. On 4935A select:

```

POWER . . . . . ON
DISPLAY . . . . . RCV
NOR . . . . . press in
SET UP . . . . . press in RCV 600Ω
MEASUREMENT . . . . . NOISE WITH TONE
FILTER . . . . . C-MESSAGE
    
```

3. Set AC Calibrator to 10mV at 1004 Hz.
4. Lower the AC Calibrator level until Err 7 appears on the 4935A (between 3-4 mVrms).
5. On 4935A select LEVEL FREQUENCY and read the signal level from the display. It should be -46 dBm ±2 dBm.

ABBREVIATED HOLD TONE DROPOUT DETECTOR TEST

There is no abbreviated Hold Tone Dropout Detector Test.

PERFORMANCE TESTS

4-22. HOLD CIRCUIT TEST

SET UP:

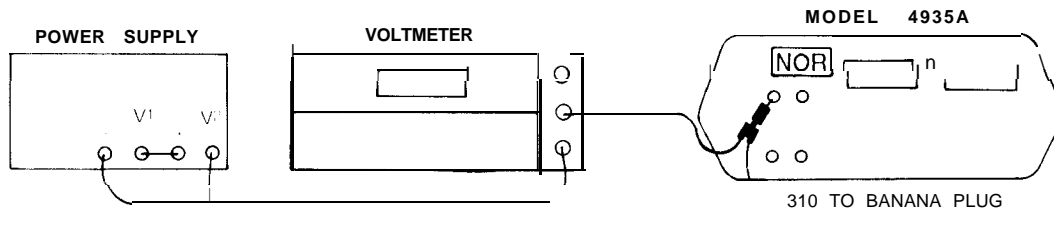


Figure 4-10. Hold Circuit Test

EQUIPMENT:

HP 621 8A Power Supply
 1 HP 3455A AC-DC Voltmeter
 HP 3466A Milliammeter

1. Connect equipment as shown in Figure 4-10).
2. Check the power **supply** output with the DC Voltmeter. Adjust the output to $6.9V \pm 2 \text{ vDC}$.
3. On 4935A select:
 - DISPLAY - TRMT
 - NOR - press in
 - SET UP - press in TRMT HOLD
 - press in RC'V HOLD
4. The DC current on the milliammeter should be $24.0\text{mA} \pm 5\text{mA}$.
5. **On** the 4935A press in the REV button.
6. Reverse the power **supply** leads. The DC current readings **should** be $24.0 \text{ mA} \pm 5\text{mA}$ in both the TRMT and RCV HOLD circuits. Return the power supply leads to the normal polarity.
7. Set the monitoring Voltmeter to its voltage range of 50V or greater and adjust the power supply for 50 VDC. The DC current reading should be less than 26 mA.
8. Press in NOR button. The DC current should be less than 26 mA.

PERFORMANCE TESTS

4-23. Distortion Test

SETUP:

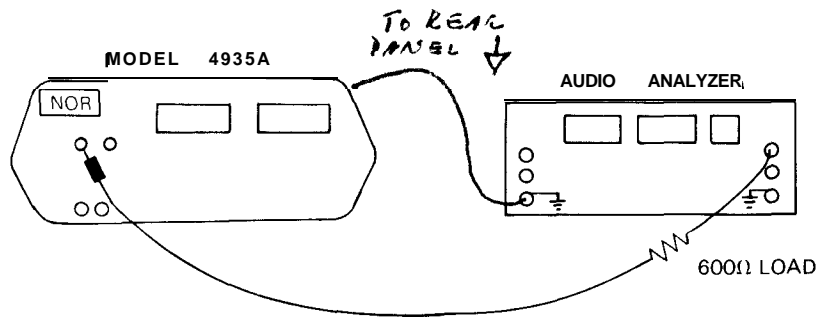


Figure 4-1 1. Distortion Test

EQUIPMENT:

- HP 6234A Dual Output Power Supply
- HP 8903A Audio Analyzer
- 4 kHz Low Pass Filter (included in Diagnostic Service Kit)*
- 20 dB amplifier (included in Diagnostic Service Kit)*
- 2 310 to BNC adapter
- 2 BNC to BNC test cables
- 600Ω load

1. Connect equipment as shown in Figure 4-11.
2. On 4935A select:
 - POWER ON
 - DISPLAY TRMT
 - NOR press in
 - SET UP press in TRMT 600Ω
 - MEASUREMENT LEVEL FREQUENCY
3. Set the Audio Analyzer to measure distortion in dB. The input should be floating.
4. Enable the 30 kHz low pass filter on the Audio Analyzer.
5. Measure distortion at the following points.

FREQUENCY	OUTPUT LEVEL	DISTORTION
100 Hz	a) +10 dBm	≤55 dB
	b) 0 dBm	
4000 Hz	a) +10 dBm	≤55 dB
	b) 0 dBm	

* see figure 4-13 for circuits

PERFORMANCE TESTS

6. Turn off the 30 kHz low pass filter on the Audio Analyzer.
7. Measure distortion at the following points.

FREQUENCY	OUTPUT LEVEL	DISTORTION
110 kHz	a) +9 dBm b) 0 dBm c) -20 dBm	≤50 dB

8. Connect an amplifier with +20 dB gain in the signal path as shown in Figure 4-12. The Power Supply should supply ±12 V to the +20 dB Amplifier and 4 kHz Low Pass Filter Board. See Figure 4-13 for the circuit and Table 4-14 for the Parts List.

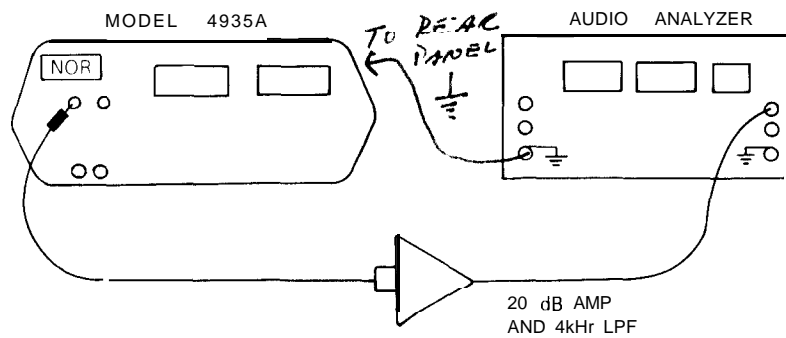


Figure 4-12. -40 dBm Distortion Test

9. Enable the 30 kHz low pass filter on the Audio Analyzer.
10. Measure distortion at the following points. The 4 kHz low pass filter should not be used in the measurement.

FREQUENCY	OUTPUT LEVEL	DISTORTION
a) 100 Hz	-40 dBm	≤50 dBm
b) 4000 Hz	-40 dBm	≤50 dBm

11. Change the +20 dB amplifier to unity gain and switch in the 4 kHz low pass filter.
12. Measure distortion at the following point.

FREQUENCY	OUTPUT LEVEL	DISTORTION
1004 Hz	0 dBm	≤65 dB

PERFORMANCE TESTS

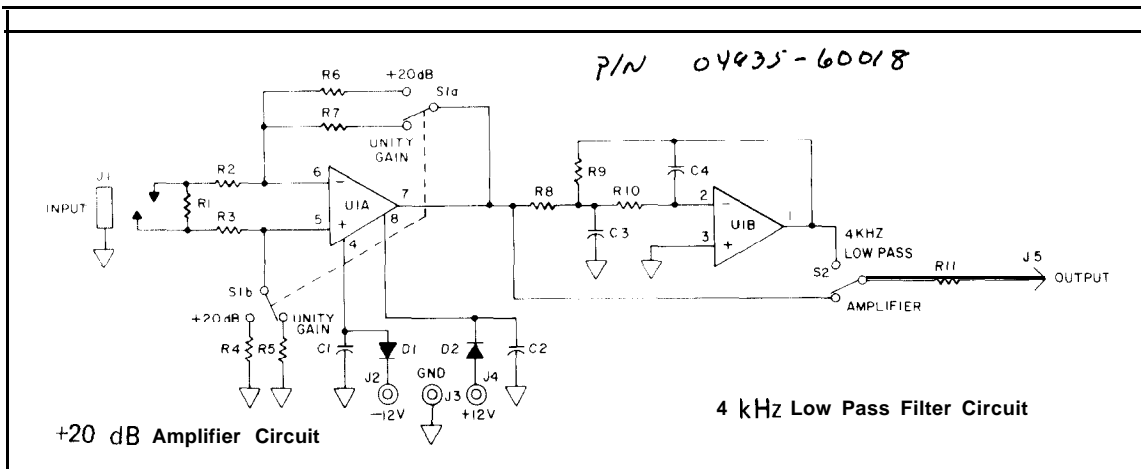


Figure 4-13. Filter Circuits*

Table 4-14. Filter Circuit Parts List

REFERENCE DESIGNATOR	HP PART NO.	DESCRIPTION
C1	0160-3468	0.12uf +5%
c2	0160-3468	0.12uf +5%
c3	0160-6405	10K pf +1%
c4	0160-6185	1 K pf +1%
D1	1901-0040	Diode
D2	1901-0040	Diode
R1	0698-7408	6000hm +0.1%
R2	0757-0442	10Kohm +1%
R3	0757-0442	1 0Kohm+1%
R4	0757-0465	100Kohm +1%
R5	0757-0442	1 0Kohm+1%
R6	0757-0465	100Kohm +1%
R7	0757-0442	1 0Kohm+1%
R8	0698-3450	42.2Kohm +1%
R9	0698-3450	42.2Kohm +1%
R10	0698-3151	2.87Kohm +1%
R11	0698-7408	6000hm +0.1%
U1	1826-0712	IC OP Amp
S1	3101-0973	DPDT Switch
s2	3101-0973	DPDT Switch
J1	1251-3677	310 Jack
J2	151 0-0076	Binding Post
J3	151 0-0076	Binding Post
J4	151 0-0076	Binding Post
J5	1251-1780	BNC Connector

* The Diagnostic Service Kit (HP 04935-60014) contains a test board with this circuit.

PERFORMANCE TESTS

ABBREVIATED DISTORTION TEST

1. Disconnect all cables from the 4935A input.
2. On 4935A select:
 - POWER ON
 - DISPLAY RCV
 - SETUP press in both NOR and REV buttons
 - MEASUREMENT SIGNAL TO NOISE
 - OUTPUT LEVEL adjust to 0.0 dBm.
3. For each filter in Table 4-15 the displayed level should be within the given range. If either level is out of tolerance, perform the complete Distortion Test before troubleshooting.

Table 4-15. Abbreviated Distortion Test

FILTER	DISPLAY
C-Message 50 kBit	73 dB ±2 58 dB ±1

PERFORMANCE TESTS

4-24. P/AR Test

SETUP:

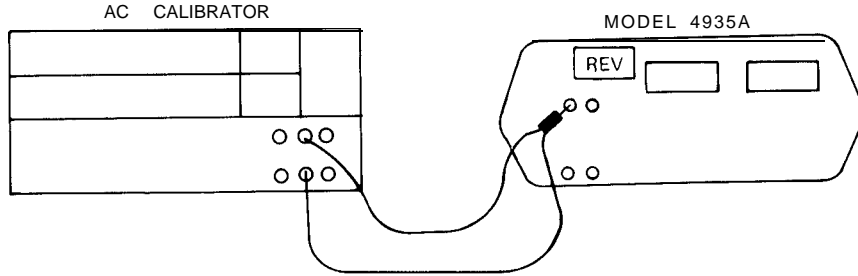


Figure 4-14. P/AR Test

EQUIPMENT:

- Fluke 5200A AC Calibrator
- I BNC to dual banana test cable
- 1310 to BNC adapter

1. Connect equipment as shown in Figure 4-14. On 4935A select:

POWER ON
 DISPLAY RCV
 REV press in
 SETUP press in both 600Ω buttons
 BRG out
 MEASUREMENT P/AR

- 2. Set the AC Calibrator for a 300 Hz sinewave at 0.495 Vrms (-3.9 dBm).
- 3. For each frequency in Table 4-16 check that the right display is within the acceptable limits.

Table 4-16. P/AR Filter Responses

FREQUENCY	ACCEPTABLE LEVEL
300 Hz	- 3.0 dBm
1000 Hz	0 dBm
2300 Hz	- 1.0 dBm

- 4. Press DISPLAY to change the 4935A to TRMT mode. The right display should read 100±1.
- 5. Vary the OUTPUT LEVEL to obtain a left display reading between -12 dBm and -1 dBm. The P/AR reading in the right display should not change by more than 1 P/AR unit.

ABBREVIATED P/AR TEST

- 1. Perform only steps 4 and 5 of the P/AR Test.

PERFORMANCE TESTS

4-25. Noise To Ground (Standard and Option 001)

SETUP:

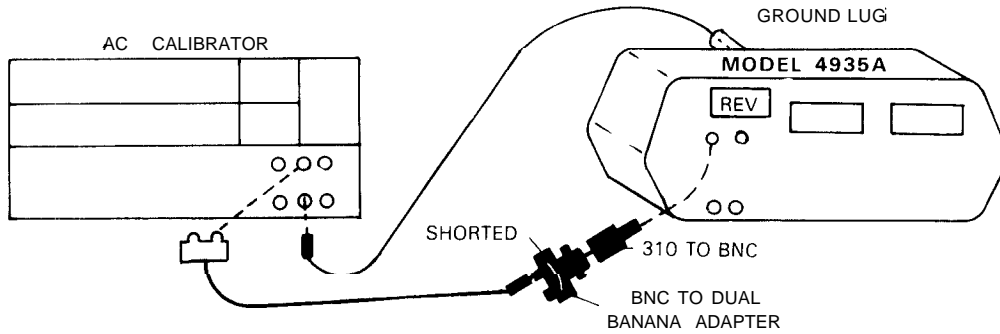


Figure 4-15. Noise to Ground Test

EQUIPMENT:

- Fluke 5200A AC Calibrator 1 shorting strap
- 310 to BNC adapter 2 banana cables
- 1 banana to BNC connector (female)

1. Connect equipment as shown in Figure 4-15. On 4935A select:

POWER ON
 DISPLAY RCV
 MEASUREMENT N O I S E TO GROUND
 SETUP press in both 600 buttons
 BRG in

- 2. Connect AC Calibrator low to ground lug on 4935A rear panel.
- 3. Short 4935A input (tip and ring) and connect to the AC Calibrator HIGH.
- 4. Set AC Calibrator output to .7746 Vrms at 1000 Hz. 4935A display should typically read 90dBm + 2dBm.


ABBREVIATED NOISE TO GROUND TEST

There is no Abbreviated Noise to Ground Test.

Performance Test Record

4935A		
S N _____	DATE _____	
	RESULTS	
DESCRIPTION	PASS	FAIL
Self Check		
Transmitter Flatness at +10 dBm		
Transmitter Flatness at -40 dBm		
Receiver Accuracy at +12 dBm and -40 dBm		
Autorange Test		
Filter Tests		
impulse Noise DAC Test		
Count Limit Test		
Termination Impedance Test		
Hold-Tone Dropout Detector Test		
Hold Circuit Test		
P/AR Test (Options 002 and 003 only)		
Noise-To-Ground Test (Standard Unit Only)		
Distortion Test		

Longitudinal Balance Setup

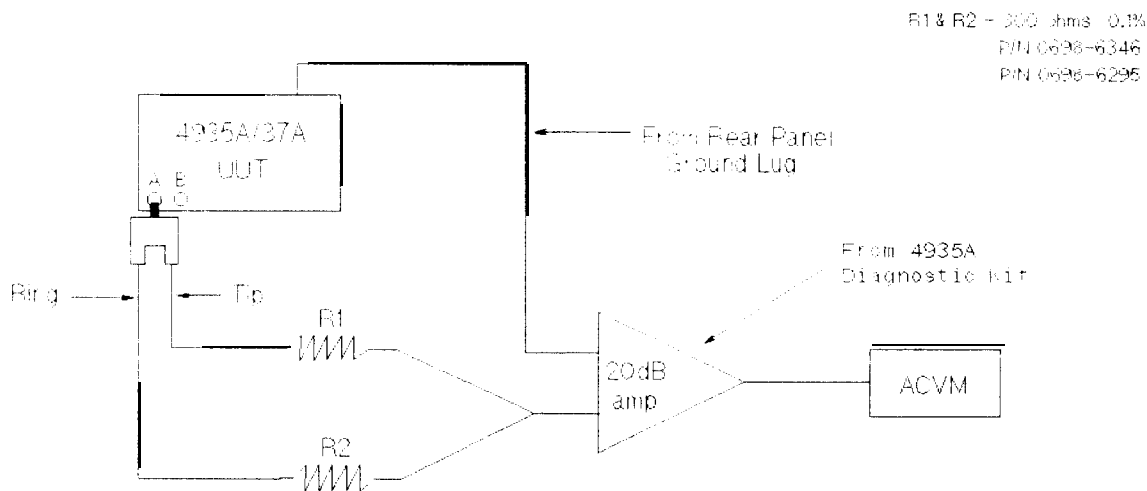

UUT Setup

NOR = In
 Imp = 500
 Frequency = 15Hz

Specs

Input 0.0dB - >60dB
 Input 10.0dB - >70dB

Equation

$20\text{Log}(V_{in}/V_{out}) + 20\text{dB} = \text{___dB}$
 (V_{in} & V_{out} = AC volts)
 (20dB from Amp)

SECTION V

ADJUSTMENT/CALIBRATION

5-1. INTRODUCTION

5-2. This section contains adjustment and calibration information for the HP Model 4935A Transmission Test Set. Verify all adjustments and calibrations with the tests in Section IV, Performance Tests.

5-3. SAFETY CONSIDERATIONS

5-4. Listed warnings and cautions must be followed for your protection and to avoid damage to the equipment. Whenever internal instrument circuits are exposed, caution must be exercised. When using AC powered test equipment, the test equipment chassis should be connected to earth ground. With the 4935A in STBY (standby) AC power is still applied to the instrument and some DC voltages are still present. To completely power down the instrument, disconnect it from the AC power source. For instruments with the batteries (Options 002 and 003), disconnect the three batteries and the AC power source.

**WARNING**

Power switch does not turn off AC power and some DC power circuits.

5-5. EQUIPMENT REQUIRED

5-6. Test equipment needed for adjustments is listed in Table 1-2. Test equipment with equivalent specifications may be substituted.

5-7. Instrument Access (see warning of paragraph 5-4)

5-8. The instrument's internal circuits and assemblies are accessed by removing the case top. The case top is secured by four screws located on the bottom of the instrument. For the complete procedure refer to the Mechanical Disassembly Procedure in Section VIII, Service Section.

**CAUTION**

When the 4935A is in STBY, AC power is still present in the instrument as well as some DC voltages. Disconnect AC power from the instrument before opening the case or removing any assemblies.

5-9. ADJUSTMENT LOCATIONS

5-10. Adjustment locations are shown on the component locaters at the end of Section VIII.

5-11. ADJUSTMENTS

5-12. Adjustments should be done in the sequence given. Power Supply adjustments should be done prior to making any internal adjustments. Access instrument circuits as described in paragraph 5-7.

There are six adjustment procedures for the 4935A.

- a. Power Supply Adjustments
- b. Output Level and Transmit Monitor Loop Adjustments
- c. Receiver Adjustments
- d. Notch Filter Adjustments
- e. A 13 P/AR Filter and Latch Adjustments
- f. Hold Circuit Adjustments

ADJUSTMENTS

5-13. +5 V, +14 V, and -14 V Power Supply Adjustments

REFERENCE:

A4 Transmitter Assembly

EQUIPMENT:

DC Voltmeter	HP 3490A
Oscilloscope	HP 1740A

PROCEDURE:

1. Press power button ON
2. Connect the Voltmeter to A4JU+5.
3. Voltmeter should read +5VDC \pm 20 mV. If not, adjust A4R42 (+5 V ADJ).
4. Remove the Voltmeter and connect the Oscilloscope to A4JU+5. Ripple should not exceed 100 mVAC.
5. Connect the Voltmeter to A4JU+14.
6. The Voltmeter should read +14 VDC \pm 20 mV. If not adjust A4R31 (+14V ADJ).
7. Remove the Voltmeter and connect the Oscilloscope to A4JU+14. Ripple should not exceed 100 mVAC.
8. Connect the Voltmeter to A4JU-14.
9. The Voltmeter should read -14 VDC \pm 25 mV and is not adjustable. If the reading is incorrect the power supply is defective and should be repaired.
10. Remove the Voltmeter and connect the Oscilloscope to A4JU-14. Ripple should not exceed 100 mVAC.

ADJUSTMENTS

5-14. Output Level and Transmit Monitor Loop Adjustments

REFERENCE:

A4 Transmitter Assembly

SET UP:

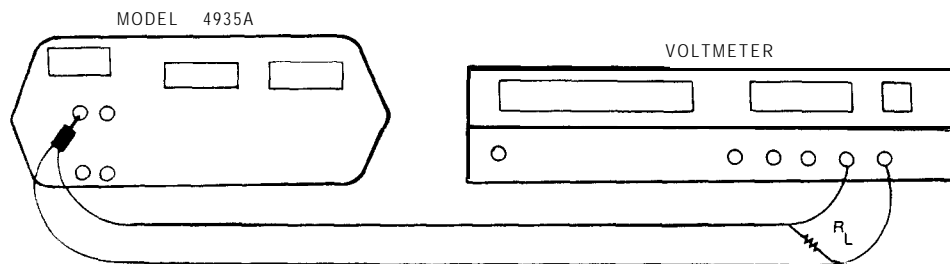


Figure 5-1. Output Level and Transmit Monitor Loop Adjustments

PROCEDURE:

1. Connect Equipment as shown in Figure S-1.
 $R_L = 600\text{ohms}$
2. On 4935A select:

DISPLAY • TRMT
 NOR/REV • NOR
 MEASUREMENT • LEVEL FREQ
 SET UP • press in TRMT 600
 press in RCV 600
 BRG out
 DIAL out
 both HOLD3 out
 OUTPUT LEVEL turn full clockwise

3. Adjust A4R74(OUTPUT ADJ) for a reading of 3.42 to 3.43 Volts on the ACVM.
4. Adjust the OUTPUT LEVEL for a reading of $775\text{mVrms} \pm 10\text{mV}$.
5. Move the ACVM to A3TP25.
6. Adjust A4R72(LOOP ADJ.) until it agrees with the voltage reading in step 4.
7. Recheck the OUTPUT LEVEL. If the HP3455 ACVM still reads within $\pm 10\text{mV}$ of the voltage step 4, continue. Otherwise, repeat steps 3-6.

ADJUSTMENTS

5-15. RECEIVER ADJUSTMENTS

REFERENCE:

A3 Receiver Assembly

EQUIPMENT:

AC-DC Voltmeter • HP 3455
 AC Calibrator • Fluke 5200A

PROCEDURE:

1. On 4935A select:
 - DISPLAY TRMT
 - MEASUREMENT • NOISE
 - NOR/REV • NOR

2. Offset Adjustment:
 - a. Short A3TP10 to A3TP21
 Short A3TP22 to A3TP23

 - b. Measure the DC voltage at TP24 Adjust A3R33(OFFSET ADJ) if the voltage is not within $0 \pm .3\text{mV DC}$.

 - c. Remove the shorts placed in Step 2a.

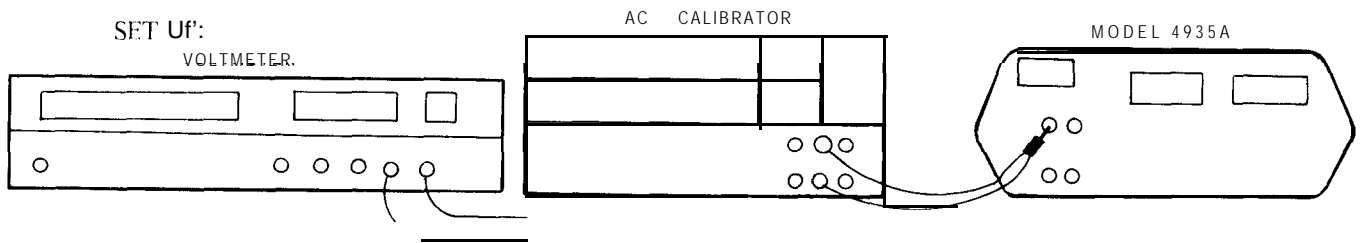


FIG 5-2. Receiver Adjustments

3. Connect the equipment as shown in Figure 5-2.

4. On 4935A select:
 - DISPLAY • RCV
 - NOR//REV • NOR
 - MEASUREMENT • LEVEL FREQ
 - SET UP • KCV 600
 - BRG in
 - both HOLDs out

5. Set the AC Calibrator to 816mV $\pm 0.5\text{mV}$, frequency to 1000Hz. Connect the AC Calibrator into the receiver jack.

ADJUSTMENTS

6. Move the ACVM to A3TP25 and adjust A3R77(RCV GAIN) for a reading of $8.16\text{mV} \pm 0.5\text{mV}$.
 7. Adjust A3R23 (AVG DET) until the display flickers between 0.4 and 0.5 dBm.
 8. On 4935A:
 - LEVEL FREQUENCY • change to NOISE
 - FILTER • change to 1.5kHz
 9. Check that the ACVM still reads $8.16\text{mV} \pm 0.5\text{mV}$ at A3TP25.
 10. Adjust A3R65(QRMS DET) until the display flickers between 90 and 91 dBm.
- 5-16 There are problems that could go undetected using only a voltmeter. The following test is intended as a quick check to verify that the instrument basically works.
1. Attach a scope probe to A3TP23(full wave rectified output).
 2. On 4935A select:
 - DISPLAY • TRMT
 - MEASUREMENT • LEVEL FREQ
 3. **Vary** the OUTPUT LEVEL from 0 dBm to +12.0 dBm, starting at 0 and finishing at +12.9. The waveform at A3TP23 should be a full wave rectified sine wave with the peaks within 50 mV of each other.
 4. On the 4935A press DISPLAY to change from TRMT to RCV.
 5. Adjust the AC Calibrator to 2.45 Vrms(+10 dBm) at 1 kHz. A rectified sine wave should appear.
 6. On the 4935A change LEVEL FREQUENCY to NOISE.
 7. Try each filter and verify in each case that a rectified sine wave appears at A3TP23 with no visual distortion.
 8. Check the notch filter capacitors (A3C92, A3C100, and A3C141); they must lean away from the switch board (they pick up noise when too close). Bent the capacitors away from the switch board if necessary.

ADJUSTMENTS

5-17. Notch Filter Adjustments

REFERENCE:

A3 Receiver Assembly

EQUIPMENT:

Oscilloscope HP 1741A

PROCEDURE:

1. Externally loop the TRMT jack to the RCV jack.
2. On 4935A select:

DISPLAY	TRMT
MEASUREMENT	LEVEL FREQUENCY
3. Set the displayed frequency on the right display to 995 Hz. Adjust the OUTPUT LEVEL until the left display reads approximately 0.0 dBm.
4. Press DISPLAY to select RCV mode.
5. Move the JU5 shorting bars to the right (short pin 5 to 12, 6 to 11, 7 to 10, and 8 to 9).
6. Connect an Oscilloscope to JU5 pin 1.
7. Adjust R102 (995 Hz) for minimum AC signal on the Oscilloscope.
8. Change the frequency to 1010 Hz using STEP UP button.
9. Connect Oscilloscope to JU5 pin 4.
10. Adjust A3R1 32 (1010 Hz) for minimum AC signal on the Oscilloscope.
11. Change 4935A frequency to 1025 Hz using STEP UP button.
12. Connect oscilloscope probe to TP7.
13. Adjust A3R1 80 (1025 Hz) for minimum AC signal on the Oscilloscope.
14. Move JU5 shorting bars to original positions (shorting pins 1 to 16, 2 to 15, 3 to 14, and 4 to 13).

ADJUSTMENTS

5-18. A13 P/AR Filter and Latch Adjustments (Options 002 and 003)

REFERENCE

A13 Receiver Assembly

EQUIPMENT

Oscilloscope HP 1741A with 1:1 probes

PROCEDURE:

1. On the Oscilloscope select A vs B operation and connect the probes to the normal input jack.
 - a. For HP model 180 series oscilloscopes, feed one input to channel A and the other to the external horizontal input — not the external trigger input.
 - b. This setup will display lissajous patterns which are used to adjust the P/AR filter.
 - c. If an adjustment is needed, a rising slope oval waveshape is produced.
 - d. When adjusted, a single diagonal line will appear.
2. Externally loop the 4935A TRMT and RCV310 jacks.
3. Select LEVELFREQUENCY measurement mode.
4. Set the 4935A frequency to 1300 Hz.
5. Adjust the OUTPUTLEVEL for a left display of 0.0 dBm.
6. Set the Oscilloscope to 0.2 volts per division. Connect channel A to TP15 pin 2 and channel B to TP15 pin 7.
7. Adjust A13R153 (PAR PHASE 1) to obtain a 0 degree phase (close the waveshape loop).
8. Move Oscilloscope channel A probe to TP15 pin 8.
9. Adjust A13R175 (PAR PHASE 2) to obtain a 0 degree phase difference.
10. Select P/AR measurement mode on the 4935A.
11. Adjust A13R186 (PAR DET) until the display reads 100.

ADJUSTMENTS

5-19. HOLD CIRCUIT ADJUSTMENTS

REFERENCE:

A2 Switch Board Assembly

SET UP:

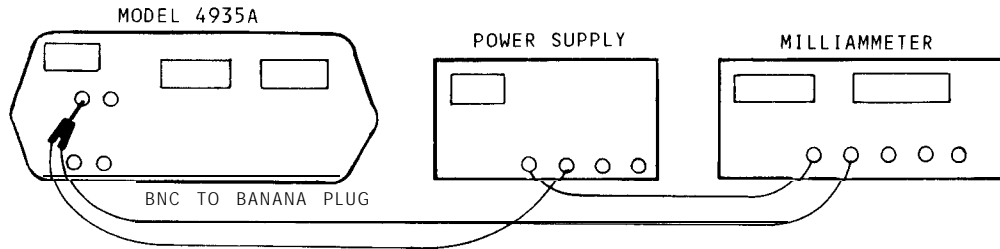


FIGURE 5-3. Hold Circuit Adjustments

FOR MY INFORMATION
 CHANGING A2R54 OR R74
 CAN INCREASE HOLD CURRENT
 16.2 Ω (0757-0382) 21-34 mA

EQUIPMENT:

- AC-DC Voltmeter H P 3455A
- Milliammeter - HP 3466A
- Power Supply - HP 621 HA

PROCEDURE:

1. Connect equipment as shown in Figure 5-3.
2. Check the power supply output with the DC Voltmeter. Adjust the output to 6.9V \pm 2 VDC.
3. On 4935A select:
 - DISPLAY - TRMT
 - NOR - press in
 - SET UP - press in TRMT HOLD
 - press in RCV HOLD
4. Adjust A2R53(TRMT F-101-D) to a DC current reading of 24.0mA \pm 1 mA
5. **011** the 4935A press in the REV button.
6. Adjust A2R73(RCV HOLD) to a DC current reading of 24.0mA \pm 1 mA.
7. Reverse the power supply leads. The DC current readings should be 24.0mA \pm 1mA in both the TRMT and RCV HOLD circuit. Return the power supply leads to the normal polarity.
8. Set the monitoring Voltmeter to a voltage range of 50V or greater and adjust the Power Supply for 50VDC. The DC current reading should be less than 26mA.
9. Press in the NOR button. The DC current should be less than 26mA.

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION

6-2. This section contains information for ordering replacement parts. Table 6-1 lists abbreviations, Table 6-2 is the Manufacturer's Code List, and Table 6-3 lists replaceable parts. Figures 6-1, 6-2, and 6-3 are exploded views of the instrument.

6-3. REPLACEABLE PARTS LIST

6-4. Table 6-3 is the list of replaceable parts with parts listed in alphanumerical order. Included is the description, quantity (total used in the instrument), HP Part Number and manufacturers' part number. Chassis and mechanical parts are also listed in Table 6-3 and Figures 6-1, 6-2 and 6-3.

6-5. ORDERING INFORMATION


6-6. To order a listed part, quote the HP Part Number, indicate the quantity needed and address the order to the nearest Hewlett-Packard Office. When ordering a non-listed part include the instrument model number, serial number and a description and function of the part. Address the order to the nearest Hewlett-Packard Office.

Table 6-1. Reference Designations and Abbreviations (1 of 2)

REFERENCE DESIGNATIONS			
A	assembly	JU	jumper
B	motor, synchro, fan	K	relay
BP	binding post	L	inductor
BT	battery	M	meter
C	capacitor	OE	optical encoder
CB	circuit breaker	P	plug connector
CR	diode	Q	transistor
DL	delay line	R	resistor
DS	indicator, display	RT	thermistor
E	Misc electrical parts	S	switch
F	fuse	T	transformer
FL	filter	TB	terminal board
J	receptacle connector, jack	TP	test point
U	Integrated circuit, non-repairable assembly		
V	vacuum tube, photocell, etc.		
VR	voltage regulator		
W	lumper wire, cable assembly		
X	= socket		
Y	crystal		
Z	tuned cavity, network		
ABBREVIATIONS			
A	amperes	DIA	diameter
AC	alternating current	DIP	dual in-line package
ADD	address	DPDT	double-pole, double-throw
ADJ	adjust, adjustment	DPST	double-pole, single-throw
AL	aluminum	DR	drive
AR	as required	DRVR	driver
ASM	algorithmic state machine	DSPL	display
ASSY	assembly	DTL	diode-transistor logic
B	base	E	emitter
BCD	binary coded decimal	ECL	emitter-coupled logic
BeCu	beryllium copper	ELECT	electrolytic
BIN	binary	ENCAP	encapsulated
BLK	black	EXT	external
BLU	blue	EXTR	extractor
BP	band pass	F	female, farads
BRN	brown	FF	flip-flop
BRS	brass	FLM	film
BTU	British thermal unit	FRNT	= front
C	collector	FXD	fixed
CATH	cathode	G	giga (10 ⁹)
c c w	counterclockwise	GE	germanium
CD PL	cadmium plate	GL	glass
CER	ceramic	GND	ground(ed)
CERMET	ceramic met film	GP	General Purpose
CKTS	circuits	GRA	gray
C FLM	carbon film	GRN	green
CLK	clock	H	henries
CLR	clear	HDW	= hardware
CMOS	complementary metal oxide semiconductor logic	HEX	hexagon, hexagonal, six
COM	common	HP	= high pass
COML	commercial	HR	= hour(s)
COMP	composition	HZ	= Hertz
COMPL	complete	IC	Integrated circuit
COND	conductor	ID	= inside diameter
CONN	connector	IF	= intermediate frequency
CONT	contact	IN.	= inch, inches
CPRSN	compression	INCAND	= Incandescent
CTL	complementary-transistor logic	INCL	= include(s)
c w	clockwise	INSUL	= insulation, Insulated
D	diameter	INT	= Internal
DC	= direct current	INTL	= Internal
DEPC	= deposited carbon		
K	kilo (10 ³), kilohm		
LED	light emitting diode		
LFT	left		
LG	long		
LH	left hand		
LKWR	lockwasher		
LP	low pass		
LS	low power Schottky		
LSB	least significant bit		
M	milli (10 ⁻³), male, mega (10 ⁶), megohm		
MET FLM	= metal film		
MET OX	= metal oxide		
MHZ	= megahertz		
M F R	manufacturer		
MINTR	= miniature		
MISC	miscellaneous		
M O M	momentary		
MOS	= metal oxide semiconductor		
MSB	most significant bit		
MTCHD	= matched		
MTG	= mounting		
MTLC	metallic		
N	= nano (10 ⁻⁹)		
N.C	= normally closed, no connection		
NE	= neon		
NO	= number		
N.O.	= normally open		
NP	= No Polarity		
NPN	= negative-positive-negative		
NPO	= negative-positive zero (zero temperature coefficient)		
NRFR	= not recommended for field replacement		
NS	= normally shorting, nanosecond		
NSR	= not separately replaceable		
NYL	= nylon		
OBD	= order by description		
OD	= outside diameter		
ORN	= orange		

Table 6-1. Reference Designations and Abbreviations (2 of 2)


ABBREVIATIONS					
P	pico (10^{-12})	RVT	rivet	TRN	turn
PC	printed circuit	RWV	reverse working voltage	TTL	transistor-transistor logic
PCA	printed circuit assembly			TYP	typical
PF	picofarad	S	second	μ (μ)	micro (10^{-6})
PIV	Peak Inverse Voltage	SB	slow blow	UF	microfarad
PK	peak	SCR	silicon controlled rectifier	US	microseconds
PNL	panel	SE	selenium	V	volt(s)
PNP	positive negative-positive	SGL	single	VAR	variable
PP	peak-to-peak	SI	silicon	v c o	voltage controlled oscillator
PPM	parts per million	SHK	shank	V D C W	direct current working volts
POLYC	polycarbonate	SIP	single in-line package	VIO	violet
POLYE	polyethylene	SKT	socket	VNP	no polarity voltage
POLYSTY	polystyrene	SLDR	solder	W	watts
PORC	porcelain	SPCG	spacing	WT	weight
POSN	position(s)	SPDT	single-pole, double-throw	w w	wirewound
POZI	pozidrive	SPST	single-pole, single-throw	WHT	white
PRV	peak reverse voltage	SST	stainless-steel	WP =	wiper
PWV	peak working voltage	STL	steel	WIV	working inverse voltage
P/O	part of	SZ	size	WSHR	washer
R	ring	T	tip	X	times, multiple
RAM	random access memory	TA	tantalum	YEL	yellow
ROM	read only memory	TEL	telephone	ZNR	zener
RECT	rectifier	T C	Temp. Compensated. temp coefficient	ϕ	phi, phase
RF	radio frequency	THKNS	thickness		
RH	right hand	TI	titanium		
RMS	root-mean-square	TGL	toggle		
RND	round	THD	thread		
RT	right hand	THK	thick		
RTL	resistor transistor logic	TOL	tolerance		
RTNT	retainer	TRMR	trimmer		
RTRY	rotary				

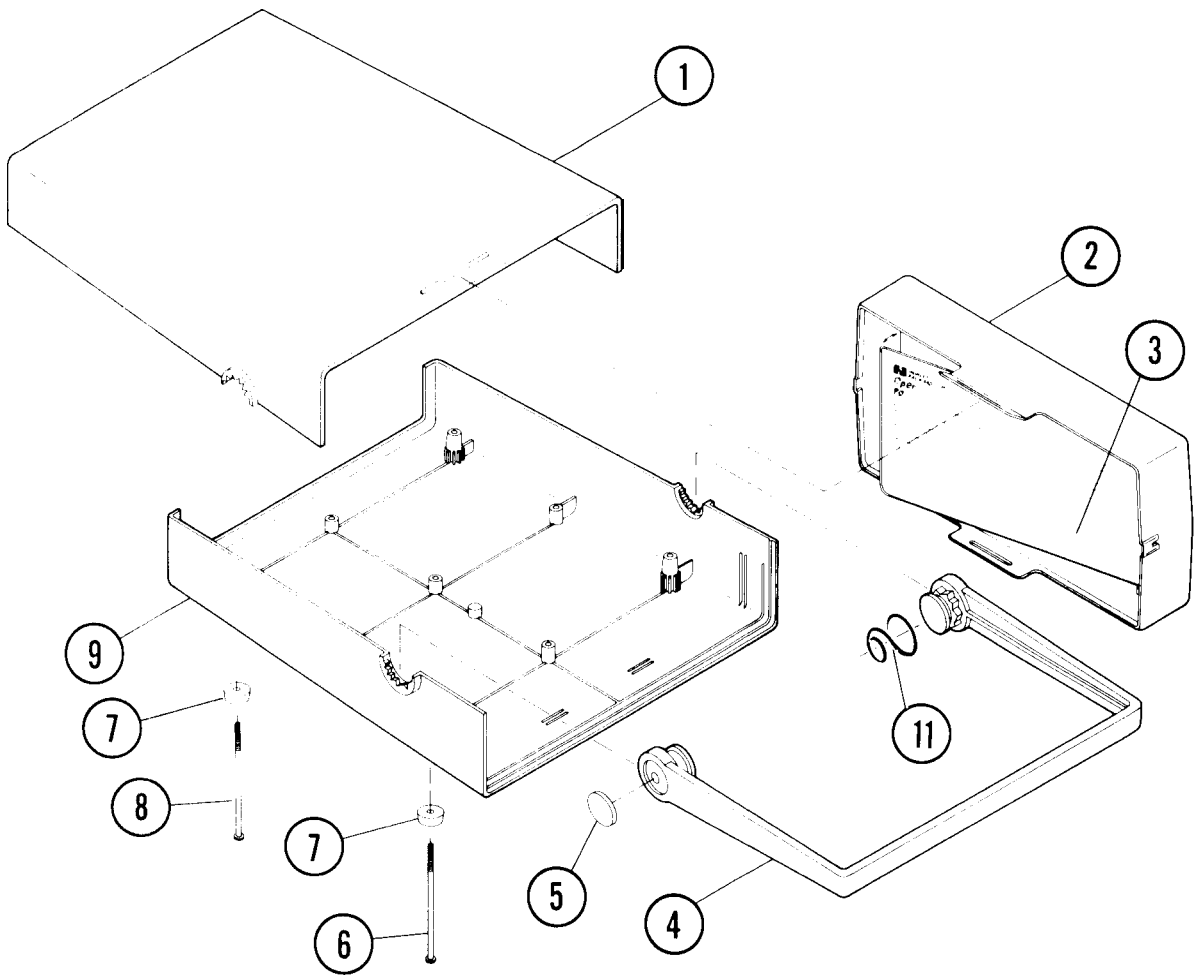

ITEM	DESCRIPTION	HP PART NO.	QUANTITY
1	Case; top half		1
2	Front Cover	5040-4475	1
3	Instruction Card	0493590018	1
4	Handle- Case	5040-4470	1
5	Cap- Handle	7120-5370	2
6	Screw; Machine	2520-0014	2
7	Foot, Bumper	5041-6750	4
8	Screw; Machine	2520-0014	2
9	Case; Bottom Half	5040-4476	1
10	Metal Rod	7205-0356	1
11	Spring- Handle	1460-2096	2

FRONT COVER LABEL 5080-8561

Figure 6-1. Exploded View Case and Covers

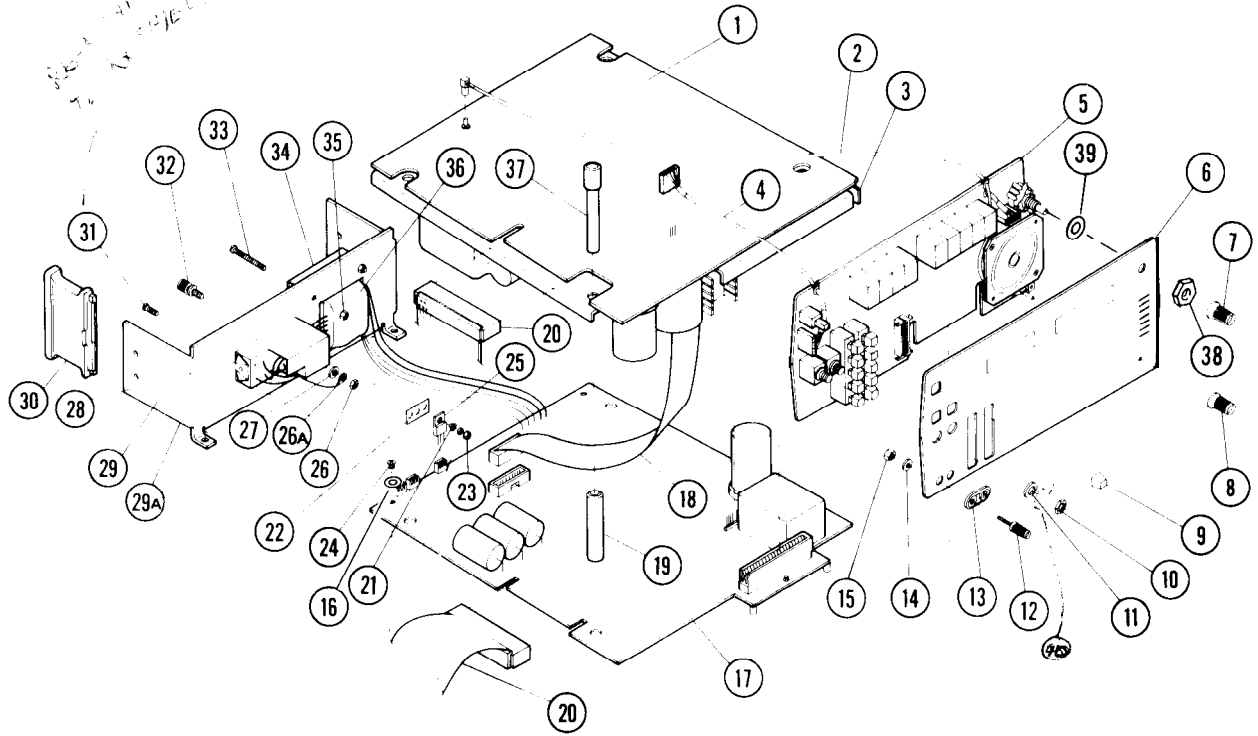

ITEM	DESCRIPTION	HP PART NO.	QUANTITY
1	Receiver Assy(Std)	04935-6000 3 32	1
	Receiver Assy(P/AR)	04935-6000 5 34	1
2	Coax Cable	0493560009	1
3	Shield; Metal Mounting	04935-00002	1
4	Cable 4 wire twisted	5060-7167	1
5	Switch Board Assy	04935-60102	1
6	Front Panel(Std)	04935- 60040 2 * 2	1
	Front Panel(P/AR)	04935-	1
7	Knob, Output Level	0370-P091	1
8	Knob, Monitor Volume	0370-I 089	1
9	Key Cap White	5041-0201	1
10	Nut, Hex	2950-0087	1
11	Washer 5/16x.375	3050-I 288	1
12	Binding Posts(Dial Jacks)	1510-0131	2
13	Insulator	04936-40001	1
14	Washer No. 6; 147 ID	3050-0100	1
15	Nut No. 6	2420-0023	1
16	Washer, Flat	3050-0105	2
17	Transmitter Assy(Std)	04935-603 3 33	1
	Transmitter Assy(P/AR)	04935-603 4 34	1


PCO
 3 5423
 W L 254
 P
 92004

Figure 6-2. Exploded View Assemblies and Cables

ITEM	DESCRIPTION	HP PART NO.	QUANTITY
18	Cable(Batt Opt Interconnect)	8120-3181	1
19	Standoff, Plastic	5040-4467	4
20	Cable, Rec/Tran. Interconnect	8120-3126	1
21	Shouldered Fiber Washer	3050-I 021	3
22	Transistor Insulator	0340-0949	3
23	Nut,Hex No.4 Trans. MTG	0590-0663	3
24	Screw No. 4, MTG	2200-0521	2
25	Transistor Pwr (PO Item 17)	1853-05 12	3
26	Nut Hex	2950-0006	1
26A	Solder Terminal	0360-I 251	1
27	Lock Washer	2190-0027	1
28	Line Filter Module	91350284	1
29	Rear Panel Assy (Loaded) Consists of Items:26,26A,27,28 29,32,33,34,35,36 for Repair Replacement only.	04935-60108	1
29A	Rear Panel(Unloaded)	04935-00001	1
30	Foot Rear	50404471	2
31	Screw No.4	2200-O 143	3
32	Binding Post, Ground	151 O-0038	1
33	Screw Transformer MTG	2360-0242	4
34	Cover Transformer	7100-I 288	1
35	Nut, Transformer MTG	2420-0023	4
36	Transformer, T1	9100-4205	1
37	Standoff, Plastic	5040-4468	4
38	Nut, Hex	2950-0043	1
39	Nylon Washer	3050-I 114	1
40	1, 1/4 Nylon Washer	2190-0016	2

Figure 6-2. Exploded View Assemblies and Cables (Continued)

22, 23, 25 TRANSISTOR TO REAR PANEL

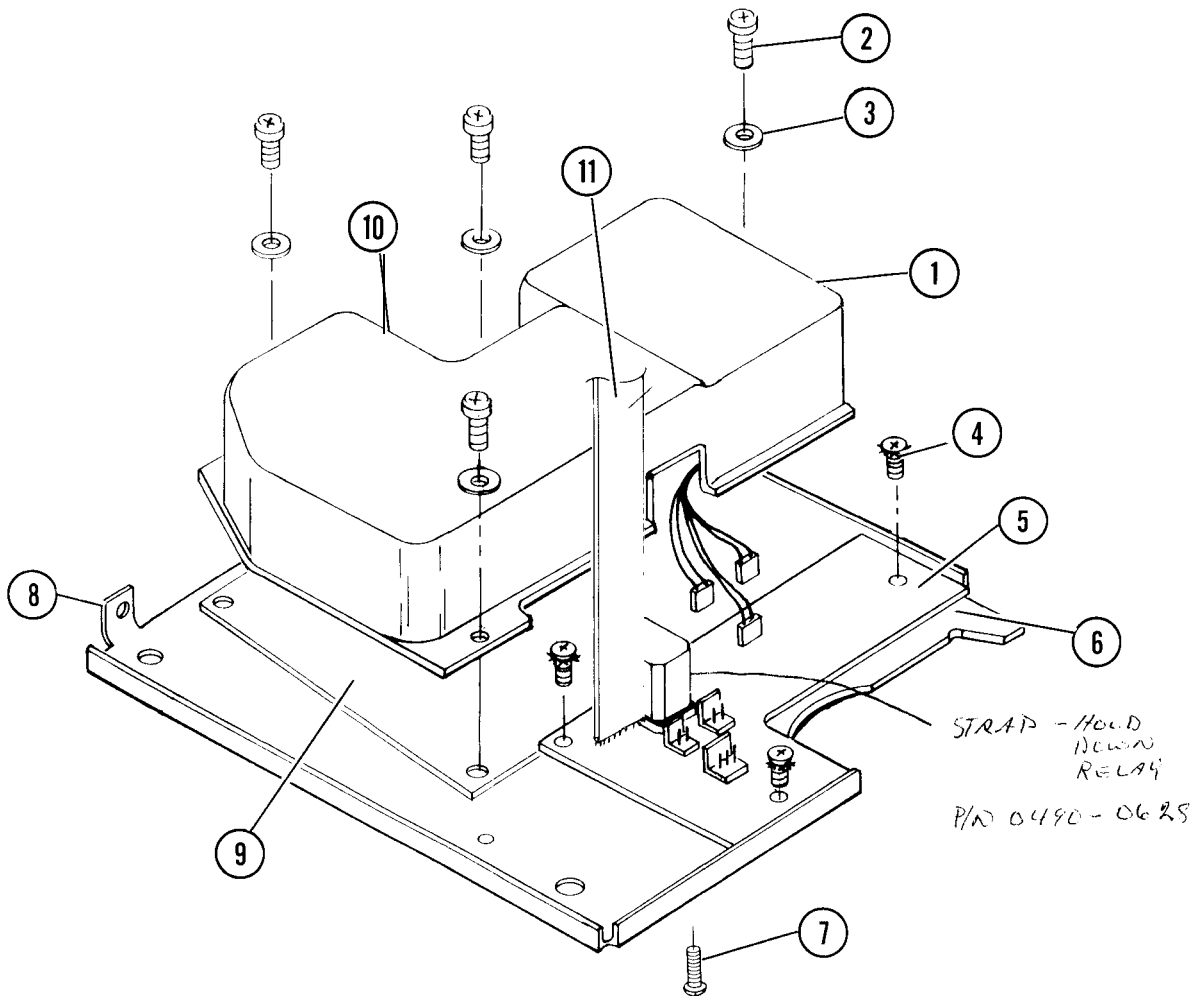

ITEM	DESCRIPTION	HP PART NO.	QUANTITY
1	Battery Assy	04935-62904	1
2	Screw	2510-0103	4
3	Washer	3050-0001	4
4	Screw	2360-0117	3
5	Battery Charger Board	04935430029	1
6	Receiver Assy(Std)	04935-60032	1
	Receiver Assy(P/AR)	04935-60034	1
7	Screw	2360-0370	6
8	Shield; Metal MTG	04935-04701	1
9	Insulator	04935-45401	1
10	Label - ID	04935-800 14	1
11	Cable: P/O Battery	8120-3181	2
	Charger Board		

Figure 6-3. Exploded View Battery Option

Table 6-2. Manufacturer Code List

MFR NO.	MANUFACTURER NAME	ADDRESS	ZIP CODE
00000	ANY SATISFACTORY SUPPLIER		
01121	ALLEN-IRADLEY CO	MILWAUKEE WI	53204
01295	TEXAS INSTR INC SEMICOND CMPNT DIV	DALLAS TX	75222
01920	RCA CORP SOLID STATE DIV	SOMERVILLE NJ	08876
02111	SPECTROL ELECTRONICS CORP	CITY OF IND CA	91745
03500	GE CO SEMICONDUCTOR PROD DE PT	SYRACUSE NY	13201
03800	KDI PYROF I M CORP	WHIPPANY NJ	07981
04713	MOTOROLA SEMICONDUCTOR PRODUCTS	PHOENIX AZ	85062
05245	CORCOM INC	CHICAGO IL	60657
06383	PANDUIT CORP	TINLEY PARK IL	60477
0656A	ASHLAND PRODUCTS CO	CHICAGO IL	60628
11236	C I S OF BIRMI NC	BERNE IN	46711
17856	SI I CONIX INC	SANTA CLARA CA	95054
18324	SI GNE I CS CORP	SUNNYVALE CA	94086
19701	M I PCO/ELECTRA CORP	MINERAL WELLS TX	76067
24355	ANALOG DEVICES INC	NORWOOD MA	02062
24546	CORNING GLASS WORKS (BRADFORD)	BRADFORD PA	16701
25088	SIEMENS CORP	ISELIN NJ	08830
27014	NATIONAL SEMICONDUCTOR CORP	SANTA CLARA CA	95051
28480	HEWLETT-PACKARD CO CORPORATE HQ	PALO ALTO CA	94304
32293	INTERSIL INC	CUPERTINO CA	95014
34371	HARRIS SE MICON DIV HARRIS INTI RTYPI	MELBOURNE FL	32901
55576	SYNERTEK	SANTA CLARA CA	95051
56289	SPRAGUE ELECTRIC CO	NORTH ADAMS MA	01247
7736	ELECTRO MOTIVE CORP SUB IEC	WILLIMANTIC CT	06226
7842	TRW INC PHILADELPHIA DIV	PHILADELPHIA PA	19108
5915	LITTELFUSE INC	DES PLAINES IL	60016
8175	BURR BROWN CO	HUNTSVILLE AL	35801

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A2 • SWITCHBOARD (All Units)						
A2	04935-60027 <i>86261</i>	2	1	SWITCH BOARD (ALL UNITS)	28480	04935.60027
A1	04935-80009 <i>86261</i>	3	1	FRONT PANEL W/PAR (OPT. 002,003 ONLY)	28480	04935-80009
A1	80010-80010 <i>86261</i>	9	1	FRONT PANEL W/NTG (STD. UNIT ONLY) <i>0 27 001</i>	28480	0 4 9 3 5 - w
A1D1-DS40	1990-0810	3	40	LED (SERVICE ONLY)	28480	5082-4160
A2C2	0160-0576	5	13	CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01600576
A2C3	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A2C4	0160-0302	5	1	CAPACITOR-FXD .018UF +10% 200VDC POLYE	28480	0160-0020
A2C5	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A2C7	0180-0291	3	1	CAPACITOR-FXD .1UF +10% 35VDC TA	56289	150D105X9035A2
A2C10	0180-0104	7	1	CAPACITOR-FXD 200UF +75-10% 16VDC AL	56289	30D207G016DF2
A2C11	0180-2206	4	2	CAPACITOR-FXD 60UF +10% 6VDC TA	56289	150D606X9006B2
A x 12	0180-2206	4		CAPACITOR-FXD 60UF +10% 6VDC TA	56289	150D606X9006B2
A2C13	1060-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A2C14	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01 W-0576
A2C15	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A2C16	0160-3878	6	1	CAPACITOR-FXD 1000PF +20% 100VDC CER	28480	0160-3878
A2C17	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A2C52	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A2C53	0180-0373	2	2	CAPACITOR-FXD .68UF +10% 35VDC TA	56289	150D684X9035A2
A2C54	01 W-3879	7	4	CAPACITOR-FXD .01UF +20% 100VDC CER	28480	0160-3879
A2C56	0160-3879	7		CAPACITOR-FXD .01UF +20% 100VDC CER	28480	0160-3879
A2C57	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160.0576
A2C58	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A2C72	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A2C73	0180-0373	2		CAPACITOR-FXD .68UF +10% 35VDC TA	56289	150D684X9035A2
A2C74	0160-3879	7		CAPACITOR-FXD .01UF +20% 100VDC CER	28480	0160-3879
A2C76	0160-3879	7		CAPACITOR-FXD .01UF +20% 100VDC CER	28480	0160-3879
A2C77	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A2C78	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A2CR8	1906-0069	4	2	DIODE-FW BRDG 4AVV IA	28480	1906-0069
A2CR9	1906-0069	4		DIODE-FW BRDG 400V IA	28480	1906-0069
A2CR51	1826-0585	9	2	V REF TO-92	27014	LM329DZ
A2CR71	1826-0585	9		V REF TO-92	27014	LM329DZ
A2DS1	1990-0649	3	1	DISPLAY-AN-SEG I-CHAR .408-H RED	28480	1990-0649
A2DS2	1990-0540	3	8	DISPLAY-NUM-SEG I-CHAR .43-H	28480	1 sso-0540
A2DS3	1 SW-0540	3		DISPLAY-NUM-SEG I-CHAR .43-H	28480	1990-0540
A2DS4	1990-0540	3		DISPLAY-NUM-SEG I-CHAR .43-H	28480	1990-0540
A2DS5	1990-0540	3		DISPLAY-NUM-SEG I-CHAR .43-H	28480	1990-0540
A2DS6	1990-0540	3		DISPLAY-NUM-SEG I-CHAR .43-H	28480	1990-0540
A2DS7	1990-0540	3		DISPLAY-NUM-SEG I-CHAR .43-H	28480	1990-0540
A2DS8	1990-0540	3		DISPLAY-NUM-SEG I-CHAR .43-H	28480	1990-0540
A2DS9	1990-0540	3		DISPLAY-NUM-SEG I-CHAR .43-H	28480	1990-0540
A2DS10	1990-0805	3	1	DISPLAY-LT BAR MDL	28480	1990-0805
A2J2	1251-6947	0	7	CONNECTOR-SGL CONT PIN .025-IN-BSC	28480	1251.6947
A2J3	1252-1134	7	2	CONNECTOR-TEL JACK 2 =CKT .25-SHK-DIA	28480	1252-1134
A2J4	1252-1134	7		CONNECTOR-TEL JACK 2 =CKT .25-SHK-DIA	28480	1252-1134
A2J5	1251-6947	0	2	CONNECTOR-SGL CONT PIN .025-IN-BSC	28480	1251-6947
A2J6	1251-6537	4	2	CONNECTOR 13-PIN F POST NPE	28480	1251-6537
A2J7	1251-6537	4		CONNECTOR 13-PIN F POST TYPE	28480	1251.6537
A2J8	1250-0257	1	1	CONNECTOR-RF SMBM PC 50-OHM	28460	125 I-0257
A2Q4	1854-0643	9	2	TRANSISTOR NPN 2N3585 SI TO-66 PO = 35W	01928	2N3585
A2Q8	18540643	9		TRANSISTOR NPN 2N3585 SI TO-66 PD = 35W	01928	2N3585
A2Q51	18640575	6	6	TRANSISTOR NPN SI PD = 625MW FT = 50MHZ	04713	MPS-A42
A2Q52	1854-0071	7	2	TRANSISTOR NPN SI PD = 300MW FT = 200MHZ	28480	1854-0071
A2Q53	1854-0575	6		TRANSISTOR NPN SI PD = 625MW FT = 50MHZ	04713	MPS-A42
A2Q55	1854-0575	6		TRANSISTOR NPN SI PD = 625MW FT = 50MHZ	04713	MPS-A42
A2Q71	1854-0575	6		TRANSISTOR NPN SI PD = 625MW FT = 50MHZ	04713	MPS-A42
A2Q72	1854-0071	7		TRANSISTOR NPN SI PD = 300MW FT = 200MHZ	28480	1854-0071
A2Q73	1854-0575	6		TRANSISTOR NPN SI PD = 625MW FT = 50MHZ	04713	MPS-A42
A2Q75	1854-0575	6		TRANSISTOR NPN D1PD = 625MW FT = 50MHZ	04713	MPS-A42
A2R5	0757-0461	2	2	RESISTOR 68.1K 1% .125W F TC = 0 + -100	24546	C4-1/8-TO-6812-F
A2R6	0757-0288	1		RESISTOR 9.09K 1% .125W F TC = 0 + -100	19701	M-F-C1/8-TO-9091-F
A2R15	0757-0458	7	1	RESISTOR 51.1K 1% .125W F TC = 0 + -100	24546	C4 = 1/8-TO-5112-F
A2R18	0757-0461	2		RESISTOR 68.1K 1% .125W F TC = 0 + -100	24546	C4 1/8-TO-6812-F
A2R19	0698-3132	4	1	RESISTOR 261 1% .125W F TC = 0 + -100	24546	C4 1/8-TO-2610-F

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	Ⓞ	Qty	Description	Mfr Code	Mfr Part Number
A2R20	0757-0442	9	3	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A2R21	0698-8558	8	2	RESISTOR 67.3 25% .5W F TC=0+-50	28480	0698-8558
A2R22	0698-8558	8	2	RESISTOR 67.3 25% .5W F TC=0+-50	2848J	0698-8558
A2R23	0699-0657	4	2	RESISTOR 300.25% .5W F TC=0+-50	28480	0699-0657
A2R24	0699-0657	4	2	RESISTOR 300.25% .5W F TC=0+-50	28480	0699-0657
A2R25	0699-0658	5	2	RESISTOR 450.25% .5W F TC=0+-50	28480	0699-0658
A2R26	0699-0658	5	2	RESISTOR 450.25% .5W F TC=0+-50	28480	0699-0658
A2R27	0757-0346	2	1	RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-TO-10R0-F
A2R28	0757-0442	9	2	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A2R29	0757-0447	4	1	RESISTOR 16.2K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1622-F
A2R30	0757-0442	9	2	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A2R35	2100-3857	7	1	RESISTOR-VARIABLE 10K+-20% SPECIAL	28480	21 W-3857
A2R36	2100-3858	8	1	RESISTOR-VAR CONTROL CP 50K 20% 10CWX	28460	2100-3858
A2R51	0698-8827	4	2	RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A2R52	0757-0195	3	2	RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2152F
A2R53	2100-3164	9	2	RESISTOR-TRMR 10 20% C SIDE-ADJ17-TRN	02111	43P100
A2R54	0698-3429	2	2	RESISTOR 19.6 1% .125W F TC=0+-100	03888	PME55-1/8-TO-19R6-F
A2R56	0757-0401	0	8	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2R57	0757-0401	0	8	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2R58	0757-0401	0	8	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2R60	0757-0401	0	8	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2R71	0698-8827	4	2	RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A2R72	0757-0199	3	3	RESISTOR 21.5K 1% .125W F TC=0+-100	24646	C4-1/8-TO-2152-F
A2R73	2100-3164	9	2	RESISTOR-TRMR 10 20% C SIDE-ADJ17-TRN	02111	4P100
A2R74	0698-3429	2	2	RESISTOR 19.6 1% .125W F TC=0+-100	03888	PME55-1/8-TO-19R6-F
A2R76	0757-0401	0	8	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2R77	0757-0401	0	8	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2R78	0757-0401	0	8	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2R80	0757-0401	0	8	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2S1	3101-2124	2	1	SWITCH-PB DPOT ALTNG .25A 1 15VAC	26460	3101-2124
A2S2	3101-2391	5	1	SWITCH-PB 2-STATION 15MM C-C SPACING	28480	3101-2391
A2S3	3101-2391	5	1	SWITCH-PB P-STATION 15MM C-C SPACING	28480	3101-2391
A2S4	3101-0499	0	2	SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S5	3101-0499	0	2	SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S6	3101-0499	0	2	SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S7	3101-0499	0	2	SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S8	3101-0499	0	2	SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S9	3101-0499	0	2	SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S10	3101-0499	0	2	SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S11	3101-0499	0	2	SWITCH-PB J-STATION 10MM C-C SPACING	28480	3101-0499
A2S12	3101-0499	0	2	SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S13	3101-0499	0	2	SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2SG1	1970-0078	0	2	TUBE-ELECTRON SURGE V PICTR	25088	B1-A350/15
A2SG2	1970-0078	0	2	TUBE-ELECTRON SURGE V PICTR	25088	B1-A350/15
A2SP1	9160-0273	a	1	LOUD SPEAKER	28480	9160-0273
A2TP3	1251-6947	0	1	CONNECTOR SGL CONT PIN .025-IN-BSC	28480	1251-6947
A2TP4	1251-6947	0	1	CONNECTOR SGL CONT PIN .025-IN-BSC	28480	1251-6947
A2U2	1820-2132	4	2	IC ORVR CMOS LED DRVR	32293	ICM7218A
A2U3	1820-2132	4	2	IC DRVR CMOS LED DRVR	32293	ICM7218A
A2U4	1826-0205	0	1	IC TIMER TTL	1 a324	NE5558A
A2U6	1826-0682	7	1	IC AUDIO AMPL PWR 8-DIP-P PKG	27014	LM3886N-1
A2U7	1826-0712	4	1	IC OP AMP LOW-BIAS-H-IMPD DUAL 8-DIP-P	27014	LF353N
A2XDS1	1200-0915	3	9	SOCKET-DSPL 14-PIN DIP-SLDR	28480	1200-0915
A2XDS2	1200-0915	3	9	SOCKET-DSPL 14-PIN DIP-SLDR	28480	1200-0915
A2XDS3	1200-0915	3	9	SOCKET-DSPL 14-PIN DIP-SLDR	28480	1200-0915
A2XDS4	1200-0915	3	9	SOCKET-DSPL 14-PIN DIP-SLDR	28480	1200-0915
A2XDS5	1200-0915	3	9	SOCKET-DSPL 14-PIN DIP-SLDR	28480	1200-0915
A2XDS6	1200-0915	3	9	SOCKET-DSPL 14-PIN DIP-SLDR	28480	1200-0915
A2XDS7	1200-0915	3	9	SOCKET-OSPL 14-PIN DIP-SLDR	28480	1200-0915
A2XDS8	1200-0915	3	9	SOCKET-DSPL 14-PIN DIP-SLDR	28480	1200-0915
A2XDS9	1200-0915	3	9	SOCKET-DSPL 14-PIN DIP-SLDR	28480	1200-0915
A2XDS10	1200-1320	3	1	SOCKET-DSPL 8-PIN DIP-SLDR	28480	1200-1320

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	⊘	Qty	Description	Mfr Code	Mfr Part Number
				AZ MISCELLANEOUS PARTS		
	0340-0992	1	2	INSULATOR TRANSISTOR	28480	0340-0992
	0380-1013	3	2	SPACER-RND .888-IN-LG .115-IN-ID	00000	ORDR BY DSCRPTN
	2200-0173	6	2	SCREW-MCH 4-401-IN-LG 82 DEG	00000	ORDR BY DSCRPTN
	2260-0009	8	2	NUT-HEX-W /LKWR 4-40-THD .094-IN-THK	00000	ORDR BY DSCRPTN
	2360-0197	2	4	SCREW-MC H 6-32 .375-IN-LG PAN-HD-POZI	00000	ORDRBYDSCRPTN
	0590-0076	1	4	NUT-HEX-W/LKWR 6-32-THD .094-IN-THK	00000	ORDR BY DSCRPTN
	5041-0201	6	1	KEY CAP-WHITE (POWER SWITCH)	28480	5041-0201
	5041-1931	1	1	KEY CAP-NOR (REV-TRMT)	28460	5041-1931
	5041-1932	2	1	KEY CAP-REV (REV-TRMT)	26460	5041-1932
	5041-1933	3	1	KEY CPA-DIAL (SETUP-TRMT)	28480	5041-1933
	5041-1934	4	2	KEY CAP-HOLD (SETUP-TRMT-R1EV)	26480	5041-1934
	5041-1935	5	1	KEY CAP-BRDG (SETUP-TRMT-REV)	28480	5041-1935
	5041-1936	6	2	KEY CAP-135 (SETUP-TRMT-REV)	28480	5041-1936
	5041-1938	8	2	KEY CAP-800 (SETUP-TRMT-R1EV)	28480	5041-1938
	5041-1939	9	2	KEY CAP-800 (SETUP-TRMT-R IEV)	28480	5041-1939
	04935-61603		1	TWISTED PAIR-JMPR	28480	0493561603
	2190-0138		2	WASHER FLAT	00000	ORDR BY DSCRPTN

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3 - RECEIVER BOARD (Std Units only)						
A3	0493564032	4	1	RECEIVER BOARD ASSY (STD. UNIT ONLY)	28480	04935-60032
A3C1	0180-3124	8	1	CAPACITOR-FXD 75UF + 100-20% 300VDC AL	28480	0160-3124
A3C2	0180-1746	5	3	CAPACITOR-FXD 15UF +10% 20VDC TA	58289	150D156X9020B2
A3C3	0180-1746	5		CAPACITOR-FXD 15UF +-10% 20VDC TA	56289	150D156X9020B2
A3C4	0180-1746	5		CAPACITOR-FXD 15UF +-10% 20VDC TA	56289	150D156X9020B2
A3C5	0160-6623	5	72	CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C6	0160-5719	5	1	CAPACITOR-FXD 620PF +-5% 30VDC MICA	26480	0160-5719
A3C7	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C8	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	26480	0160-6623
A3C9	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C10	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C11	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C12	0160-8573	5	2	CAPACITOR-FXD 2000PF +-5% 300VDC MICA	28480	0160-8573
A3C13	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C14	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A X 15	01 W-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C16	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C17	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28460	0160-6623
A3C18	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C19	0160-8539	1	10	CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	HP204571PF3C1
A X 21	0160-6623	5		CAPACITOR-FXD .1UF +-10% 50VDC CER	28480	0160-6623
A3C22	0160-6623	5		CAPACITOR-FXD .1UF +-10% 50VDC CER	28480	0160-6623
A3C23	0160-6623	5		CAPACITOR-FXD .1UF +-10% 50VDC CER	28480	0160-6623
A3C24	0140-0190	7	2	CAPACITOR-FXD 39PF +-5% 300VDC	72136	DM15E39J0300WW1CR
A X 25	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C26	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C28	0160-8539	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	HP204571PF3C1
A3C29	0180-0374	3	11	CAPACITOR-FXD 10UF +-10% 20VDC TA	52689	150D106X9020B2
	0180-0374	3		CAPACITOA-FXD 10UF +-10% 20VDC TA	52689	150D106X9020B2
A3C31	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A X 32	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	01604623
A3C33	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A X 34	0180-0374	3		CAPACITOR-FXD 10UF +10% 20VDC TA	56289	15D106X9020B2
A3C35	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150106X9020B2
A3C36	0160-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC CER	56289	150106X9020B2
A3C37	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A X 38	0140-0190	7		CAPACITOR-FXD 39PF +-5% 300 VDC MICA	72136	MD15E39J0300WW1CR
A3C39	0160-0167	0	2	CAPACITOR-FXD .082UF +-10% 200VDC POLYE	28480	0160-0167
A3C40	0160-6623	6		CAPACITOR-FXD CAPA08.1H +-20% 50VDC CE200VDC POLYE	28480 28480	0160-6623
A3C41	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C42	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C43	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C44	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A3C45	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C46	0180-0374	3		CAPACITOR-FXD 10UF +10% 20VDC TA	56289	150D106X9020B2
A3C47	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A X 40	0160-7103	7	1	CAPACITOR-FXD 600PF +-1% 300VDC MICA	28480	0160-7103
A3C50	0160-7099	5	5	CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-7099
A3C51	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C52	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C53	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C54	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C55	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C56	0160-6623	2		CAPACITOR-FXD .1UF + -20% 50VDC CER	26480	0160-6623
A3C57	0160-6646	9	11	CAPACITOR-FXD CAPA15001700PF +-1% 100VDC MICA MICA	08113	0160-7100
A3C58	0160-6646	3		CAPACITOR-FXD CAPA15001700PF +-1% 100VDC MICA MICA	08113	0160-7100
A3C59	0180-0374	5		CAPACITOR-FXD 10UF +-10% 20VDC TA	56280	150D106X9020B2
A3C60	0160-7098	5	2	CAPACITOR-FXD 1100PF +-1% 100VDC MICA	06113	0160-7098
A3C61	0160-7100	9		CAPACITOR-FXD 1700PF 01% 100VDC MICA	08113	0160-7100
A3C62	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A X 63	0160-6623	5		CAPACITOR-FXD .1UF + -20% 50VDC CER	28480	0160-6623
A3C64	01800197	8	4	CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A3C65	0180-0197	8		CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A3C66	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A3C67	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	06113	0160-7100
A3C68	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A X 69	0160-6268	4	2	CAPACITOR-FXD 1000PF +-1% 500VDC MICA	08113	0160-6268
A X 70	0160-6595	4	2	CAPACITOR-FXD 4700PF +-1% 300VDC MICA	08113	01606595
A3C71	0160-6268	4		CAPACITOR-FXD 1000PF +-1% 500VDC MICA	08113	0160-6268

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	⊘	Qty	Description	Mfr Code	Mfr Part Number
AX72	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C73	01606623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C74	0160-6802	9	1	CAPACITOR-FXD 110PF +-1% 300VDC MICA	08113	0160-6802
A3C75	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C76	01 W-6823	5		CAPACITOR-FXD .1UF +0% 50VDC CER	28480	01 W-6623
A3C77	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C78	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C79	0160-7102	4	1	CAPACITOR-FXD 51 00PF +-1% 300VDC MICA	08113	0160-7102
A3C80	0160-6918	9	1	CAPACITOR-FXD 300PF +-1% 200VDC MICA	08113	0160-6918
A3C81	0160-5877	2	5	CAPACITOR-FXD 2400PF +-1%300VDC MICA	28480	01 w-5877
A3C82	0160-7099	7		CAPACITOR-FXD 1200PF +-1% 1000VDC MICA	28480	0160-7099
A3C83	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C84	0160-5877	2	5	CAPACITOR-FXD 2400PF +-1% 300VDC MICA	28480	01 W-5877
A3C85	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A3C87	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 1 WVDC MICA	08113	0160-7100
A3C88	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01W-6623
A3C89	0160-6539	1		CAPACITOR-FXD .01UF +-1% 1 WVDC MICA	08113	HP204751PF3C1
A3C90	0160-6623	5		CAPACITOR-FXD .01UF +-1% 20% VDC CER	28480	0160-6623
A3C91	0160-6595	5		CAPACITOR-FXD .01UF +-1% 20% VDC CER	28480	01 W-6623
A3C92	0160-6539	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	HP204751PF3C1
A3C93	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01 W-6623
AX94	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01 W-6623
A3C95	0160-7101	0	1	CAPACITOR-FXD 400PF +-1% 300VDC MICA	72136	0160-7101
A3C97	0160-6595	4		CAPACITOR-FXD 400PF +-1% 300VDC MICA	08113	0160-6595
A3C98	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C99	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A3C100	01 W-6539	1		CAPACITOR-FXD .01UF +-1% 1 WVDC MICA	08113	HP204751PF3C1
A3C101	0160-6539	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	HP204751PF2C1
A3C102	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C103	0160-7099	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-7099
AX104	0160-5877	2		CAPACITOR-FXD 24WPF +-1% 300VDC MICA	28480	01 w-5877
AX105	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01 W-6623
A3C106	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01 W-6623
A3C107	0160-7099	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	01 w-7099
A3C108	0160-5877	2		CAPACITOR-FXD 24WPF +-1% 300VDC MICA	28480	0160-5877
A3C109	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01 W-6623
A3C110	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01 W-6623
A3C111	0160-7100	1	1	CAPACITOR-FXD 17WPF +-1% 300VDC MICA	72136	0160-7100
AX112	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01 W-6623
AX113	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C114	0140-0228	2	1	CAPACITOR-FXD 380PF +-1% 300VDC MICA	08113	HP204751PF3C1
A3C115	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01 w-6623
A3C116	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01 W-6623
A3C117	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C118	0160-6539	1		CAPACITOR-FXD .01UF +-1% 1WVDC MICA	08113	HP204751PF3C1
A3C119	0160-6623	5		CAPACITOR-FXD .1UF 020% 50VDC CER	28480	0160-6623
A3C120	0160-6539	1		CAPACITOR-FXD .01UF +-1% 1 WVDC MICA	08113	0160-6539
A3C121	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 1 00VDC MICA	08113	0160-7100
AX122	0160-7098	1		CAPACITOR-FXD 11 WPF +-1% 1 WVDC MICA	08113	0160-7098
A3C123	0160-7099	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-7099
A3C124	01805877	2		CAPACITOR-FXD 24WPF +-1% 300VDC MICA	28480	01 W-5877
A3C125	0160-7100	9		CAPACITOR-FXD 1700PH +-1% 100VDC MICA	08113	0160-7100
AX127	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C131	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C132	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01 W-6623
AX133	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A3C137	0160-7100	9		CAPACITOR-FXD 1700PH +-1% 100VDC MICA	08113	0160-7100
A3C139	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C140	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01 W-6623
A3C141	01 W-6539	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	01 w-6530
A3C142	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C143	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C144	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01 W-6623
A3C145	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
AX146	0160-6539	1		CAPACITOR-FXD .01UF +-1% 1WVDC MICA	08113	01 w-8539
A3C147	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	01 W-6623
A3C152	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A3C153	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
AX154	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
AX155	0160-5814	3	1	CAPACITOR-FXD 750PF +-5% 300VDC MICA	28480	0160-5814
A3C156	0160-5811	4	1	CAPACITOR-FXD 430PF +-1% 300VDC	02367	0160-5811
A3C157	0180-0197	8		CAPACITOR-FXD 2.2UF +-105 20VDC TA	56289	150D225X9020A2
AX158	0180-0197	8		CAPACITOR-FXD 2.2UF +-105 20VDC TA	56289	150D225X9020A2

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	C	Qty	Description	Mfr Code	Mfr Part Number
A3C159	0160-6823	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6823
A3C160				CAPACITOR, HAND SELECTED ONLY IF NEEDED		
A3C201	0160-6823	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6823
A3C202				CAPACITOR, HAND SELECTED ONLY IF NEEDED		
A3C203	0160-6500	6	1	CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A3CR1	1901-1068	1	2	DIODE-SM SIG SCHOTTKY	28480	1901-1068
A3CR3	1901-0040	5	2	DIODE-SWITCHING 308 50MA 2NS DO-35	28480	1901-0040
A3CR4	081-13587	1		RESISTOR 0 OHM	03123	104
A3CR5	1901-0040	6		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR6	1901-0376	1	2	DIODE-GEN PRP 35V 50MA CO-35	28480	1901-0376
A3CR7						
A3CR8	1901-0518 1901-0376	6	6	DIODE-SCHOTTKY GEN 50MDO-35	02062	1901-0376
A3CR9	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A3CR11	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A3CR12	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A3CR13	1901-0050	3	4	DIODE SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A3CR14	1901-0050	2		DIODE SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A3CR15	1901-0518	1		DIODE SCHOTTKY	02082	5082-5509
A3CR16	1901-0518	2		DIODE SCHOTTKY	02062	5082-5509
A3CR26	1901-0050	3		DIODE SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A3CR27	1901-0050	3		DIODE SWITCHING 80V 200MA 2NS W-35	28480	1901-0050
A3J1	1250-0257	9	1	CONNECTR-RF SMB M PC 50-OHM	28480	1250-0257
A3J4	1251-5063	1	1	CONNECTR 6-PIN MPOST TYPE	28480	1251-5063
	1251-6947	0	34	CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3JU1	1200-0607	a	8	SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A3JU2	1251-4398	1	2	SHUNT, 4-POSITION	28480	1251-4398
A3JU3	1200-0607	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A3JU4	1200-0607	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A3JU5	1200-0607	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A3JU6	1258-0141	5	2	JUMPER-REMOVABLE FOR .025-IN-BSC-SZ-SQ	28480	1258-0141
A3JU7	1258-0141	5		JUMPER-REMOVABLE FOR .025-IN-BSC-SZ-SQ	28480	1258-0141
A3R1	0757-0442	9	8	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R2	0757-0442	8		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R3	0698-4465	5	1	RESISTOR 931 1% .125W F TC=0+-100	24546	C4-1/8-T0-931R-F
A3R4			1			0698-6393
A3R5	0698-6393	3	5	RESISTOR 585 1% .125W F TC=0+-25	28480 24546	C4-1/8-T0-1001-F
A3R6						
A3R7	0757-0290	5	5	RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-6191-F
A3R8	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+-100	24546	MF4C1/8-T0-6191-F
A3R9	0698-0084	9	4	RESISTOR 2.15K 1% .125W F TC=0+-100	24646	C4-1/8-T0-2151-F
A3R10	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24646	C4-1/8-T0-2151-F
A3R11	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A3R12	0757-0442	2	1	RESISTOR 30.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3012-F
A3R15	1810-0281	9	2	NETWORK-RES 10-SIP100.0K OHM X 9	01121	210A104
A3R16	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	V4-1/8-T0-1002-F
A3R17	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	V4-1/8-T0-1002-F
A3R18	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R19	0698-3457	6	1	RESISTOR 318K 1% .125W F TC=0+-100	28480	0698-3457
A3R20	1810-0281	9		NETWORK-RES 10-SIP100.0K OHM 9	01121	210A104
A3R21	1810-0369	4	2	NETWORK-RES 6-SIP100.0K OHM X 5	11236	750-61-R100K
A3R22	0698-6360	6	20	RESISTOR 10K 1% .125W F TC=0+-25	26460	0698-6360
A3R23	2100-3882	8	2	RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRN	26460	2100-3882
A3R26	0698-3152	8	1	RESISTOR 3.48K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3481-F
A3R27	0698-3153	9	1	RESISTOR 3.83K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3831-F
A3R28	0757-6380	6		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R29	0698-6320	8	1	RESISTOR 5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5001-F
A3R30	0757-0416	7	2	RESISTORS 511 1% .125W F TC=0+-100	24546	C4-1/8-T0-511R-F
A3R32	0757-0416	9		RESISTORS 511 1% .125W F TC=0+-100	24546	C4-1/8-T0-511R-F
A3R33	2100-3883	7	4	RESISTOR-TRMA 5K 10% C TOP-ADJ 17-TRN	28480	2100-3883
A3R34	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R35	0757-0420	3	4	RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A3R37	0698-4480	7	4	RESISTOR 15.8K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1582-F
A3R38	0757-0424	7	1	RESISTOR 1.1K 1% .125W F TC=0+-100	24546	C4-1/8-F0-11/8-T0-1
A3R39	0698-3150	6	3	RESISTOR 2.37K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2371-F
A3R40	0757-6360	6		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R42	0757-6360	6		RESISTOR 10K 1% .125W F TC=0+-100	24646	C4-1/8-F0-1002-F
A3R43	0757-0420	6		RESISTOR 750K 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A3R44	0698-4480	7		RESISTOR 15.8K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1582-F
A3R45	0698-4480	7		RESISTOR 15.8K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1582-F
A3R46	0698-3155	1	2	RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	Q	Qty	Description	Mfr Code	Mfr Part Number
A3R47	0698-4475	0	1	RESISTOR 9.76K 1% .125W F TC=0+-100	03888	PMF55-1/8-T0-9761-F
A3R48	0698-7847	6	3	RESISTOR 1.111K 1% .125W F TC=0+-100	19701	MC2C1/8-T9-111 R-B
A3R49	0698-6360	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A3R50	0757-0159	2	1	RESISTOR 1K 1% .125W	28480	0757-0159
A3R51	0698-0083	8		RESISTOR 1.96K 1% .125W	24546	CA-1/a-T0-1961-F
A3R52	0757-0864	9	2	RESISTOR 301K 1% .5W F TC=0+-100	28480	0757-0864
A3R53	0757-0864	9	2	RESISTOR 301K 1% .5W F TC=0+-100	28480	0757-0864
A3R54	0698-3453	2	1	RESISTOR 196K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1963-F
A3R55	0757-0401	0	4	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A3R56	0757-0438	3	1	RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-511-F
A3R57	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A3R58	0757-0199	3	2	RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A3R60	0698-6360	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A3R62	0757-0317	6	2	RESISTOR 1.33K 1% .125W 24546	24546	CA-1/a-T0-131-F
A3R63	0757-0317	6	2	RESISTOR 1.33K 1% .125W 24546	24546	CA-1/a-T0-131-F
A3R64	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/a-T0-I 002-F
A3R65	2100-3882	8		RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRM	28480	2100-3882
A3R66	07570442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/a-T0-I 002-F
A3R67	0698-3157	3	2	RESISTOR 10.6K 1% .125W F TC=0+-100	24546	C4-1/a-T0-1962-F
A3R68	0757-0444	1	1	RESISTOR 12.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1212-F
A3R69	0757-0199	3		RESISTOR 21.5K .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A3R70	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A3R71	0698-3157	3		RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1962-F
A3R72	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
3R72A	0757-0260	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0=1001-F
A3R73	0698-3150	2		RESISTOR 2.37K 1% .125W	24546	CA-1 /a-T0-2371-F
A3R74	0698-3150	2		RESISTOR 2.37K 1% .125W	24546	CA-1 /a-T0-2371-F
A3R75	0757-0274	5	1	RESISTOR 1.21K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1211-F
A3R76	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A3R77	2100-3881	6	1	RESISTOR-TRMR 500 10% C TOP-ADJ 17-TRN	28480	2100-3881
A3R78	0757-0465	6	2	RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1 /a-T0-1003-F
A3R79	0698-4530	8	1	RESISTOR 232K 1% .125W F TC=0+-100	24546	C4-1 /a-T0-2323-F
A3R80	0698-0585	9	1	RESISTOR 365K 1% .125W F TC=0+-25	28480	0698-0585
A3R81	0698-1078	5	1	RESISTOR 134K 1% .125W F TC=0+-100	28480	0698-1078
A3R82	0698-4516	0	1	RESISTOR 113K 1% .125W TC=0+-100	24546	C4-1/a-T0-I 133-F
A3R83	0698-4158	6	2	RESISTOR 100K 1% .125W F TC=0+-50	28480	0698-4158
A3R84	0698-6360	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A3R85	0698-4158	6		RESISTOR 100K 1% .125W F TC=0+-50	28480	0698-4158
A3R86	0698-6360	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A3R87	0698-4490	9	2	RESISTOR 29.4K 1% .125W F TC=0+-100	24546	C4-1/a-T0-2942-F
A3R88	0698-4490	9		RESISTOR 29.4K 1% .125W F TC=0+-100	24646	C4-1/8-T0-2942-F
A3R89	0698-0566	4	4	RESISTOR 25.5K 1% .125W F TC=0+-25	28480	0698-0566
A3R90	0698-0566	4	4	RESISTOR 25.5K 1% .125W F TC=0+-25	28480	0698-0566
A3R91	0757-0280	3	3	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1 /3T0-1001-F
A3R92	0698-7847	6		RESISTOR 1.111K 1% .125W F TC=0+-100	19701	MFA C1/a-TQ-1111 R-B
A3R93	0698-6360	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A3R94	0698-8638	5	2	RESISTOR 3.16K 1% .125W F TC=0+-25	28480	0698-8638
A3R95	0698-6445	8	3	RESISTOR 6.838K 1% .125W F TC=0+-25	28480	0698-6445
A3R96	0698-0586	8	1	RESISTOR 186.365K 1% .125W F TC=0+-25	28480	0698-0586
A3R97	0698-0585	7	1	RESISTOR 240.730K 1% .125W F TC=0+-25	28480	0698-0585
A3R98	0698-6467	4	3	RESISTOR 16.9K 1% .125W F TC=0+-50	28480	0698-6467
A3R99	0698-0587	9	2	RESISTOR 12.910K 1% .125W F TC=0+-25	28480	0698-0587
A3R100	0698-0588	0	2	RESISTOR 18.171K 1% .125W F TC=0+-25	28480	0698-0588
A3R102	2100-3883	9		RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	28480	2100-3883
A3R103	0698-6444	2	1	RESISTOR 21.62K 1% .125W F TC=0+-100	19701	0698-6444
A3R104	0698-6423	2	2	RESISTOR 31.25K 1% .125W F TC=0+-25	28480	0698-6423
A3R105	0698-0587	2		RESISTOR 17.4 25% .125W F TC=0+-100	19701	MC4C1/8-T0-1742-C
A3R106	0698-8858	1	3	RESISTOR 12.4K 1% .125W F TC=0+-25	28480	0698-8858
A3R107	0698-8858	1		RESISTOR 12.4K 1% .125W F TC=0+-25	28480	0698-8858
A3R108	0698-6625	5	1	RESISTOR 18.171K 1% .125W F TC=0+-50	1Q701	0698-6625
A3R109	0698-0588	5	1	RESISTOR 9.09K 1% .125W F TC=0+-50	19701	0698-0588
A3R110	0698-6360	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A3R111	0698-6467	4		RESISTOR 16.9K 1% .125W F TC=0+-50	28480	0698-6467
A3R112	0698-0566	4		RESISTOR 15.5K 1% .125W F TC=0+-25	28480	0698-0566
A3R113	0698-0566	4		RESISTOR 25.5K 1% .125W F TC=0+-25	28480	0698-0566
A3R114	0698-6445	8		RESISTOR 6.838K 1% .125W F TC=0+-25	28480	0698-6445
A3R115	0698-8638	5		RESISTOR 3.16K 1% .125W F TC=0+-25	28480	0698-8638
A3R116	0757-0289	2	1	RESISTOR 13.3K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-1332-F3
A3R117	0698-0589	1	2	RESISTOR 34.334K 1% .125W F TC=0+-25	28480	0698-0589
A3R118	0698-0589	1		RESISTOR 34.334K 1% .125W F TC=0+-25	28480	0698-0589
A3R119	0698-6360	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A3R120	0698-6360	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A3R121	0698-0588	0		RESISTOR 18.171K 1% .125W F TC=0+-25	28480	0698-0588

See introduction to this section for ordering information.

* Indicates factory selected value

Refrence Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3R122	0698-8858	5		RESISTOR 12.4K 1% .125W F TC=0+25	26480	0698-8858
A3R123	0699-0164	8	1	RESISTOR 736.5 1% .125W F TC=0+25	24546	NESS
A3R124	0757-029-J	5		RESISTOR 6.19K 1% .125W F TC=0+100	19701	MF4C1/8-T0-6191-F
A3R125	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+100	19701	MF4C1/8-T0-6191-F
A3R126	0698-6423	2		RESISTOR 31.25K .1% .125W F TC + -2	28400	098-6423
A3R127	0698-6754	2	1	RESISTOR 44.2K .5% .125W F TC=0+ -50	24546	NC4-1/8-T2-4422-D
A3R128	0698-4537	5	1	RESISTOR 357K 1% .125W F TC=0-100	26460	0698-4537
A3R129	0698-7585	9	1	RESISTOR 316.2 1% .125W F TC=0+25	26460	0698-7585
A3R132	2100-3883	9		RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	26480	2100-3883
A3R134	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+25	28480	0698-6360
A3R135	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+25	28480	0698-6360
A3R136	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+25	26480	0698-6360
A3R137	0699-0590	4	2	RESISTOR 15.758K .1% .125W F TC=0+25	28480	0699-0590
A3R138	0698-3456	5	1	RESISTOR 287K 1% .125W F TC=0+100	24546	C4-1/8-T0-2873-F
A3R139	0699-0596	0	2	RESISTOR 4.12K .1% .125W F TC=0+25	28480	0699-0596
A3R140	0699-0596	0		RESISTOR 4.12K .1% .125W F TC=0+25	26460	0699-0596
A3R141	0699-0594	8	2	RESISTOR 2.21K .1% .125W F TC=0+25	26460	0699-0596
A3R142	0699-0594	8		RESISTOR 2.21K .1% .125W F TC=0+25	26460	0699-0594
A3R143	0698-8337	1	1	RESISTOR 10.7K .1% .125W F TC=0+50	19701	MF4C1/8-T2-1072-B
A3R144	0698-8068	5	1	RESISTOR 4.99K .25% .125W F TC=0+25	19701	MF4C1/8-T9-4991-C
A3R145	0699-0597	1	3	RESISTOR 2.26K .1% .125W F TC=0+25	28460	0699-0597
A3R146	0698-6447	0	1	RESISTOR 683.8 .1% .125W F TC=0+25	26480	0698-6447
A3R147	0698-6446	9	1	RESISTOR 2.162K 1% .125M F TC=0+25	26480	0698-6446
A3R148	0699-0592	6	1	RESISTOR 7.741K .1% .125W F TC=0+25	28460	0699-0592
A3R149	06985360	6		RESISTOR 10K .1% .125W F TC=0+25	26460	0698-6360
A3R150	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+25	28480	0698-6360
A3R151	0699-0590	4		RESISTOR 15.758K .1% .125W F TC=0+25	28480	0699-0590
A3R158	0699-0597	1		RESISTOR 2.26K .1% .125W F TC=0+25	28480	0699-0597
A3R159	0699-0597	1		RESISTOR 2.26K .1% .125W F TC=0+25	28480	0699-0597
A3R160	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+25	26480	0698-6360
A3R161	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+25	26480	0698-6360
A3R162	0698-8799	9	1	RESISTOR 21.5K .1% .125W F TC=0+25	28480	0698-8799
A3R163	0699-0593	7	2	RESISTOR 13.665K .1% .125W F TC=0+25	28480	0699-0593
A3R164	0699-0593	7		RESISTOR 13.665K .1% .125W F TC=0+25	28480	0699-0593
A3R165	0699-0600	7	1	RESISTOR 108.502K .1% .125W F TC=0+25	28480	0699-0600
A3R166	0699-0591	5	1	RESISTOR 140.158K .1% .125W F TC=0+25	26480	0699-0591
A3R167	0757-0443	0	1	RESISTOR 11K 1% .125W F TC=0+100	24546	C4-1/8-T0-1102-F
A3R178	0698-7847	6		RESISTOR 1.111K .1% .125W F TC=0+25	19701	MF4 C1/8-T9-1111R-B
A3R179	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+25	28460	0698-6360
A3R180	2100-3883	9		RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	28480	2100-3883
A3R181	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+100	24546	C4-1/8-T0-1001-F
A3R182	0757-0421	4	1	RESISTOR 825 1% .125W F TC=0+100	24546	C4-1/8-T0-825R-F
A3R183	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+100	24546	C4-1/8-T0-1001-F
A3R184	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+100	24546	C4-1/8-T0-1003-F
A3R185	0757-0401	0		RESISTOR 100 1% .125W F TC=0+100	24546	C4-1/8-T0-101-F
A3R187	0698-6467	4		RESISTOR 16.9K 1% .125W F TC=0+50	28480	0698-6467
A3R201	0757-0458	7	2	RESISTOR 51.1K 1% .125W F TC=0+100	24546	C4-1/R-T0-51 12-F
A3R202	0757-0401	0		RESISTOR 100 1% .125W F TC=0+100	24546	C4-1/8-T0-101-F
A3R203	0757-0458	7		RESISTOR 51.1K 1% .125W F TC=0+100	24546	C4-1/8-T0-5112-F
A3R204	0757-0401	0		RESISTOR 100 1% .125W F TC=0+100	24546	C4-1/8-T0-101-F
A3R205	0698-4002	1	1	RESISTOR 5K .1% .125W F TC=0+100	24546	C4-1/8-T0-5001-F
A3R206	181 O-0369	4		NETWORK-RES 6-SIP OHM X5	11236	750-61-R100K
A3R207	0698-6445	8		RESISTOR 6.838K 1% .125W F TC=0+25	28480	0698-6445
A3R208	081 I-3587	5		WIRE 1/2 IN. RESISTOR 0 OHMS	03123	104
A3T1	91 W-3489	3	1	TRANSFORMER-WWER 100/120/220/240V	26460	91 W-3489
A3TP2	1251-6947	0	34	CONNECTR-SGL CONT PIN.025.IN+ SC-SZ SQ	28480	1251.6947
A3TP3	1251-6947	0		CONNECTR-SGL CONT PIN.025.IN-SSC-SZ SQ	28480	1251-6947
A3TP4	1251-6947	0		CONNECTR-SGL CONT PIN.025.IN-BSC-SZ SQ	28480	1251-6947
A3TP5	1251-6947	0		CONNECTR-SGL CONT PIN.025.IN-BSC-SZ SQ	28480	125 I-6947
A3TP6	1251-6947	0		CONNECTR-SGL CONT PIN.025.IN-BSC-SZ SQ	28480	1251-6947
A3TP7	1251-6947	0		CONNECTA-SGL CONT PIN.025.IN-BSC-SZ SQ	26460	1251.6947
A3TP9	1251-6947	0		CONNECTR-SGL CONT PIN.025.IN-BSC-SZ SQ	28480	1251-6947
A3TP10	12515947	0		CONNECTR-SGL CONT PIN.025.IN-BSC-SZ SQ	28480	1251-6947
A3TP11	1251-6947	0		CONNECTR-SGL CONT PIN.025.IN-BSC-SZ SQ	28480	1251-6947
A3TP12	1251-6947	0		CONNECTR-SGL CONT PIN.025.IN-BSC-SZ SQ	28480	1251-6947
A3TP13	125 I-6947	0		CONNECTR-SGL CONT PIN.025.IN-BSC-SZ SQ	26480	1251-6947
A3TP14	1251.6947	0		CONNECTR-SGL CONT PIN.025.IN-BSC-SZ SQ	28460	1251-6947
A3TP15	1251-6947	0		CONNECTR-SGL CONT PIN.025.IN-BSC-SZ SQ	26480	1251.6947
A3TP21	1251-6947	0		CONNECTA-SGL CONT PIN.025.IN-BSC-SZ SQ	28460	1251.6947
A3TP22	1251-6947	0		CONNECTR-SGL CONT PIN.025.IN-BSC-SZ SQ	28480	1251.6947
A3TP23	1251-6947	0		CONNECTR-SGL CONT PIN.025.IN-BSC-SZ SQ	26480	125 I-6947
A3TP24	1251-6947	0		CONNECTR-SGL CONT PIN.025.IN-BSC-SZ SQ	26480	1251-6947
A3TP25	1251-6947	0		CONNECTR-SGL CONT PIN.025.IN-BSC-SZ SQ	28480	1251-6947

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	C	Qty	Description	Mfr Code	Mfr Part Number
A3U1	1826-0712	4	4	IC OP AMP LOW-BIAS-H-IMPED DUAL 8-DIP-P	27014	LF353N
A3U2	1826-0138	8	1	IC COMPARATOR GP QUAD 14-DIP-P PKG	01295	LM339N
A3U3	1826-0624	7	1	IC CONV V/FREQ 14-DIP-P PKG	8E175	VFC32KP
A3U4	1826-1071	0	2	IC OP AMP	28480	1826-1071
A3U5	1826-0742	0	1	IC PRECISION 10V REFERENCE, AD581J	28480	1826-0742
A3U6	1826-0639	4	1	IC CONV 8-E-D/A 16DIP-P PKG	24355	AD7524JN
A3U7	1820-1956	8	4	IC LCH CMOS COM CLOCK QUAD	0192B	CD4042BE
A3U8	1820-1956	8	1	IC LCH CMOS COM CLOCK QUAD	0192B	CD4042BE
A3U11	1820-1956	8	1	IC LCH CMOS COM CLOCK QUAD	0192B	CD4042BE
A3U12	1820-2326	3	1	IC XLTR CMOS TIL-TO-MOS HEX	04713	MC14504BCP
A3U13	182-J-1315	3	1	IC MULTIPLXR 8-CHAN-ANLG 16-DIP-P PKG	0192B	CD4051RE
A3U14	1826-1544	8	7	IC OP AMP GP O-DIP-P PKG	27014	MC34081P
A3U15	1826-0667	4	5	IC OP AMP LOW-BIAS-H-IMPED 8-DIP-P PKG	27014	LF351N
A3U16	1826-0712	8	1	IC OP AMP LOW-BIAS-H-IMPED DUAL S-DIP-P	27014	LF353N
A3U17	lea-1956	9	1	IC LCH CMOS COM CLOCK QUAD	0192B	CD4042BE
A3U20	1826-1071	0	1	IC OP AMP	28480	1826-1071
A3U21	1826-0735	1	8	IC OP AMP H-SLEW-RATE E-DIP-P PKG	34371	HA3-2507-5
A3U22	1826-0735	1	1	IC OP AMP H-SLEW-RATE O-DIP-P PKG	34371	HA3-2507-5
A3U23	1826-0735	1	1	IC OP AMP H-SLEW-RATE E-DIP-P PKG	34371	HA3-2507-5
A3U24	1826-0735	1	1	IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A3U25	1826-0735	1	1	IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A3U26	1826-0208	3	3	IC OP AMP GP S-DIP-P PKG	27014	LM310N
A3U27	1826-0740	8	4	IC SWITCH ANLG DUAL 16-DIP-C PKG	32293	IH504CDE
A3U28	1826-0208	3	1	IC OP AMP GP 8-DIP-P PKG	27014	LM310N
A3U29	1826-1544	3	1	IC OP AMP GP E-DIP-P PKG	27014	MC34081 P
A3U30	1826-0735	1	1	IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A3U31	1826-0665	6	2	IC OP AMP LOW-BIAS-H-IMPED QUAD 14-DIP	27014	LF347BN
A3U32	1826-0712	4	1	IC OP AMP LOW-BIAS-H-IMPED DUAL 8-DIP	27014	LM310N
A3U33	1826-0208	3	1	IC OP AMP GP 8-DIP-P PKG	27014	LF353N
A3U34	1826-0740	8	1	IC SWITCH ANLG DUAL 16-DIP-C PKG	32293	IH5043CDE
A3U35	1826-0740	8	1	IC SWITCH ANLG DUAL 16-DIP-C PKG	32293	IH5043CDE
A3U36	1826-0665	6	1	IC OP AMP LOW-BIAS-H-IMP QUAD 14-DIP-P	27014	LF347BN
A3U37	1820-1725	9	2	IC MULTIPLXR ANLG 16-DIP-P PKG	17856	DG508CJ
A3U38	1820-0735	1	1	IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A3U39	1820-1725	9	1	IC MULTIPLXR ANLG 16-DIP-P PKG	17856	DG508CJ
A3U40	1826-0753	3	2	IC OP AMP LOW-BIAS, HIGH IMPED	02037	SC77968L1
A3U42	1826-0736	2	1	IC OP AMP WB 8-DIP-P PKG	34371	HA3-2627-5
A3U43	1826-0667	8	1	IC OP AMP LOW-BIAS-H-IMPED 8-DIP-P PKG	27014	LF351N
A3U44	1826-0667	8	1	IC OP AMP LOW-BIAS-H-IMPED O-DIP-P PKG	27014	LF351N
A3U45	1826-0667	8	1	IC OP AMP LOW-BIAS-H-IMPED S-DIP-P PKG	27014	LF351N
A3U46	1826-0712	4	1	IC OP AMP LOW-BIAS-H-IMPED DUAL 8-DIP P	27014	LF353N
A3U47	1826-1422	5	1	IC OP AMP WE QUAD 14-DIP-P PKG	02037	MC34084P
A3U48	1826-1544	3	1	IC OP AMP GP 8-DIP-P PKG	27014	MC34081 P
A3U50	1826-0740	8	1	IC SWITCH ANLG DUAL 16.DIP-C PKG	32293	IH5043CDE
A3U51	1826-0753	8	1	IC OP AMP LOW-BIAS-H-IMPED	27014	SC77968L1
A3U52	1826-1544	3	1	IC OP AMP GP 8-DIP PKG	27014	MC34081P
A3U55	1826-0735	1	1	IC OP AMP H-SLEW-RATE B-DIP-P PKG	34371	HA3-2507-5
A3U56	1826-0667	8	1	IC OP AMP LOW-BIAS-H-IMPED 8-DIP-P PKG	27014	LF351N
A3UX7	1200-0607	8	1	SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A3UX8	1200-0607	8	1	SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A3UX17	1200-0607	8	1	SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A3 MISCELLANEOUS PARTS						
	2260-0002	6	2	NUT-HEX-DBL.CHAM 4-40-THD .062-IN-THK	00000	ORDR BY DSCRPTN
	2260-0008	8	2	NUT-HEX-W /LKWR 4-40-THD .094-IN-THK	00000	ORDR BY DSCRPTN
	8150-0456	7	1	WIRE 24AWG W 300B PVC 7X32 80C	28480	8150-0456
	0380-1157	6	2	SNAP IN SPACER	00509	TCBS-4N

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	⊘	Qty	Description	Mfr Code	Mfr Part Number
A4 - TRANSMITTER BOARD (Std Units only)						
A4	04935-60031	2	1	TRANSMITTER BOARD (STD UNIT ONLY)	29480	04935-60031
A4C1	0160-3815	0	3	CAPACITOR-FXD .15UF +5% 50VDC MET-POLY	20480	0160-3815
A4C2	0160-3815	0		CAPACITOR-FXD .15UF +5% 50VDC MET-POLY	28480	0160-3815
A4C3	0160-3815	0		CAPACITOR-FXD .15UF +5% 50VDC MET-POLY	28480	0160-3815
A4C4	0160-6623	5	28	CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C5	01804045	1	2	CAPACITOR-FXD 2200UF +50-10% 25VDC AL	28480	0180-3045
A4C6	0180-4017	8	2	CAPACITOR-FXD 100UF +50.10% 35VDC AL	28480	0180-4017
A4C7	01 W-8823	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0180-6623
A4C8	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C9	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C10	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C11	0180-3045	1		CAPACITOR-FXD 2200UF +50-10% 25VDC AL	28480	01 So-3045
A4C12	0180-4017	8		CAPACITOR-FXD 100UF +50.10% 35VDC AL	28480	0180-4017
A4C13	0160-3456	9	2	CAPACITOR-FXD 1000PF +10% 1KVDC CER	28480	01804458
A4C14	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C15	0180-3044	0	1	CAPACITOR-FXD 3300UF +50-10% 16VDC AL	28480	0180-3044
A4C16	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C17	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C20	0160-3456	9		CAPACITOR-FXD 1000UF +10% 1KVDC CER	28480	0160-3456
A4C21	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C22	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C23	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C24	0160-4891	3	1	CAPACITOR-FXD 10PF +5% 50VDC CER	28480	0180-4791
A4C25	0180-4807	5	2	CAPACITOR-FXD 33PF +5% 50VDC CER	28480	0180-4807
A4C26	0160-4807	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-4807
A4C28	0160-6623	5		CAPACITOR-FXD .1UF +0% 50VDC CER	28480	0160-6623
A4C29	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C30	01804323	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0180-6623
A4C31	0180-3050	8	1	CAPACITOR-FXD 330UF +50-10% 16VDC AL	28480	0180-3050
A4C32	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C33	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0180.8823
A4C34	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C35	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0180.8823
A4C36	0180-0058	0	1	CAPACITOR-FXD 50UF +75-10% 25VDC AL	58289	30D508G025CC2
A4C40	0160-3094	2	1	CAPACITOR-FXD 1UF +10% 25VDC CER	28480	0160-3094
A4C41	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C42	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C43	0160-7099	7	2	CAPACITOR-FXD 1200PF +1% 100VDC MICA	28480	0180-7099
A4C44	0160-7099	7		CAPACITOR-FXD 1200PF +1% 100VDC MICA	28480	0180-7099
A4C45	0180.8823	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C46	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C52	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C53	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-6623
A4C55	0180-0127	2	2	CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0180-0127
A4C56	0180-3124	7	1	CAPACITOR-FXD 300N.P.	28480	0180-3124
A4C62	0180-0197	8	2	CAPACITOR-FXD 2.2UF +10% 20VDC TA	56289	150D225X9020A2
A4C63	0180-0197	8		CAPACITOR-FXD 2.2UF +10% 20VDC TA	56289	150D225X9020A2
A4C64	0160-6623	5		CAPACITOR-FXD .1UF .020% 50VDC CER	28480	0180.8823
A4C65	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0180.8823
A4C67	0160-6623	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0180-8823
A4C70	0180-0127	2		CAPACITOR-FXD .1UF +20% 25VDC CER	28480	0160-0127
A4C71	01804374	3	1	CAPACITOR-FXD 10UF +10% 20VDC TA	58289	150D106X9020B2
A X 7 2	0180-1746	5	1	CAPACITOR-FXD .15UF +10VDC TAR	56289	150D156X9020B2-DYS
A4C73	0180-4833	5	1	CAPACITOR-FXD .022UF +20% 100VDC CER	28480	0160-4833
A4C74	0180.4835	7	1	CAPACITOR-FXD .1UF +10% 50VDC CER	28480	0160-4835
A4C75	1080-0291	3	1	CAPACITOR-FXD 1UF +10% 35VDC CER	28480	0180-0291
A4C76	0160-6500	3	32	CAPACITOR-FXD .01UF +10% 50VDC CER	28480	0160-6500
A4C77	0160-6500	3		CAPACITOR-FXD .01UF +10% 50VDC CER	28480	0160-6500
A4C78	0160-6500	3		CAPACITOR-FXD .01UF +10% 50VDC CER	28480	0160-6500
A4C79	0160-6500	3		CAPACITOR-FXD .01UF +10% 50VDC CER	28480	0160-6500
A4C80	0160-6500	3		CAPACITOR-FXD .01UF +10% 50VDC CER	28480	0160-6500
A4C81	0160-6500	3		CAPACITOR-FXD .01UF +10% 50VDC CER	28480	0160-6500
A4C82	0160-6500	3		CAPACITOR-FXD .01UF +10% 50VDC CER	28480	0160-6500
A4C83	0160-6500	3		CAPACITOR-FXD .01UF +10% 50VDC CER	28480	0160-6500
A4C84	0180-6500	3		CAPACITOR-FXD .01UF +10% 50VDC CER	28480	0160-6500
A4C85	0160-6500	3		CAPACITOR-FXD .01UF +10% 50VDC CER	2.9480	0160-6500
A4C86	0160-6500	3		CAPACITOR-FXD .01UF +10% 50VDC CER	28480	0160-6500
A4C87	0160-6500	3		CAPACITOR-FXD .01UF +10% 50VDC CER	28480	0160-6500
A4C88	0160-6500	3		CAPACITOR-FXD .01UF +10% 50VDC CER	28480	0160-6500

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	⊘	Qty	Description	Mfr Code	Mfr Part Number
A4C89	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A4C90	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A4C91	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A4C92	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A4C93	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A4C94	01606500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A4C95	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28489	0160-6500
A4C96	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A4C97	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A4C98	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	26480	0160-6500
A4C99	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A4C100	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A4C101	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A4C102	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A4C103	01606500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A4C104	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A4C105	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28486	0160-6500
A4C106	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28483	0160-6500
A4C107	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28489	0160-6500
A4C109	01606623	3		CAPACITOR-FXD .1UF +-20% 50VDC CER	28486	01606623
A4CP1	125 I-6047	0	28	CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	26480	125 I-6947
A4CR1	1902-0041	4	1	DIODE-ZNR 5.1 IV 5% DC-35 PD=.4W	28480	1902-0041
A4CR4	1901-0033	2	7	DIODE-GEN PRP 180V 200MA DO-7	28480	1902-0033
A4CR6	1901-0731	7	9	DIODE-PWR RECT 400V 1A	28480	1901-0731
A4CR7	1902-1399	6	3	DIODE-ZNR 18.0V 2% PD = .4W	02037	INS248
A4CR9	1901-0731	7		DIODE-PWR RECT 4WV 1A	28480	1901-0731
A4CR10	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A4CR11	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	190-0731
A4CR12	1901-0731	7		DIODE-FWR RECT 400V 1A	28480	1901-0731
A4CR13	1901-0033	2		DIODE-GEN PRP 180V 200MA Do-7	28480	1901-0033
A4CR14	1901-0033	2		DIODE-GEN PRP 180V 200MA W7	28480	1901-0033
A4CR15	1902.1399	7		DIODE-ZNR 18.0V 2% PD = .4W	02037	INS248
A4CR16	1901-0731	7		DIODE-PWR RECT 4WV 1A	28480	1901-0731
A4CR17	1901-0731	7		DIODE-PWR RECT 4WV 1A	28466	1901-0731
A4CR18	1901-0731	7		DIODE-PWR RECT 4WV 1A	28480	1901-0731
A4CR19	1901-0033	2		DIODE-GEN PRP 180V 200MA W-7	28480	1901-0033
A4CR20	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A4CR23	1902-1399	7		DIODE-ZNR 18.0V 2% PD=.4W	02037	INS248
A4CR24	1884-0250	7	1	THYRISTOR-TRIAC TO-220AB	0192B	T2500B
A4CR25	1902-0052	7	1	DIODE-ZNR 6.81V 2% PD = .4W	02037	0016-1135
A4CR26	190-0731	7		DIODE-PWR RECT 4WV 1A	28480	1901-0731
A4CR27	1901-0033	2		DIODE-GEN PRP 180V 200MA DC-7	26480	1901-0033
A4CR28	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A4CR29	1901-0202	9	2	DIODE-ZNR 15V 5% W-I 5 PD = 1W TC = -.057%	28480	1901-0202
A4CR30	1902-0202	9		DIODE-ZNR 15V 5% W-I 5 PD=1W TC+-.57%	28480	1902-0202
A4CSA1	12516947	0	28	CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	26480	1251-6947
A4CSA2	12516947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28486	1251-6947
A4J2	12516656	0	1	CONNECTOR 18-PIN M POST TYPE	28480	12516656
A4J3	125 I-4573	4	1	CONNECTOR-PC EDGE 25-CONT/ROW 2-ROWS	28480	1251-4573
A4JU1	1251.6947	0		CONNECTOR-SGL CONT PIN .025IN BSC-SZSQ	28480	1251-6947
A4JU2	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN BSC-SZSQ	28486	1251-6947
A4JU5	1258-0141	5	5	JUMPER-REMOVABLE FOR .025IN SQ PINS	28460	1258-0141
A4JU5	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN BSC-SZSQ	28480	12516947
A4JU5	1258-0141	5		JUMPER-REMOVABLE FOR .025IN SC PINS	28483	1258-0141
A4JU6	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN BSC-SZSQ	28480	1251-6947
A4JU6	1258-0141	5		JUMPER-REMOVABLE FOR .025IN SQ PINS	28480	1258-0141
A4JU14	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN BSC-SZSQ	28480	1251-6947
A4JU14	1258-0141	5		JUMPER-REMOVABLE FOR .025IN SQ PINS	28480	1258-0141
A4JU-14	12516947	0		CONNECTOR-SGL CONT PIN .025IN BSC-SZSQ	28480	1251-6947
A4JU-14	1258-0141	5		JUMPER-REMOVABLE FOR .025IN SQ PINS	28480	12560141
A4JW1	081 I-3587	5	3	RESISTOR 0 OHMS	03123	104
A4JW2	061 I-3667	5		RESISTOR 0 OHMS	03123	104
A4JW3	081 I-3587	5		RESISTOR 0 OHMS	03123	104
A4JW4	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A4Q1	1853-0512	9	3	TRANSISTOR PNP PD=50W FT = 20MHZ	28480	1853-0512
A4Q2	1854-0575	6	1	TRANSISTOR NPN S1 PD = 825MW FT = 50MHZ	04713	MPS-A42
A4Q3	1853-0512	9		TRANSISTOR PNP PD=50W FT = 20MHZ	28480	1853-0512
A4Q4	1853-0512	9		TRANSISTOR PNP PD = 50W FT = 20MHZ	28480	1853-0512
A4Q5	1853-0012	4	1	TRANSISTOR PNP SI TO-39 PD = 600MW	01295	2N2904A
A4Q6	1854-0053	5	1	TRANSISTOR NPN 2N2218 SI TO-5 PD = 800MW	04713	2N2218
A4Q7	1853-0036	2	1	TRANSISTOR PNP SI PD-310MW FT-250MHZ	28480	1853-0036

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	Q	Qty	Description	Mfr Code	Mfr Part Number
A4R1	0757-0465	6	6	RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A4R2	0698-6360	6	2	RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A4R3	0757-0819	4	1	RESISTOR 909 1% .5W F TC=0+-100	28480	0757-0819
A4R4	0757-0442	9	19	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R5	0698-8827	4	5	RESISTOR 1M 1% .125W F TC=0+-100	26480	0698-8827
A4R6	0698-8826	3	3	RESISTOR 825K 1% .125W F TC=0+-100	28480	0698-8826
A4R7	0698-8826	3		RESISTOR 825K 1% .125W F TC=0+-100	28480	0698-8826
A4R8	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A4R9	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A4R10	0698-8826	3		RESISTOR 825K 1% .125W F TC=0+-100	28460	0698-8826
A4R11	0698-8824	1	1	RESISTOR 562K 1% .125W F TC=0+-100	28460	0698-8824
A4R12	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R13	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24548	C4-1/8-T0-1003-F
A4R14	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A4R15	0698-3440	7	2	RESISTOR 196 1% .125W F TC=0+-100	24546	C4-1/8-T0-196R-F
A4R16	0698-3440	7		RESISTOR 196 1% .125W F TC=0+-100	24546	C4-1/8-T0-196R-F
A4R17	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A4R19	0757-0280	3	3	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A4R20	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R21	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R22	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R23	0757-0288	1	1	RESISTOR 9.09K 1% .125W F TC=0+-100	15701	MFR C1/8-T0-9091-F
A4R24	0757-0420	3	4	RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A4R25	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A4R27	0698-0083	8	2	RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1961-F
A4R28	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A4R29	1810-0207	9	1	NETWORK-RES 8-SIP 22.0K OHM X 7	01121	208A223
A4R30	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A4R31	2100-3882	a	2	RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRN	28480	2100-3882
A4R33	0757-0416	7	1	RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-T0-511R-F
A4R34	0698-0083	8		RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1961-F
A4R35	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R36	0757-0394	0	2	RESISTORS 51.5 1% .125W F TC=0+-100	02995	5033R
A4R37	0757-0317	7	1	RESISTOR 1.33K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1331-F
A4R38	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A4R39	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A4R40	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A4R41	0757-0280	3	3	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A4R42	2100-3881	7	2	RESISTOR-TRMR 500 10% C TOP-ADJ 17-TRN	28480	2100-3881
A4R43	0757-0438	3	2	RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0=5111-F
A4R44	0757-0438	3		RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0=5111-F
A4R45	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0=1002-F
A4R46	0757-0458	2	3	RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0=5112-F
A4R47	0698-3156	7	1	RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F
A4R48	0698-3152	8	1	RESISTOR 3.48K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3481-F
A4R49	0757-0458	7		RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5112-F
A4R52	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R53	0698-3160	9	5	RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A4R54	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R55	0698-3160	8		RESISTOR 31.6K 1% .125W TC=0+-100	24546	C4-1/8-T0-3162-F
A4R56	0757-0280	3		RESISTOR 1K 1% .125W TC=0+-100	24546	C4-1/8-T0-1001-F
A4R57	0757-0458	7		RESISTOR 51.1K 1% .125W TC=0+-100	24548	C4-1/8-T0-5112-F
A4R58	0698-3451	0	1	RESISTOR 133K 1% .125W TC=0+-100	24546	C4-1/8-T0-1333-F
A4R59	0757-0442	9		RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R60	0757-0442	9		RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R61	0698-3160	8		RESISTOR 31.6K 1% .125W TC=0+-100	24546	C4-1/8-T0-3162-F
A4R62	0698-3160	8		RESISTOR 31.6K 1% .125W TC=0+-100	24546	C4-1/8-T0-3162-F
A4R63	0757-0442	9		RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R64	0698-3160	8		RESISTOR 31.6K 1% .125W TC=0+-100	24546	C4-1/8-T0-3162-F
A4R65	0757-0421	4	1	RESISTOR 825 1% .125W TC=0+-100	24548	C4-1/8-T0-825R-F
A4R66	0757-0442	9		RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R67	0757-0443	0	1	RESISTOR 11K 1% .125W TC=0+-100	24546	C4-1/8-T0-1102-F
A4R68	0757-0441	8	1	RESISTOR 8.25K 1% .125W TC=0+-100	24546	C4-1/8-T0-8251-F
A4R69	0757-04 19	0	1	RESISTOR 681 1% .125W TC=0+-100	03293	C4-1/8-T0-681R-F
A4R70	0757-0422	5	1	RESISTOR 909 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R71	0757-0442	9		RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R72	2100-3881	7		RESISTOR-TRMR 500 10% C TOP-ADJ 17-TRN	28480	2100-3881
A4R73	0757-0279	0	2	RESISTOR 3.16K 1% .125W TC=0+-100	24546	C4-1/8-T0-3161-F
A4R74	2100-3882	7		RESISTOR TRMR 2K 10% C TOP-ADJ 17-TRN	28480	21 W-3882
A4R75	0757-0422	9		RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R76	0757-0442	9		RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R77	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R78	0757-0180	2	2	RESISTOR 31.6K 1% .125W TC=0+-100	28480	0757.0180

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	C	Qty	Description	Mfr. Code	Mfr Part Number
A4R79	0757-0180	2		RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180
A4R80	0757-0428	1	2	RESISTOR 1.62K 1% .125W	02995	MF4C-1
A4R81	0757-0431	6	1	RESISTOR 2.43K 1% .125W	02995	MF4C-1
A4R82	0698-0084	9	1	RESISTOR 2.5k 1% .125W F TC=0+-100	24546	C4-1/8-TO-2151-F
A4R83	0698-6393	1	1	RESISTOR585 1% .125W F TC=0+ 100	02995	5033R
A4R92	0757-0279	0		RESISTOR 31.6 1% .125W F TC=0+-100	24546	C4-1/8-10-3161-F
A4R93	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A4R94	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-10-1002-F
A4R95	0757-0394	0	1	RESISTOR 51.1 1% .125W F TC=0+-100	24546	C4-1/8-TO-51R1-F
A4R96	0757-0442	9		RESISTOR 10K 1% .125W TC=0+-25	24546	C4-1 /&TO-1002-F
A4R97	0698-3150	0	1	RESISTOR 2.37K 1% .125W	02995	MF4C-1
A4R98	0757-0280	3		RESISTOR 1K 1% .125W	02273	CEA-9937
A4R99	0698-3157	0	1	RESISTOR 19.6K 1% .125W	02273	CEA-993
A4R100	0757-0428	1		RESISTOR 1.62K 1% .125W	02995	MF4C-1
A4R103	0757-0280	3		RESISTOR 1K 1% .125W	02273	CEA-9937
A4R104	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	26480	0698-8827
A4R201	0811-3587	5	3	RESISTOR 0 OHMS	03123	104
A4R202	0811-3587	5	3	RESISTOR 0 OHMS (FOR FURTHER USE)	03123	104
A4R203	0811-3587	5	3	RESISTOR 0 OHMS	03123	104
A4R204	0811-3587	5	3	RESISTOR 0 OHMS (FOR FURTHER USE)	03123	104
A4S/S	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SO	26460	1251-6947
A4T1	9100-2647	8	1	TRANSFORMER, AUDIO	26480	9100-2647
A4TP1	0360-0535	0	3	TEST PIN.025-IN-BSC-SZ SO	28480	0360-0535
A4TP2	0360-0535	0		TEST PIN.025-IN-BSC-SZ SQ	28480	0360-0535
A4TP3	0360-0535	0		TEST PIN.025-IN-BSC-SZ SQ	28480	0360-0535
A4TP4	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-ESC-SZ SQ	28480	1251-6947
A4TP5	1251-6947	0		CONNECTR-SGL CONT PIN.025IN-ESC-SZ SQ	28480	1251-6947
A4TP6	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SO	28480	1251-6947
A4TP7	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	2.3460	1251-6947
A4TP8	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28460	1251-6947
A4TP9	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	284.30	1251-6947
A4TP10	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A4TP11	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SO	28480	1251-6947
A4U1	1826-0679	2	1	IC OP AMP LOW-BIAS-H-IMPD TO-99 PKG	01928	CA3140AT
A4U2	1820-1932	0	2	IC MV CMOS MONOSTBL RETRIG/RESET DUAL	04713	MC14538BCP
A4U3	1820-1932	0		IC MV CMOS MONOSTEL RETRIG/RESET DUAL	04713	MC14538BCP
A4U4	1820-0939	5	3	IC FF CMOS D-TYPE POS-EDGE-TRIG DUAL	01928	CD401 3AF
A4U5	1820-0939	5		IC FF CMOS D-TYPE POS-EDGE-TRIG DUAL	01928	CD401 3AF
A4U6	1820-2472	5	1	MICROPROCESSOR MK3872	28480	1820-2472
A4U7	820-1 827	2	1	IC DCDR CMOS 4-TO-16-LINE	27014	MM74C154N
A4U8	1826-0728	2	2	IC PRECISION GEN. PURPOSE VOLT REG.	26480	1826-0728
A4U9	1826-0411	0	2	IC TIMER CMOS	04713	MC4536BCP
A4U10	1826-0411	0		IC TIMER CMOS	04713	MC14536BCP
A4U11	1820-1956	8	7	IC LCH CMOS COM CLOCK QUAD	01928	CD4042BE
A4U12	1820-1956	8		IC LCH CMOS COM CLOCK QUAD	01928	CD4042BE
A4U13	1820-2566	8	1	IC BFR CMOS LINE DRVR QUAD	27014	MM74C240N
A4U14	1826-0728	2		IC PRECISION GEN. PURPOSE VOLT. REG.	26480	1826-0728
A4U15	1820-1745	3	1	IC GATE CMOS NOR QUAD 2-INP	04713	MC14001BCP
A4U16	1820-2576	0	3	IC GATE CMOS NAND QUAD 2-INP	04713	MC14011BCL
A4U17	1820-2576	0		IC GATE CMOS NAND QUAD 2-INP	04713	MC14011BCL
A4U18	1820-0939	5		IC FF CMOS D-TYPE POS-EDGE-TRIG DUAL	01920	CD4013AF
A4U19	1820-2576	0		IC GATE CMOS NAND QUAD 2-INP	04713	MC14011BCL
A4U20	1820-1960	4	1	IC GATE CMOS NAND DUAL 4-INP	04713	MC14012BCP
A4U21	1826-0667	8	1	IC OP AMP LOW-BIAS-H-IMPD 8-DIP-P PKG	27014	LF351N
A4U23	1820-3008	3	1	IC OSC ECL	04713	MM74HC04N
A4U24	1826-0712	4	1	IC OP AMP LOW-BIAS-H-IMPD DUAL 8-DIP-P	27014	MC353N
A4U25	1826-0138	8	1	IC COMPARATOR GP QUAD 14-DIP-P PKG	01295	LM339N
A4U26	1820-1956	8		IC LCH CMOS COM CLOCK QUAD	01928	CD4042BE
A4U27	1820-1956	8		IC LCH CMOS COM CLOCK QUAD	01928	CD4042BE
A4U28	1820-1956	8		IC LCH CMOS COM CLOCK QUAD	01928	CD4042BE
A4U29	1820-1956	8		IC LCH CMOS COM CLOCK QUAD	01928	CD4042BE
A4U30	1820-1956	8		IC LCH CMOS COM CLOCK QUAD	01928	CD4042BE
A4U32	1820-1478	0	1	IC CNTR ASYNCHRO	01698	SN57246N
A4U33	1826-0508	6	1	IC CONV 10-B-D/A 16-DIP-C PKG	24355	AD561JD
A4U34	1820-1441	6	5	IC ADDR TTL LS BIN FULL ADDR 4-BIT	01295	SN74LS283N
A4U35	1820-1441	6		IC ADDR TTL LS BIN FULL ADDR 4-BIT	01295	SN74LS283N
A4U36	1820-1441	6		IC ADDR TTL LS BIN FULL ADDR 4-BIT	01295	SN74LS283N
A4U37	1820-1441	6		IC ADDR TTL LS BIN FULL ADDR 4-BIT	01295	SN74LS283N
A4U38	1820-1441	6	1	IC ADDR TTL LS BIN FULL ADDR 4-BIT	01295	SN74LS283N
A4U40	1826-0779	3	1	IC MULTIPLEXR 4-CHAN-ANGL DUAL 16-DIP-P	24355	AD7502JN
A4U41	1826-0735	1	3	IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	⊗	Qty	Description	Mfr Code	Mfr Part Number
A4U42	1826-1071	0	1	IC OP AMP	28480	1826-1071
A4U43	1818-1574	1	1	IC NMOS 32768 (32K) ROM 450-NS 3-S	55576	SYP2332 MASKED
A4U44	1820-1730	6	3	IC FF TTL LSD-TYPE WS-EDGE-TRIG COM	01295	SN74LS273N
A4U45	1820-1195	7	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74SL175N
A4U46	1820-1730	6		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS273N
A4U47	1820-1730	6		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS273N
A4U48	1820-1112	8	2	IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A4U49	1820-1199	1	1	IC INV TTL LS HEX I-INP	01295	SN74LS04N
A4U50	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A4U52	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A4U53	1826-0735	1		IC OP AMP H-SLEW-PATE 8-DIP-P PKG	34371	HA3-2507-5
A4XU6	1 m-0654	4	1	SOCKET-IC 40-CONT DIP-SLDR	26460	1200-0654
A4XU32	1200-0638	1	1	SOCKET-IC 14 PIN	28480	1200-0638
A4Y1	0410-1180	0	1	CRYSTAL-4.000MHZ	26480	0410-1180
A4Y3	0410-1327	9	1	CRYSTAL-4.1984304MHZ	28480	0410-1327
				A4 MISCELLANEOUS PARTS		
	0360-0124	3	13	CONNECTOR-SGL CONT PIN .04IN-RSCSZ RND	28480	0360-0124
	1200-0666	1	3	SOCKET-XSTR 3-CONT POWER DIP-SLDR	28480	1200-0666
	1251-4259	3	5	CONNECTOR-SGL CONT PIN .031-IN-BSC-SZ	28480	1251-4259
	1251-5063	9	1	CONNECTOR 6-PINMPOST TYPE	28480	1251-5063

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	Q	Qty	Description	Mfr Code	Mfr Part Number
A5 - BATTERY CHARGER BOARD (Opts 001 & 003)						
A5	04935-60029	5	1	BATTERY CHARGER BOARD (OPTS 001 & 003)	28480	04935-60029
A5C1	0180-0291	3	1	CAPACITOR-FXD 1UF +-10% 35VDC TA	56289	150D105X9035A2
A5C2	0180-1746	5	1	CAPACITOR-FXD 15UF +-10% 20VDC TA	56289	150D156X9020B2
A5C3	0180-0097	7	1	CAPACITOR-FXD 47UF +-10% 35VDC TA	56289	150D476X9035S2
A5C4	0160-0576	5	5	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A5C5	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A5C6	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A5C7	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A5C8	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A5CR1	1901-0050	3	19	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR2	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR3	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR4	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR5	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR6	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR10	1901-1091	4	3	DIODE-PWR RECT 50V 5A 200NS	03508	A115F
A5CR12	1902-0041	4	1	DIODE-ZNR 5.11V 5% DO-35 PD = 4W	28480	1902-0041
A5CR14	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR15	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR16	1902-0554	4	1	DIODE-ZNR 10V 5% DO-15 PD = 1W TC = +.06%	28480	1902-0554
A5CR17	1902-0184	6	2	DIODE-ZNR 16.2V 5% DO-35 PD = 4W	28480	1902-0184
A5CR18	1902-0184	6		DIODE-ZNR 16.2V 5% DO-35 PD = 4W	28480	1902-0184
A5CR19	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR20	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR21	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR22	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR23	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR24	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR25	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR26	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR27	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR28	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR29	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A5CR30	1901-1091	4		DIODE-PWR RECT 50V 5A 200NS	03508	A115F
A5CR31	1901-1091	4		DIODE-PWR RECT 50V 5A 200NS	03508	A115F
A5F1	2110-0712	2	3	FUSE 4A 125V .281X.093	75915	2110-0712
A5F2	2110-0712	2		FUSE 4A 125V .281X.093	75915	2110-0712
A5F3	2110-0712	2		FUSE 4A 125V .281X.093	75915	2110-0712
A5J2	1251-4245	7	2	CONNECTOR 2-PIN M POST TYPE	28480	1251-4245
A5J3	1251-4245	7		CONNECTOR 2-PIN M POST TYPE	28480	1251-4245
A5J4	1251-4246	8	1	CONNECTOR 3-PIN M POST TYPE	28480	1251-4246
A5K1	0490-0569	5	1	RELAY 4C 24VDC-COIL 2A 115VAC	28480	0490-0569
A5Q1	1853-0406	0	2	TRANSISTOR PNP 2N6476 SI TO-220AB	0192B	2N6476
A5Q2	1854-0575	6	1	TRANSISTOR NPN SI PD = 625MW FT = 50MHZ	04713	MPS-A42
A5Q3	1853-0036	2	5	TRANSISTOR PNP SI PD = 310MW FT = 250MHZ	28480	1853-0036
A5Q4	1854-0215	1	4	TRANSISTOR NPN SI PD = 350MW FT = 300MHZ	04713	2N3904
A4Q5	1853-0036	2		TRANSISTOR PNP SI PD = 310MW FT = 250MHZ	28480	1853-0036
A5Q8	1853-0036	2		TRANSISTOR PNP SI PD = 310MW FT = 250MHZ	28480	1853-0036
A5Q9	1853-0036	2		TRANSISTOR PNP SI PD = 310MW FT = 250MHZ	28480	1853-0036
A5Q10	1854-0215	1		TRANSISTOR NPN SI PD = 350MW FT = 300MHZ	04713	2N3904
A5Q11	1854-0215	1		TRANSISTOR NPN SI PD = 350MW FT = 300MHZ	04713	2N3904
A5Q12	1854-0215	1		TRANSISTOR NPN SI PD = 350MW FT = 300MHZ	04713	2N3904
A5Q13	1854-0727	0	1	TRANSISTOR NPN 2N647 SI TO-220AB	0192B	2N6474
A5Q14	1853-0036	2		TRANSISTOR PNP SI PD = 310MW FT = 250MHZ	28480	1853-0036
A5Q15	1853-0406	0		TRANSISTOR PNP 2N6476 SI TO-220AB	0192B	2N6476
A5R1	0757-0418	9	2	RESISTOR 619 1% .125W F TC = 0+-100	24546	C4-1/8-TO-619R-F
A5R2	0757-0465	6	3	RESISTOR 100K 1% .125W F TC = 0+-100	24546	C4-1/8-TO-1003-F
A5R3	0757-0458	7	1	RESISTOR 51.1K 1% .125W F TC = 0+-100	24546	C4-1/8-TO-5112-F
A5R4	0757-0442	9	5	RESISTOR 10K 1% .125W F TC = 0+-100	24546	C4-1/8-TO-1002-F
A5R5	0757-0280	3	4	RESISTOR 1K 1% .125W F TC = 0+-100	24546	C4-1/8-TO-1001-F
A5R7	0757-0442	9		RESISTOR 10K 1% .125W F TC = 0+-100	24546	C4-1/8-TO-1002-F
A5R8	0757-0465	6		RESISTOR 100K 1% .125W F TC = 0+-100	24546	C4-1/8-TO-1003-F
A5R9	0699-0653	0	3	RESISTOR 121.78K .1% .125W F TC = 0+-25	28480	0699-0653
A5R10	0757-0442	9		RESISTOR 10K 1% .125W F TC = 0+-100	24546	C4-1/8-TO-1002-F
A5R11	0699-0591	5	2	RESISTOR 140.158K .1% .125W F TC = 0+-25	28480	0699-0591
A5R13	0698-6358	2	1	RESISTOR 100K .1% .125W F TC = 0+-25	28480	0698-6358

See introduction to this section for ordering information.
 * Indicates factory selected value

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A5R14	0699-0653	0		RESISTOR 121.78K .1% .125W F TC=0+-25	28480	0699-0653
A5R16	0699-0653	0		RESISTOR 121.78K .1% .125W F TC=0+-25	28480	0699-0653
A5R17	0699-0591	5		RESISTOR 140.158K .1% .125W F TC=0+-25	28480	0699-0591
A5R19	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A5R20	0811-1676	4	2	RESISTOR 6.8 1% .5W F TC=+-100	28480	0811-1676
A5R21	0698-3409	8	2	RESISTOR 2.37K 1% .5W F TC=0+-100	28480	0698-3409
A5R22	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1001-F
A5R23	0698-3407	8	2	RESISTOR 1.96K 1% .5W F TC=0+-100	28480	0698-3407
A5R24	0698-3409	8		RESISTOR 2.37K 1% .5W F TC=0+-100	28480	0698-3409
A5R25	0698-3150	6	1	RESISTOR 2.37K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2371-F
A5R27	0698-6360	6	4	RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A5R28	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A5R29	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A5R30	0698-0083	8	1	RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1961-F
A5R31	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1003-F
A5R32	0757-0418	9		RESISTOR 619 1% .125W F TC=0+-100	24546	C4-1/8-TO-619R-F
A5R33	0811-1676	4		RESISTOR 6.8 1% .5W F TC=+-100	28480	0811-1676
A5R34	0811-1672	6	1	RESISTOR 3.3 5% 2W PW TC=0+-400	75042	BWH2-3R8-J
A5R35	0698-3407	8		RESISTOR 1.96K 1% .5W F TC=0+-100	28480	0698-3407
A5R36	0698-3404	3	1	RESISTOR 383 1% .5W F TC=0+-100	28480	0698-3404
A5R37	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1001-F
A5R38	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A5R39	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A5R40	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1001F
A5R41	0757-0814	3	1	RESISTOR 511 1% .125W F TC=0+-100	28480	0757-0814
A5TP1	0360-0124	3	2	CONNECTOR-SGL CONT P.04-IN-BSC-SZ RND	28480	0360-0124
A5TP2	0360-0124	3		CONNECTOR-SGL CONT P.04-IN-BSC-SZ RND	28480	0360-0124
A5U1	1826-0138	8	1	IC COMPARATOR GP QUAD 14-DIP-P PKG	01295	LM339N
A5U2	1826-0712	4	1	IC OP AMP LOW-BIAS-H-IMPD DUAL 8-DIP-P	27014	LF353N
A5 MISCELLANEOUS PARTS						
	0490-0570	8	1	SOCKET-RLY 6-CONT CRADLE PC	28480	0490-0570
	1205-0309	7	2	HEAT SINK (Q1,Q15)	28480	1205-0309
	1205-0512	9	1	HEAT SINK SGL TO-220-CS	28480	1205-0512
	1251-6859	3	1	CONNECTOR 18-PIN F POST TYPE	28480	1251-6859
	8120-3181	8	2	CABLE ASSY-FLEX COND	28480	8120-3181
	0490-0618			SEAL HOLDING DOWN RELAY		

See introduction to this section for ordering information.
 * Indicates factory selected value

Reference Designator	HP Part Number	C/D	Qty	Description	Mfr Code	Mfr Part Number
A6 - REAR PANEL ASSEMBLY						
A6 A6LF A6T1	04935-60108	8	1	REAR PANEL ASSEMBLY	28480	04935-60108
	9135-0284	1	1	LINE MODULE-FILTER	28480	0980-0443
	9100-4205	8	1	TRANSFORMER-AC POWER	28480	9100-4205
	0360-1251	9	1	TERMINAL-SLDR LUG FOR #12 SCR	28480	0360-1251
	0890-0311	4		TUBING-HS .187-D/.093-RCVD	00000	ORDR BY DSCRIPTN
	0890-0100	9	1	TUBING-HS .093-D/.046-RCVD	00000	ORDR BY DSCRIPTN
	1400-0249	0	6	CABLE TIE .062-.625 DIA NYL	06383	PL1M-8
	1510-0038	8	1	BINDING POST ASSY SGL THD-STUD	28480	1510-0038
	2190-0027	2	1	WASHER-LK HLCL 1/4 IN .255-IN-ID	28480	2190-0027
	2360-0242	8	4	SCREW-MACH 6-32 1.25-IN-LG	00000	ORDR BY DSCRIPTN
	2420-0023	1	4	NUT-HEX-W/LKWR 6-32-THD .094-IN-THK	00000	ORDER BY DSCRIPTN
	2950-0006	3	1	NUT-HEX-DBL-CHAM 1/4-32-THD	00000	ORDR BY DSCRIPTN
	8150-2846	3		WIRE 18AWG 300V PVC 19X30 105C	28480	8150-2846
	04935-00001	5	1	REAR PANEL (BLANK)	28480	04935-00001
	7100-1288	1	1	TRANSFORMER-COVER	28480	7100-1288
	04935-61601	1	1	JUMPER CABLE	28480	04935-61601
	04935-61602	3	1	JUMPER CABLE	28480	04935-61602

See introduction to this section for ordering information.
 * Indicates factory selected value

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13 - RECEIVER BOARD (Par Units only)						
A13	04935-60034	6	1	RECEIVER BOARD WITH PAR	28480	04935-60034
A13C1	0180-3124	7	1	CAPACITOR-FXD 75UF +100-20% 300VDC AL	28480	0180-3124
A13C2	0180-1746	5	3	CAPACITOR-FXD 15UF +-10% 20 VDC TA	56289	150D156X9020B2
A13C3	0180-1746	5		CAPACITOR-FXD 15UF +-10% 20VDC TA	56289	150D156X9020B2
A13C4	0180-1746	5		CAPACITOR-FXD 15UF +-10% 20VDC TA	56289	150D156X9020B2
A13C5	0160-6623	5	75	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C6	0160-5719	1	1	CAPACITOR-FXD 620PF +-5% 300VDC MICA	28480	0160-5719
A13C7	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C8	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C9	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C10	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C11	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C12	0160-6573	5	1	CAPACITOR-FXD 2000PF +-5% 300VDC MICA	28480	0160-6573
A13C13	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C14	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C15	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C16	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C17	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C18	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C19	0160-6539	1	10	CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	0160-6539
A13C21	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C22	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C23	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C24	0140-0190	7	2	CAPACITOR-FXD 39PF +-5% 300VDC MICA	72136	DM15E39QJ030WV1CR
A13C25	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C26	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C27	0160-6539	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	0160-6539
A13C28	0180-0374	3	11	CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A13C29	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A13C31	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C32	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C33	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C34	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A13C35	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A13C36	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A13C37	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C38	0140-0190	7		CAPACITOR-FXD 39PF +-5% 300VDC MICA	72136	DM15E39QJ030WV1CR
A13C41	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C42	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C43	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C44	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A13C45	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C46	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A13C47	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A13C49	0160-7103	1	1	CAPACITOR-FD 600PF +-1% 300VDC MICA	28480	0160-7103
A13C50	0160-7099	7	5	CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-7099
A13C51	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C52	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C56	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C57	0160-2222	2	1	CAPACITOR-FXD 1500PF +-5% 300VDC MICA	28480	0160-2222
A13C58	0160-7100	9	14	CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A13C59	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A13C60	0160-7098	5	2	CAPACITOR-FXD 1100PF +-1% 100VDC MICA	08113	0160-7098
A13C61	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A13C62	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C63	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C64	0180-0197	8	4	CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A13C65	0180-0197	8		CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A13C66	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A13C67	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A13C68	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A13C69	0160-6268	4	2	CAPACITOR-FXD 1000PF +-1% 500VDC MICA	08113	0160-6268
A13C70	0160-6595	4	2	CAPACITOR-FXD 4700PF +-1% 300VDC MICA	08113	0160-6595
A13C71	0160-6268	4		CAPACITOR-FXD 1000PF +-1% 500VDC MICA	08113	0160-6268
A13C72	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C73	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C74	0160-6802	7	1	CAPACITOR-FXD 110PF +-1% 300VDC MICA	08113	0160-6802
A13C75	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C76	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	C	Qty	Description	Mfr Code	Mfr Part Number
A13C77	0160-6623	5		CAPACITOR-FXD .1UF +-20% 40VDC CER	28480	0160-6623
A13C78	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C79	0160-7102	4	1	CAPACITOR-FXD 5100PF +-1% 300VDC MICA	08113	0160-7102
A13C80	0140-8918	7	1	CAPACITOR-FXD 300PF +-1% 300VDC MICA	08113	0160-8918
A13C81	0160-5877	2	5	CAPACITOR-FXD 2400PF +-1% 300VDC MICA	28480	0160-5877
A13C82	0160-7099	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-7099
A13C83	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C84	0160-5877	2		CAPACITOR-FXD 2400PF +-1% 300VDC MICA	28480	0160-5877
A13C85	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A13C87	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A13C88	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C89	0160-6539	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	0160-6539
A13C90	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C91	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C92	0160-6539	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	0160-6539
A13C93	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C94	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C95	0160-7101	0	1	CAPACITOR-FXD 400PF +-1% 300VDC MICA	72136	0160-7101
A13C97	0160-6595	4		CAPACITOR-FXD 4700PF +-1% 300VDC MICA	08113	0160-6595
A13C98	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C99	0160-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A13C100	0160-6539	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	0160-6539
A13C101	0160-6539	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	0160-6539
A13C102	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C103	0160-7099	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-7099
A13C104	0160-5877	2		CAPACITOR-FXD 2400PF +-1% 300VDC MICA	28480	0160-5877
A13C105	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C106	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C107	0160-7099	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-7099
A13C108	0160-5877	2		CAPACITOR-FXD 2400PF +-1% 300VDC MICA	28480	0160-5877
A13C109	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C110	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C111	0160-7100	1		CAPACITOR-FXD 1700PF +-1% 300VDC MICA	08113	0160-7100
A13C112	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C113	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C114	0160-5863	2	1	CAPACITOR-FXD 330PF +-1% 300VDC MICA	08113	0160-5863
A13C115	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C116	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C117	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C118	0160-6539	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	0160-6539
A13C119	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C120	0160-6539	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	0160-6539
A13C121	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A13C122	0160-7098	5		CAPACITOR-FXD 1100PF +-1% 500VDC MICA	08113	0160-7098
A13C123	0160-7099	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-7099
A13C124	0160-5877	2		CAPACITOR-FXD 2400PF +-1% 300VDC MICA	28480	0160-5877
A13C125	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A13C126	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C127	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C131	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C132	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C133	0160-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A13C134	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C135	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 10VDC MICA	08113	0160-7100
A13C136	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A13C137	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A13C139	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C140	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C141	0160-6539	1		CAPACITOR-FXD .01UF +-1% VDC MICA	08113	0160-6539
A13C142	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C143	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C144	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C145	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C146	0160-6539	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	0160-6539
A13C147	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C148	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C149	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A13C150	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C151	0160-7100	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	0160-7100
A13C152	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C153	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C154	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C155	0160-5814	3	1	CAPACITOR-FXD 750PF +-5% 300VDC MICA	28480	0160-5814

See introduction to this section for ordering information.
 * Indicates factory selected value

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13C156	0160-5811	4	1	CAPACITOR-FXD 430PF +-1% 300VDC MICA	02367	0160-5811
A13C157	0180-0197	8		CAPACITOR-FXD 2.3UF +-10% 20VDC TA	56289	150D225X9020A2
A13C158	0180-0197	8		CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A13C159	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C160				CAPACITOR HAND SELECTED ONLY IF NEEDED		
A13C201	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C202				CAPACITOR HAND SELECTED ONLY IF NEEDED		
A13C203	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C204	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A13C205	0160-3824	2	1	CAPACITOR-FXD 3900PF +-1%	05176	HEW-249
A13C210	0160-6500	5	1	CAPACITOR-FXD .01UF +-20% 50VDC CER	28480	0160-6500
A13CR1	1901-1068	5	1	DIODE-SM SIG SCHOTTKY	28480	1901-1068
A13CR3	1901-0040	1	3	DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR4	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR5	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR6	1901-0376	6	2	DIODE-GEN PRP 35V 50MA DO-35	28480	1901-0376
A13CR7	1901-0376	6		DIODE-GEN PRP 35V 50MA DO-35	28480	1901-0376
A13CR8	1901-0518	2	6	DIODE-SCHOTTKY	02062	5082-5509
A13CR9	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A13CR11	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A13CR12	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A13CR15	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A13CR16	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A13CR26	1901-0050	3	6	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR27	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR28	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR29	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR30	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR31	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13J1	1250-0257	1	1	CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A13J4	1251-6947	0	34	CONNECTOR-SGL CNT PIN .025-IN-BSC-SZSQ	28480	1251-6947
A13JU1	1200-0607	8	8	SOCKET-IC 16-CONT DIP IP-SLDR	28480	1200-0607
A13JU1	1251-4398	1	2	SHUNT, 4-POSITION	28480	1251-4398
A13JU2	1200-0607	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A13JU3	1200-0607	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A13JU4	1200-0607	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A13JU5	1200-0607	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A13JU5	1251-4398	1		SHUNT, 4-POSITION	28480	1251-4398
A13JU6	1258-0141	5	2	JUMPER-REMOVABLE FOR .025 IN SQ PINS	28480	1258-0141
A13JU6	1251-6947	0		CONNECTOR-SGL CONT PIN .025 IN BSC SZ	28480	1251-6947
A13JU7	1258-0141	5		JUMPER-REMOVABLE FOR .025 IN SQ PINS	28480	1258-0141
A13JU7	1251-6947	0		CONNECTOR-SGL CONT PIN .025 IN BSC SZ	28480	1251-6947
A13JW2	0811-3587	5	2	RESISTOR 0 OHMS	03123	104
A13R1	0757-0442	9	8	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A13R2	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A13R3	0698-4485	8	1	RESISTOR 931 1% .125W F TC=0+-100	24546	C4-1/8-TO-931R-F
A13R4	0698-6393	5	1	RESISTOR 585 1% .125W F TC=0+-25	28480	0698-6393
A13R5	0757-0280	3	4	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1001-F
A13R6	0757-0290	5	5	RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-TO-6191-F
A13R7	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-TO-6191-F
A13R8	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-TO-6191-F
A13R9	0698-0084	9	4	RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2151-F
A13R10	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	25456	C4-1/8-TO-2151-F
A13R11	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2151-F
A13R12	0757-0453	2	1	RESISTOR 30.1K 1% .125W F TCF=0+-100	24546	C4-1/8-TO-3012-F
A13R15	1810-0281	9	2	NETWORK-RES 1.0-SIP100.OK OHM X 9	01121	210A104
A13R16	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A13R17	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	CR-1/8-TO-1002-F
A13R18	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	CR-1/8-TO-1002-F
A13R19	0698-3457	6	1	RESISTOR 316K 1% .125W F TC=0+-100	28480	0698-3457
A13R20	1810-0281	9		NETWORK-RES 10-SIP100.OK OHM X 9	01121	210A104
A13R21	1810-0369	4	2	NETWORK-RES 6-SIP100.OK OHM X 5	11236	750-61-R100K
A13R22	0698-6360	6	24	RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R23	2100-3882	8	3	RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRN	28480	2100-3882
A13R24	0698-3153	9	2	RESISTOR 3.83K 1% .125W F TC=0+-100	24546	CR-1/8-TO-3831-F
A13R25	0698-4445	4	1	RESISTOR 5.76K 1% .125W F TC=0+-100	24546	C4-1/8-TO-5761-F
A13R26	0698-3152	8	1	RESISTOR 3.48K 1% .125W F TC=0+-100	24546	C4-1/8-TO-3481-F
A13R27	0698-3153	9		RESISTOR 3.83K 1% .125W F TC=0+-100	24546	C4-1/8-TO-3831-F
A13R28	0757-6360	6		RESISTOR 10K .1% .125W F TC=0+-100	24546	CR-1/8-TO-1002-F
A13R29	0698-6320	8	1	RESISTOR 5K .1% .125W F TC=0+-100	24546	CR-1/8-TO-5001-F

See introduction to this section for ordering information.
 * Indicates factory selected value

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13R30	0757-0416	7	3	RESISTOR 511 1% .125W F TC=0+-100	24546	CR-1/8-TO=511R-F
A13R31	0757-0416	7		RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-TO-511R-F
A13R32	0757-0416	7		RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-TO-511R-F
A13R33	2100-3883	9	4	RESISTOR-TRMR 5K 10% C TOP ADJ 17-TRN	28480	2100-3883
A13R34	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A13R35	0757-0420	9	4	RESISTOR 750 1% .125W F TC=0+-100	24546	CR-1/8-TO-751-F
A13R36	0698-4480	7	4	RESISTOR 15.8K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1582-F
A13R37	0698-4480	7		RESISTOR 15.8K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1582-F
A13R38	0757-0424	7	1	RESISTOR 1.1K 1%.125W F TC=0+-100	24546	C4-1/8-TO-1101-F
A13R39	0698-3150	6	3	RESISTOR 2.37K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2371-F
A13R40	0757-6360	2		RESISTOR 10K 1% .125W F TC=0+-100	24546	CR-1/8-TO-1002-F
A13R42	0757-6360	2		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A13R43	0757-0420	9		RESISTOR 750K 1% .125W	24546	C4-1/8-TO-1002-F
A13R44	0698-4480	7		RESISTOR 15.8K 1% .125W F TC=0+-100	24546	CR-1/8-TO-1582-F
A13R45	0698-4480	7		RESISTOR 15.8K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1582-F
A13R46	0698-3155	1	2	RESISTOR 4.6K 1% .125W F TC=0+-100	24546	C4-1/8-TO-4641-F
A13R47	0698-4475	0	1	RESISTOR 9.76K 1% .125W F TC=0+-100	03888	PME55-1/8-TO-9761-F
A13R48	0698-7847	6	3	RESISTOR 1.111K .1% .125W F TC=0+-25	19701	MF4C1/8-T9-1111R-B
A13R49	0698-6360	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A13R50	0698-3409	2		RESISTOR 2.37K 1% .125W	24546	CA-1/80-TO-2371-F
A13R54	0698-3453	2	1	RESISTOR 196K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1963-F
A13R55	0757-0401	0	4	RESISTOR 100 1% .125W F TC=0+-100	24546	CR-1/8-TO-101-F
A13R56	0757-0438	3	2	RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-TO-5111-F
A13R57	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-TO-4641-F
A13R58	0757-0199	3	2	RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2152-F
A13R60	0698-6360	6		RESISTOR 10K .1% .125W TC=0+-25	28480	0698-6360
A13R62	0757-0317	6	2	RESISTOR 1.33K 1% .125W	24546	C4-1/8-TO-1331-F
A13R63	0757-0317	6		RESISTOR 1.33K 1% .125W	24546	C4-1/8-TO-1331-F
A13R64	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A13R65	2100-3882	8		RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRN	28480	2100-3882
A13R66	0757-0442	9		RESISTOR-10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A13R67	0698-3157	3	2	RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1962-F
A13R68	0757-0444	1	1	RESISTOR 12.1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1212-F
A13R69	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2152-F
A13R70	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-TO-751-F
A13R71	0698-3157	3		RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1962-F
A13R72	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-TO-751-F
A13R72A	0757-0280	3	2	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1001F
A13R73	0698-3150	2		RESISTOR 2.37K 1% .125W	24546	CA-1/8-TO-2371-F
A13R74	0698-3150	2		RESISTOR 2.37K 1% .125W	24546	CA-1/8-TO-2371-F
A13R75	0757-0274	5	1	RESISTOR 1.21K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1211-F
A13R76	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2151-F
A13R77	2100-3881	7	1	RESISTOR-TRMR 500 10% C TOP-ADJ 17-TRN	28480	2100-3881
A13R78	0757-0465	6	2	RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1003-F
A13R79	0698-4530	8	1	RESISTOR 232K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2323-F
A13R80	0699-0595	9	1	RESISTOR 365K .1% .125W F TC=0+-25	28480	0699-0595
A13R81	0699-1078	3	1	RESISTOR 134K .1% .125W F TC=0+-25	28480	0699-1078
A13R82	0698-4516	0	1	RESISTOR 113K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1133-F
A13R83	0698-4158	6	2	RESISTOR 100K .1% .125W F TC=0+-50	28480	0698-4158
A13R84	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R85	0698-4158	6		RESISTOR 100K .1% .125W F TC=0+-50	28480	0698-4158
A13R86	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R87	0698-4490	9	2	RESISTOR 29.4K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2942-F
A13R88	0698-4490	9		RESISTOR 29.4K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2942-F
A13R89	0699-0566	4	4	RESISTOR 25.5K .1% .25W F TC=0+-25	28480	0699-0566
A13R90	0699-0566	4		RESISTOR 25.5K .1% .125W F TC=0+-25	28480	0699-0566
A13R91	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/87-TO-1001-F
A13R92	0698-7847	6		RESISTOR 1.11K .1% .125W F TC=0+-25	19701	MF4C1/8-T9-1111R-B
A13R93	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R94	0698-8638	5	2	RESISTOR 3.16K .1% .125W F TC=0+-25	28480	0698-8638
A13R95	0698-6445	8	3	RESISTOR 6.838K .1% .125W F TC=0+-25	28480	0698-6445
A13R96	0699-0586	8	1	RESISTOR 186.365K .% .125W F TC=0+-25	28480	0699-0586
A13R97	0699-0585	7	1	RESISTOR 240.738K .1% .125W F TC=0+-25	28480	0699-0585
A13R98	0698-6467	4	3	RESISTOR 16.9K 1% .125W F TC=0+-50	28480	068-6467
A13R99	0699-0587	9	2	RESISTOR 12.918K .1% .125W F TC=0+-25	28480	0699-0587
A13R100	0699-0588	0	3	RESISTOR 18.171K .1% .125W F TC=0+-25	28480	0699-0588
A13R102	2100-3883	9		RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	28480	2100-3883
A13R103	0698-6444	2	1	RESISTOR 21.62K .25% .125W F TC=0+-100	28480	0698-6444
A13R104	0698-6423	2	2	RESISTOR 31.25K .1% .125W F TC=0+-25	28480	0698-6423
A13R105	0699-0587	2		RESISTOR 12.198K .1% .125W F TC=0+-100	28480	0699-0587
A13R106	0698-8858	1	3	RESISTOR 12.4K .1% .125W F TC=0+-25	28480	0698-8858
A13R107	0698-8858	1		RESISTOR 12.4K .1% .125W F TC=0+-25	28480	0698-8858
A13R108	0698-6625	5	2	RESISTOR 6K .1% .125W F TC=0+-50	28480	0698-6625

See introduction to this section for ordering information.
 * Indicates factory selected value

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13R109	0699-0588	0		RESISTOR 18.171K .1% .125W F TC=0+ -50	28480	0699-0588
A13R110	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ -25	28480	0698-6360
A13R111	0698-6467	4		RESISTOR 16.9K 1% .125W F TC=0+ -50	28480	0698-6467
A13R112	0699-0566	4		RESISTOR 25.5K .1% .125W F TC=0+ -25	28480	0699-0566
A13R113	0699-0566	4		RESISTOR 25.5K .1% .125W F TC=0+ -25	28480	0699-0566
A13R114	0698-6445	8		RESISTOR 6.838K .1% .125W F TC=0+ -25	28480	0698-6445
A13R115	0698-6638	5		RESISTOR 3.16K .1% .125W F TC=0+ -25	28480	0698-6638
A13R116	0757-0289	2	1	RESISTOR 13.3K 1% .125W F TC=0+ -100	19701	MF4C1/8-T0-1332-F3
A13R117	0699-0589	1	2	RESISTOR 34.334K .1% .125W F TC=0+ -25	28480	0699-0589
A13R118	0699-0589	1		RESISTOR 34.334K .1% .125W F TC=0+ -25	28480	0699-0589
A13R119	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ -25	28480	0698-6360
A13R120	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ -25	28480	0698-6360
A13R121	0699-0588	0		RESISTOR 18.171K .1% .125W F TC=0+ -25	28480	0699-0588
A13R122	0698-8858	5		RESISTOR 12.4K 1% .125W F TC=0+ -25	28480	0698-8858
A13R123	0699-0164	8	1	RESISTOR 738.5 1% .125W F TC=0+ -25	24546	NESS
A13R124	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+ -100	19701	MF4C1/8-T0-6191-F
A13R125	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+ -100	19701	MF4C1/8-T0-6191-F
A13R126	0698-6423	2		RESISTOR 31.25K .1% .125W F TC=+ 2	28400	098-6423
A13R127	0698-6754	2	1	RESISTOR 44.2K .5% .125W F TC=0+ -50	24546	NC4-1/8-T2-4422-D
A13R128	0698-4537	5	1	RESISTOR 357K 1% .125W F TC=0+ -100	28480	0698-4537
A13R129	0698-7585	9	1	RESISTOR 316.2 1% .125W F TC=0+ -25	28480	0698-7585
A13R132	2100-3883	9		RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	28480	2100-3883
A13R134	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ 25	28480	0698-6360
A13R135	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ 25	28480	0698-6360
A13R136	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ 25	28480	0698-6360
A13R137	0699-0590	4	2	RESISTOR 15.758K .1% .125W F TC=0+ -25	28480	0699-0590
A13R138	0698-3456	5	1	RESISTOR 287K 1% .125W F TC=0+ -100	24546	C4-1/8-T0-2873-F
A13R139	0699-0596	0	2	RESISTOR 4.12K .1% .125W F TC=0+ -25	28480	0699-0596
A13R140	0699-0596	0		RESISTOR 4.12K .1% .125W F TC=0+ -25	28480	0699-0596
A13R141	0699-0594	8	2	RESISTOR 2.21K .1% .125W F TC=0+ -25	28480	0699-0596
A13R142	0699-0594	8		RESISTOR 2.21K .1% .125W F TC=0+ -25	28480	0699-0594
A13R143	0698-8337	1	1	RESISTOR 10.7K .1% .125W F TC=0+ -50	19701	MF4C1/8-T2-1072-B
A13R144	0698-8068	5	1	RESISTOR 4.99K .25% .125W F TC=0+ -25	19701	MF4C1/8-T9-4991-C
A13R145	0699-0597	1	3	RESISTOR 2.26K .1% .125W F TC=0+ -25	28480	0699-0597
A13R146	0698-6447	0	1	RESISTOR 683.8 .1% .125W F TC=0+ -25	28480	0698-6447
A13R147	0698-6446	9	1	RESISTOR 2.162K 1% .125W F TC=0+ -25	28480	0698-6446
A13R148	0699-0592	6	1	RESISTOR 7.741K .1% .125W F TC=0+ -25	28480	0699-0592
A13R149	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ -25	28480	0698-6360
A13R150	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ -25	28480	0698-6360
A13R151	0699-0590	4		RESISTOR 15.758K .1% .125W F TC=0+ -25	28480	0699-0590
A13R152	0757-0462	3	1	RESISTOR 75K 1% .125W F TC=0+ -100	24546	C4-1/8-T0-7502-F
A13R153	2100-3884	0	2	RESISTOR-TRMR 10K 10% C TOP-ADJ 17-TRN	28480	2100-3884
A13R154	0698-4520	6	2	RESISTOR 43K 1% .125W F TC=0+ -100	24546	C4-1/8-T0-1433-F
A13R155	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ -25	28480	0698-6360
A13R156	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ -25	28480	0698-6360
A13R157	0698-4505	7	2	RESISTOR 71.5K 1% .125W F TC=0+ -100	24546	C4-1/8-T0-7152-F
A13R158	0699-0597	1		RESISTOR 2.26K .1% .125W F TC=0+ -25	28480	0699-0597
A13R159	0699-0597	1		RESISTOR 2.26K .1% .125W F TC=0+ -25	28480	0699-0597
A13R160	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ -25	28480	0698-6360
A13R161	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ -25	28480	0698-6360
A13R162	0698-8799	9	1	RESISTOR 21.5K .1% .125W F TC=0+ -25	28480	0698-8799
A13R163	0699-0593	7	2	RESISTOR 13.665K .1% .125W F TC=0+ -25	28480	0699-0593
A13R164	0699-0593	7		RESISTOR 13.665K .1% .125W F TC=0+ -25	28480	0699-0593
A13R165	0699-0600	7	1	RESISTOR 108.502K .1% .125W F TC=0+ -25	28480	0699-0600
A13R166	0699-0591	5	1	RESISTOR 140.158K .1% .125W F TC=0+ -25	28480	0699-0591
A13R167	0757-0443	0	1	RESISTOR 11K 1% .125W F TC=0+ -100	24546	C4-1/8-T0-1102-F
A13R168	0698-4520	6		RESISTOR 43K 1% .125W F TC=0+ -100	24546	C4-1/8-T0-1433-F
A13R169	0757-0461	2	2	RESISTOR 68.1K 1% .125W F TC=0+ -100	24546	C4-1/8-T0-6812-F
A13R170	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ -25	28480	0698-6360
A13R171	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ -25	28480	0698-6360
A13R172	0698-4505	7		RESISTOR 71.5K 1% .125W F TC=0+ -100	24546	C4-1/8-T0-7152-F
A13R173	0757-0463	4	1	RESISTOR 82.5K 1% .125W F TC=0+ -100	24546	C4-1/8-T0-8252-F
A13R174	0757-0461	2		RESISTOR 68.1K 1% .125W F TC=0+ -100	24546	C4-1/8-T0-6812-F
A13R175	2100-3884	0		RESISTOR-TRMR 10K 10% C TOP-ADJ 17-TRN	28480	2100-3884
A13R178	0698-7847	6		RESISTOR 1.111K .1% .125W F TC=0+ -25	19701	C4-1/8-T9-1111R-B
A13R179	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+ -25	28480	0698-6360
A13R180	2100-3883	9		RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	28480	2100-3883
A13R182	0757-0421	4	1	RESISTOR 825 1% .125W F TC=0+ -100	24546	C4-1/8-T0-825R-F
A13R183	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+ -100	24546	C4-1/8-T0-1001-F
A13R184	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+ -100	24546	C4-1/8-T0-1003-F
A13R185	0757-0401	0		RESISTOR 100 1% .125W F TC=0+ -100	24546	C4-1/8-T0-101-F
A13R186	2100-3882	8		RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRN	28480	2100-3882
A13R187	0698-6467	4		RESISTOR 16.9K 1% .125W F TC=0+ -50	28480	0698-6467

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13R201	0757-0458	7	2	RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5112-F
A13R202	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A13R203	0757-0458	7		RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5112-F
A13R204	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A13R205	0698-4002	1		RESISTOR 5K .1% .125W F TC=0+-100	24546	C4-1/8-T0-5001-F
A13R206	1810-0369	4	1	NETWORK-RES 6-SIP OHM X5	11238	750-61-R100K
A13R207	0698-6445	8		RESISOR 6.838K .1% .125W F TC=0+-25	28480	0698-6445
A13R208	0811-3587	5		WIRE 1/2 IN. RESISTOR 0 OHMS	03123	104
A13R209	0757-0438	3		RESISTOR 5.11K .1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A13R210	0698-0085	6		RESISTOR 2.81K 1% .125W F TC=0+-100	28480	0698-0085
A13T1	9100-3489	3		1	TRANSFORMER-POWER 100/120/220/240V	28480
A13TP2	1251-6947	0	0	CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP3	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP4	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP5	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP6	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP7	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP9	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP10	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP11	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP12	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP13	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP14	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP15	1251-6947	0	CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947	
A13TP21	1251-6947	0	CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947	
A13TP22	1251-6947	0	CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947	
A13TP23	1251-6947	0	0	CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP24	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP25	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13U1	1826-0712	4	5	IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P	27014	LF353N
A13U2	1826-0138	8		IC COMPARATOR GP QUAD 14-DIP-P PKG	01295	LM339N
A13U3	1826-0624	7		IC CONV V/FREQ 14-DIP-P PKG	8E175	VFC32KP
A13U4	1826-1071	0		IC OP AMP	28480	1826-1071
A13U5	1826-0742	0		IC PRECISION 10V REFERENCE, AD581J	28480	1826-0742
A13U6	1826-0639	4	1	IC CONV 8-B-D/A 160DIP-P PKG	24355	AD7524JN
A13U7	1820-1956	8		IC LCH CMOS COM CLOCK QUAD	0182B	CD4042BE
A13U8	1820-1956	8		IC LCH CMOS COM CLOCK QUAD	0182B	CD4042BE
A13U11	1820-1956	8		IC LCH CMOS COM CLOCK QUAD	0182B	CD4042BE
A13U12	1820-2328	3		IC XLTR CMOS TIL-TO-MOS HEX	04713	MC14504BCP
A13U13	1820-1315	3		IC MULTIPLXR 8-CHAN-ANLG 16-DIP-P PKG	0182B	CD4051RE
A13U14	1826-1544	8		IC OP AMP GP 8-DIP-P PKG	27014	1826-1544
A13U15	1826-0667	4	5	IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P PKG	27014	LF351N
A13U16	1826-0712	8		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P	27014	LF353N
A13U17	1820-1956	9		IC LCH CMOS COM CLOCK QUAD	0182B	CD4042BE
A13U20	1826-1071	0		IC OP AMP	28480	1826-1071
A13U21	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A13U22	1826-0735	1	IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5	
A13U23	1826-0735	1	IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5	
A13U24	1826-0735	1	IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5	
A13U25	1826-0735	1	3	IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A13U26	1826-0208	3		IC OP AMP GP 8-DIP-P PKG	27014	LM310N
A13U28	1826-0208	3		IC OP AMP GP 8-DIP-P PKG	27014	LM310N
A13U29	1826-1544	3		IC OP AMP GP 8-DIP-P PKG	27014	1826-1544
A13U30	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A13U31	1826-0665	6		3	IC OP AMP LOW-BIAS-H-IMP QUAD 14-DIP	27014
A13U32	1826-0712	4	IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP		27014	LM310N
A13U33	1826-0208	3	IC OP AMP GP 8-DIP-P PKG		27014	LF353N
A13U34	1826-0740	8	IC SWITCH ANLG DUAL 16-DIP-C PKG		32293	IH5043CDE
A13U35	1826-0740	8	IC SWITCH ANLG DUAL 16-DIP-C PKG		32293	IH5043CDE
A13U36	1826-0665	6	2	IC OP AMP LOW-BIAS-H-IMP QUAD 14-DIP-P	27014	LF347BN
A13U37	1820-1725	9		IC MULTIPLXR ANLG 16-DIP-P PKG	17856	DG508CJ
A13U38	1820-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A13U39	1820-1725	9		IC MULTIPLXR ANLG 16-DIP-P PKG	17856	DG508CJ
A13U40	1826-0753	3		IC OP AMP LOW-BIAS, HIGH IMPED	02037	SC77968L1
A13U42	1826-0736	2	1	IC OP AMP WB 8-DIP-P PKG	34371	HA3-2627-5
A13U43	1826-0667	8		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P PKG	27014	LF351N
A13U44	1826-0667	8		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P PKG	27014	LF351N
A13U45	1826-0667	8		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P PKG	27014	LF351N
A13U46	1826-0712	4		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP P	27014	LF353N

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	C	Qty	Description	Mfr Code	Mfr Part Number
A13U47	1826-1422	5	1	IC OP AMP WB QUAD 14-DIP-P PKG	02037	MC34084P
A13U48	1826-1544	3		IC OP AMP GP 8-DIP-P-PKG	27014	1826-1544
A13U50	1826-0740	8		IC SWITCH ANLG DUAL 16-DIP-C PKG	32293	IH5043CDE
A13U51	1826-0753	8		IC OP AMP LOW-BIAS-H-IMP	27014	SC77968L1
A13U52	1826-1544	3		IC OP AMP GP 8-DIP PKG	27014	1826-1544
A13U53	1826-0665	6		IC OP AMP LOW-BIAS-H-IMP QUAD 14-DIP-P	27014	LF347BN
A13U54	1826-0712	4		IC OP AMP LOW-BIAS-H-IMP QUAL 8-DIP-P	27014	LF353N
A13U55	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A13U56	1826-0667	8		IC OP AMP LOW-BIAS-H-IMP 8-DIP-P PKG	27014	LF351N
A13U57	1826-1189	1	1	IC OP AMP LOW-BIAS-H-IMP	28480	1826-1189
A13UX7	1200-0607	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A13UX8	1200-0607	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A13UX17	1200-0607	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A13 MISCELLANEOUS PARTS						
	2260-0002	6	2	NUT-HEX-DBL-CHAM 4-40-THD .062-IN-THK	00000	ORDR BY DSCRPTN
	0590-0076	8	2	NUT-HEX-W/LKWR 4-40-THD .094-IN-THK	00000	ORDR BY DSCRPTN
	8150-0456	7	1	WIRE 24AWG W 300B PVC 7X32 80C	28480	8150-0456
	0380-1157	6	2	SNAP IN SPACER	00509	TCBS-4N

See introduction to this section for ordering information.
 * Indicates factory selected value

Reference Designator	HP Part Number	Ⓞ	Qty	Description	Mfr. Code	Mfr Part Number
A14 - TRANSMITTER BOARD (Par Units only)						
A14	04935-60035	7	1	TRANSMITTER BOARD WITH PAR	28480	04935-60035
A14C1	0160-3815	0	3	CAPACITOR-FIXED .15UF +-5% 50VDC	28480	0160-3815
A14C2	0160-3815	0		CAPACITOR-FIXED .15UF +-5% 50VDC	28480	0160-3815
A14C3	0160-3815	0		CAPACITOR-FIXED .15UF +-5% 50VDC	28480	0160-3815
A14C4	0160-6623	5	29	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C5	0160-3045	1	2	CAPACITOR-FXD 2200UF +50-10% 25VDC AL	28480	0160-3045
A14C6	0160-4017	8	2	CAPACITOR-FXD 100UF +50-10% 35VDC AL	28480	0160-4017
A14C7	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C8	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C9	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C10	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C11	0160-3045	1		CAPACITOR-FXD 2200UF +50-10% 25VDC AL	28480	0160-3045
A14C12	0160-2945	8	2	CAPACITOR-FXD 100UF +50-10% 35VDC AL	28480	0160-2945
A14C13	0160-3456	9	2	CAPACITOR-FXD 1000PF 10% 1KVDC CER	28480	0160-3456
A14C14	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C15	0160-3044	0	1	CAPACITOR-FXD 3300UF +50-10% 16VDC AL	28480	0160-3044
A14C16	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C17	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C20	0160-3456	9		CAPACITOR-FXD 1000PF 10% 1KVDC CER	28480	0160-3456
A14C21	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C22	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C23	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C24	0160-4791	3	1	CAPACITOR-FXD 10PF +-5% 500VDC CER	28480	0160-4791
A14C25	0160-4807	5	4	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-4807
A14C26	0160-4807	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-4807
A14C27	0160-4807	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-4807
A14C28	0160-4807	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-4807
A14C29	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C30	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C31	0160-3050	8	1	CAPACITOR-FXD 330UF +50-10% 16VDC AL	28480	0160-3050
A14C32	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C33	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C34	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C35	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C36	0160-0058	0	1	CAPACITOR-FXD 50UF +75-10% 25VDC AL	56289	30D506G025CC2
A14C40	0160-3094	2	1	CAPACITOR-FXD .1UF +-10% 25VDC CER	28480	0160-3094
A14C41	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	56289	0160-6623
A14C42	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C43	0160-7099	7	2	CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-7099
A14C44	0160-7099	7	2	CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-7099
A14C45	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C46	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C52	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C53	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C55	0160-0127	2	2	CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A14C56	0160-3124	7	1	CAPACITOR-75 300 N.P.	28480	0160-T02710
A14C57	0160-6595	0	3	CAPACITOR-FXD 4700PF +-1% 300VDC MICA	28480	0160-6595
A14C58	0160-6595	0		CAPACITOR-FXD 4700PF +-1% 300VDC MICA	28480	0160-6595
A14C59	0160-6595	0		CAPACITOR-FXD 4700PF +-1% 300VDC MICA	28480	0160-6595
A14C80	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C81	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C82	0160-0197	8	2	CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A14C83	0160-0197	8	2	CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A14C84	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C85	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C87	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14C70	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A14C71	0160-0374	3	1	CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A14C72	0160-1746	5	1	CAPACITOR-FXD 15UF +-10% 20VDC TA	28480	0160-1746
A14C73	0160-4833	5	1	CAPACITOR-FXD .022UF +-10% 100VDC CER	28480	0160-4833
A14C74	0160-4835	7	1	CAPACITOR-FXD .1UF +-10% 50VDC CER	28480	0160-4835
A14C75	0160-0291	3	1	CAPACITOR-FXD 1UF +-10% 35VDC CER	28480	0160-0291
A14C76	0160-6500	3	32	CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A14C77	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A14C78	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A14C79	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A14C80	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A14C81	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500
A14C82	0160-6500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-6500

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A14C83	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C84	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C85	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C86	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C87	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C88	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C89	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C90	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C91	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C92	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C93	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C94	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C95	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C96	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C97	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C98	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C99	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C100	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C101	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C102	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C103	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C104	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C105	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C106	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C107	0160-8500	3		CAPACITOR-FXD .01UF +-10% 50VDC CER	28480	0160-8500
A14C109	0160-6623	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-6623
A14CR1	1902-0041	4	1	DIODE-ZNR 5.11V 5% D0-35 PD = .4W	28480	1902-0041
A14CR4	1901-0033	2	7	DIODE-GEN PRP 180V 200MA D0-7	28480	1901-0033
A14CR6	1901-0731	7	9	DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR7	1902-1399	7	3	DIODE-ZNR 18.0V 2% PD = .4W	02037	INS248
A14CR9	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR10	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR11	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR12	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR13	1901-0033	2		DIODE-GEN PRP 180V 200MA D0-7	28480	1901-0033
A14CR14	1901-0033	2		DIODE-GEN PRP 180V 200MA D0-7	28480	1901-0033
A14CR15	1902-1399	7		DIODE-ZNR 18.0V 2% PD = .4W	02037	INS248
A14CR16	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR17	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR18	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR19	1901-0033	2		DIODE-GEN PRP 180V 200MA D0-7	28480	1901-0033
A14CR20	1901-0033	2		DIODE-GEN PRP 180V 200MA D0-7	28480	1901-0033
A14CR23	1902-1399	7		DIODE-ZNR 18.0V 2% PD = .4W	02037	INS248
A14CR24	1884-0250	7	1	THYRISTOR-TRIAC TO-220AB	01928	T2500B
A14CR25	1902-0052	7	1	DIODE-ZNR 6.81V 2% PD = .4W	02037	SZ30016-1135
A14CR26	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR27	1901-0033	2	7	DIODE-GEN PRP 180V 200MA D0-7	28480	1901-0033
A14CR28	1901-0033	2		DIODE-GEN PRP 180V 200MA D0-7	28480	1901-0033
A14CR29	1902-0202	9	2	DIODE-ZNR 15V 5% D0-15 PD = 1W TC = +.057%	28480	1902-0202
A14CR30	1902-0202	9		DIODE-ZNR 15V 5% D0-15 PD = 1W TC = +.057%	28480	1902-0202
A14CSA1	1251-6947	0	28	CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6947
A14CSA2	1251-6947	0		CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6947
A14J2	1251-6856	0	1	CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6856
A14J3	1251-4573	4	1	CONNECTOR-PC EDGE 25-CONT/ROW 2-ROWS	28480	1251-4573
A14JU1	1251-6947	0		CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6947
A14JU2	1251-6947	0		CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6947
A14JU5	1258-0141	5	8	JUMPER-REMOVABLE FOR .025IN SQ PINS	28480	1258-0141
A14JU5	1251-6947	0		CONNECTOR-SGL CONT P .025IN BSC-SZSQ	28480	1251-6947
A14JU5	1258-0141	5		JUMPER-REMOVABLE FOR .025 IN SQ PINS	28480	1251-0141
A14JU6	1251-6947	0		CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6947
A14JU6	1258-0141	5		JUMPER-REMOVABLE FOR .025 IN SQ PINS	28480	1251-0141
A14JU14	1251-6947	0		CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6947
A14JU14	1258-0141	5		JUMPER-REMOVABLE FOR .025 IN SQ PINS	28480	1251-0141
A14JU14	1251-6947	0		CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6947
A14JU14	1258-0141	5		JUMPER-REMOVABLE FOR .025 IN SQ PINS	28480	1251-0141
A14JW2	0811-3587	5	2	RESISTOR 0 OHMS	03123	104
A14JW3	0811-3587	5		RESISTOR 0 OHMS	03123	104
A14P1	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14Q1	1853-0512	9	3	TRANSISTOR PNP PD = 50W FT = 20MHZ	03508	X45H281
A14Q2	1854-0575	6	1	TRANSISTOR NPN PD = 625MW FT = 50MHZ	04713	MPS-A42

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	QTY	Qty	Description	Mfr Code	Mfr Part Number
A14Q3	1853-0512	9		TRANSISTOR PNP PD=50W FT=20MHZ	03508	X45H281
A14Q4	1853-0512	9		TRANSISTOR PNP PD=50W FT=20MHZ	03508	X45H281
A14Q5	1853-0012	4	1	TRANSISTOR PNP SI TO-39 PD=600MW	01295	2N2904A
A14Q6	1854-0053	5	1	TRANSISTOR NPN SI TO-5 PD=800MW	04713	2N2218
A14Q7	1853-0036	2	1	TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A14R1	0757-0465	6	6	RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1003-F
A14R2	0698-6360	6	4	RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A14R3	0757-0819	4	1	RESISTOR 909 1% .5W F TC=0+-100	28480	0757-0819
A14R4	0757-0442	9	21	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A14R5	0698-8827	4	6	RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A14R6	0698-8826	3	3	RESISTOR 825K 1% .125W F TC=0+-100	28480	0698-8826
A14R7	0698-8826	3		RESISTOR 825K 1% .125W F TC=0+-100	28480	0698-8826
A14R8	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A14R9	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A14R10	0698-8826	3		RESISTOR 825K 1% .125W F TC=0+-100	28480	0698-8826
A14R11	0698-8824	1	1	RESISTOR 562K 1% .125W F TC=0+-100	28480	0698-8824
A14R12	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-25	24546	C4-1/8-TO-1002-F
A14R13	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1003-F
A14R14	0698-6360	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A14R16	0698-3440	7	1	RESISTOR 196 1% .125W F TC=0+-100	24546	C4-1/8-TO-196R-F
A14R17	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1003-F
A14R19	0757-0280	3	6	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-751-F
A14R20	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A14R21	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A14R22	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A14R23	0757-0228	1	1	RESISTOR 9.09K 1% .125W F TC=0+-100	19701	MF4C1/8-TO-9091-F
A14R24	0757-0420	3	4	RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-TO-751-F
A14R25	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-TO-751-F
A14R27	0698-0083	8	2	RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1961-F
A14R28	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1003-F
A14R29	1810-0207	9	1	NETWORK-RES 8-SIP 22.0K X 7	01121	208A223
A14R30	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1003-F
A14R31	2100-3882	8	2	RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRN	28480	2100-3882
A14R33	0757-0416	7	1	RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-TO-511R-F
A14R34	0698-0083	8		RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1961-F
A14R35	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A14R36	0757-0394	0	2	RESISTOR 51.1 1% .125W F TC=0+-100	02995	5033R
A14R37	0757-0317	7	1	RESISTOR 1.33K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1331-F
A14R38	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-TO-751-F
A14R39	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-TO-751-F
A14R40	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1003-F
A14R41	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1001-F
A14R42	2100-3881	7	2	RESISTOR-TRMR 500 10% C TOP-ADJ 17-TRN	28480	2100-3881
A14R43	0757-0438	3	2	RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-TO-5111-F
A14R44	0757-0438	3		RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-TO-5111-F
A14R45	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A14R46	0757-0458	7	3	RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-5112-F
A14R47	0698-3156	2	1	RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1472-F
A14R48	0698-3152	8	1	RESISTOR 3.48K 1% .125W F TC=0+-100	24546	C4-1/8-TO-3481-F
A14R49	0757-0458	7		RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-5112-F
A14R52	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A14R53	0698-3160	8	5	RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-TO-3162-F
A14R54	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A14R55	0698-3160	8		RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-TO-3162-F
A14R56	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1001-F
A14R57	0757-0458	7		RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-5112-F
A14R58	0698-3451	0	1	RESISTOR 133K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1333-F
A14R59	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A14R60	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A14R61	0698-3160	8		RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-TO-3162-F
A14R62	0698-3160	8		RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-TO-3162-F
A14R63	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A14R64	0698-3160	8		RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-TO-3162-F
A14R65	0757-0421	4	1	RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-TO-825R-F
A14R66	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A14R67	0757-0443	0	1	RESISTOR 11K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1102-F
A14R68	0757-0441	8	1	RESISTOR 8.25 1% .125W F TC=0+-100	24546	C4-1/8-TO-8251-F
A14R69	0757-0419	0	1	RESISTOR 681 1% .125W F TC=0+-100	03293	C4-1/8-TO-681R-F
A14R70	0757-0422	9	1	RESISTOR 909 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A14R71	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A14R72	2100-3881	7		RESISTOR-TRMR 500 10% C TOP-ADJ 17-TRN	28480	2100-3881
A14R73	0757-0279	0	2	RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-TO-3161-F
A14R74	2100-3882	8		RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRN	28480	2100-3882

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	C	Qty	Description	Mfr Code	Mfr Part Number
A14R75	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R76	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R77	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R78	0757-0180	2	2	RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180
A14R79	0757-0180	2		RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180
A14R80	0757-0428	1	2	RESISTOR 1.62K 1% .125W	02995	MF4C-1
A14R81	0757-0431	6	1	RESISTOR 2.43K 1% .125W	02995	MF4C-1
A14R82	0698-0084	9	1	RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A14R83	0698-6393	1	1	RESISTOR 585 1% .125W F TC=0+-25	02995	5033R
A14R85	0699-0763	3	1	RESISTOR 10.6K 1% .125W F TC=0+-100	28480	0699-0763
A14R86	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R87	0698-4437	4	1	RESISTOR 2.94K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2941-F
A14R88	0698-6360	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A14R89	0698-6360	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A14R90	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R91	0757-0289	2	1	RESISTOR 13.3K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-1332-F
A14R92	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A14R93	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A14R94	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R95	0757-0394	0	2	RESISTOR 51.1 1% .125W F TC=0+-100	02995	5033R
A14R96	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R97	0698-3150	0	1	RESISTOR 2.37K 1% .125W	02995	MF4C-1
A14R98	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A14R99	0698-3157	0	1	RESISTOR 19.6K 1% .125W	02273	CEA-993
A14R100	0757-0428	1		RESISTOR 1.62K 1% .125W	02995	MF4C-1
A14R101	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A14R102	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A14R103	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A14R104	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A14T1	9100-2647	8	1	TRANSFORMER: AUDIO	28480	9100-2647
A14TP1	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP2	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP3	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP4	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP5	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP6	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP7	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP9	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP10	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP11	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TPS/S	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14U1	1826-0679	2	1	IC: OP AMP LOW-BIAS H-IMPD TO-99	0192B	CA3140AT
A14U2	1820-1932	0	2	IC: MV CMOS MONOSTBL DUAL	04713	MC14538BCP
A14U3	1820-1932	0		IC: MV CMOS MONOSTBL DUAL	04713	MC14538BCP
A14U4	1820-0939	5	3	IC: FF CMOS D-TYPE DUAL	0192B	CD4013AF
A14U5	1820-0939	5		IC: FF CMOS D-TYPE DUAL	0192B	CD4013AF
A14U6	1820-2472	5	1	IC: MICROPROCESSOR MK3872	28480	1820-2472
A14U7	1820-1827	2	1	IC: DCDCR CMOS 4-TO-16 LINE	27014	MM74C154AN
A14U8	1826-0728	2	2	IC: PRECISION GEN. PURPOSE REG.	28480	SG1532J
A14U9	1826-0411	0	2	IC: TIMER CMOS	04713	MC14536BCP
A14U10	1826-0411	0		IC: TIMER CMOS	04713	MC14536BCP
A14U11	1820-1956	8	7	IC: QUAD LCH CMOS COM CLOCK	0192B	CD4042BE
A14U12	1820-1956	8		IC: QUAD LCH CMOS COM CLOCK	0192B	CD4042BE
A14U13	1820-2566	8	1	IC: BFR CMOS QUAD LINE DRIVER	27014	MM74C240N
A14U14	1826-0728	2		IC: PRECISION GEN. PURPOSE REG.	28480	SG1532J
A14U15	1820-1745	3	1	IC: QUAD NOR GATE CMOS 2-INPUT	04713	MC14001BCP
A14U16	1820-2576	0	3	IC: QUAD NAND GATE CMOS 2-INPUT	04713	MC14011BCL
A14U17	1820-2576	0		IC: QUAD NAND GATE CMOS 2-INPUT	04713	MC14011BCL
A14U18	1820-0939	5		IC: FF CMOS D-TYPE DUAL	0192B	CD4013AF
A14U19	1820-2576	0		IC: QUAD NAND GATE CMOS 2-INPUT	04713	MC14011BCL
A14U20	1820-1960	4	1	IC: DUAL NAND GATE CMOS 4-INPUT	04713	MC14012BCP
A14U21	1826-0667	8	1	IC: OP AMP LOW-BIAS H-IMPD	27014	LF351N
A14U22	1820-1977	3	2	IC: ECL OSCILLATOR	04713	MC12061P
A14U23	1820-3008	3	1	IC: OSCILLATOR	04713	MM74HCU04N
A14U24	1826-0712	4	2	IC: OP AMP LOW-BIAS H-IMPD	27014	LF353N
A14U25	1826-0138	8	1	IC: GP QUAD COMPARATOR 14 PIN DIP	01295	LM339N
A14U26	1820-1956	8		IC: QUAD LCH CMOS COM CLOCK	0192B	CD4042BE
A14U27	1820-1956	8		IC: QUAD LCH CMOS COM CLOCK	0192B	CD4042BE
A14U28	1820-1956	8		IC: QUAD LCH CMOS COM CLOCK	0192B	CD4042BE
A14U29	1820-1956	8		IC: QUAD LCH CMOS COM CLOCK	0192B	CD4042BE
A14U30	1820-1956	8		IC: QUAD LCH CMOS COM CLOCK	0192B	CD4042BE

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	CD	Qty	Description	Mfr Code	Mfr Part Number
A14U31	1820-1420	1	1	IC: CNTR TTL LS DIV-BY-12 ASYNC	01295	SN74LS92N
A14U32	1820-1478	9	1	IC: CNTR TTL LS BIN ASYNC	01295	SN74LS93N
A14U33	1828-0508	6	1	IC: 10-BIT D/A CONVERTER	24355	AD561JD
A14U34	1820-1441	6	5	IC: TTL 4-BIT FULL ADDER	01295	SN74LS283N
A14U35	1820-1441	6		IC: TTL 4-BIT FULL ADDER	01295	SN74LS283N
A14U36	1820-1441	6		IC: TTL 4-BIT FULL ADDER	01295	SN74LS283N
A14U37	1820-1441	6		IC: TTL 4-BIT FULL ADDER	01295	SN74LS283N
A14U38	1820-1441	6		IC: TTL 4-BIT FULL ADDER	01295	SN74LS283N
A14U39	1820-1197	9	1	IC: QUAD NAND GATE CMOS 2-INPUT	01295	SN74LS00N
A14U40	1826-0779	3	1	IC: DUAL 4-CHANNEL MULTIPLEXER	24355	AD7502JN
A14U41	1826-0735	1	3	IC: OP AMP H-SLEW-RATE	34371	HA3-2507-5
A14U42	1826-1071	0	1	IC: OP AMP	28480	1826-1071
A14U43	1818-1574	1	1	IC: NMOS 32768 (32K) ROM 450-NS 3-S	55576	SYP2332 MASKED
A14U44	1820-1730	6	3	IC: FF TTL LS D-TYPE POS-EDGE TRIG	01295	SN74LS273N
A14U45	1820-1195	7	1	IC: FF TTL LS D-TYPE POS-EDGE TRIG	01295	SN74LS175N
A14U46	1820-1730	6		IC: FF TTL LS D-TYPE POS-EDGE TRIG	01295	SN74LS273N
A14U47	1820-1730	6		IC: FF TTL LS D-TYPE POS-EDGE TRIG	01295	SN74LS273N
A14U48	1820-1112	8	2	IC: FF TTL LS D-TYPE POS-EDGE TRIG	01295	SN74LS74AN
A14U49	1820-1199	1		IC: INV TTL LS HEX 1-INPUT	01295	SN74LS04N
A14U50	1820-1112	8		IC: FF TTL LS D-TYPE POS-EDGE TRIG	01295	SN74LS74AN
A14U51	1826-0712	4	2	IC: OP AMP LOW-BIAS H-IMPD	27014	LF353N
A14U52	1826-0735	1		IC: OP AMP H-SLEW-RATE	34371	HA3-2507-5
A14U53	1826-0735	1		IC: OP AMP H-SLEW-RATE	34371	HA3-2507-5
A14XU6	1200-0654	6	1	SOCKET-IC 40-CONT	28480	1200-0654
A14XU32	1200-0638	5	1	SOCKET-IC 14 PIN	28480	1200-0638
A14Y1	0410-1180	0	1	CRYSTAL 4.000 MHZ	28480	0410-1180
A14Y2	0410-1866	9	1	CRYSTAL 4.194304 MHZ	28480	0410-1866
A14Y3	0410-1327	9	1	CRYSTAL 6.144 MHZ	28480	0410-1327
A14 MISCELLANEOUS PARTS						
	1200-0666	9	3	TRANSISTOR SOCKET 3-CONT	28480	1200-0666
	1251-6856	0	1	CONNECTOR 18-PIN M POST TYPE	28480	1251-6856

See introduction to this section for ordering information.

* Indicates factory selected value

Reference Designator	HP Part Number	⊘	Qty	Description	Mfr Code	Mfr Part Number
MISC. AND CHASSIS PARTS						
W5	04935-00002	6	1	SHIELD-ALUM.	28480	04935-00002
	04935-00007	1	1	BATTERY INSULATOR	28480	04935-00007
	04935-60009	9	1	CABLE ASSEMBLY-COAX	28480	04935-60009
	04935-60011	3	1	BATTERY ASSY (OPT 001 & 003)	28480	04935-60011
W3	04935-60019	2	2	CABLE SHIELDED	28480	04935-60019
	04935-90018	5	1	INSTRUCTION SUMMARY CARD	28480	04935-90018
	04935-90023	6	1	OPERATING & SERVICE MANUAL	28480	04935-90023
	0340-0949	2	3	INSULATOR-XSTR THRM-CNDCT	28480	0340-0949
	0370-1089	2	1	KNOB-BASE 1/2 JGK .125-IN-ID	28480	0370-1089
	0370-1091	6	1	KNOB-BASE 1/2 JGK .25-IN-ID	28480	0370-1091
	0403-0294	0	2	SPACER SNAP-IN	28480	0403-0294
	0460-0880	0	2	TAPE-INDUSTRIAL .25	28480	0460-0880
	0460-1601	5	2	TAPE-INDUSTRIAL (FOAM)	28480	0460-1601
T1 T2 T3	0590-0076	1	3	NUT-HEX 4-40	28480	0590-0076
	1258-0141	8	3	JUMPER-REM. (OPT 001 & 003)	28480	1258-0141
	1400-0510	8	1	CLAMP-CABLE (OPT. 001 & 003)	28480	1400-0510
	1400-1076	3	2	BATTERY HOLDER	28480	1400-1076
	1420-0284	5	2	BATTERY 15.6V	28480	1420-0284
	1420-0284	5	1	BATTERY 15.6V	28480	1420-0284
	1420-0285	6	1	BATTERY 6V	28480	1420-0285
	1510-0076	4	2	BINDING POST SGL SGL-TUR JGK	28480	1510-0076
	1540-0835	6	1	CARRYING CASE	28480	1540-0835
	F1	2110-0012	4	1	FUSE .5A 250V (120 VAC OPERATION)	28480
F2	2110-0004	3	1	FUSE .25A 250V (220 VAC OPERATION)	28480	2110-0004
	2200-0143	0	3	SCREW-MACH 4-40 .375 IN-LNG	00000	ORDER BY DSCRPTN
	2200-0521	8	2	SCREW-MACHINE 4-40	00000	ORDER BY DSCRPTN
	2260-0012	8	3	NUT-HEX-W/LKWR 4-40 .094	00000	ORDER BY DSCRPTN
	2360-0117	6	3	SCREW-MACH 6-32 .375 IN-LNG	00000	ORDER BY DSCRPTN
	2360-0370	3	6	SCREW-MACHINE 6-32	00000	ORDER BY DSCRPTN
	2420-0023	1	2	NUT-HEX W-LCK WSHR	00000	ORDER BY DSCRPTN
	2510-0103	9	4	SCREW-MACH 8-32 .375 IN-LNG	00000	ORDER BY DSCRPTN
	2520-0014	2	4	SCREW-MACH 8-32 4. IN-LNG	00000	ORDER BY DSCRPTN
	2950-0043	7	1	NUT-HEX 3/8-32	28480	2950-0043
	2950-0087	0	2	NUT-HEX-DBL-CHAM 3/8-32	00000	ORDER BY DSCRPTN
	3050-0001	1	4	WASHER-FL MTLN NO. 8	28480	3050-0001
	3050-0067	9	2	WASHER-FL MTLN 5/16 .375	28480	3050-0067
	3050-0100	1	2	WASHER-FL MTLN NO. 6	28480	3050-0100
	3050-1114	3	1	NYLON WASHER	28480	3050-1114
5041 - 2537 5041 - 2536 USE IN C. No. 2 410-70	5040-4467	2	4	SPACER, SHORT, PLASTIC	28480	5040-4467
	5040-4468	3	4	SPACER, LONG, PLASTIC	28480	5040-4468
	5040-4469	4	1	COVER, FRONT	28480	5040-4469
	5040-4470	7	1	HANDLE, CASE	28480	5040-4470
	5040-4471	8	2	FOOT-REAR	28480	5040-4471
	5040-4475	2	1	CASE-TOP HALF	28480	5040-4475
	5040-4476	3	1	CASE-BOTTOM HALF	28480	5040-4476
	5041-6750	2	4	FOOT-BUMPER	28480	5041-6750
5060-7159	7	1	PWR CORD STRAP ASSY	28480	5060-7159	
W2	7120-1155	1	1	LABEL-WARNING	28480	7120-1155
	7120-2388	4	1	PLATE-IDENT	28480	7120-2388
	7120-4184	2	1	LABEL-CAP, COVER	28480	7120-4184
	7120-5370	0	2	LABEL-INFO, HANDLE	28480	7120-5370
	7205-0356	2	1	SUPPORT-ROD	28480	7205-0356
	8120-3126	5	1	CABLE-REC-TRAN INTERCONNECT	28480	8120-3126
	8120-1521	6	1	CABLE ASSY 18AWG 3-CNDCT	28480	8120-1521
	8120-3126	1	1	JUMPER-CABLE ASSY	28480	8120-3126

See introduction to this section for ordering information.
 * Indicates factory selected value

SECTION VII MANUAL CHANGES

7-1. INTRODUCTION

7-2. This section contains information to backdate this manual for instruments with serial prefix numbers lower than the serial prefix listed on the title page.

7-3. MANUAL CHANGES

7-4. Using the information provided, this manual can be corrected so that it applies to any version or configuration of the 4935A. To adapt this manual to an earlier instrument, refer to Table 7-1 and make all of the manual backdating changes listed opposite your instrument serial prefix number. Changes are listed in serial prefix order.

7-5. If your instrument's serial number or prefix number is not listed on the title page of this manual or in Table 7-1, it may be documented in a yellow MANUAL CHANGE SHEET supplement.

Table 7-1. Manual Changes

Instrument Changes		Assembly Changes			
Instrument Serial No.	Make Changes	Assy. Design.	Description	Instrument Serial No.	Make Changes
2155A 2204A	1-15	A2	Switchboard Battery Charger Transmitter Receiver	2203A	2,1
2206A	2-15	A5		2203A	2,1
2207A	4-15	A4		2204A	4,3,2,1
2208A	5-15	A3		2207A	6,5,4,3,2,1
2233A	6-15				
2247A	7-15				
2248A	8,10-15				
2305A	10-15				
2310A	9-15				
2314A	11-15				
2351A	11-15				
2414A	12-15				
2437A	13-154				
2512A	14,15				
	15				

fuse CHANGE →

7-6. MANUAL CHANGE INSTRUCTIONS

CHANGE 1

- Page 6-9, Table 6-3. Replaceable Parts (A2 Switchboard).
Add: A2J5, HP Part No. 1251-5063, CONNECTOR.
Change: A2 to HP Part No. 04935-60002, SWITCH BOARD (all units), Mfr Code 28480, Mfr Part No. 04935-60002.
- Change: A2J2 to HP Part No. 1251-5063, CONNECTOR PIN
- Page 6-10, Table 6-3. Replaceable Parts (A2 Switchboard).
Change: A2TP3 to HP Part 0360-0124, TEST PIN.
Change: A2TP4 to HP Part 0360-0124, TEST PIN.

CHANGE 1 (Cont'd)

- Page 6-20, Table 6-3. Replaceable Parts (A14 Transmitter Board).
Add: HP Part No. 1251-5063, CONNECTOR.
- Page 6-21, Table 6-3. Replaceable Parts (A5 Charger Board).
Add: A5CR13, HP Part No. 1901-0050, DIODE-SWITCHING.
Delete: A5Q8, HP Part No. 1853-0036, TRANSISTOR-PNP.
Delete: A5R40, HP Part No. 0757-0280, RESISTOR 1K.
- Page 6-34, Table 6-3. Replaceable Parts (A14 Transmitter Board).
Add: HP Part No. 1251-5063, CONNECTOR.
- Page 6-35, Table 6-3. Replaceable Parts (A14 Transmitter Board).
Add: A14W4, HP Part No. 04935-60010, SHIELDED CABLE.
Change: A14W3 to HP Part No. 04935-60010, WIRE.
- Page 8-76, A2, Switchboard Component Locator.
Replace with Figure 7-1.
- Page 8-86, A5, Battery Charger Board Component Locator.
Replace with Figure 7-2.
- Page 8-87, A5 Battery Charger Board Schematic
Replace with partial schematic shown in Figure 7-3.

CHANGE 2

- Page 6-18, Table 6-3. Replaceable Parts (A4 Transmitter Board).
Add: A4JW5, HP Part No. 5020-5252, WIRE.
Add: A4JW6, HP Part No. 5020-5252, WIRE.
- Page 6-32, Table 6-3. Replaceable Parts (A14 Transmitter Board).
Add: A14JW5, HP Part No. 5020-5252, WIRE.
Add: A14JW6, HP Part No. 5020-5252, WIRE.
- Page 8-82/83, A14 and A4 Transmitter Board Component Locators.
Replace with Figure 7-4.
- Page 8-84, A14 and A4 Transmitter Board Assembly Schematics.
Modify as shown in Figure 7-5.

CHANGE 3

- Page 6-17, Table 6-3. Replaceable Parts List (A4 Transmitter Board).
Delete: A4C72, HP Part No. 0180-1746 CAPACITOR, 15 μ F 20V.
Change: A4, TRANSMITTER BOARD, to HP Part No. 04935-60003.
- Page 6-19, Table 6-3. Replaceable Parts List (A4 Transmitter Board).
Change: A4R70 to HP Part No. 0757-0421, RESISTOR 823 OHM 1%.
- Page 6-20, Table 6-3. Replaceable Parts List (A14 Transmitter Board).
Delete: HP Part No. 1251-6947, CONNECTOR-SNGL CONT PIN.
Add: HP Part No. 1251-6857, CONNECTOR-2 PIN POST TYPE.
Add: HP Part No. 1251-4259, TEST PIN.
Add: HP Part No. 1200-0564, SOCKET, 8 PIN.
Change: A4U42 to HP Part No. 1826-0735, IC OP AMP.
- Page 6-31, Table 6-3. Replaceable Parts List (A14 Transmitter Board).
Delete: A14C72, HP Part No. 0180-1746, CAPACITOR 15 μ F 20V.
Change: A14 board number to HP Part No. 04935-60007.
- Page 6-33, Table 6-3. Replaceable Parts List (A14 Transmitter Board).
Change: A14R70 to HP Part No. 0757-0420, RESISTOR 750 OHM 1%.
- Page 6-34, Table 6-3. Replaceable Parts List (A14 Transmitter Board).
Delete: HP Part No. 1251-6947, CONNECTOR-SNGL CONT PIN.
Add: HP Part No. 1251-6857, CONNECTOR-2 PIN POST TYPE.
Add: HP Part No. 1251-4259, TEST PIN.
Add: HP Part No. 1200-0564, SOCKET, 8 PIN.
Change: U42 to HP Part No. 1826-0735, IC OP AMP.
- Pages 8-82/85, A14 and A4 Transmitter Boards.
Add: PC board number 04935-60003.
Add: PC board number 04935-60007.
Delete: PC board number 04935-60103.
Delete: PC board number 04935-60107.

CHANGE 4

Page 6-13, Table 6-3. Replaceable Parts.

Change: A3R50 to HP Part No. 0757-0159, RESISTOR 1K 1%.

Page 6-17, Table 6-3. Replaceable Parts.

Delete: A4C73, HP Part No. 0160-4833, CAPACITOR .022 μ F \pm 10%.

Delete: A4C74, HP Part No. 0160-4835, CAPACITOR .1 μ F \pm 10%.

Delete: A4C75, HP Part No. 0180-0291, CAPACITOR 1 μ F \pm 10%.

Page 6-18, Table 6-3. Replaceable Parts.

Change: A4R36 to HP Part No. 0757-0280, RESISTOR 1K 1%.

Page 6-31, Table 6-3. Replaceable Parts.

Delete: A14C73, HP Part No. 0160-4833, CAPACITOR .022 μ F \pm 10%.

Delete: A14C74, HP Part No. 0160-4835, CAPACITOR .1 μ F \pm 10%.

Delete: A14C75, HP Part No. 0180-0291, CAPACITOR 1 μ F \pm 10%.

Page 6-32, Table 6-3. Replaceable Parts.

Change: A14R36 to HP Part No. 0757-0416, RESISTOR 511 OHM 1%.

Page 8-82, A14 Transmitter Board Component Locator.

Replace with Figure 7-6.

Page 8-83, A4 Transmitter Board Component Locator.

Replace with Figure 7-7.

Page 8-83, A4 Transmitter Board Assembly sheet 1 of 2.

Delete: A4C75, the 1 μ F CAPACITOR, on the trace between U6 pin 39 and R12.

Page 8-85, A4 Transmitter Board Assembly (sheet 2 of 2).

Modify as shown in Figure 7-8.

CHANGE 5

Paragraph 4-15, Table 4-3. Receiver Accuracy Test Table.

For instruments with serial prefix 2207A and earlier, the level tolerance at +11 dBm is 11.6 to 7.0 dBm. At -40 dBm, the level tolerance is -39.1 to -44.0 dBm.

Paragraph 4-15, Table 4-4. Abbreviated Receiver Accuracy Test Table.

For instruments with serial prefix 2207A and earlier, the level tolerance is -4.0 to +0.6 dBm.

Page 6-11, Table 6-3. Replacement Parts (A3 Receiver Board).

Change: A3C60 to HP Part No. 0160-3291, CAPACITOR 1200 pF 1%.

Change: A3C71 to HP Part No. 0160-5257, CAPACITOR 1100 pF 1%.

Page 6-12, Table 6-3. Replacement Parts (A3 Receiver Board).

Add: A3C128, HP Part No. 0160-0576, CAPACITOR .1 μ F.

Add: A3C129, HP Part No. 0180-0374, CAPACITOR 10 μ F.

Add: A3C130, HP Part No. 0180-0374, CAPACITOR 10 μ F.

Add: A3C138, HP Part No. 0160-0576, CAPACITOR .1 μ F.

Delete: A3C160, hand selected capacitor.

Page 6-13, Table 6-3. Replacement Parts (A3 Receiver Board).

Add: A3CR18, HP Part No. 1901-0376, DIODE-GEN.

Add: A3CR19, HP Part No. 1901-0376, DIODE-GEN.

Add: A3CR20, HP Part No. 1901-0376, DIODE-GEN.

Add: A3CR21, HP Part No. 1901-0376, DIODE-GEN.

Add: A3CR22, HP Part No. 1901-0376, DIODE-GEN.

Add: A3CR23, HP Part No. 1901-0376, DIODE-GEN.

Add: A3CR24, HP Part No. 1901-0376, DIODE-GEN.

Add: A3CR25, HP Part No. 1901-0376, DIODE-GEN.

Add: A3J2, HP Part No. 1250-0257, CONNECTOR.

Add: A3J3, HP Part No. 1250-0257, CONNECTOR.

Change: A3JU7 to HP Part No. 1200-0473, CONNECTOR.

Add: A3R48 to HP Part No. 0698-8638, RESISTOR 3.16K 1%.

Add: A3R49 to HP Part No. 0698-6445, RESISTOR 6.838K 1%.

Page 6-14, Table 6-3. Replacement Parts (A3 Receiver Board).

Change: A3R62 to HP Part No. 0699-0666, RESISTOR 1.705K 1%.

Change: A3R63 to HP Part No. 0699-0666, RESISTOR 1.705K 1%.

Change: A3R72A to HP Part No. 0699-0665, RESISTOR 1.248K .1%.

Change: A3R73 to HP Part No. 0699-0669, RESISTOR 3.288K .1%.

CHANGE 5 (Cont'd)

- Change: A3R74 to HP Part No. 0699-0669, RESISTOR 3.288K 1%.
- Change: A3R91 to HP Part No. 0699-0665, RESISTOR 1.248K .1%.
- Change: A3R122 to HP Part No. 0698-3268, RESISTOR 11.5K .1%.
- Change: A3R123 to HP Part No. 0757-0419, RESISTOR 681 OHM 1%.
- Page 6-15, Table 6-3. Replacement Parts (A3 Receiver Board).
- Delete: A3TP21-25, HP Part No. 1251-6947, TEST PIN.
- Delete: A3R206, HP Part No. 1810-0369, RESISTOR, NETWORK 100K x 5.
- Delete: A3R207, HP Part No. 0698-6445, RESISTOR 6.838K .1%.
- Add: A3R130, HP Part No. 0757-0442, RESISTOR 10K 1%.
- Add: A3R176, HP Part No. 0698-8638, RESISTOR 3.16K .1%.
- Add: A3R177, HP Part No. 0698-6445, RESISTOR 6.838K .1%.
- Change: A3R129 to HP Part No. 0698-6362, RESISTOR 1K .1%.
- Change: A3R146 to HP Part No. 0698-6446, RESISTOR 2.162K .1%.
- Change: A3R147 to HP Part No. 0698-6445, RESISTOR 6.838K .1%.
- Change: A3TP2-7 to HP Part No. 0360-0124, TEST PIN.
- Change: A3TP9-15 to HP Part No. 0360-0124, TEST PIN.
- Page 6-16, Table 6-3. Replacement Parts (A3 Receiver Board).
- Add: A3U49, HP Part No. 1826-0735, IC HA 2507-5.
- Page 6-24, Table 6-3. Replacement Parts (A3 Receiver Board).
- Change: A13C60 to HP Part No. 0160-3291, CAPACITOR 1200 pF 1%.
- Change: A13C71 to HP Part No. 0160-5257, CAPACITOR 1100 pF 1%.
- Page 6-25, Table 6-3. Replacement Parts (A13 Receiver Board).
- Add: A13C128, HP Part No. 0160-0576, CAPACITOR .1 μ F 10%.
- Add: A13C129, HP Part No. 0180-0374, CAPACITOR 10 μ F 10%.
- Add: A13C130, HP Part No. 0180-0374, CAPACITOR 10 μ F 10%.
- Add: A13C138, HP Part No. 0160-0576, CAPACITOR .1 μ F 10%.
- Delete: A13C160, hand selected capacitor.
- Page 6-26, Table 6-3. Replacement Parts (A13 Receiver Board).
- Add: A13CR18, HP Part No. 1901-0376, DIODE-GEN.
- Add: A13CR19, HP Part No. 1901-0376, DIODE-GEN.
- Add: A13CR20, HP Part No. 1901-0376, DIODE-GEN.
- Add: A13CR21, HP Part No. 1901-0376, DIODE-GEN.
- Add: A13CR22, HP Part No. 1901-0376, DIODE-GEN.
- Add: A13CR23, HP Part No. 1901-0376, DIODE-GEN.
- Add: A13CR24, HP Part No. 1901-0376, DIODE-GEN.
- Add: A13CR25, HP Part No. 1901-0376, DIODE-GEN.
- Add: A13J2, HP Part No. 1250-0257, CONNECTOR.
- Add: A13J3, HP Part No. 1250-0257, CONNECTOR.
- Change: A13JU7 to HP Part No. 1251-0473, CONNECTOR.
- Page 6-27, Table 6-3. Replacement Parts (A13 Receiver Board).
- Change: A13R48 to HP Part No. 0698-8638, RESISTOR 3.16K .1%.
- Change: A13R49 to HP Part No. 0698-6445, RESISTOR 6.838K 1%.
- Change: A13R62 to HP Part No. 0699-0666, RESISTOR 1.705K 1%.
- Change: A13R63 to HP Part No. 0690-0666, RESISTOR 1.705K 1%.
- Change: A13R72A to HP Part No. 0699-0665, RESISTOR 1.248K .1%.
- Change: A13R73 to HP Part No. 0699-0669, RESISTOR 3.288K 1%.
- Change: A13R74 to HP Part No. 0699-0669, RESISTOR 3.288K 1%.
- Change: A13R91 to HP Part No. 0699-0665, RESISTOR 1.248K .1%.
- Page 6-28, Table 6-3. Replacement Parts (A13 Receiver Board).
- Add: A13R130, HP Part No. 0757-0442, RESISTOR 10K 1%.
- Add: A13R176, HP Part No. 0698-8638, RESISTOR 3.16K .1%.
- Add: A13R177, HP Part No. 0698-6445, RESISTOR 6.838K .1%.
- Change: A13R129 to HP Part No. 0698-6362, RESISTOR 1K .1%.
- Change: A13R122 to HP Part No. 0698-3268, RESISTOR 11.5K .1%.
- Change: A13R123 to HP Part No. 0757-0419, RESISTOR 681.1 OHM .1%.
- Change: A13R146 to HP Part No. 0698-6446, RESISTOR 2.162K .1%.
- Change: A13R147 to HP Part No. 0698-6445, RESISTOR 6.838K .1%.
- Page 6-29, Table 6-3. Replacement Parts (A13 Receiver Board).
- Delete: A13TP21-25, HP Part No. 1251-6947, TEST PIN.

CHANGE 5 (Cont'd)

Delete: A13R206, HP Part No. 1810-0369, RESISTOR, NETWORK 100K x 5.
 Delete: A13R207, HP Part No. 0698-6445 RESISTOR 6.838K .1%.
 Add: A13U49, HP Part No. 1826-0735, IC HA 2507-5.
 Change: A13TP-7 to HP Part No. 0360-0124, TEST PIN.
 Change: A13TP9-15 to HP Part No. 0360-0124, TEST PIN.
 Page 6-33, Table 6-3. Replacement Parts (A13 Receiver Board).
 Change: A14R88 to HP Part No. 0698-8824, RESISTOR 10K .1%.
 Change: A14R89 to HP Part No. 0698-8824, RESISTOR 10K .1%.
 Page 8-78, A13 PAR Receiver Component Locator.
 Replace with Figure 7-9.
 Page 8-79, A3 Receiver Component Locator.
 Replace with Figure 7-10.
 Page 8-79, A3 Receiver Board Assembly, Sheet 1 of 2.
 Replace with Figure 7-11.
 Page 8-81, A3 Receiver Board Assembly, Sheet 2 of 2.
 Replace with Figure 7-12.

CHANGE 6

Page 6-17, Table 6-3. Replaceable Parts.
 Replace A4 with 04935-60103 Transmitter Board, MFG CODE 28480, MFG P/N 04935-60103
 Page 6-18, Table 6-3. Replaceable Parts.
 Replace A4CR17 with 1901-0731 Diode-pwr rect 400V 1A, CD=4, MFG CODE 03508, MFG P/N A15F.
 Replace A4CR18 with 1901-0731 Diode-pwr rect 400V 1A, CD=4, MFG CODE 03508, MFG P/N A15F.
 Add A4CR21 1901-0754 Diode-pwr rect 50V 5A, CD=4, MFG CODE 03508, MFG P/N A15F.
 Add A4CR22 1901-0754 Diode-pwr rect 50V 5A, CD=4, MFG CODE 03508, MFG P/N A15F.
 Page 6-31, Table 6-3. Replaceable Parts.
 Replace A14 with 04935-60107 Transmitter Board, MFG CODE 28480, MFG P/N 04935-60107.
 Page 6-32, Table 6-3. Replaceable Parts.
 Replace A14CR17 with 1901-0731 Diode-pwr rect 400V 1A, CD=4, MFG CODE 03508, MFG P/N A15F.
 Replace A14CR18 with 1901-0731 Diode-pwr rect 400V 1A, CD=4, MFG CODE 03508, MFG P/N A15F.
 Add A14CR21 1901-0754 Diode-pwr rect 50V 5A, CD=4, MFG CODE 03508, MFG P/N A15F.
 Add A14CR22 1901-0754 Diode-pwr rect 50V 5A, CD=4, MFG CODE 03508, MFG P/N A15F.

CHANGE 7

Page 6-6, Figure 6-2. Exploded View Assemblies and Cables (Cont'd)
 Replace Item 29 with Rear Panel Assy (loaded) 04935-60008.
 Page 6-12, Table 6-3. Replaceable Parts.
 Delete A3C202 Hand Selected Capacitor.
 Page 6-13, Table 6-3. Replaceable Parts.
 Replace A3CR8 with 1901-0376 Diode-Gen prp, CD=6, MFG CODE 28480, MFG P/N 1901-0376.
 Replace A3CR9 with 1901-0376 Diode-Gen prp, CD=6, MFG CODE 28480, MFG P/N 1901-0376.
 Replace A3CR11 with 1901-0376 Diode-Gen prp, CD=6, MFG CODE 28480, MFG P/N 1901-0376.
 Replace A3CR12 with 1901-0376 Diode-Gen prp, CD=6, MFG CODE 28480, MFG P/N 1901-0376.
 Replace A3CR15 with 1901-0376 Diode-Gen prp, CD=6, MFG CODE 28480, MFG P/N 1901-0376.
 Replace A3CR16 with 1901-0376 Diode-Gen prp, CD=6, MFG CODE 28480, MFG P/N 1901-0376.

CHANGE 7 (Cont'd)

Replace A3R50 with 0757-0159 Resistor 1K 1% .5 W, CD=5, MFG CODE 28480, MFG P/N 0757-0159.

Replace A3R51 with 0757-0280 Resistor 1K 1% .125 W, CD=3, MFG CODE 24546, MFG P/N C4-1/8-TO-1001-F.

Page 6-14, Table 6-3. Replaceable Parts.

Add A3R59 0698-3156 Resistor 14.7K 1% .125 W, CD=2, MFG CODE 24546, MFG P/N C4-1/8-TO-1472-F.

Replace A3R62 with 0698-3223 Resistor 1.24K 1% .125 W, CD=4, MFG CODE 24546, MFG P/N C4-1/8-TO-1241-F.

Replace A3R63 with 0698-3223 Resistor 1.24K 1% .125 W, CD=4, MFG CODE 24546, MFG P/N C4-1/8-TO-1241-F.

Replace A3R73 with 0757-0431 Resistor 2.43K 1% .125 W, CD=6, MFG CODE 24546, MFG P/N C4-1/8-TO-2431-F.

Replace A3R74 with 0698-3223 Resistor 1.24K 1% .125 W, CD=, MFG CODE 24546, MFG P/N C4-1/8-TO-2431-F.

Page 6-15, Table 6-3. Replaceable Parts.

Delete A3R208 5020-5252 Wire 1/2 in, CD=3, MFG CODE 28480, MFG P/N 5020-5252.

Page 6-23, Table 6-3. Replaceable Parts.

Replace A6 with 04935-60008 Rear Panel Assembly, CD=8, MFG CODE 28480, MFG P/N 04935-60008.

Replace A6T1 with 9100-2676 Transformer-AC pwr, CD=3, MFG CODE 28480, MFG P/N 9100-2676.

Add 7100-0389 Transformer Cover 62-DP, CD=9, MFG CODE 28480, MFG P/N 7100-0389.

Page 6-26, Table 6-3. Replaceable Parts.

Delete A13C202 Hand Selected Capacitor.

Replace A13CR8 with 1901-0376 Diode-Gen prp, CD=6, MFG CODE 28480, MFG P/N 1901-0376.

Replace A13CR9 with 1901-0376 Diode-Gen prp, CD=6, MFG CODE 28480, MFG P/N 1901-0376.

Replace A13CR10 with 1901-0376 Diode-Gen prp, CD=6, MFG CODE 28480, MFG P/N 1901-0376.

Replace A13CR12 with 1901-0376 Diode-Gen prp, CD=6, MFG CODE 28480, MFG P/N 1901-0376.

Replace A13CR15 with 1901-0376 Diode-Gen prp, CD=6, MFG CODE 28480, MFG P/N 1901-0376.

Replace A13CR16 with 1901-0376 Diode-Gen prp, CD=6, MFG CODE 28480, MFG P/N 1901-0376.

Page 6-27, Table 6-3. Replaceable Parts.

Replace A13R50 with 0757-0159 Resistor 1K 1% .5 W, CD=5, MFG CODE 28480, MFG P/N 0757-0159.

Replace A13R51 with 0757-0280 Resistor 1K 1% .125 W, CD=3, MFG CODE 24546, MFG P/N C4-1/8-TO-1001-F.

Page 6-14, Table 6-3. Replaceable Parts.

Add A13R59 0698-3156 Resistor 14.7K 1% .125 W, CD=2, MFG CODE 24546, MFG P/N C4-1/8-TO-1472-F.

Replace A13R62 with 0698-3223 Resistor 1.24K 1% .125 W, CD=4, MFG CODE 24546, MFG P/N C4-1/8-TO-1241-F.

Replace A13R63 with 0698-3223 Resistor 1.24K 1% .125 W, CD=4, MFG CODE 24546, MFG P/N C4-1/8-TO-1241-F.

Replace A13R73 with 0757-0431 Resistor 2.43K 1% .125 W, CD=6, MFG CODE 24546, MFG P/N C4-1/8-TO-2431-F.

Replace A13R74 with 0698-3223 Resistor 1.24K 1% .125 W, CD=6, MFG CODE 24546, MFG P/N C4-1/8-TO-2431-F.

Page 6-29, Table 6-3. Replaceable Parts.

Delete A13R208 5020-5252 Wire 1/2 in, CD=3, MFG CODE 28480, MFG P/N 5020-5252.

Page 6-34, Table 6-3. Replaceable Parts.

Replace A14U17 with 1826-0686 IC Gate CMOS NAND quad, CD=0, MFG CODE 04713, MFG P/N MC14011BCL.

CHANGE 7 (Cont'd)

Page 8-69, Figure 8-28. A13 Receiver Board Component Locator.
Delete C202, R208, and add R59 as shown in Figure 7-13.

Page 8-68, Figure 8-27. A3 Receiver Board Component Locator.
Delete C202, R208, and add R59 as shown in Figure 7-14.

Page 8-69, Figure 8-29. A13 Receiver Board Schematic Diagram (1 of 2).
Replace with partial schematic shown in Figure 7-15.

CHANGE 8

Page 6-14, Table 6-3. Replaceable Parts (Continued),
Change A3R81 to 0699-0567, RESISTOR 137K 1% .125W, CD=5, Mfr Code 28480,
Mfr P/N 0699-0567.

Page 6-17, Table 6-3. Replaceable Parts (Continued),
Change A4 to 04935-60203, TRANSMITTER BOARD (std unit only), Mfr Code 28480,
Mfr P/N 04935-60203.

Page 6-19, Table 6-3. Replaceable Parts (Continued),
Delete A4R97, 0757-0442, RESISTOR 10K 1% .125W, CD=9, Mfr Code 24546,
Mfr P/N C4-1/4-TO-1002-F.
Delete A4R98, 0757-0278, RESISTOR 1.78K 1% .125W, CD=9, Mfr Code 02273,
Mfr P/N CEA-993.
Delete A4R99, 0698-3157, RESISTOR 19.6K 1% .125W, CD=0, Mfr P/N CEA-993.
Delete A4R100, 0757-0428, RESISTOR 1.62K 1% .125W, CD=7, Mfr Code 02995,
Mfr P/N MF4C-1.
Change A4R80 to 0757-0420, RESISTOR 750K 1% .125W, CD=3, Mfr Code 24546,
Mfr P/N C4-1/8-TO-751-F.
Change A4R81 to 0757-0290, RESISTOR 6.19K 1% .125W, CD=5, Mfr Code 19701,
Mfr P/N MF4C1/8-TO-6191-F.

Page 6-20, Table 6-3. Replaceable Parts (Continued),
Delete A4U53, 1826-0735, IC OP AMP H-SLEW-RATE 8-DIP PKG, CD=1,
Mfr Code 34371, Mfr P/N HA3-2507-5.

Page 6-22, Table 6-3. Replaceable Parts (Continued),
Change 1205-0512 to 1205-0309, HEAT SINK SGL TO-220-CS, CD=9, Mfr Code 28480,
Mfr P/N 1205-0309.

Page 6-31, Table 6-3. Replaceable Parts (Continued),
Change A14 to 04935-60207, TRANSMITTER BOARD WITH PAR, CD=7,
Mfr Code 28480, Mfr P/N 04935-60207.

Page 6-33, Table 6-3. Replaceable Parts (Continued),
Delete A14R97, 0757-0442, RESISTOR 10K 1% .125W, CD=9, Mfr Code 24546,
Mfr P/N C4-1/4-TO-1002-F.
Delete A14R98, 0757-0278, RESISTOR 1.78K 1% .125W, CD=9, Mfr Code 02273,
Mfr P/N CEA-993.
Delete A14R99, 0698-3157, RESISTOR 19.6K 1% .125W, CD=0, Mfr Code 02273,
Mfr P/N CEA-993.
Delete A14R100, 0757-0428, RESISTOR 1.62K 1% .125W, CD=7, Mfr Code 02995,
Mfr P/N MF4C-1.
Change A14R80 to 0757-0420, RESISTOR 7509K 1% .125W, CD=3, Mfr Code 24546,
Mfr P/N C4-1/8-TO-751-F.
Change A14R81 to 0757-0290, RESISTOR 6.19K 1% .125W, CD=5, Mfr Code 19701,
Mfr P/N MF4C-1/8-TO-1626-F.

CHANGE 8 (Cont'd)

- Page 6-34, Table 6-3. Replaceable Parts (Continued),
Delete A14U53, 1826-0735, IC OP AMP H-SLEW-RATE 8-DIP-P PKG, CD=1,
Mfr Code 34371, Mfr P/N HA3-2507-5.
- Page 6-35, Table 6-3. Replaceable Parts (Continued),
Change 2200-0704 to 2200-0107, SCREW MACH 4-40 .375IN LG PAN HD POZI, CD=6,
Mfr Code 0000, Mfr P/N order by description.
- Page 8-72, Figure 8-31. A4 Transmitter Board Component Locator,
Replace with component locator shown in Figure 7-16.
- Page 8-73, Figure 8-32. A14 Transmitter Board Component Locator,
Replace with component locator shown in Figure 7-17.
- Page 8-75, Figure 8-34. A4 Transmitter Board Schematic Diagram (Sheet 2 of 2).
Replace with partial schematics shown in Figures 7-18 and 7-19.

CHANGE 9

With the exception of the Receiver Boards, all instruments with Serial Prefix 2305A follow the Component Locator and Schematics in the 4935A Operating and Service Manual with the Print Date OCT 1982 and the modifications defined in Change 8 of this Manual Change Section. The Receiver Boards for both standard (04935-60004) and Option 001 (04935-60006) units are the same as Receiver Boards with the 2208A Serial Prefix.

CHANGE 10**NOTE**

See Service Note 4935A-9 prior to replacing any of the parts below.

- Page 6-19, Table 6-3. Replaceable Parts,
Change A4R80 to 0757-0428, RESISTOR 1.62K 1% .125W, CD=1, Mfr Code 02995,
Mfr P/N MF4C-1.
Change A4R81 to 0757-0431, RESISTOR 2.43K 1% .125W, CD=6, Mfr Code 02995,
Mfr P/N MF4C-1.
Change A4R97 to 0698-3150, RESISTOR 2.37K 1% .125W, CD=0, Mfr Code 02995,
Mfr P/N MF4C-1.
Change A4R98 to 0757-0280, RESISTOR 1K 1% .125W, CD=3, Mfr Code 02273,
Mfr P/N CEA-993.
- Page 6-33, Table 6-3. Replaceable Parts,
Change A14R80 to 0757-0428, RESISTOR 1.62K 1% .125W, CD=1, Mfr Code 02995,
Mfr P/N MF4C-1.
Change A14R81 to 0757-0431, RESISTOR 2.43K 1% .125W, CD=6, Mfr Code 02995,
Mfr P/N MF4C-1.
Change A14R97 to 0698-3150, RESISTOR 2.37K 1% .125W, CD=0, Mfr Code 02995,
Mfr P/N MF4C-1.
Change A14R98 to 0757-0280, RESISTOR 1K 1% .125W, CD=3, Mfr Code 02273,
Mfr P/N CEA-993.
- Page 8-75, Figure 8-34. A4 Transmitter Board Schematic Diagram (Sheet 2 of 2),
Change the values of the following resistors located in the Output Select MUX and Power
Amplifier sections of the schematic.
Change R80 to 1.62K
Change R81 to 2.43K
Change R97 to 2.37K
Change R98 to 1K

CHANGE 11

Page 6-5, Figure 6-2, Exploded View Assembly and Cables, Change Item 13 to Insulator, binding posts, IIP 03770-50004.

Page 6-35(6-36 blank), Table 6-3, Replaceable Parts (Continued),
Change 04936-40001 to 03770-50004, INSULATOR, BINDING POSTS, CD = 2, Mfr Code 28480,
Mfr P/N 03770-50004.

CHANGE 12

Page 6-16, Table 6-3, Replaceable Parts
Change A3U20 to 1826-0741 IC Op Amp low bias, CD=4, MFG CODE 04713,
MFG P/N MC34002AG.

CHANGE 13

Page 6-16, Table 6-3, Replaceable Parts
Change A3U20 to 1826-0741 IC Op Amp low bias, CD=4, MFG CODE 04713,
MFG P/N MC34002AG.

Page 6-16, Table 6-3, Replaceable Parts
Add A13C48 0180-0374 Capacitor-fxd 10uf +10%, CD=3, MFG CODE 56289,
MFG P/N 150DI06X9020B2.

Page 6-16, Table 6-3, Replaceable Parts
Add A13CR10 1901-0376 Diode-Gen Prp 35V 50mA, CD=6, MFG CODE 28480,
MFG P/N 1901-0376.

Delete A13C203 0160-0576 Capacitor-fxd .1 uF +-20%, CD=5, MFG CODE 28480,
MFG P/N 0160-0576.

Delete A13C204 0160-0576 Capacitor-fxd .1 uF +-20%, CD=5, MFG CODE 28480,
MFG P/N 0160-0576.

Delete A13C205 0160-3824 Capacitor-fxd 3900 pF, CD=2, MFG CODE 05176,
MFG P/N HEW-249.

Delete A13CR28 0190-0050 Diode-switching 80V 200MA 2ns, CD=3, MFG CODE 02237
MFR P/N FDH 6308.

Delete A13CR29 0190-0050 Diode-switching 80V 200MA 2ns, CD=3, MFG CODE 02237
MFR P/N FDH 6308.

Delete A13CR30 0190-0050 Diode-switching 80V 200MA 2ns, CD=3, MFG CODE 02237
MFR P/N FDH 6308.

Delete A13CR 31 0190-0050 Diode-switching 80V 200MC 2ns, CD=3, MFG CODE 02237 MFR P/N FD 6308

Page 6-27, Table 6-3. Replaceable Parts

Add A1R61 0757-0465 Resistor 100K 1% .125W F TC=0+-100, CD=6. MFG CODE 24546
MFG P/N C4-1/8-TO-1003-F

Page 6-28, Table 6-3. Replaceable Parts

Delete A13R209 0757-0438 Resistor 5.11K 1% .125W, CD=3 MFG CODE 24546,
MFG P/N C4-1/8-TO-5111-F

Delete A13R210 0698-0085 Resistor 2.16K 1% .125W, ICD=1, MFG CODE 24546,
MFG P/N C4-1/8-TO-2161-F

Page 6-29, Table 6-3. Replaceable Parts

Change A13U20 to 1826-0741 IC-Op Amp low bias, CD=11, MFG CODE 2704,
MFG P/N LF351AH

Delete A13U57 1826-1189 IC-Op Amp low bias, CD=1 MFG CODE 28480,
MFG P/N 1826-1189


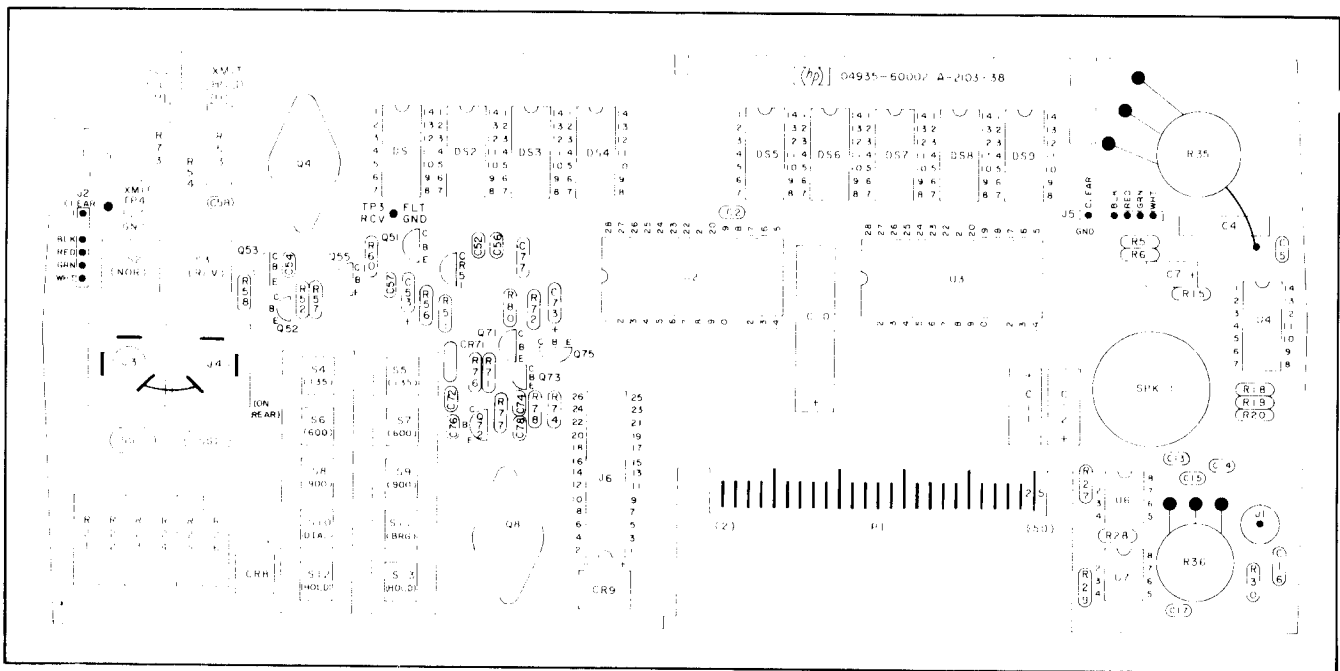


Figure 7-1. A2 Switch Board Component Locator

Page 8-68, Figure 8-28. A13 Receiver Board Component Locator
Change the Component Locator as shown below:

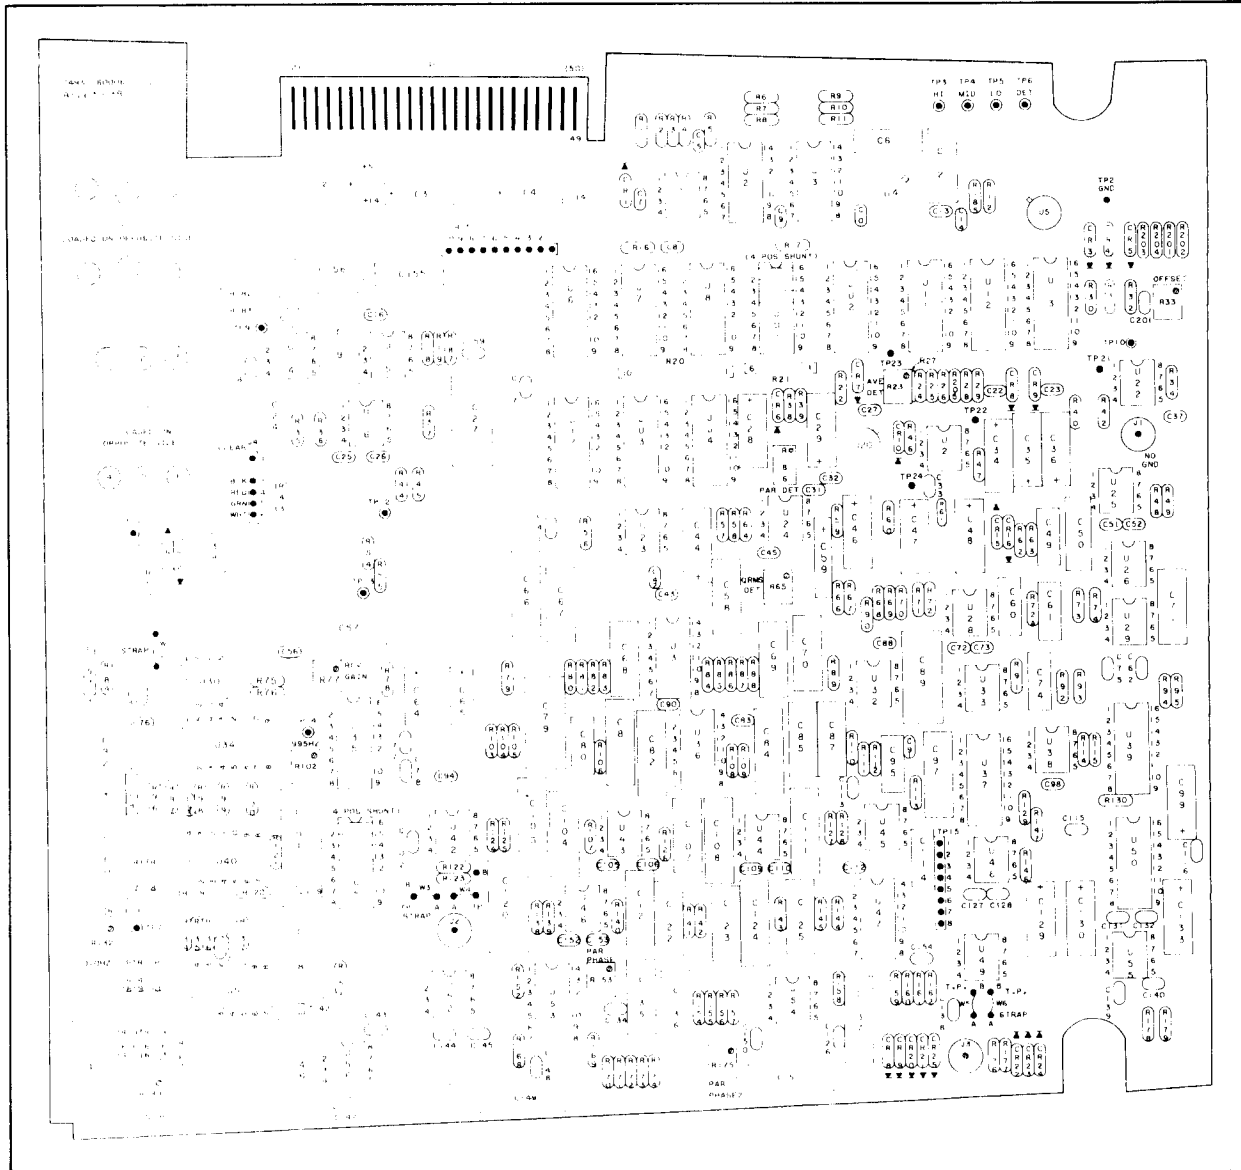

A13 P/AR Receiver Board Component Locator


Model 4935A

Page 8-69, Figure 8-29. A3 Receiver Board Schematic (A13)

Ground the case of A13C1, located in the upper left corner of the schematic.

Page 8-71, Figure 8-30. A3 Receiver Board Schematic (Page 2 of 2)

Change PAR (A13) section of schematic to the following:

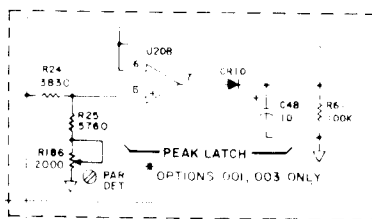

CHANGE 14

Page 6-17, Table 6-3. Replaceable Parts

Change A4CR7 to 1902-3214 DIODE-ZNR 16.2V, 2%, .4W, CD=6, MFG CODE 28480,
MFG P/N 1902-3214

Page 6-18, Table 6-3. Replaceable Parts

Change A4CR15 to 1902-3214 DIODE-ZNR 16.2V 2%, .4W, CD=6, MFG CODE 28480,
MFG P/N 1902-3214

Change A4CR23 to 1902-3214 DIODE-ZNR 16.2V, 2%, .4W, CD=6, MFG CODE 28480,
MFG P/N 1902-3214

Change A4CR25 to 1902-3105 DIODE-ZNR 5.62V, 2%, .4W, CD=4 MFG CODE 28480,
MFG P/N 1902-3105

Page 6-32, Table 6-3. Replaceable Parts

Change A14CR7 to 1902-3214 DIODE-ZNR 16.2V, 2%, .4W, CD=6, MFG CODE 28480,
MFG P/N 1902-3214

Change A14CR15 to 1902-3214 DIODE-ZNR 16.2V, 2%, .4W, CD=6, MFG CODE 28480,
MFG P/N 1902-3214

Change A14CR23 to 1902-3214 DIODE-ZNR 16.2V, 2%, .4W, CD=6, MFG CODE 28480,
MFG P/N 1902-3214

Change A14CR25 to 1902-3105 DIODE-ZNR 5.62V, 2%, .4W, CD=4 MFG CODE 28480,
MFG P/N 1902-3105

Page 6-35/36(blank). Table 6-3. Replaceable Parts

Change F1 to 2110-0065 FUSE FOR 100/120V INSTRUMENTS, .375A, CD=4,
MFG CODE 04492, MFG P/N 2110-0065

Change F1 to 2110-0296 FUSE FOR 220/240V INSTRUMENTS, .20A, CD=3,
MFG CODE 28480, MFG P/N 2110-0296

FUSE
CHANGE

Page 8-75. Figure 8-34. A4 Transmitter Board Schematic Diagram (sheet 2 of 2)

Change the following diode values:

- CR15 change to 16.2V
- CR25 change to 5.62V
- CR23 change to 16.2V
- CR7 change to 16.2V

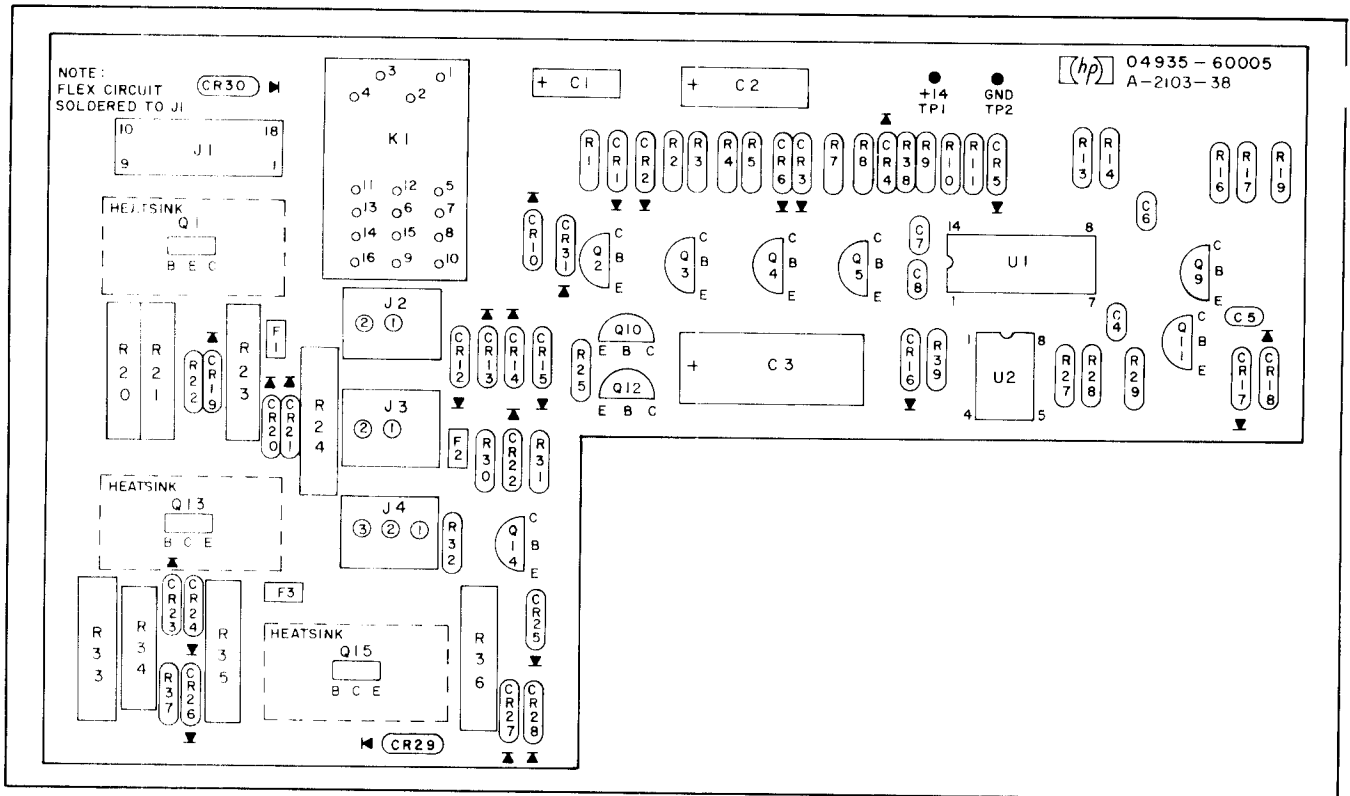


Figure 7-2. A5 Charger Board Component Locator

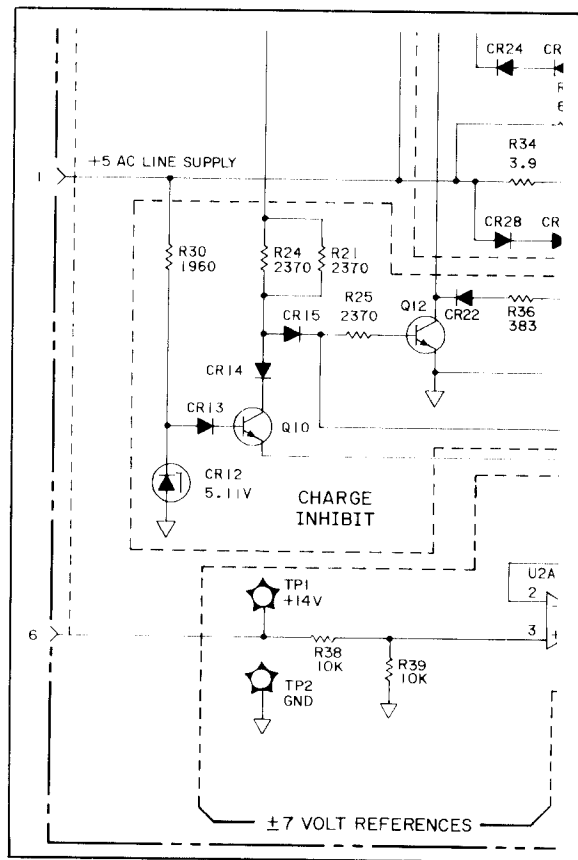


Figure 7-3. Partial A5 Charger Board Schematic

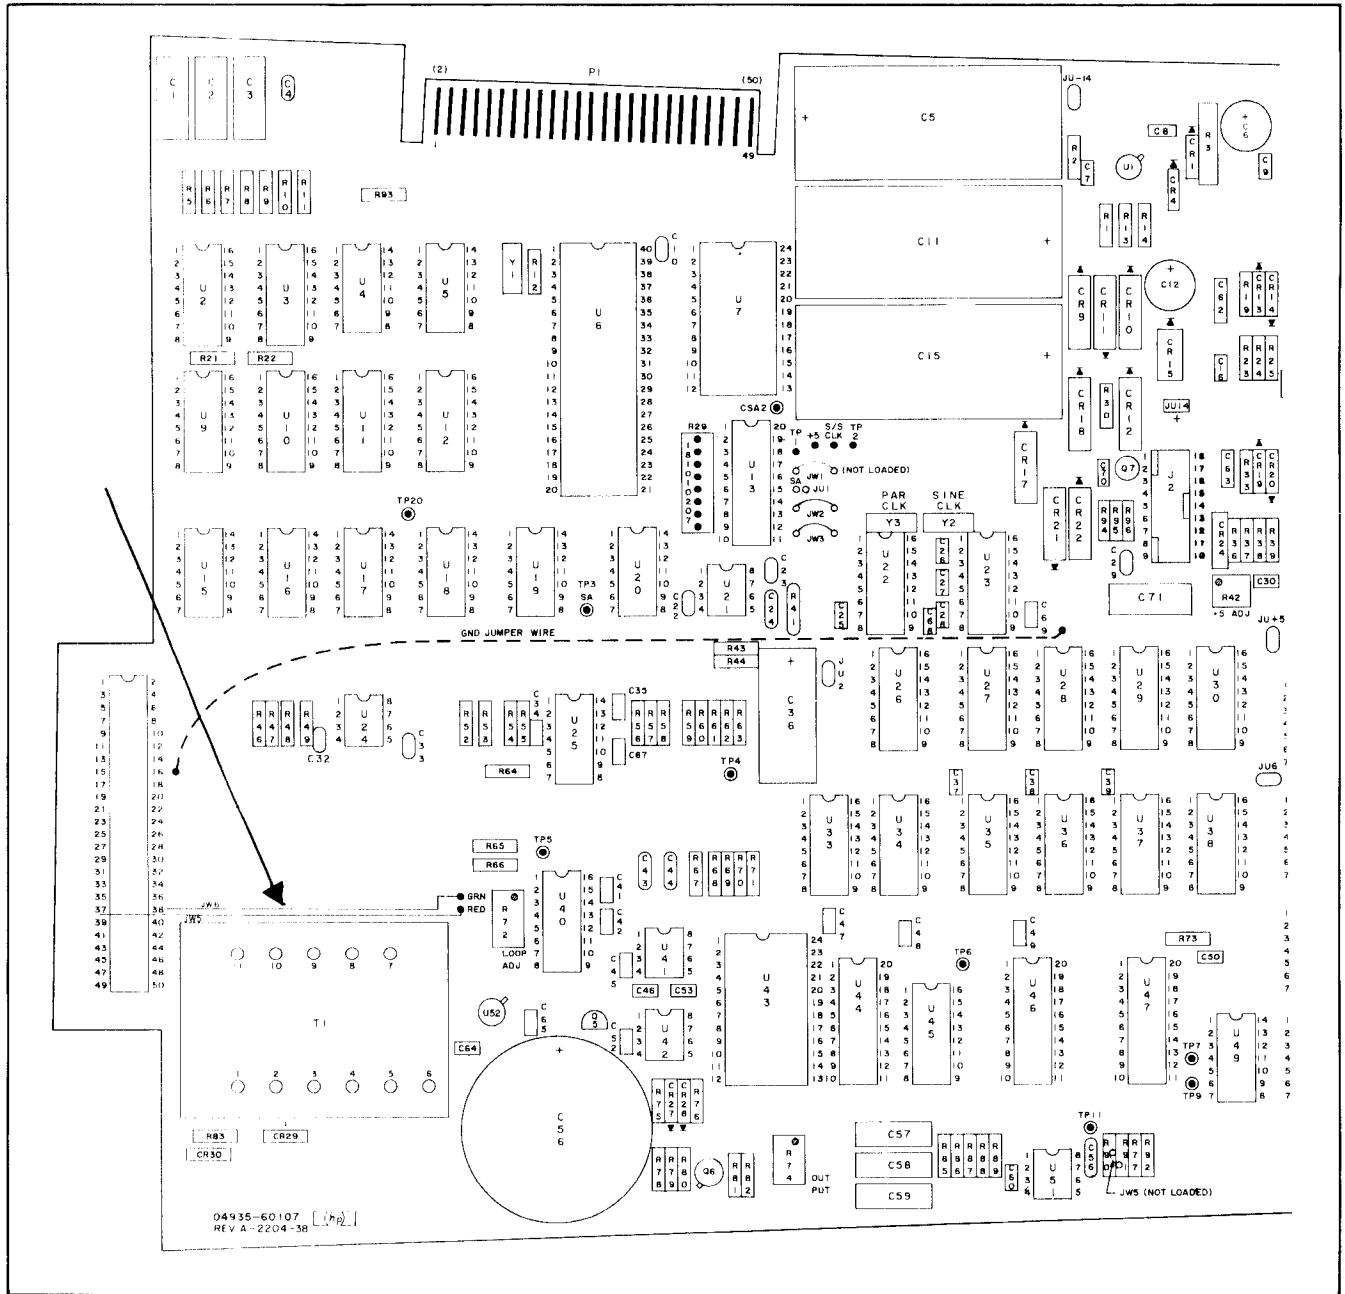


Figure 7-4. A14 Transmitter Board Component Locator

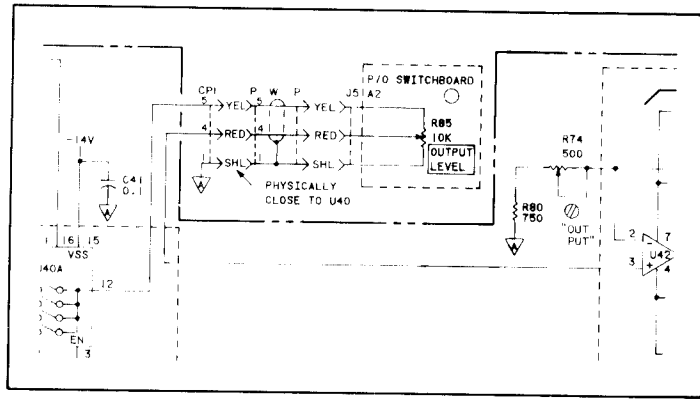


Figure 7-5. A4/A14 Partial Schematic

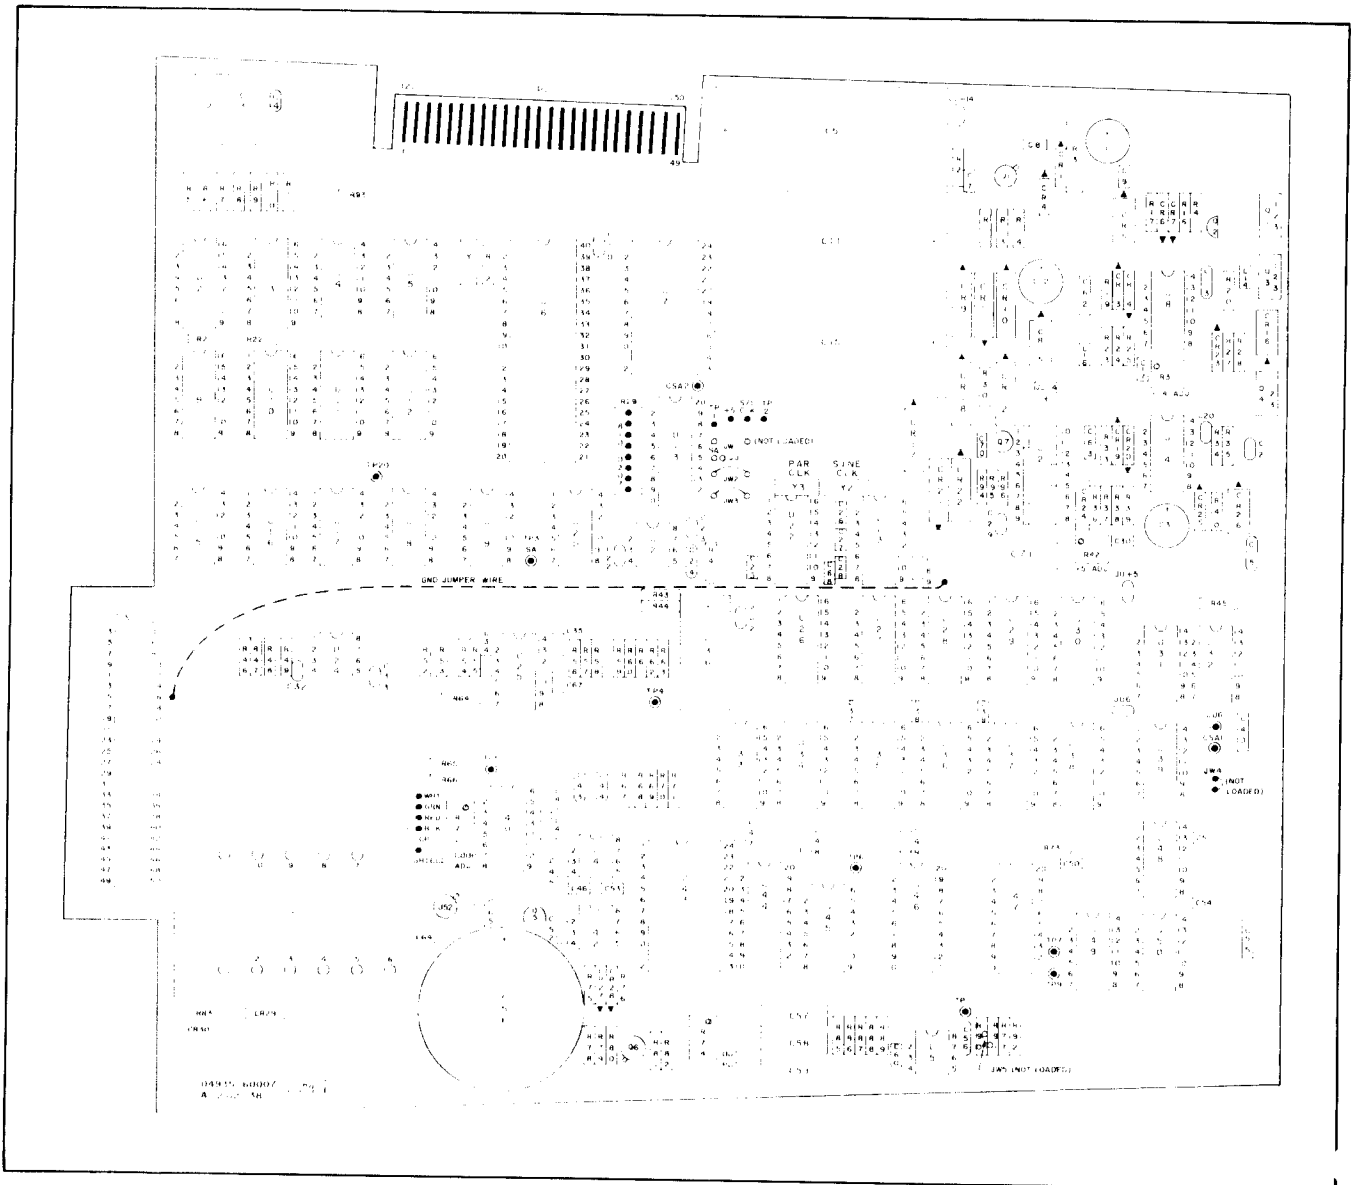


Figure 7-6. A14 P/AR Transmitter Board Component Locator

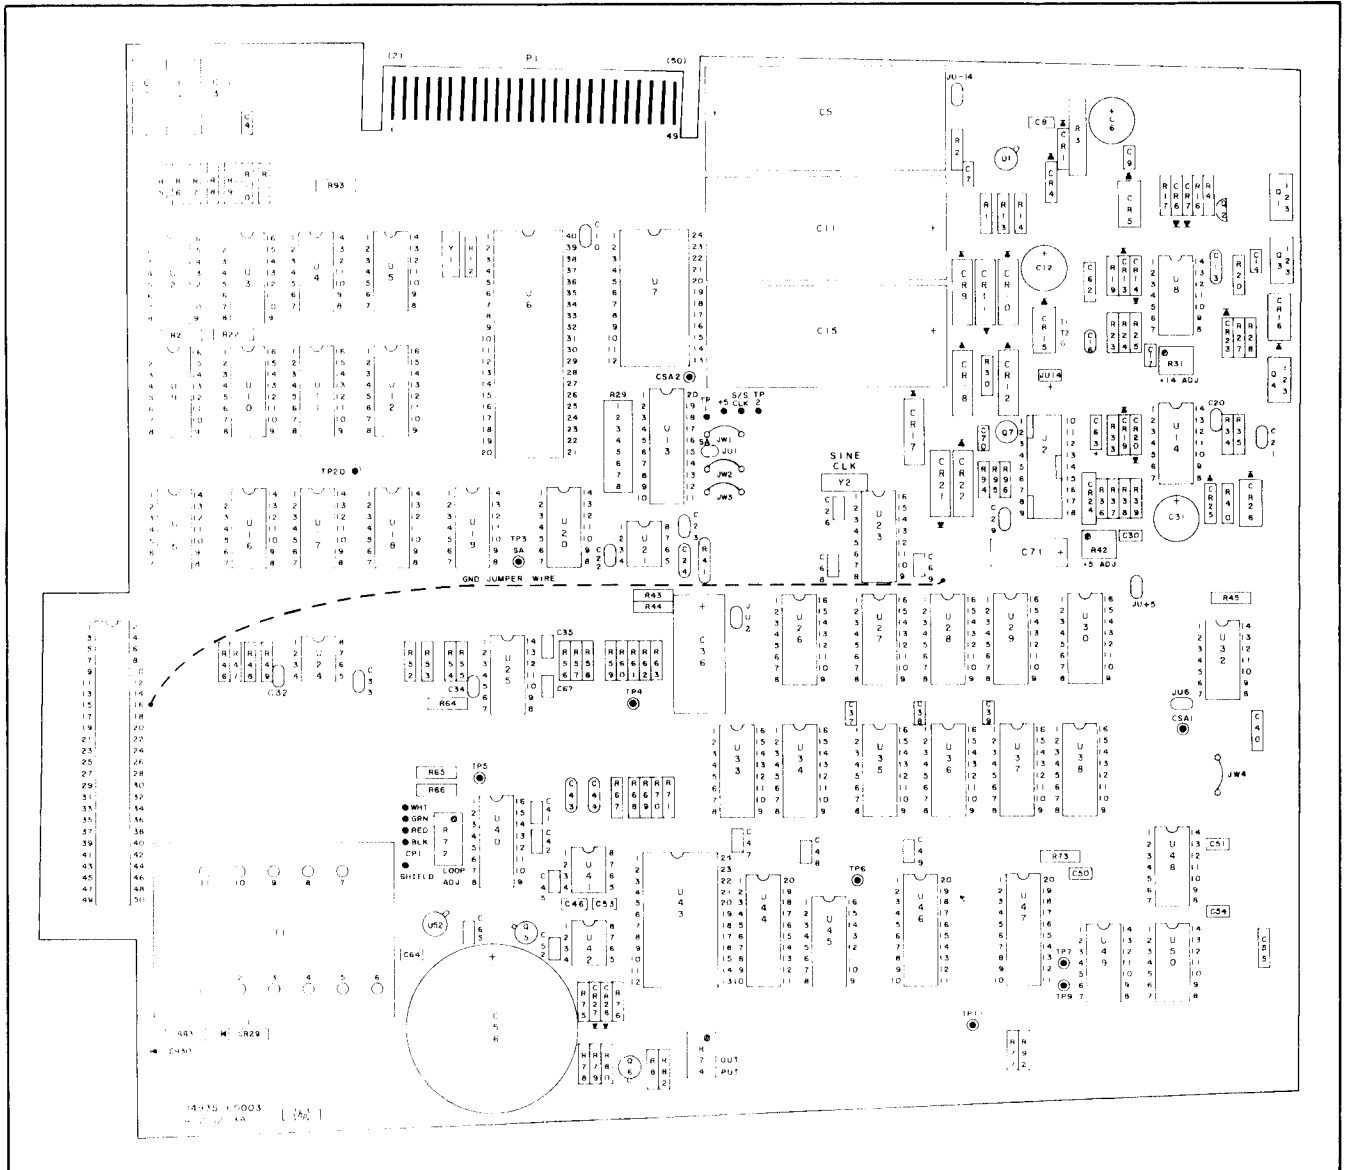


Figure 7-7. A4 Transmitter Board Component Locator

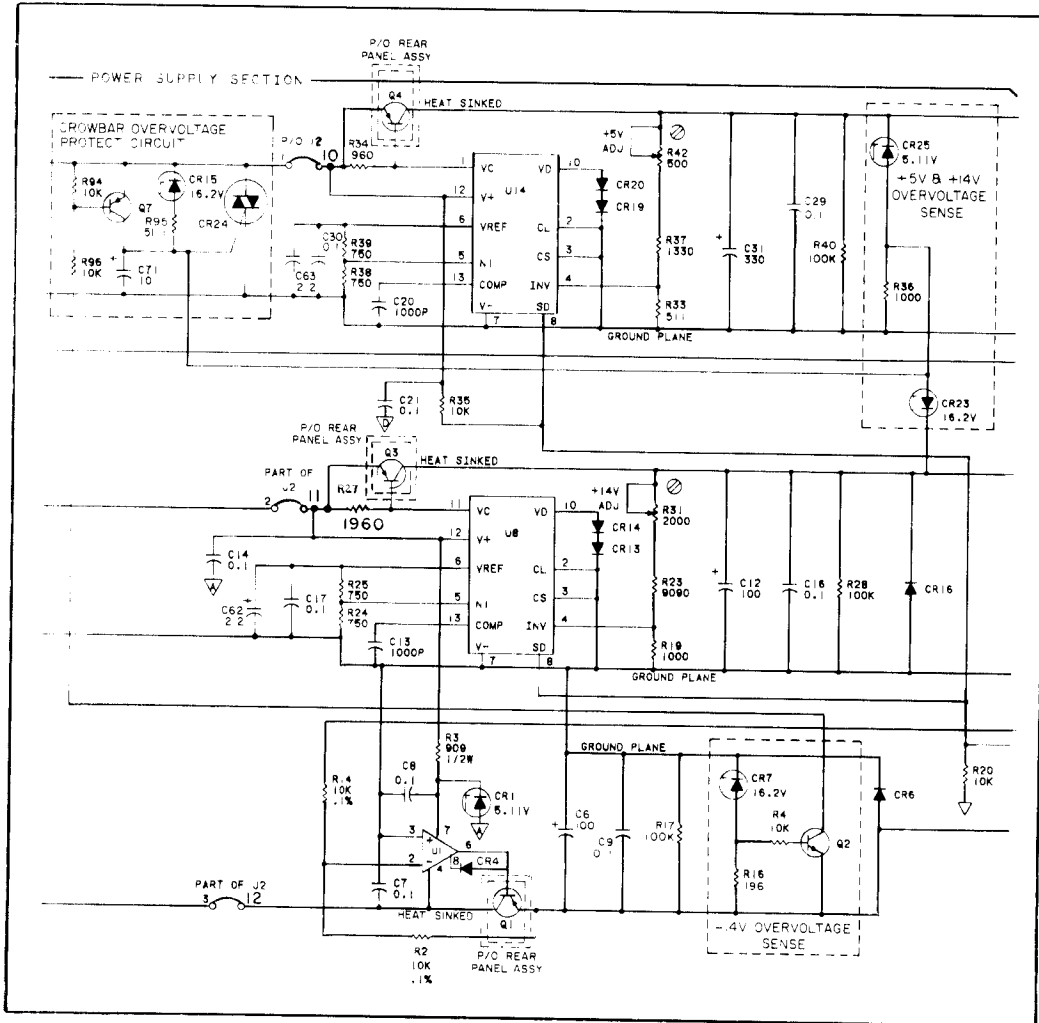


Figure 7-8. Partial Power Supply Schematic

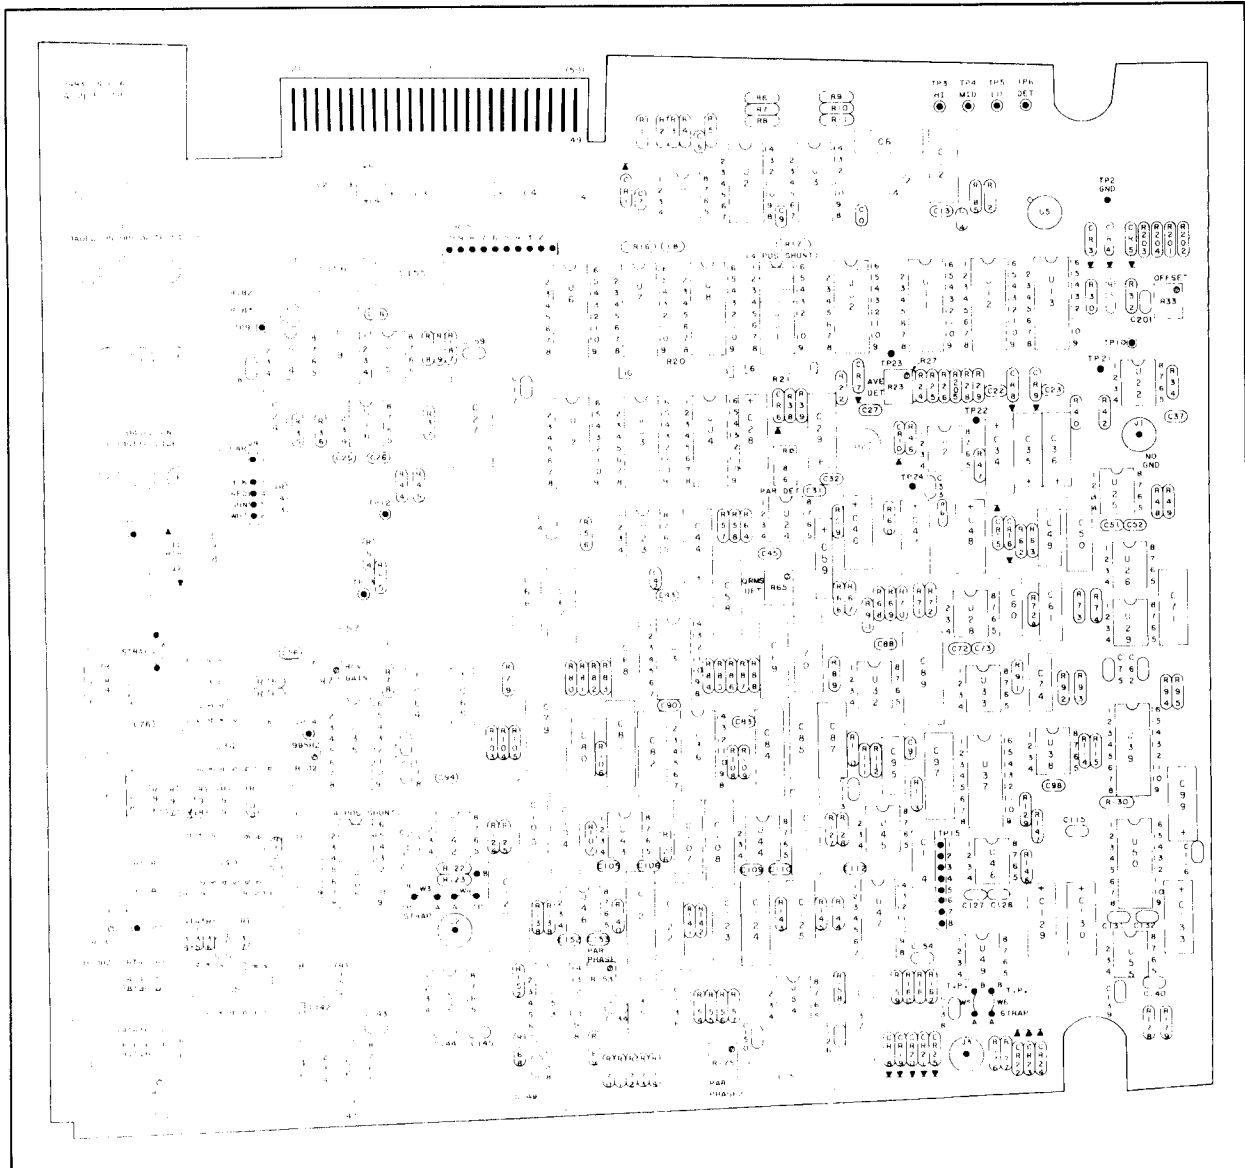


Figure 7-9. A13 P/AR Receiver Board Component Locator

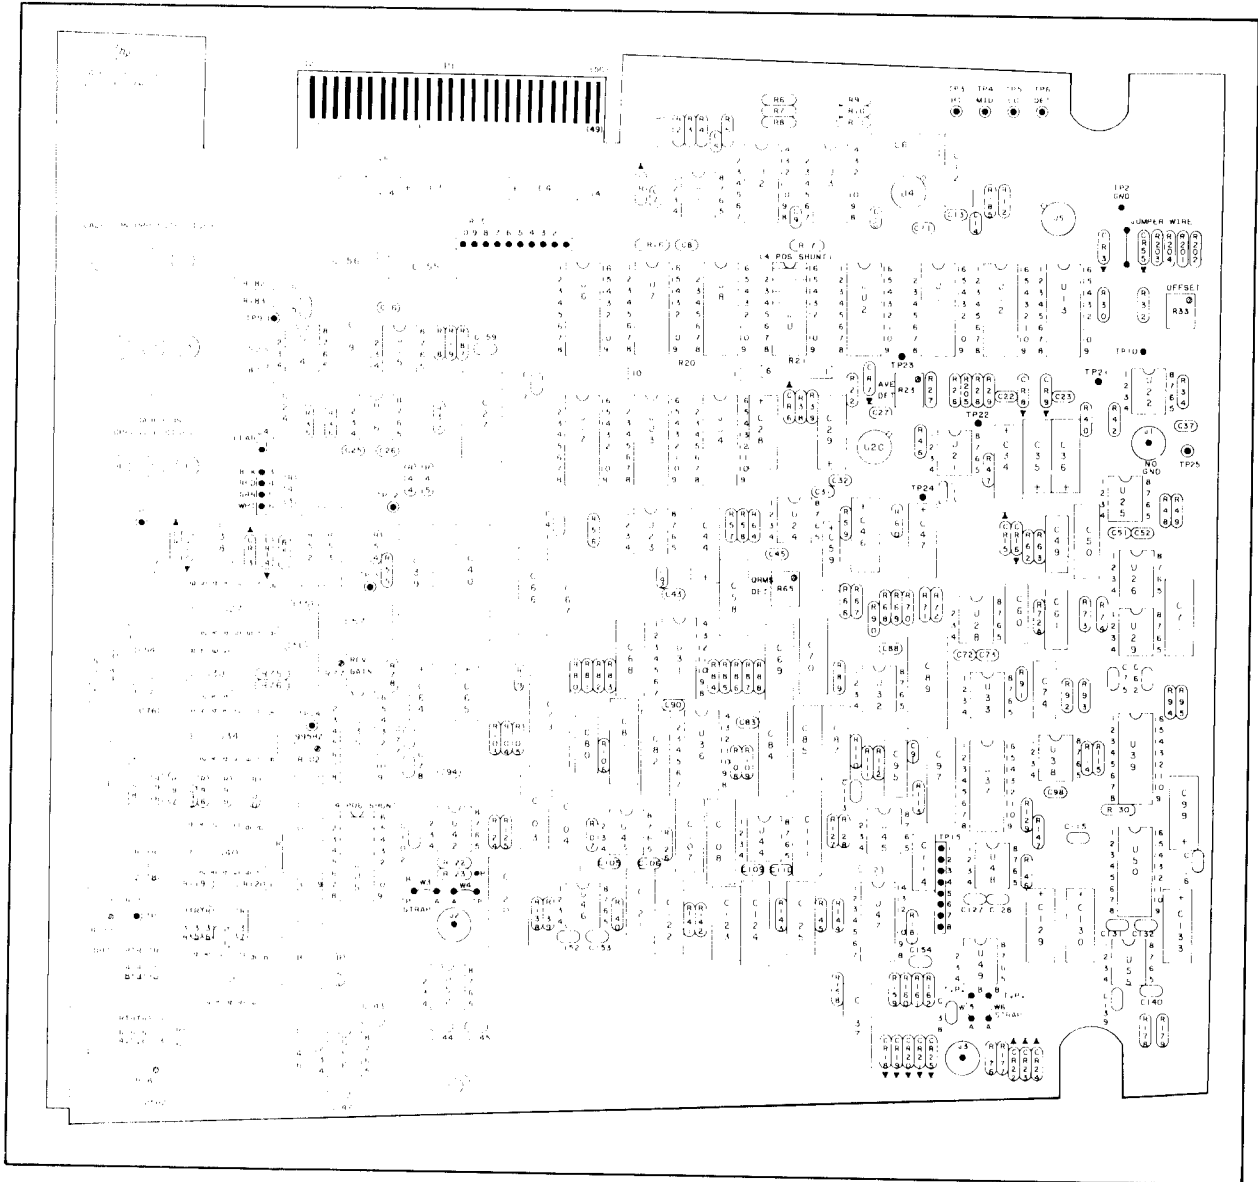


Figure 7-10. A3 Receiver Board Component Locator



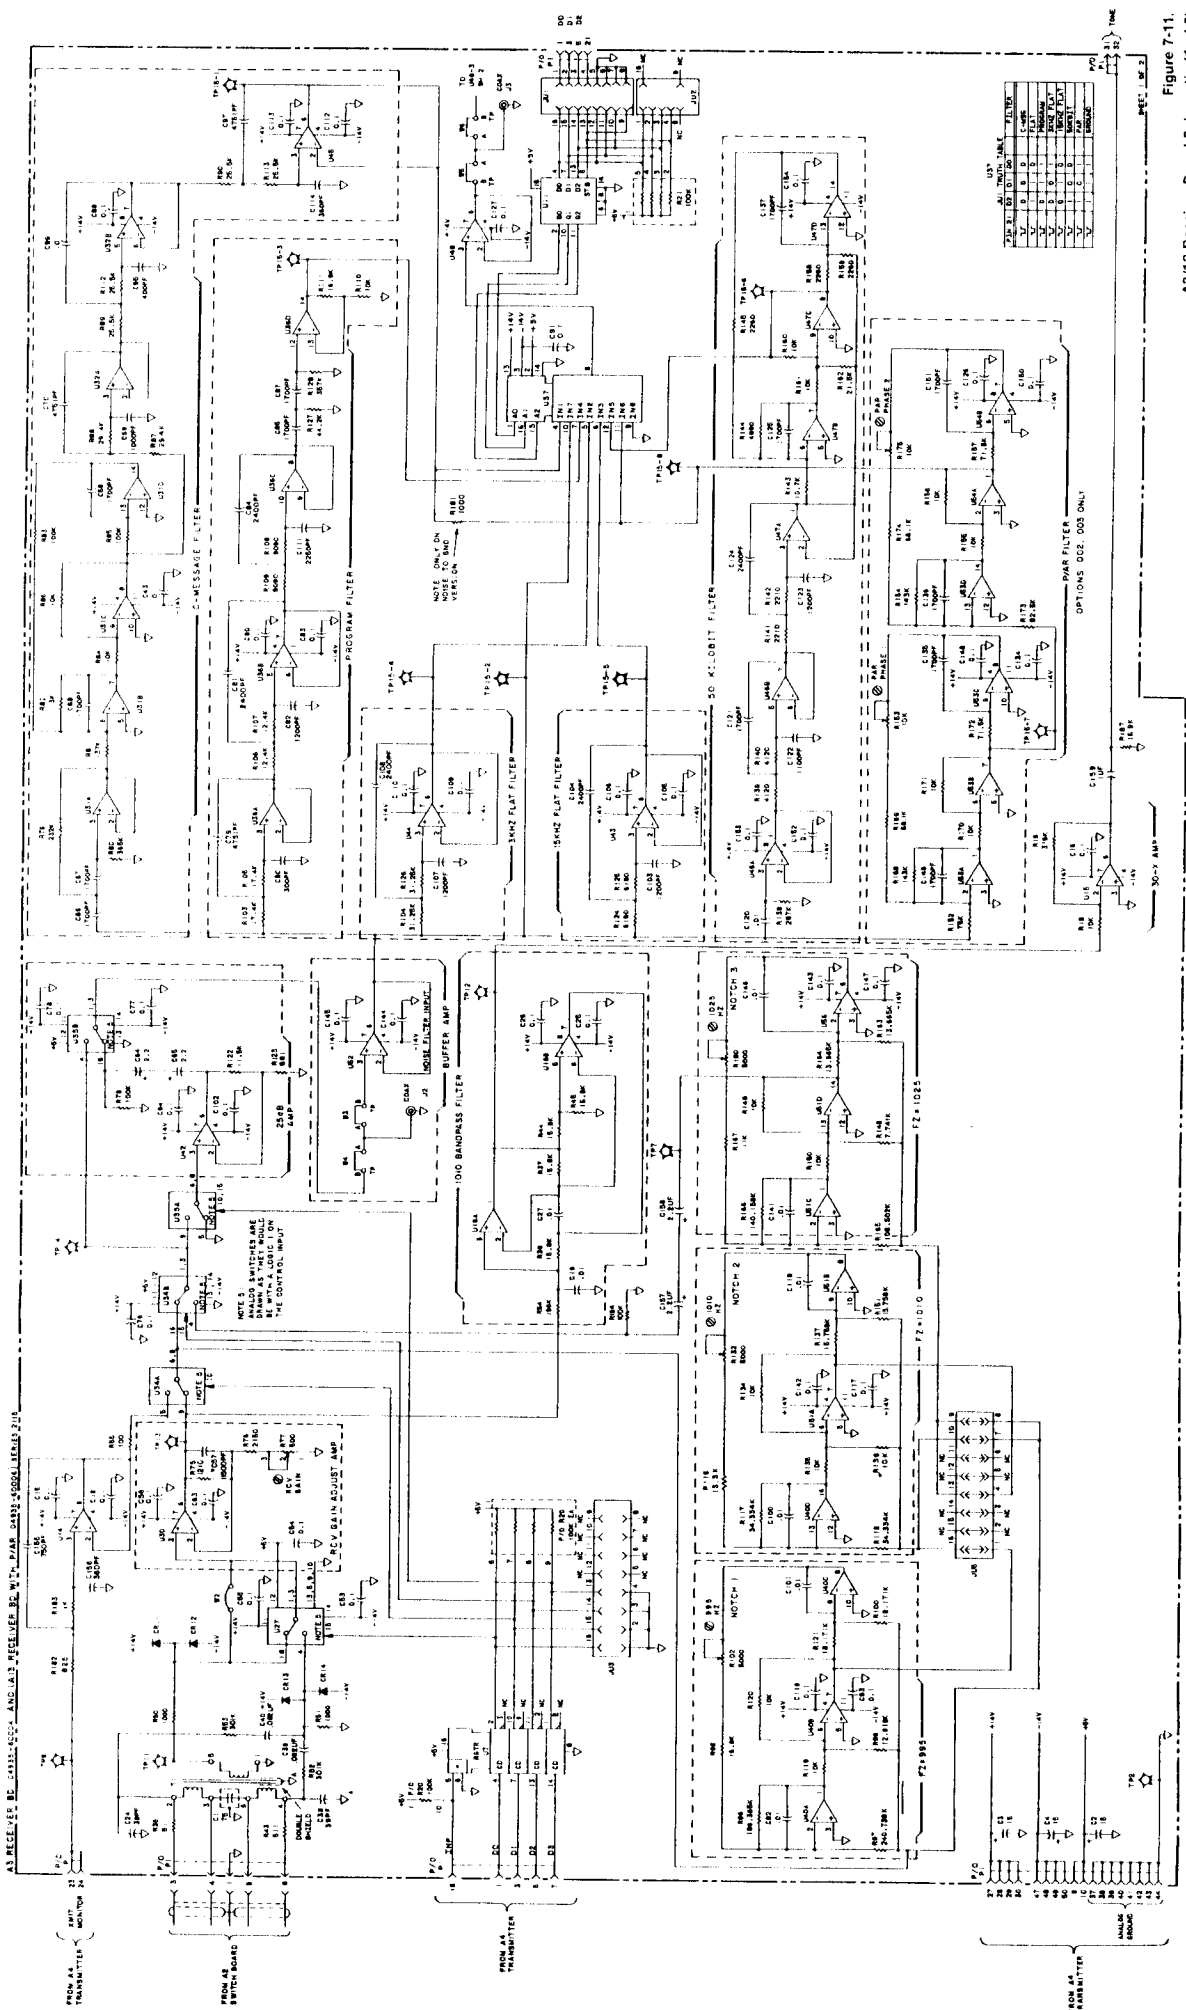


Figure 7-11.
A3/13 Receiver Board Schematic (1 of 2)
7-21 (7-22 blank)

A3 RECEIVER BD 04935-60004 AND (A13 RECEIVER BD WITH P/AR 04935-60006) SERIES 2116

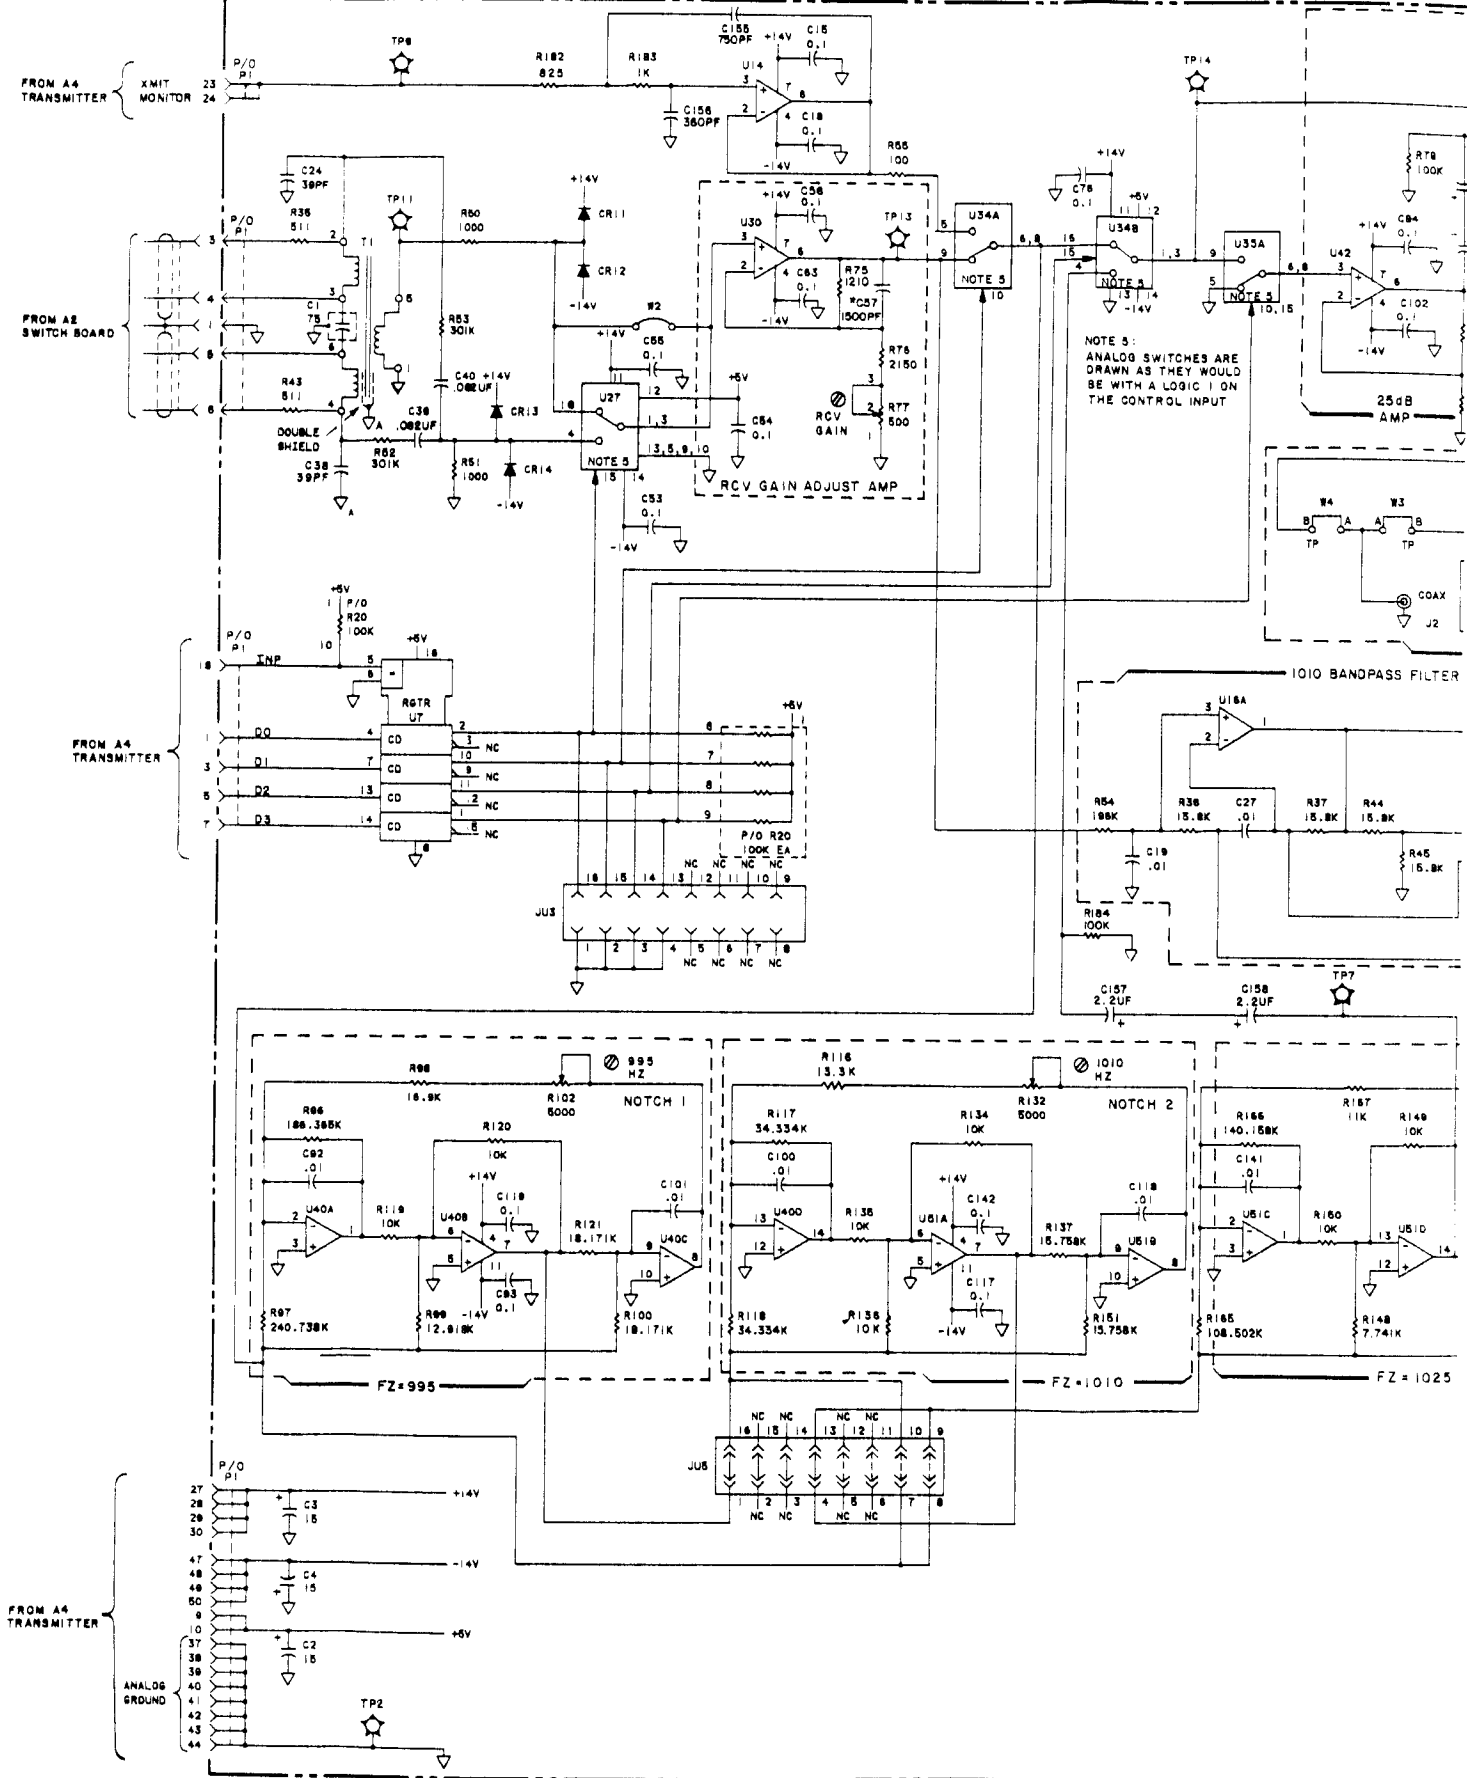

NOTE 5:
ANALOG SWITCHES ARE
DRAWN AS THEY WOULD
BE WITH A LOGIC 1 ON
THE CONTROL INPUT

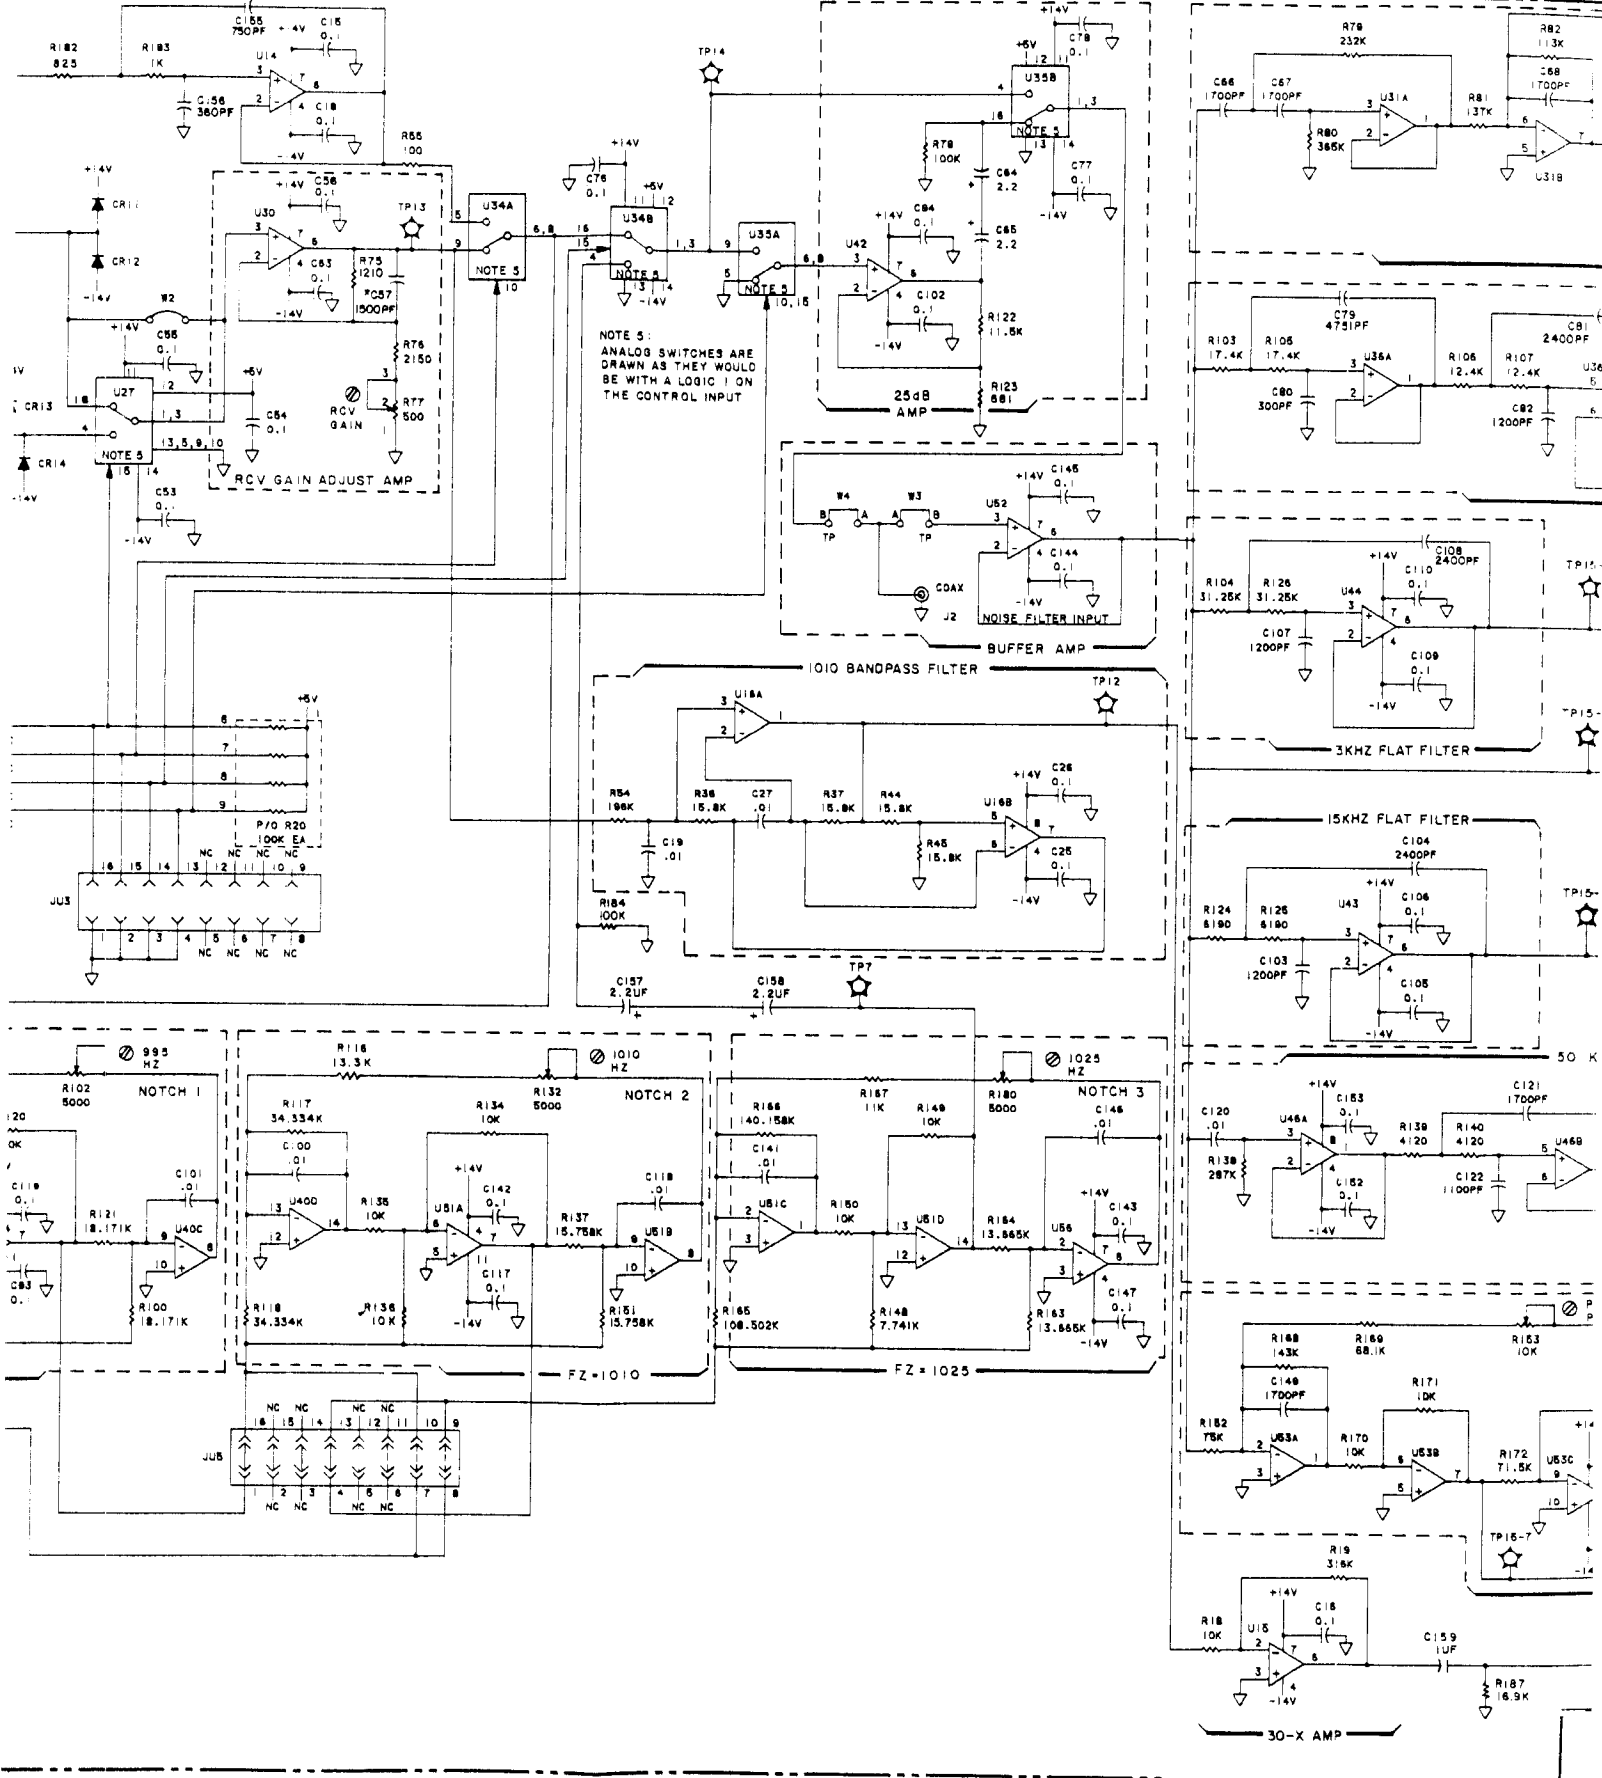

7-11B




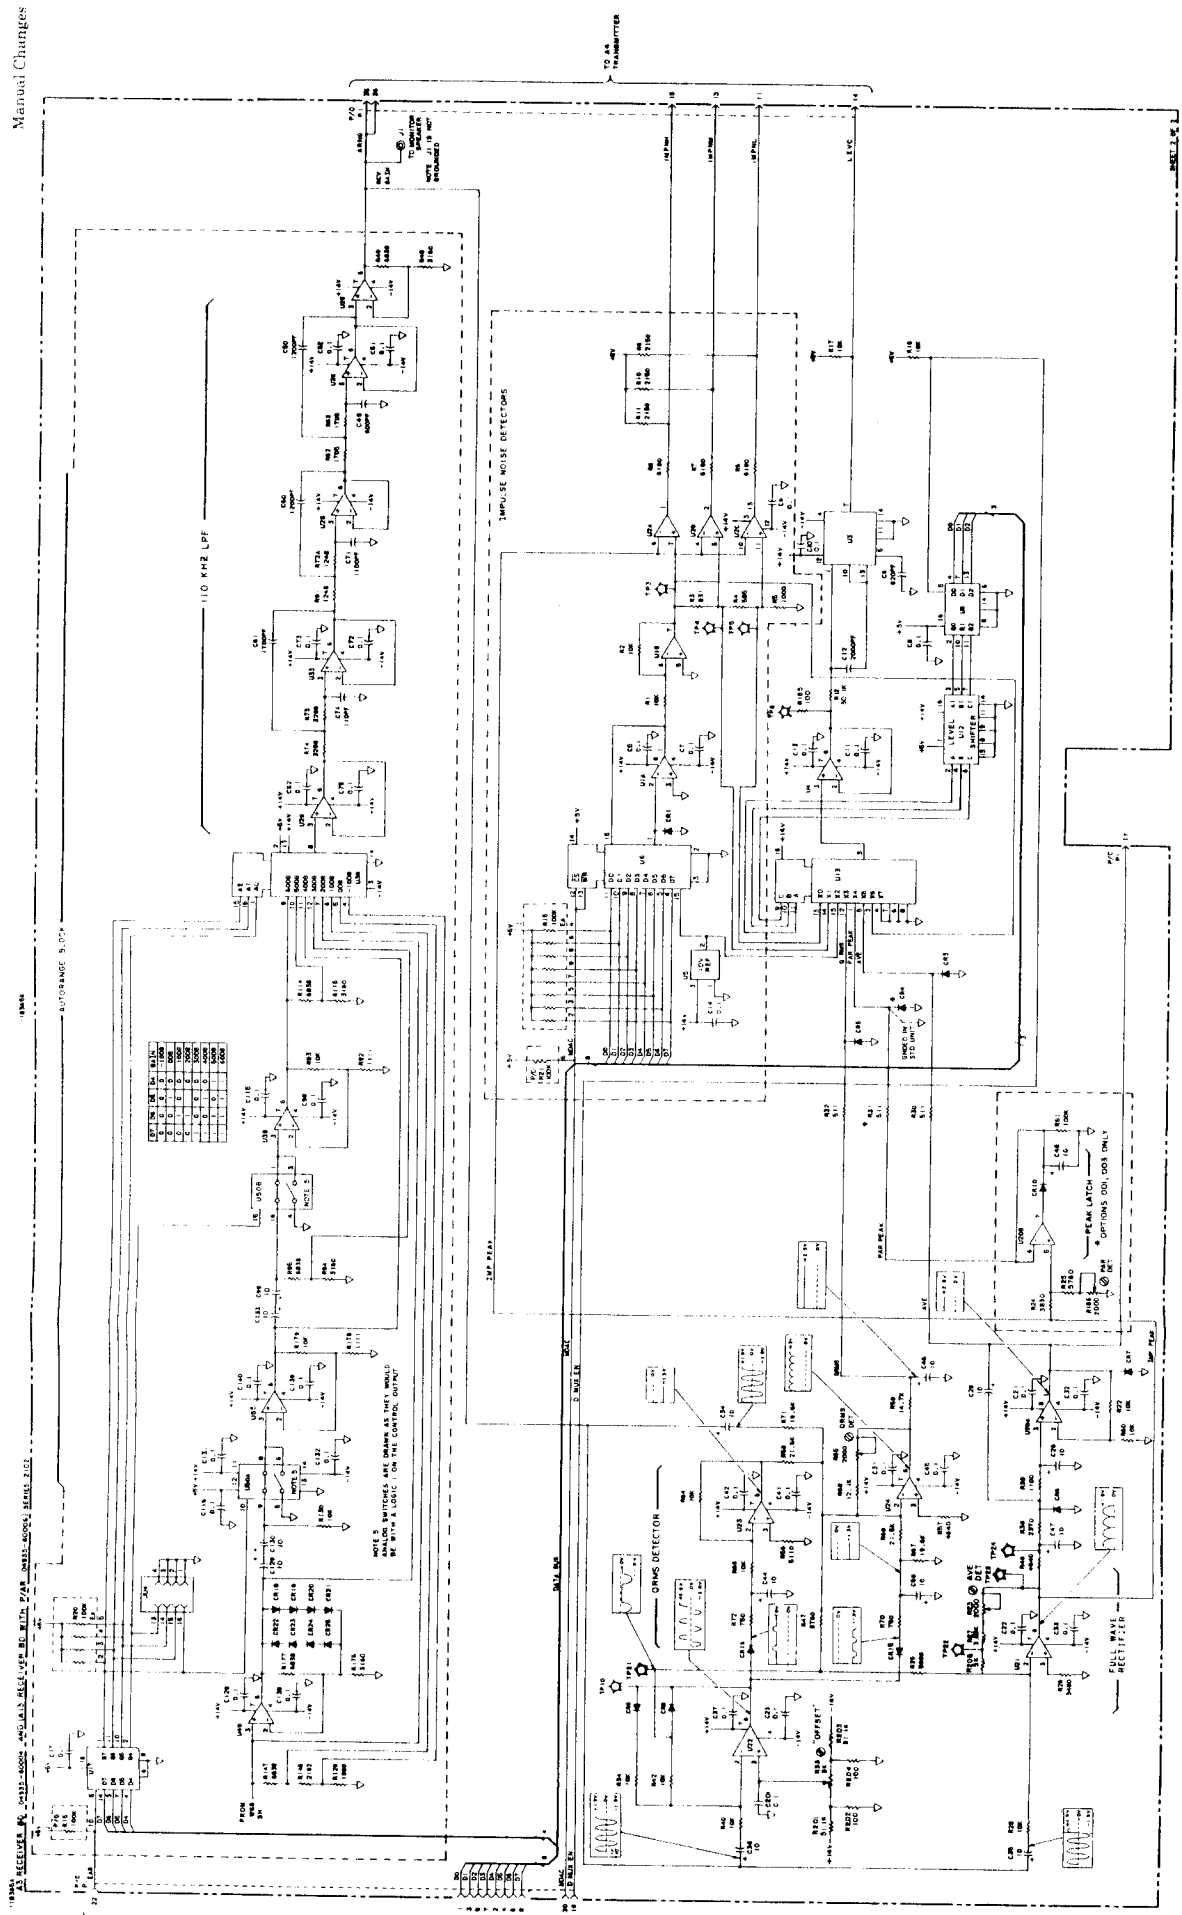


Figure 7-12
A3/13 Receiver Board Schematic (2 of 2)
7-23 (7-24 blank)

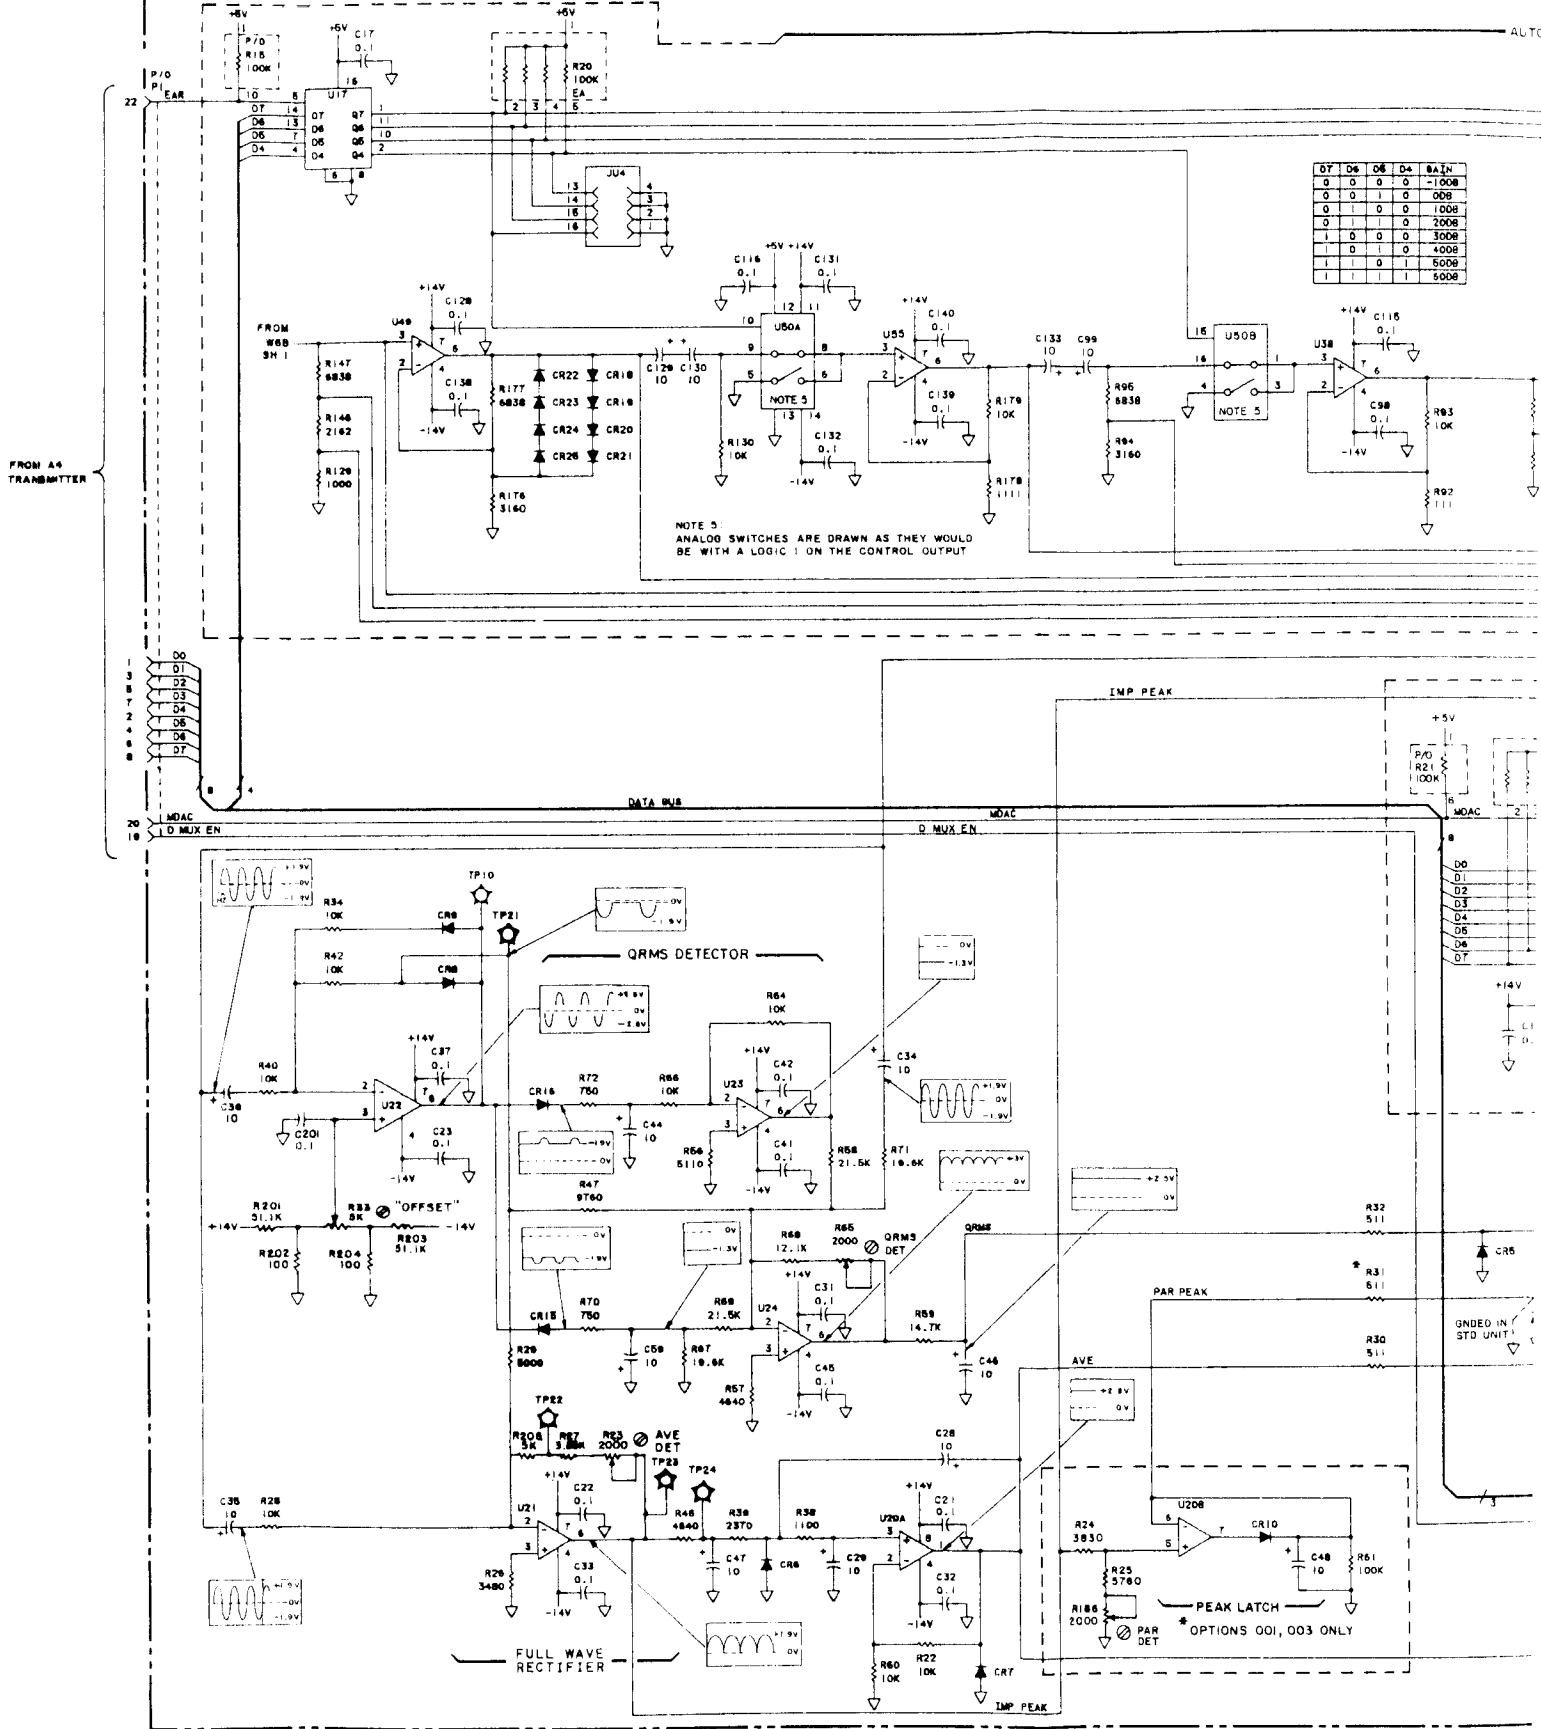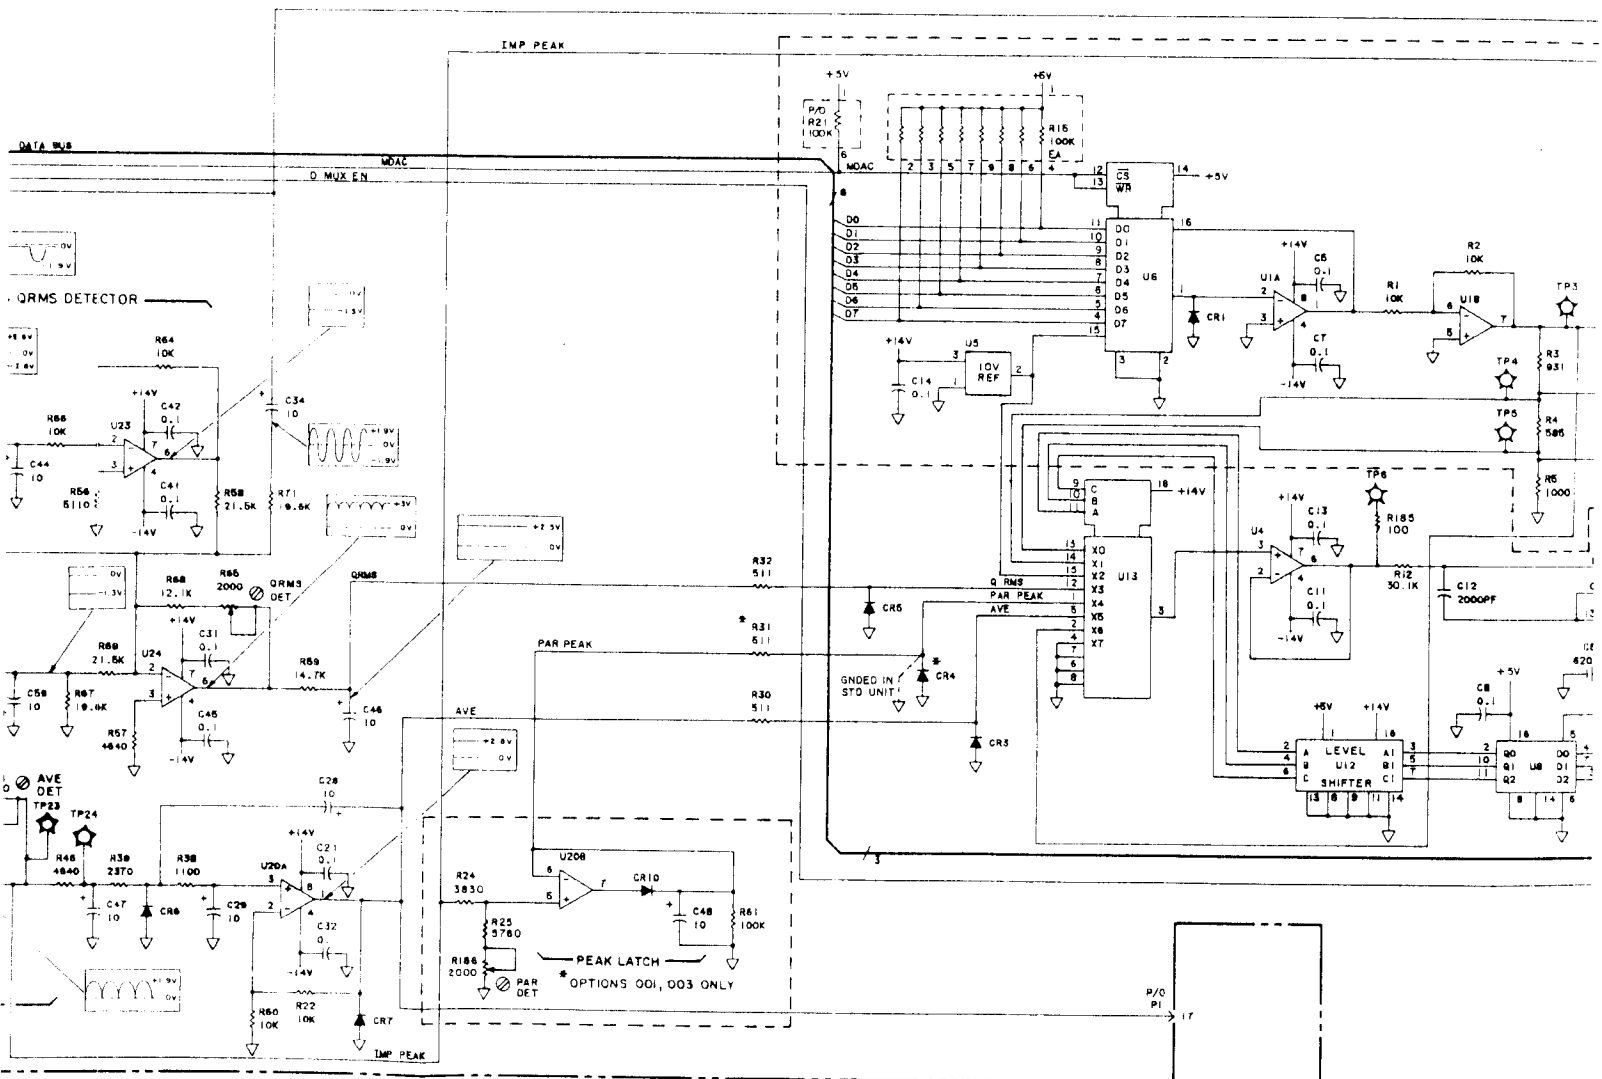

7-12A

AUTORANGE BLOCK

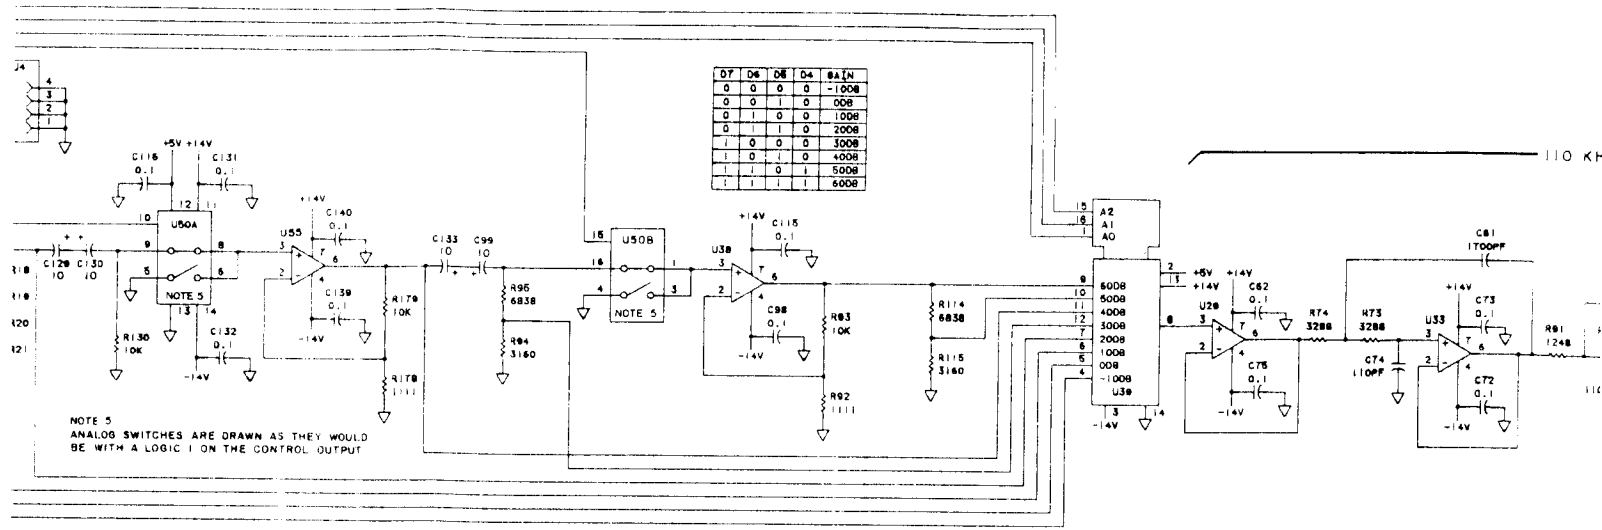

7-12 B



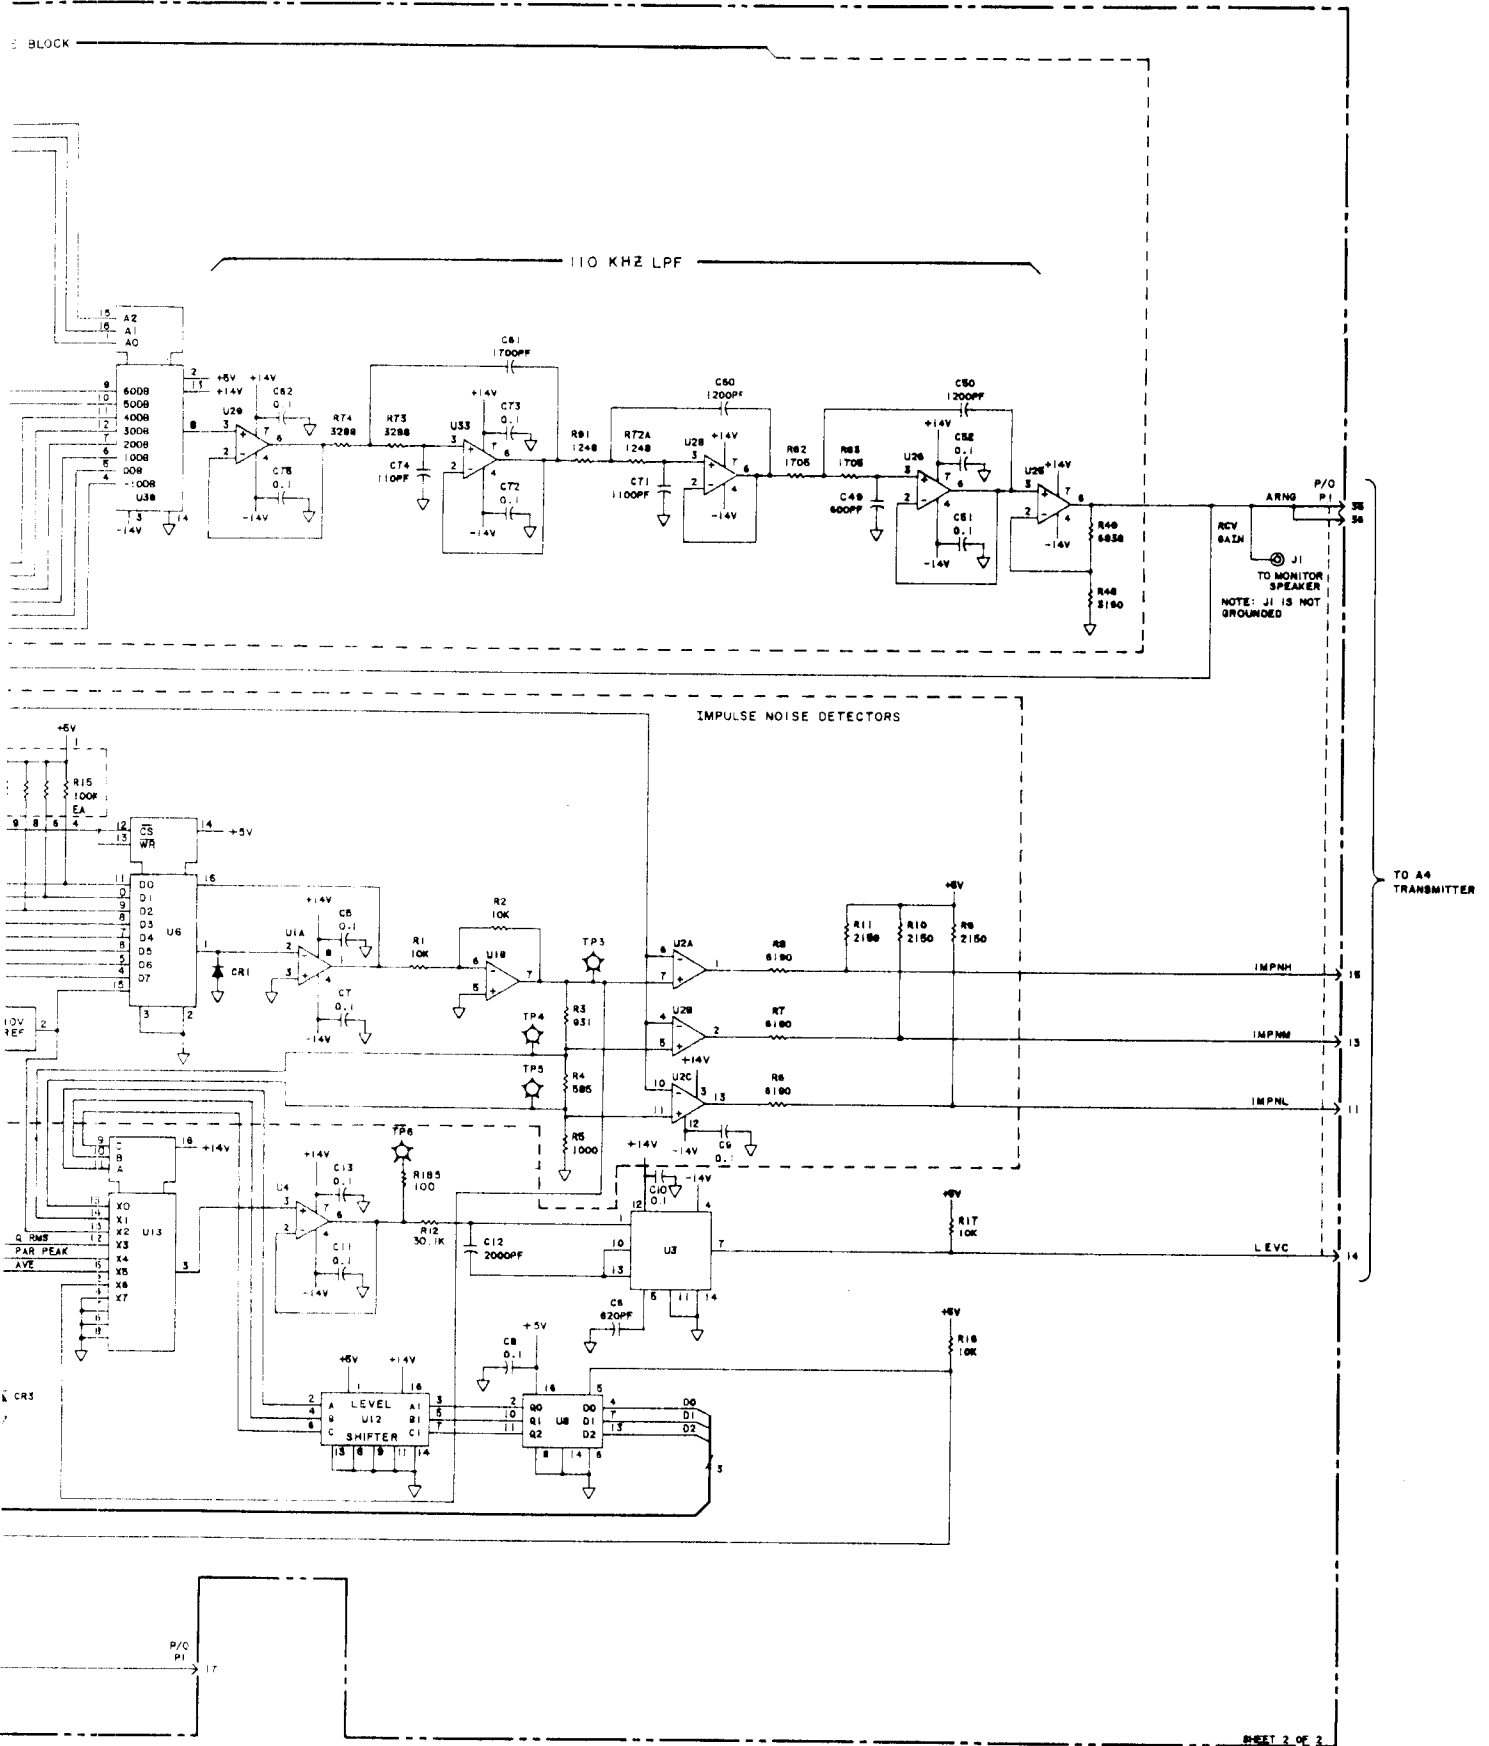


Figure 7-12.
A3/13 Receiver Board Schematic (2 of 2)
7-23/(7-24 blank)

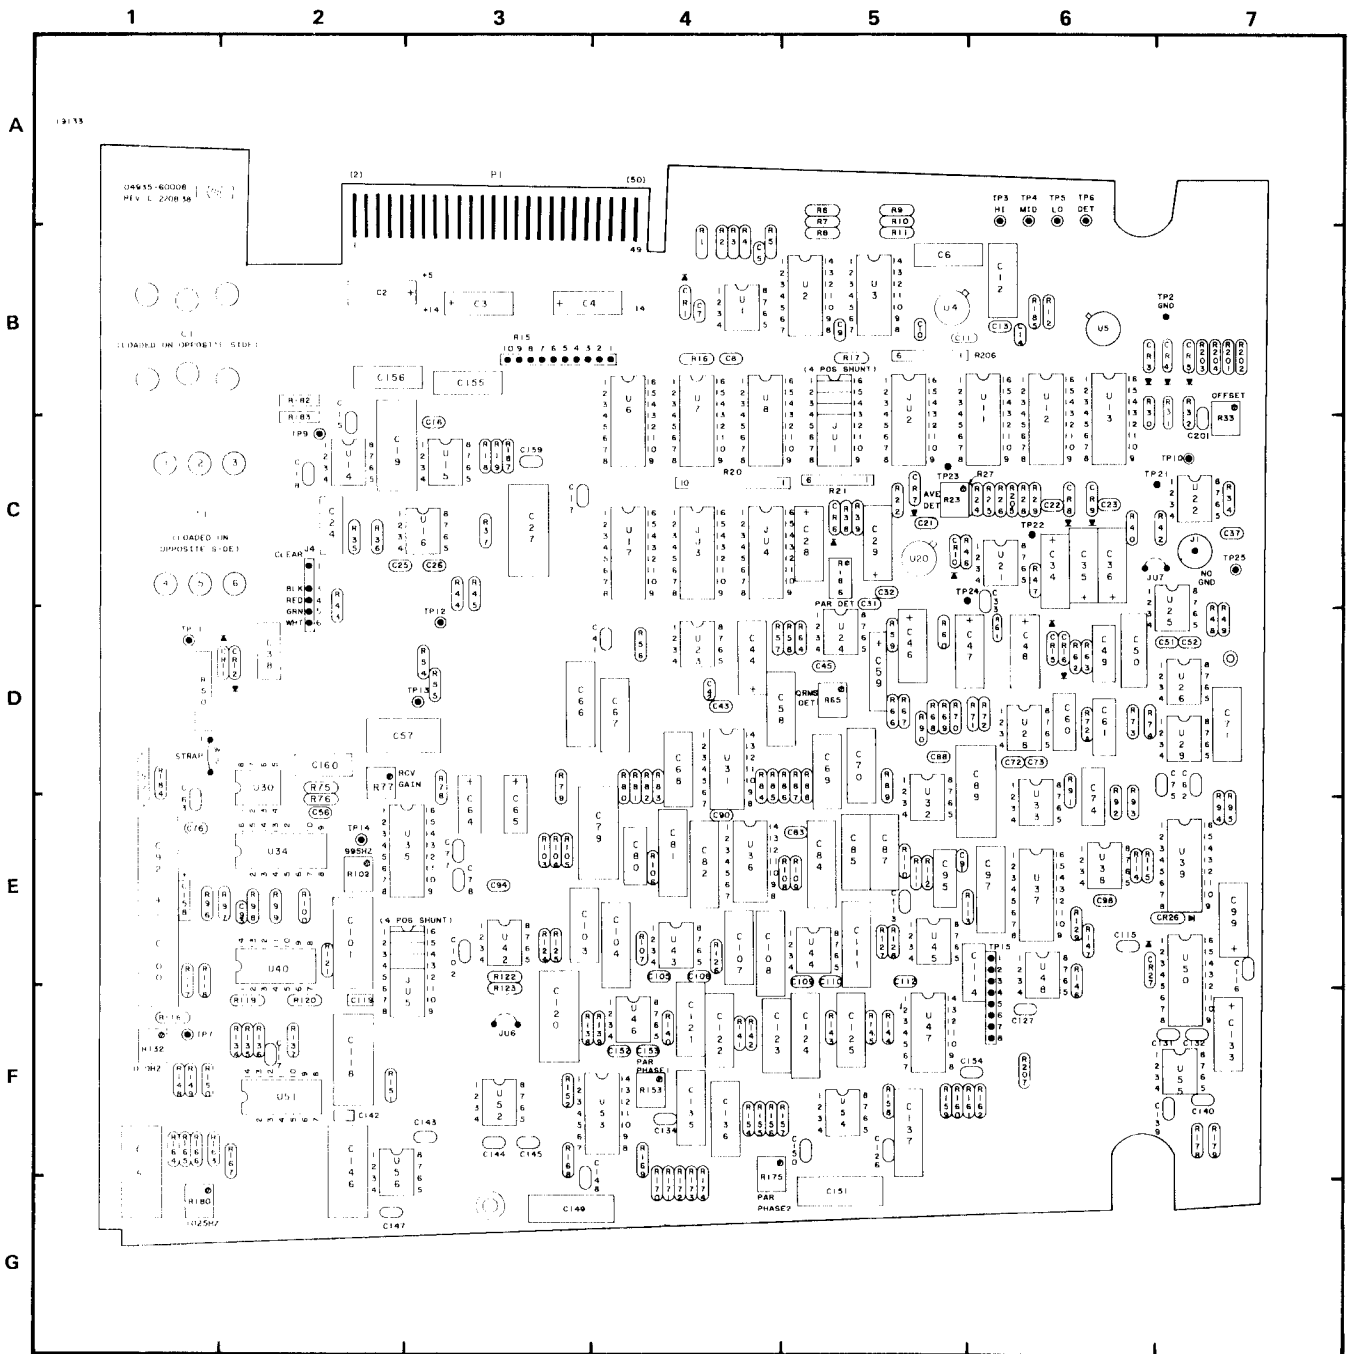

LOCATOR GRID KEY			LOCATOR GRID KEY		
Test Points	Jacks/Plugs	Non-Sequenced Components	Test Points	Jacks/Plugs	Non-Sequenced Components
TP1 = NONE	TP15 CONN = EF 6		TP11 = D1	J4 = C2	
TP2 = B7	P1 = A2-4		TP12 = C3		
TP3 = A6	JU1 = B/C 5		TP13 = D3		
TP4 = A6	JU2 = B/C 5		TP14 = E2		
TP5 = A6	JU3 = C4		TP15 = E/F6		
TP6 = A6	JU4 = C 4/5		TP16-20 = NONE		
TP7 = F1	JU4 = E/F 2/3		TP21 = C7		
TP8 = NONE	J1 = C7		TP22 = C6		
TP9 = B2	J2 = F3		TP23 = C 5/6		
TP10 = C7	J3 = F/G 6		TP24 = C6		

Figure 7-13. A13 Receiver Board Component Locator

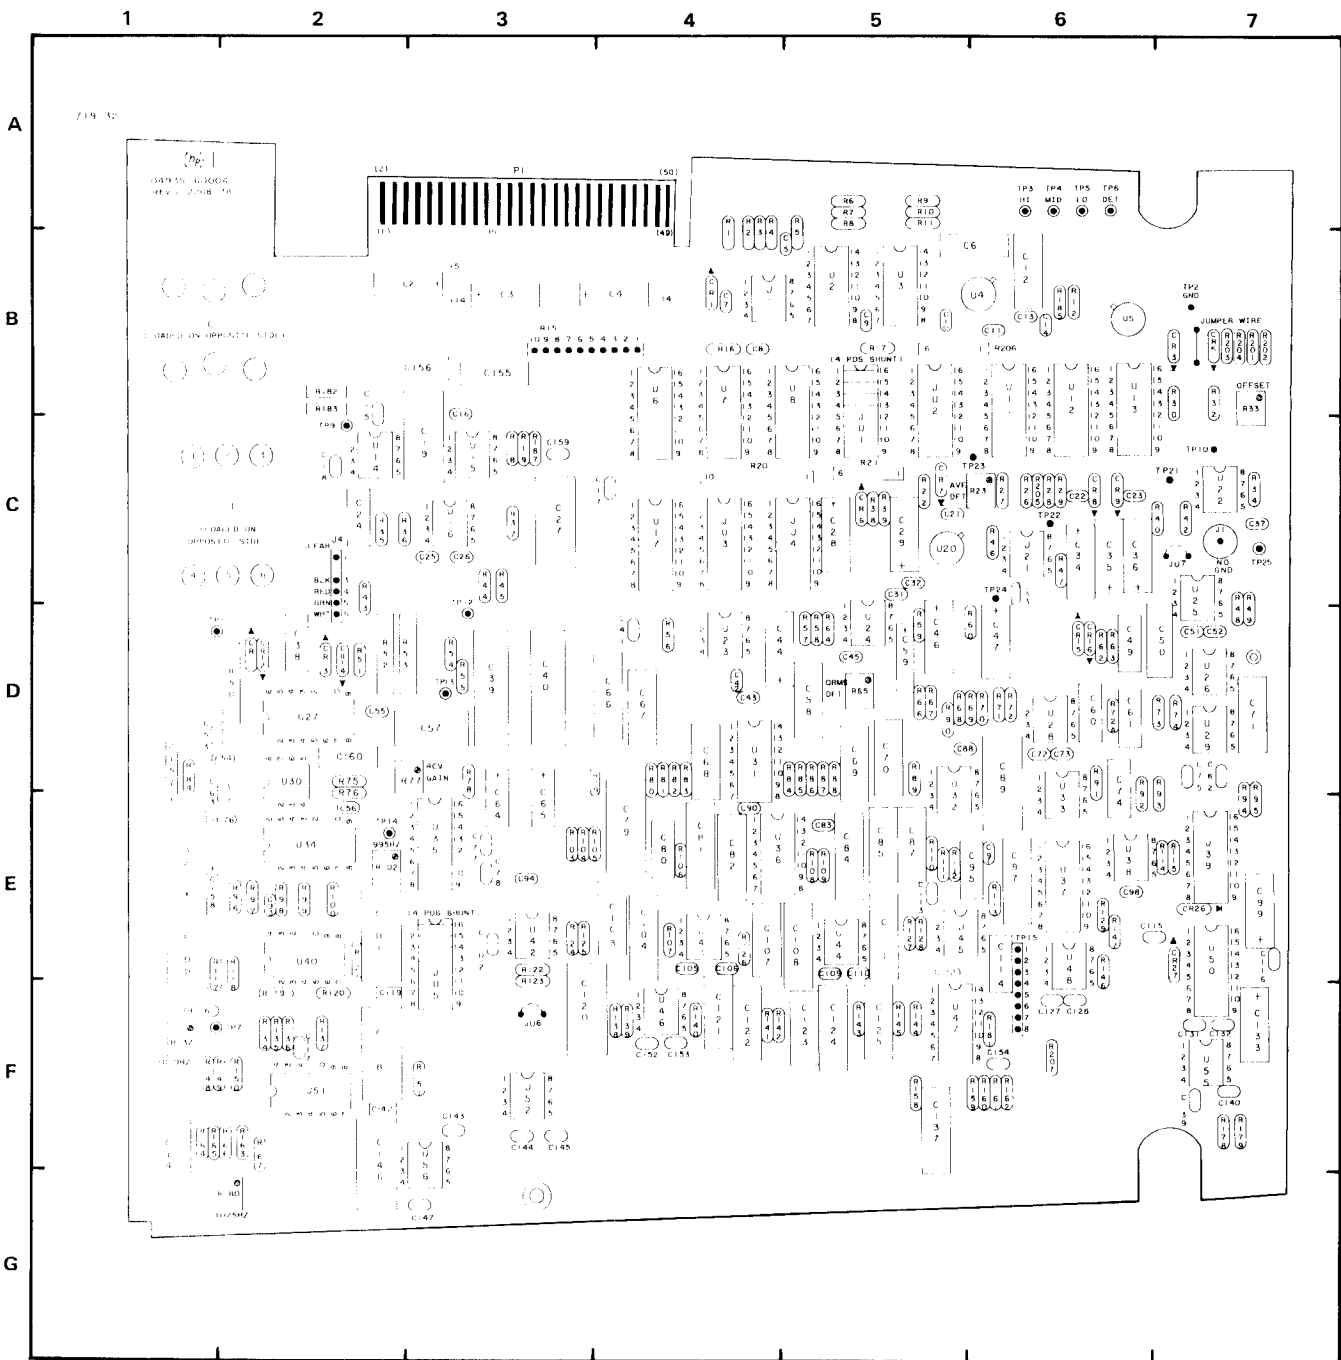

LOCATOR GRID KEY			LOCATOR GRID KEY		
Test Points	Jacks/Plugs	Non-Sequenced Components	Test Points	Jacks/Plugs	Non-Sequenced Components
TP1 = NONE	W3-W4 = F3	C156 = B2	TP14 = E2		
TP2 = B7	W5-W6 = F6	C155 = B3	TP15 = NONE		
TP3 = A6		R205 = C6	TP16 = NONE		
TP4 = A6	J1 = C7	R90 = D5	TP17 = NONE		
TP5 = A6	J2 = F2	C159 = C3	TP18 = NONE		
TP7 = F1	J3 = G6		TP19 = NONE		
TP8 = NONE	J4 = C/D 2		TP20 = NONE		
TP9 = B2	TP15 = E/F 6		TP21 = C6/7		
TP10 = C7	P1 = A2,3,4		TP22 = C6		
TP11 = D1			TP23 = C5		
TP12 = D3			TP24 = C6		
TP13 = D2/3			TP25 = C7		

Figure 7-14. A3 Receiver Board Component Locator

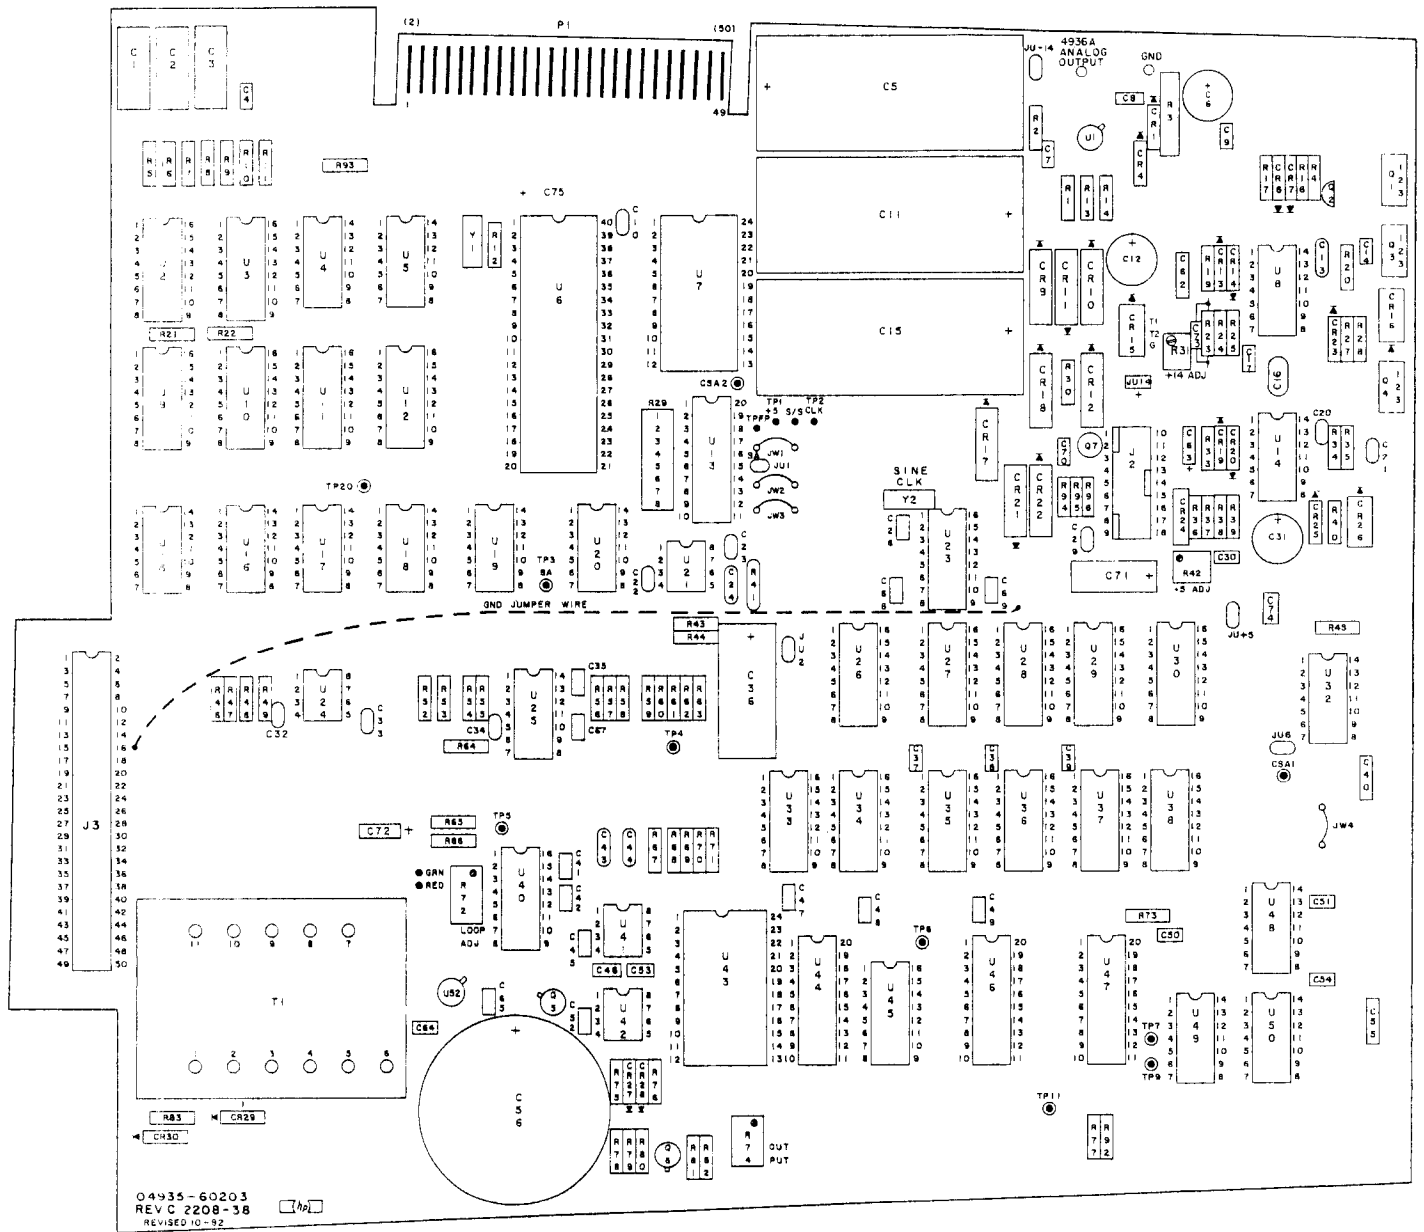


Figure 7-16. A4 Transmitter Board Component Locator


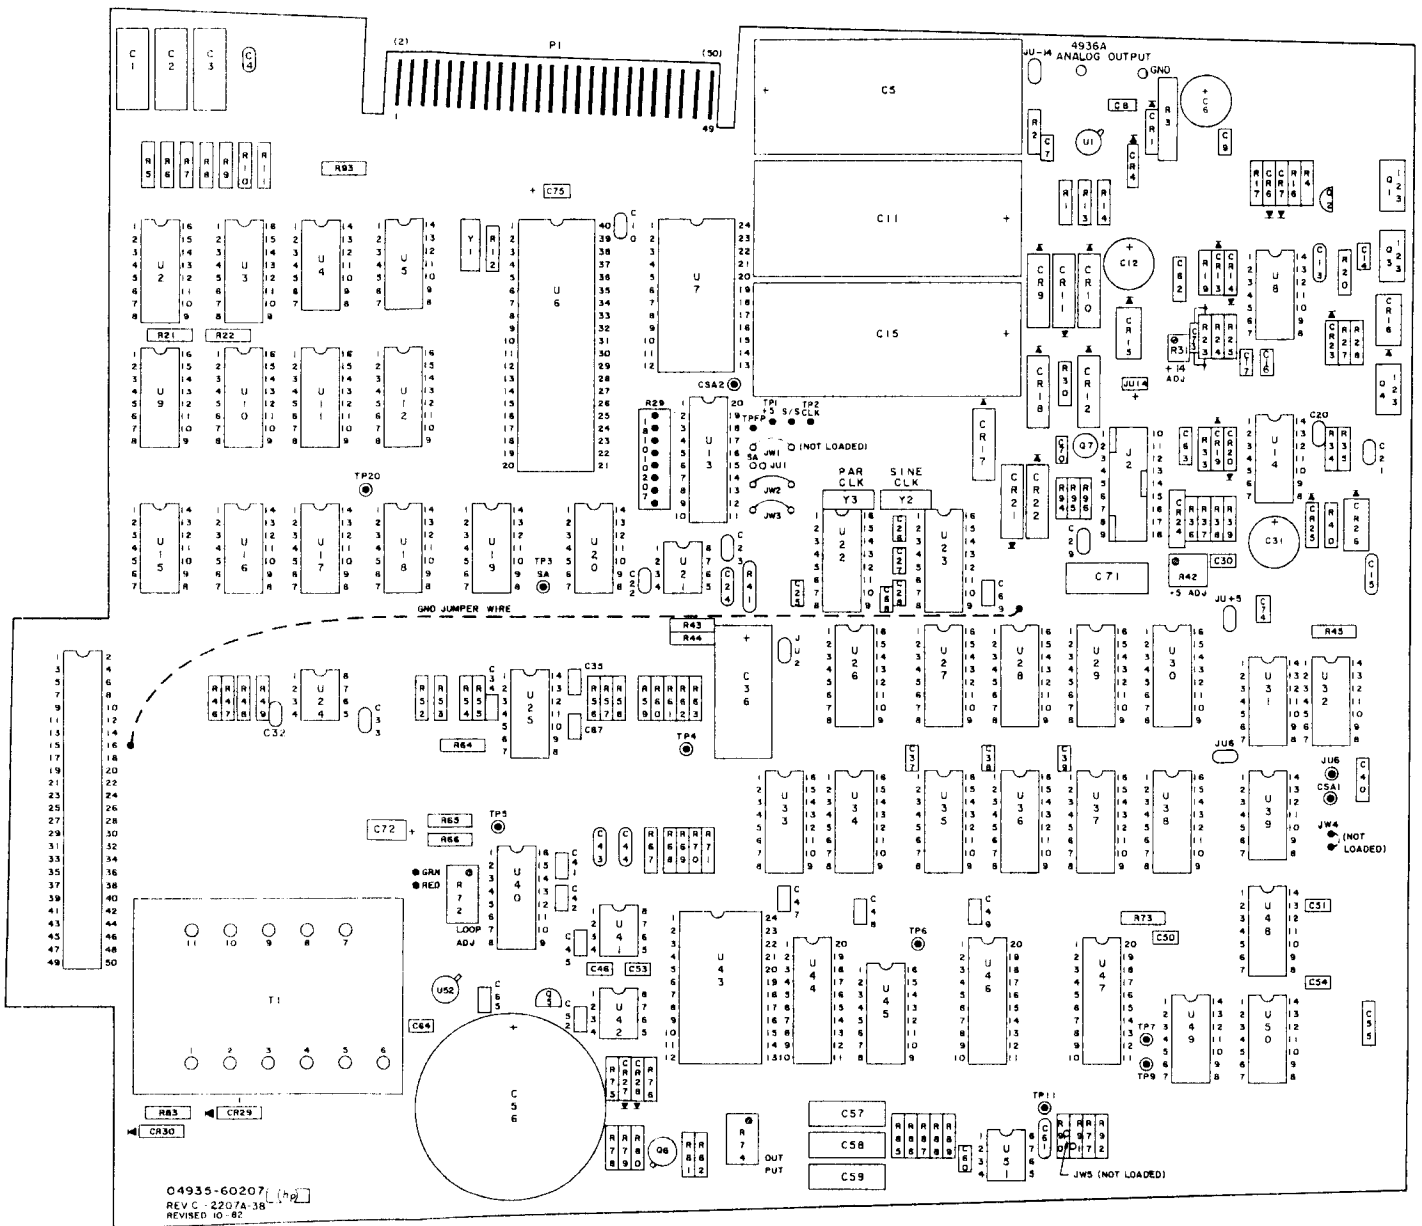




Figure 7-17. A14 Transmitter Board Component Locator

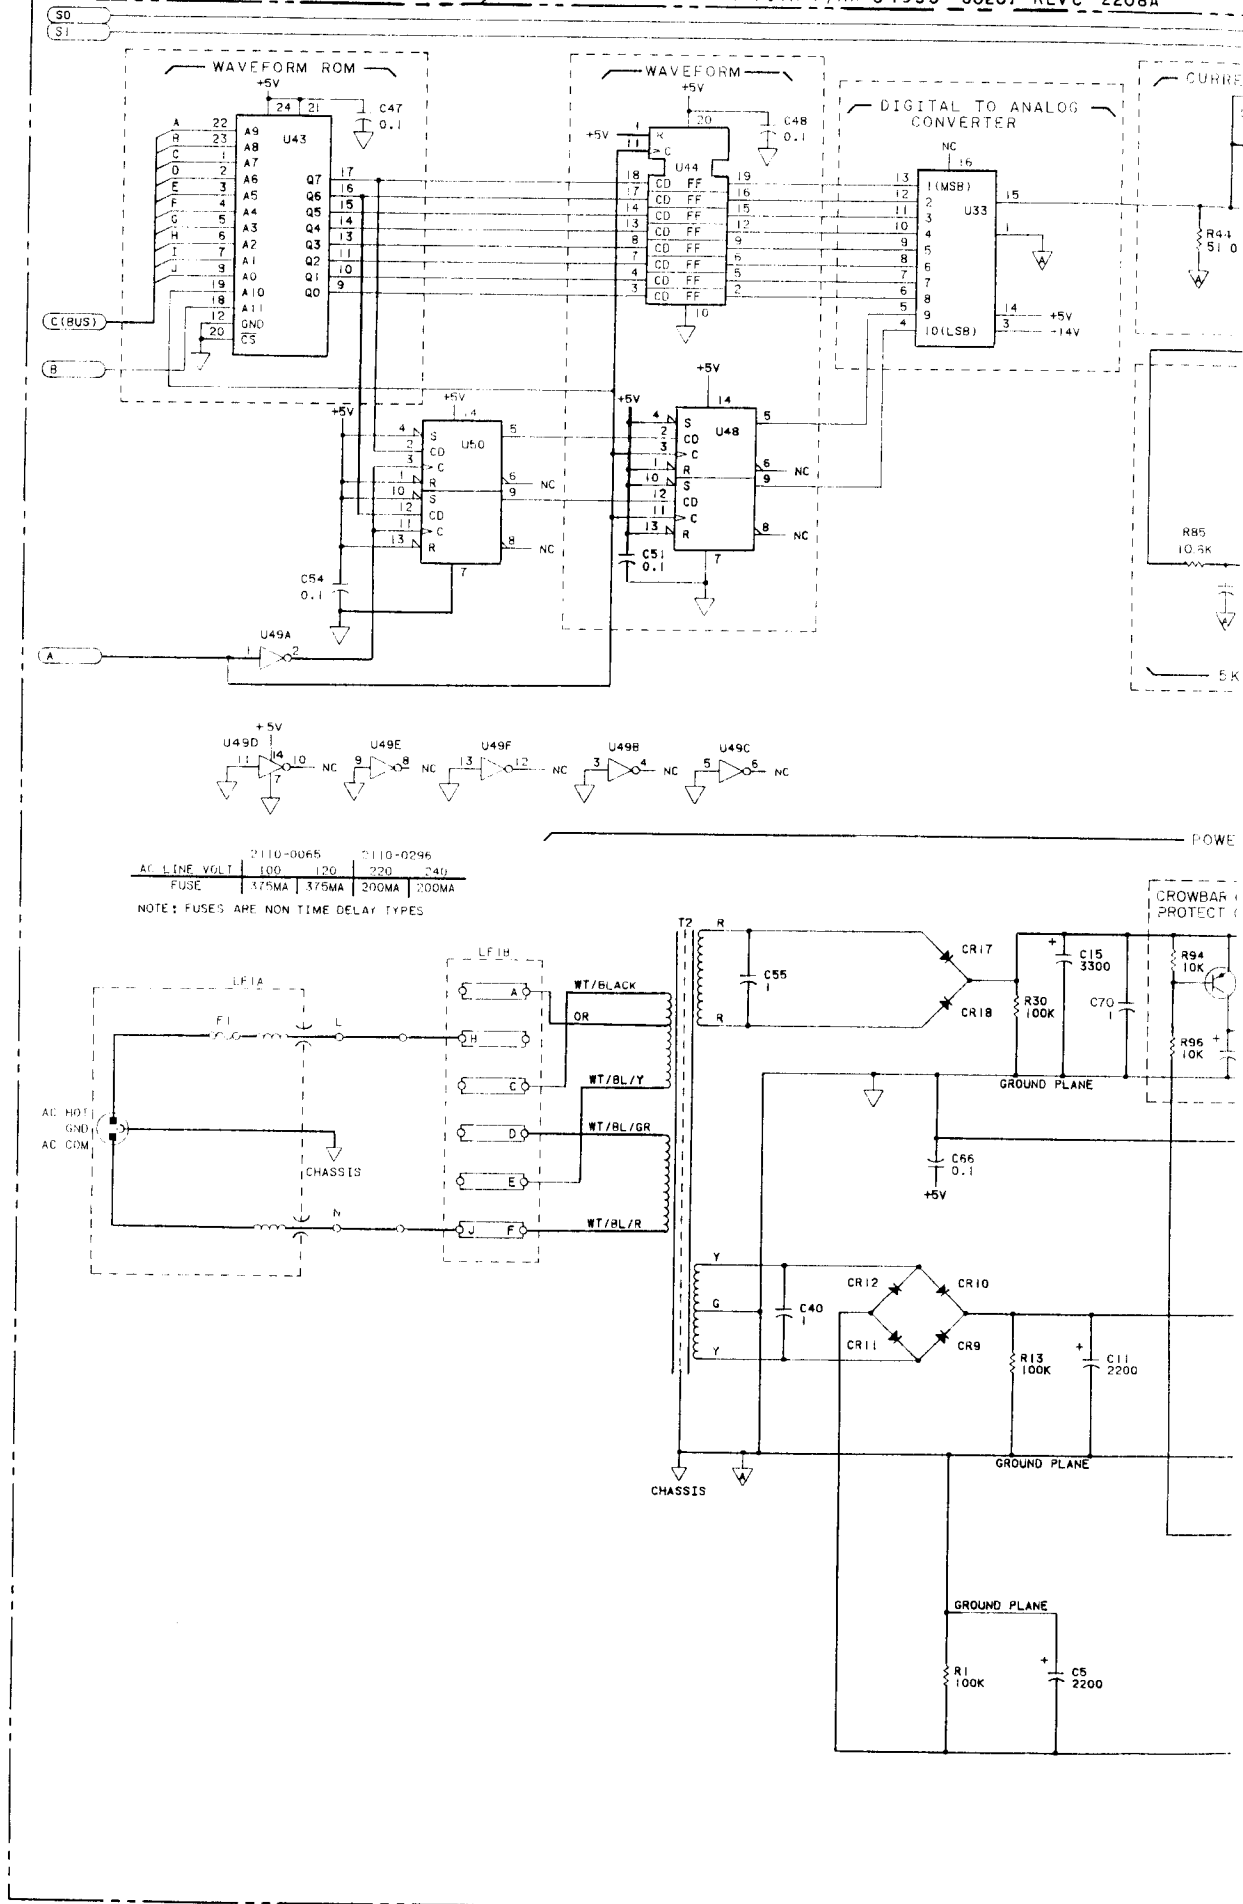


	2110-0065	2110-0296
AC LINE VOLT	100	120 220 240
FUSE	375MA	375MA 200MA 200MA

NOTE: FUSES ARE NON TIME DELAY TYPES

7-18 A

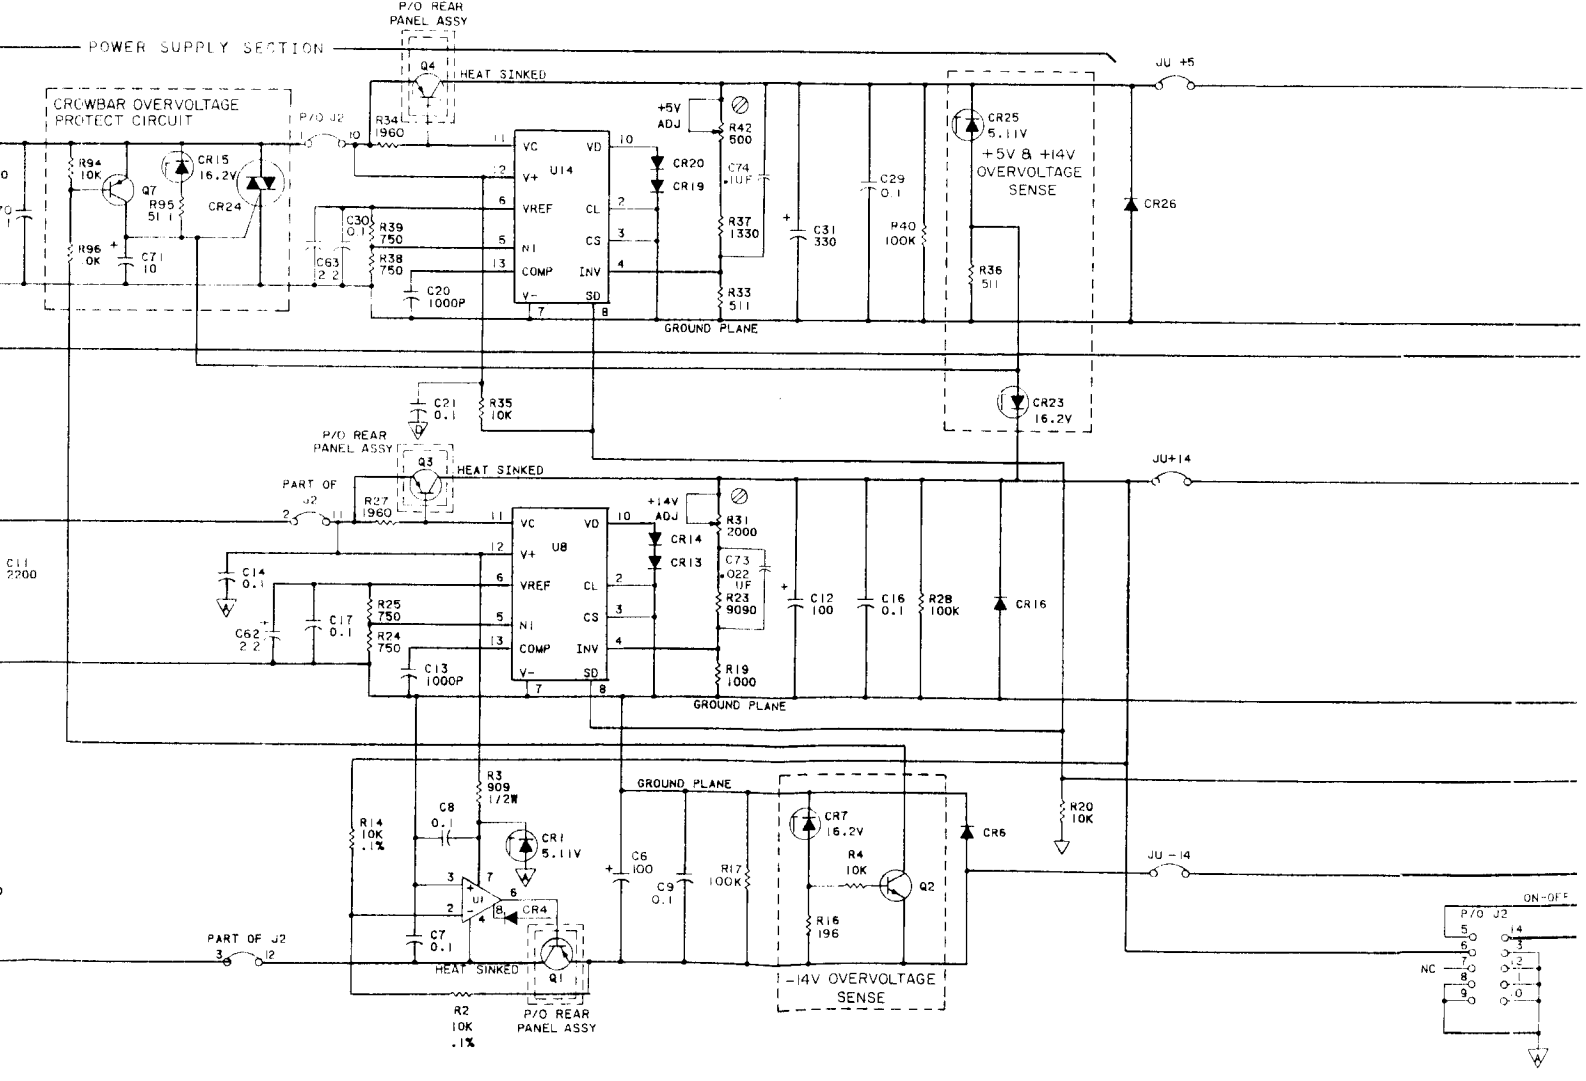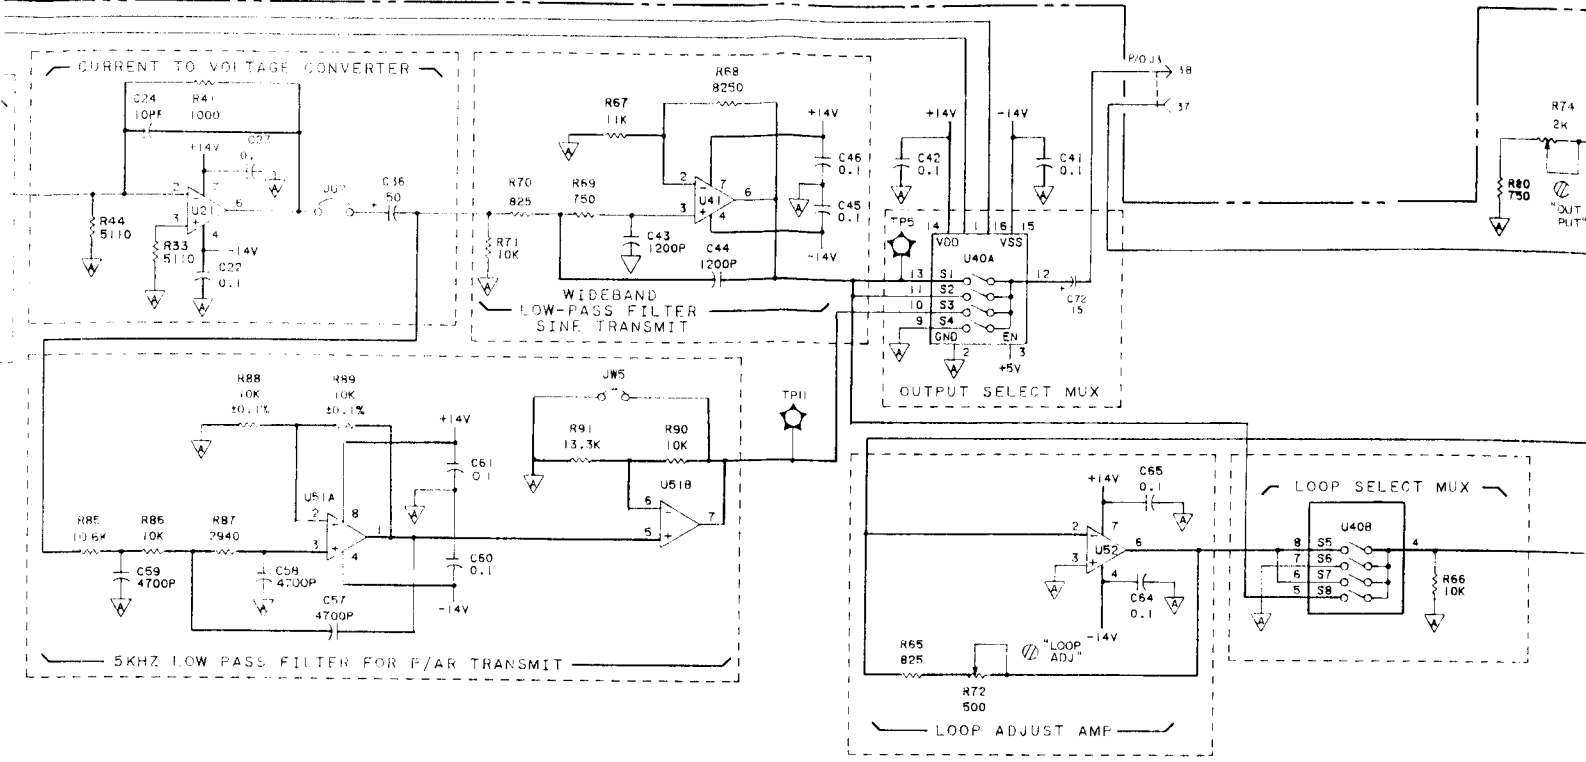

7-18 B

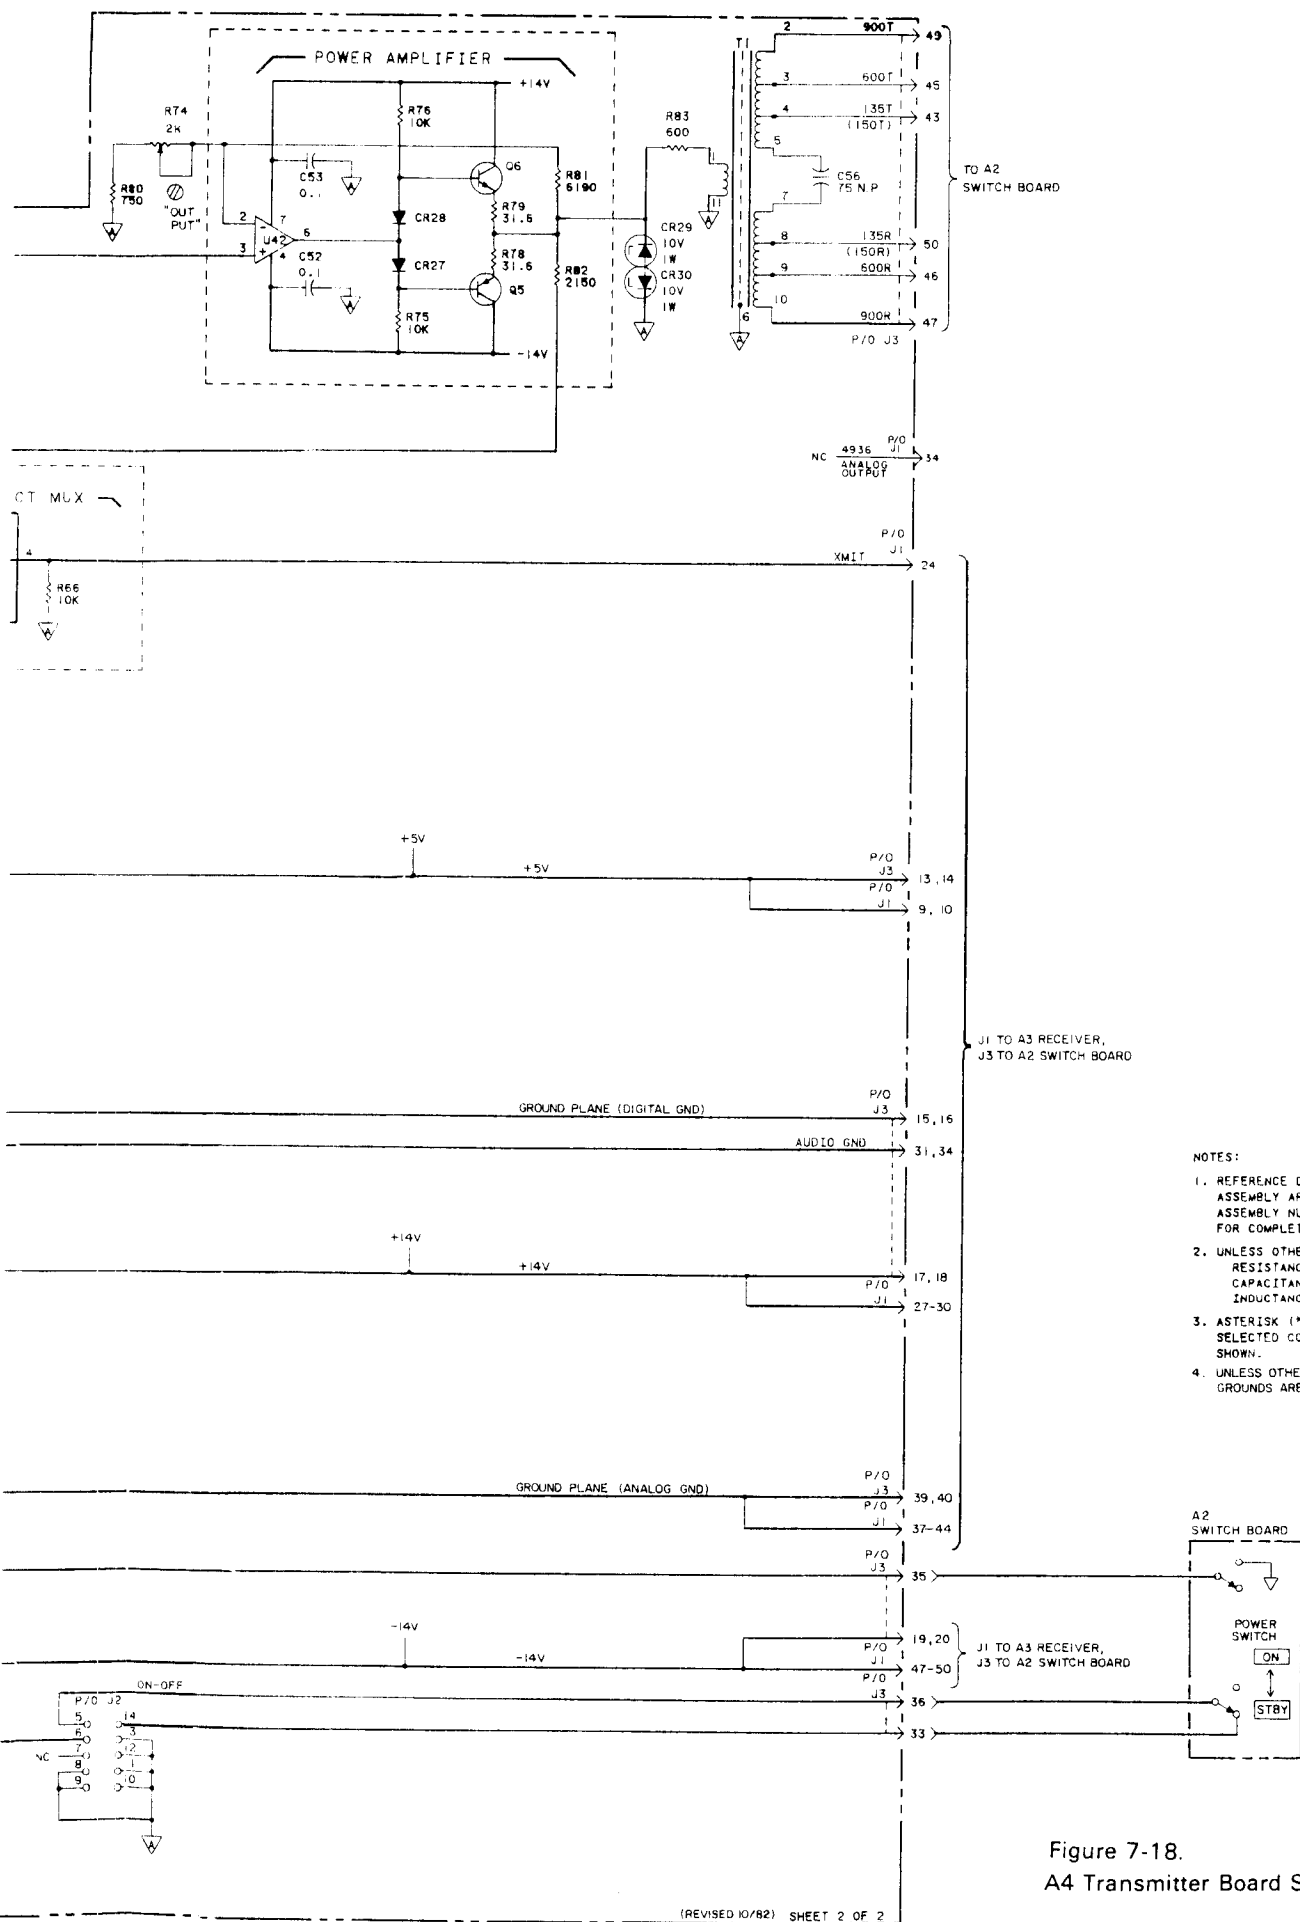

- NOTES:
1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
 2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN MICROFARADS; INDUCTANCE IN HENRIES
 3. ASTERISK (*) INDICATES FACTORY SELECTED COMPONENT, AVERAGE VALUE SHOWN.
 4. UNLESS OTHERWISE INDICATED, ALL GROUNDS ARE DIGITAL GROUNDS

Figure 7-18.
A4 Transmitter Board Schematic Diagram

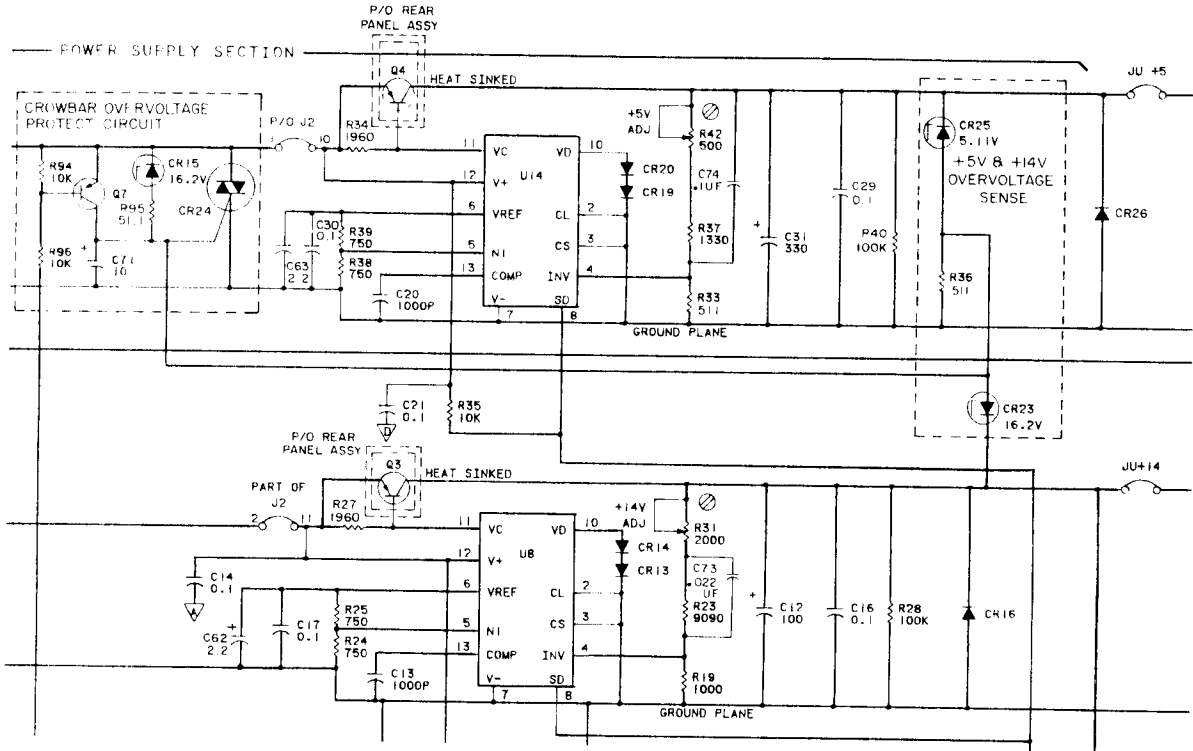


Figure 7-19. A14 Transmitter Board Schematic Diagram (partial) 7-30


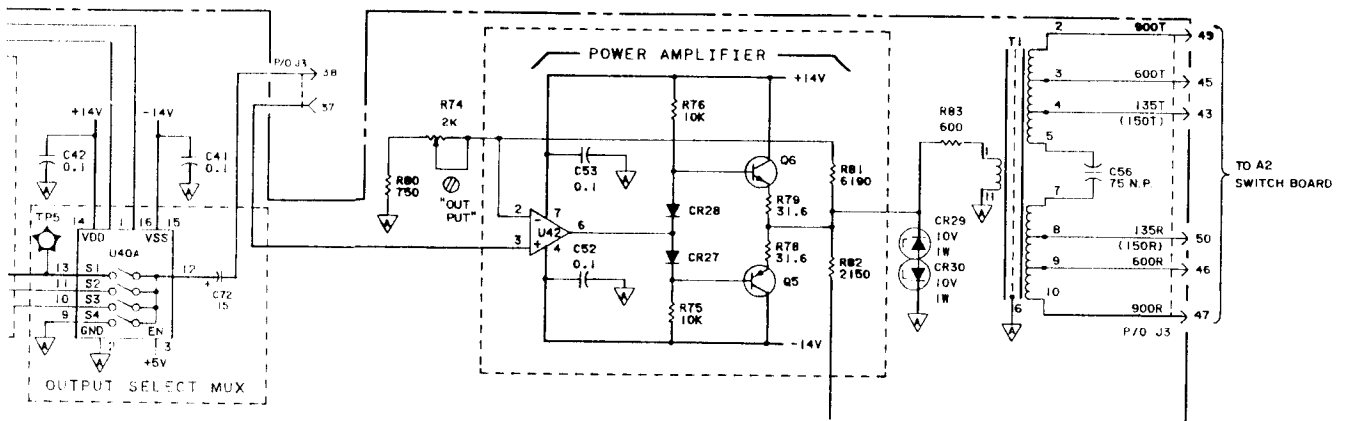


Figure 7-20. A14 Transmitter Board Schematic Diagram (partial)

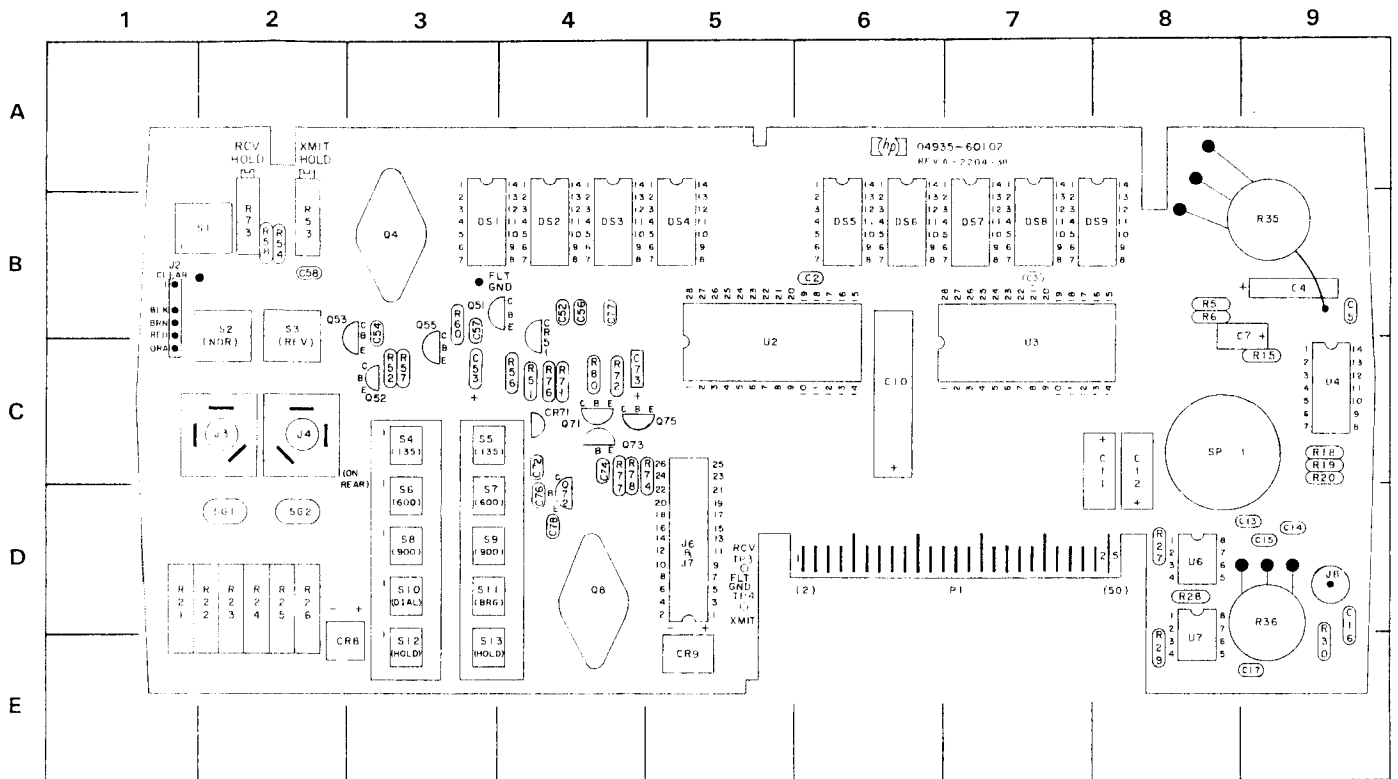

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C2	B-6	C53	C-3	CR71	C-4	J7	D-5	R15	C-9	R35	B-9	R76	C-4	S11	D-3
C3	B-7	C54	C-3	DS1	B-3	J8	D-9	R18	C-9	R36	E-8	R77	D-4	S12	E-3
C4	B-9	C56	C-4	DS2	B-4	Q4	B-3	R19	D-9	R51	C-4	R78	D-4	S13	E-3
C5	B-9	C57	C-3	DS3	B-4	Q8	D-4	R20	D-9	R52	C-3	R80	C-4	SG1	D-2
C7	C-9	C58	B-2	DS4	B-5	Q51	C-4	R21	D-1	R53	B-2	S1	B-1	SG2	D-2
C10	C-5	C72	D-4	DS5	B-6	Q52	C-3	R22	D-2	R54	B-2	S2	C-2	SP	D-5
C11	D-8	C73	C-4	DS6	B-6	Q53	C-3	R23	D-2	R56	C-4	S3	C-2	TP3	C-5
C12	D-8	C74	D-4	DS7	B-7	Q55	C-3	R24	D-2	R57	C-3	S4	C-3	TP4	D-5
C13	D-9	C76	D-4	DS8	B-7	Q71	C-4	R25	D-2	R58	B-2	S5	C-3	U2	C-5
C14	D-9	C77	C-4	DS9	B-8	Q72	D-4	R26	D-2	R60	C-3	S6	D-3	U3	C-7
C15	D-9	C78	D-4	J2	B-1	Q73	C-4	R27	D-8	R71	C-4	S7	D-3	U4	C-9
C16	E-8	CR8	E-3	J3	C-2	Q75	C-5	R28	D-8	R72	C-4	S8	D-3	U6	D-8
C17	E-8	CR9	E-9	J4	C-2	R5	B-8	R29	E-8	R73	B-2	S9	D-3	U7	E-8
C52	C-4	CR51	C-4	J6	D-5	R6	B-8	R30	E-8	R74	D-5	S10	D-3		

Figure 7-21. A2 Switchboard Component Locator


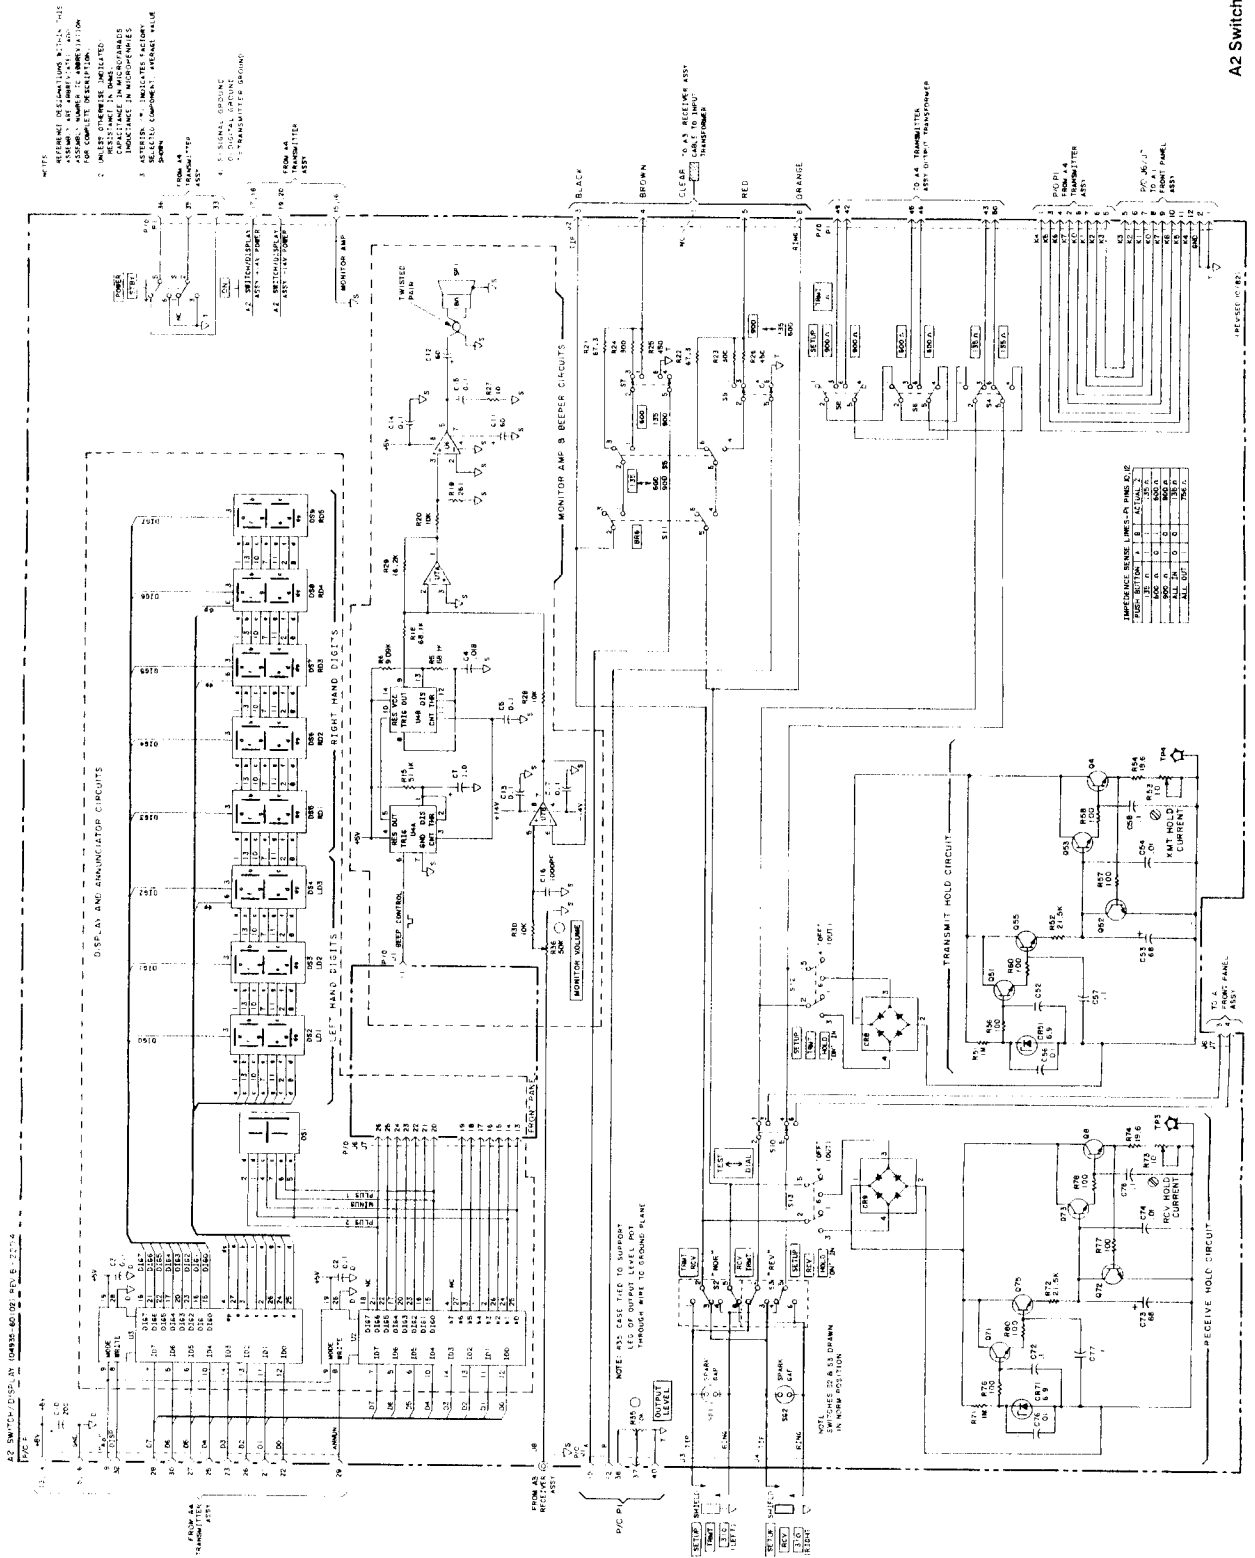


Figure 7-22.
A2 Switchboard Schematic Diagram
7-33

- NOTES:
1. REFERENCE DESIGNATIONS WITH THIS SYMBOL ARE TO BE USED IN THE ASSEMBLY NUMBER TO IDENTIFY THE COMPLETE DESCRIPTION.
 2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN MICROSECONDS; INDUCTANCE IN MICROHENRIES.
 3. ASTERISK (*) INDICATES FACTORY SELECTED COMPONENT, AVERAGE VALUE SHOWN.
 4. SIGNAL GROUND POINTS ARE INDICATED BY A TRIANGLE.


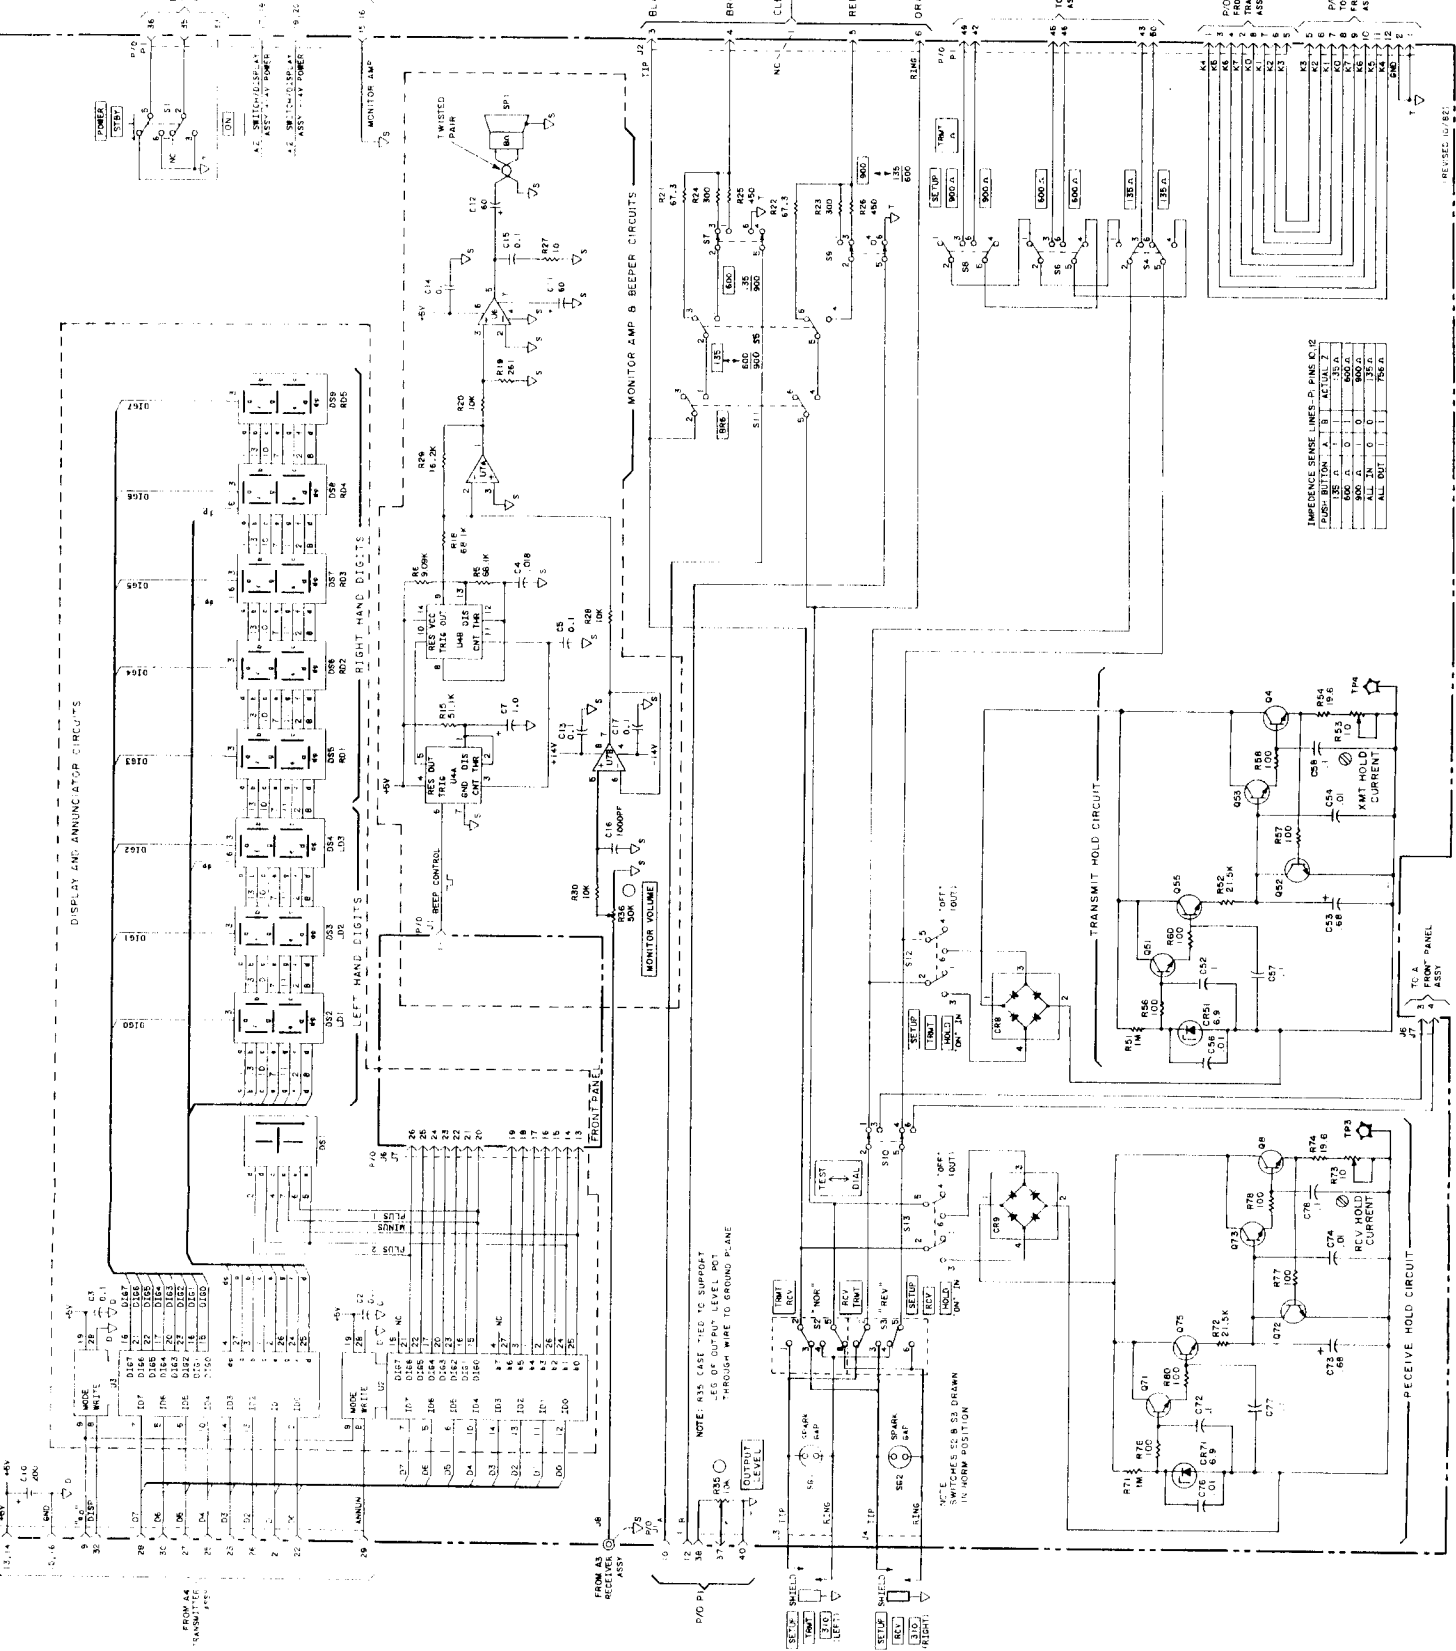


IMPEDANCE SENSE LINES - PINS C12

LINE NUMBER	ACTUAL Z	TEST Z
1	600 Ω	0
2	600 Ω	0
3	600 Ω	0
4	600 Ω	0
5	600 Ω	0
6	600 Ω	0
7	600 Ω	0
8	600 Ω	0
9	600 Ω	0
10	600 Ω	0
11	600 Ω	0
12	600 Ω	0

NOTE: R35 GATE "RED" TO SUPPORT
 "RED" TO LEVEL DC
 "THROUGH WIRE" TO GROUND PLANE

NOTE: R75, C75, C76 DRAWN
 IN NORM POSITION

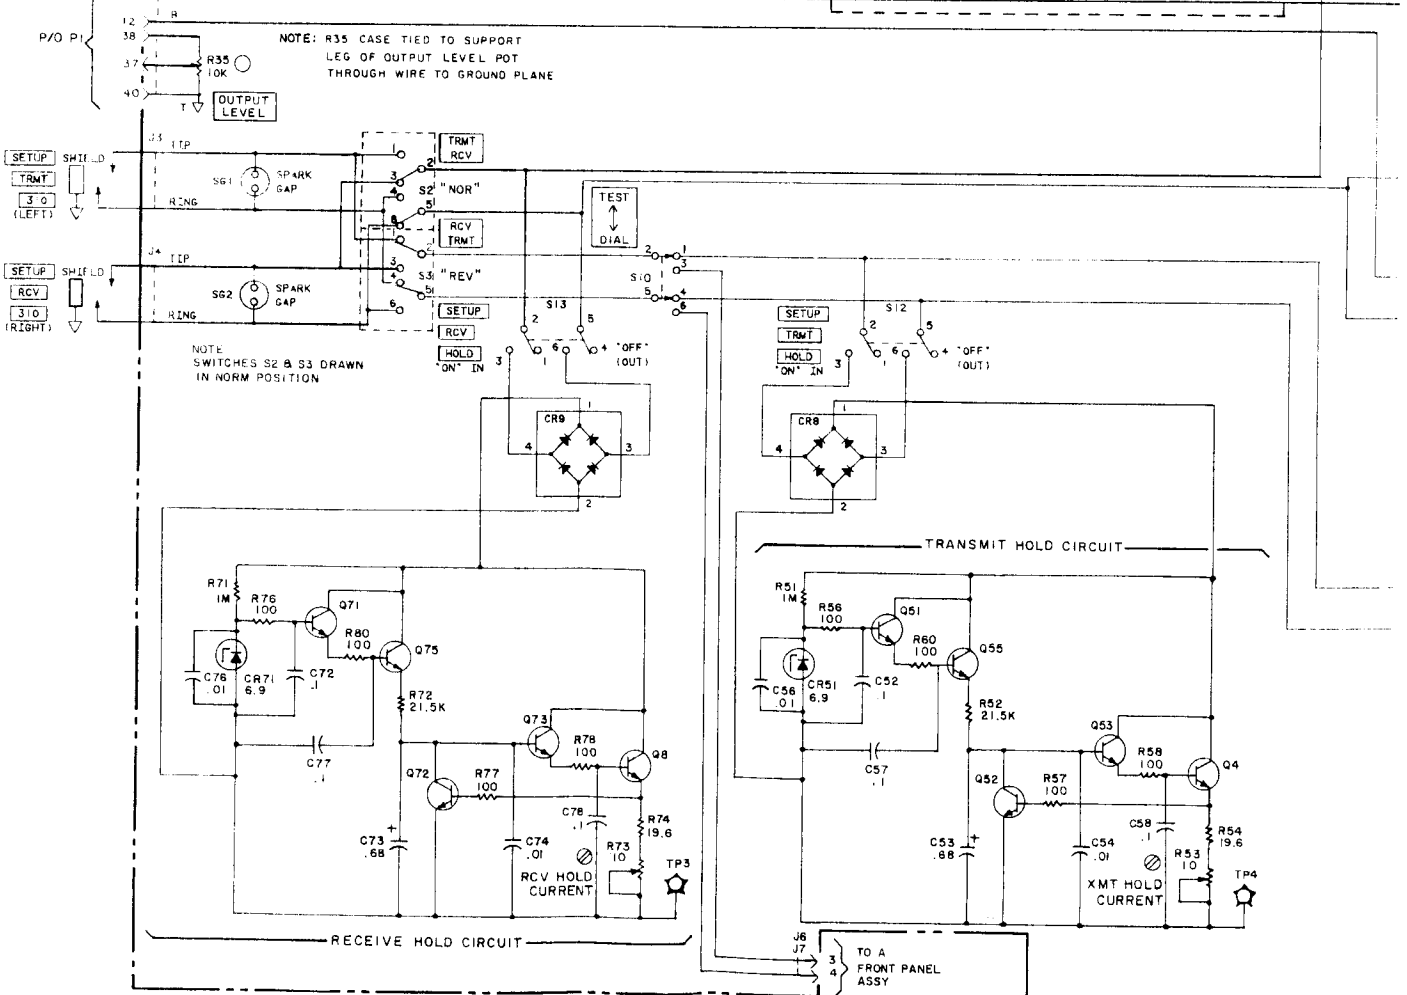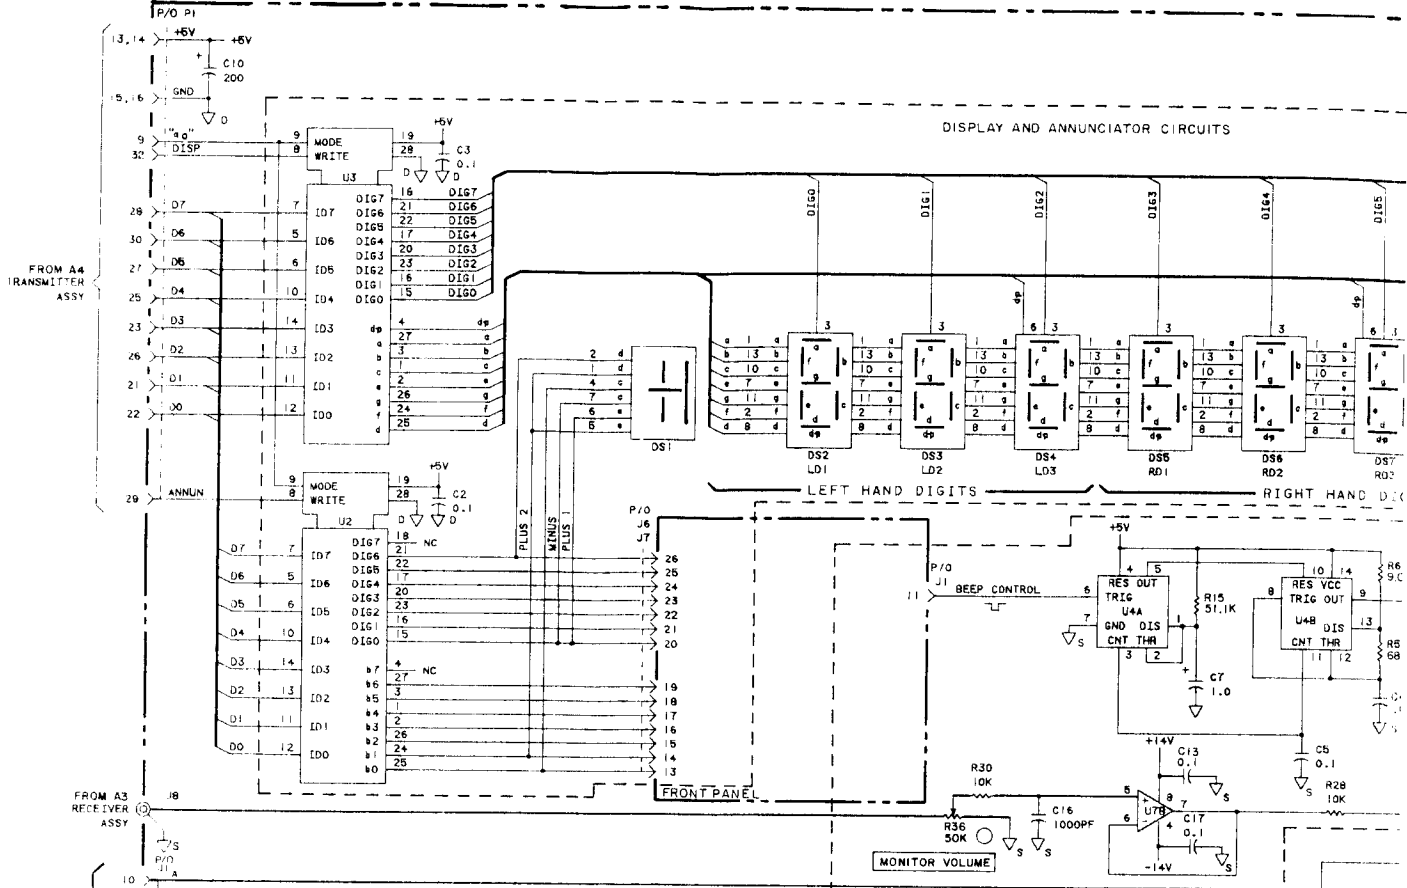

7-22A

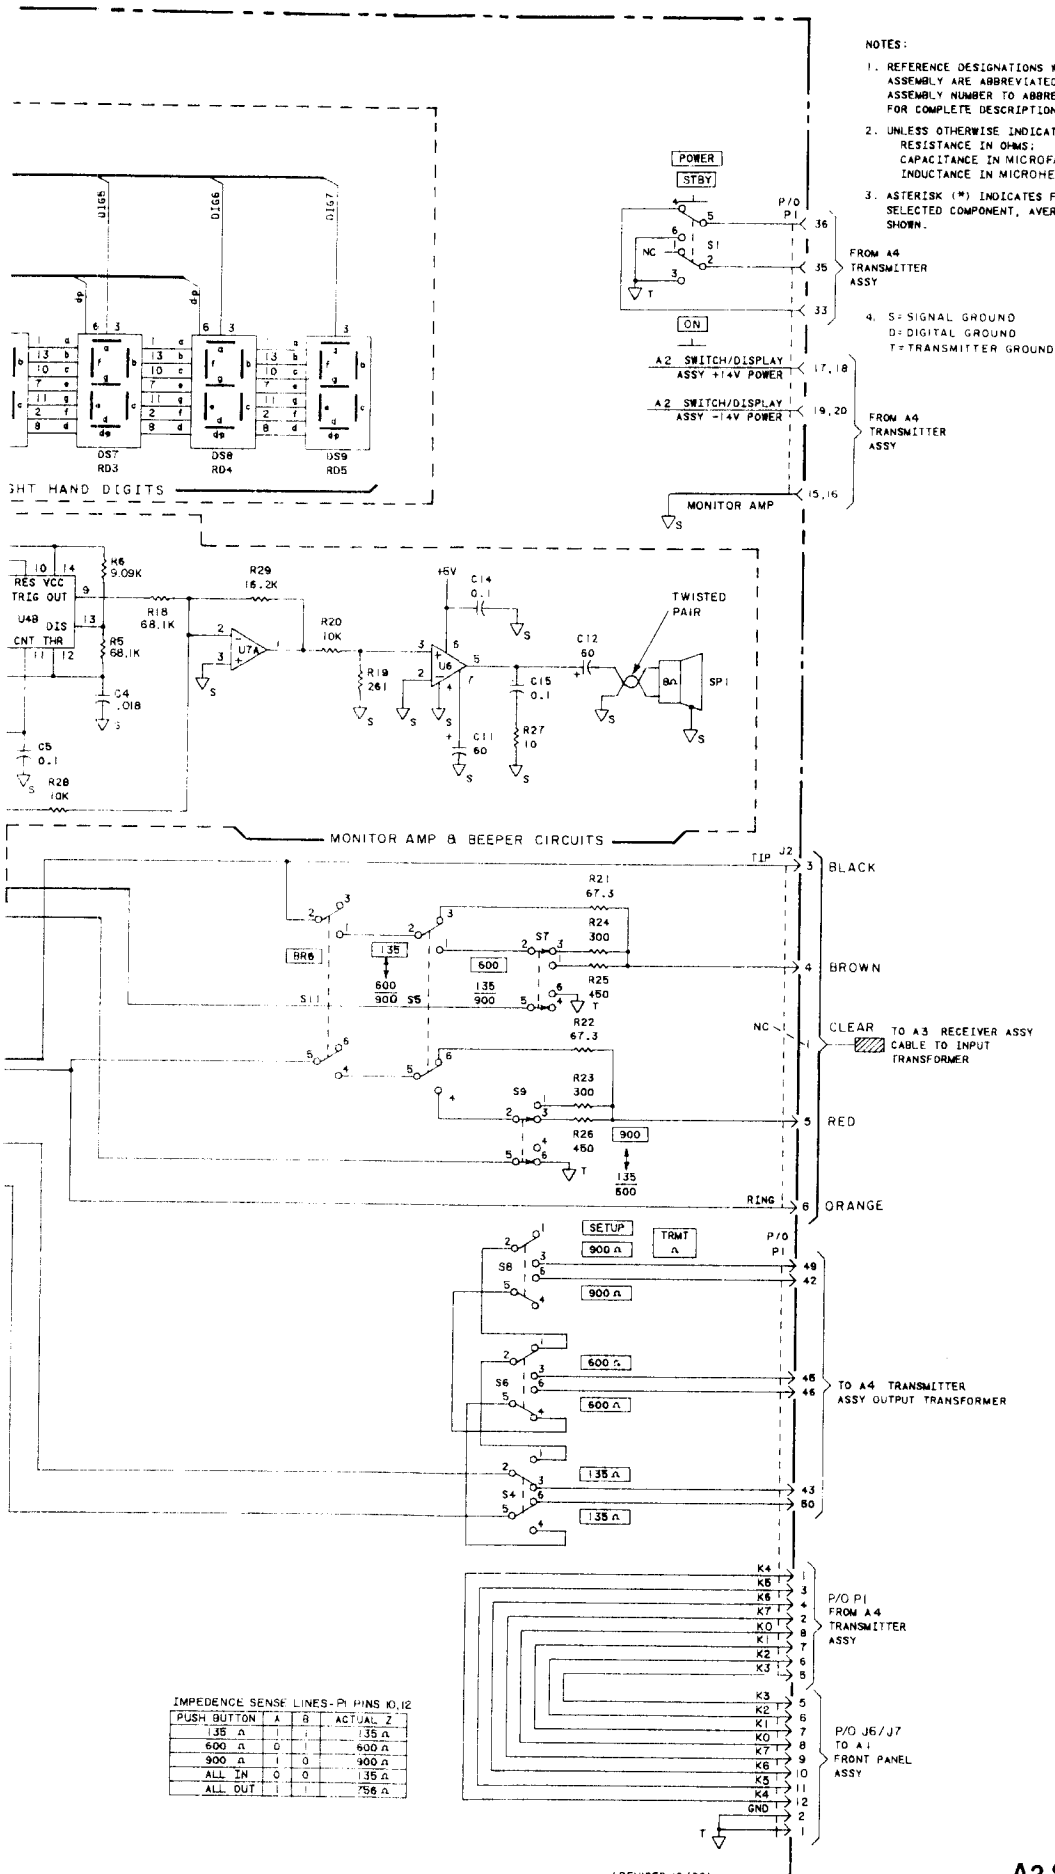


Figure 7-22. A2 Switchboard Schematic Diagram


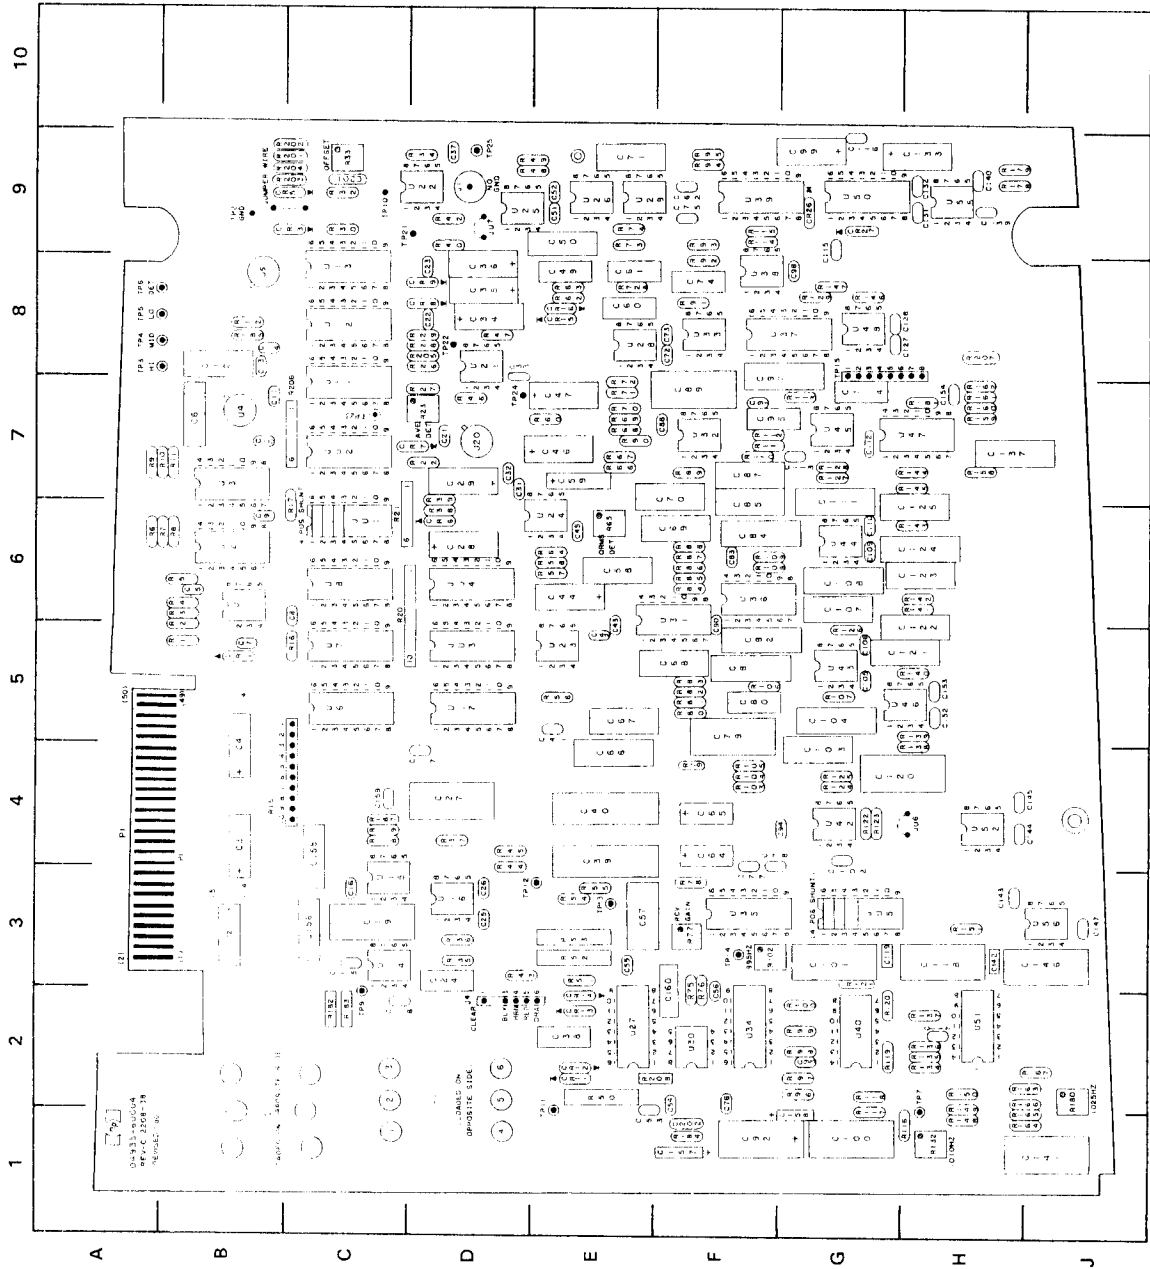


Figure 7-23. A3 Receiver Board Component Locator


REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	B 1	C31	G 15	R150	H 2	U54	H 2	F-2	F 2
C2	B 9	C62	F 8	R158	H 7	U36	H 7	F-3	F 3
C3	B 4	C63	F 8	R159	H 7	U37	H 7	F-4	F 4
C4	B 4	C84	F 7	R172A	H 8	U38	H 7	F-5	F 5
C5	B 9	C85	F 7	R172	H 8	U39	H 7	F-6	F 6
C6	B 5	C86	F 7	R173	H 8	U40	H 7	F-7	F 7
C7	B 5	C87	F 7	R174	H 8	U41	H 7	F-8	F 8
C8	B 5	C88	F 7	R175	H 8	U42	H 7	F-9	F 9
C9	B 9	C90	F 9	R176	H 8	U43	H 7	F-10	F 10
C10	B 9	C91	F 9	R177	H 8	U44	H 7	F-11	F 11
C11	B 7	C92	F 11	R178	H 8	U45	H 7	F-12	F 12
C12	B 9	C93	G 2	R179	H 8	U46	H 7	F-13	F 13
C13	B 8	C94	G 2	R180	H 8	U47	H 7	F-14	F 14
C14	B 8	C95	G 2	R181	H 8	U48	H 7	F-15	F 15
C15	B 3	C96	G 4	R182	H 8	U49	H 7	F-16	F 16
C16	C 3	C97	G 4	R183	H 8	U50	H 7	F-17	F 17
C17	D 4	C98	G 9	R184	H 8	U51	H 7	F-18	F 18
C18	C 2	C100	G 1	R185	H 8	U52	H 7	F-19	F 19
C19	D 1	C101	G 1	R186	H 8	U53	H 7	F-20	F 20
C20	D 1	C102	G 4	R187	H 8	U54	H 7	F-21	F 21
C21	D 1	C103	G 4	R188	H 8	U55	H 7	F-22	F 22
C22	D 8	C104	G 5	R189	H 8	U56	H 7	F-23	F 23
C23	D 8	C105	G 5	R190	H 8				
C24	D 8	C106	G 5	R191	H 8				
C25	D 3	C107	G 6	R192	H 8				
C26	D 3	C108	G 6	R193	H 8				
C27	D 4	C109	G 6	R194	H 8				
C28	D 4	C110	G 6	R195	H 8				
C29	D 7	C111	G 7	R196	H 8				
C30	D 7	C112	G 7	R197	H 8				
C31	D 7	C113	G 7	R198	H 8				
C32	D 7	C114	G 7	R199	H 8				
C33	D 8	C115	G 9	R200	H 8				
C34	D 8	C116	G 9	R201	H 8				
C35	D 8	C117	G 9	R202	H 8				
C36	D 8	C118	G 9	R203	H 8				
C37	D 9	C119	G 9	R204	H 8				
C38	E 4	C120	G 3	R205	H 8				
C39	E 4	C121	G 3	R206	H 8				
C40	E 4	C122	G 3	R207	H 8				
C41	E 5	C123	G 3	R208	H 8				
C42	E 5	C124	G 3	R209	H 8				
C43	E 5	C125	G 3	R210	H 8				
C44	E 5	C126	G 3	R211	H 8				
C45	E 5	C127	G 3	R212	H 8				
C46	E 7	C128	G 3	R213	H 8				
C47	E 7	C129	G 3	R214	H 8				
C48	E 8	C130	G 3	R215	H 8				
C49	E 8	C131	G 3	R216	H 8				
C50	E 8	C132	G 3	R217	H 8				
C51	E 9	C133	G 3	R218	H 8				
C52	E 9	C134	G 3	R219	H 8				
C53	E 9	C135	G 3	R220	H 8				
C54	E 2	C140	G 1	R221	H 8				
C55	E 2	C141	G 1	R222	H 8				
C56	E 2	C142	G 1	R223	H 8				
C57	E 2	C143	G 1	R224	H 8				
C58	E 2	C144	G 1	R225	H 8				
C59	E 7	C145	G 3	R226	H 8				
C60	E 7	C146	G 3	R227	H 8				
C61	E 7	C147	G 3	R228	H 8				
C62	E 9	C148	G 3	R229	H 8				
C63	F 2	C154	H 7	R230	H 8				
C64	F 4	C155	H 4	R231	H 8				
C65	F 4	C156	H 4	R232	H 8				
C66	F 4	C157	H 4	R233	H 8				
C67	F 5	C158	H 4	R234	H 8				
C68	F 5	C159	H 4	R235	H 8				
C69	F 9	C160	H 5	R236	H 8				
C70	F 9	C202	F 1	R237	H 8				
C71	F 9	C203	F 1	R238	H 8				
C72	F 8	C81	B 5	R239	H 8				
C73	F 8	C82	B 5	R240	H 8				
C74	F 8	C83	B 5	R241	H 8				
C75	F 8	C84	B 5	R242	H 8				
C76	F 2	C85	D 6	R243	H 8				
C77	F 4	C87	D 7	R244	H 8				
C78	F 4	C88	D 8	R245	H 8				
C79	F 4	C89	D 8	R246	H 8				
C80	F 5	C91	E 2	R247	H 8				

Manual Changes

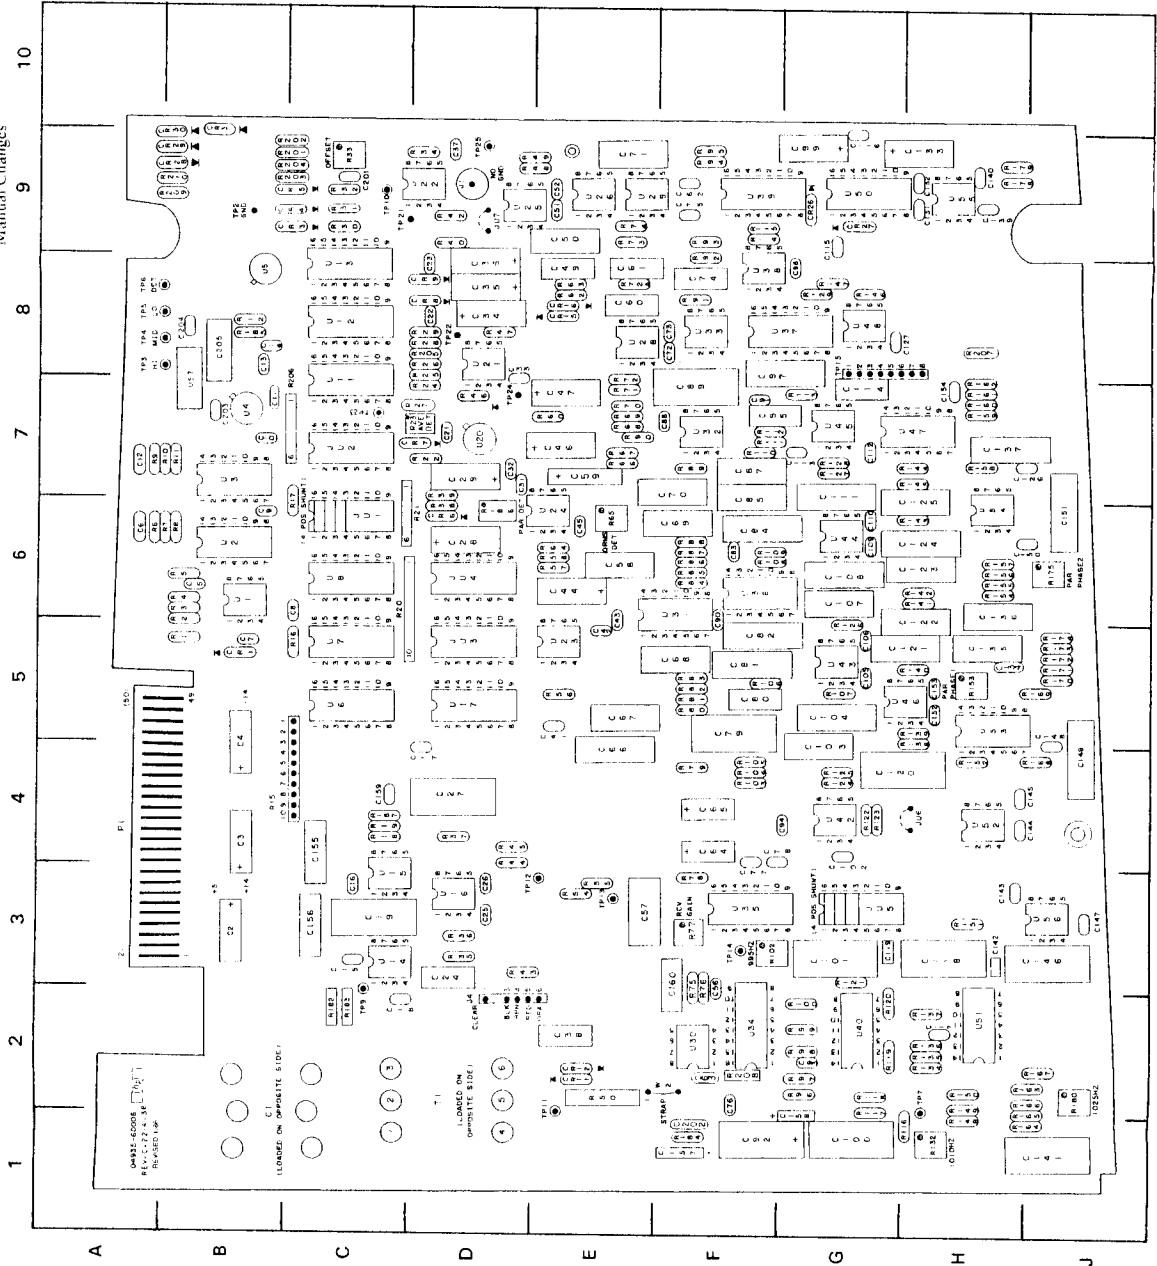


REF. DESIG	GRID LOC	REF. DESIG	GRID LOC	REF. DESIG	GRID LOC	REF. DESIG	GRID LOC	REF. DESIG	GRID LOC	REF. DESIG	GRID LOC	REF. DESIG	GRID LOC
C1	B2	C86	F6	CR4	C9	R86	E6	R139	H5	U3	M5	U3	M5
C2	B3	C87	F7	CR5	C9	R87	E7	R140	H6	U4	M6	U4	M6
C3	B4	C88	F8	CR6	D7	R88	E8	R141	H7	U5	M7	U5	M7
C4	B5	C89	F9	CR7	D8	R89	E9	R142	H8	U6	M8	U6	M8
C5	B6	C90	F10	CR8	D8	R90	E8	R143	H6	U7	M6	U7	M6
C6	B7	C91	F11	CR9	D9	R91	E9	R144	H7	U8	M7	U8	M7
C7	B8	C92	F12	CR10	E1	R92	F1	R145	H8	U9	M8	U9	M8
C8	B9	C93	G1	CR11	E2	R93	F2	R146	H9	U10	M9	U10	M9
C9	B10	C94	G2	CR12	E2	R94	F2	R147	G8	U11	C8	U11	C8
C10	B11	C95	G3	CR13	E3	R95	F3	R148	H1	U14	C3	U14	C3
C11	B12	C96	G4	CR14	E3	R96	F3	R149	H2	U15	C3	U15	C3
C12	B13	C97	G5	CR15	E4	R97	F4	R150	H3	U16	C3	U16	C3
C13	B14	C98	G6	CR16	E4	R98	F4	R151	H3	U17	D7	U17	D7
C14	B15	C99	G7	CR17	E5	R99	F5	R152	H4	U20	D7	U20	D7
C15	B16	C100	G8	CR18	E5	R100	F5	R153	H5	U21	D8	U21	D8
C16	B17	C101	G9	CR19	E6	R101	F6	R154	H6	U22	D8	U22	D8
C17	B18	C102	G10	CR20	E6	R102	F6	R155	H6	U23	D8	U23	D8
C18	B19	C103	G11	CR21	E7	R103	F7	R156	H8	U24	D9	U24	D9
C19	B20	C104	G12	CR22	E7	R104	F7	R157	H9	U25	D9	U25	D9
C20	B21	C105	G13	CR23	E8	R105	F8	R158	H1	U28	E8	U28	E8
C21	B22	C106	G14	CR24	E8	R106	F8	R159	H2	U29	E9	U29	E9
C22	B23	C107	G15	CR25	E9	R107	F9	R160	H7	U30	F2	U30	F2
C23	B24	C108	G16	CR26	E9	R108	F9	R161	H7	U30	F2	U30	F2
C24	B25	C109	G17	CR27	E10	R109	F10	R162	J7	U31	F9	U31	F9
C25	B26	C110	G18	CR28	E10	R110	F10	R163	J1	U33	F8	U33	F8
C26	B27	C111	G19	CR29	E11	R111	F11	R164	J2	U34	F2	U34	F2
C27	B28	C112	G20	CR30	E11	R112	F11	R165	J2	U35	F2	U35	F2
C28	B29	C113	G21	CR31	E12	R113	F12	R166	J2	U35	F2	U35	F2
C29	B30	C114	G22	CR32	E12	R114	F12	R167	J4	U37	G8	U37	G8
C30	B31	C115	G23	CR33	E12	R115	F12	R168	J4	U37	G8	U37	G8
C31	B32	C116	G24	CR34	E13	R116	F13	R169	J5	U38	F8	U38	F8
C32	B33	C117	G25	CR35	E13	R117	F13	R170	J5	U39	F9	U39	F9
C33	B34	C118	G26	CR36	E13	R118	F13	R171	J5	U40	G4	U40	G4
C34	B35	C119	G27	CR37	E14	R119	F14	R172	J5	U40	G4	U40	G4
C35	B36	C120	G28	CR38	E14	R120	F14	R173	J5	U43	G5	U43	G5
C36	B37	C121	G29	CR39	E14	R121	F14	R174	J5	U44	G6	U44	G6
C37	B38	C122	G30	CR40	E15	R122	F15	R175	H9	U47	H7	U47	H7
C38	B39	C123	G31	CR41	E15	R123	F15	R176	H9	U47	H7	U47	H7
C39	B40	C124	G32	CR42	E15	R124	F15	R177	H9	U47	H7	U47	H7
C40	B41	C125	G33	CR43	E16	R125	F16	R178	H9	U47	H7	U47	H7
C41	B42	C126	G34	CR44	E16	R126	F16	R179	H9	U47	H7	U47	H7
C42	B43	C127	G35	CR45	E16	R127	F16	R180	J2	U48	G8	U48	G8
C43	B44	C128	G36	CR46	E16	R128	F16	R181	J2	U48	G8	U48	G8
C44	B45	C129	G37	CR47	E17	R129	F17	R182	G2	U50	G9	U50	G9
C45	B46	C130	G38	CR48	E17	R130	F17	R183	G2	U50	G9	U50	G9
C46	B47	C131	G39	CR49	E17	R131	F17	R184	G2	U50	G9	U50	G9
C47	B48	C132	G40	CR50	E18	R132	F18	R185	B8	U53	H5	U53	H5
C48	B49	C133	G41	CR51	E18	R133	F18	R186	B8	U54	H5	U54	H5
C49	B50	C134	G42	CR52	E18	R134	F18	R187	B8	U54	H5	U54	H5
C50	B51	C135	G43	CR53	E19	R135	F19	R188	B8	U54	H5	U54	H5
C51	B52	C136	G44	CR54	E19	R136	F19	R189	B8	U54	H5	U54	H5
C52	B53	C137	G45	CR55	E19	R137	F19	R190	B8	U54	H5	U54	H5
C53	B54	C138	G46	CR56	E20	R138	F20	R191	B8	U54	H5	U54	H5
C54	B55	C139	G47	CR57	E20	R139	F20	R192	B8	U54	H5	U54	H5
C55	B56	C140	G48	CR58	E20	R140	F20	R193	B8	U54	H5	U54	H5
C56	B57	C141	G49	CR59	E21	R141	F21	R194	B8	U54	H5	U54	H5
C57	B58	C142	G50	CR60	E21	R142	F21	R195	B8	U54	H5	U54	H5
C58	B59	C143	G51	CR61	E21	R143	F21	R196	B8	U54	H5	U54	H5
C59	B60	C144	G52	CR62	E22	R144	F22	R197	B8	U54	H5	U54	H5
C60	B61	C145	G53	CR63	E22	R145	F22	R198	B8	U54	H5	U54	H5
C61	B62	C146	G54	CR64	E22	R146	F22	R199	B8	U54	H5	U54	H5
C62	B63	C147	G55	CR65	E23	R147	F23	R200	B8	U54	H5	U54	H5
C63	B64	C148	G56	CR66	E23	R148	F23	R201	B8	U54	H5	U54	H5
C64	B65	C149	G57	CR67	E23	R149	F23	R202	B8	U54	H5	U54	H5
C65	B66	C150	G58	CR68	E24	R150	F24	R203	B8	U54	H5	U54	H5
C66	B67	C151	G59	CR69	E24	R151	F24	R204	B8	U54	H5	U54	H5
C67	B68	C152	G60	CR70	E24	R152	F24	R205	B8	U54	H5	U54	H5
C68	B69	C153	G61	CR71	E25	R153	F25	R206	B8	U54	H5	U54	H5
C69	B70	C154	G62	CR72	E25	R154	F25	R207	B8	U54	H5	U54	H5
C70	B71	C155	G63	CR73	E25	R155	F25	R208	B8	U54	H5	U54	H5
C71	B72	C156	G64	CR74	E26	R156	F26	R209	B8	U54	H5	U54	H5
C72	B73	C157	G65	CR75	E26	R157	F26	R210	B8	U54	H5	U54	H5
C73	B74	C158	G66	CR76	E26	R158	F26	R211	B8	U54	H5	U54	H5
C74	B75	C159	G67	CR77	E27	R159	F27	R212	B8	U54	H5	U54	H5
C75	B76	C160	G68	CR78	E27	R160	F27	R213	B8	U54	H5	U54	H5
C76	B77	C161	G69	CR79	E27	R161	F27	R214	B8	U54	H5	U54	H5
C77	B78	C162	G70	CR80	E28	R162	F28	R215	B8	U54	H5	U54	H5
C78	B79	C163	G71	CR81	E28	R163	F28	R216	B8	U54	H5	U54	H5
C79	B80	C164	G72	CR82	E28	R164	F28	R217	B8	U54	H5	U54	H5
C80	B81	C165	G73	CR83	E29	R165	F29	R218	B8	U54	H5	U54	H5
C81	B82	C166	G74	CR84	E29	R166	F29	R219	B8	U54	H5	U54	H5
C82	B83	C167	G75	CR85	E29	R167	F29	R220	B8	U54	H5	U54	H5
C83	B84	C168	G76	CR86	E30	R168	F30	R221	B8	U54	H5	U54	H5
C84	B85	C169	G77	CR87	E30	R169	F30	R222	B8	U54	H5	U54	H5
C85	B86	C170	G78	CR88	E30	R170	F30	R223	B8	U54	H5	U54	H5
C86	B87	C171	G79	CR89	E31	R171	F31	R224	B8	U54	H5	U54	H5
C87	B88	C172	G80	CR90	E31	R172	F31	R225	B8	U54	H5	U54	H5
C88	B89	C173	G81	CR91	E31	R173	F31	R226	B8	U54	H5	U54	H5
C89	B90	C174	G82	CR92	E32	R174	F32	R227	B8	U54	H5	U54	H5
C90	B91	C175	G83	CR93	E32	R175	F32	R228	B8	U54	H5	U54	H5
C91	B92	C176	G84	CR94	E32	R176	F32	R229	B8	U54	H5	U54	H5
C92	B93	C177	G85	CR95	E33	R177	F33	R230	B8	U54	H5	U54	H5
C93	B94	C178	G86	CR96	E33	R178	F33	R231	B8	U54	H5	U54	H5
C94	B95	C179	G87	CR97	E33	R179	F33	R232	B8	U54	H5	U54	H5
C95	B96	C180	G88	CR98	E34	R180	F34	R233	B8	U54	H5	U54	H5
C96	B97	C181	G89	CR99	E34	R181	F34	R234	B8	U54	H5	U54	H5
C97	B98	C182	G90	CR100	E34	R182	F34	R235	B8	U54	H5	U54	H5
C98	B99	C183	G91	CR101	E35	R183	F35	R236	B8	U54	H5	U54	H5
C99	B100	C184	G92	CR102	E35	R184	F35	R237	B8	U54	H5	U54	H5
C100	B101	C185	G93	CR103	E35	R185	F35	R238	B8	U54	H5	U54	H5
C101	B102	C186	G94	CR104	E36	R186	F36	R239	B8	U54	H5	U54	H5
C102	B103	C187	G95	CR105	E36	R187	F36	R240	B8	U54	H5	U54	H5
C103	B104	C188	G96	CR106	E36	R188	F36	R241	B8	U54	H5	U54	H5
C104	B105	C189	G97	CR107	E37	R189	F37	R242	B8	U54	H5	U54	H5
C105	B106	C190	G98	CR108	E37	R190	F37	R243	B8	U54	H5	U54	H5
C106	B107	C191	G99	CR109	E37	R191	F37	R244	B8	U54	H5	U54	H5
C107	B108	C192	G100	CR110	E38	R192	F38	R245	B8	U54	H5	U54	H5
C108	B109	C193	G101	CR111	E38	R193	F38	R246	B8	U54	H5	U54	H5
C109	B110	C194	G102	CR112	E38	R194	F38	R247	B8	U54	H5	U54	H5
C110	B111	C195											


A3 RECEIVER BD 04935-60004 AND (A13 RECEIVER BD WITH P/AR 04935-60006) REV C SERIES 2247A

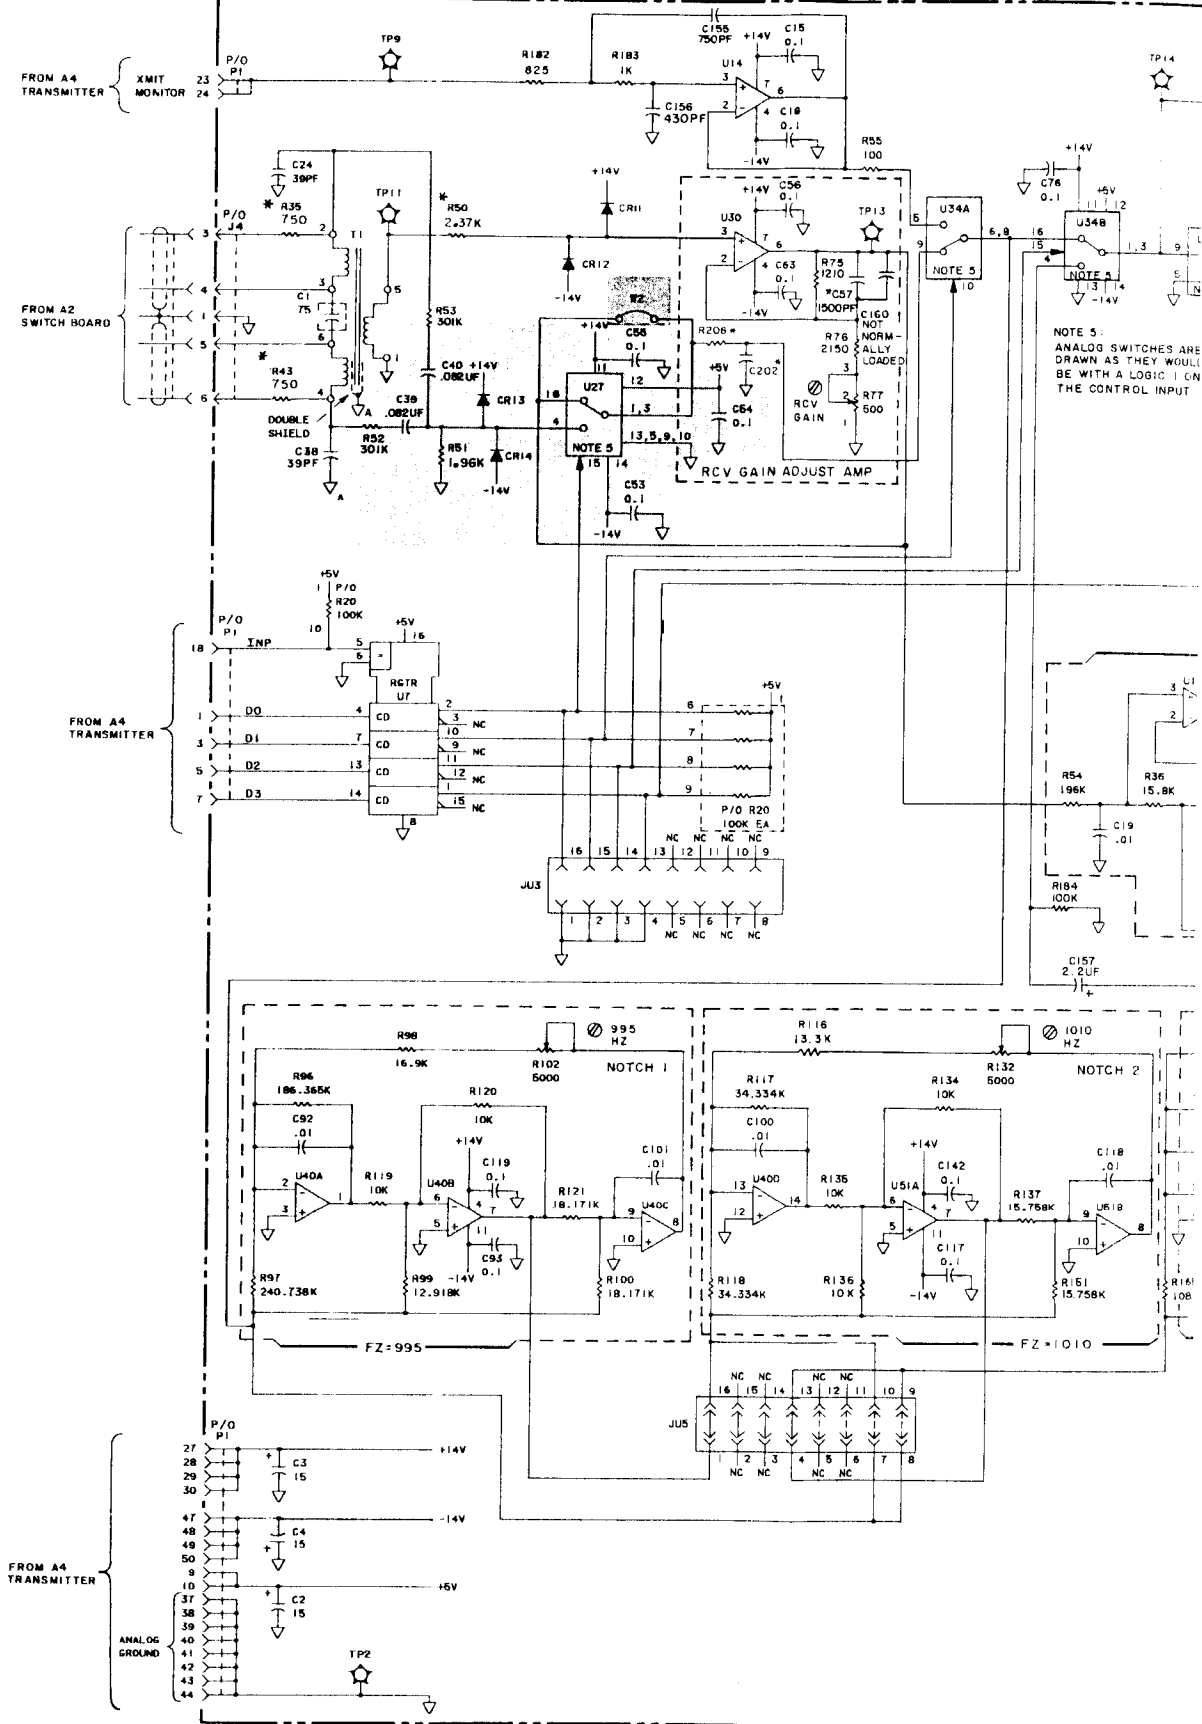

7-25A

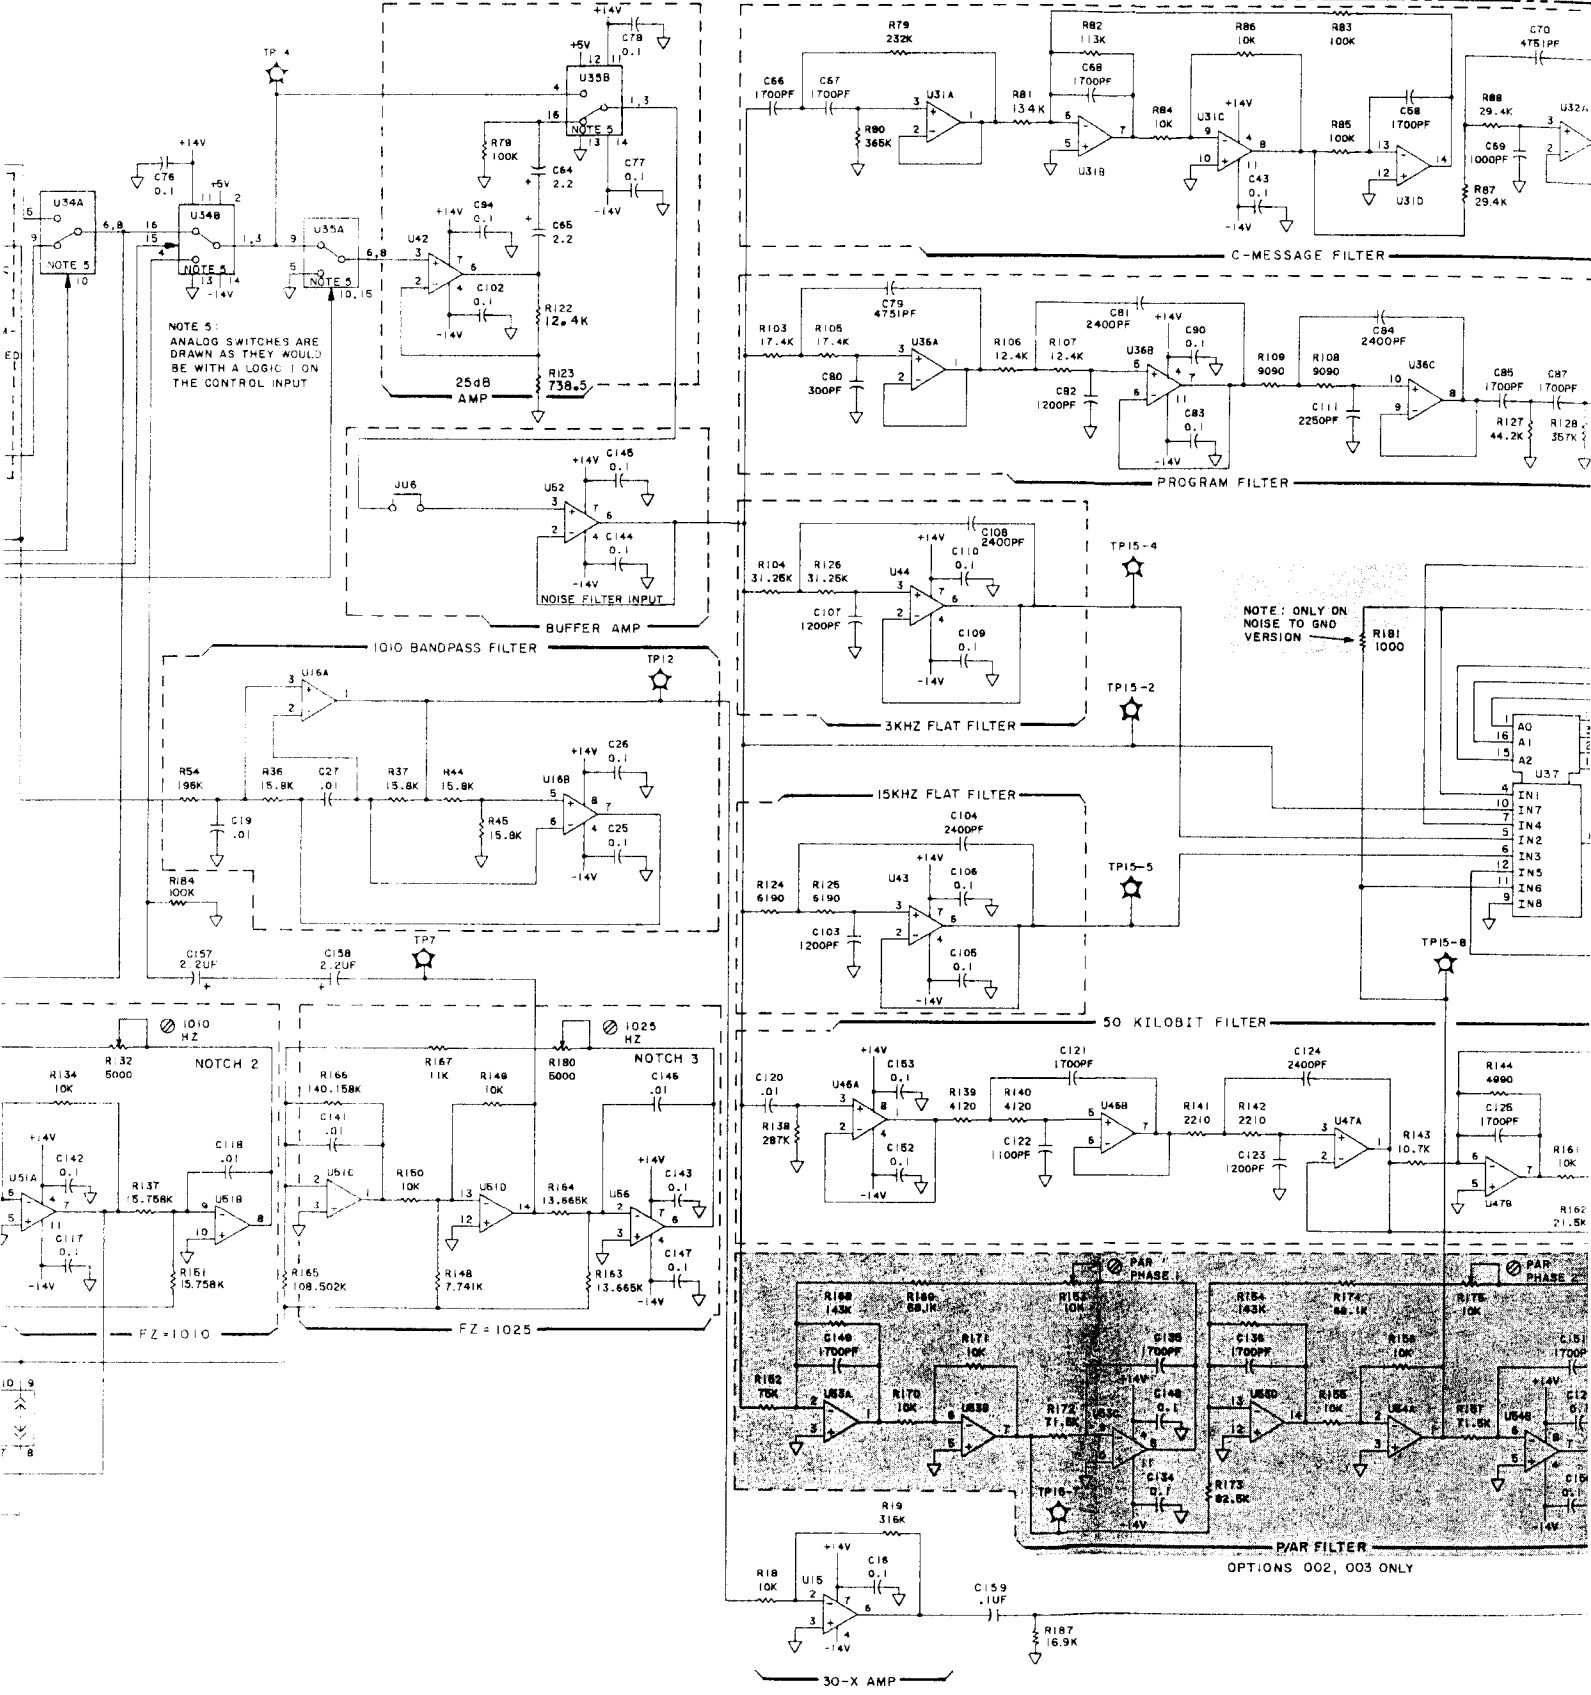

7-25B

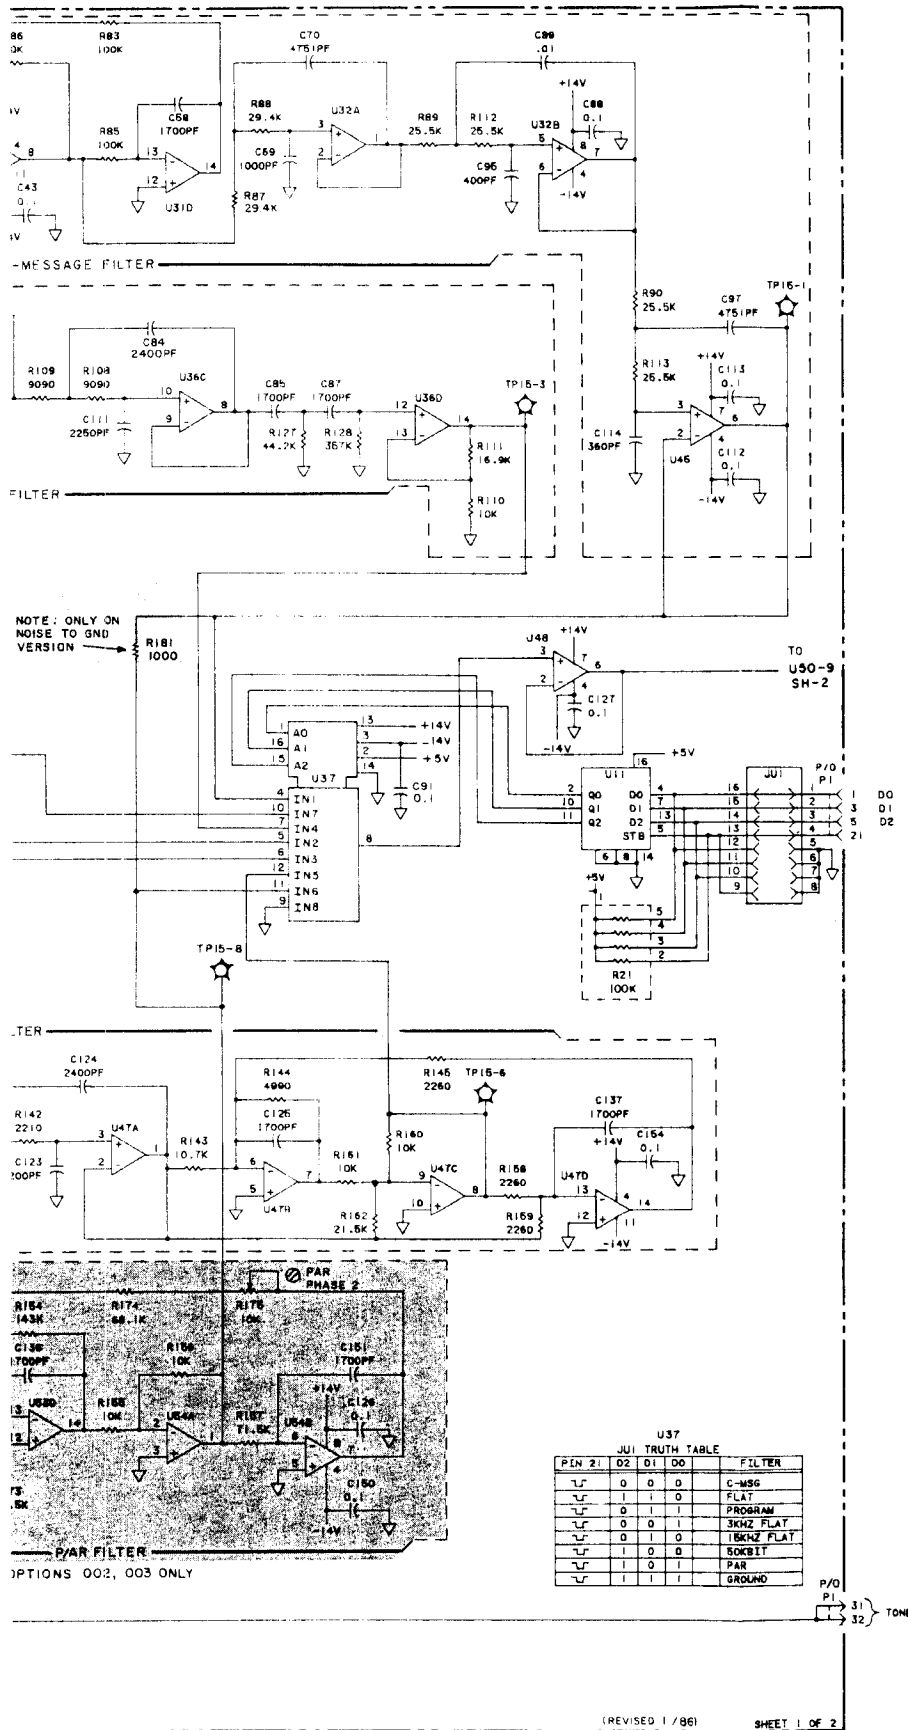


CIRCUIT APPLIES TO STANDARD UNITS ONLY
 CIRCUIT APPLIES TO P/AR UNITS ONLY

U37 TRUTH TABLE

PEN 21	D2	D1	D0	FILTER
✓	0	0	0	C-MSG
✓	1	1	0	FLAT
✓	0	1	1	PROGRAM
✓	0	0	1	3KHZ FLAT
✓	0	1	0	18KHZ FLAT
✓	1	0	0	50KBIT
✓	1	0	1	PAR
✓	1	1	1	GRDLND

Figure 7-25. Receiver Board Schematic Diagram (Sheet 1 of 2) 7-35



Manual Changes

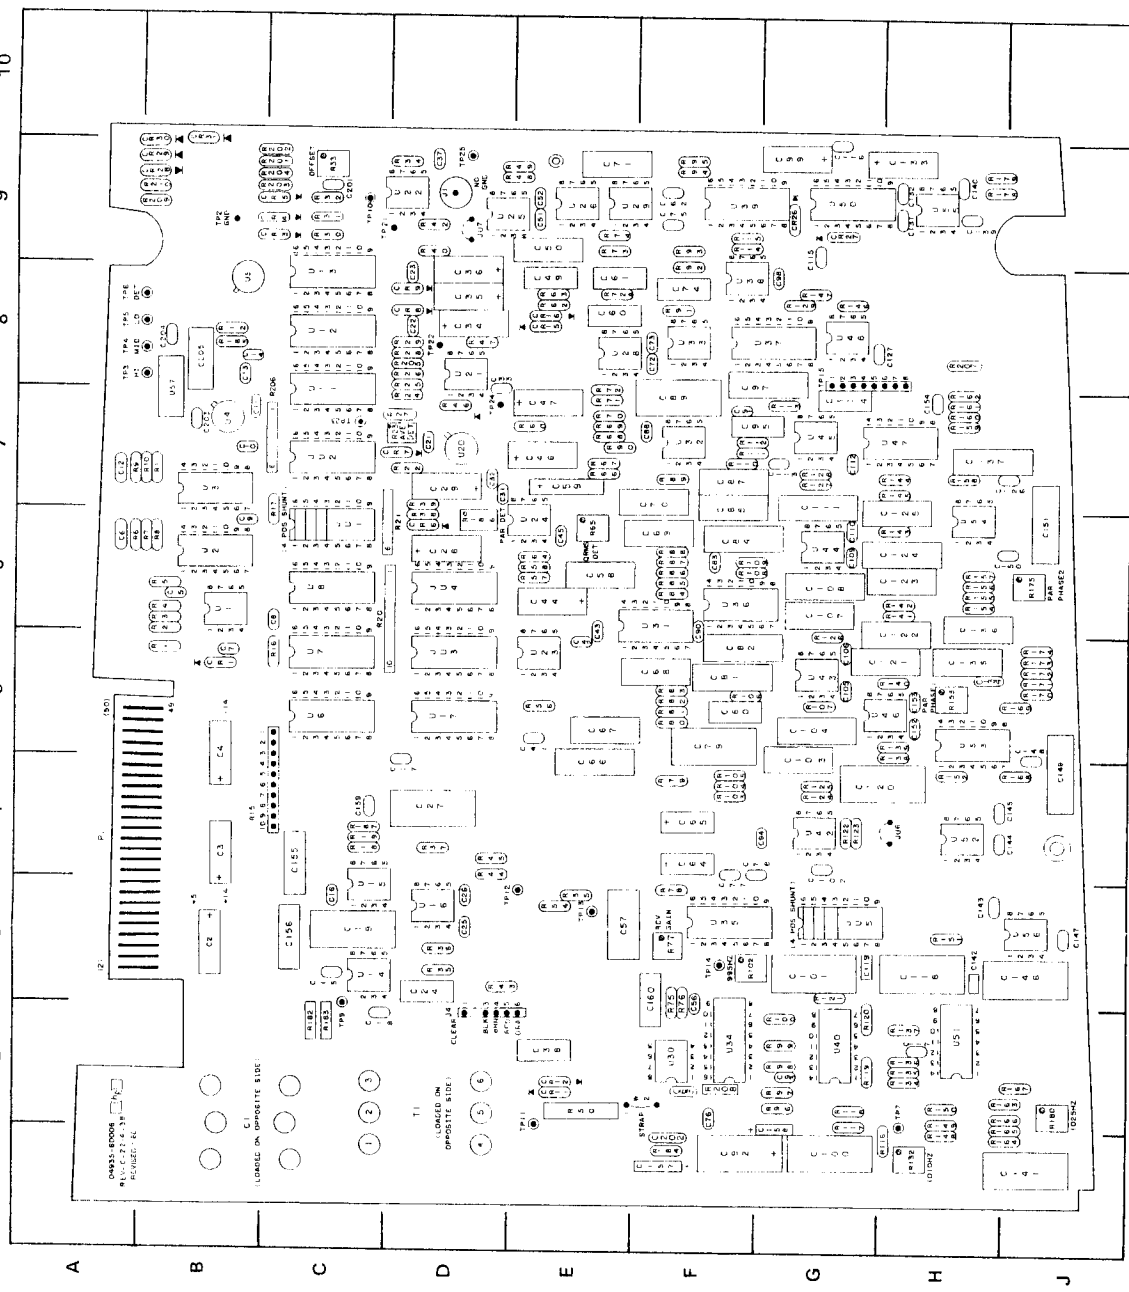


A13 Receiver Board Component Locator

REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.
C1	B-2	C85	F-6	G4	C-9	R58	E-6	R130	H-5	U3	B-7		
C2	B-3	C86	F-7	G5	C-9	R59	E-7	R140	H-6	U4	B-8		
C3	B-4	C87	F-8	G6	D-6	R60	E-8	R141	H-6	U5	B-8		
C4	B-5	C88	F-9	G7	D-7	R61	E-9	R142	H-6	U6	C-5		
C5	B-6	C89	F-10	G8	D-8	R62	E-10	R143	H-7	U7	C-6		
C6	B-7	C90	F-11	G9	D-9	R63	E-11	R144	H-7	U8	C-8		
C7	B-8	C91	F-12	G10	D-10	R64	E-12	R145	H-7	U9	C-8		
C8	B-9	C92	F-13	G11	D-11	R65	E-13	R146	H-7	U10	C-8		
C9	B-10	C93	F-14	G12	D-12	R66	E-14	R147	H-8	U11	C-8		
C10	B-11	C94	F-15	G13	D-13	R67	E-15	R148	H-8	U12	C-8		
C11	B-12	C95	F-16	G14	D-14	R68	E-16	R149	H-8	U13	C-8		
C12	B-13	C96	F-17	G15	D-15	R69	E-17	R150	H-8	U14	C-8		
C13	B-14	C97	F-18	G16	D-16	R70	E-18	R151	H-2	U15	C-3		
C14	B-15	C98	F-19	G17	D-17	R71	E-19	R152	H-2	U16	D-3		
C15	B-16	C99	F-20	G18	D-18	R72	E-20	R153	H-2	U17	D-5		
C16	B-17	C100	F-21	G19	D-19	R73	E-21	R154	H-2	U18	D-8		
C17	B-18	C101	F-22	G20	D-20	R74	E-22	R155	H-6	U22	D-9		
C18	B-19	C102	F-23	G21	D-21	R75	E-23	R156	H-6	U23	D-9		
C19	B-20	C103	F-24	G22	D-22	R76	E-24	R157	H-6	U24	D-9		
C20	B-21	C104	F-25	G23	D-23	R77	E-25	R158	H-7	U26	E-8		
C21	B-22	C105	F-26	G24	D-24	R78	E-26	R159	H-7	U28	E-8		
C22	B-23	C106	F-27	G25	D-25	R79	E-27	R160	H-7	U29	E-8		
C23	B-24	C107	F-28	G26	D-26	R80	E-28	R161	H-7	U30	E-8		
C24	B-25	C108	F-29	G27	D-27	R81	E-29	R162	H-7	U31	F-6		
C25	B-26	C109	F-30	G28	D-28	R82	E-30	R163	J-2	U32	F-7		
C26	B-27	C110	F-31	G29	D-29	R83	E-31	R164	J-3	U33	F-8		
C27	B-28	C111	F-32	G30	D-30	R84	E-32	R165	J-3	U34	F-8		
C28	B-29	C112	F-33	G31	D-31	R85	E-33	R166	J-2	U35	F-3		
C29	B-30	C113	F-34	G32	D-32	R86	E-34	R167	J-2	U36	F-6		
C30	B-31	C114	F-35	G33	D-33	R87	E-35	R168	J-4	U37	G-8		
C31	B-32	C115	F-36	G34	D-34	R88	E-36	R169	J-4	U38	F-8		
C32	B-33	C116	F-37	G35	D-35	R89	E-37	R170	J-5	U39	F-8		
C33	B-34	C117	F-38	G36	D-36	R90	E-38	R171	J-5	U40	G-2		
C34	B-35	C118	F-39	G37	D-37	R91	E-39	R172	J-5	U42	G-4		
C35	B-36	C119	F-40	G38	D-38	R92	E-40	R173	J-5	U43	G-5		
C36	B-37	C120	F-41	G39	D-39	R93	E-41	R174	J-5	U44	G-5		
C37	B-38	C121	F-42	G40	D-40	R94	E-42	R175	J-6	U45	G-7		
C38	B-39	C122	F-43	G41	D-41	R95	E-43	R176	H-5	U46	H-5		
C39	B-40	C123	F-44	G42	D-42	R96	E-44	R177	H-5	U47	H-7		
C40	B-41	C124	F-45	G43	D-43	R97	E-45	R178	H-5	U48	H-7		
C41	B-42	C125	F-46	G44	D-44	R98	E-46	R179	H-5	U49	H-7		
C42	B-43	C126	F-47	G45	D-45	R99	E-47	R180	C-2	U50	G-9		
C43	B-44	C127	F-48	G46	D-46	R100	E-48	R181	C-2	U51	H-2		
C44	B-45	C128	F-49	G47	D-47	R101	E-49	R182	C-2	U52	H-4		
C45	B-46	C129	F-50	G48	D-48	R102	E-50	R183	C-2	U53	H-4		
C46	B-47	C130	F-51	G49	D-49	R103	E-51	R184	F-1	U54	H-7		
C47	B-48	C131	F-52	G50	D-50	R104	E-52	R185	F-2	U55	H-7		
C48	B-49	C132	F-53	G51	D-51	R105	E-53	R186	D-7	U56	H-9		
C49	B-50	C133	F-54	G52	D-52	R106	E-54	R187	C-4	U55	H-9		
C50	B-51	C134	F-55	G53	D-53	R107	E-55	R188	C-4	U56	J-3		
C51	B-52	C135	F-56	G54	D-54	R108	E-56	R189	C-9	U57	B-7		
C52	B-53	C136	F-57	G55	D-55	R109	E-57	R200	C-9				
C53	B-54	C137	F-58	G56	D-56	R110	E-58	R204	C-9				
C54	B-55	C138	F-59	G57	D-57	R111	E-59	R205	C-6				
C55	B-56	C139	F-60	G58	D-58	R112	E-60	R206	C-7				
C56	B-57	C140	F-61	G59	D-59	R113	E-61	R207	C-9				
C57	B-58	C141	F-62	G60	D-60	R114	E-62	R208	B-9				
C58	B-59	C142	F-63	G61	D-61	R115	E-63	R209	B-9				
C59	B-60	C143	F-64	G62	D-62	R116	E-64	R210	C-3				
C60	B-61	C144	F-65	G63	D-63	R117	E-65	R211	C-3				
C61	B-62	C145	F-66	G64	D-64	R118	E-66	R212	C-3				
C62	B-63	C146	F-67	G65	D-65	R119	E-67	R213	C-3				
C63	B-64	C147	F-68	G66	D-66	R120	E-68	R214	C-3				
C64	B-65	C148	F-69	G67	D-67	R121	E-69	R215	C-3				
C65	B-66	C149	F-70	G68	D-68	R122	E-70	R216	C-3				
C66	B-67	C150	F-71	G69	D-69	R123	E-71	R217	C-3				
C67	B-68	C151	F-72	G70	D-70	R124	E-72	R218	C-3				
C68	B-69	C152	F-73	G71	D-71	R125	E-73	R219	C-3				
C69	B-70	C153	F-74	G72	D-72	R126	E-74	R220	C-3				
C70	B-71	C154	F-75	G73	D-73	R127	E-75	R221	C-3				
C71	B-72	C155	F-76	G74	D-74	R128	E-76	R222	C-3				
C72	B-73	C156	F-77	G75	D-75	R129	E-77	R223	C-3				
C73	B-74	C157	F-78	G76	D-76	R130	E-78	R224	C-3				
C74	B-75	C158	F-79	G77	D-77	R131	E-79	R225	C-3				
C75	B-76	C159	F-80	G78	D-78	R132	E-80	R226	C-3				
C76	B-77	C160	F-81	G79	D-79	R133	E-81	R227	C-3				
C77	B-78	C161	F-82	G80	D-80	R134	E-82	R228	C-3				
C78	B-79	C162	F-83	G81	D-81	R135	E-83	R229	C-3				
C79	B-80	C163	F-84	G82	D-82	R136	E-84	R230	C-3				
C80	B-81	C164	F-85	G83	D-83	R137	E-85	R231	C-3				
C81	B-82	C165	F-86	G84	D-84	R138	E-86	R232	C-3				
C82	B-83	C166	F-87	G85	D-85	R139	E-87	R233	C-3				
C83	B-84	C167	F-88	G86	D-86	R140	E-88	R234	C-3				
C84	B-85	C168	F-89	G87	D-87	R141	E-89	R235	C-3				
C85	B-86	C169	F-90	G88	D-88	R142	E-90	R236	C-3				
C86	B-87	C170	F-91	G89	D-89	R143	E-91	R237	C-3				
C87	B-88	C171	F-92	G90	D-90	R144	E-92	R238	C-3				
C88	B-89	C172	F-93	G91	D-91	R145	E-93	R239	C-3				
C89	B-90	C173	F-94	G92	D-92	R146	E-94	R240	C-3				
C90	B-91	C174	F-95	G93	D-93	R147	E-95	R241	C-3				
C91	B-92	C175	F-96	G94	D-94	R148	E-96	R242	C-3				
C92	B-93	C176	F-97	G95	D-95	R149	E-97	R243	C-3				
C93	B-94	C177	F-98	G96	D-96	R150	E-98	R244	C-3				
C94	B-95	C178	F-99	G97	D-97	R151	E-99	R245	C-3				
C95	B-96	C179	F-100	G98	D-98	R152	E-100	R246	C-3				
C96	B-97	C180	F-101	G99	D-99	R153	E-101	R247	C-3				
C97	B-98	C181	F-102	G100	D-100	R154	E-102	R248	C-3				
C98	B-99	C182	F-103	G101	D-101	R155	E-103	R249	C-3				
C99	B-100	C183	F-104	G102	D-102	R156	E-104	R250	C-3				
C100	B-101	C184	F-105	G103	D-103	R157	E-105	R251	C-3				
C101	B-102	C185	F-106	G104	D-104	R158	E-106	R252	C-3				
C102	B-103	C186	F-107	G105	D-105	R159	E-107	R253	C-3				
C103	B-104	C187	F-108	G106	D-106	R160	E-108	R254	C-3				
C104	B-105	C188	F-109	G107	D-107	R161	E-109	R255	C-3				
C105	B-106	C189	F-110	G108	D-108	R162	E-110	R256	C-3				
C106	B-107	C190	F-111	G109	D-109	R163	E-111	R257	C-3				
C107	B-108	C191	F-112	G110	D-110	R164	E-112	R258	C-3				
C108	B-109	C192	F-113	G111	D-111	R165	E-113	R259	C-3				
C109	B-110	C193	F-114	G112	D-112	R166	E-114	R260	C-3				
C110	B-111	C194	F-115	G113	D-113	R167	E-115	R261	C-3				
C111	B-112	C195	F-116	G114	D-114	R168	E-116	R262	C-3				
C112	B-113	C196	F-117	G115	D-115	R169	E-117	R263	C-3				
C113	B-114	C197	F-118	G116	D-116	R170	E-118	R264	C-3				
C114	B-115	C198	F-119	G117	D-117	R171	E-119	R265	C-3				
C115	B-116	C199	F-120	G118	D-118	R172	E-120	R266	C-3				
C116	B-117	C200	F-121	G119	D-119	R173	E-121	R267	C-3				
C117	B-118	C201	F-122	G120	D-120	R174	E-122	R268	C-3				
C118	B-119	C202	F-123	G121	D-121	R175	E-123	R269	C-3				
C119	B-120	C203	F-124	G122	D-122	R176	E-124	R270	C-3				
C120	B-121	C204	F-125	G123	D-123	R177	E-125	R271	C-3				
C121	B-122	C205	F-126	G124	D-124	R178	E-126	R272	C-3				
C122	B-123	C206	F-127	G125	D-125	R179	E-127	R273	C-3				
C123	B-124	C207	F-128	G126	D-126	R180	E-128	R274	C-3				
C124	B-125	C208	F-129	G127	D-127	R181	E-129	R275	C-3				
C125	B-126	C209	F-130	G128	D-128	R182	E-130	R276	C-3				
C126	B-127	C210	F-131	G129	D-129	R183	E-131	R277	C-3				
C127	B-128	C211	F-132	G130	D-130	R							

FROM A4 TRANSMITTER

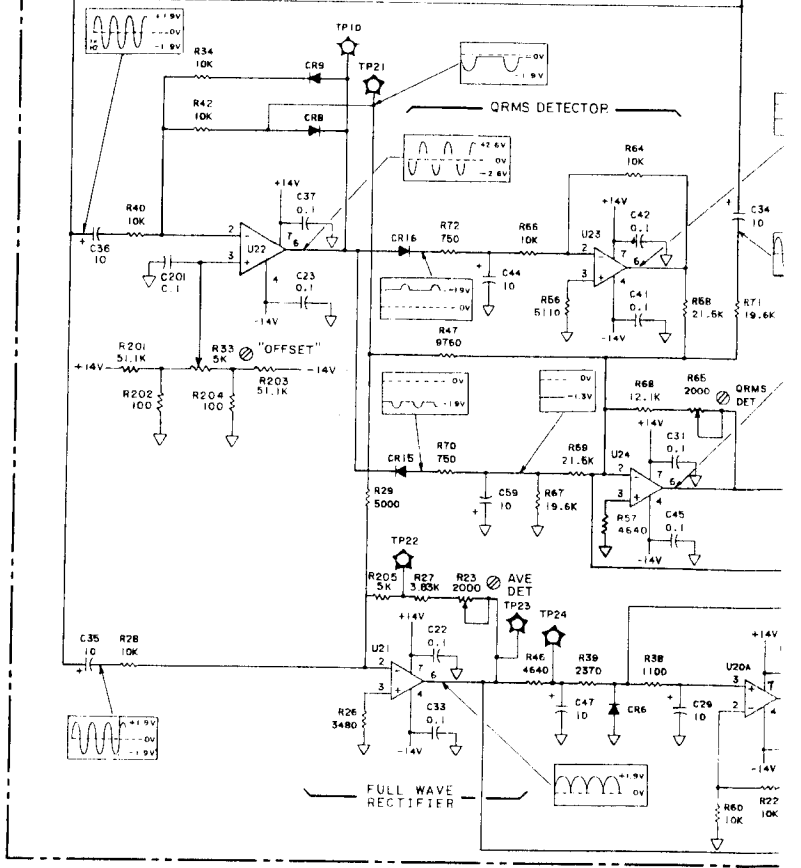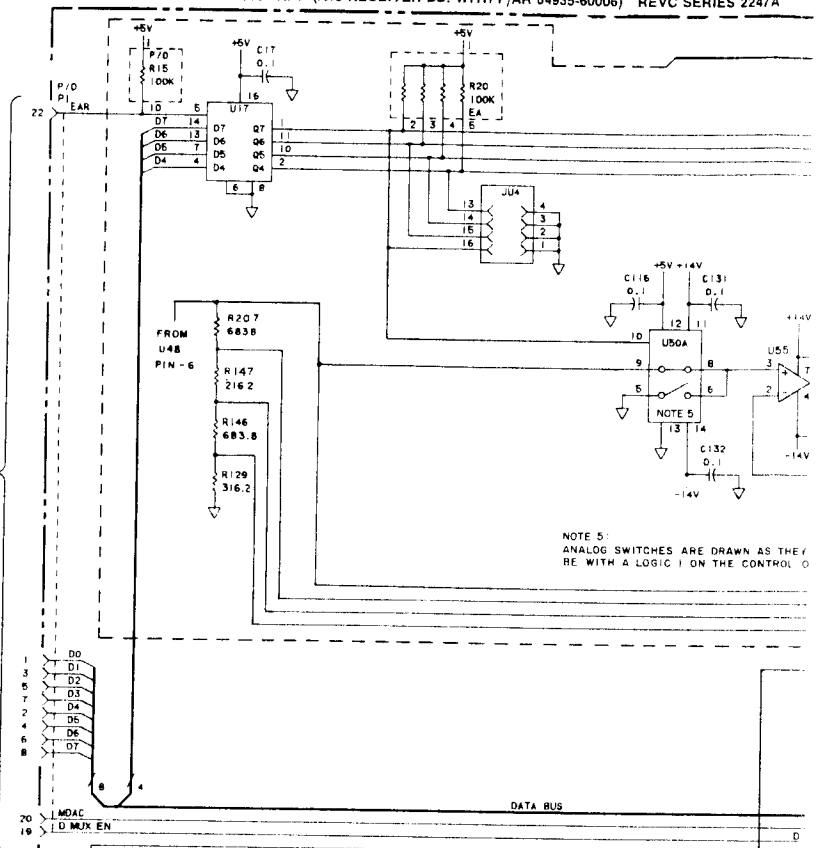

7-26A

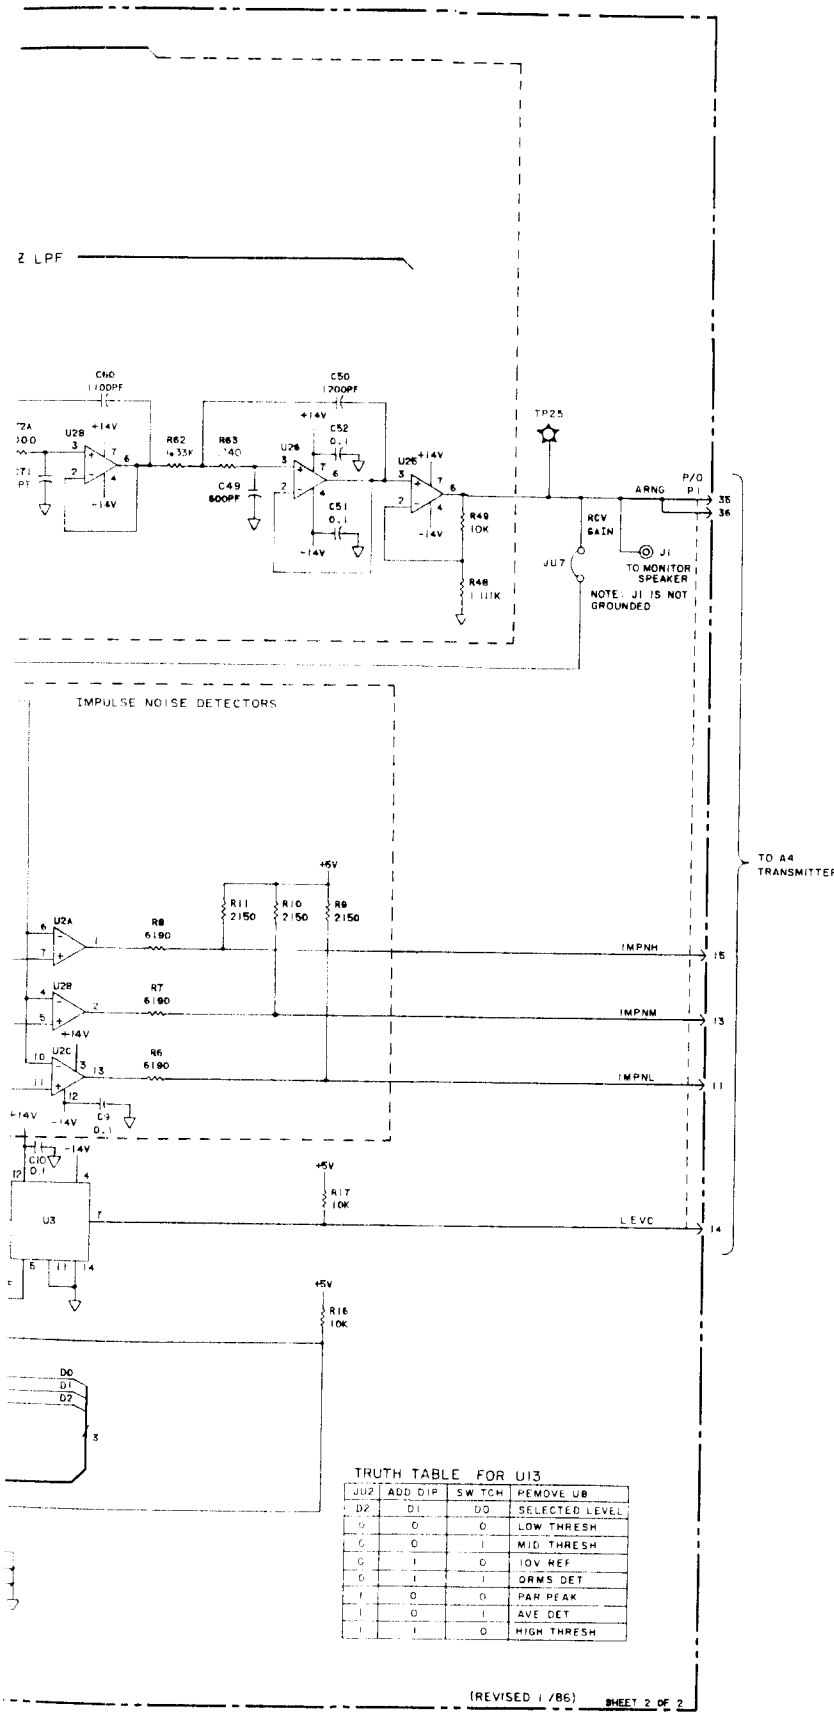

 CIRCUIT APPLIES TO STANDARD UNITS ONLY
 CIRCUIT APPLIES TO P/AR UNITS ONLY

Figure 7-26. Receiver Board Schematic Diagram (Sheet 2 of 2) 7-37

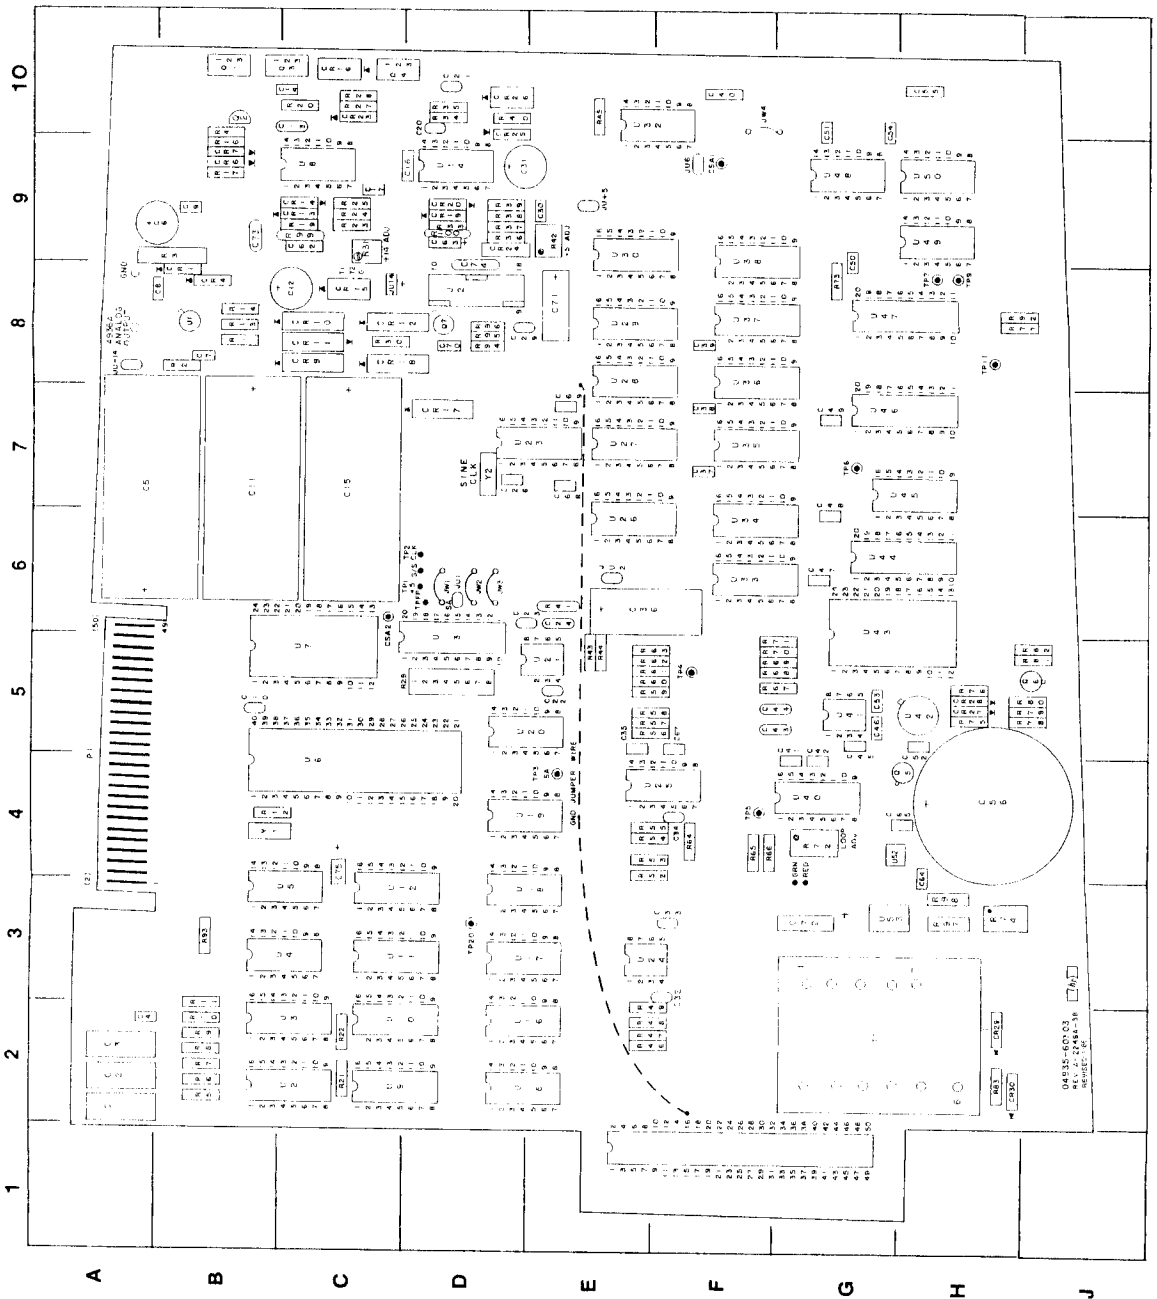


Figure 7-27. A4 Transmitter Board Component Locator

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	A2	CR16	C10	R45	E10	U18	D3
C2	A2	CR17	D17	R46	F2	U19	D4
C3	A2	CR18	C8	R47	F2	U20	D5
C4	A2	CR19	D9	R48	F2	U21	E5
C5	B9	CR23	C10	R49	F4	U22	E5
C6	B8	CR24	D10	R50	F4	U23	E5
C7	B8	CR25	D10	R51	F4	U24	F4
C8	B5	CR26	D10	R52	F4	U25	F4
C9	B5	CR27	D10	R53	F4	U26	E7
C10	B5	CR28	D10	R54	F4	U27	E7
C11	B7	CR29	H5	R55	F5	U28	E8
C12	C6	CR30	H2	R56	F5	U29	E8
C13	C1	CR31	H2	R57	F5	U30	E9
C14	C10	CR32	F10	R58	F5	U31	E10
C15	C7	CR33	F10	R59	F5	U32	E10
C16	C9	CR34	C6	R60	F5	U33	F7
C17	C9	CR35	D8	R61	F5	U34	F7
C18	C9	CR36	D8	R62	F5	U35	F7
C19	C9	CR37	D8	R63	F5	U36	F7
C20	C9	CR38	D8	R64	F5	U37	F7
C21	C9	CR39	D8	R65	F5	U38	F7
C22	E5	JU2	E6	R66	F4	U39	F8
C23	D8	JU6	E9	R67	F4	U40	G4
C24	D8	JU7	E9	R68	F4	U41	G4
C25	D7	JU14	A9	R69	F5	U42	G6
C26	D7	JU14	A9	R70	F5	U43	G6
C27	D8	JW1	D6	R71	G6	U44	G7
C28	D8	JW2	D6	R72	G6	U45	G7
C29	F3	JW4	P10	R73	G6	U46	G7
C30	F3	JW4	P10	R74	G6	U47	G7
C31	F3	JW4	P10	R75	G6	U48	G8
C32	F4	O1	B10	R76	H6	U49	H9
C33	F4	O2	B10	R77	H6	U50	H9
C34	F4	O3	B10	R78	H6	U51	G3
C35	F7	O4	C10	R79	J5	Y1	B4
C36	F7	O5	H4	R80	J5	Y2	B4
C37	F8	O6	J5	R81	J5	Y1	B4
C38	F8	O6	J5	R82	J5	Y1	B4
C39	F8	O6	J5	R83	J5	Y1	B4
C40	G5	R1	B8	R84	J5	Y1	B4
C41	G5	R2	B8	R85	J5	Y1	B4
C42	G5	R3	B8	R86	J5	Y1	B4
C43	G5	R4	B8	R87	J5	Y1	B4
C44	G5	R5	B8	R88	J5	Y1	B4
C45	G5	R6	B8	R89	J5	Y1	B4
C46	G5	R7	B8	R90	J5	Y1	B4
C47	G6	R7	B2	R91	J5	Y1	B4
C48	G6	R7	B2	R92	J5	Y1	B4
C49	G6	R7	B2	R93	J5	Y1	B4
C50	G6	R7	B2	R94	J5	Y1	B4
C51	G9	R10	B3	R95	J5	Y1	B4
C52	H5	R12	B3	R96	J5	Y1	B4
C53	H5	R13	B3	R97	J5	Y1	B4
C54	H5	R14	B3	R98	J5	Y1	B4
C55	H10	R16	B9	R99	J5	Y1	B4
C56	H4	R17	B9	R100	J5	Y1	B4
C57	C9	R18	B9	TP1	D6		
C58	C9	R19	B9	TP2	D6		
C59	C9	R20	B9	TP3	D6		
C60	C9	R21	B9	TP4	D6		
C61	H4	R22	C2	TP5	E4		
C62	H4	R23	C2	TP6	E4		
C63	H4	R24	C2	TP7	E4		
C64	H4	R25	C2	TP8	E4		
C65	H4	R26	C2	TP9	E4		
C66	H4	R27	C2	TP10	E4		
C67	H4	R28	C2	TP11	E4		
C68	H4	R29	C2	TP12	E4		
C69	H4	R30	C2	TP13	E4		
C70	H4	R31	C2	TP14	E4		
C71	H4	R32	C2	TP15	E4		
C72	H4	R33	C2	TP16	E4		
C73	H4	R34	C2	TP17	E4		
C74	H4	R35	C2	TP18	E4		
C75	H4	R36	C2	TP19	E4		
C76	H4	R37	C2	TP20	E4		
C77	H4	R38	C2	TP21	E4		
C78	H4	R39	C2	TP22	E4		
C79	H4	R40	C2	TP23	E4		
C80	H4	R41	C2	TP24	E4		
C81	H4	R42	C2	TP25	E4		
C82	H4	R43	C2	TP26	E4		
C83	H4	R44	C2	TP27	E4		
C84	H4	R45	C2	TP28	E4		
C85	H4	R46	C2	TP29	E4		
C86	H4	R47	C2	TP30	E4		
C87	H4	R48	C2	TP31	E4		
C88	H4	R49	C2	TP32	E4		
C89	H4	R50	C2	TP33	E4		
C90	H4	R51	C2	TP34	E4		
C91	H4	R52	C2	TP35	E4		
C92	H4	R53	C2	TP36	E4		
C93	H4	R54	C2	TP37	E4		
C94	H4	R55	C2	TP38	E4		
C95	H4	R56	C2	TP39	E4		
C96	H4	R57	C2	TP40	E4		
C97	H4	R58	C2	TP41	E4		
C98	H4	R59	C2	TP42	E4		
C99	H4	R60	C2	TP43	E4		
C100	H4	R61	C2	TP44	E4		
C101	H4	R62	C2	TP45	E4		
C102	H4	R63	C2	TP46	E4		
C103	H4	R64	C2	TP47	E4		
C104	H4	R65	C2	TP48	E4		
C105	H4	R66	C2	TP49	E4		
C106	H4	R67	C2	TP50	E4		
C107	H4	R68	C2	TP51	E4		
C108	H4	R69	C2	TP52	E4		
C109	H4	R70	C2	TP53	E4		
C110	H4	R71	C2	TP54	E4		
C111	H4	R72	C2	TP55	E4		
C112	H4	R73	C2	TP56	E4		
C113	H4	R74	C2	TP57	E4		
C114	H4	R75	C2	TP58	E4		
C115	H4	R76	C2	TP59	E4		
C116	H4	R77	C2	TP60	E4		
C117	H4	R78	C2	TP61	E4		
C118	H4	R79	C2	TP62	E4		
C119	H4	R80	C2	TP63	E4		
C120	H4	R81	C2	TP64	E4		
C121	H4	R82	C2	TP65	E4		
C122	H4	R83	C2	TP66	E4		
C123	H4	R84	C2	TP67	E4		
C124	H4	R85	C2	TP68	E4		
C125	H4	R86	C2	TP69	E4		
C126	H4	R87	C2	TP70	E4		
C127	H4	R88	C2	TP71	E4		
C128	H4	R89	C2	TP72	E4		
C129	H4	R90	C2	TP73	E4		
C130	H4	R91	C2	TP74	E4		
C131	H4	R92	C2	TP75	E4		
C132	H4	R93	C2	TP76	E4		
C133	H4	R94	C2	TP77	E4		
C134	H4	R95	C2	TP78	E4		
C135	H4	R96	C2	TP79	E4		
C136	H4	R97	C2	TP80	E4		
C137	H4	R98	C2	TP81	E4		
C138	H4	R99	C2	TP82	E4		
C139	H4	R100	C2	TP83	E4		
C140	H4	R101	C2	TP84	E4		
C141	H4	R102	C2	TP85	E4		
C142	H4	R103	C2	TP86	E4		
C143	H4	R104	C2	TP87	E4		
C144	H4	R105	C2	TP88	E4		
C145	H4	R106	C2	TP89	E4		
C146	H4	R107	C2	TP90	E4		
C147	H4	R108	C2	TP91	E4		
C148	H4	R109	C2	TP92	E4		
C149	H4	R110	C2	TP93	E4		
C150	H4	R111	C2	TP94	E4		
C151	H4	R112	C2	TP95	E4		
C152	H4	R113	C2	TP96	E4		
C153	H4	R114	C2	TP97	E4		
C154	H4	R115	C2	TP98	E4		
C155	H4	R116	C2	TP99	E4		
C156	H4	R117	C2	TP100	E4		
C157	H4	R118	C2	TP101	E4		
C158	H4	R119	C2	TP102	E4		
C159	H4	R120	C2	TP103	E4		
C160	H4	R121	C2	TP104	E4		
C161	H4	R122	C2	TP105	E4		
C162	H4	R123	C2	TP106	E4		
C163	H4	R124	C2	TP107	E4		
C164	H4	R125	C2	TP108	E4		
C165	H4	R126	C2	TP109	E4		
C166	H4	R127	C2	TP110	E4		
C167	H4	R128	C2	TP111	E4		
C168	H4	R129	C2	TP112	E4		
C169	H4	R130	C2	TP113	E4		
C170	H4	R131	C2	TP114	E4		
C171	H4	R132	C2	TP115	E4		
C172	H4	R133	C2	TP116	E4		
C173	H4	R134	C2	TP117	E4		
C174	H4	R135	C2	TP118	E4		
C175	H4	R136	C2	TP119	E4		
C176	H4	R137	C2	TP120	E4		
C177	H4	R138	C2	TP121	E4		
C178	H4	R139	C2	TP122	E4		
C179	H4	R140	C2	TP123	E4		
C180	H4	R141	C2	TP124	E4		
C181	H4	R142	C2	TP125	E4		
C182	H4	R143	C2	TP126	E4		
C183	H4	R144	C2	TP127	E4		
C184	H4	R145	C2	TP128	E4		
C185	H4	R146	C2	TP129	E4		
C186	H4	R147	C2	TP130	E4		
C187	H4	R148	C2	TP131	E4		
C188	H4	R149	C2	TP132	E4		
C189	H4	R150	C2	TP133	E4		
C190	H4	R151	C2	TP134	E4		
C191	H4	R152	C2	TP135	E4		
C192	H4	R153	C2	TP136	E4		
C193	H4	R154	C2	TP137	E4		
C194	H4	R155	C2	TP138	E4		
C195	H4	R156	C2	TP139	E4		
C196	H4	R157	C2	TP140	E4		
C197	H4	R158	C2	TP141	E4		
C198	H4	R159	C2	TP142	E4		
C199	H4	R160	C2	TP143	E4		
C200	H4	R161	C2	TP144	E4		
C201	H4	R162	C2	TP145	E4		
C202	H4	R163	C2	TP146	E4		
C203	H4	R164	C2	TP147	E4		
C204	H4	R165	C2	TP148	E4		
C205	H4	R166	C2	TP149	E4		
C206	H4	R167	C2	TP150	E4		
C207	H4	R168	C2	TP151	E4		
C208	H4	R169	C2	TP152	E4		
C209	H4	R170	C2	TP153	E4		
C210	H4	R171	C2	TP154	E4		
C211	H4	R172	C2	TP155	E4		
C212	H4	R173	C2	TP156	E4		
C213	H4	R174	C2	TP157	E4		
C214	H4	R175	C2	TP158	E4		
C215	H4	R176	C2	TP159	E4		
C216	H4	R177	C2	TP160	E4		
C217	H4	R178	C2	TP161	E4		

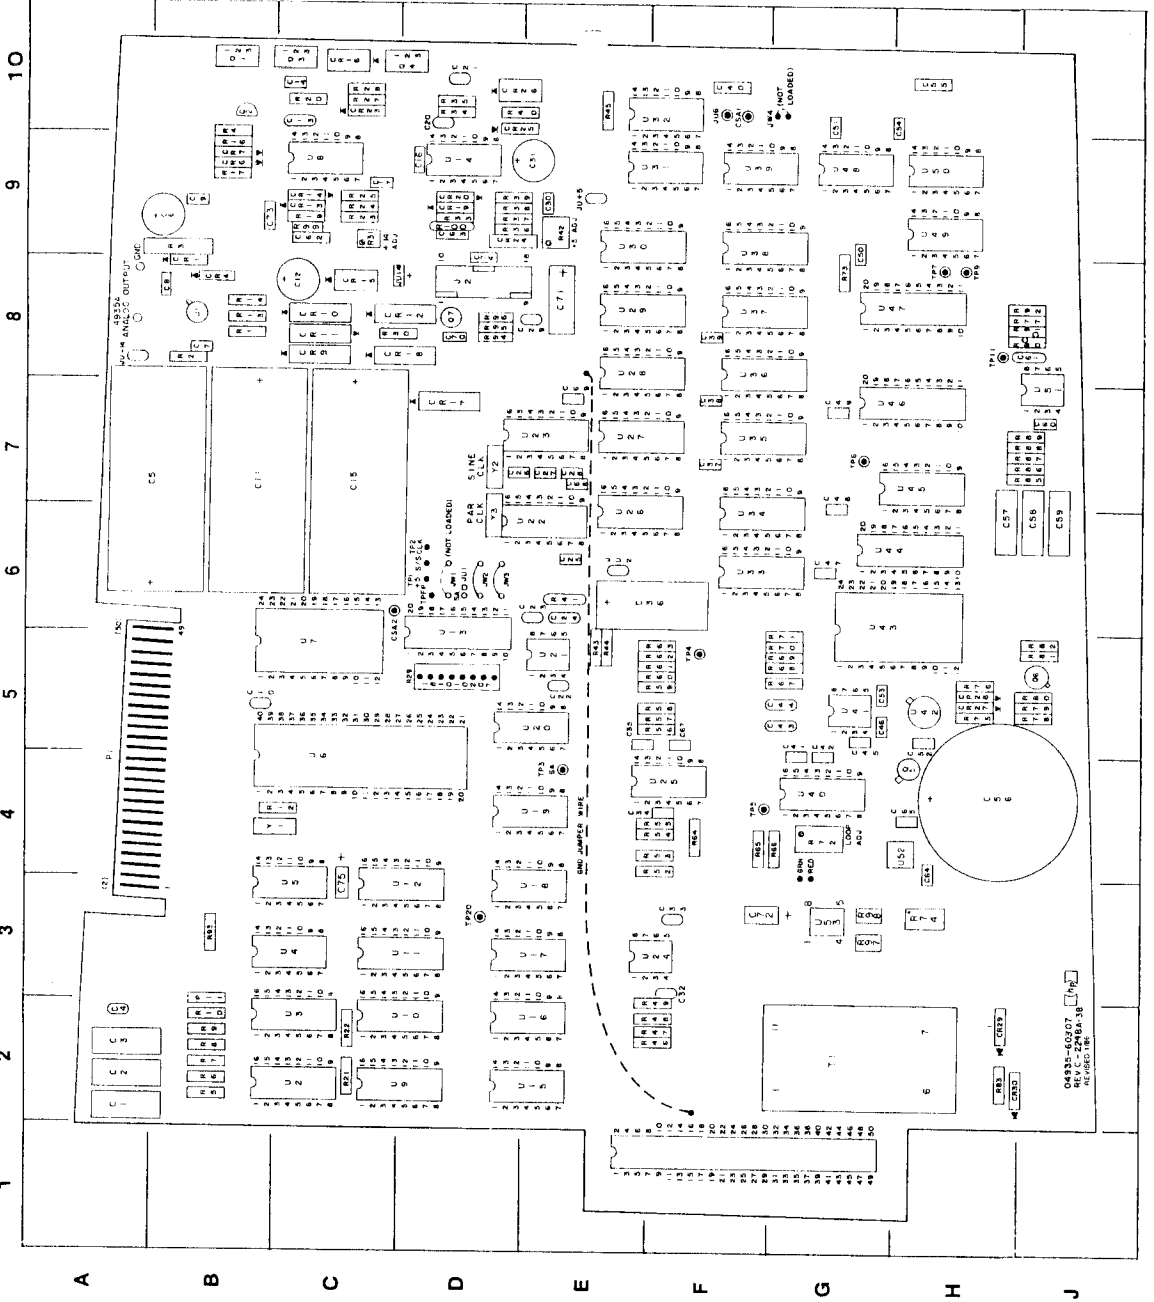




Figure 7-28. A14 Transmitter Board Component Locator


A4 and A14 Transmitter Boards

REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.
C1	A-2	CR16	C-10	R45	E-10	U18	D-3
C2	A-2	CR17	D-7	R46	F-2	U19	D-4
C3	A-2	CR18	D-8	R47	E-2	U20	E-5
C4	A-7	CR19	D-9	R48	F-2	U21	D-7
C5	B-9	CR20	C-10	R52	F-4	U24	E-3
C6	B-9	CR21	D-9	R53	F-4	U25	F-4
C7	B-9	CR22	D-10	R55	F-4	U27	E-7
C8	B-5	CR27	H-5	R56	F-5	U28	E-8
C9	B-7	CR28	H-5	R57	F-5	U29	E-8
C10	C-10	CR30	H-2	R59	F-5	U30	E-10
C11	C-10	CSA1	C-6	R61	F-5	U33	F-6
C12	C-9	CSA2	C-7	R62	F-5	U34	F-7
C13	C-9	J3	F-10	R63	F-5	U35	F-6
C14	D-10	JU1	D-6	R64	F-4	U37	F-8
C15	D-10	JU2	D-6	R65	F-4	U38	F-9
C16	D-6	JU3	E-6	R67	F-4	U40	G-4
C17	D-6	JU4	E-6	R68	F-4	U42	H-5
C18	D-7	JU14	A-8	R69	F-5	U43	G-6
C19	D-7	JU15	D-6	R70	F-5	U44	G-6
C20	D-8	JU16	D-6	R71	F-5	U45	G-7
C21	D-9	JW4	D-6	R72	G-8	U47	G-8
C22	F-2	P1	A-4	R74	H-5	U48	G-9
C23	F-2	P2	B-10	R75	H-5	U49	H-9
C24	F-3	P3	C-10	R78	J-5	U53	G-3
C25	F-3	P4	L-5	R80	J-5	Y2	D-4
C26	F-6	O6	L-5	R80	J-5	Y2	D-4
C27	F-7	O4	C-10	R78	J-5	U53	G-3
C28	F-7	O5	C-10	R78	J-5	U53	G-3
C29	F-8	O6	L-5	R80	J-5	Y2	D-4
C30	F-10	O7	L-5	R80	J-5	Y2	D-4
C31	F-3	P1	A-4	R74	H-5	U48	G-9
C32	F-3	P2	B-10	R75	H-5	U49	H-9
C33	F-3	P3	C-10	R78	J-5	U53	G-3
C34	F-3	P4	L-5	R80	J-5	Y2	D-4
C35	F-6	O6	L-5	R80	J-5	Y2	D-4
C36	F-7	O4	C-10	R78	J-5	U53	G-3
C37	F-7	O5	C-10	R78	J-5	U53	G-3
C38	F-8	O6	L-5	R80	J-5	Y2	D-4
C39	F-10	O7	L-5	R80	J-5	Y2	D-4
C40	F-10	O7	L-5	R80	J-5	Y2	D-4
C41	G-5	R1	B-8	R82	J-5	U55	D-7
C42	G-5	R2	B-8	R83	H-2	B-5	
C43	G-5	R3	B-8	R84	H-2	B-5	
C44	G-5	R4	B-10	R83	B-5		
C45	G-5	R5	B-2	R84	D-8		
C46	G-5	R6	B-2	R85	D-8		
C47	G-5	R7	B-2	R86	H-3		
C48	G-7	R8	B-2	R87	H-3		
C49	G-7	R9	B-2	R88	H-3		
C50	G-9	R10	B-2	R89	C-9		
C51	H-1	R11	B-3	R90	D-9		
C52	H-1	R12	B-3	R91	D-9		
C53	G-5	R13	B-8	T10	H-3		
C54	G-10	R14	B-8	T11	D-6		
C55	H-10	R15	B-9	T12	D-6		
C56	H-10	R16	C-9	T13	F-4		
C57	D-9	R17	C-9	T14	F-4		
C58	D-9	R18	C-2	T15	G-7		
C59	H-4	R19	C-2	T16	G-7		
C60	H-4	R20	C-2	T17	G-7		
C61	H-4	R21	C-2	T18	G-7		
C62	H-4	R22	C-2	T19	G-7		
C63	H-4	R23	C-2	T20	G-7		
C64	H-4	R24	C-2	T21	G-7		
C65	H-4	R25	C-2	T22	G-7		
C66	H-4	R26	C-2	T23	G-7		
C67	H-4	R27	C-2	T24	G-7		
C68	H-4	R28	C-2	T25	G-7		
C69	H-4	R29	C-2	T26	G-7		
C70	H-4	R30	C-2	T27	G-7		
C71	H-4	R31	C-2	T28	G-7		
C72	H-4	R32	C-2	T29	G-7		
C73	H-4	R33	C-2	T30	G-7		
C74	H-4	R34	C-2	T31	G-7		
C75	H-4	R35	C-2	T32	G-7		
C76	H-4	R36	C-2	T33	G-7		
C77	H-4	R37	C-2	T34	G-7		
C78	H-4	R38	C-2	T35	G-7		
C79	H-4	R39	C-2	T36	G-7		
C80	H-4	R40	C-2	T37	G-7		
C81	H-4	R41	C-2	T38	G-7		
C82	H-4	R42	C-2	T39	G-7		
C83	H-4	R43	C-2	T40	G-7		
C84	H-4	R44	C-2	T41	G-7		
C85	H-4	R45	C-2	T42	G-7		
C86	H-4	R46	C-2	T43	G-7		
C87	H-4	R47	C-2	T44	G-7		
C88	H-4	R48	C-2	T45	G-7		
C89	H-4	R49	C-2	T46	G-7		
C90	H-4	R50	C-2	T47	G-7		
C91	H-4	R51	C-2	T48	G-7		
C92	H-4	R52	C-2	T49	G-7		
C93	H-4	R53	C-2	T50	G-7		
C94	H-4	R54	C-2	T51	G-7		
C95	H-4	R55	C-2	T52	G-7		
C96	H-4	R56	C-2	T53	G-7		
C97	H-4	R57	C-2	T54	G-7		
C98	H-4	R58	C-2	T55	G-7		
C99	H-4	R59	C-2	T56	G-7		
C100	H-4	R60	C-2	T57	G-7		

REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.
U1	E-6	U25	E-6	U49	D-7	U73	D-7
U2	E-7	U26	E-7	U50	D-7	U74	D-7
U3	E-7	U27	E-7	U51	D-7	U75	D-7
U4	E-8	U28	E-8	U52	D-7	U76	D-7
U5	E-8	U29	E-8	U53	D-7	U77	D-7
U6	E-9	U30	E-9	U54	D-7	U78	D-7
U7	E-9	U31	E-9	U55	D-7	U79	D-7
U8	E-10	U32	E-10	U56	D-7	U80	D-7
U9	E-10	U33	E-10	U57	D-7	U81	D-7
U10	E-10	U34	E-10	U58	D-7	U82	D-7
U11	E-10	U35	E-10	U59	D-7	U83	D-7
U12	E-10	U36	E-10	U60	D-7	U84	D-7
U13	E-10	U37	E-10	U61	D-7	U85	D-7
U14	E-10	U38	E-10	U62	D-7	U86	D-7
U15	E-10	U39	E-10	U63	D-7	U87	D-7
U16	E-10	U40	E-10	U64	D-7	U88	D-7
U17	E-10	U41	E-10	U65	D-7	U89	D-7
U18	E-10	U42	E-10	U66	D-7	U90	D-7
U19	E-10	U43	E-10	U67	D-7	U91	D-7
U20	E-10	U44	E-10	U68	D-7	U92	D-7
U21	E-10	U45	E-10	U69	D-7	U93	D-7
U22	E-10	U46	E-10	U70	D-7	U94	D-7
U23	E-10	U47	E-10	U71	D-7	U95	D-7
U24	E-10	U48	E-10	U72	D-7	U96	D-7
U25	E-10	U49	E-10	U73	D-7	U97	D-7
U26	E-10	U50	E-10	U74	D-7	U98	D-7
U27	E-10	U51	E-10	U75	D-7	U99	D-7
U28	E-10	U52	E-10	U76	D-7	U100	D-7

A14 BOARD ONLY

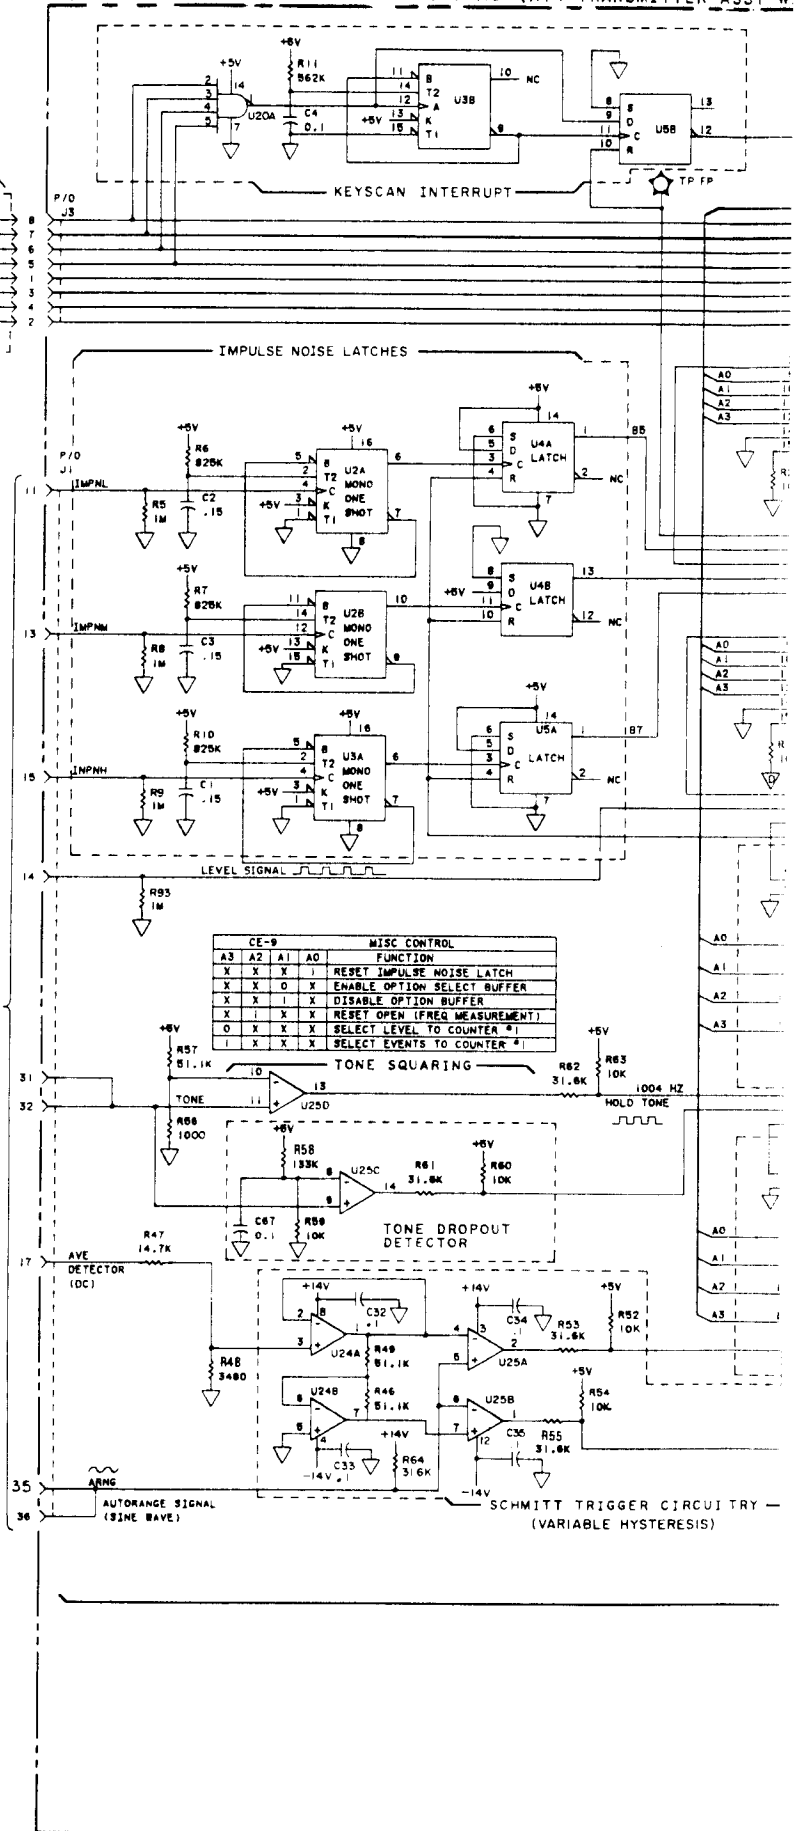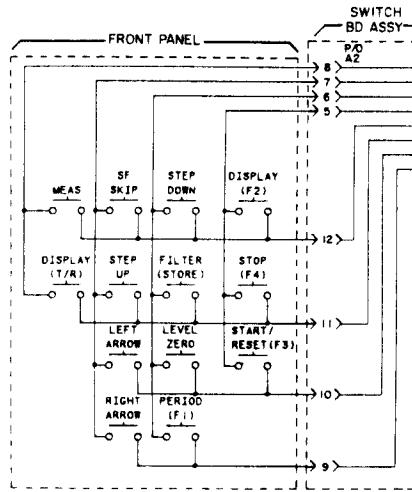

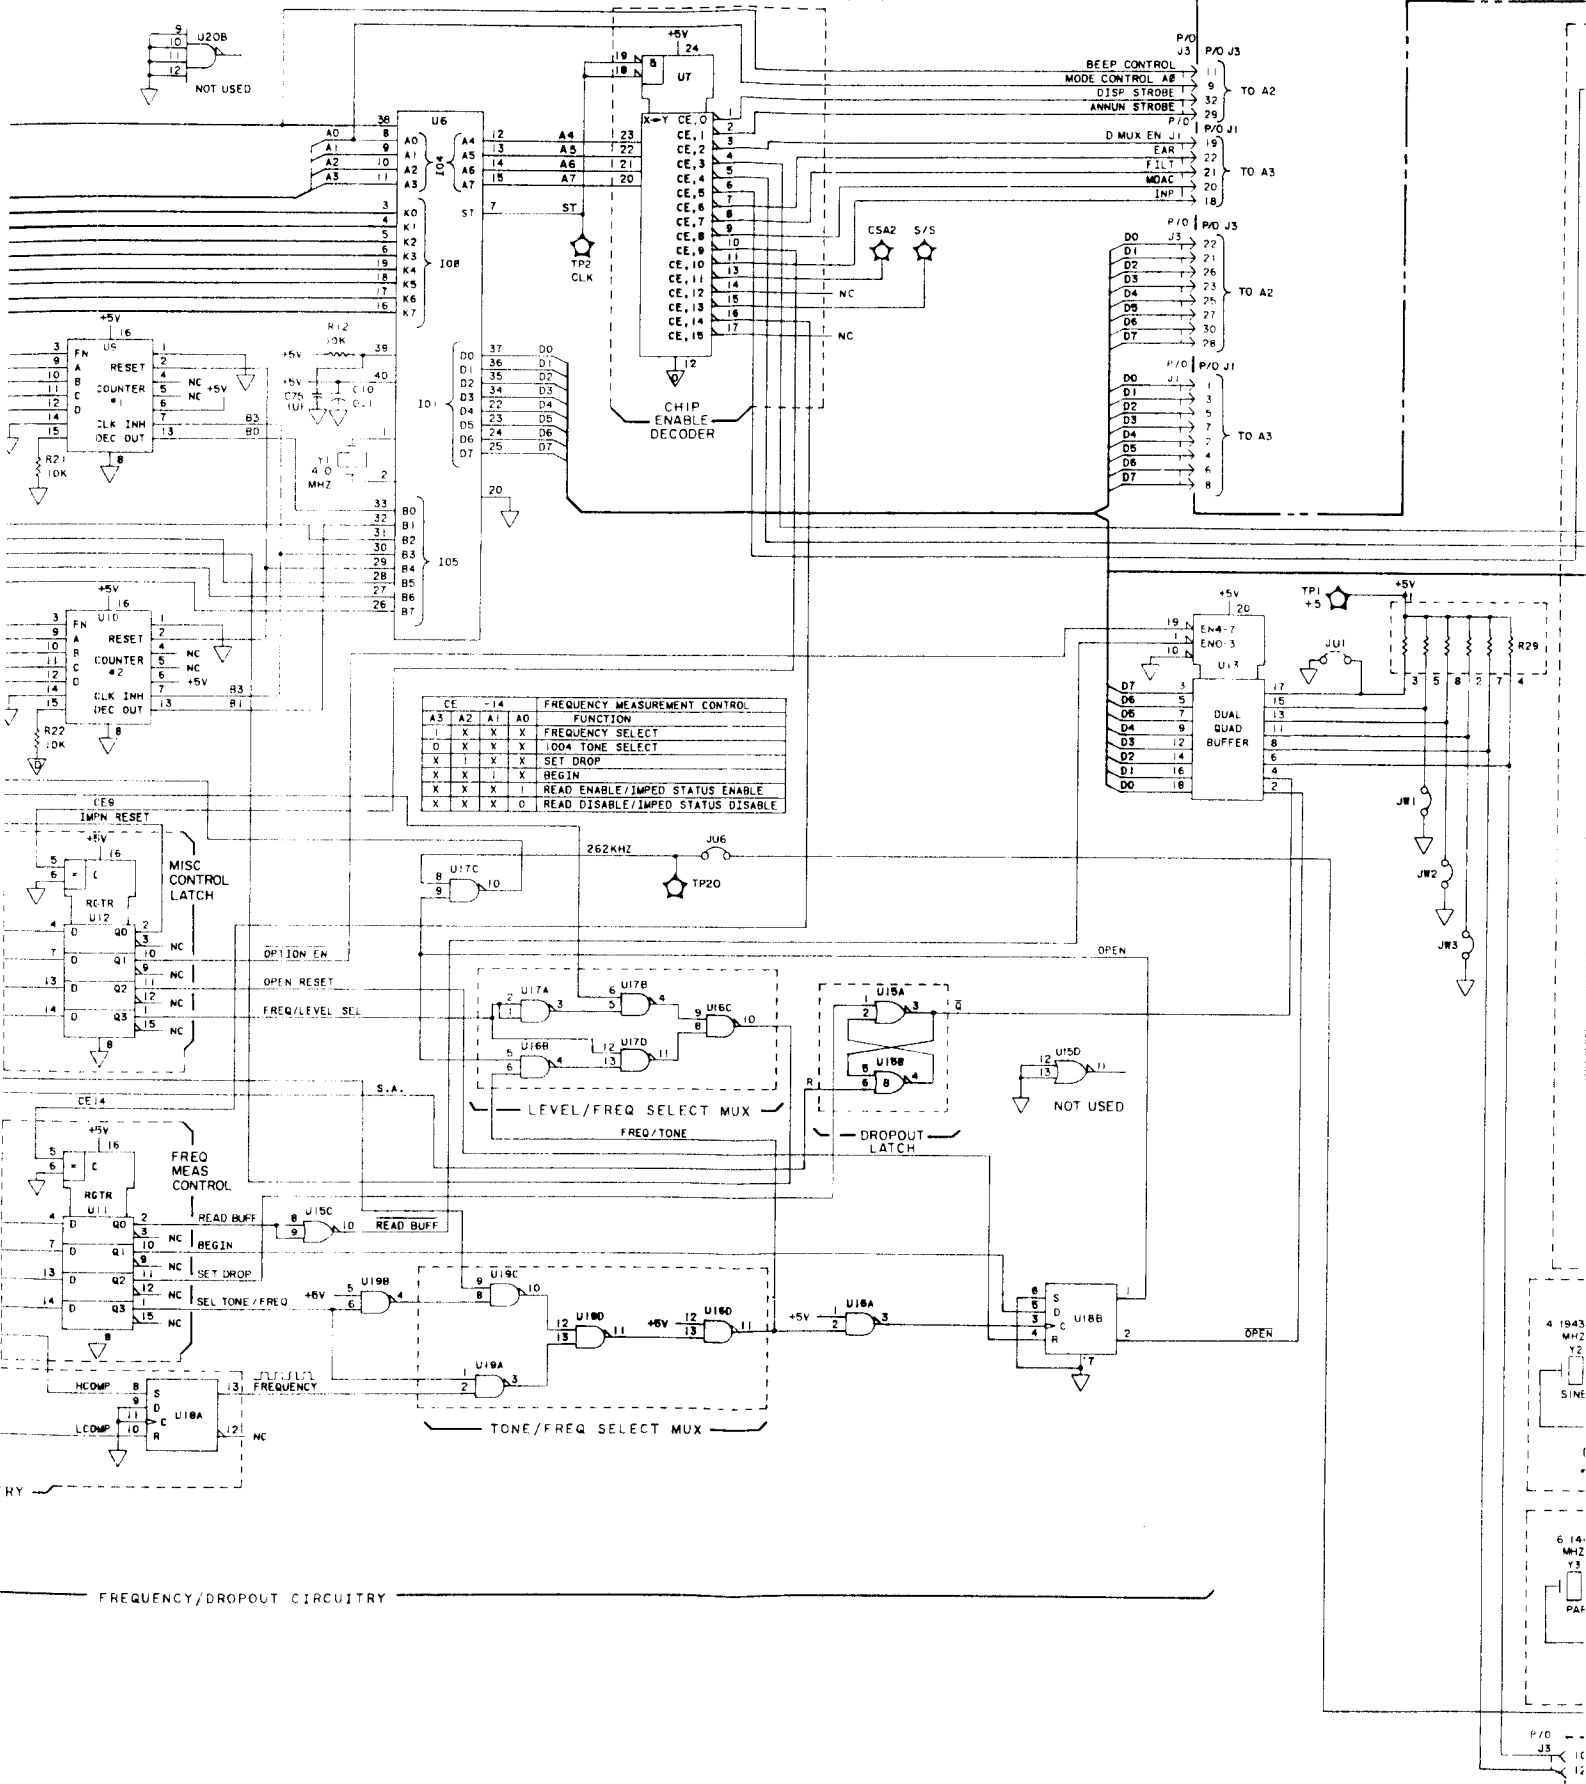

FREQUENCY/DROPOUT CIRCUITRY

7-29 B



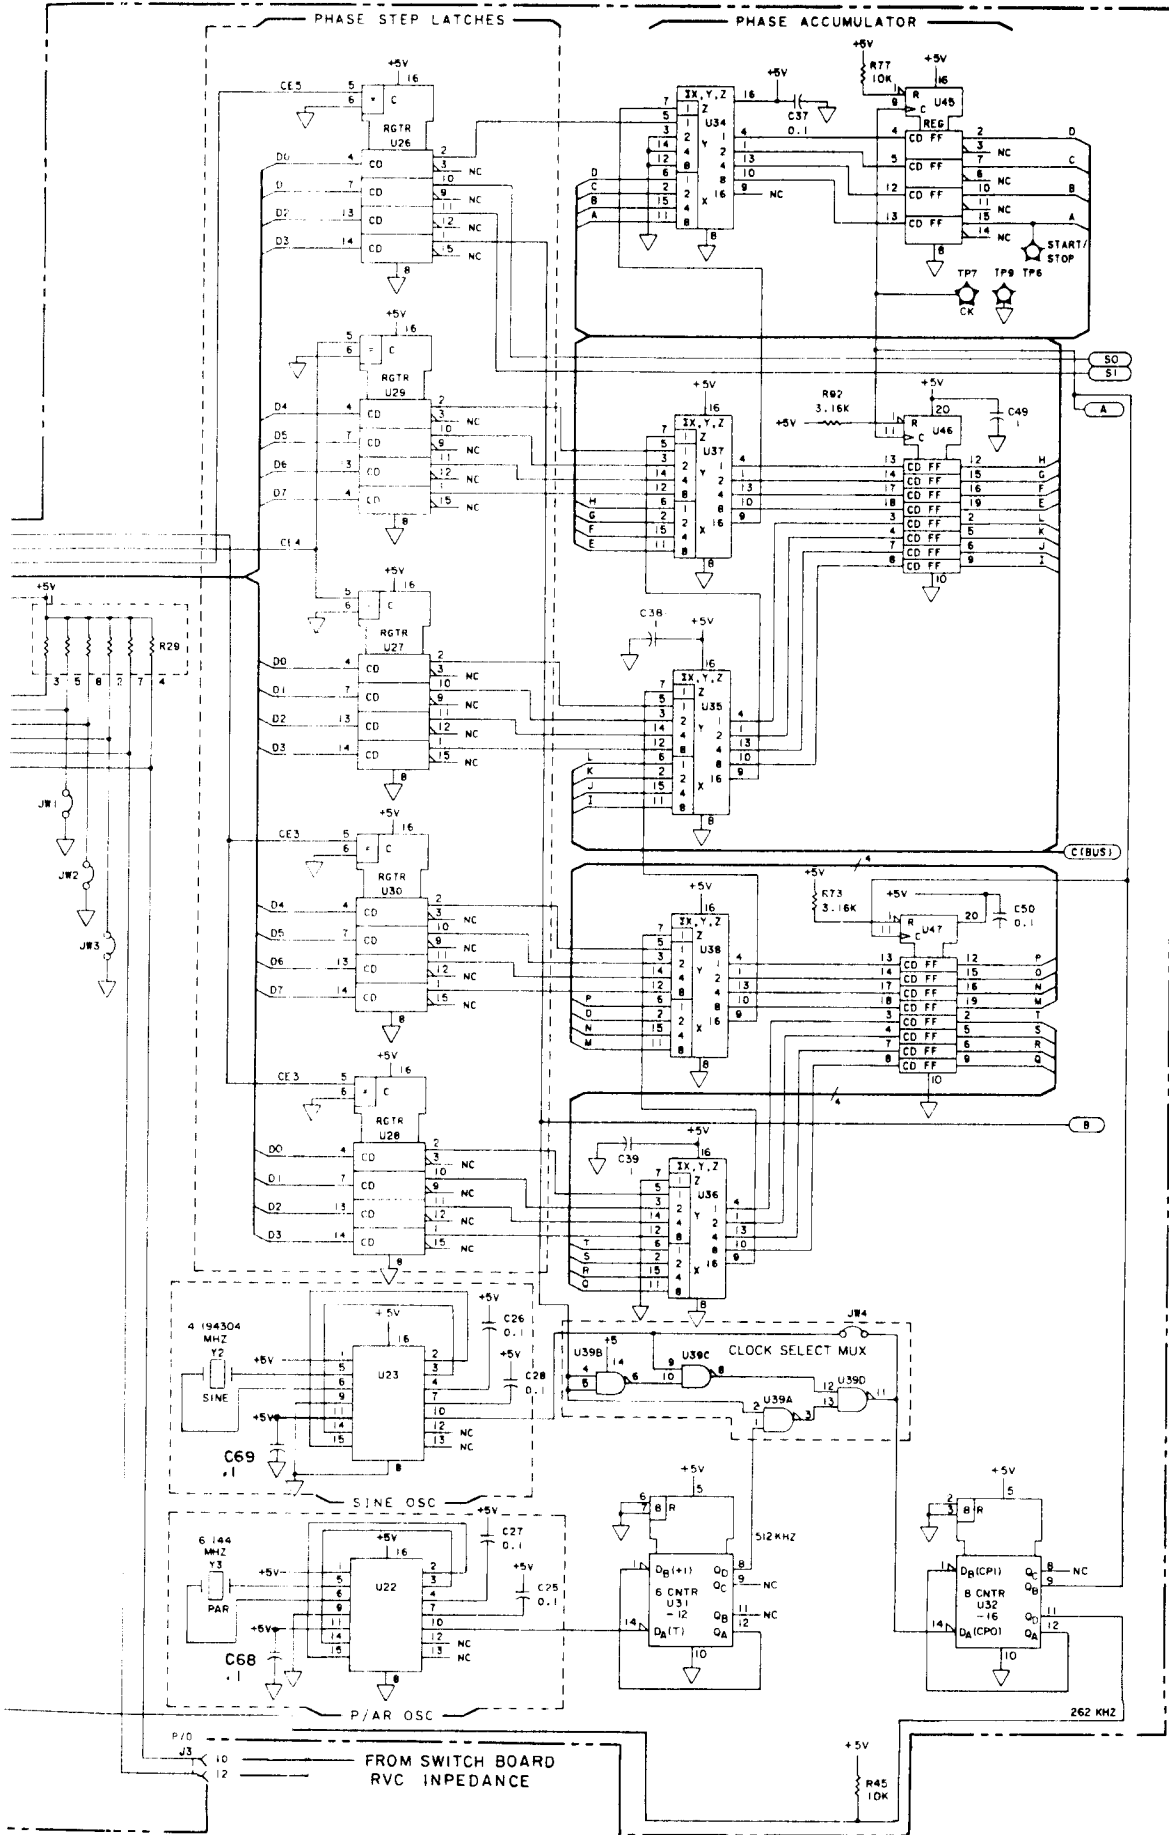


Figure 7-29.
A4 Transmitter Board Schematic Diagram
(Sheet 1 of 2) 7-39


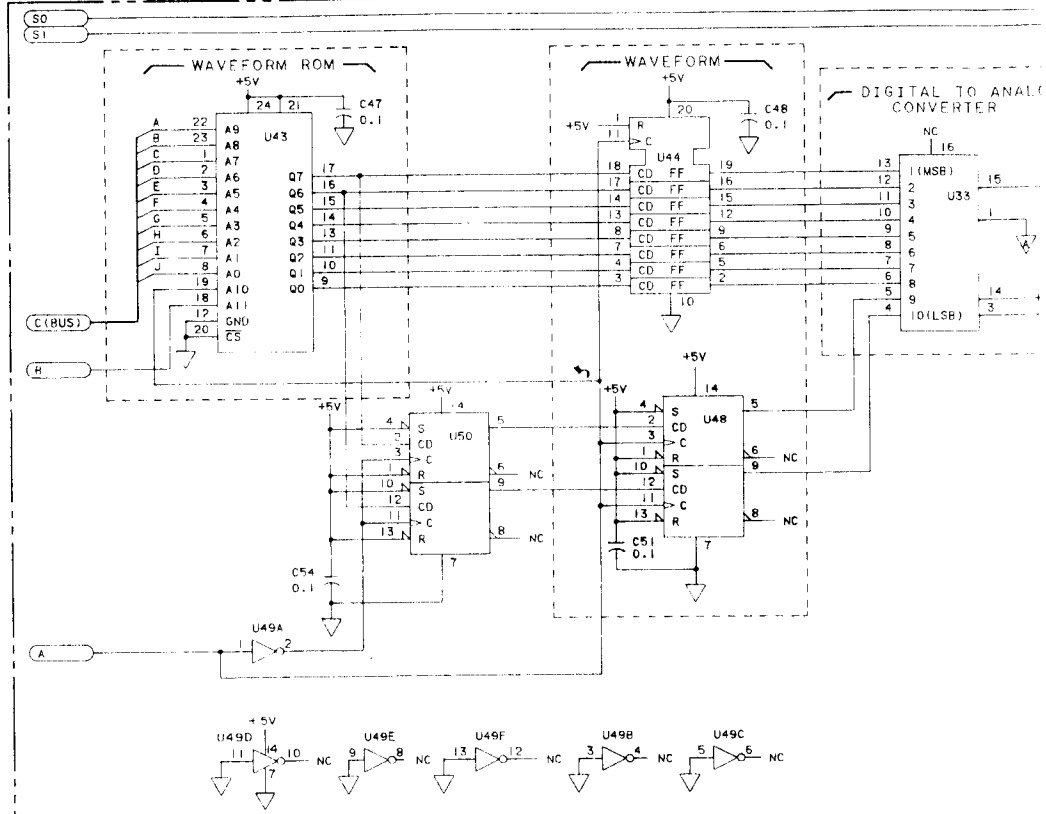



	2110-0065	2110-0296	
AC LINE VOLT.	100	120	220 240
FUSE	175MA	175MA	200MA 200MA

NOTE: FUSES ARE NON TIME DELAY TYPES

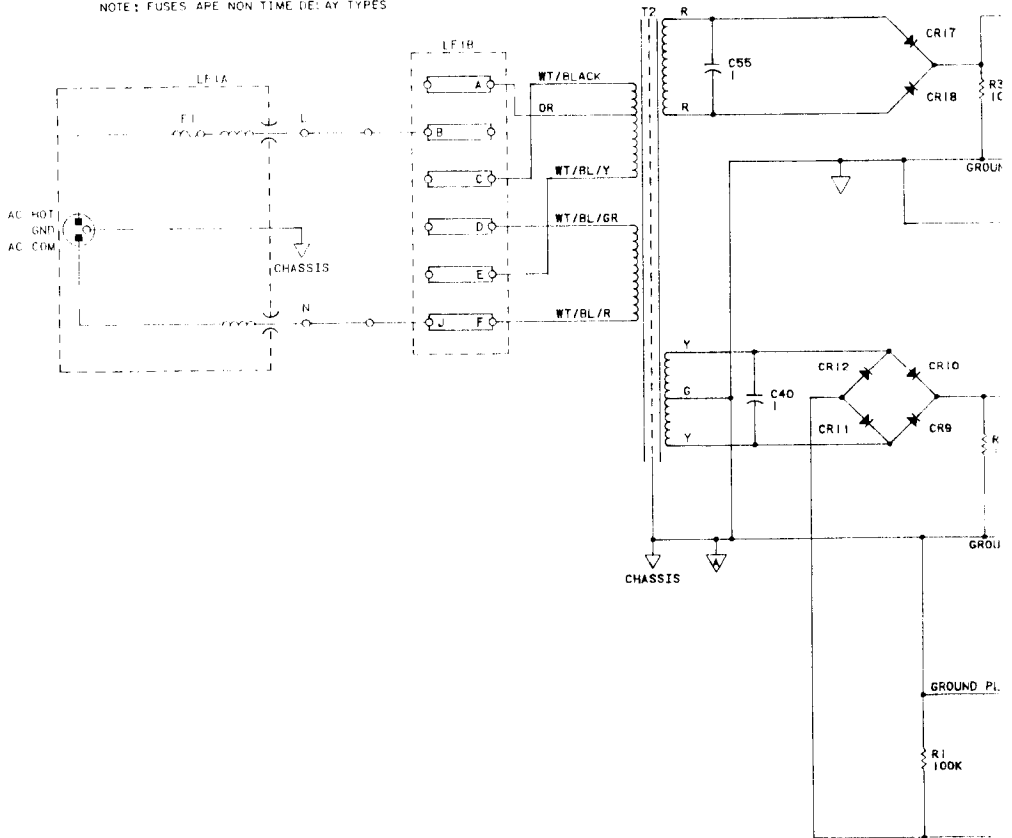

7-30 A

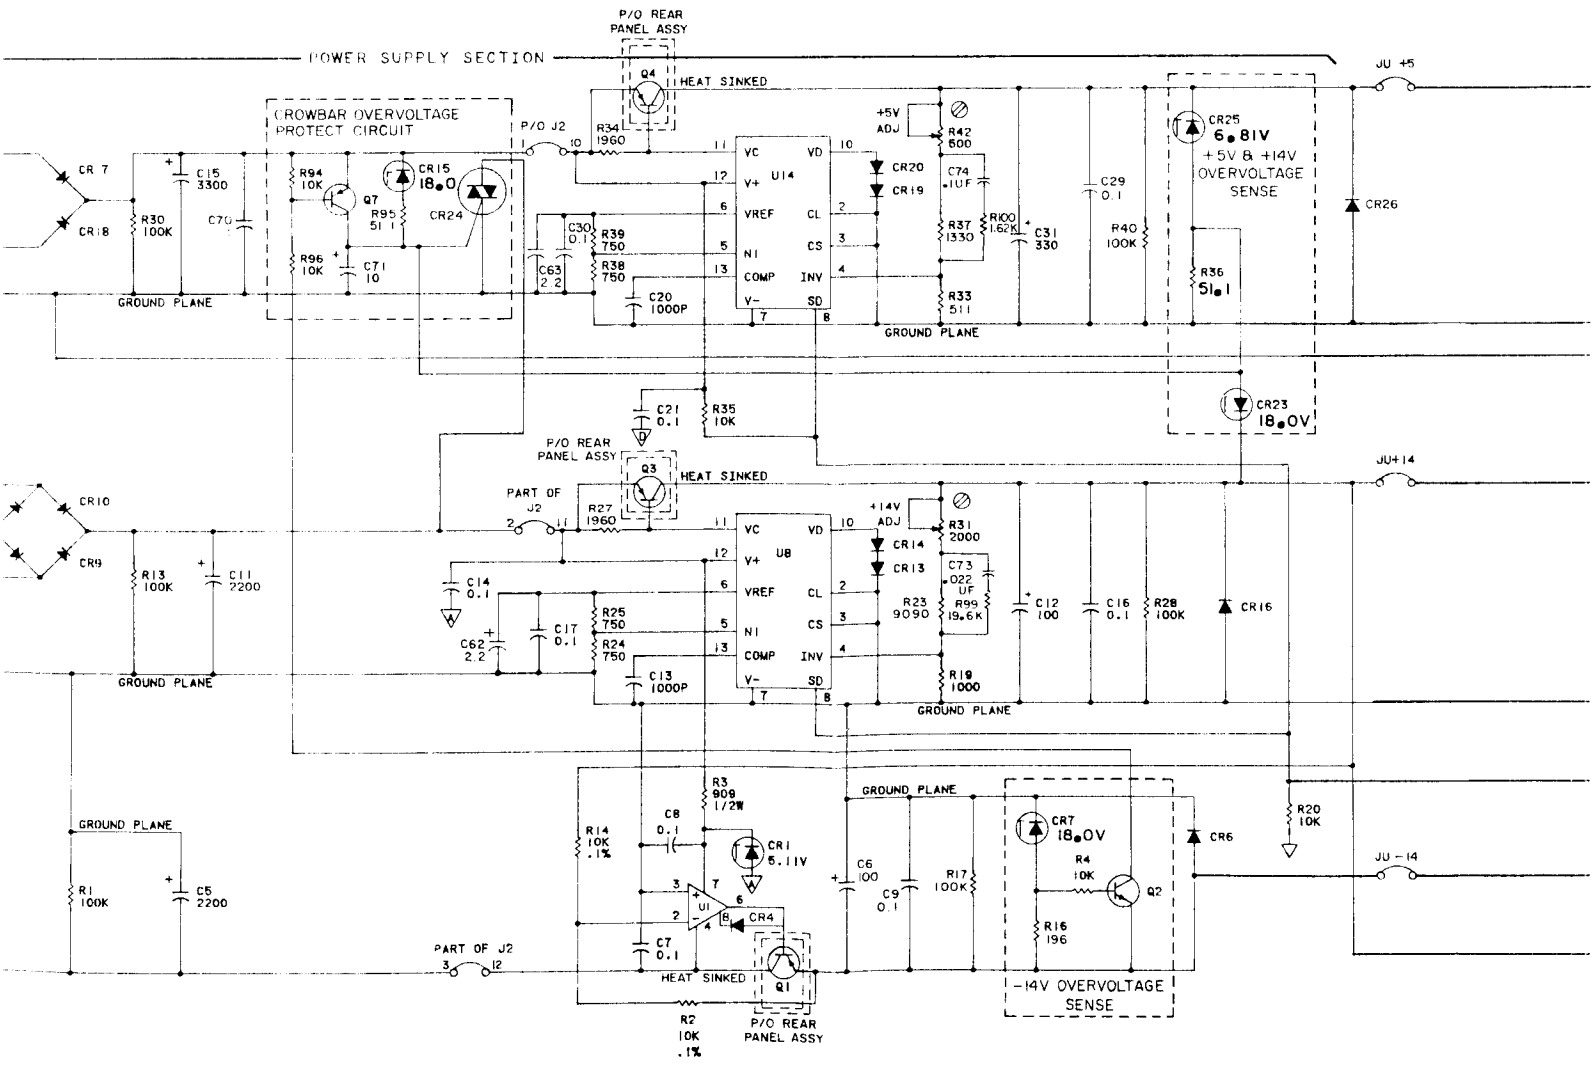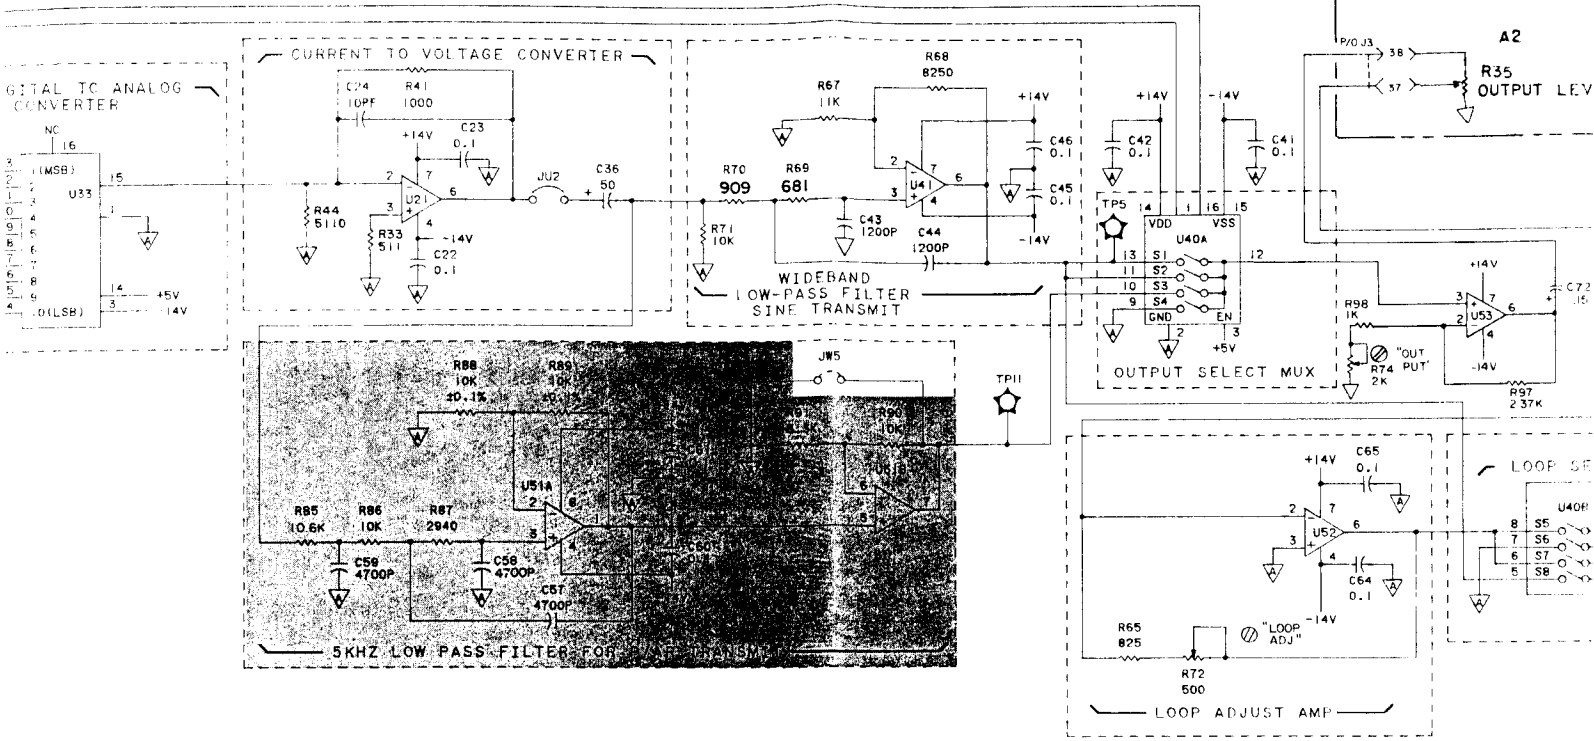

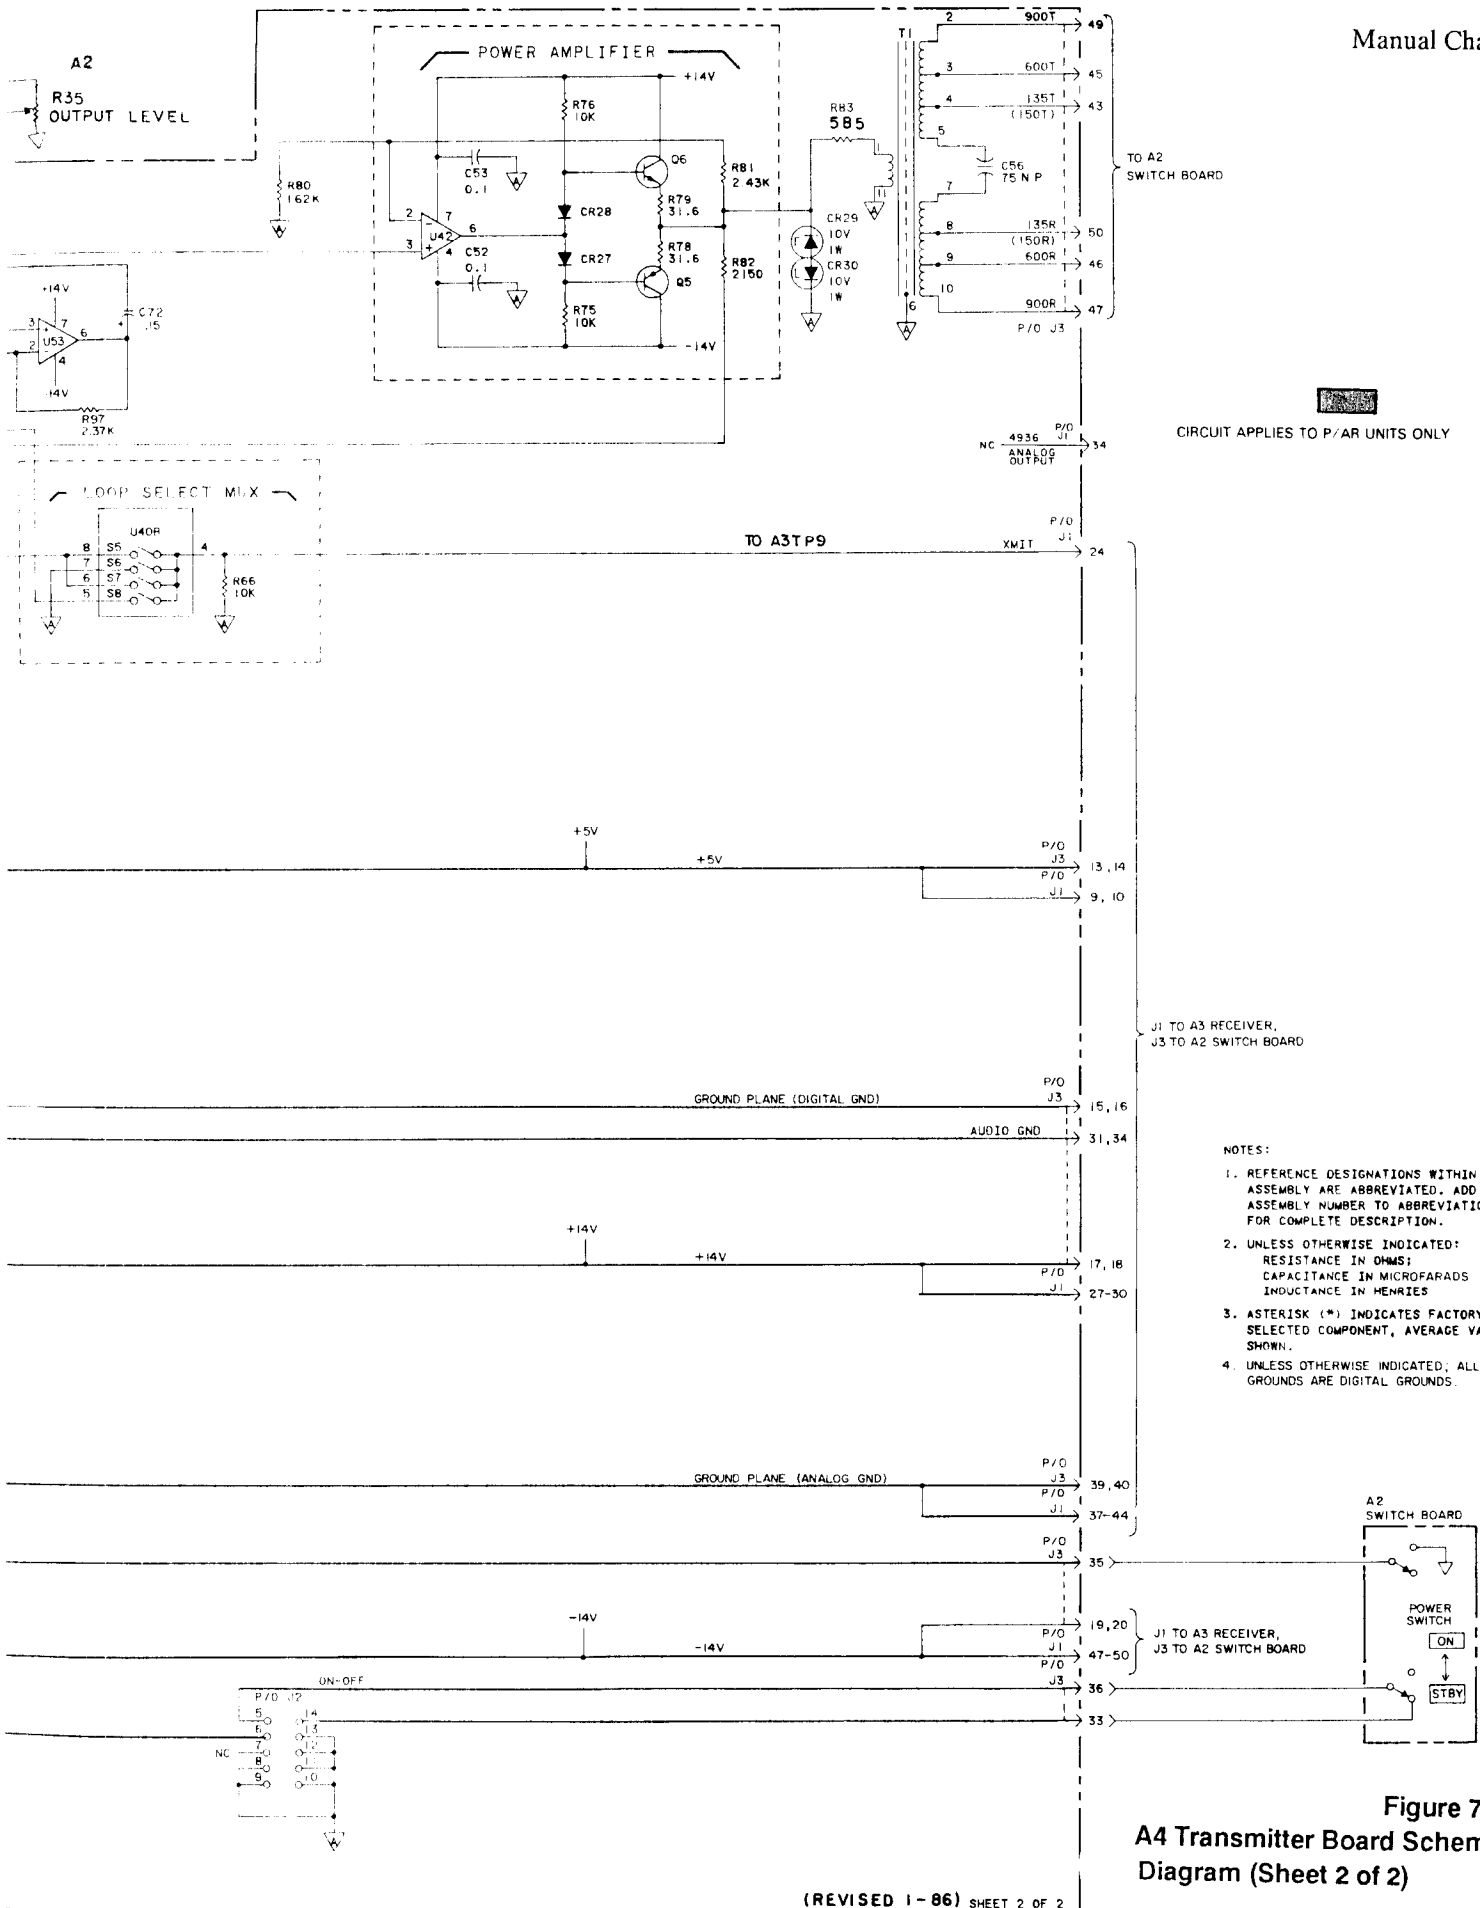

CIRCUIT APPLIES TO P/AR UNITS ONLY

- NOTES:
1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
 2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN MICROFARADS; INDUCTANCE IN HENRIES
 3. ASTERISK (*) INDICATES FACTORY SELECTED COMPONENT, AVERAGE VALUE SHOWN.
 4. UNLESS OTHERWISE INDICATED; ALL GROUNDS ARE DIGITAL GROUNDS.


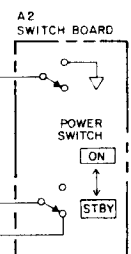


Figure 7-30.
A4 Transmitter Board Schematic
Diagram (Sheet 2 of 2)

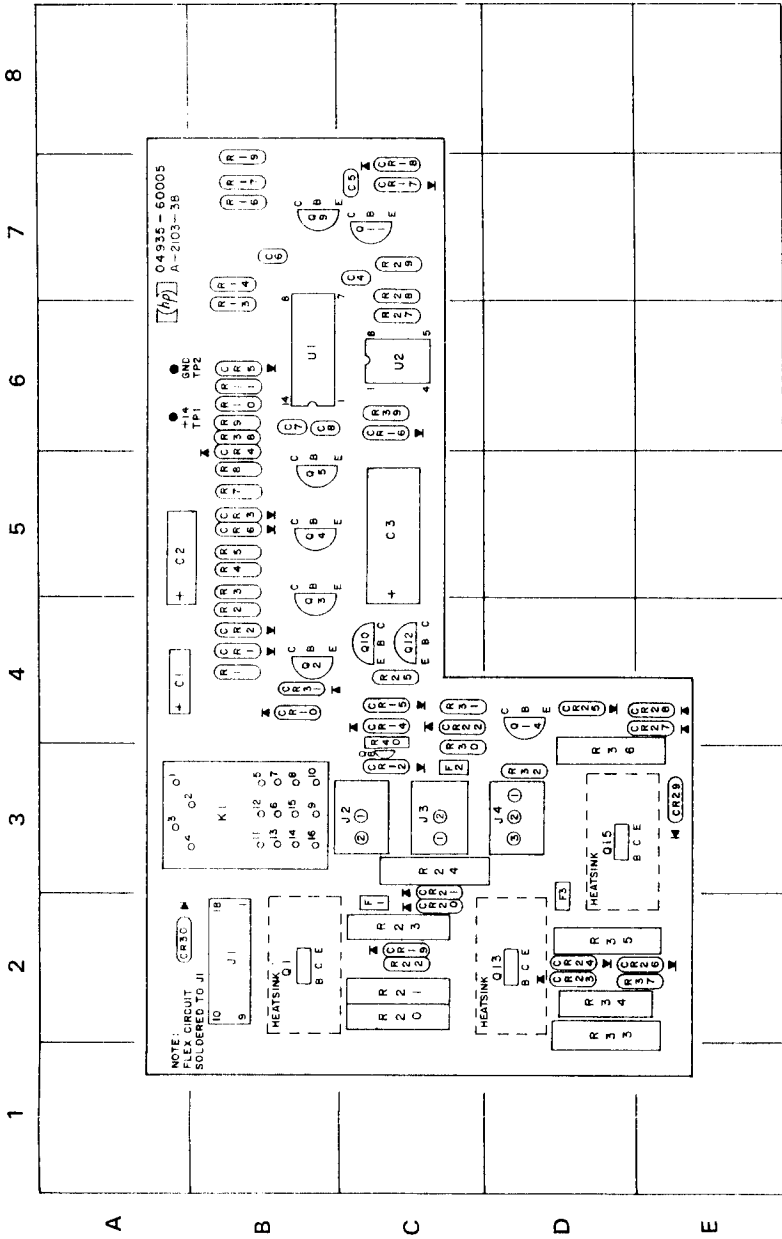

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	A-4	CR5	B-6	CR22	C-4	F3	D-2	O9	B-7	R7	B-5
C2	A-5	CR6	B-5	CR23	D-2	J1	B-2	O10	C-4	R8	B-5
C3	C-5	CR10	B-4	CR24	D-2	J2	C-3	O11	C-7	R9	B-6
C4	C-7	CR12	C-3	CR25	D-4	J3	C-3	O12	C-4	R10	B-6
C5	C-7	CR14	C-4	CR26	E-2	J4	D-3	O13	D-2	R11	B-6
C6	B-7	CR15	C-4	CR27	E-4	K1	B-3	O14	D-4	R12	B-7
C7	B-6	CR16	C-6	CR28	E-4	O1	B-2	O15	D-3	R13	B-7
C8	B-6	CR17	C-7	CR29	E-3	O2	B-4	R1	B-4	R14	B-7
CR1	B-4	CR18	C-7	CR30	A-2	O3	B-4	R2	B-4	R15	B-7
CR2	B-4	CR19	C-2	CR31	B-4	O4	B-5	R3	B-5	R16	B-7
CR3	B-5	CR20	C-2	F1	C-3	O5	B-5	R4	B-5	R17	B-7
CR4	B-6	CR21	C-2	F2	C-3	O8	B-5	R5	B-5	R18	B-7
										R19	B-8
										R20	C-2
										R21	C-2
										R22	C-2
										R23	C-2
										R24	C-3
										R25	C-4
										R26	C-6
										R27	C-6
										R28	C-7
										R29	C-7
										R30	C-4
										R31	C-4
										R32	D-3
										R33	D-1
										R34	D-2
										R35	D-2
										R36	D-3
										R37	E-2
										R38	B-6
										R39	C-6
										R40	C-3
										TP1	A-6
										TP2	A-6
										U1	B-6
										U2	C-6

Figure 7-31. A5 Charger Board Component Locator

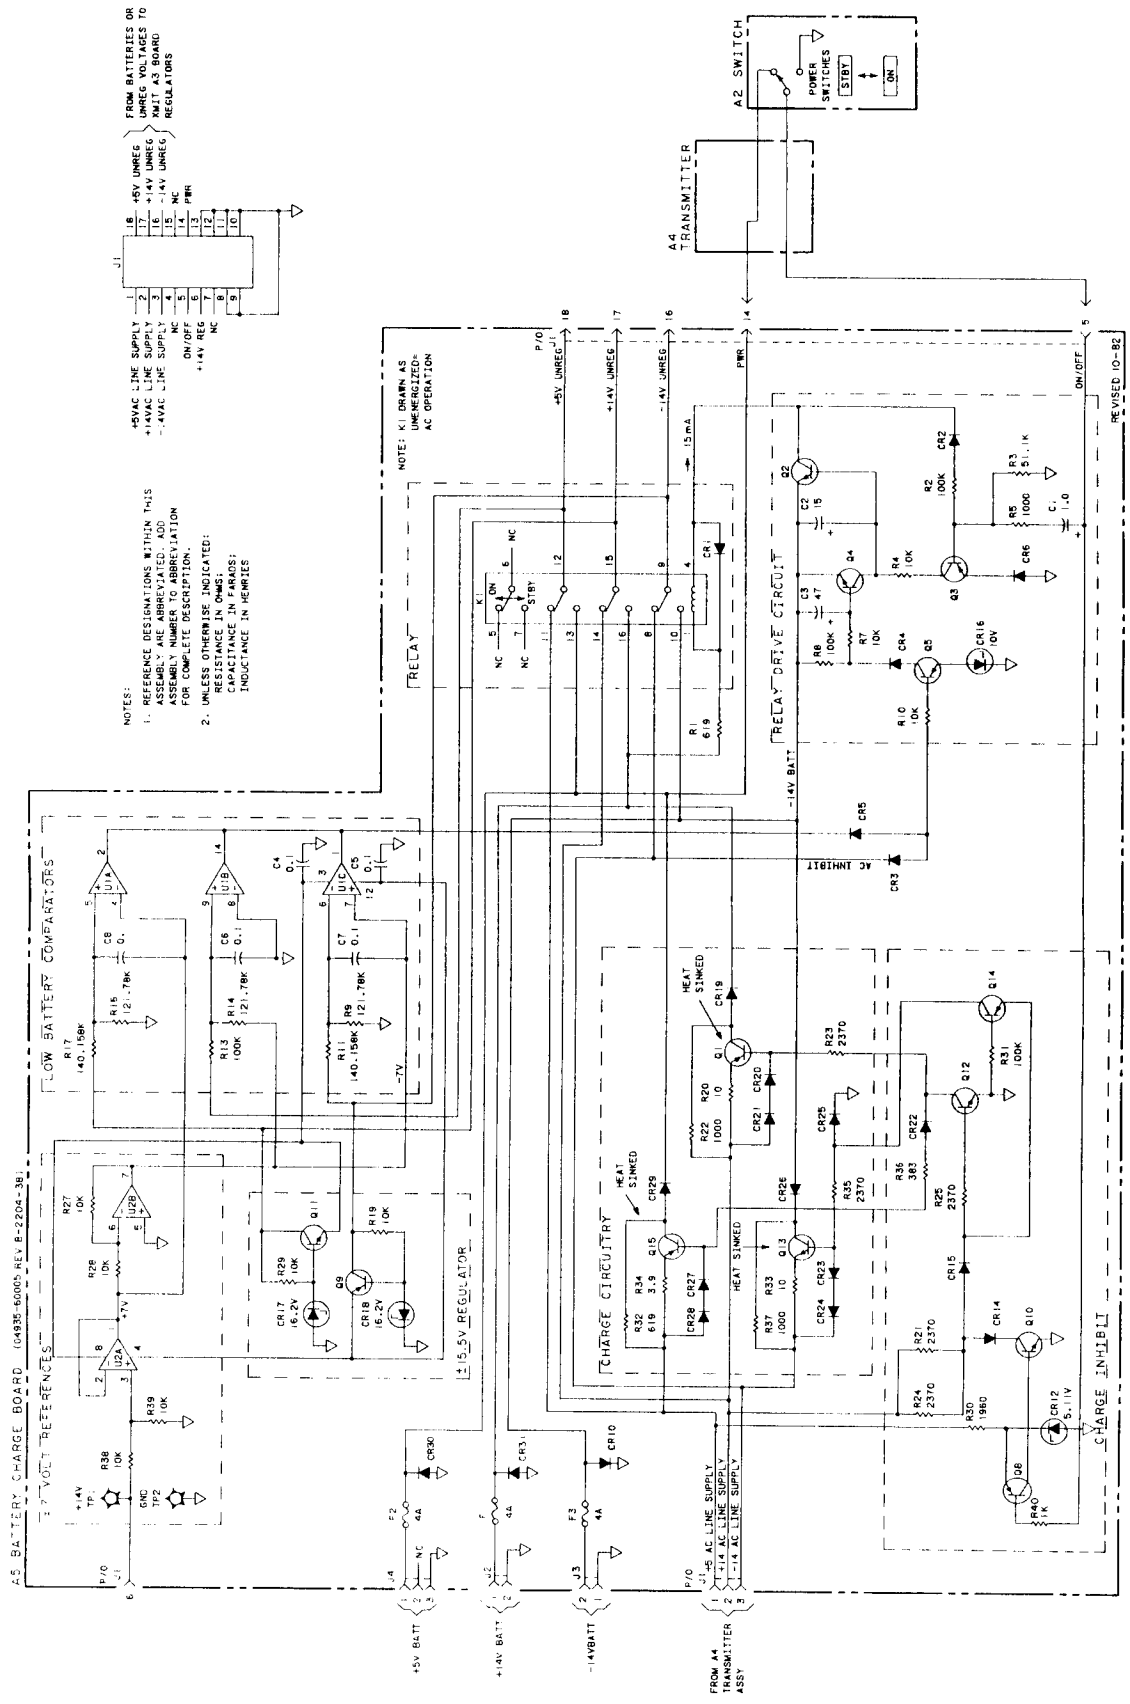
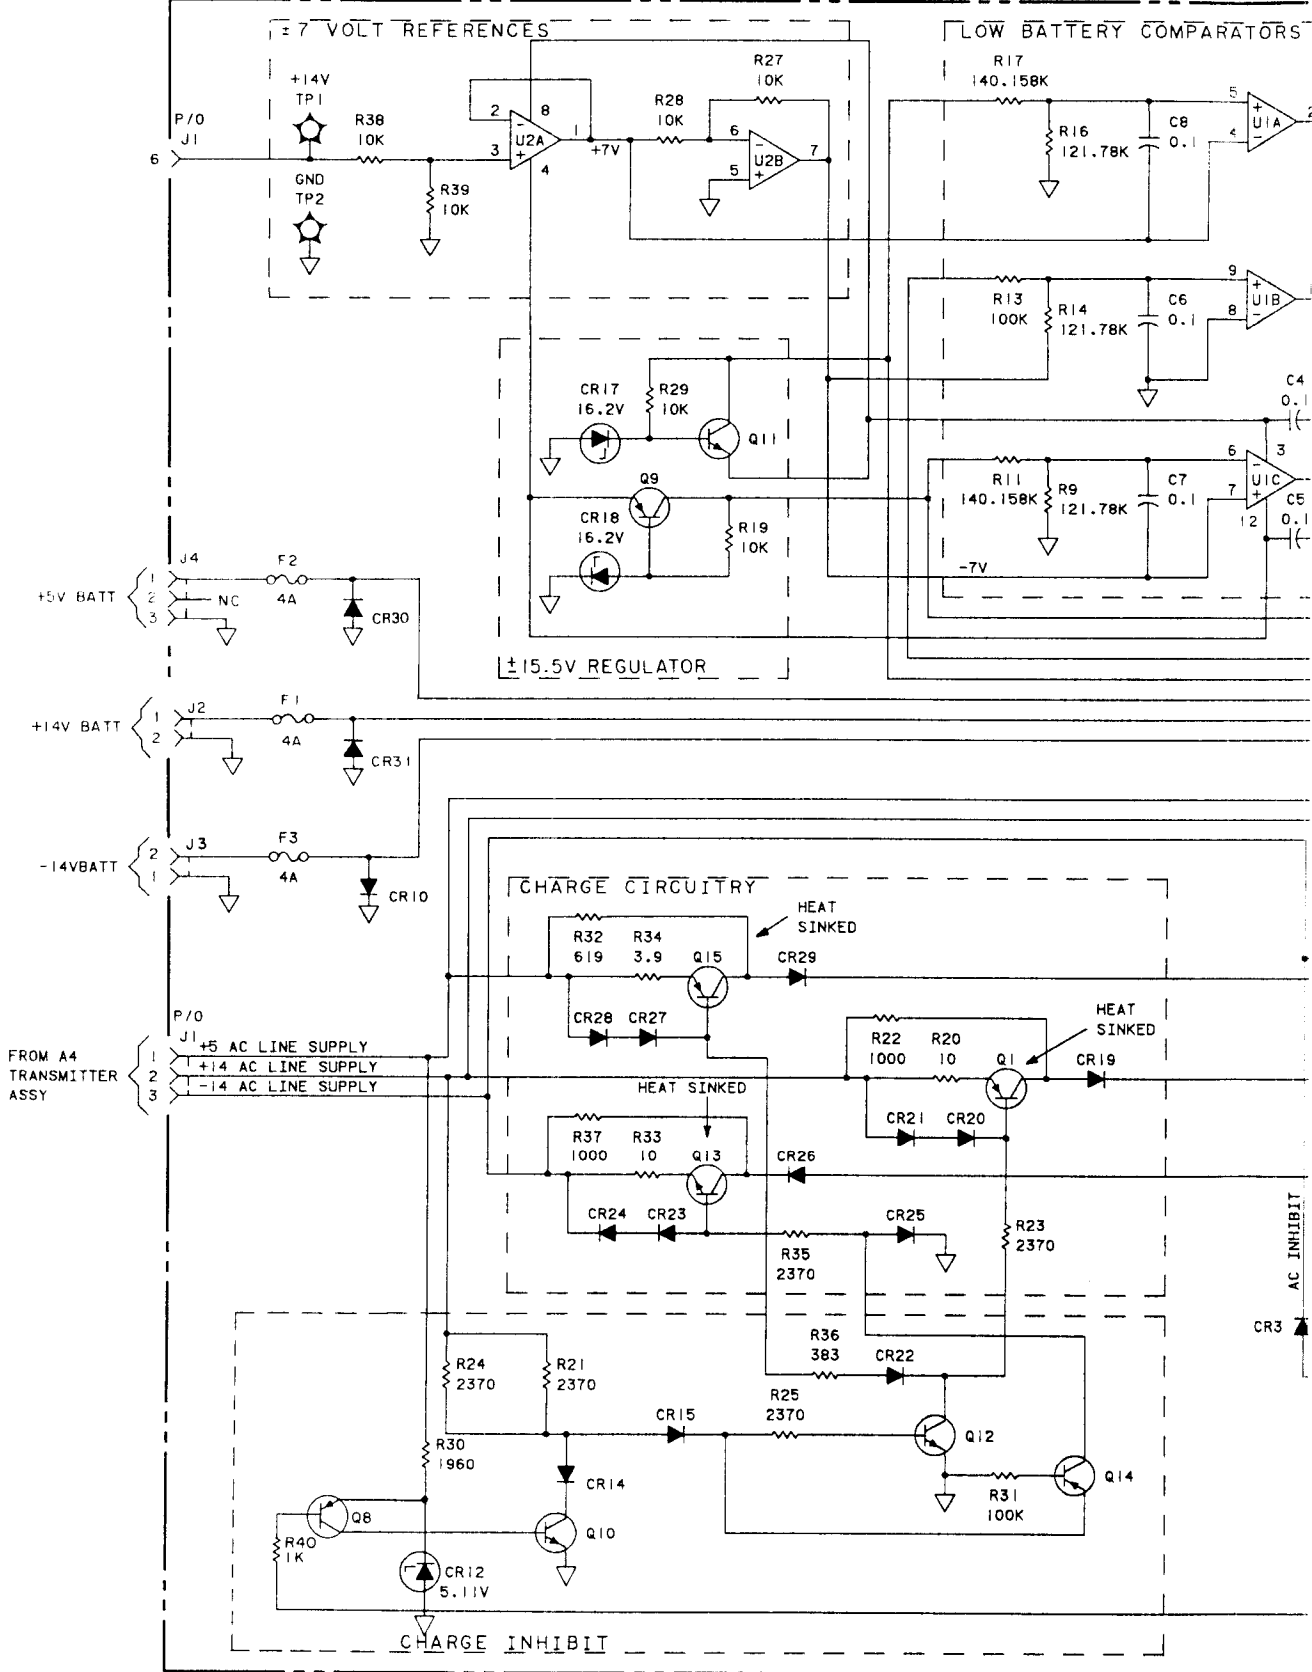


Figure 7-32.
A5 Charger Board Schematic Diagram
7-43 / (7-44 blank)

A5 BATTERY CHARGE BOARD (04935-60005 REV B-2204-38)



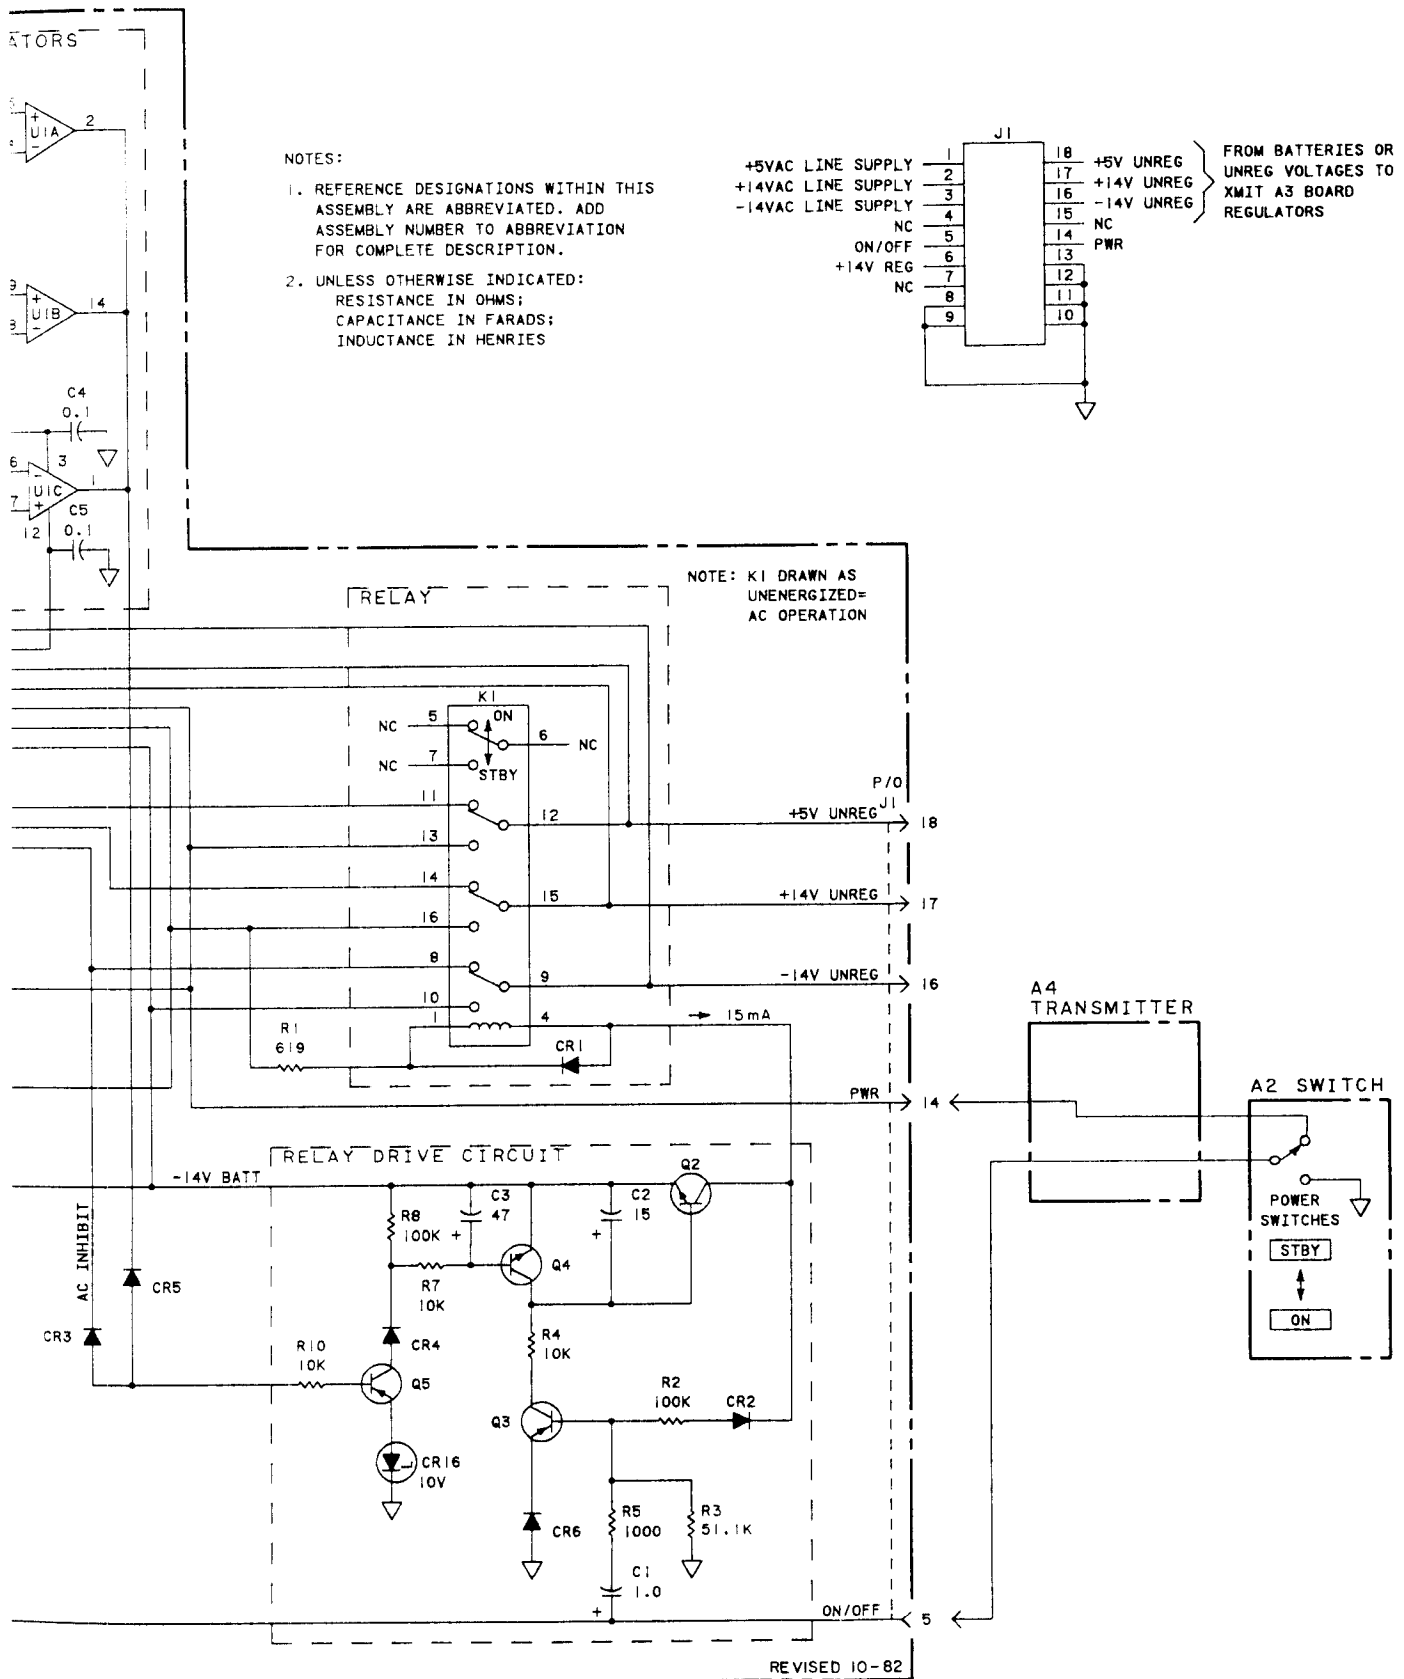


Figure 7-32.
A5 Charger Board Schematic Diagram
7-43 / (7-44 blank)

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1	04935-80009	3	1	FRONT PANEL W/PAR (OPT. 002, 003 ONLY)	28480	04935-80009
A1	80010-80010	9	1	FRONT PANEL W/NTG (STD. UNIT ONLY)	28480	80010-80010
A1DS1 DS40	1990-0810	3	40	LED (SERVICE ONLY)	28480	5082-4160
A2	04935-60102	2	1	SWITCH BOARD (ALL UNITS)	28480	04935-60102
A2C2	0160-0576	5	13	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A2C3	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A2C4	0160-0302	5	1	CAPACITOR-FXD .018UF +-10% 200VDC POLYE	28480	0160-0302
A2C5	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A2C7	0180-0291	3	1	CAPACITOR-FXD .1UF+-19% 35VDC TA	56289	150D105X9035A2
A2C10	0180-0104	7	1	CAPACITOR-FXD 200UF+-75-10% 16VDC AL	56289	30D2076016DF2
A2C11	0180-2206	4	2	CAPACITOR-FXD 600UF+-10% 6VDC TA	56289	150D606X9006B2
A2C12	0180-2206	4		CAPACITOR-FXD 600UF+-10% 6VDC TA	56289	150D606X9006B2
A2C13	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A2C14	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A2C15	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A2C16	0160-3878	6	1	CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480	0160-3878
A2C17	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A2C52	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A2C53	0180-0373	2	2	CAPACITOR-FXD .68UF+-10% 35VDC TA	56289	150D684X9035A2
A2C54	0160-3879	7	4	CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-3879
A2C56	0160-3879	7		CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-3879
A2C57	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A2C58	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A2C72	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A2C73	0180-0373	2		CAPACITOR-FXD .68UF+-10% 35VDC TA	56289	150D684X9035A2
A2C74	0160-3879	7		CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-3879
A2C76	0160-3879	7		CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-3879
A2C77	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A2C78	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A2CR8	1906-0069	4	2	DIODE-FW BRDG 400V 1A	28480	1906-0069
A2CR9	1906-0069	4		DIODE-FW BRDG 400V 1A	28480	1906-0069
A2CR51	1826-0585	9	2	V REF T0-92	27014	LM329DZ
A2CR71	1826-0585	9		V REF T0-92	27014	LM329DZ
A2DS1	1990-0681	3	1	DISPLAY-AN-SEG 1-CHAR .408-H RED	28480	5082-7656
A2DS2	1990-0540	3	8	DISPLAY-NUM-SEG 1-CHAR .43-H	28480	5082-7650
A2DS3	1990-0540	3		DISPLAY-NUM-SEG 1-CHAR .43-H	28480	5082-7650
A2DS4	1990-0540	3		DISPLAY-NUM-SEG 1-CHAR .43-H	28480	5082-7650
A2DS5	1990-0540	3		DISPLAY-NUM-SEG 1-CHAR .43-H	28480	5082-7650
A2DS6	1990-0540	3		DISPLAY-NUM-SEG 1-CHAR .43-H	28480	5082-7650
A2DS7	1990-0540	3		DISPLAY-NUM-SEG 1-CHAR .43-H	28480	5082-7650
A2DS8	1990-0540	3		DISPLAY-NUM-SEG 1-CHAR .43-H	28480	5082-7650
A2DS9	1990-0540	3		DISPLAY-NUM-SEG 1-CHAR .43-H	28480	5082-7650
A2J2	1251-6947	0	2	CONNECTOR-SGL CONT PIN .025-IN-BSC-SZ SQ	28480	1251-6947
A2J3	1251-3677	7	2	CONNECTOR-TEL JACK 2-CKT .25-SHK-D1A	28480	1251-3677
A2J4	1251-3677	7		CONNECTOR-TEL JACK 2-CKT .25-SHK-D1A	28480	1251-3677
A2J6	1251-6537	4	2	CONNECTOR 13-PIN F POST TYPE	28480	1251-6537
A2J7	1251-6537	4		CONNECTOR 13-PIN F POST TYPE	28480	1251-6537
A2J8	1250-0257	1	1	CONNECTOR-RF SHR M PC 50-OHM	28480	1250-0257
A2Q4	1854-0643	9	2	TRANSISTOR NPN 2N3585 SI T0-66 PD=35W	0192H	2N3585
A2Q8	1854-0643	9		TRANSISTOR NPN 2N3585 SI T0-66 PD=35W	0192H	2N3585
A2Q51	1854-0575	6	6	TRANSISTOR NPN SI PD=625MW FT=50MHZ	04713	MPS-A42
A2Q52	1854-0071	7	2	TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A2Q53	1854-0575	6		TRANSISTOR NPN SI PD=625MW FT=50MHZ	04713	MPS-A42
A2Q55	1854-0575	6		TRANSISTOR NPN SI PD=625MW FT=50MHZ	04713	MPS-A42
A2Q71	1854-0575	7		TRANSISTOR NPN SI PD=625MW FT=50MHZ	04713	MPS-A42
A2Q72	1854-0071	7		TRANSISTOR NPN SI PD=300MW FT=200MHZ	28480	1854-0071
A2Q73	1854-0575	6		TRANSISTOR NPN SI PD=625MW FT=50MHZ	04713	MPS-A42
A2Q75	1854-0575	6		TRANSISTOR NPN SI PD=625MW FT=50MHZ	04713	MPS-A42
A2R5	0757-0461	2	2	RESISTOR 68.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6812-F
A2R6	0757-0288	1	1	RESISTOR 9.09K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-9091-F
A2R15	0757-0458	7	1	RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5112-F
A2R18	0757-0461	2		RESISTOR 68.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6812-F
A2R19	0698-3132	4	1	RESISTOR 261.1K .125W F TC=0+-100	24546	C4-1/8-T0-2610-F
A2R20	0757-0442	9	3	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R21	0698-8558	8	2	RESISTOR 67.3 .25% .5W F TC=0+-50	28480	0698-8558
A2R22	0698-8558	8		RESISTOR 67.3 .25% .5W F TC=0+-50	28480	0698-8558
A2R23	0699-0657	4	2	RESISTOR 300 .25% .5W F TC=0+-50	28480	0699-0657
A2R24	0699-0657	4		RESISTOR 300 .25% .5W F TC=0+-50	28480	0699-0657

See introduction to this section for ordering information
 *Indicates factory selected value

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A2R25	0699-0658	5	2	RESISTOR 450 .25% .5W F TC=0+-50	28480	0699-0658
A2R26	0699-0658	5		RESISTOR 450 .25% .5W F TC=0+-50	28480	0699-0658
A2R27	0757-0346	2	1	RESISTOR 10 1% .125W F TC=0+-100	24546	C4-1/8-TO-10R0-F
A2R28	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A2R29	0757-0447	4	1	RESISTOR 16.2K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1622-F
A2R30	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A2R35	2100-3857	7	1	RESISTOR-VARIABLE 10K +.20%; SPECIAL	28480	2100-3857
A2R36	2100-3858	8	1	RESISTOR-VAR CONTROL CP 50K 20% 10CW	28480	2100-3858
A2R51	0698-8827	4	2	RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A2R52	0757-0199	3	2	RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2152F
A2R53	2100-3164	9	2	RESISTOR-TRMR 10 20% C SIDE-ADJ 17-TRN	02111	43P100
A2R54	0698-3429	2	2	RESISTOR 19.6 1% .125W F TC=0+-100	03888	PME55-1/8-TO-19R6-F
A2R56	0757-0401	0	8	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2R57	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2R58	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2R60	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2R71	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A2R72	0757-0199	3		RESISTOR 21 .5K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2152-F
A2R73	2100-3164	9		RESISTOR-TRMR 10 20% C SIDE-ADJ 17-TRN	02111	4P100
A2R74	0698-3429	2		RESISTOR 19.6 1% .125W F TC=0+-100	03888	PME55-1/8-TO-19R6-F
A2R76	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2R77	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2R78	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2R80	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A2S1	3101-2124	2	1	SWITCH-PB DPDT ALTNG .25A 115VAC	28480	3101-2124
A2S2	3101-2391	5	1	SWITCH-PB 2-STATION 15MM C-C SPACING	28480	3101-2391
A2S3	3101-2391	5		SWITCH-PB 2-STATION 15MM C-C SPACING	28480	3101-2391
A2S4	3101-0499	0	2	SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S5	3101-0499	0		SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S6	3101-0499	0		SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S7	3101-0499	0		SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S8	3101-0499	0		SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S9	3101-0499	0		SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S10	3101-0499	0		SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S11	3101-0499	0		SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S12	3101-0499	0		SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2S13	3101-0499	0		SWITCH-PB 5-STATION 10MM C-C SPACING	28480	3101-0499
A2SG1	1970-0078	0	2	TUBE-ELECTRON SURGE V PICTR	25088	B1-A350/15
A2SG2	1970-0078	0		TUBE-ELECTRON SURGE V PICTR	25088	B1-A350/15
A2SP1	9160-0273	8	1	LOUD SPEAKER	28480	9160-0273
A2TP3	1251-6947 1251-6947	0	2	CONNECTOR SGL CONT PIN .025-IN-BSC	28480	1251-6947
A2TP4	1251-6947 1251-6947	0		CONNECTOR SGL CONT PIN .025-IN-BSC	28480	1251-6947
A2U2	1820-2132	4	2	IC DRV R CMOS LED DRV R	32293	ICM7218A
A2U3	1820-2132	4		IC DRV R CMOS LED DRV R	32293	ICM7218A
A2U4	1826-0205	0	1	IC TIMER TTL	18324	NE556A
A2U6	1826-0682	7	1	IC AUDIO AMPL PWR 8-DIP-P PKG	27014	LM386N-1
A2U7	1826-0712	4	1	IC OP AMP LOW-BIAS-I-I-IMP'D DUAL 8-DIP-P	27014	LF353N
A2XDS1	1200-0915	3	9	SOCKET-DSPL 14-DIP DIP-SLDR	28480	1200-0915
A2XDS2	1200-0915	3		SOCKET-DSPL 14-DIP DIP-SLDR	28480	1200-0915
A2XDS3	1200-0915	3		SOCKET-DSPL 14-DIP DIP-SLDR	28480	1200-0915
A2XDS4	1200-0915	3		SOCKET-DSPL 14-DIP DIP-SLDR	28480	1200-0915
A2XDS5	1200-0915	3		SOCKET-DSPL 14-DIP DIP-SLDR	28480	1200-0915
A2XDS6	1200-0915	3		SOCKET-DSPL 14-DIP DIP-SLDR	28480	1200-0915
A2XDS7	1200-0915	3		SOCKET-DSPL 14-DIP DIP-SLDR	28480	1200-0915
A2XDS8	1200-0915	3		SOCKET-DSPL 14-DIP DIP-SLDR	28480	1200-0915
A2XDS9	1200-0915	3		SOCKET-DSPL 14-DIP DIP-SLDR	28480	1200-0915
	0340-0992	1	2	INSULATOR TRANSISTOR	28480	0340-0992
	0300-1013	3	2	SPACER-RND .688-IN-LG .115-IN-ID	00000	ORDER BY DESCRIPTION
	2200-0173	6	2	SCREW-MCH 4-40 1-IN-LG 82 DEG	00000	ORDER BY DESCRIPTION
	2260-0012	8	2	NUT-HEX-W/LKWR 4-40-THD .094-IN-THK	00000	ORDER BY DESCRIPTION
	2360-0197	2	4	SCREW-MCH 6-32 .375-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
	2420-0015	1	4	NUT-HEX-W/LKWR 6-32-THD .094-IN-THK	00000	ORDER BY DESCRIPTION
	5041-0201	6	1	KEY CAP-WHITE (POWER SWITCH)	28480	5041-0201
	5041-1931	1	1	KEY CAP-NOIR (REV-TRMT)	28480	5041-1931
	5041-1932	2	1	KEY CAP-REV (REV-TRMT)	28480	5041-1932
	5041-1933	3	1	KEY CPA-DIAL (SETUP-TRMT)	28480	5041-1933
	5041-1934	4	2	KEY CAP-HOLD (SETUP-TRMT-REV)	28480	5041-1934
	5041-1935	5	1	KEY CAP-BRDG (SETUP-TRMT-REV)	28480	5041-1935
	5041-1936	6	2	KEY CAP-135 (SETUP-TRMT-REV)	28480	5041-1936
	5041-1938	8	2	KEY CAP-600 (SETUP-TRMT-REV)	28480	5041-1938
	5041-1939	9	2	KEY CAP-900 (SETUP-TRMT-REV)	28480	5041-1939

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3	04935-60004	4	1	RECEIVER BOARD ASSY (STD. UNIT ONLY)	28480	04935-60004
A3C1	0180-3124	8	1	CAPACITOR-FXD 75UF+100-20% 300VDC AL	28480	0180-3124
A3C2	0180-1746	5	3	CAPACITOR-FXD 15UF+10% 20VDC TA	56289	150D156X9020B2
A3C3	0180-1746	5		CAPACITOR-FXD 15UF+10% 20VDC TA	56289	150D156X9020B2
A3C4	0180-1746	5		CAPACITOR-FXD 15UF+10% 20VDC TA	56289	150D156X9020B2
A3C5	0160-0576	5	72	CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C6	0160-2213	1	1	CAPACITOR-FXD 620PF +-5% 30VDC MICA	28480	0160-2213
A3C7	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C8	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C9	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C10	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C11	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C12	0160-2225	5	1	CAPACITOR-FXD 2000PF +-5% 300VDC MICA	28480	0160-2225
A3C13	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C14	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C15	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C16	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C17	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C18	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C19	0160-6405	1	10	CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	HP204571PF3C1
A3C21	0160-0576	5		CAPACITOR-FXD .1UF +10% 50VDC CER	28480	0160-0576
A3C22	0160-0576	5		CAPACITOR-FXD .1UF +10% 50VDC CER	28480	0160-0576
A3C23	0160-0576	5		CAPACITOR-FXD .1UF +10% 50VDC CER	28480	0160-0576
A3C24	0140-0190	7	2	CAPACITOR-FXD 39PF +-5% 300VDC	72136	DM15E390J0300WV1CR
A3C25	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C26	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C27	0160-6405	1		CAPACITOR-FXD .01UF +1% 100VDC MICA	08113	HP204571PF3C1
A3C28	0180-0374	3	11	CAPACITOR-FXD 10UF +-10% 20VDC TA	52689	150D106X9020B2
A3C29	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	52689	150D106X9020B2
A3C31	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C32	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C33	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C34	0180-0374	3		CAPACITOR-FXD 10UF +10% 20VDC TA	56289	15D106X9020B2
A3C35	0180-0374	3		CAPACITOR-FXD 10UF +10% 20VDC TA	56289	15D106X9020B2
A3C36	0160-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC CER	56289	15D106X9020B2
A3C37	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C38	0140-0190	7		CAPACITOR-FXD 39PF +-5% 300 VDC MICA	72136	MD15E390J0300WV1CR
A3C39	0160-0167	0	2	CAPACITOR-FXD .082UF +-10% 200VDC POLYE	28480	0160-0167
A3C40	0160-0167	0		CAPACITOR-FXD .082U +-10% 200VDC POLYE	28480	0160-0167
A3C41	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C42	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C43	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C44	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A3C45	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C46	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A3C47	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A3C49	0160-0340	1	1	CAPACITOR-FXD 600PF +-1% 300VDC MICA	28480	0160-0340
A3C50	0160-3291	7	5	CAPACITOR-FXD 1200PF+1% 100VDC MICA	28480	0160-3291
A3C51	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C52	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C53	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C54	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C55	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C56	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C57	0160-2222	2		CAPACITOR-FXD 1500PF +-5% 300VDC MICA	28480	0160-2222
A3C58	0160-6320	9	10	CAPACITOR-FXD 1700PF+-1% 100VDC MICA	08113	HP204751PF3C1
A3C59	0180-0374	3		CAPACITOR-FXD 10UF+-10% 20VDC TA	56289	150D106X9020B2
A3C60	0160-6318	5	2	CAPACITOR-FXD 1100PF+-1% 100VDC MICA	08113	GO2044751PF3C1
A3C61	0160-6320	9		CAPACITOR-FXD 1700PF .01% 100VDC MICA	08113	HP204751PF3C1
A3C62	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C63	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A3C64	0180-0197	8	4	CAPACITOR-FXD 2.2UF+-10% 20VDC 1A	56289	150D225X9020A2
A3C65	0180-0197	8		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150J225X9020A2
A3C66	0160-6320	9		CAPACITOR-FXD 1700PF+-1% 100VDC MICA	08113	HP204751PF3C1
A3C67	0160-6320	9		CAPACITOR-FXD 1700PF+-1% 100VDC MICA	08113	HP204751PF3C1
A3C68	0160-6320	9		CAPACITOR-FXD 1700PF+-1% 100VDC MICA	08113	HP204751PF3C1
A3C69	0160-6185	4	2	CAPACITOR-FXD 1000PF+-1% 500VDC MICA	08113	HP204751PF3C1
A3C70	0160-6317	4	3	CAPACITOR-FXD 4751PF+-1% 300VDC MICA	08113	HP204751PF2C1
A3C71	0160-6185	4		CAPACITOR-FXD 1000PF+-1% 500VDC MICA	08113	HP204751PF3C1
A3C72	0160-0576	5		CAPACITOR-FXD .1UF+20% 50VDC CER	28480	0160-0576
A3C73	0160-0576	5		CAPACITOR-FXD .1UF+20% 50VDC CER	28480	0160-0576

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3C74	0160-6188	9	1	CAPACITOR-FXD 110PF +-1% 300VDC MICA	08113	HP204751PF2C1
A3C75	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C76	0160-0576	5		CAPACITOR-FXD .1UF +-0% 50VDC CER	28480	0160-0576
A3C77	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C78	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C79	0160-6317	4		CAPACITOR-FXD 4751PF+-1% 300VDC MICA	08113	HP40751PF3C1
A3C80	0140-0225	9	1	CAPACITOR-FXD 300PF+-1% 200VDC MICA	08113	HP204751PF3C1
A3C81	0160-0218	2	5	CAPACITOR-FXD 2400PF+-1% 300VDC MICA	28480	0160-0218
A3C82	0160-3291	7		CAPACITOR-FXD 1200PF+-1% 100VDC MICA	28480	0160-3291
A3C83	0160-0576	5		CAPACITOR-FXD .1UF +-UF20% 50VDC CER	28480	0160-0576
A3C84	0160-0218	2		CAPACITOR-FXD 2400PF+-1% 300VDC MICA	28480	0160-0218
A3C85	0160-6320	9		CAPACITOR-FXD 1700PF+-1% 100VDC MICA	08113	HP20471PF3C1
A3C87	0160-6320	9		CAPACITOR-FXD 1700PF+-1% 100VDC MICA	08113	HP20471PF3C1
A3C88	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C89	0160-6405	1		CAPACITOR-FXD .01UF+-1% 100VDC MICA	08113	HP204751PF3C1
A3C90	0160-0576	5		CAPACITOR-FXD .01UF+-1% 20% VDC CER	28480	0160-0576
A3C91	0160-0576	5		CAPACITOR-FXD .01UF+-1% 20% VDC CER	28480	0160-0576
A3C92	0160-6405	1		CAPACITOR-FXD .01UF+-1% 100VDC MICA	08113	HP204751PF3C1
A3C93	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C94	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C95	0140-0177	0	1	CAPACITOR-FXD 400PF +-1% 300VDC MICA	72136	DM15F401F0300WV1CR
A3C97	0160-6317	4		CAPACITOR-FXD 4751PF+-1% 300VDC MICA	08113	HP204751PF3C1
A3C98	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C99	0180-0374	3		CAPACITOR-FXD 10UF+-10% 20VDC TA	56289	150D106X9020B2
A3C100	0160-6405	1		CAPACITOR-FXD .01UF+-1% 100VDC MICA	08113	HP204751PF3C1
A3C101	0160-6405	1		CAPACITOR-FXD .01UF+-1% 100VDC MICA	08113	HP204751PF2C1
A3C102	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C103	0160-3291	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-3291
A3C104	0160-0218	2		CAPACITOR-FXD 2400PF +-1% 300VDC MICA	28480	0160-0218
A3C105	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C106	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C107	0160-3291	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-3291
A3C108	0160-0218	2		CAPACITOR-FXD 2400PF +-1% 300VDC MICA	28480	0160-0218
A3C109	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C110	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C111	0140-0235	1	1	CAPACITOR-FXD 2250PF +-1% 300VDC MICA	72136	DM20F2250RF0300WV1C
A3C112	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C113	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C114	0140-0228	2	1	CAPACITOR-FXD 360PF+-1% 300VDC MICA	08113	HP204751PF3C1
A3C115	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C116	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C117	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C118	0160-6405	1		CAPACITOR-FXD .01UF+-1% 100VDC MICA	08113	HP204751PF3C1
A3C119	0160-0576	5		CAPACITOR-FXD .1UF 020% 50VDC CER	28480	0160-0576
A3C120	0160-6405	1		CAPACITOR-FXD .01UF+-1% 100VDC MICA	08113	HP204751PF3C1
A3C121	0160-6320	9		CAPACITOR-FXD 1700PF+-1% 100VDC MICA	08113	HP204751PF3C1
A3C122	0160-6318	1		CAPACITOR-FXD .01UF+-1% 100VDC MICA	08113	HP204751PF2C1
A3C123	0160-3291	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-3291
13C124	0160-0218	2		CAPACITOR-FXD 2400PF +-1% 300VDC MICA	28480	0160-0218
A3C125	0160-6320	9		CAPACITOR-FXD 1700PH+-1% 100VDC MICA	08113	HP204751PF3C1
A3C127	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C131	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C132	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C133	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A3C137	0160-6230	9		CAPACITOR-FXD 1700PH+-1% 100VDC MICA	08113	HP204751PF3C1
A3C139	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C140	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C141	0160-6405	1		CAPACITOR-FXD .01UF+-1% 100VDC MICA	08113	HP204751PF3C1
A3C142	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C143	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C144	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C145	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C146	0160-6405	1		CAPACITOR-FXD .01UF+-1% 100VDC MICA	08113	HP204751PF3C1
A3C147	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C152	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C153	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C154	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3C155	0160-2215	3	1	CAPACITOR-FXD 750PF +-5% 300VDC MICA	28480	0160-2215
A3C156	0160-0939	4		CAPACITOR-FXD 430PF+-1% 300VDC	02367	CD15FC431J01
A3C157	0180-0197	8		CAPACITOR-FXD 2.2UF+-105 20VDC TA	56289	150D225X9020A2

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3C158	0180-0197	B		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	50289	150D225X9020A2
A3C159	0160-0576	5		CAPACITOR-FXD .1UF + 20% 50VDC CER	29480	0160-0576
A3C160				CAPACITOR, HAND SELECTED ONLY IF NEEDED		
A3C201	0160-0576	5		CAPACITOR-FXD .1UF + 20% 50VDC CER	29480	0160-0576
A3C202				CAPACITOR, HAND SELECTED ONLY IF NEEDED		
A3CR1	1901-1068	5	1	DIODE-SM SIG SHCOTTKY	29480	1901-1068
A3CR3	1901-0040	1	2	DIODE-SWITCHING 30B 50MA 2NS DO-35	29480	1901-0040
A3CR4	0811-3587	5	2	RESISTOR 0 OHM	03123	104
A3CR5	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	29480	1901-0040
A3CR6	1901-0376	6	2	DIODE-GEN PRP 35V 50MA DO-35	29480	1901-0376
A3CR7	1901-0376	6		DIODE GEN PRP 35V 50MA DO-35	29480	1901-0376
A3CR8	1901-0518	2	6	DIODE-SCHOTTKY	02062	5082-5509
A3CR9	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A3CR11	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A3CR12	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A3CR13	1901-0050	3	4	DIODE SWITCHING 80V 200MA 2NS DO-35	29480	1901-0050
A3CR14	1901-0050	3		DIODE SWITCHING 80V 200MA 2NS DO-35	29480	1901-0050
A3CR15	1901-0518	2		DIODE SCHOTTKY	02062	5082-5509
A3CR16	1901-0518	2		DIODE SCHOTTKY	02062	5082-5509
A3CR26	1901-0050	3		DIODE SWITCHING 80V 200MA 2NS DO-35	29480	1901-0050
A3CR27	1901-0050	3		DIODE SWITCHING 80V 200MA 2NS DO-35	29480	1901-0050
A3J1	1250-0257	1	1	CONNECTR-RF SMB M PC 50-OHM	29480	1250-0257
A3J4	1251-5063	9	1	CONNECTR 6-PIN M POST TYPE	29480	1251-5063
	1251-6947	0	34	CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	29480	1251-6947
A3JU1	1200-0473	B	B	SOCKET-IC 16-CONT DIP DIP-SLDR	29480	1200-0473
	1251-4398	1	2	SHUNT, 4-POSITION	29480	12251-4398
A3JU2	1200-0473	B		SOCKET-IC 16-CONT DIP DIP-SLDR	29480	1200-0473
A3JU3	1200-0473	B		SOCKET-IC 16-CONT DIP DIP-SLDR	29480	1200-0473
A3JU4	1200-0473	B		SOCKET-IC 16-CONT DIP DIP-SLDR	29480	1200-0473
A3JU5	1200-0473	B		SOCKET-IC 16-CONT DIP DIP-SLDR	29480	1200-0473
A3JU6	1258-0141	5	2	JUMPER-REMOVABLE FOR .025-IN-BSC-SZ-SQ	29480	1258-0141
A3JU7	1258-0141	5		JUMPER-REMOVABLE FOR .025-IN-BSC-SZ-SQ	29480	1258-0141
A3R1	0757-0442	9	8	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R2	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R3	0698-4465	B	1	RESISTOR 931 1% .125W F TC=0+-100	24546	C4-1/8-T0-931R-F
A3R4	0698-6393	5	1	RESISTOR 585 1% .125W F TC=0+-25	29480	0698-6393
A3R5	0757-0280	3	5	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A3R6	0757-0290	5	5	RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-6191-F
A3R7	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-6191-F
A3R8	0757-0290	9		RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-6191-F
A3R9	0698-0084	9	4	RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A3R10	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A3R11	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A3R12	0757-0453	2	1	RESISTOR 30.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3012-F
A3R15	1810-0281	9	2	NETWORK-RES 10-SIP100.0K OHM X 9	01121	210A104
A3R16	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	V4-1/8-T0-1002-F
A3R17	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	V4-1/8-T0-1002-F
A3R18	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R19	0698-3457	6	1	RESISTOR 316K 1% .125W F TC=0+-100	29480	0698-3457
A3R20	1810-0281	9		NETWORK-RES 10-SIP100.0K OHM 9	01121	210A104
A3R21	1810-0369	4	2	NETWORK-RES 6-SIP100.0K OHM X 5	11236	750-61-R100K
A3R22	0698-6360	6	2C	RESISTOR 10K .1% .125W F TC=0+-25	29480	0698-6360
A3R23	2100-3882	B	2	RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRN	29480	2100-3882
A3R26	0698-3152	B	1	RESISTOR 3.48K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3481-F
A3R27	0698-3153	9	1	RESISTOR 3.83K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3831-F
A3R28	0757-6360	6		RESISTOR 10K.1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R29	0698-6320	B	1	RESISTOR 5K.1% .125W F TC=0+-100	24546	C4-1/8-T0-5001-F
A3R30	0757-0416	7	2	RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-T0-511R-F
A3R32	0757-0416	7		RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-T0-511R-F
A3R33	2100-3883	9	4	RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	29480	2100-3883
A3R34	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R35	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A3R36	0698-4480	7	4	RESISTOR 15.8K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1582-F
A3R37	0698-4480	7		RESISTOR 15.8K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1582-F
A3R38	0757-0424	7	1	RESISTOR 1.1K 1% .125W F TC=0+-100	24546	C4-1/8-F0-1101-F
A3R39	0698-3150	6	3	RESISTOR 2.37K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2371-F
A3R40	0757-6360	6		RESISTOR 10K.1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3R42	0757-6360	6		RESISTOR 10K .1% .125W F TC=0+-100	24546	C4-1/8-F0-1002-F
A3R43	0757-0420	6	3	RESISTOR 750K 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A3R44	0698-4480	7		RESISTOR 15.8K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1582-F
A3R45	0698-4480	7		RESISTOR 15.8K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1582-F
A3R46	0698-3155	1	2	RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A3R47	0698-4475	0	1	RESISTOR 9.76K 1% .125W F TC=0+-100	03888	PMF55-1/8-T0-9761-F
A3R48	0698-7847	6	3	RESISTOR 1.111K 1% .125W F TC=0+-100	19701	MF4C1/8-T9-1111R-B
A3R49	0698-6360	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A3R50	0698-3409	2	1	RESISTOR 2.37K 1% .125W	24546	CA-1/8-T0-2371-F
A3R51	0698-0083	8		RESISTOR 1.96K 1% .125W	24546	CA-1/8-T0-1961-F
A3R52	0757-0864	9	2	RESISTOR 301K 1% .5W F TC=0+-100	28480	0757-0864
A3R53	0757-0864	9		RESISTOR 301K 1% .5W F TC=0+-100	28480	0757-0864
A3R54	0698-3453	2	1	RESISTOR 196K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1963-F
A3R55	0646-0757	0	4	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A3R56	0757-0438	3	1	RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A3R57	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A3R58	0757-0199	3	2	RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A3R60	0698-6369	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A3R62	0757-0317	6	2	RESISTOR 1.33K 1% .125W	24546	24546 CA-1/8-T0-131-F
A3R63	0757-0317	6		RESISTOR 1.33K 1% .125W	24546	24546 CA-1/8-T0-131-F
A3R64	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R65	2100-3882	8		RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRM	28480	2100-3882
A3R66	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R67	0698-3157	3	2	RESISTOR 10.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1062-F
A3R68	0757-0444	1	1	RESISTOR 12.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1212-F
A3R69	0757-0199	3		RESISTOR 21.5K .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A3R70	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A3R71	0698-3157	3		RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1962-F
A3R72	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A3R72A	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0=1001-F
A3R73	0698-3150	2		RESISTOR 2.37K 1% .125W	24546	CA-1/8-T0-2371-F
A3R74	0698-3150	2		RESISTOR 2.37K 1% .125W	24546	CA-1/8-T0-2371-F
A3R75	0757-0274	5	1	RESISTOR 1.21K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1211-F
A3R76	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A3R77	2100-3881	6	2	RESISTOR-TRMR 500 10% C TOP-ADJ 17-TRN	28480	2100-3881
A3R78	0757-0465	6	2	RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A3R79	0698-4530	8	1	RESISTOR 232K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2323-F
A3R80	0698-0595	9	1	RESISTOR 365K .1% .125W F TC=0+-25	28480	0698-0595
A3R81	0698-1078	5	1	RESISTOR 134K 1% .125W F TC=0+-100	28480	0698-1078
A3R82	0698-4516	0	1	RESISTOR 113K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1133-F
A3R83	0698-4158	6	2	RESISTOR 100K .1% .125W F TC=0+-50	28480	0698-4158
A3R84	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A3R85	0698-4158	6		RESISTOR 100K .1% .125W F TC=0+-50	28480	0698-4158
A3R86	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A3R87	0698-4490	9	2	RESISTOR 29.4K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2942-F
A3R88	0698-4490	9		RESISTOR 29.4K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2942-F
A3R89	0698-0566	4	4	RESISTOR 25.5K .1% .125W F TC=0+-25	28480	0698-0566
A3R90	0698-0566	4		RESISTOR 25.5K .1% .125W F TC=0+-25	28480	0698-0566
A3R91	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A3R92	0698-7847	6		RESISTOR 1.111K .1% .125W F TC=0+-25	19701	MF4C1/8-T9-1111R-B
A3R93	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A3R94	0698-8638	5	2	RESISTOR 3.16K .1% .125W F TC=0+-25	28480	0698-8638
A3R95	0698-6445	8	3	RESISTOR 6.838K .1% .125W F TC=0+-25	28480	0698-6445
A3R96	0698-0586	8	1	RESISTOR 186.365K .1% .125W F TC=0+-25	28480	0698-0586
A3R97	0698-0585	7	1	RESISTOR 240.730K .1% .125W F TC=0+-25	28480	0698-0585
A3R98	0698-6467	4	3	RESISTOR 16.9K 1% .125W F TC=0+-50	28480	0698-6467
A3R99	0698-0587	9	1	RESISTOR 12.910K .1% .125W F TC=0+-25	28480	0698-0587
A3R100	0698-0588	0	2	RESISTOR 18.171K .1% .125W F TC=0+-25	28480	0698-0588
A3R102	2100-3883	9		RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	28480	2100-3883
A3R103	0698-7413	2	2	RESISTOR 17.4K .25% .125W F TC=0+-100	19701	MF4C1/8-T0-1742-C
A3R104	0698-6423	2	2	RESISTOR 31.25K .1% .125W F TC=0+-25	28480	0698-6423
A3R105	0698-7413	2		RESISTOR 17.4 .25% .125W F TC=0+-100	19701	MF4C1/8-T0-1742-C
A3R106	0698-8858	1	3	RESISTOR 12.4K .1% .125W F TC=0+-25	28480	0698-8858
A3R107	0698-8858	1		RESISTOR 12.4K .1% .125W F TC=0+-25	28480	0698-8858
A3R108	0698-7929	5	2	RESISTOR 9.09K .1% .125W F TC=0+-50	19701	MF4C1/8-T2-9091-B
A3R109	0698-7929	5		RESISTOR 9.09K .1% .125W F TC=0+-50	19701	MF4C1/8-T2-9091-B
A3R110	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A3R111	0698-6467	4		RESISTOR 16.9K 1% .125W F TC=0+-50	28480	0698-6467
A3R112	0698-0566	4		RESISTOR 15.5K .1% .125W F TC=0+-25	28480	0698-0566
A3R113	0698-0566	4		RESISTOR 25.5K .1% .125W F TC=0+-25	28480	0698-0566

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3R114	0698-6445	8		RESISTOR 6.838K .1% .125W F TC=0+-25	28480	0698-6445
A3R115	0698-8638	5		RESISTOR 3.16K .1% .125W F TC=0+-25	28480	0698-8638
A3R116	0757-0289	2	1	RESISTOR 13.3K .1% .125W F TC=0+-100	19701	MF4C1/B-T0-1332-F3
A3R117	0699-0589	1	2	RESISTOR 34.334K .1% .125W F TC=0+-25	28480	0699-0589
A3R118	0699-0589	1		RESISTOR 34.334K .1% .125W F TC=0+-25	28480	0699-0589
A3R119	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A3R120	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A3R121	0699-0589	0		RESISTOR 18.171K .1% .125W F TC=0+-25	28480	0699-0589
A3R122	0698-8858	5	1	RESISTOR 12.4K .1% .125W F TC=0+-25	28480	0698-8858
A3R123	0699-0164	8	1	RESISTOR 738.5 1% .125W F TC=0+-25	24546	NESS
A3R124	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/B-T0-6191-F
A3R125	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/B-T0-6191-F
A3R126	0698-6423	2		RESISTOR 31.25K .1% .125W F TC+-2	28480	098-6423
A3R127	0698-6751	2	1	RESISTOR 44.2K .5% .125W F TC=0+- 50	24546	NC4-1/B-T2-4422-D
A3R128	0698-4537	5	1	RESISTOR 357K 1% .125W F TC=0+-100	28480	0698-4537
A3R129	0698-7585	9	1	RESISTOR 316.2 1% .125W F TC=0+-25	28480	0698-7585
A3R132	2100-3883	9		RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	28480	2100-3883
A3R134	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+25	28480	0698-6360
A3R135	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+25	28480	0698-6360
A3R136	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+25	28480	0698-6360
A3R137	0699-0590	4	2	RESISTOR 15.758K .1% .125W F TC=0+-25	28480	0699-0590
A3R138	0698-3456	5	1	RESISTOR 287K 1% .125W F TC=0+-100	24546	C4-1/B-T0-2873-F
A3R139	0699-0596	0	2	RESISTOR 4.12K .1% .125W F TC=0+-25	28480	0699-0596
A3R140	0699-0596	0		RESISTOR 4.12K .1% .125W F TC=0+-25	28480	0699-0596
A3R141	0699-0594	8	2	RESISTOR 2.21K .1% .125W F TC=0+-25	28480	0699-0596
A3R142	0699-0594	8		RESISTOR 2.21K .1% .125W F TC=0+-25	28480	0699-0594
A3R143	0698-8337	1	1	RESISTOR 10.7K .1% .125W F TC=0+-50	28480	0698-8337
A3R144	0698-8068	5	1	RESISTOR 4.99K .25% .125W F TC=0+-25	19701	MF4C1/B-T2-1072-B
A3R145	0699-0597	1	3	RESISTOR 2.26K .1% .125W F TC=0+-25	19701	MF4C1/B-T9-4991-C
A3R146	0698-6447	0	1	RESISTOR 683.8 .1% .125W F TC=0+-25	28480	0698-6447
A3R147	0698-6446	9	1	RESISTOR 2.162K 1% .125W F TC=0+-25	28480	0698-6446
A3R148	0699-0592	6	1	RESISTOR 7.741K .1% .125W F TC=0+-25	28480	0699-0592
A3R149	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A3R150	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A3R151	0699-0590	4		RESISTOR 15.758K .1% .125W F TC=0+-25	28480	0699-0590
A3R158	0699-0597	1		RESISTOR 2.26K .1% .125W F TC=0+-25	28480	0699-0597
A3R159	0699-0597	1		RESISTOR 2.26K .1% .125W F TC=0+-25	28480	0699-0597
A3R160	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A3R161	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A3R162	0698-8799	9	1	RESISTOR 21.5K .1% .125W F TC=0+-25	28480	0698-8799
A3R163	0699-0593	7	2	RESISTOR 13.665K .1% .125W F TC=0+-25	28480	0699-0593
A3R164	0699-0593	7	2	RESISTOR 13.665K .1% .125W F TC=0+-25	28480	0699-0593
A3R165	0699-0600	7	1	RESISTOR 108.502K .1% .125W F TC=0+-25	28480	0699-0600
A3R166	0699-0591	5	1	RESISTOR 140.158K .1% .125W F TC=0+-25	28480	0699-0591
A3R167	0757-0443	0	1	RESISTOR 11K 1% .125W F TC=0+-100	24546	C4-1/B-T0-1102-F
A3R178	0698-7847	6		RESISTOR 1.111K .1% .125W F TC=0+-25	19701	MF4C1/B-T9-1111R-B
A3R179	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A3R180	2100-3883	9		RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	28480	2100-3883
A3R181	0757-0290	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/B-T0-1001-F
A3R182	0757-0421	4	1	RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/B-T0-825R-F
A3R183	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/B-T0-1001-F
A3R184	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/B-T0-1003-F
A3R185	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/B-T0-101-F
A3R187	0698-6467	4		RESISTOR 16.9K 1% .125W F TC=0+-50	28480	0698-6467
A3R201	0757-0458	7	2	RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/B-T0-5112-F
A3R202	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/B-T0-101-F
A3R203	0757-0458	7		RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/B-T0-5112-F
A3R204	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/B-T0-101-F
A3R205	0698-4002	1	1	RESISTOR 5K .1% .125W F TC=0+-100	24546	C4-1/B-T0-5001-F
A3R206	1810-0369	4		NETWORK-RES 6-SIP OHM X5	11236	750-61-R100K
A3R207	0698-6445	8		RESISTOR 6.838K .1% .125W F TC=0+-25	28480	0698-6445
A3R208	0811-3587	5		WIRE 1/2 INL RESISTOR 0 OHMS	03123	104
A3T1	9100-3489	3	1	TRANSFORMER - INPUT	28480	9100-3489
A3TP2	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP3	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP4	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP5	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP6	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP7	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP9	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947

See introduction to this section for ordering information

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3TP10	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP11	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP12	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP13	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP14	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP15	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP21	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP22	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP23	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP24	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3TP25	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A3U1	1826-0712	4	4	IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P	27014	LF353N
A3U2	1826-0138	8	4	IC COMPARATOR GP QUAD 14-DIP-P PKG	01295	LM339N
A3U3	1826-0624	7	1	IC CONV V/FREQ 14-DIP-P PKG	8E175	VFC32KP
A3U4	1826-1071	0	2	IC OP AMP	28480	1826-1071
A3U5	1826-0742	0	1	IC PRECISION 10V REFERENCE, AD581J	28480	1826-0742
A3U6	1826-0639	4	1	IC CONV 8-B-D/A 160DIP-P PKG	24355	AD7524JN
A3U7	1820-1956	8	4	IC LCH CMOS COM CLOCK QUAD	0192B	CD4042BE
A3U8	1820-1956	8		IC LCH CMOS COM CLOCK QUAD	0192B	CD4042BE
A3U11	1820-1956	8		IC LCH CMOS COM CLOCK QUAD	0192B	CD4042BE
A3U12	1820-2326	3	1	IC XLTR CMOS TIL-TO-MOS HEX	04713	MC14504BCP
A3U13	1820-1315	3	1	IC MULTIPLXR 8-CHAN-ANLG 16-DIP-P PKG	0192B	CD4051RE
A3U14	1826-1544	8	4	IC OP AMP GP 8-DIP-P PKG	27014	MC34081P
A3U15	1826-0667	4	5	IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P-KG	27014	LF351N
A3U16	1826-0712	8		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P	27014	LF353N
A3U17	1820-1956	9		IC LCH CMOS COM CLOCK QUAD	0192B	CD4042BE
A3U20	1826-1071	0		IC OP AMP	28480	1826-1071
A3U21	1826-0735	1	8	IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A3U22	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A3U23	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A3U24	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A3U25	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A3U26	1826-0208	3		IC OP AMP GP 8-DIP-P PKG	27014	LM310N
A3U27	1826-0740	8	3	IC SWITCH ANLG DUAL 16-DIP-C PKG	32293	IH504CDE
A3U28	1826-0208	3		IC OP AMP GP 8-DIP-P PKG	27014	LM310N
A3U29	1826-1544	8		IC OP AMP GP 8-DIP-P PKG	27014	MC34081P
A3U30	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A3U31	1826-0665	6	2	IC OP AMP LOW-BIAS-H-IMP QUAD 14-DIP	27014	LF347BN
A3U32	1826-0712	4		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP	27014	LM310N
A3U33	1826-0208	3		IC OP AMP GP 8-DIP-P PKG	27014	LF353N
A3U34	1826-0740	8		IC SWITCH ANLG DUAL 16-DIP-C PKG	32293	IH5043CDE
A3U35	1826-0740	8		IC SWITCH ANLG DUAL 16-DIP-C PKG	32293	IH5043CDE
A3U36	1826-0665	6		IC OP AMP LOW-BIAS-H-IMP QUAD 14-DIP-P	27014	LF347BN
A3U37	1820-1725	9	2	IC MULTIPLXR ANLG 16-DIP-P PKG	17856	DG508CJ
A3U38	1820-1735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A3U39	1820-1726	9		IC MULTIPLXR ANLG 16-DIP-P PKG	17856	DG508CJ
A3U40	1826-0753	3	2	IC OP AMP LOW-BIAS, HIGH IMPED	02037	SC77968L1
A3U42	1826-0736	2	1	IC OP AMP WB 8-DIP-P PKG	34371	HA3-2827-5
A3U43	1826-0667	8		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P PKG	27014	LF351N
A3U44	1826-0667	8		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P PKG	27014	LF351N
A3U45	1826-0667	8		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P PKG	27014	LF351N
A3U46	1826-0712	4		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP P	27014	LF353N
A3U47	1826-1422	5	1	IC OP AMP WB QUAD 14-DIP-P PKG	02037	MC34084P
A3U48	1826-1544	8		IC OP AMP GP 8-DIP-P-PKG	27014	MC34081P
A3U50	1826-0740	8		IC SWITCH ANLG DUAL 16-DIP-C PKG	32293	IH5043CDE
A3U51	1826-0753	8		IC OP AMP LOW-BIAS-H-IMP D	27014	SC77968L1
A3U52	1826-1544	8		IC OP AMP GP 8-DIP PKG	27014	MC34081P
A3U55	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A3U56	1826-0667	8		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P PKG	27014	LF351N
A3UX7	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
A3UX9	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
A3UX17	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
				A3 MISCELLANEOUS PARTS		
	2260-0002	6	2	NUT-HEX-DBL-CHAM 4-40-THD .062-IN-THK	00000	ORDER BY DESCRIPTION
	2260-0009	8	2	NUT-HEX-W/LKWR 4 40-THD .094 IN-THK	00000	ORDER BY DESCRIPTION
	8150-0456	7	1	WIRE 24AWG W 300B PVC 7X32 80C	28480	8150-0456
	0380-1157	6	2	SNAP IN SPACER	00509	TCBS-4N

See introduction to this section for ordering information

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A4	04935-60303			TRANSMITTER BOARD (STD UNIT ONLY)	28480	04935-60303
A4C1	0160-3963	0	3	CAPACITOR-FXD 15UF +5% 50VDC MET-POLY	28480	0160-3963
A4C2	0160-3963	0		CAPACITOR-FXD 15UF +5% 50VDC MET-POLY	28480	0160-3963
A4C3	0160-3963	0		CAPACITOR-FXD 15UF +5% 50VDC MET-POLY	28480	0160-3963
A4C4	0160-0576	5	39	CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C5	0180-3045	1	2	CAPACITOR-FXD 2200UF +50-10% 25VDC AL	28480	0180-3045
A4C6	0180-2945	8	2	CAPACITOR-FXD 100UF+50-10% 35VDC AL	28480	0180-2945
A4C7	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C8	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C9	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C10	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C11	0180-3045	1		CAPACITOR-FXD 2200UF +50-10% 25VDC AL	28480	0180-3045
A4C12	0180-2945	8		CAPACITOR-FXD 100UF+50-10% 35VDC AL	28480	0180-2945
A4C13	0160-3456	9	2	CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A4C14	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C15	0180-3044	0	1	CAPACITOR-FXD 3300UF+50-10% 16VDC AL	28480	0180-3044
A4C16	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A4C17	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A4C20	0160-3456	9		CAPACITOR-FXD 1000UF +-10UF 1KVDC CER	28480	0160-3456
A4C21	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C22	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A4C23	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C24	0160-2257	3	1	CAPACITOR-FXD 10PF +5% 50VDC CER	28480	0160-2257
A4C26	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C28	0160-0576	5		CAPACITOR-FXD .1UF +-0% 50VDC CER	28480	0160-0576
A4C29	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C30	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C31	0180-3050	8	1	CAPACITOR-FXD 330UF +50-10% 16VDC AL	28480	0180-3050
A4C32	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C33	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C34	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C35	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C36	0180-0058	0	1	CAPACITOR-FXD 50UF+75-10% 25VDC AL	56289	30D506G025CC2
A4C37	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C38	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C39	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C40	0160-3094	2	1	CAPACITOR-FXD 1UF +-10% 25VDC CER	28480	0160-3094
A4C41	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C42	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C43	0160-3291	7	2	CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-3291
A4C44	0160-3291	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-3291
A4C45	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C46	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C47	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C48	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C49	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C50	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C51	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C52	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C53	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C54	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C5F	0160-0127	2	2	CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A4C56	0180-3124	7	1	CAPACITOR-75 300 N.P.	28480	0180-3124
A4C62	0180-0197	8	2	CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A4C63	0180-0197	8		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A4C64	0160-0576	5		CAPACITOR-FXD .1UF 020% 50VDC CER	28480	0160-0576
A4C65	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C67	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C68	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C69	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A4C70	0160-0127	2		CAPACITOR-FXD 1UF +20% 25VDC CER	28480	0160-0127
A4C71	0180-0374	3	1	CAPACITOR-FXD 10UF+-10% 20VDC TA	56289	150D106X9020B2
A3C72	0180-1746	5	1	CAPACITOR-FXD .15UF+-10VDC TAR	56289	150D156X9020B2-DYS
A4C73	0160-4833	5	1	CAPACITOR-FXD .022UF +20% 100VDC CER	28480	0160-4833
A4C74	0160-4835	7	1	CAPACITOR-FXD .1UF +-10% 50VDC CER	28480	0160-4835
A4C75	1080-0291	3	1	CAPACITOR-FXD 1UF +-10% 35VDC CER	28480	0180-0291
A4CP1	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A4CR1	1902-0041	4	1	DIODE-ZNR 5.11V 5% DO-35 PD=4W	28480	1902-0041
A4CR4	1901-0033	2	7	DIODE-GEN PRP 180V 200MA DO-7	28480	1902-0033
A4CR5	1901-0731	7	9	DIODE-PWR RECT 400V 1A	28480	1901-0731
A4CR7	1902-1399	6	3	DIODE-ZNR 18.0V 2% PD=4W	02037	INS248
A4CR9	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A4CR10	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A4CR11	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A4CR12	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A4CR13	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A4CR14	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A4CR15	1902-1399	7		DIODE-ZNR 18.0V 2% PD=4W	02037	INS248
A4CR16	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A4CR17	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A4CR18	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A4CR19	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A4CR20	1901 0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A4CR23	1902-1399	7		DIODE-ZNR 18.0V 2% PD=4W	02037	INS248
A4CR24	1884-0250	7	1	THYRISTOR-TRIAC T0-220AB	0192B	T2500B
A4CR25	1902-0052	7	1	DIODE-ZNR 6.81V 2% PD=4W	02037	SZ 30016-1135
A4CR26	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A4CR27	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A4CR28	1901-0033	2		DIODE-GEN PRP 180V 200MA DO-7	28480	1901-0033
A4CR29	1901-0202	9	2	DIODE-ZNR 15V 5% DO-15 PD=1W TC=+.057%	28480	1901-0202
A4CR30	1902-0202	9		DIODE-ZNR 15V 5% DO-15 PD=1W TC=+.57%	28480	1902-0202
A4CSA1	1251-6947	0	30	CONNECTOR-SGL CONT PIN 025IN-BSC-SZSQ	28480	1251-6947
A4CSA2	1251-6947	0		CONNECTOR-SGL CONT PIN 025IN-BSC-SZSQ	28480	1251-6947
A4J2	1251-6856	0	1	CONNECTOR 18-PIN M POST TYUPE	28480	1251-6856
A4J3	1251-4573	4	1	CONNECTOR-PC EDIGE 25-CONT /ROW 2-ROWS	28480	1251-4573
A4JU1	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN BSC-SZSQ	28480	1251-6947
A4JU2	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN BSC-SZSQ	28480	1251-6947
A4JU5	1251-6947	0	5	JUMPER-REMOVABLE FOR .025IN SQ PINS	28480	1258-0141
A4JU6	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN BSC-SZSQ	28480	1251-6947
	1258-0141	5		JUMPER-REMOVABLE FOR .025IN SQ PINS	28480	1258-0141
A4JU14	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN BSC-SZSQ	28480	1251-6947
A4JU-14	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN BSC-SZSQ	28480	1251-6947
	1258-0141	5		JUMPER-REMOVABLE FOR .025IN SQ PINS	28480	1258-0141
A4JW1	0811-3587	5	3	RESISTOR 0 OHMS	03123	104
A4JW2	0811-3587	5		RESISTOR 0 OHMS	03123	104
A4JW3	0811-3587	5		RESISTOR 0 OHMS	03123	104
A4JW4	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN BSC-SZSQ	28480	1251-6947
A4Q1	1853-0512	9	3	TRANSISTOR PNP PD-50W FT=20MHZ	28480	1853-0512
A4Q2	1854-0575	6	1	TRANSISTOR NPN SI PD=625MW FT=50MHZ	04713	MPS-A42
A4Q3	1853-0512	9		TRANSISTOR PNP PD=50W FT=20MHZ	28480	1853-0512
A4Q4	1853-0512	9		TRANSISTOR PNP PD=50W FT=20MHZ	28480	1853-0512
A4Q5	1853-0012	4	1	TRANSISTOR PNP SI TO-.39 PD=600MW	01295	2N2904A
A4Q6	1854-0053	5	1	TRANSISTOR NPN 2N2218 SI TO-5 PD=800MW	04713	2N2218
A4Q7	1853-0036	2	1	TRANSISTOR PNP SI PD-310MW FT-250MHZ	28480	1853-0036
A4R1	0757-0465	6	6	RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A4R2	0698-6360	6	2	RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A4R3	0757-0819	4	1	RESISTOR 909 1% .5W F TC=0+-100	28480	0757-0819
A4R4	0757-0442	9	19	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R5	0698-8827	4	4	RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A4R6	0698-8826	3	3	RESISTOR 825K 1% .125W F TC=0+-100	28480	0698-8826
A4R7	0698-8826	3		RESISTOR 825K 1% .125W F TC=0+-100	28480	0698-8826
A4R8	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A4R9	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A4R10	0698-8826	3		RESISTOR 825K 1% .125W F TC=0+-100	28480	0698-8826
A4R11	0698-8824	1	1	RESISTOR 562K 1% .125W F TC=0+-100	28480	0698-8824
A4R12	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R13	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A4R14	0698-6360	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A4R15	0698-3440	7	1	RESISTOR 196 1% .125W F TC=0+-100	24546	C4-1/8-T0-196R-F
A4R17	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A4R19	0757-0280	3	3	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8 T0 10G1-F
A4R20	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R21	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R22	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A4R23	0757-0288	1	1	RESISTOR 9.09K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-9091-F
A4R24	0757-0420	3	4	RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A4R25	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A4H27	0698-0083	8	2	RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1961-F
A4R28	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8T0-1003-F
A4R29	1810-0207	9	1	NETWORK-RES 8-SIP 22.0K OHM X 7	01121	208A223
A4R30	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A4R31	2100-3882	8	2	RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRN	28480	2100-3882
A4R33	0757-0416	7	1	RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-T0-511R-F
A4R34	0698-0083	8		RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1961-F
A4R35	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R36	0757-0394	0	2	RESISTORS 51.5 1% .125W F TC=0+-100	02995	5033R
A4R37	0757-0317	7	1	RESISTOR 1.33K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1331-F
A4R38	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A4R39	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A4R40	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A4R41	0757-0280	3	3	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A4R42	2100-3881	7	2	RESISTOR-TRMR 500 10% C TOP-ADJ 17-TRN	28480	2100-3881
A4R43	0757-0438	3	2	RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A4R44	0757-0438	3		RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A4R45	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R46	0757-0458	7	3	RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5112-F
A4R47	0698-3156	2	1	RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F
A4R48	0698-3152	8	1	RESISTOR 3.48K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3481-F
A4R49	0757-0458	7		RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5112-F
A4R52	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R53	0698-3160	8	5	RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A4R54	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R55	0698-3160	8		RESISTOR 31.6K 1% .125W TC=0+-100	24546	C4-1/8-T0-3162-F
A4R56	0757-0280	3		RESISTOR 1K 1% .125W TC=0+-100	24546	C4-1/8-T0-1001-F
A4R57	0757-0458	7		RESISTOR 51.1K 1% .125W TC=0+-100	24546	C4-1/8-T0-5112-F
A4R58	0698-3451	0	1	RESISTOR 133K 1% .125W TC=0+-100	24546	C4-1/8-T0-1333-F
A4R59	0757-0442	9		RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R60	0757-0442	9		RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R61	0698-3160	8		RESISTOR 31.6K 1% .125W TC=0+-100	24546	C4-1/8-T0-3162-F
A4R62	0698-3160	8		RESISTOR 31.6K 1% .125W TC=0+-100	24546	C4-1/8-T0-3162-F
A4R63	0757-0442	9		RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R64	0698-3160	8		RESISTOR 31.6K 1% .125W TC=0+-100	24546	C4-1/8-T0-3162-F
A4R65	0757-0421	4	1	RESISTOR 825 1% .125W TC=0+-100	24546	C4-1/8-T0-825R-F
A4R66	0757-0442	9		RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R67	0757-0443	0	1	RESISTOR 11K 1% .125W TC=0+-100	24546	C4-1/8-T0-1102-F
A4R68	0757-0441	8	1	RESISTOR 8.25K 1% .125W TC=0+-100	24546	C4-1/8-T0-8251-F
A4R69	0757-0419	0	1	RESISTOR 881 1% .125W TC=0+-100	03293	C4-1/8-T0-881R-F
A4R70	0757-0422	5	1	RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R71	0757-0442	9		RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R72	2100-3881	7		RESISTOR-TRMR 500 10% C TOP-ADJ 17-TRN	28480	2100-3881
A4R73	0757-0279	0	2	RESISTOR 3.16K 1% .125W TC=0+-100	24546	C4-1/8-T0-3161-F
A4R74	2100-3882	7		RESISTOR TRMR 2K 10% C TOP-ADJ 17-TRN	28480	2100-3882
A4R75	0757-0422	9		RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R76	0757-0442	9		RESISTOR 10K 1% .125W TC=0+-100	24546	C4-1/8-T0-1002-F
A4R77	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R78	0757-0180	2	2	RESISTOR 31.6K 1% .125W TC=0+-100	28480	0757-0180
A4R79	0757-0180	2		RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180
A4R80	0757-0428	1	2	RESISTOR 1.62K 1% .125W	02995	MF4C-1
A4R81	0757-0431	6	1	RESISTOR 2.43K 1% .125W	02995	MF4C-1
A4R82	0698-0084	9	1	RESISTOR 2.5k 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A4R83	0698-6393	1	1	RESISTOR 585 1% .125W F TC=0+-100	02995	5033R
A4R92	0757-0279	0		RESISTOR 31.6 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A4R93	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A4R94	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-t0-1002-F
A4R95	0757-0394	0	1	RESISTOR 51.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-51R1-F
A4R96	0757-0442	9		RESISTOR 10K 1% .125W TC=0+-25	24546	C4-1/8-T0-1002-F
A4R97	0698-3150	0	1	RESISTOR 2.37K 1% .125W	02995	MF4C-1
A4R98	0757-0280	3		RESISTOR 1K 1% .125W	02273	CEA-9937
A4R99	0698-3157	0	1	RESISTOR 19.6K 1% .125W	02273	CEA-993
A4R100	0757-0428	1		RESISTOR 1.62K 1% .125W	02995	MF4C-1

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A4S/S A4T1	1251-6947 9100-2647	0 8	1	CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ TRANSFORMER, AUDIO	28480 28480	1251-6947 9100-2647
A4TP1 A4TP2 A4TP3 A4TP4 A4TP5	1251-6947 1251-6947 1251-6947 1251-6947 1251-6947	0 0 0 0 0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480 28480 28480 28480 28480	1251-6947 1251-6947 1251-6947 1251-6947 1251-6947
A4TP6 A4TP7 A4TP8 A4TP9 A4TP10 A4TP11	1251-6947 1251-6947 1251-6947 1251-6947 1251-6947 1251-6947	0 0 0 0 0 0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480 28480 28480 28480 28480 28480	1251-6947 1251-6947 1251-6947 1251-6947 1251-6947 1251-6947
A4U1 A4U2 A4U3 A4U4 A4U5	1826-0679 1820-1932 1820-1932 1820-0939 1820-0939	2 0 0 5 5	1 2 3	IC OP AMP LOW-BIAS-H-IMPD TO-99 PKG IC MV CMOS MONOSTBL RETRIG/RESET DUAL IC MV CMOS MONOSTBL RETRIG/RESET DUAL IC FF CMOS D-TYPE POS-EDGE-TRIG DUAL IC FF CMOS D-TYPE POS-EDGE-TRIG DUAL	0192B 04713 04713 0192B 0192B	CA3140AT MC14538BCP MC14538BCP CD4013AF CD4013AF
A4U6 A4U7 A4U8 A4U9 A4U10	1820-2472 1820-1827 1826-0728 1826-0411 1826-0411	5 2 2 0 0	1 1 2 2	MICROPROCESSOR MK3872 IC DDDR CMOS 4-T0-16-LINE IC PRECISION GEN. PURPOSE VOLT REG. IC TIMER CMOS IC TIMER CMOS	28480 27014 28480 04713 04713	1820-2472 MM74C154N 1826-0728 MC4536BCP MC14538BCP
A4U11 A4U12 A4U13 A4U14 A4U15	1820-1956 1820-1956 1820-2566 1826-0728 1820-1745	8 8 8 2 3	7 1 1 1	IC LCH CMOS COM CLOCK QUAD IC LCH CMOS COM CLOCK QUAD IC BFR CMOS LINE DRVR QUAD IC PRECISION GEN. PURPOSE VOLT. REG. IC GATE CMOS NOR QUAD 2-INP	0192B 0192B 27014 28480 04713	CD4042BE CD4042BE MM74C240N 1826-0728 MC14001BCP
A4U16 A4U17 A4U18 A4U19 A4U20	1820-2576 1820-2576 1820-0939 1820-2576 1820-1960	0 0 5 0 4	3 1 1 1	IC GATE CMOS NAND QUAD 2-INP IC GATE CMOS NAND QUAD 2-INP IC FF CMOS D-TYPE POS-EDGE-TRIG DUAL IC GATE CMOS NAND QUAD 2-INP IC GATE CMOS NAND DUAL 4-INP	04713 04713 0192B 04713 04713	MC14011BCL MC14011BCL CD4013AF MC14011BCL MC14012BCP
A4U21 A4U23 A4U24 A4U25 A4U26	1826-0667 1820-1977 1826-0712 1826-0138 1820-1956	8 3 4 8 8	1 1 1 1	IC OP AMP LOW-BIAS-H-IMPD 8-DIP-P PKG IC OSC ECL IC OP AMP LOW-BIAS-H-IMPD DUAL 8-DIP-P IC COMPARATOR GP QUAD 14-DIP-P PKG IC LCH CMOS COM CLOCK QUAD	27014 04713 27014 01295 0192B	LF351N MC12061P MC353N LM339N CD4042BE
A4U27 A4U28 A4U29 A4U30 A4U32	1820-1956 1820-1956 1820-1956 1820-1956 1820-1478	8 8 8 8 0	1 1 1 1	IC LCH CMOS COM CLOCK QUAD IC LCH CMOS COM CLOCK QUAD IC LCH CMOS COM CLOCK QUAD IC LCH CMOS COM CLOCK QUAD IC CNTR ASYNCHRO	0192B 0192B 0192B 0192B 01698	CD4042BE CD4042BE CD4042BE CD4042BE SN57246N
A4U33 A4U34 A4U35 A4U36 A4U37	1826-0508 1820-1441 1820-1441 1820-1441 1820-1441	6 6 6 6 6	1 5	IC CONV 10-B-D/A 16-DIP-C PKG IC ADDR TTL LS BIN FULL ADDR 4-BIT IC ADDR TTL LS BIN FULL ADDR 4-BIT IC ADDR TTL LS BIN FULL ADDR 4-BIT IC ADDR TTL LS BIN FULL ADDR 4-BIT	24355 01295 01295 01295 01295	AD561JD SN74LS283N SN74LS283N SN74LS283N SN74LS283N
A4U38 A4U40 A4U41 A4U42 A4U43	1820-1441 1826-0779 1826-0735 1826-1071 1818-1574	6 3 1 0 1	1 3 1 1	IC ADDR TTL LS BIN FULL ADDR 4-BIT IC MULTPLXR 4-CHAN-ANGL DUAL 16-DIP-P IC OP AMP H-SLEW-RATE 8-DIP-P PKG IC OP AMP IC NMOS 32768 (32K) ROM 450-NS 3-S	01295 24355 34371 28480 55576	SN74LS283N AD7502JN HA3-2507-5 1826-1071 SYP2332 MASKED
A4U44 A4U45 A4U46 A4U47 A4U48	1820-1730 1820-1195 1820-1730 1820-1730 1820-1112	6 7 6 6 8	3 1	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM IC FF TTL LS D-TYPE POS-EDGE-TRIG COM IC FF TTL LS D-TYPE POS-EDGE-TRIG COM IC FF TTL LS D-TYPE POS-EDGE-TRIG COM IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295 01295 01295 01295 01295	SN74LS273N SN74SL175N SN74LS273N SN74LS273N SN74LS174AN
A4U49 A4U50 A4U52 A4U53	1820-1199 1820-1112 1826-0735 1826-0735	1 8 1 1	1 1 1	IC INV TTL LS HEX 1-INP IC FF TTL LS D-TYPE POS-EDGE-TRIG IC OP AMP H-SLEW-RATE 8-DIP-P PKG IC OP AMP H-SLEW-RATE 8-DIP-P PKG	01295 01295 34371 34371	SN74LS04N SN74LS174AN HA3-2507-5 HA3-2507-5
A4XU6 A4XU32	1200-0654 1200-0638	4 1	1 1	SOCKET-IC 40-CONT DIP-SLDR SOCKET-IC 14 PIN	28480 28480	1200-0654 1200-0638
A4Y1 A4Y2	0410-1180 0410-1220	0 9	1 1	CRYSTAL .4.000MHZ CRYSTAL-4.1984304MHZ	28480 28480	0410-1180 0410-1220
				A4 MISCELLANEOUS PARTS		
	0360-0124 1200-0666 1251-4259 1251-5063	3 1 3 9	13 3 5 1	CONNECTOR-SGL CONT PIN .04IN-RSCSZ RND SOCKET-XSTR 3-CONT POWER DIP-SLDR CONNECTOR-SGL CONT PIN .031-IN-BSC-SZ CONNECTOR 6-PIN M POST TYPE	28480 28480 28480 28480	0360-0124 1200-0666 1251-4259 1251-5063

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A5	04935-60005	5	1	BATTERY CHARGER BOARD (OPTS 001 & 003)	28480	04935-60005
A5C1	0180-0291	3	1	CAPACITOR-FXD 1UF+-10% 35VDC TA	56289	150D105X9035A2
A5C2	0180-1746	5	1	CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	150D156X9020B2
A5C3	0180-0097	7	1	CAPACITOR-FXD 47UF+-10% 35VDC TA	56289	150D476X9035S2
A5C4	0160-0576	5	5	CAPACITOR-FXD .1UF+-20% 50VDC CER	28480	0160-0576
A5C5	0160-0576	5		CAPACITOR-FXD .1UF+-20% 50VDC CER	28480	0160-0576
A5C6	0160-0576	5		CAPACITOR-FXD .1UF+-20% 50VDC CER	28480	0160-0576
A5C7	0160-0576	5		CAPACITOR-FXD .1UF+-20% 50VDC CER	28480	0160-0576
A5C8	0160-0576	5		CAPACITOR-FXD .1UF+-20% 50VDC CER	28480	0160-0576
A5CR1	1901-0050	3	19	DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR2	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR3	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR4	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR5	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR6	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR10	1901-1091	4	3	DIODE-PWR RECT 50V 5A 200NS	03508	A115F
A5CR12	1902-0041	4	1	DIODE-ZNR 5.11V 5% D0-35 PD=.4W	28480	1902-0041
A5CR14	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR15	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR16	1902-0554	4	1	DIODE-ZNR 10V 5% D0-15 PD=1W TC=+.06%	28480	1902-0554
A5CR17	1902-0184	6	2	DIODE-ZNR 16.2V 5% D0-35 PD=.4W	28480	1902-0184
A5CR18	1902-0184	6		DIODE-ZNR 16.2V 5% D0-35 PD=.4W	28480	1902-0184
A5CR19	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR20	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR21	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR22	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR23	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR24	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR25	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR26	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR27	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR28	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR29	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS D0-35	28480	1901-0050
A5CR30	1901-1091	4		DIODE-PWR RECT 50V 5A 200NS	03508	A115F
A5CR31	1901-1091	4		DIODE-PWR RECT 50V 5A 200NS	03508	A115F
A5F1	2110-0568	2	3	FUSE 4A 125V .281X.093	75915	276004
A5F2	2110-0568	2		FUSE 4A 125V .281X.093	75915	276004
A5F3	2110-0568	2		FUSE 4A 125V .281X.093	75915	276004
A5J2	1251-4245	7	2	CONNECTOR 2-PIN M POST TYPE	28480	1251-4245
A5J3	1251-4245	7		CONNECTOR 2-PIN M POST TYPE	28480	1251-4245
A5J4	1251-4246	8	1	CONNECTOR 3-PIN M POST TYPE	28480	1251-4246
A5K1	0490-1570	0	1	RELAY 4C 24VDC-COIL 2A 115VAC	28480	0490-0389
A5Q1	1853-0406	0	2	TRANSISTOR PNP 2N6476 SI TO-220AB	0192B	2N6476
A5Q2	1854-0575	6	1	TRANSISTOR NPN SI PD=625MW FT=50MHZ	04713	MPS-A42
A5Q3	1853-0036	2	5	TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A5Q4	1854-0215	1	4	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A4Q5	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A5Q8	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A5Q9	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A5Q10	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A5Q11	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A5Q12	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A5Q13	1854-0727	0	1	TRANSISTOR NPN 2N647 SI TO-220AB	0192B	2N6474
A5Q14	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A5Q15	1853-0406	0		TRANSISTOR PNP 2N6476 SI TO-220AB	0192B	2N6476
A5R1	0757-0418	9	2	RESISTOR 619 1% .125W F TC=0+-100	24546	C4-1/B-TO-619R-F
A5R2	0757-0465	6	3	RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/B-TO-1003-F
A5R3	0757-0458	7	1	RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/B-TO-5112-F
A5R4	0757-0442	9	5	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/B-TO-1002-F
A5R5	0757-0280	3	4	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/B-TO-1001-F
A5R7	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/B-TO-1002-F
A5R8	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/B-TO-1003-F
A5R9	0699-0653	0	3	RESISTOR 121.78K .1% .125W F TC=0+-25	28480	0699-0653
A5R10	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/B-TO-1002-F
A5R11	0699-0591	5	2	RESISTOR 140.158K .1% .125W F TC=0+-25	28480	0699-0591
A5R13	0699-6358	2	1	RESISTOR 100K .1% .125W F TC=0+-25	28480	0699-6358
A5R14	0699-0653	0		RESISTOR 121.78K .1% .125W F TC=0+-25	28480	0699-0653
A5R16	0699-0653	0		RESISTOR 121.78K .1% .125W F TC=0+-25	28480	0699-0653
A5R17	0699-0591	5		RESISTOR 140.158K .1% .125W F TC=0+-25	28480	0699-0591
A5R19	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/B-TO-1002-F

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A5R20	0757-0984	4	2	RESISTOR 10 1% .5W F TC=+-100	28480	0757-0984
A5R21	0698-3409	8	4	RESISTOR 2.37K 1% .5W F TC=0+-100	28480	0698-3409
A5R22	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A5R23	0698-3409	8		RESISTOR 2.37K 1% .5W F TC=0+-100	28480	0698-3409
A5R24	0698-3409	8		RESISTOR 2.37K 1% .5W F TC=0+-100	28480	0698-3409
A5R25	0698-3150	6	1	RESISTOR 2.37K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2371-F
A5R27	0698-6360	6	4	RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A5R28	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A5R29	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A5R30	0698-0083	8	1	RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1981-F
A5R31	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A5R32	0757-0418	9		RESISTOR 619 1% .125W F TC=0+-100	24546	C4-1/8-T0-619R-F
A5R33	0757-0984	4		RESISTOR 10 1% .5W F TC=+-100	28480	0757-0984
A5R34	0811-1673	6	1	RESISTOR 3.9 5% 2W PW TC=0+-400	75042	BWH2-3R9-J
A5R35	0698-3409	8		RESISTOR 2.37K 1% .5W F TC=0+-100	28480	0698-3409
A5R36	0698-3404	3	1	RESISTOR 383 1% .5W F TC=0+-100	28480	0698-3404
A5R37	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A5R38	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A5R39	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A5R40	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001F
A5TP1	0360-0124	3	2	CONNECTOR-SGL CONT P.04-IN-BSC-SZ RND	28480	0360-0124
A5TP2	0360-0124	3		CONNECTOR-SGL CONT P.04-IN-BSC-SZ RND	28480	0360-0124
A5U1	1826-0138	8	1	IC COMPARATOR GP QUAD 14-DIP-P PKG	01295	LM339N
A5U2	1826-0712	4	1	IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P	27014	LF353N
	0490-0570	8	1	SOCKET-RLY 6-CONT CRADLE PC	28480	0490-0570
	1205-0309	7	1	STRAP-RELAY HOLD DOWN FOR PC SOCKETS	28480	1205-0309
	1205-0512	9	1	HEAT SINK SGL TO-220 CS	28480	1205-0512
	1251-6859	3	1	CONNECTOR 18-PIN F POST TYPE	28480	1251-6859
	8120-3181	8	2	CABLE ASSY-FLEX COND	28480	8120-3181

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A6	04935-60108	B	1	REAR PANEL ASSEMBLY	28480	04935-60108
A6LF	9135-0284	1	1	LINE MODULE-FILTER	28480	0960-0443
A6T1	9100-4205	B	1	TRANSFORMER-AC POWER	28480	9100-4205
	0360-1251	9	1	TERMINAL-SLDR LUG FOR # 12 SCR	28480	0360-1251
	0890-0311	4	1	TUBING-HS .187-D/.093-RCVD	00000	ORDER BY DESCRIPTION
	0890-0100	9	1	TUBING-HS .093-D/.046-RCVD	00000	ORDER BY DESCRIPTION
	1400-0249	0	6	CABLE TIE .062-.625 DIA NYL	06383	PL1M-8
	1510-0038	B	1	BINDING POST ASSY SGL THD-STUD	28480	1510-0038
	2190-0027	2	1	WASHER-LK HLCL 1/4 IN .255-IN-ID	28480	2190-0027
	2360-0242	B	4	SCREW-MACH 6-32 1.25-IN-LG	00000	ORDER BY DESCRIPTION
	2420-0023	1	4	NUT-HEX-W/LKWR 6-32-THD .094-IN-THK	00000	ORDER BY DESCRIPTION
	2950-0006	3	1	NUT-HEX-DBL-CHAM 1/4-32-THD	00000	ORDER BY DESCRIPTION
	8150-2846	3	1	WIRE 18AWG 300V PVC 19X30 105C	28480	8150-2846
	04935-00001	5	1	REAR PANEL (BLANK)	28480	04935-00001
	7100-1288	1	1	TRANSFORMER-COVER	28480	7100-1288
	04935-61601	1	1	JUMPER CABLE	28480	04935-61601
	04935-61602	3	1	JUMPER CABLE	28480	04935-61602

See introduction to this section for ordering information

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13	04935 60006	6	1	RECEIVER BOARD WITH PAR	28480	04935-60006
A13C1	0180-3124	7	1	CAPACITOR-FXD 75UF+100-20% 300VDC AL	28480	0180-3124
A13C2	0180-1746	5	3	CAPACITOR-FXD 15UF+10% 20 VDC TA	56289	150D156X9020B2
A13C3	0180-1746	5		CAPACITOR-FXD 15UF+10% 20VDC TA	56289	150D156X9020B2
A13C4	0180-1746	5		CAPACITOR-FXD 15UF+10% 20VDC TA	56289	150D156X9020B2
A13C5	0160-0576	5	75	CAPACITOR-FXD .1UF+20% 50VDC CER	28480	0160-0576
A13C6	0160-2213	1	1	CAPACITOR-FXD 620PF+5% 300VDC MICA	28480	0160-2213
A13C7	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C8	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C9	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C10	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C11	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C12	0160-2225	5	1	CAPACITOR-FXD 2000PF +5% 300VDC MICA	28480	0160-2225
A13C13	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C14	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C15	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C16	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C17	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C18	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C19	0160-6405	1	10	CAPACITOR-FXD .01UF +1% 100VDC MICA	08113	HP204751PF3C1
A13C21	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C22	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C23	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C24	0140-0190	7	2	CAPACITOR-FXD 39PF +5% 300VDC MICA	72136	DM15E390J0300WV1CR
A13C25	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C26	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C27	0160-6405	1		CAPACITOR-FXD .01UF +1% 100VDC MICA	08113	HP204751PF3C1
A13C28	0180-0374	3	11	CAPACITOR-FXD 10UF +10% 20VDC TA	56289	150D106X9020B2
A13C29	0180-0374	3		CAPACITOR-FXD 10UF+10% 20VDC TA	56289	150D106X9020B2
A13C31	0160-0576	5		CAPACITOR-FXD .1UF+20% 50VDC CER	28480	0160-0576
A13C32	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C33	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C34	0180-0374	3		CAPACITOR-FXD 10UF+10% 20VDC TA	56289	150D106X9020B2
A13C35	0180-0374	3		CAPACITOR-FXD 10UF+10% 20VDC TA	56289	150D106X9020B2
A13C36	0180-0374	3		CAPACITOR-FXD 10UF+10% 20VDC TA	56289	150D106X9020B2
A13C37	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C38	0140-0190	7		CAPACITOR-FXD 39PF +5% 300VDC MICA	72136	DM15E390J0300WV1CR
A13C41	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C42	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C43	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C44	0180-0374	3		CAPACITOR-FXD 10UF+10% 20VDC TA	56289	150D106X9020B2
A13C45	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C46	0180-0374	3		CAPACITOR-FXD 10UF+10% 20VDC TA	56289	150D106X9020B2
A13C47	0180-0374	3		CAPACITOR-FXD 10UF +10% 20VDC TA	56289	150D106X9020B2
A13C49	0160-0340	1	1	CAPACITOR-FD 600PF +1% 300VDC MICA	28480	0160-0340
A13C50	0160-3291	7	5	CAPACITOR-FXD 1200PF +1% 100VDC MICA	28480	0160-3291
A13C51	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C52	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C56	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C57	0160-2222	2	1	CAPACITOR-FXD 1500PF +5% 300VDC MICA	28480	0160-2222
A13C58	0160-6320	9	14	CAPACITOR-FXD 1700PF +1% 100VDC MICA	08113	HP204751PF3C1
A13C59	0180-0374	3		CAPACITOR-FXD 10UF+10% 20VDC TA	56289	150D106X9020B2
A13C60	0160-6318	5	2	CAPACITOR-FXD 1100PF +1% 100VDC MICA	08113	GO2044751PF3C1
A13C61	0160-6320	9		CAPACITOR-FXD 1700PF +1% 100VDC MICA	08113	HP204751PF3C1
A13C62	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C63	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C64	0180-0197	8	4	CAPACITOR-FXD 2.2UF+10% 20VDC TA	56289	150D225X9020A2
A13C65	0180-0197	8		CAPACITOR-FXD 2.2UF+10% 20VDC TA	56289	150D225X9020A2
A13C66	0160-6320	9		CAPACITOR-FXD 1700PF +1% 100VDC MICA	08113	HP204751PF3C1
A13C67	0160-6320	9		CAPACITOR-FXD 1700PF +1% 100VDC MICA	08113	HP204751PF3C1
A13C68	0160-6320	9		CAPACITOR-FXD 1700PF +1% 100VDC MICA	08113	HP204751PF3C1
A13C69	0160-6185	4	2	CAPACITOR-FXD 1000PF +1% 500VDC MICA	08113	HP204751PF3C1
A13C70	0160-6317	4	3	CAPACITOR-FXD 4751PF +1% 300VDC MICA	08113	HP204751PF3C1
A13C71	0160-6185	4		CAPACITOR-FXD 1000PF +1% 500VDC MICA	08113	HP204751PF3C1
A13C72	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576
A13C73	0160-0576	5		CAPACITOR-FXD .1UF +20% 50VDC CER	28480	0160-0576

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13C74	0160-6188	7	1	CAPACITOR-FXD 110PF +-1% 300VDC MICA	08113	HP204751PF3C1
A13C75	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C76	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C77	0160-0576	5		CAPACITOR-FXD .1UF +-20% 40VDC CER	28480	0160-0576
A13C78	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C79	0160-6317	4	1	CAPACITOR-FXD 4751PF +-1% 300VDC MICA	08113	HP204751PF3C1
A13C80	0140-0225	7		CAPACITOR-FXD 300PF +-1% 300VDC MICA	08113	HP204751PF3C1
A13C81	0160-0218	2		CAPACITOR-FXD 2400PF +-1% 300VDC MICA	28480	0160-0218
A13C82	0160-3291	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-3291
A13C83	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C84	0160-0218	2	1	CAPACITOR-FXD 2400PF +-1% 300VDC MICA	28480	0160-0218
A13C85	0160-6320	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	HP204751PF3C1
A13C87	0160-6320	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	HP204751PF3C1
A13C88	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C89	0160-6405	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	HP204751PF3C1
A13C90	0160-0576	5	1	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C91	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C92	0160-6405	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	HP204751PF3C1
A13C93	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C94	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C95	0140-0177	0	1	CAPACITOR-FXD 400PF +-1% 300VDC MICA	72136	DM15F401F0300WV1CR
A13C97	0160-6317	4		CAPACITOR-FXD 4751PF +-1% 300VDC MICA	08113	HP204751PF3C1
A13C98	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C99	0160-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A13C100	0160-6405	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	HP204751P3C1
A13C101	0160-6405	1	1	CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	HP204751PF3C1
A13C102	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C103	0160-3291	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-3291
A13C104	0160-0218	2		CAPACITOR-FXD 2400PF +-1% 300VDC MICA	28480	0160-0218
A13C105	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C106	0160-0576	5	1	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C107	0160-3291	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-3291
A13C108	0160-0218	2		CAPACITOR-FXD 2400PF +-1% 300VDC MICA	28480	0160-0218
A13C109	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C110	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C111	0140-0235	1	1	CAPACITOR-FXD 2250PF +-1% 300VDC MICA	72136	DM20F2250RF0300WV1C
A13C112	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C113	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C114	0140-0228	2		CAPACITOR-FXD 3600PF +-1% 300VDC MICA	08113	HP204751PF3C1
A13C115	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C116	0160-0576	5	1	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C117	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C118	0160-6405	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	HP204751PF3C1
A13C119	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C120	0160-6405	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	HP204751PF3C1
A13C121	0160-6320	9	1	CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	HP204751PF3C1
A13C122	0160-6318	5		CAPACITOR-FXD 1100PF +-1% 50VDC MICA	08113	G02044751PF3C1
A13C123	0160-3291	7		CAPACITOR-FXD 1200PF +-1% 100VDC MICA	28480	0160-3291
A13C124	0160-0218	2		CAPACITOR-FXD 2400PF +-1% 300VDC MICA	28480	0160-0218
A13C125	0160-6320	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	HP204751PF3C1
A13C126	0160-0576	5	1	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C127	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C131	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C132	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C133	0180-0374	3		CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A13C134	0160-0576	5	1	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C135	0160-6320	9		CAPACITOR-FXD 1700PF +-1% 10VDC MICA	08113	HP204751PF3C1
A13C136	0160-6320	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	HP204751PF3C1
A13C137	0160-6320	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	HP204751PF3C1
A13C139	0160-0576	5		1	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480
A13C140	0160-0576	5	CAPACITOR-FXD .1UF +-20% 50VDC CER		28480	0160-0576
A13C141	0160-6405	1	CAPACITOR-FXD .01UF +-1% VDC MICA		08113	HP204751PF3C1
A13C142	0160-0576	5	CAPACITOR-FXD .1UF +-20% 50VDC CER		28480	0160-0576
A13C143	0160-0576	5	CAPACITOR-FXD .1UF +-20% 50VDC CER		28480	0160-076
A13C144	0160-0576	5	1	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C145	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C146	0160-6405	1		CAPACITOR-FXD .01UF +-1% 100VDC MICA	08113	HP204751PF3C1
A13C147	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C148	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13C149	0160-6320	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	HP204751PF3C1
A13C150	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C151	0160-6320	9		CAPACITOR-FXD 1700PF +-1% 100VDC MICA	08113	HP204751PF3C1
A13C152	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C153	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C154	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	016-0576
A13C155	0160-2215	3	1	CAPACITOR-FXD 750PF +-5% 300VDC MICA	28480	0160-2215
A13C156	0160-0939	4	1	CAPACITOR-FXD 430PF +-1% 300VDC MICA	02367	CD15F431J03
A13C157	0180-0197	8		CAPACITOR-FXD 2.3UF +-10% 20VDC TA	56289	150D225X9020A2
A13C158	0180-0197	8		CAPACITOR-FXD 2.2UF +-10% 20VDC TA	56289	150D225X9020A2
A13C159	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C160				CAPACITOR HAND SELECTED ONLY IF NEEDED	28480	
A13C201	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C202				CAPACITOR HAND SELECTED ONLY IF NEEDED		
A13C203	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C204	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A13C205	0160-3824	2	1	CAPACITOR-FXD 3900PF +-1%	05176	HEW-249
A13CR1	1901-1068	5	1	DIODE-SM SIG SCHOTTKY	28480	1901-1068
A13CR3	1901-0040	1	3	DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR4	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A13CR5	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR6	1901-0376	6	2	DIODE-GEN PRP 35V 50MA DO-35	28480	1901-0376
A13CR7	1901-0376	6		DIODE-GEN PRP 35V 50MA DO-35	28480	1901-0376
A13CR8	1901-0518	2	6	DIODE-SCHOTTKY	02062	5082-5509
A13CR9	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A13CR11	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A13CR12	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A13CR15	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A13CR16	1901-0518	2		DIODE-SCHOTTKY	02062	5082-5509
A13CR26	1901-0050	3	6	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR27	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR28	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR29	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR30	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13CR31	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A13J1	1250-0257	1	1	CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A13J4	1251-6947	0	34	CONNECTOR-SGL CNT PIN .025-IN-BSC-SZSO	28480	1251-6947
A13JU1	1200-0473	8	8	SOCKET-IC 16-CONT DIP IP-SLDR	28480	1200-0473
A13JU1	1251-4398	1	2	SHUNT, 4-POSITION	28480	1251-4398
A13JU2	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
A13JU3	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
A13JU4	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
A13JU5	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
A13JU5	1251-4398	1		SHUNT, 4-POSITION	28480	1251-4398
A13JU6	1258-0141	5	2	JUMPER-REMOVABLE FOR .025 IN SQ PINS	28480	1258-0141
A13JU6	1251-6947	0		CONNECTOR-SGL CONT PIN .025 IN BSC SZ	28480	1251-6947
A13JU7	1258-0141	5		JUMPER-REMOVABLE FOR .025 IN SQ PINS	28480	1258-0141
A13JU7	1251-6947	0		CONNECTOR-SGL CONT PIN .025 IN BSC SZ	28480	1251-6947
A13JW2	0811-3587	5	2	RESISTOR 0 OHMS	03123	104
A13R1	0757-0442	9	8	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A13R2	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A13R3	0698-4465	8	1	RESISTOR 931 1% .125W F TC=0+-100	24546	C4-1/8-TO-931R-F
A13R4	0698-6393	5	1	RESISTOR 585 1% .125W F TC=0+-100	28480	0698-6393
A13R5	0757-0280	3	4	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1001-F
A13R6	0757-0290	5	5	RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-TO-6191-F
A13R7	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-TO-6191-F
A13R8	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-TO-6191-F
A13R9	0698-0084	9	4	RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2151-F
A13R10	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	25456	C4-1/8-TO-2151-F
A13R11	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2151-F
A13R12	0757-0453	2	1	RESISTOR 30.1K 1% .125W F TCF=0+-100	24546	C4-1/8-TO-3012-F
A13R15	1810-0281	9	2	NETWORK-RES 1.0-SIP100.OK OHM X 9	01121	210A104
A13R16	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A13R17	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	CR-1/8-TO-1002-F
A13R18	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	CR-1/8-TO-1002-F
A13R19	0698-3457	6	1	RESISTOR 316K 1% .125W F TC=0+-100	28480	0698-3457
A13R20	1810-0281	9		NETWORK-RES 10-SIP100.OK OHM X 9	01121	210A104
A13R21	1810-0369	4	2	NETWORK-RES 6-SIP100.OK OHM X 5	11236	750-61-R10uK
A13R22	0698-6360	6	24	RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360

See introduction to this section for ordering information

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13R23	2100-3882	B	3	RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRN	28480	2100-3882
A13R24	0698-3153	9	2	RESISTOR 3.63K 1% .125W F TC=0+-100	24546	CR-1/8-TO-3831-F
A13R25	0698-4445	4	1	RESISTOR 5.76K 1% .125W F TC=0+-100	24546	C4-1/8-TO-5761-F
A13R26	0698-3152	B	1	RESISTOR 3.48K 1% .125W F TC=0+-100	24546	C4-1/8-TO-3481-F
A13R27	0698-3153	9	1	RESISTOR 3.63K 1% .125W F TC=0+-100	24546	C4-1/8-TO-3831-F
A13R28	0757-6360	6		RESISTOR 10K .1% .125W F TC=0+-100	24546	CR-1/8-TO-1002-F
A13R29	0698-6320	B	2	RESISTOR 5K .1% .125W F TC=0+-100	24546	CR-1/8-TO-5001-F
A13R30	0757-0416	7	3	RESISTOR 511 1% .125W F TC=0+-100	24546	CR-1/8-TO-511R-F
A13R31	0757-0416	7		RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-TO-511R-F
A13R32	0757-0416	7		RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-TO-511R-F
A13R33	2100-3883	9	4	RESISTOR-TRMR 5K 10% C TOP ADJ 17-TRN	28480	2100-3883
A13R34	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A13R35	0757-0420	9	4	RESISTOR 750 1% .125W F TC=0+-100	24546	CR-1/8-TO-751-F
A13R36	0698-4480	7	4	RESISTOR 15.8K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1582-F
A13R37	0698-4480	7	4	RESISTOR 15.8K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1582-F
A13R38	0757-0424	7	1	RESISTOR 1.1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1101-F
A13R39	0698-3150	6	3	RESISTOR 2.37K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2371-F
A13R40	0757-6360	2		RESISTOR 10K 1% .125W F TC=0+-100	24546	CR-1/8-TO-1002-F
A13R42	0757-6360	2		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A13R43	0757-0420	9		RESISTOR 750K 1% .125W	24546	C4-1/8-TO-1002-F
A13R44	0698-4480	7		RESISTOR 15.8K 1% .125W F TC=0+-100	24546	CR-1/8-TO-1582-F
A13R45	0698-4480	7		RESISTOR 15.8K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1582-F
A13R46	0698-3155	1	2	RESISTOR 4.6K 1% .125W F TC=0+-100	24546	C4-1/8-TO-4641-F
A13R47	0698-4475	0	1	RESISTOR 9.76K 1% .125W F TC=0+-100	03889	PME55-1/8-TO-9761-F
A13R48	0698-7847	6	3	RESISTOR 1.111K .1% .125W F TC=0+-25	19701	MF4C1/8-T9-11R-B
A13R49	0698-6360	6	5	RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A13R50	0698-3409	2		RESISTOR 2.37K 1% .125W	24546	CA-1/80-TO-2371-F
A13R54	0698-3453	2	1	RESISTOR 196K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1963-F
A13R55	0757-0401	0	4	RESISTOR 100 1% .125W F TC=0+-100	24546	CR-1/8-TO-101-F
A13R56	0757-0438	3	2	RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-TO-5111-F
A13R57	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-TO-4641-F
A13R58	0757-0199	3	2	RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2152-F
A13R60	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R62	0757-0317	6	2	RESISTOR 1.33K 1% .125W	24546	C4-1/8-TO-1331-F
A13R63	0757-0317	6		RESISTOR 1.33K 1% .125W	24546	C4-1/8-TO-1331-F
A13R64	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A13R65	2100-3882	9		RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRN	28480	2100-3882
A13R66	0757-0442	8		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1002-F
A13R67	0698-3157	3	2	RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1962-F
A13R69	0757-0444	1	1	RESISTOR 12.1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1212-F
A13R69	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2152-F
A13R70	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-TO-751-F
A13R71	0698-3157	3		RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1962-F
A13R72	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-TO-751-F
A13R72A	0757-0280	3	2	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1001F
A13R73	0698-3150	2		RESISTOR 2.37K 1% .1252	24546	CA-1/8-TO-2371-F
A13R74	0698-3150	2		RESISTOR 2.37K 1% .125W	24546	CA-1/8-TO-2371-F
A13R75	0757-0274	5	1	RESISTOR 1.21K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1211-F
A13R76	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2151-F
A13R77	2100-3881	7	1	RESISTOR-TRMR 500 10% C TOP-ADJ 17-TRN	28480	2100-3881
A13R78	0757-0465	6	2	RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1003-F
A13R79	0698-4530	8	1	RESISTOR 232K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2323-F
A13R80	0699-0595	9	1	RESISTOR 365K .1% .125W F TC=0+-25	28480	0699-0595
A13R81	0699-1078	3	1	RESISTOR 134K .1% .125W F TC=0+-25	28480	0699-1078
A13R82	0698-4516	0	1	RESISTOR 113K 1% .125W F TC=0+-100	2456	C4-1/8-TO-1133-F
A13R83	0698-4158	6	2	RESISTOR 100K .1% .125W F TC=0+-50	28480	0698-4158
A13R84	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R85	0698-4158	6		RESISTOR 100K .1% .125W F TC=0+-50	28480	0698-4158
A13R86	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R87	0698-4490	9	2	RESISTOR 29.4K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2942-F
A13R88	0698-4490	9		RESISTOR 29.4K 1% .125W F TC=0+-100	24546	C4-1/8-TO-2942-F
A13R89	0699-0566	4	4	RESISTOR 25.5K .1% .25W F TC=0+-25	28480	0699-0566
A13R90	0699-0566	4		RESISTOR 25.5K .1% .125W F TC=0+-25	28480	0699-0566
A13R91	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1001-F
A13R92	0698-7847	6		RESISTOR 1.11K .1% .125W F TC=0+-25	19701	MF4C1/8-T9-1111R-B
A13R93	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R94	0698-8638	5	2	RESISTOR 3.16K .1% .125W F TC=0+-25	28480	0698-8638
A13R95	0698-6445	8	3	RESISTOR 6.838K .1% .125W F TC=0+-25	28480	0698-6445
A13R96	0699-0586	8	1	RESISTOR 186.365K .1% .125W F TC=0+-25	28480	0699-0586
A13R97	0699-0585	7	1	RESISTOR 240.738K .1% .125W F TC=0+-25	28480	0699-0585
A13R98	0698-6467	4	3	RESISTOR 16.9K 1% .125W F TC=0+-50	28480	068-6467
A13R99	0699-0587	9	1	RESISTOR 12.918K .1% .125W F TC=0+-25	28480	0699-0587
A13R100	0699-0588	0	2	RESISTOR 18.171K .1% .125W F TC=0+-25	28480	0699-0588
A13R102	2100-3883	9		RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	28480	2100-3883

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13R103	0698-7413	2	2	RESISTOR 17.4K .25% .125W F TC=0+-100	19701	MF4C1/8-TO-1742-C
A13R104	0698-6423	2	2	RESISTOR 31.25K .1% .125W F TC=0+-25	28480	0698-6423
A13R105	0698-7413	2		RESISTOR 17.4K .25% .125W F TC=0+-100	19701	MF4C1/8-TO-1742-C
A13R106	0698-8858	1	3	RESISTOR 12.4K .1% .125W F TC=0+-25	28480	0698-8858
A13R107	0698-8858	1		RESISTOR 12.4K .1% .125W F TC=0+-25	28480	0698-8858
A13R108	0698-7929	5	2	RESISTOR 9.09K .1% .125W F TC=0+-50	19701	MF4C1/8-T2-9091-B
A13R109	0698-7929	5		RESISTOR 9.09K .1% .125W F TC=0+-50	19701	MF4C1/8-T2-9091-B
A13R110	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R111	0698-6467	4		RESISTOR 16.9K 1% .125W F TC=0+-50	28480	0698-6467
A13R112	0699-0566	4		RESISTOR 15.5K .1% .125W F TC=0+-25	28480	0699-0566
A13R113	0699-0566	4		RESISTOR 25.5K .1% .125W F TC=0+-25	28480	0699-0566
A13R114	0698-6445	8		RESISTOR 6.838K .1% .125W F TC=0+-25	28480	0698-6445
A13R115	0698-8638	5		RESISTOR 3.16K .1% .125W F TC=0+-25	28480	0698-8638
A13R116	0757-0289	2	1	RESISTOR 13.3K 1% .125W F TC=0+-100	19701	MF4C1/8-TO-1332-F3
A13R117	0699-0589	1	2	RESISTOR 34.334K .1% .125W F TC=0+-25	28480	0699-0589
A13R118	0699-0589	1		RESISTOR 34.334K .1% .125W F TC=0+-25	28480	0699-0589
A13R119	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R120	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R121	0699-0588	0		RESISTOR 18.171K .1% .125W F TC=0+-25	28480	0699-0588
A13R122	0698-8858	5	1	RESISTOR 12.4K .1% .125W F TC=0+-25	28480	0698-8858
A13R123	0699-0184	8	1	RESISTOR 738.5 1% .125W F TC=0+-25	24546	NESS
A13R124	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-6191-F
A13R125	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-6191-F
A13R126	0698-6423	2		RESISTOR 31.25K .1% .125W F TC=0+-25	28480	0698-6423
A13R127	0698-6754	2	1	RESISTOR 44.2K .5% .125W F TC=0+-50	24546	NC4-1/8-T2-4422-D
A13R128	0698-4537	5	1	RESISTOR 357K 1% .125W F TC=0+-100	28480	0698-4537
A13R129	0698-7585	9	1	RESISTOR 316.2 1% .125W F TC=0+-25	28480	0698-7585
A13R132	2100-3883	9		RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	28480	2100-3883
A13R134	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R135	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R136	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R137	0699-0590	4	2	RESISTOR 15.758K .1% .125W F TC=0+-25	28480	0699-0590
A13R138	0698-3456	5	1	RESISTOR 287K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2873-F
A13R139	0699-0596	0	2	RESISTOR 4.12K .1% .125W F TC=0+-25	28480	0699-0596
A13R140	0699-0596	0		RESISTOR 4.12K .1% .125W F TC=0+-25	28480	0699-0596
A13R141	0699-0594	8	2	RESISTOR 2.21K .1% .125W F TC=0+-25	28480	0699-0594
A13R142	0699-0594	8		RESISTOR 2.21K .1% .125W F TC=0+-25	28480	0699-0594
A13R143	0698-8337	1	1	RESISTOR 10.7K .1% .125W F TC=0+-50	19701	MF4C1/8-T2-1072-B
A13R144	0698-8068	5	1	RESISTOR 4.99K 25% .125W F TC=0+-25	19701	MF4C1/8-T9-4991-C
A13R145	0699-0597	1	3	RESISTOR 2.26K .1% .125W F TC=0+-25	28480	0699-0597
A13R146	0698-6447	0	1	RESISTOR 683.8 .1% .125W F TC=0+-25	28480	0698-6447
A13R147	0698-6446	9	1	RESISTOR 2.162K 1% .125W F TC=0+-25	28480	0698-6446
A13R148	0699-0592	6	1	RESISTOR 7.741K .1% .125W F TC=0+-25	28480	0699-0592
A13R149	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R150	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R151	0699-0590	4		RESISTOR 15.758K .1% .125W F TC=0+-25	28480	0699-0590
A13R152	0757-0462	3	1	RESISTOR 75K 1% .125W F TC=0+-100	24546	C4-1/8-TO-7502-F
A13R153	2100-3884	0	2	RESISTOR-TRMR 10K 10% C TOP-ADJ 17-TRN	28480	2100-3884
A13R154	0698-4520	6	2	RESISTOR 43K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1433-F
A13R155	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R156	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R157	0698-4505	7	2	RESISTOR 71.5K 1% .125W F TC=0+-100	24546	C4-1/8-TO-7152-F
A13R158	0699-0597	1		RESISTOR 2.26K .1% .125W F TC=0+-25	28480	0699-0597
A13R159	0699-0597	1		RESISTOR 2.26K .1% .125W F TC=0+-25	28480	0699-0597
A13R160	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R161	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R162	0698-8799	9	1	RESISTOR 21.5K .1% .125W F TC=0+-25	28480	0698-8799
A13R163	0699-0593	7	2	RESISTOR 13.665K .1% .125W F TC=0+-25	28480	0699-0593
A13R164	0699-0593	7	2	RESISTOR 13.665K .1% .125W F TC=0+-25	28480	0699-0593
A13R165	0699-0600	7	1	RESISTOR 108.502K .1% .125W F TC=0+-25	28480	0699-0600
A13R166	0699-0591	5	1	RESISTOR 140.158K .1% .125W F TC=0+-25	28480	0699-0591
A13R167	0757-0443	0	1	RESISTOR 11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1102-F
A13R168	0698-4520	6		RESISTOR 43K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1433-F
A13R169	0757-0461	2	2	RESISTOR 68.1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-6812-F
A13R170	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R171	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13R172	0698-4505	7	2	RESISTOR 71.5K 1% .125W F TC=0+-100	24546	C4-1/8-TO-7152-F
A13R173	0757-0463	4	1	RESISTOR 82.5K 1% .125W F TC=0+-100	24546	C4-1/8-TO-8252-F
A13R174	0757-0461	2		RESISTOR 68.1K 1% .125W F TC=0+-100	24546	C4-1/8-10-6812-F
A13R175	2100-3894	0	2	RESISTOR-TRMR 10K 10% C TOP-ADJ 17-TRN	28480	2100-3894
A13R178	0698-7847	6		RESISTOR 1.111K .1% .125W F TC=0+-25	19701	C4-1/8-T9-1111R-B
A13R179	0698-6360	6		RESISTOR 10K .1% .125W F TC=0+-25	28480	0698-6360
A13R180	2100-3883	9		RESISTOR-TRMR 5K 10% C TOP-ADJ 17-TRN	28480	2100-3883
A13R182	0757-0421	4	1	RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-TO-825R-F
A13R183	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1001-F
A13R184	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-TO-1003-F
A13R185	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A13R186	2100-3882	8		RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRN	28480	2100-3882
A13R187	0698-6467	4		RESISTOR 16.9K 1% .125W F TC=0+-50	28480	0698-6467
A13R201	0757-0458	7	2	RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-5112-F
A13R202	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A13R203	0757-0458	7		RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-TO-5112-F
A13R204	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-TO-101-F
A13R205	0698-4002	1	1	RESISTOR 5K .1% .125W F TC=0+-100	24546	C4-1/8-TO-5001-F
A13R206	1810-0369	4		NETWORK-RES 6-SIP OHM X5	11236	750-61-R100K
A13R207	0698-6445	8		RESISOR 6.838K .1% .125W F TC=0+-25	28480	0698-6445
A13R208	0811-3587	5		WIRE 1/2 IN. RESISTOR 0 OHMS	03123	104
A13T1	9100-3489	3	1	TRANSFORMER - INPUT	28480	9100-3489
A13TP2	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP3	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP4	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP5	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP6	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP7	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP9	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP10	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP11	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP12	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP13	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP14	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP15	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP21	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP22	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP23	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP24	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13TP25	1251-6947	0		CONNECTR-SGL CONT PIN.025-IN-BSC-SZ SQ	28480	1251-6947
A13U1	1826-0712	4	4	IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P	27014	LF353N
A13U2	1826-0138	8	4	IC COMPARTOR GP QUAD 14-DIP-P PKG	01295	LM339N
A13U3	1826-0624	7	1	IC CONV V/FREQ 14-DIP-P PKG	8E175	VFC32KP
A13U4	1826-1071	0	2	IC OP AMP	28480	1826-1071
A13U5	1826-0742	0	1	IC PRECISION 10V REFERENCE, AD581J	28480	1826-0742
A13U6	1826-0639	4	1	IC CONV 8-B-D/A 16DIP-P PKG	24355	AD7524JN
A13U7	1820-1956	8	4	IC LCH CMOS COM CLOCK QUAD	0192B	CD4042BE
A13U8	1820-1956	8		IC LCH CMOS COM CLOCK QUAD	0192B	CD4042BE
A13U11	1820-1956	8		IC LCH CMOS COM CLOCK QUAD	0192B	CD4042BE
A13U12	1820-2326	3	1	IC XLTR CMOS TIL-TO-MOS HEX	04713	MC14504BCP
A13U13	1820-1315	3	1	IC MULTIPLXR 8 CHAN-ANLG 16-DIP-P PKG	0192B	CD4051RE
A13U14	1826-1544	8	4	IC OP AMP GP 8-DIP-P PKG	27014	MC34081P
A13U15	1826-0667	4	5	IC OP AMP LOW-BIAS-H-IMP 8-DIP-P-PKG	27014	LF351N
A13U16	1826-0712	8		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP-P	27014	LF353N
A13U17	1820-1956	9		IC LCH CMOS COM CLOCK QUAD	0192B	CD4042BE
A13U20	1826-1071	0		IC OP AMP	28480	1826-1071
A13U21	1826-0735	1	8	IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A13U22	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A13U23	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A13U24	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A13U25	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A13U26	1826-0208	3	3	IC OP AMP GP 8-DIP-P PKG	27014	LM310N
A13U28	1826-0208	3		IC OP AMP GP 8-DIP-P PKG	27014	LM310N
A13U29	1826-1544	8		IC OP AMP GP 8-DIP-P PKG	27014	MC34081P
A13U30	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A13U31	1826-0665	6	2	IC OP AMP LOW-BIAS H-IMP DUAL 14-DIP	27014	LF347BN
A13U32	1826-0712	4		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP	27014	LM310N
A13U33	1826-0208	3		IC OP AMP GP 8-DIP-P PKG	27014	LF353N
A13U34	1826-0740	8		IC SWITCH ANLG DUAL 16-DIP-C PKG	32293	IH5043CDE
A13U35	1826-0740	8		IC SWITCH ANLG DUAL 16-DIP-C PKG	32293	IH5043CDE
A13U36	1826-0665	6		IC OP AMP LOW-BIAS-H-IMP QUAD 14-DIP-P	27014	LF347BN
A13U37	1820-1725	9	2	IC MULTIPLXR ANLG 16-DIP-P PKG	17856	DG508CJ
A13U38	1820-1735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A13U39	1820-1726	9		IC MULTIPLXR ANLG 16-DIP-P PKG	17856	DG508CJ

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A13U40	1826-0753	3	2	IC OP AMP LOW-BIAS, HIGH IMPED	02037	SC77968L1
A13U42	1826-0736	2	1	IC OP AMP WB 8-DIP-P PKG	34371	HA3-2627-5
A13U43	1826-0667	8		IC OP AMP LOW-BIAS-H-IMP 8-DIP-P PKG	27014	LF351N
A13U44	1826-0667	8		IC OP AMP LOW-BIAS-H-IMP 8-DIP-P PKG	27014	LF351N
A13U45	1826-0667	8		IC OP AMP LOW-BIAS-H-IMP 8-DIP-P PKG	27014	LF351N
A13U46	1826-0712	4		IC OP AMP LOW-BIAS-H-IMP DUAL 8-DIP P	27014	LF353N
A13U47	1826-1422	5	1	IC OP AMP WB QUAD 14-DIP-P PKG	02037	MC34084P
A13U48	1826-1544	8		IC OP AMP GP 8-DIP-P-PKG	27014	MC34081P
A13U50	1826-0740	8		IC SWITCH ANLG DUAL 16-DIP-C PKG	32293	IH5043CDE
A13U51	1826-0753	8		IC OP AMP LOW-BIAS-H-IMP	27014	SC77968L1
A13U52	1826-1544	8		IC OP AMP GP 8-DIP PKG	27014	MC34081P
A13U53	1826-0665	6		IC OP AMP LOW-BIAS-H-IMP QUAD 14-DIP-P	27014	LF347BN
A13U54	1826-0712	4		IC OP AMP LOW-BIAS-H-IMP QUAD 8-DIP-P	27014	LF353N
A13U55	1826-0735	1		IC OP AMP H-SLEW-RATE 8-DIP-P PKG	34371	HA3-2507-5
A13U56	1826-0667	8		IC OP AMP LOW-BIAS-H-IMP 8-DIP-P PKG	27014	LF351N
A13U57	1826-1189	1	1	IC OP AMP LOW-BIAS-H-IMP	28480	1826-1189
A13UX7	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
A13UX8	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
A13UX17	1200-0473	8		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0473
				A13 MISCELLANEOUS PARTS		
	2260-0002	6	2	NUT-HEX-DBL-CHAM 4-40-THD .062-IN-THK	00000	ORDER BY DESCRIPTION
	2260-0009	8	2	NUT-HEX-W/LKWR 4-40-THD .094-IN-THK	00000	ORDER BY DESCRIPTION
	8150-0456	7	1	WIRE 24AWG W 300B PVC 7X32 80C	28480	8150-0456
	0380-1157	6	2	SNAP IN SPACER	00509	TCBS-4N

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A14	04935-60307	7	1	TRANSMITTER BOARD WITH PAR	28480	04935-60307
A14C1	0160-3963	0	3	CAPACITOR-FIXED .15UF +-5% 50VDC	28480	0160-3963
A14C2	0160-3963	0		CAPACITOR-FIXED .15UF +-5% 50VDC	28480	0160-3963
A14C3	0160-3963	0		CAPACITOR-FIXED .15UF +-5% 50VDC	28480	0160-3963
A14C4	0180-0576	5	44	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0180-0576
A14C5	0180-3045	1	2	CAPACITOR-FXD 2200UF+50-10% 25VDC AL	28480	0180-3045
A14C6	0180-2945	8	2	CAPACITOR-FXD 100UF+50-10% 35VDC AL	28480	0180-2945
A14C7	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C8	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C9	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C10	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C11	0180-3045	1		CAPACITOR-FXD 2200UF+50-10% 25VDC AL	28480	0180-3045
A14C12	0180-2945	8	2	CAPACITOR-FXD 100UF+50-10% 35VDC AL	28480	0180-2945
A14C13	0160-3456	9	2	CAPACITOR-FXD 1000PF 10% 1KVDC CER	28480	0160-3456
A14C14	0160-0576	5		CAPACITOR-FXD .1UF+-20% 50VDC CER	28480	0160-0576
A14C15	0180-3044	0	1	CAPACITOR-FXD 3300UF+50-10% 16VDC AL	28480	0180-3044
A14C16	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C17	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C20	0160-3456	9		CAPACITOR-FXD 1000PF 10% 1KVDC CER	28480	0160-3456
A14C21	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C22	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C23	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C24	0160-2257	3	1	CAPACITOR-FXD 10PF+-5% 220VDC CER0+-60	28480	0160-0576
A14C25	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C26	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C27	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C28	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C29	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C30	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C31	0180-3050	8	1	CAPACITOR-FXD 330UF+50-10% 16VDC AL	28480	0180-3050
A14C32	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C33	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C34	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C35	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C36	0180-0058	0	1	CAPACITOR-FXD 50UF+75-10% 25VDC AL	56289	30D506G025CC2
A14C37	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C38	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C39	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C40	0160-3094	2	1	CAPACITOR-FXD .1UF +-10% 25VDC CER	28480	0160-0576
A14C41	0180-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	56289	30D506G025CC2
A14C42	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C43	0160-3291	7	2	CAPACITOR-FXD 1200PF+-1% 100VDC MICA	28480	0160-3291
A14C44	0160-3291	7	2	CAPACITOR-FXD 1200PF+-1% 100VDC MICA	28480	0160-3291
A14C45	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C46	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C47	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C48	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C49	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C50	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C51	0180-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	56289	0160-0576
A14C52	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C53	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C54	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C55	0160-0127	2	2	CAPACITOR-FXD .1UF +-20% 25VDC CER	28480	0160-0127
A14C56	0180-3124	7	1	CAPACITOR-75 300 N.P.	28480	0180-T02710
A14C57	0160-4135	0	3	CAPACITOR-FXD 4700PF +-1% 300VDC MICA	28480	0160-4135
A14C58	0160-4135	0	3	CAPACITOR-FXD 4700PF +-1% 300VDC MICA	28480	0160-4135
A14C59	0160-4135	0	3	CAPACITOR-FXD 4700PF +-1% 300VDC MICA	28480	0160-4135
A14C60	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C61	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C62	0180-0197	8	2	CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A14C63	0180-0197	8	2	CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A14C64	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C65	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C67	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C69	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C69	0160-0576	5		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A14C70	0160-0127	2		CAPACITOR-FXD .1UF +-20% 25VDC CER	28480	0160-0127
A14C71	0180-0374	3	1	CAPACITOR-FXD 10UF +-10% 20VDC TA	56289	150D106X9020B2
A14C72	0180-1746	5	1	CAPACITOR-FXD 15UF+-10% 20VDC TA	28480	0180-1746
A14C73	0160-4833	5	1	CAPACITOR-FXD .022UF+-10% 100VDC CER	28480	0160-4833

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A14C74	0160-4835	7	1	CAPACITOR-FXD .1UF+ .10% 50VDC CER	28480	0160-4835
A14C75	0180-0291	3	1	CAPACITOR-FXD 1UF+ .10% 35VDC CER	28480	0180-0291
A14CR1	1902-0041	4	1	DIODE-ZNR 5.11V 5% D0-35 PD=4W	28480	1902-0041
A14CR4	1901-0033	2	7	DIODE-GEN PRP 180V 200MA D0-7	28480	1901-0033
A14CR6	1901-0731	7	9	DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR7	1902-1399	7	3	DIODE-ZNR 18.0V 2% PD=4W	02037	INS248
A14CR9	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR10	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR11	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR12	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR13	1901-0033	2	7	DIODE-GEN PRP 180V 200MA D0-7	28480	1901-0033
A14CR14	1901-0033	2	7	DIODE-GEN PRP 180V 200MA D0-7	28480	1901-0033
A14CR15	1902-1399	7		DIODE-ZNR 18.0V 2% PD=4W	02037	INS248
A14CR16	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR17	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR18	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR19	1901-0033	2	7	DIODE-GEN PRP 180V 200MA D0-7	28480	1901-0033
A14CR20	1901-0033	2		DIODE-GEN PRP 180V 200MA D0-7	28480	1901-0033
A14CR23	1902-1399	7		DIODE-ZNR 18.0V 2% PD=4W	02037	INS248
A1CR24	1884-0250	7	1	THYRISTOR-TRIAC TO-220AB	01928	T2500B
A14CR25	1902-0052	7	1	DIODE-ZNR 6.81V 2% PD=4W	02037	SZ30016-1135
A14CR26	1901-0731	7		DIODE-PWR RECT 400V 1A	28480	1901-0731
A14CR27	1901-0033	2	7	DIODE-GEN PRP 180V 200MA D0-7	28480	1901-0033
A14CR28	1901-0033	2	7	DIODE-GEN PRP 180V 200MA D0-7	28480	1901-0033
A14CR29	1902-0202	9	2	DIODE-ZNR 15V 5% D0-15 PD=1W TC=+.057%	28480	1902-0202
A14CR30	1902-0202	9	2	DIODE-ZNR 15V 5% D0-15 PD=1W TC=+.057%	28480	1902-0202
A14CSA1	1251-6947	0	1	CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6947
A14CSA2	1251-6947	0	1	CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6947
A14J2	1251-6947	0	1	CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6947
A14J3	1251-4573	4	1	CONNECTOR-PC EDGE 25-CONT/ROW 2-ROWS	28480	1251-4573
A14JU1	1251-6947	0	1	CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6947
A14JU2	1251-6947	0	1	CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6947
A14JU5	1258-0141	5	5	JUMPER-REMOVABLE FOR .025IN SQ PINS	28480	1258-0141
A14JU6	1258-0141	5	5	JUMPER-REMOVABLE FOR .025 IN SQ PINS	28480	1251-6947
A14JU6	1251-6947	5	5	JUMPER-REMOVABLE FOR .025 IN SQ PINS	28480	1251-0141
A14JU6	1258-0141	5	5	JUMPER-REMOVABLE FOR .025 IN SQ PINS	28480	1251-6947
A14JU6	1258-0141	5	5	JUMPER-REMOVABLE FOR .025 IN SQ PINS	28480	1251-0141
A14JU14	1251-6947	0		CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6947
A14JU-14	1258-0141	5	5	JUMPER-REMOVABLE FOR .025 IN SQ PINS	28480	1251-0141
A14JU-14	1251-6947	0		CONNECTOR-SGL CONT P .025IN-BSC-SZSQ	28480	1251-6947
A14JU-14	1258-0141	5	5	JUMPER-REMOVABLE FOR .025 IN SQ PINS	28480	1251-0141
A14JW2	0811 3587	5	2	JUMPER-REMOVABLE FOR .025 IN SQ PINS	03123	104
A14JW3	0811 3587	5		RESISTOR 0 OHMS	03123	104
A14P1	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	03123	104
A14Q1	1853-0512	9	3	TRANSISTOR PNP PD=50W FT=20MHZ	03508	1251-6947
A14Q2	1854-0575	6	1	TRANSISTOR NPN PD=625MW FT=50MHZ	04713	X45H281
A14Q3	1853-0512	9		TRANSISTOR PNP PD=50W FT=20MHZ	03508	MPS-A42
A14Q4	1853-0512	9		TRANSISTOR PNP PD=50W FT=20MHZ	03508	X45H281
A14Q5	1853-0012	4	1	TRANSISTOR PNP SI TO-39 PD=600MW	01295	2N2904A
A14Q6	1853-0053	5	1	TRANSISTOR NPN SI TO-5 PD=800MW	04713	2N2218
A14Q7	1853-0036	2	1	TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A14R1	0757-0465	6	6	RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A14R2	0698-8260	6	4	RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-8260
A14R3	0757-0819	4	1	RESISTOR 909 1% .5W F TC=0+-100	28480	0757-0819
A14R4	0757-0442	9	21	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R5	0698-8827	4	4	RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A14R6	0698-8826	3	3	RESISTOR 825K 1% .125W F TC=0+-100	28480	0698-8826
A14R7	0698-8826	3		RESISTOR 825K 1% .125W F TC=0+-100	28480	0698-8826
A14R8	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A14R9	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A14R10	0698-8826	3		RESISTOR 825K 1% .125W F TC=0+-100	28480	0698-8826
A14R11	0698-8824	1	1	RESISTOR 562K 1% .125W F TC=0+-100	28480	0698-8824
A14R12	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R13	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A14R14	0698-8260	6		RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-8260
A14R16	0698-8440	7	1	RESISTOR 196 1% .125W F TC=0+-100	24546	C4-1/8-T0-196R-F

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A14R17	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A14R19	0757-0280	3	4	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A14R20	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R21	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R22	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R23	0757-0228	1	1	RESISTOR 9.09K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-9091-F
A14R24	0757-0420	3	4	RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A14R25	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A14R27	0698-0083	8	2	RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1961-F
A14R28	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A14R29	1810-0207	9	1	NETWORK-RES 0-SIP 22.0K X 7	01121	208A223
A14R30	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A14R31	2100-3882	8	2	RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRN	28480	2100-3882
A14R33	0757-0416	7	1	RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-T0-511R-F
A14R34	0698-0083	8		RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1961-F
A14R35	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R36	0757-0394	0	2	RESISTOR 51.1 1% .125W F TC=0+-100	02995	5033R
A14R37	0757-0317	7	1	RESISTOR 1.33K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1331-F
A14R38	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A14R39	0757-0420	3		RESISTOR 750 1% .125W F TC=0+-100	24546	C4-1/8-T0-751-F
A14R40	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A14R41	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A14R42	2100-3881	7	2	RESISTOR-TRMR 500 10% C TOP-ADJ 17-TRN	28480	2100-3881
A14R43	0757-0438	3	2	RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A14R44	0757-0438	3		RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A14R45	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R46	0757-0458	7	3	RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5112-F
A14R47	0698-3156	2	1	RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F
A14R48	0698-3152	8	1	RESISTOR 3.48K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3481-F
A14R49	0757-0458	7		RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5112-F
A14R52	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R53	0698-3160	8	5	RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A14R54	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R55	0698-3160	8	5	RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A14R56	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A14R57	0757-0458	7		RESISTOR 51.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5112-F
A14R58	0698-3451	0	1	RESISTOR 133K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1333-F
A14R59	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R60	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R61	0698-3160	8	5	RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A14R62	0698-3160	8	5	RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A14R63	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R64	0698-3160	8	5	RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A14R65	0757-0421	4	1	RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-T0-825R-F
A14R66	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R67	0757-0443	0	1	RESISTOR 11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1102-F
A14R68	0757-0441	8	1	RESISTOR 8.25 1% .125W F TC=0+-100	24546	C4-1/8-T0-8251-F
A14R69	0757-0419	0	1	RESISTOR 681 1% .125W F TC=0+-100	03293	C4-1/8-T0-681R-F
A14R70	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R71	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R72	2100-3881	7		RESISTOR-TRMR 500 10% C TOP-ADJ 17-TRN	28480	2100-3881
A14R73	0757-0279	0	2	RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A14R74	2100-3882	8	2	RESISTOR-TRMR 2K 10% C TOP-ADJ 17-TRN	28480	2100-3882
A14R75	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R76	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R77	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R78	0757-0180	2	2	RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180
A14R79	0757-0180	2	2	RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180
A14R80	0757-0428	1	2	RESISTOR 1.62K 1% .125W	02995	MF4C-1
A14R81	0757-0431	6	1	RESISTOR 2.43K 1% .125W	02995	MF4C-1
A14R82	0698-0084	9	1	RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A14R83	0698-6360		1	RESISTOR 585 1% .125W F TC=0+-25	02995	5033R
A14R85	0698-0763	3	1	RESISTOR 10.6K 1% .125W F TC=0+-100	28480	0698-0763
A14R86	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R87	0698-4437	4	1	RESISTOR 2.94K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2941-F
A14R88	0698-6360	6	2	RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A14R89	0698-6360	6	2	RESISTOR 10K 1% .125W F TC=0+-25	28480	0698-6360
A14R90	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A14R91	0757-0289	2	1	RESISTOR 13.3K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-1332-F
A14R92	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A14R93	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A14R94	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/R-T0-1002-F
A14R95	0757-0394	0	2	RESISTOR 51.1 1% .125W F TC=0+-100	02995	5033R
A14R96	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/R-T0-1002-F
A14R97	0698-3150	0	1	RESISTOR 2.37K 1% .125W	02995	MF4C-1
A14R98	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/R-T0-1001-F
A14R99	0698-3157	0	1	RESISTOR 19.6K 1% .125W	02273	CEA-993
A14R100	0757-0428	1		RESISTOR 1.62K 1% .125W	02995	MF4C-1
A14T1	9100-2647	8	1	TRANSFORMER: AUDIO	28480	9100-2647
A14TP1	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP2	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP3	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP4	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP5	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP6	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP7	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP9	1261-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP10	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TP11	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14TPS/S	1251-6947	0		CONNECTOR-SGL CONT PIN .025IN-BSC-SZSQ	28480	1251-6947
A14U1	1826-0679	2	1	IC: OP AMP LOW-BIAS H-IMPD TO-99	0192B	CA3140AT
A14U2	1820-1932	0	2	IC: MV CMOS MONOSTBL DUAL	04713	MC14538BCP
A14U3	1820-1932	0		IC: MV CMOS MONOSTBL DUAL	04713	MC14538BCP
A14U4	1820-0939	5	3	IC: FF CMOS D-TYPE DUAL	0192B	CD4013AF
A14U5	1820-0939	5		IC: FF CMOS D-TYPE DUAL	0192B	CD4013AF
A14U6	1820-2472	5	1	IC: MICROPROCESSOR MK3872	28480	1820-2472
A14U7	1820-1827	2	1	IC: DCDR CMOS 4-TO-16 LINE	27014	MM74C154AN
A14U8	1826-0728	2	2	IC: PRECISION GEN. PURPOSE REG.	28480	SG1532J
A14U9	1826-0411	0	2	IC: TIMER CMOS	04713	MC14536BCP
A14U10	1826-0411	0	2	IC: TIMER CMOS	04713	MC14536BCP
A14U11	1820-1956	8	7	IC: QUAD LCH CMOS COM CLOCK	0192B	CD4042BE
A14U12	1820-1956	8		IC: QUAD LCH CMOS COM CLOCK	0192B	CD4042BE
A14U13	1820-2566	8	1	IC: BFR CMOS QUAD LINE DRIVER	27014	MM74C240N
A14U14	1826-0728	2	2	IC: PRECISION GEN. PURPOSE REG.	28480	SG1532J
A14U15	1820-1745	3	1	IC: QUAD NOR GATE CMOS 2-INPUT	04713	MC14001BCP
A14U16	1820-2576	0	3	IC: QUAD NAND GATE CMOS 2-INPUT	04713	MC14011BCL
A14U17	1820-2576	0	3	IC: QUAD NAND GATE CMOS 2-INPUT	04713	MC14011BCL
A14U18	1820-0939	5		IC: FF CMOS D-TYPE DUAL	0192B	CD4013AF
A14U19	1820-2576	0	3	IC: QUAD NAND GATE CMOS 2-INPUT	04713	MC14011BCL
A14U20	1820-1960	4	1	IC: DUAL NAND GATE CMOS 4-INPUT	04713	MC14012BCP
A14U21	1826-0667	8	1	IC: OP AMP LOW-BIAS H-IMPD	27014	LF351N
A14U22	1820-1977	3	2	IC: ECL OSCILLATOR	04713	MC12061P
A14U23	1820-1977	3	2	IC: ECL OSCILLATOR	04713	MC12061P
A14U24	1826-0712	4	2	IC: OP AMP LOW-BIAS H-IMPD	27014	LF353N
A14U25	1826-0138	8	1	IC: GP QUAD COMPARTOR 14 PIN DIP	01295	LM339N
A14U26	1820-1956	8		IC: QUAD LCH CMOS COM CLOCK	0192B	CD4042BE
A14U27	1820-1956	8		IC: QUAD LCH CMOS COM CLOCK	0192B	CD4042BE
A14U28	1820-1956	8		IC: QUAD LCH CMOS COM CLOCK	0192B	CD4042BE
A14U29	1820-1956	8		IC: QUAD LCH CMOS COM CLOCK	0192B	CD4042BE
A14U30	1820-1956	8		IC: QUAD LCH CMOS COM CLOCK	0192B	CD4042BE
A14U31	1820-1420	1	1	IC: CNTR TTL LS DIV-BY-12 ASYNC	01295	SN74LS92N
A14U32	1820-1478	9	1	IC: CNTR TTL LS BIN ASYNC	01295	SN74LS93N
A14U33	1826-0508	6	1	IC: 10-BIT D/A CONVERTER	24355	AD561JD
A14U34	1820-1441	6	5	IC: TTL 4-BIT FULL ADDER	01295	SN74LS283N
A14U35	1820-1441	6	5	IC: TTL 4-BIT FULL ADDER	01295	SN74LS283N
A14U36	1820-1441	6	5	IC: TTL 4-BIT FULL ADDER	01295	SN74LS283N
A14U37	1820-1441	6	5	IC: TTL 4-BIT FULL ADDER	01295	SN74LS283N
A14U38	1820-1441	6	5	IC: TTL 4-BIT FULL ADDER	01295	SN74LS283N
A14U39	1820-1197	9	1	IC: QUAD NAND GATE CMOS 2-INPUT	01295	SN74LS00N
A14U40	1826-0779	3	1	IC: DUAL 4-CHANNEL MULTIPLEXER	24355	AD7502JN
A14U41	1826-0735	1	3	IC: OP AMP H-SLEW-RATE	34371	HA3-2507-5
A14U42	1826-1071	0		IC: OP AMP	28480	1826-1071
A14U43	1818-1574	1	1	IC: NMOS 3276B (32K) ROM 450-NS 3-S	55576	SYP2332 MASKED
A14U44	1820-1730	6	3	IC: FF TTL LS D-TYPE POS-EDGE TRIG	01295	SN74LS273N
A14U45	1820-1195	7	1	IC: FF TTL LS D-TYPE POS-EDGE TRIG	01295	SN74LS175N
A14U46	1820-1730	6		IC: FF TTL LS D-TYPE POS-EDGE TRIG	01295	SN74LS273N
A14U47	1820-1730	6		IC: FF TTL LS D-TYPE POS-EDGE TRIG	01295	SN74LS273N
A14U48	1820-1112	8	2	IC: FF TTL LS D-TYPE POS-EDGE TRIG	01295	SN74LS74AN
A14U49	1820-1199	1	1	IC: INV TTL LS HEX 1-INPUT	01295	SN74LS04N
A14U50	1820-1112	8	2	IC: FF TTL LS D-TYPE POS-EDGE TRIG	01295	SN74LS74AN
A14U51	1826-0712	4	2	IC: OP AMP LOW-BIAS H-IMPD	27014	LF353N

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A14U52	1826-0735	1	3	IC: OP AMP H-SLEW-RATE	34371	HA3-2507-5
A14U53	1826-0735	1	3	IC: OP AMP H-SLEW-RATE	34371	HA3-2507-5
A14XU6	1200-0654	6	1	SOCKET-IC 40-CONT	28480	1200-0654
A14XU3 ²	1200-0638	5	1	SOCKET-IC 14 PIN	28480	1200-0638
A14Y1	0410-1180	0	1	CRYSTAL 4.000 MHZ	28480	0410-1180
A14Y2	0410-1220	9	1	CRYSTAL 4.194304 MHZ	28480	0410-1220
A14Y3	0410-0800	9	1	CRYSTAL 6.144 MHZ	28480	0410-0800
				A14 MISCELLANEOUS PARTS		
	1200-0666	9	3	TRANSISTOR SOCKET 3-CONT	28480	1200-0666
	1251-6856	0	1	CONNECTOR 18-PIN M POST TYPE	28480	1251-6856

See introduction to this section for ordering information.

* Indicates factory selected value.

Table 6-3. Replaceable Parts (Continued)

Reference Designator	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
				MISC. AND CHASSIS PARTS		
F1	2110-0012	4	1	FUSE .5A 250V (120 VAC OPERATION)	28480	2110-0012
F2	2110-0004	3	1	FUSE .25A 250V (220 VAC OPERATION)	28480	2110-0004
W2	8120-3126	5	1	CABLE-REC-TRAN INTERCONNECT	28480	8120-3126
W3	04935-60019	2	2	CABLE SHIELDED	28480	04935-60019
W5	04935-60009	9	1	CABLE ASSEMBLY-COAX	28480	04935-60009
	0340-0949	2	3	INSULATOR-XSTR THRM-CNDCT	28480	0340-0949
	0370-1089	2	1	KNOB-BASE 1/2 JGK .125-IN-ID	28480	0370-1089
	0370-1091	6	1	KNOB-BASE 1/2 JGK .25-IN-ID	28480	0370-1091
	0403-0294	0	2	SPACER SNAP-IN	28480	0403-0294
	5041-6750	2	4	FOOT-BUMPER	28480	5041-6750
	1258-0141	8	3	JUMPER-REM. (OPT 001 & 003)	28480	1258-0141
	1400-0510	8	1	CLAMP-CABLE(OPT. 001 & 003)	28480	1400-0510
	1510-0076	4	2	BINDING POST SGL SGL-TUR JGK	28480	1510-0076
	2200-0521	8	2	SCREW-MACHINE 4-40	00000	ORDER BY DESCRIPTION
	2200-0143	0	3	SCREW-MACH 4-40 .375 IN-LNG	00000	ORDER BY DESCRIPTION
	2260-0012	8	3	NUT-HEX-W/LKWR 4-40 .094	00000	ORDER BY DESCRIPTION
	2360-0370	3	6	SCREW-MACHINE 6-32	00000	ORDER BY DESCRIPTION
	2360-0117	6	3	SCREW-MACH 6-32 .375 IN-LNG	00000	ORDER BY DESCRIPTION
	2420-0023	1	2	NUT-HEX W-LCK WSHR	00000	ORDER BY DESCRIPTION
	2510-0103	9	4	SCREW-MACH 8-32 .375 IN-LNG	00000	ORDER BY DESCRIPTION
	2520-0014	2	4	SCREW-MACH 8-32 4. IN-LNG	00000	ORDER BY DESCRIPTION
	2950-0087	0	2	NUT-HEX-DBL-CHAM 3/8-32	00000	ORDER BY DESCRIPTION
	3050-0001	1	4	WASHER-FL MTLC NO. 8	28480	3050-0001
	3050-0067	9	2	WASHER-FL MTLC 5/16 .375	28480	3050-0067
	3050-0100	1	2	WASHER-FL MTLC NO. 6	28480	3050-0100
	0590-0076	1	3	NUT-HEX 4-40	28480	0590-0076
	5040-4475	2	1	CASE-TOP HALF	28480	5040-4475
	5040-4476	3	1	CASE-BIOTOM HALF	28480	5040-4476
	7120-1155	1	1	LABEL-WARNING	28480	7120-1155
	7120-2388	4	1	PLATE-IDENT	28480	7120-2388
	7120-4184	2	1	LABEL-CAP. COVER	28480	7120-4184
	7120-5370	0	2	LABEL-INFO. HANDLE	28480	7120-5370
	7205-0356	2	1	SUPPORT-ROD	28480	7205-0356
	8120-1521	6	1	CABLE ASSY 18AWG 3-CNDCT	28480	8120-1521
	8120-3126	1	1	JUMPER-CABLE ASSY	28480	8120-3126
	5040-4467	2	4	SPACER, SHORT, PLASTIC	28480	5040-4467
	5040-4468	3	4	SPACER, LONG, PLASTIC	28480	5040-4468
	5040-4469	4	1	COVER, FRONT	28480	5040-4469
	5040-4470	7	1	HANDLE, CASE	28480	5040-4470
	5040-4471	8	2	FOOT-REAR	28480	5040-4471
	5060-7159	7	1	PWR CORD STRAP ASSY	28480	5060-7159
	04935-00002	6	1	SHIELD-ALUM.	28480	04935-00002
	04935-90018	5	1	INSTRUCTION SUMMARY CARD	28480	04935-90018
	04935-90023	6	1	OPERATING & SERVICE MANUAL	28480	04935-90023
	04935-00007	1	1	BATTERY INSULATOR	28480	04935-00007
	04935-60011	3	1	BATTERY ASSY (OPT 001 & 003)	28480	04935-60011
	0460-0880	0	2	TAPE-INDUSTRIAL .25	28480	0460-0880
	0460-1601	5	2	TAPE-INDUSTRIAL (FOAM)	28480	0460-1601
BT1	1400-1076	3	2	BATTERY HOLDER	28480	1400-1076
BT2	1420-0284	5	2	BATTERY 15.6V	28480	1420-0284
BT3	1420-0284	5	2	BATTERY 15.6V	28480	1420-0284
	1420-0285	6	1	BATTERY 6V	28480	1420-0285
	2950-0043	7	1	NUT-HEX 3/8-32	28480	2950-0043
	3050-1114	3	1	NYLON WASHER	28480	3050-1114
	1540-0835	6	1	CARRYING CASE	28480	1540-0835

See introduction to this section for ordering information.

* Indicates factory selected value.

SECTION VIII SERVICE

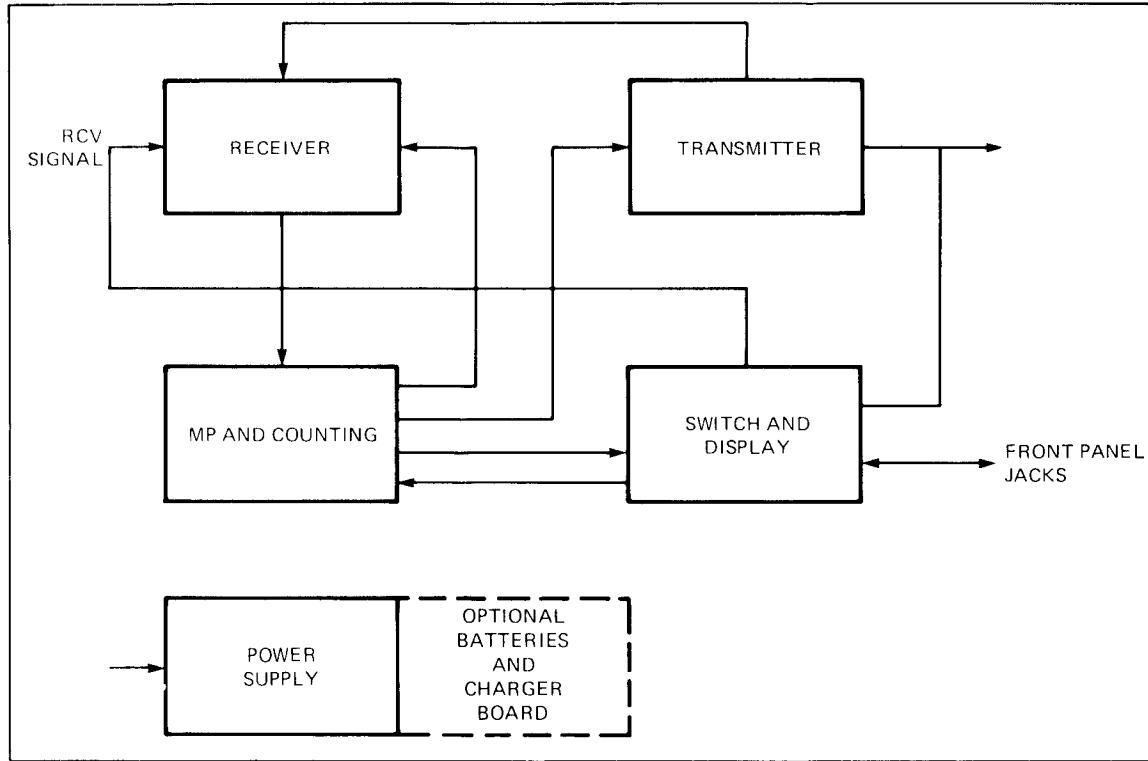


Figure 8-1. 4935A Main Block Diagram

8-1. GENERAL INFORMATION

8-2. The 4935A is a Transmission Impairment Measurement Set which provides both the test signals and measurement capabilities required for testing the transmission characteristics of communications lines. Functionally the 4935A consists of six parts:

The microprocessor/controller processes data from the receiver and controls counting functions and general operation of the instrument.

The receiver collects and processes test signals.

The transmitter generates test signals for making measurements.

The switchboard/display interfaces with communication lines and the operator.

The power supply provides power for the 4935A.

The charger controls battery operation.

8-3. The microprocessor and counting section is the heart of the 4935A. The microprocessor provides control and sequencing functions for all measurements. The counting circuitry provides impulse noise detector processing, frequency measurement, and drop-out detection.

8-4. The receiver processes signals, monitors frequency levels, and provides signals to the microprocessor and counting circuits. Ac input from the switch board or transmitter board is filtered and autoranged by the receiver. It detects full wave average or quasi-rms level of the signal. Then a pulse stream with the frequency proportional to the level detected is sent to the microprocessor and counters. It also sends information to the microprocessor if the incoming signal exceeds preset thresholds.

8-5. The transmitter receives frequency and signal information from the microprocessor, synthesizes the appropriate waveform, and sends it out through the switch board which provides a transmit monitor signal to the receiver board. In several measurement modes the transmitter has no output signal but is quiet terminated.

8-6. The switch and display circuits have four major functions. First to provide data storage and drive for the segment display and the annunciator LEDs. Second connect the front panel membrane switches to the microprocessor and counting circuits. Third, provide an audio amplifier and speaker, to monitor the received signal and beep generating circuit signal when a touch button is pressed. Fourth, connect the front panel jacks to the transmitter and receiver after selection of the proper impedances. Also provides dial connections and hold currents as required, receiver termination selections are routed to the microprocessor and control circuits.

8-7. The power supply provides +5 V at 600 mA and ± 14 V at 200 mA. Options 001 and 003 add batteries and a battery charger board to the power supply.

8-8. HOW MEASUREMENTS ARE MADE

8-9. This section describes how the 4935A makes measurements and conditions that can be expected during normal operation. Table 8-1 summarizes some of this information.

Table 8-1. Measurements Summary

MEASUREMENT	INPUT SOURCE SELECTED			NOTCH FILTER		DETECTORS USED				TRANSMIT FILTER	XMIT MONITOR SOURCE	S1 A4 U40 (1)	S0 A4 U40 (16)
	A3JU3 PIN			A3JU3		A3U8							
	16	15		IN/ OUT	PIN 14	Q2 PIN 11	Q1 PIN 10	Q0 PIN 2					
Level and Frequency TRMT Display	Xmit Monitor	1	0	Out	1	AVG	1	0	T	Wideband LPF	Power Amp Output	0	0
	RCV Display	Input Transformer	1	1	Out	1	AVG	1	0	T	Wideband LPF	Gnd	0
Noise TRMT Display	Xmit Monitor	1	0	Out	1	AVG	1	0	T	Gnd	Wideband LPF	1	1
	RCV Display	Input Transformer	1	1	Out	1	QRMS	0	1	T	Gnd	Wideband LPF	1
Noise w/Tone TRMT Display	Xmit Monitor	1	0	Out	1	Avg	1	0	T	Wideband LPF	Power Amp Output	0	0
	RCV Display	Input Transformer	1	1	In	0	QRMS	0	1	T	Wideband LPF	Gnd	0
Signal to Noise TRMT Display	Xmit Monitor	1	0	Out	1	Avg	1	0	T	Wideband LPF	Power Amp Output	0	0
	RCV Display Signal	Input Transformer	1	1	In	0	Avg	Toggling at ≈ 1 Hz		Wideband LPF	Gnd	0	1
		Noise	Input Transformer	1	1	Out	1			QRMS	Wideband LPF	Gnd	0
Impulse Noise TRMT Display	Xmit Monitor	1	0	Out	1	Avg	1	0	1	Wideband LPF	Power Amp Output	0	0
	RCV Display	Input Transformer	1	1	In	0	Avg	1	0	1	Wideband LPF	Gnd	0
Noise to Ground TRMT	Xmit Monitor	1	0	Out	1	Avg	1	0	T	Gnd	Wideband LPF	1	1
	RCV	Signal to Gnd	0	1	Out	1	QRMS	0	1	T	Gnd	Wideband LPF	1
P/AR TRMT Display	Xmit Monitor	1	0	Out	1	Avg	1	0	T	Wideband LPF	Power Amp Output	1	0
	RCV Display	Input Transformer	1	1	Out	1	Avg QRMS P/AR Peak	Toggling at ≈ 1 Hz		5 kHz LPF	Power Amp Output	1	0

T = toggling

8-10. Level And Frequency

8-11. Once the frequency is selected on the front panel and the level adjusted (use the OUTPUT LEVEL knob), the transmitter generates the appropriate sinewave. The level measurement is made in the loop-around path on the receiver board. The loop-around path selects the wideband low pass filter and the transmitter output to make its measurement. When monitoring the transmit signal, no frequency measurement is made. If the input frequency and the output frequency are different, the transmitter circuit should be repaired.

8-12. DISPLAY RCV: The receiver measures the level and frequency of a balanced input signal from the front panel RCV 310 jack. The receiver signal path is as follows:

- Balanced input through input transformer
- Notch filter out
- 25 dB amp switched in when input signal is less than .5 mVRMS
- Autorange switched in
- Average detector selected
- Loop-around path grounded

8-13. Noise

8-14. DISPLAY TRMT: The transmitter provides a quiet termination for the line. The input to the power amp is grounded (no output current through the transmit transformer). The synthesis of the output waveform is stopped since the phase-step latches are set to zero.

8-15. DISPLAY RCV: The receiver measures the level (not frequency) of the input to the front panel RCV jacks. The receiver signal path is as follows:

- Balanced input through input transformer
- Notch filter out
- 25 dB amp switched in when input signal is less than .5 mVRMS
- Autorange switched in
- Noise filter selected and displayed on front panel
- QRMS detector selected

8-16. Noise With Tone

8-17. DISPLAY TRMT: The transmitter synthesizes a 1004 Hz signal set by the OUTPUT LEVEL control. The wideband low pass filter is selected and the loop-around path monitors the output of the power amplifier.

8-18. DISPLAY RCV: The receiver measures the level and frequency signal from the front panel RCV jack. The level is measured with the 1004 Hz signal notched out. Frequency measurements occur only when the 4935A is setup with DISPLAY-RCV, NOISE WITH TONE, and LEVEL FREQUENCY modes. The signal path is as follows:

- Balanced input through the input transformer
- Notch filter in
- 25 dB amp switched in when input signal is less than .5 mVRMS
- Autorange switched in
- Noise filter selected on front panel
- QRMS detector selected

8-19. Signal To Noise

8-20. DISPLAY TRMT: Transmitter synthesizes a 1004 Hz sinewave whose level is set by the front panel OUTPUT LEVEL control. The wideband low pass filter is selected and the loop-around path monitors the power amplifier output.

8-21. DISPLAY RCV: The 4935A measures the signal-to-noise ratio of the signal input to the front panel RCV (1004 Hz is assumed). The level of the entire input signal (1004 Hz plus noise) is measured through the average detector. Second, the 1004 Hz signal is notched out and the remaining noise measured with the QRMS detector through the noise filter selected. Finally, the microprocessor calculates the signal-to-noise ratio on the right display. The receiver path is as follows:

- Balanced input through input transformer
- Notch filter in
- 25 dB amp switched in when input signal is less than .5 mVRMS
- Autorange switched in
- Noise filter selected and displayed on front panel
- QRMS or AVG detector selected as needed
 - QRMS for noise measurements
 - AVG for hold tone to measure signal level
- Microprocessor computes level

8-22. Impulse Noise

8-23. DISPLAY TRMT: The transmitter synthesizes a 1004 Hz sinewave. For the C-message and 3 kHz flat filters, the output level is set by adjusting the OUTPUT LEVEL control. The wideband low pass filter is switched in. For measurements using the other filters, the loop-around signal path is connected to ground.

8-24. DISPLAY RCV: The receiver monitors the level of the input signal through the selected noise filter. The 1004 Hz component of the signal is notched out and the residual noise routed through the selected noise filter. The noise is amplified by the autorange circuit which is set according to the 10's digit of the low threshold level selected. This enables the user to set the autorange to a desired state while troubleshooting the receiver.

Table 8-2. Noise Amplification

10's DIGIT OF LOW THRESHOLD	AUTORANGE AMPLIFICATION
3×	60 dB
4×	50 dB
5×	40 dB
6×	30 dB
7×	20 dB
8×	10 dB
9×	0 dB
10×	-10 dB

8-25. After being autoranged, the noise is full-wave rectified and sent to the impulse noise comparators where it is compared to three preset thresholds. These thresholds are set by the microprocessor through the receiver board D-to-A converter and associated circuitry. Outputs of the comparators go to the microprocessor and counting circuit where they are processed to limit the repetition rate to about 8 per second and counted by the microprocessor. The processor keeps a running total of the number of counts from each comparator and also keeps track of the test time interval. Receiver signal path is as follows:

Balanced input through input transformer.

Notch filter in.

25 dB amp out.

Noise filter selected from and displayed on the front panel.

Autorange set by 10's digit of Low Threshold.

An average detector is selected but not used. The threshold detector circuitry is used instead of the detector-select-MUX and voltage-to-frequency converter.

Loop-around path input grounded (RCV display).

Loop-around path input monitors transmitter output (TRMT display).

8-26. Noise-To-Ground (Standard and Option 001)

8-27. DISPLAY TRMT: The transmitter provides a quiet termination for the line. Input to the power amp is grounded.

8-28. DISPLAY RCV: The receiver measures the common mode (to ground) input signal from the front panel RCV 310 jacks. The receiver input (in RCV display) is from the noise-to-ground input source. With the exception of the input source selected, noise-to-ground mode works in the same way as the noise measurement mode.

8-29. Peak-To-Average Ratio: P/AR (Options 002 and 003)

8-30. DISPLAY TRMT: The transmitter synthesizes the P/AR signal defined in Bell Publication 41009.

8-31. DISPLAY RCV: The receiver measures the signal input to the 4935A front panel jacks. It measures the total signal level through the QRMS detector to ensure that the received signal is within the proper level range. The signal level is measured by the average detector and peak latch. The comparison of these two measurements gives the peak-to-average ratio (P/AR).

The receiver signal path is as follows:

Balanced input through input transformer in DISPLAY RCV

Notch Filter out

25 dB amp out

Detector selected varies

Loop-around path input is from power amp output in DISPLAY TRMT

Loop-around path input is from output in DISPLAY RCV

8-32. FREQUENCY MEASUREMENT

8-33. Two counters are used to measure level and frequency. These counters are enabled by Port 5 bit 3 of the microprocessor and count pulses present for each counter. To select frequency, the microprocessor writes a 1 latch U12. Following the procedure given in the timing diagram found in figure 8-4, steps 1 through 11, the microprocessor has enough information to calculate frequency. The counters are read by addressing and serially reading successive bits from the two counters. Counter no. 2 contains the number of 262 kHz clock transitions detected during the gating or "Open" interval. Counter no. 1 contains a count of the frequency cycles which occurred during this same interval. Frequency is the number of complete cycles in a unit time interval, i.e. 10 cycles in 60 msec would be $10 / .06 \text{ sec} = 167 \text{ Hz}$. The time interval is calculated from the number of counts in counter no. 2 by calculating $N / 262,144$ which is the amount of time it takes to

accumulate “N” counts of 262,144 Hz square wave. Let “Events” be the number of frequency cycles, and “Counts” the number of 262,144 Hz cycles, the frequency is calculated by the microprocessor using the formula:

$$\begin{aligned} \text{Frequency} &= \frac{\text{Counts}}{\text{Events}/262,144} \text{ Hz} \\ &= \frac{\text{Counts}}{\text{Events}} \times 262,144 \text{ Hz} \end{aligned}$$

The microprocessor will detect an error and blank the frequency display if:

1. The 262 kHz signal fails to fill Counter no. 2 to the 1/4th full condition in approximately 63 milliseconds. This is an indication that the 262 kHz clock, NAND gate U17, or Counter no. 2 is not operating properly.
2. If the “Not Open” signal fails to toggle within 50 milliseconds, then this indicates that the frequency is not present or is less than 20 Hz.

8-34. LEVEL MEASUREMENT

8-35. Level measurement is “gated” by an internal timed loop in the microprocessor. The interval is accurately controlled by the microprocessor using the “Inhibit” command to counter no. 1 as shown in Figure 8-4 items 12 through 16.

8-36. There is no need to calculate the voltage-to-frequency converter output from the gated count since the ratio of counts is equal to the ratio of frequencies. The microprocessor reads the level counts. 10 v counts for the same 70 msec interval have been accumulated during calibration and have been stored in RAM for later recall. There are 4 inputs:

1. 10 Volt Reference
2. QRMS
3. AVE
4. PEAK detector signals

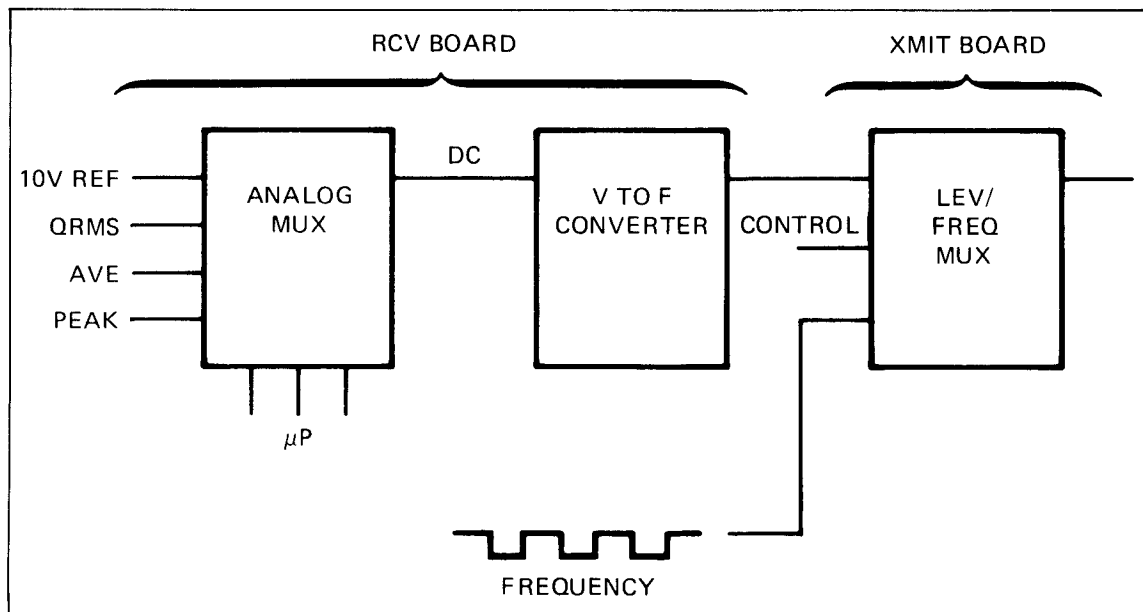


Figure 8-2. Voltage-To-Frequency Conversion Characteristics

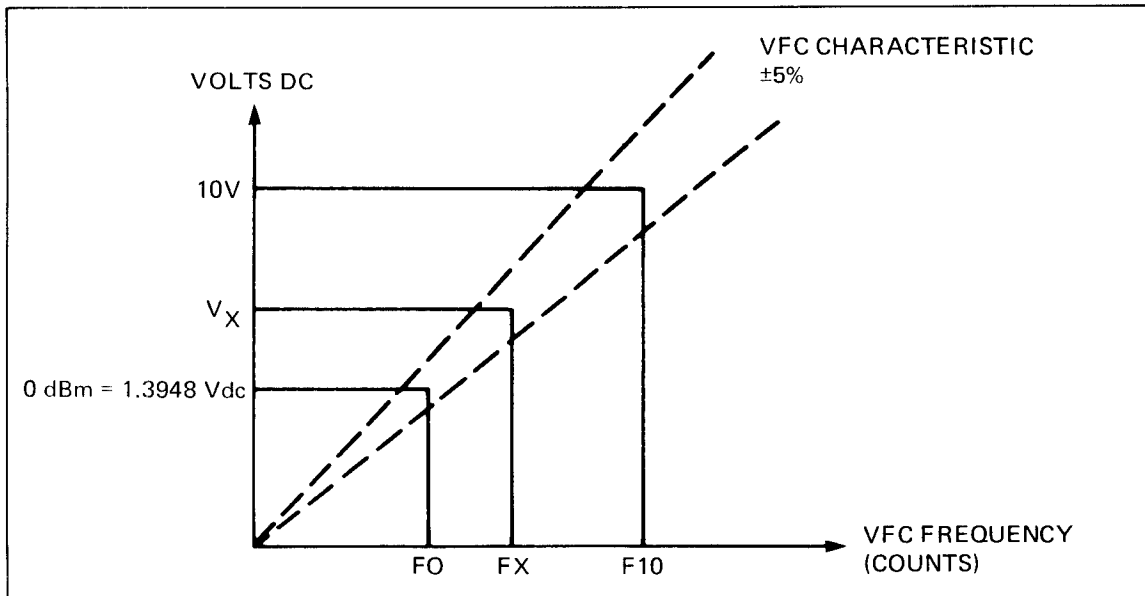


Figure 8-3. Voltage-to-Frequency Conversion Output

8-37. These dc signals are selected and routed to the voltage-to-frequency converter. The voltage-to-frequency converter is linear and the 10 volt reference signal is very accurate. The 10 volt signal is used to recalibrate the V-To-F converter whenever a new measurement is selected. The 10 volt frequency is approximately equal to 60 kHz. Assume that the 10 volt frequency is exactly 60 kHz. Then if detector output is 3 volts, the V-To-F frequency will be exactly $3/10 \times 60 \text{ kHz} = 18000 \text{ Hz}$. The number of 3 volt-counts in 70 milliseconds will be $18000 \times .070 = 1260$ counts.

8-38. HOW TO COMPUTE FREQUENCY AND LEVEL MEASUREMENT

8-39. Level Calculation Example

8-40. The 10 volt reference level in dBm is:

$$20 \log \frac{10 \text{ volts}}{1.3948 \text{ volts}} = 17.1 \text{ dBm}$$

Also,

$$\frac{10 \text{ volts}}{v_x} = \frac{f_{10} \text{ volts}}{f_x} = \frac{10 \text{ volt counts}}{v_x \text{ counts}}$$

The level in dBm is calculated by the microprocessor as follows:

$$v_x(\text{dBm}) = 17 - 20 \log_{10} \frac{10 \text{ volt counts}}{v_x \text{ counts}}$$

For a detector voltage of 3 volts the counts in a .070 sec interval would be 1260 counts. Similarly, the 10 volt signal would result in a count of $60,000 \times .070 \text{ sec}$ or 4200 counts.

$$17.1 - 20 \log_{10} \frac{4200}{1260} = 6.65 \text{ dBm}$$

If the microprocessor has added twenty dB of gain to get the signal within the 1 volt to 5 volt level “window,” the microprocessor will subtract 20 dB from the 6.65 dBm signal and display.

$$6.65 - 20 = -13.3 \text{ dBm}$$

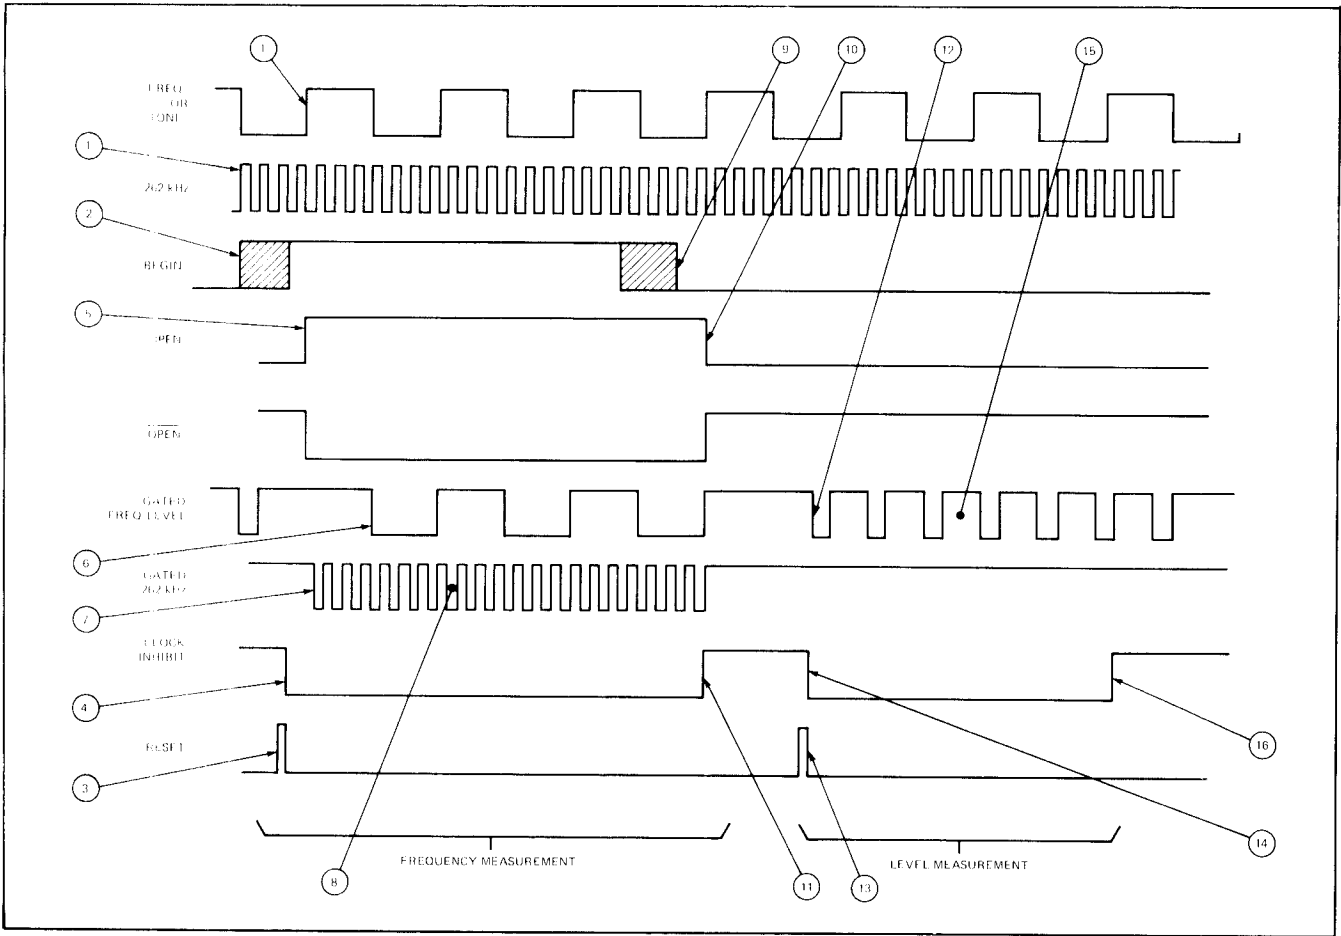


Figure 8-4. Frequency and Level Measurement Timing

8-41. To measure level and frequency, the microprocessor autoranges the signal until it is within a 14dB window (approximately 6 to 30 kHz from the V-to-F converter in the detector circuit). The following is a description of the level and frequency measurement.

1. Schmitt triggers U25A and U25B square the autoranged sinewave. If a tone frequency is to be measured, for example, 1000 Hz in noise-with-tone measurement, the microprocessor selects it by writing a "0" to Q3 of latch U11. This signal must be intercepted prior to the notch filter for measurement.
2. The start command is generated by writing a "one" to Q1 of latch U11.
3. The microprocessor U6 pin 29 resets counters 1 and 2.
4. The microprocessor U6 pin 30 enables counters 1 and 2 to begin counting.
5. The "Open" signal is clocked out of RS flip-flop U18 on the next rising edge of the frequency waveform. This signal is generated to ensure that counting takes place for exactly an integer number of frequency cycles.
6. The "Open" signal is used to gate the frequency signal through NAND gate U16B and into pin 3 of counter no. 1.
7. The "Open" signal also gates the 262 kHz clock through NAND gate U17C and into pin 3 of counter no. 2.

8. The microprocessor monitors the output of the 2nd most significant bit of counter no. 2 until it senses that this counter is 1/4th full of transitions of the 262 kHz clock (approximately 60 msec). It monitors the 15th bit of the counter by writing "1110" to the counter inputs ABCD and detects the change from "0" to "1" by reading the counter output.
9. After the microprocessor senses the "1/4th full" condition, it clears the "Begin" command.
10. The next positive transition of the frequency waveform clears the "Open" line and stops the waveform from being gated to the counters.
11. The microprocessor monitors the "not open" signal through pin 2 of tri-state buffer U13. When it detects that the "Open" line has cleared, it inhibits the counters by writing a "1" to Port 5, Bit 3.
12. "LEVEL" counts are routed to the counter by writing a "0" to Q3 of register U12. The microprocessor stores the number of counts from counter no. 1 and the number of 262 kHz pulses from counter no. 2 for later use in computing the frequency of the input signal. The microprocessor next measures the level of the input signal by measuring the frequency of the V-to-F converter from the detector circuit as follows:
13. The counters are reset by microprocessor.
14. The inhibit command to the counters starts counter no. 1 counting pulses.
15. Counters accumulate frequency counts at a rate proportional to the input level.
16. After an interval 70 msec., the microprocessor stops the counting by writing a 1 to the inhibit line of counter no. 1. This count is proportional to the level of the input signal.

8-42. CONTROL THEORY OF OPERATION

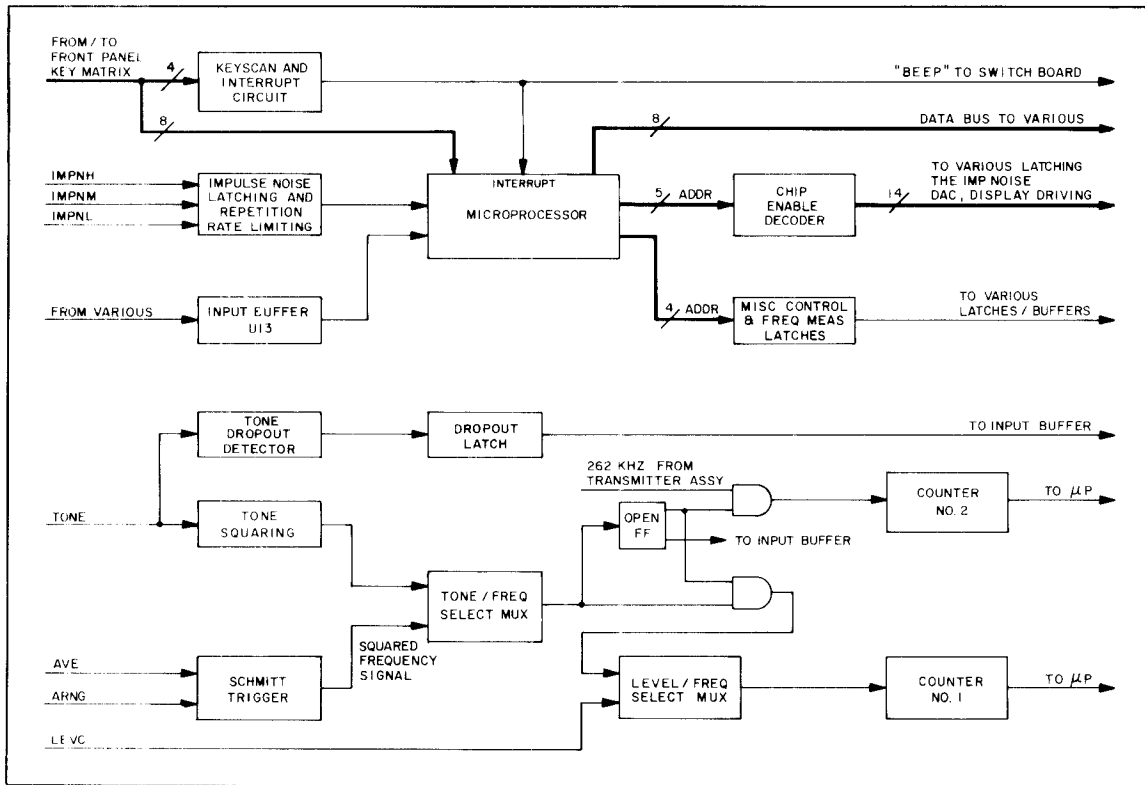


Figure 8-5. Control Circuitry Block Diagram

8-43. The center of the control circuitry is the microprocessor. It has 4K bytes of onboard ROM, 128 bytes of RAM, a built in clock circuit, four 8 bit bidirectional I/O ports, and interrupt and timer functions. There are six major flows of information between the operator, the microprocessor, and the rest of the instrument.

8-44. MICROPROCESSOR TO INSTRUMENT

8-45. System Latches

8-46 The microprocessor controls the 4935A through system latches. System latch data comes on the data bus from the processor I/O. The latch strobes are activated by the chip enable decoder via I/O port 4. Strobes for the latches are provided by the chip enable decoder A4U7 from inputs supplied by the microprocessor through output port 4. There are six system latches.

1. The phase-step latches (A4U26-A4U30) control the transmitter output frequency. They provide select lines for the output waveform and transmit monitor multiplexers.
2. The input select latch (A3U7) controls the set up of the input circuitry through analog switches. It selects the input source (balanced input, noise-to-ground, or transmit monitor), determines switching in or out of notch filter, and selects switching in or out of 25 dB amp.
3. The filter select latch (A3U11) controls the filter select MUX which determines which filter is selected.
4. The autorange latch (A3U17) sets the autorange circuit gain through the autorange multiplexer (A3U39) and analog switch (U50).

5. The detector select latch (A3U8) selects which detector to use for level measurements. It is also used by the diagnostic processor to check the impulse noise detector's digital-to-analog converter.
6. The impulse noise DAC latch (A3U6) sets the comparison thresholds for impulse noise measurements.

8-47. There are two additional latches used in the level and frequency measurement process. They are the miscellaneous control latch (A4U12) and the frequency measurement control latch A4U11. How these latches work is described in paragraph 8-38, How to Compute Level and Frequency.

8-48. INSTRUMENT TO MICROPROCESSOR

8-49. The microprocessor receives inputs from many parts of the 4935A.

1. The option and miscellaneous sense latch provides the microprocessor with the following information:
 - a. D0 reads the state of the open line during frequency measurement.
 - b. D1 reads the state of the tone dropout latch.
 - c. D3 and D2 read the receiver impedance setting from the front panel.
 - d. D4, D5, and D6 read the instrument option number.
 - e. D7 is used with the diagnostic processor from the Diagnostic Service kit to enable the signature analysis routines.
2. The level and frequency measurement counters, see paragraph 8-38, How to Compute Level and Frequency, for an explanation.
3. The impulse noise latches, see paragraph 8-69 for an explanation.

8-50. The microprocessor has internal circuitry which senses power up and causes a reset. Reset can also be caused by grounding the processor reset line.

8-51. OPERATOR TO MICROPROCESSOR

8-52. Keyboard Interrupt

8-53. The microprocessor senses operator commands through I/O port 0, its own interrupt line, and the keyscan interrupt circuitry. The eight lines of microprocessor I/O port 0 form a four by four key matrix on the front panel. The four least significant bits of this port feed into NAND gate U20. When a hex "OF" is written into the keys, a key closure causes an interrupt via external interrupt of the microprocessor. A 50 millisecond one-shot and a D type flip-flop form the switch debounce circuitry. Bit 2 of I/O Port 5 is programmed by the microprocessor to reset the interrupt latch after the key has been read.

8-54. Receiver Impedance Switches

8-55. The receiver impedance selected on the front panel setup switches is sensed through the option and miscellaneous sense latch. The microprocessor uses the receiver impedance to compute the power level of the input signal.

8-56. When the 4935A is in BRG receive impedance mode, the receiver has a high impedance input. However, the received level is still computed from the input voltage per the receive impedance selected on the setup switches. For correct level measurement the proper receive impedance **MUST BE SELECTED**.

8-57. MICROPROCESSOR TO OPERATOR**8-58. Displays**

8-59. The microprocessor sends information to the operator through the front panel numeric displays and annunciators. The displays and annunciators are driven by two display decoder/drivers on the switch board which provide all multiplexing and drive requirements. The display or the annunciator decoder/drivers are selected by the chip enable decoder outputs DISP (CE0) or ANNUN (CE1) A0 of I/O port 4. If control or data is input to the display chips through the system data bus from I/O port 1 of the microprocessor. The microprocessor writes to the display system chips by sending a control word to the chip (A0 = LOGIC 0 AND CE1 OR CE0 PULSING).

8-60. INSTRUMENT TO OPERATOR

8-61. There are two lines of communication from the instrument to the operator, note that neither is microprocessor controlled.

8-62. Monitor Amp

8-63. An audio amplifier and speaker are provided to monitor the test signal being measured by the 4935A receiver. The monitor amplifier takes its input from the output of the receiver autorange circuit. The monitor amplifier, monitor volume control and speaker are located on the switch board.

8-64. Beep Generator

8-65. The beep circuit located on the switch board provides audio feedback to alert the operator when a membrane switch closure has been sensed. Whenever a front panel membrane switch is pressed the keyboard interrupt circuitry provides both an interrupt for the microprocessor and a pulse causing an audible beep from the monitor amplifier and speaker.

8-66. OPERATOR TO INSTRUMENT

8-67. There are several operator commands which cannot be sensed by the microprocessor including the input NOR and REV buttons, the set up buttons (excluding RCV impedance select), the OUTPUT LEVEL control, and the MONITOR VOLUME control.

8-68. MISCELLANEOUS CIRCUITRY

8-69. **IMPULSE NOISE DETECTORS:** The impulse noise latches perform two functions for each of 3 threshold signals from the receiver. Non-retriggerable monostable one-shots limit the count rate to 8 per second. Edge triggered latches hold the count for the microprocessor. The microprocessor reads the latches through I/O port 5 and resets them through I/O port 4.

8-70. **MISCELLANEOUS ANALOG:** The Schmitt trigger circuit squares the incoming signal during frequency measurements. Schmitt trigger hysteresis is required for good noise rejection. The amount of hysteresis is proportional to the average detector output to provide wider hysteresis for larger signals.

8-71. **TONE SQUARING AND TONE DROPOUT:** The 1004 Hz tone dropout and squaring circuitry measures the 1004 Hz frequency tone in noise-with-tone, signal-to-noise, or impulse noise measurements, and detects drops in the tone signal below -46 dB. The notch filter removes the 1004 Hz tone before autoranging, the tone signal is intercepted before the notch filter and amplified through a bandpass filter before being routed to the transmitter board.

8-72. To measure the hold tone of 1004 Hz in noise-with-tone, a squared 1004 Hz waveform is selected by the microprocessor. The microprocessor determines if the hold tone is present and above -46 ± 2 dBm as follows:

1. The microprocessor sets the dropout latch through the frequency measurement and control latch.
2. The microprocessor waits for a short time.

3. If a tone signal is present and above -46 dBm then the tone dropout detector will reset the tone dropout latch.
4. The microprocessor reads the tone dropout latch through the option and miscellaneous sense latches to determine if the tone dropout latch was reset.
5. If the tone dropout latch was not reset, the microprocessor writes ERR 7 to the right-hand display.

8-73. RECEIVER THEORY OF OPERATION

8-74. The A3 receiver assembly contains all the circuits to do level measurements, background noise measurements and impulse noise measurements. All measurements are done by amplification, filtering and detection of the received signal.

8-75. The 4935A receiver can be divided into the following major circuits:

- a. I/O Switching/hold circuit/termination
- b. Input Select/notch filter/25 dB amp
- c. Noise filter
- d. Autorange amplifier
- e. Level detectors
- f. Impulse noise detectors

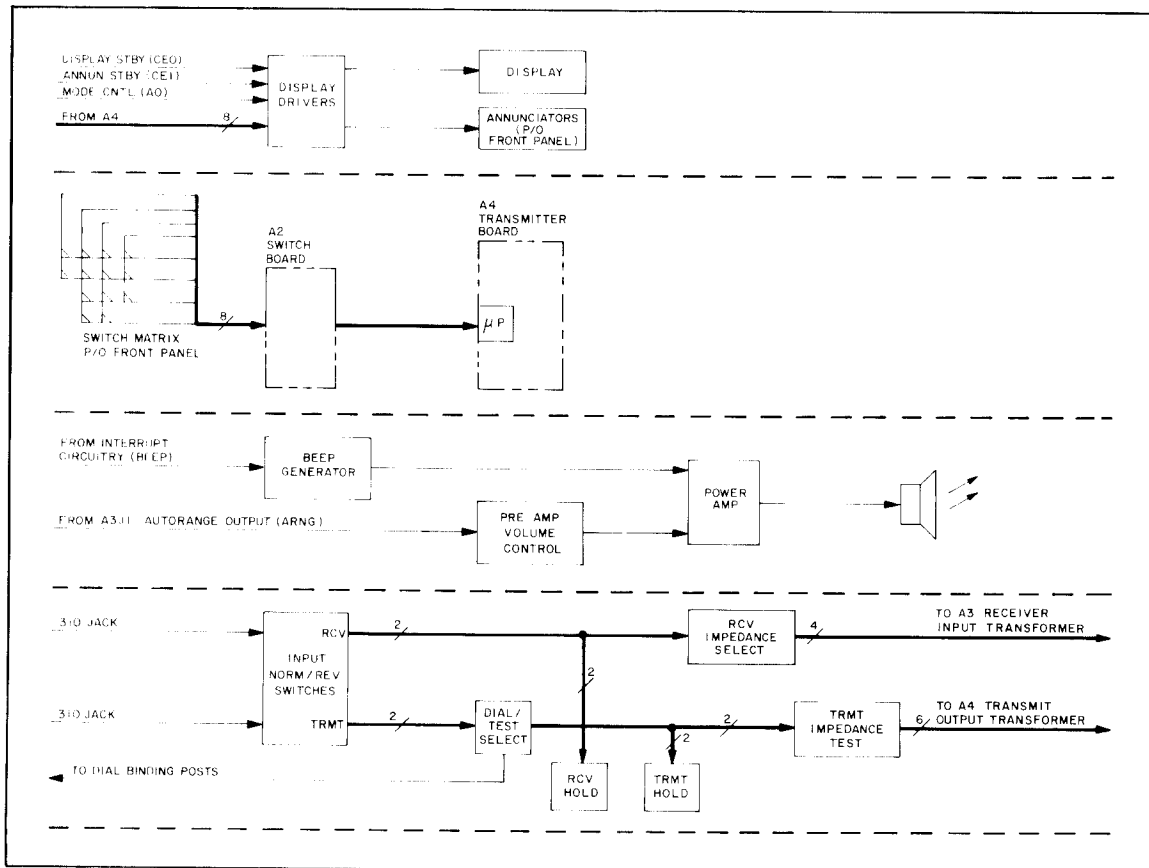


Figure 8-7. Switchboard Block Diagram

8-76. I/O Switching/Hold Circuits/Termination

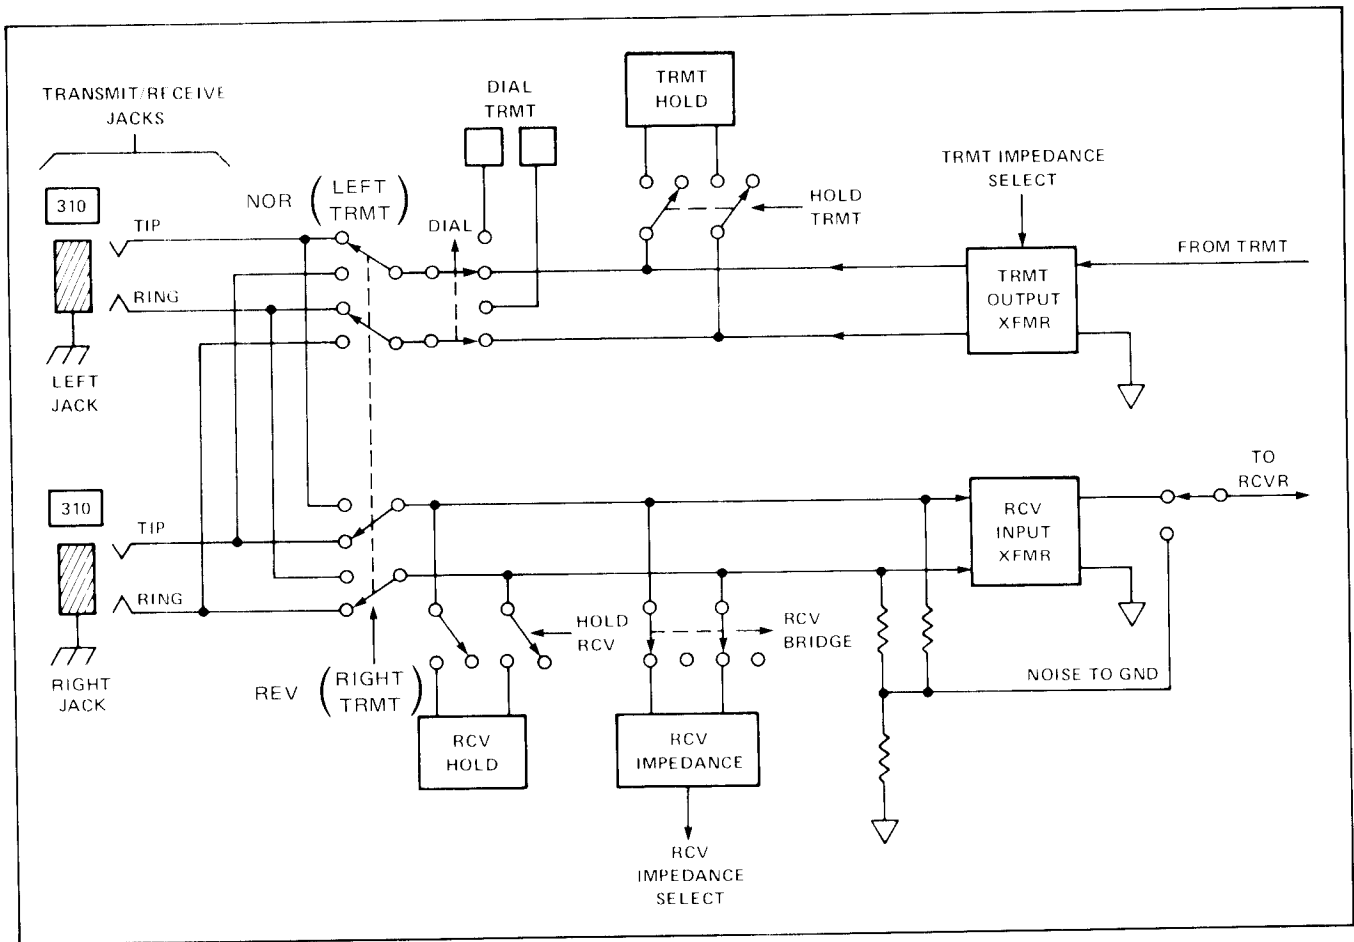


Figure 8-8. Input-Output Switching

8-77 INPUT-OUTPUT SWITCHING: The 4935A and telephone line to be tested are connected through the RCV/TRMT 310 jacks as shown in Figure 8-8. The NOR and REV buttons select switches select either the transmit or the receive function for the left 310 connectors, and the other function for the right 310 jack. In normal operation, only one of these ganged switches is in use at any one time. Engaging or disengaging both switches simultaneously creates a non-standard situation resulting in the transmitter being connected internally to the receiver (only at reversing switches, not through transmit monitor path).

8-78 DIAL AND TEST WITH HOLD: The 4935A has two hold coil circuits and a dial connector made up of two binding posts. The hold coil circuits sink 23 mA between tip and ring of a "wet" (dial-up) line to hold or "latch" the line during testing. Failure to engage the hold coil circuit on a "wet" line indicates an "on-hook condition" causing the telephone switching equipment to drop the line under test. The dial terminals are accessed by engaging the TRMT DIAL button in the setup section. Engaging TRMT DIAL connects the DIAL posts directly to the tip and ring of the transmit 310 jack and to the circuit under test. After dialing the number for the circuit to be tested and engaging the TRMT HOLD switch, the dialed line is connected to the 4935A by disengaging the TRMT DIAL switch. The line can be transferred to the receive input by depressing the RCV HOLD switch and transferring the line using the NOR and REV switches.

8-79 HOLD CIRCUIT: The hold circuit sinks a constant current of 23 mA or greater under dc bias voltages of either polarity. This current is maintained with 46 volts into 1700 ohms and draws less than 40 mA with 53 volts into 400 ohms.

8-80. Input Select/Notch Filter/25 dB Amp

8-81. INPUT/FILTER: The 4935A receiver can select any of 3 inputs:

1. A balanced input through the receiver input transformer,
2. The noise-to-ground input which senses common mode noise on the input,
3. The transmit monitor path which allows the receiver to measure the transmitted signal. Transient protection is provided.

8-82. An analog switch enables selection of either receiver signal or transmitter signal. Each signal can be routed through or by the notch filter. The 25 dB amplifier is dependent on the amplitude of the received signal, and may be bypassed by the microprocessor. A buffer amplifier delivers the signal to the weighting filters.

8-83. NOTCH FILTER: The notch filter consists of three, second order biquad notch filters. The first has the zero located at 995 Hz. The second has the zero at 1010 Hz. The third has the zero at 1025 Hz.

8-84. TONE MONITOR/1010 BANDPASS FILTER: The tone monitor path detects the holding tone loss in measurements. The signal is bandpass filtered, amplified and sent to the transmitter assembly.

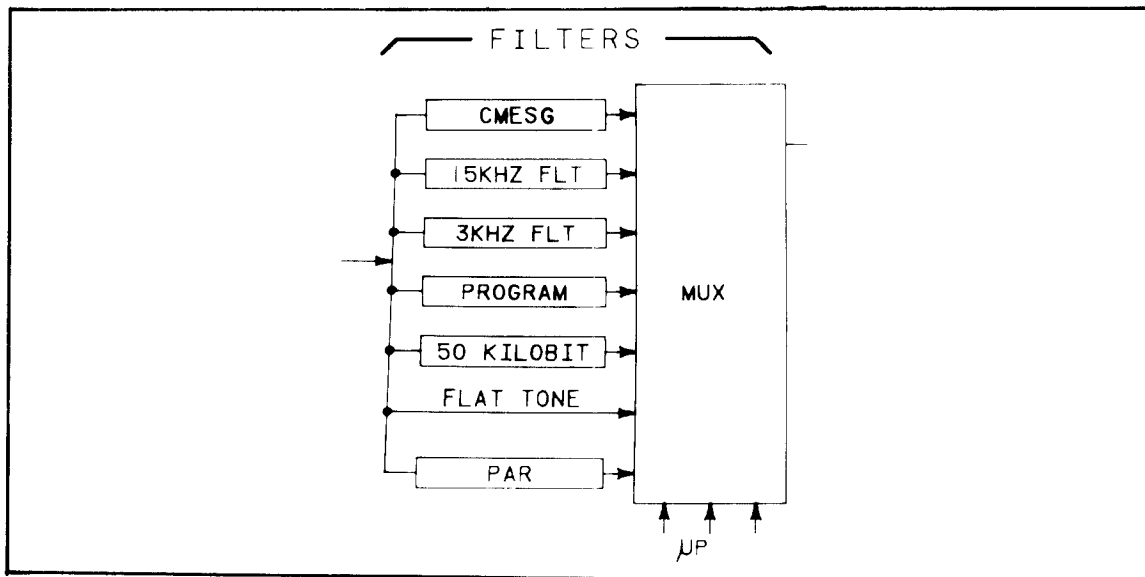


Figure 8-9. Filter Block Diagram

8-85. NOISE FILTER CIRCUITRY

8-86. FILTERS: There are 6 noise weighting filters.

- a. C-Message Filter
- b. Program Filter
- c. 3 kHz Flat Filter
- d. 15 kHz Flat Filter
- e. 50 K Bit Filter
- f. PAR Filter (Options 002 and 003 only)

8-87. C-MESSAGE FILTER: The C-Message filter consists of five second order networks. The first section is a high-pass network, the second is a band-pass, and the third, fourth and fifth are low-pass networks. Filter gain at 1 kHz is 0 dB.

8-88. PROGRAM FILTER: This filter has three second order low pass cascaded sections and one, second order high pass.

8-89. 3kHz FILTER: This is a second order Butterworth low pass filter. The 3 dB frequency is 3 kHz.

8-90. 15 kHz FILTER: This is a second order Butterworth low pass filter. The 3 dB frequency is 15 kHz.

8-91. 50 kBit FILTER: This filter consists of a high pass network, two low pass networks and a low pass network with a notch. It has a 3.3 dB attenuation at 30 kHz.

8-92. PAR FILTER (OPTION 002 and 003): The PAR filter consists of two band pass filters connected in series. The pole and zero frequencies are identical in both stages. The gain, at 1300 Hz in the first section, is 5.61 dB. In the second stage the gain is 4.78 dB.

8-93. The microprocessor controls the filter multiplexer's selection of the desired signal from the different filter outputs and routes it through a buffer amplifier to the autorange circuit.

8-94. AUTORANGE

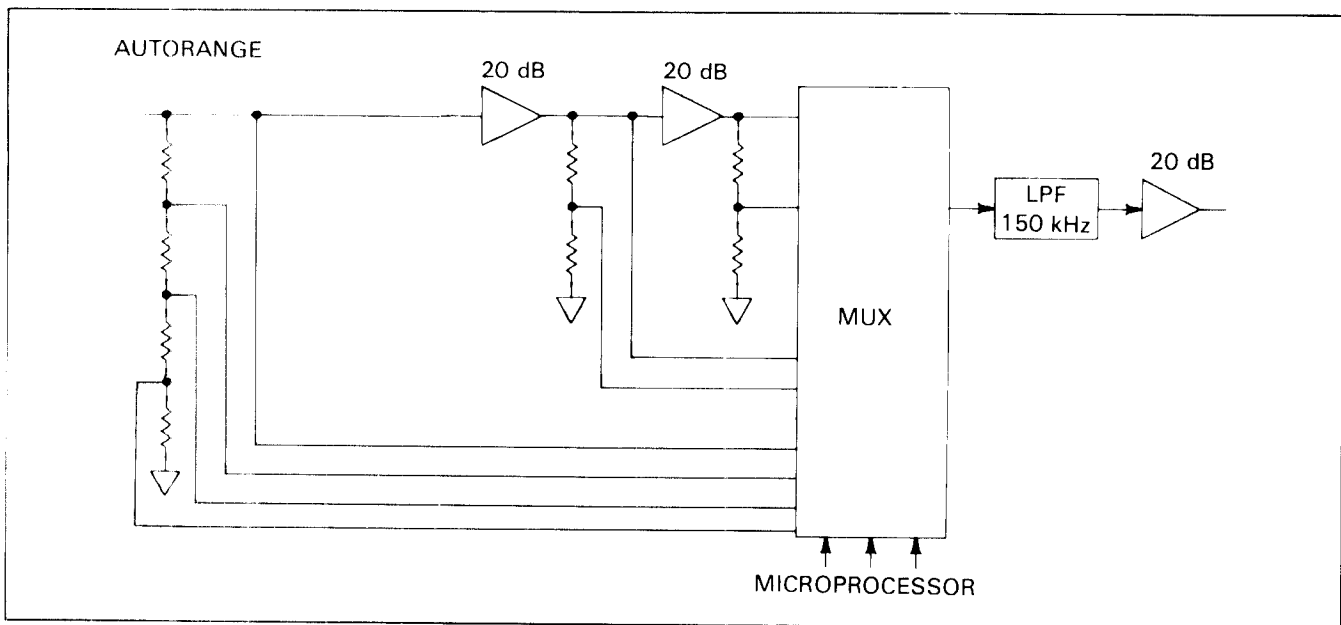


Figure 8-10. Autorange Block Diagram

8-95. The autorange circuit amplifies signals up to 60 dB in 10 dB steps, or attenuates them by 10 dB. The various gain states are software controlled. Determination of the correct state is determined by measuring the detector output voltage and changing the gain in 10 dB steps until the detector output falls within the dynamic range of the detector.

8-96. 150 kHz LOW PASS FILTER: The properly amplified signal is routed through the 150 kHz filter (3 dB). This filter is a sixth order Butterworth low pass filter. It is comprised of three second order stages connected in series.

8-97. Level Detectors

8-98. DETECTOR CIRCUIT: The detector circuits convert ac inputs to dc output levels proportional to the input signal level. The 4935A uses three different detectors: Fullwave average, QRMS, and a Peak Detector. All of the detectors require a full wave rectified signal.

- 8-99.
1. The full wave rectifier combines the input ac signal with a halfwave rectified signal of twice the peak amplitude to produce a full wave rectified signal. The average detector takes the full wave rectified signal and low pass filters it to produce a dc level output.
 2. The QRMS detector sums the peak and the average voltage signals. Different scaling factors are used for the peak and average levels, making the output of the Quasi-RMS detector approximately equal to the RMS value of the input waveform.
 3. The P/AR peak detector uses the fullwave rectifier, a non-inverting buffer and a peak detector to produce a dc level equal to the peak input voltage. The time constant of this detector is approximately one second. An analog multiplexer selects the desired detector signal and sends it to the voltage-to-frequency converter. At this stage the dc level is converted into a frequency measured by the control circuitry associated with the microprocessor. The displayed signal level is computed by the microprocessor according to the receiver impedance selected on the front panel. Although the voltage-to-frequency converter possesses excellent linearity, it lacks absolute accuracy. By measuring the voltage-to-frequency characteristics of the accurate 10 volt reference the required accuracy is obtained.

8-100. Impulse Noise Detectors

8-101. The impulse noise detectors compare the full wave rectified signal from the detector circuitry with the preset high mid and low thresholds. When the full wave rectified signal exceeds any preset threshold, that threshold comparator sends a signal to the control and counting section impulse noise latches. The preset thresholds are set as follows:

1. The tens digit of all thresholds is set by scaling the input voltage by setting the proper autorange state.
2. The ones digit of the low threshold is set by the impulse noise digital to analog convertor and the 10 volt reference.
3. The mid and high thresholds are automatically set at +4 and +8 dB higher than the low threshold by a voltage divider.

Open collector comparators do the comparisons and send individual signals for high, mid, and low thresholds to the receiver board.

8-102. TRANSMITTER

8-103. The transmitter circuit is responsible for digitally synthesizing the 4935A output signal. It takes inputs from the microprocessor through the data bus I/O port 1 which determines the frequency and type of output waveform. The transmitter circuit supplies outputs through a transformer to the switch board for the output 310 jacks and to the receiver circuit to internally monitor the transmitted signal through the transmitter monitor loop-around path.

8-104. Test Signal Generation Method

8-105. SINEWAVES: If the instantaneous voltage of a sinewave is sampled at many points in time along the wave, a series of numbers representing the wave is obtained. Each number represents the voltage of the sinewave at a single point in time. This series of numbers can be saved in ROM and later recalled by stepping through or scanning the ROM. Convert this series of numbers back to a series of voltage levels and the result is a stair step approximation of the original sinewave.

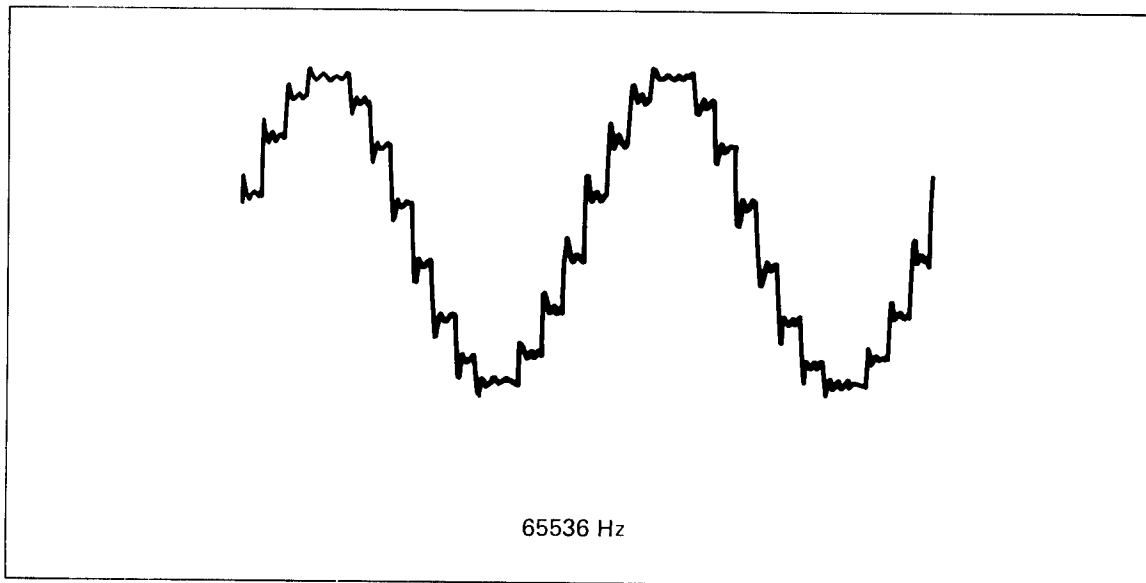


Figure 8-11. Stair Step Sinewave

8-106. A difference between the original sinewave and the stair-step approximation occurs only at frequencies higher than the original sinewave frequency. These high frequency distortion components can be eliminated with a filter, leaving a very good approximation of the original sinewave.

8-107. This is the principle used in the 4935A. A series of binary numbers in ROM represents a sinewave (or P/AR waveform when P/AR measurement is selected). The instrument scans the ROM and converts the numbers to voltage levels, filters out the high frequency distortion components, and amplifies the resulting waveform to provide the desired test signal.

8-108. FREQUENCY: The frequency of the sinewave depends on the rate at which the voltage numbers are changed and the number of steps needed to complete the waveform. In the 4935A the rate at which the voltages are changed the transmit clock frequency is constant at 2^{20} or 1048576 times per second. The frequency of the waveform is varied by changing the size of the steps through the ROM.

8-109. Assume that the ROM has 2^{20} or 1048576 locations. The address counter used to scan the ROM has 20 stages and can count to 2^{20} . By incrementing the address counter by one at each clock cycle, it will take 2^{20} to scan through the ROM and to produce a single cycle of sinewave. Since the voltage change rate (the transmit clock rate) is 2^{20} times per second, a 1 Hz sinewave is produced. The address counter is incremented by 2 each transmit clock cycle. In one second the ROM is scanned twice producing a 2 Hz sinewave. Increment the address counter by some number N each transmit clock cycle. In one second the ROM is scanned N times producing an N Hz sinewave.

8-110. The 4935A ROM has 2^{10} or 1024 locations. The 10 most significant bits of the address counter are used for the ROM. ROMs generally have 8 bit words available. The 4935A needs 10 bits of binary voltage value to keep waveform distortion to an acceptable level. The 8 most significant bits of the voltage value are saved in the first 1024 places in the ROM and the 2 least significant bits (ignoring extra bits) in the next 1024 locations in the ROM. The ROM is accessed twice for each voltage value. The 2 least significant bits are saved in an intermediate latch until the 8 most significant bits are available and the whole 10 bit number can be latched and presented together to the digital-to-analog conversion circuit which changes the binary number to a voltage value.

8-111. The 11th address bit is used to select whether the 8 most significant or 2 least significant bits are accessed. The 11th ROM address bit is driven by the transmit clock. When the clock is high, the 2 least significant bits are accessed and latched into the intermediate latch on the falling edge of the clock. When the clock goes low the 8 MSB's are accessed and latched (on rising clock edge) into the final latch where they are presented to the D-to-A converter. The D-to-A converter output is the stepped approximation of the desired wave in current form. The output of the current-to-voltage converter changes the current waveform to a voltage waveform.

8-112. The 4935A ROM contains 2 full waveforms: 1024 ten bit points of sinewave in 2048 locations and 1024 ten bit points of P/AR waveform in an additional 2048 locations. The desired waveform is selected by switching the 12th ROM address bit with the sine/P/AR select signal (clock select).

8-113. Circuit Description

8-114. There are seven circuits in the transmit signal generator.

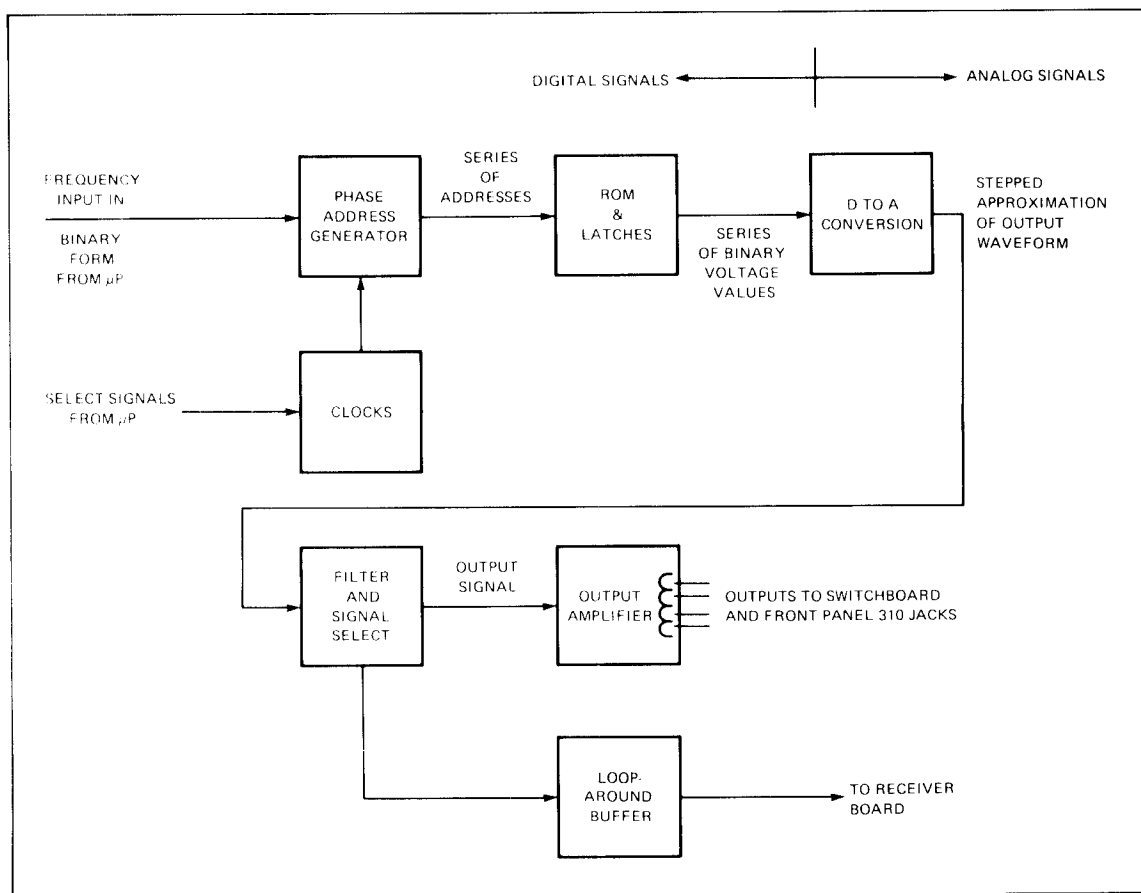


Figure 8-12. Transmitter Block Diagram

8-115. TRANSMIT CLOCK GENERATOR: The transmit clock generator provides the proper clock frequency to the phase address generator, waveform ROM and ROM latches. It also provides a 262 kHz signal to the microprocessor and counting circuit where it is used when measuring frequency. In the standard model, only the sine clock circuitry is provided.

8-116. In P/AR models (options 002 and 003) sine and P/AR clocks are provided as well as a multiplexer (U30). The P/AR sine select signal from U26 pin 1 (low = sine clock selected) determines which clock is enabled.

8-117. PHASE ADDRESS GENERATOR: The phase-step latches hold the binary value of the frequency. This value changes only if the frequency is changed. The adders add the phase-step size (the binary frequency value) to the old phase address to get a new phase address. The new phase address is latched into the phase address latch on the positive going transition of the clock line. The output of the phase address generator is a series of ROM addresses.

8-118. ROM AND LATCHES: The ROM and latches convert the series of addresses from the phase address generator and into a series of binary voltage values which represent the output waveform. These values are held in the voltage value latches. This section unpacks the 8 most significant bits and the 2 least significant bits of voltage data so that the D-to-A converter can get the entire 10 bits at one time.

8-119. DIGITAL TO ANALOG CONVERSION: The digital-to-analog conversion circuit takes the binary voltages from the voltage value latches and converts them to a series of step voltages approximating the output waveform. Both the D-to-A converter and current-to-voltage converter are in this circuit. The current to voltage converter converts the output of the D-to-A converter to a series of voltage, not current values.

8-120. FILTER AND SIGNAL SELECT: The output of the digital to analog conversion circuit is an approximation of the desired output. Unwanted high frequency components introduced by the step nature of the waveform must be filtered. The P/AR waveform is filtered by the 5 kHz low pass filter. The output select multiplexer selects the appropriate filter (or a ground input for "quiet termination") as the input to the power amplifier.

8-121. LOOP-AROUND CIRCUIT: The loop-around circuit provides the signal path used by the 4935A receiver to monitor the transmitted signal in the display transmit mode. The circuit has two signal paths. The first is from the power amplifier output stage, through the loop adjust amp, and the loop select MUX to the receiver board. The second comes from the wideband low pass filter and goes directly through the MUX to J1 and the receiver board. This path is used when the output is quiet terminated and the 4935A monitoring the fixed level sinewave being generated.

8-122. To suppress the loop-around signal, the transmit line is grounded through the loop select MUX. The loop select lines are the same as the output select MUX address lines. With quiet termination, the noise should be below 20 mv.

8-123. OUTPUT AMPLIFIER CIRCUIT: The output power amplifier is an op amp driven complementary-symmetry output stage which provides the amplification necessary for a +13 dBm output level. The OUTPUT LEVEL control provides a full dynamic range of -40 dBm to +13 dBm. The display blanks to a "+" sign to indicate the signal level is too high (overrange). When generating a P/AR waveform, the P/AR signal crest factor causes the output to overrange at +3 dBm.

8-124. TRANSMIT IMPEDANCE/HOLD/DIAL/OUTPUT ROUTING: The output amplifier circuit drives a transformer with balanced outputs at each of the 3 impedances. The proper transmitter impedance is set from the front panel TRMT impedance set up switches.

8-125. If selected, a transmit hold circuit is connected across the transmit output lines. This hold circuit is similar to the receiver hold circuit, for an explanation of the hold circuit and the dial terminals see the receiver theory of operation. Transmit dial and hold circuits are selected by the front panel TRMT set up switches. Finally, the transmitter signal is routed to whichever front panel 310 jack is selected by the front panel NOR and REV switches.

8-126. POWER SUPPLY THEORY

8-127. The 4935A power supply is powered by ac lines or rechargeable batteries (Option 001 or 003). The power supplies provide +5 v at ± 600 mA and ± 14 v at ± 200 mA to the rest of the instrument.

There are 3 major functional sections of the power supply

1. The ac power line supplies.
2. The regulator sections.
3. The overvoltage protection circuitry

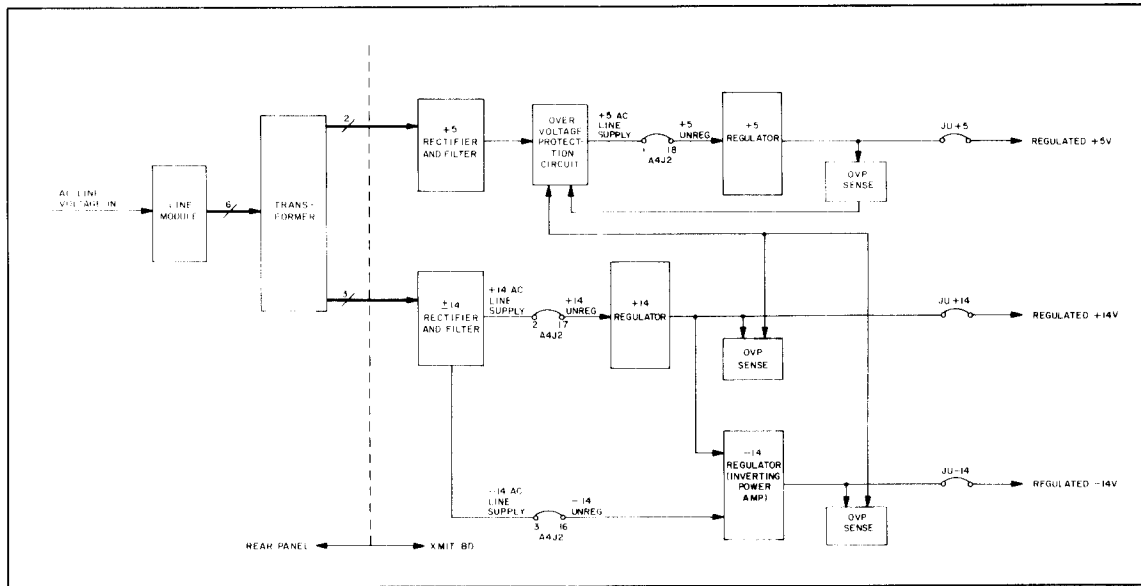


Figure 8-13. Power Supply Block Diagram

8-128. AC Line Supplies

8-129. The line module filters noise, has protective fuses, and sets the line voltage as ac line power is brought into the power supply. From the line module ac power goes to the transformer which provides 10 vac (9-11) for the +5 v supply and 35 (33-39) vac center tapped for positive and negative 14 volt supplies.

8-130. The 9-11 vac secondary is full wave bridge rectified and is capacitively filtered to provide 10-14 vdc unregulated to the +5 volt regulator. The 35 v C-T is full wave rectified and capacitively filtered to provide both ± 19 to 27 vdc unregulated for the ± 14 vdc supplies.



Voltages are present at the back panel and power supply whenever the units are plugged in whether the power switches are in ON or STBY.

8-131. Regulators

8-132. Separate regulator circuits are provided for +5 v and ± 14 v supplies. The +5 v and +14 v regulators are similar in form. The -14 v regulator tracks the +14 v supply; it resembles a power amplifier with a gain of -1 with input from the +14 regulated supply.

8-133. +5 REGULATOR: The +5 v supply is series regulated with a pass transistor mounted on the rear panel. A regulator chip provides the reference voltage, an error amplifier, shut down circuitry, and base drive for the pass transistor. When the error amplifier senses that the output voltage is low it sinks current through the base of the pass transistor turning it on until the output voltage rises to an acceptable level.

8-134. +14 V REGULATOR: The +14 v regulator has a +14 v output voltage but otherwise is the same as the +5 v regulator circuit.

8-135. -14 V REGULATOR: The -14 v regulator resembles a unity gain inverting amplifier with drive in only the negative direction. Input comes from the +14 v supply, so any malfunction in the +14 v regulator supply will affect in the -14 v regulated supply.

8-136. There are 2 unusual features in this supply. First, a (local) zener voltage regulator provides the +V_{cc} supply for the op amp to avoid excessive supply voltage since the ± 14 vac line supplies provide more than 36 v between them. Second, a diode helps the op amp output to swing as close to the negative V_{cc} supply rail as possible.

8-137. OVERVOLTAGE PROTECTION CIRCUIT: The overvoltage protection circuit checks the voltage at 4 points in the power supply and shorts the +5 vac line supply if any of these voltages exceed normal levels. The +5 v regulated output, the +14 v regulated output and the unregulated +5 vac line supply voltages are checked with simple zener diode-series resistor sense circuits. The -14 v regulated output sense circuit is more complex although it performs the same function. When any abnormally high voltage is sensed a triac shorts the +5 vac line supply and the inline fuse blows shutting the instrument down.

8-138. JUMPERS: There are two sets of jumpers in the power supply. One set (JU+5, JU+14, and JU-14) isolates the regulated supply outputs from the rest of the instrument. This allows troubleshooting the power supply, under no load conditions, without endangering the rest of the instrument. The other set of jumpers goes into the first 3 pins of J2, they isolate the ac line supplies from the regulators to allow troubleshooting the ac line supplies and the OVP circuit. In battery units J2 connects the batteries and charger board to the ac line supplies and the regulators.

8-139. CHARGER BOARD THEORY OF OPERATION

8-140. The charger Board has three primary functions.

1. It connects the charging current to the batteries.
2. The charger board connects the batteries to the unregulated side of the power supply. The instrument must be unplugged to operate from the batteries.
3. If any battery voltage goes too low or if the ac power cord is plugged in, the batteries are disconnected from the unregulated side of the power supply and the ac line supplies are connected.

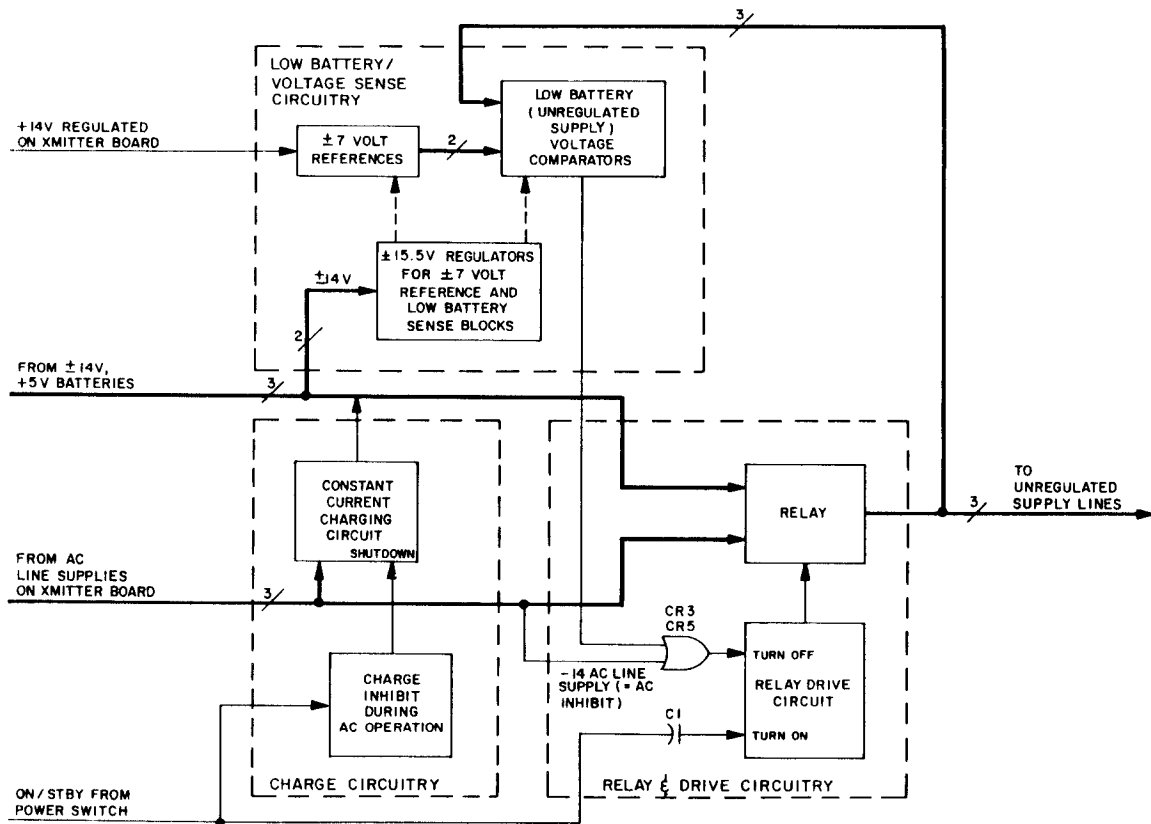


Figure 8-14. Charger Board Block Diagram

8-141. Battery Charging

8-142. There are three battery packs to charge. The ac line supply provides the necessary current to charge the batteries when the unit is plugged in and turned to STBY. The batteries are regulated at approximately the C/10 rate for each battery so overcharge poses no problem. When the power switch is turned on, the charge current is reduced to a trickle charge. Thus, full charging of the batteries takes place only in STBY.

8-143. The +14V current source circuit(Figure 8-36) is an example of the instrument charging circuits. The full charge current is supplied by Q1 through R20. CR21 and CR20 hold the voltage across R20 nearly constant which keeps the charge current nearly constant. When the instrument is on, no base current flows through R23 so Q1 is off, and therefore R22 provides a trickle charge.

8-144. Power Source Selection

8-145. Battery power or ac line power to the unregulated power supplies is selected through a relay. The battery supplies are selected by the relay whenever the batteries are charged, the power switch is on, and the instrument is unplugged. STBY mode switches the power to AC line power which sits at zero volts. If the battery voltages drop below $\pm 15V$ and/or $+5.75V$, the relay will switch to AC line power, effectively shutting the instrument off. Plugging in the instrument automatically selects the ac line power independent of the power switch setting.

8-146. Relay Drive Circuitry

8-147. The relay drive circuitry controls the operation of the relay (Figure 8-36) . Q2 energizes the relay when the battery option is selected. In this state Q3,R2,CR2,and R4 form a feedback loop keeping Q2 latched. The power switch input provides a transient to latch Q2(R5, C1). This transient is the transition switch between +5 battery and ground. When the power switch is on, the latch latches. Turn the power switch off, the feedback loop is broken, and Q2 is turned off. The only input to the drive circuit is the inhibit signal(through Q4) that turns Q2 off and then turns on transient.

8-148. Inhibit Circuit

8-149. When the instrument is connected to line voltage or if any battery voltage drops too low, the inhibit signal is activated.

8-150. To check the battery voltages, the 3 unregulated voltages are compared to reference voltages with open collector comparators. In battery mode these unregulated voltages will be battery voltages. The reference voltages are generated from the +14V regulated supplies.

8-151. Any of the comparators tripping will turn on the inhibit transistor Q5. Note that if the -15V ac line voltage is present, Q5 will be turned on through CR3 (thus, CR3 and CR5 effectively form an OR function). Note that the Low Battery Sense Circuit has a regulator for the power supplies formed by Q11 and Q9 because of the wide range of voltages seen at the ± 14 volt unregulated supplies.

8-152. When the power switch is turned on, Q12 turns off. Current flow to R23 stops and the charging current turns off. Q12 is turned on by R21 and R24 in the STBY mode. In the on mode Q10 turns Q12 off. Q14 inverts the base current enabling the -14V battery to turn off.

8-153. MAINTENANCE

8-154. Maintenance consists of periodic type and failure type maintenance.

8-155. Periodic Maintenance

8-156. Periodic maintenance should be done at least once per year. It consists of preventive maintenance and Adjustment/Calibration. Preventive maintenance consists of incorporating any modifications to the instrument and cleaning of all assemblies to minimize leakage paths, etc. Following any preventive maintenance, do the Performance Tests of Section IV. As part of the Periodic Maintenance cycle, do the Adjustment/Calibration procedures of Section V.

8-157. Failure Maintenance

8-158. This type of maintenance identifies the failure and troubleshoots the instrument to locate the defective part. See the troubleshooting procedures of subsequent paragraphs.

8-159. Component Replacement

8-160. Failed components can be replaced by any of three methods:

8-161. CLIP-OUT: Clip failed components from the board and the desolder and remove lead remains.

8-162. VACUUM DEVICE: A vacuum device, such as the Soldapull^{®1} Model DS-017, is used with a soldering iron to remove melted solder from the terminals.

8-163. DESOLDERING BRAID: A copper braided-wire, such as Solder Wick^{®2} no. 2 size, is used with the soldering iron, to absorb the melted solder.

8-164. Soldering

8-165. Integrated circuit or the printed-circuit boards can be damaged by excess heat. ICs can also be damaged by static charges (from handling or from the soldering iron) when installing them. The recommended soldering iron to use is the "Ungar, 3-wire" type with a 35-watt maximum heat element and the "Ungar, Micro-Spade" tip. The recommended solder is "Kester Rosin-Core 60/40" with a diameter of .032 inches. This diameter works very well with IC pins and leaves minimum residue.

8-166. Cleaning

8-167. Cleaning the board and components after soldering is important. Use a cleaning solution such as Reliasolv No. 563^{®3}. Apply the solution with a small, stiff-bristle brush and scrub the area previously soldered. No residue should remain after the solution dries.

NOTE

Do not use chlorothene, freon or kenco 192 to clean electrolytic capacitors as these cleaners may damage them.

¹Edsyn Company.

²Solder Removal Company.

³Alpha Metals, Inc.

8-168. DISASSEMBLY**8-169. Remove Case**

- 8-170.
1. Place instrument bottom up on bench and remove the 4 screws holding the feet on.
 2. Hold the two halves of the case together and turn the instrument upright.
 3. Remove the top half of the case by lifting it upward. The case top should separate from the rest of the instrument without pulling other parts with it. Slip the handle out of the lower case half.
 4. Remove the 4 black plastic posts from their holes in the receiver board (top PC board).
 5. Disconnect W5 (monitor amp cable).
 6. Remove 3 screws securing the shield plate to the rear panel.
 7.
 - a. The receiver board with shield plate will now fold up and over and will lay on the bench beside the rest of the instrument when access is required.
 - b. If you have the Diagnostic Service Kit (P/N 04935-60014):
 - 1) Lift the receiver board.
 - 2) Remove the 2 left hand black plastic parts (spacers between transmitter and receiver board).
 - 3) Slip service kit support posts in place of posts removed in step 6 above.
 - 4) Slip the receiver shield plate into the service kit support posts to support receiver board in a vertical position.
 - 5) Connect the monitor amp cable to J1 using the extension cable provided with the service kit.

8-171. RECEIVER BOARD/SHIELD PLATE/BATTERY CHARGER BOARD DISASSEMBLY

- 8-172.
1. Disconnect W3 (the cable between the switch board and the receiver board) at receiver board.
 2. Disconnect W5 (cable from monitor amp) at receiver board.
 3. Disconnect W2 (cable from the transmitter to receiver board) at receiver board.
 4. Remove 6 screws holding receiver board to receiver board shield plate.
 5. Lift receiver board and set it aside.
 6. Lift receiver board shield with battery pack and charger board attached.
 7. Disconnect W6 (if battery option) and set shield/battery pack charger board aside.
 8. To remove battery pack:
 - a. Disconnect cables W7, W8, W9 from charger board.
 - b. Remove 4 screws holding battery pack to shield board. Batteries will lift off shield board.
 9. To remove charger board:
 - a. Remove 3 screws holding board to shield. Board will lift off.

8-173. SWITCH BOARD/FRONT PANEL REMOVAL

- 8-174. 1. Disconnect W3(the cable running from the receiver board to the switch board) at the receiver board.
2. Disconnect W5(the monitor amp cable from the receiver board).
3. Press down gently on the output transformer(on the transmitter board near the switch board connector) and pull up on the switch board/front panel assembly. Assembly should slide up and out of its retaining grooves.



If the switch board and front panel do not remain parallel while being separated, the monitor volume potentiometer shaft can bind in its hole in the front panel and break the potentiometer case or bend the shaft.

4. To remove the front panel from the switch board, remove the output level and monitor volume knobs and the hex nuts from the TRMT and RCV jacks and output level adjust. Carefully pull the front panel directly away from the switch board.

8-175. TRANSMITTER BOARD REMOVAL

- 8-176. 1. Open case.
2. Remove receiver board/shield/battery pack/charger board assembly.
3. Remove switch board/front panel assembly.
4. Remove all spacer parts.
5. Gently lift transmitter board and back panel assembly from lower case as a unit.
6. To remove back panel assembly:
- a. Remove hardware holding 3 power supply transistors to back panel.
 - b. Desolder leads from power transformer to transmitter board.
 - c. Remove 2 screws holding transmitter board to back panel.
 - d. Back panel will come off.

8-177. REASSEMBLY

8-178. Seating the case top on some early 4935A's is difficult. The front panel chips or peels at the edges if the case is forced onto the instrument. Follow the procedure below for correct reassembly.

1. Reassemble the transmitter board and back panel if necessary.
2. Reconnect W2 to the edge connector.
3. Replace transmitter board and back panel in lower half of case.
4. Align and press together switch board and front panel.
5. Slide switch board and front panel back into retaining grooves. (To avoid damaging the front panel it should be eased carefully into place.)
6. Insert the four large plastic standoffs.
7. Replace receiver board and shield plate.
 - a. On battery options reconnect A5W1 before replacing battery charger board shield plate.
8. Route W5 towards the front panel then onto the transmitter board and reconnect. Keep the cable away from the handle mounting notches in the case to avoid pinching the cable and locking the handle into a fixed position.
9. Reconnect W2 and W3 and insert the four small plastic standoffs.
10. Gently put on case top.

CAUTION

To avoid damage to the front panel when replacing the case top, remove 3 screws fastening the shield plate to the back panel and slide, do not force the case top into the guides.

11. Replace 3 screws on rear panel.
12. Replace 4 screws on case bottom.

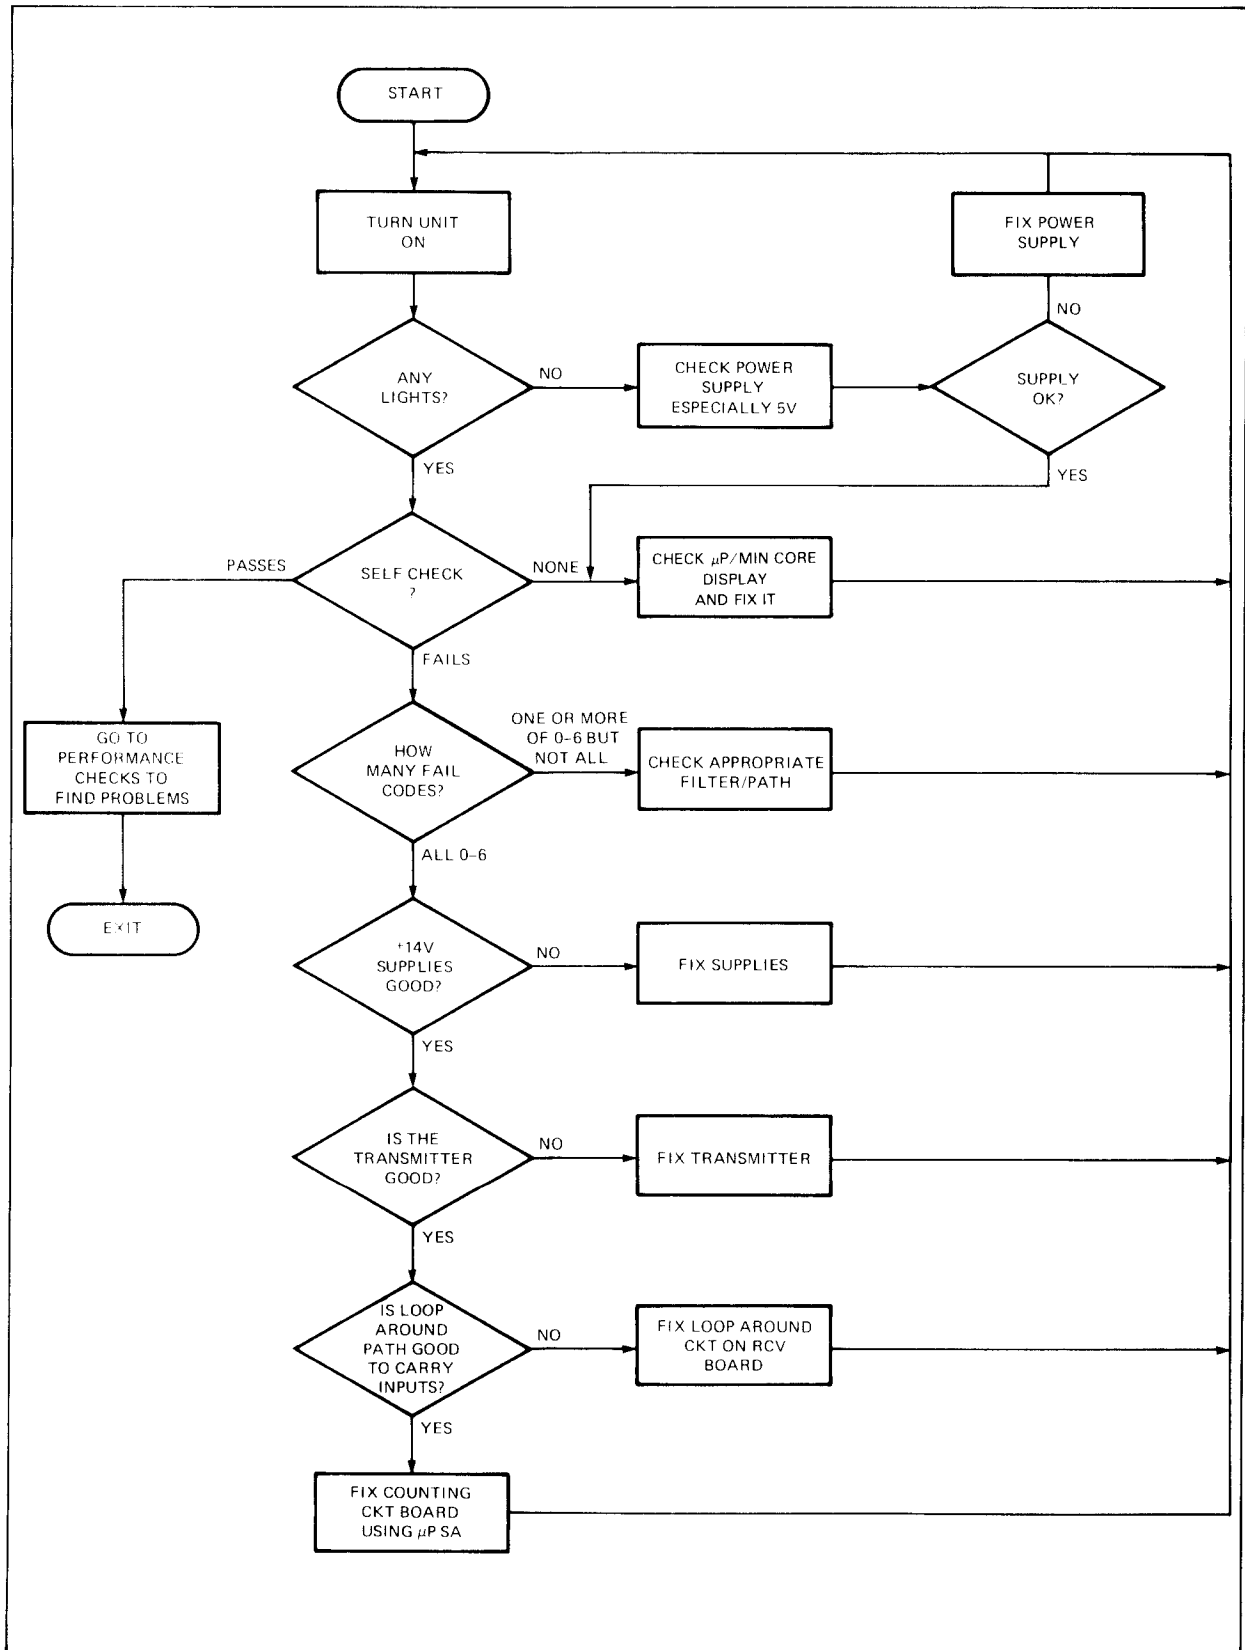


Figure 8-17. Instrument Troubleshooting

8-179. POWER SUPPLY TROUBLESHOOTING

- 8-180. 1. Isolate the AC line supplies from the regulators by removing the 3 jumpers from A4J2 in non-battery units. Disconnect the cable from the charger board to the transmitter board in battery units
2. Disconnect the power supply from the rest of the unit removing the +5, +14, and -14 jumpers.

WARNING

AC voltages are present whenever the unit is plugged in whether the power switch is in ON or STBY.

3. Plug in the unit. Check the power supply voltages.

C15 = +12.0 to +14.0 v

C11 = +23.5 to +29.5 v

C5 = -23.5 to -29.5 v

If all voltages are out of range, check the AC line module and the transformer. If only 1 or 2 voltages are out of range, check the appropriate rectifiers and filters. If the fuse blows as the unit is plugged in, disable the Over Voltage Protection circuit (OVP). To disable the OVP, desolder and remove the triac CR24.

CAUTION

Always isolate the power supply from the instrument whenever the overvoltage protection is disabled. Isolate by pulling JU+5, JU+14, and JU-14 jumpers.

NOTE

Tripping the OVP shorts only the 14v unregulated line. Avoid shorting the regulated outputs (brief shorts cause no damage).

4. Once the voltages are correct, check the over-voltage protection circuitry. Jumper A4J2pin1 to 10 to enable the +5v regulator.
- a. If the fuse blows, check the +5v overvoltage sense circuit (CR25 for 5v supply or CR23 for +14v supply).
 - b. Check A4JU+5 for +5v±20mv. If correct, go to Step 5. If it is not correct try to adjust the supply. One or two tweaks of the correct pot should bring the supply within range. If not then there are problems which must be found before troubleshooting any other parts of the 4935A.
 - 1) If U14 pin 8 reads ground then the regulator is enabled (less than 1 volt gives shutdown signal).
 - 2) If the voltage at JU+5 is wrong or has too much ripple:
 - a) Check that the reference voltage at U14 pin 6 is approximately 2.5v for +5v supply (also 2.5v for +14 supply). If not, replace U14.
 - b) Check the +5 voltage sense divider R33, R37, and R42 (R19, R23, and R31 for the +14 regulator).

- c) Remove the pass transistor Q4 for the +5 v supply (Q3 for the +14 v supply) and check U14 for the following voltages:

U14 pin no.	Voltage
7	GND
10	~1.6
11	~ pin 10 + .6 v
12	+8 to 14 v

NOTE

Removing Q4 or Q3 may require pressing on the line module retaining springs and sliding the line module out of its hole. When reinstalling pass transistors Q3, Q4, or Q1 remember to install the insulating shoulder washer.

- d) If pin 10 is greater than 2.0 v or less than 1.2 v, check CR19, CR20. If pin 12 is incorrect check ac supply and A4J2 jumpers. Replace U14 if the other voltages are wrong.
5. Jumper A4J2 pins 2 and 11 to enable the +14 v regulator. Check A4JU+14 for +14 v \pm 20 mv, if correct go to Step 6. If incorrect, troubleshoot as in Step 3 above, referring to U8 INSTEAD OF U14. Pin 12 of U8 should be +21 v to +25 v.
6. Jumper A4J2 pins 3 and 12 to power the -14 v regulator. Note that the -14 v OVP is more complex than the +5 v and +14 v OVP.
- a. If the fuse blows, check the overvoltage protection circuitry CR7, R4, R16, R94, R95, R96, Q2 and Q7.
- b. Any ripple on the +14 v supply will appear on the -14 v supply, even though the -14 v supply is operating properly. When troubleshooting this regulator think of it as an *OP AMP DRIVEN DC POWER AMPLIFIER* (with drive only in the negative direction) which uses the +14 v supply as its input.

NOTE

CR4 helps U1 provide sufficient drive for Q1. When replacing U1 check CR4 and also replace if needed. R3 and CR1 insure that U1 has a power supply range of less than 35 volt Vcc+ to Vcc-.

8-181. MINIMUM CORE TROUBLESHOOTING

8-182. The power supply and a minimum core of the instrument must function to test or troubleshoot. Components which must be working for the core to function are:

- microprocessor (A4U6),
- chip-enable Decoder (A4U7),
- display Driver chips A2U2, A2U3,
- data bus from the microprocessor D0-D7 of I/O 1 of the microprocessor,
- microprocessor to chip enable decoder lines, A4-A7 of I/O 4 of the microprocessor,
- mode control line A0 of I/O 4 of the microprocessor,

- g. DISP and ANUN STROBES from Chip Enable Decoder(A4U7) to the Display driver chips(A2U2 and A2U3).

NOTE

The lines in d, f, and g above run through the edge connector between the transmitter and display boards.

8-183. Procedure

- 8-184. 1. Remove the microprocessor from its socket, power up the 4935A and check for the appropriate voltages on the following pins:
- a. Socket pins 1 through 20 should be at ground(<.1 volt).
 - b. Socket pins 38, 39, and 40 should be at $+5v \pm 1v$.
 - c. No pin should be above $5v \pm 1v$.



When checking the microprocessor socket pins use a small probe to avoid spreading the socket pins. Microprocessor socket pins are connected to STATIC SENSITIVE devices which can be easily damaged. Ground yourself.

- 2. If any of the above conditions are not met, troubleshoot and fix, otherwise power down the 4935A, and replace the microprocessor(A4U6) and power back up.
- 3. Check the following pins on the microprocessor(A4U6):
 - a. Pin 40 should be $+5v \pm 1v$ (this is Vcc for U6).
 - b. Pin 39 should be $+5v \pm 1v$ (if it is grounded, the microprocessor resets).
 - c. Pin 38 should be logic high and pulse low when the PERIOD key is pressed(this is the microprocessor interrupt line).
 - d. Pin 20 should be ground.
 - e. Pins 7 through 15, 22 through 25, 29, 30, and 33 through 37 should be toggling (check with a logic probe).
 - f. After the self check is completed pins 3 through 6 should be logic high and pins 16 through 21 should be logic low.

NOTE

Signal lines are generally checked at the IC pin but a defective socket may stop the signal from getting to its destination.

- g. If pin 38 does not work(see paragraph 8-192), troubleshoot the Key Scan Circuitry and the front panel key matrix.
4. If any other pins are not as described above, try inserting another microprocessor(A4U6).

8-185. If the preceding conditions are met and the display still does not respond, check the control latches to see if the microprocessor is configuring the instrument correctly. Use Table 8-1 and the How Measurements are Made part of the Theory of Operation. Additionally if needed, troubleshoot the display.

8-186. DISPLAY TROUBLESHOOTING

- 8-187. 1. Power down the instrument and remove the front panel.
2. Reinstall the switch board and power up. Note that standard ribbon cable extenders do not work, they reverse the pins.
3. Check for the following pin conditions on both A2U2 and A2U3.
- Voltage at power supply pins should be; pin 19 = +5 v \pm .1; pin 28 = ground. If not, repair power supply or power distribution.
 - Both the mode input pin 9 and the write input pin 8 should be toggling; use a logic probe to test.
 - The data bus should also be toggling, pins 5, 6, 7 and 10 through 14.

8-188. If these conditions are met and the display is frozen (to check, change the output level) or shows meaningless numbers, the display drive chips have probably failed.

8-189. CONTROL TROUBLESHOOTING**8-190. Troubleshoot Keyscan/Interrupt Circuitry**

- 8-191. 1. Look at I/O port 0 (U6 pins 3-6 and pins 16-19) for a proper setup word. If U6 (3, 4, 5, 6) = high and U6 (16, 17, 18, 19) = low then go to paragraph 8-192 below, otherwise:
- Remove the front panel and try again,
 - try another processor, and
 - if only a single pin of U6 (3, 4, 5, 6) is low then replace U20.
2. Check U20 pin 1 with a logic probe. It should be low if no membrane switch is pressed. It should go high and stay high when any membrane switch is pressed. If not check the inputs. At least one input (U20 pin 2, 3, 4, or 5) should go low when any membrane switch is pressed. If not, replace U20. If none of the inputs go low, then the front panel key matrix and/or wiring is suspect.
3. Check U3 pin 9 with a logic probe. It should pulse low, but not stay low, when any membrane switch is pressed. Replace U3 if not.
4. Check U5 pin 12 with a logic probe. It should pulse low, but not stay low when any membrane switch is pressed.
5. Check U5 pin 10 with a logic probe. When any membrane switch is pressed, it should be normally low and pulse high, but not stay high. If not then the microprocessor (U6) is suspect.
6. The line monitor circuit should beep whenever U5 pin 12 pulses low which should happen when any membrane switch is pressed.

8-192. CONTROL AND COUNTING SECTION TROUBLESHOOTING

8-193. Use the Diagnostic Service Kit signature analysis procedure to troubleshoot the control and counting section. Most of the microprocessor and counting section is located on the transmitter board.

NOTE

This procedure requires the 4935A Diagnostic Service Kit, HP 04935-60014.

8-194. TRANSMITTER TROUBLESHOOTING

8-195. To troubleshoot the transmitter section of the 4935A, refer to the Diagnostic Service Kit (HP 04935-60014) for most of the troubleshooting procedures.

8-196. Transmit Clock Generator

8-197. The transmit clock generator provides the proper clock frequency to the phase address generator, waveform ROM, and ROM latches. It also provides 262 kHz signal to the microprocessor and counting block where it is used internally when measuring frequency. In the standard 4935A, only the sine clock circuitry is provided so wire jumper JW4 should be installed.



JW4 should not be installed if U39 is loaded. If U39 were loaded two outputs (U23 pin 10, U39 pin 11) would drive the same line.

8-198. In the P/AR model (opts. 002 and 003) sine and P/AR clocks are provided. Multiplexer U39 selects the proper clock according to the state of the P/AR/SINE select signal from U26 pin 1 (low=sine clock selected). When the sine clock is selected the following frequencies should appear:

CHIP	PIN	FREQUENCY
U39	4	Low
U23	12	4.194 MHz
U32	9	1.049 MHz
U32	11	262.1 kHz

8-199. When the P/AR clock is selected the following IC pins should toggle at the frequencies indicated:

CHIP	PIN	FREQUENCY
U39	4	High
U23	8	6.144 MHz
U31	8	512 kHz
U32	9	128 kHz
U32	11	32 kHz

8-200. TRANSMITTER SIGNATURE ANALYSIS PROCEDURE

8-201. The transmit signature analysis procedure is used to check the digital components in the transmit section from the adders (phase address generator) to the digital inputs to the digital to analog converter (U33). The procedure is as follows:

1. Put the 4935A in level and frequency mode. The frequency = 128 Hz.
2. Set up the 5004 signature analyzer;
 - a. Connect the start and stop with the inputs of the 5004 connected to TP6. Start and stop on the positive transition (both buttons out).
 - b. Connect the clock input of the 5004 to TP7 and clock on the negative transition (pushbutton in).
 - c. Connect ground to TP 9 (or any clean digital gnd).
3. The reference signature for +5 v = P254 (remember to push the reset button). The following IC pins can be checked:

Table 8-3. Reference Signatures

<p>U34 pin 1. 55CU 2. AAHU 3. 0000(L) 4. 3PCH 5. 0000(L) 6. 1U5P 7. 21P3 8. 0000(L) 9. 86C3 10. P688 11. 603A 12. 0000(L) 13. PFFA 14. 0000(L) 15. U665 16. P254(H)</p>	<p>U35 pin 1. 7CU5 2. 3HUA 3. 0000(L) 4. 9422 5. 0000(L) 6. FA11 7. 5P33 8. 0000(L) 9. FC6F 10. 6U4A 11. C7A5 12. 0000(L) 13. 25P1 14. 0000(L) 15. 12U0 16. P254(H)</p>	<p>U37 pin 1. FC75 2. 65CA 3. 0000(L) 4. 8HC7 5. 0000(L) 6. 46HC 7. FC6F 8. 0000(L) 9. 21P3 10. 2482 11. 9241 12. 0000(L) 13. 15U7 14. 0000(L) 15. 8AUC 16. P254(H)</p>
<p>U45 pin 1. P254(H) 2. 1U5P 3. UH0A 4. 3PCH 5. 55CU 6. 488C 7. AAHU 8. 0000(L) 9. P254 10. U665 11. 1431 12. PFFA 13. P688 14. 826P 15. 603A 16. P254(H)</p>	<p>U46 pin 1. P254(H) 2. FA11 3. 9422 4. 7CU5 5. 3HUA 6. 12U0 7. 25P1 8. 6U4A 9. C7A5 10. 0000(L) 11. P254 12. 46HC 13. 8HC7 14. FC75 15. 65CA 16. 8AUC 17. 15U7 18. 2482 19. 9241 20. P254(H)</p>	<p>U43 pin 1. AAHU 2. 1U5P 3. 9241 4. 8AUC 5. 65CA 6. 46HC 7. C7A5 8. 12U0 9. 619H 10. 4P69 11. 9C3U 12. 0000(L) 13. 2350 14. H679 15. 803A 16. 63H5 17. 42P0 18. 0000(L) 19. P254 20. 0000(L) 21. P254(H) 22. 603A 23. U665 24. P254(H)</p>

Table 8-3. Reference Signatures (continued)

U44 pin 1. P254(H)	U48 pin 1. P254(H)	U33 pin 1. 0000(L)
2. UC56	2. 320P	2. P254(H)
3. 619H	3. P254	3. 0000(L)
4. 4P69	4. P254(H)	4. A294
5. 25CP	5. 320P	5. 320P
6. 5919	6. H05A	6. UC56
7. 9C3U	7. 0000(L)	7. 25CP
8. 2350	8. 40F0	8. 5919
9. 7P6P	9. A294	9. 7P6P
10. 0000(L)	10. P254(H)	10. 34FH
11. P254	11. P254	11. 38F3
12. 34FH	12. A294	12. AA85
13. H679	13. P254(H)	13. 2C12
14. 803A	14. P254(H)	14. P254(H)
15. 38F3		15. 0000(L)
16. AA85		16. 0000(L)
17. 63H5		
18. 42P0		
19. 2C12		
20. P254(H)		

8-202. Digital To Analog Conversion

8-203. To check the D-to-A conversion circuitry set the transmit frequency to 65,536 Hz. Figure 8-18 shows the waveform at JU2. If this waveform is not present, check U21 pin 2 of the current to voltage converter. It should have $0\text{ v} \pm 20\text{ mv}$. If not, U21 (the current-to-voltage converter) is probably defective. Otherwise the D-to-A converter chip U33 is suspect or the phase address generator is not working.

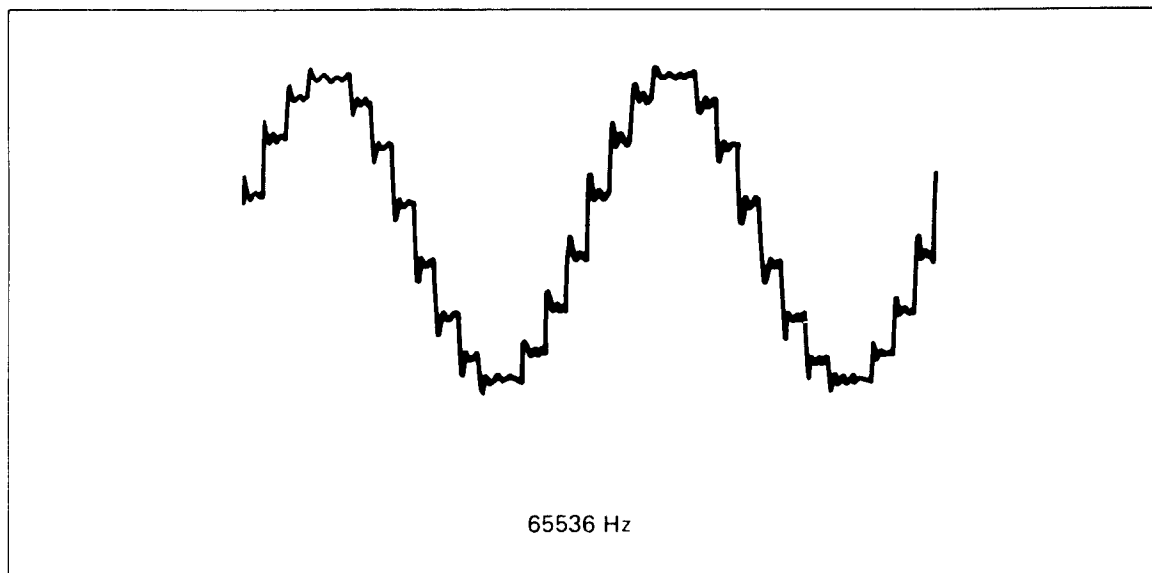


Figure 8-18. Stair Step Sinewave

8-204. FILTER AND SIGNAL SELECT CIRCUITRY

8-205. The transmit filter and signal select circuit filters the output of the D to A circuit. The wideband low pass filter is used when generating a sine wave. When generating the P/AR waveform the filtering is done by the 5 kHz low pass filter. The S0 and S1 lines from the output select multiplexer (U26) selects the appropriate filter (or a ground input for quiet termination) as the input to the power amplifier.

NOTE

JW5 puts a grounded input in place of the 5 kHz filter when noise to ground measurement is selected in the standard and option 001 instruments.

8-206. To troubleshoot the transmit filters:

1. Remove A4JU2.
2. Feed a 2 v P-P sine wave to the negative end of A4C36.
3. Monitor the output of the wideband low pass filter at TP5.
4. For each frequency in Table 8-4, check for the appropriate output.

Table 8-4. Wideband Filter Response
2 V P-P = 0.7 VRMS Input at A4C36

FREQUENCY IN HZ	VOLTAGE AT TP5 (P-P)
10000	3.5
40000	3.5
80000	3.6
120000	3.5
160000	3.1
200000	3.4

5. Monitor the output of the 5 kHz LPF at A4 TP11.
6. For each frequency in Table 8-5 check for the appropriate output.

Table 8-5. 5 kHz Low Pass Filter Response

FREQUENCY IN Hz	VOLTAGE AT TP11 (P-P)
500	7.0
1000	7.0
7500	2.0
10000	0.9

7. Check the output select MUX by selecting measurement and display modes according to Table 8-6. Check for the indicated waveform at the transmitter output or level control (amplitudes may vary).

Table 8-6. Output Select MUX

MEASUREMENT	WAVEFORM	NOTES
Level and Frequency Display TRMT	Sinewave 1004 Hz	Set to 1004 Hz if necessary
Level and Frequency Display RCV	Sinewave 1004 Hz	
Noise Display RCV	DC level approx 0 v	
P/AR (opt 2 and 3) Display RCV	Characteristic P/AR Waveform	See Figure 8-18

The characteristic P/AR waveform can be checked with a spectrum analyzer using Figure 8-19 or with an oscilloscope using Figure 8-20.

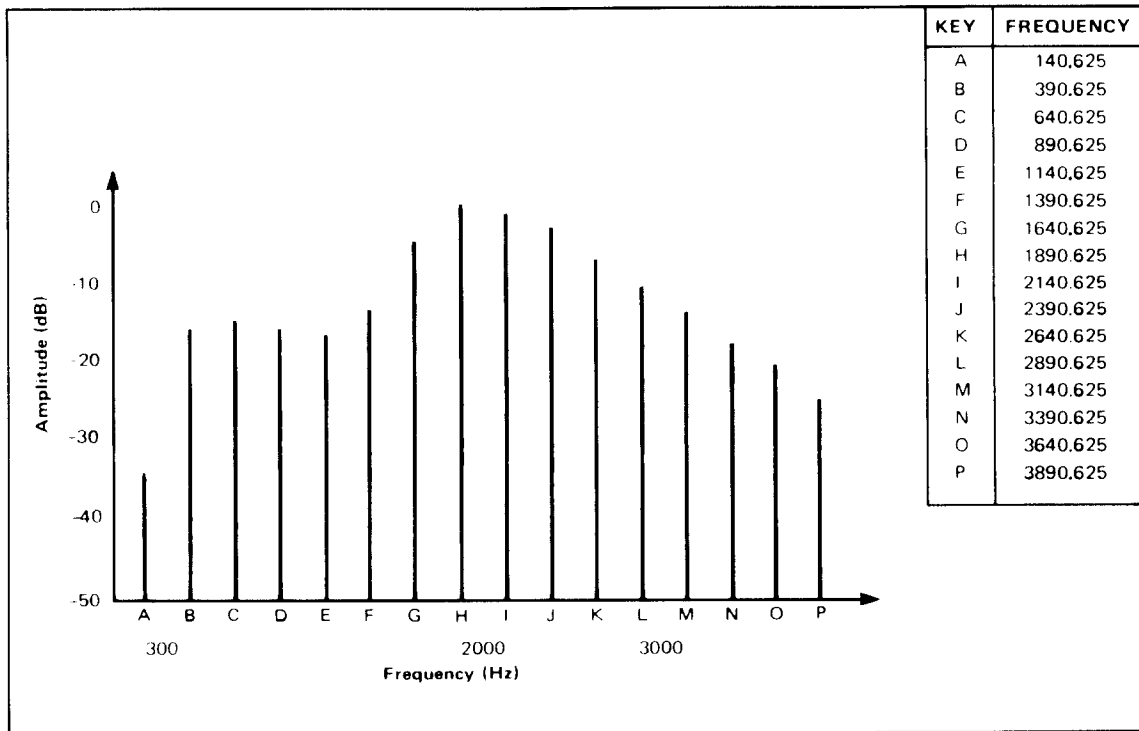


Figure 8-19. P/AR Transmit Signal Frequency Spectrum

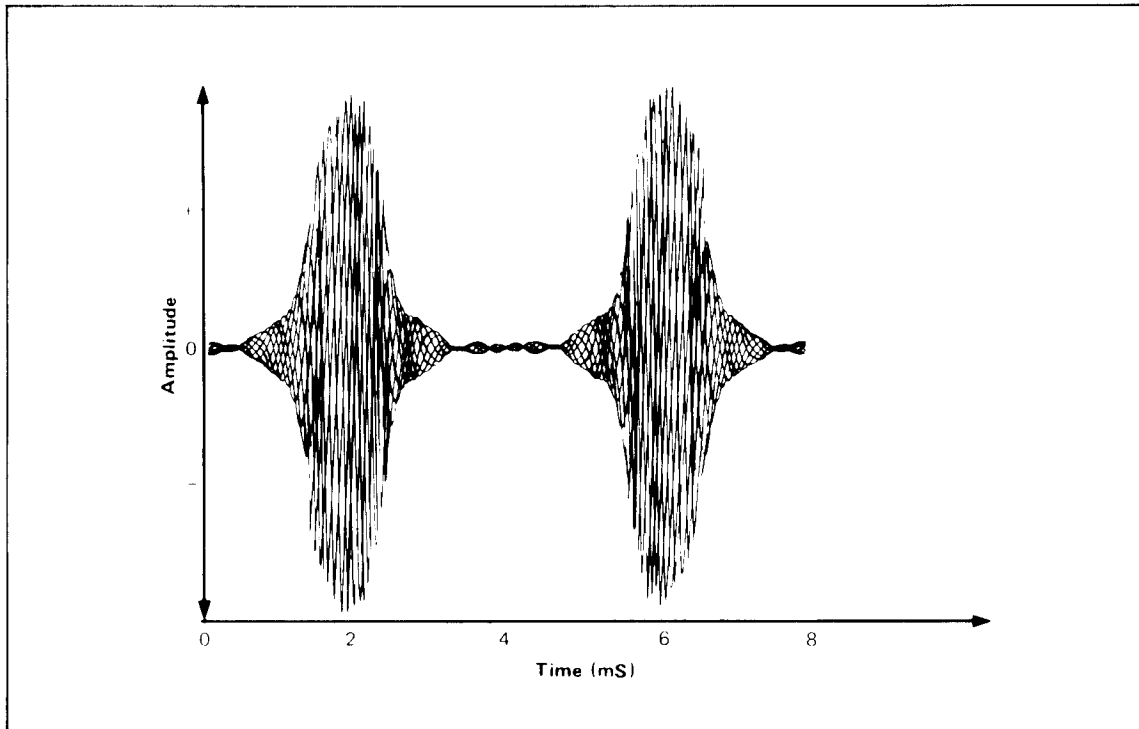


Figure 8-20. P/AR Transmit Signal Envelope

8-207. OUTPUT AMPLIFIER

8-208. The output power amplifier provides the amplification necessary for a +13dBm output level. The OUTPUT LEVEL control provides a full dynamic range of -40dBm to +13dBm. To test, adjust the transmit level to approximately 0 dBm. The output waveform appears at the negative side of C72 as an approximate 8v P-P signal, and a 4 to 5v P-P signal at the juncture of R81, R82, and R83. Simple signal tracing should isolate problems to the component level.

NOTE

The P/AR signal crest-factor prevents valid signals greater than +3dBm. When the signal level is too high the display blanks out. At this point the instrument is overranged(positive state condition).

8-209. At low frequencies and high output levels the 4935A TRMT output has considerable distortion introduced in the output transformer(see **Figure 8-19**). All signals to the TRMT output transformer should be clean sinewaves except in P/AR mode or quiet termination. In P/AR mode the characteristic P/AR signal should be present(see **Figure 8-20**).

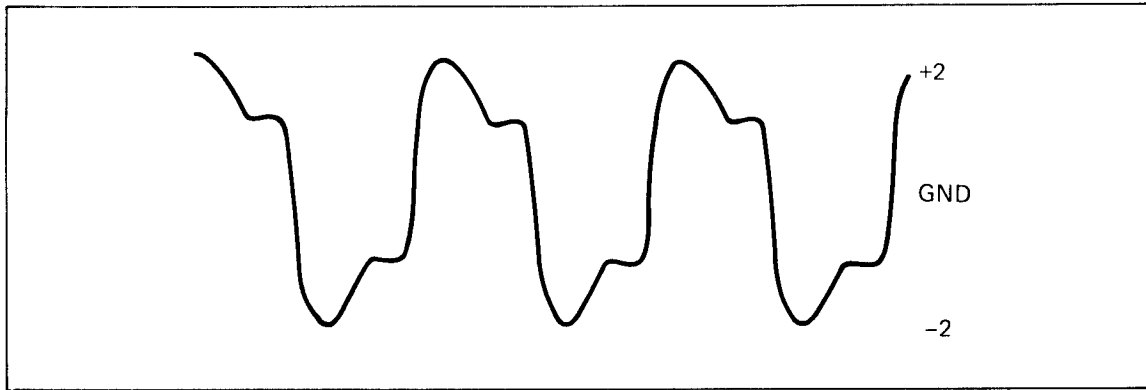


Figure 8-21. 20 Hz Waveform

8-210. TRANSMIT MONITOR

8-211. The transmit monitor circuitry provides a signal path used by the 4935A receiver circuitry when monitoring the 4935A transmit signal in the display transmit mode. Troubleshoot the transmit monitor circuit by monitoring the signal at A3TP9 (on receiver board). Select the measurement modes in the following table and check for the indicated waveforms.

Table 8-7. Transmit Monitor Test

MEASUREMENT MODE	WAVEFORM	NOTES
Level and frequency Display TRMT	Sinewave 1004 Hz	4935A Transmitter Set to 1004 Hz
Level and frequency Display RCV	DC level approx 0 V	
Noise Display RCV	DC level approx 0 V	
P/AR (opt 2 and 3) Display RCV	Characteristic P/AR waveform	See Figure 8-20.

8-212. RECEIVER TROUBLESHOOTING

8-213. This section contains troubleshooting procedures for the A3 receiver board. Discussed first is troubleshooting the signal path used by the 4935A to monitor its own transmit signal; this is the XMIT monitor path referred to in the main troubleshooting tree. The following parts of the receiver are checked in the second part of this section: input circuitry to A3U34A pin 9, tone bandpass and buffer circuitry the notch filter, any noise filters, autorange circuitry from A3U49 to the autorange select MUX, impulse noise detectors and the QRMS detector P/AR peak latch.

8-214. The procedure is as follows: The transmit monitor path is checked as an entire section. If this test passes, proceed to paragraphs 8-217 through 8-226 to complete the inputs from front panel through and notch filter receiver testing. If it fails, check for a transmitter signal at the receiver transmit input TP9. If no input is present, fix the transmitter.

NOTE

The transmitter section must be working for the receiver loop-around path test to work. The output must be a clean sinewave of about 1000 Hz and the loop-around select MUX must function.

8-215. If the transmitter circuitry sends the proper signal to the receiver path, then trace that signal through successive circuits. When a circuit output fails to have the proper signal, step through it backwards, stage by stage, until the problem is isolated. After the problem is fixed, continue the XMIT monitor test until the proper output from the voltage-to-frequency converter is established.

8-216. While tracing AC signals it is important to check not only the amplitude and frequency of the signal but also to check for DC offsets in the signal. Acceptable offsets depend on both the type of amplifier and the circuit type. As an estimate for amplifier circuits, multiply the maximum specified input offset voltage (from the op amp specification sheet) by the gain of the amplifier. Example: HP Part No. 1826-0735a2507 in a 20 dB amplifier configuration. Offset voltage = voltage amplification \times offset spec. = $10 \times 8 \text{ mV} = 80 \text{ mV}$. The offset can be easily checked by switching the oscilloscope used to look at the signal from AC to DC input and looking for a jump in the position of the waveform. Any noticeable jump indicates a failure.

8-217. Set Up

8-218. Set the 4935A to LEVEL FREQUENCY measurement and DISPLAY-TRMT display mode. Press in both 600 ohm impedance buttons. Set the output frequency to 1004 Hz and adjust the output level to +5 dBm (+5 dBm = 1.78 Vrms = 3.90 v P-P signal).

NOTE


When measuring voltage at front panel jacks the scope must be terminated with 600 ohms. If no termination is used, the voltage will be 7.8v P-P. If using a voltmeter with no termination, the voltage will be 2.8v AC.

8-219. Overall Transmit Monitor Test

8-220. If everything is working properly, the receiver board will present pulsed signals, approximately 15 kHz 4v P-P to the microprocessor and counting section on the transmitter board through the LEVC line. Check A3U3 pin 7 for this signal. If it is present, vary the transmit level with the OUTPUT LEVEL control. As the output level rises, the LEVC(A3U3 pin 7) signal frequency should increase and vice versa.

8-221. If this signal is present, varies with output level, and the left hand display indicates approximately 5.0 dBm, then go to the inputs from the FRONT PANEL/NOTCH FILTER/25 dB AMP/TONE DROPOUT SIGNAL PATH section, paragraph 8-232.

Figure 8-22 Transmit Monitor Test Output

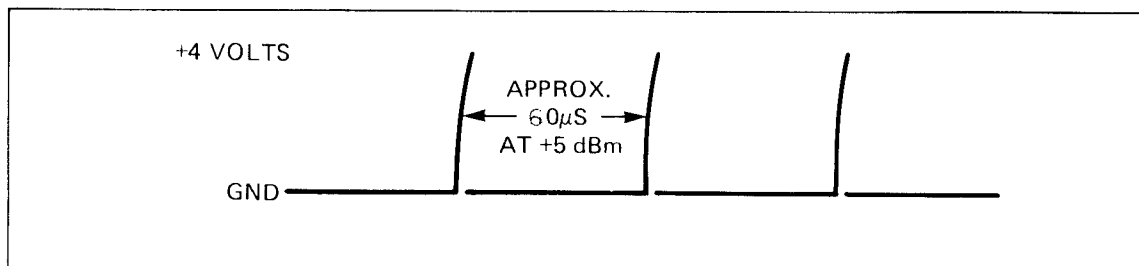

8-222. Transmit Monitor Signal

8-223. Check for a 3.9v P-P signal at TP9. This signal should be a clean 1004 Hz sinewave. If this signal is not present, fix the transmitter circuit.

8-224. INPUT

1. Check for a signal at JU6(approximately 3.9v P-P, 1004 Hz). If the signal is present, go to paragraph 8-225.
2. Check JU3 for proper latch contents:

pin 15 = logic 0
pin 14 = logic 1
pin 13 = logic 0

If not latch, microprocessor, or data bus problems are probable. After fixing return to step 1.

3. Check for signal at TP14(3.9v P-P 1004 Hz). If signal is present, A3U35 has failed.
4. Check for signal at A3U34 pin 5. If signal is present, A3U34 has failed. Fix it and return to step 1.
 - a. If no signal is present at A3U34 pin 5, then the low pass filter using A3U14 has failed. Fix and return to step 1.

8-225. Noise Filter

- 8-226.
1. Check for a signal at U48 pin 6(3.9v P-P 1004 Hz). If signal is present, the flat filter path and MUX are working, go to paragraph 8-227. If not, continue to step 2.
 2. Check MUX select address A3U11:

pin 2 = logic 0
pin 10 = logic 1
pin 11 = logic 1

If select address 110 is not present, there is a microprocessor, latch(A3U11), chip enable, or bus problem, or the jumper in JU1 is missing.

3. Check for a signal at TP 15-2(3.9v P-P 1004 Hz). If the signal is present, A3U37 or buffer A3U48 have failed.
4. If no signal is present at TP15 pin 2, then buffer U52 has failed.

8-227. Simplified Autorange Check

- 8-228.
1. Check Section VII, Manual Backdating before troubleshooting the autorange or the 150 kHz low pass filter.
 2. Check for a signal(3.9v P-P 1004 Hz) at TP25. If the signal is present, go to paragraph 8-229. If not continue.

NOTE

The housing of J1 is not connected to ground and another signal ground must be provided.

3. Check the MUX select address at JU4:

pin 16 = logic 0
pin 15 = logic 0
pin 14 = logic 1
pin 13 = logic 0

If these addresses are not present, there is a latch(A3U17), chip enable line, microprocessor, or a data bus problem, or the latch is being loaded down. Fix it and return to step 1.

4. Check for a signal at A3U26 pin 6(0.39vP-P, 1004Hz). If the signal is present, buffer A3U25 has failed.
 - a. Signal at A3U26 is 1.2v for serial prefix 2207A and earlier.
5. Check for a signal at A3U28 pin 6(0.39vP-P, 1004Hz). If signal is present, A3U26 LPF has failed.
6. Check for a signal at A3U33 pin 6(0.39vP-P, 1004Hz). If signal is present, A3U28 LPF has failed.
7. Check for a signal at A3U29 pin 6(0.39vP-P, 1004Hz). If signal is present, A3U33 LPF has failed.
8. Check for a signal at A3U39 pin 8(0.39vP-P, 1004Hz). If signal is present, A3U29 LPF has failed.
9. Check for a signal at A3U39 pin 5(0.39vP-P, 1004Hz). If signal is present, A3U39 LPF has failed.
10. If none of the above brings the correct signal then there is a jumper or trace problem; or bad resistors (R129, 146, 147). Trace backwards, from A3U39 pin 6 to J1.

8-229. Detector Select

- 8-230.
1. Check for $10v \pm 30mv$ at A3U13 pin 15. If this level is not present, A3U5 has failed or is being loaded down.
 2. Check TP6 for an approximate 2.5vDC level. If a signal is present, the voltage-to-frequency converter A3U3 has failed or the supporting resistors and capacitors are defective. See the overall transmit monitor test (paragraph 8-219) for a description of the proper A3U3 output signal. If signal is not present, continue.

NOTE

If a DC level is present,(1 to 4.5v) but is not the proper value and the level changes with small input signal changes, then it only needs adjustment. Also check the signal at TP23(full wave rectifier output) for a greater than 5% difference in alternate peak heights.

3. Check a3U13 for an approximate 2.5vDC level. If DC level is missing, A3U4 or R185 has failed.
4. Check detector select MUX address 101 at A3U13:
 - pin 11 = +14v
 - pin 10 = 0v
 - pin 9 = +14v

If this address is not present, there is a level problem(A3U12), a latch(A3U8), chip enable, microprocessor, or data bus problem.
5. Check the input of A3U13 pin 5 for 2.5vDC level. If a DC level is present, MUX A3U13 has failed.
6. Detectors have failed. Go to the Detector Troubleshooting Section (paragraph 8-250).

8-231. The above tests complete the transmit monitor tests. All transmit monitor tests must pass before going on to the tests below.

8-232. INPUTS FROM FRONT PANEL/NOTCH FILTER/25dB amp/TONE DROPOUT SIGNAL PATH

8-233. SET UP

8-234. Set up the 4935A in LEVEL FREQUENCY mode, transmit signal to 1004 Hz at +5 dBm, and DISPLAY-RCV mode. Set both impedances in to 600 ohms; all other SETUP buttons out. U7 removed and DIP switch(HP 3101-2059) in JU3 as per service selection of input circuits, paragraph 8-267.

1. Loop the 4935A output signal externally and select DISPLAY RCV.
2. Refer to A3 Schematic; set DIP switch to:

1-16 = open
 2-15 = open
 3-14 = open
 4-13 = closed

NOTE

TP14 should have 3.9v P-P signal.

3. The DIP switch provides a balanced input to the receiver with the notch filter out and the 25 dB amp out.

8-235. Input Transformer

8-236. Look for a signal at the transformer output TP11. If the signal is good, go to paragraph 8-239. If no signal is present, remove the receiver input cable and feed the transmitter output directly into the input transformer through pins 3 and 6 of A3J4. If TP11 now has a signal, the problem is on the switch-board input and impedance selection sections. If no signal appears at TP11, the input transformer and associated circuitry(including noise to ground circuitry) is suspect. Replace the cable.

8-237. Noise To Ground Input Path (Noise-To-Ground Units Only)

8-238. Remove the receiver input cable(W3). Jumper pins 3 and 6 together and feed an input signal to pin 3 vs ground(pin 1 is ground, pin 2 is missing). Monitor TP13 with an oscilloscope, check U27 for signal. Close the DIP switch between JU3 pins 1 and 16. The signal should appear at TP13(if not check U30 and U27).

NOTE

If U27 is not installed, W2 must be installed. Replace receiver input cable(W3). Open the DIP switch between pins 1-16 of JU3.

8-239. Tone Dropout Signal Path

8-240. Adjust input signal to 2004 Hz approximately +5dBm(TP13 approx. 3.9v P-P). The signal at TP12 should be about .42v P-P. Check the signal at A3U15 pin 6, it should be approximately 12.6v P-P 2004 Hz(31 times whatever signal is at TP12, the 12.6v P-P assumes .4v at TP12); if not, check A3U15 and associated circuitry.

8-241. Change input signal to 1004 Hz. Voltage at TP12 should be approximately 7.8v P-P(if not, check U16 bandpass filter). The signal at both sides of C159 should be roughly on 1004 Hz squarewave 25v P-P; if not, check U15.

8-242. Notch Filter

8-243. At TP14 the input signal of 1004 Hz is approximately +5dBm. Close the DIP switch between pins 3 and 14 of JU3(1-16=open, 2-15=open, 3-14=closed, and 4-13=closed). The signal at TP14 should drop to 1/300th or less than its original level. If not, U34 or the notch filter has failed. For a more complete test of notch filter see the Performance Checks in section IV. Open the DIP switch between pins 3 and 14 at JU3.

8-244. Check the 25 dB amp. Reduce the input signal until the signal at TP14 is about .2v P-P. Open DIP switch pins 4-13 at JU3(1-16=open, 2-15=open, 3-14=open, 4-13=open). Signal at A3U6 should be approximately 3.5v P-P. If not, 25 dB amp is bad. Close DIP switch pins 4-13 of JU3.

8-245. When finished, remove the jumpers on the DIP switch leaving all pins open.

8-246. NOISE FILTERS

8-247. If any noise filter responses are incorrect, go to paragraph 8-280 and troubleshoot each filter stage.

8-248. Autorange

- 8-249.
1. Loop the 4935A TRMT 310 jack to the RCV 310 jack through an attenuator(HP 4436A). Set the attenuation to 0 dB.
 2. Adjust the signal level to approximately +5.0 dBm(3.9v P-P).
 3. Monitor the autorange output at TP25

NOTE

J1 case is not grounded so some other signal ground must be used.

4. Leave the attenuator inputs and outputs floating and ground the attenuator case to the 4935A. Step the attenuator from 0 to 60 dB attenuation in steps of 10 dB. With each step the autorange output will drop and then stabilize at its original amplitude. As greater attenuation is switched in the noise on the signal will rise.
5. If a failure is found, check the latch outputs vs the values shown in the MUX Table on A3, schematic sheet 2 of 2. If the select address is correct, check amplifiers, voltage dividers and input grounding analog switch A2U50.
6. To avoid crosstalk in A3U39 do input grounding as follows: U55 input is grounded -10 to +20 dB gain. U38 input is grounded -10 to +40 dB gain.

8-250. Detector Troubleshooting

- 8-251.
1. Check the positive side of C34, C35, or C36. There should be a 3.9v P-P 1004 Hz transmit monitor signal. If not, adjust the looped transmit level.
 2. Waveform diagrams are provided on the schematic to ease troubleshooting the detector section. The following hints may prove useful:
 - a. The output of U22 must be correct for any of the rest of the circuit to work. Both TP10 and TP21 signals must be correct.
 - b. In addition to U22, only U21, U20A and associated circuitry must function for the average detector to work.
 - c. U22, U23, U24B, and associated circuitry must function for the Qrms detector to work.

8-252. IMPULSE NOISE CIRCUITRY

- 8-253.
1. Check for a 10v reference voltage at A3U13 pin 15. If not, the reference voltage has failed or is being loaded down.
 2. Check the impulse noise DAC as follows:
 - a. Select IMPULSE NOISE and DISPLAY-RCV on the front panel.
 - b. Select LOW(SET) threshold to 0 dBm(the 10's digit is irrelevant).
 - c. The following DC voltages should appear on TP3 through TP5.

3. Check inverter A3U1B. Voltages at A3U1 pin 1 and pin 7 should be equal but of opposite sign(± 20 mv, if not, replace A3U1).

Table 8-8. A2U1B Voltages

TP	ACCEPTABLE RANGE
5(LO)	0.762 - 0.794
4(MID)	1.207 - 1.257
3(HI)	1.914 - 1.992

The following table indicates the DC voltage on TP3(HI) for each dB of low-threshold setting.

Table 8-9. TP3 Voltages

THRESHOLD (dB)	NOMINAL VOLTAGE	ACCEPTABLE RANGE
X1	2.188	2.144 - 2.232
X2	2.461	2.412 - 2.510
X3	2.734	2.679 - 2.789
X4	3.086	3.024 - 3.148
X5	3.477	3.407 - 3.547
X6	3.867	3.790 - 3.944
X7	4.336	4.249 - 4.423
X8	4.883	4.785 - 4.981
X9	5.469	5.360 - 5.578

4. Check comparators.
 - a. Set the IMPULSE NOISE LOW threshold to 90 dBm. Select the 15kHz filter. Inject a signal of 2.0v at 1 kHz into the receiver.

NOTE

Transmitter will not work because its signal path is grounded in Impulse Noise using the 15 kHz filter.

- b. Monitor the output of the impulse noise comparators(A3U2 pins 1, 2, and 13). Each output should be a squarewave with a voltage swing from +5v to -14v.

8-254. CHARGER BOARD TROUBLESHOOTING**8-255. Procedure**

8-256. Check the AC supply at the A5 charger board. Connect the 4935A to an AC power source, cycle the power switch from ON to STBY and check for the following voltages on A5J1.

pin 1 = 12 to 14 vDC
 pin 2 = 23.5 to 29.5 vDC
 pin 3 = -29.5 to -23.5 vDC

If these voltages are not present check AC power supply and cable.

8-257. Charge Circuitry/Charge Inhibit Circuitry

8-258. 1. Disconnect batteries from charger board. Remove the battery cables from A5J2,J3 and J4. Place a 900-1000 ohm load in parallel with a voltmeter. Put the power switch in STBY.

2. Check the voltage at the battery jacks (one terminal of each battery jack is ground).

J2 = 23.5 to 29.5 Vdc
 J3 = -29.5 to -23.5 Vdc
 J4 = 11.0 to 13.0 Vdc

- a. For GROUND voltage readings, check F1, F2, F3, and diodes CR10, CR30, and CR31.
- b. If there is no change in voltage between ON and STBY for all jacks, check the front panel power switch and the charger inhibit circuitry.
- c. For incorrect voltages or no change in voltage between ON and STBY, on only one or two jacks, check the charge circuit associated with that jack.

3. Turn power switch ON and check the voltages at the following points on the A5 charger board.

J2 = $9V \pm 2V$
 J3 = $-9V \pm 2V$
 J4 = $6V \pm 2V$

- a. For GROUND voltage readings, check F1,F2,F3, and CR10,CR30,and CR31
- b. If there is no change in voltage between ON and STBY for all jacks, check the front panel power switch and the charger inhibit circuitry.

- c. For incorrect voltages or no change in voltage between ON and STBY, on only one or two jacks, check the charge circuit associated with that jack.
4. Reconnect the battery cables to A5J2, A5J3, A5J4, and remove the load from the voltmeter (cabling to J2 and J3 can be interchanged).
5. Check battery voltages at A5J2, A5J3, and A5J4.
 - a. At A5J4 the +5 V supply should be greater than 6. The low voltage shutdown is 5.75Vdc.
 - b. A5J2 and A5J3 the ± 14 V supply voltages should be greater than 16V(absolute value). The low voltage shutdown is 15.06V.
 - c. If the battery voltages are low, charge the batteries by connecting the 4935A to an AC power source. Turn the power switch to STBY and let the unit charge overnight.
 - d. If battery voltages do not reach acceptable values after overnight charging and the unit passes tests 1-4 above, replace the batteries and repeat the charger board troubleshooting tests to verify fix.

8-259. Relay Drive Circuitry, Low Voltage Inhibit Circuitry

NOTE

Batteries must be functional and fully charged for this test to work, see paragraph 8-258.

- 8-260.
 1. Disconnect the 4935A from AC power.
 2. Cycle the power switch from STBY to ON. If the 4935A comes on, go to paragraph 8-261, if not, continue.
 3. Short A5C3 to disable AC low voltage inhibit circuitry.
 4. Cycle power switch from STBY to ON. If unit does not start, see paragraph 8-263 below and troubleshoot the relay drive circuitry before continuing.

8-261. Inhibit Circuitry AC And Low Voltage**NOTE**

Batteries must be fully charged for this test to be applicable. see paragraph 8-258.

- 8-262.
1. Turn unit on under battery power. Check +14 supply. Shut down by momentarily grounding (~2 sec) A5U1 pin 5. The unit should shut down.
 2. Wait 2 sec. and cycle power switch to turn unit on under battery power. Check -14V supply low voltage shutdown by momentarily (~2 sec) grounding A5U1 pin 6. Unit should shut down.
 3. Wait 2 seconds and cycle the power switch to turn unit on under battery power. Check +5V supply low voltage shutdown by momentarily (~2 sec) shorting A5U1 pins 7 and 9.
 4. Wait 2 seconds and cycle the power switch to turn unit on under battery power.
 5. The instrument self-check check has been completed, connect the unit to an AC power source and the 4935A will usually reset (do a self check).
 6. Wait 2 seconds and disconnect the AC power source. The 4935A should shut down.
 7. If any of these tests fail, go to paragraph 8-265. If the unit passed all tests to this point, the charger board is functioning properly and the following tests are not necessary to perform.

8-263. Delay And Relay Drive Circuitry**NOTE**

Batteries must be fully charged for this test to be applicable. see paragraph 8-258.

- 8-264.
1. Connect 4935A to AC power source and turn on.
 2. Without turning the 4935A off, disconnect the unit from AC power.

3. Short A5C3 with a jumper to disable the AC power and the low voltage inhibit circuitry.
4. Momentarily short the collector and emitter of A5Q2. The relay should click and unit should turn on. If not, check K1,R1,F1,F3,CR1,CR10,CR31,CR3, and $\pm 14V$ batteries.
5. Remove the jumper from A5C3. Cycle the power from ON to STBY to shut the unit down.
6. Connect 4935A to AC power source and turn on.
7. Without turning the 4935A OFF, disconnect the AC power from the unit.
8. Momentarily ground the collector of Q3. The 4935A should turn on and stay on.
 - a. If it does not turn on,R4,Q4,C2, and Q2 are suspected.
 - b. If the unit comes on, but does not stay on, then CR2, CR6,R2,R3,R5,Q3, and C1 are suspected.
 - c. If the unit turns on and stays on, but will not turn on when the power switch is recycled, then C1, F2, R5, the power switch, and the wiring are suspected.

8-265. AC And Low Voltage Inhibit Troubleshooting

- 8-266. 1. Connect 4935A to an AC power source and turn on.

NOTE

When the 4935A is operated on AC power the low voltage and AC inhibit sense circuits take power and sense inputs from the A4 transmitter board. The circuits are not affected by the battery or charge circuitry.

2. Check -15.5V regulated supply. U1pin3 and U2pin8 should be between +14V and +16.5V. If not, check Q11, CR17, and R29.
3. Check the -15.5V regulated supply. U1pin12 and U2pin4 should be between -14V and -16.5V. If not, check Q9,CR18, and R19 (the $\pm 15.5V$ regulated supplies are used only for U1 and U2 on the charger board).
4. U2 takes its input from the +14V regulated supply on the A5 charger board and establishes $\pm 7V$ references.

- a. U2 pin 3 should be $7.0V \pm 0.1V$. If not, check R38, R39, and the +14V regulated AC supply on the 4935A transmitter board. The unit should be ON.
 - b. U2 pins 1 & 2 should be $7.0V \pm 20mV$. If not, replace U2, U1.
 - c. U2 pin 7 should be -7.0V, equal to U2 pin 1 $\pm 100mV$. If not, replace U2, U1, R14, or R28 as necessary.
5. Check the inputs to the comparators:
- a. References:
U1 pin 4 = +7V
U1 pin 7 = -7V
U1 pin 8 = GND
 - b. Scaled Supply Voltages:
U1 pin 5 > +7V (more positive)
U1 pin 6 < -7V (more negative)
U1 pin 9 > 0V (any positive voltage)
- If not, check the AC supplies and the voltage dividers (R9 R11, R13 & R14, R16 & R17). Replace U1 if necessary.
6. Check U1. With the inputs at levels given in Step 5, the voltage at pins 1, 2, and 14 should be $\sim 0V$ (open collector outputs). If not, replace U1 and/or CR5.

7. Check the ac inhibit sense. The voltage at the junction of CR3, CR5 and R10 should be more negative than -17 v (-16 v at the low line voltage limit, -21 v at high limit). If not check the -17 vac supply and CR3.
8. Check the inhibit circuitry common to both ac and low voltage inhibit functions.
 - a. Measure each side of C3, then subtract to get the voltage across C3.



Do not ground either side of C3.

- b. Under ac operation it should be about .7 volts.
 - c. Remove ac power. Turn the cycle power switch from ON to STBY to ON and wait 10 seconds. The voltage across C3 should be approximately 0 volts, no more than $+5$ volts.
 - d. If either of these tests fail, check Q4, Q5, CR4, CR1, R7, R8, R10, and C3. If necessary, go to the relay drive troubleshooting paragraph 8-263.
9. If all tests pass, then the ac and low voltage inhibit circuitry is working.

8-267. SERVICE AIDS

8-268. SERVICE SELECTION OF INPUT/NOTCH FILTER/25 dB AMP

8-269. The input source selects (balanced input transformer vs loop-around from transmitter vs noise to ground), whether the notch filter is selected, or whether the 25 dB amp is selected can be set by hand for servicing.

8-270. Procedure



U7 is static sensitive.

- 8-271.
 1. Remove U7 from its socket and place it in protective carbon foam.
 2. Install DIP switch in JU3.
 3. Select desired conditions using following tables:
 - D0 — Balanced input/noise-to-ground select.
Switch open = logic 1 = Balanced input from transformer.
Switch closed = logic 0 = noise-to-ground input.
 - D1 — Front panel input/transmit monitor loop-around switch
Switch open = logic 1 = front panel. Input (balanced input or noise to ground input).
Switch closed = logic 0 transmit monitor loop around.
 - D2 — notch filter in/out select.
Switch open = logic 1 = notch filter in.
Switch closed = logic 0 = Notch filter out.
 - D3 — 25 dB Amplifier in/out.
Switch open = logic 1 = Amp in.
Switch closed = logic 0 = Amp out.
 4. Remove DIP switch.
 5. Replace U7 in its socket (observe CAUTION of Step 1).

8-272. SERVICE SELECTION OF NOISE FILTERS BY HAND

8-273. The noise filter select MUX can be hand programmed to a desired filter with a DIP switch inserted in JU1 in place of the shorting bar.

8-274. Procedure

- 8-275. 1. Remove shorting bar from JU1.
2. Insert DIP switch with all switches open.
3. Close the switch between pins 8 and 9. This is the strobe for latch U11, with switch closed, latch outputs follow latch inputs.
4. Use the switches between pins 5-12, 6-11 and 7-10 to select filter according to Table 8-10.

Table 8-10. Hand Selection of Noise Filters

FILTER	ADDRESS			SWITCH SETTINGS		
	D2	D1	D0	S7-PINS 7 & 10	S6-PINS 6 & 11	S5-PINS 5 & 12
C-Message	0	0	0	Closed	Closed	Closed
3 kHz Flat	0	0	1	Closed	Closed	Open
15 kHz Flat	0	1	0	Closed	Open	Closed
Program	0	1	1	Closed	Open	Open
50 kBit	1	0	0	Open	Closed	Closed
P/AR Filter	1	0	1	Open	Closed	Open
Flat (No Filter)	1	1	0	Open	Open	Closed
Ground	1	1	1	Open	Open	Open

5. When you are finished, replace the shorting bar in JU1 pins 1-16, 2-15, 3-14, 4-13.

8-276. SERVICE SELECTION OF AUTORANGE GAIN FOR SERVICE

8-277. The autorange circuit can be forced to a desired gain, manually, for servicing.

8-278. Procedure

CAUTION

U17 is static sensitive.

1. Remove U17 from its socket and insert into protective foam.
2. Place a DIP switch in JU4.
3. Select the desired autorange state according to Table 8-11.

Table 8-11. Autorange States

GAIN WANTED	SWITCH SETTINGS				D7	D6	D5	D4
	S1-PINS 1-16	S2-PINS 2-15	S3-PINS 3-14	S4-PINS 4-13				
-10 dB	Closed	Closed	Closed	Closed	0	0	0	0
0 dB	Closed	Closed	Open	Closed	0	0	1	0
10 dB	Closed	Open	Closed	Closed	0	1	0	0
20 dB	Closed	Open	Open	Closed	0	1	1	0
30 dB	Open	Closed	Closed	Closed	1	0	0	0
40 dB	Open	Closed	Open	Closed	1	0	1	0
50 dB	Open	Open	Closed	Open	1	1	0	1
60 dB	Open	Open	Open	Open	1	1	1	1

- When you are finished, remove the DIP switch and replace U7.

8-279. HAND SELECTION OF A3C57 AND A3C160 (A13, C57 AND A3C160 FOR P/AR UNITS) FOR DESIRED FREQUENCY RESPONSE

8-280. Three things affect the frequency response of the 4935A receiver in LEVEL FREQUENCY if everything is functioning correctly:

- The input transformer.
- The buffer amp at the input (U30).
- The 150 kHz low pass filter (LPF) at the autorange output.

8-281. If an instrument fails to meet the frequency response specification ± 5 dB at the frequencies listed in the frequency response table below, first check for an instrument failure. This might include op-amps that distort the signal, losses or gains through switches (CMOS switches), tip or ring on the input terminal being grounded either through a direct short or a finite resistance, etc.

Second, the 150 kHz LPF should be rechecked. Use the table in the receiver test procedure.

Third, the U30 buffer amplifier should be checked. In particular, check for incorrect or out of tolerance components among U30, R75, R76, and C57. (R75 and C57 especially!)

If all looks correct, C57 and C160 need to be hand selected.

8-282. Hand Selection Of C57 And C160

Step 1: Measure the frequency response of the receiver at the frequencies noted in Table 8-12 and record them in dB.

Table 8-12. Hand Selection of C57 and C160

CAPACITOR	FREQUENCY RESPONSE						
	30 kHz	40 kHz	50 kHz	60 kHz	70 kHz	80 kHz	85 kHz
(A) 1500 pF	(measured)						
(B) (circle) (one)							
1200 pF	+09	+14	+20	+25	+30	+33	+35
1300 pF	+06	+10	+14	+17	+20	+22	+23
1400 pF	+03	+05	+07	+08	+10	+11	+11
1500 pF	0 (ref)	0 (ref)	0 (ref)	0 (ref)	0 (ref)	0 (ref)	0 (ref)
1600 pF	-.03	-.05	-.07	-.08	-.10	-.11	-.11
1700 pF	-.07	-.10	-.14	-.17	-.19	-.21	-.21
1800 pF	-.10	-.16	-.21	-.25	-.28	-.30	-.31
Others: (approximately)	N.03 per 100 pF	<u>.05</u> 100 pF	<u>.07</u> 100 pF	<u>.08</u> 100 pF	<u>.10</u> 100 pF	<u>.11</u> 100 pF	<u>.11</u> 100 pF
Net Response (Add (A) + (B))							

Step 2: Look in the table and pick a capacitor to make the overall frequency response be within specification. The specification should be ± 4 dB at all frequencies. Some judgment should be used to make the overall frequency response as flat as possible. Select a capacitor that makes the highest error = +.3 dB (if we were too high at 85 kHz). Note that the maximum may occur anywhere between 60 to 85 kHz typically. Probability of being too low in the 40 kHz region is minimal.

After picking this new capacitor, calculate the new theoretical frequency response (by adding A and B for the new capacitor value chosen), if it looks good continue to Step 3.

Step 3: Get a capacitor of the value chosen, it can be any mica capacitor of any tolerance and 50 vac or greater working voltage (you might measure its value to be sure). Put this capacitor in the circuit and recheck the frequency response at all frequencies (math errors aside, it should pass with a high degree of confidence).

8-283. FILTERS: RESPONSE OF EACH STAGE

8-284. The following are the nominal design responses to each filter in 4935A.

Table 8-13. 4935A C-Message Filter

Filter Input 1.000 volts (output in mv)					
FREQUENCY	U31-1 STAGE 1	U31-8 STAGE 2	U32-1 STAGE 3	U32-7 STAGE 4	TP15-1 STAGE 5
300	583	145	146	147	148
900	960	789	848	917	946
1000	968	790	863	952	988
2500	995	295	320	665	852
3000	997	241	201	512	734
4500	999	156	55	45	85

Table 8-14. 4935A 3 kHz Filter

Filter Input 1.000 volts (output in mv)					
FREQUENCY	U36-1 STAGE 1	U36-7 STAGE 2	U36-8 STAGE 3	TP15-3 STAGE 4	
100	1000	1000	1000	40.2	
500	1004	1004	1000	490.0	
1000	1015	1015	1000	1007.0	
2000	1063	1060	998	1712.0	
5000	1512	1386	989	2398.0	
10000	1040	516	193	504.0	

Table 8-15. 4935A 15 kHz Filter

Filter Input 1.000 volts (output in mv)					
FREQUENCY	TP15-5				
1K	1000				
15K	714				
30K	247				

Table 8-16. 4935A Program Filter

Filter Input 1.000 volts (output in mv)					
FREQUENCY	UP154				
1K	994				
3K HZ	707				
6K HZ	243				

Table 8-17. 4935A 50 kBit Filter

Filter Input = 1.000 volts (output in mv)					
FREQUENCY	U46-1 STAGE 1	U46-7 STAGE 2	U47-1 STAGE 3	TP15-6 STAGE 4	
1000	999	998	998	998.0	
15K	1000	896	889	944.0	
25K	1000	694	656	787.0	
35K	1000	485	401	560.0	
50K	1000	281	164	74.3	

Table 8-18. 4935A Notch Filter

Filter Input = 1.000 volts (output in mv)					
FREQUENCY	U40-7 STAGE 1	U51-7 STAGE 2	U51-14 STAGE 3		
400	1058	1034	993		
862	2476	1411	901		
1182	493	280	894		
1700	691	637	979		

Table 8-19. 4935A PAR Filter

Filter Input = 1.000 volts (output in mv)					
FREQUENCY	TP15-7 STAGE 1	TP15-8 STAGE 2			
300	232	49.1			
1000	1312	1566.0			
2300	736	492.0			

Table 8-20. 4935A 150 kHz Low Pass Filter

Filter Input = 0.20 volts (output in mv)					
FREQUENCY	U33 PIN 6 STAGE 1	U28 PIN 6 STAGE 2	U26 PIN 6 STAGE 3		
1	200	200	200		
60 K	231	204	201		
85 K	269	212	203		
100 K	305	221	203		
110 K	333	228	202		
135 K	402	235	184		

Table 8-21. 4935A 110 kHz Low Pass Filter

Filter Input = 0.50 volts (output in mv)					
FREQUENCY	U33 PIN 6 STAGE 1	U28 PIN 6 STAGE 2	U26 PIN 6 STAGE 3		
1 K	500	500	500		
60 K	656	523	501		
85 K	873	580	492		
100 K	1005	580	467		
110 K	998	526	372		

8-285. In order to check the filters accurately, the 4935A can be used as a measuring device. To measure, use a synthesizer as the input and set 4935A on LEVEL FREQUENCY and RCV. Next, remove the shorting bar on JU1 and replace it with a DIP switch. Using the table for the filter MUX (U37) given on the schematic, one can manually control which filter is switched in and can read the display to check the filter response.

Table 8-22. Bell 41009 C-Message Filter

Filter Input = 0.0 dBm		
FREQUENCY	ACCEPTABLE minimum	OUTPUT LEVEL maximum
60	-57.7	-53.7
100	-44.5	-40.5
200	-27.0	-23.0
300	-17.5	-15.5
400	-12.4	-10.4
500	- 8.5	- 6.5
600	- 5.7	- 3.7
700	- 3.7	- 1.7
800	- 2.5	- .5
900	- 1.6	+ .4
1000	- .2	+ .2
1200	- 1.2	+ .8
1300	- 1.5	+ .5
1500	- 2.0	0.0
1800	- 2.3	- .3
2000	- 2.3	- .3
2500	- 2.4	- .4
2800	- 2.9	- .9
3000	- 3.5	- 1.5
3300	- 7.2	- 3.2
3500	- 9.6	- 5.6
4000	-17.5	-11.5
4500	-24.5	-18.5
5000	-31.5	-25.5

Table 8-23. Bell 41009 3 kHz Flat Filter

Filter Input = 0.0 dBm		
FREQUENCY	ACCEPTABLE minimum	OUTPUT LEVEL maximum
30	- 2.5	+ 2.5
60	- 1.7	+ 1.7
400	- .5	+ .5
1000	- .2	+ .2
2000	- 1.8	+ .2
3000	- 4.8	- 1.2
6000	-15.3	- 9.3

Table 8-24. Bell 41009 15 kHz Flat Filter

Filter Input = 0.0 dBm at given frequencies		
FREQUENCY	ACCEPTABLE minimum	OUTPUT LEVEL maximum
30	- 2.5	+ 2.5
60	- 1.7	+ 1.7
400	- .5	+ .5
1000	- .2	+ .2
10K	- 1.8	+ .2
15K	- 4.8	- 1.2
30K	-15.3	- 9.3

Table 8-25. Bell 41009 Program Filter

Filter Input = 0.0 dBm		
FREQUENCY	ACCEPTABLE minimum	OUTPUT LEVEL maximum
100	-28.3	-24.3
200	-19.3	-15.3
300	-14.3	-10.3
400	-11.0	- 7.0
500	- 7.6	- 5.6
600	- 5.7	- 3.7
700	- 4.2	- 2.2
800	- 3.0	- 1.0
900	- 1.8	+ .2
1000	- .2	+ .2
1500	+ 2.2	+ 4.2
2000	+ 3.8	+ 5.8
2500	+ 3.6	+ 7.6
3000	+ 4.0	+ 8.0
4000	+ 4.5	+ 8.5
5000	+ 4.5	8.5
6000	+ 3.4	+ 9.4
7000	+ 2.8	+ 8.8
8000	+ 1.0	+ 7.0
9000	- 5.5	+ 2.5
10000	-12.5	- 4.5

Table 8-26. Bell 41009 50 kBit Filter

Filter Input = 0.0 dBm		
FREQUENCY	ACCEPTABLE minimum	OUTPUT LEVEL maximum
20	-13.0	- 7.0
50	- 4.2	- 1.2
200	- .7	+ .3
1k	- .2	+ .2
5k	- .6	+ .4
10k	- .8	+ .2
15k	- 1.7	+ .3
20k	- 2.3	- .3
25k	- 3.1	- 1.1
30k	- 4.8	- 1.8
35k	- 6.7	- 3.3
40k	- 9.8	- 5.8
45k	-17.0	-11.0
50k		<-22.0
55k		<-30.0

Table 8-27. Bell 41009 PAR Filter

FREQUENCY	NOMINAL LOSS	NOMINAL PHASE RESPONSE (Degrees)
140.625	-50.5	173.7
390.625	-31.5	161.2
640.625	-20.4	144.0
890.625	-10.6	114.3
1140.625	- 2.1	55.4
1390.625	- .6	30.2
1640.625	- 5.5	- 86.4
1890.625	-10.5	-113.8
2140.625	-14.5	-128.6
2390.625	-17.7	-137.8
2640.625	-20.4	-144.0
2890.625	-22.7	-148.5
3140.625	-24.6	-152.0
3390.625	-26.4	-154.7
3640.625	-27.9	-156.9
3890.625	-29.3	-158.7

Table 8-28. Bell 41009 Notch Filter

Filter Input = 0.0 dBm (with 15 kHz flat)		
FREQUENCY	ACCEPTABLE minimum	OUTPUT LEVEL maximum
=< 400 Hz	- 5	+ .5
400 <f=< 862 Hz	-3.0	+ .5
862 <f=< 995		<+ .5
995=<f=<1025		<-50.0
1025 <f< 1182		<+ .5
1182=<f< 1700	-3.0	+ .5
1700=<f	- 5	+ .5

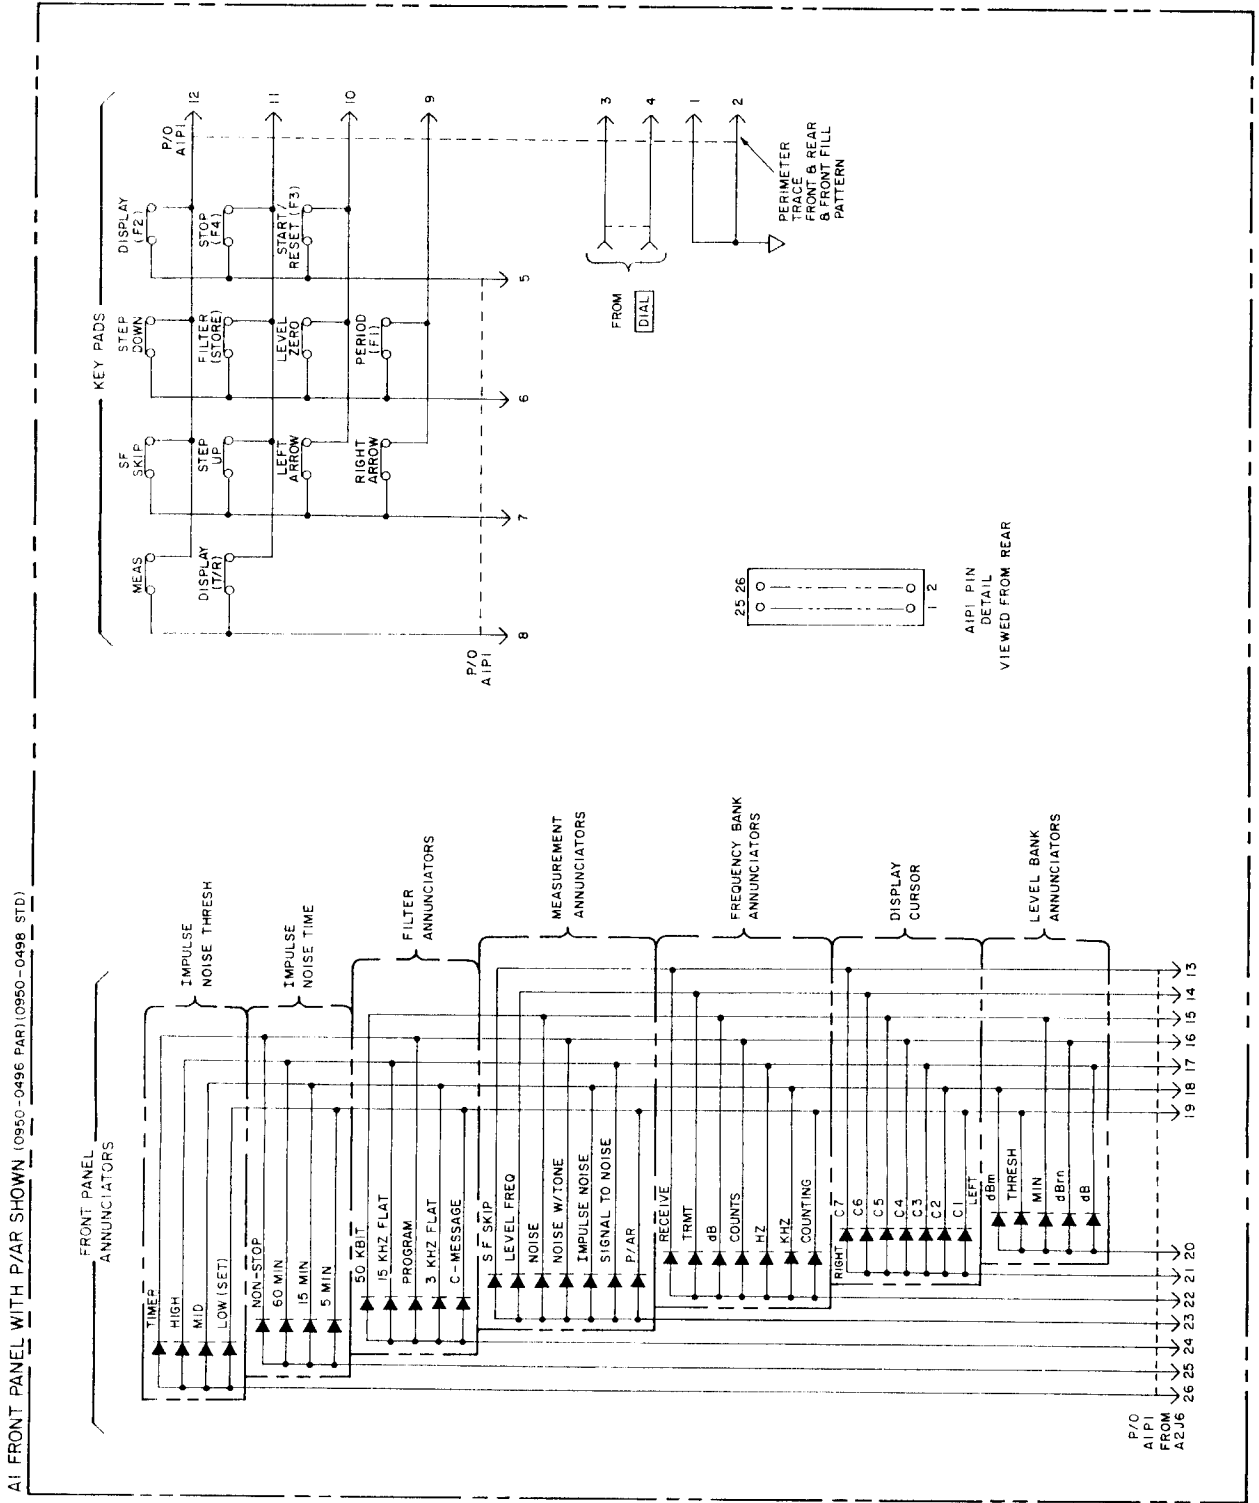


Figure 8-24.
A1 Front Panel Schematic Diagram
8-69



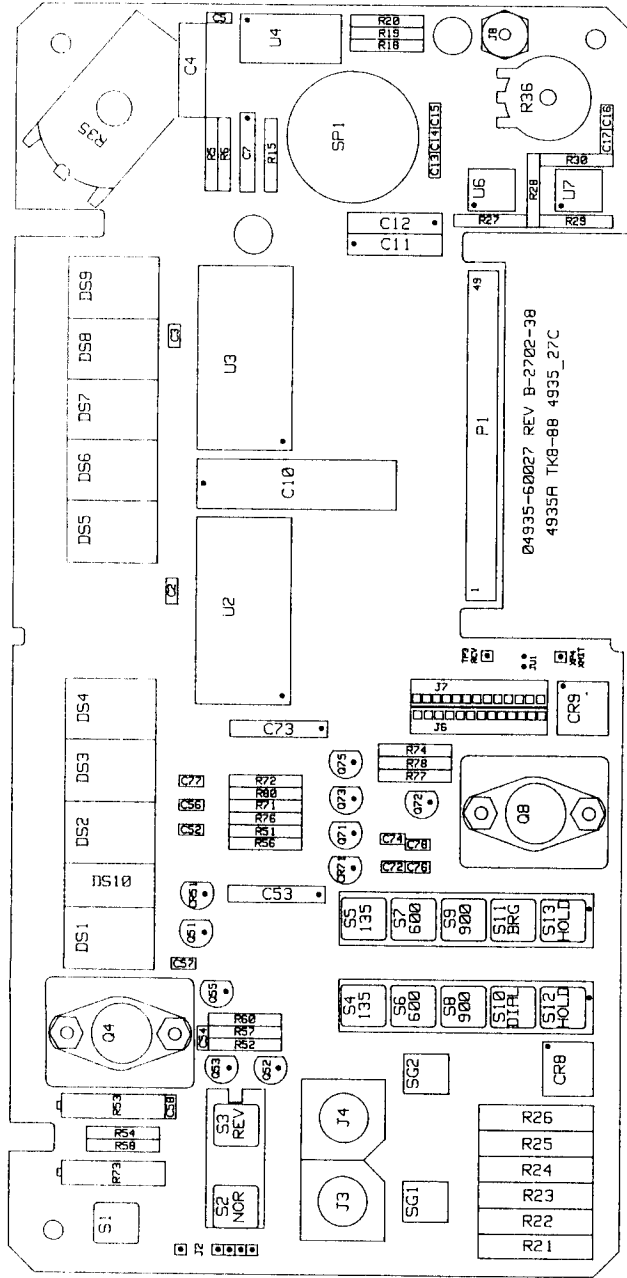


Figure 8-25. A2 Switchboard Component Locator


P/O A2 SWITCH ASSY (04935-60027) REV A-2642-3

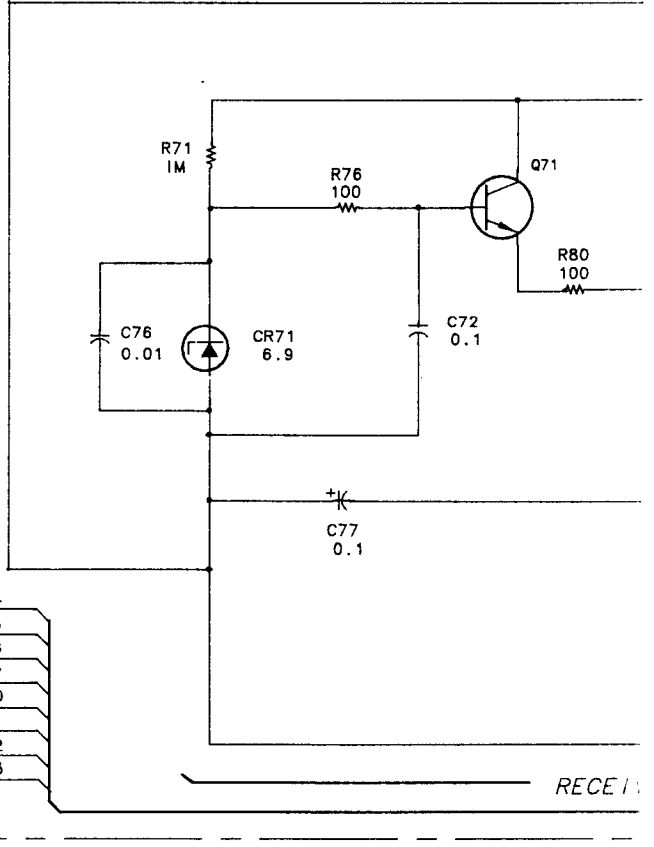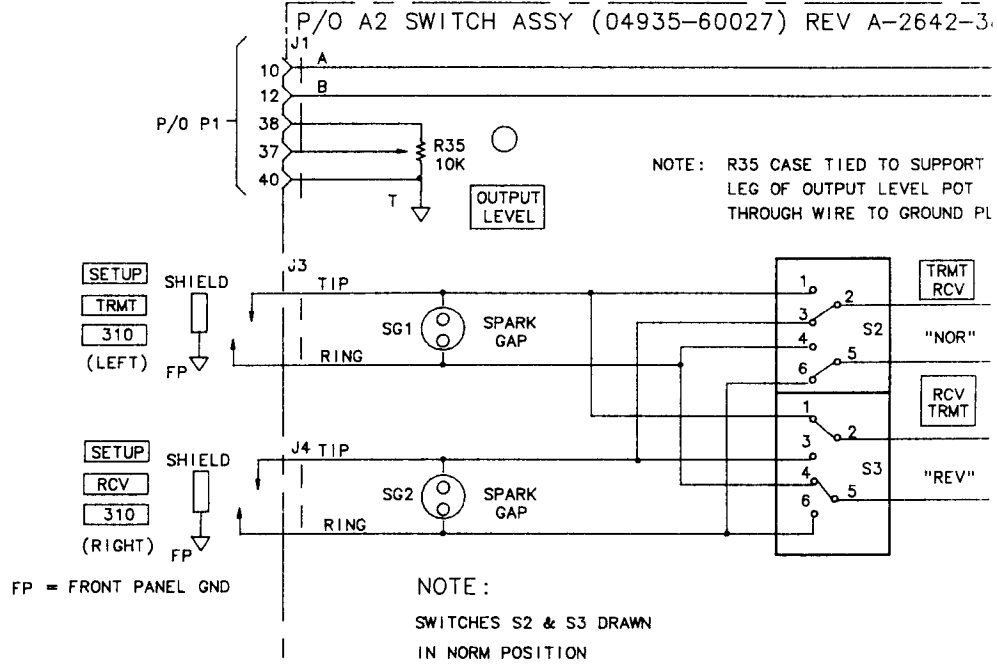


8-26 A

NOTE: R35 CASE TIED TO SUPPORT
LEG OF OUTPUT LEVEL POT
THROUGH WIRE TO GROUND PLANE

OUTPUT
LEVEL

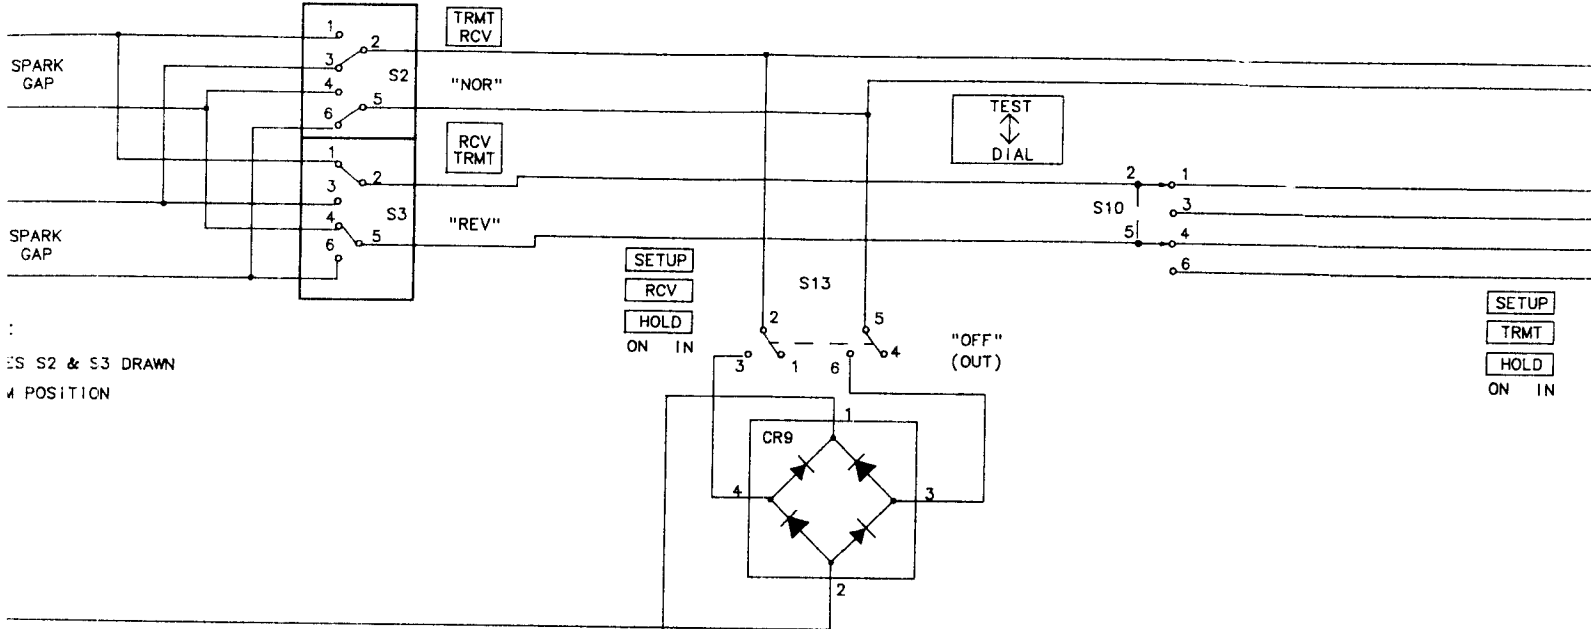


ES S2 & S3 DRAWN
4 POSITION

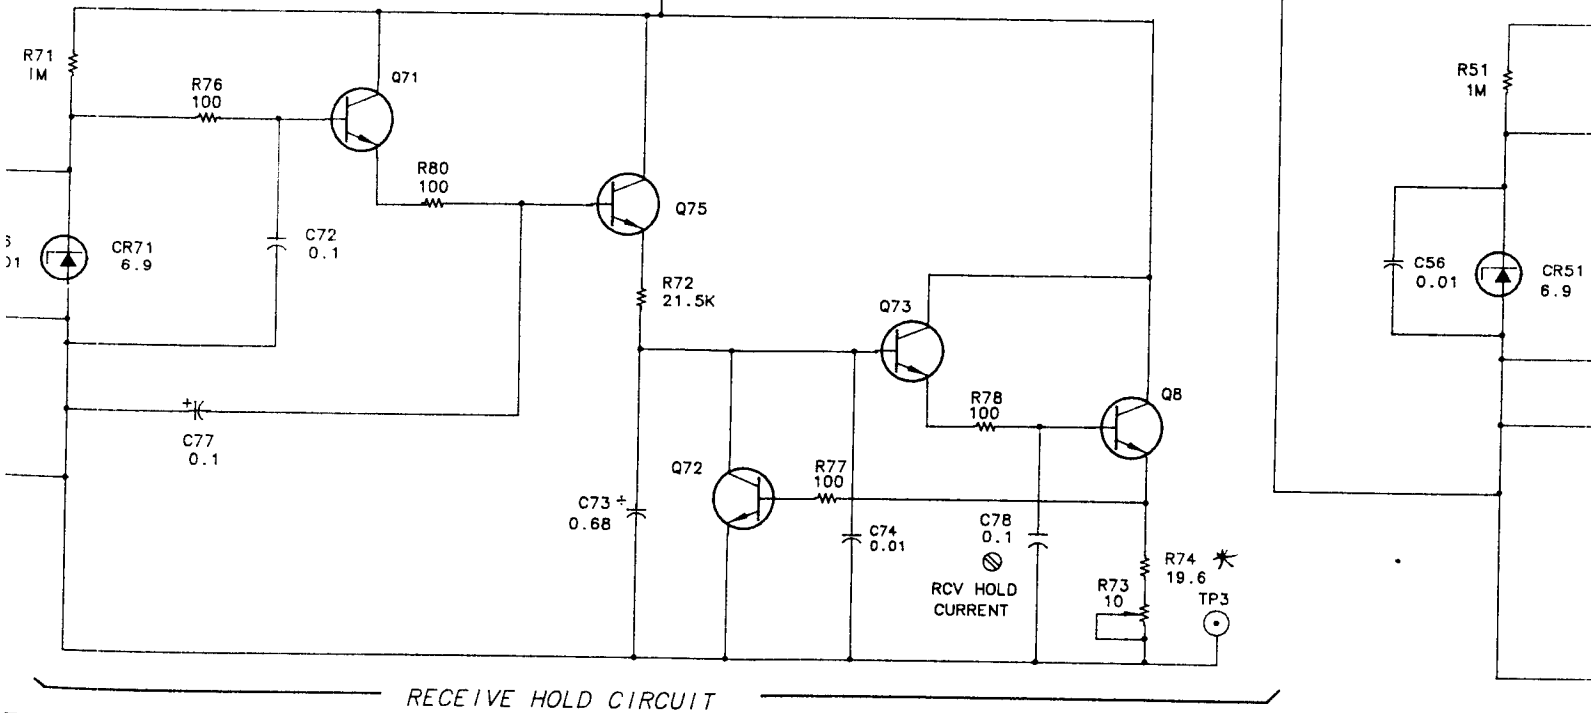


* Change to 16.2 (0757-1)
to obtain current for
21 to 34 ma

8-20 B

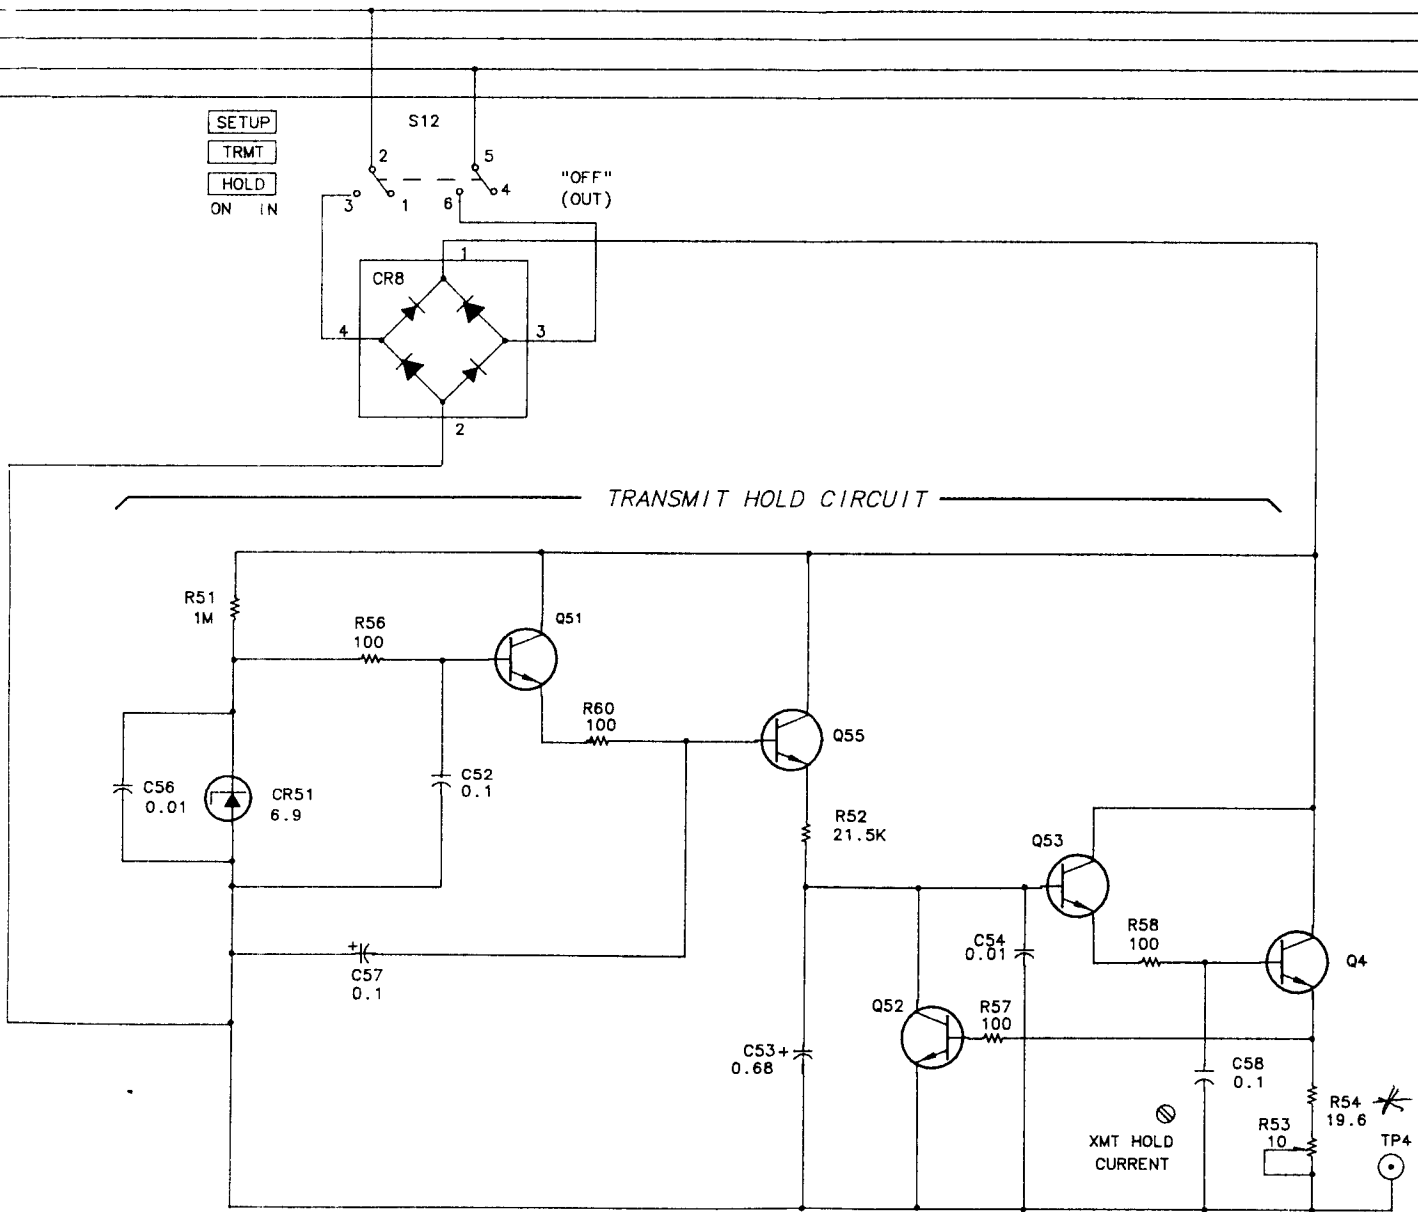


2 wgs to 16.2 (0757-0382)
 - obtain current from
 1 to 34 ma

8-26 C

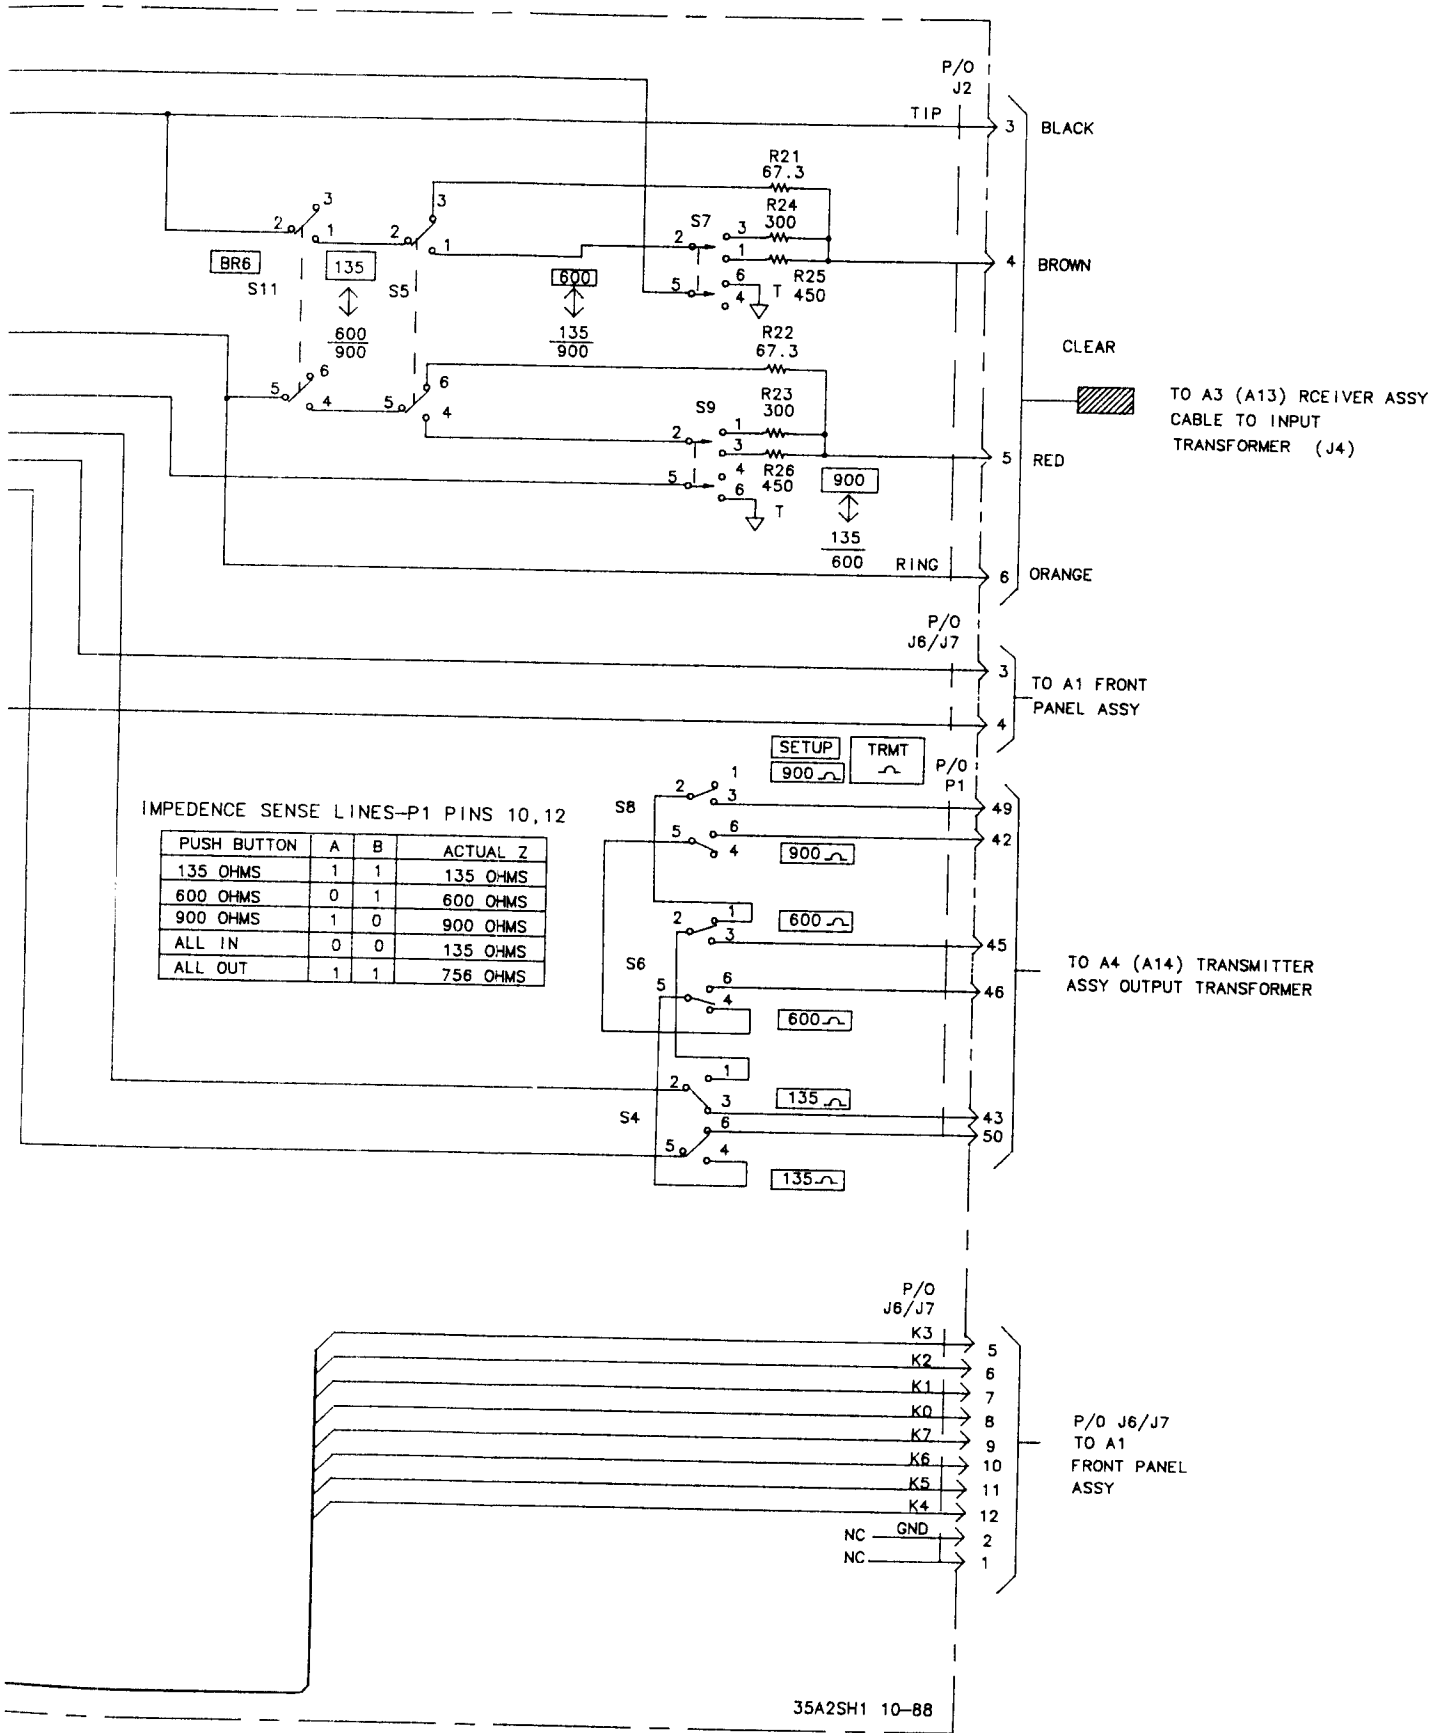


35A2SH1 10-88

Figure 8-26. A2 Switchboard Schematic Diagram (Sheet 1 of 2)

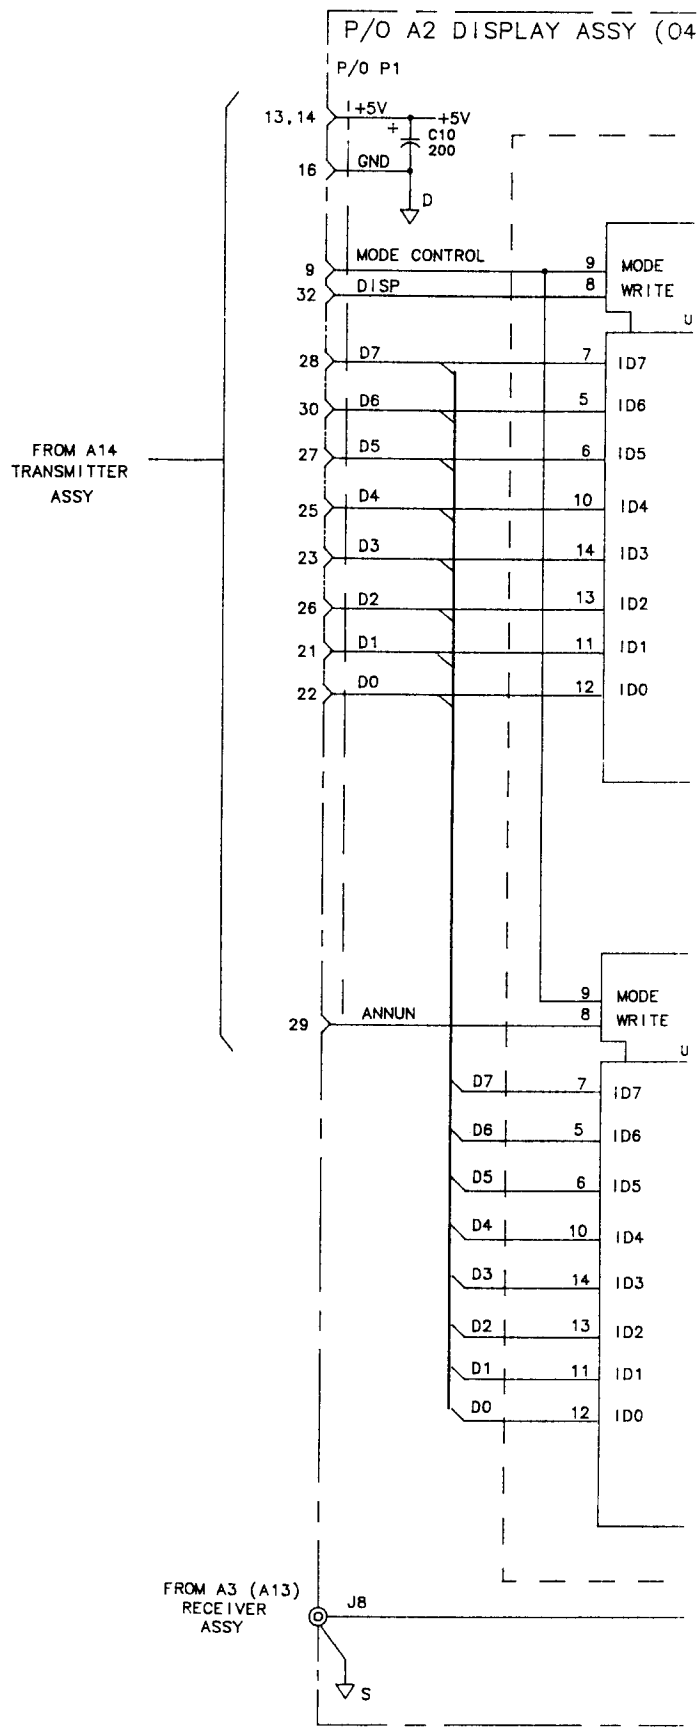



8-27 A

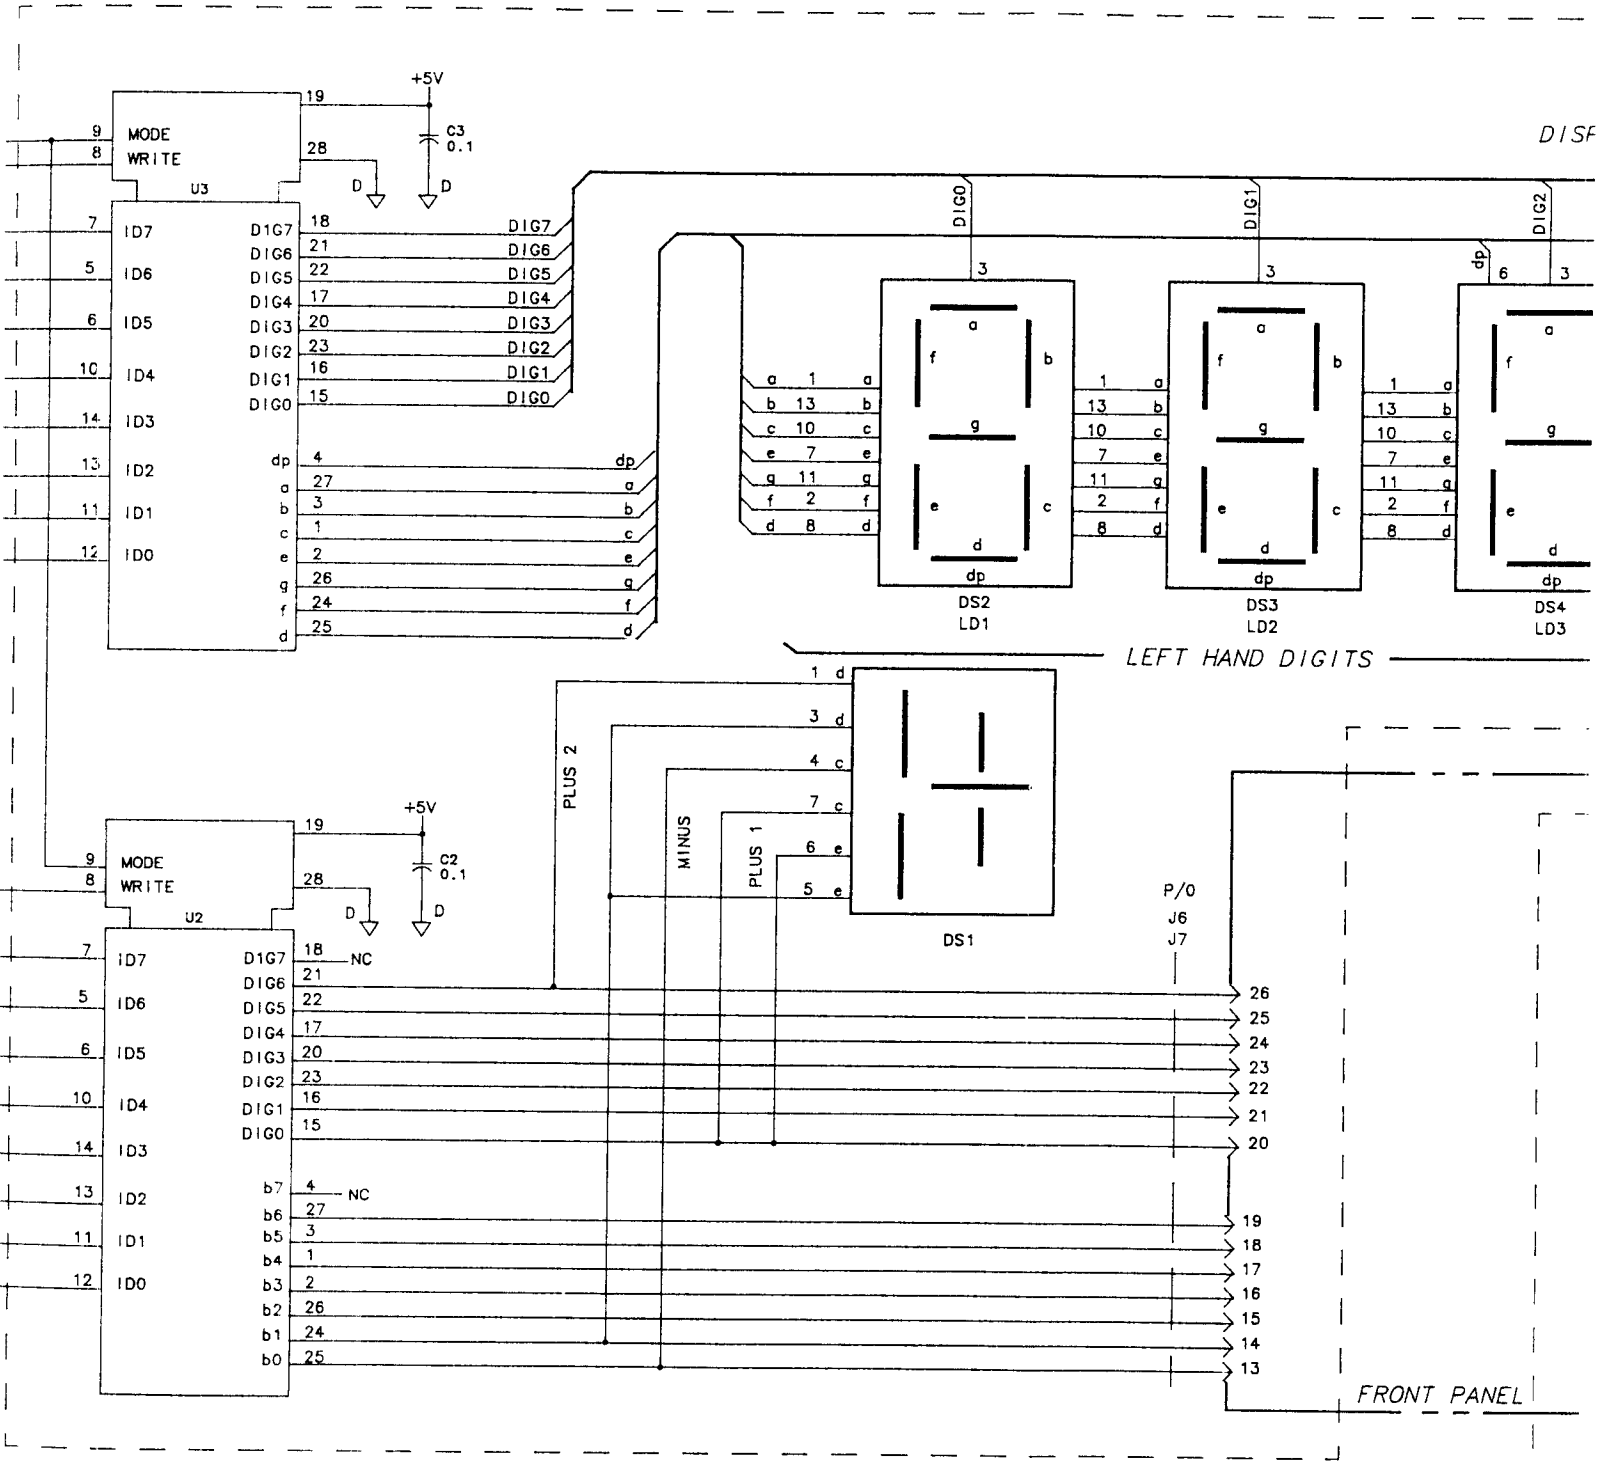

8-27 B





DISPLAY AND ANNUNCIATOR CIRCUITS

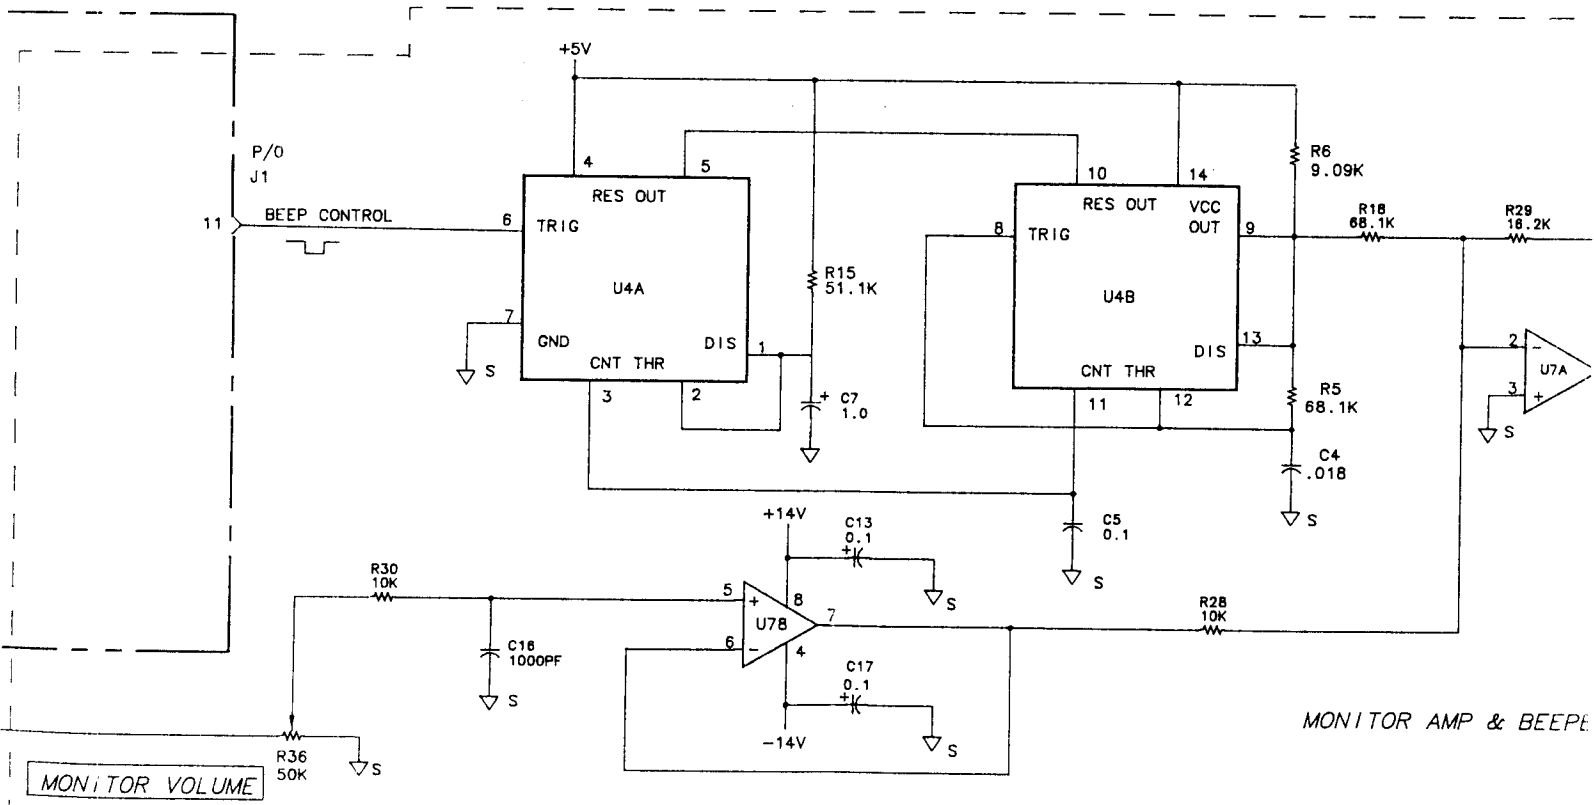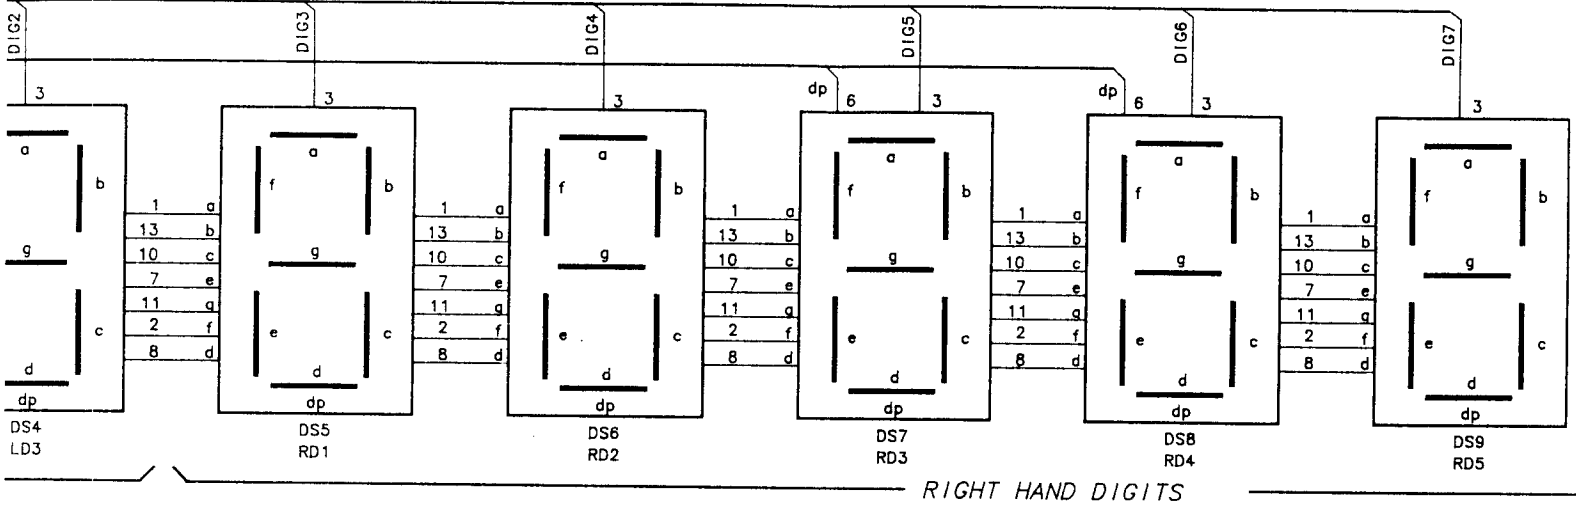

8-27C

NOTES:

1. REFERENCE DESIGNATION WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS
CAPACITANCE IN MICROFARADS
INDUCTANCE IN MICROHENRIES
3. ASTERISK (*) INDICATES FACTORY SELECTED COMPONENT, AVERAGE VALUE SHOWN.
4. S= SIGNAL GROUND
D= DIGITAL GROUND
T= TRANSMITTER GROUND

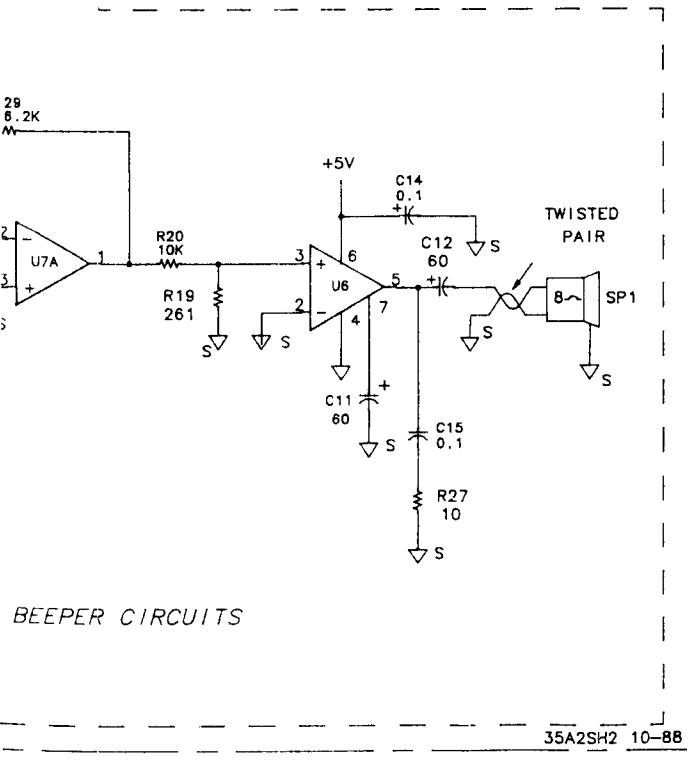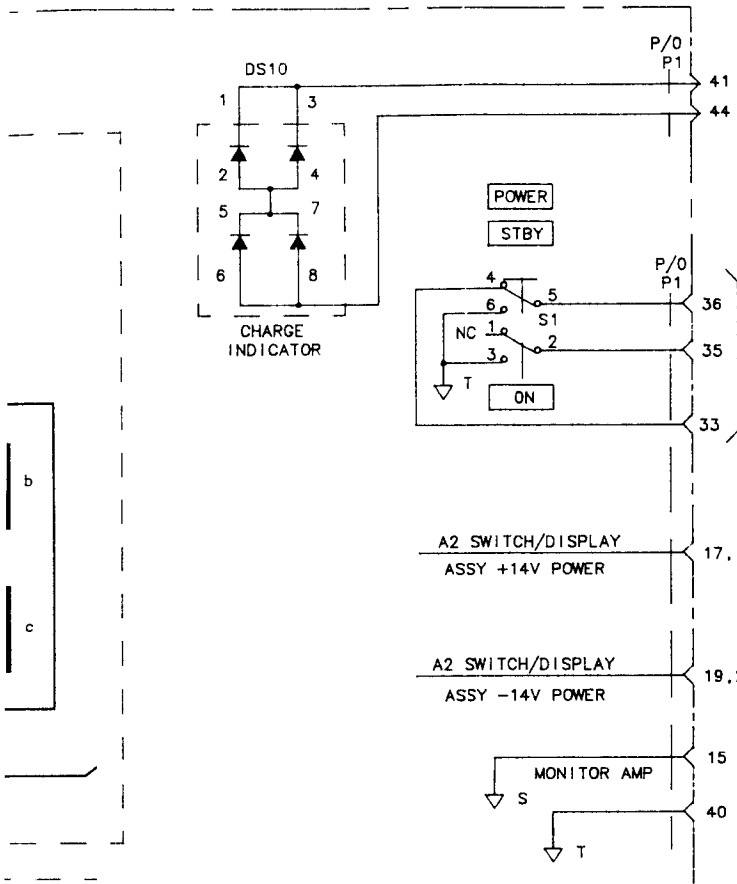

35A2SH2 10-88

Figure 8-27.
A2 Switchboard Schematic Diagram (Sheet 2 of 2)
8-73

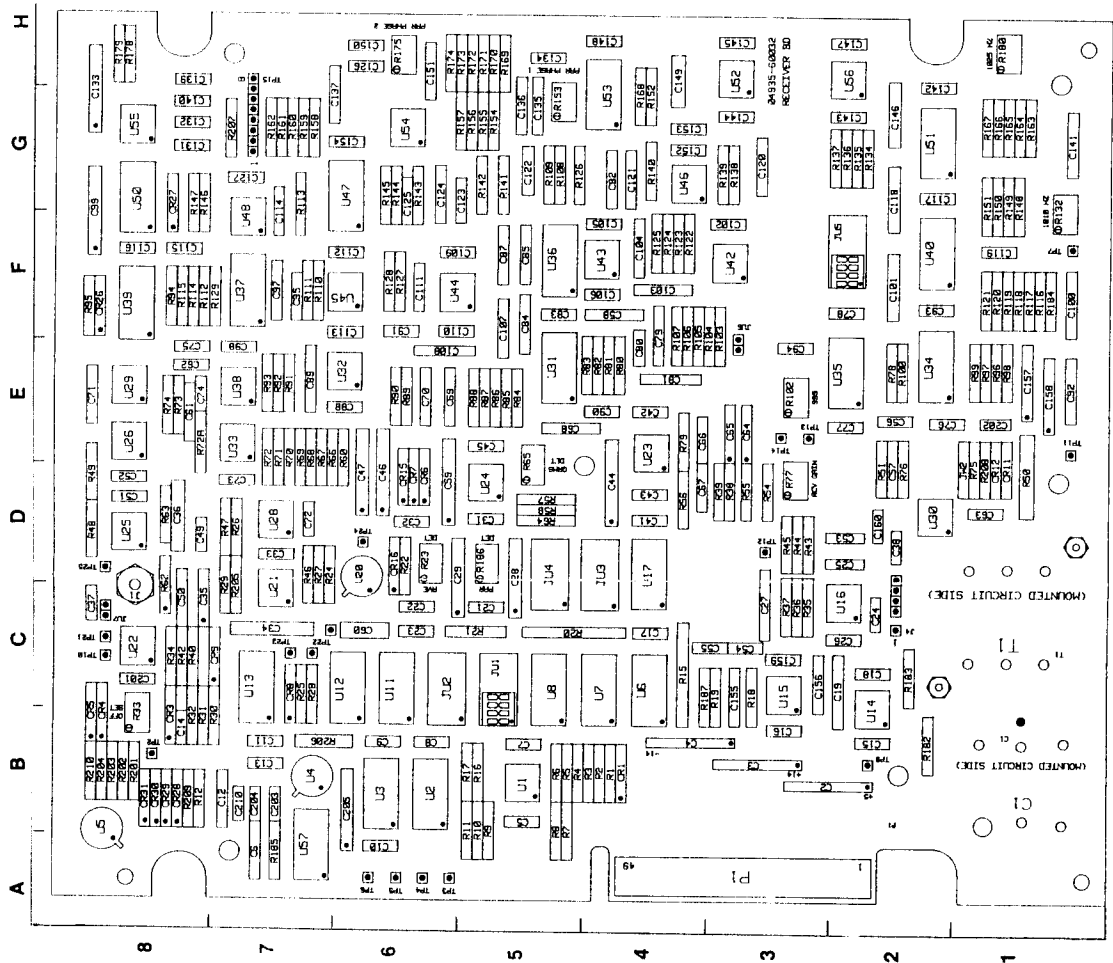


Figure 8-28. A13 Receiver Board Component Loca

REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.
C1	B-1	C88	E-6	R72	E-7	R157	G-6	U1	A-1	U15	C-1
C2	B-2	C91	E-5	R73	E-8	R158	G-7	U2	A-2	U16	C-2
C3	B-3	C90	E-6	R74	E-9	R159	G-7	U3	A-3	U17	C-3
C4	B-4	C89	E-7	R75	E-10	R160	G-8	U4	A-4	U18	C-4
C5	B-5	C86	F-3	R76	D-2	R161	G-7	U5	A-5	U19	C-5
C6	A-7	C84	F-3	R77	D-3	R162	G-7	U6	A-6	U20	C-6
C7	B-5	C85	F-7	R78	D-3	R163	G-1	U7	A-7	U21	C-7
C8	B-6	C87	F-7	R79	E-4	R164	G-1	U8	A-8	U22	C-8
C9	A-6	C89	E-6	R80	E-4	R165	G-1	U9	A-9	U23	C-9
C10	B-7	C100	F-1	R81	E-4	R166	G-1	U10	A-10	U24	C-10
C11	C-12	C101	F-2	R82	E-4	R167	G-1	U11	A-11	U25	C-11
C12	B-7	C102	F-2	R83	E-4	R168	G-4	U12	A-12	U26	C-12
C13	C-13	C103	F-3	R84	E-4	R169	H-5	U13	A-13	U27	C-13
C14	B-2	C104	F-4	R85	E-5	R170	H-5	U14	A-14	U28	C-14
C15	B-2	C105	F-4	R86	E-5	R171	H-5	U15	A-15	U29	C-15
C16	B-5	C106	F-4	R87	E-5	R172	H-5	U16	A-16	U30	C-16
C17	C-4	C107	F-5	R88	E-5	R173	H-6	U17	A-17	U31	C-17
C18	C-2	C108	F-5	R89	E-6	R174	H-6	U18	A-18	U32	C-18
C19	C-2	C109	F-5	R90	E-6	R175	H-6	U19	A-19	U33	C-19
C20	C-6	C110	F-8	R91	E-7	R176	H-8	U20	A-20	U34	C-20
C21	C-2	C111	F-6	R92	E-7	R177	H-2	U21	A-21	U35	C-21
C22	C-6	C112	F-6	R93	E-7	R178	H-2	U22	A-22	U36	C-22
C23	C-2	C113	F-6	R94	F-8	R179	H-2	U23	A-23	U37	C-23
C24	C-2	C114	F-6	R95	F-8	R180	H-2	U24	A-24	U38	C-24
C25	C-2	C115	F-8	R96	F-8	R181	C-2	U25	A-25	U39	C-25
C26	C-3	C116	F-8	R97	E-1	R182	C-2	U26	A-26	U40	C-26
C27	C-3	C117	F-8	R98	E-1	R183	C-2	U27	A-27	U41	C-27
C28	D-5	C118	G-2	R99	E-1	R184	D-5	U28	A-28	U42	C-28
C29	D-5	C119	G-2	R100	E-1	R185	D-5	U29	A-29	U43	C-29
C30	D-5	C120	G-3	R101	E-1	R186	D-5	U30	A-30	U44	C-30
C31	D-7	C121	G-3	R102	E-2	R187	D-5	U31	A-31	U45	C-31
C32	C-8	C122	G-4	R103	E-2	R188	D-5	U32	A-32	U46	C-32
C33	C-8	C123	G-4	R104	F-4	R189	D-5	U33	A-33	U47	C-33
C34	C-8	C124	G-4	R105	F-4	R190	D-5	U34	A-34	U48	C-34
C35	C-8	C125	G-4	R106	F-4	R191	D-5	U35	A-35	U49	C-35
C36	C-8	C126	G-6	R107	F-4	R192	D-5	U36	A-36	U50	C-36
C37	C-4	C127	H-6	R108	G-5	R193	D-5	U37	A-37	U51	C-37
C38	D-4	C128	G-7	R109	G-5	R194	D-5	U38	A-38	U52	C-38
C39	D-4	C129	G-7	R110	G-5	R195	D-5	U39	A-39	U53	C-39
C40	D-4	C130	G-8	R111	F-7	R196	D-5	U40	A-40	U54	C-40
C41	D-4	C131	G-8	R112	F-8	R197	D-5	U41	A-41	U55	C-41
C42	D-4	C132	G-8	R113	F-8	R198	D-5	U42	A-42	U56	C-42
C43	D-4	C133	G-8	R114	F-8	R199	D-5	U43	A-43	U57	C-43
C44	D-6	C134	H-5	R115	F-1	R200	D-5	U44	A-44	U58	C-44
C45	D-6	C135	H-5	R116	F-1	R201	D-5	U45	A-45	U59	C-45
C46	D-6	C136	G-5	R117	F-1	R202	D-5	U46	A-46	U60	C-46
C47	D-8	C137	G-5	R118	F-1	R203	D-5	U47	A-47	U61	C-47
C48	D-8	C138	H-3	R119	F-1	R204	D-5	U48	A-48	U62	C-48
C49	D-8	C139	H-3	R120	F-1	R205	D-5	U49	A-49	U63	C-49
C50	D-2	C140	G-1	R121	F-1	R206	D-5	U50	A-50	U64	C-50
C51	D-2	C141	H-2	R122	F-1	R207	D-5	U51	A-51	U65	C-51
C52	D-2	C142	H-2	R123	F-1	R208	D-5	U52	A-52	U66	C-52
C53	D-2	C143	G-3	R124	F-1	R209	D-5	U53	A-53	U67	C-53
C54	D-2	C144	G-3	R125	F-1	R210	D-5	U54	A-54	U68	C-54
C55	D-2	C145	H-3	R126	F-1	R211	D-5	U55	A-55	U69	C-55
C56	D-2	C146	H-3	R127	F-1	R212	D-5	U56	A-56	U70	C-56
C57	D-2	C147	H-3	R128	F-1	R213	D-5	U57	A-57	U71	C-57
C58	F-4	C148	G-2	R129	F-1	R214	D-5	U58	A-58	U72	C-58
C59	D-6	C149	H-2	R130	F-1	R215	D-5	U59	A-59	U73	C-59
C60	D-6	C150	H-4	R131	F-1	R216	D-5	U60	A-60	U74	C-60
C61	D-6	C151	H-6	R132	F-1	R217	D-5	U61	A-61	U75	C-61
C62	D-6	C152	H-6	R133	F-1	R218	D-5	U62	A-62	U76	C-62
C63	D-1	C153	H-8	R134	F-1	R219	D-5	U63	A-63	U77	C-63
C64	D-3	C154	G-4	R135	F-1	R220	D-5	U64	A-64	U78	C-64
C65	D-3	C155	G-4	R136	F-1	R221	D-5	U65	A-65	U79	C-65
C66	D-4	C156	C-3	R137	G-2	R222	D-5	U66	A-66	U80	C-66
C67	D-4	C157	C-3	R138	G-2	R223	D-5	U67	A-67	U81	C-67
C68	D-4	C158	C-3	R139	G-2	R224	D-5	U68	A-68	U82	C-68
C69	D-4	C159	C-3	R140	G-2	R225	D-5	U69	A-69	U83	C-69
C70	D-4	C160	C-3	R141	G-2	R226	D-5	U70	A-70	U84	C-70
C71	D-4	C161	C-3	R142	G-2	R227	D-5	U71	A-71	U85	C-71
C72	D-7	C162	D-2	R143	G-5	R228	D-5	U72	A-72	U86	C-72
C73	D-7	C163	D-2	R144	G-5	R229	D-5	U73	A-73	U87	C-73
C74	D-7	C164	D-2	R145	G-5	R230	D-5	U74	A-74	U88	C-74
C75	D-8	C165	E-1	R146	G-6	R231	D-5	U75	A-75	U89	C-75
C76	D-8	C166	E-1	R147	G-6	R232	D-5	U76	A-76	U90	C-76
C77	D-8	C167	E-1	R148	G-6	R233	D-5	U77	A-77	U91	C-77
C78	D-8	C168	E-1	R149	G-6	R234	D-5	U78	A-78	U92	C-78
C79	D-8	C169	E-1	R150	G-6	R235	D-5	U79	A-79	U93	C-79
C80	D-8	C170	E-1	R151	G-6	R236	D-5	U80	A-80	U94	C-80
C81	D-8	C171	E-1	R152	G-6	R237	D-5	U81	A-81	U95	C-81
C82	D-8	C172	E-1	R153	G-6	R238	D-5	U82	A-82	U96	C-82
C83	D-8	C173	E-1	R154	G-6	R239	D-5	U83	A-83	U97	C-83
C84	D-8	C174	E-1	R155	G-6	R240	D-5	U84	A-84	U98	C-84
C85	D-8	C175	E-1	R156	G-6	R241	D-5	U85	A-85	U99	C-85
C86	D-8	C176	E-1	R157	G-6	R242	D-5	U86	A-86	U100	C-86
C87	D-8	C177	E-1	R158	G-6	R243	D-5	U87	A-87	U101	C-87
C88	D-8	C178	E-1	R159	G-6	R244	D-5	U88	A-88	U102	C-88
C89	D-8	C179	E-1	R160	G-6	R245	D-5	U89	A-89	U103	C-89
C90	D-8	C180	E-1	R161	G-6	R246	D-5	U90	A-90	U104	C-90
C91	D-8	C181	E-1	R162	G-6	R247	D-5	U91	A-91	U105	C-91
C92	D-8	C182	E-1	R163	G-6	R248	D-5	U92	A-92	U106	C-92
C93	D-8	C183	E-1	R164	G-6	R249	D-5	U93	A-93	U107	C-93
C94	D-8	C184	E-1	R165	G-6	R250	D-5	U94	A-94	U108	C-94
C95	D-8	C185	E-1	R166	G-6	R251	D-5	U95	A-95	U109	C-95
C96	D-8	C186	E-1	R167	G-6	R252	D-5	U96	A-96	U110	C-96
C97	D-8	C187	E-1	R168	G-6	R253	D-5	U97	A-97	U111	C-97
C98	D-8	C188	E-1	R169	G-6	R254	D-5	U98	A-98	U112	C-98
C99	D-8	C189	E-1	R170	G-6	R255	D-5	U99	A-99	U113	C-99
C100	D-8	C190	E-1	R171	G-6	R256	D-5	U100	A-100	U114	C-100

A B C D E F G H

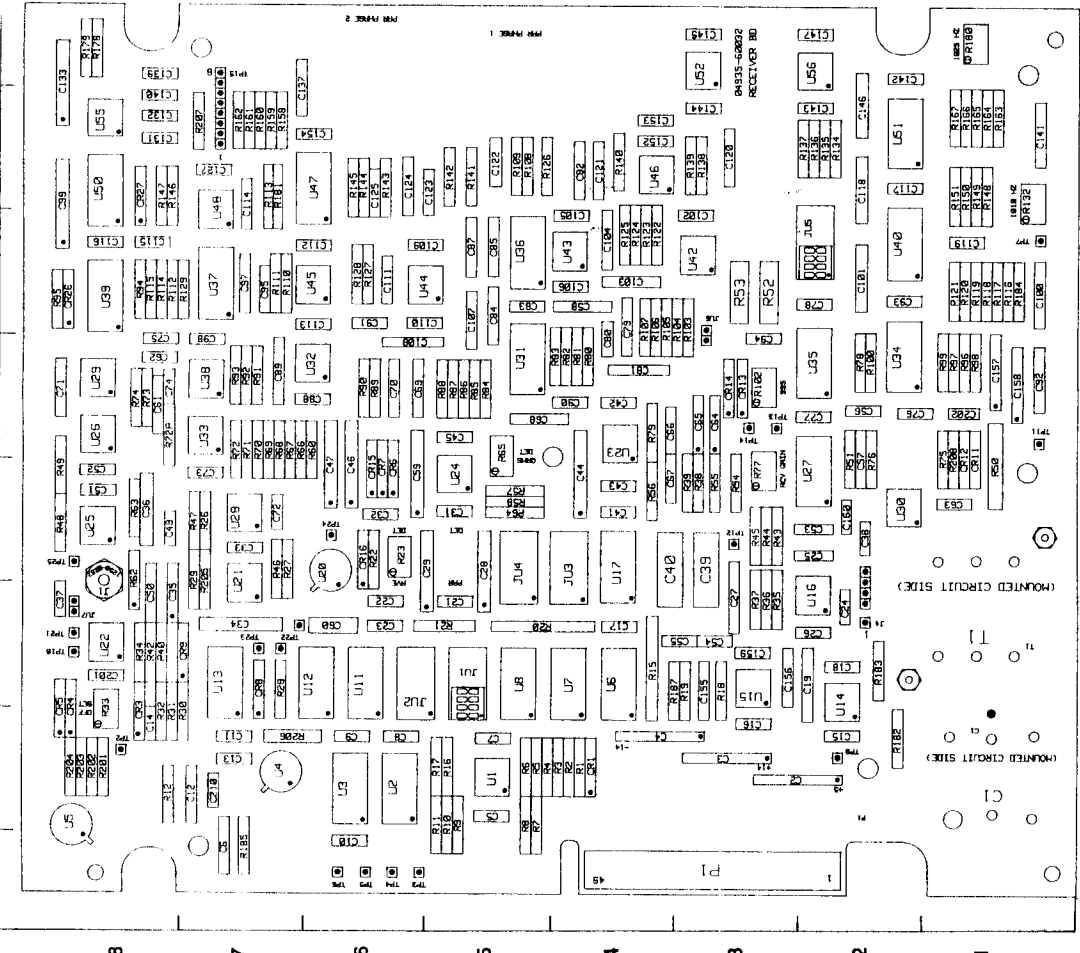


Figure 8-29. A3 Receiver Board Component Locator

8-74 A

REF. DESIG	GRID LOC	REF. DESIG	GRID LOC	REF. DESIG	GRID LOC	REF. DESIG	GRID LOC	REF. DESIG	GRID LOC	REF. DESIG	GRID LOC
C1	B-1	C81	E-4	R68	E-7	R148	G-1	U30	F-6		
C2	B-3	C82	G-4	R69	E-7	R149	G-1	U33	F-6		
C3	B-3	C83	F-5	R70	E-7	R150	G-1	U34	E-2		
C4	B-5	C84	F-5	R71	E-7	R151	G-1	U35	E-2		
C5	B-5	C85	F-5	R72	E-8	R152	G-1	U36	F-7		
C6	B-7	C86	F-8	R73	E-8	R153	G-1	U37	F-7		
C7	B-7	C87	F-8	R74	E-8	R154	G-1	U38	F-8		
C8	B-7	C88	F-8	R75	E-8	R155	G-1	U39	F-8		
C9	B-7	C89	F-8	R76	E-8	R156	G-1	U40	F-8		
C10	B-7	C90	F-8	R77	E-8	R157	G-1	U41	F-8		
C11	B-7	C91	F-8	R78	E-8	R158	G-1	U42	F-8		
C12	B-7	C92	F-8	R79	E-8	R159	G-1	U43	F-8		
C13	B-7	C93	F-8	R80	E-8	R160	G-1	U44	F-8		
C14	B-7	C94	F-8	R81	E-8	R161	G-1	U45	F-8		
C15	B-7	C95	F-8	R82	E-8	R162	G-1	U46	F-8		
C16	B-7	C96	F-8	R83	E-8	R163	G-1	U47	F-8		
C17	B-7	C97	F-8	R84	E-8	R164	G-1	U48	F-8		
C18	B-7	C98	F-8	R85	E-8	R165	G-1	U49	F-8		
C19	B-7	C99	F-8	R86	E-8	R166	G-1	U50	F-8		
C20	B-7	C100	F-8	R87	E-8	R167	G-1	U51	F-8		
C21	B-7	C101	F-8	R88	E-8	R168	G-1	U52	F-8		
C22	B-7	C102	F-8	R89	E-8	R169	G-1	U53	F-8		
C23	B-7	C103	F-8	R90	E-8	R170	G-1	U54	F-8		
C24	B-7	C104	F-8	R91	E-8	R171	G-1	U55	F-8		
C25	B-7	C105	F-8	R92	E-8	R172	G-1	U56	F-8		
C26	B-7	C106	F-8	R93	E-8	R173	G-1	U57	F-8		
C27	B-7	C107	F-8	R94	E-8	R174	G-1	U58	F-8		
C28	B-7	C108	F-8	R95	E-8	R175	G-1	U59	F-8		
C29	B-7	C109	F-8	R96	E-8	R176	G-1	U60	F-8		
C30	B-7	C110	F-8	R97	E-8	R177	G-1	U61	F-8		
C31	B-7	C111	F-8	R98	E-8	R178	G-1	U62	F-8		
C32	B-7	C112	F-8	R99	E-8	R179	G-1	U63	F-8		
C33	B-7	C113	F-8	R100	E-8	R180	G-1	U64	F-8		
C34	B-7	C114	F-8	R101	E-8	R181	G-1	U65	F-8		
C35	B-7	C115	F-8	R102	E-8	R182	G-1	U66	F-8		
C36	B-7	C116	F-8	R103	E-8	R183	G-1	U67	F-8		
C37	B-7	C117	F-8	R104	E-8	R184	G-1	U68	F-8		
C38	B-7	C118	F-8	R105	E-8	R185	G-1	U69	F-8		
C39	B-7	C119	F-8	R106	E-8	R186	G-1	U70	F-8		
C40	B-7	C120	F-8	R107	E-8	R187	G-1	U71	F-8		
C41	B-7	C121	F-8	R108	E-8	R188	G-1	U72	F-8		
C42	B-7	C122	F-8	R109	E-8	R189	G-1	U73	F-8		
C43	B-7	C123	F-8	R110	E-8	R190	G-1	U74	F-8		
C44	B-7	C124	F-8	R111	E-8	R191	G-1	U75	F-8		
C45	B-7	C125	F-8	R112	E-8	R192	G-1	U76	F-8		
C46	B-7	C126	F-8	R113	E-8	R193	G-1	U77	F-8		
C47	B-7	C127	F-8	R114	E-8	R194	G-1	U78	F-8		
C48	B-7	C128	F-8	R115	E-8	R195	G-1	U79	F-8		
C49	B-7	C129	F-8	R116	E-8	R196	G-1	U80	F-8		
C50	B-7	C130	F-8	R117	E-8	R197	G-1	U81	F-8		
C51	B-7	C131	F-8	R118	E-8	R198	G-1	U82	F-8		
C52	B-7	C132	F-8	R119	E-8	R199	G-1	U83	F-8		
C53	B-7	C133	F-8	R120	E-8	R200	G-1	U84	F-8		
C54	B-7	C134	F-8	R121	E-8	R201	G-1	U85	F-8		
C55	B-7	C135	F-8	R122	E-8	R202	G-1	U86	F-8		
C56	B-7	C136	F-8	R123	E-8	R203	G-1	U87	F-8		
C57	B-7	C137	F-8	R124	E-8	R204	G-1	U88	F-8		
C58	B-7	C138	F-8	R125	E-8	R205	G-1	U89	F-8		
C59	B-7	C139	F-8	R126	E-8	R206	G-1	U90	F-8		
C60	B-7	C140	F-8	R127	E-8	R207	G-1	U91	F-8		
C61	B-7	C141	F-8	R128	E-8	R208	G-1	U92	F-8		
C62	B-7	C142	F-8	R129	E-8	R209	G-1	U93	F-8		
C63	B-7	C143	F-8	R130	E-8	R210	G-1	U94	F-8		
C64	B-7	C144	F-8	R131	E-8	R211	G-1	U95	F-8		
C65	B-7	C145	F-8	R132	E-8	R212	G-1	U96	F-8		
C66	B-7	C146	F-8	R133	E-8	R213	G-1	U97	F-8		
C67	B-7	C147	F-8	R134	E-8	R214	G-1	U98	F-8		
C68	B-7	C148	F-8	R135	E-8	R215	G-1	U99	F-8		
C69	B-7	C149	F-8	R136	E-8	R216	G-1	U100	F-8		
C70	B-7	C150	F-8	R137	E-8	R217	G-1	U101	F-8		
C71	B-7	C151	F-8	R138	E-8	R218	G-1	U102	F-8		
C72	B-7	C152	F-8	R139	E-8	R219	G-1	U103	F-8		
C73	B-7	C153	F-8	R140	E-8	R220	G-1	U104	F-8		
C74	B-7	C154	F-8	R141	E-8	R221	G-1	U105	F-8		
C75	B-7	C155	F-8	R142	E-8	R222	G-1	U106	F-8		
C76	B-7	C156	F-8	R143	E-8	R223	G-1	U107	F-8		
C77	B-7	C157	F-8	R144	E-8	R224	G-1	U108	F-8		
C78	B-7	C158	F-8	R145	E-8	R225	G-1	U109	F-8		
C79	B-7	C159	F-8	R146	E-8	R226	G-1	U110	F-8		
C80	B-7	C160	F-8	R147	E-8	R227	G-1	U111	F-8		
C81	B-7	C161	F-8	R148	E-8	R228	G-1	U112	F-8		
C82	B-7	C162	F-8	R149	E-8	R229	G-1	U113	F-8		
C83	B-7	C163	F-8	R150	E-8	R230	G-1	U114	F-8		
C84	B-7	C164	F-8	R151	E-8	R231	G-1	U115	F-8		
C85	B-7	C165	F-8	R152	E-8	R232	G-1	U116	F-8		
C86	B-7	C166	F-8	R153	E-8	R233	G-1	U117	F-8		
C87	B-7	C167	F-8	R154	E-8	R234	G-1	U118	F-8		
C88	B-7	C168	F-8	R155	E-8	R235	G-1	U119	F-8		
C89	B-7	C169	F-8	R156	E-8	R236	G-1	U120	F-8		
C90	B-7	C170	F-8	R157	E-8	R237	G-1	U121	F-8		
C91	B-7	C171	F-8	R158	E-8	R238	G-1	U122	F-8		
C92	B-7	C172	F-8	R159	E-8	R239	G-1	U123	F-8		
C93	B-7	C173	F-8	R160	E-8	R240	G-1	U124	F-8		
C94	B-7	C174	F-8	R161	E-8	R241	G-1	U125	F-8		
C95	B-7	C175	F-8	R162	E-8	R242	G-1	U126	F-8		
C96	B-7	C176	F-8	R163	E-8	R243	G-1	U127	F-8		
C97	B-7	C177	F-8	R164	E-8	R244	G-1	U128	F-8		
C98	B-7	C178	F-8	R165	E-8	R245	G-1	U129	F-8		
C99	B-7	C179	F-8	R166	E-8	R246	G-1	U130	F-8		
C100	B-7	C180	F-8	R167	E-8	R247	G-1	U131	F-8		

REF DESIG	GRID LOC
C1	B1
C2	B2
C3	B3
C4	B4
C5	B5
C6	B6
C7	B7
C8	B8
C9	B9
C10	B10
C11	B11
C12	B12
C13	B13
C14	B14
C15	B15
C16	B16
C17	B17
C18	B18
C19	B19
C20	B20
C21	B21
C22	B22
C23	B23
C24	B24
C25	B25
C26	B26
C27	B27
C28	B28
C29	B29
C30	B30
C31	B31
C32	B32
C33	B33
C34	B34
C35	B35
C36	B36
C37	B37
C38	B38
C39	B39
C40	B40
C41	B41
C42	B42
C43	B43
C44	B44
C45	B45
C46	B46
C47	B47
C48	B48
C49	B49
C50	B50
C51	B51
C52	B52
C53	B53
C54	B54
C55	B55
C56	B56
C57	B57
C58	B58
C59	B59
C60	B60
C61	B61
C62	B62
C63	B63
C64	B64
C65	B65
C66	B66
C67	B67
C68	B68
C69	B69
C70	B70
C71	B71
C72	B72
C73	B73
C74	B74
C75	B75
C76	B76
C77	B77
C78	B78
C79	B79
C80	B80
C81	B81
C82	B82
C83	B83
C84	B84
C85	B85
C86	B86
C87	B87
C88	B88
C89	B89
C90	B90

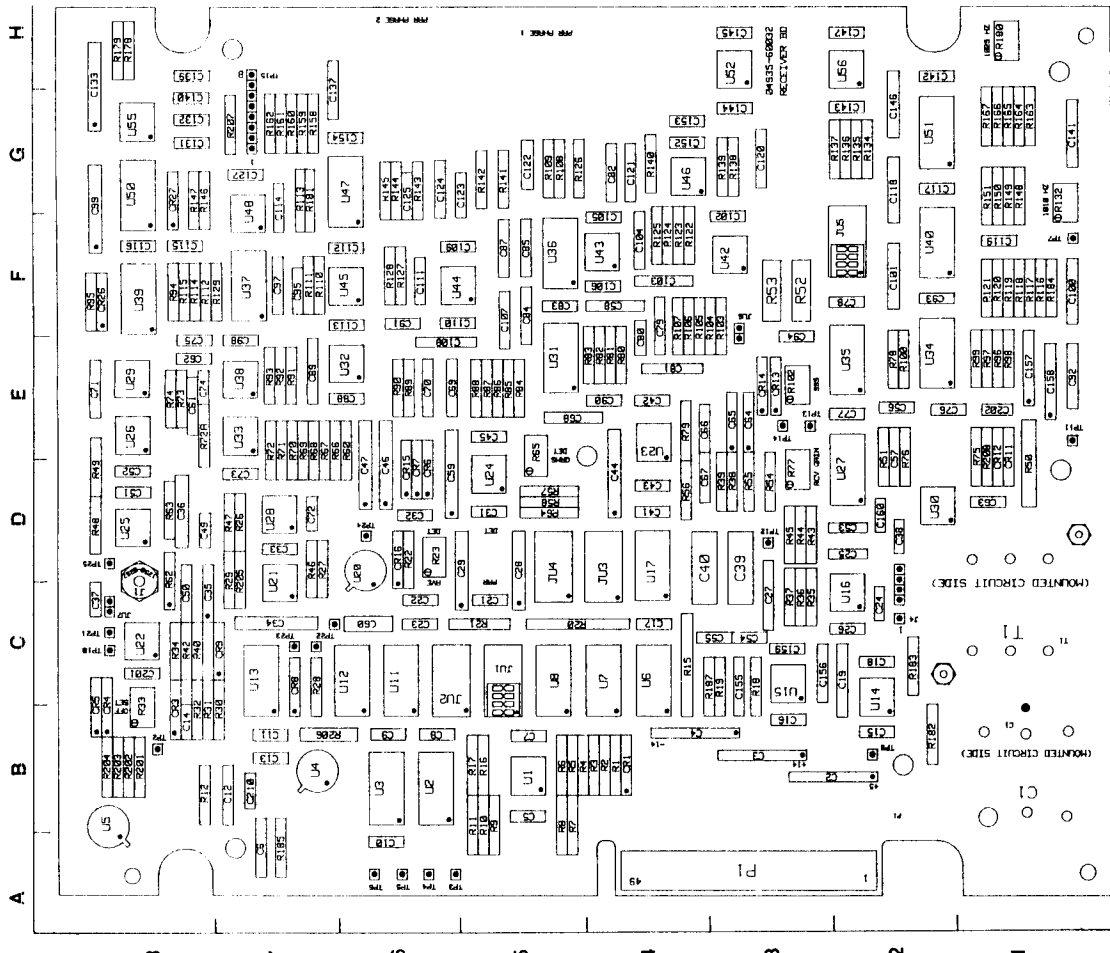



Figure 8-29. A3 Receiver Board Component Locator

8-78 A


REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	B1	R66	E7	R148	G1	U32	E6	R149	G1	U33	E6
C2	B2	R67	E7	R150	G1	U34	E2	R151	G1	U35	E2
C3	B3	R68	E7	R153	G7	U36	E5	R154	G7	U37	E5
C4	B4	R69	E7	R155	G7	U38	E7	R156	G7	U39	E7
C5	B5	R70	E8	R159	G7	U40	E8	R160	G7	U41	E8
C6	B6	R71	E8	R162	G7	U42	E2	R163	G7	U43	E2
C7	B7	R72	E8	R164	G1	U44	E4	R165	G1	U45	E4
C8	B8	R73	E8	R166	G1	U46	E6	R167	G1	U47	E6
C9	B9	R74	E8	R168	H1	U48	E8	R169	H1	U49	E8
C10	B10	R75	E1	R171	G7	U50	E1	R172	G7	U51	E2
C11	B11	R76	E1	R173	G7	U52	E2	R174	G7	U53	E2
C12	B12	R77	E1	R175	G7	U54	E4	R176	G7	U55	E4
C13	B13	R78	E2	R177	G1	U56	E4	R178	G1	U57	E4
C14	B14	R79	E2	R179	H1	U58	E8	R180	H1	U59	E8
C15	B15	R80	E2	R181	G7	U60	E8	R182	G7	U61	E8
C16	B16	R81	E2	R183	F1	U62	E8	R184	F1	U63	E8
C17	B17	R82	E2	R185	C3	U64	E8	R186	C3	U65	E8
C18	B18	R83	E2	R187	B7	U66	E8	R188	B7	U67	E8
C19	B19	R84	E2	R189	C7	U68	E8	R190	C7	U69	E8
C20	B20	R85	E2	R191	B8	U70	E8	R192	B8	U71	E8
C21	B21	R86	E2	R193	C7	U72	E8	R194	C7	U73	E8
C22	B22	R87	E2	R195	B8	U74	E8	R196	B8	U75	E8
C23	B23	R88	E2	R197	C7	U76	E8	R198	C7	U77	E8
C24	B24	R89	E2	R199	B8	U78	E8	R200	B8	U79	E8
C25	B25	R90	E2	R201	C7	U80	E8	R202	C7	U81	E8
C26	B26	R91	E2	R203	B8	U82	E8	R204	B8	U83	E8
C27	B27	R92	E2	R205	C7	U84	E8	R206	C7	U85	E8
C28	B28	R93	E2	R207	B8	U86	E8	R208	B8	U87	E8
C29	B29	R94	E2	R209	C7	U88	E8	R210	C7	U89	E8
C30	B30	R95	E2	R211	B8	U90	E8	R212	B8	U91	E8
C31	B31	R96	E2	R213	D3	U92	E8	R214	D3	U93	E8
C32	B32	R97	E2	R215	E3	U94	E8	R216	E3	U95	E8
C33	B33	R98	E2	R217	C6	U96	E8	R218	C6	U97	E8
C34	B34	R99	E2	R219	B5	U98	E8	R220	B5	U99	E8
C35	B35	R100	E2	R221	D6	U100	E8	R222	D6	U101	E8
C36	B36	R101	E2	R223	C7	U102	E8	R224	C7	U103	E8
C37	B37	R102	E2	R225	B5	U104	E8	R226	B5	U105	E8
C38	B38	R103	E2	R227	D6	U106	E8	R228	D6	U107	E8
C39	B39	R104	E2	R229	C7	U108	E8	R230	C7	U109	E8
C40	B40	R105	E2	R231	B5	U110	E8	R232	B5	U111	E8
C41	B41	R106	E2	R233	D6	U112	E8	R234	D6	U113	E8
C42	B42	R107	E2	R235	C7	U114	E8	R236	C7	U115	E8
C43	B43	R108	E2	R237	B5	U116	E8	R238	B5	U117	E8
C44	B44	R109	E2	R239	D6	U118	E8	R240	D6	U119	E8
C45	B45	R110	E2	R241	C7	U120	E8	R242	C7	U121	E8
C46	B46	R111	E2	R243	B5	U122	E8	R244	B5	U123	E8
C47	B47	R112	E2	R245	D6	U124	E8	R246	D6	U125	E8
C48	B48	R113	E2	R247	C7	U126	E8	R248	C7	U127	E8
C49	B49	R114	E2	R249	B5	U128	E8	R250	B5	U129	E8
C50	B50	R115	E2	R251	D6	U130	E8	R252	D6	U131	E8
C51	B51	R116	E2	R253	C7	U132	E8	R254	C7	U133	E8
C52	B52	R117	E2	R255	B5	U134	E8	R256	B5	U135	E8
C53	B53	R118	E2	R257	D6	U136	E8	R258	D6	U137	E8
C54	B54	R119	E2	R259	C7	U138	E8	R260	C7	U139	E8
C55	B55	R120	E2	R261	B5	U140	E8	R262	B5	U141	E8
C56	B56	R121	E2	R263	D6	U142	E8	R264	D6	U143	E8
C57	B57	R122	E2	R265	C7	U144	E8	R266	C7	U145	E8
C58	B58	R123	E2	R267	B5	U146	E8	R268	B5	U147	E8
C59	B59	R124	E2	R269	D6	U148	E8	R270	D6	U149	E8
C60	B60	R125	E2	R271	C7	U150	E8	R272	C7	U151	E8
C61	B61	R126	E2	R273	B5	U152	E8	R274	B5	U153	E8
C62	B62	R127	E2	R275	D6	U154	E8	R276	D6	U155	E8
C63	B63	R128	E2	R277	C7	U156	E8	R278	C7	U157	E8
C64	B64	R129	E2	R279	B5	U158	E8	R280	B5	U159	E8
C65	B65	R130	E2	R281	D6	U160	E8	R282	D6	U161	E8
C66	B66	R131	E2	R283	C7	U162	E8	R284	C7	U163	E8
C67	B67	R132	E2	R285	B5	U164	E8	R286	B5	U165	E8
C68	B68	R133	E2	R287	D6	U166	E8	R288	D6	U167	E8
C69	B69	R134	E2	R289	C7	U168	E8	R290	C7	U169	E8
C70	B70	R135	E2	R291	B5	U170	E8	R292	B5	U171	E8
C71	B71	R136	E2	R293	D6	U172	E8	R294	D6	U173	E8
C72	B72	R137	E2	R295	C7	U174	E8	R296	C7	U175	E8
C73	B73	R138	E2	R297	B5	U176	E8	R298	B5	U177	E8
C74	B74	R139	E2	R299	D6	U178	E8	R300	D6	U179	E8
C75	B75	R140	E2	R301	C7	U180	E8	R302	C7	U181	E8
C76	B76	R141	E2	R303	B5	U182	E8	R304	B5	U183	E8
C77	B77	R142	E2	R305	D6	U184	E8	R306	D6	U185	E8
C78	B78	R143	E2	R307	C7	U186	E8	R308	C7	U187	E8
C79	B79	R144	E2	R309	B5	U188	E8	R310	B5	U189	E8
C80	B80	R145	E2	R311	D6	U190	E8	R312	D6	U191	E8
C81	B81	R146	E2	R313	C7	U192	E8	R314	C7	U193	E8
C82	B82	R147	E2	R315	B5	U194	E8	R316	B5	U195	E8
C83	B83	R148	E2	R317	D6	U196	E8	R318	D6	U197	E8
C84	B84	R149	E2	R319	C7	U198	E8	R320	C7	U199	E8
C85	B85	R150	E2	R321	B5	U200	E8	R322	B5	U201	E8
C86	B86	R151	E2	R323	D6	U202	E8	R324	D6	U203	E8
C87	B87	R152	E2	R325	C7	U204	E8	R326	C7	U205	E8
C88	B88	R153	E2	R327	B5	U206	E8	R328	B5	U207	E8
C89	B89	R154	E2	R329	D6	U208	E8	R330	D6	U209	E8
C90	B90	R155	E2	R331	C7	U210	E8	R332	C7	U211	E8

P/O A3 (A13) RECEIVER BOARD ASSY (04935-60035)









APPLIES TO STANDARD UNITS ONLY.
 APPLIES TO P/AR UNITS ONLY.

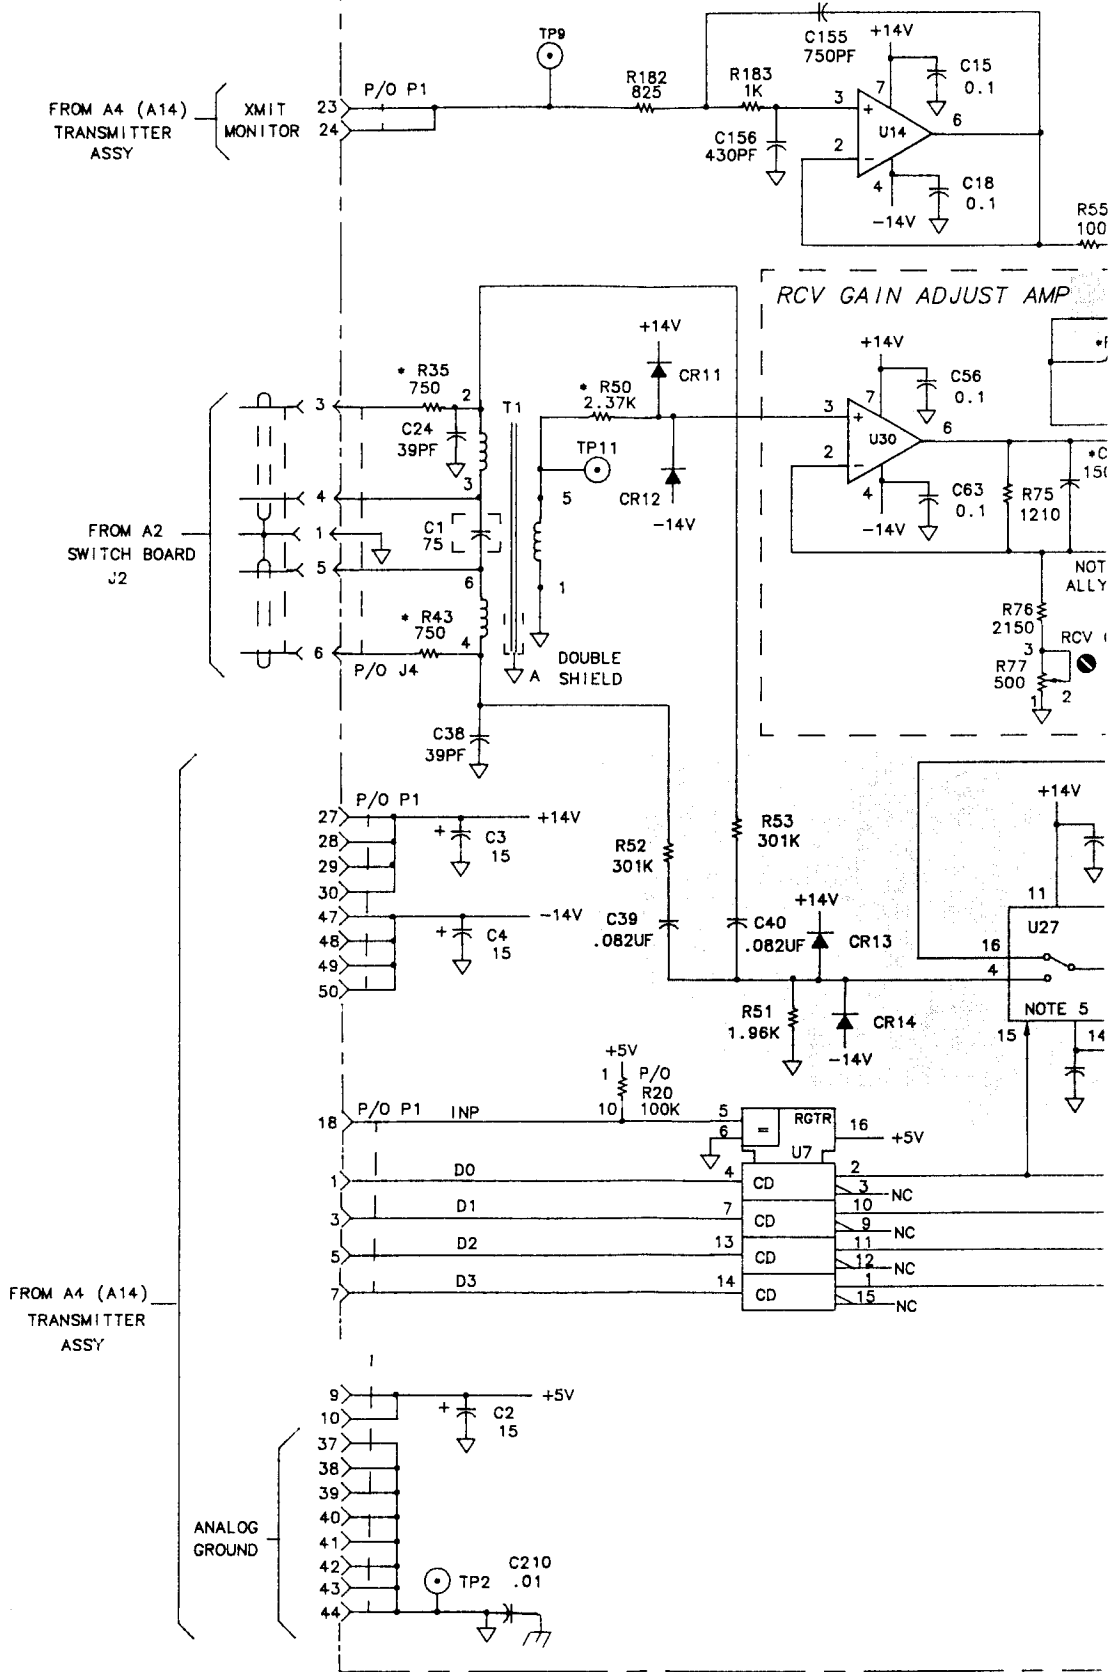




8-30 A

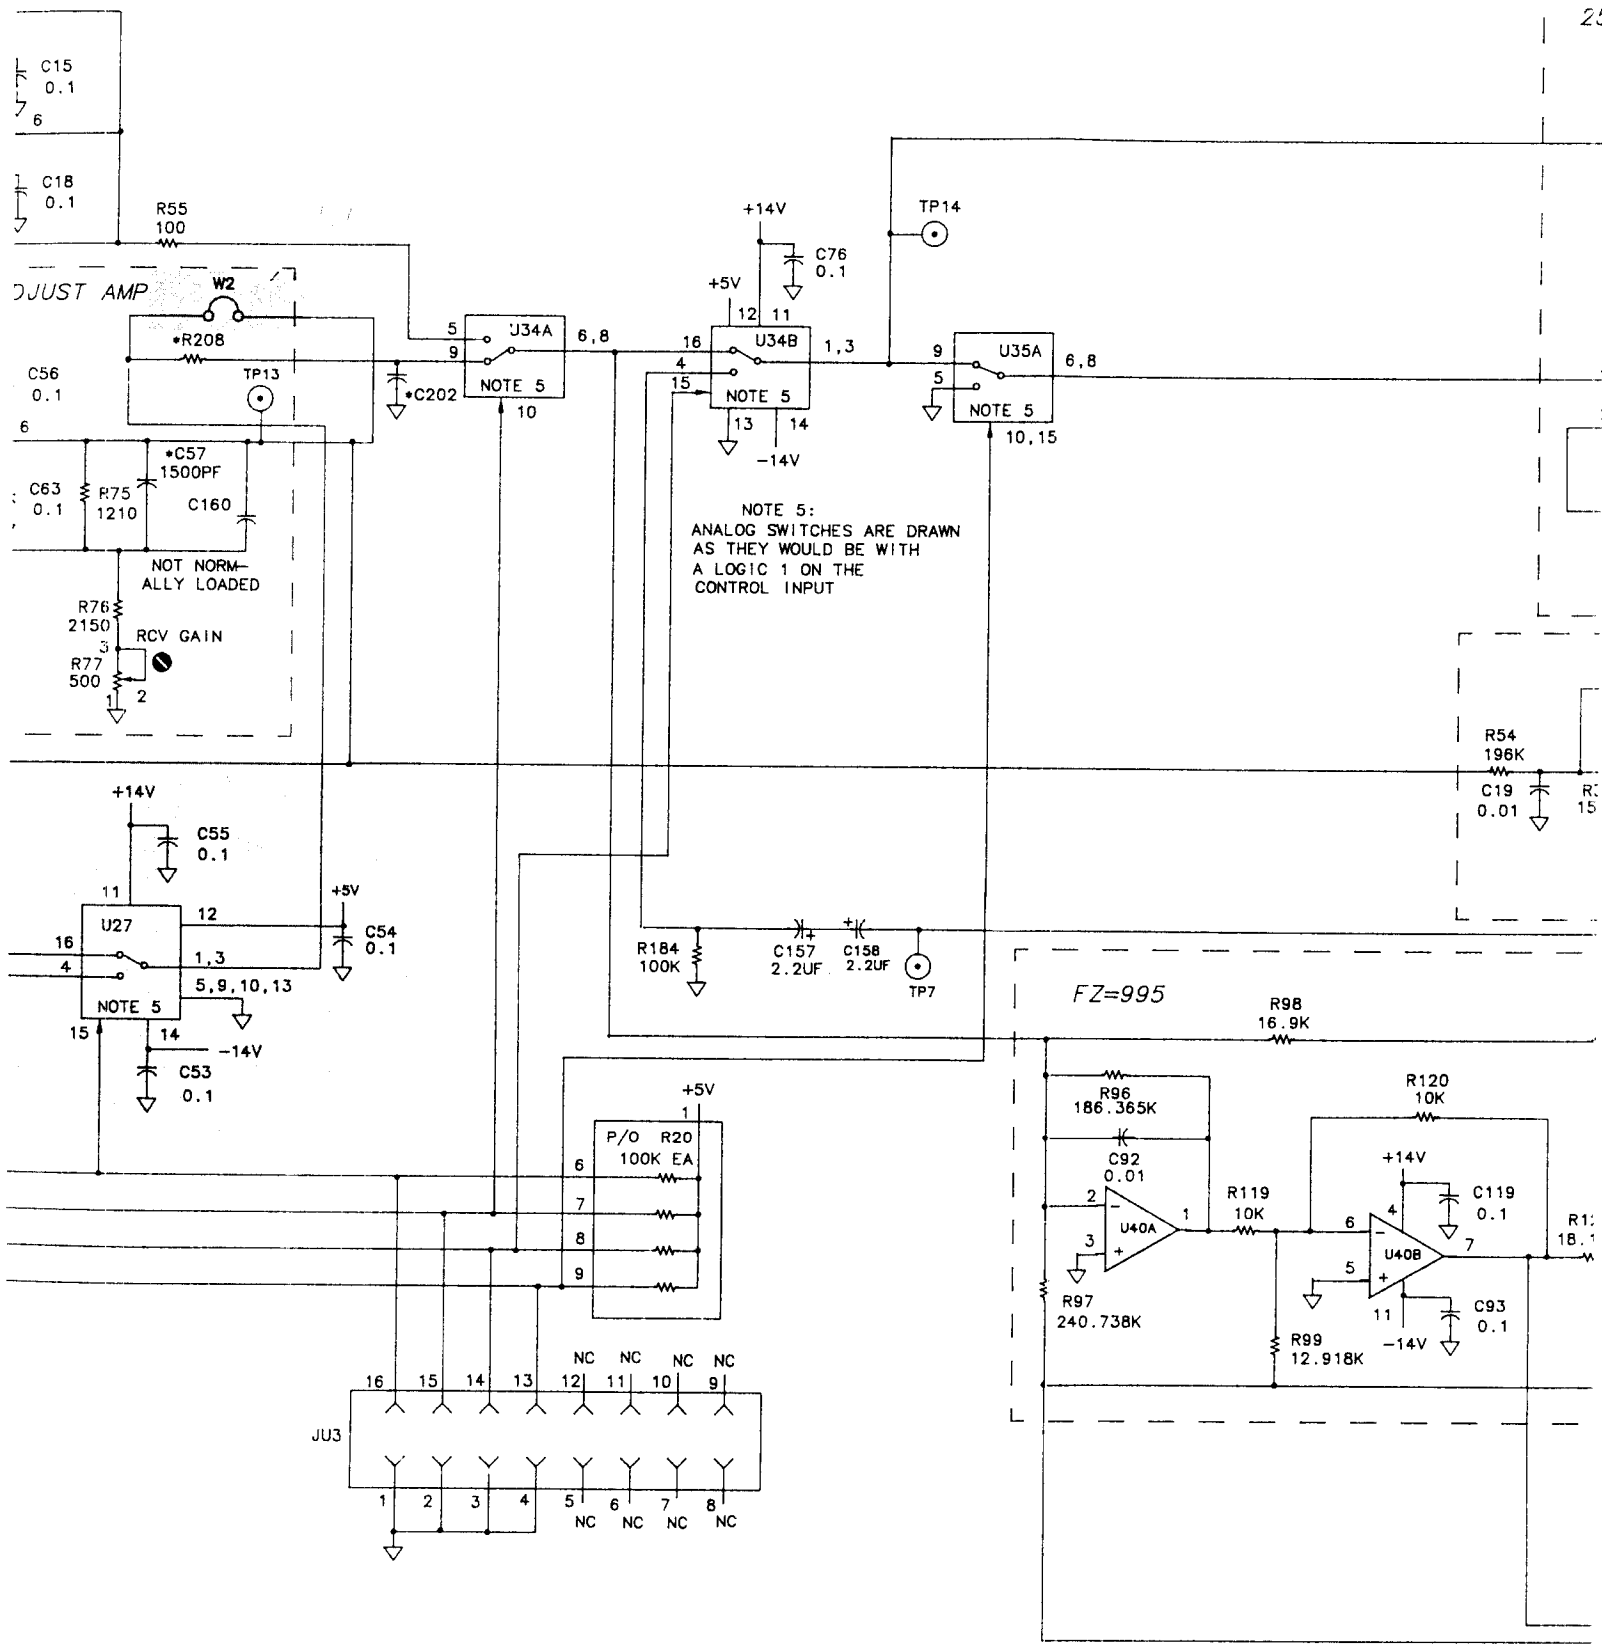

8-30 B

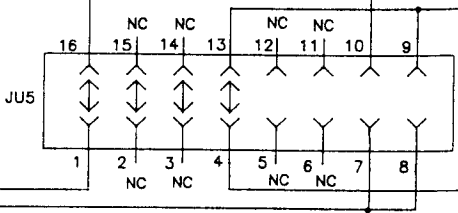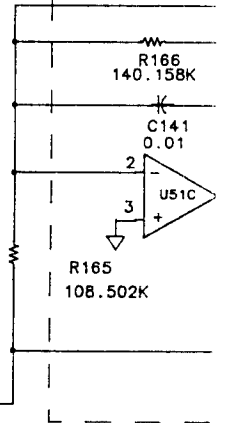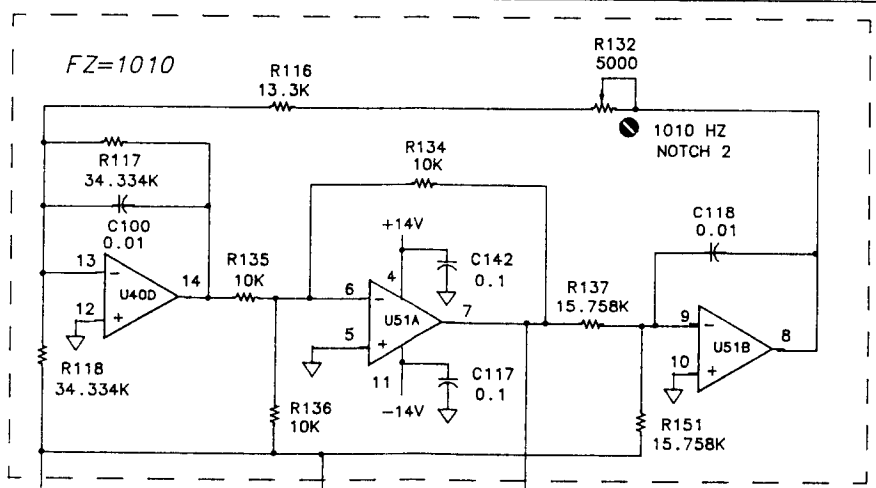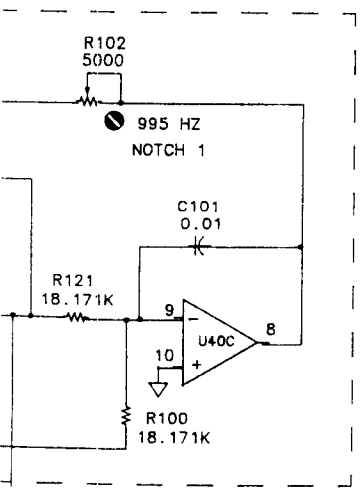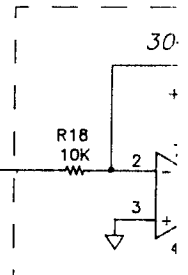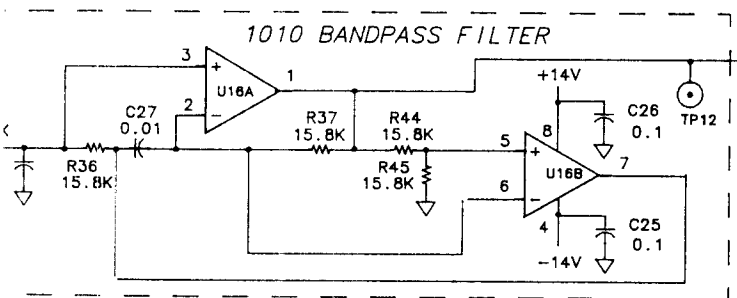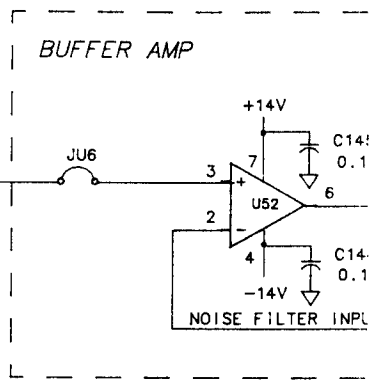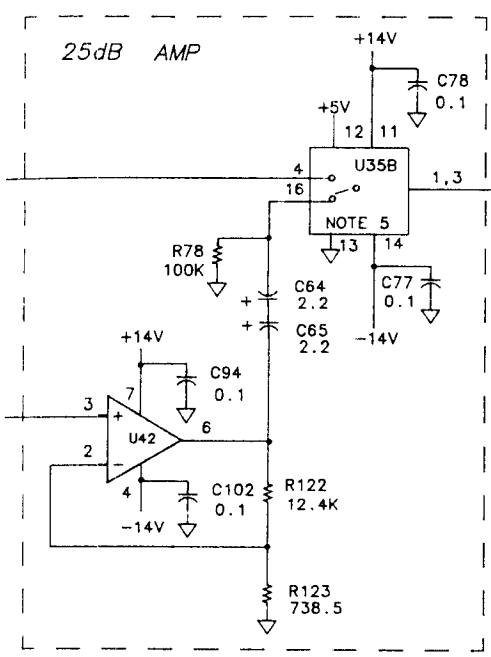

8-30 C

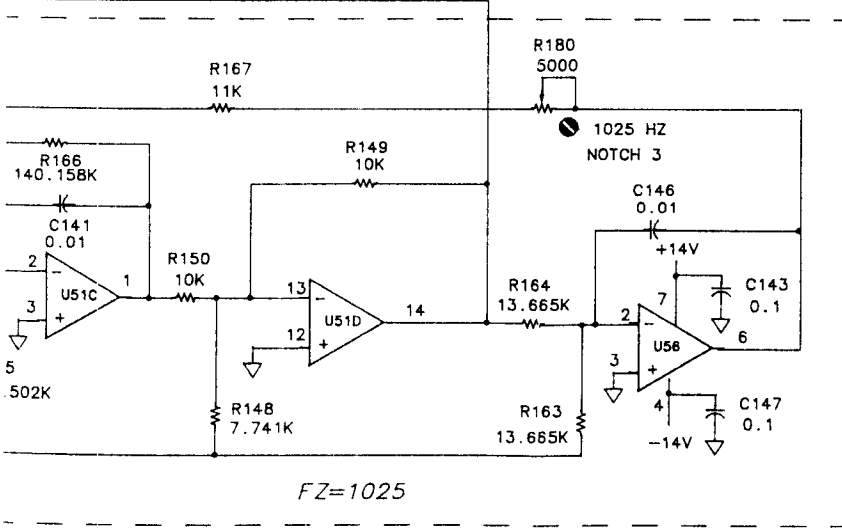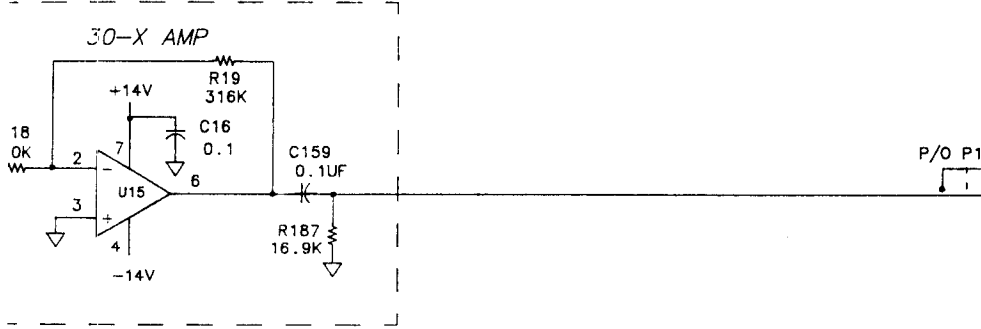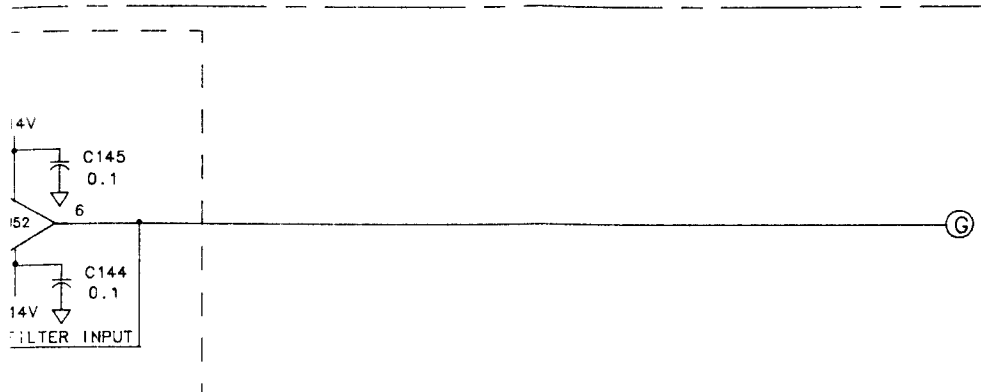

SHT 2

TONE
TO A4 (A14)
TRANSMITTER ASSY


NOTES:

1. REFERENCE DESIGNATION WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN MICROFARADS; INDUCTANCE IN MICROHENRIES
3. ASTERISK (*) INDICATES FACTORY SELECTED COMPONENT, AVERAGE VALUE SHOWN.
4. UNLESS OTHERWISE INDICATED; ALL GROUNDS ARE DIGITAL GROUNDS.

35A13SH1 10-88



Figure 8-30
A3 Receiver Board Schematic Diagram (Sheet 1 of 4)
8-7




P/O A3 (A13) RECEIVER BOARD ASSY (04935-




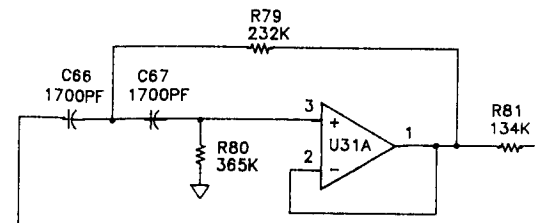


C - MESSAGE FILTER


FROM U52-6
SHT 1

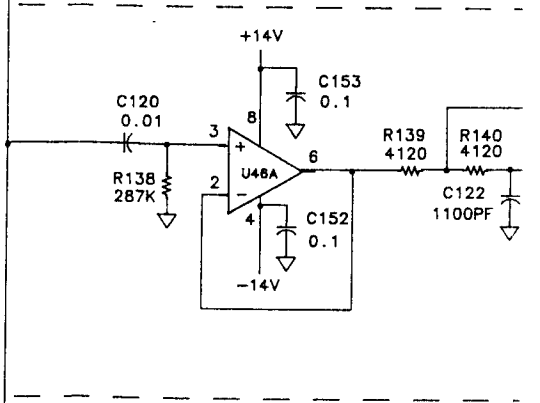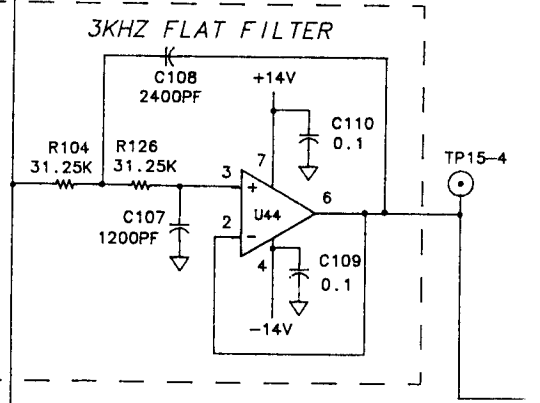

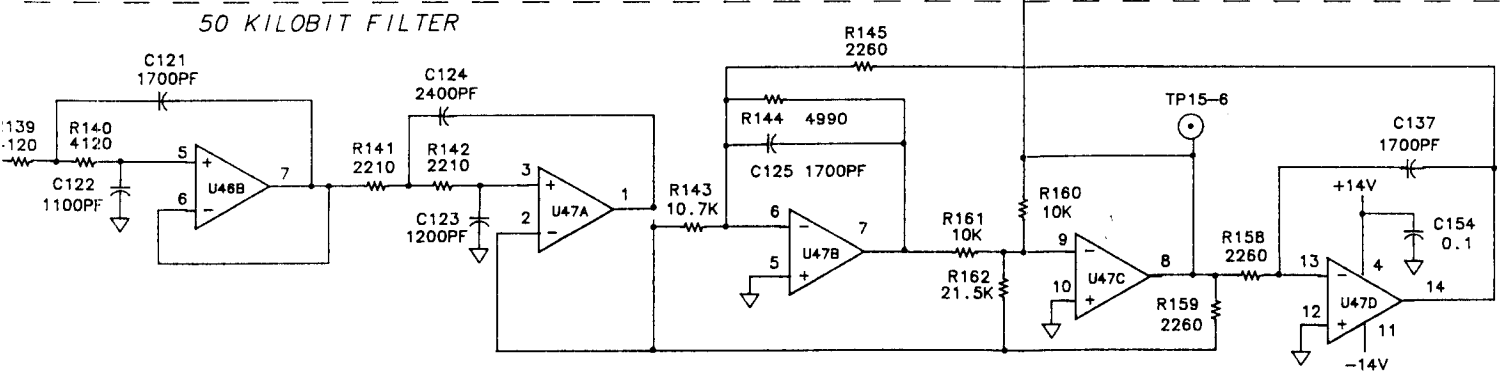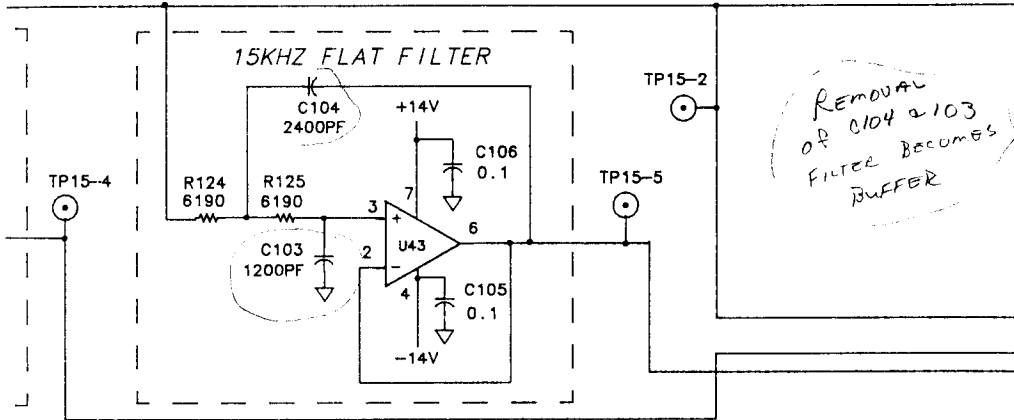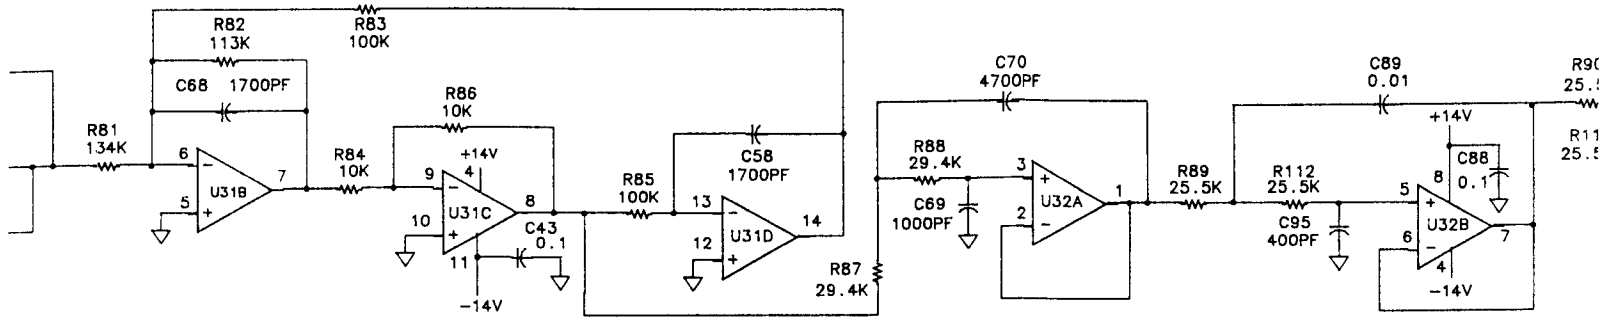

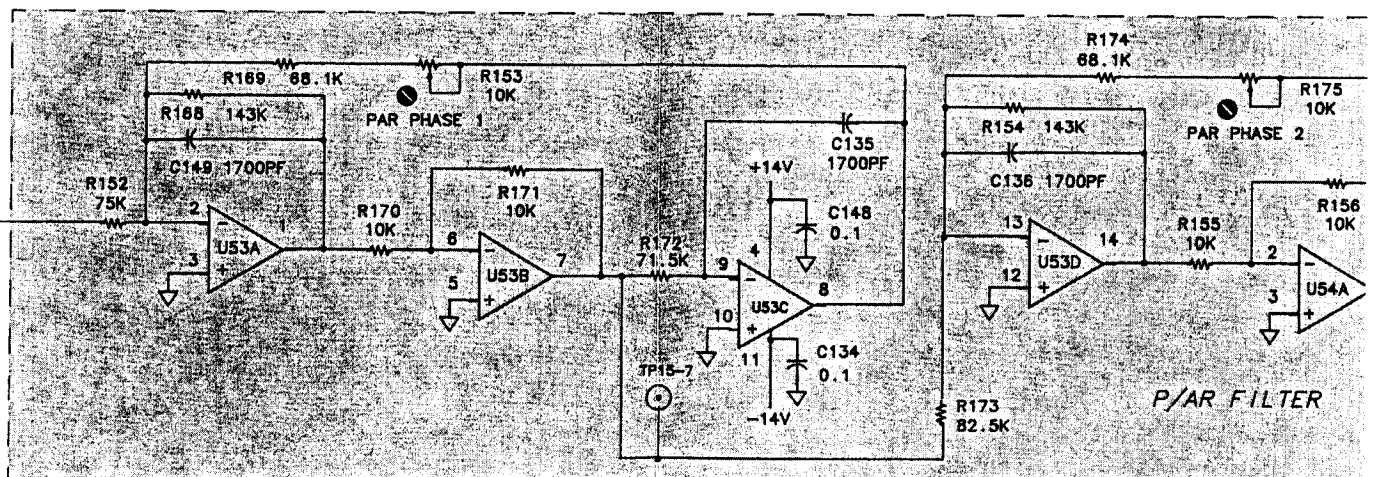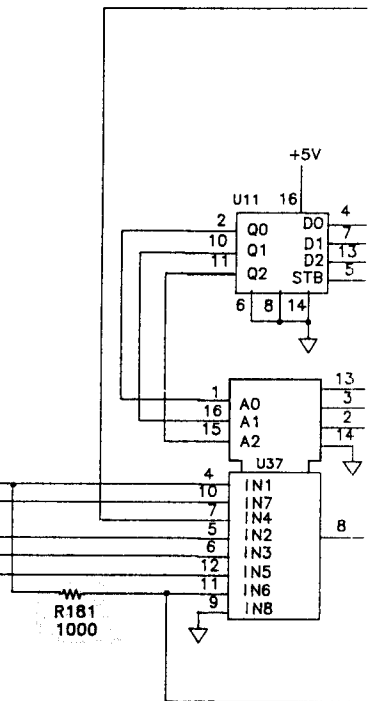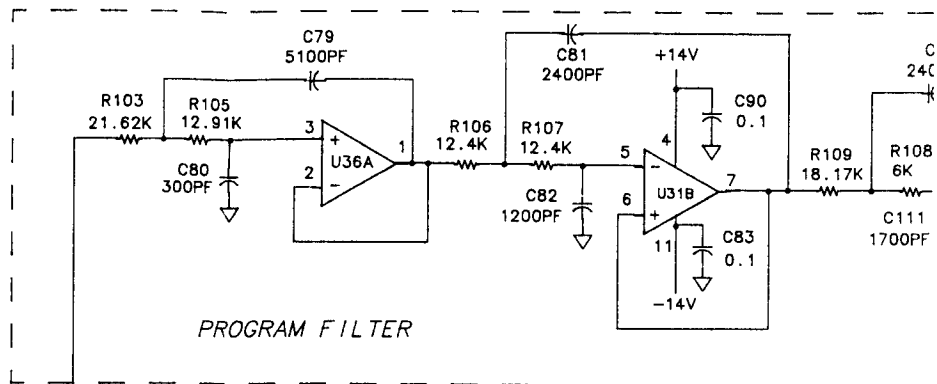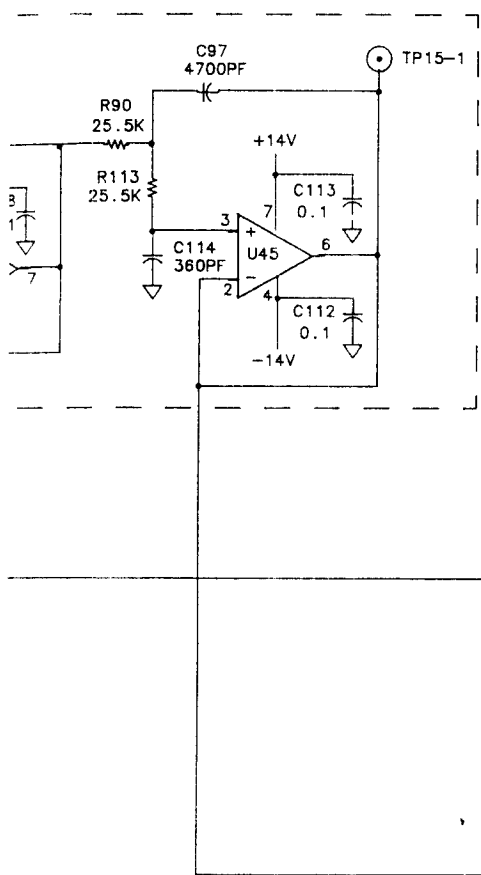

8-31C

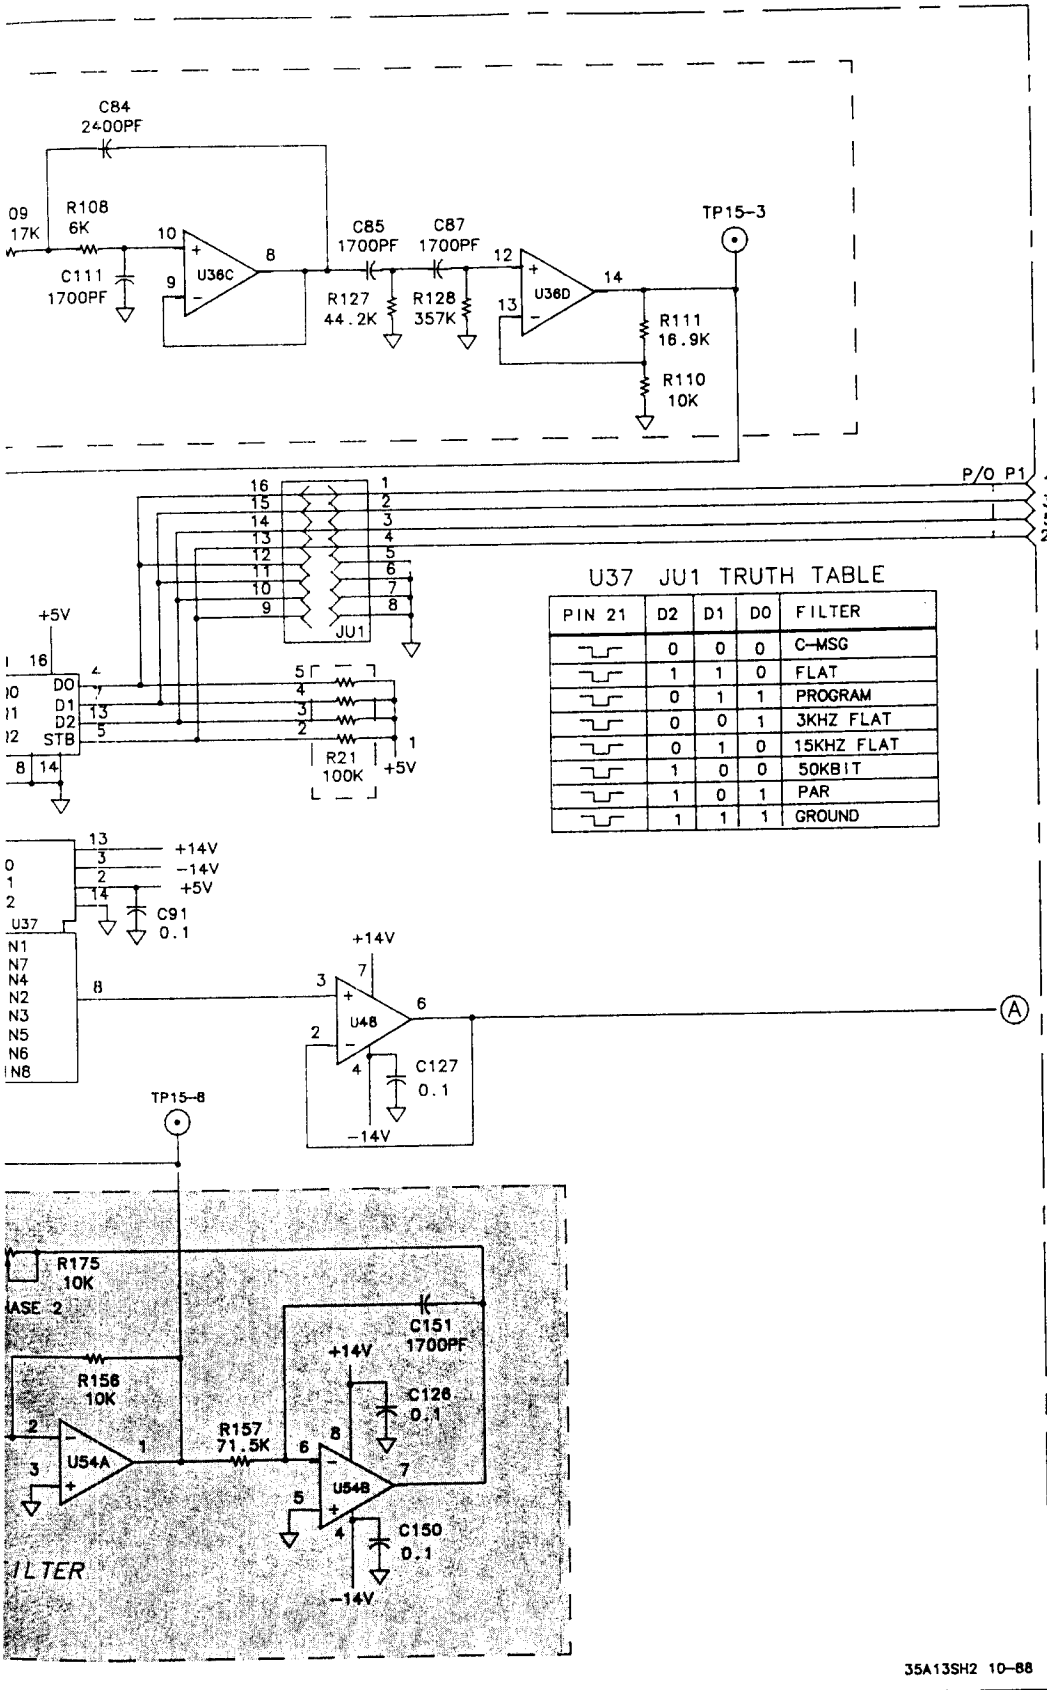

U37 JU1 TRUTH TABLE

PIN 21	D2	D1	D0	FILTER
	0	0	0	C-MSG
	1	1	0	FLAT
	0	1	1	PROGRAM
	0	0	1	3KHZ FLAT
	0	1	0	15KHZ FLAT
	1	0	0	50KBIT
	1	0	1	PAR
	1	1	1	GROUND


CIRCUIT APPLIES TO STANDARD UNITS ONLY.
 CIRCUIT APPLIES TO P/PR UNITS ONLY.

TO U50A-9
SHT-3

- NOTES:**
1. REFERENCE DESIGNATION WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
 2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN MICROFARADS; INDUCTANCE IN MICROHENRIES
 3. ASTERISK (*) INDICATES FACTORY SELECTED COMPONENT, AVERAGE VALUE SHOWN
 4. UNLESS OTHERWISE INDICATED; ALL GROUNDS ARE DIGITAL GROUNDS.


Figure 8-3
A3 Receiver Board Schematic Diagram (Sheet 2 of 8)

P/O A3 (A13) RECEIVER BOARD ASSY (04935-600)


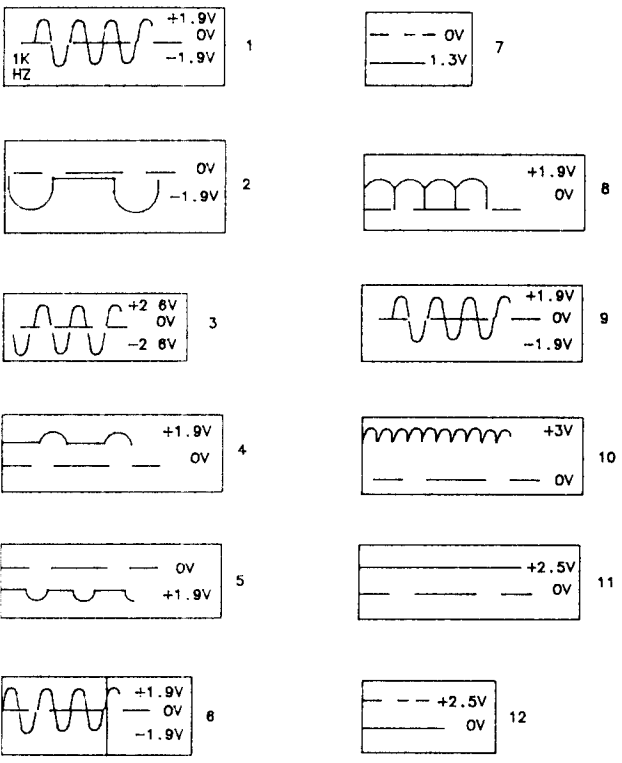



CIRCUIT APPLIES TO STANDARD UNITS ONLY.
 CIRCUIT APPLIES TO P/R UNITS ONLY.

- NOTES:
1. REFERENCE DESIGNATION WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
 2. UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS;
CAPACITANCE IN MICROFARADS
INDUCTANCE IN MICROHENRIES
 3. ASTERISK (*) INDICATES FACTORY SELECTED COMPONENT, AVERAGE VALUE SHOWN.
 4. UNLESS OTHERWISE INDICATED: ALL GROUNDS ARE DIGITAL GROUNDS.

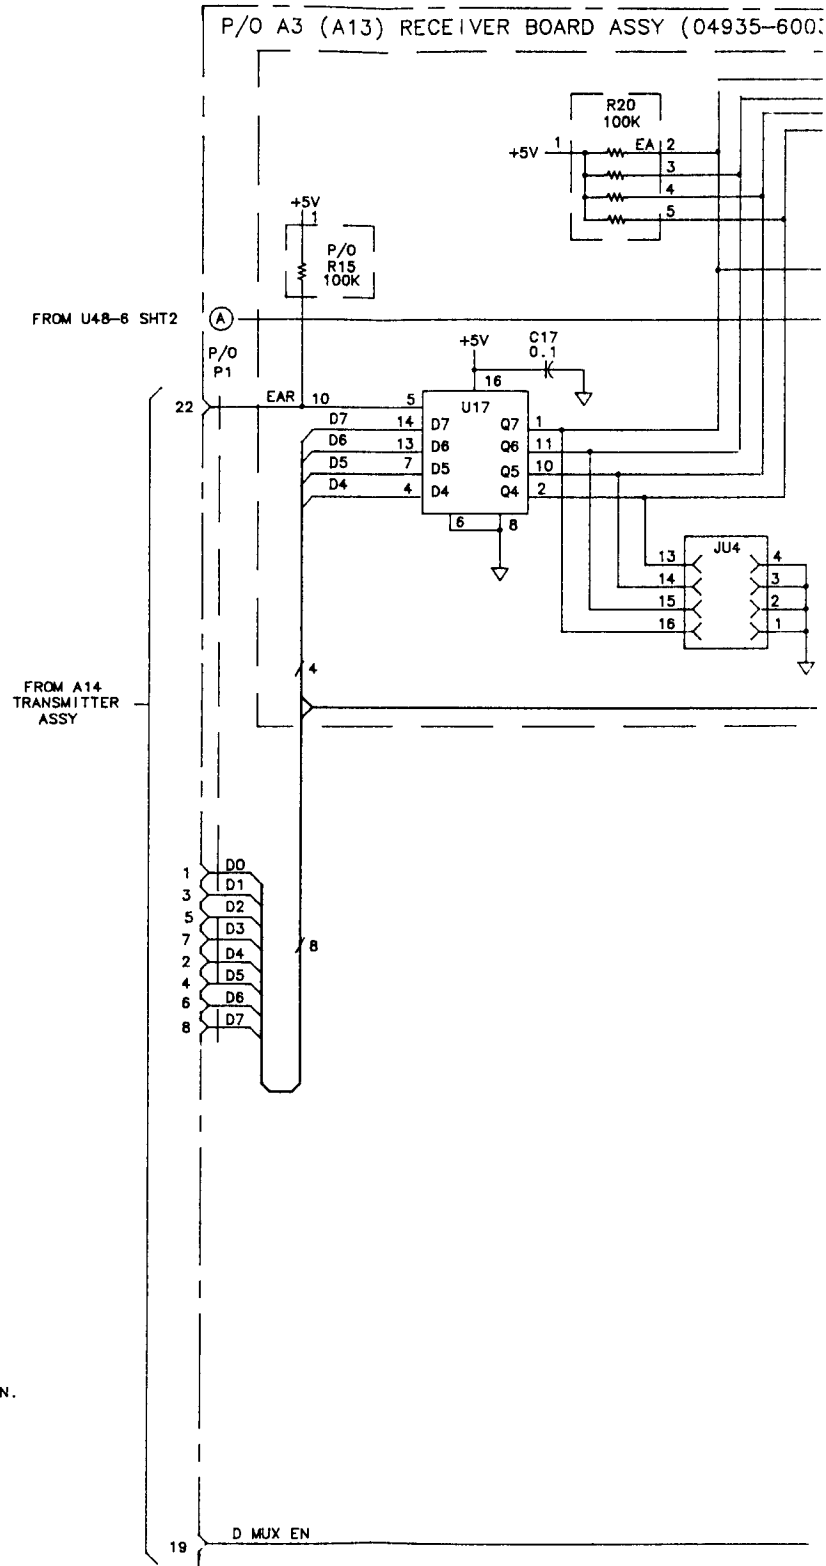

8-3.2 A

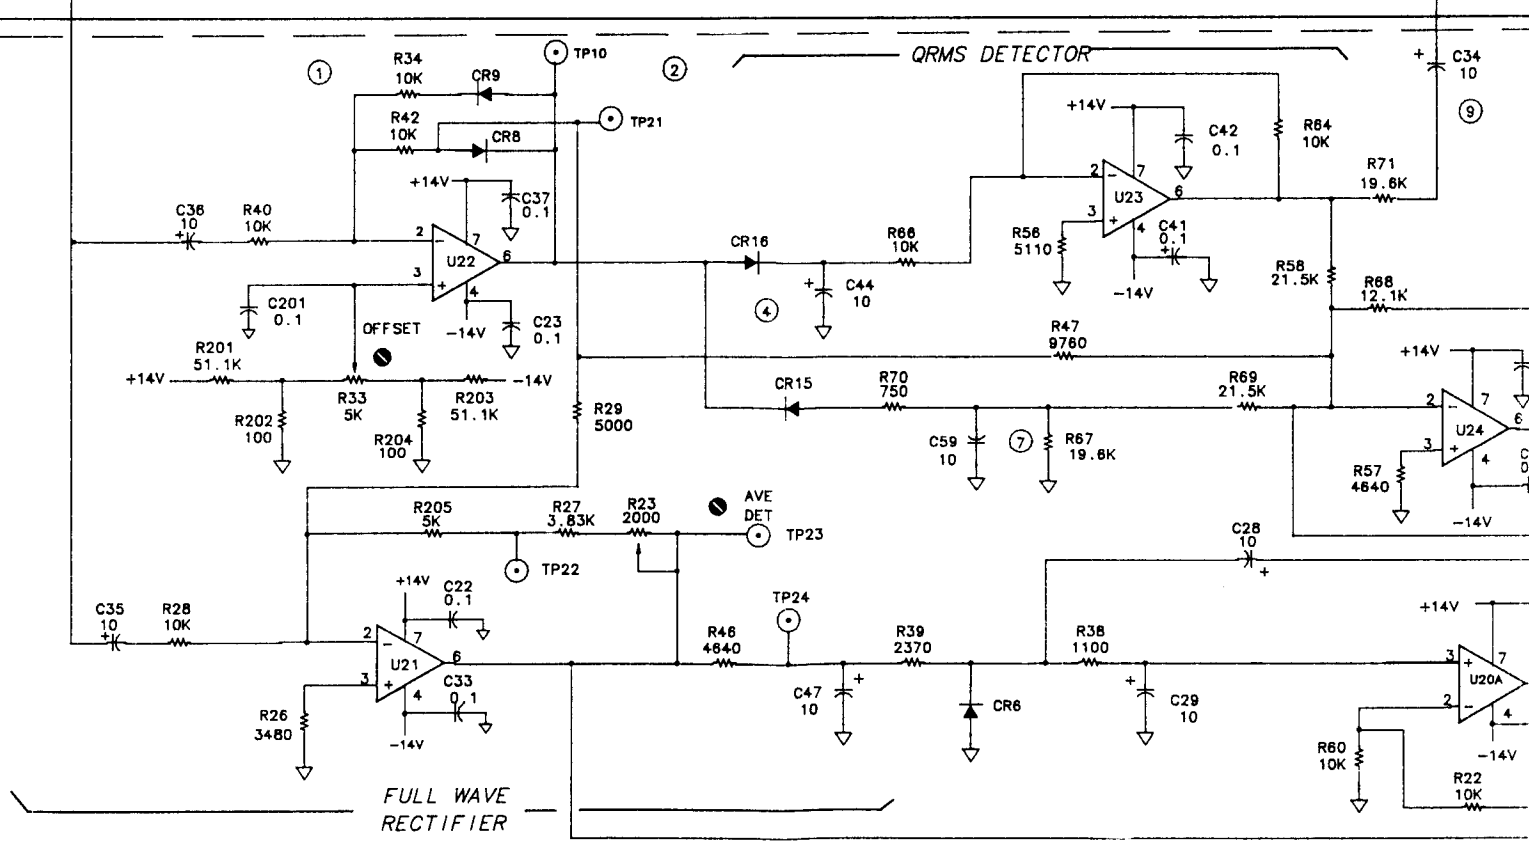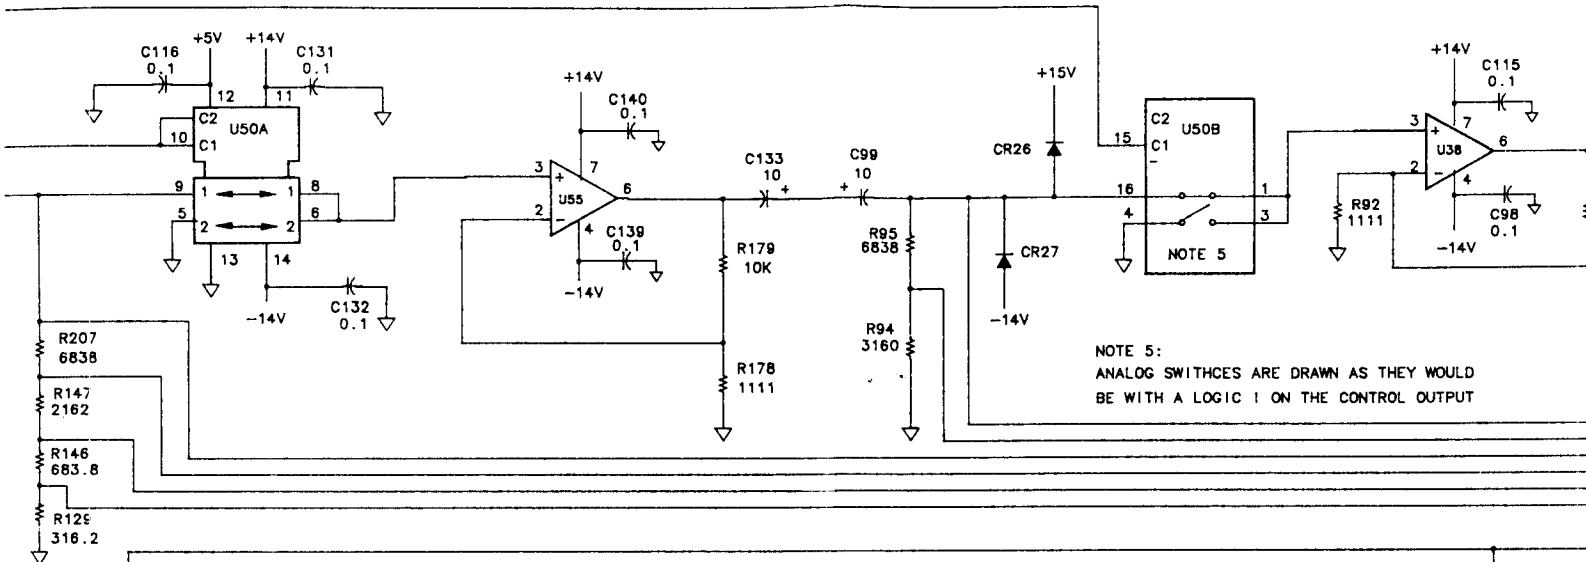

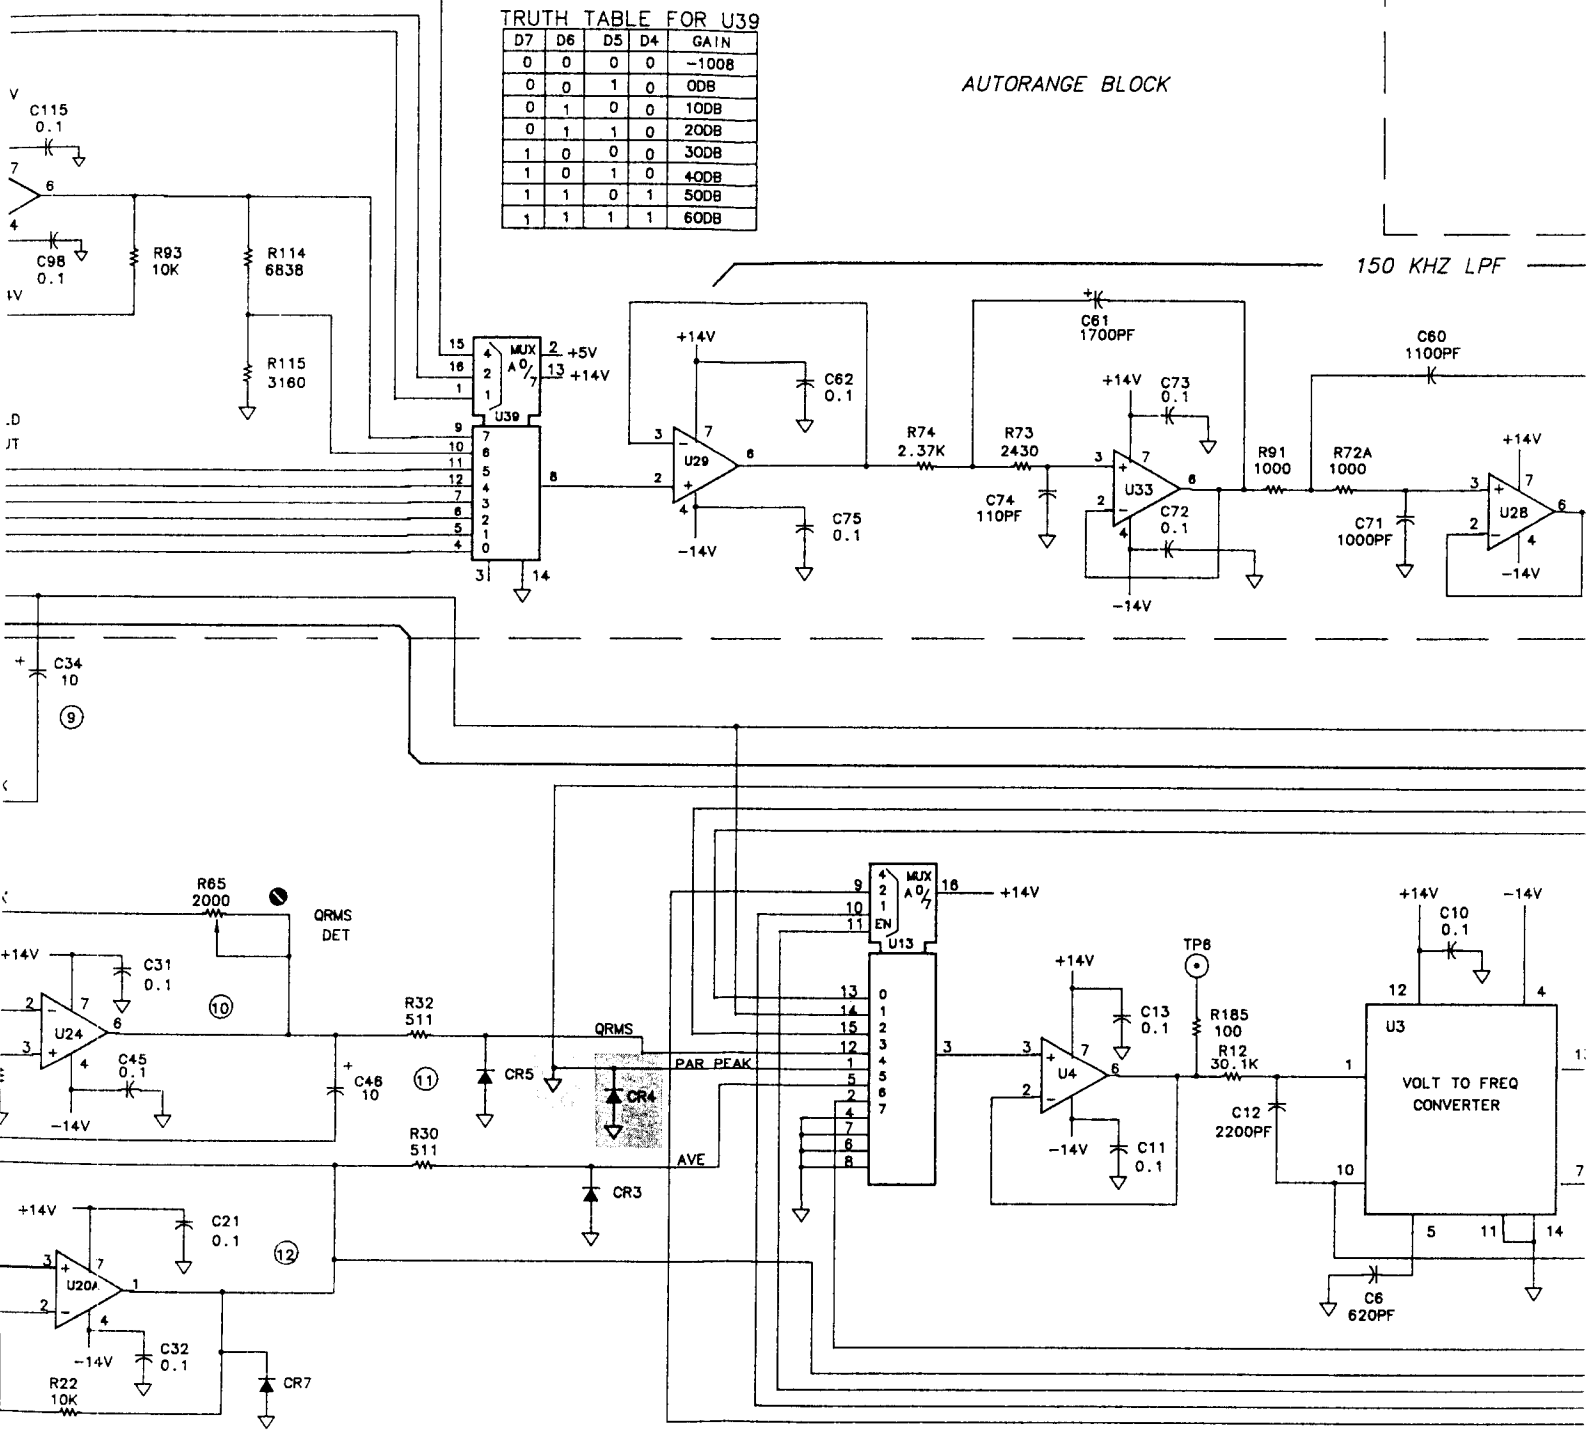

8-32 C



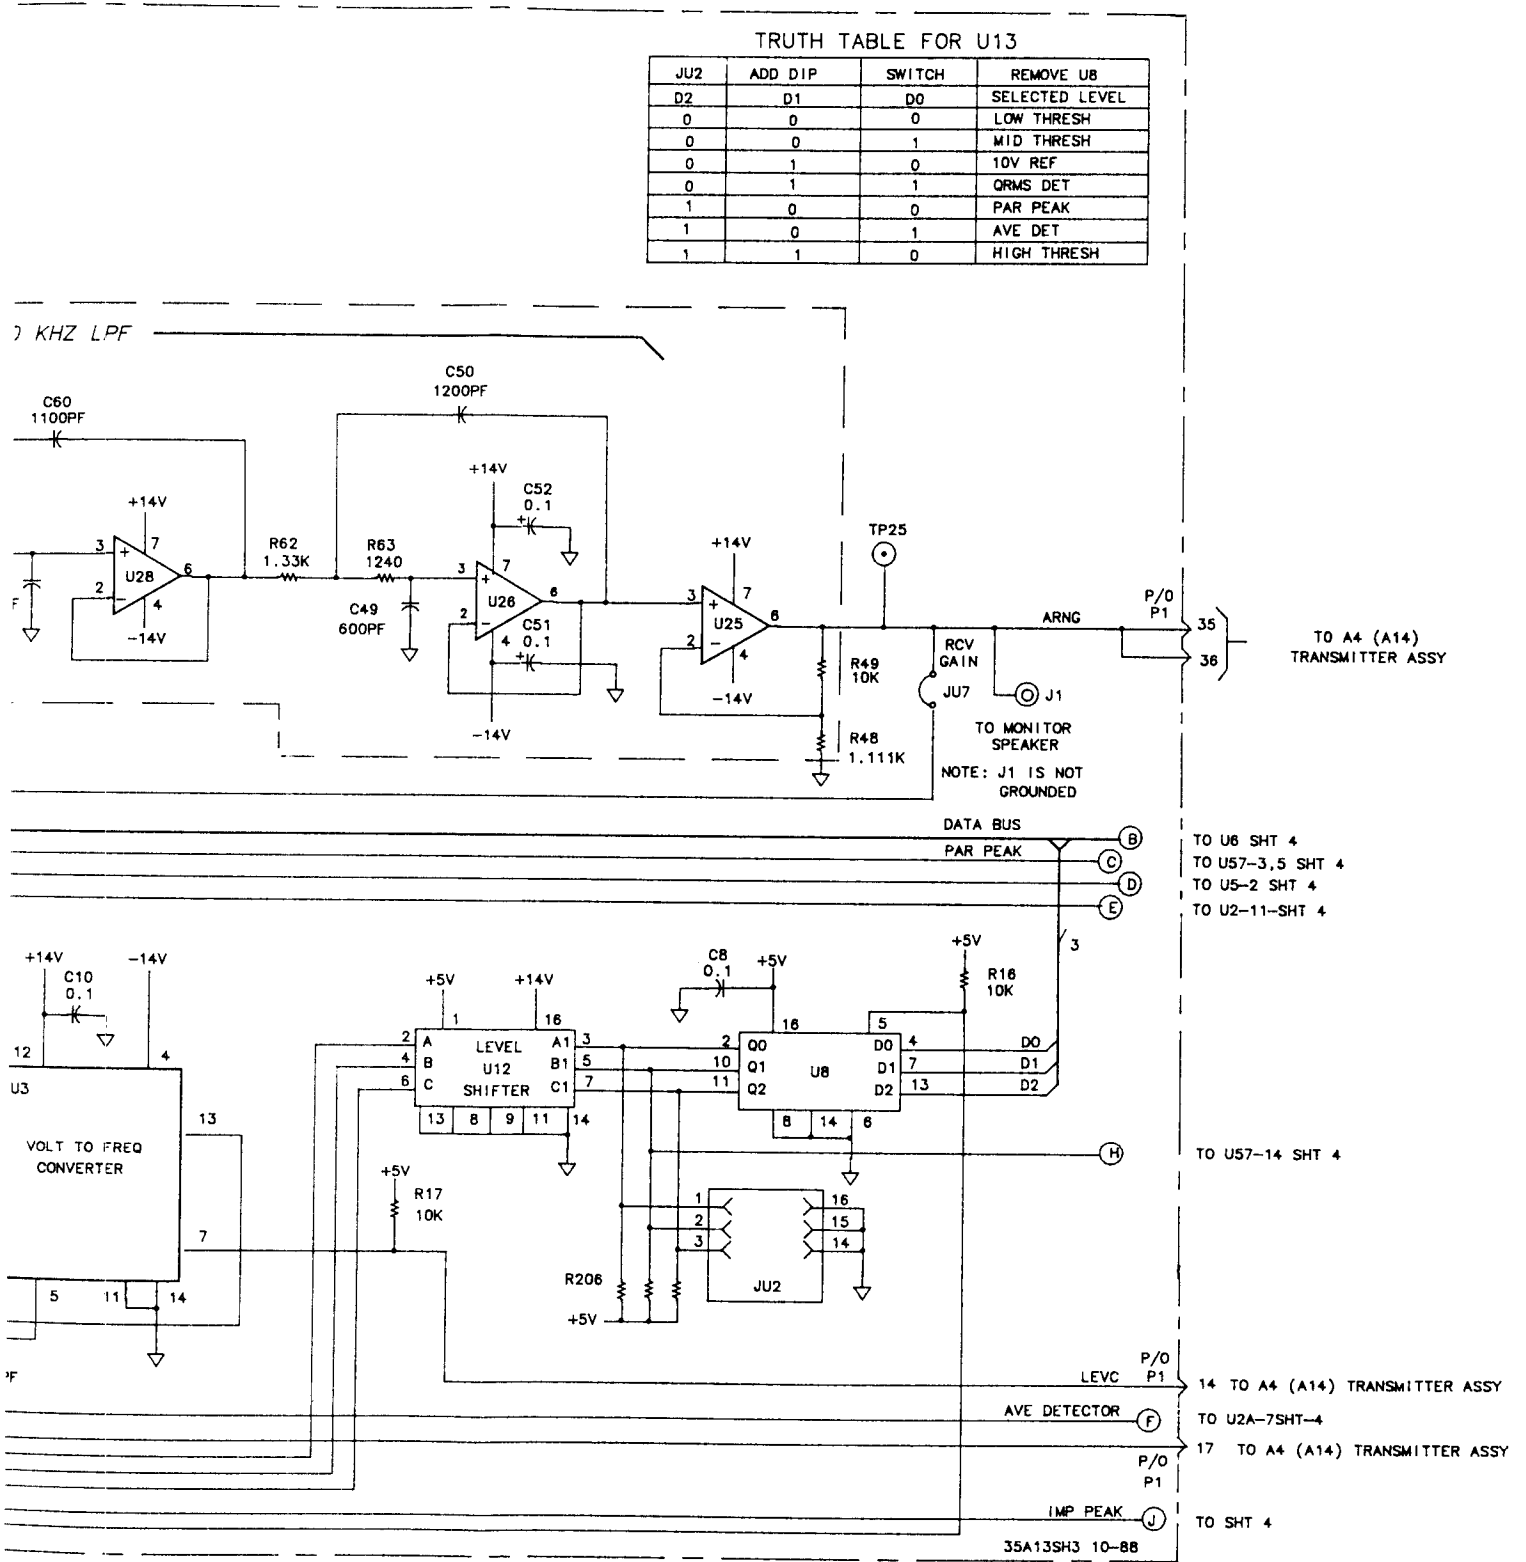


Figure 8-32. A3 Receiver Board Schematic Diagram (Sheet 3 of 4)

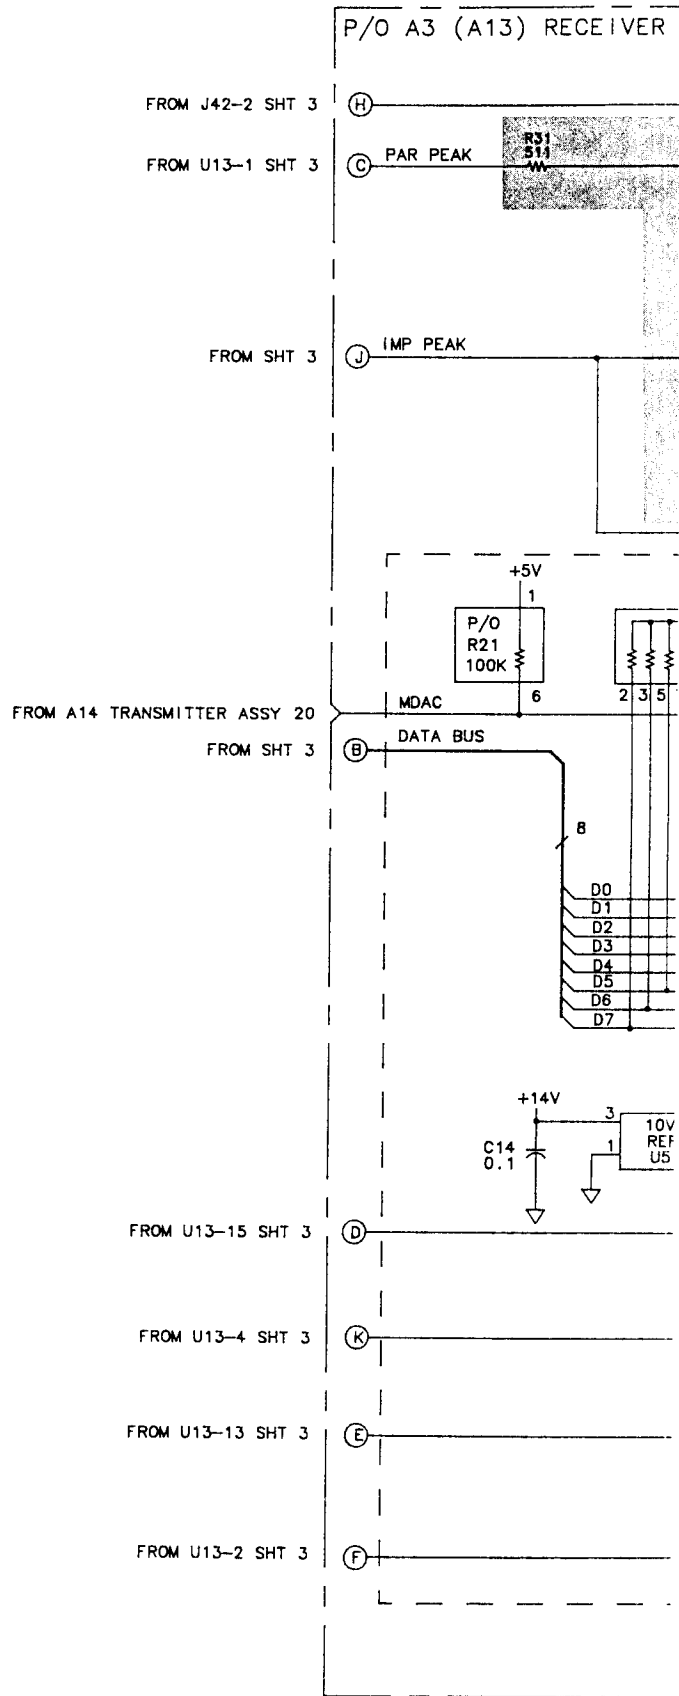

8-33 A

A13) RECEIVER BD. ASSY (04935-60035) REV A SERIES 2822-38

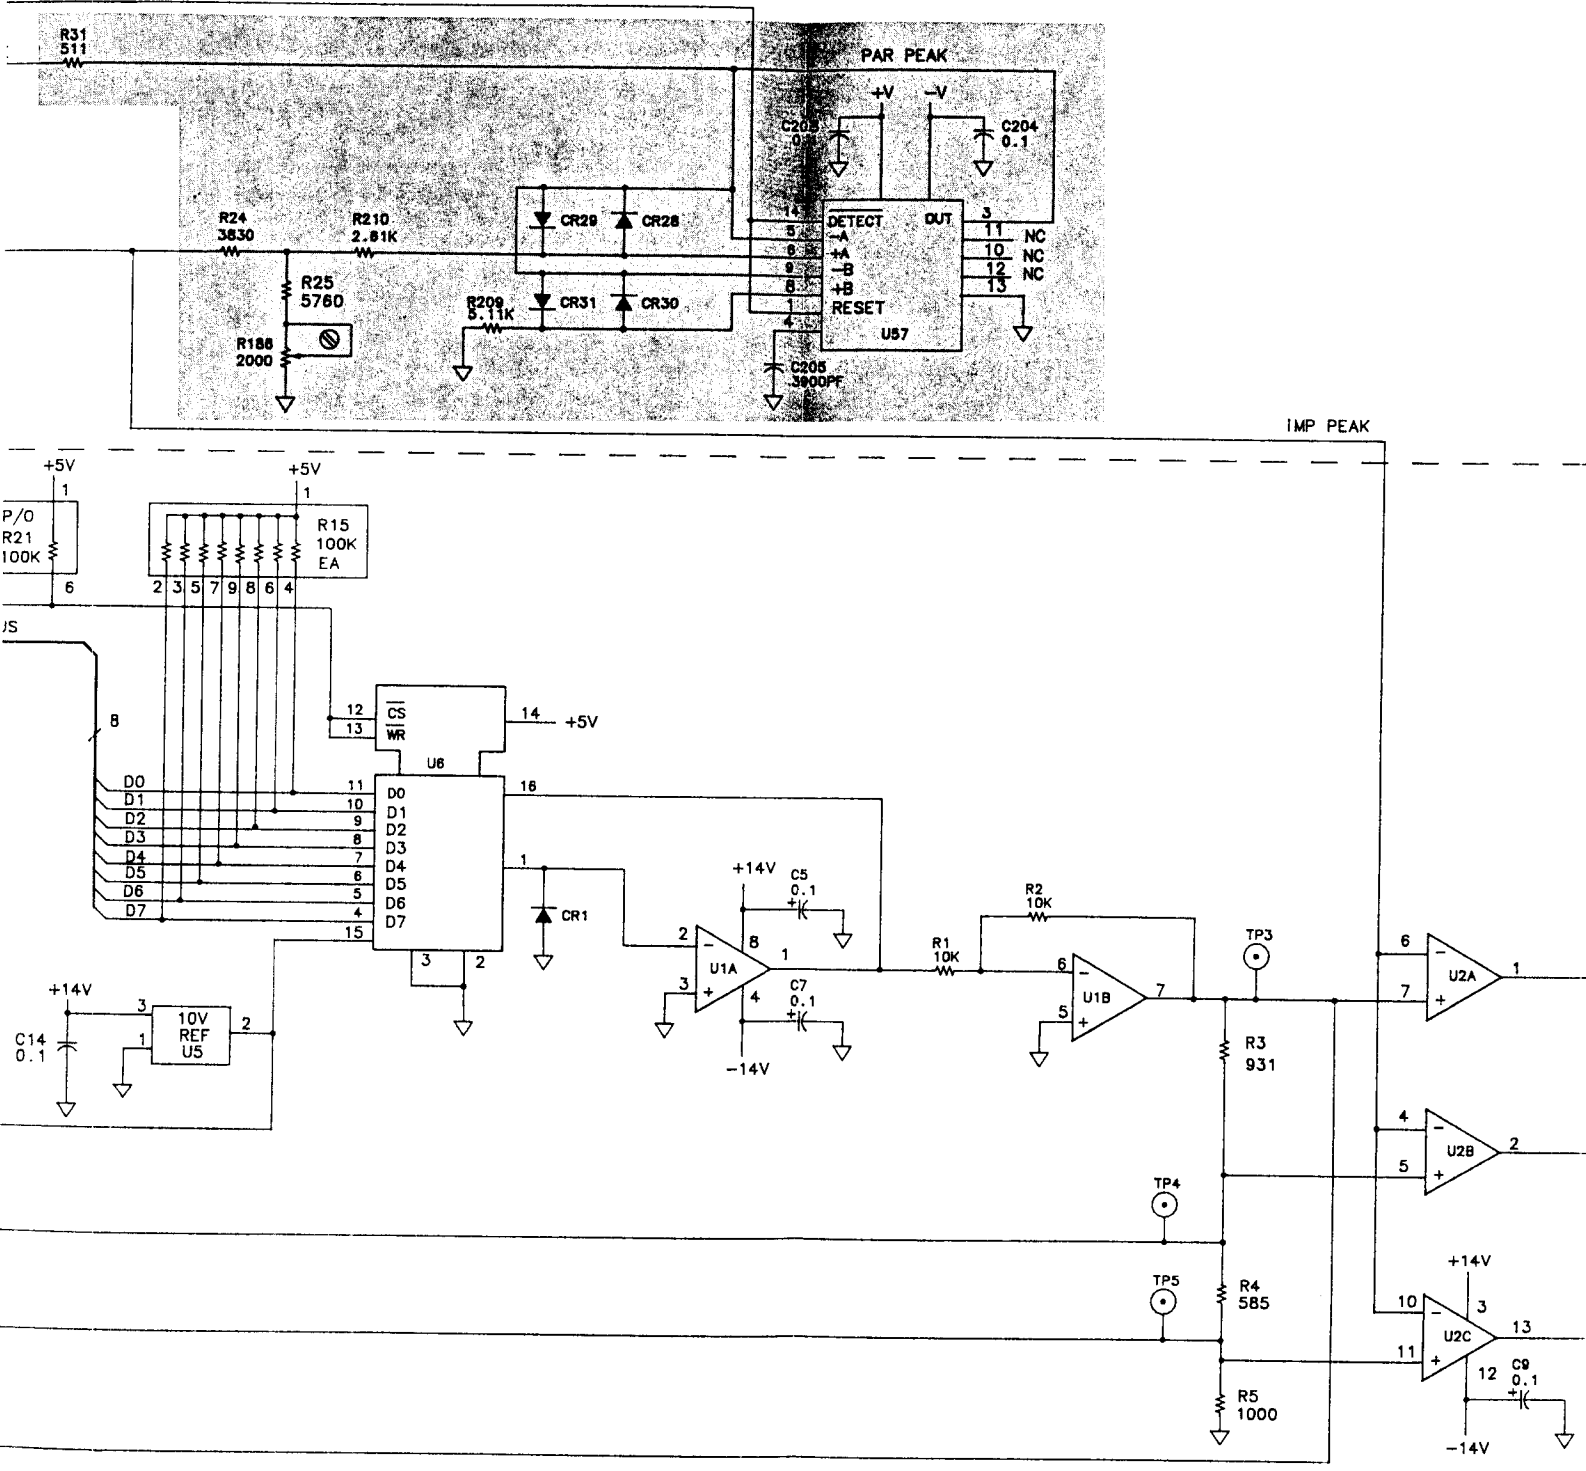



8-33 12

NOTES:

1. REFERENCE DESIGNATION WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN MICROFARADS; INDUCTANCE IN MICROHENRIES
3. ASTERISK (*) INDICATES FACTORY SELECTED COMPONENT, AVERAGE VALUE SHOWN.
4. UNLESS OTHERWISE INDICATED; ALL GROUNDS ARE DIGITAL GROUNDS.

IMPULSE NOISE DETECTORS

-  CIRCUIT APPLIES TO STANDARD UNITS ONLY.
-  CIRCUIT APPLIES TO P/PR UNITS ONLY.

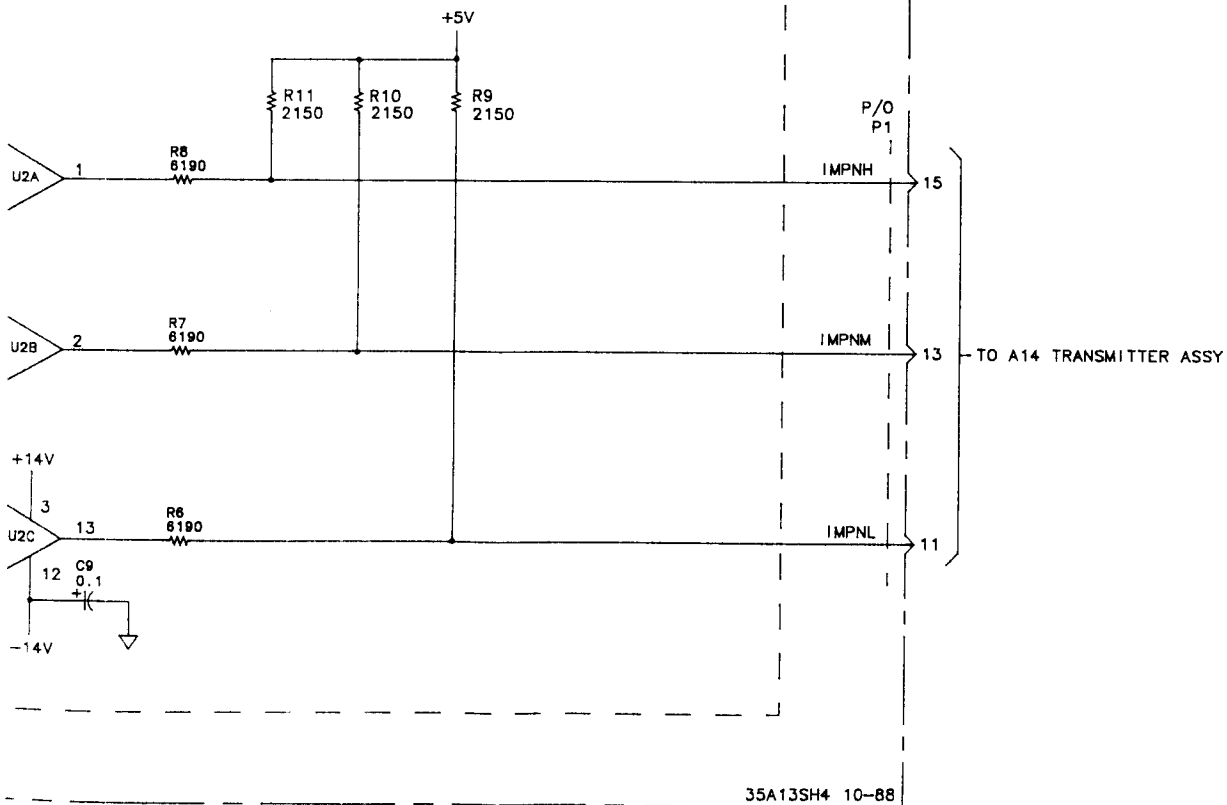


Figure 8-33.
A3 Receiver Board Schematic Diagram (Sheet 4 of 4)

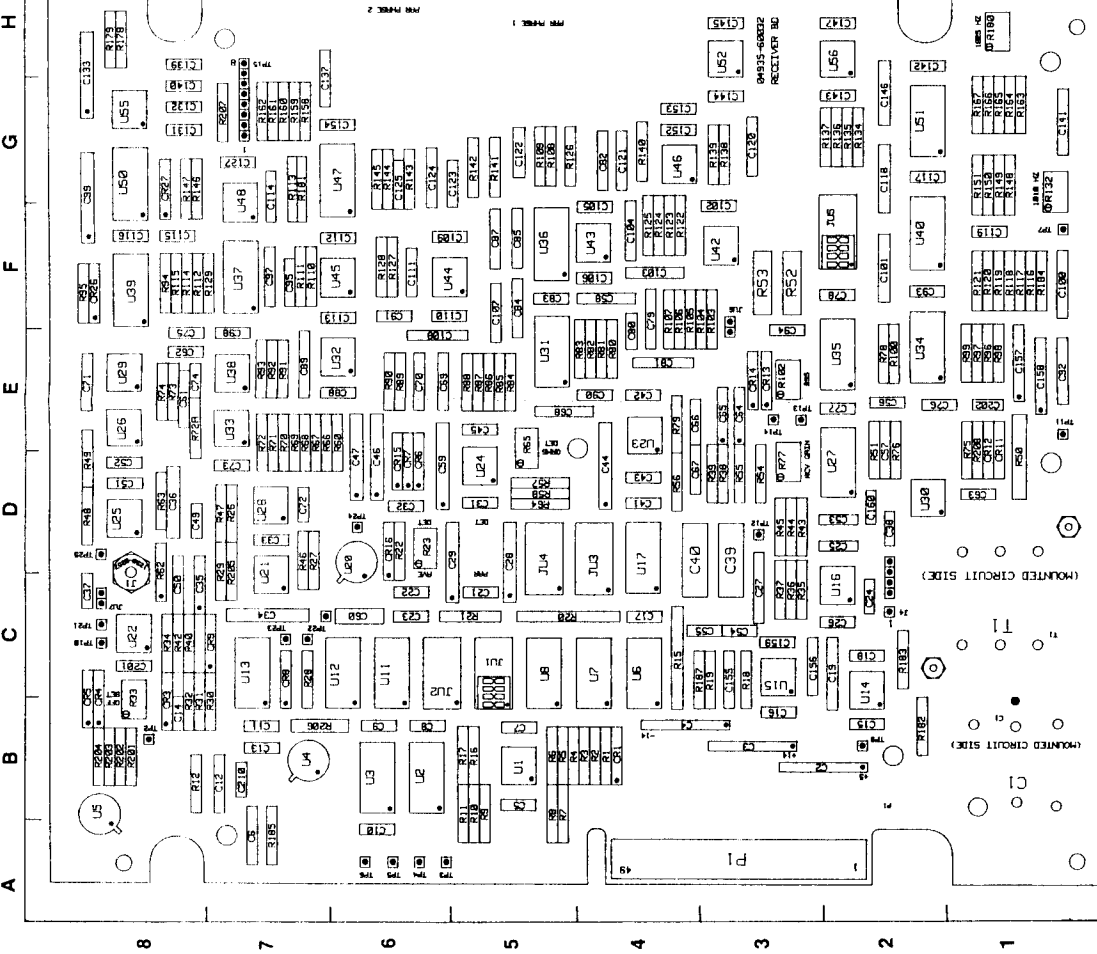


Figure 8-29. A3 Receiver Board Component Locator

8-80 A

REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.	REF. DESIG.	GRID LOC.
C1	B1	C81	E4	R68	E7	R148	G1	U3	E9	C133	A	C133	B1
C2	B3	C82	G4	R69	E7	R149	G1	U30	E9	C134	A	C134	B3
C3	B4	C83	F5	R70	E7	R150	G1	U31	E9	C135	A	C135	B4
C4	B5	C84	F5	R71	E7	R151	G1	U32	E9	C136	A	C136	B5
C5	B5	C85	F5	R72	E8	R152	G1	U33	E9	C137	A	C137	B5
C6	A7	C86	F5	R73	E8	R153	G1	U34	E9	C138	A	C138	A7
C7	B3	C87	E7	R74	E8	R154	G1	U35	E9	C139	A	C139	B3
C8	B3	C88	E7	R75	E8	R155	G1	U36	E9	C140	A	C140	B3
C9	B3	C89	E7	R76	E8	R156	G1	U37	E9	C141	A	C141	B3
C10	B8	C90	E4	R77	E8	R157	G1	U38	E9	C142	A	C142	B8
C11	A8	C91	E1	R78	E8	R158	G1	U39	E9	C143	A	C143	A8
C12	B7	C92	F2	R79	E8	R159	G1	U40	E9	C144	A	C144	B7
C13	B7	C93	F2	R80	E8	R160	G1	U41	E9	C145	A	C145	B7
C14	B8	C94	E7	R81	E8	R161	G1	U42	E9	C146	A	C146	B8
C15	B8	C95	E7	R82	E8	R162	G1	U43	E9	C147	A	C147	B8
C16	B3	C96	E7	R83	E8	R163	G1	U44	E9	C148	A	C148	B3
C17	C4	C97	G8	R84	E8	R164	G1	U45	E9	C149	A	C149	C4
C18	C2	C98	F2	R85	E8	R165	G1	U46	E9	C150	A	C150	C2
C19	C2	C99	F2	R86	E8	R166	G1	U47	E9	C151	A	C151	C2
C20	C2	C100	F2	R87	E8	R167	G1	U48	E9	C152	A	C152	C2
C21	C6	C101	F3	R88	E8	R168	G1	U49	E9	C153	A	C153	C6
C22	C6	C102	F3	R89	E8	R169	G1	U50	E9	C154	A	C154	C6
C23	C2	C103	F4	R90	E8	R170	G1	U51	E9	C155	A	C155	C2
C24	C2	C104	F4	R91	E8	R171	G1	U52	E9	C156	A	C156	C2
C25	C2	C105	F4	R92	E8	R172	G1	U53	E9	C157	A	C157	C2
C26	C2	C106	F4	R93	E8	R173	G1	U54	E9	C158	A	C158	C2
C27	C3	C107	F5	R94	E8	R174	G1	U55	E9	C159	A	C159	C3
C28	C3	C108	F5	R95	E8	R175	G1	U56	E9	C160	A	C160	C3
C29	C3	C109	F5	R96	E8	R176	G1	U57	E9	C161	A	C161	C3
C30	C3	C110	F5	R97	E8	R177	G1	U58	E9	C162	A	C162	C3
C31	D5	C111	F6	R98	E8	R178	G1	U59	E9	C163	A	C163	D5
C32	D6	C112	F6	R99	E8	R179	G1	U60	E9	C164	A	C164	D6
C33	D7	C113	F6	R100	E8	R180	G1	U61	E9	C165	A	C165	D7
C34	C7	C114	G7	R101	E8	R181	G1	U62	E9	C166	A	C166	C7
C35	C7	C115	G7	R102	E8	R182	G1	U63	E9	C167	A	C167	C7
C36	D8	C116	F8	R103	E8	R183	G1	U64	E9	C168	A	C168	D8
C37	D8	C117	G2	R104	E8	R184	G1	U65	E9	C169	A	C169	D8
C38	D2	C118	G2	R105	E8	R185	G1	U66	E9	C170	A	C170	D2
C39	D2	C119	G2	R106	E8	R186	G1	U67	E9	C171	A	C171	D2
C40	D4	C120	G4	R107	E8	R187	G1	U68	E9	C172	A	C172	D4
C41	D4	C121	G4	R108	E8	R188	G1	U69	E9	C173	A	C173	D4
C42	D4	C122	G4	R109	E8	R189	G1	U70	E9	C174	A	C174	D4
C43	D4	C123	G5	R110	E8	R190	G1	U71	E9	C175	A	C175	D4
C44	D4	C124	G5	R111	E8	R191	G1	U72	E9	C176	A	C176	D4
C45	D6	C125	G5	R112	E8	R192	G1	U73	E9	C177	A	C177	D6
C46	D6	C126	G5	R113	E8	R193	G1	U74	E9	C178	A	C178	D6
C47	D6	C127	G5	R114	E8	R194	G1	U75	E9	C179	A	C179	D6
C48	D8	C128	H8	R115	E8	R195	G1	U76	E9	C180	A	C180	D8
C49	D8	C129	H8	R116	E8	R196	G1	U77	E9	C181	A	C181	D8
C50	D8	C130	H8	R117	E8	R197	G1	U78	E9	C182	A	C182	D8
C51	D8	C131	G9	R118	E8	R198	G1	U79	E9	C183	A	C183	D8
C52	D8	C132	G8	R119	E8	R199	G1	U80	E9	C184	A	C184	D8
C53	D8	C133	H2	R120	E8	R200	G1	U81	E9	C185	A	C185	D8
C54	C3	C134	G1	R121	E8	R201	G1	U82	E9	C186	A	C186	C3
C55	C3	C135	G1	R122	E8	R202	G1	U83	E9	C187	A	C187	C3
C56	D2	C136	G2	R123	E8	R203	G1	U84	E9	C188	A	C188	D2
C57	D2	C137	G2	R124	E8	R204	G1	U85	E9	C189	A	C189	D2
C58	D2	C138	G2	R125	E8	R205	G1	U86	E9	C190	A	C190	D2
C59	D2	C139	G2	R126	E8	R206	G1	U87	E9	C191	A	C191	D2
C60	D6	C140	H2	R127	E8	R207	G1	U88	E9	C192	A	C192	D6
C61	D6	C141	H2	R128	E8	R208	G1	U89	E9	C193	A	C193	D6
C62	D6	C142	H2	R129	E8	R209	G1	U90	E9	C194	A	C194	D6
C63	D6	C143	H2	R130	E8	R210	G1	U91	E9	C195	A	C195	D6
C64	D6	C144	H2	R131	E8	R211	G1	U92	E9	C196	A	C196	D6
C65	D6	C145	H2	R132	E8	R212	G1	U93	E9	C197	A	C197	D6
C66	D6	C146	H2	R133	E8	R213	G1	U94	E9	C198	A	C198	D6
C67	D6	C147	H2	R134	E8	R214	G1	U95	E9	C199	A	C199	D6
C68	D6	C148	H2	R135	E8	R215	G1	U96	E9	C200	A	C200	D6
C69	D6	C149	H2	R136	E8	R216	G1	U97	E9	C201	A	C201	D6
C70	D6	C150	H2	R137	E8	R217	G1	U98	E9	C202	A	C202	D6
C71	D6	C151	H2	R138	E8	R218	G1	U99	E9	C203	A	C203	D6
C72	D6	C152	H2	R139	E8	R219	G1	U100	E9	C204	A	C204	D6
C73	D6	C153	H2	R140	E8	R220	G1	U101	E9	C205	A	C205	D6
C74	D6	C154	H7	R141	E8	R221	G1	U102	E9	C206	A	C206	D6
C75	D6	C155	H7	R142	E8	R222	G1	U103	E9	C207	A	C207	D6
C76	D6	C156	H7	R143	E8	R223	G1	U104	E9	C208	A	C208	D6
C77	D6	C157	H7	R144	E8	R224	G1	U105	E9	C209	A	C209	D6
C78	D6	C158	H7	R145	E8	R225	G1	U106	E9	C210	A	C210	D6
C79	D6	C159	H7	R146	E8	R226	G1	U107	E9	C211	A	C211	D6
C80	D6	C160	H7	R147	E8	R227	G1	U108	E9	C212	A	C212	D6
C81	D6	C161	H7	R148	E8	R228	G1	U109	E9	C213	A	C213	D6
C82	D6	C162	H7	R149	E8	R229	G1	U110	E9	C214	A	C214	D6
C83	D6	C163	H7	R150	E8	R230	G1	U111	E9	C215	A	C215	D6
C84	D6	C164	H7	R151	E8	R231	G1	U112	E9	C216	A	C216	D6
C85	D6	C165	H7	R152	E8	R232	G1	U113	E9	C217	A	C217	D6
C86	D6	C166	H7	R153	E8	R233	G1	U114	E9	C218	A	C218	D6
C87	D6	C167	H7	R154	E8	R234	G1	U115	E9	C219	A	C219	D6
C88	D6	C168	H7	R155	E8	R235	G1	U116	E9	C220	A	C220	D6
C89	D6	C169	H7	R156	E8	R236	G1	U117	E9	C221	A	C221	D6
C90	D6	C170	H7	R157	E8	R237	G1	U118	E9	C222	A	C222	D6
C91	D6	C171	H7	R158	E8	R238	G1	U119	E9	C223	A	C223	D6
C92	D6	C172	H7	R159	E8	R239	G1	U120	E9	C224	A	C224	D6
C93	D6	C173	H7	R160	E8	R240	G1	U121	E9	C225	A	C225	D6
C94	D6	C174	H7	R161	E8	R241	G1	U122	E9	C226	A	C226	D6
C95	D6	C175	H7	R162	E8	R242	G1	U123	E9	C227	A	C227	D6
C96	D6	C176	H7	R163	E8	R243	G1	U124	E9	C228	A	C228	D6
C97	D6	C177	H7	R164	E8	R244	G1	U125	E9	C229	A	C229	D6
C98	D6	C178	H7	R165	E8	R245	G1	U126	E9	C230	A	C230	D6
C99	D6	C179	H7	R166	E8	R246	G1	U127	E9	C231	A	C231	D6
C100	D6	C180	H7	R167	E8	R247	G1	U128	E9	C232	A	C232	D6

A B C D E F G H

8

7

6

5

4

3


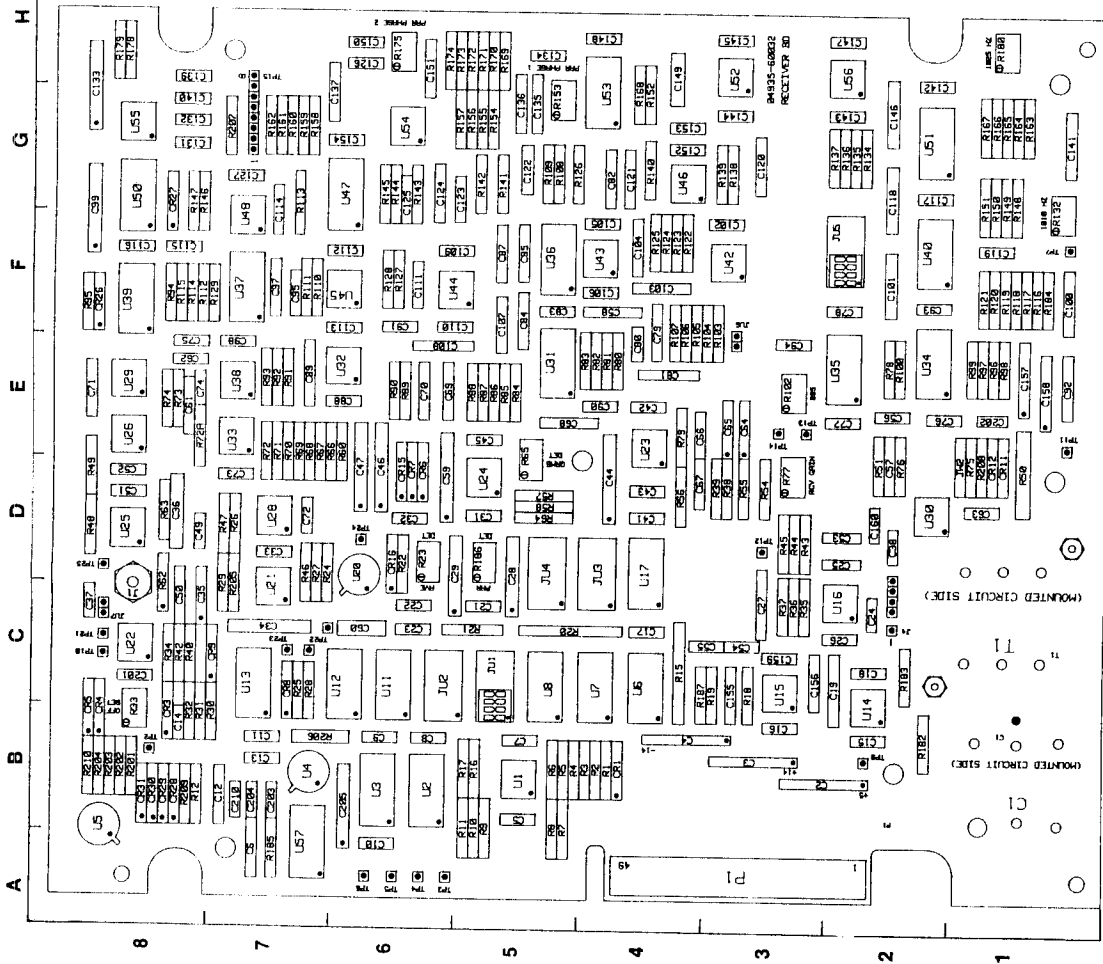


Figure 8-28. A13 Receiver Board Component Locator

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	B1	C86	E6	R157	G4	U1	F5	R158	G6	U13	B3
C2	B2	C87	E7	R159	G7	U2	F6	R160	G7	U14	B4
C3	B3	C88	E8	R161	G8	U3	F7	R162	G8	U15	B5
C4	B4	C89	F1	R163	G1	U4	F8	R164	G1	U16	B6
C5	B5	C90	F2	R165	G2	U5	F9	R166	G2	U17	B7
C6	B6	C91	F3	R167	G3	U6	F10	R168	G3	U18	B8
C7	B7	C92	F4	R169	G4	U7	F11	R170	G4	U19	B9
C8	B8	C93	F5	R171	G5	U8	F12	R172	G5	U20	B10
C9	A1	C94	F6	R173	G6	U9	F13	R174	G6	U21	A2
C10	A2	C95	F7	R175	G7	U10	F14	R176	G7	U22	A3
C11	A3	C96	F8	R177	G8	U11	F15	R178	G8	U23	A4
C12	A4	C97	F9	R179	G9	U12	F16	R180	G9	U24	A5
C13	A5	C98	F10	R181	G10	U13	F17	R182	G10	U25	A6
C14	A6	C99	F11	R183	G11	U14	F18	R184	G11	U26	A7
C15	A7	C100	F12	R185	G12	U15	F19	R186	G12	U27	A8
C16	A8	C101	F13	R187	G13	U16	F20	R188	G13	U28	A9
C17	A9	C102	F14	R189	G14	U17	F21	R190	G14	U29	A10
C18	A10	C103	F15	R191	G15	U18	F22	R192	G15	U30	A11
C19	B1	C104	F16	R193	G16	U19	F23	R194	G16	U31	B2
C20	B2	C105	F17	R195	G17	U20	F24	R196	G17	U32	B3
C21	B3	C106	F18	R197	G18	U21	F25	R198	G18	U33	B4
C22	B4	C107	F19	R199	G19	U22	F26	R200	G19	U34	B5
C23	B5	C108	F20	R201	G20	U23	F27	R202	G20	U35	B6
C24	B6	C109	F21	R203	G21	U24	F28	R204	G21	U36	B7
C25	B7	C110	F22	R205	G22	U25	F29	R206	G22	U37	B8
C26	B8	C111	F23	R207	G23	U26	F30	R208	G23		
C27	C1	C112	F24	R209	G24	U27	F31	R210	G24		
C28	C2	C113	F25	R211	G25	U28	F32	R212	G25		
C29	C3	C114	F26	R213	G26	U29	F33	R214	G26		
C30	C4	C115	F27	R215	G27	U30	F34	R216	G27		
C31	C5	C116	F28	R217	G28	U31	F35	R218	G28		
C32	C6	C117	F29	R219	G29	U32	F36	R220	G29		
C33	C7	C118	F30	R221	G30	U33	F37	R222	G30		
C34	C8	C119	F31	R223	G31	U34	F38	R224	G31		
C35	C9	C120	F32	R225	G32	U35	F39	R226	G32		
C36	C10	C121	F33	R227	G33	U36	F40	R228	G33		
C37	D1	C122	F34	R229	G34	U37	F41	R230	G34		
C38	D2	C123	F35	R231	G35	U38	F42	R232	G35		
C39	D3	C124	F36	R233	G36	U39	F43	R234	G36		
C40	D4	C125	F37	R235	G37	U40	F44	R236	G37		
C41	D5	C126	F38	R237	G38	U41	F45	R238	G38		
C42	D6	C127	F39	R239	G39	U42	F46	R240	G39		
C43	D7	C128	F40	R241	G40	U43	F47	R242	G40		
C44	D8	C129	F41	R243	G41	U44	F48	R244	G41		
C45	D9	C130	F42	R245	G42	U45	F49	R246	G42		
C46	D10	C131	F43	R247	G43	U46	F50	R248	G43		
C47	E1	C132	F44	R249	G44	U47	F51	R250	G44		
C48	E2	C133	F45	R251	G45	U48	F52	R252	G45		
C49	E3	C134	F46	R253	G46	U49	F53	R254	G46		
C50	E4	C135	F47	R255	G47	U50	F54	R256	G47		
C51	E5	C136	F48	R257	G48	U51	F55	R258	G48		
C52	E6	C137	F49	R259	G49	U52	F56	R260	G49		
C53	E7	C138	F50	R261	G50	U53	F57	R262	G50		
C54	E8	C139	F51	R263	G51	U54	F58	R264	G51		
C55	E9	C140	F52	R265	G52	U55	F59	R266	G52		
C56	E10	C141	F53	R267	G53	U56	F60	R268	G53		
C57	F1	C142	F54	R269	G54	U57	F61	R270	G54		
C58	F2	C143	F55	R271	G55	U58	F62	R272	G55		
C59	F3	C144	F56	R273	G56	U59	F63	R274	G56		
C60	F4	C145	F57	R275	G57	U60	F64	R276	G57		
C61	F5	C146	F58	R277	G58	U61	F65	R278	G58		
C62	F6	C147	F59	R279	G59	U62	F66	R280	G59		
C63	F7	C148	F60	R281	G60	U63	F67	R282	G60		
C64	F8	C149	F61	R283	G61	U64	F68	R284	G61		
C65	F9	C150	F62	R285	G62	U65	F69	R286	G62		
C66	F10	C151	F63	R287	G63	U66	F70	R288	G63		
C67	G1	C152	F64	R289	G64	U67	F71	R290	G64		
C68	G2	C153	F65	R291	G65	U68	F72	R292	G65		
C69	G3	C154	F66	R293	G66	U69	F73	R294	G66		
C70	G4	C155	F67	R295	G67	U70	F74	R296	G67		
C71	G5	C156	F68	R297	G68	U71	F75	R298	G68		
C72	G6	C157	F69	R299	G69	U72	F76	R300	G69		
C73	G7	C158	F70	R301	G70	U73	F77	R302	G70		
C74	G8	C159	F71	R303	G71	U74	F78	R304	G71		
C75	G9	C160	F72	R305	G72	U75	F79	R306	G72		
C76	G10	C161	F73	R307	G73	U76	F80	R308	G73		
C77	H1	C162	F74	R309	G74	U77	F81	R310	G74		
C78	H2	C163	F75	R311	G75	U78	F82	R312	G75		
C79	H3	C164	F76	R313	G76	U79	F83	R314	G76		
C80	H4	C165	F77	R315	G77	U80	F84	R316	G77		
C81	H5	C166	F78	R317	G78	U81	F85	R318	G78		
C82	H6	C167	F79	R319	G79	U82	F86	R320	G79		
C83	H7	C168	F80	R321	G80	U83	F87	R322	G80		
C84	H8	C169	F81	R323	G81	U84	F88	R324	G81		
C85	H9	C170	F82	R325	G82	U85	F89	R326	G82		
C86	H10	C171	F83	R327	G83	U86	F90	R328	G83		
C87	H11	C172	F84	R329	G84	U87	F91	R330	G84		
C88	H12	C173	F85	R331	G85	U88	F92	R332	G85		

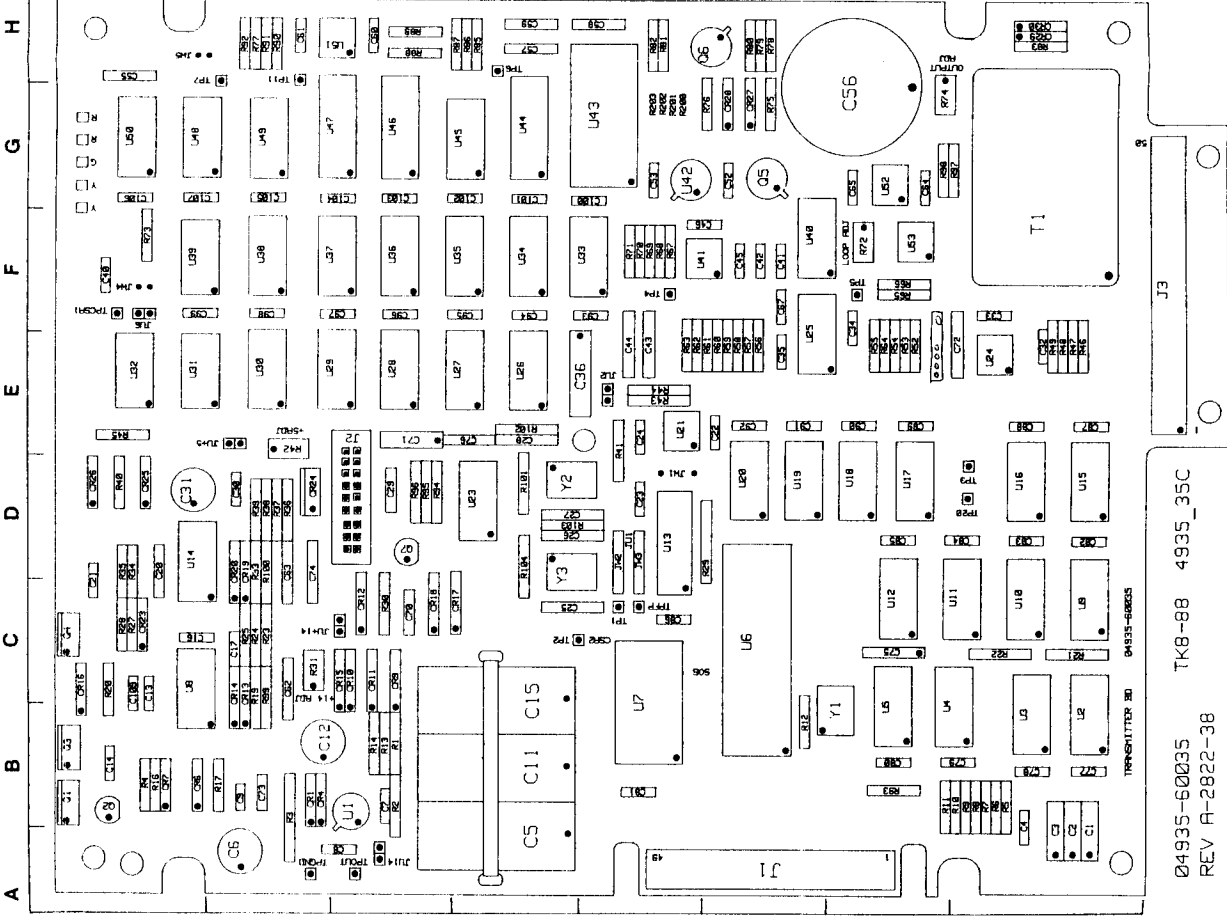

Ø4935-60035
 REV A-2822-38
 TK8-88 4935_35C

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	A-1	R1	E-4	U15	D-1		
C2	A-1	R2	E-4	U17	D-2		
C3	A-1	R3	E-4	U18	D-3		
C4	A-5	R4	E-4	U19	D-3		
C5	A-7	R5	E-8	U20	D-3		
C6	A-7	R6	E-1	U21	D-5		
C7	A-8	R7	E-1	U22	E-1		
C8	B-7	R8	E-2	U23	E-1		
C9	B-7	R9	E-2	U24	F-3		
C10	B-5	R10	E-2	U25	E-5		
C11	B-5	R11	E-2	U26	E-5		
C12	B-7	R12	E-2	U27	E-8		
C13	B-8	R13	E-2	U28	E-8		
C14	B-8	R14	E-2	U29	E-8		
C15	C-5	R15	E-3	U30	E-8		
C16	C-7	R16	E-3	U31	E-8		
C17	C-7	R17	E-3	U32	E-8		
C18	C-7	R18	E-3	U33	E-8		
C19	C-8	R19	E-3	U34	F-5		
C20	C-8	R20	E-3	U35	F-5		
C21	C-8	R21	E-3	U36	F-8		
C22	C-8	R22	E-3	U37	F-8		
C23	D-5	R23	E-3	U38	F-8		
C24	E-4	R24	E-2	U39	F-4		
C25	E-4	R25	E-2	U40	F-4		
C26	D-8	R26	F-2	U41	G-4		
C27	D-8	R27	F-2	U42	G-4		
C28	D-8	R28	F-2	U43	G-5		
C29	D-8	R29	F-2	U44	G-5		
C30	D-7	R30	F-4	U45	G-8		
C31	F-1	R31	F-4	U46	G-8		
C32	F-1	R32	F-4	U47	G-6		
C33	F-2	R33	F-4	U48	G-7		
C34	F-2	R34	F-4	U49	G-7		
C35	F-2	R35	F-4	U50	G-7		
C36	F-2	R36	F-4	U51	G-2		
C37	F-2	R37	F-4	U52	G-2		
C38	F-2	R38	F-4	U53	B-3		
C39	F-2	R39	F-4	U54	B-3		
C40	F-2	R40	F-4	U55	D-5		
C41	F-2	R41	F-4	U56	D-5		
C42	F-2	R42	F-4	U57	D-5		
C43	F-2	R43	F-4	U58	D-5		
C44	F-2	R44	F-4	U59	D-5		
C45	F-2	R45	F-4	U60	D-5		
C46	F-2	R46	F-4	U61	D-5		
C47	F-2	R47	F-4	U62	D-5		
C48	F-2	R48	F-4	U63	D-5		
C49	F-2	R49	F-4	U64	D-5		
C50	F-2	R50	F-4	U65	D-5		
C51	F-2	R51	F-4	U66	D-5		
C52	F-2	R52	F-4	U67	D-5		
C53	F-2	R53	F-4	U68	D-5		
C54	F-2	R54	F-4	U69	D-5		
C55	F-2	R55	F-4	U70	D-5		
C56	F-2	R56	F-4	U71	D-5		
C57	F-2	R57	F-4	U72	D-5		
C58	F-2	R58	F-4	U73	D-5		
C59	F-2	R59	F-4	U74	D-5		
C60	F-2	R60	F-4	U75	D-5		
C61	F-2	R61	F-4	U76	D-5		
C62	F-2	R62	F-4	U77	D-5		
C63	F-2	R63	F-4	U78	D-5		
C64	F-2	R64	F-4	U79	D-5		
C65	F-2	R65	F-4	U80	D-5		
C66	F-2	R66	F-4	U81	D-5		
C67	F-2	R67	F-4	U82	D-5		
C68	F-2	R68	F-4	U83	D-5		
C69	F-2	R69	F-4	U84	D-5		
C70	F-2	R70	F-4	U85	D-5		
C71	F-2	R71	F-4	U86	D-5		
C72	F-2	R72	F-4	U87	D-5		
C73	F-2	R73	F-4	U88	D-5		
C74	F-2	R74	F-4	U89	D-5		
C75	F-2	R75	F-4	U90	D-5		
C76	F-2	R76	F-4	U91	D-5		
C77	F-2	R77	F-4	U92	D-5		
C78	F-2	R78	F-4	U93	D-5		
C79	F-2	R79	F-4	U94	D-5		
C80	F-2	R80	F-4	U95	D-5		
C81	F-2	R81	F-4	U96	D-5		
C82	F-2	R82	F-4	U97	D-5		
C83	F-2	R83	F-4	U98	D-5		
C84	F-2	R84	F-4	U99	D-5		
C85	F-2	R85	F-4	U100	D-5		
C86	F-2	R86	F-4	U101	D-5		
C87	F-2	R87	F-4	U102	D-5		
C88	F-2	R88	F-4	U103	D-5		
C89	F-2	R89	F-4	U104	D-5		
C90	F-2	R90	F-4	U105	D-5		
C91	F-2	R91	F-4	U106	D-5		
C92	F-2	R92	F-4	U107	D-5		
C93	F-2	R93	F-4	U108	D-5		
C94	F-2	R94	F-4	U109	D-5		
C95	F-2	R95	F-4	U110	D-5		
C96	F-2	R96	F-4	U111	D-5		
C97	F-2	R97	F-4	U112	D-5		
C98	F-2	R98	F-4	U113	D-5		
C99	F-2	R99	F-4	U114	D-5		
C100	F-2	R100	F-4	U115	D-5		
C101	F-2	R101	F-4	U116	D-5		
C102	F-2	R102	F-4	U117	D-5		
C103	F-2	R103	F-4	U118	D-5		
C104	F-2	R104	F-4	U119	D-5		
C105	F-2	R105	F-4	U120	D-5		
C106	F-2	R106	F-4	U121	D-5		
C107	F-2	R107	F-4	U122	D-5		


Figure 8-35. A4 Transmitter Board Component Locator



04935-60031
 REV A-2822-38
 TRANSMITTER BD 04935-60031
 TK8-88 4935_31C

8-814 A

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	A-1	C109	G-5	R1	E-4	U15	D-1
C2	A-1	C181	B-7	R2	E-7	U16	D-2
C3	A-1	C184	B-8	R3	E-4	U17	D-2
C4	A-1	C186	B-8	R4	E-4	U18	D-2
C5	A-2	C187	B-8	R5	E-4	U19	D-3
C6	A-2	C188	B-8	R6	E-4	U20	D-4
C7	A-6	C189	C-6	R7	E-1	U21	D-4
C8	A-6	C190	C-6	R8	E-1	U22	D-5
C9	B-7	C191	C-6	R9	E-1	U23	D-5
C10	B-9	C192	C-7	R10	E-1	U24	E-1
C11	B-9	C193	C-7	R11	E-2	U25	E-2
C12	B-9	C194	C-7	R12	E-2	U26	E-3
C13	B-7	C195	C-5	R13	E-2	U27	E-5
C14	B-8	C196	C-8	R14	E-2	U28	E-6
C15	C-3	C197	C-8	R15	E-2	U29	E-9
C16	C-7	C198	D-7	R16	E-3	U30	E-7
C17	C-7	C199	D-7	R17	E-3	U31	E-9
C18	C-8	C200	D-7	R18	E-3	U32	F-2
C19	C-8	C201	D-7	R19	E-3	U33	F-2
C20	C-8	C202	D-7	R20	E-3	U34	F-5
C21	C-8	C203	D-7	R21	E-3	U35	F-5
C22	C-8	C204	D-7	R22	E-3	U36	F-8
C23	C-8	C205	D-7	R23	E-3	U37	F-8
C24	C-8	C206	D-7	R24	E-3	U38	F-8
C25	C-8	C207	D-7	R25	E-3	U39	F-8
C26	D-5	C208	H-1	R26	E-2	U40	F-3
C27	D-5	C209	H-1	R27	E-2	U41	F-4
C28	D-6	C210	H-1	R28	E-2	U42	F-4
C29	D-7	C211	H-1	R29	E-2	U43	F-4
C30	F-1	C212	C-5	R30	E-2	U44	F-4
C31	F-1	C213	C-5	R31	E-2	U45	G-5
C32	F-1	C214	C-5	R32	E-2	U46	G-6
C33	F-1	C215	C-5	R33	E-2	U47	G-6
C34	F-2	C216	D-6	R34	E-2	U48	G-7
C35	F-2	C217	D-6	R35	E-2	U49	G-7
C36	F-3	C218	E-7	R36	E-2	U50	G-8
C37	F-3	C219	E-7	R37	E-2	U51	G-8
C38	F-3	C220	E-7	R38	E-2	U52	G-2
C39	F-3	C221	E-7	R39	E-2	U53	F-2
C40	F-3	C222	E-7	R40	E-2	U54	F-2
C41	F-3	C223	E-7	R41	E-2	U55	F-2
C42	F-3	C224	E-7	R42	E-2	U56	F-2
C43	F-3	C225	E-7	R43	E-2	U57	F-2
C44	F-3	C226	E-7	R44	E-2	U58	F-2
C45	F-3	C227	E-7	R45	E-2	U59	F-2
C46	F-3	C228	E-7	R46	E-2	U60	F-2
C47	F-3	C229	E-7	R47	E-2	U61	F-2
C48	F-3	C230	E-7	R48	E-2	U62	F-2
C49	F-3	C231	E-7	R49	E-2	U63	F-2
C50	F-3	C232	E-7	R50	E-2	U64	F-2
C51	F-3	C233	E-7	R51	E-2	U65	F-2
C52	F-3	C234	E-7	R52	E-2	U66	F-2
C53	F-3	C235	E-7	R53	E-2	U67	F-2
C54	F-3	C236	E-7	R54	E-2	U68	F-2
C55	F-3	C237	E-7	R55	E-2	U69	F-2
C56	F-3	C238	E-7	R56	E-2	U70	F-2
C57	F-3	C239	E-7	R57	E-2	U71	F-2
C58	F-3	C240	E-7	R58	E-2	U72	F-2
C59	F-3	C241	E-7	R59	E-2	U73	F-2
C60	F-3	C242	E-7	R60	E-2	U74	F-2
C61	F-3	C243	E-7	R61	E-2	U75	F-2
C62	F-3	C244	E-7	R62	E-2	U76	F-2
C63	F-3	C245	E-7	R63	E-2	U77	F-2
C64	F-3	C246	E-7	R64	E-2	U78	F-2
C65	F-3	C247	E-7	R65	E-2	U79	F-2
C66	F-3	C248	E-7	R66	E-2	U80	F-2
C67	F-3	C249	E-7	R67	E-2	U81	F-2
C68	F-3	C250	E-7	R68	E-2	U82	F-2
C69	F-3	C251	E-7	R69	E-2	U83	F-2
C70	F-3	C252	E-7	R70	E-2	U84	F-2
C71	F-3	C253	E-7	R71	E-2	U85	F-2
C72	F-3	C254	E-7	R72	E-2	U86	F-2
C73	F-3	C255	E-7	R73	E-2	U87	F-2
C74	F-3	C256	E-7	R74	E-2	U88	F-2
C75	F-3	C257	E-7	R75	E-2	U89	F-2
C76	F-3	C258	E-7	R76	E-2	U90	F-2
C77	F-3	C259	E-7	R77	E-2	U91	F-2
C78	F-3	C260	E-7	R78	E-2	U92	F-2
C79	F-3	C261	E-7	R79	E-2	U93	F-2
C80	F-3	C262	E-7	R80	E-2	U94	F-2
C81	F-3	C263	E-7	R81	E-2	U95	F-2
C82	F-3	C264	E-7	R82	E-2	U96	F-2
C83	F-3	C265	E-7	R83	E-2	U97	F-2
C84	F-3	C266	E-7	R84	E-2	U98	F-2
C85	F-3	C267	E-7	R85	E-2	U99	F-2
C86	F-3	C268	E-7	R86	E-2	U100	F-2
C87	F-3	C269	E-7	R87	E-2	U101	F-2
C88	F-3	C270	E-7	R88	E-2	U102	F-2
C89	F-3	C271	E-7	R89	E-2	U103	F-2
C90	F-3	C272	E-7	R90	E-2	U104	F-2
C91	F-3	C273	E-7	R91	E-2	U105	F-2
C92	F-3	C274	E-7	R92	E-2	U106	F-2
C93	F-3	C275	E-7	R93	E-2	U107	F-2
C94	F-3	C276	E-7	R94	E-2	U108	F-2
C95	F-3	C277	E-7	R95	E-2	U109	F-2
C96	F-3	C278	E-7	R96	E-2	U110	F-2
C97	F-3	C279	E-7	R97	E-2	U111	F-2
C98	F-3	C280	E-7	R98	E-2	U112	F-2
C99	F-3	C281	E-7	R99	E-2	U113	F-2
C100	F-3	C282	E-7	R100	E-2	U114	F-2
C101	F-3	C283	E-7	R101	E-2	U115	F-2
C102	F-3	C284	E-7	R102	E-2	U116	F-2
C103	F-3	C285	E-7	R103	E-2	U117	F-2
C104	F-3	C286	E-7	R104	E-2	U118	F-2
C105	F-3	C287	E-7	R105	E-2	U119	F-2
C106	F-3	C288	E-7	R106	E-2	U120	F-2
C107	F-3	C289	E-7	R107	E-2	U121	F-2
C108	F-3	C290	E-7	R108	E-2	U122	F-2
C109	F-3	C291	E-7	R109	E-2	U123	F-2
C110	F-3	C292	E-7	R110	E-2	U124	F-2
C111	F-3	C293	E-7	R111	E-2	U125	F-2
C112	F-3	C294	E-7	R112	E-2	U126	F-2
C113	F-3	C295	E-7	R113	E-2	U127	F-2
C114	F-3	C296	E-7	R114	E-2	U128	F-2
C115	F-3	C297	E-7	R115	E-2	U129	F-2
C116	F-3	C298	E-7	R116	E-2	U130	F-2
C117	F-3	C299	E-7	R117	E-2	U131	F-2
C118	F-3	C300	E-7	R118	E-2	U132	F-2
C119	F-3	C301	E-7	R119	E-2	U133	F-2
C120	F-3	C302	E-7	R120	E-2	U134	F-2
C121	F-3	C303	E-7	R121	E-2	U135	F-2
C122	F-3	C304	E-7	R122	E-2	U136	F-2
C123	F-3	C305	E-7	R123	E-2	U137	F-2
C124	F-3	C306	E-7	R124	E-2	U138	F-2
C125	F-3	C307	E-7	R125	E-2	U139	F-2
C126	F-3	C308	E-7	R126	E-2	U140	F-2
C127	F-3	C309	E-7	R127	E-2	U141	F-2
C128	F-3	C310	E-7	R128	E-2	U142	F-2
C129	F-3	C311	E-7	R129	E-2	U143	F-2
C130	F-3	C312	E-7	R130	E-2	U144	F-2
C131	F-3	C313	E-7	R131	E-2	U145	F-2
C132	F-3	C314	E-7	R132	E-2	U146	F-2
C133	F-3	C315	E-7	R133	E-2	U147	F-2
C134	F-3	C316	E-7	R134	E-2	U148	F-2
C135	F-3	C317	E-7	R135	E-2	U149	F-2
C136	F-3	C318	E-7	R136	E-2	U150	F-2
C137	F-3	C319	E-7	R137	E-2	U151	F-2
C138	F-3	C320	E-7	R138	E-2	U152	F-2
C139	F-3	C321	E-7	R139	E-2	U153	F-2
C140	F-3	C322	E-7	R140	E-2	U154	F-2
C141	F-3	C323	E-7	R141	E-2	U155	F-2
C142	F-3	C324	E-7	R142	E-2	U156	F-2
C143	F-3	C325	E-7	R143	E-2	U157	F-2
C144	F-3	C326	E-7	R144	E-2	U158	F-2
C145	F-3	C327	E-7	R145	E-2	U159	F-2
C146	F-3	C328	E-7	R146	E-2	U160	F-2
C147	F-3	C329	E-7	R147	E-2	U161	F-2
C148	F-3	C330	E-7	R148	E-2	U162	F-2
C149	F-3	C331	E-7	R149	E-2	U163	F-2
C150	F-3	C332	E-7	R150	E-2	U164	F-2
C151	F-3	C333	E-7	R151	E-2	U165	F-2
C152	F-3	C334	E-7	R152	E-2	U166	F-2
C153	F-3	C335	E-7	R153	E-2	U167	F-2
C154	F-3	C336	E-7	R154	E-2	U168	F-2
C155	F-3	C337	E-7	R155	E-2	U169	F-2
C156	F-3	C338	E-7	R156	E-2	U170	F-2
C157	F-3	C339	E-7	R157	E-2	U171	F-2
C158	F-3	C340	E-7	R158	E-2	U172	F-2
C159	F-3	C341	E-7	R159	E-2	U173	F-2
C160	F-3	C342	E-7	R160	E-2	U174	F-2
C161	F-3	C343	E-7	R161	E-2	U175	F-2
C162	F-3	C344	E-7	R162	E-2	U176	F-2
C163	F-3	C345	E-7	R163	E-2	U177	F-2
C164	F-3	C346	E-7	R164	E-2	U178	F-2
C165	F-3	C347	E-7	R165	E-2	U179	F-2
C166	F-3	C348	E-7	R166	E-2	U180	F-2
C167	F-3	C349	E-7	R167	E-2	U181	F-2
C168	F-3	C350	E-7	R168	E-2	U182	F-2
C169	F-3	C351	E-7	R169	E-2	U183	F-2
C170	F-3	C352	E-7	R170	E-2	U184	F-2
C171	F-3	C353	E-7	R171	E-2	U185	F-2
C172	F-3	C354	E-7	R172	E-2	U186	F-2
C173	F-3	C355	E-7	R173	E-2	U187	F-2
C174	F-3	C356	E-7	R174	E-2	U188	F-2
C175	F-3	C357	E-7	R175	E-2	U189	F-2
C176	F-3	C358	E-7	R176	E-2	U190	F-2
C177	F-3	C359	E-7	R177	E-2	U191	F-2
C178	F-3	C360	E-7	R178	E-2	U192	F-2
C179	F-3	C361	E-7	R179	E-2	U193	F-2
C180	F-3	C362	E-7	R180	E-2	U194	F-2
C181	F-3	C363	E-7	R181	E-2	U195	F-2
C182	F-3	C364	E-7	R182	E-2	U196	F-2
C183	F-3	C365	E-7	R183	E-2	U197	F-2
C184	F-3	C366	E-7	R184	E-2	U198	F-2
C185	F-3	C367	E-7	R185	E-2	U199	F-2
C186	F-3	C368	E-7	R186	E-2	U200	F-2
C18							

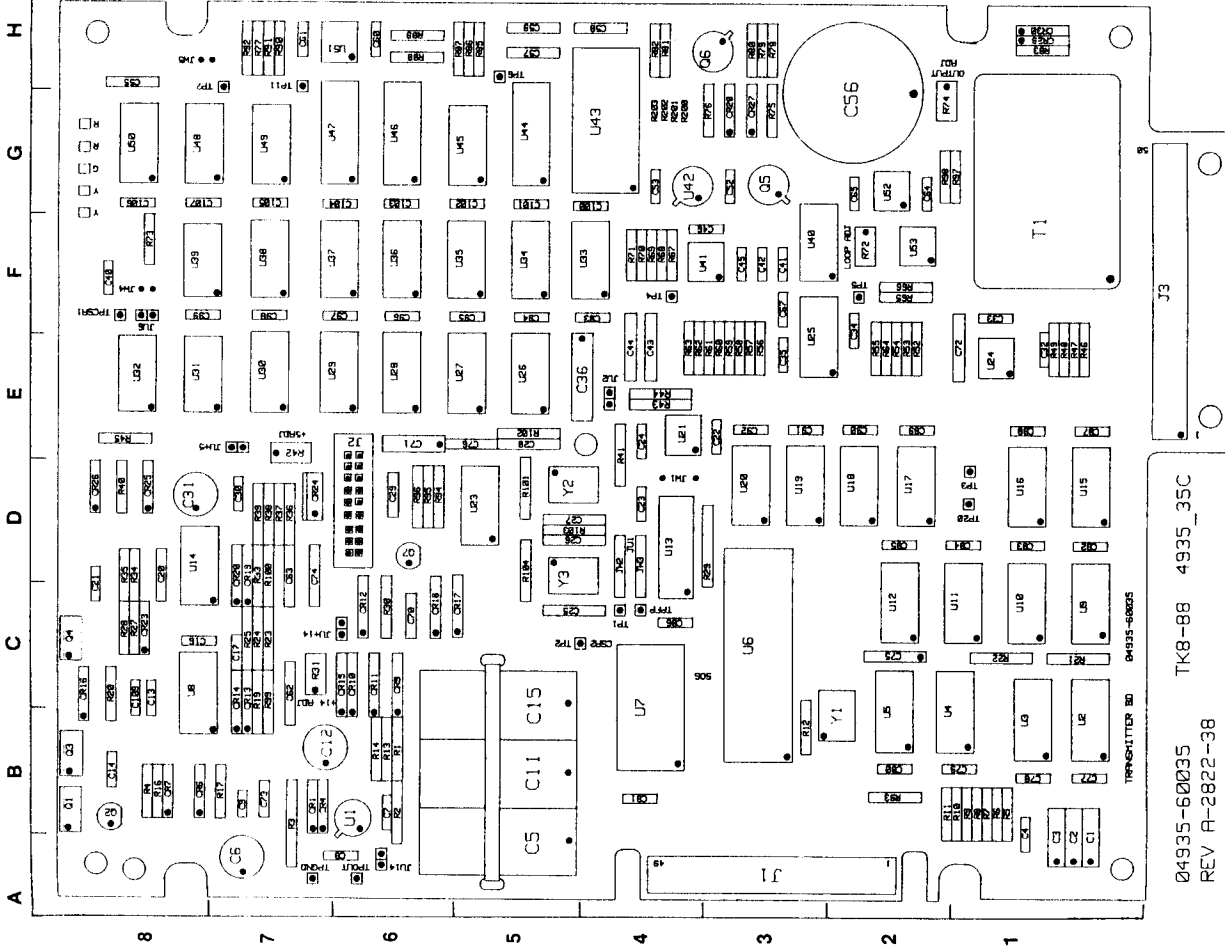

04935-60035 TK8-88 4935_35C
REV A-2822-38

Figure 8-35. A4 Transmitter Board Component Locator


Z SAG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
1	A-1	C108	G-8	R41	E-4	U15	D-1
2	A-1	C109	B-7	R42	E-7	U16	D-1
3	A-1	C109	B-8	R43	E-4	U18	D-2
4	A-5	C109	B-8	R44	E-8	U19	D-3
5	A-7	C109	C-8	R45	E-1	U20	D-3
6	A-8	C110	C-8	R47	E-1	U21	E-4
7	A-9	C110	C-8	R48	E-1	U22	E-4
8	B-5	C111	C-7	R49	E-1	U23	E-5
9	B-5	C112	C-7	R50	E-2	U24	E-5
10	B-5	C113	C-7	R51	E-2	U25	F-3
11	B-5	C114	C-7	R52	E-2	U26	E-5
12	B-5	C115	C-6	R54	E-2	U27	E-5
13	B-5	C116	C-5	R55	E-3	U28	E-6
14	B-5	C117	C-5	R56	E-3	U29	E-6
15	C-5	C118	C-6	R57	E-3	U30	E-7
16	C-7	C119	D-7	R58	E-3	U32	E-8
17	C-7	C120	D-7	R59	E-3	U33	F-3
18	C-8	C121	D-7	R60	E-3	U34	F-5
19	C-8	C122	D-7	R61	E-3	U35	F-5
20	E-5	C123	D-8	R62	E-3	U36	F-6
21	E-5	C124	G-3	R63	E-3	U37	F-6
22	E-5	C125	G-3	R64	E-2	U38	F-1
23	E-4	C126	G-3	R65	E-2	U39	F-1
24	D-5	C127	H-3	R66	F-2	U40	F-4
25	D-7	C128	H-1	R67	F-4	U41	F-4
26	D-7	C129	H-1	R68	F-4	U42	G-4
27	D-8	C130	F-8	R69	F-4	U43	G-5
28	D-8	C131	C-5	R70	F-4	U44	G-5
29	F-1	C132	C-5	R71	F-4	U45	G-6
30	F-1	C133	F-1	R72	F-8	U46	G-7
31	F-1	C134	F-1	R73	F-8	U47	G-7
32	F-2	C135	F-1	R74	H-8	U48	G-7
33	F-2	C136	F-1	R75	H-4	U49	G-7
34	F-3	C137	F-2	R76	H-4	U50	G-2
35	F-3	C138	F-2	R77	H-7	U53	F-2
36	F-4	C139	C-6	R78	H-7	Y1	D-5
37	F-4	C140	C-6	R79	H-7	Y2	D-5
38	F-4	C141	D-4	R80	H-3	Y3	D-5
39	F-4	C142	D-4	R81	H-3		
40	F-4	C143	D-4	R82	H-3		
41	F-4	C144	D-4	R83	H-3		
42	F-4	C145	D-4	R84	H-3		
43	F-4	C146	D-4	R85	H-3		
44	F-4	C147	D-4	R86	H-2		
45	F-4	C148	D-4	R87	H-2		
46	F-4	C149	D-4	R88	H-2		
47	F-4	C150	D-4	R89	H-2		
48	F-4	C151	D-4	R90	H-2		
49	F-4	C152	D-4	R91	H-2		
50	F-4	C153	D-4	R92	H-2		
51	F-4	C154	D-4	R93	H-2		
52	F-4	C155	D-4	R94	H-2		
53	F-4	C156	D-4	R95	H-2		
54	F-4	C157	D-4	R96	H-2		
55	F-4	C158	D-4	R97	H-2		
56	F-4	C159	D-4	R98	H-2		
57	F-4	C160	D-4	R99	H-2		
58	F-4	C161	D-4	R100	H-2		
59	F-4	C162	D-4	R101	H-2		
60	F-4	C163	D-4	R102	H-2		
61	F-4	C164	D-4	R103	H-2		
62	F-4	C165	D-4	R104	H-2		
63	F-4	C166	D-4	R105	H-2		
64	F-4	C167	D-4	R106	H-2		
65	F-4	C168	D-4	R107	H-2		
66	F-4	C169	D-4	R108	H-2		
67	F-4	C170	D-4	R109	H-2		
68	F-4	C171	D-4	R110	H-2		
69	F-4	C172	D-4	R111	H-2		
70	F-4	C173	D-4	R112	H-2		
71	F-4	C174	D-4	R113	H-2		
72	F-4	C175	D-4	R114	H-2		
73	F-4	C176	D-4	R115	H-2		
74	F-4	C177	D-4	R116	H-2		
75	F-4	C178	D-4	R117	H-2		
76	F-4	C179	D-4	R118	H-2		
77	F-4	C180	D-4	R119	H-2		
78	F-4	C181	D-4	R120	H-2		
79	F-4	C182	D-4	R121	H-2		
80	F-4	C183	D-4	R122	H-2		
81	F-4	C184	D-4	R123	H-2		
82	F-4	C185	D-4	R124	H-2		
83	F-4	C186	D-4	R125	H-2		
84	F-4	C187	D-4	R126	H-2		
85	F-4	C188	D-4	R127	H-2		
86	F-4	C189	D-4	R128	H-2		
87	F-4	C190	D-4	R129	H-2		
88	F-4	C191	D-4	R130	H-2		
89	F-4	C192	D-4	R131	H-2		
90	F-4	C193	D-4	R132	H-2		
91	F-4	C194	D-4	R133	H-2		
92	F-4	C195	D-4	R134	H-2		
93	F-4	C196	D-4	R135	H-2		
94	F-4	C197	D-4	R136	H-2		
95	F-4	C198	D-4	R137	H-2		
96	F-4	C199	D-4	R138	H-2		
97	F-4	C200	D-4	R139	H-2		
98	F-4	C201	D-4	R140	H-2		
99	F-4	C202	D-4	R141	H-2		
100	F-4	C203	D-4	R142	H-2		
101	F-4	C204	D-4	R143	H-2		
102	F-4	C205	D-4	R144	H-2		
103	F-4	C206	D-4	R145	H-2		
104	F-4	C207	D-4	R146	H-2		
105	F-4	C208	D-4	R147	H-2		
106	F-4	C209	D-4	R148	H-2		
107	F-4	C210	D-4	R149	H-2		
108	F-4	C211	D-4	R150	H-2		
109	F-4	C212	D-4	R151	H-2		
110	F-4	C213	D-4	R152	H-2		
111	F-4	C214	D-4	R153	H-2		
112	F-4	C215	D-4	R154	H-2		
113	F-4	C216	D-4	R155	H-2		
114	F-4	C217	D-4	R156	H-2		
115	F-4	C218	D-4	R157	H-2		
116	F-4	C219	D-4	R158	H-2		
117	F-4	C220	D-4	R159	H-2		
118	F-4	C221	D-4	R160	H-2		
119	F-4	C222	D-4	R161	H-2		
120	F-4	C223	D-4	R162	H-2		
121	F-4	C224	D-4	R163	H-2		
122	F-4	C225	D-4	R164	H-2		
123	F-4	C226	D-4	R165	H-2		
124	F-4	C227	D-4	R166	H-2		
125	F-4	C228	D-4	R167	H-2		
126	F-4	C229	D-4	R168	H-2		
127	F-4	C230	D-4	R169	H-2		
128	F-4	C231	D-4	R170	H-2		
129	F-4	C232	D-4	R171	H-2		
130	F-4	C233	D-4	R172	H-2		
131	F-4	C234	D-4	R173	H-2		
132	F-4	C235	D-4	R174	H-2		
133	F-4	C236	D-4	R175	H-2		
134	F-4	C237	D-4	R176	H-2		
135	F-4	C238	D-4	R177	H-2		
136	F-4	C239	D-4	R178	H-2		
137	F-4	C240	D-4	R179	H-2		
138	F-4	C241	D-4	R180	H-2		
139	F-4	C242	D-4	R181	H-2		
140	F-4	C243	D-4	R182	H-2		
141	F-4	C244	D-4	R183	H-2		
142	F-4	C245	D-4	R184	H-2		
143	F-4	C246	D-4	R185	H-2		
144	F-4	C247	D-4	R186	H-2		
145	F-4	C248	D-4	R187	H-2		
146	F-4	C249	D-4	R188	H-2		
147	F-4	C250	D-4	R189	H-2		
148	F-4	C251	D-4	R190	H-2		
149	F-4	C252	D-4	R191	H-2		
150	F-4	C253	D-4	R192	H-2		
151	F-4	C254	D-4	R193	H-2		
152	F-4	C255	D-4	R194	H-2		
153	F-4	C256	D-4	R195	H-2		
154	F-4	C257	D-4	R196	H-2		
155	F-4	C258	D-4	R197	H-2		
156	F-4	C259	D-4	R198	H-2		
157	F-4	C260	D-4	R199	H-2		
158	F-4	C261	D-4	R200	H-2		
159	F-4	C262	D-4	R201	H-2		
160	F-4	C263	D-4	R202	H-2		
161	F-4	C264	D-4	R203	H-2		
162	F-4	C265	D-4	R204	H-2		
163	F-4	C266	D-4	R205	H-2		
164	F-4	C267	D-4	R206	H-2		
165	F-4	C268	D-4	R207	H-2		
166	F-4	C269	D-4	R208	H-2		
167	F-4	C270	D-4	R209	H-2		
168	F-4	C271	D-4	R210	H-2		
169	F-4	C272	D-4	R211	H-2		
170	F-4	C273	D-4	R212	H-2		
171	F-4	C274	D-4	R213	H-2		
172	F-4	C275	D-4	R214	H-2		
173	F-4	C276	D-4	R215	H-2		
174	F-4	C277	D-4	R216	H-2		
175	F-4	C278	D-4	R217	H-2		
176	F-4	C279	D-4	R218	H-2		
177	F-4	C280	D-4	R219	H-2		
178	F-4	C281	D-4	R220	H-2		
179	F-4	C282	D-4	R221	H-2		
180	F-4	C283	D-4	R222	H-2		
181	F-4	C284	D-4	R223	H-2		
182	F-4	C285	D-4	R224	H-2		
183	F-4	C286	D-4	R225	H-2		
184	F-4	C287	D-4	R226	H-2		
185	F-4	C288	D-4	R227	H-2		
186	F-4	C289	D-4	R228	H-2		
187	F-4	C290	D-4	R229	H-2		
188	F-4	C291	D-4	R230	H-2		
189	F-4	C292	D-4	R231	H-2		
190	F-4	C293	D-4	R232	H-2		
191	F-4	C294	D-4	R233	H-2		
192	F-4	C295	D-4	R234	H-2		
193	F-4	C296	D-4	R235	H-2		
194	F-4	C297	D-4	R236	H-2		
195	F-4	C298	D-4	R237	H-2		
196	F-4	C299	D-4	R238	H-2		
197	F-4	C300	D-4	R239	H-2		
198	F-4	C301	D-4	R240	H-2		
199	F-4	C302	D-4	R241	H-2		
200	F-4	C303	D-4	R242	H-2		
201	F-4	C304	D-4	R243	H-2		
202	F-4	C305	D-4	R244	H-2		
203	F-4	C306	D-4	R245	H-2		
204	F-4	C307	D-4	R246	H-2		



04935-60035 TK8-88 4935_35C
REV A-2822-38

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	A-1	C109	G-8	H41	E-7	U15	D-1
C2	A-1	C109	B-7	H42	E-7	U16	D-1
C3	A-1	C109	B-7	H43	E-4	U17	D-2
C4	A-1	C109	B-8	H44	E-4	U18	D-2
C5	A-3	C109	C-8	H45	E-8	U19	D-3
C6	A-6	C109	C-6	H46	E-1	U20	E-3
C7	A-6	C109	C-6	H47	E-1	U21	E-3
C8	B-7	C109	C-8	H48	E-1	U22	D-5
C9	B-7	C109	C-8	H49	E-1	U23	D-5
C10	B-5	C109	C-7	H50	E-2	U24	F-3
C11	B-5	C109	C-7	H51	E-2	U25	F-3
C12	B-7	C109	C-6	H52	E-2	U26	F-5
C13	C-4	C109	C-5	H53	E-2	U27	F-5
C14	C-4	C109	C-5	H54	E-2	U28	E-6
C15	C-4	C109	C-5	H55	E-2	U29	E-6
C16	C-5	C109	C-5	H56	E-3	U30	E-7
C17	C-5	C109	C-5	H57	E-3	U31	E-7
C18	C-7	C109	C-7	H58	E-3	U32	E-8
C19	C-8	C109	C-8	H59	E-3	U33	E-8
C20	C-8	C109	C-8	H60	E-3	U34	F-5
C21	C-8	C109	C-8	H61	E-3	U35	F-5
C22	E-5	C109	C-8	H62	E-3	U36	F-8
C23	E-5	C109	C-8	H63	E-3	U37	F-8
C24	E-5	C109	C-8	H64	E-2	U38	F-6
C25	E-5	C109	C-8	H65	E-2	U39	F-6
C26	D-5	C109	G-3	H66	F-2	U40	F-4
C27	D-5	C109	G-3	H67	F-2	U41	F-4
C28	D-8	C109	H-1	H68	F-4	U42	G-4
C29	D-8	C109	H-1	H69	F-4	U43	G-4
C30	D-7	C109	F-1	H70	F-4	U44	G-4
C31	F-1	C109	C-5	H71	F-4	U45	G-5
C32	F-1	C109	C-5	H72	F-4	U46	G-5
C33	F-2	C109	A-3	H73	F-4	U47	G-6
C34	F-2	C109	D-6	H74	F-4	U48	G-6
C35	E-3	C109	F-1	H75	F-2	U49	G-6
C36	E-3	C109	F-1	H76	F-2	U50	G-9
C37	F-3	C109	F-1	H77	H-4	U51	G-2
C38	F-3	C109	F-1	H78	H-4	U52	G-2
C39	F-3	C109	F-1	H79	H-4	U53	F-2
C40	F-3	C109	F-1	H80	H-4	U54	F-2
C41	F-3	C109	F-1	H81	H-4	U55	F-2
C42	F-3	C109	F-1	H82	H-4	U56	F-2
C43	F-3	C109	F-1	H83	H-4	U57	F-2
C44	F-3	C109	F-1	H84	H-4	U58	F-2
C45	F-3	C109	F-1	H85	H-4	U59	F-2
C46	F-3	C109	F-1	H86	H-4	U60	F-2
C47	F-3	C109	F-1	H87	H-4	U61	F-2
C48	F-3	C109	F-1	H88	H-4	U62	F-2
C49	F-3	C109	F-1	H89	H-4	U63	F-2
C50	F-3	C109	F-1	H90	H-4	U64	F-2
C51	F-3	C109	F-1	H91	H-4	U65	F-2
C52	F-3	C109	F-1	H92	H-4	U66	F-2
C53	F-3	C109	F-1	H93	H-4	U67	F-2
C54	F-3	C109	F-1	H94	H-4	U68	F-2
C55	F-3	C109	F-1	H95	H-4	U69	F-2
C56	F-3	C109	F-1	H96	H-4	U70	F-2
C57	F-3	C109	F-1	H97	H-4	U71	F-2
C58	F-3	C109	F-1	H98	H-4	U72	F-2
C59	F-3	C109	F-1	H99	H-4	U73	F-2
C60	F-3	C109	F-1	H100	H-4	U74	F-2
C61	F-3	C109	F-1	H101	H-4	U75	F-2
C62	F-3	C109	F-1	H102	H-4	U76	F-2
C63	F-3	C109	F-1	H103	H-4	U77	F-2
C64	F-3	C109	F-1	H104	H-4	U78	F-2
C65	F-3	C109	F-1	H105	H-4	U79	F-2
C66	F-3	C109	F-1	H106	H-4	U80	F-2
C67	F-3	C109	F-1	H107	H-4	U81	F-2
C68	F-3	C109	F-1	H108	H-4	U82	F-2
C69	F-3	C109	F-1	H109	H-4	U83	F-2
C70	F-3	C109	F-1	H110	H-4	U84	F-2
C71	F-3	C109	F-1	H111	H-4	U85	F-2
C72	F-3	C109	F-1	H112	H-4	U86	F-2
C73	F-3	C109	F-1	H113	H-4	U87	F-2
C74	F-3	C109	F-1	H114	H-4	U88	F-2
C75	F-3	C109	F-1	H115	H-4	U89	F-2
C76	F-3	C109	F-1	H116	H-4	U90	F-2
C77	F-3	C109	F-1	H117	H-4	U91	F-2
C78	F-3	C109	F-1	H118	H-4	U92	F-2
C79	F-3	C109	F-1	H119	H-4	U93	F-2
C80	F-3	C109	F-1	H120	H-4	U94	F-2
C81	F-3	C109	F-1	H121	H-4	U95	F-2
C82	F-3	C109	F-1	H122	H-4	U96	F-2
C83	F-3	C109	F-1	H123	H-4	U97	F-2
C84	F-3	C109	F-1	H124	H-4	U98	F-2
C85	F-3	C109	F-1	H125	H-4	U99	F-2
C86	F-3	C109	F-1	H126	H-4	U100	F-2
C87	F-3	C109	F-1	H127	H-4	U101	F-2
C88	F-3	C109	F-1	H128	H-4	U102	F-2
C89	F-3	C109	F-1	H129	H-4	U103	F-2
C90	F-3	C109	F-1	H130	H-4	U104	F-2
C91	F-3	C109	F-1	H131	H-4	U105	F-2
C92	F-3	C109	F-1	H132	H-4	U106	F-2
C93	F-3	C109	F-1	H133	H-4	U107	F-2
C94	F-3	C109	F-1	H134	H-4	U108	F-2
C95	F-3	C109	F-1	H135	H-4	U109	F-2
C96	F-3	C109	F-1	H136	H-4	U110	F-2
C97	F-3	C109	F-1	H137	H-4	U111	F-2
C98	F-3	C109	F-1	H138	H-4	U112	F-2
C99	F-3	C109	F-1	H139	H-4	U113	F-2
C100	F-3	C109	F-1	H140	H-4	U114	F-2
C101	F-3	C109	F-1	H141	H-4	U115	F-2
C102	F-3	C109	F-1	H142	H-4	U116	F-2
C103	F-3	C109	F-1	H143	H-4	U117	F-2
C104	F-3	C109	F-1	H144	H-4	U118	F-2
C105	F-3	C109	F-1	H145	H-4	U119	F-2
C106	F-3	C109	F-1	H146	H-4	U120	F-2
C107	F-3	C109	F-1	H147	H-4	U121	F-2
C108	F-3	C109	F-1	H148	H-4	U122	F-2


Figure 8-35. A4 Transmitter Board Component Locator

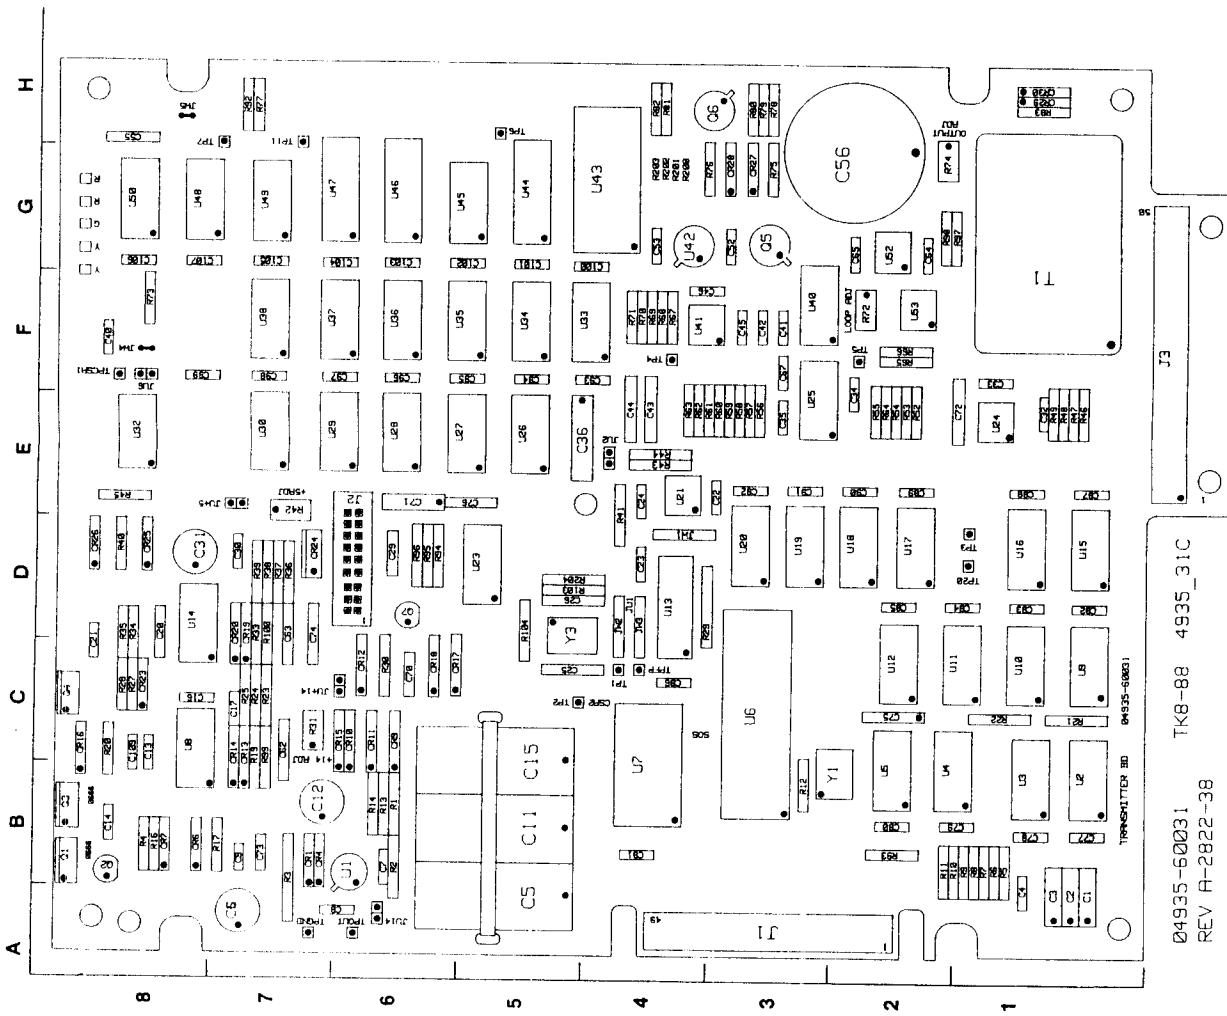

04935-60031
 TK8-88 4935_31C
 REV A-2822-38

Figure 8-35. A4 Transmitter Board Component Locator

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	A-1	C109	G-8	R1	E-4	U15	D-1
C2	A-1	C110	B-7	R2	E-4	U16	D-2
C3	A-1	C111	B-8	R3	E-4	U17	D-2
C4	A-1	C112	B-8	R4	E-4	U18	D-2
C5	A-1	C113	B-8	R5	E-4	U19	D-2
C6	A-1	C114	B-8	R6	E-4	U20	D-3
C7	A-6	C115	C-8	R7	E-1	U21	D-5
C8	A-6	C116	C-8	R8	E-1	U22	D-5
C9	B-7	C117	C-8	R9	E-1	U23	D-5
C10	B-7	C118	C-8	R10	E-1	U24	E-1
C11	B-7	C119	C-8	R11	E-1	U25	E-1
C12	B-7	C120	C-8	R12	E-2	U26	E-5
C13	C-8	C121	C-8	R13	E-2	U27	F-5
C14	B-8	C122	C-8	R14	E-2	U28	E-6
C15	B-8	C123	C-8	R15	E-2	U29	E-6
C16	B-8	C124	C-8	R16	E-2	U30	E-6
C17	C-7	C125	C-8	R17	E-3	U31	E-7
C18	C-7	C126	C-8	R18	E-3	U32	F-5
C19	C-7	C127	C-8	R19	E-3	U33	F-5
C20	C-8	C128	C-8	R20	E-3	U34	F-5
C21	C-8	C129	C-8	R21	E-3	U35	F-5
C22	D-5	C130	D-8	R22	E-3	U36	F-6
C23	D-5	C131	D-8	R23	E-3	U37	F-6
C24	E-4	C132	D-8	R24	E-3	U38	F-6
C25	E-4	C133	D-8	R25	E-3	U39	F-6
C26	E-4	C134	D-8	R26	E-3	U40	F-6
C27	E-4	C135	D-8	R27	E-3	U41	F-6
C28	E-4	C136	D-8	R28	E-3	U42	F-6
C29	D-6	C137	D-8	R29	E-3	U43	F-6
C30	D-6	C138	D-8	R30	E-3	U44	F-6
C31	D-6	C139	D-8	R31	E-3	U45	G-5
C32	F-1	C140	H-1	R32	F-2	U46	G-5
C33	F-1	C141	H-1	R33	F-2	U47	G-6
C34	F-2	C142	H-1	R34	F-2	U48	G-6
C35	F-2	C143	H-1	R35	F-2	U49	G-6
C36	F-2	C144	H-1	R36	F-2	U50	G-7
C37	F-2	C145	H-1	R37	F-2	U51	G-7
C38	F-2	C146	H-1	R38	F-2	U52	G-2
C39	F-2	C147	H-1	R39	F-2	U53	G-2
C40	F-2	C148	H-1	R40	F-2	Y1	F-1
C41	F-3	C149	H-1	R41	F-2	Y2	D-5
C42	F-3	C150	H-1	R42	F-2		
C43	F-3	C151	H-1	R43	F-2		
C44	F-3	C152	H-1	R44	F-2		
C45	F-3	C153	H-1	R45	F-2		
C46	F-4	C154	H-1	R46	F-2		
C47	F-4	C155	H-1	R47	F-2		
C48	F-4	C156	H-1	R48	F-2		
C49	F-4	C157	H-1	R49	F-2		
C50	F-4	C158	H-1	R50	F-2		
C51	F-4	C159	H-1	R51	F-2		
C52	F-4	C160	H-1	R52	F-2		
C53	F-4	C161	H-1	R53	F-2		
C54	F-4	C162	H-1	R54	F-2		
C55	F-4	C163	H-1	R55	F-2		
C56	F-4	C164	H-1	R56	F-2		
C57	F-4	C165	H-1	R57	F-2		
C58	F-4	C166	H-1	R58	F-2		
C59	F-4	C167	H-1	R59	F-2		
C60	F-4	C168	H-1	R60	F-2		
C61	F-4	C169	H-1	R61	F-2		
C62	F-4	C170	H-1	R62	F-2		
C63	F-4	C171	H-1	R63	F-2		
C64	F-4	C172	H-1	R64	F-2		
C65	F-4	C173	H-1	R65	F-2		
C66	F-4	C174	H-1	R66	F-2		
C67	F-4	C175	H-1	R67	F-2		
C68	F-4	C176	H-1	R68	F-2		
C69	F-4	C177	H-1	R69	F-2		
C70	F-4	C178	H-1	R70	F-2		
C71	F-4	C179	H-1	R71	F-2		
C72	F-4	C180	H-1	R72	F-2		
C73	F-4	C181	H-1	R73	F-2		
C74	F-4	C182	H-1	R74	F-2		
C75	F-4	C183	H-1	R75	F-2		
C76	F-4	C184	H-1	R76	F-2		
C77	F-4	C185	H-1	R77	F-2		
C78	F-4	C186	H-1	R78	F-2		
C79	F-4	C187	H-1	R79	F-2		
C80	F-4	C188	H-1	R80	F-2		
C81	F-4	C189	H-1	R81	F-2		
C82	F-4	C190	H-1	R82	F-2		
C83	F-4	C191	H-1	R83	F-2		
C84	F-4	C192	H-1	R84	F-2		
C85	F-4	C193	H-1	R85	F-2		
C86	F-4	C194	H-1	R86	F-2		
C87	F-4	C195	H-1	R87	F-2		
C88	F-4	C196	H-1	R88	F-2		
C89	F-4	C197	H-1	R89	F-2		
C90	F-4	C198	H-1	R90	F-2		
C91	F-4	C199	H-1	R91	F-2		
C92	F-4	C200	H-1	R92	F-2		
C93	F-4	C201	H-1	R93	F-2		
C94	F-4	C202	H-1	R94	F-2		
C95	F-4	C203	H-1	R95	F-2		
C96	F-4	C204	H-1	R96	F-2		
C97	F-4	C205	H-1	R97	F-2		
C98	F-4	C206	H-1	R98	F-2		
C99	F-4	C207	H-1	R99	F-2		
C100	F-4	C208	H-1	R100	F-2		
C101	F-4	C209	H-1	R101	F-2		
C102	F-4	C210	H-1	R102	F-2		
C103	F-4	C211	H-1	R103	F-2		
C104	F-4	C212	H-1	R104	F-2		
C105	F-4	C213	H-1	R105	F-2		
C106	F-4	C214	H-1	R106	F-2		
C107	F-4	C215	H-1	R107	F-2		
C108	F-4	C216	H-1	R108	F-2		
C109	F-4	C217	H-1	R109	F-2		
C110	F-4	C218	H-1	R110	F-2		
C111	F-4	C219	H-1	R111	F-2		
C112	F-4	C220	H-1	R112	F-2		
C113	F-4	C221	H-1	R113	F-2		
C114	F-4	C222	H-1	R114	F-2		
C115	F-4	C223	H-1	R115	F-2		
C116	F-4	C224	H-1	R116	F-2		
C117	F-4	C225	H-1	R117	F-2		
C118	F-4	C226	H-1	R118	F-2		
C119	F-4	C227	H-1	R119	F-2		
C120	F-4	C228	H-1	R120	F-2		
C121	F-4	C229	H-1	R121	F-2		
C122	F-4	C230	H-1	R122	F-2		
C123	F-4	C231	H-1	R123	F-2		
C124	F-4	C232	H-1	R124	F-2		
C125	F-4	C233	H-1	R125	F-2		
C126	F-4	C234	H-1	R126	F-2		
C127	F-4	C235	H-1	R127	F-2		
C128	F-4	C236	H-1	R128	F-2		
C129	F-4	C237	H-1	R129	F-2		
C130	F-4	C238	H-1	R130	F-2		
C131	F-4	C239	H-1	R131	F-2		
C132	F-4	C240	H-1	R132	F-2		
C133	F-4	C241	H-1	R133	F-2		
C134	F-4	C242	H-1	R134	F-2		
C135	F-4	C243	H-1	R135	F-2		
C136	F-4	C244	H-1	R136	F-2		
C137	F-4	C245	H-1	R137	F-2		
C138	F-4	C246	H-1	R138	F-2		
C139	F-4	C247	H-1	R139	F-2		
C140	F-4	C248	H-1	R140	F-2		
C141	F-4	C249	H-1	R141	F-2		
C142	F-4	C250	H-1	R142	F-2		
C143	F-4	C251	H-1	R143	F-2		
C144	F-4	C252	H-1	R144	F-2		
C145	F-4	C253	H-1	R145	F-2		
C146	F-4	C254	H-1	R146	F-2		
C147	F-4	C255	H-1	R147	F-2		
C148	F-4	C256	H-1	R148	F-2		
C149	F-4	C257	H-1	R149	F-2		
C150	F-4	C258	H-1	R150	F-2		
C151	F-4	C259	H-1	R151	F-2		
C152	F-4	C260	H-1	R152	F-2		
C153	F-4	C261	H-1	R153	F-2		
C154	F-4	C262	H-1	R154	F-2		
C155	F-4	C263	H-1	R155	F-2		
C156	F-4	C264	H-1	R156	F-2		
C157	F-4	C265	H-1	R157	F-2		
C158	F-4	C266	H-1	R158	F-2		
C159	F-4	C267	H-1	R159	F-2		
C160	F-4	C268	H-1	R160	F-2		
C161	F-4	C269	H-1	R161	F-2		
C162	F-4	C270	H-1	R162	F-2		
C163	F-4	C271	H-1	R163	F-2		
C164	F-4	C272	H-1	R164	F-2		
C165	F-4	C273	H-1	R165	F-2		
C166	F-4	C274	H-1	R166	F-2		
C167	F-4	C275	H-1	R167	F-2		
C168	F-4	C276	H-1	R168	F-2		
C169	F-4	C277	H-1	R169	F-2		
C170	F-4	C278	H-1	R170	F-2		
C171	F-4	C279	H-1	R171	F-2		
C172	F-4	C280	H-1	R172	F-2		
C173	F-4	C281	H-1	R173	F-2		
C174	F-4	C282	H-1	R174	F-2		
C175	F-4	C283	H-1	R175	F-2		
C176	F-4	C284	H-1	R176	F-2		
C177	F-4	C285	H-1	R177	F-2		
C178	F-4	C286	H-1	R178	F-2		
C179	F-4	C287	H-1	R179	F-2		
C180	F-4	C288	H-1	R180	F-2		
C181	F-4	C289	H-1	R181	F-2		
C182	F-4	C290	H-1	R182	F-2		
C183	F-4	C291	H-1	R183	F-2		
C184	F-4	C292	H-1	R184	F-2		
C185	F-4	C293	H-1	R185	F-2		
C186	F-4	C294	H-1	R186	F-2		
C187	F-4	C295	H-1	R187	F-2		
C188	F-4	C296	H-1	R188	F-2		
C189	F-4	C297	H-1	R189	F-2		
C190	F-4	C298	H-1	R190	F-2		
C191	F-4	C299	H-1	R191	F-2		
C192	F-4	C300	H-1	R192	F-2		

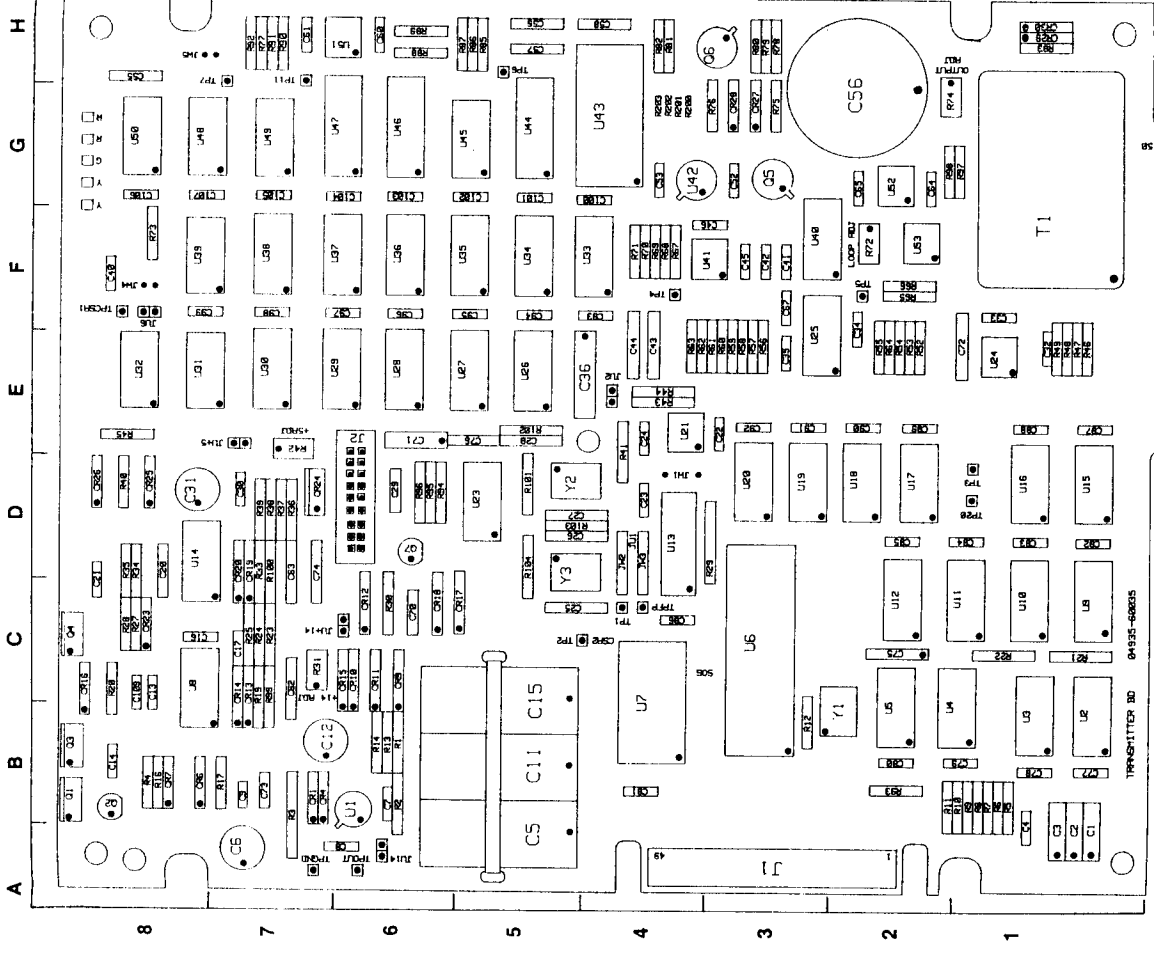

04935-60035
 TK8-88 4935_35C
 REV A-2822-38

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	A-1	R41	E-4	U15	D-1		
C2	A-1	R42	E-4	U17	D-2		
C3	A-1	R43	E-4	U18	D-2		
C4	A-1	R44	E-4	U19	D-3		
C5	A-3	R45	E-8	U20	D-3		
C6	A-7	R46	E-1	U21	D-5		
C7	A-6	R47	E-1	U24	E-1		
C8	B-1	R48	E-1	U25	F-3		
C9	B-5	R49	E-1	U26	E-3		
C10	B-5	R50	E-2	U28	E-3		
C11	B-5	R51	E-2	U29	E-6		
C12	B-5	R52	E-2	U30	E-7		
C13	B-5	R53	E-2	U32	E-8		
C14	B-8	R54	E-3	U33	E-4		
C15	C-5	R55	E-3	U35	F-4		
C16	C-5	R56	E-3	U36	F-6		
C17	C-5	R57	E-3	U37	F-6		
C18	C-7	R58	E-3	U38	G-2		
C19	C-7	R59	E-3	U39	G-2		
C20	C-8	R60	E-3	U40	G-2		
C21	C-8	R61	E-3	U41	F-4		
C22	E-5	R62	E-3	U42	G-4		
C23	D-5	R63	E-3	U43	G-3		
C24	D-5	R64	E-3	U44	G-3		
C25	D-5	R65	E-3	U46	G-8		
C26	D-5	R66	E-2	U47	G-8		
C27	D-5	R67	F-2	U48	G-7		
C28	D-8	R68	F-2	U49	G-8		
C29	D-8	R69	F-2	U50	G-2		
C30	D-7	R70	F-2	U53	F-2		
C31	D-7	R71	F-2	Y1	D-1		
C32	F-1	R72	F-2	Y2	D-1		
C33	E-3	R73	F-8	Y3	D-1		
C34	E-3	R74	H-5				
C35	E-3	R75	H-4				
C36	F-3	R76	H-4				
C37	F-3	R77	H-7				
C38	E-4	R78	H-3				
C39	E-4	R79	H-3				
C40	E-4	R80	H-4				
C41	E-4	R81	H-4				
C42	E-4	R82	H-4				
C43	E-4	R83	H-4				
C44	E-4	R84	H-4				
C45	E-4	R85	H-4				
C46	E-4	R86	H-4				
C47	E-4	R87	H-4				
C48	E-4	R88	H-4				
C49	E-4	R89	H-4				
C50	E-4	R90	H-4				
C51	E-4	R91	H-4				
C52	E-4	R92	H-4				
C53	E-4	R93	H-4				
C54	E-4	R94	H-4				
C55	E-4	R95	H-4				
C56	E-4	R96	H-4				
C57	E-4	R97	H-4				
C58	E-4	R98	H-4				
C59	E-4	R99	H-4				
C60	E-4	R100	H-4				
C61	E-4	R101	H-4				
C62	E-4	R102	H-4				
C63	E-4	R103	H-4				
C64	E-4	R104	H-4				
C65	E-4	R105	H-4				
C66	E-4	R106	H-4				
C67	E-4	R107	H-4				
C68	E-4	R108	H-4				
C69	E-4	R109	H-4				
C70	E-4	R110	H-4				
C71	E-4	R111	H-4				
C72	E-4	R112	H-4				
C73	E-4	R113	H-4				
C74	E-4	R114	H-4				
C75	E-4	R115	H-4				
C76	E-4	R116	H-4				
C77	E-4	R117	H-4				
C78	E-4	R118	H-4				
C79	E-4	R119	H-4				
C80	E-4	R120	H-4				
C81	E-4	R121	H-4				
C82	E-4	R122	H-4				
C83	E-4	R123	H-4				
C84	E-4	R124	H-4				
C85	E-4	R125	H-4				
C86	E-4	R126	H-4				
C87	E-4	R127	H-4				
C88	E-4	R128	H-4				
C89	E-4	R129	H-4				
C90	E-4	R130	H-4				
C91	E-4	R131	H-4				
C92	E-4	R132	H-4				
C93	E-4	R133	H-4				
C94	E-4	R134	H-4				
C95	E-4	R135	H-4				
C96	E-4	R136	H-4				
C97	E-4	R137	H-4				
C98	E-4	R138	H-4				
C99	E-4	R139	H-4				
C100	E-4	R140	H-4				
C101	E-4	R141	H-4				
C102	E-4	R142	H-4				
C103	E-4	R143	H-4				
C104	E-4	R144	H-4				
C105	E-4	R145	H-4				
C106	E-4	R146	H-4				
C107	E-4	R147	H-4				

Figure 8-35. A4 Transmitter Board Component Locator



04935-60035 TRKB-88 4935_35C
 REV A-2822-38

REF DESIG	GRND LOC	REF DESIG	GRND LOC	REF DESIG	GRND LOC	REF DESIG	GRND LOC
C1	A-1	R1	B-4	U15	D-1		
C2	A-1	R2	B-7	U16	D-1		
C3	A-1	R3	B-7	U17	D-2		
C4	A-3	R4	B-4	U18	D-2		
C5	A-3	R5	B-4	U19	D-3		
C6	A-7	R6	B-8	U20	D-3		
C7	A-6	R7	C-6	U21	E-4		
C8	A-6	R8	C-6	U22	E-4		
C9	B-5	R9	C-7	U23	D-5		
C10	B-5	R10	C-7	U24	D-5		
C11	B-7	R11	E-1	U25	E-5		
C12	B-7	R12	E-1	U26	E-5		
C13	C-8	R13	E-2	U27	E-5		
C14	C-8	R14	E-2	U28	E-6		
C15	C-5	R15	E-3	U29	E-6		
C16	C-7	R16	E-3	U30	E-6		
C17	C-7	R17	E-3	U31	F-5		
C18	C-8	R18	E-2	U32	F-5		
C19	C-8	R19	E-2	U33	F-5		
C20	C-8	R20	E-2	U34	F-5		
C21	C-8	R21	E-2	U35	F-5		
C22	C-8	R22	E-2	U36	F-5		
C23	C-8	R23	E-2	U37	F-5		
C24	C-8	R24	E-2	U38	F-1		
C25	E-4	R25	G-3	U39	F-1		
C26	D-5	R26	G-3	U40	F-3		
C27	D-5	R27	G-3	U41	F-4		
C28	D-5	R28	G-3	U42	F-4		
C29	D-5	R29	G-3	U43	G-4		
C30	D-5	R30	G-3	U44	G-4		
C31	D-5	R31	G-3	U45	G-5		
C32	F-1	R32	F-4	U46	G-5		
C33	F-1	R33	F-4	U47	G-5		
C34	F-1	R34	F-4	U48	G-5		
C35	F-1	R35	F-4	U49	G-5		
C36	F-1	R36	F-4	U50	G-8		
C37	F-1	R37	F-4	U51	G-8		
C38	F-1	R38	F-4	U52	G-8		
C39	F-1	R39	F-4	U53	G-8		
C40	F-1	R40	F-4	U54	G-8		
C41	F-3	R41	F-8	U55	G-2		
C42	F-3	R42	F-8	U56	G-2		
C43	F-3	R43	F-8	U57	G-2		
C44	F-3	R44	F-8	U58	G-2		
C45	F-3	R45	F-8	U59	G-2		
C46	F-4	R46	F-8	U60	G-2		
C47	F-4	R47	F-8	U61	G-2		
C48	F-4	R48	F-8	U62	G-2		
C49	F-4	R49	F-8	U63	G-2		
C50	F-4	R50	F-8	U64	G-2		
C51	F-4	R51	F-8	U65	G-2		
C52	F-4	R52	F-8	U66	G-2		
C53	F-4	R53	F-8	U67	G-2		
C54	F-4	R54	F-8	U68	G-2		
C55	F-4	R55	F-8	U69	G-2		
C56	F-4	R56	F-8	U70	G-2		
C57	F-4	R57	F-8	U71	G-2		
C58	F-4	R58	F-8	U72	G-2		
C59	F-4	R59	F-8	U73	G-2		
C60	F-4	R60	F-8	U74	G-2		
C61	F-4	R61	F-8	U75	G-2		
C62	F-4	R62	F-8	U76	G-2		
C63	F-4	R63	F-8	U77	G-2		
C64	F-4	R64	F-8	U78	G-2		
C65	F-4	R65	F-8	U79	G-2		
C66	F-4	R66	F-8	U80	G-2		
C67	F-4	R67	F-8	U81	G-2		
C68	F-4	R68	F-8	U82	G-2		
C69	F-4	R69	F-8	U83	G-2		
C70	F-4	R70	F-8	U84	G-2		
C71	F-4	R71	F-8	U85	G-2		
C72	F-4	R72	F-8	U86	G-2		
C73	F-4	R73	F-8	U87	G-2		
C74	F-4	R74	F-8	U88	G-2		
C75	F-4	R75	F-8	U89	G-2		
C76	F-4	R76	F-8	U90	G-2		
C77	F-4	R77	F-8	U91	G-2		
C78	F-4	R78	F-8	U92	G-2		
C79	F-4	R79	F-8	U93	G-2		
C80	F-4	R80	F-8	U94	G-2		
C81	F-4	R81	F-8	U95	G-2		
C82	F-4	R82	F-8	U96	G-2		
C83	F-4	R83	F-8	U97	G-2		
C84	F-4	R84	F-8	U98	G-2		
C85	F-4	R85	F-8	U99	G-2		
C86	F-4	R86	F-8	U100	G-2		
C87	F-4	R87	F-8	U101	G-2		
C88	F-4	R88	F-8	U102	G-2		
C89	F-4	R89	F-8	U103	G-2		
C90	F-4	R90	F-8	U104	G-2		
C91	F-4	R91	F-8	U105	G-2		
C92	F-4	R92	F-8	U106	G-2		
C93	F-4	R93	F-8	U107	G-2		
C94	F-4	R94	F-8	U108	G-2		
C95	F-4	R95	F-8	U109	G-2		
C96	F-4	R96	F-8	U110	G-2		
C97	F-4	R97	F-8	U111	G-2		
C98	F-4	R98	F-8	U112	G-2		
C99	F-4	R99	F-8	U113	G-2		
C100	F-4	R100	F-8	U114	G-2		
C101	F-4	R101	F-8	U115	G-2		
C102	F-4	R102	F-8	U116	G-2		
C103	F-4	R103	F-8	U117	G-2		
C104	F-4	R104	F-8	U118	G-2		
C105	F-4	R105	F-8	U119	G-2		
C106	F-4	R106	F-8	U120	G-2		
C107	F-4	R107	F-8	U121	G-2		
C108	F-4	R108	F-8	U122	G-2		
C109	F-4	R109	F-8	U123	G-2		
C110	F-4	R110	F-8	U124	G-2		
C111	F-4	R111	F-8	U125	G-2		
C112	F-4	R112	F-8	U126	G-2		
C113	F-4	R113	F-8	U127	G-2		
C114	F-4	R114	F-8	U128	G-2		
C115	F-4	R115	F-8	U129	G-2		
C116	F-4	R116	F-8	U130	G-2		
C117	F-4	R117	F-8	U131	G-2		
C118	F-4	R118	F-8	U132	G-2		
C119	F-4	R119	F-8	U133	G-2		
C120	F-4	R120	F-8	U134	G-2		
C121	F-4	R121	F-8	U135	G-2		
C122	F-4	R122	F-8	U136	G-2		
C123	F-4	R123	F-8	U137	G-2		
C124	F-4	R124	F-8	U138	G-2		
C125	F-4	R125	F-8	U139	G-2		
C126	F-4	R126	F-8	U140	G-2		
C127	F-4	R127	F-8	U141	G-2		
C128	F-4	R128	F-8	U142	G-2		
C129	F-4	R129	F-8	U143	G-2		
C130	F-4	R130	F-8	U144	G-2		
C131	F-4	R131	F-8	U145	G-2		
C132	F-4	R132	F-8	U146	G-2		
C133	F-4	R133	F-8	U147	G-2		
C134	F-4	R134	F-8	U148	G-2		
C135	F-4	R135	F-8	U149	G-2		
C136	F-4	R136	F-8	U150	G-2		
C137	F-4	R137	F-8	U151	G-2		
C138	F-4	R138	F-8	U152	G-2		
C139	F-4	R139	F-8	U153	G-2		
C140	F-4	R140	F-8	U154	G-2		
C141	F-4	R141	F-8	U155	G-2		
C142	F-4	R142	F-8	U156	G-2		
C143	F-4	R143	F-8	U157	G-2		
C144	F-4	R144	F-8	U158	G-2		
C145	F-4	R145	F-8	U159	G-2		
C146	F-4	R146	F-8	U160	G-2		
C147	F-4	R147	F-8	U161	G-2		
C148	F-4	R148	F-8	U162	G-2		
C149	F-4	R149	F-8	U163	G-2		
C150	F-4	R150	F-8	U164	G-2		
C151	F-4	R151	F-8	U165	G-2		
C152	F-4	R152	F-8	U166	G-2		
C153	F-4	R153	F-8	U167	G-2		
C154	F-4	R154	F-8	U168	G-2		
C155	F-4	R155	F-8	U169	G-2		
C156	F-4	R156	F-8	U170	G-2		
C157	F-4	R157	F-8	U171	G-2		
C158	F-4	R158	F-8	U172	G-2		
C159	F-4	R159	F-8	U173	G-2		
C160	F-4	R160	F-8	U174	G-2		
C161	F-4	R161	F-8	U175	G-2		
C162	F-4	R162	F-8	U176	G-2		
C163	F-4	R163	F-8	U177	G-2		
C164	F-4	R164	F-8	U178	G-2		
C165	F-4	R165	F-8	U179	G-2		
C166	F-4	R166	F-8	U180	G-2		
C167	F-4	R167	F-8	U181	G-2		
C168	F-4	R168	F-8	U182	G-2		
C169	F-4	R169	F-8	U183	G-2		
C170	F-4	R170	F-8	U184	G-2		
C171	F-4	R171	F-8	U185	G-2		
C172	F-4	R172	F-8	U186	G-2		
C173	F-4	R173	F-8	U187	G-2		
C174	F-4	R174	F-8	U188	G-2		
C175	F-4	R175	F-8	U189	G-2		
C176	F-4	R176	F-8	U190	G-2		
C177	F-4	R177	F-8	U191	G-2		
C178	F-4	R178	F-8	U192	G-2		
C179	F-4	R179	F-8	U193	G-2		

P/O A4 (A14) TRANSMITTER BOARD ASSY (04935-

IMPULSE NC


TRUTH TABLE FOR U11

CE-14				FREQUENCY MEASUREMENT CONTROL
A3	A2	A1	A0	FUNCTION
1	X	X	X	FREQUENCY SELECT
0	X	X	X	1004 TONE SELECT
X	1	X	X	SET DROP
X	X	1	X	BEGIN
X	X	X	1	READ ENABLE/IMPED STATUS ENABLE
X	X	X	0	READ DISABLE/IMPED STATUS DISABLE

TRUTH TABLE FOR U12



CE-9				MISC CONTROL
A3	A2	A1	A0	FUNCTION
X	X	X	1	RESET IMPULSE NOISE LATCH
X	X	0	X	ENABLE OPTION SELECT BUFFER
X	X	1	X	DISABLE OPTION BUFFER
X	1	X	X	RESET OPEN (FREQ MEASUREMENT)
0	X	X	X	SELECT LEVEL TO COUNTER #1
1	X	X	X	SELECT EVENTS TO COUNTER #1


FROM A3 (A13)
RECEIVER ASSY

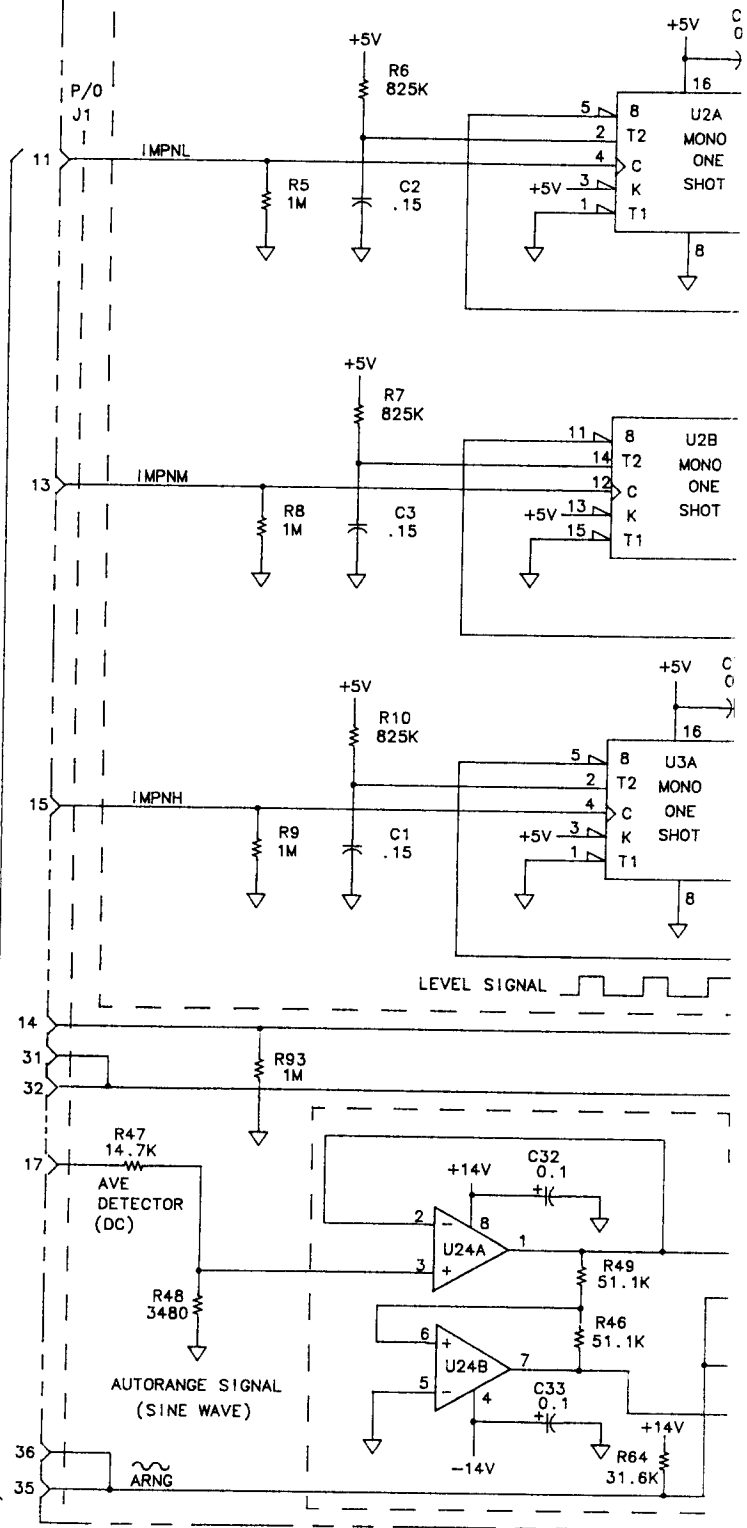

8-36 A

IMPULSE NOISE LATCHES

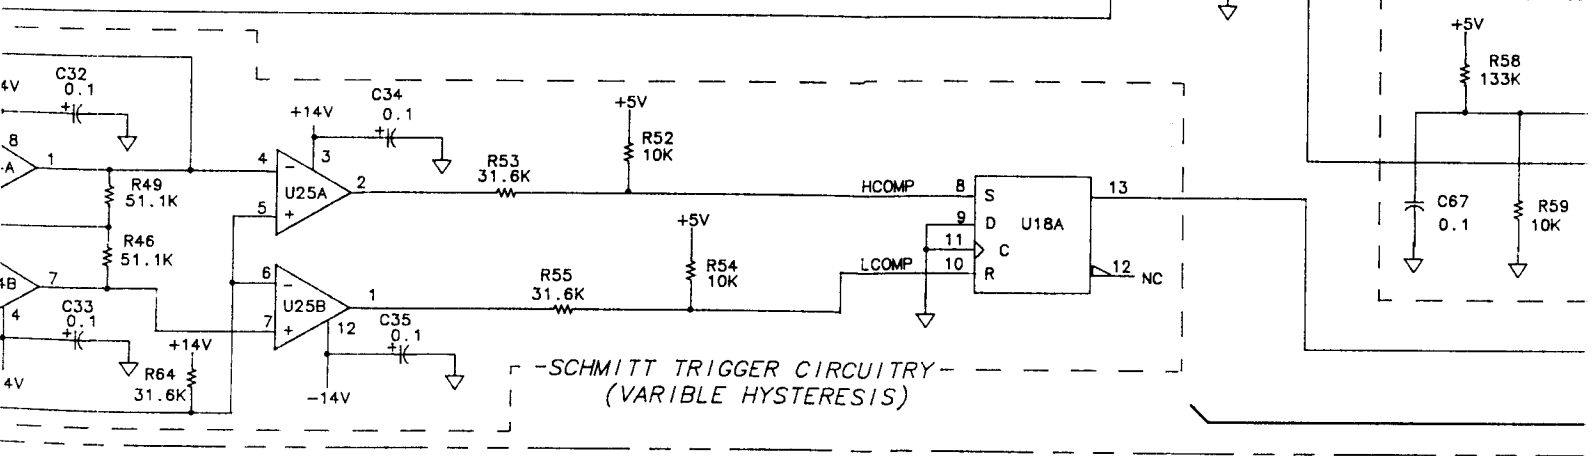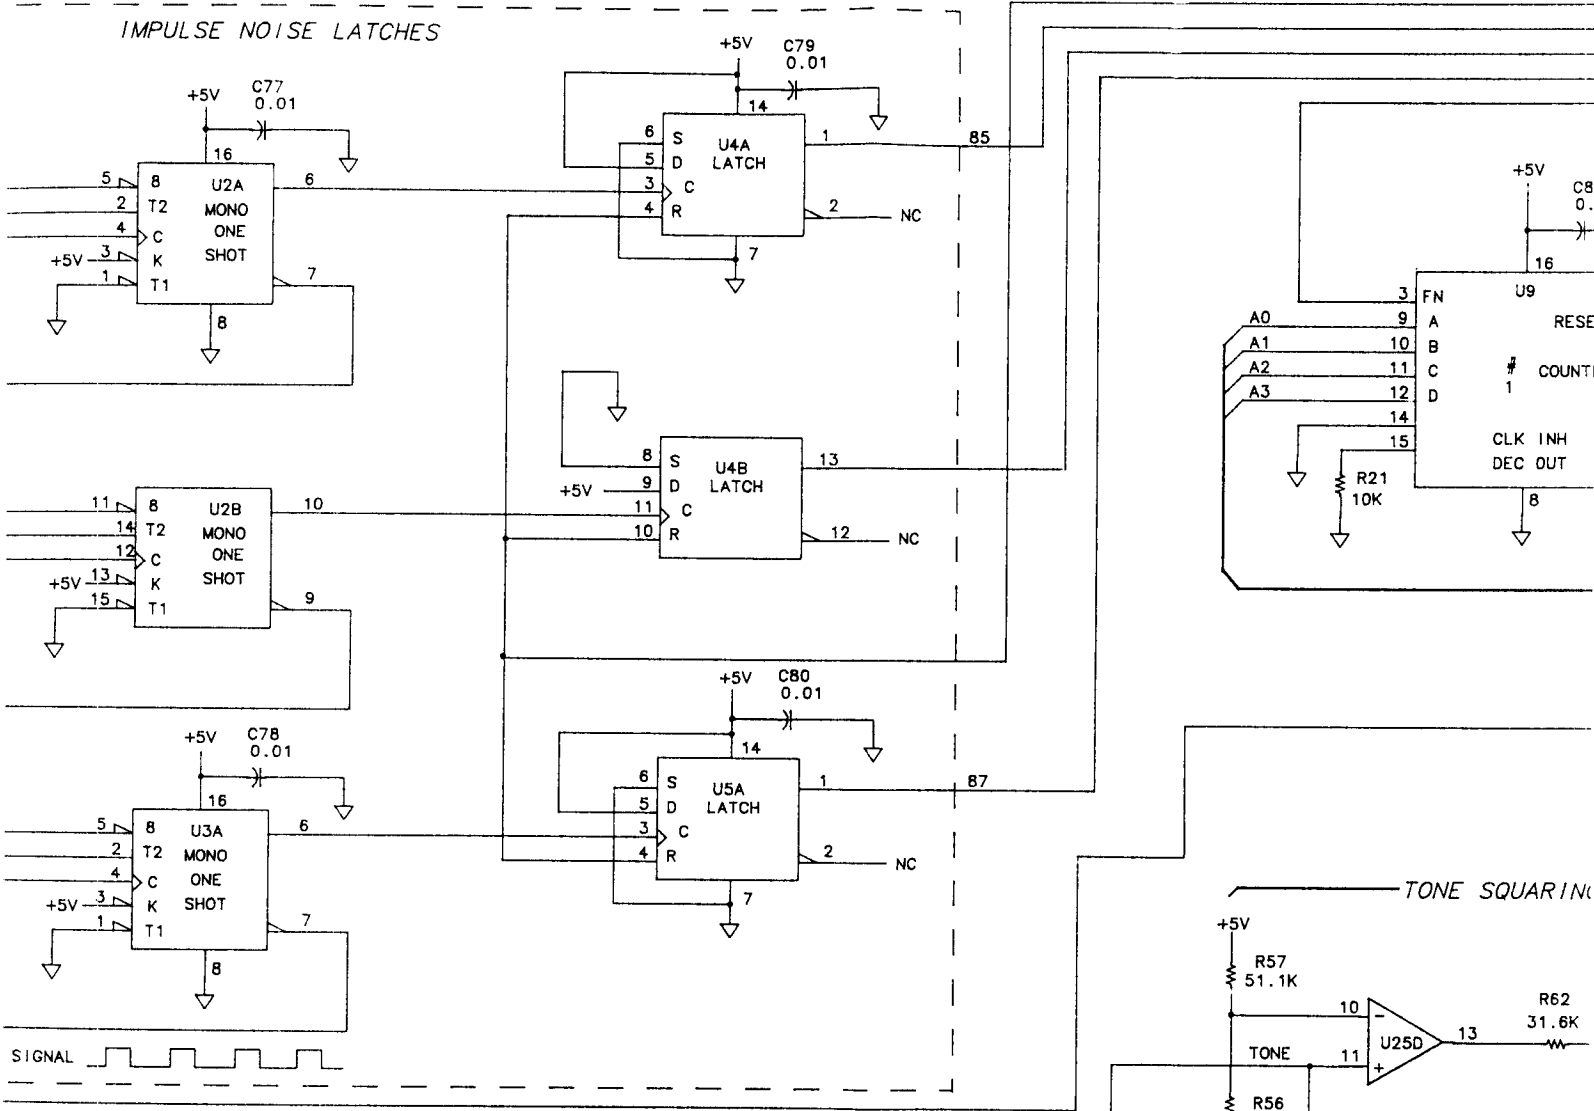

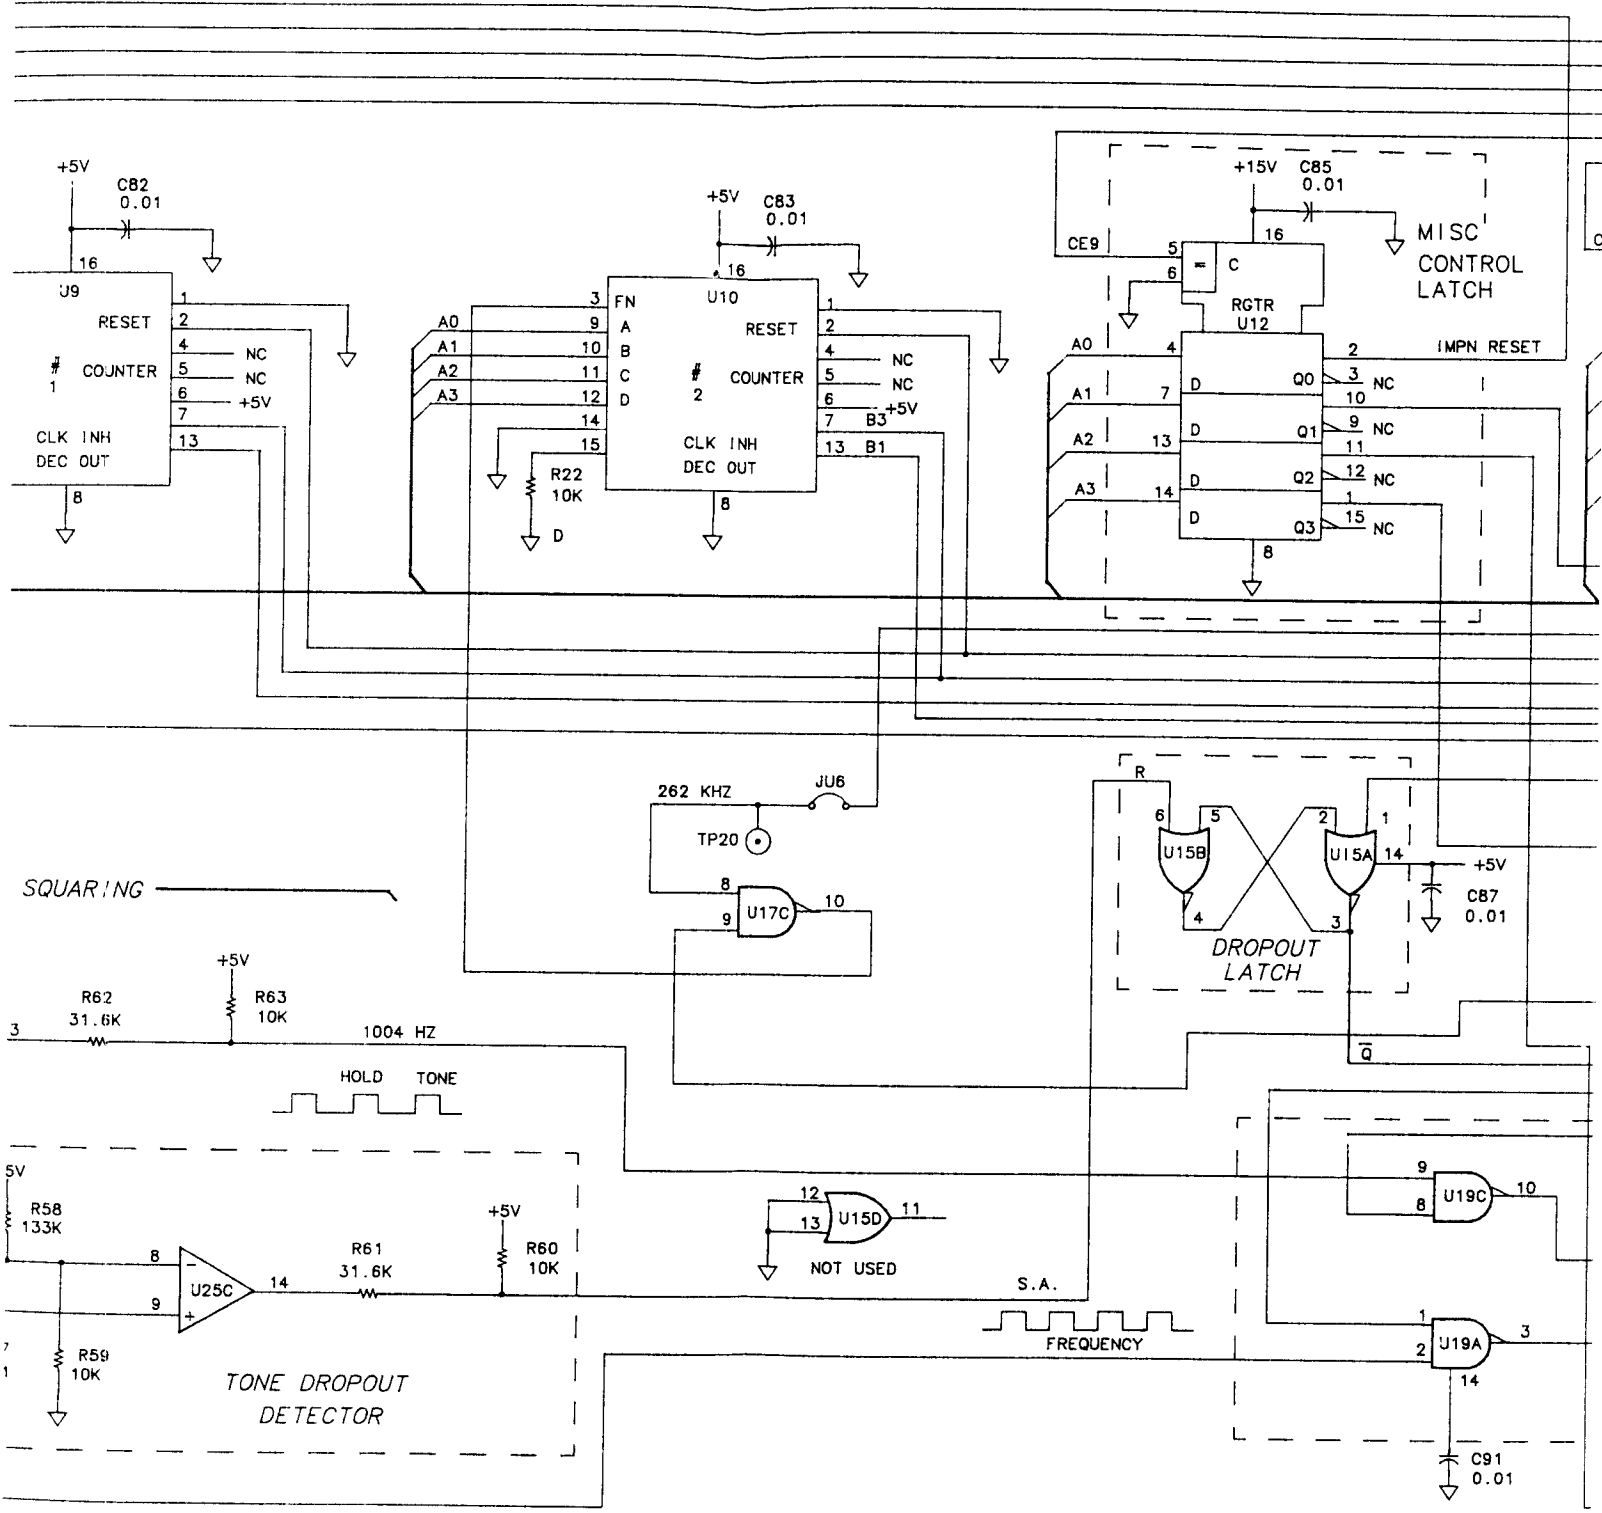

FREQUENCY/DROPOUT CIRCUITRY

8-36 C


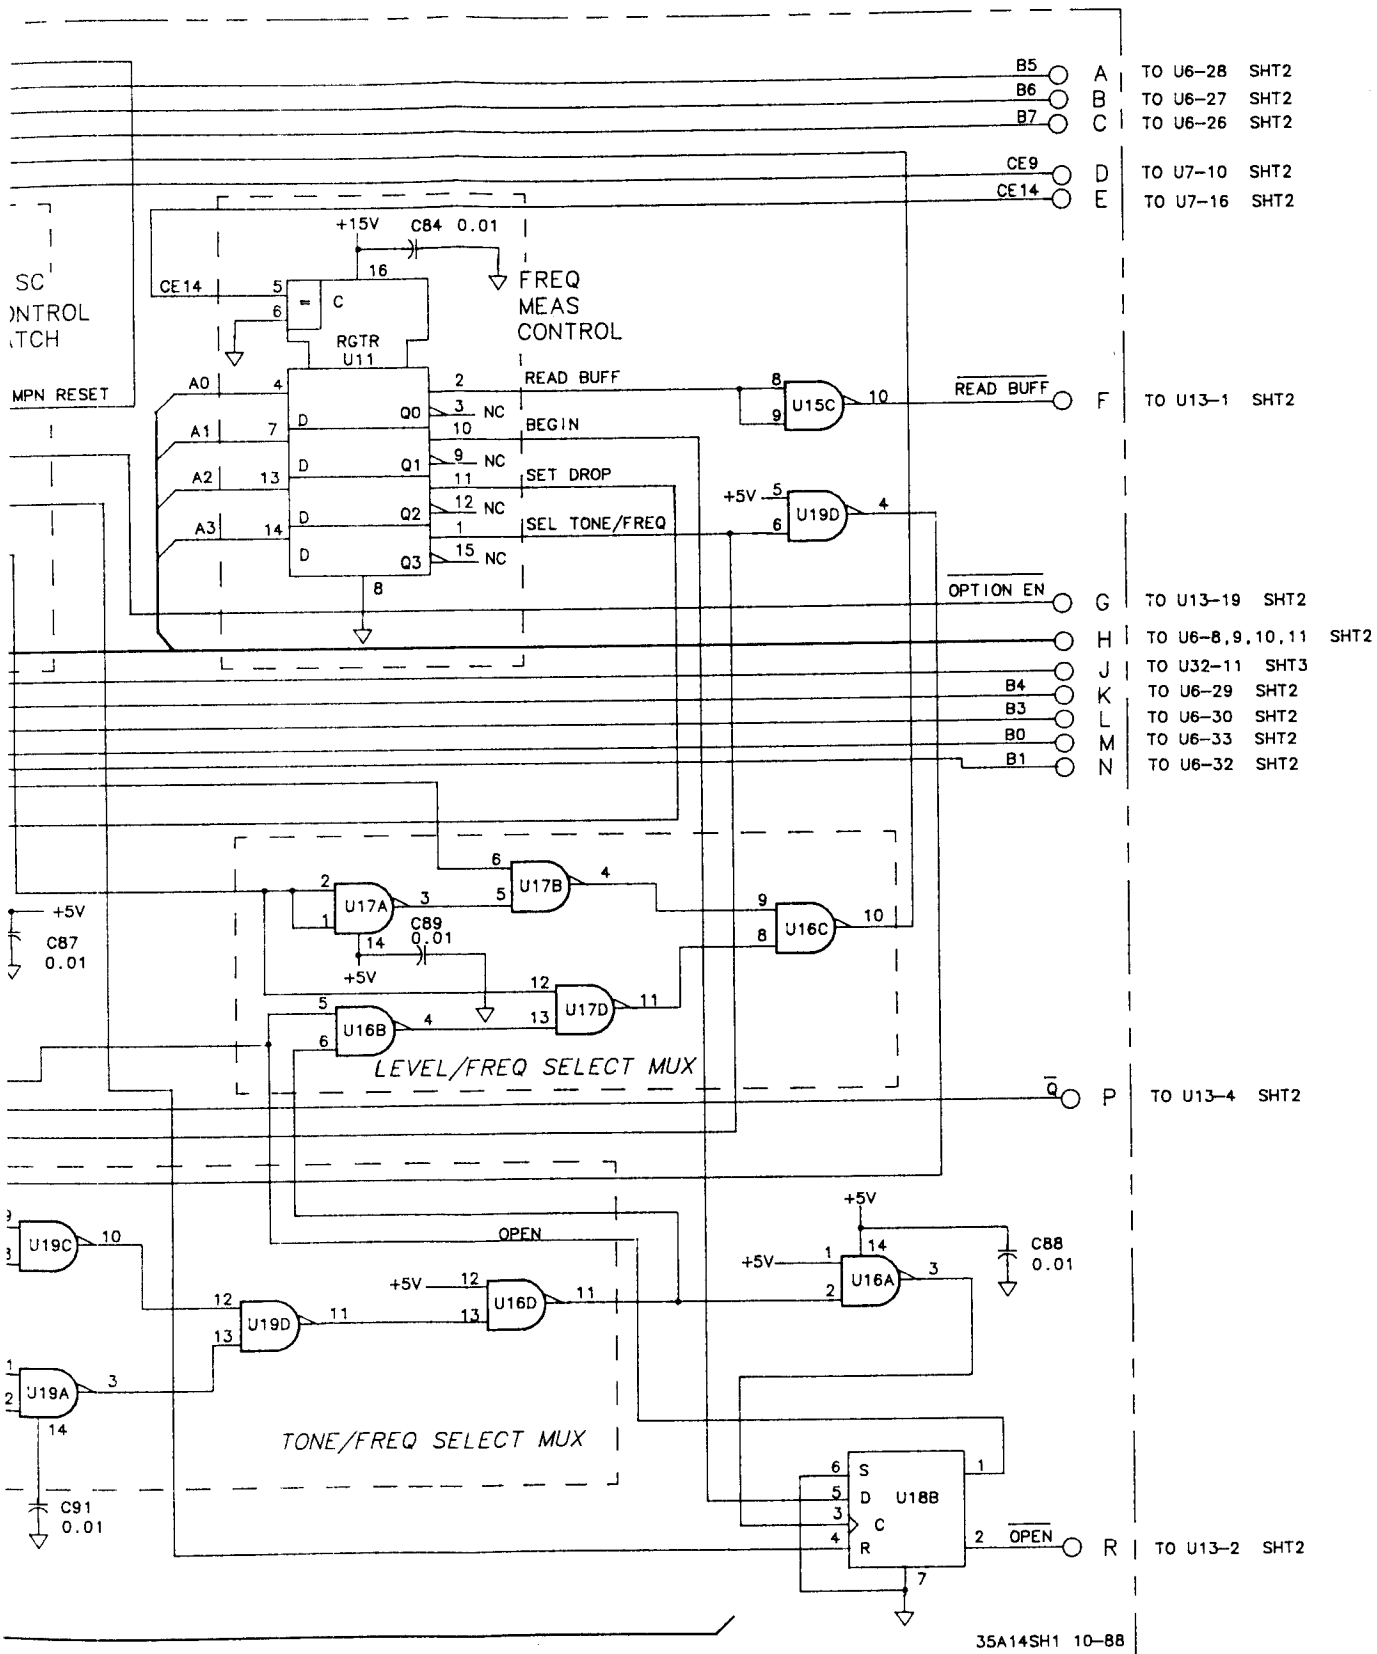


Figure 8-36.
A4 Transmitter Board Schematic Diagram (Sheet 1 of 5)
8-83

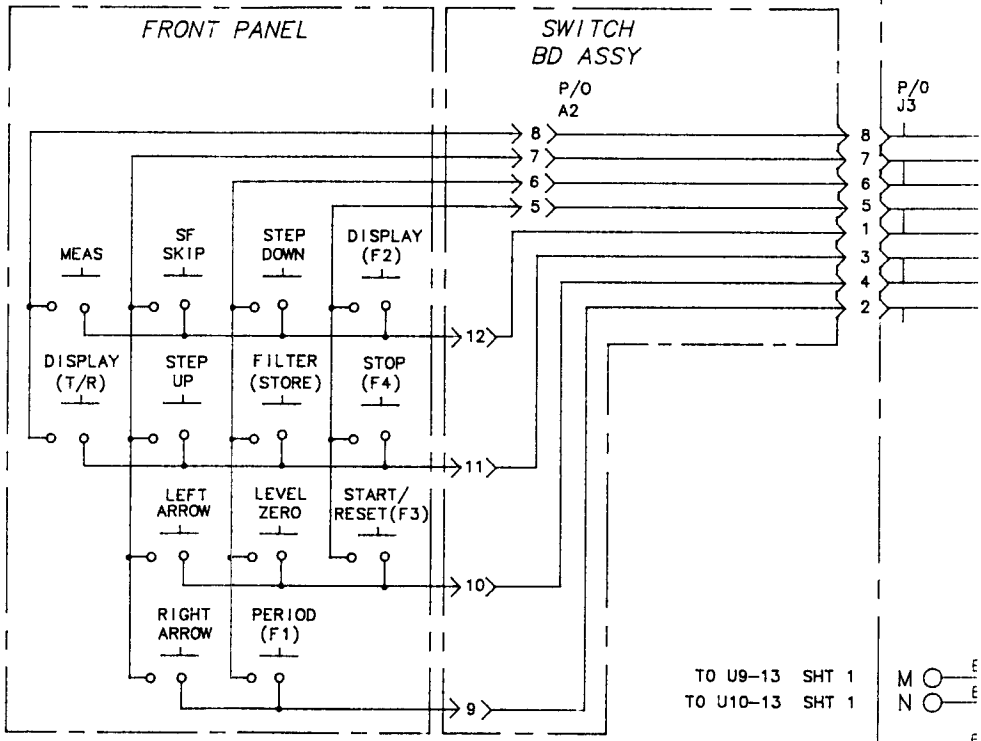

- TO U9-13 SHT 1 M ○ E
- TO U10-13 SHT 1 N ○ E

- TO U9-7 SHT 1 L ○ E
- TO U10-2 & U9-2 SHT 1 K ○ E
- TO U4A-1 SHT 1 A ○ E
- TO U4B-13 SHT 1 B ○ E
- TO U5A-1 SHT 1 C ○ E

- U11-5 SHT 1 E ○ C
- U12-5 SHT 1 D ○ C



- U12-10 SHT 1 G ○ F
- U15C-10 SHT 1 F ○ F

- U18B-2 SHT 1 R ○ C
- U15A-3 & U15B-5 SHT 1 P ○ P
- FROM A2 ASSY 10
- RX IMP 12


CIRCUIT APPLIES TO STANDARD UNITS ONLY.
 CIRCUIT APPLIES TO P/RR UNITS ONLY.

8-37 A

P/O A4 (A14) TRANSMITTER BOARD ASSEMBLY (04935-60034) REV A-2830-38

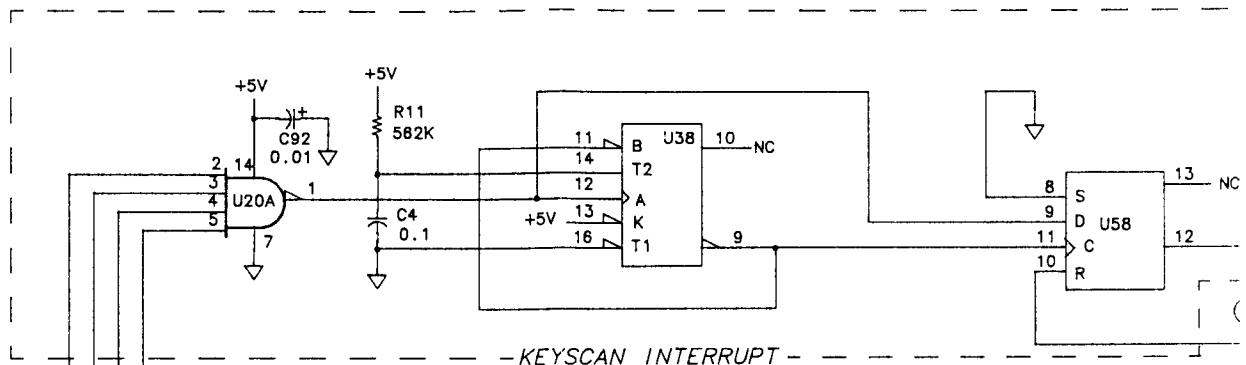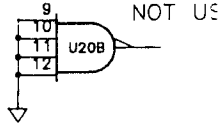

- KEYSKAN INTERRUPT -

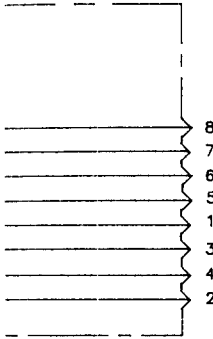


- TO U9-13 SHT 1
- TO U10-13 SHT 1
- TO U9-7 SHT 1
- U10-2 & U9-2 SHT 1
- TO U4A-1 SHT 1
- TO U4B-13 SHT 1
- TO U5A-1 SHT 1
- U11-5 SHT 1
- U12-5 SHT 1
- U12-10 SHT 1
- U15C-10 SHT 1
- U18B-2 SHT 1
- U13 & U15B-5 SHT 1
- FROM A2 ASSY
- RX IMP

- M ○ B0
- N ○ B1
- L ○ B3
- K ○ B4
- A ○ B5
- B ○ B6
- C ○ B7
- E ○ CE14
- D ○ CE9
- G ○ OPTION EN
- F ○ READ BUFF
- R ○ OPEN
- P ○ q
- P/O J3

8-37 B

NOT USED

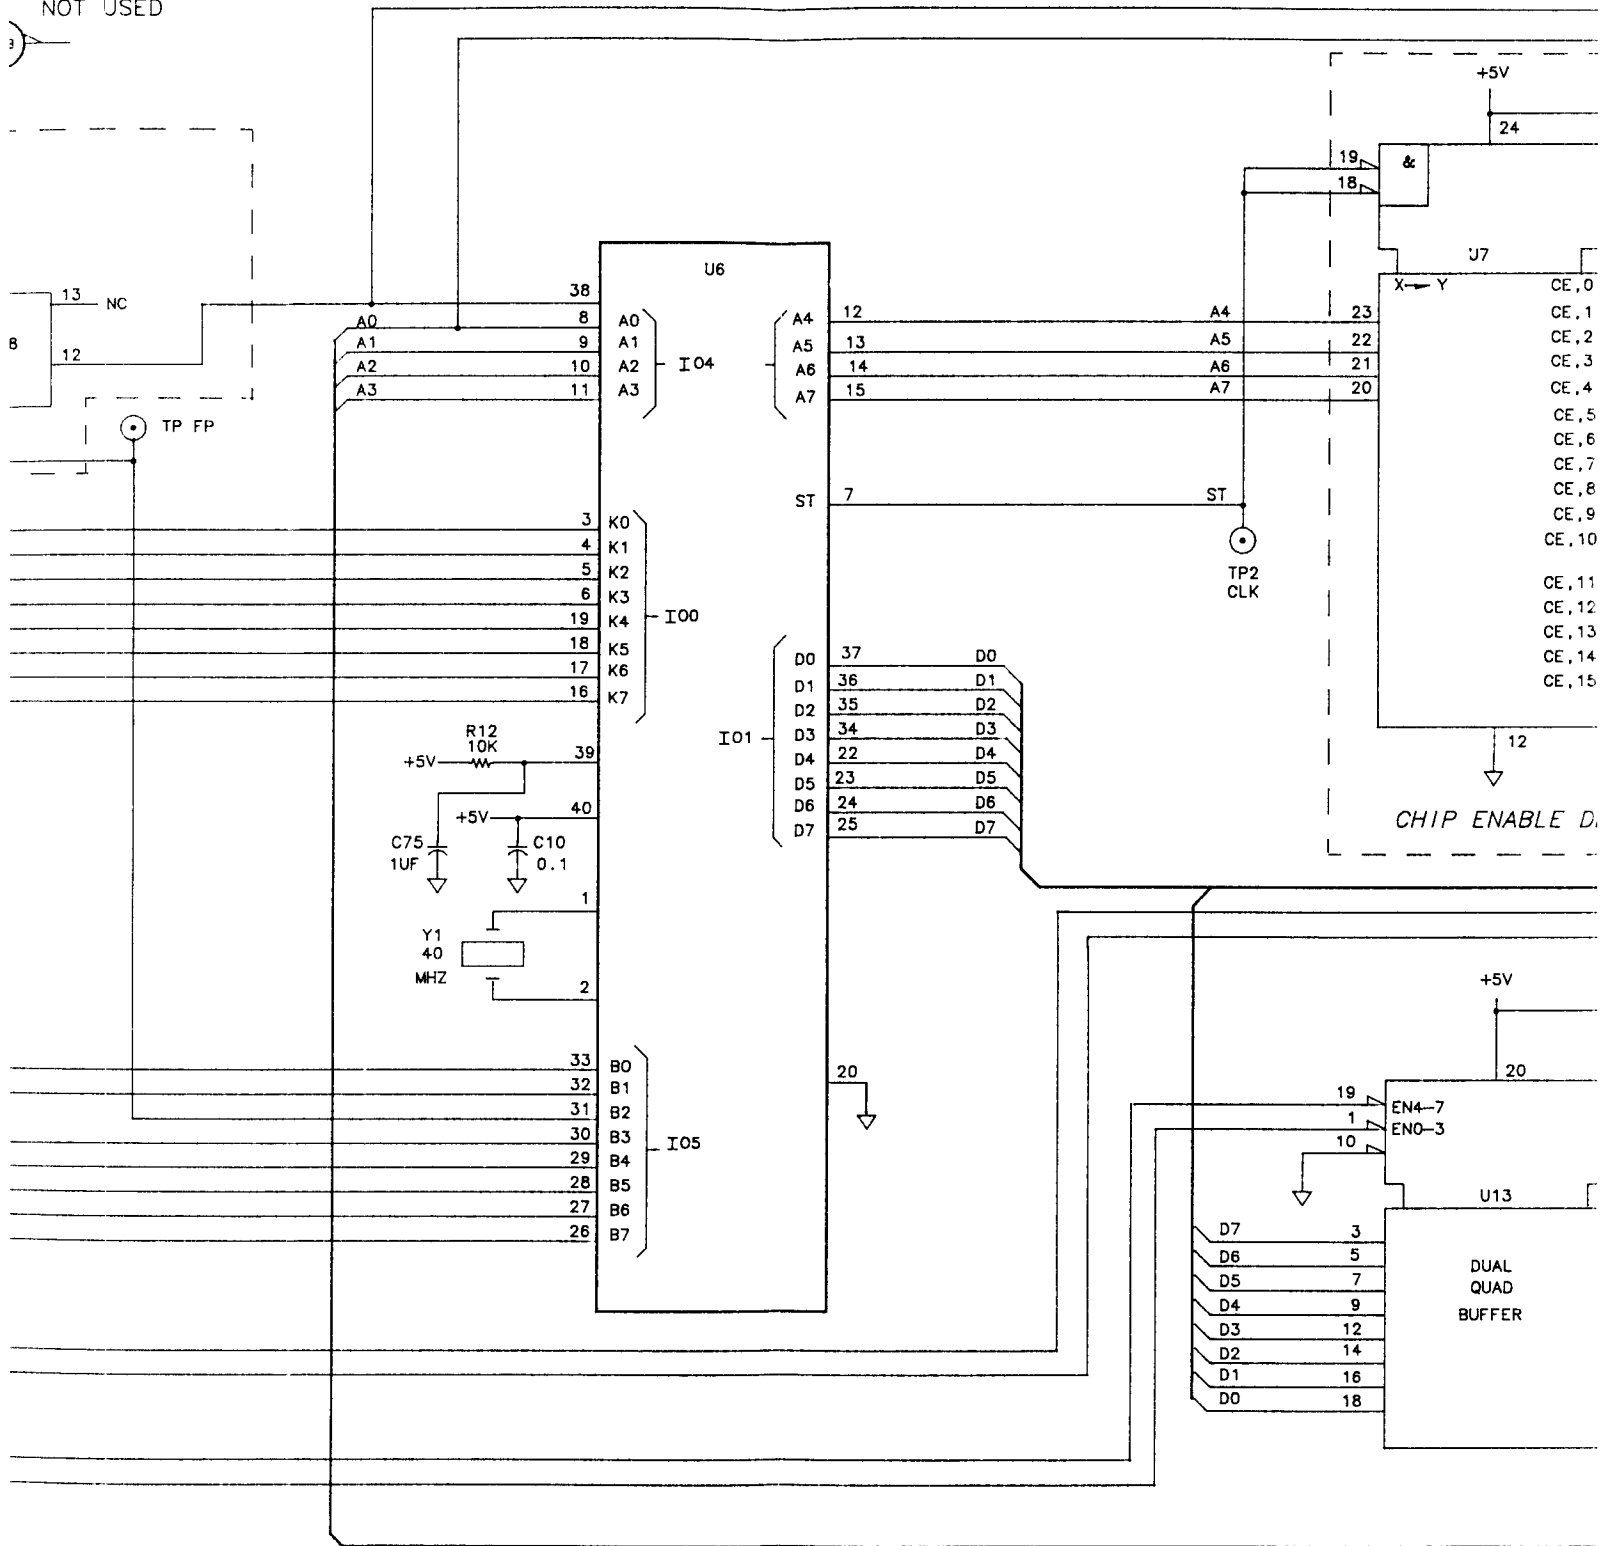

8-37C


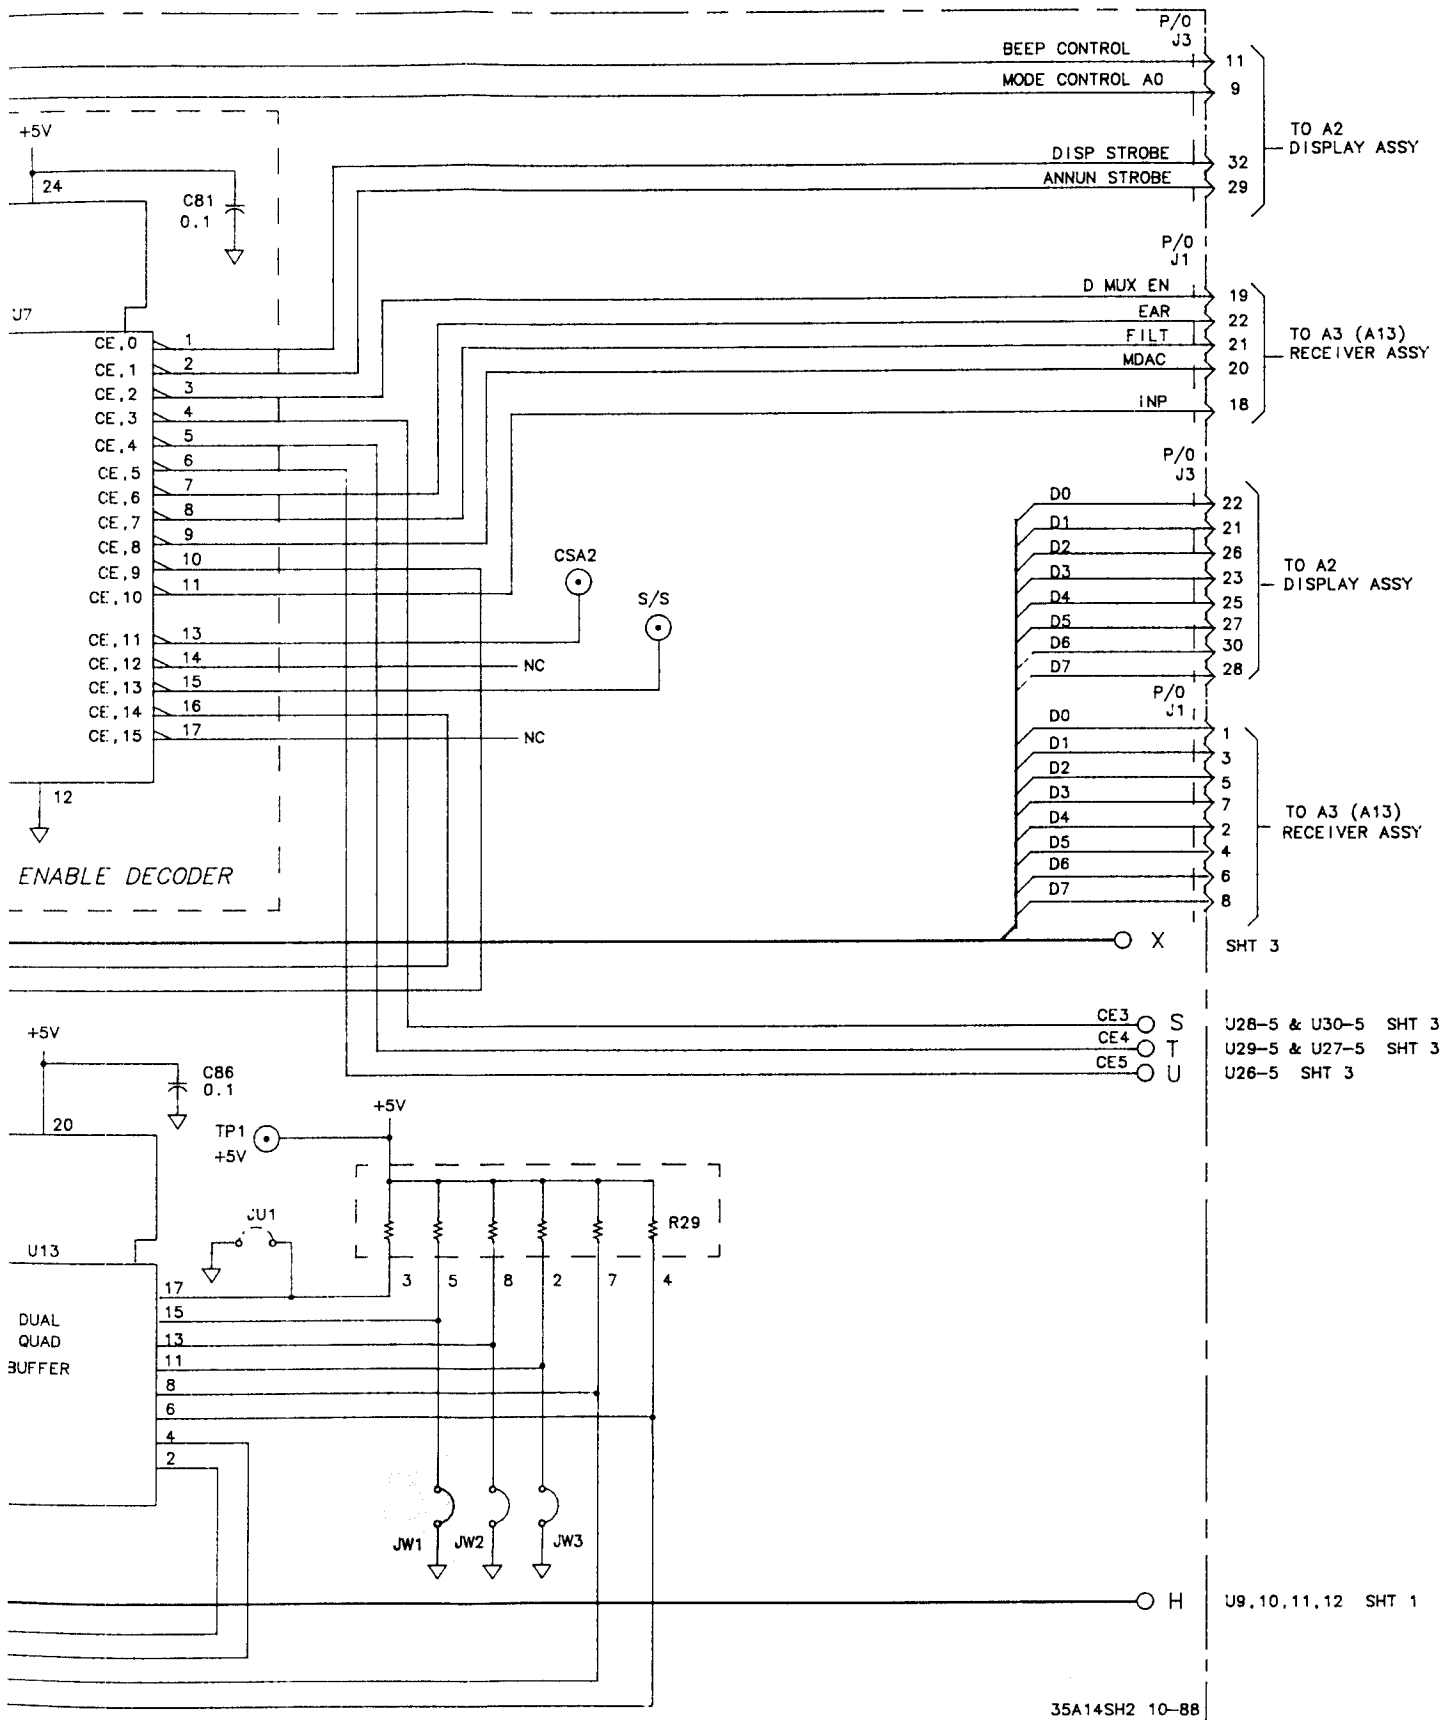


Figure 8-37.
A4 Transmitter Board Schematic Diagram (Sheet 2 of 5)
8-85

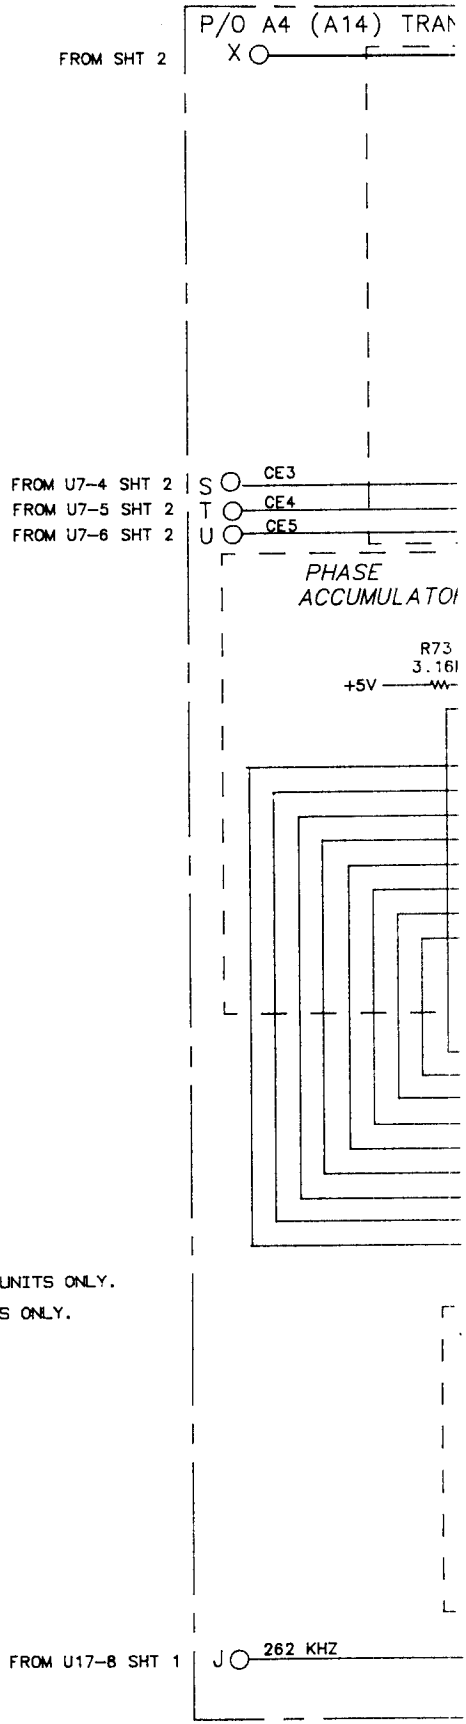


CIRCUIT APPLIES TO STANDARD UNITS ONLY.
 CIRCUIT APPLIES TO P/AR UNITS ONLY.

8-38 A

P/O A4 (A14) TRANSMITTER BOARD ASSY (04935-60034) REV A-2830-38

FROM SHT 2


X ○

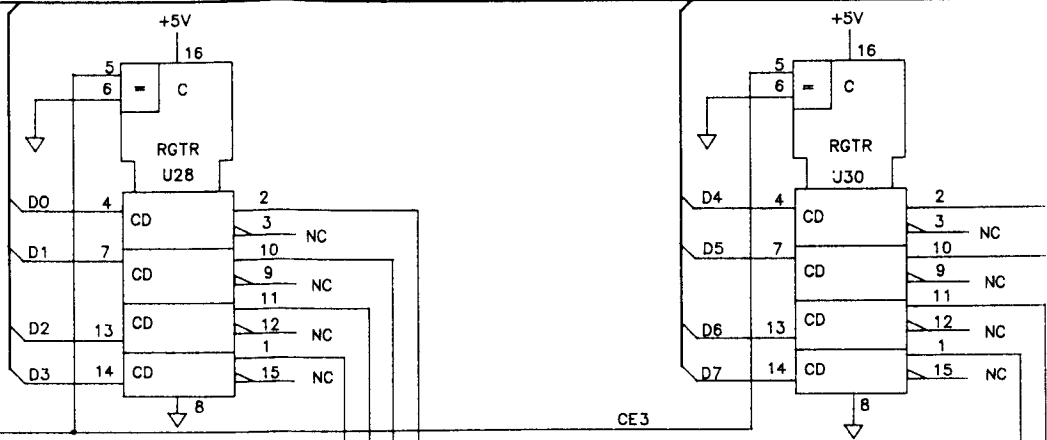



FROM U7-4 SHT 2
FROM U7-5 SHT 2
FROM U7-6 SHT 2

S ○ CE3
T ○ CE4
U ○ CE5

PHASE ACCUMULATOR

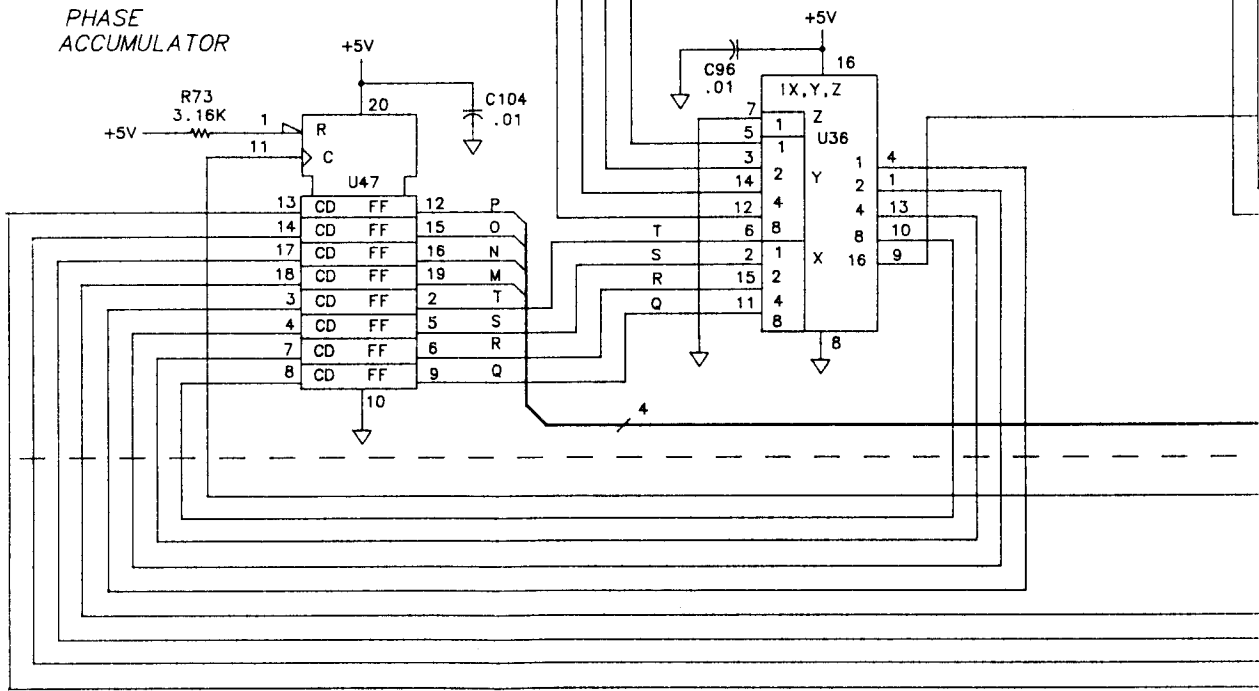

STANDARD UNITS ONLY.
/AR UNITS ONLY.

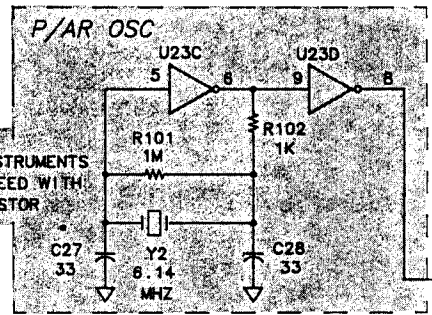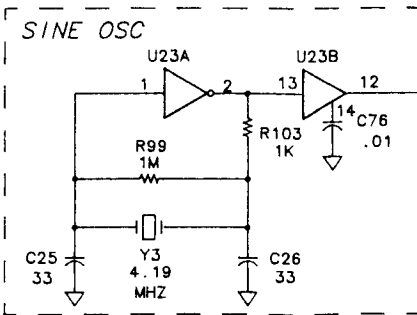


* IN N/G INSTRUMENTS
C27 REPLACED WITH
0 OHM RESISTOR


FROM U17-8 SHT 1

J ○ 262 KHZ

8-38-B

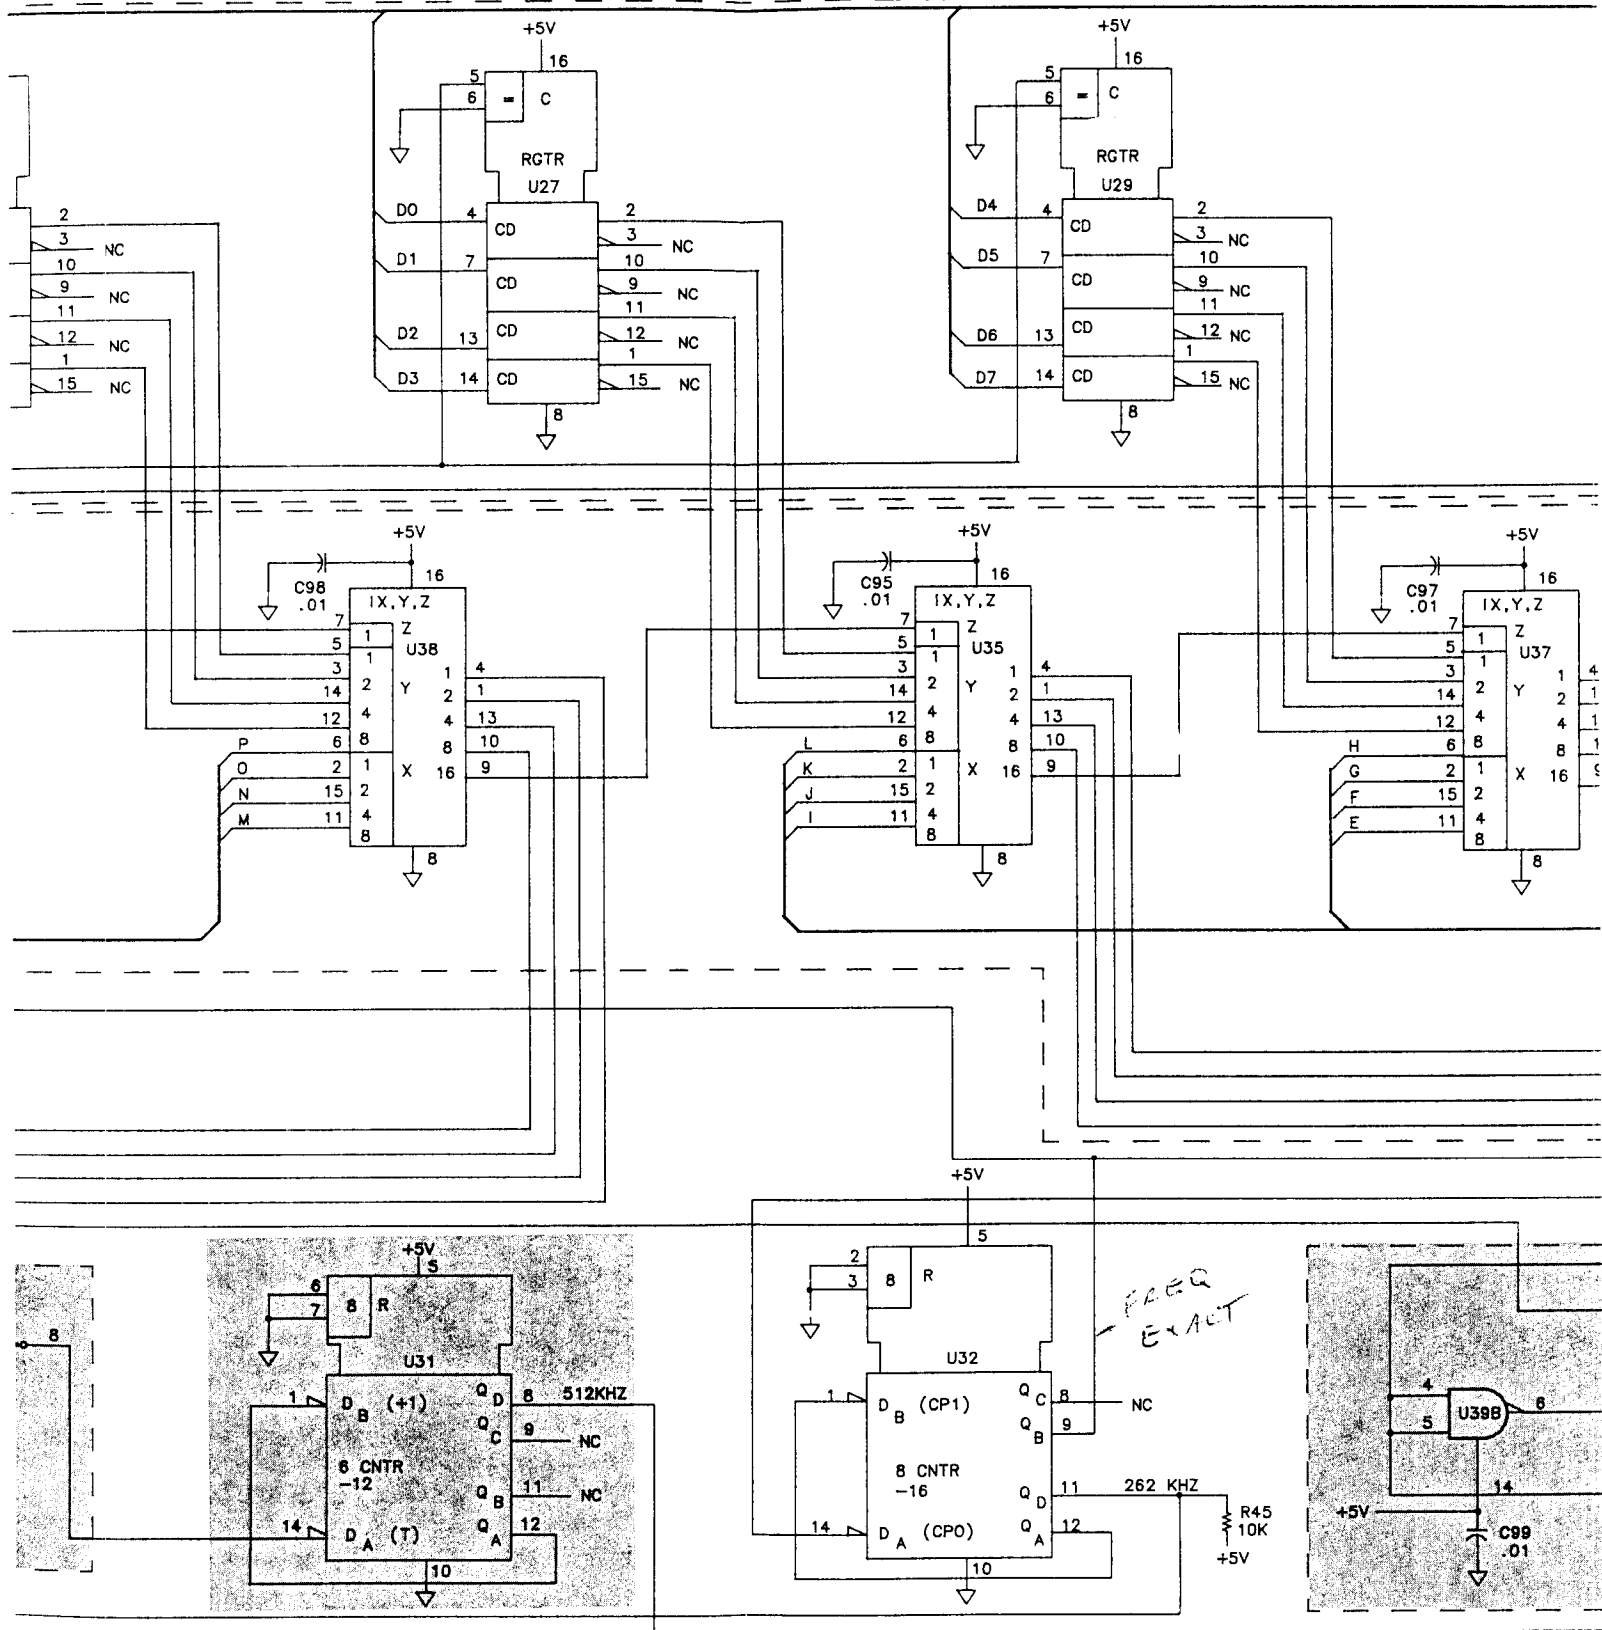


8-38 C

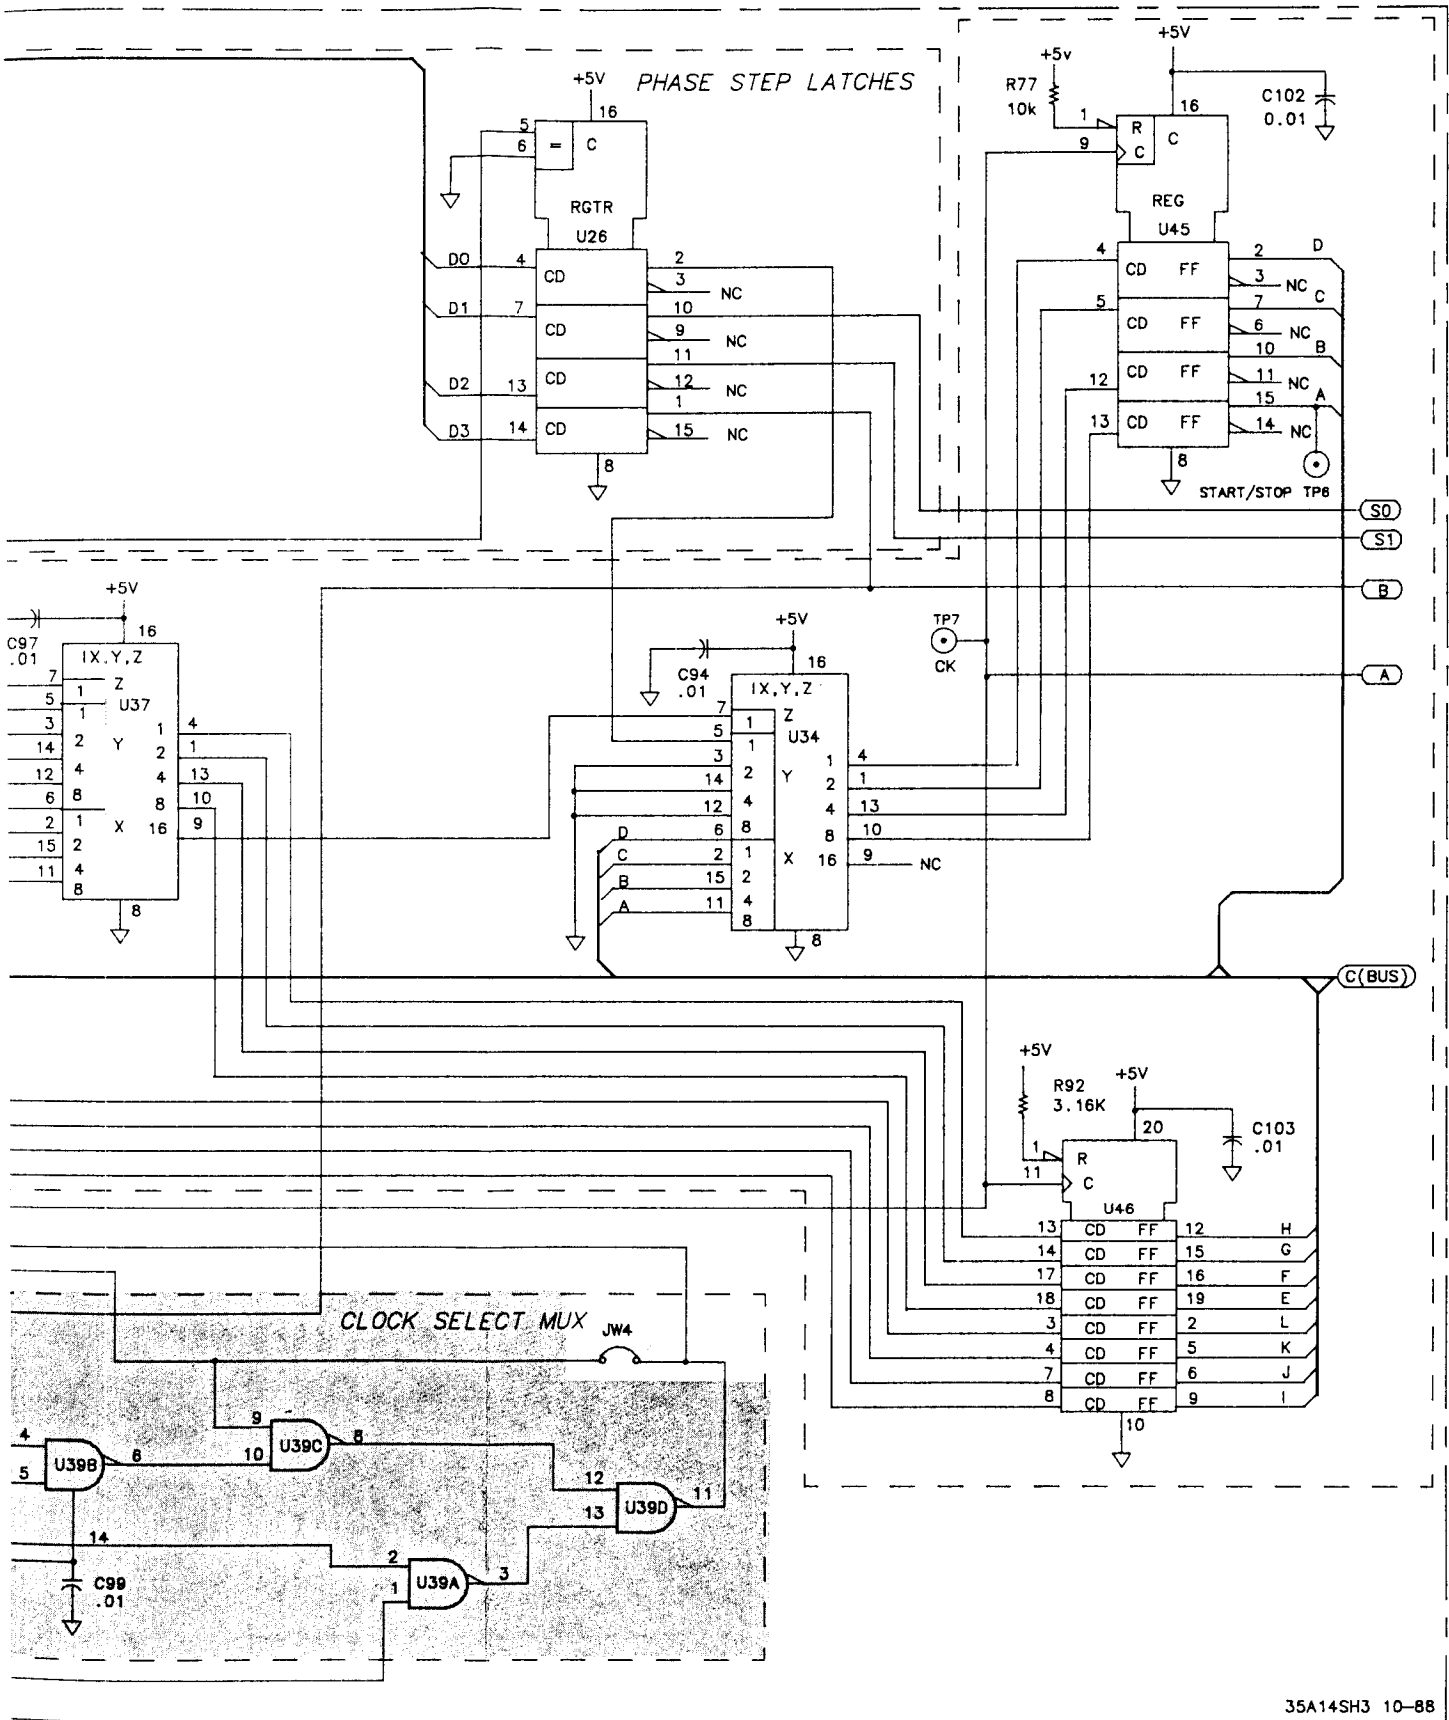




35A14SH3 10-88

Figure 8-38.
A4 Transmitter Board Schematic Diagram (Sheet 3 of 5)
8-87


S0
S1

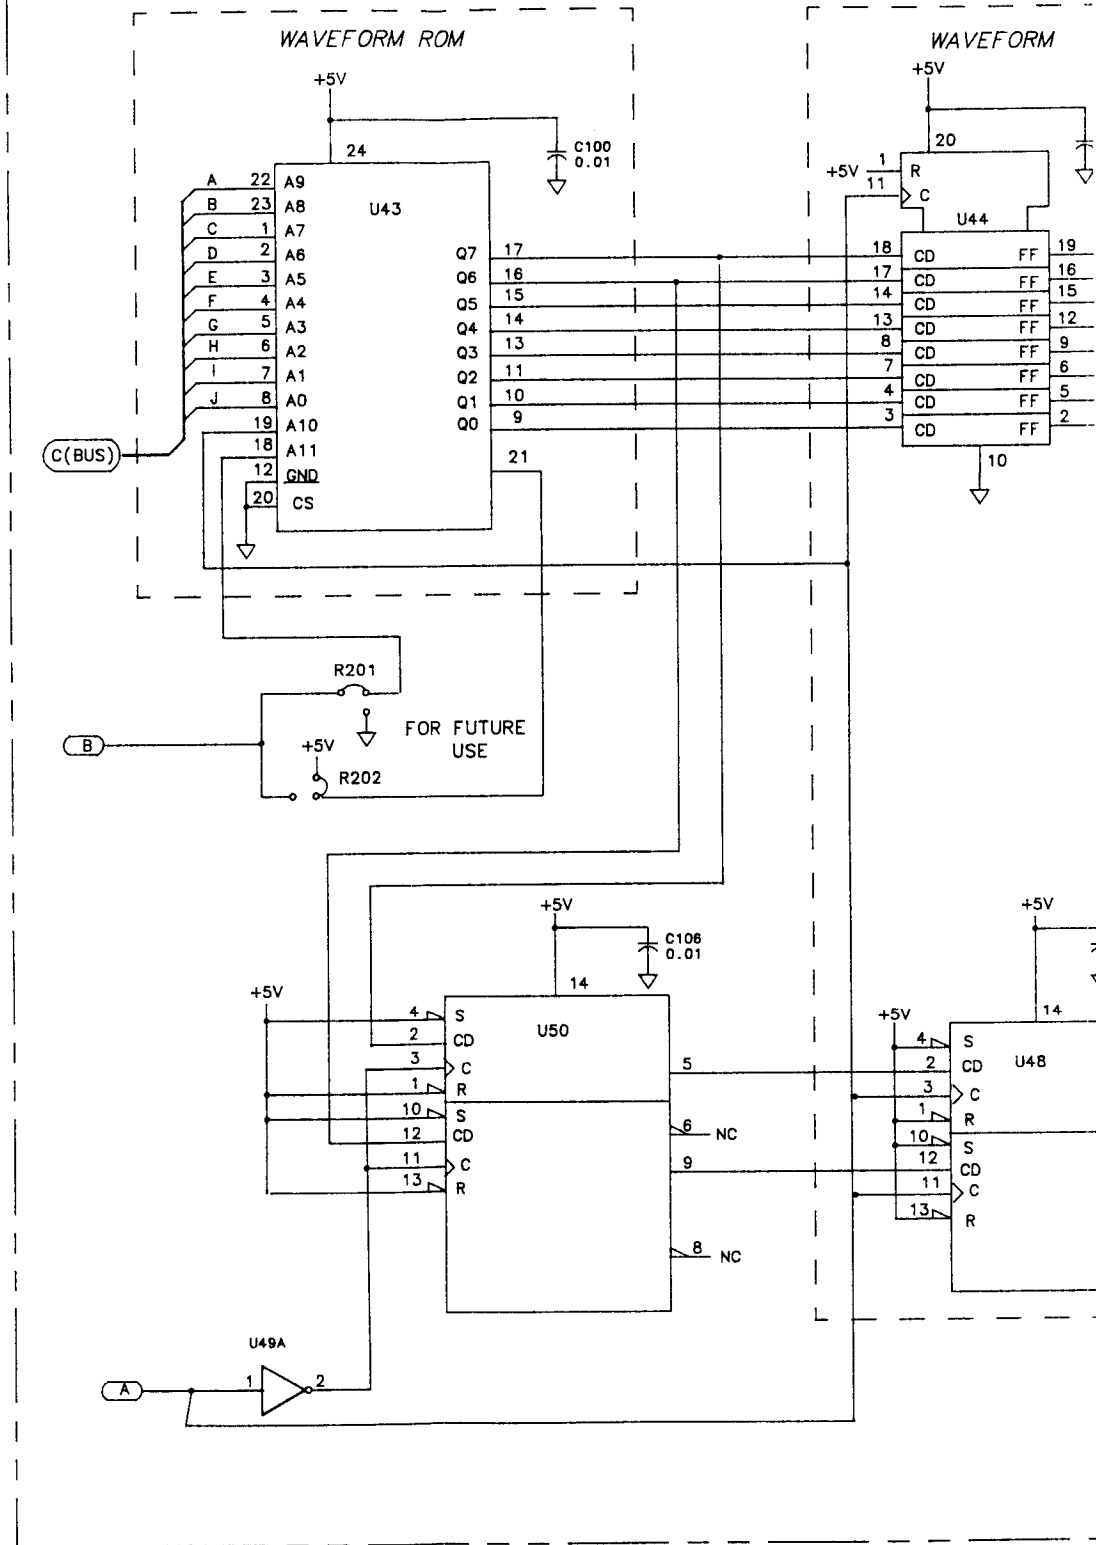


8-39 A

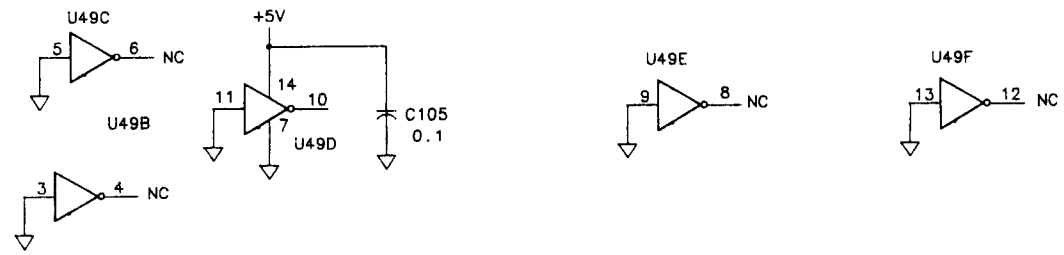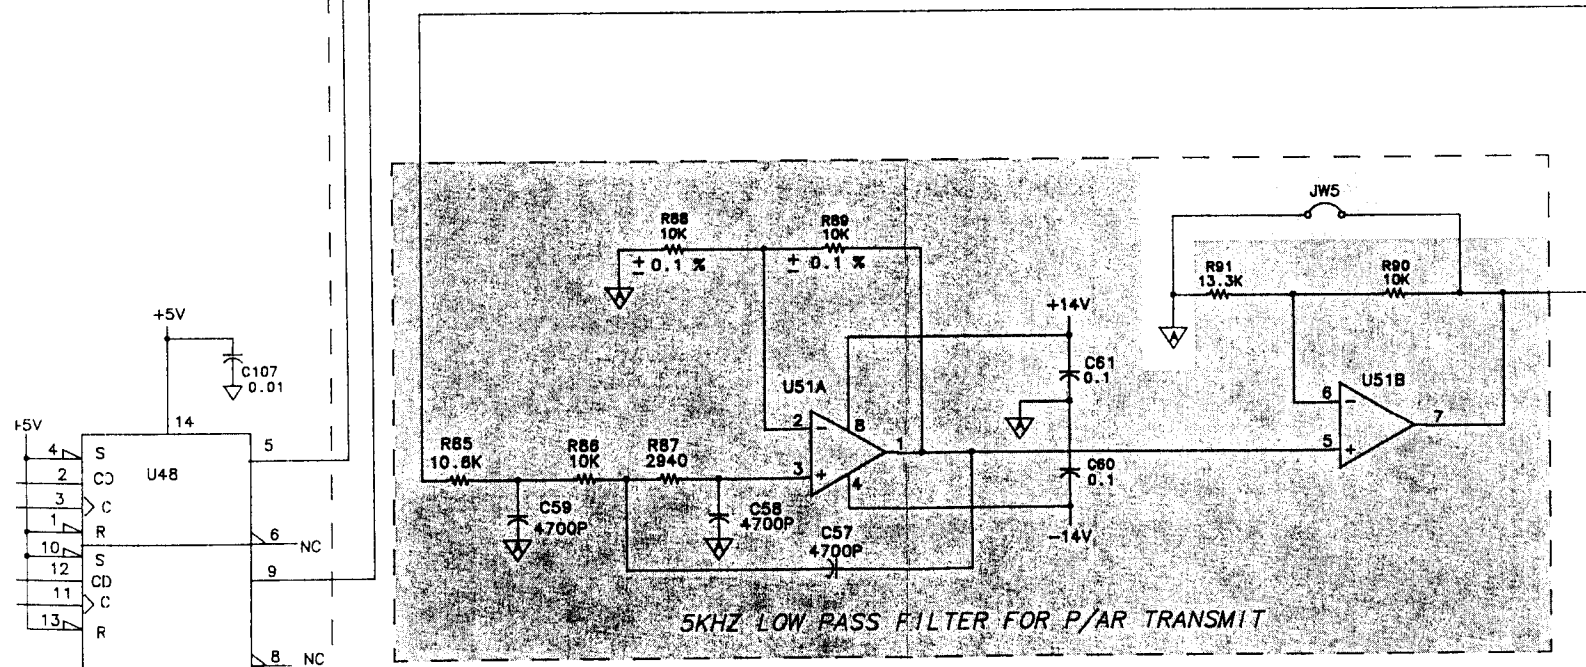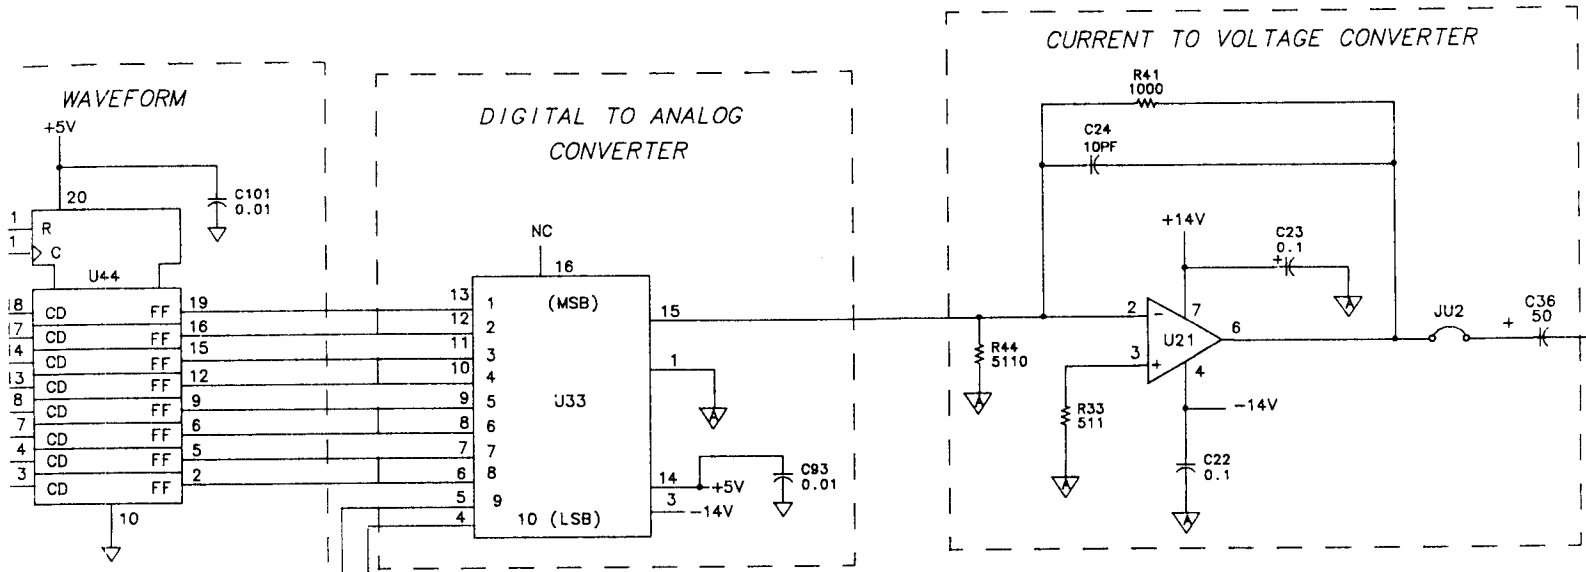

8-39 B

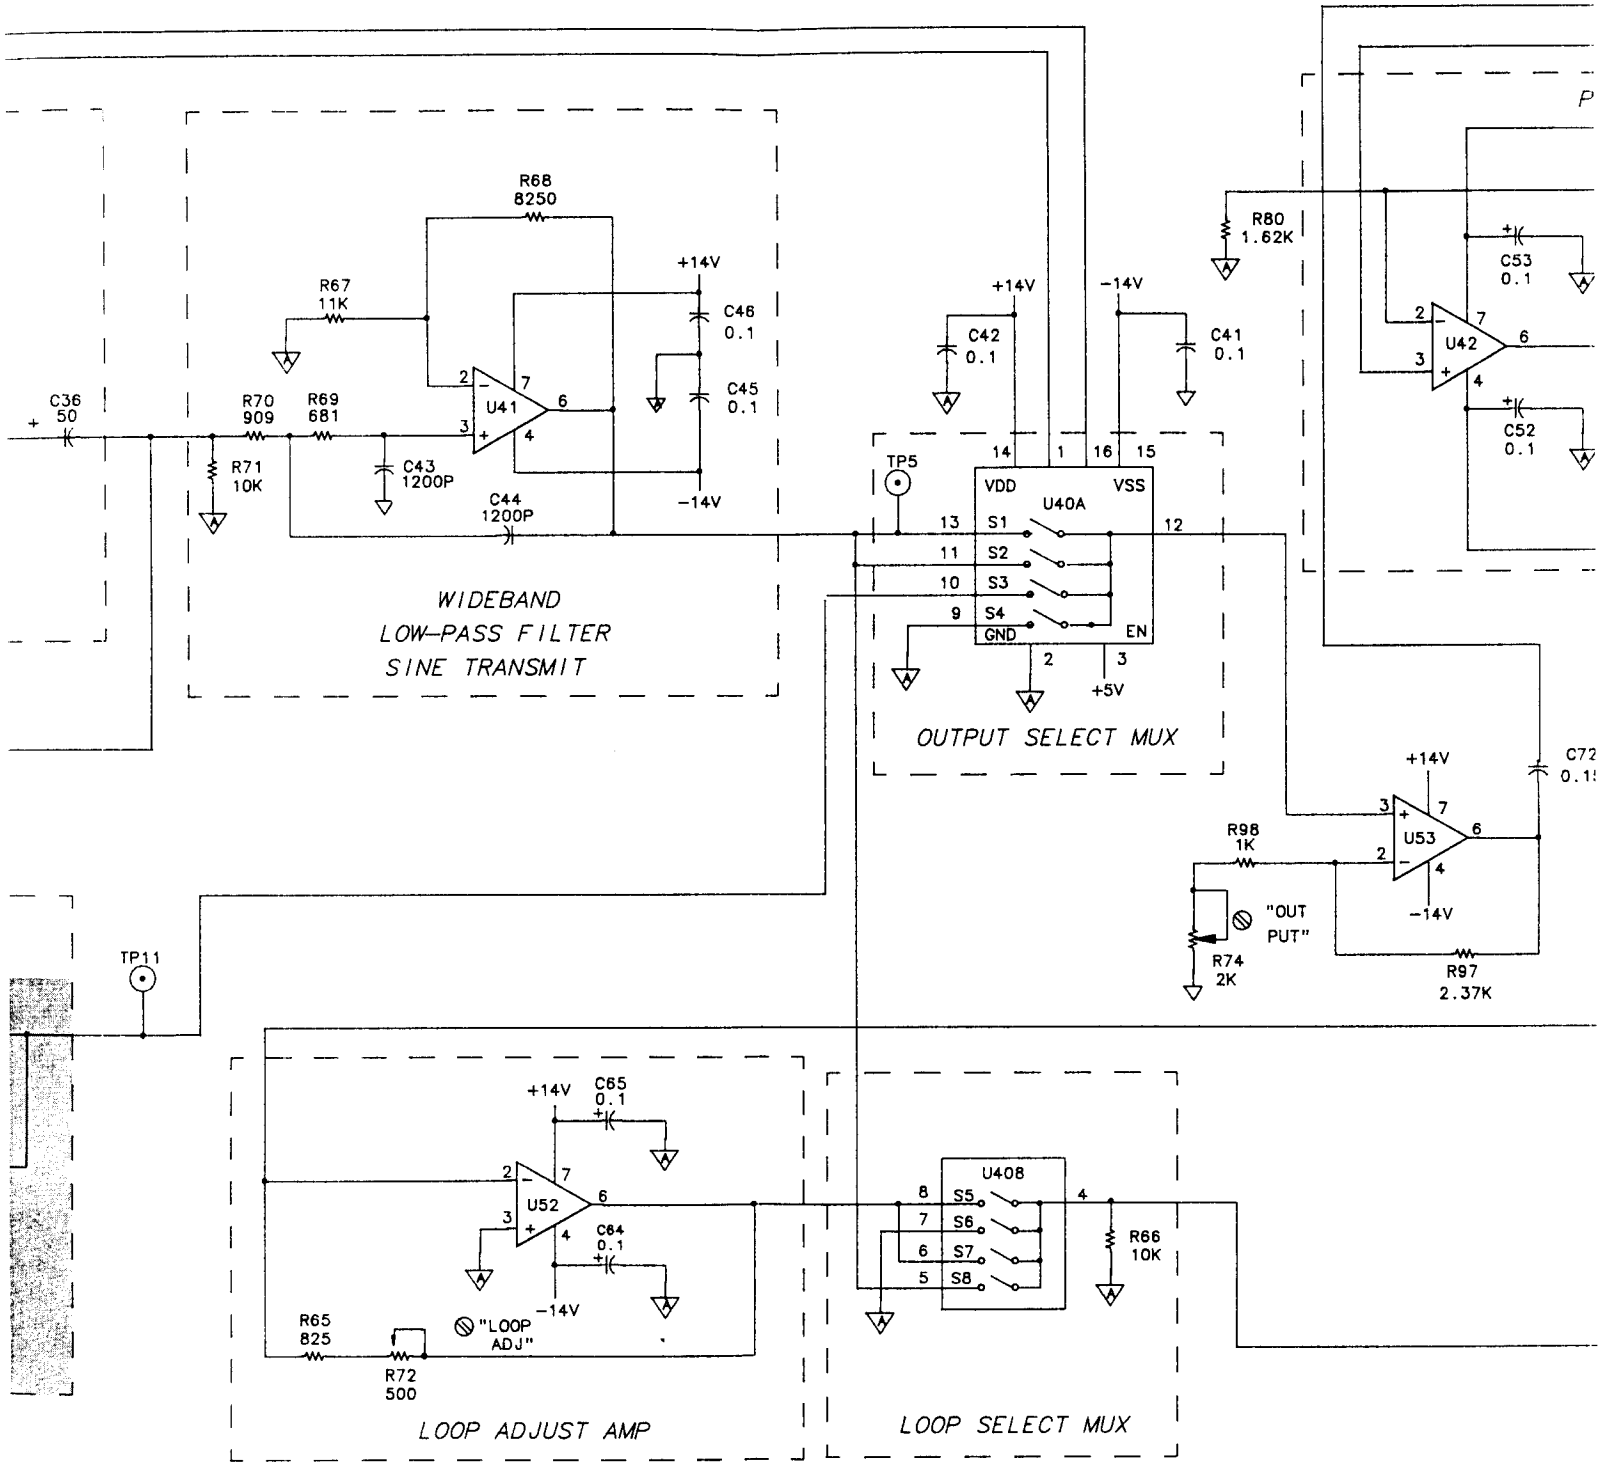


8-39 C

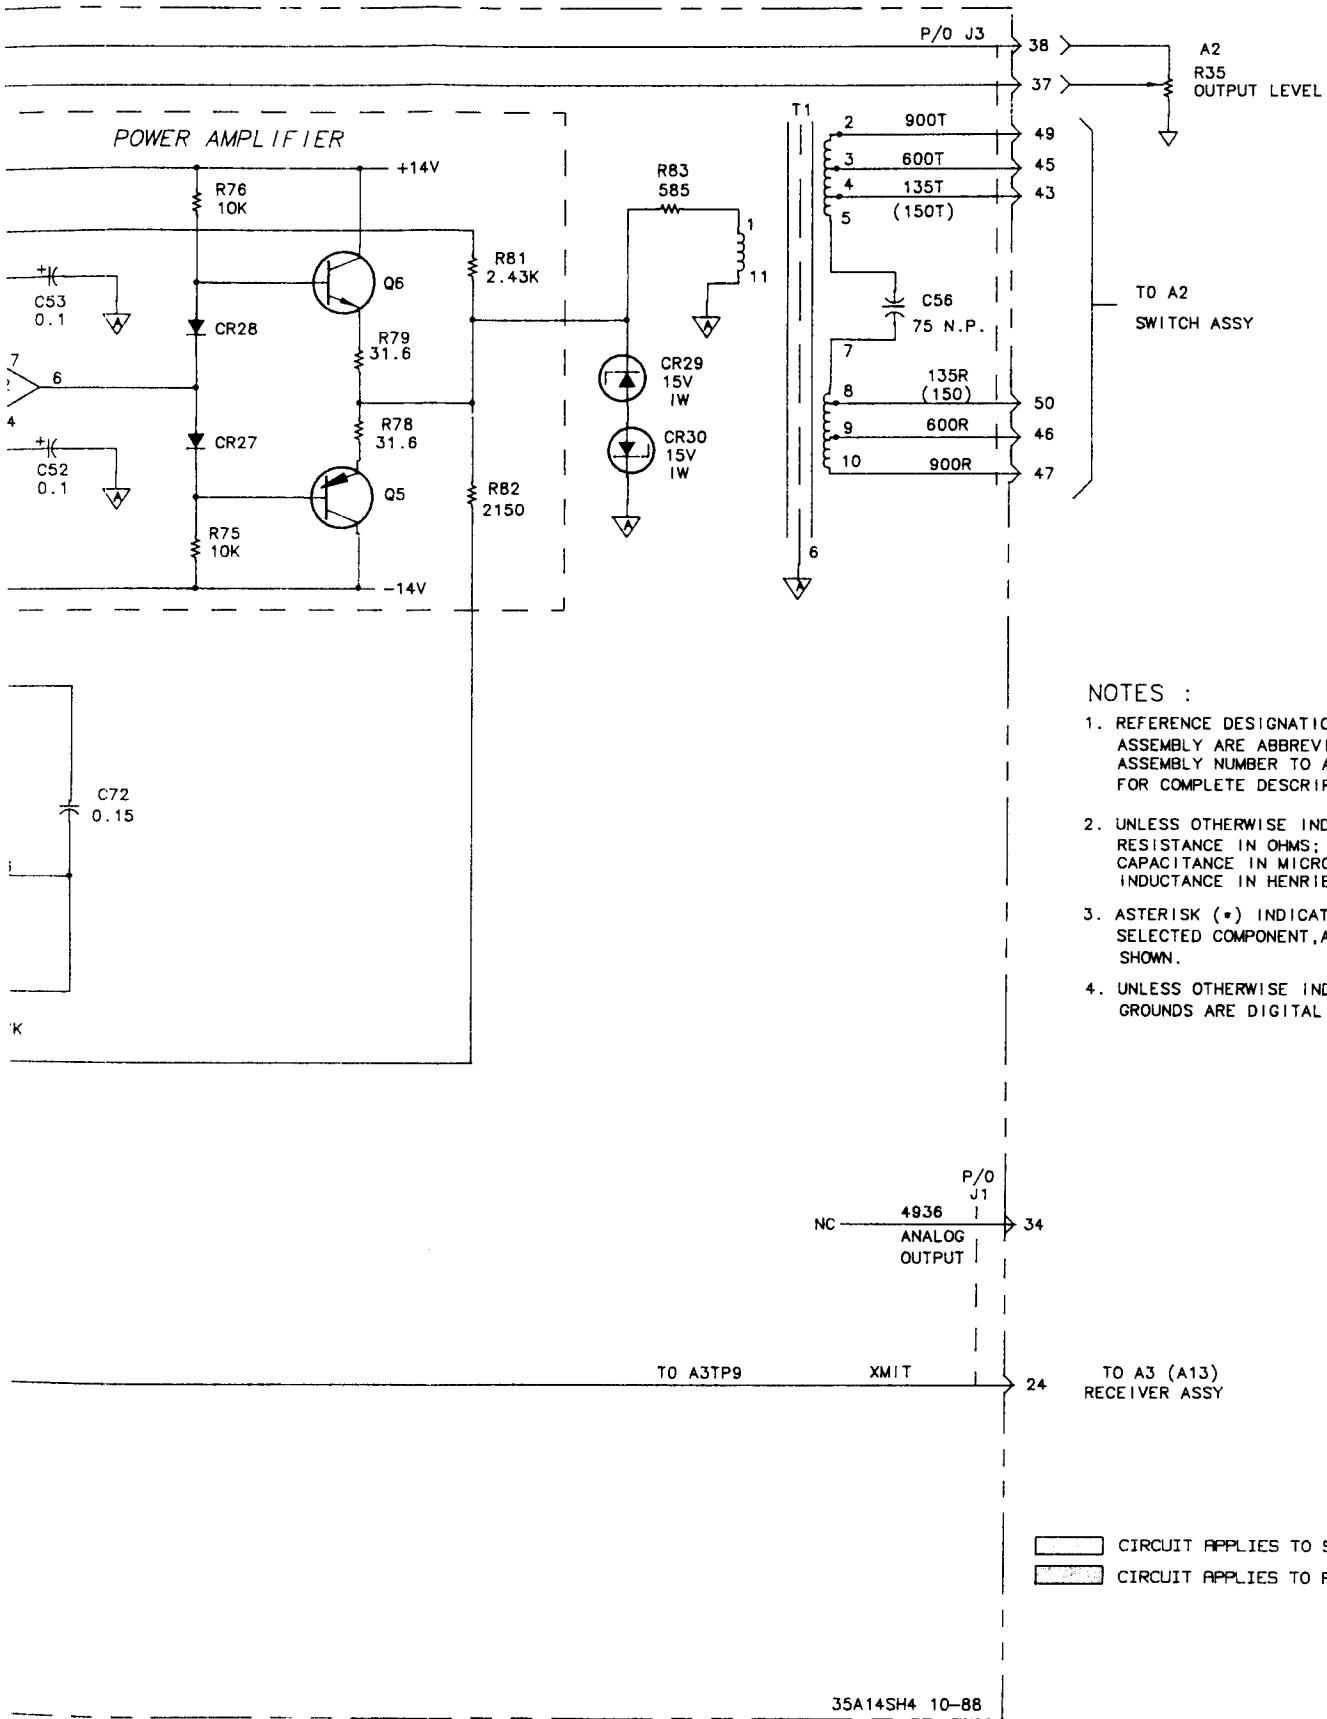

NOTES :

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN MICROFARADS; INDUCTANCE IN HENRIES
3. ASTERISK (*) INDICATES FACTORY SELECTED COMPONENT, AVERAGE VALUE SHOWN.
4. UNLESS OTHERWISE INDICATED: ALL GROUNDS ARE DIGITAL GROUNDS.

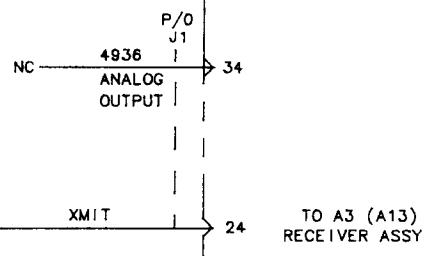

- CIRCUIT APPLIES TO STANDARD UNITS ONLY.
- CIRCUIT APPLIES TO P/AR UNITS ONLY.


35A14SH4 10-88

Figure 8-39.
A4 Transmitter Board Schematic Diagram (Sheet 4 of 5)

P/O A4 (A14) TRANSMITTER BOARD ASSY (04935-60034)

	2110-0065		2110-0296	
AC LINE VOLT	100	120	220	240
FUSE	375MA	375MA	200MA	200MA


NOTE: FUSES ARE NON TIME DELAY TYPES

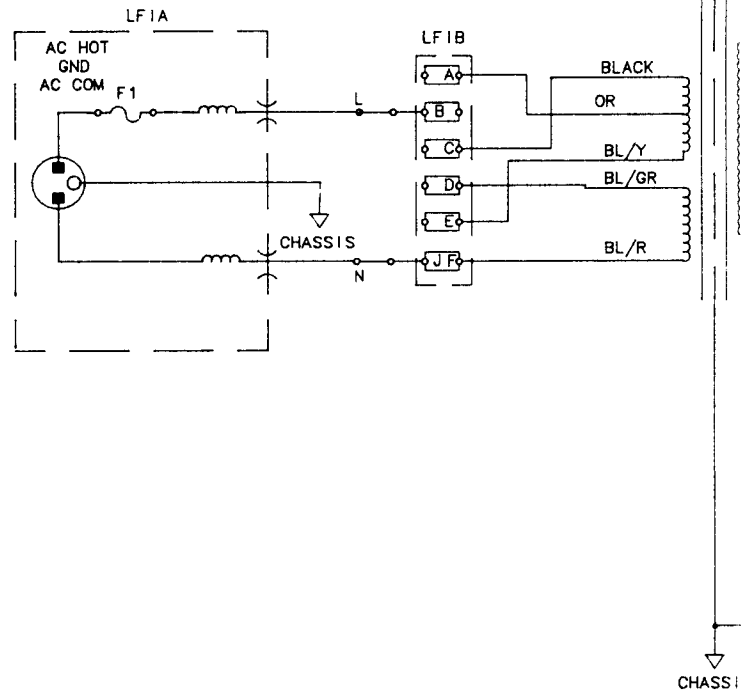

8-40 A

	2110-0065		2110-0296	
LINE VOLT	100	120	220	240
FUSE	375MA	375MA	200MA	200MA


FUSES ARE NON TIME DELAY TYPES

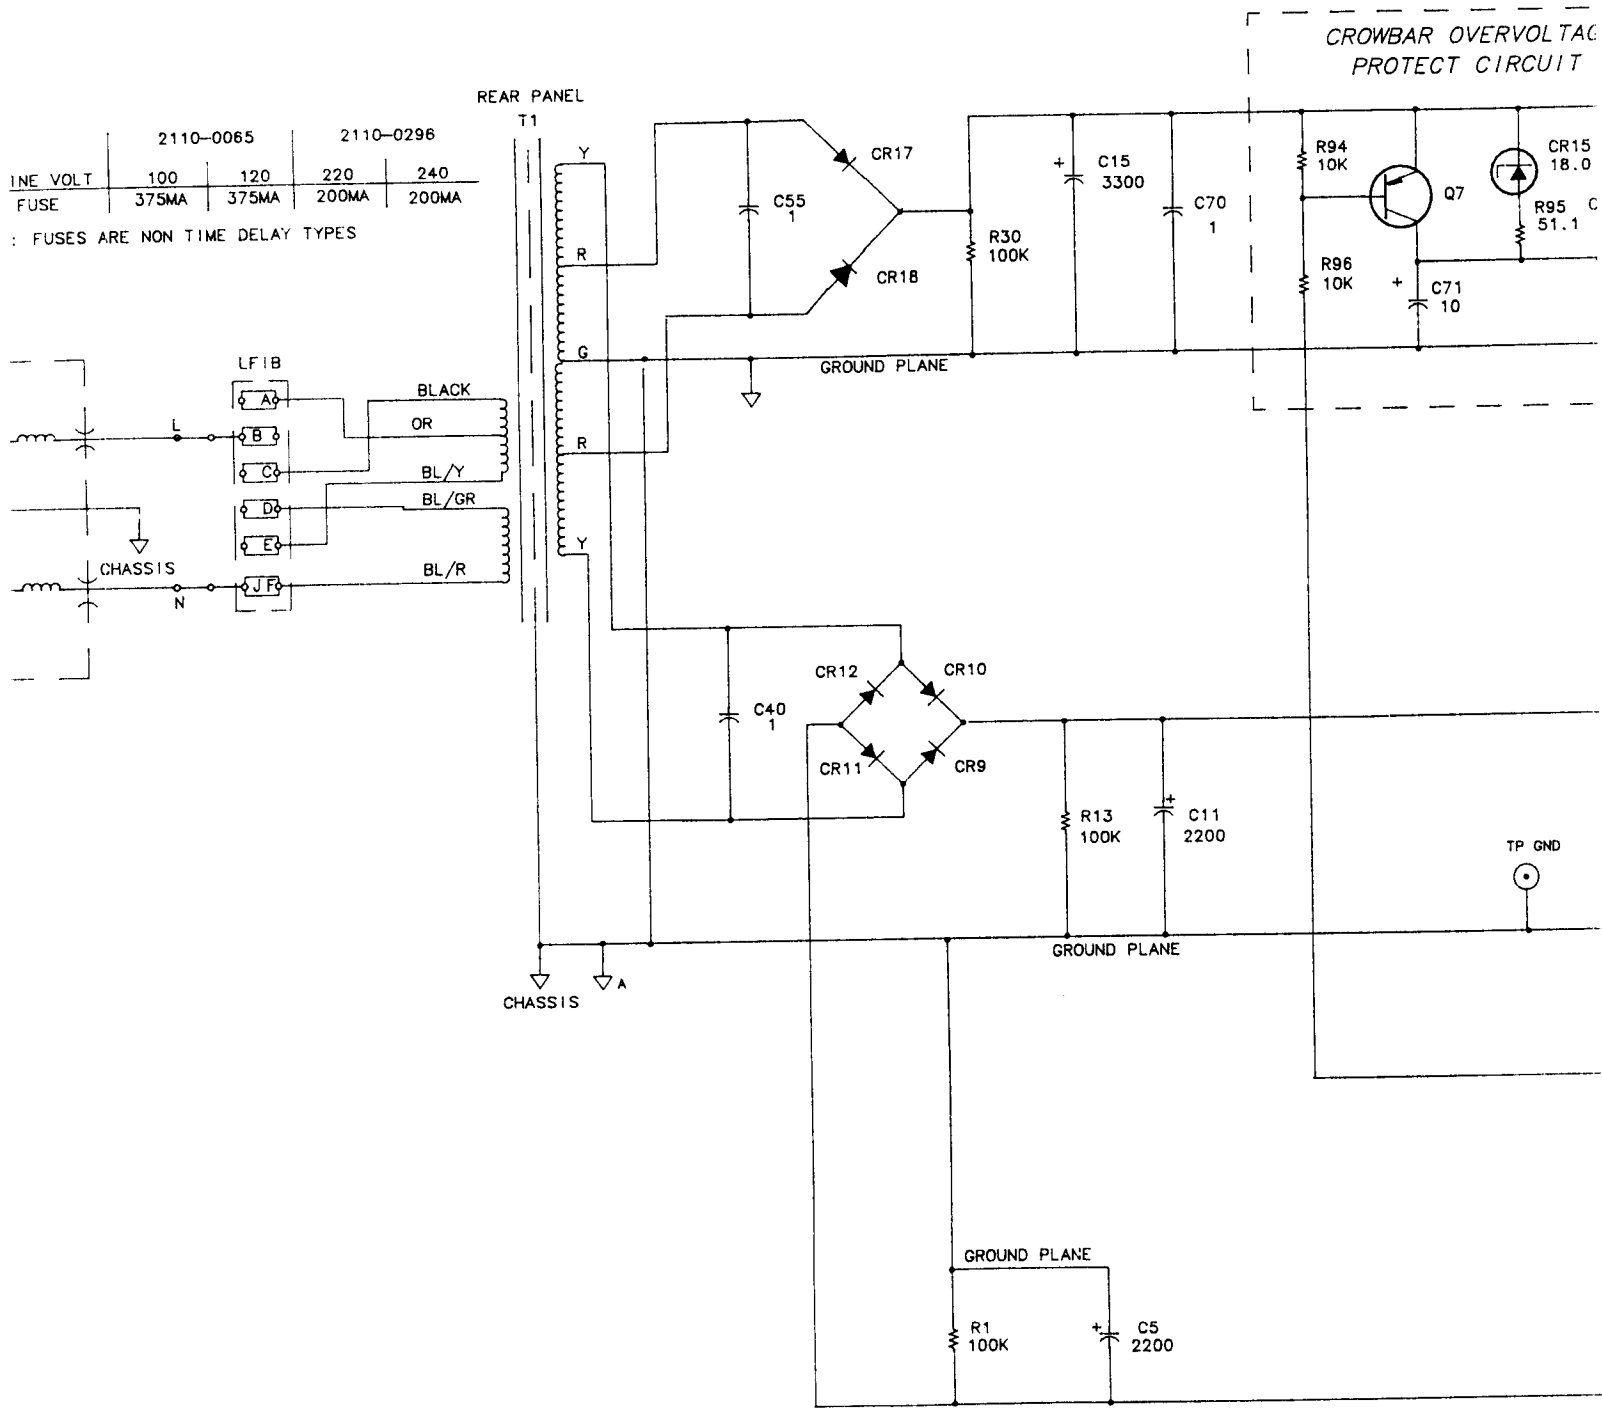


8-40 B

POWER SUPPLY SECTION

OVERVOLTAGE
PROTECT
CIRCUIT

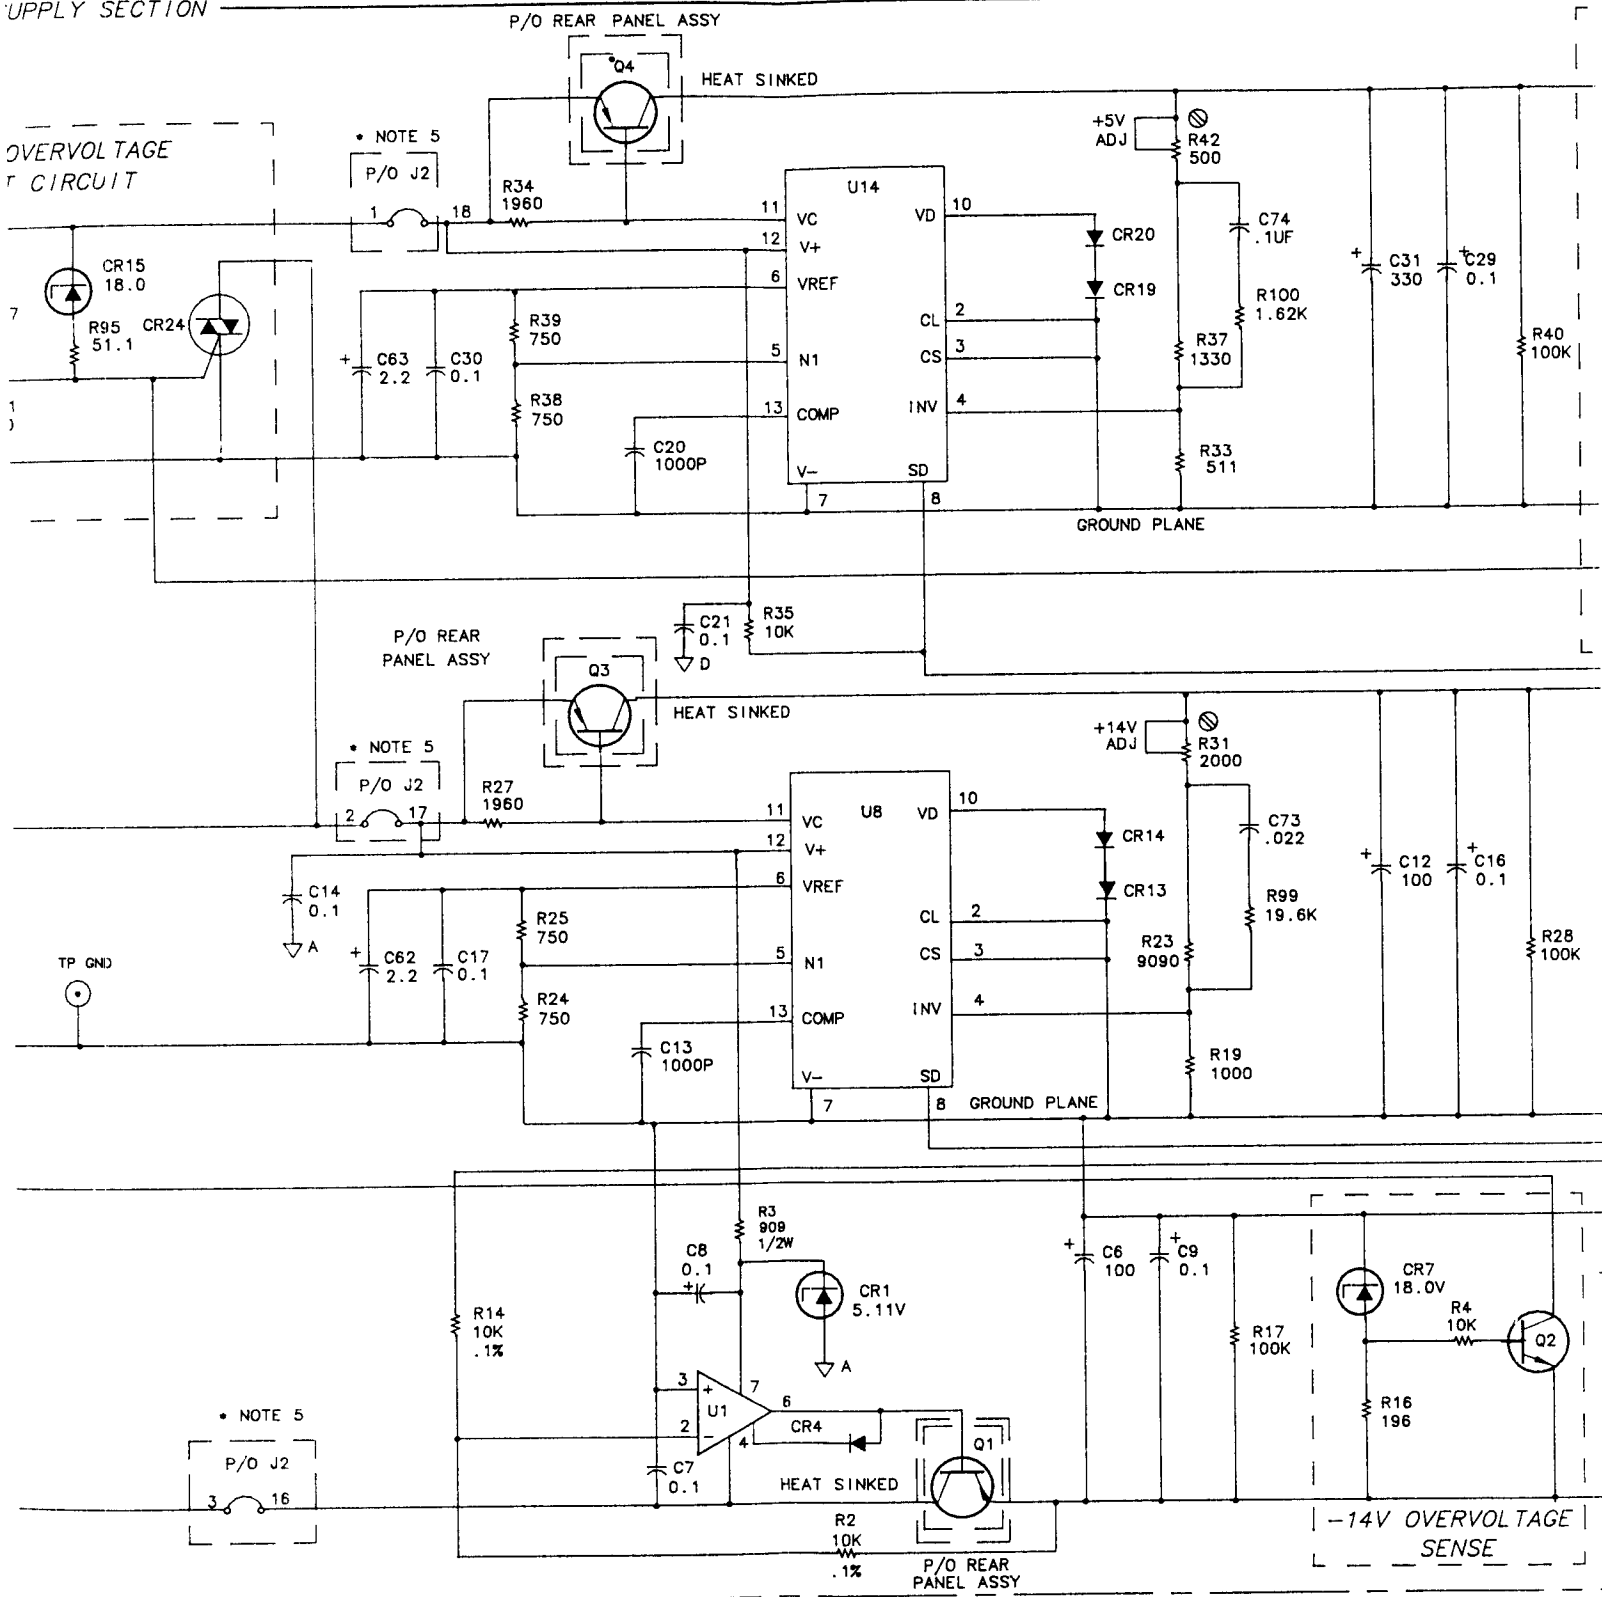

8-40 C

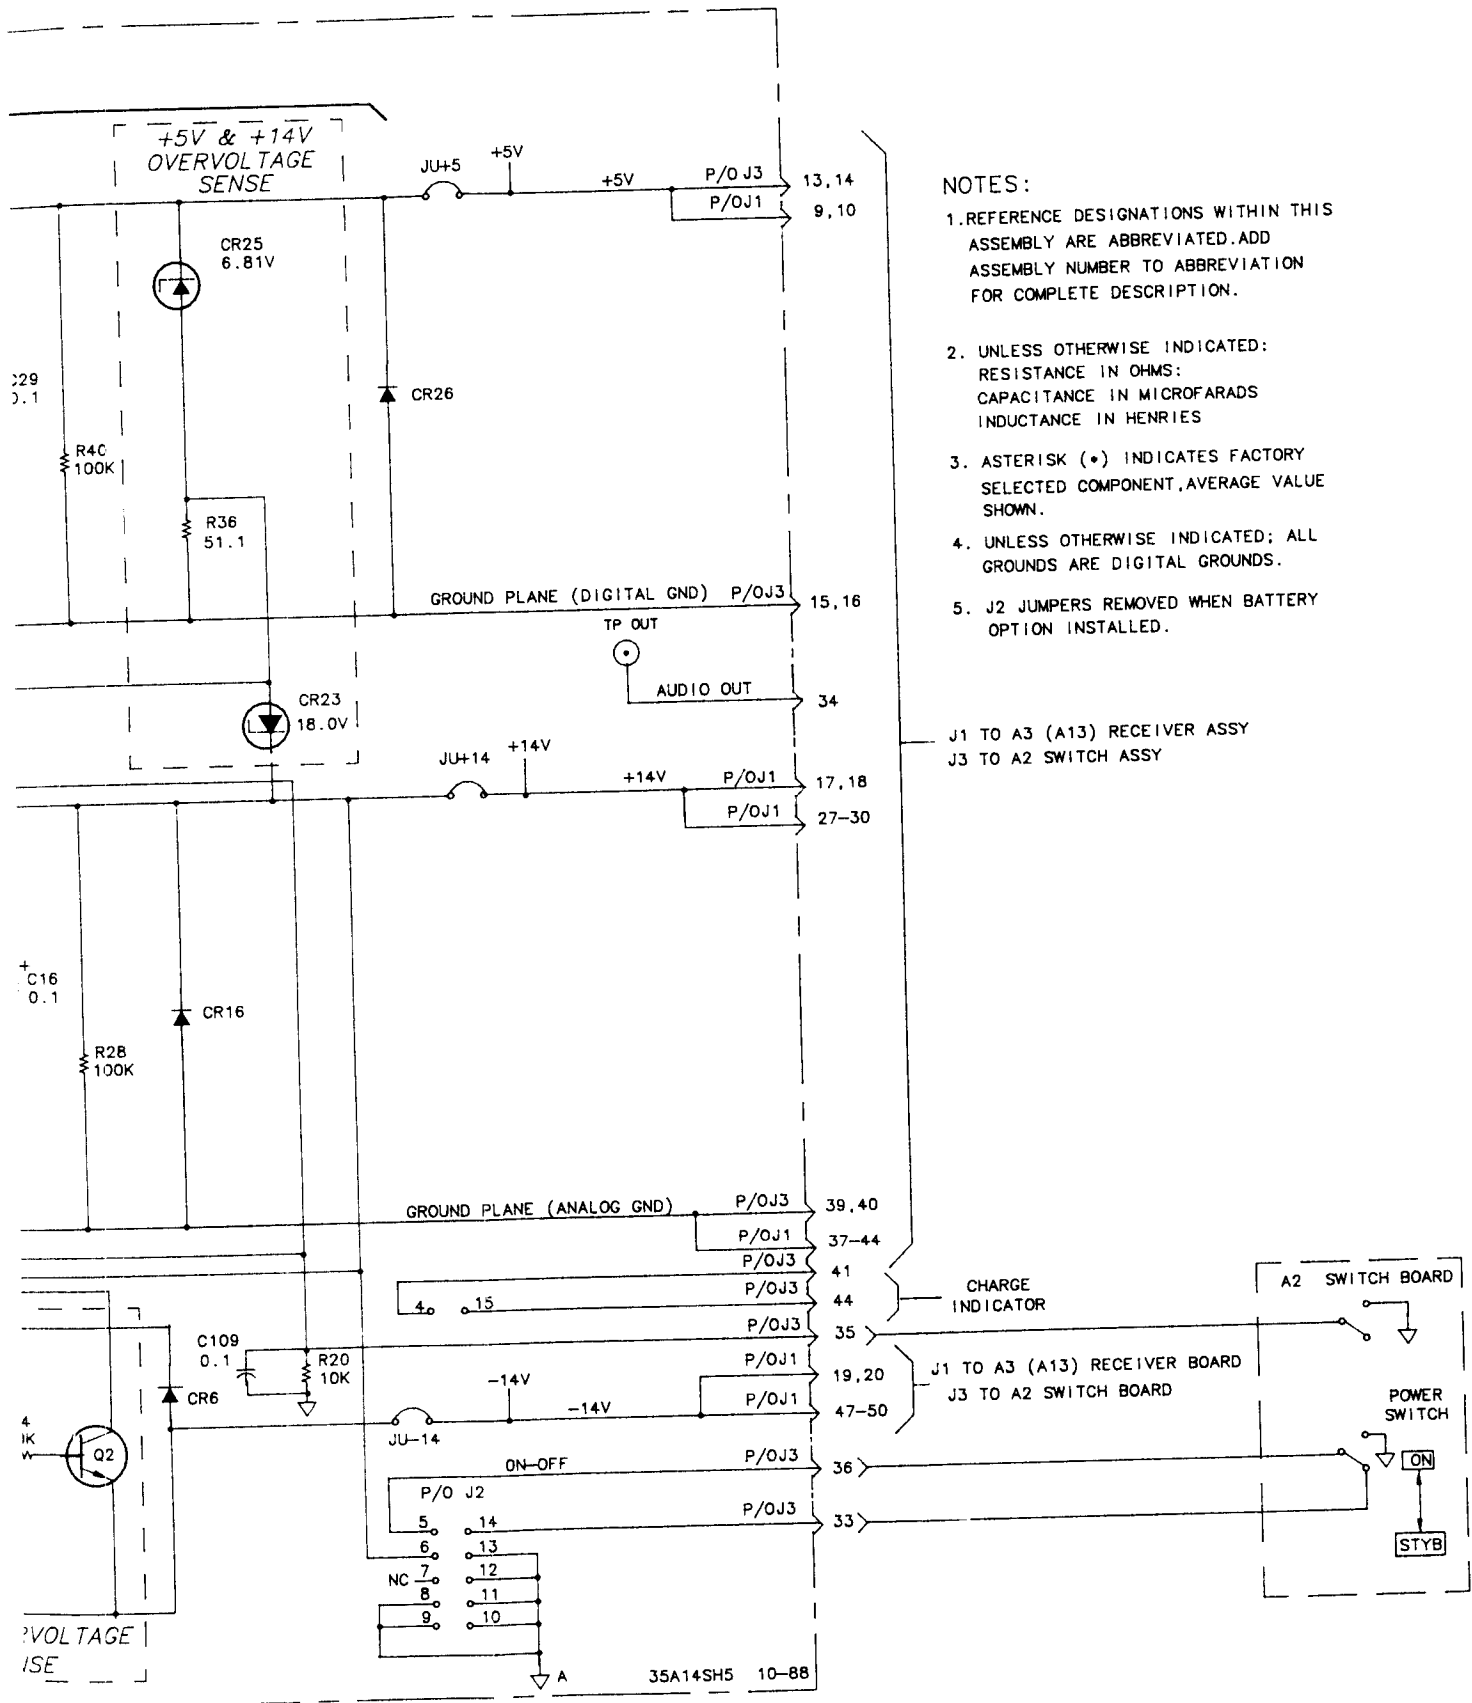


- NOTES:
1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
 2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN MICROFARADS; INDUCTANCE IN HENRIES
 3. ASTERISK (*) INDICATES FACTORY SELECTED COMPONENT, AVERAGE VALUE SHOWN.
 4. UNLESS OTHERWISE INDICATED; ALL GROUNDS ARE DIGITAL GROUNDS.
 5. J2 JUMPERS REMOVED WHEN BATTERY OPTION INSTALLED.


J1 TO A3 (A13) RECEIVER ASSY
 J3 TO A2 SWITCH ASSY

Figure 8-40.
 A4 Transmitter Board Schematic Diagram (Sheet 5 of 5)
 8-91

Service



Model 4935A

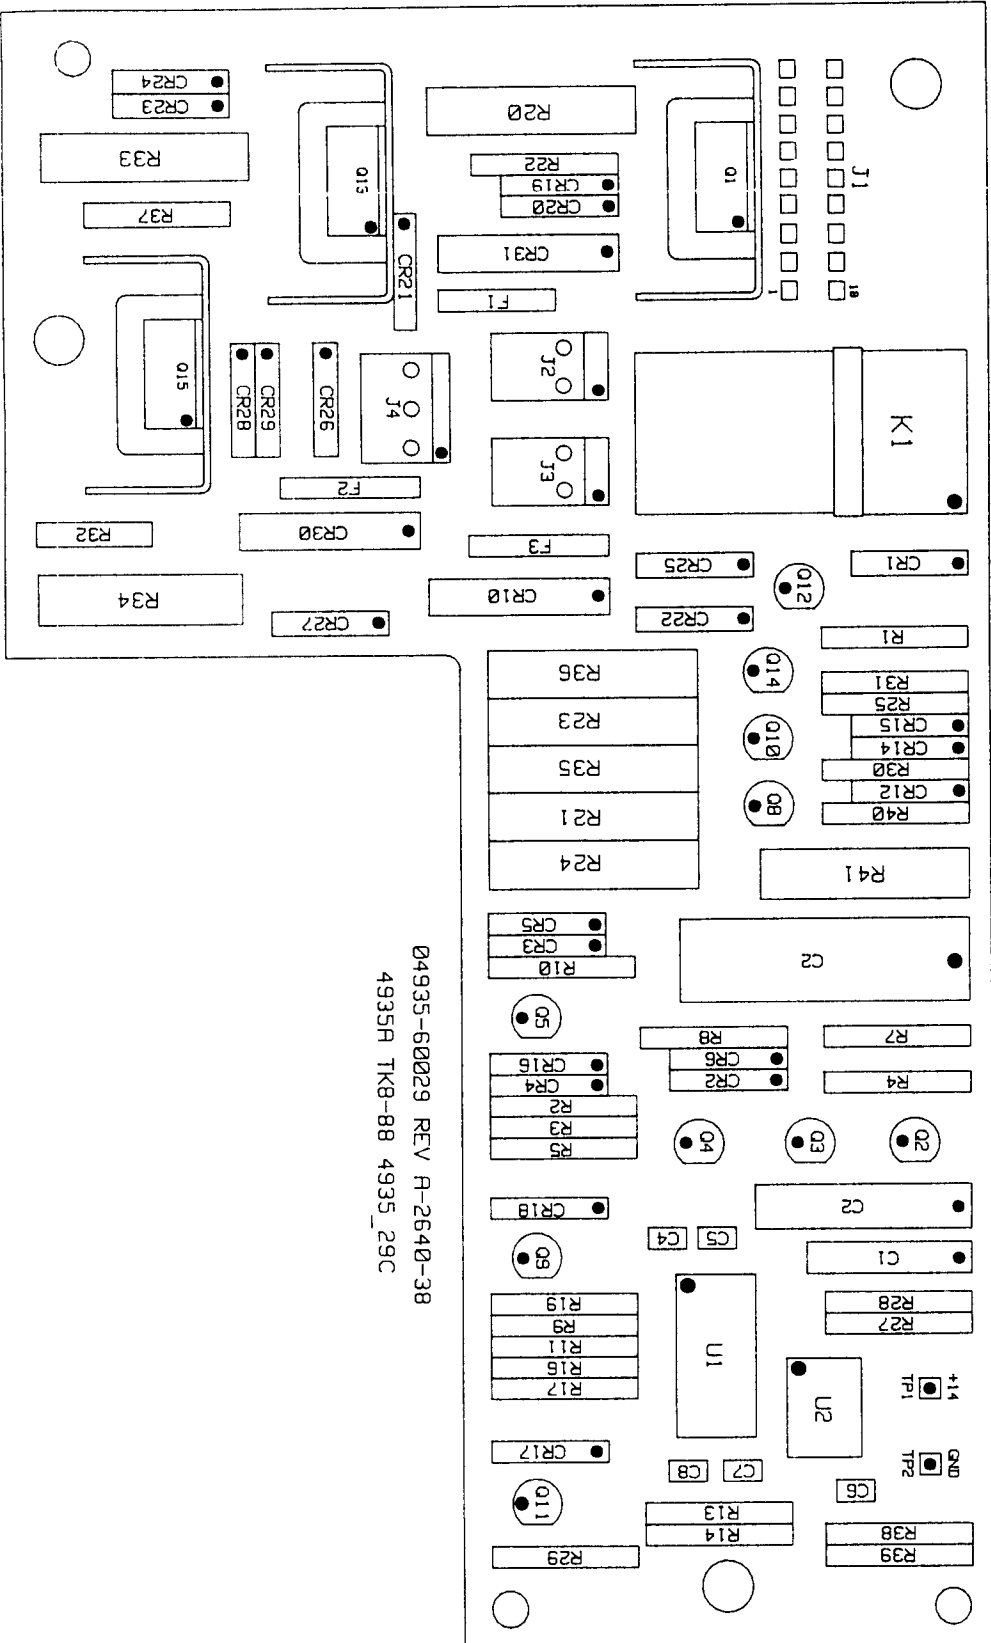

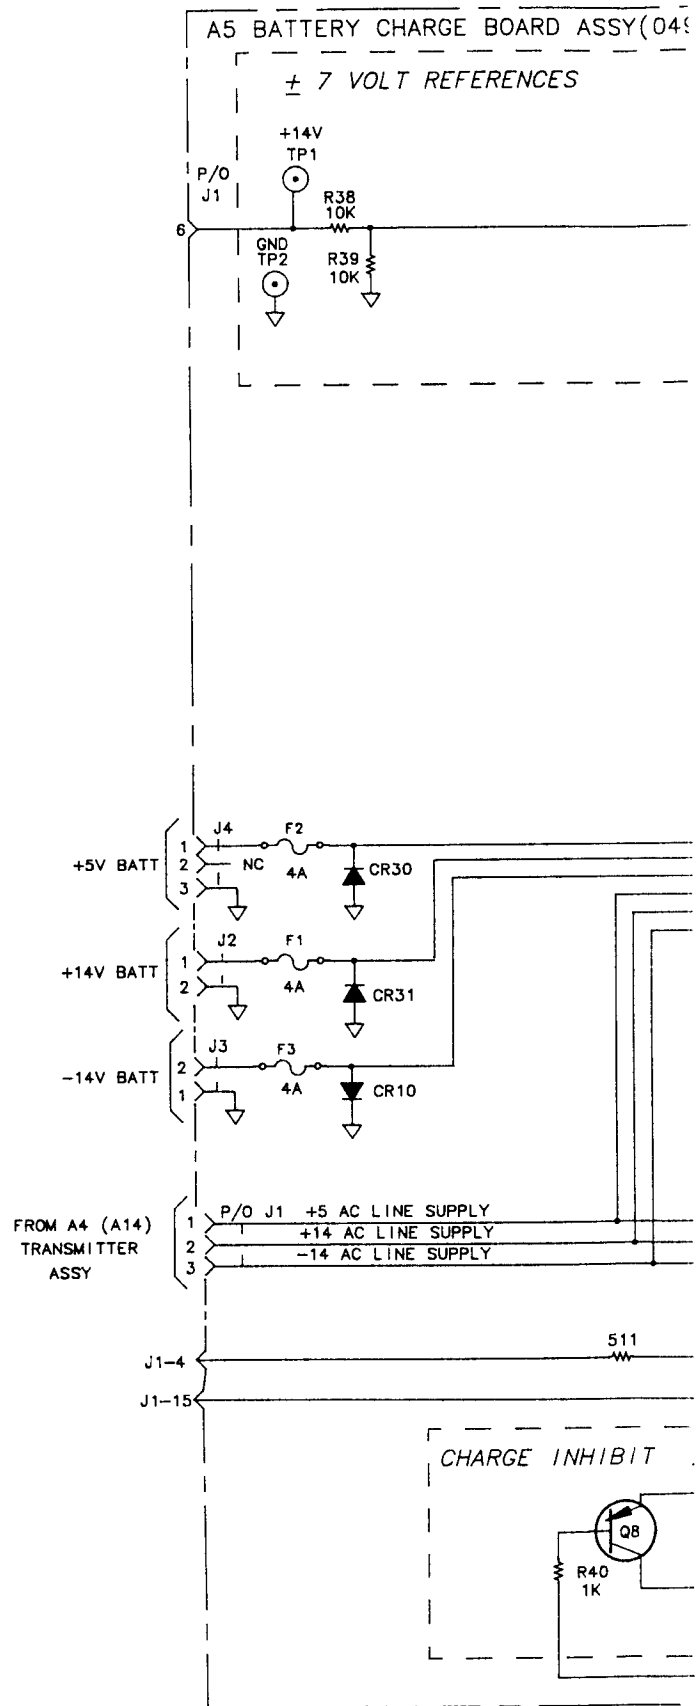


8-42 A

LOW BATTERY COMPARATORS

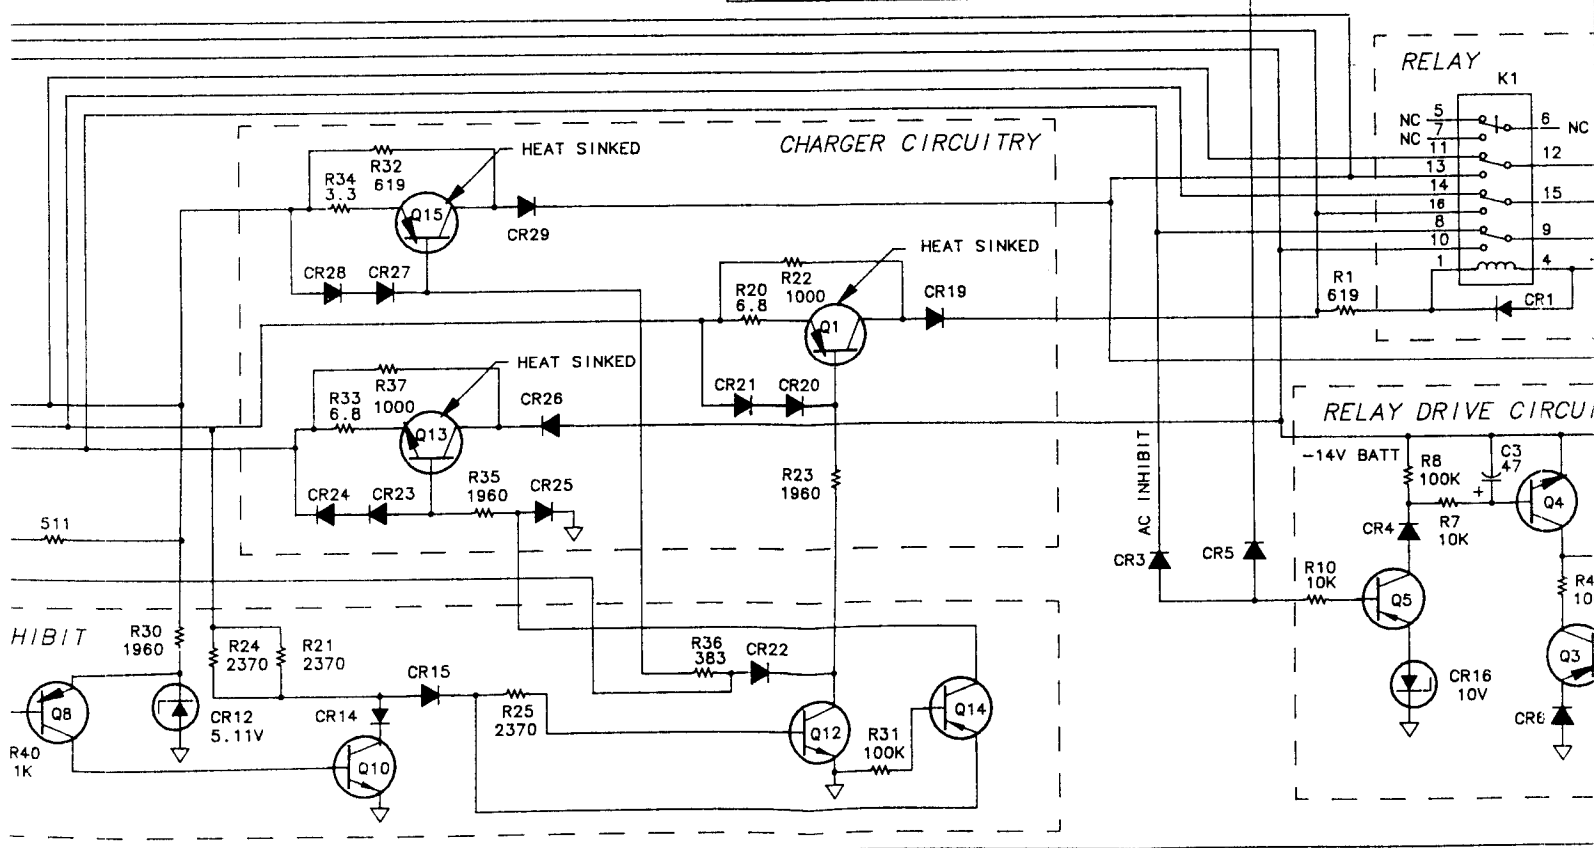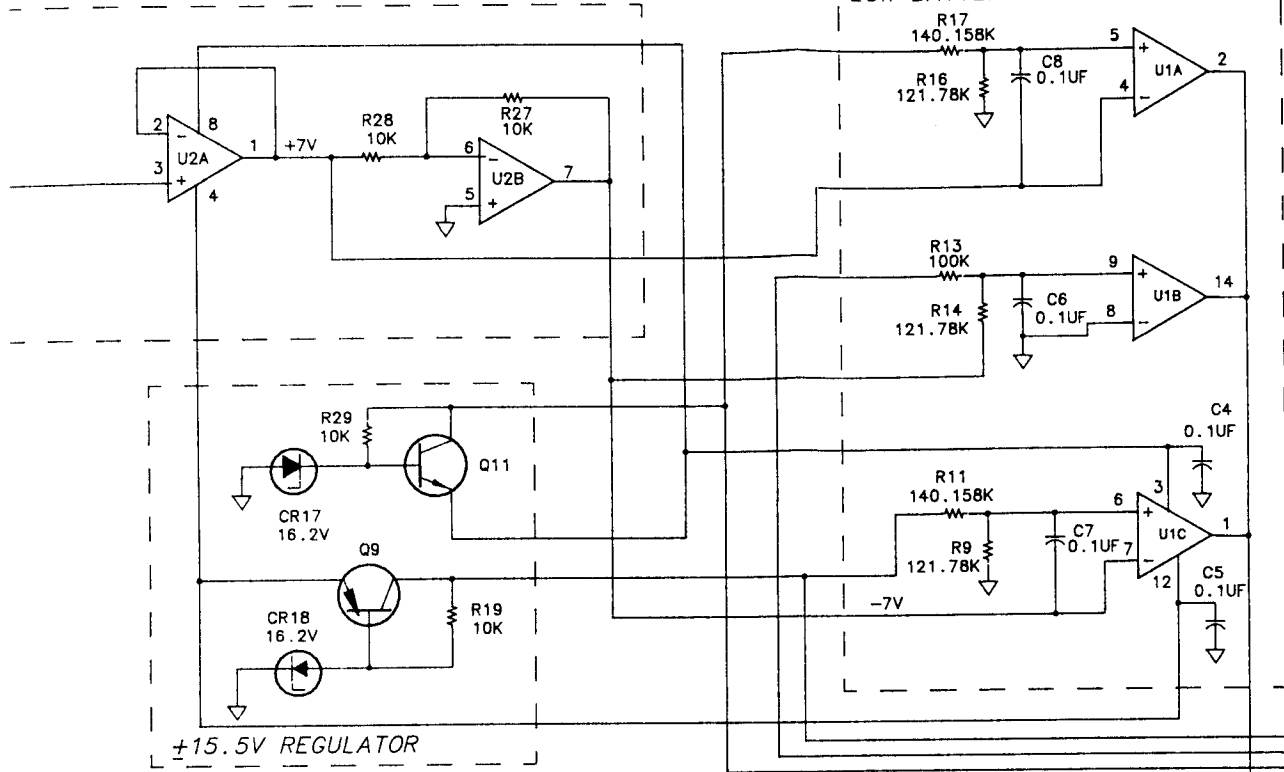

8-42 B

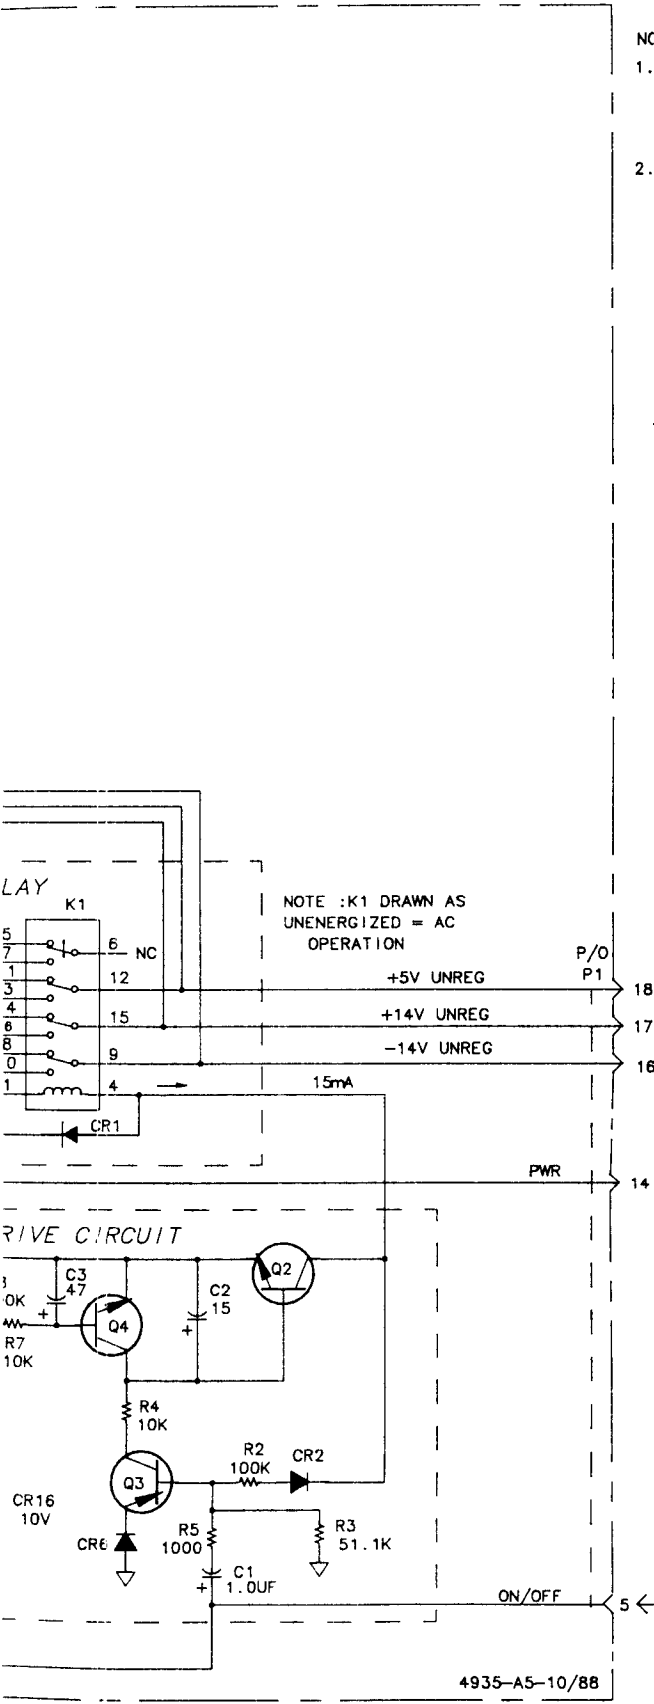

- NOTES :
1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
 2. UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS;
CAPACITANCE IN MICROFARADS;
INDUCTANCE IN HENRIES

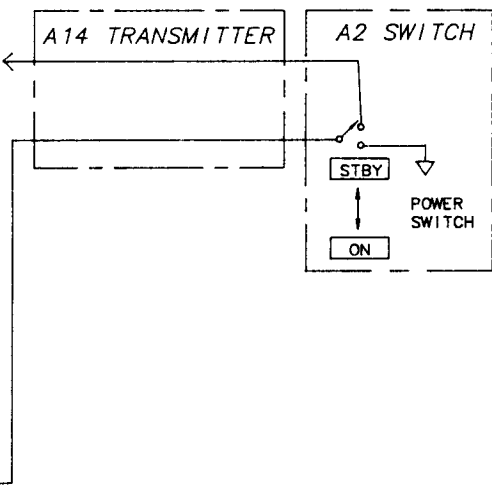
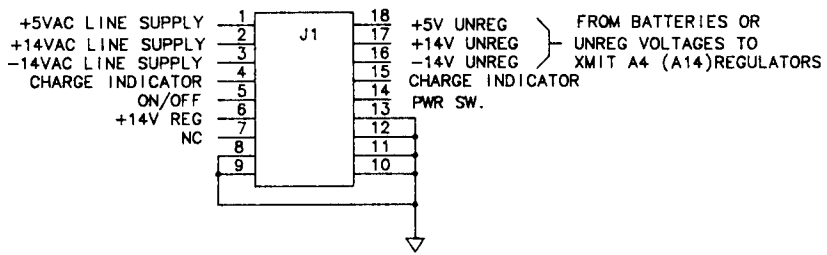


Figure 8-42.
A5 Charger Board Schematic Diagram
8-93