

**Agilent E5022A/B and E5023A Hard Disk Read/Write Test System**

# **Programming Manual**

**27th Edition**

**Software Revision**

This manual applies to the system which has  
the software revision B.04.00



**Agilent Technologies**

**Part No. E5023-90091**

**March 2004**

Printed in Japan

---

## Notices

The information contained in this document is subject to change without notice.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of the Agilent Technologies, Inc.

Microsoft is a registered trademark of Microsoft Corporation.

Windows 95/2000 and Visual Basic are registered trademarks of Microsoft Corporation.

Acrobat Reader is a registered trademark of Adobe Corporation.

© Agilent Technologies Japan, Ltd. 1998-2004

---

## Manual Printing History

The manual's printing date and part number indicate its current edition. The printing date changes when a new edition is printed. (Minor corrections and updates that are incorporated at reprint do not cause the date to change.) The manual part number changes when extensive technical changes are incorporated.

November 1998	1st Edition
January 1999	2nd Edition
May 1999	3rd Edition
June 1999	4th Edition
August 1999	5th Edition
August 1999	6th Edition
November 1999	7th Edition
December 1999	8th Edition
February 2000	9th Edition
April 2000	10th Edition
June 2000	11th Edition
July 2000	12th Edition
July 2000	13th Edition
October 2000	14th Edition
November 2000	15th Edition
December 2000	16th Edition
March 2001	17th Edition
June 2001	18th Edition
August 2001	19th Edition
August 2001	20th Edition
October 2001	21st Edition
February 2002	22nd Edition (part number: E5023-90041)
July 2002	23rd Edition (part number: E5023-90051)
September 2002	24th Edition (part number: E5023-90061)
January 2003	25th Edition (part number: E5023-90071)
March 2003	26th Edition (part number: E5023-90081)
March 2004	27th Edition (part number: E5023-90091)

---

## Assistance

Product maintenance agreements and other customer assistance agreements are available for Agilent Technologies products.

For any assistance, contact your nearest Agilent Technologies Sales and Service Office. Addresses are provided at the back of this manual.

---

## Sample Program

A sample program is installed in the PC. The sample program list is described in the programming manual.

The customer shall have the personal, non-transferable rights to use, copy, or modify SAMPLE PROGRAMS in this manual for the Customer's internal operations. The customer shall use the SAMPLE PROGRAMS solely and exclusively for their own purpose and shall not license, lease, market, or distribute the SAMPLE PROGRAMS or modification of any part thereof.

Agilent Technologies shall not be liable for the quality, performance, or behavior of the SAMPLE PROGRAMS. Agilent Technologies especially disclaims that the operation of the SAMPLE PROGRAMS shall be uninterrupted or error free. The SAMPLE PROGRAMS are provided AS IS.

**AGILENT TECHNOLOGIES DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.**

Agilent Technologies shall not be liable for any infringement of any patent, trademark, copyright, or other proprietary rights by the SAMPLE PROGRAMS or their use. Agilent Technologies does not warrant that the SAMPLE PROGRAMS are free from infringements of such rights of third parties. However, Agilent Technologies will not knowingly infringe or deliver software that infringes the patent, trademark, copyright, or other proprietary right of a third party.

---

# Contents

<b>1. Introduction</b>	
Introduction . . . . .	10
<b>2. Programming</b>	
Programming Preparation . . . . .	14
Programming Concept . . . . .	16
Example Program . . . . .	18
<b>3. Function Reference</b>	
About this chapter . . . . .	90
System Open/Close/Reset System Function . . . . .	91
Abort Function . . . . .	97
Self-test Function . . . . .	104
Error Handle Function . . . . .	106
System/Module Revision Query Function . . . . .	110
Data Definition Function . . . . .	116
Filter Setup Function . . . . .	147
Drive Setup Function . . . . .	154
Drive Control Function . . . . .	209
Input Range Control Function . . . . .	254
Head Amplifier Function . . . . .	275
Port Configuration Function . . . . .	295
Output State Function . . . . .	301
External Write Data Source Function . . . . .	304
Spinstand Controller J2 Port I/O Function . . . . .	307
Shroud Cover Function . . . . .	314
Spectrum Analyzer Display Function . . . . .	320
Write Function . . . . .	323
Sense Current Function . . . . .	336
Sense Stimulus Function . . . . .	343
Erase Function . . . . .	355
Precompensation Function . . . . .	374
Test Execution Function . . . . .	387
Release setup test function . . . . .	390
DC Resistance Measurement Function . . . . .	393
Reference value for Parametric Test Function . . . . .	400
Track Average Amplitude (TAA) Measurement Function . . . . .	409
Pulse Width (PW) Measurement Function . . . . .	428
Baseline Measurement Function . . . . .	447
Parametric Measurement Function . . . . .	466
Resolution Measurement Function . . . . .	501
Stability Measurement Function (Ratio Setting) . . . . .	511
Stability Measurement (Absolute Time Setting) . . . . .	537
Narrow Band TAA Measurement . . . . .	564
Absolute Polarity Function . . . . .	587
Track Profile Measurement Function . . . . .	615
Micro Track Function . . . . .	637
Write Current Sweep Measurement Function . . . . .	658

Sense Current Sweep Measurement Function . . . . .	665
Sense Stimulus Sweep Measurement Function . . . . .	672
Channel Bit Rate Sweep Measurement . . . . .	679
Roll Off Measurement Function. . . . .	686
Precompensation Value Sweep Measurement Function. . . . .	696
Standard Triple Track Test Measurement Function . . . . .	703
SNR Triple Track Test Measurement Function . . . . .	728
Sub-Harmonic Noise Ratio (SHNR) . . . . .	775
Baseline Popping Measurement Function . . . . .	800
NLTS (5th Harmonics) Measurement Function. . . . .	810
SNR Measurement . . . . .	820
Spectral SNR Measurement . . . . .	837
Spectrum Measurement . . . . .	850
Popcorn Noise Measurement Function (Sampling Method) . . . . .	867
Popcorn Noise Measurement Function (Threshold Method) . . . . .	886
Overwrite Measurement Function . . . . .	910
Sectorized Overwrite Measurement Function . . . . .	920
Partial Erasure Measurement . . . . .	934
Side Reading Measurement Function. . . . .	944
Side Erase Measurement Function. . . . .	954
Track Offset Compensation Function. . . . .	964
Track Search Function . . . . .	990
Write Bursts Function. . . . .	993
Auto Alignment Function. . . . .	1008
<b>4. Function Reference for Measurement using Oscilloscope</b>	
Setup Function . . . . .	1019
Data Acquisition Function . . . . .	1028
Wave Analysis Function. . . . .	1041
Dipulse Extraction NLTS Function . . . . .	1049
Time Correlation NLTS Functions . . . . .	1055
<b>5. Function Reference for Measurement using Agilent 4396B</b>	
Spectrum measurement using 4396B . . . . .	1064
Spectral SNR Measurement Using 4396B . . . . .	1080
Channel Bit Rate Sweep Measurement Using 4396B . . . . .	1092
Roll Off Measurement Using 4396B . . . . .	1099
<b>A. Manual Changes</b>	
Service Release for Revision B.02.50 from Revision B.02.20 . . . . .	1110
Changes in Revision B.02.20 from Revision B.02.00 . . . . .	1111
Changes in Revision B.02.00 from Revision B.01.20 . . . . .	1112
Changes in Revision B.01.20 from Revision B.01.10.01. . . . .	1113
Service Release for Revision B.01.00 . . . . .	1114
Changes in Revision B.01.00 from Revision A.04.30.03 . . . . .	1115
Service Release for Revision A.04.30 . . . . .	1116
Changes in Revision A.04.30 from Revision A.04.30.04 . . . . .	1117
Service Release for Revision A.04.20 . . . . .	1118

---

## Contents

Changes in Revision A.04.20 from Revision A.04.10 . . . . .	1119
Changes in Revision A.04.10 from Revision A.04.00.01. . . . .	1120
Service Release for Revision A.04.00 . . . . .	1121
Changes in Revision A.04.00 from Revision A.03.81.04. . . . .	1122
Service Release for Revision A.03.81 . . . . .	1123
Changes in Revision A.03.81 from Revision A.03.70 . . . . .	1124
Changes in Revision A.03.70 from Revision A.03.60 . . . . .	1126
Changes in Revision A.03.60 from Revision A.03.50 . . . . .	1127
Changes in Revision A.03.50 from Revision A.03.40 . . . . .	1129
Changes in Revision A.03.40 from Revision A.03.30 . . . . .	1130
Changes in Revision A.03.30 from Revision A.03.2x . . . . .	1132
Changes in Revision A.03.2x from Revision A.03.10 . . . . .	1134
Changes in Revision A.03.1x from Revision A.03.0x . . . . .	1135
Changes at Revision A.3.01 from Revision A.3.00 . . . . .	1137
Changes in Revision A.03.00 from Revision A.02.1x . . . . .	1138
Changes in Revision A.02.1x from Revision A.02.0x . . . . .	1139





---

**1 Introduction**

## **Introduction**

Welcome to the Agilent Technologies E5022/E5023 Programming Manual. This manual provides the information on measurement functions of E5022/E5023 used for programming.

### **About This Manual**

This Manual contains the following chapters:

- Chapter 1, Introduction : gives an overview of the product.
- Chapter 2, Programming : describes how to make a program and provides example programs in Visual Basic.
- Chapter 3, Function Reference : provides information on measurement functions for the Agilent E5022/E5023.
- Chapter 4, Function Reference for measurement using oscilloscope: provides information on measurement functions when oscilloscope is used. The oscilloscope is provided as a option.
- Chapter 5, Function Reference for measurement using the 4396B: provides information on measurement functions when the 4396B is used. The 4396B is not a part of the E5022/E5023 system, however, you can connect your own the 4396B with the E5022/E5023.
- Appendix A, Manual Changes : provides information on changes and updated versions of the manual.

### **Other Manuals for Programming**

User-defined Sequence (UDS) Programming is described in the UDS Programming Manual. The UDS, individual test sequence such as write offset, erase, write etc. has been provided as a call function to allow the user to create his own measurement sequence.

The programming information for the E5039A/B/C is provided in the E5022/E5023 Programming Manual for the E5039A/B/C.

### **Agilent E5022/E5023 Programming Overview**

The Agilent E5022/E5023 uses a PC to control the system. The operating system of the PC is Microsoft Windows 95/2000. The measurement library and applications are already installed in the PC at the factory.

The measurement library and applications that have been pre-installed are as follows :


- VEE (Visual Engineering Environment)
- Agilent I/O Library

- Agilent E5022/E5023 Software (libraries and sample programs, an installer program)

The driver of each component (instruments and spinstand) controls the system hardware. The Dynamic Link Library (DLL) named “hpe5022\_32.dll” controls each of the instrument driver. Users can access the DLL using applications such as Visual Basic, C and VEE.

The structure of the system software is shown in Figure 1-1.

**Figure 1-1** System Software

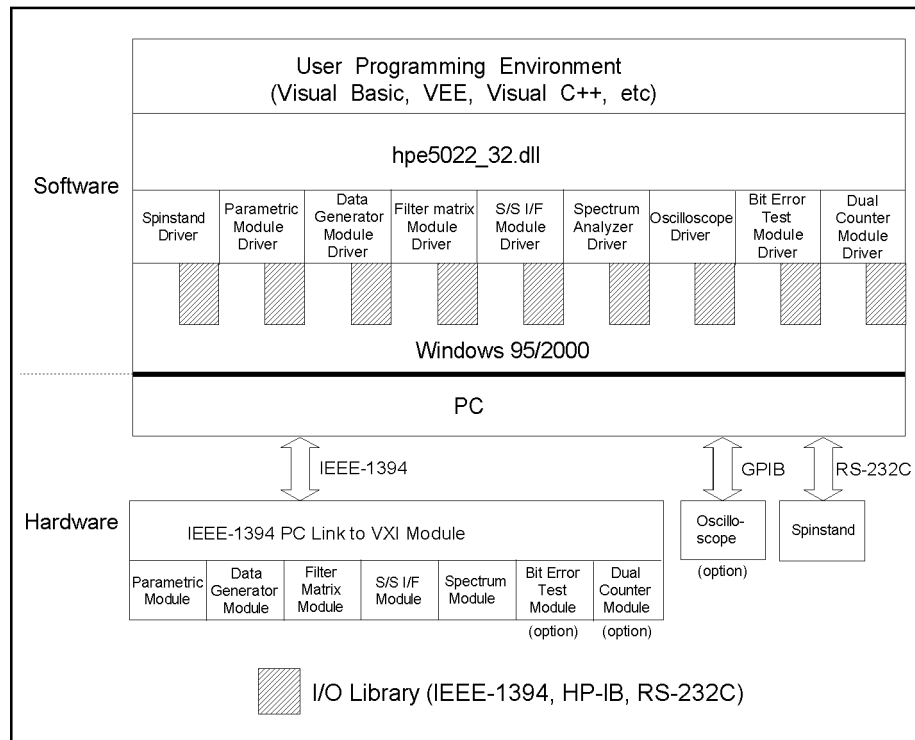

e5022ape01001



---

## **2 Programming**

## Programming Preparation

This section describes the preparations that you have to undertake before you run the program.

### DLLs, Include and Library files

All required DLLs, include and import library files have already been pre-installed at the factory.

#### Importing the library and including declaration file

You must import the library file and include the declaration file at the beginning of every program that contains Agilent Technologies E5022/E5023 function calls.

For Visual Basic, the file “hpe5022.bas” under the directory “c:\Program Files\Agilent\E5022\include” should be added in the development environment as an object. When your system has E5039A/B/C, “hpe5022\_BER.bas” under the same directory should be added. As path to the “c:\Program Files\Agilent\E5022\bin” directory is set when you install the Agilent Technologies E5022/E5023 software, the “hpe5022\_32.dll” file is referred from any directories.

For C language, the file “hpe5022.h” under the directory “c:\Program Files\Agilent\E5022\include” should be included. The file named “hpe5022\_32.lib” under the directory “c:\Program Files\Agilent\E5022\lib” should be linked.

For VEE, the file “hpe5022\_32.dll” under the directory “c:\Program Files\Agilent\E5022\bin” should be imported. The file named “hpe5022\_vee.h” under the directory “c:\Program Files\Agilent\E5022\include” should be included as a definition file.

#### Upgrading the System Software

Upgrading the system software allows you to upgrade the DLLs, include and library files. This allows you to install newly incorporated functions of the firmware into each module, such as E5035A through the VXI bus. The latest system software can be downloaded from the “<http://dst.tm.agilent.com>”.

### Before Running the Program

Before you run the program, the VXI mainframe and spinstand should be turned ON.

### When trouble occurs during programming

When you develop a program, you might encounter a programming error due to bugs within the program. This section provides some tips on how to exit and debug the program.

The initialization of the system requires you to execute the “hpe5022\_init” function. The closing requires you to perform the “hpe5022\_close” function to close the programming.

#### If you fail to initialize:

If you can neither initialize nor close the system when you run the program, you should try quitting the applications such as Visual Basic or VEE. And run it again to initialize the system.

If this fails to work, reboot your PC.

**If Visual Basic or C application often aborts:**

If your application program often aborts, check if the array size of your program is correct. For example: the “hpe5022\_stabilityData\_Q” function has 3 parameters with the last parameter being in array form. If the size of the array is more or less than the correct number, you may encounter this trouble.

**If an error occurs:**

The program will stop when an error occurs. If the system is already running, it is recommended NOT to quit the program at once. Instead of quit, you had better to PAUSE the program and de-bug program then re-start your program.

When you quit the program and start it again, you may not be able to close nor reset the system even if the same handle number is used. This is because the resource is no longer in the PC memory.

## Programming Concept

This section describes the programming concept before you develop a program.

### Example Measurement Procedure

The example measurement procedure is provided in this section. The procedures listed below are categorized in seven steps.

- Step 1.** Initialization: This step sets the address for each module, initializes all modules, and gets the handle number. The handle number is a given system number to control the system.
- Step 2.** Disk/Head Configuration and Drive On: This step specifies the spindrive configuration such as the spindle rpm, the data area and head position. After configuring the disk/head, you need to turn the drive-on in order to rotate the spindle and load the head.
- Step 3.** Auto Configuration (Setting Input Range): This step optimizes the input level control and sets the reference PW (pulse width) value.
- Step 4.** Common Measurement Parameters and Precompensation Setup: This step configures the bit error rate, data pattern and the precompensation setting that are used in every measurement.
- Step 5.** Measurement: This step is used to setup the measurements' own settings and measures the parameter, and queries the result.
- Step 6.** Aborting: This step is used to abort long measurements such as BER, Spectral SNR and Spectrum measurement. (This step is optional)
- Step 7.** Closing: This step turns the drive off and closes the system.

In actual measurement, the procedure listed above contains a group of functions that operate under each step, whose definition and operating parameters are described in chapter 3.

### Two Sequence Types for Measurement

Since Agilent E5022/E5023 is designed for both laboratory and manufacturing users, two kinds of functions are provided for measurement sequence. One is for an easy of use and another is for a high through-put. The easy-of-use function is called as "At-once-measurement". While the through-put function is called as "Setup-then-measure measurement".


#### At-once-measurement

In "At-once-measurement", measurement is performed immediately after setup. The functions named "hpe5022\_measure..." is in this category. For example, a TAA measurement, the "hpe5022\_measureTaa" function is performed, then Agilent E5022/E5023 measures the TAA immediately, after that you can get the measurement result by the corresponding query function, such as the "hpe5022\_taa\_Q" function.

After executing one measurement, you can change the parameters which were set in step 4 (Measurement Common Parameters and Precompensation Setup).



**Figure 2-1. At-once-measurement Sequence**

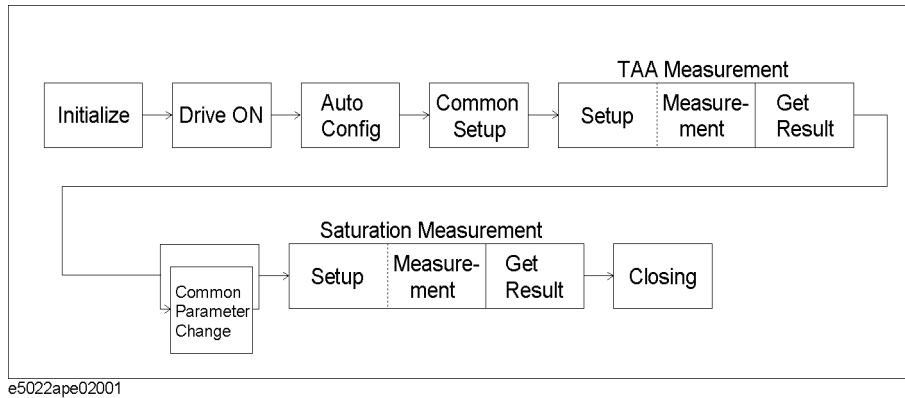


**Setup-then-measure Measurement**

"Setup-then-measure measurement" allows you to have a high through-put measurement when the same sequence measurement is performed. Twenty-five measurement setups can be performed in advance. However when software Revision 3.30 and later revision is installed approximately 50 sequences can be set up. The test numbers from 1 to 25 (for software Rev 3.30 and above approximately 50 can be set up) are assigned to the each measurement. After setting up all measurements, they are executed and the results are retrieved. The functions named "hpe5022\_setup..." is in this category.

For example, TAA measurement, even if the "hpe5022\_setupTaa" function is performed, the measurement is not executed. This function only setups the parameter and assigns the test number. The "hpe5022\_measure" function actually performs the measurement. The measurement result is returned by the corresponding query function, such as the "hpe5022\_taa\_Q" function.

You can change the common parameters which is specified in step 4 between measurements.

**Figure 2-2. Setup-then-measure Measurement Sequence**

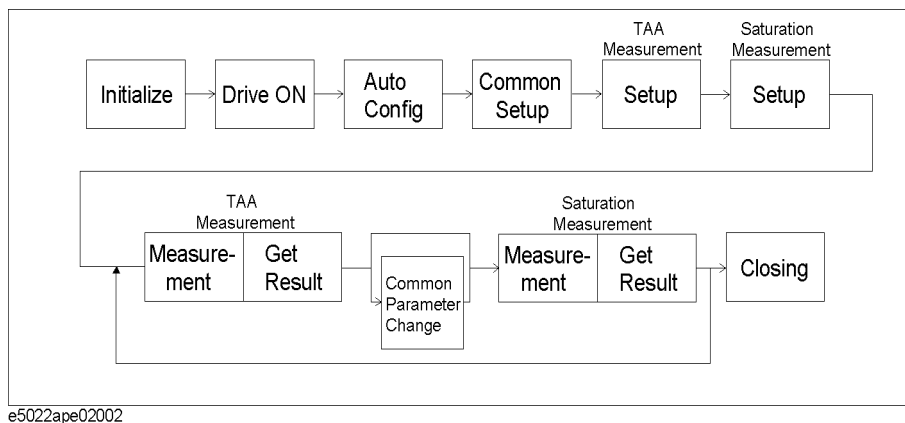

Programming

## Example Program

This section describes the example programs for typical measurements. The program for each measurement is provided as an example of the “at-once measurement”. An example of the “setup-then-measure measurement” is provided at the last section. The sample program is saved at the directory named “c:\Program Files\Agilent\E5022\doc\vb\”. Sample1 is “at-once measurement” program, sample2 is a “setup-then-measure measurement” program.

Measurement Sequence is basically divided into six steps; Initializing, Drive On, Auto Configuration, Common Setup & Precompensation Setup, Measurement, aborting and Closing. The following sections provides the sample program and the description for each step.

### Step 1. Initialization

The initialization step includes setting the address, initializing the system and to get the handler ID. This section explains an error handling subroutine for every function.

#### Example 2-1. Sample Program

```
Option Explicit
Dim Hpe5022 As Long
Dim Hpe5022abort As Boolean
Private Sub ErrorCheck(ErrorStatus As Long)
Dim ErrorMessage As String * 500
    '
    ' Check if Error Occurs
    '
    If ErrorStatus <> 0 Then
        '
        ' Get Error Message and Status Number
        '
        Call hpe5022_error_message(Hpe5022, ErrorStatus, ErrorMessage)
        '
        ' Display Error Message
        '
        Call MsgBox(ErrorMessage + " (" + Hex(ErrorStatus) + ") ", vbOKOnly, "Error")
    End If
End Sub
Private Sub CmdInitialize_Click()
    '
    ' Instrument Address Set (This exapmple for Option 102 and E5039A)
    '
    Const NumberOfInstrument As Integer = 6
    '
    Dim status, StatusArray(NumberOfInstrument - 1) As Long
    Dim rsrc As rsrcArrayType
    Dim ModuleNo As Integer
```

```

Dim i As Integer
Dim ModuleDescription As Variant
Dim ComponentName As instrNameType
Dim ComponentRev As revType
Dim ComponentSN As serialType
Dim errormessage As String * 100
Dim DLLRevision As String * 10
Dim Disp As String
Dim CompName As String
Dim CompRev As String
Dim CompSn As String

ModuleDescription = Array("E5035A ", "E5036A ", "E5037A ", "E5038A ", _
                          "E5040A ", "Spinstand ", "Oscilloscope ", "E5039A ", "E5041A")

'
' Instruments Address Set
'
rsrc.instr(0) = "VXI0::5::INSTR" ' E5035A Spinstand I/F Module
rsrc.instr(1) = "VXI0::6::INSTR" ' E5036A FilterMatrix Module
rsrc.instr(2) = "VXI0::7::INSTR" ' E5037A Data Generator Module
rsrc.instr(3) = "VXI0::8::INSTR" ' E5038A Parametric Module
rsrc.instr(4) = "VXI0::10::INSTR" ' E5040A Spectrum Measurement Module
rsrc.instr(5) = "ASRL1::INSTR" ' E5010B Spinstand

'
' rsrc.instr(6) = "GPIB0::7::INSTR" ' Oscilloscope
' rsrc.instr(7) = "VXI0::9::INSTR" ' E5039A BER Module
' rsrc.instr(8) = "VXI0::11::INSTR" ' E5041A Counter Module
'
' Initialize and Get Handle ID
'
status = hpe5022_init(NumberOfInstrument, rsrc, StatusArray(0), HpE5022)

' Error Handle
'
If status = 0 Then
    Call MsgBox("Initialize Succeed", vbOKOnly, "Message")
Else
    For ModuleNo = 0 To NumberOfInstrument - 1
        If StatusArray(ModuleNo) <> 0 Then
            Call hpe5022_error_message(HpE5022, StatusArray(ModuleNo), errormessage)
            Call MsgBox(ModuleDescription(ModuleNo) + " " + errormessage, vbOKOnly, "Error")
        End If
    Next ModuleNo
End

End If

' E5022/E5023 System Firmware Query
'
ErrorCheck hpe5022_revision_query(HpE5022, DLLRevision)

```

## Programming Example Program

```
' E5022/E5023 Component Revision Query
'
With ComponentName
For i = LBound(.instr) To UBound(.instr)
    .instr(i) = Space(hpe5022_MESSAGE_LENGTH_MAX)
Next i
End With
With ComponentRev
For i = LBound(.instr) To UBound(.instr)
    .instr(i) = Space(hpe5022_MESSAGE_LENGTH_MAX)
Next i
End With
With ComponentSN
For i = LBound(.instr) To UBound(.instr)
    .instr(i) = Space(hpe5022_MESSAGE_LENGTH_MAX)
Next i
End With
'
ErrorCheck hpe5022_subIdn_Q(HpE5022, ComponentName, ComponentRev, ComponentSN)
'
Disp = ""
For ModuleNo = 0 To NumberOfInstrument - 1
    '
    ' Delete Space
    '
    CompName = Trim(ComponentName.instr(ModuleNo))
    CompRev = Trim(ComponentRev.instr(ModuleNo))
    CompSn = Trim(ComponentSN.instr(ModuleNo))
    '
    ' Delete a end character
    '
    Disp = Disp + Left(CompName, Len(CompName) - 1) + vbCrLf + _
        "Rev: " + Left(CompRev, Len(CompRev) - 1) + vbCrLf + _
        "S/N: " + Left(CompSn, Len(CompSn) - 1) + vbCrLf + vbCrLf
Next ModuleNo
'
' Display the Handle ID and Firmware Revision
'
lblID.Caption = HpE5022
LblRevisionNo.Caption = DLLRevision
LblResult.Caption = Disp
'
End Sub
```

### Description

The variable parameter named “HpE5022” should be defined as long in the general declaration. This is for the handle number.

The subroutine named “ErrorCheck” is an error handler procedure. When an error occurs on every function after

initialization, this subroutine returns the error message. This subroutine is used in every function call in the following examples.

The subroutine named “CmdInitialized\_Click” is an initialization program. The instrument address depends on the option. See the “hpe5022\_init” function.

**Used Functions in this Step**

“hpe5022\_init” on page 91

“hpe5022\_error\_message” on page 107

## Programming Example Program

### Step2. Disk/Head Configuration and Drive ON

This step configures the drive such as data area of the disk, head position, and spindle rpm. After configuration, the drive is turned on to rotate the spindle and to load the head.

#### Example 2-2. Sample Program

```
Private Sub CmdDriveOn_Click()  
Const SpindleRPM As Long = 5400 ' Spindle Revolution Speed [rpm]  
,  
Const PivotToCenter As Double = 0.058 ' Distance between Pivot and Center [Meter]  
Const PivotToGap As Double = 0.052 ' Distance between Pivot to Gap [Meter]  
Const SliderGap As Double = 0.00033 ' Distance of Slidier Gap [Meter]  
,  
Const RefBoss As Double = 0.0136 ' Distance between Reference Point and Boss Center [Meter]  
Const TipBoss As Double = 0.0146 ' Distance between Tip and Boss Center [Meter]  
Const BottomBoss As Double = 0.0015 ' Distance between Bottm and Boss Center [Meter]  
Const BossId As Double = 0.00147 'Innner Diameter of Boss [Meter]  
,  
Const CassetteID As String = "E5010-61125" ' HP Part Number of Cassette  
,  
Const InhibitMargin As Double = 0.001 ' Inhibit Area Magin [Meter]  
,  
Const IDRRadius As Double = 0.023 ' Radius of the Inmost Track [Meter]  
Const TrackPitch As Double = 0.000003 ' Length of Track Pitch [Meter]  
Const NumOfTrack As Long = 5000 ' Number of Tracks  
Const HeadLoadRadius As Double = 0.039 ' Radius where the Head is loaded [Meter]  
Const InitialTrackNo As Long = 3000 ' Initial Track Number at Head Loading  
,  
' Set Spindle RPM  
,  
ErrorCheck hpe5022_spindleSpeed(HpE5022, SpindleRPM)  
,  
' Set Drive Configuration  
'(You can use the function of either "hpe5022_driveConfigRadiusSkew" or "hpe5022_driveConfigPivot".  
' In this example, hpe5022_driveConfigPivot is used.)  
,  
ErrorCheck hpe5022_driveConfigPivot(HpE5022, PivotToCenter, PivotToGap)  
,  
' Set the HP Part Number of Cassette  
,  
ErrorCheck hpe5022_hgaCassette(HpE5022, CassetteID)  
,  
' Set HGA DIMension  
,  
ErrorCheck hpe5022_hgaDimension(HpE5022, RefBoss, SliderGap, TipBoss, BottomBoss, BossId)  
,  
' Set Inhibit Area Margin  
,  
ErrorCheck hpe5022_inhibitMargin(HpE5022, InhibitMargin)
```

```
'  
' Set Track Format  
'  
ErrorCheck hpe5022_dataArea(HpE5022, IDRRadius, NumOfTrack, TrackPitch)  
'  
' Set Head Road Radius and Initial Track Number  
'  
ErrorCheck hpe5022_headLoadConfig(HpE5022, hpe5022_LOAD_DYNAMIC, HeadLoadRadius, InitialTrackNo)  
'  
' Drive On (Motor On, Head Load)  
'  
ErrorCheck hpe5022_driveState(HpE5022, VI_TRUE)  
'  
Call MsgBox("Spindle is running, Head is loaded", vbOKOnly, "Message")  
'  
End Sub
```

### Description

After turning the drive on, you cannot change the parameters which have been specified in this section. You must turn off the drive if you want to change the parameter such as spindle rpm.

### Used Functions in this Step

“hpe5022\_spindleSpeed” on page 213

“hpe5022\_driveConfigPivot” on page 154

“hpe5022\_dataArea” on page 180

“hpe5022\_headLoadConfig” on page 192

“hpe5022\_driveState” on page 209

## Programming Example Program

### Step 3. Auto Configuration (Setting Input Range)

The auto configuration optimizes the input range and sets the reference pulse width (PW) for the parametric module. See Chapter 4 of the Operation Manual for more details.

#### Example 2-3. Sample Program

```
Private Sub CmdAutoConfig_Click()  
Const WriteCurrent As Double = 0.035 ' Write Current [Ampere]  
    Const SenseCurrent As Double = 0.008 ' Sense Current [Ampere]  
    Const EraseCurrent As Double = 0.035 ' Erase Current [Ampere]  
    '  
    Dim ConfigureInputRange As Integer  
    Dim taa As Double, pwLength As Double, InputLevel As Double, PWreference As Double  
    '  
    ' Set Write/Sense/Erase Parameters  
    '  
    ErrorCheck hpe5022_writeCurrent(HpE5022, WriteCurrent)  
    ErrorCheck hpe5022_senseCurrent(HpE5022, SenseCurrent)  
    ErrorCheck hpe5022_eraseCurrent(HpE5022, EraseCurrent)  
    '  
    ' Set Erase Type for DC Erase  
    '  
    ErrorCheck hpe5022_eraseType(HpE5022, hpe5022_ERASE_DC_NEG)  
    LblResult.Caption = "Write Current: " + Format(WriteCurrent, "0.00E-##A") + vbCrLf _  
        + "Sense Current: " + Format(SenseCurrent, "0.00E-##A") + vbCrLf  
    '  
    ' Perform Auto Configuration  
    '  
    ConfigureInputRange = 1 ' 1: Auto Configuration, 2: Input typical TAA and PW length of an Isolated Pulse  
    '                               3: Input actual input level and PW length  
    '  
    Select Case ConfigureInputRange  
    Case 1  
        ErrorCheck hpe5022_measurementMode(HpE5022, hpe5022_MEAS_AUTO)  
        ErrorCheck hpe5022_autoConfig(HpE5022, taa, pwLength)  
        Call MsgBox("Auto Config Done" + vbCrLf + "TAA:" + Format(taa, "0.00E-##") + " V ," + _  
            " PW:" + Format(pwLength, "0.00E-##") + " sec.", vbOKOnly, "Message")  
    Case 2  
        taa = 0.04  
        pwLength = 0.000002  
        ErrorCheck hpe5022_measurementMode(HpE5022, hpe5022_MEAS_AUTO)  
        ErrorCheck hpe5022_isolatedPulseReference(HpE5022, taa, pwLength)  
        Call MsgBox("Input Range Setting Done", vbOKOnly, "Message")  
    Case 3  
        InputLevel = 0.04  
        PWreference = 0.000002  
        ErrorCheck hpe5022_measurementMode(HpE5022, hpe5022_MEAS_MAN)  
        ErrorCheck hpe5022_inputRange(HpE5022, InputLevel)  
        ErrorCheck hpe5022_pwReference(HpE5022, PWreference)  
        Call MsgBox("Input Range Setting Done", vbOKOnly, "Message")  
    End Select  
    '  
    '
```



End Sub

### Description

Generally, as long as you continue to measure the same kind of head and without changing the sense/write current greatly, it is not necessary to perform this again. If you change the head under test and seems that the input signal level has changed significantly, then you should perform this again.

As the write, sense and erase currents are related with the auto configuration, you should specify these parameters within its limits before performing the auto configuration.

### Used Functions in this Step

“hpe5022\_writeCurrent” on page 323

“hpe5022\_senseCurrent” on page 336

“hpe5022\_eraseCurrent” on page 358

“hpe5022\_eraseType” on page 355

“hpe5022\_measurementMode” on page 254

“hpe5022\_autoConfig” on page 257

## Programming Example Program

### Step 4. Measurement Common Parameter and Precompensation Setup

This setup specifies the parameters related with most measurements such as read/write track offset and precompensation.

#### Example 2-4. Sample Program

```
Private Sub CmdCommonSetup_Click()  
    Const PeriodOfHFPattern As Integer = 2 ' Transition Period for HF Pattern  
    Const PeriodOfLFPattern As Integer = 4 ' Transition Period for LF Pattern  
    Const PeriodOfIsolatedPattern As Integer = 12 ' Transition Period for Isolated Pulse Pattern  
    Const PeriodOfRepetitivePattern As Integer = 10 ' Transition Period for Repetitive Pattern  
    Const FactorOfPRBS As Long = 137 ' Factor of Pseudo Random Pattern (x^7+x^3+x^1: 137=2^7+2^3+1)  
    ,  
    Const UserDefDataLen As Integer = 16 ' User Defined Data Pattern Length  
    Const UserDefPattern As String = "0100100010010001" ' Uer Defined Data Pattern (Binary Case)  
    ,  
    Const ChannelBitRate As Double = 276000000# ' Channel Bit Rate [bps]  
    ,  
    Const WriteTrackOffset As Double = 0 ' Write Track Offset [Meter]  
    Const ReadTrackOffset As Double = -0.00000041 ' Read Track Offset [Meter]  
    ,  
    Const TrackNo As Long = 3000 ' Track Number for Measurement  
    Const rpm As Long = 6000 ' Spindle Speed [rpm]  
    ,  
    Const EraseFrequency As Double = 100000000# ' Erase Frequency for AC Erase [Flux]  
    ,  
    Const timeout As Double = 1 'Waiting time [sec]  
    ,  
    ' Select Filter in the Filter Matrix Module  
    ,  
    ErrorCheck hpe5022_selectFilter(HpE5022, hpe5022_FILTER0)  
    ,  
    ' Set Test Data Patterns' Transition Period  
    ,  
    ErrorCheck hpe5022_hfPattern(HpE5022, PeriodOfHFPattern)  
    ErrorCheck hpe5022_lfPattern(HpE5022, PeriodOfLFPattern)  
    ErrorCheck hpe5022_isolatedPulsePattern(HpE5022, PeriodOfIsolatedPattern)  
    ErrorCheck hpe5022_repetitivePattern(HpE5022, PeriodOfRepetitivePattern)  
    ErrorCheck hpe5022_prbsPattern(HpE5022, FactorOfPRBS)  
    ,  
    ' Set User Defined Test Pattern  
    ,  
    ErrorCheck hpe5022_userPattern(HpE5022, hpe5022_USER_DATA_BIN, UserDefDataLen, UserDefPattern) ' ,  
    ,  
    ,
```

```

' Set Channel Bit Rate
'
ErrorCheck hpe5022_channelBitRate(HpE5022, ChannelBitRate)
'
' Set Read Track Offset
'
ErrorCheck hpe5022_readTrackOffset(HpE5022, ReadTrackOffset)
'
' Set Write Track Offset
'
ErrorCheck hpe5022_writeTrackOffset(HpE5022, WriteTrackOffset)
'
' Set Track Number
'
ErrorCheck hpe5022_track(HpE5022, TrackNo)
'
' Set Erase Frequency for AC Erase
'
ErrorCheck hpe5022_eraseAcFrequency(HpE5022, EraseFrequency)
'
' Change Spindle Speed
'
ErrorCheck hpe5022_spindleSpeed(HpE5022, rpm)
'
' Set the time to wait
'
ErrorCheck hpe5022_wai(HpE5022, timeout)
'
Call MsgBox("Common Setup Done", vbOKOnly, "Message")
End Sub

```

## Description

The parameters in this section can be changed any time before and after each measurement. For example, when you want to change the channel bit rate after executing the measurement, you can perform the “hpe5022\_channelBitRate” function after measurement. Of course, these parameters can be set before the drive on and the auto configuration.

## Used Functions in this Step

“hpe5022\_selectFilter” on page 149

“hpe5022\_hfPattern” on page 122

“hpe5022\_lfPattern” on page 124

“hpe5022\_isolatedPulsePattern” on page 126

“hpe5022\_prbsPattern” on page 128

Programming  
**Example Program**

“hpe5022\_repetitivePattern” on page 131

“hpe5022\_userPattern” on page 140

“hpe5022\_channelBitRate” on page 116

“hpe5022\_readTrackOffset” on page 219

“hpe5022\_writeTrackOffset” on page 222

“hpe5022\_track” on page 229

“hpe5022\_eraseAcFrequency” on page 360

## Precompensation Setup

The precompensation function allows you to delay a write timing for a specified pattern.

### Example 2-5. Sample Program

```
Private Sub CmdPrecompensation_Click()
Dim preBit As Integer, postBit As Integer, DelayNo As Integer
    Dim delay(3) As Double
    Dim BinDisplay As Variant
    Dim Disp As String
    BinDisplay = Array("000", "001", "010", "011", "100", "101", "110", "111")
    '
    ' Specifies the Delay Time. ( You can specifies delay time up to three.)
    '
    delay(1) = -0.000000001 ' Delay Time No.1
    delay(2) = 0.000000002 ' Delay Time No.2
    '
    ' Clear Precompensation pattern
    '
    ErrorCheck hpe5022_clearPrecomp(HpE5022)
    '
    ' Assign Delay Time to Precompensation Number
    '
    ErrorCheck hpe5022_precompDelay(HpE5022, hpe5022_PREC_1, delay(1))
    ErrorCheck hpe5022_precompDelay(HpE5022, hpe5022_PREC_2, delay(2))
    '
    ' Set Precompensation Pattern and the Delay Time
    '
    ' For Delay Time 1
    '     The delay time of the pattern of "*11x***" is set at the Value of Delay(1)
    '     (ie. x:target bit, *:wild card(0 or 1))
    '
    ErrorCheck hpe5022_precompPattern(HpE5022, hpe5022_PREC_PAT_11, hpe5022_PREC_PAT_X, hpe5022_PREC_1)
    '
    ' For Delay Time 2
    '     The delay time of the following pattern is set at the Value of Delay(2)
    '
    '     "001x011", "001x110", "101x110" (ie. x: Target bit)
    '     (These patterns had better not duplicate with the pattern for the other delay time.
    '     In this case, the "001x011", "001x110", "101x110" had better not be included of "*11x***"..
    '     If there is duplicated, the later setting is valid. The setting is overwaped.)
    '
    ErrorCheck hpe5022_precompPattern(HpE5022, hpe5022_PREC_PAT_001, hpe5022_PREC_PAT_011, hpe5022_PREC_2)
    ErrorCheck hpe5022_precompPattern(HpE5022, hpe5022_PREC_PAT_001, hpe5022_PREC_PAT_110, hpe5022_PREC_2)
    ErrorCheck hpe5022_precompPattern(HpE5022, hpe5022_PREC_PAT_101, hpe5022_PREC_PAT_110, hpe5022_PREC_2)
    '
    ' Precompensation ON for a Test Data Pattern
    ' (The NLTS 5th harmonic Test Data Pattern has a precompensation in this Example)
    '
    ErrorCheck hpe5022_precompState(HpE5022, hpe5022_PAT_NLTS_5TH, VI_TRUE)
    '
    ' Confirm the Delay Value for All of Patterns
    '

```

## Programming

### Example Program

```
Disp$ = ""
For postBit = hpe5022_PREC_PAT_000 To hpe5022_PREC_PAT_111
  For preBit = hpe5022_PREC_PAT_000 To hpe5022_PREC_PAT_111
    ErrorCheck hpe5022_precompPattern_Q(HpE5022, preBit, postBit, DelayNo)
    If DelayNo <> hpe5022_PREC_OFF Then
      Disp$ = Disp$ + BinDisplay(preBit - hpe5022_PREC_PAT_000) + "x" _
        + BinDisplay(postBit - hpe5022_PREC_PAT_000) _
        + " : Delay Time = " + Format(delay(DelayNo), "0.00E-##") + " sec" + vbCrLf
    End If
  Next preBit
Next postBit
LblResult.Caption = Disp$
End Sub
```

### Description

Agilent E5022/E5023 allows you to have three kinds of delay time for a specified data pattern. Delay time is defined as three bits previous and three bits behind the target bit. You can select which data pattern you want to have a delay to write the data. The “hpe5022\_precompDelay” assigns the delay time to the precompensation numbers 1 to 3. The “hpe5022\_precompPattern” function defines the data patterns which have a precompensation. The “hpe5022\_precompState” function selects which test data patterns have a delay.

The data pattern definition is overlapped until the “hpe5022\_clearPrecomp” is performed, it is recommended to confirm which pattern has a delay after setting it up.

### Used Functions in this Step

“hpe5022\_clearPrecomp” on page 386

“hpe5022\_precompDelay” on page 374

“hpe5022\_precompPattern” on page 377

“hpe5022\_precompState” on page 383

“hpe5022\_precompPattern\_Q” on page 381

## Step 5. Measurement

The Agilent E5022/E5023 provides the following measurements:

- Parametric (measure TAA, PW, Baseline and Resolution at one time)
- TAA
- PW
- Baseline
- Resolution
- Narrow Band TAA (TAA by a spectrum analyzer)
- Parametric Measurement by a Oscilloscope (Waveform Analysis)
- NLTS by 5th Harmonic Method
- NLTS by Dipulse Extraction Method
- NLTS by Time Correlation Method
- Overwrite
- Partial Erasure
- Track Profile
- MicroTrack Profile
- Write Current Sweep
- Sense Current Sweep
- Channel Bit Rate Sweep
- RollOff
- Precompensation Delay Sweep
- Stability
- DC-R

This section will show the sample programs for these measurements.

## Programming Example Program

### Parametric Measurement

Parametric Measurement can measure TAA, PW, Baseline and Resolution at one time. See Chapter 4 of the Operation Manual for measurement definition.

#### Example 2-6. Sample Program

```
Private Sub CmdParametric_Click()  
Const NumOfRevolutionForAverage As Integer = 10 ' Number of Revolutions for Averaging  
    Const PwRatio As Double = 0.5 ' Threshold Level Ratio for PW Measurement  
    Dim HFTaa1 As Double, LFTaa As Double, IsolatedTAA As Double, pw As Double, baseline As Double  
    Dim resolution As Double, HFTaa2 As Double, HFTaaPos As Double, HFTaaNeg As Double, HFTaaAsym As Double  
    Dim HFTAAData() As Double  
    Dim DataSize As Long  
    '  
    ' Set PW ratio and its Reference Level  
    '  
    ErrorCheck hpe5022_pwThreshold(HpE5022, PwRatio, hpe5022_PW_TAA_TRACKED)  
    '  
    ' Measurement  
    '  
    ErrorCheck hpe5022_measureParametric(HpE5022, NumOfRevolutionForAverage)  
    '  
    ' Query Measurement Result  
    '  
    ErrorCheck hpe5022_parametric_Q(HpE5022, HFTaa1, LFTaa, IsolatedTAA, pw, baseline, resolution)  
    ErrorCheck hpe5022_parametricHfTaa_Q(HpE5022, HFTaa2, HFTaaPos, HFTaaNeg, HFTaaAsym)  
    '  
    ErrorCheck hpe5022_parametricHfTaaDataSize_Q(HpE5022, DataSize)  
    ReDim HFTAAData(DataSize - 1)  
    ErrorCheck hpe5022_parametricHfTaaData_Q(HpE5022, hpe5022_DATA_TAA_POS, HFTAAData(0))  
    '  
    ' Display Measurement Result  
    '  
    LblResult.Caption = "HF TAA: " + Format(HFTaa1, "0.00E-##V") + vbCrLf _  
        + "LF TAA: " + Format(LFTaa, "0.00E-##V") + vbCrLf _  
        + "Isolated Pulse TAA: " + Format(IsolatedTAA, "0.00E-##V") + vbCrLf _  
        + "PW: " + Format(pw, "0.00E-##") + "sec" + vbCrLf _  
        + "Baseline: " + Format(baseline, "0.00E-##V") + vbCrLf _  
        + "Resolution: " + Format(resolution, "0.0%")  
    '  
End Sub
```



## Description

For PW measurement, the default ratio is PW50. Refer to “hpe5022\_pwThreshold” function to change the ratio. In Parametric measurement, the HF, LF and Isolated data patterns are used automatically. You don’t need to setup the data patterns by “hpe5022\_selectPattern” function. The HF and LF data patterns are used in TAA and Resolution measurements. While Isolated pattern is used for TAA, PW and Baseline measurements.

After executing the “hpe5022\_measureParametric” function, any query functions related with parametric measurements can be executed to get the measurement results.

As the Agilent E5022/E5023 DLL doesn’t accept Automation SAFEARRAYs directly, you have to pass the first element of the array by reference to pass an entire numeric array. See the Visual Basic On-line Manual for the Automation SAFEARRAY. The “HFTAAData(0)” in line of “hpe5022\_parametricHfTaaData\_Q” passes the first element of the array by reference.

## Functions used in this measurement

“hpe5022\_pwThreshold” on page 428

“hpe5022\_measureParametric” on page 466

“hpe5022\_parametric\_Q” on page 471

“hpe5022\_parametricHfTaa\_Q” on page 473

“hpe5022\_parametricHfTaaDataSize\_Q” on page 475

“hpe5022\_parametricHfTaaData\_Q” on page 476

## Programming Example Program

### TAA Measurement

The TAA Measurement can measure the TAA, TAA positive, TAA negative, TAA asymmetry and statistic data for each of these values. See Chapter 4 of the Operation Manual for the measurement definition.

#### Example 2-7. Sample Program

```
Private Sub CmdTAA_Click()  
Const NumOfRevolutionForAverage As Integer = 10  
    '  
    Dim taa As Double, taaPos As Double, taaNeg As Double, taaAsym As Double, PosMean As Double  
    Dim PosMin As Double, PosMax As Double, PosStdDev As Double, NegMean As Double, NegMin As Double  
    Dim NegMax As Double, NegStdDev As Double, TAAData() As Double  
    Dim DataSize As Long  
    Dim Disp As String  
    Dim i As Integer  
    '  
    ' Select Test Data Pattern  
    '  
    ErrorCheck hpe5022_selectPattern(HpE5022, hpe5022_PAT_HF)  
    '  
    ' Measurement  
    '  
    ErrorCheck hpe5022_measureTaa(HpE5022, hpe5022_SEQ_ER_WR_M, NumOfRevolutionForAverage)  
    '  
    ' Query Measurement Result  
    '  
    ErrorCheck hpe5022_taa_Q(HpE5022, taa, taaPos, taaNeg, taaAsym)  
    ErrorCheck hpe5022_taaStatistic_Q(HpE5022, hpe5022_DATA_TAA_POS, PosMean, PosMin, PosMax, PosStdDev)  
    ErrorCheck hpe5022_taaStatistic_Q(HpE5022, hpe5022_DATA_TAA_NEG, NegMean, NegMin, NegMax, NegStdDev)  
    '  
    ErrorCheck hpe5022_taaDataSize_Q(HpE5022, DataSize)  
    ReDim TAAData(DataSize - 1)  
    ErrorCheck hpe5022_taaData_Q(HpE5022, hpe5022_DATA_TAA_POS, TAAData(0))  
    '  
    ' Display Measurement Result  
    '  
    Disp$ = "TAA :" + vbCrLf _  
        + "TAA: " + Format(taa, "0.00E-##V") + vbCrLf _  
        + "TAA+: " + Format(taaPos, "0.00E-##V") + vbCrLf _  
        + "TAA-: " + Format(taaNeg, "0.00E-##V") + vbCrLf _  
        + "TAA Asym: " + Format(taaAsym, "0.0%") + vbCrLf _  
        + "TAA Positive Statistic: " + vbCrLf _  
        + "Mean: " + Format(PosMean, "0.00E-##V") + vbCrLf _  
        + "Min: " + Format(PosMin, "0.00E-##V") + vbCrLf _  
        + "Max: " + Format(PosMax, "0.00E-##V") + vbCrLf _  
        + "Standard Deviation: " + Format(PosStdDev, "0.00E-##") _  
        + "TAA Negative Statistic: " + vbCrLf _  
        + "Mean: " + Format(NegMean, "0.00E-##V") + vbCrLf _  
        + "Min: " + Format(NegMin, "0.00E-##V") + vbCrLf _  
        + "Max: " + Format(NegMax, "0.00E-##V") + vbCrLf _  
        + "Standard Deviation: " + Format(NegStdDev, "0.00E-##") + vbCrLf  
    Disp$ = Disp$ + vbCrLf + "TAA DATA" + vbCrLf  
    For i = 0 To DataSize - 1
```

```
        Disp$ = Disp$ + Format(TAAData(i), "0.00E-##V") + vbCrLf
    Next i
    LblResult.Caption = Disp$
End Sub
```

### Description

The TAA measurement requires you to select the data pattern. If the required data pattern has already been set before sequence, you do not need to set in this section.

After executing the “hpe5022\_measureTaa” function, any query functions related with TAA measurement can be executed to get the measurement result.

As the Agilent E5022/E5023 DLL doesn't accept Automation SAFEARRAYs directly, you have to pass the first “TAAData(0)” in line of “hpe5022\_taaData\_Q” passes the first element of the array by reference.

### Functions used in this measurement

“hpe5022\_measureTaa” on page 409

“hpe5022\_taa\_Q” on page 414

“hpe5022\_taaStatistic\_Q” on page 416

“hpe5022\_taaDataSize\_Q” on page 418

“hpe5022\_taaData\_Q” on page 419

## Programming Example Program

### PW Measurement

The PW Measurement can measure PW, PW positive, PW negative, PW asymmetry and also the statistic data for each of these values. See Chapter 4 of the Operation Manual for measurement definition.

#### Example 2-8. Sample Program

```
Private Sub CmdPW_Click()  
Const NumOfRevolutionForAverage As Integer = 10 ' Number of Revolutions for Averaging  
    Const PwRatio As Double = 0.5 ' Threshold Level Ratio for PW Measurement  
    Dim pw As Double, pwPos As Double, pwNeg As Double, pwAsym As Double, mean As Double  
    Dim min As Double, max As Double, stdDev As Double, PWData() As Double  
    Dim DataSize As Long  
    Dim Disp As String  
    Dim i As Integer  
    '  
    ' Set the PW ratio and its reference level  
    '  
    ErrorCheck hpe5022_pwThreshold(HpE5022, PwRatio, hpe5022_PW_TAA_TRACKED)  
    '  
    ' Select Test Data Pattern  
    '  
    ErrorCheck hpe5022_selectPattern(HpE5022, hpe5022_PAT_ISO)  
    '  
    ' Measurement  
    '  
    ErrorCheck hpe5022_measurePw(HpE5022, hpe5022_SEQ_ER_WR_M, NumOfRevolutionForAverage)  
    '  
    ' Query Measurement Result  
    '  
    ErrorCheck hpe5022_pw_Q(HpE5022, pw, pwPos, pwNeg, pwAsym)  
    ErrorCheck hpe5022_pwStatistic_Q(HpE5022, hpe5022_DATA_PW_POS, mean, min, max, stdDev)  
    '  
    ErrorCheck hpe5022_pwDataSize_Q(HpE5022, DataSize)  
    ReDim PWData(DataSize - 1)  
    ErrorCheck hpe5022_pwData_Q(HpE5022, hpe5022_DATA_PW_POS, PWData(0))  
    '  
    ' Display Measurement Result  
    '  
    Disp$ = "PW Measurement:" + vbCrLf _  
        + "PW: " + Format(pw, "0.00E-##") + " sec" + vbCrLf _  
        + "PW+: " + Format(pwPos, "0.00E-##") + " sec" + vbCrLf _  
        + "PW-: " + Format(pwNeg, "0.00E-##") + " sec" + vbCrLf _  
        + "PW Asym: " + Format(pwAsym, "0.0%") + vbCrLf _  
        + "PW+ Statistic: " + vbCrLf _  
        + "Mean: " + Format(mean, "0.00E-##") + " sec" + vbCrLf _  
        + "Min: " + Format(min, "0.00E-##") + " sec" + vbCrLf _  
        + "Max: " + Format(max, "0.00E-##") + " sec" + vbCrLf _  
        + "Standard Deviation: " + Format(stdDev, "0.00E-##") + vbCrLf  
    Disp$ = Disp$ + vbCrLf + "PW POS DATA" + vbCrLf
```

```

For i = 0 To DataSize - 1
    Disp$ = Disp$ + Format(PWData(i), "0.00E-##") + vbCrLf
Next i
LblResult.Caption = Disp$
End Sub

```

### **Description**

The PW measurement requires the user to select data pattern. If data pattern has already been set before sequence, then it is not necessary to set up the data pattern in this section.

After executing the “hpe5022\_measurePw” function, any query functions related with the PW measurement can be executed to get the measurement result.

As the Agilent E5022/E5023 DLL doesn't accept Automation SAFEARRAYs directly, you have to pass the first element of the array by reference to pass an entire numeric array. See the Visual Basic On-line Manual for the Automation SAFEARRAY. The “PWData(0)” in line of “hpe5022\_parametricPwData\_Q” passes the first element of the array by reference.

### **Functions used in this measurement**

“hpe5022\_pwThreshold” on page 428

“hpe5022\_selectPattern” on page 119

“hpe5022\_measurePw” on page 431

“hpe5022\_pw\_Q” on page 435

“hpe5022\_pwStatistic\_Q” on page 440

“hpe5022\_pwDataSize\_Q” on page 437

“hpe5022\_pwData\_Q” on page 438

## Programming Example Program

### Baseline Measurement

The Resolution Measurement can measure Baseline, Baseline positive, Baseline negative, separation and also the statistic data for each of these values. See Chapter 4 of the Operation Manual for the measurement definition.

#### Example 2-9. Sample Program

```
Private Sub CmdBaseline_Click()  
Const NumOfRevolutionForAverage As Integer = 10  
    '  
    Dim baseline As Double, BLPos As Double, BLNeg As Double, Separation As Double  
    Dim mean As Double, min As Double, max As Double, stdDev As Double, BLData() As Double  
    Dim DataSize As Long  
    '  
    ' Select Test Data Pattern  
    '  
    ErrorCheck hpe5022_selectPattern(HpE5022, hpe5022_PAT_ISO)  
    '  
    ' Measurement (Measurement Sequence: Erase -> Write -> Measurement)  
    '  
    ErrorCheck hpe5022_measureBaseline(HpE5022, hpe5022_SEQ_ER_WR_M, NumOfRevolutionForAverage)  
    '  
    ' Query Measurement Result  
    '  
    ErrorCheck hpe5022_baseline_Q(HpE5022, baseline, BLPos, BLNeg, Separation)  
    ErrorCheck hpe5022_baselineStatistic_Q(HpE5022, hpe5022_DATA_BL_POS, mean, min, max, stdDev)  
    '  
    ErrorCheck hpe5022_baselineDataSize_Q(HpE5022, DataSize)  
    ReDim BLData(DataSize - 1)  
    ErrorCheck hpe5022_baselineData_Q(HpE5022, hpe5022_DATA_BL_POS, BLData(0))  
    '  
    ' Display Measurement Result  
    '  
    LblResult.Caption = "Baseline :" + vbCrLf _  
        + "Baseline: " + Format(baseline, "0.00E-##V") + vbCrLf _  
        + "Baseline Pos: " + Format(BLPos, "0.00E-##V") + vbCrLf _  
        + "Baseline Neg: " + Format(BLNeg, "0.00E-##V") + vbCrLf _  
        + "Separation: " + Format(Separation, "0.00E-##V") + vbCrLf _  
        + "Baseline Positive Statistic: " + vbCrLf _  
        + "Mean: " + Format(mean, "0.00E-##V") + vbCrLf _  
        + "Min.: " + Format(min, "0.00E-##V") + vbCrLf _  
        + "Max.: " + Format(max, "0.00E-##V") + vbCrLf _  
        + "Standard Deviation: " + Format(stdDev, "0.00E-##")  
End Sub
```

#### Description

The baseline measurement requires you to select the data pattern. If the required data pattern has already been set before sequence, you do not need to set in this section.

After executing the “hpe5022\_measureBaseline” function, any query functions related with the baseline measurement can be executed to get the measurement result.

As the Agilent E5022/E5023 DLL doesn't accept Automation SAFEARRAYs directly, you have to pass the first element of the array by reference to pass an entire numeric array. See the Visual Basic On-line Manual for the Automation SAFEARRAY. The “BLData(0)” in line of “hpe5022\_baselineData\_Q” passes the first element of the

array by reference.

**Functions used in this measurement**

“hpe5022\_selectPattern” on page 119

“hpe5022\_measureBaseline” on page 447

“hpe5022\_baseline\_Q” on page 452

“hpe5022\_baselineStatistic\_Q” on page 457

“hpe5022\_baselineDataSize\_Q” on page 454

“hpe5022\_baselineData\_Q” on page 455

## Programming Example Program

### Resolution Measurement

The Resolution Measurement can measure the resolution and its statistic data. See Chapter 4 of the Operation Manual for measurement definition.

#### Example 2-10. Sample Program

```
Private Sub CmdResolution_Click()  
Const NumOfRevolutionForAverage As Integer = 10 ' Number of Revolutions for Averaging  
    Dim resolution As Double, mean As Double, min As Double, max As Double, stdDev As Double  
    Dim ResolutionData() As Double  
    Dim DataSize As Long  
    '  
    ' Measurement  
    '  
    ErrorCheck hpe5022_measureResolution(HpE5022, NumOfRevolutionForAverage)  
    '  
    ' Query Measurement Result  
    '  
    ErrorCheck hpe5022_resolution_Q(HpE5022, resolution)  
    ErrorCheck hpe5022_resolutionStatistic_Q(HpE5022, mean, min, max, stdDev)  
    '  
    ErrorCheck hpe5022_resolutionDataSize_Q(HpE5022, DataSize)  
    ReDim ResolutionData(DataSize - 1)  
    ErrorCheck hpe5022_resolutionData_Q(HpE5022, ResolutionData(0))  
    '  
    ' Display Mesurement Result  
    '  
    LblResult.Caption = "Resolution :" + vbCrLf _  
        + "Resolution: " + Format(resolution, "0.0%") + vbCrLf _  
        + "Resolution Statistic: " + vbCrLf _  
        + "Mean: " + Format(mean, " 0.0%") + vbCrLf _  
        + "Min.: " + Format(min, "0.0%") + vbCrLf _  
        + "Max.: " + Format(max, "0.0%") + vbCrLf _  
        + "Standard Deviation: " + Format(stdDev, "0.00E-###")  
  
End Sub
```

#### Description

The HF and the LF data patterns are used in this measurement automatically.

#### Functions used in this measurement

“hpe5022\_measureResolution” on page 501

“hpe5022\_resolution\_Q” on page 506

“hpe5022\_resolutionStatistic\_Q” on page 509



## Narrow Band TAA Measurement

Narrow Band TAA measurement can measure the TAA. Since this TAA is measured not by a parametric module but by a spectrum analyzer, you can measure low signal amplitude level. However, the measurement speed will be slower than the one using a parametric module. See Chapter 4 of the Operation Manual for its measurement definition.

### Example 2-11. Sample Program

```
Private Sub CmdNarrowBandTAA_Click()
Const NumOfRevolutionForAverage As Integer = 10
    Dim NarrowBandTAA As Double, mean As Double, min As Double, max As Double
    Dim stdDev As Double, TAAData() As Double
    Dim DataSize As Long
    '
    ' Select Test Data Pattern
    '
    ErrorCheck hpe5022_selectPattern(HpE5022, hpe5022_PAT_HF)
    ErrorCheck hpe5022_narrowBandTaaFrequencyMode(HpE5022, hpe5022_NB_TAA_FREQ_AUTO)
    '
    ' Measurement
    '
    ErrorCheck hpe5022_measureNarrowBandTaa(HpE5022, hpe5022_SEQ_ER_WR_M, NumOfRevolutionForAverage)
    '
    ' Query Measurement Result
    '
    ErrorCheck hpe5022_narrowBandTaa_Q(HpE5022, NarrowBandTAA)
    ErrorCheck hpe5022_narrowBandTaaStatistic_Q(HpE5022, mean, min, max, stdDev)
    '
    ErrorCheck hpe5022_narrowBandTaaDataSize_Q(HpE5022, DataSize)
    ReDim TAAData(DataSize - 1)
    ErrorCheck hpe5022_narrowBandTaaData_Q(HpE5022, TAAData())
    '
    ' Display Measurement Result
    '
    lblResult.Caption = "Narrow Band TAA: HF " + vbCrLf _
        + "TAA: " + Format(NarrowBandTAA, "0.00E-##") + " V" + vbCrLf _
        + "Mean: " + Format(mean, "0.00E-##") + " V" + vbCrLf _
        + "Min: " + Format(min, "0.00E-##") + " V" + vbCrLf _
        + "Max: " + Format(max, "0.00E-##") + " V" + vbCrLf _
        + "Std Dev: " + Format(stdDev, "0.00E-##")
End Sub
```

### Description

The Narrow Band TAA measurement requires you to select the data pattern. If the required data pattern has already been set before sequence, you do not need to set in this section. As the “hpe5022\_narrowBandTaaFrequencyMode” is set at auto mode on the default setting, you may skip it if you want to set at auto mode.

### Functions used in this measurement

“hpe5022\_selectPattern” on page 119

“hpe5022\_narrowBandTaaFrequencyMode” on page 564

“hpe5022\_measureNarrowBandTaa” on page 572

Programming  
**Example Program**

“hpe5022\_narrowBandTaa\_Q” on page 577

“hpe5022\_narrowBandTaaStatistic\_Q” on page 580

## Waveform Analysis Measurement

The waveform analysis measurement can measure TAA, PW, and Baseline measurements by using an oscilloscope. See Chapter 4 of the Operation Manual for measurement definition

### Example 2-12. Sample Program

```
Private Sub CmdWaveformAnalysis_Click()
Const OverSampleRate As Long = 4 ' OverSampling Rate for digitizing
  Const WaveAverage As Long = 20 'Averaging Factor of Data Acquisition
  Const DelayTime As Double = 0.0002 ' Delay Time from the Index Pulse from the Spinstand [Second]
  Const PWThreshold As Double = 0.5 ' Threshold level for PW measurement
  '
  Dim taa As Double, taaPos As Double, taaNeg As Double, taaAsym As Double, pw As Double, pwPos As Double
  Dim pwNeg As Double, pwAsym As Double, baseline As Double, BaseLinePos As Double, BaseLineNeg As Double
  Dim BaseSeparation As Double, TimePOSToNEG As Double, TimeNEGtoPOS As Double, TimeAsym As Double
  Dim WaveFormData() As Double
  Dim DataSize As Long
  '
  ErrorCheck hpe5022_waveOverSampleRate(HpE5022, OverSampleRate)
  ErrorCheck hpe5022_waveAverage(HpE5022, WaveAverage)
  ErrorCheck hpe5022_waveDelayTime(HpE5022, DelayTime)
  '
  ' Select Test Data Pattern
  '
  ErrorCheck hpe5022_selectPattern(HpE5022, hpe5022_PAT_ISO)
  '
  ' Data Acquisition
  '
  ErrorCheck hpe5022_measureWave(HpE5022, hpe5022_SEQ_ER_WR_M)
  '
  ' Query Averaged Waveform Data
  '
  ErrorCheck hpe5022_waveAverageDataSize_Q(HpE5022, DataSize)
  ReDim WaveFormData(DataSize - 1)
  ErrorCheck hpe5022_waveAverageData_Q(HpE5022, WaveFormData(0))
  '
  ' Calcurate Parameters
  '
  ErrorCheck hpe5022_waveTaa_Q(HpE5022, taa, taaPos, taaNeg, taaAsym)
  ErrorCheck hpe5022_wavePw_Q(HpE5022, PWThreshold, pw, pwPos, pwNeg, pwAsym)
  ErrorCheck hpe5022_waveBaseline_Q(HpE5022, baseline, BaseLinePos, BaseLineNeg, BaseSeparation)
  ErrorCheck hpe5022_waveTimeAsymmetry_Q(HpE5022, TimeAsym, TimePOSToNEG, TimeNEGtoPOS)
  '
  ' Display Mesurement Result
  '
  LblResult.Caption = "Wave Form Analysis;" + vbCrLf _
    + "TAA:      " + Format(taa, "0.00E-##") + " V" + vbCrLf _
    + "TAA+:      " + Format(taaPos, "0.00E-##") + " V" + vbCrLf _
    + "TAA-:      " + Format(taaNeg, "0.00E-##") + " V" + vbCrLf _
```

## Programming

### Example Program

```
+ "TAA Asym: " + Format(taaAsym, "0.0%") + vbCrLf + vbCrLf _
+ "PW: " + Format(pw, "0.00E-##") + " V" + vbCrLf _
+ "PW+: " + Format(pwPos, "0.00E-##") + " sec" + vbCrLf _
+ "PW-: " + Format(pwNeg, "0.00E-##") + " sec" + vbCrLf _
+ "PW Asym: " + Format(pwAsym, "0.0%") + vbCrLf + vbCrLf _
+ "Baseline: " + Format(baseline, "0.00E-##") + " V" + vbCrLf _
+ "Baseline+: " + Format(BaseLinePos, "0.00E-##") + " V" + vbCrLf _
+ "Baseline-: " + Format(BaseLineNeg, "0.00E-##") + " V" + vbCrLf _
+ "Baseline Separation: " + Format(BaseSeparation, "0.00E-##") + " V" + vbCrLf + vbCrLf _
+ "Time Asymmetry: " + Format(TimeAsym, "0.00E-##") + " sec."
```

End Sub

### Description

For PW measurement, the threshold level is different from the PW measurement using the parametric module. The “hpe5022\_pwThreshold” function is not valid for this measurement.

The waveform measurement requires you to select the data pattern. If the required data pattern has already been set before sequence, you do not need to set in this section.

After executing the “hpe5022\_measureWave” function, any query functions related with the waveform measurement can be executed to get the measurement result.

As the Agilent E5022/E5023 DLL doesn't accept Automation SAFEARRAYs directly, you have to pass the first element of the array by reference to pass an entire numeric array. See the Visual Basic On-line Manual for the Automation SAFEARRAY. The “WaveFormData(0)” in line of “hpe5022\_waveAverageData\_Q” passes the first element of the array by reference.

### Functions used in this measurement

“hpe5022\_waveOverSampleRate” on page 1019

“hpe5022\_waveAverage” on page 1022

“hpe5022\_waveDelayTime” on page 1025

“hpe5022\_measureWave” on page 1028

“hpe5022\_waveTaa\_Q” on page 1041

“hpe5022\_wavePw\_Q” on page 1043

“hpe5022\_waveBaseline\_Q” on page 1045

“hpe5022\_waveTimeAsymmetry\_Q” on page 1047

“hpe5022\_selectPattern” on page 119

## NLTS by 5th Harmonic Method Measurement

The NLTS by 5th harmonic method is used to calculate NLTS by measuring the 5th harmonic level for two kinds of pattern. Spectrum analyzer is used for this measurement.

### Example 2-13. Sample Program

```
Private Sub CmdNLTS5th_Click()
Const NumOfRevolutionForAverage As Integer = 10 ' Number of Revolutions for Averaging
'
Dim nlt5 As Double, NLTSData() As Double
Dim DataSize As Long
'
' Measurement
'
ErrorCheck hpe5022_measureNlts5th(HpE5022, NumOfRevolutionForAverage)
'
' Query Measurement Result
'
ErrorCheck hpe5022_nlt5th_Q(HpE5022, nlt5)
'
ErrorCheck hpe5022_nlt5thDataSize_Q(HpE5022, DataSize)
ReDim NLTSData(DataSize - 1)
ErrorCheck hpe5022_nlt5thData_Q(HpE5022, NLTSData(0))
'
' Display Measurement Result
'
LblResult.Caption = "NLTS 5th: " + Format(nlt5, "0.0%")
'
End Sub
```

### Description

In the NLTS by 5th Harmonic method measurement, the required patterns (See the “hpe5022\_measureNlts5th” function) are used automatically. You don’t need to setup by the “hpe5022\_selectPattern” function.

### Functions used in this measurement

“hpe5022\_measureNlts5th” on page 810

“hpe5022\_nlt5th\_Q” on page 815

## Programming Example Program

### NLTS by Dipulse Extraction Method Measurement

The NLTS by Dipulse Extraction method is to calculate NLTS by measuring the amplitude at zero point and echoes from the dipulse extraction data. An oscilloscope is used for this measurement.

#### Example 2-14. Sample Program

```
Private Sub CmdNltsDipulse_Click()
Const OverSampleRate As Long = 4 ' Over Sampling Rate for Digitizing
  Const WaveAverage As Long = 20 ' Averaging Factor of Data Acquisition
  Const DelayTime As Double = 0.0002 ' Delay Time from the Index Pulse from the Spinstand [Second]
  '
  ' Echo Location (When PRBS = x^7+x^3+1, the PRBS factor is set in CmdCommonSetup_Click())
  '
  Const InitialMagnitude As Double = -30.5
  Const AdjacentTransition As Double = 25.5
  Const SecondAdjTransition As Double = 45.5
  '
  Dim nlts As Double, HardEasyTransShift As Double, SecondAdjacent As Double, ACSNR As Double
  '
  ' Set the Oversampling Rate, Averaging Factor and Delay Time
  '
  ErrorCheck hpe5022_waveOverSampleRate(HpE5022, OverSampleRate)
  ErrorCheck hpe5022_waveAverage(HpE5022, WaveAverage)
  ErrorCheck hpe5022_waveDelayTime(HpE5022, DelayTime)
  '
  ' Select Test Data Pattern (PRBS must be used)
  '
  ErrorCheck hpe5022_selectPattern(HpE5022, hpe5022_PAT_PRBS)
  '
  ' Data Acquisition
  '
  ErrorCheck hpe5022_measureWave(HpE5022, hpe5022_SEQ_ER_WR_M)
  '
  ' Caliculate NLTS Dipulse Extraction
  '
  ErrorCheck hpe5022_waveDipulseExtractionNlts_Q(HpE5022, AdjacentTransition, nlts)
  ErrorCheck hpe5022_waveDipulseExtractionNlts_Q(HpE5022, InitialMagnitude, HardEasyTransShift)
  ErrorCheck hpe5022_waveDipulseExtractionNlts_Q(HpE5022, SecondAdjTransition, SecondAdjacent)
  '
  ' Display Mesurement Result
  '
  LblResult.Caption = "NLTS Dipulse Extraction: " + vbCrLf _
    + "NLTS: " + Format(nlts, "0.0%") + vbCrLf _
    + "Hard/Easy Transition Shift: " + Format(HardEasyTransShift, "0.0%") + vbCrLf _
    + "2nd Adjacent:" + Format(SecondAdjacent, "0.0%")
End Sub
```

## Description

In the NLTS by Dipulse Extraction method measurement, the pseudo random pattern should be selected. The “hpe5022\_waveDipulseExtraction\_Q” function requires an echo location to calculate the parameters.

When the pseudo random pattern of  $x^7+x^3+1$  is used, the echo at a location of 25.5 bit periods corresponds to the NLTS, the second small echo at 45.5 bit period reflects the influence of the second adjacent transition shift. The echo at -30.5 bit periods (left side of main peak) corresponds to the Hard Transition shift.

When the pattern  $x^6+x^4+x^3+x+1$  is used, the echo locations are -18.5, -22.5 and 7.5, respectively.

## Functions used in this measurement

“hpe5022\_waveOverSampleRate” on page 1019

“hpe5022\_waveAverage” on page 1022

“hpe5022\_waveDelayTime” on page 1025

“hpe5022\_measureWave” on page 1028

“hpe5022\_waveDipulseExtraction\_Q” on page 1051

“hpe5022\_selectPattern” on page 119

## NLTS by Time Correlation Method Measurement

The NLTS by Time Correlation program sequence is similar to the NLTS by Dipulse Extraction method. The sample program is provided in the furnished sample program.

## Programming Example Program

### Overwrite Measurement

The overwrite measurement measures the overwrite ratio of a new data signal with respect to the residual signal from data previously recorded on the disk.

#### Example 2-15. Sample Program

```
Private Sub CmdOverWrite_Click()  
Const PeriodOfOWHFDataPattern As Integer = 3 ' Transition Period of HF Pattern for Overwrite Measurement  
Const PeriodOfOWLFDataPattern As Integer = 8 ' Transition Period of LF Pattern for Overwrite Measurement  
Const NumOfRevolutionForAverage As Integer = 10 ' Number of Revolutions for Averaging  
,  
Dim overwrite As Double, OverWriteData() As Double  
Dim DataSize As Long  
Dim Disp As String  
,  
' Set Transition Period of Overwrite Test Data Pattern  
,  
ErrorCheck hpe5022_overwriteHfPattern(HpE5022, PeriodOfOWHFDataPattern)  
ErrorCheck hpe5022_overwriteLfPattern(HpE5022, PeriodOfOWLFDataPattern)  
,  
' Measurement  
,  
ErrorCheck hpe5022_measureOverwrite(HpE5022, NumOfRevolutionForAverage)  
,  
' Query Measurement Result  
,  
ErrorCheck hpe5022_overwrite_Q(HpE5022, overwrite)  
,  
ErrorCheck hpe5022_overwriteDataSize_Q(HpE5022, DataSize)  
ReDim OverWriteData(DataSize - 1)  
ErrorCheck hpe5022_overwriteData_Q(HpE5022, OverWriteData(0))  
,  
' Display Measurement Result  
,  
LblResult.Caption = "OverWrite: " + Format(overwrite, "0.0") + " dB"  
End Sub
```

#### Description

The data patterns specified by the “hpe5022\_overwriteHfPattern” and “hpe5022\_overwriteLfPattern” functions are used automatically in this measurement. It is not necessary to select patterns set by the “hpe5022\_selectPattern” function.

#### Functions used in this measurement

“hpe5022\_overwriteHfPattern” on page 136

“hpe5022\_overwriteLfPattern” on page 138

“hpe5022\_measureOverwrite” on page 910

“hpe5022\_overwrite\_Q” on page 915



## Partial Erasure Measurement

The partial erasure is the amplitude loss of the play-back voltage when two transitions are written at a small separation.

### Example 2-16. Sample Program

```
Private Sub CmdPartialErase_Click()
Const NumOfRevolutionForAverage As Integer = 10 ' Number of Revolutions for Averaging
    Dim PartualErase As Double, mean As Double, min As Double, max As Double, stdDev As Double
    Dim PEData() As Double
    Dim DataSize As Long
    Dim Disp As String
    '
    ' Measurement
    '
    ErrorCheck hpe5022_measurePartialErase(HpE5022, NumOfRevolutionForAverage)
    '
    ' Query Measurement Result
    '
    ErrorCheck hpe5022_partialErase_Q(HpE5022, PartualErase)
    ErrorCheck hpe5022_partialEraseStatistic_Q(HpE5022, mean, min, max, stdDev)
    '
    ErrorCheck hpe5022_partialEraseDataSize_Q(HpE5022, DataSize)
    ReDim PEData(DataSize - 1)
    ErrorCheck hpe5022_partialEraseData_Q(HpE5022, PEData(0))
    '
    ' Display Measurement Result
    '
    LblResult.Caption = "Partiual Erase: " + vbCrLf _
        + "Partial Erase: " + Format(PartualErase, "0.0%") + " " + vbCrLf _
        + "Mean: " + Format(mean, "0.0%") + " " + vbCrLf _
        + "Min: " + Format(min, "0.0%") + " " + vbCrLf _
        + "Max: " + Format(max, "0.0%") + " " + vbCrLf _
        + "Std Dev: " + Format(stdDev, "0.00")
End Sub
```

### Description

The required data patterns (3T and 1T data patterns) for this measurement are used automatically. It is not necessary to select those pattern by the “hpe5022\_selectPattern” function.

### Functions used in this measurement

“hpe5022\_measurePartialErase” on page 934

“hpe5022\_partialErase\_Q” on page 939

“hpe5022\_partialEraseStatistic\_Q” on page 942

## Programming Example Program

### Track Profile Measurement

The Track Profile measurement can observe read offset characteristics of the TAA or the Narrow Band TAA. See Chapter 4 of the Operation Manual for its measurement definition

#### Example 2-17. Sample Program

```
Private Sub CmdTrackProfile_Click()
Const HeadOffsetStart As Double = -0.000003 ' Start of Head Offset [Meter]
  Const HeadOffsetEnd As Double = 0.000003 ' End of Head Offset [Meter]
  Const NumOfHeadOffsetData As Integer = 21 ' Number of Measurement Points
  '
  Dim trackWidth As Double, ReadWriteOffset As Double
  Dim HeadOffsetData(NumOfHeadOffsetData - 1) As Double
  Dim TrackProfileResult(NumOfHeadOffsetData - 1) As Double
  Dim i As Integer
  Dim Disp As String
  '
  ' Create Array of Head Offset Data
  '
  For i = 0 To NumOfHeadOffsetData - 1
    HeadOffsetData(i) = HeadOffsetStart + _
      i * (HeadOffsetEnd - HeadOffsetStart) / (NumOfHeadOffsetData - 1)
  Next i
  '
  ' Select Test Data Pattern
  '
  ErrorCheck hpe5022_selectPattern(HpE5022, hpe5022_PAT_HF)
  '
  ' Measurement (Measurement Sequence: Erase -> Write -> Measurement, Track Movement Direction: Both
  '           Measurement Parameter: TAA )
  '
  ErrorCheck hpe5022_measureTrackProfile(HpE5022, hpe5022_SEQ_ER_WR_M, hpe5022_TP_BOTH, hpe5022_MEAS_TAA, _
    NumOfHeadOffsetData, HeadOffsetData(0))
  '
  ' Query Measurement Result (Measurement Parameter: TAA, Averaged Data of Forward and Backward)
  '
  ErrorCheck hpe5022_trackProfileData_Q(HpE5022, hpe5022_TP_DATA_AVE, hpe5022_DATA_TAA, _
    TrackProfileResult(0))
  ErrorCheck hpe5022_calculateTrackWidth_Q(HpE5022, hpe5022_DATA_TAA, trackWidth)
  ErrorCheck hpe5022_calculateReadWriteOffset_Q(HpE5022, hpe5022_DATA_TAA, ReadWriteOffset)
  '
  ' Display Measurement Result
  '
  Disp$ = "Track Profile: TAA" + vbCrLf _
    + "Write Track Width: " + Format(trackWidth, "0.00E-##") + vbCrLf _
    + "Read/Write Offset: " + Format(ReadWriteOffset, "0.00E-##") + vbCrLf
  For i = 0 To NumOfHeadOffsetData - 1
    Disp$ = Disp$ + Format(HeadOffsetData(i), "0.00E-##") + " : " + _
      Format(TrackProfileResult(i), "0.00E-##") + vbCrLf
  Next i
  LblResult.Caption = Disp$
End Sub
```

### Description

The “hpe5022\_trackProfileData\_Q” function returns the array data of the TAA results for the specified segment. As the Agilent E5022/E5023 DLL doesn’t accept Automation SAFEARRAYs directly, you have to pass the first element of the array by reference to pass an entire numeric array. See the Visual Basic On-line Manual for the Automation SAFEARRAY. The “TrackProfileResult(0)” in line of “hpe5022\_trackProfileData\_Q” passes the first element of the array by reference.

The “hpe5022\_measureTrackProfile” can also measure the Narrow Band TAA, program sequence is similar. The Narrow Band TAA program example is in the furnished sample program.

### Functions used in this measurement

“hpe5022\_selectPattern” on page 119

“hpe5022\_measureTrackProfile” on page 615

“hpe5022\_calculateTrackWidth\_Q” on page 626

“hpe5022\_calculateReadWriteOffset\_Q” on page 628

“hpe5022\_trackProfileData\_Q” on page 623

## Programming Example Program

### Micro Track Profile Measurement

Micro Track Profile is a measurement to calculate the read head width. This measurement contains two portions. The first is to create a micro track and the second is to measure the Narrow Band Track Profile of the created micro track.

#### Example 2-18. Sample Program

```
Private Sub CmdMicroTrackProfile_Click()
'
' Parameters to Create a Micro Track
'
Const StartErasePointOffset As Double = 0.000003 ' Head Offset at Start Erase Point [Meter]
Const EraseStep As Double = 0.0000006 ' Step for Erase [Meter]
Const TAARatio As Double = 0.1 ' TAA Ratio to finish to create a Micro Track
'
' Parameters to Measure Narroband TAA Track Profile for the Micro Track
'
Const HeadOffsetStart As Double = -0.000003 ' Start Offset to Measure a track profile [Meter]
Const HeadOffsetEnd As Double = 0.000003 ' End Offset to Measure a track profile [Meter]
Const NumOfHeadOffsetData As Integer = 21 ' Number of Measurement Points
'
Dim ReadHeadWidth As Double
Dim HeadOffsetData(NumOfHeadOffsetData - 1) As Double
Dim TrackProfileResult(NumOfHeadOffsetData - 1) As Double
Dim i As Integer
Dim Disp As String
'
' Create Array of Head Offset Data
'
For i = 0 To NumOfHeadOffsetData - 1
    HeadOffsetData(i) = HeadOffsetStart + _
        i * (HeadOffsetEnd - HeadOffsetStart) / (NumOfHeadOffsetData - 1)
Next i
'
' Create a Micro Track
'
ErrorCheck hpe5022_microTrackConfig(HpE5022, StartErasePointOffset, EraseStep, TAARatio)
ErrorCheck hpe5022_createMicroTrack(HpE5022)
'
' Measure a Narrow Band TAA Track Profile for a Micro Track.
'
ErrorCheck hpe5022_measureTrackProfile(HpE5022, hpe5022_SEQ_M, hpe5022_TP_BOTH, hpe5022_MEAS_NB_TAA, _
    NumOfHeadOffsetData, HeadOffsetData(0))
'
' Query Measurement Result
'
ErrorCheck hpe5022_trackProfileData_Q(HpE5022, hpe5022_TP_DATA_AVE, hpe5022_DATA_NB_TAA, _
    TrackProfileResult(0))
ErrorCheck hpe5022_calculateTrackWidth_Q(HpE5022, hpe5022_DATA_NB_TAA, ReadHeadWidth)
'
' Display Mesurement Result
'
Disp$ = "Track Profile: " + vbCrLf + "Read Head Width: " + Format(ReadHeadWidth, "00.0E-##") + vbCrLf

```

```

Disp$ = Disp$ + vbCrLf + "Head Offset : Narrow Band TAA" + vbCrLf
For i = 0 To NumOfHeadOffsetData - 1
    Disp$ = Disp$ + Format(HeadOffsetData(i), "0.00E-##") + " : " _
        + Format(TrackProfileResult(i), "0.00E-##") + vbCrLf
Next i
LblResult.Caption = Disp$
'
End Sub

```

### Description

As the output signal of the micro track is low, narrow band track profile is usually used. The recommended head offset of start erase point is approximately 70% of the head width and the step for erase is approximately 10% of it. For example, when the head width is  $7\mu$ , the head offset start point for erase is approximately  $5\mu$ , the erase step is approximately  $0.7\mu$ .

The “hpe5022\_trackProfileData\_Q” function returns the array data of TAA results for the specified segment. As the Agilent E5022/E5023 DLL doesn’t accept Automation SAFEARRAYs directly, you have to pass the first element of the array by reference to pass an entire numeric array. See the Visual Basic On-line Manual for the Automation SAFEARRAY. The “TrackProfileResult(0)” in line of “hpe5022\_trackProfileData\_Q” passes the first element of the array by reference.

### Functions used in this measurement

- “hpe5022\_microTrackConfig” on page 637
- “hpe5022\_createMicroTrack” on page 644
- “hpe5022\_measureTrackProfile” on page 615
- “hpe5022\_trackProfileData\_Q” on page 623
- “hpe5022\_calculateTrackWidth\_Q” on page 626

## Programming Example Program

### Write Current Sweep Measurement

The write current sweep measurement is used to observe the write current characteristic of the parameters of the TAA, Narrow Band TAA, PW, Overwrite and NLTS by 5th harmonic method.

#### Example 2-19. Sample Program

```
Private Sub CmdWriteCurrentSweep_Click()
Const WriteCurrentStart As Double = 0.01 ' Start of Write Current [Ampere]
  Const WriteCurrentEnd As Double = 0.035 ' End of Write Current [Ampere]
  Const NumOfWriteCurrentData As Integer = 20 ' Number of Measurement Points
  '
  Dim WriteCurrentData(NumOfWriteCurrentData - 1) As Double
  Dim WriteCurrentSweepResult(NumOfWriteCurrentData - 1) As Double
  Dim i As Integer
  Dim Disp As String
  '
  ' Create Array of Write Current Data
  '
  For i = 0 To NumOfWriteCurrentData - 1
    WriteCurrentData(i) = WriteCurrentStart + _
      i * (WriteCurrentEnd - WriteCurrentStart) / (NumOfWriteCurrentData - 1)
  Next i
  '
  ' Select Test Data Pattern
  '
  ErrorCheck hpe5022_selectPattern(HpE5022, hpe5022_PAT_HF)
  '
  ' Measurement (Measurement Sequence: Erase -> Write -> Measurement, Measurement Parameter: TAA)
  '
  ErrorCheck hpe5022_measureWriteCurrentSweep(HpE5022, hpe5022_MEAS_TAA, _
    NumOfWriteCurrentData, WriteCurrentData(0))
  '
  ' Query Measurement Result
  '
  ErrorCheck hpe5022_writeCurrentSweepData_Q(HpE5022, hpe5022_DATA_TAA, WriteCurrentSweepResult(0))
  '
  ' Display Measurement Result
  '
  Disp$ = "Write Current Sweep: TAA" + vbCrLf
  For i = 0 To NumOfWriteCurrentData - 1
    Disp$ = Disp$ + Format(WriteCurrentData(i), "0.00E-##") + " A : " _
      + Format(WriteCurrentSweepResult(i), "0.00E-##") + " V" + vbCrLf
  Next i
  LblResult.Caption = Disp$
End Sub
```

## Description

The measurement parameter in the “hpe5022\_writeCurrentSweepData\_Q” must be in the same category of the measurement done by the “hpe5022\_measureWriteCurrentSweep”. For example, when TAA measurement is selected in the “hpe5022\_measureWriteCurrentSweep” function, only the parameters of TAA measurement (TAA, TAA positive and TAA negative) can be queried in the “hpe5022\_writeCurrentSweepData\_Q”.

The “hpe5022\_writeCurrentSweepData\_Q” function returns the array data of TAA results for the specified segment. As Agilent E5022/E5023 DLL doesn't accept Automation SAFEARRAYs directly, you have to pass the first element of the array by reference to pass an entire numeric array. See the Visual Basic On-line Manual for the Automation SAFEARRAY. The “WriteCurrentResult(0)” in line of “hpe5022\_writeCurrentSweepData\_Q” passes the first element of the array by reference.

## Functions used in this measurement

“hpe5022\_measureWriteCurrentSweep” on page 658

“hpe5022\_writeCurrentSweepData\_Q” on page 663

“hpe5022\_selectPattern” on page 119

Programming  
**Example Program**

### **Sense Current Sweep Measurement**

The sense current sweep measurement is used to observe the sense current characteristics of the measured parameters of the TAA, Narrow Band TAA, PW, Overwrite and NLTS by 5th harmonic method. The program sequence is similar to the Write Sweep Measurement. The sample program is provided in the furnished sample program.



## Channel Bit Rate Sweep Measurement

The channel bit rate sweep measurement is used to observe the channel bit rate characteristic of the measured parameters of the TAA, Narrow Band TAA, PW, Baseline, Overwrite and NLTS by 5th harmonic method.

### Example 2-20. Sample Program

```
Private Sub CmdChannelBitRateSweep_Click()
Const ChannelBitRateStart As Double = 100000000# ' Start of Channel Bit Rate (bps)
  Const ChannelBitRateEnd As Double = 300000000# ' End of Channel Bit Rate (bps)
  Const NumOfChannelBitRateData As Integer = 21 ' Number of Measurement Points
  '
  Dim ChannelBitRateData(NumOfChannelBitRateData - 1) As Double
  Dim ChannelBitRateResult(NumOfChannelBitRateData - 1) As Double
  Dim i As Integer
  Dim Disp As String
  '
  ' Create the array of Channel Bit Rate data
  '
  For i = 0 To NumOfChannelBitRateData - 1
    ChannelBitRateData(i) = ChannelBitRateStart + _
      i * (ChannelBitRateEnd - ChannelBitRateStart) / (NumOfChannelBitRateData - 1)
  Next i
  '
  ' Select Test Data Pattern
  '
  ErrorCheck hpe5022_selectPattern(HpE5022, hpe5022_PAT_HF)
  '
  ' Measurement (Measurement : TAA )
  '
  ErrorCheck hpe5022_measureChannelBitRateSweep(HpE5022, hpe5022_MEAS_TAA, _
    NumOfChannelBitRateData, ChannelBitRateData(0))
  '
  ' Query Measurement Result
  '
  ErrorCheck hpe5022_channelBitRateSweepData_Q(HpE5022, hpe5022_DATA_TAA_POS, ChannelBitRateResult(0))
  '
  ' Display Measurement Result
  '
  Disp$ = "Channel Bit Rate Sweep: TAA Positive" + vbCrLf
  For i = 0 To NumOfChannelBitRateData - 1
    Disp$ = Disp$ + Format(ChannelBitRateData(i), "0.00E-##") + " bps : " _
      + Format(ChannelBitRateResult(i), "0.00E-##") + " V" + vbCrLf
  Next i
  LblResult.Caption = Disp$
End Sub
```

## Programming

### Example Program

#### Description

The measurement parameter in the “hpe5022\_channelBitRateSweepData\_Q” must be in the same category of the measurement done by the “hpe5022\_measureChannelBitRateSweep”. For example, when TAA measurement is selected in the “hpe5022\_measureChannelBitRateSweep” function, only the parameters of TAA measurement (TAA, TAA positive and TAA negative) can be queried in the “hpe5022\_channelBitRateSweepData\_Q”.

The “hpe5022\_channelBitRateSweepData\_Q” function returns the array data of TAA results for the specified segment. As Agilent E5022/E5023 DLL doesn't accept Automation SAFEARRAYs directly, you have to pass the first element of the array by reference to pass an entire numeric array. See the Visual Basic On-line Manual for the Automation SAFEARRAY. The “ChannelBitRateResult(0)” in line of “hpe5022\_channelBitRateSweepData\_Q” passes the first element of the array by reference.

#### Functions used in this measurement

“hpe5022\_selectPattern” on page 119

“hpe5022\_measureChannelBitRateSweep” on page 679

“hpe5022\_channelBitRateSweepData\_Q” on page 684

#### Roll off Measurement

The roll off measurement is used to observe the flux frequency characteristics of the measured parameters of the TAA and Narrow Band TAA. The measurement sequence is very similar to the channel bit sweep measurement. The sample program is provided in the furnished sample program.

## Precompensation Delay Sweep Measurement

The precompensation delay measurement is used to observe the precompensation delay characteristics of the NLTS by the 5th harmonic method.

### Example 2-21. Sample Program

```
Private Sub CmdPrecompSweep_Click()
Const PreCompSweepStart As Double = -0.000000001 ' Start of Precompensation [Second]
  Const PreCompSweepEnd As Double = 0.000000001 ' End of Precompensation [Second]
  Const NumOfPreCompSweep As Integer = 41 ' Number of Measurement Points
  Dim PreCompSweepData(NumOfPreCompSweep - 1) As Double
  Dim NLTSResult(NumOfPreCompSweep - 1) As Double
  Dim i As Integer
  Dim Disp As String
  '
  ' Clear Precompensation
  '
  ErrorCheck hpe5022_clearPrecomp(HpE5022)
  '
  ' Assign "001x000" into the Precompensation Number 1
  '
  ErrorCheck hpe5022_precompPattern(HpE5022, hpe5022_PREC_PAT_001, hpe5022_PREC_PAT_000, hpe5022_PREC_1)
  '
  ' Precompensation ON for a Test Data Pattern
  ' (The NLTS 5th harmonic Test Data Pattern has a precompensation in this Example)
  '
  ErrorCheck hpe5022_precompState(HpE5022, hpe5022_PAT_NLTS_5TH, VI_TRUE)
  '
  ' Create the array of Precompensation data
  '
  For i = 0 To NumOfPreCompSweep - 1
    PreCompSweepData(i) = PreCompSweepStart + _
      i * (PreCompSweepEnd - PreCompSweepStart) / (NumOfPreCompSweep - 1)
  Next i
  '
  ' Measurement
  '
  ErrorCheck hpe5022_measurePrecompSweep(HpE5022, hpe5022_MEAS_NLTS_5TH, _
    NumOfPreCompSweep, PreCompSweepData(0))
  '
  ' Query Measurement Result
  '
  ErrorCheck hpe5022_precompSweepData_Q(HpE5022, hpe5022_DATA_NLTS_5TH, NLTSResult(0))
  '
  ' Display Measurement Result
  '
  Disp$ = "Precompensation Sweep:" + vbCrLf
  For i = 0 To NumOfPreCompSweep - 1
    Disp$ = Disp$ + Format(PreCompSweepData(i), "0.00E-##") + " : " _
      + Format(NLTSResult(i), "0.0%") + vbCrLf
  Next i
  LblResult.Caption = Disp$
End Sub
```

## Programming

### Example Program

#### Description

The precompensation pattern should be set at “001x 000” (x is a target bit) in order to precompensate the transition for the dibit. As the “hpe5022\_measurePrecompSweep” function changes a delay time of the precompensation number 1, the “hpe5022\_PREC\_1” should be set.

The “hpe5022\_precompSweepData\_Q” function returns the array data of TAA results for the specified segment. As Agilent E5022/E5023 DLL doesn't accept Automation SAFEARRAYs directly, you have to pass the first element of the array by reference to pass an entire numeric array. See the Visual Basic On-line Manual for the Automation SAFEARRAY. The “NLTSResult(0)” in line of “hpe5022\_precompSweepData\_Q” passes the first element of the array by reference.

#### Functions used in this measurement

“hpe5022\_clearPrecomp” on page 386

“hpe5022\_precompPattern” on page 377

“hpe5022\_precompState” on page 383

“hpe5022\_measurePrecompSweep” on page 696

“hpe5022\_precompSweepData\_Q” on page 701

## Popcorn Noise Measurement (using Counter Module E5041A)

Popcorn noise test is used to detect the head noise referred to as popcorn noise, which occurs shortly after the write operation. The Agilent E5022/E5023 allows you to measure popcorn noise with a programmable time delay after write.

### Example 2-22. Sample Program

```
'Sample Program for Popcorn Noise using E5041A
Private Sub CmdPopcorn_Click()

    Const thrPos As Double = 0.0001    '[V] positive Threshold
    Const thrNeg As Double = 0.0001    '[V] negative Threshold
    Const wrTime As Double = 0.0005    '[sec] write time
    Const delay As Double = 0.0001     '[sec] delay time
    Const rdTime As Double = 0.0005    '[sec] read time
    Const counts As Long = 10          ' number of test counts

    Dim writeMode As Integer
    Dim hystLevel As Integer
    Dim failCounPos As Long             'counts popcorn noise from thrPos
    Dim failCounNeg As Long             'counts popcorn noise from thrNeg
    Dim Disp As String

    ErrorCheck hpe5022_selectPattern(HpE5022, hpe5022_PAT_HF)
    ErrorCheck hpe5022_popcornNoiseCtConfig(HpE5022, thrPos, thrNeg, wrTime, delay, rdTime)
    ErrorCheck hpe5022_popcornNoiseCtWriteModeConfig(HpE5022, hpe5022_WRIT_DATA_POL_FIXED)
    ErrorCheck hpe5022_popcornNoiseCtHysteresisConfig(HpE5022, hpe5022_COMP_HYST_LEVEL_0)

    ' Measurement
    '
    ErrorCheck hpe5022_measurePopcornNoiseCt(HpE5022, counts)

    ' Query Measurement Result
    '
    ErrorCheck hpe5022_popcornNoiseCtWriteModeConfig_Q(HpE5022, writeMode)
    ErrorCheck hpe5022_popcornNoiseCtHysteresisConfig_Q(HpE5022, hystLevel)
    ErrorCheck hpe5022_popcornNoiseCt_Q(HpE5022, failCounPos, failCounNeg)

    ' Display Mesurement Result
    '
    Disp$ = "Popcorn Noise :" + vbCrLf _
        + "failCoun(+): " + Format(failCounPos, "0.00E-##") + vbCrLf _
        + "failcount(-)" + Format(failCounNeg, "0.00E-##") + vbCrLf _
        + "Total failcount" + Format(failCounPos + failCounNeg, "0.00E-##") + vbCrLf

    LblResult.Caption = Disp$

End Sub
```

## Programming

### Example Program

#### Description

The Agilent E5041A is a dual counter module designed to detect and count popcorn noise. E5041A has two threshold levels (e.g, hpe5022\_COMP\_HYST\_LEVEL\_0) that detect popcorn noise for both positive and negative amplitudes of the input signal. Each threshold has its own hysteresis window that is used to trigger the popcorn noise count. If the number of counted popcorn noise exceeds the maximum number of allowable failcounts, the excess failcounts will not be counted. Refer to “hpe5022\_popcornNoiseCt\_Q” function of the programming manual for details.

#### Functions used in this measurement

“hpe5022\_popcornNoiseCtConfig” on page 886

“hpe5022\_popcornNoiseCtConfig\_Q” on page 891

“hpe5022\_popcornNoiseCtWriteModeConfig” on page 893

“hpe5022\_popcornNoiseCtHysteresisConfig” on page 899

“hpe5022\_popcornNoiseCtHysteresisConfig\_Q” on page 902

“hpe5022\_setupPopcornNoiseCt” on page 906

“hpe5022\_popcornNoiseCt\_Q” on page 908

## Stability Measurement

The stability measurement allows you to observe the amplitude variations during many write-read iterations. See Chapter 4 in the Operation Manual for its measurement definition.

### Example 2-23. Sample Program

```
Private Sub CmdStability_Click()
Const NumOfSegment As Integer = 5 ' Number of Segments in a track
  Const NumOfRevolution As Integer = 3 ' Number of Revolutions
  Const writeRatio As Double = 0.4 ' Write Ratio in a Segment
  Const readRatio As Double = 0.4 ' Read Ration in a Segment
  '
  Dim Stability(NumOfRevolution - 1, NumOfSegment - 1) As Double
  Dim mean As Double, min As Double, max As Double, stdDev As Double
  Dim SegmentNo As Integer, RevolutionNo As Integer
  Dim Disp As String
  '
  ' Select Test Data Pattern
  '
  ErrorCheck hpe5022_selectPattern(HpE5022, hpe5022_PAT_HF)
  '
  ' Setup (Polarity: Same)
  '
  ErrorCheck hpe5022_stabilityConfig(HpE5022, hpe5022_STABILITY_IS_POL_NORM, writeRatio, readRatio)
  '
  ' Measurement (Measurement Parameter : TAA)
  '
  ErrorCheck hpe5022_measureStability(HpE5022, hpe5022_MEAS_TAA, NumOfSegment, NumOfRevolution)
  '
  Disp$ = "Stability: TTA" + vbCrLf
  For SegmentNo = 0 To NumOfSegment - 1
    '
    ' Query Measurement Result
    '
    ErrorCheck hpe5022_stabilityData_Q(HpE5022, SegmentNo, hpe5022_DATA_TAA, Stability(0, SegmentNo))
    ErrorCheck hpe5022_stability_Q(HpE5022, SegmentNo, hpe5022_DATA_TAA, mean, min, max, stdDev)
    '
    ' Display Mesurement Result
    '
    Disp$ = Disp$ + "Segment No." + Str(SegmentNo) + ";" + vbCrLf
    Disp$ = Disp$ + " TAA: " + vbCrLf
    For RevolutionNo = 0 To NumOfRevolution - 1
      Disp$ = Disp$ + " Revolution No." + Str(RevolutionNo) + ": " _
        + Format(Stability(RevolutionNo, SegmentNo), "0.00E-##") + " V" + vbCrLf
    Next RevolutionNo
    Disp$ = Disp$ + " Mean: " + Format(mean, "0.00E-##") + " V" + vbCrLf
    Disp$ = Disp$ + " Min: " + Format(min, "0.00E-##") + " V" + vbCrLf
    Disp$ = Disp$ + " Max: " + Format(max, "0.00E-##") + " V" + vbCrLf
    Disp$ = Disp$ + " StdDev:" + Format(stdDev, "0.00E-##") + vbCrLf
  Next SegmentNo
End Sub
```

## Programming Example Program

```
Next SegmentNo  
    LblResult.Caption = Disp$  
End Sub
```

### Description

The “hpe5022\_stabilityData\_Q” function returns the array data of the TAA results for the specified segment. As Agilent E5022/E5023 DLL doesn’t accept Automation SAFEARRAYs directly, you have to pass the first element of the array by reference to pass an entire numeric array. See the Visual Basic On-line Manual for the Automation SAFEARRAY. The “Stability(0, segment No)” in line of “hpe5022\_stabilityData\_Q” passes the first element of the array by reference.

The stability measurement requires to select data pattern. If the required data pattern has already been set before sequence, you need not set in this section.

### Functions used in this measurement

“hpe5022\_stabilityConfig” on page 511

“hpe5022\_measureStability” on page 524

“hpe5022\_stabilityData\_Q” on page 531

“hpe5022\_stability\_Q” on page 533

“hpe5022\_selectPattern” on page 119



## Bit Error Test Measurement

The bit error test measurement allows you to observe the bit error analysis. See Chapter 4 in the Operation Manual for its measurement definition.

### Example 2-24. Sample Program

```
Private Sub CmdBer_Click()
    Const BerUserDataBitRate As Double = 120000000# ' User Data Bit Rate [bps]
    Const ReferenceClock As Double = 20000000# ' Channel IC Reference Clock

    Const BerTestPattern1 As String = "11001000" ' Test Pattern in Binary Format

    Const TrackPreambleLength As Long = 1000 ' Track Preamble Length [Byte]
    Const GapLength As Long = 55 ' Dummy if the gap length is Auto [Byte]
    Const SectPreambleLength As Long = 100 ' Sector Preamble Length [Byte]
    Const DataLength As Long = 1024 ' Data Length [Byte]
    Const NoOfSector As Integer = 10 ' Number of Sector per Track
    Const noofave As Integer = 1
    Const MeasByteCount As Double = 1000 ' Measurement Byte Count [Byte]
    Const ErrBitPerByte As Double = 1 ' Error Bit Per Byte
    '
    Dim FilterCutOffFreq As Double, FilterBoost As Double
    Dim bitLength As Long, symbol As Long, totalSector As Long, lostSector As Long
    Dim NumOfSize As Long, ErrorCount() As Long, LostCount() As Long
    Dim ber As Double, delay(2) As Double, Property1() As Double
    Dim Disp As String
    Dim IcName As String * 10
    Dim i As Integer
    ' FilterCutOffFreq = 20000000#
    ' FilterBoost = 5.5
    ' Property1(0) = xxxx
    ' Properry1(1) = xxxx
    '
    ErrorCheck hpe5022_BER_channelIcIdn_Q(HpE5022, IcName)
    ErrorCheck hpe5022_BER_userDataBitRate(HpE5022, BerUserDataBitRate)
    ErrorCheck hpe5022_BER_channelIcReferenceClock(HpE5022, ReferenceClock)
    '
    ' Create BER Data Pattern
    '
    bitLength = Len(BerTestPattern1)
    ErrorCheck hpe5022_BER_userPattern(HpE5022, hpe5022_BER_PAT_1, hpe5022_USER_DATA_BIN, bitLength, _
        BerTestPattern1)
    ErrorCheck hpe5022_BER_selectPattern(HpE5022, hpe5022_BER_PAT_1)
    '
    ' Define Track and Sector Format
    '
    ErrorCheck hpe5022_BER_trackFormat(HpE5022, TrackPreambleLength, NoOfSector, VI_FALSE, GapLength)
    ErrorCheck hpe5022_BER_sectorFormat(HpE5022, SectPreambleLength, DataLength)
    ErrorCheck hpe5022_BER_berMeasByteCount(HpE5022, MeasByteCount)
```

## Programming Example Program

```
ErrorCheck hpe5022_BER_errorBitPerByte(HpE5022, ErrBitPerByte)
ErrorCheck hpe5022_BER_channelIcFirCoefReset(HpE5022)
'
' Specify Low Pass Filter
'
' ErrorCheck hpe5022_BER_channelIcLowPassFilter(HpE5022, FilterCutOffFreq, FilterBoost)
'
' Define Precompensation
'
' ErrorCheck hpe5022_BER_channelIcPrecompDelay(HpE5022, Delay(0))
ErrorCheck hpe5022_BER_channelIcPrecompState(HpE5022, VI_TRUE)
'
' Define Encoder
'
ErrorCheck hpe5022_BER_channelIcEndec(HpE5022, VI_TRUE, hpe5022_BER_ENDEC_8_9, VI_TRUE)
'
' Define Channel IC Property
'
' ErrorCheck hpe5022_BER_channelIcProperty(HpE5022, hpe5022_BER_CIC_xxxx_PROP_xxx, Property1(0))
'
' Define Logging Mode
'
ErrorCheck hpe5022_BER_berDataLoggingMode(HpE5022, VI_TRUE, hpe5022_BER_RAW_DATA_ALL)
'
' Define Optimization
'
ErrorCheck hpe5022_BER_optimizeState(HpE5022, hpe5022_BER_OPT_LPF, VI_TRUE)
ErrorCheck hpe5022_BER_optimizeState(HpE5022, hpe5022_BER_OPT_FIR, VI_TRUE)
ErrorCheck hpe5022_BER_optimizeState(HpE5022, hpe5022_BER_OPT_PREC_DEL_COAR, VI_TRUE)
ErrorCheck hpe5022_BER_optimizeState(HpE5022, hpe5022_BER_OPT_PREC_DEL_FINE, VI_TRUE)
ErrorCheck hpe5022_BER_optimize(HpE5022)
'
ErrorCheck hpe5022_BER_channelIcLowPassFilter_Q(HpE5022, FilterCutOffFreq, FilterBoost)
'
' Perform Measurement
'
ErrorCheck hpe5022_BER_measureBer(HpE5022, hpe5022_SEQ_ER_WR_M, noofave)
'
' Query Test Result
'
ErrorCheck hpe5022_BER_ber_Q(HpE5022, ber, symbol, totalSector, lostSector)
ErrorCheck hpe5022_BER_sectorErrorCountSize_Q(HpE5022, NumOfSize)
ReDim ErrorCount(NumOfSize - 1)
ReDim LostCount(NumOfSize - 1)
ErrorCheck hpe5022_BER_sectorErrorCount_Q(HpE5022, ErrorCount(0), LostCount(0))
'
Disp$ = "Bit Error Rate: " + vbCrLf _
      + "BER: " + Format(ber, "0.00E-##") + vbCrLf _
```

```

+ "Symbol: " + Format(symbol, "###0") + vbCrLf _
+ "Total Sector: " + Format(totalSector, "###0") + vbCrLf _
+ "Lost Sector: " + Format(lostSector, "###0") + vbCrLf + vbCrLf _
+ "Filter Cut Off: " + Format(FilterCutOffFreq, "0.00E-##") + " Hz" + vbCrLf _
+ "Filter Boost: " + Format(FilterBoost, "0.00") + " dB" + vbCrLf

For i = 0 To NumOfSize - 1
    Disp$ = Disp$ + Format(ErrorCount(i), "0.0") + " : " + Format(LostCount(i), "0.0") + vbCrLf
Next i

LblChannelICName.Caption = IcName$
LblResult.Caption = Disp$
'
End Sub

```

## Description

The test data pattern of the bit error measurement is different from the other measurement. The “hpe5022\_BER\_userPattern” and “hpe5022\_BER\_userPattern” functions defines the pattern. The “hpe5022\_BER\_selectPattern” function selects the pattern.

## Functions used in this measurement

“hpe5022\_BER\_userDataBitRate”  
 “hpe5022\_BER\_trackFormat”  
 “hpe5022\_BER\_sectorFormat”  
 “hpe5022\_BER\_selectPattern”  
 “hpe5022\_BER\_userPattern”  
 “hpe5022\_BER\_channelIc\_Idn\_Q”  
 “hpe5022\_BER\_channelIcReferenceClock”  
 “hpe5022\_BER\_channelIcLowPassFilter\_Q”  
 “hpe5022\_BER\_channelIcFirCoefReset”  
 “hpe5022\_BER\_channelIcPrecompState”  
 “hpe5022\_BER\_channelIcEndec”  
 “hpe5022\_BER\_optimizeState”  
 “hpe5022\_BER\_optimize”  
 “hpe5022\_BER\_berMeasByteCount”  
 “hpe5022\_BER\_errorBitPerByte”  
 “hpe5022\_BER\_berDataLoggingMode”  
 “hpe5022\_BER\_measureBer”  
 “hpe5022\_BER\_ber\_Q”  
 “hpe5022\_BER\_sectorErrorCountSize\_Q”  
 “hpe5022\_BER\_sectorErrorCount\_Q”

## Programming Example Program

### Bit Error Track Profile Measurement

The bit error track profile measurement allows you to observe read offset characteristics of the bit error rate.

#### Example 2-25. Sample Program

```
Private Sub CmdBerTrackProfile_Click()
    Const BerUserDataBitRate As Double = 120000000#
    Const ReferenceClock As Double = 20000000#
    '
    Const BerTestPattern1 As String = "11001000"
    '
    Const TrackPreambleLength As Long = 1000
    Const GapLength As Long = 55 ' Dummy if the gap length is Auto
    Const SectPreambleLength As Long = 100
    Const DataLength As Long = 1024
    Const NoOfSector As Integer = 32
    Const noofave As Integer = 1
    Const MeasByteCount As Double = 1000
    Const ErrBitPerByte As Double = 1
    Const otcThreshold As Double = 0.001
    '
    Const NumOfPoint As Integer = 21
    Const OffsetRange As Double = 0.000002
    '
    Dim bitLength As Long, symbol As Long, totalSector As Long, lostSector As Long
    Dim ber As Double, otc As Double, otcPos As Double, otcNeg As Double
    Dim offset(NumOfPoint - 1) As Double
    Dim result(NumOfPoint - 1) As Double
    Dim Disp As String
    Dim i As Integer
    '
    ErrorCheck hpe5022_BER_userDataBitRate(HpE5022, BerUserDataBitRate)
    ErrorCheck hpe5022_BER_channelIcReferenceClock(HpE5022, ReferenceClock)
    '
    ' Create BER Data Pattern
    '
    bitLength = Len(BerTestPattern1)
    ErrorCheck hpe5022_BER_userPattern(HpE5022, hpe5022_BER_PAT_1, hpe5022_USER_DATA_BIN, bitLength, _
        BerTestPattern1)
    ErrorCheck hpe5022_BER_selectPattern(HpE5022, hpe5022_BER_PAT_1)
    '
    ' Define Track and Sector Format
    '

```

```

ErrorCheck hpe5022_BER_trackFormat(HpE5022, TrackPreambleLength, NoOfSector, VI_FALSE, GapLength)
ErrorCheck hpe5022_BER_sectorFormat(HpE5022, SectPreambleLength, DataLength)
ErrorCheck hpe5022_BER_berMeasByteCount(HpE5022, MeasByteCount)
ErrorCheck hpe5022_BER_errorBitPerByte(HpE5022, ErrBitPerByte)
ErrorCheck hpe5022_BER_channelIcFirCoefReset(HpE5022)
'
' Precompensation State
'
ErrorCheck hpe5022_BER_channelIcPrecompState(HpE5022, VI_TRUE)
'
' Define Encoder
'
ErrorCheck hpe5022_BER_channelIcEndec(HpE5022, VI_TRUE, hpe5022_BER_ENDEC_8_9, VI_TRUE)
'
' Defiene OTC Threshold Level
'
ErrorCheck hpe5022_BER_otcThreshold(HpE5022, otcThreshold)
'
' Define Optimization
'
ErrorCheck hpe5022_BER_optimizeState(HpE5022, hpe5022_BER_OPT_LPF, VI_TRUE)
ErrorCheck hpe5022_BER_optimizeState(HpE5022, hpe5022_BER_OPT_FIR, VI_TRUE)
ErrorCheck hpe5022_BER_optimizeState(HpE5022, hpe5022_BER_OPT_PREC_DEL_COAR, VI_TRUE)
ErrorCheck hpe5022_BER_optimizeState(HpE5022, hpe5022_BER_OPT_PREC_DEL_FINE, VI_TRUE)
ErrorCheck hpe5022_BER_optimize(HpE5022)
'
ErrorCheck hpe5022_BER_measureTrackProfile(HpE5022, hpe5022_SEQ_ER_WR_M, hpe5022_MEAS_BER _
, NumOfPoint, OffsetRange, noofave)
ErrorCheck hpe5022_executionMode(HpE5022, hpe5022_EXEC_WAIT_START)

ErrorCheck hpe5022_BER_trackProfileData_Q(HpE5022, hpe5022_DATA_BER, offset(0), result(0))
ErrorCheck hpe5022_BER_calculateOtc_Q(HpE5022, otc, otcPos, otcNeg)
Disp$ = "Bit Error Rate: " + vbCrLf _
+ "OTC: " + Format(otc, "0.00E-##") + vbCrLf _
+ "OTC Positive: " + Format(otcPos, "0.00E-##") + vbCrLf _
+ "OTC Negative: " + Format(otcNeg, "0.00E-##") + vbCrLf + vbCrLf _
+ "Offset : BER" + vbCrLf
For i = 0 To NumOfPoint - 1
    Disp$ = Disp$ + Format(offset(i), "0.00E-##") _
+ " : " + Format(result(i), "0.00E-##") + vbCrLf
Next i
LblResult.Caption = Disp$
End Sub

```

## Programming Example Program

### Functions used in this measurement

“hpe5022\_wai” on page 101  
“hpe5022\_abort” on page 103  
“hpe5022\_executionMode” on page 97  
“hpe5022\_BER\_userDataBitRate”  
“hpe5022\_BER\_trackFormat”  
“hpe5022\_BER\_sectorFormat”  
“hpe5022\_BER\_selectPattern”  
“hpe5022\_BER\_userPattern”  
“hpe5022\_BER\_channelIc\_Idn\_Q”  
“hpe5022\_BER\_channelIcReferenceClock”  
“hpe5022\_BER\_channelIcLowPassFilter\_Q”  
“hpe5022\_BER\_channelIcFirCoefReset”  
“hpe5022\_BER\_channelIcPrecompState”  
“hpe5022\_BER\_channelIcEndec”  
“hpe5022\_BER\_optimizeState”  
“hpe5022\_BER\_optimize”  
“hpe5022\_BER\_berMeasByteCount”  
“hpe5022\_BER\_errorBitPerByte”  
“hpe5022\_BER\_measureTrackProfile”  
“hpe5022\_BER\_trackProfileData\_Q”

## Adjacent Track Squeeze Measurement

The objective of this test is to specify the adjacent track spacings or track pitch in order to maximize track density with the condition that the specified error rate level is met or exceeded. Refer to Chapter 5 of the programming manual for details.

### Example 2-26. Sample Program

```
'Sample Program for On-track BER with Squeezing Adjacent Track

Private Sub CmdSqueeze_Click()

    Const BerUserDataBitRate As Double = 120000000# ' User Data Bit Rate [bps]
    Const ReferenceClock As Double = 200000000# ' Channel IC Reference Clock

    Const BerTestPattern1 As String = "11001000" ' Test Pattern in Binary Format

    Const TrackPreambleLength As Long = 1000 ' Track Preamble Length [Byte]
    Const GapLength As Long = 55 ' Dummy if the gap length is Auto [Byte]
    Const SectPreambleLength As Long = 100 ' Sector Preamble Length [Byte]
    Const DataLength As Long = 1024 ' Data Length [Byte]
    Const NoOfSector As Integer = 10 ' Number of Sector per Track
    Const NoOfave As Integer = 1
    Const MeasByteCount As Double = 1000 ' Measurement Byte Count [Byte]
    Const ErrBitPerByte As Double = 1 ' Error Bit Per Byte
    Const points As Integer = 50 'Number of measurement points for On-track BER

    Const HeadOffsetStart As Double = -0.000003 ' Start of Head Offset [Meter]
    Const HeadOffsetEnd As Double = 0.000003 ' End of Head Offset [Meter]
    Const NumOfPoints As Integer = 21 ' Number of Measurement Points
    Const back_AdjacentPos As Integer = 0.000003 '[m] Background Adjacent Track Position
    Const fore_AdjacentPos As Integer = 0.000004 '[m] Foreground Adjacent Track Position

    Dim HeadOffsetData(NumOfPoints - 1) As Double
    Dim On_trackProfile(NumOfPoints - 1) As Double

    Dim FilterCutOffFreq As Double, FilterBoost As Double
    Dim ber(NumOfPoints - 1) As Double
    Dim symbol(NumOfPoints - 1) As Long
    Dim totalSector(NumOfPoints - 1) As Long
    Dim lostSector(NumOfPoints - 1) As Long
    Dim bitLength As Long
    Dim NumOfSize As Long
    Dim delay(2) As Double, Property1() As Double
    Dim Disp As String
    Dim IcName As String * 10

    Dim i As Integer
```

## Programming Example Program

```
' FilterCutOffFreq = 20000000#
' FilterBoost = 5.5
' Property1(0) = xxxx
' Properry1(1) = xxxx
'
ErrorCheck hpe5022_BER_channelIcIdn_Q(HpE5022, IcName)
ErrorCheck hpe5022_BER_userDataBitRate(HpE5022, BerUserDataBitRate)
ErrorCheck hpe5022_BER_channelIcReferenceClock(HpE5022, ReferenceClock)
'
' Create BER Data Pattern
'
bitLength = Len(BerTestPattern1)
ErrorCheck hpe5022_BER_userPattern(HpE5022, hpe5022_BER_PAT_1, hpe5022_USER_DATA_BIN, bitLength, _
                                   BerTestPattern1)
ErrorCheck hpe5022_BER_selectPattern(HpE5022, hpe5022_BER_PAT_1)
'
' Define Track and Sector Format
'
ErrorCheck hpe5022_BER_trackFormat(HpE5022, TrackPreambleLength, NoOfSector, VI_FALSE, GapLength)
ErrorCheck hpe5022_BER_sectorFormat(HpE5022, SectPreambleLength, DataLength)
ErrorCheck hpe5022_BER_berMeasByteCount(HpE5022, MeasByteCount)
ErrorCheck hpe5022_BER_errorBitPerByte(HpE5022, ErrBitPerByte)
ErrorCheck hpe5022_BER_channelIcFirCoefReset(HpE5022)
'
' Specify Low Pass Filter
'
' ErrorCheck hpe5022_BER_channelIcLowPassFilter(HpE5022, FilterCutOffFreq, FilterBoost)
'
' Define Precompensation
'
' ErrorCheck hpe5022_BER_channelIcPrecompDelay(HpE5022, Delay(0))
ErrorCheck hpe5022_BER_channelIcPrecompState(HpE5022, VI_TRUE)
'
' Define Encoder
'
ErrorCheck hpe5022_BER_channelIcEndec(HpE5022, VI_TRUE, hpe5022_BER_ENDEC_8_9, VI_TRUE)
'
' Define Channel IC Property
'
' ErrorCheck hpe5022_BER_channelIcProperty(HpE5022, hpe5022_BER_CIC_xxxx_PROP_xxx, Property1(0))
'
' Define Optimization
'
ErrorCheck hpe5022_BER_optimizeState(HpE5022, hpe5022_BER_OPT_LPF, VI_TRUE)
ErrorCheck hpe5022_BER_optimizeState(HpE5022, hpe5022_BER_OPT_FIR, VI_TRUE)
ErrorCheck hpe5022_BER_optimizeState(HpE5022, hpe5022_BER_OPT_PREC_DEL_COAR, VI_TRUE)
ErrorCheck hpe5022_BER_optimizeState(HpE5022, hpe5022_BER_OPT_PREC_DEL_FINE, VI_TRUE)
ErrorCheck hpe5022_BER_optimize(HpE5022)
'
```



```

ErrorCheck hpe5022_BER_channelIcLowPassFilter_Q(HpE5022, FilterCutOffFreq, FilterBoost)

'
' Create Array of Head Offset Data
'
For i = 0 To NumOfPoints - 1
    HeadOffsetData(i) = HeadOffsetStart + _
        i * (HeadOffsetEnd - HeadOffsetStart) / (NumOfPoints - 1)
Next i

' Execute Measurement

ErrorCheck hpe5022_BER_measureAdjacentTrackSqueeze(HpE5022, hpe5022_BER_ADJACENT_TRACK_BOTH, hpe5022_BER_PAT_2, _
    back_AdjacentPos, hpe5022_BER_ADJACENT_TRACK_BOTH, _
    hpe5022_BER_PAT_5, NumOfPoints, HeadOffsetData(0), NoOfave)

' Query Test Results
'(Returns the data for every measurement point)
ErrorCheck hpe5022_BER_adjacentTrackSqueezeData_Q(HpE5022, On_trackProfile(0))

'(Returns the computed ber, symbol, total sector and lost sector for every measurement point)
ErrorCheck hpe5022_BER_adjacentTrackSqueezeDataEx_Q(HpE5022, ber(0), symbol(0), totalSector(0), lostSector(0))

'Display Test Results

For i = 0 To NumOfPoints - 1
    Disp$ = Disp$ + Format(HeadOffsetData(i), "0.00E-##") + " : " + _
        Format(On_trackProfile(i), "0.00E-##") + " : " + _
        Format(ber(i), "0.00E-##") + vbCrLf
Next i

'LblChannelICName.Caption = IcName$
LblResult.Caption = Disp$

End Sub

```

### Functions used in this measurement

“hpe5022\_BER\_userDataBitRate”  
 “hpe5022\_BER\_trackFormat”  
 “hpe5022\_BER\_sectorFormat”  
 “hpe5022\_BER\_selectPattern”  
 “hpe5022\_BER\_userPattern”  
 “hpe5022\_BER\_channelIc\_Idn\_Q”

Programming  
**Example Program**

“hpe5022\_BER\_channelIcReferenceClock”  
“hpe5022\_BER\_channelIcLowPassFilter\_Q”  
“hpe5022\_BER\_channelIcFirCoefReset”  
“hpe5022\_BER\_channelIcPrecompState”  
“hpe5022\_BER\_channelIcEndec”  
“hpe5022\_BER\_optimizeState”  
“hpe5022\_BER\_optimize”  
“hpe5022\_BER\_berMeasByteCount”  
“hpe5022\_BER\_errorBitPerByte”  
“hpe5022\_BER\_measureAdjacentTrackSqueeze”  
“hpe5022\_BER\_adjacentTrackSqueezeData\_Q”  
“hpe5022\_BER\_adjacentTrackSqueezeDataEx\_Q”

## Track Offset Compensation

The objective of this program is to compensate the head position during read sequence in order to make the read head position be at the center of write track. See the Track Offset Compensation section in the chapter 5 of the operation manual for sequence flow.

### Example 2-27. Sample Program

```
'Private Sub CmdTrkOffsetComp_Click()
    Const CalibrationSize As Integer = 21 ' Track Profile Points for Calibration [points]
    Const CalibrationRange As Double = 0.000003 ' Track Profile Range for Calibration [m]
    Const NumOfAverage As Integer = 100
    Const RepeatInterval As Integer = 10
    Const AveForRev As Integer = 2
    '
    Dim HeadOffset As Double, taa As Double, taaPos As Double, taaNeg As Double, taaAsym As Double
    Dim AcTaa As Double, AcTaaPos As Double, AcTaaNeg As Double, AcTaaAsym As Double
    Dim i As Integer
    Dim Disp As String
    '
    Disp$ = "Offset Value: " + vbCrLf
    AcTaa = 0
    AcTaaPos = 0
    AcTaaNeg = 0
    AcTaaAsym = 0
    '
    ' Define Track Profile Measurements (points and range) for Calibration.
    '
    ErrorCheck hpe5022_trackOffsetCompProfile(AgilentE5022, CalibrationSize, CalibrationRange)
    '
    ' Define the Burst Pattern Automatically.
    ' When you define manually, use hpe5022_trackOffsetCompPattern
    '
    ErrorCheck hpe5022_trackOffsetCompPatternAuto(AgilentE5022)
    '
    ' Write Burst Pattern
    '
    ErrorCheck hpe5022_writeTrackOffsetCompPattern(AgilentE5022)
    '
    ' Set the average number for hpe5022_executeTrackOffsetComp
    '
    ErrorCheck hpe5022_trackOffsetCompRevolution(AgilentE5022, AveForRev)
    '
    ' Track Offset Compensation State ON
    ' Write & Read Data Pattern besides the Burst Pattern area.
    '
    ErrorCheck hpe5022_trackOffsetCompPatternState(AgilentE5022, VI_TRUE)
    '
    ' Erase on Data Area and Write Data Pattern
    '
    '

```

## Programming Example Program

```
ErrorCheck hpe5022_measureTaa(AgilentE5022, hpe5022_SEQ_ER_WR_M, 1)
ErrorCheck hpe5022_taa_Q(AgilentE5022, taa, taaPos, taaNeg, taaAsym)
'
AcTaa = AcTaa + taa
AcTaaPos = AcTaaPos + taaPos
AcTaaNeg = AcTaaNeg + taaNeg
AcTaaAsym = AcTaaAsym + taaAsym
'
For i = 1 To NumOfAverage
    '
    ' Each Repeat Interval time, Drift is compensated.
    ' If you want to know how long drifted, use hpe5022_trackOffsetCompValue_Q
    '
    If i Mod RepeatInterval = 0 Then
        ErrorCheck hpe5022_executeTrackOffsetComp(AgilentE5022)
        ErrorCheck hpe5022_trackOffsetCompValue_Q(AgilentE5022, HeadOffset) ' (optional)
        Disp$ = Disp$ + Format(i, "0") + ": " + Format(HeadOffset, "0.00E-##") + vbCrLf ' (optional)
    End If
    '
    ' Measure TAA as an example
    '
    ErrorCheck hpe5022_measureTaa(AgilentE5022, hpe5022_SEQ_M, 10)
    ErrorCheck hpe5022_taa_Q(AgilentE5022, taa, taaPos, taaNeg, taaAsym)
    AcTaa = AcTaa + taa
    AcTaaPos = AcTaaPos + taaPos
    AcTaaNeg = AcTaaNeg + taaNeg
    AcTaaAsym = AcTaaAsym + taaAsym
Next i
'
taa = AcTaa / NumOfAverage
taaPos = AcTaaPos / NumOfAverage
taaNeg = AcTaaNeg / NumOfAverage
taaAsym = AcTaaAsym / NumOfAverage
'
LblResult.Caption = Disp$ + vbCrLf _
    + "TAA :" + vbCrLf _
    + "TAA: " + Format(taa, "0.00E-##V") + vbCrLf _
    + "TAA+: " + Format(taaPos, "0.00E-##V") + vbCrLf _
    + "TAA-: " + Format(taaNeg, "0.00E-##V") + vbCrLf _
    + "TAA Asym: " + Format(taaAsym, "0.0%")

End Sub
```

### Functions used in this measurement

“hpe5022\_trackOffsetCompProfile” on page 964

“hpe5022\_trackOffsetCompPatternAuto” on page 974

“hpe5022\_writeTrackOffsetCompPattern” on page 976

“hpe5022\_trackOffsetCompPatternState” on page 978

“hpe5022\_trackOffsetCompRevolution” on page 981

“hpe5022\_executeTrackOffsetComp” on page 983

“hpe5022\_trackOffsetCompValue\_Q” on page 986

## Programming Example Program

### Burst Pattern Write

Write Bursts are position information written along the data track in order to detect the position of the head and to see to it that the head stays on the center of its designated track.

#### Example 2-28. Sample Program

```
'Sample Program for Burst Pattern Write

Private Sub CmdWriteBurst_Click()

Const segment As Integer = 2
Const offset As Integer = 0.000005 'Write track offset [meter]
Const burstStart As Integer = 0.00005 'Start of burst pattern [sec]
Const burstLength As Integer = 0.0001 'Length of burst pattern [sec]
Const gateDelay As Integer = 0.002 'Time delay of write gate [sec]
Const gateAperture As Integer = 0.0001 'Aperture time of write gate [sec]
Const frequency As Double = 500000 'Frequency of burst pattern [bps]

'Configure Write Burst Pattern
ErrorCheck hpe5022_burstPatternConfig(HpE5022, burstStart, burstLength)
ErrorCheck hpe5022_burstGateConfig(HpE5022, gateDelay, gateAperture)
ErrorCheck hpe5022_burstFrequencyConfig(HpE5022, frequency)

'To write multi-bursts pattern change the parameters above and re-execute "hpe5022_writeBurst"
'Execute Write Burst Pattern
ErrorCheck hpe5022_writeBurst(HpE5022, segment, offset)

'Query Burst Pattern
ErrorCheck hpe5022_burstPatternConfig_Q(HpE5022, burstStart, burstLength)
ErrorCheck hpe5022_burstGateConfig_Q(HpE5022, gateDelay, gateAperture)

End Sub
```

#### Description

The E5022/E5023 system allows the user to write burst pattern along the media in any form as required by measurement applications. E5022/E5023 will only allow one burst pattern to be written for each track rotation. Thus in order to write multi-burst pattern the user must set the gate parameters for each track rotation.

Due to internal constraints of E5037A (data generator module), data writing is actually delayed by a value of  $30 \times 16T$  ( $T=1/f$ , where  $f$  is the frequency of the burst pattern). Thus, the user must compensate this value when setting the burst length. Refer to “hpe5022\_burstPatternConfig” function of the programming manual for details.

#### Functions used in this measurement

“hpe5022\_writeBurst” on page 993

“hpe5022\_burstPatternConfig” on page 997

“hpe5022\_burstPatternConfig\_Q” on page 1000

“hpe5022\_burstFrequencyConfig” on page 1001

“hpe5022\_burstFrequencyConfig\_Q” on page 1003

“hpe5022\_burstGateConfig” on page 1004

“hpe5022\_burstGateConfig\_Q” on page 1007

## Programming Example Program

### Setup-then-Measure Program

The setup-then-measure program is provided to give a high through put measurement. The setup for each measurement is done in advance. The program listed below shows some portion of the sample program. The whole sample program is provided by file name "sample2".

#### Example 2-29. Setup then Measure Sample Program

```
Private Sub CmdMeasure_Click()

    Dim i As Integer
    Dim Disp As String
    '
    Track(1) = TrackNoForOverWrite1
    Track(2) = TrackNoForOverWrite2
    '
    ErrorCheck hpe5022_measure(hpe5022, IdParametric)
    ErrorCheck hpe5022_parametric_Q(hpe5022, HFTAA, LFTAA, IsolatedTAA, pw, baseline, resolution)

    For i = 1 To 2
        ErrorCheck hpe5022_track(hpe5022, Track(i))
        ErrorCheck hpe5022_measure(hpe5022, IdOverwrite)
        ErrorCheck hpe5022_overwrite_Q(hpe5022, overwrite(i))
    Next i

    ErrorCheck hpe5022_selectPattern(hpe5022, hpe5022_PAT_HF)
    ErrorCheck hpe5022_measure(hpe5022, IdTrackProfile)
    ErrorCheck hpe5022_trackProfileData_Q(hpe5022, hpe5022_TP_DATA_AVE, hpe5022_DATA_TAA, TrackProfileResult(0))
    ErrorCheck hpe5022_calculateTrackWidth_Q(hpe5022, hpe5022_DATA_TAA, trackWidth)
    ErrorCheck hpe5022_calculateReadWriteOffset_Q(hpe5022, hpe5022_DATA_TAA, ReadWriteOffset)

    ErrorCheck hpe5022_selectPattern(hpe5022, hpe5022_PAT_LF)
    ErrorCheck hpe5022_measure(hpe5022, IdWriteCurrentSweep)
    ErrorCheck hpe5022_writeCurrentSweepData_Q(hpe5022, hpe5022_DATA_TAA, WriteCurrentResult(0))

    LblResult(0).Caption = "Parametric Measuremet:" + vbCrLf _
        + " HF TAA: " + Format(HFTAA, "0.00E-##V") + vbCrLf _
        + " LF TAA: " + Format(LFTAA, "0.00E-##V") + vbCrLf _
        + " Isolated TAA: " + Format(IsolatedTAA, "0.00E-##V") + vbCrLf _
        + " PW: " + Format(pw, "0.00E-##s") + vbCrLf _
        + " Baseline: " + Format(baseline, "0.00E-##V") + vbCrLf _
        + " Resolution: " + Format(resolution, "0.0%") + vbCrLf _
        + "Overwrite Measurement " + vbCrLf _
        + " Overwrite 1: " + Format(overwrite(1), "0.0dB") + vbCrLf _
        + " Overwrite 2: " + Format(overwrite(2), "0.0dB")
    '
    '
    Disp$ = "Track Profile: TAA HF" + vbCrLf _
        + "Track Width: " + Format(trackWidth, "0.00E-##m") + vbCrLf _
```



```

        + "ReadWrite Offset: " + Format(ReadWriteOffset, "0.00E-##m") + vbCrLf
    For i = 0 To NumOfHeadOffsetData - 1
        Disp$ = Disp$ + Format(HeadOffsetData(i), "0.00E-##m") + " : " + Format(TrackProfileResult(i), "0.00E-##V") +
vbCrLf
    Next i
    LblResult(1).Caption = Disp$

    Disp$ = "WriteCurrent: TAA LF" + vbCrLf
    For i = 0 To NumOfWriteCurrentData - 1
        Disp$ = Disp$ + Format(WriteCurrentData(i), "0.00E-##A") + " : " + Format(WriteCurrentResult(i), "0.00E-##V") +
vbCrLf
    Next i
    LblResult(2).Caption = Disp$
End Sub
Private Sub CmdSetup_Click()
    '
    ' Instrument Address Set (This exapmple for Option 102/103)
    '
    Const NumberOfInstrument As Integer = 7
    '
    Dim status, StatusArray(NumberOfInstrument - 1) As Long
    Dim rsrc As rsrcArrayType
    Dim ModuleNo, i As Integer
    Dim ModuleDescription As Variant
    Dim Disp As String
    ModuleDescription = Array("E5035A ", "E5036A ", "E5037A ", "E5038A ", _
        "E5040A ", "Spinstand ", "Oscilloscope ")
    '
    ' Instruments Address Set
    '
    rsrc.instr(0) = "VXI0::5::INSTR" ' E5035A Spinstand I/F Module
    rsrc.instr(1) = "VXI0::6::INSTR" ' E5036A FilterMatrix Module
    rsrc.instr(2) = "VXI0::7::INSTR" ' E5037A Data Generator Module
    rsrc.instr(3) = "VXI0::8::INSTR" ' E5038A Parametric Module
    rsrc.instr(4) = "VXI0::10::INSTR" ' E5040A Spectrum Measurement Module
    rsrc.instr(5) = "ASRL1::INSTR" ' Spinstand
    rsrc.instr(6) = "GPIB0::7::INSTR" ' Ocilloscope
    '
    ' Initialize and Get Handle ID
    '
    status = hpe5022_init(NumberOfInstrument, rsrc, StatusArray(0), hpe5022)
    '
    ' Error Handle
    '
    If status = 0 Then
        Call MsgBox("Initialize Succeed", vbOKOnly, "Message")
    Else
        Disp$ = ""
        For ModuleNo = 0 To 6
            If StatusArray(ModuleNo) <> 0 Then
                Disp$ = Disp$ + ModuleDescription(ModuleNo)
            End If
        Next ModuleNo
    End If
End Sub

```

## Programming Example Program

```
        Call MsgBox(Disp$ + "Initialize Failed ", vbOKOnly, "Error")
    End
End If
'
' Create Head Track Offset Data Array for Track Profile Measurement
'
For i = 0 To NumOfHeadOffsetData - 1
    HeadOffsetData(i) = HeadOffsetStart + _
        i * (HeadOffsetEnd - HeadOffsetStart) / (NumOfHeadOffsetData - 1)
Next i
'
' Create Write Current Data Array for Write Current Sweep Measurement
'
For i = 0 To NumOfWriteCurrentData - 1
    WriteCurrentData(i) = WriteCurrentStart + _
        i * (WriteCurrentEnd - WriteCurrentStart) / (NumOfWriteCurrentData - 1)
Next i
'
' Spindle RPM
'
ErrorCheck hpe5022_spindleSpeed(hpe5022, SpindleRPM)
'
' Set Drive Configuration
'(You can use the function of either "hpe5022_driveConfigRadiusSkew" or "hpe5022_driveConfigPivot".
' In this example, hpe5022_driveConfigPivot is used.)
'
ErrorCheck hpe5022_driveConfigPivot(hpe5022, PivotToCenter, PivotToGap)
'
' Set the HP Part Number of Cassette
'
ErrorCheck hpe5022_hgaCassette(hpe5022, CassetteID)
'
' Set HGA Dimension
'
ErrorCheck hpe5022_hgaDimension(hpe5022, RefBoss, SliderGap, TipBoss, BottomBoss, Bossid)
'
' Set Inhibit Area Margin
'
ErrorCheck hpe5022_inhibitMargin(hpe5022, InhibitMargin)
'
' Track Format
'
ErrorCheck hpe5022_dataArea(hpe5022, IDRRadius, NumOfTrack, TrackPitch)
'
' Head Road Radius and Initial Track Number
'
ErrorCheck hpe5022_headLoadConfig(hpe5022, hpe5022_LOAD_DYNAMIC, HeadLoadRadius, InitialTrackNo)
'
' Write, Sense, Erase Current, Erase Type
'
ErrorCheck hpe5022_writeCurrent(hpe5022, WriteCurrent)
ErrorCheck hpe5022_senseCurrent(hpe5022, SenseCurrent)
ErrorCheck hpe5022_eraseCurrent(hpe5022, EraseCurrent)
```

```

ErrorCheck hpe5022_eraseType(hpe5022, hpe5022_ERASE_DC_NEG)
'
' Filter Matrix Filter Select
'
ErrorCheck hpe5022_selectFilter(hpe5022, hpe5022_FILTER3)
'
' Channel Bit Rate
'
ErrorCheck hpe5022_channelBitRate(hpe5022, ChannelBitRate)
'
' Read Track Offset
'
ErrorCheck hpe5022_readTrackOffset(hpe5022, ReadTrackOffset)
'
' Write Track Offset
'
ErrorCheck hpe5022_writeTrackOffset(hpe5022, WriteTrackOffset)
'
' Test Data Pattern
'
ErrorCheck hpe5022_hfPattern(hpe5022, PeriodOfHFPattern)
ErrorCheck hpe5022_lfPattern(hpe5022, PeriodOfLFPattern)
ErrorCheck hpe5022_isolatedPulsePattern(hpe5022, PeriodOfIsolatedPattern)
ErrorCheck hpe5022_overwriteHfPattern(hpe5022, PeriodOfOWHFDataPattern)
ErrorCheck hpe5022_overwriteLfPattern(hpe5022, PeriodOfOWLFDDataPattern)
'
' Measurement Mode is set at AUTO
'
ErrorCheck hpe5022_measurementMode(hpe5022, hpe5022_MEAS_AUTO)
'
' Parametric Measurement Setup
'
ErrorCheck hpe5022_pwThreshold(hpe5022, PwRatio, hpe5022_PW_TAA_TRACKED)
ErrorCheck hpe5022_setupParametric(hpe5022, ParametricNumOfAverage, IdParametric)
'
' Overwrite Measurement Setup
'
ErrorCheck hpe5022_setupOverwrite(hpe5022, OWNumOfAverage, IdOverwrite)
'
' Track Profile Measurement Setup
'
ErrorCheck hpe5022_setupTrackProfile(hpe5022, hpe5022_SEQ_ER_WR_M, hpe5022_TP_BOTH, hpe5022_MEAS_TAA, _
                                   NumOfHeadOffsetData, HeadOffsetData(0), IdTrackProfile)
'
' Write Current Sweep Setup
'
ErrorCheck hpe5022_setupWriteCurrentSweep(hpe5022, hpe5022_MEAS_TAA, NumOfWriteCurrentData, _
                                           WriteCurrentData(0), IdWriteCurrentSweep)
'
' Drive On (Moter On, Head Load)
'
ErrorCheck hpe5022_driveState(hpe5022, VI_TRUE)
'

```

## Programming Example Program

```
' Track Number
'
ErrorCheck hpe5022_track(hpe5022, TrackNo)
'
' AutoConfiguration
'
ErrorCheck hpe5022_autoConfig(hpe5022, taa, pwLength)
LblResult(0).Caption = "Auto Config Done" + vbCrLf + "TAA: " + Format(taa, "0.00E-##V") _
    + " PW: " + Format(pwLength, "0.00E-##s")

End Sub
```

### Description

After the “hpe5022\_measure” function is executed, you should query for the corresponding measurement at once. Do not execute the “hpe5022\_measure” functions continuously as shown below.

```
ErrorCheck hpe5022_measure(hpe5022, 1)
ErrorCheck hpe5022_measure(hpe5022, 2)
ErrorCheck hpe5022_parametric_Q(hpe5022, HFTAA, LFTAA, IsolatedTAA, pw, baseline, resolution)
ErrorCheck hpe5022_overwrite_Q(hpe5022, overwrite(i))
```

## Step 7. Abort

The abort step is used to abort long measurements such as BER, Spectrum SNR, Measurement Spectrum and Popcorn Noise.

### Example 2-30. Sample Program

```
Public HpE5022Abort As Boolean

Private Sub CmdAbort_Click()
    HpE5022Abort = True
End Sub

Private Sub CmdSepctralSnr_Click()
    Const startFreq As Double = 200000000# ' Start Frequency [Hz]
    Const stopFreq As Double = 400000000# ' Stop Frequency [Hz]
    Const ResBW As Double = 10000# ' Resolution Band Width Frequency [Hz]
    Const VideoBW As Double = 10000# ' Video Band Width Frequency [Hz]
    Dim Sig As Double, noise As Double, snr As Double, EndState As Long
    EndState = 1
    '
    ' Select Test Data Pattern
    '
    ErrorCheck hpe5022_selectPattern(HpE5022, hpe5022_PAT_HF)
    ErrorCheck hpe5022_spectralSnrFrequency(HpE5022, startFreq, stopFreq)
    ErrorCheck hpe5022_spectralSnrBandWidth(HpE5022, ResBW, VideoBW)
    '
    ' Set Execution Mode to accept wait
    '
    ErrorCheck hpe5022_executionMode(HpE5022, hpe5022_EXEC_WAIT_START)
    '
    ' Measurement
    '
    ErrorCheck hpe5022_measureSpectralSnr(HpE5022, hpe5022_SEQ_ER_WR_M)
    Do Until EndState = VI_SUCCESS
        '
        ' Progress the measurement sequence for 0.5 second on the E5022/E5023 measurement thread
        ' Then,if the function finished, "VI_SUCCESS" is returned.
        '
        EndState = hpe5022_wai(HpE5022, 0.5)
        '
        ' Check if abort occur
        '
        HpE5022Abort = False
        DoEvents
        If HpE5022Abort = True Then
            ErrorCheck hpe5022_abort(HpE5022)
            LblResult.Caption = "Measurement aborted"
            '
            ' Set Execution Mode to default Setting
        End If
    Loop
End Sub
```

## Programming Example Program

```

    ,
    ErrorCheck hpe5022_executionMode(HpE5022, hpe5022_EXEC_WAIT_COMPLETE)
    Exit Sub
End If
Loop
,
' Set Execution Mode to default Setting
,
ErrorCheck hpe5022_executionMode(HpE5022, hpe5022_EXEC_WAIT_COMPLETE)
,
' Check if measurement finished properly
,
ErrorCheck hpe5022_lastMeasureState_Q(HpE5022, EndState)
,
If EndState <> VI_SUCCESS Then
    LblResult.Caption = "Measurement Error"
Else
,
' Query Measurement Result
,
ErrorCheck hpe5022_spectralSnr_Q(HpE5022, Sig, noise, snr)
,
' Display Measurement Result
,
LblResult.Caption = "Spectral SNR: HF " + vbCrLf _
    + "Signal: " + Format(Sig, "0.00E-##") + " V" + vbCrLf _
    + "Noise: " + Format(noise, "0.00E-##") + "rmsV" + vbCrLf _
    + "SNR: " + Format(snr, "0.00E-##") + " V" + vbCrLf
End If
End Sub
```

### Description

A sample program of an abort function for “Spectral SNR” measurement is provided above. The execution mode is set at “hpe5022\_EXEC\_WAIT\_START” in the “hpe5022\_executionMode” function in order to execute measurement of E5022/E5023 in another thread. As soon as the “hpe5022\_measureSpectralSnr” function is executed. The thread is changed to Visual Basic. In other words, the Visual basic can execute its command. While the “hpe5022\_wai” function is executed, thread is changed to measurement of E5022/E5023 and measurement is proceeded for the specified period. Then the “hpe5022\_wai” function returns the status if the measurement is completed. After that the thread is returned to Visual Basic again.

DoEvent Function of Visual Basic pass the control to the operating system to detect if the other event occurs.

### Functions used in this measurement

“hpe5022\_executionMode” on page 97

“hpe5022\_wai” on page 101

“hpe5022\_abort” on page 103

“hpe5022\_lastMeasureState\_Q” on page 100

## Step 6. Closing

The closing step turns off the drive and closes the system. This section briefly explains how to close the system using the sample program listed below.

### Example 2-31. Sample Program

```
Private Sub CmdClose_Click()
    '
    ' Instrument Address Set
    '
    Const NumberOfInstrument As Integer = 6
    '
    Dim CloseStatusArray(NumberOfInstrument - 1) As Long
    '
    ErrorCheck hpe5022_close(HpE5022, CloseStatusArray(0))
End Sub
```

### Description

The number of instruments to be closed should not be less than the number of initialized instrument specified in the Initializing Program.

Programming  
**Example Program**



---

**3**      **Function Reference**

## **About this chapter**

This chapter provides information on functions of the “hpe5022\_32.dll”. The syntax code of each function are provided in C language and Visual Basic. The type definition of C language is Agilent VISA Type Definition. See the Agilent VISA User’s Manual for definition.

In “Parameters” section of each function, the “Preset Value” is the default value of a parameter when initialization or reset function is executed. The “Values” is a code which contains a numeric number. The codes express the selection items if the parameter is selection type and it also express the minimum and the maximum values if the parameter is numeric number type.

In “Return Values” section, the completion code and the error code is provided. The completion code is a return value when the function is done successfully. The error code is a return value when the function fails to operate for some reason. The sample usage of return values is shown in a sample sub function named “ErrorCheck” in “Step 1. Initialization” on page 18.

## System Open/Close/Reset System Function

This section describes the functions that are used to initialize, close, reset and abort the E5022A/B system.

### hpe5022\_init

#### C Syntax

```
ViStatus hpe5022_init(ViInt16 instrNum, ViRsrc rsrcArray[], ViStatus statArray[], ViPSession id);
```

#### Visual Basic Syntax

```
hpe5022_init(ByVal instrNum, ByRef rsrcArray As rsrcArrayType, ByRef statArray As long, ByRef id As Long) As long
```

#### Description

The function initializes the software connection to all instruments (module, box instrument and spinstand) and verifies that they are in the system. In addition, it places the instrument in the reset state. The setting of all functions is set to the value shown in the “Preset Value” of the parameters section.

#### Parameters

- instrNum
 

Description	Specifies the number of the instruments (module, oscilloscope, spectrum analyzer, spinstand) incorporated in E5022A/B system.
Direction	IN
- rsrcArray
 

Description	Specify the resources of E5022A/B or E5023A system components. The system includes the E5035A/B, E5036A, E5037A/B/C/D, E5038A/B, E5040A (4395A) and spinstand are all mandatory components, while the oscilloscope, E5040A (4396B), E5039A/B/C bit error test module and E5041A dual counter module are optional components of the system.
-------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

This is an data array and its size is the same as the number of instrNum. Order of components in this array is arbitrary.

“rsrcArrayType” data type for Visual Basic is defined in the “hpe5022.bas” file as:

```
Public Type rsrcArrayType
instr(hpe5022_INSTR_NUM_MAX) As String
End Type
```

The component description string should be the same as the resource symbolic name parameter of VISA viOpen() function of the VISA library. The Type data Type for Visual Basic is defined as follows: See the Agilent VISA User’s

Function Reference  
**System Open/Close/Reset System Function**

Manual.

Direction IN

Values

Components	Symbolic name of “resource” at factory default setting
Agilent E5035A/B (Spinstand Interface Module) <sup>a</sup>	“VXI0::5::INSTR”
Agilent E5036A (Filter Matrix Module)	“VXI0::6::INSTR”
Agilent E5037A/B/C/D (Data Generator Module) <sup>b</sup>	“VXI0::7::INSTR”
Agilent E5038A/B (Parametric Measurement Module) <sup>c</sup>	“VXI0::8::INSTR”
Agilent E5039A/B/C (Bit Error Test Module) <sup>d</sup>	“VXI0::9::INSTR”
Agilent E5040A (Spectrum Measurement Module) <sup>e</sup>	“VXI0::10::INSTR”
Agilent E5041A (Popcorn Noise Tester)	"VXI0::11::INSTR"
Agilent 54845A (Oscilloscope)	"GPIB0::7::INSTR"
Agilent 4395A (Spectrum Analyzer) <sup>*e</sup>	“GPIB0::17::INSTR”
3GHz Spectrum Analyzer <sup>g</sup>	“GPIB0::18::INSTR”
Agilent 4396B (High Frequency Spectrum Analyzer) <sup>f,g</sup>	"GPIB0::18::INSTR"
Agilent E5010B/E5011A/E5010C/E5013A (Spindtand)	"ASRL1::INSTR"

- a. E5035A and E5035B are exclusive.
- b. E5037A, E5037B, E5037C, and E5037D are exclusive.
- c. E5038A and E5038B are exclusive.
- d. E5039A, E5039B, and E5039C are exclusive.
- e. E5040A and 4395A are exclusive.
- f. Where the GPIB address of 4396B is 18.
- g. 3GHz Spectrum Analyzer and 4396B are exclusive.

**NOTE**

The GPIB address besides 18 can be selectable for 4396B. In that case, change the xx in “GPIB0::xx::INSTR” at desired number. For example, if the 4396B GPIB address is 19, it will be “GPIB0::19::INSTR”.

- statArray

Description Returns the result of initialization for each component (instruments and spinstand). The returned results are actually error codes of each module/instrument.

The results are returned in array type whose size is the same as the number of ‘instNum’. The order of contents in array is the same as ‘rsrcArray’.

- Direction           OUT
- id
- Description       Returns the system identifier. This value is used to identify the system session when using other E5022A/B functions.  
  
“VI\_NULL” is returned when an error occurs during initialization.
- Direction           OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_MEM_ALLOC	Can't allocate enough memory. Reboot your PC.
hpe5022_ERROR_ERROR_OPEN	Unable to open some instruments. Check the cable connections, VXI ULA and GPIB Address.
hpe5022_ERROR_FUNCTION_NOT_LOADED	Unable to load the DLL file. Perform the E5022A/B installation software or check if file is installed in the PC. The location of the DLL file is described in chapter 2.
hpe5022_ERROR_HARD_MISS	Hardware is missing. Check the system components.
hpe5022_ERROR_INTERLOCK	The spinstand is out of air. Check if air is supplied to the spinstand.
hpe5022_ERROR_NO_OPTION	An option for oscilloscope is not installed. This function can only be used when the system has an oscilloscope.
hpe5022_ERROR_NSUP_HAMP	Installed head amplifier is not supported. Confirm the cable connection and if the head amplifier DLL is installed.
hpe5022_ERROR_NSUP_CHAN_IC	Installed channel IC board in the E5039A/B/C is not supported. Confirm the connection of the board and if the channel IC DLL is installed.

Function Reference  
**System Open/Close/Reset System Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_HARD	Hardware Error is detected. Contact Agilent Technologies.
hpe5022_ERROR_REVISION	Some DLLs and/or module firmware revisions are in conflict. Reinstall the system software.

**See Also**      “hpe5022\_close” on page 95

## hpe5022\_close

### C Syntax

```
ViStatus hpe5022_close(ViSession id, ViStatus statArray[]);
```

### Visual Basic Syntax

```
hpe5022_close(ByVal id As Long, ByRef statArray As Long) As Long
```

### Description

This function terminates the software connection to all components (module, box instrument and spinstand) and de-allocates system resources.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- statArray
 

Description	Returns error code array whose size is defined by "instrNum" of hpe5022_init function.
	The order of components in this array corresponds to the 'rsrcArray' of the "hpe5022_init" function.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_CLOSE	Unable to close some components (module, box instrument and spinstand).

### See Also

"hpe5022\_init" on page 91

**System Open/Close/Reset System Function****hpe5022\_reset****C Syntax**

```
ViStatus hpe5022_reset(ViSession id, ViStatus statArray[]);
```

**Visual Basic Syntax**

```
hpe5022_reset(ByVal id As Long, ByRef statArray As Long )As Long
```

**Description**

This function places E5022A/B at the default state. The setting for all functions are set to the values shown in the “Preset Value” in parameters section.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- statArray
 

Description	Returns the error codes of each module whose size is defined by the (instr_num). Instr_num is a value which is passed to hpe5022_init() function as an instrNum parameter.  The order of array codes in this array is the same as the order of components in the 'rsrcArray' parameter of the "hpe5022_init" function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_RESET	Unable to reset on some components (modules, box instrument and spinstand).
hpe5022_ERROR_HARD_MISS	Hardware is missing. Check the system components.
hpe5022_ERROR_INTERLOCK	The spinstand is out of air. Check if air is supplied to the spinstand.

**See Also**

“hpe5022\_init” on page 91



## Abort Function

This section describes the functions to abort a measurement.

### hpe5022\_executionMode

#### C Syntax

ViStatus hpe5022\_executionMode(ViSession id, ViInt16 mode);

#### Visual Basic Syntax

hpe5022\_executionMode(ByVal id As Long, ByVal mode As Integer) As Long

#### Description

This function specifies the type of test execution to be used when the sequence is setup. There are two ways of setting up this mode, one is by “hpe5022\_EXEC\_WAIT\_START” and the other is by “hpe5022\_WAIT\_COMPLETE” mode.

When the execution mode is set to “hpe5022\_EXEC\_WAIT\_COMPLETE”, then the control of Visual Basic and VEE will not return from the time the measurement is executed until the measurement is complete. Control is a graphical object, such as a text box, a rectangle, or a command button, that you place on the development environment to display data, or perform an action.

In other hand, when the execution mode is set to “hpe5022\_EXEC\_WAIT\_START”, then measurement of E5022A/B will be executed in another thread. The control of Visual Basic and VEE will return at once after the time the measurement is executed, so that Visual Basic and VEE can execute its program step. When “hpe5022\_wai” is executed, thread is changed then the measurement is proceeded for the specified period. After that, the “hpe5022\_wai” function returns the status if the measurement is completed, then the thread is changed to Visual Basic and VEE. Therefore, When you want to abort a measurement, set it to “hpe5022\_EXEC\_WAIT\_START”, then execute “hpe5022\_wai” to monitor if the measurement is completed.

This function also affects both the “hpe5022\_measure” and “hpe5022\_executeSeq” functions.

See “Step 7. Abort” on page 85 for sample program.

#### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- mode
 

Description	Specifies the test execution mode.
Preset Value	hpe5022_EXEC_WAIT_COMPLETE

**Abort Function**

## Values

Name	Description
hpe5022_EXEC_WAIT_START	This mode executes the E5022 measurement in another thread, i.e, other functions can be executed along the VEE and VB threads.
hpe5022_EXEC_WAIT_COMPLETE	This mode waits for the measurement sequence to complete after its execution until its finished.

Direction IN

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'mode' is out of range.

**See Also**

“hpe5022\_executionMode\_Q” on page 99

“hpe5022\_wai” on page 101

“hpe5022\_measure” on page 387

“hpe5022\_executeSeq”

## hpe5022\_executionMode\_Q

### C Syntax

ViStatus hpe5022\_executionMode\_Q(ViSession id, ViPInt16 mode);

### Visual Basic Syntax

hpe5022\_executionMode\_Q(ByVal id As Long, ByRef mode As Integer) As Long

### Description

This function returns the test execution mode of the measurement sequence.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- mode
 

Description	Returns the test execution mode specified by "hpe5022_executionMode".
Values	Same as 'mode' in the "hpe5022_executionMode" function.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

"hpe5022\_executionMode" on page 97

**Abort Function****hpe5022\_lastMeasureState\_Q****C Syntax**

```
ViStatus hpe5022_lastMeasureState_Q(ViSession id, ViPStatus stat);
```

**Visual Basic Syntax**

```
hpe5022_lastMeasureState_Q(ByVal id As Long, ByRef stat As Long) As Long
```

**Description**

This function queries the run-time error status of the measurement sequence. This function is used to check if the measurement is finished properly when the “hpe5022\_executionMode” is set to “hpe5022\_EXEC\_WAIT\_START”.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- stat
 

Description	Returns the error status. If the last measurement sequence is successful then VI_SUCCESS is returned.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'stat' is invalid.

**See Also**

“hpe5022\_executionMode” on page 97

## hpe5022\_wai

### C Syntax

ViStatus hpe5022\_wai(ViSession id, ViReal64 timeout);

### Visual Basic Syntax

hpe5022\_wai(ByVal id As Long, ByVal timeout As Double) As Long

### Description

This function for all modules to complete a sequence. If the execution mode in the “hpe5022\_executionMode” function is set to “hpe5022\_EXEC\_WAIT\_START”, then measurement of E5022A/B will be executed in another thread. When this function is executed, the measurement is proceeded for the specified time.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- timeout
 

Description	Specifies the timeout value.
Unit	Second
Direction	IN
Values	

Name	Value
hpe5022_TIMEOUT_MAX	4.0×10 <sup>6</sup>
hpe5022_TIMEOUT_INFINITE	-1
hpe5022_TIMEOUT_IMMEDIATE	0

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'timeout' is out of range.
hpe5022_VI_ERROR_TMO	The measurement sequence failed to complete within the specified time period.

### See Also

“hpe5022\_executionMode” on page 97

Function Reference  
**Abort Function**

“hpe5022\_abort” on page 103

## **hpe5022\_abort**

**C Syntax** ViStatus hpe5022\_abort(ViSession id);

**Visual Basic Syntax** hpe5022\_abort(ByVal id As Long) As Long

**Description** This function causes all modules to abort the measurement sequence. The measurement sequence is aborted when the time specified by “hpe5022\_wai” function has expired.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_executionMode” on page 97  
 “hpe5022\_wai” on page 101

---

## Self-test Function

This section describes the function of the self-test. The self-test allows you to check the internal test for some components.

### hpe5022\_self\_test

#### C Syntax

```
ViStatus hpe5022_self_test(ViSession id, ViInt16 result[], ViPString msg[], ViStatus statArray[]);
```

#### Visual Basic Syntax

```
hpe5022_self_test(ByVal id As Long, ByRef result As Integer, ByRef msg As msgType, ByRef statArray As Long) As Long
```

#### Description

This function performs an internal self-test for all instruments (oscilloscope, spectrum analyzer, spinstand) except for the module of the E5022A/B. And returns the result of the self-test. The E5036A doesn't have an internal self-test function in its module, so it does not return any errors.

#### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- result

Description Returns pass or fail results of self-test for each component (instruments and spinstand).

The data is in array and its size is the same as the number of 'instNum' in the "hpe5022\_init" function. The order of components in this array corresponds to the 'rsrcArray' of the "hpe5022\_init" function.

Direction OUT

Values

Value	Description
0	Test Passed
not 0	Test Failed

- msg

Description Returns self-test status message of each component (instrument and spinstand).

"rmsgType" data type for Visual Basic is defined in the "hpe5022.bas" file as:



Public Type msgType

instr(hpe5022\_INSTR\_NUM\_MAX) As String

End Type

The returned data is in array and its size and order is the same as 'result'.

The message of each element of this array, is limited to (hpe5022\_MESSASAGE\_LENGTH\_MAX) 512 characters.

Direction      OUT

- statArray

Description      Returns the error number of self-test of each component (instruments and spinstand).

The returned data is in array and its size and order is the same as 'result'.

Direction      OUT

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_SELFTEST	Unable to perform self-test on some components (modules, box instrument and spinstand)

## See Also

“hpe5022\_init” on page 91

## **Error Handle Function**

This section describes the functions related with an error.

### **hpe5022\_error\_query**

#### **C Syntax**

```
ViStatus hpe5022_error_query(ViSession id, ViPInt32 err_no, ViPString msg);
```

#### **Visual Basic Syntax**

```
hpe5022_error_query(ByVal id As Long, ByRef err_no As Long, ByVal msg As String) As Long
```

#### **Description**

This function returns the error number and corresponding error message.

#### **Parameters**

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **err\_no**

Description	Returns the error code. When all errors are read from the queue, "VI_SUCCESS" is returned.
Direction	OUT
- **msg**

Description	Returns the error message. The length of the returned string is limited to (hpe5022_MESSASAGE_LENGTH_MAX) 512 characters. When all errors are read from the queue, null string, "", is returned.
Direction	OUT

#### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

#### **See Also**

## hpe5022\_error\_message

**C Syntax** ViStatus hpe5022\_error\_message(ViSession id, ViStatus err\_no, ViPString msg);

**Visual Basic Syntax** hpe5022\_error\_message(ByVal id As Long, ByVal err\_no As Long, ByVal msg As String) As Long

**Description** This function translates the error number to a user-readable string. The error number is returned as the return value from an E5022A/B driver function. For example:

```
stat = hpe5022_selectPattern(HpE5022, Pattern)
```

The function returns the error number and it's set to the 'stat' parameter.

```
hpe5022_error_message(Hpe5022, stat, ErrorMessage)
```

The user can get the error message from the error number.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- err\_no
 

Description	Specifies the error number.
Direction	IN
- msg
 

Description	Returns the error message corresponding to the specified error number. The length of the returned string is limited to 512 characters.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

### See Also

## **hpe5022\_set\_error\_callback**

### **C Syntax**

```
ViStatus hpe5022_set_error_callback(ViSession id, void (_VI_FUNCH
*err_callback) (ViSession vi, ViStatus err_code, ViAddr user_data), ViAddr
user_data);
```

### **Visual Basic Syntax**

```
hpe5022_set_error_callback(ByVal id As Long, ByVal err_callback As Long,
ByRef user_data As Any) As Long
```

### **Description**

This function specifies the call back function. The call back function allows you to call a user define function when an error occurs. After the “hpe5022\_set\_error\_callback” function is performed, the user define function installed in the function is performed when an error occurs.

For example: When performing the sub-function (user-defined function) named “errorHandler”, refer to the sample program shown below

The sub-function should be defined in advance. This example shows you the sub-function display, the error message and the error number.

```
Public Sub _
ErrorHandler(ByVal vi As Long, ByVal errCode As Long, ByRef userData As Long)
    Dim errorNumber As Long
    Dim errorMessage As String
    Dim stat As Long
    Dim strNum As Variant
    '
    '
    Call hpe5022_error_query(vi, errorNumber, errorMessage)
    '
    ' Trim C String
    ' Search the end of error message string
    strNum = InStr(1, errorMessage, Chr(0))
    '
    If strNum = Null Then errorMessage = ""
    ElseIf strNum < 2 Then errorMessage = ""
    ' Cut only the error message
    Else errorMessage = Left(errorMessage, strNum - 1)
    ' Display the error Message
    MsgBox (Str(errorNumber) & (errorMessage))
End Sub
```

The sub-function “errorHandler” is specified in the “hpe5022\_set\_error\_callback” function.

```
Dim vi As Long
Dim user_data As Long
' do some operation
Call hpe5022_set_error_callback(vi, AddressOf errorHandler, user_data)
```

After this function is performed, the “errorHandler” subroutine is performed whenever any error occurs.

If you use this example, the sample program of “error check” subroutine in chapter 2 is not necessary.

Only one call back function can be specified. If more than one call back function is to be specified, the previous call back function will be overwritten by the new one.

For Visual Basic, the syntax of user-defined function must be:

```
Public Sub func(ByVal id As Long, ByVal errCode As Long, ByRef userdata As Any)
```

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- err\_callback
 

Description	Specifies an address (a pointer for C language) of the sub function which you want to perform when an error occurs. If this value is set to "VI_NULL", the specified sub function is removed.
Direction	IN
Preset Value	VI_NULL
- user\_data
 

Description	Specifies the variable (address of a variable for C language) that you want to pass to the sub function. This parameter is passed to the sub function as its third parameter.
Direction	IN

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

## System/Module Revision Query Function

This section describes the functions to query the system driver revision

### hpe5022\_revision\_query

#### C Syntax

```
ViStatus hpe5022_revision_query(ViSession id, ViPString rev);
```

#### Visual Basic Syntax

```
hpe5022_revision_query(ByVal id As Long, ByVal rev As String) As Long
```

#### Description

This function returns the revision number of the function library of E5022A/B system.

#### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- rev
  - Description Returns the revision number of the function library. The length of the returned string is limited to 512 characters. The string example would be "A.01.00". This is the same as 'rev' of the "hpe5022\_idn\_Q" function.
  - Direction OUT

#### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

#### See Also

"hpe5022\_idn\_Q" on page 111

## hpe5022\_idn\_Q

- C Syntax** ViStatus hpe5022\_idn\_Q (ViSession id, ViPString rev, ViPString serial);
- Visual Basic Syntax** hpe5022\_idn\_Q(ByVal id As Long, ByVal rev As String, ByVal serial As String) As Long
- Description** This function returns the driver revision and the system serial number of E5022A/B.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - rev
 

Description	Returns the driver revision of E5022A/B. The length of the returned string is limited to 512 characters. An example of the returned string would be "A.01.00". This is the same as 'rev' of the "hpe5022_revision_query" function.
Direction	OUT
  - serial
 

Description	Returns the system serial number. The length of the returned string is limited to 512 characters.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_revision\_query" on page 110

**System/Module Revision Query Function****hpe5022\_subIdn\_Q****C Syntax**

```
ViStatus hpe5022_subIdn_Q (ViSession id, ViPString instrName[], ViPString
rev[], ViPString serial[]);
```

**Visual Basic Syntax**

```
hpe5022_subIdn_Q(ByVal id As Long, ByRef instrName As instrNameType,
ByRef rev As revType, ByRef serial As serialType) As Long
```

**Description**

This function returns the name, firmware revision and the serial number of the Agilent E5022A/B components (module and box instrument). The null string (“”) is returned for the spinstand. See “Step 1. Initialization” on page 18.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- instrName

**Description** Returns the component model name in array. The size of the data array is the same as the number of “instrNum” of the “hpe5022\_init” function. The order of components in the array is the same as the order of components of “rsrcArray” parameter of the “hpe5022\_init” function.

“instrNameType” data type for Visual Basic is defined in the “hpe5022.bas” file as:

```
Public Type instrNameType
    instr(hpe5022_INSTR_NUM_MAX) As String
End Type
```

The “hpe5022\_INSTR\_NUM\_MAX” is also defined in that file.

**Direction** OUT

- rev

**Description** Returns the firmware revision of components. The size of data array is the same as the ‘instName’ parameter. The length of the returned string is limited to 512 characters. Some components also return the date of revision.

Since E5036A and E5041A have no firmware in its module, A message “Not Available” is returned.

“revType” data type for Visual Basic is defined in the “hpe5022.bas” file as:

```
Public Type revType
    instr(hpe5022_INSTR_NUM_MAX) As String
```



```

End Type
Direction OUT
• serial
Description Returns the serial number of components. The size of this
data array is the same as the 'instName' parameter. The
length of the returned string is limited to 512 characters.

"serialType" data type for Visual Basic is defined in the
"hpe5022.bas" file as:

Public Type serialType
    instr(hpe5022_INSTR_NUM_MAX) As String
End Type
Direction OUT
    
```

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_init" on page 91

**System/Module Revision Query Function****hpe5022\_subModuleIdn\_Q****C Syntax**

ViStatus hpe5022\_subModuleIdn\_Q(ViSession id, ViInt16 subModuleId, ViPString moduleName, ViPString serialNumber, ViPString description);

**Visual Basic Syntax**

hpe5022\_subModuleIdn\_Q(ByVal id As Long, ByVal subModuleId As Integer, ByVal moduleName As String, ByVal serialNumber As String, ByVal description As String) As Long

**Description**

This function returns the name, serial number and description of the sub modules.

When the hpe5022\_SUBMOD\_SSIF\_xxxx is selected with the E5035A, this function returns "hpe5022\_ERROR\_NSUP\_FUNC" error.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- subModuleId
  - Description Selects the sub module name to query.
  - Direction IN
  - Values

Name	Val.	Description
hpe5022_SUBMOD_SSIF_DAUGHTER_BOARD	0	E5035B Fine Position Control (Option 001 or 002)
hpe5022_SUBMOD_SSIF_HEADAMP_CTRL_UNIT	1	Head Amplifier Control Unit (E5043A, E5043B, or E5043C)
hpe5022_SUBMOD_SSIF_ON_STAGE	2	On Stage Buffer Board (E5029K Option)
hpe5022_SUBMOD_SSIF_HEADAMP_BOARD	3	Head Amplifier Option Number (E5029K Option)
hpe5022_SUBMOD_FMAT_FILTER_0	4	E5036A Filter No. 0
hpe5022_SUBMOD_FMAT_FILTER_1	5	E5036A Filter No. 1
hpe5022_SUBMOD_FMAT_FILTER_2	6	E5036A Filter No. 2
hpe5022_SUBMOD_FMAT_FILTER_3	7	E5036A Filter No. 3

Name	Val.	Description
hpe5022_SUBMOD_BER_CHANNEL_IC	8	E5039A/B/C Channel IC Name

- **moduleName**  
 Description Returns the name of the selected sub module.  
 Direction OUT
- **serialNumber**  
 Description Returns the serial number of the selected sub module  
 Direction OUT
- **description**  
 Description Returns the description of the selected sub module.  
 Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'subModuleId' is out of range.
hpe5022_ERROR_NSUP_FUNC	This installed module has no selected sub module.

**See Also**

---

## Data Definition Function

This section describes the functions for data setup.

### hpe5022\_channelBitRate

#### C Syntax

```
ViStatus hpe5022_channelBitRate(ViSession id, ViReal64 bitRate);
```

#### Visual Basic Syntax

```
hpe5022_channelBitRate(ByVal id As Long, ByVal bitRate As Double) As Long
```

#### Description

This function specifies the channel bit rate value.

#### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- bitRate
  - Description Specifies the channel bit rate. This value is returned by "hpe5022\_channelBitRateRange\_Q" function.
  - Direction IN
  - Preset Value  $100 \times 10^6$
  - Unit bps (bits per second)

#### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'bitRate' is out of range.

#### See Also

"hpe5022\_channelBitRate\_Q" on page 117

"hpe5022\_channelBitRateRange\_Q" on page 118

## hpe5022\_channelBitRate\_Q

- C Syntax** ViStatus hpe5022\_channelBitRate\_Q(ViSession id, ViPReal64 bitRate);
- Visual Basic Syntax** hpe5022\_channelBitRate\_Q(ByVal id As Long, ByRef bitRate As Double) As Long
- Description** This function returns the specified channel bit rate.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - bitRate
 

Description	Returns the specified channel bit rate.
Direction	OUT
Unit	bps (bit per second)

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_channelBitRate" on page 116

## hpe5022\_channelBitRateRange\_Q

**C Syntax** ViStatus hpe5022\_channelBitRateRange\_Q(ViSession id, ViPReal64 bitRateMin, ViPReal64 bitRateMax);

**Visual Basic Syntax** hpe5022\_channelBitRateRange\_Q(ByVal id As Long, ByRef bitRateMin As Double, ByRef bitRateMax As Double) As Long

**Description** This function returns the range of the channel bit rate. The range is dependent on the system option. E5022A/B or E5023A detects the system option and sets the range automatically. Although the E5037A option 002 is 750 Mbps Data Generator, the maximum channel bit rate is 1 Gbps. However, the bit rate over 750 Mbps is not guaranteed.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- bitRateMin
  - Description Returns the minimum value that the channel bit rate setting can be set into.
  - Direction OUT
  - Unit bps (bit per second)
- bitRateMax
  - Description Returns the maximum value that the channel bit rate setting can be set into.
  - Direction OUT
  - Unit bps (bit per second)

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_channelBitRate" on page 116

## hpe5022\_selectPattern

### C Syntax

ViStatus hpe5022\_selectPattern(ViSession id, ViInt16 pat);

### Visual Basic Syntax

hpe5022\_selectPattern(ByVal id As Long, ByVal pat As Integer) As Long

### Description

This function selects the data pattern to be written for write operation. Some measurements such as resolution measurement, selects the data pattern automatically. See each measurement function for details.

Each selected pattern has its own property. The property of each pattern is defined by functions, such as “hpe5022\_hfPattern”, “hpe5022\_lfPattern” (listed in “See also”).

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- pat
 

Description	Specifies the data pattern to be used for measurement.
Direction	IN
Preset Value	2 (hpe5022_PAT_ISO)

#### Values

Name	Value	Description
hpe5022_PAT_HF	0	HF pattern
hpe5022_PAT_LF	1	LF pattern
hpe5022_PAT_ISO	2	Isolated pulse pattern
hpe5022_PAT_PRBS	3	Pseudo random pattern
hpe5022_PAT_REP	4	Repetitive pattern
hpe5022_PAT_NLTS_5TH	5	NLTS 5th pattern
hpe5022_PAT_OWTF	6	Overwrite HF pattern
hpe5022_PAT_OWLF	7	Overwrite LF pattern
hpe5022_PAT_REP_2	8	Repetition Pattern2
hpe5022_PAT_REP_3	9	Repetition Pattern3
hpe5022_PAT_REP_4	10	Repetition Pattern4
hpe5022_PAT_USER	20	User-defined Pattern

Function Reference  
**Data Definition Function**

Name	Value	Description
hpe5022_PAT_USER_2	21	User-defined Pattern2
hpe5022_PAT_USER_3	22	User-defined Pattern3
hpe5022_PAT_USER_4	23	User-defined Pattern4

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'pat' is out of range.

**See Also**

- “hpe5022\_hfPattern” on page 122
- “hpe5022\_lfPattern” on page 124
- “hpe5022\_isolatedPulsePattern” on page 126
- “hpe5022\_prbsPattern” on page 128
- “hpe5022\_repetitivePattern” on page 131
- “hpe5022\_overwriteHfPattern” on page 136
- “hpe5022\_overwriteLfPattern” on page 138
- “hpe5022\_userPattern” on page 140



## hpe5022\_selectPattern\_Q

### C Syntax

ViStatus hpe5022\_selectPattern\_Q(ViSession id, ViInt16 pat);

### Visual Basic Syntax

hpe5022\_selectPattern\_Q(ByVal id As Long, ByRef pat As Integer) As Long

### Description

This function returns the selected data pattern.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- pat
 

Description	Returns the selected data pattern.
Direction	OUT
Values	Same as the 'pat' in the "hpe5022_selectPattern" function.

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

"hpe5022\_selectPattern" on page 119

## hpe5022\_hfPattern

### C Syntax

```
ViStatus hpe5022_hfPattern(ViSession id, ViInt16 n);
```

### Visual Basic Syntax

```
hpe5022_hfPattern(ByVal id As Long, ByVal n As Integer) As Long
```

### Description

This function specifies the repetitive period of the HF pattern.

### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- n

Description Specifies the number of repetitive periods.

Direction IN

Preset value 2

Values

Name	Value
hpe5022_HF_MIN	1
hpe5022_HF_MAX	50

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The number of repetitive period is out of range.

### See Also

"hpe5022\_selectPattern" on page 119

"hpe5022\_hfPattern\_Q" on page 123

## hpe5022\_hfPattern\_Q

### C Syntax

```
ViStatus hpe5022_hfPattern_Q(ViSession id, ViInt16 n);
```

### Visual Basic Syntax

```
hpe5022_hfPattern_Q(ByVal id As Long, ByRef n As Integer) As Long
```

### Description

This function returns the specified number of repetitive periods of the HF pattern.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- n
 

Description	Returns the number of repetitive periods.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

“hpe5022\_hfPattern\_Q” on page 123

## hpe5022\_lfPattern

### C Syntax

ViStatus hpe5022\_lfPattern(ViSession id, ViInt16 n);

### Visual Basic Syntax

hpe5022\_lfPattern(ByVal id As Long, ByVal n As Integer) As Long

### Description

This function specifies the repetitive period of the LF pattern.

### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- n

Description Specifies the number of repetitive periods.

Direction IN

Preset value 6

Values

Name	Value
hpe5022_LF_MIN	1
hpe5022_LF_MAX	50

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The number of repetitive period is out of range.

### See Also

"hpe5022\_selectPattern" on page 119

"hpe5022\_lfPattern\_Q" on page 125

## hpe5022\_IfPattern\_Q

### C Syntax

ViStatus hpe5022\_IfPattern\_Q(ViSession id, ViPInt16 n);

### Visual Basic Syntax

hpe5022\_IfPattern\_Q(ByVal id As Long, ByRef n As Integer) As Long

### Description

This function returns the specified number of repetitive periods of the LF pattern.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- n
 

Description	Returns the specified number of repetitive periods.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

“hpe5022\_IfPattern” on page 124

## hpe5022\_isolatedPulsePattern

### C Syntax

```
ViStatus hpe5022_isolatedPulsePattern(ViSession id, ViInt16 n);
```

### Visual Basic Syntax

```
hpe5022_isolatedPulsePattern(ByVal id As Long, ByVal n As Integer) As Long
```

### Description

This function specifies the number of repetitive periods of an isolated pulse pattern.

### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- n

Description Specifies the number of repetitive periods.

Direction IN

Preset value 20

Values

Name	Value
hpe5022_ISO_MIN	1
hpe5022_ISO_MAX	50

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The data transitions period is out of range.

### See Also

"hpe5022\_selectPattern" on page 119

"hpe5022\_isolatedPulsePattern\_Q" on page 127

## hpe5022\_isolatedPulsePattern\_Q

### C Syntax

ViStatus hpe5022\_isolatedPulsePattern\_Q(ViSession id, ViPInt16 n);

### Visual Basic Syntax

hpe5022\_isolatedPulsePattern\_Q(ByVal id As Long, ByRef n As Integer) As Long

### Description

This function returns the specified number of repetitive period of an isolated pulse pattern.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- n
 

Description	Returns the specified number of repetitive periods.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

“hpe5022\_isolatedPulsePattern” on page 126

## hpe5022\_prbsPattern

### C Syntax

```
ViStatus hpe5022_prbsPattern(ViSession id, ViInt32 prbs);
```

### Visual Basic Syntax

```
hpe5022_prbsPattern(ByVal id As Long, ByVal prbs As Long) As Long
```

### Description

This function sets the pseudo random bit sequence pattern.

### Parameters

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- prbs

**Description** Specifies the pseudo random sequence generating polynomial. The LSB (bit 0) of this value represents 0th order coefficient of the generating polynomial, bit 1 represents 1st order, and so on. This function can generate up to 10th order pseudo random data. The initial bit is 100000.....

For example: if you want to generate the random sequence of  $x^7+x^3+1$ , the value 137 ( $=2^7+2^3+1$ ) should be set to this value.

**Direction** IN

**Preset value** 137 ( $x^7+x^3+1$ )

**Values**

Name	Value
hpe5022_PRBS_MIN	3
hpe5022_PRBS_MAX	1023

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'prbs' is out of range.



**See Also**

“hpe5022\_selectPattern” on page 119

“hpe5022\_prbsPattern\_Q” on page 130

## hpe5022\_prbsPattern\_Q

### C Syntax

```
ViStatus hpe5022_prbsPattern_Q(ViSession id, ViPInt32 prbs);
```

### Visual Basic Syntax

```
hpe5022_prbsPattern_Q(ByVal id As Long, ByRef prbs As Long) As Long
```

### Description

This function returns the specified pseudo random generating polynomial.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- prbs
  - Description Returns the pseudo random sequence generating polynomial.
  - Direction OUT

### Return Values

Completion Code	Description
VL_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

"hpe5022\_prbsPattern" on page 128

## hpe5022\_repetitivePattern

### C Syntax

```
ViStatus hpe5022_repetitivePattern(ViSession id, ViInt16 n);
```

### Visual Basic Syntax

```
hpe5022_repetitivePattern(ByVal id As Long, ByVal n As Integer) As Long
```

### Description

This function specifies the number of repetitive periods of the repetitive data pattern.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- n
 

Description	Specifies the number of repetitive periods.
Direction	IN
Preset value	10
Values	

Name	Value
hpe5022_REP_MIN	1
hpe5022_REP_MAX	50

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The number of repetitive period is out of range.

### See Also

“hpe5022\_selectPattern” on page 119

“hpe5022\_repetitivePattern\_Q” on page 132

## hpe5022\_repetitivePattern\_Q

### C Syntax

```
ViStatus hpe5022_repetitivePattern_Q(ViSession id, ViPInt16 n);
```

### Visual Basic Syntax

```
hpe5022_repetitivePattern_Q(ByVal id As Long, ByRef n As Integer) As Long
```

### Description

This function returns the specified number of repetitive periods of the repetitive data pattern.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- n
  - Description Returns the number of repetitive periods.
  - Direction OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

"hpe5022\_repetitivePattern" on page 131

## hpe5022\_repetitivePatternEx

**C Syntax** ViStatus hpe5022\_repetitivePatternEx(ViSession id, ViInt16 dataPat, VInt16 n);

**Visual Basic Syntax** hpe5022\_repetitivePatternEx(ByVal id As Long, ByVal dataPat As Integer, ByVal n As Integer) As Long

**Description** This function sets the number of repetitive period of the repetitive data pattern.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataPat
  - Description Specifies the type of repetitive data pattern.

Direction IN

Values

Name	Value
hpe5022_PAT_REP	4
hpe5022_PAT_REP_2	8
hpe5022_PAT_REP_3	9
hpe5022_PAT_REP_4	10

- n
  - Description Returns the number of repetitive periods of the repetitive pattern.

Direction IN

Preset Value 10

Values

Name	Value
hpe5022_REP_MIN	1
hpe5022_REP_MAX	50

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Data Definition Function**

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_repetitivePatternEx\_Q” on page 135

“hpe5022\_repetitivePattern” on page 131

“hpe5022\_selectPattern” on page 119

## hpe5022\_repetitivePatternEx\_Q

**C Syntax** ViStatus hpe5022\_repetitivePatternEx\_Q(ViSession id, ViInt16 dataPat, VPInt16 n);

**Visual Basic Syntax** hpe5022\_repetitivePatternEx\_Q(ByVal id As Long, ByVal dataPat As Integer, ByRef n As Integer) As Long

**Description** This function returns the specified number of repetitive periods of the repetitive data pattern.

**Parameters**

- id**

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataPat**

Description Specifies the type of repetitive data pattern.

Direction IN

Values

Name	Value
hpe5022_PAT_REP	4
hpe5022_PAT_REP_2	8
hpe5022_PAT_REP_3	9
hpe5022_PAT_REP_4	10

- n**

Description Returns the number of repetitive periods of the repetitive pattern.

Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_repetitivePatternEx" on page 133

## hpe5022\_overwriteHfPattern

### C Syntax

```
ViStatus hpe5022_overwriteHfPattern(ViSession id, ViInt16 n);
```

### Visual Basic Syntax

```
hpe5022_overwriteHfPattern(ByVal id As Long, ByVal n As Integer) As Long
```

### Description

This function specifies the overwrite HF Pattern. This pattern is used in the overwrite measurement even if this pattern is not selected by the “hpe5022\_selectPattern” function.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- n
  - Description Specifies the number of repetitive periods.
  - Direction IN
  - Preset value 3
  - Values

Name	Value
hpe5022_HF_MIN	1
hpe5022_HF_MAX	50

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The number of repetitive period is out of range.

### See Also

- “hpe5022\_overwriteHfPattern\_Q” on page 137
- “hpe5022\_measureOverwrite” on page 910
- “hpe5022\_setupOverwrite” on page 913
- “hpe5022\_selectPattern” on page 119



## hpe5022\_overwriteHfPattern\_Q

- C Syntax** ViStatus hpe5022\_overwriteHfPattern\_Q(ViSession id, ViPInt16 n);
- Visual Basic Syntax** hpe5022\_overwriteHfPattern\_Q(ByVal id As Long, ByRef n As Integer) As Long
- Description** This function returns the number of repetitive period of the overwrite HF Pattern.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - n
 

Description	Returns the specified number of repetitive periods.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_overwriteHfPattern” on page 136

## hpe5022\_overwriteLfPattern

### C Syntax

```
ViStatus hpe5022_overwriteLfPattern(ViSession id, ViInt16 n);
```

### Visual Basic Syntax

```
hpe5022_overwriteLfPattern(ByVal id As Long, ByVal n As Integer) As Long
```

### Description

This function sets the number of repetitive period of the overwrite LF Pattern.

### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- n

Description Specifies the number of repetitive periods.

Direction IN

Preset value 8

Values

Name	Value
hpe5022_LF_MIN	1
hpe5022_LF_MAX	50

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The data transition's repetitive period is out of range.

### See Also

"hpe5022\_selectPattern" on page 119

"hpe5022\_overwriteLfPattern\_Q" on page 139

"hpe5022\_measureOverwrite" on page 910

"hpe5022\_setupOverwrite" on page 913

## hpe5022\_overwriteLfPattern\_Q

- C Syntax** ViStatus hpe5022\_overwriteLfPattern\_Q(ViSession id, ViPInt16 n);
- Visual Basic Syntax** hpe5022\_overwriteLfPattern\_Q(ByVal id As Long, ByRef n As Integer) As Long
- Description** This function returns the number of repetitive periods of the overwrite LF Pattern.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - n
 

Description	Returns the number of repetitive periods.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_overwriteLfPattern” on page 138

## hpe5022\_userPattern

**C Syntax** ViStatus hpe5022\_userPattern(ViSession id, ViInt16 dataForm, ViInt32 bitLength, const ViChar data[]);

**Visual Basic Syntax** hpe5022\_userPattern(ByVal id As Long, ByVal dataForm As Integer, ByVal bitLength As Long, ByVal data As String) As Long

**Description** This function specifies the user-defined data pattern. The E5022A/B or E5023A allows you to generate your own pattern. The defined data pattern is repeated when it is used for the output data.

When you generate the data pattern of “A31C”, (“1010001100011101” in binary)

hpe5022\_userPattern(hpe5022, hpe5022\_USER\_DATA\_HEX, 16, “A31C”) or

hpe5022\_userPattern(hpe5022, hpe5022\_USER\_DATA\_BIN, 16, “1010001100011101”) can be used.

### Parameters

- id  
Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataForm  
Description Specifies the data format.

Direction IN

Values

Name	Value	Description
hpe5022_USER_DATA_HEX	0	Hexadecimal format (0-9,A-F or a-f)
hpe5022_USER_DATA_BIN	1	Binary format (0,1)

- bitLength  
Description Specifies the bit length of the user data.

Direction IN

Preset value 2

Values

Name	Value
hpe5022_PAT_LENGTH_MIN	1
hpe5022_PAT_LENGTH_MAX	32,768

- data
 

Description	Specifies the user data in binary or hexadecimal format.
Direction	IN
Preset value	11 (binary format)

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataform' and/or 'bitLength' is out of range.
hpe5022_ERROR_INV_DATA_SIZE	The length of specified data pattern is shorter than the specified user data bit length.
hpe5022_ERROR_INV_DATA_TYPE	The specified data pattern includes an invalid character. (either binary nor hexadecimal)

**See Also**

“hpe5022\_selectPattern” on page 119  
 “hpe5022\_userPattern\_Q” on page 142

## hpe5022\_userPattern\_Q

### C Syntax

```
ViStatus hpe5022_userPattern_Q(ViSession id, ViInt16 dataForm, ViPInt32  
bitLength, ViChar data[]);
```

### Visual Basic Syntax

```
hpe5022_userPattern_Q(ByVal id As Long, ByVal dataForm As Integer, ByRef  
bitLength As Long, ByVal data As String) As Long
```

### Description

This function returns the specified user-defined data pattern.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- dataForm
  - Description Specifies the format of data to be returned.
  - Direction IN
  - Values Same as 'dataForm' in the "hpe5022\_userPattern" function.
- bitLength
  - Description Returns the specified bit length of the user data.
  - Direction OUT
- data
  - Description Returns the specified user data pattern.
  - Direction OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataform' is out of range.

### See Also

"hpe5022\_userPattern" on page 140

## hpe5022\_userPatternEx

**C Syntax** ViStatus hpe5022\_userPatternEx(ViSession id, ViInt16 dataPat, ViInt16 dataForm, ViInt32 bitLength, const ViChar data[]);

**Visual Basic Syntax** hpe5022\_userPatternEx(ByVal id As Long, ByVal dataPat As Integer, ByVal dataForm As Integer, ByVal bitLength As Long, ByVal data As String) As Long

**Description** This function specifies the user-defined data pattern. The E5022A/B or E5023A allows you to generate your own data pattern. The defined data pattern is repeated when it is used as the output data.

When you generate the data pattern of “A31C”, (“1010001100011101” in binary)

hpe5022\_userPattern(hpE5022, hpe5022\_USER\_DATA\_HEX, 16, “A31C”) or

hpe5022\_userPattern(hpE5022, hpe5022\_USER\_DATA\_BIN, 16, “1010001100011101”) can be used.

### Parameters

- id**  
 Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataPat**  
 Description Specifies the user data pattern.

Direction IN

Values

Name	Value
hpe5022_PAT_USER	20
hpe5022_PAT_USER_2	21
hpe5022_PAT_USER_3	22
hpe5022_PAT_USER_4	23

- dataForm**  
 Description Specifies the data format.

Direction IN

Values

Name	Value	Description
hpe5022_USER_DATA_HEX	0	Hexadecimal format (0-9,A-F or a-f)
hpe5022_USER_DATA_BIN	1	Binary format (0,1)

Function Reference  
**Data Definition Function**

- bitLength

Description Specifies the bit length of the user data.

Direction IN

Preset value 2

Values

Name	Value
hpe5022_PAT_LENGTH_MIN	1
hpe5022_PAT_LENGTH_MAX	32,768

- data

Description Specifies the user data in binary or hexadecimal format.

Direction IN

Preset value 11 (binary format)

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataform' and/or 'bitLength' is out of range.
hpe5022_ERROR_INV_DATA_SIZE	The length of specified data pattern is shorter than the specified user data bit length.
hpe5022_ERROR_INV_DATA_TYPE	The specified data pattern includes an invalid character. (either binary nor hexadecimal)

### See Also

“hpe5022\_userPatternEx\_Q” on page 145

“hpe5022\_userPattern” on page 140

“hpe5022\_selectPattern” on page 119



## hpe5022\_userPatternEx\_Q

### C Syntax

ViStatus hpe5022\_userPatternEx\_Q(ViSession id, ViInt16 dataPat, ViInt16 dataForm, ViPInt32 bitLength, ViChar data[]);

### Visual Basic Syntax

hpe5022\_userPatternEx\_Q(ByVal id As Long, ByVal dataPat As Integer, ByVal dataForm As Integer, ByRef bitLength As Long, ByVal data As String) As Long

### Description

This function returns the user-defined data pattern. The E5022A/B or E5023A allows you to generate your own data pattern. The defined data pattern is repeated when it is used as the output data.

When you generate the data pattern of "A31C" ("1010001100011101" in binary), hpe5022\_userPatternEx\_Q (hpE5022, hpe5022\_USER\_DATA\_HEX, bitLength, data) returns bitLength = 16 and data = "A31C."

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- dataPat
 

Description	Specifies the user data pattern.
Direction	IN
Values	

Name	Value
hpe5022_PAT_USER	20
hpe5022_PAT_USER_2	21
hpe5022_PAT_USER_3	22
hpe5022_PAT_USER_4	23

- dataForm
 

Description	Specifies the data format.
Direction	IN
Values	

Name	Value	Description
hpe5022_USER_DATA_HEX	0	Hexadecimal format (0-9,A-F or a-f)
hpe5022_USER_DATA_BIN	1	Binary format (0,1)

- bitLength

Function Reference  
**Data Definition Function**

Description Returns the bit length of the user data.

Direction OUT

Preset value 2

Values

Name	Value
hpe5022_PAT_LENGTH_MIN	1
hpe5022_PAT_LENGTH_MAX	32,768

- data

Description Returns the user data in binary or hexadecimal format.

Direction OUT

Preset value 11 (binary format)

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataform' and/or 'bitLength' is out of range.

**See Also**

“hpe5022\_selectPattern” on page 119

“hpe5022\_userPatternEx” on page 143

## Filter Setup Function

This section describes the functions for the filter matrix module setup. The filter matrix module has up to four filters and they are replaceable.

### hpe5022\_filterState\_Q

#### C Syntax

```
ViStatus hpe5022_filterState_Q(ViSession id, ViInt16 filter, ViPBoolean state);
```

#### Visual Basic Syntax

```
hpe5022_filterState_Q(ByVal id As Long, ByVal filter As Integer, ByRef state As Integer) As Long
```

#### Description

This function returns the status of the selected filter whether it is installed or not.

#### Parameters

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- filter

**Description** Specifies the filter to be checked.

**Direction** IN

**Values**

Name	Value	Description
hpe5022_FILTER0	0	Filter No.0
hpe5022_FILTER1	1	Filter No.1
hpe5022_FILTER2	2	Filter No.2
hpe5022_FILTER3	3	Filter No.3

- state

**Description** Returns the status of the specified filter.

**Direction** OUT

**Values**

Name	Value	Description
VI_TRUE	1	Filter is installed
VI_FALSE	0	Filter is not installed

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'filter' is out of range.

**See Also**

## hpe5022\_selectFilter

### C Syntax

```
ViStatus hpe5022_selectFilter(ViSession id, ViInt16 filter);
```

### Visual Basic Syntax

```
hpe5022_selectFilter(ByVal id As Long, ByVal filter As Integer) As Long
```

### Description

This function selects the filter to be used in the filter matrix module.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- filter
 

Description	Selects the filter to be used.
Direction	IN
Values	

Name	Value	Description
hpe5022_FILTER0	0	Filter No.0
hpe5022_FILTER1	1	Filter No.1
hpe5022_FILTER2	2	Filter No.2
hpe5022_FILTER3	3	Filter No.3

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'filter' is out of range.
hpe5022_ERROR_HARD_MISS	The selected filter is not installed. Check if the filter is installed.

### See Also

“hpe5022\_selectFilter\_Q” on page 150

## **hpe5022\_selectFilter\_Q**

### **C Syntax**

ViStatus hpe5022\_selectFilter\_Q(ViSession id, ViPInt16 filter);

### **Visual Basic Syntax**

hpe5022\_selectFilter\_Q(ByVal id As Long, ByRef filter As Integer) As Long

### **Description**

This function returns the selected filter.

### **Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- filter

Description Returns the selected filter.

Direction OUT

Values

<b>Name</b>	<b>Value</b>	<b>Description</b>
hpe5022_FILTER0	0	Filter No.0
hpe5022_FILTER1	1	Filter No.1
hpe5022_FILTER2	2	Filter No.2
hpe5022_FILTER3	3	Filter No.3

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### **See Also**

"hpe5022\_selectFilter" on page 149

## hpe5022\_filterInformation\_Q

### C Syntax

ViStatus hpe5022\_filterInformation\_Q(ViSession id, ViInt16 filter, ViPInt16 filterType, ViPInt16 rollOff, ViPInt16 order, ViPReal64 fc, ViPReal64 dcGain, ViPString part\_num, ViPString desc);

### Visual Basic Syntax

hpe5022\_filterInformation\_Q(ByVal id As Long, ByVal filter As Integer, ByRef filterType As Integer, ByRef rollOff As Integer, ByRef order As Integer, ByRef fc As Double, ByRef dcGain As Double, ByVal part\_num As String, ByVal desc As String) As Long

### Description

This function returns the information of the selected filter from the filter matrix module.

### NOTE

The parameters 'filterType', 'rollOff', 'order', 'fc' and 'dcGain' returns 0 currently. These parameters are for future use.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- filter
  - Description Specifies the filter from which to get the information.
  - Direction IN
  - Values

Name	Value	Description
hpe5022_FILTER0	0	Filter No.0
hpe5022_FILTER1	1	Filter No.1
hpe5022_FILTER2	2	Filter No.2
hpe5022_FILTER3	3	Filter No.3

- filterType
  - Description Returns the type of the selected filter.
  - Direction OUT
  - Values

Name	Value	Description
hpe5022_FILT_TYPE_LPAS	1	Low pass filter
hpe5022_FILT_TYPE_HPAS	2	High pass filter

Function Reference  
**Filter Setup Function**

Name	Value	Description
hpe5022_FILT_TYPE_BPAS	3	Band pass filter

- rollOff

Description Returns the roll-off characteristics of the filter (i.e, Bessel, Butterworth, Chebyshev)

Direction OUT

Values

Name	Value	Description
hpe5022_FILT_ROFF_NA	0	Not Applicable
hpe5022_FILT_ROFF_BESS	1	Bessel
hpe5022_FILT_ROFF_BUTT	2	Butterworth
hpe5022_FILT_ROFF_CHEB	3	Chebyshev

- order

Description Returns the filter order.

Direction OUT

- fc

Description Returns the cut-off frequency of the selected filter.

Direction OUT

Unit Hz

- dcGain

Description Returns the DC gain of the selected filter.

Direction OUT

Unit dB

- part\_num

Description Returns the Agilent part number of the selected filter. The length of this string is defined as "hpe5022\_PART\_NUM\_LENGTH".

Direction OUT

- desc

Description Returns the filter's description. The length of this string is limited to "hpe5022\_MESSAGE\_LENGTH\_MAX".



Direction      OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'filter' is out of range.
hpe5022_ERROR_HARD_MISS	The filter is not installed or not properly installed. Check the hardware.

### See Also

---

## Drive Setup Function

This section describes the functions for drive setup. The drive setup functions specifies the head dimension, head loading/unloading position, the data area on the media and the spindle speed. These functions should be specified before the drive is turned on.

### hpe5022\_driveConfigPivot

#### C Syntax

```
ViStatus hpe5022_driveConfigPivot(ViSession id, ViReal64 pc, ViReal64 pg);
```

#### Visual Basic Syntax


```
hpe5022_driveConfigPivot(ByVal id As Long, ByVal pc As Double, ByVal pg As Double) As Long
```

#### Description

This function specifies the parameters to calculate the head position and head skew angle. Although the spindstand adopts an X-Y stage, the E5022A/B simulates the real drive by changing the head position and the head skew angle depending on the specified track number (See the “hpe5022\_track” function). Each parameter is shown in Figure 3-1.

E5022A/B provides two ways to configure the drive. One is by using this function and another is by using the “hpe5022\_driveConfigRadiusSkew” function which specifies the head radius and its head skew angle for two locations.

**Figure 3-1 Drive Configuration Parameters (Pivot, Spindle Center, Reference Point)**

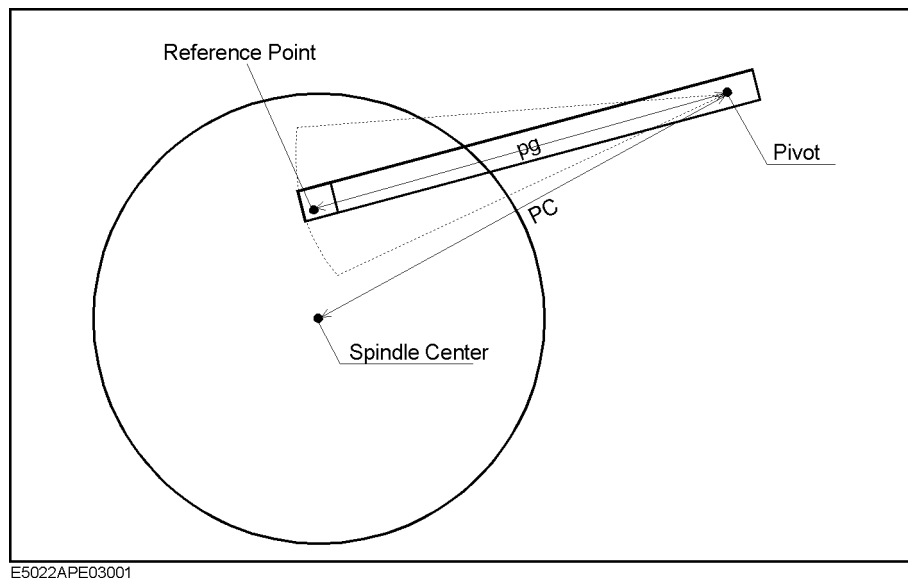

#### Parameters

- id  
Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

- |           |    |
|-----------|----|
| Direction | IN |
|-----------|----|
- pc
 

Description	Specifies the length between the pivot and the center of the spindle.
Direction	IN
Preset Value	$100 \times 10^{-3}$
Unit	Meter
- pg
 

Description	Specifies the length between the pivot and the reference point on the HGA. See “hpe5022_hgaDimension” functions for the reference point.
Direction	IN
Preset Value	$100 \times 10^{-3}$
Unit	Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has already been turned on. Turn it off before executing this function. See the “hpe5022_driveState” function.

**See Also**

- “hpe5022\_driveConfigPivot\_Q” on page 156
- “hpe5022\_driveConfigRadiusSkew” on page 157
- “hpe5022\_hgaDimension” on page 161
- “hpe5022\_driveState” on page 209
- “hpe5022\_track” on page 229

## **hpe5022\_driveConfigPivot\_Q**

### **C Syntax**

ViStatus hpe5022\_driveConfigPivot\_Q(ViSession id, ViPReal64 pc, ViPReal64 pg);

### **Visual Basic Syntax**

hpe5022\_driveConfigPivot\_Q(ByVal id As Long, ByRef pc As Double, ByRef pg As Double) As Long

### **Description**

This function returns the specified parameters shown in Figure 3-1 on page 154. Even if the drive configuration is specified by the “hpe5022\_driveConfigRadiusSkew” function, this function returns the calculated parameters.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- pc
  - Description Returns the length between the pivot and the center of spindle.
  - Direction OUT
  - Unit Meter
- pg
  - Description Returns the length between the pivot and the reference point on the HGA.
  - Direction OUT
  - Unit Meter

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### **See Also**

“hpe5022\_driveConfigPivot” on page 154

“hpe5022\_driveConfigRadiusSkew” on page 157

## hpe5022\_driveConfigRadiusSkew


**C Syntax** `hpe5022_driveConfigRadiusSkew(ViSession id, ViReal64 radius1, ViReal64 radius2, ViReal64 skew1, ViReal64 skew2);`

**Visual Basic Syntax** `hpe5022_driveConfigRadiusSkew(ByVal id As Long, ByVal radius1 As Double, ByVal radius2 As Double, ByVal skew1 As Double, ByVal skew2 As Double) As Long`

**Description** This function specifies the parameters to calculate the head position and head skew angle. Although the spinstand adopts an X-Y stage, the E5022A/B simulates the real drive by changing the head position and the head skew angle depending on the specified track number (See the “hpe5022\_track” function). Each parameter is shown in Figure 3-2. The position 1 and 2 are arbitrary location on the disk.

E5022A/B provides two ways to configure the drive. One is by using this function and another is by using the “hpe5022\_driveConfigPivot” function which specifies the dimensions of spindle center and pivot.

**Figure 3-2 Drive Configuration Parameters (Radius, skew)**

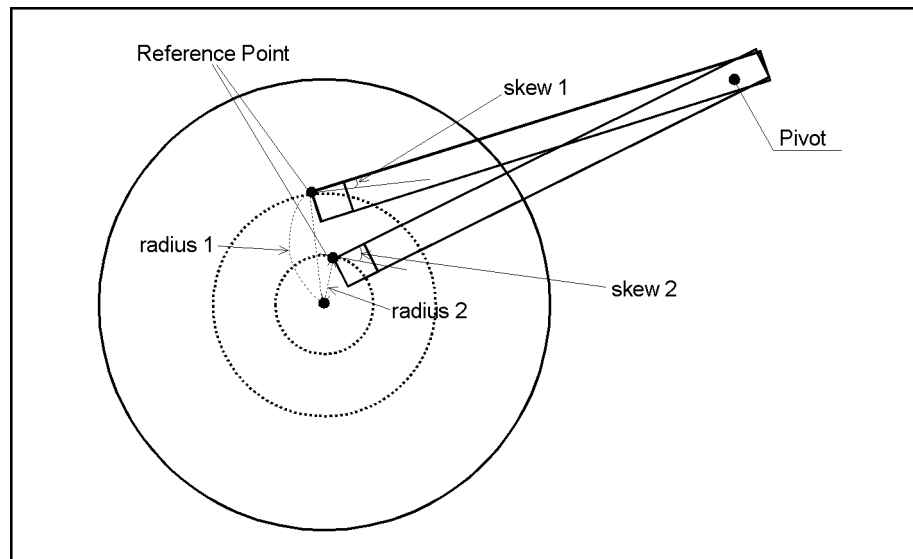

E5022APE03011

- Parameters**
- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - **radius1**

Description	Specifies the radius for position 1
Direction	IN
Unit	Meter

Function Reference

## Function Reference

### Drive Setup Function

- Preset Values      $21 \times 10^{-3}$

  - radius2
    - Description     Specifies the radius for position 2
    - Direction        IN
    - Unit              Meter
    - Preset Values     $23 \times 10^{-3}$
  - skew1
    - Description     Specifies the skew angle for position 1
    - Direction        IN
    - Unit              Degree
  - skew2
    - Description     Specifies the skew angle for position 2
    - Direction        IN
    - Unit              Degree

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has already been turned on. Turn it off before executing this function. See the "hpe5022_driveState" function.

### See Also

"hpe5022\_driveConfigPivot" on page 154

"hpe5022\_driveConfigRadiusSkew\_Q" on page 159

"hpe5022\_driveState" on page 209

"hpe5022\_track" on page 229

## hpe5022\_driveConfigRadiusSkew\_Q

**C Syntax** `hpe5022_driveConfigRadiusSkew_Q(ViSession id, ViPReal64 radius1, ViPReal64 radius2, ViPReal64 skew1, ViPReal64 skew2);`

**Visual Basic Syntax** `hpe5022_driveConfigRadiusSkew_Q(ByVal id As Long, ByVal radius1 As Double, ByVal radius2 As Double, ByRef skew1 As Double, ByRef skew2 As Double) As Long`

**Description** This function returns the specified parameters shown in Figure 3-2 on page 157. Even if the drive configuration is specified by the “hpe5022\_driveConfigPivot” function, this function returns the calculated parameters.

**Parameters**

- **id**  
 Description Specifies the system identifier. This is given by the "hpe5022\_init" function.  
 Direction IN
- **radius1**  
 Description Specifies the radius for position 1.  
 Direction OUT  
 Unit Meter
- **radius2**  
 Description Specifies the radius for position 2.  
 Direction OUT  
 Unit Meter
- **skew1**  
 Description Returns the skew angle for position 1.  
 Direction OUT  
 Unit Degree
- **skew2**  
 Description Returns the skew angle for position 2.  
 Direction OUT  
 Unit Degree

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Drive Setup Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**


“hpe5022\_driveConfigRadiusSkew” on page 157



## hpe5022\_hgaDimension

- C Syntax** ViStatus hpe5022\_hgaDimension(ViSession id, ViReal64 td, ViReal64 sg, ViReal64 tip, ViReal64 bot, ViReal64 boss\_id);
- Visual Basic Syntax** hpe5022\_hgaDimension(ByVal id As Long, ByVal td As Double, ByVal sg As Double, ByVal tip As Double, ByVal bot As Double, ByVal boss\_id As Double) As Long
- Description** This function specifies the dimension of the HGA (Head Gimbal Assembly). The parameters are shown in Figure 3-3. See Chapter 4 of the Operation Manual.

**Figure 3-3 HGA Dimension**

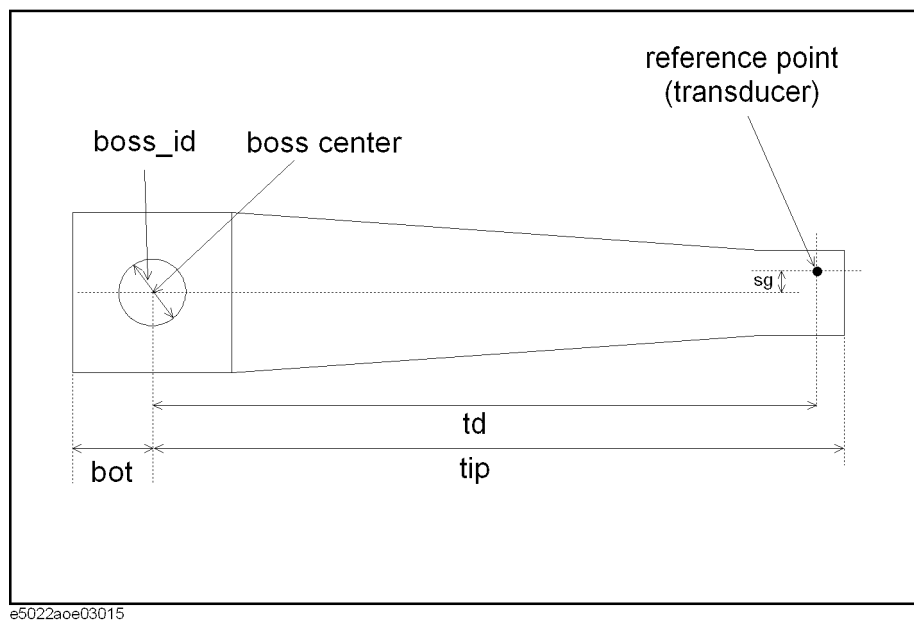

- Parameters**
- id**

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN
  - td**

**Description** Specifies the perpendicular distance between the reference point and the boss center. The reference point is defined as a point at the center of the track when the write track offset and read track offset are zero. Generally, the location of write head transducer is used as the reference point.

**Direction** IN

**Unit** Meter

**Preset Value** hpe5022\_HGA\_TRAN\_DIST\_MIN (0.1)

Function Reference  
**Drive Setup Function**

Values

Name	Value
hpe5022_HGA_TRAN_DIST_MIN	0
hpe5022_HGA_TRAN_DIST_MAX	0.1

- sg

Description Specifies the perpendicular distance between the boss center and the reference point.

Direction IN

Unit Meter

Preset Value  $1 \times 10^{-3}$

Values

Name	Value
hpe5022_HGA_SLID_GAP_MIN	0
hpe5022_HGA_SLID_GAP_MAX	$10 \times 10^{-3}$

- tip

Description Specifies the distance between the tip of the HGA and the boss center.

Direction IN

Unit Meter

Preset Value hpe5022\_HGA\_TIP LENG\_MAX (0.1)

Values

Name	Value
hpe5022_HGA_TIP LENG_MIN	0
hpe5022_HGA_TIP LENG_MAX	0.1

- bot

Description Specifies the distance between the base of the HGA and the boss center.

Direction IN

Unit Meter

Preset Value hpe5022\_HGA\_BOT LENG\_MAX (0.1)

Values

Name	Value
hpe5022_HGA_BOT LENG_MIN	0
hpe5022_HGA_BOT LENG_MAX	0.1

- boss\_id

Description Specifies the inner diameter of the boss.

Direction IN

Unit Meter

Preset Value hpe5022\_HGA\_BOSS\_ID\_MAX ( $10 \times 10^{-3}$ )

Values

Name	Value
hpe5022_HGA_BOSS_ID_MIN	$1 \times 10^{-3}$
hpe5022_HGA_BOSS_ID_MAX	$10 \times 10^{-3}$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_PARAMETER	The parameter 'td', 'sg', 'tip', 'bot', or/and 'boss_id' is out of range

**See Also**

“hpe5022\_hgaDimension\_Q” on page 164

## **hpe5022\_hgaDimension\_Q**

### **C Syntax**

ViStatus hpe5022\_hgaDimension\_Q(ViSession id, ViPReal64 td, ViPReal64 sg, ViPReal64 tip, ViPReal64 bot, ViPReal64 boss\_id);

### **Visual Basic Syntax**

hpe5022\_hgaDimension\_Q(ByVal id As Long, ByRef td As Double, ByRef sg As Double, ByRef tip As Double, ByRef bot As Double, ByRef boss\_id As Double) As Long

### **Description**

This function returns the dimension of the HGA (Head Gimbal Assembly).

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- td
  - Description Returns the perpendicular distance between the reference point and boss center.
  - Direction IN
  - Unit Meter
  - Values Same as the 'td' parameter in the "hpe5022\_hgaDimension" function.
- sg
  - Description Returns the perpendicular distance between boss center and the reference point.
  - Direction OUT
  - Unit Meter
  - Values Same as the 'sg' parameter in the "hpe5022\_hgaDimension" function.
- tip
  - Description Returns the distance between the tip of the HGA and boss center.
  - Direction OUT
  - Unit Meter
  - Values Same as the 'tip' parameter in the "hpe5022\_hgaDimension" function.

- **bot**
  - Description Returns the distance between the base of the HGA and boss center.
  - Direction OUT
  - Unit Meter
  - Values Same as the 'bot' parameter in the "hpe5022\_hgaDimension" function.
  
- **boss\_id**
  - Description Returns the boss inner diameter.
  - Direction OUT
  - Unit Meter
  - Values Same as the 'boss\_id' parameter in the "hpe5022\_hgaDimension" function.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

**See Also** "hpe5022\_hgaDimension" on page 161

## hpe5022\_inhibitMargin

### C Syntax

```
ViStatus hpe5022_inhibitMargin(ViSession id, ViReal64 margin);
```

### Visual Basic Syntax


```
hpe5022_inhibitMargin(ByVal id As Long, ByVal margin As Double) As Long
```

### Description

This function specifies the margin of inhibit area. An inhibit area or marginal distance has to be established to keep the head and cassette from spindle contact. See Chapter 4 of the Operation Manual.

Figure 3-4

Inhibit Area.

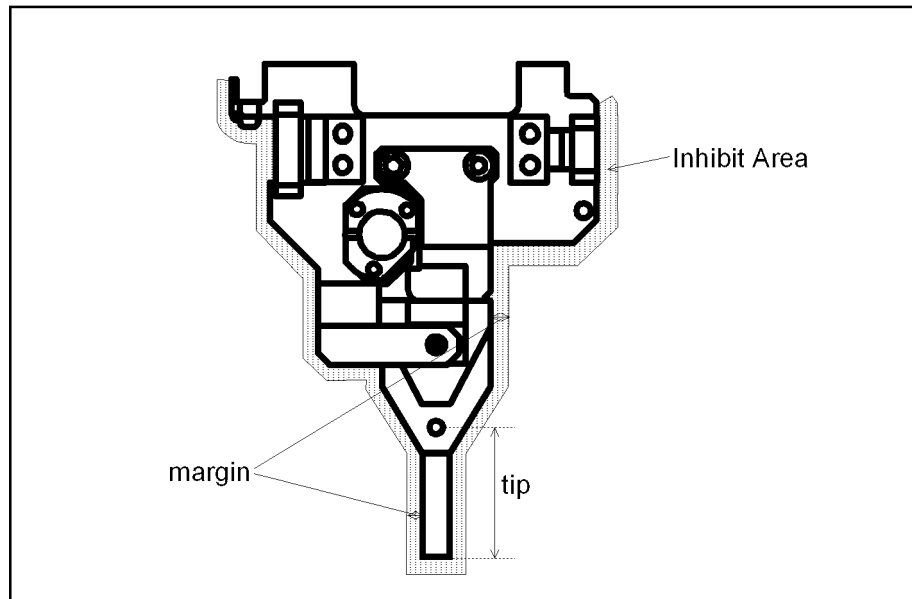

e5022a0e03016

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- margin
  - Description Specifies the inhibit margin.
  - Direction IN
  - Unit Meter
  - Preset Value  $1 \times 10^{-3}$

Values

Name	Value
hpe5022_INH_MARG_MIN	0
hpe5022_INH_MARG_MAX	10×10 <sup>-3</sup>

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_PARAMETER	The parameter 'margin' is out of range

**See Also**

“hpe5022\_hgaDimension\_Q” on page 164

## hpe5022\_inhibitMargin\_Q

### C Syntax

ViStatus hpe5022\_inhibitMargin\_Q(ViSession id, ViPReal64 margin);

### Visual Basic Syntax

hpe5022\_inhibitMargin\_Q(ByVal id As Long, ByRef margin As Double) As Long

### Description

This function returns the inhibit margin.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- margin
  - Description Returns the inhibit margin.
  - Direction OUT
  - Unit Meter
  - Values Same as the 'margin' parameter in the "hpe5022\_inhibitMargin" function.

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

### See Also

"hpe5022\_hgaDimension\_Q" on page 164



## hpe5022\_hgaCassette

### C Syntax

ViStatus hpe5022\_hgaCassette(ViSession id, ViString part\_num);

### Visual Basic Syntax

hpe5022\_hgaCassette(ByVal id As Long, ByVal part\_num As String) As Long

### Description

This function selects the HGA cassette type. E5022A/B allows you to use several types of HGA cassette. Each type of HGA cassette is designed for FIC, CAPS, TSA and paddle suspension.

This function is used to let the E5022A/B know the dimension of the HGA cassette, in order to avoid contact with the spindle.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- part\_num
 

Description	Specifies Agilent part number of the HGA cassette to be used. The Agilent part number is labelled on top of the HGA cassette. A sample string would be "E5010-61121". When the customer-designed cassette is used then "GENERIC1" must be specified. The character length of this parameter is defined by hpe5022_PART_NUM_LENGTH.
Direction	IN

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_NSUP_HGA_CASSETTE	Specified HGA cassette type is not supported. Check the specified Agilent part number. If it is correct, the DLL for the cassette is not installed. Contact the Agilent Technologies office.

### See Also

"hpe5022\_hgaCassette\_Q" on page 170

## hpe5022\_hgaCassette\_Q

### C Syntax

ViStatus hpe5022\_hgaCassette\_Q(ViSession id, ViPString part\_num);

### Visual Basic Syntax

hpe5022\_hgaCassette\_Q(ByVal id As Long, ByVal part\_num As String) As Long

### Description

This function returns the type of HGA cassette.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- part\_num
  - Description Returns the Agilent part number of the HGA cassette to be used. If the part number has not been defined, a null string "" will be reported. The character length of this parameter is defined by hpe5022\_PART\_NUM\_LENGTH.
  - Direction OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_NDEF_HGA	The HGA cassette type is undefined.

### See Also

"hpe5022\_hgaCassette" on page 169

## hpe5022\_hgaCassetteDimension

### C Syntax

```
ViStatus hpe5022_hgaCassetteDimension(ViSession id, ViReal64 boss_cent_x,
ViReal64 boss_cent_y, ViInt16 points, const ViReal64 outline_x[], const ViReal64
outline_y[]);
```

### Visual Basic Syntax

```
hpe5022_hgaCassetteDimension(ByVal id As Long, ByVal boss_cent_x As
Double, ByVal boss_cent_y As Double, ByVal points As Integer, ByRef outline_x
As Double, ByRef outline_y As Double) As Long
```

### Description

This function allows you to use a customer designed HGA cassette. When using the customer designed HGA cassette, you must let the system know the dimensions of the cassette you are using in order to avoid contacts with the spindle and shroud. The location of the HGA boss center and several points outside of the down face cassette must be specified. Since up face is defined as the line asymmetry of the down face it is impossible to define the down face and up face separately.

The location of the center of right side guide pin is defined as the origin of the coordinates. When a cassette has two guide pins in one side, the head pin becomes the origin.


The x and y coordinates of HGA boss center is defined as the position. In the x and y coordinates, two or three location points must be defined to let the system know the shape of the cassette. The user can specify some points outside of the cassette. At least two points must be specified.

The outer area covered by the dotted line from the specified point is defined as the permission area where the spindle and shroud are permitted to exist. On the other hand, the inner area is defined as the inhibit area where the spindle is not permitted to exist.

Function Reference

**Figure 3-5**

**Coordinate of Cassette Dimension**

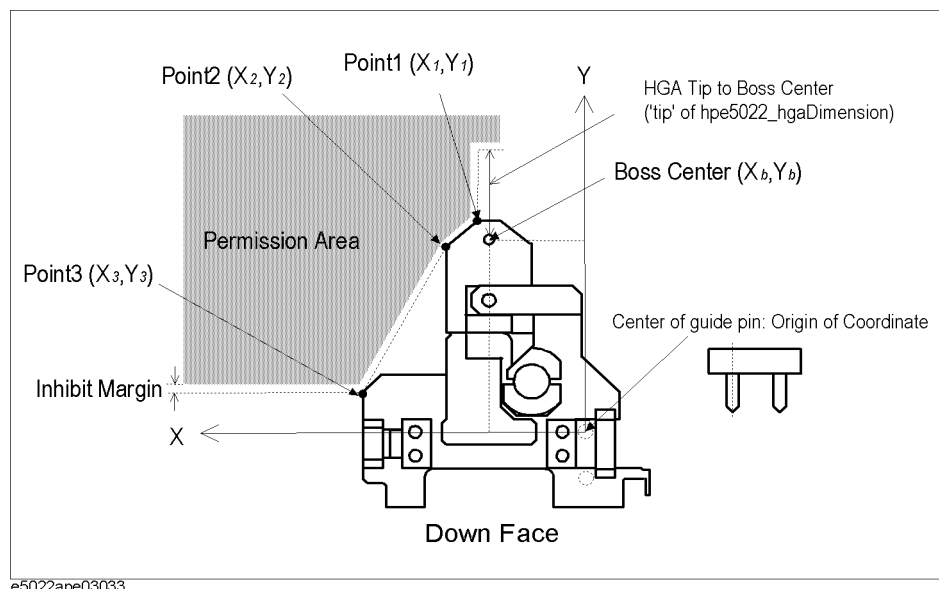


Function Reference  
**Drive Setup Function**

The first point should be at the base of the HGA as shown in Figure 3-6. Permission area is defined as shown in Figure 3-6, a parallel line with the X axis through the last point represents the boundary line of the permission area.

**Figure 3-6**


**First Point and Last Point**

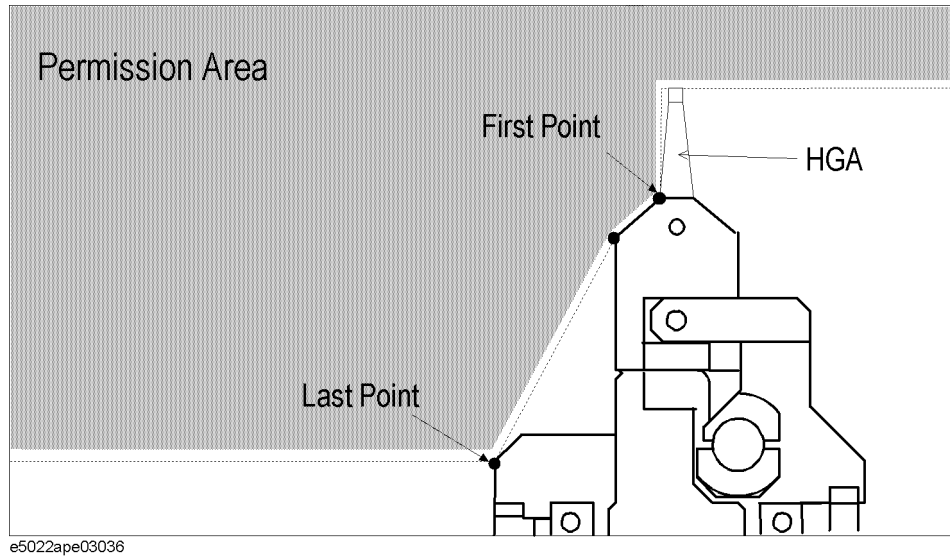

There are various types of attaching the HGA on cassette. When the boss center is not the same as reference position (which positions the HGA), you have to calculate the boss center. The compensated value of the boss center position should be entered.

Figure 3-7


Boss Center Compensation for various types of HGA attachment

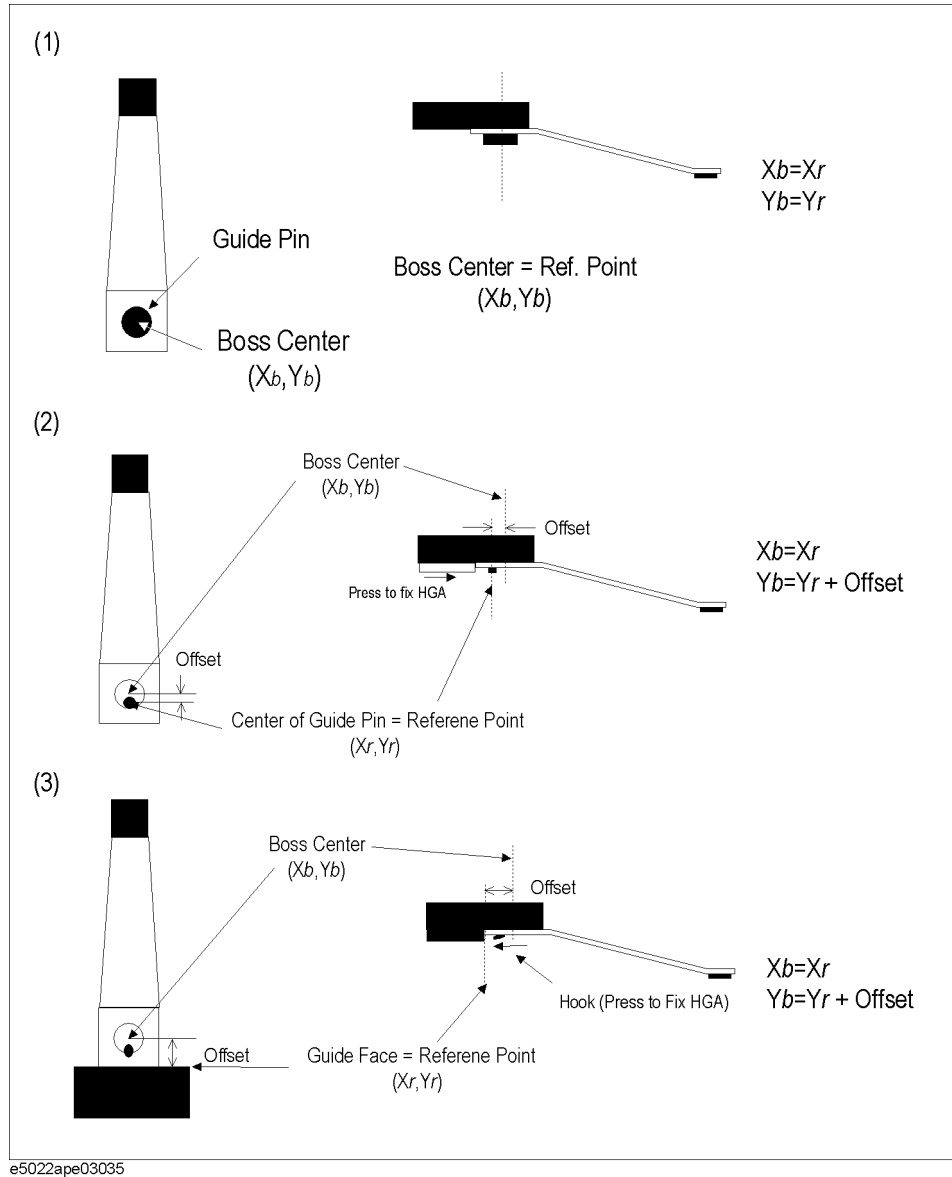

Function Reference

The value of x-coordinate at a certain point must be greater than or equal to the value of the previous point. On the other hand, the value of y-coordinate at a certain point must be less than or equal to the value of the previous point. See Figure 3-8.

**Figure 3-8** Rules for X,Y coordinate values

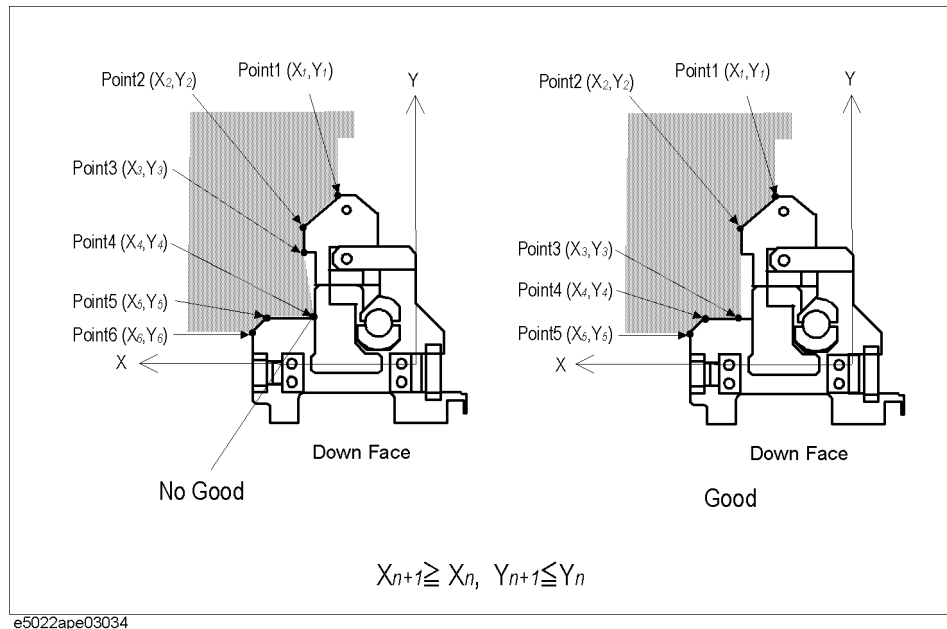

The inhibit margin specified by “hpe5022\_inhibitMargin” is valid for this function.

To use the customer designed HGA cassette, the “GENERIC1” must be selected in the “hpe5022\_hgaCassette” function.

**NOTE**

An auto disk alignment swings the skew angle from -20 to +20 degree. The customer designed HGA should be designed for the range of skew angle.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- boss\_cent\_x
  - Description Specifies the x-coordinate value of the boss center of the HGA ( $X_b$  in Figure 3-5 and Figure 3-7).
  - Direction IN
  - Unit Meter
  - Preset Value hpe5022\_HGA\_CASS\_BOSS\_CENT\_MAX (1)
  - Values

Name	Value
hpe5022_HGA_CASS_BOSS_CENT_MIN	-1

Name	Value
hpe5022_HGA_CASS_BOSS_CENT_MAX	1

- boss\_cent\_y

Description Specifies the y-coordinate value of the boss center of the HGA ( $Y_b$  in Figure 3-5 and Figure 3-7).

Direction IN

Unit Meter

Preset Value hpe5022\_HGA\_CASS\_BOSS\_CENT\_MAX (1)

Values

Name	Value
hpe5022_HGA_CASS_BOSS_CENT_MIN	-1
hpe5022_HGA_CASS_BOSS_CENT_MAX	1

- points

Description Specifies the number of points of outline vertex.

Direction IN

Preset Value hpe5022\_HGA\_CASS\_OUTL\_COUN\_MIN (2)

Values

Name	Value
hpe5022_HGA_CASS_OUTL_COUN_MIN	2
hpe5022_HGA_CASS_OUTL_COUN_MAX	256

- outline\_x

Description Specifies the x-coordinate value of outline vertex as the data array ( $X_{1 \text{ to } n}$  in Figure 3-5). The size of array must be the same as 'points'

Direction IN

Unit Meter

Preset Value {1, 1}

Values

Name	Value
hpe5022_HGA_CASS_OUTL_MIN	-1

Function Reference  
**Drive Setup Function**

Name	Value
hpe5022_HGA_CASS_OUTL_MAX	1

- outline\_y

**Description** Specifies the y-coordinate value of the outline vertex as the data array ( $Y_{1 \text{ to } n}$  in Figure 3-5). The size of array must be the same as 'points'

**Direction** IN

**Unit** Meter

**Preset Value** {1, -1}

**Values**

Name	Value
hpe5022_HGA_CASS_OUTL_MIN	-1
hpe5022_HGA_CASS_OUTL_MAX	1

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_PARAMETER	The parameter 'boss_cent_x', 'boss_cent_y', 'points', 'outline_x' or/and 'outline_y' is out of range

**See Also**

“hpe5022\_hgaCassette” on page 169

“hpe5022\_inhibitMargin” on page 166



## **hpe5022\_hgaCassetteDimension\_Q**

### **C Syntax**

```
ViStatus hpe5022_hgaCassetteDimension_Q(ViSession id, ViPReal64 boss_cent_x, ViPReal64 boss_cent_y, ViPInt16 points, const ViPReal64 outline_x[], const ViPReal64 outline_y[]);
```

### **Visual Basic Syntax**

```
hpe5022_hgaCassetteDimension_Q(ByVal id As Long, ByRef boss_cent_x As Double, ByRef boss_cent_y As Double, ByRef points As Integer, ByRef outline_x As Double, ByRef outline_y As Double) As Long
```

### **Description**

This function returns the dimensions of the customer designed HGA cassette specified by the “hpe5022\_hgaCassetteDimension” function.

### **Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- boss\_cent\_x
 

Description	Returns the x-coordinate value of the boss center of the HGA.
Direction	OUT
Unit	Meter
- boss\_cent\_y
 

Description	Returns the y-coordinate value of the boss center of the HGA.
Direction	OUT
Unit	Meter
- points
 

Description	Returns the number of points of outline vertex.
Direction	OUT
- outline\_x
 

Description	Returns the x-coordinate value of outline vertex as the data array. The size of array is the same as ‘points’
Direction	OUT
Unit	Meter
- outline\_y
 

Description	Returns the y-coordinate value of outline vertex as the data array. The size of array is the same as ‘points’
-------------	---------------------------------------------------------------------------------------------------------------

Function Reference  
**Drive Setup Function**

Direction       OUT  
Unit             Meter

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

**See Also**       “hpe5022\_hgaCassetteDimension” on page 171

## hpe5022\_hgaFace\_Q

### C Syntax

ViStatus hpe5022\_hgaFace\_Q (ViSession id, ViPInt16 face);

### Visual Basic Syntax

hpe5022\_hgaFace\_Q(ByVal id As Long, ByRef face As Integer) As Long

### Description

This function returns HGA cassette face type. The face type is detected by the photo coupler diode on the HLM.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- face
 

Description	Returns the face type of HGA cassette.
Direction	OUT
Values	

Name	Value	Description
hpe5022_HGA_FACE_UP	0	Up Face
hpe5022_HGA_FACE_DOWN	1	Down Face

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_MISS	The HGA cassette is not installed. Check if the cassette is installed properly.

### See Also

“hpe5022\_hgaCassette” on page 169


## hpe5022\_dataArea

**C Syntax** ViStatus hpe5022\_dataArea(ViSession id, ViReal64 id\_rad, ViInt32 max\_trk, ViReal64 pitch);

**Visual Basic Syntax** hpe5022\_dataArea(ByVal id As Long, ByVal id\_rad As Double, ByVal max\_trk As Long, ByVal pitch As Double) As Long

**Description** This function specifies the data area. The data area is defined by the inmost track radius, the track pitch and the maximum track number. The track number begins at 0, so that the number of tracks equals the maximum track number plus 1.

**Figure 3-9 Data Area Definition**

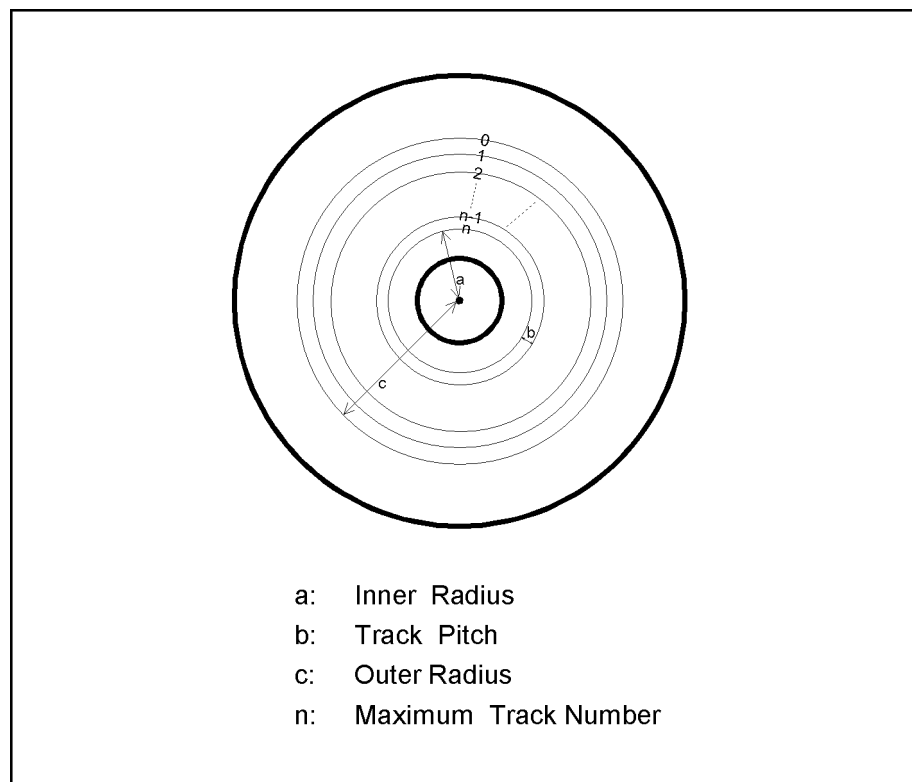

e5022ape03003

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- id\_rad
  - Description Specifies the inmost track radius of the data area on the disk. The distance between the reference position of HGA and the spindle center is defined as the radius.

Direction IN  
 Unit Meter  
 Preset values

Disk size	Preset Value
48mm (1.8")	$14.5 \times 10^{-3}$
65mm (2.5")	$18.5 \times 10^{-3}$
95mm (3.5")	$21.5 \times 10^{-3}$
130mm (5.25")	$29 \times 10^{-3}$

- max\_trk

Description Specifies the maximum track number. Tracks are numbered from 0 to 'max\_trk' from outer side.  
 Direction IN  
 Preset values

Disk size	Preset Value
48mm(1.8")	2500
65mm (2.5")	4000
95mm (3.5")	8000
130mm (5.25")	11000

Value

hpe5022_TRACK_MIN	0
hpe5022_TRACK_MAX	1000000

- pitch

Description Specifies the track pitch.  
 Direction IN  
 Preset value  $3 \times 10^{-6}$   
 Unit Meter

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Drive Setup Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'max_trk' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive is running. The spinstand drive should be turned off before this function is executed. See the "hpe5022_driveState" function.

**See Also**

"hpe5022\_dataArea\_Q" on page 183

"hpe5022\_driveState" on page 209

## hpe5022\_dataArea\_Q

**C Syntax** ViStatus hpe5022\_dataArea(ViSession id, ViPReal64 id\_rad, ViPInt32 max\_trk, ViPReal64 pitch);

**Visual Basic Syntax** hpe5022\_dataArea\_Q(ByVal id As Long, ByRef id\_rad As Double, ByRef max\_trk As Long, ByRef pitch As Double) As Long

**Description** This function returns the parameters which defines the data area. They are the inner radius, the track pitch and the maximum track number.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- id\_rad
 

Description	Returns the innermost track radius of the data area on the disk.
Direction	OUT
Unit	Meter
- max\_trk
 

Description	Returns the maximum track number.
Direction	OUT
- pitch
 

Description	Returns the track pitch.
Direction	OUT
Unit	Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_dataArea" on page 180

## hpe5022\_dataAreaOuterRadius\_Q

### C Syntax

```
ViStatus hpe5022_dataAreaOuterRadius_Q(ViSession id, ViPReal64 od_rad);
```

### Visual Basic Syntax

```
hpe5022_dataAreaOuterRadius_Q(ByVal id As Long, ByRef od_rad As Double) As Long
```

### Description

This function returns the outmost radius of the data area. The outmost radius is the distance between the center of the disk and the center of track No 0.


The outmost radius is calculated from the following formula.

$$OuterRadius = InnerRadius + (MaximumTrackNo \times TrackPitch)$$

The inmost radius, the maximum track number and the track pitch are determined by the “hpe5022\_dataArea” function.

Figure 3-10

### Data Area Definition

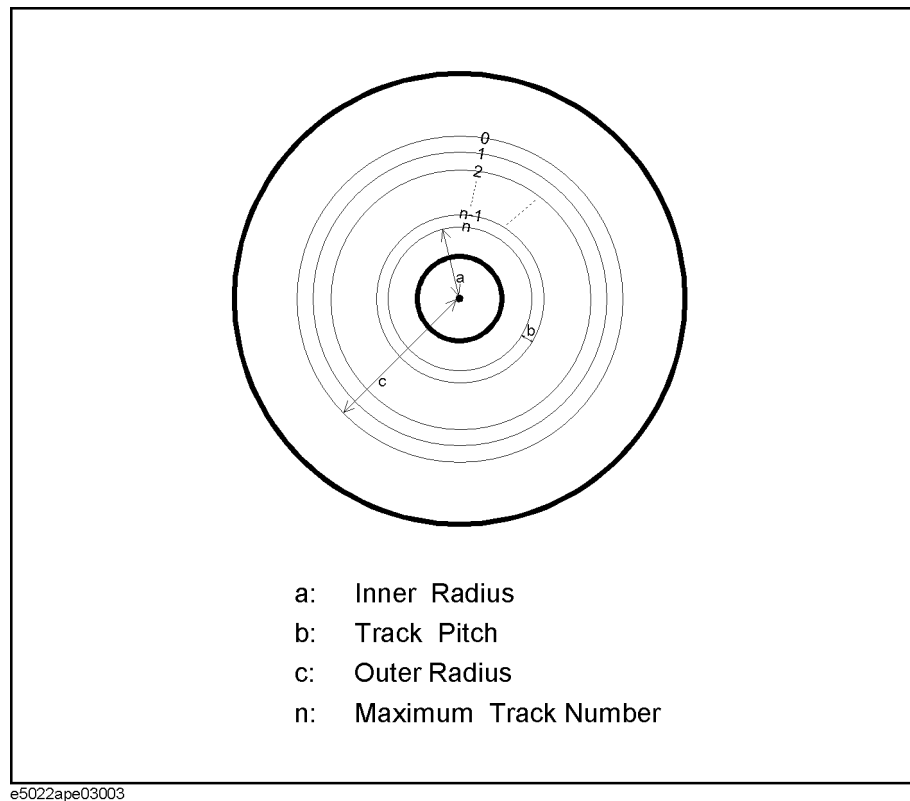

### Parameters

- id  
Description Specifies the system identifier. This is given by the "hpe5022\_init" function.  
Direction IN



- od\_rad

Description Returns the outer radius of the data area on the disk.  
Direction OUT  
Unit Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_dataArea” on page 180

## hpe5022\_headLoadType

### C Syntax

```
ViStatus hpe5022_headLoadType(ViSession id, ViInt16 loadType);
```

### Visual Basic Syntax

```
hpe5022_headLoadType(ByVal id As Long, ByVal loadType As Integer) As Long
```

### Description

This function specifies the method to load the head. In case that `hpe5022_LOAD_TYPE_NORMAL` or `hpe5022_LOAD_TYPE_TILT` are specified as the parameter `loadType`, the head is loaded with the configuration set up by “`hpe5022_headLoadConfig`” or “`hpe5022_headLoadConfigEx`”. In case that `hpe5022_LOAD_TYPE_RAMP` is specified as `loadType`, the head is loaded using a ramp loading mechanism with the configuration set up by “`hpe5022_headLoadRampConfig`”.

When ramp load is used, the ramp load position and media load position must be configured to the spinstand using a ramp load positioning utility program.

When tilt load is used, the tilt head loader is used instead of the standard HLM.

### Parameters

- `id`

Description Specifies the system identifier. This is given by the “`hpe5022_init`” function.

Direction IN

- `loadType`

Description Specifies the type of the head loading.

Direction IN

Values

Name	Value	Description
<code>hpe5022_LOAD_TYPE_NORMAL</code>	0	Normal Loading
<code>hpe5022_LOAD_TYPE_RAMP</code>	1	Ramp Loading
<code>hpe5022_LOAD_TYPE_TILT</code>	4112	Tilt Loading

Preset Values `hpe5022_LOAD_TYPE_NORMAL (0)`

### Return Values

Completion Code	Description
<code>VI_SUCCESS</code>	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'loadType' is out of range.
hpe5022_ERROR_NSUP_CONF	<ul style="list-style-type: none"> <li>• Tilt loading mechanism or Ramp loading mechanism is not installed.</li> <li>• Load/Initial position is not specified with ramp load.</li> </ul>

**See Also**

“hpe5022\_headLoadType\_Q” on page 188

“hpe5022\_headLoadConfig” on page 192

“hpe5022\_headLoadConfigEx” on page 195

“hpe5022\_headLoadRampConfig” on page 201

## hpe5022\_headLoadType\_Q

### C Syntax

ViStatus hpe5022\_headLoadType\_Q(ViSession id, ViInt16 loadType);

### Visual Basic Syntax

hpe5022\_headLoadType\_Q(ByVal id As Long, ByRef loadType As Integer) As Long

### Description

This function returns the type of the head loading method.

### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- loadType

Description Returns the type of the head loading.

Direction OUT

Values

Name	Value	Description
hpe5022_LOAD_TYPE_NORMAL	0	Normal Loading
hpe5022_LOAD_TYPE_RAMP	1	Ramp Loading
hpe5022_LOAD_TYPE_TILT	4112	Tilt Loading

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

"hpe5022\_headLoadType" on page 186

## hpe5022\_headLoadTypeList\_Q

- C Syntax** ViStatus hpe5022\_headLoadTypeList\_Q(ViSession id, ViPInt16 size, ViInt16 loadTypes[]);
- Visual Basic Syntax** hpe5022\_headLoadTypeList\_Q(ByVal id As Long, ByRef size As Integer, ByRef loadTypes As Integer) As Long
- Description** This function returns the list of head loading method types supported by the currently used spinstand.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- size
 

Description	Returns the number of head load types supported by the spinstand.
Direction	OUT
- loadTypes
 

Description	Returns the array of the head load types. The maximum array size is (hpe5022_HEAD_LOAD_TYPE_SIZE_MAX).
Direction	OUT

Values

Name	Value
hpe5022_HEAD_LOAD_TYPE_SIZE_MAX	256

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

- “hpe5022\_headLoadType” on page 186
- “hpe5022\_headLoadType\_Q” on page 188
- “hpe5022\_headLoadTypeName\_Q” on page 190

## **hpe5022\_headLoadTypeName\_Q**

### **C Syntax**

ViStatus hpe5022\_headLoadTypeName\_Q(ViSession id, ViInt16 loadType, ViPString typeName);

### **Visual Basic Syntax**

hpe5022\_headLoadTypeName\_Q(ByVal id As Long, ByVal loadType As Integer, ByVal typeName As String) As Long

### **Description**

This function returns the name of specified load method type.

### **Parameters**

- **id**  
Description Specifies the system identifier. This is given by the "hpe5022\_init" function.  
Direction IN
- **loadType**  
Description Specifies the head load type. This value should be included in the array returned by the function "hpe5022\_headLoadTypeList\_Q" on page 189.  
Direction IN
- **typeName**  
Description Returns the head load type name. The maximum number of characters is (hpe5022\_HEAD\_LOAD\_NAME\_SIZE\_MAX).  
Direction OUT

#### Values

Name	Value
hpe5022_HEAD_LOAD_NAME_SIZE_MAX	256

### **Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Error Code	Description
hpe5022_ERROR_INV_PARAMETER	The specified load method type is not supported by the currently used spinstand. Supported load method types are returned by the function “hpe5022_headLoadTypeList_Q” on page 189.

**See Also**

“hpe5022\_headLoadTypeList\_Q” on page 189

“hpe5022\_headLoadType” on page 186

“hpe5022\_headLoadType\_Q” on page 188

## hpe5022\_headLoadConfig

### C Syntax

ViStatus hpe5022\_headLoadConfig(ViSession id, ViInt16 method, ViReal64 loadPos, ViInt32 initTrack);

### Visual Basic Syntax

hpe5022\_headLoadConfig(ByVal id As Long, ByVal method As Integer, ByVal loadPos As Double, ByVal initTrack As Long) As Long

### Description

This function specifies the load position and initial track when the hpe5022\_LOAD\_TYPE\_NORMAL or hpe5022\_LOAD\_TYPE\_TILT is specified as the loadType by using “hpe5022\_headLoadType” function. The head moves from the home position to the load position, as it is loaded. Then positions at the initial track when the drive is turned on by the “hpe5022\_driveState” function.

Either the “hpe5022\_headLoadConfigEx” or this function should be defined. If both functions are defined, then the last executed function becomes valid.

### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- method

Description Specifies the head loading method. Dynamic loading can load and unload the head while the spindle is rotating. While static loading stops the spindle rotation before it loads and unloads the head.

Direction IN

Values

Name	Value	Description
hpe5022_LOAD_DYNAMIC	0	Dynamic Loading
hpe5022_LOAD_STATIC	1	Static Loading

Preset Values hpe5022\_LOAD\_DYNAMIC (0)

- loadPos

Description Specifies the distance between the spindle rotation axis and the head position, where the head is loaded and unloaded.

Direction IN

Unit Meter



Preset Values

Disk size	Preset Value
4mm (1.8")	$13.5 \times 10^{-3}$
65mm (2.5")	$17.5 \times 10^{-3}$
95mm (3.5")	$20 \times 10^{-3}$
130mm (5.25")	$27.5 \times 10^{-3}$

initTrack

Description Specifies the initial track number.

Direction IN

Preset value 0

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'loadPos' and/or 'initTrack' are out of range.

**See Also**

“hpe5022\_headLoadConfig\_Q” on page 194

“hpe5022\_driveState” on page 209

“hpe5022\_headLoadConfigEx” on page 195

“hpe5022\_headLoadType” on page 186

## hpe5022\_headLoadConfig\_Q

**C Syntax** ViStatus hpe5022\_headLoadConfig\_Q(ViSession id, ViPInt16 method, ViPReal64 loadPos, ViPInt32 initTrack);

**Visual Basic Syntax** hpe5022\_headLoadConfig\_Q(ByVal id As Long, ByRef method As Integer, ByRef loadPos As Double, ByRef initTrack As Long) As Long

**Description** This function returns the load position and initial track number when the hpe5022\_LOAD\_TYPE\_NORMAL or hpe5022\_LOAD\_TYPE\_TILT is specified as the loadType by using “hpe5022\_headLoadType” function.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- method
  - Description Returns the head loading method.
  - Direction OUT
  - Values Same as the ‘method’ in the “hpe5022\_headLoadConfig” function.
- loadPos
  - Description Returns the distance between the spindle rotation axis and the head position, where the head is loaded or unloaded.
  - Direction OUT
  - Unit Meter
- initTrack
  - Description Returns the initial track number.
  - Direction OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_headLoadConfig” on page 192

## hpe5022\_headLoadConfigEx

**C Syntax** ViStatus hpe5022\_headLoadConfigEx(ViSession id, ViInt32 loadRpm, ViReal64 loadRadius, ViReal64 loadSkew, ViReal64 initRadius, ViReal64 initSkew, ViInt32 unloadRpm, ViReal64 unloadRadius, ViReal64 unloadSkew);

**Visual Basic Syntax** hpe5022\_headLoadConfigEx(ByVal id As Long, ByVal loadRpm As Long, ByVal loadRadius As Double, ByVal loadSkew As Double, ByVal initRadius As Double, ByVal initSkew As Double, ByVal unloadRpm As Double, ByVal unloadRadius As Double, ByVal unloadSkew As Double) As Long

**Description** This function configures the head loading conditions when the hpe5022\_LOAD\_TYPE\_NORMAL or hpe5022\_LOAD\_TYPE\_TILT is specified as the loadType by using “hpe5022\_headLoadType” function. This function allows you to set the spindle rotation speed and head load position where the head is loaded/unloaded. Parameters such as load rpm, load radius, load skew, initial radius, initial skew, unload rpm, unload radius and unload skew are specified in this function.

Either the “hpe5022\_headLoadConfig” or this function should be defined. If both functions are defined, then the last executed function becomes valid. In the “hpe5022\_headLoadConfig” you are only allowed to specify the type of loading and head position as the head loads. In this function you are allowed to set these parameters independent from unload operation.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- loadRpm
 

Description	Specifies the type of spindle rotation speed when the head is loaded. The range of rpm value is returned by the “hpe5022_spindleSpeed_Q” function.  The “hpe5022_LOAD_RPM_COUPLED” means that the type of loading is Dynamic. A dynamic loading is when the spindle rotation is continuous as the head loads. Static on the other hand, means that the spindle rotation stops as the head loads, this value is represented by “hpe5022_LOAD_RPM_STATIC”.
Direction	IN
Unit	rpm
Preset Value	hpe5022_LOAD_RPM_COUPLED (-1)

Function Reference  
**Drive Setup Function**

Values

Name	Value
hpe5022_LOAD_RPM_COUPLED	-1
hpe5022_LOAD_RPM_STATIC	0

- loadRadius

Description Specifies the radius when the head is loaded.

Direction IN

Unit Meter

Preset Value At reset, this value is set according to the following disk sizes.

Disk Size	Value
48mm (1.8" )	$13.5 \times 10^{-3}$
65mm (2.5")	$17.5 \times 10^{-3}$
95mm (3.5")	$20 \times 10^{-3}$
130mm (5.25")	$27.5 \times 10^{-3}$

- loadSkew

Description Specifies the skew angle when the head is loaded.

Direction IN

Unit Degree

Preset Value 0

Name	Value
hpe5022_SKEW_ANGLE_MIN	-60
hpe5022_SKEW_ANGLE_MAX	30

- initRadius

Description Specifies the radius at initial position after the head is loaded.

Direction IN

Unit Meter

Preset Value Radius of track 0.

- initSkew

Description	Specifies the skew angle at the initial position after the head is loaded.
Direction	IN
Unit	Degree
Preset Value	0

Name	Value
hpe5022_SKEW_ANGLE_MIN	-60
hpe5022_SKEW_ANGLE_MAX	30

- unloadRpm

Description	Specifies the spindle rotation speed when the head is unloaded. At reset, this value is set to the same value of the loadRpm reset value.
Direction	IN
Unit	hpe5022_LOAD_RPM_COUPLED.(-1)

- unloadRadius

Description	Specifies the radius when the head is unloaded.
Direction	IN
Unit	Meter
Preset Value	Load radius reset value

- unloadSkew

Description	Specifies the skew angle when the head is unloaded.
Direction	IN
Unit	Degree
Preset Value	0

Name	Value
hpe5022_SKEW_ANGLE_MIN	-60
hpe5022_SKEW_ANGLE_MAX	30

**NOTE**

When parameters “loadSkew”, “initSkew” and “unloadSkew” are set below -30 degrees the E5022A/B system can not guarantee a track offset of  $\pm 6\mu\text{m}$ , this could result to an error “hpe5022\_ERROR\_INV\_PARAMETER”. When skew angle is set below -30 degrees the track offset must be set to a value lower than  $\pm 6\mu\text{m}$  to avoid this error. It is recommended that the skew angle be set between 30 and -30 degrees for  $\pm 6\mu\text{m}$  track offset.

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	Either one of the following parameters 'loadRpm', 'loadRadius', 'loadSkew', 'initRadius', 'initSkew', 'unloadRpm', 'unloadRadius' and/or 'unloadSkew' is out of range.

## See Also

“hpe5022\_headLoadConfigEx\_Q” on page 199

“hpe5022\_headLoadConfig” on page 192

“hpe5022\_driveState” on page 209

“hpe5022\_headLoad” on page 237

“hpe5022\_spindleSpeed\_Q” on page 214

“hpe5022\_headLoadType” on page 186

## **hpe5022\_headLoadConfigEx\_Q**

### **C Syntax**

ViStatus hpe5022\_headLoadConfigEx\_Q(ViSession id, ViPInt32 loadRpm, ViPReal64 loadRadius, ViPReal64 loadSkew, ViPReal64 initRadius, ViPReal64 initSkew, ViPInt32 unloadRpm, ViPReal64 unloadRadius, ViPReal64 unloadSkew);

### **Visual Basic Syntax**

hpe5022\_headLoadConfigEx\_Q(ByVal id As Long, ByRef loadRpm As Long, ByRef loadRadius As Double, ByRef loadSkew As Double, ByRef initRadius As Double, ByRef initSkew As Double, ByRef unloadRpm As Double, ByRef unloadRadius As Double, ByRef unloadSkew As Double) As Long

### **Description**

This function returns the specified head loading configurations when the hpe5022\_LOAD\_TYPE\_NORMAL or hpe5022\_LOAD\_TYPE\_TILT is specified as the loadType by using “hpe5022\_headLoadType” function.

### **Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- loadRpm
 

Description	Returns the spindle rotation speed in rpm when the head is loaded.
Direction	OUT
Unit	rpm
- loadRadius
 

Description	Returns the radius when the head is loaded.
Direction	OUT
Unit	Meter
- loadSkew
 

Description	Returns the skew angle when the head is loaded.
Direction	OUT
Unit	Degree
- initRadius
 

Description	Returns the radius at initial position of the head after loading.
Direction	OUT
Unit	Meter

Function Reference  
**Drive Setup Function**

- **initSkew**  
Description Returns the skew angle at the initial position of the head after loading.  
Direction OUT  
Unit Degree
- **unloadRpm**  
Description Returns the spindle rotation speed in rpm when the head is unloaded.  
Direction OUT  
Unit rpm
- **unloadRadius**  
Description Returns the radius when the head is unloaded.  
Direction OUT  
Unit Meter
- **unloadSkew**  
Description Returns the skew angle when the head is unloaded.  
Direction OUT  
Unit Degree

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_headLoadConfigEx” on page 195

“hpe5022\_headLoadType” on page 186



## hpe5022\_headLoadRampConfig

### C Syntax

ViStatus hpe5022\_headLoadRampConfig(ViSession id, ViReal64 headSpeedOnRamp, ViReal64 initRadius, ViReal64 initSkew);

### Visual Basic Syntax

hpe5022\_headLoadRampConfig(ByVal id As Long, ByVal headSpeedOnRamp As Double, ByVal initRadius As Double, ByVal initSkew As Double) As Long

### Description

This function specifies the head loading conditions when the hpe5022\_LOAD\_TYPE\_RAMP is specified as the loadType by “hpe5022\_headLoadType” function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- headSpeedOnRamp
 

Description	Specifies the head speed between ramp load position and media load position. The range of the head speed is returned by the “hpe5022_headPositionSpeedRange_Q”function.
Direction	IN
Unit	Meter per Second
Preset Values	maximum speed of the head speed
- initRadius
 

Description	Specifies the radius that the head is moved to after the head is loaded.
Direction	IN
Unit	Meter
Preset Values	(inner diameter radius + outer diameter radius) / 2
- initSkew
 

Description	Specifies the skew angle that the head is moved to after the head is loaded.
Direction	IN
Unit	Degree
Values	

Name	Value
hpe5022_SKEW_ANGLE_MIN	-60.0

Function Reference  
**Drive Setup Function**

Name	Value
hpe5022_SKEW_ANGLE_MAX	30.0

Preset Values     0

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The handle specified by 'headSpeedOnRamp', 'initRadius' and/or 'initSkew' is invalid.

**See Also**

“hpe5022\_headLoadType” on page 186

“hpe5022\_headLoadRampConfig\_Q” on page 203

## hpe5022\_headLoadRampConfig\_Q

### C Syntax

ViStatus hpe5022\_headLoadRampConfig\_Q(ViSession id, ViPReal64 headSpeedOnRamp, ViPReal64 initRadius, ViPReal64 initSkew);

### Visual Basic Syntax

hpe5022\_headLoadRampConfig\_Q(ByVal id As Long, ByRef headSpeedOnRamp As Double, ByRef initRadius As Double, ByRef initSkew As Double) As Long

### Description

This function returns the head loading conditions when the hpe5022\_LOAD\_TYPE\_RAMP is specified as the loadType by “hpe5022\_headLoadType” function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- headSpeedOnRamp
 

Description	Returns the head speed on ramp.
Direction	OUT
Unit	Meter per Second
- initRadius
 

Description	Returns the radius, that the head is moved to after the head is loaded.
Direction	OUT
Unit	Meter
- initSkew
 

Description	Returns the skew angle, that the head is moved to after the head is loaded.
Direction	OUT
Unit	Degree

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Function Reference  
**Drive Setup Function**

**See Also**

“hpe5022\_headLoadType” on page 186

“hpe5022\_headLoadRampConfig” on page 201

## hpe5022\_diskSizeRestriction

### C Syntax

ViStatus hpe5022\_diskSizeRestriction(ViSession id, ViBoolean restrict);

### Visual Basic Syntax

hpe5022\_diskSizeRestriction(ByVal id As Long, ByVal restrict As Integer) As Long

### Description

This function removes a restriction of the head position. Normally, the head loading/unloading position and a position itself must be within the disk size. This function allows you to set the loading/unloading position and the moved position at the outside of the disk media.

### Parameters

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- restrict

**Description** Select a restriction of the head position.

When this parameter is set to "VI\_TRUE", the head position and loading/unloading position must be inside of the disk size.

When this parameter is set to "VI\_FALSE", the head position can be set outside of the disk size.

This function is effective at the following functions:

- "hpe5022\_headLoadConfigEx"
- "hpe5022\_headLoadConfig"
- "hpe5022\_headLoadRampConfig"
- "hpe5022\_headPosition"
- "hpe5022\_headLoad"
- "hpe5022\_headLoadImmediate"

**Direction** IN

**Preset Value** VI\_TRUE

**Values**

Name	Value
VI_FALSE	0
VI_TRUE	1

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameters 'restrict' is out of range.

## See Also

“hpe5022\_headLoadConfigEx” on page 195

“hpe5022\_headLoadConfig” on page 192

“hpe5022\_headLoadRampConfig” on page 201

“hpe5022\_headPosition” on page 241

“hpe5022\_headLoad” on page 237

“hpe5022\_headLoadImmediate” on page 247

## hpe5022\_diskSize\_Q

### C Syntax

ViStatus hpe5022\_diskSize\_Q(ViSession id, ViPReal64 disk\_size);

### Visual Basic Syntax

hpe5022\_diskSize\_Q(ByVal id As Long, ByRef disk\_size As Double) As Long

### Description

This function returns the disk substrate outside diameter.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- disk\_size
 

Description	Returns the disk diameter in meter. When either of the 3 inch or the 3.5 inch disk is attached, this parameter will be set to the out diameter value of the 3.5 inch disk regardless of the actual disk size.
Direction	

Disk Size	Return Value
1.8 inch	0.048 m
2.5 inch	0.065 m
3 / 3.5 inch	0.095 m

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

## hpe5022\_diskSizeRestriction\_Q

### C Syntax

ViStatus hpe5022\_diskSizeRestriction\_Q(ViSession id, ViPBoolean restrict);

### Visual Basic Syntax

hpe5022\_diskSizeRestriction\_Q(ByVal id As Long, ByRef restrict As Integer) As Long

### Description

This function returns a status of the head position restriction.

### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- restrict

Description Select a restriction of the head position.

When "VI\_TRUE" is selected, the head position and loading/unloading position must be inside of the disk size.

When "VI\_FALSE" is selected, the head position can be set outside of the disk size.

Direction OUT

Values

Name	Value
VI_FALSE	0
VI_TRUE	1

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

"hpe5022\_diskSizeRestriction" on page 205



## Drive Control Function

This section describes the functions to control the spinstand drive. This function allows you to rotate the spindle and load the head.

### hpe5022\_driveState

#### C Syntax

```
ViStatus hpe5022_driveState(ViSession id, ViBoolean drvOn);
```

#### Visual Basic Syntax

```
hpe5022_driveState(ByVal id As Long, ByVal drvOn As Integer) As Long
```

#### Description

This function controls the spinstand drive. This function performs the following sequences.

- Drive On sequence:
  1. Clamp the disk.
  2. Rotate the spindle.
  3. Move the head to the load position where it is specified by the "hpe5022\_headLoadConfig" function.
  4. Load it.
  5. Move it at the initial track where it is specified by the "hpe5022\_headLoadConfig"function.
- Drive Off sequence:
  1. Move the head to the load position.
  2. Unload it.
  3. Move it at the home position.
  4. Stop the rotation of the spindle.
  5. Unclamp the disk.

#### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- drvOn
 

Description	Turn-on or turn-off the drive.
Preset Value	VI_FALSE (0)
Direction	IN

Function Reference  
**Drive Control Function**

Values

Name	Value	Description
VI_TRUE	1	Drive On
VI_FALSE	0	Drive Off

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD	Hardware error is detected.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_HARD_MISS	The HGA cassette is not installed or the media is not placed. Check if the cassette is installed properly and if the media is set properly.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_POSITION	The specified head position is in the inhibit area. Check the Agilent part number of the cassette, the inhibit area, the HGA dimension, the data area and the specified track number. See the "hpe5022_hgaCassette", "hpe5022_hgaDimension" and "hpe5022_inhibitMargin" functions.
hpe5022_ERROR_INTERLOCK	The spinstand is out of air. Check if air is supplied to the spinstand.
hpe5022_ERROR_NDEF_HGA	The HGA dimension is not defined. See the "hpe5022_hgaCassette" function.
hpe5022_ERROR_MOTOR_FAULT	An error is detected in the motor or servo of the spinstand. Check the spinstand and restart the system.
hpe5022_ERROR_SHROUD_OPEN	The shroud cover is open. Close this cover when the drive is on.

**See Also**

"hpe5022\_hgaDimension" on page 161

"hpe5022\_inhibitMargin" on page 166

"hpe5022\_hgaCassette" on page 169

“hpe5022\_driveState\_Q” on page 212

## **hpe5022\_driveState\_Q**

### **C Syntax**

ViStatus hpe5022\_driveState\_Q(ViSession id, ViPBoolean drvOn);

### **Visual Basic Syntax**

hpe5022\_driveState\_Q(ByVal id As Long, ByRef drvOn As Integer) As Long

### **Description**

This function returns the status of the spinstand drive.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- drvOn
  - Description Returns the status of the spinstand drive
  - Direction OUT
  - Values Same as the 'drvOn' parameter in the "hpe5022\_driveState" function.

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### **See Also**

"hpe5022\_driveState" on page 209

## hpe5022\_spindleSpeed

### C Syntax

ViStatus hpe5022\_spindleSpeed(ViSession id, ViInt32 rpm);

### Visual Basic Syntax

hpe5022\_spindleSpeed(ByVal id As Long, ByVal rpm As Long) As Long

### Description

This function specifies the speed of the spindle rotation. The spindle speed at loading and unloading can be changed by the “hpe5022\_headLoadConfigEx” function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- rpm
 

Description	Specifies the speed of the spindle rotation. The range of the rpm is returned by the “hpe5022_spindleSpeedRange_Q” function.
Direction	IN
Preset value	5400
Unit	rpm

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The specified rotation speed is out of range.
hpe5022_ERROR_MOTOR_FAULT	An error is detected in the motor or servo of the spinstand. Check the spinstand and restart the system.

### See Also

- “hpe5022\_spindleSpeed\_Q” on page 214
- “hpe5022\_spindleAcceleration” on page 216
- “hpe5022\_headLoadConfigEx” on page 195

## hpe5022\_spindleSpeed\_Q

### C Syntax

ViStatus hpe5022\_spindleSpeed\_Q(ViSession id, ViPInt32 rpm);

### Visual Basic Syntax

hpe5022\_spindleSpeed\_Q(ByVal id As Long, ByRef rpm As Long) As Long

### Description

This function returns the speed of the spindle rotation.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- rpm
  - Description Returns the speed of the spindle rotation.
  - Direction OUT
  - Unit rpm

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

"hpe5022\_spindleSpeed" on page 213

## **hpe5022\_spindleSpeedRange\_Q**

**C Syntax** ViStatus hpe5022\_spindleSpeedRange\_Q(ViSession id, ViInt32 rpmMin, ViInt32 rpmMax);

**Visual Basic Syntax** hpe5022\_spindleSpeedRange\_Q(ByVal id As Long, ByRef rpmMin As Long, ByRef rpmMax As Long) As Long

**Description** This function returns the range of the spindle speed which is used as a reference to specify “rpm” in the “hpe5022\_spindleSpeed” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- rpmMin
 

Description	Returns the minimum speed of spindle rotation.
Direction	OUT
Unit	rpm
- rpmMax
 

Description	Returns the maximum speed of spindle rotation.
Direction	OUT
Unit	rpm

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_spindleSpeed” on page 213

## hpe5022\_spindleAcceleration

<b>C Syntax</b>	ViStatus hpe5022_spindleAcceleration(ViSession id, ViInt32 accel);
<b>Visual Basic Syntax</b>	hpe5022_spindleAcceleration(ByVal id As Long, ByVal accel As Long) As Long
<b>Description</b>	This function is used to set up the acceleration of the spindle.
<b>Parameters</b>	<ul style="list-style-type: none"><li>id<ul style="list-style-type: none"><li>Description Specifies the system identifier. This is given by the "hpe5022_init" function.</li><li>Direction IN</li></ul></li><li>accel<ul style="list-style-type: none"><li>Description Specifies the acceleration of the spindle rotation. The acceleration range (i.e, max. acceleration and min. acceleration) to which this parameter can be set is returned by the "hpe5022_spindleAccelerationRange_Q" function.</li><li>Direction IN</li><li>Unit RPM/sec</li></ul></li></ul>

---

**NOTE** The VEE program supports only two acceleration settings (i.e, 2500 for slow and 10000 for fast acceleration). With this function the user can specify the acceleration at any values within the allowable acceleration range as returned by "hpe5022\_spindleAccelerationRange\_Q" function. However, when the user sets the acceleration value anywhere within this range (i.e, 3000 or 3500) the system can not guarantee that the specified acceleration. Due to electronics and mechanical constraints there are some regions where the user can not set the acceleration value, which could result to an error. This error message will appear in the LCD display of the spinstand. The user will have to do trial and error to determine the acceptable setting.

---

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter "accel" is out of range.

**See Also** "hpe5022\_spindleAcceleration\_Q" on page 217



## **hpe5022\_spindleAcceleration\_Q**

- C Syntax** `ViStatus hpe5022_spindleAcceleration_Q(ViSession id, ViPInt32 accel);`
- Visual Basic Syntax** `hpe5022_spindleAcceleration_Q(ByVal id As Long, ByRef accel As Long) As Long`
- Description** This function returns the specified acceleration of the spindle rotation.
- Parameters**
- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - **accel**

Description	Returns the acceleration of the spindle rotation.
Direction	IN

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_spindleAcceleration” on page 216

## **hpe5022\_spindleAccelerationRange\_Q**

**C Syntax** ViStatus hpe5022\_spindleAccelerationRange\_Q(ViSession id, ViPInt32 accelMin, ViPInt32 accelMax);

**Visual Basic Syntax** hpe5022\_spindleAccelerationRange\_Q(ByVal id As Long, ByRef accelMin As Long, ByRef accelMax as Long) As Long

**Description** This function returns the maximum and minimum allowable accelerations of the spindle which is used as a reference to specify the acceleration “accel” in the “hpe5022\_spindleAcceleration” function.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- accelMin
  - Description Returns the minimum acceleration range of the spindle rotation.
  - Direction IN
  - Unit RPM/sec
- accelMax
  - Description Returns the maximum acceleration range of the spindle rotation.
  - Direction IN
  - Unit RPM/sec

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_spindleAcceleration” on page 216

## hpe5022\_readTrackOffset

### C Syntax

```
ViStatus hpe5022_readTrackOffset(ViSession id, ViReal64 offset);
```

### Visual Basic Syntax

```
hpe5022_readTrackOffset(ByVal id As Long, ByVal offset As Double) As Long
```

### Description

This function specifies the read track offset from the center of the track. The inward direction is positive. The head moves to track offset position during read sequence.

### Parameters

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- offset

**Description** Specifies the read track offset. If the "hpe5022\_trackOffsetCompValue" function set the head offset value, the range of the offset is narrowed. For example, the head offset value in "hpe5022\_trackOffsetCompValue" is set at  $1.0 \times 10^{-6}$ , the maximum and the minimum values are  $5.0 \times 10^{-6}$  and  $-6.0 \times 10^{-6}$ , respectively. See the track offset compensation in the operation manual.

**Direction** IN

**Preset value** 0

**Unit** Meter

**Values**

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Function Reference  
**Drive Control Function**

Error Code	Description
hpe5022_ERROR_INV_PARAMETER	The parameter 'offset' is out of range. Check if the head offset compensation value by using "hpe5022_trackOffsetCompValue_Q" function.

**See Also**

"hpe5022\_readTrackOffset\_Q" on page 221

"hpe5022\_trackOffsetCompValue" on page 984

## **hpe5022\_readTrackOffset\_Q**

- C Syntax** `ViStatus hpe5022_readTrackOffset_Q(ViSession id, ViPReal64 offset);`
- Visual Basic Syntax** `hpe5022_readTrackOffset_Q(ByVal id As Long, ByRef offset As Double) As Long`
- Description** This function returns the read track offset value. The inward direction is positive.
- Parameters**
- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - **offset**

Description	Returns the read track offset.
Direction	OUT
Unit	Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_readTrackOffset" on page 219

## hpe5022\_writeTrackOffset

### C Syntax

ViStatus hpe5022\_writeTrackOffset(ViSession id, ViReal64 offset);

### Visual Basic Syntax

hpe5022\_writeTrackOffset(ByVal id As Long, ByVal offset As Double) As Long

### Description

This function specifies the write track offset from the center of track. The inward direction is positive. The head moves to the write track offset position during an erase and write sequence in all measurement functions.

This write offset value does not apply to the “hpe5022\_write” and the “hpe5022\_erase” functions.

### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- offset

Description Specifies the write track offset. If the “hpe5022\_trackOffsetCompValue” function set the head offset value, the range of the offset is changed. For example, the head offset value in “hpe5022\_trackOffsetCompValue” is set at  $1.0 \times 10^{-6}$ , the maximum and the minimum values are  $5.0 \times 10^{-6}$  and  $-7.0 \times 10^{-6}$ , respectively.

Direction IN

Preset value 0

Unit Meter

Values

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'offset' is out of range. Check if the head offset compensation value by using "hpe5022_trackOffsetCompValue_Q" function.

**See Also**

"hpe5022\_writeTrackOffset\_Q" on page 224

"hpe5022\_write" on page 326

"hpe5022\_erase" on page 362

"hpe5022\_trackOffsetCompValue" on page 984

## hpe5022\_writeTrackOffset\_Q

### C Syntax

ViStatus hpe5022\_writeTrackOffset\_Q(ViSession id, ViPReal64 offset);

### Visual Basic Syntax

hpe5022\_writeTrackOffset\_Q(ByVal id As Long, ByRef offset As Double) As Long

### Description

This function returns the write track offset value. The inward direction is positive.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- offset
  - Description Returns the write track offset value
  - Direction OUT
  - Unit Meter

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

"hpe5022\_writeTrackOffset" on page 222



## hpe5022\_trackOffsetImmediate

### C Syntax

ViStatus hpe5022\_trackOffsetImmediate(ViSession id, ViReal64 offset);

### Visual Basic Syntax

hpe5022\_trackOffsetImmediate(ByVal id As Long, ByVal offset As Double) As Long

### Description

This function allows you to move the fine stage position (piezo) without a trigger by the index pulse. This function works even if the head is unloaded.

### Parameters

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- offset

**Description** Specifies the absolute track offset position to move. If the "hpe5022\_trackOffsetCompValue" function set the head offset value, the range of the offset is changed. For example, the head offset value in "hpe5022\_trackOffsetCompValue" is set at  $1.0 \times 10^{-6}$ , the maximum and the minimum values are  $5.0 \times 10^{-6}$  and  $-7.0 \times 10^{-6}$ , respectively.

**Direction** IN

**Preset value** 0

**Unit** Meter

**Values**

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'offset' is out of range.

**See Also** “hpe5022\_trackOffsetCompValue” on page 984

## hpe5022\_trackOffsetUserSettlingTime

**C Syntax** ViStatus hpe5022\_trackOffsetUserSettlingTime(ViSession id, ViReal64 time);

**Visual Basic Syntax** hpe5022\_trackOffsetUserSettlingTime(ByVal id As Long, ByVal time As Double) As Long

**Description** This function allows you to have a wait time after the fine positioning (piezo movement) before the next step start.

Normally, the piezo is moved during one or two spindle revolutions, then the write/read sequences is done at the next revolution. If you wait one or two more revolution before the write/read sequences start, the piezo position might be more stable. So that, this might improve the measurement stability.

- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - time
 

Description	Specifies the additional setting time. The time of (one revolution period)*n [n=1, 2, 3..] is recommended.
Direction	IN
Preset value	0
Unit	second
Values	

Name	Value
hpe5022_TRACK_OFFSET_USER_SETT_MIN	0
hpe5022_TRACK_OFFSET_USER_SETT_MAX	1

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'time' is out of range.

**See Also** "hpe5022\_trackOffsetUserSettlingTime\_Q" on page 228

## **hpe5022\_trackOffsetUserSettlingTime\_Q**

- C Syntax** ViStatus hpe5022\_trackOffsetUserSettlingTime\_Q(ViSession id, ViPReal64 time);
- Visual Basic Syntax** hpe5022\_trackOffsetUserSettlingTime\_Q(ByVal id As Long, ByRef time As Double) As Long
- Description** This function returns the additional settling time of the fine positioning.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - time
    - Description Returns the additional setting time.
    - Direction OUT
    - Unit second

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_trackOffsetUserSettlingTime" on page 227

## hpe5022\_track

### C Syntax

```
ViStatus hpe5022_track(ViSession id, ViInt32 track_no);
```

### Visual Basic Syntax

```
hpe5022_track(ByVal id As Long, ByVal track_no As Long) As Long
```

### Description

This function moves the head at the specified track from the current track.

The head position and the head skew angle are calculated using the parameters specified by the “hpe5022\_driveConfigPivot” or “hpe5022\_driveConfigRadiusSkew”, and “hpe5022\_hgaDimension” functions.

When you want to set the head position and the skew angle manually, use the “hpe5022\_headPosition” function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- track\_no
 

Description	Specifies the target track number. The outermost track is track number 0. The maximum track number is specified by the “hpe5022_dataArea” function.
Direction	IN

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the “hpe5022_driveState” function.
hpe5022_ERROR_MOTOR_FAULT	An error is detected in the motor or servo of the spinstand. Check the spinstand and restart the system.

Function Reference  
**Drive Control Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_POSITION	The specified head position is in the inhibit area. Check the Agilent part number of the cassette, the inhibit area, the HGA dimension, the data area and the specified track number. See the “hpe5022_hgaCassette”, “hpe5022_inhibitMargin”, “hpe5022_hgaDimension” and “hpe5022_dataArea” functions.
hpe5022_ERROR_NDEF_HGA	The HGA dimension is not defined. See the “hpe5022_hgaCassette” and “hpe5022_hgaDimension” functions.
hpe5022_ERROR_INTERLOCK	The spinstand is out of air. Check if air is supplied to the spinstand.

**See Also**

- “hpe5022\_driveConfigPivot” on page 154
- “hpe5022\_driveConfigRadiusSkew” on page 157
- “hpe5022\_hgaDimension” on page 161
- “hpe5022\_inhibitMargin” on page 166
- “hpe5022\_hgaCassette” on page 169
- “hpe5022\_dataArea” on page 180
- “hpe5022\_driveState” on page 209
- “hpe5022\_track\_Q” on page 231
- “hpe5022\_headPosition” on page 241

## **hpe5022\_track\_Q**

### **C Syntax**

ViStatus hpe5022\_track\_Q(ViSession id, ViPInt32 track\_no);

### **Visual Basic Syntax**

hpe5022\_track\_Q(ByVal id As Long, ByRef track\_no As Long) As Long

### **Description**

This function returns the track number where the head is located.

### **Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- track\_no
 

Description	Returns the current track number of the head position. During operation of the "hpe5022_track" function, when a failure has occurred just before calling this function the 'track_no' is set to -1. It is also set to -1 when this function is called just after calling the "hpe5022_headPosition" function.
Direction	OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### **See Also**

- "hpe5022\_dataArea" on page 180
- "hpe5022\_track" on page 229
- "hpe5022\_headPosition" on page 241

## **hpe5022\_motorState**

### **C Syntax**

ViStatus hpe5022\_motorState(ViSession id, ViBoolean motorOn);

### **Visual Basic Syntax**

hpe5022\_motorState(ByVal id As Long, ByVal motorOn As Integer) As Long

### **Description**

This function rotates and stops the spindle. The sequence is described below.

- Motor on sequence:
  1. Clamp the disk.
  2. Rotate the spindle.
- Motor off sequence:
  1. Stop the spindle rotation.
  2. Unclamp the disk.

As the “hpe5022\_driveState” functions includes this function, you will use this function when you want to just rotate and stop the spindle while the drive is turned on (“hpe5022\_driveState” is set to “VI\_TRUE”).

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- motorOn
  - Description Specifies to rotate or stop the spindle.
  - Direction IN
  - Preset value 0 (VI\_FALSE)
  - Values

<b>Name</b>	<b>Value</b>	<b>Description</b>
VI_TRUE	1	Motor on
VI_FALSE	0	Motor off

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error



<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_HARD_MISS	The media is not set. Check if the media is set properly.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_INTERLOCK	The spinstand is out of air. Check if air is supplied to the spinstand.
hpe5022_ERROR_NDEF_HGA	The HGA dimension is not defined.
hpe5022_ERROR_MOTOR_FAULT	An error is detected in the motor or servo of the spinstand. Check the spinstand and restart the system.
hpe5022_ERROR_SHROUD_OPEN	The shroud cover is open. Close this cover when the drive is on.

**See Also**

"hpe5022\_driveState" on page 209

"hpe5022\_motorState\_Q" on page 234

## hpe5022\_motorState\_Q

### C Syntax

ViStatus hpe5022\_motorState\_Q(ViSession id, ViPBoolean motorOn);

### Visual Basic Syntax

hpe5022\_motorState\_Q(ByVal id As Long, ByRef motorOn As Integer) As Long

### Description

This function returns when the spindle rotates.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- motorOn
  - Description Returns if the spindle rotates.
  - Direction OUT
  - Values Same as 'motorOn' parameter in the "hpe5022\_motorState" function.

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

"hpe5022\_motorState" on page 232

## hpe5022\_motorStateEx

### C Syntax

```
ViStatus hpe5022_motorStateEx(ViSession id, ViInt16 motorState);
```

### Visual Basic Syntax

```
hpe5022_motorStateEx(ByVal id As Long, ByVal motorState As Integer) As Long
```

### Description

This function allows you to stop the spindle rotation with clamping the disk. The sequence is described below.

- Motor on sequence: (same as the “Motor on” sequence of the “hpe5022\_motorState” function)
  1. Clamp the disk.
  2. Rotate the spindle.
- Motor off sequence: (same as the “Motor off” sequence of the “hpe5022\_motorState” function)
  1. Stop the spindle rotation.
  2. Unclamp the disk.
- Motor stop sequence:
  1. Stop the spindle rotation with clamping the disk.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- motorOn
 

Description	Specifies the motor condition.
Direction	IN
Values	

Name	Value	Description
pe5022_MOTOR_STATE_ON	0	Motor on
hpe5022_MOTOR_STATE_OFF	1	Motor off
hpe5022_MOTOR_STATE_STOP	2	Motor stop

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_MISS	The media is not set. Check if the media is set properly.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_INTERLOCK	The spinstand is out of air. Check if air is supplied to the spinstand.
hpe5022_ERROR_NDEF_HGA	The HGA dimension is not defined.
hpe5022_ERROR_MOTOR_FAULT	An error is detected in the motor or servo of the spinstand. Check the spinstand and restart the system.
hpe5022_ERROR_SHROUD_OPEN	The shroud cover is open. Close this cover when the drive is on.

**See Also**

"hpe5022\_driveState" on page 209

"hpe5022\_motorState\_Q" on page 234

## **hpe5022\_headLoad**

### **C Syntax**

ViStatus hpe5022\_headLoad(ViSession id, ViBoolean load);

### **Visual Basic Syntax**

hpe5022\_headLoad(ByVal id As Long, ByVal load As Integer) As Long

### **Description**

This function loads and unloads the head. The sequences are as follows:

- When `hpe5022_LOAD_TYPE_NORMAL` or `hpe5022_LOAD_TYPE_TILT` is specified as the `loadType` by the “`hpe5022_headLoadType`” function.

— Head Load sequence:

1. Move the head to the load position where it is specified by the “`hpe5022_headLoadConfig`” or “`hpe5022_headLoadConfigEx`” function.
2. Load the head.
3. Move the head to the initial position where it is specified by the “`hpe5022_headLoadConfig`” or “`hpe5022_headLoadConfigEx`” function.

— Head Unload sequence:

1. Move the head to the load position where it is specified by the “`hpe5022_headLoadConfig`” or “`hpe5022_headLoadConfigEx`” function.
2. Unload the head.
3. Move the head to the home position.

- When `hpe5022_LOAD_TYPE_RAMP` is specified as the `loadType` by the “`hpe5022_headLoadType`” function.

— Head Load sequence:

1. Move the ramp to Ramp In position.
2. Move the head to the ramp load position where it is configured by the Ramp Positioning Utility.
3. Load the head.
4. Move the head to the media load position where it is configured by the Ramp Positioning Utility, with the head speed configured by the “`hpe5022_headLoadRampConfig`” function.
5. Move the ramp to Ramp Out position.
6. Move the head to the initial position where it is specified by the “`hpe5022_headLoadRampConfig`”.

— Head Unload sequence:

**Drive Control Function**

1. Move the ramp to Ramp In position
2. Move the head to the media load position.
3. Move the head to the ramp load position with the head speed configured by the “hpe5022\_headLoadRampConfig” function.
4. Unload the head.
5. Move the ramp to Ramp Out position.

Move the head to the home position.

As the “hpe5022\_driveState” function includes this function, use this function when you want to just unload and load while the spindle is rotating.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- load

Description Specifies loading or unloading.

Direction IN

Preset value 0 (VI\_FALSE)

Values

Name	Value	Description
VI_TRUE	1	Load the Head
VI_FALSE	0	Unload the head

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_HARD	Hardware error is detected.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.

Error Code	Description
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindrive has been turned off. Turn it on before executing this function. See the “hpe5022_driveState” function.
hpe5022_ERROR_INTERLOCK	The spindrive is out of air. Check if air is supplied to the spindrive.
hpe5022_ERROR_INV_POSITION	The specified head position is in the inhibit area. Check the Agilent part number of the cassette, the inhibit area, the HGA dimension, the data area and the specified track number. See the “hpe5022_hgaCassette”, “hpe5022_hgaDimension” and “hpe5022_inhibitMargin” functions.
hpe5022_ERROR_MOTOR_FAULT	An error is detected in the motor or servo of the spindrive. Check the spindrive and restart the system.

**See Also**

- “hpe5022\_headLoadConfig” on page 192
- “hpe5022\_driveState” on page 209
- “hpe5022\_headLoad\_Q” on page 240
- “hpe5022\_headLoadType” on page 186

## **hpe5022\_headLoad\_Q**

### **C Syntax**

ViStatus hpe5022\_headLoad\_Q(ViSession id, ViPBoolean load);

### **Visual Basic Syntax**

hpe5022\_headLoad\_Q(ByVal id As Long, ByRef load As Integer) As Long

### **Description**

This function returns if the head is loaded.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- load
  - Description Returns if the head is loaded.
  - Direction OUT
  - Values Same as 'load' parameter in the "hpe5022\_headLoad" function.

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_HARD	Hardware error is detected.

### **See Also**

"hpe5022\_headLoad" on page 237



## hpe5022\_headPosition

**C Syntax** ViStatus hpe5022\_headPosition(ViSession id, ViReal64 radius, ViReal64 skew);

**Visual Basic Syntax** hpe5022\_headPosition(ByVal id As Long, ByVal radius As Double, ByVal skew As Double) As Long

**Description** This function moves the head at the specified position and controls the skew angle at the specified value.

This function moves the head to specified position from its current position.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- radius
  - Description Specifies the target radius of the head position.
  - Direction IN
  - Unit Meter
- skew
  - Description Specifies the target skew angle.
  - Direction IN
  - Unit Degree
  - Values

Name	Value
hpe5022_SKEW_ANGLE_MIN	-60
hpe5022_SKEW_ANGLE_MAX	30

**NOTE** When skew is set below -30 degrees the E5022A/B system can not guarantee a track offset of  $\pm 6\mu\text{m}$ , this could result to an error "hpe5022\_ERROR\_INV\_PARAMETER". When skew angle is set below -30 degrees the track offset must be set to a value lower than  $\pm 6\mu\text{m}$  to avoid this error. It is recommended that the skew angle be set between 30 and -30 degrees.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Drive Control Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_MOTOR_FAULT	An error is detected in the motor or servo of the spinstand. Check the spinstand and restart the system.
hpe5022_ERROR_INV_POSITION	The specified head position is in the inhibit area. Check the Agilent part number of the cassette, the inhibit area, the HGA dimension, the data area and the specified track number. See the "hpe5022_hgaCassette", "hpe5022_hgaDimension", "hpe5022_inhibitMargin" and "hpe5022_dataArea" functions.
hpe5022_ERROR_NDEF_HGA	The HGA dimension is not defined. See the "hpe5022_hgaCassette" and "hpe5022_hgaDimension" functions.
hpe5022_ERROR_INTERLOCK	The spinstand is out of air. Check if air is supplied to the spinstand.

**See Also**

- "hpe5022\_hgaDimension" on page 161
- "hpe5022\_inhibitMargin" on page 166
- "hpe5022\_hgaCassette" on page 169
- "hpe5022\_dataArea" on page 180
- "hpe5022\_driveState" on page 209
- "hpe5022\_track" on page 229

## hpe5022\_headPosition\_Q

**C Syntax** ViStatus hpe5022\_headPosition\_Q(ViSession id, ViPReal64 radius, ViPReal64 skew);

**Visual Basic Syntax** hpe5022\_headPosition\_Q(ByVal id As Long, ByRef radius As Double, ByRef skew As Double) As Long

**Description** This function returns the current position of the head from its previous position. Even if the “hpe5022\_track” function is used to set the head position and the skew angle, this function returns the current values that is set automatically.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- radius
 

Description	Returns the current radius of the head position.
Direction	OUT
Unit	Meter
- skew
 

Description	Returns the current skew angle.
Direction	OUT
Unit	Degree

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_hgaDimension” on page 161  
 “hpe5022\_inhibitMargin” on page 166  
 “hpe5022\_hgaCassette” on page 169  
 “hpe5022\_dataArea” on page 180  
 “hpe5022\_driveState” on page 209

Function Reference  
**Drive Control Function**

“hpe5022\_track” on page 229

## hpe5022\_rampPosition

### C Syntax

ViStatus hpe5022\_rampPosition(ViSession id, ViInt16 position);

### Visual Basic Syntax

hpe5022\_rampPosition(ByVal id As Long, ByVal position As Integer) As Long

### Description

This function controls the position of the ramp load mechanism of the spinstand. In case that the spinstand in use does not support ramp mechanism, “hpe5022\_ERROR\_NSUP\_FUNC” will take place.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the “hpe5022_init” function.
Direction	IN
- position
 

Description	Specifies the position of the ramp load mechanism.
Direction	IN
Values	The following constants can be used.

Name	Value
hpe5022_RAMP_POSITION_EVACUATED	0
hpe5022_RAMP_POSITION_OPERATING	1

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The handle specified by ‘position’ is invalid.
hpe5022_ERROR_NSUP_FUNC	The ramp load mechanism is not installed.

### See Also

- “hpe5022\_rampPosition\_Q” on page 246
- “hpe5022\_headLoadRampConfig” on page 201
- “hpe5022\_headLoadRampConfig\_Q” on page 203

## **hpe5022\_rampPosition\_Q**

### **C Syntax**

ViStatus hpe5022\_rampPosition\_Q(ViSession id, ViPInt16 position);

### **Visual Basic Syntax**

hpe5022\_rampPosition\_Q(ByVal id As Long, ByVal position As Integer) As Long

### **Description**

This function returns the position of the ramp load mechanism of the spinstand. In case that the spinstand in use does not support ramp mechanism, “hpe5022\_ERROR\_NSUP\_FUNC” will take place.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the “hpe5022\_init” function.
  - Direction IN
- position
  - Description Returns the position of the ramp load mechanism.
  - Direction OUT
  - Values The following constants can be used.

<b>Name</b>	<b>Value</b>
hpe5022_RAMP_POSITION_EVACUATED	0
hpe5022_RAMP_POSITION_OPERATING	1

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_NSUP_FUNC	The ramp load mechanism is not installed.

### **See Also**

- “hpe5022\_rampPosition” on page 245
- “hpe5022\_headLoadRampConfig” on page 201
- “hpe5022\_headLoadRampConfig\_Q” on page 203

## hpe5022\_headLoadImmediate

### C Syntax

ViStatus hpe5022\_headLoadImmediate(ViSession id, ViBoolean load);

### Visual Basic Syntax

hpe5022\_headLoadImmediate(ByVal id As Long, ByVal load As Integer) As Long

### Description

This function loads or unloads the head at the current head position. Head seek action is not done by this function. This function will succeed when the head is located at the home position or upon the disk. Motor on/off state does not affect the operation of this function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the “hpe5022_init” function.
Direction	IN
- load
 

Description	Loads and unloads the head.
Direction	IN
Values	

Name	Value	Description
VI_TRUE	1	Load head
VI_FALSE	0	Unload head

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD	Hardware error is detected.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INTERLOCK	The spindstand is out of air. Check if air is supplied to the spindstand.

Function Reference  
**Drive Control Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_POSITION	The specified head position is in the inhibit area. Check the Agilent part number of the cassette, the inhibit area, the HGA dimension, the data area and the specified track number. See the “hpe5022_hgaCassette”, “hpe5022_hgaDimension” and “hpe5022_inhibitMargin” functions.

**See Also**

“hpe5022\_hgaCassette” on page 169

“hpe5022\_hgaDimension” on page 161

“hpe5022\_inhibitMargin” on page 166



## **hpe5022\_headPositionSpeed**

### **C Syntax**

ViStatus hpe5022\_headPositionSpeed(ViSession id, ViReal64 vel);

### **Visual Basic Syntax**

hpe5022\_headPositionSpeed(ByVal id As Long, ByVal vel As Double) As Long

### **Description**

This function controls a velocity of the head movement by the coarse stage. The head movement speeds at not only on-media but also off-media (the loading/unloading and a movement from/to the home position) are changed. The speed of the piezo movement is not changed.

### **Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- vel
 

Description	Specifies a velocity of the head movement. The range of velocity is returned by the "hpe5022_headPositionSpeedRange_Q" function.
Direction	IN
Unit	Meter/Second

### **Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'vel' is out of range.

### **See Also**

"hpe5022\_headPositionSpeed\_Q" on page 250  
 "hpe5022\_headPositionSpeedRange\_Q" on page 251

## hpe5022\_headPositionSpeed\_Q

### C Syntax

ViStatus hpe5022\_headPositionSpeed\_Q(ViSession id, ViPReal64 vel);

### Visual Basic Syntax

hpe5022\_headPositionSpeed(ByVal id As Long, ByRef vel As Double) As Long

### Description

This function returns the velocity of the head movement.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- vel
  - Description Returns a velocity of the head movement.
  - Direction OUT
  - Unit Meter/Second

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

"hpe5022\_headPositionSpeed" on page 249

## hpe5022\_headPositionSpeedRange\_Q

**C Syntax** ViStatus hpe5022\_headPositionSpeedRange\_Q(ViSession id, ViPReal64 velMin, ViPReal64 velMax);

**Visual Basic Syntax** hpe5022\_headPositionSpeedRange\_Q(ByVal id As Long, ByRef velMin As Double, ByRef velMax As Double) As Long

**Description** This function returns the minimum and maximum values of the head movement velocity. This values are depending on a spinstand type.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- velMin
 

Description	Returns the minimum velocity of the head movement.
Direction	OUT
Unit	Meter/Second
- velMax
 

Description	Returns the maximum velocity of the head movement.
Direction	OUT
Unit	Meter/Second

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_headPositionSpeed" on page 249

## **hpe5022\_trackToRadiusSkew**

**C Syntax** ViStatus hpe5022\_trackToRadiusSkew(ViSession id, ViInt32 track\_no, ViPReal64 radius, ViPReal64 skew);

**Visual Basic Syntax** hpe5022\_trackToRadiusSkew(ByVal id As Long, ByVal track\_no As Long, ByRef radius As Double, ByRef skew As Double) As Long

**Description** This function computes and returns the radius and skew angle of the head as specified by the “hpe5022\_track” function which specifies the track number position of the head.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- track\_no
  - Description Specifies the track number from where to calculate the radius and skew angle.
  - Direction IN
  - Unit Meter
- radius
  - Description Returns the radius corresponding to its specified track number.
  - Direction OUT
  - Unit Meter
- skew
  - Description Returns the skew angle corresponding to its specified track number.
  - Direction OUT
  - Unit Degree

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Error Code	Description
hpe5022_ERROR_INV_PARAMETER	The parameter 'track_no' is out of range.

**See Also**

“hpe5022\_track” on page 229

---

## Input Range Control Function

This section describes the control function of the input range.

### hpe5022\_measurementMode

#### C Syntax

```
ViStatus hpe5022_measurementMode(ViSession id, ViInt16 mode);
```

#### Visual Basic Syntax

```
hpe5022_measurementMode(ByVal id As Long, ByVal mode As Integer) As Long
```

#### Description

This function specifies the measurement mode.

When the measurement mode is set to auto, the values specified by the “hpe5022\_inputRange” and “hpe5022\_pwReference” functions are calculated from the value specified by the “hpe5022\_isolatedPulseReference” function.

When this function is set to manual, the user must specify two other functions (the “hpe5022\_inputRange” and “hpe5022\_pwReference” functions).

See chapter 5 in the Operaion Manual for details.

#### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- mode

Description Specifies the type of measurement mode. If set to “hpe5022\_MEAS\_AUTO”, then the input range and PW reference will automatically be set to its optimum value.

Direction IN

Preset Value hpe5022\_MEAS\_AUTO

Values

Name	Value	Description
hpe5022_MEAS_AUTO	0	The auto level control is ON
hpe5022_MEAS_MAN	1	The auto level control is OFF

#### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'mode' is out of range.

**See Also**

“hpe5022\_measurementMode\_Q” on page 256

“hpe5022\_autoConfig” on page 257

“hpe5022\_isolatedPulseReference” on page 265

“hpe5022\_inputRange” on page 271

“hpe5022\_pwReference” on page 403

## **hpe5022\_measurementMode\_Q**

- C Syntax** ViStatus hpe5022\_measurementMode\_Q(ViSession id, ViPInt16 mode);
- Visual Basic Syntax** hpe5022\_measurementMode\_Q(ByVal id As Long, ByRef mode As Integer) As Long
- Description** This function returns the specified measurement mode.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - mode
    - Description Returns the measurement mode.
    - Direction OUT
    - Values Same as 'mode' in the "hpe5022\_measurementMode" function.

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_measurementMode" on page 254



## hpe5022\_autoConfig

**C Syntax** ViStatus hpe5022\_autoConfig(ViSession id, ViPReal64 taa, ViPReal64 pwLength);

**Visual Basic Syntax** hpe5022\_autoConfig(ByVal id As Long, ByRef taa As Double, ByRef pwLength As Double) As Long

**Description** This function measures the TAA and the PW length of an isolated pulse pattern and sets the result into the “hpe5022\_isolatedPulseReference” function.

When this function is executed and “hpe5022\_measurementMode” function is set to auto mode, the input range is automatically controlled even if the pulse is affected by the Inter-Symbol Interference (ISI).

When magnetic transitions are written close enough, the isolated pulses from each transition start to overlap. This overlapping effect is called ISI.

The auto configuration measures the TAA and the PW length for an isolated pulse. E5022A/B controls the input level using these values. Since these values are set automatically in the “hpe5022\_isolatedPulseReference” function, there is no need to execute this function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- taa
 

Description	Returns the TAA value of the reference isolated pulse.
Direction	OUT
Unit	Volt
- pwLength
 

Description	Returns the Pulse Width (PW) length of the reference isolated pulse.
Direction	OUT
Unit	Meter

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Input Range Control Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_AUTO_CONFIG_FAILED	The auto configuration has failed.
hpe5022_ERROR_MOTOR_FAULT	An error is detected in the motor or servo of the spinstand. Check the spinstand and restart the system.

**See Also**

“hpe5022\_measurementMode” on page 254

“hpe5022\_isolatedPulseReference” on page 265

“hpe5022\_inputRange” on page 271

## hpe5022\_autoConfigEraseBand

**C Syntax** ViStatus hpe5022\_autoConfigEraseBand(ViSession id, ViReal64 range, ViReal64 pitch);

**Visual Basic Syntax** hpe5022\_autoConfigEraseBand(ByVal id As Long, ByVal range As Double, ByVal pitch As Double) As Long

**Description** This function specifies parameters for a band erase in the auto configuration sequence. The band erase performs erases between -(specified range) and +(specified range) with the specified pitch.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

- range
 

Description	Specifies the erase range. the minimum value is 0.
Direction	IN
Unit	Meter
Preset Value	$3 \times 10^{-6}$
Values	

Name	Value
hpe5022_TRACK_OFFSET_MAX	$6 \times 10^{-6}$

- pitch
 

Description	Specifies the erase pitch.
Direction	IN
Unit	Meter
Preset Value	$0.3 \times 10^{-6}$
Values	

Name	Value
hpe5022_ERASE_BAND_PITCH_MIN	$50 \times 10^{-9}$
hpe5022_ERASE_BAND_PITCH_MAX	$6 \times 10^{-6}$

Function Reference  
**Input Range Control Function**

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'range' and/or 'pitch' is out of range.

**See Also**

“hpe5022\_autoConfig” on page 257

“hpe5022\_autoConfigEraseBand\_Q” on page 261

## hpe5022\_autoConfigEraseBand\_Q

**C Syntax** ViStatus hpe5022\_autoConfigEraseBand\_Q(ViSession id, ViPReal64 range, ViPReal64 pitch);

**Visual Basic Syntax** hpe5022\_autoConfigEraseBand(ByVal id As Long, ByRef range As Double, ByRef pitch As Double) As Long

**Description** This function returns parameters for a band erase in the auto configuration sequence.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- range
 

Description	Returns the width to erase.
Direction	OUT
Unit	Meter
- pitch
 

Description	Returns the erase pitch.
Direction	OUT
Unit	Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_autoConfigEraseBand" on page 259  
 "hpe5022\_autoConfig" on page 257

## **hpe5022\_autoConfigTrackProfile**

**C Syntax** ViStatus hpe5022\_autoConfigTrackProfile(ViSession id, ViReal64 range, ViInt16 points);

**Visual Basic Syntax** hpe5022\_autoConfigTrackProfile(ByVal id As Long, ByVal range As Double, ByVal points As Integer) As Long

**Description** This function specifies parameters for a track profile measurement in the auto configuration sequence. The track profile measurement performs TAA measurements between -(specified range) and +(specified range) with the specified number of points in order to find the optimum input range.

**Parameters**

- **id**  
Description Specifies the system identifier. This is given by the "hpe5022\_init" function.  
Direction IN
- **range**  
Description Specifies the width to make a track profile measurement. The minimum value is 0.  
Direction IN  
Unit Meter  
Preset Value  $2 \times 10^{-6}$   
Values

Name	Value
hpe5022_TRACK_OFFSET_MAX	$6 \times 10^{-6}$

- **points**  
Description Specifies number of points for the track profile measurement.  
Direction IN  
Preset Value 101  
Values

Name	Value
hpe5022_TRACK_PROFILE_SIZE_MIN	1
hpe5022_TRACK_PROFILE_SIZE_MAX	201

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'range' and/or 'points' is out of range.

## See Also

“hpe5022\_autoConfig” on page 257

“hpe5022\_autoConfigTrackProfile\_Q” on page 264

## **hpe5022\_autoConfigTrackProfile\_Q**

**C Syntax** ViStatus hpe5022\_autoConfigTrackProfile\_Q(ViSession id, ViPReal64 range, ViPInt16 points);

**Visual Basic Syntax** hpe5022\_autoConfigTrackProfile(ByVal id As Long, ByRef range As Double, ByRef points As Integer) As Long

**Description** This function returns parameters for a track profile measurement in the auto configuration sequence.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- range
  - Description Returns the width to make a track profile measurement.
  - Direction OUT
  - Unit Meter
- points
  - Description Returns number of points for the track profile measurement.
  - Direction OUT

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_autoConfig" on page 257  
"hpe5022\_autoConfigTrackProfile" on page 262



## hpe5022\_isolatedPulseReference

**C Syntax** ViStatus hpe5022\_isolatedPulseReference(ViSession id, ViReal64 taa, ViReal64 pwLength);

**Visual Basic Syntax** hpe5022\_isolatedPulseReference(ByVal id As Long, ByVal taa As Double, ByVal pwLength As Double) As Long

**Description** This function specifies the TAA and the PW length of the reference isolated pulse. Typical TAA and PW length for an isolated pulse of measurement must be specified.

When magnetic transitions are written close enough, the isolated pulses from each transition start to overlap according to the principle of superposition. This overlapping effect is called ISI. E5022A/B calculates the level and the pulse width of an input signal even if the pulse is affected by ISI.

Since “hpe5022\_autoConfig” function measures an isolated pulse and determines the parameters automatically, there is no need to set the parameters of this function when auto configuration is executed.

See chapter 5 in the Operation Manual for details.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- taa
 

Description	Specifies the TAA of the reference isolated pulse.
Direction	IN
Preset Value	$2.3333 \times 10^{-3}$ (= $350 \times 10^{-3} / 150$ )
Unit	Volt
- pwLength
 

Description	Specifies the PW length of the reference isolated pulse.
Direction	IN
Preset Value	$0.5 \times 10^{-3}$
Unit	Meter

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Input Range Control Function**

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_measurementMode” on page 254

“hpe5022\_autoConfig” on page 257

“hpe5022\_isolatedPulseReference\_Q” on page 267

“hpe5022\_inputRange” on page 271

“hpe5022\_pwReference” on page 403

## hpe5022\_isolatedPulseReference\_Q

- C Syntax** ViStatus hpe5022\_isolatedPulseReference\_Q(ViSession id, ViPReal64 taa, ViPReal64 pwLength);
- Visual Basic Syntax** hpe5022\_isolatedPulseReference\_Q(ByVal id As Long, ByRef taa As Double, ByRef pwLength As Double) As Long
- Description** This function returns the specified TAA and PW length of the reference isolated pulse.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - taa
 

Description	Returns the TAA of the reference isolated pulse.
Direction	OUT
Unit	Volt
  - pwLength
 

Description	Returns the PW of the reference isolated pulse.
Direction	IN
Unit	Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_isolatedPulseReference" on page 265

## **hpe5022\_isolatedPulseReferenceTaaAuto**

**C Syntax** ViStatus hpe5022\_isolatedPulseReferenceTaaAuto(ViSession id, ViBoolean state);

**Visual Basic Syntax** hpe5022\_isolatedPulseReferenceTaaAuto(ByVal id As Long, ByVal state As Integer) As Long

**Description** This function automatically controls the reference isolated pulse of TAA to an appropriate value in order to avoid data overflow. This function will only work when track profile is measured.

When an overflow occurs during track profile measurement and “state” parameter of this function is set to “VI\_TURE”, this function will search the appropriate range for TAA by tracing the TAA’s peak value from the center of the pulse width. The input range will automatically adjusts itself until the overflow disappears.

This new range will be the basis from which all other measurements will be performed.

When track profile is measured and “state” is set to VI\_FALSE, the input range setting will not change even if an overflow is detected.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- state
  - Description Specifies the auto setting state of the isolated pulse TAA.
  - Direction IN
  - Preset Value VI\_FALSE
  - Values

Name	Value	Description
VI_FALSE	0	The auto range control is OFF
VI_TRUE	1	The auto range control is ON

### **Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_inputRange” on page 271

“hpe5022\_measurementMode” on page 254

“hpe5022\_measureTrackProfile” on page 615

“hpe5022\_measureTripleTrack” on page 714

## **hpe5022\_isolatedPulseReferenceTaaAuto\_Q**

**C Syntax** ViStatus hpe5022\_isolatedPulseReferenceTaaAuto\_Q(ViSession id, ViPBoolean state);

**Visual Basic Syntax** hpe5022\_isolatedPulseReferenceTaaAuto\_Q(ByVal id As Long, ByRef state As Integer) As Long

**Description** This function returns the specified automatic setting state of the reference isolated pulse of the TAA.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- state
  - Description Returns the auto setting state of the isolated pulse TAA.
  - Direction OUT
  - Values

Name	Value	Description
VI_FALSE	0	The auto setting state is OFF
VI_TRUE	1	The auto setting state is ON

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_isolatedPulseReferenceTaaAuto" on page 268

## hpe5022\_inputRange

### C Syntax

ViStatus hpe5022\_inputRange(ViSession id, ViReal64 level);

### Visual Basic Syntax

hpe5022\_inputRange(ByVal id As Long, ByVal level As Double) As Long

### Description

This function specifies the input range. Although E5022A/B adjusts its attenuators and amplifiers in order to execute proper measurement, an approximate voltage level must be set at the head.

Input range is affected by the parameters, channel bit rate, data pattern, spindle speed and head position radius when you measure the same head, E5022A/B provides a function that allows the user to calculate this parameters automatically. See the “hpe5022\_isolatedPulseReference” or “hpe5022\_autoConfig” functions.

The measurement mode defines which data is to be used. When this mode is set to auto, the values specified by the “hpe5022\_isolatedPulseReference” function will be used to set the input range. When manual mode is selected, the value specified in this function will be used to set the input range.

See chapter 5 in the Operation Manual for details.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- level
 

Description	Specifies the input range.
Direction	IN
Unit	Volt
Preset Values	

Disk size	Preset Value
48mm (1.8")	2.3169×10 <sup>-3</sup>
65mm (2.5")	2.322×10 <sup>-3</sup>
95mm (3.5")	2.3282×10 <sup>-3</sup>
130mm (5.25")	2.3306×10 <sup>-3</sup>

Function Reference  
**Input Range Control Function**

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_measurementMode” on page 254

“hpe5022\_autoConfig” on page 257

“hpe5022\_isolatedPulseReference” on page 265

“hpe5022\_inputRange\_Q” on page 273



## hpe5022\_inputRange\_Q

### C Syntax

ViStatus hpe5022\_inputRange\_Q(ViSession id, ViPReal64 level);

### Visual Basic Syntax

hpe5022\_inputRange\_Q(ByVal id As Long, ByRef level As Double) As Long

### Description

This function returns the specified input range. The returned value depends on the specified measurement mode. When set to auto mode, the value specified by “hpe5022\_isolatedPulseReference” function will be used to set the input range. When set to manual mode, the value specified by the “hpe5022\_inputRange” function will be used to set the input range.

See chapter 5 in the Operation Manual for details.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- level
 

Description	Returns the specified input range.
Direction	OUT
Unit	Volt

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

- “hpe5022\_isolatedPulseReference” on page 265
- “hpe5022\_measurementMode” on page 254
- “hpe5022\_inputRange” on page 271

## hpe5022\_ampGain\_Q

### C Syntax

```
ViStatus hpe5022_ampGain_Q(ViSession id, ViPReal64 gain);
```

### Visual Basic Syntax

```
hpe5022_ampGain_Q(ByVal id As Long, ByRef gain As Double) As Long
```

### Description

This function returns the amplitude gain. This function allows you to calculate the signal level at the head from the output level of the filter matrix module.

$$SignalLevel_{atFilterMatrixOutput} = ampGain \times SignalLevel_{atHead}$$

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- gain
  - Description Returns the amplitude gain.
  - Direction OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

## Head Amplifier Function

This section describes the function that controls the head amplifier.

### hpe5022\_headAmpName\_Q

**C Syntax**

ViStatus hpe5022\_headAmpName\_Q(ViSession id, ViPString name);

**Visual Basic Syntax**

hpe5022\_headAmpName\_Q(ByVal id As Long, ByVal name As String) As Long

**Description**

This function returns Agilent part number of the head amplifier which is currently installed.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- name
 

Description	Returns the Agilent part number of the installed head amplifier. The character length of this parameter is defined by hpe5022_PART_NUM_LENGTH.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

## **hpe5022\_headAmpInputImpedance\_Q**

- C Syntax** ViStatus hpe5022\_headAmpInputImpedance\_Q(ViSession id, ViPReal64 impd);
- Visual Basic Syntax** hpe5022\_headAmpInputImpedance\_Q(ByVal id As Long, ByRef impd As Double) As Long
- Description** This function returns the input impedance of the head amplifier which is currently installed.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - impd
    - Description Returns the input impedance of the installed head amplifier.
    - Direction OUT
    - Unit Ohms

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### **See Also**

## hpe5022\_headAmpProperty

**C Syntax** ViStatus hpe5022\_headAmpProperty(ViSession id, ViInt32 property, ViReal64 value);

**Visual Basic Syntax** hpe5022\_headAmpProperty(ByVal id As Long, ByVal property As Long, ByVal value As Double) As Long

**Description** This function sets the property of the installed head amplifier. Property characteristics is dependent on each head amplifier. The property and its value is described in a corresponding header file for head amplifier. This file can be found in the directory named “c:\Program Files\Agilent\E5022\include\” with file name e5022\_66xxx.h (for C Language) or e5022\_66xxx.bas (for Visual Basic). (e5022\_66xxx is part number of head amplifier). This function is available when the head amplifier is the E5029H and E5029J Option 701 to 704 and 706. When it is the E5029K, E5029J Option 705 and 707 and above, use the “hpe5022\_headAmpRegister” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- property
 

Description	Specifies property of the head amplifier. The property is named as “hpe5022_HAP_PROP_XXXXX_YYYYY”. (where XXXXX is a lower 5 digit part number of the head amplifier.)
Direction	IN
- value
 

Description	Specifies the data value for property.
Direction	IN

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'value' is out of range.

Function Reference  
**Head Amplifier Function**

Error Code	Description
hpe5022_ERROR_NSUP_FUNC	The E5035B does not support this function.

**See Also**

“hpe5022\_headAmpProperty\_Q” on page 279

“hpe5022\_headAmpRegister” on page 280

## hpe5022\_headAmpProperty\_Q

- C Syntax** ViStatus hpe5022\_headAmpProperty\_Q(ViSession id, ViInt32 property, ViPReal64 value);
- Visual Basic Syntax** hpe5022\_headAmpProperty\_Q(ByVal id As Long, ByVal property As Long, ByVal value As Double) As Long
- Description** This function returns the property of the installed head amplifier. This function is available when the system has the E5035A. This function is available when the head amplifier is the E5029H and E5029J Option 701 to 704 and 706. When it is E5029K, E5029J Option 705 and 707 and above, use the “hpe5022\_headAmpRegister” function.

- Parameters**
- **Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.  
**Direction** IN
  - **property**  
**Description** Specifies property of the head amplifier.  
**Direction** IN
  - **value**  
**Description** Returns the data value for the specified property.  
**Direction** OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_NSUP_FUNC	The E5035B does not support this function.

- See Also** “hpe5022\_headAmpProperty” on page 277  
“hpe5022\_headAmpRegister\_Q” on page 282

## **hpe5022\_headAmpRegister**

- C Syntax** ViStatus hpe5022\_headAmpRegister(ViSession id, ViInt16 regNo, ViInt16 upperBitPos, ViInt16 lowerBitPos, ViInt32 data);
- Visual Basic Syntax** hpe5022\_headAmpRegister(ByVal id As Long, ByVal regNo As Integer, ByVal upperBitPos As Integer, ByVal lowerBitPos As Integer, ByVal data As Long) As Long
- Description** This function sets a specified data at the bit field of the head amplifier IC register. This function sets the data at the specified bits between upper and lower bit positions in the specified register number. The bit position of LSB of the register is zero.
- This function is available when the head amplifier is the E5029J Option 705 and 707 and above, E5029K. When it is the E5029H and E5029J Option 701 to 704 and 706, use the “hpe5022\_headAmpProperty” function.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - regNo
    - Description Specifies the register number of the installed head amplifier.
    - Direction IN
  - upperBitPos
    - Description Specifies the upper bit position of the register bit field.
    - Direction IN
  - lowerBitPos
    - Description Specifies the lower bit position of the register bit field.
    - Direction IN
  - data
    - Description Specifies the value to be set at the specified bits.
    - Direction IN

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error



Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter is out of range.
hpe5022_ERROR_NSUP_FUNC	The E5035A does not support this function.

**See Also**

“hpe5022\_headAmpProperty” on page 277

## **hpe5022\_headAmpRegister\_Q**

- C Syntax** ViStatus hpe5022\_headAmpRegister\_Q(ViSession id, ViInt16 regNo, ViInt16 upperBitPos, ViInt16 lowerBitPos, ViPInt32 data);
- Visual Basic Syntax** hpe5022\_headAmpRegister\_Q(ByVal id As Long, ByVal regNo As Integer, ByVal upperBitPos As Integer, ByVal lowerBitPos As Integer, ByRef data As Long) As Long
- Description** This function returns an established data at the specified bit field of the head amplifier IC register. This function is available when the head amplifier is the E5029J Option 705 and 707 and above, E5029K. When it is the E5029H and E5029J Option 701 to 704 and 706, use the “hpe5022\_headAmpProperty\_Q” function.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - regNo
    - Description Specifies the register number of the installed head amplifier.
    - Direction IN
  - upperBitPos
    - Description Specifies the upper (left) bit position of the register bit field.
    - Direction IN
  - lowerBitPos
    - Description Specifies the lower (right) bit position of the register bit field.
    - Direction IN
  - data
    - Description Returns the established value at the specified bits.
    - Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VL_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter is out of range.
hpe5022_ERROR_NSUP_FUNC	The E5035A does not support this function.

**See Also**

“hpe5022\_headAmpRegister” on page 280

## **hpe5022\_headAmpActiveChannel**

### **C Syntax**

```
ViStatus hpe5022_headAmpActiveChannel(ViSession id, ViInt16 chan);
```

### **Visual Basic Syntax**

```
hpe5022_headAmpActiveChannel(ByVal id As Long, ByVal chan As Integer) As Long
```

### **Description**

This function specifies the active channel number of head amplifier which is currently installed. This function is not supported on the E5035A spinstand interface module.

### **Parameters**

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **chan**

Description	Specifies the active channel number of the head amplifier which is currently installed.  The upper and lower limit values are queryable by the hpe5022_headAmActiveChannelRange_Q function. Preset value is dependent on the head amplifier's configuration.
Direction	IN

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter is out of range.
hpe5022_ERROR_NSUP_FUNC	The E5035A does not support this function.

### **See Also**

## **hpe5022\_headAmpActiveChannel\_Q**

**C Syntax** ViStatus hpe5022\_headAmpActiveChannel\_Q(ViSession id, ViPInt16 chan);

**Visual Basic Syntax** hpe5022\_headAmpActiveChannel\_Q(ByVal id As Long, ByRef chan As Integer) As Long

**Description** This function returns the active channel number of the head amplifier which is currently installed. This function is not supported on the E5035A spinstand interface module.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- chan
 

Description	Returns the active channel number of the head amplifier which is currently installed.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter is out of range.
hpe5022_ERROR_NSUP_FUNC	The E5035A does not support this function.

**See Also**

Function Reference

## **hpe5022\_headAmpActiveChannelRange\_Q**

- C Syntax** ViStatus hpe5022\_headAmpActiveChannelRange\_Q(ViSession id, ViPInt16 chanMin, ViPInt16 chanMax);
- Visual Basic Syntax** hpe5022\_headAmpActiveChannelRange\_Q(ByVal id As Long, ByRef chanMin As Integer, ByRef chanMax As Integer ) As Long
- Description** This function returns the active channel number range of the head amplifier which is currently installed. This function is not supported on the E5035A spinstand interface module.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - chanMin
    - Description Returns the smallest value of the selectable channel number of head amplifier which is currently installed.
    - Direction OUT
  - chanMax
    - Description Returns the largest value of the selectable channel number of head amplifier which is currently installed.
    - Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter is out of range.
hpe5022_ERROR_NSUP_FUNC	The E5035A does not support this function.

### **See Also**

## hpe5022\_updateHeadAmp

**C Syntax** ViStatus hpe5022\_updateHeadAmp(ViSession id);

**Visual Basic Syntax** hpe5022\_updateHeadAmp(ByVal id As Long) As Long

**Description** This function is used when the head amplifier on cassette is installed. Query functions related with the head amplifier do not refresh the detected head amplifier's information.

When the user decides to change the type of head amplifier on cassette, the user must execute "hpe5022\_updateHeadAmp" function, so that information query (i.e., "hpe5022\_headAmpName\_Q", "hpe5022\_headAmpBufferName\_Q", etc.) will report the correct information of the installed head amplifier on cassette.

When the head is loaded and the user executes this function, the head amplifier's information is automatically refreshed by the system. Thus, even if this function is not executed during measurement, correct setting and measurement is guaranteed by the system.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

## **hpe5022\_headAmpSerialNumber\_Q**

- C Syntax** ViStatus hpe5022\_headAmpSerialNumber\_Q(ViSession id, ViPString serial\_number);
- Visual Basic Syntax** hpe5022\_headAmpSerialNumber\_Q(ByVal id As Long, ByVal serial\_number As String) As Long
- Description** This function returns the serial number of the head amplifier currently installed.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - serial\_number
    - Description Returns the serial number of the head amplifier board (i.e. Agilent serial number). The character length of this parameter is defined by hpe5022\_SERIAL\_NUM\_LENGTH. If UHA (universal head amp) is used, null string is returned.
    - Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### **See Also**



## hpe5022\_headAmpBufferName\_Q

- C Syntax** ViStatus hpe5022\_headAmpBufferName\_Q(ViSession id, ViPString name);
- Visual Basic Syntax** hpe5022\_headAmpBufferName\_Q(ByVal id As Long, ByVal name As String) As Long
- Description** This function returns the name of the installed head amplifier buffer board (E5029J).
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - name
 

Description	Returns the name of the head amplifier's buffer board (i.e. Agilent part number). The character length of this parameter is defined by hpe5022_PART_NUM_LENGTH. If a head amplifier on cassette is not used (i.e, head amplifier buffer board is not installed), the head amplifier's name (part number) is returned.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

Function Reference

## **hpe5022\_headAmpBufferSerialNumber\_Q**

### **C Syntax**

ViStatus hpe5022\_headAmpBufferSerialNumber\_Q(ViSession id, ViPString serial\_number);

### **Visual Basic Syntax**

hpe5022\_headAmpBufferSerialNumber\_Q(ByVal id As Long, ByVal serial\_number As String) As Long

### **Description**

This function returns the serial number of the head amplifier buffer board which is currently installed.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- serial\_number
  - Description Returns the serial number of the head amplifier buffer board (i.e. Agilent serial number). The character length of this parameter is defined by hpe5022\_SERIAL\_NUM\_LENGTH. If a head amplifier on cassette is not used (i.e, head amplifier buffer board is not installed), then the serial number of the head amplifier is returned.
  - Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### **See Also**

## hpe5022\_headAmpInfoFile

**C Syntax** ViStatus hpe5022\_headAmpInfoFile(ViSession id, ViString bdFileName);

**Visual Basic Syntax** hpe5022\_headAmpInfoFile(ByVal id As Long, ByVal bdFileName As String) As Long

**Description** This function specifies the head amplifier information file.

Generally, the system detects which head amplifier is installed automatically because it refers the information in the EEPROM in the head amplifier and reads the corresponding information file under the system software directory.

This function allows you to use the head amplifiers without the EEPROM in itself. The system reads the specified information file. The assistance from Agilent is required when users develop the information files.

When the head amplifier information file is specified by this function and the head amplifier with the EEPROM is installed, the information of the EEPROM is used and the file name specified by this function is ignored.

This function is available when the system has the E5035B.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- bdFileName
 

Description	Specifies the file name of the head amp information. The file employs the XML format.  The default directory is "C:\Program Files\Agilent\E5022\config\headamp". When the head amplifier information file is located under the other directory, specify the file name with the directory path.  The maximum length of the string is defined by the (hpe5022_FILE_NAME_LENGTH_MAX).
Direction	IN

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Head Amplifier Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The specified file name is too long.
hpe5022_ERROR_NSUP_HAMP	Error occurred while loading and parsing
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has already been turned on. Turn it off before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_NSUP_FUNC	The E5035A is installed.

**See Also**

"hpe5022\_headAmpInfoFile\_Q" on page 293

## **hpe5022\_headAmpInfoFile\_Q**

- C Syntax** ViStatus hpe5022\_headAmpInfoFile\_Q(ViSession id, ViPString bdFileName);
- Visual Basic Syntax** hpe5022\_headAmpInfoFile\_Q(ByVal id As Long, ByRef bdFileName As String) As Long
- Description** This function returns the selected head amplifier information file.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - bdFileName
 

Description	Returns the file name specified by the "hpe5022_headAmpInfoFile" function. Even if the head amplifier with EEPROM is installed, the file name specified by the "hpe5022_headAmpInfoFile" function is returned. The maximum length of the string is defined by the (hpe5022_FILE_NAME_LENGTH_MAX).
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_headAmpInfoFile" on page 291

## **hpe5022\_headAmpIcName\_Q**

### **C Syntax**

ViStatus hpe5022\_headAmpIcName\_Q(ViSession id, ViPString icName, ViPString icDesc);

### **Visual Basic Syntax**

hpe5022\_headAmpIcName\_Q(ByVal id As Long, ByVal icName As String, ByVal icDesc As String) As Long

### **Description**

This function returns the head amp IC name and its description. This function is available when your system has the E5035B.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- icName
  - Description Returns the head amplifier IC name. The maximum length of the string is defined by the (hpe5022\_MESSAGE\_LENGTH\_MAX).
  - Direction OUT
- icDesc
  - Description Returns the description for the head amplifier IC. The maximum length of the string is defined by the (hpe5022\_MESSAGE\_LENGTH\_MAX).
  - Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_NSUP_FUNC	The E5035A is installed.

### **See Also**

## Port Configuration Function

This section describes the functions to determine trigger ports configuration.

### hpe5022\_triggerPort

#### C Syntax

```
ViStatus hpe5022_triggerPort(ViSession id, ViInt16 inst, ViInt16 trigPort);
```

#### Visual Basic Syntax

```
hpe5022_triggerPort(ByVal id As Long, ByVal inst As Integer, ByVal trigPort As Integer) As Long
```

#### Description

This function controls the trigger port between E5035A and other instruments. When cable connection particularly BNC trigger is set to default at the factory, you need not change this configuration.

When 3GHz Spectrum Analyzer (E4402B) is installed, the E5023A system uses two trigger port internally: TTLTRG\* for E5040A and EXT1 (BNC) for 3GHz Spectrum Analyzer. This function can configure only TTLTRG\* port for E5040A in this case. The trigger port for the 3GHz Spectrum Analyzer is fixed to EXT1 port and cannot be configured.

#### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- inst

Description Specifies the instrument.

Direction IN

Values

Name	Value	Description
hpe5022_INSTR_DGEN	2	Data Generator Module (Agilent E5037A/B/C/D)
hpe5022_INSTR_PARA	3	Parametric Module (Agilent E5038A/B)
hpe5022_INSTR_DSO	4	Oscilloscope (Option)
hpe5022_INSTR_SA	5	Spectrum Analyzer

- trigPort

Description Specifies the trigger port and TTL trigger lines. the TTLTRG0 through the TTLTRG7 are the lines of the VXI

Function Reference  
**Port Configuration Function**

bus. EXT0 and EXT1 are the designated ports oscilloscope and spectrum analyzer respectively.

When the 'inst' parameter is set to either "hpe5022\_INSTR\_DSO" or "hpe5022\_INSTR\_SA", the "hpe5022\_TRIG\_PORT\_TTLTRG0" to "hpe5022\_TRIG\_PORT\_TTLTRG7" can not be selected.

Direction IN  
 Values

Name	Value	Description
hpe5022_TRIG_PORT_TTLTRG0	0	TTLTRG0
hpe5022_TRIG_PORT_TTLTRG1	1	TTLTRG1
hpe5022_TRIG_PORT_TTLTRG2	2	TTLTRG2
hpe5022_TRIG_PORT_TTLTRG3	3	TTLTRG3
hpe5022_TRIG_PORT_TTLTRG4	4	TTLTRG4
hpe5022_TRIG_PORT_TTLTRG5	5	TTLTRG5
hpe5022_TRIG_PORT_TTLTRG6	6	TTLTRG6
hpe5022_TRIG_PORT_TTLTRG7	7	TTLTRG7
hpe5022_TRIG_PORT_EXT0	8	EXT0
hpe5022_TRIG_PORT_EXT1	9	EXT1

Preset values — When 'inst' is "hpe5022\_INSTR\_DGEN":

Name	Value
hpe5022_TRIG_PORT_TTLTRG0	0

— When 'inst' is "hpe5022\_INSTR\_PARA":

Name	Value
hpe5022_TRIG_PORT_TTLTRG1	1

— When 'inst' is "hpe5022\_INSTR\_DSO":

Name	Value
hpe5022_TRIG_PORT_EXT0	8



— When ‘inst’ is “hpe5022\_INSTR\_SA”:

Name	Value
hpe5022_TRIG_PORT_EXT1	9

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameters ‘inst’ and/or ‘trigPort’ is out of range.
hpe5022_ERROR_INV_TRIG_PORT	Invalid trigger port is selected as the parameter ‘trigPort’.

**See Also**

“hpe5022\_triggerPort\_Q” on page 298

## **hpe5022\_triggerPort\_Q**

- C Syntax** ViStatus hpe5022\_triggerPort\_Q(ViSession id, ViPInt16 inst, ViPInt16 trigPort);
- Visual Basic Syntax** hpe5022\_triggerPort\_Q(ByVal id As Long, ByVal inst As Integer, ByRef trigPort As Integer) As Long
- Description** This function returns the configuration of the trigger port or TTL trigger line.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - inst
    - Description Specifies the instrument type.
    - Direction IN
    - Values Same as 'inst' parameter in the "hpe5022\_triggerPort" function.
  - trigPort
    - Description Returns the trigger port or TTL trigger line.
    - Direction OUT
    - Values Same as 'trigPort' parameter in the "hpe5022\_triggerPort" function.

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameters 'inst' is out of range.

**See Also** "hpe5022\_triggerPort" on page 295

## hpe5022\_triggerImmediate

**C Syntax** ViStatus hpe5022\_triggerImmediate(ViSession id, ViInt16 trigPort, ViReal64 delay, ViReal64 aperture);


**Visual Basic Syntax** hpe5022\_triggerImmediate(ByVal id As Long, ByVal trigPort As Integer, ByVal delay As Double, ByVal aperture As Double) As Long

**Description** This function produces trigger on the specified trigger port or TTL trigger line. The trigger is synchronized with the spinstand index pulse and occurs just once after the function is executed. The sum of delay time and aperture is limited to a value as defined by the equation below:

**Equation 3-1 Delay and Aperture Limit**

$$Delay + Aperture \leq \frac{60}{SpindleSpeed} - 400 \times 10^{-6}$$

**Figure 3-11 Delay and Aperture**

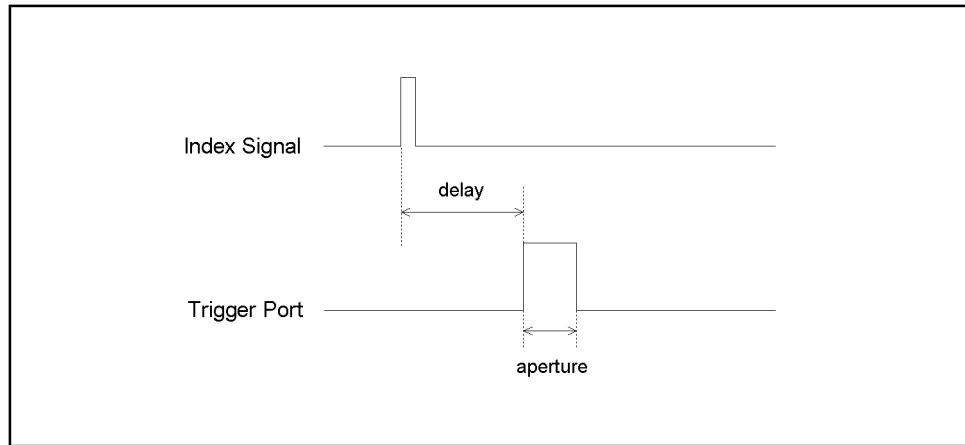

E5022APE03015

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- trigPort
 

Description	Specifies the trigger port and TTL trigger line.
Direction	IN
Values	Same as 'trigPort' parameter in the "hpe5022_triggerPort" function.

Function Reference  
**Port Configuration Function**

- delay

Description Specifies the delay time from the index pulse.

Direction IN

Unit Second

Values

Name	Value
hpe5022_EXT_TRIG_DEL_MIN	0

- aperture

Description Specifies the aperture time of the trigger. The polarity is positive. When 'trigPort' parameter is set to one of the TTLTRG lines i.e, "hpe5022\_TRIG\_PORT\_TTLTRG0" to "hpe5022\_TRIG\_PORT\_TTLTRG7", the aperture time will have no effect when trigPort is specified as TTLTRGx, since it has no capability to control the aperture time.

Direction IN

Unit Second

Values

Name	Value
hpe5022_EXT_TRIG_APER_MIN	1.0×10 <sup>-6</sup>

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'trigPort' is out of range.

**See Also**

"hpe5022\_triggerPort" on page 295

## Output State Function

This section describes the function used to enable/disable the output of write current, sense stimulus, write gate and write data.

### hpe5022\_outputState

#### C Syntax

ViStatus hpe5022\_outputState(ViSession id, ViBoolean state);

#### Visual Basic Syntax

hpe5022\_outputState(ByVal id As Long, ByVal state As Integer) As Long

#### Description

This function enables/disables the output of write current, sense stimulus, write gate and write data outputs.

They are controlled automatically when the provided measurement function such as "hpe5022\_measureParametric" is used. In general, this function is seldom used.

*Do not attach or remove the cassette of AOC when the "hpe5022\_outputState" function is turned on. This function turns on the head amp power at the same time.*

#### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- state
 

Description	Sets the output status.
Direction	IN
Preset value	0 (VI_FALSE)
Values	

Name	Value	Description
VI_TRUE	1	Output Enable
VI_FALSE	0	Output Disable

#### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Output State Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_HARD_AMP	Hardware error (Head Amp) is detected.

**See Also**

“hpe5022\_outputState\_Q” on page 303

## hpe5022\_outputState\_Q

- C Syntax** ViStatus hpe5022\_outputState\_Q(ViSession id, ViPBoolean state);
- Visual Basic Syntax** hpe5022\_outputState\_Q(ByVal id As Long, ByRef state As Integer) As Long
- Description** This function returns the output state.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - state
 

Description	Returns the output state.
Direction	OUT
Values	Same as 'state' in the "hpe5022_outputState" function.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_outputState" on page 301

---

## External Write Data Source Function

This section describes the function of the external data source.

### hpe5022\_writeDataSource

#### C Syntax

```
ViStatus hpe5022_writeDataSource(ViSession id, ViInt16 dataSource);
```

#### Visual Basic Syntax

```
hpe5022_writeDataSource(ByVal id As Long, ByVal dataSource As Integer) As Long
```

#### Description

This function allows you to use the external write data source.

When `hpe5022_WRITE_DATA_SOURCE_EXTERNAL` is selected, the system uses external data source and BNC connector on front panel is selected as write gate. In case of the E5037A/B, the data into the Ext Data In connectors are used as a write data. In case of the E5037C/D, the data into the port 2 on the E5043A/B/C are used as a write data. The E5022/E5023 measurement functions implicitly control write data source.

When `hpe5022_WRITE_DATA_SOURCE_INTERNAL` is selected, the system uses the signal generated by the E5037A/B/C/D as a write data, and VXI backplane is selected as write gate.

#### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- dataSource
  - Description Selects the write data source.
  - Direction IN
  - Preset value 0 (`hpe5022_WRITE_DATA_SOURCE_INTERNAL`)

Values

Name	Value	Description
<code>hpe5022_WRITE_DATA_SOURCE_EXTERNAL</code>	1	Write Date Source External
<code>hpe5022_WRITE_DATA_SOURCE_INTERNAL</code>	0	Write Date Source Internal



### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataSource' is out of range.

### See Also

"hpe5022\_writeDataSource\_Q" on page 306

## hpe5022\_writeDataSource\_Q

- C Syntax** ViStatus hpe5022\_writeDataSource\_Q(ViSession id, ViPInt16 dataSource);
- Visual Basic Syntax** hpe5022\_writeDataSource\_Q(ByVal id As Long, ByRef dataSource As Integer) As Long
- Description** This function returns the status of the external write data source.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - dataSource
    - Description Return the status of the write data source.
    - Direction OUT
    - Preset value 0
    - Values Same as the "hpe5022\_writeDataSource" function.

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_writeDataSource" on page 304

## Spinstand Controller J2 Port I/O Function

This section describes the function allows you to control the J2 I/O port on the rear panel of the spinstand controller.

### hpe5022\_spinStand\_ttlOutput

**C Syntax**

ViStatus hpe5022\_spinStand\_ttlOutput(ViSession id, ViInt32 pinNo, ViInt32 level);

**Visual Basic Syntax**


hpe5022\_spinStand\_ttlOutput(ByVal id As Long, ByVal pinNo As Integer, ByVal level As Long) As Long

**Description**

This function controls the high/low output of the J2 I/O port on the rear panel of the spinstand controller. The pins of No. 15 and 16 are available for users as output. The other output pins are used for the system. The location of the J2 port and its pin assignment are shown in the Figure 3-12.

**Figure 3-12**

**J2 Location and Pin Assignment**

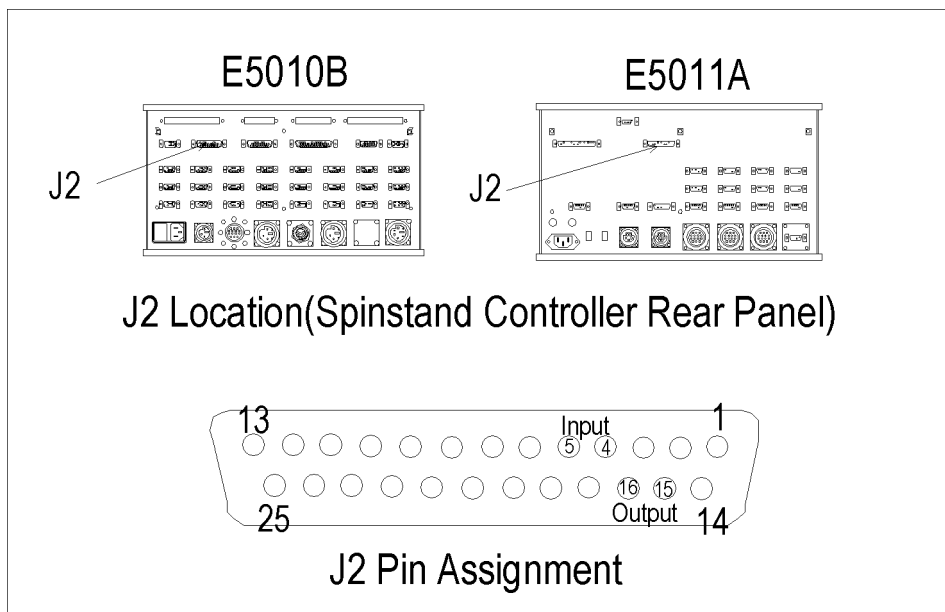

e5022ape03061

In case of the E5011A, the cable is already connected on the J2 connector and some pins are used for the system. When you use the output/input pins, you have to modify the cable in order to use the output/input signal and do not disconnect the other system used pins. The pin assignment of the J2 connector for the E5011A is

Function Reference  
**Spinstand Controller J2 Port I/O Function**

shown in the Table 3-1.

**Table 3-1 E5011A J2 Pin Assignment**

Pin No.	Description	Pin No.	Description
1	GND (Used)	14	GND (Used)
2	TTL Input 0 (Used)	15	TTL Output 0
3	TTL Input 1 (Used)	16	TTL Output 1
4	TTL Input 2	17	TTL Output 2 (Used)
5	TTL Input 3	18	TTL Output 3 (Used)
6	TTL Input 4 (Used)	19	TTL Output 4 (Used)
7	TTL Input 4 (Used)	20	TTL Output 4 (Used)
8	TTL Input 6 (Used)	21	TTL Output 6 (Used)
9	TTL Input 7 (Used)	22	TTL Output 7 (Used)
10	N/C	23	GND (Used)
11	N/C	24	GND
12	N/C	25	GND
13	+5 V (Used)		

**Parameters**

- id  
 Description Specifies the system identifier. This is given by the "hpe5022\_init" function.  
 Direction IN

- pinNo  
 Description Selects the pin number.  
 Direction IN  
 Values

Name	Value	Description
hpe5022_SS_TTLIO_PIN15	15	Pin 15
hpe5022_SS_TTLIO_PIN16	16	Pin 16

- level  
 Description Sets the level for the specified pin.  
 Direction IN  
 Preset value 0 (hpe5022\_TTL\_LOW)

Values

Name	Value	Description
hpe5022_TTL_HIGH	1	TTL High (More than 2.0 V)
hpe5022_TTL_LOW	0	TTL Low (less than 0.8 V)

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_UNAVAILABLE_PINNO	The selected pin number is valid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'level' is out of range.

**See Also**

“hpe5022\_spinStand\_ttlOutput\_Q” on page 310

“hpe5022\_spinStand\_ttlInput\_Q” on page 312

**Spinstand Controller J2 Port I/O Function****hpe5022\_spinStand\_ttlOutput\_Q****C Syntax**

```
ViStatus hpe5022_spinStand_ttlOutput_Q(ViSession id, ViInt32 pinNo, ViPInt32 level);
```

**Visual Basic Syntax**

```
hpe5022_spinStand_ttlOutput_Q(ByVal id As Long, ByVal pinNo As Integer, ByRef level As Integer) As Long
```

**Description**

This function returns the high/low status of the No. 15 or 16 pin on the J2 I/O port.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- pinNo

Description Selects the pin number.

Direction IN

Values

Name	Value	Description
hpe5022_SS_TTLIO_PIN15	15	Pin 15
hpe5022_SS_TTLIO_PIN16	16	Pin 16

- level

Description Returns the current setting for the specified pin.

Direction OUT

Values

Name	Value	Description
hpe5022_TTL_HIGH	1	TTL High (More than 2.0 V)
hpe5022_TTL_LOW	0	TTL Low (less than 0.8 V)

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_UNAVAILABLE_PINNO	The selected pin number is valid.

**See Also**

“hpe5022\_spinStand\_ttlOutput\_Q” on page 310

**Spinstand Controller J2 Port I/O Function****hpe5022\_spinStand\_ttlInput\_Q****C Syntax**

ViStatus hpe5022\_spinStand\_ttlInput\_Q(ViSession id, ViInt32 pinNo, ViPInt32 level);

**Visual Basic Syntax**

hpe5022\_spinStand\_ttlInput\_Q(ByVal id As Long, ByVal pinNo As Integer, ByRef level As Long) As Long

**Description**

This function queries the high/low status of the J2 I/O port on the rear panel of the spinstand controller. The pins of No. 4 and 5 are available for users as the input. The other input pins are used for the system. The location of the J2 port and its pin assignment are shown in the Figure 3-12.

In case of the E5011A, the cable is already connected on the J2 connector and some pins are used for the system. When you use the output/input pins, you have to modify the cable in order to use the output/input signal, and do not disconnect the other system used pins. The pin assignment of the J2 connector for the E5011A is shown in the Table 3-1.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- pinNo

Description Selects the pin number.

Direction IN

Values

Name	Value	Description
hpe5022_SS_TTLIO_PIN4	4	Pin 4
hpe5022_SS_TTLIO_PIN5	5	Pin 5

- level

Description Returns the level of the specified pin.

Direction OUT

Values

Name	Value	Description
hpe5022_TTL_HIGH	1	TTL High (More than 2.0 V)
hpe5022_TTL_LOW	0	TTL Low (less than 0.8 V)



## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_UNAVAILABLE_PINNO	The selected pin number is valid.

## See Also

“hpe5022\_spinStand\_ttlOutput” on page 307

---

## Shroud Cover Function

This section describes the function related with a shroud cover.

### hpe5022\_spindleShroud\_Q

#### C Syntax

```
ViStatus hpe5022_spindleShroud_Q(ViSession id, ViPBoolean openStat);
```

#### Visual Basic Syntax

```
hpe5022_spindleShroud_Q(ByVal id As Long, ByRef openStat as Integer) As Long
```

#### Description

This function returns the status of the spindle shroud.

#### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- openStat
  - Description Returns the status of the spindle shroud.
  - Direction OUT
  - Values

Name	Value	Description
VI_TRUE	1	Spindle shroud is open.
VI_FALSE	0	Spindle shroud is close.

#### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

#### See Also

## hpe5022\_checkShroudForm

- C Syntax** `ViStatus hpe5022_checkShroudForm(ViSession id, ViBoolean check_on_off);`
- Visual Basic Syntax** `hpe5022_checkShroudForm(ByVal id As Long, ByVal check_on_off As Integer) As Long`
- Description** This function activates the collusion check between the shroud and cassette. In the case of ON, the hpe5022\_ERROR\_INV\_POSITION error occurs and the head is not moved when the specified head position causes the collusion of the shroud and cassette. In the case of OFF, there is no check and it might cause the collusion.

**Parameters**

- **id**  
 Description Specifies the system identifier. This is given by the "hpe5022\_init" function.  
 Direction IN
- **check\_on\_off**  
 Description Selects the status of the collusion check.  
 Direction IN  
 Preset Value VI\_TRUE  
 Values

Name	Value	Description
VI_TRUE	1	Collusion check is ON
VI_FALSE	0	Collusion check is OFF

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_checkShroudForm\_Q" on page 316

## **hpe5022\_checkShroudForm\_Q**

### **C Syntax**

ViStatus hpe5022\_checkShroudForm\_Q(ViSession id, ViPBoolean check\_on\_off);

### **Visual Basic Syntax**

hpe5022\_checkShroudForm\_Q(ByVal id As Long, ByRef check\_on\_off As Integer) As Long

### **Description**

This function returns the status of the collusion check between the shroud and cassette.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- check\_on\_off
  - Description Returns the status of the collusion check.
  - Direction OUT
  - Values

<b>Name</b>	<b>Value</b>	<b>Description</b>
VI_TRUE	1	Collusion check is ON
VI_FALSE	0	Collusion check is OFF

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### **See Also**

"hpe5022\_checkShroudForm" on page 315

## hpe5022\_shroudForm

**C Syntax** ViStatus hpe5022\_shroudForm(ViSession id, ViReal64 r, ViReal64 offset);

**Visual Basic Syntax** hpe5022\_shroudForm(ByVal id As Long, ByVal r As Double, ByVal offset As Double) As Long

**Description** This function allows you to use the customer designed shroud. Define the shroud dimension when the customer designed shroud is used. This dimension is used to avoid a collision between the shroud and cassette.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- r
 


Description	Specifies the distance between the spindle center and shroud inner surface.
Direction	IN
Preset Value	0.06833 (This is a distance of the standard shroud)
Unit	Meter
Values	

Name	Value
hpe5022_SHROUD_RAD_MIN	0.01
hpe5022_SHROUD_RAD_MAX	1.00

- offset
 

Description	Specifies the distance shown in the figure.
-------------	---------------------------------------------

**Figure 3-13 Shroud Form Parameter**

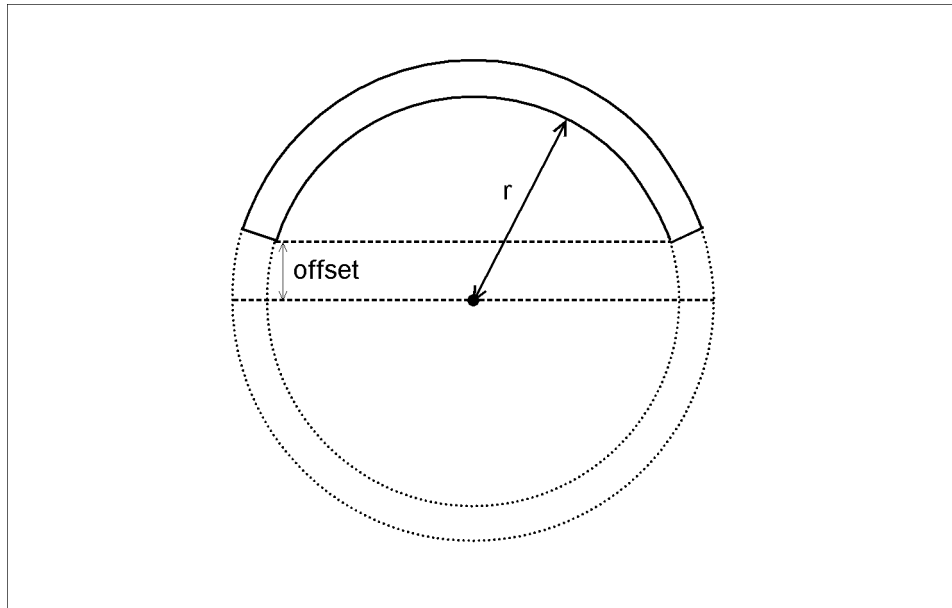

e5022ape03062

Direction        IN  
Preset Value     0.00635 (This is a distance of the standard shroud)  
Unit                Meter  
Values

Name	Value
hpe5022_SHROUD_OFFS_MIN	0
hpe5022_SHROUD_OFFS_MAX	1.00

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_checkShroudForm” on page 315  
“” on page 318

## hpe5022\_shroudForm\_Q

- C Syntax** ViStatus hpe5022\_shroudForm\_Q(ViSession id, ViPReal64 r, ViPReal64 offset);
- Visual Basic Syntax** hpe5022\_shroudForm\_Q(ByVal id As Long, ByRef r As Double, ByRef offset As Double) As Long
- Description** This function returns the shroud dimension.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - r
 

Description	Specifies the distance between the spindle center and shroud inner surface.
Direction	OUT
Unit	Meter
  - offset
 

Description	Specifies the distance shown in the figure.
Direction	IN
Unit	Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_shroudForm" on page 317

---

## Spectrum Analyzer Display Function

This section describes the function that controls the display status of the spectrum analyzer. Normally, during measurement nothing is displayed on the screen of the spectrum analyzer due to screen save. This function allows the user to view the waveform on the screen of the 4395A spectrum analyzer. This function can not be used for E5040A because E5040A has no display.

### hpe5022\_spectrumDisplayState

#### C Syntax

hpe5022\_spectrumDisplayState(ViSession id, ViBoolean dispOn);

#### Visual Basic Syntax

hpe5022\_spectrumDisplayState(ByVal id As Long, ByVal dispOn As Integer) As Long

#### Description

This function controls the display state of the 4396A spectrum analyzer.

#### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dispOn

Description Sets the display to viewable state.

Direction IN

Preset Value VI\_FALSE

Values

Name	Value	Description
VI_TRUE	1	Display is ON
VI_FALSE	0	Display is OFF

#### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.



Error Code	Description
hpe5022_INSTR_ERROR_NSUP_CONF	This function does not support E5040A.

**See Also**

“hpe5022\_spectrumDisplayState\_Q” on page 322

## **hpe5022\_spectrumDisplayState\_Q**

- C Syntax** `hpe5022_spectrumDisplayState_Q(ViSession id, ViPBoolean dispOn);`
- Visual Basic Syntax** `hpe5022_spectrumDisplayState_Q(ByVal id As Long, ByRef dispOn As Integer) As Long`
- Description** This function returns display state of the 4395A spectrum analyzer.
- Parameters**
- **id**
    - Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction** IN
  - **dispOn**
    - Description** Returns the display state of the spectrum analyzer.
    - Direction** OUT
    - Values** Same as 'dispOn' in the "hpe5022\_spectrumDisplayState" function

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_spectrumDisplayState" on page 320

## Write Function

This section describes the functions to write data.

### hpe5022\_writeCurrent

#### C Syntax

```
ViStatus hpe5022_writeCurrent(ViSession id, ViReal64 current);
```

#### Visual Basic Syntax

```
hpe5022_writeCurrent(ByVal id As Long, ByVal current As Double) As Long
```

#### Description

This function specifies the write current applied to the write head.

#### Parameters

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **current**

Description	Specifies the write current. The limit of write current is dependent on the head amplifier installed in the system. The upper and lower limit of the write current can be queried by the "hpe5022_writeCurrentRange_Q" function.
Direction	IN
Preset value	0
Unit	Ampere

#### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'current' is out of range.

#### See Also

"hpe5022\_writeCurrent\_Q" on page 324

"hpe5022\_writeCurrentRange\_Q" on page 325

**Write Function****hpe5022\_writeCurrent\_Q****C Syntax**

```
ViStatus hpe5022_writeCurrent_Q(ViSession id, ViPReal64 current);
```

**Visual Basic Syntax**

```
hpe5022_writeCurrent_Q(ByVal id As Long, ByRef current As Double) As Long
```

**Description**

This function returns the specified write current.

**Parameters**

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **current**

Description	Returns the specified write current.
Direction	OUT
Unit	Ampere

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_writeCurrent” on page 323

## hpe5022\_writeCurrentRange\_Q

- C Syntax** ViStatus hpe5022\_writeCurrentRange\_Q(ViSession id, ViPReal64 currMin, ViPReal64 currMax);
- Visual Basic Syntax** hpe5022\_writeCurrentRange\_Q(ByVal id As Long, ByRef currMin As Double, ByRef currMax As Double) As Long
- Description** This function returns the range of the write current. The write current range depends on the installed head amplifier. E5022A/B senses the head amplifier and sets the range automatically.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - currMin
 

Description	Returns the minimum value that the write current can be set.
Direction	OUT
Unit	Ampere
  - currMax
 

Description	Returns the maximum value that the write current can be set.
Direction	OUT
Unit	Ampere

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_writeCurrent" on page 323

**Write Function****hpe5022\_write****C Syntax**

```
ViStatus hpe5022_write(ViSession id, ViReal64 offset);
```

**Visual Basic Syntax**

```
hpe5022_write(ByVal id As Long, ByVal offset As Double) As Long
```

**Description**

This function executes write sequence. The write sequence is as follows.

1. Set the write current specified by the “hpe5022\_writeCurrent” function.
2. Move the head to the write track offset position.
3. Write the data pattern which is specified by “hpe5022\_selectPattern”.

As functions which execute measurement, such as the “hpe5022\_measureParametric” function, performs the write sequence automatically, use this function when you want to write only.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- offset

**Description** Specifies the write track offset position from the center of the track.

If the “hpe5022\_trackOffsetCompValue” function set the head offset value, the range of the offset is narrowed. For example, the head offset value in “hpe5022\_trackOffsetCompValue” is set at  $1.0 \times 10^{-6}$ , the maximum and the minimum values are  $5.0 \times 10^{-6}$  and  $-6.0 \times 10^{-6}$ , respectively. See the track offset compensation in the operation manual.

**Direction** IN

**Unit** Meter

**Values**

<b>Name</b>	<b>Value</b>
hpe5022_TRACK_OFFSET_MIN	$-6 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6 \times 10^{-6}$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'offset' is out of range. Check if the head offset compensation value by using "hpe5022_trackOffsetCompValue_Q" function.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.

**See Also**

- "hpe5022\_selectPattern" on page 119
- "hpe5022\_driveState" on page 209
- "hpe5022\_writeCurrent" on page 323

**Write Function****hpe5022\_initiateFreeRunWrite****C Syntax**

```
ViStatus hpe5022_initiateFreeRunWrite(ViSession id);
```

**Visual Basic Syntax**

```
hpe5022_initiateFreeRunWrite(ByVal id As Long) As Long
```

**Description**

This function writes the data pattern continuously. The write current, data pattern are specified by the “hpe5022\_writeCurrent” and “hpe5022\_selectPattern” function, respectively. To stop write, use the “hpe5022\_abortFreeRunWrite” function. However, writing is aborted when any function is called.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.

**See Also**

“hpe5022\_selectPattern” on page 119

“hpe5022\_writeCurrent” on page 323

“hpe5022\_abortFreeRunWrite” on page 329



## **hpe5022\_abortFreeRunWrite**

**C Syntax** ViStatus hpe5022\_abortFreeRunWrite(ViSession id);

**Visual Basic Syntax** hpe5022\_abortFreeRunWrite(ByVal id As Long) As Long

**Description** This function aborts the write-freerun function.

- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_initiateFreeRunWrite" on page 328

**Write Function****hpe5022\_writeMultiple****C Syntax**

```
ViStatus hpe5022_writeMultiple(ViSession id, ViReal64 offset, ViInt16 counts);
```

**Visual Basic Syntax**

```
hpe5022_writeMultiple(ByVal id As Long, ByVal offset As Double, ByVal counts As Integer) As Long
```

**Description**

This function writes the data for several revolution. The write sequence is as follows.

1. Set the write current specified by the “hpe5022\_writeCurrent” function.
2. Move the head to the write track offset position.
3. Write the data pattern which is specified by “hpe5022\_selectPattern” for the entire track.
4. Repeat the step 3 ‘counts’ times if it is more than 1.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- offset

Description Specifies the write offset position from track center.

If the “hpe5022\_trackOffsetCompValue” function set the head offset value, the range of the offset is changed. For example, the head offset value in “hpe5022\_trackOffsetCompValue” is set at  $1.0 \times 10^{-6}$ , the maximum and the minimum values are  $5.0 \times 10^{-6}$  and  $-7.0 \times 10^{-6}$ , respectively.

Direction IN

Values

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

Unit Meter

- counts

Description Specifies the number of repeat for write.

Direction IN

Values

Name	Value
hpe5022_WRITE_COUN_MIN	1
hpe5022_WRITE_COUN_MAX	1000000

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'offset', and/or 'counts' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.

**See Also**

"hpe5022\_write" on page 326

**Write Function****hpe5022\_setupWriteMultiple****C Syntax**

```
ViStatus hpe5022_setupWriteMultiple(ViSession id, ViReal64 offset, ViInt16
counts, ViPObject testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupWriteMultiple(ByVal id As Long, ByVal offset As Double, ByVal
counts As Integer, ByRef testHndl As Long) As Long
```

**Description**

This function assigns the write-multiple sequence to the specified test identifier. See the “hpe5022\_writeMultiple” function about the details of the sequence. This function does not execute the write-multiple sequence. The write-multiple is executed by the “hpe5022\_measure” function with its test identifier specified in this function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- offset
 

Description	Specifies the write offset position from track center.  If the “hpe5022_trackOffsetCompValue” function set the head offset value, the range of the offset is changed. For example, the head offset value in “hpe5022_trackOffsetCompValue” is set at $1.0 \times 10^{-6}$ , the maximum and the minimum values are $5.0 \times 10^{-6}$ and $-7.0 \times 10^{-6}$ , respectively.
Direction	IN
Values	Same as ‘offset’ in the “hpe5022_writeMultiple” function.
Unit	Meter
- counts
 

Description	Specifies the number of repeat for write.
Direction	IN
Values	Same as ‘counts’ in the “hpe5022_writeMultiple” function.
- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the write-multiple by the “hpe5022_measure” function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'offset', and/or 'counts' is out of range.

**See Also**

“hpe5022\_writeMultiple” on page 330

“hpe5022\_measure” on page 387

**Write Function****hpe5022\_writeReferenceDcr****C Syntax**

```
ViStatus hpe5022_writeReferenceDcr(ViSession id, ViReal64 refDcr);
```

**Visual Basic Syntax**

```
hpe5022_writeReferenceDcr(ByVal id As Long, ByVal refDcr As Double) As Long
```

**Description**

This function specifies the DC resistance of the write head in  $\Omega$ . This value is used to apply precise write current to the write head.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the “hpe5022\_init” function.

**Direction** IN

- refDcr

**Description** Specifies the DC resistance of the write head.

**Direction** IN

**Values**

Name	Value
hpe5022_WRITE_REFERENCE_DCR_MIN	0.1
hpe5022_WRITE_REFERENCE_DCR_MAX	$1 \times 10^3$

**Preset Value** 10

**Unit**  $\Omega$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'refDcr' is out of range.

**See Also**

“hpe5022\_writeReferenceDcr\_Q” on page 335

## hpe5022\_writeReferenceDcr\_Q

**C Syntax** ViStatus hpe5022\_writeReferenceDcr\_Q(ViSession id, ViPReal64 refDcr);

**Visual Basic Syntax** hpe5022\_writeReferenceDcr\_Q(ByVal id As Long, ByRef refDcr As Double) As Long

**Description** This function returns the DC resistance of the write head currently set in  $\Omega$ .

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the “hpe5022_init” function.
Direction	IN
- refDcr
 

Description	Returns the DC resistance of the write head.
Direction	OUT
Values	

Name	Value
hpe5022_WRITE_REFERENCE_DCR_MIN	0.1
hpe5022_WRITE_REFERENCE_DCR_MAX	$1 \times 10^3$

Unit  $\Omega$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_writeReferenceDcr” on page 334

---

## Sense Current Function

This section describes the function to set a sense current.

### hpe5022\_senseCurrent

#### C Syntax

```
ViStatus hpe5022_senseCurrent(ViSession id, ViReal64 current);
```

#### Visual Basic Syntax

```
hpe5022_senseCurrent(ByVal id As Long, ByVal current As Double) As Long
```

#### Description

This function specifies the sense current (MR bias current) applied to the read head. When the stimulus mode in the “hpe5022\_senseStimulusMode” is set at any value except hpe5022\_SENSE\_STIMULUS\_CURRENT, this function can not be executed and an error is returned.

When the mode in the “hpe5022\_senseStimulusMode” function is set at hpe5022\_SENSE\_STIMULUS\_CURRENT, both the “hpe5022\_senseCurrent” and “hpe5022\_senseStimulus” functions can change the sense current.

#### Parameters

- id
  - Description Specifies the system identifier. This is given by the “hpe5022\_init” function.
  - Direction IN
- current
  - Description Specifies the sense current. The limit value of the sense current is dependent on the installed head amplifier. The upper and lower limit values of the sense current can be queried by the “hpe5022\_senseCurrentRange\_Q” function.
  - Direction IN
  - Preset value ‘curMin’ of “hpe5022\_senseCurrentRange\_Q”
  - Unit Ampere

#### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘current’ is out of range.



Error Code	Description
hpe5022_ERROR_INV_SETUP	The sense stimulus mode in the “hpe5022_senseStimulusMode” is not set at hpe5022_SENSE_STIMULUS_CURRENT.

**See Also**

“hpe5022\_senseCurrent\_Q” on page 338

“hpe5022\_senseCurrentRange\_Q” on page 339

“hpe5022\_senseStimulusMode” on page 343

## **hpe5022\_senseCurrent\_Q**

### **C Syntax**

ViStatus hpe5022\_senseCurrent\_Q(ViSession id, ViPReal64 current);

### **Visual Basic Syntax**

hpe5022\_senseCurrent\_Q(ByVal id As Long, ByRef current As Double) As Long

### **Description**

This function returns the specified sense current. When the stimulus mode in the “hpe5022\_senseStimulusMode” is set at any value except hpe5022\_SENSE\_STIMULUS\_CURRENT, this function can not be executed and an error is returned.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- current
  - Description Returns the specified sense current.
  - Direction OUT
  - Unit Ampere

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_SETUP	The sense stimulus mode in the “hpe5022_senseStimulusMode” is not set at hpe5022_SENSE_STIMULUS_CURRENT.

### **See Also**

“hpe5022\_senseCurrent” on page 336

“hpe5022\_senseStimulusMode” on page 343

## hpe5022\_senseCurrentRange\_Q

**C Syntax** ViStatus hpe5022\_senseCurrentRange\_Q(ViSession id, ViPReal64 currMin, ViPReal64 currMax);

**Visual Basic Syntax** hpe5022\_senseCurrentRange\_Q(ByVal id As Long, ByRef currMin As Double, ByRef currMax As Double) As Long

**Description** This function returns the range of the sense current. The sense current range depends on the installed head amplifier.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- currMin
 

Description	Returns the minimum value that the sense current can be set.
Direction	OUT
Unit	Ampere
- currMax
 

Description	Returns the maximum value that the sense current can be set.
Direction	OUT
Unit	Ampere

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_senseCurrent" on page 336

## **hpe5022\_senseCurrentPolarity**

### **C Syntax**

ViStatus hpe5022\_senseCurrentPolarity(ViSession id, ViInt16 pol);

### **Visual Basic Syntax**

hpe5022\_senseCurrentPolarity (ByVal id As Long, ByVal pol As Integer) As Long

### **Description**

This function specifies the sense current polarity during a write operation. You can set at reverse and/or off only if the installed head amplifier has the capability.

The setting of this function affects the one of the “hpe5022\_senseCurrentPolarity” function.

### **Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- pol

Description Specifies the sense current polarity during a write operation. When “hpe5022\_SENS\_CURR\_POL\_REV” is selected, the direction of sense current is reversed during a write sequence. When “hpe5022\_SENS\_CURR\_POL\_OFF” is selected, the sense current is set to zero during a write sequence.

This setting is valid for all of measurement includes stability measurements.

Direction IN

Values

<b>Name</b>	<b>Value</b>	<b>Description</b>
hpe5022_SENS_CURR_POL_NORM	0	Same polarity
hpe5022_SENS_CURR_POL_REV	1	Reverse polarity
hpe5022_SENS_CURR_POL_OFF	2	Off Mode

Preset Value hpe5022\_SENS\_CURR\_POL\_NORM

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No error.

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'pol' is out of range.
hpe5022_ERROR_NSUP_SENS_CURR_POL	Reverse and/or off sense current modes are not supported.

**See Also**

“hpe5022\_stabilityConfig” on page 511

“hpe5022\_stabilityAbsSenseModeConfig” on page 537

“hpe5022\_senseStimulusMode” on page 343

“hpe5022\_senseStimulusPolarity” on page 352

## **hpe5022\_senseCurrentPolarity\_Q**

### **C Syntax**

ViStatus hpe5022\_senseCurrentPolarity\_Q(ViSession id, ViPInt16 pol);

### **Visual Basic Syntax**

hpe5022\_senseCurrentPolarity\_Q Lib "hpe5022\_32.dll" (ByVal id As Long, ByRef pol As Integer) As Long

### **Description**

This function returns the sense current polarity during a write sequence.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- pol
  - Description Returns the sense current polarity during a write sequence.
  - Direction OUT
  - Values Same as 'pol' in the "hpe5022\_senseCurrentPolarity" function.

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified is invalid.

### **See Also**

"hpe5022\_senseCurrentPolarity" on page 340

## Sense Stimulus Function

This section describes the function to set a sense stimulus.

### hpe5022\_senseStimulusMode

#### C Syntax

```
ViStatus hpe5022_senseStimulusMode(ViSession id, ViInt16 mode);
```

#### Visual Basic Syntax

```
hpe5022_senseStimulusMode(ByVal id As Long, ByVal mode As Integer) As Long
```

#### Description

This function allows you to set a MR bias type at either current, voltage, or power. The value of the MR bias is set by the “hpe5022\_senseStimulus” function. You can set at voltage and/or power only if the installed head amplifier has the capability.

When the mode is set at hpe5022\_SENSE\_STIMULUS\_CURRENT, both the “hpe5022\_senseCurrent” and “hpe5022\_senseStimulus” functions can change the sense current.

#### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- mode
 

Description	Selects the sense stimulus mode.
Direction	IN
Preset value	When the installed head amplifier has the current mode, hpe5022_SENSE_STIMULUS_CURRENT is set as default.  When it does not have the current mode, hpe5022_SENSE_STIMULUS_VOLTAGE is set as default.

Values

Name	Value	Description
hpe5022_SENSE_STIMULUS_CURRENT	0	Current
hpe5022_SENSE_STIMULUS_VOLTAGE	1	Voltage
hpe5022_SENSE_STIMULUS_POWER	2	Power

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'mode' is out of range.
hpe5022_ERROR_NSUP_CONF	The installed head amplifier does not support this function.
pe5022_ERROR_CAL_FAILED	There is something wrong in the calibration data. Contact to the Agilent office.

## See Also

“hpe5022\_senseStimulusMode\_Q” on page 345

“hpe5022\_senseStimulus” on page 346

“hpe5022\_senseCurrent” on page 336



## hpe5022\_senseStimulusMode\_Q

- C Syntax** ViStatus hpe5022\_senseStimulusMode\_Q(ViSession id, ViPInt16 mode);
- Visual Basic Syntax** hpe5022\_senseStimulusMode\_Q(ByVal id As Long, ByRef mode As Integer) As Long
- Description** This function returns the setting of a MR bias mode.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - mode
 

Description	Returns the sense stimulus mode.
Direction	OUT
Preset value	hpe5022_SENSE_STIMULUS_CURRENT
Values	Same as 'mode' in the "hpe5022_senseStimulusMode" function

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_senseStimulusMode" on page 343

## **hpe5022\_senseStimulus**

### **C Syntax**

ViStatus hpe5022\_senseStimulus(ViSession id, ViReal64 stimulus);

### **Visual Basic Syntax**

hpe5022\_senseStimulus(ByVal id As Long, ByVal stimulus As Double) As Long

### **Description**

This function specifies a value of the MR bias. The “hpe5022\_senseStimulusMode” function can select a MR bias type from current, voltage and power. The “hpe5022\_senseStimulusRange\_Q” function returns the range of the setting.

The value for each mode is memorized. If the mode is changed from the current to the voltage, then changed again from the voltage to the current, the current value is still remained.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- stimulus
  - Description Specifies the sense stimulus value.
  - Direction IN
  - Preset value ‘stimulusMin’ returned by the “hpe5022\_senseStimulusRange\_Q” function.
  - Unit Depends on the type of “hpe5022\_senseStimulusMode”.  
hpe5022\_SENSE\_STIMULUS\_CURRENT : Ampere  
hpe5022\_SENSE\_STIMULUS\_VOLTAGE : Volt  
pe5022\_SENSE\_STIMULUS\_POWER : Watt

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'stimulus' is out of range.

### **See Also**

“hpe5022\_senseStimulusMode” on page 343

“hpe5022\_senseStimulusRange\_Q” on page 348

## hpe5022\_senseStimulus\_Q

- C Syntax** ViStatus hpe5022\_senseStimulus\_Q(ViSession id, ViPReal64 stimulus);
- Visual Basic Syntax** hpe5022\_senseStimulus\_Q(ByVal id As Long, ByRef stimulus As Double) As Long
- Description** This function returns a value of the MR bias.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - stimulus
 

Description	Returns the sense stimulus value.
Direction	OUT
Unit	Depends on the type of "hpe5022_senseStimulusMode". hpe5022_SENSE_STIMULUS_CURRENT : Ampere hpe5022_SENSE_STIMULUS_VOLTAGE : Volt pe5022_SENSE_STIMULUS_POWER : Watt

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_senseStimulus" on page 346

## **hpe5022\_senseStimulusRange\_Q**

### **C Syntax**

ViStatus hpe5022\_senseStimulusRange\_Q(ViSession id, ViInt16 mode, ViPReal64 stimulusMin, ViPReal64 stimulusMax);

### **Visual Basic Syntax**

hpe5022\_senseStimulusRange\_Q(ByVal id As Long, ByVal mode As Integer, ByRef stimulusMin As Double, ByRef stimulusMax As Double) As Long

### **Description**

This function returns a range of the MR bias setting. The range depends on the installed head amplifier.

### **Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- mode

Description Selects the sense stimulus mode

Direction IN

Values

Name	Value	Description
hpe5022_SENSE_STIMULUS_CURRENT	0	Current
hpe5022_SENSE_STIMULUS_VOLTAGE	1	Voltage
hpe5022_SENSE_STIMULUS_POWER	2	Power

- stimulusMin

Description Returns the minimum value of the range for the selected mode.

Direction OUT

Unit Depend on the mode of "hpe5022\_senseStimulusMode".  
hpe5022\_SENSE\_STIMULUS\_CURRENT : Ampere  
hpe5022\_SENSE\_STIMULUS\_VOLTAGE : Volt  
hpe5022\_SENSE\_STIMULUS\_POWER : Watt

- stimulusMax

Description Returns the maximum value of the range for the selected mode.

Direction OUT

Unit Same as the 'stimulusMin'

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'mode' is out of range.

## See Also

“hpe5022\_senseStimulus” on page 346

## **hpe5022\_senseReferenceDcr**

### **C Syntax**

```
ViStatus hpe5022_senseReferenceDcr(ViSession id, ViReal64 refDcr);
```

### **Visual Basic Syntax**

```
hpe5022_senseReferenceDcr(ByVal id As Long, ByVal refDcr As Double) As Long
```

### **Description**

This function specifies the DC resistance of the read head. The resistance requires in order to apply a precise sense stimulus voltage to the read head. You need to set this when the voltage is selected in the “hpe5022\_senseStimulusMode” function.

### **Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- refDcr

Description Specifies the DC resistance of the MR head.

Direction IN

Values

<b>Name</b>	<b>Value</b>
hpe5022_SENSE_REFERENCE_DCR_MIN	0.1
hpe5022_SENSE_REFERENCE_DCR_MAX	1×10 <sup>3</sup>

Unit Ohm

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'refDcr' is out of range.

### **See Also**

“hpe5022\_senseStimulusMode” on page 343

“hpe5022\_senseStimulus” on page 346

## hpe5022\_senseReferenceDcr\_Q

- C Syntax** ViStatus hpe5022\_senseReferenceDcr\_Q(ViSession id, ViPReal64 refDcr);
- Visual Basic Syntax** hpe5022\_senseReferenceDcr\_Q(ByVal id As Long, ByRef refDcr As Double) As Long
- Description** This function returns the setting value of the DC resistance of the read head.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - refDcr
 

Description	Returns the setting of DC resistance.
Direction	OUT
Unit	Ohm

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_senseReferenceDcr" on page 350

## **hpe5022\_senseStimulusPolarity**

### **C Syntax**

ViStatus hpe5022\_senseStimulusPolarity(ViSession id, ViInt16 pol);

### **Visual Basic Syntax**

hpe5022\_senseStimulusPolarity(ByVal id As Long, ByVal pol As Integer) As Long

### **Description**

This function specifies the polarity of a MR bias during a write operation. You can set at reverse and/or off only if the installed head amplifier has the capability. The setting of this function affects the one of the “hpe5022\_senseCurrentPolarity” function.

### **Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- pol

Description Specifies the MR bias polarity during a write operation. When “hpe5022\_SENS\_STIM\_POL\_REV” is selected, the direction of MR bias is reversed during a write operation. When “hpe5022\_SENS\_STIM\_POL\_OFF” is selected, the sense current is set to zero during a write operation.

Direction IN

Preset value hpe5022\_SENS\_STIM\_POL\_NORM

Values

<b>Name</b>	<b>Value</b>	<b>Description</b>
hpe5022_SENS_STIM_POL_NORM	0	Same polarity
hpe5022_SENS_STIM_POL_REV	1	Reverse polarity
hpe5022_SENS_STIM_POL_OFF	2	Off Mode

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.



Error Code	Description
hpe5022_ERROR_INV_PARAMETER	The parameter 'pol' is out of range.
hpe5022_ERROR_NSUP_SENS_CURR_POL	The installed head amplifier does not support this function.

**See Also**

“hpe5022\_senseStimulusMode\_Q” on page 345

“hpe5022\_senseStimulus” on page 346

“hpe5022\_senseCurrentPolarity” on page 340

## **hpe5022\_senseStimulusPolarity\_Q**

- C Syntax** ViStatus hpe5022\_senseStimulusPolarity\_Q(ViSession id, ViPInt16 pol);
- Visual Basic Syntax** hpe5022\_senseStimulusPolarity\_Q(ByVal id As Long, ByRef pol As Integer) As Long
- Description** This function returns the setting of the polarity of a MR bias during write operation.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - pol
    - Description Returns the MR bias polarity during a write sequence.
    - Direction OUT
    - Values Same as 'pol' in the "hpe5022\_senseStimulusPolarity" function.

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_senseStimulusPolarity" on page 352

## Erase Function

This section describes the functions to erase a track with a DC signal.

### hpe5022\_eraseType

#### C Syntax

```
ViStatus hpe5022_eraseType(ViSession id, ViInt16 eraseType);
```

#### Visual Basic Syntax

```
hpe5022_eraseType(ByVal id As Long, ByVal eraseType As Integer) As Long
```

#### Description

This function selects the erase type; DC erase positive, DC erase negative and AC erase.

#### Parameters

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- type

**Description** Specifies the erase type. DC erase positive means that current flows the ports from WD+ to WD- on the head amplifier. The DC erase negative means that current flows the ports from WD- to WD+ on the head amplifier. When AC erase is selected, the AC frequency must be specified by the "hpe5022\_eraseAcFrequency" function.

**Direction** IN

**Preset value** 0 (hpe5022\_ERASE\_DC\_NEG)

**Values**

Name	Value	Description
hpe5022_ERASE_DC_NEG	0	DC negative erase
hpe5022_ERASE_DC_POS	1	DC positive erase
hpe5022_ERASE_AC	2	AC Erase

#### Return Values

Completion Code	Description
VI_SUCCESS	No Error

**Erase Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'type' is out of range.

**See Also**

“hpe5022\_eraseAcFrequency” on page 360

“hpe5022\_eraseType\_Q” on page 357

## hpe5022\_eraseType\_Q

- C Syntax** ViStatus hpe5022\_eraseType\_Q(ViSession id, ViPInt16 eraseType);
- Visual Basic Syntax** hpe5022\_eraseType\_Q(ByVal id As Long, ByRef eraseType As Integer) As Long
- Description** This function returns the specified erase type.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - type
 

Description	Returns the specified erase type.
Direction	OUT
Values	Same as 'type' in the "hpe5022_eraseType" function.

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_eraseType" on page 355

## **hpe5022\_eraseCurrent**

### **C Syntax**

ViStatus hpe5022\_eraseCurrent(ViSession id, ViReal64 current);

### **Visual Basic Syntax**

hpe5022\_eraseCurrent(ByVal id As Long, ByVal current As Double) As Long

### **Description**

This function specifies the erase current applied to the write head.

### **Parameters**

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **current**

Description	Specifies the erase current. The limit value of erase current is dependent on the installed head amplifier.
Direction	IN
Preset value	0
Unit	Ampere

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'current' is out of range.

### **See Also**

"hpe5022\_eraseCurrent\_Q" on page 359

"hpe5022\_writeCurrentRange\_Q" on page 325

## hpe5022\_eraseCurrent\_Q

- C Syntax** ViStatus hpe5022\_eraseCurrent\_Q(ViSession id, ViPReal64 current);
- Visual Basic Syntax** hpe5022\_eraseCurrent\_Q(ByVal id As Long, ByRef current As Double) As Long
- Description** This function returns the specified erase current.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - current
 

Description	Returns the specified erase current.
Direction	OUT
Unit	Ampere

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_eraseCurrent" on page 358

**Erase Function****hpe5022\_eraseAcFrequency****C Syntax**

```
ViStatus hpe5022_eraseAcFrequency(ViSession id, ViReal64 freq);
```

**Visual Basic Syntax**

```
hpe5022_eraseAcFrequency(ByVal id As Long, ByVal freq As Double) As Long
```

**Description**

This function specifies the frequency of an AC erase.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- freq

**Description** Specifies the AC erase frequency. The maximum limit of this value is returned by the "hpe5022\_channelBitRateRange\_Q" function.

**Direction** IN

**Preset value**  $200 \times 10^6$

**Unit** Flux per second

**Values**

Name	Value
hpe5022_ERASE_FREQ_MIN	$4 \times 10^6$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'freq' is out of range.

**See Also**

"hpe5022\_channelBitRateRange\_Q" on page 118

"hpe5022\_eraseType" on page 355

"hpe5022\_eraseAcFrequency\_Q" on page 361

"hpe5022\_erase" on page 362



## hpe5022\_eraseAcFrequency\_Q

- C Syntax** ViStatus hpe5022\_eraseAcFrequency\_Q(ViSession id, ViPReal64 freq);
- Visual Basic Syntax** hpe5022\_eraseAcFrequency\_Q(ByVal id As Long, ByRef freq As Double) As Long
- Description** This function returns the specified frequency of AC erase.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - freq
 

Description	Returns the specified frequency of AC erase.
Direction	OUT
Unit	Flux per second

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_eraseAcFrequency" on page 360

**Erase Function****hpe5022\_erase****C Syntax**

```
ViStatus hpe5022_erase(ViSession id, ViReal64 offset);
```

**Visual Basic Syntax**

```
hpe5022_erase(ByVal id As Long ByVal offset As Double) As Long
```

**Description**

This function executes erase. The sequence is as follows:

1. Set the erase current at a specified value by “hpe5022\_eraseCurrent”.
2. Move the head to the track offset position from the center of the track.
3. Erase with the current polarity specified by “hpe5022\_eraseType”.

As functions which execute measurements such as the “hpe5022\_measureParametric” function performs the erase sequence automatically, you may use this function when you want to execute an erase track only.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- offset

Description Specifies the write track offset position from the center of the track.

If the “hpe5022\_trackOffsetCompValue” function set the head offset value, the range of the offset is changed. For example, the head offset value in “hpe5022\_trackOffsetCompValue” is set at  $1.0 \times 10^{-6}$ , the maximum and the minimum values are  $5.0 \times 10^{-6}$  and  $-7.0 \times 10^{-6}$ , respectively.

Direction IN

Unit Meter

Values

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6 \times 10^{-6}$

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'offset' is out of range. Check if the head offset compensation value by using "hpe5022_trackOffsetCompValue_Q" function.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this this function. See the "hpe5022_driveState" function.

## See Also

"hpe5022\_driveState" on page 209

"hpe5022\_eraseType" on page 355

"hpe5022\_eraseCurrent" on page 358

**Erase Function****hpe5022\_eraseMultiple****C Syntax**

```
ViStatus hpe5022_eraseMultiple(ViSession id, ViReal64 offset, ViInt16 counts);
```

**Visual Basic Syntax**

```
hpe5022_eraseMultiple(ByVal id As Long, ByVal offset As Double, ByVal counts As Integer) As Long
```

**Description**

This function executes multiple erase on a same track. The sequence is as follows:

1. Set the erase current at a specified value by “hpe5022\_eraseCurrent”.
2. Move the head to the track offset position from the center of the track.
3. Set the current polarity specified by “hpe5022\_eraseType”.
4. Erase the whole track.
5. Repeat the step 4 ‘counts’ times if it is more than 1.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- offset

Description Specifies the erase offset position from track center.

If the “hpe5022\_trackOffsetCompValue” function set the head offset value, the range of the offset is changed. For example, the head offset value in “hpe5022\_trackOffsetCompValue” is set at  $1.0 \times 10^{-6}$ , the maximum and the minimum values are  $5.0 \times 10^{-6}$  and  $-7.0 \times 10^{-6}$ , respectively.

Direction IN

Values

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

Unit Meter

- counts

Description Specifies the number of repeat for erase.

Direction IN

Values

Name	Value
hpe5022_WRITE_COUN_MIN	1
hpe5022_WRITE_COUN_MAX	1000000

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'offset', and/or 'counts' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.

**See Also**

"hpe5022\_erase" on page 362

**Erase Function****hpe5022\_setupEraseMultiple****C Syntax**

```
ViStatus hpe5022_setupEraseMultiple(ViSession id, ViReal64 offset, ViInt16
counts, ViPObject testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupEraseMultiple(ByVal id As Long, ByVal offset As Double, ByVal
counts As Integer, ByRef testHndl As Long) As Long
```

**Description**

This function assigns the erase-multiple sequence to the specified test identifier. See the “hpe5022\_eraseMultiple” function about the details of the sequence. This function does not execute the erase-multiple sequence. The erase-multiple is executed by the “hpe5022\_measure” function with its test identifier specified in this function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- offset
 

Description	Specifies the write (erase) offset position from track center. If the “hpe5022_trackOffsetCompValue” function set the head offset value, the range of the offset is changed. For example, the head offset value in “hpe5022_trackOffsetCompValue” is set at $1.0 \times 10^{-6}$ , the maximum and the minimum values are $5.0 \times 10^{-6}$ and $-7.0 \times 10^{-6}$ , respectively.
Direction	IN
Values	Same as ‘offset’ in the “hpe5022_eraseMultiple” function.
Unit	Meter
- counts
 

Description	Specifies the number of repeat for write.
Direction	IN
Values	Same as ‘counts’ in the “hpe5022_eraseMultiple” function.
- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the write-multiple by the “hpe5022_measure” function.
Direction	OUT

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'offset', and/or 'counts' is out of range.

**See Also**

“hpe5022\_eraseMultiple” on page 364

“hpe5022\_measure” on page 387

**hpe5022\_eraseBand**

**C Syntax**

ViStatus hpe5022\_eraseBand(ViSession id, ViReal64 range, ViReal64 pitch);

**Visual Basic Syntax**


hpe5022\_eraseBand(ByVal id As Long, ByVal range As Double, ByVal pitch As Double) As Long

**Description**

This function performs a erase with a specified track pitch and erase range from the current track. The erase range is specified by the parameter “range”. The erase type and erase current is specified by the “hpe5022\_eraseType” and “hpe5022\_eraseCurrent” functions respectively.

**Figure 3-14**

**Band Erase Sequence**

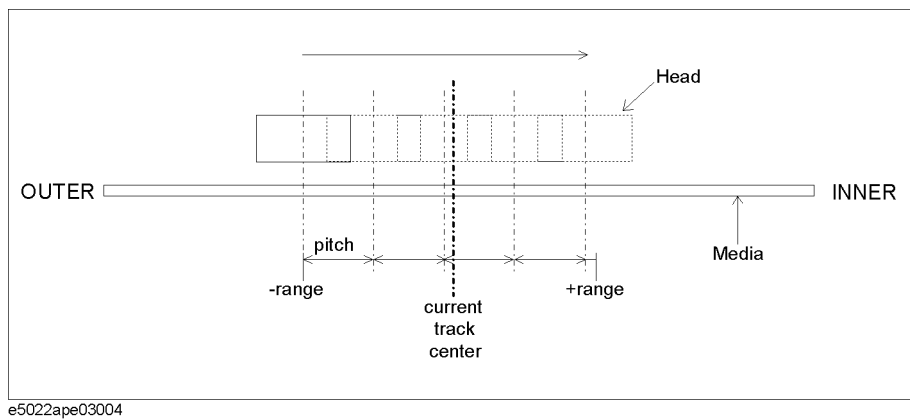

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- range
  - Description Specifies the erase range.
  - Direction IN
  - Unit Meter
  - Values

Name	Value
hpe5022_TRACK_OFFSET_MAX	6×10 <sup>-6</sup>

- pitch
  - Description Specifies the erase pitch.
  - Direction IN



Unit Meter  
 Values

Name	Value
hpe5022_ERASE_BAND_PITCH_MIN	50×10 <sup>-9</sup>
hpe5022_ERASE_BAND_PITCH_MAX	6×10 <sup>-6</sup>

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive is turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_INV_PARAMETER	The parameter 'range' and/or 'pitch' is out of range.

**See Also**

- "hpe5022\_dataArea" on page 180
- "hpe5022\_driveState" on page 209
- "hpe5022\_eraseType" on page 355
- "hpe5022\_eraseCurrent" on page 358

**Erase Function****hpe5022\_setupEraseBand****C Syntax**

```
ViStatus hpe5022_setupEraseBand(ViSession id, ViReal64 range, ViReal64 pitch, ViPObject testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupEraseBand(ByVal id As Long, ByVal range As Double, ByVal pitch As Double, ByVal testHndl As Long) As Long
```

**Description**

This function sets the band erase sequence from a specified range and specified pitch. This function does not execute the band erase operation. Band erase is executed by the “hpe5022\_measure” function with the test identifier given by this function.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- range

**Description** Specifies the erase range.

**Direction** IN

**Unit** Meter

**Value**

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6 \times 10^{-6}$

- pitch

**Description** Specifies the erase pitch.

**Direction** IN

**Unit** Meter

**Values**

Name	Value
hpe5022_ERASE_BAND_PITCH_MIN	$50 \times 10^{-9}$
hpe5022_ERASE_BAND_PITCH_MAX	$6 \times 10^{-6}$

- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the band erase by the “hpe5022_eraseBand” function.
Direction	IN

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'range' and/or 'pitch' is out of range.

**See Also**

- “hpe5022\_eraseType” on page 355
- “hpe5022\_eraseCurrent” on page 358
- “hpe5022\_eraseBand” on page 368
- “hpe5022\_measure” on page 387

**Erase Function****hpe5022\_eraseWideBand****C Syntax**

```
ViStatus hpe5022_eraseWideBand(ViSession id, ViReal64 range, ViReal64 pitch);
```

**Visual Basic Syntax**

```
hpe5022_eraseWideBand(ByVal id As Long, ByVal range As Double, ByVal pitch As Double) As Long
```

**Description**

This function erases a whole specified area. The “hpe5022\_eraseBand” function erases by the piezo movement. That’s why it can erase only the area between  $+6 \times 10^{-6}$  [m] and  $-6 \times 10^{-6}$  [m] from the center of a current track. In other hand, this function erases by the piezo and the X-Y stage movements.

1. Move a track center position at the  $-(\text{range})+4 \times 10^{-6}$  [m] by actuating X-Y stages.
2. Perform a band erase.  
(same as hpe5022\_eraseBand:  
range:  $+6 \times 10^{-6}$   
pitch: same as ‘pitch’ of this function)
3. Move a track center position by  $+8 \times 10^{-6}$  [m] by actuating X-Y stages.
4. Repeat the steps 2 and 3 until the track center position reaches the (+range).

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- range

Description Specifies a range for erase. The values ( $\text{radius} \pm \text{range}$ ) should be between ID and OD.

Direction IN

Values

Name	Value
hpe5022_DISK_RANGE_MAX	$47.5 \times 10^{-3}$

Unit Meter

- Pitch

Description Specifies a pitch for erase within the range.

Direction IN

Values

Name	Value
hpe5022_ERASE_BAND_PITCH_MIN	50×10 <sup>-9</sup>
hpe5022_ERASE_BAND_PITCH_MAX	6×10 <sup>-6</sup>

Unit                      Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'range' or/and 'pitch' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindrive has already been turned on. Turn it off before executing this function. See the "hpe5022_driveState" function.

**See Also**

---

## Precompensation Function

This section describes the functions related with the precompensation. E5022A/B can delay a write timing for the specified patterns. The pattern is defined as three bits previous and behind the target bit. Three kinds of delay time can be specified. In addition, you can select which test data pattern will have a precompensation such as the NLTS 5th pattern.

### hpe5022\_precompDelay

#### C Syntax

```
ViStatus hpe5022_precompDelay(ViSession id, ViInt16 precompNum, ViReal64 delay);
```

#### Visual Basic Syntax

```
hpe5022_precompDelay(ByVal id As Long, ByVal precompNum As Integer, ByVal delay As Double) As Long
```

#### Description

This function specifies the precompensation delay time. Up to three delay's can be set. The pattern which has a delay time (precompensation) is defined by the "hpe5022\_precompPattern" function.

#### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- precompNum

Description Specifies the precompensation number to set the delay time.

Direction IN

Values

Name	Value	Description
hpe5022_PREC_1	1	Precompensation No.1
hpe5022_PREC_2	2	Precompensation No.2
hpe5022_PREC_3	3	Precompensation No.3

- delay

Description Specifies the delay time for the selected precompNum.

Direction IN

Preset value 0

Unit Second

Values

Name	Value
hpe5022_PREC_VAL_MIN	-1900×10 <sup>-12</sup>
hpe5022_PREC_VAL_MAX	1900×10 <sup>-12</sup>

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'precompNum' and/or 'delay' is out of range.

**See Also**

- “hpe5022\_precompDelay\_Q” on page 376
- “hpe5022\_precompPattern” on page 377
- “hpe5022\_precompState” on page 383
- “hpe5022\_clearPrecomp” on page 386

## **hpe5022\_precompDelay\_Q**

### **C Syntax**

ViStatus hpe5022\_precompDelay\_Q(ViSession id, ViInt16 precompNum, ViPReal64 delay);

### **Visual Basic Syntax**

hpe5022\_precompDelay\_Q(ByVal id As Long, ByVal precompNum As Integer, ByRef delay As Double) As Long

### **Description**

This function returns the delay time which is assigned to the precompensation number.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- precompNum
  - Description Specifies the precompensation number to query the delay time.
  - Direction IN
  - Values Same as the 'precompNum' in the "hpe5022\_precompDelay" function.
- delay
  - Description Returns the delay time for the selected precompensation number.
  - Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'precompNum' is out of range.

### **See Also**

"hpe5022\_precompDelay" on page 374



## hpe5022\_precompPattern

**C Syntax** ViStatus hpe5022\_precompPattern(ViSession id, ViInt16 preBit, ViInt16 postBit, ViInt16 precompNum);

**Visual Basic Syntax** hpe5022\_precompPattern(ByVal id As Long, ByVal preBit As Integer, ByVal postBit As Integer, ByVal precompNum As Integer) As Long

**Description** This function specifies the precompensation pattern which has a delay time. E5022A/B allows you to specify three bits before and after the target bit.

1. If the user wants to have a precompensation delay specified by “hpe5022\_PREC\_1” for the pattern “001x000” (x is a target bit), the function should be:

```
hpe5022_precompPattern(hpe5022,
hpe5022_PREC_PAT_001, hpe5022_PREC_PAT_000, hpe5022_PREC_1)
```

The delay time of “hpe5022\_PREC\_1” is specified by the “hpe5022\_precompDelay” function.

The setting of precompensation is hold until the “hpe5022\_clearPrecomp” or “hpe5022\_reset” function is performed.

2. The setting of precompensation pattern is added to the current setting. For example:

If the user wants to have the precompensation delay for patterns “001x000” and “010x000”, the following functions are to be performed.

```
hpe5022_precompPattern(hpe5022,
hpe5022_PREC_PAT_010, hpe5022_PREC_PAT_000, hpe5022_PREC_1)
```

3. When the setting for a pattern overlaps, then the last setting for the pattern becomes valid. For Example: when the following function is performed,

```
hpe5022_precompPattern(hpe5022,
hpe5022_PREC_PAT_0, hpe5022_PREC_PAT_000, hpe5022_PREC_1)
```

The precompensation delay specified by “hpe5022\_PREC\_1” is set for the patterns of “000x000”, “010x000”, “100x000” and “110x000”.

Then the following function is performed,

```
hpe5022_precompPattern(hpe5022,
hpe5022_PREC_PAT_110, hpe5022_PREC_PAT_000, hpe5022_PREC_2)
```

The precompensation delay specified by “hpe5022\_PREC\_2” is set for the pattern “110x000”, and the precompensation delay specified by “hpe5022\_PREC\_1” is set for the patterns of “000x000”, “010x000” and “100x000”. (The pattern of “110x000” is removed).

### Parameters

- id  
Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Function Reference  
**Precompensation Function**

Direction IN

- preBit

Description Specifies the precompensation of pre-bit pattern.

Direction IN

Values

Name	Value	Description
hpe5022_PREC_PAT_X	0	Any
hpe5022_PREC_PAT_0	1	000, 010, 100, or 110 (**0) <sup>a</sup>
hpe5022_PREC_PAT_1	2	001, 011, 101, or 111 (**1) <sup>a</sup>
hpe5022_PREC_PAT_00	3	000 or 100 (*00) <sup>a</sup>
hpe5022_PREC_PAT_01	4	001 or 101 (*01) <sup>a</sup>
hpe5022_PREC_PAT_10	5	010 or 110 (*10) <sup>a</sup>
hpe5022_PREC_PAT_11	6	011 or 111 (*11) <sup>a</sup>
hpe5022_PREC_PAT_000	7	000
hpe5022_PREC_PAT_001	8	001
hpe5022_PREC_PAT_010	9	010
hpe5022_PREC_PAT_011	10	011
hpe5022_PREC_PAT_100	11	100
hpe5022_PREC_PAT_101	12	101
hpe5022_PREC_PAT_110	13	110
hpe5022_PREC_PAT_111	14	111

a. \* means 0 or 1

- postBit

Description Specifies the precompensation of post-bit pattern.

Direction IN

Values

Name	Value	Description
hpe5022_PREC_PAT_X	0	Any
hpe5022_PREC_PAT_0	1	000, 001, 010, or 011 (0**) <sup>a</sup>

Name	Value	Description
hpe5022_PREC_PAT_1	2	100, 101, 110, or 111 (1**) *a
hpe5022_PREC_PAT_00	3	001 or 000 (00*) *a
hpe5022_PREC_PAT_01	4	010 or 011 (01*) *a
hpe5022_PREC_PAT_10	5	100 or 101 (10*) *a
hpe5022_PREC_PAT_11	6	110 or 111 (11*) *a
hpe5022_PREC_PAT_000	7	000
hpe5022_PREC_PAT_001	8	001
hpe5022_PREC_PAT_010	9	010
hpe5022_PREC_PAT_011	10	011
hpe5022_PREC_PAT_100	11	100
hpe5022_PREC_PAT_101	12	101
hpe5022_PREC_PAT_110	13	110
hpe5022_PREC_PAT_111	14	111

a. \* means 0 or 1

- precompNum

**Description** Specifies the precompensation delay number. The delay time is set by the “hpe5022\_precompDelay” function.

**Direction** IN

**Preset value** 0 (hpe5022\_PREC\_OFF)

**Value**

Name	Value	Description
hpe5022_PREC_OFF	0	Set delay time at 0.
hpe5022_PREC_1	1	Set precompensation No.1
hpe5022_PREC_2	2	Set precompensation No.2
hpe5022_PREC_3	3	Set precompensation No.3

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Precompensation Function**

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'prebit', 'postbit' and/or 'precompNum' is out of range.

**See Also**

“hpe5022\_reset” on page 96

“hpe5022\_precompDelay” on page 374

“hpe5022\_precompPattern\_Q” on page 381

“hpe5022\_precompState” on page 383

“hpe5022\_clearPrecomp” on page 386

## hpe5022\_precompPattern\_Q

**C Syntax** ViStatus hpe5022\_precompPattern\_Q(ViSession id, ViInt16 preBit, ViInt16 postBit, ViPInt16 precompNum);

**Visual Basic Syntax** hpe5022\_precompPattern\_Q(ByVal id As Long, ByVal preBit As Integer, ByVal postBit As Integer, ByRef precompNum As Integer) As Long

**Description** This function returns the precompensation delay number for the specified pattern. A sample program which shows the current setting of precompensation is shown in chapter 2.

When the user selects a pattern that includes a wildcard (\*) in the pre-bit or post-bit patterns, such as “hpe5022\_PREC\_PAT\_0”, an error may occur if the precompensation number is duplicated. For example:

When the following functions are performed,

```
hpe5022_precompPattern(hpe5022,
hpe5022_PREC_PAT_01,hpe5022_PREC_PAT_000, hpe5022_PREC_1)

hpe5022_precompPattern(hpe5022,
hpe5022_PREC_PAT_11,hpe5022_PREC_PAT_000, hpe5022_PREC_2)
```

The patterns of “001x000” and “101x000” (x is a target bit) has a precompensation delay specified by the “hpe5022\_PREC\_1” and the pattern of “011x000” and “111x000” has one specified by the “hpe5022\_PREC\_2”.

If the following functions are performed. You will have an error.

```
hpe5022_precompPattern_Q(hpe5022,
hpe5022_PREC_PAT_1,hpe5022_PREC_PAT_000, hpe5022_PREC_1)
```

Because, the “\*1x000” is true for both “hpe5022\_PREC\_1” and “hpe5022\_PREC\_2”.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- preBit
 

Description	Specifies the precompensation of pre-bit pattern.
Direction	IN
Values	Same as ‘preBit’ in the “hpe5022_precompPattern” function.
- postBit
 

Description	Specifies the precompensation of post-bit pattern.
Direction	IN

**Precompensation Function**

Values	Same as 'postBit' in the "hpe5022_precompPattern" function.
• precompNum	
Description	Returns the precompensation of the delay number.
Direction	OUT
Value	Same as 'precompNum' in the "hpe5022_precompPattern" function.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'preBit' and/or 'postBit' is out of range.
hpe5022_ERROR_CONFLICT_PREC_PATTERN	The precompensation pattern is conflict.

**See Also**

"hpe5022\_precompPattern" on page 377

"hpe5022\_precompDelay" on page 374

## hpe5022\_precompState

**C Syntax** ViStatus hpe5022\_precompState(ViSession id, ViInt16 dataPat, ViBoolean state);

**Visual Basic Syntax** hpe5022\_precompState(ByVal id As Long, ByVal dataPat As Integer, ByVal state As Integer) As Long

**Description** This function controls the precompensation state of the specified data pattern. When pattern is set to ON in the parameter “state”, then the selected data pattern will have a precompensation. Delay time and pattern for precompensation is defined by the “hpe5022\_precompDelay” and “hpe5022\_precompPattern” functions.

**Parameters**

- id**  
 Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataPat**  
 Description Specifies the data pattern to be selected for precompensation.

Direction IN

Values

Name	Value	Description
hpe5022_PAT_HF	0	HF Pattern
hpe5022_PAT_LF	1	LF Pattern
hpe5022_PAT_ISO	2	Isolated Pulse Pattern
hpe5022_PAT_PRBS	3	PRBS Pattern
hpe5022_PAT_REP	4	Repetition Pattern
hpe5022_PAT_NLTS_5TH	5	NLTS 5th Pattern
hpe5022_PAT_OWHF	6	Overwrite HF Pattern
hpe5022_PAT_OWLF	7	Overwrite LF Pattern
hpe5022_PAT_USER	20	User-defined Pattern

- state**  
 Description Sets the precompensation state.

Direction IN

Preset value OFF (VI\_FALSE)

Function Reference  
**Precompensation Function**

Values

Name	Value	Description
VI_TRUE	1	Precompensation ON
VI_FALSE	0	Precompensation OFF

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_NSUP_PREC	The installed Data Generator Module does not support procompensation function.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataPat' is out of range.

**See Also**

- “hpe5022\_precompDelay” on page 374
- “hpe5022\_precompPattern” on page 377
- “hpe5022\_precompState\_Q” on page 385
- “hpe5022\_clearPrecomp” on page 386



## hpe5022\_precompState\_Q

**C Syntax** ViStatus hpe5022\_precompState\_Q(ViSession id, ViInt16 dataPat, ViPBoolean state);

**Visual Basic Syntax** hpe5022\_precompState\_Q(ByVal id As Long, ByVal dataPat As Integer, ByRef state As Integer) As Long

**Description** This function returns the precompensation state of the specified data pattern.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- dataPat
 

Description	Specifies the data pattern for precompensation.
Direction	IN
Values	Same as 'dataPat' in the "hpe5022_precompState" function.
- state
 

Description	Returns the precompensation state.
Direction	OUT
Values	Same as the 'state' in the "hpe5022_precompState" function.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataPat' is out of range.

**See Also** "hpe5022\_precompState" on page 383

## **hpe5022\_clearPrecomp**

**C Syntax** ViStatus hpe5022\_clearPrecomp(ViSession id);

**Visual Basic Syntax** hpe5022\_clearPrecomp(ByVal id As Long) As Long

**Description** This function clears all precompensation configurations; all precompensation pre/post-bit patterns are set to “hpe5022\_PREC\_OFF”, the precompensation delay is set to zero for all precompensation delay number, and precompensation state is set to OFF for all data patterns.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_precompDelay” on page 374  
“hpe5022\_precompPattern” on page 377  
“hpe5022\_precompState” on page 383

## Test Execution Function

This function executes the test sequence of the setup-then-measure measurement. The test sequence is defined by the “hpe5022\_setupxxxxx” function. See “Setup-then-measure Measurement” on page 17.

### hpe5022\_measure

#### C Syntax

```
ViStatus hpe5022_measure(ViSession id, ViObject testHndl);
```

#### Visual Basic Syntax

```
hpe5022_measure(ByVal id As Long, ByVal testHndl As Long) As Long
```

#### Description

This function executes the test sequence of the specified test identifier. Before this function is executed, the measurement setup must be performed. For example:

```
hpe5022_setupTaa(id, hpe5022_SEQ_ER_WR_M, 5, IdTaa)
hpe5022_measure(id, IdTaa)
```

The measurement setup function is shown in the “See Also”. In case of lack of PC resources, the “hpe5022\_releaseSetup” function can be used to release the setup from the PC resource. There are two ways of executing the test sequence as defined by “hpe5022\_executionMode” function before measurement. One is by “hpe5022\_EXEC\_WAIT\_COMPLETE” and the other is by “hpe5022\_EXEC\_WAIT\_START” function.

#### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- testHndl
 

Description	Specifies the test identifier to execute. This test identifier defined by the hpe5022_setupxxxxx function is used for this function.
Direction	IN

#### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Test Execution Function**

Error Code	Description
hpe5022_ERROR_AUTO_RANGE_FAIL	The autoranging in the track profile measurement is failed. Check if the parameter setting and head is correct.
hpe5022_ERROR_CAL_DATA_CORRUPT	Amplitude calibration for 3GHz Spectrum Analyzer has not been done.
hpe5022_ERROR_EXCESS_TRACK_DATA	The data overflow a track at one revolution at the bit error measurement. Change the setting of the user data rate, rpm, track number, track format or sector format.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'testHndl' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindrive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_NO_OPTION	An option is not installed. This function can only be used if the system has option.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_PARAMETER_SET_FAILED	The measurement data bytes exceeds the limit. See "hpe5022_BER_berMeasByte Count" function.
hpe5022_ERROR_PLL_UNLOCK	The PLL is unlocked. Check if parameter setting is correct.
hpe5022_ERROR_RESAMP_FAILED	The waveform re-sampling has failed.

Error Code	Description
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

- “hpe5022\_releaseSetup” on page 390
- “hpe5022\_setupBaseline” on page 450
- “hpe5022\_setupBaselinePopping” on page 806
- “hpe5022\_setupChannelBitRateSweep” on page 682
- “hpe5022\_setupNarrowBandTaa” on page 574
- “hpe5022\_setupNlts5th” on page 813
- “hpe5022\_setupOverwrite” on page 913
- “hpe5022\_setupParametric” on page 469
- “hpe5022\_setupPartialErasure” on page 937
- “hpe5022\_setupPw” on page 433
- “hpe5022\_setupResolution” on page 504
- “hpe5022\_setupRollOff” on page 689
- “hpe5022\_setupSenseCurrentSweep” on page 668
- “hpe5022\_setupSnr” on page 825
- “hpe5022\_setupStability” on page 529
- “hpe5022\_setupTaa” on page 412
- “hpe5022\_setupTrackProfile” on page 620
- “hpe5022\_setupTripleTrack” on page 719
- “hpe5022\_setupPrecompSweep” on page 699
- “hpe5022\_setupWave” on page 1031
- “hpe5022\_setupWriteCurrentSweep” on page 661

## Release setup test function

This function releases the test sequence from the PC resource.

### hpe5022\_releaseSetup

#### C Syntax

```
ViStatus hpe5022_releaseSetup(ViSession id, ViObject testHndl);
```

#### Visual Basic Syntax

```
hpe5022_releaseSetup(ByVal id As Long, ByVal testHndl As Long) As Long
```

#### Description

This function releases the test sequence from the memory of the PC and modules. The setup function shown in “See Also” uses some portion of the PC/Modules resource. When many setup function is to be performed once, an error might occur “hpe5022\_ERROR\_MEM\_ALLOC”. In that case, you can keep PC/Modules memory by using this function for the finished setup function. For example:

```
hpe5022_setupTaa(id, hpe5022_SEQ_ER_WR_M, 5, IdTaa)
```

```
hpe5022_setupPw(id, hpe5022_SEQ_ER_WR_M, 5, IdPw)
```

```
hpe5022_measure(id, IdTaa)
```

```
hpe5022_taa_Q(id, taa, TAAPos, TAANeg, TAAAsym)
```

```
hpe5022_measure(id, IdPw)
```

```
hpe5022_pw_Q(id, pw, PWPos, PWNeg, PWAsym)
```

```
hpe5022_releaseSetup(id, IdTaa)
```

```
hpe5022_releaseSetup(id, IdPw)
```

```
hpe5022_setupBaseline(id, hpe5022_SEQ_ER_WR_M, 5, IdBaseline)
```

```
hpe5022_measure(id, IdBaseline)
```

```
hpe5022_baseline_Q(id, Bl, BlPos, BlNeg, Separation)
```

When you have enough the resource, you do not need to use this function. The “hpe5022\_releaseSetupAll” releases all of the test sequences.

#### Parameters

- id

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
-------------	--------------------------------------------------------------------------------

Direction	IN
-----------	----

- testHndl

Description	Specifies test identifier to release. This test identifier defined by the hpe5022_setupxxxxx function is used for this.
-------------	-------------------------------------------------------------------------------------------------------------------------

Direction IN

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'testHndl' is out of range.

**See Also**

- “hpe5022\_releaseSetupAll” on page 392
- “hpe5022\_setupTaa” on page 412
- “hpe5022\_setupNarrowBandTaa” on page 574
- “hpe5022\_setupPw” on page 433
- “hpe5022\_setupBaseline” on page 450
- “hpe5022\_setupResolution” on page 504
- “hpe5022\_setupParametric” on page 469
- “hpe5022\_setupNlts5th” on page 813
- “hpe5022\_setupSnr” on page 825
- “hpe5022\_setupOverwrite” on page 913
- “hpe5022\_setupPartialErasure” on page 937
- “hpe5022\_setupTrackProfile” on page 620
- “hpe5022\_setupWriteCurrentSweep” on page 661
- “hpe5022\_setupSenseCurrentSweep” on page 668
- “hpe5022\_setupChannelBitRateSweep” on page 682
- “hpe5022\_setupRollOff” on page 689
- “hpe5022\_setupPrecompSweep” on page 699
- “hpe5022\_setupBaselinePopping” on page 806
- “hpe5022\_setupTripleTrack” on page 719
- “hpe5022\_setupStability” on page 529
- “hpe5022\_setupWave” on page 1031

## **hpe5022\_releaseSetupAll**

### **C Syntax**

ViStatus hpe5022\_releaseSetup(ViSession id);

### **Visual Basic Syntax**

hpe5022\_releaseSetup(ByVal id As Long) As Long

### **Description**

This function releases all of the test sequences from the memory of the PC and modules.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### **See Also**

"hpe5022\_releaseSetup" on page 390



## DC Resistance Measurement Function

This section describes the functions related with DC resistance measurement. DC is measured by the spinstand interface module.

### hpe5022\_measureReadHeadDcr

#### C Syntax

```
ViStatus hpe5022_measureReadHeadDcr(ViSession id, ViReal64 current);
```

#### Visual Basic Syntax

```
hpe5022_measureReadHeadDcr(ByVal id As Long, ByVal current As Double) As Long
```

#### Description

This function measures the read head's DC resistance. DC resistance measurement should be made under the condition that the drive is off. When you measure the read head DC resistance only, the only required function before this function is executed is the "hpe5022\_init" function. The "hpe5022\_readHeadDcr\_Q" function returns the result.

#### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- current
 

Description	Specifies the measurement current to measure a DC resistance. The range of current value is returned by the "hpe5022_senseCurrentRange_Q" function.
Direction	IN
Unit	Ampere

#### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**DC Resistance Measurement Function**

**See Also**

“hpe5022\_init” on page 91

“hpe5022\_readHeadDcr\_Q” on page 397

“hpe5022\_senseCurrentRange\_Q” on page 339

## hpe5022\_measureReadHeadDcrEx

### C Syntax

ViStatus hpe5022\_measureReadHeadDcrEx(ViSession id, ViInt16 senseStimulusMode, ViReal64 stimulus);

### Visual Basic Syntax

hpe5022\_measureReadHeadDcrEx(ByVal id As Long, ByVal senseStimulusMode As Integer, ByVal stimulus As Double) As Long

### Description

This function measures the DC resistance of the read head. Measurement of DC resistance should be made in condition that the drive is off. When you measure read head DC resistance only, the only required function before this function is executed is the “hpe5022\_init” function. The “hpe5022\_readHeadDcr\_Q” function returns the result.

### Parameters

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- mode

**Description** Selects the sense stimulus mode to measure a read head DCR.

**Direction** IN

**Preset value** When the installed head amplifier has the current mode, hpe5022\_SENSE\_STIMULUS\_CURRENT is set as default.  
 When it does not have the current mode, hpe5022\_SENSE\_STIMULUS\_VOLTAGE is set as default.

#### Values

Name	Value	Description
hpe5022_SENSE_STIMULUS_CURRENT	0	Current
hpe5022_SENSE_STIMULUS_VOLTAGE	1	Voltage
hpe5022_SENSE_STIMULUS_POWER	2	Power

- stimulus

**Description** Specifies the sense stimulus value.

**Direction** IN

**Preset value** ‘stimulusMin’ returned by the “hpe5022\_senseStimulusRange\_Q” function.

**Unit** Depends on the type of “hpe5022\_senseStimulusMode”.  
 hpe5022\_SENSE\_STIMULUS\_CURRENT : Ampere

**DC Resistance Measurement Function**

hpe5022\_SENSE\_STIMULUS\_VOLTAGE : Volt

pe5022\_SENSE\_STIMULUS\_POWER : Watt

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'stimulus' is out of range.
hpe5022_ERROR_NSUP_CONF	The installed head amplifier does not support this function.

**See Also**

“hpe5022\_init” on page 91

“hpe5022\_readHeadDcr\_Q” on page 397

“hpe5022\_senseStimulusRange\_Q” on page 348

## **hpe5022\_readHeadDcr\_Q**

### **C Syntax**

ViStatus hpe5022\_readHeadDcr\_Q(ViSession id, ViPReal64 dcr);

### **Visual Basic Syntax**

hpe5022\_readHeadDcr\_Q(ByVal id As Long, ByRef dcr As Double) As Long

### **Description**

This function returns the read head DC resistance.

### **Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- dcr
 

Description	Returns the DC resistance of the read head.
Direction	OUT
Unit	ohm

### **Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The DC resistance data is corrupt. Check if your measurement sequence is correct.

### **See Also**

“hpe5022\_measureReadHeadDcr” on page 393

“hpe5022\_measureReadHeadDcrEx” on page 395

**DC Resistance Measurement Function****hpe5022\_measureWriteHeadDcr****C Syntax**

```
ViStatus hpe5022_measureWriteHeadDcr(ViSession id, ViReal64 current);
```

**Visual Basic Syntax**

```
hpe5022_measureWriteHeadDcr(ByVal id As Long, ByVal current As Double) As Long
```

**Description**

This function measures the DC resistance of the write head. Measurement of DC resistance should be made in condition that the drive is off. When you measure write head DC resistance only, the only required function before this function is executed is the “hpe5022\_init” function. The “hpe5022\_writeHeadDcr\_Q” function returns the result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- current
 

Description	Specifies the measurement current. The limit value of the write current is dependent on the installed head amplifier. The limit value of the current can be queried using “hpe5022_writeCurrentRange_Q” function.
Direction	IN
Unit	Ampere

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_init” on page 91

“hpe5022\_writeHeadDcr\_Q” on page 399

“hpe5022\_writeCurrentRange\_Q” on page 325

## hpe5022\_writeHeadDcr\_Q

- C Syntax** ViStatus hpe5022\_writeHeadDcr\_Q(ViSession id, ViPReal64 dcr);
- Visual Basic Syntax** hpe5022\_writeHeadDcr\_Q(ByVal id As Long, ByRef dcr As Double) As Long
- Description** This function returns the DC resistance of the write head.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - dcr
 

Description	Returns the DC resistance of the write head.
Direction	OUT
Unit	ohm

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The DC resistance data is corrupt. Check if your measurement sequence is correct.

**See Also** "hpe5022\_measureWriteHeadDcr" on page 398

---

## Reference value for Parametric Test Function

This section describes the functions that define the reference values for the parametric test by a parametric module.

### hpe5022\_taaReference

#### C Syntax

```
ViStatus hpe5022_taaReference(ViSession id, ViReal64 taaRef);
```

#### Visual basic Syntax

```
hpe5022_taaReference(ByVal id As Long, ByVal taaRef As Double) As Long
```

#### Description

This function specifies the reference value of the TAA to be used for measurements executed by the parametric module. E5022A/B allows you to define the TAA value to calculate PW and baseline parameters. In general, when “hpe5022\_PW\_TAA\_TRACKED” is selected in the hpe5022\_pwThreshold function, there is no need to specify this function.

When “hpe5022\_PW\_TAA\_FIXED” is selected in the “hpe5022\_pwThreshold” function, the “taaRef” value of this function will be used to calculate PW. When track mode is selected, the real-time-measured TAA value is used as the reference.

In addition, when fixed mode is selected in the “hpe5022\_baselinePIIThreshold” function, this value will be used for baseline measurement. When track mode is selected, the real-time-measured TAA value will be used.

See chapter 5 in the Operation Manual for details.

This value is not used for baseline and PW measurements using an oscilloscope. (“hpe5022\_waveBaseline\_Q”, “hpe5022\_wavePw\_Q”)

#### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- taaRef
 

Description	Specifies the reference value of TAA.
Direction	IN
Preset Value	$2.33 \times 10^{-3}$ ( $350 \times 10^{-3} / 150$ )
Unit	Volt



## Return Values

Completion Code	Description
VL_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

## See Also

“hpe5022\_baselinePIIThreshold” on page 463

“hpe5022\_pwThreshold” on page 428

Function Reference  
**Reference value for Parametric Test Function**

### **hpe5022\_taaReference\_Q**

**C Syntax**

ViStatus hpe5022\_taaReference\_Q(ViSession id, ViPReal64 taaRef);

**Visual Basic Syntax**

hpe5022\_taaReference\_Q(ByVal id As Long, ByRef taaRef As Double) As Long

**Description**

This function returns the reference value of TAA.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- taaRef
  - Description Returns the reference value of TAA.
  - Direction OUT
  - Unit Volt

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_taaReference” on page 400

## hpe5022\_pwReference

### C Syntax

ViStatus hpe5022\_pwReference(ViSession id, ViReal64 pwRef);

### Visual basic Syntax

hpe5022\_pwReference(ByVal id As Long, ByVal pwRef As Double) As Long

### Description

This function specifies the reference value of PW. Pulse Width reference value is used for TAA measurement because the parametric module requires rough value of PW to measure TAA.

The “hpe5022\_pwReferenceRange\_Q” function returns the range of PW reference.

Since this value is affected by parameters, spindle speed and the head position radius when you measure the same head, E5022A/B provides a function which allows you to calculate this reference PW automatically. See the “hpe5022\_isolatedPulseReference” or “hpe5022\_autoConfig” functions.

The measurement mode defines which data is to be used. When this mode is set to auto, the values specified by the “hpe5022\_isolatedPulseReference” function will be used to set the PW reference value. When set to manual, the values specified by this function will be used to set the PW reference value.

See chapter 5 in the Operation Manual for details.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- pwRef
 

Description	Specifies the reference value of PW.
Direction	IN
Unit	Second
Preset Values	

Disk size	Preset Value
48mm (1.8")	35.0×10 <sup>-9</sup>
65mm (2.5")	29.0×10 <sup>-9</sup>
95mm (3.5")	19.4×10 <sup>-9</sup>
130mm (5.25")	14.2×10 <sup>-9</sup>

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'pwRef' is out of range.

**See Also**

“hpe5022\_pwReferenceRange\_Q” on page 406

“hpe5022\_pwReference\_Q” on page 405

“hpe5022\_isolatedPulseReference” on page 265

“hpe5022\_autoConfig” on page 257

“hpe5022\_measurementMode” on page 254

## hpe5022\_pwReference\_Q

- C Syntax** ViStatus hpe5022\_pwReference\_Q(ViSession id, ViPReal64 pwRef);
- Visual Basic Syntax** hpe5022\_pwReference\_Q(ByVal id As Long, ByRef pwRef As Double) As Long
- Description** This function returns the current setting value of PW reference.
- This value is determined depending on the measurement mode. When it is set to auto, the values specified by the “hpe5022\_isolatedPulseReference” function is used to set the PW reference. When it is set to manual, the values specified by this “hpe5022\_pwReference” function is used to set the PW reference.
- See chapter 5 in the Operaion Manual for details.

- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - pwRef
 

Description	Returns the current setting value of PW reference.
Direction	OUT
Unit	Second

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

- See Also**
- “hpe5022\_pwReference” on page 403
  - “hpe5022\_measurementMode” on page 254
  - “hpe5022\_isolatedPulseReference” on page 265

**Reference value for Parametric Test Function****hpe5022\_pwReferenceRange\_Q****C Syntax**

```
ViStatus hpe5022_pwReferenceRange_Q(ViSession id, ViPReal64 pwRefMin,
ViPReal64 pwRefMax);
```

**Visual Basic Syntax**

```
hpe5022_pwReferenceRange_Q(ByVal id As Long, ByRef pwRefMin As Double,
ByRef pwRefMax As Double) As Long
```

**Description**

This function returns the PW reference range. The PW reference range depends on the installed parametric module (E5038A or E5038B).

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- pwRefMin
 

Description	Returns the minimum value that the PW reference can be set.
Direction	OUT
Unit	Second
- pwRefMax
 

Description	Returns the maximum value that the PW reference can be set.
Direction	OUT
Unit	Second

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

"hpe5022\_pwReference" on page 403

## hpe5022\_baselineReference

**C Syntax** ViStatus hpe5022\_baselineReference(ViSession id, ViReal64 baseRef);

**Visual Basic Syntax** hpe5022\_baselineReference(ByVal id As Long, ByVal baseRef As Double) As Long

**Description** This function specifies the baseline reference value. The baseline reference is a reference amplitude level for the TAA and the PW measurement. See chapter 5 in the Operation Manual for details.

This value is not used in PW measurement using an oscilloscope. (“hpe5022\_wavePw\_Q”)

- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - baseRef
 

Description	Specifies the Baseline reference value.
Direction	IN
Preset Value	0
Unit	Volt

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_baselineReference\_Q” on page 408

## hpe5022\_baselineReference\_Q

- C Syntax** ViStatus hpe5022\_baselineReference\_Q(ViSession id, ViPReal64 baseRef);
- Visual Basic Syntax** hpe5022\_baselineReference\_Q(ByVal id As Long, ByRef baseRef As Double) As Long
- Description** This function returns the baseline reference value.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - baseRef
    - Description Returns the Baseline reference value.
    - Direction OUT
    - Unit Volt

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also



## Track Average Amplitude (TAA) Measurement Function

This section describes the functions related with track average amplitude (TAA) measurement. This is measured by the parametric module.

### hpe5022\_measureTaa

#### C Syntax

```
ViStatus hpe5022_measureTaa(ViSession id, ViInt16 seqType, ViInt16 ave);
```

#### Visual Basic Syntax

```
hpe5022_measureTaa(ByVal id As Long, ByVal seqType As Integer, ByVal ave As Integer) As Long
```

#### Description

This function measures the TAA parameters according to the specified measurement sequence. There are three types of sequence : 1) erase, write data, then measure 2) no erase, write data, then measure 3) measure only. The detailed sequences are as follows:

1. Move the head to the write track offset position specified by the “hpe5022\_writeTrackOffset” function.
2. If ‘seqType’ (see parameters) is set to “hpe5022\_SEQ\_ER\_WR\_M”, perform erase (same as the “hpe5022\_erase” function) of an entire track.
3. If ‘seqType’ is set to “hpe5022\_SEQ\_ER\_WR\_M” or “hpe5022\_SEQ\_WR\_M”, write the data pattern specified by the “hpe5022\_selectPattern” function for an entire track at the write track offset position.
4. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset” function.
5. Measure the TAA.
6. Repeat the procedure steps 3 to 5 ‘ave’ (see parameters) times if it is more than 1.

The “hpe5022\_taa\_Q” function returns the measurement result.

#### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Specifies the type of measurement sequence.
Direction	IN

**Track Average Amplitude (TAA) Measurement Function**

## Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Erase->Write->Measure
hpe5022_SEQ_WR_M	1	Write->Measure
hpe5022_SEQ_M	2	Measure

- ave

Description Specifies the number of measurements for averaging.

Direction IN

## Values

Name	Value
hpe5022_TAA_COUN_MIN	1
hpe5022_TAA_COUN_MAX	100

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameters 'seqType' and/or 'ave' are out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindrive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit

**Track Average Amplitude (TAA) Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

“hpe5022\_taa\_Q” on page 414

“hpe5022\_writeTrackOffset” on page 222

“hpe5022\_readTrackOffset” on page 219

**Track Average Amplitude (TAA) Measurement Function****hpe5022\_setupTaa****C Syntax**

```
ViStatus hpe5022_setupTaa(ViSession id, ViInt16 seqType, ViInt16 ave,
ViPObject testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupTaa(ByVal id As Long, ByVal seqType As Integer, ByVal ave As Integer, ByRef testHndl As Long) As Long
```

**Description**

This function assigns the TAA measurement sequence to the specified test identifier. See the “hpe5022\_measureTaa” function about the details of the sequence. This function does not execute measurement. Measurement is executed by the “hpe5022\_measure” function with its test identifier specified in this function.

The “hpe5022\_taa\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Specifies the type of measurement sequence.
Direction	IN
Values	Same as ‘seqType’ in the “hpe5022_measureTaa” function.
- ave
 

Description	Specifies the number of measurements for averaging.
Direction	IN
Values	Same as ‘ave’ in the “hpe5022_measureTaa” function.
- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the TAA measurement by the “hpe5022_measure” function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

## Track Average Amplitude (TAA) Measurement Function

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' and/or 'ave' is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

**See Also**

"hpe5022\_measureTaa" on page 409

"hpe5022\_taa\_Q" on page 414

"hpe5022\_measure" on page 387

"hpe5022\_releaseSetup" on page 390

**Track Average Amplitude (TAA) Measurement Function****hpe5022\_taa\_Q****C Syntax**

```
ViStatus hpe5022_taa_Q(ViSession id, ViPReal64 taa, ViPReal64 taaPos,
ViPReal64 taaNeg, ViPReal64 taaAsym);
```

**Visual Basic Syntax**

```
hpe5022_taa_Q(ByVal id As Long, ByRef taa As Double, ByRef taaPos As
Double, ByRef taaNeg As Double, ByRef taaAsym As Double) As Long
```

**Description**

This function returns the results of the execution through TAA measurement sequence. The returned parameters are TAA, TAA positive (TAA+), TAA negative (TAA-) and TAA asymmetry.

See chapter 5 in the Operation Manual for the definition of these parameters.

Each result is the mean of the corresponding parameter of the “hpe5022\_taaData\_Q” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- taa
 

Description	Returns the value of TAA.
Direction	OUT
Unit	Volt
- taaPos
 

Description	Returns the value of TAA positive.
Direction	OUT
Unit	Volt
- taaNeg
 

Description	Returns the value of TAA negative.
Direction	OUT
Unit	Volt
- taaAsym
 

Description	Returns the value of TAA asymmetry.
Direction	OUT

## Track Average Amplitude (TAA) Measurement Function

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The TAA data is corrupt. Check if your measurement sequence is correct.

## See Also

“hpe5022\_measureTaa” on page 409

“hpe5022\_setupTaa” on page 412

“hpe5022\_taaData\_Q” on page 419

**Track Average Amplitude (TAA) Measurement Function****hpe5022\_taaStatistic\_Q****C Syntax**

ViStatus hpe5022\_taaStatistic\_Q(ViSession id, ViInt16 dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax**

hpe5022\_taaStatistic\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description**

This function reports the statistics (mean, minimum, maximum and standard deviation) of the specified TAA parameter. The data returned by the “hpe5022\_taaData\_Q” function are used for this statistic analysis.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry

- mean

Description Returns the mean value of measurement from the specified data type. The returned value is the same as the corresponding values returned by the “hpe5022\_taa\_Q” function.

Direction OUT

Unit Volt (except for TAA asymmetry)

- min

Description Returns the minimum value of measurement.

Direction OUT



**Track Average Amplitude (TAA) Measurement Function**

- Unit Volt (except for TAA asymmetry)
- max
  - Description Returns the maximum value of measurement.
  - Direction OUT
  - Unit Volt (except for TAA asymmetry)
- stdDev
  - Description Returns the standard deviation value which is calculated using the measurement result of the specified data type.
  - Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The TAA data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_taaData\_Q” on page 419

“hpe5022\_measureTaa” on page 409

“hpe5022\_setupTaa” on page 412

**Track Average Amplitude (TAA) Measurement Function****hpe5022\_taaDataSize\_Q****C Syntax**

```
ViStatus hpe5022_taaDataSize_Q(ViSession id, ViPInt32 size);
```

**Visual Basic Syntax**

```
hpe5022_taaDataSize_Q(ByVal id As Long, ByRef size As Long) As Long
```

**Description**

This function returns the array size of the TAA data as returned by the “hpe5022\_taaData\_Q” function.

**Parameters**

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **size**

Description	Returns the array size of TAA data.  The size will be the same as the value of ‘ave’ specified by the “hpe5022_measureTaa” or “hpe5022_setupTaa” function if the measurement is done properly.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The TAA data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_taaData\_Q” on page 419

“hpe5022\_measureTaa” on page 409

“hpe5022\_setupTaa” on page 412

## Track Average Amplitude (TAA) Measurement Function

**hpe5022\_taaData\_Q**

**C Syntax** ViStatus hpe5022\_taaData\_Q(ViSession id, ViInt16 dataType, ViReal64 data[]);

**Visual Basic Syntax** hpe5022\_taaData\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long

**Description** This function returns the TAA data for each revolution. When the ‘ave’ parameter in the “hpe5022\_measureTaa” or the “hpe5022\_setupTaa” function is set to more than one, this function allows you to get the TAA data for each revolution. If ‘ave’ is set to 1, then the output of this function will be the same as the “hpe5022\_taa\_Q” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

- dataType
 

Description	Specifies the type of data to be reported.
Direction	IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA Positive
hpe5022_DATA_TAA_NEG	3	TAA Negative
hpe5022_DATA_TAA_ASYM	4	TAA Asymmetry

- data
 

Description	Returns the data array of the parameter specified by the ‘dataType’. The array size is returned by the “hpe5022_taaDataSize_Q” function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

**Track Average Amplitude (TAA) Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The TAA data is corrupt. Check if your measurement sequence is correct.

**See Also**

"hpe5022\_taaDataSize\_Q" on page 418

"hpe5022\_measureTaa" on page 409

"hpe5022\_setupTaa" on page 412

## Track Average Amplitude (TAA) Measurement Function

**hpe5022\_taaRawDataSize\_Q****C Syntax**

```
ViStatus hpe5022_taaRawDataSize_Q(ViSession id, ViInt32 size);
```

**Visual Basic Syntax**

```
hpe5022_taaRawDataSize_Q(ByVal id As Long, ByRef size As Long) As Long
```

**Description**

This function returns the array size of the data returned by “hpe5022\_taaRawData\_Q” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- size
 

Description	Returns the array size of TAA raw data.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The TAA raw data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_taaRawData\_Q” on page 422

“hpe5022\_measureTaa” on page 409

“hpe5022\_setupTaa” on page 412

.

**Track Average Amplitude (TAA) Measurement Function****hpe5022\_taaRawData\_Q****C Syntax**

```
ViStatus hpe5022_taaRawData_Q(ViSession id, ViInt16 dataType, ViReal64 data[]);
```

**Visual Basic Syntax**

```
hpe5022_taaRawData_Q(ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long
```

**Description**

This function returns the TAA raw data. The parametric module measures TAA by observing its peak detector voltage. The peak detector voltage is monitored at every 5 micro seconds. The monitored data at each revolution are averaged and the averaged data is returned by the “hpe5022\_taaData\_Q” function.

The raw data averages the monitored data for every 5 micro seconds on the last revolution. The data at the previous revolution cannot be retrieved because data in the memory is overwritten for every revolution

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA Positive
hpe5022_DATA_TAA_NEG	3	TAA Negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry

- data

Description Returns the data array of the parameter specified by the 'dataType'. The array size is returned by the “hpe5022\_taaRawDataSize\_Q” function.

Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

**Track Average Amplitude (TAA) Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The TAA raw data is corrupt. Check if your measurement sequence is correct.

**See Also**

"hpe5022\_taaRawDataSize\_Q" on page 421

"hpe5022\_measureTaa" on page 409

"hpe5022\_setupTaa" on page 412

**Track Average Amplitude (TAA) Measurement Function****hpe5022\_taaRawStatistic\_Q****C Syntax**

ViStatus hpe5022\_taaRawStatistic\_Q(ViSession id, ViInt16 dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax**

hpe5022\_taaRawStatistic\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description**

This function reports the statistics (mean, minimum, maximum and standard deviation) of the TAA raw data. See the “hpe5022\_taaRawData\_Q” function for the raw data. The data returned by the “hpe5022\_taaRawData\_Q” function is used for statistic analysis.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA Positive
hpe5022_DATA_TAA_NEG	3	TAA Negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry

- mean

Description Returns the mean value for the raw data of the specified data type.

Direction OUT

Unit Volt



**Track Average Amplitude (TAA) Measurement Function**

- min
 

Description	Returns the minimum value in the raw data of the specified data type.
Direction	OUT
Unit	Volt
- max
 

Description	Returns the maximum value in the raw data of the specified data type.
Direction	OUT
Unit	Volt
- stdDev
 

Description	Returns the standard deviation value which is calculated using the raw data of the specified data type.
Direction	OUT
Unit	Volt

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The TAA raw data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_taaRawData\_Q” on page 422

“hpe5022\_measureTaa” on page 409

“hpe5022\_setupTaa” on page 412

**Track Average Amplitude (TAA) Measurement Function****hpe5022\_taaModulation\_Q****C Syntax**

```
ViStatus hpe5022_taaModulation_Q(ViSession id, ViPReal64 modPP, ViPReal64
modPos, ViPReal64 modNeg);
```

**Visual Basic Syntax**

```
hpe5022_taaModulation_Q(ByVal id As Long, ByRef modPP As Double, ByRef
modPos As Double) As Long
```

**Description**

This function returns the TAA modulation from the last revolution. The data returned by the “hpe5022\_taaRawData\_Q” function is used for this calculation. The definition of modulation is described in the operation manual.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- modPP
 

Description	Returns the value of peak to peak modulation
Direction	OUT
- modPos
 

Description	Returns the value of the positive modulation.
Direction	OUT
- modNeg
 

Description	Returns the value of the negative modulation.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The TAA raw data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_taaRawData\_Q” on page 422

“hpe5022\_measureTaa” on page 409

## Track Average Amplitude (TAA) Measurement Function

“hpe5022\_setupTaa” on page 412

## Pulse Width (PW) Measurement Function

This section describes the functions related with pulse width (PW) measurement. The pulse width measurement in this function category is measured by the parametric module.

### hpe5022\_pwThreshold

#### C Syntax

```
ViStatus hpe5022_pwThreshold(ViSession id, ViReal64 threshold, ViInt16  
taaMode);
```

#### Visual Basic Syntax

```
hpe5022_pwThreshold(ByVal id As Long, ByVal threshold As Double, ByVal  
taaMode As Integer) As Long
```

#### Description

This function specifies the threshold level and the reference TAA for PW measurement. The real-time-measured TAA or the user-defined reference TAA value can be selected as the reference TAA. See chapter 5 in the Operation Manual for details.

This function is not used for pulse width measurement using an Oscilloscope. (“hpe5022\_wavePw\_Q” function)

#### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- threshold

Description Specifies the threshold level which is shown with the ratio to TAA value.

Direction IN

Preset Value 0.5

Values

Name	Value
hpe5022_PW_THR_MIN	0.2
hpe5022_PW_THR_MAX	0.8

- taaMode

Description Specifies the reference TAA mode for PW threshold.

When the “hpe5022\_PW\_TAA\_TRACKED” is selected, the real-time-measured TAA positive and TAA negative levels

will be used to measure PW. When “hpe5022\_PW\_TAA\_FIXED” is selected, the reference TAA level as specified by the “hpe5022\_taaReference” function will be used to calculate PW.

Direction IN  
 Preset value 1 (hpe5022\_PW\_TAA\_TRACKED)  
 Values

Name	Value	Description
hpe5022_PW_TAA_TRACKED	1	Tracked mode
hpe5022_PW_TAA_FIXED	2	Fixed mode

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘threshold’ and/or ‘taaMode’ is out of range.

**See Also**

- “hpe5022\_measurePw” on page 431
- “hpe5022\_setupPw” on page 433
- “hpe5022\_pwThreshold\_Q” on page 430
- “hpe5022\_taaReference” on page 400
- “hpe5022\_wavePw\_Q” on page 1043

**Pulse Width (PW) Measurement Function****hpe5022\_pwThreshold\_Q****C Syntax**

```
ViStatus hpe5022_pwThreshold_Q(ViSession id, ViPReal64 threshold, ViPInt16
taaMode);
```

**Visual Basic Syntax**

```
hpe5022_pwThreshold_Q(ByVal id As Long, ByRef threshold As Double, ByRef
taaMode As Integer) As Long
```

**Description**

This function returns the configuration of the PW threshold.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- threshold
 

Description	Returns the threshold level.
Direction	OUT
- taaMode
 

Description	Returns the specified TAA mode setting.
Direction	OUT
Values	Same as the 'taaMode' in the "hpe5022_pwThreshold" "hpe5022_pwThreshold" function.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

"hpe5022\_pwThreshold" on page 428

## hpe5022\_measurePw

### C Syntax

ViStatus hpe5022\_measurePw(ViSession id, ViInt16 seqType, ViInt16 ave);

### Visual Basic Syntax

hpe5022\_measurePw(ByVal id As Long, ByVal seqType As Integer, ByVal ave As Integer) As Long

### Description

This function measures the PW parameters according to the specified sequence type. There are three sequence types: 1) erase, write data, then measure 2) no erase, write data, then measure 3) measure only. The detailed sequences are as follows:

1. Move the head to the write track offset position specified by the “hpe5022\_writeTrackOffset” function.
2. If ‘seqType’ (see parameters) is set to “hpe5022\_SEQ\_ER\_WR\_M”, perform an erase (same as the “hpe5022\_erase” function) for an entire track.
3. If ‘seqType’ is set to “hpe5022\_SEQ\_ER\_WR\_M” or “hpe5022\_SEQ\_WR\_M”, write the data pattern specified by the “hpe5022\_selectPattern” function for an entire track at the write track offset position.
4. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset” function.
5. Measure the PW parameter.
6. Repeat the procedure steps 3 to 5 ‘ave’ (see parameters) times if it is more than 1.

The “hpe5022\_pw\_Q” function returns the measurement result.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Specifies the type of measurement sequence.
Direction	IN

#### Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Erase->Write->Measure
hpe5022_SEQ_WR_M	1	Write->Measure
hpe5022_SEQ_M	2	Measure

**Pulse Width (PW) Measurement Function**

- ave

Description Specifies the number of measurements for averaging.

Direction IN

Values

Name	Value
hpe5022_PW_COUN_MIN	1
hpe5022_PW_COUN_MAX	100

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' and/or 'ave' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindstand is turned off. Turn it on before executing the function. See the "hpe5022_driveState" function.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

"hpe5022\_readTrackOffset" on page 219

"hpe5022\_writeTrackOffset" on page 222

"hpe5022\_selectPattern" on page 119

"hpe5022\_pw\_Q" on page 435

"hpe5022\_write" on page 326



## hpe5022\_setupPw

### C Syntax

```
ViStatus hpe5022_setupPw(ViSession id, ViInt16 seqType, ViInt16 ave,
ViPObject testHndl);
```

### Visual Basic Syntax

```
hpe5022_setupPw(ByVal id As Long, ByVal seqType As Integer, ByVal ave As Integer, ByVal testHndl As Long) As Long
```

### Description

This function assigns the PW measurement sequence to the specified test identifier. See the “hpe5022\_measurePw” function about the details of the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_pw\_Q” function returns the measurement result.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Specifies the type of measurement sequence.
Direction	IN
Values	Same as the ‘seqType’ in the “hpe5022_measurePw” function.
- ave
 

Description	Specifies the number of measurements for averaging.
Direction	IN
Values	Same as the ‘ave’ in the “hpe5022_measurePw” function.
- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the PW measurement by the “hpe5022_measure” function.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

**Pulse Width (PW) Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' and/or 'ave' is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

**See Also**

"hpe5022\_measurePw" on page 431

"hpe5022\_pw\_Q" on page 435

"hpe5022\_measure" on page 387

"hpe5022\_releaseSetup" on page 390

## hpe5022\_pw\_Q

- C Syntax** ViStatus hpe5022\_pw\_Q(ViSession id, ViPReal64 pw, ViPReal64 pwPos, ViPReal64 pwNeg, ViPReal64 pwAsym);
- Visual Basic Syntax** hpe5022\_pw\_Q(ByVal id As Long, ByRef pw As Double, ByRef pwPos As Double, ByRef pwNeg As Double, ByRef pwAsym As Double) As Long
- Description** This function returns the measurement results of PW. The returned parameters are PW, PW positive, PW negative and PW asymmetry. See chapter 5 in the Operation Manual about the definition of these parameters.
- Each result is the mean of the corresponding parameter of the “hpe5022\_pwData\_Q” function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- pw
 

Description	Returns the PW.
Direction	OUT
Unit	Second
- pwPos
 

Description	Returns the positive value of PW.
Direction	OUT
Unit	Second
- pwNeg
 

Description	Returns the negative value of PW.
Direction	OUT
Unit	Second
- pwAsym
 

Description	Returns the asymmetry of PW.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

**Pulse Width (PW) Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The PW data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measurePw” on page 431

“hpe5022\_setupPw” on page 433

“hpe5022\_pwData\_Q” on page 438

## hpe5022\_pwDataSize\_Q

### C Syntax

ViStatus hpe5022\_pwDataSize\_Q(ViSession id, ViInt32 size);

### Visual Basic Syntax

hpe5022\_pwDataSize\_Q(ByVal id As Long, ByRef size As Long) As Long

### Description

This function returns the array size of PW data returned by the “hpe5022\_pwData\_Q” function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- size
 

Description	Returns the array size of PW data.  The size will be the same as the value of ‘ave’ specified by the “hpe5022_measurePw” or “hpe5022_setupPw” function if the measurement is done properly.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The PW data is corrupt. Check if your measurement sequence is correct.

### See Also

- “hpe5022\_pwData\_Q” on page 438
- “hpe5022\_measurePw” on page 431
- “hpe5022\_setupPw” on page 433

**Pulse Width (PW) Measurement Function****hpe5022\_pwData\_Q****C Syntax**

```
ViStatus hpe5022_pwData_Q(ViSession id, ViInt16 dataType, ViReal64 data[]);
```

**Visual Basic Syntax**

```
hpe5022_pwData_Q(ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long
```

**Description**

This function returns the PW data for each revolution.

When the 'ave' parameter in the "hpe5022\_measurePw" or the "hpe5022\_setupPw" function is set to more than one, this function allows you to get the PW data for each revolution. If 'ave' is set to 1, the output of this function will be the same as "hpe5022\_pw\_Q" function.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry

- data

Description Returns the data array of the parameter specified by the 'dataType'. The array size is returned by the "hpe5022\_pwDataSize\_Q" function.

Direction OUT

Unit Second (except for PW asymmetry)

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The PW data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_pwDataSize\_Q” on page 437

“hpe5022\_measurePw” on page 431

“hpe5022\_setupPw” on page 433

**Pulse Width (PW) Measurement Function****hpe5022\_pwStatistic\_Q****C Syntax**

ViStatus hpe5022\_pwStatistic\_Q(ViSession id, ViInt16 dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax**

hpe5022\_pwStatistic\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description**

This function returns the statistics (mean, minimum, maximum and standard deviation) of the specified PW parameter. The data returned by the “hpe5022\_pwData\_Q” function is used for statistic analysis.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry

- mean

Description Returns the mean value of measurement from the specified data type. The returned value is the same as the corresponding values returned by the “hpe5022\_pw\_Q” function.

Direction OUT

Unit Second (excepts for PW asymmetry)



- min
  - Description Returns the minimum value of measurement.
  - Direction OUT
  - Unit Second (excepts for PW asymmetry)
- max
  - Description Returns the maximum value of measurement.
  - Direction OUT
  - Unit Second (except for PW asymmetry)
- stdDev
  - Description Returns the standard deviation value which is calculated using the measurement results of the specified data type.
  - Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The PW data is corrupt. Check if your measurement sequence is correct.

**See Also**

- “hpe5022\_pwData\_Q” on page 438
- “hpe5022\_measurePw” on page 431
- “hpe5022\_setupPw” on page 433

**Pulse Width (PW) Measurement Function****hpe5022\_pwRawDataSize\_Q****C Syntax**

```
ViStatus hpe5022_pwRawDataSize_Q(ViSession id, ViPInt32 size);
```

**Visual Basic Syntax**

```
hpe5022_pwRawDataSize_Q(ByVal id As Long, ByRef size As Long) As Long
```

**Description**

This function returns the array size of PW raw data returned by the “hpe5022\_pwRawData\_Q” function. The returned size is the number of measurement points at the last revolution.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- size
 

Description	Returns the array size of PW raw data.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The PW raw data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_pwRawData\_Q” on page 443

“hpe5022\_measurePw” on page 431

“hpe5022\_setupPw” on page 433

## hpe5022\_pwRawData\_Q

**C Syntax** ViStatus hpe5022\_pwRawData\_Q(ViSession id, ViInt16 dataType, ViReal64 data[]);

**Visual Basic Syntax** hpe5022\_pwRawData\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long

**Description** This function returns the PW raw data.

The parametric module measures a PW by observing its pulse width detector voltage. The pulse width detector voltage is monitored at every 5 micro seconds. The monitored data at each revolution is averaged and the averaged data is returned by the “hpe5022\_pwData\_Q” function.

The raw data means the monitored data at the last revolution. The data at the previous revolution cannot be retrieved because the data in the memory is overwritten for every revolution.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- dataType
  - Description Specifies the type of data to be reported.
  - Direction IN
  - Values

Name	Value	Description
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry

- data
  - Description Returns the data array of the parameter specified by the ‘dataType’. The array size is returned by the “hpe5022\_pwRawDataSize\_Q” function.
  - Direction OUT
  - Unit Second (except for PW asymmetry)

Function Reference  
**Pulse Width (PW) Measurement Function**

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The PW raw data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_pwRawDataSize\_Q” on page 442

“hpe5022\_pwData\_Q” on page 438

## hpe5022\_pwRawStatistic\_Q

**C Syntax** ViStatus hpe5022\_pwRawStatistic\_Q(ViSession id, ViInt16 dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax** hpe5022\_pwRawStatistic\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description** This function reports the statistics (mean, minimum, maximum and standard deviation) of the PW raw data. See the “hpe5022\_pwRawData\_Q” function for the raw data. The data returned by the “hpe5022\_pwRawData\_Q” function are used for this statistic analysis.

**Parameters**

- id  
 Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType  
 Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry

- mean  
 Description Returns the mean value of raw data from the specified data type.

Direction OUT

Unit Second (except for PW asymmetry)

- min  
 Description Returns the minimum value of the raw data from the specified data type.

Direction OUT

Unit Second (except for PW asymmetry)

## Function Reference

### Pulse Width (PW) Measurement Function

- max

Description Returns the maximum value of the raw data from the specified data type.

Direction OUT

Unit Second (except for PW asymmetry)

- stdDev

Description Returns the standard deviation value which is calculated using the raw data of the specified data type.

Direction OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The PW raw data is corrupt. Check if your measurement sequence is correct.

### See Also

“hpe5022\_pwRawData\_Q” on page 443

## Baseline Measurement Function

This section describes the functions related with baseline measurement. The baseline measurement in this function category is measured by the parametric module.

### hpe5022\_measureBaseline

**C Syntax** ViStatus hpe5022\_measureBaseline(ViSession id, ViInt16 seqType, ViInt16 ave);

**Visual Basic Syntax** hpe5022\_measureBaseline(ByVal id As Long, ByVal seqType As Integer, ByVal ave As Integer) As Long

**Description** This function measures the baseline parameters according to the specified sequence type. There are three types of sequence : 1) erase, write data, then measure 2) no erase, write data, then measure 3) measure only. The detailed sequences are as follows:

1. Move the head to the write track offset position specified by the “hpe5022\_writeTrackOffset” function.
2. If ‘seqType’ (see parameters) is set to “hpe5022\_SEQ\_ER\_WR\_M”, perform a erase (same as the “hpe5022\_erase” function) for an entire track.
3. If ‘seqType’ is set to “hpe5022\_SEQ\_ER\_WR\_M” or “hpe5022\_SEQ\_WR\_M”, write data pattern specified by the “hpe5022\_selectPattern” function for an entire track at the write track offset position.
4. Move the head to the read track offset specified by the “hpe5022\_readTrackOffset” function.
5. Measure the baseline parameter.
6. Repeat the steps 3 to 5 ‘ave’ (see parameters) times if it is more than 1.

The “hpe5022\_baseline\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Specifies the type of measurement sequence.
Direction	IN

**Baseline Measurement Function**

## Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Erase->Write->Measure
hpe5022_SEQ_WR_M	1	Write->Measure
hpe5022_SEQ_M	2	Measure

- ave

Description Specifies the number of measurements for averaging.

Direction IN

## Values

Name	Value
hpe5022_BASE_COUN_MIN	1
hpe5022_BASE_COUN_MAX	100

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' and/or 'ave' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindrive is turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.



Error Code	Description
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_PLL_UNLOCK	The PLL is unlocked. Check if the setting parameter is correct.

**See Also**

“hpe5022\_writeTrackOffset” on page 222

“hpe5022\_readTrackOffset” on page 219

“hpe5022\_baseline\_Q” on page 452

“hpe5022\_driveState” on page 209

**Baseline Measurement Function****hpe5022\_setupBaseline****C Syntax**

```
ViStatus hpe5022_setupBaseline(ViSession id, ViInt16 seqType, ViInt16 ave,
ViPObject testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupBaseline(ByVal id As Long, ByVal seqType As Integer, ByVal ave
As Integer, ByVal testHndl As Long) As Long
```

**Description**

This function assigns the baseline measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureBaseline” function about the details of the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_baseline\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Specifies the type of measurement sequence.
Direction	IN
Values	Same as the ‘seqType’ in the “hpe5022_measureBaseline” function
- ave
 

Description	Specifies the number of measurements for averaging.
Direction	IN
Values	Same as the ‘ave’ in the “hpe5022_measureBaseline” function
- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the baseline measurement by the “hpe5022_measure” function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' and/or 'ave' is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

**See Also**

"hpe5022\_measureBaseline" on page 447

"hpe5022\_baseline\_Q" on page 452

"hpe5022\_measure" on page 387

"hpe5022\_releaseSetup" on page 390

**Baseline Measurement Function****hpe5022\_baseline\_Q****C Syntax**

ViStatus hpe5022\_baseline\_Q(ViSession id, ViPReal64 base, ViPReal64 basePos, ViPReal64 baseNeg, ViPReal64 sep);

**Visual Basic Syntax**

hpe5022\_baseline\_Q(ByVal id As Long, ByRef base As Double, ByRef basePos As Double, ByRef baseNeg As Double, ByRef sep As Double) As Long

**Description**

This function returns the measurement results of baseline measurement. The returned parameters are Baseline, Baseline positive (Baseline+), Baseline negative (Baseline-) and Baseline separation. See chapter 5 in the Operation Manual for the definition of these parameters.

The each result is the mean of corresponding parameter of the "hpe5022\_baselineData\_Q" function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- base
 

Description	Returns the value of Baseline.
Direction	OUT
Unit	Volt
- basePos
 

Description	Returns the value of baseline positive.
Direction	OUT
Unit	Volt
- baseNeg
 

Description	Returns the value of baseline negative.
Direction	OUT
Unit	Volt
- sep
 

Description	Returns the value of the baseline separation.
Direction	OUT
Unit	Volt

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The baseline data is corrupt. Check if your measurement sequence is correct.

## See Also

“hpe5022\_measureBaseline” on page 447

“hpe5022\_setupBaseline” on page 450

“hpe5022\_baselineData\_Q” on page 455

**Baseline Measurement Function****hpe5022\_baselineDataSize\_Q****C Syntax**

```
ViStatus hpe5022_baselineDataSize_Q(ViSession id, ViPInt32 size);
```

**Visual Basic Syntax**

```
hpe5022_baselineDataSize_Q(ByVal id As Long, ByRef size As Long) As Long
```

**Description**

This function returns the array size of baseline data returned by the “hpe5022\_baselineData\_Q” function.

**Parameters**

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **size**

Description	Returns the array size of baseline data.  The size will be the same as the value of ‘ave’ specified by the “hpe5022_measureBaseline” or “hpe5022_setupBaseline” function if the measurement done properly.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The baseline data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_baselineData\_Q” on page 455

“hpe5022\_measureBaseline” on page 447

“hpe5022\_setupBaseline” on page 450

**hpe5022\_baselineData\_Q**

**C Syntax** ViStatus hpe5022\_baselineData\_Q(ViSession id, ViInt16 dataType, ViReal64 data[]);

**Visual Basic Syntax** hpe5022\_baselineData\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long

**Description** This function returns the baseline data for each revolution.

When the ‘ave’ parameter in the “hpe5022\_measureBaseline” or the “hpe5022\_setupBaseline” function is set to more than one, the function allows you to get the baseline data for each revolution. If ‘ave’ is set to 1, the output of this function will be the same as the “hpe5022\_baseline\_Q” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

- dataType
 

Description	Specifies the type of data to be reported.
Direction	IN
Values	

Name	Value	Description
hpe5022_DATA_BL	9	Baseline
hpe5022_DATA_BL_POS	10	Baseline positive
hpe5022_DATA_BL_NEG	11	Baseline negative
hpe5022_DATA_BL_SEP	12	Baseline separation

- data
 

Description	Returns the data array of the parameter specified by the ‘dataType’. The array size is returned by the “hpe5022_baselineDataSize_Q” function.
Direction	OUT
Unit	Volt

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Baseline Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The baseline data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_baselineDataSize\_Q” on page 454

“hpe5022\_measureBaseline” on page 447

“hpe5022\_setupBaseline” on page 450



## hpe5022\_baselineStatistic\_Q

**C Syntax** ViStatus hpe5022\_baselineStatistic\_Q(ViSession id, ViInt16 dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax** hpe5022\_baselineStatistic\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description** This function reports the statistics (mean, minimum, maximum and standard deviation) of the specified baseline parameter. The data returned by the “hpe5022\_baselineData\_Q” function are used for this statistic analysis

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType
  - Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_BL	9	Baseline
hpe5022_DATA_BL_POS	10	Baseline positive
hpe5022_DATA_BL_NEG	11	Baseline negative
hpe5022_DATA_BL_SEP	12	Baseline separation

- mean
  - Description Returns the mean value in the measurement result of the specified data type. The returned value is the same as the corresponding values returned by the “hpe5022\_baseline\_Q” function.

Direction OUT

Unit Volt

- min
  - Description Returns the minimum value of measurement result from the specified data type.

Direction OUT

## Function Reference

### Baseline Measurement Function

Unit	Volt
• max	
Description	Returns the maximum value of measurement from the specified data type.
Direction	OUT
Unit	Volt
• stdDev	
Description	Returns the standard deviation value which is calculated using the measurement result of the specified data type.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The baseline data is corrupt. Check if your measurement sequence is correct.

### See Also

“hpe5022\_baselineData\_Q” on page 455

“hpe5022\_measureBaseline” on page 447

“hpe5022\_setupBaseline” on page 450

## hpe5022\_baselineHistogram\_Q

### C Syntax

```
ViStatus hpe5022_baselineHistogram_Q(ViSession id, ViReal64 volt[], ViInt32 basePos[], ViInt32 baseNeg[]);
```

### Visual Basic Syntax

```
hpe5022_baselineHistogram_Q(ByVal id As Long, ByRef volt As Double, ByRef basePos As Long, ByRef baseNeg As Long) As Long
```

### Description

This function returns the histogram of Baseline positive and Baseline negative. The returned histogram is generated as follows, the measurement range is equally divided into 256 parts, and these parts are used as range of each category in histogram. The baseline raw data (i.e. all measurement values which are used to calculate baseline parameters of each track) at last track is classified into each category to create the histogram of Baseline+ and Baseline-.

### Parameters


- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- volt
 

Description	Returns 256 center voltage of histogram. The returned data is set in array. This parameter is the divisions of a scale for the 'basePos' and 'baseNeg' parameters. The relation among these parameters is shown in Figure 3-15.
Direction	OUT
Unit	Volt
- basePos
 

Description	Returns the counts of data in each category of the histogram of Baseline positive. The returned data is set in array, and its size is 256. The basePos [XX] is the count of data in category of which the center value is volt [XX]. (XX is an integer from 0 to 255.).
Direction	OUT

**Figure 3-15** The relation among ‘volt’, ‘basePos’ and ‘baseNeg’

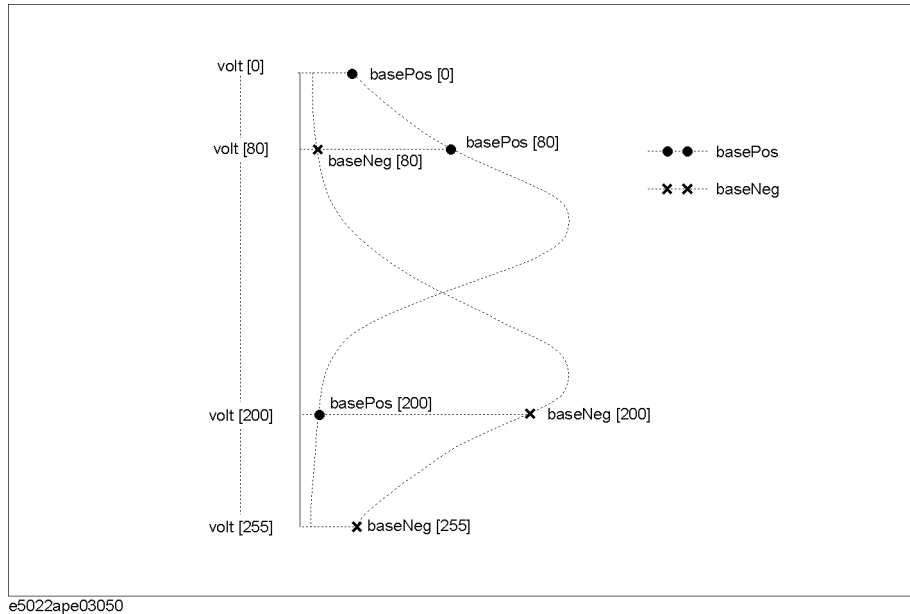

- **baseNeg**  
 Description Returns counts of data in each category of the histogram of Baseline-. The returned data is set in array and its size is 256. The baseNeg[YY] is the count of data in category of which the center value is volt[YY]. (YY is an integer from 0 to 255.).  
 Direction OUT

**Return Values**

Completion Code	Description
VL_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The baseline data is corrupt. Check if your measurement sequence is correct.

**See Also** “hpe5022\_measureBaseline” on page 447  
 “hpe5022\_setupBaseline” on page 450

**hpe5022\_baselineSamplingPhase**

**C Syntax** ViStatus hpe5022\_baselineSamplingPhase(ViSession id, ViReal64 phase);

**Visual Basic Syntax** hpe5022\_baselineSamplingPhase(ByVal id As Long, ByVal phase As Double) As Long

**Description** This function specifies the sampling phase of baseline measurement. Generally, it is not necessary to specify this function. See chapter 5 in the Operation Manual for details.

- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - phase
 

Description	Specifies the sampling phase.
Direction	IN
Preset Value	0
Unit	Degree
Values	

Name	Value
hpe5022_BASE_SAMP_PHAS_MIN	-90
hpe5022_BASE_SAMP_PHAS_MAX	90

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'phase' is out of range.

**See Also** "hpe5022\_baselineSamplingPhase\_Q" on page 462

## **hpe5022\_baselineSamplingPhase\_Q**

- C Syntax** ViStatus hpe5022\_baselineSamplingPhase\_Q(ViSession id, ViPReal64 phase);
- Visual Basic Syntax** hpe5022\_baselineSamplingPhase\_Q(ByVal id As Long, ByRef phase As Double) As Long
- Description** This function returns the sampling phase for the baseline measurement.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - phase
    - Description Returns the sampling phase.
    - Direction OUT
    - Unit Degree

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_baselineSamplingPhase" on page 461

## hpe5022\_baselinePllThreshold

**C Syntax** ViStatus hpe5022\_baselinePllThreshold(ViSession id, ViReal64 level, ViInt16 taaRef);

**Visual Basic Syntax** hpe5022\_baselinePllThreshold(ByVal id As Long, ByVal level As Double, ByVal taaRef As Integer) As Long

**Description** This function specifies the PLL threshold level for the baseline measurement. Generally, it is not necessary to specify this. See chapter 5 in the Operaion Manual for details.

**Parameters**

- id**

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- level**

Description Specifies the threshold level.

Direction IN

Preset Value 0.5

Values

Name	Value
hpe5022_PLL_THR_MIN	0.2
hpe5022_PLL_THR_MAX	0.8

- taaRef**

Description Specifies the TAA reference.

If (hpe5022\_BL\_TAA\_TRACKED), TAA reference tracks the peak of input signal while baseline measuring.

If (hpe5022\_BL\_TAA\_FIXED), TAA reference is specified by the "hpe5022\_taaReference" function.

Direction IN

Preset Value 1 (hpe5022\_BL\_TAA\_TRACKED)

Values

Name	Value	Description
hpe5022_BL_TAA_TRACKED	1	Tracked mode.
hpe5022_BL_TAA_FIXED	2	Fixed mode.

Function Reference  
**Baseline Measurement Function**

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'level' and/or 'taaRef' is out of range.

**See Also**      “hpe5022\_baselinePllThreshold\_Q” on page 465



## hpe5022\_baselinePllThreshold\_Q

**C Syntax** ViStatus hpe5022\_baselinePllThreshold\_Q(ViSession id, ViPReal64 level, ViPInt16 taaRef);

**Visual Basic Syntax** hpe5022\_baselinePllThreshold\_Q(ByVal id As Long, ByRef level As Double, ByRef taaRef As Integer) As Long

**Description** This function returns the PLL threshold level for baseline measurement.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- level
 

Description	Returns the threshold level.
Direction	OUT
- taaRef
 

Description	Returns the TAA reference.
Direction	OUT
Values	Same as 'taaRef' in the "hpe5022_baselinePllThreshold" function.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_baselinePllThreshold" on page 463

## Parametric Measurement Function

This section describes the functions related with parametric measurement. Parametric measurement measures some typical parameters. Measurement in this function is done by a parametric module.

### hpe5022\_measureParametric

#### C Syntax

```
ViStatus hpe5022_measureParametric(ViSession id, ViInt16 ave);
```

#### Visual Basic Syntax

```
hpe5022_measureParametric(ByVal id As Long, ByVal ave As Integer) As Long
```

#### Description

This function measures the following parameters.

- TAA measured using HF pattern (HF TAA)
- TAA measured using LF pattern (LF TAA)
- TAA measured using isolated pulse pattern (Isolated pulse TAA)
- PW measured using isolated pulse pattern (PW)
- Resolution calculated using the HF-TAA and the LF-TAA (Resolution)

The measurement sequence of this function is as follows:

1. Move the head to the write track offset position specified by the “hpe5022\_writeTrackOffset” function.
2. Perform a erase (same as the “hpe5022\_erase” function) for an entire track.
3. Write HF data pattern specified by the “hpe5022\_hfPattern” function for an entire track.
4. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset” function.
5. Measure TAA for the HF data pattern.
6. Move the head to the write offset position.
7. Perform a erase (same as the “hpe5022\_erase” function) for an entire track.
8. Write an LF data pattern specified by the “hpe5022\_lfPattern” function.
9. Move the head to the read offset position.
10. Measure a TAA parameter for the LF data pattern.
11. Move the head to the write offset position.
12. Write the isolated pulse data pattern specified by the “hpe5022\_isolatedPulsePattern” function
13. Move the head to the read offset position.

14. Measure a TAA parameter for the isolated data pattern.
15. Measure a PW parameter for the isolated data pattern.
16. Repeat the steps 1 to 15 'ave' (see parameters) times if it is more than 1.

The data patterns of HF, LF and isolated pulse patterns are used automatically. The data pattern specified by the "hpe5022\_selectPattern" function is not used for this measurement.

The "hpe5022\_parametric\_Q", "hpe5022\_parametricHfTaa\_Q", "hpe5022\_parametricLfTaa\_Q", "hpe5022\_parametricIsolatedPulseTaa\_Q" and "hpe5022\_parametricPw\_Q" functions return the measurement result.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- ave
  - Description Specifies the number of measurements for averaging.
  - Direction IN
  - Values

Name	Value
hpe5022_PARAMETRIC_COUN_MIN	1
hpe5022_PARAMETRIC_COUN_MAX	50

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'ave' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindant is turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.

Function Reference  
**Parametric Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

- “hpe5022\_parametric\_Q” on page 471
- “hpe5022\_parametricHfTaa\_Q” on page 473
- “hpe5022\_parametricLfTaa\_Q” on page 480
- “hpe5022\_parametricIsolatedPulseTaa\_Q” on page 487
- “hpe5022\_parametricPw\_Q” on page 494
- “hpe5022\_erase” on page 362
- “hpe5022\_readTrackOffset” on page 219
- “hpe5022\_hfPattern” on page 122
- “hpe5022\_lfPattern” on page 124
- “hpe5022\_isolatedPulsePattern” on page 126

## hpe5022\_setupParametric

### C Syntax

```
ViStatus hpe5022_setupParametric(ViSession id, ViInt16 ave, ViPObject testHndl);
```

### Visual Basic Syntax

```
hpe5022_setupParametric(ByVal id As Long, ByVal ave As Integer, ByVal testHndl As long) As Long
```

### Description

This function assigns the parametric measurement sequence to the specified test identifier. See the “hpe5022\_measureParametric” function about the details of this sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_parametric\_Q”, “hpe5022\_parametricHfTaa\_Q”, “hpe5022\_parametricLfTaa\_Q”, “hpe5022\_parametricIsolatedPulseTaa\_Q” and “hpe5022\_parametricPw\_Q” functions returns the measurement results.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- ave
 

Description	Specifies the number of measurements for averaging.
Direction	IN
Values	Same as the ‘ave’ in the “hpe5022_measureParametric” function.
- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the parametric measurement by the “hpe5022_measure” function.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.

Function Reference  
**Parametric Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_PARAMETER	The parameter 'ave' is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

**See Also**

- "hpe5022\_measureParametric" on page 466
- "hpe5022\_parametric\_Q" on page 471
- "hpe5022\_parametricHfTaa\_Q" on page 473
- "hpe5022\_parametricLfTaa\_Q" on page 480
- "hpe5022\_parametricIsolatedPulseTaa\_Q" on page 487
- "hpe5022\_parametricPw\_Q" on page 494
- "hpe5022\_measure" on page 387
- "hpe5022\_releaseSetup" on page 390

## hpe5022\_parametric\_Q

### C Syntax

ViStatus hpe5022\_parametric\_Q(ViSession id, ViPReal64 hf\_taa, ViPReal64 lf\_taa, ViPReal64 iso\_taa, ViPReal64 pw, ViPReal64 baseline, ViPReal64 resolution);

### Visual Basic Syntax

hpe5022\_parametric\_Q(ByVal id As Long, ByRef hf\_taa As Double, ByRef lf\_taa As Double, ByRef iso\_taa As Double, ByRef pw As Double, ByRef baseline As Double, ByRef resolution As Double) As Long

### Description

This function returns the results of the parametric measurement. The returned parameters are as follows.

- TAA measured using the specified HF pattern (HF TAA).
- TAA measured using the specified LF pattern (LF TAA).
- TAA measured using the specified isolated pulse pattern (Isolated pulse TAA).
- PW measured using the specified isolated pulse pattern (PW).
- Resolution calculated using the HF-TAA and the LF-TAA (Resolution).

Refer to the chapter 5 in the Operation Manual regarding the definition of this parameters.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- hf\_taa
 

Description	Returns the value of the HF TAA.
Direction	OUT
Unit	Volt
- lf\_taa
 

Description	Returns the value of the LF TAA.
Direction	OUT
Unit	Volt
- iso\_taa
 

Description	Returns the value of the Isolated pulse TAA.
Direction	OUT
Unit	Volt

**Parametric Measurement Function**

## • pw

Description Returns the value of the PW.

Direction OUT

Unit Second

## • baseline

Description Returns the (hpe5022\_NAN) always. This parameter remains for the backward compatibility of a software whose revision is below A.02.10.

Direction OUT

Value

Name	Value
hpe5022_NAN	9.91×10 <sup>37</sup>

## • resolution

Description Returns the value of Resolution.

Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureParametric” on page 466

“hpe5022\_setupParametric” on page 469



## hpe5022\_parametricHfTaa\_Q

**C Syntax** ViStatus hpe5022\_parametricHfTaa\_Q(ViSession id, ViPReal64 taa, ViPReal64 taaPos, ViPReal64 taaNeg, ViPReal64 taaAsym);

**Visual Basic Syntax** hpe5022\_parametricHfTaa\_Q(ByVal id As Long, ByRef taa As Double, ByRef taaPos As Double, ByRef taaNeg As Double, ByRef taaAsym As Double,) As Long

**Description** This function returns the TAA, the TAA positive, the TAA negative and the TAA asymmetry of the measurement using an HF data pattern.

Each result is the mean of the corresponding parameter of the “hpe5022\_parametricHfTaaData\_Q” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- taa
 

Description	Returns the HF TAA.
Direction	OUT
Unit	Volt
- taaPos
 

Description	Returns the HF TAA positive.
Direction	OUT
Unit	Volt
- taaNeg
 

Description	Returns the HF TAA negative.
Direction	OUT
Unit	Volt
- taaAsym
 

Description	Returns the HF TAA asymmetry.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Parametric Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureParametric” on page 466

“hpe5022\_setupParametric” on page 469

“hpe5022\_parametricHfTaaData\_Q” on page 476

## hpe5022\_parametricHfTaaDataSize\_Q

- C Syntax** `ViStatus hpe5022_parametricHfTaaDataSize_Q(ViSession id, ViInt32 size);`
- Visual Basic Syntax** `hpe5022_parametricHfTaaDataSize_Q(ByVal id As Long, ByRef size As Long) As Long`
- Description** This function returns the array size of HF TAA data returned by the “hpe5022\_parametricHfTaaData\_Q” function.
- Parameters**
- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - **size**

Description	Returns the array size of the HF TAA data.  The size is the same as the value of ‘ave’ specified by the “hpe5022_measureParametric” or “hpe5022_setupParametric” function if the measurement is done properly.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

- See Also**
- “hpe5022\_parametricHfTaaData\_Q” on page 476
  - “hpe5022\_measureParametric” on page 466
  - “hpe5022\_setupParametric” on page 469

## hpe5022\_parametricHfTaaData\_Q

### C Syntax

```
ViStatus hpe5022_parametricHfTaaData_Q(ViSession id, ViInt16
dataType, ViReal64 data[]);
```

### Visual Basic Syntax

```
hpe5022_parametricHfTaaData_Q(ByVal id As Long, ByVal dataType As Integer,
ByRef data As Double) As Long
```

### Description

This function returns the HF TAA data of the measurement for each revolution.

When the 'ave' parameter in the "hpe5022\_measureParametric" or the "hpe5022\_setupParametric" function is set to more than one, the function allows you to get the HF TAA data for each revolution. If 'ave' is set to 1, the output of this function is the same as the "hpe5022\_parametricHfTaa\_Q" function.

### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry

- data

Description Returns the data array of the parameter specified by the 'dataType'. The array size is returned by the "hpe5022\_parametricHfTaaDataSize\_Q" function.

Direction OUT

Unit Volt (except for TAA asymmetry)

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘dataType’ is out of range.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureParametric” on page 466

“hpe5022\_setupParametric” on page 469

“hpe5022\_parametricHfTaa\_Q” on page 473

“hpe5022\_parametricHfTaaDataSize\_Q” on page 475

**Parametric Measurement Function****hpe5022\_parametricHfTaaStatistic\_Q****C Syntax**

```
ViStatus hpe5022_parametricHfTaaStatistic_Q(ViSession id, ViInt16
dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);
```

**Visual Basic Syntax**

```
hpe5022_parametricHfTaaStatistic_Q(ByVal id As Long, ByVal dataType As
Integer, ByRef mean As Double, ByRef min As Double, ByRef max As Double,
ByRef stdDev As Double) As Long
```

**Description**

This function reports the statistics (mean, minimum, maximum and standard deviation) of the TAA parametric measurement. The data returned by the “hpe5022\_parametricHfTaaData\_Q” function is used for statistic analysis.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry

- mean

Description Returns the mean value. The returned value is the same as the corresponding values returned by the “hpe5022\_parametricHfTaa\_Q” function.

Direction OUT

Unit Volt

- min

Description Returns the minimum value.

Direction OUT

Unit Volt

- **max**  
 Description Returns the maximum value.  
 Direction OUT  
 Unit Volt
- **stdDev**  
 Description Returns the standard deviation value.  
 Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘dataType’ is out of range.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

**See Also** “hpe5022\_parametricHfTaaData\_Q” on page 476

**Parametric Measurement Function****hpe5022\_parametricLfTaa\_Q****C Syntax**

```
ViStatus hpe5022_parametricLfTaa_Q(ViSession id, ViPReal64 taa, ViPReal64
taaPos, ViPReal64 taaNeg, ViPReal64 taaAsym);
```

**Visual Basic Syntax**

```
hpe5022_parametricLfTaa_Q(ByVal id As Long, ByRef taa As Double, ByRef
taaPos As Double, ByRef taaNeg As Double, ByRef taaAsym As Double,) As
Long
```

**Description**

This function returns the TAA, the TAA positive (TAA+), the TAA negative (TAA-) and the TAA asymmetry of the measurement using LF data pattern.

Each result is the mean of the corresponding parameter of the “hpe5022\_parametricLfTaaData\_Q” function.

**Parameters**

- id
 

Description	Handle
Direction	IN
- taa
 

Description	Returns the LF TAA.
Direction	OUT
Unit	Volt
- taaPos
 

Description	Returns the LF TAA positive.
Direction	OUT
Unit	Volt
- taaNeg
 

Description	Returns the LF TAA negative.
Direction	OUT
Unit	Volt
- taaAsym
 

Description	Returns the LF TAA asymmetry.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error



Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureParametric” on page 466

“hpe5022\_setupParametric” on page 469

“hpe5022\_parametricLfTaaData\_Q” on page 483

## hpe5022\_parametricLfTaaDataSize\_Q

- C Syntax** ViStatus hpe5022\_parametricLfTaaDataSize\_Q(ViSession id, ViPInt32 size);
- Visual Basic Syntax** hpe5022\_parametricLfTaaDataSize\_Q(ByVal id As Long, ByRef size As Long) As Long
- Description** This function returns the array size of the LF TAA data returned by the “hpe5022\_parametricLfTaaData\_Q” function.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - size
    - Description Returns the size of the LF TAA data.  
The size is the same as the value of ‘ave’ specified by the “hpe5022\_measureParametric” or “hpe5022\_setupParametric” function if the measurement is done properly.
    - Direction OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

- See Also** “hpe5022\_parametricLfTaaData\_Q” on page 483  
“hpe5022\_measureParametric” on page 466  
“hpe5022\_setupParametric” on page 469

## hpe5022\_parametricLfTaaData\_Q

### C Syntax

```
ViStatus hpe5022_parametricLfTaaData_Q(ViSession id, ViInt16
dataType, ViReal64 data[]);
```

### Visual Basic Syntax

```
hpe5022_parametricLfTaaData_Q(ByVal id As Long, ByVal dataType As Integer,
ByRef data As Double) As Long
```

### Description

This function returns the LF TAA data of the measurement for each revolution.

When the 'ave' parameter in the "hpe5022\_measureParametric" or the "hpe5022\_setupParametric" function is set to more than one, the function allows you to get the LF TAA data for each revolution. If the 'ave' is set to 1, the output of this function will be the same as the "hpe5022\_parametricLfTaa\_Q" function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- dataType
 

Description	Specifies the type of data to be reported.
Direction	IN
Values	

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry

- data
 

Description	Returns the data array of the parameter specified by the 'dataType'. The array size is returned by the "hpe5022_parametricLfTaaData_Q" function.
Direction	OUT
Unit	Volt (except for TAA asymmetry)

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

**Parametric Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘dataType’ is out of range.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureParametric” on page 466

“hpe5022\_setupParametric” on page 469

“hpe5022\_parametricLfTaaDataSize\_Q” on page 482

“hpe5022\_parametricLfTaa\_Q” on page 480

## hpe5022\_parametricLfTaaStatistic\_Q

### C Syntax

ViStatus hpe5022\_parametricLfTaaStatistic\_Q(ViSession id, ViInt16 dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

### Visual Basic Syntax

hpe5022\_parametricLfTaaStatistic\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

### Description

This function reports the statistics (mean, minimum, maximum and standard deviation) of the LF TAA parametric measurement. The data returned by the “hpe5022\_parametricLfTaaData\_Q” function is used for statistic analysis.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

- dataType
 

Description	Specifies the type of data to be reported.
Direction	IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry

- mean
 

Description	Returns the mean value. The returned value is the same as the corresponding values returned by the “hpe5022_parametricLfTaa_Q” function.
Direction	OUT
Unit	Volt

- min
 

Description	Returns the minimum value.
Direction	OUT
Unit	Volt

## Function Reference

### Parametric Measurement Function

- max

Description Returns the maximum value.

Direction OUT

Unit Volt

- stdDev

Description Returns the standard deviation value.

Direction OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘datatype’ is out of range.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

### See Also

“hpe5022\_parametricLfTaaData\_Q” on page 483

## hpe5022\_parametricIsolatedPulseTaa\_Q

**C Syntax** ViStatus hpe5022\_parametricIsolatedPulseTaa\_Q(ViSession id, ViPReal64 taa, ViPReal64 taaPos, ViPReal64 taaNeg, ViPReal64 taaAsym);

**Visual Basic Syntax** hpe5022\_parametricIsolatedPulseTaa\_Q(ByVal id As Long, ByRef taa As Double, ByRef taaPos As Double, ByRef taaNeg As Double, ByRef taaAsym As Double,) As Long

**Description** This function returns the TAA, the TAA positive (TAA+), the TAA negative (TAA-) and the TAA asymmetry of the measurement using isolated pulse data pattern. Each result is the mean of the corresponding parameter of the “hpe5022\_parametricIsolatedPulseTaaData\_Q” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- taa
 

Description	Returns TAA of the isolated pulse data pattern.
Direction	OUT
Unit	Volt
- taaPos
 

Description	Returns TAA positive of the isolated pulse data pattern.
Direction	OUT
Unit	Volt
- taaNeg
 

Description	Returns TAA negative of the isolated pulse data pattern.
Direction	OUT
Unit	Volt
- taaAsym
 

Description	Returns TAA asymmetry of the isolated data pattern.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Parametric Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureParametric” on page 466

“hpe5022\_setupParametric” on page 469

“hpe5022\_parametricIsolatedPulseTaaData\_Q” on page 490



## hpe5022\_parametricIsolatedPulseTaaDataSize\_Q

**C Syntax** ViStatus hpe5022\_parametricIsolatedPulseTaaDataSize\_Q(ViSession id, ViPInt32 size);

**Visual Basic Syntax** hpe5022\_parametricIsolatedPulseTaaDataSize\_Q(ByVal id As Long, ByRef size As Long) As Long

**Description** This function returns the array size of the isolated pulse TAA data returned by the “hpe5022\_parametricIsolatedPulseTaaData\_Q” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  
- size
 

Description	Returns the size of the isolated pulse TAA data.  The size is the same as the value of ‘ave’ as specified by the “hpe5022_measureParametric” or “hpe5022_setupParametric” function if the measurement is done properly.
Direction	IN

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_parametricIsolatedPulseTaaData\_Q” on page 490  
 “hpe5022\_measureParametric” on page 466  
 “hpe5022\_setupParametric” on page 469

**Parametric Measurement Function****hpe5022\_parametricIsolatedPulseTaaData\_Q****C Syntax**

```
ViStatus hpe5022_parametricIsolatedPulseTaaData_Q(ViSession id, ViInt16
dataType, ViReal64 data[]);
```

**Visual Basic Syntax**

```
hpe5022_parametricIsolatedPulseTaaData_Q(ByVal id As Long, ByVal dataType
As Integer, ByRef data As Double) As Long
```

**Description**

This function returns the isolated pulse TAA data of the measurement for each revolution.

When the 'ave' parameter in the "hpe5022\_measureParametric" or the "hpe5022\_setupParametric" function is set to more than one, this function allows you to get the isolated pulse TAA data for each revolution. If 'ave' is set to 1, the output of this function will be the same as the "hpe5022\_parametricIsolatedPulseTaaData\_Q" function.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry

- data

Description Returns the data array of the parameter specified by the 'dataType'. The array size is returned by the "hpe5022\_parametricIsolatedPulseTaaDataSize\_Q" function.

Direction OUT

Unit Volt (except for TAA asymmetry)

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘dataType’ is out of range.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureParametric” on page 466

“hpe5022\_setupParametric” on page 469

“hpe5022\_parametricIsolatedPulseTaaDataSize\_Q” on page 489

“hpe5022\_parametricIsolatedPulseTaaData\_Q” on page 490

**Parametric Measurement Function****hpe5022\_parametricIsolatedPulseTaaStatistic\_Q****C Syntax**

```
ViStatus hpe5022_parametricIsolatedPulseTaaStatistic_Q(ViSession id, ViInt16
dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);
```

**Visual Basic Syntax**

```
hpe5022_parametricIsolatedPulseTaaStatistic_Q(ByVal id As Long, ByVal
dataType As Integer, ByRef mean As Double, ByRef min As Double, ByRef max
As Double, ByRef stdDev As Double) As Long
```

**Description**

This function reports the statistics (mean, minimum, maximum and standard deviation) of the isolated pulse TAA measurement. The data returned by the “hpe5022\_parametricIsolatedPulseTaaData\_Q” function is used for statistic analysis.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry

- mean

Description Returns the mean value. The returned value is the same as the corresponding values returned by the “hpe5022\_parametricIsolatedPulseTaa\_Q” function.

Direction OUT

Unit Volt

- min

Description Returns the minimum value.

Direction OUT

Unit Volt

- **max**  
 Description Returns the maximum value.  
 Direction OUT  
 Unit Volt
- **stdDev**  
 Description Returns the standard deviation value.  
 Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘dataType’ is out of range.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_parametricIsolatedPulseTaaData\_Q”

**Parametric Measurement Function****hpe5022\_parametricPw\_Q****C Syntax**

```
ViStatus hpe5022_parametricPw_Q(ViSession id, ViPReal64 pw, ViPReal64
pwPos, ViPReal64 pwNeg, ViPReal64 pwAsym);
```

**Visual Basic Syntax**

```
hpe5022_parametricPw_Q(ByVal id As Long, ByRef pw As Double, ByRef
pwPos As Double, ByRef pwNeg As Double, ByRef pwAsym As Double,) As
Long
```

**Description**

This function returns the PW, the PW positive (PW+), the PW negative (PW-) and the PW asymmetry of the measurement using the isolated pulse data pattern. Each result is the mean of the corresponding parameter of the “hpe5022\_parametricPwData\_Q” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- pw
 

Description	Returns the PW.
Direction	OUT
Unit	Second
- pwPos
 

Description	Returns the positive value of PW.
Direction	OUT
Unit	Second
- pwNeg
 

Description	Returns the negative value of PW.
Direction	OUT
Unit	Second
- pwAsym
 

Description	Returns the PW asymmetry.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureParametric” on page 466

“hpe5022\_setupParametric” on page 469

“hpe5022\_parametricPwData\_Q” on page 497

## **hpe5022\_parametricPwDataSize\_Q**

- C Syntax** `ViStatus hpe5022_parametricPwDataSize_Q(ViSession id,ViPInt32 size);`
- Visual Basic Syntax** `hpe5022_parametricPwDataSize_Q(ByVal id As Long, ByRef size As Long) As Long`
- Description** This function returns the array size of PW data returned by the “hpe5022\_parametricPwData\_Q” function.
- Parameters**
- **id**
    - Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction** IN
  - **size**
    - Description** Returns the size of the PW data.  
The size will be the same as the value of ‘ave’ specified by the “hpe5022\_measureParametric” or “hpe5022\_setupParametric” function if the measurement is done properly.
    - Direction** OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

- See Also** “hpe5022\_measureParametric” on page 466  
“hpe5022\_setupParametric” on page 469  
“hpe5022\_parametricPwData\_Q” on page 497



## hpe5022\_parametricPwData\_Q

**C Syntax** ViStatus hpe5022\_parametricPwData\_Q(ViSession id, ViInt16 dataType, ViReal64 data[]);

**Visual Basic Syntax** hpe5022\_parametricPwData\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long

**Description** This function returns the PW data of the measurement for each revolution. When the 'ave' parameter in the "hpe5022\_measureParametric" or the "hpe5022\_setupParametric" function is set to more than one, the function allows you to get the PW data for each revolution. If 'ave' is set to 1, the output of this function will be the same as one of the "hpe5022\_parametricPwData\_Q" function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

- dataType
 

Description	Specifies the type of data to be reported.
Direction	IN

Values

Name	Value	Description
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry

- data
 

Description	Returns the data array of the parameter specified by the 'dataType'. The array size is returned by the "hpe5022_parametricPwDataSize_Q" function.
Direction	OUT
Unit	Second (except for PW asymmetry)

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Parametric Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘dataType’ is out of range.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureParametric” on page 466

“hpe5022\_setupParametric” on page 469

“hpe5022\_parametricPwData\_Q” on page 497

“hpe5022\_parametricPwDataSize\_Q” on page 496

## hpe5022\_parametricPwStatistic\_Q

### C Syntax

```
ViStatus hpe5022_parametricPwStatistic_Q(ViSession id, ViInt16
dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);
```

### Visual Basic Syntax

```
hpe5022_parametricPwStatistic_Q(ByVal id As Long, ByVal dataType As Integer,
ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef
stdDev As Double) As Long
```

### Description

This function reports the statistics (mean, minimum, maximum and standard deviation) of the parametric PW measurement. The data returned by the “hpe5022\_parametricPwData\_Q” function is used for statistic analysis.

### Parameters

- id**  
 Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType**  
 Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry

- mean**  
 Description Returns the mean value. The returned value is the same as the corresponding values returned by the “hpe5022\_parametricPw\_Q” function.

Direction OUT

Unit Second

- min**  
 Description Returns the minimum value.

Direction OUT

Unit Second

## Function Reference

### Parametric Measurement Function

- max

Description Returns the maximum value.

Direction OUT

Unit Second

- stdDev

Description Returns the standard deviation value.

Direction OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘dataType’ is out of range.
hpe5022_ERROR_DATA_CORRUPT	The parametric data is corrupt. Check if your measurement sequence is correct.

### See Also

“hpe5022\_parametricPwData\_Q” on page 497

## Resolution Measurement Function

This section describes the functions related with resolution measurement. The baseline measurement in this function category is measured by the parametric module.

### hpe5022\_measureResolution

#### C Syntax

```
ViStatus hpe5022_measureResolution(ViSession id, ViInt16 ave);
```

#### Visual Basic Syntax

```
hpe5022_measureResolution(ByVal id As Long, ByVal ave As Integer) As Long
```

#### Description

This function measures the resolution. The measurement sequences are as follows:

1. Move the head to the write track offset position specified by the “hpe5022\_writeTrackOffset” function.
2. Perform a erase (same as the hpe5022\_erase function) for an entire track.
3. Write a HF data pattern specified by the “hpe5022\_hfPattern” function for an entire track at the write track offset position.
4. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset” function.
5. Measure a TAA parameter for the HF data pattern.
6. Move the head to the write track offset position.
7. Perform a erase (same as the hpe5022\_erase function) for an entire track.
8. Write LF data pattern specified by the “hpe5022\_lfPattern” function for an entire track at the write track offset position.
9. Move the head to the read track offset position.
10. Measure a TAA parameter for the LF data pattern.
11. Repeat the steps 1 to 10 ‘ave’ (see parameters) times if it is more than 1.

The data patterns HF and LF are used automatically. The data pattern specified by the “hpe5022\_selectPattern” function is not used for this measurement.

The “hpe5022\_resolution\_Q” function returns the measurement result.

#### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- ave

**Resolution Measurement Function**

Description Specifies the number of measurements for averaging.

Direction IN

Values

Name	Value
hpe5022_RESO_COUN_MIN	1
hpe5022_RESO_COUN_MAX	50

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	A hardware error is detected on the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'ave' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand had been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

See "hpe5022\_resolution\_Q" on page 506.

See "hpe5022\_readTrackOffset" on page 219.

See "hpe5022\_writeTrackOffset" on page 222.

See "hpe5022\_hfPattern" on page 122.

See "hpe5022\_lfPattern" on page 124.

See “hpe5022\_selectPattern” on page 119.

## **hpe5022\_setupResolution**

### **C Syntax**

```
ViStatus hpe5022_setupResolution(ViSession id, ViIny16 ave, ViPObject testHndl);
```

### **Visual Basic Syntax**

```
hpe5022_setupResolution(ByVal id As Long, ByVal ave As Integer, ByVal testHndl As Long) As Long
```

### **Description**

This function assigns the resolution measurement sequence to the specified test identifier. See the “hpe5022\_measureResolution” function for details of the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_resolution\_Q” function returns the measurement result

### **Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- ave
 

Description	Specifies the number of measurements for averaging.
Direction	IN
Values	Same as 'ave' in the “hpe5022_measureResolution” function.
- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the resolution measurement by the “hpe5022_measure” function.
Direction	OUT

### **Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'ave' is out of range.



Error Code	Description
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_measureResolution” on page 501

“hpe5022\_resolution\_Q” on page 506

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

## **hpe5022\_resolution\_Q**

### **C Syntax**

ViStatus hpe5022\_resolution\_Q(ViSession id, ViPReal64 res);

### **Visual Basic Syntax**

hpe5022\_resolution\_Q(ByVal id As Long, ByRef res As Double) As Long

### **Description**

This function returns the result of the resolution measurement sequence. See chapter 5 in the Operation Manual for the definition of this parameter.

Each result is the mean value of the corresponding parameter of the “hpe5022\_resolutionData\_Q” function.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- res
  - Description Returns the result of the resolution measurement.
  - Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The resolution data is corrupt. Check if your measurement sequence is correct.

### **See Also**

“hpe5022\_measureResolution” on page 501

“hpe5022\_setupResolution” on page 504

## hpe5022\_resolutionDataSize\_Q

### C Syntax

ViStatus hpe5022\_resolutionDataSize\_Q(ViSession id, ViInt32 size);

### Visual Basic Syntax

hpe5022\_resolutionDataSize\_Q(ByVal id As Long, ByRef size As Long) As Long

### Description

This function returns the array size of resolution data returned by the “hpe5022\_resolutionData\_Q” function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- size
 

Description	Returns the size of the resolution data.  The size is the same as the value of ‘ave’ specified by the “hpe5022_measureResolution” or “hpe5022_setupResolution” function if the measurement is done properly.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The resolution data is corrupt. Check if your measurement sequence is correct.

### See Also

- “hpe5022\_resolutionData\_Q” on page 508
- “hpe5022\_measureResolution” on page 501
- “hpe5022\_setupResolution” on page 504

## **hpe5022\_resolutionData\_Q**

### **C Syntax**

```
ViStatus hpe5022_resolutionData_Q(ViSession id, ViReal64 data[]);
```

### **Visual Basic Syntax**

```
hpe5022_resolutionData_Q(ByVal id As Long, ByRef data As Double) As Long
```

### **Description**

This function returns the resolution data of the measurement results.

When the ‘ave’ parameter in the “hpe5022\_measureResolution” or the “hpe5022\_setupResolution” function is set to more than one, the function allows you to get the resolution data for each revolution. If the ‘ave’ is set to 1, the output of this function will be the same as one of the “hpe5022\_resolution\_Q” function.

### **Parameters**

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **data**

Description	Returns the resolution data in array. The array size is returned by the “hpe5022_resolutionDataSize_Q” function.
Direction	OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The resolution data is corrupt. Check if your measurement sequence is correct.

### **See Also**

- “hpe5022\_measureResolution” on page 501
- “hpe5022\_setupResolution” on page 504
- “hpe5022\_resolution\_Q” on page 506
- “hpe5022\_resolutionDataSize\_Q” on page 507

## hpe5022\_resolutionStatistic\_Q

### C Syntax

ViStatus hpe5022\_resolutionStatistic\_Q(ViSession id, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

### Visual Basic Syntax

hpe5022\_resolutionStatistic\_Q(ByVal id As Long, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

### Description

This function reports the statistics (mean, minimum, maximum and standard deviation) of the resolution measurement. The data returned by the “hpe5022\_resolutionData\_Q” function is used for statistic analysis.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- mean
 

Description	Returns the mean value. The returned value is the same as the corresponding values returned by the “hpe5022_resolution_Q” function.
Direction	OUT
- min
 

Description	Returns the minimum value.
Direction	OUT
- max
 

Description	Returns the maximum value.
Direction	OUT
- stdDev
 

Description	Returns the standard deviation value.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Function Reference  
**Resolution Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_DATA_CORRUPT	The resolution data is corrupt. Check if your measurement sequence is correct.

**See Also** “hpe5022\_resolutionData\_Q” on page 508

## Stability Measurement Function (Ratio Setting)

This section describes the functions related with the stability measurement. This measurement allows you to observe the TAA, the PW and the narrow band TAA variations during many write-read iterations. Ratio Setting means that the period of write/read is defined by ratio.

### hpe5022\_stabilityConfig

#### C Syntax

```
ViStatus hpe5022_stabilityConfig(ViSession id, ViInt16 isMode, ViReal64 writeRatio, ViReal64 readRatio);
```

#### Visual Basic Syntax

```
hpe5022_stabilityConfig(ByVal id As Long, ByVal isMode As Integer, ByVal writeRatio As Double, ByVal readRatio As Double) As Long
```


#### Description

This function controls the sense current polarity, the write aperture ratio and the read aperture ratio for stability measurement.

The sense current polarity can be selected only when the head amplifier has that capability. The write aperture ratio is defined as the length of write excitation in one segment/sector. Read aperture ratio is defined as the length of the read operation in a segment (sector). Idle period stands in the gap between write excitation and read operation as shown in Figure 3-16. Idle periods have the same length in between write/read iterations.

Figure 3-16

Read and Write Ratios

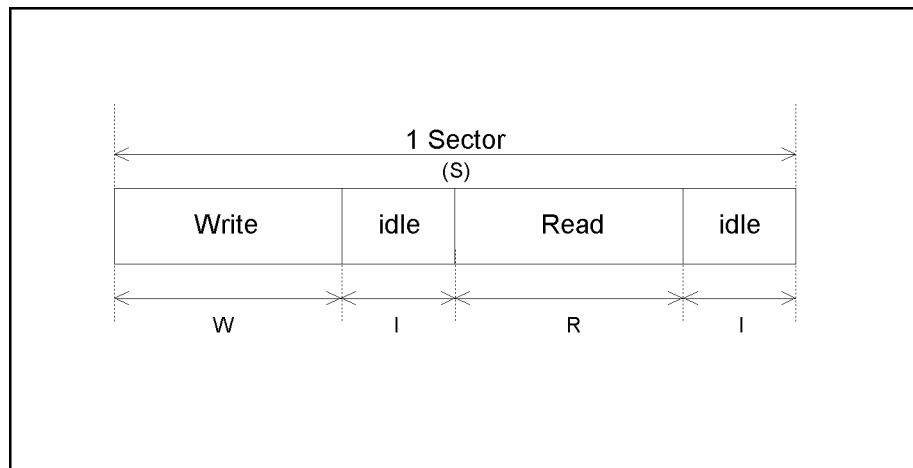

e5022ape03006

The value of 'writeRatio' + 'readRatio' must be less than the value of (hpe5022\_TAA\_STABILITY\_RATIO\_MAX + hpe5022\_TAA\_STABILITY\_RATIO\_MIN)

#### Parameters

**Stability Measurement Function (Ratio Setting)**

## • id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

## • isMode

Description Specifies the sense current polarity at write operation. When "hpe5022\_STABILITY\_IS\_POL\_REV" is selected, the direction of sense current is reversed. When "hpe5022\_STABILITY\_IS\_OFF" is selected, the sense current is set to zero. Some head amplifier does not have the capability to operate at reverse and off sense current modes.

This setting is used for the stability measurement instead of the setting of "hpe5022\_senseCurrentPolarity" function. When this function is not executed, the setting of "hpe5022\_senseCurrentPolarity" is used for the stability measurement (Ratio Setting).

Direction IN

Preset value hpe5022\_STABILITY\_IS\_POL\_NORM

Values

Name	Value	Description
hpe5022_STABILITY_IS_POL_NORM	0	Same polarity
hpe5022_STABILITY_IS_POL_REV	1	Reverse polarity
hpe5022_STABILITY_IS_OFF	2	Off Mode

## • writeRatio

Description Specifies the write aperture ratio.

Direction IN

Preset value 0.4

Values

Name	Value
hpe5022_STABILITY_RATIO_MIN	0.01
hpe5022_STABILITY_RATIO_MAX	0.98

## • readRatio

Description Specifies the read aperture ratio.

Direction IN



Preset value      0.4

Values

Name	Value
hpe5022_STABILITY_RATIO_MIN	0.01
hpe5022_STABILITY_RATIO_MAX	0.98

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameters 'isMode', 'writeRatio' and/or 'readRatio' are out of range.
hpe5022_ERROR_NSUP_SENS_CURR_POL	The head does not support the reverse polarity and off modes. Select hpe5022_STABILITY_IS_POL_NO RM for 'isMode' parameter.

**See Also**

- “hpe5022\_stabilityConfig\_Q” on page 514
- “hpe5022\_measureStability” on page 524
- “hpe5022\_setupStability” on page 529
- “hpe5022\_senseCurrentPolarity” on page 340

**Stability Measurement Function (Ratio Setting)****hpe5022\_stabilityConfig\_Q****C Syntax**

```
ViStatus hpe5022_stabilityConfig_Q(ViSession id, ViPInt16 isMode, ViPReal64
writeRatio, ViPReal64 readRatio);
```

**Visual Basic Syntax**

```
hpe5022_stabilityConfig_Q(ByVal id As Long, ByRef isMode As Integer, ByRef
writeRatio As Double, ByRef readRatio As Double) As Long
```

**Description**

This function returns the specified sense current polarity, the write aperture ratio and the read aperture ratio for stability measurement.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- isMode
 

Description	Returns the specified sense current polarity.
Direction	IN
Values	Same as the 'isMode' in the "hpe5022_stabilityConfig""hpe5022_stabilityConfig" function.
- writeRatio
 

Description	Returns the write aperture ratio.
Direction	OUT
- readRatio
 

Description	Returns the read aperture ratio.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

"hpe5022\_stabilityConfig" on page 511

## hpe5022\_stabilitySequenceConfig

**C Syntax** ViStatus hpe5022\_stabilitySequenceConfig(ViSession id, ViInt16 seqType);

**Visual Basic Syntax** hpe5022\_stabilitySequenceConfig(ByVal id As Long, ByVal seqType As Integer) As Long

**Description** This function specifies the type of sequence.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Specifies the type of sequence. When the "hpe5022_SEQ_M" is selected, the erase and write sequences are not executed.
Direction	IN
Preset value	hpe5022_SEQ_ER_WR_M

Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Erase->Write->Excitation and Measurement
hpe5022_SEQ_M	2	Excitation and Measurement

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameters 'seqType' is out of range.

**See Also**

"hpe5022\_measureStability" on page 524  
 "hpe5022\_setupStability" on page 529

**Stability Measurement Function (Ratio Setting)****hpe5022\_stabilitySequenceConfig\_Q****C Syntax**

```
ViStatus hpe5022_stabilitySequenceConfig_Q(ViSession id, ViPInt16 seqType);
```

**Visual Basic Syntax**

```
hpe5022_stabilitySequenceConfig_Q(ByVal id As Long, ByRef seqType As Integer) As Long
```

**Description**

This function returns the type of sequence.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Returns the type of sequence.
Direction	OUT
Values	Same as the 'seqType' of "hpe5022_stabilitySequenceConfig"

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

"hpe5022\_stabilitySequenceConfig" on page 515

## hpe5022\_stabilityWritePatternConfig

**C Syntax** ViStatus hpe5022\_stabilityWritePatternConfig(ViSession id, ViInt16 writePat);

**Visual Basic Syntax** hpe5022\_stabilityWritePatternConfig(ByVal id As Long, ByVal writePat As Integer) As Long

**Description** This function specifies the stimulus write pattern written along the sector(segment) of the track whose length is specified by the write ratio. Nineteen data patterns are supported by this function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- writePat
 

Description	Specifies the data pattern used for writing.
Direction	IN
Preset value	hpe5022_PAT_DEFAULT

Values

Name	Value	Description
hpe5022_PAT_DEFAULT	-1	Default pattern
hpe5022_PAT_HF	0	HF pattern
hpe5022_PAT_LF	1	LF pattern
hpe5022_PAT_ISO	2	Isolated pulse pattern
hpe5022_PAT_PRBS	3	Pseudo random pattern
hpe5022_PAT_REP	4	Repetitive pattern
hpe5022_PAT_NLTS_5TH	5	NLTS 5th pattern
hpe5022_PAT_OWHF	6	Overwrite HF pattern
hpe5022_PAT_OWLF	7	Overwrite LF pattern
hpe5022_PAT_REP_2	8	Repetition Pattern2
hpe5022_PAT_REP_3	9	Repetition Pattern3
hpe5022_PAT_REP_4	10	Repetition Pattern4
hpe5022_PAT_USER	20	User-defined Pattern
hpe5022_PAT_USER_2	21	User-defined Pattern2
hpe5022_PAT_USER_3	22	User-defined Pattern3

**Stability Measurement Function (Ratio Setting)**

Name	Value	Description
hpe5022_PAT_USER_4	23	User-defined Pattern4
hpe5022_PAT_ERASE	101	Default Erase Pattern selected by the “hpe5022_eraseType” function
hpe5022_PAT_ERASE_DC_NEG	102	DC- Erase Pattern
hpe5022_PAT_ERASE_DC_POS	103	DC+ Erase Pattern
hpe5022_PAT_ERASE_AC	104	AC Erase Pattern

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter writePat is out of range.

**See Also**

“hpe5022\_stabilityWritePatternConfig\_Q” on page 519

## **hpe5022\_stabilityWritePatternConfig\_Q**

**C Syntax** ViStatus hpe5022\_stabilityWritePatternConfig\_Q(ViSession id, ViPInt16 writePat);

**Visual Basic Syntax** hpe5022\_stabilityWritePatternConfig\_Q(ByVal id As Long, ByRef writePat As Integer) As Long

**Description** This function returns the write data pattern specified by the “hpe5022\_stabilityWritePatternConfig” function for stability measurement.

- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - writePat
 

Description	Returns the specified write pattern of the “hpe5022_stabilityWritePatternConfig”.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.

**See Also** “hpe5022\_stabilityWritePatternConfig” on page 517

**Stability Measurement Function (Ratio Setting)****hpe5022\_stabilityWriteModeConfig****C Syntax**

```
ViStatus hpe5022_stabilityWriteModeConfig(ViSession id, ViInt16 writeMode);
```

**Visual Basic Syntax**

```
hpe5022_stabilityWriteModeConfig(ByVal id As Long, ByVal writeMode As Integer) As Long
```

**Description**

This function controls the write current direction at the beginning of write operation.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- writeMode

**Description** Specifies the write current direction at the beginning of write operation.


**Direction** IN

**Values**

<b>Name</b>	<b>Value</b>	<b>Description</b>
hpe5022_WRIT_DATA_POL_FIXED	0	The write current direction at the beginning of each write operation is always the same.
hpe5022_WRIT_DATA_POL_CONTINUOUS	1	The write current direction at the beginning of write operation is the same as the last current direction of the previous write operation.



**Figure 3-17 Write Mode**

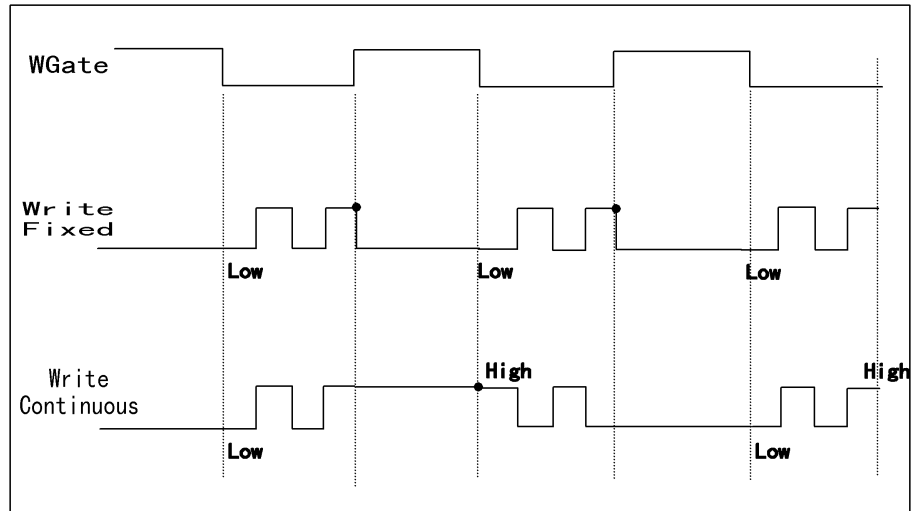

When [Write Mode] is set to “fixed”, the write current direction at the beginning of each write operation is always the same. On the other hand, when [Write Mode] is set to “continuous” the write current direction is the same as the last current direction of the previous write operation. Each time the write current alternates it allows you to check the polarity of the output pulse at the end of the previous write. You must set the repetitive period of the data pattern T to 1T, 2T, 4T and 8T due to the system’s internal constraints. If you use other repetitive periods of the data pattern, E5022A/B system can not guarantee the change of write current polarity. This function makes it possible for popcorn noise measurement (i.e. failcount) to achieve an acceptable level of TAA under similar usage of the drive. Before this function was introduced, the write current direction always starts at a constant direction, thus you can only observe one side of the output.

Function Reference

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘writeMode’ is invalid.
hpe5022_ERROR_NSUP_CONF	The installed head amplifier has no capability to control the write current direction.

**See Also** “hpe5022\_stabilityWriteModeConfig\_Q” on page 522

**Stability Measurement Function (Ratio Setting)****hpe5022\_stabilityWriteModeConfig\_Q****C Syntax**

```
ViStatus hpe5022_stabilityWritePatternConfig_Q(ViSession id, ViPInt16
writeMode);
```

**Visual Basic Syntax**

```
hpe5022_stabilityWritePatternConfig_Q(ByVal id As Long, ByRef writeMode As
Integer) As Long
```

**Description**

This function returns the write current direction at the beginning of write operation.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- writeMode

**Description** Returns the specified write current direction at the beginning of write operation.

**Direction** OUT

**Values**

Name	Value	Description
hpe5022_WRIT_DATA_POL_FIXED	0	The write current direction at the beginning of each write operation is always the same.
hpe5022_WRIT_DATA_POL_CONTINUOUS	1	The write current direction at the beginning of write operation is the same as the last current direction of the previous write operation.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Error Code	Description
hpe5022_ERROR_INV_PARAMETER	The parameter 'writeMode' is invalid.

**See Also**

“hpe5022\_stabilityWriteModeConfig” on page 520

**Stability Measurement Function (Ratio Setting)****hpe5022\_measureStability****C Syntax**

```
ViStatus hpe5022_measureStability(ViSession id, ViInt16 measFunc, ViInt16
segment, ViInt16 rev);
```

**Visual Basic Syntax**

```
hpe5022_measureStability(ByVal id As Long, ByVal measFunc As Integer, ByVal
segment As Integer, ByVal rev As Integer) As Long
```

**Description**

This function measures the stability. This allows you to divide a track into some segments to get many write-read iterations. The sequence of this function is as follows:

1. Move the head to the write track offset position specified by the “hpe5022\_writeTrackOffset” function.
2. If ‘seqType’ of “hpe5022\_stabilitySequenceConfig” function is set at “hpe5022\_SEQ\_ER\_WR\_M”, erase (same as the “hpe5022\_erase” function) for an entire track.
3. If ‘seqType’ of “hpe5022\_stabilitySequenceConfig” function is set at “hpe5022\_SEQ\_ER\_WR\_M”, write the data pattern as specified by the “hpe5022\_selectPattern” function.
4. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset” function.
5. Set i to zero. (i = 0): a number of revolutions.
6. Set j to zero. (j = 0): a number of segments.
7. Write the data pattern as specified by the “hpe5022\_stabilityWritePatternConfig” function during the write ratio period in segment (No. i). The write ratio is specified by the “hpe5022\_stabilityConfig” function.
8. Wait for the delay time to elapse.
9. Measure the specified parameter (specified by ‘measFunc’) for the read ratio period in segment (No. i). The read ratio is specified by the “hpe5022\_stabilityConfig” function.
10. Increment j by 1. (j = j+1)
11. If j is less than ‘segment’ (see parameters), go to the step 7.
12. Increment i by 1. (i = i +1)
13. If j is less than ‘rev’ (see parameters), go to the step 6.

The “hpe5022\_stabilityData\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
-------------	--------------------------------------------------------------------------------

Direction IN

- measFunc

Description Specifies the type of measurement.

Direction IN

Values

Name	Value	Description
hpe5022_MEAS_TAA	1	Measure TAA
hpe5022_MEAS_PW	2	Measure PW
hpe5022_MEAS_NB_TAA	3	Measure Narrow Band TAA

- segment

Description Specifies the number of segments per track, i.e., the number of times a track is divided. If the measurement function is “hpe5022\_MEAS\_NB\_TAA”, then segment must be 1 (“hpe5022\_SEG\_PER\_TRACK\_MIN”). Only one measurement per revolution i.e. not sectored.

Direction IN

Values


Name	Value
hpe5022_SEG_PER_TRACK_MIN	1
hpe5022_SEG_PER_TRACK_MAX	80

Gate Time Limitations
track time = (60/rpm) -aper (aper is specified by the hpe5022_trackOffsetComPattern function.) aper = 0 when the stat of the hpe5022_trackOffset CompPattenState is set at VI_FALSE.
gateTime = 60/ RPM/ segment (i.e., gateTime ≥ 150 μsec.)
rpm = spindle speed (where spindle speed ≥ 2400 rpm) = 2400 rpm (where spindle speed < 2400)
writeRatio × gateTime ≥ 1.0 μsec.
(1-writeRatio) × gateTime ≥ 100 μsec. (where ‘segment’ ≥ 1)

**Stability Measurement Function (Ratio Setting)**

Gate Time Limitations
<p><b>(for TAA and PW Measurement)</b></p> $\text{gateTime} \times (1 - (\text{writeRatio} + \text{readRatio})) / 2 \geq 30 \mu\text{sec.}$ $\text{readRatio} \times \text{gateTime} \geq 20 \mu\text{sec.}$
<p><b>(for Narrow Band TAA Measurement)</b></p> $\text{gateTime} \times (1 - (\text{writeRatio} + \text{readRatio})) / 2 \geq 100 \mu\text{sec.}$ $\text{readRatio} \times \text{gateTime} \geq 0.8 \text{ msec.}$

Example : where rpm = 10000, segment =40, period/rev =6 msec.

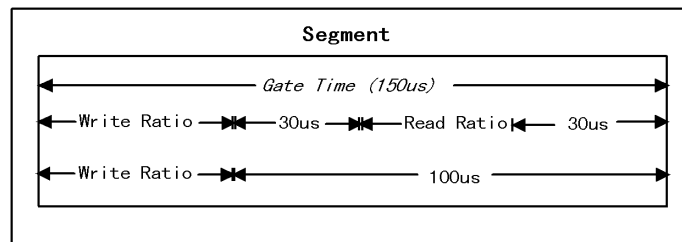

From the illustration above the following parameters will be assumed for computation:

1. WriteTime + ReadTime < 90 μsec.
2. Write Ratio ≤ 30% (i.e, Write Time ≤ 45 μsec.
3. Read Ratio ≤ 30% (i.e, Write Time ≤ 45 μsec.

When measuring TAA and PW, a 30μsec. delay time is required this is computed based from  $\text{gateTime} \times (1 - (\text{writeRatio} + \text{readRatio})) / 2 \geq 30 \mu\text{sec.}$  and the sum of Write Ratio and Read Ratio. Since the sum of Write Ratio and Read Ratio is 90 μsec. (i.e, [150-(30+30)]), the sum of Write Ratio and Read Ratio must be ≤ 60 % (i.e, [90/150=0.6]).

Also,  $(1 - \text{writeRatio}) \times \text{gateTime}$  must be ≥ 100 μsec, thus read time should be 40μsec.

- rev

Description Specifies the number of revolutions for measurement.

Direction IN

Values

Name	Value
hpe5022_STABILITY_REV_MIN	1
hpe5022_STABILITY_REV_MAX	100

Number of Counts	Value
$hpe5022\_STABILITY\_COUN\_MIN \leq \text{segment} \times \text{rev} \leq hpe5022\_STABILITY\_COUN\_MAX$	
<code>hpe5022_STABILITY_COUN_MIN</code>	1
<code>hpe5022_STABILITY_COUN_MAX</code>	1000

### Return Values

Completion Code	Description
<code>VI_SUCCESS</code>	No Error

Error Code	Description
<code>hpe5022_ERROR_CAL_DATA_CORRUPT</code>	Amplitude calibration for 3GHz Spectrum Analyzer has not been done.
<code>hpe5022_ERROR_HARD_HAMP</code>	Hardware error is detected in the head amplifier.
<code>hpe5022_ERROR_INV_ID</code>	The handle specified by 'id' is invalid.
<code>hpe5022_ERROR_INV_PARAMETER</code>	The parameter 'measFunc', 'sector' and/or 'rev' is out of range.
<code>hpe5022_ERROR_INV_DRIVE_CONDITION</code>	The spinstand drive has been turned off. Turn it on before this function is executed. See the "hpe5022_driveState" function.
<code>hpe5022_ERROR_OVERFLOW</code>	An overflow is detected in the parametric module. Check if the parameter setting is correct.
<code>hpe5022_ERROR_THERMAL_ASPERITY</code>	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.

**Stability Measurement Function (Ratio Setting)**

Error Code	Description
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

“hpe5022\_selectPattern” on page 119

“hpe5022\_driveState” on page 209

“hpe5022\_readTrackOffset” on page 219

“hpe5022\_writeTrackOffset” on page 222

“hpe5022\_stabilityConfig” on page 511

“hpe5022\_stabilityData\_Q” on page 531



## hpe5022\_setupStability

<b>C Syntax</b>	ViStatus hpe5022_setupStability(ViSession id, ViInt16 measFunc, ViInt16 segment, ViInt16 rev, ViPObject testHndl);																								
<b>Visual Basic Syntax</b>	hpe5022_setupStability(ByVal id As Long, ByVal measFunc As integer, ByVal segment As Integer, ByVal rev As Integer, ByRef testHndl As Long) As Long																								
<b>Description</b>	<p>This function assigns the stability measurement sequence to the specified test identifier. Refer to the “hpe5022_measureStability” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022_measure” function with the test identifier specified in this function.</p> <p>The “hpe5022_stabilityData_Q” function returns the measurement result.</p>																								
<b>Parameters</b>	<ul style="list-style-type: none"> <li>• id <table border="0" style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">Description</td> <td>Specifies the system identifier. This is given by the "hpe5022_init" function.</td> </tr> <tr> <td>Direction</td> <td>IN</td> </tr> </table> </li> <li>• measFunc <table border="0" style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">Description</td> <td>Specifies the type of measurement.</td> </tr> <tr> <td>Direction</td> <td>IN</td> </tr> <tr> <td>Values</td> <td>Same as the ‘measFunc’ in the “hpe5022_measureStability”“hpe5022_measureStability” function.</td> </tr> </table> </li> <li>• segment <table border="0" style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">Description</td> <td>Specifies the number of sector/segment per track.</td> </tr> <tr> <td>Direction</td> <td>IN</td> </tr> <tr> <td>Values</td> <td>Same as the ‘sector’ in the “hpe5022_measureStability”“hpe5022_measureStability” function.</td> </tr> </table> </li> <li>• rev <table border="0" style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">Description</td> <td>Specifies the number of revolutions of measurement.</td> </tr> <tr> <td>Direction</td> <td>IN</td> </tr> <tr> <td>Values</td> <td>Same as the ‘rev’ in the “hpe5022_measureStability”“hpe5022_measureStability” function.</td> </tr> </table> </li> <li>• testHndl <table border="0" style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">Description</td> <td>Returns the test identifier. This identifier is used to execute the stability measurement by the “hpe5022_measure”</td> </tr> </table> </li> </ul>	Description	Specifies the system identifier. This is given by the "hpe5022_init" function.	Direction	IN	Description	Specifies the type of measurement.	Direction	IN	Values	Same as the ‘measFunc’ in the “hpe5022_measureStability”“hpe5022_measureStability” function.	Description	Specifies the number of sector/segment per track.	Direction	IN	Values	Same as the ‘sector’ in the “hpe5022_measureStability”“hpe5022_measureStability” function.	Description	Specifies the number of revolutions of measurement.	Direction	IN	Values	Same as the ‘rev’ in the “hpe5022_measureStability”“hpe5022_measureStability” function.	Description	Returns the test identifier. This identifier is used to execute the stability measurement by the “hpe5022_measure”
Description	Specifies the system identifier. This is given by the "hpe5022_init" function.																								
Direction	IN																								
Description	Specifies the type of measurement.																								
Direction	IN																								
Values	Same as the ‘measFunc’ in the “hpe5022_measureStability”“hpe5022_measureStability” function.																								
Description	Specifies the number of sector/segment per track.																								
Direction	IN																								
Values	Same as the ‘sector’ in the “hpe5022_measureStability”“hpe5022_measureStability” function.																								
Description	Specifies the number of revolutions of measurement.																								
Direction	IN																								
Values	Same as the ‘rev’ in the “hpe5022_measureStability”“hpe5022_measureStability” function.																								
Description	Returns the test identifier. This identifier is used to execute the stability measurement by the “hpe5022_measure”																								

**Stability Measurement Function (Ratio Setting)**

function.

Direction      OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameters 'measFunc', 'sector' and/or 'rev' are out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

**See Also**

"hpe5022\_measureStability" on page 524

"hpe5022\_stabilityData\_Q" on page 531

"hpe5022\_stabilityConfig" on page 511

"hpe5022\_measure" on page 387

"hpe5022\_releaseSetup" on page 390

## hpe5022\_stabilityData\_Q

**C Syntax** ViStatus hpe5022\_stabilityData\_Q(ViSession id, ViInt16 segment\_no, ViInt16 dataType, ViReal64 data[]);

**Visual Basic Syntax** hpe5022\_stabilityData\_Q(ByVal id As Long, ByVal segment\_no As Integer, ByVal dataType As Integer, ByRef data As Double) As Long

**Description** This function returns the results of stability measurement. The returned data are set in array, and its size is specified by the 'rev' parameter in the "hpe5022\_measureStability" or "hpe5022\_setupStability" function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- segment\_no
 

Description	Specifies the sector number to query the measurement result. The sector number begins at 0.
Direction	IN
- dataType
 

Description	Specifies the type of data to be reported.
Direction	IN
Values	

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry
hpe5022_DATA_NB_TAA	15	Narrow Band TAA

**Stability Measurement Function (Ratio Setting)**

- data

**Description** Returns the data (set in array) at the sector specified by the 'sectorNo'. The size of array is specified by the 'rev' parameter in the "hpe5022\_measureStability" or "hpe5022\_setupStability" function.

**Direction** OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameters 'sectorNo' and/or 'dataType' are out of range.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.

**See Also**

"hpe5022\_measureStability" on page 524

"hpe5022\_setupStability" on page 529

## hpe5022\_stability\_Q

**C Syntax** ViStatus hpe5022\_stability\_Q(ViSession id, ViInt16 segment\_no, ViInt16 dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax** hpe5022\_stability\_Q(ByVal id As Long, ByVal segment\_no As Integer, ByVal dataType As Integer, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description** This function reports the statistics (mean, minimum, maximum and standard deviation) for a certain sector of the stability measurement. The data returned by the “hpe5022\_stabilityData\_Q” function is used for this statistic analysis.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- segment\_no
 

Description	Specifies the sector number to query the measurement result. The sector number begins at 0.
Direction	IN
- dataType
 

Description	Specifies the type of data to be reported.
Direction	IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry
hpe5022_DATA_NB_TAA	15	Narrow Band TAA

**Stability Measurement Function (Ratio Setting)**

- mean

Description Returns the mean value of the stability measurement.

Direction OUT

- min

Description Returns the minimum value of the stability measurement.

Direction OUT

- max

Description Returns the maximum value of the stability measurement.

Direction OUT

- stdDev

Description Returns the standard deviation value of the stability measurement.

Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'sectorNo' and/or 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.

**See Also**

"hpe5022\_stabilityData\_Q" on page 531

## hpe5022\_stabilityStatistic\_Q

**C Syntax** ViStatus hpe5022\_stabilityStatistic\_Q(ViSession id, ViInt16 dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax** hpe5022\_stabilityStatistic\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description** This function reports the statistics (i.e, mean, minimum, maximum and standard deviation) of the specified data type for stability measurement. The data returned by “hpe5022\_stabilityData\_Q” function is used for statistic analysis of this function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- dataType
 

Description	Specifies the type of data to be reported.
Direction	IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry
hpe5022_DATA_NB_TAA	15	Narrow Band TAA

- mean
 

Description	Returns the mean value of the specified data type of stability measurement.
Direction	OUT

**Stability Measurement Function (Ratio Setting)**

## • min

Description Returns the minimum value of the specified data type of stability measurement.

Direction OUT

## • max

Description Returns the maximum value of the specified data type of stability measurement.

Direction OUT

## • stdDev

Description Returns the standard deviation value of the specified data type of stability measurement.

Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_stabilityData\_Q” on page 531



## Stability Measurement (Absolute Time Setting)

This section describes the functions related with the stability measurement. This measurement allows you to observe the TAA, the PW and the narrow band TAA variations during many write-read iterations. Absolute time setting means that the period of write/read is defined by time.

### hpe5022\_stabilityAbsSenseModeConfig

**C Syntax** ViStatus hpe5022\_stabilityAbsSenseModeConfig(ViSession id, ViInt16 isMode);

**Visual Basic Syntax** hpe5022\_stabilityAbsSenseModeConfig(ByVal id As Long, ByVal isMode As Integer) As Long

**Description** This function controls the direction of the sense current polarity for absolute stability measurement.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- isMode

Description Specifies the sense current polarity at write operation. When "hpe5022\_STABILITY\_IS\_POL\_REV" is selected, the direction of sense current is opposite to the direction of write current. When "hpe5022\_STABILITY\_IS\_OFF" is selected, the sense current is set to zero. Some head amplifier does not have the capability to operate at reverse and/or off sense current modes.

This setting is used for the stability measurement instead of the setting of "hpe5022\_senseCurrentPolarity" function. When this function is not executed, the setting of "hpe5022\_senseCurrentPolarity" is used for the stability measurement (Absolute Time Setting).

Direction IN

Preset value hpe5022\_STABILITY\_IS\_POL\_NORM

Values

Name	Value	Description
hpe5022_STABILITY_IS_POL_NORM	0	Same polarity
hpe5022_STABILITY_IS_POL_REV	1	Reverse polarity

**Stability Measurement (Absolute Time Setting)**

Name	Value	Description
hpe5022_STABILITY_IS_OFF	2	Off Mode

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter specified by 'isMode' is invalid.
hpe5022_ERROR_NSUP_SENS_CURR_POL	The head does not support the reverse polarity and off modes. Select hpe5022_STABILITY_IS_POL_NORM for 'isMode' parameter.

**See Also**

“hpe5022\_stabilityAbsSenseModeConfig\_Q” on page 539

“hpe5022\_senseCurrentPolarity” on page 340

### **hpe5022\_stabilityAbsSenseModeConfig\_Q**

**C Syntax** ViStatus hpe5022\_stabilityAbsSenseModeConfig\_Q(ViSession id, ViPInt16 isMode);

**Visual Basic Syntax** hpe5022\_stabilityAbsSenseModeConfig\_Q(ByVal id As Long, ByRef isMode As Integer) As Long

**Description** This function returns the specified sense current polarity of the absolute stability measurement.

- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - isMode
 

Description	Returns the specified sense current polarity during read operation.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_stabilityAbsSenseModeConfig" on page 537

**Stability Measurement (Absolute Time Setting)****hpe5022\_stabilityAbsWritePatternConfig****C Syntax**

```
ViStatus hpe5022_stabilityAbsWritePatternConfig(ViSession id, ViInt16
writePat);
```

**Visual Basic Syntax**

```
hpe5022_stabilityAbsWritePatternConfig(ByVal id As Long, ByVal writePat As
Integer) As Long
```

**Description**

This function specifies the write data pattern to be written on the test track for stability measurement.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- writePat

**Description** Specifies the data pattern used for writing. When this parameter is set to hpe5022\_PAT\_DEFAULT, the write data pattern is the same as the pattern specified by "hpe5022\_selectPattern" function.

**Direction** IN

**Preset value** hpe5022\_PAT\_DEFAULT

**Values**

Name	Value	Description
hpe5022_PAT_DEFAULT	-1	Default pattern
hpe5022_PAT_HF	0	HF pattern
hpe5022_PAT_LF	1	LF pattern
hpe5022_PAT_ISO	2	Isolated pulse pattern
hpe5022_PAT_PRBS	3	Pseudo random pattern
hpe5022_PAT_REP	4	Repetitive pattern
hpe5022_PAT_NLTS_5TH	5	NLTS 5th pattern
hpe5022_PAT_OWHF	6	Overwrite HF pattern
hpe5022_PAT_OWLF	7	Overwrite LF pattern
hpe5022_PAT_REP_2	8	Repetition Pattern2
hpe5022_PAT_REP_3	9	Repetition Pattern3
hpe5022_PAT_REP_4	10	Repetition Pattern4
hpe5022_PAT_USER	20	User-defined Pattern

Name	Value	Description
hpe5022_PAT_USER_2	21	User-defined Pattern2
hpe5022_PAT_USER_3	22	User-defined Pattern3
hpe5022_PAT_USER_4	23	User-defined Pattern4
hpe5022_PAT_ERASE	101	Default Erase Pattern selected by the “hpe5022_eraseType” function
hpe5022_PAT_ERASE_DC_NEG	102	DC- Erase Pattern
hpe5022_PAT_ERASE_DC_POS	103	DC+ Erase Pattern
hpe5022_PAT_ERASE_AC	104	AC Erase Pattern

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter writePat is out of range.

**See Also**

“hpe5022\_stabilityAbsWritePatternConfig\_Q” on page 542

**Stability Measurement (Absolute Time Setting)****hpe5022\_stabilityAbsWritePatternConfig\_Q****C Syntax**

```
ViStatus hpe5022_stabilityAbsWritePatternConfig_Q(ViSession id, ViPInt16
writePat);
```

**Visual Basic Syntax**

```
hpe5022_stabilityAbsWritePatternConfig_Q(ByVal id As Long, ByRef writePat
As Integer) As Long
```

**Description**

This function returns the specified write data pattern written on the test track.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- writePat
 

Description	Returns the specified write data pattern.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_stabilityAbsWritePatternConfig” on page 540

### **hpe5022\_stabilityAbsWriteModeConfig**

**C Syntax** ViStatus hpe5022\_stabilityAbsWriteModeConfig(ViSession id, ViInt16 writeMode);

**Visual Basic Syntax** hpe5022\_stabilityAbsWriteModeConfig(ByVal id As Long, ByVal writeMode As Integer) As Long


**Description** This function controls the write current direction at the beginning of write operation.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- writeMode
  - Description Specifies the write current direction at the beginning of write operation.
  - Direction IN
  - Values

Name	Value	Description
hpe5022_WRIT_DATA_POL_FIXED	0	The write current direction at the beginning of each write operation is always the same.
hpe5022_WRIT_DATA_POL_CONTINUOUS	1	The write current direction at the beginning of write operation is the same as the last current direction of the previous write operation.

**Figure 3-18 Write Mode**

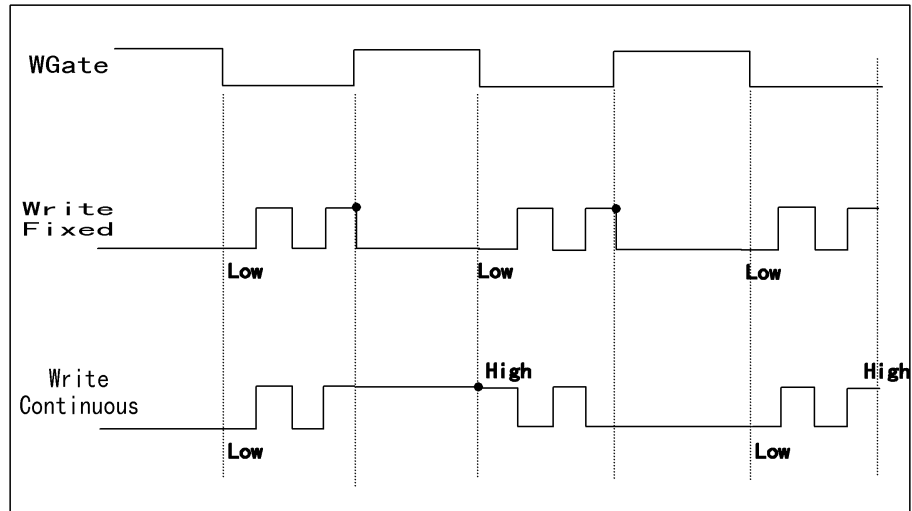

When [Write Mode] is set to “fixed”, the write current direction at the beginning of each write operation is always the same. On the other hand, when [Write Mode] is set to “continuous” the write current direction is the same as the last current direction of the previous write operation. Each time the write current alternates it allows you to check the polarity of the output pulse at the end of the previous write. You must set the repetitive period of the data pattern T to 1T, 2T, 4T and 8T due to the system’s internal constraints. If you use other repetitive periods of the data pattern, E5022A/B system can not guarantee the change of write current polarity. This function makes it possible for stability measurement to achieve an acceptable level of TAA under similar usage of the drive. Before this function was introduced, the write current direction always starts at a constant direction, thus you can only observe one side of the output.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'writeMode' is invalid.
hpe5022_ERROR_NSUP_CONF	The installed head amplifier has no capability to control the write current direction.

**See Also** “hpe5022\_stabilityAbsWriteModeConfig\_Q” on page 545



## hpe5022\_stabilityAbsWriteModeConfig\_Q

**C Syntax** ViStatus hpe5022\_stabilityAbsWritePatternConfig\_Q(ViSession id, ViPInt16 writeMode);

**Visual Basic Syntax** hpe5022\_stabilityAbsWritePatternConfig\_Q(ByVal id As Long, ByRef writeMode As Integer) As Long

**Description** This function returns the specified write current direction at the beginning of write operation.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- writeMode
 

Description	Returns the specified write current direction at the beginning of write operation.
Direction	OUT
Values	

Name	Value	Description
hpe5022_WRIT_DATA_POL_FIXED	0	The write current direction at the beginning of each write operation is always the same.
hpe5022_WRIT_DATA_POL_CONTINUOUS	1	The write current direction at the beginning of write operation is the same as the last current direction of the previous write operation.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**Stability Measurement (Absolute Time Setting)**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_PARAMETER	The parameter 'writeMode' is invalid.

**See Also**

“hpe5022\_stabilityAbsWriteModeConfig” on page 543

## hpe5022\_stabilityAbsSequenceConfig

**C Syntax** ViStatus hpe5022\_stabilityAbsSequenceConfig(ViSession id, ViInt16 seqType);

**Visual Basic Syntax** hpe5022\_stabilityAbsSequenceConfig(ByVal id As Long, ByVal seqType As Integer) As Long

**Description** This function specifies the type of sequence.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Specifies the type of sequence. When the "hpe5022_SEQ_M" is selected, the erase and write sequences are not executed.
Direction	IN
Preset value	hpe5022_SEQ_ER_WR_M

Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Erase->Write->Excitation and Measurement
hpe5022_SEQ_M	2	Excitation and Measurement

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameters 'seqType' is out of range.

**See Also**

"hpe5022\_measureStabilityAbs" on page 549

"hpe5022\_setupStabilityAbs" on page 554

**Stability Measurement (Absolute Time Setting)****hpe5022\_stabilityAbsSequenceConfig\_Q****C Syntax**

```
ViStatus hpe5022_stabilityAbsSequenceConfig_Q(ViSession id, ViPInt16
seqType);
```

**Visual Basic Syntax**

```
hpe5022_stabilityAbsSequenceConfig_Q(ByVal id As Long, ByRef seqType As
Integer) As Long
```

**Description**

This function returns the type of sequence.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Returns the type of sequence.
Direction	OUT
Values	Same as the 'seqType' of "hpe5022_stabilitySequenceConfig"

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

"hpe5022\_stabilityAbsSequenceConfig" on page 547

**hpe5022\_measureStabilityAbs****C Syntax**

```
ViStatus hpe5022_measureStabilityAbs(ViSession id, ViInt16 measFunc,
ViReal64 writeTime, ViReal64 delay, ViReal64 readTime, ViInt16 counts);
```

**Visual Basic Syntax**

```
hpe5022_measureStabilityAbs(ByVal id As Long, ByVal measFunc As Integer,
ByVal writeTime As Double, ByVal delay As Double, ByVal readTime As Double,
ByVal counts As Integer) As Long
```

**Description**

This function measures the stability. This allows you to divide a track into some segments to get many write-read iterations. The sequence of this function is as follows:

1. Calculate the number of segments (segment) and revolutions (rev) from the specified write gate time, delay, read gate time and number of measurement counts.
2. Move the head to the write track offset position specified by the “hpe5022\_writeTrackOffset” function.
3. If ‘seqType’ of “hpe5022\_stabilityAbsSequenceConfig” function is set at “hpe5022\_SEQ\_ER\_WR\_M”, erase (same as the “hpe5022\_erase” function) for an entire track.
4. Write the data pattern as specified by the “hpe5022\_stabilityAbsWritePatternConfig” function.
5. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset” function.
6. Set i to zero. (i = 0): a number of revolutions.
7. Set j to zero. (j = 0): a number of segments.
8. Write the data pattern as specified by the “hpe5022\_stabilityAbsWritePatternConfig” function during the write time period in the segment [j].
9. Wait for delay time to elapse.
10. Measure the specified parameter (specified by ‘measFunc’) for the read ratio period in the segment [j].
11. Increment j by 1. (j = j+1)
12. If j is less than ‘segment’ (see parameters), go to the step 8.
13. Increment i by 1. (i = i +1)
14. If i is less than ‘rev’ (see parameters), go to the step 7.

The “hpe5022\_stabilityAbsData\_Q” function returns the measurement results.

**Parameters**

- id  
Description Specifies the system identifier. This is given by the

**Stability Measurement (Absolute Time Setting)**

"hpe5022\_init" function.

Direction IN

- measFunc

Description Specifies the type of measurement.

Direction IN

Values

Name	Value	Description
hpe5022_MEAS_TAA	1	Measure TAA
hpe5022_MEAS_PW	2	Measure PW
hpe5022_MEAS_NB_TAA	5	Measure Narrow Band TAA

- writeTime

Description Specifies the time to write.

Direction IN

Unit Second

Values

Name	Value
hpe5022_STABILITY_WRIT_TIME_MIN	$1 \times 10^{-6}$
hpe5022_STABILITY_WRIT_TIME_MAX	$10 \times 10^{-3}$

- delay

Description Specifies the delay time. Delay time is defined as the time distance between write and read operation.

Direction IN

Unit Second

Values

Name	Value
hpe5022_STABILITY_DEL_MIN	0
hpe5022_STABILITY_DEL_MAX	$10 \times 10^{-3}$

- readTime

Description Specifies the time to read. This parameter is dependent on

the selected “measFunc”.

Direction IN  
 Unit Second  
 Values

Name	Value
When the selected ‘MeasFunc’ is “hpe5022_MEAS_TAA” or “hpe5022_MEAS_PW”	
hpe5022_STABILITY_READ_TIME_MIN	20×10 <sup>-6</sup>
hpe5022_STABILITY_READ_TIME_MAX	10×10 <sup>-3</sup>
When the selected ‘MeasFunc’ is “hpe5022_MEAS_NB_TAA”	
hpe5022_STABILITY_NB_TAA_READ_TIME_MIN	800×10 <sup>-6</sup>
hpe5022_STABILITY_NB_TAA_READ_TIME_MAX	10×10 <sup>-3</sup>

- counts

Description Specifies the number of test counts  
 Direction IN  
 Values

Number of Counts	Value
hpe5022_STABILITY_COUN_MIN ≤ segment × rev ≤ hpe5022_STABILITY_COUN_MAX	
When the selected ‘MeasFunc’ is “hpe5022_MEAS_TAA” or “hpe5022_MEAS_PW”	
hpe5022_STABILITY_COUN_MIN	1
hpe5022_STABILITY_COUN_MAX	1000
When the selected ‘MeasFunc’ is “hpe5022_MEAS_NB_TAA”	
hpe5022_STABILITY_NB_TAA_COUN_MIN	1
hpe5022_STABILITY_NB_TAA_COUN_MAX	100

**NOTE**

There are certain gate timing restrictions that the user must compensate when the spindle speed (RPM) is set up. When RPM is set below 2400[rpm], the system will

**Stability Measurement (Absolute Time Setting)**

automatically set the spindle speed to 2400[rpm].

<b>Gate Time Limitations</b>
track time = (60/rpm) -aper (aper is specified by the hpe5022_trackOffsetComPattern function.)  aper = 0 when the stat of the hpe5022_trackOffset CompPattenState is set at VI_FALSE.
rpm = spindle speed (where spindle speed $\geq$ 2400 rpm) = 2400 rpm (where spindle speed < 2400)
<b>(for TAA and PW Measurement)</b> gateTime = writeTime +delay + readTime + 30 $\mu$ sec.
<b>(for Narrow Band TAA Measurement)</b> gateTime = writeTime +delay + readTime + 100 $\mu$ sec.
gateTime = (writeTime + 100 $\mu$ sec) (Where gateTime < (writeTime + 100 $\mu$ sec)  gateTime = 150 $\mu$ sec (Where gateTime < 150 $\mu$ sec)

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_CAL_DATA_CORRUPT	Amplitude calibration for 3GHz Spectrum Analyzer has not been done.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameters 'measFunc', 'writeTime', 'delay', 'readTime' and/or 'counts' are out of range.



Error Code	Description
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive is turned off. Turn it on before this function is executed. See the “hpe5022_driveState” function.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when an overflow is detected while the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

- “hpe5022\_selectPattern” on page 119
- “hpe5022\_driveState” on page 209
- “hpe5022\_readTrackOffset” on page 219
- “hpe5022\_writeTrackOffset” on page 222
- “hpe5022\_stabilityAbsSenseModeConfig” on page 537
- “hpe5022\_stabilityAbsSequenceConfig” on page 547
- “hpe5022\_stabilityAbsWritePatternConfig” on page 540
- “hpe5022\_stabilityAbsWriteModeConfig” on page 543
- “hpe5022\_stabilityAbsData\_Q” on page 560

**Stability Measurement (Absolute Time Setting)****hpe5022\_setupStabilityAbs****C Syntax**

```
ViStatus hpe5022_setupStabilityAbs(ViSession id, ViInt16 measFunc, ViReal64
writeTime, ViReal64 delay, ViReal64 readTime, ViInt16 counts, ViObject
testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupStabilityAbs(ByVal id As Long, ByVal measFunc As integer,
ByVal writeTime As Double, ByVal delay As Double, ByVal readTime As Double,
ByVal counts As Integer, ByRef testHndl As Long) As Long
```

**Description**

This function assigns the stability measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureStabilityAbs” function for details about the test sequence. This function does not execute measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function. The “hpe5022\_stabilityAbsData\_Q” function returns the measurement results.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- measFunc

Description Specifies the type of measurement.

Direction IN

Values

Name	Value	Description
hpe5022_MEAS_TAA	1	Measure TAA
hpe5022_MEAS_PW	2	Measure PW
hpe5022_MEAS_NB_TAA	5	Measure Narrow Band TAA

- writeTime

Description Specifies the time to write.

Direction IN

Unit Second

Values

Name	Value
hpe5022_STABILITY_WRIT_TIME_MIN	1×10 <sup>-6</sup>

**Stability Measurement (Absolute Time Setting)**

Name	Value
hpe5022_STABILITY_WRIT_TIME_MAX	$10 \times 10^{-3}$

- delay

**Description** Specifies the delay time. Delay time is defined as the time distance between write and read operation.

**Direction** IN

**Unit** Second

**Values**

Name	Value
hpe5022_STABILITY_DEL_MIN	0
hpe5022_STABILITY_DEL_MAX	$10 \times 10^{-3}$

- readTime

**Description** Specifies the time to read. This parameter is dependent on the selected “measFunc”.

**Direction** IN

**Unit** Second

**Values**

Name	Value
When the selected ‘MeasFunc’ is “hpe5022_MEAS_TAA” or “hpe5022_MEAS_PW”	
hpe5022_STABILITY_READ_TIME_MIN	$20 \times 10^{-6}$
hpe5022_STABILITY_READ_TIME_MAX	$10 \times 10^{-3}$
When the selected ‘MeasFunc’ is “hpe5022_MEAS_NB_TAA”	
hpe5022_STABILITY_NB_TAA_READ_TIME_MIN	$800 \times 10^{-6}$
hpe5022_STABILITY_NB_TAA_READ_TIME_MAX	$10 \times 10^{-3}$

- counts

**Description** Specifies the number of test counts

**Direction** IN

**Stability Measurement (Absolute Time Setting)**

## Values

Number of Counts	Value
hpe5022_STABILITY_COUN_MIN ≤ segment × rev ≤ hpe5022_STABILITY_COUN_MAX	
When the selected 'MeasFunc' is "hpe5022_MEAS_TAA" or "hpe5022_MEAS_PW"	
hpe5022_STABILITY_COUN_MIN	1
hpe5022_STABILITY_COUN_MAX	1000
When the selected 'MeasFunc' is "hpe5022_MEAS_NB_TAA"	
hpe5022_STABILITY_NB_TAA_COUN_MIN	1
hpe5022_STABILITY_NB_TAA_COUN_MAX	100

## • testHndl

**Description** Returns the test identifier. This identifier is used to execute the stability measurement by the "hpe5022\_measure" function.

**Direction** OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameters 'measFunc', 'writeTime', 'delay', 'readTime' and/or 'counts' are out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

**See Also**

"hpe5022\_measureStabilityAbs" on page 549

"hpe5022\_stabilityAbsData\_Q" on page 560

"hpe5022\_measure" on page 387

"hpe5022\_releaseSetup" on page 390

## hpe5022\_stabilityAbsDataSize\_Q

**C Syntax** ViStatus hpe5022\_stabilityAbsDataSize\_Q(ViSession id, ViPInt16 segment, ViPInt16 rev);

**Visual Basic Syntax** hpe5022\_stabilityAbsDataSize\_Q(ByVal id As Long, ByRef segment As Integer, ByRef rev As Integer) As Long

**Description** This function returns the number of segments and revolutions based on the calculated write gate time, delay, read gate time and number of data counts. The total number of data counts is computed by *segment x rev*.

- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - segment
 

Description	Returns the number of segments per revolution.
Direction	OUT
  - rev
 

Description	Returns the number of revolutions.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The stability data is corrupt.

**See Also** "hpe5022\_measureStabilityAbs" on page 549

**Stability Measurement (Absolute Time Setting)****hpe5022\_stabilityAbs\_Q****C Syntax**

```
ViStatus hpe5022_stabilityAbs_Q(ViSession id, ViInt16 segment_no, ViInt16
dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);
```

**Visual Basic Syntax**

```
hpe5022_stabilityAbs_Q(ByVal id As Long, ByVal segment_no As Integer, ByVal
dataType As Integer, ByRef mean As Double, ByRef min As Double, ByRef max
As Double, ByRef stdDev As Double) As Long
```

**Description**

This function reports the statistics (i.e. mean, minimum, maximum and standard deviation) of the specified segment number.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- segment\_no
 

Description	Specifies the sector number to report the measurement results.
Direction	IN
- dataType
 

Description	Specifies the type of data to be reported.
Direction	IN

## Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry
hpe5022_DATA_NB_TAA	15	Narrow Band TAA

**Stability Measurement (Absolute Time Setting)**

- **mean**

Description	Returns the mean value of the specified segment number.
Direction	OUT
- **min**

Description	Returns the minimum value of the specified segment number.
Direction	OUT
- **max**

Description	Returns the maximum value of the specified segment number.
Direction	OUT
- **stdDev**

Description	Returns the standard deviation of the specified segment number.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'segment_no' and/or 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_stabilityData\_Q” on page 531

**Stability Measurement (Absolute Time Setting)****hpe5022\_stabilityAbsData\_Q****C Syntax**

ViStatus hpe5022\_stabilityAbsData\_Q(ViSession id, ViInt16 segment\_no, ViInt16 dataType, ViReal64 data[]);

**Visual Basic Syntax**

hpe5022\_stabilityAbsData\_Q(ByVal id As Long, ByVal segment\_no As Integer, ByVal dataType As Integer, ByRef data As Double) As Long

**Description**

This function returns the data results in array order of the specified segment.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- segment\_no
 

Description	Specifies the segment number from where to get the data. The number of segment is reported by "hpe5022_stabilityAbsDataSize_Q" function.
Direction	IN
- dataType
 

Description	Specifies the type of data to be reported.
Direction	IN
Values	

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry
hpe5022_DATA_NB_TAA	15	Narrow Band TAA



- data

Description Returns the data of the specified segment. Data size is equal to the number of revolutions, which is reported by “hpe5022\_stabilityAbsDataSize\_Q”.

Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameters ‘segment_no’ and/or ‘dataType’ are out of range.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if the measurement sequence is correct.

**See Also**

“hpe5022\_measureStabilityAbs” on page 549

“hpe5022\_setupStabilityAbs” on page 554

**Stability Measurement (Absolute Time Setting)****hpe5022\_stabilityAbsStatistic\_Q****C Syntax**

ViStatus hpe5022\_stabilityAbsStatistic\_Q(ViSession id, ViInt16 dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax**

hpe5022\_stabilityAbsStatistic\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description**

This function reports the statistics data of the stability measurement. Total data size is equal to *segment x rev*. The number of segments and revolutions are reported by the “hpe5022\_stabilityAbsDataSize\_Q” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- dataType
 

Description	Specifies the type of data to be reported for statistics analysis.
Direction	IN

## Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry
hpe5022_DATA_NB_TAA	15	Narrow Band TAA

- mean
 

Description	Returns the mean value of the stability measurement.
Direction	OUT

**Stability Measurement (Absolute Time Setting)**

- **min**  
 Description Returns the minimum value of the stability measurement.  
 Direction OUT
- **max**  
 Description Returns the maximum value of the stability measurement.  
 Direction OUT
- **stdDev**  
 Description Returns the standard deviation value of the stability measurement.  
 Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_stabilityData\_Q” on page 531

---

## Narrow Band TAA Measurement

This section describes the functions related with narrow band track average amplitude (TAA) measurement. Narrow band TAA is measured by a spectrum analyzer.

### hpe5022\_narrowBandTaaFrequencyMode

**C Syntax** ViStatus hpe5022\_narrowBandTaaFrequencyMode(ViSession id, ViInt16 mode);

**VB Syntax** hpe5022\_narrowBandTaaFrequencyMode(ByVal id As Long, ByVal mode As Integer) As Long

**Description** This function specifies the narrow band TAA measurement frequency mode. When auto mode is selected, the frequency of the TAA measurement in the spectrum analyzer is set to the fundamental frequency of the selected data pattern. See chapter 5 in the Operation Manual.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- mode
  - Description Specifies the narrow band TAA measurement mode.  
When "hpe5022\_NB\_TAA\_FREQ\_AUTO" is selected, the measurement frequency of the spectrum analyzer is automatically set to the fundamental frequency of the data pattern.  
When "hpe5022\_NB\_TAA\_FREQ\_FIXED" is selected, the measurement frequency is set to the frequency specified by the "hpe5022\_narrowBandTaaFrequency" function.
  - Direction IN
  - Preset Value 0 (hpe5022\_NB\_TAA\_FREQ\_AUTO)
  - Values

Name	Value	Description
hpe5022_NB_TAA_FREQ_AUTO	0	Auto mode.
hpe5022_NB_TAA_FREQ_FIXED	1	Fixed mode.

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'mode' is out of range.

### See Also

“hpe5022\_narrowBandTaaFrequency” on page 567

“hpe5022\_narrowBandTaaFrequencyMode\_Q” on page 566

## **hpe5022\_narrowBandTaaFrequencyMode\_Q**

- C Syntax** ViStatus hpe5022\_narrowBandTaaFrequencyMode\_Q(ViSession id, ViPInt16 mode);
- VB Syntax** hpe5022\_narrowBandTaaFrequencyMode\_Q(ByVal id As Long, ByRef mode As Integer) As Long
- Description** This function returns specified frequency mode of the narrow band TAA measurement.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - mode
    - Description Returns the frequency mode of the narrow band TAA measurement.
    - Direction OUT
    - Values Same as 'mode' in the "hpe5022\_narrowBandTaaFrequencyMode" function.

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_narrowBandTaaFrequencyMode" on page 564

## hpe5022\_narrowBandTaaFrequency

- C Syntax** ViStatus hpe5022\_narrowBandTaaFrequency(ViSession id,ViReal64 center);
- VB Syntax** hpe5022\_narrowBandTaaFrequency(ByVal id As Long, ByVal center As Double) As Long
- Description** This function specifies the measurement frequency of the spectrum analyzer for narrow band TAA measurement. The frequency is set automatically when the frequency mode is set to auto in the “hpe5022\_narrowBandTaaFrequencyMode” function. The value is changed automatically depending on the data pattern and the channel bit rate when auto mode is selected.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- center
 

Description	Specifies the center frequency to measure narrow band TAA.
Direction	IN
Unit	Hz
Preset Value	$2.5 \times 10^6$
Values	The upper and lower limit values are queryable by hpe5022_narrowBandTaaFrequencyRange_Q function.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'center' is out of range.

- See Also** “hpe5022\_narrowBandTaaFrequencyMode” on page 564  
 “hpe5022\_narrowBandTaaFrequency\_Q” on page 568

## **hpe5022\_narrowBandTaaFrequency\_Q**

**C Syntax** ViStatus hpe5022\_narrowBandTaaFrequency\_Q(ViSession id, ViPReal64 center);

**VB Syntax** hpe5022\_narrowBandTaaFrequency\_Q(ByVal id As Long, ByRef center As Double) As Long

**Description** This function returns the specified center frequency of the narrow band TAA. This value is automatically overwritten depending on the data pattern and the channel bit rate when the frequency mode is set to auto in the “hpe5022\_narrowBandTaaFrequencyMode” function.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- center
  - Description Returns the specified center frequency.
  - Direction OUT
  - Unit Hz

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_narrowBandTaaFrequency”  
“hpe5022\_narrowBandTaaFrequencyMode”



## hpe5022\_narrowBandTaaFrequencyRange\_Q

**C Syntax** ViStatus \_ VI\_FUNC hpe5022\_narrowBandTaaFrequencyRange\_Q(ViSession id, ViPReal64 freqMin, ViPReal64 freqMax);

**Visual Basic Syntax** Declare Function \_ hpe5022\_narrowBandTaaFrequencyRange\_Q Lib "hpe5022\_32.dll" (\_ By Val id As Long, \_ ByRef freqMin As Double, \_ ByRef freqMax As Double \_ ) As Long

**Description** This function returns the frequency range of the narrow band TAA measurement. This value is automatically overwritten depending on the data pattern and the channel bit rate when the frequency mode is set to auto in the "hpe5022\_narrowBandTaaFrequencyMode" function.

- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - freqMin Returns the minimum frequency in Hz.
  - freqMax Returns the maximum frequency in Hz.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

## **hpe5022\_narrowBandTaaBandWidth**

**C Syntax** ViStatus hpe5022\_narrowBandTaaBandWidth(ViSession id, ViReal64 bw);

**VB Syntax** hpe5022\_narrowBandTaaBandWidth(ByVal id As Long, ByVal bw As Double) As Long

**Description** This function specifies the resolution band width of the spectrum analyzer for narrow band TAA measurement.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- bw
  - Description Specifies the resolution band width. Narrowing this value, will widen the dynamic range of the spectrum analyzer.
  - Direction IN
  - Unit Hz
  - Preset Value  $10 \times 10^3$
  - Values

Name	Value
hpe5022_NB_TAA_BW_MIN	$3 \times 10^3$
hpe5022_NB_TAA_BW_MAX	$100 \times 10^3$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'bw' is out of range.

**See Also** "hpe5022\_narrowBandTaaBandWidth\_Q" on page 571

## **hpe5022\_narrowBandTaaBandWidth\_Q**

**C Syntax** ViStatus hpe5022\_narrowBandTaaBandWidth\_Q(ViSession id, ViPReal64 bw);

**VB Syntax** hpe5022\_narrowBandTaaBandWidth(ByVal id As Long, ByRef bw As Double) As Long

**Description** This function returns the resolution band width of the spectrum analyzer for narrow band TAA measurement.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- bw
 

Description	Returns the resolution band width.
Direction	IN
Unit	Hz

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_narrowBandTaaBandWidth” on page 570

**Narrow Band TAA Measurement****hpe5022\_measureNarrowBandTaa****C Syntax**

```
ViStatus hpe5022_measureNarrowBandTaa(ViSession id, ViInt16 seqType,
ViInt16 ave);
```

**Visual Basic Syntax**

```
hpe5022_measureNarrowBandTaa(ByVal id As Long, ByVal seqType As Integer,
ByVal ave As Integer) As Long
```

**Description**

This function measures the narrow band TAA parameter according to the specified sequence type. There are three sequence types: 1) erase, write data, then measure 2) no erase, write data, then measure 3) measure only. The sequence is as follows:

1. Move the head to the write track offset position specified by the “hpe5022\_writeTrackOffset” function.
2. If seqType is set to “hpe5022\_SEQ\_ER\_WR\_M”, erase the entire track.
3. If seqType is set to “hpe5022\_SEQ\_ER\_WR\_M” or “hpe5022\_SEQ\_WR\_M”, write the data pattern specified by the “hpe5022\_selectPattern” function.
4. Move the head to read track offset position specified by the “hpe5022\_readTrackOffset” function.
5. Repeat the steps 3 and 4 ‘ave’ (see parameters) times if it is more than 1.

The “hpe5022\_narrowBandTaa\_Q” function returns the measurement result.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- seqType

Description Specifies the type of measurement sequence.

Direction IN

Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Erase->Write->Measurement
hpe5022_SEQ_WR_M	1	Write->Measurement
hpe5022_SEQ_M	2	Measurement

- ave

Description Specifies the number of measurements for averaging.

Direction IN

Values

Name	Value
hpe5022_NB_TAA_COUN_MIN	1
hpe5022_NB_TAA_COUN_MAX	50

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_CAL_DATA_CORRUPT	Amplitude calibration for 3GHz Spectrum Analyzer has not been done.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' and/or 'ave' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand is turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.

**See Also**

- “hpe5022\_readTrackOffset” on page 219
- “hpe5022\_writeTrackOffset” on page 222
- “hpe5022\_narrowBandTaa\_Q” on page 577
- “hpe5022\_driveState” on page 209

**Narrow Band TAA Measurement****hpe5022\_setupNarrowBandTaa****C Syntax**

```
ViStatus hpe5022_setupNarrowBandTaa(ViSession id, ViInt16 seqType, ViInt16
ave, ViPObject testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupNarrowBandTaa(ByVal id As Long, ByVal seqType As Integer,
ByVal ave As Integer, ByVal testHndl As long) As Long
```

**Description**

This function assigns the narrow band TAA measurement sequence to the specified test identifier. See the “hpe5022\_measureNarrowBandTaa” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function

The “hpe5022\_narrowBandTaa\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Specifies the type of measurement sequence.
Direction	IN
Values	Same as the ‘seqType’ in the “hpe5022_measureNarrowBandTaa” function.
- ave
 

Description	Specifies the number of measurements for averaging.
Direction	IN
Values	Same as the ‘ave’ in the “hpe5022_measureNarrowBandTaa” function.
- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the narrow band TAA measurement by the “hpe5022_measure” function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' and/or 'ave' is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

**See Also**

"hpe5022\_measureNarrowBandTaa" on page 572

"hpe5022\_narrowBandTaa\_Q" on page 577

"hpe5022\_measure" on page 387

"hpe5022\_releaseSetup" on page 390

## **hpe5022\_calibrateNarrowBandTaa**

### **C Syntax**

ViStatus\_VI\_FUNC hpe5022\_calibrateNarrowBandTaa(ViSession id);

### **Visual Basic Syntax**

Declare Function \_ hpe5022\_calibrateNarrowBandTaa Lib "hpe5022\_32.dll" ( \_  
ByVal id As Long \_ ) As Long

### **Description**

This function performs the narrow band TAA measurement calibration.

This function is supported only when the SA module is the hybrid system of E5040 and 3GHz Spectrum Analyzer (E4402B).

Connect a cable between front panel connector AMPTD REF OUT and the INPUT connector of the E4402B before this function is called. If the two connectors are connected when this function is called, hpe5022\_ERROR\_CAL\_FAILED error is generated.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_NSUP_FUNC	The SA module in use does not support this function.
hpe5022_ERROR_CAL_FAILED	Calibration failed.



## hpe5022\_narrowBandTaa\_Q

- C Syntax** ViStatus hpe5022\_narrowBandTaa\_Q(ViSession id, ViPReal64 taa);
- Visual Basic Syntax** hpe5022\_narrowBandTaa\_Q(ByVal id As Long, ByRef taa As Double) As Long
- Description** This function returns the measurement results of narrow band TAA.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - taa
 

Description	Returns the result of narrow band TAA.
Direction	OUT
Unit	RMS Volt

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The narrow band TAA data is corrupt. Check if your measurement sequence is correct.

- See Also** “hpe5022\_measureNarrowBandTaa” on page 572  
 “hpe5022\_setupNarrowBandTaa” on page 574

## **hpe5022\_narrowBandTaaDataSize\_Q**

- C Syntax** `ViStatus hpe5022_narrowBandTaaDataSize_Q(ViSession id,ViPInt32 size);`
- Visual Basic Syntax** `hpe5022_narrowBandTaaDataSize_Q(ByVal id As Long, ByRef size As Long) As Long`
- Description** This function returns the data size of the narrow band TAA from the “hpe5022\_narrowBandTaaData\_Q” function.
- Parameters**
- **id**  
Description Specifies the system identifier. This is given by the "hpe5022\_init" function.  
Direction IN
  - **size**  
Description Returns the data size of the narrow band TAA.  
The size will be the same as the number of measurement points. as the value of ‘ave’ specified by the “hpe5022\_measureNarrowBandTaa” or “hpe5022\_setupNarrowBandTaa” function if the measurement is done properly.  
Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The narrow band TAA data is corrupt. Check if your measurement sequence is correct.

**See Also** “hpe5022\_narrowBandTaaData\_Q”

## hpe5022\_narrowBandTaaData\_Q

**C Syntax** ViStatus hpe5022\_narrowBandTaaData\_Q(ViSession id, ViReal64 data[]);

**Visual Basic Syntax** hpe5022\_narrowBandTaaData\_Q(ByVal id As Long, ByRef data As Double) As Long

**Description** This function returns the TAA data for each revolution. When the ‘ave’ parameter in the “hpe5022\_measureNarrowBandTaa” or the “hpe5022\_setupNarrowBandTaa” function is set to more than one, the function allows you to get the TAA data for each revolution. If the ‘ave’ is set to 1, the output of this function is the same as one of the “hpe5022\_narrowBandTaa\_Q” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- data
 

Description	Returns the data array of the parameter specified by the ‘dataType’. The array size is returned by the “hpe5022_narrowBandTaaDataSize_Q” function.
Direction	OUT
Unit	RMS Volt

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The narrow band TAA data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_narrowBandTaaDataSize\_Q” on page 578  
 “hpe5022\_narrowBandTaa\_Q” on page 577  
 “hpe5022\_measureNarrowBandTaa” on page 572  
 “hpe5022\_setupNarrowBandTaa” on page 574

**Narrow Band TAA Measurement****hpe5022\_narrowBandTaaStatistic\_Q****C Syntax**

ViStatus hpe5022\_narrowBandTaaStatistic\_Q(ViSession id, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax**

hpe5022\_narrowBandTaaStatistic\_Q(ByVal id As Long, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description**

This function reports the statistics (mean, minimum, maximum and standard deviation) of the narrow band TAA measurement. The data returned by the “hpe5022\_narrowBandTaa\_Q” function is used for statistic analysis.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
Unit	RMS Volt
- mean
 

Description	Returns the mean value. The returned value is the same as the corresponding values returned by the “hpe5022_narrowBandTaa_Q” function.
Direction	OUT
Unit	RMS Volt
- min
 

Description	Returns the minimum value.
Direction	OUT
Unit	RMS Volt
- max
 

Description	Returns the maximum value.
Direction	OUT
Unit	RMS Volt
- stdDev
 

Description	Returns the standard deviation value.
Direction	OUT

## Return Values

Completion Code	Description
VL_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The narrow band TAA data is corrupt. Check if your measurement sequence is correct.

## See Also

“hpe5022\_narrowBandTaaData\_Q” on page 579

## hpe5022\_narrowBandTaaRawDataSize\_Q

**C Syntax** ViStatus hpe5022\_narrowBandTaaRawDataSize\_Q(ViSession id, ViPInt32 size);

**Visual Basic Syntax** hpe5022\_narrowBandTaaRawDataSize\_Q(ByVal id As Long, ByRef size As Long) As Long

**Description** This function returns the array size of the data returned by “hpe5022\_narrowBandTaaRawData\_Q” function

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- size
  - Description Returns the array size of narrow band TAA raw data.
  - Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.
hpe5022_ERROR_NSUP_FUNC	The 4395A is used in your system. This function is only for E5040A.

**See Also** “hpe5022\_narrowBandTaaRawData\_Q” on page 583

## hpe5022\_narrowBandTaaRawData\_Q

- C Syntax** ViStatus hpe5022\_narrowBandTaaRawData\_Q(ViSession id, ViReal64 sec[], ViReal64 data[]);
- Visual Basic Syntax** hpe5022\_narrowBandTaaRawData\_Q(ByVal id As Long, ByRef sec As Double, ByRef data As Double) As Long
- Description** This function returns the narrow band TAA raw data.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - sec
 

Description	Returns the time point for each narrow band TAA raw data. The size of array is returned by the "hpe5022_narrowBandTaaRawDataSize_Q".
Direction	OUT
Unit	Second
  - data
 

Description	Returns the narrow band TAA raw data. The size of array is returned by the "hpe5022_narrowBandTaaRawDataSize_Q". Each value in array is the measurement result relative to the time point in the sec array.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.

Function Reference  
**Narrow Band TAA Measurement**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_NSUP_FUNC	The 4395A is used in your system. This function is only for E5040A.

**See Also**

“hpe5022\_narrowBandTaaRawDataSize\_Q” on page 582



## hpe5022\_narrowBandTaaRawStatistic\_Q

**C Syntax** ViStatus hpe5022\_narrowBandTaaRawStatistic\_Q(ViSession id, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax** hpe5022\_narrowBandTaaRawStatistic\_Q(ByVal id As Long, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description** This function returns the narrow band TAA raw data.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- mean
 

Description	Returns the mean value of the narrow band TAA raw data returned by the "hpe5022_narrowBandTaaRawData_Q".
Direction	OUT
- min
 

Description	Returns the minimum value of the narrow band TAA raw data returned by the "hpe5022_narrowBandTaaRawData_Q".
Direction	OUT
- max
 

Description	Returns the maximum value of the narrow band TAA raw data returned by the "hpe5022_narrowBandTaaRawData_Q".
Direction	OUT
- stdDev
 

Description	Returns the standard deviation value of the narrow band TAA raw data returned by the "hpe5022_narrowBandTaaRawData_Q".
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Narrow Band TAA Measurement**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.
hpe5022_ERROR_NSUP_FUNC	The 4395A is used in your system. This function is only for E5040A.

**See Also**

“hpe5022\_narrowBandTaaRawData\_Q” on page 583

## Absolute Polarity Function

This test is used to determine the output polarity and asymmetry of the isolated pulse TAA and 1-3 bit patterns. Absolute polarity test is used to determine the pinned layer reversal of the GMR head.

### hpe5022\_absolutePolarityPatternMode


- C Syntax** ViStatus hpe5022\_absolutePolarityPatternMode(ViSession id, ViInt16 mode);
- Visual Basic Syntax** hpe5022\_absolutePolarityPatternMode(ByVal id As Long, ByVal mode As Integer) As Long
- Description** This function controls the configuration of the data pattern for absolute polarity measurement.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - mode
 

Description	Specifies the configuration type of the data pattern.
Direction	IN
Values	

Name	Value	Description
hpe5022_ABS_POL_PAT_MODE_AUTO	0	1-3 bit pattern
hpe5022_ABS_POL_PAT_MODE_USER	1	user-defined pattern

**Figure 3-19** 1-3 bit pattern

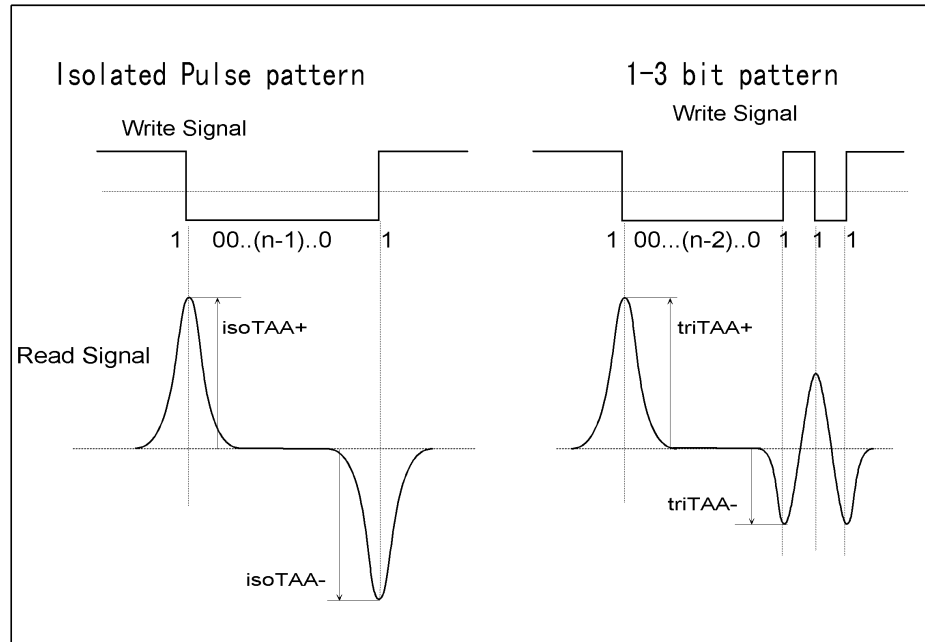

When “hpe5022\_ABS\_POL\_PAT\_MODE\_AUTO” is selected, the absolute polarity pattern will be defined automatically as the combination of isolated pulse and tribit. As shown in the figure above 1-3 bit pattern is the combination of isolated pulse and three consecutive bits (i.e, tribit). Where n denotes the repetitive period specified in the “hpe5022\_isolatedPulsePattern” function. When “hpe5022\_ABS\_POL\_PAT\_MODE\_USER” is selected, the absolute polarity pattern will be defined by “hpe5022\_absolutePolarityPattern” function.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'mode' is out of range.

**See Also** “hpe5022\_absolutePolarityPatternMode\_Q” on page 589

## hpe5022\_absolutePolarityPatternMode\_Q

**C Syntax** ViStatus hpe5022\_absolutePolarityPatternMode\_Q(ViSession id, ViInt16 mode);

**Visual Basic Syntax** hpe5022\_absolutePolarityPatternMode\_Q(ByVal id As Long, ByRef mode As Integer) As Long

**Description** This function returns the specified configuration of the data pattern.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- mode
 

Description	Returns the type of data pattern for absolute polarity measurement.
Direction	OUT
Values	

Name	Value	Description
hpe5022_ABS_POL_PAT_MODE_AUTO	0	1-3 bit pattern
hpe5022_ABS_POL_PAT_MODE_USER	1	user-defined pattern

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'mode' is out of range.

**See Also** "hpe5022\_absolutePolarityPatternMode" on page 587

## **hpe5022\_absolutePolarityPattern**

- C Syntax** ViStatus hpe5022\_absolutePolarityPattern(ViSession id, ViInt16 dataForm, ViInt32 bitLength, const ViChar data []);
- Visual Basic Syntax** hpe5022\_absolutePolarityPattern(ByVal id As Long, ByVal dataForm As Integer, ByVal bitLength As Long, ByVal data As String) As Long
- Description** This function specifies the user data pattern for absolute polarity measurement. When the absolute polarity pattern mode is “hpe5022\_ABS\_POL\_PAT\_MODE\_AUTO”, this function is of no effect. If you want to use the user-defined pattern for absolute polarity test, change the absolute polarity pattern mode to “USER”, then call this function to define the user-defined pattern.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - dataForm
 

Description	Specifies the data format.
Direction	IN
Values	

Name	Value	Description
hpe5022_USER_DATA_HEX	0	Hexadecimal format (0-F or 0-f)
hpe5022_USER_DATA_BIN	1	Binary format (0 or 1)
  - bitLength
 

Description	Specifies the bit length of the user data pattern.
Direction	IN
Values	

Name	Value
hpe5022_PAT_LENGTH_MIN	0
hpe5022_PAT_LENGTH_MAX	32,768
  - data
 

Description	Specifies the user data pattern. When hexadecimal format is used, the bit sequence of the user data pattern is generated as
-------------	-----------------------------------------------------------------------------------------------------------------------------

MSB (most significant bit) first and LSB (least significant bit) last.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataForm', 'bitLength' and/or 'data' is out of range.
hpe5022_ERROR_INV_DATA_SIZE	The specified user data pattern is shorter than the use data bit length.
hpe5022_ERROR_INV_DATA_TYPE	The use data is specified by an invalid character.

**See Also**

“hpe5022\_absolutePolarityPattern\_Q” on page 592

## **hpe5022\_absolutePolarityPattern\_Q**

**C Syntax** ViStatus hpe5022\_absolutePolarityPattern\_Q(ViSession id, ViInt16 dataForm, ViPInt32 bitLength, const ViChar data []);

**Visual Basic Syntax** hpe5022\_absolutePolarityPattern\_Q(ByVal id As Long, ByVal dataForm As Integer, ByRef bitLength As Long, ByVal data As String) As Long

**Description** This function returns the specified user data pattern for absolute polarity measurement. When the selected pattern mode is “hpe5022\_ABS\_POL\_PAT\_MODE\_AUTO” this function will return the 1-3 bit pattern.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

- dataForm
 

Description	Specifies the data format.
Direction	IN

Values

Name	Value	Description
hpe5022_USER_DATA_HEX	0	Hexadecimal format (0-F or 0-f)
hpe5022_USER_DATA_BIN	1	Binary format (0 or 1)

- bitLength
 

Description	Returns the bit length of the user data pattern.
Direction	OUT

Values

Name	Value
hpe5022_PAT_LENGTH_MIN	0
hpe5022_PAT_LENGTH_MAX	32,768

- data
 

Description	Returns the user data pattern.
-------------	--------------------------------



## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataForm' is out of range.

## See Also


“hpe5022\_absolutePolarityPattern” on page 590

## **hpe5022\_measureAbsolutePolarity**

- C Syntax** ViStatus hpe5022\_measureAbsolutePolarity(ViSession id, ViInt16 ave);
- Visual Basic Syntax** hpe5022\_measureAbsolutePolarity(ByVal id As Long, ByVal ave As Integer) As Long
- Description** This function measures absolute polarity.
- Parameters**
1. Move the head to the write track offset as specified by the “hpe5022\_writeTrackOffset” function.
  2. Execute a erase (same as the “hpe5022\_erase” function) for an entire track.
  3. Write an isolated pulse pattern as specified by the “hpe5022\_isolatedPulsePattern” function.
  4. Move the head to the read track offset as specified by “hpe5022\_readTrackOffset” function.
  5. Measure the TAA of the isolated pulse.
  6. Move the head to the write track offset as specified by the “hpe5022\_writeTrackOffset” function.
  7. Execute a erase (same as the “hpe5022\_erase” function) for an entire track.
  8. Write the user-defined polarity pattern or 1-3 bit pattern.
  9. Move the head to the read track offset as specified by “hpe5022\_readTrackOffset” function.
  10. Measure Tribit-TAA.
  11. Iterate steps 1 to 10 for averaging.
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - ave
    - Description Specifies the number of average counts.
    - Direction IN
    - Values

Name	Value
hpe5022_ABS_POL_COUN_MIN	1
hpe5022_ABS_POL_COUN_MAX	50

**Figure 3-20 Absolute Polarity Pattern**

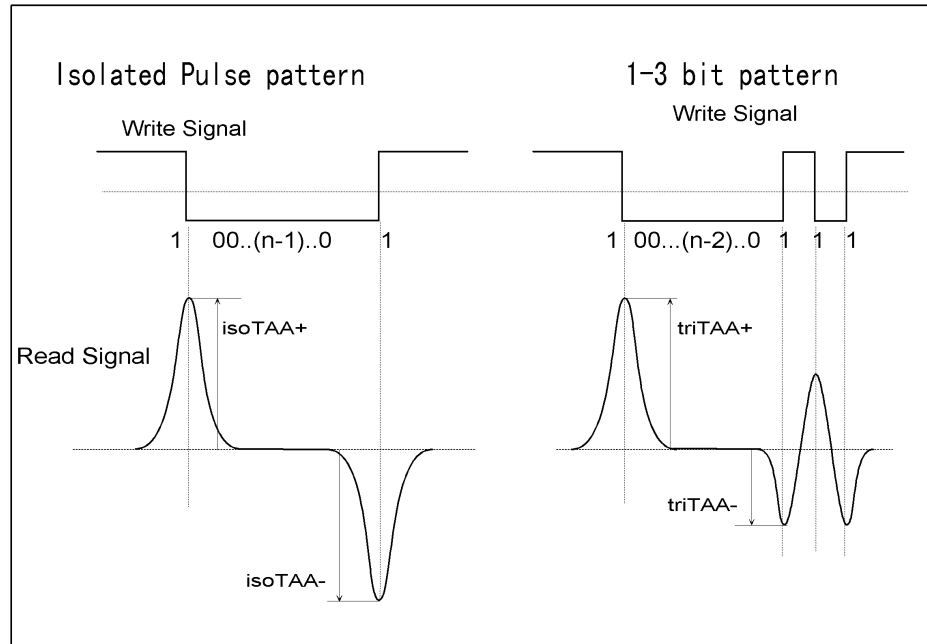

Absolute polarity pattern is a combination of isolated pulse and three consecutive bits (tribit) as shown in the figure above. Three consecutive bits are written over the  $isoTAA-$ . Where  $n$  denotes the number of repetitive periods specified in the “`hpe5022_isolatedPulsePattern`” function.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
<code>hpe5022_ERROR_HARD_HAMP</code>	Hardware error is detected in the head amplifier.
<code>hpe5022_ERROR_INV_ID</code>	The handle specified by 'id' is invalid.
<code>hpe5022_ERROR_INV_PARAMETER</code>	The parameter 'measFunc', 'sector' and/or 'rev' is out of range.

Function Reference

Function Reference  
**Absolute Polarity Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before this function is executed. See the “hpe5022_driveState” function.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

“hpe5022\_setupAbsolutePolarity” on page 597

“hpe5022\_absolutePolarity\_Q” on page 599

“hpe5022\_absolutePolarityIsolatedPulseTaa\_Q” on page 601

“hpe5022\_absolutePolarityIsolatedPulseTaaDataSize\_Q” on page 603

“hpe5022\_absolutePolarityIsolatedPulseTaaData\_Q” on page 604

## hpe5022\_setupAbsolutePolarity

**C Syntax** ViStatus hpe5022\_setupAbsolutePolarity(ViSession id, ViInt16 ave, ViPObject testHndl);

**Visual Basic Syntax** hpe5022\_setupAbsolutePolarity(ByVal id As Long, ByVal ave As Integer, ByRef testHndl as Long) As Long

**Description** This function assigns the absolute polarity measurement sequence to test identifier. Refer to the “hpe5022\_measureAbsolutePolarity” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function. Moreover, the measurement result is returned by the “hpe5022\_absolutePolarity\_Q”.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  
- ave
 

Description	Specifies the number of measurement revolutions to be averaged.
Direction	IN
Values	

Name	Value
hpe5022_ABS_POL_COUN_MIN	1
hpe5022_ABS_POL_COUN_MAX	50
  
- testHndl
 

Description	Returns the test handle.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Function Reference  
**Absolute Polarity Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_PARAMETER	The parameter 'ave' is out of range.
hpe5022_ERROR_MEM_ALLOC	Can not allocate enough memory.

**See Also**

“hpe5022\_measureAbsolutePolarity” on page 594

“hpe5022\_absolutePolarity\_Q” on page 599

## hpe5022\_absolutePolarity\_Q

- C Syntax** ViStatus hpe5022\_absolutePolarity\_Q(ViSession id, ViPReal64 abs\_pol, ViPReal64 iso\_taa);
- Visual Basic Syntax** hpe5022\_absolutePolarity\_Q(ByVal id As Long, ByRef abs\_pol As Double, ByRef iso\_taa as Double) As Long
- Description** This function returns the measured data of the absolute polarity.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - abs\_pol
 

Description	Returns the measured absolute polarity.
Direction	OUT
Values	

### Equation 3-2 Absolute Polarity

$$AbsPol = \frac{\left(\frac{TribitTAA_{Pos}}{IsoTAA_{Pos}}\right) - \left(\frac{TribitTAA_{Neg}}{IsoTAA_{Neg}}\right)}{\left(\frac{TribitTAA_{Pos}}{IsoTAA_{Pos}}\right) + \left(\frac{TribitTAA_{Neg}}{IsoTAA_{Neg}}\right)}$$

- iso\_taa
 

Description	Returns the measured isolated TAA.
Unit	Volts
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Absolute Polarity Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The returned abs_pol and iso_taa data are corrupt.

**See Also**

“hpe5022\_measureAbsolutePolarity” on page 594

“hpe5022\_setupAbsolutePolarity” on page 597



## hpe5022\_absolutePolarityIsolatedPulseTaa\_Q

**C Syntax** ViStatus hpe5022\_absolutePolarityIsolatedPulseTaa\_Q(ViSession id, ViPReal64 taa, ViPReal64 taaPos, ViPReal64 taaNeg, ViPReal64 taaAsym);

**Visual Basic Syntax** hpe5022\_absolutePolarityIsolatedPulseTaa\_Q(ByVal id As Long, ByRef taa As Double, ByRef taaPos as Double, ByRef taaNeg As Double, ByRef taaAsym As Double) As Long

**Description** This function returns the measurement data of the Isolated Pulse TAA.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- taa
 

Description	Returns the TAA of isolated pulse.
Unit	Volts
Direction	OUT
- taaPos
 

Description	Returns the TAA+ of isolated pulse.
Unit	Volts
Direction	OUT
- taaNeg
 

Description	Returns the TAA- of isolated pulse.
Unit	Volts
Direction	OUT
- taaAsym
 

Description	Returns the TAA Asymmetry of isolated pulse.
Unit	Volts
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Absolute Polarity Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The taa, taaPos, taaNeg and taaAsym data are corrupt.

**See Also**

“hpe5022\_measureAbsolutePolarity” on page 594

“hpe5022\_absolutePolarityIsolatedPulseTaaDataSize\_Q” on page 603

“hpe5022\_absolutePolarityIsolatedPulseTaaData\_Q” on page 604

“hpe5022\_absolutePolarityIsolatedPulseTaaStatistic\_Q” on page 606

## **hpe5022\_absolutePolarityIsolatedPulseTaaDataSize\_Q**

- C Syntax** ViStatus hpe5022\_absolutePolarityIsolatedPulseTaaDataSize\_Q(ViSession id, ViPInt32 size);
- Visual Basic Syntax** hpe5022\_absolutePolarityIsolatedPulseTaaDataSize\_Q(ByVal id As Long, ByRef size As Long) As Long
- Description** This function returns the TAA data size of the Isolated Pulse.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - size
 

Description	Returns the TAA data size of the Isolated Pulse.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The returned data size is corrupt.

- See Also**
- “hpe5022\_measureAbsolutePolarity” on page 594
  - “hpe5022\_absolutePolarityIsolatedPulseTaa\_Q” on page 601
  - “hpe5022\_absolutePolarityIsolatedPulseTaaData\_Q” on page 604
  - “hpe5022\_absolutePolarityIsolatedPulseTaaStatistic\_Q” on page 606

### **hpe5022\_absolutePolarityIsolatedPulseTaaData\_Q**

**C Syntax** ViStatus hpe5022\_absolutePolarityIsolatedPulseTaaData\_Q(ViSession id, ViInt16 dataType, ViReal64 data[]);

**Visual Basic Syntax** hpe5022\_absolutePolarityIsolatedPulseTaaData\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long

**Description** This function returns the specified data type of the Isolated Pulse TAA.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- dataType
  - Description Specifies the TAA data type of the Isolated Pulse. Four data types can be selected from the table below.

Values

Name	Value	Description
hpe5022_DATA_TAA	0	TAA
hpe5022_DATA_TAA_POS	1	TAA +
hpe5022_DATA_TAA_NEG	2	TAA -
hpe5022_DATA_TAA_ASYM	3	TAA Asymmetry

Direction IN

- data
  - Description Returns the TAA data of the Isolated Pulse.
  - Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Error Code	Description
hpe5022_ERROR_DATA_CORRUPT	The returned data is corrupt.

**See Also**

“hpe5022\_absolutePolarityIsolatedPulseTaa\_Q” on page 601

“hpe5022\_absolutePolarityIsolatedPulseTaaDataSize\_Q” on page 603

“hpe5022\_absolutePolarityIsolatedPulseTaaData\_Q” on page 604

“hpe5022\_absolutePolarityIsolatedPulseTaaStatistic\_Q” on page 606

**hpe5022\_absolutePolarityIsolatedPulseTaaStatistic\_Q**

**C Syntax**

ViStatus hpe5022\_absolutePolarityIsolatedPulseTaaStatistic\_Q(ViSession id, ViInt16 dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax**

hpe5022\_absolutePolarityIsolatedPulseTaaStatistic\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description**

This function reports the statistics of the resulting TAA data of the Isolated Pulse.

**Parameters**

- - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- dataType
  - Description Specifies TAA data of the Isolated Pulse. Four data types can be selected from the table below.

Values

Name	Value	Description
hpe5022_DATA_TAA	0	TAA
hpe5022_DATA_TAA_POS	1	TAA +
hpe5022_DATA_TAA_NEG	2	TAA -
hpe5022_DATA_TAA_ASYM	3	TAA Asymmetry

- - Direction OUT
- mean
  - Description Returns the mean value of the selected TAA data of the Isolated Pulse.
  - Direction OUT
- min
  - Description Returns the min value of the selected TAA data of the Isolated Pulse.
  - Direction OUT
- max
  - Description Returns the max value of the selected TAA data of the Isolated Pulse.

- Direction            OUT
- stdDev
- Description        Returns the standard deviation value of the selected TAA data of the Isolated Pulse.
- Direction            OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The returned mean, min, max and stdDev data are corrupt.

**See Also**

- “hpe5022\_absolutePolarityIsolatedPulseTaa\_Q” on page 601
- “hpe5022\_absolutePolarityIsolatedPulseTaaDataSize\_Q” on page 603
- “hpe5022\_absolutePolarityIsolatedPulseTaaData\_Q” on page 604

## **hpe5022\_absolutePolarityTribitTaa\_Q**

### **C Syntax**

ViStatus hpe5022\_absolutePolarityTribitTaa\_Q(ViSession id, ViPReal64 taa, ViPReal64 taaPos, ViPReal64 taaNeg, ViPReal64 taaAsym);

### **Visual Basic Syntax**

hpe5022\_absolutePolarityTribitTaa\_Q(ByVal id As Long, ByRef taa As Double, ByRef taaPos As Double, ByRef taaNeg As Double, ByRef taaAsym As Double) As Long

### **Description**

This function returns the TAA measurement data of Tribit.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- taa
  - Description Returns the TAA data of Tribit.
  - Unit Volt
  - Direction OUT
- taaPos
  - Description Returns the positive TAA data of Tribit.
  - Unit Volt
  - Direction OUT
- taaNeg
  - Description Returns the negative TAA data of Tribit.
  - Unit Volt
  - Direction OUT
- taaAsym
  - Description Returns the TAA Asymmetry data of Tribit.
  - Unit Volt
  - Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error



<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The returned taa, taaPos, taaNeg and taaAsym data are corrupt.

**See Also**

“hpe5022\_measureAbsolutePolarity” on page 594

“hpe5022\_absolutePolarityTribitTaaDataSize\_Q” on page 610

“hpe5022\_absolutePolarityTribitTaaData\_Q” on page 611

“hpe5022\_absolutePolarityTribitTaaStatistic\_Q” on page 613

## **hpe5022\_absolutePolarityTribitTaaDataSize\_Q**

- C Syntax** ViStatus hpe5022\_absolutePolarityTribitTaaDataSize\_Q(ViSession id, ViPInt32 size);
- Visual Basic Syntax** hpe5022\_absolutePolarityTribitTaaDataSize\_Q(ByVal id As Long, ByRef size As Long) As Long
- Description** This function returns the TAA data size of Tribit.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - size
    - Description Returns the TAA data size of Tribit.
    - Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The returned absolute polarity data is corrupt.

- See Also**
- “hpe5022\_measureAbsolutePolarity” on page 594
  - “hpe5022\_setupAbsolutePolarity” on page 597
  - “hpe5022\_absolutePolarityTribitTaa\_Q” on page 608
  - “hpe5022\_absolutePolarityTribitTaaData\_Q” on page 611
  - “hpe5022\_absolutePolarityTribitTaaStatistic\_Q” on page 613

## hpe5022\_absolutePolarityTribitTaaData\_Q

### C Syntax

ViStatus hpe5022\_absolutePolarityTribitTaaData\_Q(ViSession id, ViInt16 dataType, ViReal64 data[]);

### Visual Basic Syntax

hpe5022\_absolutePolarityTribitTaaData\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long

### Description

This function returns the specified TAA data type of Tribit.

### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of TAA data of Tribit. Four data types can be selected from the table below.

Values

Name	Value	Description
hpe5022_DATA_TAA	0	TAA
hpe5022_DATA_TAA_POS	1	TAA +
hpe5022_DATA_TAA_NEG	2	TAA -
hpe5022_DATA_TAA_ASYM	3	TAA Asymmetry

Direction IN

- data

Description Returns the TAA data of Tribit.

Direction OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Function Reference  
**Absolute Polarity Function**

Error Code	Description
hpe5022_ERROR_DATA_CORRUPT	The returned absolute polarity data is corrupt.

**See Also**

“hpe5022\_measureAbsolutePolarity” on page 594

“hpe5022\_setupAbsolutePolarity” on page 597

“hpe5022\_absolutePolarityTribitTaa\_Q” on page 608

“hpe5022\_absolutePolarityTribitTaaDataSize\_Q” on page 610

“hpe5022\_absolutePolarityTribitTaaStatistic\_Q” on page 613

## hpe5022\_absolutePolarityTribitTaaStatistic\_Q

### C Syntax

ViStatus hpe5022\_absolutePolarityIsolatedPulseTaaStatistic\_Q(ViSession id, ViInt16 dataType, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

### Visual Basic Syntax

hpe5022\_absolutePolarityIsolatedPulseTaaStatistic\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

### Description

This function returns the statistics of the TAA data of Tribit.

### Parameters

- |             |                                                                                |
|-------------|--------------------------------------------------------------------------------|
| Description | Specifies the system identifier. This is given by the "hpe5022_init" function. |
| Direction   | IN                                                                             |
- dataType
 

Description	Specifies the type of TAA data of Tribit. Four data types can be selected from the table below.
-------------	-------------------------------------------------------------------------------------------------

Values

Name	Value	Description
hpe5022_DATA_TAA	0	TAA
hpe5022_DATA_TAA_POS	1	TAA +
hpe5022_DATA_TAA_NEG	2	TAA -
hpe5022_DATA_TAA_ASYM	3	TAA Asymmetry

- |             |                                                            |
|-------------|------------------------------------------------------------|
| Description | Returns the mean value of the selected TAA data of Tribit. |
| Direction   | OUT                                                        |
- min
 

Description	Returns the min value of the selected TAA data of Tribit.
Direction	OUT
- max
 

Description	Returns the max value of the selected TAA data of Tribit.
Direction	OUT
- stdDev

**Absolute Polarity Function**

Description	Returns the standard deviation value of the selected TAA data of Tribit.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The returned absolute polarity data is corrupt.

**See Also**

“hpe5022\_measureAbsolutePolarity” on page 594

“hpe5022\_setupAbsolutePolarity” on page 597

“hpe5022\_absolutePolarityTribitTaa\_Q” on page 608

“hpe5022\_absolutePolarityTribitTaaDataSize\_Q” on page 610

“hpe5022\_absolutePolarityTribitTaaData\_Q” on page 611

## Track Profile Measurement Function


This section describes the functions of the track profile measurement. The track profile measurement observes the read track offset capability of the head. This measurement is performed by a parametric module, the narrow band TAA measurement is executed by the spectrum analyzer.

### hpe5022\_measureTrackProfile

<b>C Syntax</b>	ViStatus hpe5022_measureTrackProfile(ViSession id, ViInt16 seqType, ViInt16 mode, ViInt16 measFunc, ViInt16 points, const ViReal64 offset[]);
<b>Visual Basic Syntax</b>	hpe5022_measureTrackProfile(ByVal id As Long, ByVal seqType As Integer, ByVal mode As Integer, ByVal measFunc As Integer, ByVal points As Integer, ByRef offset As Double) As Long
<b>Description</b>	<p>This function measures the TAA parameters according to the specified sequence type. There are three sequence types: 1) erase, write a data, then measure 2) not erase, write a data, then measure 3) only measure. The detailed sequence are as follows:</p> <ol style="list-style-type: none"> <li>1. If seqType is set to “hpe5022_SEQ_ER_WR_M”, perform the three-track-erase. (the entire track erase for 5 positions, the track, its both side tracks, and the center between them.)</li> <li>2. If seqType is set to “hpe5022_SEQ_WR_M”, write the data pattern at the track center. The data pattern is specified by the “hpe5022_selectPattern” function.</li> <li>3. Set i to zero (i = 0)</li> <li>4. Set the read track offset from the track center at ‘offset[i]’ (see parameters).</li> <li>5. Move the head to the read track offset.</li> <li>6. Measure a specified parameter.</li> <li>7. Increment i by 1. (i = i+1).</li> <li>8. If i is less than ‘points’ (see parameters), go to the step 4.</li> <li>9. Set i to ‘points’ (see parameters)</li> <li>10. Decrement i by 1. (i = i-1).</li> <li>11. Set the read track offset from the track center to ‘offset[i]’</li> <li>12. Move the head to the read track offset.</li> <li>13. Measure a specified parameter.</li> <li>14. If i is not equal to zero, go to the step 10.</li> </ol> <p>If ‘mode’ (see parameters) is set to “hpe5022_TP_FORWARD”, skip the steps from 10 to 15. If it is set to “hpe5022_TP_BACKWARD”, skip the steps from 4 to</p>

9.

**Figure 3-21 Track Profile Measurement**

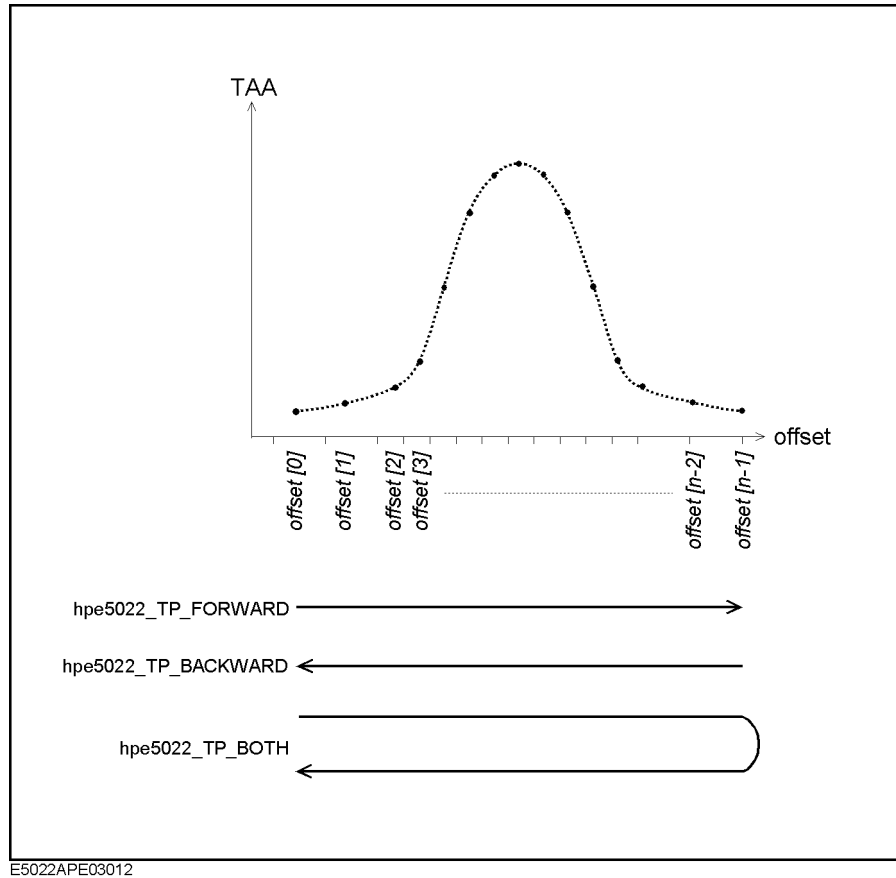

The “hpe5022\_trackProfileData\_Q” function returns the measurement result.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- seqType
  - Description Specifies the type of measurement sequence.
  - Direction IN
  - Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Erase->Write->Measurement
hpe5022_SEQ_WR_M	1	Write->Measurement



Name	Value	Description
hpe5022_SEQ_M	2	Measurement

- mode

Description Specifies the direction of the read offset list array. See Figure 3-21.

Direction IN

Values

Name	Value	Description
hpe5022_TP_FORWARD	1	The argument of offset array increases from 0 to 'points-1'.
hpe5022_TP_BACKWARD	2	The argument of offset array decreases from 'points-1' to 0.
hpe5022_TP_BOTH	3	The argument of offset array increases from 0 to 'points-1' and then decreases from 'points-1' to 0.

- measFunc

Description Specifies the type of measurement.

Direction IN

Values

Name	Value	Description
hpe5022_MEAS_TAA	1	Measure TAA
hpe5022_MEAS_NB_TAA	5	Measure narrow band TAA

- points

Description Specifies the number of measurement points. This number must be the same as the array size of the read offset list.

Direction IN

Values

Name	Value
hpe5022_TRACK_PROFILE_SIZE_MIN	1

**Track Profile Measurement Function**

Name	Value
hpe5022_TRACK_PROFILE_SIZE_MAX	201

- offset

**Description**

Specifies the read offset as the data array. The read offset will be set to the data in array order. The direction depends on the parameter 'mode'.

If the "hpe5022\_trackOffsetCompValue" function set the head offset value, the range of the offset is changed. For example, the head offset value in

"hpe5022\_trackOffsetCompValue" is set at  $1.0 \times 10^{-6}$ , the maximum and the minimum values are  $5.0 \times 10^{-6}$  and  $-7.0 \times 10^{-6}$ , respectively.

**Direction**

IN

**Unit**

Meter

**Values**

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

**Return Values**

Completion Code	Description
VL_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_AUTO_RANGE_FAIL	The autoranging in the track profile measurement is failed. Check if the parameter setting and head is correct.
hpe5022_ERROR_CAL_DATA_CORRUPT	Amplitude calibration for 3GHz Spectrum Analyzer has not been done.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Error Code	Description
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the “hpe5022_driveState” function.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘seqType’, ‘mode’, ‘measFunc’, ‘points’ and/or ‘offset’ is out of range. Check if the head offset compensation value by using “hpe5022_trackOffsetCompValue_Q” function. If it is not 0, the range is narrowed.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

“hpe5022\_trackProfileData\_Q” on page 623

“hpe5022\_selectPattern” on page 119

“hpe5022\_trackOffsetCompValue” on page 984

**Track Profile Measurement Function****hpe5022\_setupTrackProfile****C Syntax**

```
ViStatus hpe5022_setupTrackProfile(ViSession id, ViInt16 seqType, ViInt16 mode, ViInt16 measFunc, ViInt16 points, const ViReal64 offset[], ViPObject testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupTrackProfile(ByVal id As Long, ByVal seqType As Integer, ByVal mode As Integer, ByVal measFunc As Integer, ByVal points As Integer, ByRef offset As Double, ByRef testHndl As Long) As Long
```

**Description**

This function assigns the track profile measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureTrackProfile” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_trackProfileData\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Specifies the type of measurement sequence.
Direction	IN
Values	Same as the ‘seqType’ in the “hpe5022_measureTrackProfile” function.
- mode
 

Description	Specifies the direction of the argument of the read offset list array.
Direction	IN
Values	Same as the ‘mode’ in the “hpe5022_measureTrackProfile” function.
- measFunc
 

Description	Specifies the type of measurement.
Direction	IN
Values	Same as the ‘measFunc’ in the “hpe5022_measureTrackProfile” function.

- **points**

**Description** Specifies the number of measurement points. This number must be the same as the array size of the read offset list.

When the 'mode' is not "hpe5022\_TP\_BOTH", the maximum value of this parameter is "hpe5022\_TRACK\_PROFILE\_SIZE\_MAX".

When the 'mode' is "hpe5022\_TP\_BOTH", the maximum value of this parameter is "hpe5022\_TRACK\_PROFILE\_SIZE\_MAX" / 2.

**Direction** IN

**Values** Same as the 'points' in the "hpe5022\_measureTrackProfile" function.
- **offset**

**Description** Specifies the read offset as the data array. The read offset will be set to the data array order. The direction depends on the parameter 'mode'.

**Direction** IN

**Unit** Meter

**Values** Same as the 'offset' in the "hpe5022\_measureTrackProfile" function.
- **testHndl**

**Description** Returns the test identifier. This identifier is used to execute the track profile measurement by the "hpe5022\_measure" function.

**Direction** OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType', 'mode', 'measFunc', 'points' and/or 'offset' is out of range.

Function Reference  
**Track Profile Measurement Function**

Error Code	Description
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_measureTrackProfile” on page 615

“hpe5022\_trackProfileData\_Q” on page 623

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

## hpe5022\_trackProfileData\_Q

**C Syntax** ViStatus hpe5022\_trackProfileData\_Q(ViSession id, ViInt16 tpDataType, ViInt16 dataType, ViReal64 data[]);

**Visual Basic Syntax** hpe5022\_trackProfileData\_Q(ByVal id As Long, ByVal tpDataType As Integer, ByVal dataType As Integer, ByRef data As Double) As Long

**Description** This function returns the result of the track profile measurement. The returned data is set in array, and its size is specified by the ‘points’ parameter. The ‘points’ and read track offset list are specified by the “hpe5022\_measureTrackProfile” function and “hpe5022\_setupTrackProfile” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  
- tpDataType
 

Description	Specifies the type of track profile result.  When the “hpe5022_TP_BOTH” is selected in the “hpe5022_measureTrackProfile” or “hpe5022_setupTrackProfile” function, selecting the “hpe5022_TP_DATA_AVE” returns an averaging result of the forward and backward results.  When the “hpe5022_TP_FORWARD” is selected in that function, selecting the “hpe5022_TP_DATA_AVE” returns the same result of “hpe5022_TP_DATA_FOR”. If the hpe5022_TP_DATA_BACK” is selected, an error of “hpe5022_ERROR_INV_PARAMETER” occurs.  When the “hpe5022_TP_BACKWARD” is selected in that function, selecting the “hpe5022_TP_DATA_AVE” returns the same result of “hpe5022_TP_DATA_BACK”. If the hpe5022_TP_DATA_FOR” is selected, an error of “hpe5022_ERROR_INV_PARAMETER” occurs.
Direction	IN
Values	

Name	Value	Description
hpe5022_TP_DATA_AVE	1	Averaged data
hpe5022_TP_DATA_FOR	2	Forward data
hpe5022_TP_DATA_BACK	3	Backward data

**Track Profile Measurement Function**• **dataType**

Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry
hpe5022_DATA_NB_TAA	15	Narrow band TAA

• **data**

Description Returns the data (set in array) of the parameter specified by the 'dataType'. The size of array is specified by the 'points' parameter in the "hpe5022\_measureTrackProfile" or "hpe5022\_setupTrackProfile" function. Each value in array is the measurement result relative to the read offset that corresponds to the same order value in the array of the read offset list.

Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'tpDataType' and/or 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The Track Profile data is corrupt. Check if your measurement sequence is correct. Also, check if 'tpDataType' is correct.

**See Also**

"hpe5022\_measureTrackProfile" on page 615



“hpe5022\_setupTrackProfile” on page 620

## **hpe5022\_calculateTrackWidth\_Q**

### **C Syntax**

ViStatus hpe5022\_calculateTrackWidth\_Q(ViSession id, ViInt16 dataType, ViPReal64 trackWidth);

### **Visual Basic Syntax**

hpe5022\_calculateTrackWidth\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef trackWidth As Double) As Long

### **Description**

This function calculates the equivalent write track width for the track profile measurement and the equivalent read track width for the micro track profile. Before this function is executed, the track profile measurement must be performed. See chapter 5 in the Operaion Manual for the definition of the track width.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- dataType
  - Description Specifies the type of data to be reported.
  - Direction IN
  - Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_NB_TAA	15	Narrow band TAA

- trackWidth
  - Description Returns the track width.
  - Direction OUT
  - Unit Meter

### **Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The track profile data is corrupt. Check if your measurement sequence is correct.
hpe5022_ERROR_PEAK_NOT_FOUND	The peak can't be found in the track profile result. Check if the track profile is performed properly.

**See Also**

“hpe5022\_measureTrackProfile” on page 615

“hpe5022\_setupTrackProfile” on page 620

“hpe5022\_trackProfileData\_Q” on page 623

**hpe5022\_calculateReadWriteOffset\_Q****C Syntax**

```
ViStatus hpe5022_calculateReadWriteOffset_Q(ViSession id, ViInt16
dataType, ViPReal64 rwOffset);
```

**Visual Basic Syntax**

```
hpe5022_calculateReadWriteOffset_Q(ByVal id As Long, ByVal dataType As
Integer, ByRef rwOffset As Double) As Long
```

**Description**

This function calculates the read/write offset. Before this function is executed, the track profile measurement must be performed. See chapter 5 in the Operation Manual for the definition of the read/write offset.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_NB_TAA	15	Narrow band TAA

- rwOffset

Description Returns the read write offset.

Direction OUT

Unit Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The track profile data is corrupt. Check if your measurement sequence is correct.
hpe5022_ERROR_PEAK_NOT_FOUND	The peak can not be found in the track profile result. Check if the track profile is performed properly.

**See Also**

“hpe5022\_measureTrackProfile” on page 615

“hpe5022\_trackProfileData\_Q” on page 623

## hpe5022\_calculateRWOOffsetAndWidth\_Q

### C Syntax

ViStatus hpe5022\_calculateRWOOffsetAndWidth\_Q(ViSession id, ViInt16 dataType, ViReal64 levOpct, ViInt16 rwOffsPos, ViReal64 thresLow, ViReal64 thresHigh, ViPReal64 rwOffset, ViPReal64 readTW, ViPReal64 writeTW);

### Visual Basic Syntax

hpe5022\_calculateRWOOffsetAndWidth\_Q(ByVal id As Long, ByVal dataType As Integer, ByVal levOpct As Double, ByVal rwOffsPos As Integer, ByVal thresLow As Double, ByVal thresHigh As Double, ByRef rwOffset As Double, ByRef readTW As Double, ByRef writeTW As Double) As Long


### Description

This function allows you to calculate the read/write offset by various definition. Before this function is executed, the track profile measurement must be performed first. There are three types of definition for read/write offset calculation as described below.

- Center Point of 50 % level

Figure 3-22 shows the definition of this method. Using the data within the range of 'thresHigh' and 'thresLow' you can calculate the least square approximation linear line. The center point is defined at the midpoint of the 50 % level between the two lines. The read/write offset is defined as the horizontal distance from the center point to the track center at write sequence.

**Figure 3-22 Center Point of 50% Level**

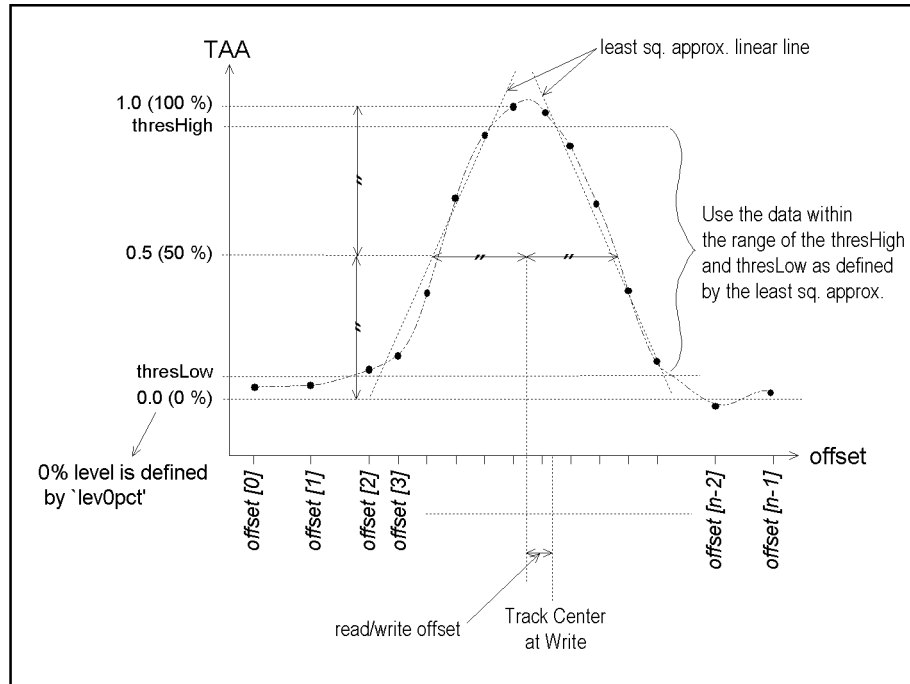


- Maximum Point of Track Profile Result

Figure 3-23 shows the definition of this method. The write/read offset is defined as the horizontal distance between the maximum point of the track

profile result and the track center at write sequence.


**Figure 3-23** Maximum Point of Track Profile Result

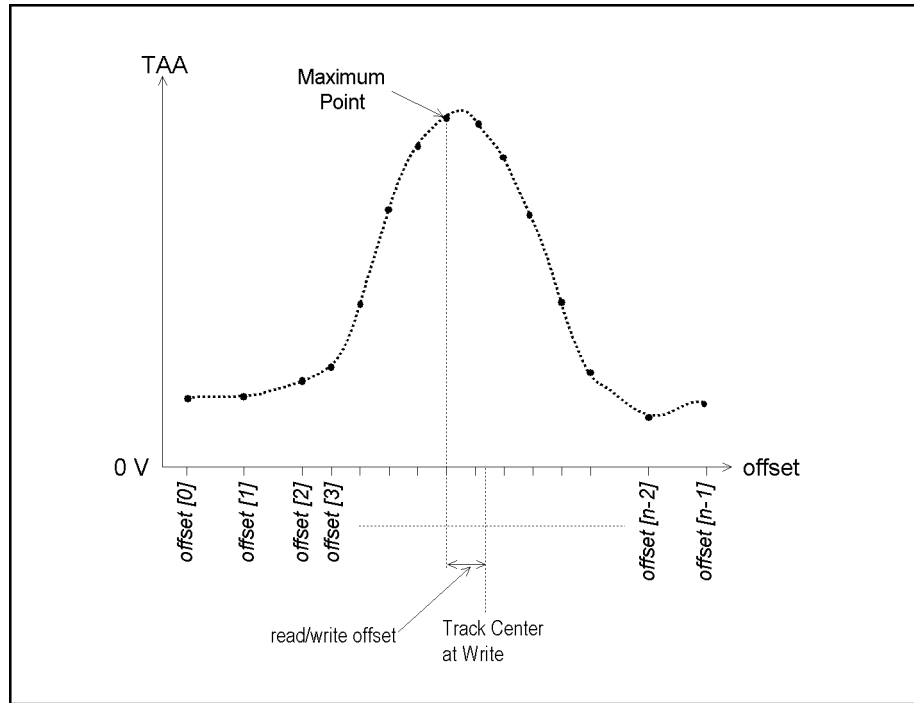

- Least Square Approximation Linear Line Cross Point


Figure 3-24 shows the definition of this method. The write/read offset is defined as the horizontal distance from the intersection of two Least Square Approximation Linear Lines and the track center at write sequence.

**Figure 3-24** Least Square Approximation Linear Line Cross Point

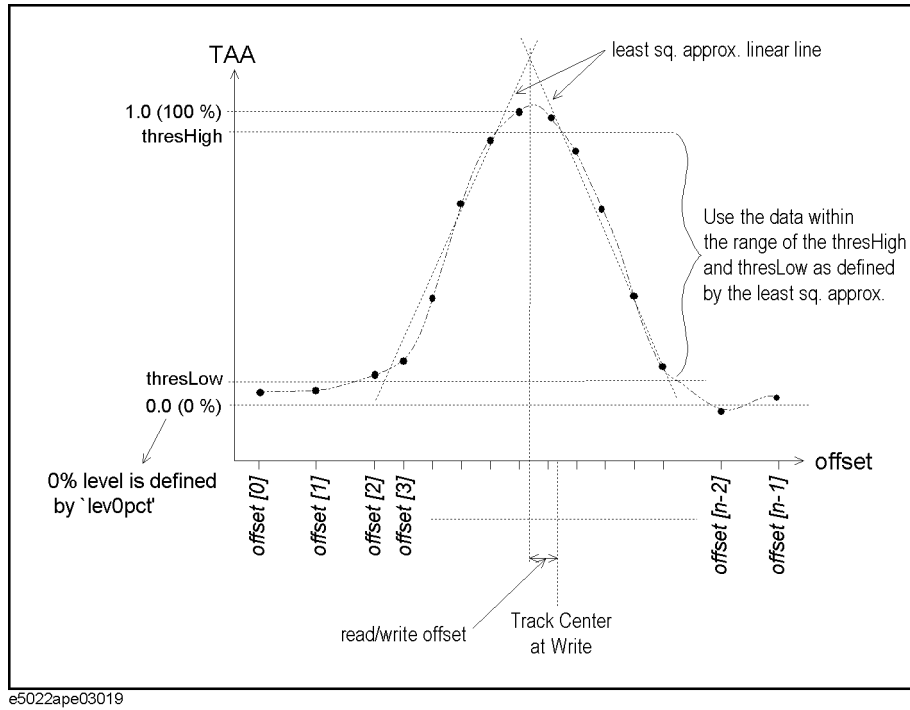

The definitions of the calculated write track width and read track width are shown in Figure 3-25.

**Figure 3-25** Write Track Width and Read Track Width Definitions

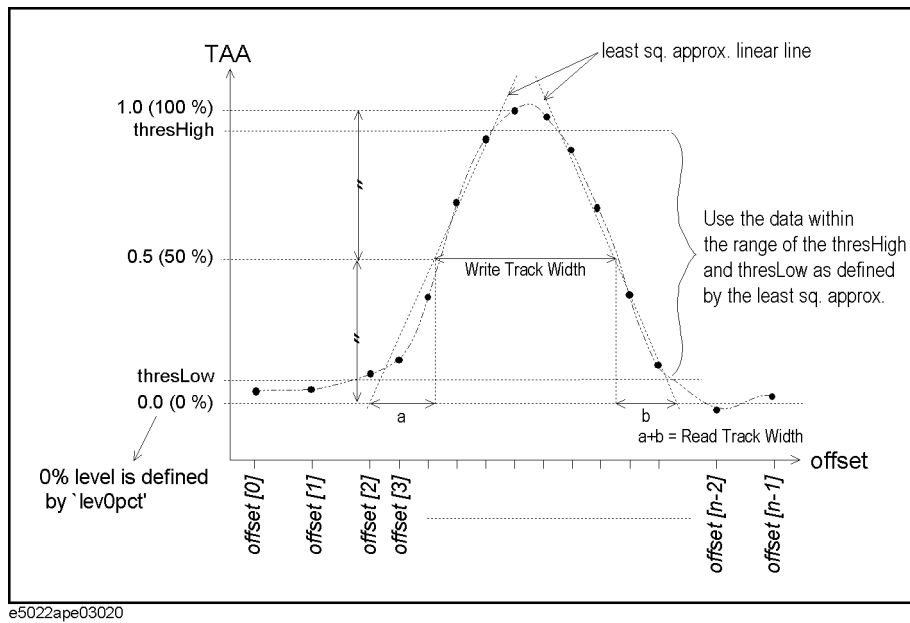



**Parameters**

- **id**  
 Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- **dataType**  
 Description Specifies the type of data to be reported.

Direction IN


Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_NB_TAA	15	Narrow band TAA

- **lev0pct**  
 Description Specifies 0% level to calculate the read/write offset. This level is defined as the percentage of the maximum level of the track profile result. If you want to set 0 V level as the 0 % level for calculation, set to 0.0 or "hpe5022\_TAA\_LEV\_0" for this parameter. When "hpe5022\_TAA\_LEV\_PROF\_MIN" is selected, the minimum level of the track profile result is set as the 0% level. Also, you can set various levels between 0 and the maximum voltage of TAA. The level is set by a ratio of the maximum TAA level.

Function Reference  
**Track Profile Measurement Function**

**Figure 3-26 ‘lev0pct’ definition**

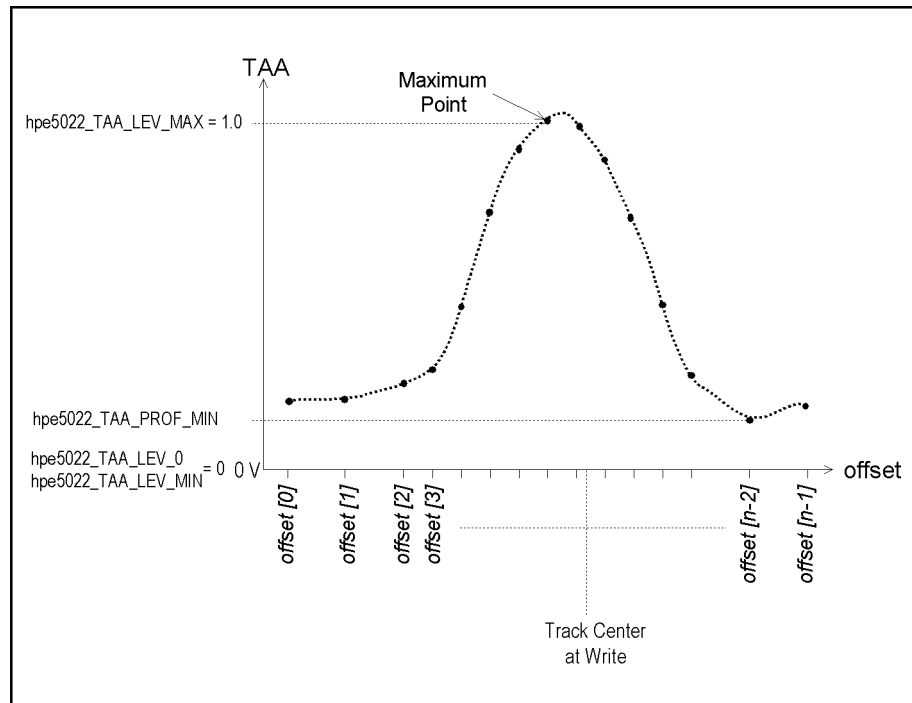

e5022ape03016

Direction IN

Values

Name	Value
hpe5022_TAA_LEV_PROF_MIN	-1
hpe5022_TAA_LEV_0	0.0
hpe5022_TAA_LEV_MIN	0.0
hpe5022_TAA_LEV_MAX	1.0

- rwOffsPos

Description Specifies the calculation method of the read write offset.

Direction IN

Values

Name	Value	Description
hpe5022_RWOF_POS_50PERC_CENT	0	Center Point at 50% level
hpe5022_RWOF_POS_PROF_MAX	1	Maximum point of track profile

Name	Value	Description
hpe5022_RWOF_POS_CROS_INT_LINE	2	Least Sq. Approx. Linear Line Cross Point

- thresLow

**Description** Specifies the low threshold for least square root approximation. The measurement result points in the range between the thresLow and thresHigh is used to calculate the least root approximation line.

**Direction** IN

**Values**

Name	Value
hpe5022_INT_THR_MIN	0.0
hpe5022_INT_THR_MAX	1.0

- thresHigh

**Description** Specifies the high threshold for the least square root approximation. This value must be more than the value specified by 'thresLow'.

**Direction** IN

**Values**

Name	Value
hpe5022_INT_THR_MIN	0.0
hpe5022_INT_THR_MAX	1.0

- rwOffset

**Description** Returns the read write offset.

**Direction** OUT

**Unit** Meter

- readTW

**Description** Returns the equivalent read track width.

**Direction** OUT

**Unit** Meter

**Track Profile Measurement Function**

- writeTW

Description Returns the equivalent write track width.

Direction OUT

Unit Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType', 'levOpct', 'rwOffsPos', 'thresLow' and/or 'thresHigh' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The track profile data is corrupt. Check if your measurement sequence is correct.
hpe5022_ERROR_PEAK_NOT_FOUND	The peak can not be found in the track profile result. Check if the track profile is performed properly.

**See Also**

“hpe5022\_measureTrackProfile” on page 615

“hpe5022\_trackProfileData\_Q” on page 623

## Micro Track Function

This section describes the functions related with micro track profile measurement. There are two types of micro track profile measurement.

One method of creating micro track is to erase both sides of the track with a monitoring the level. After creating a micro track, then measure the track profile using the “hpe5022\_measureTrackProfile” functions.

Another method in creating micro track profile is through the use of fast micro track profile. This method creates micro track by erasing both sides of the track at a specified width. There is no level monitoring during erase, it includes the sequence such that allows for faster measurement.

### hpe5022\_microTrackConfig

#### C Syntax

```
ViStatus hpe5022_microTrackConfig(ViSession id, ViReal64 start, ViReal64 step, ViReal64 ratio);
```

#### Visual Basic Syntax

```
hpe5022_microTrackConfig(ByVal id As Long, ByVal start As Double, ByVal step As Double, ByVal ratio As Double) As Long
```

#### Description

This function controls the micro track configurations. This function does not execute the creation of micro track. The “hpe5022\_createMicroTrack” function creates the micro track. The detailed sequence is as follows:

1. Move the head to the write offset position specified by the “hpe5022\_writeTrackOffset” function.
2. Erase (same as the “hpe5022\_erase” function) for an entire track.
3. Write the data pattern specified by the “hpe5022\_selectPattern” function.
4. Move the head to the read offset position specified by the “hpe5022\_readTrackOffset” function.
5. Measure the narrow band TAA and memorize the result (a).
6. Set the ‘squashPos’ at ‘start’.
7. Move the head at the position of (write offset + squashPos).
8. Erase (same as the “hpe5022\_erase” function) for an entire track.
9. Move the head at the position of (write offset - squashPos).
10. Erase (same as the “hpe5022\_erase” function) for an entire track.
11. Move the head to read offset position.
12. Measure the narrow band TAA.
13. If the measured value is less than the value of (ratio × a), then the procedure is end.


**Micro Track Function**

14. Set the 'squashPos'='SquashPos'-'step'.

15. Go to the step 7 until the squashPos is less than zero.

When the track offset compensation state ("hpe5022\_trackOffsetCompPatternState") is turned on, the position is compensated automatically at the time before the step 7. The "hpe5022\_executeTrackOffsetComp" is not necessary to execute.

**Figure 3-27**      **Micro Track Parameters**

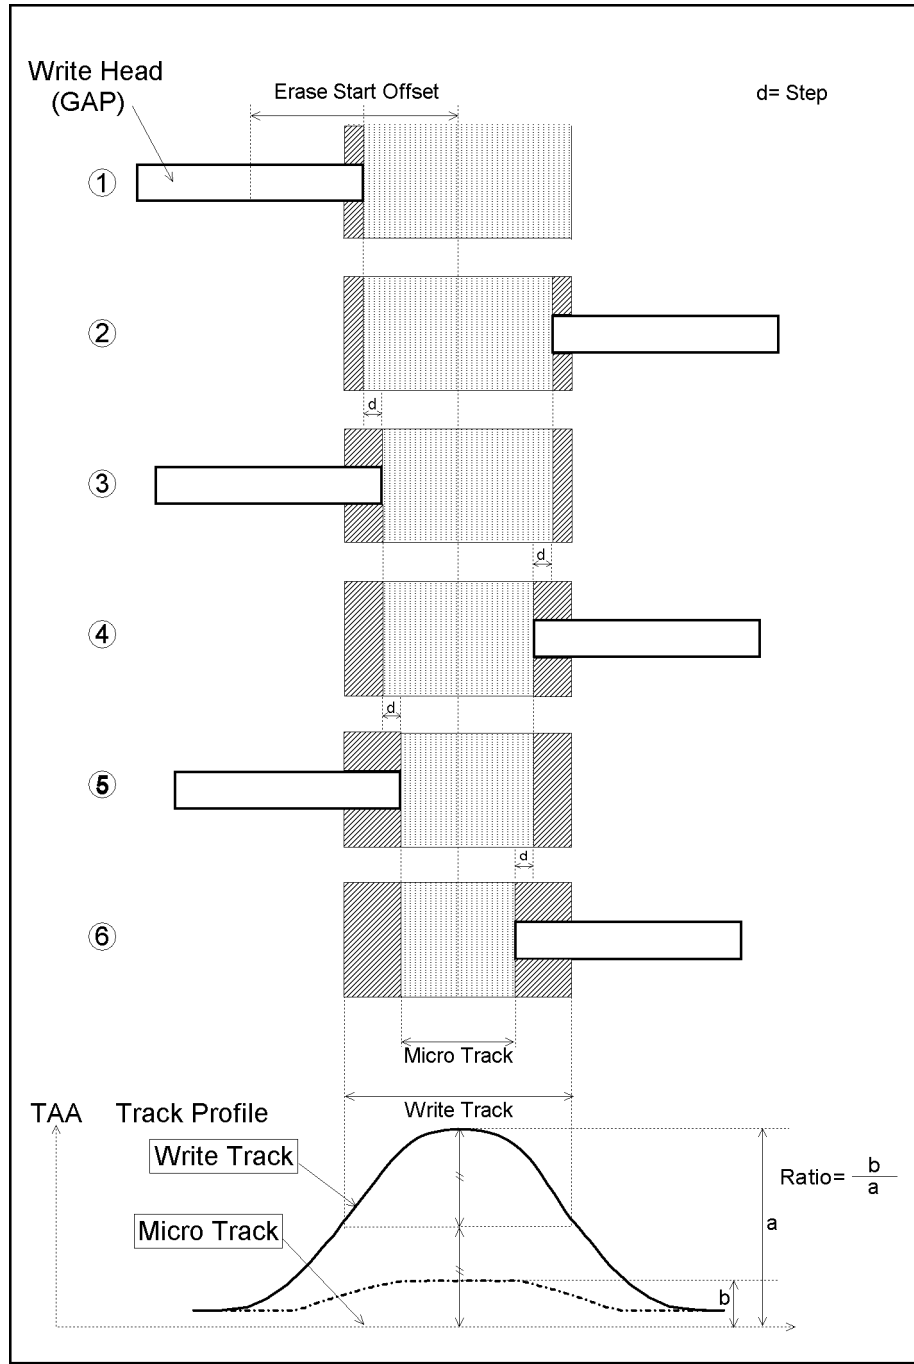

e5022ape03008

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

Function Reference

**Micro Track Function**

## • start

Description	Specifies the start offset of erase sequence.
Direction	IN
Unit	Meter
Preset value	$3.0 \times 10^{-6}$ (same as <code>hpe5022_MICRO_TRACK_START_MAX / 2.0</code> )

## Values

Name	Value
<code>hpe5022_MICRO_TRACK_START_MIN</code>	0
<code>hpe5022_MICRO_TRACK_START_MAX</code>	$6.0 \times 10^{-6}$ (same as “ <code>hpe5022_TRACK_OFFSET_MAX</code> ”)

## • step

Description	Specifies the step size.
Direction	IN
Unit	Meter
Preset value	$6.0 \times 10^{-7}$ (same as the absolute value of ( <code>hpe5022_MICRO_TRACK_START_MAX / 10</code> ))

## Values

Name	Value
<code>hpe5022_MICRO_TRACK_STEP_MIN<sup>a</sup></code>	$1 \times 10^{-9}$
<code>hpe5022_MICRO_TRACK_STEP_MAX</code>	$6.0 \times 10^{-6}$ (same as <code>hpe5022_TRACK_OFFSET_MAX</code> )

a. This value is a software limitation. Actual minimum resolution of piezo depends on its hardware.

## • ratio

Description	Specifies the amplitude ratio of the TAA. When the measured TAA reaches this level which is the initial TAA level multiplied by this ratio, the procedure is done.
Direction	IN
Preset value	0.1



Values

Name	Value
hpe5022_MICRO_TRACK_RATIO_MIN	0.01
hpe5022_MICRO_TRACK_RATIO_MAX	1.0

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'start', 'step' and/or 'ratio' is out of range.

**See Also**

“hpe5022\_createMicroTrack” on page 644

“hpe5022\_microTrackConfig\_Q” on page 642

## **hpe5022\_microTrackConfig\_Q**

### **C Syntax**

ViStatus hpe5022\_microTrackConfig\_Q(ViSession id, ViPReal64 start, ViPReal64 step, ViPReal64 ratio);

### **Visual Basic Syntax**

hpe5022\_microTrackConfig\_Q(ByVal id As Long, ByRef start As Double, ByRef step As Double, ByRef ratio As Double) As Long

### **Description**

This function returns the micro track configuration.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- start
  - Description Returns the start offset of erase sequence.
  - Direction OUT
  - Values Same as the 'start' in the "hpe5022\_microTrackConfig" function.
- step
  - Description Returns the step size.
  - Direction OUT
  - Values Same as the 'step' in the "hpe5022\_microTrackConfig" function.
- ratio
  - Description Returns the amplitude ratio of TAA.
  - Direction OUT
  - Values Same as the 'ratio' in the "hpe5022\_microTrackConfig" function.

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**      “hpe5022\_microTrackConfig” on page 637

## **hpe5022\_createMicroTrack**

**C Syntax** ViStatus hpe5022\_createMicroTrack(ViSession id);

**Visual Basic Syntax** hpe5022\_createMicroTrack(ByVal id As Long) As Long

**Description** This function executes the creation of micro track. See the “hpe5022\_microTrackConfig” function for the sequence. This function doesn’t measure track profile, the track profile measurement should be done before creating a micro track. See the “Micro Track Profile Measurement” on page 52.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error


<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_MICRO_TRACK_FAILED	Fail to create a micro track. The measured TAA level does not reach a specified level. Check if the parameters of the “hpe5022_microTrackConfig” function.

**See Also** “hpe5022\_microTrackConfig” on page 637

## hpe5022\_measureMicroTrackProfile

<b>C Syntax</b>	ViStatus hpe5022_measureMicroTrackProfile(ViSession id, ViInt16 seqType, ViInt16 mode, ViInt16 erasMode, ViReal64 erasPos, ViInt16 points, const ViReal64 offset[]);
<b>Visual Basic Syntax</b>	hpe5022_measureMicroTrackProfile(ByVal id As Long, ByVal seqType As Integer, ByVal mode As Integer, ByVal erasMode As Integer, ByVal erasPos As Double, ByVal points As Integer, ByRef offset As Double) As Long
<b>Description</b>	<p>This function measures a fast micro track profile. This function includes not only the creation of micro track but also the measurement of track profile. The detailed sequence is as follows:</p> <ol style="list-style-type: none"> <li>1. If 'seqType' is set to "hpe5022_SEQ_ER_WR_M", perform the three-track-erase. (the entire track erase for 5 positions, the track, its both side tracks, and the center between them.)</li> <li>2. Write the data pattern specified by the "hpe5022_selectPattern" function.</li> <li>3. Move the head to the offset position specified by the 'erasePos'</li> <li>4. Perform erase with the method specified by "hpe5022_eraseType".</li> <li>5. If 'erasMode' is set to "hpe5022_MTP_ERAS_BOTH_SIDE", Move the head to the offset position specified by the -'erasePos' then perform an erase.</li> <li>6. Set i to zero (i = 0)</li> <li>7. Set the read track offset from the track center at 'offset[i]'.</li> <li>8. Move the head to the read track offset.</li> <li>9. Measure a narrow band TAA.</li> <li>10. Increment i by 1. (i = i+1).</li> <li>11. If i is not equal to 'points', go to the step 7.</li> <li>12. Set i to 'points'</li> <li>13. Decrement i by 1. (i = i-1).</li> <li>14. Set the read track offset from the track center at 'offset[i]'</li> <li>15. Move the head to the read track offset.</li> <li>16. Measure narrow band TAA.</li> <li>17. If i is not equal to zero, go to the step 13.</li> </ol> <p>If 'mode' is set to "hpe5022_TP_FORWARD", skip the steps from 12 to 17. If it is set to "hpe5022_TP_BACKWARD", skip the steps from 6 to 11.</p>

**Figure 3-28 Track Profile Measurement**

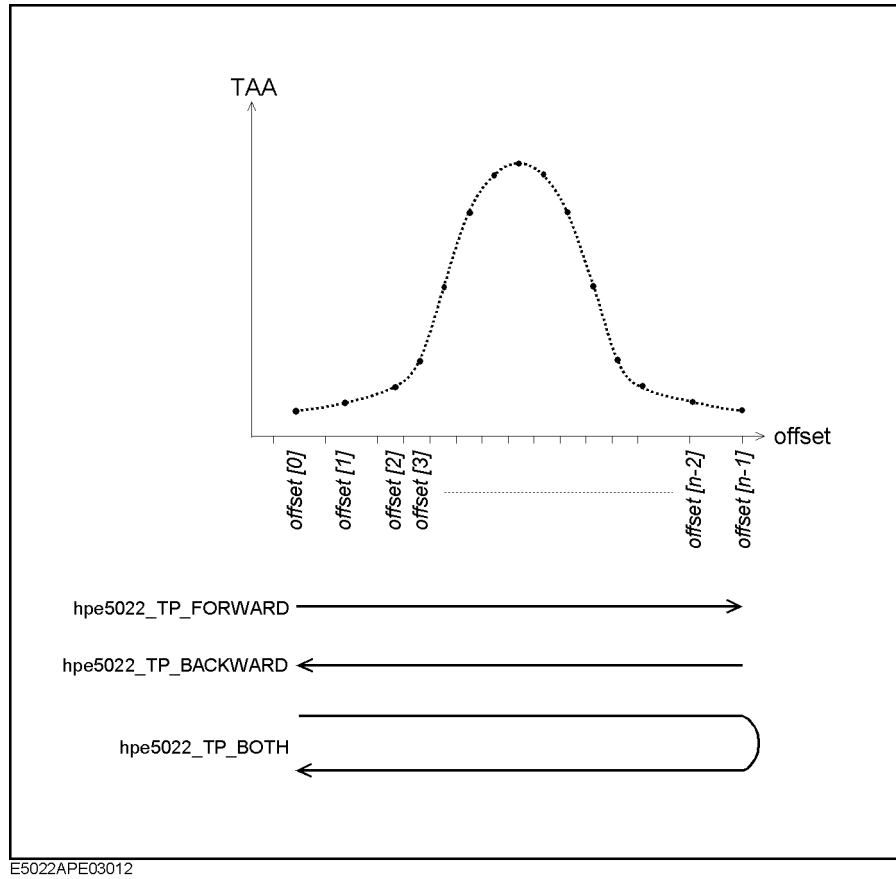

The “hpe5022\_microTrackProfileData\_Q” function returns the measurement result.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- seqType
  - Description Specifies the type of measurement sequence.
  - Direction IN
  - Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Three Track Erase ->Write/Erase Sides of Track ->Measurement

Name	Value	Description
hpe5022_SEQ_WR_M	1	Write/Erase Sides of Track->Measurement

- mode

Description Specifies the direction of the read offset list array. See Figure 3-28.

Direction IN

Values

Name	Value	Description
hpe5022_TP_FORWARD	1	The argument of offset array increases from 0 to 'points-1'.
hpe5022_TP_BACKWARD	2	The argument of offset array decreases from 'points-1' to 0.
hpe5022_TP_BOTH	3	The argument of offset array increases from 0 to 'points-1' and then decreases from 'points-1' to 0.

- erasMode

Description Specifies the type of erase.

Direction IN

Values

Name	Value	Description
hpe5022_MTP_ERAS_SING_SIDE	1	Erase single side only
hpe5022_MTP_ERAS_BOTH_SIDE	2	Erase both sides

- erasPos

Description Specifies the side erase position.

Direction IN

Unit Meter

Values

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$

Function Reference  
**Micro Track Function**

Name	Value
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

- points

**Description** Specifies the number of measurement points. This number must be the same as the array size of the read offset list.

**Direction** IN

**Values**

Name	Value
hpe5022_TRACK_PROFILE_SIZE_MIN	1
hpe5022_TRACK_PROFILE_SIZE_MAX	201

- offset

**Description** Specifies the read offset list as the data array. The read offset is set to the data in array order. The direction depends on the parameter 'mode'

**Direction** IN

**Unit** Meter

**Values**

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.



Error Code	Description
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the “hpe5022_driveState” function.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘seqType’, ‘mode’, ‘erasMode’, ‘erasPos’, ‘points’ and/or ‘offset’ is out of range.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

“hpe5022\_selectPattern” on page 119

“hpe5022\_eraseType” on page 355

“hpe5022\_microTrackProfileData\_Q” on page 655

## **hpe5022\_setupMicroTrackProfile**

**C Syntax** ViStatus hpe5022\_setupMicroTrackProfile(ViSession id, ViInt16 seqType, ViInt16 mode, ViInt16 erasMode, ViReal64 erasPos, ViInt16 points, const ViReal64 offset[], ViPObject testHndl);

**Visual Basic Syntax** hpe5022\_setupMicroTrackProfile(ByVal id As Long, ByVal seqType As Integer, ByVal mode As Integer, ByVal erasMode As Integer, ByVal erasPos As Double, ByVal points As Integer, ByRef offset As Double, ByRef testHndl As Long) As Long

**Description** This function assigns a fast micro track profile measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureMicroTrackProfile” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_microTrackProfileData\_Q” function returns the measurement result.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- seqType
  - Description Specifies the sequence type.
  - Direction IN
  - Values Same as the ‘seqType’ in the “hpe5022\_measureMicroTrackProfile” function.
- mode
  - Description Specifies the direction of the read offset list array.
  - Direction IN
  - Values Same as the ‘mode’ in the “hpe5022\_measureMicroTrackProfile” function.
- erasMode
  - Description Specifies the type of erase.
  - Direction IN
  - Values Same as the ‘erasMode’ in the “hpe5022\_measureMicroTrackProfile” function.
- erasPos
  - Description Specifies the side erase position.

- Direction      IN

Unit             Meter

Values          Same as the 'erasPos' in the "hpe5022\_measureMicroTrackProfile" function.
- points

Description    Specifies the number of measurement points. This number must be the same as the array size of the read offset list.

Direction      IN

Values          Same as the 'points' in the "hpe5022\_measureMicroTrackProfile" function.
- offset

Description    Specifies the read offset list as the data array. The read offset will be set to the data in array order. The direction is depending on the parameter 'mode'

Direction      IN

Unit             Meter

Values          Same as the 'offset' in the "hpe5022\_measureMicroTrackProfile" function.
- testHndl

Description    Returns the test identifier. This identifier is used to execute the micro track profile measurement by the "hpe5022\_measure" function.

Direction      OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

**See Also**                    "hpe5022\_measure" on page 387

Function Reference

**Micro Track Function**

“hpe5022\_releaseSetup” on page 390

“hpe5022\_measureMicroTrackProfile” on page 645

“hpe5022\_microTrackProfileData\_Q” on page 655

## hpe5022\_modifyMicroTrackProfileErasePosition

**C Syntax** ViStatus hpe5022\_modifyMicroTrackProfileErasePosition(ViSession id, ViObject testHndl, ViReal64 erasPos);

**Visual Basic Syntax** hpe5022\_modifyMicroTrackProfileErasePosition(ByVal id As Long, ByVal testHndl As Long, ByVal erasPos As Double) As Long

**Description** This function modifies the side erase position of the micro track profile sequence.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- testHndl
 

Description	Specifies the test identifier. This identifier is used to execute the micro track profile measurement by the "hpe5022_measure" function.
Direction	IN
- erasPos
 

Description	Specifies the modified position of side erase.
Direction	IN
Unit	Meter
Values	

Name	Value
hpe5022_TRACK_OFFSET_MIN	-6.0×10 <sup>-6</sup>
hpe5022_TRACK_OFFSET_MAX	6.0×10 <sup>-6</sup>

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'erasPos' is out of range.

**See Also**

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

“hpe5022\_measureMicroTrackProfile” on page 645

“hpe5022\_microTrackProfileData\_Q” on page 655

## hpe5022\_microTrackProfileData\_Q

**C Syntax** ViStatus hpe5022\_microTrackProfileData\_Q(ViSession id, ViInt16 tpDataType, ViReal64 data[]);

**Visual Basic Syntax** hpe5022\_microTrackProfileData\_Q(ByVal id As Long, ByVal tpDataType As Integer, ByRef data As Double) As Long

**Description** This function returns the result of fast micro track profile measurement. The returned data is set in array, and its size is specified by the 'points' parameter. The 'points' and read track offset list are specified by the "hpe5022\_measureMicroTrackProfile" function and "hpe5022\_setupMicroTrackProfile" function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  
- tpDataType
 

Description	<p>Specifies the type of track profile result.</p> <p>When the "hpe5022_TP_BOTH" is selected in the "hpe5022_measureMicroTrackProfile" or "hpe5022_setupMicroTrackProfile" function, selecting the "hpe5022_TP_DATA_AVE" returns an averaging result of the forward and backward results.</p> <p>When the "hpe5022_TP_FORWARD" is selected in that function, selecting the "hpe5022_TP_DATA_AVE" returns the same result of "hpe5022_TP_DATA_FOR". If the hpe5022_TP_DATA_BACK" is selected, an error of "hpe5022_ERROR_INV_PARAMETER" occurs.</p> <p>When the "hpe5022_TP_BACKWARD" is selected in that function, selecting the "hpe5022_TP_DATA_AVE" returns the same result of "hpe5022_TP_DATA_BACK". If the hpe5022_TP_DATA_FOR" is selected, an error "hpe5022_ERROR_INV_PARAMETER" will occur.</p>
Direction	IN
Values	

Name	Value	Description
hpe5022_TP_DATA_AVE	1	Averaged data
hpe5022_TP_DATA_FOR	2	Forward data
hpe5022_TP_DATA_BACK	3	Backward data

**Micro Track Function**

- data

**Description** Returns the TAA data (set in array). The size of array is specified by the 'points' parameter in the "hpe5022\_measureMicroTrackProfile" or "hpe5022\_setupMicroTrackProfile" function. Each value in array is the measurement result relative to the read offset that corresponds to the same order value in the array of the read offset list.

**Direction** OUT

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'tpDataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The Track Profile data is corrupt. Check if your measurement sequence is correct.

**See Also**

"hpe5022\_measureMicroTrackProfile" on page 645

"hpe5022\_setupMicroTrackProfile" on page 650



## hpe5022\_microTrackProfileTrackWidth\_Q

**C Syntax** ViStatus hpe5022\_microTrackProfileTrackWidth\_Q(ViSession id, ViPReal64 rw);

**Visual Basic Syntax** hpe5022\_microTrackProfileTrackWidth\_Q(ByVal id As Long, ByRef rw As Double) As Long

**Description** This function calculates the equivalent read track width based on the result of the fast micro track profile measurement. The read track width is defined as the width at half amplitude level of the track profile result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- rw
 

Description	Returns the read track width.
Direction	OUT
Unit	Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The track profile data is corrupt. Check if your measurement sequence is correct.
hpe5022_ERROR_PEAK_NOT_FOUND	The peak can't be found in the track profile result. Check if the result of "hpe5022_microTrackProfileData_Q" is proper.

**See Also**

- “hpe5022\_measureMicroTrackProfile” on page 645
- “hpe5022\_setupMicroTrackProfile” on page 650
- “hpe5022\_microTrackProfileData\_Q” on page 655

---

## Write Current Sweep Measurement Function

This section describes the functions related with the write current sweep measurement. This measurement allows you to observe the write current characteristics of the parameters such as TAA and PW.

### hpe5022\_measureWriteCurrentSweep

#### C Syntax

```
ViStatus hpe5022_measureWriteCurrentSweep(ViSession id, ViInt16 measFunc,
ViInt16 points, const ViReal64 iw[]);
```

#### Visual Basic Syntax

```
hpe5022_measureWriteCurrentSweep(ByVal id As Long, ByVal measFunc As Integer,
ByVal points As Integer, ByRef iw As Double) As Long
```

#### Description

This function measures the specified parameter while changing the write current. The sequence of this function is as follows:

- TAA, PW and Narrow Band TAA
  1. Set *i* to zero. (*i* = 0)
  2. Erase (same as the “hpe5022\_erase” function) for an entire track.
  3. Set the write current at the value of iw[*i*].
  4. Make a measurement specified by ‘measFunc’. The detailed measurement sequence is described in each measurement function.
  5. Increment *i* by 1. (*i* = *i*+1)
  6. If *i* is not equal to ‘points’, go to step 2.
- Overwrite, and NLTS 5th
  1. Set *i* to zero. (*i* = 0)
  2. Set the write current at the value of iw[*i*].
  3. Make a measurement specified by ‘measFunc’. The detailed measurement sequence is described in each measurement function.
  4. Increment *i* by 1. (*i* = *i*+1)
  5. If *i* is not equal to ‘points’, go to step 2.

The “hpe5022\_writeCurrentSweepData\_Q” function returns the measurement result.

#### Parameters

- *id*

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

## Write Current Sweep Measurement Function

- measFunc

Description Specifies the measurement type.

Direction IN

Values

Name	Value	Description
hpe5022_MEAS_TAA	1	Measure TAA
hpe5022_MEAS_PW	2	Measure PW
hpe5022_MEAS_OVERWRITE	3	Measure Overwrite
hpe5022_MEAS_NLTS_5TH	4	Measure NLTS 5th
hpe5022_MEAS_NB_TAA	5	Measure narrow band TAA

- points

Description Specifies the number of measurement points. This number must be the same as the array size of the write current list.

Direction IN

Values

Name	Value
hpe5022_LIST_SWEEP_COUN_MIN	1
hpe5022_LIST_SWEEP_COUN_MAX	101

- iw

Description Specifies the write current list as the data array. The write current will be set to the data in the array order. The range of current value is returned by the “hpe5022\_writeCurrentRange\_Q” function.

Direction IN

Unit Ampere

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.

**Write Current Sweep Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_CAL_DATA_CORRUPT	Amplitude calibration for 3GHz Spectrum Analyzer has not been done.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_INV_PARAMETER	The parameter 'measFunc', 'point' and/or 'iw' is out of range.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

"hpe5022\_writeCurrentSweepData\_Q" on page 663

"hpe5022\_writeCurrentRange\_Q" on page 325

**hpe5022\_setupWriteCurrentSweep****C Syntax**

```
ViStatus hpe5022_setupWriteCurrentSweep(ViSession id, ViInt16 measFunc,
ViInt16 points, const ViReal64 iw[], ViPObject testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupWriteCurrentSweep(ByVal id As Long, ByVal measFunc As Integer, ByVal points As Integer, ByRef iw As Double, ByRef testHndl As Long) As Long
```

**Description**

This function assigns the write current sweep measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureWriteCurrentSweep” function for details about the sequence. This function does not execute measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_writeCurrentSweepData\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- measFunc
 

Description	Specifies the measurement type
Direction	IN
Values	Same as the ‘measFunc’ in the “hpe5022_measureWriteCurrentSweep” function.
- points
 

Description	Specifies the number of measurement points. This number must be the same as the array size of the write current list.
Direction	IN
Values	Same as the ‘points’ in the “hpe5022_measureWriteCurrentSweep” function.
- iw
 

Description	Specifies the write current list as the data array. The write current will be set to data in the array in order.
Direction	IN
Unit	Ampere
Values	Same as the ‘iw’ in the “hpe5022_measureWriteCurrentSweep” function.

**Write Current Sweep Measurement Function**

- testHndl

**Description** Returns the test identifier. This identifier is used to execute the write current sweep measurement by the “hpe5022\_measure” function.

**Direction** OUT

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘measFunc’, ‘points’ and/or ‘iw’ is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_measureWriteCurrentSweep” on page 658

“hpe5022\_writeCurrentSweepData\_Q” on page 663

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

**hpe5022\_writeCurrentSweepData\_Q****C Syntax**

```
ViStatus hpe5022_writeCurrentSweepData_Q(ViSession id, ViInt16 dataType,
ViReal64 data[]);
```

**Visual Basic Syntax**

```
hpe5022_writeCurrentSweepData_Q(ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long
```

**Description**

This function returns the result of the write current sweep measurement. The returned data are set in array, and its size is specified by the ‘points’ parameter. The ‘points’ and write current list are specified by the “hpe5022\_measureWriteCurrentSweep” function or “hpe5022\_setupWriteCurrentSweep” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- dataType
 

Description	Specifies the type of data to be reported.
Direction	IN
Values	

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry
hpe5022_DATA_OVERWRITE	13	Overwrite
hpe5022_DATA_NLTS_5TH	14	NLTS 5th
hpe5022_DATA_NB_TAA	15	Narrow band TAA

**Write Current Sweep Measurement Function**

- data

**Description** Returns the data (set in array) of the parameter specified by the 'dataType'. The size of array is specified by the 'points' parameter in the "hpe5022\_measureWriteCurrentSweep" or "hpe5022\_setupWriteCurrentSweep" function. Each value in the array order is the measurement result measured at each write current list.

**Direction** OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType', 'points' and/or 'iw' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The write current sweep data is corrupt. Check if your measurement sequence is correct.

**See Also**

"hpe5022\_measureWriteCurrentSweep" on page 658

"hpe5022\_setupWriteCurrentSweep" on page 661



## Sense Current Sweep Measurement Function

This section describes the functions related with the sense current sweep measurement. This measurement allows you to observe a sense current characteristics of the parameters such as TAA and PW.

### hpe5022\_measureSenseCurrentSweep

**C Syntax** ViStatus hpe5022\_measureSenseCurrentSweep(ViSession id, ViInt16 measFunc, ViInt16 points, const ViReal64 ib[]);

**Visual Basic Syntax** hpe5022\_measureSenseCurrentSweep(ByVal id As Long, ByVal measFunc As Integer, ByVal points As Integer, ByRef ib As Double) As Long

**Description** This function measures the specified parameter while changing the sense current. The sequences of this function are as follows:

- TAA, PW and Narrow Band TAA
  1. Set i to zero. (i = 0)
  2. Erase (same as the “hpe5022\_erase” function) for an entire track.
  3. Set the sense current at the value of is[i].
  4. Make a measurement specified by ‘measFunc’. The detailed measurement sequence is described in each measurement function.
  5. Increment i by 1. (i = i+1)
  6. If i is not equal to ‘points’, go to step 2.
- Overwrite, and NLTS 5th
  1. Set i to zero. (i = 0)
  2. Set the sense current at the value of is[i].
  3. Make a measurement specified by ‘measFunc’. The detailed measurement sequence is described in each measurement function.
  4. Increment i by 1. (i = i+1)
  5. If i is not equal to ‘points’, go to step 2.

The “hpe5022\_writeCurrentSweepData\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

**Sense Current Sweep Measurement Function**

- measFunc

Description Specifies the type of measurement.

Direction IN

Values

Name	Value	Description
hpe5022_MEAS_TAA	1	Measure TAA
hpe5022_MEAS_PW	2	Measure PW
hpe5022_MEAS_OVERWRITE	3	Measure Overwrite
hpe5022_MEAS_NLTS_5TH	4	Measure NLTS 5th
hpe5022_MEAS_NB_TAA	5	Measure narrow band TAA

- points

Description Specifies the number of measurement points. This number must be the same as the array size of the sense current list.

Direction IN

Values

Name	Value
hpe5022_LIST_SWEEP_COUN_MIN	1
hpe5022_LIST_SWEEP_COUN_MAX	101

- ib

Description Specifies the sense current list as the data array. The sense current will be set to the data in array order. The range of current value is returned by the “hpe5022\_senseCurrentRange\_Q” function.

Direction IN

Unit Ampere

**Return Values**

Completion Code	Description
VL_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_CAL_DATA_CORRUPT	Amplitude calibration for 3GHz Spectrum Analyzer has not been done.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_INV_PARAMETER	The parameter 'measFunc', 'points' and/or 'ib' is out of range.
hpe5022_ERROR_INV_SETUP	The sense stimulus mode in the "hpe5022_senseStimulusMode" is not set at hpe5022_SENSE_STIMULUS_CURRENT.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

"hpe5022\_senseCurrentSweepData\_Q" on page 670

"hpe5022\_senseCurrentRange\_Q" on page 339

**Sense Current Sweep Measurement Function****hpe5022\_setupSenseCurrentSweep****C Syntax**

```
ViStatus hpe5022_setupSenseCurrentSweep(ViSession id, ViInt16 measFunc,
ViInt16 points, const ViReal64 ib[], ViPObject testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupSenseCurrentSweep(ByVal id As Long, ByVal measFunc As Integer,
ByVal points As Integer, ByRef ib As Double, ByRef testHndl As Long)
As Long
```

**Description**

This function assigns the sense current sweep measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureSenseCurrentSweep” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_senseCurrentSweepData\_Q” function returns the measurement result

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- measFunc
 

Description	Specifies the type of measurement.
Direction	IN
Values	Same as the ‘measFunc’ in the “hpe5022_measureSenseCurrentSweep”/“hpe5022_measureSenseCurrentSweep” function.
- points
 

Description	Specifies the number of measurement points. This number must be the same as the array size of the sense current list.
Direction	IN
Values	Same as the ‘points’ in the “hpe5022_measureSenseCurrentSweep”/“hpe5022_measureSenseCurrentSweep” function.
- ib
 

Description	Specifies the sense current list as the data array. The sense current will be set to the data in array order.
Direction	IN
Unit	Ampere
Values	Same as the ‘ib’ in the

**Sense Current Sweep Measurement Function**

“hpe5022\_measureSenseCurrentSweep” “hpe5022\_measureSenseCurrentSweep” function.

- testHndl

**Description** Returns the test identifier. This identifier is used to execute the sense current sweep measurement by the “hpe5022\_measure” function.

**Direction** OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘measFunc’, ‘point’, and/or ‘ib’ is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_measureSenseCurrentSweep” on page 665

“hpe5022\_senseCurrentSweepData\_Q” on page 670

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

**Sense Current Sweep Measurement Function****hpe5022\_senseCurrentSweepData\_Q****C Syntax**

```
ViStatus hpe5022_senseCurrentSweepData_Q(ViSession id, ViInt16 dataType,
ViReal64 data[]);
```

**Visual Basic Syntax**

```
hpe5022_senseCurrentSweepData_Q(ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long
```

**Description**

This function returns the result of the sense current sweep measurement. The returned data is set in array order, whose size is specified by the 'points' parameter. The 'points' and sense current list are specified by the "hpe5022\_measureSenseCurrentSweep" function or "hpe5022\_setupSenseCurrentSweep" function.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry
hpe5022_DATA_OVERWRITE	13	Overwrite
hpe5022_DATA_NLTS_5TH	14	NLTS 5th
hpe5022_DATA_NB_TAA	15	Narrow band TAA

**Sense Current Sweep Measurement Function**

- data

**Description** Returns the data (set in array order) of the parameter specified by the 'dataType'. The size of array is specified by the 'points' parameter in the "hpe5022\_measureSenseCurrentSweep" or "hpe5022\_setupSenseCurrentSweep" function. Each value in the array is the measurement result measured from each sense current list.

**Direction** OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The sense current sweep data is corrupt. Check if your measurement sequence is correct.

**See Also**

"hpe5022\_measureSenseCurrentSweep" on page 665

"hpe5022\_setupSenseCurrentSweep" on page 668

---

## Sense Stimulus Sweep Measurement Function

This section describes the functions related with the sense stimulus sweep measurement. This measurement allows you to observe a sense stimulus characteristics of the parameters such as TAA and PW.

### hpe5022\_measureSenseStimulusSweep

**C Syntax** ViStatus hpe5022\_measureSenseStimulusSweep(ViSession id, ViInt16 measFunc, ViInt16 points, const ViReal64 ib[]);

**Visual Basic Syntax** hpe5022\_measureSenseStimulusSweep(ByVal id As Long, ByVal measFunc As Integer, ByVal points As Integer, ByRef ib As Double) As Long

**Description** This function measures the specified parameter while changing the sense stimulus. The stimulus type is selected by the “hpe5022\_senseStimulus” function. When the hpe5022\_SENSE\_STIMULUS\_CURRENT is selected in the “hpe5022\_senseStimulus” function, this function is exactly same as the “hpe5022\_setupSenseCurrentSweep” function.

The sequences of this function are as follows:

- TAA, PW and Narrow Band TAA
  1. Set *i* to zero. ( $i = 0$ )
  2. Erase (same as the “hpe5022\_erase” function) for an entire track.
  3. Set the sense current at the value of *ib*[*i*].
  4. Make a measurement specified by ‘measFunc’. The detailed measurement sequence is described in each measurement function.
  5. Increment *i* by 1. ( $i = i+1$ )
  6. If *i* is not equal to ‘points’, go to step 2.
- Overwrite, and NLTS 5th
  1. Set *i* to zero. ( $i = 0$ )
  2. Set the sense current at the value of *ib*[*i*].
  3. Make a measurement specified by ‘measFunc’. The detailed measurement sequence is described in each measurement function.
  4. Increment *i* by 1. ( $i = i+1$ )
  5. If *i* is not equal to ‘points’, go to step 2.

The “hpe5022\_senseStimulusSweepData\_Q” function returns the measurement result.

**Parameters**

- *id*



**Sense Stimulus Sweep Measurement Function**

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- measFunc

**Description** Specifies the type of measurement.

**Direction** IN

**Values**

Name	Value	Description
hpe5022_MEAS_TAA	1	Measure TAA
hpe5022_MEAS_PW	2	Measure PW
hpe5022_MEAS_OVERWRITE	3	Measure Overwrite
hpe5022_MEAS_NLTS_5TH	4	Measure NLTS 5th
hpe5022_MEAS_NB_TAA	5	Measure narrow band TAA

- points

**Description** Specifies the number of measurement points. This number must be the same as the array size of the sense stimulus list.

**Direction** IN

**Values**

Name	Value
hpe5022_LIST_SWEEP_COUN_MIN	1
hpe5022_LIST_SWEEP_COUN_MAX	101

- ib

**Description** Specifies the sense stimulus list as the data array. The sense stimulus will be set to the data in array order. The range of value is returned by the "hpe5022\_senseStimulusRange\_Q" function.

**Direction** IN

**Unit** Depends on the mode of "hpe5022\_senseStimulusMode"

hpe5022\_SENSE\_STIMULUS\_CURRENT : Ampere

hpe5022\_SENSE\_STIMULUS\_VOLTAGE : Volt

pe5022\_SENSE\_STIMULUS\_POWER : Watt

Function Reference  
**Sense Stimulus Sweep Measurement Function**

**Return Values**

Completion Code	Description
VL_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_CAL_DATA_CORRUPT	Amplitude calibration for 3GHz Spectrum Analyzer has not been done.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_INV_PARAMETER	The parameter 'measFunc', 'points' and/or 'ib' is out of range.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

"hpe5022\_senseStimulusSweepData\_Q" on page 677

"hpe5022\_senseStimulusRange\_Q" on page 348

**hpe5022\_setupSenseStimulusSweep****C Syntax**

```
ViStatus hpe5022_setupSenseStimulusSweep(ViSession id, ViInt16 measFunc,
ViInt16 points, const ViReal64 ib[], ViPObject testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupSenseStimulusSweep(ByVal id As Long, ByVal measFunc As Integer, ByVal points As Integer, ByRef ib As Double, ByRef testHndl As Long) As Long
```

**Description**

This function assigns the sense stimulus sweep measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureSenseStimulusSweep” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_senseStimulusSweepData\_Q” function returns the measurement result

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- measFunc
 

Description	Specifies the type of measurement.
Direction	IN
Values	Same as the ‘measFunc’ in the “hpe5022_measureSenseStimulusSweep”/“hpe5022_measureSenseCurrentSweep” function.
- points
 

Description	Specifies the number of measurement points. This number must be the same as the array size of the sense stimulus list.
Direction	IN
Values	Same as the ‘points’ in the “hpe5022_measureSenseCurrentSweep”/“hpe5022_measureSenseStimulusSweep” function.
- ib
 

Description	Specifies the sense stimulus list as the data array. The sense stimulus will be set to the data in array order.
Direction	IN
Unit	Same as the “hpe5022_measureSenseStimulusSweep”/“hpe5022_measureSenseCurrentSweep” function.

**Sense Stimulus Sweep Measurement Function**

Values	Same as the ‘ib’ in the “hpe5022_measureSenseStimulusSweep” “hpe5022_measureSenseCurrentSweep” function.
• testHndl	
Description	Returns the test identifier. This identifier is used to execute the sense stimulus sweep measurement by the “hpe5022_measure” function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘measFunc’, ‘point’, and/or ‘ib’ is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_measureSenseStimulusSweep” on page 672

“hpe5022\_senseStimulusSweepData\_Q” on page 677

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

## hpe5022\_senseStimulusSweepData\_Q

**C Syntax** ViStatus hpe5022\_senseStimulusSweepData\_Q(ViSession id, ViInt16 dataType, ViReal64 data[]);

**Visual Basic Syntax** hpe5022\_senseStimulusSweepData\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long

**Description** This function returns the result of the sense stimulus sweep measurement. The returned data is set in array order, whose size is specified by the ‘points’ parameter. The ‘points’ and sense stimulus list are specified by the “hpe5022\_measureSenseStimulusSweep” function or “hpe5022\_setupSenseStimulusSweep” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- dataType
 

Description	Specifies the type of data to be reported.
Direction	IN
Values	

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry
hpe5022_DATA_OVERWRITE	13	Overwrite
hpe5022_DATA_NLTS_5TH	14	NLTS 5th
hpe5022_DATA_NB_TAA	15	Narrow band TAA

**Sense Stimulus Sweep Measurement Function**

- data

Description	Returns the data (set in array order) of the parameter specified by the 'dataType'. The size of array is specified by the 'points' parameter in the "hpe5022_measureSenseStimulusSweep" or "hpe5022_setupSenseStimulusSweep" function. Each value in the array is the measurement result measured from each sense stimulus list.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The sense stimulus sweep data is corrupt. Check if your measurement sequence is correct.

**See Also**

"hpe5022\_measureSenseStimulusSweep" on page 672

"hpe5022\_setupSenseStimulusSweep" on page 675

## Channel Bit Rate Sweep Measurement

This section describes the functions related with the channel bit rate sweep measurement. This measurement allows you to observe the channel bit rate characteristics of the parameter such as the TAA and the PW.

### hpe5022\_measureChannelBitRateSweep

#### C Syntax

```
ViStatus hpe5022_measureChannelBitRateSweep(ViSession id, ViInt16
measFunc, ViInt16 points, const ViReal64 chanBitRate[]);
```

#### Visual Basic Syntax

```
hpe5022_measureChannelBitRateSweep (ByVal id As Long, ByVal measFunc As
Integer, ByVal points As Integer, ByRef chanBitRate As Double) As Long
```

#### Description

This function measures the channel bit rate sweep measurement. The sequences of this function are as follows:

- TAA, PW and Narrow Band TAA
  1. Set *i* to zero. (*i* = 0)
  2. Erase (same as the “hpe5022\_erase” function) for an entire track.
  3. Set the write current at the value of *iw*[*i*].
  4. Make a measurement specified by ‘measFunc’. The detailed measurement sequence is described in each measurement function.
  5. Increment *i* by 1. (*i* = *i*+1)
  6. If *i* is not equal to ‘points’, go to step 2.
- Overwrite, and NLTS 5th
  1. Set *i* to zero. (*i* = 0)
  2. Set the write current at the value of *iw*[*i*].
  3. Make a measurement specified by ‘measFunc’. The detailed measurement sequence is described in each measurement function.
  4. Increment *i* by 1. (*i* = *i*+1)
  5. If *i* is not equal to ‘points’, go to step 2.

The “hpe5022\_channelBitRateSweepData\_Q” function returns the measurement result.

#### Parameters

- *id*

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

**Channel Bit Rate Sweep Measurement**

Type ViSession

- measFunc

Description Specifies the type of measurement.

Direction IN

Values

Name	Value	Description
hpe5022_MEAS_TAA	1	Measure TAA
hpe5022_MEAS_PW	2	Measure PW
hpe5022_MEAS_OVERWRITE	3	Measure overwrite
hpe5022_MEAS_NLTS_5TH	4	Measure NLTS 5th
hpe5022_MEAS_NB_TAA	5	Measure narrow band TAA

- points

Description Specifies the number of measurement points. This number must be the same as the array size of the channel bit rate list.

Direction IN

Value

Name	Value
hpe5022_LIST_SWEEP_COUN_MIN	1
hpe5022_LIST_SWEEP_COUN_MAX	101

- chanBitRate

Description Specifies the channel bit rate as the data array. The channel bit rate will be set to data in array order. The range of channel bit rate is returned by the “hpe5022\_channelBitRateRange\_Q” function.

Direction IN

Unit bps (bit per second)

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error



Error Code	Description
hpe5022_ERROR_CAL_DATA_CORRUPT	Amplitude calibration for 3GHz Spectrum Analyzer has not been done.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘measFunc’, ‘points’ and/or ‘chanbitRate’ is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the “hpe5022_driveState” function.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

- “hpe5022\_setupChannelBitRateSweep” on page 682
- “hpe5022\_channelBitRateSweepData\_Q” on page 684
- “hpe5022\_channelBitRateRange\_Q” on page 118

**Channel Bit Rate Sweep Measurement****hpe5022\_setupChannelBitRateSweep****C Syntax**

```
ViStatus hpe5022_setupChannelBitRateSweep(ViSession id, ViInt16 measFunc,
ViInt16 points, const ViReal64 chanBitRate[], ViPObject testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupChannelBitRateSweep (ByVal id As Long, ByVal measFunc As Integer, ByVal points As Integer, ByRef chanBitRate As Double, ByRef testHndl As Long) As Long
```

**Description**

This function assigns the channel bit rate measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureChannelBitRateSweep” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_channelBitRateSweepData\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- measFunc
 

Description	Specifies the type of measurement.
Direction	IN
Values	Same as the ‘measFunc’ in the “hpe5022_measureChannelBitRateSweep” function.
- points
 

Description	Specifies the number of measurement points. This number must be the same as the array size of the channel bit rate list.
Direction	IN
Values	Same as the ‘points’ in the “hpe5022_measureChannelBitRateSweep” function.
- chanBitRate
 

Description	Specifies the channel bit rate as the data array. The channel bit rate will be set to data in the array order.
Direction	IN
Unit	bps (bit per second)
Values	Same as the ‘chanBitRate’ in the “hpe5022_measureChannelBitRateSweep” function.

- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the channel bit rate sweep measurement by the “hpe5022_measure” function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘measFunc’, ‘points’ and/or ‘chanbitRate’ is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

- “hpe5022\_measureChannelBitRateSweep” on page 679
- “hpe5022\_channelBitRateSweepData\_Q” on page 684
- “hpe5022\_measure” on page 387
- “hpe5022\_releaseSetup” on page 390

**Channel Bit Rate Sweep Measurement****hpe5022\_channelBitRateSweepData\_Q****C Syntax**

```
ViStatus hpe5022_channelBitRateSweepData_Q(ViSession id, ViInt16 dataType,
ViReal64 data[]);
```

**Visual Basic Syntax**

```
hpe5022_channelBitRateSweepData_Q (ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long
```

**Description**

This function returns the result of the channel bit rate sweep measurement. The returned data are set in array, and its size is specified by the 'points' parameter. The 'points' and the channel bit rate list are specified by the "hpe5022\_measureChannelBitRateSweep" function or "hpe5022\_setupChannelBitRateSweep" function.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry
hpe5022_DATA_PW	5	PW
hpe5022_DATA_PW_POS	6	PW positive
hpe5022_DATA_PW_NEG	7	PW negative
hpe5022_DATA_PW_ASYM	8	PW asymmetry
hpe5022_DATA_OVERWRITE	13	Overwrite
hpe5022_DATA_NLTS_5TH	14	NLTS 5th
hpe5022_DATA_NB_TAA	15	Narrow band TAA

- data
 

Description	Returns the data (set in array) of the parameter specified by the 'dataType'. The size of array is specified by the 'points' parameter in the “hpe5022_measureChannelBitRateSweep” or “hpe5022_setupChannelBitRateSweep” function. Each value in the array is the measurement result at each channel bit rate list.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘dataType’ is out of range.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureChannelBitRateSweep” on page 679

“hpe5022\_setupChannelBitRateSweep” on page 682

## Roll Off Measurement Function

This section describes the functions related with the roll off measurement. The roll off measurement is a flux frequency sweep measurement. This measurement allows you to observe a flux frequency characteristics of the parameters TAA and narrow band TAA.

### hpe5022\_measureRollOff

#### C Syntax

```
ViStatus hpe5022_measureRollOff(ViSession id, ViInt16 measFunc, ViInt16 points, const ViReal64 fluxFreq[]);
```

#### Visual Basic Syntax

```
hpe5022_measureRollOff(ByVal id As Long, ByVal measFunc As Integer, ByVal points As Integer, ByRef fluxFreq As Double) As Long
```

#### Description

This function measures the roll off characteristic curve. The sequences of this function are as follows:

1. Set *i* to zero. ( $i = 0$ )
2. Erase (same as the “hpe5022\_erase” function) for an entire track.
3. Set the flux frequency at ‘fluxFreq[*i*]’ (see parameters).
4. Write a repetitive pattern (1T) at the specified flux frequency for an entire track.
5. Move the head to the read track offset specified by the “hpe5022\_readTrackOffset” function.
6. Make measurement as specified by ‘measFunc’. The detailed measurement sequence is described in each measurement function.
7. Increment *i* by 1. ( $i = i+1$ )
8. If *i* is not equal to ‘points’ (see parameters), go to the step 2.

The “hpe5022\_rollOffData\_Q” function returns the measurement result.

#### Parameters

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **measFunc**

Description	Specifies the type of measurement.
Direction	IN

Values

Name	Value	Description
hpe5022_MEAS_TAA	1	Measure TAA
hpe5022_MEAS_NB_TAA	5	Measure narrow band TAA

- points

**Description** Specifies the number of measurement points. This number must be the same as the array size of the flux frequency list.

**Direction** IN

Values

Name	Value
hpe5022_LIST_SWEEP_COUN_MIN	1
hpe5022_LIST_SWEEP_COUN_MAX	101

- fluxFreq

**Description** Specifies the flux frequency data as the data array. The flux frequency will be set to data in the array order. The maximum limit of this value is returned by the “hpe5022\_channelBitRateRange\_Q” function.

**Direction** IN

**Unit** flux per second

Values

Name	Value
hpe5022_ROLLOFF_FREQ_MIN	$4 \times 10^6$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_CAL_DATA_CORRUPT	Amplitude calibration for 3GHz Spectrum Analyzer has not been done.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.

Function Reference  
**Roll Off Measurement Function**

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindrive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_INV_PARAMETER	The parameter 'measFunc', 'points' and/or 'fluxFreq' is out of range.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

- “hpe5022\_rollOffData\_Q” on page 691
- “hpe5022\_readTrackOffset” on page 219
- “hpe5022\_writeTrackOffset” on page 222
- “hpe5022\_driveState” on page 209
- “hpe5022\_channelBitRateRange\_Q” on page 118



## hpe5022\_setupRollOff

### C Syntax

```
ViStatus hpe5022_setupRollOff(ViSession id, ViInt16 measFunc, ViInt16 points,
const ViReal64 fluxFreq[], ViPObject testHndl);
```

### Visual Basic Syntax

```
hpe5022_setupRollOff(ByVal id As Long, ByVal measFunc As Integer, ByVal
points As Integer, ByRef fluxFreq As Double, ByRef testHndl As Long) As Long
```

### Description

This function assigns the roll off measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureRollOff” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_rollOffData\_Q” function returns the measurement result

### Parameters

- id

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- measFunc

Description	Specifies the type of measurement.
Direction	IN
Values	Same as the ‘measFunc’ in the “hpe5022_measureRollOff” function.
- points

Description	Specifies the number of measurement points. This number must be the same as the array size of the flux frequency list.
Direction	IN
Values	Same as the ‘points’ in the “hpe5022_measureRollOff” function.
- fluxFreq

Description	Specifies the flux frequency data as the data array. The flux frequency will be set to data in the array order.
Direction	IN
Unit	flux per second
Values	Same as the ‘fluxFreq’ in the “hpe5022_measureRollOff” function.

**Roll Off Measurement Function**

- testHndl

Description Returns the test identifier. This identifier is used to execute the roll off measurement by the “hpe5022\_measure” function.

Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘measFunc’, ‘points’ and/or ‘fluxFreq’ is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_measureRollOff” on page 686

“hpe5022\_rollOffData\_Q” on page 691

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

## hpe5022\_rollOffData\_Q

**C Syntax** ViStatus hpe5022\_rollOffData\_Q(ViSession id, ViInt16 dataType, ViReal64 data[]);

**Visual Basic Syntax** hpe5022\_rollOffData\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long

**Description** This function returns the result of the roll off measurement. The returned data are set in array, and its size is specified by the 'points' parameter. The 'points' and the flux frequency list are specified by the "hpe5022\_measureRollOff" function or "hpe5022\_setupRollOff" function

**Parameters**

- id  
 Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType  
 Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_TAA_ASYM	4	TAA asymmetry
hpe5022_DATA_NB_TAA	15	Narrow band TAA

- data  
 Description Returns the data (set in array) of the parameter specified by the 'dataType'. The size of array is specified by the 'points' parameter in the "hpe5022\_measureRollOff" or "hpe5022\_setupRollOff" function. Each value in the array is the measurement result relative to the flux frequency that corresponds to the same order value in the array of flux frequency list.

Direction OUT

Function Reference  
**Roll Off Measurement Function**

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureRollOff” on page 686

“hpe5022\_setupRollOff” on page 689

## hpe5022\_calculateD50\_Q

**C Syntax** ViStatus hpe5022\_calculateD50\_Q(ViSession id, ViInt16 dataType, ViPReal64 d50);

**Visual Basic Syntax** hpe5022\_calculateD50\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef d50 As Double) As Long

**Description** This function calculates  $D_{50}$  (Roll Off Density) in flux per second.  $D_{50}$  is a flux frequency value at half of the peak level in the data returned by the “hpe5022\_rollOffData\_Q” function. When you want to convert an unit from flux per second to flux per meter use the “hpe5022\_calculateTimeToLength\_Q” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- dataType
 

Description	Specifies the type of data to be reported.
Direction	IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_TAA_POS	2	TAA positive
hpe5022_DATA_TAA_NEG	3	TAA negative
hpe5022_DATA_NB_TAA	15	Narrow band TAA

- d50
 

Description	Returns the D50.
Direction	OUT
Unit	flux per second

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Roll Off Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.
hpe5022_ERROR_D50_NOT_FOUND	Can't find the D50 parameter point. Check the data returned by the "hpe5022_rollOffData_Q" function.

**See Also**

"hpe5022\_measureRollOff" on page 686

"hpe5022\_setupRollOff" on page 689

"hpe5022\_rollOffData\_Q" on page 691

"hpe5022\_calculateTimeToLength\_Q" on page 695

## hpe5022\_calculateTimeToLength\_Q

**C Syntax** ViStatus hpe5022\_calculateTimeToLength\_Q(ViSession id, ViReal64 time, ViPReal64 length);

**Visual Basic Syntax** hpe5022\_calculateTimeToLength\_Q(ByVal id As Long, ByVal time As Double, ByRef length As Double ) As Long

**Description** This function converts time to length by using the current spindle speed and head position radius.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- time
 

Description	Specifies time to be converted to length.
Direction	IN
Unit	Second
- length
 

Description	Returns the length.
Direction	OUT
Unit	Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.

**See Also** "hpe5022\_driveState" on page 209

---

## Precompensation Value Sweep Measurement Function

This section describes the functions related with precompensation value sweep measurement. This measurement allows you to observe a precompensation characteristics of the NLTS. NLTS is measured by the 5th harmonic method. See chapter 5 in the Operaion Manual.

### hpe5022\_measurePrecompSweep

#### C Syntax

```
ViStatus hpe5022_measurePrecompSweep(ViSession id, ViInt16
measFunc, ViInt16 points, const ViReal64 precomp[]);
```

#### Visual Basic Syntax

```
hpe5022_measurePrecompSweep(ByVal id As Long, ByVal measFunc As Integer,
ByVal measFunc As Integer, ByVal points As Integer, ByRef precomp As Double)
As Long
```

#### Description

This function measures the precompensation value measurement. The sequences of this function are as follows:

1. Set *i* to zero. (*i* = 0)
2. Set precompensation value of which number is 1 at 'precomp[*i*]' (see parameters).
3. Erase (same as the "hpe5022\_erase" function) for an entire track.
4. Measure NLTS (same as the "hpe5022\_measureNlts5th" function).
5. Increment *i* by 1. (*i* = *i*+1)
6. If *i* is not equal to 'points' (see parameters), go to the step 2.

The "hpe5022\_precompSweepData\_Q" function returns the measurement result. Before the precompensation is performed, the "001" must be set as one of the prebit of precompensation pattern and the precompensation status of NLTS 5th pattern must be turned on. See "Precompensation Delay Sweep Measurement" on page 59.

#### Parameters

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **measFunc**

Description	Specifies the type of measurement.
Direction	IN



## Precompensation Value Sweep Measurement Function

## Values

Name	Value	Description
hpe5022_MEAS_NLTS_5TH	4	Measure NLTS 5th

- points

**Description** Specifies the number of measurement points. This number must be the same as the array size of the precompensation value list.

**Direction** IN

## Values

Name	Value
hpe5022_LIST_SWEEP_COUN_MIN	1
hpe5022_LIST_SWEEP_COUN_MAX	101

- precomp

**Description** Specifies the precompensation value data as the data array. The precompensation value will be set to the data in the array order.

**Direction** IN

**Unit** Second

## Values

Name	Value
hpe5022_PREC_VAL_MIN	$-1900 \times 10^{-12}$
hpe5022_PREC_VAL_MAX	$1900 \times 10^{-12}$

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.

**Precompensation Value Sweep Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'measFunc', 'points' and/or 'precomp' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

"hpe5022\_precompSweepData\_Q" on page 701

"hpe5022\_measureNlts5th" on page 810

"hpe5022\_driveState" on page 209

## Precompensation Value Sweep Measurement Function

**hpe5022\_setupPrecompSweep**

**C Syntax** ViStatus hpe5022\_setupPrecompSweep(ViSession id, ViInt16 measFunc, ViInt16 points, const ViReal64 precomp[], ViPObject testHndl);

**Visual Basic Syntax** hpe5022\_setupPrecompSweep(ByVal id As Long, ByVal measFunc As Integer, ByVal points As Integer, ByRef precomp As Double, ByRef testHndl As Long) As Long

**Description** This function assigns the precompensation value sweep measurement sequence to the specified test identifier. Refer to the “hpe5022\_measurePrecompSweep” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_precompSweepData\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- measFunc
 

Description	Specifies the type of measurement.
Direction	IN
Values	Same as the ‘measFunc’ in the “hpe5022_measurePrecompSweep” function.
- points
 

Description	Specifies the number of measurement points. This number must be the same as the array size of the precompensation value list.
Direction	IN
Values	Same as the ‘points’ in the “hpe5022_measurePrecompSweep” function.
- precomp
 

Description	Specifies the precompensation value data as the data array. The precompensation value will be set to data in the array order.
Direction	IN
Unit	Second
Values	Same as the ‘precomp’ in the “hpe5022_measurePrecompSweep” function.

**Precompensation Value Sweep Measurement Function**

- testHndl

**Description** Returns the test identifier. This identifier is used to execute the precompensation sweep measurement by the “hpe5022\_measure” function.

**Direction** OUT

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘measFunc’, ‘points’ and/or ‘precomp’ is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_measurePrecompSweep” on page 696

“hpe5022\_precompSweepData\_Q” on page 701

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

## Precompensation Value Sweep Measurement Function

**hpe5022\_precompSweepData\_Q****C Syntax**

```
ViStatus hpe5022_precompSweepData_Q(ViSession id, ViInt16
dataType, ViReal64 data[]);
```

**Visual Basic Syntax**

```
hpe5022_precompSweepData_Q(ByVal id As Long, ByVal dataType As Integer,
ByRef data As Double) As Long
```

**Description**

This function returns the result of the precompensation value sweep measurement. The returned data are set in array, and its size is specified by the 'points' parameter. The 'points' and the precompensation value list are specified by the "hpe5022\_measurePrecompSweep" or "hpe5022\_setupPrecompSweep" functions.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to be reported.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_NLTS_5TH	14	NLTS 5th

- data

Description Returns the data (set in array) of the parameter specified by the 'dataType'. The size of array is specified by the 'points' parameter in the "hpe5022\_measurePrecompSweep" or "hpe5022\_setupPrecompSweep" function. Each value in the array is the measurement result relative to the precompensation value that corresponds to the same order value in the array of precompensation value list.

Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

**Precompensation Value Sweep Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measurePrecompSweep” on page 696

“hpe5022\_setupPrecompSweep” on page 699

## Standard Triple Track Test Measurement Function

This section describes the functions related with the standard triple track test measurement.

### hpe5022\_tripleTrackWindowConfig

**C Syntax**

ViStatus hpe5022\_tripleTrackWindowConfig(ViSession id, ViBoolean bestFitWin, ViReal64 winSize, ViReal64 high, ViReal64 low);

**Visual Basic Syntax**

hpe5022\_tripleTrackWindowConfig(ByVal id As Long, ByVal bestFitWin As Integer, ByVal winSize As Double, ByVal high As Double, ByVal low As Double) As Long

**Description**

This function controls the window configuration of the triple track test in order to calculate the regression lines.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN

- bestFitWin
  - Description Specifies the use of the Best Fit Window.
  - Direction IN

Values

Name	Value	Description
VI_FALSE	0	Don't use the best fit window.
VI_TRUE	1	Use the best fit window.

Preset Value VI\_TRUE

- winSize
  - Description Specifies the size of the Best Fit Window when "bestFitWin" is set to VI\_TRUE.
  - Direction IN
  - Preset Value 0.75

- high
  - Description Specifies the high threshold limit to calculate the regression lines.

## Function Reference

### Standard Triple Track Test Measurement Function

Direction IN

Preset Value 1.0

- low

Description Specifies the low threshold limit to calculate the regression lines. The floor level is defined as 0.0 in case of best fit window enable.

Direction IN

Preset Value 0.0

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'bestFitWin', 'winSize', 'high' and/or 'low' is out of range

### See Also

“hpe5022\_measureTripleTrack” on page 714

“hpe5022\_setupTripleTrack” on page 719

“hpe5022\_tripleTrackWindowConfig\_Q” on page 705



**hpe5022\_tripleTrackWindowConfig\_Q**

- C Syntax** ViStatus hpe5022\_tripleTrackWindowConfig\_Q(ViSession id, ViPBoolean bestFitWin, ViPReal64 winSize, ViPReal64 high, ViPReal64 low);
- Visual Basic Syntax** hpe5022\_tripleTrackWindowConfig\_Q(ByVal id As Long, ByRef bestFitWin As Integer, ByRef winSize As Double, ByRef high As Double, ByRef low As Double) As Long
- Description** This function returns the current setting of the window configuration for triple track test.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - bestFitWin
 

Description	Returns the use of the Best Fit Window.
Direction	OUT
Values	Same as the 'bestFitWin' in the "hpe5022_tripleTrackWindowConfig" function.
  - winSize
 

Description	Returns the size of the Best Fit Window.
Direction	OUT
  - high
 

Description	Returns the high interpolation limit of the window.
Direction	OUT
  - low
 

Description	Returns the low interpolation limit of the window.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

**Standard Triple Track Test Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_tripleTrackWindowConfig” on page 703

## hpe5022\_tripleTrackPositionConfig

**C Syntax** ViStatus hpe5022\_tripleTrackPositionConfig(ViSession id, ViReal64 squeezePos, ViReal64 otrcWrPos);

**Visual Basic Syntax** hpe5022\_tripleTrackPositionConfig(ByVal id As Long, ByVal squeezePos As Double, ByVal otrcWrPos As Double) As Long

**Description** This function controls the position of the adjacent track and data track.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

- squeezePos
 

Description	Specifies the position of the adjacent track.
Direction	IN
Unit	Meter
Preset Value	$3 \times 10^{-6}$

Values

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

- otrcWrPos
 

Description	Specifies the write position of the data track. This value is specified as the ratio of the write width.
Direction	IN
Unit	Meter
Preset Value	0.65

Values

Name	Value
hpe5022_OTRC_WRIT_POS_MIN	0
hpe5022_OTRC_WRIT_POS_MAX	1

**Standard Triple Track Test Measurement Function****Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'squeezePos' and/or 'otrcWrPos' is out of range. Check if the head offset compensation value by using "hpe5022_trackOffsetCompValue_Q" function. If it is not 0, the 'squeezePos' range is narrowed.

**See Also**

"hpe5022\_measureTripleTrack" on page 714

"hpe5022\_setupTripleTrack" on page 719

"hpe5022\_tripleTrackPositionConfig\_Q" on page 709

## **hpe5022\_tripleTrackPositionConfig\_Q**

- C Syntax** ViStatus hpe5022\_tripleTrackPositionConfig(ViSession id, ViPReal64 squeezePos, ViPReal64 otrcWrPos);
- Visual Basic Syntax** hpe5022\_tripleTrackPositionConfig(ByVal id As Long, ByRef squeezePos As Double, ByRef otrcWrPos As Double) As Long
- Description** This function returns the specified “squeezePos” and “otrcWrPos”.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - squeezePos
 

Description	Returns the squeeze position.
Direction	IN
Unit	Meter
  - otrcWrPos
 

Description	Returns the write position of data track.
Direction	IN
Unit	Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.

**See Also** “hpe5022\_tripleTrackPositionConfig” on page 707

**Standard Triple Track Test Measurement Function****hpe5022\_tripleTrackAdjacentTrackConfig****C Syntax**

```
ViStatus hpe5022_tripleTrackAdjacentTrackConfig(ViSession id, ViInt16 pat);
```

**Visual Basic Syntax**

```
hpe5022_tripleTrackAdjacentTrackConfig(ByVal id As Long, ByVal pat As Integer) As Long
```

**Description**

This function controls the data pattern of the adjacent track.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- pat

**Description** Specifies the data pattern of the adjacent track.

**Direction** IN

**Preset value** hpe5022\_PAT\_ERASE

**Value**

Name	Value	Description
hpe5022_PAT_HF	0	HF pattern
hpe5022_PAT_LF	1	LF pattern
hpe5022_PAT_ISO	2	Isolated pulse pattern
hpe5022_PAT_PRBS	3	Pseudo random pattern
hpe5022_PAT_REP	4	Repetitive pattern
hpe5022_PAT_NLTS_5TH	5	NLTS 5th pattern
hpe5022_PAT_OWHF	6	Overwrite HF pattern
hpe5022_PAT_OWLF	7	Overwrite LF pattern
hpe5022_PAT_USER	20	User-defined Pattern
hpe5022_PAT_ERASE	101	Default Erase Pattern specified by the "hpe5022_eraseType" function.
hpe5022_PAT_ERASE_DC_NEG	102	DC- Erase Pattern
hpe5022_PAT_ERASE_DC_POS	103	DC+ Erase Pattern
hpe5022_PAT_ERASE_AC	104	AC Erase Pattern

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dat' is out of range.

### See Also

“hpe5022\_tripleTrackAdjacentTrackConfig\_Q” on page 712

**Standard Triple Track Test Measurement Function****hpe5022\_tripleTrackAdjacentTrackConfig\_Q****C Syntax**

ViStatus hpe5022\_tripleTrackAdjacentTrackConfig\_Q(ViSession id, ViInt16 pat);

**Visual Basic Syntax**

hpe5022\_tripleTrackAdjacentTrackConfig\_Q(ByVal id As Long, ByRef pat As Integer) As Long

**Description**

This function returns the data pattern of the adjacent track.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- pat
 

Description	Returns the data pattern of the adjacent track.
Direction	IN
Value	

Name	Value	Description
hpe5022_PAT_HF	0	HF pattern
hpe5022_PAT_LF	1	LF pattern
hpe5022_PAT_ISO	2	Isolated pulse pattern
hpe5022_PAT_PRBS	3	Pseudo random pattern
hpe5022_PAT_REP	4	Repetitive pattern
hpe5022_PAT_NLTS_5TH	5	NLTS 5th pattern
hpe5022_PAT_OWHF	6	Overwrite HF pattern
hpe5022_PAT_OWLF	7	Overwrite LF pattern
hpe5022_PAT_USER	20	User-defined Pattern
hpe5022_PAT_ERASE	101	Default Erase Pattern specified by the "hpe5022_eraseType" function.
hpe5022_PAT_ERASE_DC_NEG	102	DC- Erase Pattern
hpe5022_PAT_ERASE_DC_POS	103	DC+ Erase Pattern
hpe5022_PAT_ERASE_AC	104	AC Erase Pattern



**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_tripleTrackAdjacentTrackConfig” on page 710

**Standard Triple Track Test Measurement Function****hpe5022\_measureTripleTrack****C Syntax**

ViStatus hpe5022\_measureTripleTrack(ViSession id, ViInt16 seqType, ViInt16 measFunc, ViReal64 offsStart, ViReal64 offsStop, ViInt16 points);

**Visual Basic Syntax**

hpe5022\_measureTripleTrack(ByVal id As Long, ByVal seqType As Integer, ByVal measFunc As Integer, ByVal offsStart As Double, ByVal offsStop As Double, ByVal points As Integer) As Long

**Description**

This function performs the triple track measurement.

The detailed sequences of this function is as follows:

1. When the “seqType” is set to “hpe5022\_SEQ\_ER\_WR\_M”, perform the three-track-erase. (the entire track erase for 5 positions, the track, its both side tracks, and the center between them.)
2. When the “seqType” is set to “hpe5022\_SEQ\_ER\_WR\_M”, Move the head to the center of the track.
3. When the “seqType” is set to “hpe5022\_SEQ\_ER\_WR\_M”, write the data pattern specified by the “hpe5022\_selectPattern” function.
4. Perform the track profile measurement (seqType: hpe5022\_SEQ\_M, mode: hpe5022\_TP\_FORWARD, Start Offset: offsStart, Stop Offset: offsStop, Number of Points: points).
5. Calculate a write width, read width, read-write offset and maximum TAA of the track profile measurement.
6. Set the read track offset to the calculated read-write offset value.
7. Calculate Squeezed OTRC.
8. Move the head to the ‘squeezePos’ position specified by the “hpe5022\_tripleTrackPositionConfig” function.
9. Write the data pattern on the adjacent track as specified by the “hpe5022\_tripleTrackAdjacentTrackConfig” function.
10. Move the head to the -‘squeezePos’ position as specified by the “hpe5022\_tripleTrackPositionConfig” function.
11. Write the data pattern on the adjacent track as specified by the “hpe5022\_tripleTrackAdjacentTrackConfig” function.
12. Move the head to the same point where the maximum TAA was measured at step 5.
13. Measure TAA
14. Calculate squash.
15. Move the head to the ‘otrcWrPos’ position specified by the “hpe5022\_tripleTrackPositionConfig” function.
16. Write the data pattern specified by the “hpe5022\_selectPattern” function.

## Standard Triple Track Test Measurement Function

17. Move the head to the -‘otrcWrPos’ position specified by the “hpe5022\_tripleTrackPositionConfig” function.
18. Write the data pattern specified by the “hpe5022\_selectPattern” function.
19. Move the head to the center of the track.
20. Write the adjacent data pattern as specified by the “hpe5022\_tripleTrackAdjacentTrackConfig” function.
21. Perform the OTRC track profile measurement (seqType: hpe5022\_SEQ\_M, mode: hpe5022\_TP\_FORWARD, Start Offset: offsStart, Stop Offset: offsStop, Number of Points: points)
22. Calculate OTRC (off-track read capability).

The “hpe5022\_tripleTrack\_Q” and “hpe5022\_tripleTrackProfile\_Q” functions return the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Specifies the type of measurement sequence.
Direction	IN

## Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	3 Track erase-->Write-->Measure Triple Track Test
hpe5022_SEQ_WR_M	1	Measure triple track test only

- measFunc
 

Description	Specifies the type of measurement.
Direction	IN

## Values

Name	Value	Description
hpe5022_MEAS_TAA	1	Measure TAA
hpe5022_MEAS_NB_TAA	5	Measure Narrow Band TAA

- offsStart

**Standard Triple Track Test Measurement Function**

**Description** Specifies the start offset position for track profile measurement of the Triple Track Test.

If the “hpe5022\_trackOffsetCompValue” function set the head offset value, the range of the offset is changed. For example, the head offset value in “hpe5022\_trackOffsetCompValue” is set at  $1.0 \times 10^{-6}$ , the maximum and the minimum values are  $5.0 \times 10^{-6}$  and  $-7.0 \times 10^{-6}$ , respectively.

**Direction** IN

**Unit** Meter

**Values**

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

- offsStop

**Description** Specifies the stop offset position for track profile measurement of the Triple Track Test.

If the “hpe5022\_trackOffsetCompValue” function set the head offset value, the range of the offset is changed. For example, the head offset value in “hpe5022\_trackOffsetCompValue” is set at  $1.0 \times 10^{-6}$ , the maximum and the minimum values are  $5.0 \times 10^{-6}$  and  $-7.0 \times 10^{-6}$ , respectively.

**Direction** IN

**Unit** Meter

**Values**

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

- points

**Description** Specifies the number of measurement points for track profile measurement.

**Direction** IN

Values

Name	Value
hpe5022_LIST_SWEEP_COUN_MIN	1
hpe5022_TRACK_PROFILE_SIZE_MAX	201

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_AUTO_RANGE_FAIL	The autoranging in the track profile measurement is failed. Check if the parameter setting and head is correct.
hpe5022_ERROR_CAL_DATA_CORRUPT	Amplitude calibration for 3GHz Spectrum Analyzer has not been done.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindrive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_INV_PARAMETER	The parameter 'measFunc', 'Offsstart', 'Offsstop', and/or 'points' is out of range. Check if the head offset compensation value by using "hpe5022_trackOffsetCompValue_Q" function. If it is not 0, the 'Offsstart' or 'Offsstop' range is narrowed.

**See Also**

- “hpe5022\_tripleTrackWindowConfig” on page 703
- “hpe5022\_tripleTrackPositionConfig” on page 707
- “hpe5022\_tripleTrackAdjacentTrackConfig” on page 710
- “hpe5022\_tripleTrack\_Q” on page 722

**Standard Triple Track Test Measurement Function**

“hpe5022\_tripleTrackProfile\_Q” on page 725

“hpe5022\_measureTrackProfile” on page 615

“hpe5022\_selectPattern” on page 119

“hpe5022\_driveState” on page 209

## **hpe5022\_setupTripleTrack**

### **C Syntax**

ViStatus hpe5022\_setupTripleTrack(ViSession id, ViInt16 seqType, ViInt16 measFunc, ViReal64 start, ViReal64 stop, ViInt16 points, ViPObject testHndl);

### **Visual Basic Syntax**

hpe5022\_setupTripleTrack(ByVal id As Long, ByVal seqType As Integer, ByRef measFunc As Integer, ByRef start As Double, ByRef stop As Double, ByVal points As Integer, ByRef testHndl As Long) As Long

### **Description**

This function assigns the triple track measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureTripleTrack” function for details about the sequence. This function does not execute measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_tripleTrack\_Q” and “hpe5022\_tripleTrackProfile\_Q” functions return the measurement result.

### **Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

- seqType
 

Description	Specifies the type of measurement sequence.
Direction	IN

Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	3 Track erase-->Write-->Measure Triple Track Test
hpe5022_SEQ_WR_M	1	Measure triple track test only

- measFunc
 

Description	Specifies the type of measurement.
Direction	IN
Values	Same as the ‘measFunc’ in the “hpe5022_measureTripleTrack” function.
- start
 

Description	Specifies the start offset position for track profile measurement of the Triple Track Test.
Direction	IN

**Standard Triple Track Test Measurement Function**

Unit	Meter
Values	Same as the ‘offsStart’ in the “hpe5022_measureTripleTrack” function.
• stop	
Description	Specifies the stop offset position for track profile measurement of the Triple Track Test.
Direction	IN
Unit	Meter
Values	Same as the ‘offsStop’ in the “hpe5022_measureTripleTrack” function.
• points	
Description	Specifies the number of measurement points for track profile measurement.
Direction	IN
Values	Same as the ‘points’ in the “hpe5022_measureTripleTrack” function.
• testHndl	
Description	Returns the test identifier. This identifier is used to execute the triple track measurement by the “hpe5022_measure” function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘measFunc’, ‘Offstart’, ‘Offstop’, and/or ‘points’ is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_measureTripleTrack” on page 714



“hpe5022\_tripleTrack\_Q” on page 722

“hpe5022\_tripleTrackProfile\_Q” on page 725

“hpe5022\_tripleTrackWindowConfig” on page 703

“hpe5022\_tripleTrackPositionConfig” on page 707

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

**Standard Triple Track Test Measurement Function****hpe5022\_tripleTrack\_Q****C Syntax**

ViStatus hpe5022\_tripleTrack\_Q(ViSession id, ViInt16 dataType, ViInt16 rwOffsPos, ViPReal64 ww, ViPReal64 rw, ViPReal64 rwOfst, ViPReal64 maxTaa, ViPReal64 squash, ViPReal64 otrc, ViPReal64 sqOtrc);

**Visual Basic Syntax**

hpe5022\_tripleTrack\_Q Lib(ByVal id As Long, ByVal dataType As Integer, ByVal rwOffsPos As Integer, ByRef ww As Double, ByRef rw As Double, ByRef rwOffset As Double, ByRef maxTaa As Double, ByRef squash As Double, ByRef otrc As Double, ByRef sqOtrc As Double) As Long

**Description**

This function returns the result of the triple track measurement.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to be queried.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_NB_TAA	15	Narrow Band TAA

- rwOffsPos

Description Specifies the calculation method of the read write offset. This is the same as the "hpe5022\_calculateRWOffsetAndWidth\_Q" function.

Direction IN

Values

Name	Value	Description
hpe5022_RWOF_POS_50PERC_CENT	0	Center Point at 50% level
hpe5022_RWOF_POS_PROF_MAX	1	Maximum point of track profile
hpe5022_RWOF_POS_CROS_INT_LINE	2	Least Sq. Approx. Linear Line Cross Point

## Standard Triple Track Test Measurement Function

- **ww**

Description	Returns the write track width. The definition of the write track width is the same as the “hpe5022_calculateRWOOffsetAndWidth_Q” function. The floor level is set at 0% in that function.
Direction	OUT
Unit	Meter
- **rw**

Description	Returns the read track width. The definition of the write track width is the same as the “hpe5022_calculateRWOOffsetAndWidth_Q” function. The floor level is set at 0% in that function.
Direction	OUT
Unit	Meter
- **rwOfst**

Description	Returns the read-write offset according to the setting of ‘rwOfstPos’. The definition of the read/write offset is the same as the “hpe5022_calculateRWOOffsetAndWidth_Q” function. The floor level is set at 0% in that function.
Direction	OUT
Unit	Meter
- **maxTaa**

Description	Returns the maximum TAA value of the track profile result.
Direction	OUT
Unit	Volt
- **squash**

Description	Returns the squash ratio.
Direction	OUT
- **otrc**

Description	Returns the OTRC(Off-Track Read Capability).
Direction	OUT
Unit	Meter
- **sqOtr**

Description	Returns the squeezed OTRC.
Direction	OUT

**Standard Triple Track Test Measurement Function**

Unit                      Meter

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The triple track test data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureTripleTrack” on page 714

“hpe5022\_setupTripleTrack” on page 719

“hpe5022\_calculateReadWriteOffset\_Q” on page 628

## hpe5022\_tripleTrackProfile\_Q

### C Syntax

ViStatus hpe5022\_tripleTrackProfile\_Q(ViSession id, ViInt16 dataType, ViInt16 profileType, ViReal64 profile[], ViPReal64 interceptL, ViPReal64 slopeL, ViPReal64 interceptR, ViPReal64 slopeR);

### Visual Basic Syntax

hpe5022\_tripleTrackProfile\_Q(ByVal id As Long, ByVal dataType As Integer, ByVal profileType As Integer, ByRef profile As Double, ByRef interceptL As Double, ByRef slopeL As Double, ByRef interceptR As Double, ByRef slopeR As Double) As Long

### Description

This function returns the result of the track profile data and the regression line data.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
-------------	--------------------------------------------------------------------------------

Direction	IN
-----------	----

- dataType
 

Description	Specifies the type of data to get the results.
-------------	------------------------------------------------

Direction	IN
-----------	----

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA
hpe5022_DATA_NB_TAA	15	Narrow Band TAA

- profileType
 

Description	Specifies type of track profile.
-------------	----------------------------------

Direction	IN
-----------	----

Values

Name	Value	Description
hpe5022_TRIPLE_TRACK_SINGLE	1	Single Profile
hpe5022_TRIPLE_TRACK_SQUEEZE	2	Squeezed Profile
hpe5022_TRIPLE_TRACK_OTRC	3	OTRC Profile

**Standard Triple Track Test Measurement Function**

- profile
  - Description Returns the data (set in array) of the parameter specified by the 'dataType' and 'profileType'. The size of array is specified by the 'points' parameter in the "hpe5022\_measureTripleTrack" function or "hpe5022\_setupTripleTrack" function.
  - Direction OUT
- interceptL
  - Description Returns the intercept of the left regression line.
  - Direction OUT
  - Unit Meter
- slopeL
  - Description Returns the slope of the left regression line.
  - Direction OUT
- interceptR
  - Description Returns the intercept of the right regression line.
  - Direction OUT
  - Unit Meter
- slopeR
  - Description Returns the slope of the right regression line.
  - Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The triple track test data is corrupt. Check if your measurement sequence is correct.

**See Also**

"hpe5022\_measureTripleTrack" on page 714

“hpe5022\_setupTripleTrack” on page 719

---

## SNR Triple Track Test Measurement Function

This section describes the functions related with the SNR triple track test measurement.

### hpe5022\_snrTripleTrackWindowConfig

#### C Syntax

```
ViStatus hpe5022_snrTripleTrackWindowConfig(ViSession id, ViBoolean bestFitWin, ViReal64 winSize, ViReal64 high, ViReal64 low);
```

#### Visual Basic Syntax

```
hpe5022_snrTripleTrackWindowConfig(ByVal id As Long, ByVal bestFitWin As Integer, ByVal winSize As Double, ByVal high As Double, ByVal low As Double) As Long
```

#### Description

This function controls the window configuration of the SNR triple track test in order to calculate the regression lines.

#### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- bestFitWin

Description Specifies the use of the best fit window.

Direction IN

Values

Name	Value	Description
VI_FALSE	0	Don't use the best fit window.
VI_TRUE	1	Use the best fit window.

Preset Value VI\_TRUE

- winSize

Description Specifies the size of the best fit window when "bestFitWin" is set to VI\_TRUE.

Direction IN

Preset Value 0.75

- high

Description Specifies the high threshold limit to calculate the regression lines.



**SNR Triple Track Test Measurement Function**

Direction	IN
Preset Value	1.0
• low	
Description	Specifies the low threshold limit to calculate the regression lines.
Direction	IN
Preset Value	0.0

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'bestFitWin', 'winSize', 'high' and/or 'low' is out of range

**See Also**

“hpe5022\_measureSnrTripleTrack” on page 757

“hpe5022\_setupSnrTripleTrack” on page 766

“hpe5022\_snrTripleTrackWindowConfig\_Q” on page 730

**SNR Triple Track Test Measurement Function****hpe5022\_snrTripleTrackWindowConfig\_Q****C Syntax**

ViStatus hpe5022\_snrTripleTrackWindowConfig\_Q(ViSession id, ViPBoolean bestFitWin, ViPReal64 winSize, ViPReal64 high, ViPReal64 low);

**Visual Basic Syntax**

hpe5022\_snrTripleTrackWindowConfig\_Q(ByVal id As Long, ByRef bestFitWin As Integer, ByRef winSize As Double, ByRef high As Double, ByRef low As Double) As Long

**Description**

This function returns the current setting of the window configuration for SNR triple track test.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- bestFitWin
 

Description	Returns the use of the best fit window.
Direction	OUT
Values	Same as the 'bestFitWin' in the "hpe5022_tripleTrackWindowConfig" function.
- winSize
 

Description	Returns the size of the best fit window.
Direction	OUT
- high
 

Description	Returns the high interpolation limit of the window.
Direction	OUT
- low
 

Description	Returns the low interpolation limit of the window.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_snrTripleTrackWindowConfig” on page 728

**SNR Triple Track Test Measurement Function****hpe5022\_snrTripleTrackPositionConfig****C Syntax**

```
ViStatus hpe5022_snrTripleTrackPositionConfig(ViSession id, ViReal64
squeezePos, ViReal64 otrcWrPos);
```

**Visual Basic Syntax**

```
hpe5022_snrTripleTrackPositionConfig(ByVal id As Long, ByVal squeezePos As
Double, ByVal otrcWrPos As Double) As Long
```

**Description**

This function controls the position of the adjacent track and data track.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- squeezePos

**Description** Specifies the position of the adjacent track.

**Direction** IN

**Unit** Meter

**Preset Value**  $3 \times 10^{-6}$

**Values**

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

- otrcWrPos

**Description** Specifies the write position of the data track. This value is specified as the ratio of the track pitch specified by hpe5022\_dataArea.

**Direction** IN

**Unit** (none)

**Preset Value** 0.65

**Values**

Name	Value
hpe5022_OTRC_WRIT_POS_MIN	0
hpe5022_OTRC_WRIT_POS_MAX	1

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'squeezePos' and/or 'otrcWrPos' is out of range.

## See Also

“hpe5022\_measureSnrTripleTrack” on page 757

“hpe5022\_setupSnrTripleTrack” on page 766

“hpe5022\_snrTripleTrackPositionConfig” on page 732

“hpe5022\_dataArea” on page 180

**SNR Triple Track Test Measurement Function****hpe5022\_snrTripleTrackPositionConfig\_Q****C Syntax**

```
ViStatus hpe5022_snrTripleTrackPositionConfig(ViSession id, ViPReal64
squeezePos, ViPReal64 otrcWrPos);
```

**Visual Basic Syntax**

```
hpe5022_snrTripleTrackPositionConfig(ByVal id As Long, ByRef squeezePos As
Double, ByRef otrcWrPos As Double) As Long
```

**Description**

This function returns the specified “squeezePos” and “otrcWrPos”.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- squeezePos
 

Description	Returns the position of the adjacent track.
Direction	OUT
Unit	Meter
- otrcWrPos
 

Description	Returns the write position of the data track.
Direction	OUT
Unit	(none)

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_snrTripleTrackPositionConfig” on page 732

## **hpe5022\_snrTripleTrackAdjacentTrackConfig**

**C Syntax** ViStatus hpe5022\_snrTripleTrackAdjacentTrackConfig(ViSession id, ViInt16 pat);

**Visual Basic Syntax** hpe5022\_snrTripleTrackAdjacentTrackConfig(ByVal id As Long, ByVal pat As Integer) As Long

**Description** This function controls the data pattern of the adjacent track.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- pat
 

Description	Specifies the data pattern of the adjacent track.
Direction	IN
Preset value	hpe5022_PAT_ERASE
Value	

Name	Value	Description
hpe5022_PAT_HF	0	HF pattern
hpe5022_PAT_LF	1	LF pattern
hpe5022_PAT_ISO	2	Isolated pulse pattern
hpe5022_PAT_PRBS	3	Pseudo random pattern
hpe5022_PAT_REP	4	Repetitive pattern
hpe5022_PAT_NLTS_5TH	5	NLTS 5th pattern
hpe5022_PAT_OWHF	6	Overwrite HF pattern
hpe5022_PAT_OWLF	7	Overwrite LF pattern
hpe5022_PAT_USER	20	User-defined Pattern
hpe5022_PAT_ERASE	101	Default Erase Pattern specified by the "hpe5022_eraseType" function.
hpe5022_PAT_ERASE_DC_NEG	102	DC- Erase Pattern
hpe5022_PAT_ERASE_DC_POS	103	DC+ Erase Pattern
hpe5022_PAT_ERASE_AC	104	AC Erase Pattern

Function Reference  
**SNR Triple Track Test Measurement Function**

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'pat' is out of range.

**See Also**

“hpe5022\_snrTripleTrackAdjacentTrackConfig\_Q” on page 737



## **hpe5022\_snrTripleTrackAdjacentTrackConfig\_Q**

**C Syntax** ViStatus hpe5022\_snrTripleTrackAdjacentTrackConfig\_Q(ViSession id, ViPInt16 pat);

**Visual Basic Syntax** hpe5022\_snrTripleTrackAdjacentTrackConfig\_Q(ByVal id As Long, ByRef pat As Integer) As Long

**Description** This function returns the data pattern of the adjacent track.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  
- pat
 

Description	Returns the data pattern of the adjacent track.
Direction	OUT
Value	

Name	Value	Description
hpe5022_PAT_HF	0	HF pattern
hpe5022_PAT_LF	1	LF pattern
hpe5022_PAT_ISO	2	Isolated pulse pattern
hpe5022_PAT_PRBS	3	Pseudo random pattern
hpe5022_PAT_REP	4	Repetitive pattern
hpe5022_PAT_NLTS_5TH	5	NLTS 5th pattern
hpe5022_PAT_OWHF	6	Overwrite HF pattern
hpe5022_PAT_OWLF	7	Overwrite LF pattern
hpe5022_PAT_USER	20	User-defined Pattern
hpe5022_PAT_ERASE	101	Default Erase Pattern specified by the "hpe5022_eraseType" function.
hpe5022_PAT_ERASE_DC_NEG	102	DC- Erase Pattern
hpe5022_PAT_ERASE_DC_POS	103	DC+ Erase Pattern
hpe5022_PAT_ERASE_AC	104	AC Erase Pattern

Function Reference  
**SNR Triple Track Test Measurement Function**

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_snrTripleTrackAdjacentTrackConfig” on page 735

## hpe5022\_snrTripleTrackEraseBandConfig

**C Syntax** ViStatus hpe5022\_snrTripleTrackEraseBandConfig(ViSession id, ViReal64 range, ViReal64 pitch);

**Visual Basic Syntax** hpe5022\_snrTripleTrackEraseBandConfig(ByVal id As Long, ByVal range As Double, ByVal pitch As Double) As Long

**Description** This function specifies parameters for band erase in the SNR triple track test. Band erase is performed from  $-(\text{specified range})$  to  $+(\text{specified range})$  with specified pitch.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- range
  - Description Specifies the erase range. Minimum and maximum values are 0 and  $6.0 \times 10^{-6}$  respectively.
  - Direction IN
  - Unit Meter
  - Preset Value  $3.0 \times 10^{-6}$
  - Values

Name	Value
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

- pitch
  - Description Specifies the erasing pitch.
  - Direction IN
  - Unit Meter
  - Preset Value  $0.3 \times 10^{-6}$
  - Values

Name	Value
hpe5022_ERASE_BAND_PITCH_MIN	$50 \times 10^{-9}$
hpe5022_ERASE_BAND_PITCH_MAX	$6.0 \times 10^{-6}$

Function Reference  
**SNR Triple Track Test Measurement Function**

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'range' or 'pitch' is out of range.

**See Also**

“hpe5022\_snrTripleTrackEraseBandConfig\_Q” on page 741

## hpe5022\_snrTripleTrackEraseBandConfig\_Q

- C Syntax** ViStatus hpe5022\_snrTripleTrackEraseBandConfig\_Q(ViSession id, ViPReal64 range, ViPReal64 pitch);
- Visual Basic Syntax** hpe5022\_snrTripleTrackEraseBandConfig\_Q(ByVal id As Long, ByRef range As Double, ByRef pitch As Double) As Long
- Description** This function returns parameters for band erase in the SNR triple track test.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - range
 

Description	Returns the erase range.
Direction	OUT
Unit	Meter
  - pitch
 

Description	Returns the erasing pitch.
Direction	OUT
Unit	Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_snrTripleTrackPositionConfig" on page 732

**SNR Triple Track Test Measurement Function****hpe5022\_snrTripleTrackSnrThresholdConfig****C Syntax**

```
ViStatus hpe5022_snrTripleTrackSnrThresholdConfig(ViSession id, ViReal64
threshold);
```

**Visual Basic Syntax**

```
hpe5022_snrTripleTrackSnrThresholdConfig(ByVal id As Long, ByVal threshold
As Double) As Long
```

**Description**

This function sets the SNR threshold configuration for SNR triple track test.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- threshold
 

Description	Specifies the SNR threshold.
Direction	IN
Unit	dB
Preset value	0.0
Value	

Name	Value
hpe5022_SNR_TRIPLE_TRACK_SNR_THR_MIN	0.0
hpe5022_SNR_TRIPLE_TRACK_SNR_THR_MAX	50.0

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'threshold' is out of range.

**See Also**

"hpe5022\_snrTripleTrackSnrThresholdConfig\_Q" on page 743

## hpe5022\_snrTripleTrackSnrThresholdConfig\_Q

**C Syntax** ViStatus hpe5022\_snrTripleTrackSnrThresholdConfig\_Q(ViSession id, ViPReal64 threshold);

**Visual Basic Syntax** hpe5022\_snrTripleTrackSnrThresholdConfig\_Q(ByVal id As Long, ByRef threshold As Double) As Long

**Description** This function queries the SNR threshold configuration for SNR triple track test.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- threshold
 

Description	Returns the SNR threshold.
Direction	OUT
Unit	dB
Value	

Name	Value
hpe5022_SNR_TRIPLE_TRACK_SNR_THR_MIN	0.0
hpe5022_SNR_TRIPLE_TRACK_SNR_THR_MAX	50.0

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_snrTripleTrackSnrThresholdConfig" on page 742

**SNR Triple Track Test Measurement Function****hpe5022\_snrTripleTrackNoiseConstantConfig****C Syntax**

```
ViStatus hpe5022_snrTripleTrackNoiseConstantConfig(ViSession id, ViBoolean
addNoise, ViReal64 ng, ViReal64 ni);
```

**Visual Basic Syntax**

```
hpe5022_snrTripleTrackNoiseConstantConfig(ByVal id As Long, ByVal addNoise
As Integer, ByVal ng As Double, ByVal ni As Double) As Long
```

**Description**

This function sets the noise constant configuration for SNR triple track test. These values are used for SNR calculation.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- addNoise

Description Specifies the flag which is used to calculate "OTRC SNR" or "Squeezed SNR." See step 8 on page 760 for details.

Direction IN

Preset Value VI\_TRUE

Values

Name	Description
VI_TRUE	Average noise floor is added to signal term in SNR calculation.
VI_FALSE	Average noise floor is not added to signal term in SNR calculation.

- ng

Description Specifies the Gaussian noise constant which is used to calculate "OTRC SNR" or "Squeezed SNR.". See step 8 on page 760 for details.

Direction IN

Preset Value 1

Values

Name	Value
hpe5022_SNR_TRIPLE_TRACK_NOISE_CONST_MIN	0
hpe5022_SNR_TRIPLE_TRACK_NOISE_CONST_MAX	10



- ni

**Description** Specifies the interference noise constant which is used to calculate “OTRC SNR” or “Squeezed SNR.”. See step 8 on page 760 for details.

**Direction** IN

**Preset Value** 1

**Values**

Name	Value
hpe5022_SNR_TRIPLE_TRACK_NOISE_CONST_MIN	0
hpe5022_SNR_TRIPLE_TRACK_NOISE_CONST_MAX	10

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘addNoise’, ‘ng’, and/or ‘ni’ is out of range.

**See Also**

“hpe5022\_snrTripleTrackNoiseConstantConfig\_Q” on page 746

**SNR Triple Track Test Measurement Function****hpe5022\_snrTripleTrackNoiseConstantConfig\_Q****C Syntax**

ViStatus hpe5022\_snrTripleTrackNoiseConstantConfig\_Q(ViSession id, ViPBoolean addNoise, ViPReal64 ng, ViPReal64 ni);

**Visual Basic Syntax**

hpe5022\_snrTripleTrackNoiseConstantConfig\_Q(ByVal id As Long, ByRef addNoise As Integer, ByRef ng As Double, ByRef ni As Double) As Long

**Description**

This function queries the noise constant configuration for SNR triple track test.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- addNoise

Description Returns the flag which is used to calculate "OTRC SNR" or "Squeezed SNR." See step 8 on page 760 for details.

Direction OUT

Values

Name	Description
VI_TRUE	Average noise floor is added to signal term in SNR calculation.
VI_FALSE	Average noise floor is not added to signal term in SNR calculation.

- ng

Description Returns the Gaussian noise constant which is used to calculate "OTRC SNR" or "Squeezed SNR.". See step 8 on page 760 for details.

Direction OUT

Values

Name	Value
hpe5022_SNR_TRIPLE_TRACK_NG_COEF_MIN	0
hpe5022_SNR_TRIPLE_TRACK_NG_COEF_MAX	10

- ni

Description Returns the interference noise constant which is used to calculate "OTRC SNR" or "Squeezed SNR.". See step 8 on page 760 for details.

Direction        OUT

Values

Name	Value
hpe5022_SNR_TRIPLE_TRACK_NI_COEF_MIN	0
hpe5022_SNR_TRIPLE_TRACK_NI_COEF_MAX	10

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

### See Also

“hpe5022\_snrTripleTrackNoiseConstantConfig” on page 744.

**SNR Triple Track Test Measurement Function****hpe5022\_snrTripleTrackNoiseThresholdConfig****C Syntax**

```
ViStatus hpe5022_snrTripleTrackNoiseThresholdConfig(ViSession id, ViReal64
threshold);
```

**Visual Basic Syntax**

```
hpe5022_snrTripleTrackNoiseThresholdConfig(ByVal id As Long, ByVal
threshold As Double) As Long
```

**Description**

This function sets the noise threshold configuration for SNR triple track test.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- threshold
 

Description	Specifies the noise threshold ratio for the SNR triple track test.
Direction	IN
Preset value	0.0
Value	

Name	Value
hpe5022_SNR_TRIPLE_TRACK_NOISE_THR_MIN	0.0
hpe5022_SNR_TRIPLE_TRACK_NOISE_THR_MAX	1.0

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'threshold' is out of range.

**See Also**

"hpe5022\_snrTripleTrackNoiseThresholdConfig\_Q" on page 749

## **hpe5022\_snrTripleTrackNoiseThresholdConfig\_Q**

**C Syntax** ViStatus hpe5022\_snrTripleTrackNoiseThresholdConfig\_Q(ViSession id, ViPReal64 threshold);

**Visual Basic Syntax** hpe5022\_snrTripleTrackNoiseThresholdConfig\_Q(ByVal id As Long, ByRef threshold As Double) As Long

**Description** This function queries the noise threshold configuration for SNR triple track test.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- threshold
 

Description	Returns the noise threshold ratio for the SNR triple track test.
Direction	OUT
Value	

Name	Value
hpe5022_SNR_TRIPLE_TRACK_NOISE_THR_MIN	0.0
hpe5022_SNR_TRIPLE_TRACK_NOISE_THR_MAX	1.0

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_snrTripleTrackNoiseThresholdConfig” on page 748

**SNR Triple Track Test Measurement Function****hpe5022\_snrTripleTrackFilterConfig****C Syntax**

```
ViStatus hpe5022_snrTripleTrackFilterConfig(ViSession id, ViBoolean state,
ViInt16 filterFactor);
```

**Visual Basic Syntax**

```
hpe5022_snrTripleTrackFilterConfig(ByVal id As Long, ByVal state As Integer,
ByVal filterFactor As Integer) As Long
```

**Description**

This function sets the FIR filter configuration for SNR triple track test.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- state

Description Specifies the FIR filter state.

Direction IN

Preset value VI\_FALSE

Value

Name	Description
VI_TRUE	FIR filter is enabled.
VI_FALSE	FIR filter is disabled.

- filterFactor

Description Specifies the filter factor.

Direction IN

Preset value hpe5022\_SNR\_TRIPLE\_TRACK\_FILTER\_MAX

Value

Name	Description
hpe5022_SNR_TRIPLE_TRACK_FILTER_FACTOR_MIN	1
hpe5022_SNR_TRIPLE_TRACK_FILTER_FACTOR_MAX	31

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'state' and/or 'filterFactor' is out of range.

**See Also**

“hpe5022\_snrTripleTrackAdjacentTrackConfig\_Q” on page 737

“hpe5022\_snrTripleTrackFilterConfig\_Q” on page 752

**SNR Triple Track Test Measurement Function****hpe5022\_snrTripleTrackFilterConfig\_Q****C Syntax**

ViStatus hpe5022\_snrTripleTrackFilterConfig\_Q(ViSession id, ViPBoolean state, ViPInt16 filterFactor);

**Visual Basic Syntax**

hpe5022\_snrTripleTrackFilterConfig\_Q(ByVal id As Long, ByVal state As Integer, ByRef filterFactor As Integer) As Long

**Description**

This function queries the FIR filter configuration for the SNR triple track test.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- state

Description Returns the fitter state.

Direction OUT

Value

Name	Description
VI_TRUE	FIR filter is enabled.
VI_FALSE	FIR filter is disabled.

- filterFactor

Description Returns the filter factor.

Direction OUT

Value

Name	Description
hpe5022_SNR_TRIPLE_TRACK_FILTER_FACTOR_MIN	1
hpe5022_SNR_TRIPLE_TRACK_FILTER_FACTOR_MAX	31

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error



Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_snrTripleTrackFilterConfig” on page 750

**hpe5022\_snrTripleTrackSectorNormalizeConfig****C Syntax**

```
ViStatus hpe5022_snrTripleTrackSectorNormalizeConfig(ViSession id,
ViBoolean normOn);
```

**Visual Basic Syntax**

```
hpe5022_snrTripleTrackSectorNormalizeConfig(ByVal id As Long, ByVal
normOn As Integer) As Long
```

**Description**

This function sets the sector normalization mode of SNR triple track test. When sector normalization mode is enabled, the following sequence is executed after the main sequence of SNR triple track test (track profile of “Data,” “SquashedData,” “CockpitNoise,” “SideNoise,” and “SideNoiseOD”) and each track profile data are normalized.

Sequence:

1. Erase at track center.
2. Read noise level of each sector at maximum TAA position using the track profile data of “Data” pattern which is already acquired in main sequence. The obtained data is called “noise [ ]”.
3. Write at track center.
4. Read TAA level of each sector at maximum TAA position using the track profile data of “Data” pattern which is already acquired in main sequence. The obtained data is called “taa [ ].”
5. Calculate average of noise as follows:

$$avgNoise = \frac{\sum noise}{5}$$

(4: number of sectors)

6. Calculate average of TAA as follows:

$$avgTaa = \frac{\sum taa}{5}$$

(4: number of sectors)

7. Calculate coefficient of normalization for each sector as follows:

$$coef[ ] = \frac{avgTaa - avgNoise}{taa[ ] - avgNoise}$$

8. Normalize track profile data of each sector as follows:

$$trkProf[ ] = coef[ ] \times (trkProf[ ] - avgNoise) + avgNoise$$

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- normOn

Description      Specifies the sector normalization mode.

Direction        IN

Preset value     VI\_FALSE

Value

Name	Description
VI_TRUE	Sector normalization is enabled.
VI_FALSE	Sector normalization is disabled.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_snrTripleTrackSectorNormalizeConfig\_Q” on page 756

**SNR Triple Track Test Measurement Function****hpe5022\_snrTripleTrackSectorNormalizeConfig\_Q****C Syntax**

```
ViStatus hpe5022_snrTripleTrackSectorNormalizeConfig_Q(ViSession id,
ViPBoolean normOn);
```

**Visual Basic Syntax**

```
hpe5022_snrTripleTrackSectorNormalizeConfig_Q(ByVal id As Long, ByRef
normOn As Integer) As Long
```

**Description**

This function returns the sector normalization mode of SNR triple track test.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- normOn
 

Description	Returns the sector normalization mode.
Direction	OUT
Value	

Name	Description
VI_TRUE	Sector normalization is enabled.
VI_FALSE	Sector normalization is disabled.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_snrTripleTrackSectorNormalizeConfig” on page 754

**hpe5022\_measureSnrTripleTrack****C Syntax**

ViStatus hpe5022\_measureSnrTripleTrack(ViSession id, ViInt16 seqType, ViInt16 measFunc, ViReal64 offsStart, ViReal64 offsStop, ViInt16 points);

**Visual Basic Syntax**

hpe5022\_measureSnrTripleTrack(ByVal id As Long, ByVal seqType As Integer, ByVal measFunc As Integer, ByVal offsStart As Double, ByVal offsStop As Double, ByVal points As Integer) As Long

**Description**

This function performs the SNR triple track measurement.

The detailed sequences of this function is as follows:

*Note: In this description, data name with [ ] shows that the data type is an array.*

## 1. Track Profile Measurement

- a. When the “seqType” is set to “hpe5022\_SEQ\_ER\_WR\_M,” perform band erase to eliminate noise from the media. Band erase parameters are specified by “hpe5022\_snrTripleTrackEraseBandConfig” on page 739.
- b. Write data and adjacent data pattern at four different sectors of the track as follows:

Sector #	Profile Name	Write Pattern
0	“Data[ ]”	Data pattern at track center
1	“Squashed Data[ ]”	Data pattern at track center
		Adjacent data pattern at + squeezePos
		Adjacent data pattern at – squeezePos
2	“Side Noise ID[ ]”	Data pattern at + otrcWrPos
		Adjacent data pattern at track center
3	“Cockpit Noise[ ]”	Data pattern at + otrcWrPos
		Data pattern at – otrcWrPos
		Adjacent data pattern at track center
		Adjacent data pattern at + squeezePos
		Adjacent data pattern at – squeezePos
4	“Side Noise OD[ ]”	Data pattern at – otrcWrPos
		Adjacent pattern at track center

**NOTE**

Data pattern is specified by “hpe5022\_selectPattern” on page 119.

Adjacent data pattern is specified by “hpe5022\_snrTripleTrackAdjacentTrackConfig” on page 735.

squeezedPos and otrcWrPos are specified by “hpe5022\_snrTripleTrackPositionConfig” on page 732.

**SNR Triple Track Test Measurement Function**

Squeeze position is described as a distance in meter from the test track. OTRC write position is described as a ratio to the track pitch.

- c. Measure the track profile of the TAA for each sector (seqType: hpe5022\_SEQ\_M, mode: hpe5022\_TP\_FORWARD). Profile data for sector 0, 1, 2, 3, 4 are named “Data,” “Squashed Data,” “SideNoseID,” “Cockpit Noise,” and “Side NoiseOD” respectively.

2. Sector Normalization

If sector normalization mode (specified by “hpe5022\_snrTripleTrackSectorNormalizeConfig” on page 754) is enabled, execute the sequence for sector normalization and all profile data are normalized. Refer to “hpe5022\_snrTripleTrackSectorNormalizeConfig” on page 754 for details of the sector normalization.

3. “Noise Floor” Calculation

Calculate noise floor level using “Data[ J]” and “Squashed Data[ J].” See NOTE on page 762 for the noise floor calculation algorithm. The obtained noise floor level is called “Noise Floor.”

4. “OTRC Signal[ J]” and “Normalized OTRC Signal[ J]” Calculation

- a. Remove “Noise Floor” from “Data[ J]” using the following equation:

$$Data1[ J] = \sqrt{Data[ J]^2 - NoiseFloor^2}$$

- b. Perform smoothing for “Data1[ J].” In this calculation, filtering parameter (specified by “hpe5022\_snrTripleTrackFilterConfig” on page 750) is used. The derived trace is named “Data2[ J].”

- c. “OTRC Signal[ J]” is derived from the following equation:

$$OTRC\ Signal[ J] = \sqrt{Data2[ J]^2 + NoiseFloor^2}$$

- d. Normalize “OTRC Signal[ J]” as the maximum and minimum values of “OTRC Signal[ J]” are converted to 1 and 0 respectively. The obtained data is called “Normalized OTRC Signal[ J].”

5. “Squeezed Signal[ J]” and “Normalized Squeezed Signal[ J]” Calculation

- a. Remove “Noise Floor” from “Squashed Data[ J]” using the following equation:

$$Squashed\ Data1[ J] = \sqrt{SquashedData[ J]^2 - NoiseFloor^2}$$

- b. Perform smoothing for “Squashed Data1[ J].” In this calculation, filtering parameter (specified by “hpe5022\_snrTripleTrackFilterConfig” on page 750) is used. The result profile is called “Squashed Data2[ J].”

- c. “Squeezed Signal[ J]” is derived from the following equation:

$$Squeezed\ Signal[ J] = \sqrt{SquashedData2[ J]^2 + NoiseFloor^2}$$

## SNR Triple Track Test Measurement Function

- d. Normalize “*Squeezed Signal[ J]*” as the maximum and minimum values of “*OTRC Signal[ J]*” are converted to 1 and 0 respectively. The obtained data is called “*Normalized Squeezed Signal[ J]*.”

6. “*OTRC Noise[ J]*” and “*Normalized OTRC Noise[ J]*” Calculation

- a. Remove “*Noise Floor*” from “*Side NoiseID[ J]*” using the following equation:

$$\text{Side Noise ID1}[ J] = \sqrt{\text{SideNoiseID}[ J]^2 - \text{NoiseFloor}^2}$$

- b. Perform smoothing for “*Side Noise ID1[ J]*.” In this calculation, filtering parameter (specified by “*hpe5022\_snrTripleTrackFilterConfig*” on page 750) is used. The result is called “*Side Noise ID2[ J]*.”

- c. Remove “*Noise Floor*” from “*Side Noise OD[ J]*” using the following equation:

$$\text{Side Noise OD1}[ J] = \sqrt{\text{SideNoiseOD}[ J]^2 - \text{NoiseFloor}^2}$$

- d. Perform smoothing for “*Side Noise OD1[ J]*.” In this calculation, filtering parameter (specified by “*hpe5022\_snrTripleTrackFilterConfig*” on page 750) is used. The result is called “*Side Noise OD2[ J]*.”

- e. Compose “*SideNoiseID2*” and “*Side Noise OD2*” using the following equation (the composite data is called “*Side Noise2[ J]*”):

If *Side Noise ID2[ J] > Side Noise OD2[ J]*

$$\text{Side Noise 2}[ J] = \text{Side Noise ID2}[ J]$$

Else,

$$\text{Side Noise2}[ J] = \text{Side Noise OD2}[ J]$$

- f. “*OTRC Noise[ J]*” is derived from the following equation:

$$\text{OTRC Noise}[ J] = \sqrt{\text{SideNoise2}[ J]^2 + \text{NoiseFloor}^2}$$

- g. Normalize “*OTRC Noise[ J]*” as the maximum and minimum values of “*OTRC Signal[ J]*” are converted to 1 and 0 respectively. The obtained data are called “*Normalized OTRC Noise[ J]*.”

7. “*Squeezed Noise[ J]*” and “*Normalized Squeezed Noise[ J]*” Calculation

- a. Obtain “*Squeezed Noise[ J]*” by combining two “*OTRC Signal[ J]*” profiles plotted at  $\pm$  *squeezePos*.

- b. Remove “*Noise Floor*” from “*Cockpit Noise[ J]*” using the following equation:

$$\text{Cockpit Noise1}[ J] = \sqrt{\text{CockpitNoise}[ J]^2 - \text{NoiseFloor}^2}$$

- c. Perform smoothing for “*Cockpit Noise1[ J]*.” In this calculation, filtering parameter (specified by “*hpe5022\_snrTripleTrackFilterConfig*” on page 750) is used. The result is called “*Cockpit Noise2[ J]*.”

**SNR Triple Track Test Measurement Function**

- d. “*Squeezed Noise [ J ]*” is derived from the following equation:

$$\text{Squeezed Noise [ J ]} = \sqrt{\text{SqueezedNoise[ J ]}^2 + \text{CockpitNoise2[ J ]}^2}$$

- e. Normalize “*Squeezed Noise[ J ]*” as the maximum and minimum values of “*OTRC Signal[ J ]*” are converted to 1 and 0 respectively. The obtained data is called “*Normalized Squeezed Noise[ J ]*.”
8. “*OTRC SNR[ J ]*,” “*Squeezed SNR[ J ]*,” “*OTRC (Unsqueezed OTRC)*,” and “*Squeezed OTRC*” Calculation

- a. Calculate “*OTRC SNR[ J ]*” profile from “*OTRC Signal[ J ]*” and “*OTRC Noise[ J ]*.”

If  $\text{OTRCSignal}'[ J ] > \text{OTRC Noise}'[ J ]$   
and  $\text{OTRC Noise}'[ J ] + Ng \neq 0$   
and  $Ng + Ni \neq 0$ , then

$$\text{OTRC SNR}[ J ] = 10 \times \log \frac{\text{OTRCSignal}'[ J ]^2 + \text{addNoise} \times \text{SNg}^2}{(\text{OTRCNoise}'[ J ] \times Ni)^2 + (\text{NNg} \times Ng)^2}$$

Else,

$$\text{OTRC SNR}[ J ] = 0$$

where,

$$\text{OTRCSignal}'[ J ] = \sqrt{\text{OTRCSignal}[ J ]^2 - \text{SNg}^2}$$

$$\text{OTRCNoise}'[ J ] = \sqrt{\text{OTRCNoise}[ J ]^2 - \text{NNg}^2}$$

*Ng*: Gaussian noise constant (user-defined)

*Ni*: Interference constant (user-defined)

*SNg*: Gaussian noise of “*OTRC Signal[ J ]*” profile

*NNg*: Gaussian noise of “*OTRC Noise[ J ]*” profile

*addNoise*: 1 or 0 (specified by

“*hpe5022\_snrTripleTrackNoiseConstantConfig*” on page 744)

See NOTE on page 762 for the Gaussian noise calculation algorithm.

Noise constants and noise threshold parameters are specified by “*hpe5022\_snrTripleTrackNoiseConstantConfig*” on page 744 and “*hpe5022\_snrTripleTrackNoiseThresholdConfig*” on page 748 respectively.

- b. Calculate “*Squeezed SNR[ J ]*” profile from “*Squeezed Signal[ J ]*” and “*Squeezed Noise[ J ]*.”

If  $\text{Squeezed Signal}'[ J ] > \text{Squeezed Noise}'[ J ]$   
and  $\text{Squeezed Noise}'[ J ] + Ng \neq 0$   
and  $Ng + Ni \neq 0$ , then



## SNR Triple Track Test Measurement Function

$$\text{Squeezed SNR}[ J ] = 10 \times \log \frac{\text{SqueezedSignal}'[ J ]^2 + \text{addNoise} \times \text{SNg}^2}{(\text{SqueezedNoise}'[ J ] \times \text{Ni})^2 + (\text{NNg} \times \text{Ng})^2}$$

Else,

$$\text{Squeezed SNR}[ J ] = 0$$

where,

$$\text{Squeezed Signal}'[ J ] = \sqrt{\text{SqueezedSignal}[ J ]^2 - \text{SNg}^2}$$

$$\text{Squeezed Noise}'[ J ] = \sqrt{\text{SqueezedNoise}[ J ]^2 - \text{NNg}^2}$$

where,

*Ng*: Gaussian noise constant (user-defined)

*Ni*: Interference constant (user-defined)

*SNg*: Gaussian noise of “*Squeezed Signal*[ *J* ]” profile

*NNg*: Gaussian noise of “*Squeezed Noise*[ *J* ]” profile

*addNoise*: 1 or 0 (user-defined)

Noise constants and noise threshold parameters are specified by “hpe5022\_snrTripleTrackNoiseConstantConfig” on page 744 and “hpe5022\_snrTripleTrackNoiseThresholdConfig” on page 748 respectively.

See NOTE on page 762 for the Gaussian noise calculation algorithm.

- c. Calculate “*OTRC (Unsqueezed OTRC)*” value from “*OTRC SNR*[ *J* ]” profile. SNR threshold parameter used in this calculation is specified by “hpe5022\_snrTripleTrackSnrThresholdConfig” on page 742.
  - d. Calculate “*Squeezed OTRC*” value from “*Squeezed SNR*[ *J* ]” profile. SNR threshold parameter used in this calculation is specified by “hpe5022\_snrTripleTrackSnrThresholdConfig” on page 742.
9. “*WW*,” “*RW*,” “*RW Offset*,” and “*Squash*” Calculation
- a. For the “*Normalized OTRC Signal*[ *J* ],” specify the interpolation range which includes the threshold and window size settings.
  - b. Calculate the distance between the regression lines at 50% threshold and denote the measured distance as the “*Write Track Width (WW)*.”
  - c. Calculate the distance between the regression lines at 0% threshold (i.e., floor level). Subtract the write track width from this result and denote the new width as the “*Read Track Width (RW)*.”
  - d. Calculate the distance between the center of the track (i.e., at zero offset) and the center of the write track width. And denote the calculated distance as “*Read/Write Offset (RW offset)*.”
  - e. Calculate “*Squash*” using the following equation:

$$\text{Squash} = \frac{\text{TAA} \text{Squash}}{\text{TAA} \text{max}}$$

**SNR Triple Track Test Measurement Function**

where,

*TAAmax*: “OTRC Signal[ ]” value at maximum TAA position

*TAAsquash*: “Squeezed Signal[ ]” value at “TAAmax” position

The “hpe5022\_snrTripleTrack\_Q” on page 769 and

“hpe5022\_snrTripleTrackProfile\_Q” on page 772 functions return the measurement result.

**NOTE****Gaussian Noise Level Calculation Method**

If a track profile data array and noise threshold ratio are described as “*profileData[ ]*” and “*noiseThr*” respectively, the Gaussian noise level (“*gaussianNoiseLevel*”) is calculated as follows:

1. Obtain maximum value (“*max*”) and minimum value (“*min*”) of “*profileData[ ]*.”
2. Calculate noise threshold level (“*noiseThrLevel*”) using the following equation:

$$\text{noiseThrLevel} = (\text{max} - \text{min}) \times \text{noiseThr} + \text{min}$$

3. Calculate Gaussian noise level using the following equation:

$$\text{gaussianNoiseLevel} = \frac{\text{sum}}{\text{count}}$$

where,

*count*: number of elements whose values are below “*noiseThrLevel*”

*sum*: sum of element’s values below “*noiseThrLevel*.”

**Noise Floor Calculation Method**

Noise Floor is calculated as follows:

1. Calculate noise level (“*noiseLevelD*”) from “*Data[ ]*” and noise threshold ratio (“*noiseThr*”) in accordance with “Gaussian Noise Level Calculation Method.”
2. Calculate noise level (“*noiseLevelS*”) from “*SquashedData[ ]*” and noise threshold ratio (“*noiseThr*”) in accordance with “Gaussian Noise Level Calculation Method.”
3. Calculate noise floor (“*NoiseFloor*”) using the following equation:

$$\text{NoiseFloor} = \frac{\text{noiseLevelD} + \text{noiseLevelS}}{2}$$

**Parameters**

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **seqType**

**SNR Triple Track Test Measurement Function**

Description Specifies the type of measurement sequence.

Direction IN

Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Perform band erase → Perform SNR triple track test
hpe5022_SEQ_WR_M	1	Perform SNR triple track test only

- measFunc

Description Specifies the type of measurement.

Direction IN

Values

Name	Value	Description
hpe5022_MEAS_TAA	1	Measure TAA

- offsStart

Description Specifies the start offset position for track profile measurement of the SNR triple track test.

Direction IN

Unit Meter

Values

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

- offsStop

Description Specifies the stop offset position for track profile measurement of the SNR triple track test.

Direction IN

Unit Meter

Values

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$

**SNR Triple Track Test Measurement Function**

Name	Value
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

- points

Description Specifies the number of measurement points for track profile measurement.

Direction IN

Values

Name	Value
hpe5022_TRACK_PROFILE_SIZE_MIN	1
hpe5022_TRACK_PROFILE_SIZE_MAX	201

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_AUTO_RANGE_FAIL	The autoranging in the track profile measurement is failed. Check if the parameter setting and head is correct.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindrive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_INV_PARAMETER	The parameter 'measFunc', 'OffsStart', 'OffsStop', or 'points' is out of range. Check if the head offset compensation value by using "hpe5022_trackOffsetCompValue_Q" function. If it is not 0, the 'Offsstart' or 'Offsstop' range is narrowed.

**See Also**

- “hpe5022\_snrTripleTrackWindowConfig” on page 728
- “hpe5022\_snrTripleTrackPositionConfig” on page 732
- “hpe5022\_snrTripleTrackAdjacentTrackConfig” on page 735
- “hpe5022\_snrTripleTrack\_Q” on page 769
- “hpe5022\_snrTripleTrackProfile\_Q” on page 772
- “hpe5022\_measureTrackProfile” on page 615
- “hpe5022\_selectPattern” on page 119
- “hpe5022\_driveState” on page 209

**SNR Triple Track Test Measurement Function****hpe5022\_setupSnrTripleTrack****C Syntax**

```
ViStatus hpe5022_setupSnrTripleTrack(ViSession id, ViInt16 seqType, ViInt16
measFunc, ViReal64 start, ViReal64 stop, ViInt16 points, ViPObject testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupTripleTrack(ByVal id As Long, ByVal seqType As Integer, ByVal
measFunc As Integer, ByVal start As Double, ByVal stop As Double, ByVal points
As Integer, ByRef testHndl As Long) As Long
```

**Description**

This function assigns the SNR triple track measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureTripleTrack” function for details about the sequence. This function does not execute measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_tripleTrack\_Q” and “hpe5022\_tripleTrackProfile\_Q” functions return the measurement result.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- seqType

Description Specifies the type of measurement sequence.

Direction IN

Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Band Erase → Write → Measure Triple Track Test
hpe5022_SEQ_WR_M	1	Measure SNR triple track test only

- measFunc

Description Specifies the type of measurement.

Direction IN

Values Same as the ‘measFunc’ in the “hpe5022\_measureTripleTrack” function.

- start

Description Specifies the start offset position for track profile measurement of the Triple Track Test.

Direction IN

- Unit                    Meter

Values                 Same as the ‘offsStart’ in the “hpe5022\_measureTripleTrack” function.
- stop

Description         Specifies the stop offset position for track profile measurement of the Triple Track Test.

Direction            IN

Unit                    Meter

Values                 Same as the ‘offsStop’ in the “hpe5022\_measureTripleTrack” function.
- points

Description         Specifies the number of measurement points for track profile measurement.

Direction            IN

Values                 Same as the ‘points’ in the “hpe5022\_measureTripleTrack” function.
- testHndl

Description         Returns the test identifier. This identifier is used to execute the SNR triple track measurement by the “hpe5022\_measure” function.

Direction            OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘measFunc’, ‘Offstart’, ‘Offstop’, and/or ‘points’ is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**                    “hpe5022\_measureSnrTripleTrack” on page 757

**SNR Triple Track Test Measurement Function**

“hpe5022\_snrTripleTrack\_Q” on page 769

“hpe5022\_snrTripleTrackProfile\_Q” on page 772

“hpe5022\_snrTripleTrackWindowConfig” on page 728

“hpe5022\_snrTripleTrackPositionConfig” on page 732

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390



## hpe5022\_snrTripleTrack\_Q

### C Syntax

ViStatus hpe5022\_snrTripleTrack\_Q(ViSession id, ViInt16 dataType, ViInt16 rwOffsPos, ViPReal64 ww, ViPReal64 rw, ViPReal64 rwOfst, ViPReal64 maxTaa, ViPReal64 squash, ViPReal64 otrc, ViPReal64 sqOtrc);

### Visual Basic Syntax

hpe5022\_snrTripleTrack\_Q Lib(ByVal id As Long, ByVal dataType As Integer, ByVal rwOffsPos As Integer, ByRef ww As Double, ByRef rw As Double, ByRef rwOffset As Double, ByRef maxTaa As Double, ByRef squash As Double, ByRef otrc As Double, ByRef sqOtrc As Double) As Long

### Description

This function returns the result of the SNR triple track measurement.

### Parameters

- id  
 Description      Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction      IN

- dataType  
 Description      Specifies the data type to be queried.

Direction      IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA

- rwOffsPos  
 Description      Specifies the calculation method of the read write offset. This is the same as the "hpe5022\_calculateRWOffsetAndWidth\_Q" function.

Direction      IN

Values

Name	Value	Description
hpe5022_RWOF_POS_50PERC_CENT	0	Center Point at 50% level
hpe5022_RWOF_POS_PROF_MAX	1	Maximum point of track profile
hpe5022_RWOF_POS_CROS_INT_LINE	2	Least Sq. Approx. Linear Line Cross Point

- ww

**SNR Triple Track Test Measurement Function**

Description	Returns the write track width. The definition of the write track width is the same as the “hpe5022_calculateRWOOffsetAndWidth_Q” function. The floor level is set at 0% in that function.
Direction	OUT
Unit	Meter
• rw	
Description	Returns the read track width. The definition of the write track width is the same as the “hpe5022_calculateRWOOffsetAndWidth_Q” function. The floor level is set at 0% in that function.
Direction	OUT
Unit	Meter
• rwOfst	
Description	Returns the read-write offset according to the setting of ‘rwOffsPos’. The definition of the read/write offset is the same as the “hpe5022_calculateRWOOffsetAndWidth_Q” function. The floor level is set at 0% in that function.
Direction	OUT
Unit	Meter
• maxTaa	
Description	Returns the maximum TAA value of the track profile result.
Direction	OUT
Unit	Volt
• squash	
Description	Returns the squash ratio.
Direction	OUT
• otrc	
Description	Returns the unsqueezed OTRC (Off-Track Read Capability).
Direction	OUT
Unit	Meter
• sqOtr	
Description	Returns the squeezed OTRC.
Direction	OUT
Unit	Meter

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The triple track test data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureSnrTripleTrack” on page 757

“hpe5022\_calculateReadWriteOffset\_Q” on page 628

**SNR Triple Track Test Measurement Function****hpe5022\_snrTripleTrackProfile\_Q****C Syntax**

ViStatus hpe5022\_snrTripleTrackProfile\_Q(ViSession id, ViInt16 dataType, ViInt16 profileType, ViReal64 profile[], ViPReal64 interceptL, ViPReal64 slopeL, ViPReal64 interceptR, ViPReal64 slopeR);

**Visual Basic Syntax**

hpe5022\_snrTripleTrackProfile\_Q(ByVal id As Long, ByVal dataType As Integer, ByVal profileType As Integer, ByRef profile As Double, ByRef interceptL As Double, ByRef slopeL As Double, ByRef interceptR As Double, ByRef slopeR As Double) As Long

**Description**

This function returns the result of the SNR track profile data and the regression line data.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType

Description Specifies the type of data to get the results.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_TAA	1	TAA

- profileType

Description Specifies type of SNR track profile.

Direction IN

Values

Name	Value	Description
hpe5022_SNR_TRIPLE_TRACK_OTRC_SIGNAL	1	OTRC Signal Profile
hpe5022_SNR_TRIPLE_TRACK_SQUEEZE_SIGNAL	2	Squeezed Signal Profile
hpe5022_SNR_TRIPLE_TRACK_OTRC_NOISE	3	OTRC Noise Profile
hpe5022_SNR_TRIPLE_TRACK_SQUEEZE_NOISE	4	Squeezed Noise Profile
hpe5022_SNR_TRIPLE_TRACK_OTRC_SNR	5	OTRC SNR Profile
hpe5022_SNR_TRIPLE_TRACK_SQUEEZE_SNR	6	Squeezed SNR Profile

Name	Value	Description
hpe5022_SNR_TRIPLE_TRACK_OTRC_SIGNAL_NORM	7	Normalized OTRC Signal Profile
hpe5022_SNR_TRIPLE_TRACK_SQUEEZE_SIGNAL_NORM	8	Normalized Squeezed Signal Profile
hpe5022_SNR_TRIPLE_TRACK_OTRC_NOISE_NORM	9	Normalized OTRC Noise Profile
hpe5022_SNR_TRIPLE_TRACK_SQUEEZE_NOISE_NORM	10	Normalized Squeezed Noise Profile

- profile

**Description** Returns the data (set in array) of the parameter specified by the 'dataType' and 'profileType'. The size of array is specified by the 'points' parameter in the "hpe5022\_measureSnrTripleTrack" function or "hpe5022\_setupSnrTripleTrack" function.

**Direction** OUT

- interceptL

**Description** Returns the intercept of the left regression line when profileType is hpe5022\_SNR\_TRIPLE\_TRACK\_OTRC\_SIGNAL\_NORM, hpe5022\_SNR\_TRIPLE\_TRACK\_OTRC\_SNR, or hpe5022\_SNR\_TRIPLE\_TRACK\_SQUEEZE\_SNR. Returns 0 when profileType is another value.

**Direction** OUT

**Unit** Meter

- slopeL

**Description** Returns the slope of the left regression line when profileType is hpe5022\_SNR\_TRIPLE\_TRACK\_OTRC\_SIGNAL\_NORM. If profileType is another value, this parameter is invalid (always 0).

**Direction** OUT

- interceptR

**Description** Returns the intercept of the right regression line when profileType is hpe5022\_SNR\_TRIPLE\_TRACK\_SIGNAL\_NORM, hpe5022\_SNR\_TRIPLE\_TRACK\_OTRC\_SNR, or hpe5022\_SNR\_TRIPLE\_TRACK\_SQUEEZE\_SNR. Returns 0 when profileType is another value.

**SNR Triple Track Test Measurement Function**

Direction	OUT
Unit	Meter
• slopeR	
Description	Returns the slope of the right regression line when profileType is hpe5022_SNR_TRIPLE_TRACK_OTRC_SIGNAL_NORMAL. Returns 0 when profileType is another value.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The triple track test data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureSnrTripleTrack” on page 757

“hpe5022\_setupSnrTripleTrack” on page 766

## Sub-Harmonic Noise Ratio (SHNR)

This section describes the functions related with sub-harmonic noise ratio measurement.

### hpe5022\_shnrConfig

#### C Syntax

```
ViStatus hpe5022_shnrConfig(ViSession id, ViReal64 freq, ViReal64 wrTime, ViReal64 delay, ViReal64 rdTime);
```

#### Visual Basic Syntax


```
hpe5022_shnrConfig(ByVal id As Long, ByVal freq As Double, ByVal wrTime As Double, ByVal delay As Double, ByVal rdTime As Double) As Long
```

#### Description

This function controls the configuration of SHNR measurement using the spectrum analyzer. Write excitation is performed for the time specified by “wrTime”. Then after the delay time has elapsed the read gate opens and the input signal is read for noise detection at a specified frequency by the spectrum analyzer. See the illustration below.

Figure 3-29

Gate Diagram

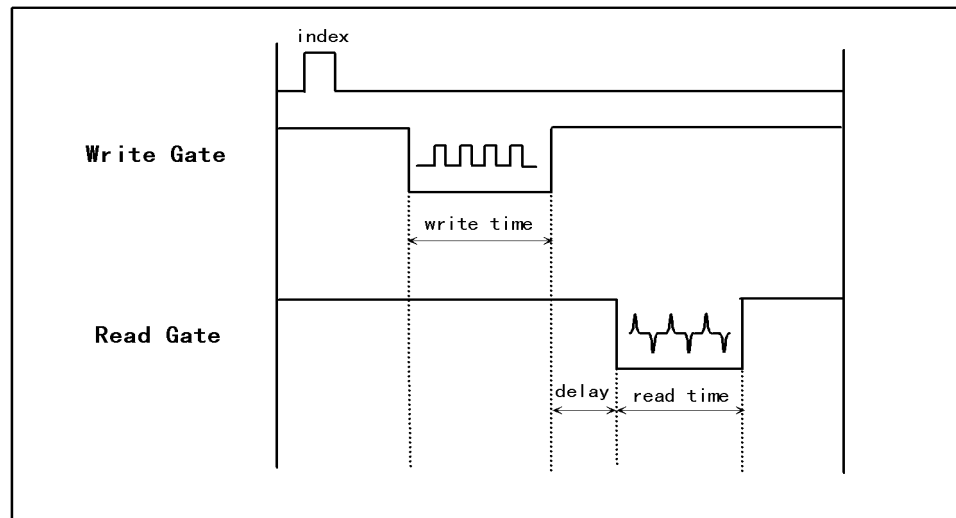

e5022ape03058

#### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- freq
 

Description	Specifies the frequency at which the read signal is measured by the spectrum analyzer.
-------------	----------------------------------------------------------------------------------------

**Sub-Harmonic Noise Ratio (SHNR)**

Direction	IN
Unit	Hz
Preset Value	$25 \times 10^6$
Values	The upper and lower limit values are queryable by “hpe5022_narrowBandTaaFrequencyRange_Q” function.

## • wrTime

Description	Specifies the time to execute write excitation.
Direction	IN
Unit	Second
Preset Value	<code>hpe5022_SHNR_WRIT_TIME_MIN</code> ( $1 \times 10^{-3}$ )
Values	

Name	Value
<code>hpe5022_SHNR_WRIT_TIME_MIN</code>	$1 \times 10^{-3}$
<code>hpe5022_SHNR_WRIT_TIME_MAX</code>	$10 \times 10^{-3}$

## • delay

Description	Specifies the delay time. Delay time is defined as the time distance between write excitation and read operation.
Direction	IN
Unit	Second
Preset Value	<code>hpe5022_SHNR_DEL_MIN</code>
Values	

Name	Value
<code>hpe5022_SHNR_DEL_MIN</code>	0
<code>hpe5022_SHNR_DEL_MAX</code>	$10 \times 10^{-3}$

## • rdTime

Description	Specifies the read time.
Direction	IN
Unit	Second
Preset Value	<code>hpe5022_SHNR_READ_TIME_MIN</code>



Values

Name	Value
hpe5022_SHNR_READ_TIME_MIN	800×10 <sup>-6</sup>
hpe5022_SHNR_READ_TIME_MAX	10×10 <sup>-3</sup>

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'freq', 'wrTime', 'delay' and/or 'rdTime' is out of range.

**See Also**

- “hpe5022\_shnrConfig\_Q” on page 778
- “hpe5022\_setupShnr” on page 793
- “hpe5022\_measureShnr” on page 788

**Sub-Harmonic Noise Ratio (SHNR)****hpe5022\_shnrConfig\_Q****C Syntax**

```
ViStatus hpe5022_shnrConfig_Q(ViSession id, ViPReal64 freq, ViPReal64
wrTime, ViPReal64 delay, ViPReal 64 rdTime);
```

**Visual Basic Syntax**

```
hpe5022_shnrConfig_Q(ByVal id As Long, ByRef freq As Double, ByRef
wrTime As Double, ByRef delay As Double, ByRef rdTime As Double) As Long
```

**Description**

This function returns the specified configuration of SHNR measurement.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- freq
 

Description	Returns the measurement frequency of the spectrum analyzer.
Direction	OUT
- wrTime
 

Description	Returns the time to execute write excitation.
Direction	OUT
- delay
 

Description	Returns the delay time. Delay time is defined as the time distance between write excitation and read operation.
Direction	OUT
- rdTime
 

Description	Returns the read time.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

"hpe5022\_shnrConfig" on page 775

## hpe5022\_shnrWritePatternConfig

**C Syntax** ViStatus hpe5022\_shnrWritePatternConfig(ViSession id, ViInt16 pat);

**Visual Basic Syntax** hpe5022\_shnrWritePatternConfig(ByVal id As Long, ByVal pat As Integer) As Long

**Description** This function controls the data pattern of the write excitation for SHNR measurement.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  
- pat
 

Description	Specifies the data pattern of the write excitation. When this parameter is set to hpe5022_PAT_DEFAULT, write excitation data pattern is the same as the pattern specified by "hpe5022_selectPattern" function.
Direction	IN
Preset value	hpe5022_PAT_DEFAULT

Values

Name	Value	Description
hpe5022_PAT_DEFAULT	-1	Default pattern
hpe5022_PAT_HF	0	HF pattern
hpe5022_PAT_LF	1	LF pattern
hpe5022_PAT_ISO	2	Isolated pulse pattern
hpe5022_PAT_PRBS	3	Pseudo random pattern
hpe5022_PAT_REP	4	Repetitive pattern
hpe5022_PAT_NLTS_5TH	5	NLTS 5th pattern
hpe5022_PAT_OWHF	6	Overwrite HF pattern
hpe5022_PAT_OWLF	7	Overwrite LF pattern
hpe5022_PAT_REP_2	8	Repetition Pattern2
hpe5022_PAT_REP_3	9	Repetition Pattern3
hpe5022_PAT_REP_4	10	Repetition Pattern4
hpe5022_PAT_USER	20	User-defined Pattern

**Sub-Harmonic Noise Ratio (SHNR)**

Name	Value	Description
hpe5022_PAT_USER_2	21	User-defined Pattern2
hpe5022_PAT_USER_3	22	User-defined Pattern3
hpe5022_PAT_USER_4	23	User-defined Pattern4
hpe5022_PAT_ERASE	101	Default Erase Pattern selected by the “hpe5022_eraseType” function
hpe5022_PAT_ERASE_DC_NEG	102	DC- Erase Pattern
hpe5022_PAT_ERASE_DC_POS	103	DC+ Erase Pattern
hpe5022_PAT_ERASE_AC	104	AC Erase Pattern

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter “pat” is out of range.

**See Also**

“hpe5022\_shnrWritePatternConfig\_Q” on page 781

## **hpe5022\_shnrWritePatternConfig\_Q**

- C Syntax** `ViStatus hpe5022_shnrWritePatternConfig_Q(ViSession id, ViInt16 pat);`
- Visual Basic Syntax** `hpe5022_shnrWritePatternConfig_Q(ByVal id As Long, ByRef pat As Integer) As Long`
- Description** This function returns the specified data pattern of the write excitation.
- Parameters**
- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - **pat**

Description	Returns the specified data pattern of the write excitation.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_shnrWritePatternConfig" on page 779

**Sub-Harmonic Noise Ratio (SHNR)****hpe5022\_shnrWriteCurrentConfig****C Syntax**

```
ViStatus hpe5022_shnrWriteCurrentConfig(ViSession id, ViReal64 current);
```

**Visual Basic Syntax**

```
hpe5022_shnrWriteCurrentConfig(ByVal id As Long, ByVal current As Double) As Long
```

**Description**

This function controls the write excitation current for SHNR measurement.

**Parameters**

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **current**

Description	Specifies the write excitation current for SHNR measurement. The limit of write excitation current is dependent on the installed head amplifier. The maximum and minimum values that the write current can be set to are queryable by the “hpe5022_writeCurrentRange_Q” function.
Direction	IN
Unit	Ampere

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter “current” is out of range.

**See Also**

“hpe5022\_measureShnr” on page 788

“hpe5022\_setupShnr” on page 793

“hpe5022\_shnrWriteModeConfig\_Q” on page 787

## hpe5022\_shnrWriteCurrentConfig\_Q

**C Syntax** ViStatus hpe5022\_shnrWriteCurrentConfig\_Q(ViSession id, ViPReal64 current);

**Visual Basic Syntax** hpe5022\_shnrWriteCurrentConfig\_Q(ByVal id As Long, ByRef current As Double) As Long

**Description** This function returns specified write excitation current for SHNR measurement.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- current
 

Description	Returns the specified write excitation current for SHNR measurement.
Direction	OUT
Unit	Ampere

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_shnrWriteCurrentConfig" on page 782

**Sub-Harmonic Noise Ratio (SHNR)****hpe5022\_shnrWriteModeConfig****C Syntax**

```
ViStatus hpe5022_shnrWriteModeConfig(ViSession id, ViInt16 writeMode);
```

**Visual Basic Syntax**

```
hpe5022_shnrWriteModeConfig(ByVal id As Long, ByVal writeMode As Integer)
As Long
```

**Description**

This function controls the write current direction at the beginning of write operation.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- writeMode

**Description** Specifies the direction of the write excitation current.


**Direction** IN

**Values**

<b>Name</b>	<b>Value</b>	<b>Description</b>
hpe5022_WRIT_DATA_POL_FIXED	0	The write excitation current direction at the beginning of each write operation is always the same.
hpe5022_WRIT_DATA_POL_CONTINUOUS	1	The write excitation current direction at the beginning of write operation is the same as the last current direction of the previous write operation.



**Figure 3-30 Write Mode**

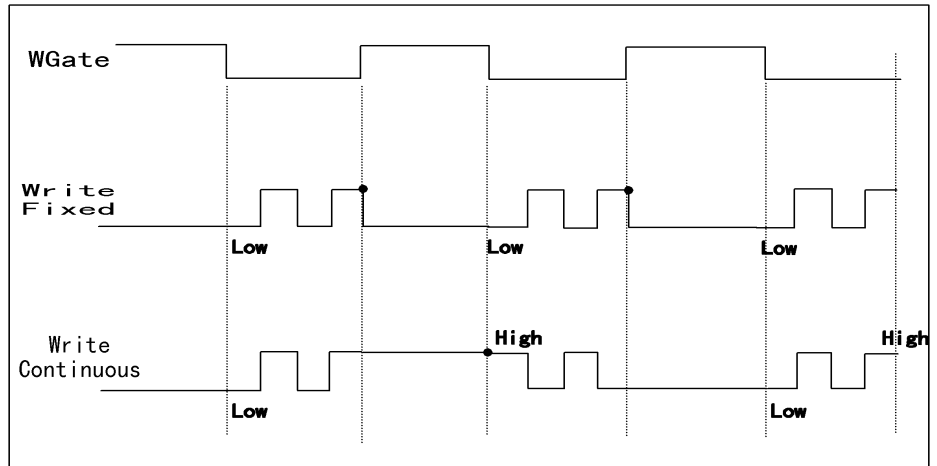

When [Write Mode] is set to “fixed”, the write excitation current direction at the beginning of each write operation is always the same. On the other hand, when [Write Mode] is set to “continuous” the write current direction is the same as the last current direction of the previous write operation. Each time the write excitation current alternates it allows you to check the polarity of the output pulse at the end of the previous write. You must set the repetitive period of the data pattern T to 1T, 2T, 4T and 8T due to the system’s internal constraints and it is also dependent on the installed head amplifier. If you use other data patterns, E5022A/B system can not guarantee the change of direction of the write excitation current. This function makes it possible for SHNR measurement to achieve an acceptable level of the measured signal under similar usage of the drive.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘writeMode’ is out of range.
hpe5022_ERROR_NSUP_CONF	The installed head amplifier has no capability to control the write current direction.

**See Also**

“hpe5022\_measureShnr” on page 788  
 “hpe5022\_setupShnr” on page 793

Function Reference

Function Reference

**Sub-Harmonic Noise Ratio (SHNR)**

“hpe5022\_shnrWriteModeConfig\_Q” on page 787

## hpe5022\_shnrWriteModeConfig\_Q

**C Syntax** ViStatus hpe5022\_shnrWriteModeConfig\_Q(ViSession id, ViPInt16 writeMode);

**Visual Basic Syntax** hpe5022\_shnrWriteModeConfig\_Q(ByVal id As Long, ByRef writeMode As Integer) As Long

**Description** This function returns the configuration specified by “hpe5022\_shnrWriteModeConfig” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- writeMode
 

Description	Returns the specified direction of the write excitation current.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.

**See Also** “hpe5022\_shnrWriteModeConfig” on page 784

**Sub-Harmonic Noise Ratio (SHNR)****hpe5022\_measureShnr**

<b>C Syntax</b>	ViStatus hpe5022_measureShnr(ViSession id, ViInt16 ib_points, const ViReal64 ib[], ViInt16 offtrk_pos_points, const ViReal64 offtrk_pos[], ViInt16 average);
<b>Visual Basic Syntax</b>	hpe5022_measureShnr(ByVal id As Long, ByVal ib_points As Integer, ByRef ib As Double, ByVal offtrk_pos_points As Integer, ByRef offtrk_pos As Double, ByVal average As Integer) As Long
<b>Description</b>	<p>This function measures SHNR (sub-harmonic noise ratio). When this function is executed the following sequence of events take place.</p> <ol style="list-style-type: none"> <li>1. Perform the three-track-erase. (the entire track erase for 5 positions, the track, its both side tracks, and the center between them.)</li> <li>2. Move the head to the read offset.</li> <li>3. For sense stimulus = ib[0] to ib[ib_points-1].</li> <li>4. Measure the signal and denote the result as Noise_Ref[i]. This noise reference is measured at a frequency specified by “hpe5022_shnrConfig” function.</li> <li>5. Next sense stimulus go to <b>step 3</b>.</li> <li>6. Write data at the track center specified by “hpe5022_write” function.</li> <li>7. For read offset = ‘offtrk_pos[0]’ + ‘readOffset’ to offtrk_pos[offtrk_pos_points-1] + readOffset.</li> <li>8. For sense stimulus = ib[0] to [ib_points-1].</li> <li>9. Let Sum TAA = 0</li> <li>10. For average = 1 to n</li> <li>11. Perform write excitation during wrTime. (‘wrTime’ is specified by the “hpe5022_shnrConfig” function.)</li> <li>12. Wait for delay time to elapse. (‘delay’ is specified by the “hpe5022_shnrConfig” function.)</li> <li>13. Measure the Narrow Band TAA (i.e, TAA) during rdTime. (‘rdTime’ is specified by the “hpe5022_shnrConfig” function). Narrow Band TAA is measured at a frequency specified by “hpe5022_shnrConfig” function similar to step 4.</li> <li>14. Get the summation of the measured TAA (i.e, Sum_TAA= Sum TAA + TAA).</li> <li>15. Next average go to <b>step 10</b>.</li> <li>16. Calculate the average TAA = Sum_TAA/ n</li> <li>17. Next sense stimulus go to <b>step 8</b>.</li> <li>18. Next read offset go to <b>step 7</b>.</li> <li>19. For ib_index = 0 to (ib_points-1)</li> </ol>

20. Calculate the SHNR data as;

$SHNR\_DATA(ib\_index) = 20\log(\text{Max}(\text{Aver\_TAA}[ib\_index]) / \text{Noise\_Ref}[ib\_index])$ . The result is returned by “hpe5022\_shnrData\_Q” function.

**Equation 3-3 Calculation of SHNR**


$$SHNRdata = 20\log\left(\frac{MaxAverTAA}{NoiseRef}\right)$$

21. Next sense stimulus go to **step 19**.

22. Denote SHNR as the maximum SHNR from the data array (i.e, SHNR = Max

Function Reference  
**Sub-Harmonic Noise Ratio (SHNR)**

(SHNR\_DATA[]). The result is returned by “hpe5022\_shnr\_Q” function.

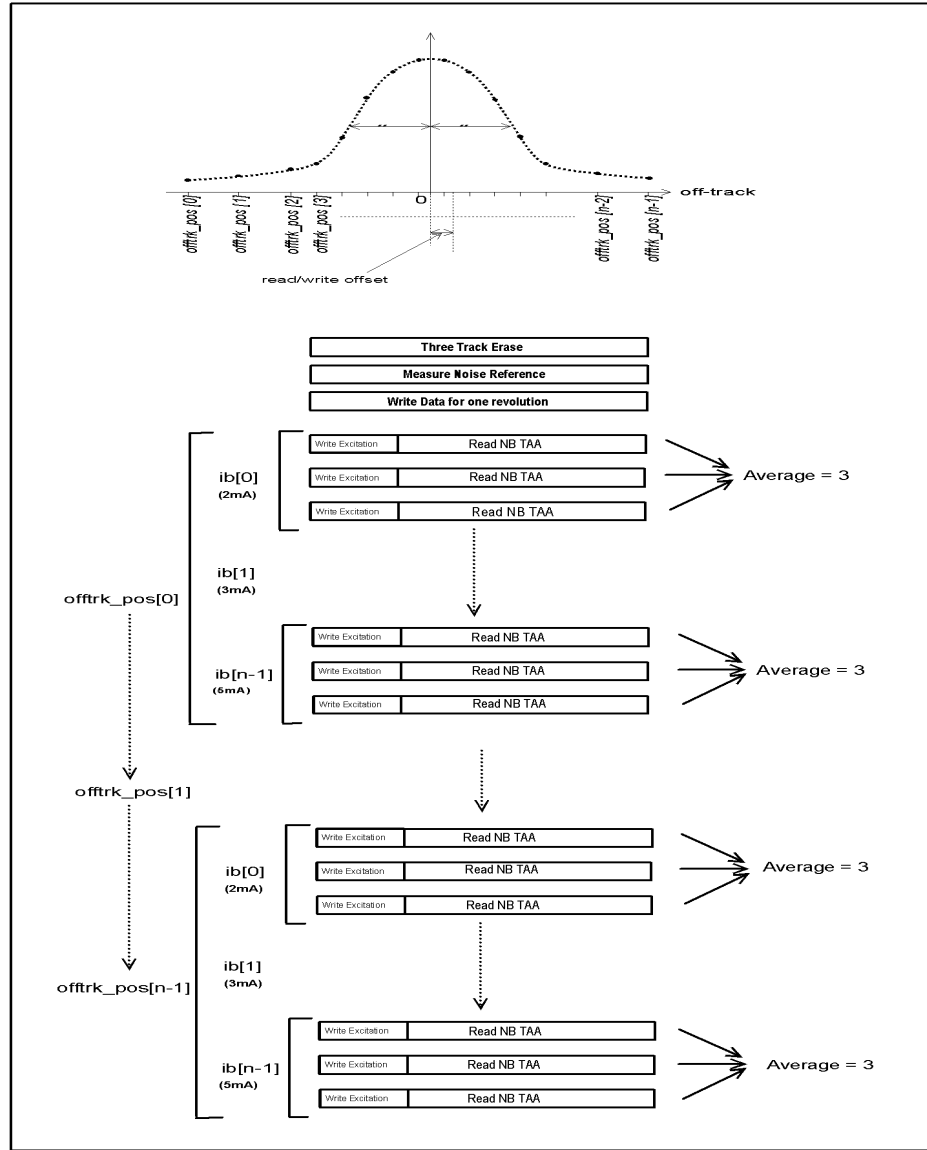

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- ib\_points
  - Description Specifies the number of sense stimulus points.

Direction IN

Name	Value
hpe5022_LIST_SWEEP_COUN_MIN	1
hpe5022_LIST_SWEEP_COUN_MAX	101

- ib

Description Specifies the sense stimulus list as the data array. The sense stimulus will be set to the data in array order. The “hpe5022\_senseStimulusMode” function selects a sense stimulus type. The range of value is returned by the “hpe5022\_senseStimulusRange\_Q” function.

Direction IN

Unit Depends on the mode of “hpe5022\_senseStimulusMode”  
hpe5022\_SENSE\_STIMULUS\_CURRENT : Ampere  
hpe5022\_SENSE\_STIMULUS\_VOLTAGE : Volt  
pe5022\_SENSE\_STIMULUS\_POWER : Watt

- offtrk\_pos\_points

Description Specifies the number of off-track positions.

Direction IN

Name	Value
hpe5022_LIST_SWEEP_COUN_MIN	1
hpe5022_LIST_SWEEP_COUN_MAX	101

- offtrk\_pos

Description Specifies the off-track position list.

Direction IN

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6 \times 10^{-6}$

Unit Meter

- average

Description Specifies the number of measurement points to be averaged.

**Sub-Harmonic Noise Ratio (SHNR)**

Direction IN

Name	Value
hpe5022_SHNR_AVERAGE_MIN	1
hpe5022_SHNR_AVERAGE_MAX	50

**NOTE**

The “ib\_points”, “offtrk\_pos\_points” and “average” parameters must be set within the limits of “hpe5022\_SHNR\_COUN\_MIN ≤ ib\_points × offtrk\_pos\_points × average ≤ hpe5022\_SHNR\_COUN\_MAX

Name	Value
hpe5022_SHNR_COUN_MIN	1
hpe5022_SHNR_COUN_MAX	500

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘ib_points’, ‘ib’, ‘offtrk_pos_points’, ‘offtrk_pos’, and/or ‘average’ is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The drive status is “OFF”.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.

**See Also**

“hpe5022\_shnrConfig” on page 775

“hpe5022\_shnrWritePatternConfig” on page 779

“hpe5022\_shnrWriteCurrentConfig” on page 782

“hpe5022\_shnrWriteModeConfig” on page 784

“hpe5022\_shnr\_Q” on page 796

“hpe5022\_senseStimulusMode” on page 343



## hpe5022\_setupShnr

**C Syntax** ViStatus hpe5022\_setupShnr(ViSession id, ViInt16 ib\_points, const ViReal64 ib[], ViInt16 offtrk\_pos\_points, const ViReal64 offtrk\_pos[], ViInt16 average, ViPObject testHndl);

**Visual Basic Syntax** hpe5022\_setupShnr(ByVal id As Long, ByVal ib\_points As Integer, ByRef ib As Double, ByVal offtrk\_pos\_points As Integer, ByRef offtrk\_pos As Double, ByVal average As Integer, ByRef testHndl As Long) As Long

**Description** This function assigns the shnr measurement sequence to the test identifier. Refer to the “hpe5022\_measureShnr” function for details about the sequence. This function does not execute measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- ib\_points
  - Description Specifies the number of sense stimulus points. This number must be the same as the array size of the sense stimulus list “ib”.
  - Direction IN

Name	Value
hpe5022_LIST_SWEEP_COUN_MIN	1
hpe5022_LIST_SWEEP_COUN_MAX	101

- ib
  - Description Specifies the sense stimulus list as the data array. The sense stimulus will be set to the data in array order. The “hpe5022\_senseStimulusMode” function selects a sense stimulus type. The range of value is returned by the “hpe5022\_senseStimulusRange\_Q” function.
  - Direction IN
  - Unit Depends on the mode of “hpe5022\_senseStimulusMode”
    - hpe5022\_SENSE\_STIMULUS\_CURRENT : Ampere
    - hpe5022\_SENSE\_STIMULUS\_VOLTAGE : Volt
    - hpe5022\_SENSE\_STIMULUS\_POWER : Watt

- offtrk\_pos\_points

**Sub-Harmonic Noise Ratio (SHNR)**

**Description** Specifies the number of off-track position points. This number must be the same as the array size of the off-track position list “offtrk\_pos”.

**Direction** IN

Name	Value
hpe5022_LIST_SWEEP_COUN_MIN	1
hpe5022_LIST_SWEEP_COUN_MAX	101

- offtrk\_pos

**Description** Specifies the off-track position list.

**Direction** IN

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6 \times 10^{-6}$

- average

**Description** Specifies the number of measurement points to be averaged for each sense stimulus “ib”.

**Direction** IN

Name	Value
hpe5022_SHNR_AVERAGE_MIN	1
hpe5022_SHNR_AVERAGE_MAX	50

- testHndl

**Description** Returns the test identifier. This identifier is used to execute the SHNR measurement by the “hpe5022\_measure” function.

**Direction** OUT

**NOTE**

The “ib\_points”, “offtrk\_pos\_points” and “average” parameters must be set within the limits of “hpe5022\_SHNR\_COUN\_MIN ≤ ib\_points ×

$\text{offtrk\_pos\_points} \times \text{average} \leq \text{hpe5022\_SHNR\_COUN\_MAX}$

Name	Value
hpe5022_SHNR_COUN_MIN	1
hpe5022_SHNR_COUN_MAX	500

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'ib_points', 'ib', 'offtrk_pos_points', 'offtrk_pos', and/or 'average' is out of range.
hpe5022_ERROR_MEM_ALLOC	Can not allocate enough memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

### See Also

"hpe5022\_measureShnr" on page 788

"hpe5022\_measure" on page 387

"hpe5022\_shnr\_Q" on page 796

"hpe5022\_shnrData\_Q" on page 798


Function Reference  
**Sub-Harmonic Noise Ratio (SHNR)**

**hpe5022\_shnr\_Q**

**C Syntax** ViStatus hpe5022\_shnr\_Q(ViSession id, ViPReal64 harm, ViPReal64 noise, ViPReal64 shnr);

**Visual Basic Syntax** hpe5022\_shnr\_Q(ByVal id As Long, ByRef harm As Double, ByRef noise As Double, ByRef shnr As Double) As Long

**Description** This function returns the maximum calculated results of the SHNR measurement.

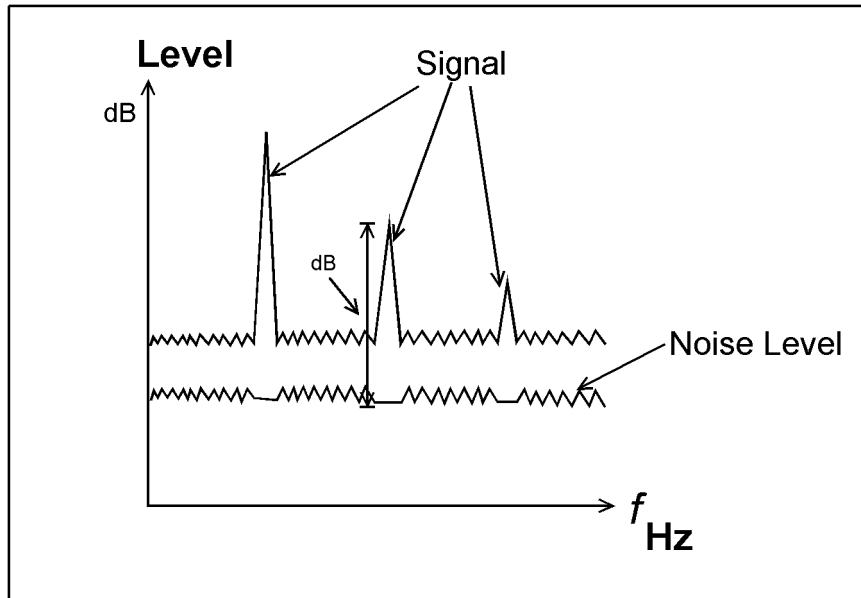

e5022ape03052

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- harm
  - Description Returns the harmonic level in volts. This signal is the maximum average TAA.
  - Direction OUT
- noise
  - Description Returns the noise level in volts. This signal is the measured TAA after performing three track erase (i.e, erase TAA).
  - Direction OUT
- shnr
  - Description Returns the maximum sub-harmonic noise ratio in dB. This

result is the maximum shnr calculated from the maximum average TAA (harm) and erase TAA (noise). Refer to Equation 3-3 of “hpe5022\_measureShnr”.

Direction      OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The “shnr” data is corrupt.

**See Also**      “hpe5022\_measureShnr” on page 788


### hpe5022\_shnrData\_Q

**C Syntax** ViStatus hpe5022\_shnrData\_Q(ViSession id, ViInt16 ib\_index, ViReal64 harm[], ViPReal64 noise, ViReal64 shnr[]);

**Visual Basic Syntax** hpe5022\_shnrData\_Q(ByVal id As Long, ByVal ib\_index As Integer, ByRef harm As Double, ByRef noise As Double, ByRef shnr As Double) As Long

**Description** This function returns the read data from all offtrack positions as measured by the specified sense stimulus “ib”.

**Figure 3-31 SHNR Data**

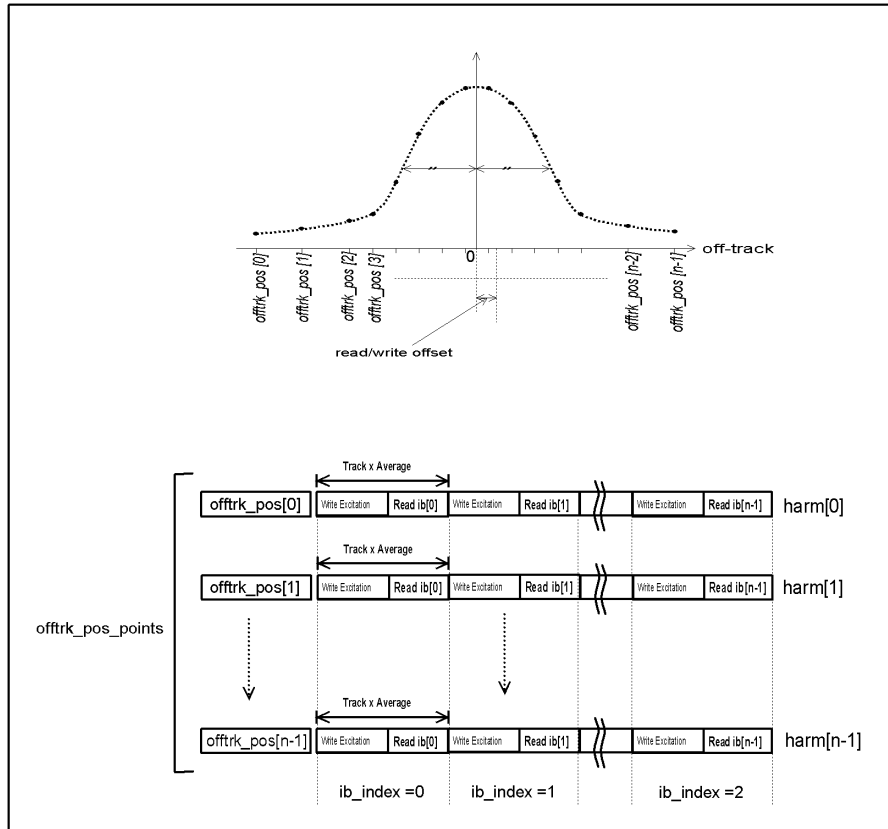

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- ib\_index
  - Description Specifies the sense stimulus index where the read data of a specific sense stimulus “ib” is to be queried. The parameter represents the location of the SHNR raw data measured

from all “offtrk\_pos\_points” as defined by “hpe5022\_measureShnr” function for a particular value of sense stimulus “ib”.

Direction IN

<b>Parameter Limit</b>
$0 \leq \text{ib\_index} \leq \text{ib\_points} - 1$

- harm

Description Returns the sub-harmonic level measured from each off-track position. This data is returned in array form. Refer to Figure 3-31.

Direction OUT

Unit Volt

- noise

Description Returns the noise level.

Direction OUT

Unit Volt

- shnr

Description Returns the calculated SHNR from each off-track position. This data is returned in array form.

Direction OUT

Unit dB

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter “ib_index” is out of range.
hpe5022_ERROR_DATA_CORRUPT	The “shnr” data is corrupt.

### See Also

“hpe5022\_measureShnr” on page 788

## Baseline Popping Measurement Function

This section describes the functions related with the baseline popping measurement.

### hpe5022\_baselinePoppingConfig

**C Syntax**

```
ViStatus hpe5022_baselinePoppingConfig(ViSession id, ViReal64 freq);
```

**Visual Basic Syntax**

```
hpe5022_baselinePoppingConfig(ByVal id As Long, ByVal freq As Double) As Long
```

**Description**

This function specifies the measurement frequency for baseline popping test. Frequency in this function is the sub harmonics of the data pattern.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- freq

**Description** Specifies the measurement frequency.

**Direction** IN

**Unit** Hz

**Preset Value**  $25 \times 10^6$

**Values**

Name	Value
hpe5022_NB_TAA_FREQ_MIN	0
hpe5022_NB_TAA_FREQ_MAX	$500 \times 10^6$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.



Error Code	Description
hpe5022_ERROR_INV_PARAMETER	The parameter 'freq' is out of range

**See Also**

“hpe5022\_measureBaselinePopping” on page 803

“hpe5022\_setupBaselinePopping” on page 806

“hpe5022\_baselinePoppingConfig\_Q” on page 802

**Baseline Popping Measurement Function****hpe5022\_baselinePoppingConfig\_Q****C Syntax**

```
ViStatus hpe5022_baselinePoppingConfig_Q(ViSession id, ViPReal64 freq);
```

**Visual Basic Syntax**

```
hpe5022_baselinePoppingConfig_Q(ByVal id As Long, ByRef freq As Double) As Long
```

**Description**

This function returns the measurement frequency for baseline popping test.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- freq
 

Description	Returns the measurement frequency.
Direction	OUT
Unit	Hz

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_baselinePoppingConfig” on page 800

## hpe5022\_measureBaselinePopping

**C Syntax** ViStatus hpe5022\_measureBaselinePopping(ViSession id, ViInt16 points, const ViReal64 ib[]);

**Visual Basic Syntax** hpe5022\_measureBaselinePopping(ByVal id As Long, ByVal points As Integer, ByRef ib As Double) As Long

**Description** This function measures the baseline popping.  
 The detailed sequences of this function are as follows:

1. Set i to zero. (i = 0)
2. Move the head to the center of the track.
3. Erase (same as the “hpe5022\_erase” function) for an entire track.
4. Set the sense stimulus value of which number is 0 at ‘ib[i]’ (see parameters).
5. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset” function.
6. Measure a narrow band TAA (same as the “hpe5022\_measureNarrowBandTaa” function).
7. Move the head to the center of the track.
8. Write the data pattern specified by the “hpe5022\_selectPattern” function.
9. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset” function.
10. Set the sense stimulus value at ‘ib[i]’ (see parameters).
11. Measure a narrow band TAA (same as the “hpe5022\_measureNarrowBandTaa” function).
12. Increment i by 1. (i = i+1)
13. go to the step 10.

The “hpe5022\_baselinePoppingData\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- points
 

Description	Specifies the number of measurement points for baseline popping measurement. This number must be the same as the array size of the sense stimulus value list.
Direction	IN

Function Reference

**Baseline Popping Measurement Function**

## Values

Name	Value
hpe5022_LIST_SWEEP_COUN_MIN	1
hpe5022_LIST_SWEEP_COUN_MAX	101

• **ib**

**Description** Specifies the sense stimulus list as the data array. The sense stimulus will be set to the data in array order. The “hpe5022\_senseStimulusMode” function selects a sense stimulus type. The range of value is returned by the “hpe5022\_senseStimulusRange\_Q” function.

**Direction** IN

**Unit** Depends on the mode of “hpe5022\_senseStimulusMode”  
 hpe5022\_SENSE\_STIMULUS\_CURRENT : Ampere  
 hpe5022\_SENSE\_STIMULUS\_VOLTAGE : Volt  
 pe5022\_SENSE\_STIMULUS\_POWER : Watt

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindrive has been turned off. Turn it on before executing this function. See the “hpe5022_driveState” function.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘points’, and/or ‘ib’ is out of range.

**See Also**

“hpe5022\_baselinePoppingConfig” on page 800

“hpe5022\_baselinePoppingData\_Q” on page 808

“hpe5022\_readTrackOffset” on page 219

“hpe5022\_measureNarrowBandTaa” on page 572

“hpe5022\_selectPattern” on page 119

“hpe5022\_driveState” on page 209

“hpe5022\_senseStimulusMode” on page 343

**Baseline Popping Measurement Function****hpe5022\_setupBaselinePopping****C Syntax**

```
ViStatus hpe5022_setupBaselinePopping(ViSession id, ViInt16 points, const
ViReal64 ib[], ViPObject testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupBaselinePopping(ByVal id As Long, ByVal points As Integer,
ByRef ib As Double, ByRef testHndl As Long) As Long
```

**Description**

This function assigns the baseline popping measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureBaselinePopping” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_baselinePoppingData\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the “hpe5022_init” function.
Direction	IN
- points
 

Description	Specifies the number of measurement points for baseline popping measurement. This number must be the same as the array size of the sense stimulus value list.
Direction	IN
Values	Same as the ‘points’ in the “hpe5022_measureBaselinePopping” function.
- ib
 

Description	Specifies the sense stimulus list as the data array. The sense stimulus will be set to the data in array order. The “hpe5022_senseStimulusMode” function selects a sense stimulus type. The range of value is returned by the “hpe5022_senseStimulusRange_Q” function.
Direction	IN
Unit	Depends on the mode of “hpe5022_senseStimulusMode” hpe5022_SENSE_STIMULUS_CURRENT : Ampere hpe5022_SENSE_STIMULUS_VOLTAGE : Volt hpe5022_SENSE_STIMULUS_POWER : Watt
- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the baseline popping measurement by the
-------------	---------------------------------------------------------------------------------------------------------

“hpe5022\_measure” function.

Direction      OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘points’, and/or ‘ib’ is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_measureBaselinePopping” on page 803

“hpe5022\_baselinePoppingData\_Q” on page 808

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

**Baseline Popping Measurement Function****hpe5022\_baselinePoppingData\_Q****C Syntax**

```
ViStatus hpe5022_baselinePoppingData_Q(ViSession id, ViReal64 blp[]);
```

**Visual Basic Syntax**

```
hpe5022_baselinePoppingData_Q(ByVal id As Long, ByRef blp As Double) As Long
```

**Description**

This function returns the result of the baseline popping measurement.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- blp
 

Description	Returns the baseline popping data set in array. The size of array is specified by the 'points' parameter in the "hpe5022_measureBaselinePopping" function or "hpe5022_setupBaselinePopping" function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The baseline popping data is corrupt. Check if your measurement sequence is correct.

**See Also**

"hpe5022\_measureBaselinePopping" on page 803

"hpe5022\_setupBaselinePopping" on page 806



## hpe5022\_baselinePoppingMax\_Q

- C Syntax** ViStatus hpe5022\_baselinePoppingMax\_Q(ViSession id, ViPReal64 blpMax);
- Visual Basic Syntax** hpe5022\_baselinePoppingMax\_Q(ByVal id As Long, ByRef blpMax As Double) As Long
- Description** This function returns the maximum data of baseline popping measurement.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - blpMax
 

Description	Returns the maximum data of baseline popping. The maximum value in the data returned by the "hpe5022_baselinePoppingData_Q" function is returned.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The baseline popping data is corrupt. Check if your measurement sequence is correct.

- See Also**
- “hpe5022\_measureBaselinePopping” on page 803
  - “hpe5022\_setupBaselinePopping” on page 806
  - “hpe5022\_baselinePoppingData\_Q” on page 808

## **NLTS (5th Harmonics) Measurement Function**

This section describes the functions related with NLTS measurement. The E5022A/B can measure NLTS from the following three methods.

- 5th Harmonic Method
- Dipulse Extraction Method
- Time Correlation Method

The NLTS by 5th harmonic method is measured by a spectrum analyzer, the dipulse extraction and the time correlation methods are measured by an oscilloscope. NLTS by dipulse extraction and time correlation methods are described in “Setup Function” .

### **hpe5022\_measureNlts5th**

#### **C Syntax**

ViStatus hpe5022\_measureNlts5th(ViSession id, ViInt16 ave);

#### **Visual Basic Syntax**

hpe5022\_measureNlts5th(ByVal id As Long, ByVal ave As Integer) As Long

#### **Description**

This function measures NLTS by the 5th harmonic method.

The function sequences are as follows:

1. Move the head to the write track offset position specified by the “hpe5022\_writeTrackOffset” function.
2. Perform a erase (same as the hpe5022\_erase function) for an entire track.
3. Write NLTS-5th-Elimination data pattern (110000001000000110000001000000) for an entire track at the write track offset position.
4. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset” function.
5. Measure the 5th-harmonic level.
6. Move the head to the write track offset position.
7. Perform a erase (same as the hpe5022\_erase function) for an entire track.
8. Write a reference data pattern whose repetitive period is 15T for an entire track.
9. Move the head to the read track offset position.
10. Measure the 5th-harmonic reference level..
11. Repeat the steps 1 to 10 ‘ave’ (see parameters) times if it is more than 1.

**NLTS (5th Harmonics) Measurement Function**

The data patterns for this measurement are selected automatically. The data pattern specified by the “hpe5022\_selectPattern” function is not used for this measurement.

The “hpe5022\_nlts5th\_Q” function returns the measurement result.

See chapter 5 in the Operation Manual for the calculation formula of NLTS measurement.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- ave
 

Description	Specifies the number of measurements for averaging.
Direction	IN
Values	

Name	Value
hpe5022_NLTS_5TH_COUN_MIN	1
hpe5022_NLTS_5TH_COUN_MAX	25

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'ave' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindrive has been turned off. Turn it on before executing this function. See the “hpe5022_driveState” function.

Function Reference  
**NLTS (5th Harmonics) Measurement Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

“hpe5022\_nlts5th\_Q” on page 815

“hpe5022\_readTrackOffset” on page 219

“hpe5022\_writeTrackOffset” on page 222

“hpe5022\_driveState” on page 209

## hpe5022\_setupNlts5th

- C Syntax** ViStatus hpe5022\_setupNlts5th(ViSession id, ViInt16 ave, ViPObject testHndl);
- Visual Basic Syntax** hpe5022\_setupNlts5th(ByVal id As Long, ByVal ave As Integer, ByRef testHndl As Long) As Long
- Description** This function assigns the NLTS by the 5th harmonic method measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureNlts5th” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with test identifier specified in this function.
- The “hpe5022\_nlts5th\_Q” function returns the measurement result
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - ave
 

Description	Specifies the number of measurements for averaging.
Direction	IN
Values	Same as the ‘ave’ in the “hpe5022_measureNlts5th” function.
  - testHndl
 

Description	Returns the test identifier. This identifier is used to execute the NLTS measurement by the “hpe5022_measure” function.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘ave’ is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_measureNlts5th” on page 810

“hpe5022\_nlts5th\_Q” on page 815

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

## hpe5022\_nlts5th\_Q

- C Syntax** ViStatus hpe5022\_nlts5th\_Q(ViSession id, ViPReal64 nlts);
- Visual Basic Syntax** hpe5022\_nlts5th\_Q(ByVal id As Long, ByRef nlts As Double) As Long
- Description** This function returns the result of NLTS by the 5th harmonic method measurement.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - nlts
 

Description	Returns the results of NLTS by 5th harmonic method.
Direction	OUT
Unit	(Ratio of bit cell time)

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The NLTS data is corrupt. Check if your measurement sequence is correct.

- See Also** “hpe5022\_measureNlts5th” on page 810  
 “hpe5022\_setupNlts5th” on page 813

## **hpe5022\_nlts5thDataSize\_Q**

### **C Syntax**

ViStatus hpe5022\_nlts5thDataSize\_Q(ViSession id, ViPInt32 size);

### **Visual Basic Syntax**

hpe5022\_nlts5thDataSize\_Q(ByVal id As Long, ByRef size As Long) As Long

### **Description**

This function returns the array size of NLTS by the 5th harmonic method data returned by the “hpe5022\_nlts5th\_Q” function.

### **Parameters**

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **size**

Description	Returns the size of the NLTS data.  The size will be the same as the value of ‘ave’ specified by “hpe5022_measureNlts5th” or “hpe5022_setupNlts5th” functions if the measurement done properly.
Direction	OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The NLTS data is corrupt. Check if your measurement sequence is correct.

### **See Also**

“hpe5022\_measureNlts5th” on page 810



## hpe5022\_nlts5thData\_Q

### C Syntax

ViStatus hpe5022\_nlts5thData\_Q(ViSession id, ViReal64 data[]);

### Visual Basic Syntax

hpe5022\_nlts5thData\_Q(ByVal id As Long, ByRef data As Double) As Long

### Description

This function returns the NLTS data of the measurement for each revolution.

When the 'ave' parameter in the "hpe5022\_measureNlts5th" or the "hpe5022\_setupNlts5th" function is set for more than one, the function allows you to get the NLTS data for each revolution. If the 'ave' is set to 1, the output of this function is the same as one of the "hpe5022\_nlts5th\_Q" function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- data
 

Description	Returns the data array of NLTS. The array size is returned by the "hpe5022_nlts5thDataSize_Q" function.
Direction	OUT
Unit	Second

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The NLTS data is corrupt. Check if your measurement sequence is correct.

### See Also

"hpe5022\_nlts5thDataSize\_Q" on page 816

**NLTS (5th Harmonics) Measurement Function****hpe5022\_nlts5thStatistic\_Q****C Syntax**

ViStatus hpe5022\_nlts5thStatistic\_Q(ViSession id, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax**

hpe5022\_nlts5thStatistic\_Q(ByVal id As Long, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description**

This function reports the statistic (mean, minimum, maximum and standard deviation) of NLTS by the 5th harmonic method data. The data returned by the “hpe5022\_nlts5thData\_Q” function is used for this statistic analysis.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- mean
 

Description	Returns the mean value. The returned value is the same as the corresponding values returned by the “hpe5022_nlts5th_Q” function.
Direction	OUT
Unit	(Ratio of bit cell time)
- min
 

Description	Returns the minimum value.
Direction	OUT
Unit	(Ratio of bit cell time)
- max
 

Description	Returns the maximum value.
Direction	OUT
Unit	(Ratio of bit cell time)
- stdDev
 

Description	Returns the standard deviation value.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The NLTS data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_nlts5thData\_Q” on page 817

---

## SNR Measurement

This section describes the functions related with SNR (Signal to Noise Ratio) measurement. SNR is measured by a parametric module.

### hpe5022\_noiseReference

#### C Syntax

```
ViStatus hpe5022_noiseReference(ViSession id, ViReal64 noiseRef);
```

#### Visual Basic Syntax

```
hpe5022_noiseReference(ByVal id As Long, ByVal noiseRef As Double) As Long
```

#### Description

This function sets the noise reference value in order to measure noise accurately.

#### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- noiseRef

Description Specifies the noise reference value.

Direction IN

Unit Volt (rms)

Preset Value  $100 \times 10^{-6}$

Values

Name	Value
hpe5022_NOISE_REF_MIN	0
hpe5022_NOISE_REF_MAX	$100 \times 10^{-3}$

#### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_PARAMETER	The parameter 'noiseRef' is out of range.

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_measureSnr” on page 823

## **hpe5022\_noiseReference\_Q**

- C Syntax** ViStatus hpe5022\_noiseReference\_Q(ViSession id, ViPReal64 noiseRef);
- Visual Basic Syntax** hpe5022\_noiseReference\_Q(ByVal id As Long, ByRef noiseRef As Double) As Long
- Description** This function returns the specified value of the noise reference.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - noiseRef
    - Description Returns the noise reference value.
    - Direction OUT
    - Unit Volt (rms)

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_noiseReference" on page 820

## hpe5022\_measureSnr

### C Syntax

ViStatus hpe5022\_measureSnr(ViSession id, ViInt16 ave);

### Visual Basic Syntax

hpe5022\_measureSnr(ByVal id As Long, ByVal ave As Integer) As Long

### Description

This function measures the signal and noise level, then calculates the SNR (Signal to Noise Ratio) and crest factor. The measurement sequence of this function are as follows:

1. Erase an entire track.
2. Move the head to the read offset position as specified by “hpe5022\_readTrackOffset”.
3. Set the input range to measure noise, the input range level is defined by “hpe5022\_noiseReference”.
4. Measure noise.
5. Resume the input range.
6. Move the head to the write offset position as specified by “hpe5022\_writeTrackOffset” function.
7. Write the selected data pattern as specified by the “hpe5022\_selectPattern” function.
8. Move the head to the read offset position as specified by “hpe5022\_readTrackOffset”.
9. Measure the TAA.
10. Repeat steps 1-8 as specified by average count.

The measurement result is returned by the “hpe5022\_snr\_Q” function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- ave
 

Description	Specifies the average count for measurement.
Direction	IN
Values	

Name	Value
hpe5022_SNR_COUN_MIN	1

Function Reference  
**SNR Measurement**

Name	Value
hpe5022_SNR_COUN_MAX	50

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'ave' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindant is turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

"hpe5022\_setupSnr" on page 825

"hpe5022\_snr\_Q" on page 827



## hpe5022\_setupSnr

**C Syntax** ViStatus hpe5022\_setupSnr(ViSession id, ViInt16 ave, ViPObject testHndl);

**Visual Basic Syntax** hpe5022\_setupSnr(ByVal id As Long, ByVal ave As Integer, ByRef testHndl As Long) As Long

**Description** This function sets the SNR measurement sequence.

This function assigns the SNR measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureSnr” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier given by this function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

- ave
 

Description	Specifies the average count for measurement.
Direction	IN
Values	

Name	Value
hpe5022_SNR_COUN_MIN	1
hpe5022_SNR_COUN_MAX	50

- testHndl
 

Description	Returns the test identifier. This identifier is used to execute SNR measurement by the “hpe5022_measure”function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.

Function Reference  
**SNR Measurement**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_PARAMETER	The parameter 'ave' is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_release_Setup" function.

**See Also**

"hpe5022\_measure" on page 387

"hpe5022\_releaseSetup" on page 390

"hpe5022\_measureSnr" on page 823

## hpe5022\_snr\_Q

### C Syntax

ViStatus hpe5022\_snr\_Q(ViSession id, ViPReal64 signal, ViPReal64 noise, ViPReal64 snr, ViPReal64 crest);

### Visual Basic Syntax

hpe5022\_snr\_Q(ByVal id As Long, ByRef signal As Double, ByRef noise As Double, ByRef snr As Double, ByRef crest As Double) As Long

### Description

This function returns the results of the measured SNR and crest factor. The returned parameters are signal, noise and crest factor. Crest factor is the ratio of the maximum voltage value of the noise to the peak to peak value of the TAA.

See chapter 5 in the Operation Manual for the definition of this parameter.

Each result is the mean value of the corresponding parameter of the “hpe5022\_snrData\_Q” and “hpe5022\_crestFactorData\_Q” functions.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- signal
 

Description	Returns the measured signal level.
Direction	OUT
Unit	Volt
- noise
 

Description	Returns the measured noise level.
Direction	OUT
Unit	Volt (rms)
- snr
 

Description	Returns the measured SNR level.
Direction	OUT
Unit	dB
- crest
 

Description	Returns the measured crest factor.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The SNR data is corrupt. Check if the measurement sequence is correct.

### See Also

“hpe5022\_snrData\_Q” on page 830

“hpe5022\_measureSnr” on page 823

“hpe5022\_setupSnr” on page 825

“hpe5022\_crestFactorData\_Q” on page 834

## hpe5022\_snrDataSize\_Q

### C Syntax

ViStatus hpe5022\_snrDataSize\_Q(ViSession id, ViPInt32 size);

### Visual Basic Syntax

hpe5022\_snrDataSize\_Q(ByVal id As Long, ByRef size As Long) As Long

### Description

This function returns the size of the SNR data as returned by the “hpe5022\_snrData\_Q” function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- size
 

Description	Returns the size of the SNR data.  The size is the same as the value of ‘ave’ specified by the “hpe5022_measureSnr” or “hpe5022_setupSnr” function if measurement is done properly.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The SNR data is corrupt. Check if the measurement sequence is correct.

### See Also

“hpe5022\_setupSnr” on page 825  
 “hpe5022\_snrData\_Q” on page 830  
 “hpe5022\_measureSnr”

## **hpe5022\_snrData\_Q**

### **C Syntax**

ViStatus hpe5022\_snrData\_Q(ViSession id, ViReal64 data[]);

### **Visual Basic Syntax**

hpe5022\_snrData\_Q(ByVal id As Long, ByRef data As Double) As Long

### **Description**

This function returns the measurement data of the SNR for each revolution.

When the 'ave' parameter in the "hpe5022\_measureSnr" or the "hpe5022\_setupSnr" function is set for more than one, this function will allow you to get the SNR data for each revolution. (If the 'ave' is set to 1, the output of this function will be the same as the "hpe5022\_snr\_Q" function.)

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- data
  - Description Returns the SNR data. The data size is returned by the "hpe5022\_snrDataSize\_Q" function.
  - Direction OUT
  - Unit dB

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The SNR data is corrupt. Check if the measurement sequence is correct.

### **See Also**

"hpe5022\_measureSnr" on page 823

"hpe5022\_setupSnr" on page 825

"hpe5022\_snrDataSize\_Q" on page 829

## hpe5022\_snrStatistic\_Q

**C Syntax** ViStatus hpe5022\_snrStatistic\_Q(ViSession id, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax** hpe5022\_snrStatistic\_Q(ByVal id As Long, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description** This function reports the statistics (mean, minimum, maximum and standard deviation) of the SNR measurement. The data returned by the “hpe5022\_snrData\_Q” function are used for the statistic analysis of this function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- mean
 

Description	Returns the mean value.
Direction	OUT
- min
 

Description	Returns the minimum value.
Direction	OUT
- max
 

Description	Returns the maximum value.
Direction	OUT
- stdDev
 

Description	Returns the standard deviation value.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.

Function Reference  
**SNR Measurement**

Error Code	Description
hpe5022_ERROR_DATA_CORRUPT	The SNR data is corrupt. Check if the measurement sequence is correct.

**See Also**

“hpe5022\_measureSnr” on page 823

“hpe5022\_setupSnr” on page 825

“hpe5022\_snrData\_Q” on page 830



## hpe5022\_crestFactorDataSize\_Q

**C Syntax** ViStatus hpe5022\_crestFactorDataSize\_Q(ViSession id, ViPInt32 size);

**Visual Basic Syntax** hpe5022\_crestFactorDataSize\_Q(ByVal id As Long, ByRef size As Long) As Long

**Description** This function returns the array size of crest factor data as returned by the “hpe5022\_crestFactorData\_Q” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- size
 

Description	Returns the size of the crest factor data.  The size will be the same as the value of ‘ave’ specified by the “hpe5022_measureSnr” or “hpe5022_setupSnr” function if measurement is done properly.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The crest factor data is corrupt. Check if the measurement sequence is correct.

**See Also** “hpe5022\_measureSnr” on page 823  
 “hpe5022\_setupSnr” on page 825  
 “hpe5022\_crestFactorData\_Q” on page 834

## hpe5022\_crestFactorData\_Q

### C Syntax

ViStatus hpe5022\_crestFactorData\_Q(ViSession id, ViReal64 data[]);

### Visual Basic Syntax

hpe5022\_crestFactorData\_QBy(Val id As Long, ByRef data As Double) As Long

### Description

This function returns the crest factor data of the measurement at each revolution.

When 'ave' parameter in the "hpe5022\_measureSnr" or the "hpe5022\_setupSnr" function is set for more than one, the function will allow you to get the crest factor data for each revolution. (If the 'ave' is set to 1, then the output of this function becomes the same as the "hpe5022\_snr\_Q" function.)

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- data
  - Description Returns the crest factor data. The data size is returned by the "hpe5022\_crestFactorDataSize\_Q" function.
  - Direction OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The crest factor data is corrupt. Check if the measurement sequence is correct.

### See Also

"hpe5022\_measureSnr" on page 823

"hpe5022\_setupSnr" on page 825

"hpe5022\_snr\_Q" on page 827

"hpe5022\_crestFactorDataSize\_Q" on page 833

## hpe5022\_crestFactorStatistic\_Q

**C Syntax** ViStatus hpe5022\_crestFactorStatistic\_Q(ViSession id, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax** hpe5022\_crestFactorStatistic\_Q(ByVal id As Long, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description** This function reports the statistics (mean, minimum, maximum and standard deviation) of the SNR (crest factor) measurement. The data returned by the “hpe5022\_crestFactorData\_Q” function are used for this statistic analysis.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- mean
 

Description	Returns the mean value of the measurement result. The returned value is the same as the corresponding values returned by the “hpe5022_snr_Q” function.
Direction	OUT
- min
 

Description	Returns the minimum value of measurement result.
Direction	OUT
- max
 

Description	Returns the maximum value of the measurement result.
Direction	OUT
- stdDev
 

Description	Returns the standard deviation value calculated from the measurement result.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**SNR Measurement**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The crest factor data is corrupt. Check if the measurement sequence is correct.

**See Also**

“hpe5022\_measureSnr” on page 823

“hpe5022\_setupSnr” on page 825

“hpe5022\_snr\_Q” on page 827

“hpe5022\_crestFactorData\_Q” on page 834

## Spectral SNR Measurement

This section describes the functions related with spectral SNR measurement. The spectral SNR measurement is measured by a spectrum analyzer.

### hpe5022\_spectralSnrFrequency

<b>C Syntax</b>	ViStatus hpe5022_spectralSnrFrequency(ViSession id, ViReal64 startFreq, ViReal64 stopFreq);
<b>VB Syntax</b>	hpe5022_spectralSnrFrequency(ByVal id As Long, ByVal startFreq As Double, ByVal stopFreq As Double) As Long
<b>Description</b>	This function specifies the starting and stopping frequencies of a spectrum analyzer for spectral SNR measurement.
<b>Parameters</b>	<ul style="list-style-type: none"> <li>id <ul style="list-style-type: none"> <li>Description Specifies the system identifier. This is given by the "hpe5022_init" function.</li> <li>Direction IN</li> </ul> </li> <li>startFreq <ul style="list-style-type: none"> <li>Description Specifies the starting frequency.</li> <li>Direction IN</li> <li>Unit Hz</li> <li>Preset Value Set to the minimum value of the frequency range.</li> <li>Values The upper and lower limit values are queryable by hpe5022_spectrumFrequencyRange_Q function.</li> </ul> </li> <li>stopFreq <ul style="list-style-type: none"> <li>Description Specifies the stopping frequency.</li> <li>Direction IN</li> <li>Unit Hz</li> <li>Preset Value Set to the maximum value of the frequency range.</li> <li>Values The upper and lower limit values are queryable by hpe5022_spectrumFrequencyRange_Q function.</li> </ul> </li> </ul>

Function Reference  
**Spectral SNR Measurement**

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'startFreq' or/and 'stopFreq' is out of range.

**See Also** "hpe5022\_spectralSnrFrequency\_Q" on page 839

## hpe5022\_spectralSnrFrequency\_Q

- C Syntax** ViStatus hpe5022\_spectralSnrFrequency\_Q(ViSession id, ViPReal64 startFreq, ViPReal64 stopFreq);
- VB Syntax** hpe5022\_spectralSnrFrequency\_Q(ByVal id As Long, ByRef startFreq As Double, ByRef stopFreq As Double) As Long
- Description** This function returns the starting and stopping frequencies of a spectrum analyzer for the spectral SNR measurement.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- startFreq
 

Description	Returns the starting frequency.
Direction	OUT
Unit	Hz
- stopFreq
 

Description	Returns the stopping frequency.
Direction	OUT
Unit	Hz

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_spectralSnrFrequency" on page 837

**Spectral SNR Measurement****hpe5022\_spectralSnrBandWidth****C Syntax**

```
ViStatus hpe5022_spectralSnrBandWidth(ViSession id, ViReal64 rbw, ViReal64
vbw);
```

**VB Syntax**

```
hpe5022_spectralSnrBandWidth(ByVal id As Long, ByVal rbw As Double, ByVal
vbw As Double) As Long
```

**Description**

This function specifies the resolution band width and video band width of the spectrum analyzer for the spectral SNR measurement. Resolution band width allows you to improve the resolution of frequency, i.e, selectivity of signal, and also to reduce the display noise. On the other hand, video band width reduces the noise variations and makes the signal clearly visible.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- rbw

Description Specifies the resolution band width. Narrowing this, will widen the dynamic range. Widening this, makes measurement speed faster. This can be set to  $3 \times 10^3$ ,  $10 \times 10^3$ ,  $30 \times 10^3$ ,  $100 \times 10^3$ ,  $300 \times 10^3$ ,  $1 \times 10^6$ ,  $3 \times 10^6$  and  $5 \times 10^6$ . The maximum rbw is  $1 \times 10^6$  when SA module is 4395A or E5040A, and  $5 \times 10^6$  when 3GHz Spectrum Analyzer is used. When the value other than these values is set, the closest and lower value is set automatically.

Direction IN

Unit Hz

Preset Value  $10 \times 10^3$

Values

Name	Value
hpe5022_SPEC_BW_MIN	$3 \times 10^3$
hpe5022_SPEC_BW_MAX	$5 \times 10^6$

- vbw

Description Specifies the video band width. When 4395A or 3GHz Spectrum analyzer is used, this value is clipped to a largest (and not greater than it) value within the range of 'rbw'/300 - 'rbw' and among 10, 30, 100, 300,  $1 \times 10^3$ ,  $3 \times 10^3$ ,  $10 \times 10^3$ ,



$30 \times 10^3$ ,  $100 \times 10^3$ ,  $300 \times 10^3$ ,  $1 \times 10^6$ , and  $3 \times 10^6$ . The maximum vbw is  $1 \times 10^6$  when SA module is 4395A, and  $3 \times 10^6$  when 3GHz Spectrum analyzer is used, respectively. In case of E5040A, this value is ignored and set automatically at the same value as the rbw.

Narrowing this, will reduce the noise variation. Widening this, will speed up measurement. The value of 1/1, 1/3, 1/30, 1/100 or 1/300 of the resolution band width can be set as a video band width. When other value is entered, the value is set automatically to the closest and lower value of the setting.

Direction IN  
Unit Hz  
Preset Value  $10 \times 10^3$   
Values

Name	Value
hpe5022_SPEC_VBW_MIN	10
hpe5022_SPEC_VBW_MAX	$3 \times 10^6$

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'rbw' and/or 'vbw' is out of range.

### See Also

“hpe5022\_spectralSnrBandWidth\_Q” on page 842

## **hpe5022\_spectralSnrBandWidth\_Q**

- C Syntax** ViStatus hpe5022\_SpectralSnrBandWidth\_Q(ViSession id, ViPReal64 rbw, ViPReal64 vbw);
- VB Syntax** hpe5022\_SpectralSnrBandWidth\_Q(ByVal id As Long, ByRef rbw As Double, ByRef vbw As Double) As Long
- Description** This function returns the resolution band width and the video band width of the spectrum analyzer for the spectral SNR measurement.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- rbw
  - Description Returns the resolution band width.
  - Direction OUT
  - Unit Hz
- vbw
  - Description Returns the video band width.
  - Direction OUT
  - Unit Hz

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_spectralSnrBandWidth" on page 840

## hpe5022\_measureSpectralSnr

### C Syntax

ViStatus hpe5022\_measureSpectralSnr(ViSession id, ViInt16 seqType);

### Visual Basic Syntax

hpe5022\_measureSpectralSnr(ByVal id As Long, ByVal seqType As Integer) As Long

### Description

This function measures the spectral SNR according to the specified sequence type. There are three sequence types: 1) erase, write data, then measure 2) no erase, write data, then measure 3) measure only. The sequence is as follows:

(For 4395A and E5040A Spectrum Analyzer.)

1. Move the head to the write track offset position specified by the “hpe5022\_writeTrackOffset” function.
2. If seqType is set to “hpe5022\_SEQ\_ER\_WR\_M”, erase an entire track.
3. If seqType is set to “hpe5022\_SEQ\_ER\_WR\_M” or “hpe5022\_SEQ\_WR\_M”, write data pattern specified by the “hpe5022\_selectPattern” function.
4. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset” function.
5. Measure noise level. (Same as follows)
  - a. “hpe5022\_measureSpectrum” (seqType: hpe5022\_SEQ\_M, detMode: hpe5022\_SPEC\_DET\_SAMP)
  - b. The data returned from “hpe5022\_spectrumNoise\_Q” becomes the noise level.
6. Measure the peak signal level.(Same as follows)
  - a. “hpe5022\_measureSpectrum” (seqType: hpe5022\_SEQ\_M, detMode: “hpe5022\_SPEC\_DET\_POS\_PEAK”.
  - b. The maximum data returned from “hpe5022\_spectrumDataAll\_Q” becomes the peak signal level.

(For 3GHz Spectrum Analyzer.)

1. Move the head to the write track offset position specified by the “hpe5022\_writeTrackOffset” function.
2. If seqType is set to “hpe5022\_SEQ\_ER\_WR\_M”, the full-erase is performed.
3. If seqType is set to “hpe5022\_SEQ\_ER\_WR\_M” or “hpe5022\_SEQ\_WR\_M”, write data on the nearly full track with the data pattern specified by the “hpe5022\_selectPattern” function.
4. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset” function.
5. Measure the peak signal level. (Same as follows)
  - a. “hpe5022\_measureSpectrum” (seqType: hpe5022\_SEQ\_M, detMode:

**Spectral SNR Measurement**

hpe5022\_SPEC\_DET\_POST\_PEAK) VBW is automatically set to 30kHz if the specified RBW is 100kHz or 300kHz and VBW > 30kHz, and set to 1MHz if the specified RBW is 1MHz and VBW > 300kHz, respectively.)

- b. The amount of the amplitude levels at fundamental and harmonic frequencies become the peak signal level.
6. Measure noise level. (Same as follows)
    - a. “hpe5022\_measureSpectrum” (seqType: hpe5022\_SEQ\_M, detMode: “hpe5022\_SPEC\_DET\_SAMP”. RBW and VBW are set to the specified values by the “hpe5022\_spectralSnrBandWidth()” function.
    - b. The data returned from “hpe5022\_spectrumDataAll\_Q” becomes the peak noise level.

The “hpe5022\_spectralSnr\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Specifies the type of measurement sequence.
Direction	IN
Values	

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Erase->Write->Measurement
hpe5022_SEQ_WR_M	1	Write->Measurement
hpe5022_SEQ_M	2	Measurement

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Error Code	Description
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand is turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.

**See Also**

"hpe5022\_readTrackOffset" on page 219

"hpe5022\_writeTrackOffset" on page 222

"hpe5022\_spectralSnr\_Q" on page 848

"hpe5022\_driveState" on page 209

## hpe5022\_setupSpectralSnr

**C Syntax** ViStatus hpe5022\_setupSpectralSnr(ViSession id, ViInt16 seqType, ViPObject testHndl);

**Visual Basic Syntax** hpe5022\_setupSpectralSnr(ByVal id As Long, ByVal seqType As Integer, ByVal testHndl As long) As Long

**Description** This function assigns the spectral SNR measurement sequence to the specified test identifier. See the “hpe5022\_measureSpectralSnr” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function

The “hpe5022\_spectralSnr\_Q” function returns the measurement result.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Specifies the type of measurement sequence.
Direction	IN
Values	Same as the ‘seqType’ in the “hpe5022_measureSpectralSnr” function.
- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the spectrum measurement by the “hpe5022_measure” function.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘seqType’ is out of range.

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_measureSpectralSnr” on page 843

“hpe5022\_spectralSnr\_Q” on page 848

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

**Spectral SNR Measurement****hpe5022\_spectralSnr\_Q****C Syntax**

```
ViStatus hpe5022_spectralSnr_Q(ViSession id, ViPReal64 signal, ViPReal64
noise, ViPReal64 snr);
```

**Visual Basic Syntax**

```
hpe5022_spectralSnr_Q(ByVal id As Long, ByRef signal As Double, ByRef noise
As Double, ByRef snr As Double) As Long
```

**Description**

This function returns the spectral SNR measurement results. The signal level, the noise level, and the SNR are returned.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- signal
 

Description	Returns the measured signal level.
Direction	OUT
Unit	rms Volt
- noise
 

Description	Returns the measured noise level.
Direction	OUT
Unit	rms Volt
- snr
 

Description	Returns the measured SNR.
Direction	OUT
Unit	dB

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The spectrum data is corrupt. Check if your measurement sequence is correct.



**See Also**

“hpe5022\_measureSpectralSnr” on page 843

“hpe5022\_setupSpectralSnr” on page 846

## Spectrum Measurement

This section describes the functions related with spectrum measurement. The spectrum measurement measure a power level using a spectrum analyzer.

### **hpe5022\_spectrumFrequency**

<b>C Syntax</b>	<code>ViStatus hpe5022_spectrumFrequency(ViSession id, ViReal64 startFreq, ViReal64 stopFreq);</code>																								
<b>VB Syntax</b>	<code>hpe5022_spectrumFrequency(ByVal id As Long, ByVal startFreq As Double, ByVal stopFreq As Double) As Long</code>																								
<b>Description</b>	This function controls the starting and stopping frequencies of a spectrum analyzer for spectrum measurement.																								
<b>Parameters</b>	<ul style="list-style-type: none"><li>• <b>id</b><table><tr><td>Description</td><td>Specifies the system identifier. This is given by the "hpe5022_init" function.</td></tr><tr><td>Direction</td><td>IN</td></tr></table></li><li>• <b>startFreq</b><table><tr><td>Description</td><td>Specifies the starting frequency.</td></tr><tr><td>Direction</td><td>IN</td></tr><tr><td>Unit</td><td>Hz</td></tr><tr><td>Preset Value</td><td>Set to the minimum value of the frequency range.</td></tr><tr><td>Values</td><td>The upper and lower limit values are queryable by hpe5022_spectrumFrequencyRange_Q function.</td></tr></table></li><li>• <b>stopFreq</b><table><tr><td>Description</td><td>Specifies the stopping frequency.</td></tr><tr><td>Direction</td><td>IN</td></tr><tr><td>Unit</td><td>Hz</td></tr><tr><td>Preset Value</td><td>Set to the maximum value of the frequency range.</td></tr><tr><td>Values</td><td>The upper and lower limit values are queryable by hpe5022_spectrumFrequencyRange_Q function.</td></tr></table></li></ul>	Description	Specifies the system identifier. This is given by the "hpe5022_init" function.	Direction	IN	Description	Specifies the starting frequency.	Direction	IN	Unit	Hz	Preset Value	Set to the minimum value of the frequency range.	Values	The upper and lower limit values are queryable by hpe5022_spectrumFrequencyRange_Q function.	Description	Specifies the stopping frequency.	Direction	IN	Unit	Hz	Preset Value	Set to the maximum value of the frequency range.	Values	The upper and lower limit values are queryable by hpe5022_spectrumFrequencyRange_Q function.
Description	Specifies the system identifier. This is given by the "hpe5022_init" function.																								
Direction	IN																								
Description	Specifies the starting frequency.																								
Direction	IN																								
Unit	Hz																								
Preset Value	Set to the minimum value of the frequency range.																								
Values	The upper and lower limit values are queryable by hpe5022_spectrumFrequencyRange_Q function.																								
Description	Specifies the stopping frequency.																								
Direction	IN																								
Unit	Hz																								
Preset Value	Set to the maximum value of the frequency range.																								
Values	The upper and lower limit values are queryable by hpe5022_spectrumFrequencyRange_Q function.																								

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'startFreq' or/and 'stopFreq' is out of range.

**See Also**

“hpe5022\_spectrumFrequency\_Q” on page 852

## **hpe5022\_spectrumFrequency\_Q**

- C Syntax** ViStatus hpe5022\_spectrumFrequency\_Q(ViSession id, ViPReal64 startFreq, ViPReal64 stopFreq);
- VB Syntax** hpe5022\_spectrumFrequency\_Q(ByVal id As Long, ByRef startFreq As Double, ByRef stopFreq As Double) As Long
- Description** This function returns the starting and stopping frequencies of a spectrum analyzer for spectrum measurement.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- startFreq
  - Description Returns the starting frequency.
  - Direction OUT
  - Unit Hz
- stopFreq
  - Description Returns the stopping frequency.
  - Direction OUT
  - Unit Hz

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_spectrumFrequency" on page 850

## hpe5022\_spectrumFrequencyRange\_Q

- C Syntax** ViStatus \_ VI\_FUNC hpe5022\_spectrumFrequencyRange\_Q (ViSession id, ViPReal64 freqMin, ViPReal64 freqMax);
- VB Syntax** Declare Function \_hpe5022\_spectrumFrequencyRange\_Q Lib "hpe5022\_32.dll" ( \_ ByVal id As Long, \_ ByRef freqMin As Double, \_ ByRef freqMax As Double \_ ) As Long
- Description** This function queries the frequency range of a spectrum analyzer for spectrum measurement.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - freqMin Returns the minimum frequency in Hertz.
  - freqMax Returns the maximum frequency in Hertz.

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

## **hpe5022\_spectrumBandWidth**

- C Syntax** ViStatus hpe5022\_spectrumBandWidth(ViSession id, ViReal64 rbw, ViReal64 vbw);
- VB Syntax** hpe5022\_spectrumBandWidth(ByVal id As Long, ByVal rbw As Double, ByVal vbw As Double) As Long
- Description** This function specifies the resolution band width and the video band width of the spectrum analyzer for the spectrum measurement. Resolution band width allows you to improve resolution of frequency, in other words, selectivity of signal, and also to reduce the display noise. On the other hand, video band width reduces the noise variations and makes the signal clearly visible.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  
  - rbw
 

Description	Specifies the resolution band width. Narrowing this, will widen the dynamic range. Widening this, will make a measurement speed fast. This can be set to $3 \times 10^3$ , $10 \times 10^3$ , $30 \times 10^3$ , $100 \times 10^3$ , $300 \times 10^3$ , $1 \times 10^6$ , $3 \times 10^6$ and $5 \times 10^6$ . The maximum rbw is $1 \times 10^6$ when SA module is 4395A or E5040A, and $5 \times 10^6$ when 3GHz Spectrum Analyzer is used. When rbw is set other than these values, then rbw is set to the closest and lower value from the above selection.
Direction	IN
Unit	Hz
Preset Value	$10 \times 10^3$
Values	

Name	Value
hpe5022_SPEC_BW_MIN	$3 \times 10^3$
hpe5022_SPEC_BW_MAX	$5 \times 10^6$
  
  - vbw
 

Description	Specifies the video band width. When 4395A or 3GHz Spectrum analyzer is used, this value is clipped to a largest (and not greater than it) value within the range of 'rbw'/300 - 'rbw' and among 10, 30, 100, 300, $1 \times 10^3$ , $3 \times 10^3$ , $10 \times 10^3$ ,
-------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

$30 \times 10^3$ ,  $100 \times 10^3$ ,  $300 \times 10^3$ ,  $1 \times 10^6$ , and  $3 \times 10^6$ .

The maximum vbw is 1e6 when SA module is 4395A, and  $3 \times 10^6$  when 3GHz Spectrum analyzer is used, respectively. In case of E5040A, this value is ignored and set automatically at the same value as the rbw.

Narrowing this, will reduce noise variation. Widening this, will speed up the measurement. The values 1/1, 1/3, 1/30, 1/100 or 1/300 of the resolution band width can be set as video band width. When other values are used, the value is set automatically at nearest and lower value of vbw.

Direction IN  
Unit Hz  
Preset Value  $10 \times 10^3$   
Values

Name	Value
hpe5022_SPEC_VBW_MIN	10
hpe5022_SPEC_VBW_MAX	$3 \times 10^6$

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'rbw' and/or 'vbw' is out of range.

### See Also

"hpe5022\_spectrumBandWidth\_Q" on page 856

## **hpe5022\_spectrumBandWidth\_Q**

**C Syntax** ViStatus hpe5022\_spectrumBandWidth\_Q(ViSession id, ViPReal64 rbw, ViPReal64 vbw);

**VB Syntax** hpe5022\_spectrumBandWidth\_Q(ByVal id As Long, ByRef rbw As Double, ByRef vbw As Double) As Long

**Description** This function returns the resolution band width and the video band width of the spectrum analyzer for spectrum measurement.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- rbw
  - Description Returns the resolution band width.
  - Direction OUT
  - Unit Hz
- vbw
  - Description Returns the video band width.
  - Direction OUT
  - Unit Hz

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_spectrumBandWidth" on page 854



## hpe5022\_measureSpectrum

**C Syntax** ViStatus hpe5022\_measureSpectrum(ViSession id, ViInt16 seqType, ViInt16 detMode);

**Visual Basic Syntax** hpe5022\_measureSpectrum(ByVal id As Long, ByVal seqType As Integer, ByVal detMode As Integer) As Long

**Description** This function measures the power level according to the specified sequence type. There are three sequence types: 1) erase, write data, then measure 2) no erase, write data, then measure 3) measure only. The sequence is as follows:

1. Move the head to the write track offset position specified by the “hpe5022\_writeTrackOffset” function.  
(Spectrum Analyzer is 4395A or E5040A)
- 2a. If seqType is set to “hpe5022\_SEQ\_ER\_WR\_M”, erase an entire track.
- 3a. If seqType is set to “hpe5022\_SEQ\_ER\_WR\_M” or “hpe5022\_SEQ\_WR\_M”, write data pattern specified by the “hpe5022\_selectPattern” function.  
(3GHz Spectrum Analyzer)
- 2b. If seqType is set to “hpe5022\_SEQ\_ER\_WR\_M”, the full-erase is performed.
- 3b. If seqType is set to “hpe5022\_SEQ\_ER\_WR\_M” or “hpe5022\_SEQ\_WR\_M”, write data on the nearly full track with the data pattern specified by the “hpe5022\_selectPattern” function.  
(3GHz Spectrum Analyzer)
4. Move the head to read track offset position specified by the “hpe5022\_readTrackOffset” function.
5. Measure the power level using a spectrum analyzer.

The “hpe5022\_spectrumData\_Q” function returns the measurement result.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Specifies the type of measurement sequence.
Direction	IN
Values	

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Erase->Write->Measurement

Function Reference  
**Spectrum Measurement**

Name	Value	Description
hpe5022_SEQ_WR_M	1	Write->Measurement
hpe5022_SEQ_M	2	Measurement

- detMode

**Description** Specifies the detection mode of the spectrum analyzer. Select sample mode when the noise is measured. Select positive peak mode when the signal is measured.

**Direction** IN

**Values**

Name	Value	Description
hpe5022_SPEC_DET_SAMP	1	Sample Mode
hpe5022_SPEC_DET_POS_PEAK	2	Positive Peak Mode

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' and/or 'detMode' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand is turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.

### See Also

- “hpe5022\_readTrackOffset” on page 219
- “hpe5022\_writeTrackOffset” on page 222
- “hpe5022\_spectrumData\_Q” on page 861
- “hpe5022\_spectrumDataAll\_Q” on page 863
- “hpe5022\_driveState” on page 209

## hpe5022\_setupSpectrum

### C Syntax

```
ViStatus hpe5022_setupSpectrum(ViSession id, ViInt16 seqType, ViInt16
detMode, ViPObject testHndl);
```

### Visual Basic Syntax

```
hpe5022_setupSpectrum(ByVal id As Long, ByVal seqType As Integer, ByVal
detModeAs Integer, ByVal testHndl As long) As Long
```

### Description

This function assigns the spectrum measurement sequence to the specified test identifier. See the “hpe5022\_measureSpectrum” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function

The “hpe5022\_spectrumData\_Q” function returns the measurement result.

### Parameters

- id

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType

Description	Specifies the type of measurement sequence.
Direction	IN
Values	Same as the ‘seqType’ in the “hpe5022_measureSpectrum” function.
- detMode

Description	Specifies the detection mode of the spectrum analyzer. Select sample mode when the noise is measured. Select positive peak mode when the signal is measured.
Direction	IN
Values	Same as the ‘detMode’ in the “hpe5022_measureSpectrum” function.
- testHndl

Description	Returns the test identifier. This identifier is used to execute the spectrum measurement by the “hpe5022_measure” function.
Direction	OUT

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' and/or 'detMode' is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

## See Also

"hpe5022\_measureSpectrum" on page 857

"hpe5022\_spectrumData\_Q" on page 861

"hpe5022\_spectrumDataAll\_Q" on page 863

"hpe5022\_measure" on page 387

"hpe5022\_releaseSetup" on page 390

## hpe5022\_spectrumData\_Q

**C Syntax** ViStatus hpe5022\_spectrumData\_Q(ViSession id, ViReal64 freq, ViPReal64 data);

**Visual Basic Syntax** hpe5022\_spectrumData\_Q(ByVal id As Long, ByVal freq As Double, ByRef data As Double) As Long

**Description** This function returns a power level for specified frequency. As the spectrum analyzer measures only at the measurement frequencies returned by the “hpe5022\_spectrumDataAll\_Q” function, the returned data is an interpolated value from the measurement result returned by the “hpe5022\_spectrumDataAll\_Q” function.

**Parameters**

- id**

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- freq**

Description Specifies the center frequency.

Direction IN

Unit Hz

Values

Name	Value
hpe5022_SPEC_FREQ_MIN	0
hpe5022_SPEC_FREQ_MAX	500×10 <sup>6</sup>

- data**

Description Returns the power level at specified frequency.

Direction OUT

Unit dBm

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Function Reference  
**Spectrum Measurement**

Error Code	Description
hpe5022_ERROR_INV_PARAMETER	The parameter 'freq' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The spectrum data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureSpectrum” on page 857

“hpe5022\_setupSpectrum” on page 859

“hpe5022\_spectrumDataAll\_Q” on page 863

## hpe5022\_spectrumDataAll\_Q

- C Syntax** ViStatus hpe5022\_spectrumDataAll\_Q (ViSession id, ViInt16 points, ViReal64 freq[], ViReal64 data[]);
- Visual Basic Syntax** hpe5022\_spectrumDataAll\_Q(ByVal id As Long, ByRef points As Integer, ByRef freq As Double, ByRef data As Double) As Long
- Description** This function returns data of power level for all measurement points.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - points
 

Description	Returns the number of measurement points.
Direction	OUT
  - freq
 

Description	Returns the data array of the frequency. The array size is same as the number of the 'point' parameter. The frequency points determined from the start, the stop frequencies and the resolution band width.
Direction	OUT
Unit	Hz
  - data
 

Description	Returns the data array of the power level. The array size is same as the 'point' parameter.
Direction	OUT
Unit	dBm

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Function Reference  
**Spectrum Measurement**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_DATA_CORRUPT	The spectrum measurement data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureSpectrum” on page 857

“hpe5022\_setupSpectrum” on page 859

“hpe5022\_spectrumData\_Q” on page 861




## hpe5022\_spectrumNoise\_Q

**C Syntax** hpe5022\_spectrumNoise\_Q (ViSession id, ViReal64 freqLow, ViReal64 freqHigh, ViPReal64 noise);

**Visual Basic Syntax** hpe5022\_spectrumNoise\_Q(ByVal id As Long, ByVal freqLow As Double, ByVal freqHigh As Double, ByRef noise As Double) As Long

**Description** This function returns the calculated noise level from spectrum data. The portion of signal peak is removed and noise level is calculated.

**Figure 3-32 Noise Level Measurement**

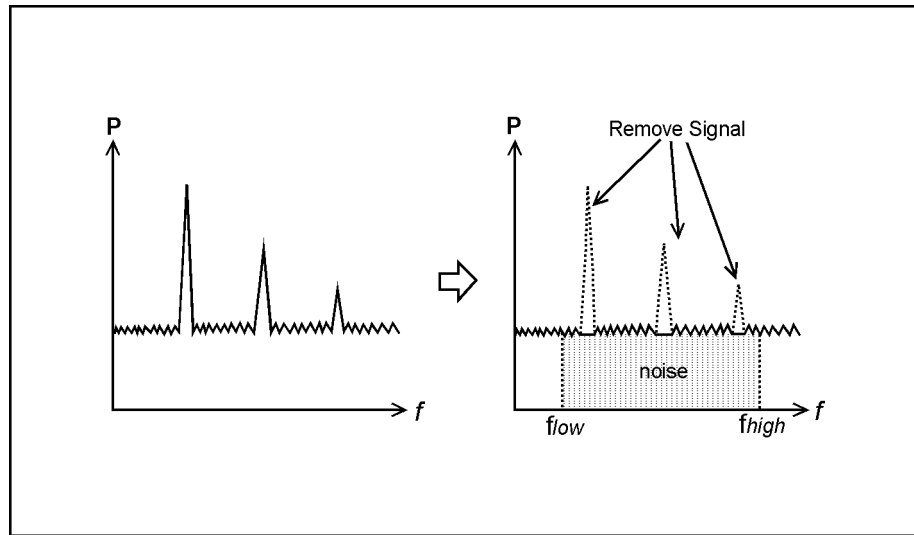

e5022ape03023

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- freqLow
  - Description Specifies the low integration range of frequency.
  - Direction IN
  - Unit Hz
  - Values

Name	Value
hpe5022_SPEC_FREQ_MIN	0

Function Reference  
**Spectrum Measurement**

Name	Value
hpe5022_SPEC_FREQ_MAX	500×10 <sup>6</sup>

- freqHigh

Description Specifies the high integration range of frequency.

Direction IN

Unit Hz

Values

Name	Value
hpe5022_SPEC_FREQ_MIN	0
hpe5022_SPEC_FREQ_MAX	500×10 <sup>6</sup>

- noise

Description Returns the noise level.

Direction OUT

Unit rms Volt

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'freqLow' or/and 'freqHigh' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The spectrum measurement data is corrupt. Check if your measurement sequence is correct.

### See Also

“hpe5022\_measureSpectrum” on page 857

“hpe5022\_setupSpectrum” on page 859

“hpe5022\_spectrumDataAll\_Q” on page 863

## Popcorn Noise Measurement Function (Sampling Method)

This section describes the functions related with popcorn noise measurement using E5038A parametric module. The popcorn noise is monitored by the voltage at each 5μsecond.

### hpe5022\_popcornNoiseConfig

**C Syntax**

ViStatushpe5022\_popcornNoiseConfig(ViSession id, ViReal64 threshold, ViReal64 wrTime, ViReal64 delay, ViReal 64 rdTime);

**Visual Basic Syntax**

hpe5022\_popcornNoiseConfig(ByVal id As Long, ByVal threshold As Double, ByVal wrTime As Double, ByVal delay As Double, By Val rdTime As Double) As Long

**Description**

This function controls the configuration of popcorn noise test measured by E5038A/B.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- threshold
  - Description Specifies the threshold level of the popcorn noise. Popcorn noise is counted when the input signal or read-back signal exceeds this level.
  - Direction IN
  - Unit Volt
  - Preset Value  $100 \times 10^{-6}$

Values

Name	Value
hpe5022_POPCORN_THR_MIN	0
hpe5022_POPCORN_THR_MAX	$100 \times 10^{-3}$

- wrTime
  - Description Specifies the time to write.
  - Direction IN

**Popcorn Noise Measurement Function (Sampling Method)**

Unit Second

Preset Value hpe5022\_POPCORN\_WRIT\_TIME\_MIN( $10 \times 10^{-6}$ )

Values

Name	Value
hpe5022_POPCORN_WRIT_TIME_MIN	$10 \times 10^{-6}$
hpe5022_POPCORN_WRIT_TIME_MAX	$10 \times 10^{-3}$

## • delay

Description Specifies the delay time. Delay time is defined as the time distance between write and read operation.

Direction IN

Unit Second

Preset Value 0 (hpe5022\_POPCORN\_DEL\_MIN)

Values

Name	Value
hpe5022_POPCORN_DEL_MIN	0
hpe5022_POPCORN_DEL_MAX	$10 \times 10^{-3}$

## • rdTime

Description Specifies the read time.

Direction IN

Unit Second

Preset Value 0 (hpe5022\_POPCORN\_READ\_TIME\_MIN)

Values

Name	Value
hpe5022_POPCORN_READ_TIME_MIN	$1 \times 10^{-6}$
hpe5022_POPCORN_READ_TIME_MAX	$10 \times 10^{-3}$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

**Popcorn Noise Measurement Function (Sampling Method)**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'threshold', 'wrTime', 'delay' and/or 'rdTime' is out of range.

**See Also**

“hpe5022\_measurePopcornNoise” on page 879

**Popcorn Noise Measurement Function (Sampling Method)****hpe5022\_popcornNoiseConfig\_Q****C Syntax**

```
ViStatus hpe5022_popcornNoiseConfig_Q(ViSession id, ViPReal64 threshold,
ViPReal64 wrTime, ViPReal64 delay, ViPReal64 rdTime);
```

**Visual Basic Syntax**

```
hpe5022_popcornNoiseConfig_Q(ByVal id As Long, ByRef threshold As Double,
ByRef wrTime As Double, ByRef delay As Double, ByRef rdTime As Double) As
Long
```

**Description**

This function returns the specified configuration of the popcorn noise test.

**Parameters**

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **threshold**

Description	Returns the threshold level of the popcorn noise. Popcorn noise is counted when the input signal exceeds this level.
Direction	OUT
Unit	Volt
- **wrTime**

Description	Returns the time to write.
Direction	OUT
Unit	Second
- **delay**

Description	Returns the delay time between write and read operation.
Direction	OUT
Unit	Second
- **rdTime**

Description	Returns the read time.
Direction	OUT
Unit	Second

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

**Popcorn Noise Measurement Function (Sampling Method)**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

“hpe5022\_popcornNoiseConfig” on page 867

**Popcorn Noise Measurement Function (Sampling Method)****hpe5022\_popcornNoiseWriteModeConfig****C Syntax**

```
ViStatus hpe5022_popcornNoiseConfig(ViSession id, ViInt16 writeMode);
```

**Visual Basic Syntax**

```
hpe5022_popcornNoiseConfig(ByVal id As Long, ByVal writeMode As Integer) As Long
```

**Description**

This function controls the write current direction at the beginning of write operation.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- writeMode

**Description** Specifies the write current direction at the beginning of write operation.

**Direction** IN


**Values**

<b>Name</b>	<b>Value</b>	<b>Description</b>
hpe5022_WRIT_DATA_POL_FIXED	0	The write current direction at the beginning of each write operation is always the same.
hpe5022_WRIT_DATA_POL_CONTINUOUS	1	The write current direction at the beginning of write operation is the same as the last current direction of the previous write operation.



## Popcorn Noise Measurement Function (Sampling Method)

Figure 3-33 Write Mode

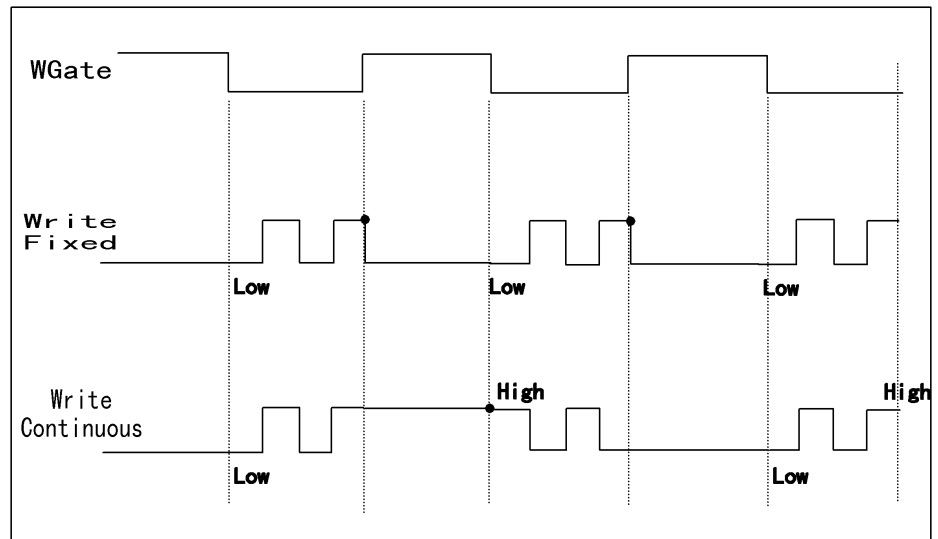

When [Write Mode] is set to “fixed”, the write current direction at the beginning of each write operation is always the same. On the other hand, when [Write Mode] is set to “continuous” the write current direction is the same as the last current direction of the previous write operation. Each time the write current alternates it allows you to check the polarity of the output pulse at the end of the previous write. You must set the repetitive period of the data pattern T to 1T, 2T, 4T and 8T due to the system’s internal constraints. If you use other repetitive periods of the data pattern, E5022A/B system can not guarantee the change of write current polarity. This function makes it possible for popcorn noise measurement (i.e. failcount) to achieve an acceptable level of TAA under similar usage of the drive. Before this function was introduced, the write current direction always starts at a constant direction, thus you can only observe one side of the output.

## Return Values

Completion Code	Description
VL_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘writeMode’ is out of range.
hpe5022_ERROR_NSUP_CONF	The installed head amplifier has no capability to control the write current direction.

Function Reference

**Popcorn Noise Measurement Function (Sampling Method)**

**See Also**

“hpe5022\_popcornNoiseWriteModeConfig\_Q” on page 875

**hpe5022\_popcornNoiseWriteModeConfig\_Q**

- C Syntax** ViStatushpe5022\_popcornNoiseWriteModeConfig\_Q(ViSession id, ViPInt16 writeMode);
- Visual Basic Syntax** hpe5022\_popcornNoiseWriteModeConfig\_Q(ByVal id As Long, ByRef writeMode As Integer) As Long
- Description** This function returns the specified write current direction at the beginning of write operation.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - writeMode
 

Description	Returns the specified write current direction at the beginning of write operation.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_popcornNoiseWriteModeConfig" on page 872

**Popcorn Noise Measurement Function (Sampling Method)****hpe5022\_popcornNoiseWritePatternConfig****C Syntax**

```
ViStatus hpe5022_popcornNoiseWritePatternConfig(ViSession id, ViInt16
writePat);
```

**Visual Basic Syntax**

```
hpe5022_popcornNoiseWritePatternConfig(ByVal id As Long, ByVal writePat As
Integer) As Long
```

**Description**

This function selects the data pattern for the write excitation. This allows you to select the different data patterns for write excitation from the standard data pattern independently. This also allows you to select the erase patterns as a write pattern..

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- writePat

**Description** Specifies the data pattern of the write. When this parameter is set to hpe5022\_PAT\_DEFAULT, write data pattern is the same as the pattern specified by "hpe5022\_selectPattern" function.

**Direction** IN

**Preset value** hpe5022\_PAT\_DEFAULT

**Values**

Name	Value	Description
hpe5022_PAT_DEFAULT	-1	Default pattern
hpe5022_PAT_HF	0	HF pattern
hpe5022_PAT_LF	1	LF pattern
hpe5022_PAT_ISO	2	Isolated pulse pattern
hpe5022_PAT_PRBS	3	Pseudo random pattern
hpe5022_PAT_REP	4	Repetitive pattern
hpe5022_PAT_NLTS_5TH	5	NLTS 5th pattern
hpe5022_PAT_OWHF	6	Overwrite HF pattern
hpe5022_PAT_OWLF	7	Overwrite LF pattern
hpe5022_PAT_REP_2	8	Repetition Pattern2
hpe5022_PAT_REP_3	9	Repetition Pattern3
hpe5022_PAT_REP_4	10	Repetition Pattern4

**Popcorn Noise Measurement Function (Sampling Method)**

Name	Value	Description
hpe5022_PAT_USER	20	User-defined Pattern
hpe5022_PAT_USER_2	21	User-defined Pattern2
hpe5022_PAT_USER_3	22	User-defined Pattern3
hpe5022_PAT_USER_4	23	User-defined Pattern4
hpe5022_PAT_ERASE	101	Default Erase Pattern selected by the “hpe5022_eraseType” function
hpe5022_PAT_ERASE_DC_NEG	102	DC- Erase Pattern
hpe5022_PAT_ERASE_DC_POS	103	DC+ Erase Pattern
hpe5022_PAT_ERASE_AC	104	AC Erase Pattern

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘writePat’ is out of range.

**See Also**

“hpe5022\_popcornNoiseWritePatternConfig\_Q” on page 878

“hpe5022\_selectPattern” on page 119

**Popcorn Noise Measurement Function (Sampling Method)****hpe5022\_popcornNoiseWritePatternConfig\_Q****C Syntax**

```
ViStatus hpe5022_popcornNoiseWritePatternConfig_Q(ViSession id, ViPInt16
writePat);
```

**Visual Basic Syntax**

```
hpe5022_popcornNoiseWritePatternConfig_Q(ByVal id As Long, ByRef writePat
As Integer) As Long
```

**Description**

This function returns the data pattern of the write sequence.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- writePat
 

Description	Returns the data pattern of the write. When this parameter is set to hpe5022_PAT_DEFAULT, write data pattern is the same as the pattern specified by "hpe5022_selectPattern" function.
Direction	OUT
Values	Same as the 'writePat' in the "hpe5022_popcornNoiseWritePatternConfig" function.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also**

"hpe5022\_popcornNoiseWritePatternConfig" on page 876

## Popcorn Noise Measurement Function (Sampling Method)

**hpe5022\_measurePopcornNoise****C Syntax**

```
ViStatus hpe5022_measurePopcornNoise(ViSession id, ViInt32 counts);
```

**Visual Basic Syntax**

```
hpe5022_measurePopcornNoise(ByVal id As Long, ByVal counts As Long) As Long
```

**Description**

This function measures the popcorn noise. This function operates when the head unloads from the media after write. After the delay time has elapsed it then measures the head noise. When this function is executed, the following sequence are performed.

The sequence of this function are as follows:

1. Write the data during wrTime. (wrTime is specified by "hpe5022\_popcornNoiseConfig").
2. Wait for the delay time to elapse. (delay is specified by "hpe5022\_popcornNoiseConfig").
3. Measure popcorn noise during the read time. (rdTime is specified by "hpe5022\_popcornNoiseConfig").
4. Repeat steps 1-3, for a specified segment number of counts.

**Parameters**

- **id**  
 Description Specifies the system identifier. This is given by the "hpe5022\_init" function.  
 Direction IN
- **counts**  
 Description Specifies the number of test counts  
 Direction IN  
 Values

Name	Value
hpe5022_POPCORN_COUN_MIN	1
hpe5022_POPCORN_COUN_MAX	1,000,000

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

**Popcorn Noise Measurement Function (Sampling Method)**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'counts' is out of range.

**See Also**

“hpe5022\_popcornNoiseConfig” on page 867

“hpe5022\_setupPopcornNoise” on page 881



## Popcorn Noise Measurement Function (Sampling Method)

**hpe5022\_setupPopcornNoise**

**C Syntax** ViStatus hpe5022\_setupPopcornNoise(ViSession id, ViInt32 counts, ViObject testHndl);

**Visual Basic Syntax** hpe5022\_setupPopcornNoise(ByVal id As Long, ByVal counts As Long, ByRef testHndl As Long) As Long

**Description** This function assigns the popcorn noise sequence to the specified test identifier. Refer to the “hpe5022\_measurePopcornNoise” function for details about the sequence. This function does not execute measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

- counts
 

Description	Specifies the number of test counts.
Direction	IN

Name	Value
hpe5022_POPCORN_COUN_MIN	1
hpe5022_POPCORN_COUN_MAX	1,000,000

- testHndl
 

Description	Returns the test identifier. This identifier is used to execute popcorn noise by the “hpe5022_measure” function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'counts' is out of range.

**Popcorn Noise Measurement Function (Sampling Method)**

Error Code	Description
hpe5022_ERROR_MEM_ALLOC	Can not allocate enough memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_popcornNoiseConfig” on page 867

“hpe5022\_measurePopcornNoise” on page 879

“hpe5022\_measure” on page 387

## Popcorn Noise Measurement Function (Sampling Method)

**hpe5022\_popcornNoise\_Q**

- C Syntax** ViStatus hpe5022\_popcornNoise\_Q(ViSession id, ViPInt32 failCount);
- Visual Basic Syntax** hpe5022\_popcornNoise\_Q(ByVal id As Long, ByRef failCount As Long) As Long
- Description** This function returns the number of fail count occurrence. Fail count represents the number of detected head noise that has exceeded the threshold limits.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - failCount
 

Description	Returns the fail count of the popcorn noise measurement.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The popcorn noise data is corrupt. Check if your measurement sequence is correct.

- See Also** "hpe5022\_measurePopcornNoise" on page 879  
 "hpe5022\_setupPopcornNoise" on page 881

**Popcorn Noise Measurement Function (Sampling Method)****hpe5022\_popcornNoiseHistogram\_Q****C Syntax**

```
ViStatus hpe5022_popcornNoiseHistogram_Q(ViSession id, ViReal64 volt[],
ViInt32 count []);
```

**Visual Basic Syntax**

```
hpe5022_popcornNoiseHistogram_Q(ByVal id As Long, ByRef volt As Double,
ByRef count As Long) As Long
```

**Description**

This function returns the histogram results of the popcorn noise measurement. The returned histogram is generated in such a way that the measurement range is equally divided into 256 parts, and these parts are used as range of each category in histogram. All measurement values that are used to calculate the popcorn noise is classified into each category to make the histogram.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- volt
 

Description	Returns the center value of the range for 256 categories in the histogram.
Direction	OUT
Unit	Volt
- count
 

Description	Returns the count for the corresponding volt range.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The popcorn noise data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measurePopcornNoise” on page 879

“hpe5022\_setupPopcornNoise” on page 881

**Popcorn Noise Measurement Function (Sampling Method)**

“hpe5022\_popcornNoise\_Q” on page 883

## Popcorn Noise Measurement Function (Threshold Method)

This section describes the measurement functions used for Popcorn Noise Measurement when Agilent E5041A Dual Counter Module is used. The popcorn noise is counted by monitoring a level exceeded the specified threshold level.

### hpe5022\_popcornNoiseCtConfig

#### C Syntax


```
ViStatus hpe5022_popcornNoiseCtConfig(ViSession id, ViReal64 thrPos, ViReal64 thrNeg, ViReal64 wrTime, ViReal64 delay, ViReal64 rdTime);
```

#### Visual Basic Syntax

```
hpe5022_popcornNoiseCtConfig(ByVal id As Long, ByVal thrPos As Double, ByVal thrNeg As Double, ByVal wrTime As Double, ByVal delay As Double, ByVal rdTime As Double) As Long
```

#### Description

This function controls the configuration of the popcorn noise test when E5041A is used. In general, data is written at a specified time defined by 'wrTime'. Then after the delay time has elapsed the read gate opens and the input signal is read for popcorn noise detection. Refer to the illustration below.

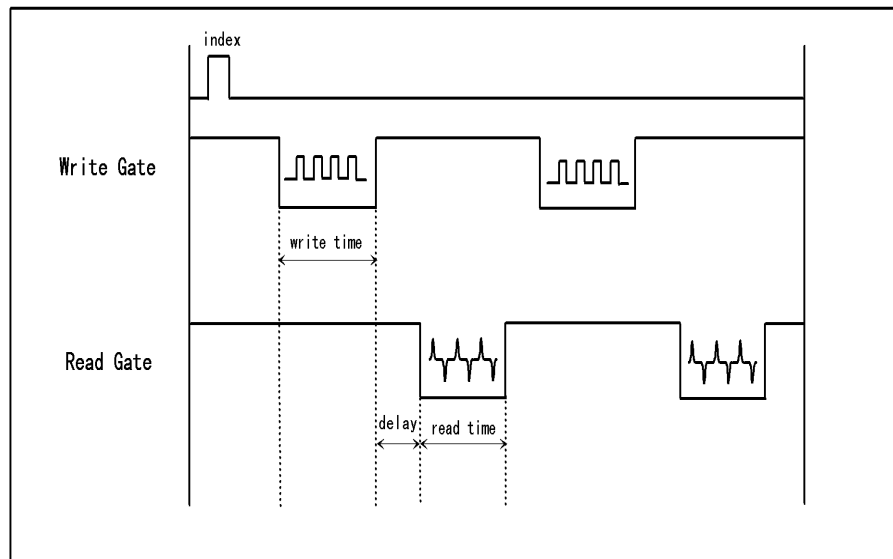


#### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- thrPos

**Popcorn Noise Measurement Function (Threshold Method)**

**Description** Specifies the positive threshold level for popcorn noise test. Popcorn noise is detected when the input signal exceeds this level.

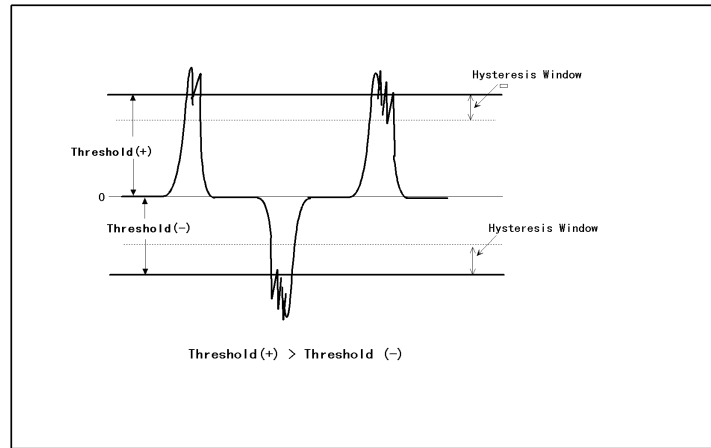

The limit value of this parameter depends on the negative threshold and amplifier gain setting.

Limit Value	Description
$  \text{thrPos} / \text{thrNeg}   \leq 10$	When $  \text{thrPos}   >   \text{thrNeg}  $
$  \text{thrNeg} / \text{thrPos}   \leq 10$	When $  \text{thrPos}   <   \text{thrNeg}  $
$5 \times 10^{-3} \leq \text{thrPos} \times \text{ampGain} \leq 800 \times 10^{-3}$	ampGain is queryable by the hpe5022_ampGain_Q function

**Direction** IN  
**Unit** Volt  
**Preset Value**  $100 \times 10^{-6}$

**Values**

Name	Value
hpe5022_POPCORN_CT_THR_POS_MIN	$10 \times 10^{-6}$
hpe5022_POPCORN_CT_THR_POS_MAX	$10 \times 10^{-3}$


- thrNeg

**Description** Specifies the negative threshold level for popcorn noise test. Popcorn noise is detected when the input signal goes below

Function Reference

**Popcorn Noise Measurement Function (Threshold Method)**

this level.

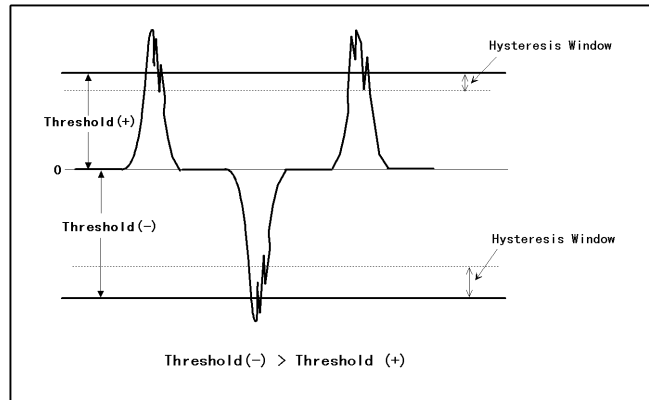

The limit value of this parameter depends on the positive threshold and amplifier gain setting.

Limit Value	Description
$  \text{thrNeg} / \text{thrPos}   \leq 10$	When $  \text{thrNeg}   >   \text{thrPos}  $
$  \text{thrPos} / \text{thrNeg}   \leq 10$	When $  \text{thrNeg}   <   \text{thrPos}  $
$-800 \times 10^{-3} \leq \text{thrNeg} \times \text{ampGain} \leq -5 \times 10^{-3}$	ampGain is queriable by the hpe5022_ampGain_Q function

Direction IN  
 Unit Volt  
 Preset Value  $-100 \times 10^{-6}$   
 Values

Name	Value
hpe5022_POPCORN_CT_THR_NEG_MIN	$-10 \times 10^{-3}$
hpe5022_POPCORN_CT_THR_NEG_MAX	$-10 \times 10^{-6}$

- wrTime
  - Description Specifies the time to write.
  - Direction IN
  - Unit Second
  - Preset Value hpe5022\_POPCORN\_WRIT\_TIME\_MIN( $10 \times 10^{-6}$ )



**Popcorn Noise Measurement Function (Threshold Method)**

## Values

Name	Value
hpe5022_POPCORN_CT_WRIT_TIME_MIN	$10 \times 10^{-6}$
hpe5022_POPCORN_CT_WRIT_TIME_MAX	$10 \times 10^{-3}$

- delay

**Description** Specifies the delay time. Delay time is defined as the time distance between write and read operation.

**Direction** IN

**Unit** Second

**Preset Value** hpe5022\_POPCORN\_CT\_DEL\_MIN ( $100 \times 10^{-9}$ )

## Values

Name	Value
hpe5022_POPCORN_CT_DEL_MIN	$100 \times 10^{-9}$
hpe5022_POPCORN_CT_DEL_MAX	$10 \times 10^{-3}$

- rdTime

**Description** Specifies the read time.

**Direction** IN

**Unit** Second

**Preset Value** hpe5022\_POPCORN\_CT\_READ\_TIME\_MIN

## Values

Name	Value
hpe5022_POPCORN_CT_READ_TIME_MIN	$1 \times 10^{-6}$
hpe5022_POPCORN_CT_READ_TIME_MAX	$10 \times 10^{-3}$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

**Popcorn Noise Measurement Function (Threshold Method)**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'threshold', 'wrTime', 'delay' and/or 'rdTime' is out of range.
hpe5022_ERROR_NOT_INIT	The E5041A is not installed.

**See Also**

"hpe5022\_measurePopcornNoiseCt" on page 903

## Popcorn Noise Measurement Function (Threshold Method)

**hpe5022\_popcornNoiseCtConfig\_Q**

<b>C Syntax</b>	<code>ViStatus hpe5022_popcornNoiseCtConfig_Q(ViSession id, ViPReal64 thrPos, ViPReal64 thrNeg, ViPReal64 wrTime, ViPReal64 delay, ViPReal64 rdTime);</code>																														
<b>Visual Basic Syntax</b>	<code>hpe5022_popcornNoiseCtConfig_Q(ByVal id As Long, ByRef thrPos As Double, ByRef thrNeg As Double, ByRef wrTime As Double, ByRef delay As Double, ByRef rdTime As Double) As Long</code>																														
<b>Description</b>	This function returns the configuration specified by “hpe5022_popcornNoiseCt Config” function.																														
<b>Parameters</b>	<ul style="list-style-type: none"> <li>• <b>id</b> <table> <tr> <td>Description</td> <td>Specifies the system identifier. This is given by the "hpe5022_init" function.</td> </tr> <tr> <td>Direction</td> <td>IN</td> </tr> </table> </li> <li>• <b>thrPos</b> <table> <tr> <td>Description</td> <td>Returns the positive threshold level. Popcorn noise is detected when the input signal exceeds this level.</td> </tr> <tr> <td>Direction</td> <td>OUT</td> </tr> <tr> <td>Unit</td> <td>Volt</td> </tr> </table> </li> <li>• <b>thrNeg</b> <table> <tr> <td>Description</td> <td>Returns the negative threshold level. Popcorn noise is detected when the input signal goes below this level.</td> </tr> <tr> <td>Direction</td> <td>OUT</td> </tr> <tr> <td>Unit</td> <td>Volt</td> </tr> </table> </li> <li>• <b>wrTime</b> <table> <tr> <td>Description</td> <td>Returns the time to write the data.</td> </tr> <tr> <td>Direction</td> <td>OUT</td> </tr> <tr> <td>Unit</td> <td>Second</td> </tr> </table> </li> <li>• <b>delay</b> <table> <tr> <td>Description</td> <td>Returns the time distance between write and read operation of the popcorn noise measurement.</td> </tr> <tr> <td>Direction</td> <td>OUT</td> </tr> <tr> <td>Unit</td> <td>Second</td> </tr> </table> </li> <li>• <b>rdTime</b> <table> <tr> <td>Description</td> <td>Returns the time to read.</td> </tr> </table> </li> </ul>	Description	Specifies the system identifier. This is given by the "hpe5022_init" function.	Direction	IN	Description	Returns the positive threshold level. Popcorn noise is detected when the input signal exceeds this level.	Direction	OUT	Unit	Volt	Description	Returns the negative threshold level. Popcorn noise is detected when the input signal goes below this level.	Direction	OUT	Unit	Volt	Description	Returns the time to write the data.	Direction	OUT	Unit	Second	Description	Returns the time distance between write and read operation of the popcorn noise measurement.	Direction	OUT	Unit	Second	Description	Returns the time to read.
Description	Specifies the system identifier. This is given by the "hpe5022_init" function.																														
Direction	IN																														
Description	Returns the positive threshold level. Popcorn noise is detected when the input signal exceeds this level.																														
Direction	OUT																														
Unit	Volt																														
Description	Returns the negative threshold level. Popcorn noise is detected when the input signal goes below this level.																														
Direction	OUT																														
Unit	Volt																														
Description	Returns the time to write the data.																														
Direction	OUT																														
Unit	Second																														
Description	Returns the time distance between write and read operation of the popcorn noise measurement.																														
Direction	OUT																														
Unit	Second																														
Description	Returns the time to read.																														

Function Reference

**Popcorn Noise Measurement Function (Threshold Method)**

Direction        OUT  
Unit              Second

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_NOT_INIT	The E5041A is not installed.

**See Also**

“hpe5022\_popcornNoiseCtConfig” on page 886

**hpe5022\_popcornNoiseCtWriteModeConfig**

**C Syntax** ViStatus hpe5022\_popcornNoiseCtConfig(ViSession id, ViInt16 writeMode);

**Visual Basic Syntax** hpe5022\_popcornNoiseCtConfig(ByVal id As Long, ByVal writeMode As Integer) As Long

**Description** This function controls the write current direction at the beginning of write operation.


**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- writeMode
 

Description	Specifies the write current direction at the beginning of write operation.
Direction	IN
Values	

Name	Value	Description
hpe5022_WRIT_DATA_POL_FIXED	0	The write current direction at the beginning of each write operation is always the same.
hpe5022_WRIT_DATA_POL_CONTINUOUS	1	The write current direction at the beginning of write operation is the same as the last current direction of the previous write operation.

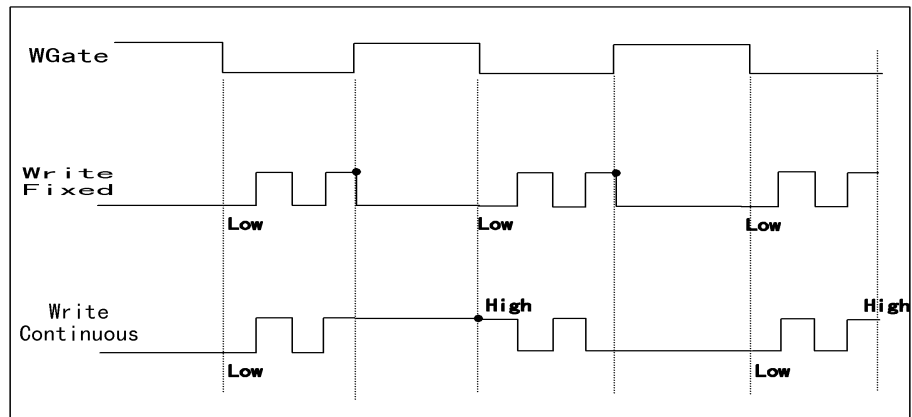**Popcorn Noise Measurement Function (Threshold Method)****Figure 3-34 Write Mode**

When [Write Mode] is set to “fixed”, the write current direction at the beginning of each write operation is always the same. On the other hand, when [Write Mode] is set to “continuous” the write current direction is the same as the last current direction of the previous write operation. Each time the write current alternates it allows you to check the polarity of the output pulse at the end of the previous write. You must set the repetitive period of the data pattern  $T$  to  $1T$ ,  $2T$ ,  $4T$  and  $8T$  due to the system’s internal constraints. If you use other repetitive periods of the data pattern, E5022A/B system can not guarantee the change of write current polarity. This function makes it possible for popcorn noise measurement (i.e. failcount) to achieve an acceptable level of TAA under similar usage of the drive. Before this function was introduced, the write current direction always starts at a constant direction, thus you can only observe one side of the output.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘writeMode’ is out of range.
hpe5022_ERROR_NSUP_CONF	The installed head amplifier has no capability to control the write current direction.
hpe5022_ERROR_NOT_INIT	The E5041A is not installed.

**See Also**

“hpe5022\_popcornNoiseCtWriteModeConfig\_Q” on page 895

**hpe5022\_popcornNoiseCtWriteModeConfig\_Q**

**C Syntax** ViStatus hpe5022\_popcornNoiseCtWriteModeConfig\_Q(ViSession id, ViPInt16 writeMode);

**Visual Basic Syntax** hpe5022\_popcornNoiseCtWriteModeConfig\_Q(ByVal id As Long, ByRef writeMode As Integer) As Long

**Description** This function returns the write current direction at the beginning of write operation.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- writeMode
 

Description	Returns the specified write current direction at the beginning of write operation.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_NOT_INIT	The E5041A is not installed.

**See Also**

"hpe5022\_popcornNoiseCtWriteModeConfig" on page 893

**Popcorn Noise Measurement Function (Threshold Method)****hpe5022\_popcornNoiseCtWritePatternConfig****C Syntax**

```
ViStatus hpe5022_popcornNoiseCtWritePatternConfig(ViSession id, ViInt16
writePat);
```

**Visual Basic Syntax**

```
hpe5022_popcornNoiseCtWritePatternConfig(ByVal id As Long, ByVal writePat
As Integer) As Long
```

**Description**

This function specifies the data pattern during the write sequence. This allows you to select the different data pattern for read and write operations independently. This also allows you to select the erase patterns as a write pattern.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- writePat

**Description** Specifies the data pattern of the write. When this parameter is set to hpe5022\_PAT\_DEFAULT, write data pattern is the same as the pattern specified by "hpe5022\_selectPattern" function.

**Direction** IN

**Preset value** hpe5022\_PAT\_DEFAULT

**Values**

Name	Value	Description
hpe5022_PAT_DEFAULT	-1	Default pattern
hpe5022_PAT_HF	0	HF pattern
hpe5022_PAT_LF	1	LF pattern
hpe5022_PAT_ISO	2	Isolated pulse pattern
hpe5022_PAT_PRBS	3	Pseudo random pattern
hpe5022_PAT_REP	4	Repetitive pattern
hpe5022_PAT_NLTS_5TH	5	NLTS 5th pattern
hpe5022_PAT_OWHF	6	Overwrite HF pattern
hpe5022_PAT_OWLF	7	Overwrite LF pattern
hpe5022_PAT_REP_2	8	Repetition Pattern2
hpe5022_PAT_REP_3	9	Repetition Pattern3
hpe5022_PAT_REP_4	10	Repetition Pattern4



**Popcorn Noise Measurement Function (Threshold Method)**

Name	Value	Description
hpe5022_PAT_USER	20	User-defined Pattern
hpe5022_PAT_USER_2	21	User-defined Pattern2
hpe5022_PAT_USER_3	22	User-defined Pattern3
hpe5022_PAT_USER_4	23	User-defined Pattern4
hpe5022_PAT_ERASE	101	Default Erase Pattern selected by the “hpe5022_eraseType” function
hpe5022_PAT_ERASE_DC_NEG	102	DC- Erase Pattern
hpe5022_PAT_ERASE_DC_POS	103	DC+ Erase Pattern
hpe5022_PAT_ERASE_AC	104	AC Erase Pattern

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘writePat’ is out of range.
hpe5022_ERROR_NOT_INIT	The E5041A is not installed.

**See Also**

“hpe5022\_popcornNoiseCtWritePatternConfig\_Q” on page 898

“hpe5022\_selectPattern” on page 119

**Popcorn Noise Measurement Function (Threshold Method)****hpe5022\_popcornNoiseCtWritePatternConfig\_Q****C Syntax**

```
ViStatus hpe5022_popcornNoiseCtWritePatternConfig_Q(ViSession id, ViInt16
writePat);
```

**Visual Basic Syntax**

```
hpe5022_popcornNoiseCtWritePatternConfig_Q(ByVal id As Long, ByRef
writePat As Integer) As Long
```

**Description**

This function returns the data pattern of the write sequence.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- writePat
 

Description	Returns the data pattern of the write. When this parameter is set to hpe5022_PAT_DEFAULT, write data pattern is the same as the pattern specified by "hpe5022_selectPattern" function.
Direction	OUT
Values	Same as the 'writePat' in the "hpe5022_popcornNoiseCtWritePatternConfig" function.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_NOT_INIT	The E5041A is not installed.

**See Also**

"hpe5022\_popcornNoiseCtWritePatternConfig" on page 896

## Popcorn Noise Measurement Function (Threshold Method)

**hpe5022\_popcornNoiseCtHysteresisConfig**

- C Syntax** ViStatus hpe5022\_popcornNoiseCtHysteresisConfig(ViSession id, ViInt16 hystLevel);
- Visual Basic Syntax** hpe5022\_popcornNoiseCtHysteresisConfig(ByVal id As Long, ByVal hystLevel As Integer) As Long
- Description** This function controls the size of the hysteresis level (i.e, hysteresis window) used in detecting popcorn noise.

**Parameters**

- id
 


Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- hystLevel
 

Description	Specifies the hysteresis level. Three hysteresis levels can be selected to detect popcorn noise. Select the hysteresis level that suits your measurement applications.
Direction	IN
Preset Value	1 (hpe5022_COMP_HYST_LEVEL_1)
Values	

Name	Value	Description
hpe5022_COMP_HYST_LEVEL_0	0	1.4% of threshold voltage (nominal).
hpe5022_COMP_HYST_LEVEL_1	1	4.0% of threshold voltage (nominal).
hpe5022_COMP_HYST_LEVEL_2	2	7.0% of threshold voltage (nominal).


The above percentage value of each hysteresis level is valid only when the specified threshold is between 45 to 450 [mV]. When the threshold level is between 5 to 45[mV], the hysteresis level becomes larger. When the threshold level is between 450 to 800 [mV], the hysteresis level becomes smaller.

Figure 3-35 Hysteresis Level

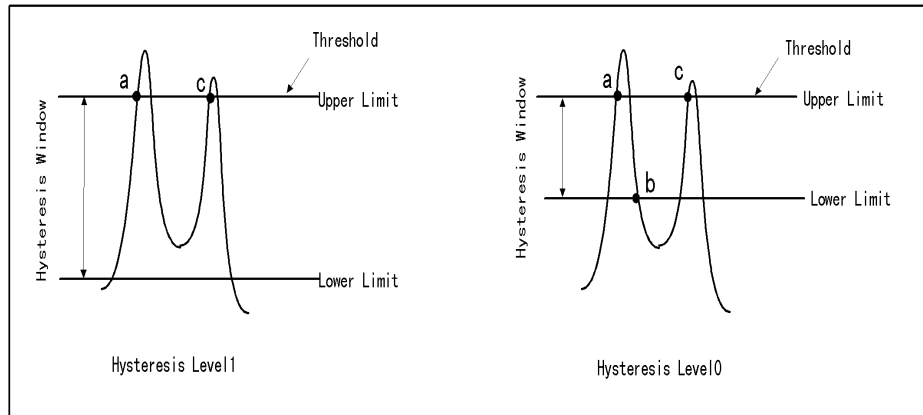

The level of the hysteresis window can be selected with this function. Optimum hysteresis level may depend on measurement applications and other parameter factors such as signal to noise, popcorn noise level etc. As shown in Figure 3-35 (left figure) a wider hysteresis window translates to less sensitive detection of popcorn noise. Narrowing the hysteresis window allows you to detect popcorn noise at low signal amplitudes as shown in Figure 3-35 (right figure).

Figure 3-36 Counting Popcorn Noise

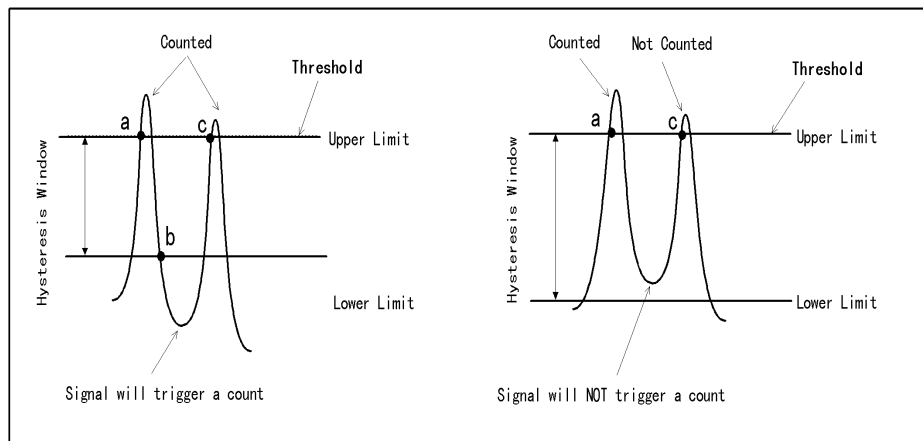

In order to trigger a count, the input signal must cross both the threshold level and the lower limit of the hysteresis window at points a and b as shown in Figure 3-36 (left figure). If the lower peak of the input signal does not cross the lower limit of the hysteresis window, this will not trigger a count even if the next peak amplitude at point c crosses over the threshold level as shown in Figure 3-36 (right figure). This will not be counted as popcorn noise.

**Popcorn Noise Measurement Function (Threshold Method)****Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'hystLevel' is out of range.
hpe5022_ERROR_NOT_INIT	The E5041A is not installed.

**See Also**

"hpe5022\_popcornNoiseCtHysteresisConfig\_Q" on page 902

**Popcorn Noise Measurement Function (Threshold Method)****hpe5022\_popcornNoiseCtHysteresisConfig\_Q****C Syntax**

```
ViStatus hpe5022_popcornNoiseCtHysteresisConfig_Q(ViSession id, ViPInt16
hystLevel);
```

**Visual Basic Syntax**

```
hpe5022_popcornNoiseCtHysteresisConfig_Q(ByVal id As Long, ByRef
hystLevel As Integer) As Long
```

**Description**

This function returns the specified hysteresis level for popcorn noise measurement in the “hpe5022\_popcornNoiseCtHysteresisConfig” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- hystLevel
 

Description	Returns the specified hysteresis level.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'hystlevel' is out of range.
hpe5022_ERROR_NOT_INIT	The E5041A is not installed.

**See Also**

“hpe5022\_popcornNoiseCtHysteresisConfig” on page 899

## Popcorn Noise Measurement Function (Threshold Method)

**hpe5022\_measurePopcornNoiseCt**

<b>C Syntax</b>	ViStatus hpe5022_measurePopcornNoiseCt(ViSession id, ViInt32 counts);
<b>Visual Basic Syntax</b>	hpe5022_measurePopcornNoiseCt(ByVal id As Long, ByVal counts As Long) As Long
<b>Description</b>	This function measures the popcorn noise. When this function is executed the following sequence of events take place. Data is written during write time, wait for delay time to elapse, then measure popcorn noise during read time. The “hpe5022_setupPopcornNoiseCt” function is used to setup the measurement sequence.

The sequence of this function are as follows:

1. Write the data during wrTime. (wrTime is specified by “hpe5022\_popcornNoiseCtConfig”). The data pattern specified by “hpe5022\_selectPattern” function will be written during wrTime.
2. Wait for delay time to elapse. (delay is specified by “hpe5022\_popcornNoiseCtConfig”).
3. Measure popcorn noise during the read time. (rdTime is specified by “hpe5022\_popcornNoiseCtConfig”).
4. Repeat steps 1-3 for specified number of counts.


**Parameters**

- id
 


Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- counts
 

Description	Specifies the number of times to count popcorn noise.
Direction	IN
Values	

Name	Value
hpe5022_POPCORN_COUN_MIN	1
hpe5022_POPCORN_COUN_MAX	1,000,000

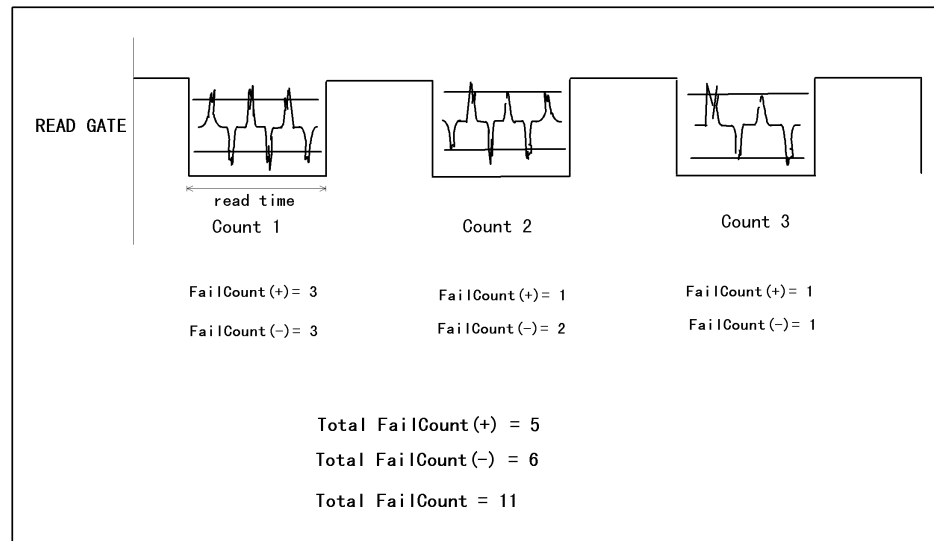**Popcorn Noise Measurement Function (Threshold Method)**

After write operation the read gate will not immediately open. Read operation will only start after the delay time has elapsed. The input signal is evaluated for popcorn noise at specified amount of time defined by 'read time'. Popcorn noise can only be detected if the input signal cross both the threshold level and the lower limit of the hysteresis window. Refer to Figure 3-36 on page 900. Since E5041A is a dual counter module, it has two threshold levels that detect popcorn noise for both positive and negative amplitudes of the input signal as shown below. Each threshold has its own hysteresis window that triggers the count. As shown in the figure above, for each count the detected popcorn noise for both positive and negative amplitudes are counted as failcount (+) and failcount(-) respectively.

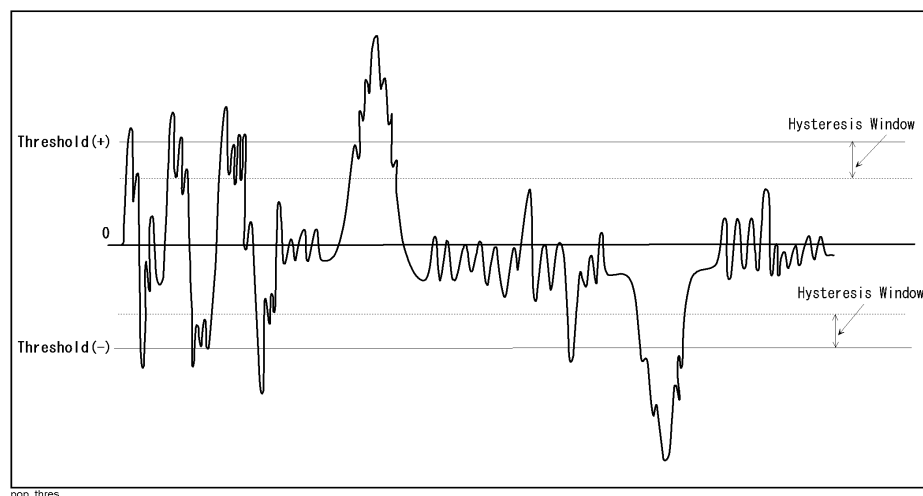



## Popcorn Noise Measurement Function (Threshold Method)

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'counts' is out of range.
hpe5022_ERROR_NOT_INIT	The E5041A is not installed.

## See Also

“hpe5022\_popcornNoiseCtConfig” on page 886

“hpe5022\_setupPopcornNoiseCt” on page 906

**Popcorn Noise Measurement Function (Threshold Method)****hpe5022\_setupPopcornNoiseCt****C Syntax**

```
ViStatus hpe5022_setupPopcornNoiseCt(ViSession id, ViInt32 counts, ViPObject testHndl);
```

**Visual Basic Syntax**

```
hpe5022_setupPopcornNoiseCt(ByVal id As Long, ByVal counts As Long, ByRef testHndl As Long) As Long
```

**Description**

This function assigns the popcorn noise measurement sequence to the test identifier. Refer to the “hpe5022\_measurePopcornNoiseCt” function for details about the sequence. This function does not execute measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- counts

**Description** Specifies the number of times to count popcorn noise.

**Direction** IN

Name	Value
hpe5022_POPCORN_COUN_MIN	1
hpe5022_POPCORN_COUN_MAX	1,000,000

- testHndl

**Description** Returns the test identifier. This identifier is used to execute popcorn noise by the “hpe5022\_measure” function.

**Direction** OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**Popcorn Noise Measurement Function (Threshold Method)**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_PARAMETER	The parameter 'counts' is out of range.
hpe5022_ERROR_MEM_ALLOC	Can not allocate enough memory. Release the finished setup function using the "hpe5022_releaseSetup" function.
hpe5022_ERROR_NOT_INIT	The E5041A is not installed.

**See Also**

"hpe5022\_popcornNoiseCtConfig" on page 886

"hpe5022\_measurePopcornNoiseCt" on page 903

"hpe5022\_measure" on page 387

**Popcorn Noise Measurement Function (Threshold Method)****hpe5022\_popcornNoiseCt\_Q****C Syntax**

```
ViStatus hpe5022_popcornNoiseCt_Q(ViSession id, ViPInt32 failCountPos,
ViPInt32 failCountNeg);
```

**Visual Basic Syntax**

```
hpe5022_popcornNoiseCt_Q(ByVal id As Long, ByRef failCountPos As Long,
ByRef failCountNeg As Long) As Long
```

**Description**

This function returns the number of counted popcorn noise as detected by both the positive and negative thresholds.

**Parameters**

- id

**Description** Specifies the system identifier. This is given by the "hpe5022\_init" function.

**Direction** IN

- failCountPos

**Description** Returns the number of counted popcorn noise by the positive threshold. If the actual fail counts exceed the maximum number of allowable failcounts as specified by hpe5022\_POPCORN\_CT\_FAIL\_COUN\_MAX, the excess number of fail counts will not be counted.

Name	Value
hpe5022_POPCORN_CT_FAIL_COUN_MAX	2,147,483,647

**Direction** OUT

- failCountNeg

**Description** Returns the number counted popcorn noise by the negative threshold. If the actual fail counts exceed the maximum number of allowable failcounts as specified by hpe5022\_POPCORN\_CT\_FAIL\_COUN\_MAX, the excess number of fail counts will not be counted.

Name	Value
hpe5022_POPCORN_CT_FAIL_COUN_MAX	2,147,483,647

**Direction** OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

**Popcorn Noise Measurement Function (Threshold Method)**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The popcorn noise data is corrupt. Check if your measurement sequence is correct.
hpe5022_ERROR_NOT_INIT	The E5041A is not installed.

**See Also**

"hpe5022\_measurePopcornNoiseCt" on page 903

"hpe5022\_setupPopcornNoiseCt" on page 906

## Override Measurement Function

This section describes the functions related with the override measurement. This measurement is done by a spectrum analyzer.

### hpe5022\_measureOverride

#### C Syntax

```
ViStatus hpe5022_measureOverride(ViSession id, ViInt16 ave);
```

#### Visual Basic Syntax

```
hpe5022_measureOverride(ByVal id As Long, ByVal ave As Integer) As Long
```

#### Description

This function measures the override ratio. The function sequences are as follows.

1. Perform the three-track-erase. (the entire track erase for five positions, the track, its both side tracks, and the center between them.)
2. Erase at write offset.
3. Write the override LF data pattern specified by the "hpe5022\_overrideLfPattern" function for an entire track.
4. Move the head to the read offset position specified by the "hpe5022\_readTrackOffset" function.
5. Measure the LF amplitude level.
6. Perform the band erase as follows:
  - a. write offset + erase offset
  - b. write offset - erase offset
  - c. write offset

Write offset is specified by the "hpe5022\_writeTrackOffset". Erase offset is specified by the service function "hpe5022\_overrideEraseOffset".

7. Write the override LF data pattern specified by the "hpe5022\_overrideLfPattern" function for an entire track.
8. Write the override HF data pattern specified by the "hpe5022\_overrideHfPattern" function for an entire track.
9. Move the head to the read offset position specified by the "hpe5022\_readTrackOffset".
10. Measure the residual LF amplitude level.
11. Repeat above 2 through 10 'ave' (see parameters) times if it is set at more than 1.

The data patterns for this measurement are used automatically. The data pattern specified by the "hpe5022\_selectPattern" function is not used for this measurement.

The “hpe5022\_overwrite\_Q” function returns the measurement result.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
  
- ave
  - Description Specifies the number of measurements for averaging.
  - Direction IN
  - Values

Name	Value
hpe5022_OVERWRITE_COUN_MIN	1
hpe5022_OVERWRITE_COUN_MAX	25

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'ave' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the “hpe5022_driveState” function.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.

Function Reference  
**Overwrite Measurement Function**

Error Code	Description
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

- “hpe5022\_overwrite\_Q” on page 915
- “hpe5022\_overwriteHfPattern” on page 136
- “hpe5022\_overwriteLfPattern” on page 138
- “hpe5022\_readTrackOffset” on page 219
- “hpe5022\_writeTrackOffset” on page 222
- “hpe5022\_driveState” on page 209



## hpe5022\_setupOverwrite

**C Syntax** ViStatus hpe5022\_setupOverwrite(ViSession id, ViInt16 ave, ViPObject testHndl);

**Visual Basic Syntax** hpe5022\_setupOverwrite(ByVal id As Long, ByVal ave As Integer, ByRef testHndl As Long) As Long

**Description** This function assigns the overwrite measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureOverwrite” function for details about the sequence. This function does not execute measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_overwrite\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- ave
 

Description	Specifies the number of measurements for averaging.
Direction	IN
Values	Same as the 'ave' in the “hpe5022_measureOverwrite” function.
- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the overwrite measurement by the “hpe5022_measure” function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'ave' is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

Function Reference  
**Overwrite Measurement Function**

**See Also**

“hpe5022\_measureOverwrite” on page 910

“hpe5022\_overwrite\_Q” on page 915

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

## hpe5022\_overwrite\_Q

- C Syntax** ViStatus hpe5022\_overwrite\_Q(ViSession id, ViPReal64 overwrite);
- Visual Basic Syntax** hpe5022\_overwrite\_Q(ByVal id As Long, ByRef overwrite As Double) As Long
- Description** This function returns the result of the overwrite measurement.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - overwrite
 

Description	Returns the overwrite ratio.
Direction	OUT
Unit	dB

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The overwrite data is corrupt. Check if your measurement sequence is correct.

- See Also** “hpe5022\_measureOverwrite” on page 910  
 “hpe5022\_setupOverwrite” on page 913

## **hpe5022\_overwriteDataSize\_Q**

### **C Syntax**

ViStatus hpe5022\_overwriteDataSize\_Q(ViSession id, ViPInt32 size);

### **Visual Basic Syntax**

hpe5022\_overwriteDataSize\_Q(ByVal id As Long, ByRef size As Long) As Long

### **Description**

This function returns the array size of the overwrite data returned by the “hpe5022\_overwriteData\_Q” function.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- size
  - Description Returns the size of overwrite data.  
  
The returned size will be the same as the value of 'ave' specified by the “hpe5022\_measureOverwrite” or “hpe5022\_setupOverwrite” function if the measurement executed properly.
  - Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The overwrite data is corrupt. Check if your measurement sequence is correct.

### **See Also**

“hpe5022\_overwriteData\_Q”  
“hpe5022\_measureOverwrite”  
“hpe5022\_setupOverwrite”

## hpe5022\_overrideData\_Q

### C Syntax

```
ViStatus hpe5022_overrideData_Q(ViSession id, ViReal64 data[]);
```

### Visual Basic Syntax

```
hpe5022_overrideData_Q(ByVal id As Long, ByRef data As Double) As Long
```

### Description

This function returns the overwrite data of the measurement for each revolution.

When the 'ave' parameter in the "hpe5022\_measureOverride" or the "hpe5022\_setupOverride" function is set for more than one, the function allows you to get the overwrite data for each revolution. If the 'ave' is set to 1, the output of this function is the same as one of the "hpe5022\_override\_Q" function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- data
 

Description	Returns the data array of the overwrite measurement. The array size is returned by the "hpe5022_overrideDataSize_Q" function.
Direction	OUT
Units	dB

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The overwrite data is corrupt. Check if your measurement sequence is correct.

### See Also

"hpe5022\_overrideDataSize\_Q" on page 916

**Override Measurement Function****hpe5022\_overrideStatistic\_Q****C Syntax**

```
ViStatus hpe5022_overrideStatistic_Q(ViSession id, ViPReal64 mean, ViPReal64
min, ViPReal64 max, ViPReal64 stdDev);
```

**Visual Basic Syntax**

```
hpe5022_overrideStatistic_Q(ByVal id As Long, ByRef mean As Double, ByRef
min As Double, ByRef max As Double, ByRef stdDev As Double) As Long
```

**Description**

This function reports the statistic (mean, minimum, maximum and standard deviation) of overwrite data. The data returned by the “hpe5022\_overrideData\_Q” function is used for this statistic analysis.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- mean
 

Description	Returns the mean value. The returned value is the same as the corresponding values returned by the “hpe5022_override_Q” function.
Direction	OUT
Units	dB
- min
 

Description	Returns the minimum value.
Direction	OUT
Units	dB
- max
 

Description	Returns the maximum value.
Direction	OUT
Units	dB
- stdDev
 

Description	Returns the standard deviation value.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The overwrite data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_overwriteData\_Q” on page 917

---

## Secrored Overwrite Measurement Function

This section describes the functions related with the sectored overwrite measurement. This measurement is done by a spectrum analyzer.

### hpe5022\_measureSecroredOverwrite

**C Syntax** ViStatus hpe5022\_measureSecroredOverwrite(ViSession id, ViInt16 sectors, ViInt16 gapSectors, ViInt16 ave);

**Visual Basic Syntax** hpe5022\_measureSecroredOverwrite(ByVal id As Long, ByVal sectors As Integer, ByVal gapSectors As Integer, ByVal ave As Integer) As Long

**Description** This function measures the overwrite ratio with the sectoring method.

The data patterns for this measurement are used automatically. The data pattern specified by the “hpe5022\_selectPattern” function is not used for this measurement.

#### Parameters

- id  
Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- sectors  
Description Specifies the number of sectors to divide.

Name	Value
hpe5022_SECTORED_OVERWRITE_SECTORS_MIN	2
hpe5022_SECTORED_OVERWRITE_SECTORS_MAX	80

Sector time must be no less than  
hpe5022\_SECTORED\_OVERWRITE\_SECTOR\_TIME\_M  
IN (100usec). Sector time is 60 sec / (RPM × sectors)

Direction IN

- gapSectors  
Description Specifies the number of sectors to skip after writing one sector. Minimum value is as follows:

Name	Value
hpe5022_SECTORED_OVERWRITE_GAP_SECTORS_MIN	1



**Sectored Overwrite Measurement Function**

Maximum value is “sectors” – 1. “sectors” must be divisible by “gapSectors + 1.” If it is not divisible, “hpe5022\_ERROR\_INV\_SETUP” occurs.

Direction IN

- ave

Description Specifies the number of measurements for averaging.

Direction IN

Values

Name	Value
hpe5022_SECTORED_OVERWRITE_COUN_MIN	1
hpe5022_SECTORED_OVERWRITE_COUN_MAX	25

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'sectors', 'gapSectors', or 'ave' is out of range.
hpe5022_ERROR_INV_SETUP	The sector time is less than hpe5022_SECTORED_OVERWRITE_SECTOR_TIME_MIN, or the remainder of “sectors / (gapSectors + 1)” is not 0.

**See Also**

“hpe5022\_setupSectoredOverwrite” on page 923

“hpe5022\_sectoredOverwrite\_Q” on page 925

“hpe5022\_sectoredOverwriteDataSize\_Q” on page 926

“hpe5022\_sectoredOverwriteData\_Q” on page 927

“hpe5022\_sectoredOverwriteStatistic\_Q” on page 928

“hpe5022\_sectoredOverwriteRawDataSize\_Q” on page 930

“hpe5022\_sectoredOverwriteReferenceRawData\_Q” on page 931

Function Reference

**Sectored Overwrite Measurement Function**

“hpe5022\_sectoredOverwriteResidualRawData\_Q” on page 932

**hpe5022\_setupSectoredOverwrite**

**C Syntax** ViStatus hpe5022\_setupSectoredOverwrite(ViSession id, ViInt16 sectors, ViInt16 gapSectors, ViInt16 ave, ViPObject testHndl);

**Visual Basic Syntax** hpe5022\_setupSectoredOverwrite(ByVal id As Long, ByVal sectors As Integer, ByVal gapSectors As Integer, ByVal ave As Integer, ByRef testHndl As Long) As Long

**Description** This function sets up the sectored overwrite measurement sequence.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
-------------	--------------------------------------------------------------------------------

Direction IN

- sectors
 

Description	Specifies the number of sectors to divide.
-------------	--------------------------------------------

Name	Value
hpe5022_SECTORED_OVERWRITE_SECTORS_MIN	2
hpe5022_SECTORED_OVERWRITE_SECTORS_MAX	80

Sector time must be no less than hpe5022\_SECTORED\_OVERWRITE\_SECTOR\_TIME\_MIN (100µsec). Sector time is 60 sec / (RPM × sectors)

Direction IN

- gapSectors
 

Description	Specifies the number of sectors to skip after writing one sector. Minimum value is as follows:
-------------	------------------------------------------------------------------------------------------------

Name	Value
hpe5022_SECTORED_OVERWRITE_GAP_SECTORS_MIN	1

Maximum value is “sectors” – 1. “sectors” must be divided by “gapSectors + 1.” If remainder is not 0, hpe5022\_ERROR\_INV\_SETUP occurs.

Direction IN

- ave
 

Description	Specifies the number of measurements for averaging.
-------------	-----------------------------------------------------

Direction IN

**Sectored Overwrite Measurement Function**

## Values

Name	Value
hpe5022_SECTORED_OVERWRITE_COUN_MIN	1
hpe5022_SECTORED_OVERWRITE_COUN_MAX	25

- testHndl

Description Returns test handle.

Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'sectors', 'gapSectors', or 'ave' is out of range.
hpe5022_ERROR_INV_SETUP	The sector time is less than hpe5022_SECTORED_OVERWRITE_SECTOR_TIME_MIN, or the remainder of "sectors / (gapSectors + 1)" is not 0.

**See Also**

"hpe5022\_measureSectoredOverwrite" on page 920

"hpe5022\_sectoredOverwrite\_Q" on page 925

"hpe5022\_sectoredOverwriteDataSize\_Q" on page 926

"hpe5022\_sectoredOverwriteData\_Q" on page 927

"hpe5022\_sectoredOverwriteStatistic\_Q" on page 928

"hpe5022\_sectoredOverwriteRawDataSize\_Q" on page 930

"hpe5022\_sectoredOverwriteReferenceRawData\_Q" on page 931

"hpe5022\_sectoredOverwriteResidualRawData\_Q" on page 932

## hpe5022\_sectoredOverwrite\_Q

- C Syntax** ViStatus hpe5022\_sectoredOverwrite\_Q(ViSession id, ViPReal64 overwrite);
- Visual Basic Syntax** hpe5022\_sectoredOverwrite\_Q(ByVal id As Long, ByRef overwrite As Double) As Long
- Description** This function returns the overwrite ratio by the sectoring method.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - overwrite
 

Description	Returns the overwrite ratio in dB.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The sectored overwrite data is corrupt.

- See Also**
- “hpe5022\_measureSectoredOverwrite” on page 920
  - “hpe5022\_setupSectoredOverwrite” on page 923
  - “hpe5022\_sectoredOverwriteDataSize\_Q” on page 926
  - “hpe5022\_sectoredOverwriteData\_Q” on page 927
  - “hpe5022\_sectoredOverwriteStatistic\_Q” on page 928
  - “hpe5022\_sectoredOverwriteRawDataSize\_Q” on page 930
  - “hpe5022\_sectoredOverwriteReferenceRawData\_Q” on page 931
  - “hpe5022\_sectoredOverwriteResidualRawData\_Q” on page 932

**Secrored Overwrite Measurement Function****hpe5022\_sectoredOverwriteDataSize\_Q****C Syntax**

```
ViStatus hpe5022_sectoredOverwriteDataSize_Q(ViSession id, ViPReal32 size);
```

**Visual Basic Syntax**

```
hpe5022_sectoredOverwriteDataSize_Q(ByVal id As Long, ByRef size As Long) As Long
```

**Description**

This function returns the size of the sectored overwrite data.

**Parameters**

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **overwrite**

Description	Returns the size of the sectored overwrite data.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The sectored overwrite data is corrupt.

**See Also**

“hpe5022\_measureSectoredOverwrite” on page 920

“hpe5022\_setupSectoredOverwrite” on page 923

“hpe5022\_sectoredOverwrite\_Q” on page 925

“hpe5022\_sectoredOverwriteData\_Q” on page 927

“hpe5022\_sectoredOverwriteStatistic\_Q” on page 928

“hpe5022\_sectoredOverwriteRawDataSize\_Q” on page 930

“hpe5022\_sectoredOverwriteReferenceRawData\_Q” on page 931

“hpe5022\_sectoredOverwriteResidualRawData\_Q” on page 932

## hpe5022\_secoredOverwriteData\_Q

- C Syntax** ViStatus hpe5022\_secoredOverwriteData\_Q(ViSession id, ViReal64 data[]);
- Visual Basic Syntax** hpe5022\_secoredOverwriteData\_Q(ByVal id As Long, ByRef data As Double) As Long
- Description** This function returns the secored overwrite data.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - data
 

Description	Returns the secored overwrite data. The data size is returned by "hpe5022_secoredOverwriteDataSize_Q"
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The secored overwrite data is corrupt.

- See Also**
- “hpe5022\_measureSecoredOverwrite” on page 920
  - “hpe5022\_setupSecoredOverwrite” on page 923
  - “hpe5022\_secoredOverwrite\_Q” on page 925
  - “hpe5022\_secoredOverwriteDataSize\_Q” on page 926
  - “hpe5022\_secoredOverwriteStatistic\_Q” on page 928
  - “hpe5022\_secoredOverwriteRawDataSize\_Q” on page 930
  - “hpe5022\_secoredOverwriteReferenceRawData\_Q” on page 931
  - “hpe5022\_secoredOverwriteResidualRawData\_Q” on page 932

**Secrored Overwrite Measurement Function****hpe5022\_sectoredOverwriteStatistic\_Q****C Syntax**

ViStatus hpe5022\_sectoredOverwriteStatistic\_Q(ViSession id, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax**

hpe5022\_sectoredOverwriteStatistic\_Q(ByVal id As Long, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description**

This function returns the statistics of sectored overwrite data.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- mean
 

Description	Returns the mean value of the sectored overwrite data.
Direction	OUT
- min
 

Description	Returns the minimum value of the sectored overwrite data.
Direction	OUT
- max
 

Description	Returns the maximum value of the sectored overwrite data.
Direction	OUT
- stdDev
 

Description	Returns the standard deviation value of the sectored overwrite data.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.



Error Code	Description
hpe5022_ERROR_DATA_CORRUPT	The sectored overwrite data is corrupt.

**See Also**

“hpe5022\_measureSectoredOverwrite” on page 920

“hpe5022\_setupSectoredOverwrite” on page 923

“hpe5022\_sectoredOverwrite\_Q” on page 925

“hpe5022\_sectoredOverwriteDataSize\_Q” on page 926

“hpe5022\_sectoredOverwriteData\_Q” on page 927

“hpe5022\_sectoredOverwriteRawDataSize\_Q” on page 930

“hpe5022\_sectoredOverwriteReferenceRawData\_Q” on page 931

“hpe5022\_sectoredOverwriteResidualRawData\_Q” on page 932

**Sectored Overwrite Measurement Function****hpe5022\_sectoredOverwriteRawDataSize\_Q****C Syntax**

```
ViStatus hpe5022_sectoredOverwriteRawDataSize_Q(ViSession id, ViPInt32
size);
```

**Visual Basic Syntax**

```
hpe5022_sectoredOverwriteRawDataSize_Q(ByVal id As Long, ByRef size As
Long) As Long
```

**Description**

This function returns the size of the sectored overwrite raw data for the reference and the residual.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- size
 

Description	Returns the size of the sectored overwrite raw data.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The sectored overwrite data is corrupt.

**See Also**

“hpe5022\_measureSectoredOverwrite” on page 920

“hpe5022\_setupSectoredOverwrite” on page 923

“hpe5022\_sectoredOverwrite\_Q” on page 925

“hpe5022\_sectoredOverwriteDataSize\_Q” on page 926

“hpe5022\_sectoredOverwriteData\_Q” on page 927

“hpe5022\_sectoredOverwriteStatistic\_Q” on page 928

“hpe5022\_sectoredOverwriteReferenceRawData\_Q” on page 931

“hpe5022\_sectoredOverwriteResidualRawData\_Q” on page 932

## hpe5022\_secoredOverwriteReferenceRawData\_Q

**C Syntax** ViStatus hpe5022\_secoredOverwriteReferenceRawData\_Q(ViSession id, ViReal64 data[]);

**Visual Basic Syntax** hpe5022\_secoredOverwriteReferenceRawData\_Q(ByVal id As Long, ByRef data As Double) As Long

**Description** This function returns the secored overwrite raw data for the reference LF.

- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - data
 

Description	Returns the secored overwrite reference raw data in dBm. Data size is returned by "hpe5022_secoredOverwriteRawDataSize_Q."
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The secored overwrite data is corrupt.

- See Also**
- “hpe5022\_measureSecoredOverwrite” on page 920
  - “hpe5022\_setupSecoredOverwrite” on page 923
  - “hpe5022\_secoredOverwrite\_Q” on page 925
  - “hpe5022\_secoredOverwriteDataSize\_Q” on page 926
  - “hpe5022\_secoredOverwriteData\_Q” on page 927
  - “hpe5022\_secoredOverwriteStatistic\_Q” on page 928
  - “hpe5022\_secoredOverwriteRawDataSize\_Q” on page 930
  - “hpe5022\_secoredOverwriteResidualRawData\_Q” on page 932

**Secrored Overwrite Measurement Function****hpe5022\_sectoredOverwriteResidualRawData\_Q****C Syntax**

```
ViStatus hpe5022_sectoredOverwriteResidualRawData_Q(ViSession id, ViInt16
rev, ViReal64 data[]);
```

**Visual Basic Syntax**

```
hpe5022_sectoredOverwriteResidualRawData_Q(ByVal id As Long, ByVal rev
As Integer, ByRef data As Double) As Long
```

**Description**

This function returns the sectored overwrite raw data for the residual LF. The residual LF data is measured average times. The argument “rev” specifies the data to be retrieved. “rev = 0” means the first data, “rev = 1” is for the second, “rev = ave – 1” is for the last.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- rev
 

Description	Specifies the data to be retrieved. 0 is the first data, 1 for the second, “average – 1” for the last.
Direction	IN
- data
 

Description	Returns the sectored overwrite residual raw data in dBm. Data size is returned by “hpe5022_sectoredOverwriteRawDataSize_Q.”
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'rev' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The sectored overwrite data is corrupt.

**See Also**

“hpe5022\_measureSectoredOverwrite” on page 920

**Sectored Overwrite Measurement Function**

“hpe5022\_setupSectoredOverwrite” on page 923

“hpe5022\_sectoredOverwrite\_Q” on page 925

“hpe5022\_sectoredOverwriteDataSize\_Q” on page 926

“hpe5022\_sectoredOverwriteData\_Q” on page 927

“hpe5022\_sectoredOverwriteStatistic\_Q” on page 928

“hpe5022\_sectoredOverwriteRawDataSize\_Q” on page 930

“hpe5022\_sectoredOverwriteReferenceRawData\_Q” on page 931

## Partial Erasure Measurement

This section describes the functions related with partial erasure measurement. Partial erasure is the amplitude loss of the play-back voltage when two transitions are written at a small separation.

### hpe5022\_measurePartialErasure

#### C Syntax

```
ViStatus hpe5022_measurePartialErasure(ViSession id, ViInt16 ave);
```

#### Visual Basic Syntax

```
hpe5022_measurePartialErasure(ByVal id As Long, ByVal ave As Integer) As Long
```

#### Description

This function measures the partial erasure. The function sequence is as follows.

1. Move the head to the write track offset position specified by the “hpe5022\_writeTrackOffset”.
2. Perform a erase (same as the hpe5022\_erase function) for an entire track.
3. Write the 3T data pattern for an entire track at the write track offset position.
4. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset”.
5. Measure the amplitude level.
6. Move the head to the write track offset position.
7. Perform a erase (same as the hpe5022\_erase function) for an entire track.
8. Write the 1T data pattern for an entire track.
9. Move the head to the read track offset position.
10. Measure the amplitude level.
11. Repeat the steps 1 to 10 ‘ave’ (see parameters) times if it is more than 1.

The data patterns for this measurement are used automatically. The data pattern specified by the “hpe5022\_selectPattern” function is not used for this measurement.

The “hpe5022\_partialErasure\_Q” function returns the measurement result.

#### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN

- ave

Description Specifies the number of measurements for averaging.

Direction IN

Values

Name	Value
hpe5022_PART_ERAS_COUN_MIN	1
hpe5022_PART_ERAS_COUN_MAX	25

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'ave' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

### See Also

"hpe5022\_partialErasure\_Q" on page 939

"hpe5022\_readTrackOffset" on page 219

"hpe5022\_writeTrackOffset" on page 222

Function Reference  
**Partial Erasure Measurement**

“hpe5022\_driveState” on page 209



## hpe5022\_setupPartialErasure

**C Syntax** ViStatus hpe5022\_setupPartialErasure(ViSession id, ViInt16 ave, ViPObject testHndl);

**Visual Basic Syntax** hpe5022\_setupPartialErasure(ByVal id As Long, ByVal ave As Integer, ByRef testHndl As Long) As Long

**Description** This function assigns the partial erasure measurement sequence to the specified test identifier. Refer to the “hpe5022\_measurePartialErasure” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_partialErasure\_Q” function returns the measurement result.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- ave
 

Description	Specifies the number of measurements for averaging.
Direction	IN
Values	Same as the ‘ave’ in the “hpe5022_measurePartialErasure” function.
- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the partial erasure measurement by the “hpe5022_measure” function.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘ave’ is out of range.

Function Reference  
**Partial Erasure Measurement**

Error Code	Description
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_measurePartialErasure” on page 934

“hpe5022\_partialErasure\_Q” on page 939

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

## hpe5022\_partialErasure\_Q

- C Syntax** ViStatus hpe5022\_partialErasure\_Q(ViSession id, ViPReal64 pe);
- Visual Basic Syntax** hpe5022\_partialErasure\_Q(ByVal id As Long, ByRef pe As Double) As Long
- Description** This function returns the result of partial erasure measurement.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - pe
 

Description	Returns the amplitude loss from partial erasure measurement.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The partial erasure data is corrupt. Check if your measurement sequence is correct.

- See Also**
- “hpe5022\_measurePartialErasure” on page 934
  - “hpe5022\_setupPartialErasure” on page 937
  - “hpe5022\_measure” on page 387

## **hpe5022\_partialErasureDataSize\_Q**

- C Syntax** ViStatus hpe5022\_partialErasureDataSize\_Q(ViSession id, ViPInt32 size);
- Visual Basic Syntax** hpe5022\_partialErasureDataSize\_Q(ByVal id As Long, ByRef size As Long) As Long
- Description** This function returns the array size of the partial erasure data returned by the “hpe5022\_partialErasureData\_Q” function.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - size
    - Description Returns the size of partial erasure data.  
The size will be the same as the value of 'ave' specified by the “hpe5022\_measurePartialErasure” or “hpe5022\_setupPartialErasure” functions if measurement is executed properly.
    - Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The partial erasure data is corrupt. Check if your measurement sequence is correct.

- See Also** “hpe5022\_partialErasureData\_Q” on page 941  
“hpe5022\_measurePartialErasure” on page 934  
“hpe5022\_setupPartialErasure” on page 937

## hpe5022\_partialErasureData\_Q

- C Syntax** ViStatus hpe5022\_partialErasureData\_Q(ViSession id, ViReal64 data[]);
- Visual Basic Syntax** hpe5022\_partialErasureData\_Q(ByVal id As Long, ByRef data As Double) As Long
- Description** This function returns the partial erasure data of the measurement for each revolution.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - data
 

Description	Returns the data array of the partial erasure. The array size is returned by the "hpe5022_partialErasureDataSize_Q" function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The partial erasure data is corrupt. Check if your measurement sequence is correct.

**See Also** "hpe5022\_partialErasureDataSize\_Q" on page 940

## **hpe5022\_partialErasureStatistic\_Q**

- C Syntax** ViStatus hpe5022\_partialErasureStatistic\_Q(ViSession id, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);
- Visual Basic Syntax** hpe5022\_partialErasureStatistic\_Q(ByVal id As Long, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long
- Description** This function reports the statistic (mean, minimum, maximum and standard deviation) of partial erasure data. The data returned by the “hpe5022\_partialErasureData\_Q” function is used for this statistic analysis.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - mean
    - Description Returns the mean value. The returned value is the same as the corresponding values returned by the “hpe5022\_partialErasure\_Q” function.
    - Direction OUT
  - min
    - Description Returns the minimum value.
    - Direction OUT
  - max
    - Description Returns the maximum value.
    - Direction OUT
  - stdDev
    - Description Returns the standard deviation value.
    - Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The partial erasure data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_partialErasureData\_Q” on page 941

## Side Reading Measurement Function

This section describes the functions related with side reading measurement.

### hpe5022\_measureSideReading

<b>C Syntax</b>	<code>ViStatus hpe5022_measureSideReading(ViSession id, ViReal64 wrPos, ViInt16 ave);</code>
<b>Visual Basic Syntax</b>	<code>hpe5022_measureSideReading(ByVal id As Long, ByVal wrPos As Double, ByVal ave As Integer) As Long</code>
<b>Description</b>	<p>This function measures the side reading. The measurement sequences are as follows:</p> <ol style="list-style-type: none"><li>1. Move the head to the 'wrPos' position.</li><li>2. Write a pattern specified by the "hpe5022_selectPattern" function for an entire track.</li><li>3. Move the head to the -'wrPos' position.</li><li>4. Write a pattern specified by the "hpe5022_selectPattern" function for an entire track.</li><li>5. Move the head at the center of track.</li><li>6. Erase specified by the "hpe5022_eraseType" function for an entire track.</li><li>7. Move the head to the read track offset position specified by the "hpe5022_readTrackOffset" function.</li><li>8. Measure a Narrow Band TAA (Erase<sub>TAA</sub>)</li><li>9. Erase the track and both side of tracks (Gaps between adjacent tracks are also erased.)</li><li>10. Move the head at the center of track.</li><li>11. Write a pattern specified by the "hpe5022_selectPattern" function for an entire track.</li><li>12. Move the head to the read track offset position specified by the "hpe5022_readTrackOffset" function.</li><li>13. Measure a Narrow Band TAA (Full<sub>TAA</sub>)</li><li>14. Repeat the steps 1 to 13 'ave' (see parameters) times if it is more than 1.</li></ol> <p>The "hpe5022_sideReading_Q" function returns the measurement result.</p>



**Equation 3-4 Side Reading Definition**

$$SideReading = ave\left(\frac{Erase_{TAA}}{Full_{TAA}}\right)$$

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- wrPos

Description Specifies the position for the side write.

If the "hpe5022\_trackOffsetCompValue" function set the head offset value, the range of the offset is changed. For example, the head offset value in "hpe5022\_trackOffsetCompValue" is set at  $1.0 \times 10^{-6}$ , the maximum and the minimum values are  $5.0 \times 10^{-6}$  and  $-7.0 \times 10^{-6}$ , respectively.

Direction IN

Unit Meter

Values

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6 \times 10^{-6}$

- ave

Description Specifies the number of measurements for averaging.

Direction IN

Values

Name	Value
hpe5022_SRR_COUN_MIN	1
hpe5022_SRR_COUN_MAX	50

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	A hardware error is detected on the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'wrPos' or/and 'ave' is out of range. Check if the head offset compensation value by using "hpe5022_trackOffsetCompValue_Q" function. If it is not 0, the 'wrPos' range is narrowed.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand had been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected. Check Head Amplifier.

## See Also

"hpe5022\_selectFilter" on page 149

"hpe5022\_eraseType" on page 355

"hpe5022\_readTrackOffset" on page 219

"hpe5022\_sideReading\_Q" on page 949

## hpe5022\_setupSideReading

**C Syntax** ViStatus hpe5022\_setupSideReading(ViSession id, ViReal64 wrPos, ViInt16 ave, ViPObject testHndl);

**Visual Basic Syntax** hpe5022\_setupSideReading(ByVal id As Long, ByVal wrPos As Double, ByVal ave As Integer, ByRef testHndl As Long) As Long

**Description** This function assigns the side reading measurement sequence to the specified test identifier. See the “hpe5022\_measureSideReading” function for details of the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_sideReading\_Q” function returns the measurement result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- wrPos
 

Description	Specifies the position for the side write.
Direction	IN
Unit	Meter
Values	Same as ‘wrPos’ in the “hpe5022_measureSideReading” function.
- ave
 

Description	Specifies the number of measurements for averaging.
Direction	IN
Values	Same as ‘ave’ in the “hpe5022_measureSideReading” function.
- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the resolution measurement by the “hpe5022_measure” function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

**Side Reading Measurement Function**

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'wrPos' and/or 'ave' is out of range. Check if the head offset compensation value by using "hpe5022_trackOffsetCompValue_Q" function. If it is not 0, the 'wrPos' range is narrowed.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

**See Also**

"hpe5022\_measureSideReading" on page 944

"hpe5022\_sideReading\_Q" on page 949

"hpe5022\_measure" on page 387

"hpe5022\_releaseSetup" on page 390

## hpe5022\_sideReading\_Q

### C Syntax

ViStatus hpe5022\_sideReading\_Q(ViSession id, ViPReal64 srr);

### Visual Basic Syntax

hpe5022\_sideReading\_Q(ByVal id As Long, ByRef srr As Double) As Long

### Description

This function returns the result of the side reading measurement sequence. Each result is the mean value of the corresponding parameter of the “hpe5022\_sideReadingData\_Q” function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- srr
 

Description	Returns the result of the side reading ratio.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The measurement result data is corrupt. Check if your measurement sequence is correct.

### See Also

- “hpe5022\_measureSideReading” on page 944
- “hpe5022\_setupSideReading” on page 947
- “hpe5022\_sideReadingData\_Q” on page 951

**Side Reading Measurement Function****hpe5022\_sideReadingDataSize\_Q****C Syntax**

```
ViStatus hpe5022_sideReadingDataSize_Q(ViSession id, ViInt32 size);
```

**Visual Basic Syntax**

```
hpe5022_sideReadingDataSize_Q(ByVal id As Long, ByRef size As Long) As Long
```

**Description**

This function returns the array size of side reading data returned by the “hpe5022\_sideReadingData\_Q” function.

**Parameters**

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **size**

Description	Returns the size of the side reading data.  The size is the same as the value of ‘ave’ specified by the “hpe5022_measureSideReading” or “hpe5022_setupSideReading” function if the measurement is done properly.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The measurement result data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_sideReadingData\_Q” on page 951

“hpe5022\_measureSideReading” on page 944

“hpe5022\_setupSideReading” on page 947

## hpe5022\_sideReadingData\_Q

### C Syntax

ViStatus hpe5022\_sideReadingData\_Q(ViSession id, ViReal64 data[]);

### Visual Basic Syntax

hpe5022\_sideReadingData\_Q(ByVal id As Long, ByRef data As Double) As Long

### Description

This function returns the side reading data of the measurement results.

When the ‘ave’ parameter in the “hpe5022\_measureSideReading” or the “hpe5022\_setupSideReading” function is set to more than one, the function allows you to get the side reading data for each revolution. If the ‘ave’ is set to 1, the output of this function will be the same as one of the “hpe5022\_sideReading\_Q” function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- data
 

Description	Returns the side reading data in array. The array size is returned by the “hpe5022_sideReadingDataSize_Q” function.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The measurement result data is corrupt. Check if your measurement sequence is correct.

### See Also

- “hpe5022\_measureSideReading” on page 944
- “hpe5022\_setupSideReading” on page 947
- “hpe5022\_sideReading\_Q” on page 949
- “hpe5022\_sideReadingDataSize\_Q” on page 950

**Side Reading Measurement Function****hpe5022\_sideReadingStatistic\_Q****C Syntax**

ViStatus hpe5022\_sideReadingStatistic\_Q(ViSession id, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax**

hpe5022\_sideReadingStatistic\_Q(ByVal id As Long, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description**

This function reports the statistics (mean, minimum, maximum and standard deviation) of the side reading measurement. The data returned by the “hpe5022\_sideReadingData\_Q” function is used for statistic analysis.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- mean
 

Description	Returns the mean value. The returned value is the same as the corresponding values returned by the “hpe5022_sideReading_Q” function.
Direction	OUT
- min
 

Description	Returns the minimum value.
Direction	OUT
- max
 

Description	Returns the maximum value.
Direction	OUT
- stdDev
 

Description	Returns the standard deviation value.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error



Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The measurement result data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_sideReadingData\_Q” on page 951

---

## Side Erase Measurement Function

This section describes the functions related with side erase measurement.

### hpe5022\_measureSideErase

**C Syntax** ViStatus hpe5022\_measureSideErase(ViSession id, ViReal64 erPos, ViInt16 ave);

**Visual Basic Syntax** hpe5022\_measureSideErase(ByVal id As Long, ByVal erPos As Double, ByVal ave As Integer) As Long

**Description** This function measures the side erase. The measurement sequences are as follows:

1. Erase specified by the “hpe5022\_eraseType” function for an entire track.
2. Write a pattern specified by the “hpe5022\_selectPattern” function for an entire track.
3. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset” function.
4. Measure a Narrow Band TAA (Full<sub>TAA</sub>).
5. Move the head to the ‘erPos’ position.
6. Erase an entire track.
7. Move the head to the -‘erPos’ position.
8. Erase an entire track.
9. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset” function.
10. Measure a Narrow Band TAA (Squeeze<sub>TAA</sub>)
11. Repeat the steps 1 to 10 ‘ave’ (see parameters) times if it is more than 1.

The “hpe5022\_sideErase\_Q” function returns the measurement result.

**Equation 3-5 Side Erase Definition**

$$SideErase = ave\left(\frac{Squeeze_{TAA}}{Full_{TAA}}\right)$$

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN

- erPos

**Description** Specifies the position for the side erase.

If the “hpe5022\_trackOffsetCompValue” function set the head offset value, the range of the offset is changed. For example, the head offset value in “hpe5022\_trackOffsetCompValue” is set at  $1.0 \times 10^{-6}$ , the maximum and the minimum values are  $5.0 \times 10^{-6}$  and  $-7.0 \times 10^{-6}$ , respectively.

**Direction** IN

**Unit** Meter

**Values**

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6 \times 10^{-6}$

- ave

**Description** Specifies the number of measurements for averaging.

**Direction** IN

**Values**

Name	Value
hpe5022_SER_COUN_MIN	1
hpe5022_SER_COUN_MAX	50

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	A hardware error is detected on the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Function Reference  
**Side Erase Measurement Function**

Error Code	Description
hpe5022_ERROR_INV_PARAMETER	The parameter 'erPos' and/or 'ave' is out of range. Check if the head offset compensation value by using "hpe5022_trackOffsetCompValue_Q" function. If it is not 0, the 'erPos' range is narrowed.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand had been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_HARD_HAMP	Hardware error is detected. Check Head Amplifier.

**See Also**

"hpe5022\_readTrackOffset" on page 219

"hpe5022\_readTrackOffset" on page 219

"hpe5022\_userPattern" on page 140

"hpe5022\_sideErase\_Q" on page 959

## hpe5022\_setupSideErase

### C Syntax

```
ViStatus hpe5022_setupSideErase(ViSession id, ViReal64 erPos, ViInt16 ave, ViPObject testHndl);
```

### Visual Basic Syntax

```
hpe5022_setupSideErase(ByVal id As Long, ByVal erPos As Double, ByVal ave As Integer, ByRef testHndl As Long) As Long
```

### Description

This function assigns the side erase measurement sequence to the specified test identifier. See the “hpe5022\_measureSideErase” function for details of the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_sideErase\_Q” function returns the measurement result.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- erPos
 

Description	Specifies the position for the side erase.
Direction	IN
Unit	Meter
Values	Same as ‘erPos’ in the “hpe5022_measureSideErase” function.
- ave
 

Description	Specifies the number of measurements for averaging.
Direction	IN
Values	Same as ‘ave’ in the “hpe5022_measureSideErase” function.
- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the resolution measurement by the “hpe5022_measure” function.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

**Side Erase Measurement Function**

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'erPos' and/or 'ave' is out of range. Check if the head offset compensation value by using "hpe5022_trackOffsetCompValue_Q" function. If it is not 0, the 'erPos' range is narrowed.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

**See Also**

"hpe5022\_measureSideErase" on page 954

"hpe5022\_sideErase\_Q" on page 959

"hpe5022\_measure" on page 387

"hpe5022\_releaseSetup" on page 390

## hpe5022\_sideErase\_Q

- C Syntax** ViStatus hpe5022\_sideErase\_Q(ViSession id, ViPReal64 ser);
- Visual Basic Syntax** hpe5022\_sideErase\_Q(ByVal id As Long, ByRef ser As Double) As Long
- Description** This function returns the result of the side erase measurement sequence. Each result is the mean value of the corresponding parameter of the “hpe5022\_sideEraseData\_Q” function.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - ser
 

Description	Returns the result of the side erase ratio.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The measurement result data is corrupt. Check if your measurement sequence is correct.

- See Also**
- “hpe5022\_measureSideReading” on page 944
  - “hpe5022\_setupSideReading” on page 947
  - “hpe5022\_sideEraseData\_Q” on page 961

**Side Erase Measurement Function****hpe5022\_sideEraseDataSize\_Q****C Syntax**

```
ViStatus hpe5022_sideEraseDataSize_Q(ViSession id, ViInt32 size);
```

**Visual Basic Syntax**

```
hpe5022_sideEraseDataSize_Q(ByVal id As Long, ByRef size As Long) As Long
```

**Description**

This function returns the array size of side erase data returned by the “hpe5022\_sideEraseData\_Q” function.

**Parameters**

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **size**

Description	Returns the size of the side reading data.  The size is the same as the value of ‘ave’ specified by the “hpe5022_measureSideErase” or “hpe5022_setupSideErase” function if the measurement is done properly.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The measurement result data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_sideEraseDataSize\_Q” on page 960

“hpe5022\_measureSideErase” on page 954

“hpe5022\_setupSideErase” on page 957



## hpe5022\_sideEraseData\_Q

**C Syntax** ViStatus hpe5022\_sideEraseData\_Q(ViSession id, ViReal64 data[]);

**Visual Basic Syntax** hpe5022\_sideEraseData\_Q(ByVal id As Long, ByRef data As Double) As Long

**Description** This function returns the side erase data of the measurement results.

When the ‘ave’ parameter in the “hpe5022\_measureSideErase” or the “hpe5022\_setupSideErase” function is set to more than one, the function allows you to get the side reading data for each revolution. If the ‘ave’ is set to 1, the output of this function will be the same as one of the “hpe5022\_sideErase\_Q” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- data
 

Description	Returns the side reading data in array. The array size is returned by the “hpe5022_sideEraseDataSize_Q” function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The measurement result data is corrupt. Check if your measurement sequence is correct.

**See Also**

- “hpe5022\_measureSideErase” on page 954
- “hpe5022\_setupSideErase” on page 957
- “hpe5022\_sideErase\_Q” on page 959
- “hpe5022\_sideEraseDataSize\_Q” on page 960

**Side Erase Measurement Function****hpe5022\_sideEraseStatistic\_Q****C Syntax**

ViStatus hpe5022\_sideEraseStatistic\_Q(ViSession id, ViPReal64 mean, ViPReal64 min, ViPReal64 max, ViPReal64 stdDev);

**Visual Basic Syntax**

hpe5022\_sideEraseStatistic\_Q(ByVal id As Long, ByRef mean As Double, ByRef min As Double, ByRef max As Double, ByRef stdDev As Double) As Long

**Description**

This function reports the statistics (mean, minimum, maximum and standard deviation) of the side erase measurement. The data returned by the “hpe5022\_sideEraseData\_Q” function is used for statistic analysis.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- mean
 

Description	Returns the mean value. The returned value is the same as the corresponding values returned by the “hpe5022_sideErase_Q” function.
Direction	OUT
- min
 

Description	Returns the minimum value.
Direction	OUT
- max
 

Description	Returns the maximum value.
Direction	OUT
- stdDev
 

Description	Returns the standard deviation value.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.

Error Code	Description
hpe5022_ERROR_DATA_CORRUPT	The measurement result data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_sideEraseData\_Q” on page 961

---

## Track Offset Compensation Function

This section describes the programming functions of track offset compensation. This functions compensated the read head position according to the read back signal from burst patterns. See the “Track Offset Compensation” on page 75 for a sample programming.

### hpe5022\_trackOffsetCompProfile

#### C Syntax

```
ViStatus hpe5022_trackOffsetCompProfile(ViSession id, ViInt16 size, ViReal64 rang);
```

#### Visual Basic Syntax

```
hpe5022_trackOffsetCompProfile(ByVal id As Long, ByVal size As Integer, ByVal rang As Double) As Long
```

#### Description

This function defines the track profile measurement in the calibration sequence of the track offset compensation. The “hpe5022\_writeTrackOffsetCompPattern” function executes the calibration sequence.

#### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- size

Description Specifies the number of measurement points for the track profile measurement in the calibration sequence.

Direction IN

Values

Name	Value
hpe5022_TRACK_PROFILE_SIZE_MIN	1
hpe5022_TRACK_PROFILE_SIZE_MAX	201

Preset Value 51

- rang

Description Specifies the offset range for the track profile measurements in the calibration sequence.

Direction IN

Values

Name	Value
hpe5022_TRACK_OFFSET_MAX	$6 \times 10^{-6}$

Preset Value  $3 \times 10^{-6}$

Unit Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'size', and/or 'rang' is out of range.

**See Also**

“hpe5022\_trackOffsetCompProfile\_Q” on page 966

“hpe5022\_writeTrackOffsetCompPattern” on page 976

## hpe5022\_trackOffsetCompProfile\_Q

- C Syntax** ViStatus hpe5022\_trackOffsetCompProfile\_Q (ViSession id, ViPInt16 size, ViPReal64 rang);
- Visual Basic Syntax** hpe5022\_trackOffsetCompProfile\_Q(ByVal id As Long, ByRef size As Integer, ByRef rang As Double) As Long
- Description** This function defines the track profile measurement in the calibration sequence of the track offset compensation.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - size
    - Description Returns the number of measurement points for the track profile measurement in the calibration sequence.
    - Direction OUT
  - rang
    - Description Returns the offset range for the track profile measurements in the calibration sequence.
    - Direction OUT
    - Unit Meter

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_trackOffsetCompProfile" on page 964

## hpe5022\_trackOffsetCompPattern

**C Syntax** ViStatus hpe5022\_trackOffsetCompPattern(ViSession id, ViReal64 freq, ViReal64 offset, ViReal64 aper);

**Visual Basic Syntax** hpe5022\_trackOffsetCompPattern(ByVal id As Long, ByVal freq As Double, ByVal offset As Double, ByVal aper As Double) As Long

**Description** This function defines the burst pattern. It defined by frequency, the burst offset position and the aperture time. When “hpe5022\_trackOffsetCompPatternAuto” function is executed, this parameters are set automatically. The “hpe5022\_writeTrackOffsetCompPattern” function writes the burst pattern. See the chapter 5 in the operation manual.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  
- freq
 

Description	Specifies the frequency of the burst pattern. The range of frequency can be queried by the “hpe5022_channelBitRateRange_Q” function.
Direction	IN
Preset Value	$100 \times 10^{-6}$
Unit	flux/sec
  
- offset
 

Description	Specifies the offset position of burst from the track center.  If the “hpe5022_trackOffsetCompValue” function set the head offset value, the range of the offset is changed. For example, the head offset value in “hpe5022_trackOffsetCompValue” is set at $1.0 \times 10^{-6}$ , the maximum and the minimum values are $5.0 \times 10^{-6}$ and $-7.0 \times 10^{-6}$ , respectively.				
Direction	IN				
Values					
	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Name</th> <th style="text-align: left;">Value</th> </tr> </thead> <tbody> <tr> <td>hpe5022_TRACK_OFFSET_MAX</td> <td><math>6 \times 10^{-6}</math></td> </tr> </tbody> </table>	Name	Value	hpe5022_TRACK_OFFSET_MAX	$6 \times 10^{-6}$
Name	Value				
hpe5022_TRACK_OFFSET_MAX	$6 \times 10^{-6}$				
Preset Value	$1 \times 10^{-6}$				

**Track Offset Compensation Function**

Unit            Meter

- aper

Description        Specifies the aperture time of burst pattern. The burst pattern is written during this period from the index pulse. When the gate (hpe5022\_seqBaseSegGateConfig and hpe5022\_seqSaGateConfig) are defined in User Define Sequence, the reference start point is not index pulse but the time at gate open.

Direction        IN

Values

Name	Value
hpe5022_TRACK_OFFSET_COMP_PAT_APER_MIN	$1 \times 10^{-3}$
hpe5022_TRACK_OFFSET_COMP_PAT_APER_MAX	$10 \times 10^{-3}$

Preset Value        hpe5022\_TRACK\_OFFSET\_COMP\_PAT\_APER\_MIN

Unit                Second

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'freq', 'offset' and/or 'aper' is out of range.

**See Also**

“hpe5022\_trackOffsetCompPattern\_Q” on page 969

“hpe5022\_trackOffsetCompPatternAuto” on page 974

“hpe5022\_writeTrackOffsetCompPattern” on page 976



## hpe5022\_trackOffsetCompPattern\_Q

- C Syntax** ViStatus hpe5022\_trackOffsetCompPattern\_Q(ViSession id, ViReal64 freq, ViReal64 offset, ViReal64 aper);
- Visual Basic Syntax** hpe5022\_trackOffsetCompPattern\_Q(ByVal id As Long, ByVal freq As Double, ByVal offset As Double, ByVal aper As Double) As Long
- Description** This function returns the burst pattern. The frequency, the burst offset position and the aperture time can be determined.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- freq
 

Description	Returns the frequency of the burst pattern.
Direction	OUT
Unit	flux/sec
- offset
 

Description	Returns the offset position of burst from the track center.
Direction	OUT
Unit	Meter
- aper
 

Description	Returns the aperture time of burst pattern. The burst pattern is writing during this period from the index pulse.
Direction	OUT
Unit	Second

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_burstPatternConfig\_Q" on page 1000

Function Reference

**Track Offset Compensation Function**

“hpe5022\_trackOffsetCompPattern” on page 967

## hpe5022\_trackOffsetCompPatternPosition

- C Syntax** ViStatus hpe5022\_trackOffsetCompPatternPosition (ViSession id, ViReal64 compPos);
- Visual Basic Syntax** hpe5022\_trackOffsetCompPatternPosition(ByVal id As Long, ByVal compPos As Double) As Long
- Description** This function specifies the position of the whole burst pattern. See the chapter 5 in the operation manual.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  
- compPos
 

Description	Specifies the offset position of the whole burst pattern from the track center.
Direction	IN
Values	

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6 \times 10^{-6}$

Preset Value	0
Unit	Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'compPos' is out of range.

**See Also** "hpe5022\_writeTrackOffsetCompPattern" on page 976

Function Reference

**Track Offset Compensation Function**

“hpe5022\_trackOffsetCompPatternPosition\_Q” on page 973

## hpe5022\_trackOffsetCompPatternPosition\_Q

**C Syntax** ViStatus hpe5022\_trackOffsetCompPatternPosition\_Q (ViSession id, ViPReal64 compPos);

**Visual Basic Syntax** hpe5022\_trackOffsetCompPatternPosition\_Q(ByVal id As Long, ByRef compPos As Double) As Long

**Description** This function returns the position of the whole burst pattern.

- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - compPost
 

Description	Returns the offset position of the whole burst pattern from the track center.
Direction	OUT
Unit	Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_trackOffsetCompPatternPosition" on page 971

## **hpe5022\_trackOffsetCompPatternAuto**

### **C Syntax**

```
ViStatus hpe5022_trackOffsetCompPatternAuto(ViSession id);
```

### **Visual Basic Syntax**

```
hpe5022_trackOffsetCompPatternAuto(ByVal id As Long) As Long
```

### **Description**

This function defines the burst pattern automatically, in other words, the parameters in “hpe5022\_trackOffsetCompPattern” function is set automatically after this function is executed. The values can be queried by the “hpe5022\_trackOffsetCompPattern\_Q” function. This function should be executed after the “hpe5022\_trackOffsetCompProfile” function.

1. Set the aperture time for 2m sec. If the aperture time of 2m sec is over half of the track, the aperture time set at half of the track.
2. Perform a narrow band TAA roll off measurement from channel bit rate 50Mbps to 250Mbps (step: 10Mbps) and find the frequency at the peak narrow band TAA. The frequency is set as a burst pattern frequency.
3. Perform a track profile measurement and find the write track width. The offset position of burst pattern is set at the half value of the write track width.

The parameters of track profile measurement are:

Range: -rang to +rang defined by “hpe5022\_trackOffsetCompProfile”

Points: size defined by “hpe5022\_trackOffsetCompProfile”

Pattern: The frequency defined by step 2 and its pattern is 1T.

### **Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindown had been turned off. Turn it on before executing this function. See the “hpe5022_driveState” function.

**See Also**

“hpe5022\_trackOffsetCompPattern” on page 967

“hpe5022\_trackOffsetCompPattern\_Q” on page 969

“hpe5022\_trackOffsetCompProfile” on page 964

**Track Offset Compensation Function****hpe5022\_writeTrackOffsetCompPattern****C Syntax**

```
ViStatus hpe5022_writeTrackOffsetCompPattern(ViSession id);
```

**Visual Basic Syntax**

```
hpe5022_writeTrackOffsetCompPattern(ByVal id As Long) As Long
```

**Description**

This function executes the calibration sequence and writes the burst pattern.

- Calibration Sequence
  1. Reset the offset value (The value is returned by the “hpe5022\_trackOffsetCompValue” function) at 0.
  2. Perform a band erase according to the offset range and points specified by the “hpe5022\_trackOffsetCompProfile” function.
  3. Move the head to the -’offset’ position specified by the “hpe5022\_trackOffsetCompPattern” function.
  4. Write a 1T pattern at the frequency specified by the “hpe5022\_trackOffsetCompPattern” function.
  5. Perform a track profile measurement (TAAa) according to the offset range and points specified by the “hpe5022\_trackOffsetCompProfile” function.
  6. Perform a band erase according to the offset range and points specified by the “hpe5022\_trackOffsetCompProfile” function.
  7. Move the head to the +’offset’ position specified by the “hpe5022\_trackOffsetCompPattern” function.
  8. Write a 1T pattern at the frequency specified by the “hpe5022\_trackOffsetCompPattern” function.
  9. Perform a track profile measurement (TAAb) according to the offset range and points specified by the “hpe5022\_trackOffsetCompProfile” function.
  10. Calculate the position error signal (PES) from TAAa and TAAb and approximates a PES line.
- Write Burst Pattern Sequence
  1. Perform a band erase according to the offset range and points specified by the “hpe5022\_trackOffsetCompProfile” function.
  2. Write burst patterns specified by the “hpe5022\_trackOffsetCompPattern” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN



## Return Values

Completion Code	Description
VI_SUCCESS	No error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand had been turned off. Turn it on before executing this function. See the “hpe5022_driveState” function.

## See Also

“hpe5022\_trackOffsetCompProfile” on page 964

“hpe5022\_trackOffsetCompPattern” on page 967

“hpe5022\_trackOffsetCompPatternAuto” on page 974

## **hpe5022\_trackOffsetCompPatternState**

**C Syntax** ViStatus hpe5022\_trackOffsetCompPatternState(ViSession id, ViBoolean stat);

**Visual Basic Syntax** hpe5022\_trackOffsetCompPatternState(ByVal id As Long, ByVal stat As Integer) As Long

**Description** This function activates the Track offset Compensation function. When this function is set at TURE state, the data pattern is written and read besides the burst pattern area.

A data pattern are written after the burst pattern during a write sequence in a measurement sequence such as hpe5022\_measureTAA (If hpe5022\_SEQ\_ER\_WR\_M or hpe5022\_SEQ\_WR\_M is selected). And, the burst patterns are ignored in measuring a parameter such as TAA during a read sequence in a measurement sequence.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- Stat
 

Description	Selects the track offset compensation pattern state.
Direction	IN
Values	

Name	Value	Description
VI_TRUE	1	Track Offset Compensation function is activated
VI_FALSE	0	Track Offset Compensation function is inactivated.

Preset Value VI\_FALSE

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified is invalid.

**See Also**

“hpe5022\_trackOffsetCompPatternState\_Q” on page 980

“hpe5022\_executeTrackOffsetComp” on page 983

## hpe5022\_trackOffsetCompPatternState\_Q

**C Syntax** ViStatus hpe5022\_trackOffsetCompPatternState\_Q(ViSession id, ViPBoolean stat);

**Visual Basic Syntax** hpe5022\_trackOffsetCompPatternState\_Q(ByVal id As Long, ByRef stat As Integer) As Long

**Description** This function returns the track offset compensation pattern state.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- stat
  - Description Returns the track offset compensation pattern state.
  - Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified is invalid.

**See Also** "hpe5022\_trackOffsetCompPatternState" on page 978

## hpe5022\_trackOffsetCompRevolution

**C Syntax** ViStatus hpe5022\_trackOffsetCompRevolution (ViSession id, ViInt16 rev);

**Visual Basic Syntax** hpe5022\_trackOffsetCompRevolution(ByVal id As Long, ByVal rev As Integer) As Long

**Description** This function specifies the average counts to measure a position error signal (PES) in the “hpe5022\_executeTrackOffsetComp” function. The burst pattern is measured for revolutions specified by this parameter and calculates a PES from the averaged result.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  
- rev
 

Description	Specifies the average counts to measure a position error signal (PES). The burst pattern is measured for revolutions specified by this parameter and calculates a PES from the averaged result.
Direction	IN
Values	

Name	Value
hpe5022_TRACK_OFFSET_COMP_REV_MIN	1
hpe5022_TRACK_OFFSET_COMP_REV_MAX	50

Preset Value hpe5022\_TRACK\_OFFSET\_COMP\_REV\_MIN

**Return Values**

Completion Code	Description
VI_SUCCESS	No error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘rev’ is out of range.

**See Also** “hpe5022\_executeTrackOffsetComp” on page 983

## hpe5022\_trackOffsetCompRevolution\_Q

- C Syntax** ViStatus hpe5022\_trackOffsetCompRevolution\_Q(ViSession id, ViPInt16 rev);
- Visual Basic Syntax** hpe5022\_trackOffsetCompRevolution\_Q(ByVal id As Long, ByRef rev As Integer) As Long
- Description** This function returns the average counts to measure a position error signal (PES) in the “hpe5022\_executeTrackOffsetComp” function.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - rev
    - Description Returns the average counts to measure a position error signal (PES).
    - Direction OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified is invalid.

**See Also** “hpe5022\_trackOffsetCompRevolution” on page 981

## hpe5022\_executeTrackOffsetComp

### C Syntax

```
ViStatus hpe5022_executeTrackOffsetComp(ViSession id);
```

### Visual Basic Syntax

```
hpe5022_executeTrackOffsetComp(ByVal id As Long) As Long
```

### Description

This function reads the burst pattern to measure position error signal and changes the track offset value. In other words, the track offset is compensated automatically during a measurement. The “hpe5022\_trackOffsetCompValue\_Q” function returns the track offset value. Before this function is executed, the “hpe5022\_trackOffsetCompPatternState” function must be set at TURE state and “hpe5022\_writeTrackOffsetCompPattern” also must be done in order to write the burst patterns.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

### Return Values

Completion Code	Description
VI_SUCCESS	No error

Error Code	Description
hpe5022_ERROR_CAL_DATA_CORRUPT	Amplitude calibration for 3GHz Spectrum Analyzer has not been done.
hpe5022_ERROR_INV_ID	The handle specified is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand had been turned off. Turn it on before executing this function. See the “hpe5022_driveState” function

### See Also

“hpe5022\_trackOffsetCompPatternState” on page 978  
 “hpe5022\_trackOffsetCompValue\_Q” on page 986

**Track Offset Compensation Function****hpe5022\_trackOffsetCompValue****C Syntax**

```
ViStatus hpe5022_trackOffsetCompValue(ViSession id, ViReal64 offset);
```

**Visual Basic Syntax**

```
hpe5022_trackOffsetCompValue(ByVal id As Long, ByVal offset As Double) As Long
```

**Description**

This function gives the offset for the origin of whole data area to compensate a drift of track position. The positions for all tracks are shifted by this compensation. After the “hpe5022\_executeTrackOffsetComp” function is executed, the offset value is changed automatically. In other hand, this function allows you to set the track offset manually. It means this function is used only when user wants to change track offset manually. This function affects the range of the track offset. For example, this is set at  $1.0 \times 10^{-6}$ , the maximum and the minimum values in the track offset functions such as “hpe5022\_readTrackOffset” are  $5.0 \times 10^{-6}$  and  $-6.0 \times 10^{-6}$ , respectively. See the track offset compensation in the chapter 5 of the operation manual.

This offset value is reset at 0 when the “hpe5022\_writeTrackOffsetCompPattern” function is executed.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- offset

Description Specifies the track compensated position.

Direction IN

Values

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6.0 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6.0 \times 10^{-6}$

Preset Value 0

Unit Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No error



Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'offset' is out of range.

**See Also**

- “hpe5022\_writeTrackOffsetCompPattern” on page 976
- “hpe5022\_executeTrackOffsetComp” on page 983
- “hpe5022\_trackOffsetCompValue\_Q” on page 986
- “hpe5022\_readTrackOffset” on page 219
- “hpe5022\_writeTrackOffset” on page 222
- “hpe5022\_writeMultiple” on page 330
- “hpe5022\_eraseMultiple” on page 364
- “hpe5022\_measureTrackProfile” on page 615
- “hpe5022\_tripleTrackPositionConfig” on page 707
- “hpe5022\_measureTripleTrack” on page 714

## hpe5022\_trackOffsetCompValue\_Q

- C Syntax** ViStatus hpe5022\_trackOffsetCompValue\_Q(ViSession id, ViPReal64 offset);
- Visual Basic Syntax** hpe5022\_trackOffsetCompValue\_Q(ByVal id As Long, ByRef offset As Double) As Long
- Description** This function returns the position compensation distance. After the “hpe5022\_executeTrackOffsetComp” function is executed, this position compensation is executed automatically. This function returns how long it is compensated.
- This value is reset at 0 when the “hpe5022\_writeTrackOffsetCompPattern” function is executed.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - offset
    - Description Returns the position compensation distance.
    - Direction OUT
    - Unit Meter

### Return Values

Completion Code	Description
VI_SUCCESS	No error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified is invalid.

- See Also** “hpe5022\_executeTrackOffsetComp” on page 983  
“hpe5022\_trackOffsetCompValue” on page 984  
“hpe5022\_writeTrackOffsetCompPattern” on page 976

## hpe5022\_measureTrackOffsetPositionError

### C Syntax

```
ViStatus hpe5022_measureTrackOffsetPositionError(ViSession id);
```

### Visual Basic Syntax

```
hpe5022_measureTrackOffsetPositionError(ByVal id As Long) As Long
```

### Description

This function reads the burst pattern to measure the position error signal (PES). The “hpe5022\_executeTrackOffsetComp” function measures the PES and compensates the head position according to the values. In the other hand, this function only measures the PES and does not change the head position. Before this function is executed, the “hpe5022\_trackOffsetCompPatternState” function must be set at TURE state and “hpe5022\_writeTrackOffsetCompPattern” also must be done in order to write the burst patterns.

The “hpe5022\_trackOffsetPositionError\_Q” function returns the result.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

### Return Values

Completion Code	Description
VI_SUCCESS	No error

Error Code	Description
hpe5022_ERROR_CAL_DATA_CORRUPT	Amplitude calibration for 3GHz Spectrum Analyzer has not been done.
hpe5022_ERROR_INV_ID	The handle specified is invalid.
hpe5022_ERROR_CAL_DATA_CORRUPT	The burst pattern is not written. Execute “hpe5022_writeTrackOffsetCompPattern” before this function.
hpe5022_ERROR_PES_DATA	The current head position is far from the center of the burst pattern.

### See Also

“hpe5022\_trackOffsetPositionError\_Q” on page 989

“hpe5022\_trackOffsetCompPatternState” on page 978

**Track Offset Compensation Function**

“hpe5022\_writeTrackOffsetCompPattern” on page 976

“hpe5022\_executeTrackOffsetComp” on page 983

## hpe5022\_trackOffsetPositionError\_Q

**C Syntax** ViStatus hpe5022\_trackOffsetPositionError\_Q(ViSession id, ViPReal64 position);

**Visual Basic Syntax** hpe5022\_trackOffsetPositionError\_Q(ByVal id As Long, ByRef position As Double) As Long

**Description** This function returns the position measured by the “hpe5022\_measureTrackOffsetPositionError” function.

If the position error exceeds approximately one-third of the write track width, the “hpe5022\_ERROR\_DATA\_CORRUPT” error may be returned. This is because the position error can monitor within the range that the Position Error Signal (PES) is linear.

When the error is returned though the position error is within the one-third of the write track width, increase the ‘size’ or reduce the ‘rang’ of the “hpe5022\_trackOffsetCompProfile” function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- position
 

Description	Returns the head position from the track center.
Direction	OUT
Unit	Meter

### Return Values

Completion Code	Description
VI_SUCCESS	No error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified is invalid.
hpe5022_ERROR_DATA_CORRUPT	Data is corrupt. Execute “hpe5022_measureTrackOffsetPositionError” before this function.

### See Also

- “hpe5022\_measureTrackOffsetPositionError” on page 987
- “hpe5022\_trackOffsetCompPatternPosition” on page 971
- “hpe5022\_trackOffsetCompProfile” on page 964


## Track Search Function

This section describes the functions of a track search. This function searches a track in the specified area by making a track profile measurement.

### **hpe5022\_searchTrack**

<b>C Syntax</b>	ViStatus hpe5022_searchTrack(ViSession id, ViReal64 range, ViReal64 pitch);
<b>Visual Basic Syntax</b>	hpe5022_searchTrack(ByVal id As Long, ByVal range As Double, ByVal pitch As Double) As Long
<b>Description</b>	<p>This function searches a track by performing a track profile measurement and move the current head positions at a peak of the track profile waveform.</p> <ol style="list-style-type: none"><li>1. Move a track center position at the <math>-(\text{range})+4\times 10^{-6}</math>[m] by actuating X-Y stages.</li><li>2. Measure TAA track profile (same as hpe5022_measureTrackProfile: seqType: hpe5022_SEQ_M mode: hpe5022_TP_FORWARD measFunc: hpe5022_MEAS_TAA points: <math>\text{mod}(12\times 10^{-6}/\text{pitch}+1)</math> offset pitch: 'pitch')</li><li>3. Move a track center position by <math>+8\times 10^{-6}</math>[m] by actuating X-Y stages.</li><li>4. Repeat the step 2 and 3 until the track center position reaches the (+range).</li><li>5. Move the head at the position where the TAA is maximum by actuating X-Y stages.</li><li>6. Measure TAA track profile (same as hpe5022_measureTrackProfile: seqType: hpe5022_SEQ_M mode: hpe5022_TP_FORWARD measFunc: hpe5022_MEAS_TAA points: 201 offset pitch: <math>60\times 10^{-9}</math>)</li><li>7. Move the head at the position where the TAA is maximum, by actuating X-Y stages.</li></ol>

Figure 3-37 Track Search

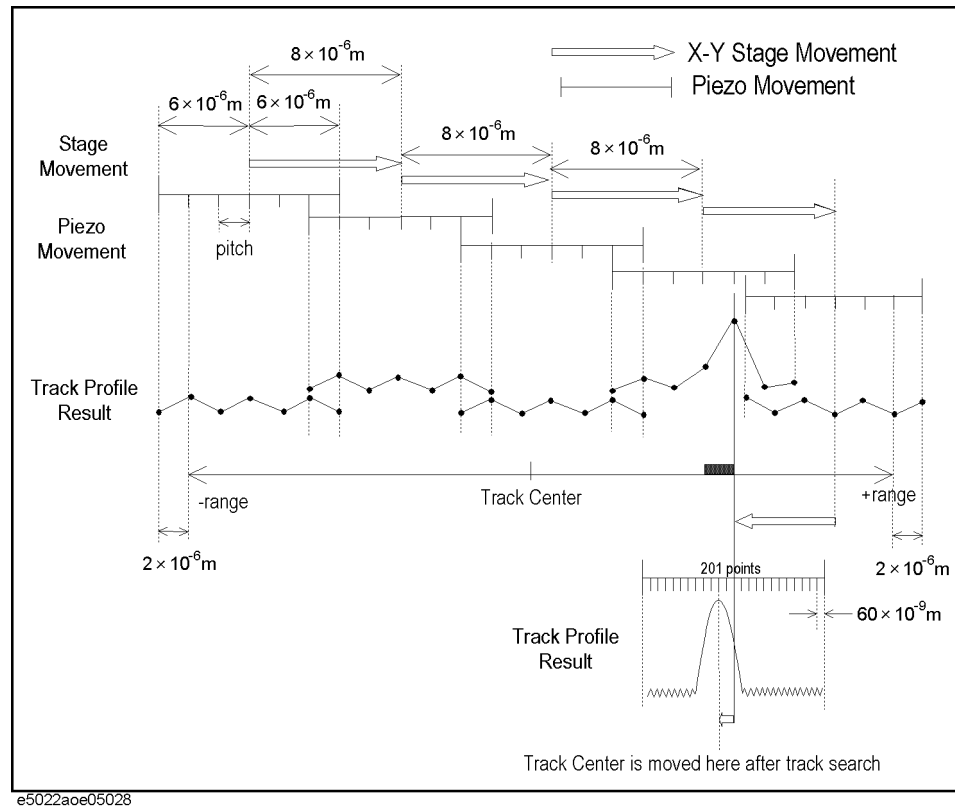

Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- range
  - Description Specifies a range for searching a peak. When the head position is into the inhibit area or beyond the media size, the error message is displayed.
  - Direction IN
  - Values
 

Name	Value
hpe5022_DISK_RANGE_MAX	$47.5 \times 10^{-3}$
  - Unit Meter
- pitch
  - Description Specifies an approximate write track width. This value is

Function Reference

Function Reference  
**Track Search Function**

used for the pitch of the first rough track profile measurement in order to find the track. See Figure 3-37.

Direction IN

Values

Name	Value
hpe5022_SEARCH_TRACK_PITCH_MIN	$60 \times 10^{-9}$
hpe5022_SEARCH_TRACK_PITCH_MAX	$6 \times 10^{-6}$

Unit Meter

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'range' or/and 'pitch' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spindrive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_SEARCH_TRACK_FAILED	The level of input signal in a track profile measurement during the track search is not properly.

**See Also**



## Write Bursts Function

This section describes the programming functions of write-bursts. This function is only used when users want to only write burst patterns. When user wants to compensate the head position, use “Track Offset Compensation Function”. This function includes to write a burst pattern automatically. See “Track Offset Compensation Function” on page 964.

### hpe5022\_writeBurst

#### C Syntax

ViStatus hpe5022\_writeBurst(ViSession id, ViInt16 segment, ViReal64 offset);

#### Visual Basic Syntax

hpe5022\_writeBurst(ByVal id As Long, ByVal segment As Integer, ByVal offset As Double) As Long

#### Description

This function writes the burst pattern. When this function is executed, IT pattern will be written at a burst length specified by the “hpe5022\_burstPatternConfig” and at a frequency specified by “hpe5022\_burstFrequencyConfig”.

#### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- segment
 

Description	Specifies the number of segments per track.
Direction	IN
Values	Specifies the maximum and minimum segments per track.

Name	Value
hpe5022_BURST_SEG_PER_TRACK_MIN	1
hpe5022_BURST_SEG_PER_TRACK_MAX	128

Timing Limitation
$\text{segmTime} = 60 / \text{RPM} / \text{segment}$
RPM = spindle speed, when spindle speed $\geq 2400$ rpm
RPM = 2400, when spindle speed $< 2400$ rpm
$(\text{segmTime} - (\text{gateDelay} + \text{gateAper})) \geq 10 \times 10^{-6}$

Function Reference  
**Write Bursts Function**

- offset

Description Specifies the write offset position from the track center.

Direction IN

Unit Meter

Values Specifies the maximum and minimum write offset values.

Name	Value
hpe5022_TRACK_OFFSET_MIN	$-6 \times 10^{-6}$
hpe5022_TRACK_OFFSET_MAX	$6 \times 10^{-6}$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'segment', and/or 'offset' is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

**See Also**

"hpe5022\_burstPatternConfig" on page 997

"hpe5022\_burstGateConfig" on page 1004

## hpe5022\_setupWriteBurst

- C Syntax** ViStatus hpe5022\_setupWriteBurst(ViSession id, ViInt16 segment, ViReal64 offset, ViPObject testHndl);
- Visual Basic Syntax** hpe5022\_setupWriteBurst(ByVal id As Long, ByVal segment As Integer, ByVal offset As Double, ByRef testHndl As Long) As Long
- Description** This function sets the write burst sequence to the test identifier. Refer to the “hpe5022\_measure” function for details about the sequence. This function does not execute measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - segment
 

Description	Specifies the number of segments per track.
Direction	IN
Values	Specifies the maximum and minimum segments per track.

Name	Value
hpe5022_BURST_SEG_PER_TRACK_MIN	1
hpe5022_BURST_SEG_PER_TRACK_MAX	128
  - offset
 

Description	Specifies the write offset position from the track center.
Direction	IN
Unit	Meter
Values	Specifies the maximum and minimum write offset values.

Name	Value
hpe5022_TRACK_OFFSET_MIN	-6×10 <sup>-6</sup>
hpe5022_TRACK_OFFSET_MAX	6×10 <sup>-6</sup>
  - testHndl
 

Description	Returns the test identifier. This identifier is used to execute write burst using the “hpe5022_measure” function.
-------------	-------------------------------------------------------------------------------------------------------------------

Function Reference  
**Write Bursts Function**

Direction      OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'segment', and/or 'offset' is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

**See Also**      "hpe5022\_measure" on page 387


## hpe5022\_burstPatternConfig

**C Syntax** ViStatus hpe5022\_burstPatternConfig(ViSession id, ViReal64 burstStart, ViReal64 burstLength);

**Visual Basic Syntax** hpe5022\_burstPatternConfig(ByVal id As Long, ByVal burstStart As Double, ByVal burstLength As Double) As Long

**Description** This function controls the timing sequence of the burst pattern.

**Figure 3-38 Write Timing of Burst Pattern**

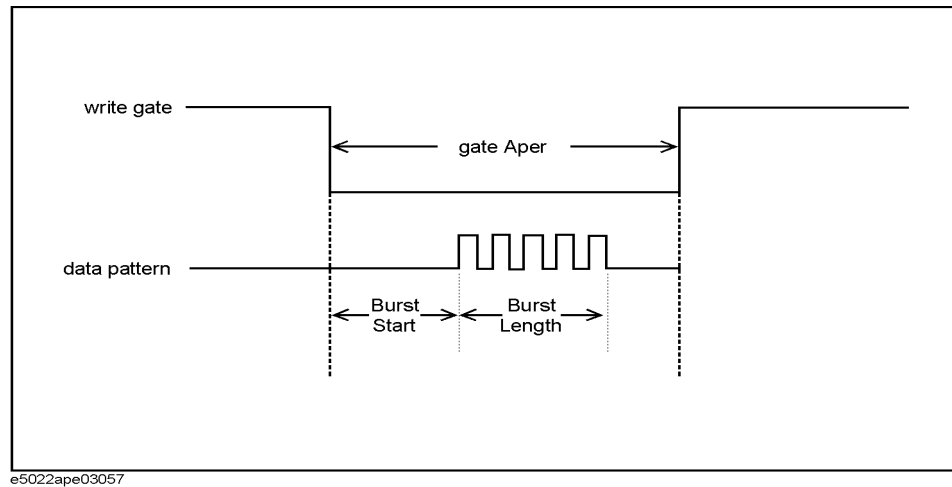

**NOTE** Due to internal constraints of E5037A (data generator module), data writing is actually delayed by a value of  $30 \times 16T$  ( $T=1/f$ , where  $f$  is the bit rate of the burst pattern, so  $T$  is  $1/\text{bps}$ ). Thus, the user must compensate this value when you specify the burst length. Refer to Figure 3-88 of the operation manual for details.

<b>Parameters</b>	<ul style="list-style-type: none"> <li>• id <ul style="list-style-type: none"> <li>Description Specifies the system identifier. This is given by the "hpe5022_init" function.</li> <li>Direction IN</li> </ul> </li> <li>• burstStart <ul style="list-style-type: none"> <li>Description Specifies the time distance between start of the write gate and burst start.</li> <li>Direction IN</li> <li>Preset Value hpe5022_BURST_START_MIN</li> <li>Unit Second</li> <li>Values Specifies the maximum and minimum time to start writing</li> </ul> </li> </ul>
-------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Function Reference  
**Write Bursts Function**

the burst pattern.

Name	Value
hpe5022_BURST_START_MIN	0
hpe5022_BURST_START_MAX	100×10 <sup>-6</sup>

- **burstLength**

**Description** Specifies the length of time to write the burst pattern. The ‘burstStart’ and ‘burstLength’ parameters must be specified within the parameter limits of “gateAper” in the “hpe5022\_burstGateConfig” function.

Write Burst Limit
hpe5022_BURST_APER_MIN ≤ ( <b>burstStart</b> + <b>burstLength</b> ) ≤ hpe5022_BURST_APER_MAX

**Direction** IN  
**Preset Value** hpe5022\_BURST\_LENGTH\_MIN  
**Unit** Second  
**Values** Specifies the maximum and minimum time to write the burst pattern.

Name	Value
hpe5022_BURST_LENGTH_MIN	0
hpe5022_BURST_LENGTH_MAX	100×10 <sup>-6</sup>

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘burstStart’, and/or ‘burstLength’ is out of range.

**See Also**

“hpe5022\_burstPatternConfig\_Q” on page 1000

“hpe5022\_burstGateConfig” on page 1004

## **hpe5022\_burstPatternConfig\_Q**

- C Syntax** ViStatus hpe5022\_burstPatternConfig\_Q(ViSession id, ViPReal64 burstStart, ViPReal64 burstLength);
- Visual Basic Syntax** hpe5022\_burstPatternConfig\_Q(ByVal id As Long, ByRef burstStart As Double, ByRef burstLength As Double) As Long
- Description** This function returns the specified timing sequence of the burst pattern.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - burstStart
    - Description Returns the time distance between the start of the write gate and burst start.
    - Unit Second
    - Direction OUT
  - burstLength
    - Description Returns the length of time to write the burst pattern.
    - Unit Second
    - Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

- See Also** "hpe5022\_burstPatternConfig" on page 997  
"hpe5022\_burstGateConfig" on page 1004



## hpe5022\_burstFrequencyConfig

**C Syntax** ViStatus hpe5022\_burstFrequencyConfig(ViSession id, ViReal64 freq);

**Visual Basic Syntax** hpe5022\_burstFrequencyConfig(ByVal id As Long, ByVal freq As Double) As Long

**Description** This function controls the frequency of the burst pattern. IT pattern is always used in Burst write.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- freq
 

Description	Specifies the bit rate of the burst pattern. The upper and lower limits of the frequency can be queried by the function "hpe5022_channelBitRateRange_Q" on page 118.
Direction	IN
Preset Value	100×10 <sup>6</sup>
Unit	bps
Values	Specifies the maximum and minimum frequencies of the burst pattern.

Name	Value
Minimum Frequency	Use the "hpe5022_channelBitRateRange_Q" function to know the minimum frequency.
Maximum Frequency	Use the "hpe5022_channelBitRateRange_Q" function to know the maximum frequency.

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Write Bursts Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'freq' is out of range.

**See Also**

“hpe5022\_burstFrequencyConfig\_Q” on page 1003

## hpe5022\_burstFrequencyConfig\_Q

**C Syntax** ViStatus hpe5022\_burstFrequencyConfig\_Q(ViSession id, ViPReal64 freq);

**Visual Basic Syntax** hpe5022\_burstFrequencyConfig\_Q(ByVal id As Long, ByRef freq As Double) As Long

**Description** This function returns the specified frequency of the burst pattern.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- freq
 

Description	Returns the specified frequency of the burst pattern.
Unit	Second
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_burstFrequencyConfig" on page 1001


### hpe5022\_burstGateConfig

**C Syntax** ViStatus hpe5022\_burstGateConfig(ViSession id, ViReal64 gateDelay, ViReal64 gateAper);

**Visual Basic Syntax** hpe5022\_burstGateConfig(ByVal id As Long, ByVal gateDelay As Double, ByVal gateAper As Double) As Long

**Description** This function controls the timing of the write gate.

**Figure 3-39 Write Gate Timing**

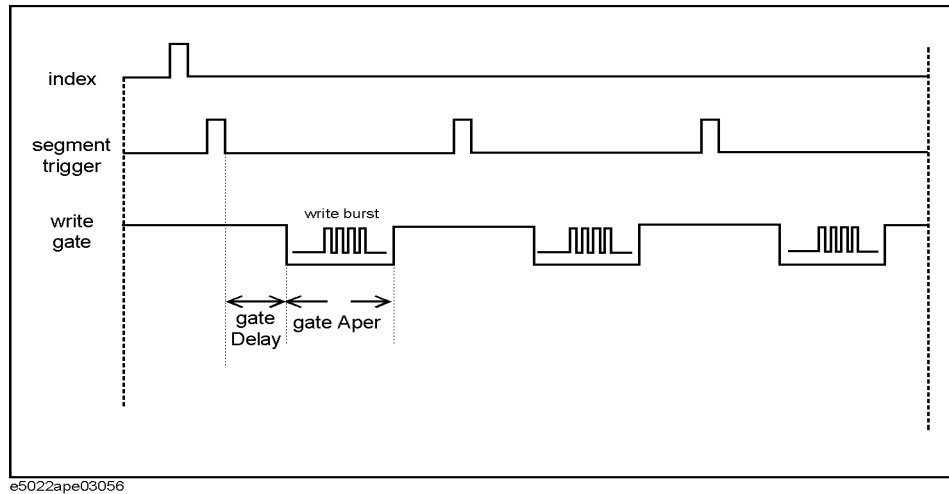

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- gateDelay
  - Description Specifies the time distance between segment trigger and write gate.
  - Direction IN
  - Preset Value hpe5022\_BURST\_DEL\_MIN
  - Unit Second
  - Values Specifies the maximum and minimum amount of delay time before opening the write gate.

Name	Value
hpe5022_BURST_DEL_MIN	0
hpe5022_BURST_DEL_MAX	10×10 <sup>-3</sup>

- gateAper

**Description** Specifies the length of time to open the write gate. The ‘burstStart’ and ‘burstLength’ parameters of the “hpe5022\_burstPatternConfig” function must be specified within the parameter limits of ‘gateAper’.

**Write Burst Limit**

$$\text{hpe5022\_BURST\_APER\_MIN} \leq (\text{burstStart} + \text{burstLength}) \leq \text{hpe5022\_BURST\_APER\_MAX}$$

**Direction** IN

**Preset Value** hpe5022\_BURST\_APER\_MIN

**Unit** Second

**Values** Specifies the maximum and minimum length of time to open the write gate.

Name	Value
hpe5022_BURST_APER_MIN	1×10 <sup>-6</sup>
hpe5022_BURST_APER_MAX	100×10 <sup>-6</sup>

**Timing Limitation**

$$\text{segmTime} = 60 / \text{Spindle Speed [rpm]} / \text{segment}$$

RPM = spindle speed , when spindle speed ≥ 2400 rpm

RPM = 2400, when spindle speed < 2400 rpm

$$(\text{segmTime} - (\text{gateDelay} + \text{gateAper})) \geq 10 \times 10^{-6}$$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘gateDelay’, and/or ‘gateLength’ is out of range.

Function Reference  
**Write Bursts Function**

**See Also**

“hpe5022\_burstGateConfig\_Q” on page 1007

## hpe5022\_burstGateConfig\_Q

- C Syntax** ViStatus hpe5022\_burstGateConfig\_Q(ViSession id, ViPReal64 gateDelay, ViPReal64 gateAper);
- Visual Basic Syntax** hpe5022\_burstGateConfig\_Q(ByVal id As Long, ByRef gateDelay As Double, ByRef gateAper As Double) As Long
- Description** This function returns the specified timing of the write gate.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - gateDelay
 

Description	Returns the length of time between segment trigger and write gate.
Direction	OUT
Unit	Second
  - gateAper
 

Description	Returns the length of time to open the write gate.
Direction	OUT
Unit	Second

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_burstGateConfig" on page 1004

## Auto Alignment Function

This section describes the programming functions of auto alignment. Auto alignment function is used to determine the center position of the spindle. Once the auto alignment is completed, the alignment data will be saved in the non volatile memory of the spinstand. This data contains each individual data of the up face and down face HGAs.

After the disk clamp replacement, it is necessary to perform the auto alignment.

### **hpe5022\_autoAlignmentAssumeRadius**

**C Syntax** ViStatus hpe5022\_autoAlignmentAssumeRadius(ViSession id, ViReal64 radius);

**Visual Basic Syntax** hpe5022\_autoAlignmentAssumeRadius(ByVal id As Long, ByVal radius As Double) As Long

**Description** This function configures the radius of the head position when the auto alignment starts. The “hpe5022\_autoAlignment” function assumes that the head is on the specified radius. After finishing the rough tune (skew = 0° position search) in “hpe5022\_autoAlignment” function, the head is moved to the assumed radius position, then fine tune is performed. See “Measurement Definition” chapter of “Operation Manual” for details about the auto alignment algorithm.

#### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- radius
  - Description Specifies the radius when the auto alignment starts. Default value depends on the disk type.

Disk Type	Default Assumed Radius
1.8 inch	0.018 m
2.5 inch	0.0255 m
3.5 inch, 3 inch	0.036 m

Valid value is inside the data area specified by “hpe5022\_dataArea” function.

Direction IN



## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'radius' is out of range.

## See Also

“hpe5022\_autoAlignmentAssumeRadius\_Q” on page 1010

## **hpe5022\_autoAlignmentAssumeRadius\_Q**

**C Syntax** ViStatus hpe5022\_autoAlignmentAssumeRadius\_Q(ViSession id, ViPReal64 radius);

**Visual Basic Syntax** hpe5022\_autoAlignmentAssumeRadius\_Q(ByVal id As Long, ByRef radius As Double) As Long

**Description** This function returns the assumed radius when the auto alignment starts. See “Measurement Definition” chapter of “Operation Manual” for details about the auto alignment algorithm.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- radius
  - Description Returns the assumed radius when the auto alignment starts.
  - Direction OUT

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_autoAlignmentAssumeRadius” on page 1008

## hpe5022\_autoAlignmentFineTuneSkew

### C Syntax

```
ViStatus hpe5022_autoAlignmentFineTuneSkew(ViSession id, ViInt16
numSkews, const ViReal64 skew1[], const ViReal64 skew2[]);
```

### Visual Basic Syntax

```
hpe5022_autoAlignmentAssumeFineTuneSkew(ByVal id As Long, ByVal
numSkews As Integer, ByRef skew1 as Double, ByRef skew2 As Double) As
Long
```

### Description

This function configures a list of skew angle pairs for auto alignment fine tune. The fine tune (except for “fine tune first step” at 0°, +3°, -3°) can be performed by specified times defined by numSkews. For each fine tune step, the coordinate of the spindle center is calculated using the 3 points, skew = 0 [°], skew1[ ] (positive skew angle), skew2[ ] (negative skew angle) on the track. See “Measurement Definition” chapter of “Operation Manual” for details about the auto alignment algorithm.

### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- numSkews

Description Specifies the number of skew angles in skew1 and skew2.

Direction IN

Values

Name	Value
hpe5022_AUTO_ALIGNMENT_SKEW_LIST_MIN	1
hpe5022_AUTO_ALIGNMENT_SKEW_LIST_MAX	10

Preset Value 2

- skew1, skew2

Description Specifies the skew angle pairs (positive and negative). Skew = 0°, skew1 and skew2 points are used to determine the spindle center coordinates.

Direction IN

Values .

Parameter	Name	Value
skew1	hpe5022_SKEW_ANGLE_MAX	30.0
	hpe5022_AUTO_ALIGNMENT_SKEW1_MIN	3.0

Function Reference  
**Auto Alignment Function**

Parameter	Name	Value
skew2	hpe5022_AUTO_ALIGNMENT_SKEW2_MAX	-3.0
	hpe5022_SKEW_ANGLE_MIN	-60.0

Minimum limit of skew2 angle depend on cassettes specified by “hpe5022\_hgaCassette” and HGA specified by “hpe5022\_hgaDimension”. See Note in “hpe5022\_headPosition” on page 241.

Preset Value

i	skew1	skew2
0	10.0	-10.0
1	20.0	-20.0

**Return Values**

Completion Code	Description
VL_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘numSkews,’ ‘skew1,’ or ‘skew2’ is out of range.

**See Also**

“hpe5022\_autoAlignmentFineTuneSkew\_Q” on page 1013

## hpe5022\_autoAlignmentFineTuneSkew\_Q

- C Syntax** ViStatus hpe5022\_autoAlignmentFineTuneSkew\_Q(ViSession id, ViPInt16 numSkews, ViReal64 skew1[], ViReal64 skew2[]);
- Visual Basic Syntax** hpe5022\_autoAlignmentAssumeFineTuneSkew\_Q(ByVal id As Long, ByRef numSkews As Integer, ByRef skew1 as Double, ByRef skew2 As Double) As Long
- Description** This function returns a list of skew angle pairs for auto alignment fine tune. See “Measurement Definition” chapter of “Operation Manual” for details about the auto alignment algorithm.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - numSkews
 

Description	Returns the number of skew angles in skew1 and skew2.
Direction	OUT
  - skew1, skew2
 

Description	Return the skew angle pairs to calculate the coordinate of spindle center.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** “hpe5022\_autoAlignmentFineTuneSkew” on page 1011

## **hpe5022\_autoAlignment**

**C Syntax** ViStatus hpe5022\_autoAlignment(ViSession id);

**Visual Basic Syntax** hpe5022\_autoAlignment(ByVal id As Long) As Long

**Description** This function executes auto alignment to get the coordinate of spindle center, then the coordinate is stored into the spinstand non-volatile memory.

See “Measurement Definition” chapter of “Operation Manual” for details about the auto alignment algorithm.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_PEAK_NOT_FOUND	Could not find the peak data while searching track.
hpe5022_ERROR_FILE_ACCESS	Failed to make log file.
VI_ERROR_RSRC_NFOUND	Spinstand currently in use is not supported.
hpe5022_ERROR_FUNCTION_NOT_LOADED	Failed to load the DLL files.
hpe5022_ERROR_NSUP_CONF	Spinstand module has not been opened.

**See Also** “hpe5022\_autoAlignmentAssumeRadius” on page 1008

“hpe5022\_autoAlignmentFineTuneSkew” on page 1011

## hpe5022\_autoAlignmentCurrentState\_Q

**C Syntax** ViStatus hpe5022\_autoAlignmentCurrentState\_Q(ViSession id, ViPString state);

**Visual Basic Syntax** hpe5022\_autoAlignmentCurrentState\_Q(ByVal id As Long, ByVal state As String) As Long

**Description** This function returns the string that shows “what is going on” inside the auto alignment. The returned string is:

Preprocessing  
 Rough tune  
 Fine tune first step  
 Fine tune at skew = 0, x, y  
 Storing data  
 Finished  
 Error occurred

See “Operation Manual” for details about the auto alignment algorithm and status messages.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- state
 

Description	Returns the current status of auto alignment.
Direction	OUT
Values	Maximum number of characters:

Name	Value
hpe5022_MESSAGE_LENGTH_MAX	512

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference  
**Auto Alignment Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The last measurement is not auto alignment.

**See Also**

“hpe5022\_autoAlignment” on page 1014



---

4

## Function Reference for Measurement using Oscilloscope

This chapter describes the functions related with the measurement by waveform analysis. Waveform measurement is performed by an oscilloscope. If an oscilloscope is not installed in your system, this function cannot be used.

The following measurements can be measured using waveform analysis.

- TAA (Track Averaged Amplitude)
- PW (Pulse Width)
- Baseline
- Time Asymmetry
- NLTS by the Dipulse Extraction method
- NLTS by the Time Correlation method

In the waveform measurement, the measurement sequence is slightly different from other measurement sequence. Such differences in sequence are as follows:

1. Set up the required parameters
  - Over sampling Rate
  - Delay Time
  - Averaging Factor
2. Acquisition of a waveform
3. Calculate the measurement parameter (listed above)

## Setup Function

### hpe5022\_waveOverSampleRate

#### C Syntax

```
ViStatus hpe5022_waveOverSampleRate(ViSession id, ViInt32 rate);
```

#### Visual Basic Syntax

```
hpe5022_waveOverSampleRate(ByVal id As Long, ByVal rate As Long) As Long
```

#### Description

This function specifies the over-sample rate for the waveform analysis. The over-sample rate defines the sampling frequency of an oscilloscope. The sampling frequency of the oscilloscope is set at the value of (channel bit rate) × (over-sample rate). When the oscilloscope can not be set at an exact value, the closest and higher value is set as the sampling frequency of the oscilloscope.

For example: the channel bit rate is 100 Mbps and the over-sampling rate is set at 4, the sampling frequency of the oscilloscope is set at 400 MHz.

#### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- rate

Description Specifies the over-sample rate.

Direction IN

Preset value 4

Values

Name	Value
hpe5022_OVER_SAMP_RATE_MIN	4

#### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'rate' is out of range.

Function Reference for Measurement using Oscilloscope  
**Setup Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_NO_OPTION	An option for oscilloscope is not installed. This function can only be used if the system is installed with an oscilloscope.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

**See Also**

“hpe5022\_measureWave” on page 1028

“hpe5022\_setupWave” on page 1031

“hpe5022\_waveOverSampleRate\_Q” on page 1021

## hpe5022\_waveOverSampleRate\_Q

- C Syntax** ViStatus hpe5022\_waveOverSampleRate\_Q(ViSession id, ViInt32 rate);
- Visual Basic Syntax** hpe5022\_waveOverSampleRate\_Q(ByVal id As Long, ByRef rate As Long) As Long
- Description** This function returns the current over-sample rate setting.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - rate
 

Description	Returns the over-sample rate.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

**See Also** "hpe5022\_waveOverSampleRate" on page 1019

## hpe5022\_waveAverage

### C Syntax

```
ViStatus hpe5022_waveAverage(ViSession id, ViInt32 average);
```

### Visual Basic Syntax


```
hpe5022_waveAverage(ByVal id As Long, ByVal average As Long) As Long
```

### Description

This function specifies the averaging factor of the waveform measurement. The oscilloscope takes a waveform for the number of periods of the data pattern which is specified by this function. Then, it averages the waveform.

**Figure 4-1**

**Waveform Averaging**

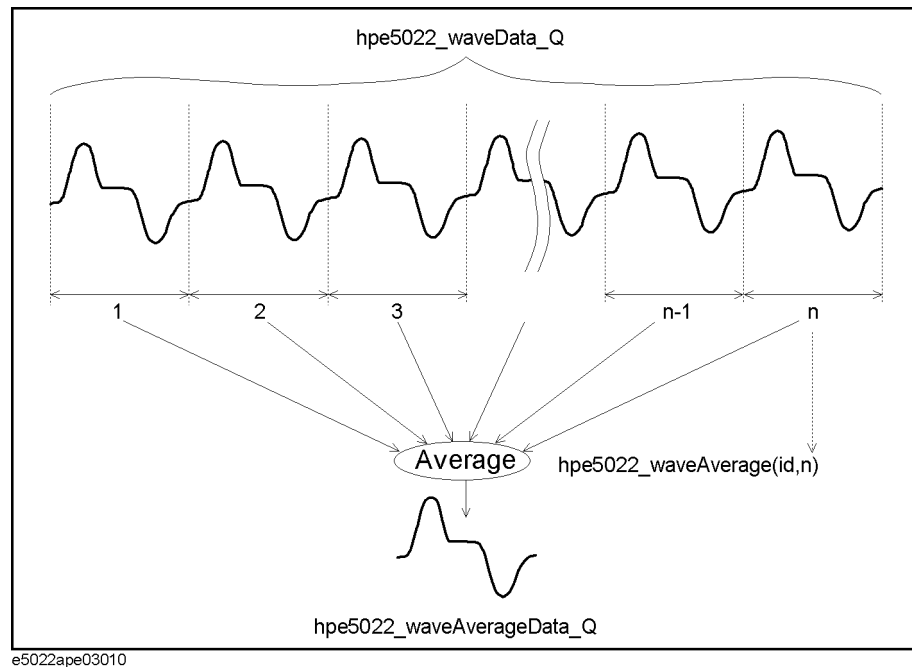

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- average
 

Description	Specifies the number of waveform period for measurement averaging.
Direction	IN
Preset value	20

Values

Name	Value
hpe5022_WAVE_AVERAGE_MIN	3

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'average' is out of range.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

**See Also**

“hpe5022\_measureWave” on page 1028

“hpe5022\_setupWave” on page 1031

“hpe5022\_waveAverage\_Q” on page 1024

## **hpe5022\_waveAverage\_Q**

### **C Syntax**

ViStatus hpe5022\_waveAverage\_Q(ViSession id, ViInt32 average);

### **Visual Basic Syntax**

hpe5022\_waveAverage\_Q(ByVal id As Long, ByRef average As Long) As Long

### **Description**

This function returns the number of averaging factor.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- average
  - Description Returns the number of waveform period for measurement averaging.
  - Direction OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

### **See Also**

"hpe5022\_waveAverage" on page 1022



## hpe5022\_waveDelayTime

- C Syntax** ViStatus hpe5022\_waveDelayTime(ViSession id, ViReal64 time);
- Visual Basic Syntax** hpe5022\_waveDelayTime(ByVal id As Long, ByVal time As Double) As Long
- Description** This function sets the delay time for the acquisition of waveform from the spinstand index pulse.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - time
 

Description	Specifies a delay time from the index pulse.
Direction	IN
Preset value	200×10 <sup>-6</sup>
Unit	Second

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

- See Also** "hpe5022\_measureWave" on page 1028  
"hpe5022\_setupWave" on page 1031

Function Reference for Measurement using Oscilloscope  
**Setup Function**

“hpe5022\_waveDelayTime\_Q” on page 1027

## hpe5022\_waveDelayTime\_Q

### C Syntax

ViStatus hpe5022\_waveDelayTime\_Q(ViSession id, ViPReal64 time);

### Visual Basic Syntax

hpe5022\_waveDelayTime\_Q(ByVal id As Long, ByRef time As Double) As Long

### Description

This function returns the delay time from the index pulse for the acquisition of waveform.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- time
 

Description	Returns a delay time from the index pulse.
Direction	OUT
Unit	Second

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

### See Also

"hpe5022\_waveDelayTime" on page 1025

## Data Acquisition Function

### hpe5022\_measureWave

**C Syntax**

ViStatus hpe5022\_measureWave(ViSession id, ViInt16 seqType);

**Visual Basic Syntax**

hpe5022\_measureWave(ByVal id As Long, ByVal seqType As Integer) As Long

**Description**

This function digitizes the waveform of a read out signal. Since the required data pattern is different among measurement parameters, the suitable data pattern must be set in advance. The sequences of this function are as follows:

1. Move the head at the write track offset position specified by the “hpe5022\_writeTrackOffset” function.
2. If ‘seqType’ (see parameters) is set at “hpe5022\_SEQ\_ER\_WR\_M”, perform a DC erase for the track.
3. If ‘seqType’ (see parameters) is set at “hpe5022\_SEQ\_ER\_WR\_M” or “hpe5022\_SEQ\_WR\_M”, write the data pattern specified by the “hpe5022\_selectPattern” function.
4. Move at the read track offset position specified by the “hpe5022\_readTrackOffset” function.
5. Digitize and execute re-sampling of the waveform for the number of period which is specified by the “hpe5022\_waveAverage” function.

Since the sampling rate of oscilloscope is not continuous, the HP E5022/E5023 makes a re-sampling of the waveform to fit the sampling rate specified by the “hpe5022\_waveOverSampleRate” functions

The delay time for acquisition start and over sampling rate is specified by the “hpe5022\_waveDelayTime” and “hpe5022\_waveOverSampleRate” functions, respectively.

The “hpe5022\_waveData\_Q” and “hpe5022\_waveAverageData\_Q” functions returns the waveform data.

The measurement parameters, such as TAA and PW, can be calculated from the digitized waveform. The functions are shown in the “See Also”.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- seqType

Description      Selects a measurement sequence type.

Direction        IN

Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Erase->Write->Measure (Digitize)
hpe5022_SEQ_WR_M	1	Write->Measure (Digitize)
hpe5022_SEQ_M	2	Measure (Digitize)

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	A hardware error is detected on the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' is out of range.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

Error Code	Description
hpe5022_ERROR_PARAMETER_SET_FAILED	The acquisition parameters are invalid for oscilloscope. Reduce the value of the “hpe5022_waveOverSampleRate”, “hpe5022_waveAverage” or “hpe5022_channelBitRate” functions.

**See Also**

- “hpe5022\_waveOverSampleRate” on page 1019
- “hpe5022\_waveAverage” on page 1022
- “hpe5022\_waveDelayTime” on page 1025
- “hpe5022\_waveData\_Q” on page 1039
- “hpe5022\_waveAverageData\_Q” on page 1035
- “hpe5022\_writeTrackOffset” on page 222
- “hpe5022\_readTrackOffset” on page 219
- “hpe5022\_selectPattern” on page 119
- “hpe5022\_waveTaa\_Q” on page 1041
- “hpe5022\_wavePw\_Q” on page 1043
- “hpe5022\_waveBaseline\_Q” on page 1045
- “hpe5022\_waveTimeAsymmetry\_Q” on page 1047
- “hpe5022\_waveAutoCorrelationSnr\_Q” on page 1055
- “hpe5022\_waveDipulseExtraction\_Q” on page 1051
- “hpe5022\_waveCorrelation\_Q” on page 1058

## hpe5022\_setupWave

### C Syntax

```
ViStatus hpe5022_setupWave(ViSession id, ViInt16 seqType, ViPObject testHndl);
```

### Visual Basic Syntax

```
hpe5022_setupWave(ByVal id As Long, ByVal seqType As Integer, ByRef testHndl As Long) As Long
```

### Description

This function assigns the digitalization sequence of the waveform to the specified test identifier. Refer to the “hpe5022\_measureWave” function for details about the sequence. This function does not execute the digitalization. Digitalization is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- seqType
 

Description	Selects a measurement sequence type.
Direction	IN
Values	Same as the 'seqType' in the “hpe5022_measureWave” function.
- testHndl
 

Description	Specifies the test identifier. This identifier is used to execute the waveform measurement by the “hpe5022_measure” function.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' is out of range.

Function Reference for Measurement using Oscilloscope  
**Data Acquisition Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

**See Also**

"hpe5022\_measure" on page 387

"hpe5022\_measureWave" on page 1028

"hpe5022\_releaseSetup" on page 390



## hpe5022\_waveAverageDataSize\_Q

<b>C Syntax</b>	ViStatus hpe5022_waveAverageDataSize_Q(ViSession id, ViInt32 aveSize);												
<b>Visual Basic Syntax</b>	hpe5022_waveAverageDataSize_Q(ByVal id As Long, ByRef aveSize As Long) As Long												
<b>Description</b>	This function returns the array size of the averaged waveform data returned by the “hpe5022_waveAverageData_Q” function.												
<b>Parameters</b>	<ul style="list-style-type: none"> <li> <table> <tr> <td>id</td> <td></td> </tr> <tr> <td>Description</td> <td>Specifies the system identifier. This is given by the "hpe5022_init" function.</td> </tr> <tr> <td>Direction</td> <td>IN</td> </tr> </table> </li> <li> <table> <tr> <td>aveSize</td> <td></td> </tr> <tr> <td>Description</td> <td>Returns the array size of averaged waveform data.  The size will be the same as the value of (the value of the “hpe5022_channelBitRate” function) × (the value of the “hpe5022_waveOverSampleRate” function) if the acquisition is done properly.</td> </tr> <tr> <td>Direction</td> <td>OUT</td> </tr> </table> </li> </ul>	id		Description	Specifies the system identifier. This is given by the "hpe5022_init" function.	Direction	IN	aveSize		Description	Returns the array size of averaged waveform data.  The size will be the same as the value of (the value of the “hpe5022_channelBitRate” function) × (the value of the “hpe5022_waveOverSampleRate” function) if the acquisition is done properly.	Direction	OUT
id													
Description	Specifies the system identifier. This is given by the "hpe5022_init" function.												
Direction	IN												
aveSize													
Description	Returns the array size of averaged waveform data.  The size will be the same as the value of (the value of the “hpe5022_channelBitRate” function) × (the value of the “hpe5022_waveOverSampleRate” function) if the acquisition is done properly.												
Direction	OUT												

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.

Function Reference for Measurement using Oscilloscope  
**Data Acquisition Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

**See Also**

“hpe5022\_channelBitRate” on page 116


“hpe5022\_waveOverSampleRate” on page 1019

“hpe5022\_waveAverageData\_Q” on page 1035

## hpe5022\_waveAverageData\_Q

- C Syntax** ViStatus hpe5022\_waveAverageData\_Q(ViSession id, ViReal64 aveData[]);
- Visual Basic Syntax** hpe5022\_waveAverageData\_Q(ByVal id As Long, ByRef aveData As Double) As Long
- Description** This function returns the averaged waveform data which is digitized by the “hpe5022\_measureWave” or the “hpe5022\_setupWave” function.
- The averaging factor of this function is set by the “hpe5022\_waveAverage” function.
- The data returned by the “hpe5022\_waveData\_Q” function is averaged and the averaged data is returned by this function.

**Figure 4-2** Averaged Waveform Data

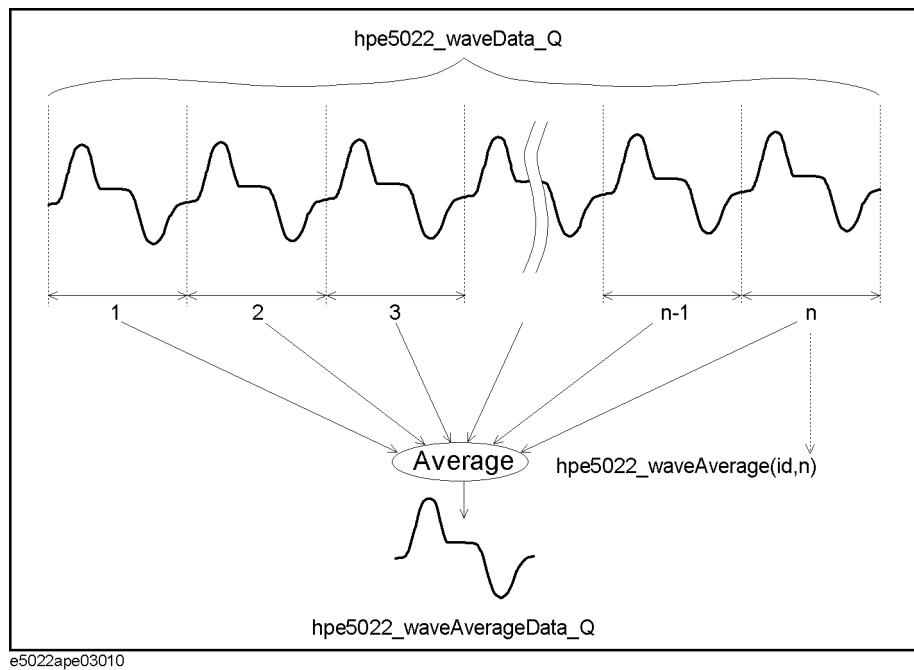

- Parameters**
- id**

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN
  - aveData**

Description Returns the array data of the averaged waveform.

The array size is returned by the “hpe5022\_waveAverageDataSize\_Q” function.

Direction OUT

Function Reference for Measurement using Oscilloscope  
**Data Acquisition Function**

Unit                  Volt

**Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An option for oscilloscope is not installed. This function can only be used if the system is installed with an oscilloscope.

**See Also**

“hpe5022\_waveAverage” on page 1022

“hpe5022\_measureWave” on page 1028

“hpe5022\_setupWave” on page 1031

“hpe5022\_waveData\_Q” on page 1039

“hpe5022\_waveAverageDataSize\_Q” on page 1033

## hpe5022\_waveDataSize\_Q

### C Syntax

ViStatus hpe5022\_waveDataSize\_Q(ViSession id, ViPInt32 size);

### Visual Basic Syntax

hpe5022\_waveDataSize\_Q(ByVal id As Long, ByRef size As Long) As Long

### Description

This function returns the array size of the digitized waveform data returned by the “hpe5022\_waveData\_Q” function.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- size
 

Description	Returns the array size of waveform data.  The size will be the same as the value of (the value of the “hpe5022_waveAverageDataSize_Q” function) × (the value of the “hpe5022_waveAverage” function) if the acquisition is done properly.
Direction	OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.

Function Reference for Measurement using Oscilloscope  
**Data Acquisition Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

**See Also**

“hpe5022\_waveData\_Q” on page 1039

“hpe5022\_waveDataSize\_Q” on page 1037

“hpe5022\_waveAverage” on page 1022

## hpe5022\_waveData\_Q

### C Syntax

```
ViStatus hpe5022_waveData_Q(ViSession id, ViReal64 waveData[]);
```

### Visual Basic Syntax

```
hpe5022_waveData_Q(ByVal id As Long, ByRef waveData As Double) As Long
```


### Description

This function returns all acquisition waveform data which is digitized by the “hpe5022\_measureWave” or the “hpe5022\_setupWave” function.

This function returns the waveform data. All acquisition data will be returned by this function. The data is for several periods of the test data pattern. The number of period is defined by the “hpe5022\_waveAverage” function.

Figure 4-3

Waveform Data

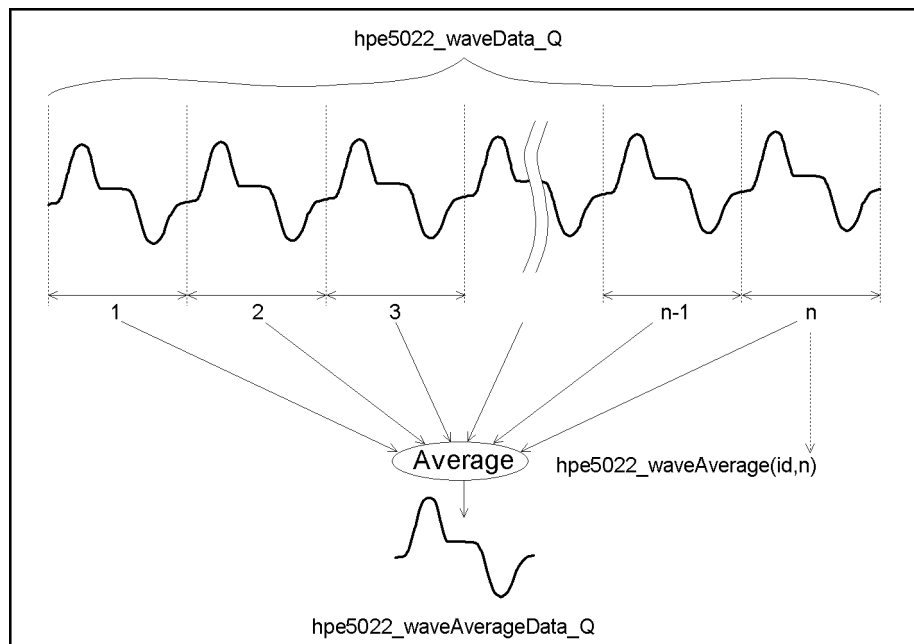

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- waveData
 

Description	Returns the array data of the waveform data.  The array size is returned by the “hpe5022_waveDataSize_Q” function.
Direction	OUT

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

## See Also

“hpe5022\_measureWave” on page 1028

“hpe5022\_waveDataSize\_Q” on page 1037

“hpe5022\_waveAverageData\_Q” on page 1035



## Wave Analysis Function

### hpe5022\_waveTaa\_Q

<b>C Syntax</b>	ViStatus hpe5022_waveTaa_Q(ViSession id, ViPReal64 taa, ViPReal64 taaPos, ViPReal64 taaNeg, ViPReal64 taaAsym);																						
<b>Visual Basic Syntax</b>	hpe5022_waveTaa_Q(ByVal id As Long, ByRef taa As Double, ByRef taaPos As Double, ByRef taaNeg As Double, ByRef taaAsym As Double) As Long																						
<b>Description</b>	This function calculates the TAA parameters using the averaged waveform data. The data returned by the "hpe5022_waveAverageData_Q" function is used for this calculation. The returned parameters are TAA, TAA positive (TAA+), TAA negative (TAA-) and TAA asymmetry. See chapter 4 in the Operation Manual for the definition of these parameters.																						
<b>Parameters</b>	<ul style="list-style-type: none"> <li>• id <table border="0" style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">Description</td> <td>Specifies the system identifier. This is given by the "hpe5022_init" function.</td> </tr> <tr> <td>Direction</td> <td>IN</td> </tr> </table> </li> <li>• taa <table border="0" style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">Description</td> <td>Returns value of the TAA.</td> </tr> <tr> <td>Direction</td> <td>OUT</td> </tr> <tr> <td>Unit</td> <td>Volt</td> </tr> </table> </li> <li>• taaPos <table border="0" style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">Description</td> <td>Returns value of the TAA positive.</td> </tr> <tr> <td>Direction</td> <td>OUT</td> </tr> <tr> <td>Unit</td> <td>Volt</td> </tr> </table> </li> <li>• taaNeg <table border="0" style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">Description</td> <td>Returns value of the TAA negative.</td> </tr> <tr> <td>Direction</td> <td>OUT</td> </tr> <tr> <td>Unit</td> <td>Volt</td> </tr> </table> </li> </ul>	Description	Specifies the system identifier. This is given by the "hpe5022_init" function.	Direction	IN	Description	Returns value of the TAA.	Direction	OUT	Unit	Volt	Description	Returns value of the TAA positive.	Direction	OUT	Unit	Volt	Description	Returns value of the TAA negative.	Direction	OUT	Unit	Volt
Description	Specifies the system identifier. This is given by the "hpe5022_init" function.																						
Direction	IN																						
Description	Returns value of the TAA.																						
Direction	OUT																						
Unit	Volt																						
Description	Returns value of the TAA positive.																						
Direction	OUT																						
Unit	Volt																						
Description	Returns value of the TAA negative.																						
Direction	OUT																						
Unit	Volt																						

Function Reference for Measurement using Oscilloscope  
**Wave Analysis Function**

- taaAsym

Description Returns value of the TAA asymmetry.

Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

**See Also**

“hpe5022\_waveAverageData\_Q” on page 1035

## hpe5022\_wavePw\_Q

### C Syntax

ViStatus hpe5022\_wavePw\_Q(ViSession id, ViReal64 threshold, ViPReal64 pw, ViPReal64 pwPos, ViPReal64 pwNeg, ViPReal64 pwAsym);

### Visual Basic Syntax

hpe5022\_wavePw\_Q(ByVal id As Long, ByVal threshold As Double, ByRef pw As Double, ByRef pwPos As Double, ByRef pwNeg As Double, ByRef pwAsym As Double) As Long

### Description

This function calculates the PW parameters using the averaged waveform data. The data returned by the "hpe5022\_waveAverageData\_Q" function is used for this calculation. The returned parameters are PW, PW positive (PW+), PW negative (PW-) and PW asymmetry. See chapter 4 in the Operation Manual for the definition of these parameters.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- threshold
 

Description	Specifies the threshold level.
Direction	IN
Values	

Name	Value
hpe5022_PW_THR_MIN	0.2
hpe5022_PW_THR_MAX	0.8

- pw
 

Description	Returns value of the PW.
Direction	OUT
Unit	Second
- pwPos
 

Description	Returns value of the PW positive.
Direction	OUT
Unit	Second

Function Reference for Measurement using Oscilloscope  
**Wave Analysis Function**

- pwNeg
 

Description	Returns value of the PW negative.
Direction	OUT
Unit	Second
- pwAsym
 

Description	Returns value of the PW asymmetry.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'threshold' is out of range.
hpe5022_ERROR_THRESHOLD_NOT_FOUND	The threshold level is not found.
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

**See Also** "hpe5022\_waveAverageData\_Q" on page 1035

## hpe5022\_waveBaseline\_Q

### C Syntax

ViStatus hpe5022\_waveBaseline\_Q(ViSession id, ViPReal64 base, ViPReal64 basePos, ViPReal64 baseNeg, ViPReal64 baseSep);

### Visual Basic Syntax

hpe5022\_waveBaseline\_Q(ByVal id As Long, ByRef base As Double, ByRef basePos As Double, ByRef baseNeg As Double, ByRef baseSep As Double) As Long

### Description

This function calculates the baseline parameters using the averaged waveform data. The data returned by the “hpe5022\_waveAverageData\_Q” function is used for this calculation. The returned parameters are baseline, baseline positive (baseline+), baseline negative (baseline-) and Baseline separation. See chapter 4 in the Operation Manual for the definition of these parameters.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- base
 

Description	Returns value of the baseline.
Direction	OUT
Unit	Volt
- basePos
 

Description	Returns value of the baseline positive
Direction	OUT
Unit	Volt
- baseNeg
 

Description	Returns value of the baseline negative.
Direction	OUT
Unit	Volt
- baseSep
 

Description	Returns value of the baseline separation.
Direction	OUT
Unit	Volt

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

## See Also

"hpe5022\_waveAverageData\_Q" on page 1035

## hpe5022\_waveTimeAsymmetry\_Q

### C Syntax

ViStatus hpe5022\_waveTimeAsymmetry\_Q(ViSession id, ViPReal64 timAsym, ViPReal64 tpn, ViPReal64 tnp);

### Visual Basic Syntax

hpe5022\_waveTimeAsymmetry\_Q(ByVal id As Long, ByRef timAsym As Double, ByRef tpn As Double, ByRef tnp As Double) As Long

### Description

This function calculates the Time-Asymmetry using the averaged waveform data. The data returned by the “hpe5022\_waveAverageData\_Q” function is used for this calculation. See chapter 4 in the Operation Manual for the definition of this parameter.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- timAsym
 

Description	Returns value of the time asymmetry.
Direction	OUT
Unit	Second
- tpn
 

Description	Returns the positive peak to negative peak time in second.
Direction	OUT
Unit	Second
- tnp
 

Description	Returns the negative peak to positive peak time in second.
Direction	OUT
Unit	Second

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.

Function Reference for Measurement using Oscilloscope  
**Wave Analysis Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

**See Also** "hpe5022\_waveAverageData\_Q" on page 1035



## Dipulse Extraction NLTS Function

### hpe5022\_waveDipulseExtractionDataSize\_Q

- C Syntax** ViStatus hpe5022\_waveDipulseExtractionDataSize\_Q(ViSession id, ViPInt32 deSize);
- Visual Basic Syntax** hpe5022\_waveDipulseExtractionDataSize\_Q(ByVal id As Long, ByRef deSize As Long) As Long
- Description** This function returns the array size of dipulse extraction data which are returned by the “hpe5022\_waveDipulseExtraction\_Q” function.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - deSize
 

Description	Returns the array size of dipulse extraction data.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.

Function Reference for Measurement using Oscilloscope  
**Dipulse Extraction NLTS Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

**See Also**

"hpe5022\_waveDipulseExtraction\_Q" on page 1051

## hpe5022\_waveDipulseExtraction\_Q

**C Syntax** ViStatus hpe5022\_waveDipulseExtraction\_Q(ViSession id, ViReal64 locate[], ViReal64 deData[]);

**Visual Basic Syntax** hpe5022\_waveDipulseExtraction\_Q(ByVal id As Long, ByRef locate As Double, ByRef deData As Double) As Long

**Description** This function returns the dipulse extraction data calculated from the waveform data. The waveform data returned by the “hpe5022\_waveData\_Q” function is used for this calculation. The calculation sequence is shown in chapter 4 of the Operation Manual.

The array size of ‘locate’ and ‘deData’ is the same and is returned by the “hpe5022\_waveDipulseExtractionDataSize\_Q” function. The returned value ‘deData[]’ is a dipulse extraction result for the location returned by ‘locate[]’. For example, the value of ‘deData[1]’ is a dipulse extraction result for the location returned by ‘locate[1]’.

The data pattern must be set at “hpe5022\_PAT\_PRBS” (Pseudo random pattern) by the “hpe5022\_selectPattern” function in advance.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- locate
 

Description	Returns the bit location in array. The corresponding dipulse extraction data which has the same argument is returned by ‘deData’ parameter.
Direction	OUT
- deData
 

Description	Returns the dipulse extraction data in array.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.

Function Reference for Measurement using Oscilloscope  
**Dipulse Extraction NLTS Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

**See Also**

“hpe5022\_waveData\_Q” on page 1039

“hpe5022\_waveDipulseExtractionDataSize\_Q” on page 1049

“hpe5022\_selectPattern” on page 119

## hpe5022\_waveDipulseExtractionNlts\_Q

**C Syntax** ViStatus hpe5022\_waveDipulseExtractionNlts\_Q(ViSession id, ViReal64 echo, ViPReal64 nlts);

**Visual Basic Syntax** hpe5022\_waveDipulseExtractionNlts\_Q(ByVal id As Long, ByVal echo As Double, ByRef nlts As Double) As Long

**Description** This function calculates the NLTS by the dipulse extract method, the second adjacent transition shift and the hard transition shift. The corresponding echo location is required to be inputted. See the “NLTS by Dipulse Extraction Method Measurement” on page 46 for the echo location value. The data used for the calculation can be extracted by the “hpe5022\_waveDipulseExtraction\_Q” function.

The calculation formula is  $2 \times (\text{Amplitude at echo position}) / (\text{Amplitude at zero position})$ .

The data pattern must be set at “hpe5022\_PAT\_PRBS” (Pseudo random pattern) by the “hpe5022\_selectPattern” function before data acquisition.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- echo
 

Description	Specifies the echo location.
Direction	IN
Unit	Bit
- nlts
 

Description	Returns the value of NLTS by dipulse extract method, the second adjacent transition shift or the hard transition shift. The value is depending on the specified echo location.
Direction	OUT
Unit	Second

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Function Reference for Measurement using Oscilloscope  
**Dipulse Extraction NLTS Function**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

**See Also**

"hpe5022\_waveDipulseExtraction\_Q" on page 1051

"hpe5022\_selectPattern" on page 119

"hpe5022\_prbsPattern" on page 128

## Time Correlation NLTS Functions

### hpe5022\_waveAutoCorrelationSnr\_Q

- C Syntax** ViStatus hpe5022\_waveAutoCorrelationSnr\_Q(ViSession id, ViPReal64 snr);
- Visual Basic Syntax** hpe5022\_waveAutoCorrelationSnr\_Q(ByVal id As Long, ByRef snr As Double) As Long
- Description** This function calculates the SNR (Signal to Noise Ratio) used in the NLTS measurement by Time Correlation method. SNR is calculated from the waveform data returned by the “hpe5022\_waveData\_Q” function. See chapter 4 in the Operation Manual for the calculation formula.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - snr
 

Description	Returns the SNR.
Direction	OUT
Unit	dB

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.

Waveform Function

Function Reference for Measurement using Oscilloscope  
**Time Correlation NLTS Functions**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

**See Also** "hpe5022\_waveData\_Q" on page 1039



## **hpe5022\_waveCorrelationDataSize\_Q**

- C Syntax** `ViStatus hpe5022_waveCorrelationDataSize_Q(ViSession id, ViInt32 acSize);`
- Visual Basic Syntax** `hpe5022_waveCorrelationDataSize_Q(ByVal id As Long, ByRef acSize As Long) As Long`
- Description** This function returns the array size of time correlation data which are returned by the “hpe5022\_waveCorrelation\_Q” function.
- Parameters**
- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - **acSize**

Description	Returns the array size of time correlation data.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An option for oscilloscope is not installed. This function can only be used if the system is installed with an oscilloscope.

**See Also** “hpe5022\_waveCorrelation\_Q” on page 1058

## hpe5022\_waveCorrelation\_Q

### C Syntax

```
ViStatus hpe5022_waveCorrelation_Q(ViSession id, ViReal64 locate[], ViReal64  
acData[]);
```

### Visual Basic Syntax

```
hpe5022_waveCorrelation_Q(ByVal id As Long, ByRef locate As Double, ByRef  
acData As Double) As Long
```

### Description

This function returns the time correlation data calculated from the waveform data. The data returned by the “hpe5022\_waveData\_Q” function is used to calculate the correlation. The calculation formula is shown in chapter 4 of the Operation Manual.

The array size of ‘locate’ and ‘acData’ is the same and is returned by the “hpe5022\_waveCorrelationDataSize\_Q” function. The returned value ‘acData[]’ is a time correlation result for the location returned by ‘locate[]’. For example, the value of ‘acData[1]’ is a time correlation result for the location returned by ‘locate[1]’.

The returned data is the calculated result of the cross correlation coefficient of the readback voltages at  $t$  and  $t+mT +D$ . The parameter  $D$  is the delay at which NLTS echo is expected and the parameter  $m$  is a certain integer value.

The data pattern must be set at “hpe5022\_PAT\_PRBS” (Pseudo random pattern) by the “hpe5022\_selectPattern” function in advance.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- locate
  - Description Returns the bit location in array. The corresponding time correlation data which has the same argument is returned by ‘acData’ parameter.
  - Direction OUT
- acData
  - Description Returns the time correlation data in array.
  - Direction OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

**See Also**

“hpe5022\_waveData\_Q” on page 1039

“hpe5022\_waveDipulseExtraction\_Q” on page 1051

“hpe5022\_selectPattern” on page 119

## **hpe5022\_waveTimeCorrelationNlts\_Q**

### **C Syntax**

ViStatus hpe5022\_waveTimeCorrelationNlts\_Q(ViSession id, ViReal64 echo, ViPReal64 nlts);

### **Visual Basic Syntax**

hpe5022\_waveTimeCorrelationNlts\_Q(ByVal id As Long, ByVal echo As Double, ByRef nlts As Double) As Long

### **Description**

This function calculates the NLTS by the Time Correlation method, the second adjacent transition shift and the hard transition shift. The corresponding echo location is required to be inputted. See the “NLTS by Time Correlation Method Measurement” on page 47 for the echo location value. The data used for the calculation can be gotten by the “hpe5022\_waveCorrelation\_Q” and “hpe5022\_waveAutoCorrelationSnr\_Q” functions. See chapter 4 in the Operation Manual for the calculation formula.

The data pattern must be set at “hpe5022\_PAT\_PRBS” (Pseudo random pattern) by the “hpe5022\_selectPattern” function before the data acquisition.

### **Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- echo
 

Description	Specifies the echo location.
Direction	IN
Unit	Bit
- nlts
 

Description	Returns the value of NLTS by the time correlation method, the second adjacent transition shift or the hard transition. shift
Direction	OUT
Unit	Second

### **Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

Error Code	Description
hpe5022_ERROR_DATA_CORRUPT	The waveform data is corrupt.
hpe5022_ERROR_NO_OPTION	An oscilloscope option is not installed. This function can be used only when the system has oscilloscope. If system has an oscilloscope, install HP E5022A software again and make sure that the option number, the serial number and the codeword are correct.
hpe5022_ERROR_NOT_INIT	The resource of oscilloscope is not opened at initialize. Check if the oscilloscope is included in the rsrcArray of the "hpe5022_init" function.

**See Also**

“hpe5022\_waveCorrelation\_Q” on page 1058

“hpe5022\_waveAutoCorrelationSnr\_Q” on page 1055

“hpe5022\_selectPattern” on page 119

Function Reference for Measurement using Oscilloscope  
**Time Correlation NLTS Functions**

---

## **5      Function Reference for Measurement using Agilent 4396B**

This section describes the functions related with the measurement by a spectrum Analyzer 4396B. Customers can use 4396B in order to make a high frequency spectrum measurement. See the Appendix D in the operation manual.

## Spectrum measurement using 4396B

This section describes the functions related with spectrum measurement using 4396B. This measures a power level using 4396B. Customers can use 4396B in order to make a high frequency spectrum measurement. See the Appendix D in the operation manual.

### hpe5022\_spectrumOptSaFrequency

**C Syntax**

ViStatus hpe5022\_spectrumOptSaFrequency(ViSession id, ViReal64 startFreq, ViReal64 stopFreq);

**VB Syntax**

hpe5022\_spectrumOptSaFrequency(ByVal id As Long, ByVal startFreq As Double, ByVal stopFreq As Double) As Long

**Description**

This function controls the starting and stopping frequencies of a spectrum analyzer for spectrum measurement using 4396B.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- startFreq

Description Specifies the starting frequency.

Direction IN

Unit Hz

Preset Value 0 (hpe5022\_SPEC\_OPT\_SA\_FREQ\_MIN)

Values

Name	Value
hpe5022_SPEC_OPT_SA_FREQ_MIN	0
hpe5022_SPEC_OPT_SA_FREQ_MAX	1.8×10 <sup>9</sup>

- stopFreq

Description Specifies the stopping frequency.

Direction IN

Unit Hz

Preset Value 1.8×10<sup>9</sup> (hpe5022\_SPEC\_OPT\_SA\_FREQ\_MAX)



Values

Name	Value
hpe5022_SPEC_OPT_SA_FREQ_MIN	0
hpe5022_SPEC_OPT_SA_FREQ_MAX	$1.8 \times 10^9$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'startFreq' or/and 'stopFreq' is out of range.

**See Also**

"hpe5022\_spectrumOptSaFrequency\_Q" on page 1066

## **hpe5022\_spectrumOptSaFrequency\_Q**

- C Syntax** ViStatus hpe5022\_spectrumOptSaFrequency\_Q(ViSession id, ViPReal64 startFreq, ViPReal64 stopFreq);
- VB Syntax** hpe5022\_spectrumOptSaFrequency\_Q(ByVal id As Long, ByRef startFreq As Double, ByRef stopFreq As Double) As Long
- Description** This function returns the starting and stopping frequencies of a spectrum analyzer for spectrum measurement using 4396B.
- Parameters**
- id
    - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
    - Direction IN
  - startFreq
    - Description Returns the starting frequency.
    - Direction OUT
    - Unit Hz
  - stopFreq
    - Description Returns the stopping frequency.
    - Direction OUT
    - Unit Hz

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_spectrumOptSaFrequency" on page 1064

## hpe5022\_spectrumOptSaBandWidth

- C Syntax** ViStatus hpe5022\_spectrumOptSaBandWidth(ViSession id, ViReal64 rbw, ViReal64 vbw);
- VB Syntax** hpe5022\_spectrumOptSaBandWidth(ByVal id As Long, ByVal rbw As Double, ByVal vbw As Double) As Long
- Description** This function specifies the resolution band width and the video band width of the spectrum analyzer for the spectrum measurement using 4396B. Resolution band width allows you to improve resolution of frequency, in other words, selectivity of signal, and also to reduce the display noise. On the other hand, video band width reduces the noise variations and makes the signal clearly visible.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  
- rbw
 

Description	Specifies the resolution band width. Narrowing this, will widen the dynamic range. Widening this, will make a measurement speed fast. This can be set to $10 \times 10^3$ , $30 \times 10^3$ , $100 \times 10^3$ , $300 \times 10^3$ , $1 \times 10^6$ and $3 \times 10^6$ , When rbw is set other than these values, then rbw is set to the closest and lower value from the above selection.
Direction	IN
Unit	Hz
Preset Value	$10 \times 10^3$
Values	

Name	Value
hpe5022_SPEC_OPT_SA_BW_MIN	$10 \times 10^3$
hpe5022_SPEC_OPT_SA_BW_MAX	$3 \times 10^6$

- vbw
 

Description	Specifies the video band width. Narrowing this, will reduce noise variation. Widening this, will speed up the measurement. The values 1/1, 1/3, 1/30, 1/100 or 1/300 of the resolution band width can be set as video band width. When other values are used, the value is set automatically at nearest and lower value of vbw.
-------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Function Reference for Measurement using Agilent 4396B  
**Spectrum measurement using 4396B**

Direction        IN  
 Unit             Hz  
 Preset Value     $10 \times 10^3$   
 Values

Name	Value
hpe5022_SPEC_OPT_SA_VBW_MIN	30
hpe5022_SPEC_OPT_SA_VBW_MAX	$3 \times 10^6$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'rbw' and/or 'vbw' is out of range.

**See Also**

“hpe5022\_spectrumOptSaBandWidth\_Q” on page 1069

## **hpe5022\_spectrumOptSaBandWidth\_Q**

- C Syntax** ViStatus hpe5022\_spectrumOptSaBandWidth\_Q(ViSession id, ViPReal64 rbw, ViPReal64 vbw);
- VB Syntax** hpe5022\_spectrumOptSaBandWidth\_Q(ByVal id As Long, ByRef rbw As Double, ByRef vbw As Double) As Long
- Description** This function returns the resolution band width and the video band width of the spectrum analyzer for spectrum measurement using 4396B.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- rbw
 

Description	Returns the resolution band width.
Direction	OUT
Unit	Hz
- vbw
 

Description	Returns the video band width.
Direction	OUT
Unit	Hz

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_spectrumOptSaBandWidth" on page 1067

## hpe5022\_measureSpectrumOptSa

### C Syntax

ViStatus hpe5022\_measureSpectrumOptSa(ViSession id, ViInt16 seqType, ViInt16 detMode);

### Visual Basic Syntax

hpe5022\_measureSpectrumOptSa(ByVal id As Long, ByVal seqType As Integer, ByVal detMode As Integer) As Long

### Description

This function measures the power level according to the specified sequence type. There are three sequence types: 1) erase, write data, then measure 2) no erase, write data, then measure 3) measure only. The sequence is as follows:

1. Move the head to the write track offset position specified by the "hpe5022\_writeTrackOffset" function.
2. If seqType is set to "hpe5022\_SEQ\_ER\_WR\_M", erase the track.
3. If seqType is set to "hpe5022\_SEQ\_ER\_WR\_M" or "hpe5022\_SEQ\_WR\_M", write the data pattern specified by the "hpe5022\_selectPattern" function.
4. Move the head to read track offset position specified by the "hpe5022\_readTrackOffset" function.
5. Measure the power level using a spectrum analyzer.

The "hpe5022\_spectrumOptSaData\_Q" function returns the measurement result.

### Parameters

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- seqType

Description Specifies the type of measurement sequence.

Direction IN

Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Erase->Write->Measurement
hpe5022_SEQ_WR_M	1	Write->Measurement
hpe5022_SEQ_M	2	Measurement

- detMode

Description Specifies the detection mode of the spectrum analyzer. Select sample mode when the noise is measured. Select positive peak mode when the signal is measured.

Direction IN  
 Values

Name	Value	Description
hpe5022_SPEC_DET_SAMP	1	Sample Mode
hpe5022_SPEC_DET_POS_PEAK	2	Positive Peak Mode

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' and/or 'detMode' is out of range.

**See Also**

- “hpe5022\_readTrackOffset” on page 219
- “hpe5022\_writeTrackOffset” on page 222
- “hpe5022\_spectrumOptSaData\_Q” on page 1074
- “hpe5022\_spectrumOptSaDataAll\_Q” on page 1076
- “hpe5022\_driveState” on page 209

## **hpe5022\_setupSpectrumOptSa**

### **C Syntax**

ViStatus hpe5022\_setupSpectrumOptSa(ViSession id, ViInt16 seqType, ViInt16 detMode, ViPObject testHndl);

### **Visual Basic Syntax**

hpe5022\_setupSpectrumOptSa(ByVal id As Long, ByVal seqType As Integer, ByVal detModeAs Integer, ByRef testHndl As long) As Long

### **Description**

This function assigns the 4396B's spectrum measurement sequence to the specified test identifier. See the "hpe5022\_measureSpectrumOptSa" function for details about the sequence. This function does not execute the measurement. Measurement is executed by the "hpe5022\_measure" function with the test identifier specified in this function

The "hpe5022\_spectrumOptSaData\_Q" function returns the measurement result.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- seqType
  - Description Specifies the type of measurement sequence.
  - Direction IN
  - Values Same as the 'seqType' in the "hpe5022\_measureSpectrumOptSa" function.
- detMode
  - Description Specifies the detection mode of the spectrum analyzer. Select sample mode when the noise is measured. Select positive peak mode when the signal is measured.
  - Direction IN
  - Values Same as the 'detMode' in the "hpe5022\_measureSpectrumOptSa" function.
- testHndl
  - Description Returns the test identifier. This identifier is used to execute the spectrum measurement using 4396B by the "hpe5022\_measure" function.
  - Direction OUT



## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' and/or 'detMode' is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the "hpe5022_releaseSetup" function.

## See Also

"hpe5022\_measureSpectrumOptSa" on page 1070

"hpe5022\_spectrumOptSaData\_Q" on page 1074

"hpe5022\_spectrumOptSaDataAll\_Q" on page 1076

"hpe5022\_measure" on page 387

"hpe5022\_releaseSetup" on page 390

## **hpe5022\_spectrumOptSaData\_Q**

**C Syntax** ViStatus hpe5022\_spectrumOptSaData\_Q(ViSession id, ViReal64 freq, ViPReal64 data);

**Visual Basic Syntax** hpe5022\_spectrumOptSaData\_Q(ByVal id As Long, ByVal freq As Double, ByRef data As Double) As Long

**Description** This function returns a power level for specified frequency. As the spectrum analyzer measures only at the measurement frequencies returned by the “hpe5022\_spectrumOptSaDataAll\_Q” function, the returned data is a interpolated value from the measurement result returned by the “hpe5022\_spectrumOptSaDataAll\_Q” function.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  
- freq
 

Description	Specifies the center frequency.
Direction	IN
Unit	Hz
Values	

Name	Value
hpe5022_SPEC_OPT_SA_FREQ_MIN	0
hpe5022_SPEC_OPT_SA_FREQ_MAX	1.8×10 <sup>9</sup>

- data
 

Description	Returns the power level at specified frequency.
Direction	OUT
Unit	dBm

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_PARAMETER	The parameter 'freq' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The spectrum data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureSpectrumOptSa” on page 1070

“hpe5022\_setupSpectrumOptSa” on page 1072

“hpe5022\_spectrumOptSaDataAll\_Q” on page 1076

## **hpe5022\_spectrumOptSaDataAll\_Q**

### **C Syntax**

ViStatus hpe5022\_spectrumOptSaDataAll\_Q (ViSession id, ViPInt16 points, ViReal64 freq[], ViReal64 data[]);

### **Visual Basic Syntax**

hpe5022\_spectrumOptSaDataAll\_Q(ByVal id As Long, ByRef points As Integer, ByRef freq As Double, ByRef data As Double) As Long

### **Description**

This function returns data of power level for all measurement points of 4396B.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- points
  - Description Returns the number of measurement points.
  - Direction OUT
- freq
  - Description Returns the data array of the frequency. The array size is same as the number of the 'point' parameter. The frequency points determined from the start, the stop frequencies and the resolution band width.
  - Direction OUT
  - Unit Hz
- data
  - Description Returns the data array of the power level. The array size is same as the 'point' parameter.
  - Direction OUT
  - Unit dBm

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_DATA_CORRUPT	The spectrum measurement data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureSpectrumOptSa” on page 1070

“hpe5022\_setupSpectrumOptSa” on page 1072

“hpe5022\_spectrumOptSaData\_Q” on page 1074


### hpe5022\_spectrumOptSaNoise\_Q

**C Syntax** hpe5022\_spectrumOptSaNoise\_Q (ViSession id, ViReal64 freqLow, ViReal64 freqHigh, ViPReal64 noise);

**Visual Basic Syntax** hpe5022\_spectrumOptSaNoise\_Q(ByVal id As Long, ByVal freqLow As Double, ByVal freqHigh As Double, ByRef noise As Double) As Long

**Description** This function returns the calculated noise level from spectrum data. The portion of signal peak is removed and noise level is calculated.

**Figure 5-1 Noise Level Measurement**

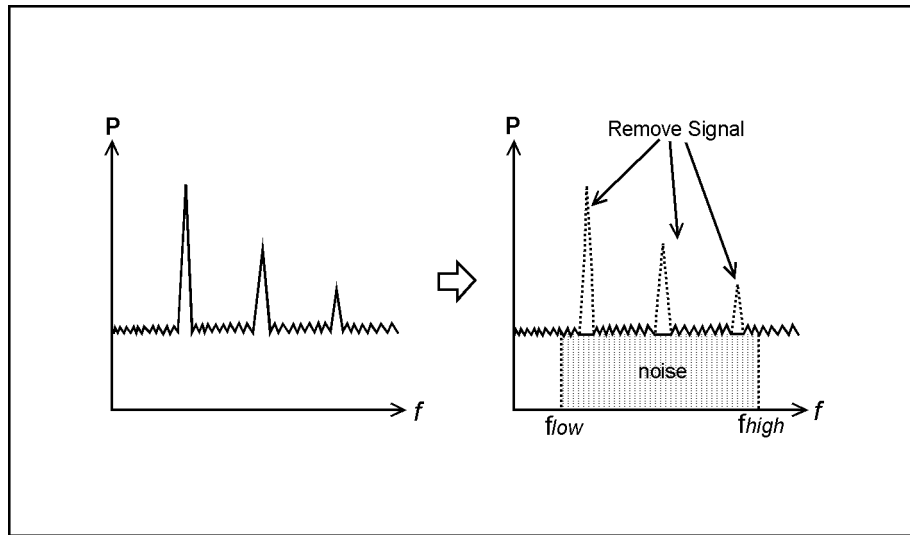

e5022ape03023

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- freqLow
  - Description Specifies the low integration range of frequency.
  - Direction IN
  - Unit Hz
  - Values

Name	Value
hpe5022_SPEC_OPT_SA_FREQ_MIN	0

Name	Value
hpe5022_SPEC_OPT_SA_FREQ_MAX	1.8×10 <sup>9</sup>

- freqHigh

Description Specifies the high integration range of frequency.

Direction IN

Unit Hz

Values

Name	Value
hpe5022_SPEC_OPT_SA_FREQ_MIN	0
hpe5022_SPEC_OPT_SA_FREQ_MAX	1.8×10 <sup>9</sup>

- noise

Description Returns the noise level.

Direction OUT

Unit rms Volt

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'freqLow' or/and 'freqHigh' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The spectrum measurement data is corrupt. Check if your measurement sequence is correct.

### See Also

“hpe5022\_measureSpectrumOptSa” on page 1070

“hpe5022\_setupSpectrumOptSa” on page 1072

“hpe5022\_spectrumOptSaDataAll\_Q” on page 1076

## Spectral SNR Measurement Using 4396B

This section describes the functions related with spectral SNR measurement using 4396B. The spectral SNR measurement is measured by a 4396B spectrum analyzer.

### hpe5022\_spectralSnrOptSaFrequency

**C Syntax** ViStatus hpe5022\_spectralSnrOptSaFrequency(ViSession id, ViReal64 startFreq, ViReal64 stopFreq);

**VB Syntax** hpe5022\_spectralSnrOptSaFrequency(ByVal id As Long, ByVal startFreq As Double, ByVal stopFreq As Double) As Long

**Description** This function specifies the starting and stopping frequencies of a 4396B spectrum analyzer for spectral SNR measurement.

**Parameters**

- id

Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- startFreq

Description Specifies the starting frequency.

Direction IN

Unit Hz

Preset Value 0 (hpe5022\_SPEC\_OPT\_SA\_FREQ\_MIN)

Values

Name	Value
hpe5022_SPEC_OPT_SA_FREQ_MIN	0
hpe5022_SPEC_OPT_SA_FREQ_MAX	$1.8 \times 10^9$

- stopFreq

Description Specifies the stopping frequency.

Direction IN

Unit Hz

Preset Value  $1.8 \times 10^9$  (hpe5022\_SPEC\_OPT\_SA\_FREQ\_MAX)



Values

Name	Value
hpe5022_SPEC_OPT_SA_FREQ_MIN	0
hpe5022_SPEC_OPT_SA_FREQ_MAX	$1.8 \times 10^9$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'startFreq' or/and 'stopFreq' is out of range.

**See Also**

"hpe5022\_spectralSnrOptSaFrequency\_Q" on page 1082

## **hpe5022\_spectralSnrOptSaFrequency\_Q**

- C Syntax** ViStatus hpe5022\_spectralSnrOptSaFrequency\_Q(ViSession id, ViPReal64 startFreq, ViPReal64 stopFreq);
- VB Syntax** hpe5022\_spectralSnrOptSaFrequency\_Q(ByVal id As Long, ByRef startFreq As Double, ByRef stopFreq As Double) As Long
- Description** This function returns the starting and stopping frequencies of a 4396B spectrum analyzer for the spectral SNR measurement.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- startFreq
  - Description Returns the starting frequency.
  - Direction OUT
  - Unit Hz
- stopFreq
  - Description Returns the stopping frequency.
  - Direction OUT
  - Unit Hz

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_spectralSnrOptSaFrequency" on page 1080

## hpe5022\_spectralSnrOptSaBandWidth

**C Syntax** ViStatus hpe5022\_spectralSnrOptSaBandWidth(ViSession id, ViReal64 rbw, ViReal64 vbw);

**VB Syntax** hpe5022\_spectralSnrOptSaBandWidth(ByVal id As Long, ByVal rbw As Double, ByVal vbw As Double) As Long

**Description** This function specifies the resolution band width and video band width of the 4396B spectrum analyzer for the spectral SNR measurement. Resolution band width allows you to improve the resolution of frequency, i.e, selectivity of signal, and also to reduce the display noise. On the other hand, video band width reduces the noise variations and makes the signal clearly visible.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  
- rbw
 

Description	Specifies the resolution band width. Narrowing this, will widen the dynamic range. Widening this, makes measurement speed faster. This can be set to $10 \times 10^3$ , $30 \times 10^3$ , $100 \times 10^3$ , $300 \times 10^3$ , $1 \times 10^6$ and $3 \times 10^3$ . When the value other than these values is set, the closest and lower value is set automatically.
Direction	IN
Unit	Hz
Preset Value	$10 \times 10^3$
Values	

Name	Value
hpe5022_SPEC_OPT_SA_BW_MIN	$10 \times 10^3$
hpe5022_SPEC_OPT_SA_BW_MAX	$3 \times 10^6$
  
- vbw
 

Description	Specifies the video band width. Narrowing this, will reduce the noise variation. Widening this, will speed up measurement. The value of 1/1, 1/3, 1/30, 1/100 or 1/300 of the resolution band width can be set as a video band width. When other value is entered, the value is set automatically to the closest and lower value of the setting.
-------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Function Reference for Measurement using Agilent 4396B  
**Spectral SNR Measurement Using 4396B**

Direction        IN  
 Unit             Hz  
 Preset Value     $10 \times 10^3$   
 Values

Name	Value
hpe5022_SPEC_OPT_SA_VBW_MIN	30
hpe5022_SPEC_OPT_SA_VBW_MAX	$3 \times 10^6$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'rbw' and/or 'vbw' is out of range.

**See Also**

“hpe5022\_spectralSnrOptSaBandWidth\_Q” on page 1085

## **hpe5022\_spectralSnrOptSaBandWidth\_Q**

**C Syntax** ViStatus hpe5022\_spectralSnrOptSaBandWidth\_Q(ViSession id, ViPReal64 rbw, ViPReal64 vbw);

**VB Syntax** hpe5022\_spectralSnrOptSaBandWidth\_Q(ByVal id As Long, ByRef rbw As Double, ByRef vbw As Double) As Long

**Description** This function returns the resolution band width and the video band width of the 4396B spectrum analyzer for the spectral SNR measurement.

**Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- rbw
 

Description	Returns the resolution band width.
Direction	OUT
Unit	Hz
- vbw
 

Description	Returns the video band width.
Direction	OUT
Unit	Hz

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.

**See Also** "hpe5022\_spectralSnrOptSaBandWidth" on page 1083

## **hpe5022\_measureSpectralSnrOptSa**

### **C Syntax**

ViStatus hpe5022\_measureSpectralSnrOptSa(ViSession id, ViInt16 seqType);

### **Visual Basic Syntax**

hpe5022\_measureSpectralSnrOptSa(ByVal id As Long, ByVal seqType As Integer) As Long

### **Description**

This function measures the spectral SNR using 4396B according to the specified sequence type. There are three sequence types: 1) erase, write data, then measure 2) no erase, write data, then measure 3) measure only. The sequence is as follows:

1. Move the head to the write track offset position specified by the “hpe5022\_writeTrackOffset” function.
2. If seqType is set to “hpe5022\_SEQ\_ER\_WR\_M”, erase the track.
3. If seqType is set to “hpe5022\_SEQ\_ER\_WR\_M” or “hpe5022\_SEQ\_WR\_M”, write the data pattern specified by the “hpe5022\_selectPattern” function.
4. Move the head to the read track offset position specified by the “hpe5022\_readTrackOffset” function.
5. Measure noise level. (Same as follows)
  - a. “hpe5022\_measureSpectrumOptSa” (seqType: hpe5022\_SEQ\_M, detMode: hpe5022\_SPEC\_DET\_SAMP)
  - b. The data returned from “hpe5022\_spectrumOptSaNoise\_Q” becomes the noise level.
6. Measure the peak signal level. (Same as follows)
  - a. “hpe5022\_measureSpectrumOptSa” (seqType: hpe5022\_SEQ\_M, detMode: hpe5022\_SPEC\_DET\_POS\_PEAK)
  - b. The maximum data returned from “hpe5022\_spectrumOptSaDataAll\_Q” becomes the peak signal level.

The “hpe5022\_spectralSnrOptSa\_Q” function returns the measurement result.

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- seqType
  - Description Specifies the type of measurement sequence.
  - Direction IN

Values

Name	Value	Description
hpe5022_SEQ_ER_WR_M	0	Erase->Write->Measurement
hpe5022_SEQ_WR_M	1	Write->Measurement
hpe5022_SEQ_M	2	Measurement

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'seqType' is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand is turned off. Turn it on before executing this function. See the "hpe5022_driveState" function.

**See Also**

- "hpe5022\_readTrackOffset" on page 219
- "hpe5022\_writeTrackOffset" on page 222
- "hpe5022\_spectralSnrOptSa\_Q" on page 1090
- "hpe5022\_driveState" on page 209

## **hpe5022\_setupSpectralSnrOptSa**

- C Syntax** ViStatus hpe5022\_setupSpectralSnrOptSa(ViSession id, ViInt16 seqType, ViPObject testHndl);
- Visual Basic Syntax** hpe5022\_setupSpectralSnrOptSa(ByVal id As Long, ByVal seqType As Integer, ByRef testHndl As long) As Long
- Description** This function assigns the 4396B’s spectral SNR measurement sequence to the specified test identifier. See the “hpe5022\_measureSpectralSnrOptSa” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function
- The “hpe5022\_spectralSnrOptSa\_Q” function returns the measurement result.
- Parameters**
- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
  - seqType
 

Description	Specifies the type of measurement sequence.
Direction	IN
Values	Same as the ‘seqType’ in the “hpe5022_measureSpectralSnrOptSa” function.
  - testHndl
 

Description	Returns the test identifier. This identifier is used to execute the spectrum measurement using 4396B by the “hpe5022_measure” function.
Direction	OUT

### **Return Values**

<b>Completion Code</b>	<b>Description</b>
VI_SUCCESS	No Error

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘seqType’ is out of range.



Error Code	Description
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_measureSpectralSnrOptSa” on page 1086

“hpe5022\_spectralSnrOptSa\_Q” on page 1090

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390

## hpe5022\_spectralSnrOptSa\_Q

### C Syntax

ViStatus hpe5022\_spectralSnrOptSa\_Q(ViSession id, ViPReal64 signal, ViPReal64 noise, ViPReal64 snr);

### Visual Basic Syntax

hpe5022\_spectralSnrOptSa\_Q(ByVal id As Long, ByRef signal As Double, ByRef noise As Double, ByRef snr As Double) As Long

### Description

This function returns result of the spectral SNR measurement using 4396B. The signal level, the noise level, and the SNR are returned.

### Parameters

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- signal
 

Description	Returns the measured signal level.
Direction	OUT
Unit	Volt
- noise
 

Description	Returns the measured noise level.
Direction	OUT
Unit	rms Volt
- snr
 

Description	Returns the measured SNR.
Direction	OUT
Unit	dB

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_DATA_CORRUPT	The spectrum data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureSpectralSnrOptSa” on page 1086

“hpe5022\_setupSpectralSnrOptSa” on page 1088

---

## Channel Bit Rate Sweep Measurement Using 4396B

This section describes the functions related with the channel bit rate sweep measurement using 4396B.

### hpe5022\_measureChannelBitRateSweepOptSa

#### C Syntax

```
ViStatus hpe5022_measureChannelBitRateSweepOptSa(ViSession id, ViInt16 measFunc, ViInt16 points, const ViReal64 chanBitRate[]);
```

#### Visual Basic Syntax

```
hpe5022_measureChannelBitRateSweepOptSa (ByVal id As Long, ByVal measFunc As Integer, ByVal points As Integer, ByRef chanBitRate As Double) As Long
```

#### Description

This function measures the channel bit rate sweep measurement. The sequences of this function are as follows:

1. Set *i* to zero. (*i* = 0)
2. Set a channel bit rate to 'chanBitRate[*i*]' (see parameters)
3. Make a measurement specified by 'measFunc'. The detailed measurement sequence is described in each measurement function.
4. Increment *i* by 1. (*i* = *i*+1)
5. If *i* is not equal to 'points' (see parameter), go to the step 2.

The "hpe5022\_channelBitRateSweepOptSaData\_Q" function returns the measurement result.

#### Parameters

- **id**  
Description Specifies the system identifier. This is given by the "hpe5022\_init" function.  
Direction IN  
Type ViSession
- **measFunc**  
Description Specifies the type of measurement. Only "hpe5022\_MEAS\_NB\_TAA" can be selected.  
Direction IN

#### Values

Name	Value	Description
hpe5022_MEAS_NB_TAA	5	Measure narrow band TAA

- points

**Description** Specifies the number of measurement points. This number must be the same as the array size of the channel bit rate list.

**Direction** IN

**Value**

Name	Value
hpe5022_LIST_SWEEP_COUN_MIN	1
hpe5022_LIST_SWEEP_COUN_MAX	101

- chanBitRate

**Description** Specifies the channel bit rate as the data array. The channel bit rate will be set to data in array order. The range of channel bit rate is returned by the “hpe5022\_channelBitRateRange\_Q” function.

**Direction** IN

**Unit** bps (bit per second)

## Return Values

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘measFunc’, ‘points’ and/or ‘chanbitRate’ is out of range.
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the “hpe5022_driveState” function.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.

Function Reference for Measurement using Agilent 4396B  
**Channel Bit Rate Sweep Measurement Using 4396B**

Error Code	Description
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

“hpe5022\_setupChannelBitRateSweepOptSa” on page 1095

“hpe5022\_channelBitRateSweepOptSaData\_Q” on page 1097

“hpe5022\_channelBitRateRange\_Q” on page 118

## hpe5022\_setupChannelBitRateSweepOptSa

### C Syntax

```
ViStatus hpe5022_setupChannelBitRateSweepOptSa(ViSession id, ViInt16 measFunc, ViInt16 points, const ViReal64 chanBitRate[], ViPObject testHndl);
```

### Visual Basic Syntax

```
hpe5022_setupChannelBitRateSweepOptSa (ByVal id As Long, ByVal measFunc As Integer, ByVal points As Integer, ByRef chanBitRate As Double, ByRef testHndl As Long) As Long
```

### Description

This function assigns the channel bit rate measurement sequence to the specified test identifier. Refer to the “hpe5022\_measureChannelBitRateSweepOptSa” function for details about the sequence. This function does not execute the measurement. Measurement is executed by the “hpe5022\_measure” function with the test identifier specified in this function.

The “hpe5022\_channelBitRateSweepOptSaData\_Q” function returns the measurement result.

### Parameters

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- measFunc
  - Description Specifies the type of measurement.
  - Direction IN
  - Values Same as the ‘measFunc’ in the “hpe5022\_measureChannelBitRateSweepOptSa” function.
- points
  - Description Specifies the number of measurement points. This number must be the same as the array size of the channel bit rate list.
  - Direction IN
  - Values Same as the ‘points’ in the “hpe5022\_measureChannelBitRateSweepOptSa” function.
- chanBitRate
  - Description Specifies the channel bit rate as the data array. The channel bit rate will be set to data in the array order.
  - Direction IN
  - Unit bps (bit per second)
  - Values Same as the ‘chanBitRate’ in the “hpe5022\_measureChannelBitRateSweepOptSa” function.

Function Reference for Measurement using Agilent 4396B  
**Channel Bit Rate Sweep Measurement Using 4396B**

- testHndl

Description Returns the test identifier. This identifier is used to execute the channel bit rate sweep measurement by the “hpe5022\_measure” function.

Direction OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘measFunc’ , ‘points’ and/or ‘chanbitRate’ is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

“hpe5022\_measureChannelBitRateSweepOptSa” on page 1092

“hpe5022\_channelBitRateSweepOptSaData\_Q” on page 1097

“hpe5022\_measure” on page 387

“hpe5022\_releaseSetup” on page 390



## hpe5022\_channelBitRateSweepOptSaData\_Q

### C Syntax

ViStatus hpe5022\_channelBitRateSweepOptSaData\_Q(ViSession id, ViInt16 dataType, ViReal64 data[]);

### Visual Basic Syntax

hpe5022\_channelBitRateSweepOptSaData\_Q (ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long

### Description

This function returns the result of the channel bit rate sweep measurement. The returned data are set in array, and its size is specified by the 'points' parameter. The 'points' and the channel bit rate list are specified by the "hpe5022\_measureChannelBitRateSweepOptSa" function or "hpe5022\_setupChannelBitRateSweepOptSa" function.

### Parameters

- id  
 Description Specifies the system identifier. This is given by the "hpe5022\_init" function.

Direction IN

- dataType  
 Description Specifies the type of data to be reported. Only "hpe5022\_DATA\_NB\_TAA" can be selected.

Direction IN

Values

Name	Value	Description
hpe5022_DATA_NB_TAA	15	Narrow band TAA

- data  
 Description Returns the data (set in array) of the parameter specified by the 'dataType'. The size of array is specified by the 'points' parameter in the "hpe5022\_measureChannelBitRateSweepOptSa" or "hpe5022\_setupChannelBitRateSweepOptSa" function. Each value in the array is the measurement result at each channel bit rate list.

Direction OUT

### Return Values

Completion Code	Description
VI_SUCCESS	No Error

Function Reference for Measurement using Agilent 4396B  
**Channel Bit Rate Sweep Measurement Using 4396B**

<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by “id” is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘dataType’ is out of range.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureChannelBitRateSweepOptSa” on page 1092

“hpe5022\_setupChannelBitRateSweepOptSa” on page 1095

## Roll Off Measurement Using 4396B

This section describes the functions related with the roll off measurement using 4396B. The roll off measurement is a flux frequency sweep measurement.

### hpe5022\_measureRollOffOptSa

#### C Syntax

```
ViStatus hpe5022_measureRollOffOptSa(ViSession id, ViInt16 measFunc,
ViInt16 points, const ViReal64 fluxFreq[]);
```

#### Visual Basic Syntax

```
hpe5022_measureRollOffOptSa(ByVal id As Long, ByVal measFunc As Integer,
ByVal points As Integer, ByRef fluxFreq As Double) As Long
```

#### Description

This function measures the roll off characteristic curve. The sequences of this function are as follows:

1. Set *i* to zero. (*i* = 0)
2. Move the head to the write track offset specified by the “hpe5022\_writeTrackOffset” function.
3. Perform DC erase of an entire track.
4. Set the flux frequency at ‘fluxFreq[*i*]’ (see parameters).
5. Write a repetitive pattern at the specified flux frequency for an entire track.
6. Move the head to the read track offset specified by the “hpe5022\_readTrackOffset” function.
7. Make measurement as specified by ‘measFunc’. The detailed measurement sequence is described in each measurement function
8. Increment *i* by 1. (*i* = *i*+1)
9. If *i* is not equal to ‘points’ (see parameters), go to step 2.

The “hpe5022\_rollOffOptSaData\_Q” function returns the measurement result.

#### Parameters

- **id**

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN
- **measFunc**

Description	Specifies the type of measurement. Only “hpe5022_MEAS_NB_TAA” can be selected.
Direction	IN

Function Reference for Measurement using Agilent 4396B  
**Roll Off Measurement Using 4396B**

Values

Name	Value	Description
hpe5022_MEAS_NB_TAA	5	Measure narrow band TAA

- points

Description Specifies the number of measurement points. This number must be the same as the array size of the flux frequency list.

Direction IN

Values

Name	Value
hpe5022_LIST_SWEEP_COUN_MIN	1
hpe5022_LIST_SWEEP_COUN_MAX	101

- fluxFreq

Description Specifies the flux frequency data as the data array. The flux frequency will be set to data in the array order. The maximum limit of this value is returned by the “hpe5022\_channelBitRateRange\_Q” function.

Direction IN

Unit flux per second

Values

Name	Value
hpe5022_ROLLOFF_FREQ_MIN	$4 \times 10^6$

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_HARD_HAMP	Hardware error is detected in the head amplifier.
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.

Error Code	Description
hpe5022_ERROR_INV_DRIVE_CONDITION	The spinstand drive has been turned off. Turn it on before executing this function. See the “hpe5022_driveState” function.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘measFunc’, ‘points’ and/or ‘fluxFreq’ is out of range.
hpe5022_ERROR_OVERFLOW	An overflow is detected in the parametric module. Check if the parameter setting is correct.
hpe5022_ERROR_THERMAL_ASPERITY	Thermal Asperity is detected. Check the head and media. This error occurs when the overflow is detected but the average of measurement is under the limit.
hpe5022_ERROR_UNDERFLOW	An underflow is detected in the parametric module. Check if the parameter setting is correct.

**See Also**

“hpe5022\_rollOffOptSaData\_Q” on page 1104

“hpe5022\_writeTrackOffset” on page 222

“hpe5022\_readTrackOffset” on page 219

“hpe5022\_driveState” on page 209

“hpe5022\_channelBitRateRange\_Q” on page 118

## **hpe5022\_setupRollOffOptSa**

### **C Syntax**

ViStatus hpe5022\_setupRollOffOptSa(ViSession id, ViInt16 measFunc, ViInt16 points, const ViReal64 fluxFreq[], ViPObject testHndl);

### **Visual Basic Syntax**

hpe5022\_setupRollOffOptSa(ByVal id As Long, ByVal measFunc As Integer, ByVal points As Integer, ByRef fluxFreq As Double, ByRef testHndl As Long) As Long

### **Description**

This function assigns the 4396B's roll off measurement sequence to the specified test identifier. Refer to the "hpe5022\_measureRollOffOptSa" function for details about the sequence. This function does not execute the measurement. Measurement is executed by the "hpe5022\_measure" function with the test identifier specified in this function.

The "hpe5022\_rollOffOptSaData\_Q" function returns the measurement result

### **Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN
- measFunc
  - Description Specifies the type of measurement.
  - Direction IN
  - Values Same as the 'measFunc' in the "hpe5022\_measureRollOffOptSa" function.
- points
  - Description Specifies the number of measurement points. This number must be the same as the array size of the flux frequency list.
  - Direction IN
  - Values Same as the 'points' in the "hpe5022\_measureRollOffOptSa" function.
- fluxFreq
  - Description Specifies the flux frequency data as the data array. The flux frequency will be set to data in the array order.
  - Direction IN
  - Unit flux per second
  - Values Same as the 'fluxFreq' in the "hpe5022\_measureRollOffOptSa" function.

- testHndl
 

Description	Returns the test identifier. This identifier is used to execute the roll off measurement by the “hpe5022_measure” function.
Direction	OUT

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘measFunc’, ‘points’ and/or ‘fluxFreq’ is out of range.
hpe5022_ERROR_MEM_ALLOC	Lack of memory. Release the finished setup function using the “hpe5022_releaseSetup” function.

**See Also**

- “hpe5022\_measureRollOffOptSa” on page 1099
- “hpe5022\_rollOffOptSaData\_Q” on page 1104
- “hpe5022\_measure” on page 387
- “hpe5022\_releaseSetup” on page 390

## **hpe5022\_rollOffOptSaData\_Q**

**C Syntax** ViStatus hpe5022\_rollOffOptSaData\_Q(ViSession id, ViInt16 dataType, ViReal64 data[]);

**Visual Basic Syntax** hpe5022\_rollOffOptSaData\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef data As Double) As Long

**Description** This function returns the result of the roll off measurement using 4396B. The returned data are set in array, and its size is specified by the 'points' parameter. The 'points' and the flux frequency list are specified by the "hpe5022\_measureRollOffOptSa" function or "hpe5022\_setupRollOffOptSa" function

### **Parameters**

- id
 

Description	Specifies the system identifier. This is given by the "hpe5022_init" function.
Direction	IN

- dataType
 

Description	Specifies the type of data to be reported. Only "hpe5022_DATA_NB_TAA" can be selected.
Direction	IN

Values

Name	Value	Description
hpe5022_DATA_NB_TAA	15	Narrow band TAA

- data
 

Description	Returns the data (set in array) of the parameter specified by the 'dataType'. The size of array is specified by the 'points' parameter in the "hpe5022_measureRollOffOptSa" or "hpe5022_setupRollOffOptSa" function. Each value in the array is the measurement result relative to the flux frequency that corresponds to the same order value in the array of flux frequency list.
Direction	OUT

### **Return Values**

Completion Code	Description
VI_SUCCESS	No Error



<b>Error Code</b>	<b>Description</b>
hpe5022_ERROR_INV_ID	The handle specified by 'id' is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter 'dataType' is out of range.
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.

**See Also**

“hpe5022\_measureRollOffOptSa” on page 1099

“hpe5022\_setupRollOffOptSa” on page 1102

## hpe5022\_calculateD50OptSa\_Q

- C Syntax** ViStatus hpe5022\_calculateD50OptSa\_Q(ViSession id, ViInt16 dataType, ViPReal64 d50);
- Visual Basic Syntax** hpe5022\_calculateD50OptSa\_Q(ByVal id As Long, ByVal dataType As Integer, ByRef d50 As Double) As Long
- Description** This function calculates D<sub>50</sub> (Roll Off Density) in flux per second. D<sub>50</sub> is a flux frequency value at half of the peak level in the data returned by the “hpe5022\_rollOffOptSaData\_Q” function.

**Parameters**

- id
  - Description Specifies the system identifier. This is given by the "hpe5022\_init" function.
  - Direction IN

- dataType
  - Description Specifies the type of data to be reported. Only “hpe5022\_DATA\_NB\_TAA” can be selected.
  - Direction IN

Values

Name	Value	Description
hpe5022_DATA_NB_TAA	15	Narrow band TAA

- d50
  - Description Returns the D50.
  - Direction OUT
  - Unit flux per second

**Return Values**

Completion Code	Description
VI_SUCCESS	No Error

Error Code	Description
hpe5022_ERROR_INV_ID	The handle specified by ‘id’ is invalid.
hpe5022_ERROR_INV_PARAMETER	The parameter ‘dataType’ is out of range.

Error Code	Description
hpe5022_ERROR_DATA_CORRUPT	The data is corrupt. Check if your measurement sequence is correct.
hpe5022_ERROR_D50_NOT_FOUND	Can't find the D50 parameter point. Check the data returned by the "hpe5022_rollOffOptSaData_Q" function.

**See Also**

"hpe5022\_measureRollOffOptSa" on page 1099

"hpe5022\_setupRollOffOptSa" on page 1102

"hpe5022\_rollOffOptSaData\_Q" on page 1104

Function Reference for Measurement using Agilent 4396B  
**Roll Off Measurement Using 4396B**

---

## **A** **Manual Changes**

This appendix contains the information of the firmware/software versions and or configurations of the Agilent Technologies E5022/E5023. The information in this manual applies directly to an Agilent Technologies E5022/E5023 whose firmware/software revision is listed on the title page of this manual.

## **Service Release for Revision B.02.50 from Revision B.02.20**

1. The following functions have been added.

- hpe5022\_headLoadType
- hpe5022\_headLoadType\_Q
- hpe5022\_headLoadRampConfig
- hpe5022\_headLoadRampConfig\_Q

---

## Changes in Revision B.02.20 from Revision B.02.00

1. The following 22 functions have been added.
  - hpe5022\_snrTripleTrackWindowConfig
  - hpe5022\_snrTripleTrackWindowConfig\_Q
  - hpe5022\_snrTripleTrackPositionConfig
  - hpe5022\_snrTripleTrackPositionConfig\_Q
  - hpe5022\_snrTripleTrackAdjacentTrackConfig
  - hpe5022\_snrTripleTrackAdjacentTrackConfig\_Q
  - hpe5022\_snrTripleTrackEraseBandConfig
  - hpe5022\_snrTripleTrackEraseBandConfig\_Q
  - hpe5022\_snrTripleTrackSnrThresholdConfig
  - hpe5022\_snrTripleTrackSnrThresholdConfig\_Q
  - hpe5022\_snrTripleTrackNoiseConstantConfig
  - hpe5022\_snrTripleTrackNoiseConstantConfig\_Q
  - hpe5022\_snrTripleTrackNoiseThresholdConfig
  - hpe5022\_snrTripleTrackNoiseThresholdConfig\_Q
  - hpe5022\_snrTripleTrackFilterConfig
  - hpe5022\_snrTripleTrackFilterConfig\_Q
  - hpe5022\_snrTripleTrackSectorNormalizeConfig
  - hpe5022\_snrTripleTrackSectorNormalizeConfig\_Q
  - hpe5022\_measureSnrTripleTrack
  - hpe5022\_setupSnrTripleTrack
  - hpe5022\_snrTripleTrack\_Q
  - hpe5022\_snrTripleTrackProfile\_Q

## **Changes in Revision B.02.00 from Revision B.01.20**

1. The following functions have been added.
  - hpe5022\_popcornNoiseWritePatternConfig
  - hpe5022\_popcornNoiseWritePatternConfig\_Q
  - hpe5022\_popcornNoiseCtWritePatternConfig
  - hpe5022\_popcornNoiseCtWritePatternConfig\_Q
  - hpe5022\_headAmpInfoFile
  - hpe5022\_headAmpInfoFile\_Q
  - hpe5022\_headAmpIcName\_Q



---

## **Changes in Revision B.01.20 from Revision B.01.10.01**

No changes in functions.

## **Service Release for Revision B.01.00**

### **Changes at Revision B.01.00.01**

1. The following functions have been added.
  - hpe5022\_motorStateEx
  - hpe5022\_motorStateEx\_Q

## Changes in Revision B.01.00 from Revision A.04.30.03

1. The following functions have been added.
  - hpe5022\_headAmpRegister
  - hpe5022\_headAmpRegister\_Q
  - hpe5022\_subModuleIdn\_Q
  - hpe5022\_pwReferenceRange\_Q
  - hpe5022\_writeDataSource
  - hpe5022\_writeDataSource\_Q
  - hpe5022\_autoConfigEraseBand
  - hpe5022\_autoConfigEraseBand\_Q
  - hpe5022\_autoConfigTrackProfile
  - hpe5022\_autoConfigTrackProfile\_Q
2. The error message "VI\_ERROR\_NSUP\_OPER" has been changed to "hpe5022\_ERROR\_NSUP\_OPER".
3. The following functions have been renamed. The old functions are also available.

Old	New
hpe5022_spinStandTtlOutput	hpe5022_spinStand_ttlOutput
hpe5022_spinStandTtlOutput_Q	hpe5022_spinStand_ttlOutput_Q
hpe5022_spinStandTtlInput_Q	hpe5022_spinStand_ttlInput_Q

## Service Release for Revision A.04.30

### Changes at Revision A.04.30.03

1. The following functions has been modified. The maximum number of repeat for multiple write/erase is extended from 1000 to 1000000.
  - hpe5022\_writeMultiple
  - hpe5022\_eraseMultiple

### Changes at Revision A.04.30.02

1. The following functions has been added.
  - hpe5022\_spinStandTtlOutput
  - hpe5022\_spinStandTtlInput\_Q

### Changes at Revision A.04.30.01

1. The following functions has been added.
  - hpe5022\_senseStimulusMode
  - hpe5022\_senseStimulusMode\_Q
  - hpe5022\_senseStimulus
  - hpe5022\_senseStimulus\_Q
  - hpe5022\_senseStimulusRange\_Q
  - hpe5022\_senseReferenceDcr
  - hpe5022\_senseReferenceDcr\_Q
  - hpe5022\_measureSenseStimulusSweep
  - hpe5022\_setupSenseStimulusSweep
  - hpe5022\_measureTrackOffsetPositionError
  - hpe5022\_trackOffsetPositionError\_Q
  - hpe5022\_trackOffsetUserSettlingTime
  - hpe5022\_trackOffsetUserSettlingTime\_Q
  - hpe5022\_trackOffsetImmediateQ

---

## Changes in Revision A.04.30 from Revision A.04.30.04

1. The following functions has been added.
  - hpe5022\_trackOffsetCompPatternPosition
  - hpe5022\_trackOffsetCompPatternPosition\_Q
  - hpe5022\_diskSizeRestriction
  - hpe5022\_diskSizeRestriction\_Q
  - hpe5022\_headPositionSpeed
  - hpe5022\_headPositionSpeed\_Q
  - hpe5022\_headPositionSpeedRange\_Q
  - hpe5022\_BER\_optimizeSequenceConfig
  - hpe5022\_BER\_optimizeSequenceConfig\_Q

## **Service Release for Revision A.04.20**

### **Changes at Revision A.04.20.02**

1. The following functions has been added.
  - hpe5022\_trackOffsetCompInterval
  - hpe5022\_trackOffsetCompInterval\_Q
  - hpe5022\_narrowBandTaaTawDataSize\_Q
  - hpe5022\_narrowBandTaaTawData\_Q
  - hpe5022\_narrowBandTaaTawStatistic\_Q

### **Changes at Revision A.04.20.01**

1. The following functions has been added.
  - hpe5022\_eraseWideBand
  - hpe5022\_searchTrack

---

## Changes in Revision A.04.20 from Revision A.04.10

1. The following functions has been added.
  - hpe5022\_writeMultiple
  - hpe5022\_eraseMultiple
  - hpe5022\_senseCurrentPolarity
  - hpe5022\_senseCurrentPolarity\_Q
  - hpe5022\_trackOffsetCompProfile
  - hpe5022\_trackOffsetCompProfile\_Q
  - hpe5022\_trackOffsetCompPattern
  - hpe5022\_trackOffsetCompPattern\_Q
  - hpe5022\_trackOffsetCompPatternAuto
  - hpe5022\_trackOffsetCompPatternState
  - hpe5022\_trackOffsetCompPatternState\_Q
  - hpe5022\_writeTrackOffsetCompPattern
  - hpe5022\_trackOffsetCompRevolution
  - hpe5022\_trackOffsetCompRevolution\_Q
  - hpe5022\_executeTrackOffsetComp
  - hpe5022\_trackOffsetCompValue
  - hpe5022\_trackOffsetCompValue\_Q
  - hpe5022\_releaseSeqAll

## **Changes in Revision A.04.10 from Revision A.04.00.01**

1. The following functions has been added.
  - hpe5022\_measureSideReading
  - hpe5022\_setupSideReading
  - hpe5022\_sideReading\_Q
  - hpe5022\_sideReadingDataSize\_Q
  - hpe5022\_sideReadingData\_Q
  - hpe5022\_sideReadingStatistic\_Q
  - hpe5022\_measureSideErase
  - hpe5022\_setupSideErase
  - hpe5022\_sideErase\_Q
  - hpe5022\_sideEraseDataSize\_Q
  - hpe5022\_sideEraseData\_Q
  - hpe5022\_sideEraseStatistic\_Q
  - hpe5022\_stabilitySequenceConfig
  - hpe5022\_stabilitySequenceConfig\_Q
2. The parameter of 'hpe5022\_MICRO\_TRACK\_STEP\_MIN' in the hpe5022\_nucriTrackConfig function has been changed from 50 nm to 1 nm.



---

## Service Release for Revision A.04.00

### Changes in Revision A.04.00.01 from Revision A.04.00

1. In Bit Error Measurement, the following functions are added.
  - hpe5022\_BER\_adjacentTrackPattern
  - hpe5022\_BER\_adjacentTrackPattern\_Q

## **Changes in Revision A.04.00 from Revision A.03.81.04**

1. The resource names of E5037B and E5040A have been added in hpe5022\_init function.
2. The video band width in spectrum measurement is set at the same value of the resolution band width in case of E5040A.
  - hpe5022\_spectrumBandWidth
  - hpe5022\_spectralSnrBandWidth

---

## Service Release for Revision A.03.81

### Changes in Revision A.03.81.04 from Revision A.03.81.03

The following functions are added.

- \* hpe5022\_measureChannelBitRateSweepOptSa
- \* hpe5022\_setupChannelBitRateSweepOptSa
- \* hpe5022\_channelBitRateSweepOptSaData\_Q
- \* hpe5022\_measureRollOffOptSa
- \* hpe5022\_setupRollOffOptSa
- \* hpe5022\_rollOffOptSaData\_Q
- \* hpe5022\_calculateD50OptSa\_Q
- \* hpe5022\_spectrumOptSaFrequency
- \* hpe5022\_spectrumOptSaFrequency\_Q
- \* hpe5022\_spectrumOptSaBandWidth
- \* hpe5022\_spectrumOptSaBandWidth\_Q
- \* hpe5022\_measureSpectrumOptSa
- \* hpe5022\_setupSpectrumOptSa
- \* hpe5022\_spectrumOptSaData\_Q
- \* hpe5022\_spectrumOptSaDataAll\_Q
- \* hpe5022\_spectrumOptSaNoise\_Q
- \* hpe5022\_spectralSnrOptSaFrequency
- \* hpe5022\_spectralSnrOptSaFrequency\_Q
- \* hpe5022\_spectralSnrOptSaBandWidth
- \* hpe5022\_spectralSnrOptSaBandWidth\_Q
- \* hpe5022\_measureSpectralSnrOptSa
- \* hpe5022\_setupSpectralSnrOptSa
- \* hpe5022\_spectralSnrOptSa\_Q

The following function has been modified.

- \* hpe5022\_init

### Changes in Revision A.03.81.02 from Revision A.03.81.01

When the hpe5022\_setupXXXXX functions related to E5038A, such as hpe5022\_setupTaa(), are performed repeatedly, the measurement speed will be improved.

## Changes in Revision A.03.81 from Revision A.03.70

The following function is added.

- hpe5022\_spindleAccelerationRange\_Q

(This function returns the maximum and minimum allowable accelerations of the spindle which is used as a reference to specify the acceleration “accel” in the “hpe5022\_spindleAcceleration” function.)

The parameter “hpe5022\_BER\_COUN\_MAX” has been modified for the following functions. Refer to Table A-1 “Parameter Modification”.

- hpe5022\_BER\_measureBer
- hpe5022\_BER\_setupBer

**Table A-1 Parameter Modification**

Parameter	Max.(Old)	Max.(New)
hpe5022_BER_COUN_MAX	100	<b>64</b>

The parameter “segment” in the “hpe5022\_measureStability” function has been modified. The user must take the specified RPM into account when setting the gate time parameters (i.e, write time, delay and read time) for the following functions.

- hpe5022\_measureStability
- hpe5022\_setupStability

Timing Limitations
RPM = spindle speed, when spindle speed $\geq$ 2400 rpm
RPM = 2400 rpm, when spindle speed $<$ 2400 rpm

The following functions have been added for Stability Measurement. These newly incorporated functions allow the user to set up the gate timing of read and write operation by absolute time.

- hpe5022\_stabilityStatistic\_Q
- hpe5022\_stabilityAbsWritePatternConfig
- hpe5022\_stabilityAbsWritePatternConfig\_Q
- hpe5022\_stabilityAbsWriteModeConfig
- hpe5022\_stabilityAbsWriteModeConfig\_Q
- hpe5022\_measureStabilityAbs
- hpe5022\_setupStabilityAbs

- hpe5022\_stabilityAbsDataSize\_Q
- hpe5022\_stabilityAbs\_Q
- hpe5022\_stabilityAbsData\_Q
- hpe5022\_stabilityAbsStatistic\_Q
- hpe5022\_stabilityAbsSenseModeConfig
- hpe5022\_stabilityAbsSenseModeConfig\_Q

The following functions have been added for BER Measurement.

- hpe5022\_BER\_trackProfileDataEx\_Q

(This function returns the number of lost sectors, error symbols, total sectors, etc. of the bathtub test)

## Changes in Revision A.03.70 from Revision A.03.60

The following functions have been added.

- hpe5022\_writeBurst
- hpe5022\_setupWriteBurst
- hpe5022\_burstPatternConfig
- hpe5022\_burstPatternConfig\_Q
- hpe5022\_burstFrequencyConfig
- hpe5022\_burstFrequencyConfig\_Q
- hpe5022\_burstGateConfig
- hpe5022\_burstGateConfig\_Q

(The functions mentioned above allows the user to write burst patterns as position information on the disk media.)

The following functions have been added for Head Amplifier.

- hpe5022\_updateHeadAmp
- hpe5022\_headAmpSerialNumber\_Q
- hpe5022\_headAmpBufferName\_Q
- hpe5022\_headAmpBufferSerialNumber\_Q

(The functions mentioned above are used to report the part number and serial number of the head amplifier's buffer board and to update the head amplifier's information.)

The minimum amount of read time for popcorn noise test has been modified for the following parameters.

- hpe5022\_POPCORN\_READ\_TIME\_MIN
- hpe5022\_POPCORN\_CT\_READ\_TIME\_MIN

**Table A-2 Read Time of Popcorn Noise Test**

Module	Parameter	Min.(Old)	Min.(New)
E5038A (Parametric)	hpe5022_POPCORN_READ_TIME_MIN	10×10 <sup>-6</sup>	<b>1×10<sup>-6</sup></b>
E5041A (Dual Counter)	hpe5022_POPCORN_CT_READ_TIME_MIN	10×10 <sup>-6</sup>	<b>1×10<sup>-6</sup></b>

## Changes in Revision A.03.60 from Revision A.03.50

The following functions have been added to allow users to change the acceleration of the spindle rotation in order to avoid disk slip.

- hpe5022\_spindleAcceleration
- hpe5022\_spindleAcceleration\_Q

The limit of the skew parameters of the functions below have been modified. (The minimum skew angle is increased from -30 to -60 degrees.)

- hpe5022\_headLoadConfigEx
- hpe5022\_headPosition

The maximum and minimum number of repetitive periods have been modified for the following functions.

- hpe5022\_overwriteLfPattern
- hpe5022\_overwriteHfPattern
- hpe5022\_lfPattern
- hpe5022\_hfPattern
- hpe5022\_IsolatedPulsePattern

**Table A-3 Number of Repetitive Periods**

Data Pattern	Min.(Old)	Min.(New)	Max. (Old)	Max. (New)
Overwrite LF	4	<b>1</b>	20	<b>50</b>
Overwrite HF	1	<b>1</b>	4	<b>50</b>
LF	4	<b>1</b>	20	<b>50</b>
HF	1	<b>1</b>	4	<b>50</b>
Isolated Pulse	5	<b>1</b>	50	<b>50</b>

For BER test the following functions have been added to allow users to save and recall the setup registers in the EEPROM.

- hpe5022\_BER\_channelIcRegistersSave
- hpe5022\_BER\_channelIcRegistersRecall

For BER test the following function has been modified. When track format is set to one sector per revolution, the read back raw data information can not be acquired.

- hpe5022\_BER\_errorRawData\_Q

## Manual Changes

### Changes in Revision A.03.60 from Revision A.03.50

The following functions have been added for SHNR (sub-harmonic noise ratio) measurement.

- hpe5022\_shnrConfig
- hpe5022\_shnrConfig\_Q
- hpe5022\_shnrWritePatternConfig
- hpe5022\_shnrWritePatternConfig\_Q
- hpe5022\_shnrWriteCurrentConfig
- hpe5022\_shnrWriteCurrentConfig\_Q
- hpe5022\_shnrWriteModeConfig
- hpe5022\_shnrWriteModeConfig\_Q
- hpe5022\_measureShnr
- hpe5022\_setupShnr
- hpe5022\_shnr\_Q
- hpe5022\_shnrData\_Q



---

## Changes in Revision A.03.50 from Revision A.03.40

The following functions have been added for Popcorn Noise Test using E5041A.

- hpe5022\_popcornNoiseCtConfig
- hpe5022\_popcornNoiseCtConfig\_Q
- hpe5022\_popcornNoiseCtWriteModeConfig
- hpe5022\_popcornNoiseCtWriteModeConfig\_Q
- hpe5022\_popcornNoiseCtHysteresisConfig
- hpe5022\_popcornNoiseCtHysteresisConfig\_Q
- hpe5022\_measurePopcornNoiseCt
- hpe5022\_setupPopcornNoiseCt
- hpe5022\_popcornNoiseCt\_Q

(The following functions have been added for Absolute Polarity Measurement) These newly incorporated functions allows the user to specify his own data pattern.

- hpe5022\_absolutePolarityPatternMode
- hpe5022\_absolutePolarityPatternMode\_Q
- hpe5022\_absolutePolarityPattern
- hpe5022\_absolutePolarityPattern\_Q

## Changes in Revision A.03.40 from Revision A.03.30

The following functions have been added.

- “hpe5022\_measureAbsolutePolarity”
- “hpe5022\_setupAbsolutePolarity”
- “hpe5022\_absolutePolarity\_Q”
- “hpe5022\_absolutePolarityIsolatedPulseTaa\_Q”
- “hpe5022\_absolutePolarityTribitTaaDataSize\_Q”
- “hpe5022\_absolutePolarityTribitTaaData\_Q”
- “hpe5022\_absolutePolarityTribitTaaStatistic\_Q”

(The above functions allows you to measure Absolute Polarity test.)

- “hpe5022\_seqSaGateConfig”
- “hpe5022\_seqSaGateConfig\_Q”
- “hpe5022\_seqBaseSegGateConfig”
- “hpe5022\_seqBaseSegGateConfig\_Q”
- “hpe5022\_seqBaseSegWriteReadGateConfig”
- “hpe5022\_seqBaseSegWriteReadGateConfig\_Q”

(The above functions allows you to read or write data during the specified period on a track.)

- “hpe5022\_repetitivePatternEx”
- “hpe5022\_repetitivePatternEx\_Q”
- “hpe5022\_userPatternEx”
- “hpe5022\_userPatternEx\_Q”

(This function allows you to define more repetitive and user patterns.)

- “hpe5022\_stabilityWriteModeConfig”
- “hpe5022\_stabilityWriteModeConfig\_Q”

(This function allows you to change the first write polarity for each segment on a write-read sequence.)

- “hpe5022\_stabilityWritePatternConfig”
- “hpe5022\_stabilityWritePatternConfig\_Q”

(This function allows you to change the data pattern on a write sequence from one on a write-read sequence.)

- “hpe5022\_BER\_triggerDelayTime”
- “hpe5022\_BER\_triggerDelayTime\_Q”

(This function allows you to set a trigger delay on the bit error measurement.)

The following function has a new values for the parameter to allows you to change the first write polarity for each segment on a write-read sequence.

- “hpe5022\_seqConfiguration”

The following functions has some new values for the parameter to select repetitive and user patterns.

- “hpe5022\_selectPattern”
- “hpe5022\_createSeqBaseSegErase”
- “hpe5022\_createSeqBaseSegWrite”
- “hpe5022\_createSeqBaseSegRead”
- “hpe5022\_createSeqBaseSegWriteRead”

## **Changes in Revision A.03.30 from Revision A.03.2x**

The following functions have been added.

- hpe5022\_executionMode
  - hpe5022\_executionMode\_Q
  - hpe5022\_lastMeasureState\_Q
- (This function specifies the type of execution of the setup measurement sequence)

- hpe5022\_wai
- (This function waits for all modules to complete a measurement sequence.)

The following functions have been modified.

- hpe5022\_filterInformation\_Q
- hpe5022\_hgaCassette
- hpe5022\_hgaCassette\_Q

(The parameter “hppn” was changed to “part\_num”. This change is in line with the transition from Hewlett-Packard to Agilent Technologies name brand.)

### **Importing the library and including declaration file for software Rev3.30 and later revisions.**

When you update the system software the new destination directory for Rev 3.30 will be C:\Program Files\Agilent\E5022. In line with this the set PATH of the “autoexec.bat” will be changed. In addition the path name of the import library of E5022A VEE will also be changed. Before you install software Rev3.30 it is recommended that you uninstall Rev3.21. However, when you uninstall Rev3.21 and earlier revisions, use the installer process to uninstall. “. Do not use the “Control Panel>>Add/Remove Program” icon or any other manual means to uninstall.

- You must import the library file and include the declaration file at the beginning of every program that contains Agilent Technologies E5022A function calls.

When you create your own application programs either by VEE, Visual Basic or Visual C++, you need to do the following.

- For VEE, the file “hpe5022\_32.dll” under the directory “c:\Program Files\Agilent\E5022\bin” should be imported. The file named “hpe5022\_vee.h” under the directory “c:\Program Files\Agilent\E5022\include” should be included as a definition file. For Rev3.30 you need to change the path name of the “hpe5022\_32.dll” and recompile the .vxe files
- For Visual Basic, the file “hpe5022.bas” under the directory “c:\Program Files\Agilent\E5022\include” should be added in the development environment as an object file.
- For C language, the file “hpe5022.h” under the directory “c:\Program Files\Agilent\E5022\include” should be included. The file named

**Changes in Revision A.03.30 from Revision A.03.2x**

“hpe5022\_32.lib” under the directory “c:\Program Files\Agilent\E5022\lib” should be linked. You need to change the path setting of the “include/LIB” files in the development environment for software Rev3.30.

## **Changes in Revision A.03.2x from Revision A.03.10**

The following functions have been added.

- hpe5022\_measureMicroTrackProfile
- hpe5022\_setupMicroTrackProfile
- hpe5022\_microTrackProfileData\_Q
- hpe5022\_microTrackProfileTrackWidth\_Q

(The above functions allows you to measure a micro track profile faster than the method using hpe5022\_createMicroTrack.)

- hpe5022\_hgaCassetteDimension
- hpe5022\_hgaCassetteDimension\_Q

(This function allows you to use a customer designed HGA cassette.)

- hpe5022\_taaModulation\_Q

(This function allows you to measure Modulation in the TAA measurement.)

The following functions have been modified. Modification of your program is required when you use these functions in revision A.03.10.

- hpe5022\_spectrumBandWidth
- hpe5022\_spectrumBandWidth\_Q
- hpe5022\_spectralSnrBandWidth
- hpe5022\_spectralSnrBandWidth\_Q
- hpe5022\_seqConfiguration

(The video band width parameter is added.)

---

## Changes in Revision A.03.1x from Revision A.03.0x

The following functions have been added.

- hpe5022\_spectrumDisplayState
- hpe5022\_spectrumDisplayState\_Q

(This function allows you to monitor the data on the screen of the Spectrum Analyzer.)

- hpe5022\_tripleTrackAdjacentTrackConfig
- hpe5022\_tripleTrackAdjacentTrackConfig\_Q

(This function allows you to select a data pattern for the adjacent track. Erase can be also selected as a data pattern.)

- hpe5022\_subIdn\_Q

(This function allows you to query the name, the firmware revision and the serial number of system components)

For bit error rate, the parameter 'ave' (average) has been added to the following functions.

- hpe5022\_BER\_measureBer
- hpe5022\_BER\_setupBer
- hpe5022\_BER\_measureTrackProfile
- hpe5022\_BER\_setupTrackProfile
- hpe5022\_BER\_747Config
- hpe5022\_BER\_747Config\_Q

The parameter 'hpe5022\_BER\_OPT\_INIT' has been added to the following functions.

- hpe5022\_BER\_optimizeState
- hpe5022\_BER\_optimizeState\_Q

The parameter 'error count' has been added to this function.

- hpe5022\_BER\_channelQualityRawData\_Q

The parameter 'total sector' has been deleted from the following functions.

- hpe5022\_BER\_sectorErrorCount\_Q (total sector deleted)
- hpe5022\_BER\_channelIcRegisterSweepData\_Q (total sector deleted)

The parameters of the following functions have been modified.

- hpe5022\_popcornNoiseConfig

## Manual Changes

### Changes in Revision A.03.1x from Revision A.03.0x

- hpe5022\_popcornNoiseConfig\_Q
- hpe5022\_setupPopcornNoise
- hpe5022\_measurePopcornNoise  
(The read time parameter has been added, this sets the time to read the data)

The following function has been modified.

- hpe5022\_spindleSpeed  
(The spindle speed can be changed during drive on.)

The following function of the user defined sequence have been modified.

- hpe5022\_createSeqBaseSegRead  
(The erase pattern is added to the data pattern parameter. The 'hpe5022\_MEAS\_SPEC' is added to the read option.)
- hpe5022\_createSeqBaseSegWrite  
(The erase pattern is added to the data pattern parameter.)
- hpe5022\_createSeqBaseSegWriteRead  
(The erase pattern is added to the data pattern parameter and the write and read data patterns can be set independently.)
- hpe5022\_seqConfiguration  
(The parameter for spectrum measurement is added.)

Bug Fix, an error 'invalid parameter' occurs when the default setting for 2.5 inch clamp is executed. This bug is fixed in Rev 3.10 from its previous revision.



---

## Changes at Revision A.3.01 from Revision A.3.00

The following functions have been added and /or modified.

- For Triple Track Test, the function “hpe5022\_tripleTrackAdjacentTrackConfig” is added. This function allows you to set different data patterns for the adjacent track.
- For Popcorn Noise Measurement, the read time parameter is added in the “hpe5022\_popcornNoiseConfig” Also the parameter “hpe5022\_POPCORN\_WRIT\_TIME\_MIN” has been modified to  $10 \times 10^{-6}$  from  $100 \times 10^{-6}$
- For Popcorn Noise Measurement, the ‘segment’ and ‘rev’ parameters have been removed from the “hpe5022\_measurePopcornNoise” and “hpe5022\_setupPopcornNoise” functions. In replacement the parameter ‘counts’ is added.
- For User Defined Sequence, the parameter ‘datPat’ in the “hpe5022\_createSeqbaseSegWriteRead” function has been changed and divided into two parameters, namely, ‘writPat’ and ‘readPat’. These two new parameters allows you to specify different write and read data patterns.
- For UDS, four erase data patterns have been added in the data pattern ‘datpat’ setting of the base segment, namely, “hpe5022\_PAT\_ERASE”, “hpe\_5022\_PAT\_ERASE\_DC\_NEG”, “hpe\_5022\_PAT\_ERASE\_DC\_POS” and “hpe5022\_PAT\_ERASE\_AC”.

## **Changes in Revision A.03.00 from Revision A.02.1x**

The following functions are added.

- BER Measurement Functions
- Spectrum Measurement Functions
- Spectral SNR Measurement Functions
- hpe5022\_spindleSpeedRange\_Q
- hpe5022\_headLoadImmediate
- hpe5022\_idn\_Q
- hpe5022\_tripleTrackAdjacentTrackConfig
- hpe5022\_tripleTrackAdjacentTrackConfig\_Q

The following parameter values have been changed.

- hpe5022\_TRACK\_MAX is changed from 20,000 to 1,000,000.
- hpe5022\_POPCORN\_SEG\_PER\_TRACK\_MAX is changed from 5 to 10.

The type of parameter of the following function have been changed from “ViString” to “ViChar”.

- hpe5022\_userPattern
- hpe5022\_userPattern\_Q

---

## Changes in Revision A.02.1x from Revision A.02.0x

The following functions are added.

- hpe5022\_headLoadConfigEx
- hpe5022\_headLoadConfigEx\_Q
- hpe5022\_trackToRadiusSkew
- hpe5022\_isolatedPulseReferenceTaaAuto
- hpe5022\_isolatedPulseReferenceTaaAuto\_Q
- hpe5022\_setupEraseBand
- hpe5022\_popcornNoiseConfig
- hpe5022\_measurePopcornNoise
- hpe5022\_setupPopcornNoise
- hpe5022\_popcornNoise\_Q
- hpe5022\_popcornNoiseHistogram\_Q

The function to specify the noise reference level is added in order to improve the measurement accuracy. This change will cause a difference in measurement results between revision 2.0x and 2.1x.

- hpe5022\_noiseReference\_Q

The parameters of the following function has been changed.

- hpe5022\_snr\_Q

The baseline parameter is deleted from the parametric measurement function. The following functions have been deleted.

- hpe5022\_parametricBaseline\_Q
- hpe5022\_parametricBaselineDataSize\_Q
- hpe5022\_parametricBaselineData\_Q
- hpe5022\_parametricBaselineStatistic\_Q

The baseline parameter of the function below has been changed.

- hpe5022\_parametric\_Q

The following functions have been changed. The value of OTRC Write Pos. is changed from the absolute value to the ratio value of write track width.

- hpe5022\_tripleTrackPositionConfig
- hpe5022\_tripleTrackPositionConfig\_Q

The functions have been changed. Performing the three Track Erase process is selectable.

- hpe5022\_measureTripleTrack
- hpe5022\_setupTripleTrack

Manual Changes  
**Changes in Revision A.02.1x from Revision A.02.0x**

**A**

abort measurement, 85, 97  
 absolute polarity, 587  
 auto configuration, 257  
 Auto Isolated Pulse TAA Reference, 268  
 Auto Isolated Pulse TAA Reference Query  
     , 270  
 averaging factor  
     baseline, 447  
     narrow band TAA, 573  
     NLTS 5th harmonic, 811  
     oscilloscope (waveform measurement), 1022  
     overwrite, 911, 920, 923, 925, 926, 927, 928, 930, 931, 932  
     parametric, 467  
     partial erasure, 934  
     pw, 431  
     resolution, 501, 945, 954  
     taa, 409

**B**

band erase, 368, 370  
 band width, 840, 854, 1067, 1083  
 baseline measurement, 447, 466  
     channel bit rate sweep, 679, 1092  
     waveform (by oscilloscope), 1045  
 baseline popping measurement, 800  
 BER (Bit Error Rate), 1063  
 baseline reference level, 407  
 bit rate  
     channel, 116  
 burst pattern, 967, 971, 973, 974, 976

**C**

C syntax, 90  
 calibration sequence  
     track offset compensation, 964, 976  
 channel bit rate, 116  
 channel bit rate sweep measurement, 679, 1092  
 Channel Bit Rate Sweep Measurement Function, 1092  
 channel IC name, 114  
 clamp, 209  
 create a micro track, 637

**D**

data area, 180  
 DC Resistance Measurement Function, 393  
 declaration file, 14  
 delay time  
     oscilloscope (waveform measurement), 1025  
 dll, 14  
 drive  
     configuration, 154, 156  
     on/off, 209  
 drive configuration, 157  
 Drive Control Function, 209  
 dynamic loading, 192

**E**

erase, 355  
     band erase, 368  
     DC current, 358  
     frequency, 360  
 erase type, 355  
 Error Handle Function, 106

**F**

face type, 179  
 filter setup, 147  
 Filter Setup Function, 147  
 firmware  
     revision, 110, 111, 112

**H**

head  
     dynamic loading, 192  
     face type, 179  
     load, 209, 237, 247  
     load position, 192, 195  
     position, 241, 243  
     static loading, 192  
     unload, 209, 237, 247  
     unload position, 195  
 head amplifier  
     impedance, 276  
     part number, 275  
 Head Load Configuration Extension, 195  
 head load position, 192, 201  
 HF pattern, 122  
 hpe5022, 114  
 hpe5022\_absolutePolarityIsolatedPulseTaa\_Q, 601  
 hpe5022\_absolutePolarityIsolatedPulseTaaData\_Q, 604  
 hpe5022\_absolutePolarityIsolatedPulseTaaDataSize\_Q, 603  
 hpe5022\_abort, 103  
 hpe5022\_abortFreeRunWrite, 329  
 hpe5022\_absolutePolarity\_Q, 599  
 hpe5022\_absolutePolarityIsolatedPulseTaaStatistic\_Q, 606  
 hpe5022\_absolutePolarityPattern, 590, 592  
 hpe5022\_absolutePolarityPatternMode, 587  
 hpe5022\_absolutePolarityPatternMode\_Q, 589  
 hpe5022\_absolutePolarityTribitTaa\_Q, 608  
 hpe5022\_absolutePolarityTribitTaaData\_Q, 611  
 hpe5022\_absolutePolarityTribitTaaDataSize\_Q, 610  
 hpe5022\_absolutePolarityTribitTaaStatistic\_Q, 613  
 hpe5022\_ampGain\_Q, 274  
 hpe5022\_autoAlignment, 1014  
 hpe5022\_autoAlignmentAssumeRadius, 1008  
 hpe5022\_autoAlignmentAssumeRadius\_Q, 1010  
 hpe5022\_autoAlignmentCurrentState\_Q, 1015  
 hpe5022\_autoAlignmentFineTuneSkew, 1011, 1013  
 hpe5022\_autoConfig, 257  
 hpe5022\_autoConfigEraseBand, 259  
 hpe5022\_autoConfigEraseBand\_Q, 261  
 hpe5022\_autoConfigTrackProfile, 262

---

hpe5022\_autoConfigTrackProfile\_Q, 264  
hpe5022\_baseline\_Q, 452  
hpe5022\_baselineData\_Q, 455  
hpe5022\_baselineDataSize\_Q, 454  
hpe5022\_baselineHistogram\_Q, 459  
hpe5022\_baselinePIIThreshold, 463  
hpe5022\_baselinePIIThreshold\_Q, 465  
hpe5022\_baselinePoppingConfig, 800  
hpe5022\_baselinePoppingConfig\_Q, 802  
hpe5022\_baselinePoppingData\_Q, 808  
hpe5022\_baselinePoppingMax\_Q, 809  
hpe5022\_baselineReference, 407  
hpe5022\_baselineReference\_Q, 408  
hpe5022\_baselineSamplingPhase, 461  
hpe5022\_baselineSamplingPhase\_Q, 462  
hpe5022\_baselineStatistic\_Q, 457  
hpe5022\_burstFrequencyConfig, 1001  
hpe5022\_burstFrequencyConfig\_Q, 1003  
hpe5022\_burstGateConfig, 1004  
hpe5022\_burstGateConfig\_Q, 1007  
hpe5022\_burstPatternConfig, 997  
hpe5022\_burstPatternConfig\_Q, 1000  
hpe5022\_calculateD50\_Q, 693  
hpe5022\_calculateD50OptSa\_Q, 1106  
hpe5022\_calculateReadWriteOffset\_Q, 628  
hpe5022\_calculateRWOffsetAndWidth\_Q, 630  
hpe5022\_calculateTimeToLength\_Q, 695  
hpe5022\_calculateTrackWidth\_Q, 626  
hpe5022\_calibrateNarrowBandTaa, 576  
hpe5022\_channelBitRate, 116  
hpe5022\_channelBitRate\_Q, 117  
hpe5022\_channelBitRateRange\_Q, 118  
hpe5022\_channelBitRateSweepData\_Q, 684, 1097  
hpe5022\_checkShroudForm, 315  
hpe5022\_clearPrecomp, 386  
hpe5022\_close, 95  
hpe5022\_createMicroTrack, 644  
hpe5022\_crestFactorData\_Q, 834  
hpe5022\_crestFactorDataSize\_Q, 833  
hpe5022\_crestFactorStatistic2\_Q, 835  
hpe5022\_dataArea, 180  
hpe5022\_dataArea\_Q, 183  
hpe5022\_diskSize\_Q, 207  
hpe5022\_diskSizeRestriction, 205, 208  
hpe5022\_diskSizeRestriction\_Q, 208  
hpe5022\_driveConfigPivot, 154  
hpe5022\_driveConfigPivot\_Q, 156  
hpe5022\_driveConfigRadiusSkew, 157  
hpe5022\_driveConfigRadiusSkew\_Q, 159  
hpe5022\_driveState, 209  
hpe5022\_driveState\_Q, 212  
hpe5022\_erase, 362  
hpe5022\_eraseAcFrequency, 360  
hpe5022\_eraseAcFrequency\_Q, 361  
hpe5022\_eraseBand, 368  
hpe5022\_eraseCurrent, 358  
hpe5022\_eraseCurrent\_Q, 359  
hpe5022\_eraseMultiple, 364  
hpe5022\_eraseType, 355  
hpe5022\_eraseType\_Q, 357  
hpe5022\_eraseWideBand, 372  
hpe5022\_error\_message, 107  
hpe5022\_error\_query, 106  
hpe5022\_executeTrackOffsetComp, 983  
hpe5022\_executionMode, 97  
hpe5022\_executionMode\_Q, 99  
hpe5022\_filterInformation\_Q, 151  
hpe5022\_filterState\_Q, 147  
hpe5022\_headAmpActiveChannel, 284  
hpe5022\_headAmpActiveChannel\_Q, 285  
hpe5022\_headAmpActiveChannelRange\_Q, 286  
hpe5022\_headAmpBufferName\_Q, 289  
hpe5022\_headAmpBufferSerialNumber\_Q, 290  
hpe5022\_headAmpIcName\_Q, 294  
hpe5022\_headAmpInfoFile, 291  
hpe5022\_headAmpInfoFile\_Q, 293  
hpe5022\_headAmpInputImpedance\_Q, 276  
hpe5022\_headAmpName\_Q, 275  
hpe5022\_headAmpProperty, 277  
hpe5022\_headAmpProperty\_Q, 279  
hpe5022\_headAmpRegister, 280  
hpe5022\_headAmpRegister\_Q, 282  
hpe5022\_headAmpSerialNumber\_Q, 288  
hpe5022\_headLoad, 237  
hpe5022\_headLoad\_Q, 240  
hpe5022\_headLoadConfig, 192  
hpe5022\_headLoadConfig\_Q, 194  
hpe5022\_headLoadConfigEx, 195  
hpe5022\_headLoadConfigEx\_Q, 199  
hpe5022\_headLoadImmediate, 247  
hpe5022\_headLoadRampConfig, 201, 207  
hpe5022\_headLoadRampConfig\_Q, 203  
hpe5022\_headLoadType, 186  
hpe5022\_headLoadType\_Q, 188  
hpe5022\_headLoadTypeList\_Q, 189  
hpe5022\_headLoadTypeName\_Q, 190  
hpe5022\_headPosition, 241  
hpe5022\_headPosition\_Q, 243  
hpe5022\_headPositionSpeed, 249  
hpe5022\_headPositionSpeed\_Q, 250  
hpe5022\_headPositionSpeedRange\_Q, 251  
hpe5022\_hfPattern, 122  
hpe5022\_hfPattern\_Q, 123  
hpe5022\_hgaCassette, 169  
hpe5022\_hgaCassette\_Q, 170  
hpe5022\_hgaCassetteDimension, 171  
hpe5022\_hgaCassetteDimension\_Q, 177  
hpe5022\_hgaDimension, 161  
hpe5022\_hgaDimension\_Q, 164  
hpe5022\_hgaFace\_Q, 179  
hpe5022\_idn\_Q, 111  
hpe5022\_inhibitMargin, 166, 168  
hpe5022\_init, 91  
hpe5022\_initiateFreeRunWrite, 328

- 
- hpe5022\_inputRange, 271
  - hpe5022\_inputRange\_Q, 273
  - hpe5022\_isolatedPulsePattern, 126
  - hpe5022\_isolatedPulsePattern\_Q, 127
  - hpe5022\_isolatedPulseReference, 265
  - hpe5022\_isolatedPulseReference\_Q, 267
  - hpe5022\_isolatedPulseReferenceTaaAuto, 268
  - hpe5022\_isolatedPulseReferenceTaaAuto\_Q, 270
  - hpe5022\_lastMeasureState\_Q, 100
  - hpe5022\_lfPattern, 124
  - hpe5022\_lfPattern\_Q, 125
  - hpe5022\_measure, 387
  - hpe5022\_measureAbsolutePolarity, 594
  - hpe5022\_measureBaseline, 447
  - hpe5022\_measureBaselinePopping, 803
  - hpe5022\_measureChannelBitRateSweep, 679, 1092
  - hpe5022\_measurementMode, 254
  - hpe5022\_measurementMode\_Q, 256
  - hpe5022\_measureMicroTrackProfile, 645
  - hpe5022\_measureNarrowBandTaa, 572
  - hpe5022\_measureNlts5th, 810
  - hpe5022\_measureOverwrite, 910
  - hpe5022\_measureParametric, 466
  - hpe5022\_measurePartialErasure, 934
  - hpe5022\_measurePopcornNoise, 879
  - hpe5022\_measurePopcornNoiseCt, 903
  - hpe5022\_measurePrecompSweep, 696
  - hpe5022\_measurePw, 431
  - hpe5022\_measureReadHeadDcr, 393
  - hpe5022\_measureReadHeadDcrEx, 395
  - hpe5022\_measureResolution, 501
  - hpe5022\_measureRollOff, 686
  - hpe5022\_measureRollOffOptSa, 1099
  - hpe5022\_measureSectorOverwrite, 920
  - hpe5022\_measureSenseCurrentSweep, 665
  - hpe5022\_measureSenseStimulusSweep, 672
  - hpe5022\_measureShnr, 788
  - hpe5022\_measureSideErase, 954
  - hpe5022\_measureSideReading, 944
  - hpe5022\_measureSnr, 823
  - hpe5022\_measureSnrTripleTrack, 757
  - hpe5022\_measureSpectralSnr, 843
  - hpe5022\_measureSpectralSnrOptSa, 1086
  - hpe5022\_measureSpectrum, 857
  - hpe5022\_measureSpectrumOptSa, 1070
  - hpe5022\_measureStability, 524
  - hpe5022\_measureStabilityAbs, 549
  - hpe5022\_measureTaa, 409
  - hpe5022\_measureTrackOffsetPositionError, 987
  - hpe5022\_measureTrackOffsetPositionError\_Q, 989
  - hpe5022\_measureTrackProfile, 615
  - hpe5022\_measureTripleTrack, 714
  - hpe5022\_measureWave, 1028
  - hpe5022\_measureWriteCurrentSweep, 658
  - hpe5022\_measureWriteHeadDcr, 398
  - hpe5022\_microTrackConfig, 637
  - hpe5022\_microTrackConfig\_Q, 642
  - hpe5022\_microTrackProfileData\_Q, 655
  - hpe5022\_microTrackProfileTrackWidth\_Q, 657
  - hpe5022\_modifyMicroTrackProfileErasePosition, 653
  - hpe5022\_motorState, 232
  - hpe5022\_motorState\_Q, 234
  - hpe5022\_motorStateEx, 235
  - hpe5022\_narrowBandTaa\_Q, 577
  - hpe5022\_narrowBandTaaBandWidth, 570
  - hpe5022\_narrowBandTaaBandWidth\_Q, 571
  - hpe5022\_narrowBandTaaData\_Q, 579
  - hpe5022\_narrowBandTaaDataSize\_Q, 578
  - hpe5022\_narrowBandTaaFreqMode, 567, 568
  - hpe5022\_narrowBandTaaFrequencyMode, 564
  - hpe5022\_narrowBandTaaFrequencyMode\_Q, 566
  - hpe5022\_narrowBandTaaFrequencyRange\_Q, 569
  - hpe5022\_narrowBandTaaRawData\_Q, 583
  - hpe5022\_narrowBandTaaRawDataSize\_Q, 582
  - hpe5022\_narrowBandTaaRawStatistic\_Q, 585
  - hpe5022\_narrowBandTaaStatistic\_Q, 580
  - hpe5022\_nlts5th\_Q, 815
  - hpe5022\_nlts5thData\_Q, 817
  - hpe5022\_nlts5thDataSize\_Q, 816
  - hpe5022\_nlts5thStatistic\_Q, 818
  - hpe5022\_noiseReference, 820
  - hpe5022\_noiseReference\_Q, 822
  - hpe5022\_odRadius\_Q, 184
  - hpe5022\_outputState, 301
  - hpe5022\_outputState\_Q, 303
  - hpe5022\_overwrite\_Q, 915
  - hpe5022\_overwriteData\_Q, 917
  - hpe5022\_overwriteDataSize\_Q, 916
  - hpe5022\_overwriteHfPattern, 136
  - hpe5022\_overwriteHfPattern\_Q, 137
  - hpe5022\_overwriteLfPattern, 138
  - hpe5022\_overwriteLfPattern\_Q, 139
  - hpe5022\_overwriteStatistic\_Q, 918
  - hpe5022\_parametric\_Q, 471
  - hpe5022\_parametricHfTaa\_Q, 473
  - hpe5022\_parametricHfTaaData\_Q, 476
  - hpe5022\_parametricHfTaaDataSize\_Q, 475
  - hpe5022\_parametricHfTaaStatistic\_Q, 478
  - hpe5022\_parametricIsolatedPulseTaa\_Q, 487
  - hpe5022\_parametricIsolatedPulseTaaData\_Q, 490
  - hpe5022\_parametricIsolatedPulseTaaDataSize\_Q, 489
  - hpe5022\_parametricIsolatedPulseTaaStatistic\_Q, 492
  - hpe5022\_parametricLfTaa\_Q, 480
  - hpe5022\_parametricLfTaaData\_Q, 483
  - hpe5022\_parametricLfTaaDataSize\_Q, 482
  - hpe5022\_parametricLfTaaStatistic\_Q, 485
  - hpe5022\_parametricPw\_Q, 494
  - hpe5022\_parametricPwData\_Q, 497
  - hpe5022\_parametricPwDataSize\_Q, 496
  - hpe5022\_parametricPwStatistic\_Q, 499
  - hpe5022\_partialErasureData\_Q, 941
  - hpe5022\_partialErasureDataSize\_Q, 940

---

hpe5022\_partialErasureStatistic\_Q, 942  
hpe5022\_popcornNoise\_Q, 883  
hpe5022\_popcornNoiseConfig, 867  
hpe5022\_popcornNoiseConfig\_Q, 870  
hpe5022\_popcornNoiseCt\_Q, 908  
hpe5022\_popcornNoiseCtConfig, 886  
hpe5022\_popcornNoiseCtConfig\_Q, 891  
hpe5022\_popcornNoiseCtHysteresisConfig, 899  
hpe5022\_popcornNoiseCtHysteresisConfig\_Q, 902  
hpe5022\_popcornNoiseCtWriteModeConfig, 893  
hpe5022\_popcornNoiseCtWriteModeConfig\_Q, 895  
hpe5022\_popcornNoiseCtWritePatternConfig, 896  
hpe5022\_popcornNoiseCtWritePatternConfig\_Q, 898  
hpe5022\_popcornNoiseHistogram\_Q, 884  
hpe5022\_popcornNoiseWriteModeConfig, 872  
hpe5022\_popcornNoiseWriteModeConfig\_Q, 875  
hpe5022\_popcornNoiseWritePatternConfig, 876  
hpe5022\_popcornNoiseWritePatternConfig\_Q, 878  
hpe5022\_prbsPattern, 128  
hpe5022\_prbsPattern\_Q, 130  
hpe5022\_precompDelay, 374  
hpe5022\_precompDelay\_Q, 376  
hpe5022\_precompPattern, 377  
hpe5022\_precompPattern\_Q, 381  
hpe5022\_precompState, 383  
hpe5022\_precompState\_Q, 385  
hpe5022\_precompSweepData\_Q, 701  
hpe5022\_pw\_Q, 435  
hpe5022\_pwData\_Q, 438  
hpe5022\_pwDataSize\_Q, 437  
hpe5022\_pwRawData\_Q, 443  
hpe5022\_pwRawDataSize\_Q, 442  
hpe5022\_pwRawDataStatistic\_Q, 445  
hpe5022\_pwReference, 403  
hpe5022\_pwReference\_Q, 405  
hpe5022\_pwReferenceRange\_Q, 406  
hpe5022\_pwStatistic\_Q, 440  
hpe5022\_pwThreshold, 428  
hpe5022\_pwThreshold\_Q, 430  
hpe5022\_rampPosition, 245  
hpe5022\_rampPosition\_Q, 246  
hpe5022\_readHeadDcr\_Q, 397  
hpe5022\_readTrackOffset, 219  
hpe5022\_readTrackOffset\_Q, 221  
hpe5022\_releaseSetup, 390  
hpe5022\_releaseSetupAll, 392  
hpe5022\_repetitivePattern, 131  
hpe5022\_repetitivePattern\_Q, 132  
hpe5022\_repetitivePatternEx, 133  
hpe5022\_repetitivePatternEx\_Q, 135  
hpe5022\_reset, 96  
hpe5022\_resolution\_Q, 506  
hpe5022\_resolutionData\_Q, 508  
hpe5022\_resolutionDataSize\_Q, 507  
hpe5022\_resolutionStatistic\_Q, 509  
hpe5022\_revision\_query, 110  
hpe5022\_rollOffData\_Q, 691  
hpe5022\_rollOffOptSaData\_Q, 1104  
hpe5022\_searchTrack, 990  
hpe5022\_sectorOverwrite\_Q, 925  
hpe5022\_sectorOverwriteData\_Q, 927  
hpe5022\_sectorOverwriteDataSize\_Q, 926  
hpe5022\_sectorOverwriteRawDataSize\_Q, 930  
hpe5022\_sectorOverwriteReferenceRawData\_Q, 931  
hpe5022\_sectorOverwriteResidualRawData\_Q, 932  
hpe5022\_sectorOverwriteStatistic\_Q, 928  
hpe5022\_selectFilter, 149  
hpe5022\_selectFilter\_Q, 150  
hpe5022\_selectPattern, 119  
hpe5022\_selectPattern\_Q, 121  
hpe5022\_self\_test, 104  
hpe5022\_senseCurrent, 336  
hpe5022\_senseCurrent\_Q, 338  
hpe5022\_senseCurrentPolarity, 340  
hpe5022\_senseCurrentPolarity\_Q, 342  
hpe5022\_senseCurrentRange\_Q, 339  
hpe5022\_senseCurrentSweepData\_Q, 670  
hpe5022\_senseReferenceDcr, 350, 351  
hpe5022\_senseStimulus, 346  
hpe5022\_senseStimulus\_Q, 347  
hpe5022\_senseStimulusMode, 343  
hpe5022\_senseStimulusMode\_Q, 345  
hpe5022\_senseStimulusPolarity, 352  
hpe5022\_senseStimulusPolarity\_Q, 354  
hpe5022\_senseStimulusRange\_Q, 348  
hpe5022\_senseStimulusSweepData\_Q, 677  
hpe5022\_set\_error\_callback, 108  
hpe5022\_setupAbsolutePolarity, 597  
hpe5022\_setupBaseline, 450  
hpe5022\_setupBaselinePopping, 806  
hpe5022\_setupChannelBitRateSweep, 682, 1095  
hpe5022\_setupEraseBand, 370  
hpe5022\_setupEraseMultiple, 366  
hpe5022\_setupMicroTrackProfile, 650  
hpe5022\_setupNarrowBandTaa, 574  
hpe5022\_setupNlts5th, 813  
hpe5022\_setupOverwrite, 913  
hpe5022\_setupParametric, 469  
hpe5022\_setupPartialErasure, 937  
hpe5022\_setupPopcornNoise, 881  
hpe5022\_setupPopcornNoiseCt, 906  
hpe5022\_setupPrecompSweep, 699  
hpe5022\_setupPw, 433  
hpe5022\_setupResolution, 504  
hpe5022\_setupRollOff, 689  
hpe5022\_setupRollOffOptSa, 1102  
hpe5022\_setupSectorOverwrite, 923  
hpe5022\_setupSenseCurrentSweep, 668  
hpe5022\_setupSenseStimulusSweep, 675  
hpe5022\_setupShnr, 793  
hpe5022\_setupSideErase, 957  
hpe5022\_setupSideReading, 947  
hpe5022\_setupSnr, 825  
hpe5022\_setupSnrTripleTrack, 766



- 
- hpe5022\_setupSpectralSnr, 846
  - hpe5022\_setupSpectralSnrOptSa, 1088
  - hpe5022\_setupSpectrum, 859
  - hpe5022\_setupSpectrumOptSa, 1072
  - hpe5022\_setupStability, 529
  - hpe5022\_setupStabilityAbs, 554
  - hpe5022\_setupTaa, 412
  - hpe5022\_setupTrackProfile, 620
  - hpe5022\_setupTripleTrack, 719
  - hpe5022\_setupWave, 1031
  - hpe5022\_setupWriteBurst, 995
  - hpe5022\_setupWriteCurrentSweep, 661
  - hpe5022\_setupWriteMultiple, 332
  - hpe5022\_shnr\_Q, 796
  - hpe5022\_shnrConfig, 775
  - hpe5022\_shnrConfig\_Q, 778
  - hpe5022\_shnrData\_Q, 798
  - hpe5022\_shnrWriteCurrentConfig, 782
  - hpe5022\_shnrWriteCurrentConfig\_Q, 783
  - hpe5022\_shnrWriteModeConfig, 784
  - hpe5022\_shnrWriteModeConfig\_Q, 787
  - hpe5022\_shnrWritePatternConfig, 779
  - hpe5022\_shnrWritePatternConfig\_Q, 781
  - hpe5022\_shroudForm, 317
  - hpe5022\_shroudForm\_Q, 318
  - hpe5022\_sideErase\_Q, 959
  - hpe5022\_sideEraseData\_Q, 961
  - hpe5022\_sideEraseDataSize\_Q, 960
  - hpe5022\_sideEraseStatistic\_Q, 962
  - hpe5022\_sideReading\_Q, 949
  - hpe5022\_sideReadingData\_Q, 951
  - hpe5022\_sideReadingDataSize\_Q, 950
  - hpe5022\_sideReadingStatistic\_Q, 952
  - hpe5022\_snr\_Q, 827
  - hpe5022\_snrData\_Q, 830
  - hpe5022\_snrDataSize\_Q, 829
  - hpe5022\_snrStatistic\_Q, 831
  - hpe5022\_snrTripleTrack\_Q, 769
  - hpe5022\_snrTripleTrackAdjacentTrackConfig, 735
  - hpe5022\_snrTripleTrackAdjacentTrackConfig\_Q, 737
  - hpe5022\_snrTripleTrackEraseBandConfig, 739
  - hpe5022\_snrTripleTrackEraseBandConfig\_Q, 741
  - hpe5022\_snrTripleTrackFilterConfig, 750
  - hpe5022\_snrTripleTrackFilterConfig\_Q, 752
  - hpe5022\_snrTripleTrackNoiseConstantConfig, 744
  - hpe5022\_snrTripleTrackNoiseConstantConfig\_Q, 746
  - hpe5022\_snrTripleTrackNoiseThresholdConfig, 748
  - hpe5022\_snrTripleTrackNoiseThresholdConfig\_Q, 749
  - hpe5022\_snrTripleTrackPositionConfig, 732
  - hpe5022\_snrTripleTrackPositionConfig\_Q, 734
  - hpe5022\_snrTripleTrackSectorProfile\_Q, 772
  - hpe5022\_snrTripleTrackSectorNormalizeConfig, 754
  - hpe5022\_snrTripleTrackSectorNormalizeConfig\_Q, 756
  - hpe5022\_snrTripleTrackSnrThresholdConfig, 742
  - hpe5022\_snrTripleTrackSnrThresholdConfig\_Q, 743
  - hpe5022\_snrTripleTrackWindowConfig, 728
  - hpe5022\_snrTripleTrackWindowConfig\_Q, 730
  - hpe5022\_spectralSnr\_Q, 848
  - hpe5022\_spectralSnrBandWidth, 840
  - hpe5022\_spectralSnrBandWidth\_Q, 842
  - hpe5022\_spectralSnrFrequency, 837
  - hpe5022\_spectralSnrFrequency\_Q, 839
  - hpe5022\_spectralSnrOptSa\_Q, 1090
  - hpe5022\_spectralSnrOptSaBandWidth, 1083
  - hpe5022\_spectralSnrOptSaBandWidth\_Q, 1085
  - hpe5022\_spectralSnrOptSaFrequency, 1080
  - hpe5022\_spectralSnrOptSaFrequency\_Q, 1082
  - hpe5022\_spectrumBandWidth, 854
  - hpe5022\_spectrumBandWidth\_Q, 856
  - hpe5022\_spectrumData\_Q, 861
  - hpe5022\_spectrumDataAll\_Q, 863
  - hpe5022\_spectrumDisplayState, 320
  - hpe5022\_spectrumDisplayState\_Q, 322
  - hpe5022\_spectrumFrequency, 837, 850, 1064
  - hpe5022\_spectrumFrequency\_Q, 852
  - hpe5022\_spectrumFrequencyRange\_Q, 853
  - hpe5022\_spectrumNoise\_Q, 865
  - hpe5022\_spectrumOptSaBandWidth, 1067
  - hpe5022\_spectrumOptSaBandWidth\_Q, 1069
  - hpe5022\_spectrumOptSaData\_Q, 1074
  - hpe5022\_spectrumOptSaDataAll\_Q, 1076
  - hpe5022\_spectrumOptSaFrequency, 1064, 1080
  - hpe5022\_spectrumOptSaFrequency\_Q, 1066
  - hpe5022\_spectrumOptSaNoise\_Q, 1078
  - hpe5022\_spindleAcceleration, 216
  - hpe5022\_spindleAcceleration\_Q, 217
  - hpe5022\_spindleAccelerationRange\_Q, 218
  - hpe5022\_spindleShroud\_Q, 314, 316
  - hpe5022\_spindleSpeed, 213
  - hpe5022\_spindleSpeed\_Q, 214
  - hpe5022\_spindleSpeedRange\_Q, 215
  - hpe5022\_spinStand\_ttlInput\_Q, 312
  - hpe5022\_spinStand\_ttlOutput, 307
  - hpe5022\_spinStand\_ttlOutput\_Q, 310
  - hpe5022\_spinStandTtlInput\_Q, 1115
  - hpe5022\_spinStandTtlOutput, 1115
  - hpe5022\_spinStandTtlOutput\_Q, 1115
  - hpe5022\_stability\_Q, 533
  - hpe5022\_stabilityAbs\_Q, 558
  - hpe5022\_stabilityAbsData\_Q, 560
  - hpe5022\_stabilityAbsDataSize\_Q, 557
  - hpe5022\_stabilityAbsSenseModeConfig, 537
  - hpe5022\_stabilityAbsSenseModeConfig\_Q, 539
  - hpe5022\_stabilityAbsSequenceConfig, 547
  - hpe5022\_stabilityAbsSequenceConfig\_Q, 548
  - hpe5022\_stabilityAbsStatistic\_Q, 562
  - hpe5022\_stabilityAbsWriteModeConfig, 543
  - hpe5022\_stabilityAbsWriteModeConfig\_Q, 545
  - hpe5022\_stabilityAbsWritePatternConfig, 540
  - hpe5022\_stabilityAbsWritePatternConfig\_Q, 542
  - hpe5022\_stabilityConfig, 511
  - hpe5022\_stabilityConfig\_Q, 514
  - hpe5022\_stabilityData\_Q, 531
  - hpe5022\_stabilitySequenceConfig, 515

- hpe5022\_stabilitySequenceConfig\_Q, 516
  - hpe5022\_stabilityStatistic\_Q, 535
  - hpe5022\_stabilityWriteModeConfig, 520
  - hpe5022\_stabilityWriteModeConfig\_Q, 522
  - hpe5022\_stabilityWritePatternConfig, 517
  - hpe5022\_stabilityWritePatternConfig\_Q, 519
  - hpe5022\_subIdn\_Q, 112
  - hpe5022\_subModuleIdn\_Q, 114
  - hpe5022\_taa\_Q, 414
  - hpe5022\_taaData\_Q, 419
  - hpe5022\_taaDataSize\_Q, 418
  - hpe5022\_taaModulation\_Q, 426
  - hpe5022\_taaRawData\_Q, 422
  - hpe5022\_taaRawDataSize\_Q, 421
  - hpe5022\_taaRawStatistic\_Q, 424
  - hpe5022\_taaReference, 400
  - hpe5022\_taaReference\_Q, 402
  - hpe5022\_taaStatistic\_Q, 416
  - hpe5022\_track, 229
  - hpe5022\_track\_Q, 231
  - hpe5022\_trackOffsetCompPattern, 967
  - hpe5022\_trackOffsetCompPattern\_Q, 969
  - hpe5022\_trackOffsetCompPatternAuto, 974
  - hpe5022\_trackOffsetCompPatternPosition, 971
  - hpe5022\_trackOffsetCompPatternPosition\_Q, 973
  - hpe5022\_trackOffsetCompPatternState, 978
  - hpe5022\_trackOffsetCompPatternState\_Q, 980
  - hpe5022\_trackOffsetCompProfile, 964
  - hpe5022\_trackOffsetCompProfile\_Q, 966
  - hpe5022\_trackOffsetCompRevolution, 981
  - hpe5022\_trackOffsetCompRevolution\_Q, 982
  - hpe5022\_trackOffsetCompValue, 984
  - hpe5022\_trackOffsetCompValue\_Q, 986
  - hpe5022\_trackOffsetImmediate, 225
  - hpe5022\_trackOffsetUserSettlingTime, 227
  - hpe5022\_trackOffsetUserSettlingTime\_Q, 228
  - hpe5022\_trackProfileData\_Q, 623
  - hpe5022\_trackToRadiusSkew, 252
  - hpe5022\_triggerImmediate, 299
  - hpe5022\_triggerPort, 295
  - hpe5022\_triggerPort\_Q, 298
  - hpe5022\_tripleTrack\_Q, 722
  - hpe5022\_tripleTrackAdjacenttrackConfig, 710
  - hpe5022\_tripleTrackAdjacenttrackConfig\_Q, 712
  - hpe5022\_tripleTrackPositionConfig, 707
  - hpe5022\_tripleTrackPositionConfig\_Q, 709
  - hpe5022\_tripleTrackProfile\_Q, 725
  - hpe5022\_tripleTrackWindowConfig, 703
  - hpe5022\_tripleTrackWindowConfig\_Q, 705
  - hpe5022\_updateHeadAmp, 287
  - hpe5022\_userPattern, 140
  - hpe5022\_userPattern\_Q, 142
  - hpe5022\_userPatternEx, 143
  - hpe5022\_userPatternEx\_Q, 145
  - hpe5022\_wai, 101
  - hpe5022\_waveAutoCorrelationSnr\_Q, 1055
  - hpe5022\_waveAverage, 1022
  - hpe5022\_waveAverage\_Q, 1024
  - hpe5022\_waveAverageData\_Q, 1035
  - hpe5022\_waveAverageDataSize\_Q, 1033
  - hpe5022\_waveBaseline\_Q, 1045
  - hpe5022\_waveCorrelation\_Q, 1058
  - hpe5022\_waveCorrelationDataSize\_Q, 1057
  - hpe5022\_waveData\_Q, 1039
  - hpe5022\_waveDataSize\_Q, 1037
  - hpe5022\_waveDelayTime, 1025
  - hpe5022\_waveDelayTime\_Q, 1027
  - hpe5022\_waveDipulseExtraction\_Q, 1051
  - hpe5022\_waveDipulseExtractionDataSize\_Q, 1049
  - hpe5022\_waveDipulseExtractionNlts\_Q, 1053
  - hpe5022\_waveOverSampleRate, 1019
  - hpe5022\_waveOverSampleRate\_Q, 1021
  - hpe5022\_wavePw\_Q, 1043
  - hpe5022\_waveTaa\_Q, 1041
  - hpe5022\_waveTimeAsymmetry\_Q, 1047
  - hpe5022\_waveTimeCorrelationNlts\_Q, 1060
  - hpe5022\_write, 326
  - hpe5022\_writeBurst, 993
  - hpe5022\_writeCurrent, 323
  - hpe5022\_writeCurrent\_Q, 324
  - hpe5022\_writeCurrentRange\_Q, 325
  - hpe5022\_writeCurrentSweepData\_Q, 663
  - hpe5022\_writeDataSource, 304
  - hpe5022\_writeDataSource\_Q, 306
  - hpe5022\_writeHeadDcr\_Q, 399
  - hpe5022\_writeMultiple, 330
  - hpe5022\_writeReferenceDcr, 334
  - hpe5022\_writeReferenceDcr\_Q, 335
  - hpe5022\_writeTrackOffset, 222
  - hpe5022\_writeTrackOffset\_Q, 224
  - hpe5022\_writeTrackOffsetCompPattern, 976
- ## I
- impedance
    - head amplifier, 276
  - initial track, 193
  - inmost track, 180
  - input level
    - auto control, 257
    - range setting, 271
  - inter-symbol interference, 257
  - isolated pulse pattern, 126
- ## L
- LF pattern, 124
  - library, 14
  - load
    - head, 247
  - load head, 209, 237
  - load position, 192, 195, 201
  - Load Type
    - normal, 186
    - ramp, 186
    - tilt, 186

**M**

measurement mode, 254  
micro track, 637

**N**

narrow band TAA measurement, 564  
  channel bit rate sweep, 679, 1092  
  roll off, 686, 1099  
  sense current sweep, 665, 672  
  stability, 511, 537  
  track profile, 615  
  write current sweep, 658  
NLTS 5th harmonic method measurement  
  channel bit rate sweep, 679, 1092  
  precompensation sweep, 696  
  sense current sweep, 665, 672  
  write current sweep, 658  
NLTS measurement  
  5th harmonic method, 810  
  dipulse extraction method, 1053  
  time correlation method, 1060  
noise reference, 820

**O**

outmost track, 180  
over sample rate, 1019  
overwrite measurement, 910  
  channel bit rate sweep, 679, 1092  
  sense current sweep, 665, 672  
  write current sweep, 658

**P**

parameters, 90  
parametric measurement, 466  
partial erasure measurement, 934  
peak detect mode, 843, 857, 1070, 1086  
pivot, 155  
popcorn noise measurement  
  counter, 886  
  e5038a, 867  
  e5041a, 886  
  sampling method, 867  
  threshold method, 886  
positive peak detect, 857, 1070  
postbit pattern, 377  
prebit pattern, 377  
precompensation  
  data pattern, 383  
  delay time, 374  
  pattern, 377  
Precompensation Function, 374  
precompensation sweep measurement, 696  
preset value, 91, 96  
preset values, 90  
pseudo random sequence, 128  
PW measurement, 428, 466

  channel bit rate sweep, 679, 1092  
  sense current sweep, 665, 672  
  stability, 511, 537  
  waveform (by oscilloscope), 1043  
  write current sweep, 658  
PW threshold level, 428

**R**

ramp load, 186  
  init radius, 201, 207  
  init skew, 201, 207  
  load sequence, 237  
  speed on ramp, 201, 207  
  unload sequence, 237  
range  
  channel bit rate, 118  
  sense current, 339  
  write current, 325  
read current sweep measurement, 665, 672  
read track offset, 219  
read track width, 626, 761  
read/write offset, 761  
read/write track offset, 628, 630  
reference isolated pulse, 265  
reference level for parametric function, 400  
reference point, 155, 161  
reference position, 180  
repetitive data pattern, 131  
resolution band width, 840, 1083  
resolution measurement, 466, 501  
resolution band width, 854, 1067  
return values, 90  
revision, 110, 111, 112, 114  
roll off density, 693, 1106  
roll off measurement, 686, 1099  
Roll Off Measurement Function, 1099  
rotation  
  on/off, 209  
  speed, 213  
RW offset, 761

**S**

sample program files, 18  
sampling mode, 843, 857, 1070, 1086  
sampling rate, 1019  
sectorized overwrite measurement, 920  
self test, 104  
sense current, 336  
Sense Current Sweep Measurement, 665, 672  
sense current sweep measurement, 665, 672  
sense stimulus mode, 343  
serial number, 111, 112  
SHNR, 775  
shroud, 314  
side erase measurement, 954  
side reading measurement, 944  
signal noise ratio measurement, 820

SNR, 820

snr

parametric module, 820

SNR triple track test measurement, 728

spectrum analyzer

display on/off, 320

spectrum measurement, 850, 1064, 1080

spectrum SNR measurement, 837

spindle

rotate, 209

rotation speed, 195, 213

spindle cover, 314

Spinstand Drive Configuration Function, 154

stability measurement

absolute time, 537

ratio, 511

static loading, 192

sub module, 114

sub-harmonic noise ratio, 775

system serial number, 111

## T

TAA measurement, 409, 466

channel bit rate sweep, 679, 1092

roll off, 686, 1099

sense current sweep, 665, 672

stability, 511, 537

track profile, 615

waveform (by oscilloscope), 1041

write current sweep, 658

TAA reference level, 400

tilt load, 186

track

initial, 192, 195

inmost, 180

outmost, 180, 184

pitch, 180

position, 229, 241

Track Average Amplitude Measurement Function, 409

track offset

read/write, 628, 630

track profile measurement, 615

track width, 626

trigger port, 295

triple track test measurement, 703

## U

unload

head, 247

unload head, 209, 237

unload position, 195

user defined data pattern, 140

## V

VISA, 90

## W

Waveform Measurement Function, 1017

write

continuously, 328

one revolution, 326

write current, 323

write current sweep measurement, 658

write track offset, 222

write track width, 626, 761