

communications



**OPERATING and SERVICE
INSTRUCTIONS**

**SX-62A
&
SX-62AU
MARK 2A**

COMMUNICATIONS

Set RECEPTION control at FM and adjust slug S-16 for maximum output. Now set Slug S-7 for the null or minimum output as indicated on the output meter. Check the discriminator by slowly tuning the signal generator through 10.7 mc and observe the two maximum audio level readings on the output meter. If the two peaks are equal the job is done; if not it may be necessary to reset Slug S-16 until a reasonable balance is obtained.

RF ALIGNMENT

After completing the alignment of the IF amplifier stages the RF amplifier stages may be aligned according to the following chart. Connect the high side of the signal generator to terminal A-1 through the dummy antenna specified and connect a jumper between antenna terminal A-2 and GND. Use just enough signal generator output to obtain a 500 milliwatt audio output level for best results.

ALIGNMENT CHART

Dummy Antenna	Signal Generator Frequency	Band Selector Range	Radio Dial Setting	Adjust	Remarks
RMA	1500 kc	550-1600 kc	1500 kc	C-47*, 6, 21, 35	Adjust for max. output
	600 kc		600 kc	S-36*	
RMA	4.0 mc	1.62-4.9 mc	4.0 mc	C-45*, 20, 34	Adjust for max. output
	1.8 mc		1.8 mc	S-35*	
RMA	14.0 mc	4.9-15 mc	14.0 mc	C-43*, 4, 19, 33	Adjust for max. output
	7.0 mc		7.0 mc	S-34*, 22, 26, 30	
RMA	28 mc	15-32 mc	28 mc	C-42*, 3, 18, 32	Adjust for max. output
	18 mc		18 mc	S-33*, 21, 25, 29	
300-ohm non-inductive resistor	50 mc	27-56 mc	50 mc	C-41*, 2, 17, 31	Adjust for max. output
	30 mc		30 mc	S-32*, 20, 24, 28	
300-ohm non-inductive resistor	105 mc	54-109 mc	105 mc	C-40*, 1, 16, 30	Adjust for max. output
	60 mc		60 mc	S-31*, 19, 23, 27	

* Note - Calibration adjustment.

Note - The standard RMA dummy antenna mentioned in the alignment chart consists of a 200 mmf condenser in series with a 20 uh r-f choke which is shunted by a 400 mmf condenser in series with a 400 ohm carbon resistor.

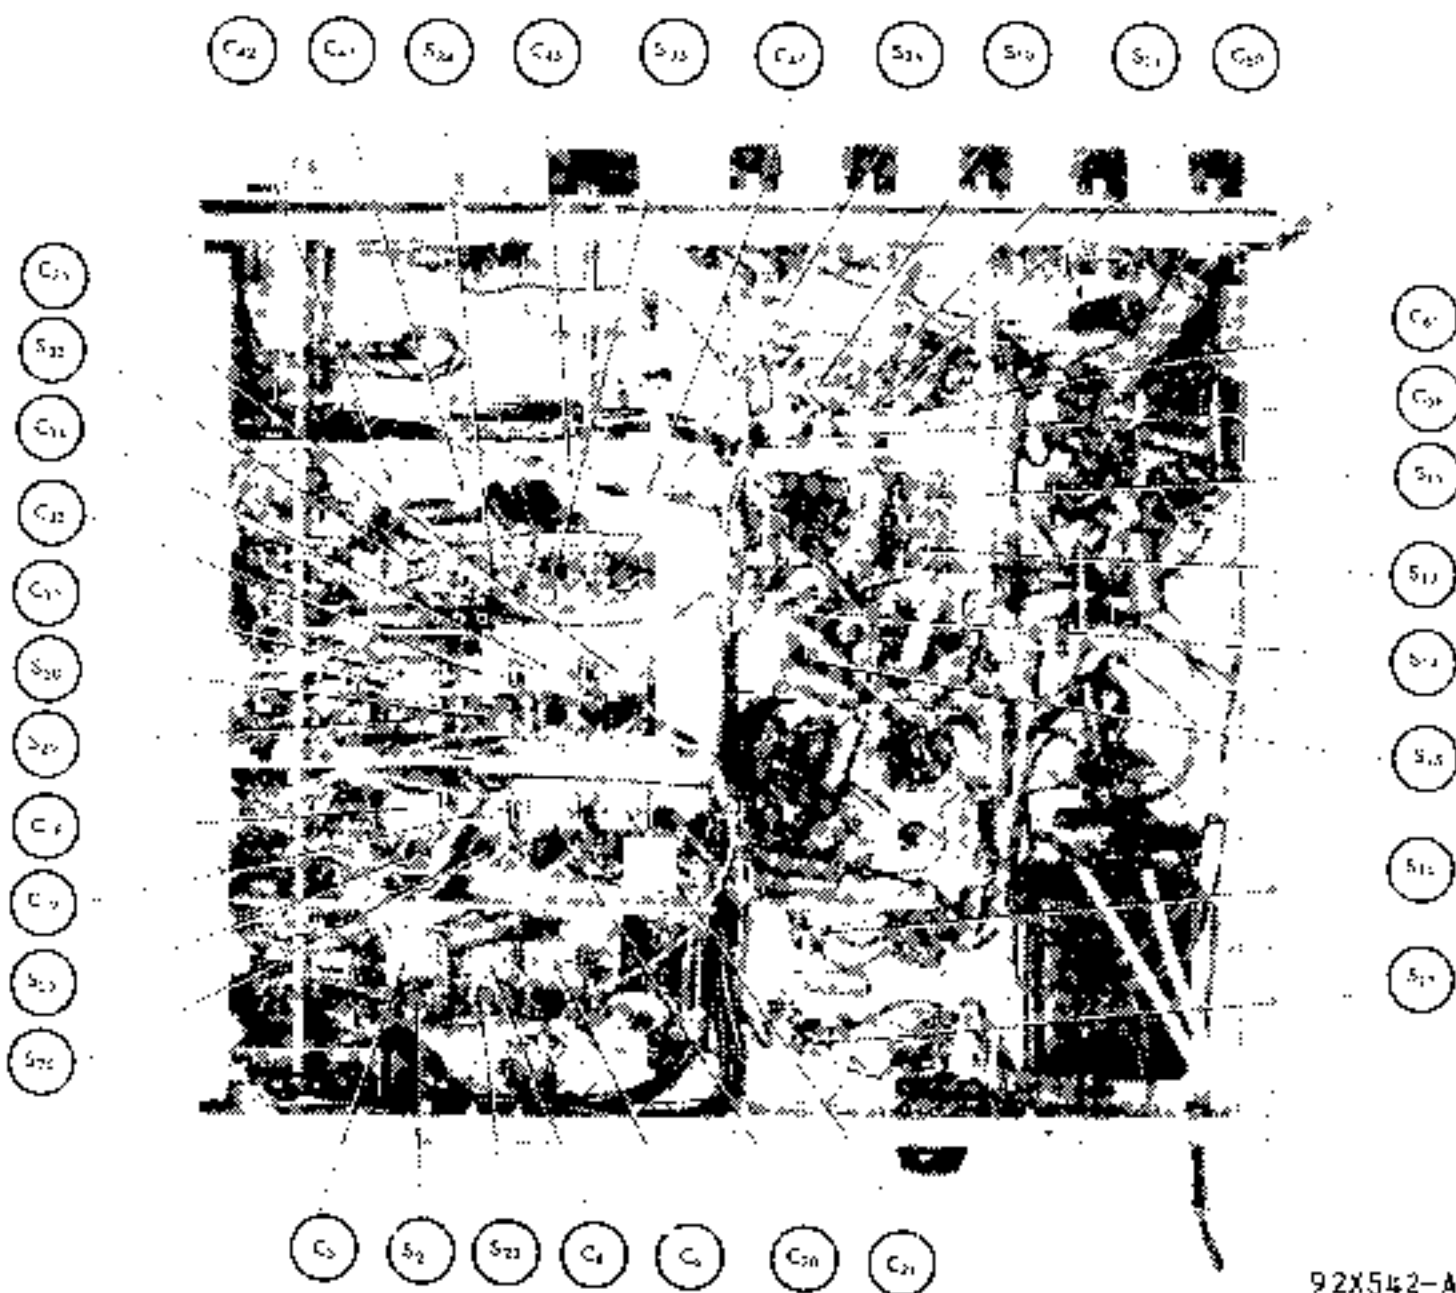


Fig. 8. Alignment adjustments, bottom view

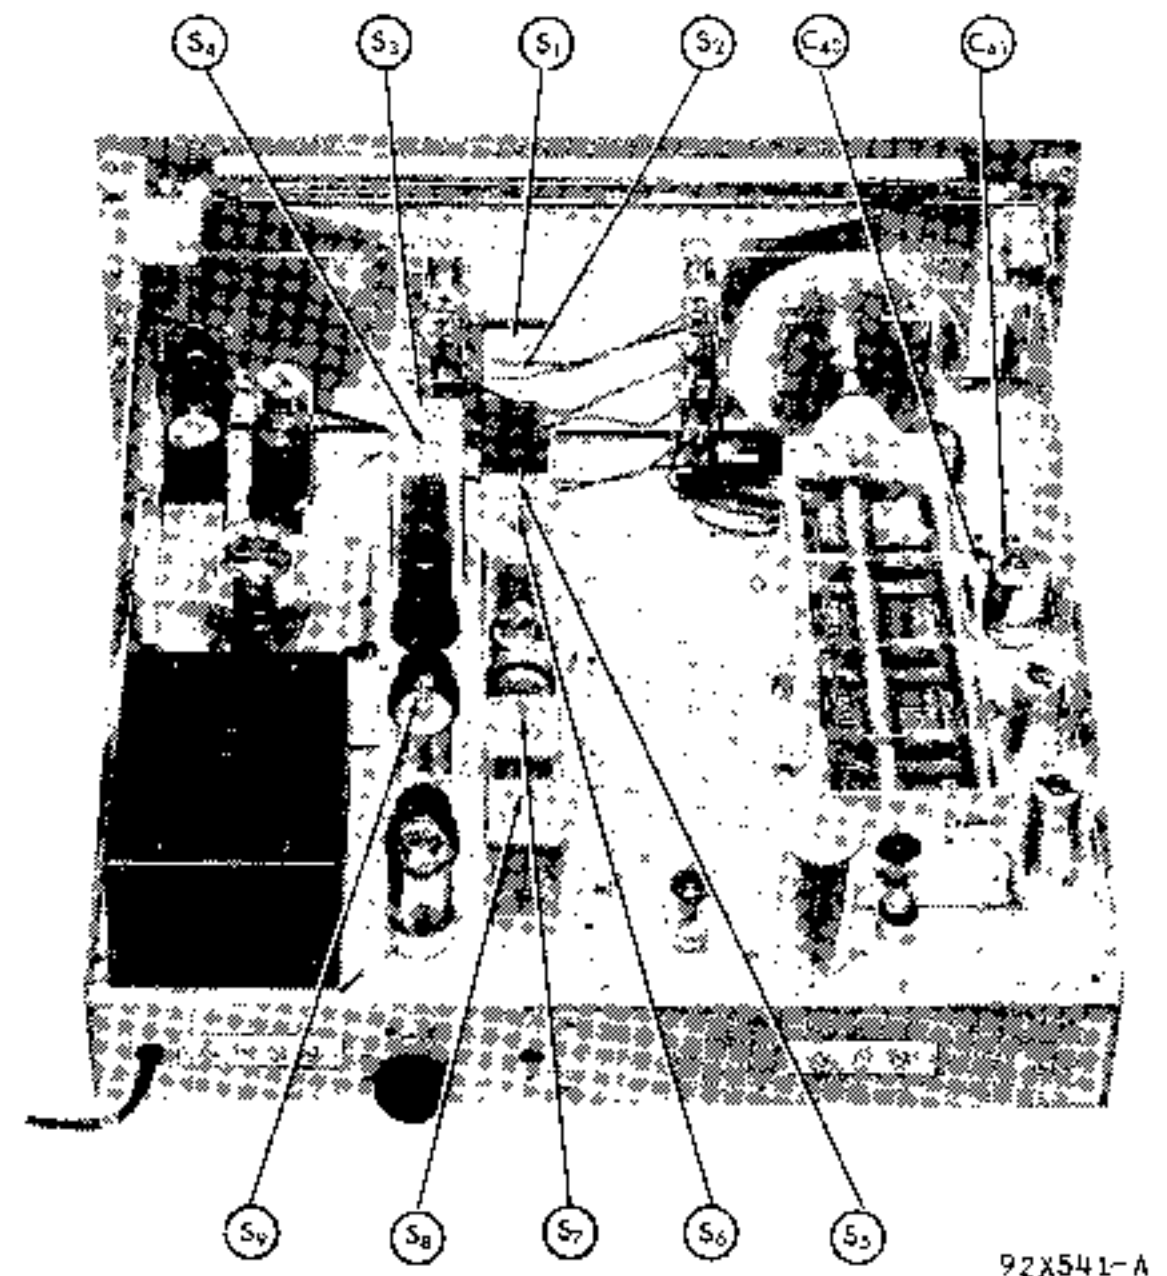


Fig. 9. Alignment adjustments, top view

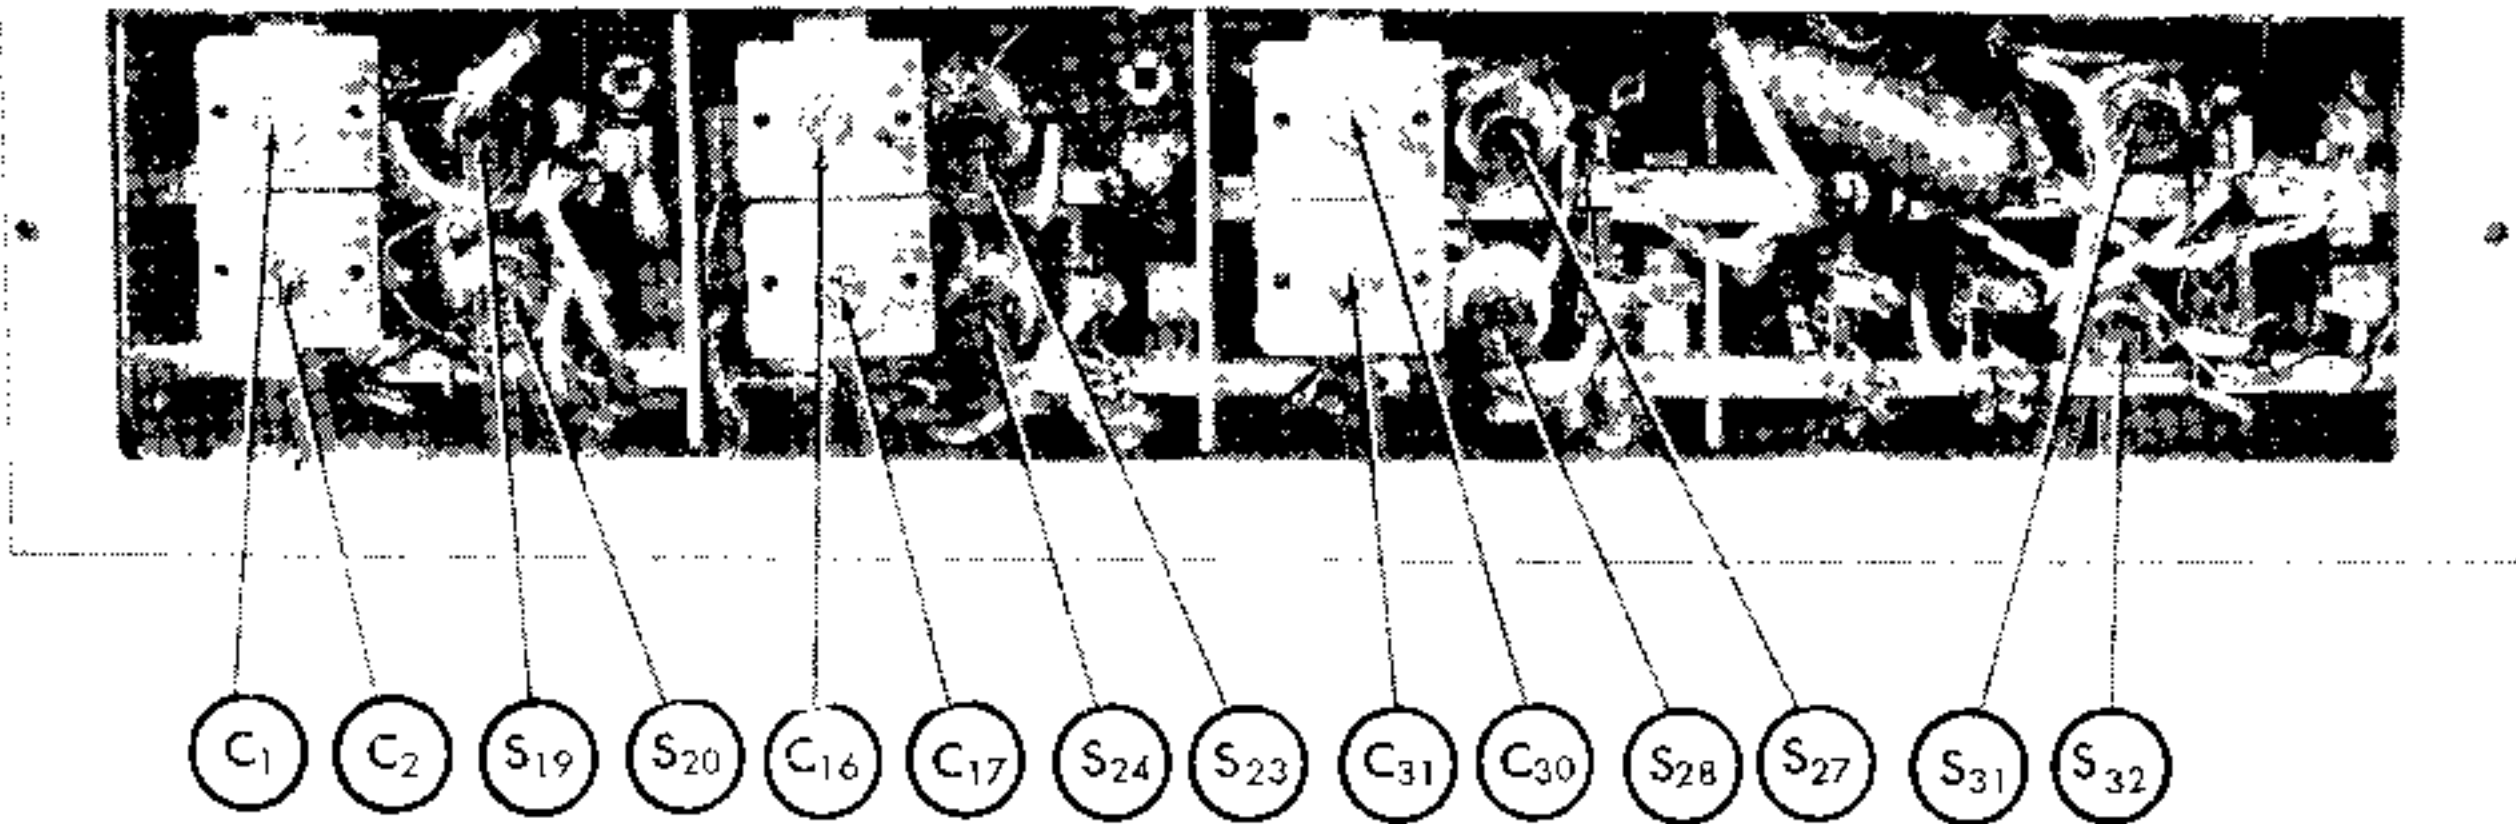


Fig. 10 Alignment adjustments, left side view

92X543

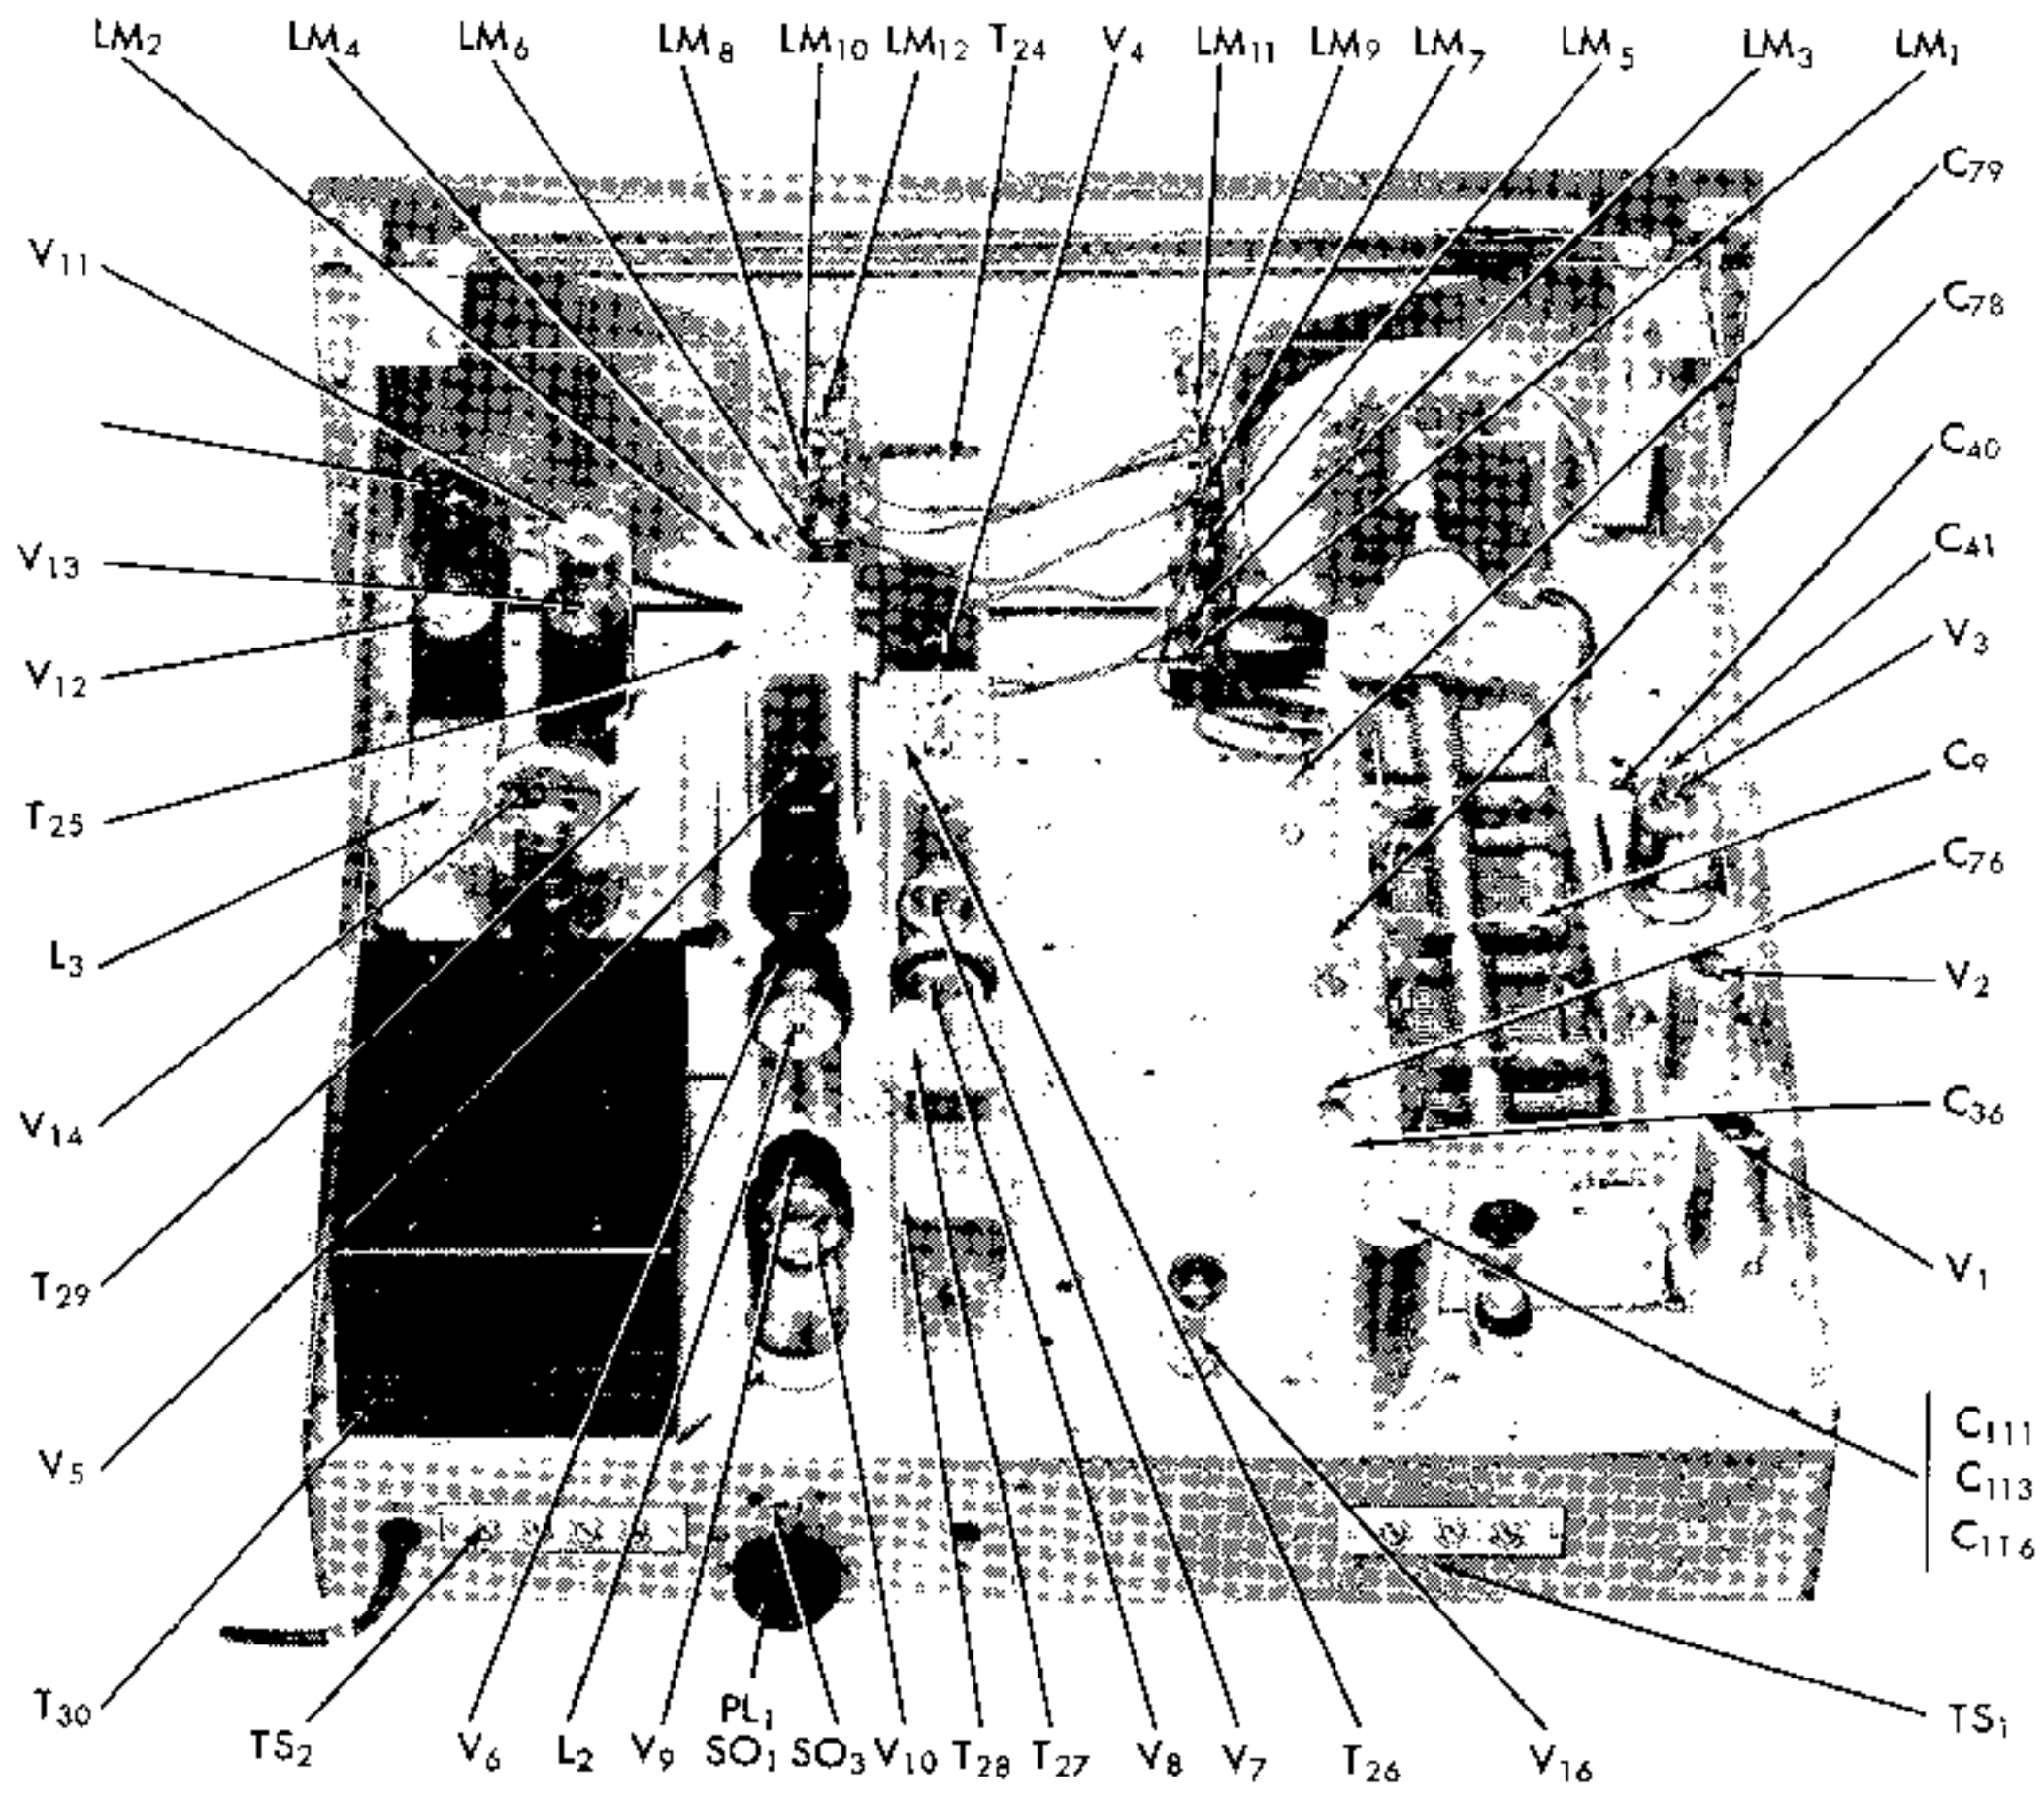


Fig. 11 Component locations, top view

92X544-B

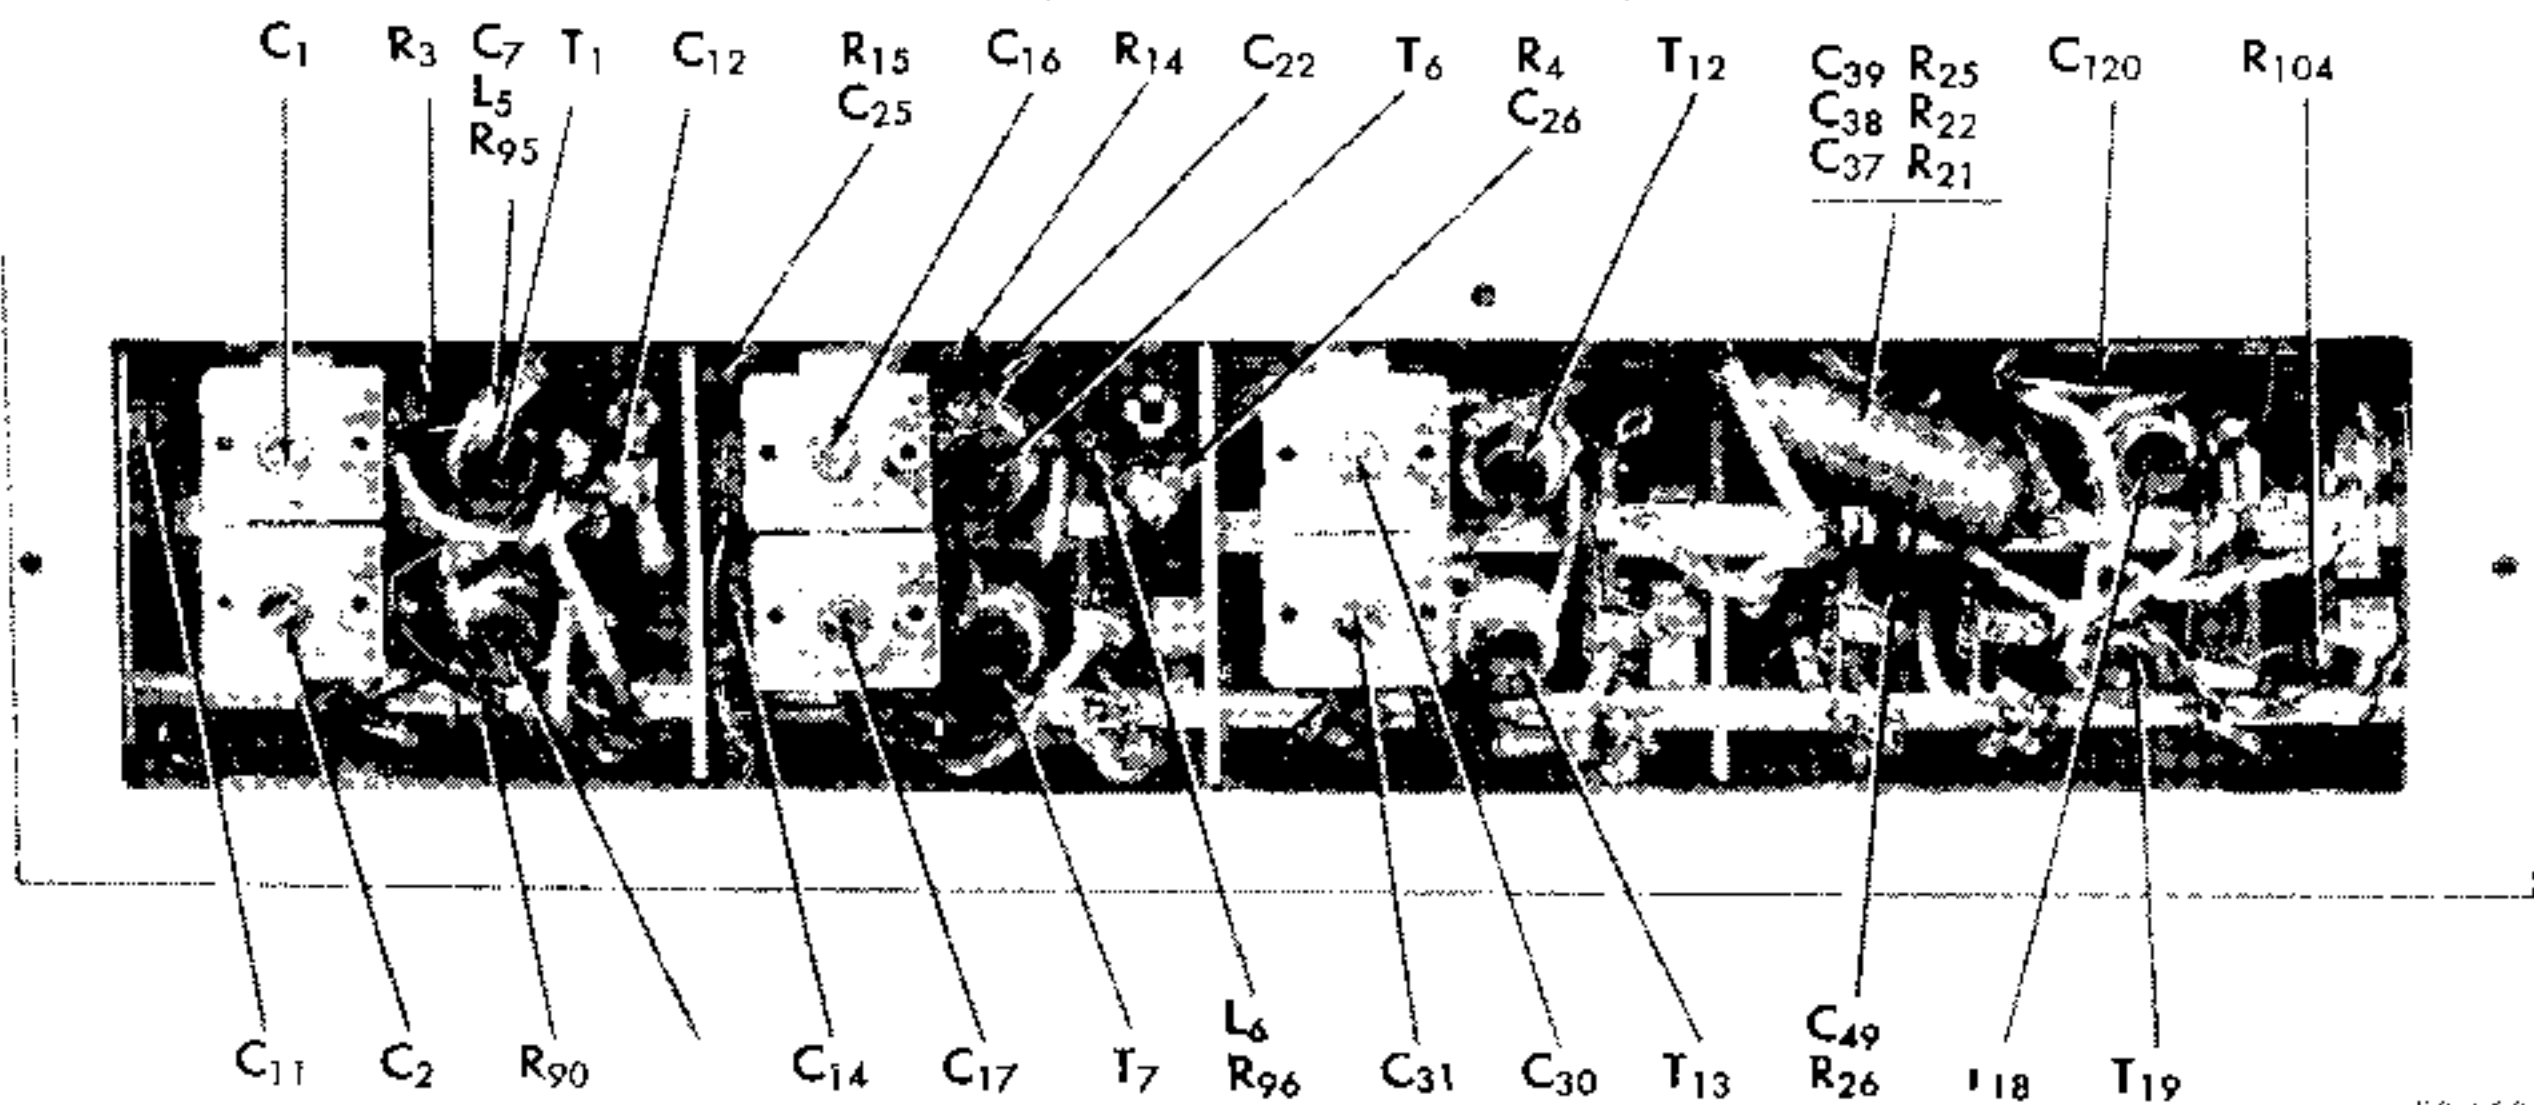


Fig. 12 Component locations, left side view.

92X580-A


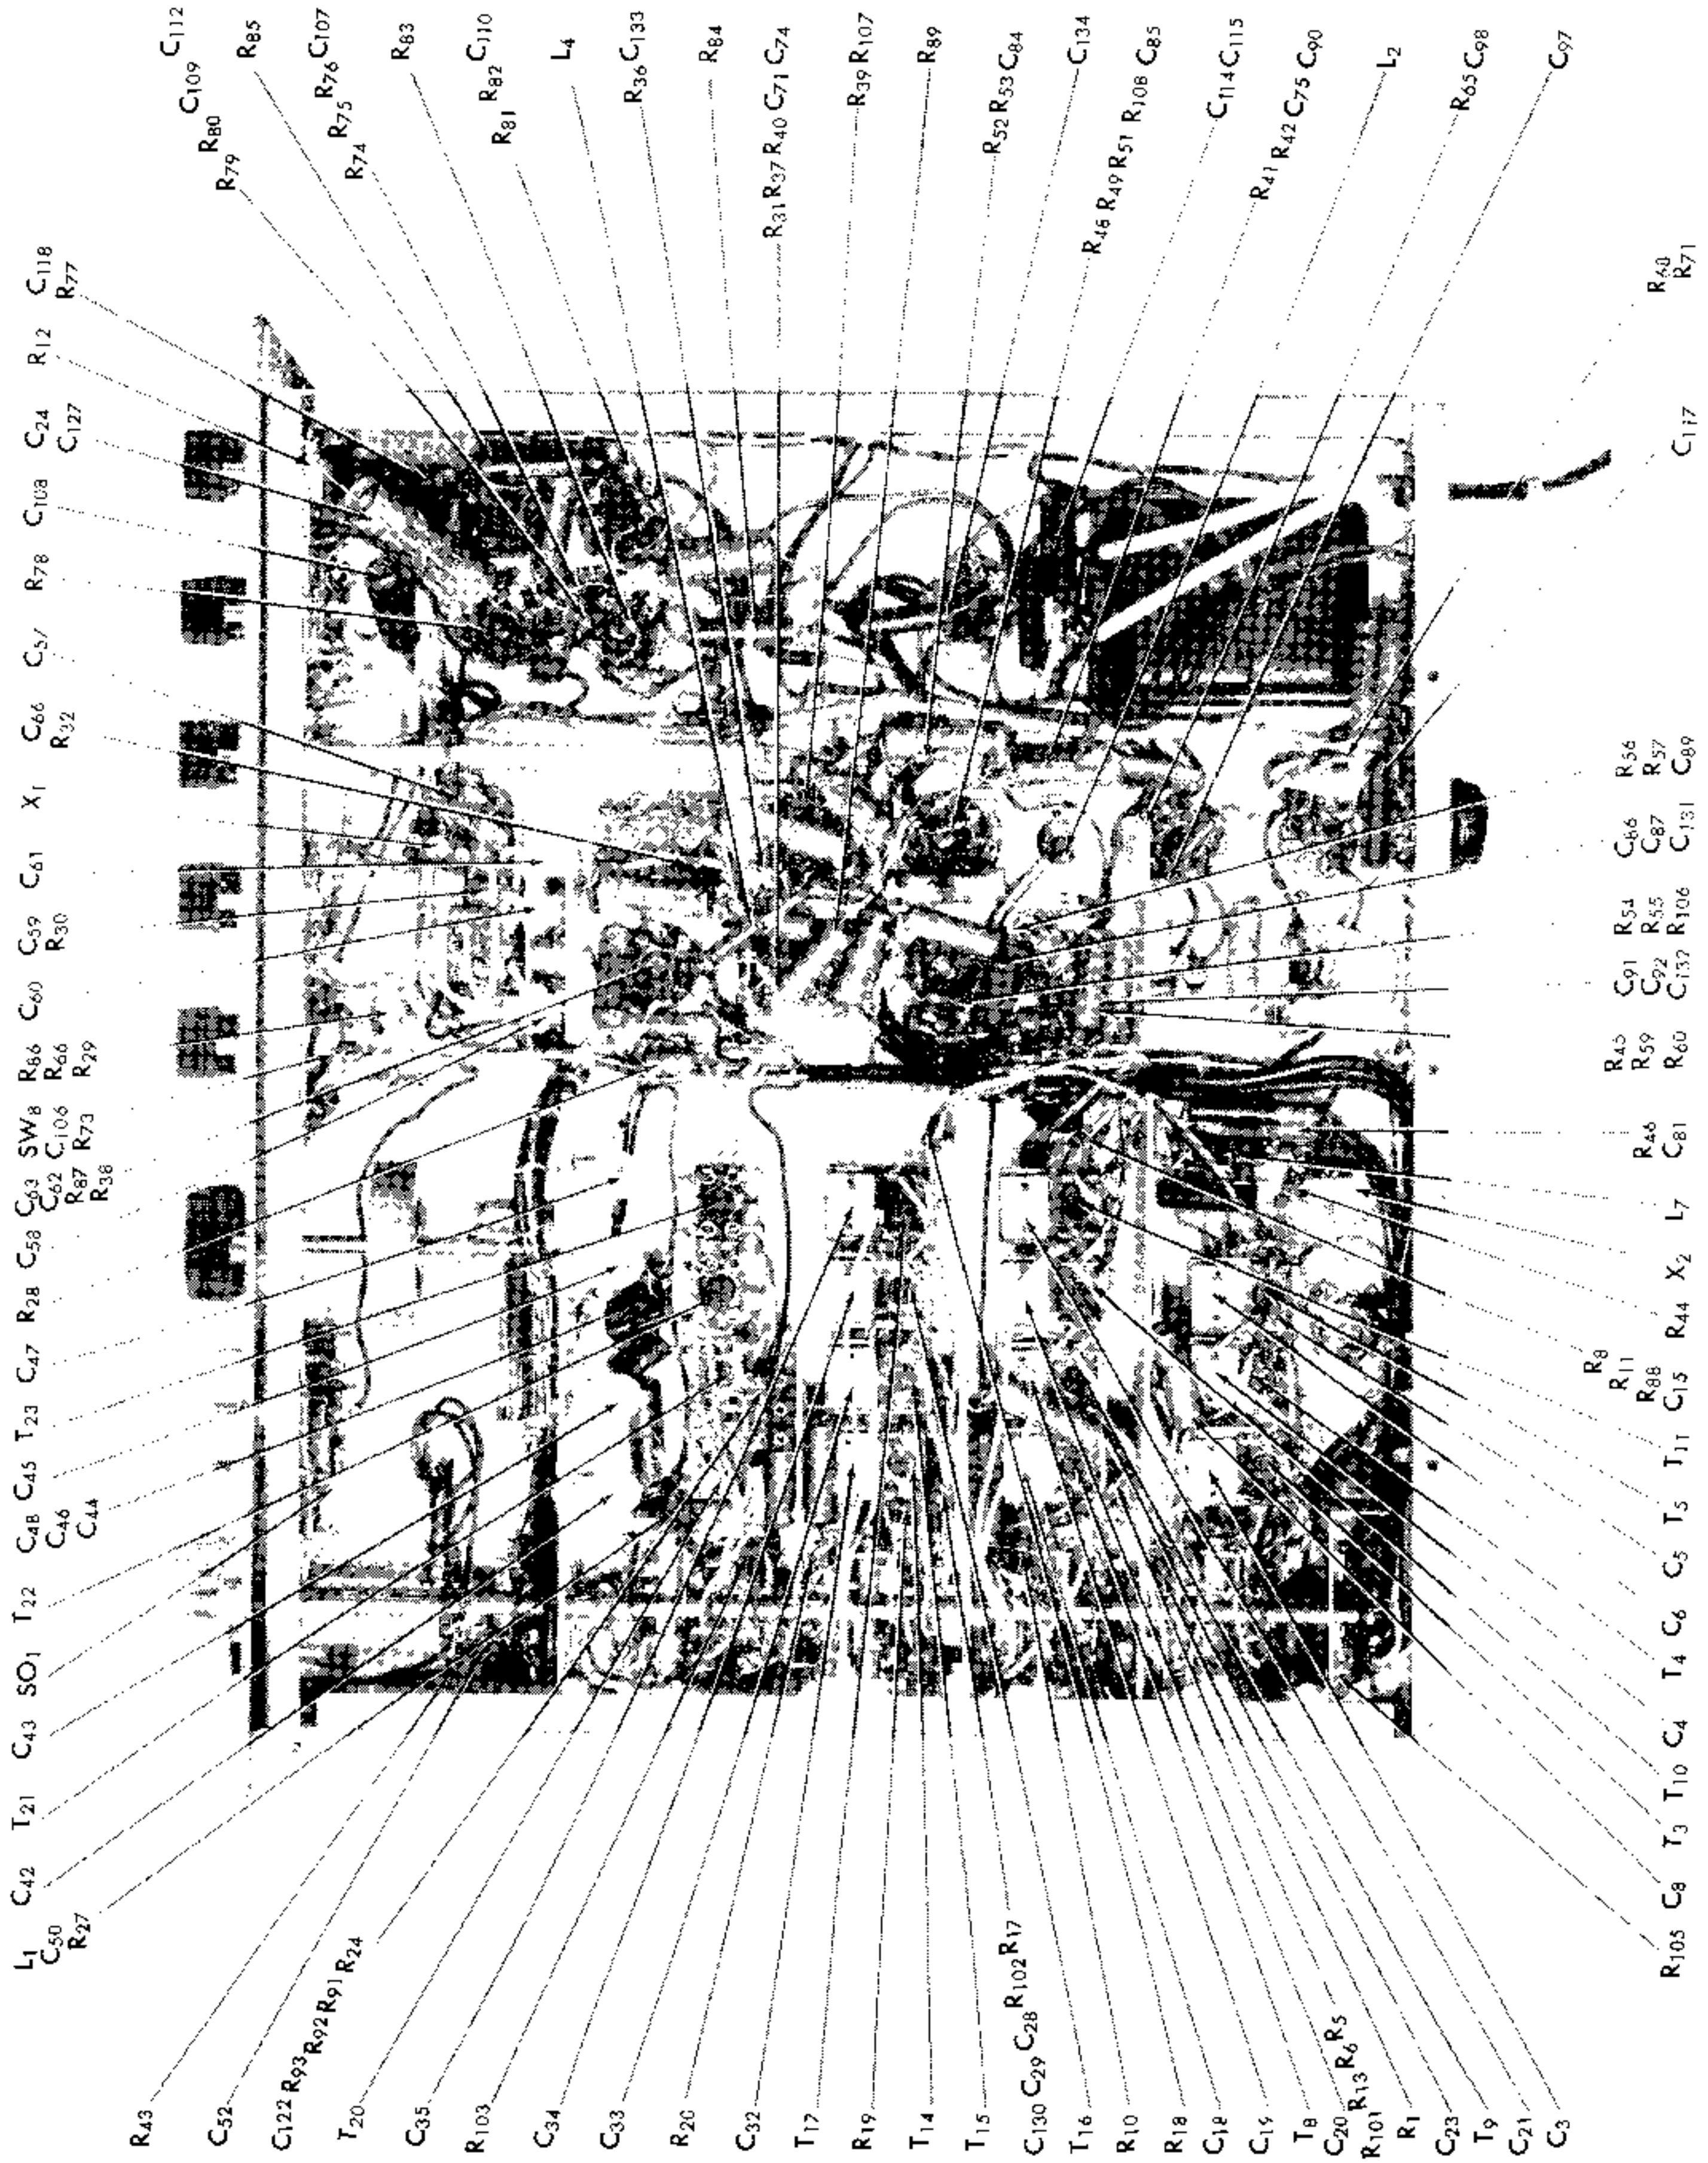


Fig. 16. Component Locations, Bottom View

92X643-A

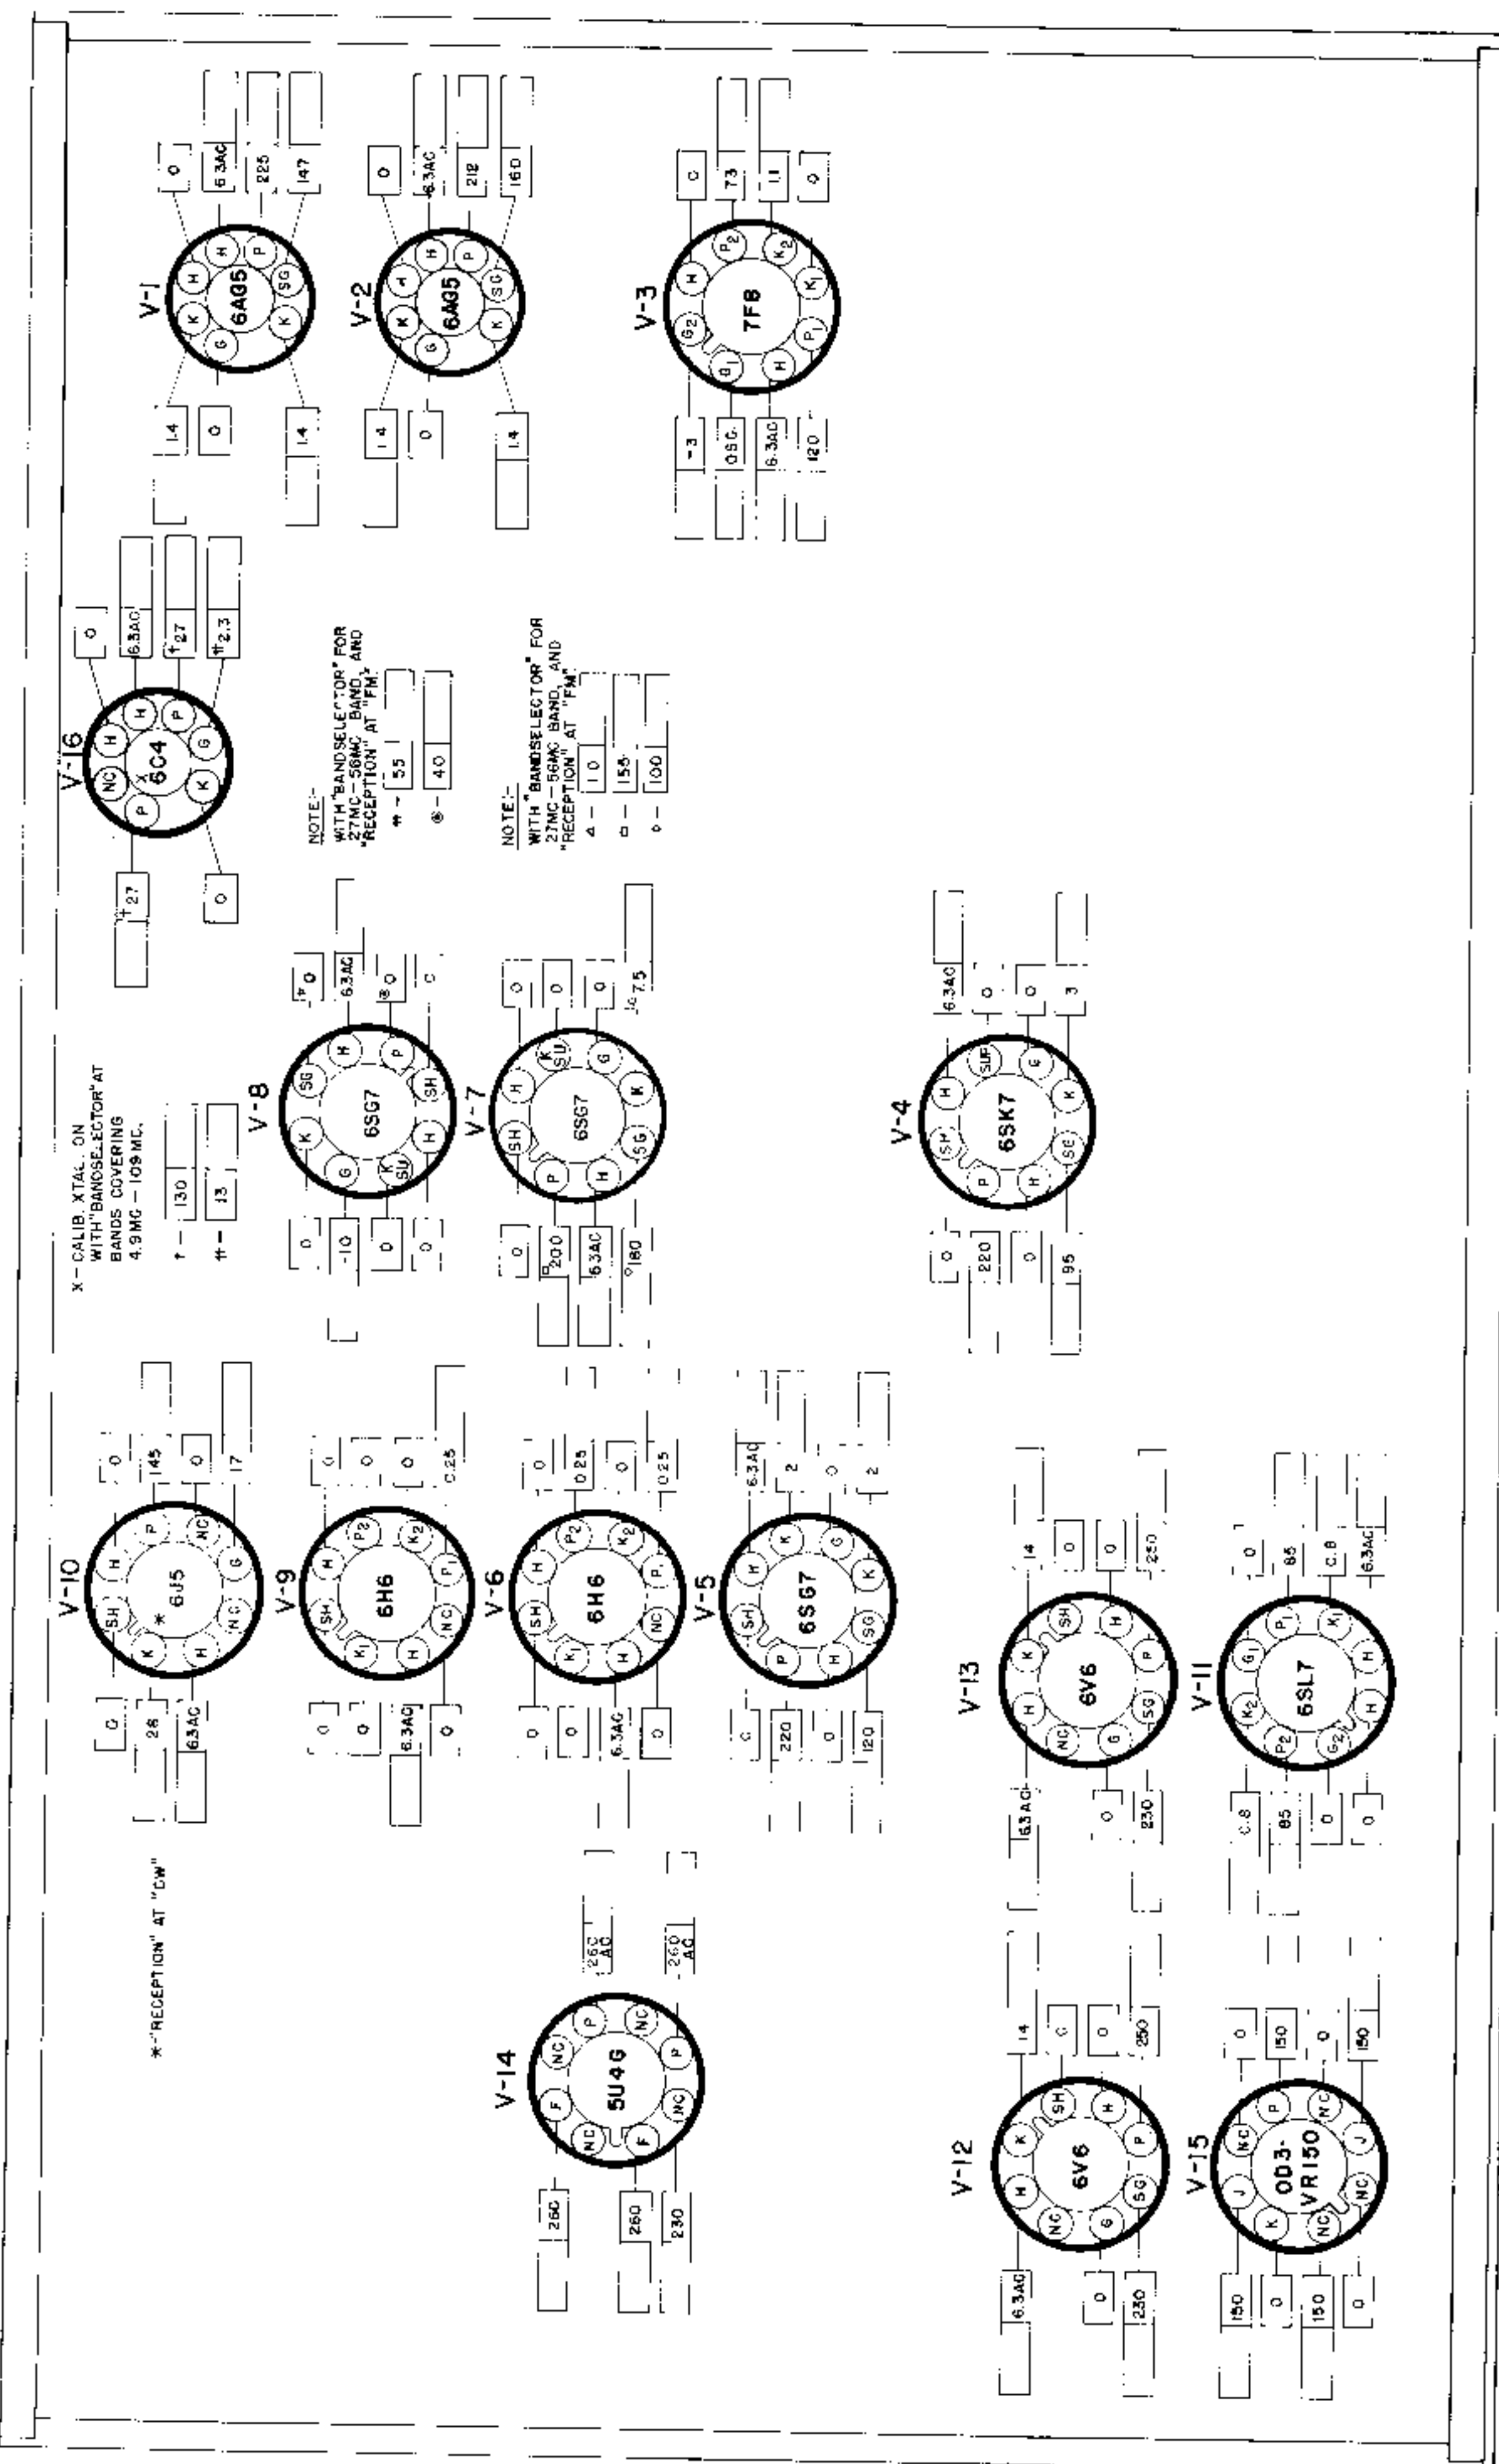

FRONT PANEL NOTES (CONT.)

8. CONTROL SETTING—UNLESS SPECIFIED:
 - "BAND SELECTOR" AT BAND 1.
 - "RECEPTION" AT "AM."
 - "CALIB. XTAL" AT "OFF."
 - "NOISE LIMITER" AT "OFF."
 - "RECEIVE—STANDBY" AT "RECEIVE."
 - "SENSITIVITY" AT MAXIMUM GAIN.
 - "SELECTIVITY" AT "NORMAL / BOARD."

NOTES

1. SOCKET VIEWS ARE BOTTOM VIEWS.
2. ALL VOLTAGES MEASURED BETWEEN TUBE SOCKET TERMINALS AND GROUND.
3. LINE VOLTAGE—117 V. AC.
4. ALL VOLTAGES SHOWN ARE DC UNLESS OTHERWISE SPECIFIED.
5. VOLTAGES SHOWN WERE MEASURED WITH A 20,000 OHM/VOLT METER.
6. "NC"—NO CONNECTION.
7. THE BLANK SPACES ARE PROVIDED FOR THE SERVICEMAN. FILL IN THE ACTUAL READING AS TAKEN WITH YOUR OWN EQUIPMENT. A NORMAL OPERATING RADIO SHOULD BE USED FOR THESE MEASUREMENTS.

Fig. 14 Tube socket voltage chart

BAND SELECTOR SWITCH SW-1

POSITION	RANGE
1 -	.54 TO 1.62 MC. AM
2 -	1.62 TO 4.9 MC. AM
3 -	4.9 TO 15 MC. AM
4 -	15 TO 32 MC. AM
5 -	27 TO 56 MC. AM/FM
6 -	54 TO 109 MC. AM/FM

SWITCH SHOWN IN POSITION NO. 1

TONE SWITCH SW-4


1 -	BASS
2 -	ME. FI.
3 -	MED.
4 -	LOW

SWITCH SHOWN IN BASS POSITION

HIGHLIGHT SWITCH SW-5

1 -	ON
2 -	AM
3 -	FM
4 -	PHONO


SWITCH SHOWN IN ON POSITION

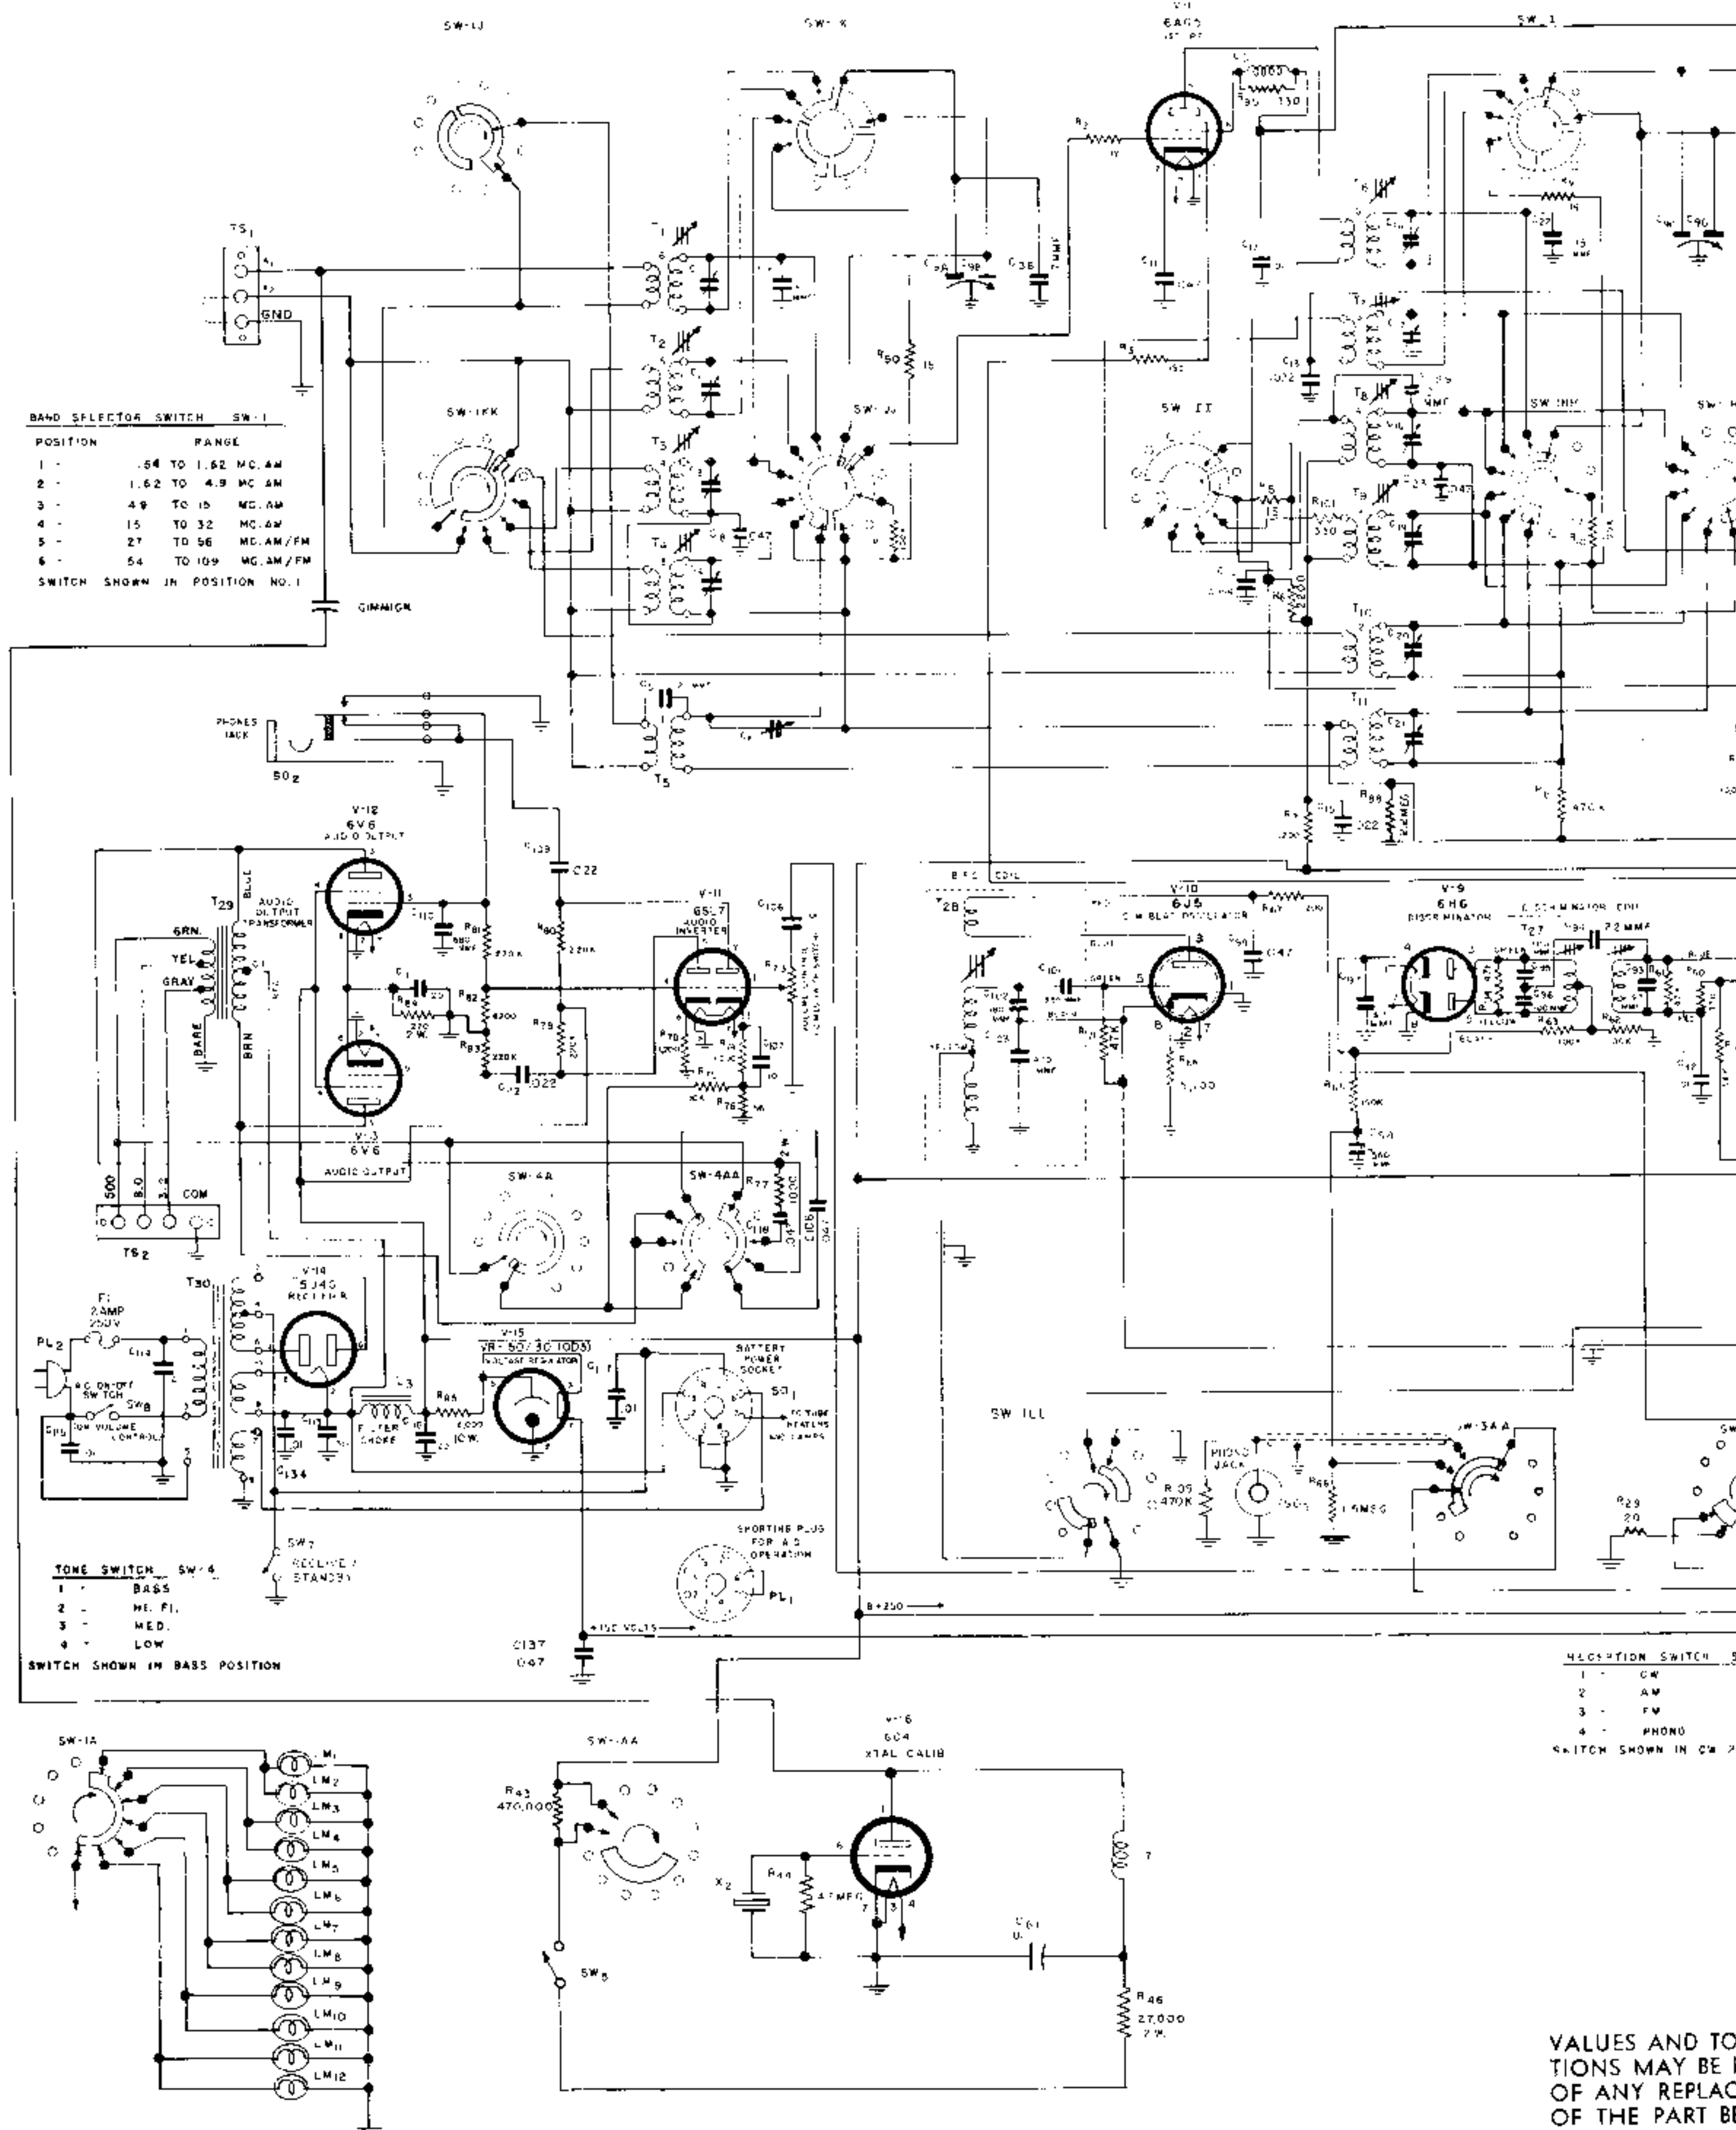

VALUES AND TOLERANCES MAY BE FOUND IN THE PARTS LIST OF ANY REPLACEMENT PARTS. VALUES AND TOLERANCES MAY BE FOUND IN THE PARTS LIST OF ANY REPLACEMENT PARTS.

SX-62A & SX-62AU

MARK 2A

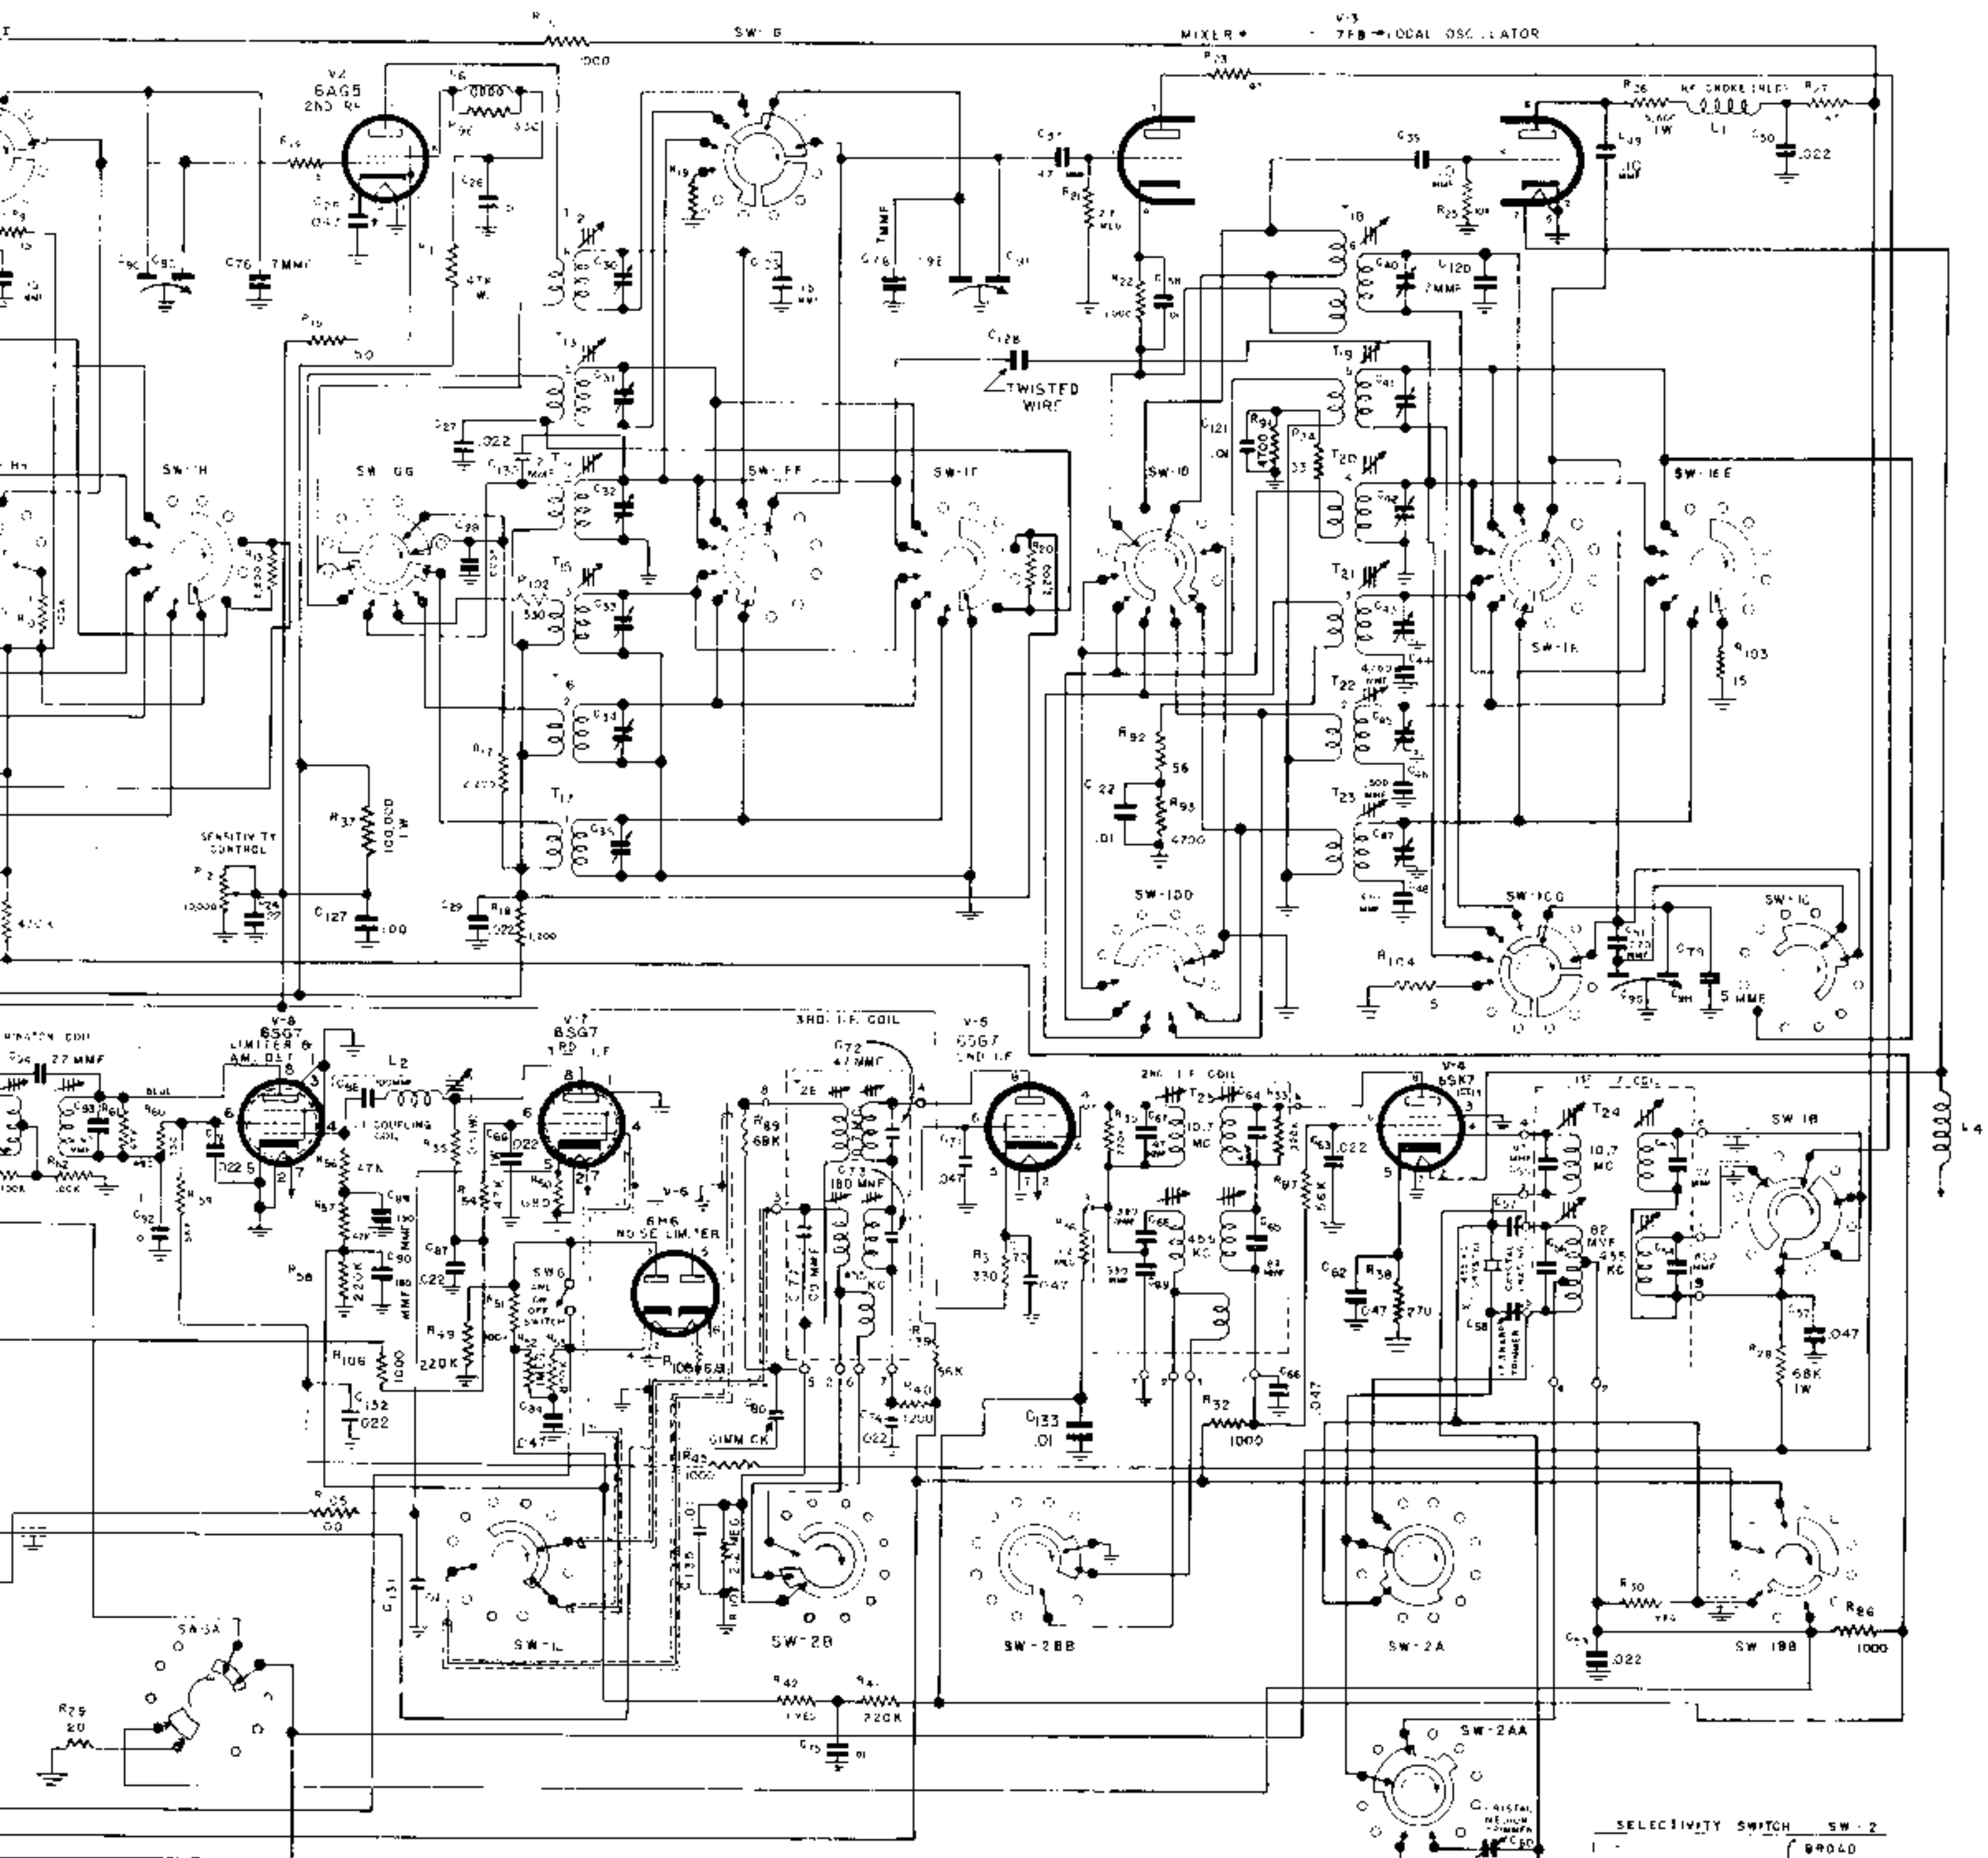

RECEPTION SWITCH SW-3
 1 - CW
 2 - AM
 3 - FM
 4 - PHONO
 SWITCH SHOWN IN CW POSITION

LAST R SYMBOL - R109
 LAST C SYMBOL - C135

SELECTIVITY SWITCH SW-2
 1 - BROAD
 2 - MED.
 3 - SHARP
 4 - BROAD
 5 - MED.
 6 - SHARP
 SWITCH SHOWN IN NORMAL BROAD POSITION

NOTE-
 RESISTOR VALUES ARE IN OHMS.
 ALL RESISTORS ARE 1/2 WATT, UNLESS OTHERWISE SPECIFIED.
 CAPACITOR VALUES ARE IN MFD. UNLESS OTHERWISE SPECIFIED.
 K=1000

89D282 - F

VALUES AND TOLERANCES SHOWN ARE NOMINAL AND VARIATIONS MAY BE FOUND. IT IS RECOMMENDED THAT THE VALUE OF ANY REPLACEMENT CORRESPOND TO THE NOMINAL VALUE OF THE PART BEING REPLACED.

Fig. 15. Schematic diagram

Warranty

"The Hallicrafter's Company warrants each new radio product manufactured by it to be free from defective material and workmanship and agrees to remedy any such defect or to furnish a new part in exchange for any part of any unit of its manufacture which under normal installation, use and service discloses such defect, provided the unit is delivered by the owner to our authorized radio dealer, wholesaler, from whom purchased, or, authorized service center, intact, for examination, with all transportation charges prepaid within ninety days from the date of sale to original purchaser and provided that such examination discloses in our judgment that it is thus defective.

This warranty does not extend to any of our radio products which have been subjected to misuse, neglect, accident, incorrect wiring not our own, improper installation, or to use in violation of instructions furnished by us, nor extend to units which have been repaired or altered outside of our factory or authorized service center, nor to cases where the serial number thereof has been removed, defaced or changed, nor to accessories used therewith not of our own manufacture.

Any part of a unit approved for remedy or exchange hereunder will be remedied or exchanged by the authorized radio dealer or wholesaler without charge to the owner.

This warranty is in lieu of all other warranties expressed or implied and no representative or person is authorized to assume for us any other liability in connection with the sale of our radio products."

Form No. 94X622

the Hallicrafters co.