


The Harman Kardon Model AVR70/AVR70MK II AUDIO AND VIDEO RECEIVER

Manual A

AVR70

Technical Manual

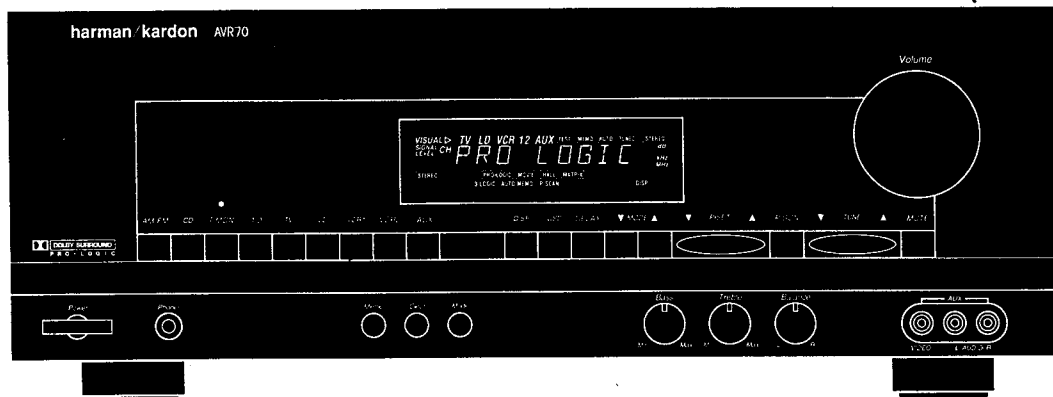

The following marks found in the parts list of this manual identify the models as follows.

- (BK) AVR70** :North America area model Black version
(with Tact type mains switch)
- (IB) AVR70** :International model Black version
(with Tact type mains switch)
- (BK) AVR70MK II** :North America area model Black version
(with Manual Operated Mechanical type mains switch)
- (IB) AVR70[MOMS]** :International model Black version
(with Manual Operated Mechanical type mains switch)

CONTENTS

SPECIFICATIONS	2	GENERAL UNIT PARTS LIST	12
ELECTROSTATICALLY SENSITIVE (ES) DEVICE ...	3	GENERAL UNIT EXPLODED VIEW	13
LEAKAGE TEST	4	P.C. BOARDS	15
CONTROLS AND FUNCTIONS	5	ELECTRICAL PARTS LIST	23
SERVICE PROCEDURE	7	IC BLOCK DIAGRAMS	38
TEST EQUIPMENT REQUIRED	7	SCHEMATIC DIAGRAMS (BK)	43
ALIGNMENT PROCEDURES	7	SCHEMATIC DIAGRAMS (IB)	52
ALIGNMENT AND TEST POINTS	9	PIN CONNECTION DIAGRAM	61
CIRCUIT DESCRIPTION	10	WIRING DIAGRAM	62
BLOCK DIAGRAM	11	PACKING MATERIAL AND PARTS LIST	63
DISASSEMBLY PROCEDURES	12		

harman/kardon

Parts and Service Office
80 Crossways Park West, Woodbury, N.Y. 11797
1112-AVR70 1200 Printed in Japan

SPECIFICATIONS

FRONT AMP SECTION

	Nominal	Limit
Continuous Power Output (STEREO MODE), Input: CD		
THD : 0.09% 20 Hz-20 kHz	≥80 W	≥70 W
Both Channel Driven (1 kHz) (SURROUND MODE)	≥30 W	≥25 W
THD: 0.3%, 8 ohms, 1 kHz		
THD at 70 W, 8 ohms, Input: CD		
20 Hz	≤0.03%	≤0.09%
1 kHz	≤0.01%	≤0.09%
20 kHz	≤0.05%	≤0.09%
IM Distortion at 70 W, 8 ohms, Vol: Max.	≤0.03%	≤0.09%
Input Sensitivity for Rated Power Output (70W) (STEREO MODE, 1 kHz 8 ohms, Volume : Max)		
CD	275 mV	235-315 mV
TAPE1/2, TV/LD VCR1/2, AUX	220 mV	180-260 mV
S/N Ratio Input Shorted at 1kHz 1W Output (WTD IHF-A)		
CD 0.5 V Input	≥82 dB	≥78 dB
Tone Control		
Bass: 100 Hz	+10 dB	+10 ±2.5 dB
	-10 dB	- 10 ±2.5 dB
Treble: 10kHz	+10 dB	+10 ±2.5 dB
	-10 dB	- 10 ±2.5 dB
Frequency Response at -3dB		
Mode: Stereo, Ref: 1 kHz	10 Hz-70 kHz	15 Hz-50kHz
Channel Crosstalk Input Shorted by 1 kohms		
100Hz	≥55 dB	≥50 dB
1 kHz	≥45 dB	≥40 dB
10 kHz	≥35 dB	≥30 dB

CENTER AMP SECTION

	Nominal	Limit
RMS Output Power		
THD (0.3%, 8 ohms, 1 kHz)		
Only Center Channel Driven	≥80 W	≥70 W
S/N Ratio (Input Level : 245 mV)		
Input Shorted, IHF-A WTD	≥70 dB	≥65 dB
Frequency Response at-3 dB		
8 ohms, Dolby Pro-Logic	15 Hz - 22 kHz	30 Hz - 20 kHz

REAR AMP SECTION

	Nominal	Limit
RMS Output Power		
THD (0.7%, 8 ohms, 1 kHz)		
Only Rear Channel Driven	≥35 W	≥25 W
S/N Ratio (Input Shorted, IHF-A WTD)		
Delay : 20 ms, Input Level : 245 mV	≥70 dB	≥65 dB
Frequency Response at-3 dB		
8 ohms, Dolby Pro-Logic	15 Hz - 7 kHz	30 Hz - 6.5 kHz

SUB WOOFER SECTION

Line level at Pre out	Approx. 150 mVrms
Surround mode : Dolby Pro-Logic	
Center speaker mode : Large	
Input signal : L ch (only) 200mV	
Master volume : 0 dB	
Low pass crossover frequency	80 Hz cut off
Slope (Low Pass filter)	24 dB / octave

VIDEO AMP SECTION

	Nominal	Limit
Input Sensitivity/Impedance		
LD, TV, VCR1, VCR2, AUX	1 VP-P/75 Ω	±1 dB
Output Level/Impedance		
VCR1, VCR2, Monitor	1 VP-P/75 Ω	±1 dB
Frequency Response at-3 dB	DC-8 MHz	DC-6MHz

FM SECTION

	Nominal	Limit
Tuning Cover Range 75 kHz Step	87.50 - 108.00 MHz	
Mono Usable Sensitivity (75 ohms Input, 98 MHz)	≤13.5 dbf	≤19.2 dbf
Image Rejection (at 98 MHz)		
USA/Canada	>50 dB	≥40 dB
Europe	≥70 dB	≥60 dB
IF Rejection (at 98 MHz)	≥70 dB	≥65 dB
50 dB Quieting Sensitivity (at 98 MHz, 100% MOD.)		
IHF Band Pass Filter		
Stereo	≤39.2 dbf	≤43.3 dbf
Distortion (1 kHz, 100% MOD. at 98 MHz, 65dbf Input)		
IHF Band Pass Filter		
Mono	≤0.2%	≤0.5%
S/N Ratio (500 μV Input, 100% MOD. at 98 MHz)		
IHF Band Pass Filter		
Stereo	≥68 dB	≥63 dB
Frequency Response (30 Hz - 15 kHz)		
USA/Canada De-Emphasis: 75μS	+0.5 dB	+1.0 dB
Europe De-Emphasis: 50μS	-2.0 dB	-4.0 dB
AM Suppression at 98 MHz		
	≥55 dB	≥45 dB
Muting Threshold (at 98 MHz)	27.2 dbf	23.3-32.0dbf
Overload Break-up at 98 MHz	71 dbf	65 dbf
Capture Ratio at 65 dbf	≤1.5 dB	≤2.5 dB
Stereo Separation (at 98 MHz, 100% MOD., 500 μV Input)		
IHF Band Pass Filter		
1 kHz	≥40 dB	≥30 dB
Tape out Level (at 98 MHz)	800 mV	600-1300 mV

AM SECTION

	Nominal	Limit
Tuning Cover Range (MW)		
USA/Canada : 10 kHz Step	520 - 1710 kHz	
Other : 9 kHz Step	531 - 1602 kHz	
Tuning Cover Range (LW)		
1 kHz Step	152 kHz - 282 kHz	
Usable Sensitivity		
MW at 999/1000 kHz	≤500 μV/m	≤800 μV/m
LW at 207 kHz	≤1500 μV/m	≤2000 μV/m
Image Rejection (at 999 kHz)	≥40 dB	≥35 dB
IF Rejection (at 999/1000 kHz)	≥60 dB	≥50 dB
Spurious Rejection (at 999/1000 kHz)	≥65 dB	≥55 dB
AGC Figure of Merit (From 100 mV/m at 999/1000 kHz)	≥55 dB	≥48 dB
Distortion (999/1000 Hz, 30% MOD. 50 mV/m Input)	≤1.0%	≤2.0%
Frequency Response (999/1000 kHz)		
at -3 dB	100 Hz - 2.2 kHz	150 Hz - 1.8 kHz
Selectivity (at 999/1000 Hz)		
9 kHz/10 kHz	≥30 dB	≥20 dB
18 kHz/20kHz	≥70 dB	≥60 dB
S/N Ratio (999/1000 kHz, With Antenna Input 50 mV/m)		
(Europe : Using 15 kHz L.P.F.)	≥50 dB	≥45 dB
Overload Break-up at 999/1000 kHz (THD 10%)	≥1000 mV/m	≥500 mV/m
TAPE Output Level at 999/1000 kHz (5 mV/m Input)	240 mV	150-340 mV

GENERAL

	Nominal	Limit
Power Consumption		
At Rated Power 2 Channel Driven	300 W	250 - 350 W
Idling at Minimum Volume Control	45 W	35 - 65 W
Power Supplies :		
USA/Canada	AC 120 V, 60 Hz	
Europe	AC 230 V, 50 Hz	
Dimensions (W x H x D) :		
inches	17 1/16 x 6 3/32 x 18 1/16	
mm	444 x 160 x 459	
Weight (lbs/kgs)	27.8/12.5	

These specifications are service target specs.

Specifications and components are subject to change without notice.

Overall performance will be maintained or improved.

ELECTROSTATICALLY SENSITIVE (ES) DEVICES

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static electricity.



1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charge sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material.)
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together or your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

PRODUCT SAFETY NOTICE

Each precaution in this manual should be followed during servicing.

Components identified with the IEC symbol  in the parts list are of special significance to safety. When replacing a component identified with , use only the replacement parts designated, or parts with the same ratings or resistance, wattage, or voltage that are designated in the parts list in this manual.


Leakage - current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before returning the product to the customer.

LEAKAGE TEST (FOR SERVICE ENGINEERS IN THE U.S.A.)

Before returning the unit to the user, perform the following safety checks:


1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the unit.
2. Be sure that any protective devices such as nonmetallic control knobs, insulating fishpapers, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators, etc. Which were removed for servicing are properly reinstalled.
3. Be sure that no shock hazard exists; check for leakage current using Simpson Model 229 Leakage Tester, standard equipment item No. 21641, RCA Model WT540A or use alternate method as follows: Plug the power cord directly into a 120-volt AC receptacle (do not use an Isolation Transformer for this test). Using two clip leads, connect a 1500 Ohm, 10-watt resistor paralleled by a 0.15 μ F capacitor, in series with all exposed metal cabinet parts and a known earth ground, such as a water pipe or conduit. Use a VTVM or VOM with 1000 Ohms per volt, or higher sensitivity to measure the AC voltage drop across the resistor. (See Diagram.) Move the resistor connection to each exposed metal part having a return path to the chassis (antenna, metal, cabinet, screw heads, knobs and control shafts, escutcheon, etc.) and measure the AC voltage drop across the resistor. (This test should be performed with the power switch in both the On and Off positions.)

A reading of 0.35 volt RMS or more is excessive and indicates a potential shock hazard which must be corrected before returning the unit to the owner.

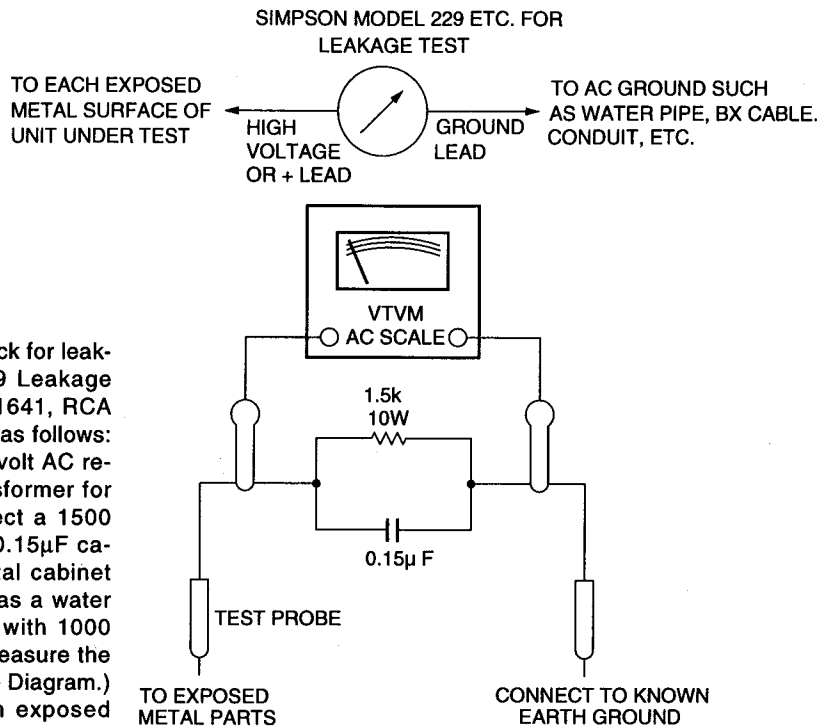

CONTROL AND FUNCTIONS

Front Panel

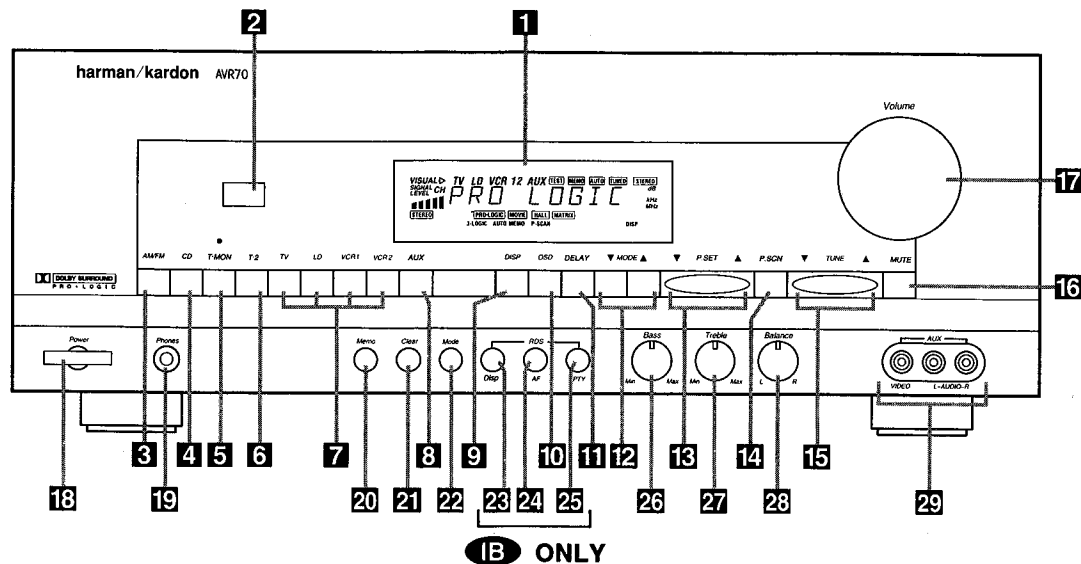

1 Information Display: This display delivers messages and status indications to help you operate the receiver. Refer to the separate diagram for a complete explanation of the FL display.

2 Remote Sensor Window: The sensor behind this window receives infrared signals from the remote control. Aim the remote at this area and do not block or cover it unless an external remote sensor is installed.

3 AM/FM Tuner Mode Selection: Press this button once to select the tuner. Press it again to switch between FM, MW and LW.

4 CD: Press this button to select the CD player.

5 Tape1/Monitor: Press this button to select Tape One as the input source. A red LED above the button will illuminate to indicate that the Tape Monitor has been selected.

6 Tape 2: Press this button to select Tape 2.

7 Video Sources: Press any of these buttons to select a video input source.

8 Aux: Press this button to select the source connected to the front panel Aux jacks.

9 Display: Press this button to turn off the front panel FL display. The DISP indicator will illuminate to remind you that the unit is still turned on.

10 OSD (On Screen Display): Press the button briefly to display a system status report on your video screen. Press and hold to change the video standard.

11 Delay: Press this button to increase the delay to the rear (surround) channels.

12 Mode: Press these buttons to scroll up ▲ or down ▼ through the list of available surround modes.

13 P-Set: Press these buttons to manually scroll up ▲ or down ▼ through the FM, LW or AM stations programmed into the receiver's preset memory.

14 P-Scan: Press this button to automatically scan through the FM or AM stations preset into the receiver's memory. Press the button again to stop the scan when the tuner is at the desired station.

15 Tune: Press these buttons to manually scan up ▲ or down ▼ through the FM or AM bands.

16 Mute: Press this button to cut the output to the speakers. Press it again to return to the previous volume level.

17 Volume Control: Turn the knob clockwise to increase volume, counterclockwise to decrease the volume. Note that approximately two revolutions of the knob are required to go from no output to maximum volume.

18 Power: press this button once to turn the unit on or off. In order to use the remote control to turn the unit on the power switch must be pressed once, and then the unit must be turned off via the remote. The LED indicator light surrounding the power switch will glow amber when the unit is in the Standby mode and green when the unit is on.

19 Headphone Jack: Plug standard stereo headphones into this jack for private listening.

NOTE: When the headphones are in use the output to the speakers is muted and the surround mode is automatically switched to STEREO. When the headphones are removed from the jack, sound to the speakers is restored and the unit returns to the previous sound mode.

20 Memo: The memo button is used to enter stations to the tuner's preset memory in either the manual or automatic modes. It is also used in clearing the memory and entering the sleep timer period.

21 Clear: The clear button is used to cancel tuning, memory input or when clearing the unit's memories.

22 FM Mode: Press this button to select the tuning mode for FM stations.

23 RDS Display: When a station transmitting RDS data is tuned, press this button to view the tuning frequency.

24 RDS AF: The button is used to search for stations transmitting a specific programme type that offers better reception than the currently tuned station.

25 RDS PTY: Press this button to view the programme type (PTY) when an RDS station is tuned. It is also used to initiate a search for RDS stations transmitting a specific programme type.


26 Bass: This knob adjusts the tone of low frequency sounds. Turn it to the right to boost bass frequencies or to the left to cut bass frequencies.

27 Treble: This knob adjusts the tone of high frequency sounds. Turn it to the right to boost high frequencies or to the left to cut high frequencies.

28 Balance: This knob adjusts the balance between the front left and right speakers.

29 Front Panel Inputs: Audio or Video sources connected to these jacks may be selected by pressing the Aux button 8.

Remote Control

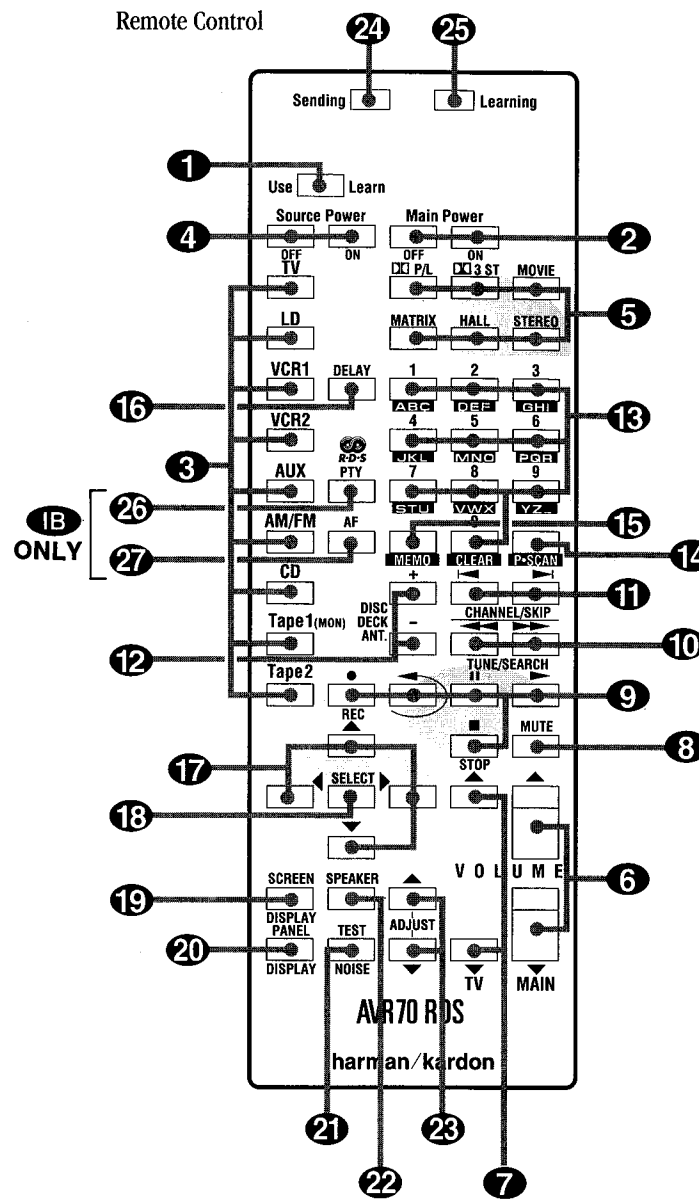

1 Use/Learn: This switch selects the operation mode of the remote control. Slide it to the left for normal operation. Slide it to the right when the remote is being programmed.

2 Main Power: Press these buttons to turn the unit on or off.

3 Source Selection: Pressing one of these buttons selects the input source that will be listened to through the receiver. When a source is selected the remote's transport and numeric number buttons will also transmit the commands needed to control that machine.

4 Source Power: Press these buttons to control power for the last source device selected.

5 Surround Mode Selection: Press one of these buttons to select a surround mode for the current listening session.

6 Main Volume: These buttons control the unit's volume. Note that all channels are controlled simultaneously.

7 TV Volume: These buttons adjust the volume for TV using the remote control codes programmed into the remote for a TV set or cable box. These buttons control the TV set only, regardless of which source is selected. This enables you to control the audio level of a TV set even when the receiver is not in use.

8 Mute: Press this button to temporarily cut the audio output of the receiver. Press it again to return to the previous volume level.

9 Transport Controls: These buttons control the tape or disc motion of the last playback source selected with the Source Selection buttons 3. Use them as you would the Play, Stop, Pause, Reverse Play and Record buttons on any VCR, CD or LD remote control.

10 Tune/Search & Fast Forward: (These buttons have multiple functions, which vary according to the input device selected.)

a. When the TUNER has been selected, these buttons are used to manually tune stations.

b. When CD, LD or VCR is the input source, these buttons act as the Fast Scan Forward or Fast Scan Reverse controls.

11 Channel/Skip: (These buttons have multiple functions, which vary according to the input device selected.)

a. When the TUNER has been selected, these buttons will scroll up or down through the stations that have been programmed in the preset memory.

b. When TV or VCR is selected, they are the channel up or channel down tuning buttons.

c. When CD or LD is selected these buttons act as forward and reverse "Skip" buttons to move to the next track or chapter on the disc.

d. When a compatible Harman Kardon cassette player has been selected as Tape 1 or Tape 2, these buttons move the tape forward or backwards to the next selection using the Music Scan feature.

12 Disc/Deck/Ant: (These buttons have multiple functions, which vary according to the input device selected.)

a. When CD is selected and the unit is a CD changer, these buttons will change to the next disc + or previous disc -.

b. When Tape 1 or Tape 2 is the input source, and the tape machine is a compatible Harman Kardon dual cassette deck, these buttons will switch between the "A" and "B" sides.

c. When VCR 1 or VCR 2 is the input source, these buttons switch between VCR and TV as the unit's output.

d. When TV is the input source, these buttons may switch between video input sources or antenna/video, depending on the TV model.

e. When LD is the input source, these buttons will switch the side being played from "A" to "B" on compatible dual side players.

13 Number Keys: These buttons serve as a ten button numeric keypad to enter tuner preset positions. They are also to be used to select channel numbers when TV has been selected on the remote, or to select track numbers on a CD or LD player, depending on how the remote has been programmed. The letters below the buttons are used to enter information for tuner station names.

NOTE: The 0 button has a dual function. It also serves as the CLEAR button for use in programming the tuner or clearing the system memory.

14 P-Scan: Press this button to automatically scan through the stations preset into the tuner memory. Press the button again to end the scan when the tuner stops at the desired station.

15 Memo: The memo button is used to enter stations to the tuner's preset memory in either the manual or automatic modes. It is also used in the process of clearing the memory.

16 Delay: This button controls the amount of sound delay to the rear (surround) channels. Press it to increase the delay in the steps shown in the main Information Display or on-screen graphics.

17 Menu Controls: These buttons control the action of the cursor or the selection of menu items when the receiver is being configured using the setup menus.

18 Select: This button enters settings to the receiver's memory during system configuration.

19 Screen Display: Press this button to activate the on screen menu system.

20 Panel Display: Press this button to turn off all displays and indicators in the Information Display except for a small DISP indication in the lower right corner of the display. Press the button again to turn the display back on. Note that the display will briefly illuminate when a command is sent to the unit from the front panel or remote, even though the display is turned off.

21 Test Noise: Press this button to begin calibration of the output level for each channel. A test signal will immediately be heard from the left front speaker and the TEST indicator 2 will flash.

22 Speaker Select: When setting the system output levels, this button selects the speaker position being adjusted. Press it once to advance to the next speaker after each position is adjusted.

23 Level Adjust: When setting the system output levels, press these buttons to increase or decrease the output level.

24 Sending LED: This indicator should flash any time a button is pressed to confirm that a command is being sent to the receiver or another unit. If the light is dim or does not illuminate when a button is pressed the batteries in the remote should be replaced.


25 Learn LED: This indicator will illuminate when a button on the remote is being programmed with signals from another remote during the "learning" mode. The light will go out when the signal is received and memorized.

26 RDS PTY: Press this button to view the Programme Type information for stations transmitting RDS data. This button is also used for PTY Auto Search functions.

27 RDS AF: This button initiates a search of all RDS stations to find a stronger signal for the programme type currently selected.

CONTROL AND FUNCTIONS

Front Panel

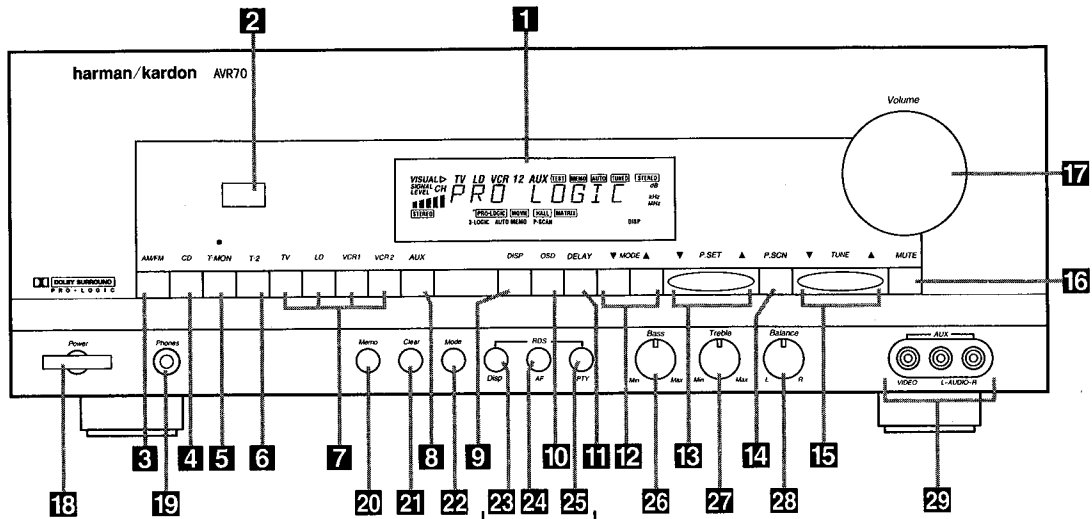

IB ONLY

1 Information Display: This display delivers messages and status indications to help you operate the receiver. Refer to the separate diagram for a complete explanation of the FL display.

2 Remote Sensor Window: The sensor behind this window receives infrared signals from the remote control. Aim the remote at this area and do not block or cover it unless an external remote sensor is installed.

3 AM/FM Tuner Mode Selection: Press this button once to select the tuner. Press it again to switch between FM, MW and LW.

4 CD: Press this button to select the CD player.

5 Tape1/Monitor: Press this button to select Tape One as the input source. A red LED above the button will illuminate to indicate that the Tape Monitor has been selected.

6 Tape 2: Press this button to select Tape 2.

7 Video Sources: Press any of these buttons to select a video input source.

8 Aux: Press this button to select the source connected to the front panel Aux jacks.

9 Display: Press this button to turn off the front panel FL display. The DISP indicator will illuminate to remind you that the unit is still turned on.

10 OSD (On Screen Display): Press the button briefly to display a system status report on your video screen. Press and hold to change the video standard.

11 Delay: Press this button to increase the delay to the rear (surround) channels.

12 Mode: Press these buttons to scroll up ▲ or down ▼ through the list of available surround modes.

13 P-Set: Press these buttons to manually scroll up ▲ or down ▼ through the FM, LW or AM stations programmed into the receiver's preset memory.

14 P-Scan: Press this button to automatically scan through the FM or AM stations preset into the receiver's memory. Press the button again to stop the scan when the tuner is at the desired station.

15 Tune: Press these buttons to manually scan up ▲ or down ▼ through the FM or AM bands.

16 Mute: Press this button to cut the output to the speakers. Press it again to return to the previous volume level.

17 Volume Control: Turn the knob clockwise to increase volume, counterclockwise to decrease the volume. Note that approximately two revolutions of the knob are required to go from no output to maximum volume.

18 Power: press this button once to turn the unit on or off. In order to use the remote control to turn the unit on the power switch must be pressed once, and then the unit must be turned off via the remote. The LED indicator light surrounding the power switch will glow amber when the unit is in the Standby mode and green when the unit is on.

19 Headphone Jack: Plug standard stereo headphones into this jack for private listening.

NOTE: When the headphones are in use the output to the speakers is muted and the surround mode is automatically switched to STEREO. When the headphones are removed from the jack, sound to the speakers is restored and the unit returns to the previous sound mode.

20 Memo: The memo button is used to enter stations to the tuner's preset memory in either the manual or automatic modes. It is also used in clearing the memory and entering the sleep timer period.

21 Clear: The clear button is used to cancel tuning, memory input or when clearing the unit's memories.

22 FM Mode: Press this button to select the tuning mode for FM stations.

23 RDS Display: When a station transmitting RDS data is tuned, press this button to view the tuning frequency.

24 RDS AF: The button is used to search for stations transmitting a specific programme type that offers better reception than the currently tuned station.

25 RDS PTY: Press this button to view the programme type (PTY) when an RDS station is tuned. It is also used to initiate a search for RDS stations transmitting a specific programme type.

26 Bass: This knob adjusts the tone of low frequency sounds. Turn it to the right to boost bass frequencies or to the left to cut bass frequencies.

27 Treble: This knob adjusts the tone of high frequency sounds. Turn it to the right to boost high frequencies or to the left to cut high frequencies.

28 Balance: This knob adjusts the balance between the front left and right speakers.

29 Front Panel Inputs: Audio or Video sources connected to these jacks may be selected by pressing the Aux button 8.

IB ONLY

1 Use/Le
of these bu
source tha
through th
is selected
and numer
also transr
to control t

2 Main F
buttons to


3 Source
of these bu
source tha
through th
is selected
and numer
also transr
to control t

4 Source
tons to cor
source dev

5 Surrou
Press one
a surround
tening ses

6 Main V
control the
all channe
neously.

Remote Control

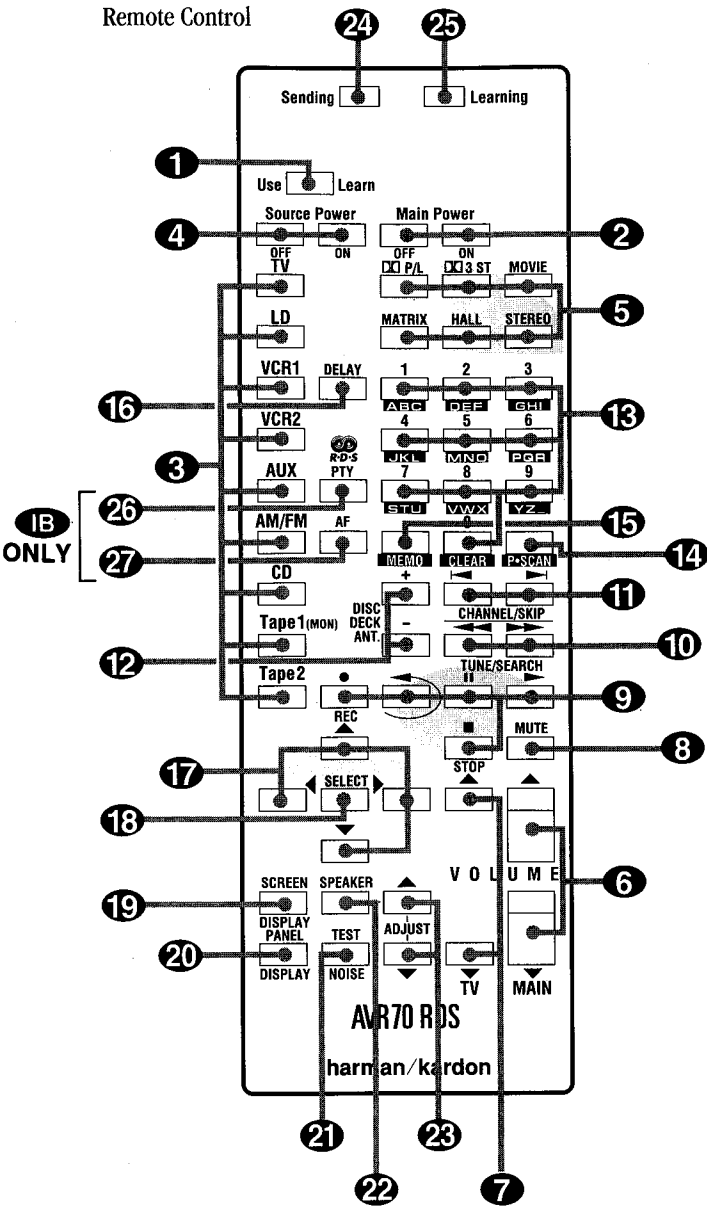

- 1 Use/Learn:** This switch selects the operation mode of the remote control. Slide it to the left for normal operation. Slide it to the right when the remote is being programmed.
- 2 Main Power:** Press these buttons to turn the unit on or off.
- 3 Source Selection:** Pressing one of these buttons selects the input source that will be listened to through the receiver. When a source is selected the remote's transport and numeric number buttons will also transmit the commands needed to control that machine.
- 4 Source Power:** Press these buttons to control power for the last source device selected.
- 5 Surround Mode Selection:** Press one of these buttons to select a surround mode for the current listening session.
- 6 Main Volume:** These buttons control the unit's volume. Note that all channels are controlled simultaneously.


- 7 TV Volume:** These buttons adjust the volume for TV using the remote control codes programmed into the remote for a TV set or cable box. These buttons control the TV set only, regardless of which source is selected. This enables you to control the audio level of a TV set even when the receiver is not in use.
- 8 Mute:** Press this button to temporarily cut the audio output of the receiver. Press it again to return to the previous volume level.
- 9 Transport Controls:** These buttons control the tape or disc motion of the last playback source selected with the Source Selection buttons (3). Use them as you would the Play, Stop, Pause, Reverse Play and Record buttons on any VCR, CD or LD remote control.
- 10 Tune/Search & Fast Forward:** (These buttons have multiple functions, which vary according to the input device selected.)
 - a. When the **TUNER** has been selected, these buttons are used to manually tune stations.

- b. When **CD, LD** or **VCR** is the input source, these buttons act as the Fast Scan Forward $\blacktriangleright\blacktriangleright$ or Fast Scan Reverse $\blacktriangleleft\blacktriangleleft$ controls.
- 11 Channel/Skip:** (These buttons have multiple functions, which vary according to the input device selected.)
 - a. When the **TUNER** has been selected, these buttons will scroll up \blacktriangleright or down \blacktriangleleft through the stations that have been programmed in the preset memory.
 - b. When **TV** or **VCR** is selected, they are the channel up \blacktriangleright or channel down \blacktriangleleft tuning buttons.
 - c. When **CD** or **LD** is selected these buttons act as forward and reverse "Skip" buttons to move to the next track or chapter on the disc.
 - d. When a compatible Harman Kardon cassette player has been selected as **Tape 1** or **Tape 2**, these buttons move the tape forward \blacktriangleright or backwards \blacktriangleleft to the next selection using the Music Scan feature.
- 12 Disc/Deck/Ant:** (These buttons have multiple functions, which vary according to the input device selected.)
 - a. When **CD** is selected and the unit is a CD changer, these buttons will change to the next disc $+$ or previous disc $-$.
 - b. When **Tape 1** or **Tape 2** is the input source, and the tape machine is a compatible Harman Kardon dual cassette deck, these buttons will switch between the "A" and "B" sides.
 - c. When **VCR 1** or **VCR 2** is the input source, these buttons switch between VCR and TV as the unit's output.
 - d. When **TV** is the input source, these buttons may switch between video input sources or antenna/video, depending on the TV model.
 - e. When **LD** is the input source, these buttons will switch the side being played from "A" to "B" on compatible dual side players.
- 13 Number Keys:** These buttons serve as a ten button numeric keypad to enter tuner preset positions. They are also to be used to select channel numbers when **TV** has been selected on the remote, or to select track numbers on a CD or LD player, has been programmed. The letters below the buttons are used to enter information for tuner station names.
- 14 P-Scan:** Press this button to automatically scan through the stations preset into the tuner memory. Press the button again to end the scan when the tuner stops at the desired station.

- 15 Memo:** The memo button is used to enter stations to the tuner's preset memory in either the manual or automatic modes. It is also used in the process of clearing the memory.
- 16 Delay:** This button controls the amount of sound delay to the rear (surround) channels. Press it to increase the delay in the steps shown in the main Information Display or on-screen graphics.
- 17 Menu Controls:** These buttons control the action of the cursor or the selection of menu items when the receiver is being configured using the setup menus.
- 18 Select:** This button enters settings to the receiver's memory during system configuration.
- 19 Screen Display:** Press this button to activate the on screen menu system.
- 20 Panel Display:** Press this button to turn off all displays and indicators in the Information Display except for a small **D I S P** indication in the lower right corner of the display (12). Press the button again to turn the display back on. Note that the display will briefly illuminate when a command is sent to the unit from the front panel or remote, even though the display is turned off.
- 21 Test Noise:** Press this button to begin calibration of the output level for each channel. A test signal will immediately be heard from the left front speaker and the **TEST** indicator (2) will flash.
- 22 Speaker Select:** When setting the system output levels, this button selects the speaker position being adjusted. Press it once to advance to the next speaker after each position is adjusted.
- 23 Level Adjust:** When setting the system output levels, press these buttons to increase or decrease the output level.
- 24 Sending LED:** This indicator should flash any time a button is pressed to confirm that a command is being sent to the receiver or another unit. If the light is dim or does not illuminate when a button is pressed the batteries in the remote should be replaced.
- 25 Learn LED:** This indicator will illuminate when a button on the remote is being programmed with signals from another remote during the "learning" mode. The light will go out when the signal is received and memorized.
- 26 RDS PTY:** Press this button to view the Programme Type information for stations transmitting RDS data. This button is also used for PTY Auto Search functions.
- 27 RDS AF:** This button initiates a search of all RDS stations to find a stronger signal for the programme type currently selected.

NOTE: The **0** button has a dual function. It also serves as the **CLEAR** button for use in programming the tuner or clearing the system memory.

Rear Panel – Audio and System Connections

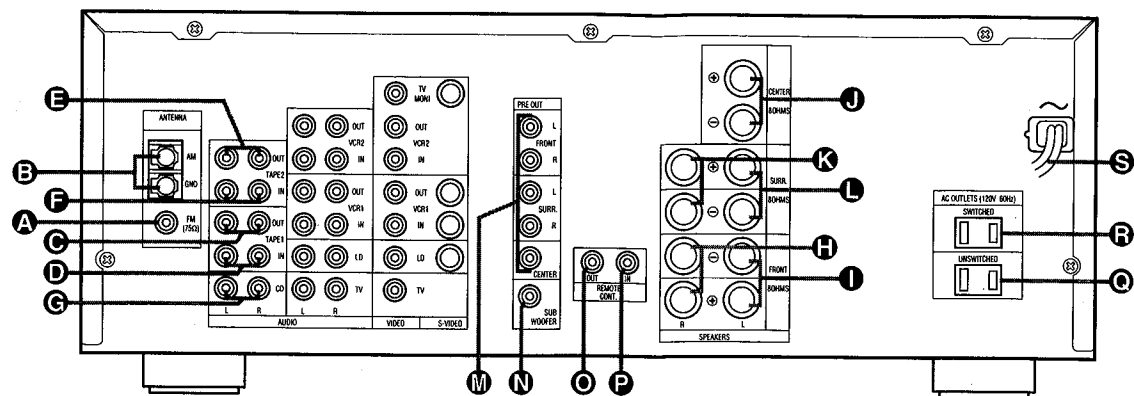

A FM Antenna: Connect an indoor or external FM antenna to these terminals.

B AM Antenna: Connect the AM loop antenna supplied with the receiver to these terminals. If an external AM antenna is used, make connections to the **AM** and **GND** terminals in accordance with the instructions supplied with the antenna.

C Tape 1 Out: Connect these jacks to the RECORD/INPUT jacks of an audio recorder.

D Tape 1 In: Connect these jacks to the PLAY/OUT jacks of an audio recorder.

E Tape 2 Out: Connect these jacks to the RECORD/INPUT jacks of a second audio recorder.

F Tape 2 In: Connect these jacks to the PLAY/OUT jacks of a second audio recorder.

G CD IN: Connect these jacks to the output of a compact disc player or CD changer.

H Front R: Connect these terminals to the front right speaker.

I Front L: Connect these terminals to the front left speaker.

J Center: Connect these terminals to the center speaker.

K Surround R: Connect these terminals to the right surround speaker.

L Surround L: Connect these terminals to the left surround speaker.

M Pre-Outs: If external power amplifiers are used for any channels, connect these jacks to the inputs of the amplifier.

N Subwoofer Pre-Out: Connect this jack to the line level input of a powered subwoofer. If an external subwoofer amplifier is used, connect this jack to the subwoofer amplifier input.

O Remote IR Out: This connection permits the IR sensor in the receiver to serve other remote controlled devices. Connect this jack to the "IR IN" jack on Harman Kardon or other compatible equipment.


P Remote IR In: If the AVR70's front panel IR sensor is blocked due to cabinet doors or other obstructions, an external IR sensor may be used. Connect the output of the sensor to this jack.

R Unswitched AC Outlet: This outlet may be used to power any AC device. The power will remain on at this outlet regardless of whether the AVR70 is on or off.


S Switched AC Outlet: This outlet may be used to power any device that you wish to have on when the unit is turned on.

NOTE: The power consumption of the device plugged into each of these outlets should not exceed 120 watts.

S Power Cable: Connect the AC plug to a non-switched AC wall output.

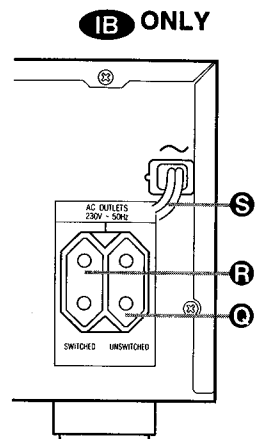

Rear Panel – Video Connections

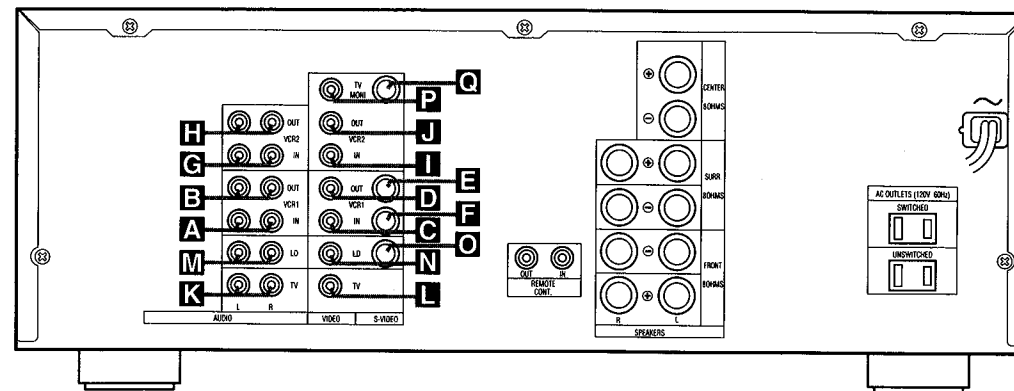

A VCR 1 Audio In: Connect these jacks to the audio PLAY/OUT jacks of a VCR.

B VCR 1 Audio Out: Connect these jacks to the RECORD/IN audio jacks of a VCR.

C VCR 1 Video In: Connect this jack to the composite video PLAY/OUT jacks of a VCR.

D VCR 1 Video Out: Connect this jack to the composite video RECORD/IN jacks of a VCR.

E VCR 1 S Video Out: Connect this jack to the "S" video RECORD/IN jacks of a VCR.

F VCR 1 S Video In: Connect this jack to the "S" video RECORD/IN jacks of a VCR.

G VCR 2 Audio In: Connect these jacks to the audio jacks PLAY/OUT of a second VCR.

H VCR 2 Audio Out: Connect these jacks to the audio RECORD/IN jacks of a second VCR.

I VCR 2 Video In: Connect this jack to the composite video PLAY/OUT jacks of a second VCR.

J VCR 2 Video Out: Connect this jack to the composite video RECORD/IN jacks of a second VCR.

K TV Audio In: Connect the audio outputs of a TV, cable converter or satellite receiver to these jacks.

L TV Video In: Connect the composite video output of a TV, cable converter or satellite receiver to this jack. The signals received at this jack are also used to trigger the "TV Auto-On" feature.

M LD Audio In: Connect the audio output of a laser disc player to these jacks.


N LD Video In: Connect the composite video output of a laser disc player to this jack.

O LD S Video In: Connect the "S" video output of a laser disc player to this jack.

P TV Monitor Video Out: Connect this jack to the composite video input of a TV monitor or video projector to view the on screen control menus and output of the receiver's video switcher.

Q TV Monitor S Video Out: Connect this jack to the S video input of a TV monitor or video projector to view S video sources selected by the receiver's video switcher.

Information Display

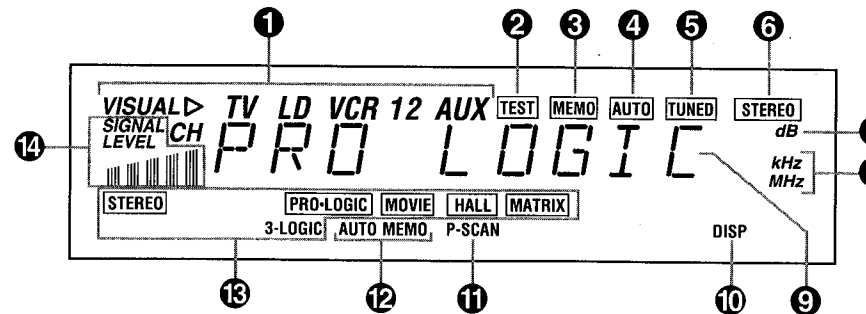

1 "Visual" Indicator: These indicators display which input source is being fed to the video monitor output.

2 Test: This indicator flashes when the output levels are being set using the built in test signal generator.

3 Memo: This indicator flashes when the **Memo** button is pressed when entering presets and other information into the tuner's memory.

4 Auto: This indicator signifies that the Automatic Tuning mode is in use for FM broadcasts.

5 Tuned: This indicator lights when an AM or FM station is properly tuned and locked.

6 Stereo: This indicator lights when an FM station is broadcasting in stereo.

7 Volume Indication: The last two indicators on the information display indicate the volume level. Note that **0dB** is the reference level, not an indication that there is no output.

8 Tuner Frequency Indication: When the tuner is in use, the main Information Display will show the preset channel number, if any, the frequency band and the station frequency. Indicators at the right side of the display show **kHz** when an LW or MW station is tuned or **MHz** when an FM station is tuned.

9 Main Information Display: This ten digit display shows messages relating to the status, input source, surround mode, tuner, volume level or other aspects of the unit's operation.

10 DISP: This indicator lights when the FL display has been turned off using the **Display** button **10** to remind you that the unit is still turned on.


11 P-Scan: This indicator flashes when the stations programmed into the tuner memory are being automatically reviewed.

12 Auto Memo: This indicator flashes when the tuner is automatically scanning for stations and entering them into the preset memory.

13 Mode Status: These indicators display the currently selected surround mode.

14 Signal Level Indication: This is a visual indication of the strength of a radio station signal. The more bars visible, the stronger the station.

Rear Panel – Audio and System Connections

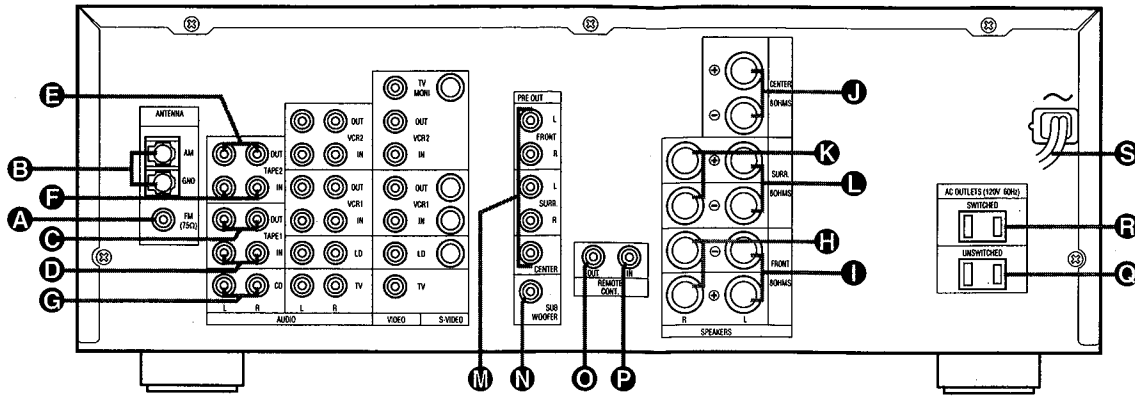

A FM Antenna: Connect an indoor or external FM antenna to these terminals.

B AM Antenna: Connect the AM loop antenna supplied with the receiver to these terminals. If an external AM antenna is used, make connections to the **AM** and **GND** terminals in accordance with the instructions supplied with the antenna.

C Tape 1 Out: Connect these jacks to the RECORD/INPUT jacks of an audio recorder.

D Tape 1 In: Connect these jacks to the PLAY/OUT jacks of an audio recorder.

E Tape 2 Out: Connect these jacks to the RECORD/INPUT jacks of a second audio recorder.

F Tape 2 In: Connect these jacks to the PLAY/OUT jacks of a second audio recorder.

G CD IN: Connect these jacks to the output of a compact disc player or CD changer.

H Front R: Connect these terminals to the front right speaker.

I Front L: Connect these terminals to the front left speaker.

J Center: Connect these terminals to the center speaker.

K Surround R: Connect these terminals to the right surround speaker.

L Surround L: Connect these terminals to the left surround speaker.

M Pre-Outs: If external power amplifiers are used for any channels, connect these jacks to the inputs of the amplifier.

N Subwoofer Pre-Out: Connect this jack to the line level input of a powered subwoofer. If an external subwoofer amplifier is used, connect this jack to the subwoofer amplifier input.

O Remote IR Out: This connection permits the IR sensor in the receiver to serve other remote controlled devices. Connect this jack to the "IR IN" jack on Harman Kardon or other compatible equipment.

P Remote IR In: If the AVR70's front panel IR sensor is blocked due to cabinet doors or other obstructions, an external IR sensor may be used. Connect the output of the sensor to this jack.


Q Unswitched AC Outlet: This outlet may be used to power any AC device. The power will remain on at this outlet regardless of whether the AVR70 is on or off.

R Switched AC Outlet: This outlet may be used to power any device that you wish to have on when the unit is turned on.

NOTE: The power consumption of the device plugged into each of these outlets should not exceed 120 watts.

S Power Cable: Connect the AC plug to a non-switched AC wall output.

1B ONLY

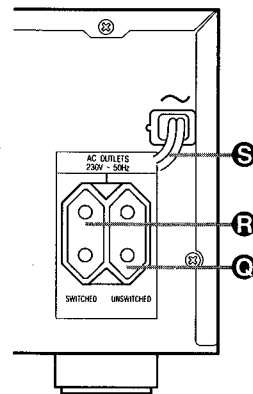

1 "Visual" Indicators: This indicator displays which channel is being fed to the video output.


2 Test: This indicator shows the output levels and the built-in test signal.

3 Memo: This indicator shows when the Memo button is pressed when entering preset information into the memory.

4 Auto: This indicator shows when the Automatic Tuning Memory Search for FM broadcasts is in progress.

5 Tuned: This indicator shows when an AM or FM station is tuned and locked.

Rear Panel – Video Connections

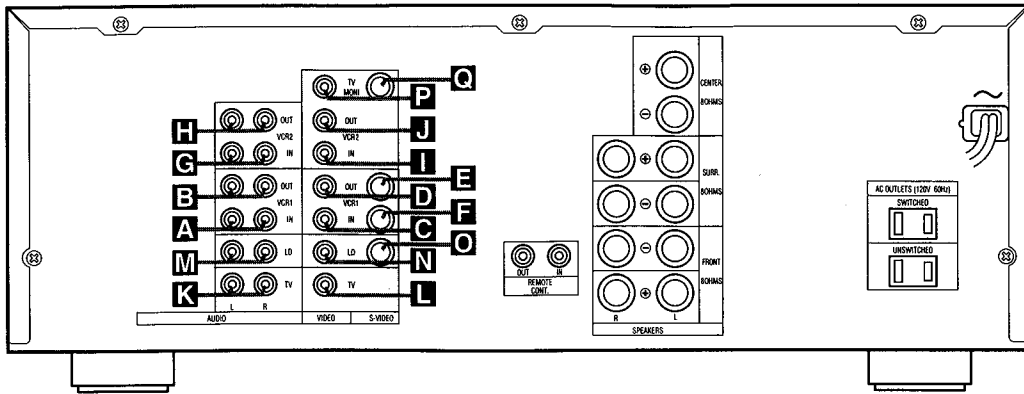

A VCR 1 Audio In: Connect these jacks to the audio PLAY/OUT jacks of a VCR.

B VCR 1 Audio Out: Connect these jacks to the RECORD/IN audio jacks of a VCR.

C VCR 1 Video In: Connect this jack to the composite video PLAY/OUT jacks of a VCR.

D VCR 1 Video Out: Connect this jack to the composite video RECORD/IN jacks of a VCR.

E VCR 1 S Video Out: Connect this jack to the "S" video RECORD/IN jacks of a VCR.

F VCR 1 S Video In: Connect this jack to the "S" video RECORD/IN jacks of a VCR.

G VCR 2 Audio In: Connect these jacks to the audio jacks PLAY/OUT of a second VCR.

H VCR 2 Audio Out: Connect these jacks to the audio RECORD/IN jacks of a second VCR.

I VCR 2 Video In: Connect this jack to the composite video PLAY/OUT jacks of a second VCR.

J VCR 2 Video Out: Connect this jack to the composite video RECORD/IN jacks of a second VCR.

K TV Audio In: Connect the audio outputs of a TV, cable converter or satellite receiver to these jacks.

L TV Video In: Connect the composite video output of a TV, cable converter or satellite receiver to this jack. The signals received at this jack are also used to trigger the "TV Auto-On" feature.

M LD Audio In: Connect the audio output of a laser disc player to these jacks.


N LD Video In: Connect the composite video output of a laser disc player to this jack.

O LD S Video In: Connect the "S" video output of a laser disc player to this jack.

P TV Monitor Video Out: Connect this jack to the composite video input of a TV monitor or video projector to view the on screen control menus and output of the receiver's video switcher.

Q TV Monitor S Video Out: Connect this jack to the S video input of a TV monitor or video projector to view S video sources selected by the receiver's video switcher.

Information Display

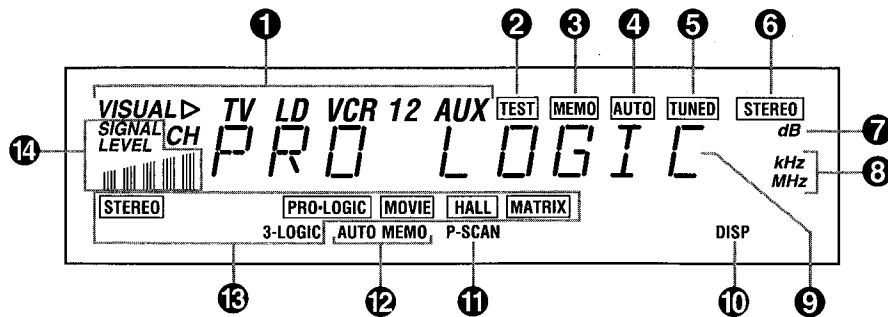

Visual Indicator: These indicators light up when an FM station is broadcasting in stereo.

Volume Indication: This indicator flashes when output levels are being set using the volume knob in test signal generator.

Auto Memo: This indicator flashes when the Memo button is pressed and the tuner is entering presets and other information into the tuner's memory.

P-Scan: This indicator signifies that the automatic Tuning mode is in use during broadcasts.

Stereo: This indicator lights when an FM station is properly tuned and locked.

6 Stereo: This indicator lights when an FM station is broadcasting in stereo.

7 Volume Indication: The last two indicators on the information display indicate the volume level. Note that 0dB is the reference level, not an indication that there is no output.

8 Tuner Frequency Indication: When the tuner is in use, the main Information Display will show the preset channel number, if any, the frequency band and the station frequency. Indicators at the right side of the display show kHz when an LW or MW station is tuned or MHz when an FM station is tuned.

9 Main Information Display: This ten digit display shows messages relating to the status, input source, surround mode, tuner, volume level or other aspects of the unit's operation.

10 DISP: This indicator lights when the FL display has been turned off using the Display button 10 to remind you that the unit is still turned on.

11 P-Scan: This indicator flashes when the stations programmed into the tuner memory are being automatically reviewed.

12 Auto Memo: This indicator flashes when the tuner is automatically scanning for stations and entering them into the preset memory.

13 Mode Status: These indicators display the currently selected surround mode.

14 Signal Level Indication: This is a visual indication of the strength of a radio station signal. The more bars visible, the stronger the station.

SERVICE PROCEDURE

1. Tracking point memory

This service procedure can be used for measurement of the tuner circuit. With the POWER ON, press the "PRESET UP" button while pressing the "MEMO" button for at least 3 seconds or more. FLD will display "TRACKING". Frequencies will be memorized as follows :

	VERSION	P1	P2	P3	P4
FM	BK IB	90.0	98.0	106.0	87.5

	SCAN STEP	P5	P6	P7	P8	P9	P10	P11	P12~ P30
MW	10 KHz	600.0	1000.0	1400.0	520.0	←	←	←	←
	9 KHz	603.0	999.0	1404.0	531.0	←	←	←	←
	LW	↑	↑	↑	171.0	207.0	270.0	152.0	531.0

2. FLD segment luminous

This service procedure will illuminate all segments by the following steps : With the POWER ON, press the "FM/AM(TUNER)" button while pressing the "MEMO" button for at least three seconds or more. This procedure takes 1 minute and 40 seconds to finish; at this point the procedure is complete.

- All segments will be illuminated for 5 seconds.
- At the grid "1G", segments are illuminated in the following order :

① KHz → ② MHz → ③ R → ④ PEAK → ⑤ L → ⑥ MULTI → ⑦ MONO → ⑧ MATRIX → ⑨ HALL → ⑩ P-SCAN → ⑪ TAPE → ⑫ COPY → ⑬ VCR1 → ⑭ SLEEP → ⑮ DISP → ⑯ TX

- At the grid "2G", to "11G", each one segment is illuminated individually.
- At the grid "12G", segments are illuminated in the following order :

① VISUAL → ② SIGNAL LEVEL → ③ CH → ④ SIGNAL BAR (LEFT SIDE) → ⑤ SIGNAL BAR (2nd LEFT) → ⑥ SIGNAL BAR (CENTER) → ⑦ SIGNAL BAR (2nd RIGHT) → ⑧ SIGNAL BAR (RIGHT SIDE) → ⑨ STEREO → ⑩ THX CINEMA → ⑪ PRO.LOGIC → ⑫ MOVIE → ⑬ AUTO MEMO → ⑭ 3.LOGIC → ⑮ SIMUL'D → ⑯ SURROUND

3. Selector check mode

This service program automatically operates input selector and surround mode by the following procedure. This service program continually repeats until power is shut off. When the POWER ON, press the "SURROUND MODE+" button while pressing the "MEMO" button 3 seconds or more.

STEP	INPUT SELECTOR	DSP MODE	FM MODE BAND	FREQUENCY	COPY SWITCH		NOTES
					TAPE	VCR1	
1	FM	STEREO	AUTO	98.0	SOURCE	SOURCE	
2	FM	STEREO	MONO	LAST	↑	↑	
3	CD	STEREO	AUTO	LAST	↑	↑	
4	TAPE1	P-LOGIC	AUTO	LAST	TUNER	SOURCE	TUNER-ON
5	TAPE2	MOVIE	AUTO	LAST	SOURCE	TV	
6	TV	3 CH	AUTO	LAST	↑	SOURCE	
7	TV	HALL	AUTO	LAST	CD	LD	
8	LD	MATRIX	AUTO	LAST	TAPE2	TV	
9	VCR1	MATRIX	AM/MW	1000/999	TUNER	VCR2	
10	VCR2	STEREO	AUTO	98.0	TUNER	SOURCE	TUNER-ON
11	AUX	STEREO	AUTO	LAST	SOURCE	AUX	

4. All clear

This service program can clear all memorized operations and functions. When the POWER ON, press the "CLEAR" button while pressing the "MEMO" button 3 seconds or more. FLD shows "CLEAR MEMO" and power will be OFF.

TEST EQUIPMENT REQUIRED

- AM/FM Signal Generator
- Video Signal Generator
- Digital Multimeter
- Distortion level meter

ALIGNMENT PROCEDURES

1. FM MONO. Distortion Adjustment

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to FM antenna terminal. (75 ohm)	98 MHz	500 uV/m (54 dB/m) MONO 1 KHz / Dev. 40KHz 53.3% IB MONO 1KHz / Dev. 75KHz 100% BK	98 MHz (P2)	L201	Distortion level Minimum at TAPE-OUT

2. FM Muting Level Adjustment

Turn variable resistor R212 and stop at position "TUNED" is not shown (not indicated), then again turn the variable resistor R212 to the opposite revolution and stop at a position "TUNED" is shown.

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to FM antenna terminal. (75 ohm)	98 MHz	10 uV/m (20 dB/m) MONO 1 KHz / Dev. 40KHz 53.3% IB MONO 1KHz / Dev. 75KHz 100% BK	98 MHz (P2)	R212	"TUNED" indicate on FLD
2			Over mentioned level +3 dB	AUTO SCAN	Only Confirm	"TUNED" indicate on FLD

3. FM STEREO Distortion Adjustment

Adjust the L channel with the RF signal modulated only L channel first and confirm the R channel with the RF signal modulated only R channel.

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to FM antenna terminal. (75 ohm)	98 MHz	500 uV/m (54 dB/m) L+R 1KHz / Dev. 40KHz 53.3% PILOT 19KHz / Dev. 6KHz 8% IB	98 MHz (P2)	IF COIL in FRONT END	Distortion level Minimum at TAPE-OUT
2			L+R 1KHz / Dev. 67.5KHz 90% PILOT 19KHz / Dev. 6.75KHz 9% BK		R218	Distortion level Minimum at TAPE-OUT

REMARK: Adjustment with R128 is not necessary when the distortion level is less than 0.5% with adjusting IF coil.

4. FM STEREO Separation Adjustment

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to FM antenna terminal. (75 ohm)	98 MHz	same specification as FM STEREO distortion adjustment. Input only L channel.	98 MHz (P2)	R211	Output level Minimum at TAPE-OUT channel R
2		98 MHz	same specification as FM STEREO distortion adjustment. Input only R channel.	98 MHz (P2)	R211	Output level Similar as Rch at TAPE-OUT channel L

SERVICE PROCEDURE

1. Tracking point memory

This service procedure can be used for measurement of the tuner circuit.

With the POWER ON, press the "PRESET UP" button while pressing the "MEMO" button for at least 3 seconds or more. FLD will display "TRACKING". Frequencies will be memorized as follows :

	VERSION	P1	P2	P3	P4
FM	6K 1B	90.0	98.0	106.0	87.5

	SCAN STEP	P5	P6	P7	P8	P9	P10	P11	P12~P30
MW	10 KHz	600.0	1000.0	1400.0	520.0	←	←	←	←
	9 KHz	603.0	999.0	1404.0	531.0	←	←	←	←
	LW	↑	↑	↑	171.0	207.0	270.0	152.0	531.0

2. FLD segment luminous

This service procedure will illuminate all segments by the following steps :

With the POWER ON, press the "FM/AM(TUNER)" button while pressing the "MEMO" button for at least three seconds or more. This procedure takes 1 minute and 40 seconds to finish; at this point the procedure is complete.

- All segments will be illuminated for 5 seconds.
- At the grid "1G", segments are illuminated in the following order :

① KHz → ② MHz → ③ R → ④ PEAK → ⑤ L → ⑥ MULTI → ⑦ MONO → ⑧ MATRIX →
⑨ HALL → ⑩ P-SCAN → ⑪ TAPE → ⑫ COPY → ⑬ VCR1 → ⑭ SLEEP → ⑮ DISP → ⑯ TX

- At the grid "2G", to "11G", each one segment is illuminated individually.

- At the grid "12G", segments are illuminated in the following order :

① VISUAL → ② SIGNAL LEVEL → ③ CH → ④ SIGNAL BAR (LEFT SIDE) →
⑤ SIGNAL BAR (2nd LEFT) → ⑥ SIGNAL BAR (CENTER) → ⑦ SIGNAL BAR (2nd RIGHT) →
⑧ SIGNAL BAR (RIGHT SIDE) → ⑨ STEREO → ⑩ THX CINEMA → ⑪ PRO.LOGIC →
⑫ MOVIE → ⑬ AUTO MEMO → ⑭ 3.LOGIC → ⑮ SIMUL'D → ⑯ SURROUND

3. Selector check mode

This service program automatically operates input selector and surround mode by the following procedure. This service program continually repeats until power is shut off.

When the POWER ON, press the "SURROUND MODE+" button while pressing the "MEMO" button 3 seconds or more.

STEP	INPUT SELECTOR	DSP MODE	FM MODE BAND	FREQUENCY	COPY SWITCH		NOTES
					TAPE	VCR1	
1	FM	STEREO	AUTO	98.0	SOURCE	SOURCE	
2	FM	STEREO	MONO	LAST	↑	↑	
3	CD	STEREO	AUTO	LAST	↑	↑	
4	TAPE1	P-LOGIC	AUTO	LAST	TUNER	SOURCE	TUNER-ON
5	TAPE2	MOVIE	AUTO	LAST	SOURCE	TV	
6	TV	3 CH	AUTO	LAST	↑	SOURCE	
7	TV	HALL	AUTO	LAST	CD	LD	
8	LD	MATRIX	AUTO	LAST	TAPE2	TV	
9	VCR1	MATRIX	AM/MW	1000/999	TUNER	VCR2	
10	VCR2	STEREO	AUTO	98.0	TUNER	SOURCE	TUNER-ON
11	AUX	STEREO	AUTO	LAST	SOURCE	AUX	

4. All clear

This service program can clear all memorized operations and functions.

When the POWER ON, press the "CLEAR" button while pressing the "MEMO" button 3 seconds or more. FLD shows "CLEAR MEMO" and power will be OFF.

TEST EQUIPMENT REQUIRED

- 1) AM/FM Signal Generator
- 2) Video Signal Generator
- 3) Digital Multimeter
- 4) Distortion level meter

ALIGNMENT PROCEDURES

1. FM MONO. Distortion Adjustment

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to FM antenna terminal. (75 ohm)	98 MHz	500 uV/m (54 dB/m) MONO 1 KHz / Dev.40KHz 53.3% IB MONO 1KHz / Dev. 75KHz 100% BK	98 MHz (P2)	L201	Distortion level Minimum at TAPE-OUT

2. FM Muting Level Adjustment

Turn variable resistor **R212** and stop at position "TUNED" is not shown (not indicated), then again turn the variable resistor **R212** to the opposite revolution and stop at a position "TUNED" is shown.

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to FM antenna terminal. (75 ohm)	98 MHz	10 uV/m (20 dB/m) MONO 1 KHz / Dev.40KHz 53.3% IB MONO 1KHz / Dev. 75KHz 100% BK	98 MHz (P2)	R212	"TUNED" indicate on FLD
2			Over mentioned level +3 dB	AUTO SCAN	Only Confirm	"TUNED" indicate on FLD

3. FM STEREO Distortion Adjustment

Adjust the **L channel** with the RF signal modulated only **L channel** first and confirm the **R channel** with the RF signal modulated only **R channel**.

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to FM antenna terminal. (75 ohm)	98 MHz	500 uV/m (54 dB/m) L+R 1KHz / Dev. 40KHz 53.3% PILOT 19KHz / Dev. 6KHz 8% IB	98 MHz (P2)	IF COIL in FRONT END	Distortion level Minimum at TAPE-OUT
2			L+R 1KHz / Dev. 67.5KHz 90% PILOT 19KHz / Dev. 6.75KHz 9% BK		R218	Distortion level Minimum at TAPE-OUT

REMARK: Adjustment with **R128** is not necessary when the distortion level is less than 0.5% with adjusting IF coil.

4. FM STEREO Separation Adjustment

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to FM antenna terminal. (75 ohm)	98 MHz	same specification as FM STEREO distortion adjustment. Input only L channel .	98 MHz (P2)	R211	Output level Minimum at TAPE-OUT channel R
2		98 MHz	same specification as FM STEREO distortion adjustment. Input only R channel .	98 MHz (P2)	R211	Output level Similar as Rch at TAPE-OUT channel L

5. AM IF Adjustment

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to transmission *loop antenna. (*:Standard required loop)	999 KHz IB 1000 KHz BK	300 uV/m (50 dB/m)	Tuning point	LA06	Output level (L or R) Maximum at TAPE-OUT

This adjustment is normally not necessary, because the coil LA06 is preset by the original supplier.

6. AM Tracking Adjustment (MW)

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to transmission *loop antenna. (*:Standard required loop)	603 KHz IB 600 KHz BK	Level 300 - 400 uV/m Mod. 400 Hz 30%	603 KHz IB 600 KHz BK	LA01	Output level (L or R) Maximum at TAPE-OUT
2		1404 KHz IB 1400 KHz BK		1404 KHz IB 1400 KHz BK		
3	Repeat step 1 and 2 until level is at maximum reading.					

7. AM Tracking Adjustment (LW)

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to transmission *loop antenna. (*:Standard required loop)	171 KHz	Level 300 - 400 uV/m Mod. 400 Hz 30%	171 KHz	LA03	Output level (L or R) Maximum at TAPE-OUT
2		270 KHz		270 KHz	CA08	Output level (L or R) Maximum at TAPE-OUT
3	Repeat step 1 and 2 until level is at maximum reading.					

8. AM auto stop Adjustment

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to transmission *loop antenna. (*:Standard required loop)	999 KHz IB 1000 KHz BK	500 uV/m (54 dB/m)	999 KHz IB 1000 KHz BK	RA11	"TUNED" indicate on FLD
2			1000 uV/m (60 dB/m)	AUTO SCAN	Only Confirm	"TUNED" indicate on FLD

REMARK: This adjustment is related to the FM muting Level Adjustment. The FM muting Level re-adjustment is necessary after this adjustment.

9. On Screen Display VCO Adjustment

Step	Input Signal Source and Connection	Measuring position	Measuring equipment	Input selector	Adjustment Point	Adjustment Value
1	Color bar or other standard video signal. Video signal generator output to LD video input.	IC QX60 26pin and GND.	DC voltmeter (Impedance > 10K ohm/V)	LD	CX67	2.5V +0.1V

REMARK: Connect the TV monitor to the monitor output terminal of the product.

10. Main amp idling current adjustment

- 1) With the power OFF, set semi – fixed resistor R743 (Lch), R744 (Rch), R786 (Center ch) on the PC board (PV04) to the center position.
- 2) Connect a digital voltmeter, set for the DC range, on the emitter resistor [R759 (Lch), R760 (Rch), R794 (Center ch)] on the PC board (PV04).
- 3) After the above, adjust the idling current as follows:
Turn the power ON and adjust semi – fixed resistor R743 (Lch), R744 (Rch), R786 (Center ch) while observing the digital multimeter indication.
The target value is 7.2 mV (20 mA).

All values are with no load on speaker terminals, volume set to minimum and no input with the unit switched to the CD position. Always allow the amplifier to stabilize for 10 minutes or longer prior to adjusting idle current.

11. Main amp DC offset adjustment

- 1) With the power OFF, connect a digital voltmeter, set for the DC range, to the speaker terminal.
- 2) After the above, adjust the DC offset as follows:
Turn the power ON and adjust RN63 (Lch), RN64 (Rch), RN70 (Center ch) so that the output is ±20 mV.

5. AM IF Adjustment

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to transmission *loop antenna. (*:Standard required loop)	999 KHz IB 1000 KHz BK	300 uV/m (50 dB/m)	Tuning point	LA06	Output level (L or R) Maximum at TAPE-OUT

This adjustment is normally not necessary, because the coil LA06 is preset by the original supplier.

6. AM Tracking Adjustment (MW)

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to transmission *loop antenna. (*:Standard required loop)	603 KHz IB 600 KHz BK	Level 300 - 400 uV/m Mod. 400 Hz 30%	603 KHz IB 600 KHz BK	LA01	Output level (L or R) Maximum at TAPE-OUT
2		1404 KHz IB 1400 KHz BK	Level 300 - 400 uV/m Mod. 400 Hz 30%	1404 KHz IB 1400 KHz BK	CA01	Output level (L or R) Maximum at TAPE-OUT
3	Repeat step 1 and 2 until level is at maximum reading.					

7. AM Tracking Adjustment (LW)

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to transmission *loop antenna. (*:Standard required loop)	171 KHz	Level 300 - 400 uV/m Mod. 400 Hz 30%	171 KHz	LA03	Output level (L or R) Maximum at TAPE-OUT
2		270 KHz	Level 300 - 400 uV/m Mod. 400 Hz 30%	270 KHz	CA08	Output level (L or R) Maximum at TAPE-OUT
3	Repeat step 1 and 2 until level is at maximum reading.					

8. AM auto stop Adjustment

Step	Input Signal Source Connection	Signal Frequency	Source Signal Output Level and Modulation	Reception Frequency	Adjustment Point	Adjustment Value
1	Signal generator output to transmission *loop antenna. (*:Standard required loop)	999 KHz IB 1000 KHz BK	500 uV/m (54 dB/m)	999 KHz IB 1000 KHz BK	RA11	"TUNED" indicate on FLD
2			1000 uV/m (60 dB/m)	AUTO SCAN	Only Confirm	"TUNED" indicate on FLD

REMARK: This adjustment is related to the FM muting Level Adjustment. The FM muting Level re-adjustment is necessary after this adjustment.

9. On Screen Display VCO Adjustment

Step	Input Signal Source and Connection	Measuring position	Measuring equipment	Input selector	Adjustment Point	Adjustment Value
1	Color bar or other standard video signal. Video signal generator output to LD video input.	IC QX60 26pin and GND.	DC voltmeter (Impedance > 10K ohm/V)	LD	CX67	2.5V +0.1V

REMARK: Connect the TV monitor to the monitor output terminal of the product.

10. Main amp idling current adjustment




- 1) With the power OFF, set semi – fixed resistor R743 (Lch), R744 (Rch), R786 (Center ch) on the PC board (PV04) to the center position.
- 2) Connect a digital voltmeter, set for the DC range, on the emitter resistor [R759 (Lch), R760 (Rch), R794 (Center ch)] on the PC board (PV04).
- 3) After the above, adjust the idling current as follows:
Turn the power ON and adjust semi – fixed resistor R743 (Lch), R744 (Rch), R786 (Center ch) while observing the digital multimeter indication.
The target value is 7.2 mV (20 mA).

All values are with no load on speaker terminals, volume set to minimum and no input with the unit switched to the CD position. Always allow the amplifier to stabilize for 10 minutes or longer prior to adjusting idle current.



11. Main amp DC offset adjustment

- 1) With the power OFF, connect a digital voltmeter, set for the DC range, to the speaker terminal.
- 2) After the above, adjust the DC offset as follows:
Turn the power ON and adjust RN63 (Lch), RN64 (Rch), RN70 (Center ch) so that the output is ± 20 mV.

ALIGNMENT AND TEST POINTS

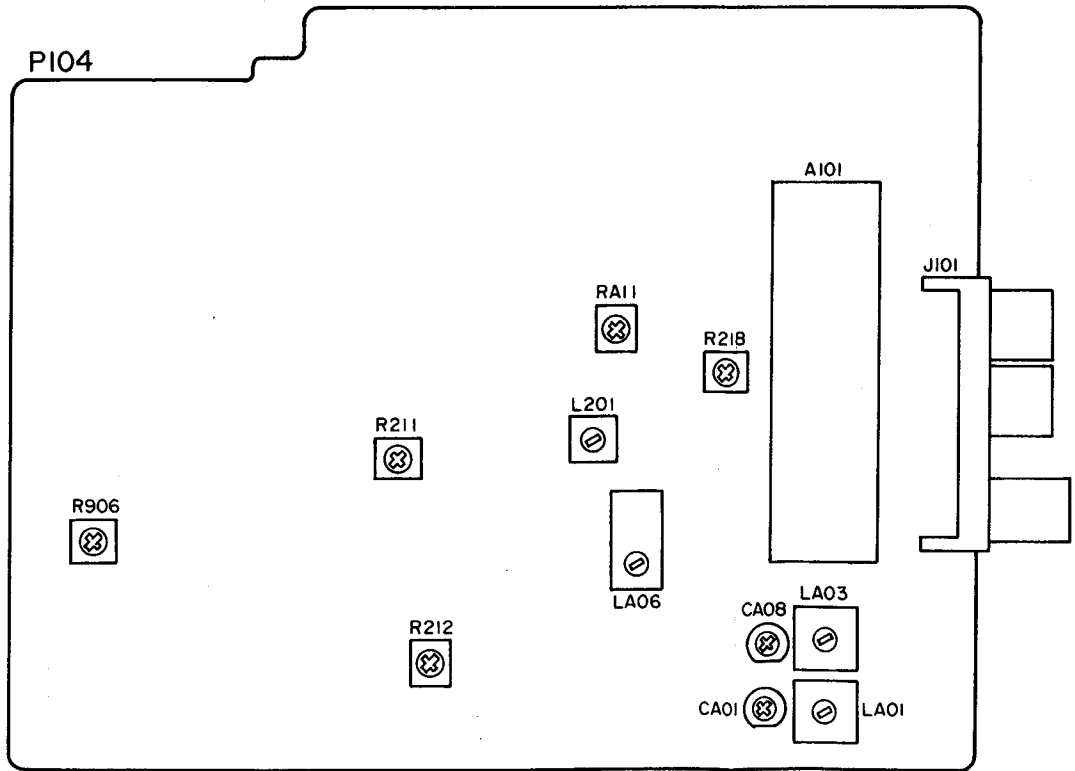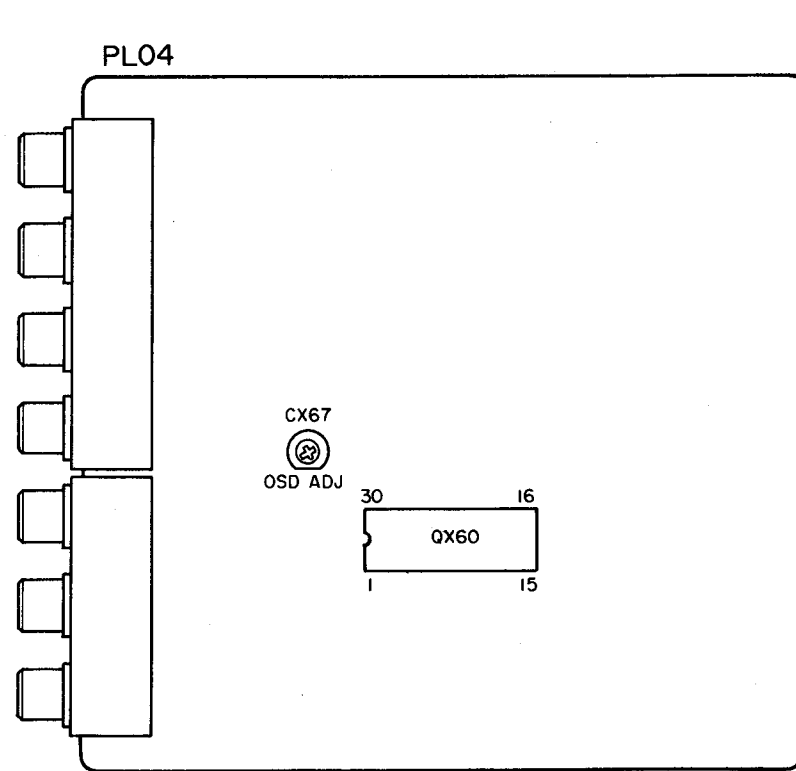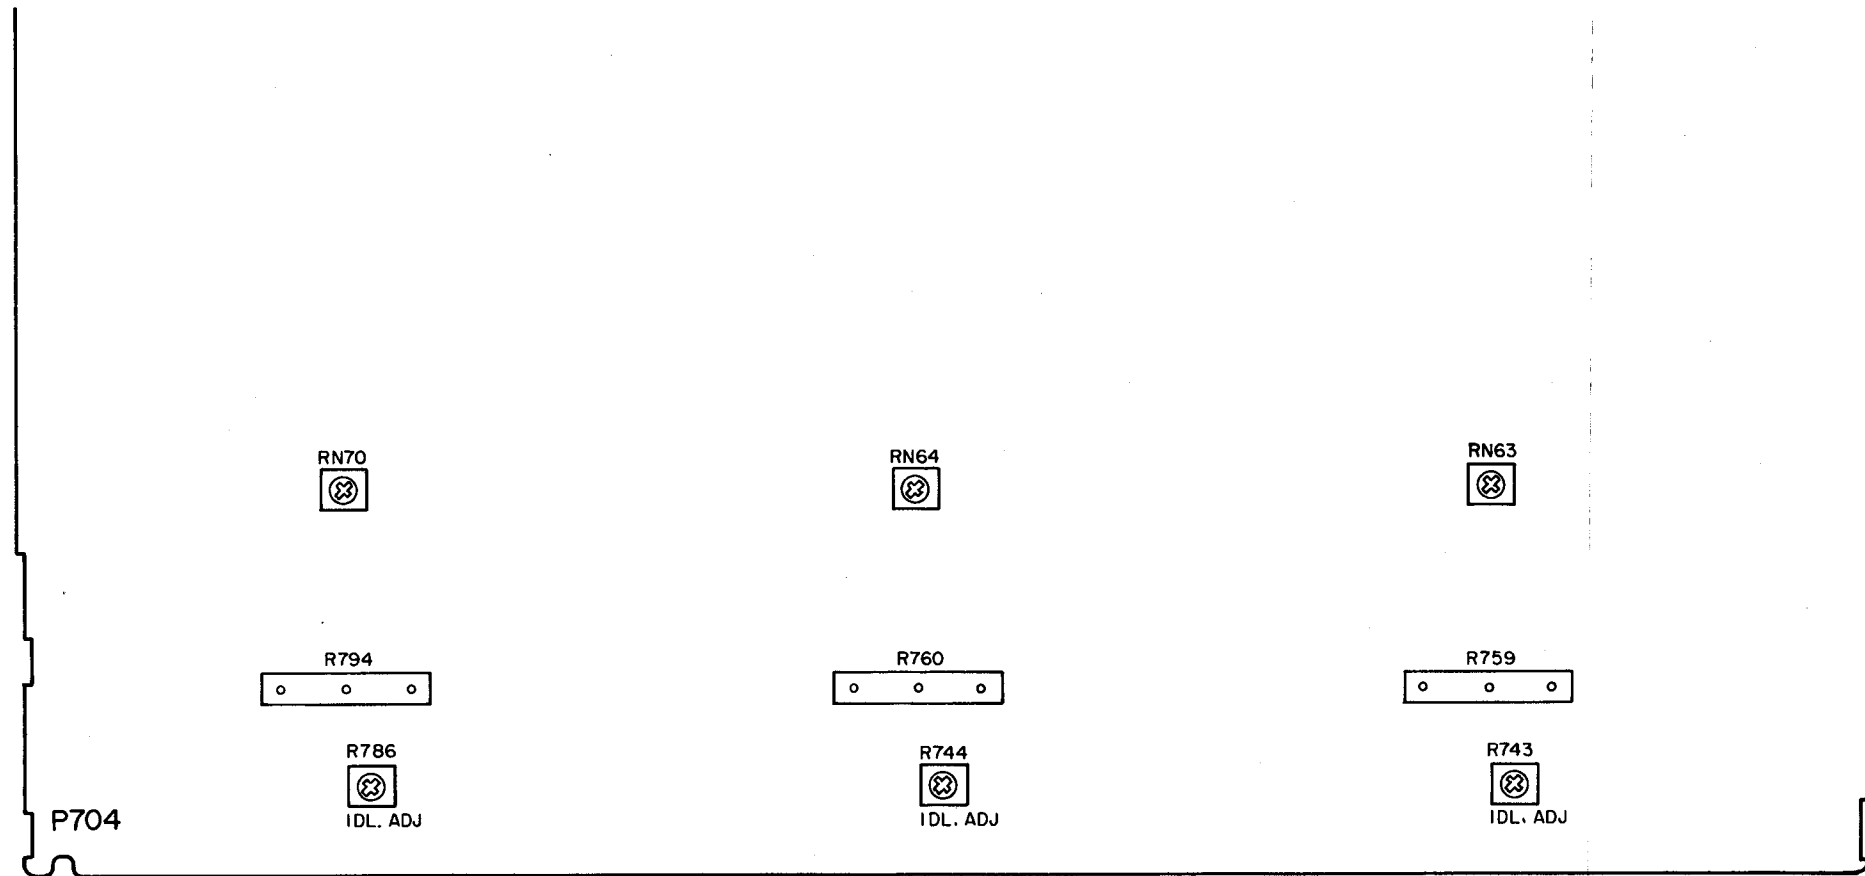

ALIGNMENT AND TEST POINTS

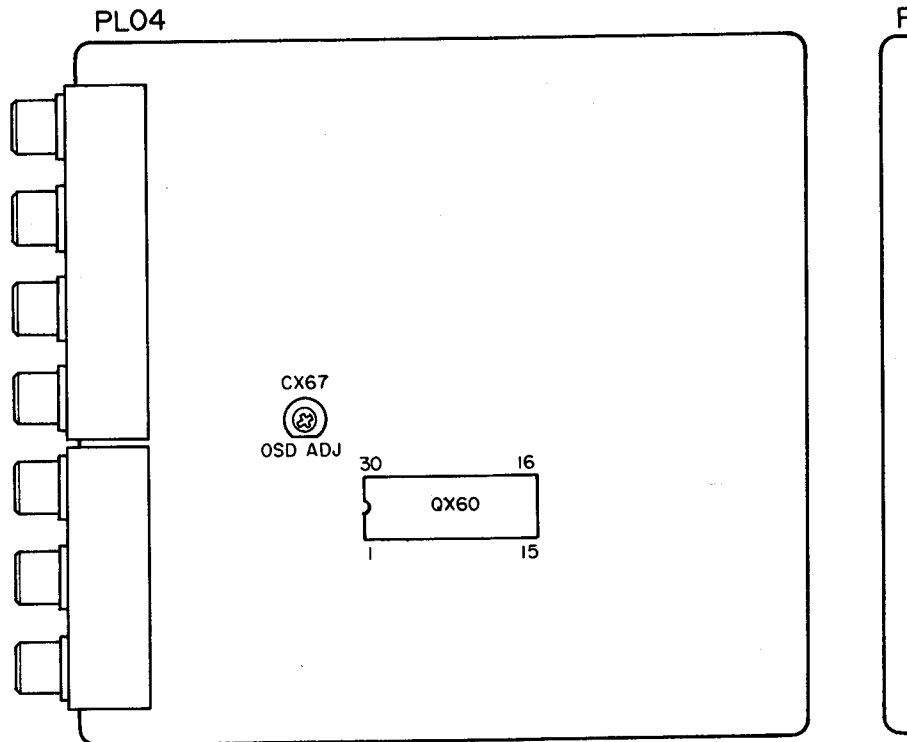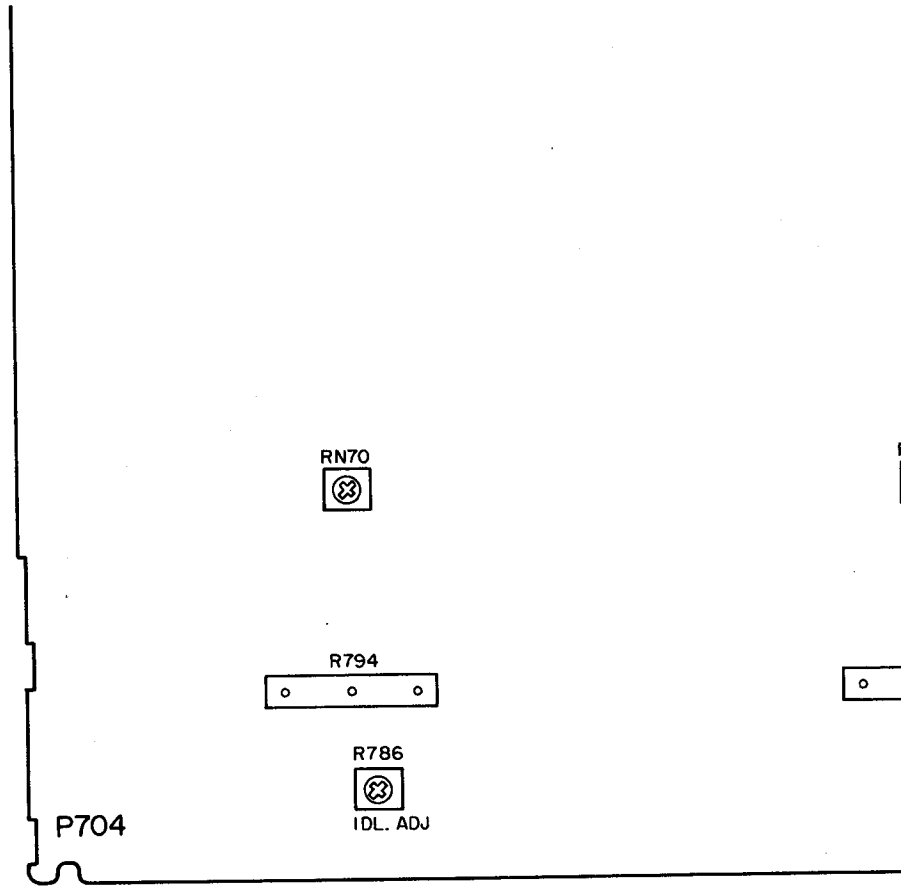


RN64




RN63



R760



R759



R744



IDL. ADJ

R743



IDL. ADJ

PI04

R906



R211



R212



RA11




R218




L201




LA06



A101



J101

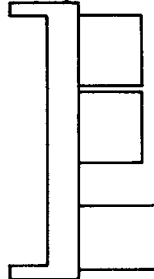

CA08



LA03



CA01




LA01



CIRCUIT DESCRIPTION

1. SURROUND CIRCUIT

This model incorporates a surround processor circuit that provides 6 types of the surround sound. Fig. 1-1 is a block diagram of the surround processor circuit. The microprocessor transfers the data to the parameter control (Serial data, Serial clock, Request Ready) to operate the circuits in each mode.

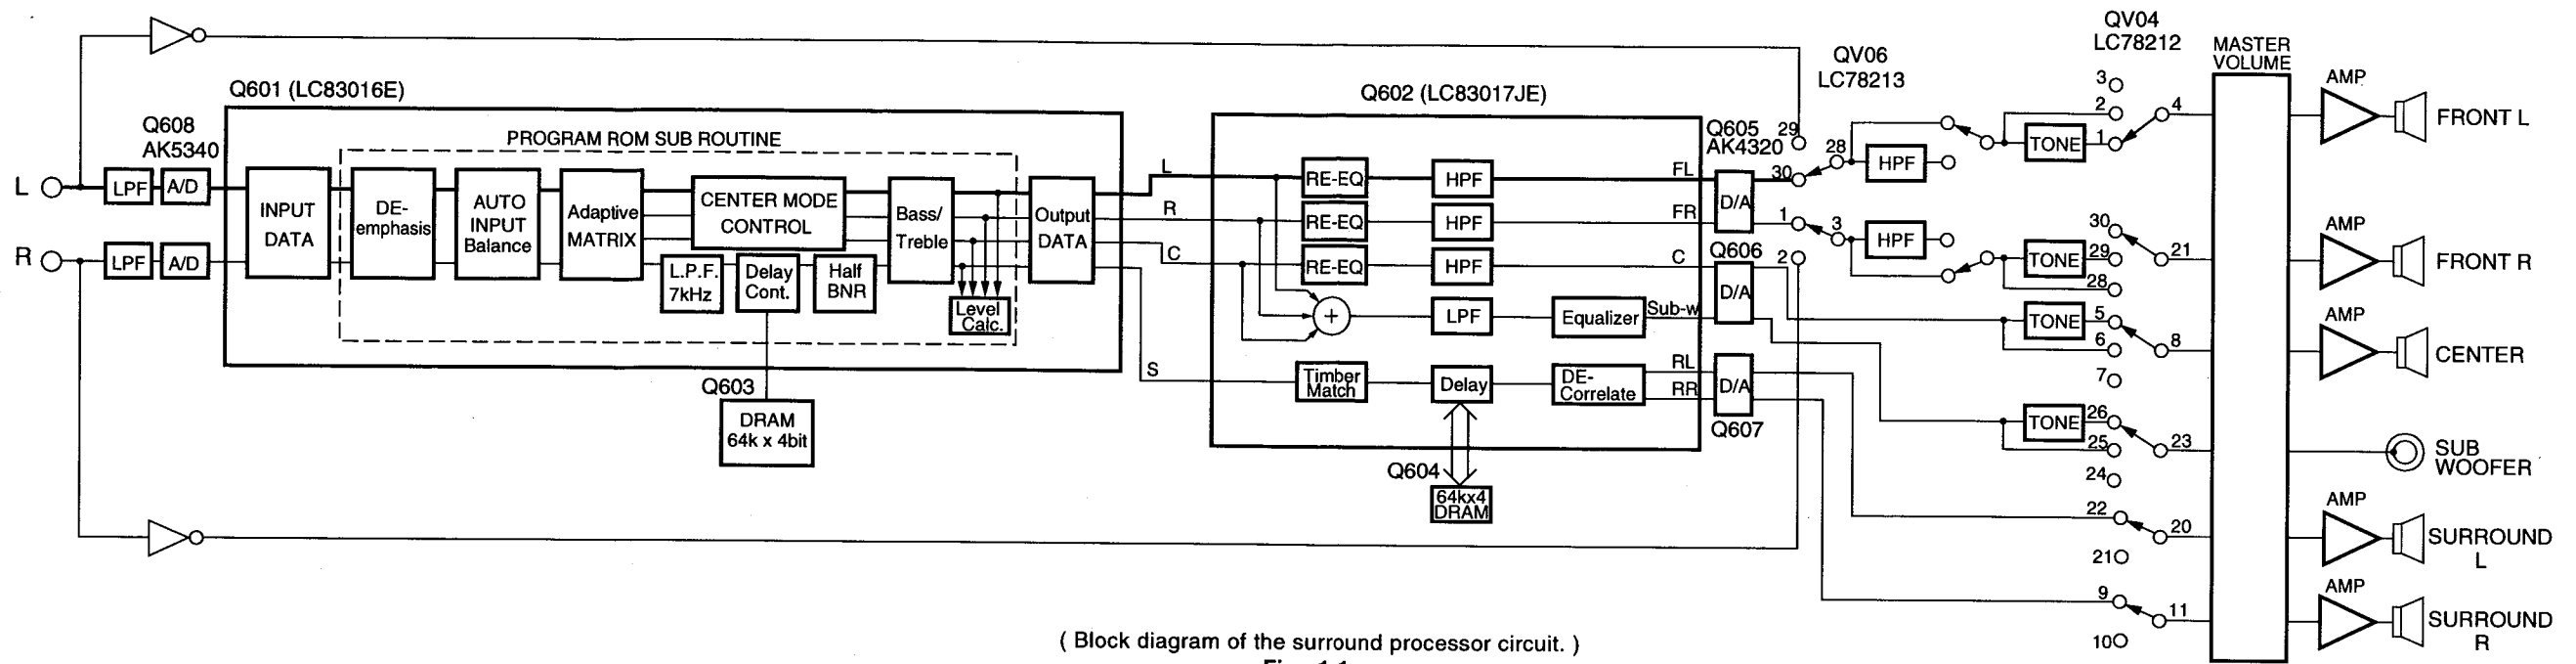

(Block diagram of the surround processor circuit.)
Fig. 1-1

(1) Stereo

Set to this mode to listen to ordinary stereo sound. The rear L/R and center outputs will be muted.

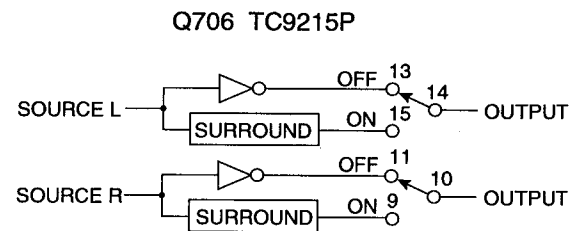


Fig. 1-2

(2) Dolby pro logic

Q601 (LC8316E) is a Dolby pro logic decoder IC. When an audio signal recorded using the Dolby pro logic system is sent to this IC, the left, right, center and surround components are separated. The surround signal component is delayed by the digital delay circuit by 15-30 mS and is sent to the modified B-type decoder Q601 where noise reduction processing is performed.

(3) Movie, 3CH Logic Hall, Matrix

The Movie mode provides the feeling of presence you get from a 35-mm movie in a movie theater. 3CH Logic mode is used to improve the sound field center by applying directivity enhancement provided by the Dolby Pro Logic Surround decoder. Hall mode provides a sound-field effect of medium-sized circular hall with rich reverberations. Matrix mode is effective for playing sports broadcasts or outdoor live concerts. It provides a surround mode with a wide surround effect. All the connections of the circuits are the same in these modes. Q601, controlled by the microprocessor, processes the audio signals to produce various sound effects and creates surround components to use them as signals to drive the surround channel.


2. CENTER MODE

With Dolby pro logic, three center modes depend on the use of a center speaker as follows :

- NORMAL** : Bass frequencies are sent only to the Left and Right Front channels. Select this mode when the Center Speaker is smaller than the Left and Right speakers.
- WIDE** : Bass frequencies are sent to the Left, Center and Right speakers. Select this mode when the Center speaker is approximately the same size as the Left and Right speakers.
- PHANTOM** : Center channel information is sent to the Left and Right speakers. Select this mode when you do not have a center channel speaker.

3. TEST TONE GENERATOR

The test tone generator generates a test tone (noise) to check the balance of sound output from each speaker in the Dolby pro logic mode. (This circuit is produced under license of the Dolby Laboratories Licensing Corp.)

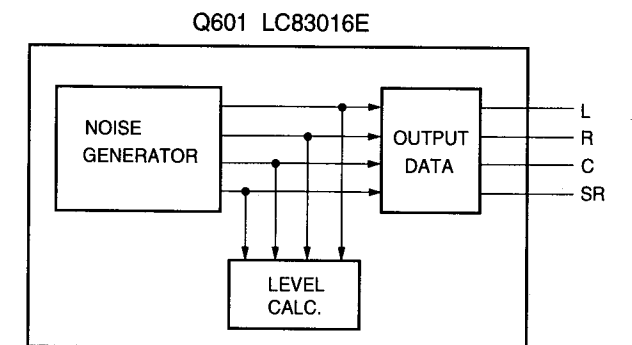


(Flow of noise signals within the system.)
Fig. 3

CIRCUIT DESCRIPTION

1. SURROUND CIRCUIT

This model incorporates a surround processor circuit that provides 6 types of the surround sound. Fig. 1-1 is a block diagram of the surround processor circuit. The microprocessor transfers the data to the parameter control (Serial data, Serial clock, Request Ready) to operate the circuits in each mode.

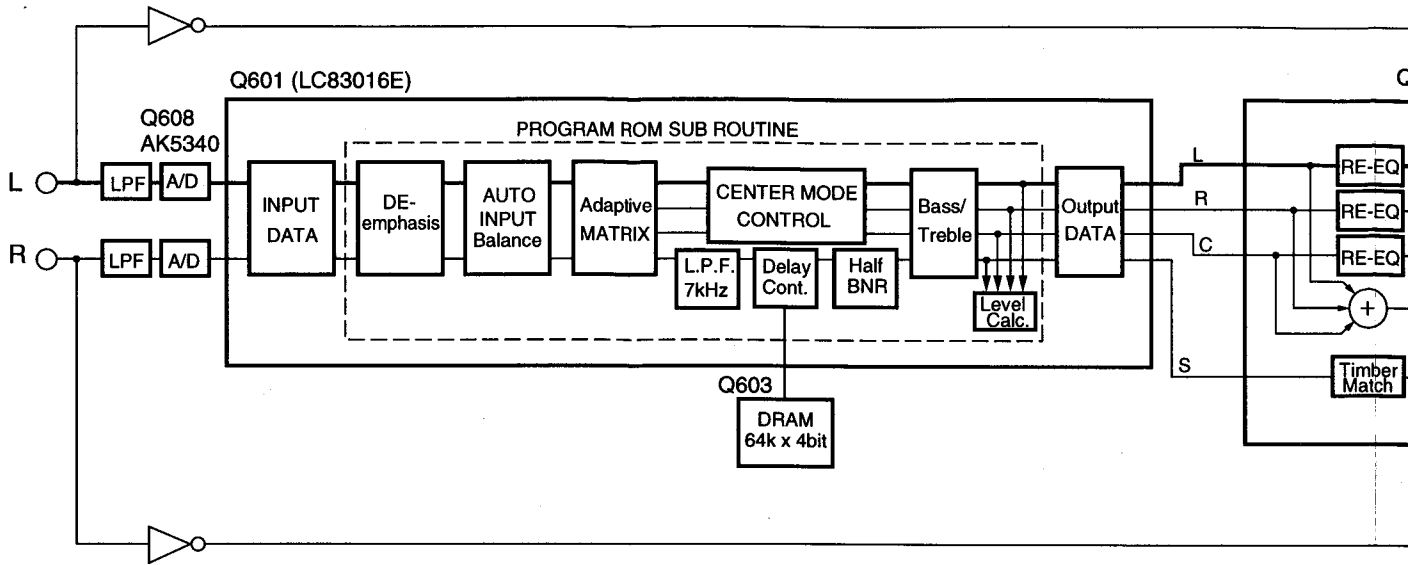

(Block diagram of the surround processor circuit)
Fig. 1-1

(1) Stereo

Set to this mode to listen to ordinary stereo sound. The rear L/R and center outputs will be muted.

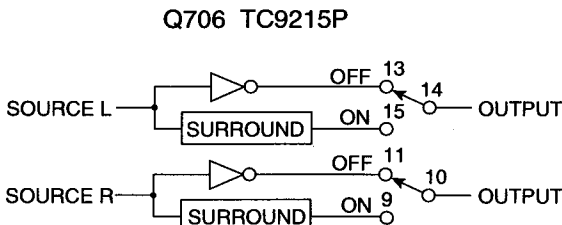



Fig. 1-2

(2) Dolby pro logic

Q601 (LC8316E) is a Dolby pro logic decoder IC. When an audio signal recorded using the Dolby pro logic system is sent to this IC, the left, right, center and surround components are separated. The surround signal component is delayed by the digital delay circuit by 15-30 mS and is sent to the modified B-type decoder Q601 where noise reduction processing is performed.

(3) Movie, 3CH Logic Hall, Matrix

The Movie mode provides the feeling of presence you get from a 35-mm movie in a movie theater. 3CH Logic mode is used to improve the sound field center by applying directivity enhancement provided by the Dolby Pro Logic Surround decoder. Hall mode provides a sound-field effect of medium-sized circular hall with rich reverberations. Matrix mode is effective for playing sports broadcasts or outdoor live concerts. It provides a surround mode with a wide surround effect. All the connections of the circuits are the same in these modes. Q601, controlled by the microprocessor, processes the audio signals to produce various sound effects and creates surround components to use them as signals to drive the surround channel.

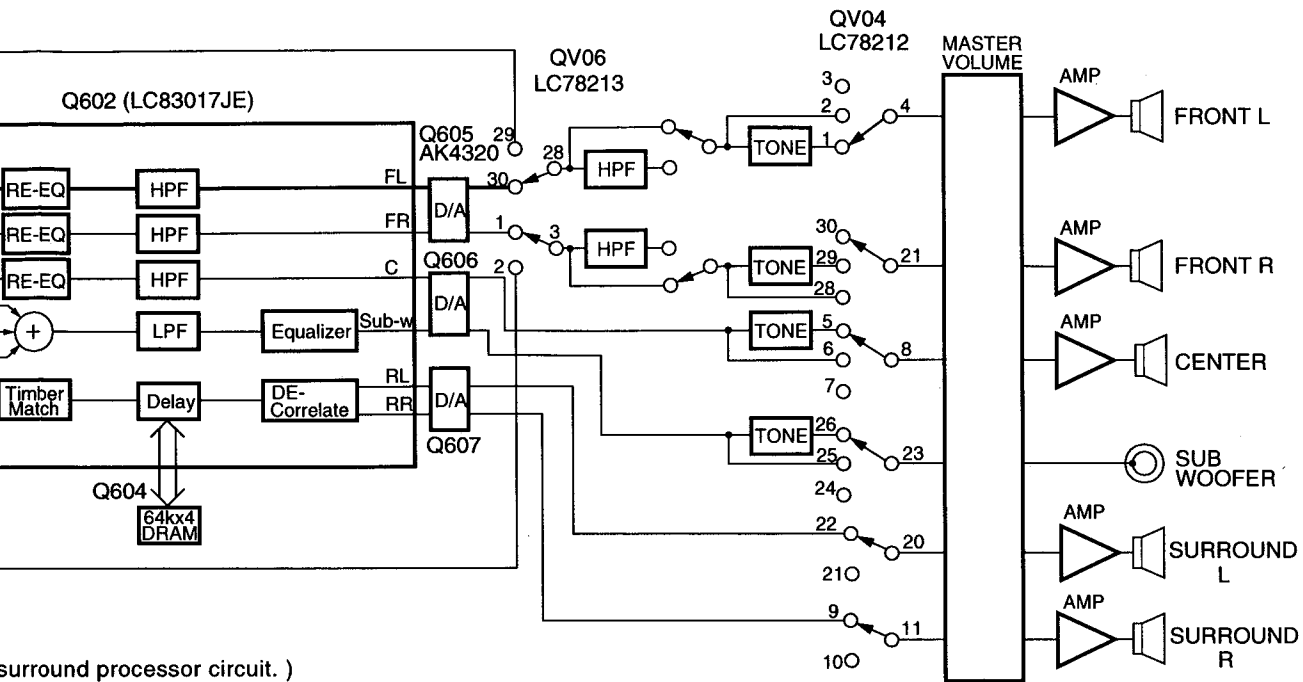

(surround processor circuit.)
 . 1-1


2. CENTER MODE

With Dolby pro logic, three center modes depend on the use of a center speaker as follows :

- NORMAL** : Bass frequencies are sent only to the Left and Right Front channels. Select this mode when the Center Speaker is smaller than the Left and Right speakers.
- WIDE** : Bass frequencies are sent to the Left, Center and Right speakers. Select this mode when the Center speaker is approximately the same size as the Left and Right speakers.
- PHANTOM** : Center channel information is sent to the Left and Right speakers. Select this mode when you do not have a center channel speaker.

3. TEST TONE GENERATOR


The test tone generator generates a test tone (noise) to check the balance of sound output from each speaker in the Dolby pro logic mode. (This circuit is produced under license of the Dolby Laboratories Licensing Corp.)

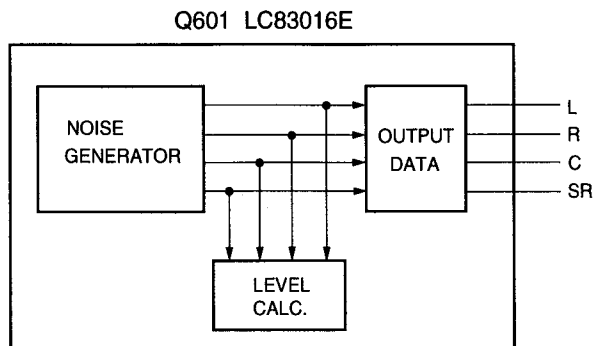

(Flow of noise signals within the system.)








Fig. 3

BLOCK DIAGRAM


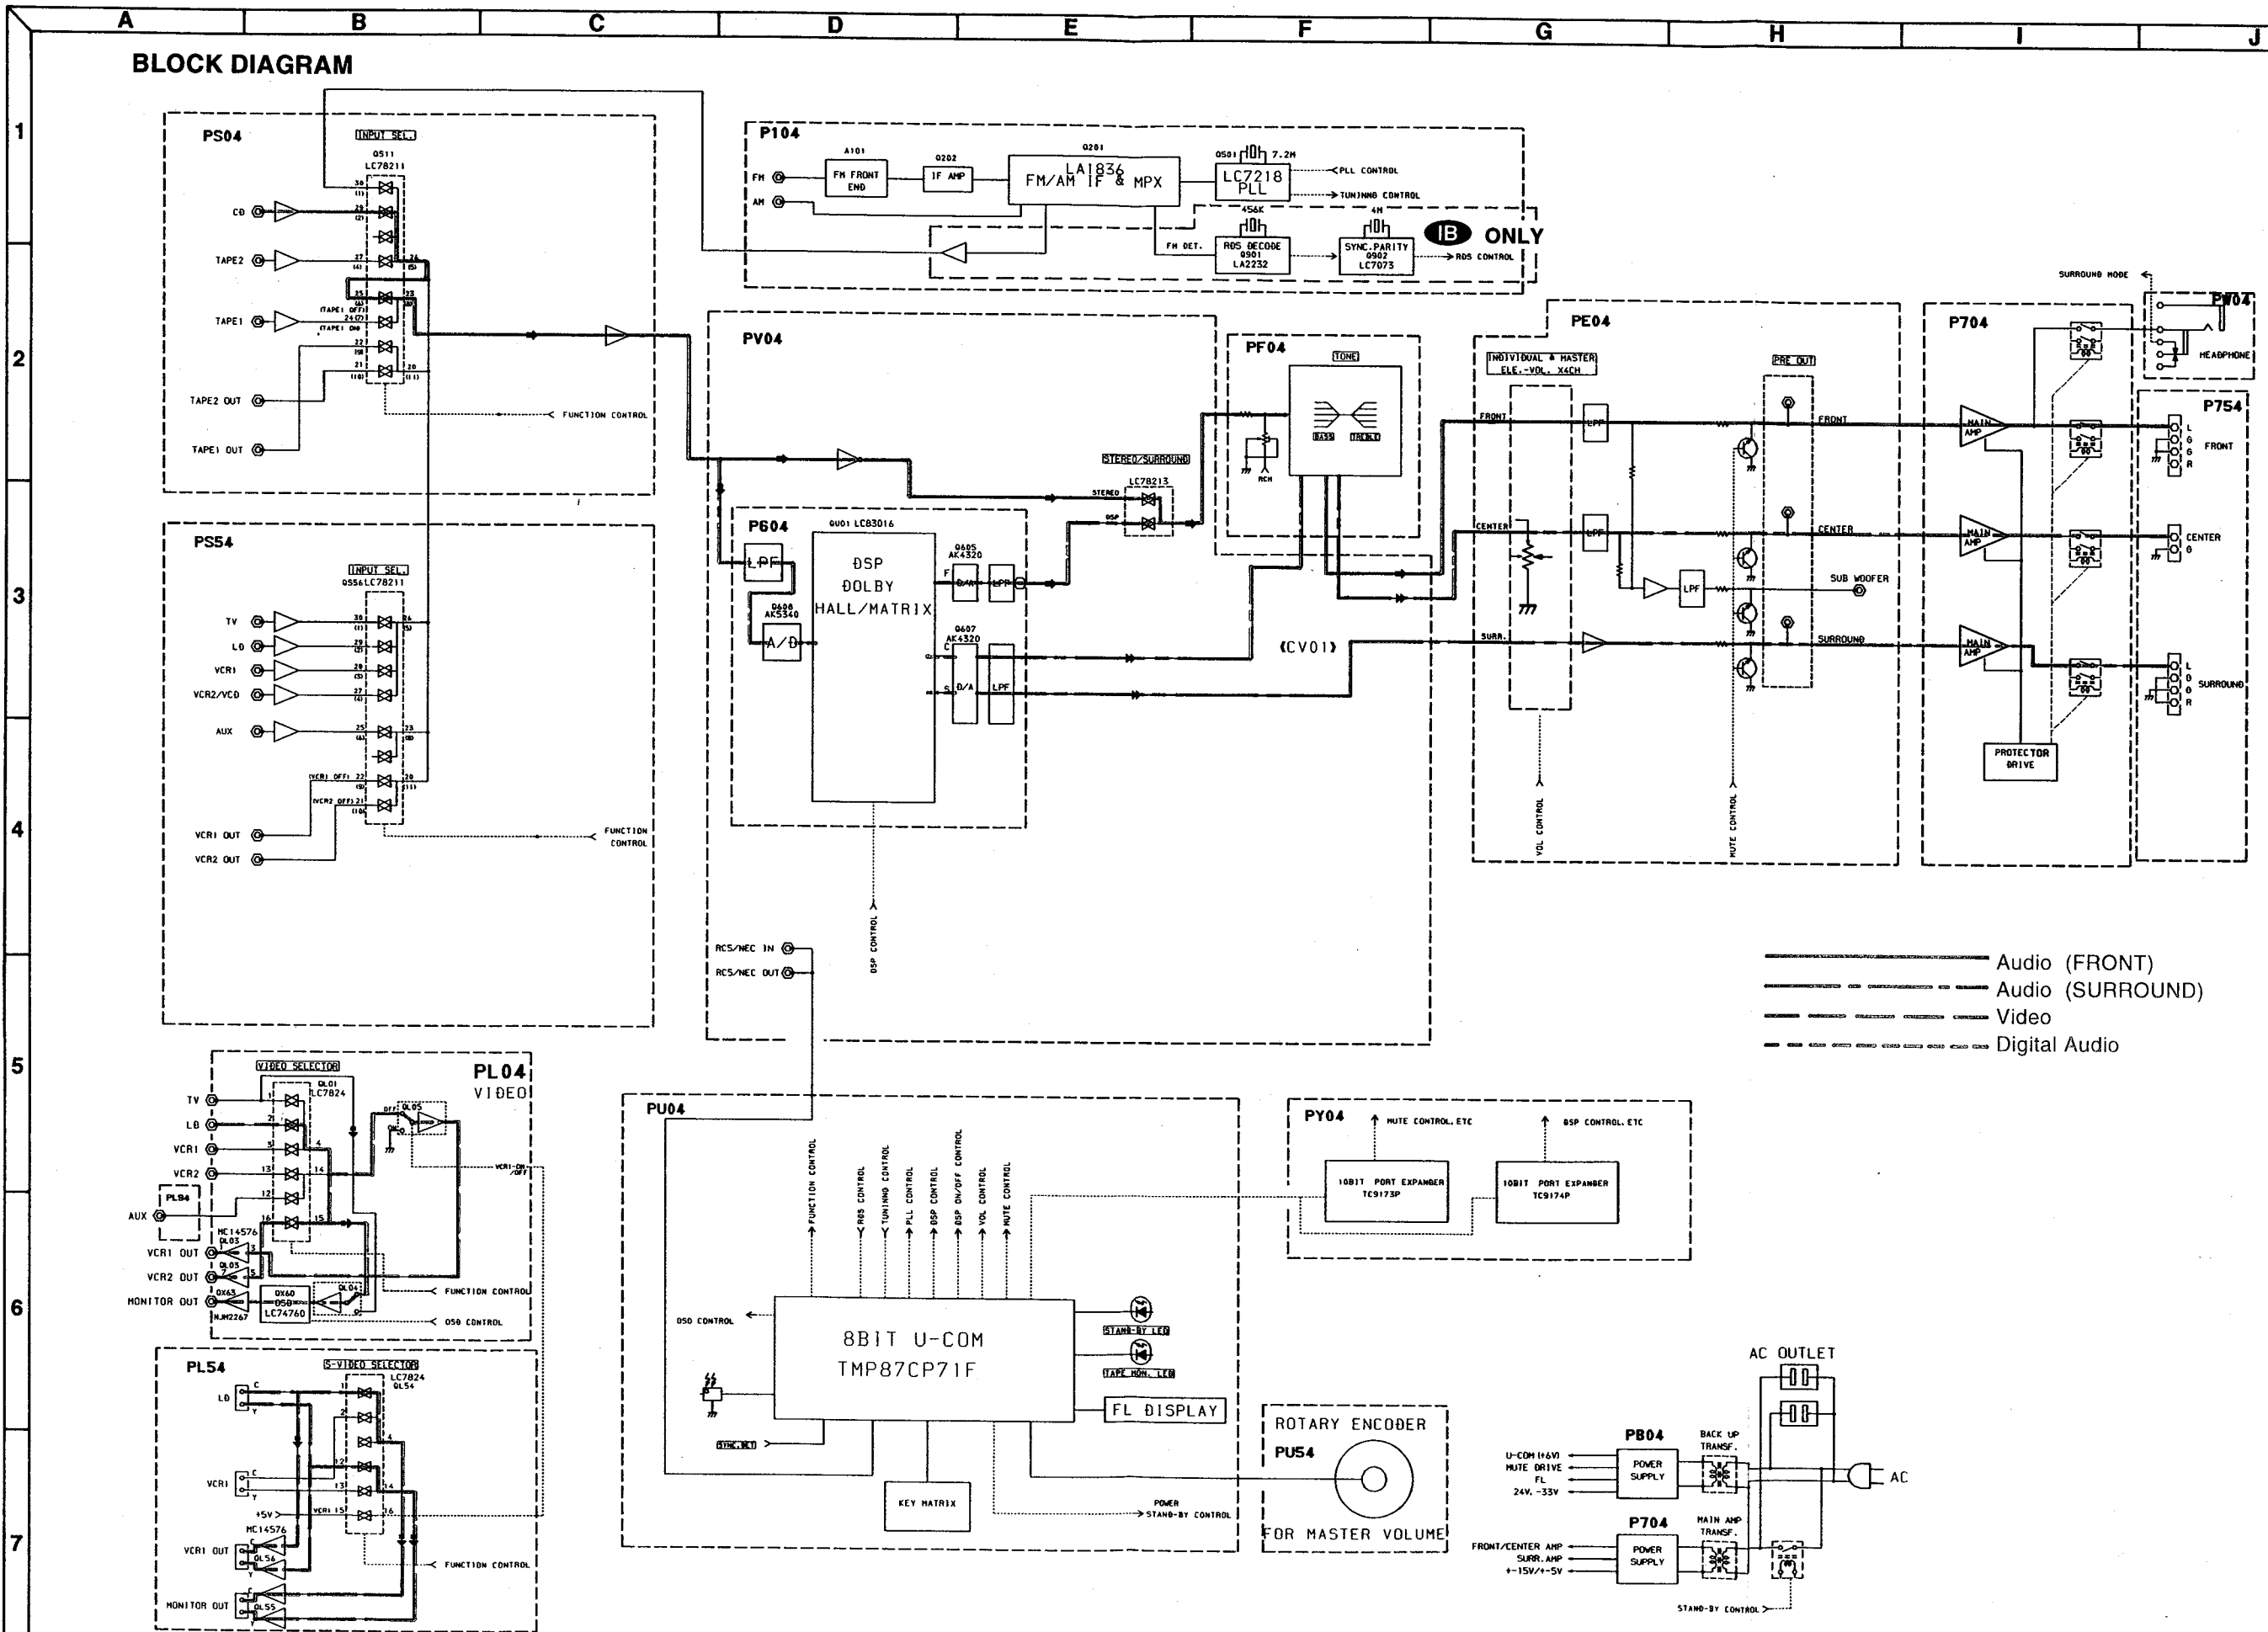


BLOCK DIAGRAM

1
2
3
4
5
6
7

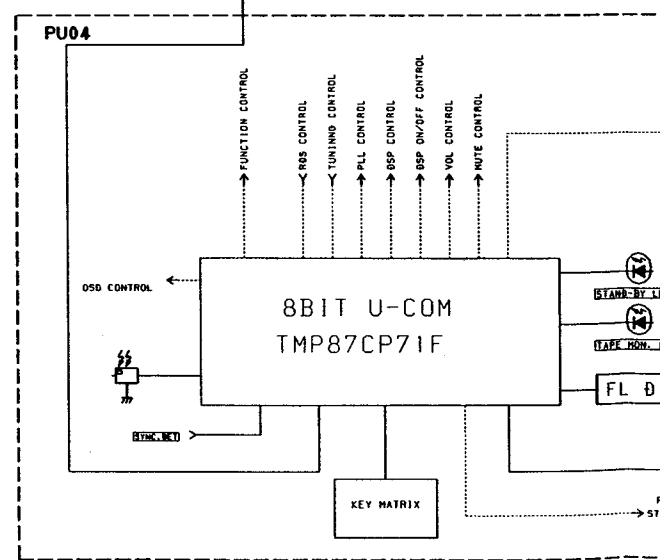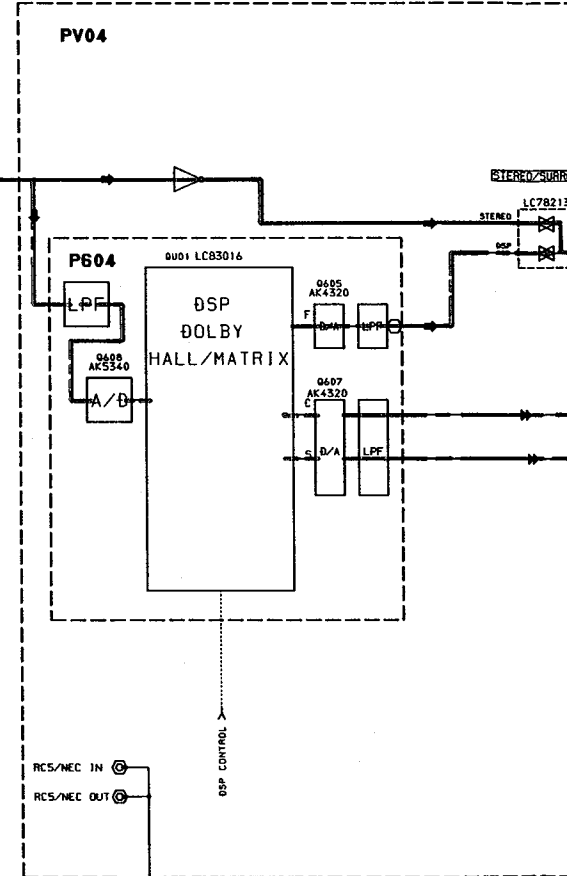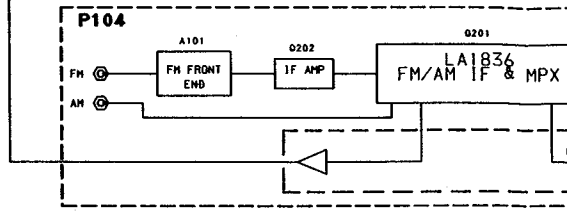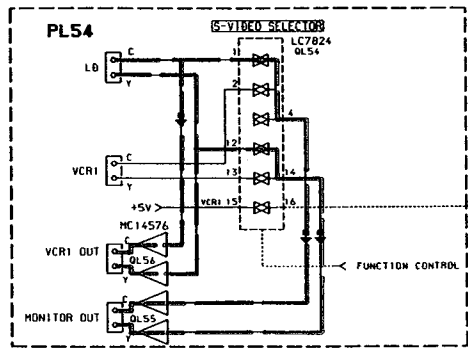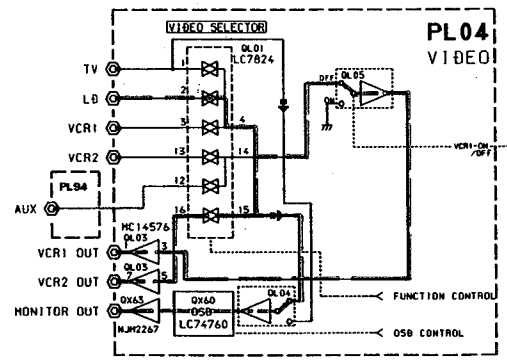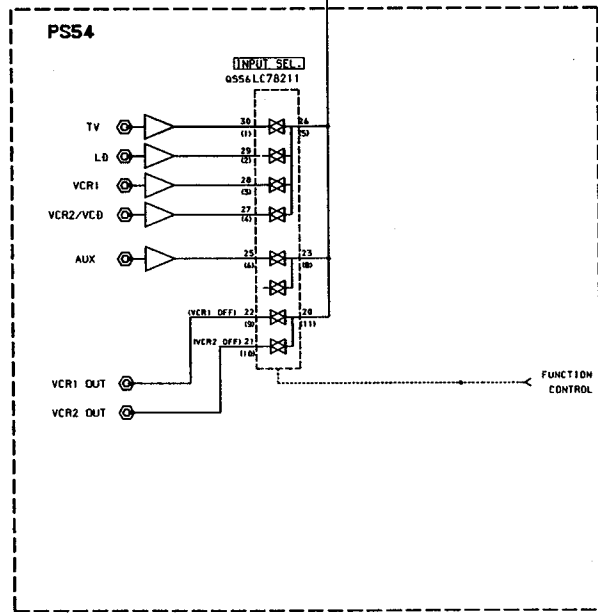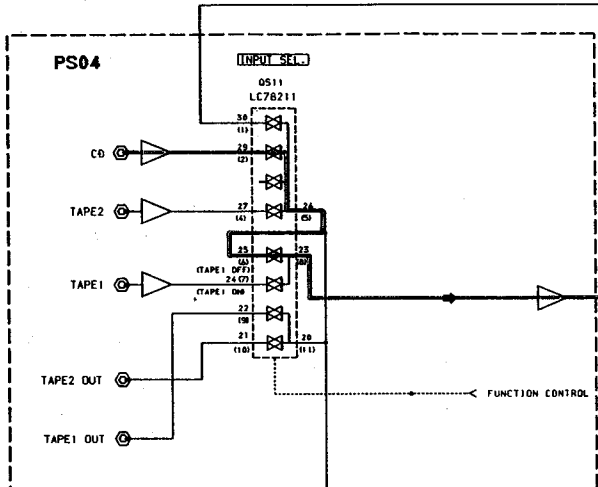


F G H I J

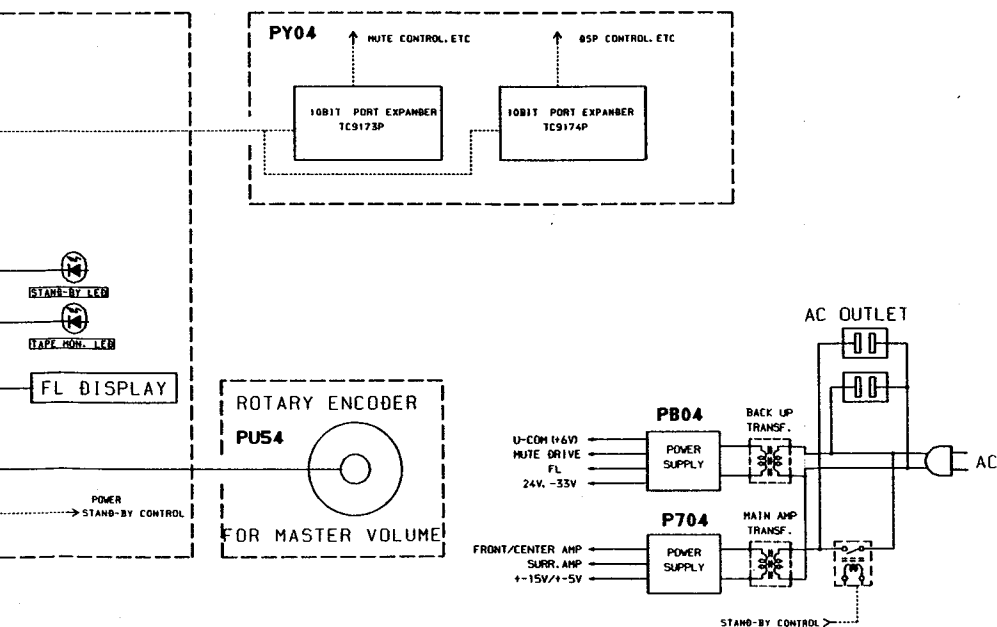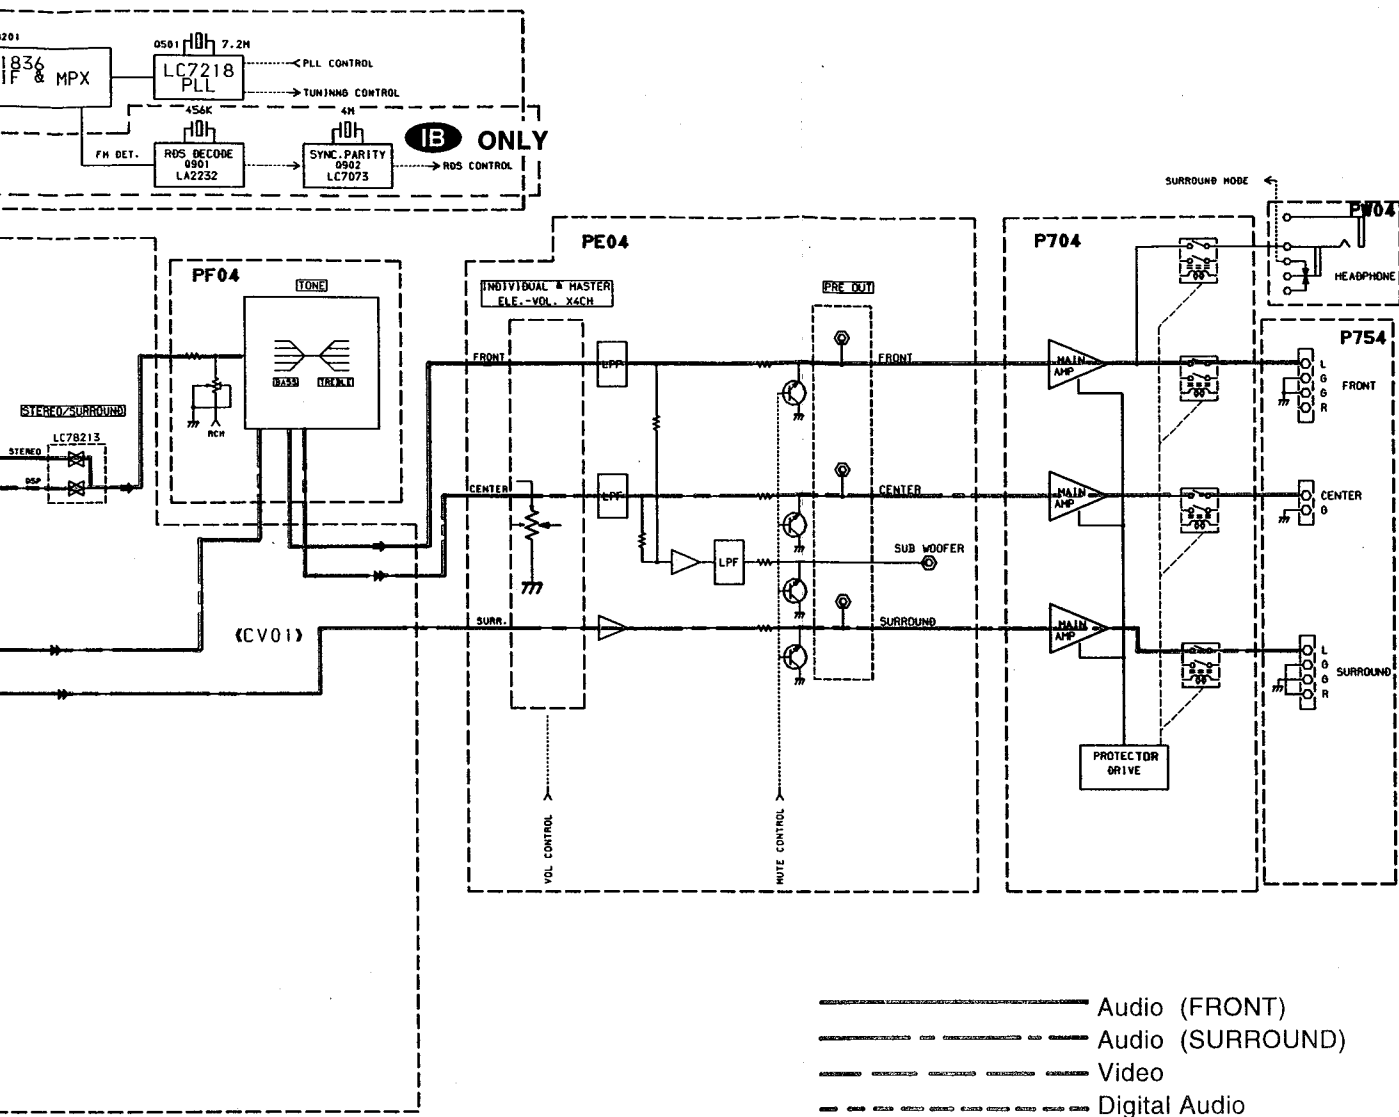

DISASSEMBLY PROCEDURES


1. Removing the top Cover

Remove the screws ① ~ ⑪

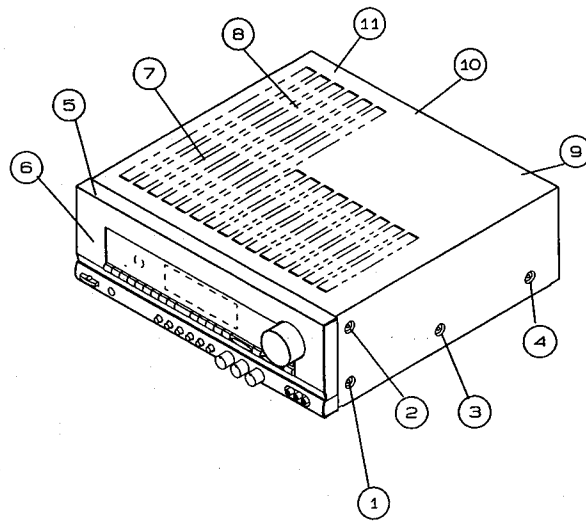

2. Removing the front panel

Remove the screws ① ~ ④

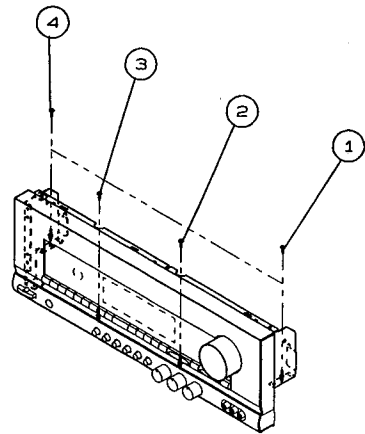

MAIN PCB BLOCK (P704)

1. Remove all of the screws on REAR PANEL. (900G)
2. Remove the REAR PANEL.
3. Remove the SPEAKER TERMINAL PCB. (P754)
4. Remove the screw x4 for MAIN PCB mounting.
5. Remove the screw x2 for both sides GIRD PCB of main heatsink.
6. Remove the both sides GIRD PCB.
7. Remove the screw x4 for MAIN PCB BLOCK mounting.
8. Remove the MAIN PCB BLOCK.

POWER SUPPLY PCB (PB04)


1. Remove the screw x2 for TRANSF mounting.
2. Remove the screw x2 for POWER SUPPLY PCB mounting.
3. Remove the POWER SUPPLY PCB.

MAIN VOL PCB (PU54)

1. Remove the MAIN VOL KNOB. (035B)
2. Remove the MAIN VOL NUT.
3. Pull out the MAIN VOL PCB.


3. Removing the rear panel

Remove the screws ① ~ ⑨

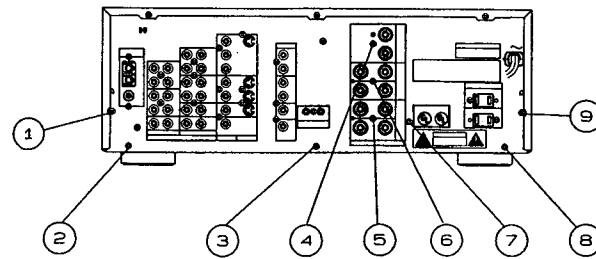


4. Removing the main PCB Block

Remove the screws ① ~ ⑫

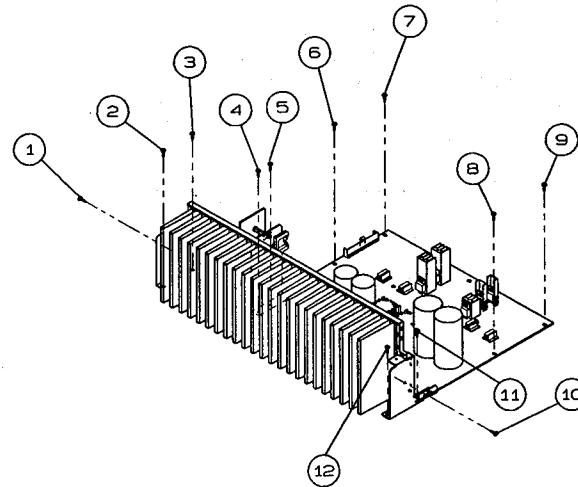

5. Removing the shield plate

Remove the screws ① ②

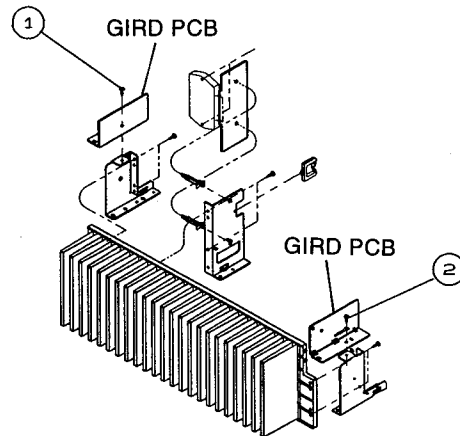

TONE VOL PCB (PF04)

1. Remove the three TONE VOL KNOBS. (036B)
2. Remove the three TONE VOL NUTS.
3. Pull out the TONE VOL PCB.

FRONT FUNCTION PCB (PU04)


1. Remove the screw x4 for FRONT PANEL ASSY mounting.
2. Lay down the FRONT PANEL ASSY.
3. Remove the screw x16 for FRONT FUNCTION PCB.
4. Remove the FRONT FUNCTION PCB.

GENERAL UNIT PARTS LIST


Ref. No.	Part. No.	Description	Q'TY	Ref. No.	Part. No.	Description	Q'TY
001B	260J248120	FRONT PANEL IB	1	▲L001	TS19637020	POWER TRANSF. 230V IB	1
001B	260J248110	FRONT PANEL BK	1	▲L001	TS19637010	POWER TRANSF. 120V BK	1
005B	260J105010	CHASSIS, FRONT	1	L002	FC50380010	FERRITE CORE IB	1
008B	260J158110	WINDOW	1	▲W001	YC01800790	A.C POWER CORD IB	1
010B	260J270010	BUTTON, FUNCTION	1	▲W001	YC01800780	A.C POWER CORD BK	1
013B	260J270510	BUTTON KIT, POWER	1				
014B	260J270040	BUTTON, POWER	1	5110	51100306M0	B. H. M SCREW 5110 ø3x6 (M)	6
015B	260J355020	LENS, POWER	1	5110	51100308A0	B. H. M SCREW 5110 ø3x8 (A)	4
017B	260J270220	BUTTON, MODE IB	1	5126	51260308U0	B.T.SCREW(W/W) 5126 ø3x8 (U)	11
017B	260J270320	BUTTON, MODE BK	1	5126	51260308M0	B.T.SCREW(W/W) 5126 ø3x8 (M)	8
019B	183J271020	HOLDER, FL	1	5128	51280308M0	B. H. TAP. SCREW 5128 ø3x8 (M)	93
020B	056J122010	STICKER, FL	1	5128	51280308U0	B. H. TAP. SCREW 5128 ø3x8 (U)	3
021B	4220005040	CLAMPER	1	5128	51280325B0	B. H. TAP. SCREW 5128 ø3x25 (B)	2
023B	183J010010	SCREW, PHONE PCB	1	5128	51280410U0	B. H. TAP. SCREW 5128 ø4x10 (U)	1
025B	264J160040	BRACKET, LEFT	1	5128	51280310A0	F. WASHER SCREW 5148 ø3x10(A)	9
027B	264J160050	BRACKET, RIGHT	1	5128	51480315M0	F. WASHER SCREW 5148 ø3x15(M)	2
035B	063J154180	KNOB, MAIN VOL	1	5128	52040408M0	H. HEAD BOLT 5204 ø4x8 (M)	4
036B	042J154020	KNOB, TONE VOL	3				
001D	264J257110	LID, TOP COVER	1				
001G	264J105500	CHASSIS ASSEMBLY, MAIN	1				
002G	264J105010	CHASSIS, MAIN	1				
003G	030J114010	STOPPER	1				
006G	227J056010	BUFFER	4				
007G	183J057010	LEG, FRONT	2				
008G	183J057110	LEG, REAR	2				
010G	264J160010	BRACKET, TRANSF.	1				
013G	260J271010	HOLDER, SUB TRANSF.	1				
016G	2218271020	HOLDER, PCB	7				
017G	054J101020	SUPPORT, MAIN PCB	4				
020G	087J861010	LABEL, FUSE IB	1				
020G	259J861010	LABEL, FUSE BK	1				
021G	058J861240	LABEL, FUSE IB	1				
021G	058J861220	LABEL, FUSE BK	1				
030G	136J101020	SUPPORT	1				
900G	260J250120	REAR PANEL IB	1				
900G	260J250110	REAR PANEL BK	1				
910G	450H259010	BUSHING, AC CODE	1				
915G	260J861010	LABEL BK	1				
920G	95109111D0	LABEL BK	1				
001L	264J267010	HEATSINK, MAIN	1				
005L	264J160020	BRACKET, HEAT SINK (L)	1				
009L	264J160030	BRACKET, HEAT SINK (R)	1				
013L	261J104010	RETAINER, MAIN PCB	2				
015L	264J160060	BRACKET, HEATSINK CENTER	1				
017L	090J101010	SUPPORT	2				
020L	287S005010	CLAMPER	1				
001K	009D267010	HEATSINK	1				
002K	009D267010	HEATSINK	1				
003K	001J267030	HEATSINK	1				
004K	001J267030	HEATSINK	1				
005K	309V267010	HEATSINK	1				
007K	309V267010	HEATSINK	1				
011K	260J123010	CONTACTOR	1				
012K	152J118030	SPACER	1				
014K	306V259030	BUSHING IB	1				
061K	415T101010	SUPPORT	1				

DISASSEMBLY PROCEDURES


1. Removing the top Cover
Remove the screws ① ~ ⑪

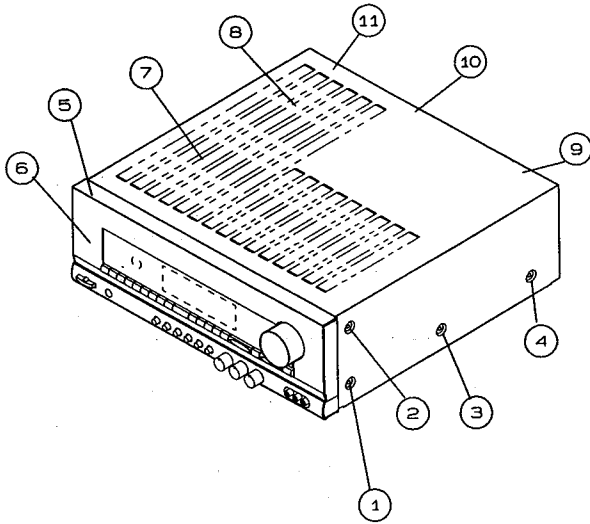


2. Removing the front panel
Remove the screws ① ~ ④

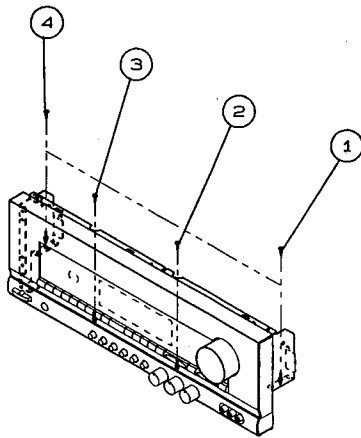


3. Removing the rear panel
Remove the screws ① ~ ⑨

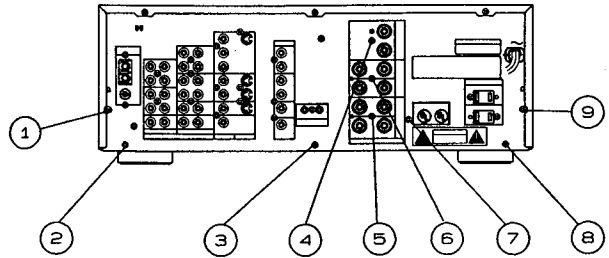

4. Removing the main PCB Block
Remove the screws ① ~ ⑫

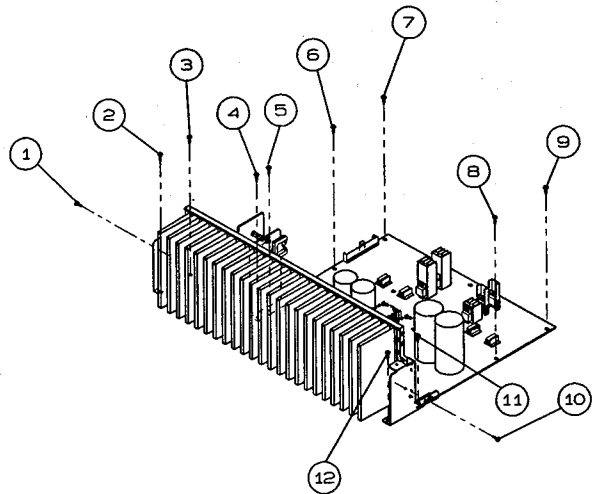

5. Removing the shield plate
Remove the screws ① ②

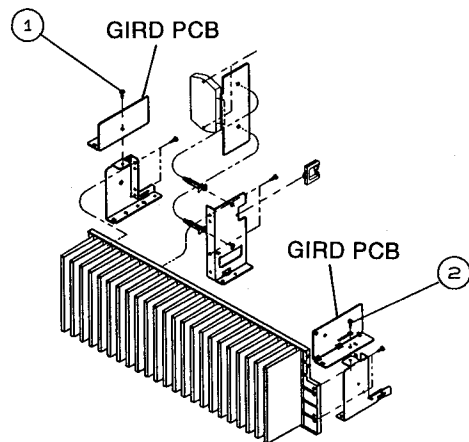

MAIN PCB BLOCK (P704)

1. Remove all of the screws on REAR PANEL. (900G)
2. Remove the REAR PANEL.
3. Remove the SPEAKER TERMINAL PCB. (P754)
4. Remove the screw x4 for MAIN PCB mounting.
5. Remove the screw x2 for both sides GIRD PCB of main heatsink.
6. Remove the both sides GIRD PCB.
7. Remove the screw x4 for MAIN PCB BLOCK mounting.
8. Remove the MAIN PCB BLOCK.

POWER SUPPLY PCB (PB04)

1. Remove the screw x2 for TRANSF mounting.
2. Remove the screw x2 for POWER SUPPLY PCB mounting.
3. Remove the POWER SUPPLY PCB.

MAIN VOL PCB (PU54)

1. Remove the MAIN VOL KNOB. (035B)
2. Remove the MAIN VOL NUT.
3. Pull out the MAIN VOL PCB.

TONE VOL PCB (PF04)

1. Remove the three TONE VOL KNOBS. (036B)
2. Remove the three TONE VOL NUTS.
3. Pull out the TONE VOL PCB.


FRONT FUNCTION PCB (PU04)

1. Remove the screw x4 for FRONT PANEL ASSY mounting.
2. Lay down the FRONT PANEL ASSY.
3. Remove the screw x16 for FRONT FUNCTION PCB.
4. Remove the FRONT FUNCTION PCB.

GENERAL UNIT PARTS LIST

Ref. No.	Part. No.	Description	Q'TY	Ref. No.	Part. No.	Description	Q'TY
001B	260J248120	FRONT PANEL IB	1	▲ L001	TS19637020	POWER TRANSF. 230V IB	1
001B	260J248110	FRONT PANEL BK	1	▲ L001	TS19637010	POWER TRANSF. 120V BK	1
005B	260J105010	CHASSIS, FRONT	1	L002	FC50380010	FERRITE CORE IB	1
008B	260J158110	WINDOW	1	▲ W001	YC01800790	A.C POWER CORD IB	1
010B	260J270010	BUTTON, FUNCTION	1	▲ W001	YC01800780	A.C POWER CORD BK	1
013B	260J270510	BUTTON KIT, POWER	1				
014B	260J270040	BUTTON, POWER	1	5110	51100306M0	B. H. M SCREW 5110 ø3x6 (M)	6
015B	260J355020	LENS, POWER	1	5110	51100308A0	B. H. M SCREW 5110 ø3x8 (A)	4
017B	260J270220	BUTTON, MODE IB	1	5126	51260308U0	B.T.SCREW(W/W) 5126 ø3x8 (U)	11
017B	260J270320	BUTTON, MODE BK	1	5126	51260308M0	B.T.SCREW(W/W) 5126 ø3x8 (M)	8
019B	183J271020	HOLDER, FL	1	5128	51280308M0	B. H. TAP. SCREW 5128 ø3x8 (M)	93
020B	056J122010	CLAMPER, FL	1	5128	51280308U0	B. H. TAP. SCREW 5128 ø3x8 (U)	3
021B	4220005040	CLAMPER	1	5128	51280325B0	B. H. TAP. SCREW 5128 ø3x25 (B)	2
023B	183J010010	SCREW, PHONE PCB	1	5128	51280410U0	B. H. TAP. SCREW 5128 ø4x10 (U)	1
025B	264J160040	BRACKET, LEFT	1	5128	51480310A0	F. WASHER SCREW 5148 ø3x10(A)	9
027B	264J160050	BRACKET, RIGHT	1	5128	51480315M0	F. WASHER SCREW 5148 ø3x15(M)	2
035B	063J154180	KNOB, MAIN VOL	1	5128	52040408M0	H. HEAD BOLT 5204 ø4x8 (M)	4
036B	042J154020	KNOB, TONE VOL	3				
001D	264J257110	LID, TOP COVER	1				
001G	264J105500	CHASSIS ASSEMBLY, MAIN	1				
002G	264J105010	CHASSIS, MAIN	1				
003G	030J114010	STOPPER	1				
006G	227J056010	BUFFER	4				
007G	183J057010	LEG, FRONT	2				
008G	183J057110	LEG, REAR	2				
010G	264J160010	BRACKET, TRANSF.	1				
013G	260J271010	HOLDER, SUB TRANSF.	1				
016G	2218271020	HOLDER, PCB	7				
017G	054J101020	SUPPORT, MAIN PCB	4				
020G	087J861010	LABEL, FUSE IB	1				
020G	259J861010	LABEL, FUSE BK	1				
021G	058J861240	LABEL, FUSE IB	1				
021G	058J861220	LABEL, FUSE BK	1				
030G	136J101020	SUPPORT	1				
900G	260J250120	REAR PANEL IB	1				
900G	260J250110	REAR PANEL BK	1				
910G	450H259010	BUSHING, AC CODE	1				
915G	260J861010	LABEL BK	1				
920G	95109111D0	LABEL BK	1				
001L	264J267010	HEATSINK, MAIN	1				
005L	264J160020	BRACKET, HEAT SINK (L)	1				
009L	264J160030	BRACKET, HEAT SINK (R)	1				
013L	261J104010	RETAINER, MAIN PCB	2				
015L	264J160060	BRACKET, HEATSINK CENTER	1				
017L	090J101010	SUPPORT	2				
020L	287S005010	CLAMPER	1				
001K	009D267010	HEATSINK	1				
002K	009D267010	HEATSINK	1				
003K	001J267030	HEATSINK	1				
004K	001J267030	HEATSINK	1				
005K	309V267010	HEATSINK	1				
007K	309V267010	HEATSINK	1				
011K	260J123010	CONTACTOR	1				
012K	152J118030	SPACER	1				
014K	306V259030	BUSHING IB	1				
061K	415T101010	SUPPORT	1				


GENERAL UNIT , AVR70 BK IB - (1/2) EXPLODED VIEW

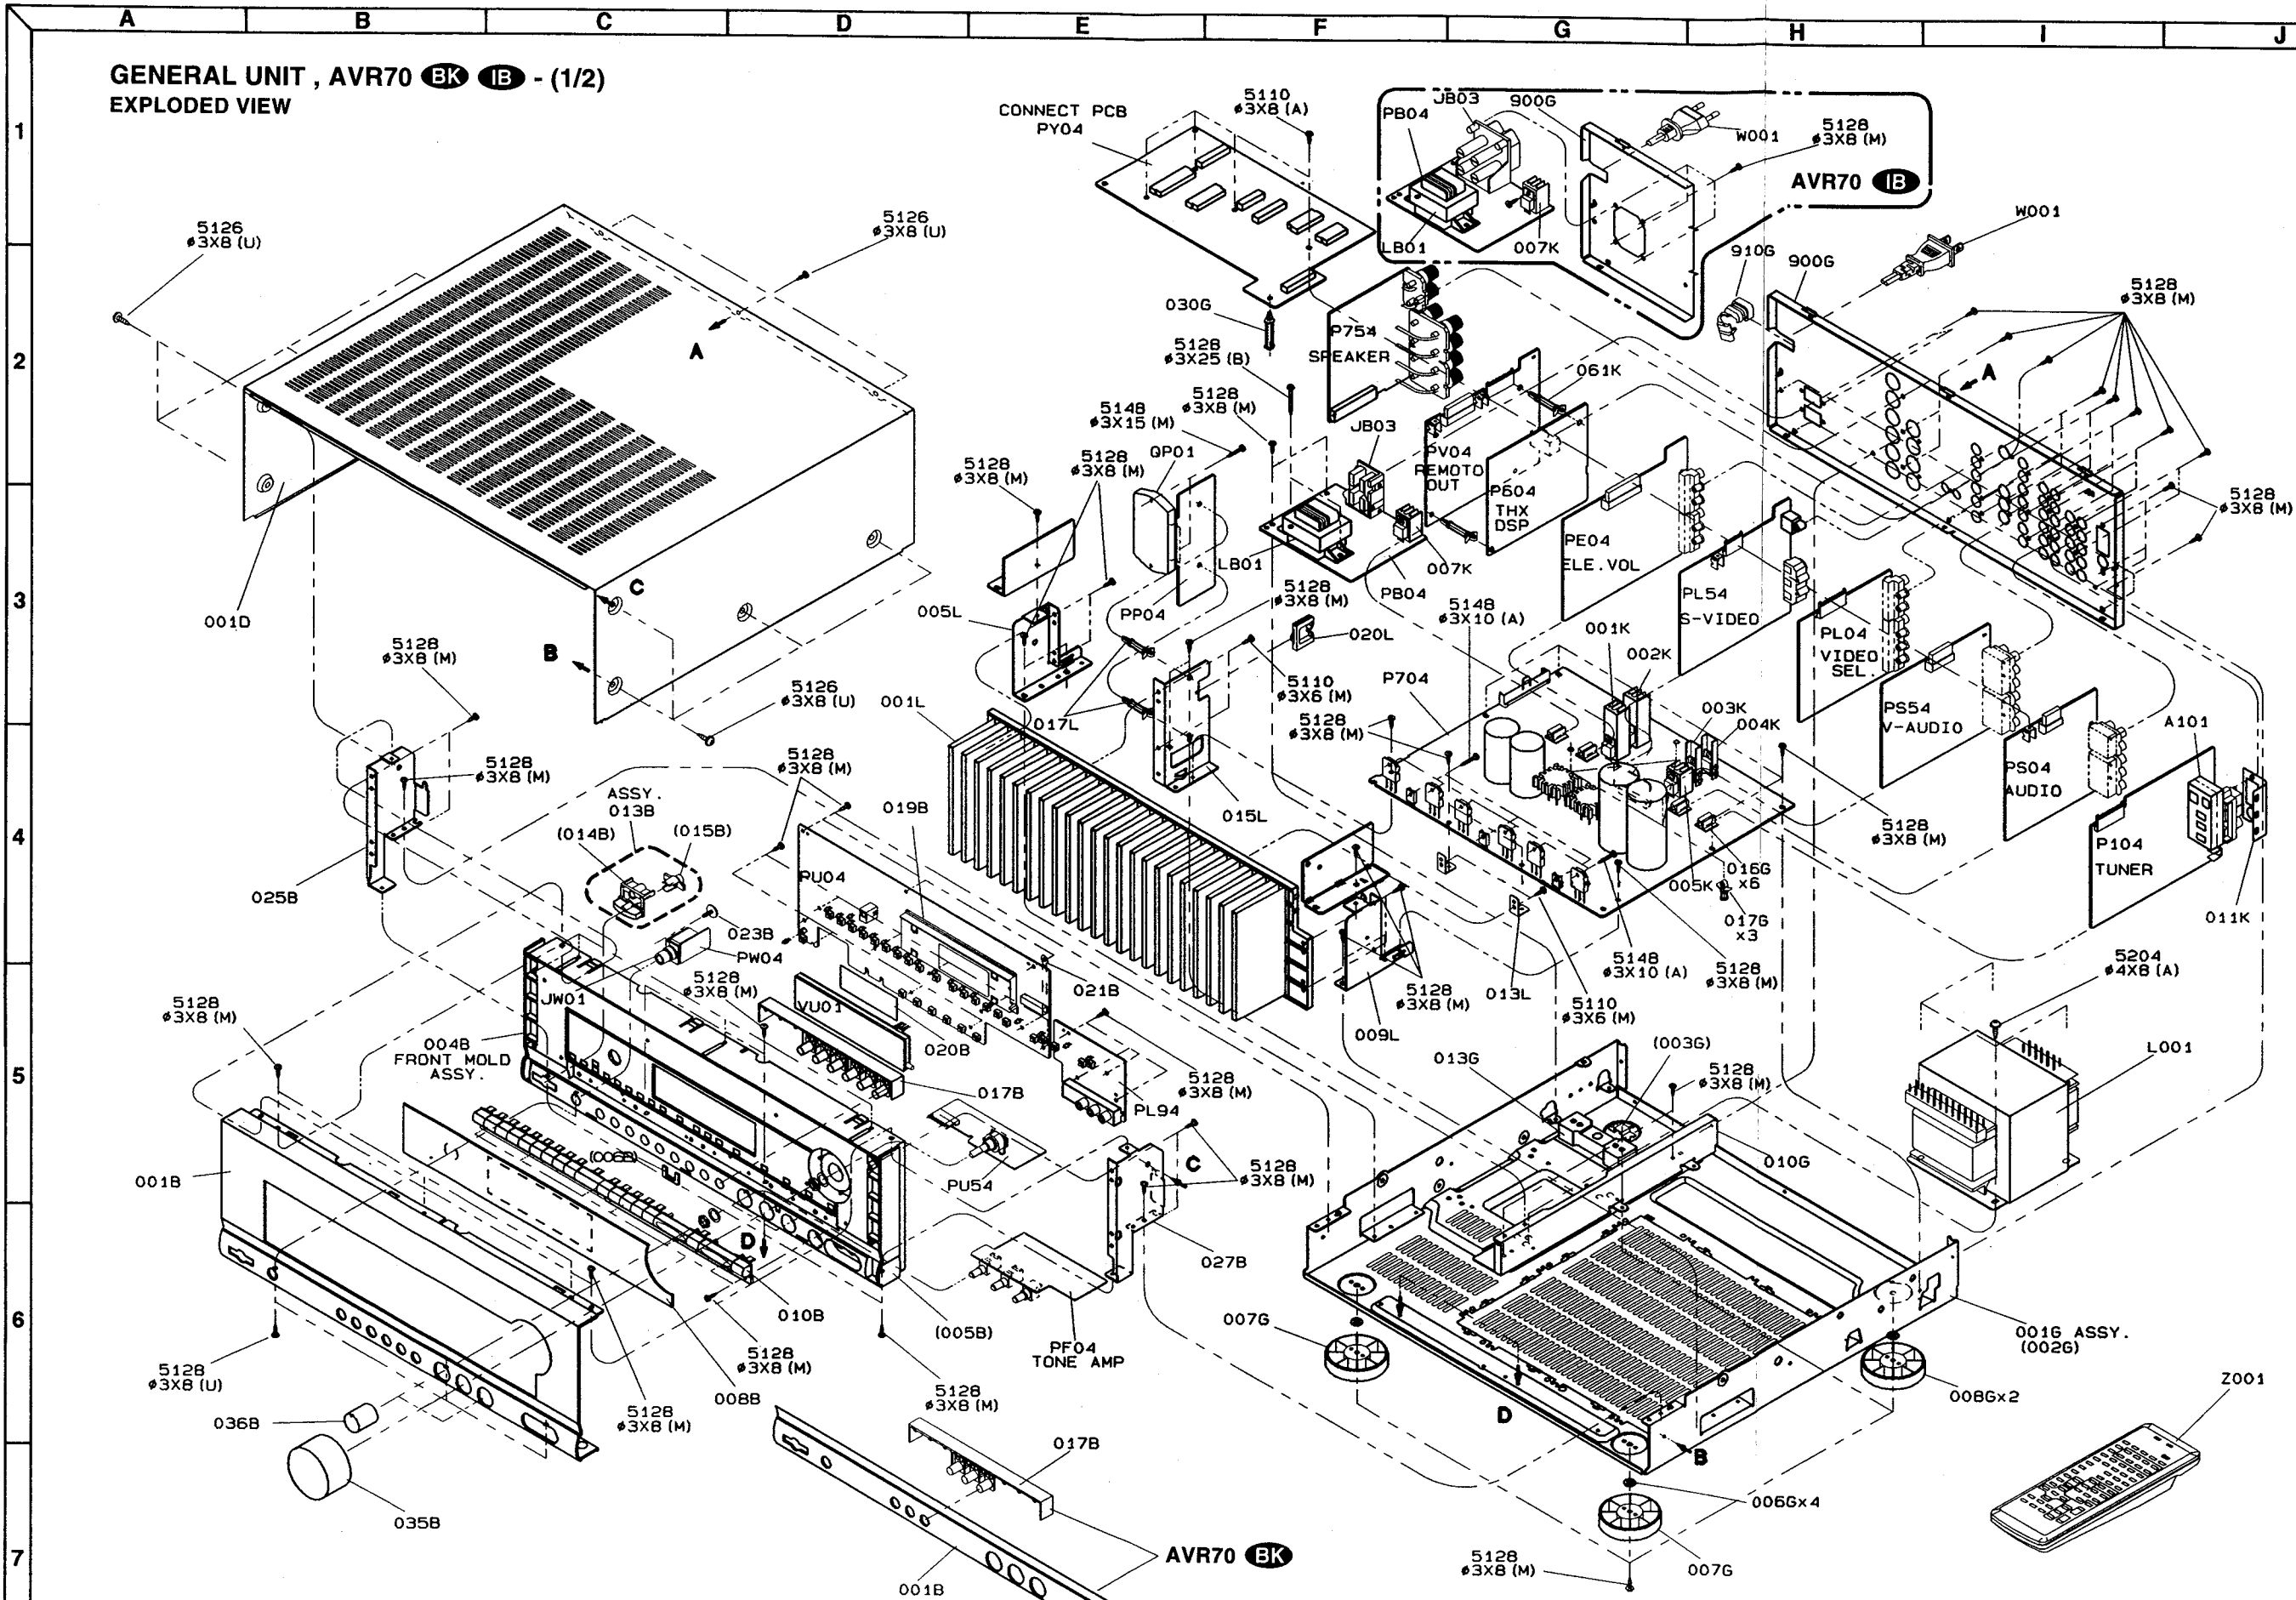


GENERAL UNIT , AVR70 BK IB - (1/2)
EXPLODED VIEW

CONNECT PCB
 PY04


1
 2
 3
 4
 5
 6
 7

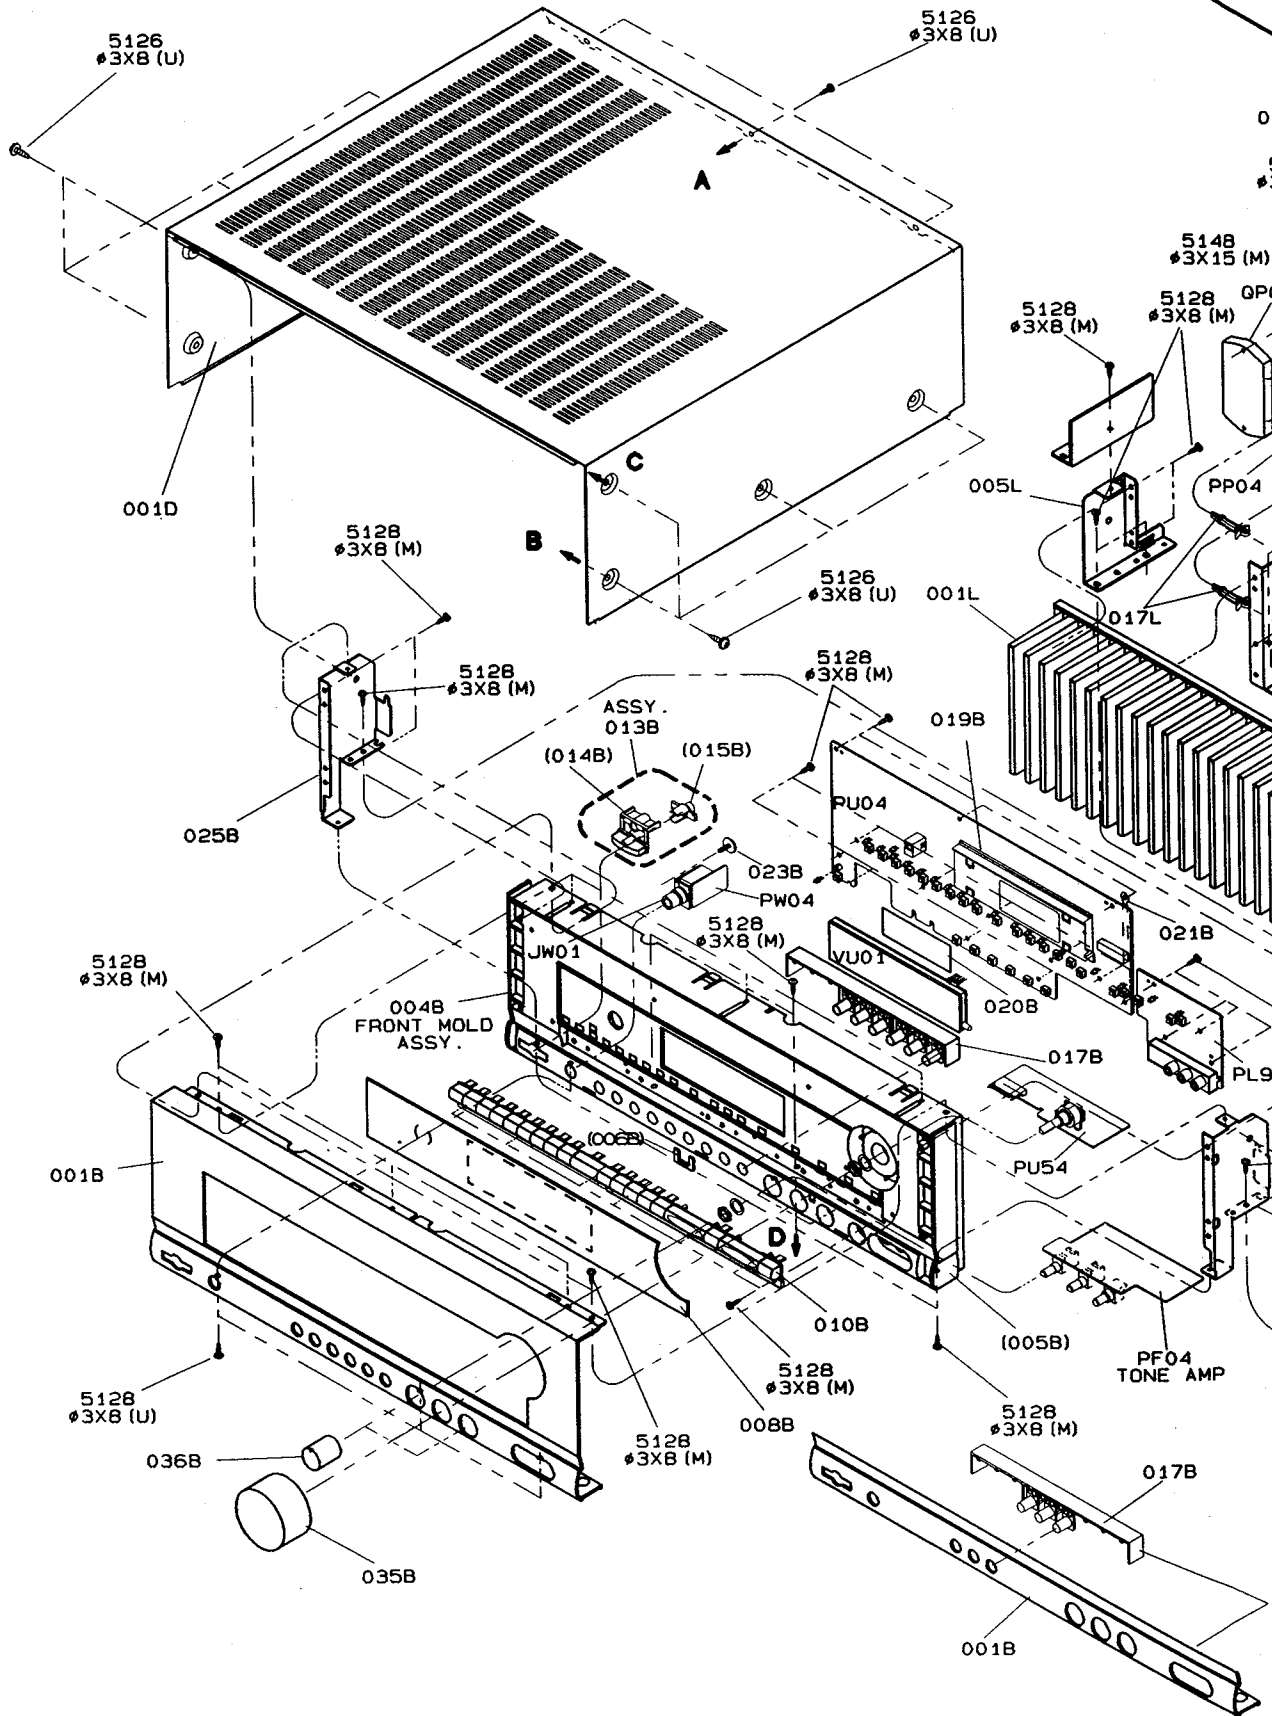

GENERAL UNIT, AVR70MK II BK /AVR70 IB [MOMS]- (2/2)
EXPLODED VIEW

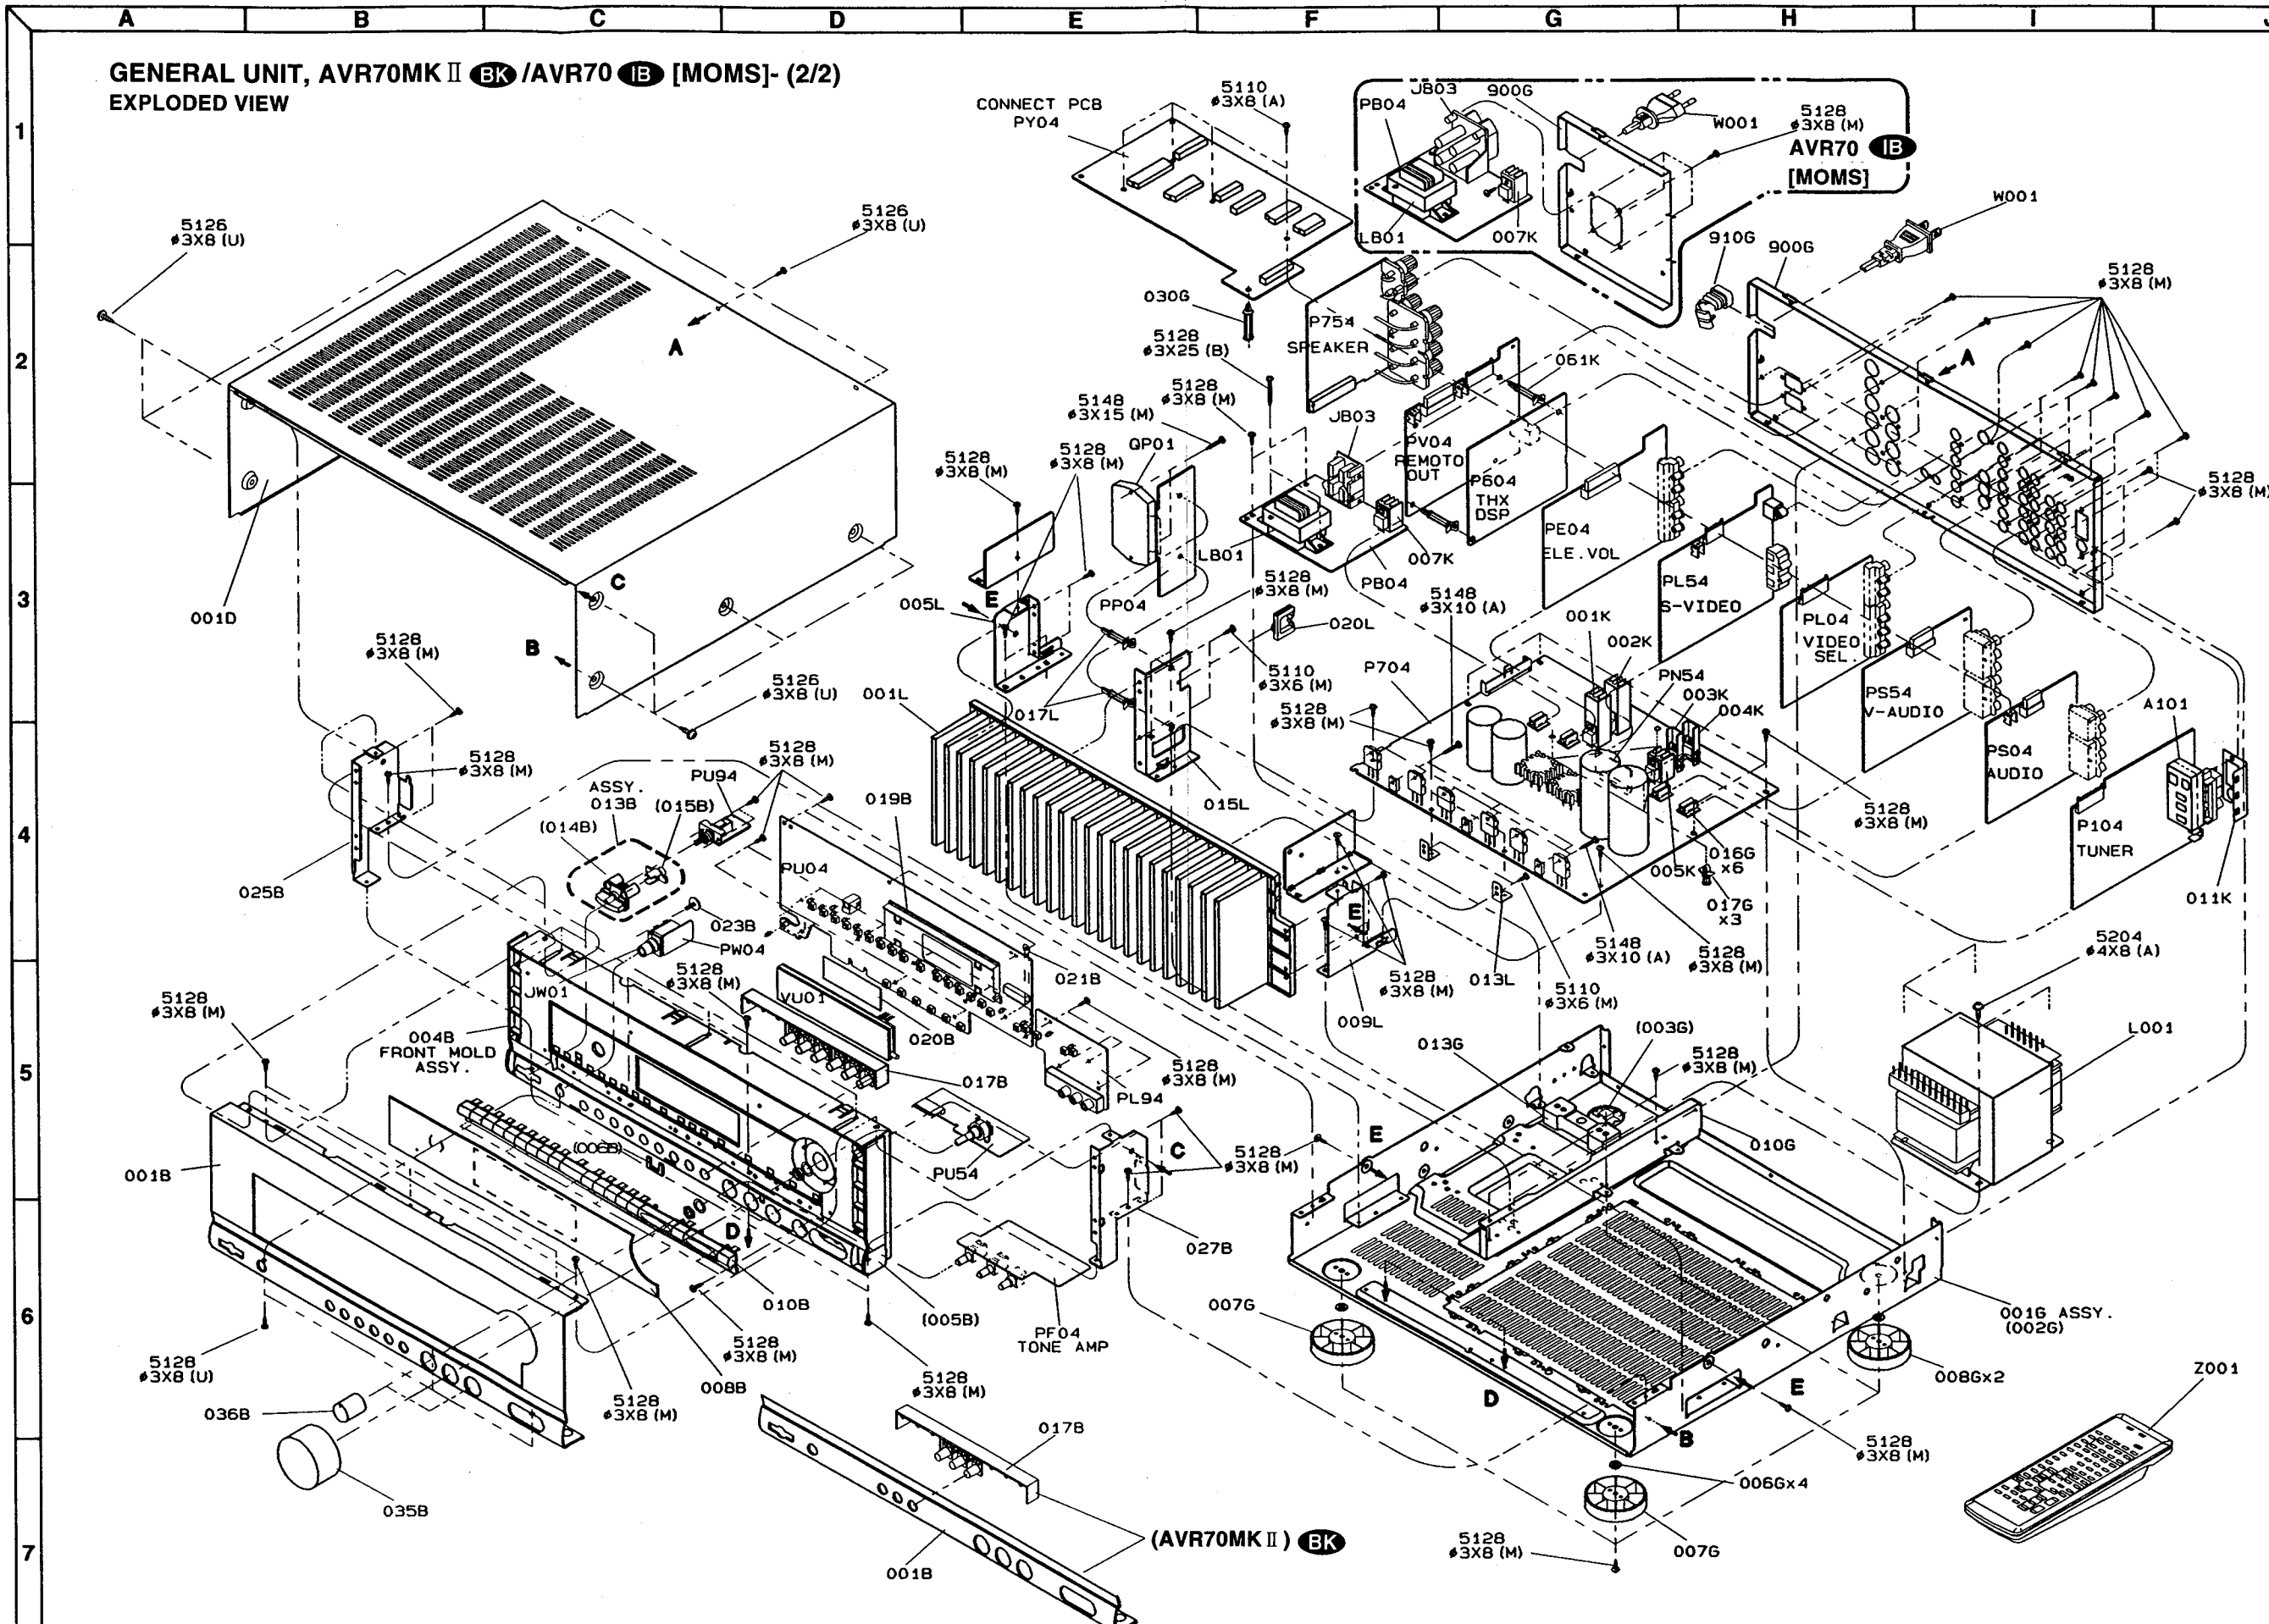


GENERAL UNIT, AVR70MK II (BK) /AVR70 (B) [MOMS]- (2/2)
EXPLODED VIEW

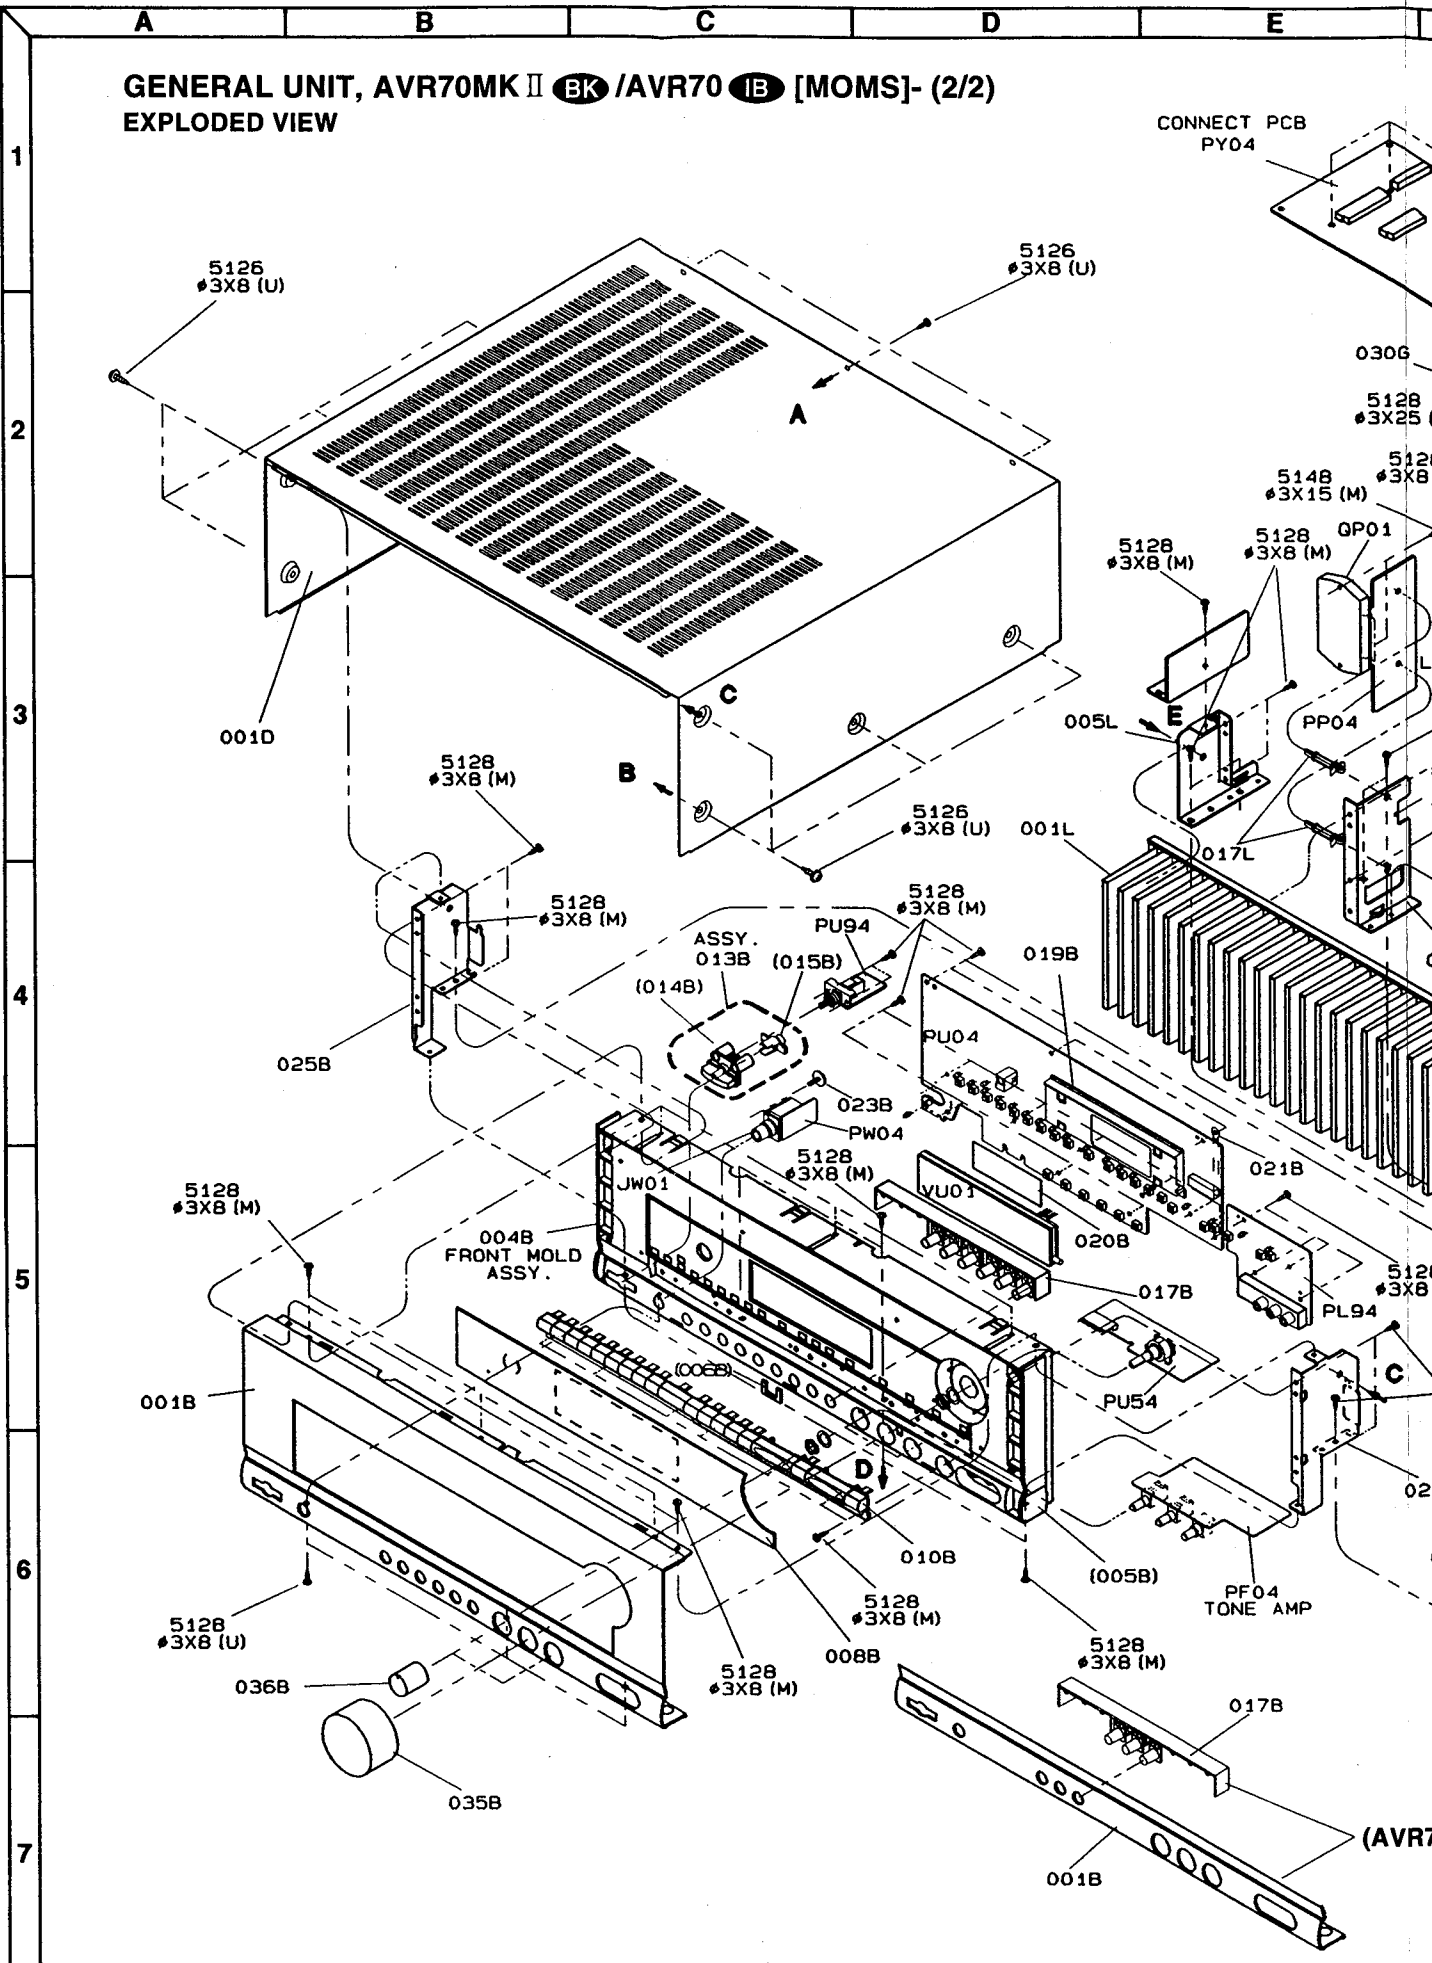


P.C. BOARDS (1)


PB04-Back-up P.C. Board , AVR70 **BK** Version

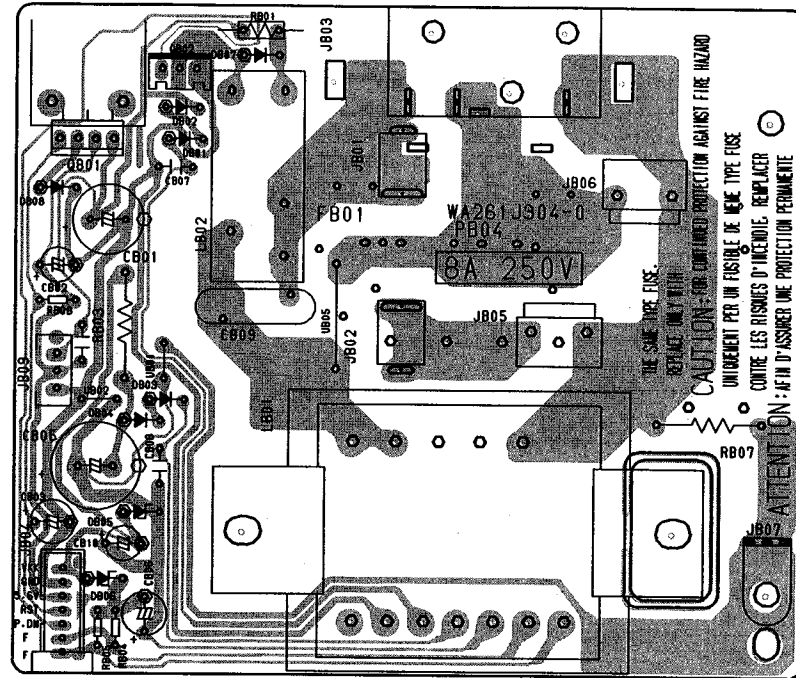


PB04-Back-up P.C. Board , AVR70 **IB** Version

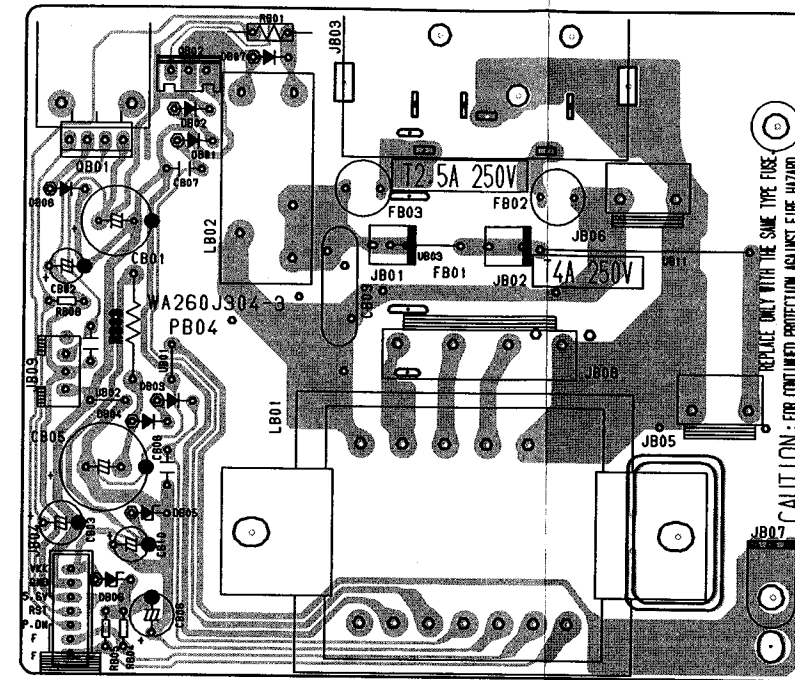

PB04-Back-up P.C. Board , AVR70MK II **BK** Version

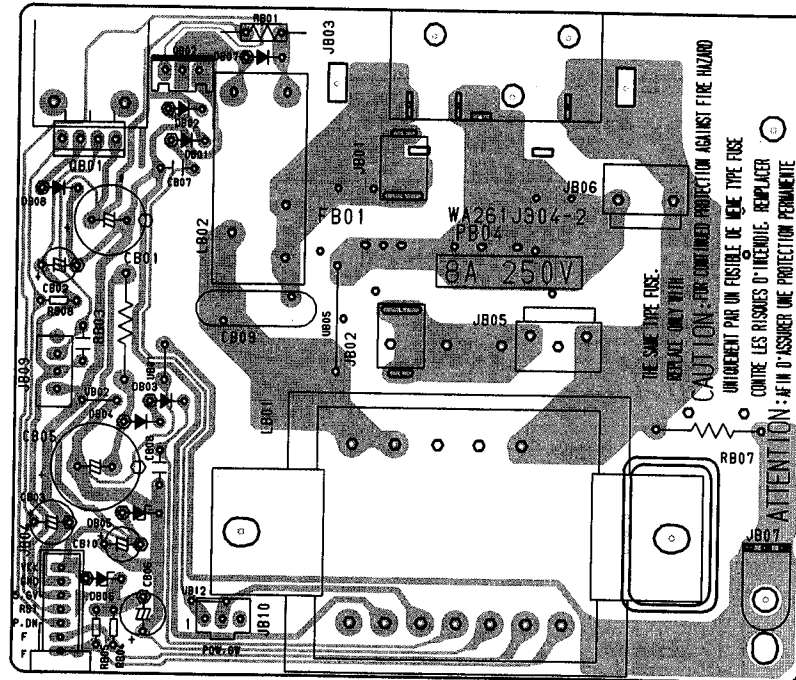


PB04-Back-up P.C. Board , AVR70 **IB** [MOMS] Version

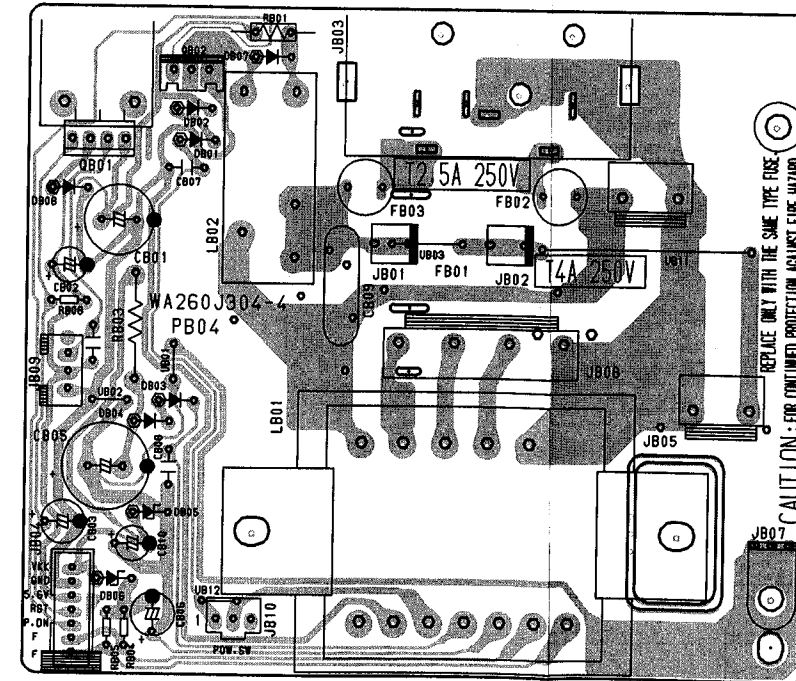


P.C. BOARDS (1)

PB04-Back-up P.C. Board , AVR70 **BK** Version

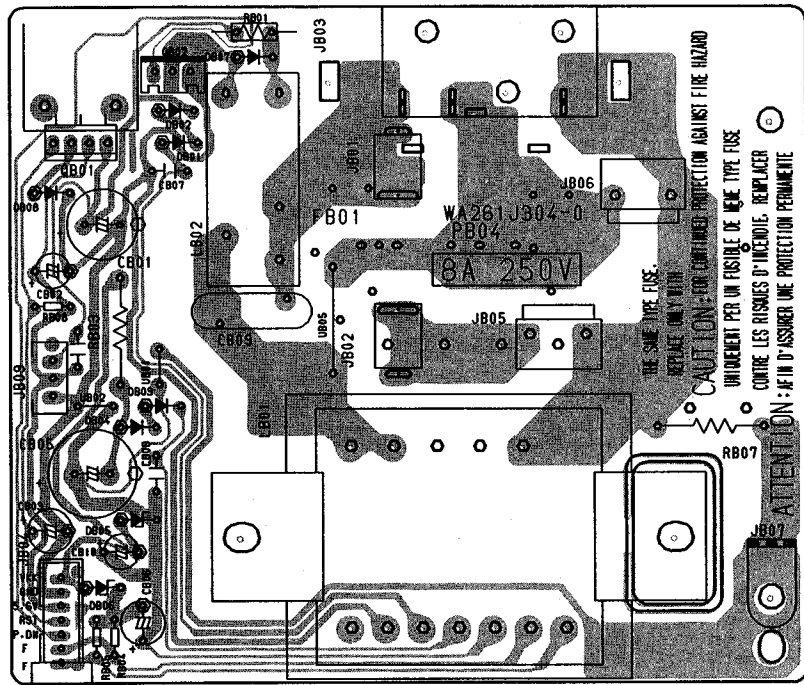


PB04-Back-up P.C. Board , AVR70MK II **BK** Version

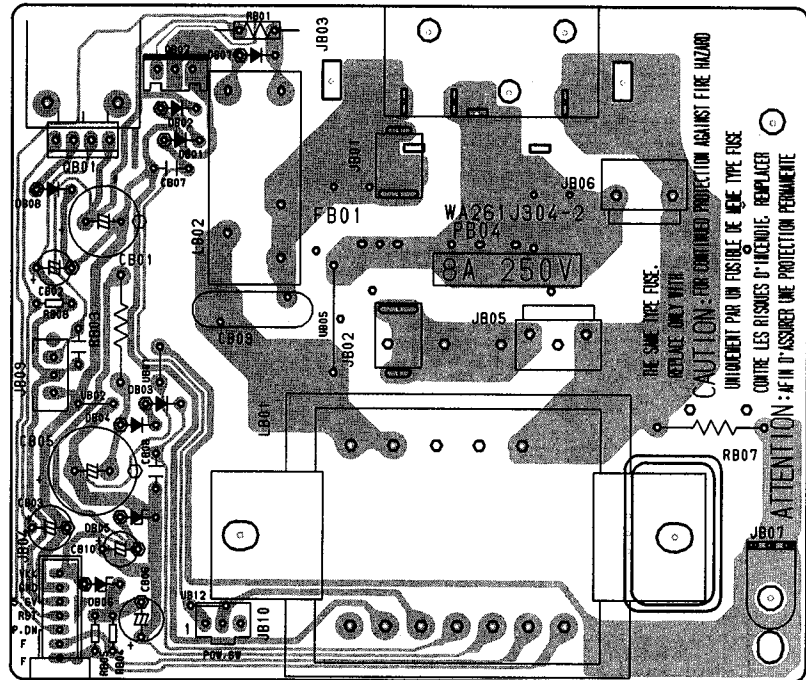


F G H I J

PB04-Back-up P.C. Board , AVR70 **IB** Version

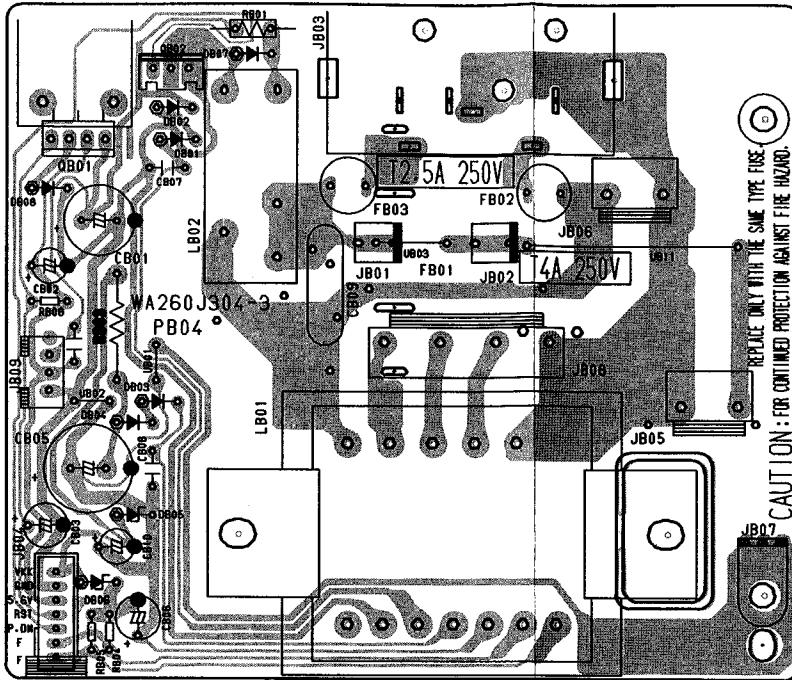


PB04-Back-up P.C. Board , AVR70 **IB** [MOMS] Version

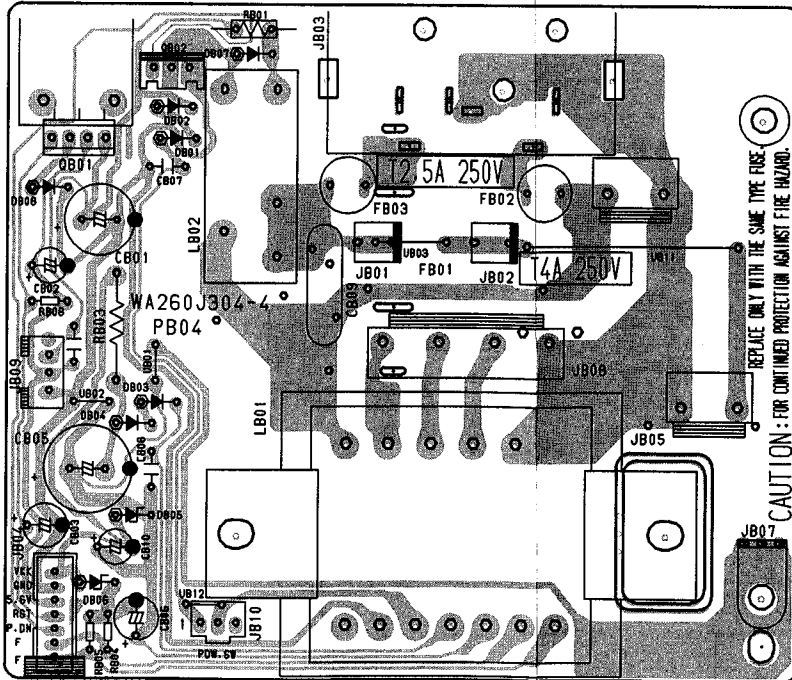


P.C. BOARDS (2)


PE04-Ele. Vol P.C. Board , AVR70 **BK** **IB** Only

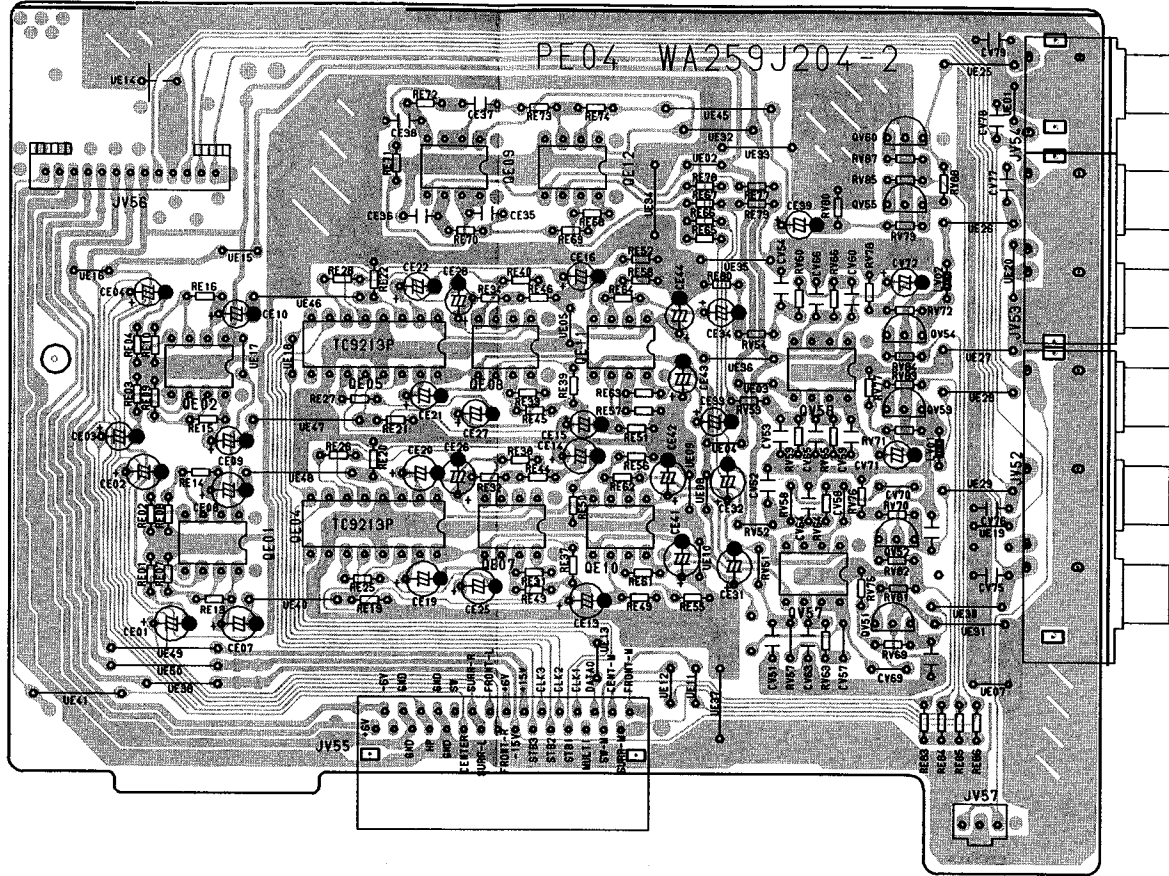


PE04-Ele. Vol P.C. Board , AVR70MK II **BK** /AVR70 **IB** [MOMS]

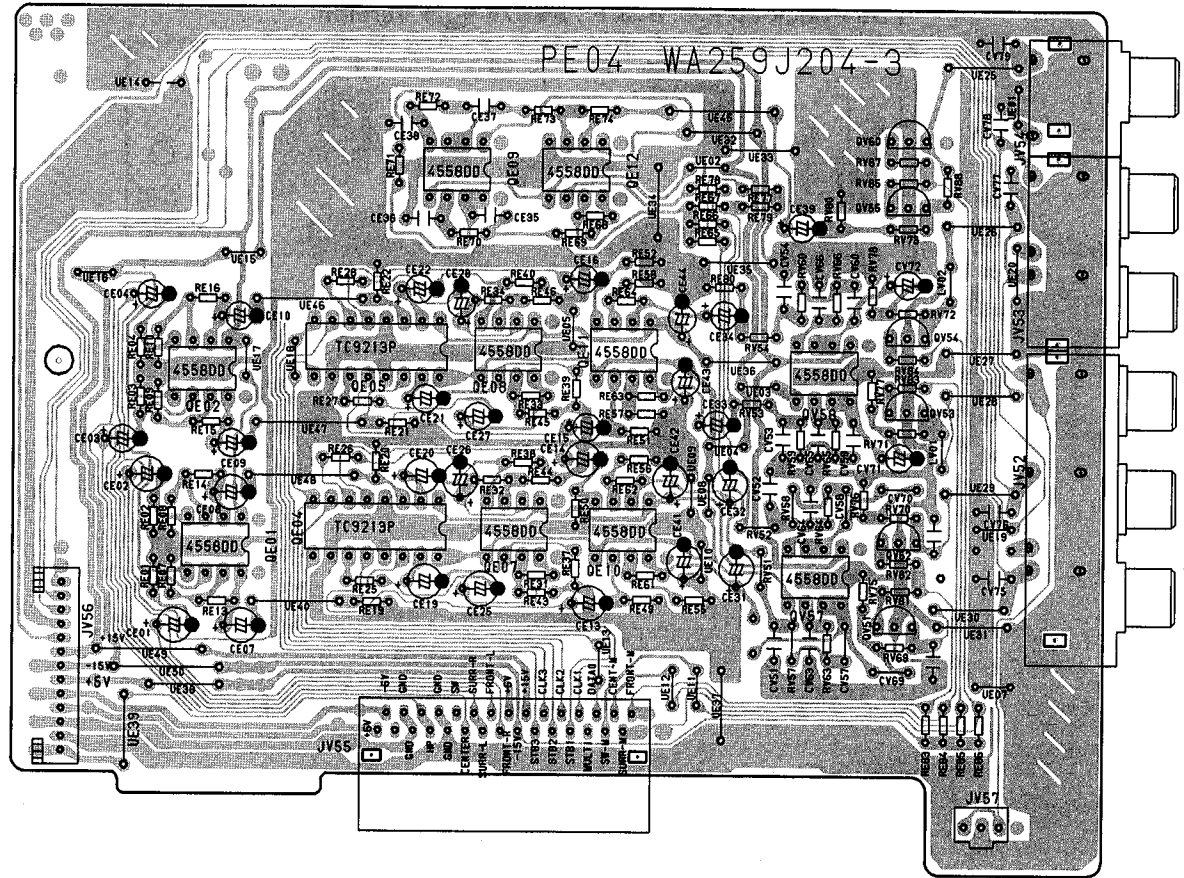

PF04-Tone P.C. Board

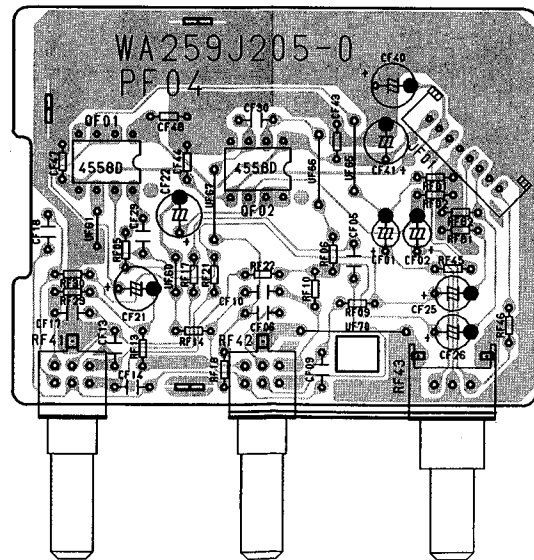

PL04-Video Selector P.C. Board

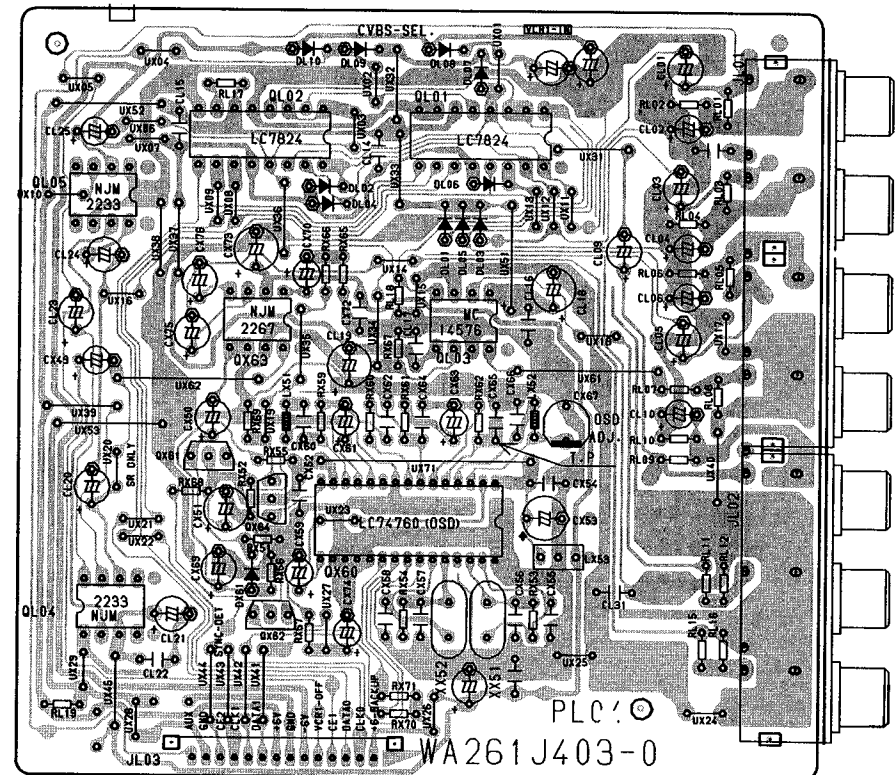

1

2

3

4


5

6


7

P.C. BOARDS (2)

PE04-Ele. Vol P.C. Board , AVR70 **BK** **B** Only

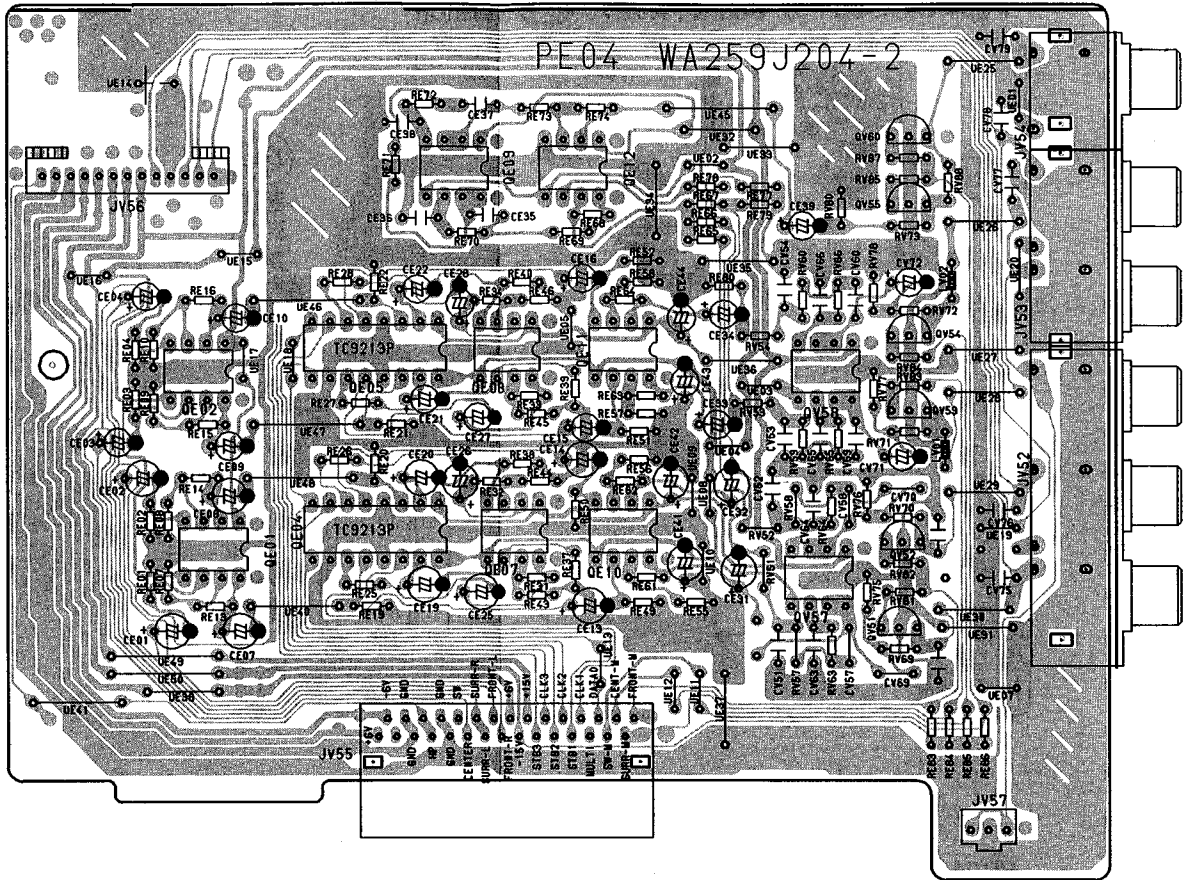


PF04-Tone P.C. Board

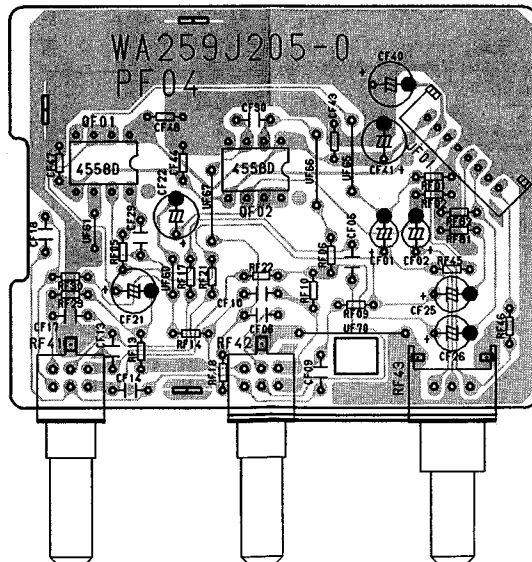


P.C. BOARD (3)


PL54-S-Video P.C. Board

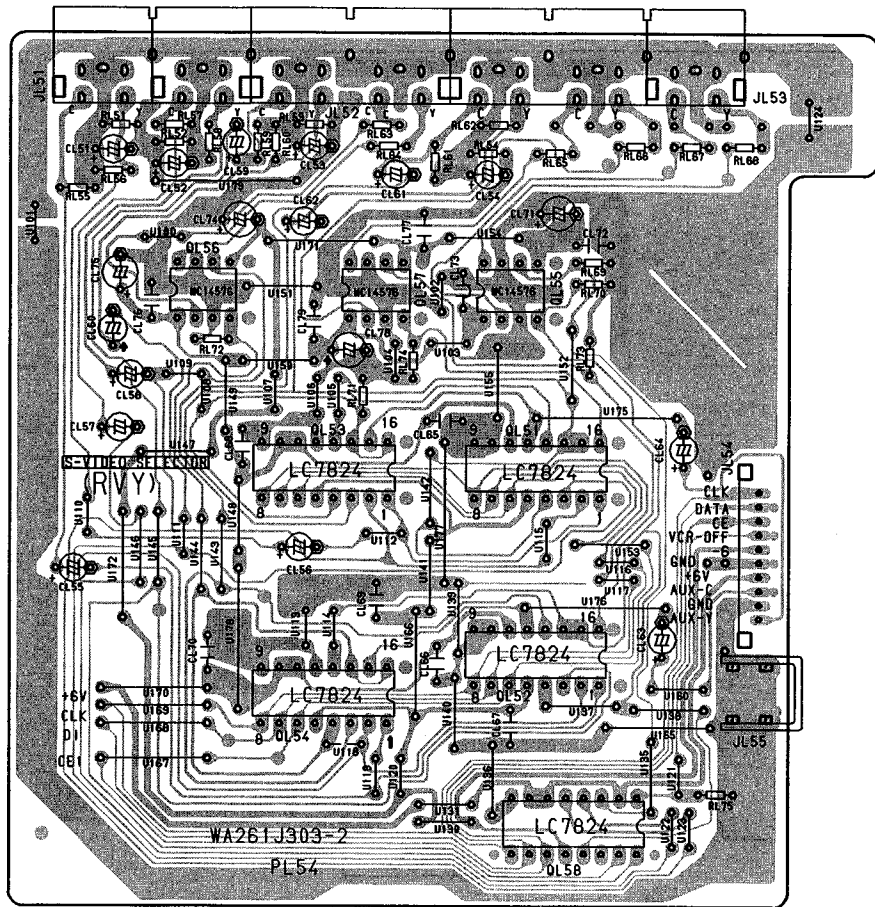


PP04-Surround Amp P.C. Board

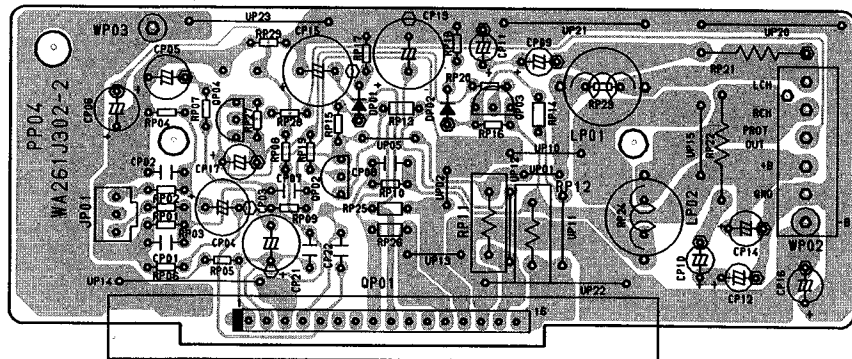


PN54-SPK Protect P.C. Board , AVR70MK II BK /AVR70 IB [MOMS]

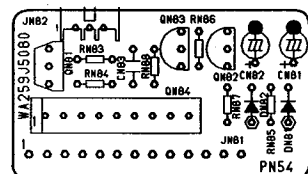

PL94-AUX In P.C. Board

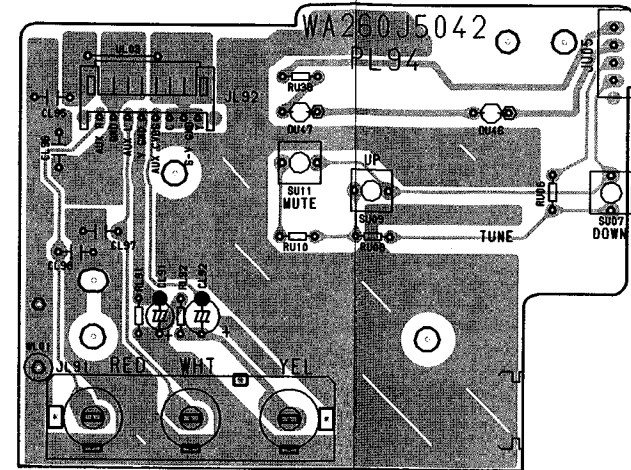


PP54-Wiring P.C. Board

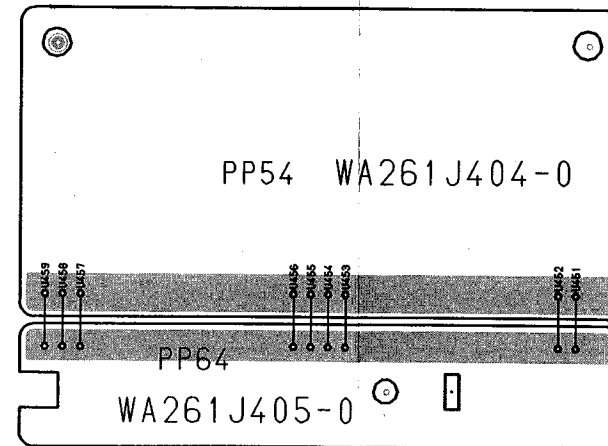

PP64-Wiring P.C. Board

PP74-Wiring P.C. Board

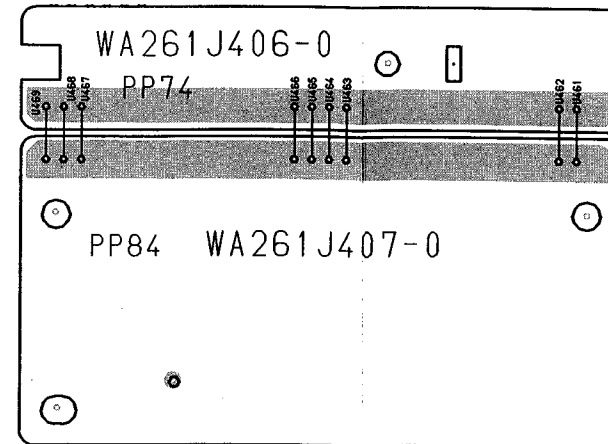


PP84-Wiring P.C. Board


1
2
3
4
5
6
7

P.C. BOARD (3)


PL54-S-Video P.C. Board

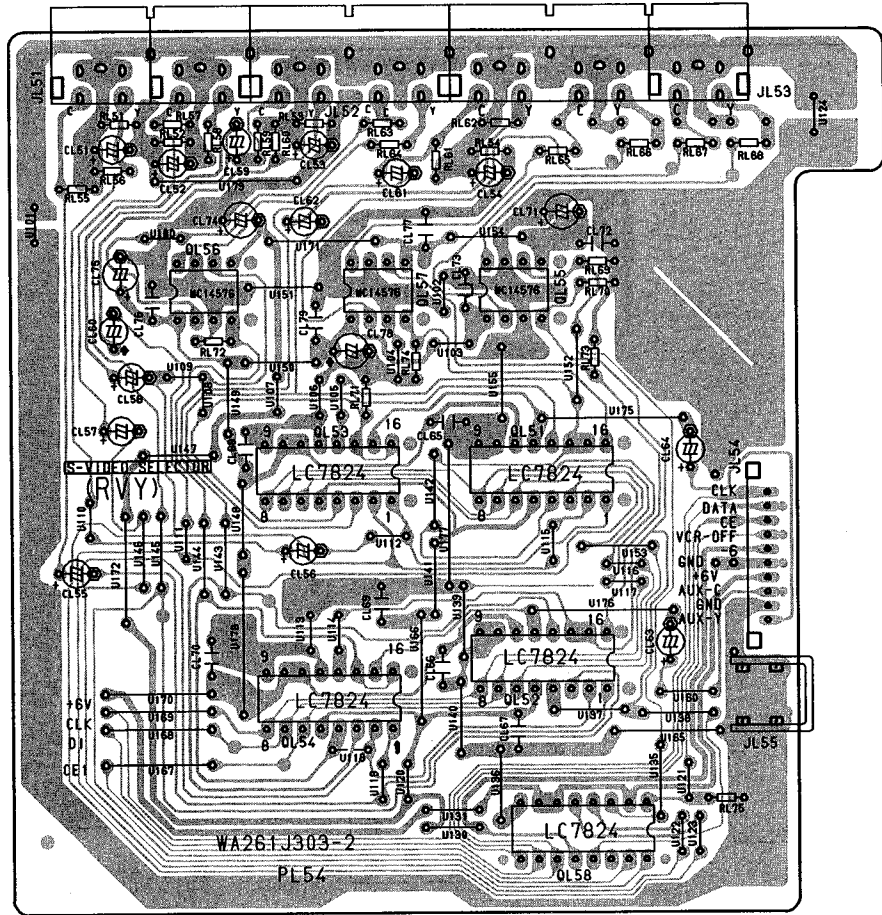

PP04-Surround Amp P.C. Board

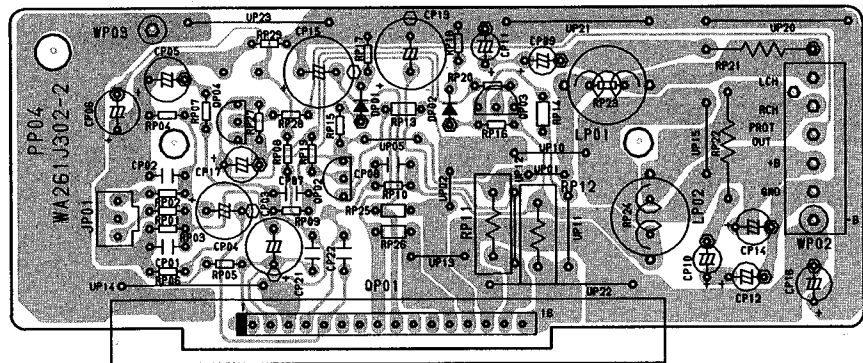

PN54-SPK Protect P.C. Board , AVR70MK II BK /AVR70 IB [MOMS]

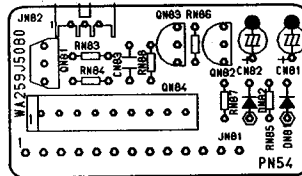

F


G

H


I

J


PL94-AUX In P.C. Board

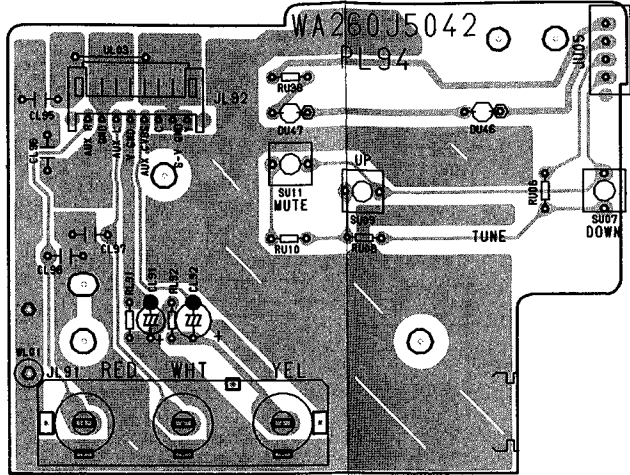

PP54-Wiring P.C. Board

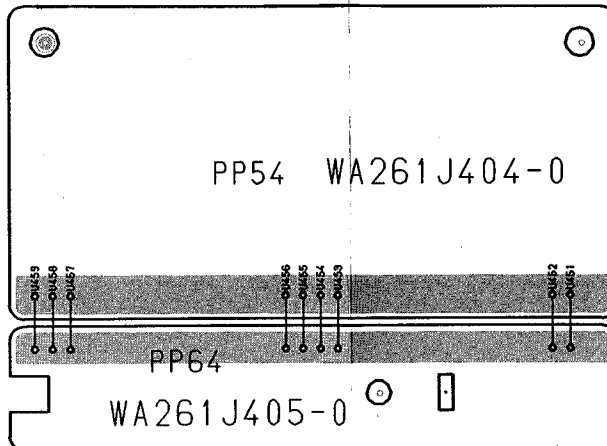

PP64-Wiring P.C. Board

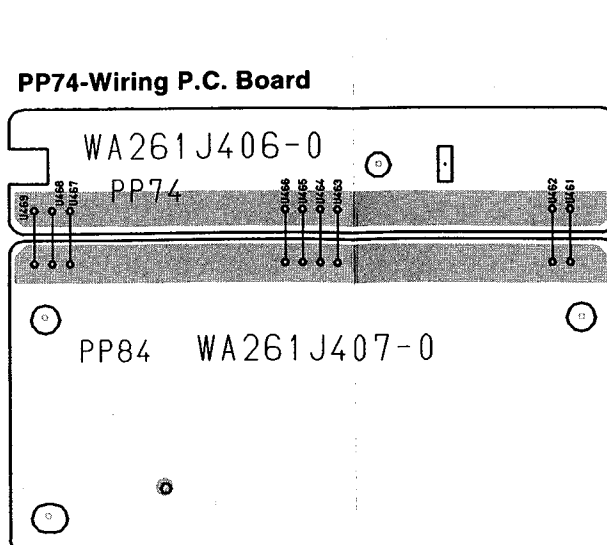

PP74-Wiring P.C. Board




PP84-Wiring P.C. Board

A B C D E F G H I J


P.C. BOARD (4)

1
2
3
4
5
6
7

PS04-Audio Function P.C. Board

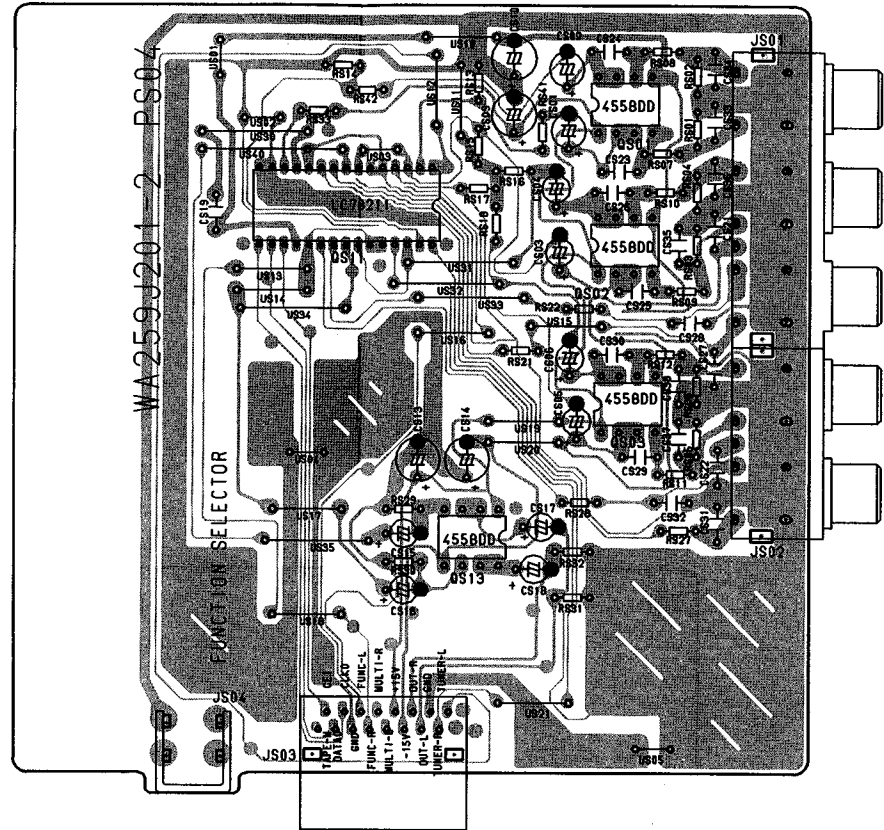


PS54-V-Audio Function P.C. Board

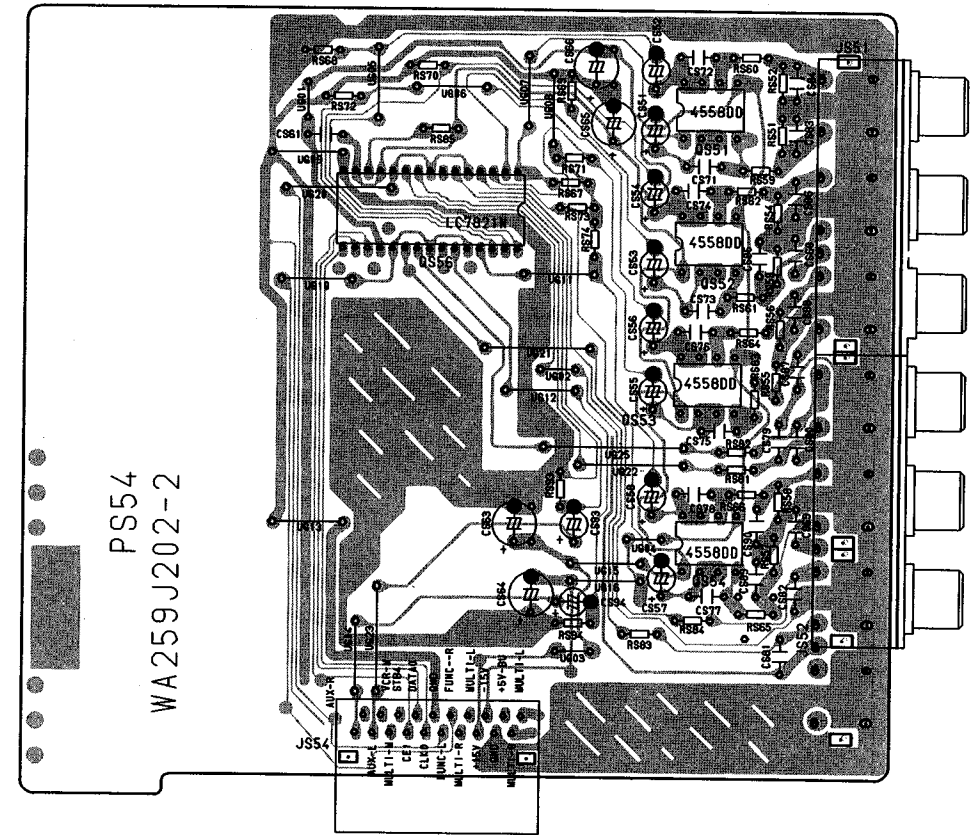

P.C. BOARD (4)

PS04-Audio Function P.C. Board

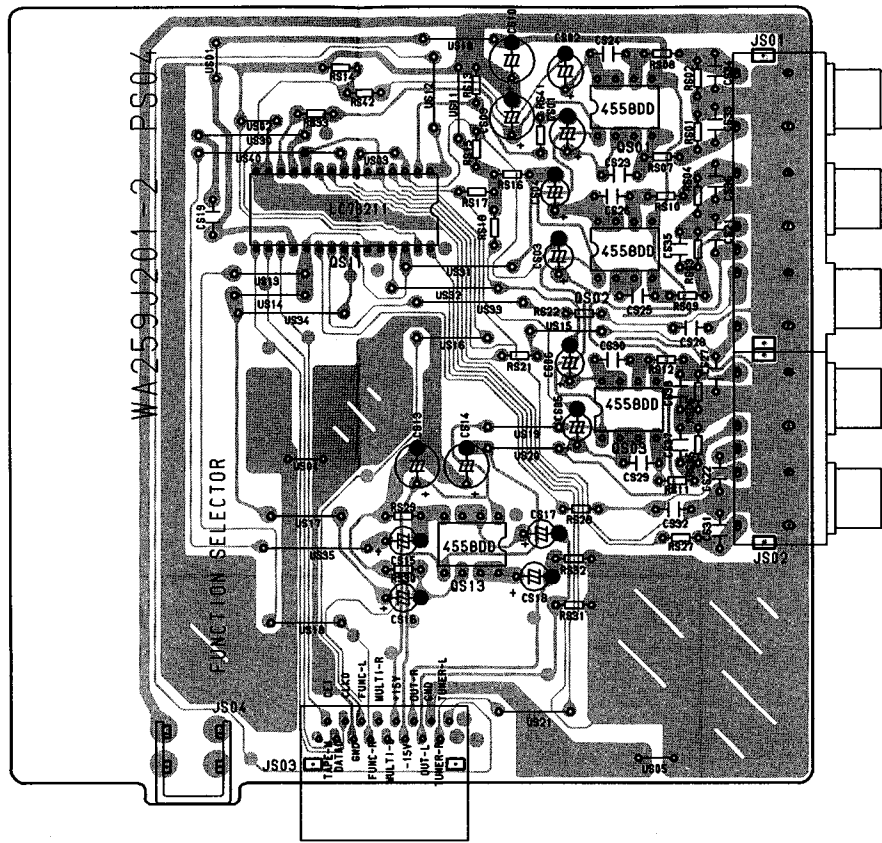

1

2

3

4


5

6


7

P.C. BOARD (5)

PU04-Front P.C. Board , AVR70 **BK** **IB** Only

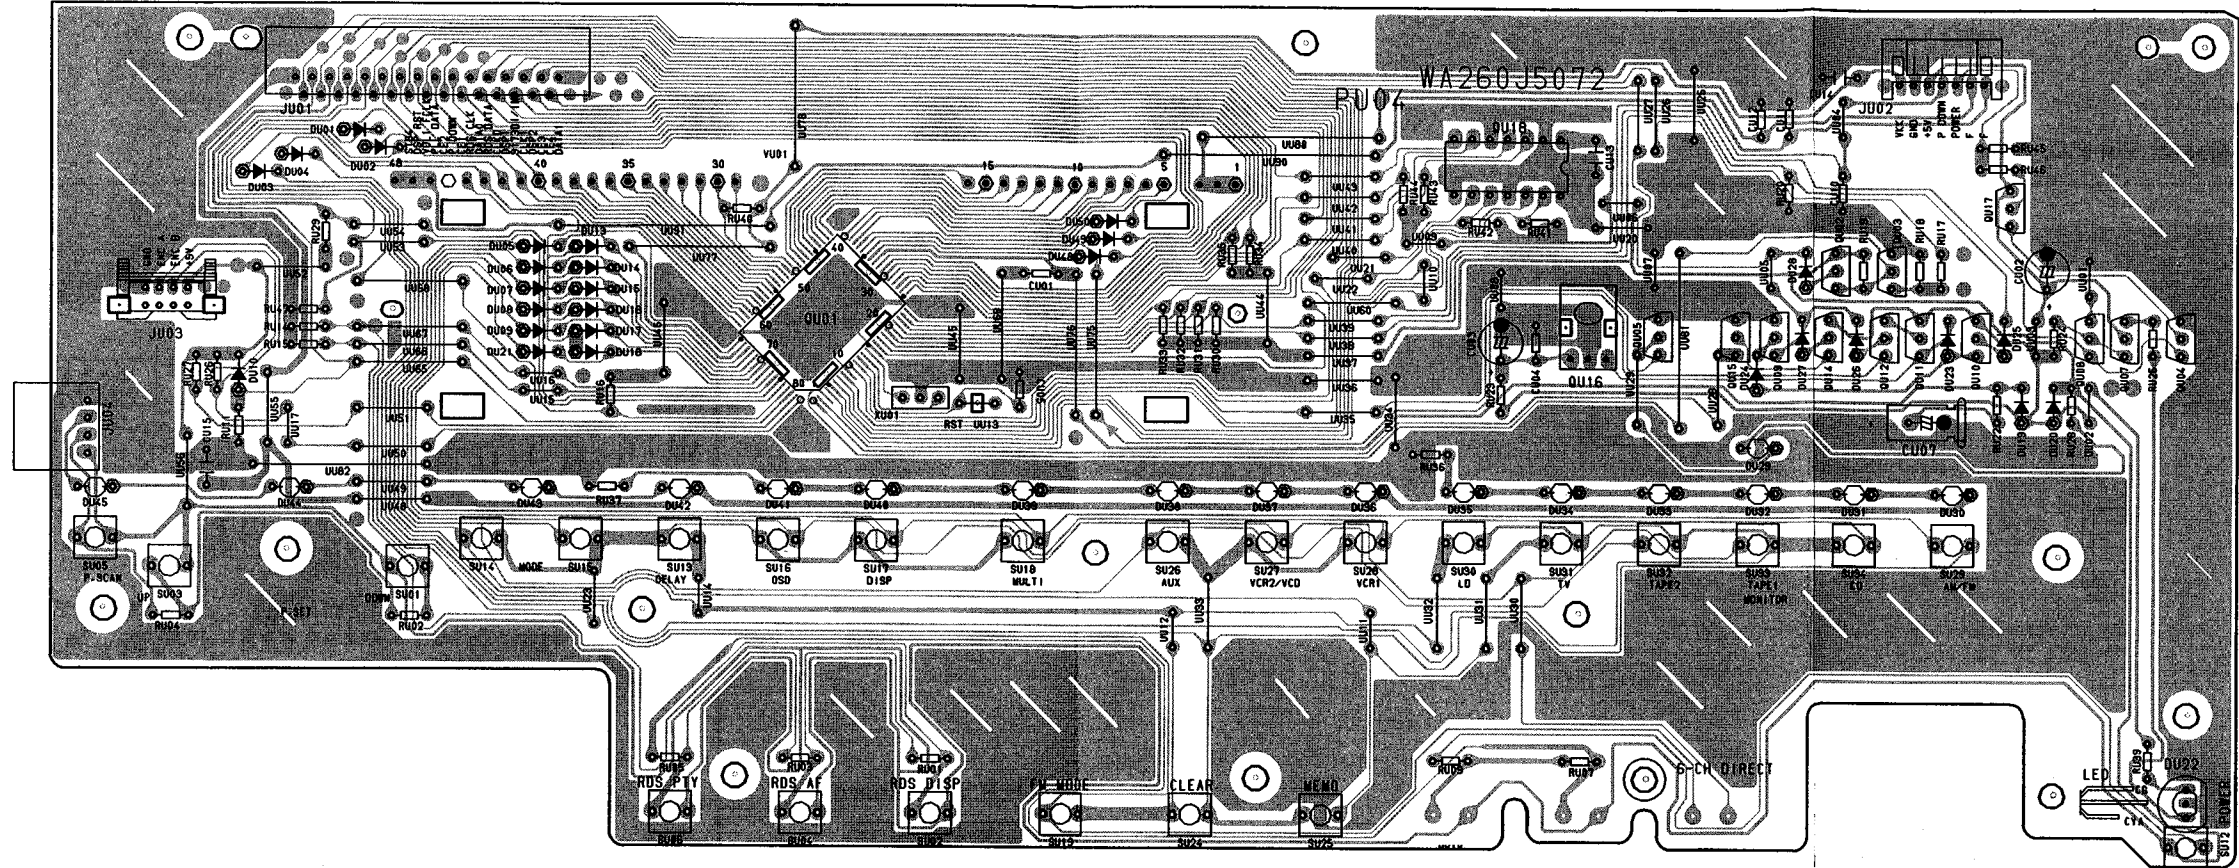


PU04-Front P.C. Board , AVR70MK II **BK** /AVR70 **IB** [MOMS]

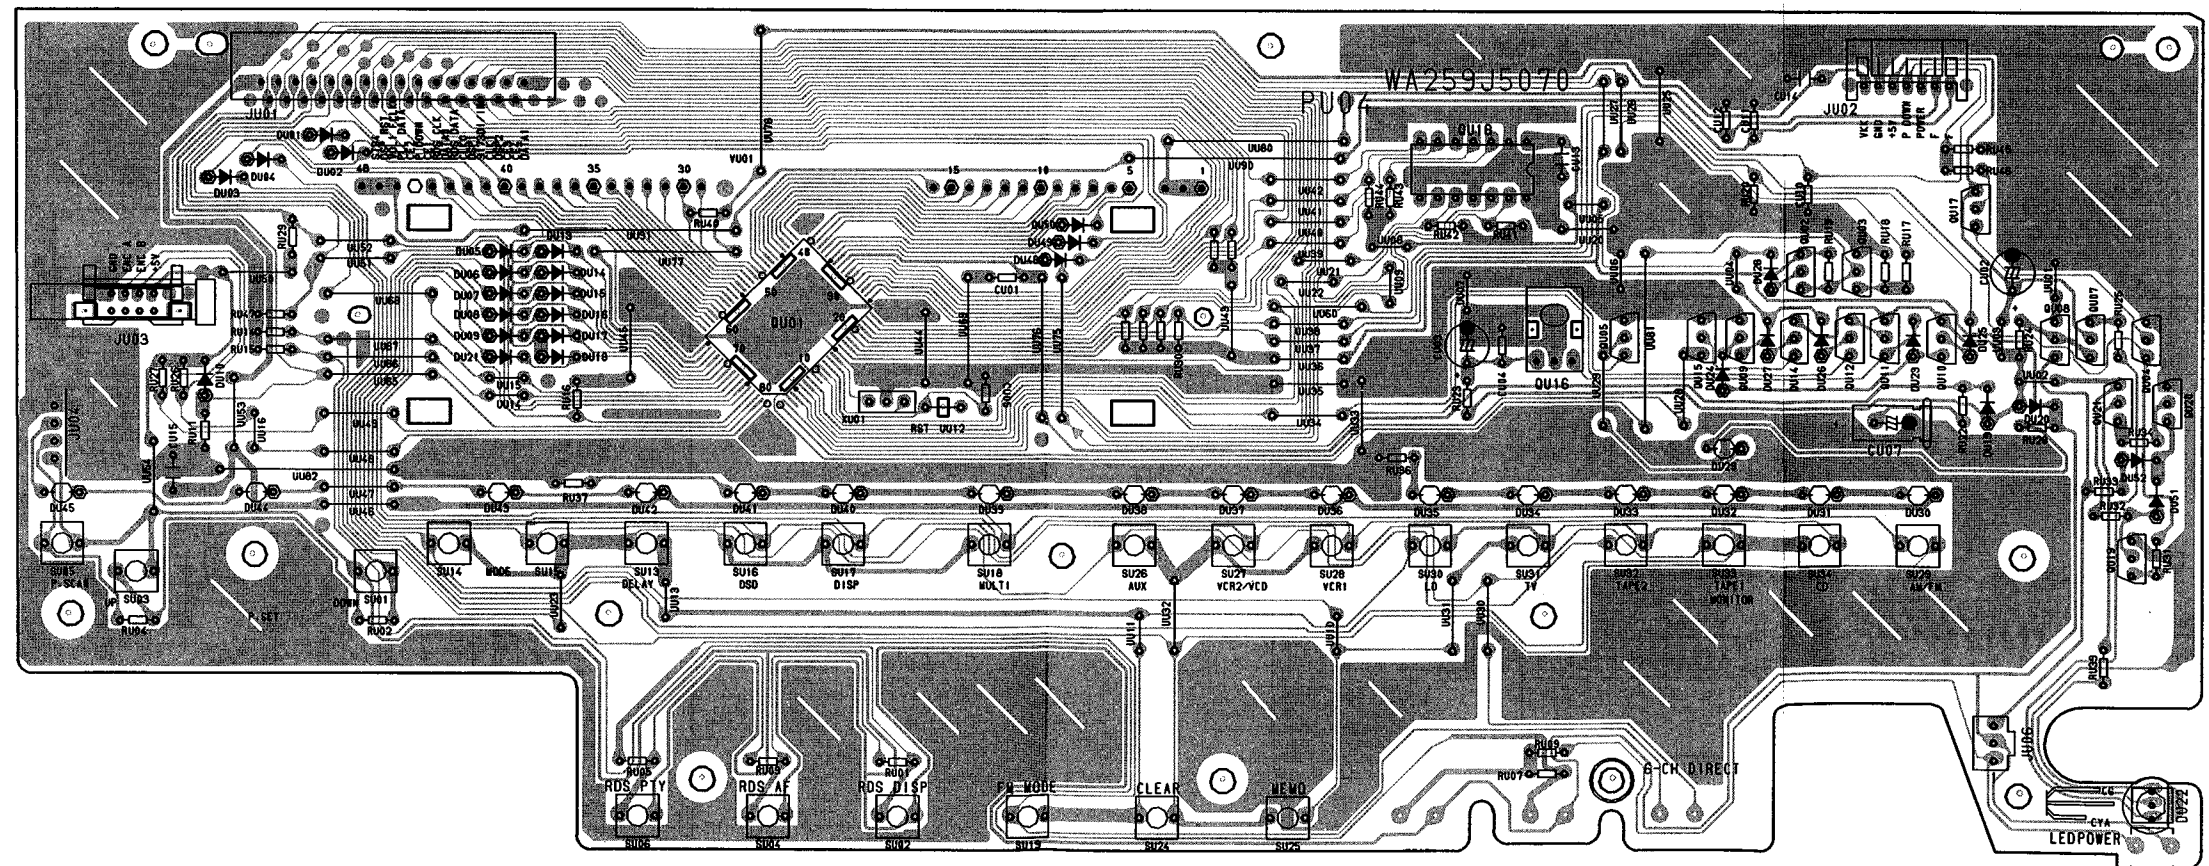


P.C. BOARD (5)

PU04-Front P.C. Board , AVR70 **BK** **IB** Only

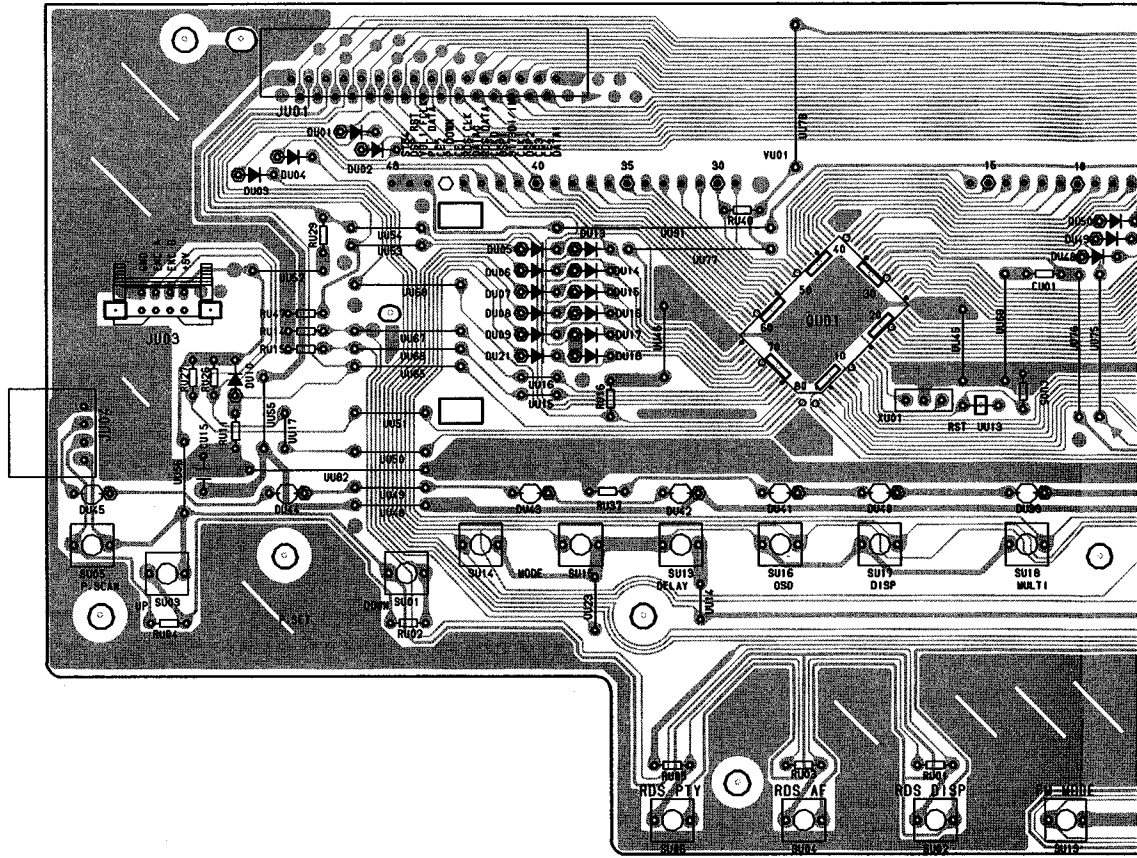

PU04-Front P.C. Board , AVR70MK II **BK** /AVR70 **IB** [MOMS]

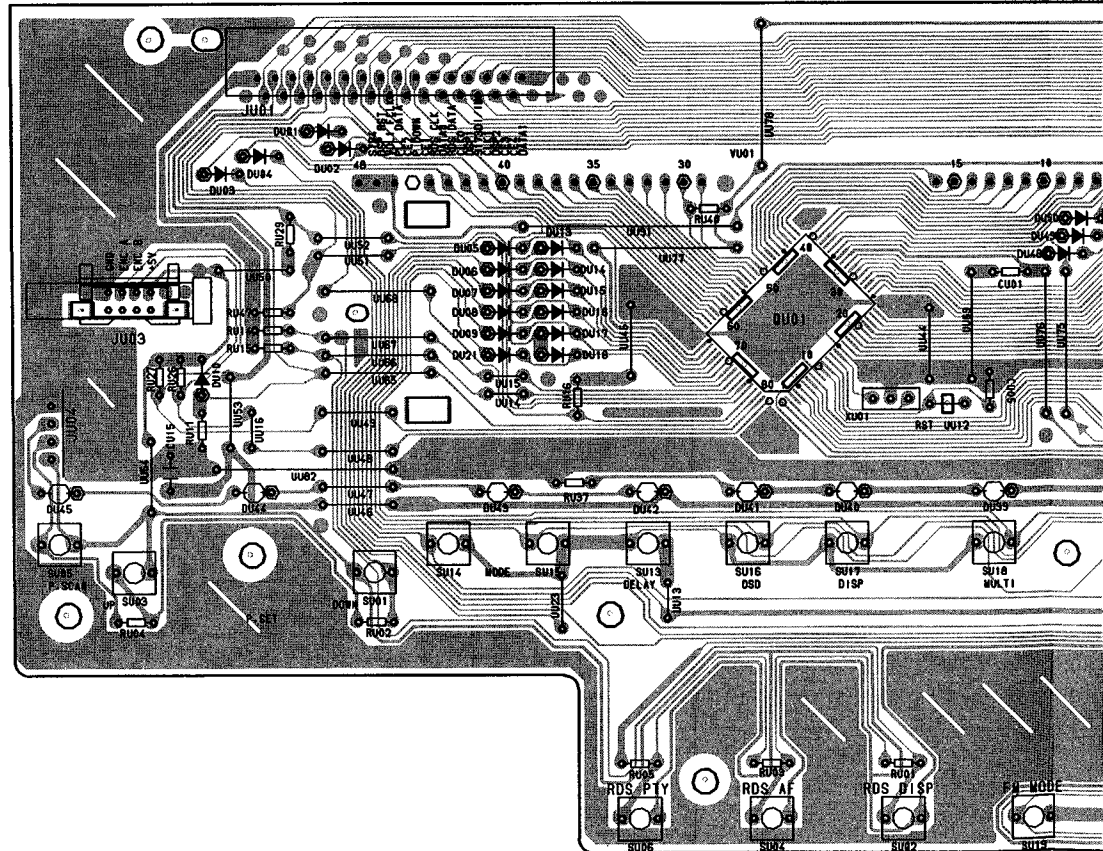



F

G

H


I

J

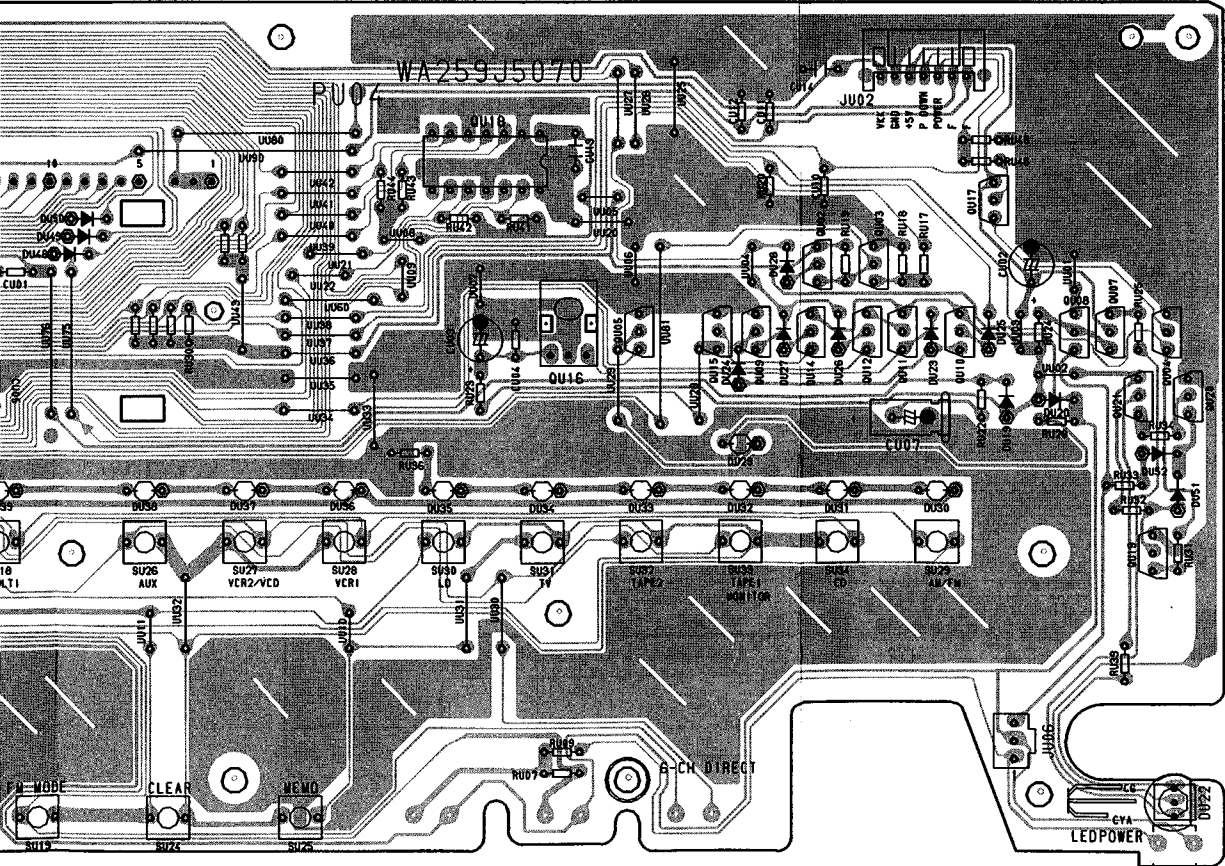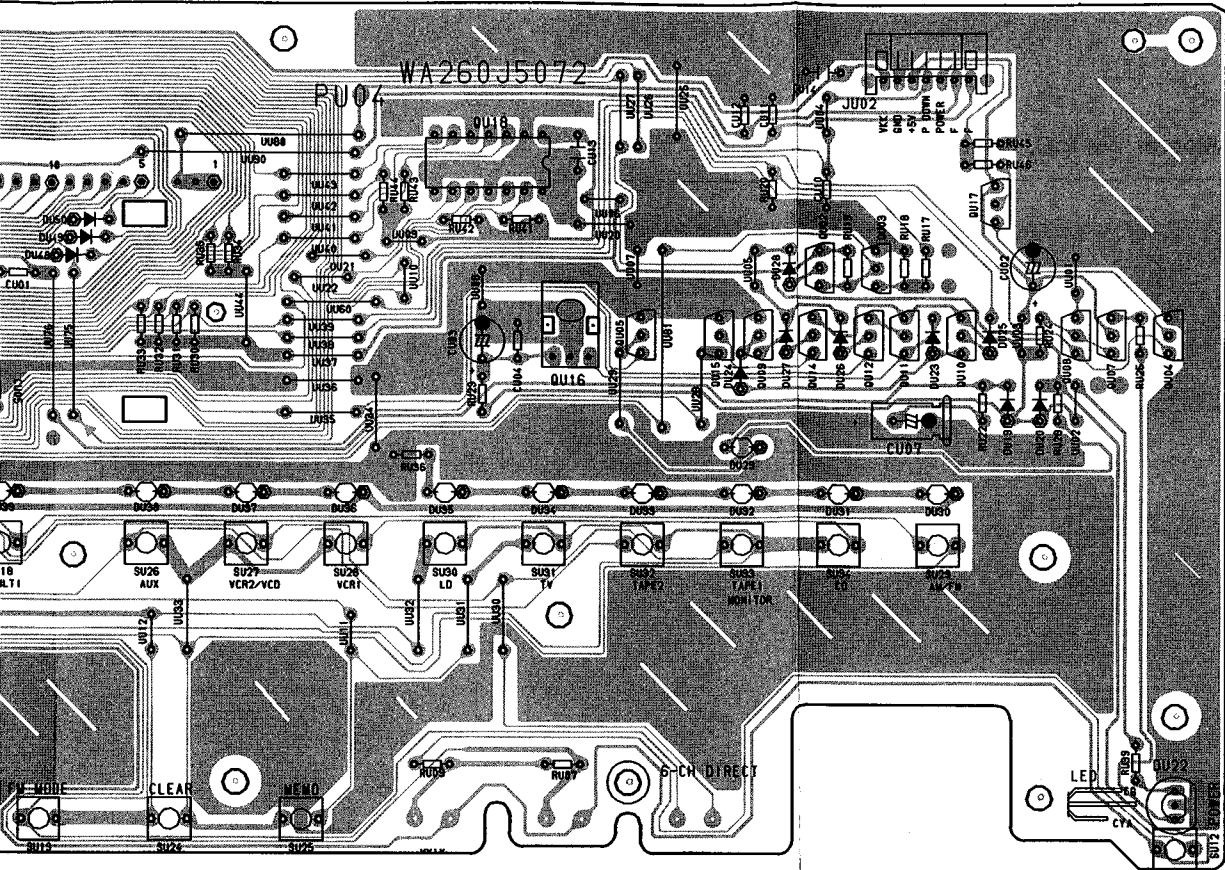


P.C. BOARD (6)


PU54-Master Vol P.C. Board

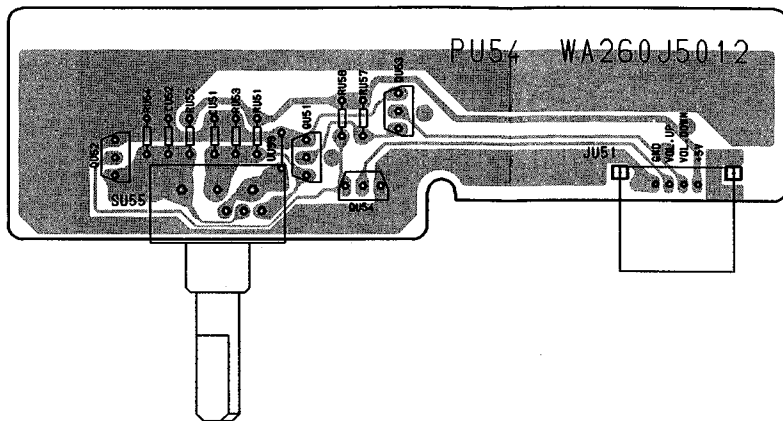

PU94-Power SW P.C. Board
AVR70MK II BK /AVR70 IB

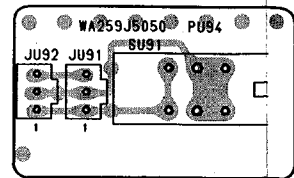

PV04-Remote Out P.C. Board

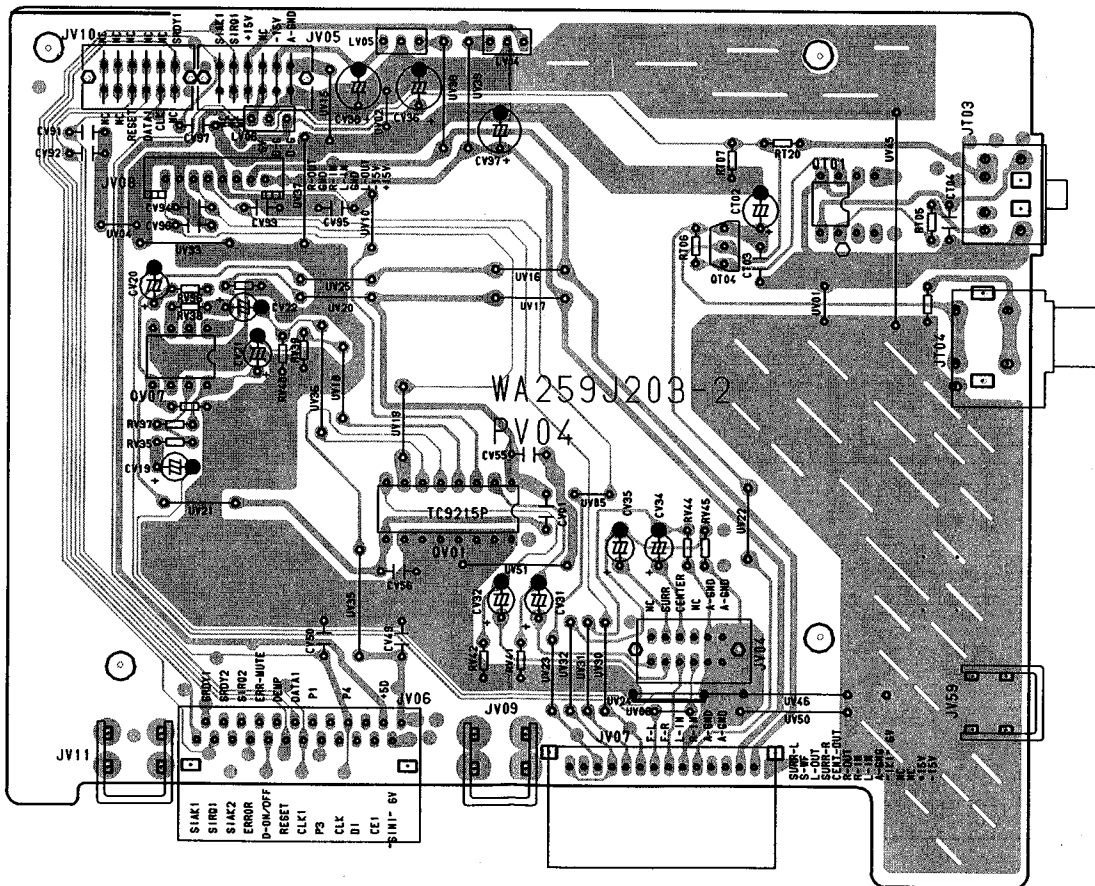


PW04




- SIAK1
- SIAK2
- SIAK3
- ERROR
- D-ON/OFF
- RESET
- CE1
- PS
- DI
- CE1
- SIN1-EV

P.C. BOARD (7)

P104-Tuner P.C. Board

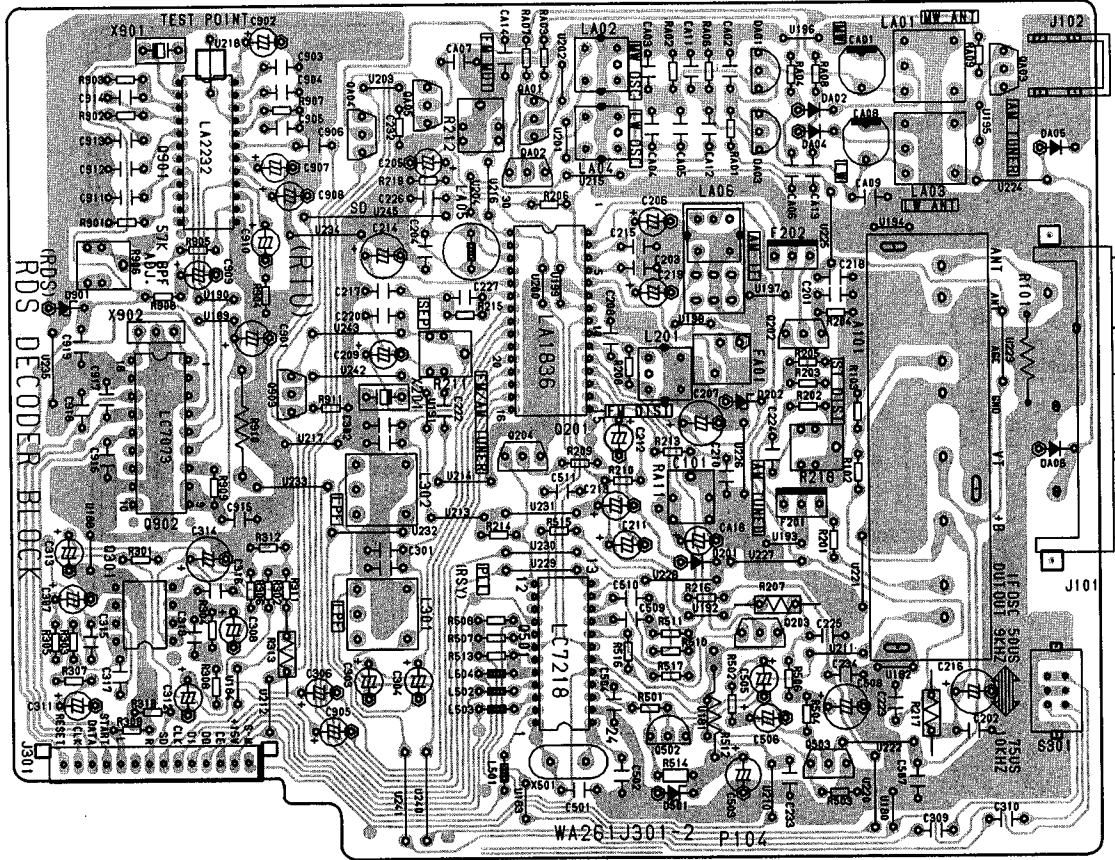

P604-THX Pro-Logic DSP P.C. Board

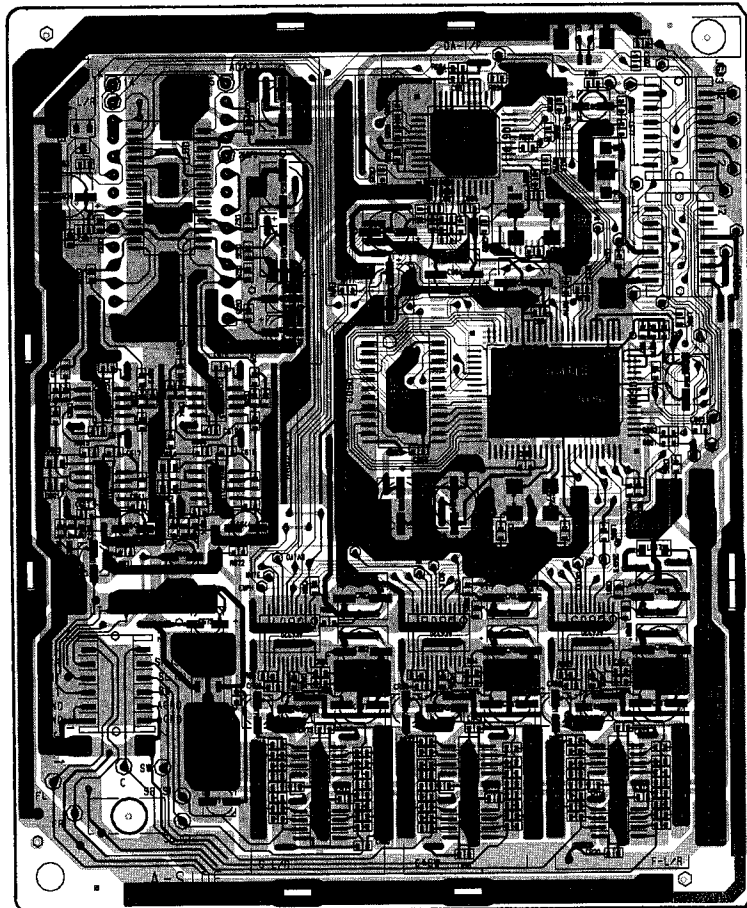


1
2
3
4
5
6
7

A B C D E

P.C. BOARD (8)

P704-Main Amp P.C. Board

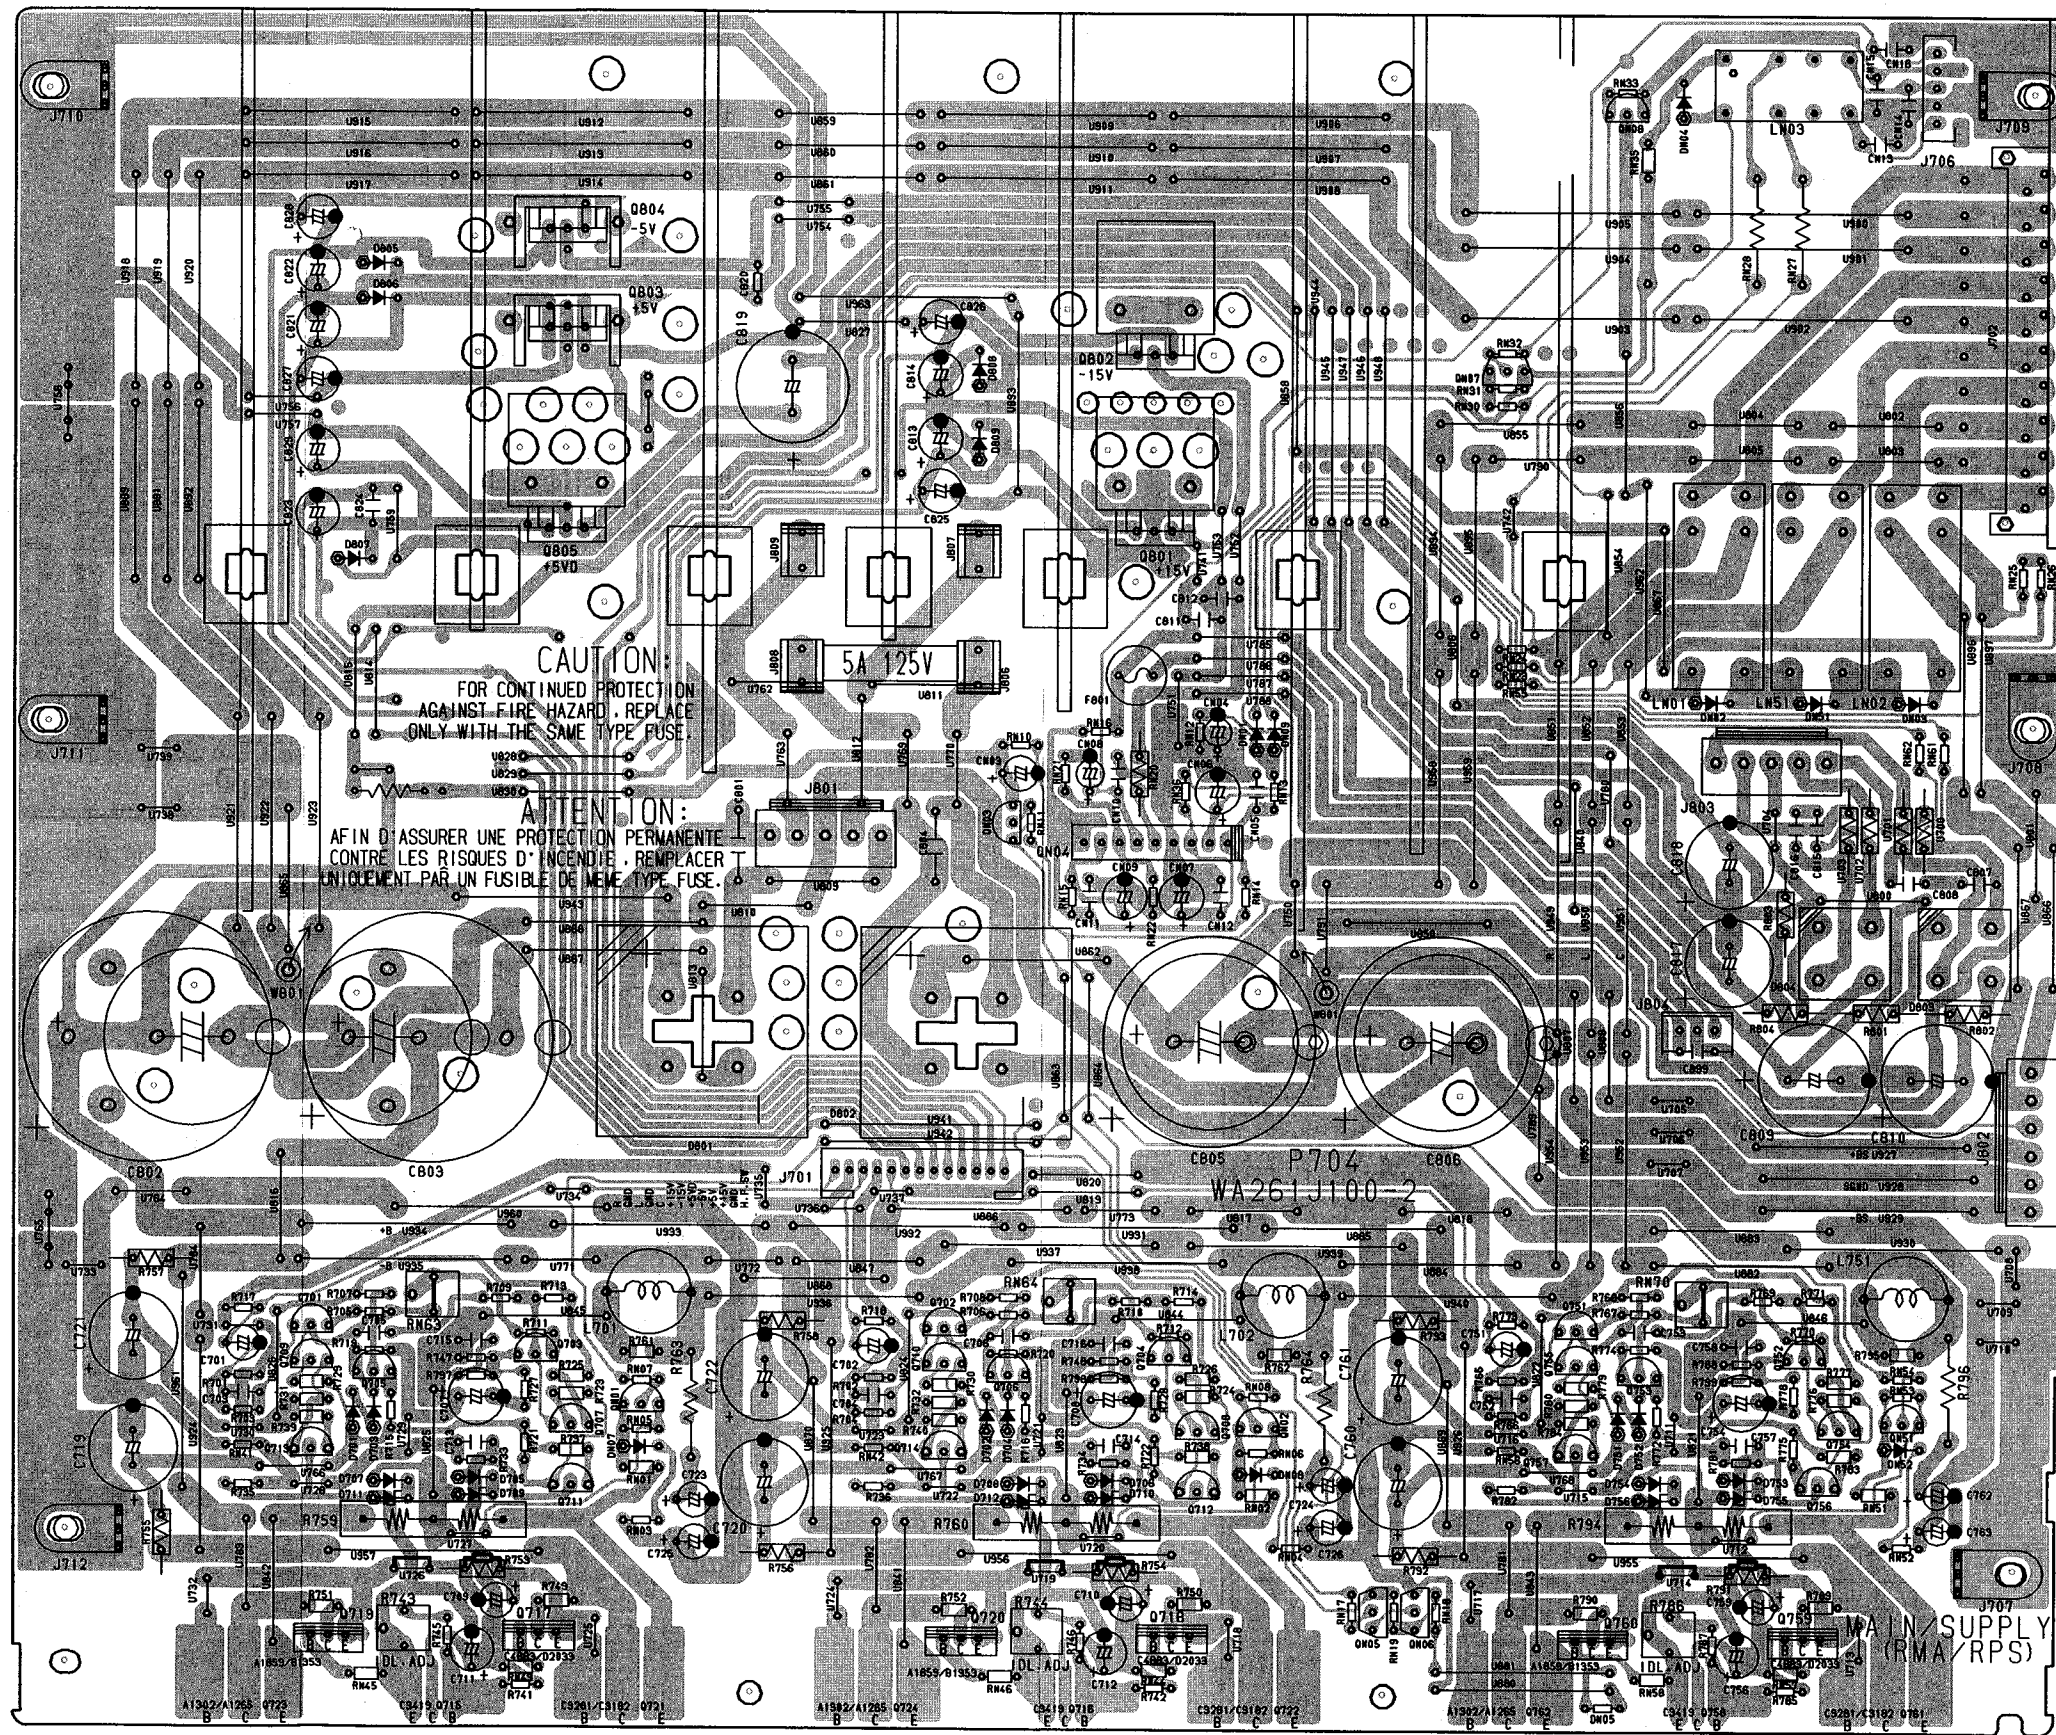

P.C. BOARD (8)

P704-Main Amp P.C. Board

1

2


3

4

5

6

7

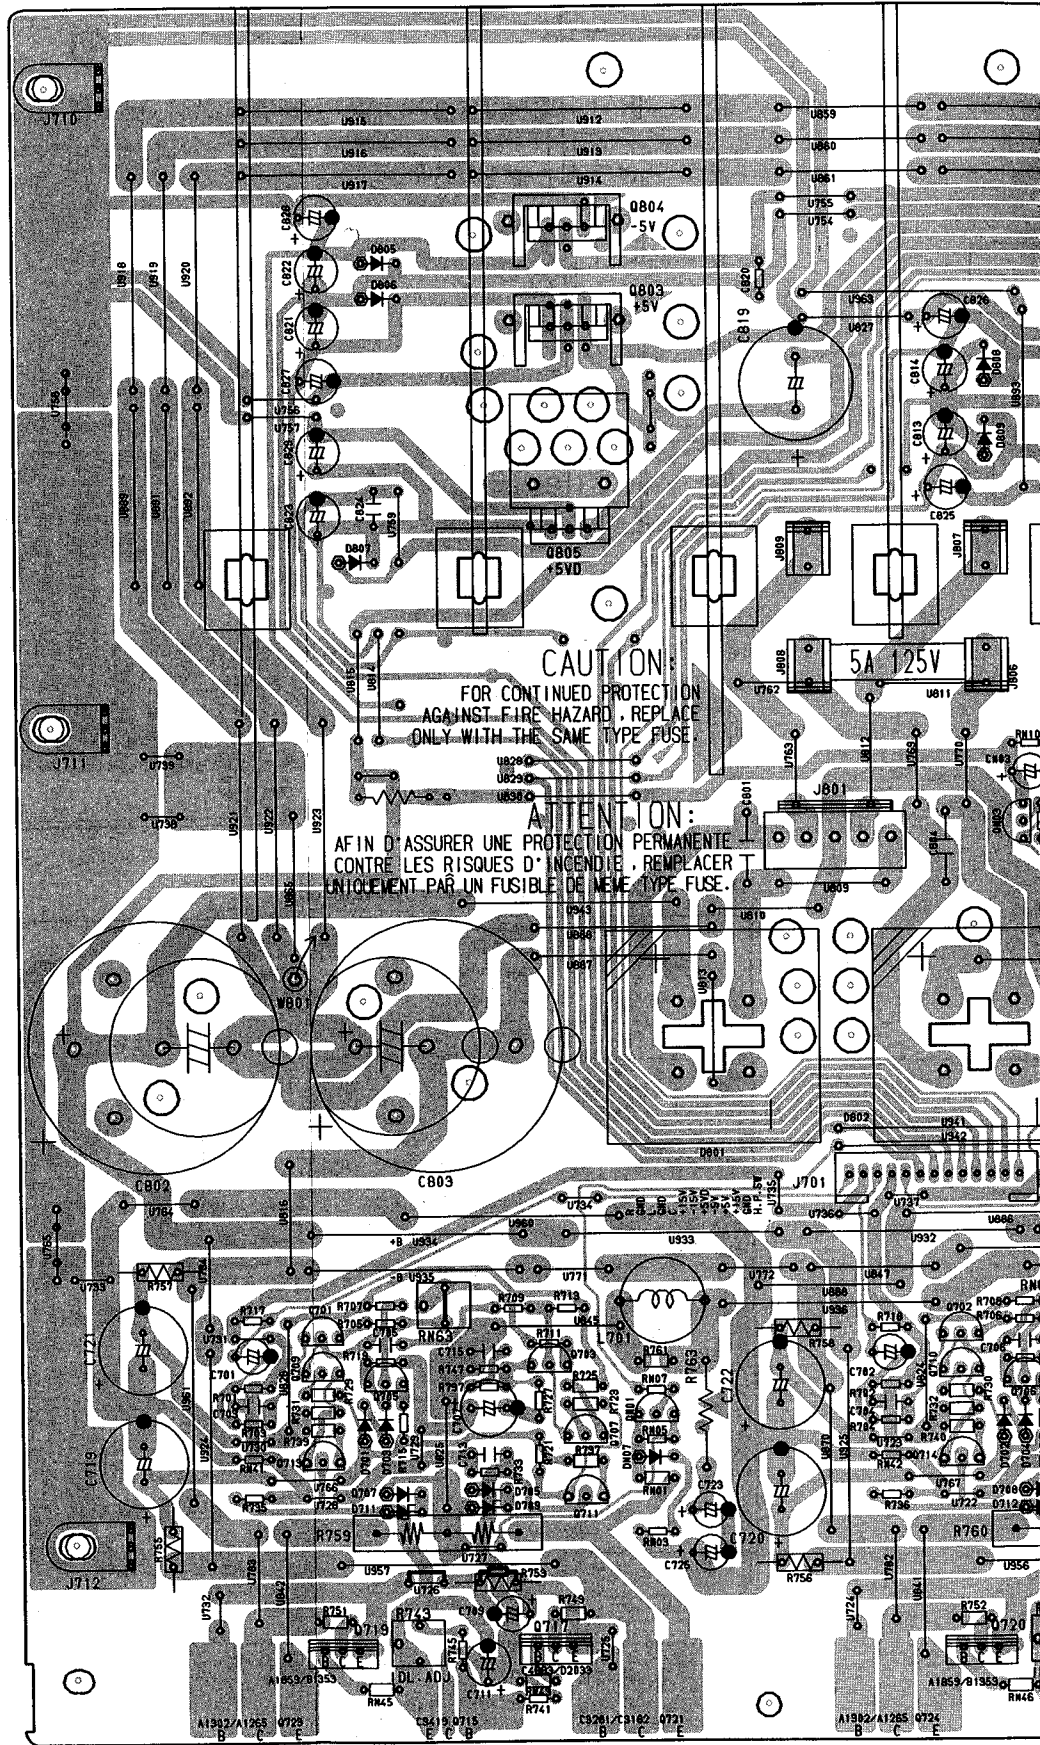

CAUTION
FOR CONTINUED PROTECTION
AGAINST FIRE HAZARD, REPLACE
ONLY WITH THE SAME TYPE FUSE

ATTENTION:
AFIN D'ASSURER UNE PROTECTION PERMANENTE
CONTRE LES RISQUES D'INCENDIE, REMPLACER
UNIQUEMENT PAR UN FUSIBLE DE MEME TYPE FUSE.

5A 125V

ELECTRICAL PARTS LIST

Ref. No.	Part. No.	Description	Ref. No.	Part. No.	Description
PE04-BACK-UP P.C. BOARD			PE04-ELE. VOL P.C. BOARD		
CAPACITORS			CAPACITORS		
CB01	EA47703510	ELECT 470 μ F 35V	CE01	OA10601620	ELECT 10 μ F 16V
CB02	EA10606310	ELECT 10 μ F 63V	CE02	OA10601620	ELECT 10 μ F 16V
CB03	EA47603510	ELECT 47 μ F 35V	CE03	EJ47502510	ELECT 4.7 μ F 25V
CB05	EA47705010	ELECT 470 μ F 50V	CE04	EJ47502510	ELECT 4.7 μ F 25V
CB06	EA47603510	ELECT 47 μ F 35V	CE07	OA47505020	ELECT 4.7 μ F 50V
CB07	DK18103310	CERAMIC 0.01 μ F +80% -20%	CE08	OA47505020	ELECT 4.7 μ F 50V
CB08	DK18103310	CERAMIC 0.01 μ F +80% -20%	CE09	EJ47502510	ELECT 4.7 μ F 25V
CB09	DK17103840	CERAMIC 0.01 μ F \pm 20%	CE10	EJ47502510	ELECT 4.7 μ F 25V
CB10	EA10606310	ELECT 10 μ F 63V	CE13	OA47505020	ELECT 4.7 μ F 50V
RESISTORS			CE14	OA47505020	ELECT 4.7 μ F 50V
RB01	GG05100140	1/4W 10 Ω \pm 5%	CE15	EJ47502510	ELECT 4.7 μ F 25V
RB03	GA05471010	1W 470 Ω \pm 5%	CE16	EJ47502510	ELECT 4.7 μ F 25V
RB04	GD05101160	1/6W 100 Ω \pm 5%	CE19	OA47505020	ELECT 4.7 μ F 50V
RB05	GD05101160	1/6W 100 Ω \pm 5%	CE20	OA47505020	ELECT 4.7 μ F 50V
RB07	RC10225820	1/2W 2.2M Ω \pm 10% BK	CE21	EJ47502510	ELECT 4.7 μ F 25V
RB08	GD05103160	1/6W 10K Ω \pm 5%	CE22	EJ47502510	ELECT 4.7 μ F 25V
INTEGRATED CIRCUITS			CE25	OA47505020	ELECT 4.7 μ F 50V
QB01	HC38905320	IC PQ05RR1 Voltage Regulator	CE26	OA47505020	ELECT 4.7 μ F 50V
TRANSISTOR			CE27	EJ47502510	ELECT 4.7 μ F 25V
QB02	HT420331E0	2SD2033 (E)	CE28	EJ47502510	ELECT 4.7 μ F 25V
DIODES			CE31	OA10601620	ELECT 10 μ F 16V
DB01	HD20002710	1D3 1A/200V	CE32	OA10601620	ELECT 10 μ F 16V
DB02	HD20002710	1D3 1A/200V	CE33	EJ47502510	ELECT 4.7 μ F 25V
DB03	HD20002710	1D3 1A/200V	CE34	EJ47502510	ELECT 4.7 μ F 25V
DB04	HD20002710	1D3 1A/200V	CE35	DF15104350	FILM 0.1 μ F \pm 5%
DB05	HD33301000	ZENER MTZJ33D	CE36	DF15104350	FILM 0.1 μ F \pm 5%
DB06	HD30821000	ZENER NTJ8.2C	CE37	DF15104350	FILM 0.1 μ F \pm 5%
DB07	HD20002710	1D3 1A/200V	CE38	DF15104350	FILM 0.1 μ F \pm 5%
DB08	HD20002710	1D3 1A/200V	CE41	OA10601620	ELECT 10 μ F 16V
MISCELLANEOUS			CE42	OA10601620	ELECT 10 μ F 16V
FB01	FS10400850	FUSE S506 4A 250V IB	CE43	EJ10601610	ELECT 10 μ F 16V
FB01	FS10800540	FUSE SM5 8A 125V BK	CE44	EJ10601610	ELECT 10 μ F 16V
FB02	FS20250200	FUSE TR5 T2.5A 250V IB	CV53	DF15182350	FILM 1800PF \pm 5%
FB03	FS20250200	FUSE TR5 T2.5A 250V IB	CV54	DF15182350	FILM 1800PF \pm 5%
JB01	YJ08000580	JACK, FUSE CLIP IB (MOMS)	CV59	DF15472350	FILM 4700PF \pm 5%
JB01	YJ08000590	JACK, FUSE CLIP IB (AVR70)	CV60	DF15472350	FILM 4700PF \pm 5%
JB01	YJ08000170	JACK, FUSE CLIP BK	CV65	DK16271300	CERAMIC 270PF \pm 10%
JB02	YJ08000590	JACK, FUSE CLIP IB (MOMS)	CV66	DK16271300	CERAMIC 270PF \pm 10%
JB02	YJ08000580	JACK, FUSE CLIP IB (AVR70)	CV71	EJ10601610	ELECT 10 μ F 16V
JB02	YJ08000170	JACK, FUSE CLIP BK	CV72	EJ10601610	ELECT 10 μ F 16V
JB03	YJ04002080	JACK, AC OUTLET 2P IB	CV75	DK16471300	CERAMIC 470PF \pm 10% IB
JB03	YJ04002040	JACK, AC OUTLET 2P BK	CV76	DK16471300	CERAMIC 470PF \pm 10% IB
JB04	YP06006670	PLUG, 7P	CV77	DK16221300	CERAMIC 220PF \pm 10% IB
JB05	YP04000760	PLUG, 2P	CV78	DK16221300	CERAMIC 220PF \pm 10% IB
JB06	YP04000760	PLUG, 2P	CV79	DK16102300	CERAMIC 1000PF \pm 10% IB
JB07	YL01010240	TERMINAL, GND	RESISTORS		
JB09	YP06003830	PLUG, 3P	RE01	GD05104160	1/6W 100K Ω \pm 5%
JB10	YP06006930	PLUG, 3P (AVR70MK II)	RE02	GD05104160	1/6W 100K Ω \pm 5%
LB01	TS14823240	POWER TRANSF. IB	RE03	GD05104160	1/6W 100K Ω \pm 5%
LB01	TS14823230	POWER TRANSF. BK	RE04	GD05104160	1/6W 100K Ω \pm 5%
LB02	LY10240240	RELAY, VS24MB-NR	RE07	GD05332160	1/6W 3.3K Ω \pm 5%
			RE08	GD05332160	1/6W 3.3K Ω \pm 5%
			RE09	GD05332160	1/6W 3.3K Ω \pm 5%
			RE10	GD05332160	1/6W 3.3K Ω \pm 5%
			RE13	GD05152160	1/6W 1.5K Ω \pm 5%
			RE14	GD05152160	1/6W 1.5K Ω \pm 5%
			RE15	GD05152160	1/6W 1.5K Ω \pm 5%
			RE16	GD05152160	1/6W 1.5K Ω \pm 5%
			RE19	GD05104160	1/6W 100K Ω \pm 5%
			RE20	GD05104160	1/6W 100K Ω \pm 5%
			RE21	GD05104160	1/6W 100K Ω \pm 5%
			RE22	GD05104160	1/6W 100K Ω \pm 5%
			RE25	GD05331160	1/6W 330 Ω \pm 5%
			RE26	GD05331160	1/6W 330 Ω \pm 5%

Ref. No.	Part. No.	Description	Ref. No.	Part. No.	Description
RE27	GD05331160	1/6W 330 Ω ±5%			
RE28	GD05331160	1/6W 330 Ω ±5%			
RE31	GD05152160	1/6W 1.5K Ω ±5%			
RE32	GD05152160	1/6W 1.5K Ω ±5%			
RE33	GD05152160	1/6W 1.5K Ω ±5%			
RE34	GD05152160	1/6W 1.5K Ω ±5%			
RE37	GD05334160	1/6W 330K Ω ±5%			
RE38	GD05334160	1/6W 330K Ω ±5%			
RE39	GD05334160	1/6W 330K Ω ±5%			
RE40	GD05334160	1/6W 330K Ω ±5%			
RE43	GD05152160	1/6W 1.5K Ω ±5%			
RE44	GD05152160	1/6W 1.5K Ω ±5%			
RE45	GD05152160	1/6W 1.5K Ω ±5%			
RE46	GD05152160	1/6W 1.5K Ω ±5%			
RE49	GD05104160	1/6W 100K Ω ±5%			
RE50	GD05104160	1/6W 100K Ω ±5%			
RE51	GD05104160	1/6W 100K Ω ±5%			
RE52	GD05104160	1/6W 100K Ω ±5%			
RE55	GD05152160	1/6W 1.5K Ω ±5%			
RE56	GD05152160	1/6W 1.5K Ω ±5%			
RE57	GD05152160	1/6W 1.5K Ω ±5%			
RE58	GD05152160	1/6W 1.5K Ω ±5%			
RE61	GD05152160	1/6W 1.5K Ω ±5%			
RE62	GD05152160	1/6W 1.5K Ω ±5%			
RE63	GD05152160	1/6W 1.5K Ω ±5%			
RE64	GD05152160	1/6W 1.5K Ω ±5%			
RE65	GD05103160	1/6W 10K Ω ±5%			
RE66	GD05103160	1/6W 10K Ω ±5%			
RE67	GD05103160	1/6W 10K Ω ±5%			
RE68	GD05103160	1/6W 10K Ω ±5%			
RE69	GD05183160	1/6W 18K Ω ±5%			
RE70	GD05562160	1/6W 5.6K Ω ±5%			
RE71	GD05183160	1/6W 18K Ω ±5%			
RE72	GD05562160	1/6W 5.6K Ω ±5%			
RE73	GD05103160	1/6W 10K Ω ±5%			
RE74	GD05103160	1/6W 10K Ω ±5%			
RE79	GD05104160	1/6W 100K Ω ±5%			
RE80	GD05104160	1/6W 100K Ω ±5%			
RE83	GD05105160	1/6W 1M Ω ±5%			
RE84	GD05105160	1/6W 1M Ω ±5%			
RE85	GD05105160	1/6W 1M Ω ±5%			
RE86	GD05105160	1/6W 1M Ω ±5%			
RV53	GD05392160	1/6W 3.9K Ω ±5%			
RV54	GD05392160	1/6W 3.9K Ω ±5%			
RV59	GD05392160	1/6W 3.9K Ω ±5%			
RV60	GD05392160	1/6W 3.9K Ω ±5%			
RV65	GD05392160	1/6W 3.9K Ω ±5%			
RV66	GD05392160	1/6W 3.9K Ω ±5%			
RV69	GD05102160	1/6W 1K Ω ±5%			
RV70	GD05102160	1/6W 1K Ω ±5%			
RV71	GD05102160	1/6W 1K Ω ±5%			
RV72	GD05102160	1/6W 1K Ω ±5%			
RV73	GD05471160	1/6W 470 Ω ±5%			
RV75	GD05473160	1/6W 47K Ω ±5%			
RV76	GD05473160	1/6W 47K Ω ±5%			
RV77	GD05473160	1/6W 47K Ω ±5%			
RV78	GD05473160	1/6W 47K Ω ±5%			
RV80	GD05473160	1/6W 47K Ω ±5%			
RV81	GD05103160	1/6W 10K Ω ±5%			
RV82	GD05103160	1/6W 10K Ω ±5%			
RV83	GD05103160	1/6W 10K Ω ±5%			
RV84	GD05103160	1/6W 10K Ω ±5%			
RV85	GD05103160	1/6W 10K Ω ±5%			
RV87	GD05103160	1/6W 10K Ω ±5%			
RV88	GD05471160	1/6W 470 Ω ±5%			
QE01	HC10008090				INTEGRATED CIRCUITS
QE02	HC10008090				IC NJM4558DD Dual OP AMP
QE04	HC10304050				IC TC9213P Electric Volume (2ch)
QE05	HC10304050				IC TC9213P Electric Volume (2ch)
QE07	HC10008090				IC NJM4558DD Dual OP AMP
QE08	HC10008090				IC NJM4558DD Dual OP AMP
QE09	HC10008090				IC NJM4558DD Dual OP AMP
QE10	HC10008090				IC NJM4558DD Dual OP AMP
QE11	HC10008090				IC NJM4558DD Dual OP AMP
QE12	HC10008090				IC NJM4558DD Dual OP AMP
QV58	HC10008090				IC NJM4558DD Dual OP AMP
					TRANSISTORS
QV51	HT328782A0				2SC2878 (A, B)
QV52	HT328782A0				2SC2878 (A, B)
QV53	HT328782A0				2SC2878 (A, B)
QV54	HT328782A0				2SC2878 (A, B)
QV55	HT328782A0				2SC2878 (A, B)
QV60	HT328782A0				2SC2878 (A, B)
					COILS
LV01	LC14733800				CHOKER 47μH IB
LV02	LC14733800				CHOKER 47μH IB
					MISCELLANEOUS
JV52	YT02030420				TERMINAL, 3P RCA PIN JACK IB
JV52	YT02030380				TERMINAL, 3P RCA PIN JACK BK
JV53	YT02021400				TERMINAL, 2P RCA PIN JACK IB
JV53	YT02021070				TERMINAL, 2P RCA PIN JACK BK
JV54	YT02011020				TERMINAL, 1P RCA PIN JACK IB
JV54	YT02010780				TERMINAL, 1P RCA PIN JACK BK
JV55	YJ06030600				JACK, 30P
JV56	YP06004570				PLUG, 13P
JV57	YP06006930				PLUG, 3P
PF04-TONE P.C. BOARD					
					CAPACITORS
CF01	EJ10601610				ELECT 10μF 16V
CF02	EJ10601610				ELECT 10μF 16V
CF05	DK16222300				CERAMIC 2200PF ±10%
CF06	DK16222300				CERAMIC 2200PF ±10%
CF09	DD15101300				CERAMIC 100PF ±5%
CF10	DD15101300				CERAMIC 100PF ±5%
CF13	DF15153350				FILM 0.015μF ±5%
CF14	DF15153350				FILM 0.015μF ±5%
CF17	DF15153350				FILM 0.015μF ±5%
CF18	DF15153350				FILM 0.015μF ±5%
CF21	EJ47601610				ELECT 47μF 16V
CF22	EJ47601610				ELECT 47μF 16V
CF25	OA22601620				ELECT 22μF 16V
CF26	OA22601620				ELECT 22μF 16V
CF29	DD15470300				CERAMIC 47PF ±5%
CF30	DD15470300				CERAMIC 47PF ±5%
CF40	OA10701620				ELECT 100μF 16V
CF41	OA10701620				ELECT 100μF 16V
CF43	DA17223110				CERAMIC 0.022μF ±20%
CF44	DA17223110				CERAMIC 0.022μF ±20%
CF47	DA17223110				CERAMIC 0.022μF ±20%
CF48	DA17223110				CERAMIC 0.022μF ±20%

Ref. No.	Part. No.	Description	Ref. No.	Part. No.	Description
RESISTORS					
RF01	GD05473160	1/6W 47K Ω $\pm 5\%$	CX60	DD15560300	CERAMIC 56PF $\pm 5\%$
RF02	GD05473160	1/6W 47K Ω $\pm 5\%$	CX61	EJ10505010	ELECT 1 μ F 50V
RF05	GD05470160	1/6W 47 Ω $\pm 5\%$	CX62	DK16122300	CERAMIC 1200PF $\pm 10\%$
RF06	GD05470160	1/6W 47 Ω $\pm 5\%$	CX63	EJ10505010	ELECT 1 μ F 50V
RF09	GD05103160	1/6W 10K Ω $\pm 5\%$	CX64	DF15682350	FILM 0.0068 μ F $\pm 5\%$
RF10	GD05103160	1/6W 10K Ω $\pm 5\%$	CX65	DF15223350	FILM 0.022 μ F $\pm 5\%$
RF13	GD05103160	1/6W 10K Ω $\pm 5\%$	CX66	DD15470300	CERAMIC 47PF $\pm 5\%$
RF14	GD05103160	1/6W 10K Ω $\pm 5\%$	CX67	CT12000200	TRIMMING 20PF
RF17	GD05103160	1/6W 10K Ω $\pm 5\%$	CX69	EA47601010	ELECT 47 μ F 10V
RF18	GD05103160	1/6W 10K Ω $\pm 5\%$	CX70	EJ47502510	ELECT 4.7 μ F 25V
RF21	GD05223160	1/6W 22K Ω $\pm 5\%$	CX72	DK18103310	CERAMIC 0.01 μ F +80% -20%
RF22	GD05223160	1/6W 22K Ω $\pm 5\%$	CX73	EA22700610	ELECT 220 μ F 6.3V
RF29	GD05223160	1/6W 22K Ω $\pm 5\%$	CX74	EJ10505010	ELECT 1 μ F 50V
RF30	GD05223160	1/6W 22K Ω $\pm 5\%$	CX75	EJ22601010	ELECT 22 μ F 10V
RF45	GD05102160	1/6W 1K Ω $\pm 5\%$	CX76	EA10701010	ELECT 100 μ F 10V
RF46	GD05102160	1/6W 1K Ω $\pm 5\%$			
RF81	GD05473160	1/6W 47K Ω $\pm 5\%$			
RF82	GD05473160	1/6W 47K Ω $\pm 5\%$			
CONTROLS					
RF41	MR01041300	VARIABLE, 100K Ω (B) x 2			
RF42	MR01041300	VARIABLE, 100K Ω (B) x 2			
RF43	RK01040620	VARIABLE, 100K Ω (W)			
INTEGRATED CIRCUITS					
QF01	HC10008090	IC NJM4558DD Dual OP AMP			
QF02	HC10008090	IC NJM4558DD Dual OP AMP			
MISCELLANEOUS					
JF01	YP06006680	PLUG, 8P			
RESISTORS					
RL01	GD05820160	1/6W 82 Ω $\pm 5\%$	RL02	GD05100160	1/6W 10 Ω $\pm 5\%$
RL03	GD05820160	1/6W 82 Ω $\pm 5\%$	RL04	GD05100160	1/6W 10 Ω $\pm 5\%$
RL05	GD05820160	1/6W 82 Ω $\pm 5\%$	RL06	GD05100160	1/6W 10 Ω $\pm 5\%$
RL07	GD05750160	1/6W 75 Ω $\pm 5\%$	RL09	GD05820160	1/6W 82 Ω $\pm 5\%$
RL10	GD05100160	1/6W 10 Ω $\pm 5\%$	RL11	GD05750160	1/6W 75 Ω $\pm 5\%$
RL15	GD05750160	1/6W 75 Ω $\pm 5\%$	RL18	GD05104160	1/6W 100K Ω $\pm 5\%$
RL19	GD05472160	1/6W 4.7K Ω $\pm 5\%$	RX51	GD05333160	1/6W 33K Ω $\pm 5\%$
RX52	GD05221160	1/6W 220 Ω $\pm 5\%$	RX53	GD05105160	1/6W 1M Ω $\pm 5\%$
RX54	GD05105160	1/6W 1M Ω $\pm 5\%$	RX55	GD05103160	1/6W 10K Ω $\pm 5\%$
RX56	GD05103160	1/6W 10K Ω $\pm 5\%$	RX57	GD05103160	1/6W 10K Ω $\pm 5\%$
RX59	GD05221160	1/6W 220 Ω $\pm 5\%$	RX60	GD05152160	1/6W 1.5K Ω $\pm 5\%$
RX61	GD05682160	1/6W 6.8K Ω $\pm 5\%$	RX62	GD05102160	1/6W 1K Ω $\pm 5\%$
RX65	GD05102160	1/6W 1K Ω $\pm 5\%$	RX66	GD05102160	1/6W 1K Ω $\pm 5\%$
RX67	GD05104160	1/6W 100K Ω $\pm 5\%$	RX68	GD05223160	1/6W 22K Ω $\pm 5\%$
RX69	GD05471160	1/6W 470 Ω $\pm 5\%$	QL01	HC10275030	IC LC7824 Analogue Switch
QL03	HC10046170	IC MC14576 Dual Video AMP	QL04	HC12233090	IC NJM2233BD Single Video Switch
QL05	HC12233090	IC NJM2233BD Single Video Switch	QX60	HC10328030	IC LC74760-9004 OSD LSI
QX63	HC10141090	IC NJM2267D Dual Video AMP	QX64	HT30001000	2SC536SP
QX61	HT30001000	2SC536SP	QX62	BA20002000	DIGITAL DTC144ES/UN4213
QX64	HT30001000	2SC536SP	DL01	HD20002000	1SS176
DL02	HD20002000	1SS176	DL03	HD20002000	1SS176
DL04	HD20002000	1SS176	DL05	HD20002000	1SS176
DL06	HD20002000	1SS176			
INTEGRATED CIRCUITS					
TRANSISTORS					
DIODES					

PL04 VIDEO SELECTOR P.C. BOARD

CAPACITORS

CL01	EJ22601010	ELECT 22 μ F 10V
CL02	EJ10601610	ELECT 10 μ F 16V
CL03	EJ22601010	ELECT 22 μ F 10V
CL04	EJ10601610	ELECT 10 μ F 16V
CL05	EJ22601010	ELECT 22 μ F 10V
CL06	EJ10601610	ELECT 10 μ F 16V
CL09	EJ22601010	ELECT 22 μ F 10V
CL10	EJ10601610	ELECT 10 μ F 16V
CL14	DD38104010	CERAMIC 0.1 μ F +80% -20%
CL15	DD38104010	CERAMIC 0.1 μ F +80% -20%
CL16	DK18103310	CERAMIC 0.01 μ F +80% -20%
CL17	DK18103310	CERAMIC 0.01 μ F +80% -20%
CL18	EA22700610	ELECT 220 μ F 6.3V
CL19	EA22700610	ELECT 220 μ F 6.3V
CL20	EJ22601010	ELECT 22 μ F 10V
CL21	EA10701010	ELECT 100 μ F 10V
CL22	DK18103310	CERAMIC 0.01 μ F +80% -20%
CL23	EJ22601010	ELECT 22 μ F 10V
CL24	EJ22601010	ELECT 22 μ F 10V
CL25	EJ10601610	ELECT 10 μ F 16V
CL31	DD38104010	CERAMIC 0.1 μ F +80% -20%
CX49	EJ47502510	ELECT 4.7 μ F 25V
CX50	EA47601010	ELECT 47 μ F 10V
CX51	EA22700610	ELECT 220 μ F 6.3V
CX52	DK18103310	CERAMIC 0.01 μ F +80% -20%
CX53	EA22700610	ELECT 220 μ F 6.3V
CX54	DK18103310	CERAMIC 0.01 μ F +80% -20%
CX55	DD15220300	CERAMIC 22PF $\pm 5\%$
CX56	DD15220300	CERAMIC 22PF $\pm 5\%$
CX57	DD15220300	CERAMIC 22PF $\pm 5\%$
CX58	DD15220300	CERAMIC 22PF $\pm 5\%$
CX59	EJ47405010	ELECT 0.47 μ F 50V

Ref. No.	Part. No.	Description
DL07	HD20002000	1SS176
DL08	HD20002000	1SS176
DL09	HD20002000	1SS176
DL10	HD20002000	1SS176
DX61	HD20002000	1SS176
COILS		
LX51	LC12233800	CHOKE, 22μH
LX52	LC15623800	CHOKE, 5.6μH
MISCELLANEOUS		
JL01	YT02041130	TERMINAL, 4P RCA PIN JACK
JL02	YT02030370	TERMINAL, 3P RCA PIN JACK
JL03	YP06020640	PLUG, 14P
LX53	FM12223010	EMI FILTER
XX51	JX14001260	CRYSTAL, 14.31818MHz
XX52	JX17001260	CRYSTAL, 17.7MHz (B)

PL54-S-VIDEO P.C. BOARD

Ref. No.	Part. No.	Description
CAPACITORS		
CL52	EJ10601610	ELECT 10μF 16V
CL53	EJ10601610	ELECT 10μF 16V
CL57	EJ10601610	ELECT 10μF 16V
CL58	EJ10601610	ELECT 10μF 16V
CL59	EJ10601610	ELECT 10μF 16V
CL60	EJ10601610	ELECT 10μF 16V
CL67	DD38104010	CERAMIC 0.1μF +80% -20%
CL71	EJ10601610	ELECT 10μF 16V
CL76	DK18103310	CERAMIC 0.01μF +80% -20%
CL78	EJ10601610	ELECT 10μF 16V
RESISTORS		
RL52	GD05100160	1/6W 10 Ω ±5%
RL53	GD05100160	1/6W 10 Ω ±5%
RL57	GD05820160	1/6W 82 Ω ±5%
RL58	GD05820160	1/6W 82 Ω ±5%
RL59	GD05820160	1/6W 82 Ω ±5%
RL60	GD05820160	1/6W 82 Ω ±5%
RL63	GD05750160	1/6W 75 Ω ±5%
RL64	GD05750160	1/6W 75 Ω ±5%
RL67	GD05750160	1/6W 75 Ω ±5%
RL68	GD05750160	1/6W 75 Ω ±5%
RL69	GD05104160	1/6W 100K Ω ±5%
RL70	GD05104160	1/6W 100K Ω ±5%
RL71	GD05104160	1/6W 100K Ω ±5%
RL72	GD05104160	1/6W 100K Ω ±5%
RL75	GD05103160	1/6W 10K Ω ±5%
INTEGRATED CIRCUITS		
QL55	HC10046170	IC MC14576 Dual Video AMP
QL56	HC10046170	IC MC14576 Dual Video AMP
QL58	HC10275030	IC LC7824 Analogue Switch
MISCELLANEOUS		
JL52	YT02030350	TERMINAL, 3P
JL53	YT02011010	TERMINAL, 1P
JL54	YP06020600	PLUG, 10P
JL55	YL01010140	TERMINAL, GND

Ref. No.	Part. No.	Description
----------	-----------	-------------

PL94-AUX IN P.C. BOARD

Ref. No.	Part. No.	Description
CAPACITORS		
CL91	EJ10601610	ELECT 10μF 16V
CL92	EJ22601610	ELECT 22μF 16V
CL95	DD38104010	CERAMIC 0.1μF +80% -20%
CL96	DD38104010	CERAMIC 0.1μF +80% -20%
CL97	DK16221300	CERAMIC 220PF ±10% (B) [MOMS]
CL97	DK16102300	CERAMIC 1000PF ±10% (B) (AVR70)
CL98	DK16221300	CERAMIC 220PF ±10% (B) [MOMS]
CL98	DK16102300	CERAMIC 1000PF ±10% (B) (AVR70)
RESISTORS		
RL91	GD05100160	1/6W 10 Ω ±5%
RL92	GD05750160	1/6W 75 Ω ±5%
RL97	GD05102160	1/6W 1K Ω ±5% (B) [MOMS]
RL98	GD05102160	1/6W 1K Ω ±5% (B) [MOMS]
RU06	GD05332160	1/6W 3.3K Ω ±5%
RU08	GD05682160	1/6W 6.8K Ω ±5%
RU10	GD05103160	1/6W 10K Ω ±5%
RU38	GD05151160	1/6W 150 Ω ±5%
DIODES		
DU46	HI10095320	L.E.D. LT3K44B (GRN)
DU47	HI10095320	L.E.D. LT3K44B (GRN)
MISCELLANEOUS		
JL91	YT02030390	TERMINAL, 3P RCA PIN JACK
JL92	YP06007260	PLUG, 8P
JU05	YJ06018040	JACK, 4P
SU07	SP01011280	PUSH SWITCH, TACT
SU09	SP01011280	PUSH SWITCH, TACT
SU11	SP01011280	PUSH SWITCH, TACT
WL01	YB00152110	CONNECTIVE CORD, 1P

PN54-SPK PROTECT P.C. BOARD (AVR70MK II)

Ref. No.	Part. No.	Description
CAPACITORS		
CN81	EJ10505010	ELECT 1μF 50V
CN82	EJ10505010	ELECT 1μF 50V
CN83	DD38104010	CERAMIC 0.1μF +80% -20%
RESISTORS		
RN83	GD05473160	1/6W 47K Ω ±5%
RN84	GD05473160	1/6W 47K Ω ±5%
RN85	GD05104160	1/6W 100K Ω ±5%
RN86	GD05103160	1/6W 10K Ω ±5%
RN87	GD05473160	1/6W 47K Ω ±5%
RN88	GD05473160	1/6W 47K Ω ±5%
INTEGRATED CIRCUITS		
QN84	HC10042050	IC TA7317P Over Load Protector
TRANSISTORS		
QN81	BA10007210	DIGITAL DTA114ES
QN82	HT322402A0	2SC2240 (GR, BL)
QN83	HT322402A0	2SC2240 (GR, BL)
DIODES		
DN81	HD20002000	1SS176
DN82	HD20002000	1SS176

Ref. No.	Part. No.	Description
JN81	YJ06019130	MISCELLANEOUS JACK, 13P
JN82	YP06007130	PLUG, 3P

Ref. No.	Part. No.	Description
QP02	HT322402A0	TRANSISTORS 2SC2240 (GR, BL)
QP03	HT322402A0	2SC2240 (GR, BL)
QP04	HT109702A0	2SA970 (GR, BL)

PP04-SURROUND AMP P.C. BOARD

Ref. No.	Part. No.	Description
CAPACITORS		
CP01	DK16102300	CERAMIC 1000PF ±10%
CP02	DK16102300	CERAMIC 1000PF ±10%
CP03	EQ10606390	ELECT 10µF 63V
CP04	EQ10606390	ELECT 10µF 63V
CP05	EA10701610	ELECT 100µF 16V
CP06	EA10701610	ELECT 100µF 16V
CP07	DD11100300	CERAMIC 10PF ±0.5PF IB
CP07	DD10030300	CERAMIC 3PF ±0.25PF BK
CP08	DD11100300	CERAMIC 10PF ±0.5PF IB
CP08	DD10030300	CERAMIC 3PF ±0.25PF BK
CP09	EJ22405010	ELECT 0.22µF 50V
CP10	EJ22405010	ELECT 0.22µF 50V
CP11	EJ22405010	ELECT 0.22µF 50V
CP12	EJ22405010	ELECT 0.22µF 50V
CP13	EA10706310	ELECT 100µF 63V
CP14	EA10606310	ELECT 10µF 63V
CP15	EA10706310	ELECT 100µF 63V
CP16	EA10606310	ELECT 10µF 63V
CP17	EJ22601010	ELECT 22µF 10V
CP21	DD15470300	CERAMIC 47PF ±5% IB
CP22	DD15470300	CERAMIC 47PF ±5% IB

Ref. No.	Part. No.	Description
RESISTORS		
RP01	GD05102160	1/6W 1K Ω ±5% IB
RP01	GD05471160	1/6W 470 Ω ±5% BK
RP02	GD05102160	1/6W 1K Ω ±5% IB
RP02	GD05471160	1/6W 470 Ω ±5% BK
RP03	GD05473160	1/6W 47K Ω ±5%
RP04	GD05473160	1/6W 47K Ω ±5%
RP05	GD05563160	1/6W 56K Ω ±5%
RP06	GD05563160	1/6W 56K Ω ±5%
RP07	GD05182160	1/6W 1.8K Ω ±5%
RP08	GD05182160	1/6W 1.8K Ω ±5%
RP09	GD05513160	1/6W 51K Ω ±5%
RP10	GD05513160	1/6W 51K Ω ±5%
RP11	GO10222030	3W 0.22 Ω ±10%
RP12	GO10222030	3W 0.22 Ω ±10%
RP13	GD05221160	1/6W 220 Ω ±5%
RP14	GD05221160	1/6W 220 Ω ±5%
RP15	GD05102160	1/6W 1K Ω ±5%
RP16	GD05102160	1/6W 1K Ω ±5%
RP17	GD05682160	1/6W 6.8K Ω ±5%
RP18	GD05682160	1/6W 6.8K Ω ±5%
RP19	GD05223160	1/6W 22K Ω ±5%
RP20	GD05223160	1/6W 22K Ω ±5%
RP21	GA05100010	1W 10 Ω ±5%
RP22	GA05100010	1W 10 Ω ±5%
RP23	GD05221160	1/6W 220 Ω ±5% IB
RP23	GD05181160	1/6W 180 Ω ±5% BK
RP24	GD05221160	1/6W 220 Ω ±5% IB
RP24	GD05181160	1/6W 180 Ω ±5% BK
RP25	GG05470160	1/6W 47 Ω ±5%
RP26	GG05470160	1/6W 47 Ω ±5%
RP27	GD05682160	1/6W 6.8K Ω ±5%
RP28	GD05333160	1/6W 33K Ω ±5%
RP29	GD05100160	1/6W 100 Ω ±5%
RP99	GG05100140	1/4W 10 Ω ±5%

Ref. No.	Part. No.	Description
QP01	HC10358030	INTEGRATED CIRCUITS IC STK401-050 AF Power AMP (2ch)

Ref. No.	Part. No.	Description
DP01	HD20027010	DIODES HSS81TD
DP02	HD20027010	HSS81TD
LP01	ML08010030	COILS AIR, SPK CHOCK
LP02	ML08010030	AIR, SPK CHOCK
JP01	YP06006930	MISCELLANEOUS PLUG, 3P
WP03	YB00170870	CONNECTIVE CORD, 1P IB

PS04-AUDIO FUNCTION P.C. BOARD

Ref. No.	Part. No.	Description
CAPACITORS		
CS01	EJ47600610	ELECT 47µF 6.3V
CS02	EJ47600610	ELECT 47µF 6.3V
CS03	EJ10601610	ELECT 10µF 16V
CS04	EJ10601610	ELECT 10µF 16V
CS05	EJ10601610	ELECT 10µF 16V
CS06	EJ10601610	ELECT 10µF 16V
CS09	EA10701610	ELECT 100µF 16V
CS10	EA10701610	ELECT 100µF 16V
CS13	EA10701610	ELECT 100µF 16V
CS14	EA10701610	ELECT 100µF 16V
CS15	EJ47502510	ELECT 4.7µF 25V
CS16	EJ47502510	ELECT 4.7µF 25V
CS17	EJ47502510	ELECT 4.7µF 25V
CS18	EJ47502510	ELECT 4.7µF 25V
CS19	DD38104010	CERAMIC 0.1µF +80% -20%
CS21	DD38104010	CERAMIC 0.1µF +80% -20%
CS22	DD38104010	CERAMIC 0.1µF +80% -20%
CS23	DK16151300	CERAMIC 150PF ±10% IB
CS24	DK16151300	CERAMIC 150PF ±10% IB
CS25	DK16151300	CERAMIC 150PF ±10% IB
CS26	DK16151300	CERAMIC 150PF ±10% IB
CS27	DK16221300	CERAMIC 220PF ±10% IB
CS28	DK16221300	CERAMIC 220PF ±10% IB
CS29	DK16151300	CERAMIC 150PF ±10% IB
CS30	DK16151300	CERAMIC 150PF ±10% IB
CS31	DK16221300	CERAMIC 220PF ±10% IB
CS32	DK16221300	CERAMIC 220PF ±10% IB
CS33	DK16221300	CERAMIC 220PF ±10% IB
CS34	DK16221300	CERAMIC 220PF ±10% IB
CS35	DK16221300	CERAMIC 220PF ±10% IB
CS36	DK16221300	CERAMIC 220PF ±10% IB
CS37	DK16221300	CERAMIC 220PF ±10% IB
CS38	DK16221300	CERAMIC 220PF ±10% IB

Ref. No.	Part. No.	Description
RESISTORS		
RS01	GD05473160	1/6W 47K Ω ±5%
RS02	GD05473160	1/6W 47K Ω ±5%
RS03	GD05473160	1/6W 47K Ω ±5%
RS04	GD05473160	1/6W 47K Ω ±5%
RS05	GD05473160	1/6W 47K Ω ±5%
RS06	GD05473160	1/6W 47K Ω ±5%
RS07	GD05102160	1/6W 1K Ω ±5%
RS08	GD05102160	1/6W 1K Ω ±5%
RS09	GD05102160	1/6W 1K Ω ±5%
RS10	GD05102160	1/6W 1K Ω ±5%
RS11	GD05102160	1/6W 1K Ω ±5%
RS12	GD05102160	1/6W 1K Ω ±5%

Ref. No.	Part. No.	Description	Ref. No.	Part. No.	Description
RS13	GD05222160	1/6W 2.2K Ω ±5%	CS71	DK16151300	CERAMIC 150PF ±10% IB
RS14	GD05222160	1/6W 2.2K Ω ±5%	CS72	DK16151300	CERAMIC 150PF ±10% IB
RS15	GD05473160	1/6W 47K Ω ±5%	CS73	DK16151300	CERAMIC 150PF ±10% IB
RS16	GD05473160	1/6W 47K Ω ±5%	CS74	DK16151300	CERAMIC 150PF ±10% IB
RS17	GD05473160	1/6W 47K Ω ±5%	CS75	DK16151300	CERAMIC 150PF ±10% IB
RS18	GD05473160	1/6W 47K Ω ±5%	CS76	DK16151300	CERAMIC 150PF ±10% IB
RS21	GD05102160	1/6W 1K Ω ±5%	CS77	DK16151300	CERAMIC 150PF ±10% IB
RS22	GD05102160	1/6W 1K Ω ±5%	CS78	DK16151300	CERAMIC 150PF ±10% IB
RS27	GD05102160	1/6W 1K Ω ±5%	CS79	DK16221300	CERAMIC 220PF ±10% IB
RS28	GD05102160	1/6W 1K Ω ±5%	CS80	DK16221300	CERAMIC 220PF ±10% IB
RS29	GD05104160	1/6W 100K Ω ±5%	CS81	DK16221300	CERAMIC 220PF ±10% IB
RS30	GD05104160	1/6W 100K Ω ±5%	CS82	DK16221300	CERAMIC 220PF ±10% IB
RS31	GD05104160	1/6W 100K Ω ±5%	CS83	DK16221300	CERAMIC 220PF ±10% IB
RS32	GD05104160	1/6W 100K Ω ±5%	CS84	DK16221300	CERAMIC 220PF ±10% IB
RS33	GD05104160	1/6W 100K Ω ±5%	CS85	DK16221300	CERAMIC 220PF ±10% IB
RS41	GD05561160	1/6W 560 Ω ±5%	CS86	DK16221300	CERAMIC 220PF ±10% IB
RS42	GD05561160	1/6W 560 Ω ±5%	CS87	DK16221300	CERAMIC 220PF ±10% IB

INTEGRATED CIRCUIT

QS01	HC10008090	IC NJM4558DD Dual OP AMP
QS02	HC10008090	IC NJM4558DD Dual OP AMP
QS03	HC10008090	IC NJM4558DD Dual OP AMP
QS11	HC10308030	IC LC78211 Analogue Switch
QS13	HC10008090	IC NJM4558DD Dual OP AMP

TRANSISTORS

QS07	HT421442A0	2SD2144S (U, V)
QS08	HT421442A0	2SD2144S (U, V)
QS09	BA20001000	DIGITAL DTC114ES
QS10	BA10001000	DIGITAL DTA114ES

MISCELLANEOUS

JS01	YT02060460	TERMINAL, 6P RCA PIN JACK
JS02	YT02040940	TERMINAL, 4P RCA PIN JACK
JS03	YJ06030570	JACK, 16P
JS04	YL01010140	TERMINAL, GND

CS88	DK16221300	CERAMIC 220PF ±10% IB
CS89	DK16221300	CERAMIC 220PF ±10% IB
CS90	DK16221300	CERAMIC 220PF ±10% IB
CS93	EJ10601610	ELECT 10μF 16V
CS94	EJ10601610	ELECT 10μF 16V
CS95	DK16151300	CERAMIC 150PF ±10% IB
CS96	DK16151300	CERAMIC 150PF ±10% IB

RESISTORS

RG51	GD05473160	1/6W 47K Ω ±5%
RG52	GD05473160	1/6W 47K Ω ±5%
RG53	GD05471160	1/6W 470 Ω ±5%
RG54	GD05471160	1/6W 470 Ω ±5%
RG55	GD05473160	1/6W 47K Ω ±5%
RG56	GD05473160	1/6W 47K Ω ±5%
RG57	GD05104160	1/6W 100K Ω ±5%
RG58	GD05104160	1/6W 100K Ω ±5%
RG59	GD05334160	1/6W 330K Ω ±5%
RG60	GD05334160	1/6W 330K Ω ±5%
RG61	GD05152160	1/6W 1.5K Ω ±5%
RG62	GD05152160	1/6W 1.5K Ω ±5%
RG63	GD05472160	1/6W 4.7K Ω ±5%
RG64	GD05472160	1/6W 4.7K Ω ±5%
RG65	GD05331160	1/6W 330 Ω ±5%
RG66	GD05331160	1/6W 330 Ω ±5%
RG67	GD05473160	1/6W 47K Ω ±5%
RG68	GD05473160	1/6W 47K Ω ±5%
RG69	GD05103160	1/6W 10K Ω ±5%
RG70	GD05103160	1/6W 10K Ω ±5%
RG71	GD05471160	1/6W 470 Ω ±5%
RG72	GD05471160	1/6W 470 Ω ±5%
RS51	GD05473160	1/6W 47K Ω ±5%
RS52	GD05473160	1/6W 47K Ω ±5%
RS53	GD05473160	1/6W 47K Ω ±5%
RS54	GD05473160	1/6W 47K Ω ±5%
RS55	GD05473160	1/6W 47K Ω ±5%
RS56	GD05473160	1/6W 47K Ω ±5%
RS57	GD05473160	1/6W 47K Ω ±5%
RS58	GD05473160	1/6W 47K Ω ±5%
RS59	GD05102160	1/6W 1K Ω ±5%
RS60	GD05102160	1/6W 1K Ω ±5%
RS61	GD05102160	1/6W 1K Ω ±5%
RS62	GD05102160	1/6W 1K Ω ±5%
RS63	GD05102160	1/6W 1K Ω ±5%
RS64	GD05102160	1/6W 1K Ω ±5%
RS65	GD05102160	1/6W 1K Ω ±5%
RS66	GD05102160	1/6W 1K Ω ±5%
RS67	GD05473160	1/6W 47K Ω ±5%
RS68	GD05473160	1/6W 47K Ω ±5%
RS69	GD05473160	1/6W 47K Ω ±5%
RS70	GD05473160	1/6W 47K Ω ±5%

PS54-V-AUDIO FUNCTION P.C. BOARD

CAPACITORS

CG51	EJ47502510	ELECT 4.7μF 25V
CG52	EJ47502510	ELECT 4.7μF 25V
CG55	EJ47502510	ELECT 4.7μF 25V
CG56	EJ47502510	ELECT 4.7μF 25V
CG57	EJ47502510	ELECT 4.7μF 25V
CG58	EJ47502510	ELECT 4.7μF 25V
CG59	EJ47502510	ELECT 4.7μF 25V
CG60	EJ47502510	ELECT 4.7μF 25V
CG61	DK16101300	CERAMIC 100PF ±10% IB
CG62	DK16101300	CERAMIC 100PF ±10% IB
CG63	EJ47502510	ELECT 4.7μF 25V
CG64	EJ47502510	ELECT 4.7μF 25V
CS51	EJ10601610	ELECT 10μF 16V
CS52	EJ10601610	ELECT 10μF 16V
CS53	EJ10601610	ELECT 10μF 16V
CS54	EJ10601610	ELECT 10μF 16V
CS55	EJ10601610	ELECT 10μF 16V
CS56	EJ10601610	ELECT 10μF 16V
CS57	EJ10601610	ELECT 10μF 16V
CS58	EJ10601610	ELECT 10μF 16V
CS61	DD38104010	CERAMIC 0.1μF +80% -20%
CS63	EA10701610	ELECT 100μF 16V
CS64	EA10701610	ELECT 100μF 16V
CS65	EA10701610	ELECT 100μF 16V
CS66	EA10701610	ELECT 100μF 16V
CS68	DD38104010	CERAMIC 0.1μF +80% -20%
CS69	DD38104010	CERAMIC 0.1μF +80% -20%

Ref. No.	Part. No.	Description
DU17	HD20029210	1SS132 IB
DU19	HD20002000	1SS176
DU20	HD20002000	1SS176
DU21	HD20002000	1SS176
DU22	HI10099320	L.E.D. GL3ED8
DU23	HD20002000	1SS176
DU24	HD20002000	1SS176
DU25	HD20002000	1SS176
DU26	HD20002000	1SS176
DU27	HD20002000	1SS176
DU28	HD20002000	1SS176
DU29	HI10062320	L.E.D. LT3D8B (RED)
DU30	HI10095320	L.E.D. LT3K44B (GRN)
DU31	HI10095320	L.E.D. LT3K44B (GRN)
DU32	HI10095320	L.E.D. LT3K44B (GRN)
DU33	HI10095320	L.E.D. LT3K44B (GRN)
DU34	HI10095320	L.E.D. LT3K44B (GRN)
DU35	HI10095320	L.E.D. LT3K44B (GRN)
DU36	HI10095320	L.E.D. LT3K44B (GRN)
DU37	HI10095320	L.E.D. LT3K44B (GRN)
DU38	HI10095320	L.E.D. LT3K44B (GRN)
DU39	HI10095320	L.E.D. LT3K44B (GRN) (AVR70)
DU40	HI10095320	L.E.D. LT3K44B (GRN)
DU41	HI10095320	L.E.D. LT3K44B (GRN)
DU42	HI10095320	L.E.D. LT3K44B (GRN)
DU43	HI10095320	L.E.D. LT3K44B (GRN)
DU44	HI10095320	L.E.D. LT3K44B (GRN)
DU45	HI10095320	L.E.D. LT3K44B (GRN)
DU48	HD20002000	1SS176
DU49	HD20002000	1SS176
DU50	HD20002000	1SS176
DU51	HD20002000	1SS176 (AVR70MK II)
DU52	HD20002000	1SS176 (AVR70MK II)

MISCELLANEOUS

JU01	YJ07011240	JACK, 31P
JU02	YP06007170	PLUG, 7P
JU03	YJ06030640	JACK, 4P
JU04	YP06020550	PLUG, 4P
JU06	YP06006930	PLUG, 3P (AVR70MK II)
SU01	SP01011280	PUSH SWITCH, TACT
SU02	SP01011280	PUSH SWITCH, TACT IB
SU03	SP01011280	PUSH SWITCH, TACT
SU04	SP01011280	PUSH SWITCH, TACT IB
SU05	SP01011280	PUSH SWITCH, TACT
SU06	SP01011280	PUSH SWITCH, TACT IB
SU12	SP01011280	PUSH SWITCH, TACT (AVR70)
SU13	SP01011280	PUSH SWITCH, TACT
SU14	SP01011280	PUSH SWITCH, TACT
SU15	SP01011280	PUSH SWITCH, TACT
SU16	SP01011280	PUSH SWITCH, TACT
SU17	SP01011280	PUSH SWITCH, TACT
SU19	SP01011280	PUSH SWITCH, TACT
SU24	SP01011280	PUSH SWITCH, TACT
SU25	SP01011280	PUSH SWITCH, TACT
SU26	SP01011280	PUSH SWITCH, TACT
SU27	SP01011280	PUSH SWITCH, TACT
SU28	SP01011280	PUSH SWITCH, TACT
SU29	SP01011280	PUSH SWITCH, TACT
SU30	SP01011280	PUSH SWITCH, TACT
SU31	SP01011280	PUSH SWITCH, TACT
SU32	SP01011280	PUSH SWITCH, TACT
SU33	SP01011280	PUSH SWITCH, TACT
SU34	SP01011280	PUSH SWITCH, TACT

VU01	HQ31206060	DISPLAY UNIT, FIP12DM8R
XU01	FQ08004010	CERAMIC RESONATOR CST8,0MHz

Ref. No. Part. No. Description

PU54-MASTER VOL P.C. BOARD

CU51	DA16101110	CERAMIC 100PF ±10%
CU52	DA16101110	CERAMIC 100PF ±10%
CAPACITORS		
RU51	GD05104160	1/6W 100K Ω ±5%
RU52	GD05104160	1/6W 100K Ω ±5%
RU53	GD05224160	1/6W 220K Ω ±5%
RU54	GD05224160	1/6W 220K Ω ±5%
RU55	GG05010140	1/6W 1 Ω ±5%
RU57	GD05103160	1/6W 10K Ω ±5% (AVR70)
RU58	GD05103160	1/6W 10K Ω ±5% (AVR70)
RESISTORS		
QU51	HT30001000	2SC536SP
QU52	HT30001000	2SC536SP
QU53	HT30001000	2SC536SP (AVR70)
QU54	HT30001000	2SC536SP (AVR70)

TRANSISTORS

MISCELLANEOUS

JU51	YP06020740	PLUG, 4P
SU55	SR02010040	ROTARY SWITCH, MASTER VOL.

PU94-POWER SW P.C. BOARD (AVR70MK II)

JU91	YP06006930	PLUG, 3P
JU92	YP06006930	PLUG, 3P
SU91	SP02011570	PUSH SWITCH, POWER

MISCELLANEOUS

PV04-REMOTE OUT P.C. BOARD

CT02	EJ22601610	ELECT 22μF 16V
CT03	DK18103310	CERAMIC 0.01μF +80% -20% IB
CT04	DK18103310	CERAMIC 0.01μF +80% -20% IB
CV01	DD38104010	CERAMIC 0.1μF +80% -20%
CV19	EJ10601610	ELECT 10μF 16V
CV20	EJ10601610	ELECT 10μF 16V
CV21	EJ10601610	ELECT 10μF 16V
CV22	EJ10601610	ELECT 10μF 16V
CV31	EJ10601610	ELECT 10μF 16V
CV32	EJ10601610	ELECT 10μF 16V
CV33	EJ10601610	ELECT 10μF 16V
CV34	EJ10601610	ELECT 10μF 16V
CV35	EJ10601610	ELECT 10μF 16V
CV36	EJ10700610	ELECT 100μF 6.3V
CV37	EJ47601610	ELECT 47μF 16V
CV38	EJ47601610	ELECT 47μF 16V
CV49	DK16101300	CERAMIC 100PF ±10% IB
CV50	DK16101300	CERAMIC 100PF ±10% IB
CV55	DK18103310	CERAMIC 0.01μF +80% -20% IB
CV56	DK18103310	CERAMIC 0.01μF +80% -20% IB
CV93	DK16101300	CERAMIC 100PF ±10% IB
CV94	DK16101300	CERAMIC 100PF ±10% IB
CV95	DK16101300	CERAMIC 100PF ±10% IB
CV96	DK16101300	CERAMIC 100PF ±10% IB

RESISTORS

RT05	GD05271160	1/6W 270 Ω ±5%
RT07	GD05473160	1/6W 47K Ω ±5%
RT20	GD05220160	1/6W 22 Ω ±5%

Ref. No.	Part. No.	Description	Ref. No.	Part. No.	Description
RV35	GD05103160	1/6W 10K Ω ±5%			
RV36	GD05103160	1/6W 10K Ω ±5%			
RV37	GD05752160	1/6W 7.5K Ω ±5%			
RV38	GD05752160	1/6W 7.5K Ω ±5%			
RV39	GD05104160	1/6W 100K Ω ±5%			
RV40	GD05104160	1/6W 100K Ω ±5%			
RV41	GD05473160	1/6W 47K Ω ±5%			
RV42	GD05473160	1/6W 47K Ω ±5%			
RV44	GD05473160	1/6W 47K Ω ±5%			
RV45	GD05473160	1/6W 47K Ω ±5%			

INTEGRATED CIRCUITS

QV01	HC10262050	IC TC9215P Analogue Switch
QV07	HC10008090	IC NJM4558DD Dual OP AMP

TRANSISTORS

QT01	HW10006320	PHOTO UNIT PC-817
QT04	BA10007210	DIGITAL DTA114ES

MISCELLANEOUS

JT03	YJ01004230	JACK, MINI
JV04	YP06020940	PLUG, 12P
JV05	YP06020940	PLUG, 12P
JV06	YJ06030590	JACK, 24P
JV07	YP06020640	PLUG, 14P
JV08	YP06006680	PLUG, 8P
JV09	YL01010140	TERMINAL, GND
JV10	YP06020940	PLUG, 12P
JV11	YL01010140	TERMINAL, GND
JV59	YL01010140	TERMINAL, GND
LV04	FM12223010	EMI FILTER
LV05	FM12223010	EMI FILTER
LV06	FM12223010	EMI FILTER

PW04-H.P.P.C. BOARD

CAPACITORS

CW01	DK18103310	CERAMIC 0.01μF +80% -20% IB
CW02	DK18103310	CERAMIC 0.01μF +80% -20% IB
CW03	DK18103310	CERAMIC 0.01μF +80% -20% IB

MISCELLANEOUS

JW01	YJ01004240	JACK, PHONE
JW02	YP06010450	PLUG, 5P
WW01	YB00152110	CONNECTIVE CORD, 1P

PY04-CONNECT P.C. BOARD

CAPACITORS

CS91	EJ10601610	ELECT 10μF 16V
CS92	EJ10601610	ELECT 10μF 16V
CY01	EJ47502510	ELECT 4.7μF 25V BK
CY02	DD38104010	CERAMIC 0.1μF +80% -20%
CY04	DD38104010	CERAMIC 0.1μF +80% -20%
CY06	DD15470300	CERAMIC 47PF ±5%
CY08	DD15470300	CERAMIC 47PF ±5%
CY09	DD15470300	CERAMIC 47PF ±5% IB
CY12	DD15470300	CERAMIC 47PF ±5%
CY14	DD38104010	CERAMIC 0.1μF +80% -20%
CY15	DK18103310	CERAMIC 0.01μF +80% -20% IB
CY96	DK18103310	CERAMIC 0.01μF +80% -20% IB
CY97	DK18103310	CERAMIC 0.01μF +80% -20% IB
CY98	DD15470300	CERAMIC 47PF ±5% IB
CY99	DK18103310	CERAMIC 0.01μF +80% -20% IB

RESISTORS

RS91	GD05473160	1/6W 47K Ω ±5%
RS92	GD05473160	1/6W 47K Ω ±5%
RY01	GD05103160	1/6W 10K Ω ±5%
RY02	GD05103160	1/6W 10K Ω ±5%
RY03	GD05103160	1/6W 10K Ω ±5%
RY04	GD05103160	1/6W 10K Ω ±5%
RY05	GD05103160	1/6W 10K Ω ±5%
RY06	GD05103160	1/6W 10K Ω ±5%
RY07	GD05103160	1/6W 10K Ω ±5%
RY08	GD05103160	1/6W 10K Ω ±5%
RY09	GD05103160	1/6W 10K Ω ±5%
RY10	GD05103160	1/6W 10K Ω ±5%
RY11	GD05103160	1/6W 10K Ω ±5%
RY12	GD05103160	1/6W 10K Ω ±5%
RY13	GD05103160	1/6W 10K Ω ±5%
RY14	GD05103160	1/6W 10K Ω ±5%
RY15	GD05103160	1/6W 10K Ω ±5%
RY18	GD05472160	1/6W 4.7K Ω ±5%
RY19	GD05472160	1/6W 4.7K Ω ±5%
RY20	GD05103160	1/6W 10K Ω ±5%
RY21	GD05103160	1/6W 10K Ω ±5%
RY22	GD05103160	1/6W 10K Ω ±5%
RY23	GD05332160	1/6W 3.3K Ω ±5%
RY24	GD05103160	1/6W 10K Ω ±5%
RY25	GD05103160	1/6W 10K Ω ±5%
RY26	GD05103160	1/6W 10K Ω ±5%
RY27	GD05103160	1/6W 10K Ω ±5%
RY28	GD05472160	1/6W 4.7K Ω ±5%
RY29	GD05472160	1/6W 4.7K Ω ±5%
RY30	GD05103160	1/6W 10K Ω ±5%
RY31	GD05103160	1/6W 10K Ω ±5%
RY32	GD05103160	1/6W 10K Ω ±5%
RY33	GD05103160	1/6W 10K Ω ±5%
UY97	GD05102160	1/6W 1K Ω ±5% IB

INTEGRATED CIRCUITS

QY10	HC10370050	IC TC9173P Port Expander
QY11	HC10250050	IC TC9174P Port Expander
QY12	HC754100B0	IC 74HC541 Octal Buffer/Line Drivers

TRANSISTORS

QY01	BA10001000	DIGITAL DTA114ES
QY02	BA20002000	DIGITAL DTC144ES
QY03	BA10001000	DIGITAL DTA114ES
QY04	BA20002000	DIGITAL DTC144ES
QY05	BA10001000	DIGITAL DTA114ES
QY06	BA20002000	DIGITAL DTC144ES
QY07	BA10001000	DIGITAL DTA114ES
QY08	BA20002000	DIGITAL DTC144ES
QY13	BA20002000	DIGITAL DTC144ES

DIODES

DY01	HD20002000	1SS176
DY02	HD20002000	1SS176
DY03	HD20002000	1SS176
DY04	HD20002000	1SS176
DY09	HD20002710	1D3 1A/200V
DY10	HD20002000	1SS176
DY11	HD20002000	1SS176
DY14	HD30361000	ZENER, 3.6V

MISCELLANEOUS

JY01	YJ06030140	JACK, 14P
JY02	YP06020670	PLUG, 16P

Ref. No.	Part. No.	Description	Ref. No.	Part. No.	Description
JY03	YP06020680	PLUG, 20P	C311	EJ47502510	ELECT 4.7 μ F 25V
JY04	YJ06030140	JACK, 14P	C312	EJ47502510	ELECT 4.7 μ F 25V
JY05	YJ06030100	JACK, 10P	C313	EJ10601610	ELECT 10 μ F 16V IB
JY06	YP06020700	PLUG, 30P	C314	EA47603510	ELECT 47 μ F 35V IB
JY07	YJ06030140	JACK, 14P	C315	DK16151300	CERAMIC 150PF \pm 10% IB
JY08	YP06020690	PLUG, 24P	C316	DK16151300	CERAMIC 150PF \pm 10% IB
JY09	YJ07011240	JACK, 31P	C317	DK16101300	CERAMIC 100PF \pm 10% IB
JY10	YP06006680	PLUG, 8P	C318	DK16101300	CERAMIC 100PF \pm 10% IB
JY11	YP06003830	PLUG, 3P	C501	DD15470300	CERAMIC 47PF \pm 5%

P104-TUNER P.C. BOARD

CAPACITORS

CA01	CT12000200	TRIM.CAP. 20PF	C507	DK18103310	CERAMIC 0.01 μ F +80% -20%
CA02	DK18473310	CERAMIC 0.047 μ F +80% -20%	C508	EA10701610	ELECT 100 μ F 16V
CA03	DD15150300	CERAMIC 15PF \pm 5%	C509	DK16101300	CERAMIC 100PF \pm 10%
CA04	DF15391550	FILM 390PF \pm 5%	C510	DK16101300	CERAMIC 100PF \pm 10%
CA05	DD15470300	CERAMIC 47PF \pm 5%	C511	DK18103310	CERAMIC 0.01 μ F +80% -20%
CA06	DK18103310	CERAMIC 0.01 μ F +80% -20%	C901	EA10700610	ELECT 100 μ F 6.3V IB
CA07	DK18103310	CERAMIC 0.01 μ F +80% -20% IB	C902	EJ10601610	ELECT 10 μ F 16V IB
CA08	CT12000200	TRIMMING 20PF \pm 1% IB	C903	DK16332300	CERAMIC 3300PF \pm 10% IB
CA09	DD15150300	CERAMIC 15PF \pm 5% IB	C904	DK16332300	CERAMIC 3300PF \pm 10% IB
CA11	DD15680300	CERAMIC 68PF \pm 5% IB	C905	DK18103310	CERAMIC 0.01 μ F +80% -20% IB
CA12	DD15151300	CERAMIC 150PF \pm 5% IB	C906	DK18103310	CERAMIC 0.01 μ F +80% -20% IB
CA13	DK18103310	CERAMIC 0.01 μ F +80% -20% IB	C907	EJ10601610	ELECT 10 μ F 16V IB
CA14	DK18103310	CERAMIC 0.01 μ F +80% -20% IB	C908	EJ10601610	ELECT 10 μ F 16V IB
CA18	EJ47502510	ELECT 4.7 μ F 25V	C909	EJ47502510	ELECT 4.7 μ F 25V IB
C201	DK18103310	CERAMIC 0.01 μ F +80% -20%	C910	EJ10601610	ELECT 10 μ F 16V IB
C202	DK18103310	CERAMIC 0.01 μ F +80% -20%	C911	DK18223310	CERAMIC 0.022 μ F +80% -20% IB
C203	DK18473310	CERAMIC 0.047 μ F +80% -20%	C912	DF15333310	FILM 0.033 μ F \pm 5% IB
C204	DK18473310	CERAMIC 0.047 μ F +80% -20%	C913	DF15333310	FILM 0.033 μ F \pm 5% IB
C205	EJ10505010	ELECT 1 μ F 50V	C914	DF15682350	FILM 0.0068 μ F \pm 5% IB
C206	EJ10601610	ELECT 10 μ F 16V	C915	DK18103310	CERAMIC 0.01 μ F +80% -20% IB
C207	EA10701610	ELECT 100 μ F 16V			
C208	DK18473310	CERAMIC 0.047 μ F +80% -20%	RA01	GD05103160	1/6W 10K Ω \pm 5%
C209	EJ10505010	ELECT 1 μ F 50V	RA02	GD05104160	1/6W 100K Ω \pm 5%
C210	DK18103310	CERAMIC 0.01 μ F +80% -20%	RA03	GD05103160	1/6W 10K Ω \pm 5% IB
C211	EJ22505010	ELECT 2.2 μ F 50V	RA04	GD05154160	1/6W 150K Ω \pm 5% IB
C212	EJ10505010	ELECT 1 μ F 50V	RA06	GD05104160	1/6W 100K Ω \pm 5% IB
C213	EJ47405010	ELECT 0.47 μ F 50V	RA07	GD05103160	1/6W 10K Ω \pm 5% IB
C214	EA47601610	ELECT 47 μ F 16V	RA08	GD05154160	1/6W 150K Ω \pm 5% IB
C215	DK18473310	CERAMIC 0.047 μ F +80% -20%	RA09	GD05222160	1/6W 2.2K Ω \pm 5% IB
C216	EA10701610	ELECT 100 μ F 16V	R102	GD05103160	1/6W 10K Ω \pm 5% IB
C217	DK16332300	CERAMIC 3300PF \pm 10% IB	R103	GD05103160	1/6W 10K Ω \pm 5% IB
C217	DF15822350	FILM 8200PF \pm 5% BK	R201	GD05101160	1/6W 100 Ω \pm 5% BK
C218	DK18103310	CERAMIC 0.01 μ F +80% -20%	R202	GD05471160	1/6W 470 Ω \pm 5% IB
C219	EJ10601610	ELECT 10 μ F 16V	R202	GD05391160	1/6W 390 Ω \pm 5% BK
C220	DK16222300	CERAMIC 2200PF \pm 10% IB	R203	GD05222160	1/6W 2.2K Ω \pm 5%
C220	DK16472300	CERAMIC 4700PF \pm 10% BK	R204	GD05471160	1/6W 470 Ω \pm 5%
C222	DK16152300	CERAMIC 1500PF \pm 10%	R205	GD05331160	1/6W 330 Ω \pm 5%
C223	DK18103310	CERAMIC 0.01 μ F +80% -20%	R206	GD05153160	1/6W 15 Ω \pm 5%
C224	DK18103310	CERAMIC 0.01 μ F +80% -20% IB	R207	GG05181140	1/4W 180 Ω \pm 5%
C225	DK18103310	CERAMIC 0.01 μ F +80% -20%	R208	GD05392160	1/6W 3.9K Ω \pm 5%
C226	DK18103310	CERAMIC 0.01 μ F +80% -20%	R209	GD05104160	1/6W 100K Ω \pm 5%
C227	DK16272300	CERAMIC 2700PF \pm 10% BK	R210	GD05332160	1/6W 3.3K Ω \pm 5%
C233	DK18103310	CERAMIC 0.01 μ F +80% -20%	R213	GD05220160	1/6W 22 Ω \pm 5%
C234	DK18103310	CERAMIC 0.01 μ F +80% -20%	R214	GD05473160	1/6W 47K Ω \pm 5%
C301	DF15333310	FILM 0.033 μ F \pm 5% IB	R215	GD05154160	1/6W 150K Ω \pm 5% IB
C301	DF15473310	FILM 0.047 μ F \pm 5% BK	R215	GD05333160	1/6W 33K Ω \pm 5% BK
C302	DF15333310	FILM 0.033 μ F \pm 5% IB	R216	GD05103160	1/6W 10K Ω \pm 5%
C302	DF15473310	FILM 0.047 μ F \pm 5% BK	R217	GG05181140	1/4W 180 Ω \pm 5% IB
C303	EJ10601610	ELECT 10 μ F 16V	R217	GG05221140	1/4W 220 Ω \pm 5% BK
C304	EJ10601610	ELECT 10 μ F 16V	R219	GD05334160	1/6W 330K Ω \pm 5%
C305	EJ47502510	ELECT 4.7 μ F 25V IB	R301	GD05104160	1/6W 100K Ω \pm 5% IB
C306	EJ47502510	ELECT 4.7 μ F 25V IB	R302	GD05104160	1/6W 100K Ω \pm 5% IB
C307	EJ10601610	ELECT 10 μ F 16V IB	R303	GD05103160	1/6W 10K Ω \pm 5% IB
C308	EJ10601610	ELECT 10 μ F 16V IB			

RESISTORS

RA01	GD05103160	1/6W 10K Ω \pm 5%
RA02	GD05104160	1/6W 100K Ω \pm 5%
RA03	GD05103160	1/6W 10K Ω \pm 5% IB
RA04	GD05154160	1/6W 150K Ω \pm 5% IB
RA06	GD05104160	1/6W 100K Ω \pm 5% IB
RA07	GD05103160	1/6W 10K Ω \pm 5% IB
RA08	GD05154160	1/6W 150K Ω \pm 5% IB
RA09	GD05222160	1/6W 2.2K Ω \pm 5% IB
R102	GD05103160	1/6W 10K Ω \pm 5% IB
R103	GD05103160	1/6W 10K Ω \pm 5% IB
R201	GD05101160	1/6W 100 Ω \pm 5% BK
R202	GD05471160	1/6W 470 Ω \pm 5% IB
R202	GD05391160	1/6W 390 Ω \pm 5% BK
R203	GD05222160	1/6W 2.2K Ω \pm 5%
R204	GD05471160	1/6W 470 Ω \pm 5%
R205	GD05331160	1/6W 330 Ω \pm 5%
R206	GD05153160	1/6W 15 Ω \pm 5%
R207	GG05181140	1/4W 180 Ω \pm 5%
R208	GD05392160	1/6W 3.9K Ω \pm 5%
R209	GD05104160	1/6W 100K Ω \pm 5%
R210	GD05332160	1/6W 3.3K Ω \pm 5%
R213	GD05220160	1/6W 22 Ω \pm 5%
R214	GD05473160	1/6W 47K Ω \pm 5%
R215	GD05154160	1/6W 150K Ω \pm 5% IB
R215	GD05333160	1/6W 33K Ω \pm 5% BK
R216	GD05103160	1/6W 10K Ω \pm 5%
R217	GG05181140	1/4W 180 Ω \pm 5% IB
R217	GG05221140	1/4W 220 Ω \pm 5% BK
R219	GD05334160	1/6W 330K Ω \pm 5%
R301	GD05104160	1/6W 100K Ω \pm 5% IB
R302	GD05104160	1/6W 100K Ω \pm 5% IB
R303	GD05103160	1/6W 10K Ω \pm 5% IB

Ref. No.	Part. No.	Description	Ref. No.	Part. No.	Description
R304	GD05103160	1/6W 10K Ω ±5% IB			
R305	GD05153160	1/6W 15K Ω ±5% IB			
R306	GD05153160	1/6W 15K Ω ±5% IB			
R307	GD05221160	1/6W 220 Ω ±5%			
R308	GD05221160	1/6W 220 Ω ±5%			
R309	GD05473160	1/6W 47K Ω ±5%			
R310	GD05473160	1/6W 47K Ω ±5%			
R311	GD05473160	1/6W 47K Ω ±5% IB			
R312	GD05473160	1/6W 47K Ω ±5% IB			
R313	GG05221140	1/4W 220 Ω ±5%			
R501	GD05102160	1/6W 1K Ω ±5%			
R502	GD05332160	1/6W 3.3K Ω ±5%			
R503	GD05102160	1/6W 1K Ω ±5%			
R504	GD05103160	1/6W 10K Ω ±5%			
R506	GD05102160	1/6W 1K Ω ±5%			
R507	GD05332160	1/6W 3.3K Ω ±5%			
R508	GD05473160	1/6W 47K Ω ±5%			
R510	GD05102160	1/6W 1K Ω ±5%			
R511	GD05102160	1/6W 1K Ω ±5%			
R512	GA05271010	1W 270 Ω ±5%			
R513	GD05103160	1/6W 10K Ω ±5%			
R514	GG05470160	1/6W 47 Ω ±5%			
R515	GD05683160	1/6W 68K Ω ±5%			
R516	GD05473160	1/6W 47K Ω ±5%			
R517	GD05473160	1/6W 47K Ω ±5%			
R901	GD05333160	1/6W 33K Ω ±5% IB			
R902	GD05103160	1/6W 10K Ω ±5% IB			
R903	GD05223160	1/6W 22K Ω ±5% IB			
R904	GD05102160	1/6W 1K Ω ±5% IB			
R905	GD05682160	1/6W 6.8K Ω ±5% IB			
R907	GD05102160	1/6W 1K Ω ±5% IB			
R908	GD05332160	1/6W 3.3K Ω ±5% IB			
R909	GD05103160	1/6W 10K Ω ±5% IB			
R910	GA05221010	1W 220 Ω ±5% IB			
R911	GD05103160	1/6W 10K Ω ±5% IB			
CONTROLS					
RA11	RA02230780	TRIM-POTS 22K Ω			
R211	RA02230780	TRIM-POTS 22K Ω (B)			
R212	RA04720780	TRIM-POTS 4.7K Ω (B)			
R218	RA04720780	TRIM-POTS 4.7K Ω (B) IB			
R906	RA04720780	TRIM-POTS 4.7K Ω (B) IB			
INTEGRATED CIRCUITS					
Q201	HC10342030	IC LA1836 FM/AM IF, MPX IC			
Q301	HC10008090	IC NJM4558DD IB Dual OP AMP			
Q501	HC10221030	IC LC7218 PLL Frequency Synthesizer			
Q901	HC10315030	IC LA2232 IB RDS Demodulator			
Q902	HC10333030	IC LC7073 IB RDS Error Corrector			
TRANSISTORS					
QA01	HT30001000	2SC536SP IB			
QA02	HT30001000	2SC536SP IB			
QA03	HT421442A0	2SD2144S (U, V) IB			
QA04	BA10002000	DIGITAL DTA144ES IB			
QA05	BA10002000	DIGITAL DTA144ES IB			
Q202	HT318091P0	2SC1809SP			
Q203	BA10007210	DIGITAL DTA114ES			
Q204	BA20002000	DIGITAL DTC144ES			
Q503	HT30001000	2SC536SP			
Q903	HT30001000	2SC536SP IB			
F.E.T.					
Q502	HF200300B0	2SK30ATM			
					DIODES
DA01	HD40009030	VARICAP SVC342-L			
DA02	HD20017210	1SS135 IB			
DA03	HD40009030	VARICAP SVC342-L IB			
DA04	HD20017210	1SS135 IB			
DA05	HD20002000	1SS176			
DA06	HD20002000	1SS176			
D201	HD20002000	1SS176			
D202	HD30681000	ZENER 6.8V			
D501	HD30511000	ZENER 5.1V			
D901	HD30511000	ZENER 5.1V IB			
					COILS
LA01	LA10295170	ANT, MW 280μH			
LA02	LO70013010	OSC, MW			
LA03	LA10295160	ANT, LW IB			
LA04	LO70013020	OSC, LW IB			
LA05	LC23960710	CHOKER, 39mH			
L201	LI70376010	I.F.T., FM DET			
L301	LS10293020	M.P.X., 19.38KHz			
L302	LS10293020	M.P.X., 19.38KHz			
L501	LC14733800	CHOKER, 47μH			
L502	LC14733800	CHOKER, 47μH			
L503	LC14733800	CHOKER, 47μH			
L504	LC14733800	CHOKER, 47μH			
					MISCELLANEOUS
A101	AV01203020	VHF TUNER, FE415-G11 IB			
A101	AV01202220	VHF TUNER, FE337-A05 BK			
F201	FF11070620	CERAMIC FILTER IB			
F201	FF11070610	CERAMIC FILTER BK			
F202	FF11070620	CERAMIC FILTER			
J101	YT03030020	TERMINAL, ANT IB			
J101	YT03030080	TERMINAL, ANT BK			
J102	YL01010140	TERMINAL, GND			
J301	YP06020640	PLUG, 14P			
LA06	FF10045330	CERAMIC FILTER			
X201	FQ04563040	CERAMIC VIB.			
X501	JX07001260	CRYSTAL, 7.2MHz			
X901	FQ04563040	CERAMIC VIB. CSB456F33 IB			
X902	FQ04004030	CERAMIC VIB. 4.00MHz IB			
P604-THX PRO-LOGIC DSP P.C. BOARD					
					CAPACITORS, CHIP
CR01	DK98104200	CERAMIC 0.1μF +80% -20%			
CR02	EY10700620	ELECT 100μF 6.3V			
CR03	EY10700620	ELECT 100μF 6.3V			
CR04	DK98104200	CERAMIC 0.1μF +80% -20%			
CR05	DK98104200	CERAMIC 0.1μF +80% -20%			
CR06	DK98104200	CERAMIC 0.1μF +80% -20%			
CR07	EY10700620	ELECT 100μF 6.3V			
CR08	DK96103200	CERAMIC 0.01μF ±10%			
CR09	EY10601620	ELECT 10μF 16V			
CR10	EY10601620	ELECT 10μF 16V			
CR11	DD95101300	CERAMIC 100PF ±5%			
CR12	DD95101300	CERAMIC 100PF ±5%			
CR13	DK98104200	CERAMIC 0.1μF +80% -20%			
CR14	DK98104200	CERAMIC 0.1μF +80% -20%			
CR15	DD95331300	CERAMIC 330PF ±5%			
CR16	DD95331300	CERAMIC 330PF ±5%			
CR17	DD95151300	CERAMIC 150PF ±5%			
CR18	DD95151300	CERAMIC 150PF ±5%			
CR19	DK98104200	CERAMIC 0.1μF +80% -20%			

Ref. No.	Part. No.	Description	Ref. No.	Part. No.	Description
CR20	DK98104200	CERAMIC 0.1μF +80% -20%	RR03	NN05103610	1/16W 10K Ω ±5%
CR61	DK98104200	CERAMIC 0.1μF +80% -20%	RR04	NN05103610	1/16W 10K Ω ±5%
CR62	EY10700620	ELECT 100μF 6.3V	RR05	NN05223610	1/16W 22K Ω ±5%
CR63	EY10700620	ELECT 100μF 6.3V	RR06	NN05223610	1/16W 22K Ω ±5%
CR64	DK98104200	CERAMIC 0.1μF +80% -20%	RR07	NN05223610	1/16W 22K Ω ±5%
CR65	DK98104200	CERAMIC 0.1μF +80% -20%	RR08	NN05223610	1/16W 22K Ω ±5%
CR66	DK98104200	CERAMIC 0.1μF +80% -20%	RR09	NN05223610	1/16W 22K Ω ±5%
CR67	EY10700620	ELECT 100μF 6.3V	RR10	NN05223610	1/16W 22K Ω ±5%
CR68	DK96103200	CERAMIC 0.01μF ±10%	RR41	NN05473610	1/16W 47K Ω ±5%
CR69	EY10601620	ELECT 10μF 16V	RR42	NN05473610	1/16W 47K Ω ±5%
CR70	EY10601620	ELECT 10μF 16V	RR43	NN05103610	1/16W 10K Ω ±5%
CR71	DD95101300	CERAMIC 100PF ±5%	RR44	NN05103610	1/16W 10K Ω ±5%
CR72	DD95101300	CERAMIC 100PF ±5%	RR45	NN05103610	1/16W 10K Ω ±5%
CR73	DK98104200	CERAMIC 0.1μF +80% -20%	RR46	NN05103610	1/16W 10K Ω ±5%
CR74	DK98104200	CERAMIC 0.1μF +80% -20%	RR47	NN05223610	1/16W 22K Ω ±5%
CR75	DD95331300	CERAMIC 330PF ±5%	RR48	NN05223610	1/16W 22K Ω ±5%
CR76	DD95331300	CERAMIC 330PF ±5%	RR49	NN05223610	1/16W 22K Ω ±5%
CR77	DD95151300	CERAMIC 150PF ±5%	RR50	NN05223610	1/16W 22K Ω ±5%
CR78	DD95151300	CERAMIC 150PF ±5%	RR71	NN05000610	1/16W 0 Ω ±5%
CR79	DK98104200	CERAMIC 0.1μF +80% -20%	RR72	NN05000610	1/16W 0 Ω ±5%
CR80	DK98104200	CERAMIC 0.1μF +80% -20%	RR73	NN05000610	1/16W 0 Ω ±5%
C601	EY10601620	ELECT 10μF 16V	RR74	NN05000610	1/16W 0 Ω ±5%
C602	EY10601620	ELECT 10μF 16V	RR75	NN05000610	1/16W 0 Ω ±5%
C603	DD95151300	CERAMIC 150PF ±5%	RR76	NN05000610	1/16W 0 Ω ±5%
C604	DD95151300	CERAMIC 150PF ±5%	RR78	NN05000610	1/16W 0 Ω ±5%
C605	DD95151300	CERAMIC 150PF ±5%	RR79	NN05000610	1/16W 0 Ω ±5%
C606	DD95151300	CERAMIC 150PF ±5%	RR83	NN05000610	1/16W 0 Ω ±5%
C609	DK98104200	CERAMIC 0.1μF +80% -20%	RR84	NN05000610	1/16W 0 Ω ±5%
C610	DK98104200	CERAMIC 0.1μF +80% -20%	R601	NN05153610	1/16W 15K Ω ±5%
C617	DK98104200	CERAMIC 0.1μF +80% -20%	R602	NN05153610	1/16W 15K Ω ±5%
C618	DK98104200	CERAMIC 0.1μF +80% -20%	R603	NN05103610	1/16W 10K Ω ±5%
C619	DD95331300	CERAMIC 330PF ±5%	R604	NN05103610	1/16W 10K Ω ±5%
C620	DD95331300	CERAMIC 330PF ±5%	R605	NN05103610	1/16W 10K Ω ±5%
C625	EY10700620	ELECT 100μF 6.3V	R606	NN05103610	1/16W 10K Ω ±5%
C627	DK98104200	CERAMIC 0.1μF +80% -20%	R607	NN05103610	1/16W 10K Ω ±5%
C628	EY10700620	ELECT 100μF 6.3V	R608	NN05103610	1/16W 10K Ω ±5%
C629	DK98104200	CERAMIC 0.1μF +80% -20%	R609	NN05103610	1/16W 10K Ω ±5%
C630	EY10700620	ELECT 100μF 6.3V	R610	NN05103610	1/16W 10K Ω ±5%
C631	DK98104200	CERAMIC 0.1μF +80% -20%	R611	NN05103610	1/16W 10K Ω ±5%
C632	DK98104200	CERAMIC 0.1μF +80% -20%	R612	NN05103610	1/16W 10K Ω ±5%
C635	DK96103200	CERAMIC 0.01μF ±10%	R613	NN05103610	1/16W 10K Ω ±5%
C636	DK96103200	CERAMIC 0.01μF ±10%	R614	NN05103610	1/16W 10K Ω ±5%
C641	DK98104200	CERAMIC 0.1μF +80% -20%	R615	NN05151610	1/16W 150 Ω ±5%
C642	DK98104200	CERAMIC 0.1μF +80% -20%	R616	NN05151610	1/16W 150 Ω ±5%
C643	EY10601620	ELECT 10μF 16V	R617	NN05103610	1/16W 10K Ω ±5%
C644	EY10601620	ELECT 10μF 16V	R618	NN05103610	1/16W 10K Ω ±5%
C651	DK98104200	CERAMIC 0.1μF +80% -20%	R619	NN05151610	1/16W 150 Ω ±5%
C652	EY10700620	ELECT 100μF 6.3V	R620	NN05151610	1/16W 150 Ω ±5%
C653	DK98104200	CERAMIC 0.1μF +80% -20%	R621	NN05103610	1/16W 10K Ω ±5%
C654	EY10700620	ELECT 100μF 6.3V	R622	NN05000610	1/16W 0 Ω ±5%
C655	DD91100300	CERAMIC 10PF ±0.5PF	R661	NN05222610	1/16W 2.2K Ω ±5%
C656	DD95120300	CERAMIC 12PF ±5%	R662	NN05222610	1/16W 2.2K Ω ±5%
C657	DK98104200	CERAMIC 0.1μF +80% -20%	R671	NN05472610	1/16W 4.7K Ω ±5%
C658	EY10700620	ELECT 100μF 6.3V	R672	NN05472610	1/16W 4.7K Ω ±5%
C659	DK98104200	CERAMIC 0.1μF +80% -20%	R673	NN05472610	1/16W 4.7K Ω ±5%
C660	EY10700620	ELECT 100μF 6.3V	R674	NN05472610	1/16W 4.7K Ω ±5%
C661	DK98104200	CERAMIC 0.1μF +80% -20%	R698	NN05000610	1/16W 0 Ω ±5%
C667	DK98104200	CERAMIC 0.1μF +80% -20%	R699	NN05000610	1/16W 0 Ω ±5%
C677	DK98104200	CERAMIC 0.1μF +80% -20%	L606	NN05000610	1/16W 0 Ω ±5%
			L607	RI05000180	1/8W 0 Ω ±5%

RESISTORS, CHIP

C607	NN05000610	1/16W 0 Ω ±5%
C608	NN05000610	1/16W 0 Ω ±5%
C611	NN05000610	1/16W 0 Ω ±5%
C612	NN05000610	1/16W 0 Ω ±5%
RR01	NN05682610	1/16W 6.8K Ω ±5%
RR02	NN05682610	1/16W 6.8K Ω ±5%


INTEGRATED CIRCUITS

Q601	HC10359030	IC LC83016JE Digital Signal Processor
Q603	HC10338030	IC LC32464PM-80 64Kx4bit Dram
Q605	HC10015480	IC AK4320 (DAC) Digital Analogue Converter
Q607	HC10015480	IC AK4320 (DAC) Digital Analogue Converter
Q609	HC10172090	IC NJM2115M Dual OP AMP


Ref. No.	Part. No.	Description	Ref. No.	Part. No.	Description
Q610	HC10172090	IC NJM2115M Dual OP AMP	C756	OA10610020	ELECT 10μF 100V
Q611	HC10172090	IC NJM2115M Dual OP AMP	C757	DK16221300	CERAMIC 220PF ±10%
Q612	HC10172090	IC NJM2115M Dual OP AMP	C758	DD15470300	CERAMIC 47PF ±5%
Q613	HC10011090	IC NJM4558M (Y) Dual OP AMP	C759	EA10510010	ELECT 1μF 100V
Q614	HC10011090	IC NJM4558M (Y) Dual OP AMP	C760	OA47706320	ELECT 470μF 63V
Q617	HC10011090	IC NJM4558M (Y) Dual OP AMP	C761	OA47706320	ELECT 470μF 63V
Q618	HC10011090	IC NJM4558M (Y) Dual OP AMP	C762	EJ10405010	ELECT 0.1μF 50V
Q671	HC10017480	IC AK5340 (ADC) Analogue Digital Converter	C763	EJ10405010	ELECT 0.1μF 50V
TRANSISTOR			▲C801	DK18103560	CERAMIC 0.01μF +80% -20%
Q623	BA20004210	DIGITAL DTC144EK	▲C802	EB82806370	ELECT 8200μF 63V
MISCELLANEOUS			▲C803	EB82806370	ELECT 8200μF 63V
J601	YJ06031000	JACK, 12P	▲C804	DK18103560	CERAMIC 0.01μF +80% -20%
J602	YJ06031000	JACK, 12P	▲C805	EB47805040	ELECT 4700μF 50V
J603	YJ06031000	JACK, 12P	▲C806	EB47805040	ELECT 4700μF 50V
L601	FM32102010	EMI FILTER	C807	DK18103310	CERAMIC 0.01μF +80% -20%
L602	FN31000010	FEI FILTER	C808	DK18103310	CERAMIC 0.01μF +80% -20%
L603	FN31000010	FEI FILTER	C809	EA33802510	ELECT 3300μF 25V
X671	FZ02255030	CERAMIC RESONATOR 22.5792MHZ	C810	EA33802510	ELECT 3300μF 25V
P704-MAIN AMP P.C. BOARD					
CAPACITORS			C811	DK18103310	CERAMIC 0.01μF +80% -20%
CN03	EA22601610	ELECT 22μF 16V	C812	DK18103310	CERAMIC 0.01μF +80% -20%
CN04	EJ33505010	ELECT 3.3μF 50V IB	C813	EA10701610	ELECT 100μF 16V
CN04	EJ22505010	ELECT 2.2μF 50V IB	C814	EA10701610	ELECT 100μF 16V
CN05	DD38104010	CERAMIC 0.1μF +80% -20%	C815	DK18103310	CERAMIC 0.01μF +80% -20%
CN06	EJ47601610	ELECT 47μF 16V	C816	DK18103310	CERAMIC 0.01μF +80% -20%
CN07	EJ47601610	ELECT 47μF 16V	C817	EA22801610	ELECT 2200μF 16V
CN08	EJ10505010	ELECT 1μF 50V	C818	EA22801610	ELECT 2200μF 16V
CN09	EJ10701010	ELECT 100μF 10V	C820	DA17103110	CERAMIC 0.01μF ±20%
CN10	DD38104010	CERAMIC 0.1μF +80% -20%	C821	EA10701610	ELECT 100μF 16V
CN12	DD38104010	CERAMIC 0.1μF +80% -20%	C822	EA10701610	ELECT 100μF 16V
CN13	DK16101300	CERAMIC 100PF ±10% IB	C823	EA10701610	ELECT 100μF 16V
CN14	DK16101300	CERAMIC 100PF ±10% IB	C824	DK18103310	CERAMIC 0.01μF +80% -20%
CN15	DK18103310	CERAMIC 0.01μF +80% -20%	C825	EA10701610	ELECT 100μF 16V
CN16	DK18103310	CERAMIC 0.01μF +80% -20% IB	C826	EA10701610	ELECT 100μF 16V
C701	OA47601020	ELECT 47μF 10V	C827	EA10701610	ELECT 100μF 16V
C702	OA47601020	ELECT 47μF 10V	C828	EA10701610	ELECT 100μF 16V
C703	DD15680300	CERAMIC 68PF ±5%	C829	EA10701610	ELECT 100μF 16V
C704	DD15680300	CERAMIC 68PF ±5%	C899	DK18103310	CERAMIC 0.01μF +80% -20% IB
C705	DK16331300	CERAMIC 330PF ±10%	RESISTORS		
C706	DK16331300	CERAMIC 330PF ±10%	▲RN01	GG05471160	1/6W 470 Ω ±5%
C707	EA47700610	ELECT 470μF 6.3V	▲RN02	GG05471160	1/6W 470 Ω ±5%
C708	EA47700610	ELECT 470μF 6.3V	RN03	GD05682160	1/6W 6.8K Ω ±5%
C709	EA10510010	ELECT 1μF 100V	RN04	GD05682160	1/6W 6.8K Ω ±5%
C710	EA10510010	ELECT 1μF 100V	RN05	GD05102160	1/6W 1K Ω ±5%
C711	OA10610020	ELECT 10μF 100V	RN06	GD05102160	1/6W 1K Ω ±5%
C712	OA10610020	ELECT 10μF 100V	RN07	GD05223160	1/6W 22K Ω ±5%
C713	DK16221300	CERAMIC 220PF ±10%	RN08	GD05223160	1/6W 22K Ω ±5%
C714	DK16221300	CERAMIC 220PF ±10%	RN10	GD05682160	1/6W 6.8K Ω ±5%
C715	DD15470300	CERAMIC 47PF ±5%	RN11	GD05473160	1/6W 47K Ω ±5%
C716	DD15470300	CERAMIC 47PF ±5%	RN12	GD05472160	1/6W 4.7K Ω ±5%
C719	OA47706320	ELECT 470μF 63V	RN13	GD05473160	1/6W 47K Ω ±5%
C720	OA47706320	ELECT 470μF 63V	RN14	GD05473160	1/6W 47K Ω ±5%
C721	OA47706320	ELECT 470μF 63V	RN15	GD05104160	1/6W 100K Ω ±5%
C722	OA47706320	ELECT 470μF 63V	RN16	GD05822160	1/6W 8.2K Ω ±5%
C723	OA10405020	ELECT 0.1μF 50V	RN20	GG05222140	1/6W 2.2K Ω ±5%
C724	OA10405020	ELECT 0.1μF 50V	RN21	GD05473160	1/6W 47K Ω ±5%
C725	OA10405020	ELECT 0.1μF 50V	RN22	GD05333160	1/6W 33K Ω ±5%
C726	OA10405020	ELECT 0.1μF 50V	RN23	GD05683160	1/6W 68K Ω ±5%
C751	OA47601020	ELECT 47μF 10V	RN24	GD05683160	1/6W 68K Ω ±5%
C752	DD15680300	CERAMIC 68PF ±5%	RN25	GD05683160	1/6W 68K Ω ±5%
C753	DK16331300	CERAMIC 330PF ±10%	RN26	GD05683160	1/6W 68K Ω ±5%
C754	EA47700610	ELECT 470μF 6.3V	▲RN27	GA05561010	1W 560 Ω ±5%
			▲RN28	GA05561010	1W 560 Ω ±5%
			RN30	GD05103160	1/6W 10K Ω ±5%
			RN31	GD05103160	1/6W 10K Ω ±5%
			RN32	GD05223160	1/6W 22K Ω ±5%
			RN33	GD05103160	1/6W 10K Ω ±5%
			RN35	GD05100160	1/6W 10 Ω ±5%
			RN36	GG05222160	1/6W 2.2K Ω ±5%
			RN41	GD05100160	1/6W 10 Ω ±5%

IC BLOCK DIAGRAMS


QN04 : TA7317P
OVER LOAD PROTECTOR

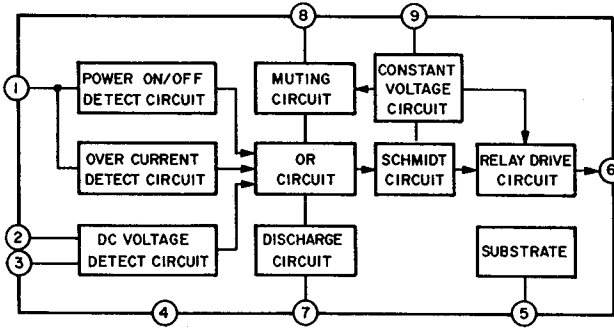


QY10 : TC9173 QY11 : TC9174
PORT EXPANDER

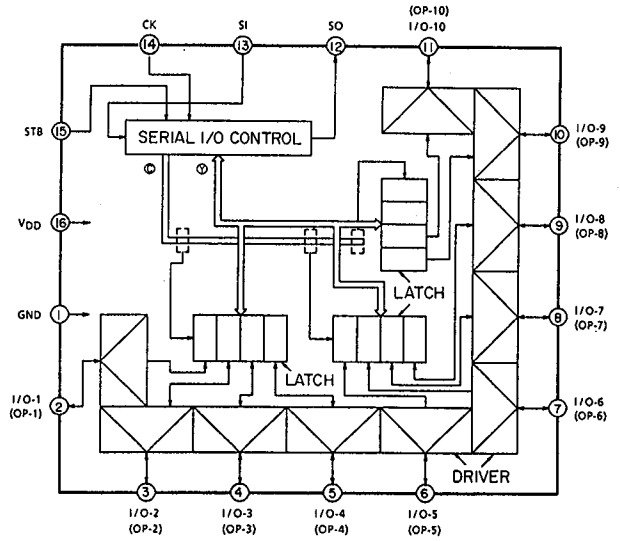



Q201 : LA1836
FM / AM IF, MPX IC

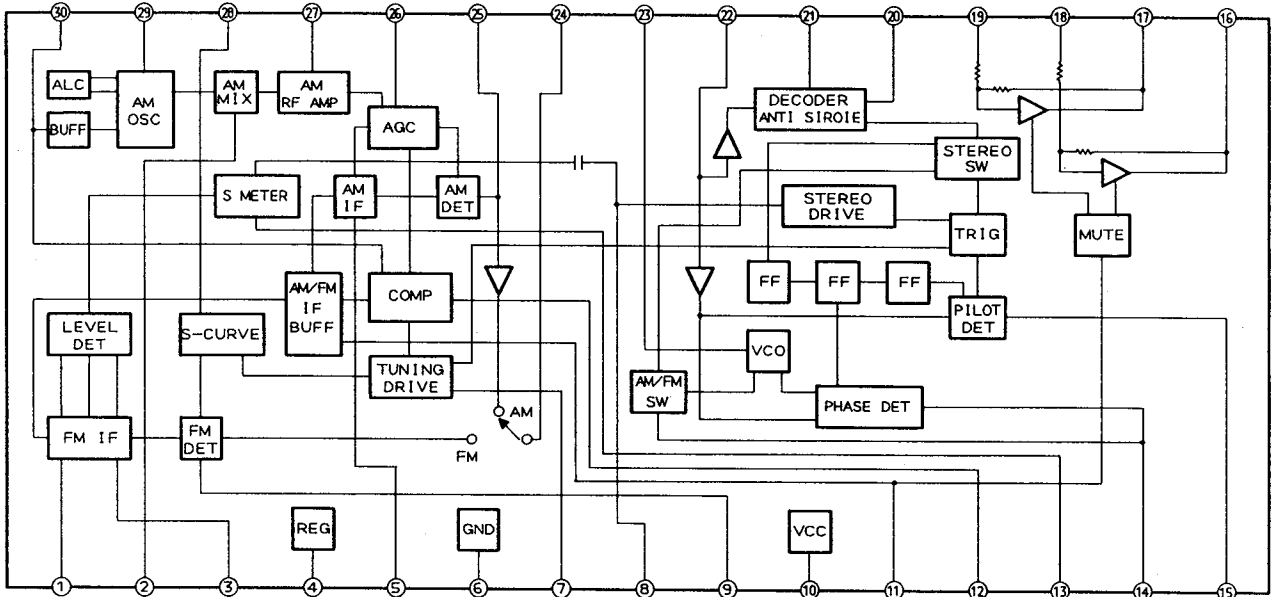


Q501 : LC7218 PLL FREQUENCY SYNTHESIZER

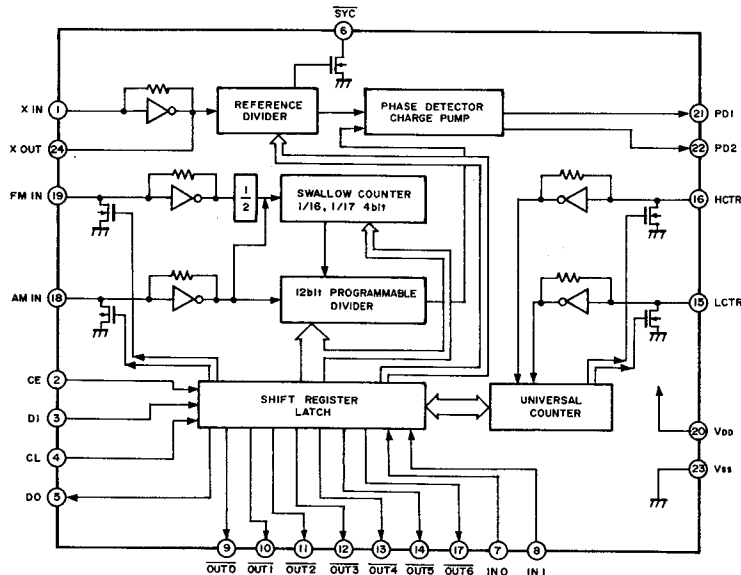


QX60 : LC74760
OSD LSI

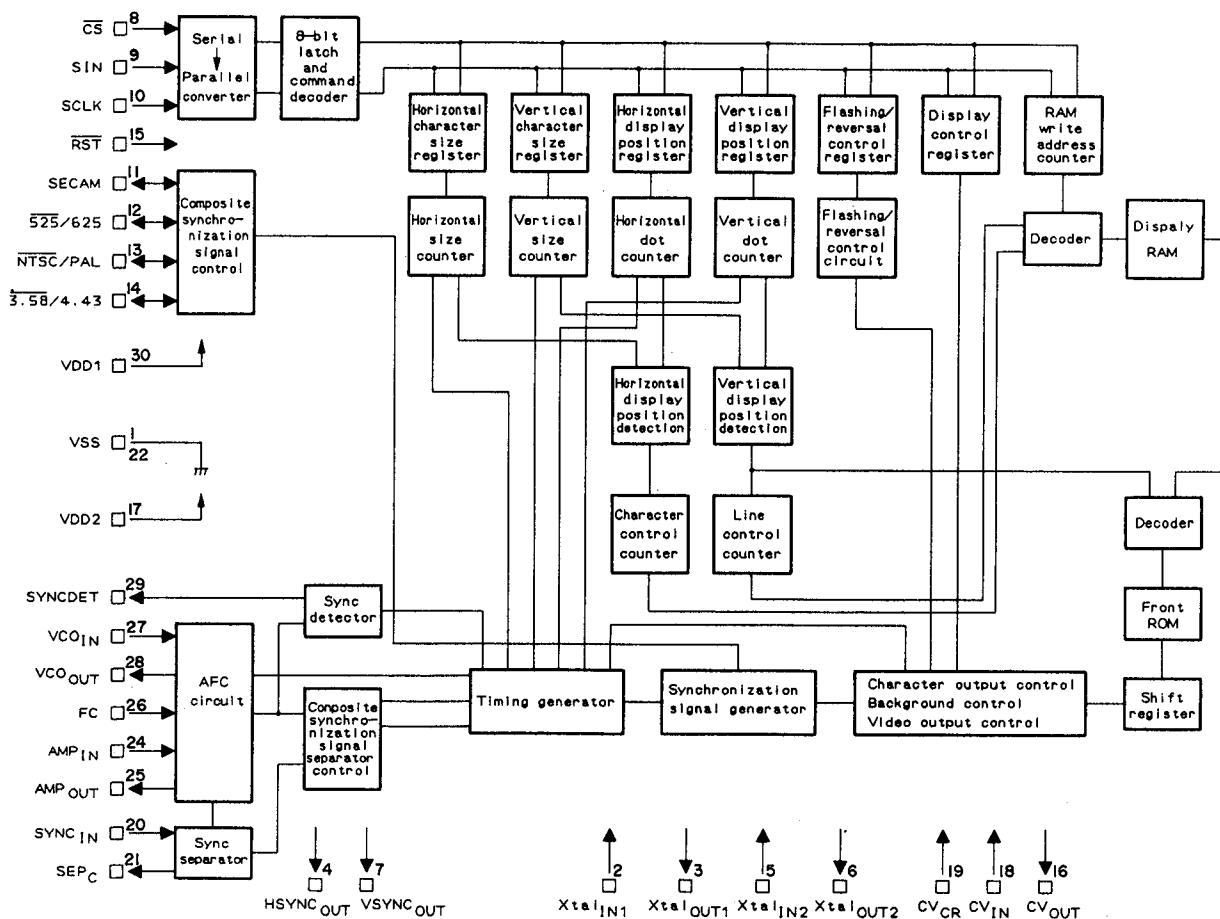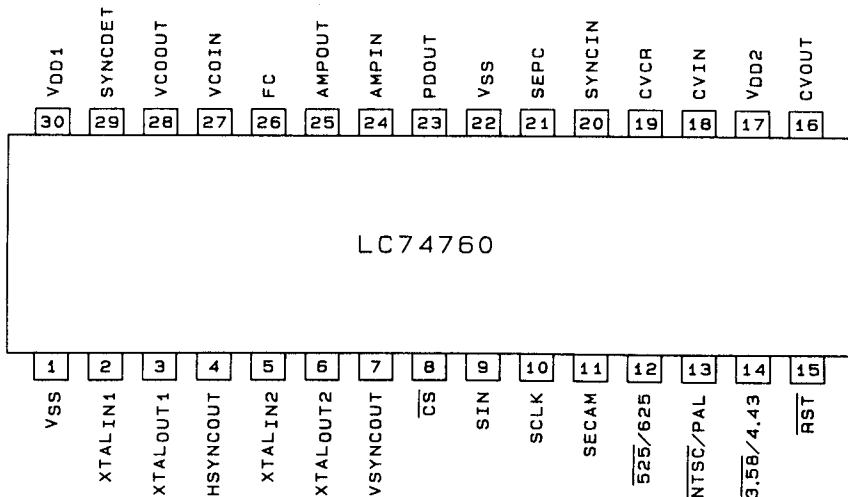


QU01 : TMP87CP71F MICROPROCESSOR

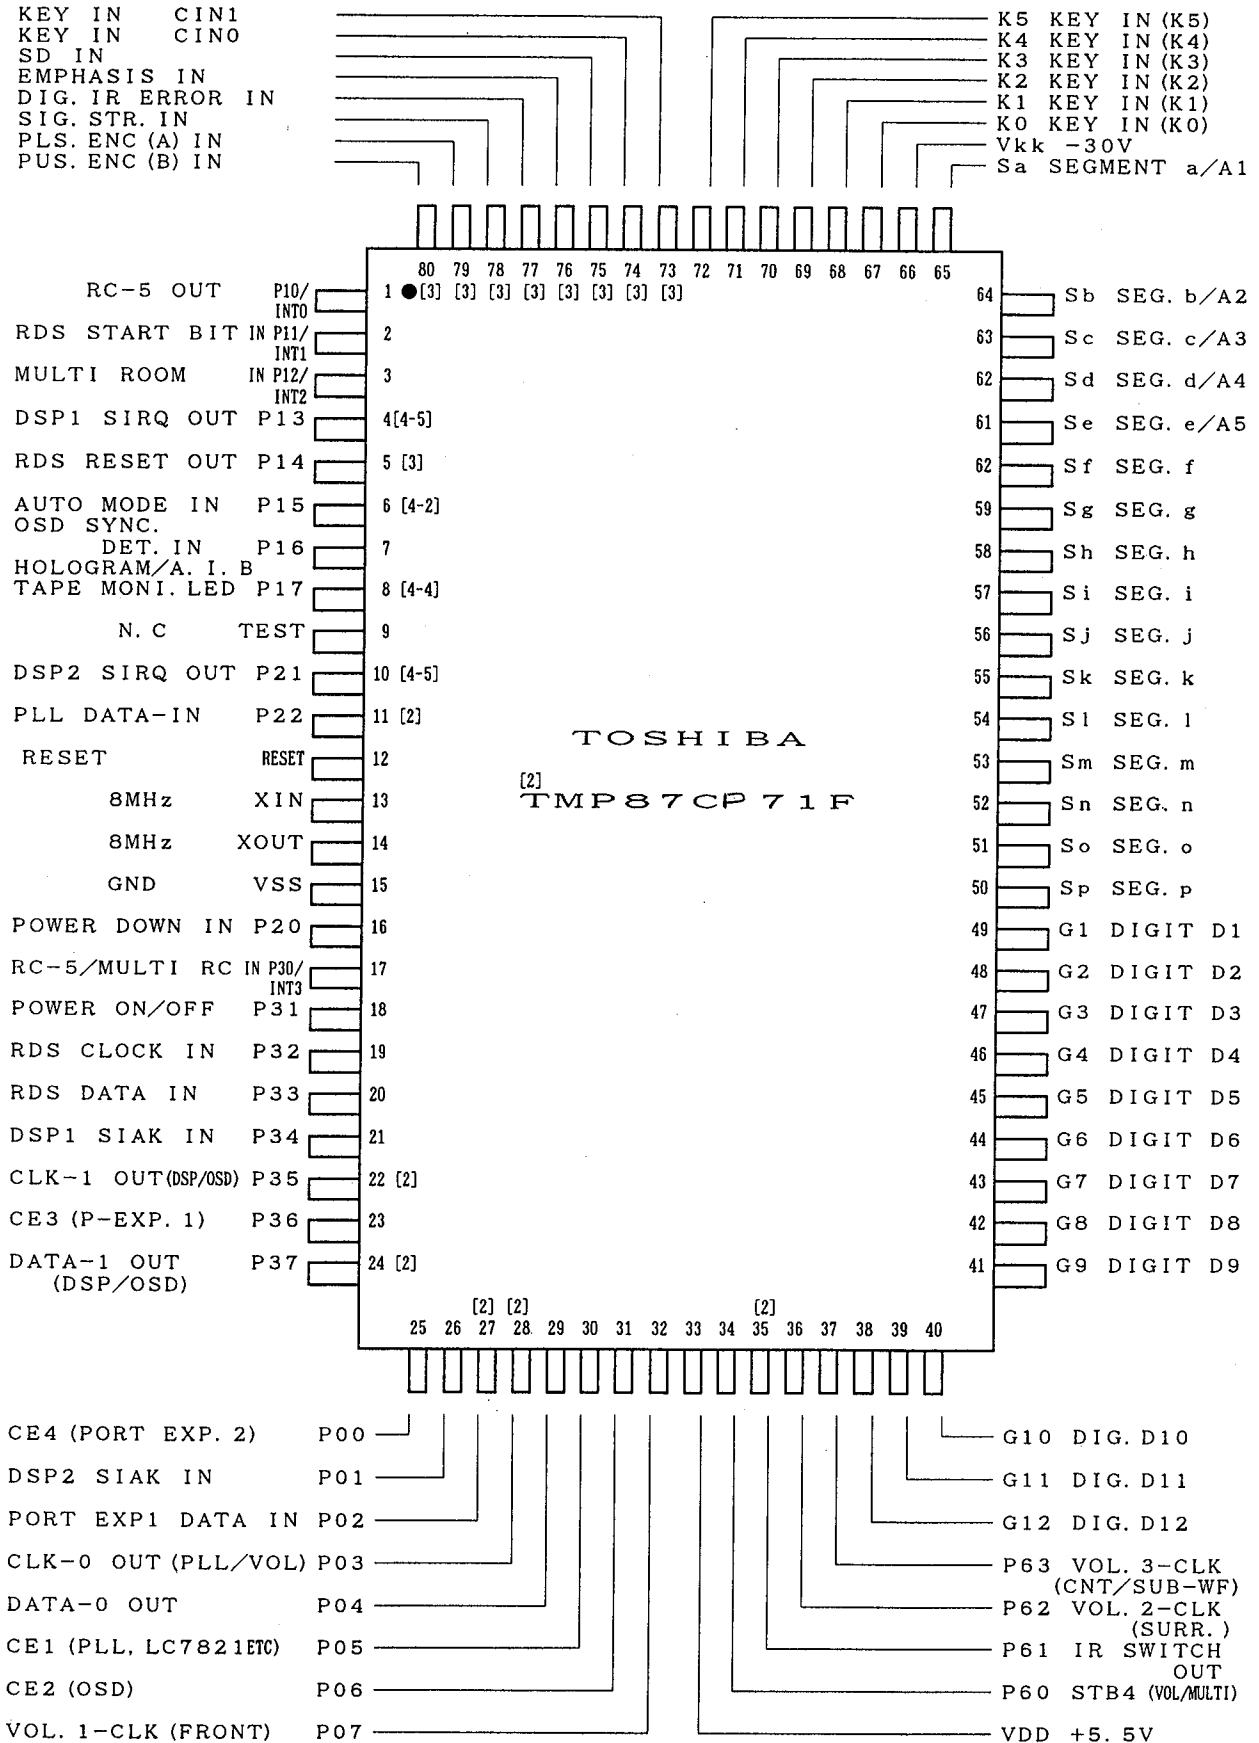


Q671 : AK5340
ANALOGUE DIGITAL CONVERTER

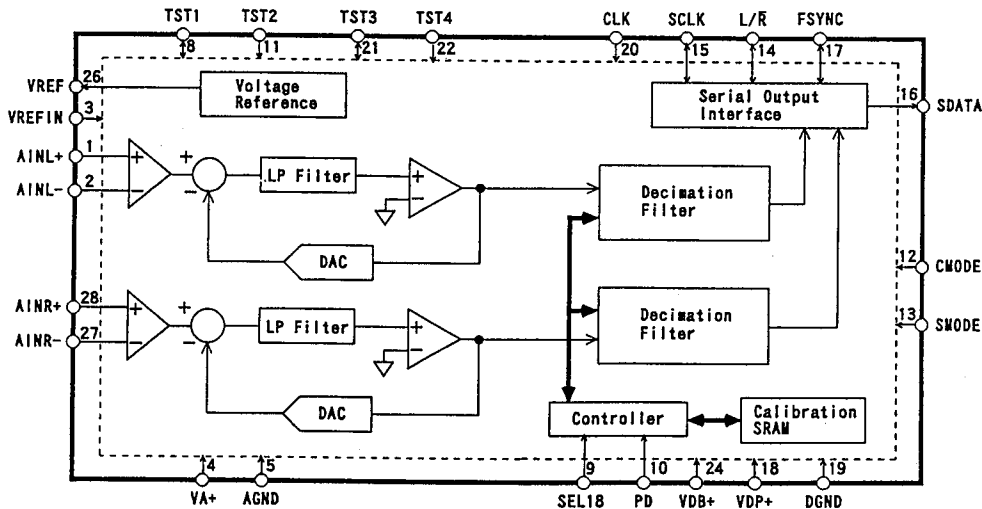


Q601 : LC83016JE
DIGITAL SIGNAL PROCESSOR

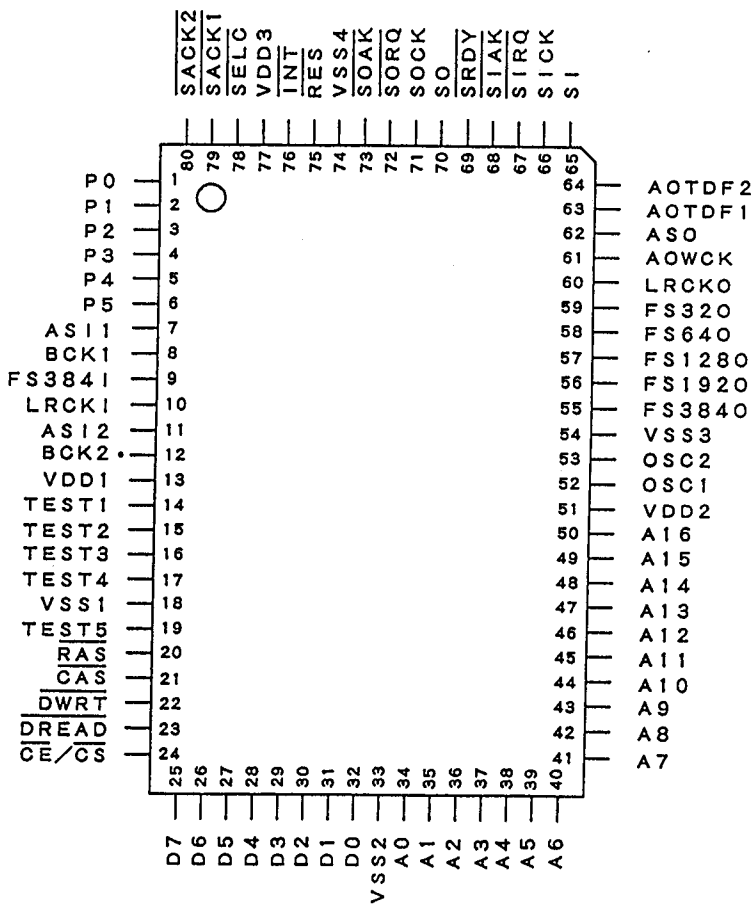

**Q605, Q607 : AK4320
DIGITAL ANALOGUE CONVERTER**

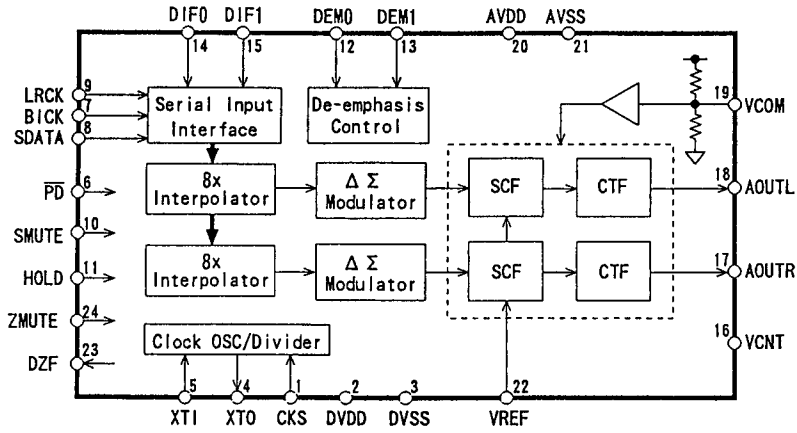


**Q603 : LC32464PM-80
64K x 4BIT DRAM**

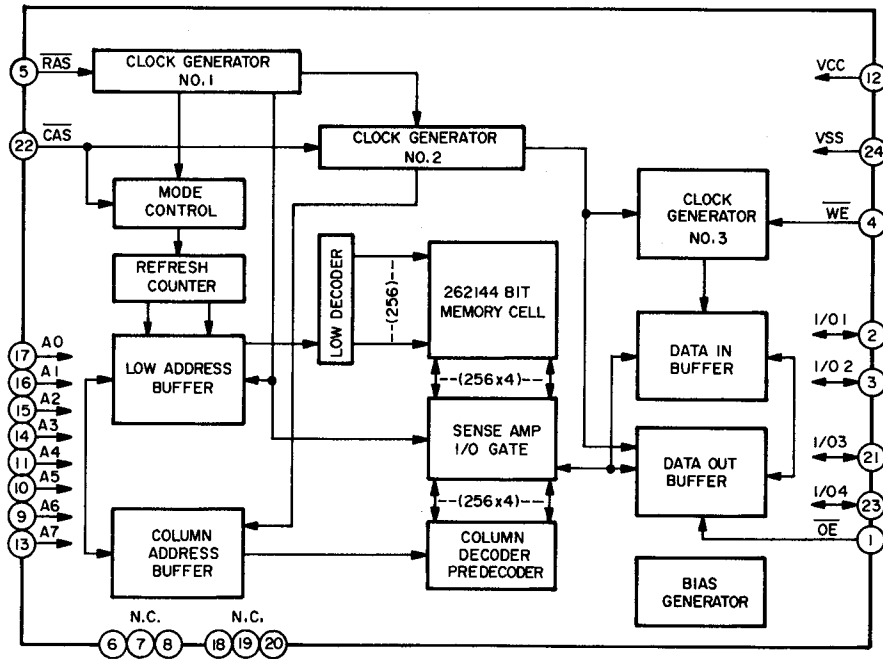


SCHMATIC DIAGRAM (1) BK VERSION

PS04-AUDIO FUNCTION

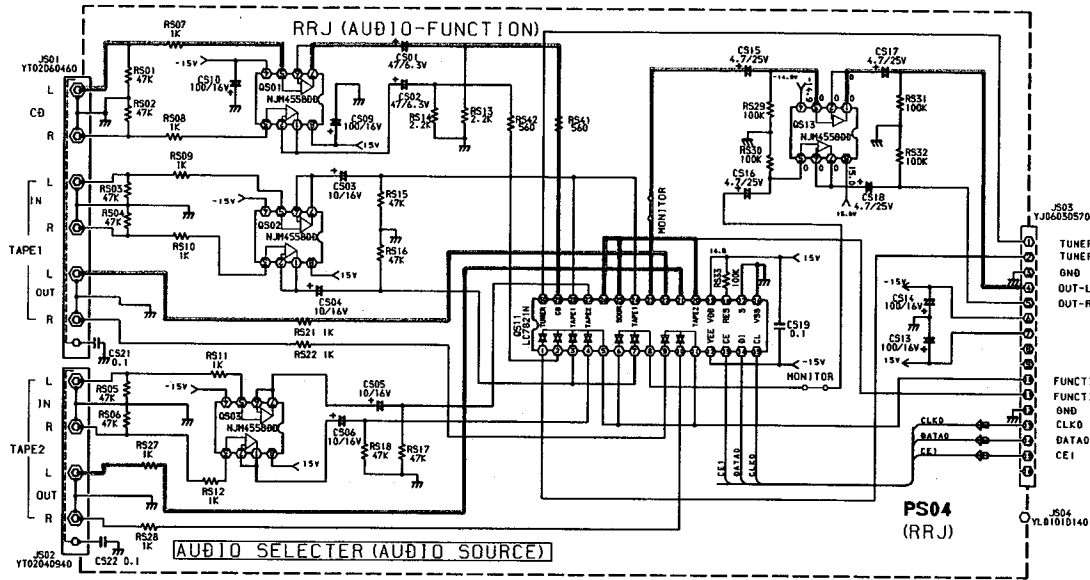


TO CONNECT SCHEMATIC DIAGRAM (6) Page 48

PL54-S-VIDEO

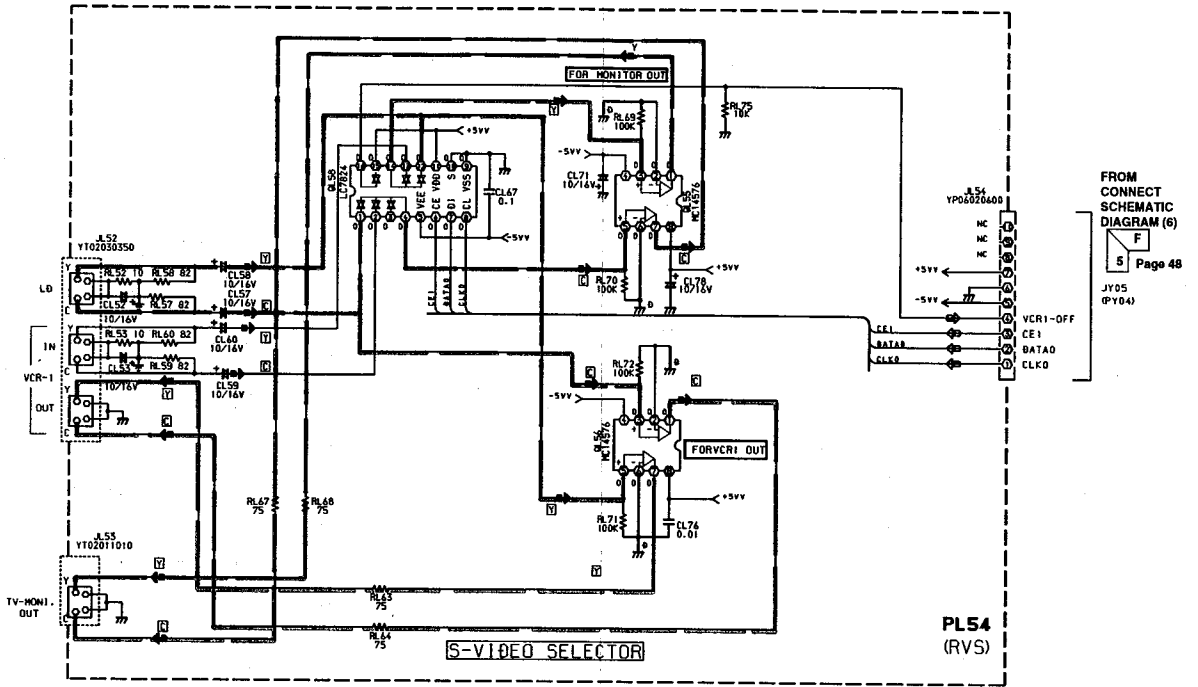


FROM CONNECT SCHEMATIC DIAGRAM (6) Page 48

PS54-V-AUDIO FUNCTION

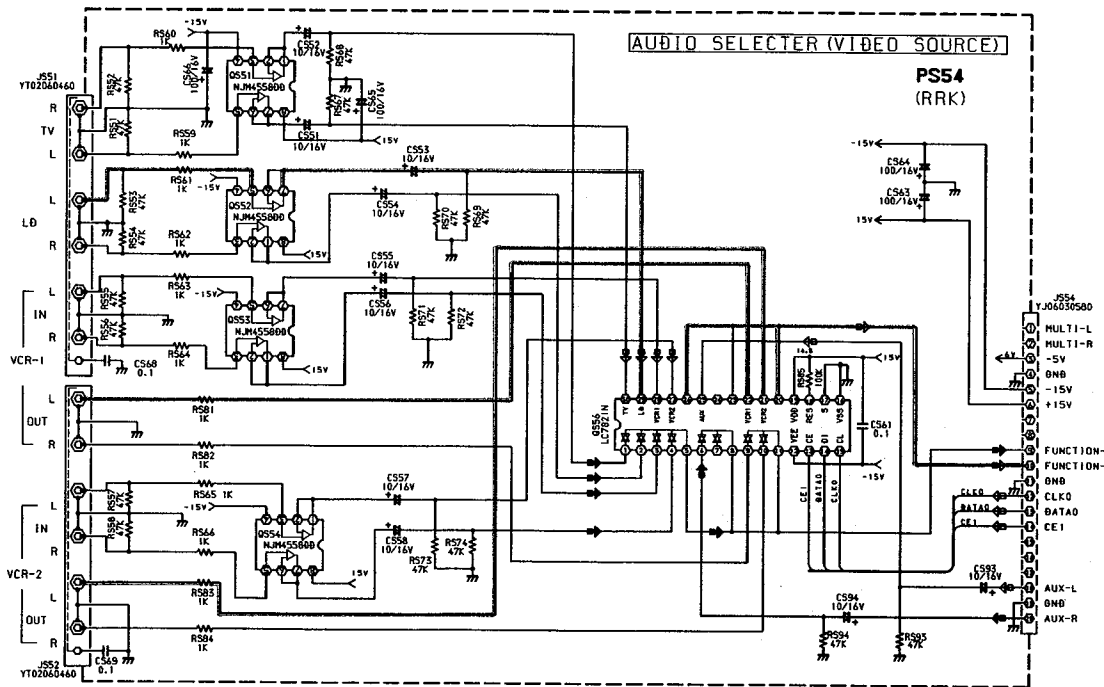

TO CONNECT SCHEMATIC DIAGRAM (6) Page 48


PL04-VIDEO SELECTOR

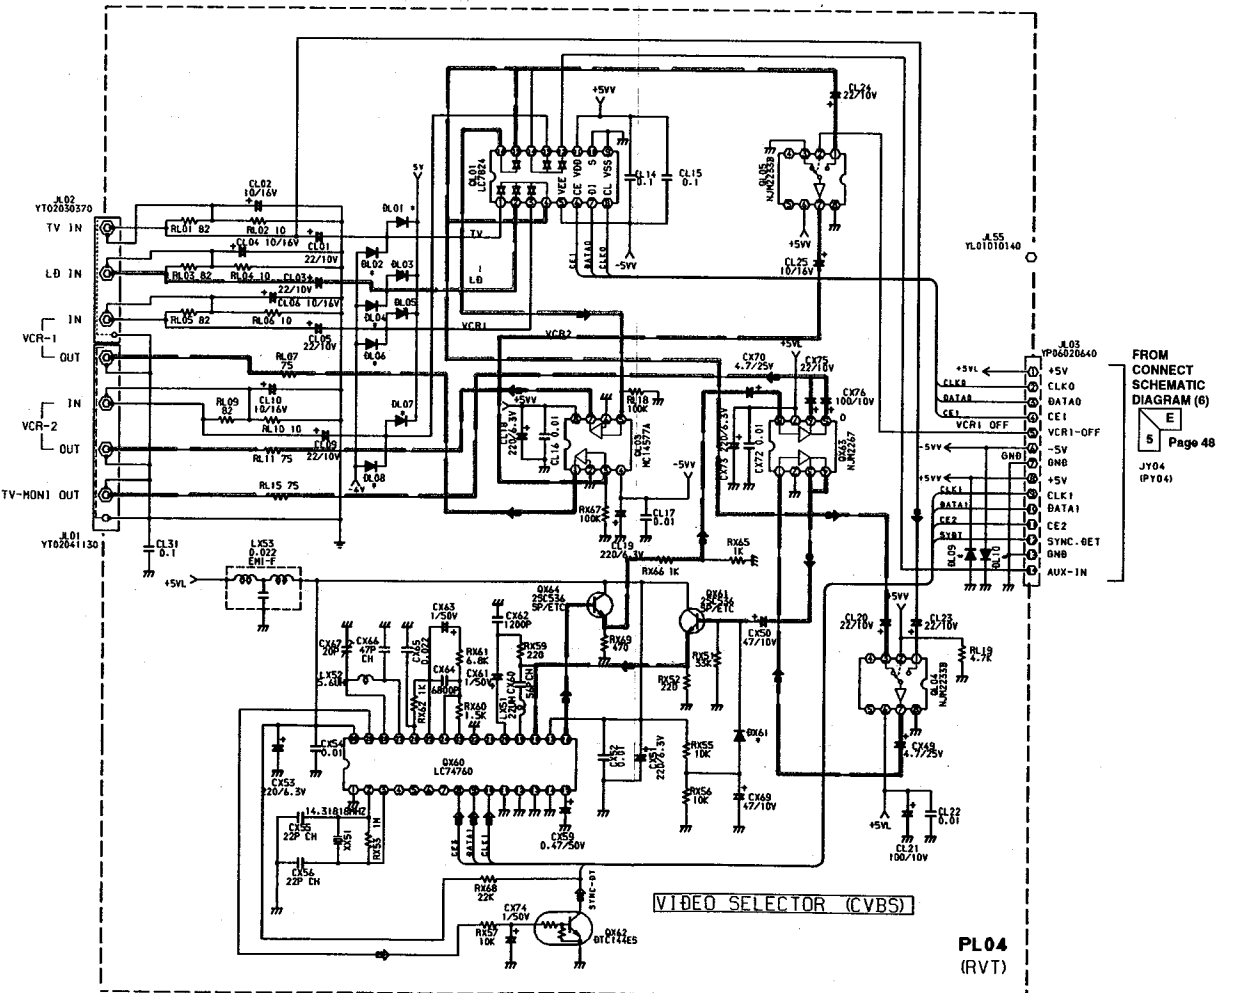

FROM CONNECT SCHEMATIC DIAGRAM (6) Page 48

SCHEMATIC DIAGRAM (1) BK VERSION

PS04-AUDIO FUNCTION

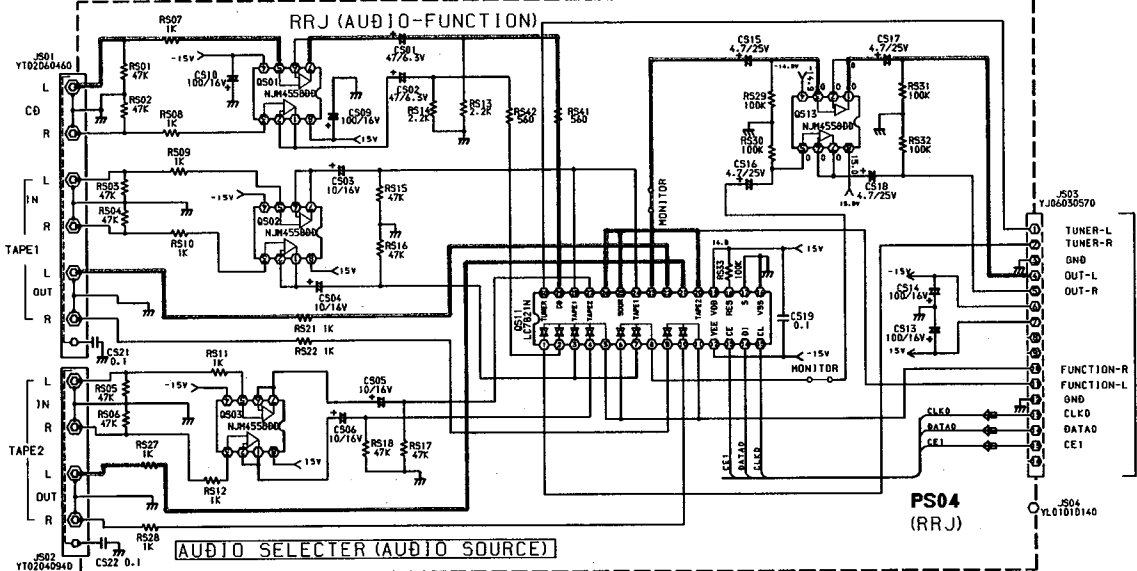


TO CONNECT SCHEMATIC DIAGRAM (6)

C

Page 48

JY02 (PY04)

PS54-V-AUDIO FUNCTION

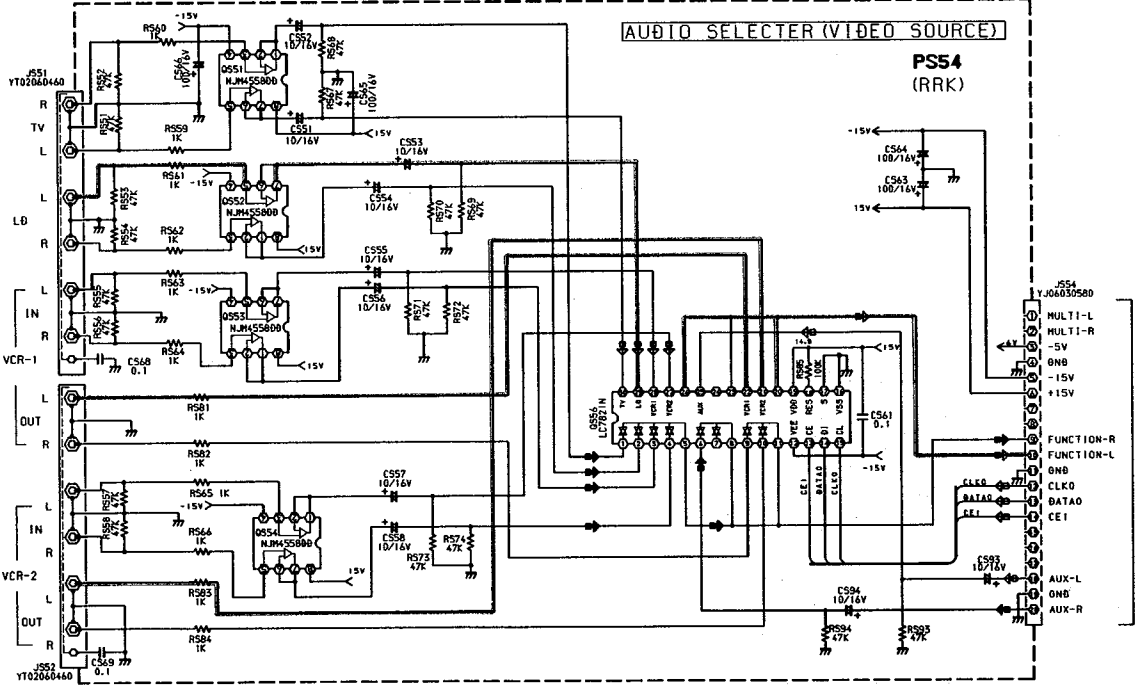

TO CONNECT SCHEMATIC DIAGRAM (6)

D

Page 48

JY03 (PY04)


BK VERSION

DSP

LOGIC DSP
TIC
M (9)

Page 51

PF04-TONE

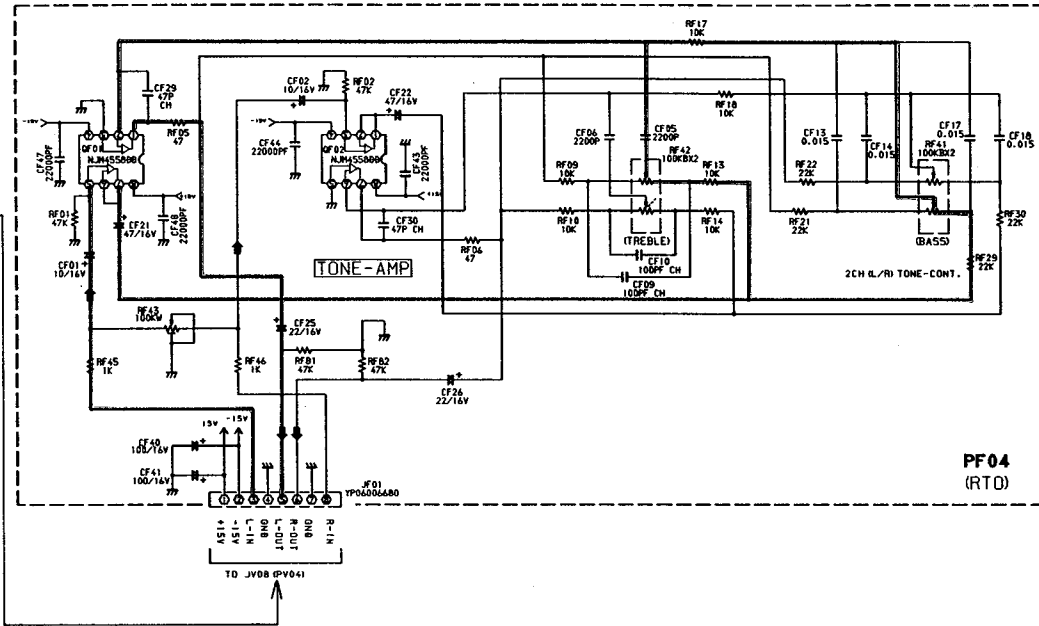

CONNECT

SCHEMATIC

DIAGRAM (6)


Page 48

07

04)

TO SURROUND AMP
SCHEMATIC
DIAGRAM (7)or(8)

2 Page 49 or 50

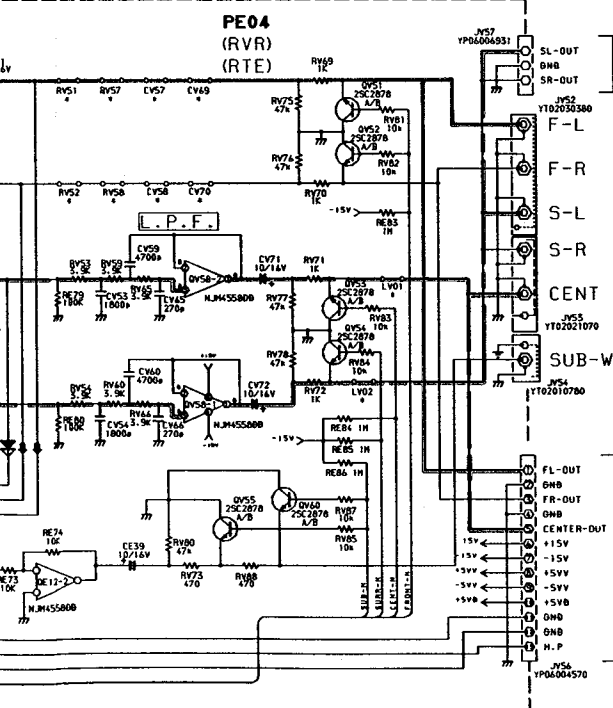


TO MAIN AMP
SCHEMATIC
DIAGRAM (7)or(8)

4 Page 49 or 50


- FRONT
- CENTER
- SUB-WOOFER
- SURROUND

SCHEMATIC DIAGRAM (3) BK VERSION

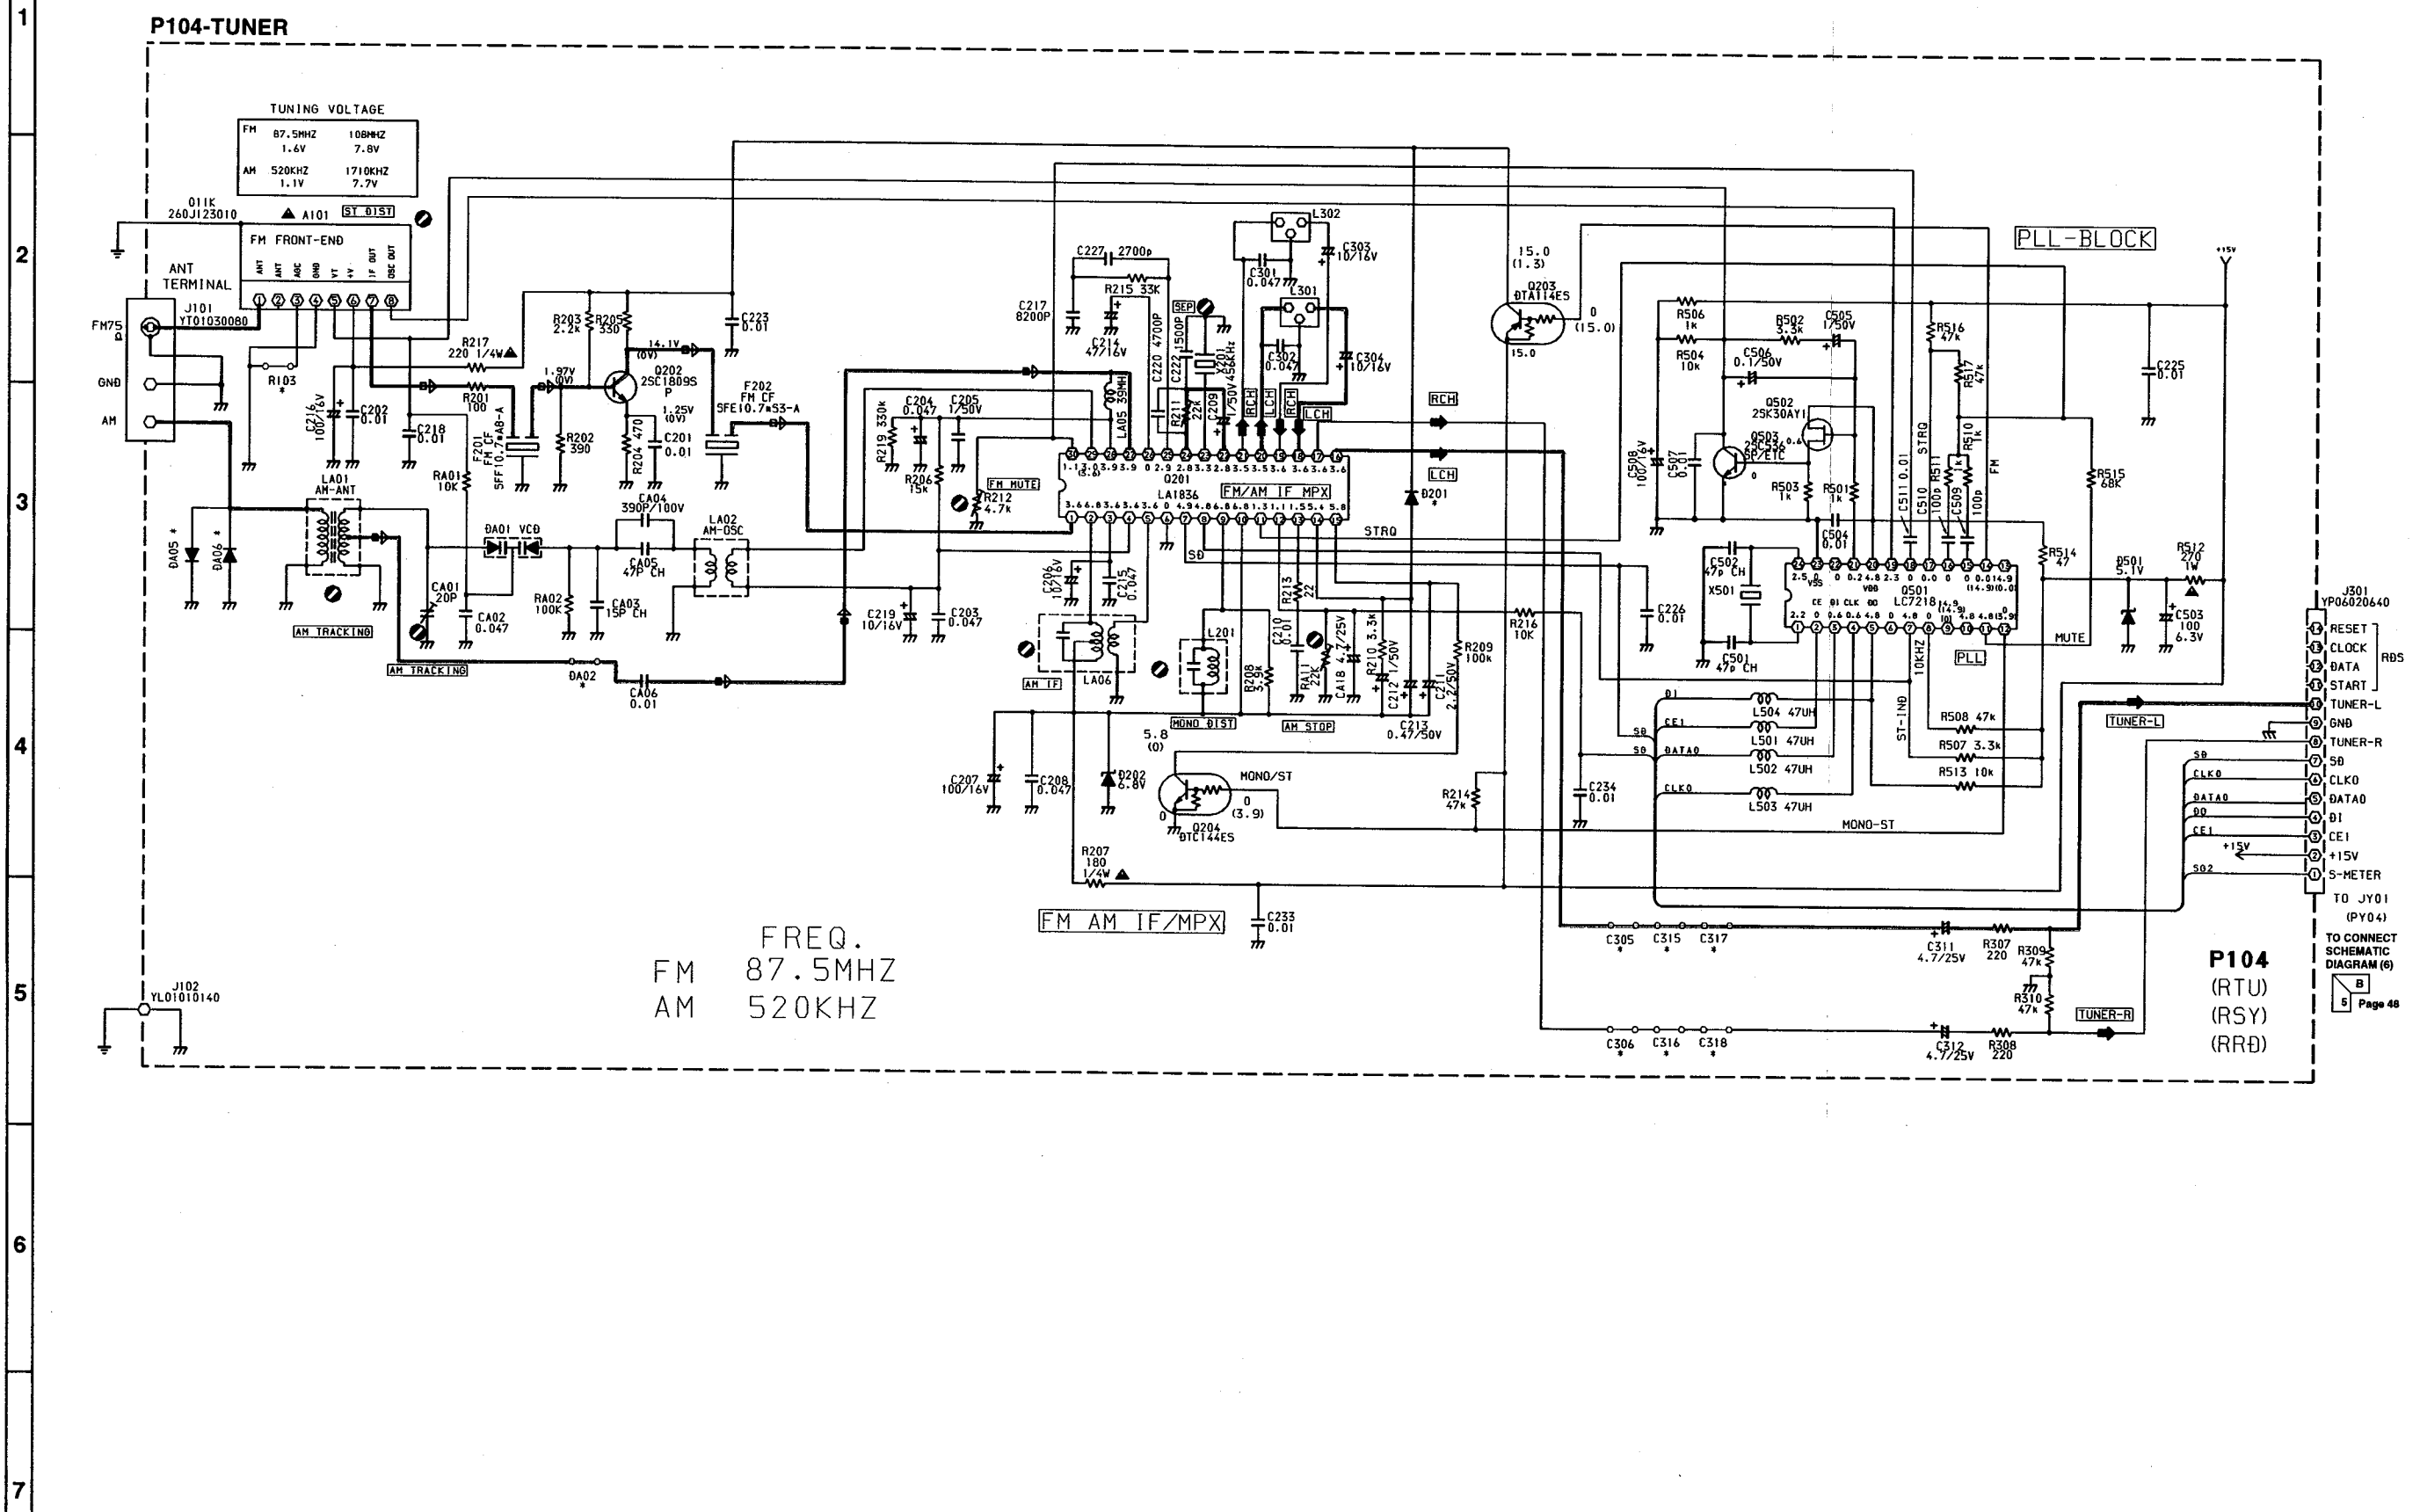

SCHEMATIC DIAGRAM (3) BK VERSION

P104-TUNER

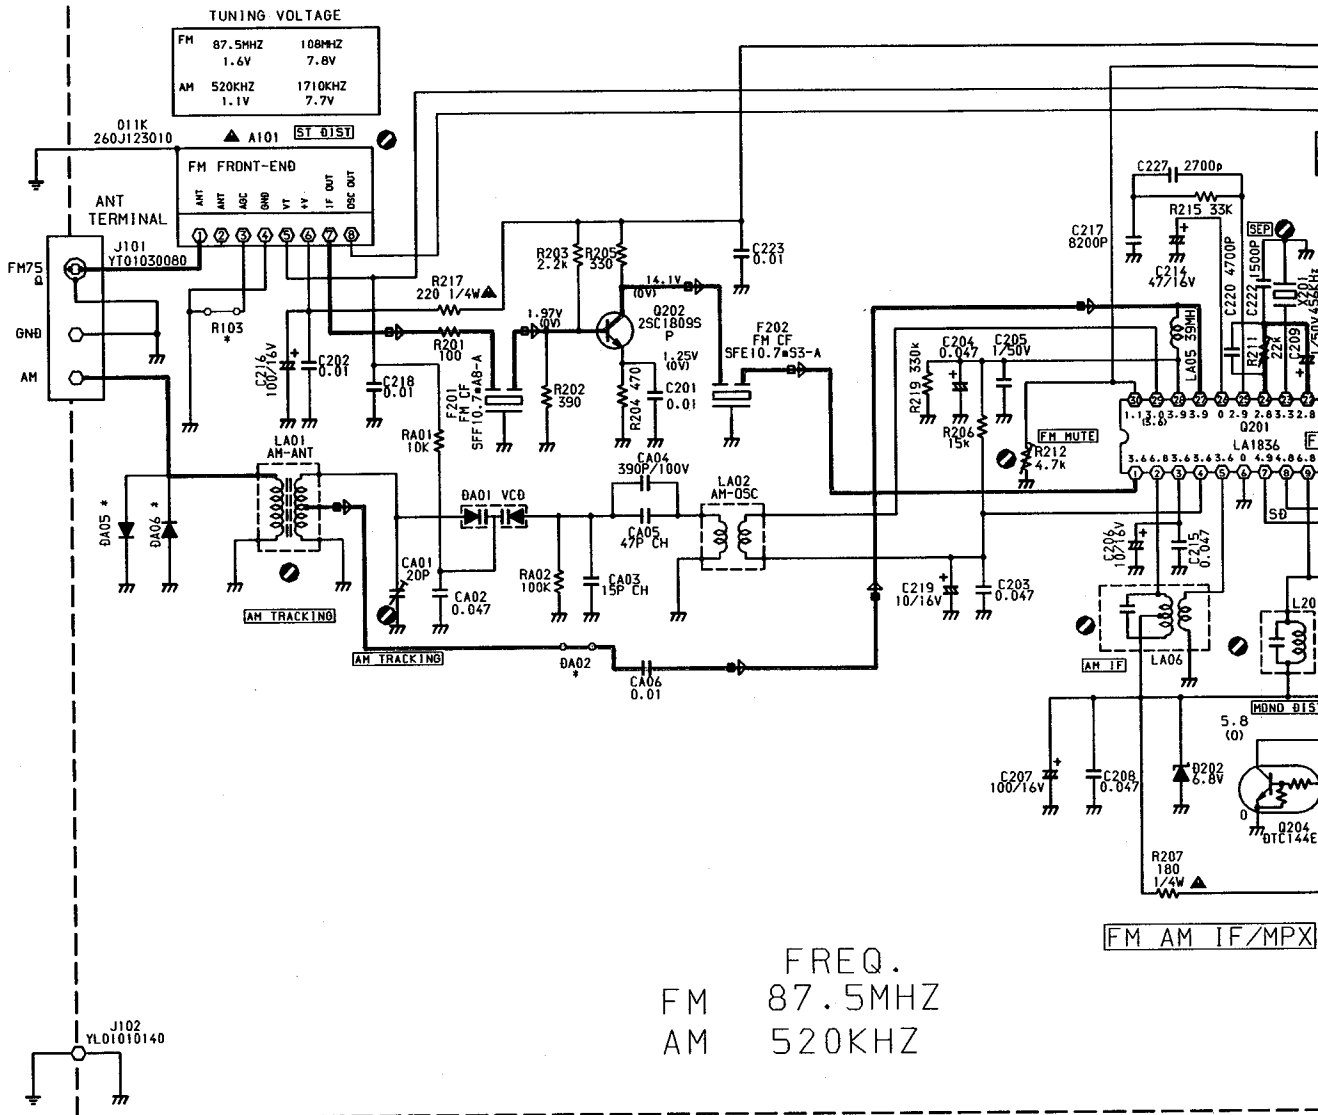

FREQ.
FM 87.5MHZ
AM 520KHZ


F

G

H

I

J

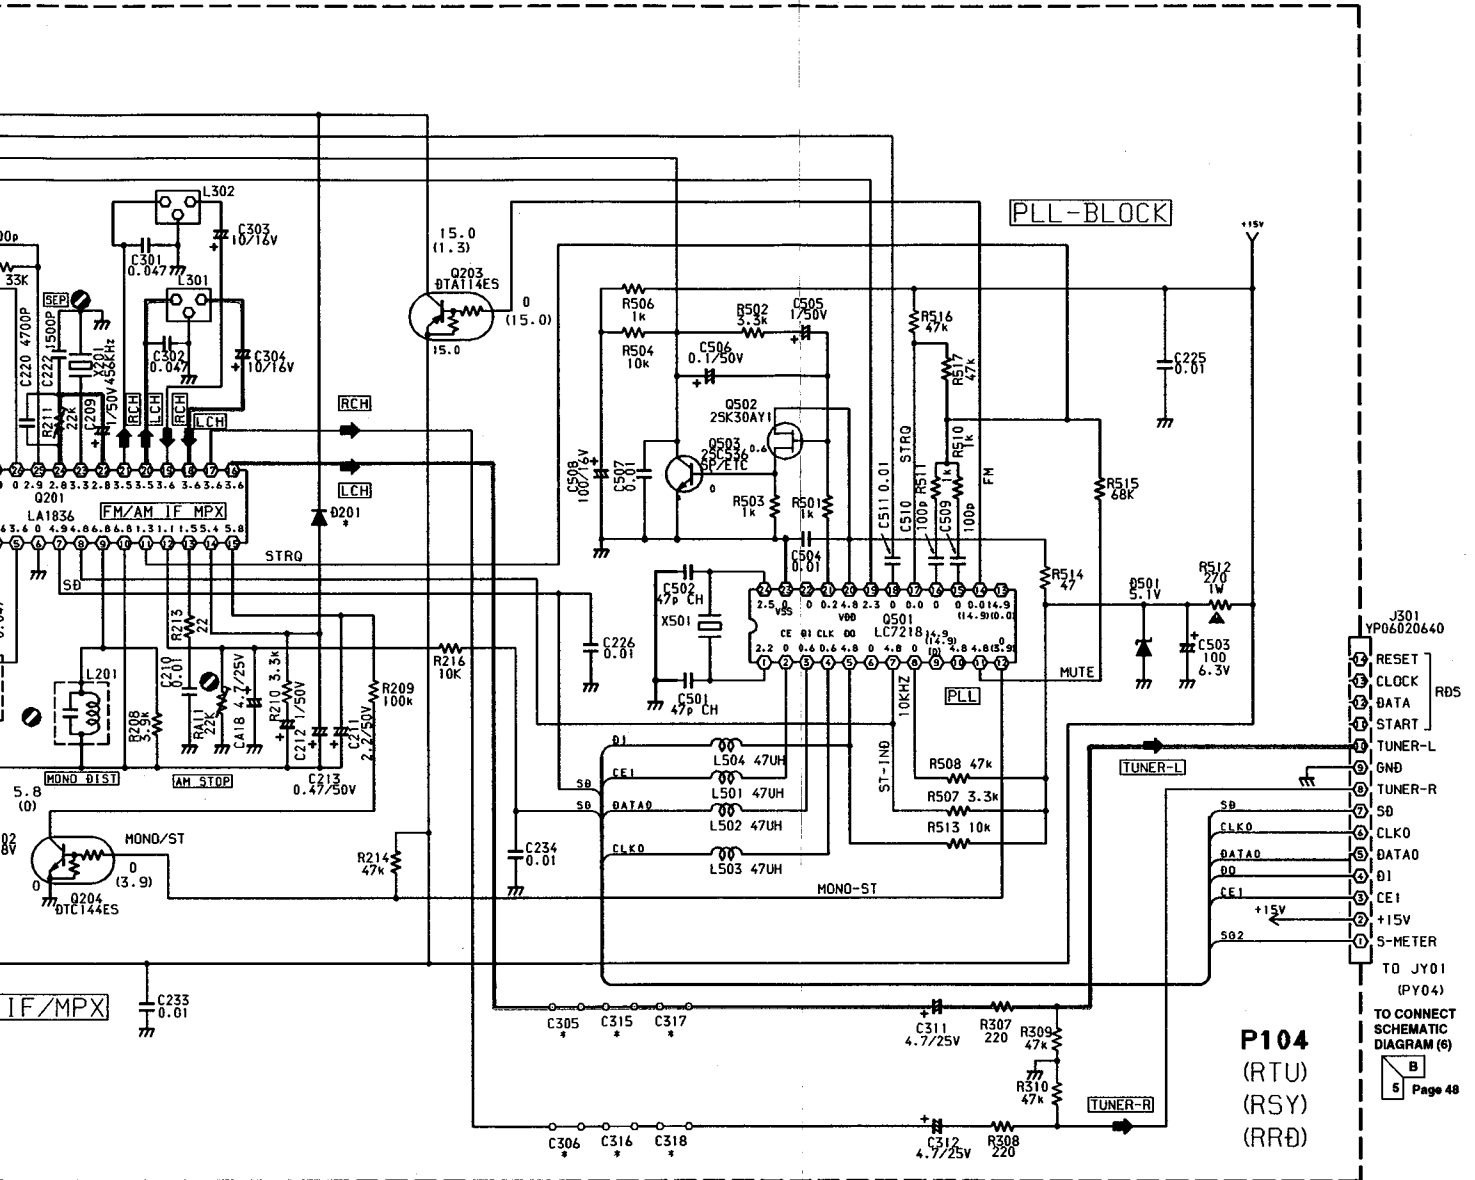


P104
 (RTU)
 (RSY)
 (RR0)


- J301
 VP06020640
- 1 RESET
 - 2 CLOCK
 - 3 DATA
 - 4 START
 - 5 TUNER-L
 - 6 GND
 - 7 TUNER-R
 - 8 SB
 - 9 CLK0
 - 10 DATA0
 - 11 01
 - 12 CE1
 - 13 +15V
 - 14 S-METER
- TO JY01 (PY04)
- TO CONNECT SCHEMATIC DIAGRAM (6)
- 5 Page 48

SCHEMATIC DIAGRAM (4) BK VERSION


PU04-FRONT (AVR70) ONLY

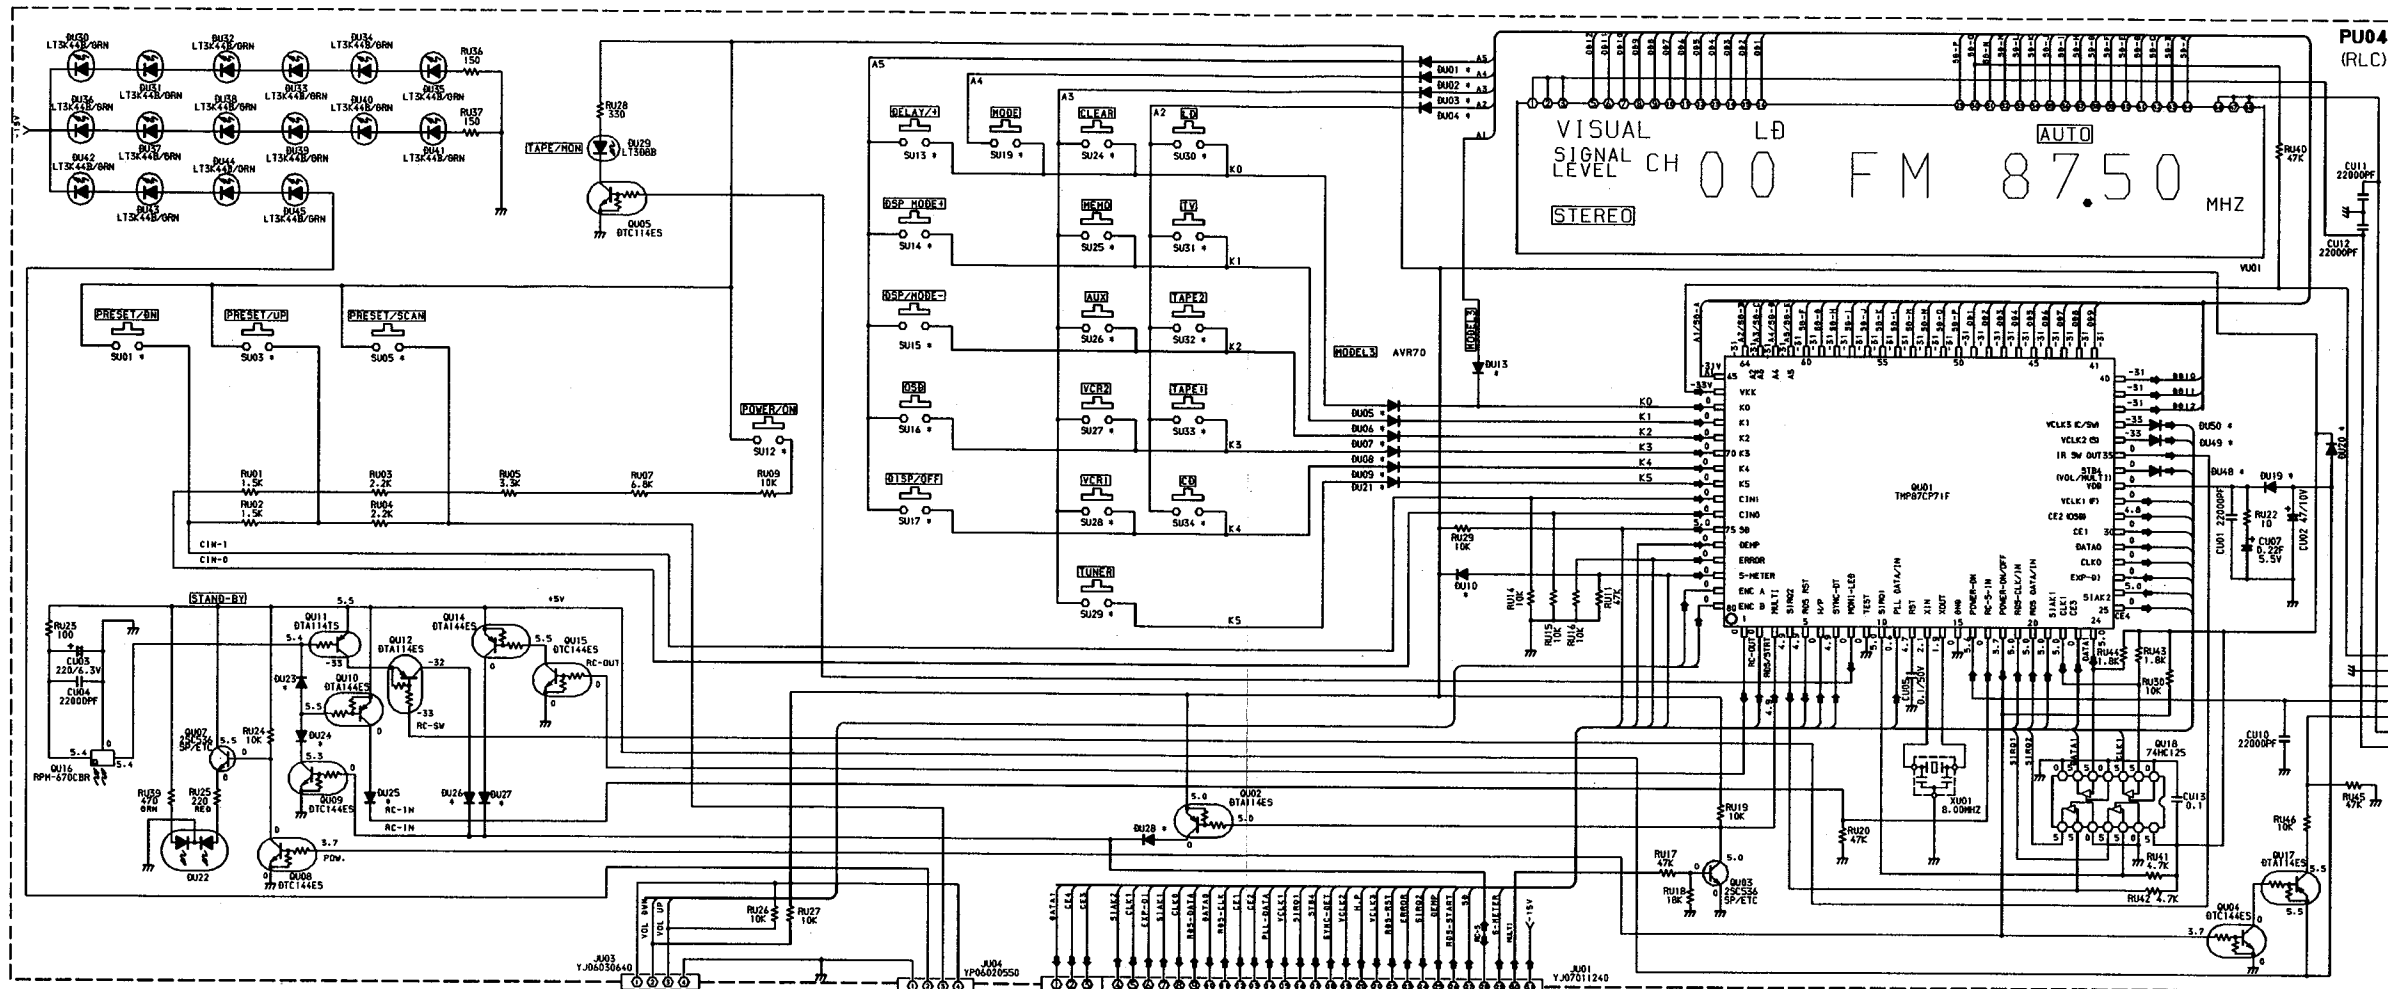

PU54-MASTER VOL

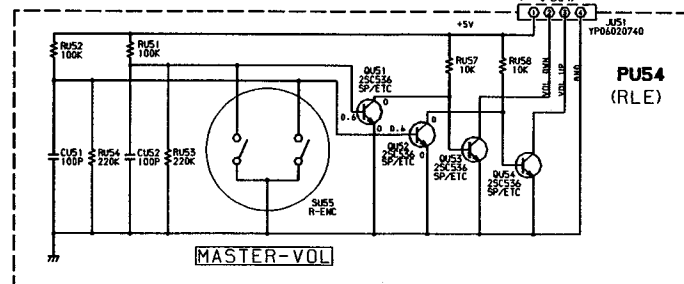

PL94-AUX IN

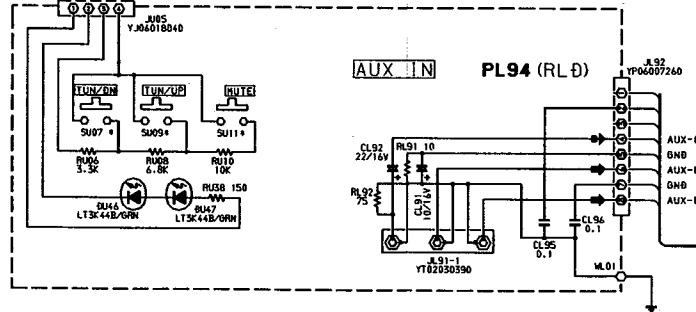


TO CONNECT SCHEMATIC DIAGRAM (6) D 1 Page 48

TO CONNECT SCHEMATIC DIAGRAM (6) 5 Page 48



FROM BACK-UP SCHEMATIC DIAGRAM (7)or(8) A 5 Page 49 or 50


SCHMATIC DIAGRAM (4) BK VERSION

PU04-FRONT (AVR70) ONLY

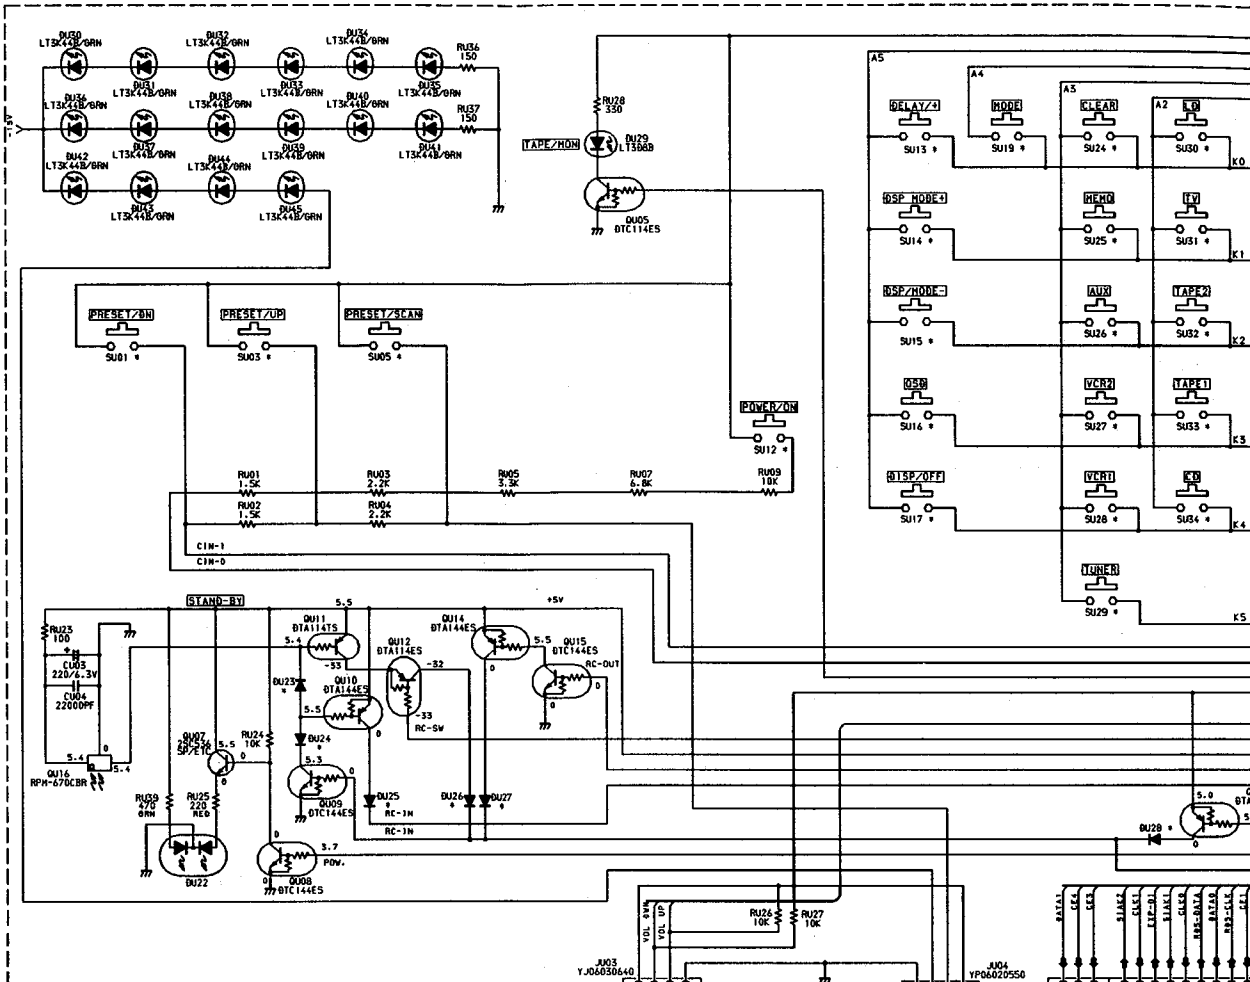

PU54-MASTER VOL

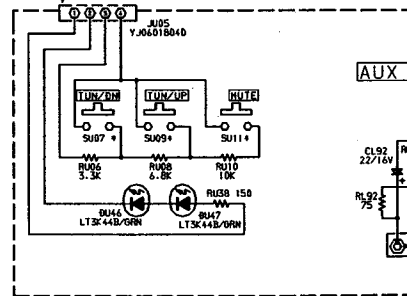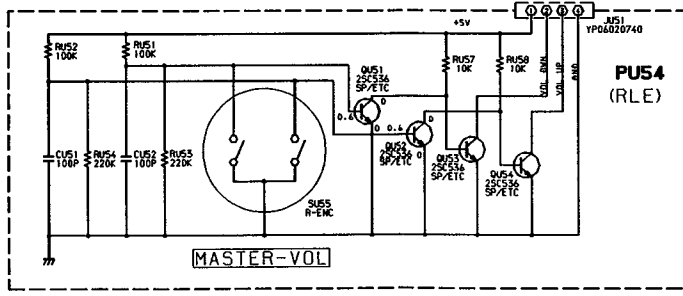


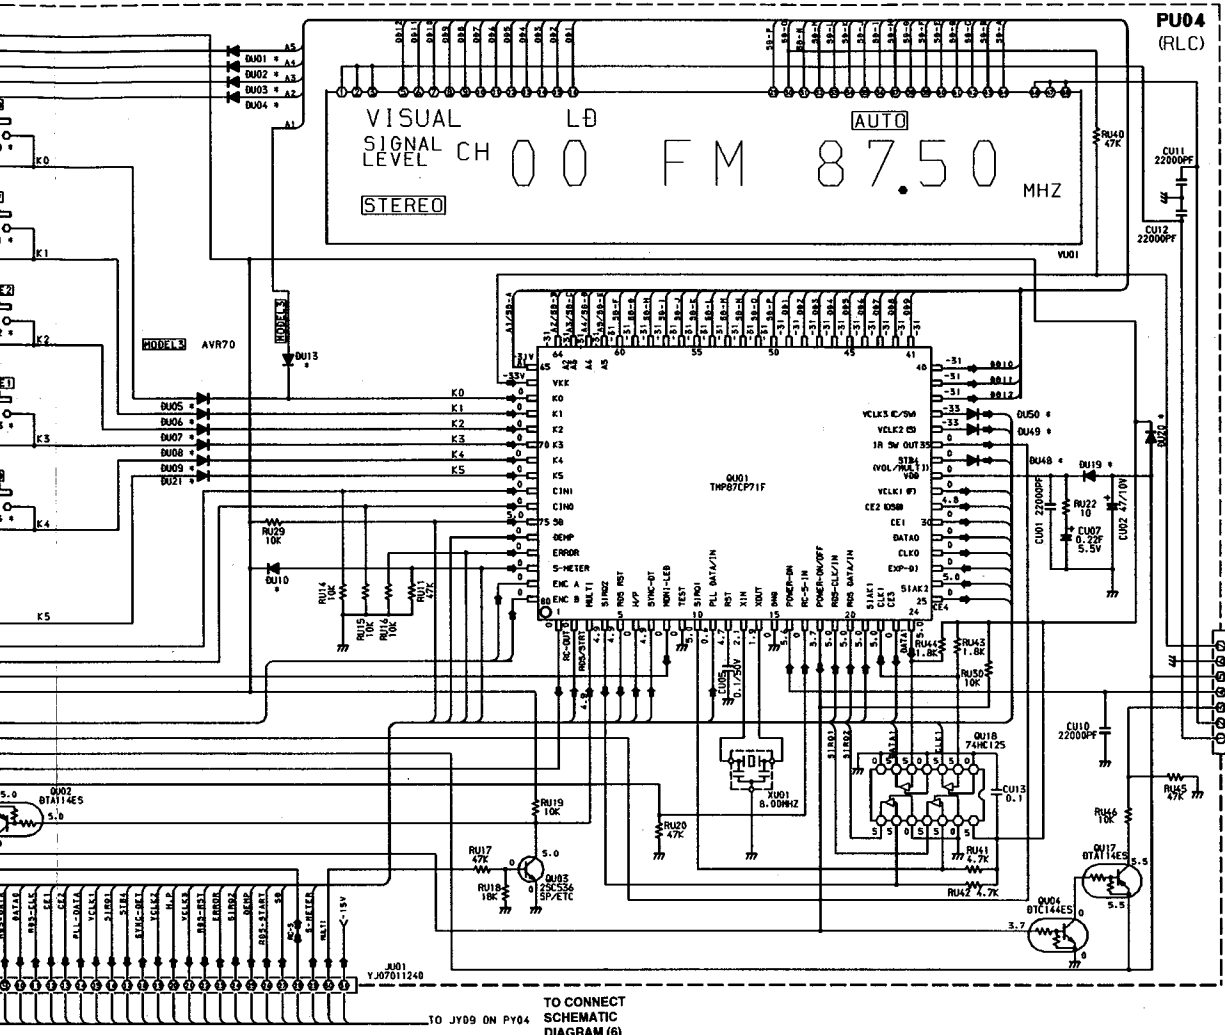

PU04 (RLC)

J002 YP66007170
 VKK
 GNB
 +5VL
 P-DOWN
 POWER
 F
 F
 FROM
 BACK-UP
 SCHEMATIC
 DIAGRAM (7)or(8)
 A
 5 Page 49 or 50


TO CONNECT
 SCHEMATIC
 DIAGRAM (6)
 D
 1 Page 48

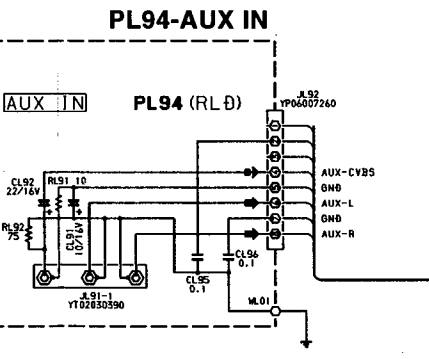

TO CONNECT
 SCHEMATIC
 DIAGRAM (6)
 5
 Page 48


SCHEMATIC DIAGRAM (5) BK VERSION

PU04-FRONT (AVR70MK II) ONLY

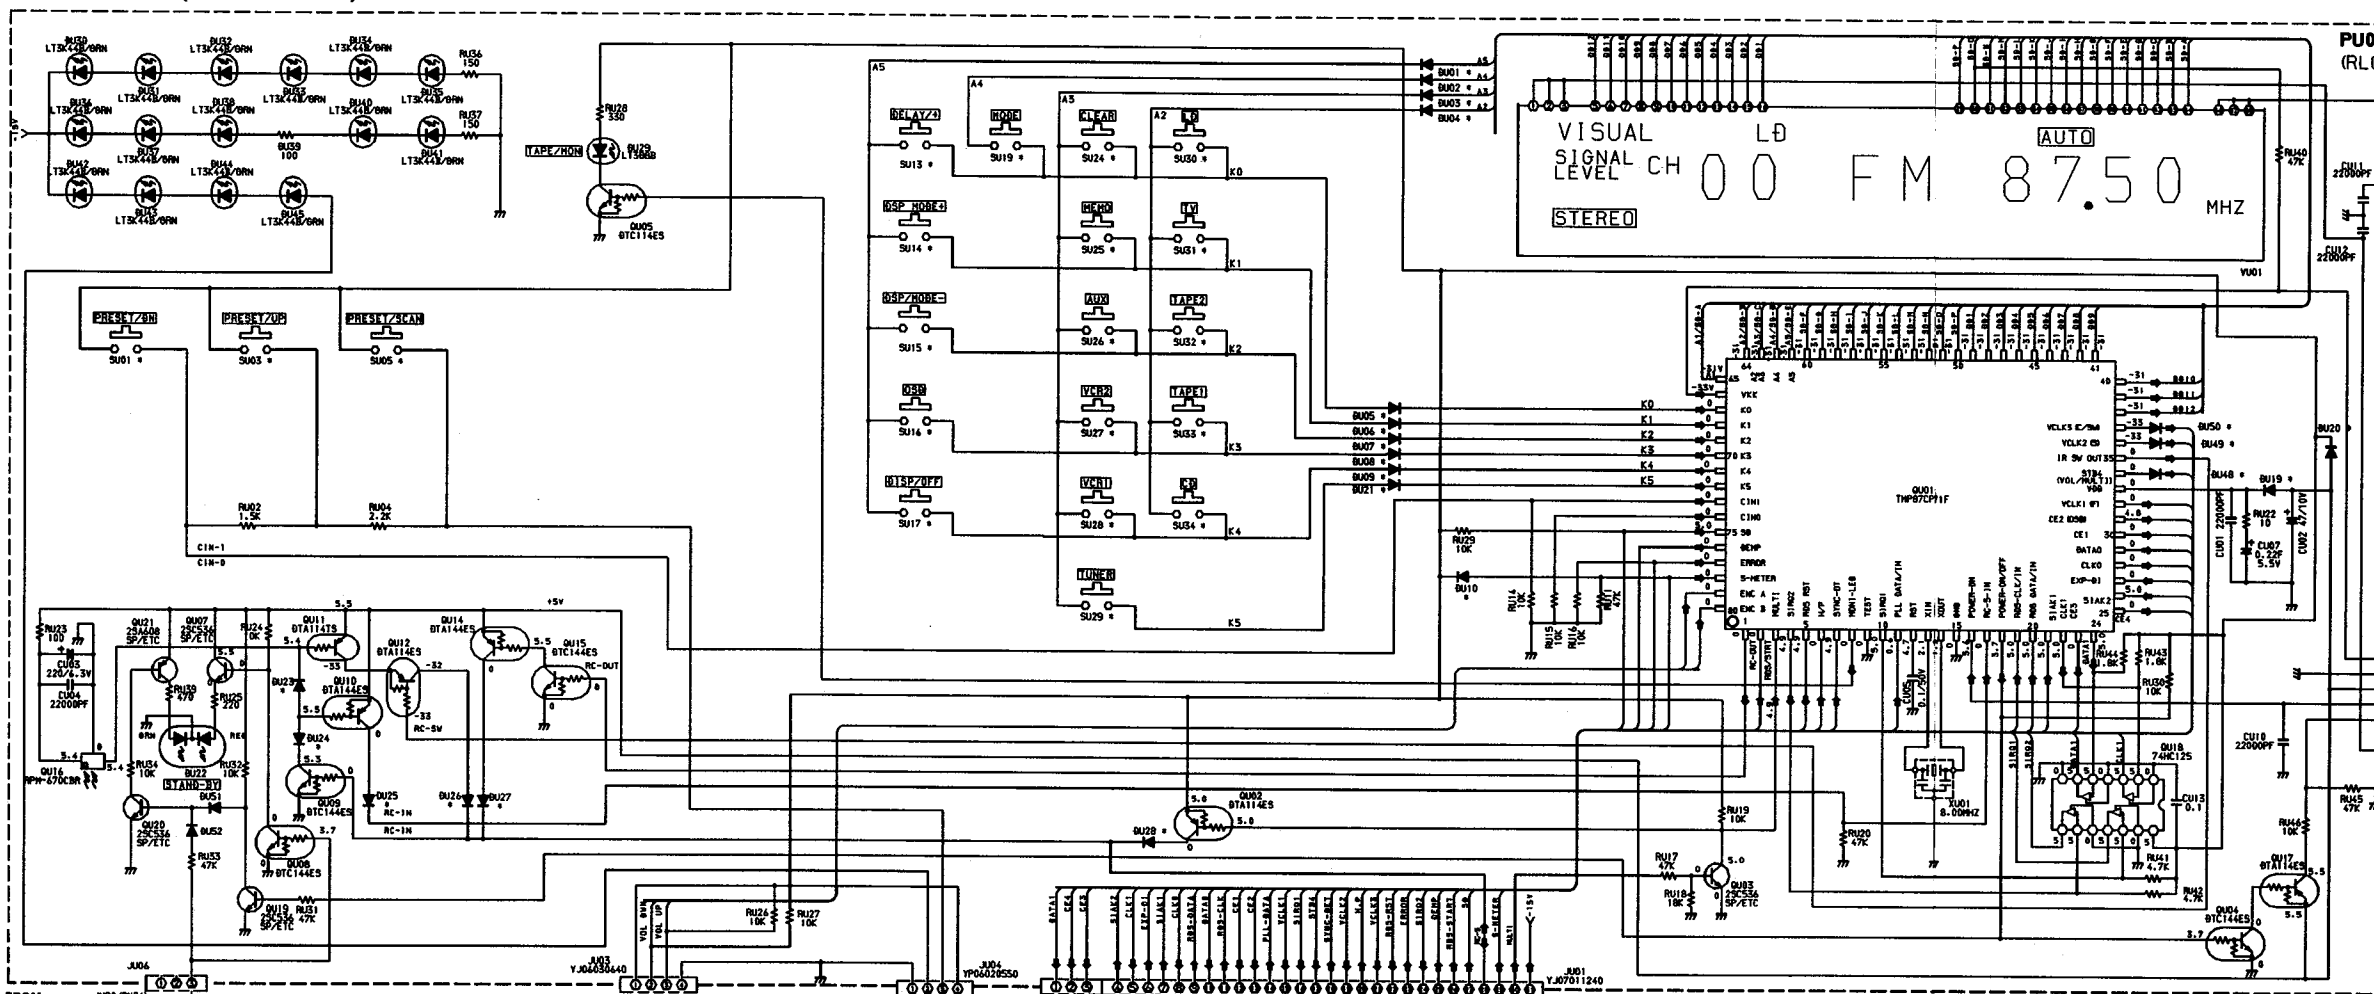


FROM POWER SW SCHEMATIC DIAGRAM (6)
C
4 Page 50

PU54-MASTER VOL

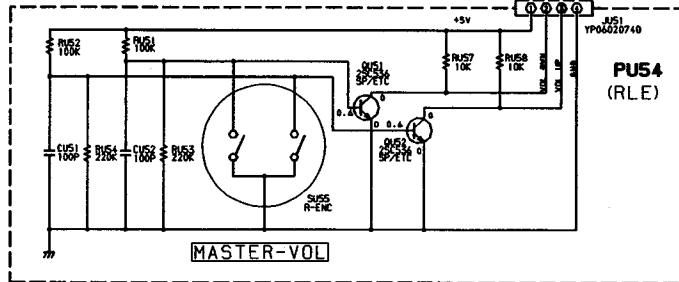

PL94-AUX IN

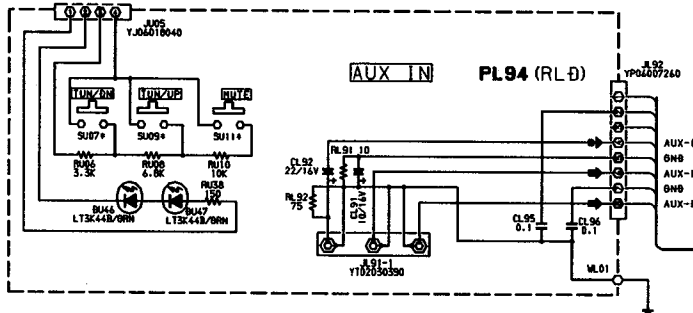

TO CONNECT SCHEMATIC DIAGRAM (6)
D
1 Page 48

TO CONNECT SCHEMATIC DIAGRAM (6)
5
Page 48

FROM BACK-UP SCHEMATIC DIAGRAM (7) or (8)
A
5 Page 48 or 50

1
2
3
4
5
6
7


F

G

H

I

J

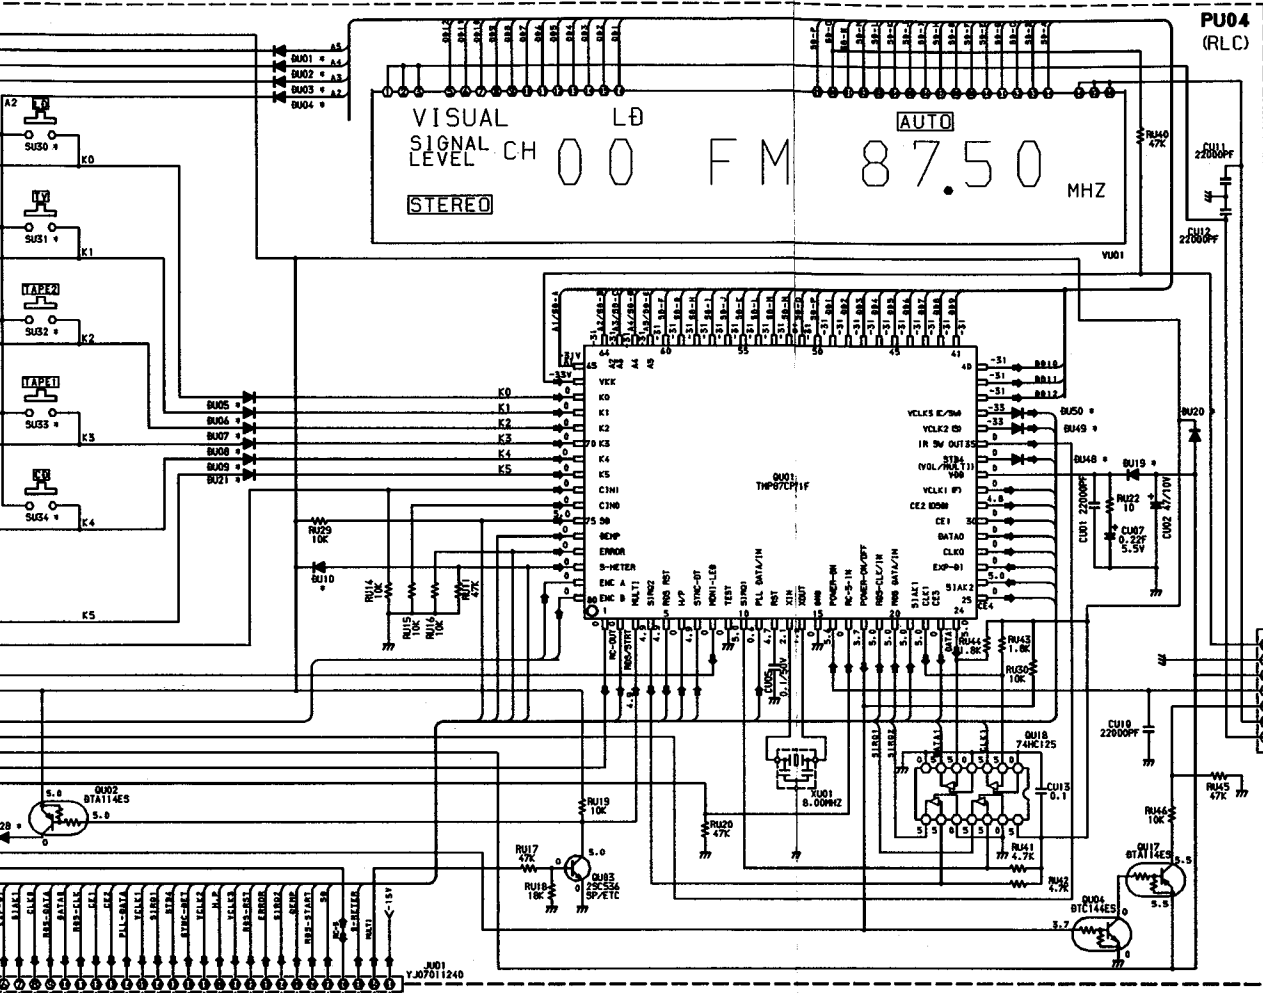

PU04 (RLC)

VISUAL SIGNAL LEVEL STEREO

CH 00

FM

87.50 MHZ

TO CONNECT SCHEMATIC DIAGRAM (5)

D


1 Page 48

FROM BACK-UP SCHEMATIC DIAGRAM (7) or (8)

A

5 Page 49 or 50

PL94-AUX IN

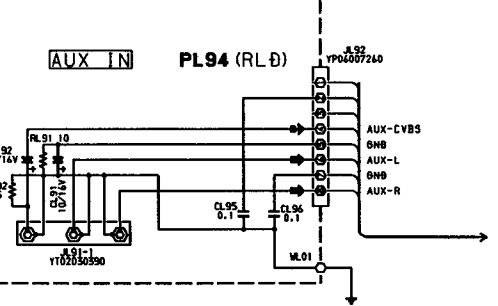

TO CONNECT SCHEMATIC DIAGRAM (6)

5 Page 48

SCHEMATIC DIAGRAM (6) BK VERSION


FROM BACK-UP SCHEMATIC DIAGRAM (7) or (8)
6 Page 49 or 50

FROM FRONT SCHEMATIC DIAGRAM (4) or (5)
5 Page 46 or 47 TO JU01 (PU04)

PY04-CONNECT

PY04 (RTG) (RRK)

MUTE BUFFER
STATUS: MUTED (FM: NO SIGNAL)

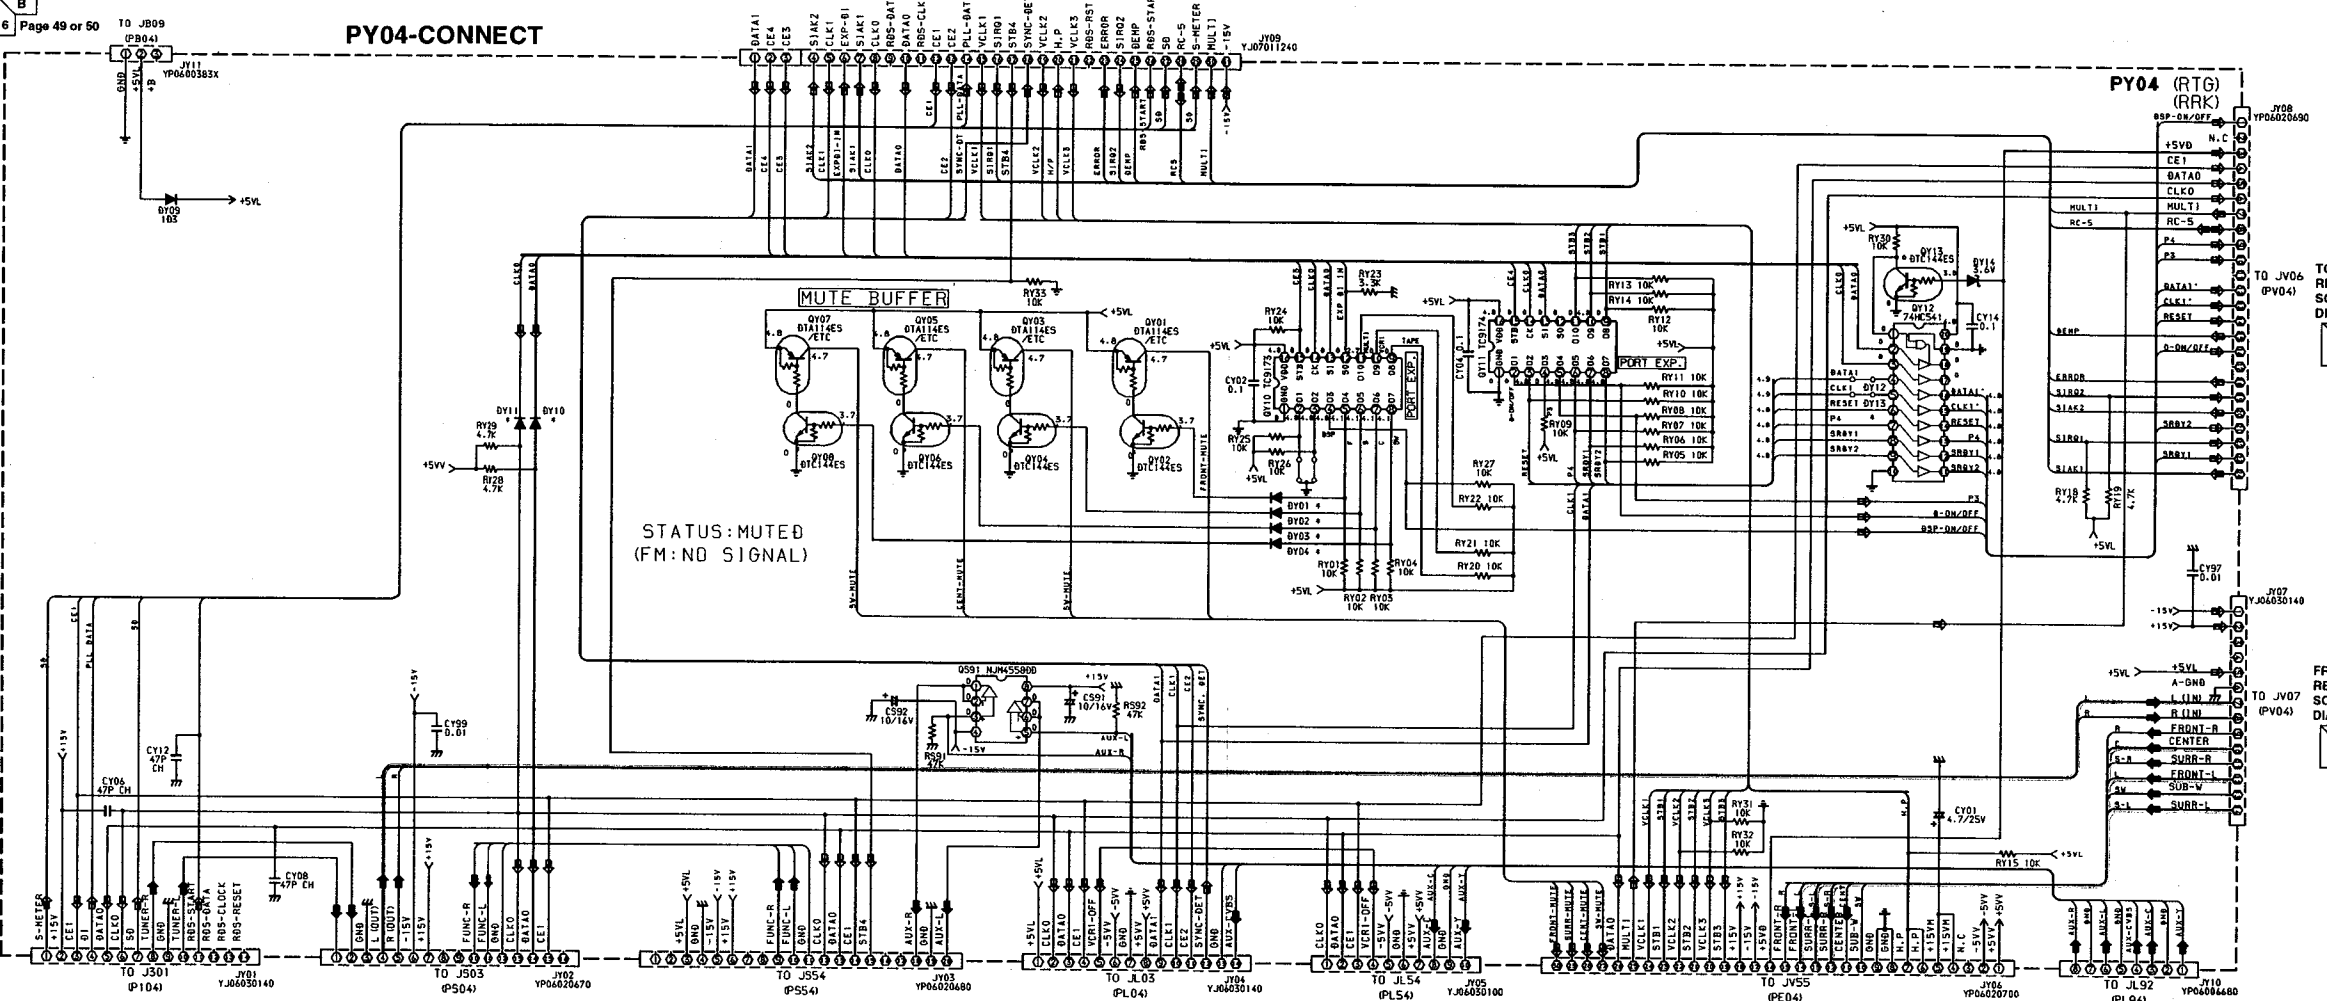

FROM TUNER SCHEMATIC DIAGRAM (3)
4 Page 45

FROM AUDD FUNCTION SCHEMATIC DIAGRAM (1)
2 Page 43

TO V-AUDIO FUNCTION SCHEMATIC DIAGRAM (1)
5 Page 43

TO VIDEO SELECTOR SCHEMATIC DIAGRAM (1)
5 Page 43

TO S-VIDEO SCHEMATIC DIAGRAM (1)
2 Page 43

TO ELE. VOL SCHEMATIC DIAGRAM (2)
6 Page 44

FROM AUX IN SCHEMATIC DIAGRAM (4) or (5)
6 Page 46 or 47

TO REMOTE OUT SCHEMATIC DIAGRAM (2)
1 Page 44

FROM REMOTE OUT SCHEMATIC DIAGRAM (2)
4 Page 44

SCHEMATIC DIAGRAM (6) BK VERSION

1
2
3
4
5
6
7


FROM BACK-UP SCHEMATIC DIAGRAM (7) or (8)

6 Page 49 or 50

PY04-CONNECT

FROM FRONT SCHEMATIC DIAGRAM (4) or (5)

5 Page 46 or 47 TO JUD1 (FU04)

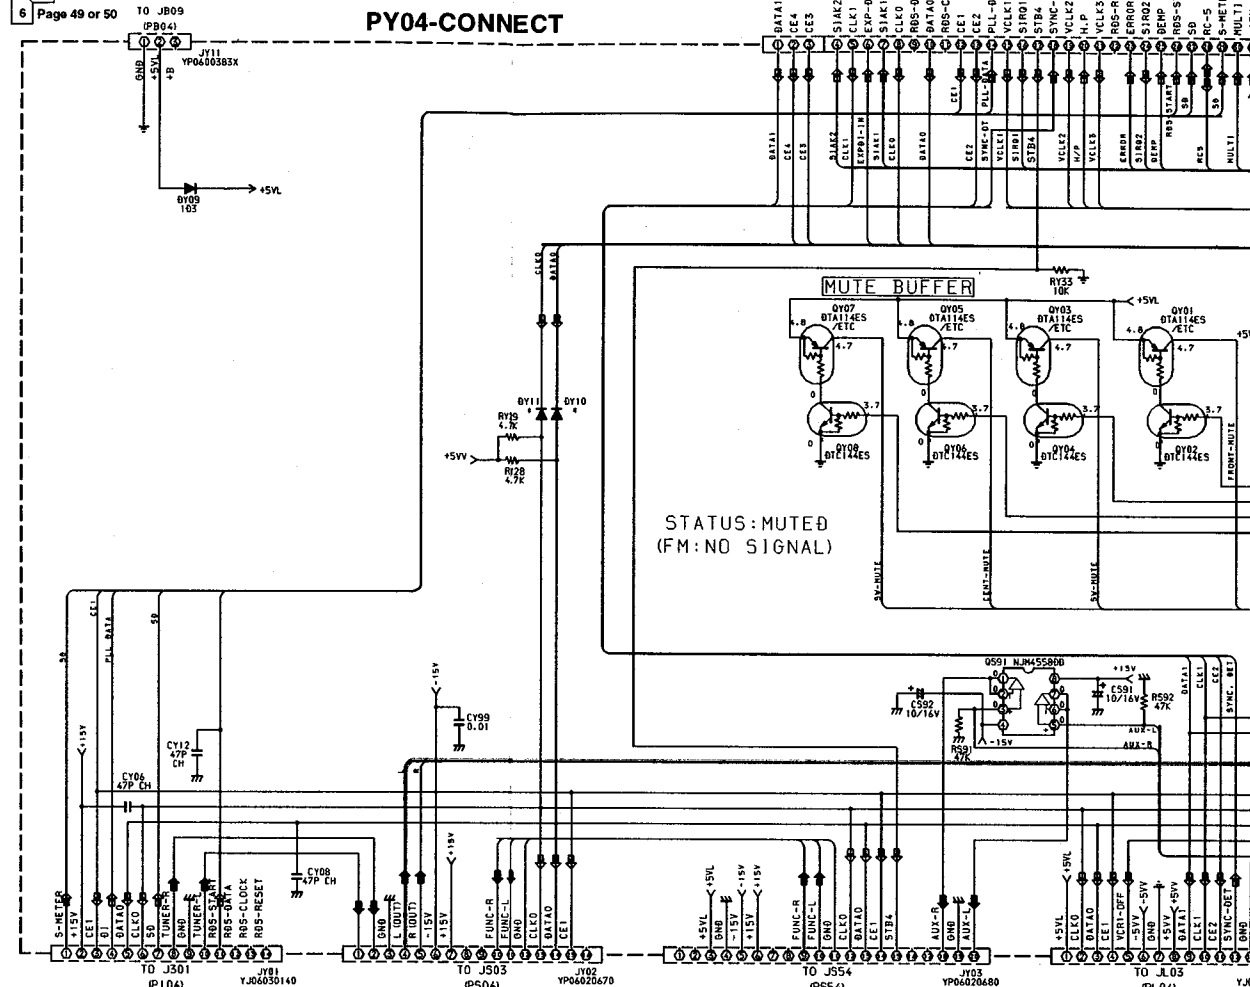


FROM TUNER SCHEMATIC DIAGRAM (3)
4 Page 45

FROM AUDIO FUNCTION SCHEMATIC DIAGRAM (1)
2 Page 43

TO V-AUDIO FUNCTION SCHEMATIC DIAGRAM (1)
5 Page 43

TO VIDEO SELECTOR SCHEMATIC DIAGRAM (1)
5 Page 43

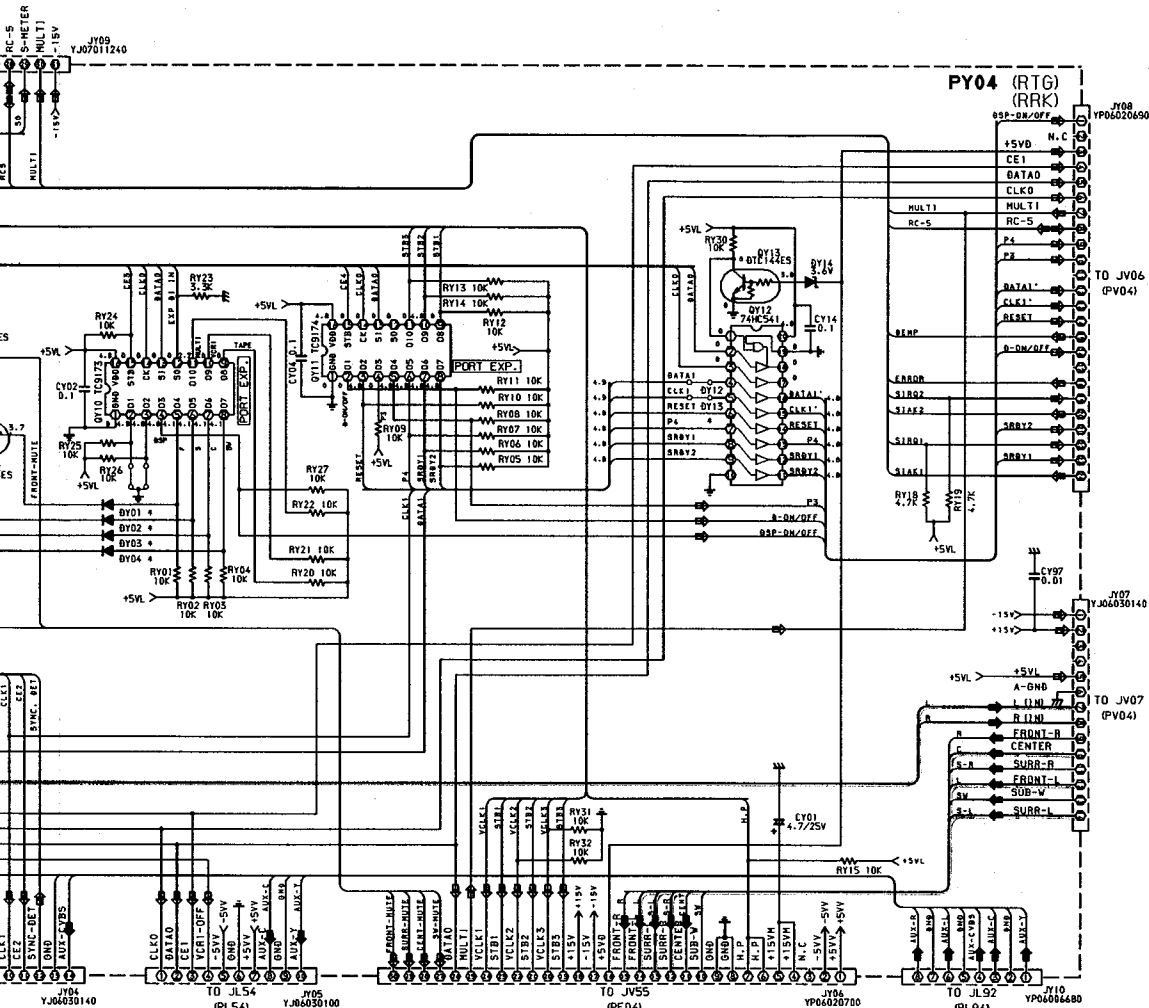

TO S-VIDEO SCHEMATIC DIAGRAM (1)
 J
 2 Page 43

TO ELE. VOL SCHEMATIC DIAGRAM (2)
 A
 6 Page 44

FROM AUX IN SCHEMATIC DIAGRAM (4) or (5)
 G
 6 Page 46 or 47


TO REMOTE OUT SCHEMATIC DIAGRAM (2)
 B
 1 Page 44

FROM REMOTE OUT SCHEMATIC DIAGRAM (2)
 E
 4 Page 44



SCHEMATIC DIAGRAM (7) BK VERSION

P704-MAIN AMP (AVR70)

PP04-SURROUND AMP

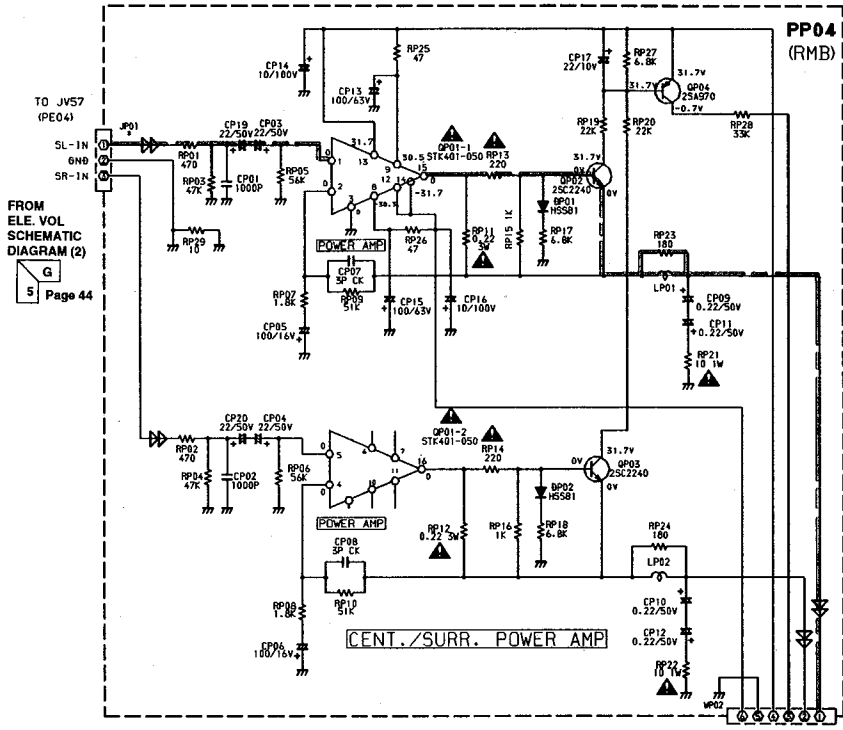

PB04-BACK-UP (AVR70) ONLY

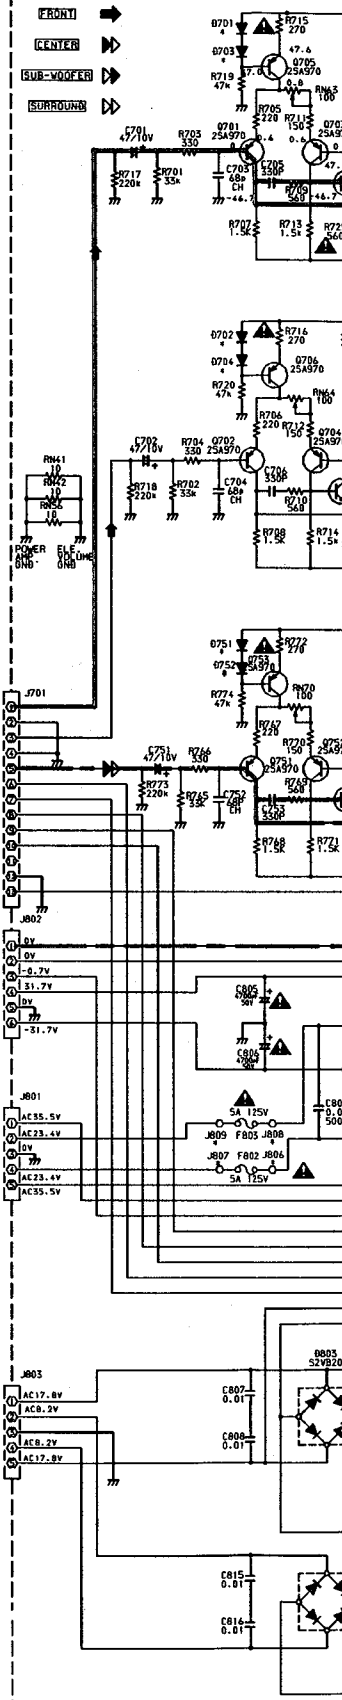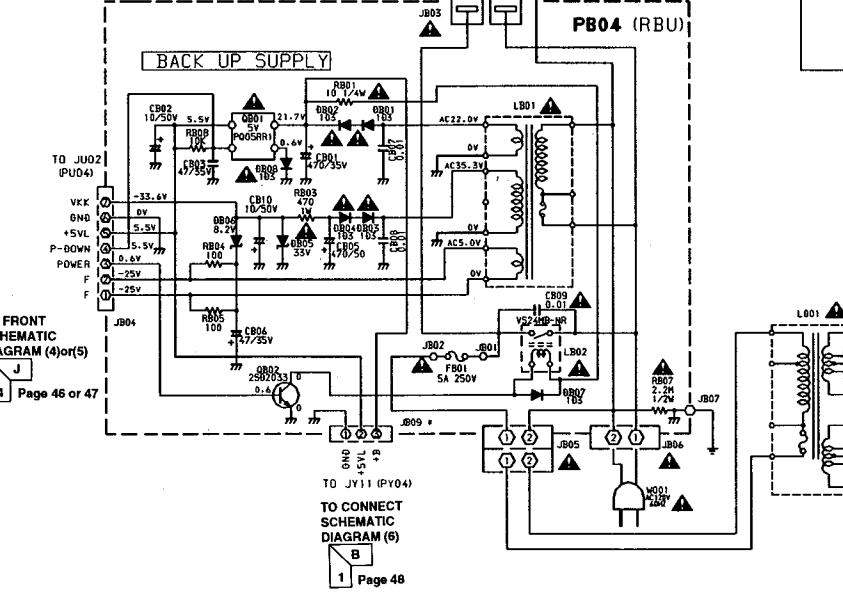

1
2
3
4
5
6
7

FROM ELE. VOL SCHEMATIC DIAGRAM (2)
G
5 Page 44

FROM ELE. VOL SCHEMATIC DIAGRAM (2)
G
7 Page 44

TO FRONT SCHEMATIC DIAGRAM (4) or (5)
J
4 Page 46 or 47

TO JY11 (PY04)
TO CONNECT SCHEMATIC DIAGRAM (6)
B
1 Page 48

F


G

H

I


J

P (AVR70) ONLY

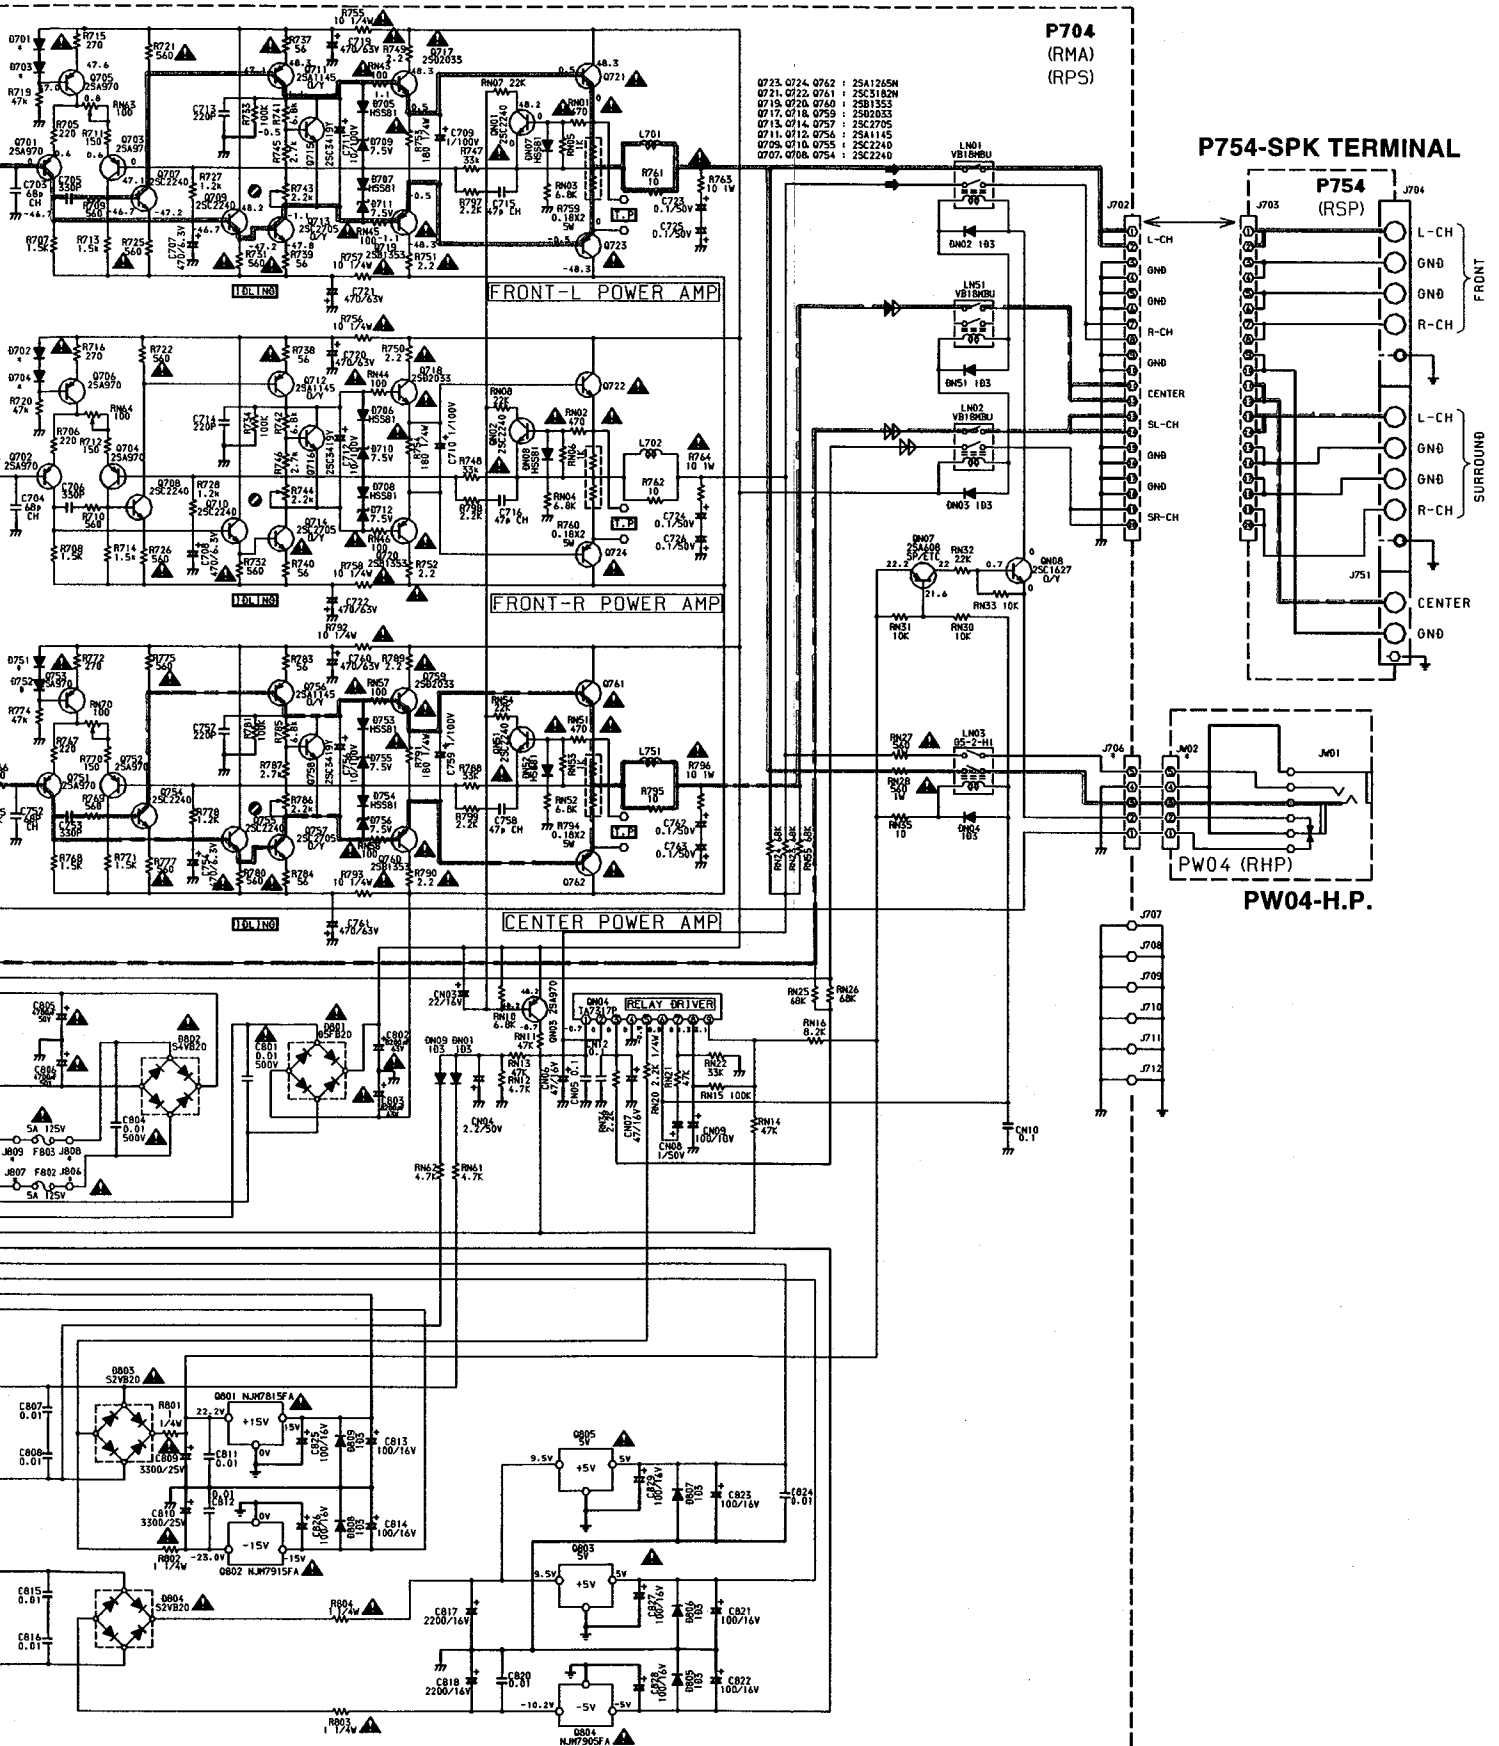

SCHEMATIC DIAGRAM (8) BK VERSION

P704-MAIN AMP (AVR70MK II) ONLY

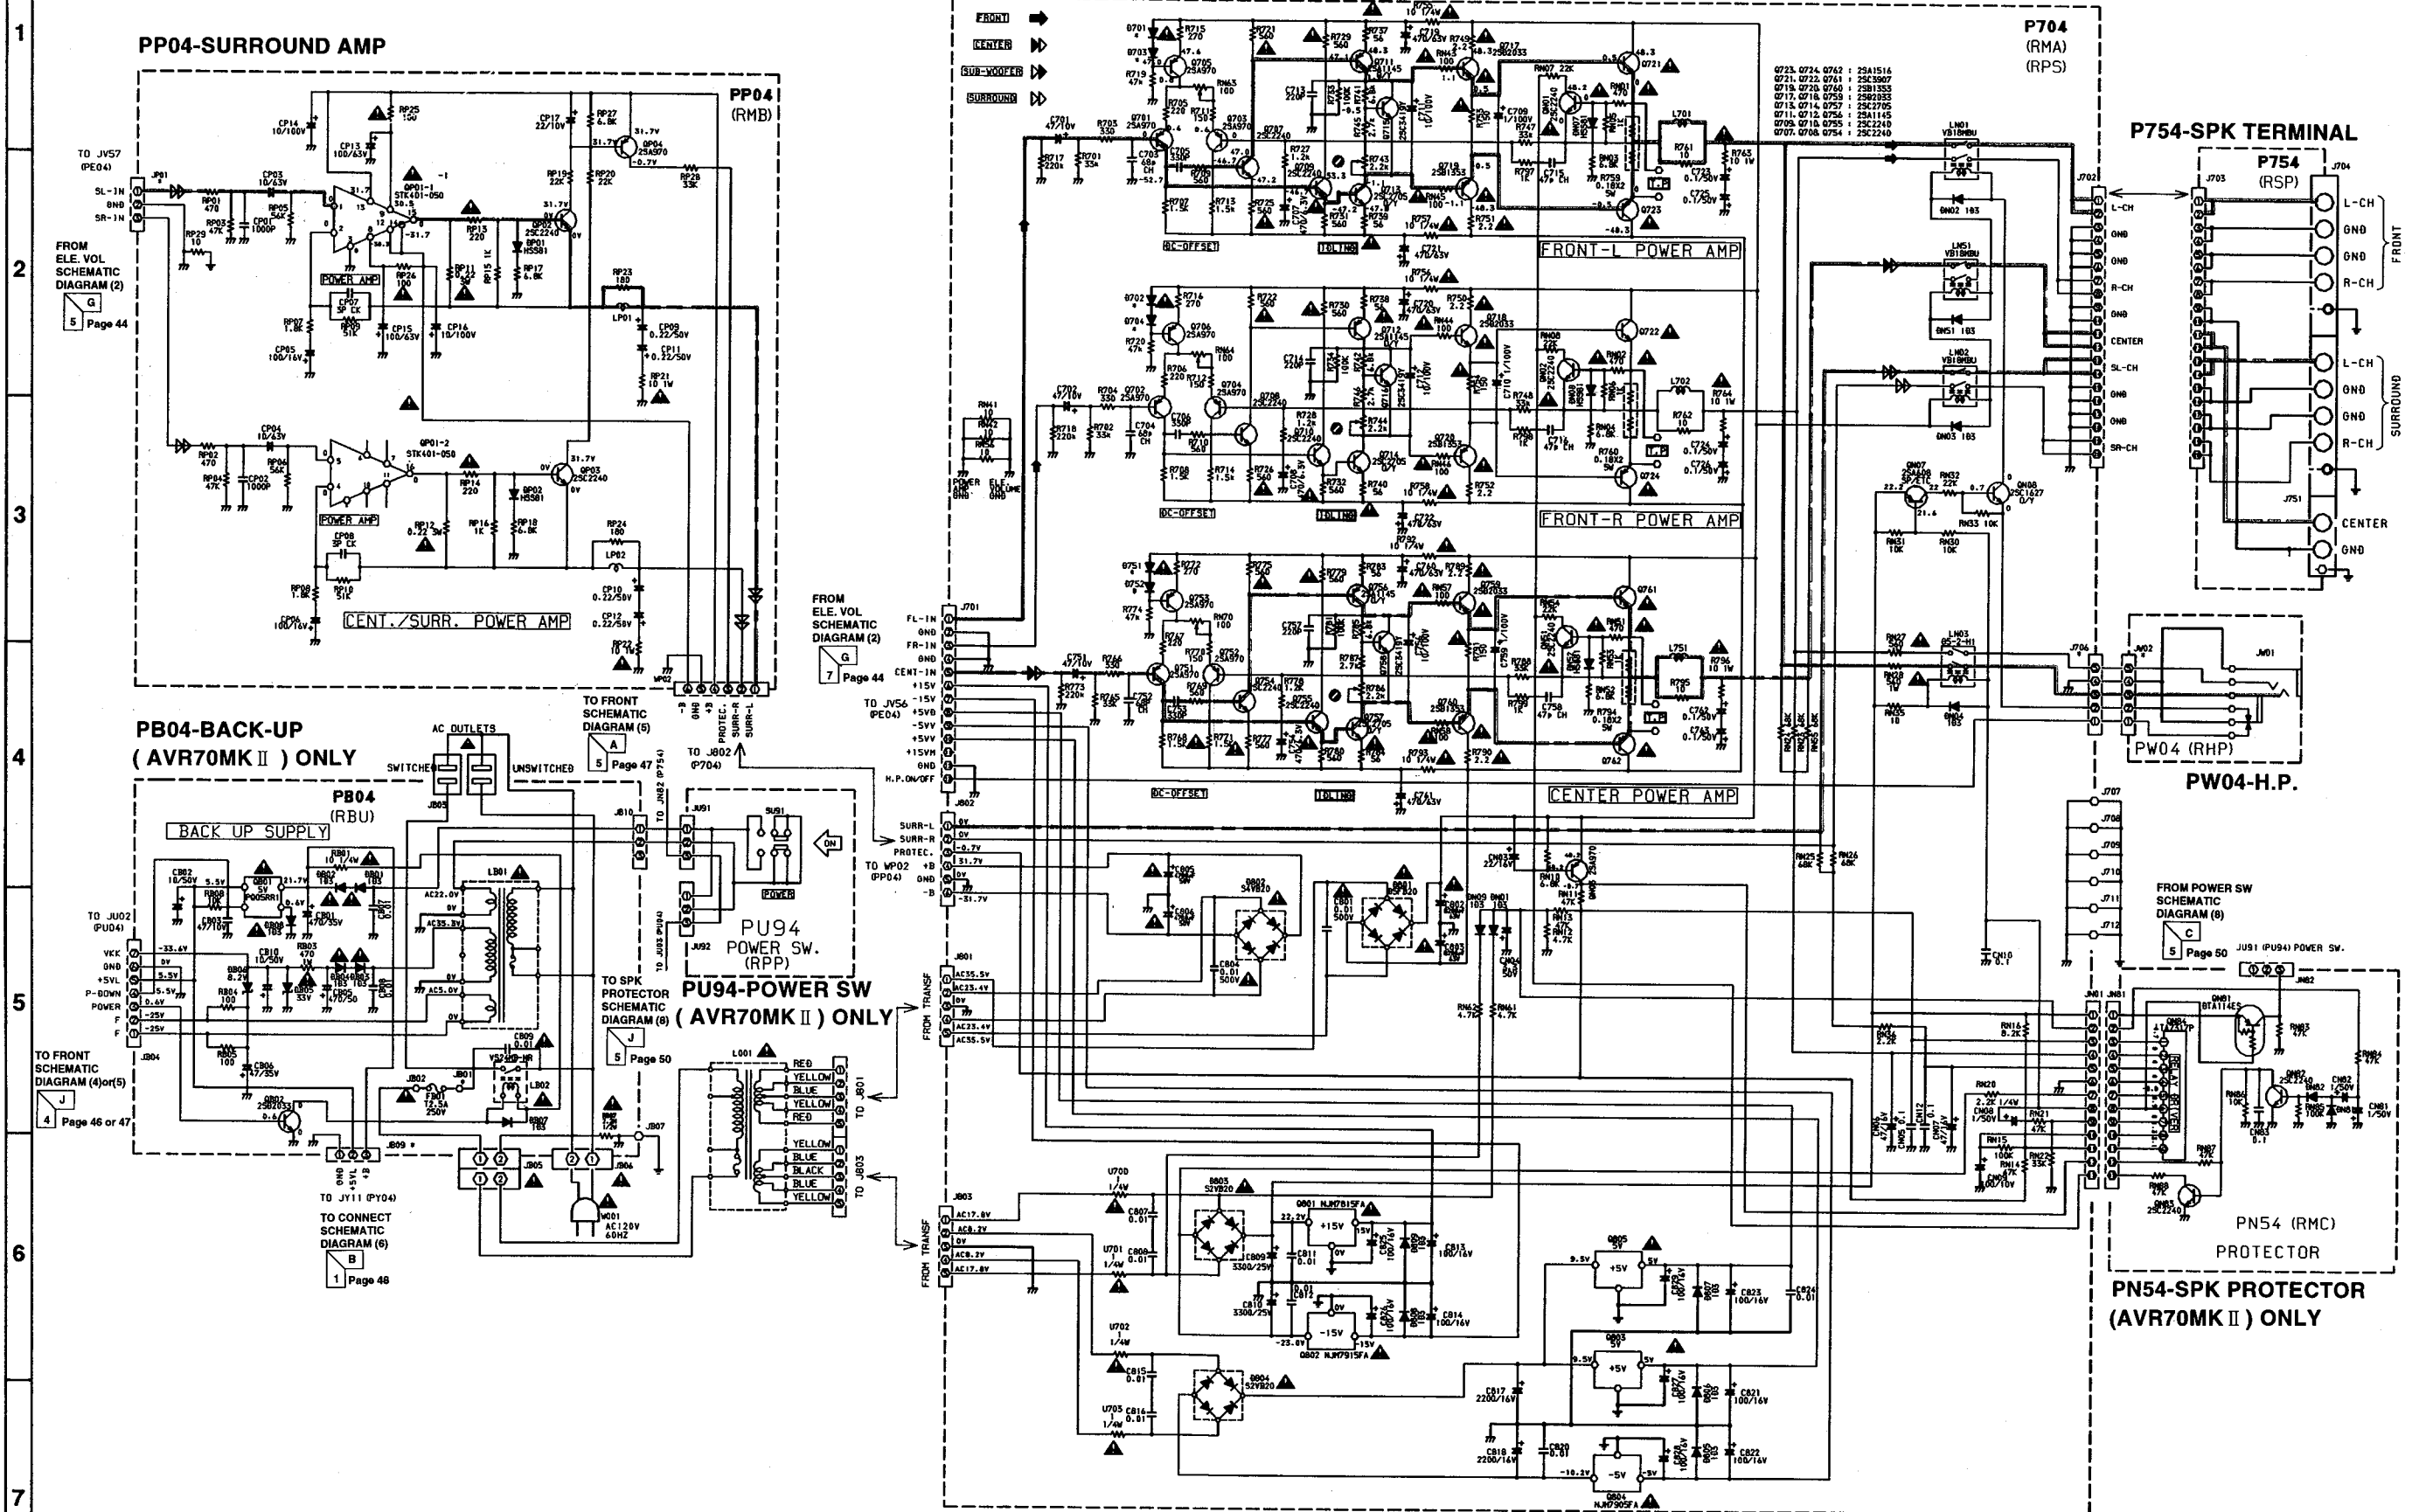


- Q723, Q734, Q742 : 2SA1514
- Q721, Q722, Q761 : 2SC3807
- Q719, Q720, Q760 : 2SB1355
- Q717, Q718, Q759 : 2SB235
- Q713, Q714, Q757 : 2SC2705
- Q711, Q712, Q756 : 2SA1145
- Q705, Q710, Q753 : 2SC2240
- Q707, Q708, Q754 : 2SC2240

1
2
3
4
5
6
7


SCHEMATIC DIAGRAM (8) BK VERSION

P704-MAIN AMP (AVR70)

PP04-SURROUND AMP

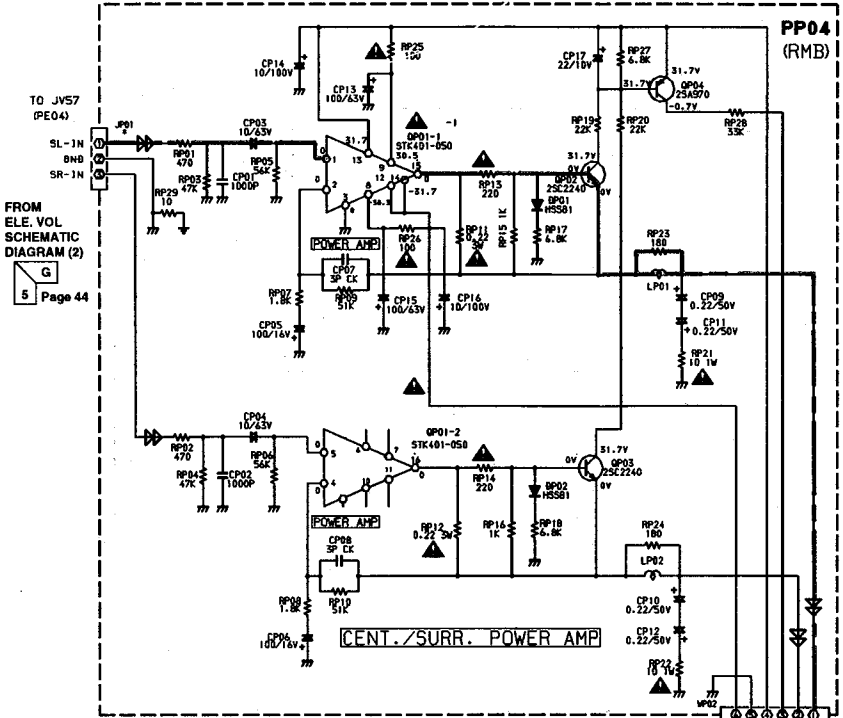

PB04-BACK-UP (AVR70MK II) ONLY

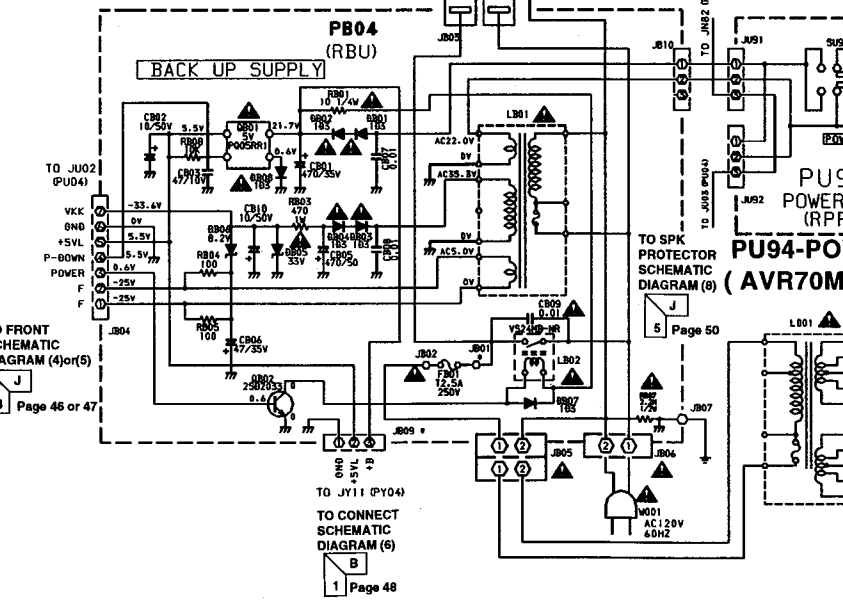


FROM ELE. VOL SCHEMATIC DIAGRAM (2) G Page 44

TO FRONT SCHEMATIC DIAGRAM (5) S Page 47

TO SPK PROTECTOR SCHEMATIC DIAGRAM (8) J Page 50

TO CONNECT SCHEMATIC DIAGRAM (9) B Page 48

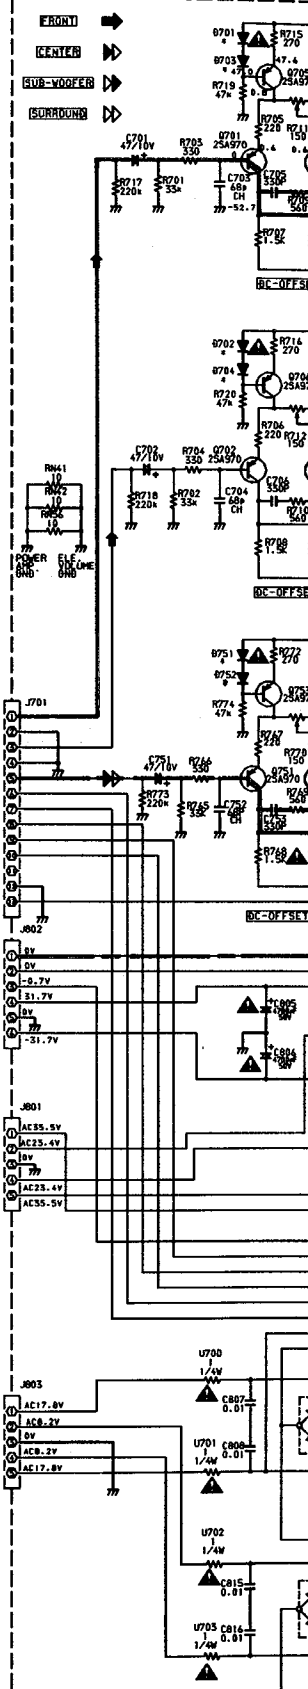


FROM ELE. VOL SCHEMATIC DIAGRAM (2) G Page 44

PU94 POWER SW. (RPP) TO J092 (AVR70MK II) ONLY

FROM TRANSF. TO J093

R70MK II) ONLY


F G H I J

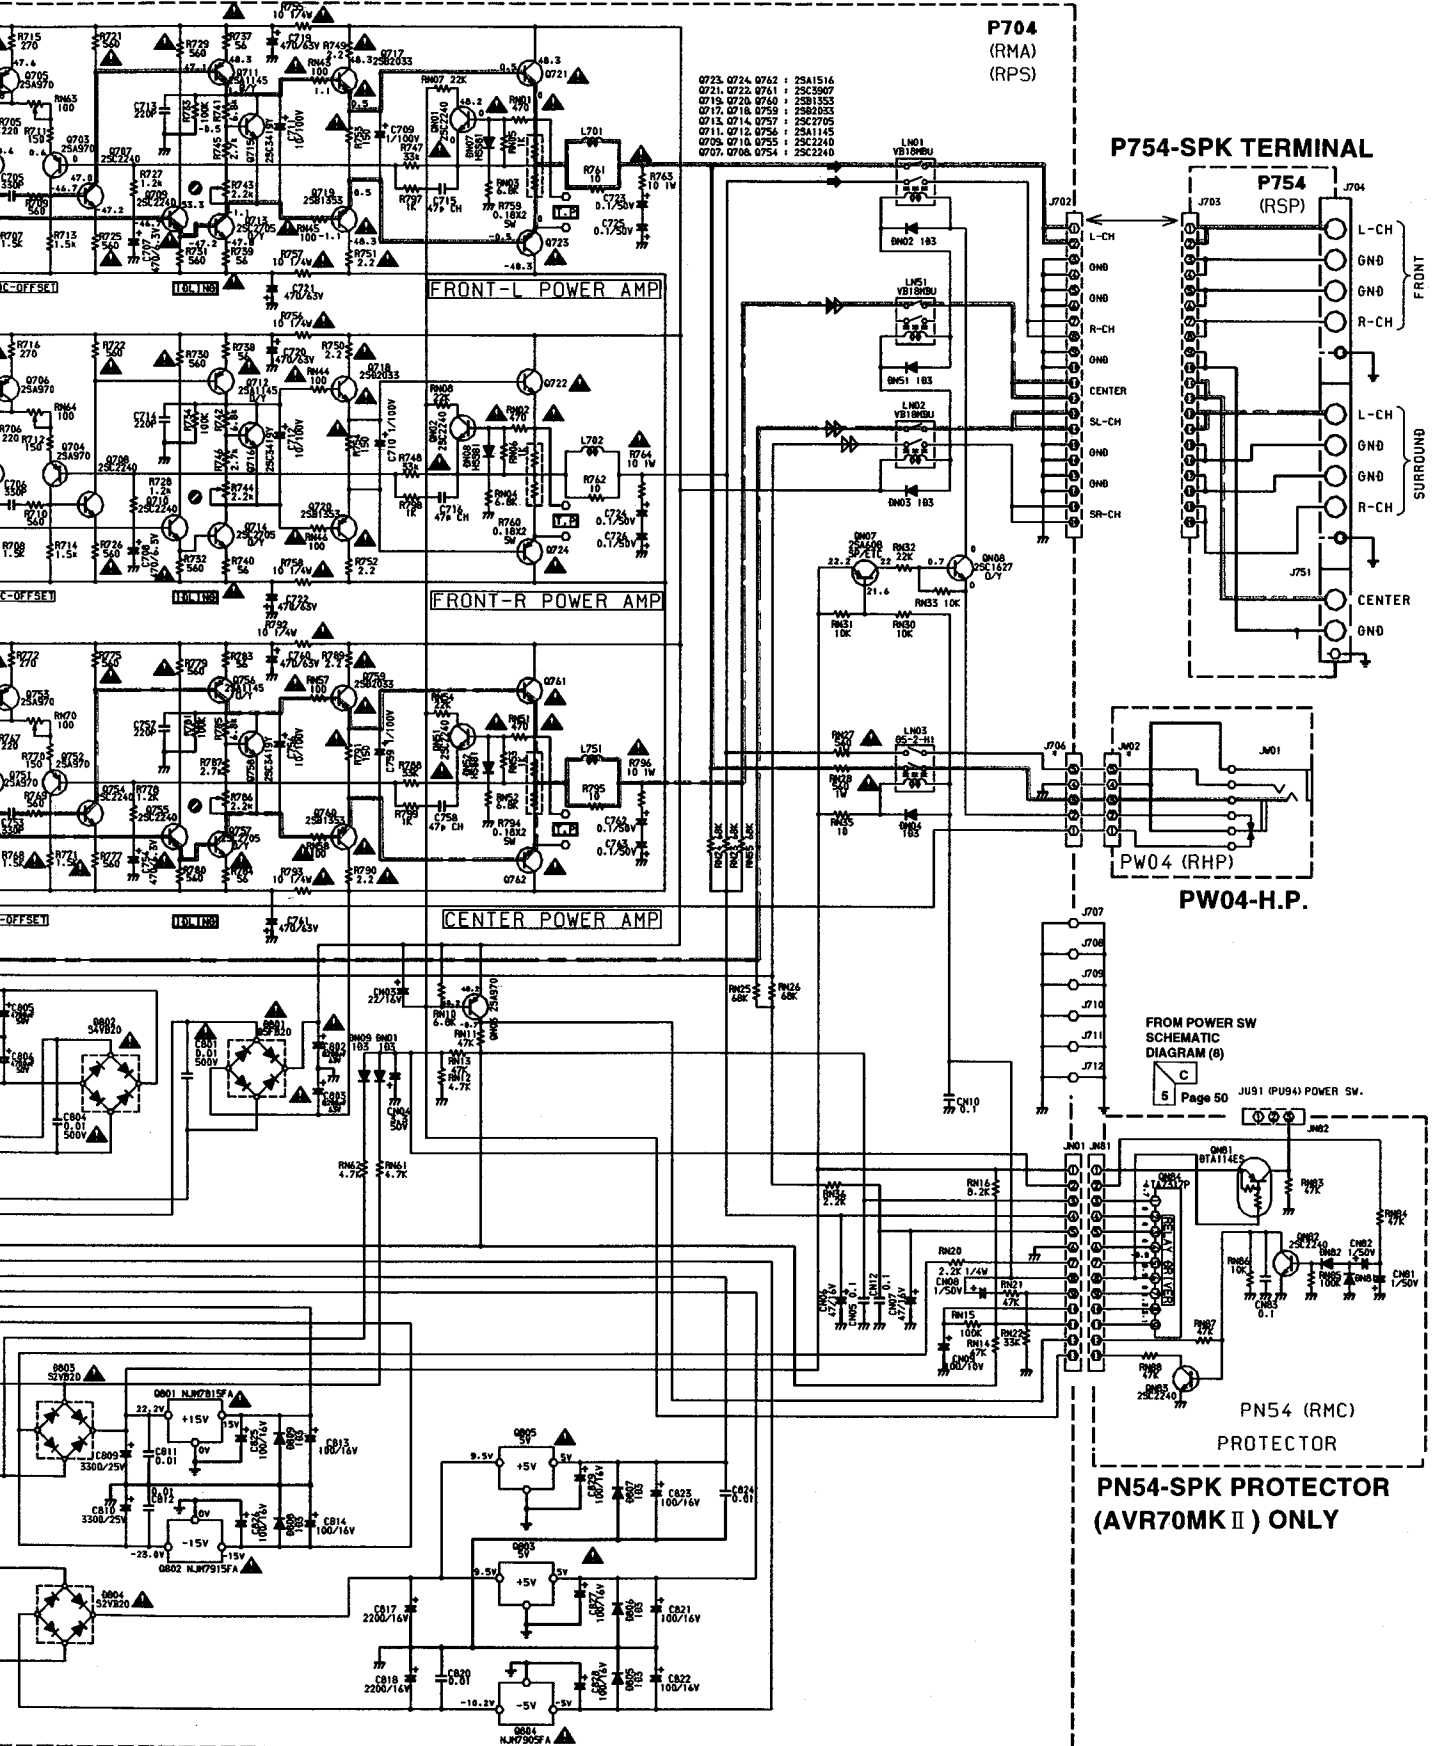

P704 (RMA) (RPS)


- 0723, 0724, 0762 : 25A1516
- 0721, 0722, 0761 : 25C9907
- 0715, 0720, 0740 : 25B1353
- 0717, 0718, 0759 : 25B2033
- 0715, 0714, 0757 : 25C2705
- 0711, 0712, 0734 : 25A1145
- 0705, 0710, 0755 : 25C2240
- 0707, 0708, 0754 : 25C2240

P754-SPK TERMINAL

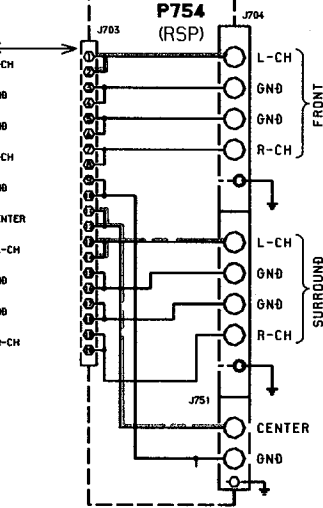

PW04-H.P.

FROM POWER SW SCHEMATIC DIAGRAM (8) Page 50

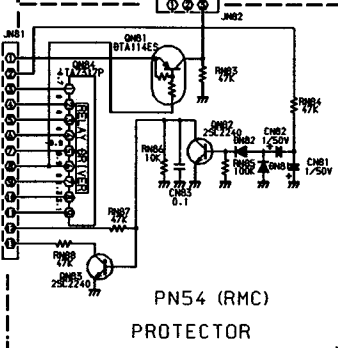


PN54-SPK PROTECTOR (AVR70MK II) ONLY

SCHEMATIC DIAGRAM (9) BK VERSION

P604-THX PRO-LOGIC DSP

1
2
3
4
5
6
7

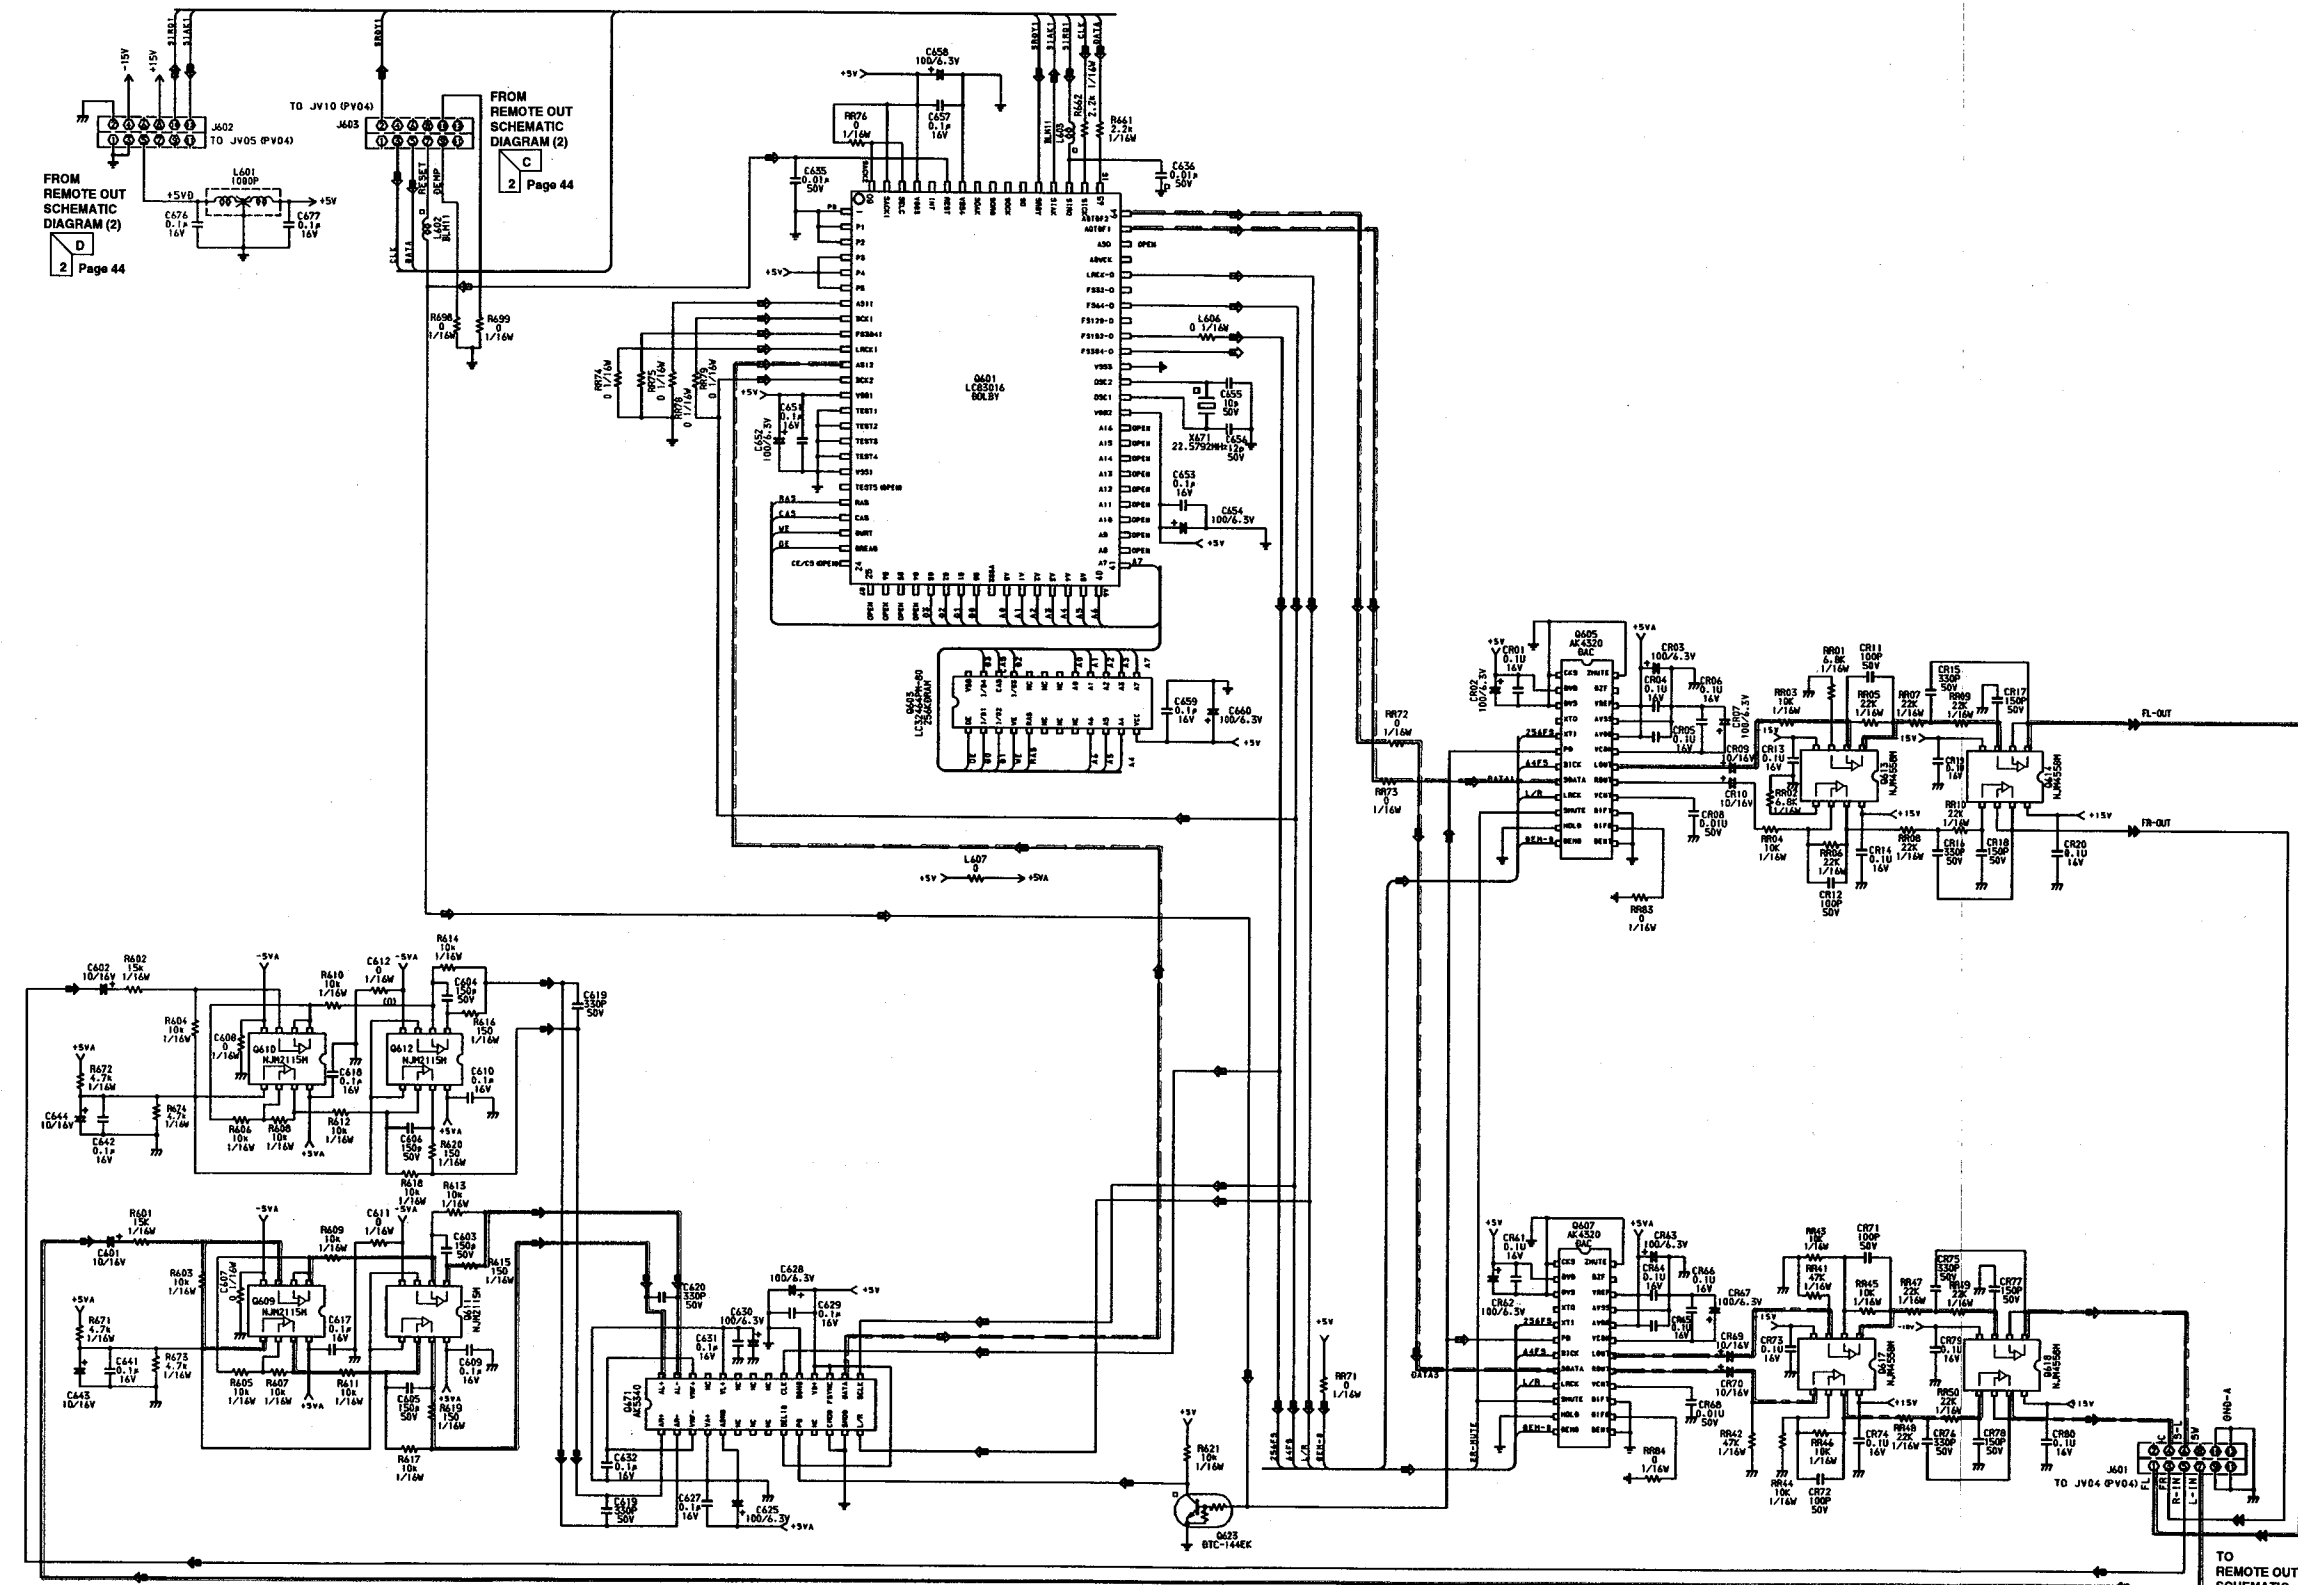

TO REMOTE OUT SCHEMATIC DIAGRAM (2)
 2 Page 44


- ⇨ DIGITAL
- ⇨ ANALOG-L-IN
- ⇨ ANALOG-R-IN
- ⇨ ANALOG-L-OUT
- ⇨ ANALOG-R-OUT
- ⇨ ANALOG-SV-OUT
- ⇨ ANALOG-C-OUT
- ⇨ ANALOG-SL-OUT
- ⇨ ANALOG-SR-OUT

SCHMATIC DIAGRAM (10) (B) VERSION

A B C D E F G H I J

1

PS04-AUDIO FUNCTION

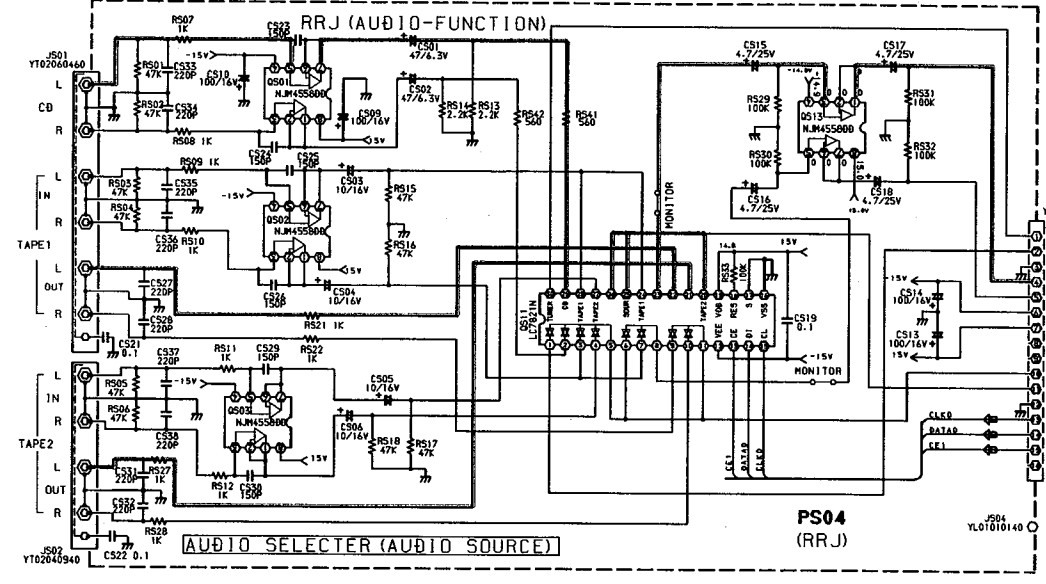


TO CONNECT SCHEMATIC DIAGRAM (15)
C Page 57
JY02 (PY04)

2

3


PL04-VIDEO SELECTOR

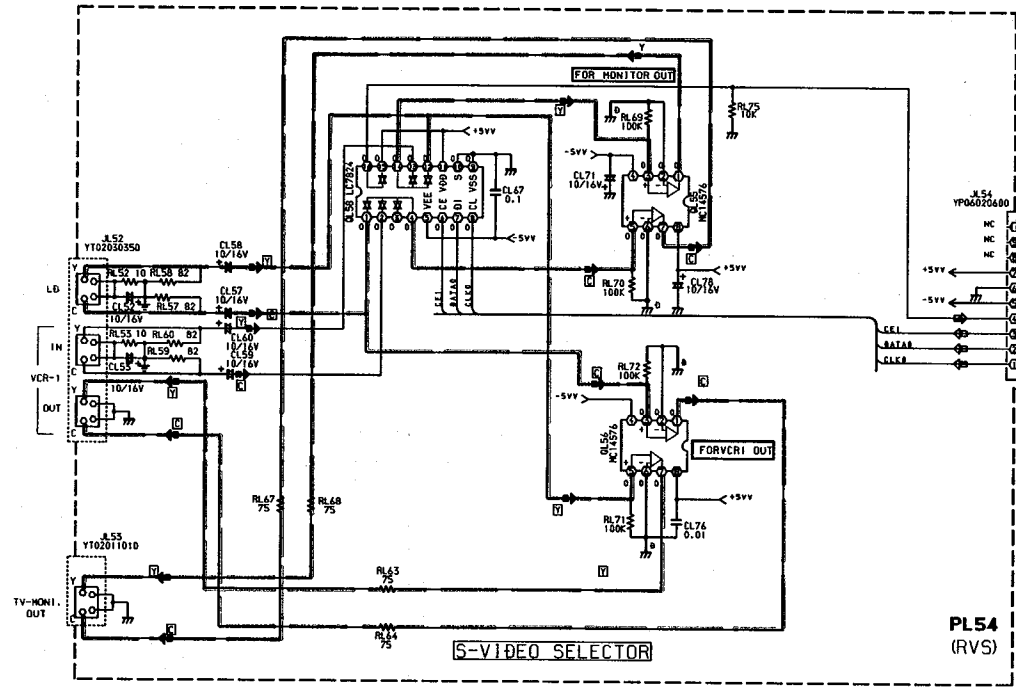

TO CONNECT SCHEMATIC DIAGRAM (15)
F Page 57

4

PS54-V-AUDIO FUNCTION

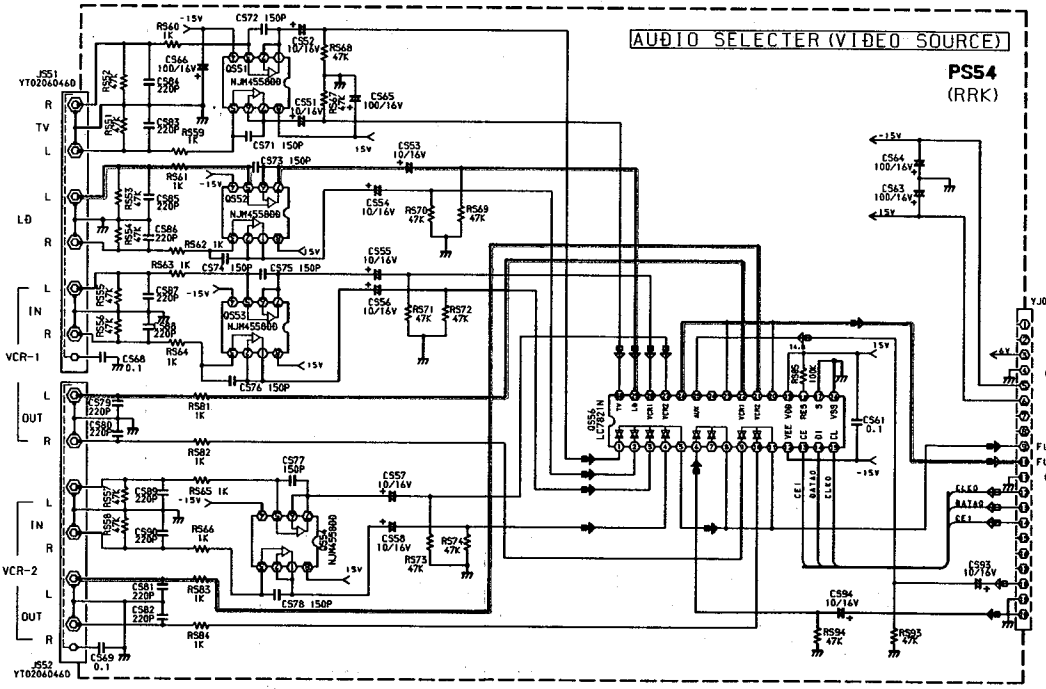


FROM CONNECT SCHEMATIC DIAGRAM (15)
D Page 57
JY03 (PY04)

5

6

PL54-S-VIDEO

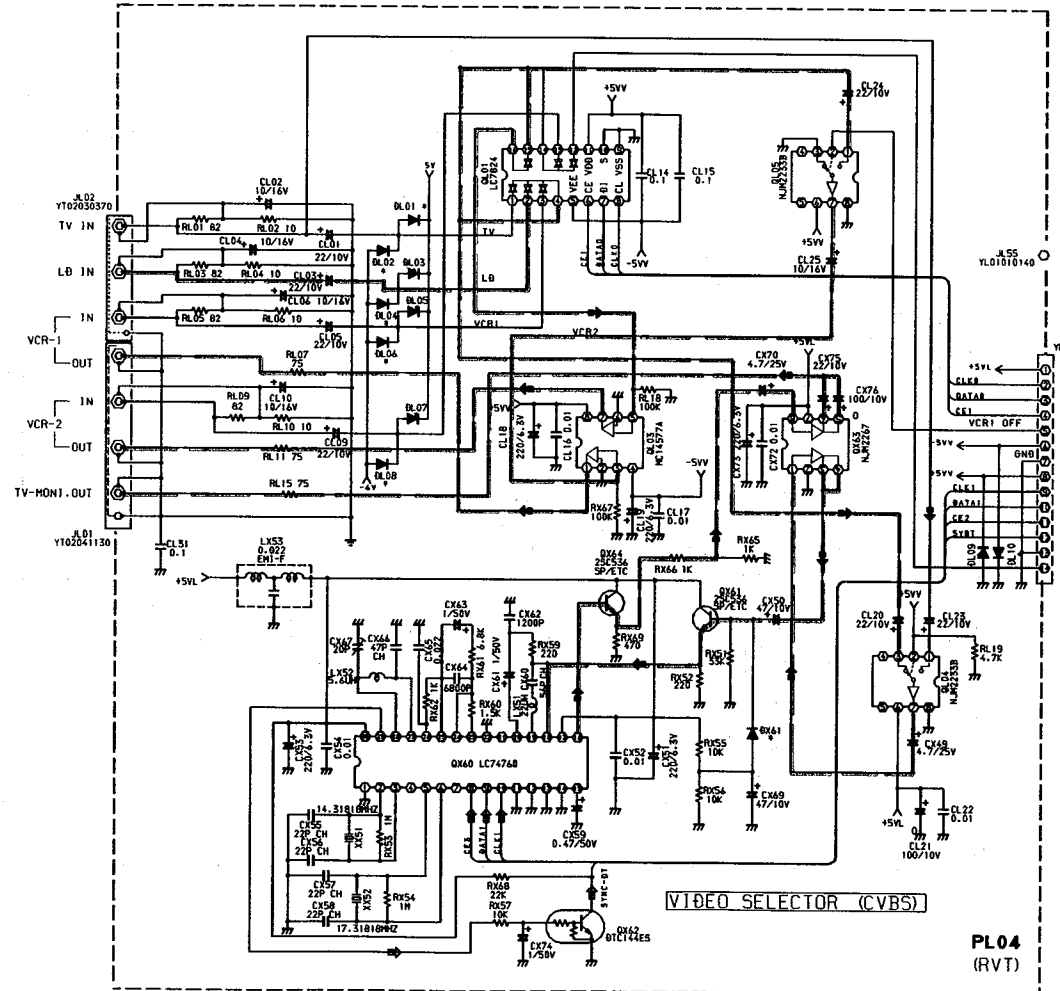


FROM CONNECT SCHEMATIC DIAGRAM (15)
E Page 57
JY04 (PY04)

7

SCHEMATIC DIAGRAM (10) (B) VERSION

1

PS04-AUDIO FUNCTION

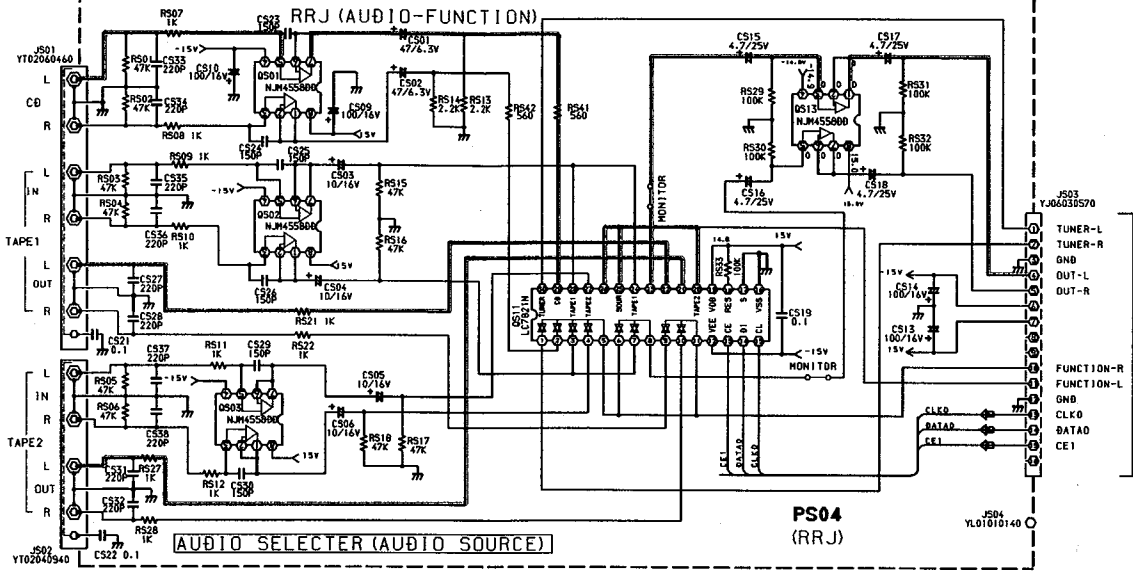


2

3

4

PS54-V-AUDIO FUNCTION

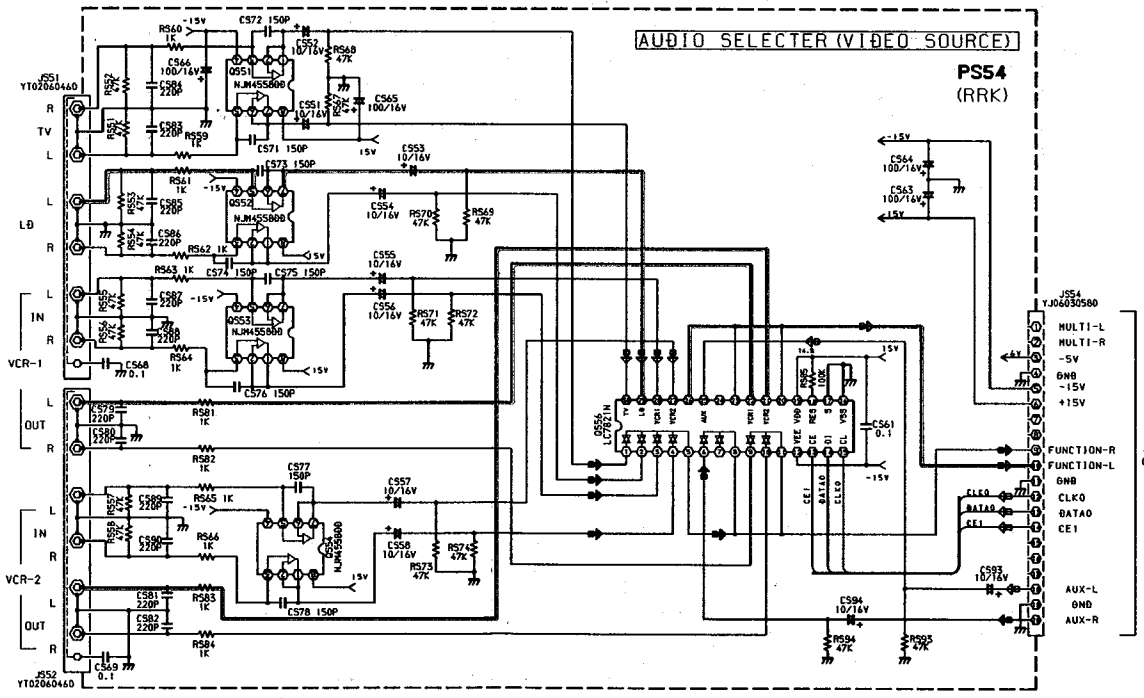

5

6

7

TO CONNECT SCHEMATIC DIAGRAM (15)

Page 5

FUNCTION-R
FUNCTION-L
GND
CLK0
BATA0
CE1


FROM CONNECT SCHEMATIC DIAGRAM (15)

Page 57

FUNCTION-R
FUNCTION-L
GND
CLK0
BATA0
CE1


AUX-L
GND
AUX-R

PL04-VIDEO SELECTOR

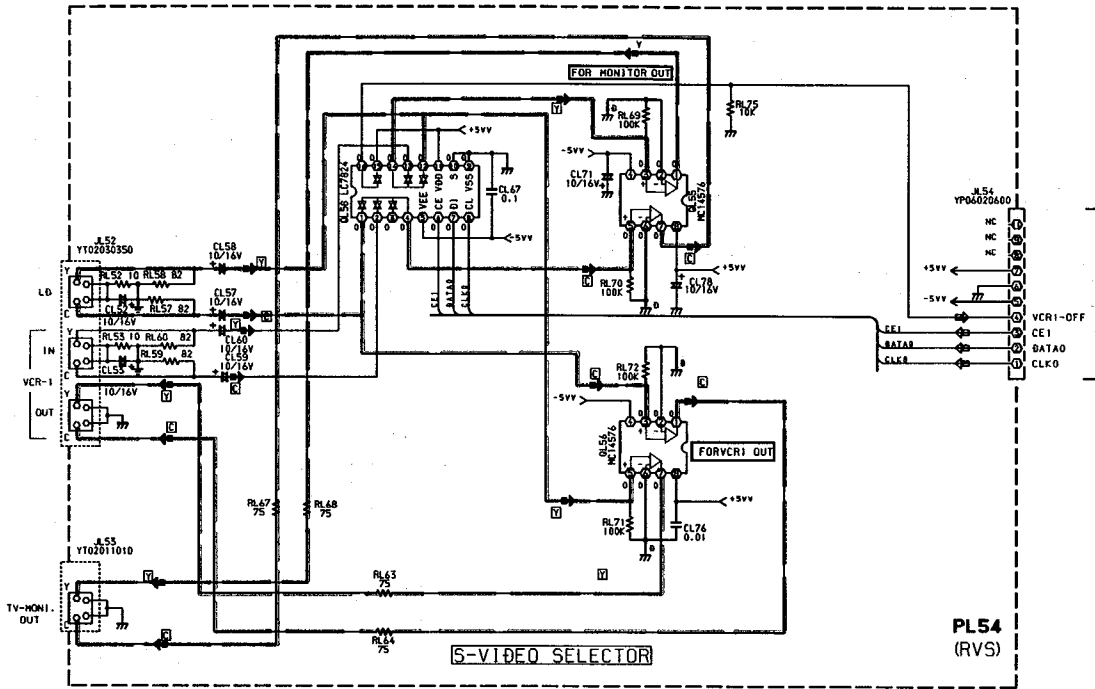

PL54 (RVS)

PL54-S-VIDEO

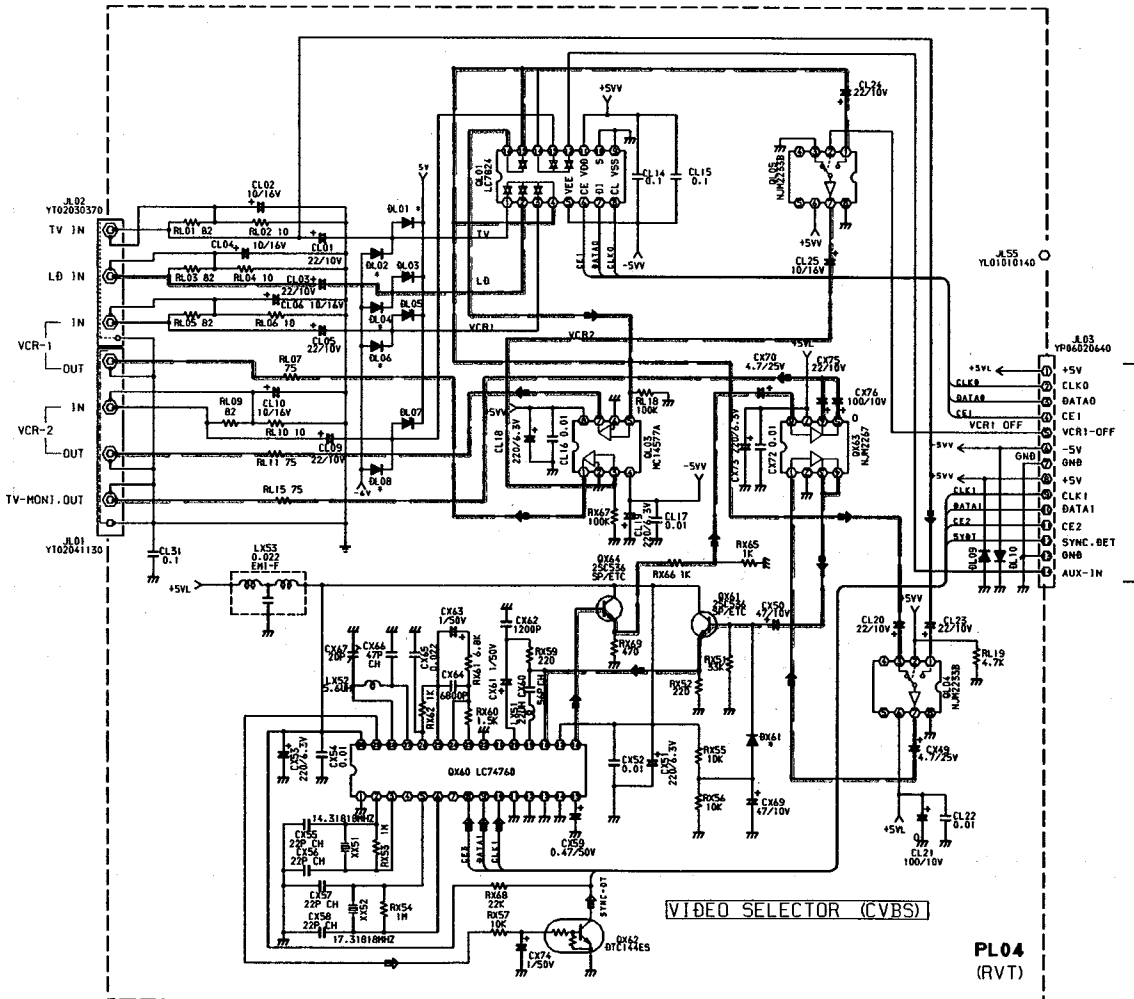

PL04 (RVT)

CONNECT SCHEMATIC DIAGRAM (15) C Page 57

TO CONNECT SCHEMATIC DIAGRAM (15) F Page 57 JY05 (PY04)



FROM CONNECT SCHEMATIC DIAGRAM (15) E Page 57 JY04 (PT04)

SCHMATIC DIAGRAM (11) **IB** VERSION

PRO LOGIC DSP
HEMATIC
GRAM (16)
B
Page 60

FROM
THX PRO LOGIC DSP
SCHEMATIC
DIAGRAM (18)
J
Page 60


PF04-TONE

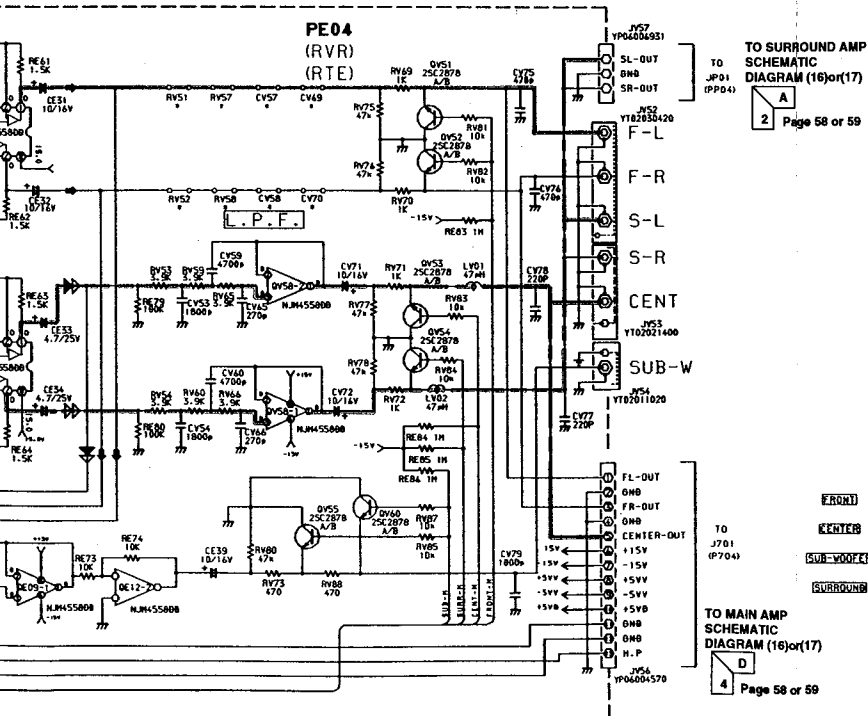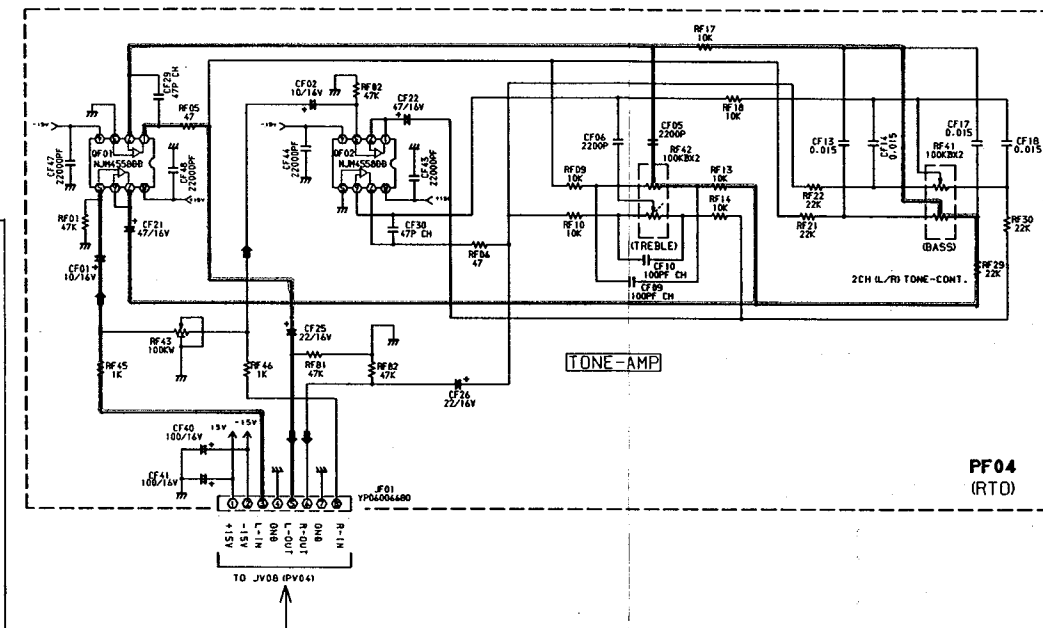

SCHEMATIC DIAGRAM (12) (B) VERSION

P104
(RTU)
(RSY)
(RRØ)

P104-TUNER

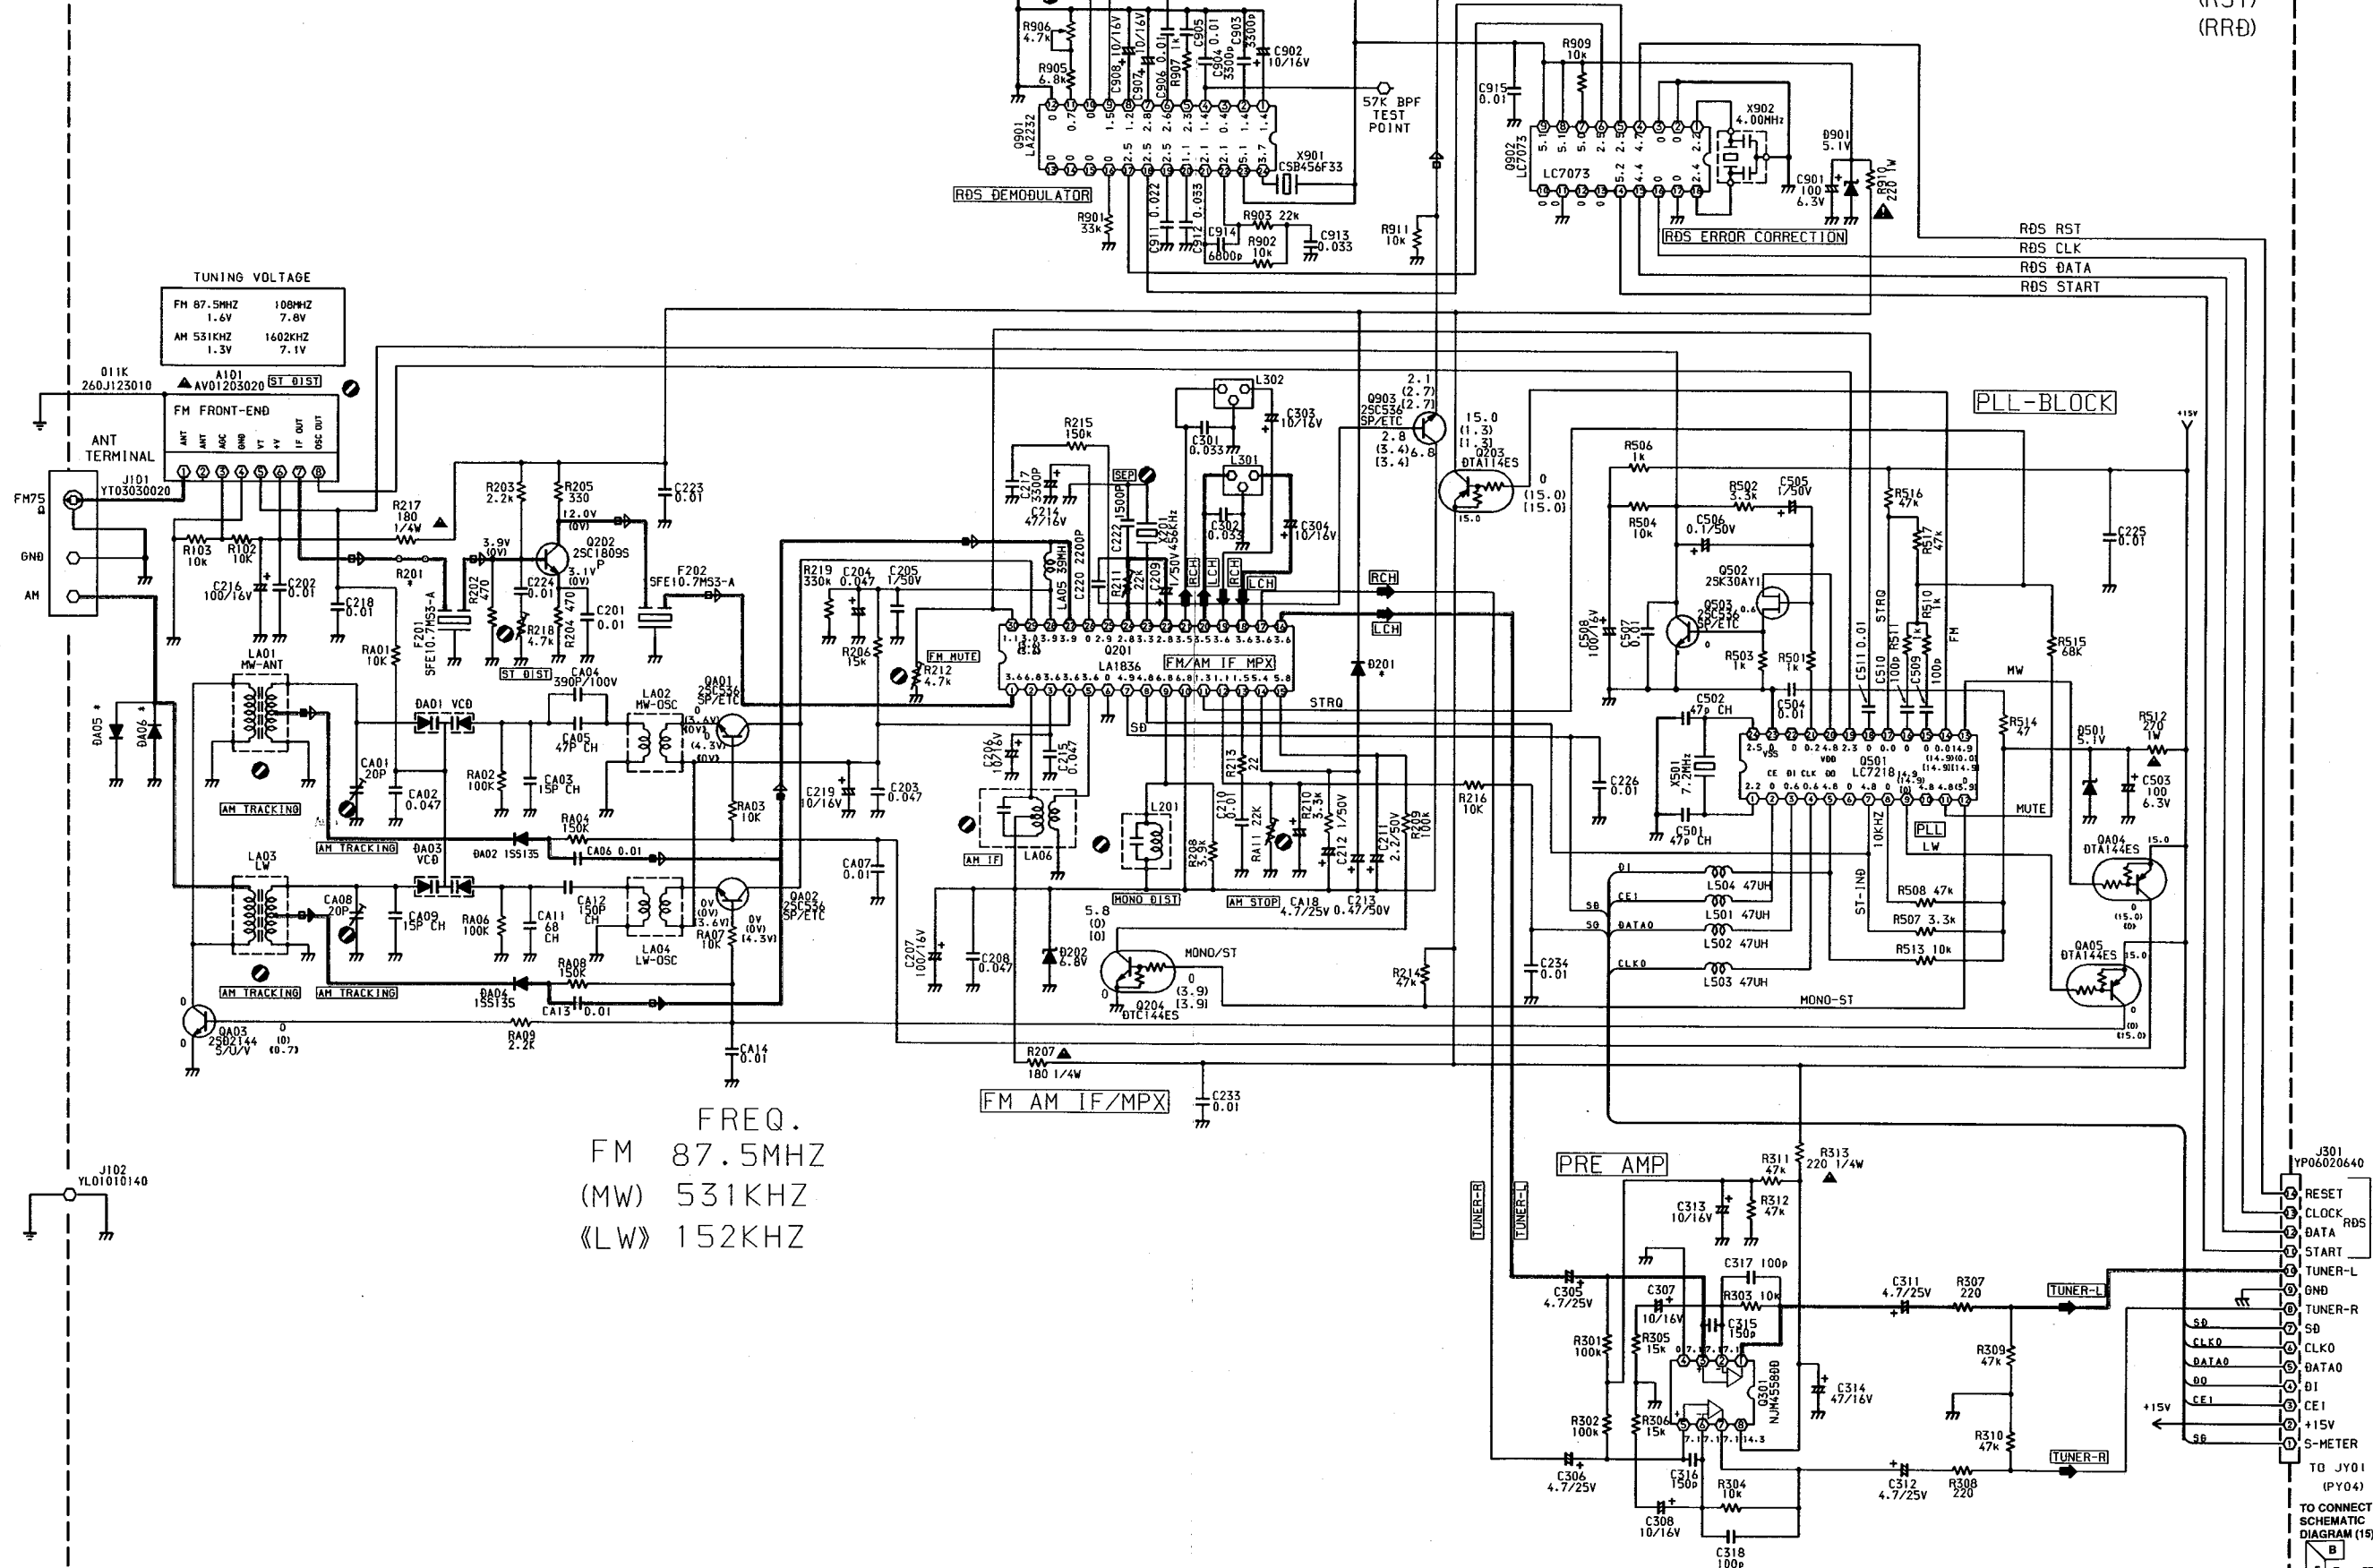

TUNING VOLTAGE

FH 87.5MHZ	108MHZ
1.6V	7.8V
AM 531KHZ	1602KHZ
1.3V	7.1V

FREQ.

FM	87.5MHZ
(MW)	531KHZ
(LW)	152KHZ


- ① J301 YP06020640
 - ② RESET
 - ③ CLOCK
 - ④ RDS
 - ⑤ DATA
 - ⑥ START
 - ⑦ TUNER-L
 - ⑧ GND
 - ⑨ TUNER-R
 - ⑩ SD
 - ⑪ CLK0
 - ⑫ DATA0
 - ⑬ B1
 - ⑭ CE1
 - ⑮ +15V
 - ⑯ S-METER
- TO JY01 (PY04)
- TO CONNECT SCHEMATIC DIAGRAM (15)

SCHMATIC DIAGRAM (12) **B** VERSION

P104-TUNER


TUNING VOLTAGE

FM 87.5MHZ	108MHZ
1.6V	7.8V
AM 531KHZ	1602KHZ
1.3V	7.1V

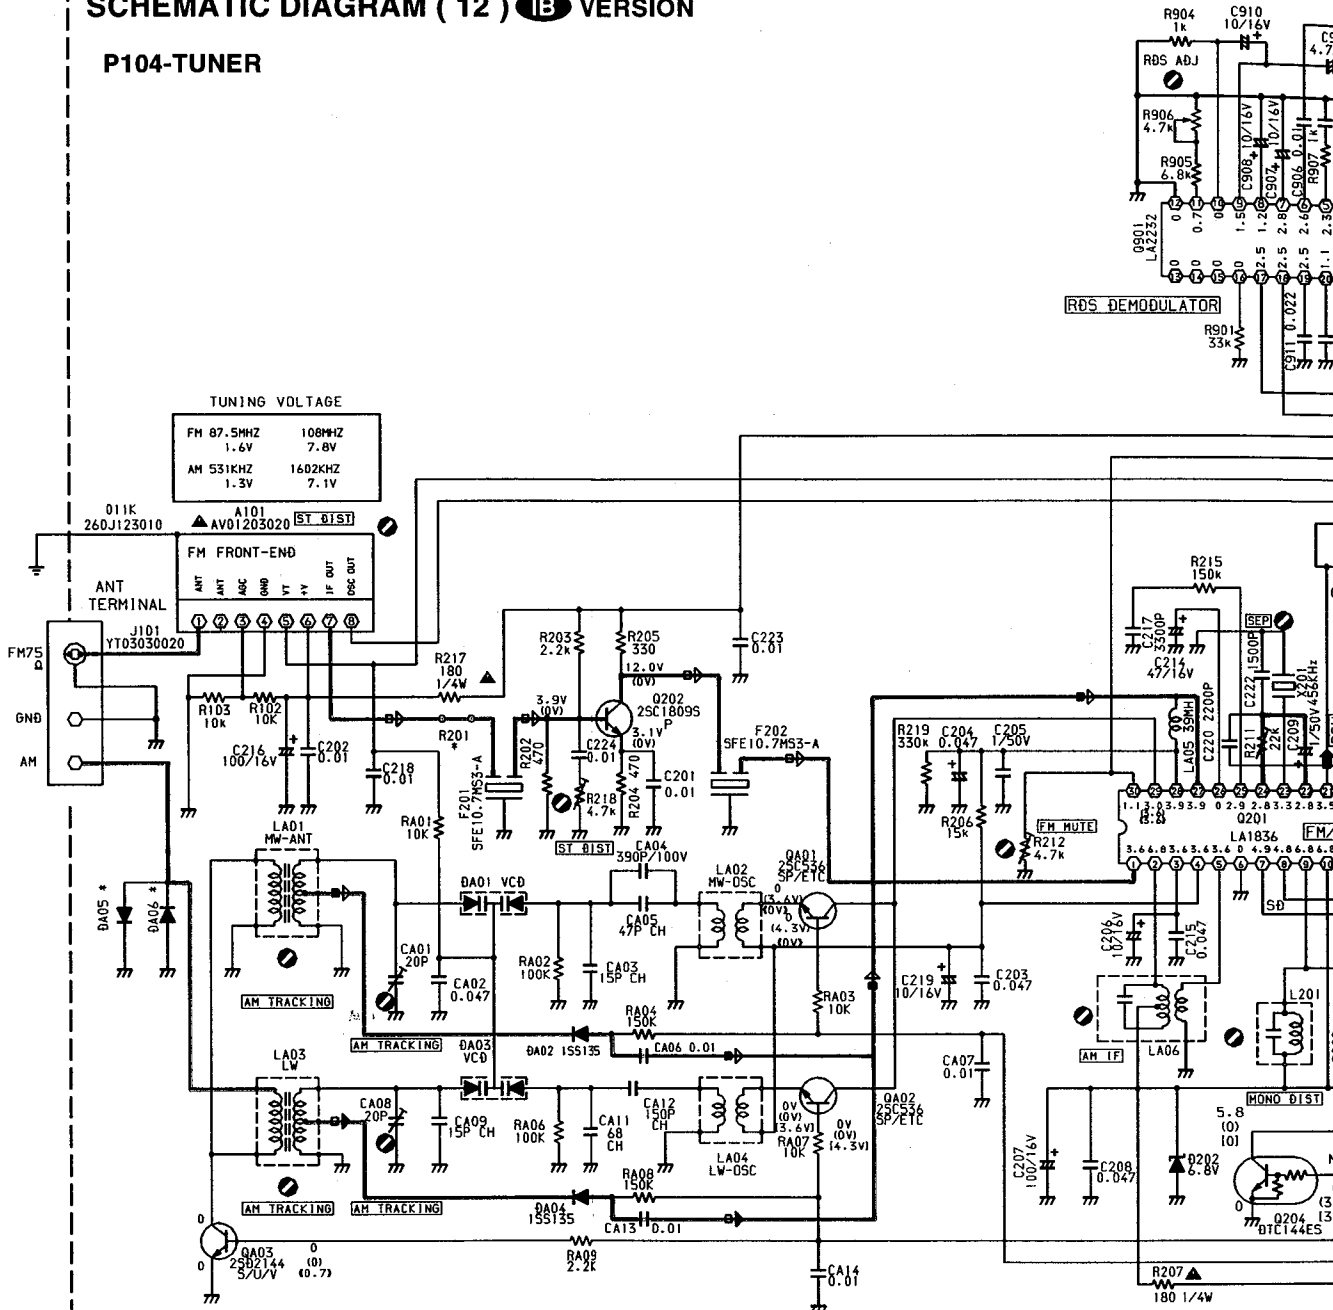



FREQ.
 FM 87.5MHZ
 (MW) 531KHZ
 «LW» 152KHZ

FM AM IF/MPX

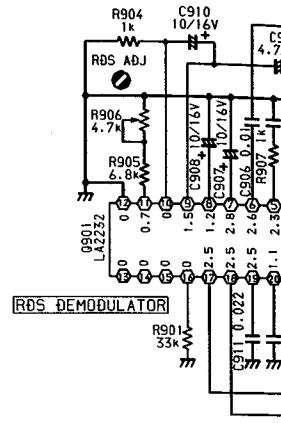

1
2
3
4
5
6
7


P104
 (RTU)
 (RSY)
 (RRD)

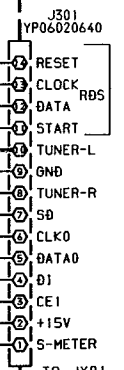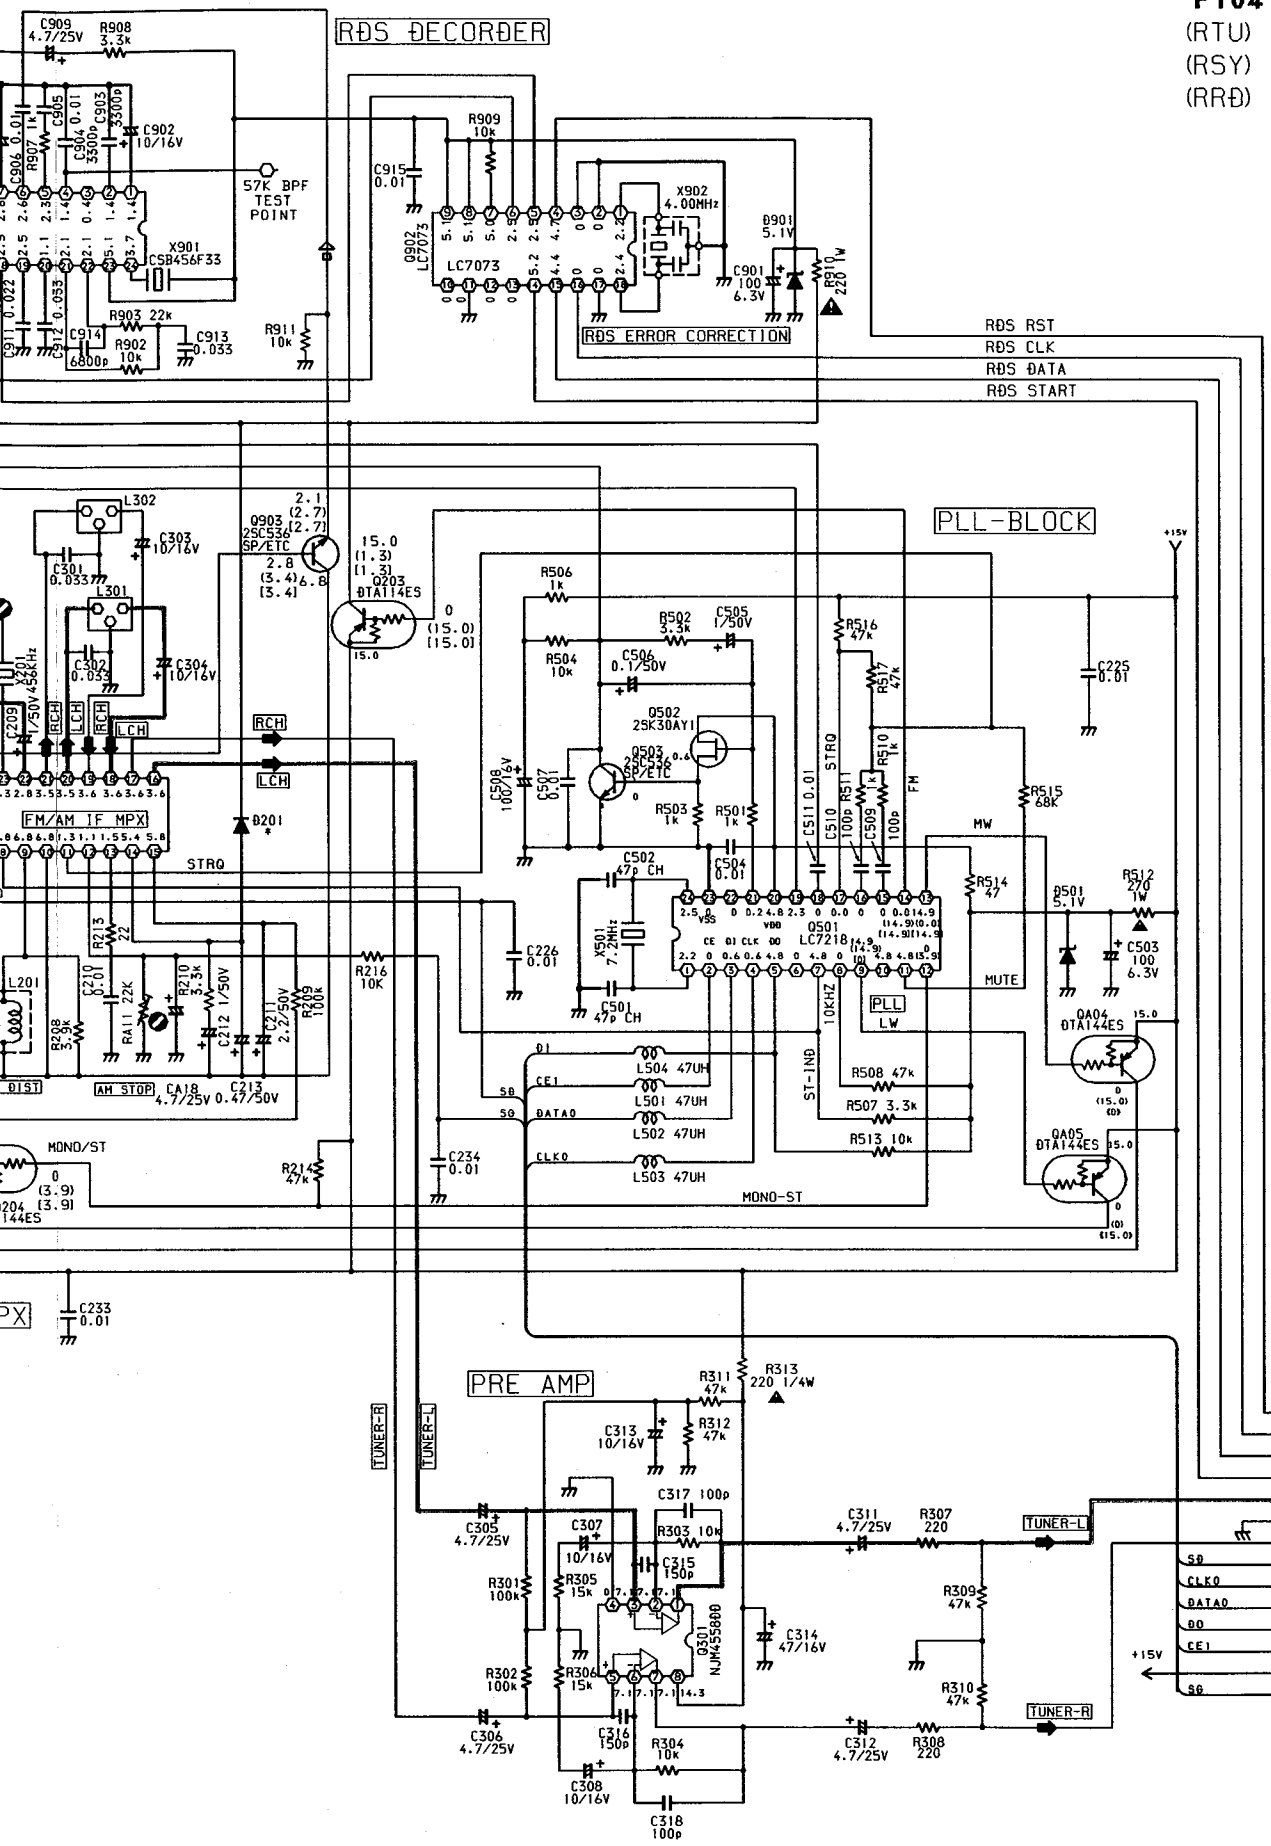


TO JY01 (PY04)
 TO CONNECT SCHEMATIC DIAGRAM (15)
 B
 5 Page 57

SCHEMATIC DIAGRAM (13) **B** VERSION

PU04-FRONT (AVR70) ONLY

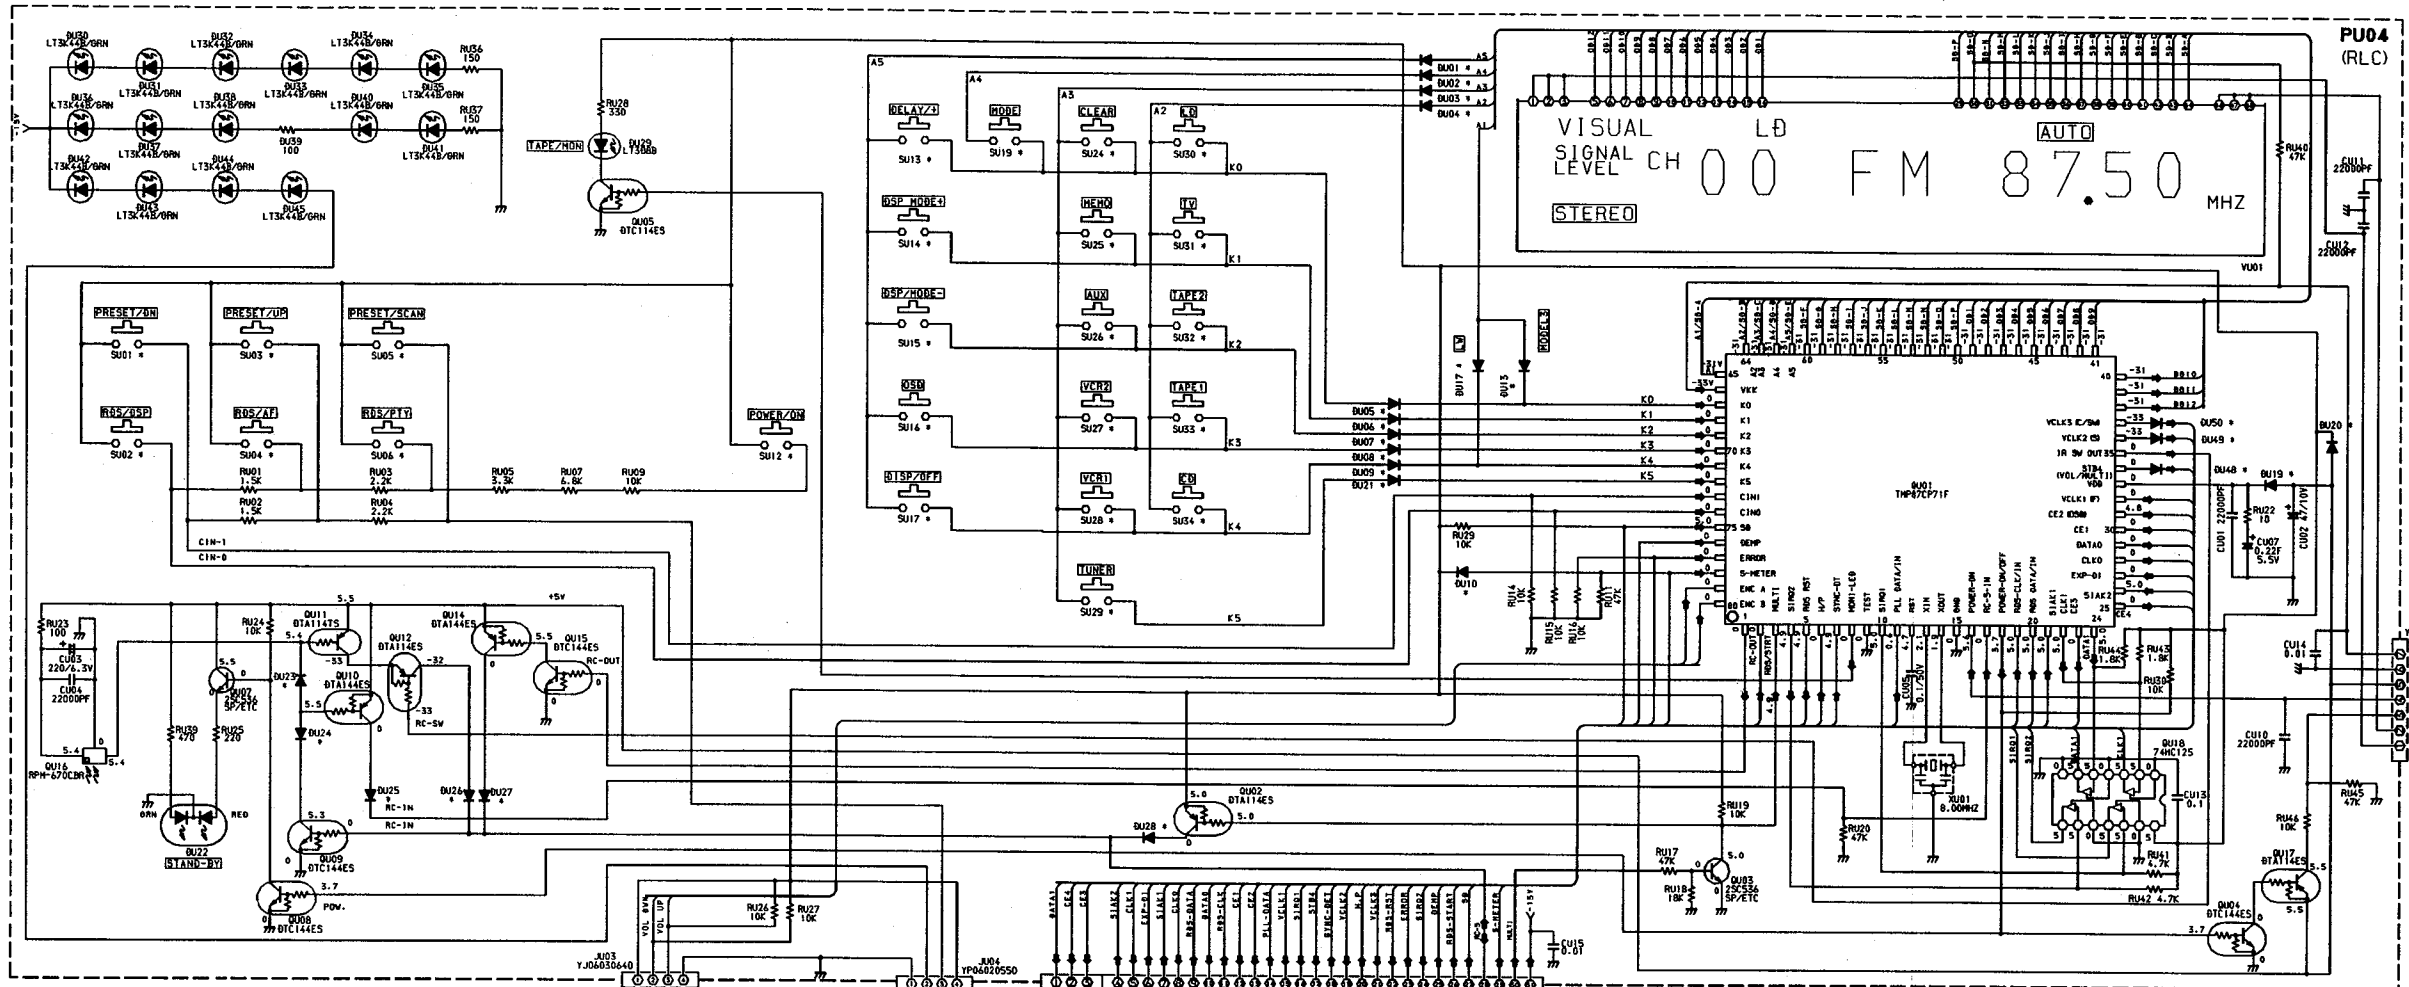


PU54-MASTER VOL

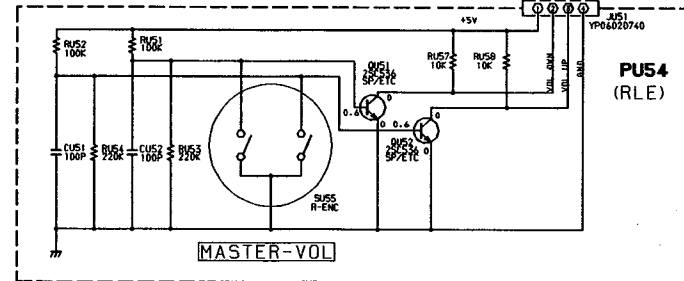

PU54 (RLE)

PL94-AUX IN

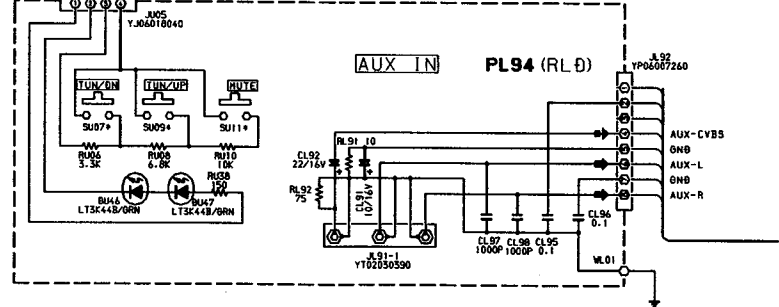

PL94 (RLD)

TO CONNECT SCHEMATIC DIAGRAM (15) Page 57

TO CONNECT SCHEMATIC DIAGRAM (15) Page 57

FROM BACK-UP SCHEMATIC DIAGRAM (16) or (17) Page 58 or 59

1

2

3

4


5

6


7

SCHEMATIC DIAGRAM (13) **IB** VERSION


PU04-FRONT (AVR70) ONLY

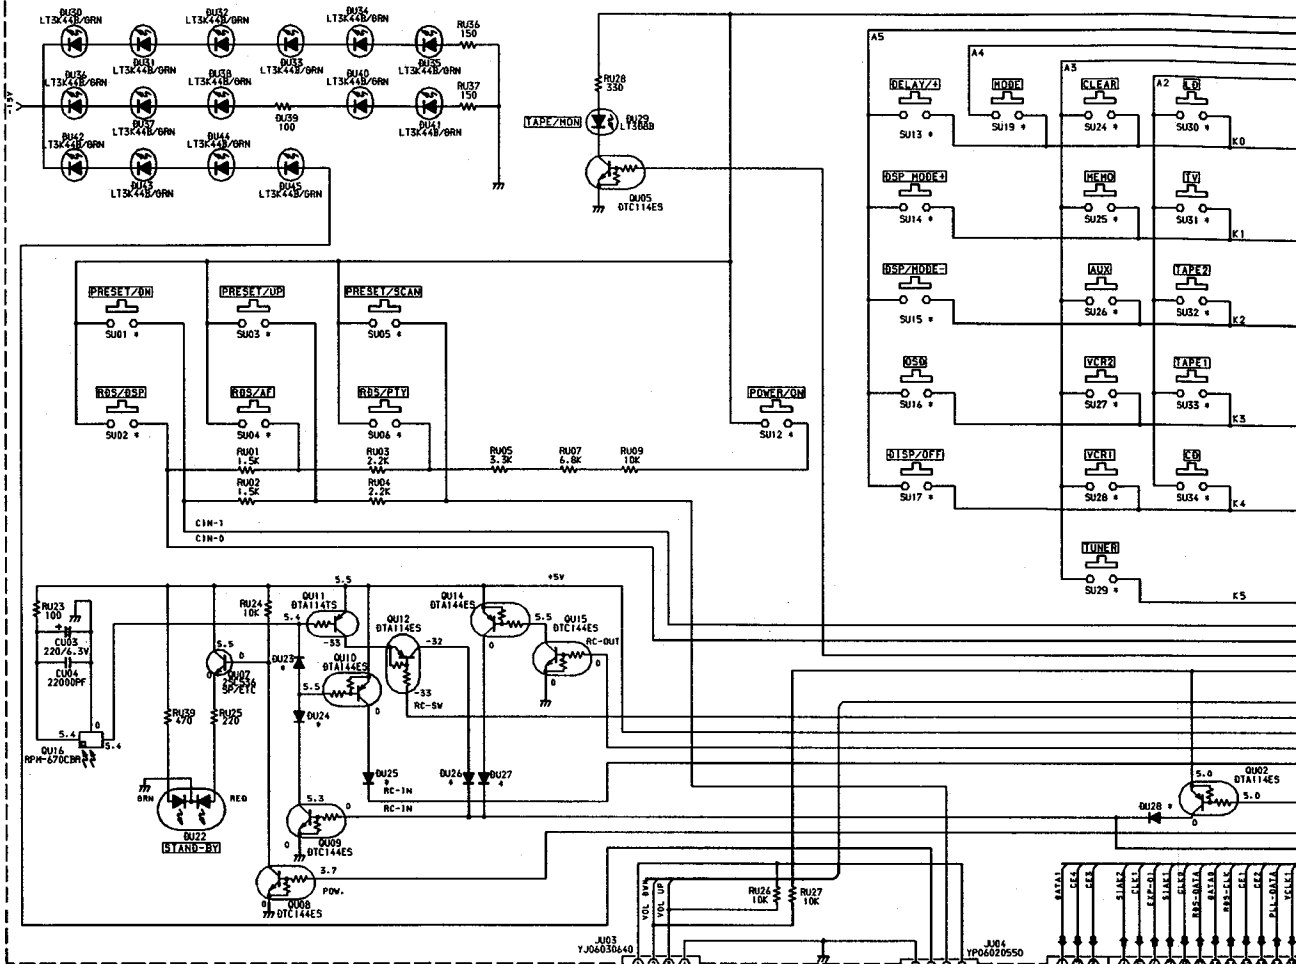

PU54-MASTER VOL

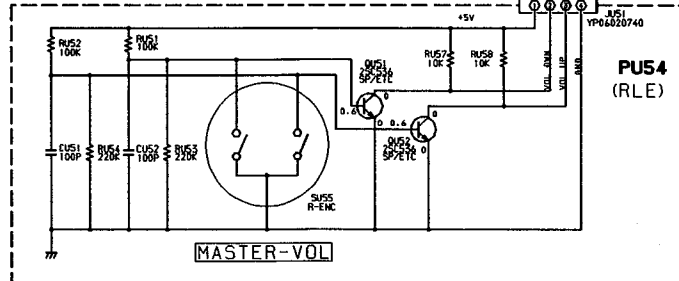

PU54 (RLE)

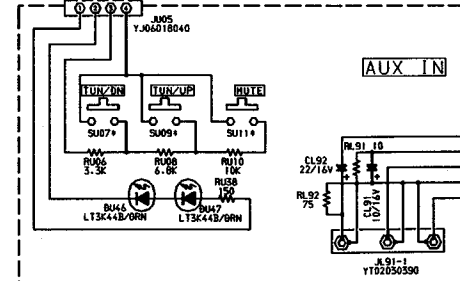

1
2
3
4
5
6
7


F

G

H


I

J

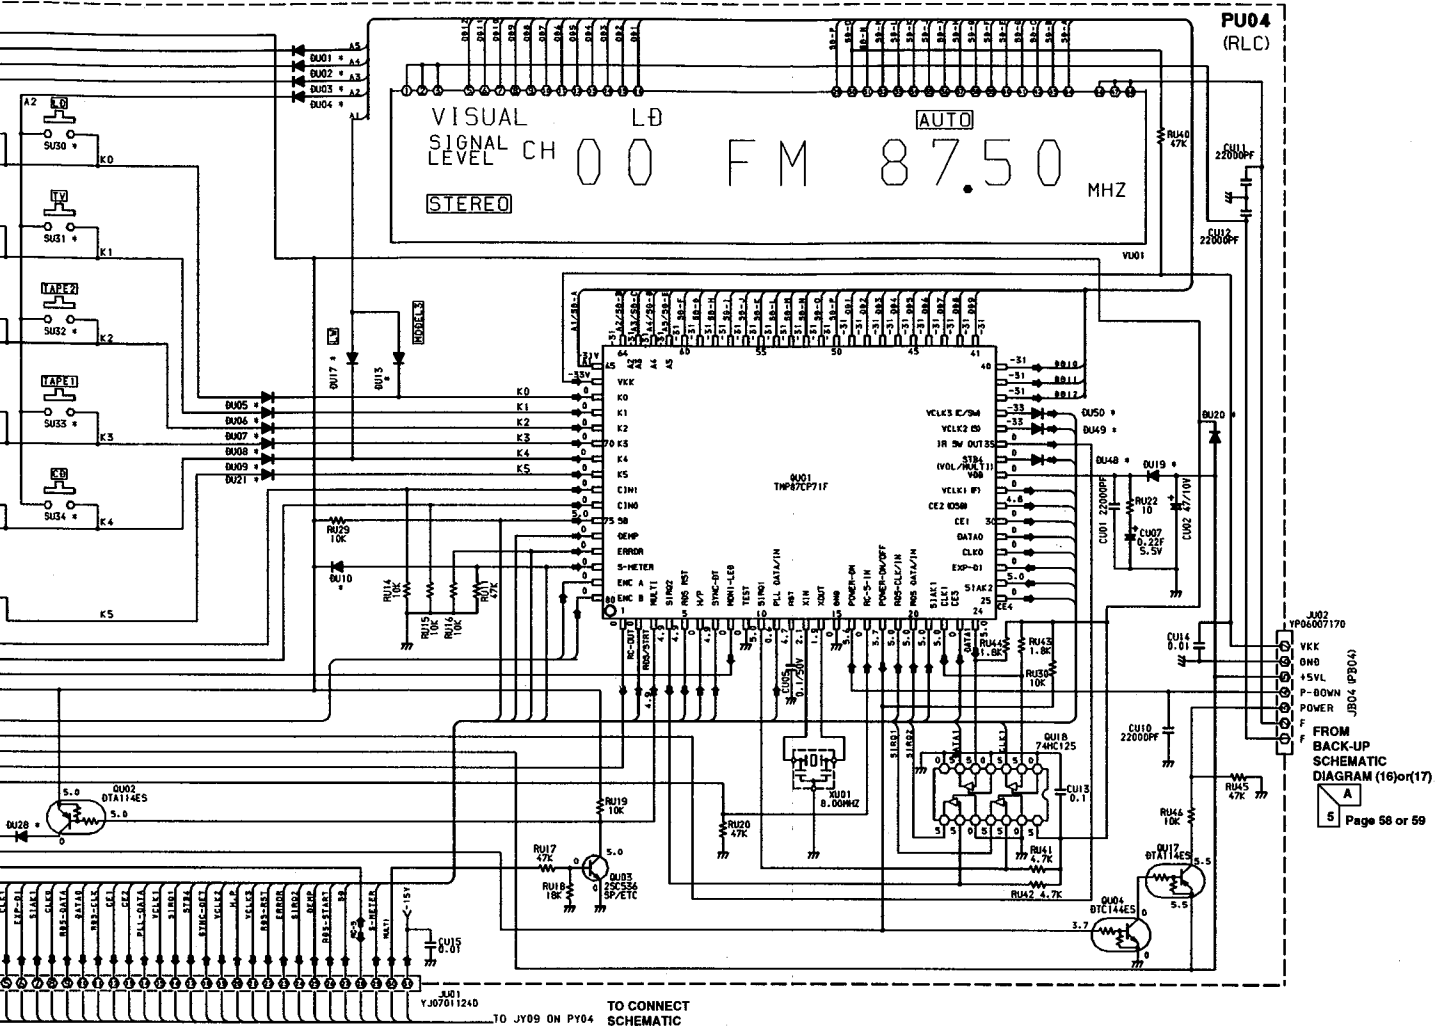




J12 YP65007170
YK0
GND
+SVL
P-DOWN
POWER
POWER
FROM BACK-UP SCHEMATIC DIAGRAM (16) or (17)
A
5 Page 58 or 59

PL94-AUX IN

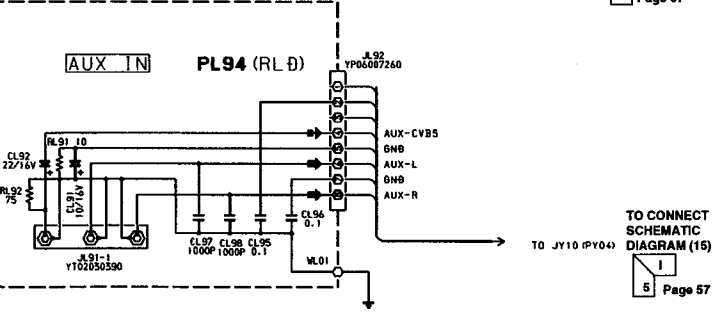

SCHEMATIC DIAGRAM (14) IB VERSION


PU04-FRONT (AVR70) [MOMS] ONLY

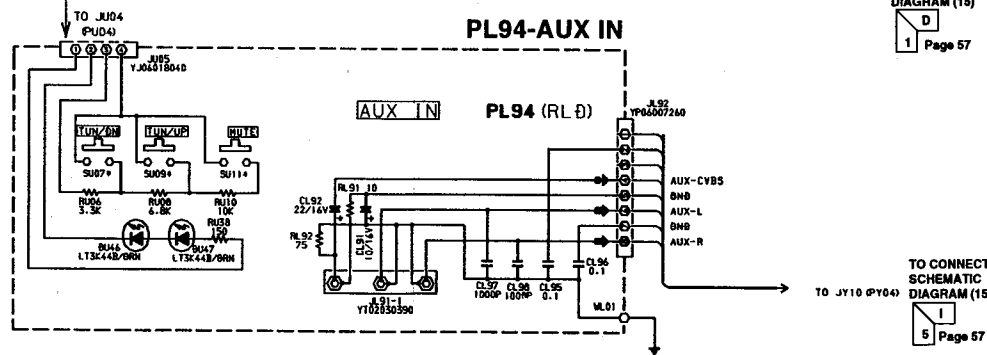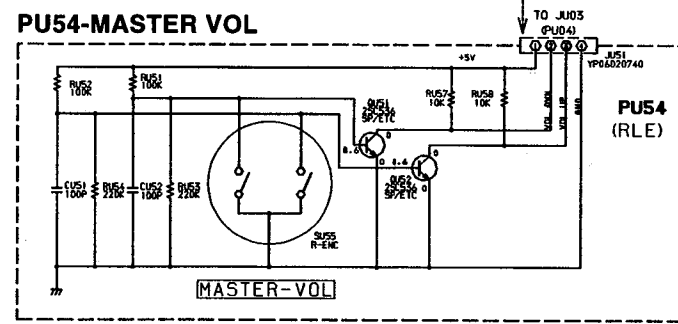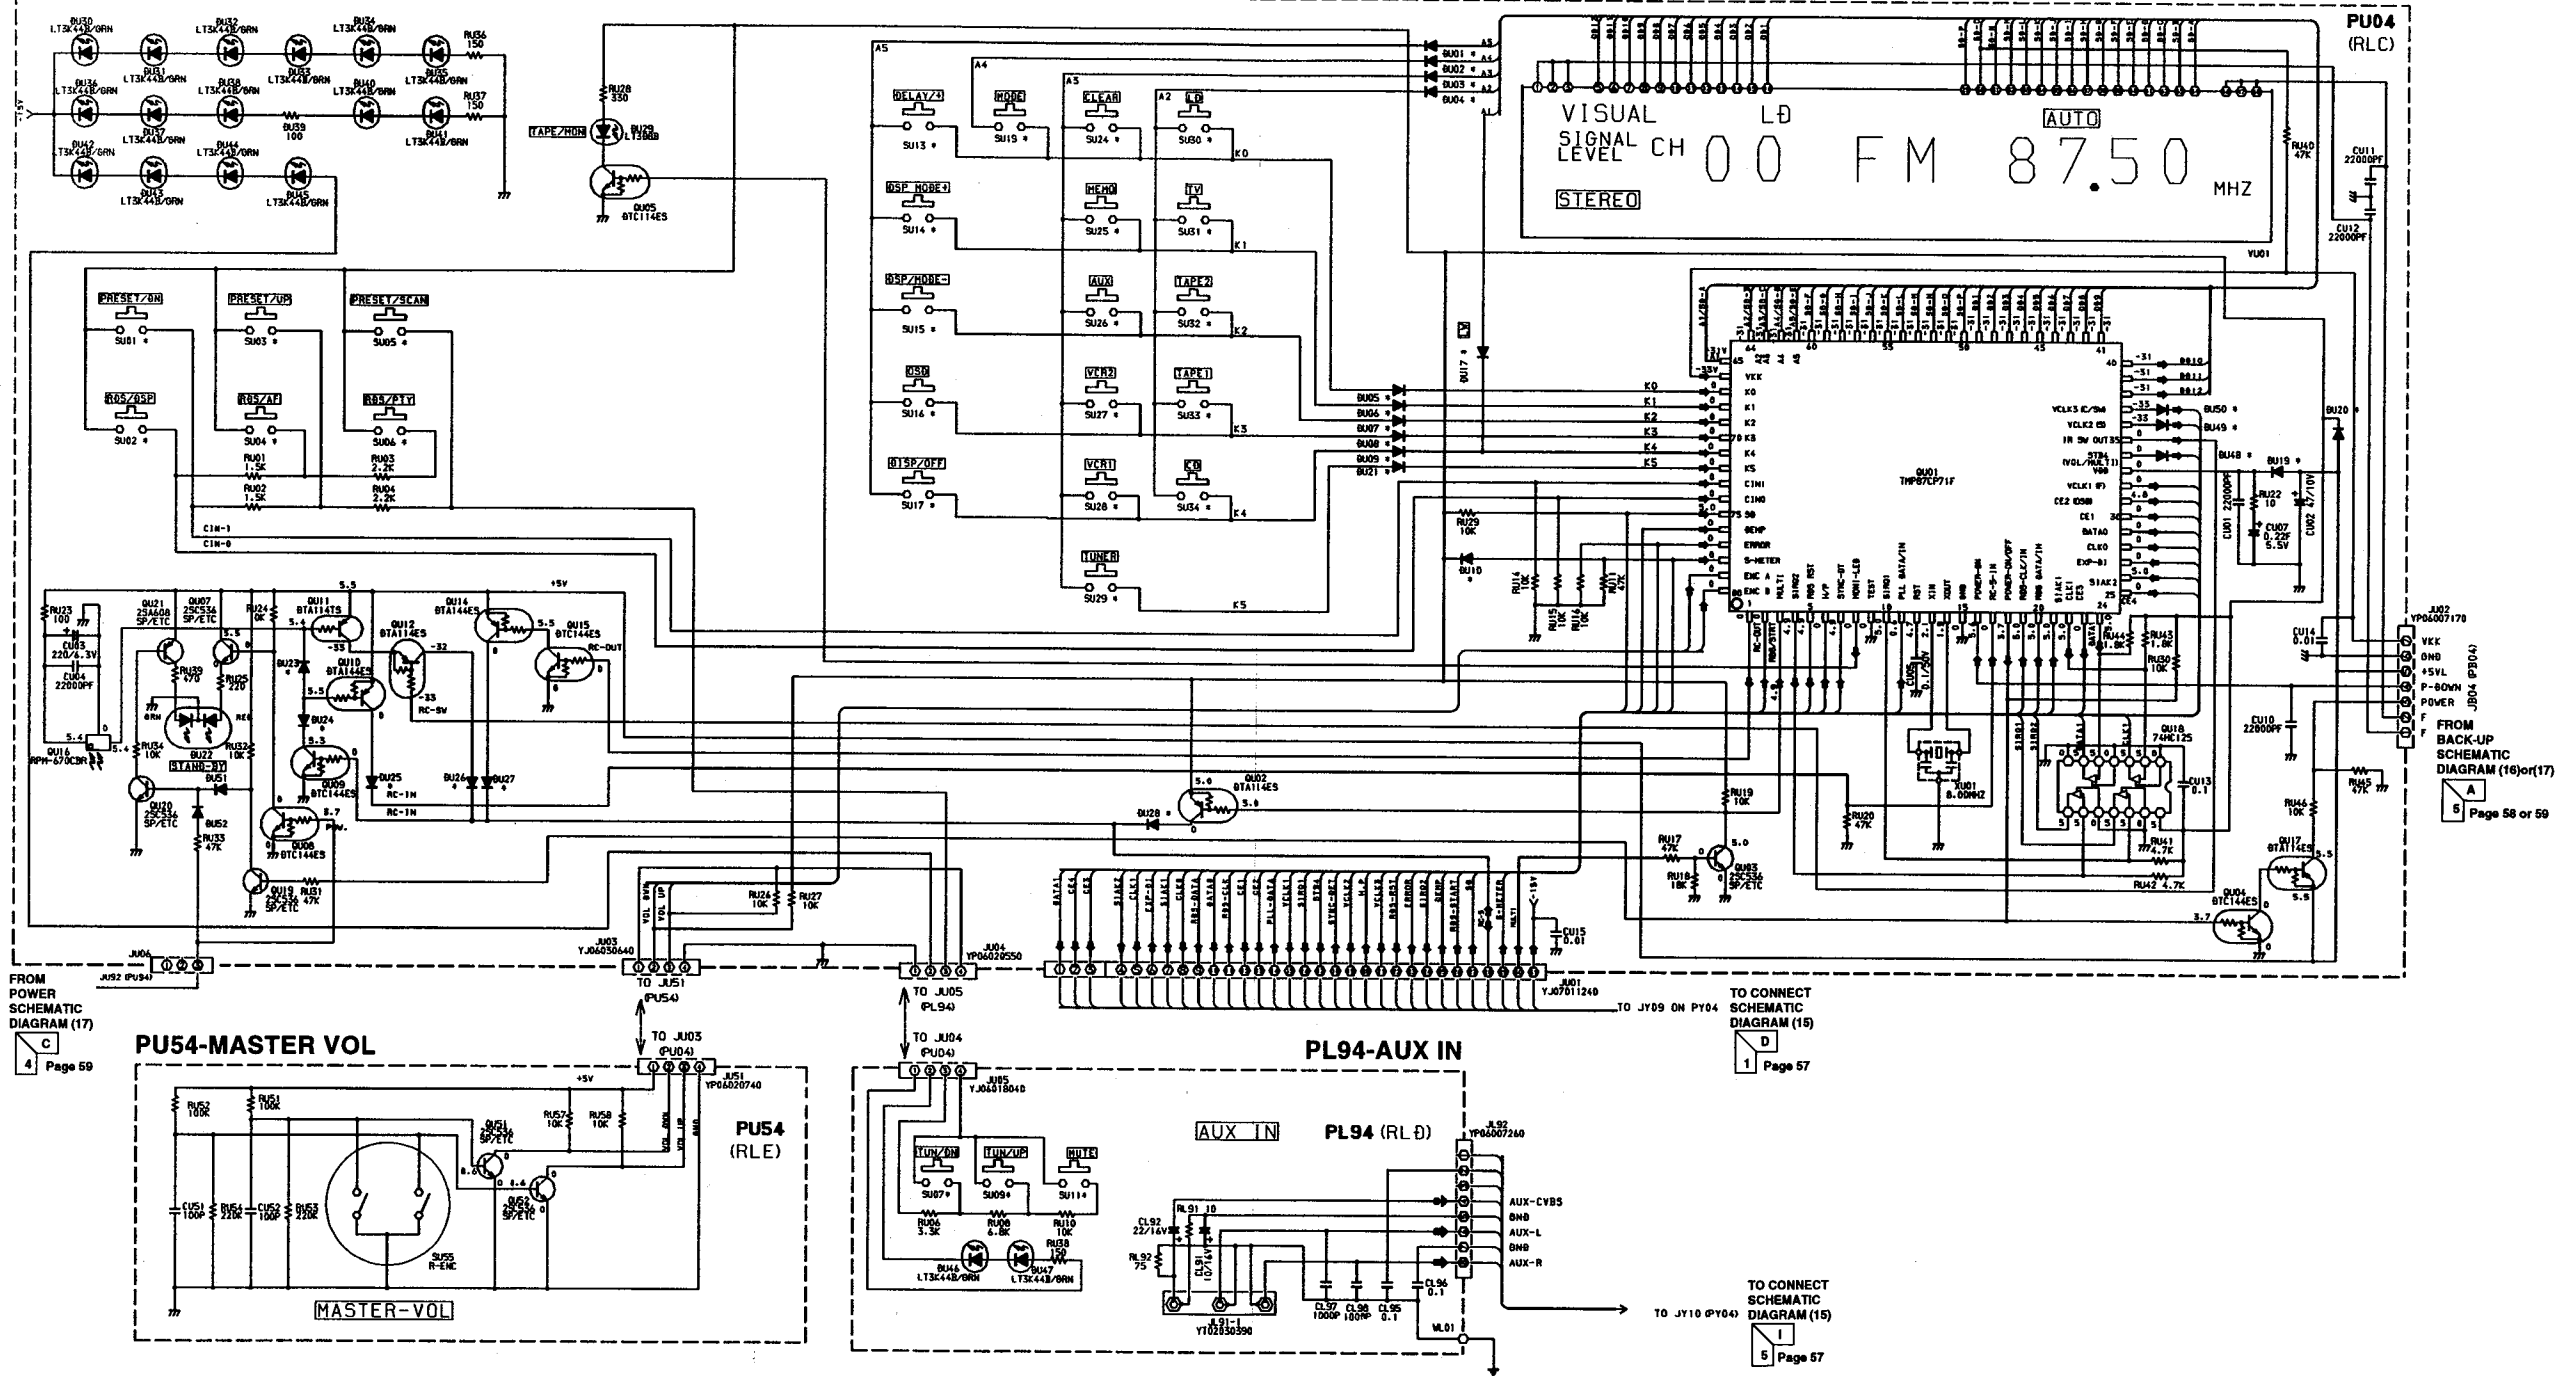

FROM BACK-UP SCHEMATIC DIAGRAM (16) or (17) Page 58 or 59

SCHMATIC DIAGRAM (14) (B) VERSION

PU04-FRONT (AVR70) [MOMS] ONLY

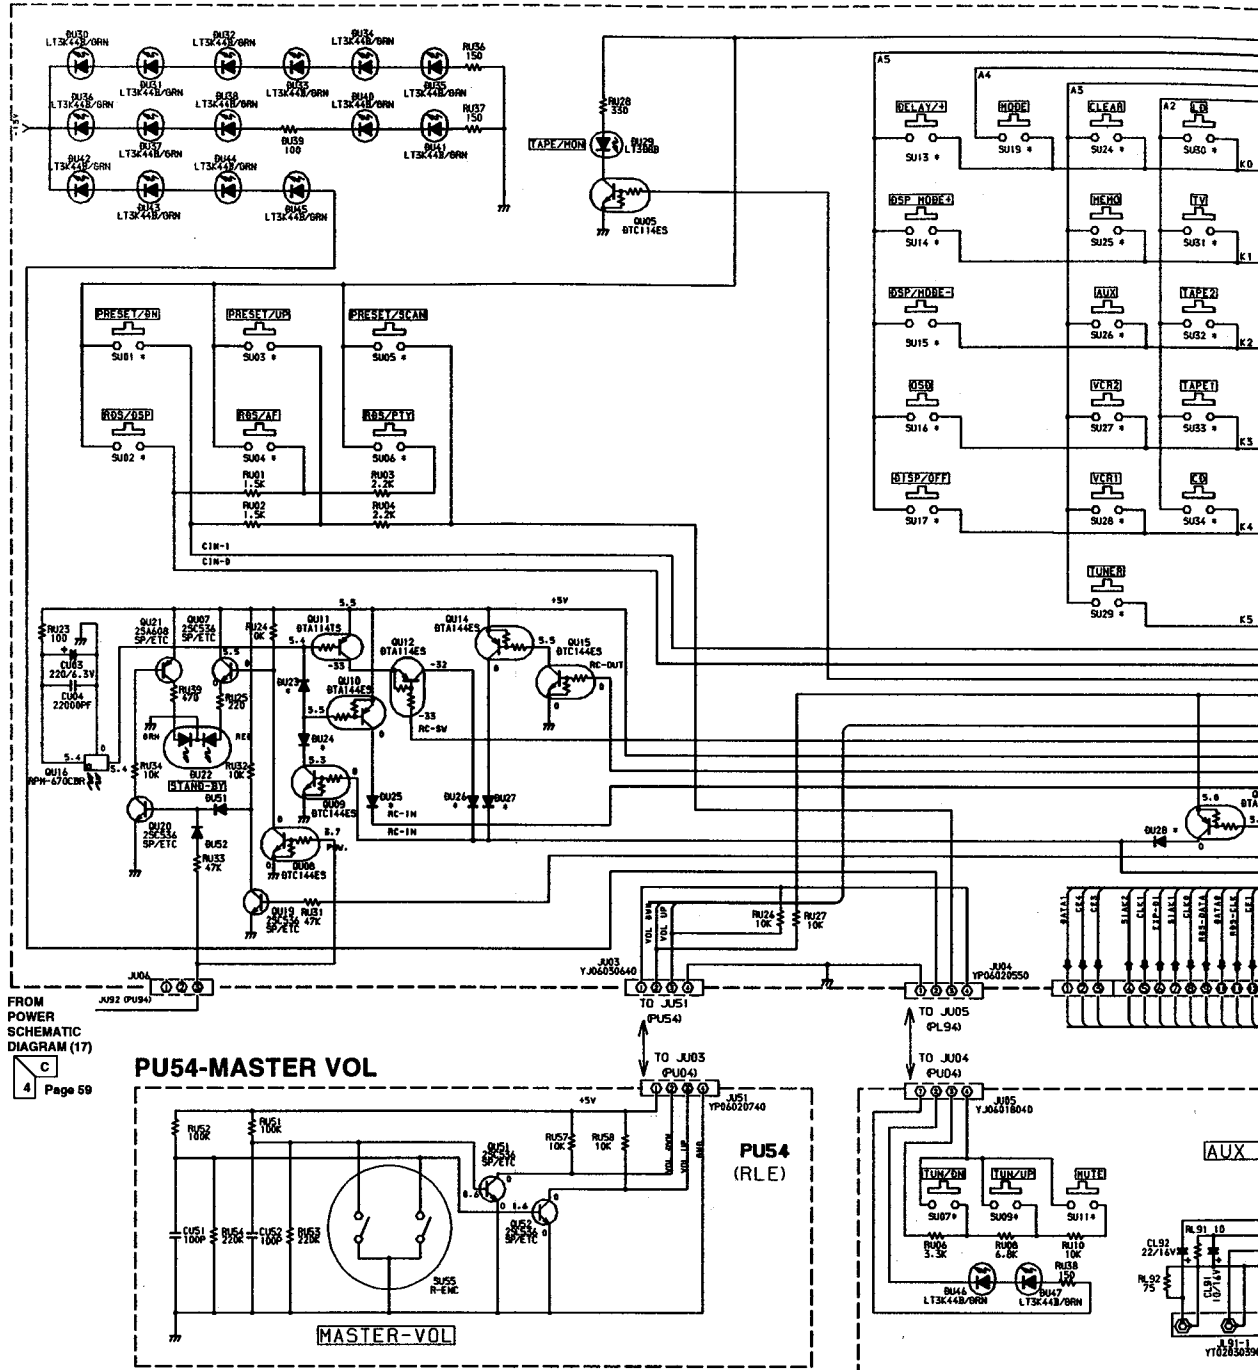


FROM POWER SCHEMATIC DIAGRAM (17)
C
4 Page 59


PU54-MASTER VOL

PU54 (RLE)

AUX

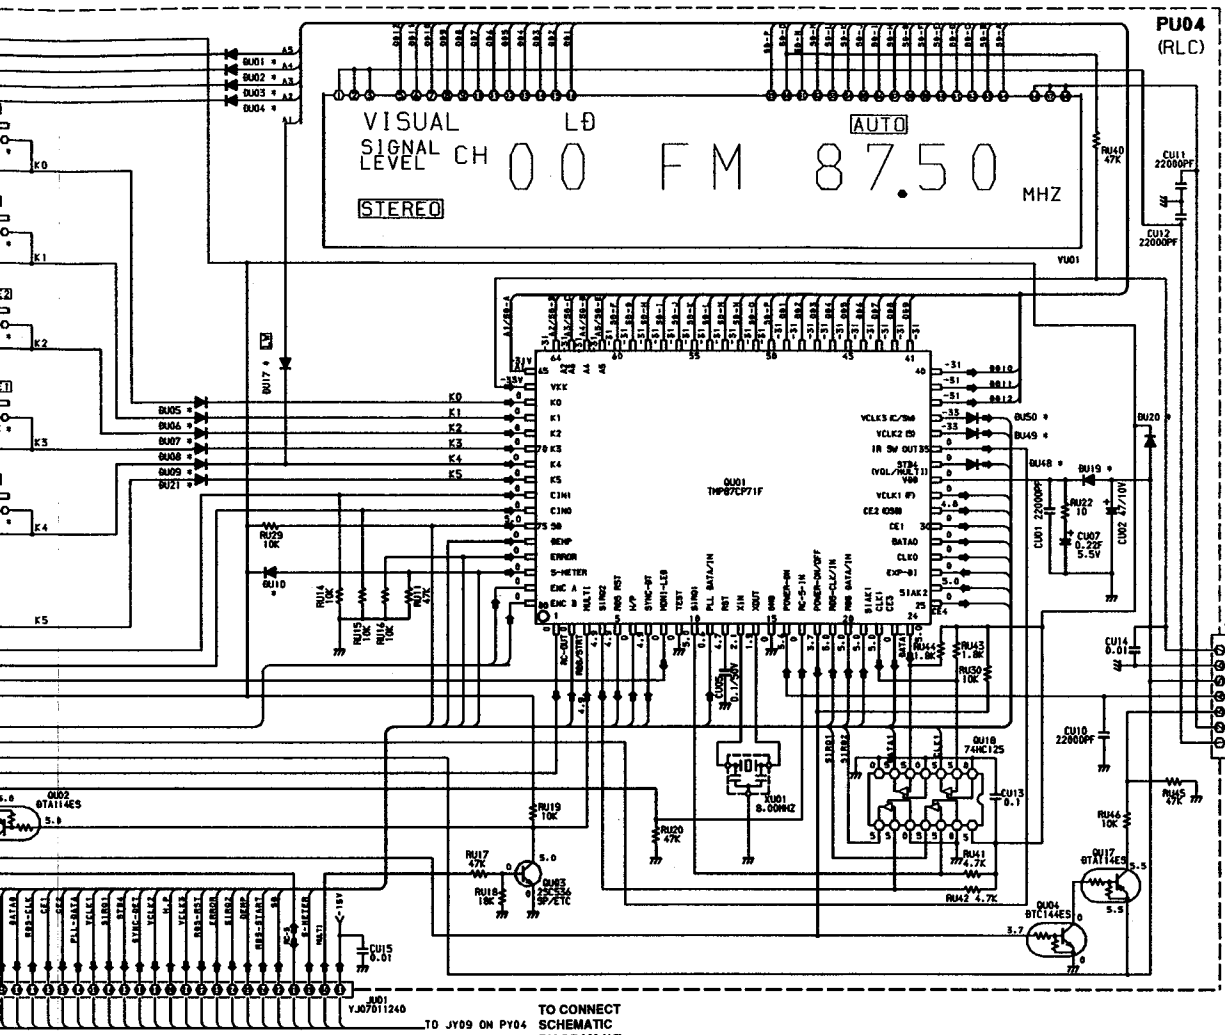

BU2 YP04007170
 VKK
 0NB
 +5VL
 P-8DWN
 POWER
 FROM
 BACK-UP
 SCHEMATIC
 DIAGRAM (16) or (17)
 A
 5 Page 58 or 59

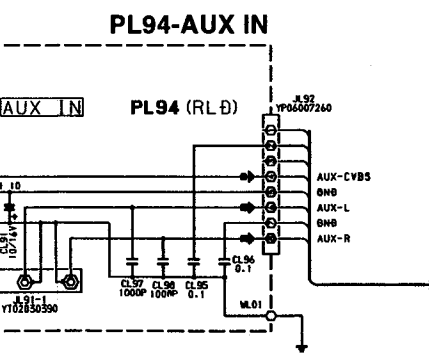

TO CONNECT
 SCHEMATIC
 DIAGRAM (15)
 D
 1 Page 57


TO CONNECT
 SCHEMATIC
 DIAGRAM (15)
 I
 5 Page 57

SCHEMATIC DIAGRAM (15) IB VERSION

FROM BACK-UP SCHEMATIC DIAGRAM (16) or (17)
B
Page 58 or 59

FROM FRONT SCHEMATIC DIAGRAM (13) or (14)
D
Page 55 or 56

PY04-CONNECT

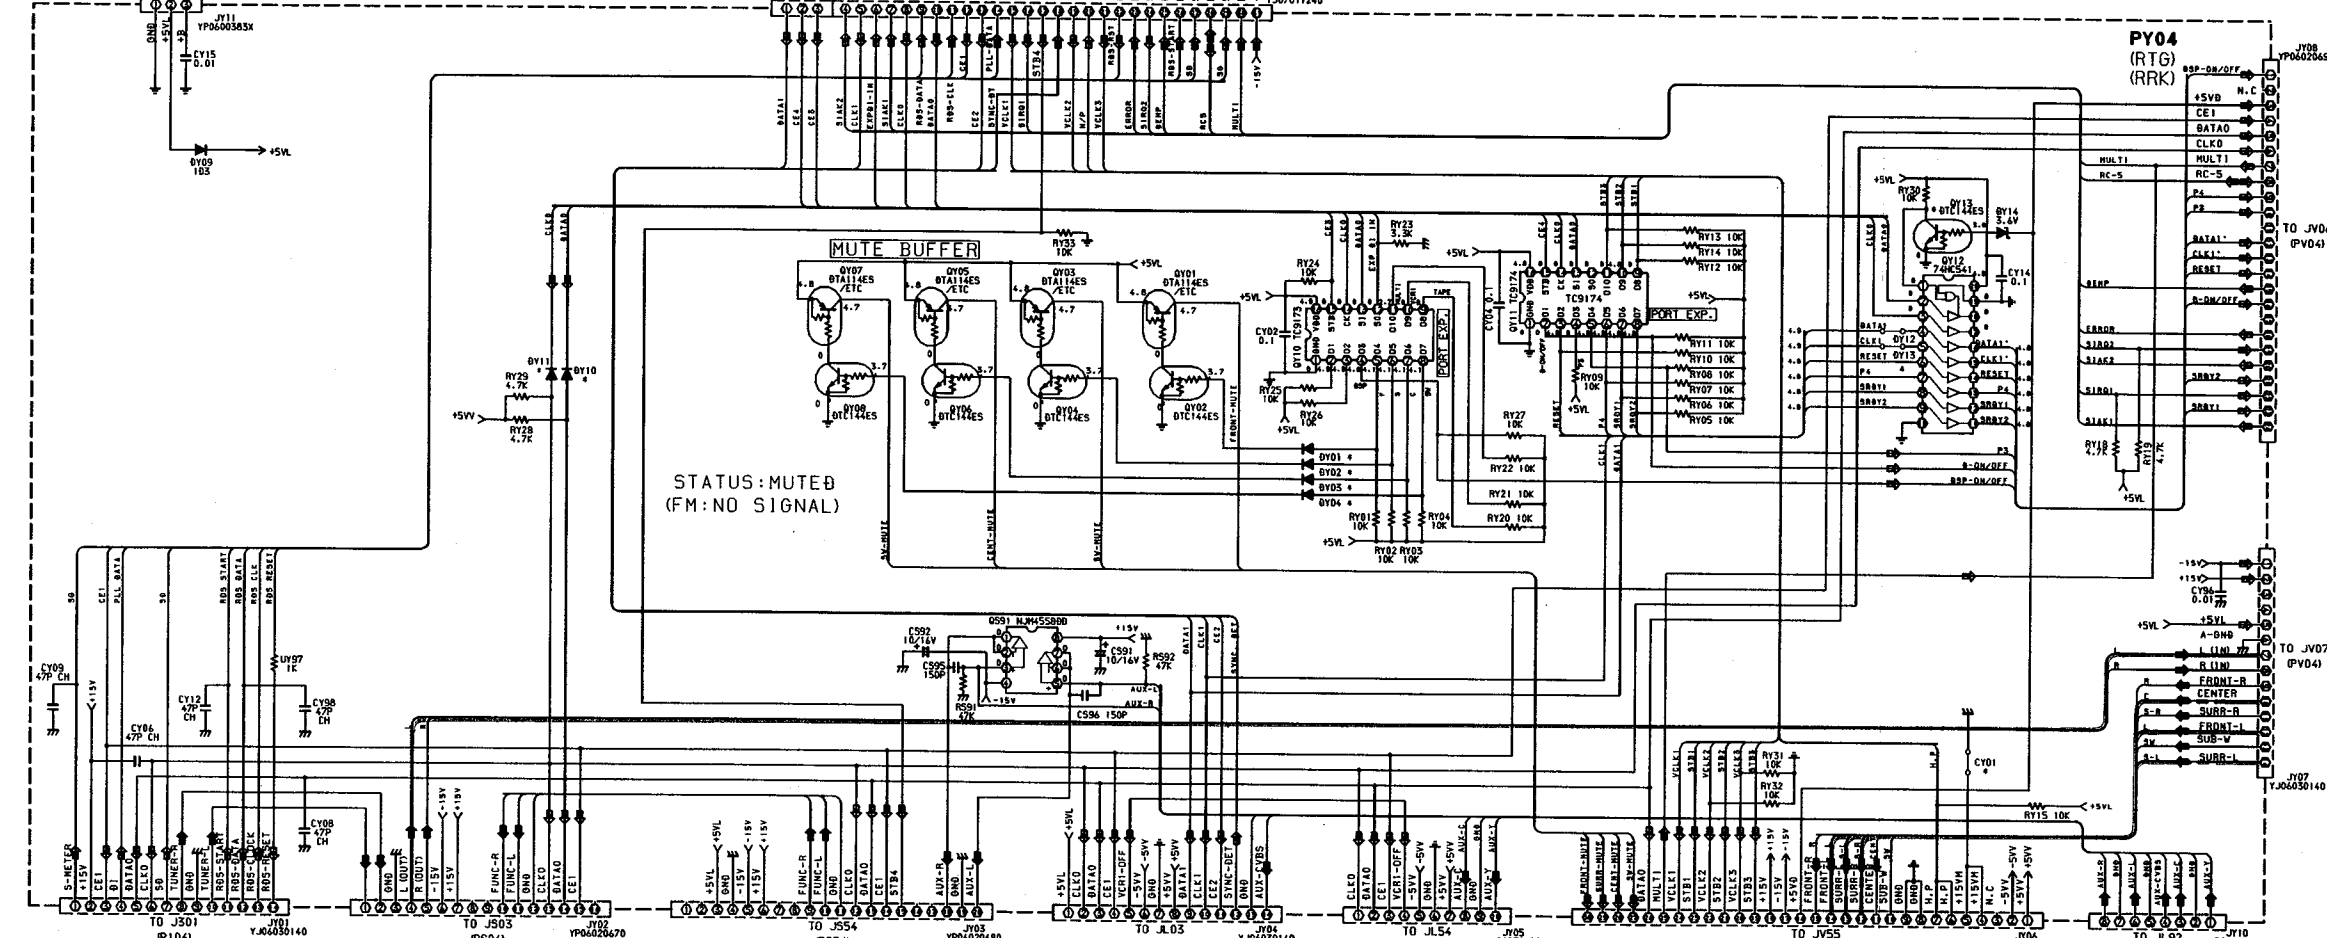

FROM TUNER SCHEMATIC DIAGRAM (12)
J
Page 54

FROM AUDIO FUNCTION SCHEMATIC DIAGRAM (10)
E
Page 52

TO V-AUDIO FUNCTION SCHEMATIC DIAGRAM (10)
E
Page 52

TO VIDEO SELECTOR SCHEMATIC DIAGRAM (10)
I
Page 52

TO S-VIDEO SCHEMATIC DIAGRAM (10)
I
Page 52

TO ELE. VOL SCHEMATIC DIAGRAM (11)
B
Page 53

FROM AUX IN SCHEMATIC DIAGRAM (13) or (14)
G
Page 55 or 56

TO REMOTE OUT SCHEMATIC DIAGRAM (11)
C
Page 53

FROM REMOTE OUT SCHEMATIC DIAGRAM (11)
E
Page 53

SCHEMATIC DIAGRAM (15) **IB** VERSION

1
2
3
4
5
6
7


FROM BACK-UP
SCHEMATIC
DIAGRAM (16)or(17)

B
Page 58 or 59

FROM FRONT
SCHEMATIC
DIAGRAM (13)or(14)

G
Page 55 or 56

PY04-CONNECT

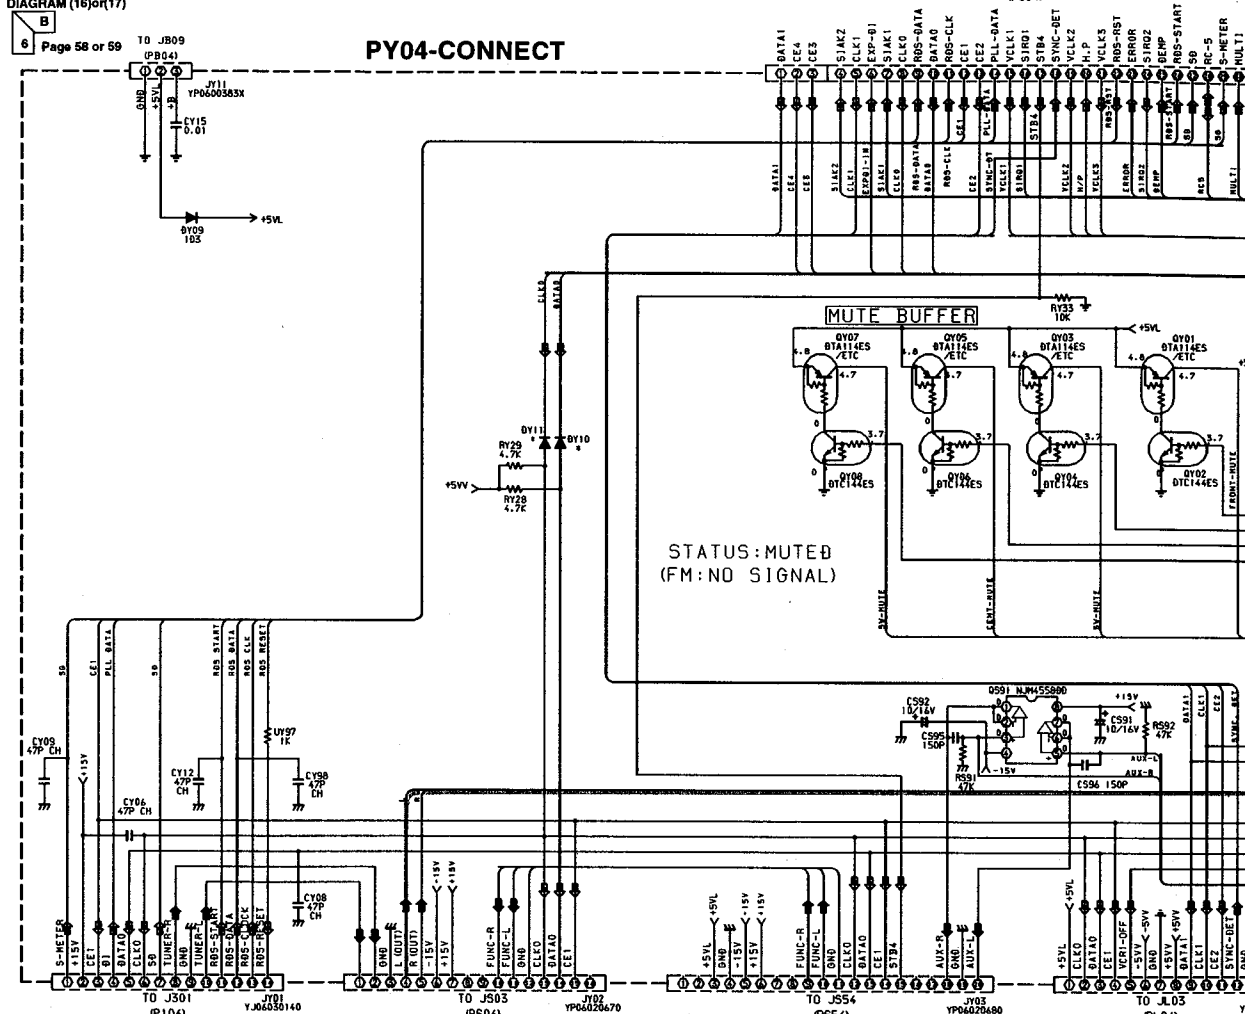


FROM TUNER
SCHEMATIC
DIAGRAM (12)
J
Page 54

FROM AUDIO
FUNCTION
SCHEMATIC
DIAGRAM (10)
E
Page 52

TO V-AUDIO
FUNCTION
SCHEMATIC
DIAGRAM (10)
E
Page 52

TO VIDEO
SELECTOR
SCHEMATIC
DIAGRAM (10)
I
Page 52

F G H I J

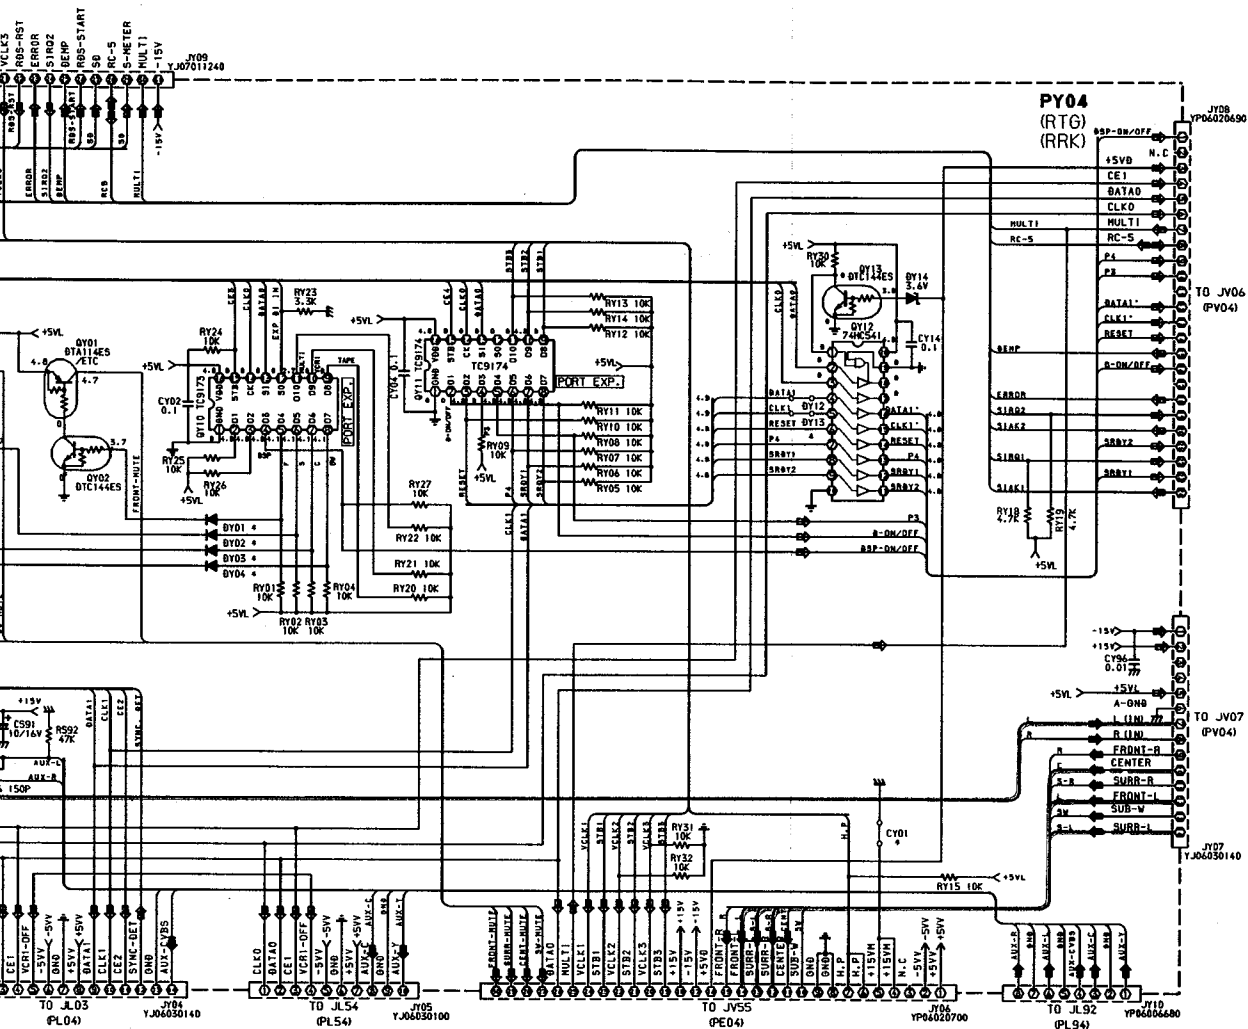

TO VIDEO
SELECTOR
SCHEMATIC
DIAGRAM (10)

2 Page 52

TO S-VIDEO
SCHEMATIC
DIAGRAM (10)

5 Page 52

TO ELE. VOL
SCHEMATIC
DIAGRAM (11)

6 Page 53

FROM AUX IN
SCHEMATIC
DIAGRAM (13)or(14)

6 Page 55 or 56

TO REMOTE OUT
SCHEMATIC
DIAGRAM (11)

1 Page 53


FROM REMOTE OUT
SCHEMATIC
DIAGRAM (11)

4 Page 53



SCHEMATIC DIAGRAM (16) (B) VERSION

P704-MAIN AMP (AVR70) ONLY

PP04-SURROUND AMP

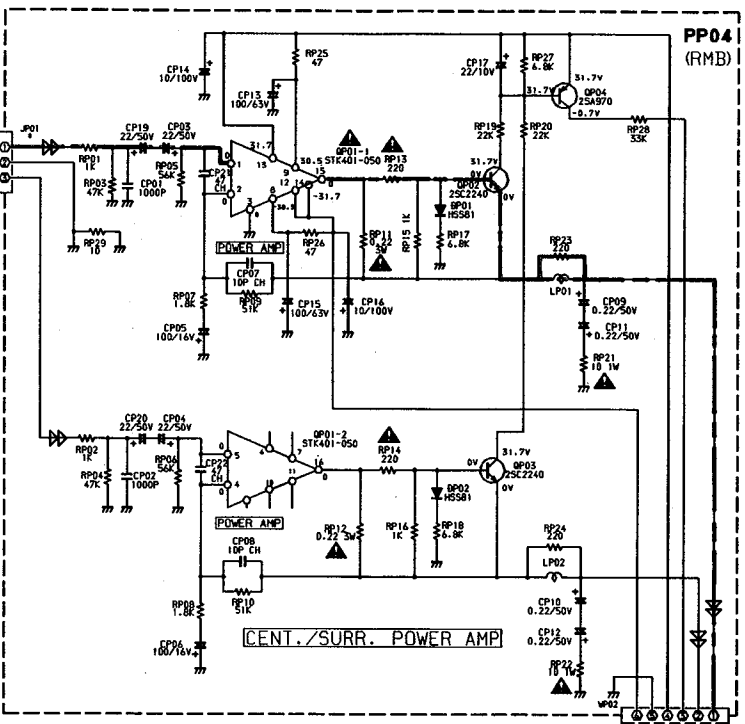


PB04-BACK-UP (AVR70) ONLY

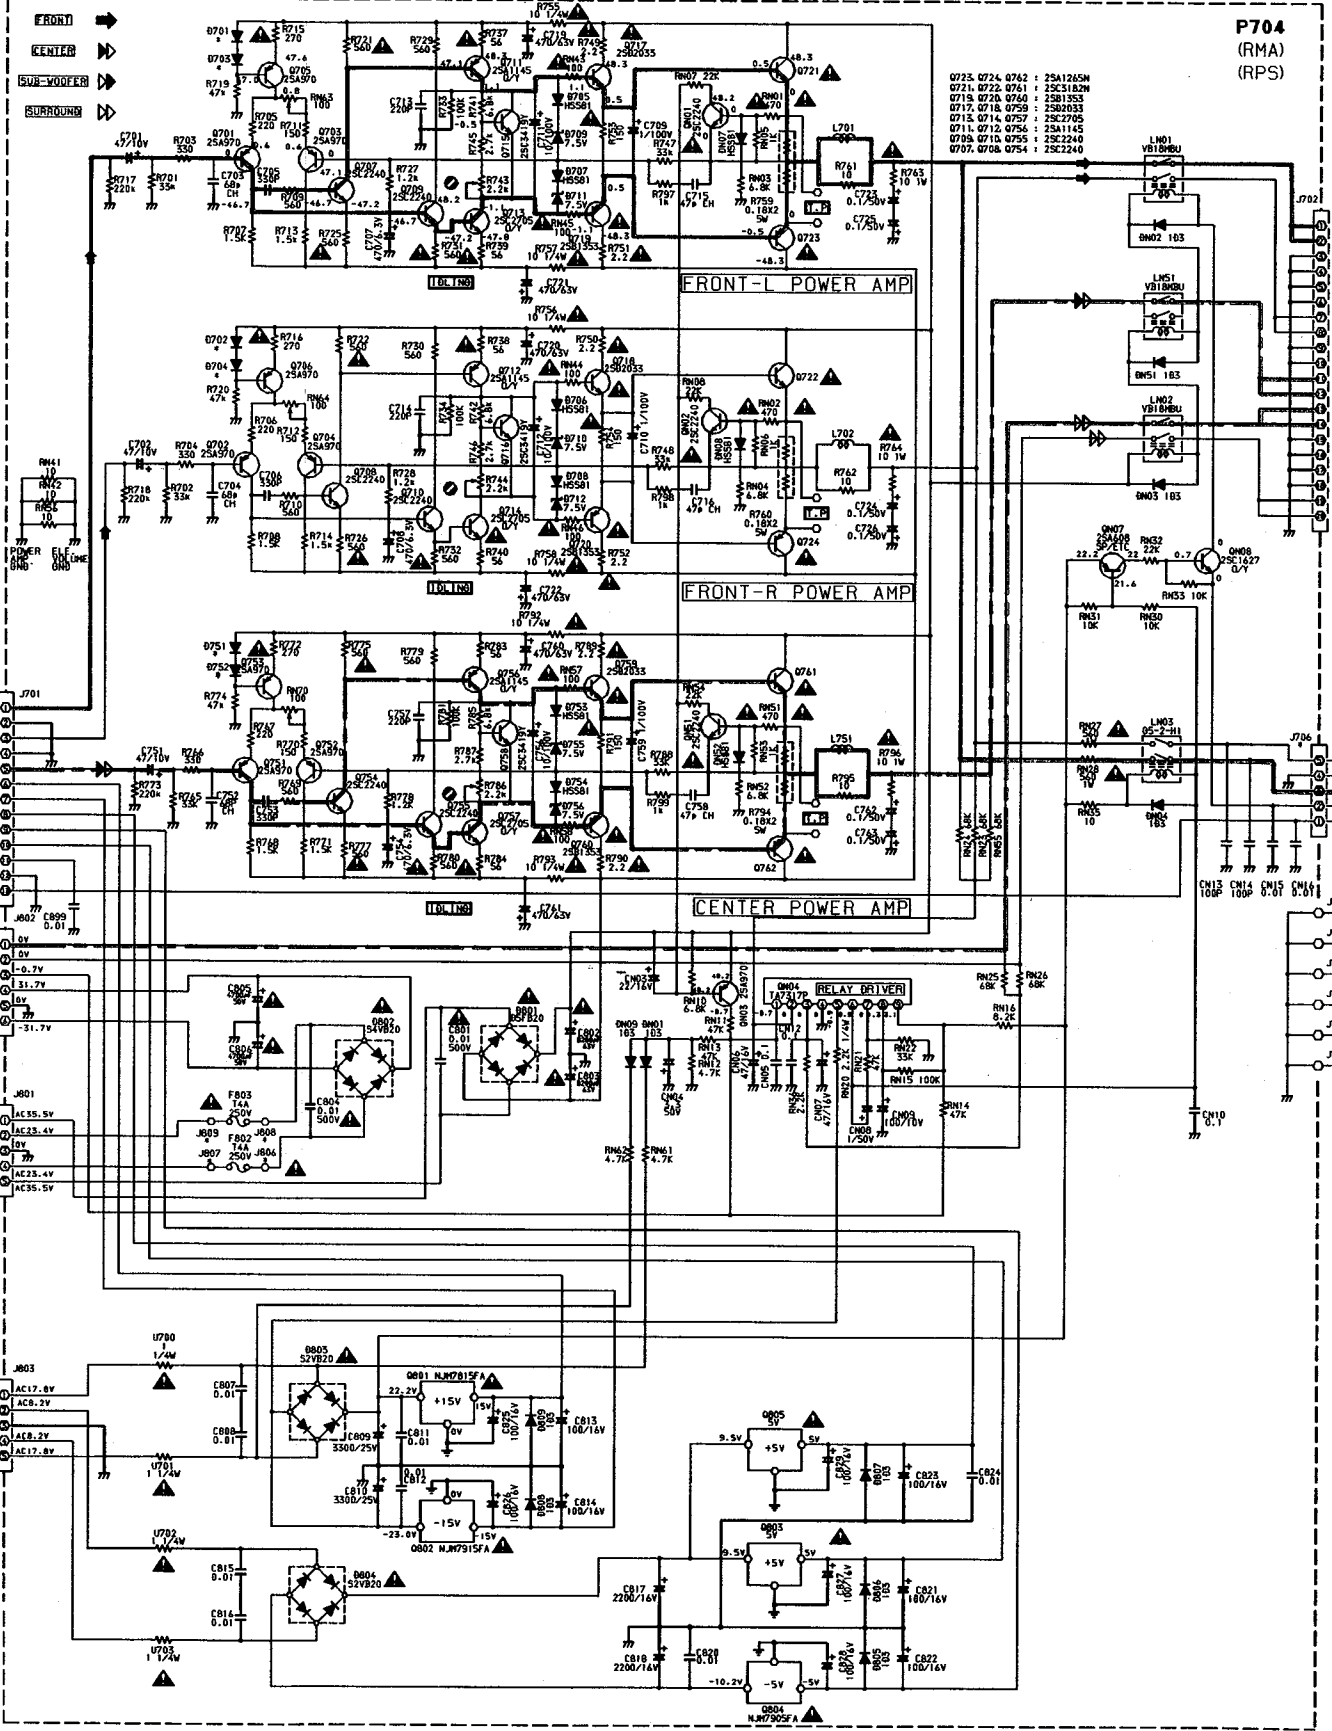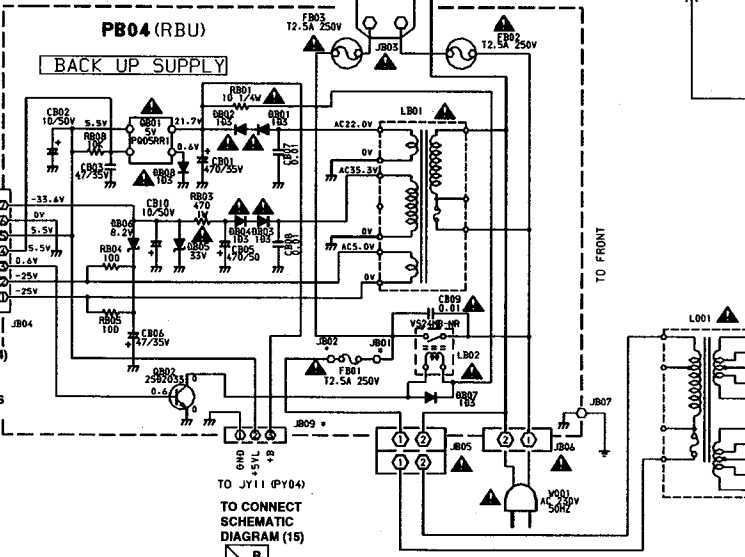


SCHEMATIC DIAGRAM (16) (B) VERSION


PP04-SURROUND AMP

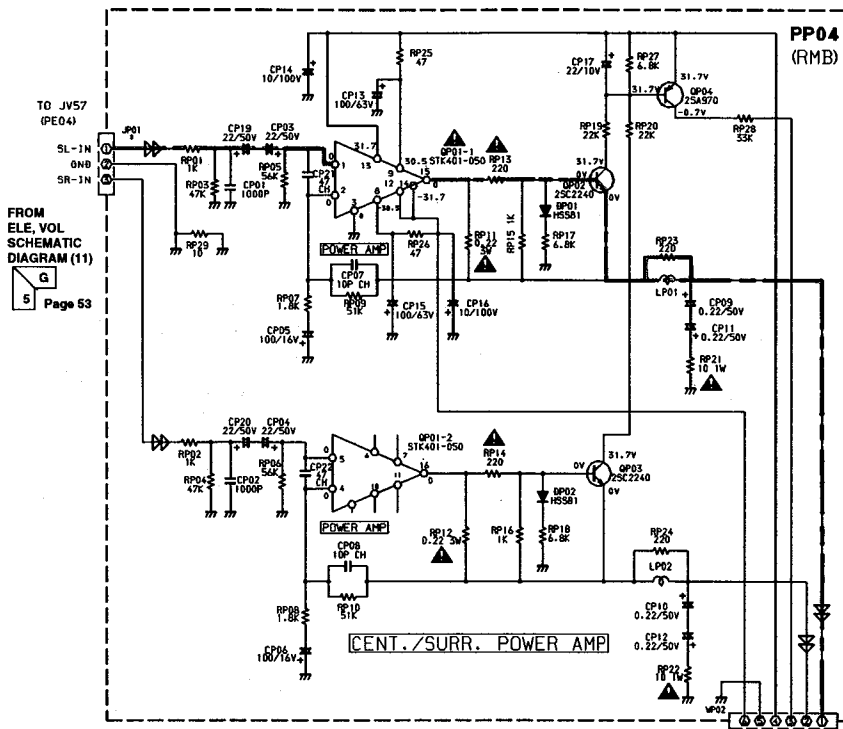

PB04-BACK-UP (AVR70) ONLY

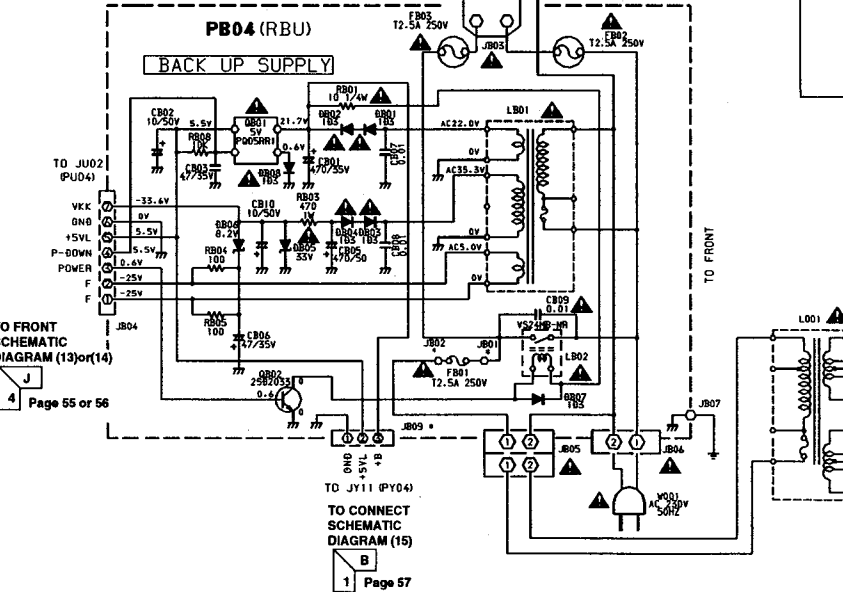

P704-MAIN AMP (AVR70)

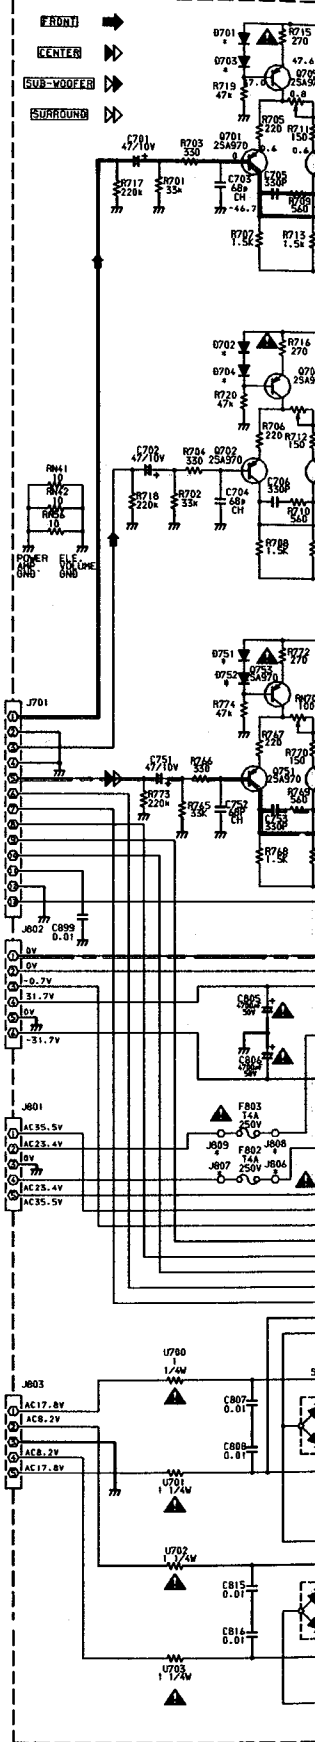

F


G

H

I

J




VR70) ONLY

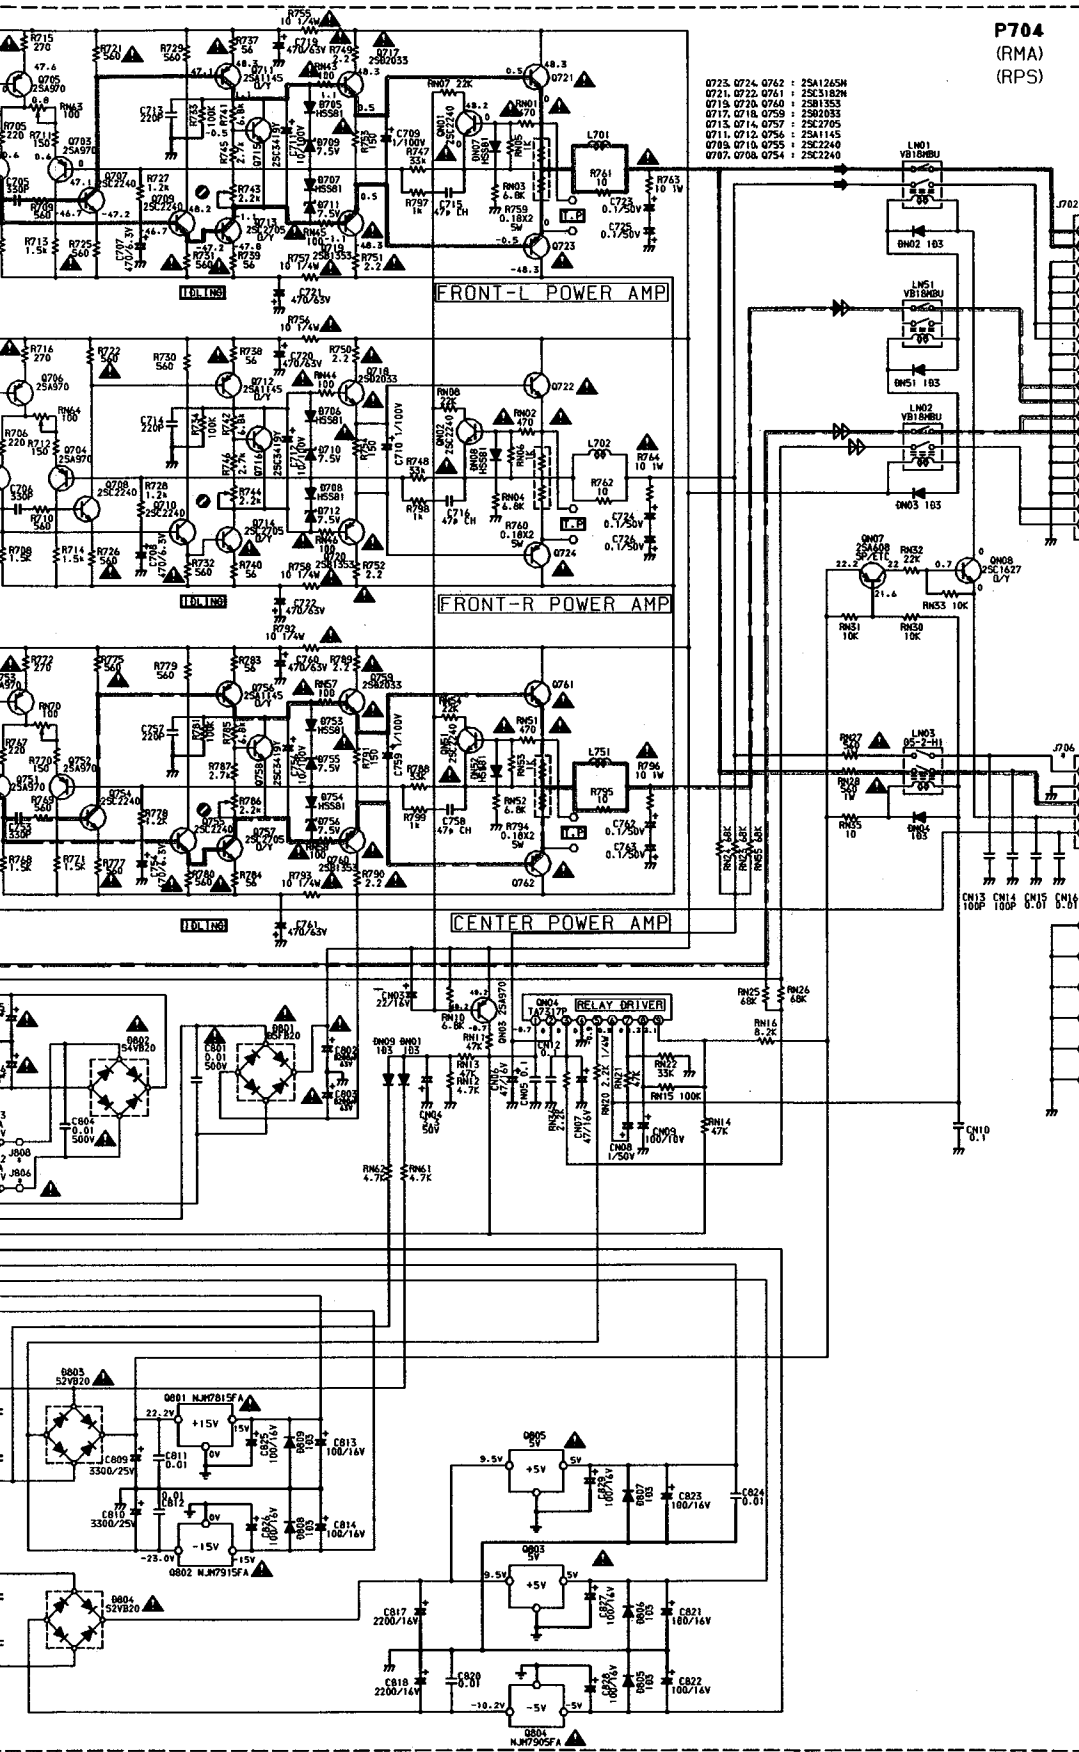

P704 (RMA) (RPS)


- 0723, 0724, 0762 : 25A1265H
- 0721, 0722, 0761 : 25C3182H
- 0719, 0720, 0760 : 25B1353
- 0717, 0718, 0759 : 25B0233
- 0713, 0714, 0757 : 25C2705
- 0711, 0712, 0756 : 25A1145
- 0709, 0710, 0755 : 25C2240
- 0707, 0708, 0754 : 25C2240

P754-SPK TERMINAL

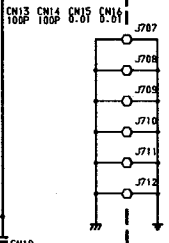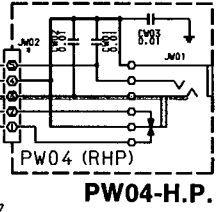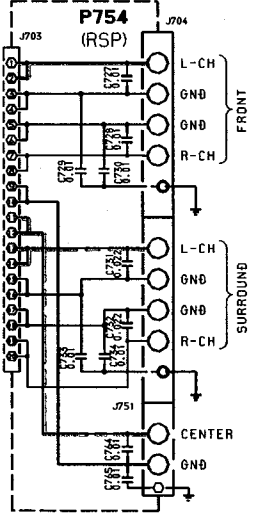


SCHMATIC DIAGRAM (17) IB VERSION

P704-MAIN AMP (AVR70) [MOMS] ONLY

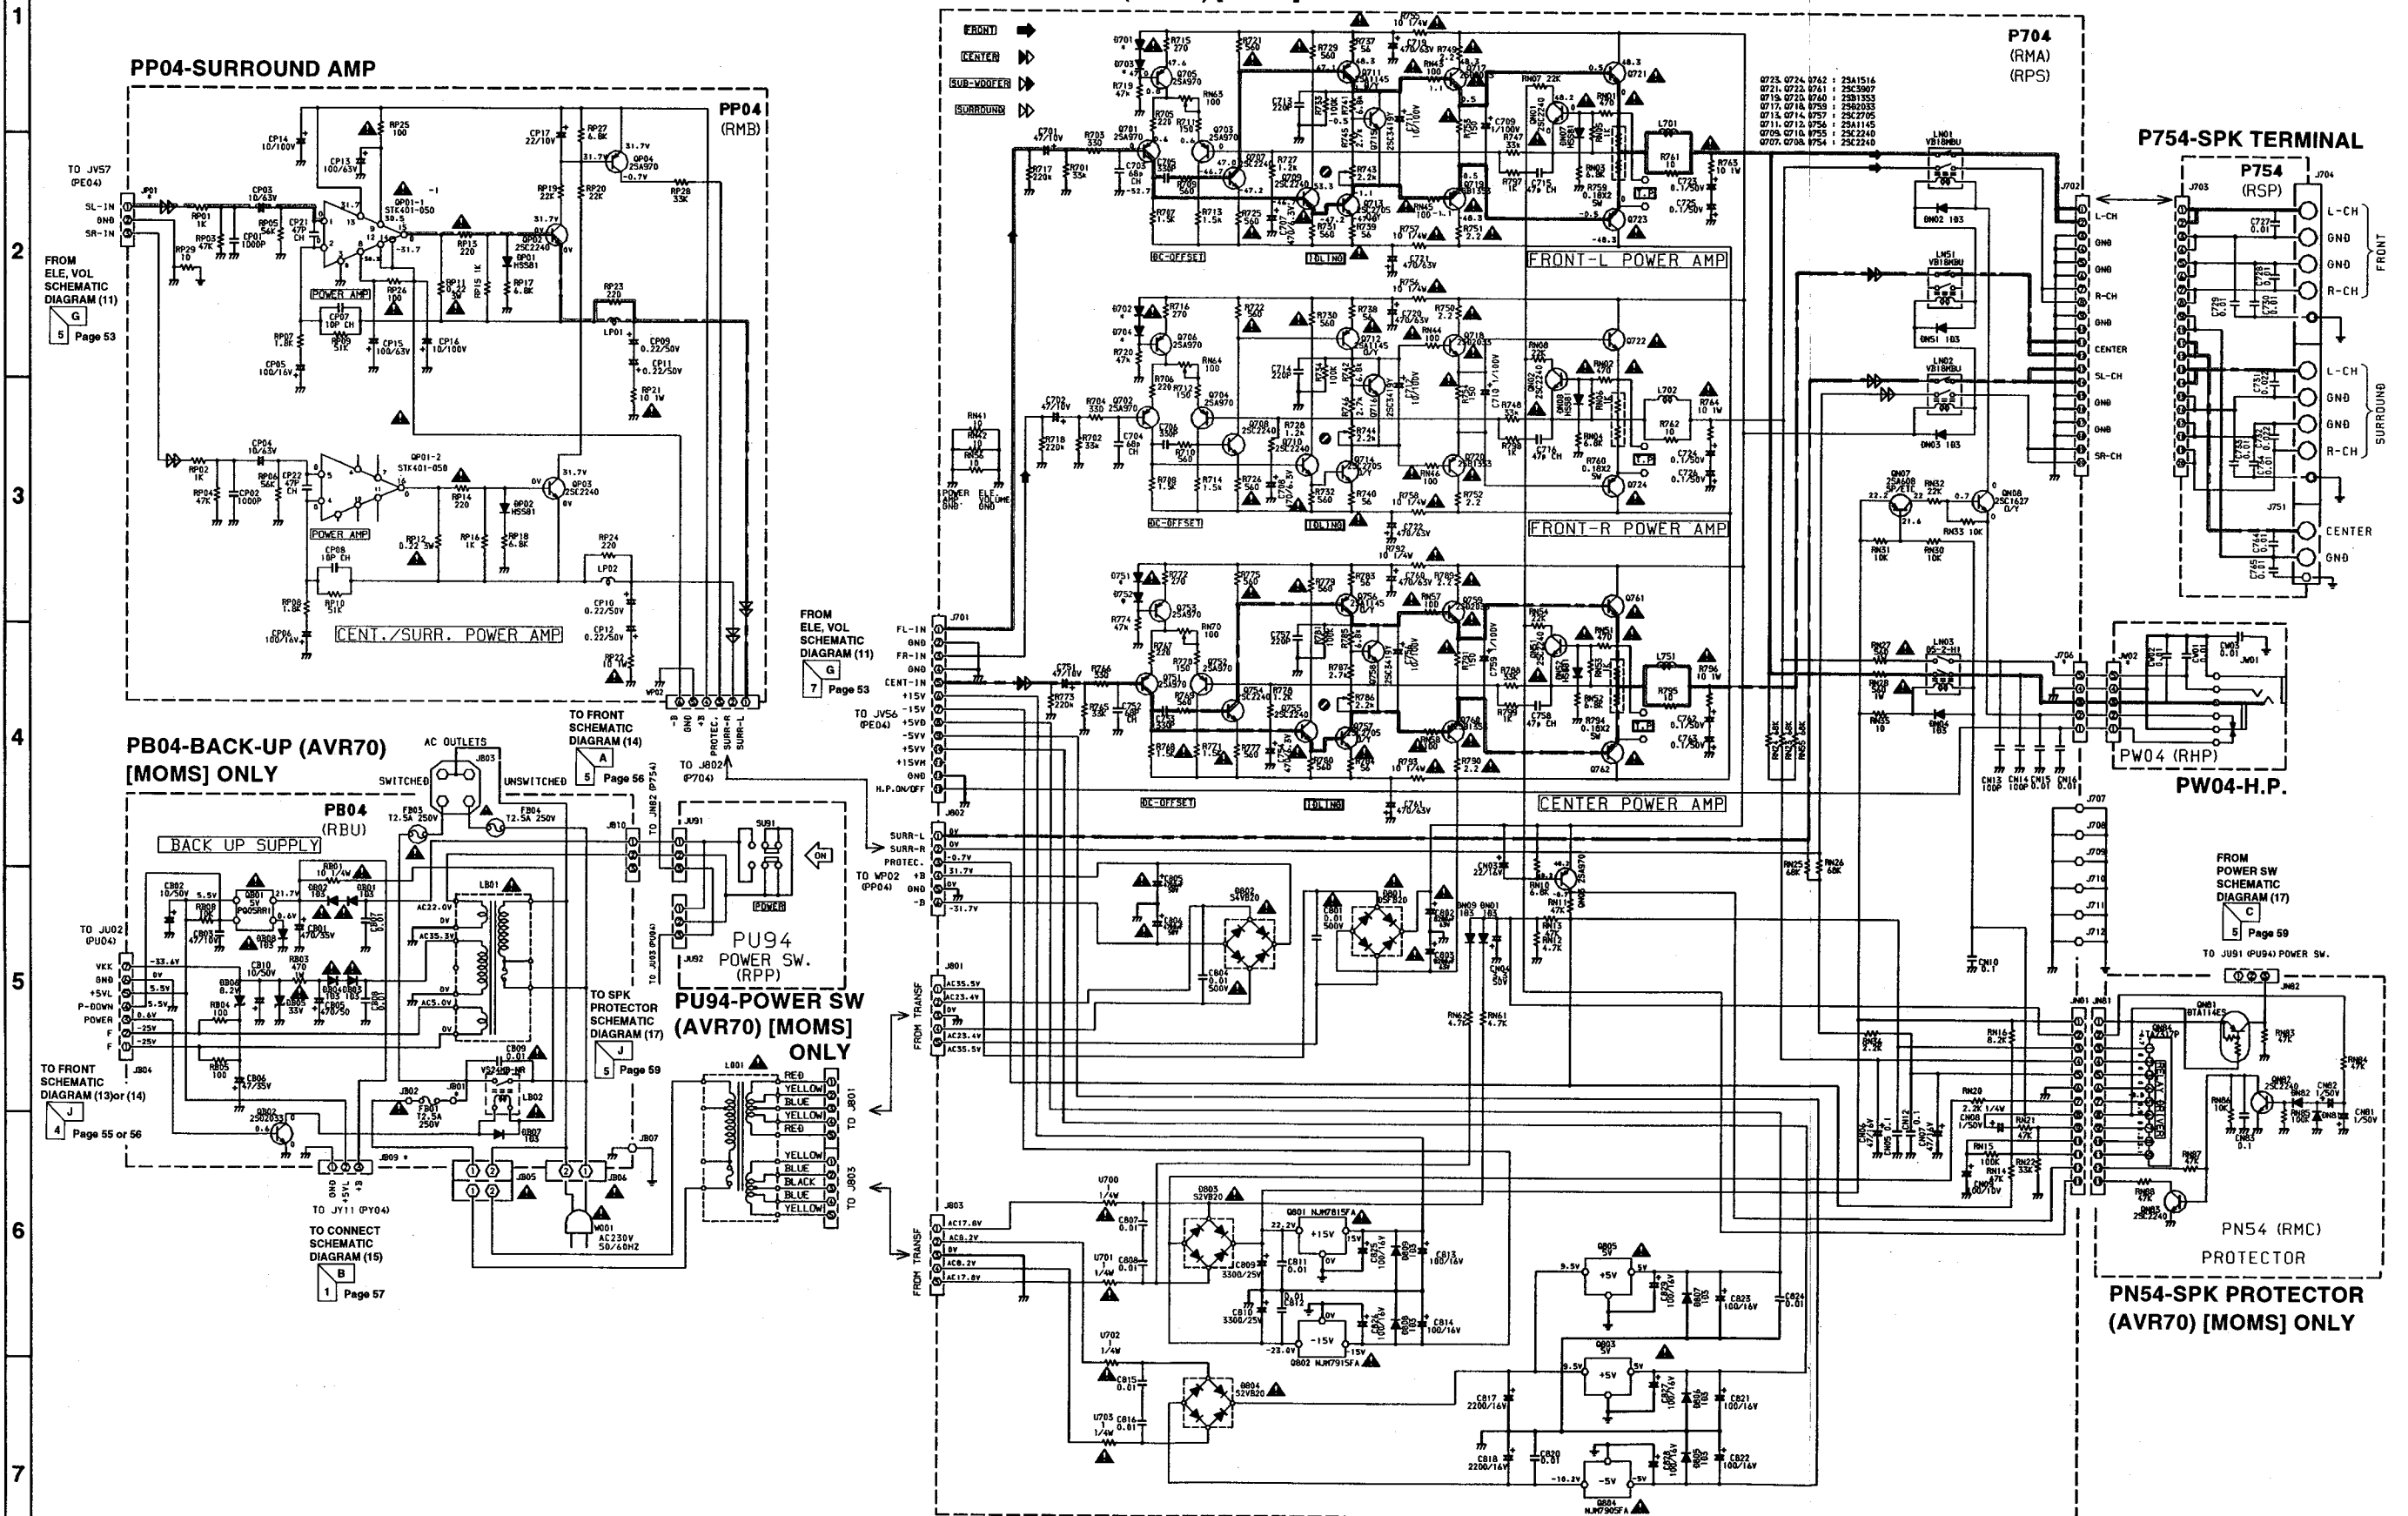


SCHEMATIC DIAGRAM (17) **IB** VERSION


PP04-SURROUND AMP

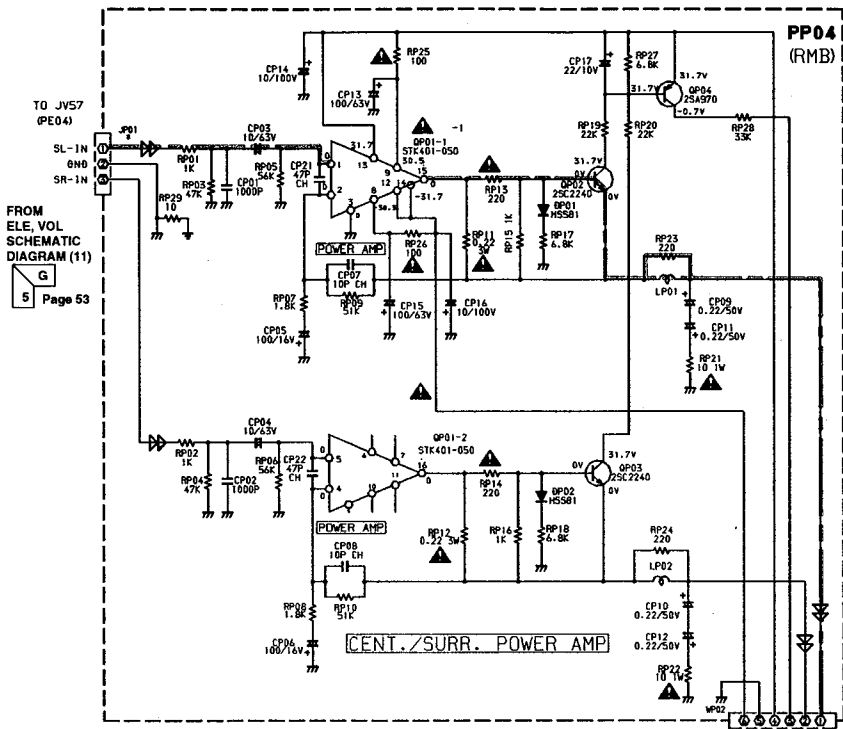


P704-MAIN AMP (AVR70) [MOM]

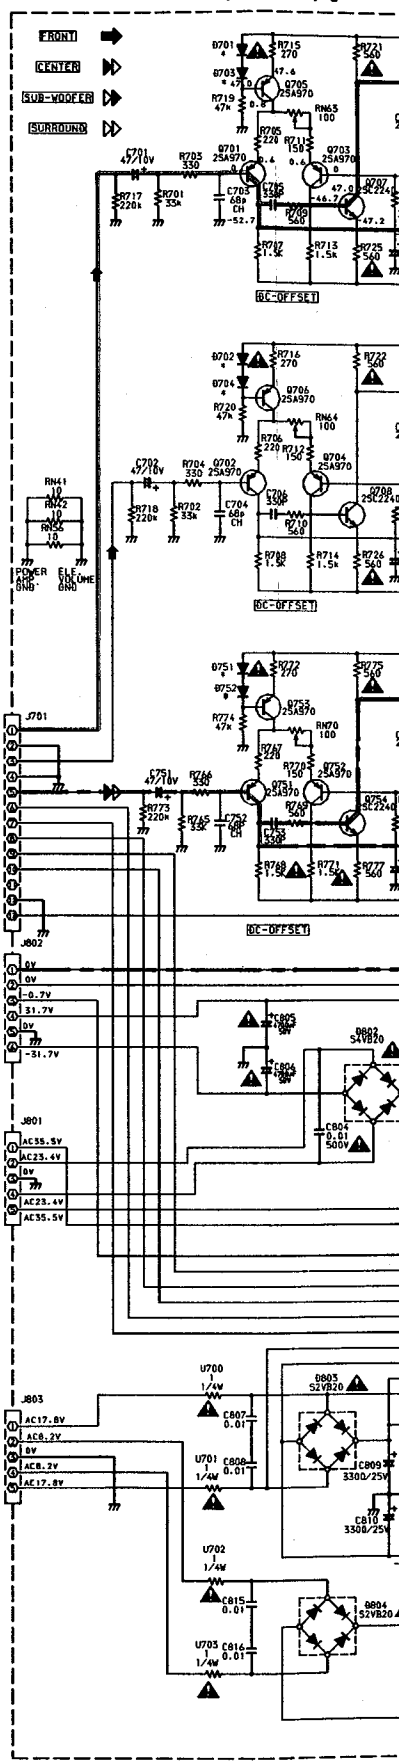

PB04-BACK-UP (AVR70) [MOMS] ONLY

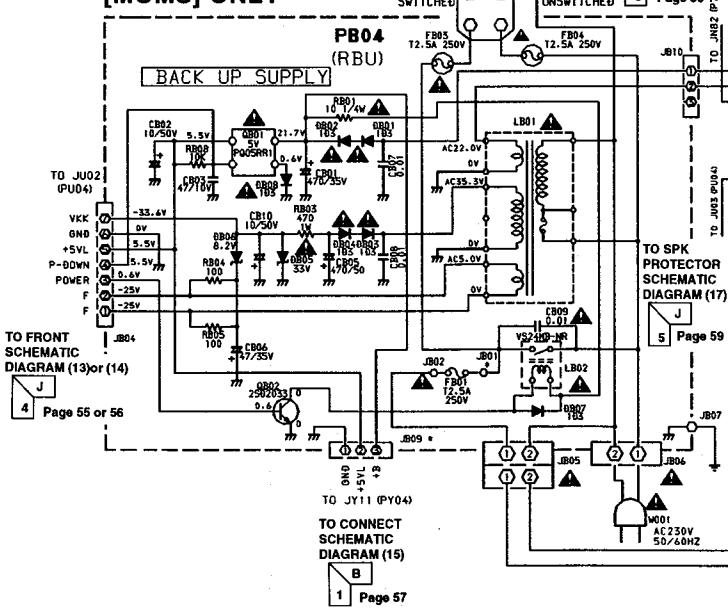

PU94-POWER SW (AVR70) [MOMS] ONLY

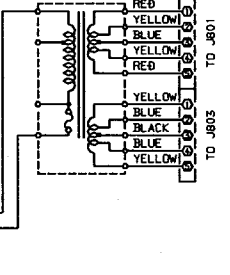

1
2
3
4
5
6
7

FROM ELE. VOL SCHEMATIC DIAGRAM (11)
G
5 Page 53

TO FRONT SCHEMATIC DIAGRAM (13) or (14)
J
4 Page 55 or 56

TO JY11 (PY04)
TO CONNECT SCHEMATIC DIAGRAM (15)
B
1 Page 57

TO FRONT SCHEMATIC DIAGRAM (14)
A
5 Page 56

TO SPK PROTECTOR SCHEMATIC DIAGRAM (17)
J
5 Page 59

FROM ELE. VOL SCHEMATIC DIAGRAM (11)
G
7 Page 53

TO JVS6 (PED4)
+15V
+5VD
+5V
+5VM
+15V
H.P. ON/OFF
GND
GND
GND
GND
GND


TO WP02 (PP04)
+B
GND
-B

FROM TRANSF
AC17.8V
AC23.4V
0V
AC23.4V
AC23.4V

U700 1/W
C807 0.01
U701 C808 0.01
U702 1/W
U703 C810 0.01
U704 1/W

U705 C811 0.01

SCHEMATIC DIAGRAM (18) **IB** VERSION
P604-THX PRO LOGIC DSP

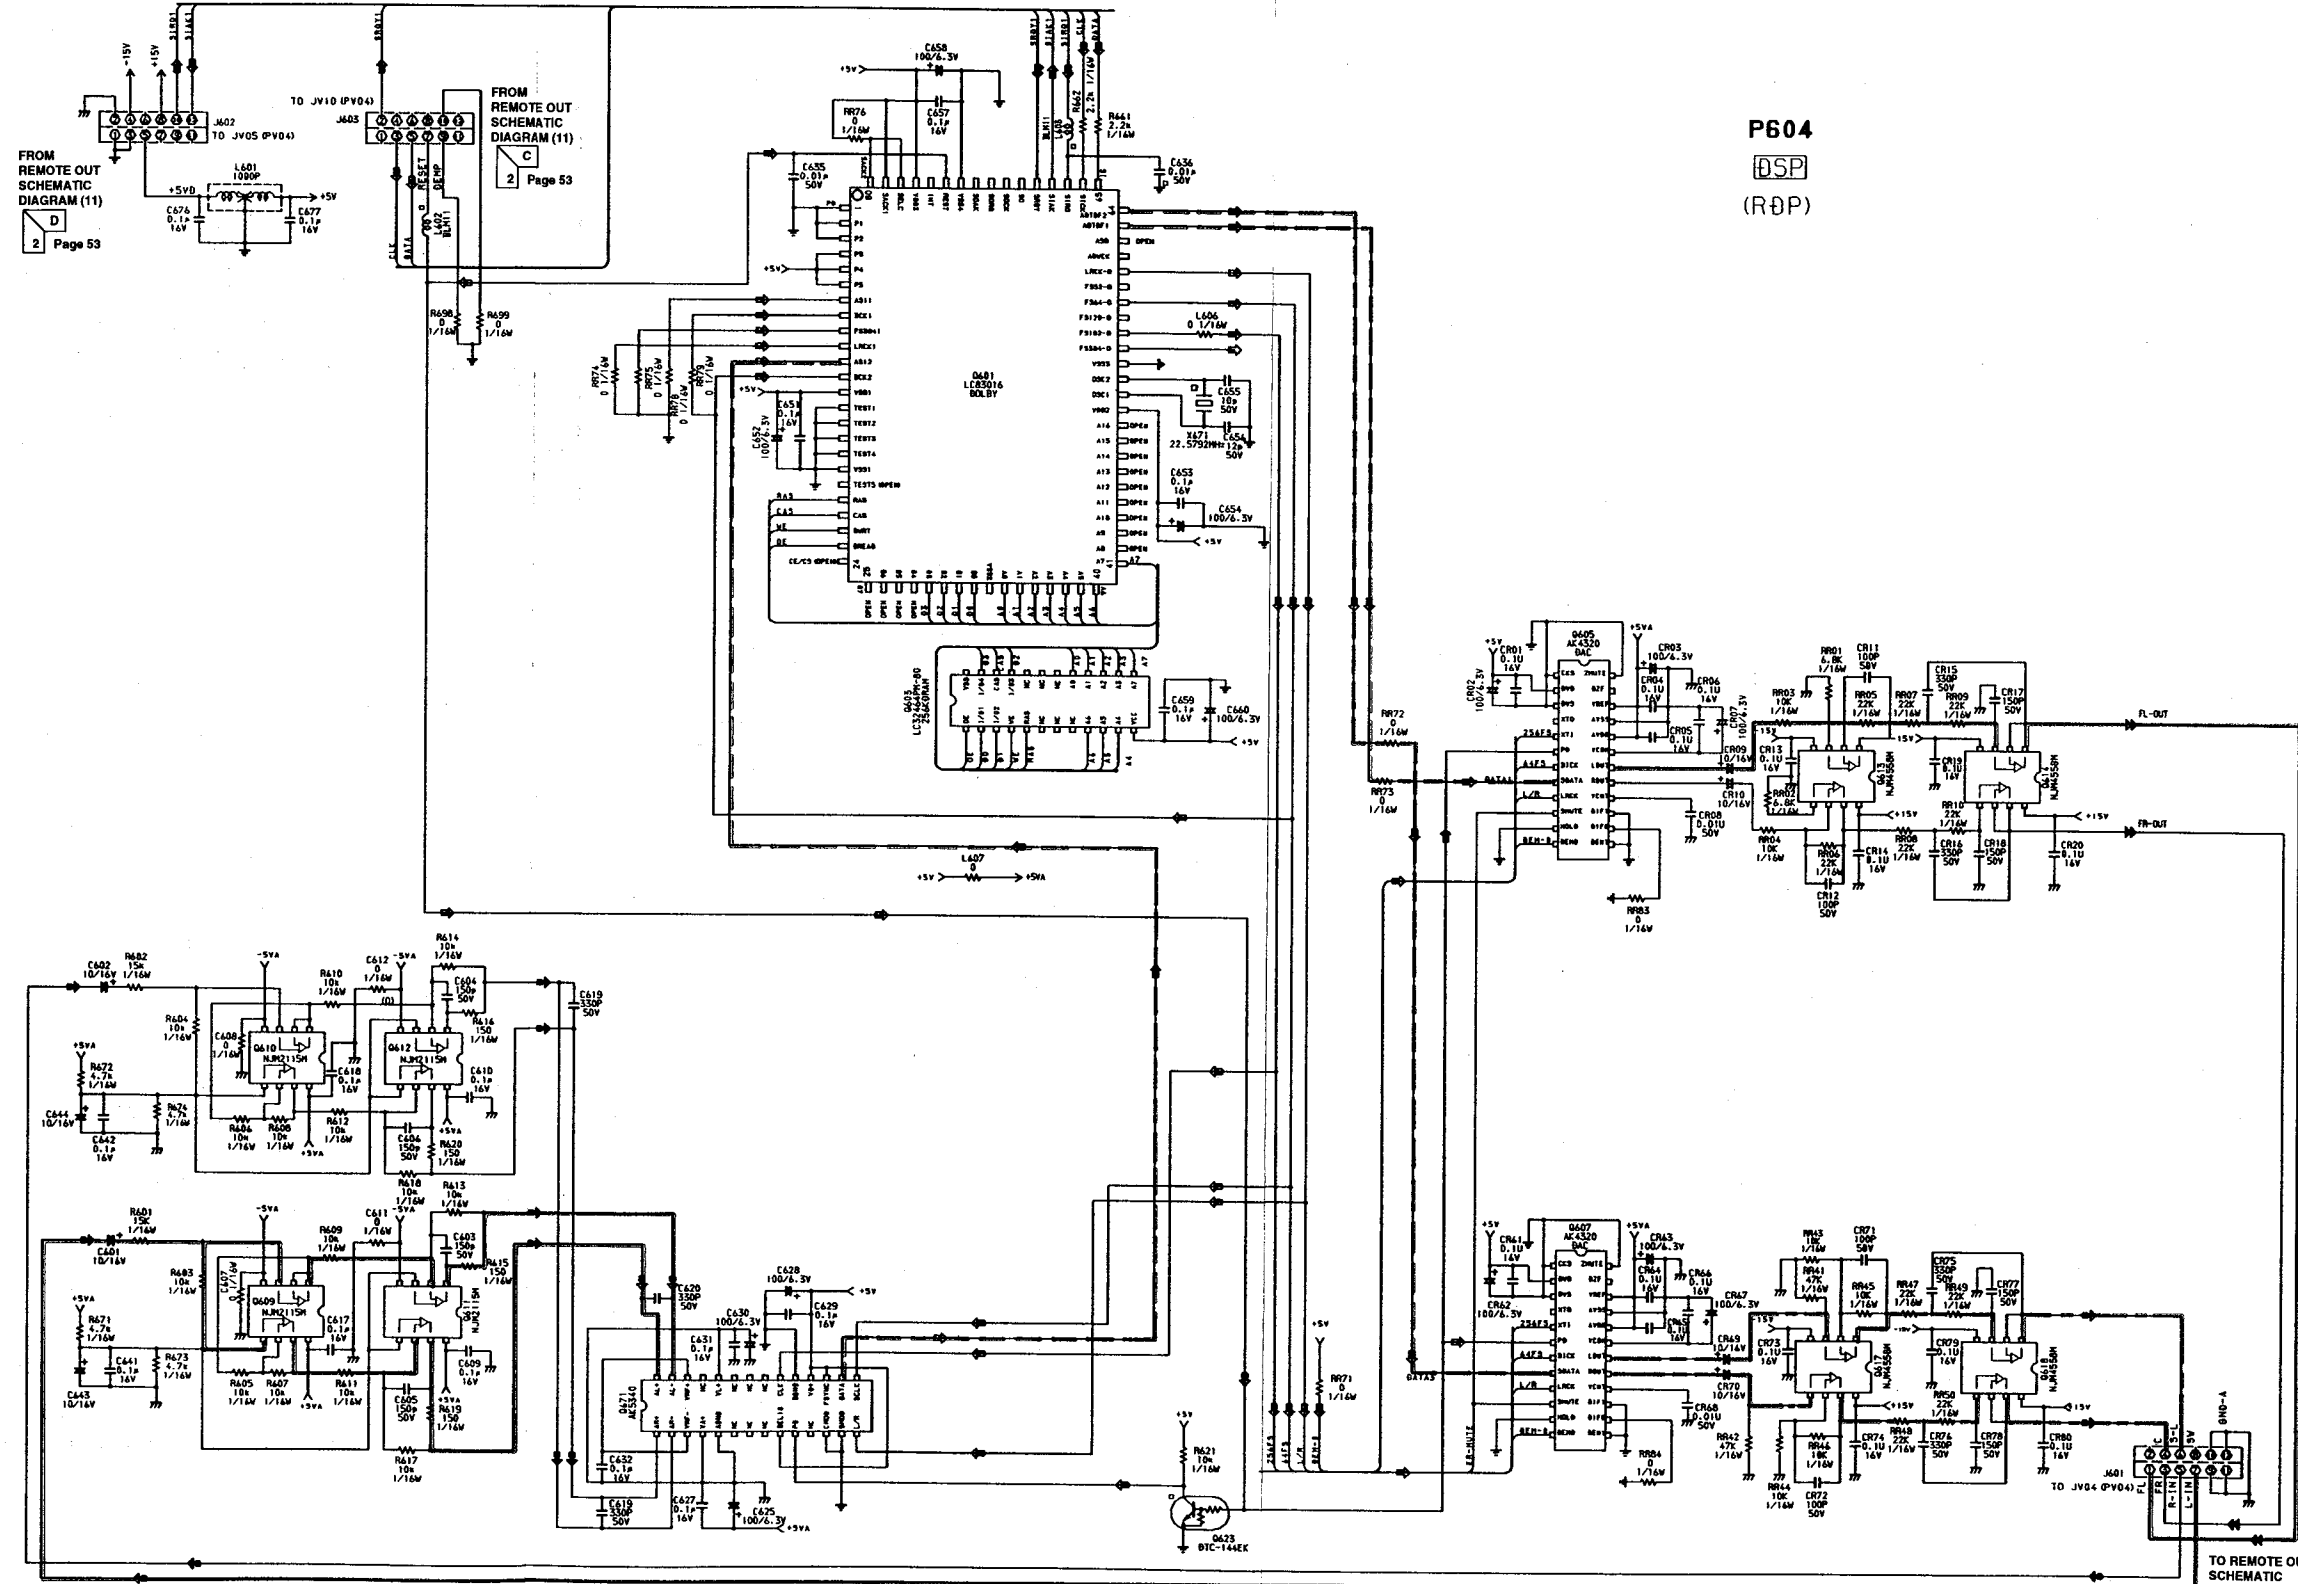

P604
DSP
(RDP)

FROM REMOTE OUT SCHEMATIC DIAGRAM (11)
2 Page 53


FROM REMOTE OUT SCHEMATIC DIAGRAM (11)
2 Page 53

TO REMOTE OUT SCHEMATIC DIAGRAM (11)
E Page 53

- ⇔ DIGITAL
- ⇨ ANALOG-L-IN
- ⇨ ANALOG-R-IN
- ⇨ ANALOG-L-OUT
- ⇨ ANALOG-R-OUT
- ⇨ ANALOG-SF-OUT
- ⇨ ANALOG-C-OUT
- ⇨ ANALOG-SL-OUT
- ⇨ ANALOG-SR-OUT

SCHEMATIC DIAGRAM (18) IB VERSION P604-THX PRO LOGIC DSP


1
2
3
4
5
6
7

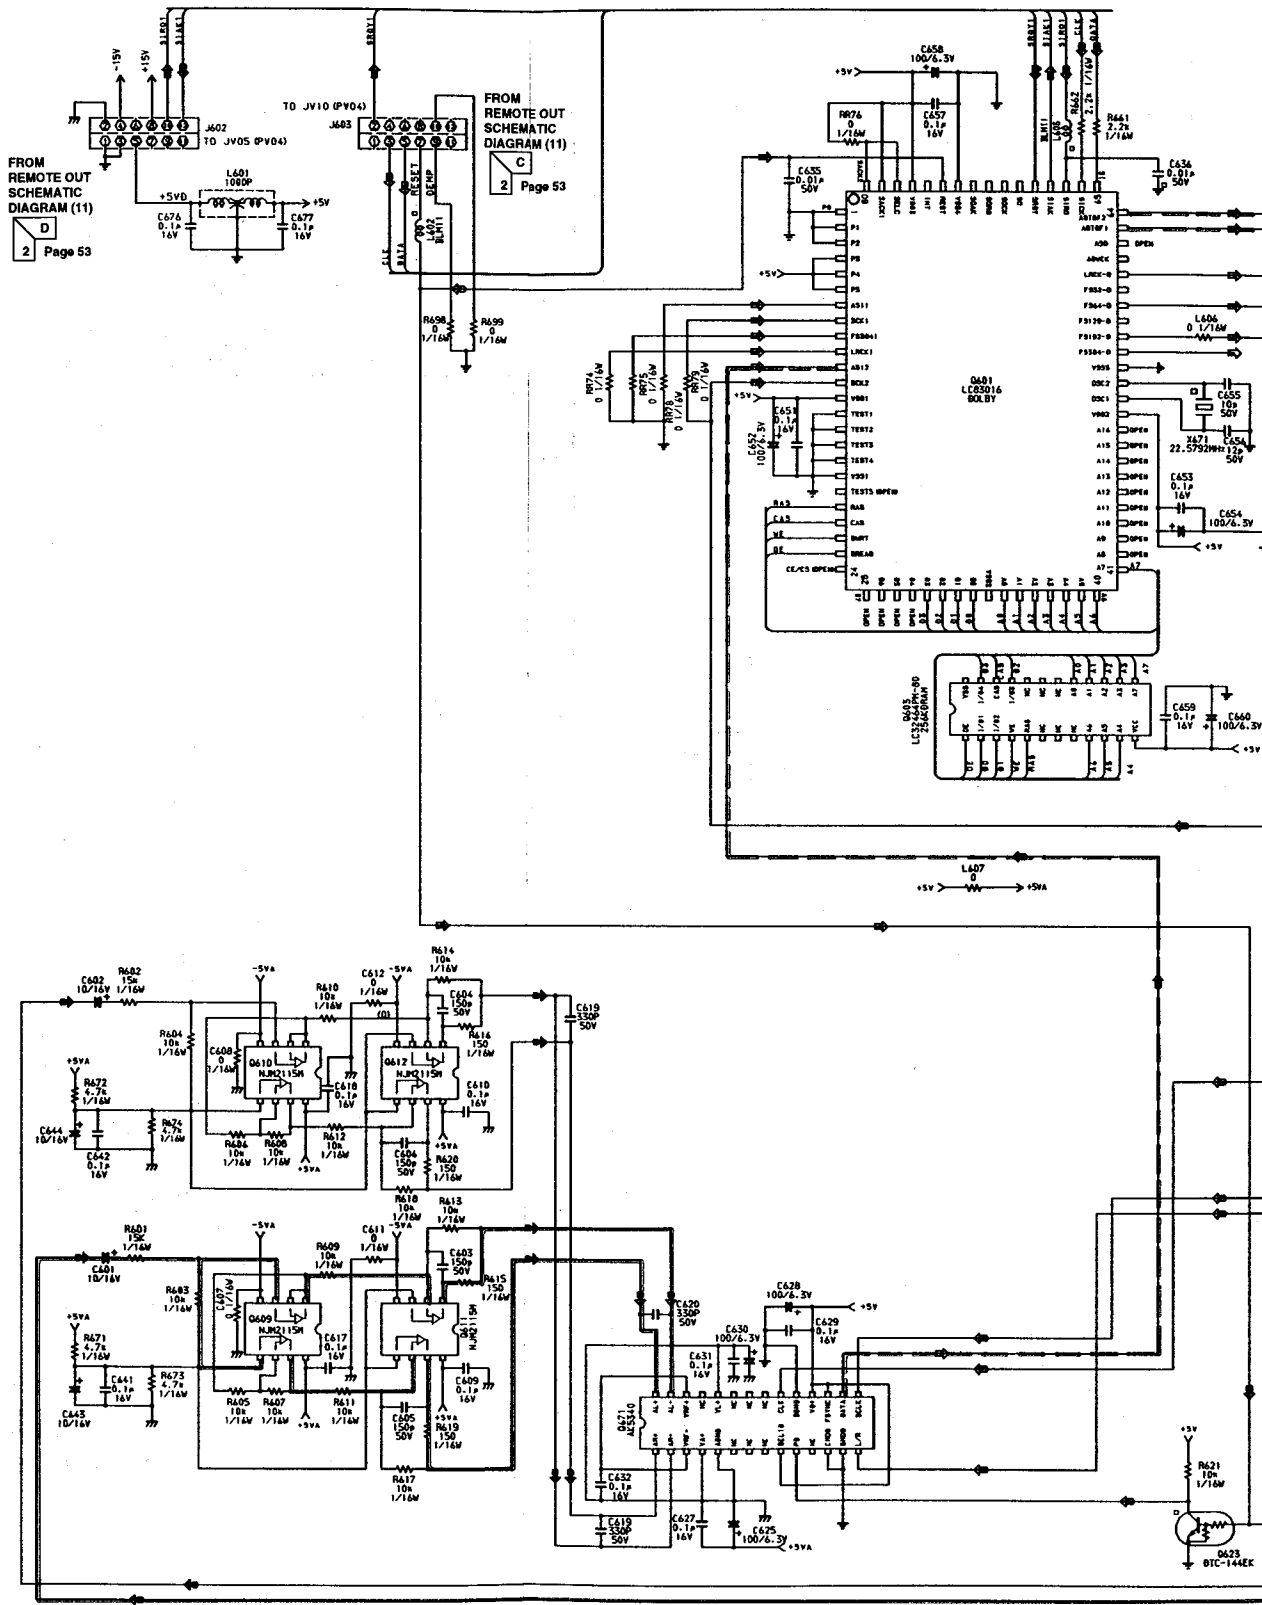

P604

DSP

(RDP)






































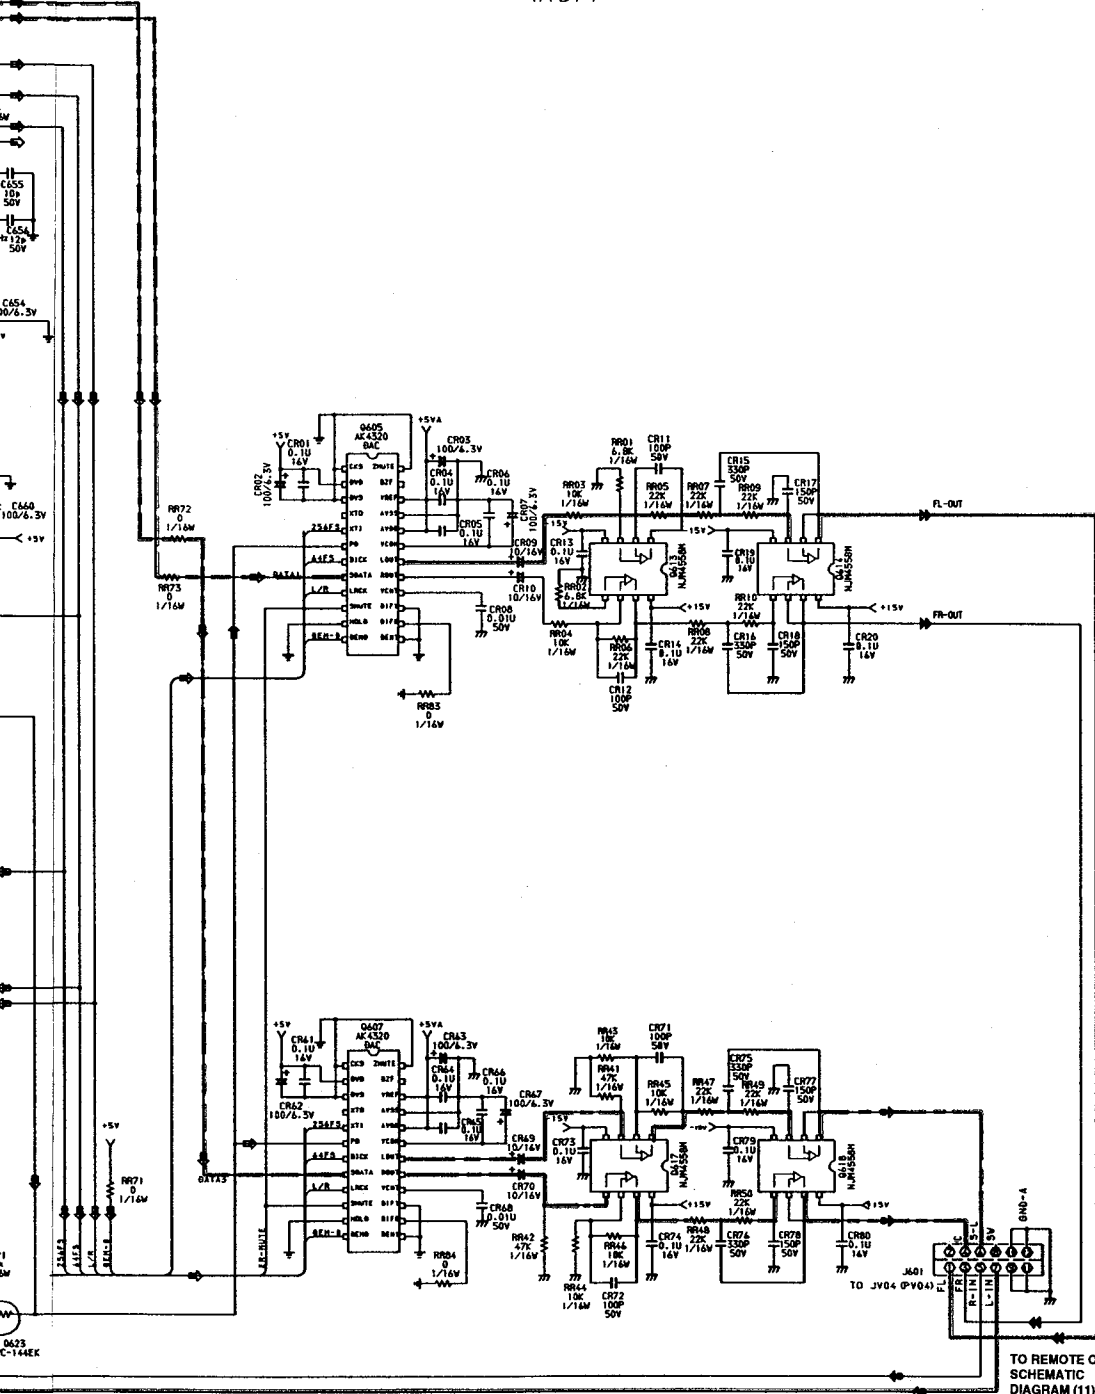


- ◇ DIGITAL
- ▷ ANALOG-L-IN
- ▷ ANALOG-R-IN
- ▷ ANALOG-L-OUT
- ▷ ANALOG-R-OUT
- ▷ ANALOG-SW-OUT
- ▷ ANALOG-C-OUT
- ▷ ANALOG-SL-OUT
- ▷ ANALOG-SR-OUT


TO REMOTE OUT
SCHEMATIC
DIAGRAM (11)

E
2 Page 53


PIN CONNECTION DIAGRAM

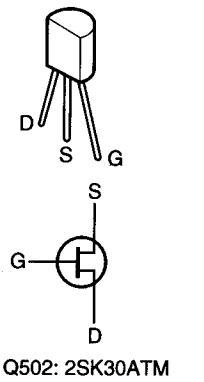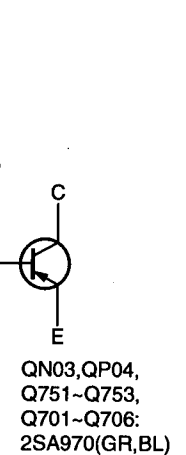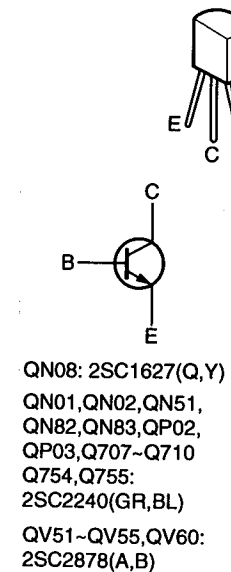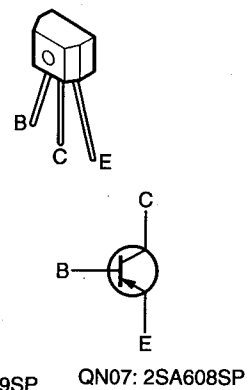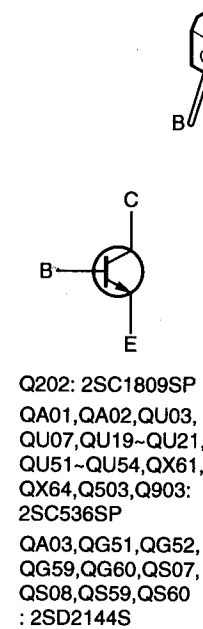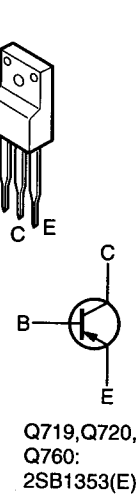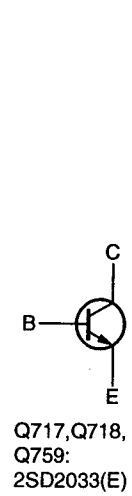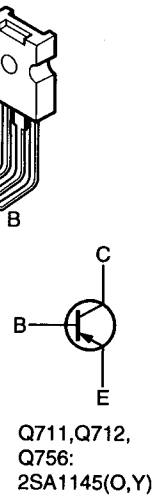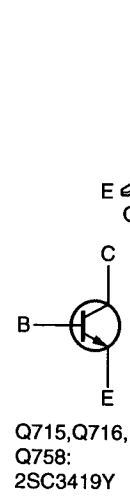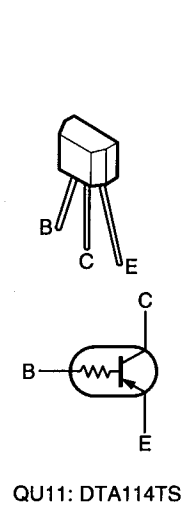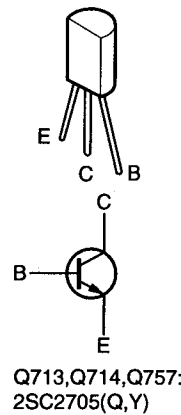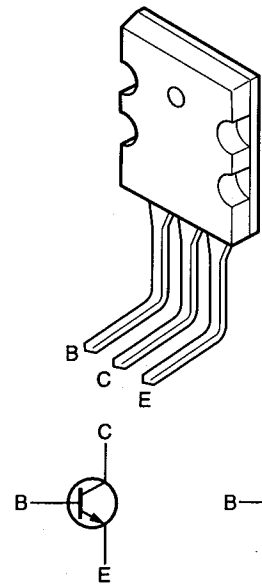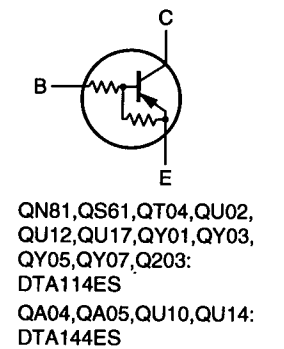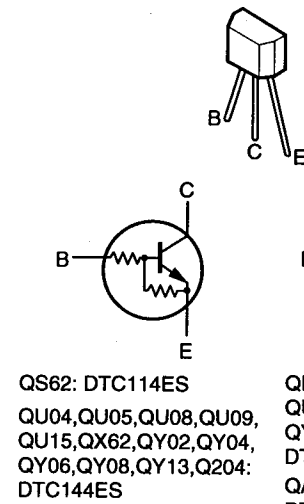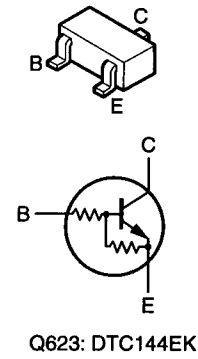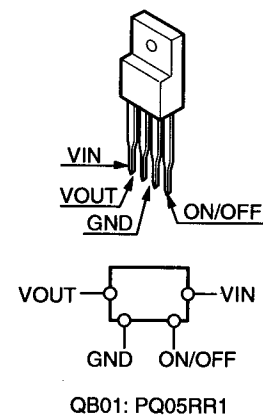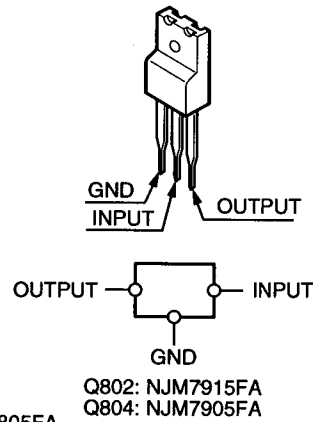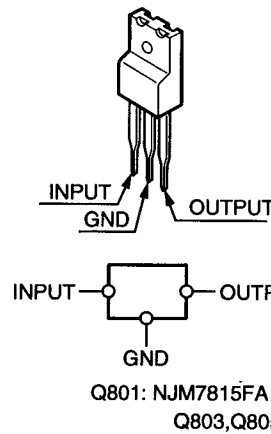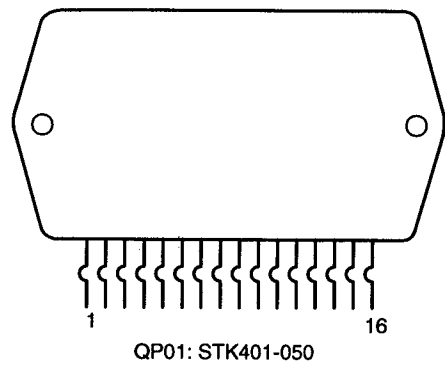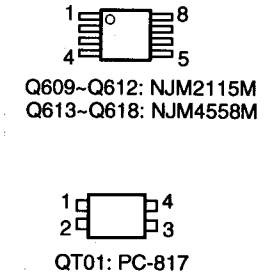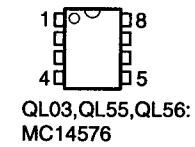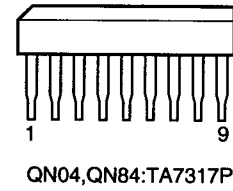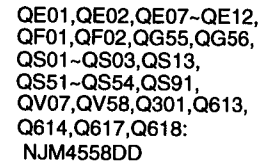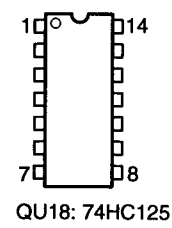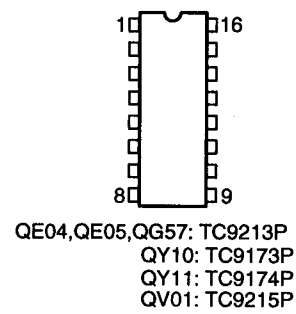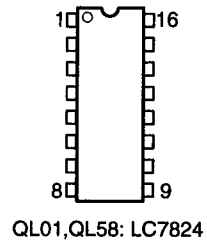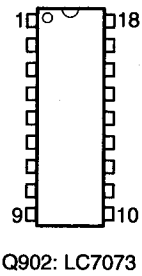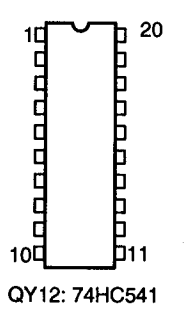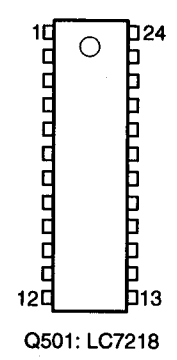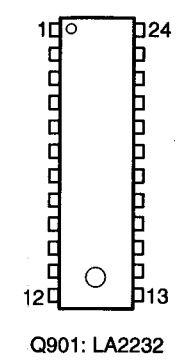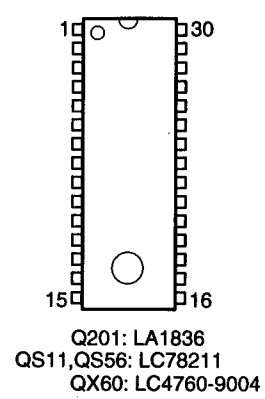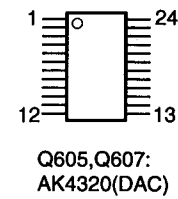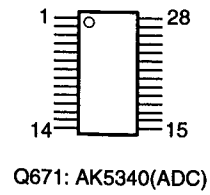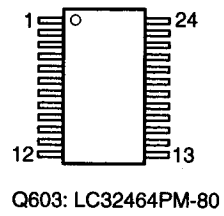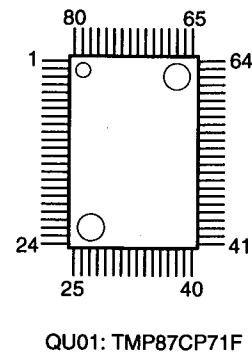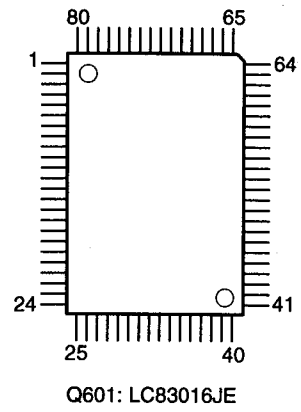


PIN CONNECTION DIAGRAM

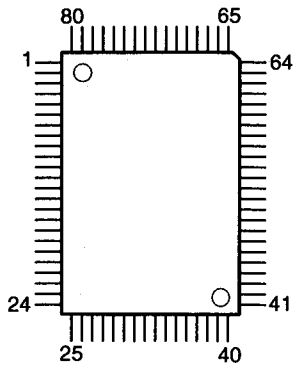


Q601: LC83016JE

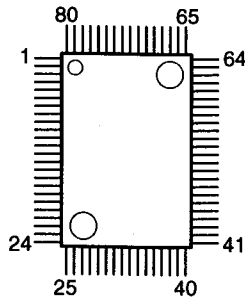


QU01: TMP87CP71F

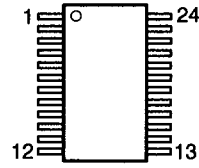


Q603: LC32464PM-80

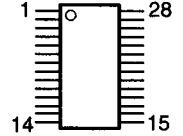


Q671: AK5340(ADC)




QL04, QL05: NJM2233BD
QX63: NJM2267D

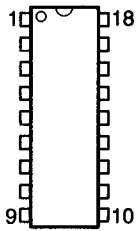


Q902: LC7073

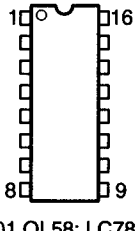

QL01, QL58: LC7824

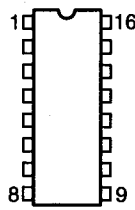


QE04, QE05, QG57: TC9213P
QY10: TC9173P
QY11: TC9174P
QV01: TC9215P


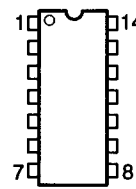


QU18: 74HC125



QE01, QE02, QE07~QE12,
QF01, QF02, QG55, QG56,
QS01~QS03, QS13,
QS51~QS54, QS91,
QV07, QV58, Q301, Q613,
Q614, Q617, Q618:
NJM4558DD

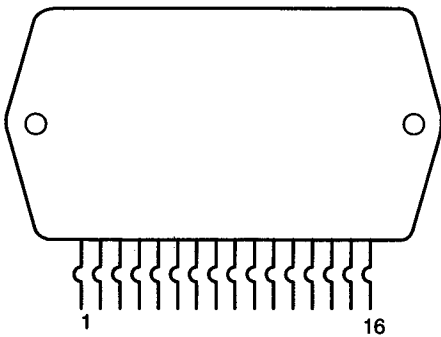

QP01: STK401-050


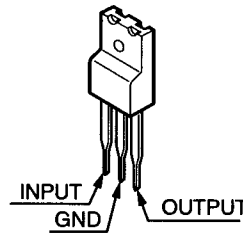


Q801: NJM7815FA

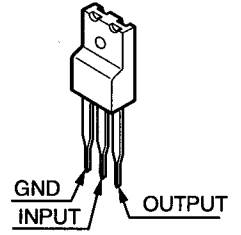


Q802: NJM7915FA
Q804: NJM7905FA


Q803, Q805: NJM7805FA

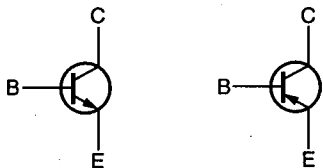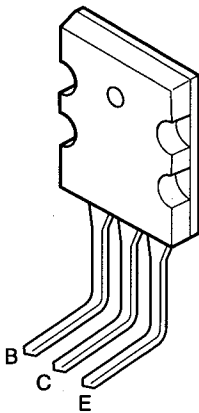


Q721, Q722, Q761:
2SC3182(R,O)





Q723, Q724, Q762:
2SA1265(R,O)




Q713, Q714, Q757:
2SC2705(Q,Y)

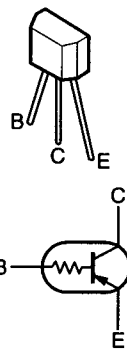


Q715, Q716,
Q758:
2SC3419Y

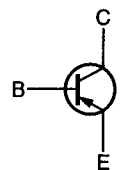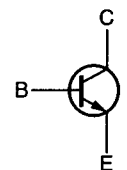


Q711, Q712,
Q756:
2SA1145(O,Y)

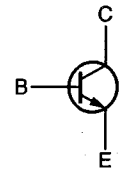


Q717, Q718,
Q759:
2SD2033(E)

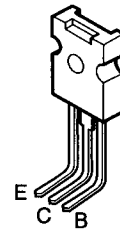


Q11: DTA114TS

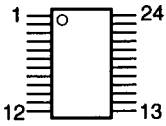


Q605, Q607:
AK4320(DAC)

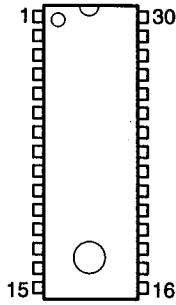


Q201: LA1836
QS11, QS56: LC78211
QX60: LC4760-9004

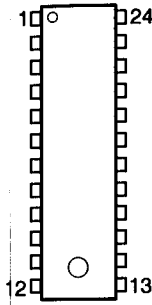

Q901: LA2232

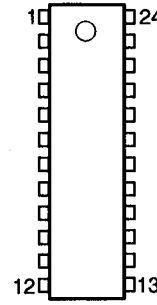


Q501: LC7218

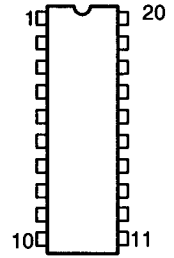


QY12: 74HC541


233BD
2267D
QE12,
QG56,
B,
1,
Q613,

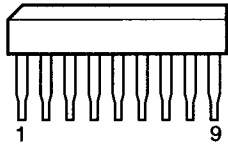



QN04, QN84: TA7317P




QL03, QL55, QL56:
MC14576



Q609-Q612: NJM2115M
Q613-Q618: NJM4558M





QT01: PC-817





QB02, Q717, Q718:
2SD2033(E)



OUTPUT

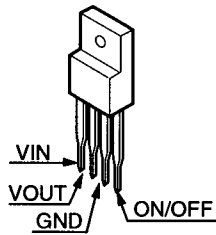


QB01: PQ05RR1

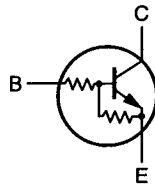

Q623: DTC144EK



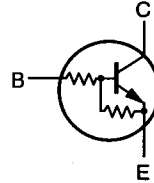



QS62: DTC114ES
QU04, QU05, QU08, QU09,
QU15, QX62, QY02, QY04,
QY06, QY08, QY13, Q204:
DTC144ES

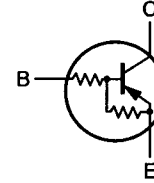



QN81, QS61, QT04, QU02,
QU12, QU17, QY01, QY03,
QY05, QY07, Q203:
DTA114ES
QA04, QA05, QU10, QU14:
DTA144ES

15FA
05FA




Q202: 2SC1809SP
QA01, QA02, QU03,
QU07, QU19-QU21,
QU51-QU54, QX61,
QX64, Q503, Q903:
2SC536SP
QA03, QG51, QG52,
QG59, QG60, QS07,
QS08, QS59, QS60
: 2SD2144S


QN07: 2SA608SP



QN08: 2SC1627(Q, Y)
QN01, QN02, QN51,
QN82, QN83, QP02,
QP03, Q707-Q710
Q754, Q755:
2SC2240(GR, BL)
QV51-QV55, QV60:
2SC2878(A, B)



QN03, QP04,
Q751-Q753,
Q701-Q706:
2SA970(GR, BL)

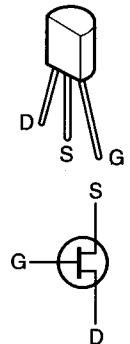


Q502: 2SK30ATM

17, Q718,
59:
D2033(E)

Q719, Q720,
Q760:
2SB1353(E)

WIRING DIAGRAM

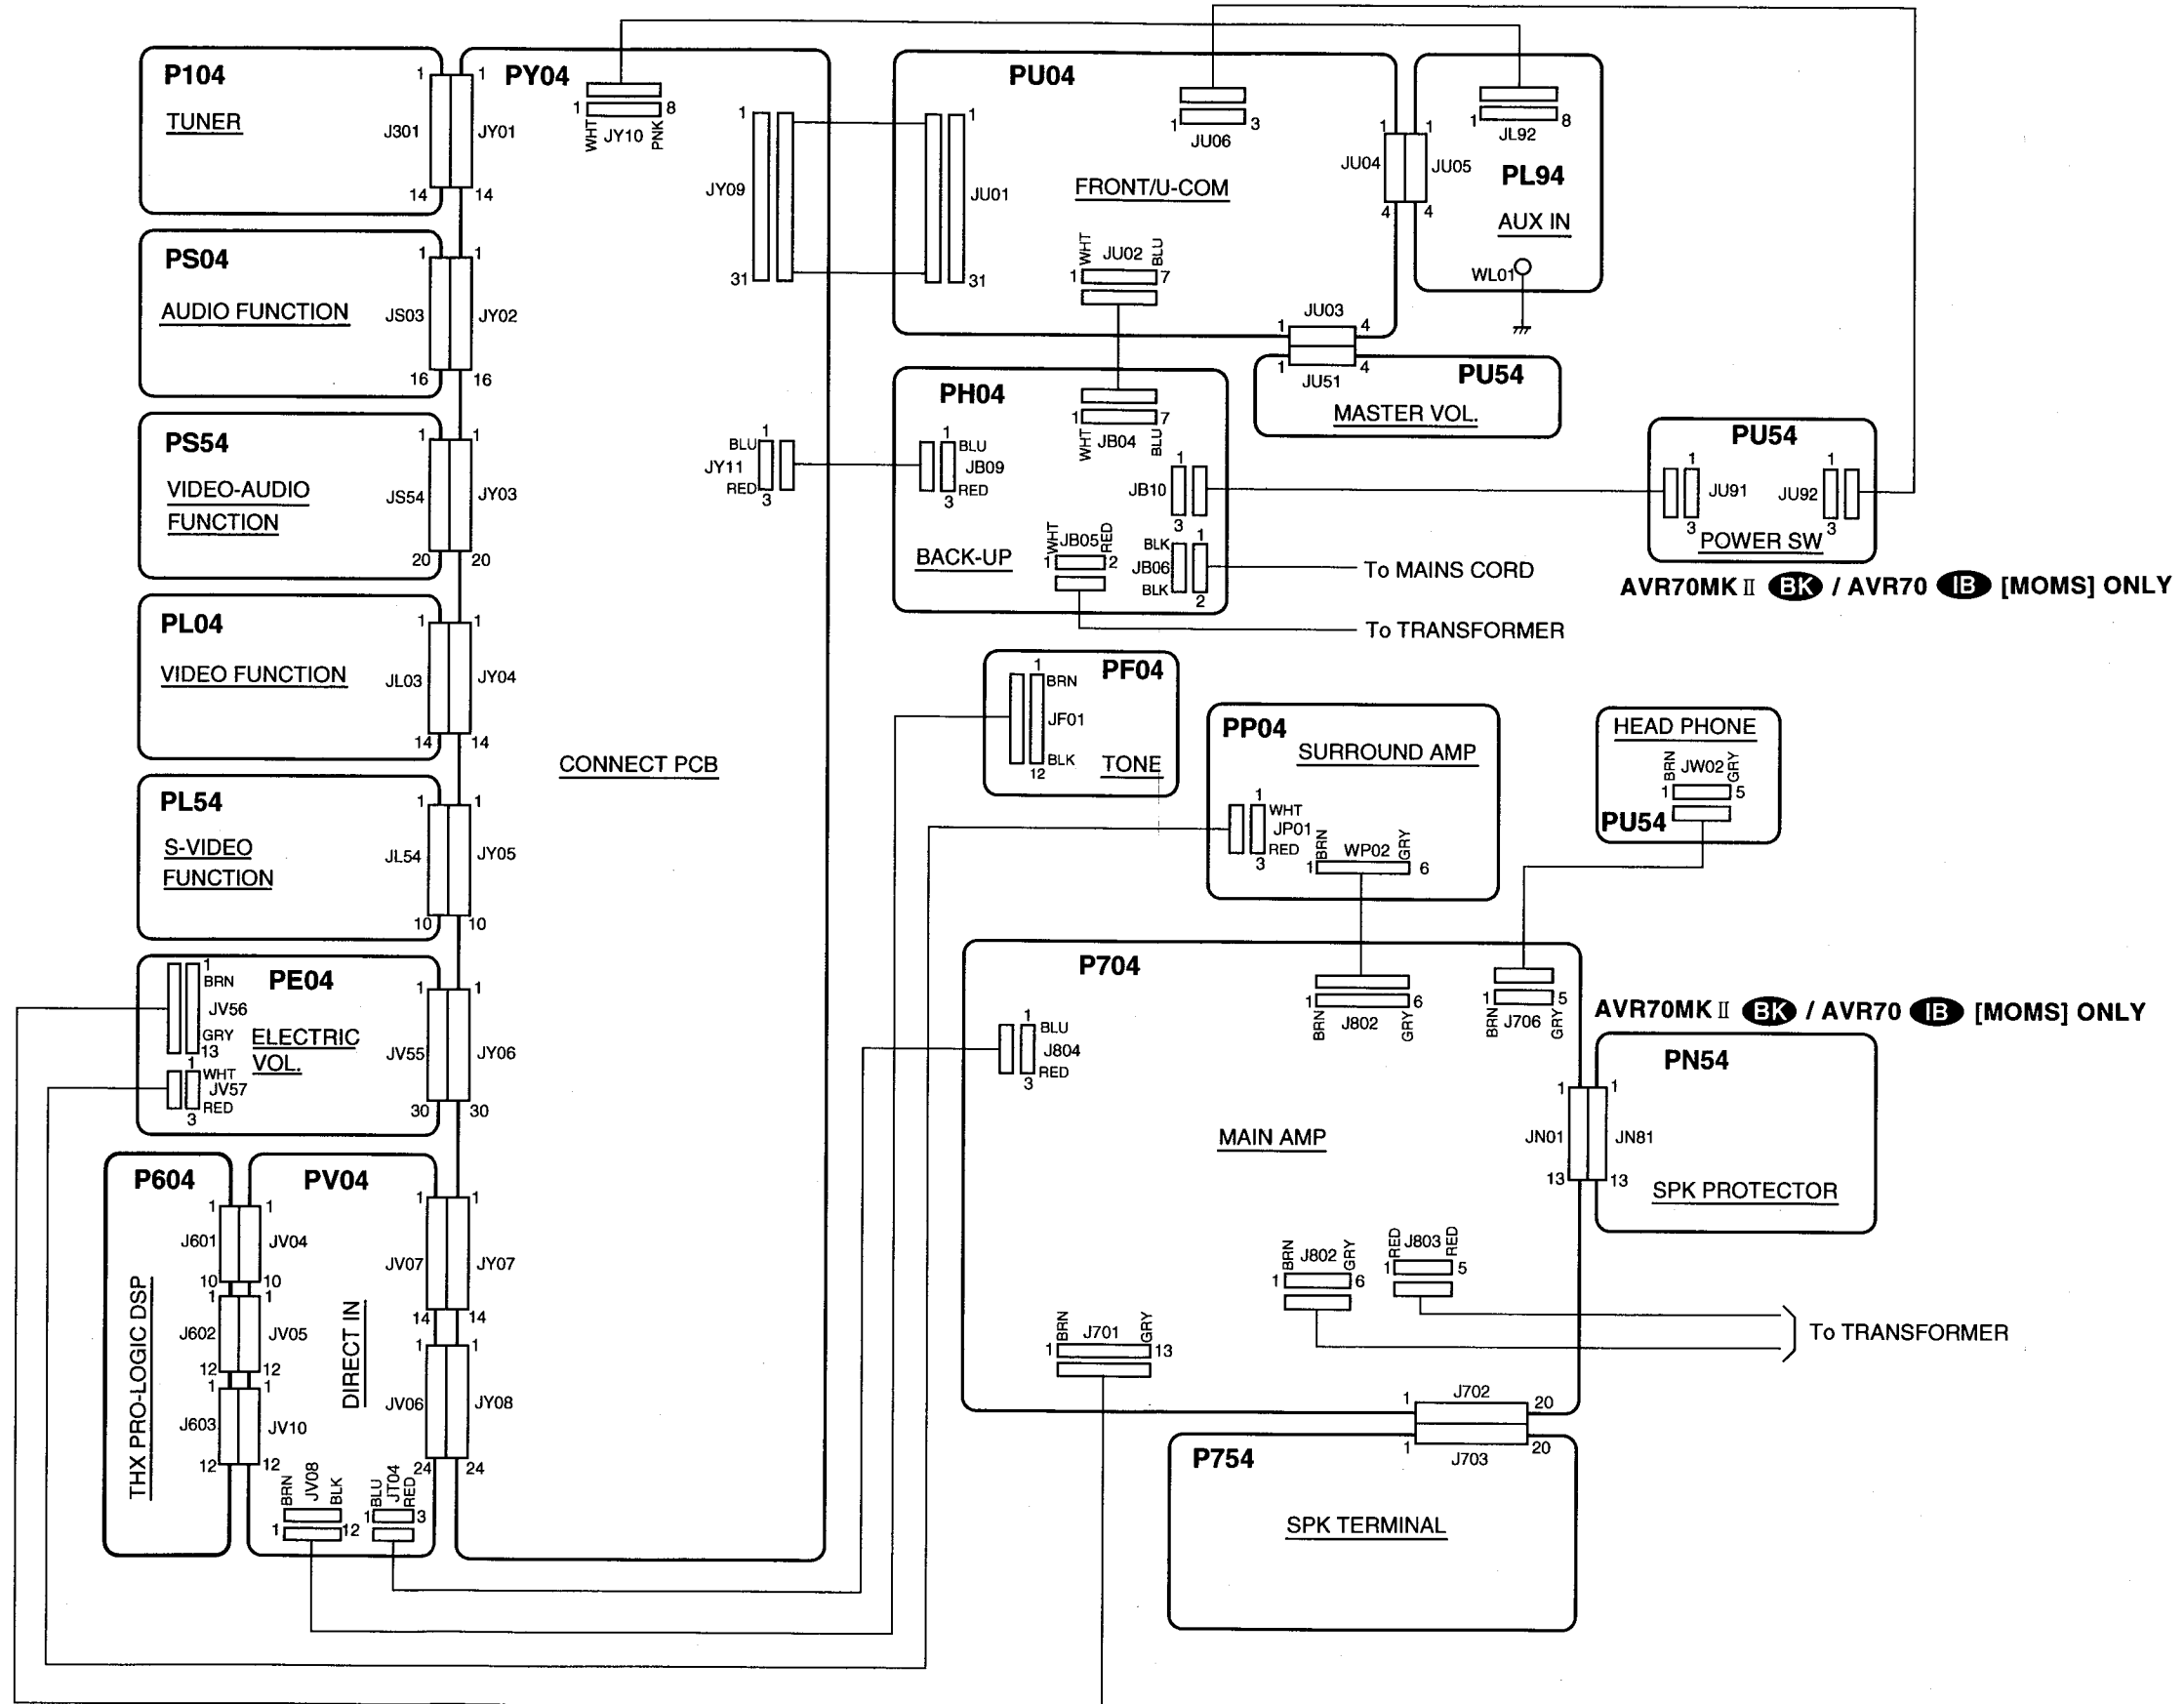


AVR70MK II BK / AVR70 IB [MOMS] ONLY


AVR70MK II BK / AVR70 IB [MOMS] ONLY

WIRING DIAGRAM


1
2
3
4
5
6
7

A B C D E

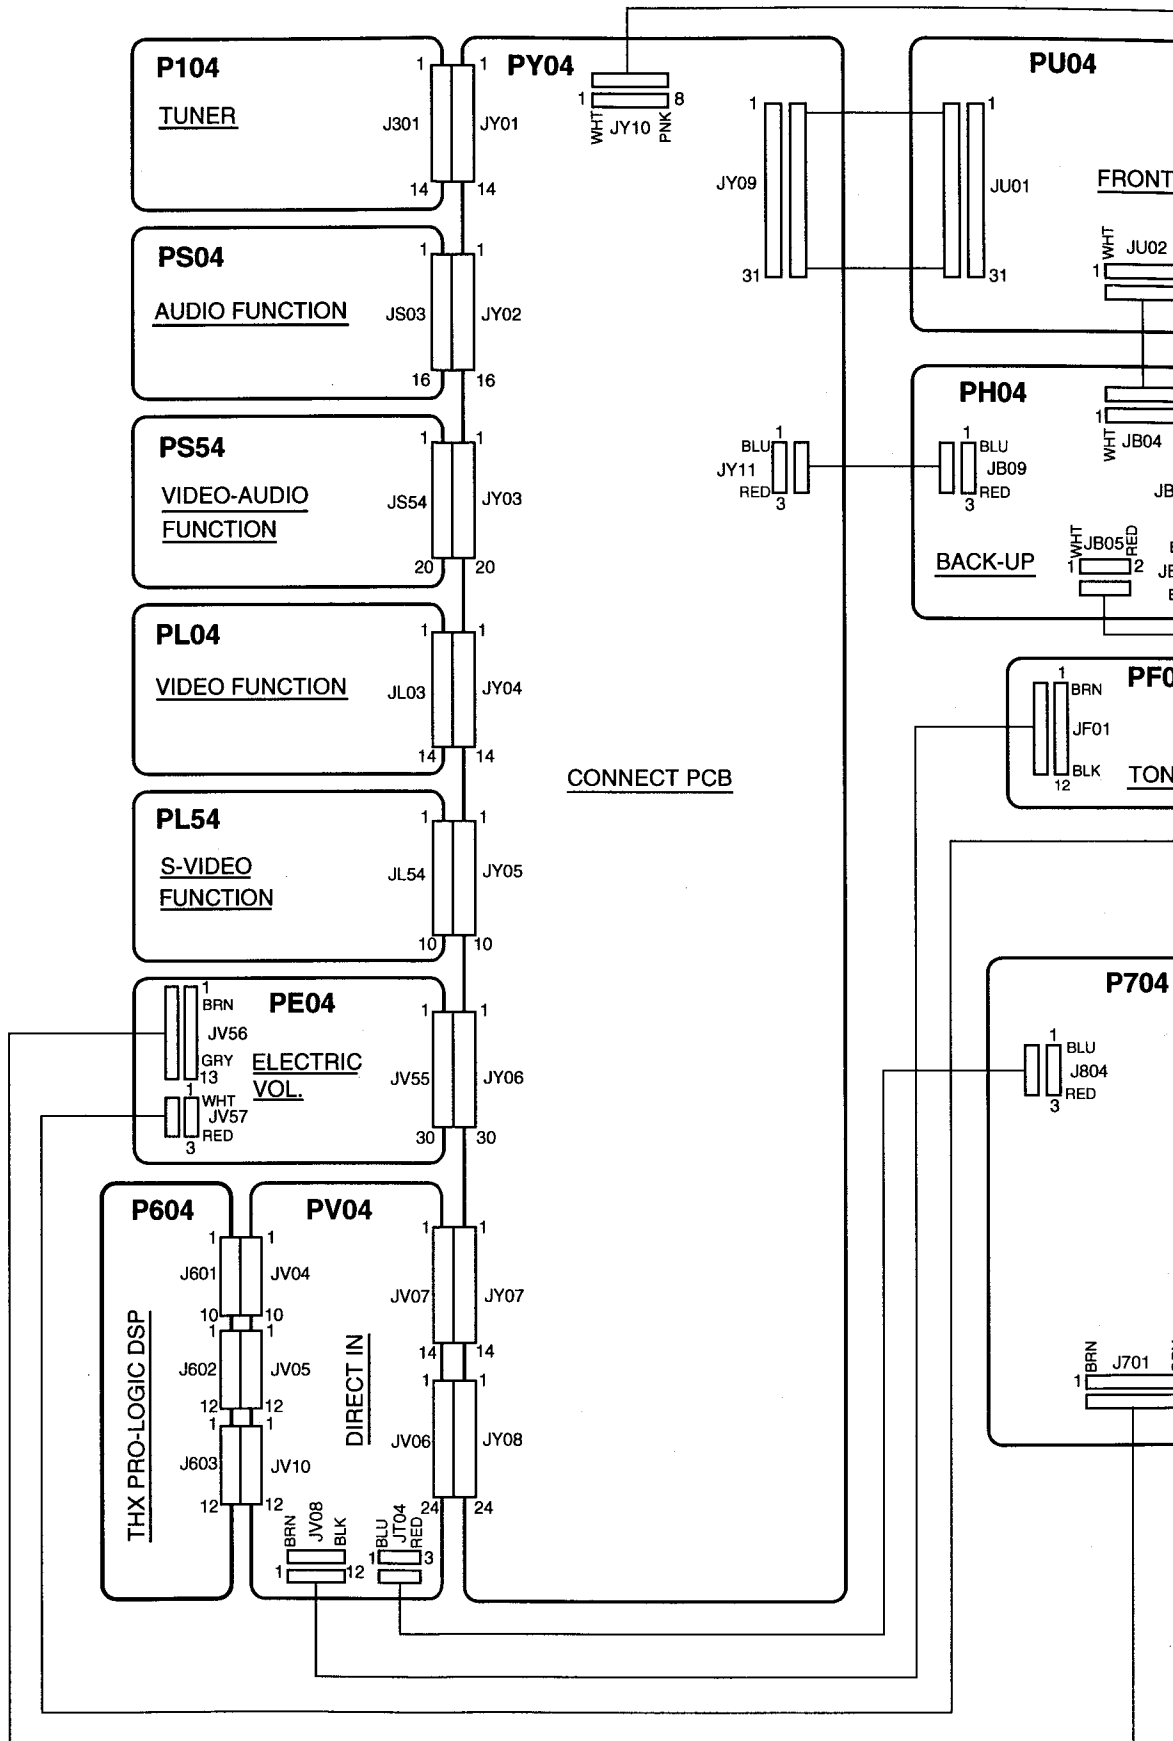

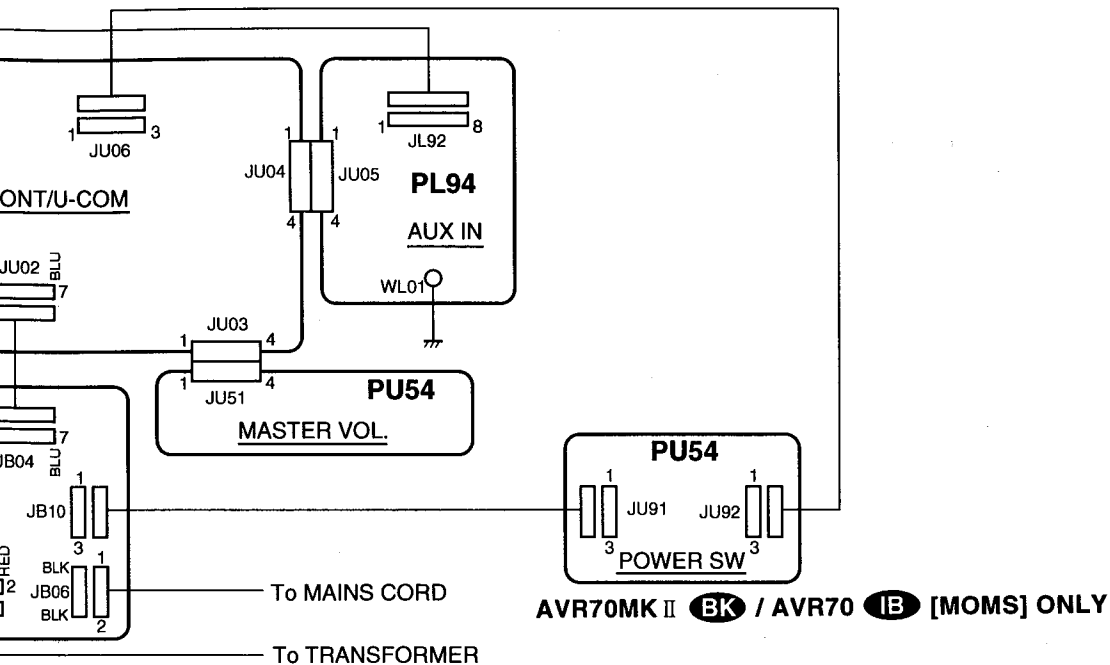


AVR70MK II **BK** / AVR70 **IB** [MOMS] ONLY

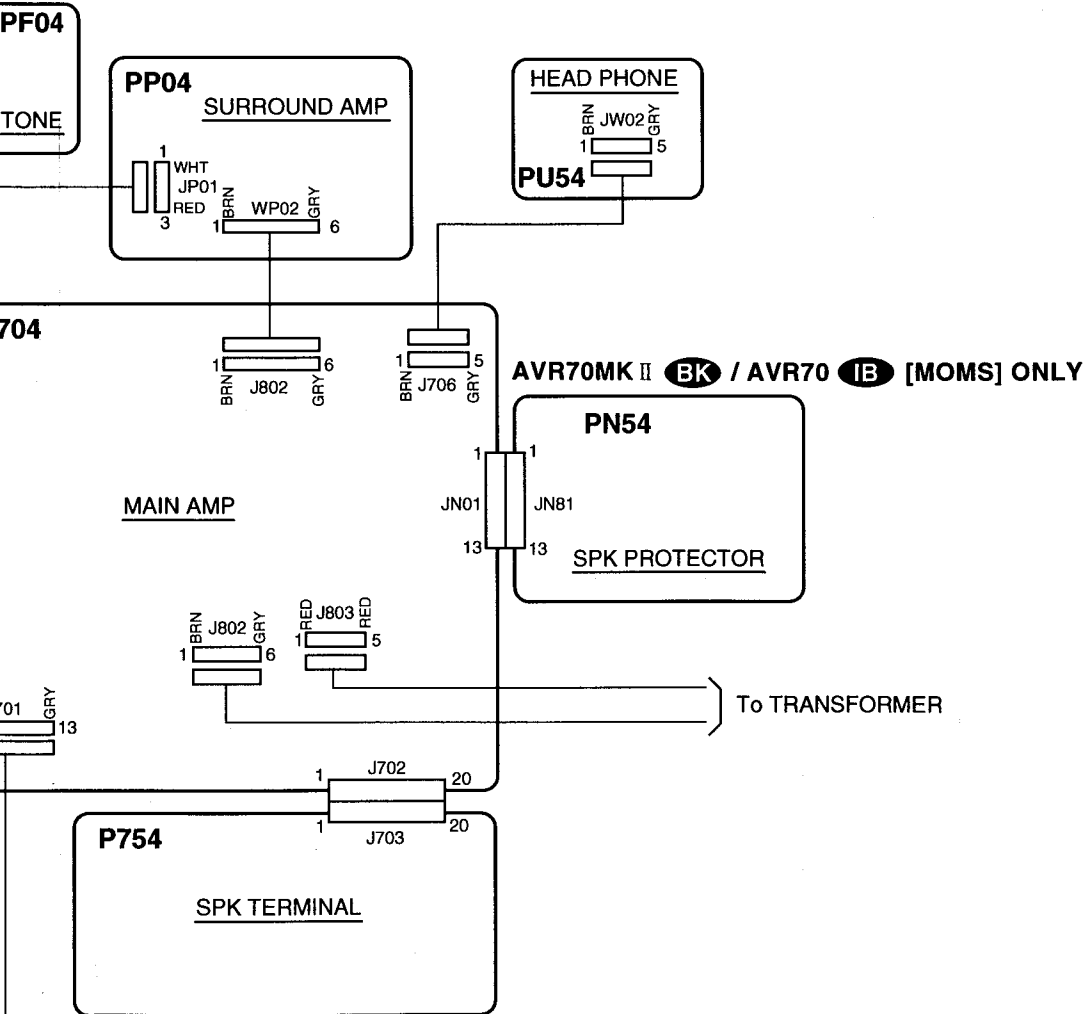

AVR70MK II **BK** / AVR70 **IB** [MOMS] ONLY

PACKING MATERIAL

1
2
3
4
5
6
7

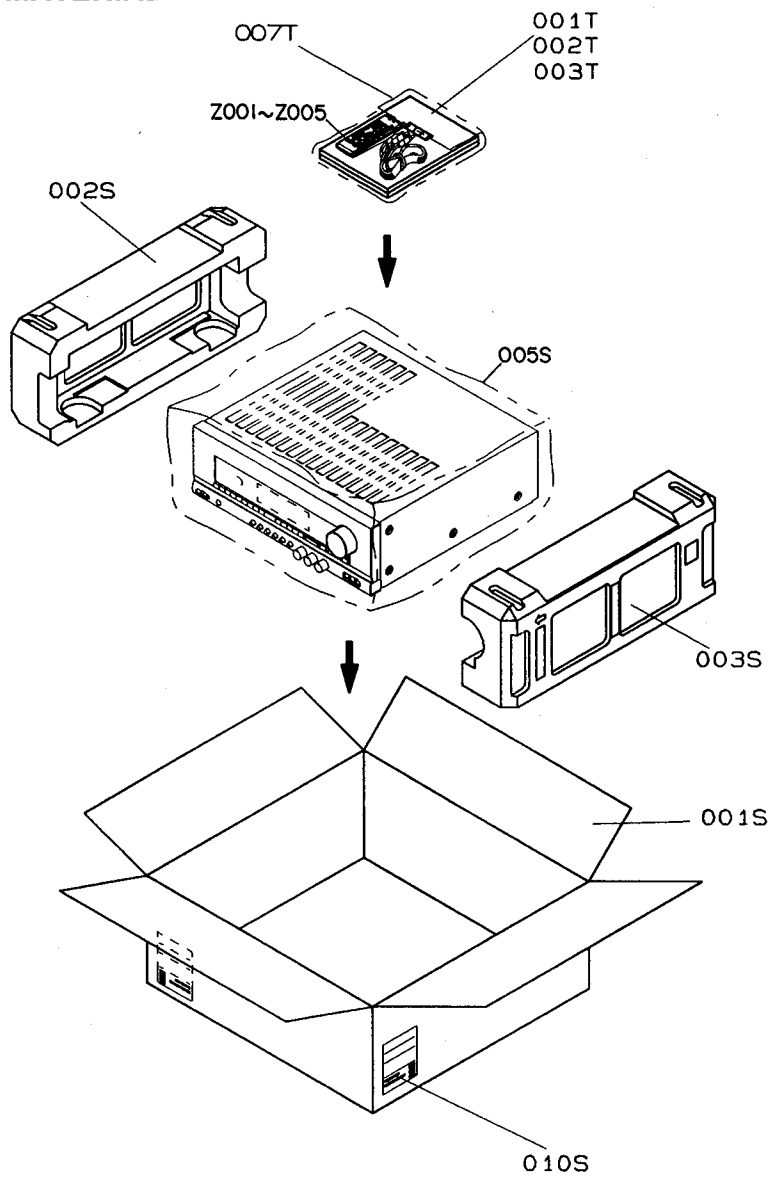

Ref. No.	Part. No.	Description	Q'TY
001S	259J801010	PACKING CASE IB	1
001S	259J801020	PACKING CASE BK	1
002S	260J809010	CUSHION, (L)	1
003S	260J809020	CUSHION, (R)	1
005S	9091111030	POLYETHY SHEET	1
010S	9510901260	LABEL	2
001T	259J851310	USER MANUAL IB (AVR70)	1
001T	259J851360	USER MANUAL IB [MOMS]	1
001T	259J851250	USER MANUAL BK (AVR70)	1
001T	259J851260	USER MANUAL BK (AVR70MK II)	1
002T	260J854010	WARRANTY CARD BK	1
003T	260J865010	CARD BK	1
007T	9012540010	POLYETHY BAG	1
Z001	ZK260J0010	UNIT KIT, REMOTE IB	1
Z001	ZK260J0020	UNIT KIT, REMOTE BK	1
Z002	ZF24302000	BATTERY, UM-4NEPH x 2	1
Z003	ZA02800020	EXT. ANTENNA FM IB	1
Z003	ZA02800070	EXT. ANTENNA FM BK	1
Z004	LA00065020	ANT COIL	1
Z005	YP90000310	PLUG BK	1