

MODEL 5121A  
ALIGNMENT SCOPE  
INSTRUCTION MANUAL

KIKUSUI ELECTRONICS CORP.

# Power Requirements of this Product

Power requirements of this product have been changed and the relevant sections of the Operation Manual should be revised accordingly.

(Revision should be applied to items indicated by a check mark )

Input voltage

The input voltage of this product is \_\_\_\_\_ VAC,  
and the voltage range is \_\_\_\_\_ to \_\_\_\_\_ VAC. Use the product within this range only.

Input fuse

The rating of this product's input fuse is \_\_\_\_\_ A, \_\_\_\_\_ VAC, and \_\_\_\_\_.

### WARNING

- To avoid electrical shock, always disconnect the AC power cable or turn off the switch on the switchboard before attempting to check or replace the fuse.
- Use a fuse element having a shape, rating, and characteristics suitable for this product. The use of a fuse with a different rating or one that short circuits the fuse holder may result in fire, electric shock, or irreparable damage.

AC power cable

The product is provided with AC power cables described below. If the cable has no power plug, attach a power plug or crimp-style terminals to the cable in accordance with the wire colors specified in the drawing.

### WARNING

- The attachment of a power plug or crimp-style terminals must be carried out by qualified personnel.



## CONTENTS

	Page
1. General .....	1
2. Specifications .....	2
3. Operation .....	3
3.1 Explanation of panel .....	3
3.2 Explanation of rear .....	5
3.3 Caution on operation .....	6
3.4 Operation .....	7
4. Maintenance .....	8
4.1 Adjustment of incline of trace .....	8
4.2 Internal adjustments .....	8
4.3 Hood assembly .....	10
4.4 Wiring of power transformer .....	11
4.5 Explanation of block diagram .....	12
5. Figures	
1. Front Panel and rear .....	14
2. Parts location .....	15
3. Block diagram .....	16

## 1. GENERAL

The MODEL 5121A is an alignment scope using a 12 inches CRT for TV. The vertical system provides a frequency bandwidth of DC ~ 10 kHz and a sensitivity of 1 mV/DIV. Horizontal system provides a sensitivity of 100 mV/DIV or more and a frequency bandwidth of DC ~ 1 kHz, and has LINE SWEEP. Bright trace is disappeared at no signal input to the horizontal axis, and markers of two types ( pulse marker and intensity-modulated marker ) are available.

The MODEL 5121A is usefull for adjustment of the production line of TV set, radio receiver and so on, as X-Y oscilloscope, for it has a broad screen, and very bright trace is obtained.

## 2. Specifications

Vertical axis	
Sensitivity	1mV/DIV, 10mV/DIV, 100mV/DIV, 1V/DIV in steps
Attenuation of sensitivity	Continuously variable up to 0 by VARIABLE
Frequency response	DC : DC ~ 10 kHz (-3dB, 1 kHz reference) AC : 3Hz ~ 10 kHz
Input resistance	Approximately 500 k $\Omega$
POSITION	Selected by INT $\leftrightarrow$ REMOTE
Horizontal axis	
Sensitivity	More than 100 mV/DIV
Attenuation of sensitivity	Continuously variable up to 0 by GAIN
Frequency response	DC ~ 1 kHz, (-3 dB 100Hz reference)
Input resistance	Approximately 500 k $\Omega$
LINE SWEEP	Variable phase shift 130°
Pulse marker	
Sensitivity and pulse width	1 Vp-p/DIV, 20 $\mu$ sec. or more
Attenuation of sensitivity	Continuously variable up to 0
Input resistance	Approximately 100k $\Omega$
Polarity of pulse	Positive and negative polarity selected
Intensity modulated marker	
Sensitivity and pulse width	1 Vp-p, 10 $\mu$ sec. or more
Polarity	Brightness is increased by positive and negative signal.
Scale	10DIV x 14DIV (1 DIV=14 mm (0.55 in.))
Distortion or linearity	Within $\pm 5\%$ of full scale (vertical and horizontal)
Orthogonality	Within 90° $\pm 2^\circ$ at the center of the graticule area
Insulation	DC 500V line and chassis more than 30M $\Omega$
Dimensions (max.)	430(435) W x 250(265) H x 350(390) D mm 16.9(17.1)W x 9.84(10.4)H x 13.8(15.4)D in.
Weight	Approximately 13.5 kg (29.8 lb.)
Power consumption	100V 50Hz approximately 50 VA
Accessories	Instruction manual 1 Model 942A terminal adaptor 2

### 3. OPERATION

#### 3.1 Explanation of Panel

POWER	When this switch is turned upward, power is turned on, lamp lights.
INTENSITY	Knob for adjustment of brightness of display. Brightness increases with clockwise rotation. The INTENSITY control circuit operates, when input signal is applied to the horizontal amplifier, and trace is appeared. When no input signal is applied to the H.INPUT, the INTENSITY can be adjusted by setting the LINE /EXT knob to the LINE SWEEP.
VERTICAL	
INPUT	Vertical input connector. Signal is fed to the vertical amplifier through the AC/DC selector and the VOLTS/DIV selector. Allowable maximum input voltage is 100 V.
AC/DC	Selector of method of the coupling input signal to the vertical amplifier. In AC position, DC component of input signal is blocked by a capacitor, and only the AC component can be measured. In DC position, input signal is directly applied to the vertical amplifier through attenuator, and all components of the input signal can be observed.
VOLTS/DIV	Sensitivity selector. 1 mV/DIV, 10 mV/DIV, 100 mV/DIV and 1 V/DIV are selected in steps. 1 mV/DIV and 10 mV/DIV are selected in the vertical amplifier, and 100 mV/DIV and 1 V/DIV are selected by attenuators.
VARIABLE	Control for sensitivity of vertical axis. Sensitivity is continuously variable, and it increases with clockwise rotation. Sensitivity is calibrated in the fully clockwise position, and it is attenuated to zero in the fully counterclockwise position ( CAL position ).

- ↕ POSITION Knob for control of vertical position of trace. It shifts upward with clockwise rotation, and downward with counterclockwise rotation.
- ⊗ DC BAL A semi-fixed resistor for DC balance of vertical amplifier. It must be adjusted so as not to shift a trace, when VOLTS/DIV is turned to 1 mV/DIV from 10 mV/DIV.
- HORIZONTAL
- LINE/EXT Internal LINE SWEEP or external sweep signal is selected by this knob as a horizontal input signal.
- LINE : A sine-wave signal from line supply is applied to the horizontal amplifier, after its phase is controlled.
- EXT : A sweep signal from external signal generator must be applied to the H INPUT terminals on rear panel.
- PHASE In the LINE SWEEP position described above, phase can be controlled by this knob.
- ↔ POSITION Knob for control of horizontal position of trace. It shifts rightward with clockwise rotation and leftward with counterclockwise rotation.
- FOCUS Knob for a sharp and well-defined trace or spot.

### 3.2 Explanation of Rear Panel

- REMOTE/INT The vertical position of trace can be controlled by the VERT POSITION knob from the front panel and external signal from the REMOTE connector. Select the method desired by this selector.
- REMOTE It is possible to adjust vertical position from outside by connecting an external variable resistor with 50 k $\Omega$  B with the REMOTE connector. See CIRCUIT DIAGRAM for how to connect the connector pins.
- H INPUT Horizontal input terminal. It is a BNC connector, and sweep signal is applied to it from sweep generator.
- GND Ground terminal.
- PULSE / INTEN  
MARKER / MODU Marker selector for selecting pulse marker or intensity-modulated marker.

#### PULSE MARKER

- POLARITY Selector for selecting pulse marker polarity. Marker polarity on the CRT screen can be inverted.
- AMPLITUDE Knob for adjusting amplitude of pulse marker. Amplitude of pulse marker input signal is continuously variable.
- MARKER INPUT Input terminal for pulse marker.

#### INTEN MODU

- BRIGHTNESS Brightness of intensity-modulated marker is continuously variable.
- MARKER INPUT Input terminal for intensity-modulated marker.



### 3.3 Caution on Operation

1. When the horizontal trace on the CRT screen is not parallel to the horizontal graticule line, adjust it by turning the deflection yoke, after loosening a screw. ( See 5.2 Parts Location )
2. To protect the CRT screen from phosphor burns, spot blanking circuit ( spot killer ) operates, when no input signal is fed to the horizontal amplifier. In this case, brightness of spot is decreased, and spot is disappeared. But, if the INTENSITY knob is set near maximum clockwise position, bright spot may be appeared. If the condition described above is kept for a long time, the CRT phosphor may be burned. If the input signal being fed to the horizontal amplifier is suddenly cut off, when the INTENSITY knob is in about maximum position, the horizontal amplitude becomes minimum. As there exists a certain period of time until the disappearance, the CRT phosphor is burned. In such operation as described above, therefore, it is desirable to keep the INTENSITY knob in the minimum position.
3. When the VARIABLE knob is set in the maximum clockwise position, sensitivity of vertical amplifier is calibrated.
4. Allowable vertical input voltage is 100 V ( DC+ACpeak ).
5. Supply line voltage required is 100V nominal. It can be changed to 110 V, 117V, 200 V, 220 V and 234 V by wiring of power transformer. ( See 4.4 Wiring of Power Transformer. )

### 3.4 Operation

1. Turn the POWER switch to ON.
2. Set the LINE/EXT switch to LINE, and turn clockwise the HOR GAIN knob. Turn clockwise the INTENSITY knob. A horizontal trace will be appeared.
3. Adjust the INTENSITY knob and the FOCUS knob for optimum display definition.
4. Turn the REMOTE/INT switch on the rear to the INT, and adjust the VERTICAL POSITION knob for optimum display position of a trace.
5. Connect a input signal to the VERTICAL INPUT terminal, and turn clockwise the VARIABLE knob. A trace is appeared.
6. Adjust the phase of the LINE sweep by the PHASE knob.
7. When marker signal is utilized, connect a marker signal to the MARKER INPUT on the rear, and select the PULSE MARKER or the INTEN MODU. Adjust the AMPLITUDE knob or the BRIGHTNESS knob for the optimum display definition, after the marker signal is appeared.
8. When external sweep is used, a sweep signal must be applied to the H INPUT on the rear. Turn the LINE/EXT selector on the front panel in the external position, and adjust the HOR GAIN knob for the desired sweep width on the CRT screen.

## 4. Maintenance

### 4.1 Adjustment of Trace Alignment

Set the LINE/EXT selector to the LINE position, and apply no input signal to the vertical input position a trace to the horizontal center.

If the trace is not parallel to the horizontal graducule line, adjust the CRT as follows.

- (1) Remove the top plate from housing.
- (2) After loosening the clamp screw of the deflection yoke at the neck portion of the CRT, Turn it so that the trace is parallel to the horizontal graticule line.
- (3) Carefully push the yoke toward the front of the CRT. Fix the yoke, after closely attaching it by the clamp screw.

#### Warning

- a) Do not move the centering magnet and the magnet or compensation of the yoke.
- b) Be careful, for high accelerating voltage is provided to the CRT.
- c) Be carefully so as not to give it any strong shock for impulse, for the neck portion of the CRT is mechanically weak .

### 4.2 Adjustment of internal parts ( Refer to 5-2 parts location )

Adjust in order of following procedure, when any of parts is replaced or any of characteristics does not meet specified requirement. Some adjustments marked \* must be adjusted , only when relative parts are replaced.

- (1) -15 V ADJ            Adjust it for  $-15\text{ V} \pm 0.2\text{ V}$
- (2) +15 V ADJ            Adjust it for  $+15\text{ V} \pm 0.2\text{ V}$
- (3) INTEN ADJ            Adjust it so that trace is dimly appeared in the position of approximately  $1/3$  turns of the INTENSITY knob on the front panel from the maximum counterclockwise position.
- (4) H. CENTER ADJ        Set the HOR.POSITION knob in the center position, and adjust the H.CENTER ADJ so that spot is in the horizontal center.

\* (5) H.BIAS ADJ

Adjustment for control of current in final transistor of horizontal amplifier or compensation of horizontal linearity, and position the spot to horizontal graticule center, and measure the voltage across the resistor (  $10\Omega$  ) in series to emitter.

Adjust the H.BIAS ADJ for 2.0 V ~ 2.2 V (approximately 200mA of emitter current). Make the horizontal trace 3 DIV at the graticule center.

Confirm the amplitude of the horizontal trace is not largely changed at the right end or the left end. When moving it right and left.

\* (6) LINEARITY ADJ

Adjustment for compensation of linearity of horizontal deflection.

Adjust the linearity of the horizontal trace on the CRT screen.

(7) V.CENTER ADJ

Set the VOLTS/CM switch to 10mV/DIV, and set the VERT POSITION knob to approximately center. Adjust the V.CENTER ADJ so that spot is in the approximately vertical center.

\* (8) V.BIAS ADJ

Adjustment for control of current on final transistor of the vertical amplifier or compensation of vertical linearity. Set the VOLT/DIV to the 10 mV/DIV, and position spot to the vertical graticule center. Measure the voltage across the resistor (  $2.2\Omega$  ) in series to emitter, and adjust the V.BIAS ADJ for 0.66 V ~ 0.7 V (approximately 300 mA of emitter current).

Make the vertical trace a few DIV at the graticule center. Confirm that the amplitude of the vertical trace is not largely changed at the upper end or the lower end, when moving it right and left.

(9) ⊗ DC BAL

Adjust the DC BAL so that the trace does not shift, when turning the VOLT/CM switch to the 1 mV/DIV from the 10mV/DIV. Variable range of DC BAL is approximately  $\pm 5$  DIV.

Adjust either of the resistors (  $33k\Omega$  ) connected across the DC BALANCE, so that the DC BAL can be adjusted at the approximately center position of it, When the some relative parts are replaced.

(10) V.GAIN

Adjustment for sensitivity of the 10 mV/DIV range. Turn the VARIABLE knob to the CAL position and adjust the V.GAIN

(11) V. x10 GAIN

Adjustment for sensitivity of the 1mV/DIV range. Turn the VARIABLE knob to the CAL position, and adjust the V. x 10 GAIN.

(12) INTEN MODU ADJ

Adjust the INTEN MODU ADJ so that modulation by positive intensity-modulated marker signal is the same modulation as modulation by negative signal, when amplitude of positive signal is the same amplitude as negative signal.

4.3 Hood assembly

The hood which is OPTION of the Model 5121A is used to shield the CRT screen against light incident from above. Refer to the bellow illustration to assemble the hood.

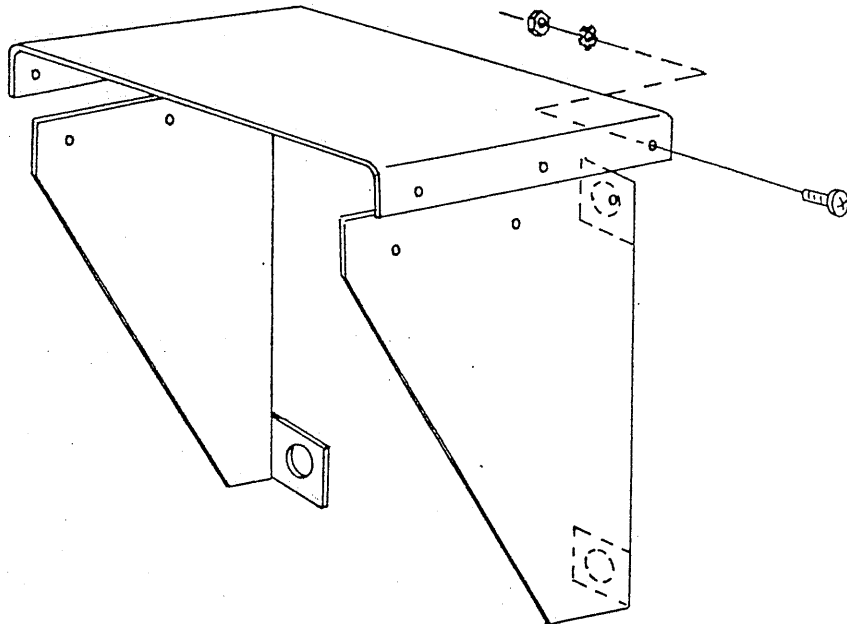


Fig. 1 Hood assembly

#### 4.4 Wiring of Power Transformer

The Model 5121A can be operated under the fluctuating range of the voltage within  $\pm 10\%$  in the specified supply line voltage.

It can be operated at the voltage within  $\pm 10\%$  in 110V, 117V, 200V, 220V and 234V by changing the wiring of power transformer.

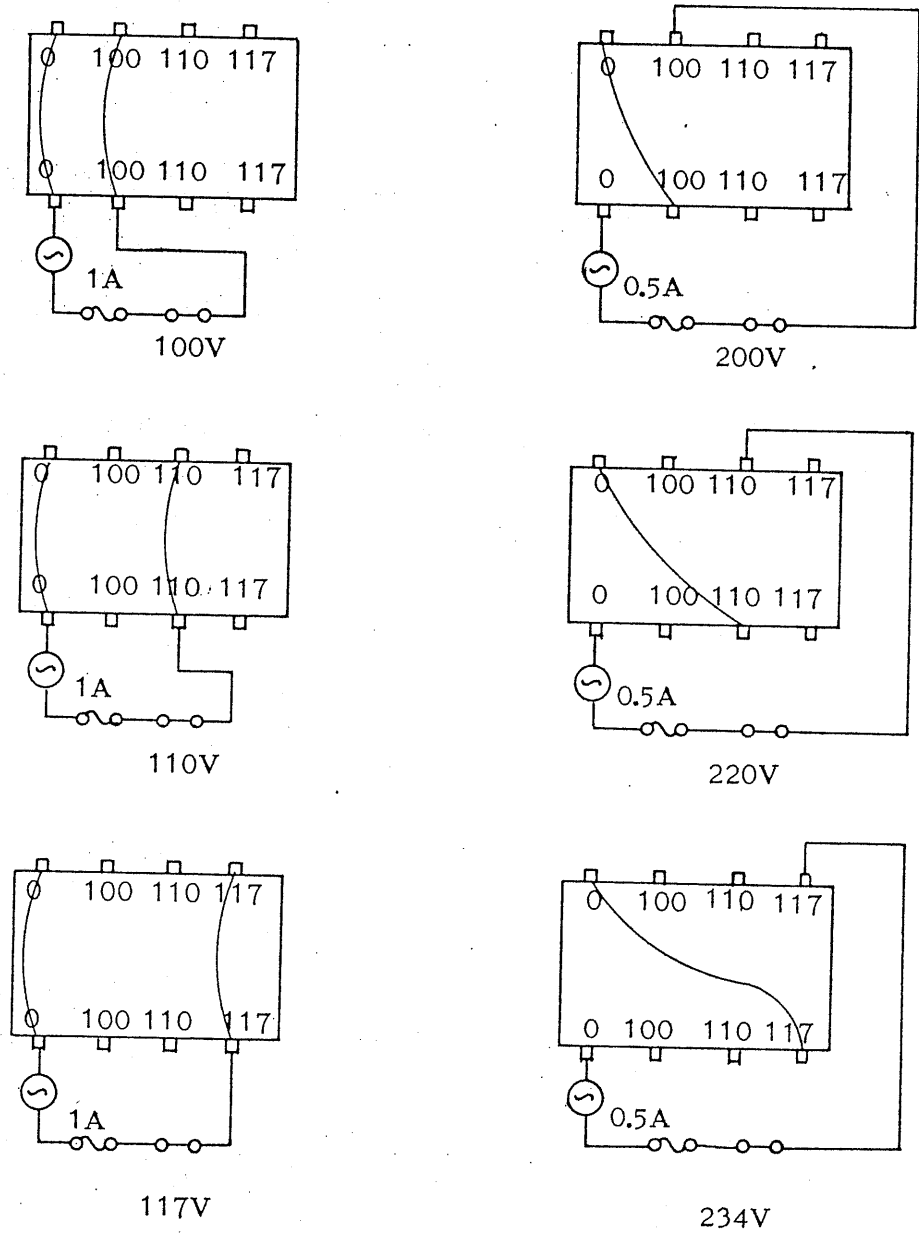


Fig. 2 Wiring of Power Transformer

#### 4.5 Explanation of Block Diagram

( Refer to Block Diagram and Circuit Diagram )

##### 1. Vertical axis

Vertical input signal is connected to differential amplifier via the AC/DC selector, the VOLTS/DIV selector (1mV/DIV, 10mV/DIV, 100mV/DIV, 1 V/DIV ), and the VARIABLE knob ( variable up to 0 from CAL position) Amplifier gain can be calibrated at the 1 mV/DIV and the 10mV/DIV, and the current at the final stage of approximately 300mA is controlled.

##### 2. Horizontal axis

The EXT sweep and the LINE sweep are available by a selector for the horizontal axis, the line sweep is operated by the internal waveform.

The PHASE knob on the front panel must be adjusted so that the phase of the internal line sweep coincides with the phase of a signal measured. Input signal is connected to a differential amplifier via the GAIN control. ( It can be attenuated up to 0. )

The amplifier has a constant gain, and controls approximately 200 mA at final stage.

Linearity of horizontal deflection can be compensated by a varistor and a variable resistor.

##### 3. Blanking Spot circuit

Blanking spot circuit detects a horizontal signal, and controls a beam of electron by first grid of the CRT.

The trace is bright, when input signal is applied to the horizontal axis, and the trace is disappeared at no signal input. However, when the INTENSITY knob is adjusted near the maximum clockwise position, a spot may be appeared, although brightness decreases with operation of the circuit.

Refer to ' Caution on operation ' to protect the phosphor of the CRT screen from burning of it.

##### 4. A pulse marker is applied to the vertical amplifier via an attenuator for marker. Polarity of the marker on the CRT screen is changed by using the pulse marker polarity selector.

5. Intensity-modulated marker

The intensity-modulated marker signal is amplified by the amplifier via an attenuator, and it controls the cathode voltage of the CRT. Brightness automatically increases, when the marker signal is applied even if it is not only positive polarity but also negative polarity.

6. High Voltage Generator



High voltage generator is built in a high voltage unit.

A signal with a frequency of approximately 35 kHz is produced from +15 V power supply, and stepped up.



Therefore, the voltage of approximately 6.5 kV is generated for accelerating beam of the CRT.




Front Panel and Rear

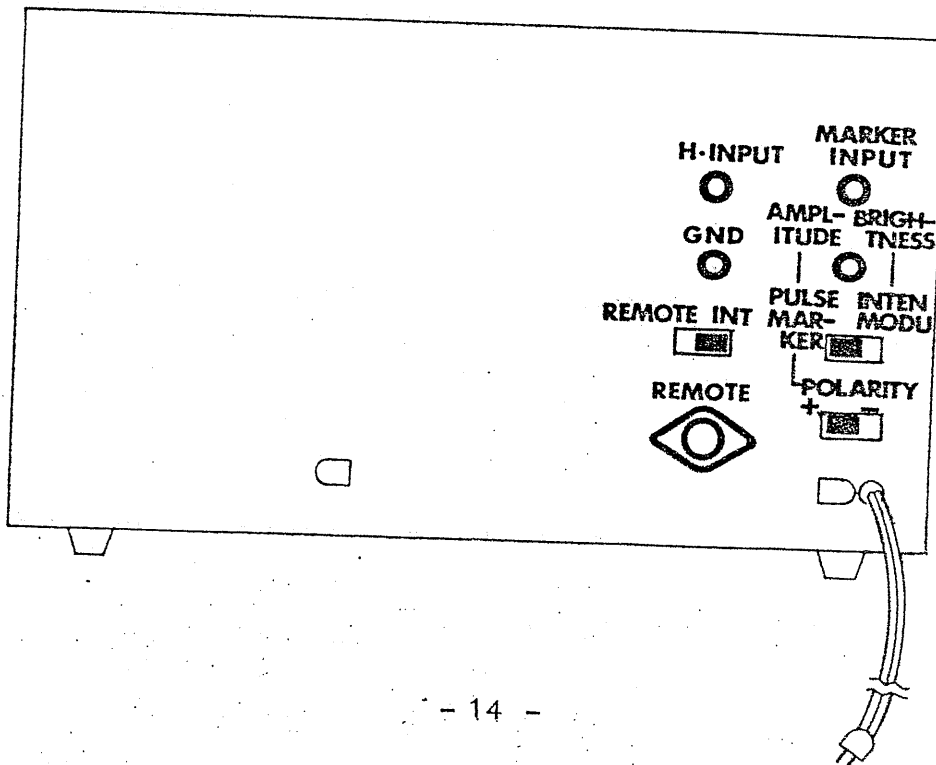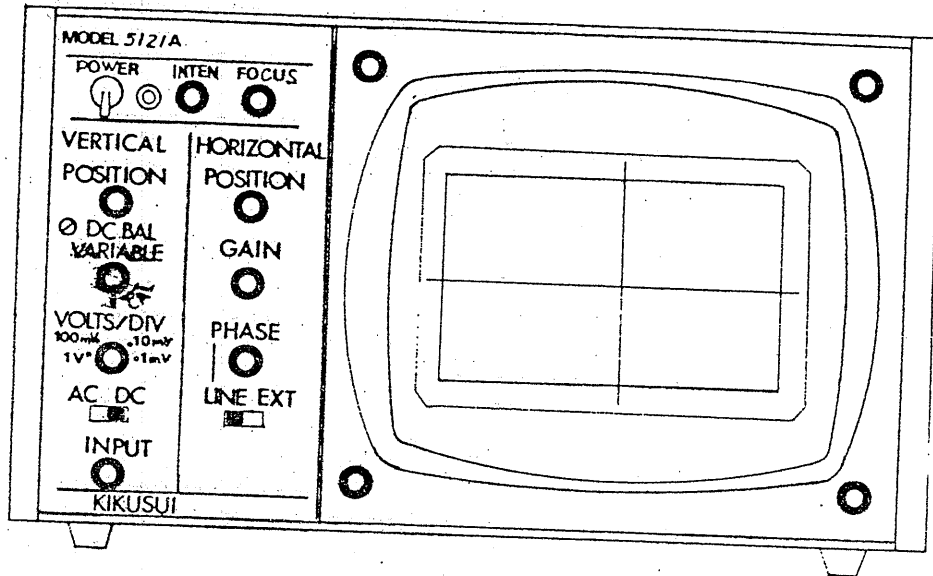

Parts location

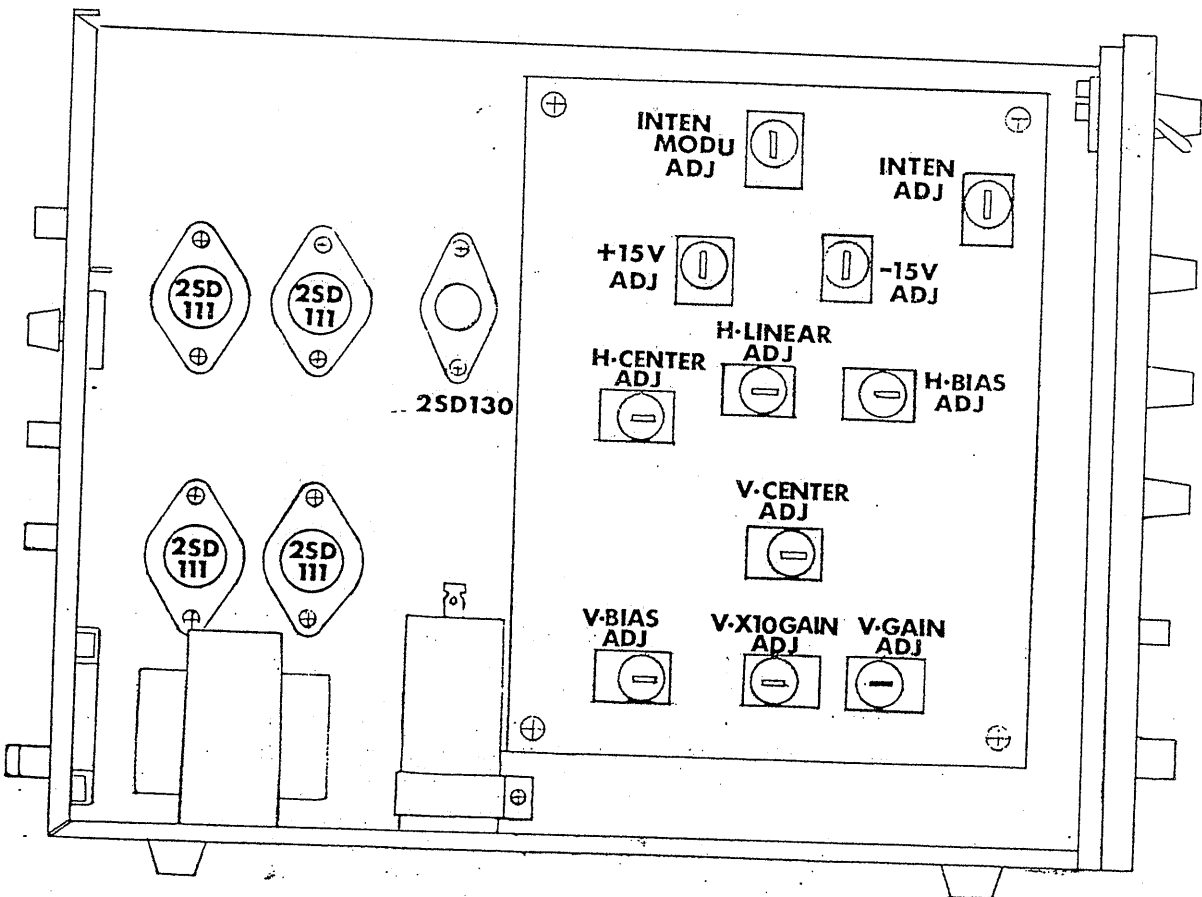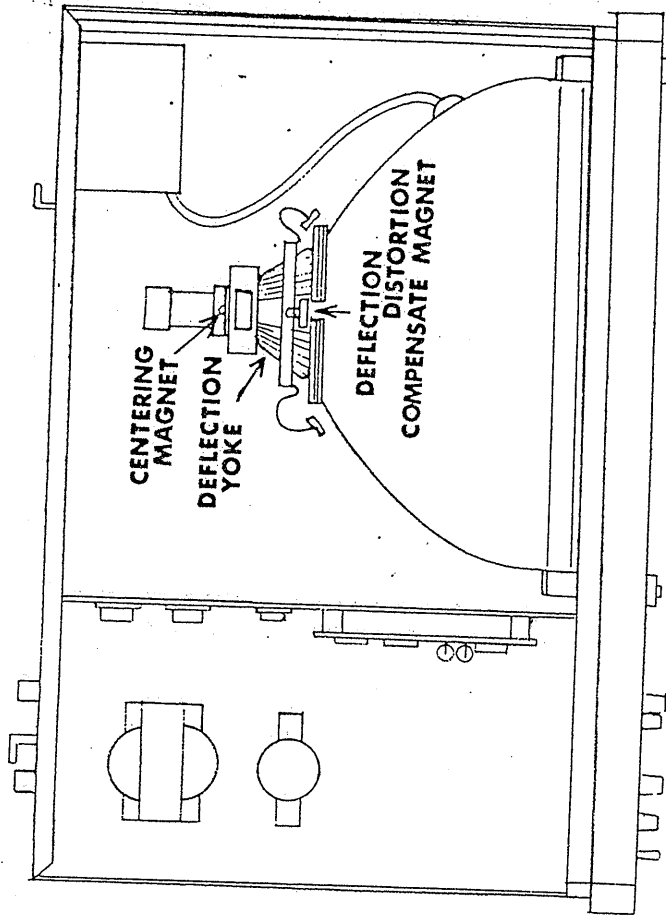

178.12.19 泰西

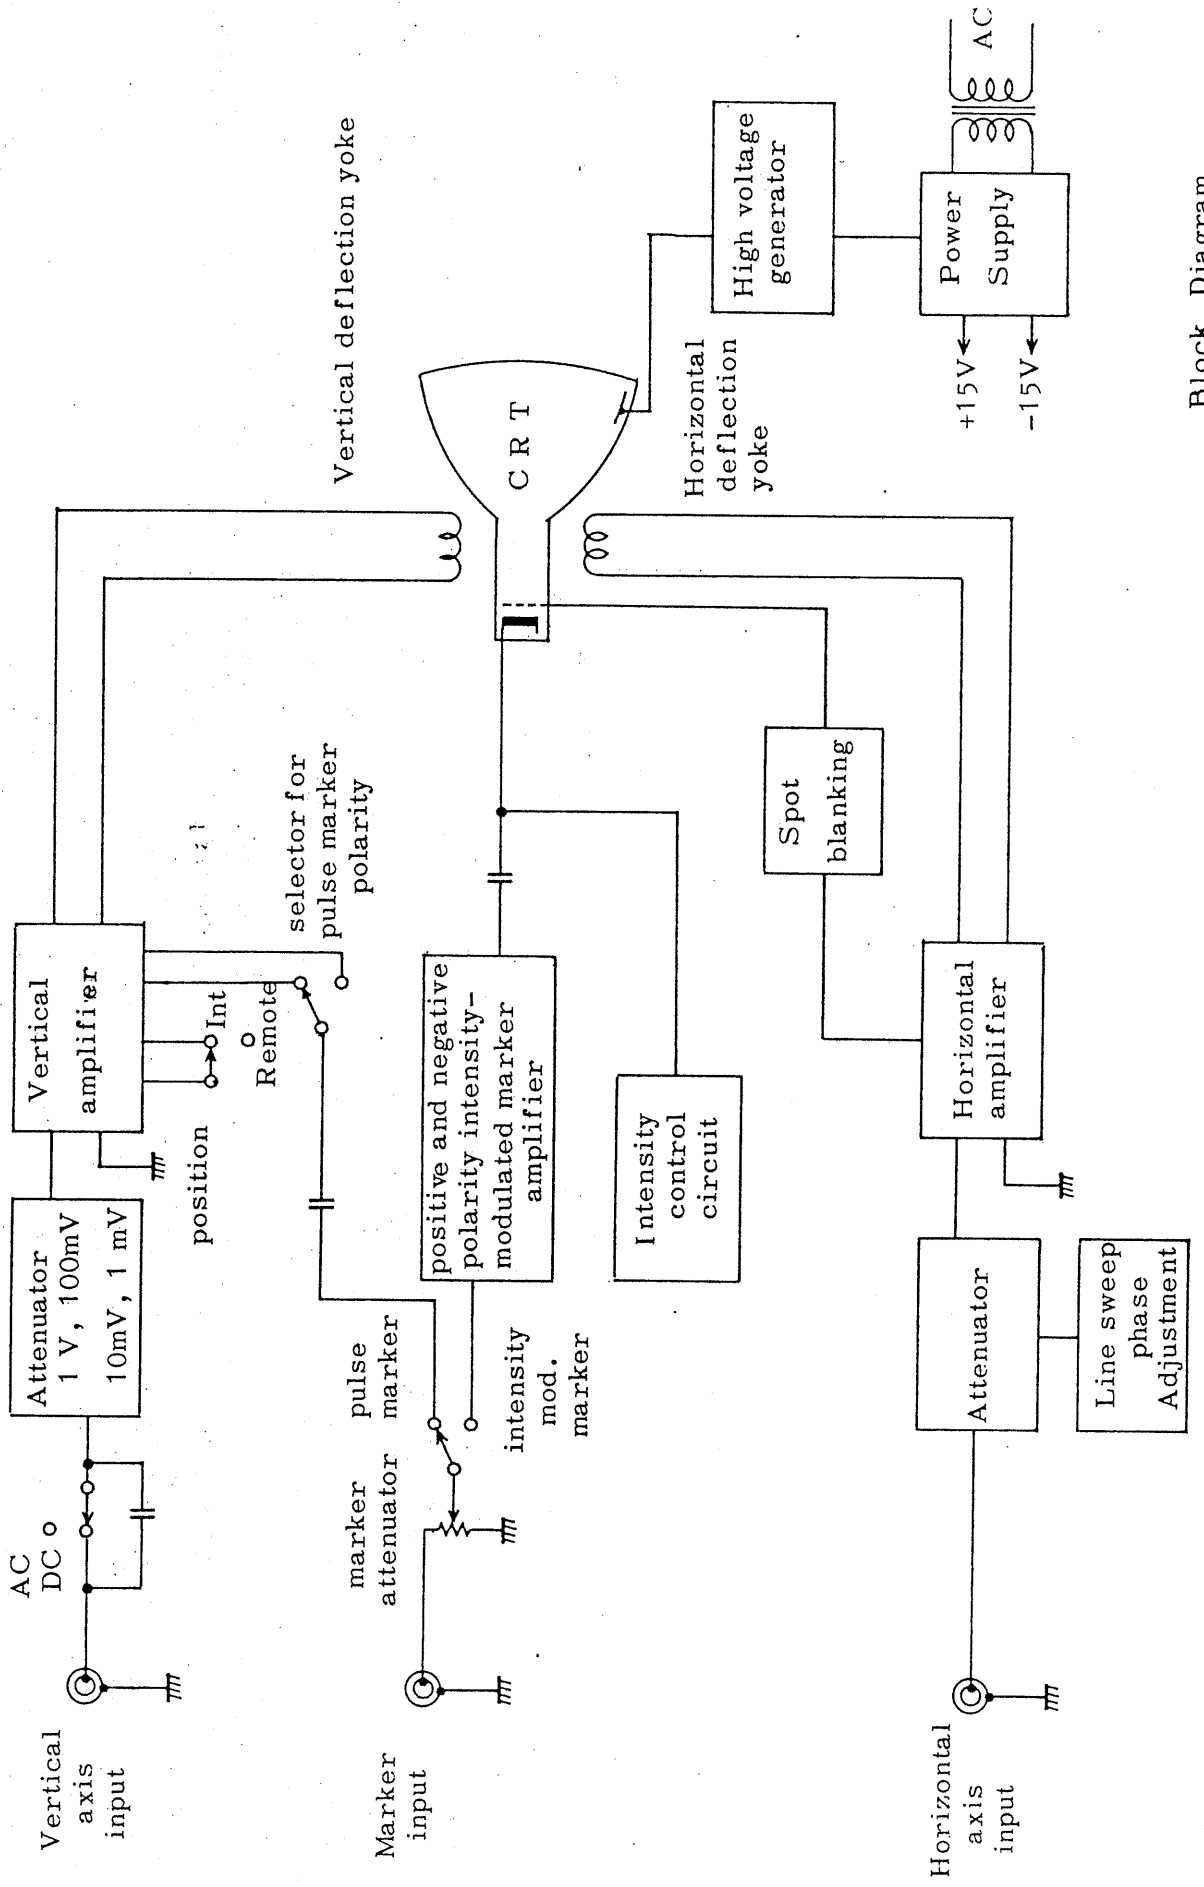

Block Diagram