

INSTRUCTION MANUAL

X-Y DISPLAY

MODEL COS1711

KIKUSUI ELECTRONICS CORPORATION

TABLE OF CONTENTS

	<u>PAGE</u>
1. GENERAL	1
2. SPECIFICATIONS	2
3. PRECAUTIONS BEFORE USE	5
4. DESCRIPTION OF PANELS	6
5. OPERATION METHOD	9
6. MAINTENANCE AND STORAGE	10
7. BLOCK DIAGRAM	11
8. OPTIONS	12

8438556

1. GENERAL

Kikusui Model COS1711 X-Y Display is a wide-bandwidth X-Y display with frequency response of DC - 5 MHz (-3 dB) for all of X, Y and Z axes. It employs a 7-inch rectangular domed-mesh post-acceleration CRT. It is of a half-rack size and can be readily installed on a standard rack. Its outstanding features are as follows:

(1) High stability and low drift:

All stages employ differential circuitry, thereby reducing drift caused by temperature change.

(2) Linear and dynamic focus control:

Once the beam spot is adjusted to an optimal focus, this state is automatically maintained regardless of intensity change and sharp traces are displayed even at the corners of the CRT screen.

(3) High intensity CRT:

The CRT is a rectangular type with an effective screen size of 109 mm × 134 mm. It is a high intensity type with a high beam transmission factor and it operates on a high acceleration voltage of approximately 18 kV, displaying bright and sharp traces optimal for viewing and photographing.

(4) Switching power supply:

The switching power supply circuit operates on an AC line voltage within a range of 90 - 264 V AC, without requiring to modify the power input circuit depending on AC line voltages unlike the conventional types of power supply circuits. This has made the COS1711 lighter and consume less power.

(5) Various optional features:

Various optional features such as rack mount, 1/2, 1/5 or 1/10 attenuator, 50-ohm input impedance, persistent-image CRT, internal graticule, and graticule illumination are available to make the COS1711 best suit your requirements.

2. SPECIFICATIONS

(1) Horizontal (X) Axis and Vertical (Y) Axis

Item	Specification	Remarks
Deflection Sensitivity	80 - 200 mV/DIV (Adjustable with front panel control)	1/2, 1/5, or 1/10 attenuator optional
Frequency Bandwidth	DC - 5 MHz (within -3 dB)	50 kHz With reference to 5 DIV
Rise Time	70 ns or faster	
Settling Time	Settled within 5 μ s to final spot location	
Linearity	5% or better	For 2-DIV deflection at any point on CRT
Phase Shift	Not greater than 3 degrees (up to 1 MHz)	
Input Impedance	1 M Ω \pm 2%, approx. 45 pF	50-ohm input optional
Allowable Input Voltage	\pm 50 V (DC + AC peak) (AC frequency not higher than 1 kHz)	When in 50-ohm input: \pm 3.5 V (DC + AC peak)
Dynamic Range	\pm 10 DIV or more from center of CRT	
Crosstalk	Not greater than 0.05 V	When one input is 50-ohm terminated and 1 V _{p-p} (500 kHz) is applied to the other input
Drift	Not greater than 0.1 DIV/hour	After 15 minutes of warm-up time

843858

(2) Z Axis

Item	Specification	Remarks
Input Sensitivity	0.5 - 2 V (positive polarity for brighter trace) Set at maximum sensitivity when shipped	1/2, 1/5, or 1/10 attenuator optional
Frequency Bandwidth	DC - 5 MHz	
Rise Time	70 ns or faster	
Input Impedance	1 M Ω \pm 2%, approx. 45 pF	50-ohm input optional
Allowable Input Voltage	\pm 50 V (DC + AC peak) (AC frequency not higher than 1 kHz)	When in 50-ohm termination: \pm 3.5 V (DC + AC peak)

(3) CRT

Item	Specification	Remarks
Type	7-inch rectangular, flat type	
Effective Screen Size	100 mm \times 121 mm	
Phosphor	P31	P7 optional
Acceleration Voltage	Approx. 18 kV	
Beam Spot Size	0.45 mm with beam current 0.5 μ A	At center of screen
Graticule (External graticule standard)	8 DIV \times 10 DIV	Internal graticule optional


843859

(4) AC Line Requirements

Item	Specification	Remarks
Operable Voltage Range	90 - 264 V	
Frequency	50 or 60 Hz	
Power Consumption	Approx. 35 VA	

(5) Mechanical Specifications

Item	Specification	Remarks
Dimensions of Casing	214 W × 133 H × 400 D mm (8.43 W × 5.24 H × 15.75 D in.)	
Dimensions Including Extrusions	216 W × 149 H × 430 D mm (8.50 W × 5.87 H × 16.9 D in.)	
Weight	Approx. 7.2 kg (15.9 lbs)	

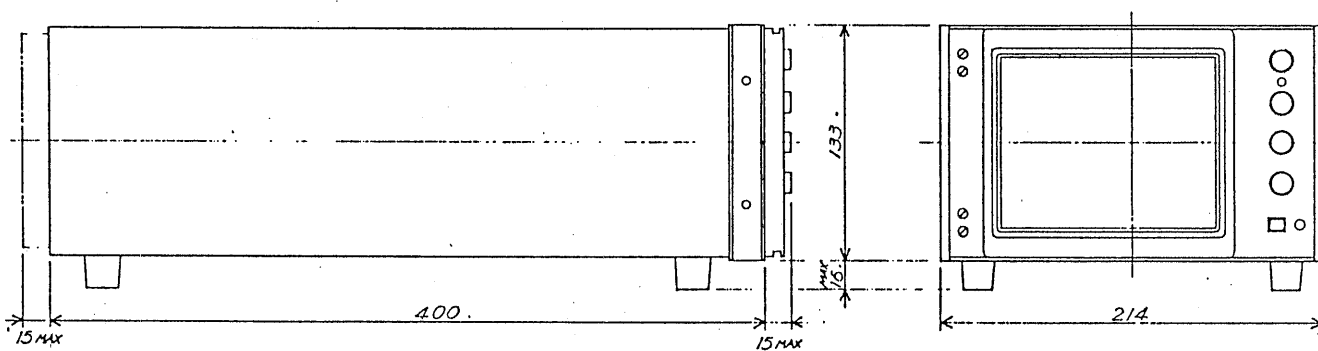

(6) Ambient Temperature and Humidity

To satisfy specifications: 0 to 40°C (32 to 104°F), 90% RH

Maximum operable range: -10 to 45°C (14 to 113°F), 95% RH

(7) Accessories

- Power cord 1
- Instruction manual 1
- Fuse 0.5A(S.B) 1

85, 12, 10 843860B

3. PRECAUTIONS BEFORE USE

(1) Unpacking the Instrument

Upon receipt of the instrument, please unpack and inspect it for any damage which might have been sustained during transportation. If any sign of damage is found, please notify the bearer or the dealer.

(2) Checking the AC Line Voltage

The instrument operates on an AC line voltage within the range shown below, with line frequency 50 or 60 Hz. Be sure to check the line voltage before connecting the AC power cord to an AC line outlet. Note that the instrument may not operate normally or may be damaged if the voltage is not within this range.

Operating Voltage Range	Fuse
90 - 264 V	0.5A(S.B)

(3) Environment

The operable temperature range of the instrument is -10°C to 45°C . Operation of the instrument outside of this range may cause damage to the instrument.

It is not recommendable to operate the instrument in a strong electric or magnetic field since such will adversely affect the measurement.

(4) CRT Intensity

In order to protect your eyes and prevent permanent damage to the CRT, do not make the CRT trace excessively bright or leave the spot stationary for more than a few moments.

(5) Maximum Allowable Input Voltages


The maximum allowable input voltages of all of the X, Y and Z axes are 50 V (DC + AC peak; AC frequency not higher than 1 kHz).

Note that, when the input terminals are 50-ohm terminated, the maximum allowable input voltages are 3.5 V (DC + AC peak).

85. 12. 10
843861A

4. DESCRIPTION OF PANELS

(1) Description of Front Panel

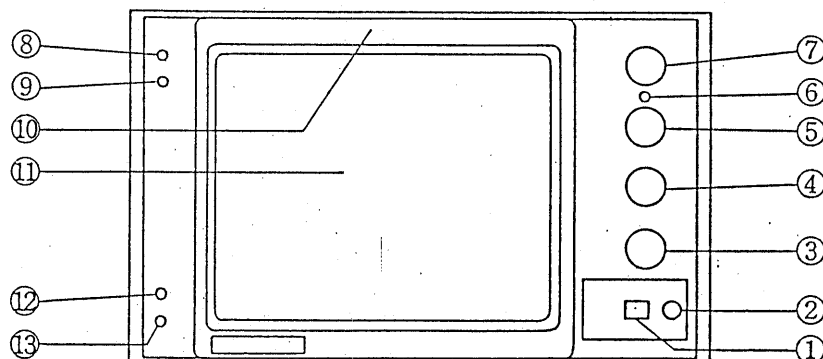

o Power Switch and CRT Circuits

- Power ① Main power switch of the instrument. When this switch is turned on, LED lamp ② illuminates.
- FOCUS ⑤ For focussing the trace to the sharpest image.
- ILLUM (optional).. ⑥ Graticule illumination adjustment
- INTEN ⑦ Controls the brightness of the spot or trace.
- TRACE ROTATION ... ⑧ Potentiometer (screwdriver adjustment type) for aligning the trace in parallel with graticule lines.
- ASTIG ⑨ Astigmatism control (screwdriver adjustment type of potentiometer). To be adjusted so that the beam spot becomes a true circle after adjusting it with the FOCUS control ⑤.
- Bezel ⑩ For mounting a camera in one-touch operation.
- Filter ⑪ For easy viewing of displayed waveform. Can be removed in one-touch operation.


843862

o Horizontal (X) and Vertical (Y) Circuits

- X-POSITION (4) Horizontal position control of spot or trace.
 Y-POSITION (3) Vertical position control of spot or trace.
 X-GAIN (12) X-axis deflection sensitivity control (screw-driver adjustment type of potentiometer) for 80 - 200 mV/DIV.
 Y-GAIN (13) Y-axis deflection sensitivity control (screw-driver adjustment type of potentiometer) for 80 - 200 mV/DIV.

Note: If an optional attenuator is provided, refer to the items for the options.

(2) Description of Rear Panel

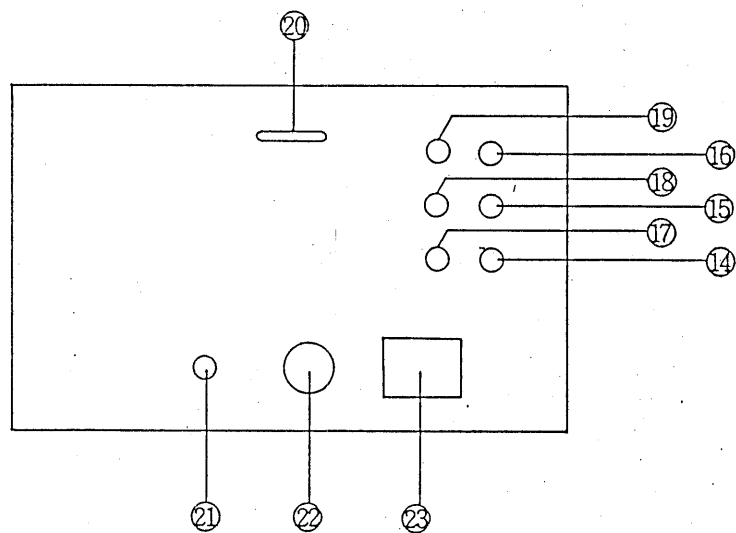

o X, Y, and Z Axis Circuits

- X⁺ AXIS INPUT (16) Positive input terminal of X axis.
 Y⁺ AXIS INPUT (15) Positive input terminal of Y axis.
 Z⁺ AXIS INPUT (14) Positive input terminal of Z axis.

843863

(Optional)

- X⁻ AXIS INPUT (19) Negative input terminal of X axis.
- Y⁻ AXIS INPUT (18) Negative input terminal of Y axis.
- Z⁻ AXIS INPUT (17) Negative input terminal of Z axis.

o AC Power Input Circuit

Fuse (22) Fuse (1 ampere) in the primary circuit.

AC power input connector 23

Connector for AC input power. Connect the AC power cord (supplied) to this connector.

o Others







Serial No. (20) Instrument identification number. (When ordering for service, please indicate this number.)

GND (21) Ground terminal.

843864

5. OPERATION METHOD

- (1) Set the switch and controls as shown in the following table.

Switch or Control	Setting		
POWER	①		OFF state
INTEN	⑦		3 o'clock position
FOCUS	⑤		Mid-position
ILLUM (optional)	⑥		Counterclockwise position
X-POSITION	④		Mid-position
Y-POSITION	③		Mid-position


- (2) After connecting the switch and controls as above, connect the power cord to an AC line outlet.
- (3) Turn on (☐) the POWER switch ① and confirm that the LED lamp ② turns on. A beam spot will appear in the center of the CRT in approximately 20 seconds. If no beam spot appears even when approximately 60 seconds has elapsed from the above, repeat the procedure starting by (1).
- (4) Adjust the beam spot to an appropriate brightness and sharpest image by means of the INTEN control ⑦ and FOCUS control ⑤. Adjust the beam spot to a round shape with the ASTIG control ⑨.
- (5) Apply an input signal to the X⁺ AXIS INPUT terminal ⑬ or Y⁺ AXIS INPUT terminal ⑭, and adjust the trace in parallel with the graticule lines by means of the TRACE ROTATION control ⑧.

Note: As you change the location or direction of the instrument, the horizontal and/or vertical trace setting may be disturbed due to terrestrial magnetism and other causes. Re-adjust the setting as above.

843865

6. MAINTENANCE AND STORAGE


- (1) The instrument employs a number of precision components and high voltage components. Exercise care and pay attention when transporting or storing the instrument.
- (2) To clean the filter and CRT screen surface, remove the filter and graticule as illustrated below. Use a clean, soft cloth to wipe off dust from the surfaces of these components.

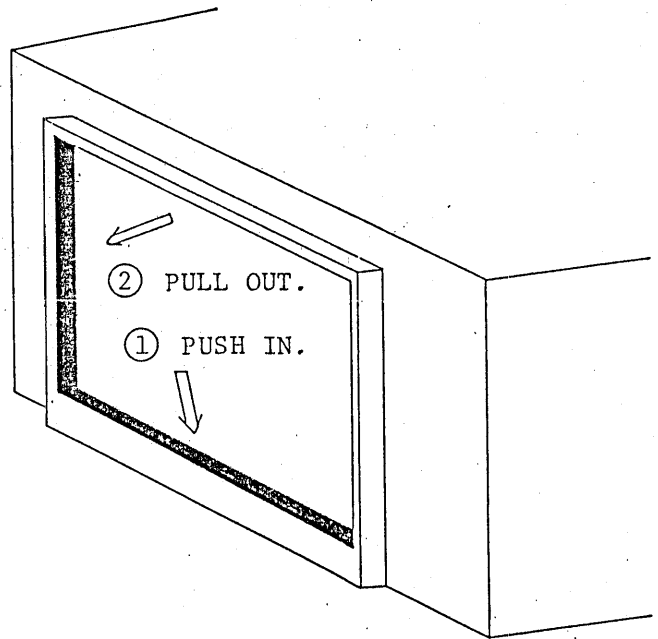

843866

843867

7. BLOCK DIAGRAM

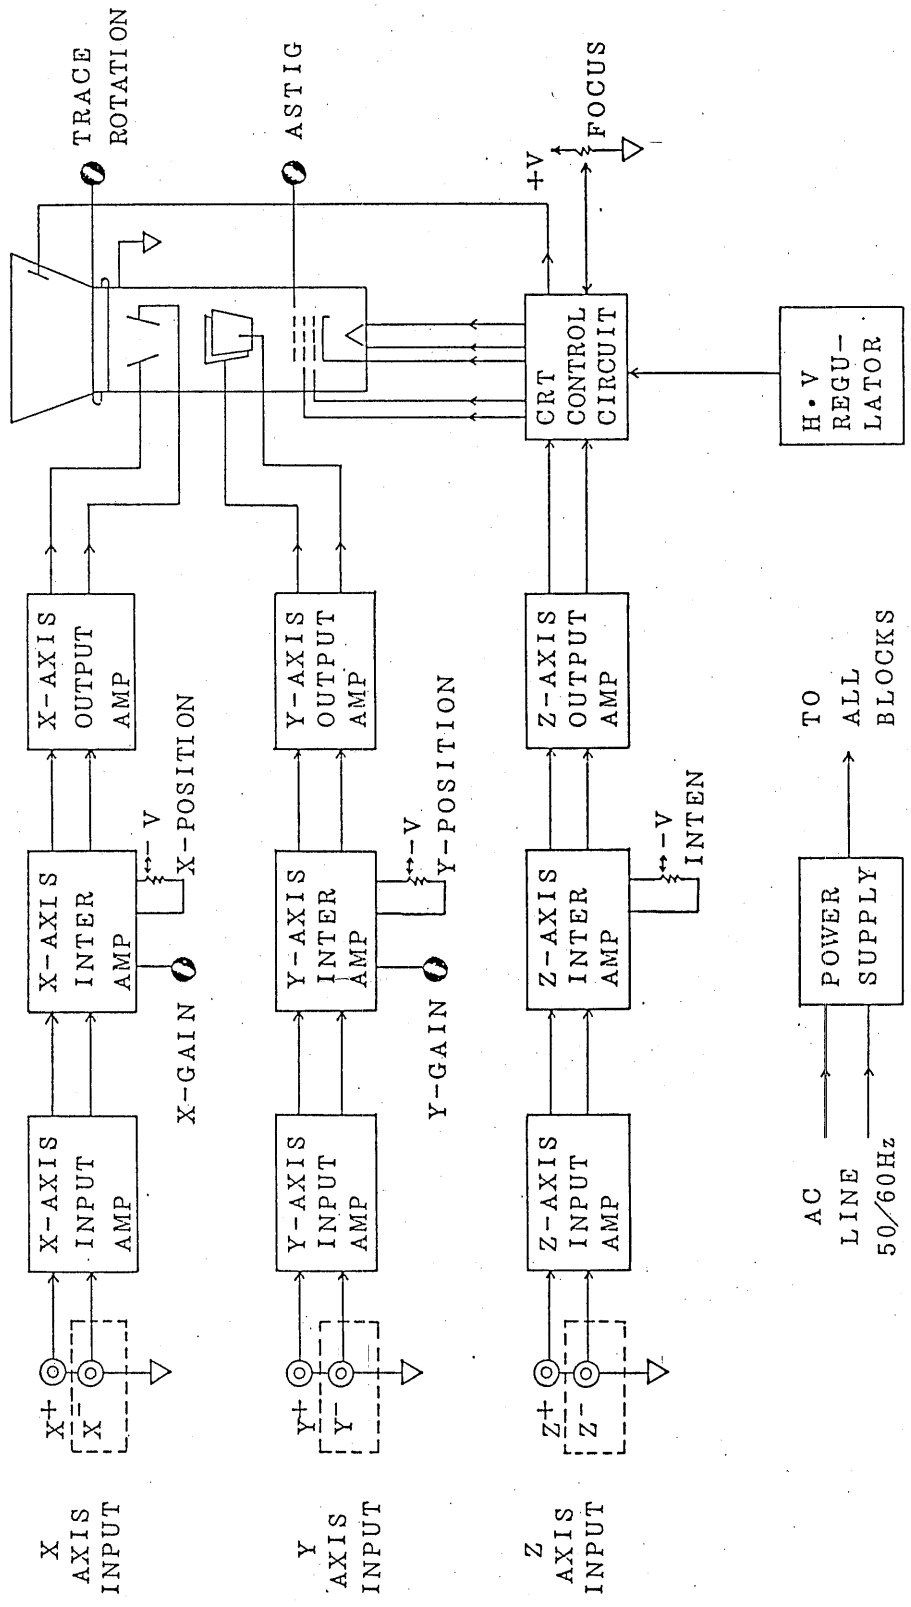


8. OPTIONS

(1) Rack Mount

The instrument is of an internationally standardized half-rack size (214 mm wide and 133 mm high). One or two units of instruments can be installed on a standard rack by using the rack mount brackets (optional). It also is possible to install the instruments without their casings.

o Mounting Method

Remove plates 1 and 2, and install brackets 1 and 2.

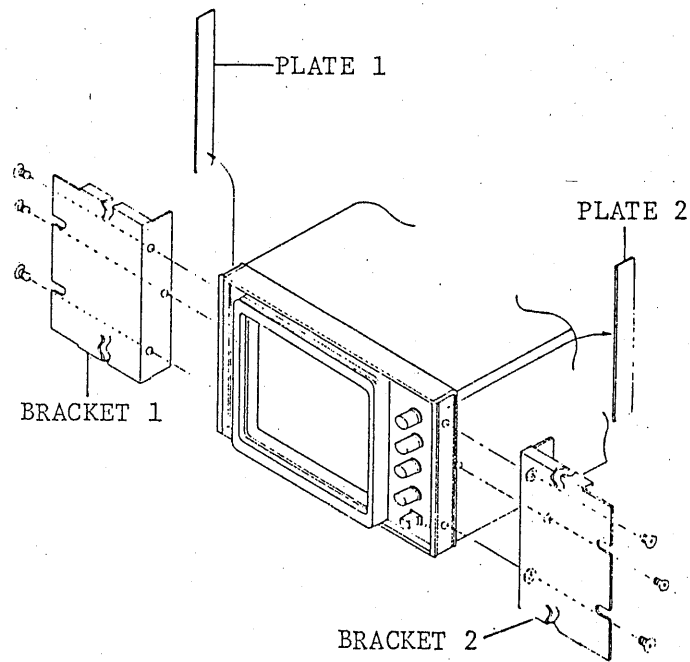


843868

o Mounting Dimensions

RACK MOUNT FOR
1 UNIT
RAMP1931-COS1711

RACK MOUNT FOR
2 UNITS
RAMP1932-COS1711

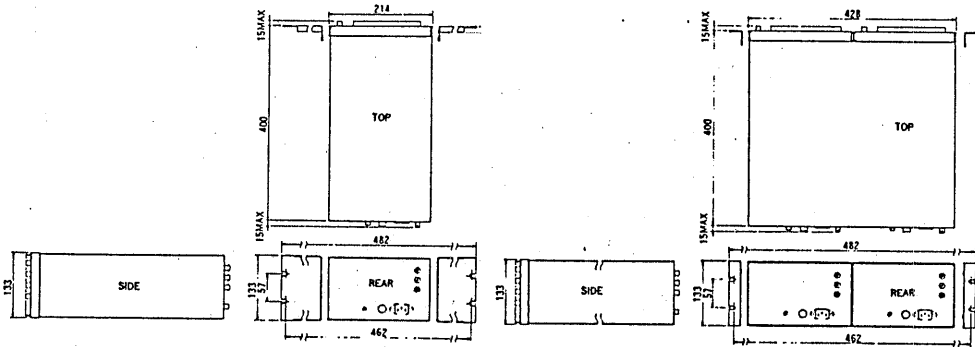

Note: To fix the brackets, be sure to use the screws which accompany the brackets or identical screws.

(2) Attenuator

When an optional attenuator is incorporated, the X and Y axis deflection sensitivity and Z axis input sensitivity are as shown in the following table.

Attenuator	X and Y axis Deflection Sensitivity	Z Axis Input Sensitivity
1/2	160 - 400 mV/DIV	1 - 4 V (Positive input for brighter trace)
1/5	400 mV/DIV - 1 V/DIV	2.5 - 10 V (Positive input for brighter trace)
1/10	800 mV/DIV - 2 V/DIV	5 - 20 V (Positive input for brighter trace)

Notes: 1. The input impedance and allowable input voltage remain unaltered regardless of whether an attenuator is incorporated or not.

2. The Z axis input sensitivity is adjusted to maximum when shipping the instrument from the factory.

843869

Indication of Options

The optimal items incorporated into the instrument are indicated by a code number on the instrument rear panel.

Code No. for options: OP -

①

②

③

④

A letter of 1 - 9, A - F is entered into each of the boxes. The codes are as shown in the following table.

Code No.	① Display		② X-axis				③ Y-axis				④ Z-axis			
	CRT phosphor	Graticule	Illumination	Polarity	Input Impedance	Attenuator	Polarity	Input Impedance	Attenuator	Polarity	Input Impedance	Attenuator		
0	Standard	OUT	x	Positive	1 MΩ	1/1	Positive	1 MΩ	1/1	Positive	1 MΩ	1/1		
1			o			1/2			1/2					
2			x			1/5			1/5					
3			o			1/10			1/10					
4	Persistent image	OUT	x	Positive	50 Ω	1/1	Positive	50 Ω	1/1	Positive	50 Ω	1/1		
5			o			1/2			1/2					
6			x			1/5			1/5					
7			o			1/10			1/10					
8				Negative	1 MΩ	1/1	Negative	1 MΩ	1/1	Negative	1 MΩ	1/1		
9						1/2			1/2					
A						1/5			1/5					
B						1/10			1/10					
C					1/1	1/1								
D					1/2	1/2								
E					1/5	1/5								
F					1/10	1/10								

Legends

OUT: Outside
IN: Inside

x: Without
o: With

85. 2. 19

852143