

SAFETY PRECAUTIONS

This instrument is designed, manufactured and tested to meet IEC-61010 CAT.III 600V.

This instruction manual contains warnings and safety rules that must be observed by the user to ensure safe operation of the instrument and retain it in safe condition. Therefore, read these operating instructions thoroughly and completely before using the instrument.

The symbol \triangle on the instrument means that the user must refer to the relevant section of this instruction manual for safe operation of the instrument.

Pay particular attention to all \triangle WARNINGS and \triangle CAUTIONS in this instruction manual. \triangle WARNING indicates warnings to avoid an electrical shock and \triangle CAUTION indicates cautions to avoid damages to the instrument and make accurate measurements.

\triangle WARNINGS

- Never open the instrument when making measurements.
- If the instrument shows the following conditions, do not try to make measurements and have the instrument checked for inspection or repair.
 - Instrument shows visual damage.
 - Test leads are damaged.
 - Instrument can not be operated for intended measurements.
 - Instrument has been stored for a long period of time under abnormal conditions.
 - Instrument has been subjected to severe shocks and vibrations.
- High voltage may be present with high energy levels. Connect the leads to the system carefully with fingers behind all finger guards.
- If the all open phase lamps are not lit on, any phase may still be live-be careful.

\triangle CAUTIONS

- Make sure to never apply a voltage more than 600V AC RMS. between the test leads of the instrument and earth to avoid damage to the instrument.
- Do not measure for more than five minutes when measuring on 500V AC or more, although the instrument is designed for the use 110V through 600V AC.

FEATURES

Two Functions in One Unit

Model 8031 is designed to check phase sequence. Lamps provided on the unit will also tell you if a phase is open.

Large-Size Alligator Clips

Can easily hold terminals of switchboards.

Highly Reliable


Can check a wide range of 3-phase power source from 110V to 600V. Sealed against dust, the unit ensures highly dependable and trouble-free performance.

Functional Design

Small, lightweight and portable. Designed for maximum ease of operation and ruggedness throughout.

Safety Design

No exposed metal parts. Safety features are incorporated throughout including the push switch button designed to minimize damage due to negligence.

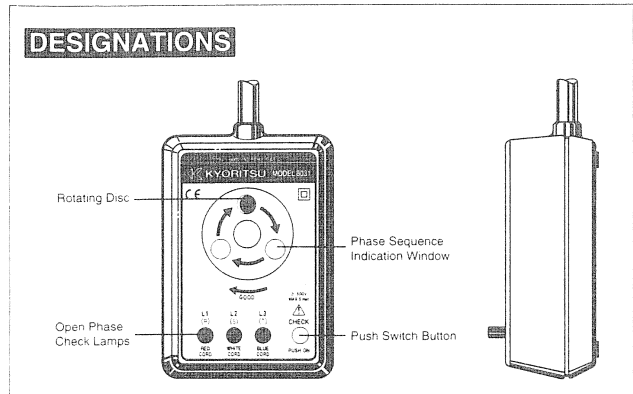

SPECIFICATIONS

	Model 8031
Voltage	110V-600V
Time Limit for Continuous Use	Within 5 minutes in case voltage is above 500V.
Frequency	50/60 Hz
Withstand Voltage	5,550V AC for one minute
Dimensions	106 (L) x 75 (W) x 40 (D) mm
Weight	Approx. 350g
Cord	1.5m each of red (R), white (S) and blue (T) cord
Accessories	Instruction Manual/Carrying Case

OPERATING INSTRUCTIONS

- Connect colour coded leads to the terminals of a 3-phase power source where a rotating electrical machine such as a motor will be connected. Connecting order may be optional.
- Press the push switch button located on top of the unit. Keep this button pressed during phase sequence or open phase check. When the push switch button is released it immediately goes off.
- Make sure that all of the three lamps for open phase check are on. If so, there is no open phase. When any of the three lamps is not on there is open phase.

Open phase check lamp "R" is not on → Open phase on terminal where Red leads is connected.

Open phase check lamp "S" is not on → Open phase on terminal where White leads is connected.

Open phase check lamp "T" is not on → Open phase on terminal where Blue leads is connected.

* When the open phase check lamps are not on the rotating disc does not turn.

- Check the rotating direction of the inside disc through the phase sequence indication window.
 - When the rotating disc turns counter-clockwise alternate the connection of the two of the three leads. Then, the rotating disc will turn clockwise.
 - When the rotating disc turns clockwise phase sequence is R, S and T in order of the power source terminals where the Red, White and Blue leads are connected.



KYORITSU ELECTRICAL INSTRUMENTS WORKS, LTD.

No. 5-20, Nakane 2-chome, Meguro-ku, Tokyo, 152-0031 Japan

Phone: +81-3-3723-0131 Fax: +81-3-3723-0152

URL: <http://www.kew-ltd.co.jp>

E-mail: info@kew-ltd.co.jp

Factories: Uwajima & Ehime