

This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

LEICA

Instructions
FLEX SL

You are holding a LEICAFLEX in your hands . . .

You have chosen this famous single-lens reflex camera with the most up-to-date selective through-the-lens CdS metering system. Once you start working with the LEICAFLEX you will appreciate its immense photographic scope and the remarkable precision with which it operates.

Its simple operation never distracts you from your subject — you are always sure of capturing the vital fleeting moment.

The large, bright LEICAFLEX viewfinder is also your information center for the different controls: framing, focusing and selective light metering. The controls are arranged for most convenient access. After short practice their operation will become second nature.

But please take the few minutes required to read these instructions carefully.


Contents

Operating Instructions

	Page
The LEICAFLEX SL controls	4
Holding the camera properly	6
The large, bright LEICAFLEX viewfinder	7
Focusing. The depth of field preview button	8
Setting the film speed index	9
The built-in exposure meter	10
To test the battery	11
How to use	
LEICA lenses	11
filters	11
the camera for close-ups	12
LEICAFLEX lenses without the through-the-lens metering cam	12
Changing the battery	12
The right-hand controls	13
The left-hand controls	14
The automatic aperture. The depth-of-field scale	15
Changing lenses	16
Filters	17
Lenshoods Self-timer	18
Flash synchronization. Flash table	19
Film loading	20
Film removal	21
Tips on the care of the LEICAFLEX and its lenses	22

LEICAFLEX SL Accessories

Interchangeable lenses	24
1 : 1 Extension tube set, ELPRO close-up lenses	26
Focusing bellows. LEICA lenses on the LEICAFLEX. TELEVIT-R Rapid Focusing Mount	28
LEICAFLEX SL motor	29
Carrying cases	30
Enlargers. Projection	31

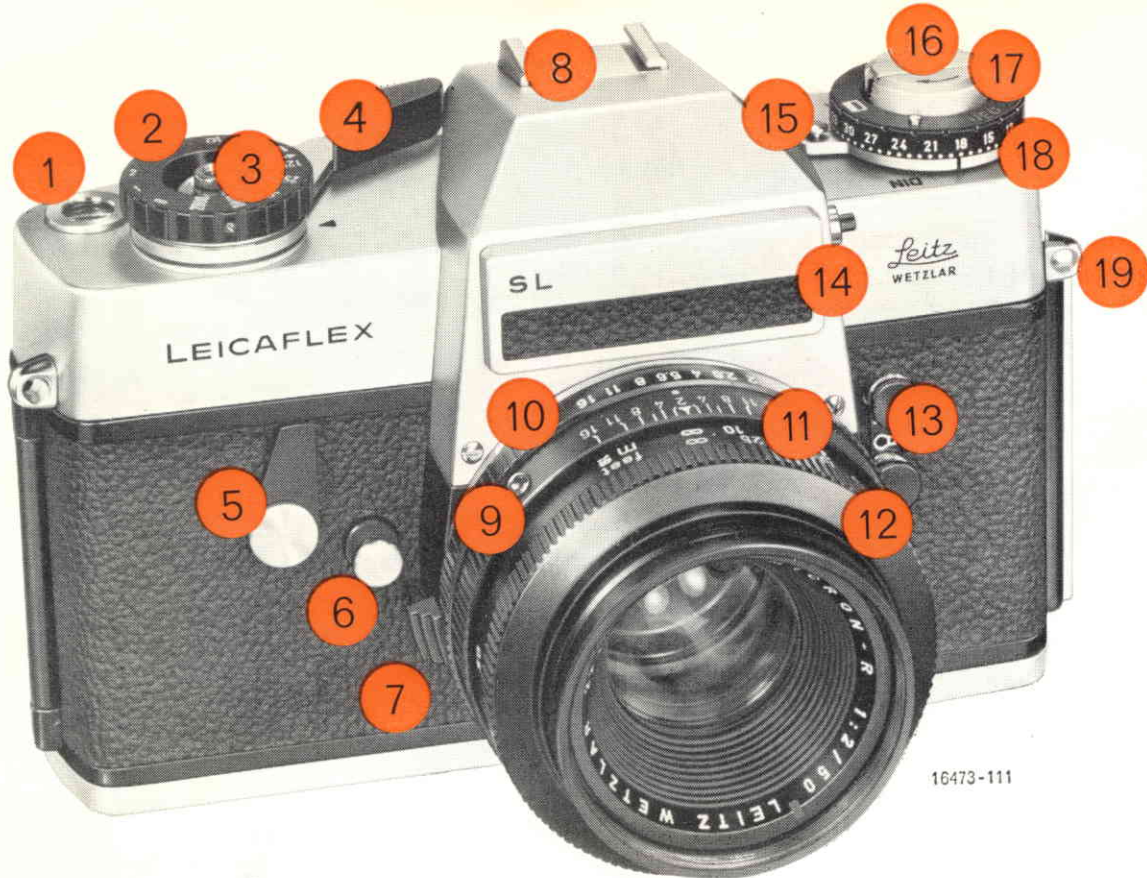

- 1 = Self-starting frame counter
- 2 = Shutter speed dial
- 3 = Shutter release with cable-release threading
- 4 = Rapid winding lever to tension shutter and advance film, also switches exposure meter on and off


- 5 = Self-timer (delayed action release)
- 6 = Depth-of-field preview button
- 7 = Lens bayonet lock
- 8 = Accessory shoe
- 9 = Red dot for lens changing
- 10 = Auto-aperture control ring
- 11 = Depth-of-field scale
- 12 = Focusing ring



16474-111

-
- | | |
|---|---|
| 13 = Flash outlets | 20 = Locking bar for camera back |
| 14 = Button for testing meter battery | 21 = ASA film-speed scale |
| 15 = Push button lock for DIN/ASA setting | 22 = Cover of meter battery compartment |
| 16 = Folding film rewind crank | 23 = Viewfinder eyepiece, accepting mounted correction lenses |
| 17 = Film-type reminder dial | 24 = 1/4" tripod bushing |
| 18 = DIN film-speed scale | 25 = Film rewind release button |
| 19 = Strap lugs | |

Holding the camera properly

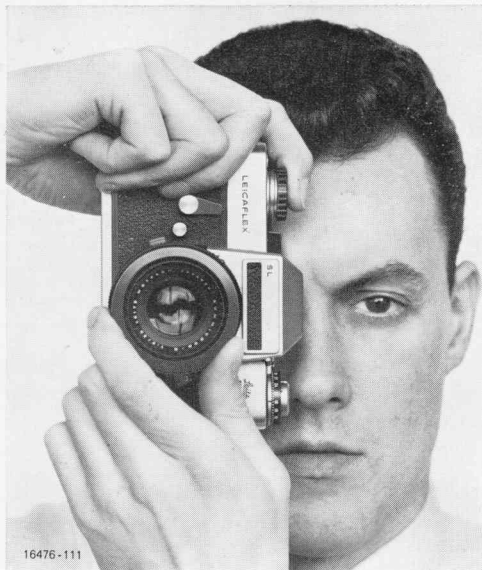

For a steady three-point support hold the camera with your right hand. Place your index-finger on the shutter release and your thumb against the rapid winding lever.

Support the camera below the lens with your

left hand, and press against your forehead.

To take vertical pictures, simply turn the camera around 90°. Leave your hands in the same position as for horizontal pictures, ready for focusing, releasing and advancing the film.




B 1 2 4 8 15 30 60.125 250 500 1000 2000

25454 a - 11

The large, bright LEICAFLEX viewfinder

Focusing

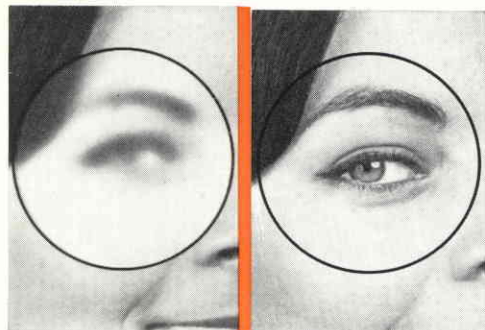


25455 a - 11

25457 a - 11

Center spot shimmers = out of focus
Center spot clear = in focus

Focusing is possible over the entire viewfinder field. The central rangefinder spot for high-speed focusing consists of minute and highly precise microprisms which scatter the incident rays to give a shimmering effect when the subject is not in focus. Outside this spot the finder screen is finely ground and can be used to check focus over the entire picture area. To focus the subject, turn the lens focusing ring (12).

The depth-of-field preview button

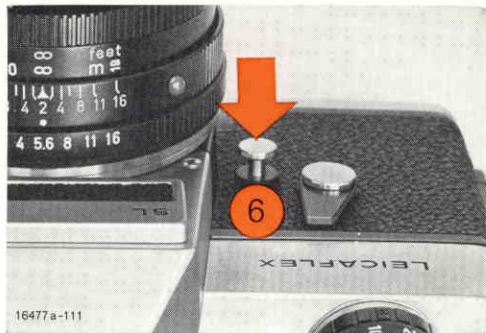


The depth-of-field preview button affords a visual check of the depth-of-field effect to be expected at the selected aperture. Pressing the button (6) stops the lens diaphragm down to the preselected value.

Caution: Do not press this button during light measurement! (exception: see page 12)

Even **eyeglass wearers** will normally be able to see the entire viewfinder field. In special cases, mounted correction lenses slip onto the viewfinder eyepiece.

Setting the film speed index

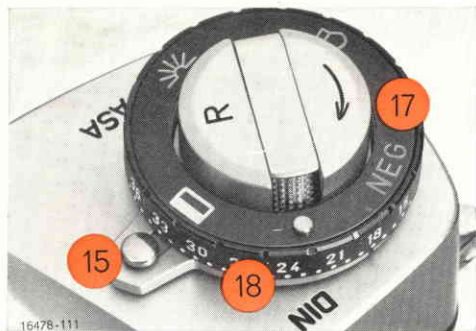

The setting ring (21 resp.18) is engraved with ASA and DIN values. To set the speed corresponding to the film in the camera, depress the button (15) and turn the ring to bring the desired film speed value opposite the index.

Correct exposure depends on the right film-speed setting!

The setting range extends from 8 to 6.400 ASA and from 10 to 39 DIN. The dots between the ASA-values stand for:

. = 8	50	. = 320	1.600
. = 10	. = 64	400	. = 2.000
12	. = 80	. = 500	. = 2.500
. = 16	100	. = 640	3.200
. = 20	. = 125	800	. = 4.000
25	. = 160	. = 1.000	. = 5.000
. = 32	200	. = 1.250	. = 6.400
. = 40			

The dial (17) can be set to the following symbols to remind you of the type of film in the camera:



= black-and-white film



= daylight reversal color film




= tungsten-type reversal color film



= color negative film

Set the symbol you want opposite the lock button (15)

The built-in exposure meter

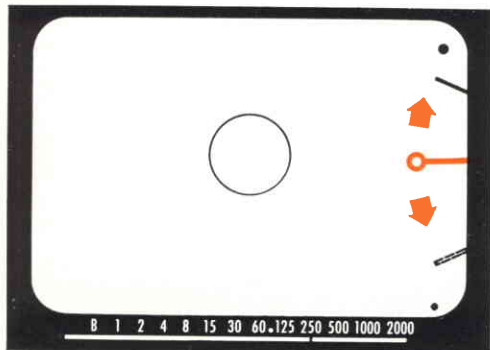


25330-11

Turning the auto-aperture control ring (10), moves the follow pointer at the edge of the finder field: towards the large upper dot (= diaphragm opens), or towards the small lower dot (= diaphragm closes).

The rapid winding lever (4) switches the battery-powered CdS exposure meter on and off. To save battery life, switch off the light meter by pushing the winding lever fully against the camera body. Hold the camera horizontally when making light measurements.

The central focusing spot is also the measuring field of the LEICAFLEX SL through-the-lens exposure meter.

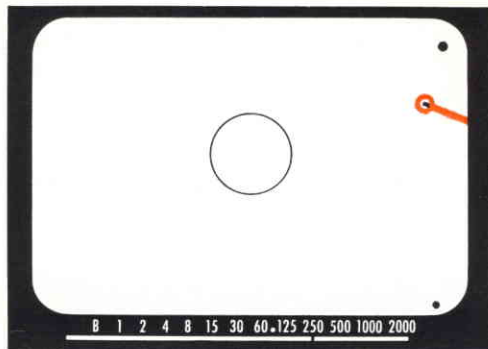

25331-11

Follow pointer aligned with meter needle = camera set for correct exposure.

With all lenses it is approximately $\frac{1}{6}$ of their angle of view. With this accurately defined spot you can therefore precisely measure a selected subject area. A general rule: measure that part of the scene which is wanted with maximum detail, or whose tone is most representative of the scene average.

The **follow pointer** of the built-in exposure meter is visible on the right-hand side of the viewfinder field. It is cross-coupled with the auto-aperture control ring (10) of the lens and the shutter speed dial (2). To set the correct exposure, simply line up the follow pointer with the **meter needle**.

To do this, turn the auto-aperture control ring (10) of the lens, and/or the shutter speed dial (2). This means that either the shutter speed or the f/stop can be preset. The shutter speed scale appears in the viewfinder below the picture area and the vertical bar will show the speed set.

To test the battery

Hold the camera horizontally, look through the viewfinder and press button (14). If the battery is good the meter needle will move at least as far as the index mark in the lower right-hand corner of the finder field. If the needle does not swing down fully, the battery needs replacing.

LEICA lenses

With the aid of an adapter (Cat. No. *14 127) all LEITZ lenses designed for the LEICA with VISOFLEX reflex housing can also be used on the LEICAFLEX SL. In this case the light is measured at working aperture. Line up the follow pointer in the viewfinder with the meter needle by adjusting the lens aperture and/or the shutter speed dial (2).

Using filters

Since the light is measured through the lens, no allowance need generally be made for filter factors.

With some filters a slightly longer exposure could be of advantage. The factors in the following table will then serve as a guide.

Yellow filter 1	+ 1/2 f/stop
Yellow-green filter	up to + 1 f/stop
Orange filter	up to + 1 f/stop
Polarizing filter	up to + 1 f/stop

Close-up photography

For close-up photography with ELPRO attachments, focusing bellows or other forms of extension no exposure increase factors need be applied to the measured exposure. The LEICA-FLEX SL meter will automatically indicate the correct exposure.

LEICAFLEX lenses without the through-the-lens metering cam


Lenses for the LEICAFLEX SL with through-the-lens measurement can be recognized by the two cams in the bayonet mount, which serve to control the exposure meter.

It is recommended that lenses with one cam for the LEICAFLEX, without through-the-lens measurement, only have the second cam installed at the factory or an authorized LEITZ-agency in order to achieve proper internal through-the-lens light measurement.

Without this conversion, single cam LEICAFLEX lenses can be used by observing the following procedure:

Keep the depth-of-field preview button (6) depressed during light metering in order to close the diaphragm to the preselected aperture. Bring the follow-pointer into alignment with the meter needle by turning the lens auto-

Changing the battery

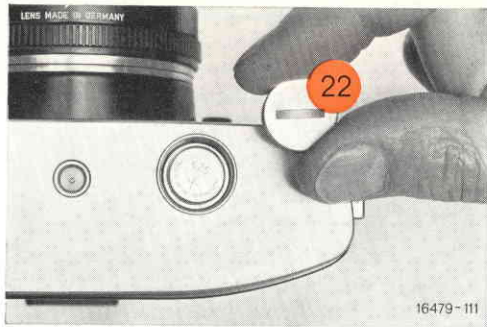

aperture control ring (10) or shutter speed dial (2). Then open the lens diaphragm by one stop or reduce the shutter speed by $1/2$ value. Release the depth-of-field preview button while making the exposure.

The built-in exposure meter is powered by a mercury oxide cell.


The Mallory PX 625 cell (with white ring) is recommended, especially for low temperature operation. The Mallory PX 13 cell may also be employed. These cells have an average life of 1 to 2 years.

With a coin unscrew the cover (22) in the camera base. When inserting the new battery make sure that the inscribed side faces out-

The right-hand controls

Shutter speeds are controlled by **dial (2)** which has click-stops at all engraved speeds. It may be set before or after tensioning the shutter. Any intermediate value can be set and is fully effective, except between $1/4$ and $1/8$ or between $1/30$ and $1/60$. At "B" the shutter remains open as long as the release button is held down. The LEITZ locking cable release (Cat. No. 14 067) is used for time exposures. The $\frac{1}{2}$ = $1/100$ sec is the highest shutter speed setting used to synchronize electronic-flash units. The **shutter release (3)** is threaded to take a standard cable release. Depressing the shutter release starts the following successive camera functions:

1. The mirror swings up.
2. At the same time the secondary mirror for the internal meter cell folds up flat against the main mirror.
3. The lens aperture stops down to the preset value.
4. The shutter runs off.
5. The mirror swings back down into the light path.
6. At the same time the secondary mirror for the meter cell swings down again into measuring position.
7. The lens aperture reopens.

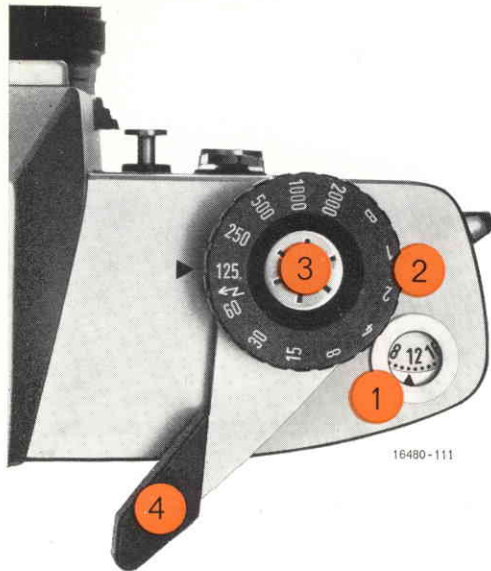

A single stroke of the **rapid winding lever (4)** advances the film by one frame, winds the shutter and advances the frame counter (1). The lever clicks into place in its rest position (exposure meter cut off) and in its operating position.

The left-hand controls



All LEICAFLEX lensmounts follow the same design, i. e. the rotating preset auto-aperture control ring (10), the fixed ring carrying the depth-of-field scale (11) and the focusing ring (12) are arranged in the same manner. So once your left hand is used to the controls on one lens, you adjust all settings in exactly the same way with all other lenses. The lenses specifically manufactured for the LEICAFLEX SL feature two cams for exposure control. These lenses may also be used on LEICAFLEX cameras without through-the-lens measurement.

For using LEICAFLEX lenses with only one cam on the LEICAFLEX SL, see page 12.



The automatic aperture

All LEICAFLEX lenses have a fully automatic diaphragm. This means that at all times — before and after exposure — the finder image is visible with the lens fully open for maximum brightness. The diaphragm closes down to the preset aperture only just before the exposure or when the depth-of-field preview button (6) is depressed.

The depth-of-field scale

indicates the zone of sharpness extending in front of, and behind the plane of focus.

For example, if you have set the 50 mm SUMMICRON-R f/2 lens at 15 ft, the zone of sharpness at f/11 extends from about 10 to 60 ft. If you open your lens up to f/4, the depth-of-field will range from about 13 to 24 ft. For further details regarding depth-of-field, see our depth-of-field table No. 11-57.

Changing lenses

Removal


LEICAFLEX lenses are changed as follows: Hold the lens by the fixed ring (11). Push back the bayonet lock (7), turn the lens to the left, and remove it from the camera.




Insertion

When inserting the lens into the camera bayonet mount, first line up the red dot (9) on the lens mount with the red bayonet lock (7). A short turn to the right will lock the lens in the bayonet mount with an audible click.

Always turn your back to the sun when changing lenses!

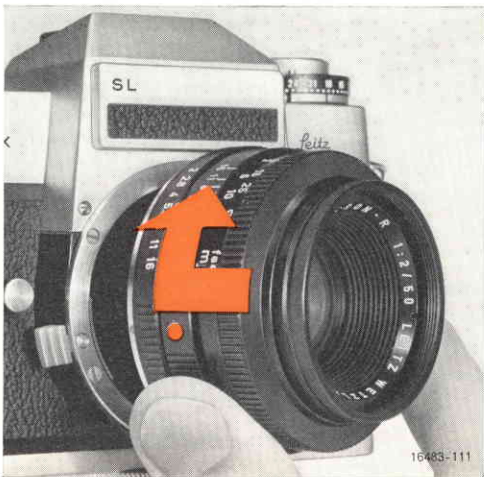

Filters

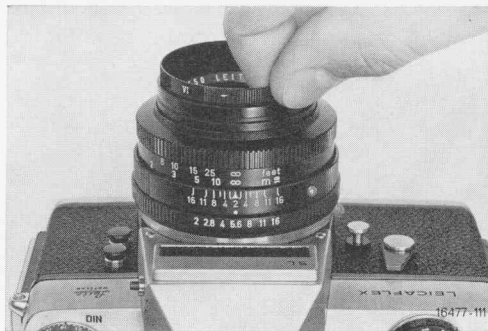

Every LEICAFLEX lens (except the 21 mm) has a screw-in filter-retaining ring (b).

Lens	Filter series
21 mm SUPER-ANGULON-R f/4	VIII 1/2*
35 mm ELMARIT-R f/2.8	VI
50 mm SUMMICRON-R f/2	VI
90 mm ELMARIT-R f/2.8	VII
135 mm ELMARIT-R f/2.8	VII
180 mm ELMARIT-R f/2.8	VIII

To mount a filter, unscrew the retaining ring (b), insert the filter and replace the ring. To unscrew the retaining ring, grip it on one side only; this avoids distorting the ring (see illustration).


* = VIII 1/2 filters for the 21 mm SUPER-ANGULON-R f/4 are held in place by a special lenshood.

Lenshoods

are designed to match the corresponding lenses. The same clip-on hood (a) is used for the 35 and 50 mm lenses. When the camera is not in use, this hood may be reversed on the lens. With the lens cap hood in position, the front element is now protected. To reverse the lenshood, press the spring buttons on both sides. The long-focus LEICAFLEX lenses starting with 90 mm have built-on telescopic lenshoods.

The lenshood for the 21 mm SUPER-ANGULON-R f/4 is attached by aligning the two red dots, then locked in place by turning to the right. To detach the lenshood, pull the same somewhat forward and turn it to the left. The 21 mm lenshood is also used to hold filters for this lens.


Self-timer (delayed-action release)

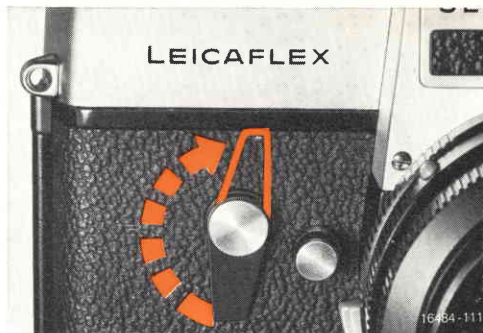


The self-timer can be used with any shutter speed. Wind it by turning lever (5) through 180°, then start the self-timer by pressing the shutter release (3). The LEICAFLEX shutter must first be wound with the rapid winding lever (4). The shutter is released after a delay of approximately 10 sec. During this period the lever slowly returns to its initial upright position. The shutter is triggered shortly before the lever reaches this point.

If lever (5) is turned only halfway, the shutter release (3) may be blocked, even if the lever was turned back by hand to its initial position. In this case turn lever through 180° and start self-timer as described.

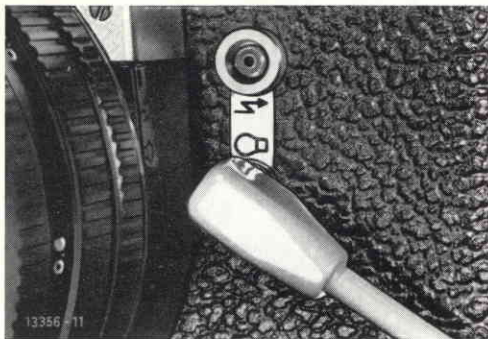

Flash synchronization





Any commercial flash unit with standard PC-type flash plug may be used with the LEICAFLEX.

The two flash outlets (13) are located on the camera front. The upper contact marked ⚡ is for electronic-flash units, the lower one marked  for flashbulbs. Both types of flash may also be used simultaneously. The table opposite indicates the various possibilities.

LEICAFLEX Flash Table


Electronic-Flash B → ⚡ (1/100)		 Contact (upper)	
M 2	1 → 1/30		
AG 1 B AG 3 B Flash cubes	1 → 1/60		
FLASH BULBS	XM 1 B PF 1 B XM 5 B PF 5 B	1 → 1/125	 Contact (lower)
	GE 5 25 M 3 PF 60 B	1 → 1/250	

Film loading

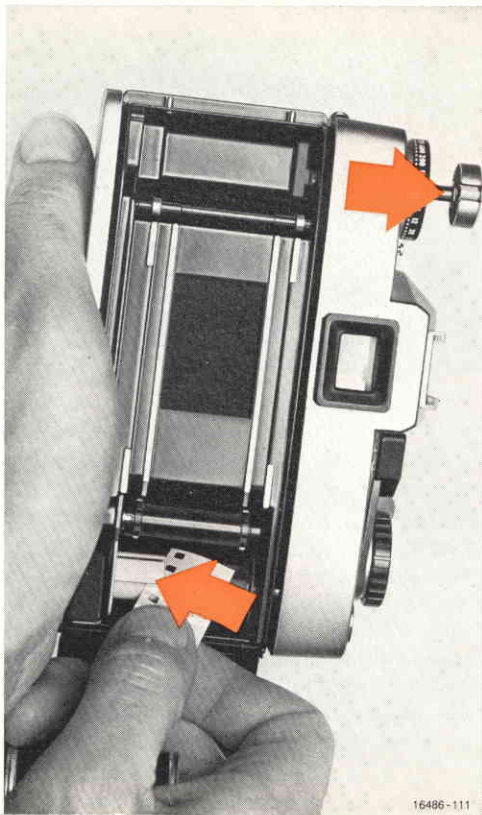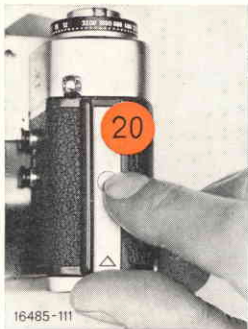

Open the camera back by pressing the safety button while pushing the locking bar (20) upwards. The frame counter (1) automatically springs to two marks before zero. Wind the advance lever and press the shutter release. Pull up the rewind crank (16). Holding the film at an angle from above, slide the end of the tongue into one of the take-up spool slots as illustrated. Only then insert film cartridge into cartridge chamber. Push the rewind crank down and, if necessary turn slightly to engage the cartridge spool. Before closing the back, work the advance lever slowly to make certain that the sprocket teeth engage the film perfo-

Film Removal

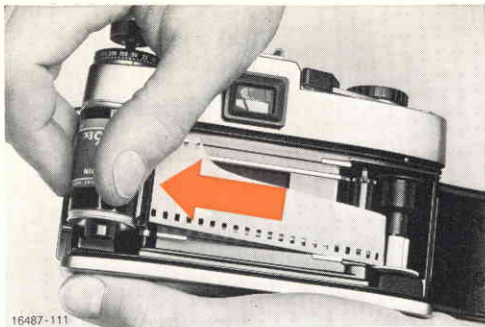

rations, and that the film edges run parallel to the film guide rails.

The back is locked by simply closing it. Gently turn the rewind crank in the arrow direction to take up any slack in the film cartridge; a slight resistance will be felt.

Advance-and-release twice to bring unexposed film into position. If loaded properly, the rewind crank will rotate backward during movement of the advance lever. After the third stroke, the camera is ready for the first exposure and the frame counter (1) stands at "1".



When the entire film length is exposed, the winding lever (4) can no longer be moved. Don't force it! Because some films are not very securely fastened to the cartridge spool, it is advisable to wind gently when advancing the last few frames. To rewind the film into the cartridge, press the rewind release button (25), unfold the rewind crank (16) — **do not pull the knob out!** — and turn in the arrow direction until you feel an increased resistance. Give the crank a few more turns to ensure that the film is completely wound back into the cartridge. Open the camera back, pull up the rewind knob and remove the film cartridge. The frame counter (1) moves backwards during rewinding.

Tips on the care of the LEICAFLEX and its lenses

Dust and fluff on the mirror should be carefully removed with the aid of a soft lens brush which is repeatedly rinsed with alcohol before and during cleaning. Dust and fluff on the underside of the finder screen should be removed only if they impair the finder image considerably. In this case use an antistatic brush repeatedly rinsed in pure alcohol. Never touch the finder screen with the mount of the brush.

Important: Do not blow into the mirror housing, because the stream of air might carry dust

into the interior of the camera mechanism.

Avoid pointing the camera towards the sun for a prolonged period of time. A camera lens acts as a burning glass. So protect the interior of your camera by placing the lens cap over the lens and carry the camera in its case.

The front ring of every lens bears its individual serial number and type designation. It is good policy to note down this number as well as the serial number of the camera, which is on the LEICAFLEX base-plate. Should your camera

ever be lost, these numbers will be vital in tracing and identifying it.

A brownish-violet surface tinge marks the high-quality antireflection coating of LEICA-FLEX lenses. These coatings considerably increase the clarity and brilliance of your pictures.

To remove dust from accessible lens elements, use a soft lens brush, or carefully dab the glass surfaces with a clean, dry, and soft linen rag. Colored or chemically impregnated lens tis-

sues intended for cleaning eyeglasses, should not be employed because these chemical substances may attack the lens surface.

Remember that it is better to keep your lens clean than to keep cleaning your lens!

The clear LEITZ UVa filter, which you may leave permanently on the lens, will protect the front surface against damage from foreign matter such as sand or salt-water spray. The lenshood also protects the lens from fingerprints, raindrops and snow.

LEICAFLEX accessories

Interchangeable lenses

In addition to the standard 50 mm SUMMICRON-R f/2 lens, LEICAFLEX owners may choose from the following range of interchangeable auto-aperture lenses with SL lightmeter coupling:

www.orphancameras.com



16489-111

ELMARIT-R
35 mm f/2.8

SUPER-ANGULON-R
21 mm f/4 *

ELMARIT-R
90 mm f/2.8

ELMARIT-R
180 mm f/2.8

ELMARIT-R
135 mm f/2.8

* = previous 21 mm SUPER-ANGULON f/3.4 lenses can not be used with the LEICAFLEX SL.



1:1 extension tube set


This set of three tubes is used primarily with the 50 mm SUMMICRON-R f/2 lens, with which it permits close-ups down to 1 : 1 (image: object size ratio). The tube length can be further increased by inserting additional middle-rings, producing an extension suited for use with 90, 135 and 180 mm lenses. For further details see leaflet No. 111—68.

ELPRO close-up lenses

ELPRO lenses are two-element achromats for the close-up ranges. They extend the focusing range of the camera. Being achromatic, these lenses also ensure optimum image quality in the near range. Crisp sharpness is achieved even with medium lens apertures. Photographic technique, including exposure measurement, is the same as for the normal focusing ranges.

See also leaflet No. 111—78.



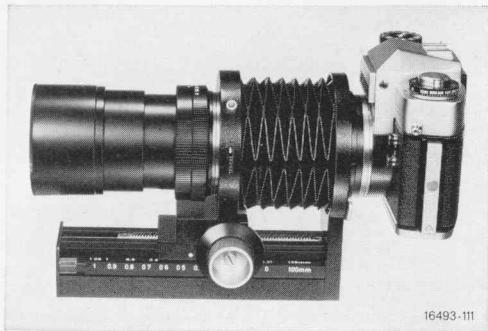

Focusing Bellows

Focusing bellows

Together with the special 100 mm MACRO-ELMAR f/4 lens, the focusing bellows for the LEICAFLEX SL permits continuous focusing from infinity down to 1 : 1. The 50, 90, 135 and 180 mm lenses can also be used with the focusing bellows for close-up and macro photography.

LEICA lenses on the LEICAFLEX

The special LEICA-to-LEICAFLEX lens adapter No. *14127 makes possible the use of all VISOFLEX-mounted LEICA lenses on the LEICA-

www.orphancameras.com



LEICAFLEX SL with LEICA-lens


FLEX, without changing their normal focusing ranges. Please see page 12.

Vignetting that might be visible in the viewfinder will have no effect on the photograph.

TELEVIT-R rapid-focusing mount

The TELEVIT-R is a rapid-focusing mount specially designed for the 400 mm TELYT f/5.6 and 560 mm TELYT f/5.6 lenses. In addition, the optical unit of the 280 mm TELYT f/4.8 LEICA lens can be used in the TELEVIT-R with the bayonet ring No. 14 138.

Please request our special leaflet No. 110-69.

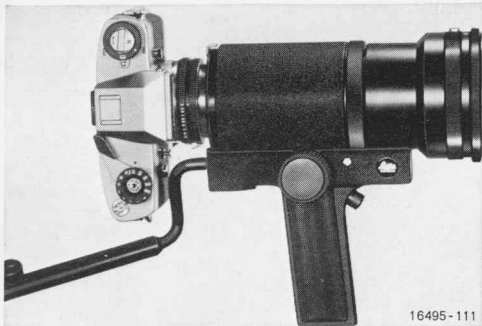

LEICAFLEX SL with TELEVIT-R

LEICAFLEX SL motor

An electric motor may be used in conjunction with a special model, the LEICAFLEX SL-MOT. It allows shooting speeds of about 3 frames per second. Any shutter speed between 1 and $1/2000$ sec may be used. This electric motor is powered by ten 1.5-volt standard batteries (Type R 6 in Germany, AA in the US.). One set of batteries is sufficient for about 50 films. Detailed information will be supplied on request.





Enlarging / Projection

Carrying cases

An ever-ready case is recommended for the LEICAFLEX with standard lens.

More extensive camera outfits including several lenses and accessories should be stored and carried in the Combination Case (Cat. No. 14 822) or the Universal Case (Cat. No. 14 809).



11267c-170

Projection

To project your LEICAFLEX slides, there is a wide choice of LEITZ projectors for every application, offering ease of operation, great versatility and top-quality lenses.

One feature of all LEITZ projectors is their outstanding optical performance combined with traditional LEITZ mechanical precision. Please request detailed literature on LEITZ slide projectors.

Enlargers

The LEICAFLEX SL is a precision camera and calls for an enlarger of equal optical quality.

For decades LEITZ have supplied two well proven autofocusing enlargers; the FOCOMAT Ic for 35 mm film, and the FOCOMAT IIc for all negative sizes up to 6 x 9 cm (2 1/4 x 3 1/4"). For further information see our leaflets No. 170-2 and 170-9.



15093b-310

© LEICAFLEX, LEICA, ELMAR, ELMARIT, SUMMICRON, SUPER-ANGULON, VISOFLEX, TELYT, TELEVIT, FOCOMAT and PRADOVIT are registered trade marks.

Design subject to alteration without notice.

ERNST LEITZ GMBH WETZLAR GERMANY

Subsidiary: ERNST LEITZ (Canada) Ltd., Midland, Ontario

US. Distributors: E. Leitz Inc., 468 Park. Ave. South, New York N.Y. 10016, USA



List

Printed in Germany

V/68/LX/HS

www.orphancameras.com