


# DURABRAND

## DBTV1301

# SERVICE MANUAL

**COLOR TELEVISION RECEIVER**

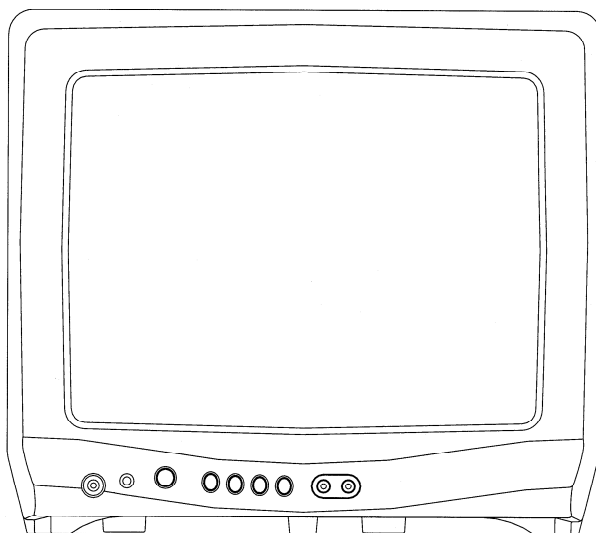

**ORIGINAL  
MFR'S VERSION B**

# DURABRAND

## DBTV1301

# SERVICE MANUAL

---

**COLOR TELEVISION RECEIVER**

**REVISION 2  
MFR'S VERSION H**

MFR'S VERSION	PCB010	TU001	V801
C	TMX494A	NJH3022U268	A34AGT13X98(L)
H	TMX494B	TECC1040PG32D	A34JXV70X28N45
I			A34AGT13X98(L)

# Change of CRT

## ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	MFR'S VERSION I		MFR'S VERSION H	
	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
⚠ V801	098Q1404B2	CRT W/DY A34AGT13X98(L)	098Y140497	CRT W/DY A34JXV70X28N45
⚠ R429	R655812R7J	R,FUSE 2.7 OHM 1W	R655812R2J	R,FUSE 2.2 OHM 1W
C804	CS0KB04K2K	CC 270 PF 50V B	CS0KB04L2K	CC 330 PF 50V B
C805	CS0KB04K2K	CC 270 PF 50V B	CS0KB04L2K	CC 330 PF 50V B
C806	CS0KB04K2K	CC 270 PF 50V B	CS0KB04L2K	CC 330 PF 50V B
⚠ CP401	069X450029	CONNECTOR PCB SIDE B05B-DVS	069D450049	CONNECTOR PCB SIDE TD-50-5P
PCB010	A3J804A010	MAIN PCB ASS'Y (VERSION I) TMX494B	A3J804C010	MAIN PCB ASS'Y (VERSION H) TMX494B

MAIN PCB's are not interchangeable.


SPEC.NO.	M3J8-04C
O/R NO.	K193015

# DURABRAND

## DBTV1301

# SERVICE MANUAL

**COLOR TELEVISION RECEIVER**

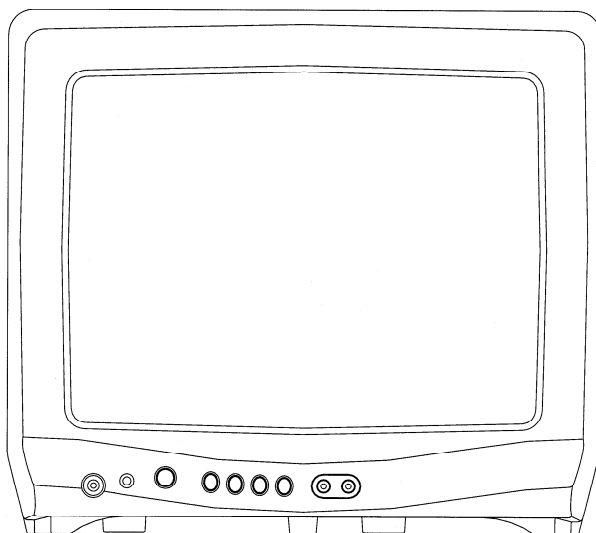

**ORIGINAL  
MFR'S VERSION B**

## SERVICING NOTICES ON CHECKING

### 1. KEEP THE NOTICES


As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

### 2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

### 3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  mark, the designated parts must be used.

### 4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

### 5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

### 6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

### 7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

#### (INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the external exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

#### **[Note 1]**

If you have not the 500V insulation resistance meter, use a Tester.

#### **[Note 2]**

External exposure metal: Antenna terminal  
Earphone jack

## HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

#### 1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

#### 2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

## IMPORTANT

Inferior silicon grease can damage IC's and transistors.

When replacing an IC's or transistors, use only specified silicon grease (YG6260M).

Remove all old silicon before applying new silicon.

# CONTENTS

<b>SERVICING NOTICES ON CHECKING</b> .....	A1-1
<b>HOW TO ORDER PARTS</b> .....	A1-1
<b>IMPORTANT</b> .....	A1-1
<b>CONTENTS</b> .....	A2-1
<b>GENERAL SPECIFICATIONS</b> .....	A3-1~A3-4
<b>DISASSEMBLY INSTRUCTIONS</b>	
1. REMOVAL OF ANODE CAP.....	B1-1
2. REMOVAL AND INSTALLATION OF FALT PACKAGE IC.....	B2-1, B2-2
<b>SERVICE MODE LIST</b> .....	C-1
<b>CONFIRMATION OF HOURS USED</b> .....	C-1
<b>WHAN REPLACING EEPROM (MEMORY) IC</b> .....	C-1
<b>ELECTRICAL ADJUSTMENTS</b> .....	D-1~D-4
<b>BLOCK DIAGRAM</b> .....	E-1, E-2
<b>PRINTED CIRCUIT BOARDS</b>	
MAIN/CRT .....	F-1~F-4
<b>SCHEMATIC DIAGRAMS</b>	
MICON/TUNER .....	G-1, G-2
CHROMA .....	G-3, G-4
TV POWER .....	G-5, G-6
DEFLECTION/CRT .....	G-7, G-8
SOUND/AV .....	G-9, G-10
<b>WAVEFORMS</b> .....	H-1, H-2
<b>MECHANICAL EXPLODED VIEW</b> .....	I-1
<b>MECHANICAL REPLACEMENT PARTS LIST</b> .....	J1-1
<b>ELECTRICAL REPLACEMENT PARTS LIST</b> .....	J2-1, J2-2

## GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	13 inch / 335.4mmV	
			CRT Type	Normal	
			Deflection	90 degree	
			Magnetic Field BV/BH	+0.45G/0.18G	
			Color System	NTSC	
			Speaker	1Speaker	
				Position	Bottom
				Size	3 Inch
				Impedance	8 ohm
			Sound Output	MAX	1.0 W
		10%(Typical)	0.8 W		
		NTSC3.58+4.43 /PAL60Hz	No		
G-2	Tuning System	Broadcasting System		US System M	
		Tuner and Receive CH	System	1Tuner	
			Destination	Others	
			Tuning System	F-Synth	
			Input Impedance	VHF/UHF 75 ohm	
				CH Coverage	2 - 69, 4A, A-5 - A-1, A - 1, J - W, W+1 - W+84
			Intermediate Frequency	Picture(FP)	45.75MHz
				Sound(FS)	41.25MHz
				FP-FS	4.50MHz
			Preset CH		No
	Stereo/Dual TV Sound		No		
	Tuner Sound Muting		Yes		
G-3	Power	Power Source	AC	120V AC 60Hz	
			DC		
		Power Consumption		at AC	
			Stand by (at AC)		54 W at AC 120 V 60 Hz
		Per Year		5 W at AC 120 V 60 Hz	
				-- kWh/Year	
	Protector	Power Fuse		Yes	
G-4	Regulation	Safety		UL/CSA	
		Radiation		FCC /DOC	
		X-Radiation		DHHS/HWC	
G-5	Temperature	Operation		+5°C ~ +40°C	
		Storage		-20°C ~ +60°C	
G-6	Operating Humidity			Less then 80% RH	
G-7	On Screen Display	Menu	Menu Type	Yes	
			Character	Yes	
			Picture	Yes	
			Contrast	Yes	
			Brightness	Yes	
			Color	Yes	
			Tint	Yes	
			Sharpness	Yes	
			Audio		No
			Bass		No
			Treble		No
			Balance		No
			BBE On/Off		No
			Stable Sound On/Off		No
			CH Set Up		Yes
			TV/CATV		Yes
			Auto CH Memory		Yes
			Add/ Delete		Yes
			Language		Yes
			V-chip		Yes
				CH Label	No
				Favorite CH	No
				Color Stream DVD/DTV	No
			Control Level		Yes
			Sound		Yes
			Brightness		Yes
			Contrast		Yes
			Color		Yes
			Tint (NTSC Only)		Yes
			Sharpness		Yes
			Tuning		No
			Bass		No
			Treble		No
			Balance		No
			Back Light		No
			Stereo,Audio Output,SAP		No
	Video		Yes		
	Color Stream		No		
	Channel(TV/Cable)		Yes		



## GENERAL SPECIFICATIONS

		CH Label	No
		Sleep Timer	Yes
		Sound Mute	Yes
		V-chip Rating	Yes
<b>G-8</b>	<b>OSD Language</b>	OSD Language Setting	English French Spanish English
<b>G-9</b>	<b>Clock and Timer</b>	Sleep Timer	Max Time 120 Min
		Step	10 Min
		On/Off Timer	Program(On Tim / Off Tim) No
		Wake Up Timer	No
		Timer Back-up (at Power Off Mode)	more than -- Min Sec
<b>G-10</b>	<b>Remote Control</b>	Unit	RC-DW
		Glow in Dark Remocon	No
		Format	NEC
		Custom Code	86-05 h
		Power Source	Voltage(D.C) 3V
			UM size x pcs UM-4 x 2 pcs
		Total Keys	27 Keys
		Keys	Power
			Yes
		1	Yes
		2	Yes
		3	Yes
		4	Yes
		5	Yes
		6	Yes
		7	Yes
		8	Yes
		9	Yes
		0	Yes
		100	No
		CH Up	Yes
		CH Down	Yes
		Volume Up	Yes
		Volume Down	Yes
		TV/Caption/Text	Yes
		CH1/CH2	Yes
		TV/Video(TV/AV)	Yes
		CH RTN/CH ENT(Quick View)	Yes
		Sleep	Yes
		RE Call(Call)	Yes
		Reset	Yes
		Menu	Yes
		Enter	Yes
		Mute	Yes
		Exit	No
		MTS(Audio Select)	No
		Set +	Yes
		Set -	Yes
		Multi Brand Keys	CH Up(VCR)
			No
			CH Down(VCR)
			No
			Pause/Still
			No
			TV/VCR(VCR)
			No
			Code
			No
			FF
			No
			Rew
			No
			Rec
			No
			Play
			No
			Stop
			No
			TV
			No
			VCR
			No
			Cable
			No
<b>G-11</b>	<b>Features</b>	Auto Degauss	Yes
		Auto Shut Off	Yes
		Canal+	No
		CATV	Yes
		Anti-theft	No
		Rental	No
		Memory(Last CH)	Yes
		Memory(Last Volume)	Yes
		V-Chip	Yes
		Type	USA_ORION Type
		BBE	No
		Auto Search	No
		CH Allocation	No
		SAP	No
		Channel Lock	No
		Just Clock Function	No

## GENERAL SPECIFICATIONS

		Game Position		No		
		CH Label		No		
		VM Circuit		No		
		Full OSD		No		
		Premiere		No		
		Comb Filter		No		
			____ Lines			
		Auto CH Memory	Yes			
		Hotel Lock		No		
		Closed Caption	Yes			
		Stable Sound		No		
		Energy Star		No		
		Favorite CH		No		
<b>G-12</b>	<b>Accessories</b>	Owner's Manual	Language w/Guarantee Card	English /French No		
		Remote Control Unit		Yes		
		Rod Antenna			No	
			Poles Terminal			
		Loop Antenna		-	No	
			Terminal			
		U/V Mixer			No	
		DC Car Cord (Center+)			No	
		Guarantee Card		Yes		
		Warning Sheet			No	
		Circuit Diagram			No	
		Antenna Change Plug			No	
		Service Facility List			No	
		Important Safeguard			No	
		Dew/AHC Caution Sheet			No	
		AC Plug Adapter			No	
		Quick Set-up Sheet			No	
		Battery	UM size x pcs OEM Brand		No	
					No	
					No	
			No			
			No			
			No			
<b>G-13</b>	<b>Interface</b>	Switch	Front	Power	Yes	
				System Select	No	
				Main Power SW	No	
				Sub Power	No	
				Channel Up/Reset	Yes	
				Channel Down/Enter	Yes	
				Volume Up/Set Up	Yes	
				Volume Down/Set Down	Yes	
				MENU=Volume Up+Volume Down	Yes	
				Rear	AC/DC	No
					TV/CATV Selector	No
					Degauss	No
					Main Power SW	No
		Indicator	Power		No	
			Stand-by		No	
			On Timer	No		
			Terminals	Front	Video Input	
		Audio Input			RCA	
		Other Terminal			RCA x 1 Ear Phone	
		Rear		Video Input(Rear1)	No	
				Video Input(Rear2)	No	
				Audio Input(Rear1)	No	
				Audio Input(Rear2)	No	
				Video Output	No	
				Audio Output	No	
				Euro Scart	No	
				Color Stream	No	
Diversity	No					
Ext Speaker	No					
DC Jack 12V(Center +)	No					
VHF/UHF Antenna Input	F Type					
AC Outlet	No					
<b>G-14</b>	<b>Set Size</b>			Approx. W x D x H (mm)		362 x 360 x 320.5
<b>G-15</b>	<b>Weight</b>	Net (Approx.)		9.5 kg (20.9 lbs)		
		Gross (Approx.)		11.0kg (24.4lbs)		
<b>G-16</b>	<b>Carton</b>	Master Carton		No		
		Content		---- Sets		

## GENERAL SPECIFICATIONS

		Material	____ /--
		Dimensions W x D x H(mm)	__ x __ x __
		Description of Origin	No
	Gift Box		Yes
		Material	Double Full Color Carton W/Photo
		Dimensions W x D x H(mm)	440 x 408 x 380
		Design	As per Buyer's
		Description of Origin	Yes
	Drop Test		Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces
		Height (cm)	62
	Container Stuffing		866 Sets/40' container
<b>G-17</b>	<b>Cabinet Material</b>	Cabinet Front	PS 94V0 DECABROM
		Cabinet Rear	PS 94V0 DECABROM

# DISASSEMBLY INSTRUCTIONS

## 1. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

- \* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- \* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

### REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. (Refer to Fig. 1-1.)

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated screwdriver, touch the support of the Anode with the tip of the screwdriver.

A cracking noise will be heard as the voltage is discharged.

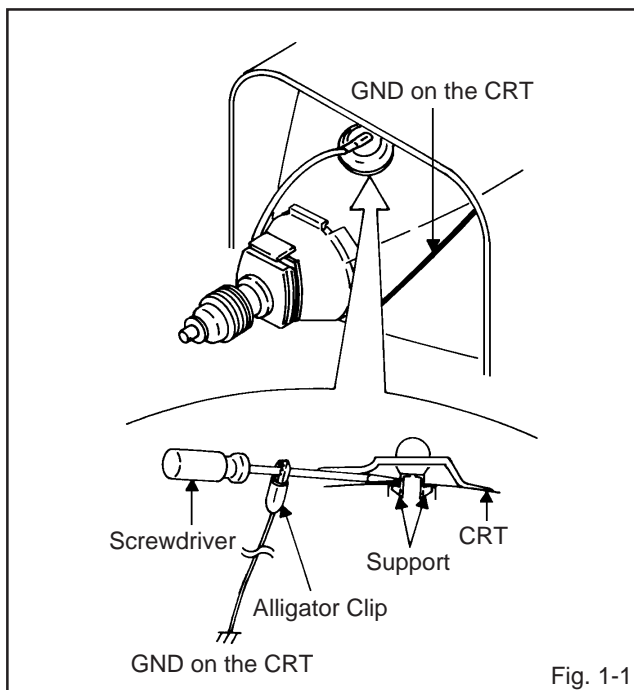


Fig. 1-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. (Refer to Fig. 1-2.)

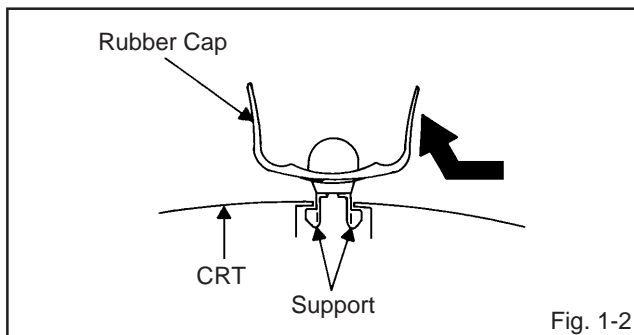


Fig. 1-2

3. After one side is removed, pull in the opposite direction to remove the other.

### NOTE

Take care not to damage the Rubber Cap.

### INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. (Refer to Fig. 1-3.)

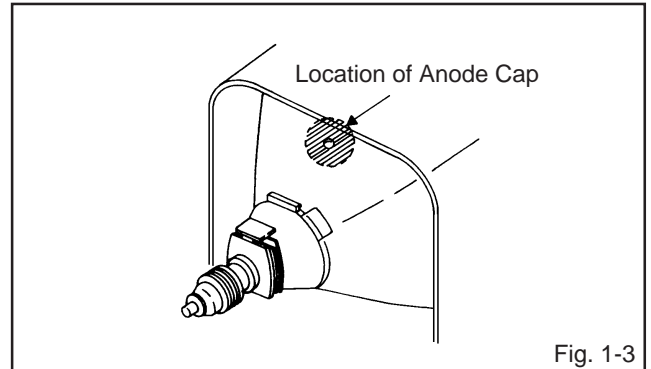


Fig. 1-3

### NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. (Refer to Fig. 1-4.)

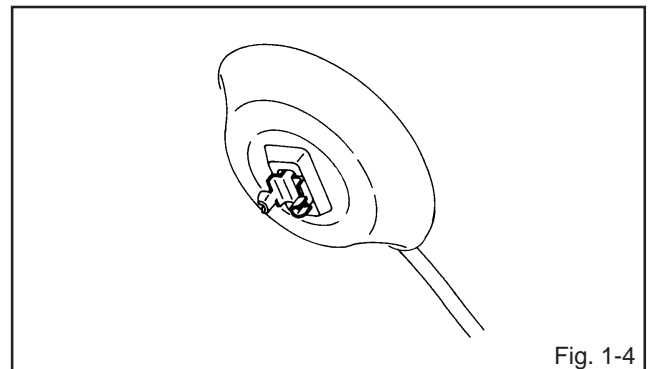


Fig. 1-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in Fig. 1-5.

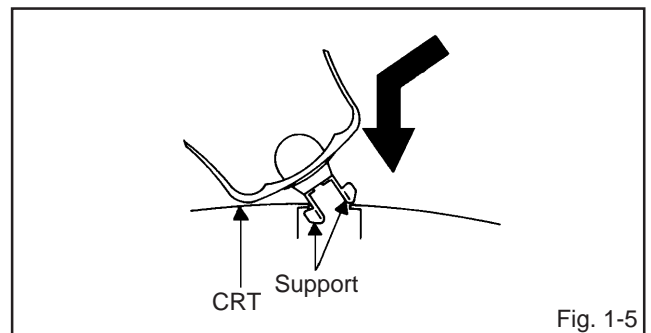


Fig. 1-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

# DISASSEMBLY INSTRUCTIONS


## 2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

### REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 2-1.)

#### NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

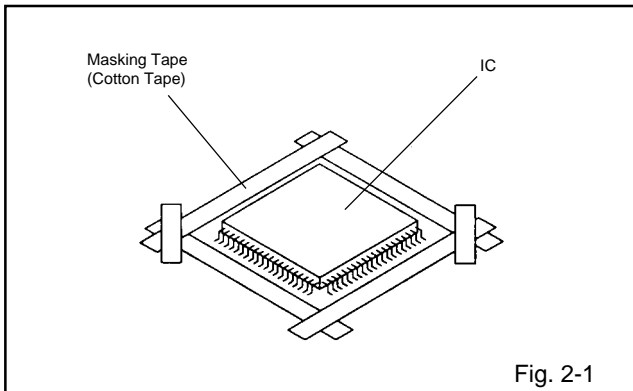

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 2-2.)

#### NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

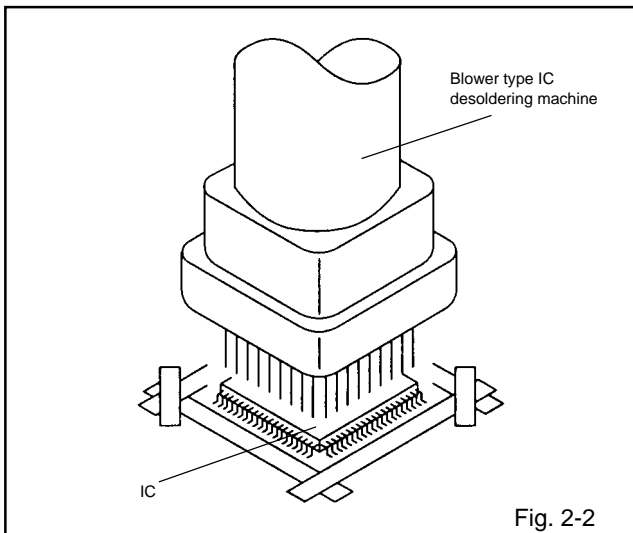

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 2-3.)

#### NOTE


Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

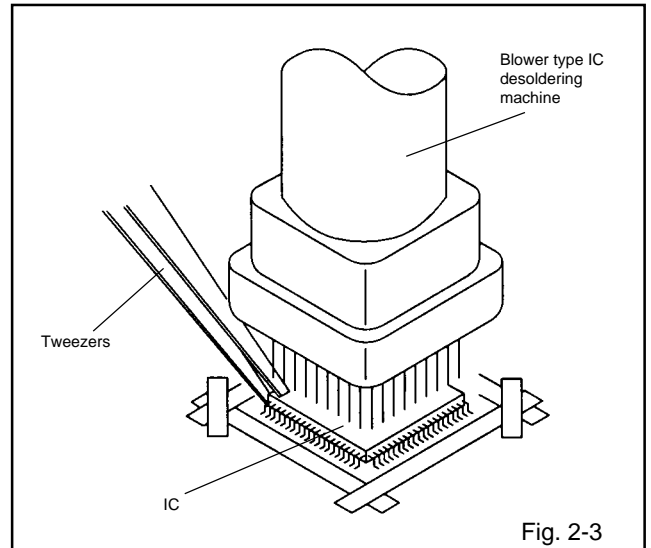

4. Peel off the Masking Tape.
5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 2-4.)

#### NOTE


Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

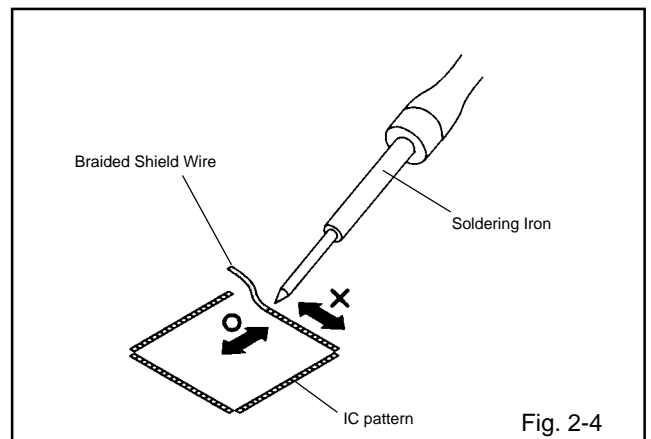


# DISASSEMBLY INSTRUCTIONS

## INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. **(Refer to Fig. 2-5.)**

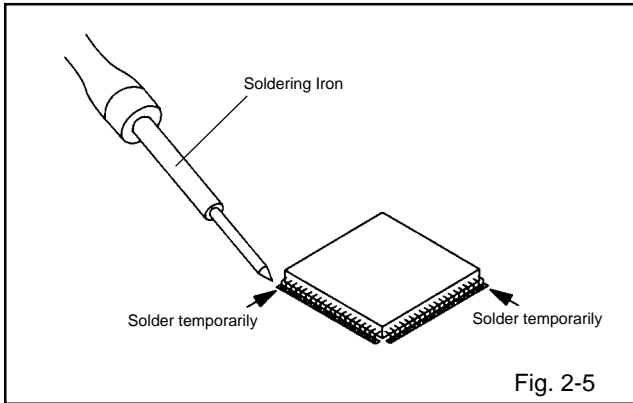


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. **(Refer to Fig. 2-6.)**

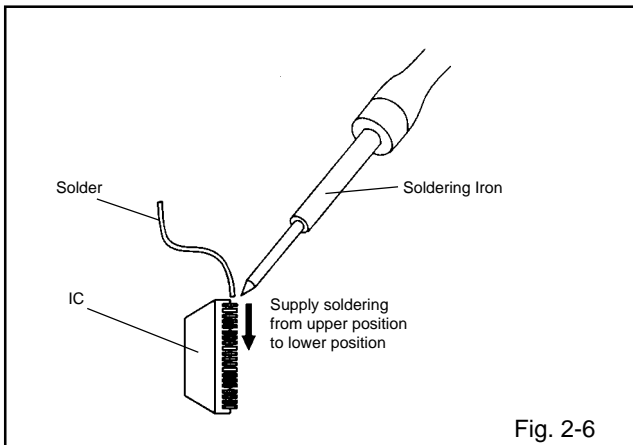


3. Absorb the solder left on the lead using the Braided Shield Wire. **(Refer to Fig. 2-7.)**

### NOTE

Do not absorb the solder to excess.

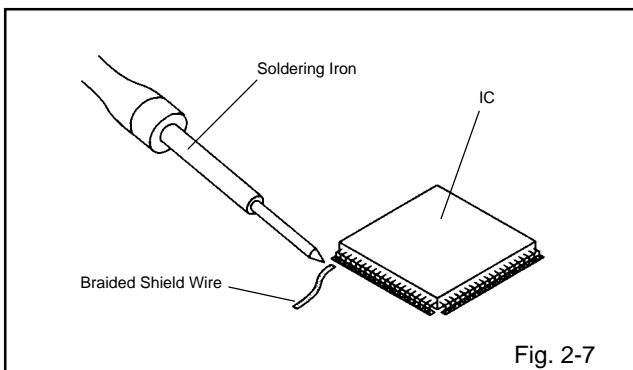

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. **(Refer to Fig. 2-8.)**

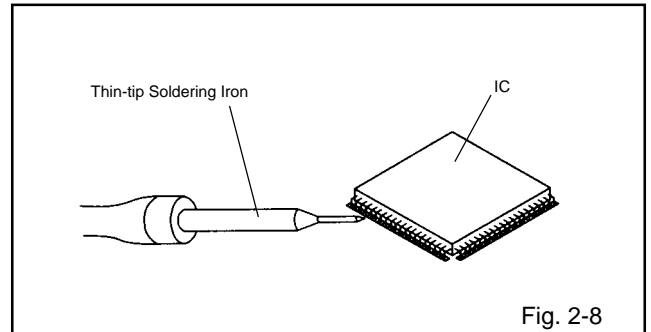

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

### NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.

## SERVICE MODE LIST


This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily. To enter the Service Mode, press both set key and remote control key for more than 1 second.

Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reser such as the clock setting, the cheannel setting, the POWER ON total hours, and PLAY/REC total hours.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED".  Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

## CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

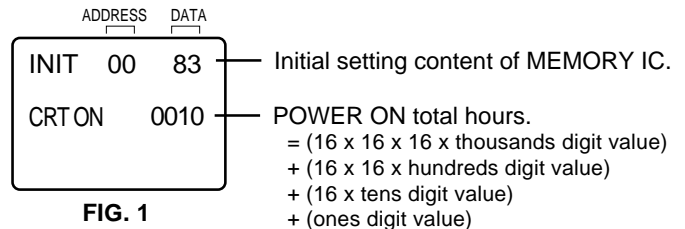

## WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	08	20	98	02	09	B3	24	19	01	00	44	05	00	D5	FF	A5

**Table 1**

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second. ADDRESS and DATA should appear as FIG 1.
3. ADDRESS is now selected and should "blink". Using the SET + or - keys on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using SET + or - until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input. The unit will now have the correct DATA for the new MEMORY IC.

# ELECTRICAL ADJUSTMENTS

## 1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

### CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.  
Inferior silicon grease can damage IC's and transistors. When
- When you exchange IC and Transistor for a heat sink, apply the silicon grease (**YG6260M**) on the contact section of the heat sink, Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

Prepare the following measurement tools for electrical adjustments.

1. Synchro Scope
2. Digital Voltmeter

### On-Screen Display Adjustment

1. In the condition of NO indication on the screen. Press the VOL. DOWN button on the set and the Channel button (**9**) on the remote control for more than 1 second to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

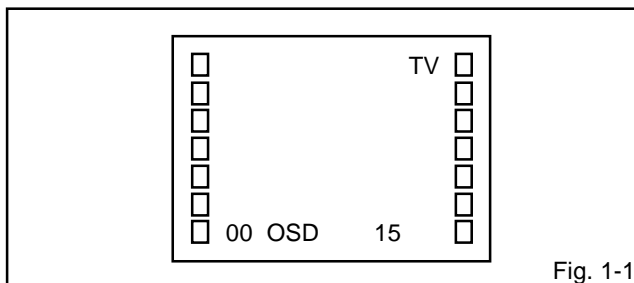


Fig. 1-1

2. Use the Channel UP/DOWN button or Channel button (**0-9**) on the remote control to select the options shown in **Fig. 1-2**.
3. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	OSD H	16	CONTRAST CENT
01	CUT OFF	17	CONTRAST MAX
02	RF DELAY	18	CONTRAST MIN
03	VIF VCO	19	COLOR CENT
04	H.VCO	20	COLOR MAX
05	H.PHASE	21	COLOR MIN
06	V.SIZE	22	TINT
07	V.SHIFT	23	SHARPNESS
08	R.DRIVE	24	FM LEVEL
09	B.DRIVE	25	LEVEL
10	R.BIAS	26	SEPARATION 1
11	G.BIAS	27	SEPARATION 2
12	B.BIAS	28	TEST MONO
13	BRIGHT CENT	29	TEST STEREO
14	BRIGHT MAX	30	X-RAY TEST
15	BRIGHT MIN		

Fig. 1-2

## 2. BASIC ADJUSTMENTS

### 2-1: RF AGC DELAY

1. Place the set with Aging Test for more than 15 minutes.
2. Receive an 63dB monoscope pattern.
3. Connect the digital voltmeter to **W043**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**02**) on the remote control to select "RF.AGC".
5. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is  $2.5V \pm 0.05V$ .

### 2-2: CUT OFF

1. Adjust the unit to the following settings.  
R.DRIVE=10, B.DRIVE=10, R.BIAS=64, G.BIAS=64, B.BIAS=64, BRIGHTNESS=120, CONTRAST=40.
2. Place the set with Aging Test for more than 15 minutes.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**01**) on the remote control to select "CUT OFF".
4. Adjust the **Screen Volume** until a dim raster is obtained.

### 2-3: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the **Focus Volume** until picture is distinct.

### 2-4: WHITE BALANCE

**NOTE:** Adjust after performing CUT OFF adjustment.



1. Place the set with Aging Test for more than 10 minutes.
2. Receive the white 100% signal from the Pattern Generator.
3. Using the adjustment control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**10**) on the remote control to select "R.BIAS".
5. Using the VOL. UP/DOWN button on the remote control, adjust the R.BIAS.
6. Press the CH. UP/DOWN button on the remote control to select the "R.DRIVE", "B.DRIVE", "G.BIAS" or "B.BIAS".
7. Using the VOL. UP/DOWN button on the remote control, adjust the R.DRIVE, B.DRIVE, G.BIAS or B.BIAS.
8. Perform the above adjustments 6 and 7 until the white color is looked like a white.



# ELECTRICAL ADJUSTMENTS

## 2-5: SUB TINT/SUB COLOR

1. Receive the color bar pattern.
2. Connect the oscilloscope to **TP023**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**22**) on the remote control to select "TINT".
4. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes as straight line (**Refer to Fig. 2-1**)
5. Connect the oscilloscope to **TP022**.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**19**) on the remote control to select "COL.CENT".
7. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to 100% of the white level. (**Refer to Fig. 2-2**)
8. Receive the color bar pattern. (Audio Video Input)
9. Press the TV/AV button on the remote control to set to the AV mode. Then perform the above adjustments 2~7

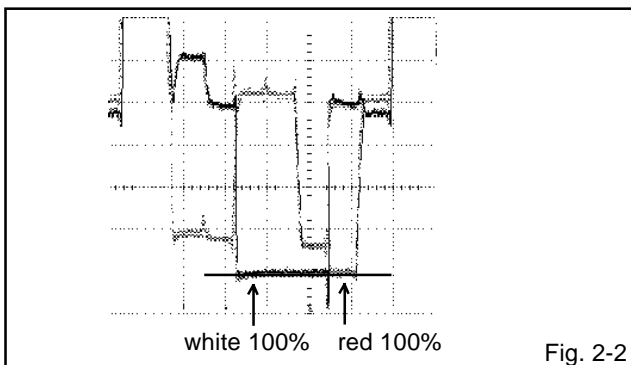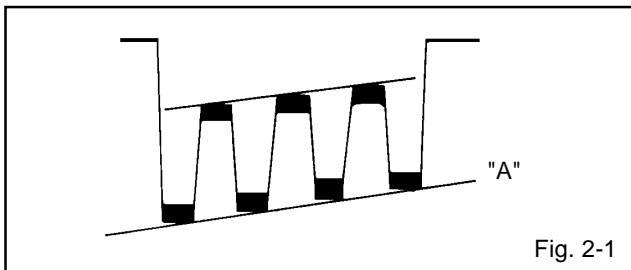

## 2-6: HORIZONTAL PHASE

1. Receive the center cross signal from the Pattern Generator.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**05**) on the remote control to select "H.PHAS".
3. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

## 2-7: VERTICAL SIZE

**NOTE:** Adjust after performing adjustments in section 2-6

1. Receive the crosshatch signal from the Pattern Generator.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**06**) on the remote control to select "V.SIZE".
3. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes  $10 \pm 2\%$ .
4. Receive a broadcast and check if the picture is normal.


## 2-8: VERTICAL SHIFT

**NOTE:** Adjust after performing adjustments in section 2-7

1. Receive the crosshatch signal from the Pattern Generator.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**07**) on the remote control to select "V.SFT".
3. Press the VOL. UP/DOWN button on the remote control until the horizontal line becomes fit to the notch of the shadow mask.

## 2-9: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. (**Refer to Fig. 2-3**)

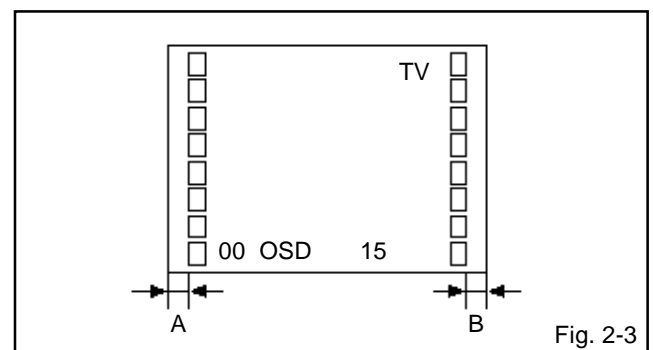

## 2-10: VIF VCO

1. Place the set with Aging Test for more than 10 minutes.
2. Receive an 80dB monoscope pattern.
3. Connect the digital voltmeter between the **pin 5 of CP601** and the **GND**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**03**) on the remote control to select "V.VCO".
5. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is 2.5V.

## 2-11: SUB BRIGHTNESS

1. Receive an 70dB monoscope pattern.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**13**) on the remote control to select "BRI.CENT".
3. Press the VOL. UP/DOWN button on the remote control until the screen begin to shine.
4. Press the TV/AV button on the remote to set to the AV mode. Then perform the above adjustment 2, 3.

## 2-12: SUB CONTRAST

1. Receive an 70dB the color bar pattern.
2. Activate the adjustment mode display of **Fig. 1-1** press the channel button (**17**) on the remote control to select "CONT.MAX".
3. Press the VOL. UP/DOWN button on the remote control until the contrast step No. become "40".
4. Press the TV/AV button on the remote to set to the AV mode. Then perform the above adjustment 2.
5. Press the VOL. UP/DOWN button on the remote control until the contrast step No. become "38".

## ELECTRICAL ADJUSTMENTS

### 2-13: Confirmation of Fixed Value (step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	RF	AV
04	H VCO	04	04
14	BRIGHT MAX	140	140
15	BRIGHT MIN	60	60
16	CONT CENT	30	30
18	CONT MIN	12	12
20	COLOR MAX	74	75
21	COLOR MIN	01	01
23	SHARPNESS	40	40
24	FM LEVEL	00	00
25	LEVEL	00	00
26	SEPARATION 1	00	00
27	SEPARATION 2	00	00
28	TEST MONO	00	00
29	TEST STERO	00	00

# ELECTRICAL ADJUSTMENTS

## 3. PURITY AND CONVERGENCE ADJUSTMENTS

### NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

### 3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**  
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

### 3-2: PURITY

#### NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.  
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue colors.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

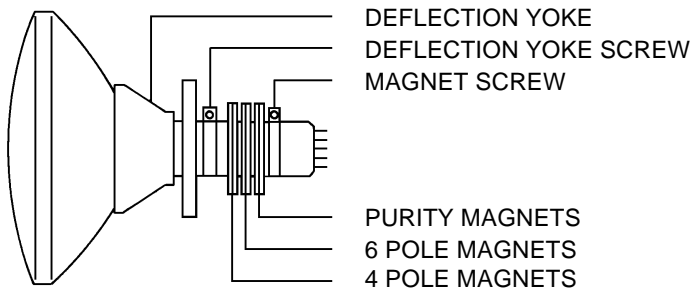


Fig. 3-1

### 3-3: STATIC CONVERGENCE

#### NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

### 3-4: DYNAMIC CONVERGENCE

#### NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**

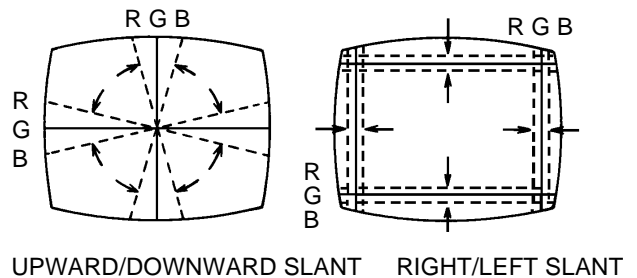


Fig. 3-2-a


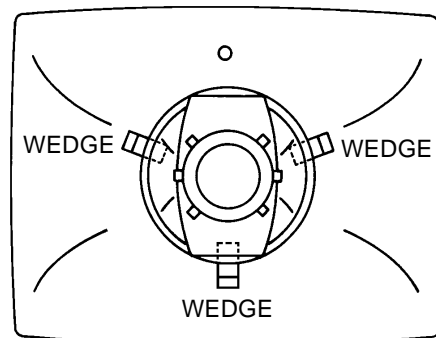



Fig. 3-2-b

# ELECTRICAL ADJUSTMENTS


## 4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

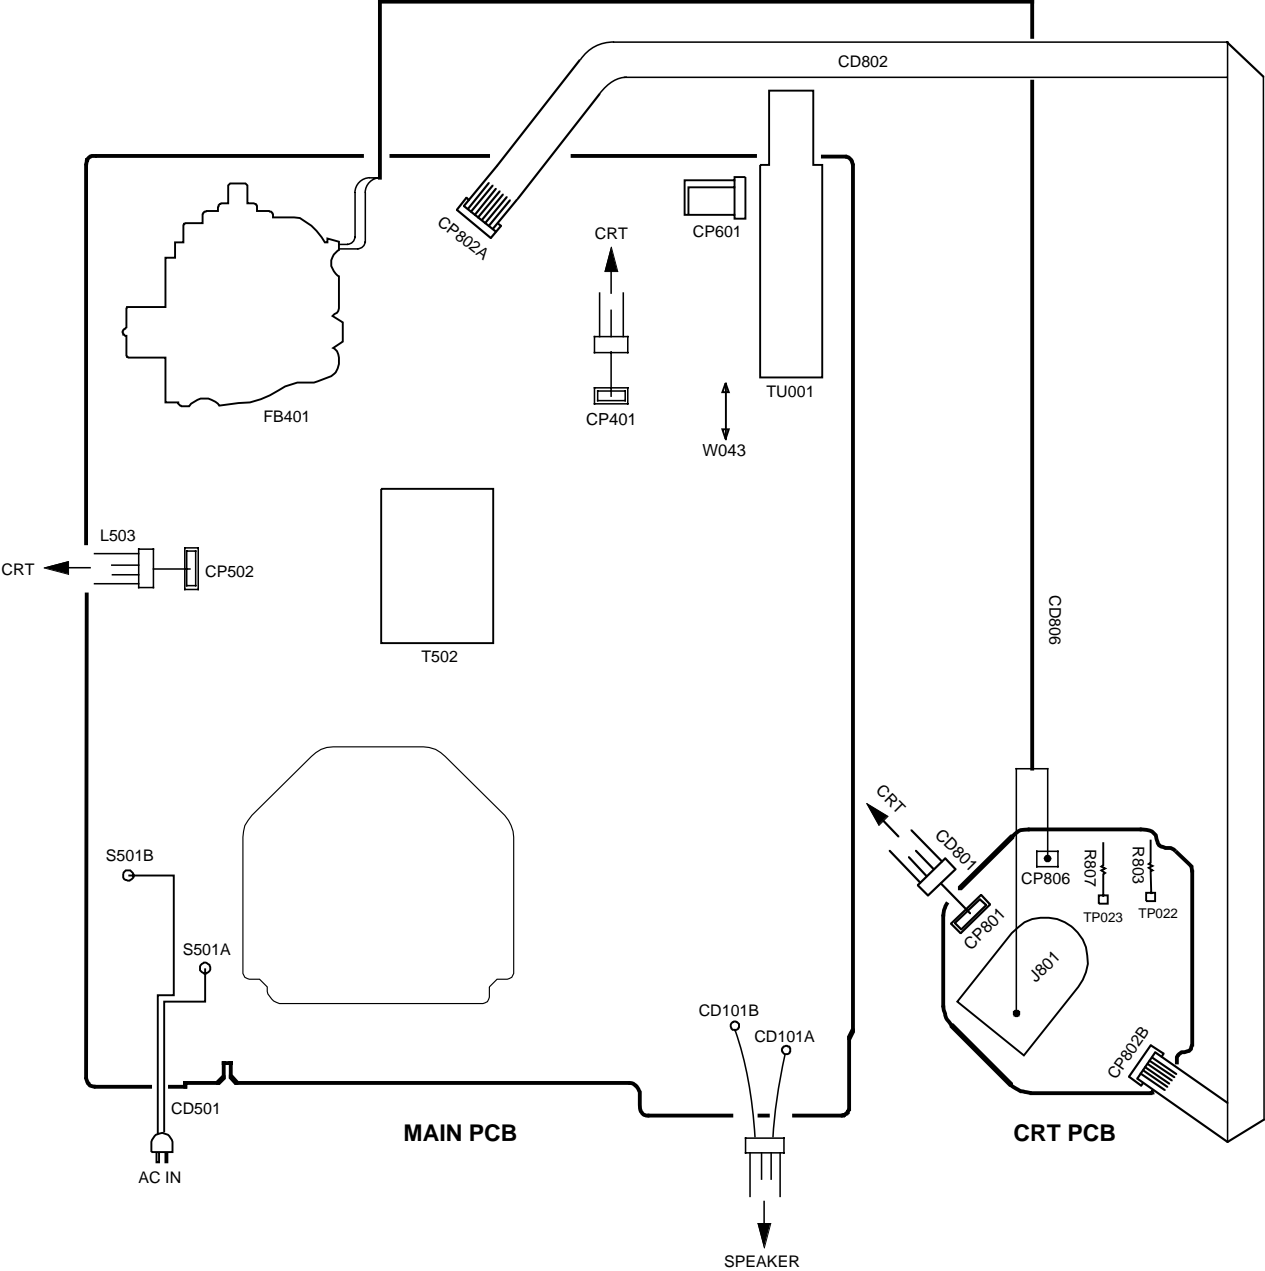

# BLOCK DIAGRAM

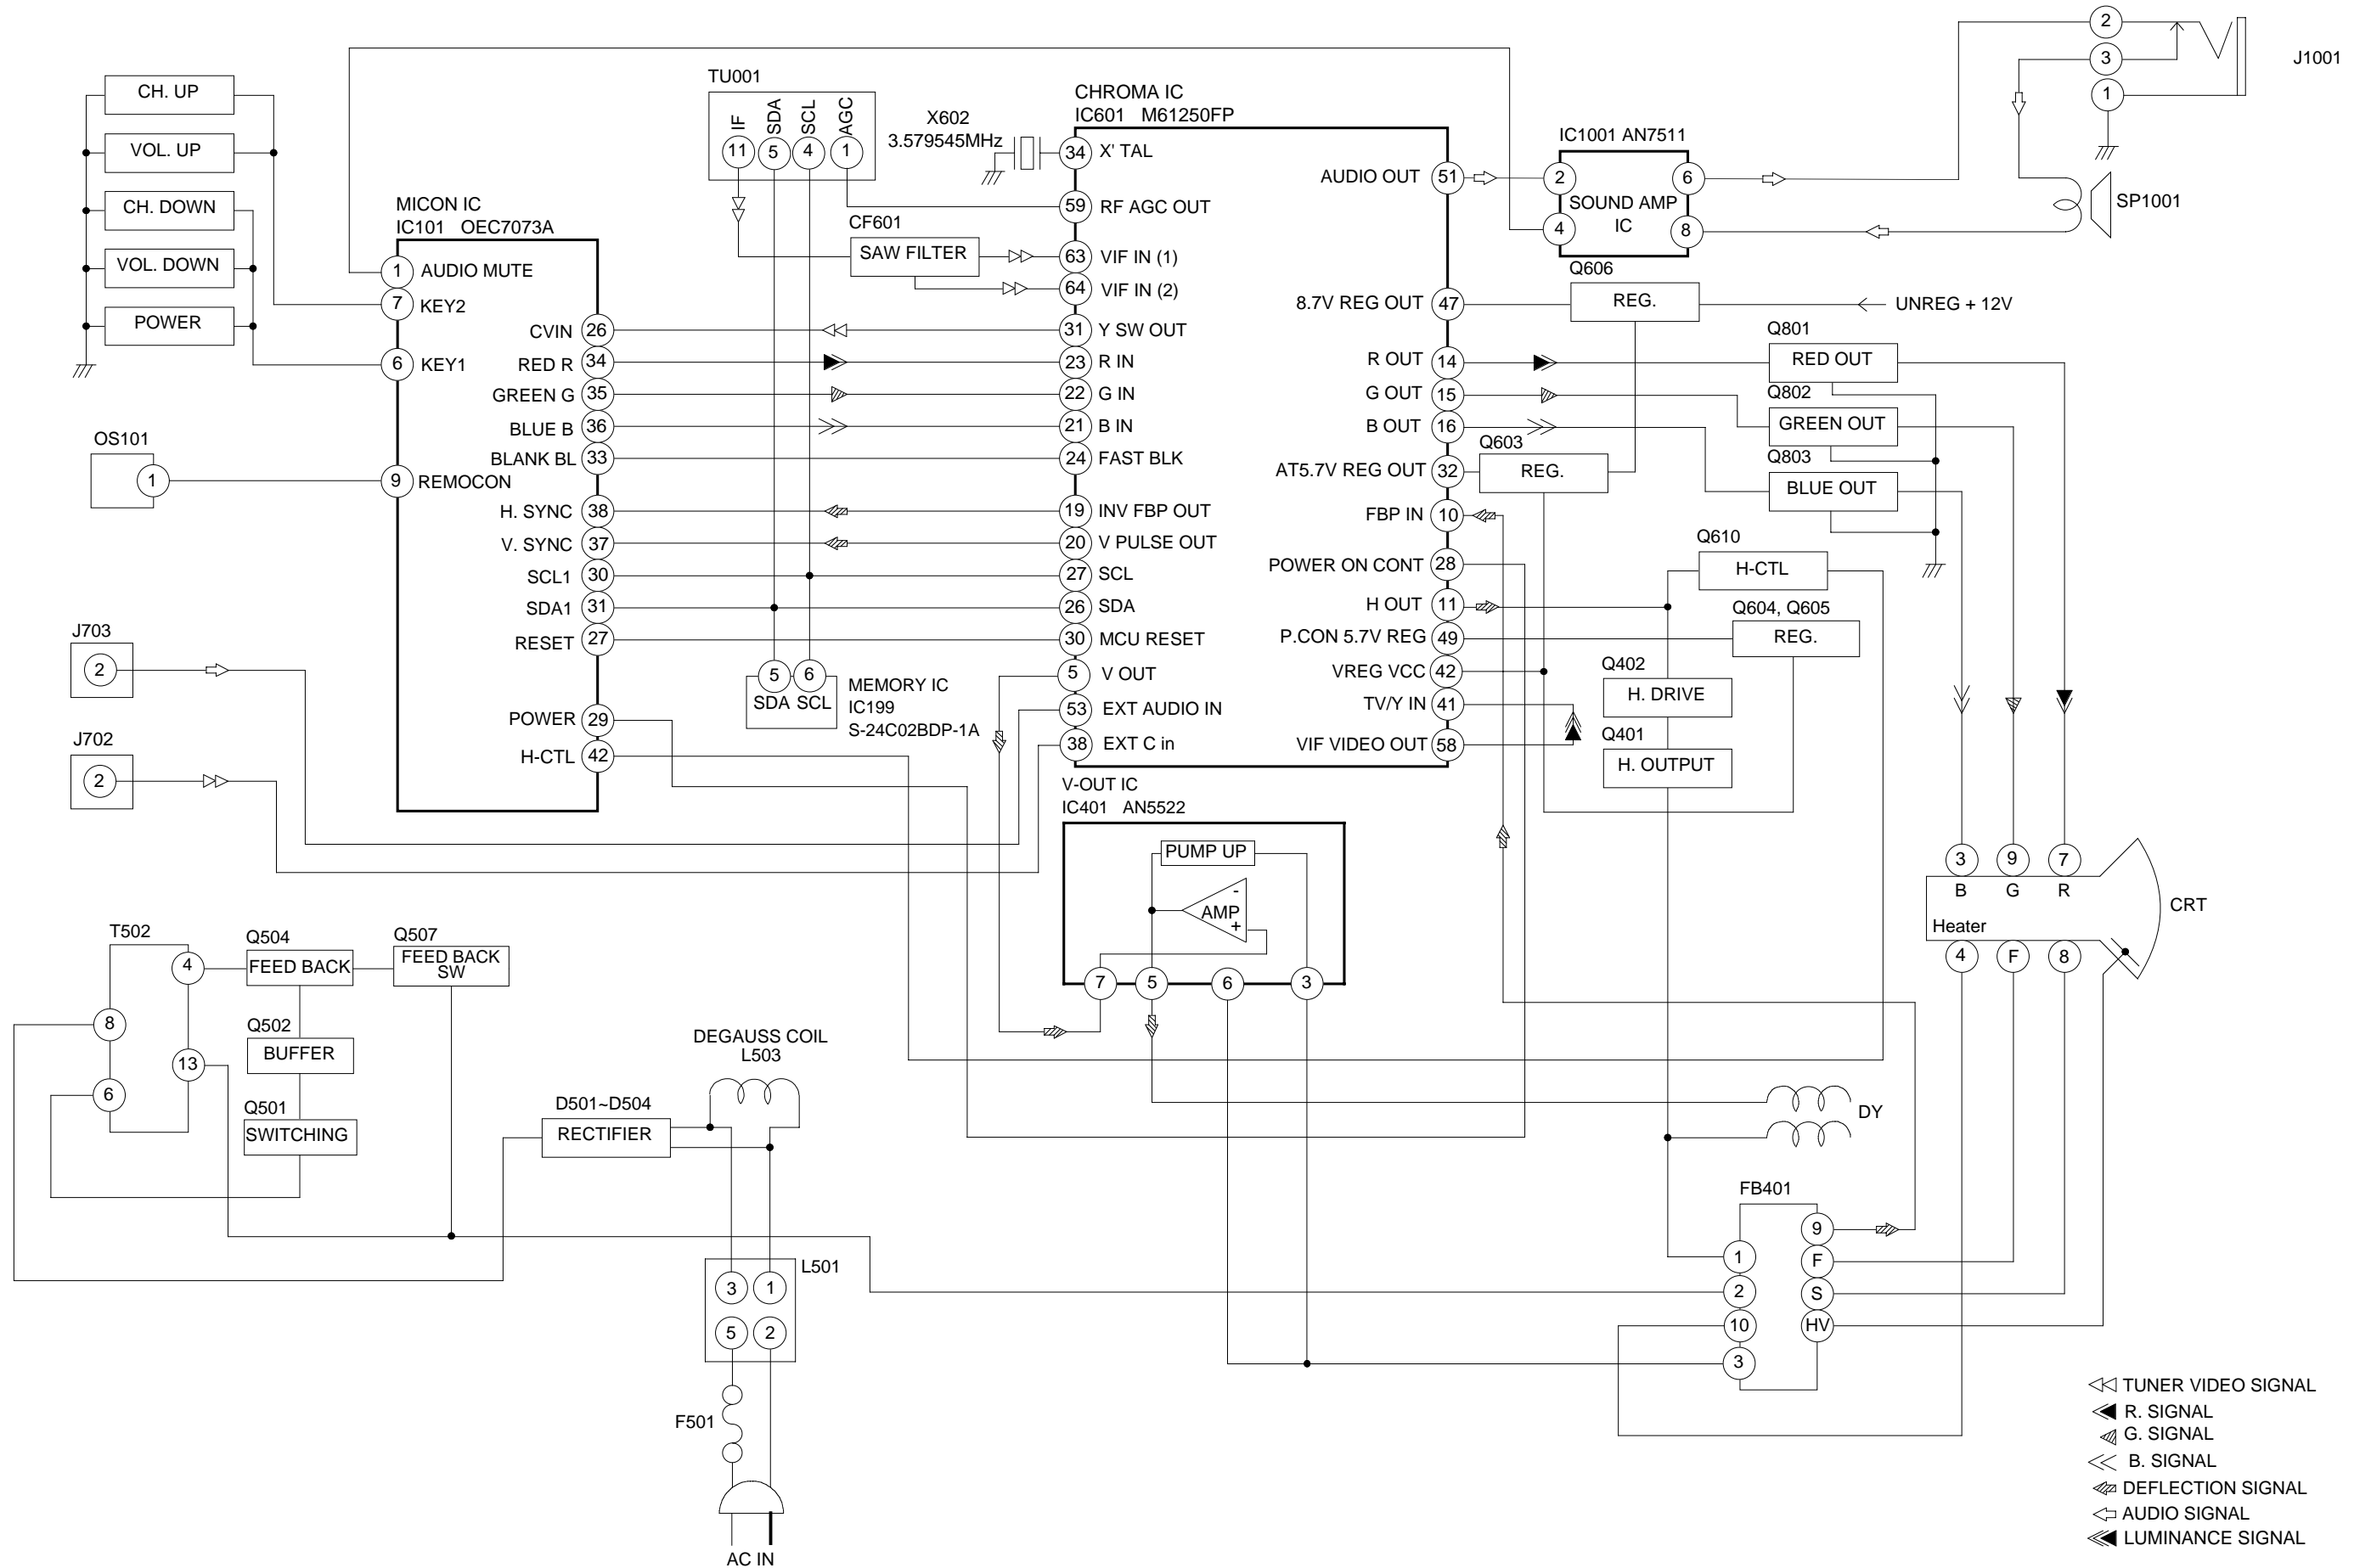


PRINTED CIRCUIT BOARDS  
MAIN/CRT (INSERTED PARTS)  
SOLDER SIDE

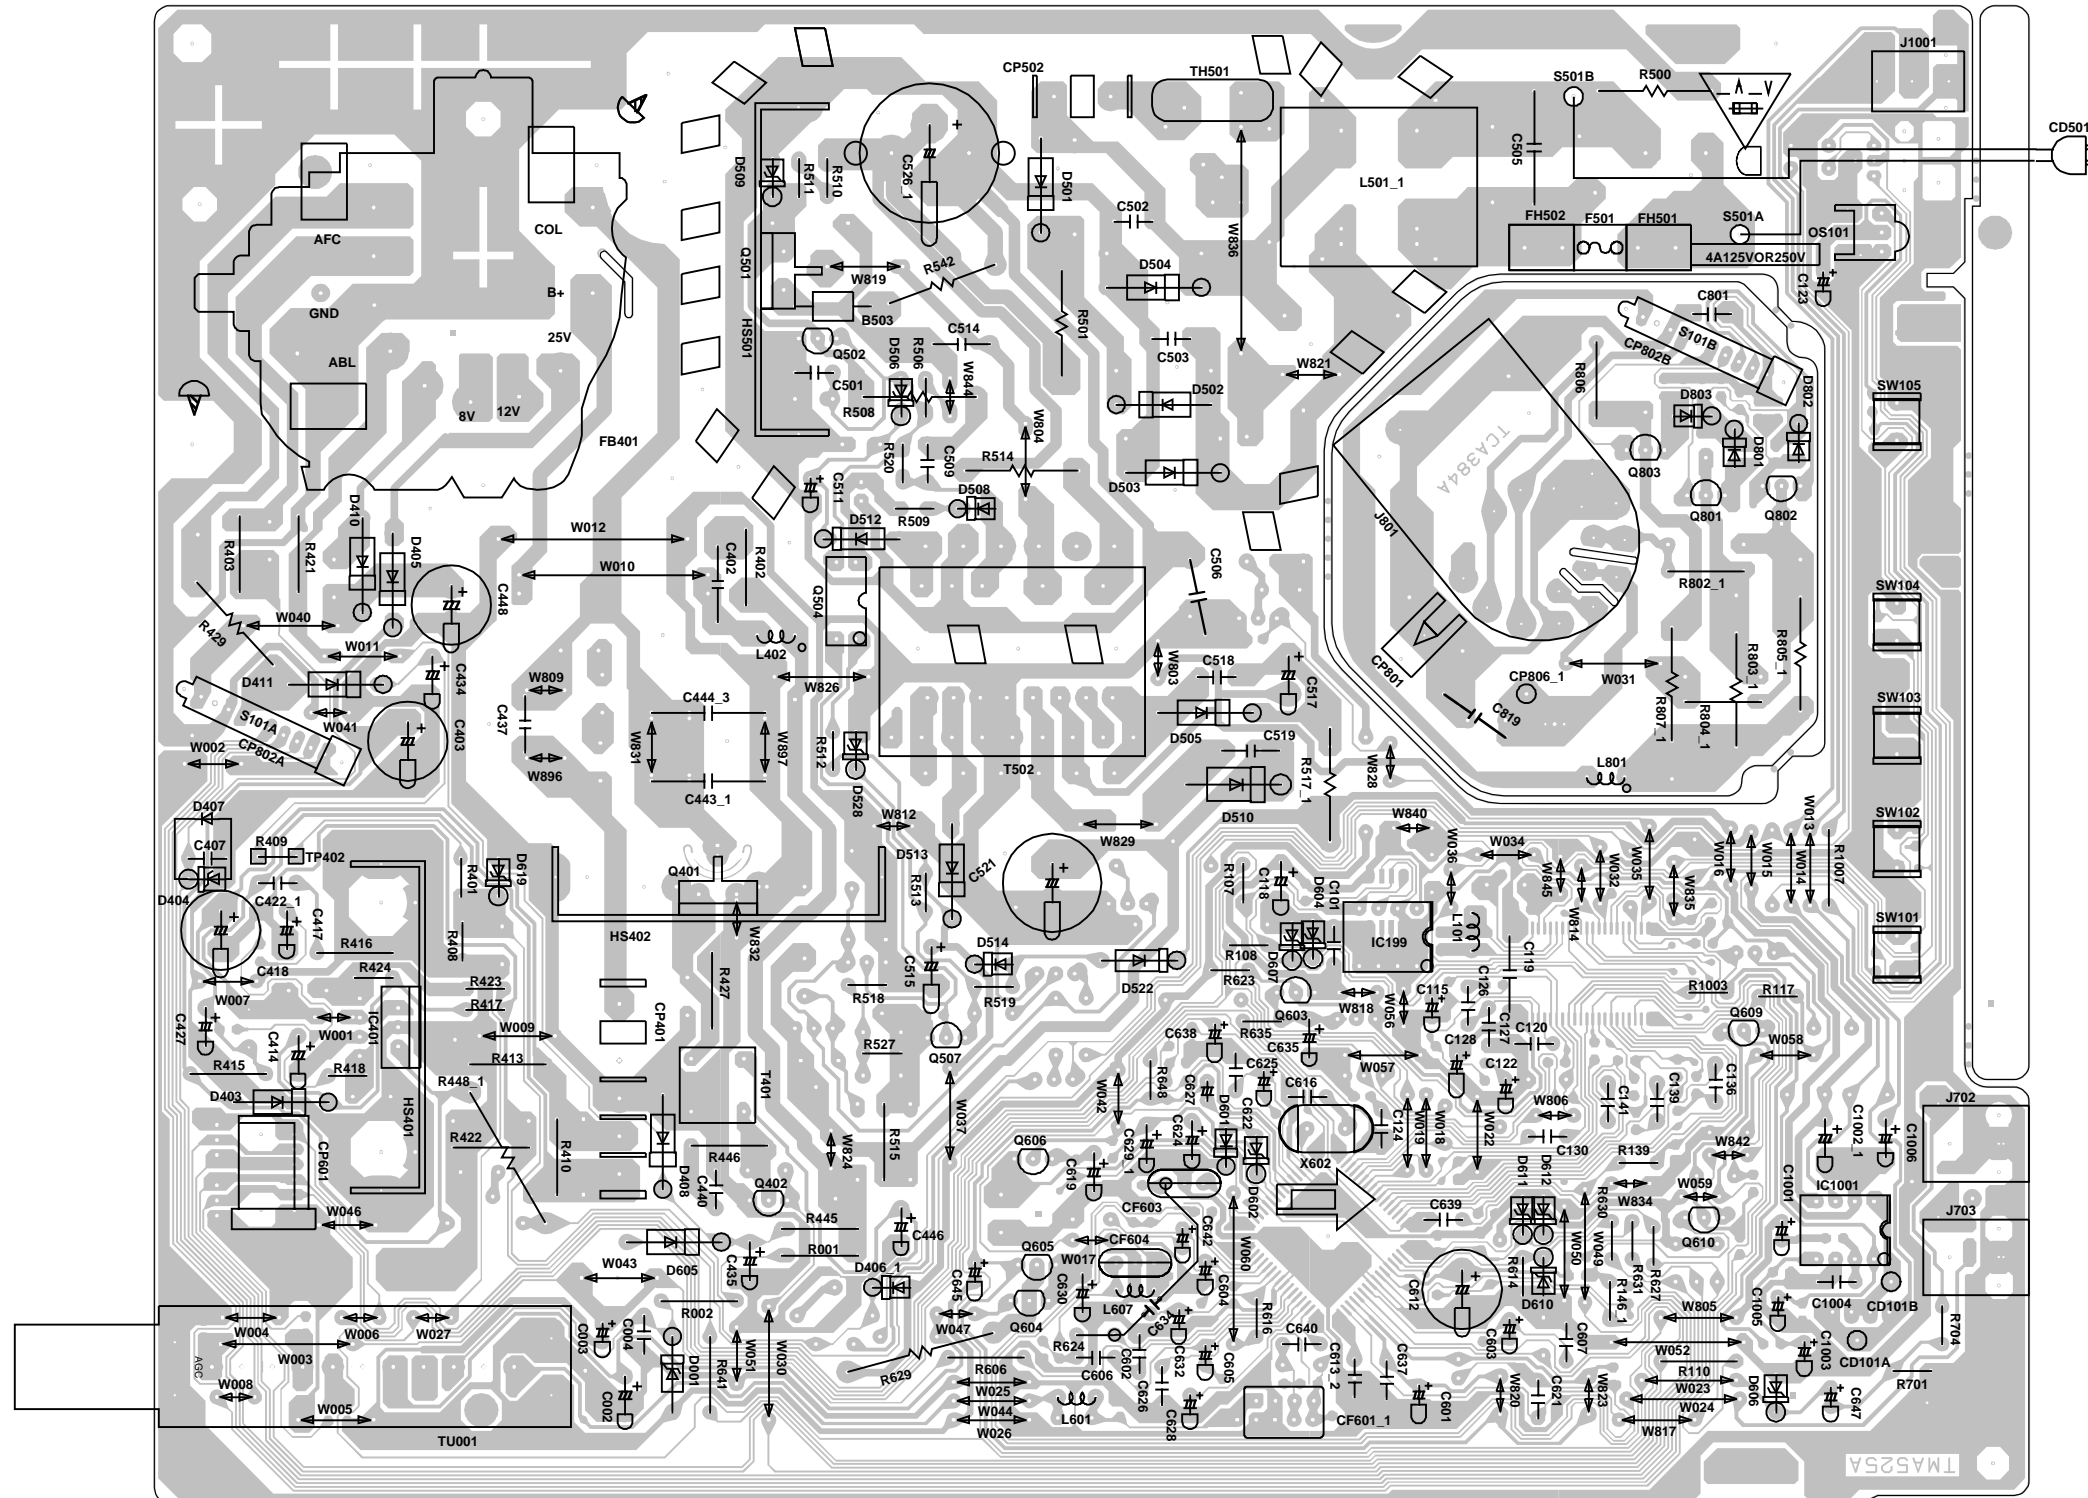



# MICON/TUNER SCHEMATIC DIAGRAM (MAIN PCB)

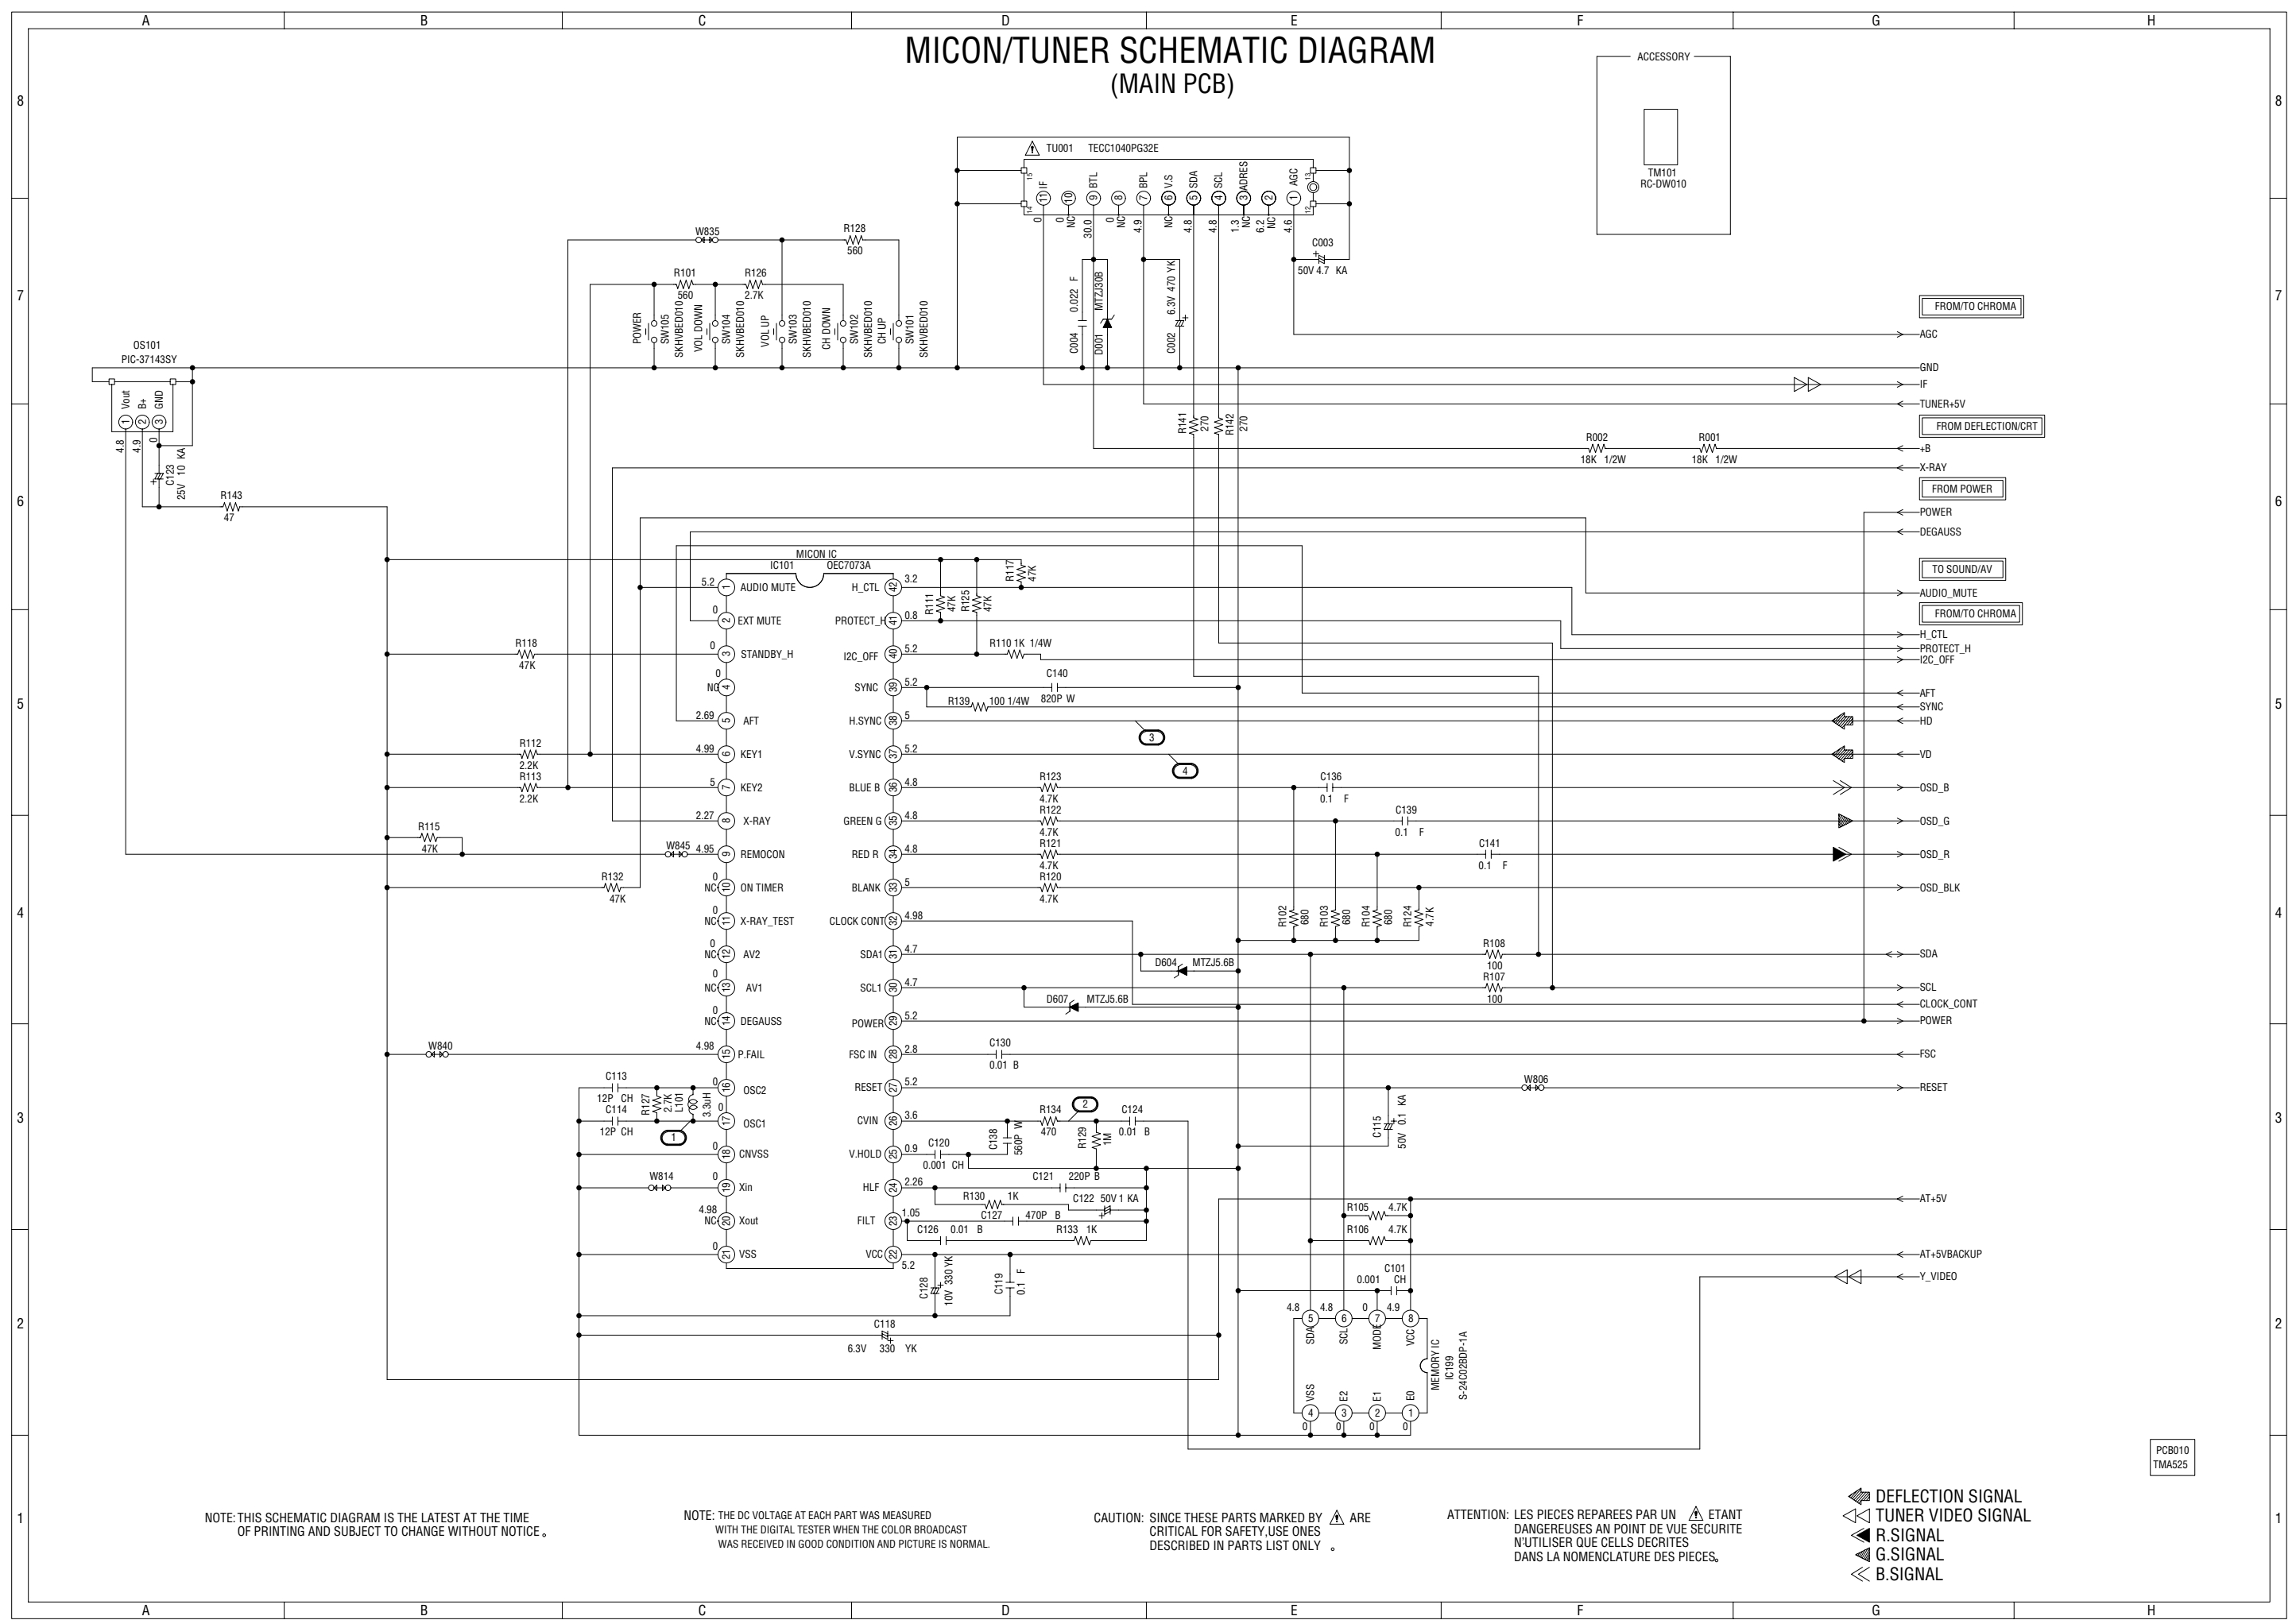

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: SINCE THESE PARTS MARKED BY  $\triangle$  ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIÈCES REPARÉES PAR UN  $\triangle$  ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLES DECRITES DANS LA NOMENCLATURE DES PIÈCES.


- $\triangle$  DEFLECTION SIGNAL
- $\blacktriangleleft$  TUNER VIDEO SIGNAL
- $\blacktriangleleft$  R.SIGNAL
- $\blacktriangleleft$  G.SIGNAL
- $\blacktriangleleft$  B.SIGNAL

PCB010  
TMA525



# CHROMA SCHEMATIC DIAGRAM

(MAIN PCB)

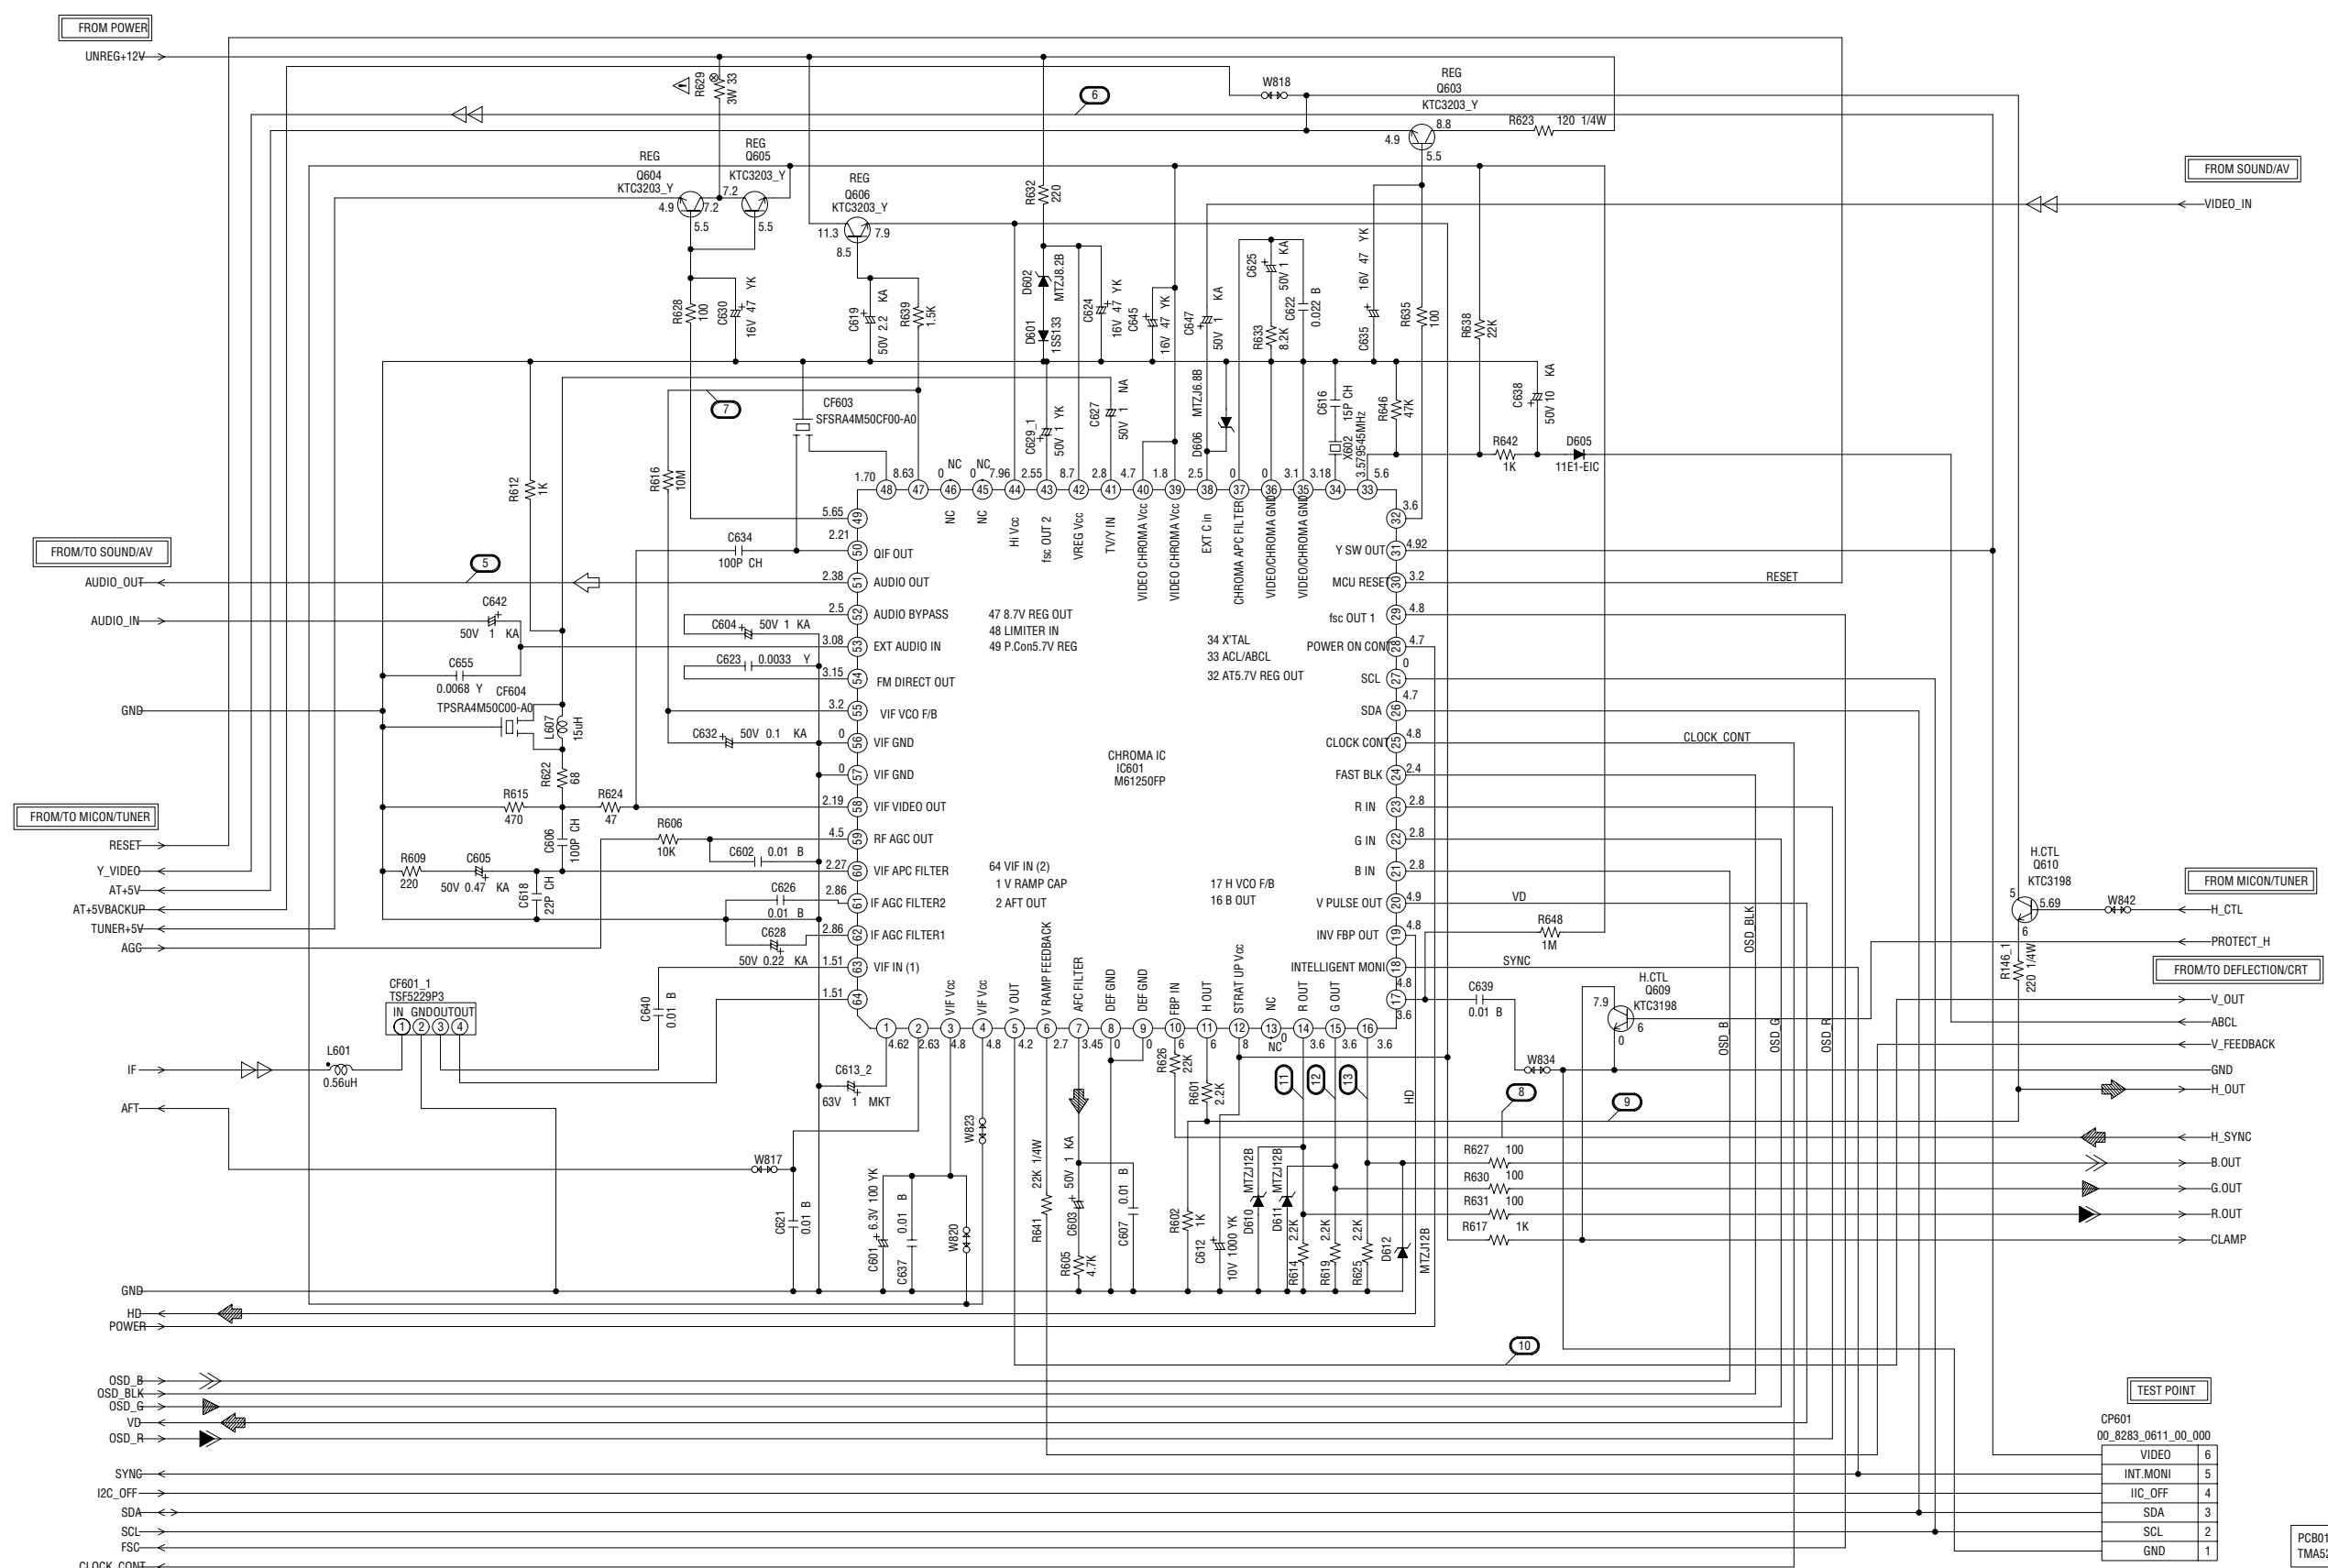

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.  
THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP  
IS NON POLAR ONE.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED  
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST  
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT  
DANGEREUSES AN POINT DE VUE SÉCURITÉ  
N'UTILISER QUE CELLES DÉCRITES  
DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE  
CRITICAL FOR SAFETY, USE ONES  
DESCRIBED IN PARTS LIST ONLY.

- TUNER VIDEO SIGNAL
- R.SIGNAL
- G.SIGNAL
- B.SIGNAL
- LUMINANCE SIGNAL
- AUDIO SIGNAL
- DEFLECTION SIGNAL


TEST POINT	
CP601	00_8283_0611_00_000
VIDEO	6
INT.MONI	5
IIC_OFF	4
SDA	3
SCL	2
GND	1

PCB010  
TMA525

# POWER SCHEMATIC DIAGRAM (MAIN PCB)



CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,  
REPLACE ONLY WITH THE SAME TYPE 4A 125V (F501)  
FUSE  
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES  
D'INCENDIE N'UTILISER QUE DES FUSIBLES DE MEME  
TYPE 4A 125V (F501).

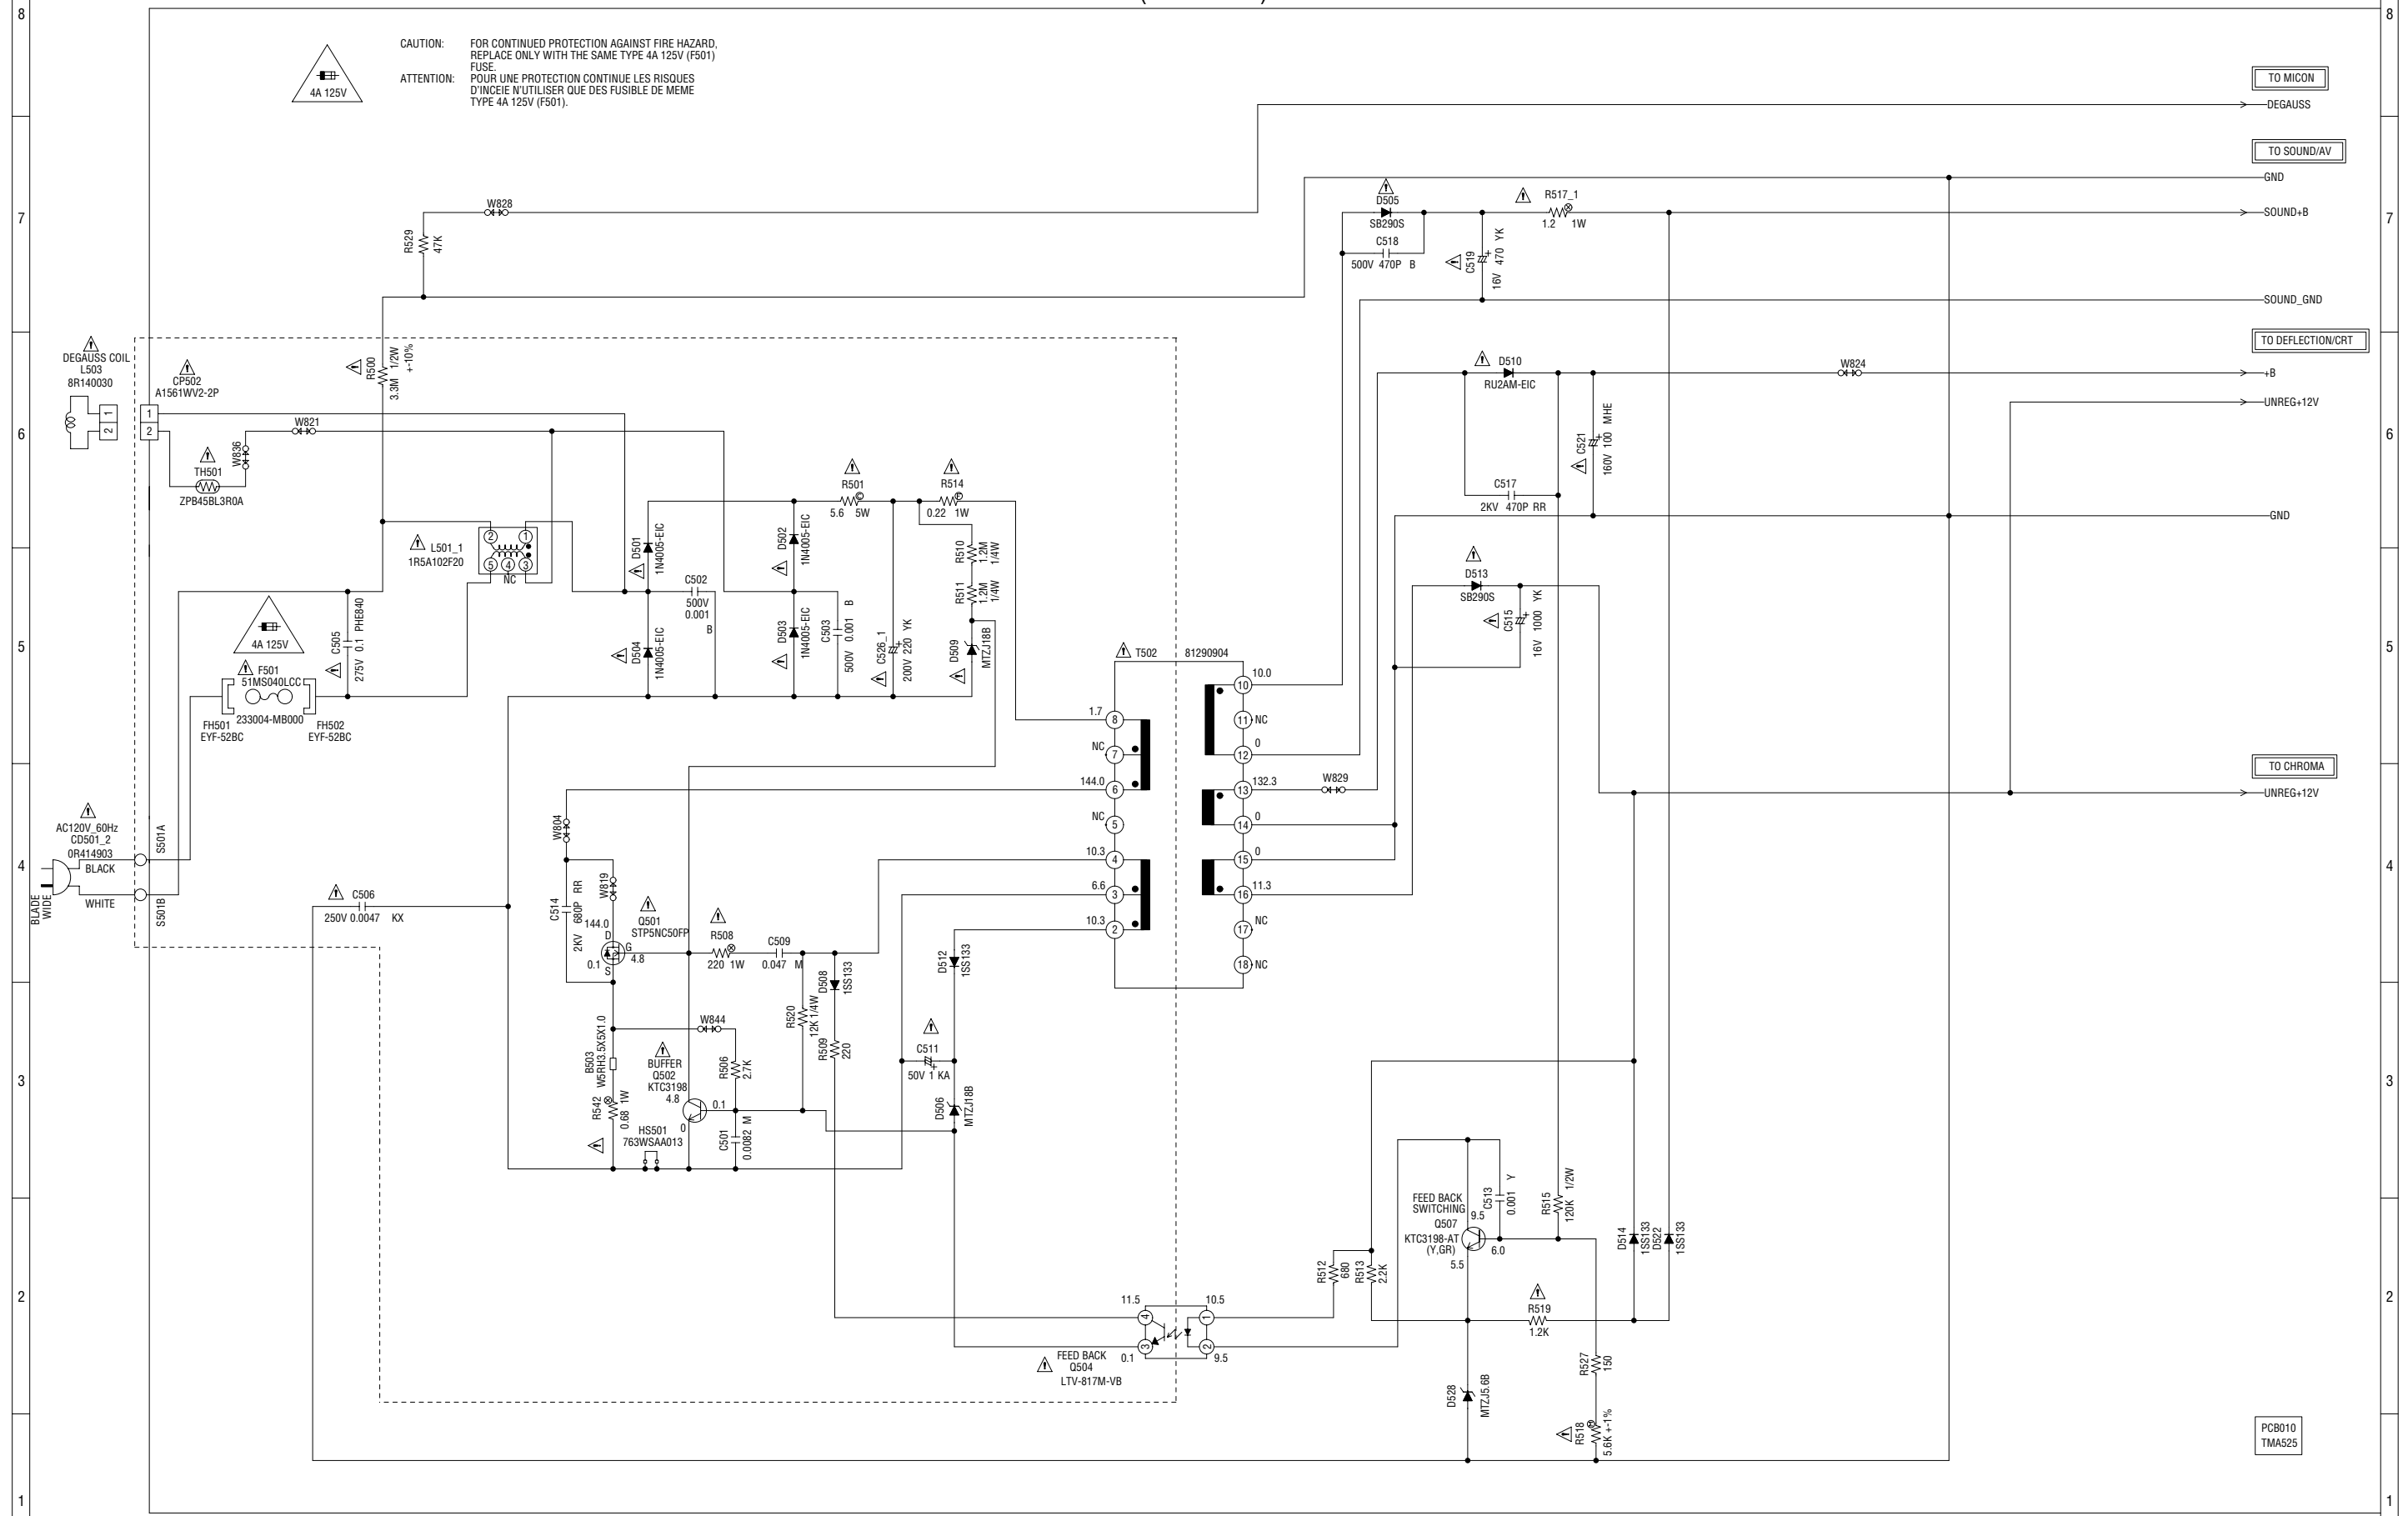

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ETANT DANGEREUSES AU POINT DE VUE SECURITE N'UTILISER QUE CELLES DECRITES DANS LA NOMENCLATURE DES PIECES.

PCB010  
TMA525

# DEFLECTION/CRT SCHEMATIC DIAGRAM (MAIN PCB)

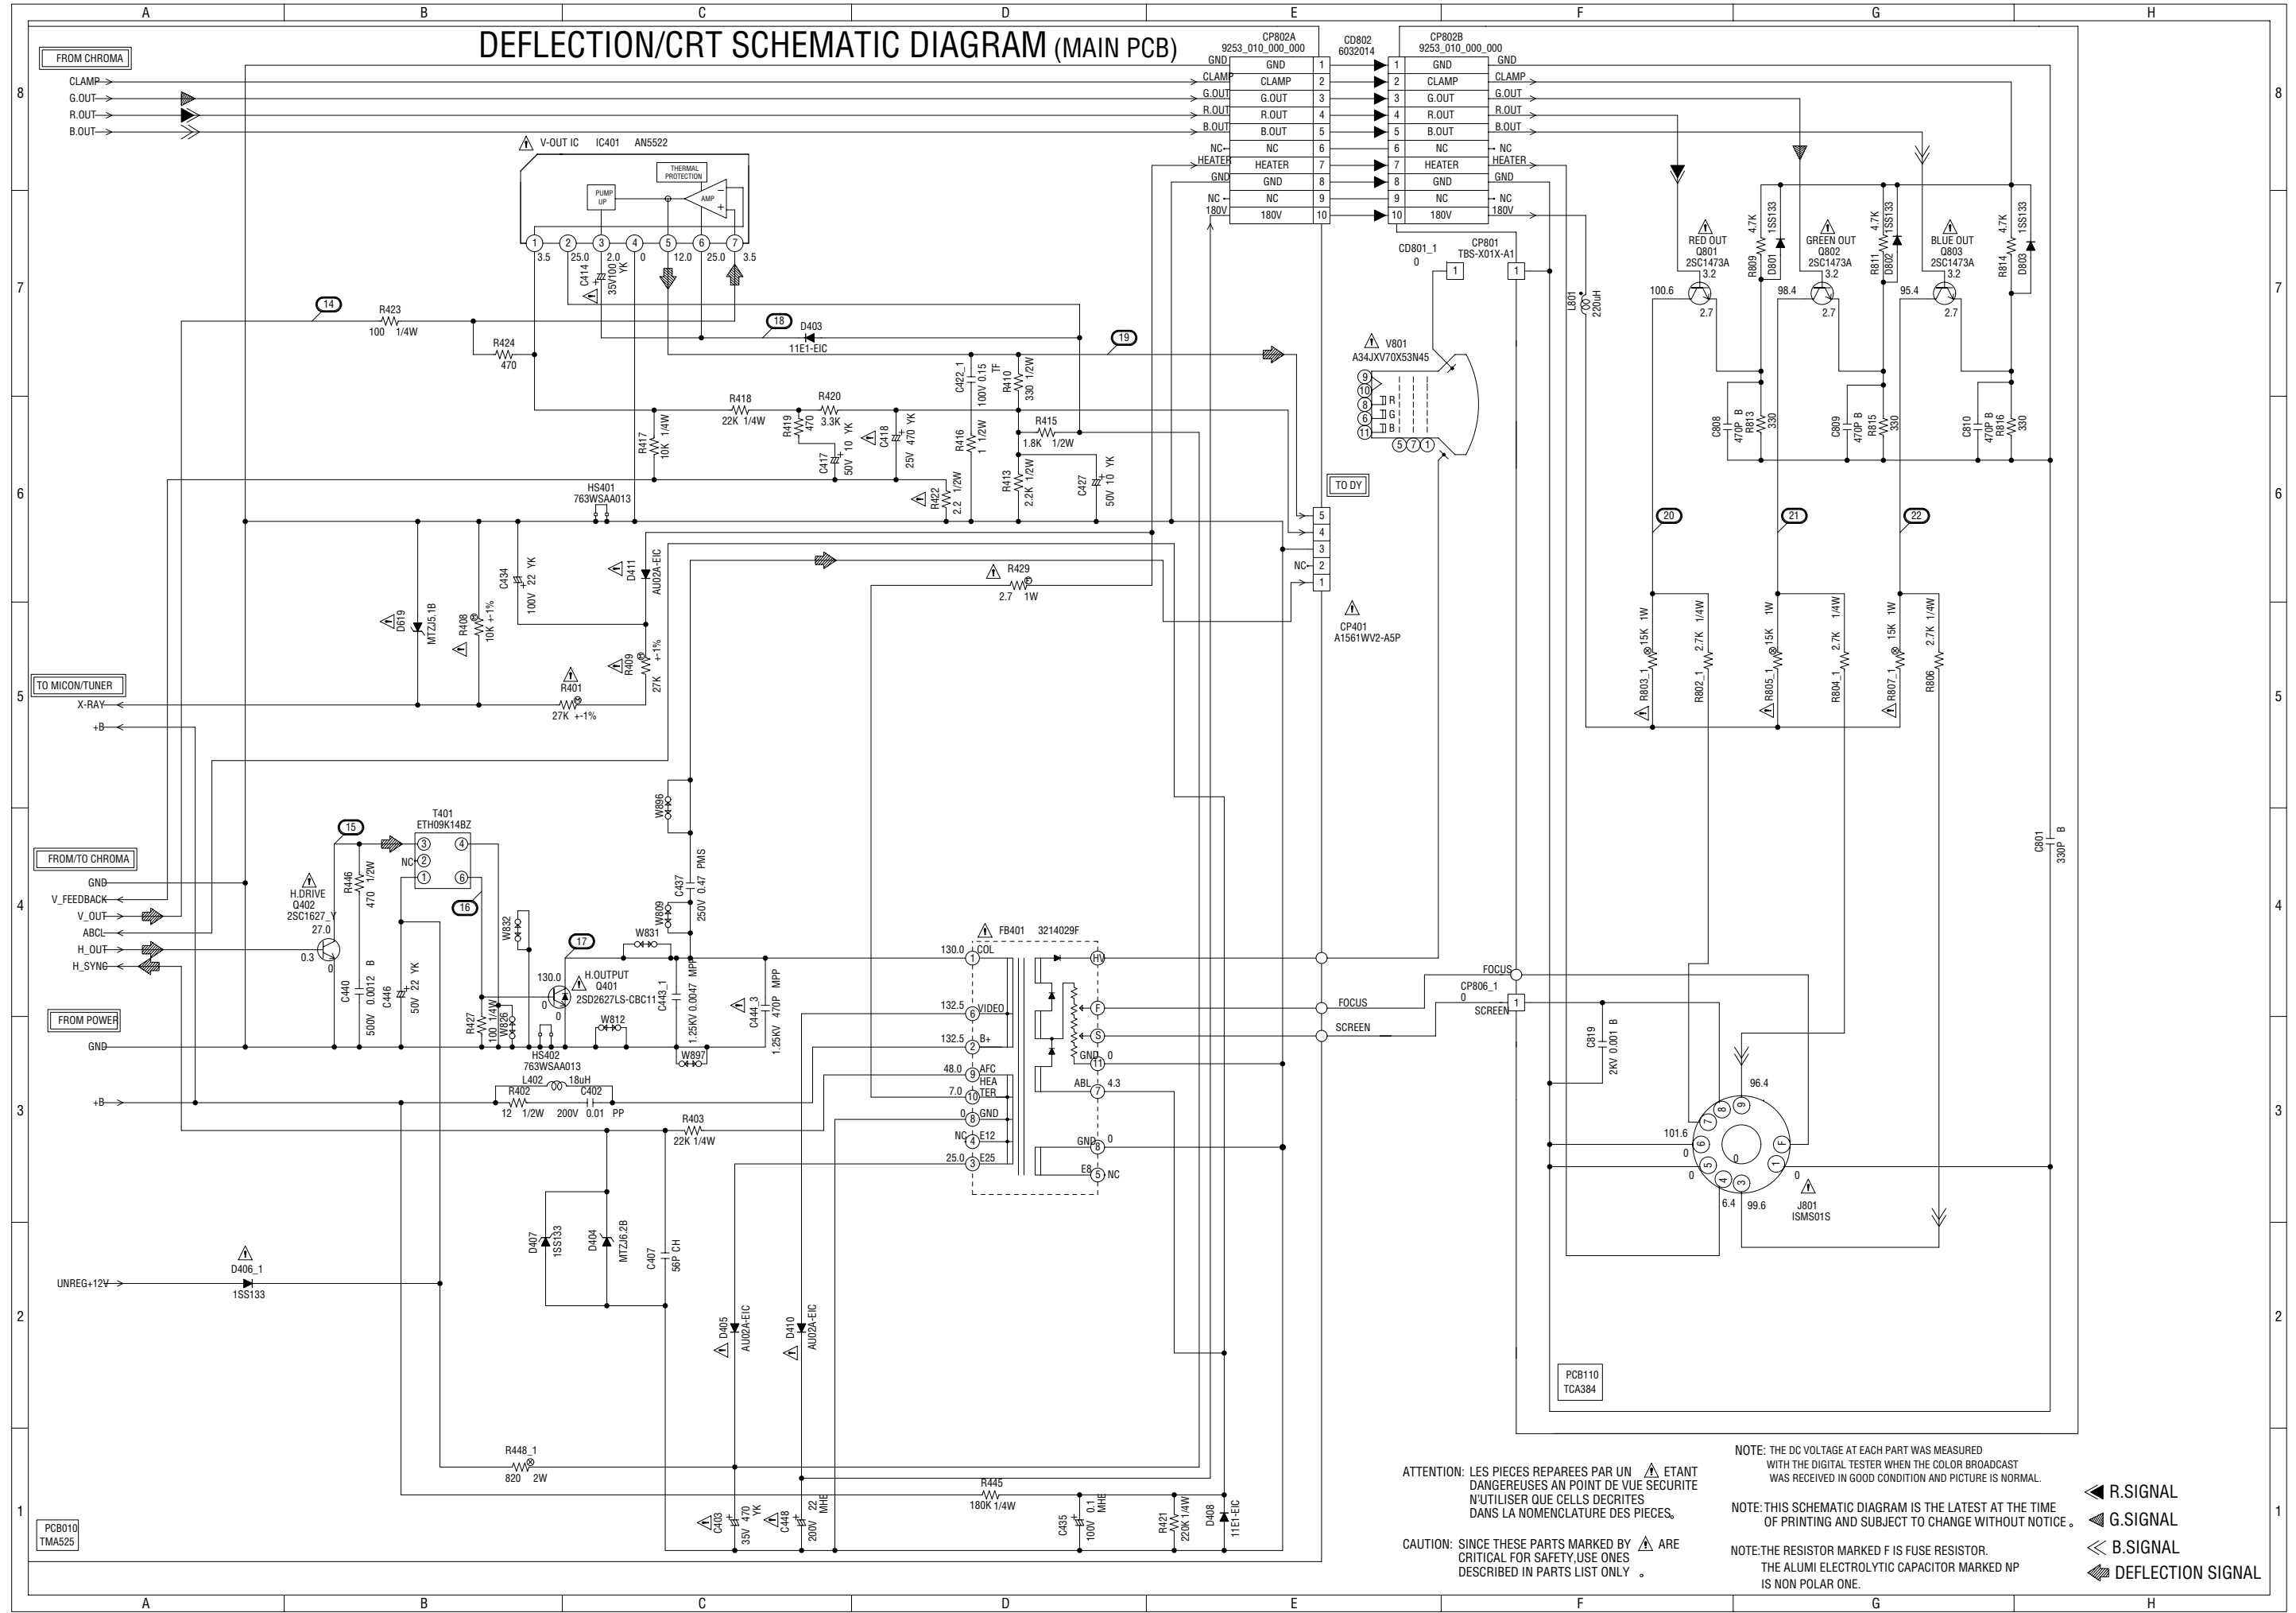

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

- R.SIGNAL
- G.SIGNAL
- B.SIGNAL
- DEFLECTION SIGNAL

# SOUND/AV SCHEMATIC DIAGRAM (MAIN PCB)

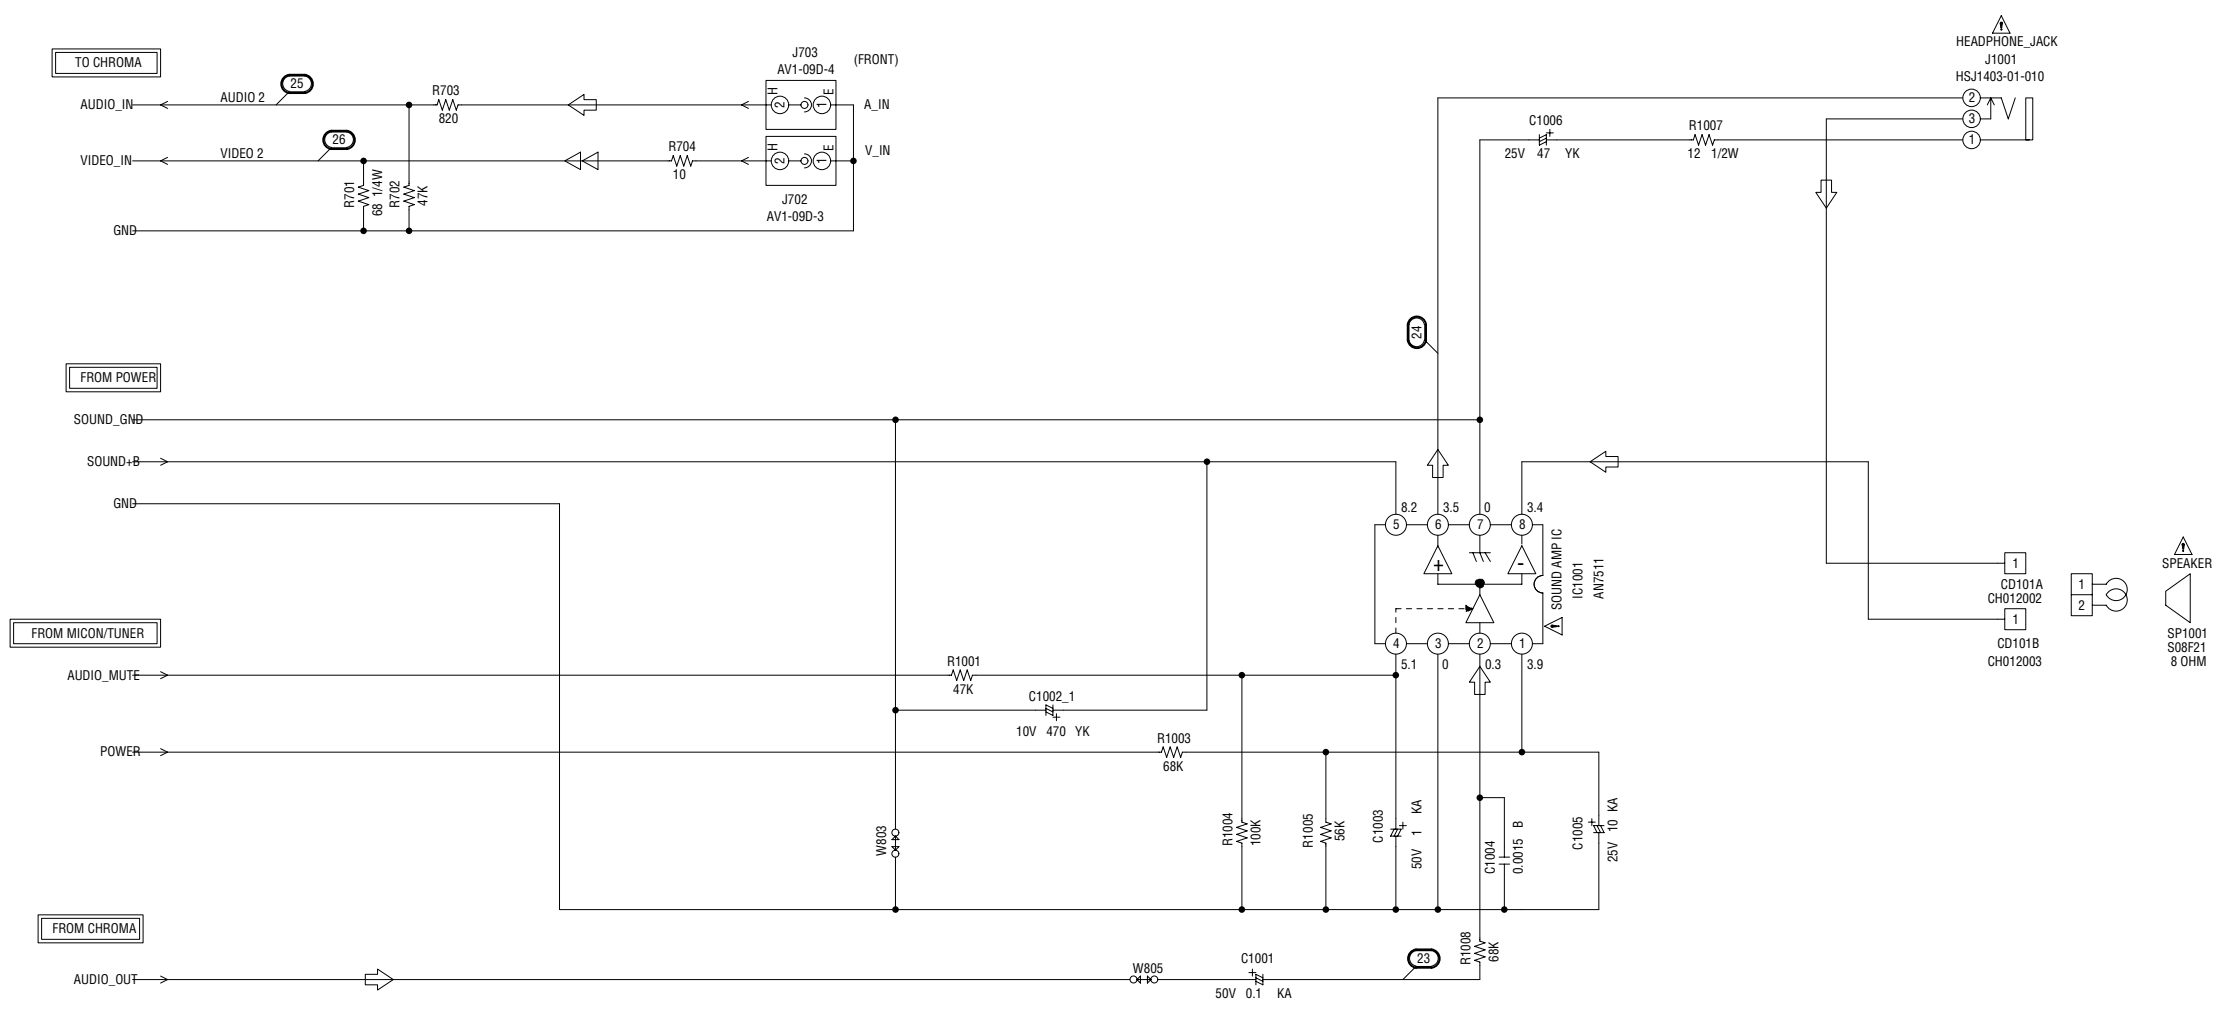

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.


ATTENTION: LES PIECES REPAREES PAR UN ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

TUNER VIDEO SIGNAL  
 AUDIO SIGNAL


PC8010  
TMA525

# WAVEFORMS


## MICON/TUNER

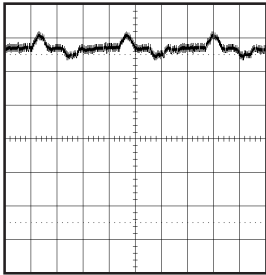


① 200mV 5ms/div

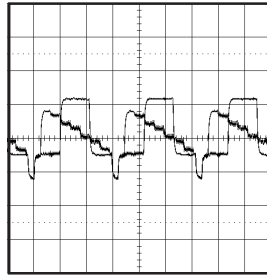


⑥ 0.5V 20μs/div

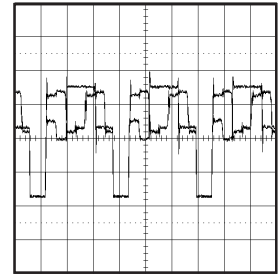


⑪ 1V 20μs/div

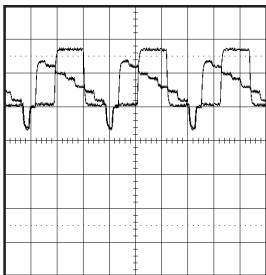


② 0.5V 20μs/div

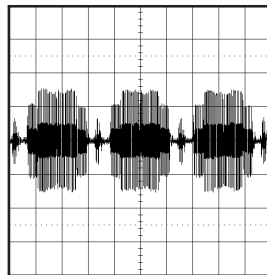


⑦ 200mV 20μs/div

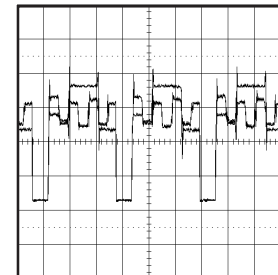


⑫ 1V 20μs/div

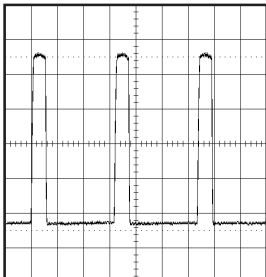


③ 200mV 20μs/div

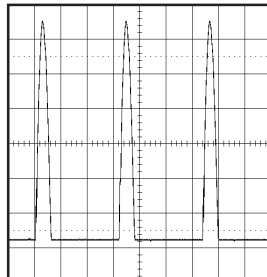


⑧ 20V 20μs/div

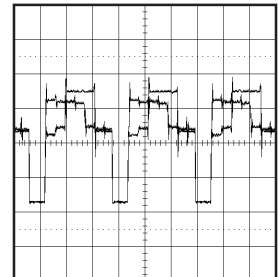


⑬ 1V 20μs/div

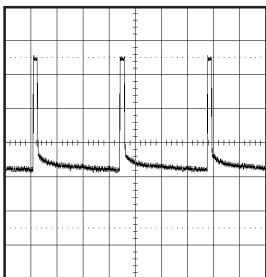

④ 200mV 5ms/div

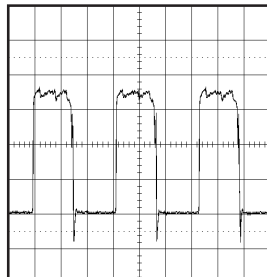


⑨ 200mV 20μs/div

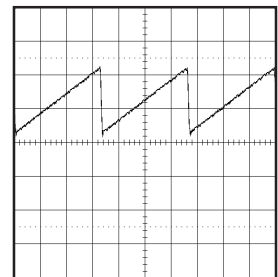


⑭ 0.5V 5ms/div


## CHROMA

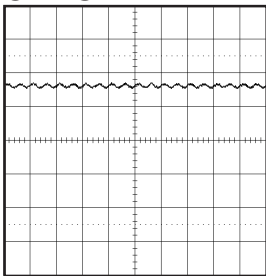

⑤ 0.5V 2ms/div

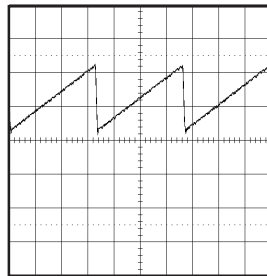

⑩ 0.5V 5ms/div

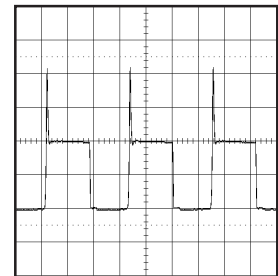


⑮ 20V 20μs/div


## DEFLECTION/CRT

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


## WAVEFORMS

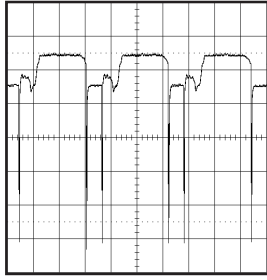


①⑥ 2V 20 $\mu$ s/div

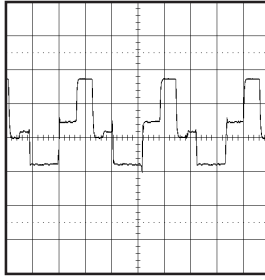


②① 50V 20 $\mu$ s/div

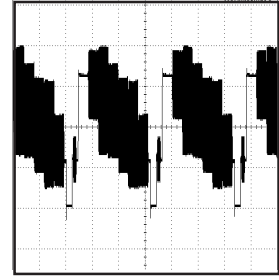


②⑥ 500mV 20 $\mu$ s/div

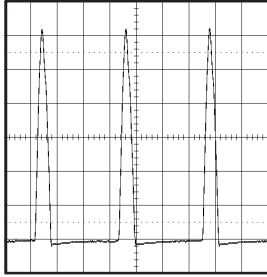


①⑦ 200V 20 $\mu$ s/div

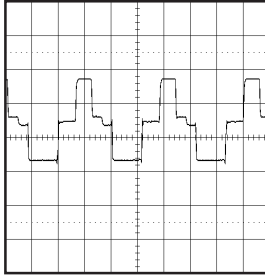

②② 50V 20 $\mu$ s/div

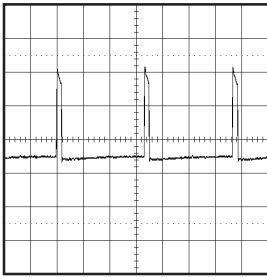


①⑧ 10V 5ms/div

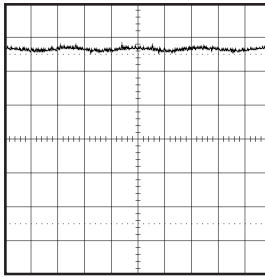


②③ 0.5V 1ms/div


## SOUND/AV

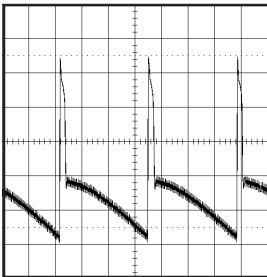


①⑨ 10V 5ms/div

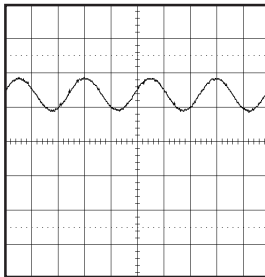

②④ 1V 1ms/div

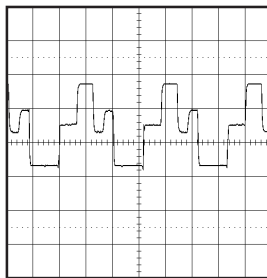


②⑦ 50V 20 $\mu$ s/div

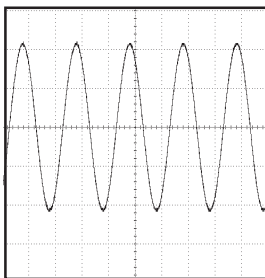

②⑤ 200mV 500 $\mu$ s/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

# MECHANICAL EXPLODED VIEW

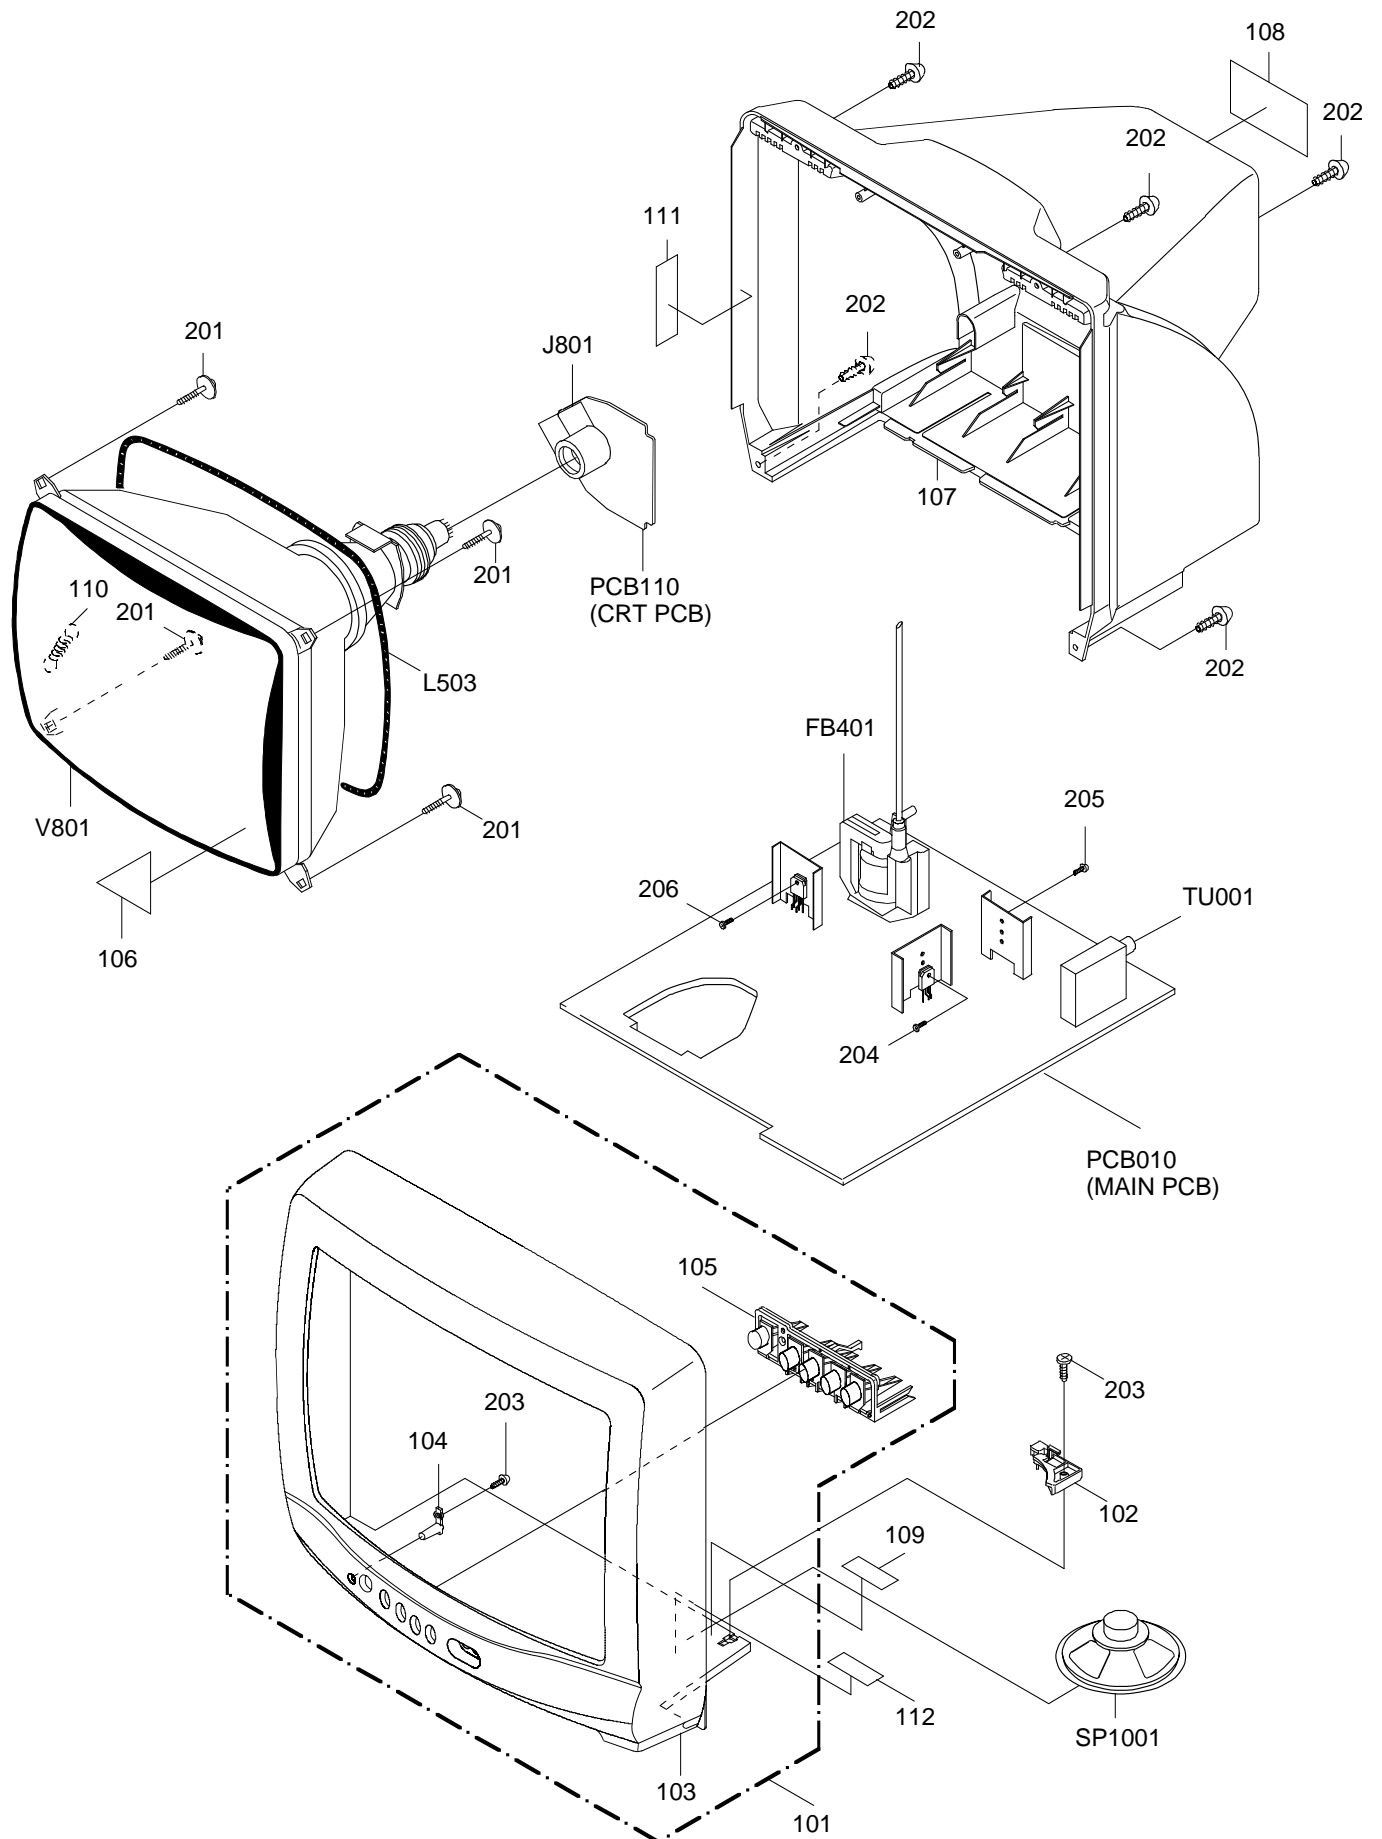

## MECHANICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION
101	A3L122C720	CABINET,FRONT ASS'Y
102	735WPA0396	SPEAKER,HOLDER
103	701WPJB679	CABINET,FRONT
104	713WPAA048	GUIDE,REMOCON
105	735WPAA417	BUTTON,FRAME
106	723000B319	FILM,DECORATION
107	702WPAA134	CABINET,BACK
108	722552A020	SHEET,RATING
109	7230006818	SHEET,CAUTION
110	741WUA0019	SPRING,EARTH
111	7220001119	SHEET,CSA WARNING
112	722000A023	SHEET,HWC
201	8121J50B54	SCREW,TAPPING(B0)      GW20      5x28
202	8117540A64	SCREW,TAPPING(B0)      TRUSS      4x16
203	8110630A04	SCREW,TAP TITE(P)      BRAZIER      3x10
204	8109130A04	SCREW,TAP TITE(B)      WH7      3x10
205	8109630802	SCREW,TAP TITE(B)      BRAZIER      3x8
206	8109130604	SCREW,TAP TITE(B)      WH7      3x6
---	JB5K0200	POLYBAG,INSTRUCTION
---	J3L10502	WARRANTY SHEET
---	J3L21101	INSTRUCTION BOOK
---	791WHA0023	LAMIFILM BAG
---	A3L211C975	INSTRUCTION BOOK KIT
---	792WHAA018	PACKAGE,BOTTOM
---	792WHAA019	PACKAGE,TOP
---	793WCDB256	GIFT BOX
---	7230007398	SECURITY TAG



# ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<b>RESISTORS</b>			<b>DIODES</b>		
△ R401	R4X5T6273F	R,METAL 27K OHM 1/6W	D802	D1VT001330	DIODE,SILICON 1SS133T-77
△ R408	R4X5T6103F	R,METAL 10K OHM 1/6W	D803	D1VT001330	DIODE,SILICON 1SS133T-77
△ R409	R4X5T6273F	R,METAL 27K OHM 1/6W	<b>ICS</b>		
△ R429	R655812R7J	R,FUSE 2.7 OHM 1W	IC101	I56F07073A	IC OEC7073A
R448	R3X18A821J	R,METAL OXIDE 820 OHM 2W	IC199	A3L101C015	IC S-24C02BDP-1A
△ R500	R0G3K2335K	RC 3.3M OHM 1/2W	△ IC401	I01TD55220	IC AN5522
△ R501	R5Y2C5R6J	R,CEMENT 5.6 OHM 5W	IC601	I06FC61250	IC M61250FP
△ R508	R3X181221J	R,METAL OXIDE 220 OHM 1W	IC1001	I01DP75110	IC AN7511
△ R509	R001T6221J	RC 220 OHM 1/6W	<b>TRANSISTORS</b>		
△ R514	R63581R22J	R,FUSE 0.22 OHM 1W	△ Q401	TD30026270	TRANSISTOR SILICON 2SD2627LS-CBC11
△ R515	R002T2124J	RC 120K OHM 1/2W	△ Q402	TC5T01627Y	TRANSISTOR SILICON 2SC1627_Y(TPE2)
△ R517	R3X1811R2J	R,METAL OXIDE 1.2 OHM 1W	△ Q501	TJXG5NC500	FET STP5NC50FP
△ R518	R4X5T6562F	R,METAL 5.6K OHM 1/6W	△ Q502	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
△ R519	R001T6122J	RC 1.2K OHM 1/6W	△ Q504	0002E00610	PHOTO COUPLER LTV-817M-VB
△ R542	R3X181R68J	R,METAL OXIDE 0.68 OHM 1W	Q507	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
△ R629	R3X28B330J	R,METAL OXIDE 33 OHM 3W	Q603	TCAT032034	TRANSISTOR, SILICON KTC3203_Y-AT
△ R803	R3X181153J	R,METAL OXIDE 15K OHM 1W	Q604	TCAT032034	TRANSISTOR, SILICON KTC3203_Y-AT
△ R805	R3X181153J	R,METAL OXIDE 15K OHM 1W	Q605	TCAT032034	TRANSISTOR, SILICON KTC3203_Y-AT
△ R807	R3X181153J	R,METAL OXIDE 15K OHM 1W	Q606	TCAT032034	TRANSISTOR, SILICON KTC3203_Y-AT
<b>CAPACITORS</b>			Q609	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
C402	P3N1F2103J	CCP 0.01 UF 200V	Q610	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
△ C403	E02LT4471M	CE 470 UF 35V	△ Q801	TCKT1473A0	TRANSISTOR SILICON 2SC1473A-TA-(RQ)
△ C414	E02LT4101M	CE 100 UF 35V	△ Q802	TCKT1473A0	TRANSISTOR SILICON 2SC1473A-TA-(RQ)
△ C418	E02LT3471M	CE 470 UF 25V	△ Q803	TCKT1473A0	TRANSISTOR SILICON 2SC1473A-TA-(RQ)
△ C434	E02LT8220M	CE 22 UF 100V	<b>COILS &amp; TRANSFORMERS</b>		
C437	P4J7F3474J	CMPP 0.47 UF 250V PMS	L101	021LA63R3K	COIL 3.3 UH
△ C443	P4N8FJ472H	CMPP 0.0047UF 1.25KV	L402	02186G180M	COIL 18 UH
C444	P4N8FJ471J	CMPP 470 PF 1.25KV	△ L501	029T00A7M1	COIL,LINE FILTER 1R5A102F20
	C0PLRR7Q2K	CC 470 PF 2KV RR	△ L503	028R140030	COIL,DEGAUSS 8R140030
△ C446	E02LT5220M	CE 22 UF 50V	L601	021LA6R56M	COIL 0.56 UH
△ C448	E5EZ0C220M	CE 22 UF 200V	L607	021LA6150K	COIL 15 UH
△ C503	C0JTB0513K	CC 0.001 UF 500V B	L801	021673221K	COIL 220 UH
△ C505	P2472B104M	CMP 0.1 UF 275V PHE840	T401	045009003J	TRANS,HORIZONTAL DRIVE ETH09K14BZ
C506	CB3930MQ3M	CC 0.0047UF 250V	△ T502	0481290904	TRANSFORMER,SWITCHING 81290904
C514	C0PLRR7U2K	CC 680 PF 2KV RR	<b>JACKS</b>		
△ C515	E02LT2102M	CE 1000 UF 16V	J702	060Q401077	RCA JACK AV1-09D-3
C517	C0PLRR7Q2K	CC 470 PF 2KV RR	J703	060Q401076	RCA JACK AV1-09D-4
△ C519	E02LT2471M	CE 470 UF 16V	△ J801	066F120018	SOCKET,CRT ISMS01S
C521	E5EZFB101M	CE 100 UF 160V	J1001	0602121012	JACK,RCA 3.5 HJSJ1403-01-010
△ C526	E02LFC221M	CE 220 UF 200V	<b>SWITCHES</b>		
C634	CQG0CH412J	CC 100 PF 50V CH	SW101	0504201T31	SWITCH,TACT SKHVBED010
C819	C0JBB0713K	CC 0.001 UF 2KV B	SW102	0504201T31	SWITCH,TACT SKHVBED010
			SW103	0504201T31	SWITCH,TACT SKHVBED010
			SW104	0504201T31	SWITCH,TACT SKHVBED010
			SW105	0504201T31	SWITCH,TACT SKHVBED010
<b>DIODES</b>			<b>P.C.BOARD ASSEMBLIES</b>		
D001	D97U03001B	DIODE,ZENER MTZJ30B T-77	PCB010	A3L122C010	PCB ASS'Y TMA525A
D403	D2WT011E10	DIODE SILICON 11E1-EIC	PCB110	A3L117C110	PCB ASS'Y TCA384A
D404	D97U06R21B	DIODE,ZENER MTZJ6.2B T-77	<b>MISCELLANEOUS</b>		
△ D405	D2WTAU02A0	DIODE SILICON AU02A-EIC	B503	024HT03553	CORE,BEADS W5RH3.5X5X1.0
D406	D1VT001330	DIODE,SILICON 1SS133T-77	△ CD501	120R414903	CORD AC BUSH 0R414903
D407	D1VT001330	DIODE,SILICON 1SS133T-77	CF601	1029045R7G	FILTER,SAW TSF5229P3
D408	D2WT011E10	DIODE SILICON 11E1-EIC	CF603	1012T4R520	FILTER,CERAMIC SFSRA4M50CF00-A0
△ D410	D2WTAU02A0	DIODE SILICON AU02A-EIC	CF604	1012T4R519	FILTER,CERAMIC TRAP TPSRA4M50C00-A0
△ D411	D2WTAU02A0	DIODE SILICON AU02A-EIC	△ CP401	069S4500089	CONNECTOR PCB SIDE A1561WV2-A5P
D501	D2WXN40050	DIODE SILICON 1N4005-EIC	△ CP502	069S420110	CONNECTOR PCB SIDE A1561WV2-2P
△ D502	D2WXN40050	DIODE SILICON 1N4005-EIC	CP601	069E260659	CONNECTOR PCB SIDE 00_8283_0611_00_000
△ D503	D2WXN40050	DIODE SILICON 1N4005-EIC	CP801	069W010030	CONNECTOR PCB SIDE TBS-X01X-A1
D504	D2WXN40050	DIODE SILICON 1N4005-EIC	CD101A	06CH012002	CORD CONNECTOR CH012002
△ D505	D2WXB290S0	DIODE SILICON SB290S	CD101B	06CH012003	CORD CONNECTOR CH012003
D506	D97U01801B	DIODE,ZENER MTZJ18B T-77	CP802A	067N010039	WIRE HOLDER 9253_010_000_000
D508	D1VT001330	DIODE,SILICON 1SS133T-77		067U010049	WIRE HOLDER B2013H02-10P
△ D509	D97U01801B	DIODE,ZENER MTZJ18B T-77		067N010039	WIRE HOLDER 9253_010_000_000
△ D510	D2WXRU2AM0	DIODE SILICON RU2AM-EIC		067U010049	WIRE HOLDER B2013H02-10P
D512	D1VT001330	DIODE,SILICON 1SS133T-77	△ F501	081PC04004	FUSE 51MS040LCC
△ D513	D2WXB290S0	DIODE SILICON SB290S	△ FB401	043214029F	TRANSFORMER FLYBACK 3214029F
D514	D1VT001330	DIODE,SILICON 1SS133T-77	FH501	06710T0006	HOLDER,FUSE EYF-52BC
D522	D1VT001330	DIODE,SILICON 1SS133T-77	FH502	06710T0006	HOLDER,FUSE EYF-52BC
D528	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77	OS101	077Q037003	REMOTE RECEIVER PIC-37143SY
D601	D1VT001330	DIODE,SILICON 1SS133T-77	S101	WHL6032014	FLAT CABLE AWG26 10C BLACK 320MM
D602	D97U08R21B	DIODE,ZENER MTZJ8.2B T-77	SP1001	070Y132018	SPEAKER S08F21
D604	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77	△ TH501	DF5EL3R0A0	DEGAUSS ELEMENT ZPB45BL3R0A
D605	D2WT011E10	DIODE SILICON 11E1-EIC	TM101	076N0DW010	TRANSMITTER RC-DW010
D606	D97U06R81B	DIODE,ZENER MTZJ6.8B T-77	△ TU001	0145K00056	TUNER,VHF-UHF TECC1040PG32E
D607	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77	△ V801	098Y1404B9	CRT W/DY A34JXV70X53N45
D610	D97U01201B	DIODE,ZENER MTZJ12B T-77	X602	100CT3R505	CRYSTAL HC-49/C
D611	D97U01201B	DIODE,ZENER MTZJ12B T-77			
D612	D97U01201B	DIODE,ZENER MTZJ12B T-77			
△ D619	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77			
D801	D1VT001330	DIODE,SILICON 1SS133T-77			

# ELECTRICAL REPLACEMENT PARTS LIST

## RESISTOR

RC..... CARBON RESISTOR

## CAPACITORS

CC..... CERAMIC CAPACITOR

CE..... ALUMI ELECTROLYTIC CAPACITOR

CP..... POLYESTER CAPACITOR

CPP..... POLYPROPYLENE CAPACITOR

CPL..... PLASTIC CAPACITOR

CMP..... METAL POLYESTER CAPACITOR

CMPL..... METAL PLASTIC CAPACITOR

CMPP..... METAL POLYPROPYLENE CAPACITOR

SPEC.NO.	M3L1-22C
O/R NO.	K223001

# DURABRAND

## DBTV1301

# SERVICE MANUAL

**COLOR TELEVISION RECEIVER**

**ORIGINAL 1  
MFR'S VERSION I**

MFR'S VERSION	PCB010	TUNER
C	TMX494A	NJH3022U268
I	TMX494B	TECC1040PG32D

# ELECTRICAL ADJUSTMENTS

(MFR'S VERSION I)

## 2. BASIC ADJUSTMENTS

### 2-1: RF AGC DELAY

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the VHF HIGH (63dB).
3. Connect the digital voltmeter to **R606**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(02)** on the remote control to select "RF AGC DELAY".
5. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is  $2.7 \pm 0.05V$ .

# ELECTRICAL REPLACEMENT PARTS LIST

## PCB VERSION UP

REF. NO.	MFR'S VERSION C		MFR'S VERSION I	
	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
PCB010	A3J804A010	MAIN PCB ASS'Y (VERSION C) TMX494A	A3J804A010	MAIN PCB ASS'Y (VERSION I) TMX494B

MAIN PCB's are interchangeable.

## Change of TUNER

REF. NO.	MFR'S VERSION C		MFR'S VERSION I	
	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
△ TU001	0145W00052	TUNER,VHF-UHF NJH3022U268	0145K00055	TUNER,VHF-UHF TECC1040PG32D
R622	R903N8121J	RC 120 OHM 1/8W	R903N8271J	RC 270 OHM 1/8W
PCB010	A3J804A010	MAIN PCB ASS'Y (VERSION C) TMX494A	A3J804A010	MAIN PCB ASS'Y (VERSION I) TMX494B

MAIN PCB's are interchangeable.

SPEC.NO.	M3J8-04A
O/R NO.	K163008

## SERVICING NOTICES ON CHECKING

### 1. KEEP THE NOTICES


As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

### 2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

### 3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  mark, the designated parts must be used.

### 4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

### 5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

### 6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

### 7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

#### (INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the external exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

#### **[Note 1]**

If you have not the 500V insulation resistance meter, use a Tester.

#### **[Note 2]**

External exposure metal: Antenna terminal  
Earphone jack

## HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

#### 1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

#### 2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

## IMPORTANT

Inferior silicon grease can damage IC's and transistors.

When replacing an IC's or transistors, use only specified silicon grease (YG6260M).

Remove all old silicon before applying new silicon.



# CONTENTS

<b>SERVICING NOTICES ON CHECKING</b> .....	A1-1
<b>HOW TO ORDER PARTS</b> .....	A1-1
<b>IMPORTANT</b> .....	A1-1
<b>CONTENTS</b> .....	A2-1
<b>GENERAL SPECIFICATIONS</b> .....	A3-1~A3-4
<b>DISASSEMBLY INSTRUCTIONS</b>	
1. REMOVAL OF ANODE CAP.....	B1-1
2. REMOVAL AND INSTALLATION OF FALT PACKAGE IC.....	B2-1, B2-2
<b>SERVICE MODE LIST</b> .....	C-1
<b>CONFIRMATION OF HOURS USED</b> .....	C-1
<b>WHAN REPLACING EEPROM (MEMORY) IC</b> .....	C-1
<b>ELECTRICAL ADJUSTMENTS</b> .....	D-1~D-4
<b>BLOCK DIAGRAM</b> .....	E-1, E-2
<b>PRINTED CIRCUIT BOARDS</b>	
MAIN/CRT .....	F-1~F-4
<b>SCHEMATIC DIAGRAMS</b>	
MICON/TUNER .....	G-1, G-2
CHROMA .....	G-3, G-4
TV POWER .....	G-5, G-6
DEFLECTION/CRT .....	G-7, G-8
SOUND/AV .....	G-9, G-10
<b>WAVEFORMS</b> .....	H-1, H-2
<b>MECHANICAL EXPLODED VIEW</b> .....	I-1
<b>MECHANICAL REPLACEMENT PARTS LIST</b> .....	J1-1
<b>ELECTRICAL REPLACEMENT PARTS LIST</b> .....	J2-1, J2-2

## GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	13 inch / 335.4mmV	
			CRT Type	Normal	
			Deflection	90 degree	
			Magnetic Field BV/BH	+0.45G/0.18G	
			Color System	NTSC	
			Speaker	1Speaker	
				Position	Bottom
				Size	3 Inch
				Impedance	8 ohm
			Sound Output	MAX	1.0 W
		10%(Typical)	0.8 W		
		NTSC3.58+4.43 /PAL60Hz	No		
G-2	Tuning System	Broadcasting System		US System M	
		Tuner and Receive CH	System	1Tuner	
			Destination	Others	
			Tuning System	F-Synth	
			Input Impedance	VHF/UHF 75 ohm	
				CH Coverage	2 - 69, 4A, A-5 - A-1, A - 1, J - W, W+1 - W+84
			Intermediate Frequency	Picture(FP)	45.75MHz
				Sound(FS)	41.25MHz
				FP-FS	4.50MHz
			Preset CH		No
	Stereo/Dual TV Sound		No		
	Tuner Sound Muting		Yes		
G-3	Power	Power Source	AC	120V AC 60Hz	
			DC		
		Power Consumption		at AC	
			Stand by (at AC)		54 W at AC 120 V 60 Hz
		Per Year		5 W at AC 120 V 60 Hz	
				-- kWh/Year	
	Protector	Power Fuse		Yes	
G-4	Regulation	Safety		UL/CSA	
		Radiation		FCC /DOC	
		X-Radiation		DHHS/HWC	
G-5	Temperature	Operation		+5°C ~ +40°C	
		Storage		-20°C ~ +60°C	
G-6	Operating Humidity			Less then 80% RH	
G-7	On Screen Display	Menu		Yes	
		Menu Type		Character	
		Picture		Yes	
			Contrast	Yes	
			Brightness	Yes	
			Color	Yes	
			Tint	Yes	
			Sharpness	Yes	
			Audio		No
			Bass		No
			Treble		No
			Balance		No
			BBE On/Off		No
			Stable Sound On/Off		No
			CH Set Up		Yes
			TV/CATV		Yes
			Auto CH Memory		Yes
			Add/ Delete		Yes
			Language		Yes
			V-chip		Yes
				CH Label	No
				Favorite CH	No
				Color Stream DVD/DTV	No
			Control Level		Yes
			Sound		Yes
			Brightness		Yes
			Contrast		Yes
			Color		Yes
			Tint (NTSC Only)		Yes
			Sharpness		Yes
			Tuning		No
			Bass		No
			Treble		No
			Balance		No
			Back Light		No
			Stereo,Audio Output,SAP		No
			Video		Yes
	Color Stream		No		
	Channel(TV/Cable)		Yes		

## GENERAL SPECIFICATIONS

		CH Label	No
		Sleep Timer	Yes
		Sound Mute	Yes
		V-chip Rating	Yes
<b>G-8</b>	<b>OSD Language</b>	OSD Language Setting	English French Spanish English
<b>G-9</b>	<b>Clock and Timer</b>	Sleep Timer	Max Time 120 Min
		Step	10 Min
		On/Off Timer	Program(On Tim / Off Tim) No
		Wake Up Timer	No
		Timer Back-up (at Power Off Mode)	more than -- Min Sec
<b>G-10</b>	<b>Remote Control</b>	Unit	RC-DW
		Glow in Dark Remocon	No
		Format	NEC
		Custom Code	86-05 h
		Power Source	Voltage(D.C) 3V UM size x pcs
		Total Keys	27 Keys
		Keys	Power
			Yes
		1	Yes
		2	Yes
		3	Yes
		4	Yes
		5	Yes
		6	Yes
		7	Yes
		8	Yes
		9	Yes
		0	Yes
		100	No
		CH Up	Yes
		CH Down	Yes
		Volume Up	Yes
		Volume Down	Yes
		TV/Caption/Text	Yes
		CH1/CH2	Yes
		TV/Video(TV/AV)	Yes
		CH RTN/CH ENT(Quick View)	Yes
		Sleep	Yes
		RE Call(Call)	Yes
		Reset	Yes
		Menu	Yes
		Enter	Yes
		Mute	Yes
		Exit	No
		MTS(Audio Select)	No
		Set +	Yes
		Set -	Yes
		Multi Brand Keys	CH Up(VCR)
			No
			CH Down(VCR)
			No
			Pause/Still
			No
			TV/VCR(VCR)
			No
			Code
			No
			FF
			No
			Rew
			No
			Rec
			No
			Play
			No
			Stop
			No
			TV
			No
			VCR
			No
			Cable
			No
<b>G-11</b>	<b>Features</b>	Auto Degauss	Yes
		Auto Shut Off	Yes
		Canal+	No
		CATV	Yes
		Anti-theft	No
		Rental	No
		Memory(Last CH)	Yes
		Memory(Last Volume)	Yes
		V-Chip	Yes
		Type	USA_ORION Type
		BBE	No
		Auto Search	No
		CH Allocation	No
		SAP	No
		Channel Lock	No
		Just Clock Function	No

## GENERAL SPECIFICATIONS

		Game Position		No		
		CH Label		No		
		VM Circuit		No		
		Full OSD		No		
		Premiere		No		
		Comb Filter		No		
			____ Lines			
		Auto CH Memory	Yes			
		Hotel Lock		No		
		Closed Caption	Yes			
		Stable Sound		No		
		Energy Star		No		
		Favorite CH		No		
<b>G-12</b>	<b>Accessories</b>	Owner's Manual	Language w/Guarantee Card	English /French No		
		Remote Control Unit		Yes		
		Rod Antenna		No		
			Poles Terminal			
		Loop Antenna		No		
			Terminal	-		
		U/V Mixer		No		
		DC Car Cord (Center+)		No		
		Guarantee Card		Yes		
		Warning Sheet		No		
		Circuit Diagram		No		
		Antenna Change Plug		No		
		Service Facility List		No		
		Important Safeguard		No		
		Dew/AHC Caution Sheet		No		
		AC Plug Adapter		No		
		Quick Set-up Sheet		No		
		Battery	UM size x pcs OEM Brand	No		
		AC Cord		No		
		AV Cord (2Pin-1Pin)		No		
Registration Card		No				
PTB Sheet		No				
300 ohm to 75 ohm Antenna Adapter		No				
<b>G-13</b>	<b>Interface</b>	Switch	Front	Power	Yes	
				System Select	No	
				Main Power SW	No	
				Sub Power	No	
				Channel Up/Reset	Yes	
				Channel Down/Enter	Yes	
				Volume Up/Set Up	Yes	
				Volume Down/Set Down	Yes	
				MENU=Volume Up+Volume Down	Yes	
				Rear	AC/DC	No
					TV/CATV Selector	No
					Degauss	No
					Main Power SW	No
		Indicator	Power		No	
			Stand-by		No	
			On Timer	No		
		Terminals	Front	Video Input		
				Audio Input	RCA	
				Other Terminal	RCA x 1 Ear Phone	
			Rear	Video Input(Rear1)	No	
				Video Input(Rear2)	No	
				Audio Input(Rear1)	No	
				Audio Input(Rear2)	No	
				Video Output	No	
				Audio Output	No	
				Euro Scart	No	
				Color Stream	No	
Diversity	No					
Ext Speaker	No					
DC Jack 12V(Center +)	No					
VHF/UHF Antenna Input	F Type					
AC Outlet	No					
<b>G-14</b>	<b>Set Size</b>			Approx. W x D x H (mm)	_362 x 360 x 320.5	
<b>G-15</b>	<b>Weight</b>	Net (Approx.)	_9.5 kg ( 20.9 lbs)			
		Gross (Approx.)	_11.0kg ( 24.4lbs)			
<b>G-16</b>	<b>Carton</b>	Master Carton	No			
		Content	---- Sets			

## GENERAL SPECIFICATIONS

		Material	____ /--
		Dimensions W x D x H(mm)	__ x __ x __
		Description of Origin	No
	Gift Box		Yes
		Material	Double Full Color Carton W/Photo
		Dimensions W x D x H(mm)	440 x 408 x 380
		Design	As per Buyer's
		Description of Origin	Yes
	Drop Test		Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces
		Height (cm)	62
	Container Stuffing		866 Sets/40' container
<b>G-17</b>	<b>Cabinet Material</b>	Cabinet Front	PS 94V0 DECABROM
		Cabinet Rear	PS 94V0 DECABROM

# DISASSEMBLY INSTRUCTIONS

## 1. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

- \* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- \* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

### REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. (Refer to Fig. 1-1.)

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated screwdriver, touch the support of the Anode with the tip of the screwdriver.

A cracking noise will be heard as the voltage is discharged.

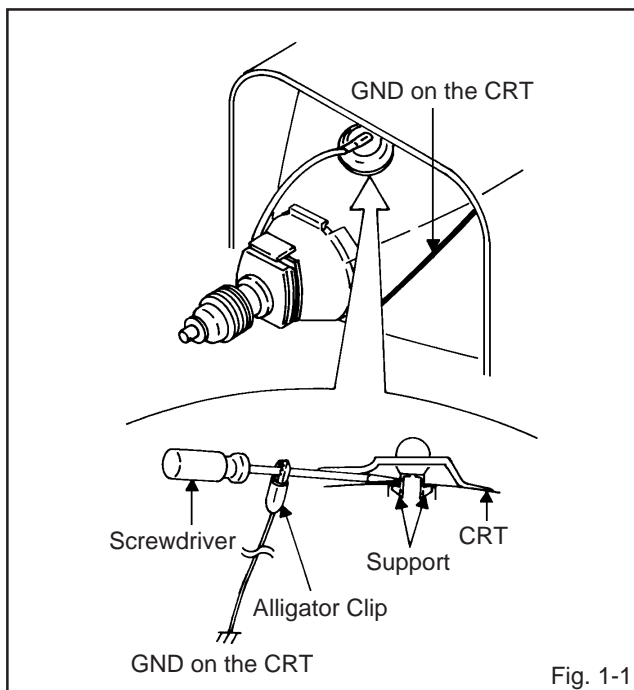


Fig. 1-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. (Refer to Fig. 1-2.)

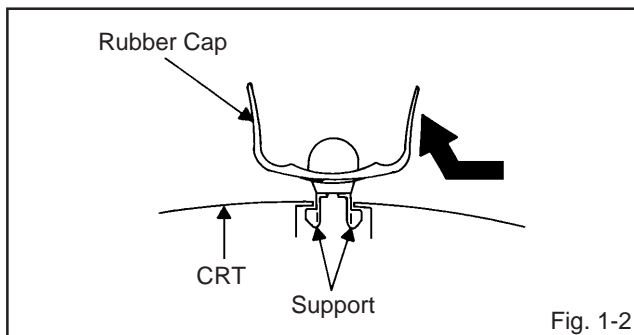


Fig. 1-2

3. After one side is removed, pull in the opposite direction to remove the other.

### NOTE

Take care not to damage the Rubber Cap.

### INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. (Refer to Fig. 1-3.)

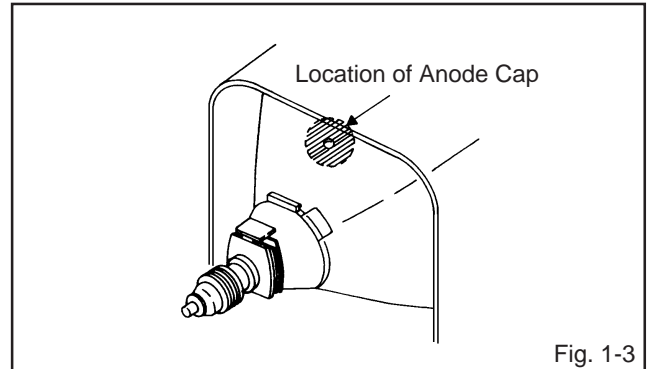


Fig. 1-3

### NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. (Refer to Fig. 1-4.)

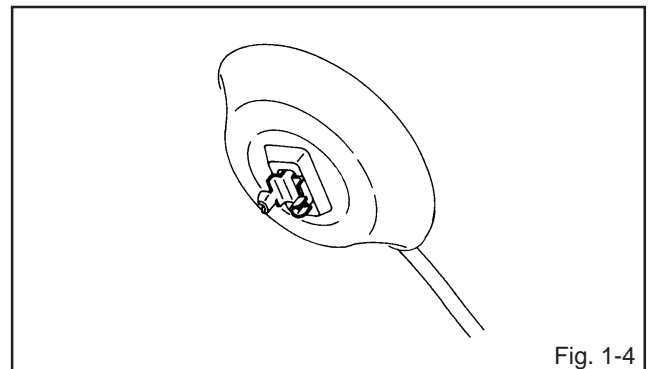


Fig. 1-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in Fig. 1-5.

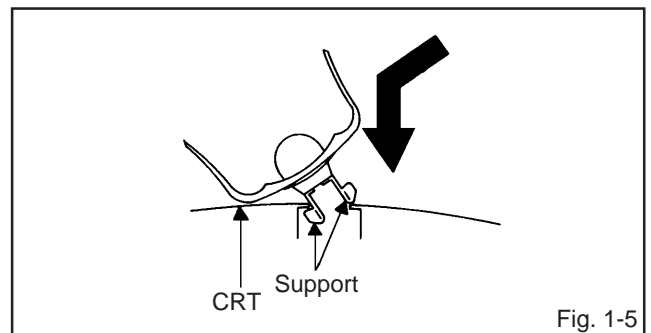


Fig. 1-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

# DISASSEMBLY INSTRUCTIONS


## 2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

### REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 2-1.)

#### NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

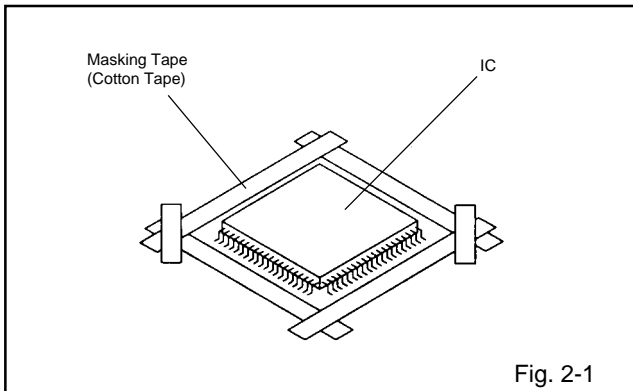

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 2-2.)

#### NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

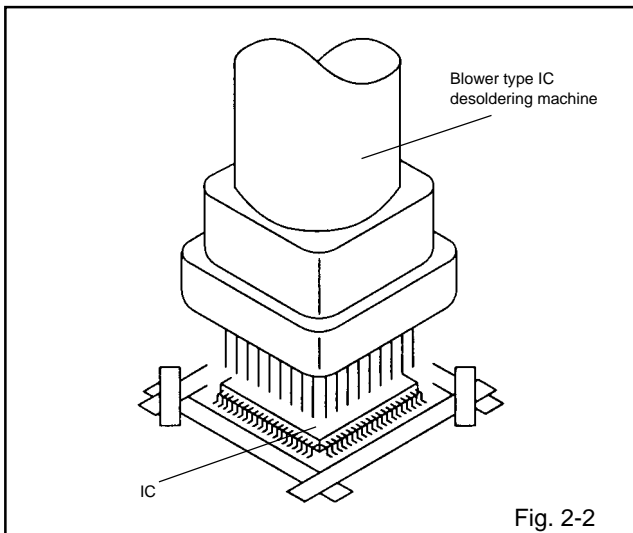

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 2-3.)

#### NOTE


Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

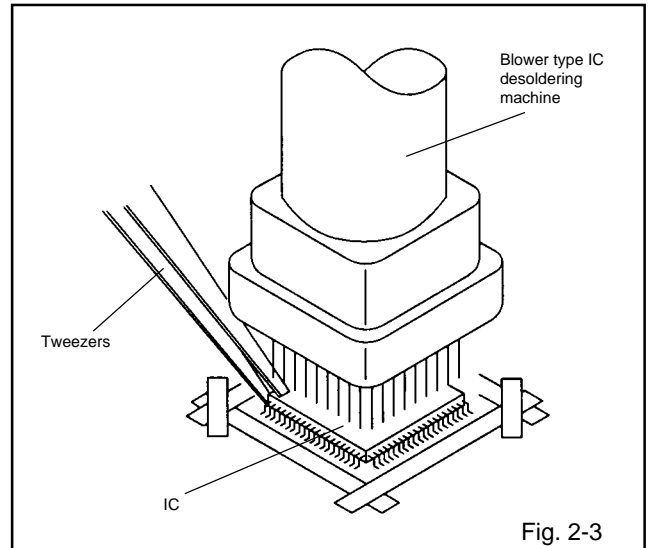

4. Peel off the Masking Tape.
5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 2-4.)

#### NOTE


Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

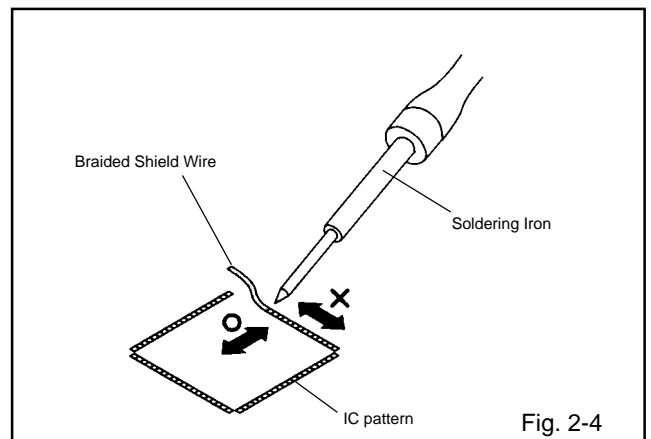


# DISASSEMBLY INSTRUCTIONS

## INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. (Refer to Fig. 2-5.)

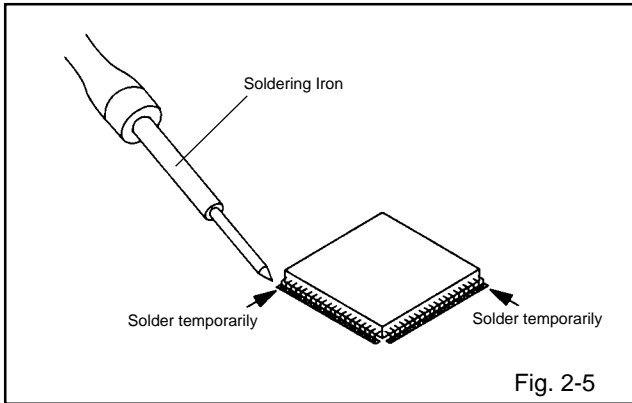


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. (Refer to Fig. 2-6.)

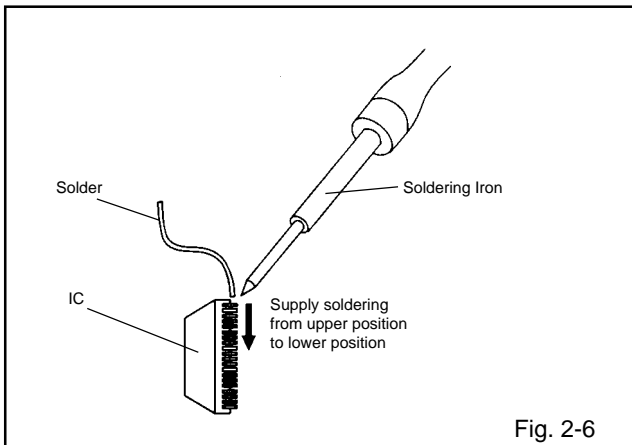


3. Absorb the solder left on the lead using the Braided Shield Wire. (Refer to Fig. 2-7.)

### NOTE

Do not absorb the solder to excess.

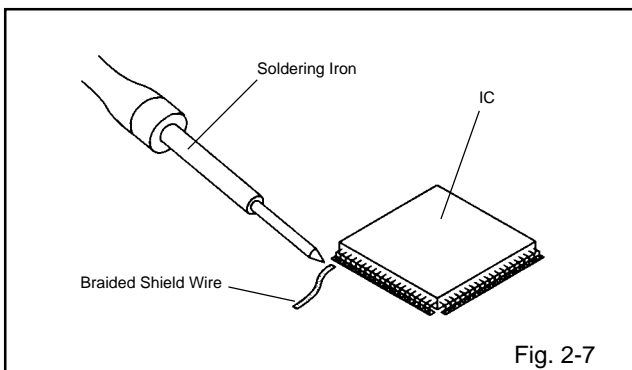

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. (Refer to Fig. 2-8.)

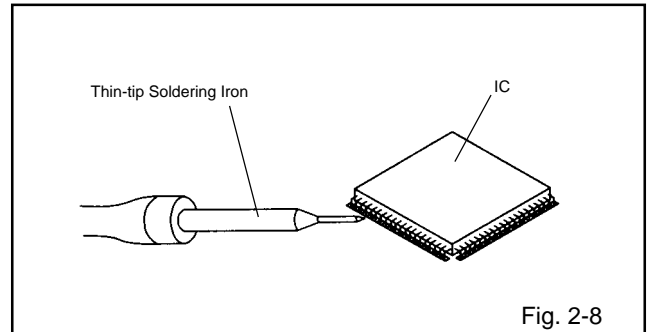

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

### NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.



## SERVICE MODE LIST


This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily. To enter the Service Mode, press both set key and remote control key for more than 1 second.

Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reser such as the clock setting, the cheannel setting, the POWER ON total hours, and PLAY/REC total hours.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED".  Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

### CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

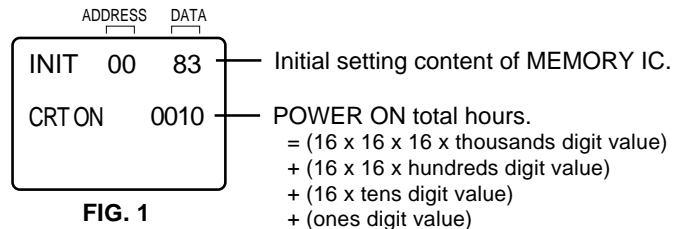

### WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	08	20	98	02	09	B3	24	19	01	00	44	05	00	D5	FF	A5

**Table 1**

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second. ADDRESS and DATA should appear as FIG 1.
3. ADDRESS is now selected and should "blink". Using the SET + or - keys on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using SET + or - until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input. The unit will now have the correct DATA for the new MEMORY IC.

# ELECTRICAL ADJUSTMENTS

## 1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

### CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.  
Inferior silicon grease can damage IC's and transistors. When
- When you exchange IC and Transistor for a heat sink, apply the silicon grease (**YG6260M**) on the contact section of the heat sink, Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

Prepare the following measurement tools for electrical adjustments.

1. Synchro Scope
2. Digital Voltmeter

### On-Screen Display Adjustment

1. In the condition of NO indication on the screen.  
Press the VOL. DOWN button on the set and the Channel button (**9**) on the remote control for more than 1 second to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

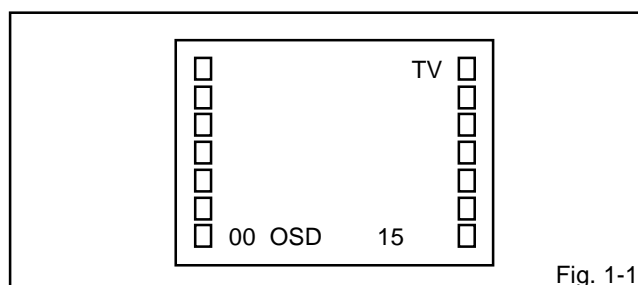


Fig. 1-1

2. Use the Channel UP/DOWN button or Channel button (**0-9**) on the remote control to select the options shown in **Fig. 1-2**.
3. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	OSD H	16	CONTRAST CENT
01	CUT OFF	17	CONTRAST MAX
02	RF DELAY	18	CONTRAST MIN
03	VIF VCO	19	COLOR CENT
04	H.VCO	20	COLOR MAX
05	H.PHASE	21	COLOR MIN
06	V.SIZE	22	TINT
07	V.SHIFT	23	SHARPNESS
08	R.DRIVE	24	FM LEVEL
09	B.DRIVE	25	LEVEL
10	R.BIAS	26	SEPARATION 1
11	G.BIAS	27	SEPARATION 2
12	B.BIAS	28	TEST MONO
13	BRIGHT CENT	29	TEST STEREO
14	BRIGHT MAX	30	X-RAY TEST
15	BRIGHT MIN		

Fig. 1-2

## 2. BASIC ADJUSTMENTS

### 2-1: RF AGC DELAY

1. Place the set with Aging Test for more than 15 minutes.
2. Receive an 63dB monoscope pattern.
3. Connect the digital voltmeter to **W043**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**02**) on the remote control to select "RF.AGC".
5. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is  $2.5V \pm 0.05V$ .

### 2-2: CUT OFF

1. Adjust the unit to the following settings.  
R.DRIVE=10, B.DRIVE=10, R.BIAS=64, G.BIAS=64, B.BIAS=64, BRIGHTNESS=120, CONTRAST=40.
2. Place the set with Aging Test for more than 15 minutes.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**01**) on the remote control to select "CUT OFF".
4. Adjust the **Screen Volume** until a dim raster is obtained.

### 2-3: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the **Focus Volume** until picture is distinct.

### 2-4: WHITE BALANCE



**NOTE:** Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 10 minutes.
2. Receive the white 100% signal from the Pattern Generator.
3. Using the adjustment control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**10**) on the remote control to select "R.BIAS".
5. Using the VOL. UP/DOWN button on the remote control, adjust the R.BIAS.
6. Press the CH. UP/DOWN button on the remote control to select the "R.DRIVE", "B.DRIVE", "G.BIAS" or "B.BIAS".
7. Using the VOL. UP/DOWN button on the remote control, adjust the R.DRIVE, B.DRIVE, G.BIAS or B.BIAS.
8. Perform the above adjustments 6 and 7 until the white color is looked like a white.

# ELECTRICAL ADJUSTMENTS

## 2-5: SUB TINT/SUB COLOR

1. Receive the color bar pattern.
2. Connect the oscilloscope to **TP023**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**22**) on the remote control to select "TINT".
4. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes as straight line (**Refer to Fig. 2-1**)
5. Connect the oscilloscope to **TP022**.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**19**) on the remote control to select "COL.CENT".
7. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to 100% of the white level. (**Refer to Fig. 2-2**)
8. Receive the color bar pattern. (Audio Video Input)
9. Press the TV/AV button on the remote control to set to the AV mode. Then perform the above adjustments 2~7

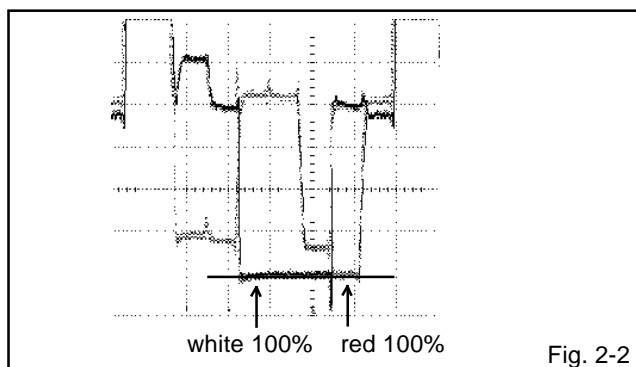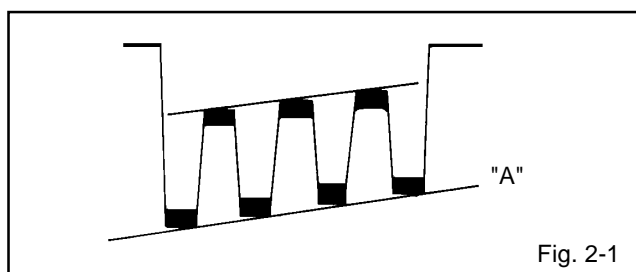

## 2-6: HORIZONTAL PHASE

1. Receive the center cross signal from the Pattern Generator.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**05**) on the remote control to select "H.PHAS".
3. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

## 2-7: VERTICAL SIZE

**NOTE:** Adjust after performing adjustments in section 2-6

1. Receive the crosshatch signal from the Pattern Generator.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**06**) on the remote control to select "V.SIZE".
3. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes  $10 \pm 2\%$ .
4. Receive a broadcast and check if the picture is normal.


## 2-8: VERTICAL SHIFT

**NOTE:** Adjust after performing adjustments in section 2-7

1. Receive the crosshatch signal from the Pattern Generator.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**07**) on the remote control to select "V.SFT".
3. Press the VOL. UP/DOWN button on the remote control until the horizontal line becomes fit to the notch of the shadow mask.

## 2-9: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. (**Refer to Fig. 2-3**)

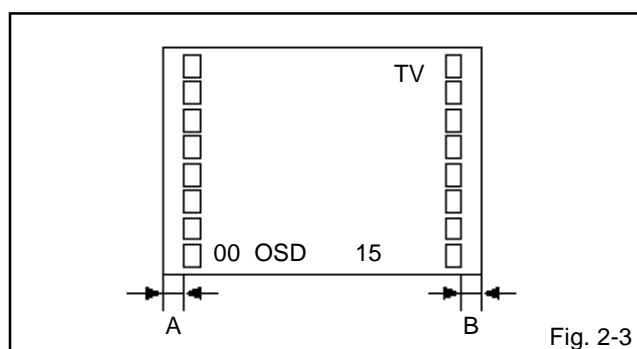

## 2-10: VIF VCO

1. Place the set with Aging Test for more than 10 minutes.
2. Receive an 80dB monoscope pattern.
3. Connect the digital voltmeter between the **pin 5 of CP601** and the **GND**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**03**) on the remote control to select "V.VCO".
5. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is 2.5V.

## 2-11: SUB BRIGHTNESS

1. Receive an 70dB monoscope pattern.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**13**) on the remote control to select "BRI.CENT".
3. Press the VOL. UP/DOWN button on the remote control until the screen begin to shine.
4. Press the TV/AV button on the remote to set to the AV mode. Then perform the above adjustment 2, 3.

## 2-12: SUB CONTRAST

1. Receive an 70dB the color bar pattern.
2. Activate the adjustment mode display of **Fig. 1-1** press the channel button (**17**) on the remote control to select "CONT.MAX".
3. Press the VOL. UP/DOWN button on the remote control until the contrast step No. become "40".
4. Press the TV/AV button on the remote to set to the AV mode. Then perform the above adjustment 2.
5. Press the VOL. UP/DOWN button on the remote control until the contrast step No. become "38".

## ELECTRICAL ADJUSTMENTS

### 2-13: Confirmation of Fixed Value (step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	RF	AV
04	H VCO	04	04
14	BRIGHT MAX	140	140
15	BRIGHT MIN	60	60
16	CONT CENT	30	30
18	CONT MIN	12	12
20	COLOR MAX	74	75
21	COLOR MIN	01	01
23	SHARPNESS	40	40
24	FM LEVEL	00	00
25	LEVEL	00	00
26	SEPARATION 1	00	00
27	SEPARATION 2	00	00
28	TEST MONO	00	00
29	TEST STERO	00	00

# ELECTRICAL ADJUSTMENTS

## 3. PURITY AND CONVERGENCE ADJUSTMENTS

### NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

### 3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**  
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

### 3-2: PURITY

#### NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.  
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue colors.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

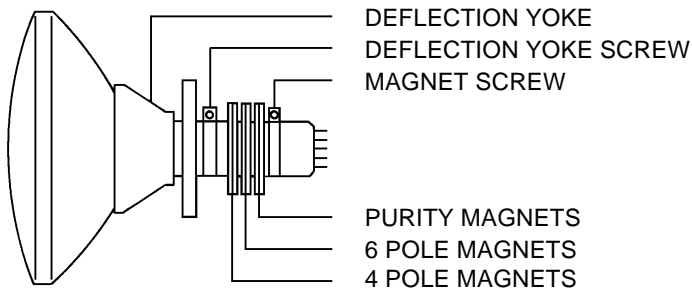


Fig. 3-1

### 3-3: STATIC CONVERGENCE

#### NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

### 3-4: DYNAMIC CONVERGENCE

#### NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**


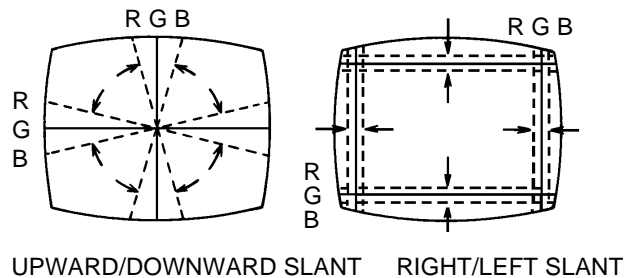


Fig. 3-2-a

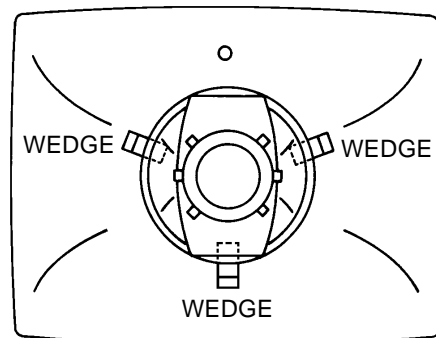


WEDGE POSITION


Fig. 3-2-b

# ELECTRICAL ADJUSTMENTS

## 4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

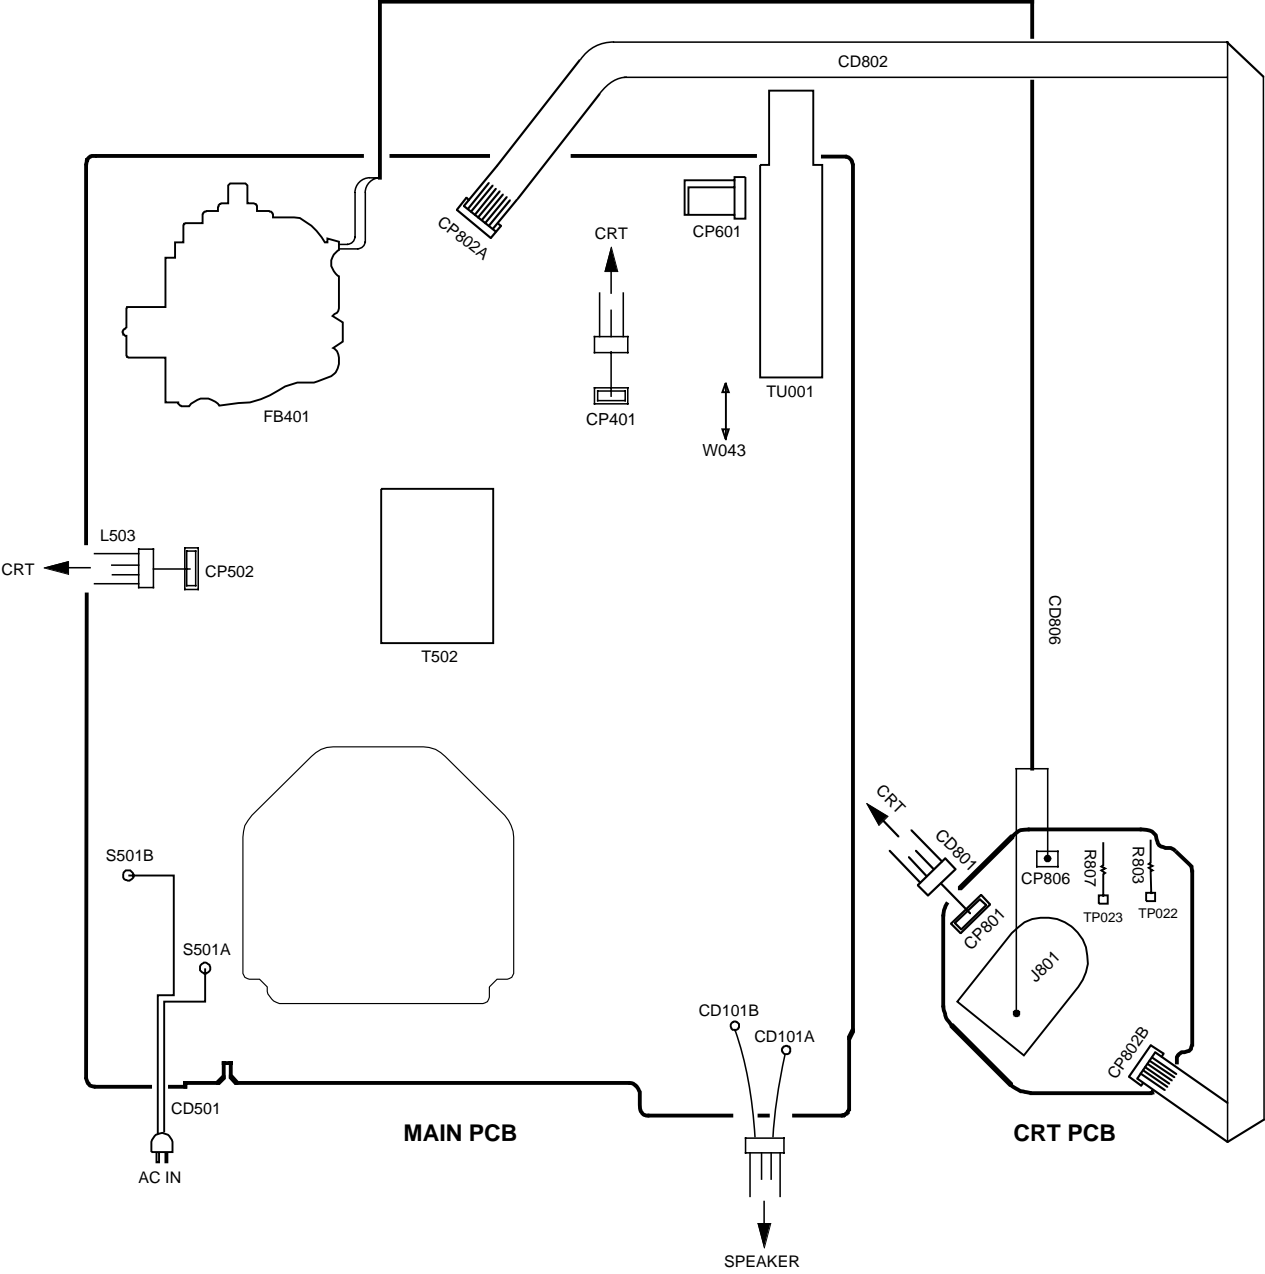

# BLOCK DIAGRAM

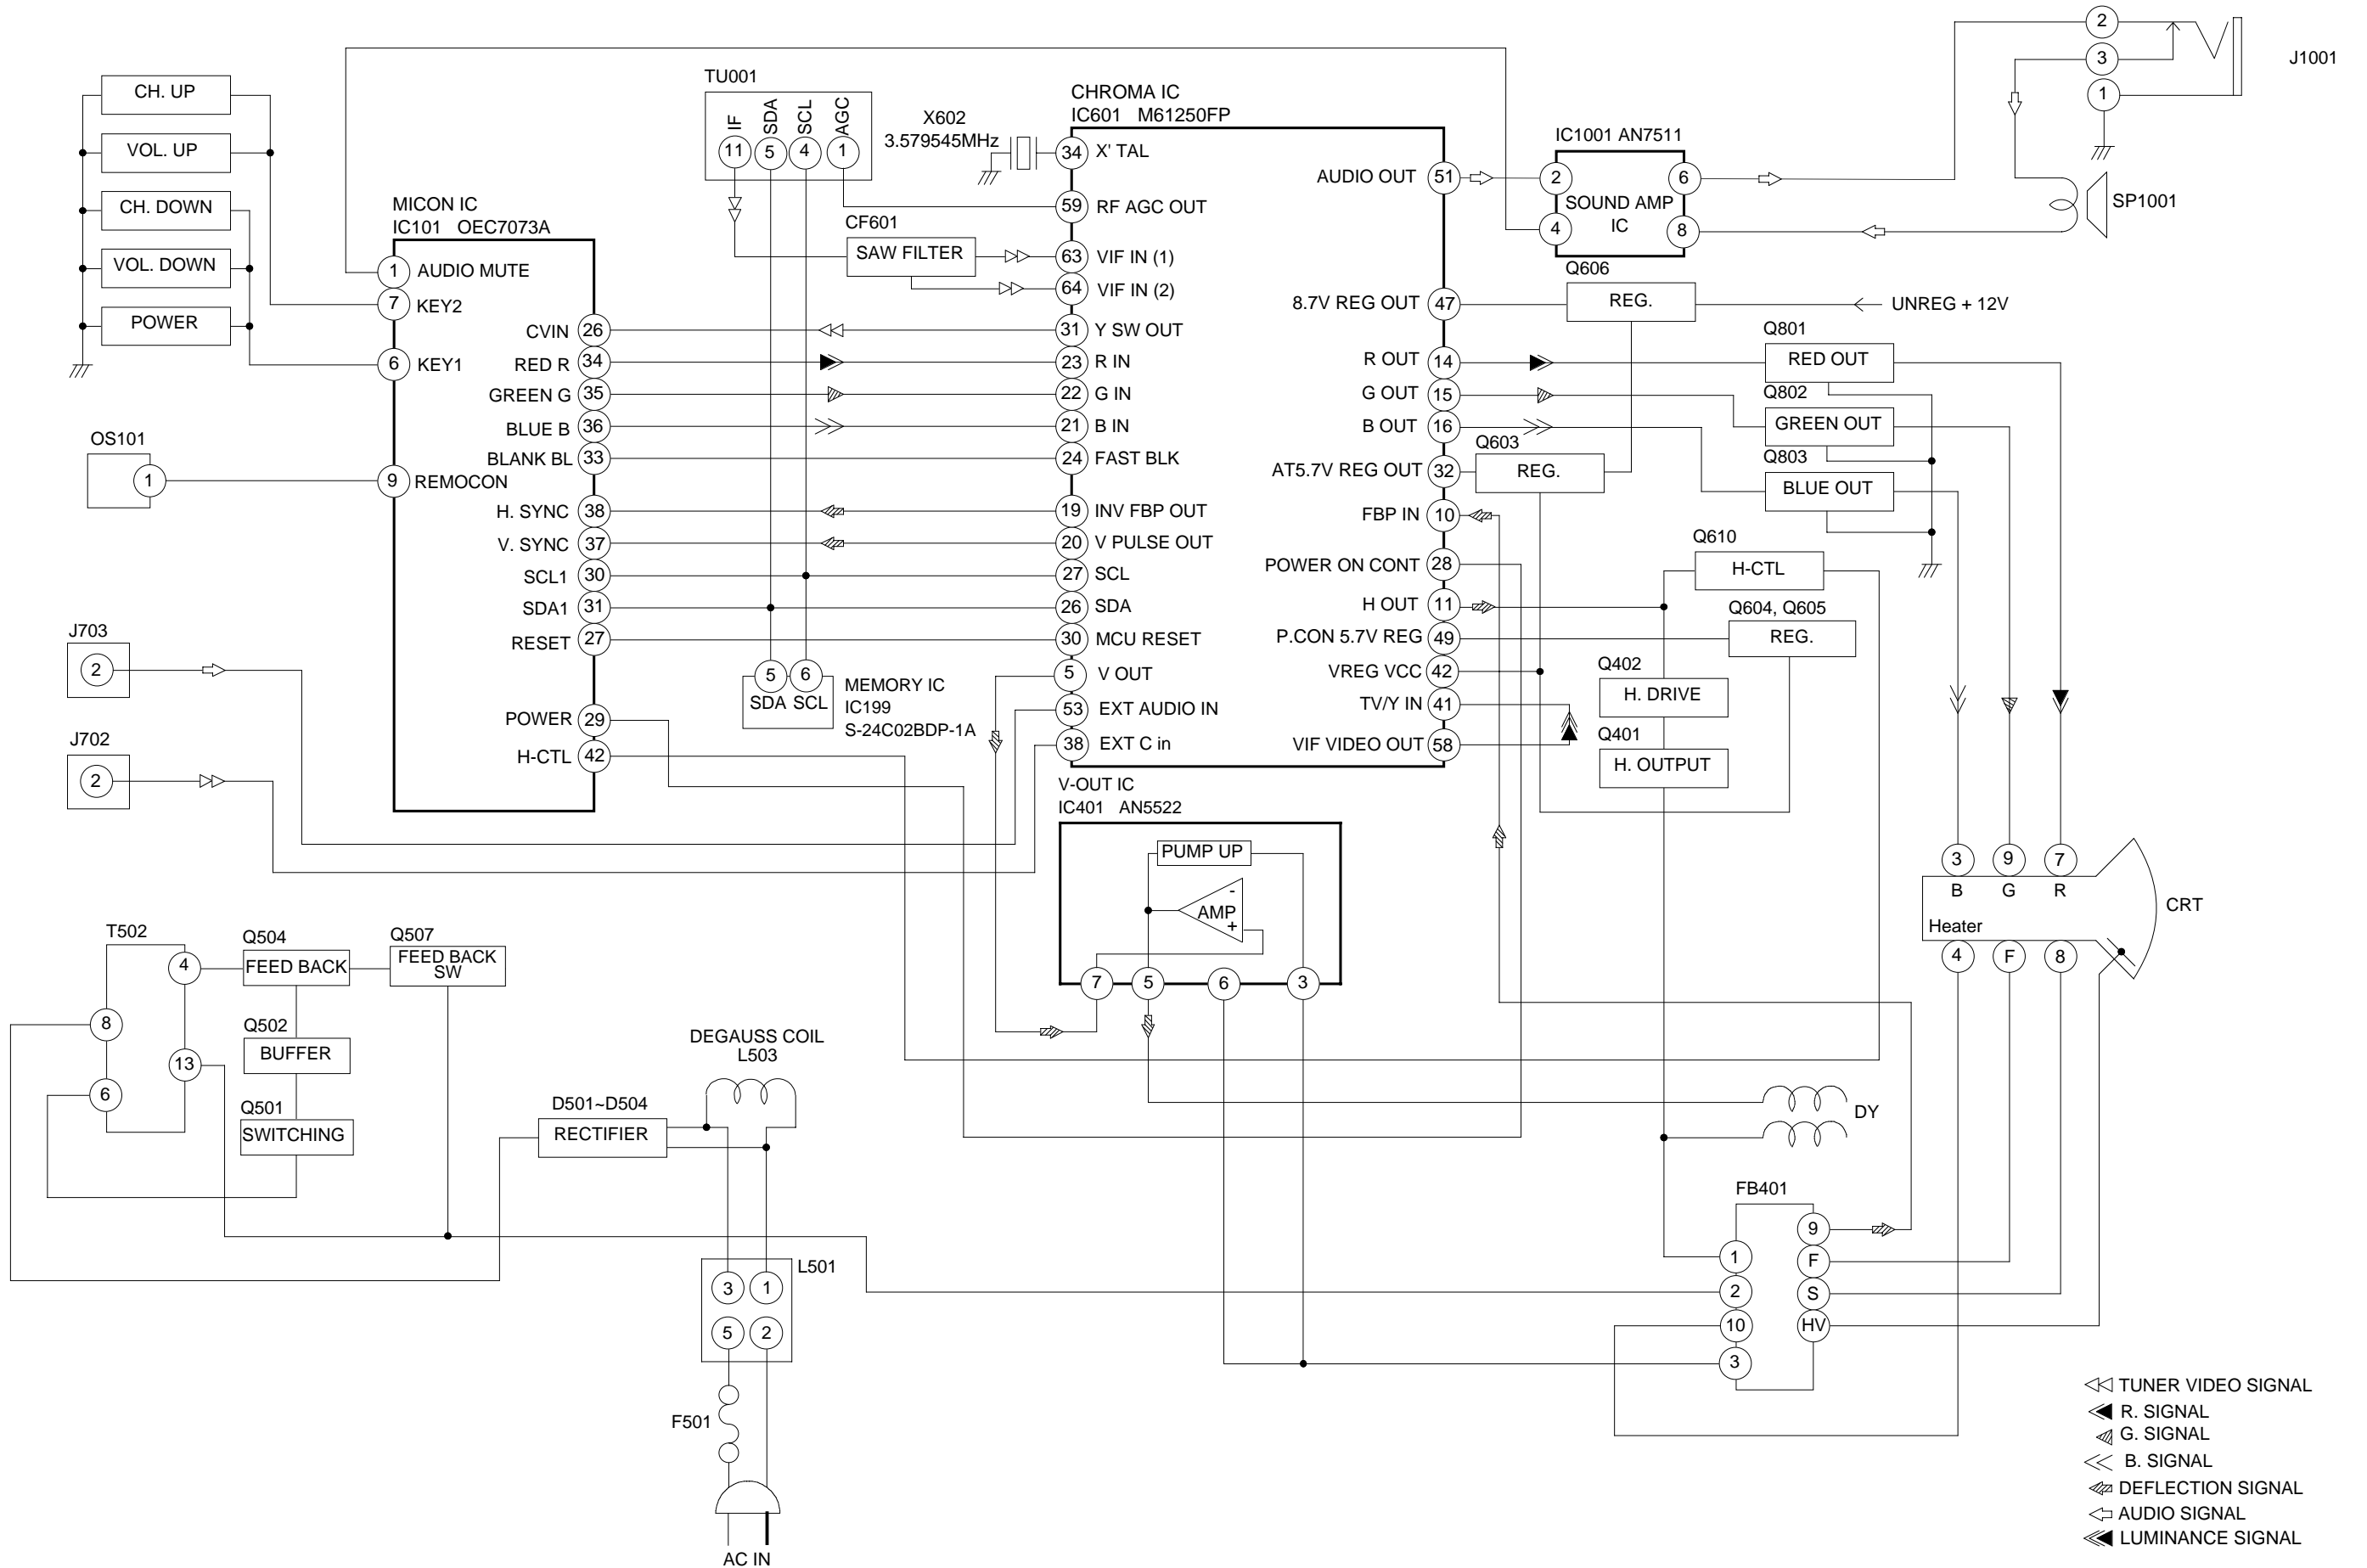


- ◀ TUNER VIDEO SIGNAL
- ◀ R. SIGNAL
- ◀ G. SIGNAL
- ◀ B. SIGNAL
- ◀ DEFLECTION SIGNAL
- ◀ AUDIO SIGNAL
- ◀ LUMINANCE SIGNAL







# MICON/TUNER SCHEMATIC DIAGRAM (MAIN PCB)

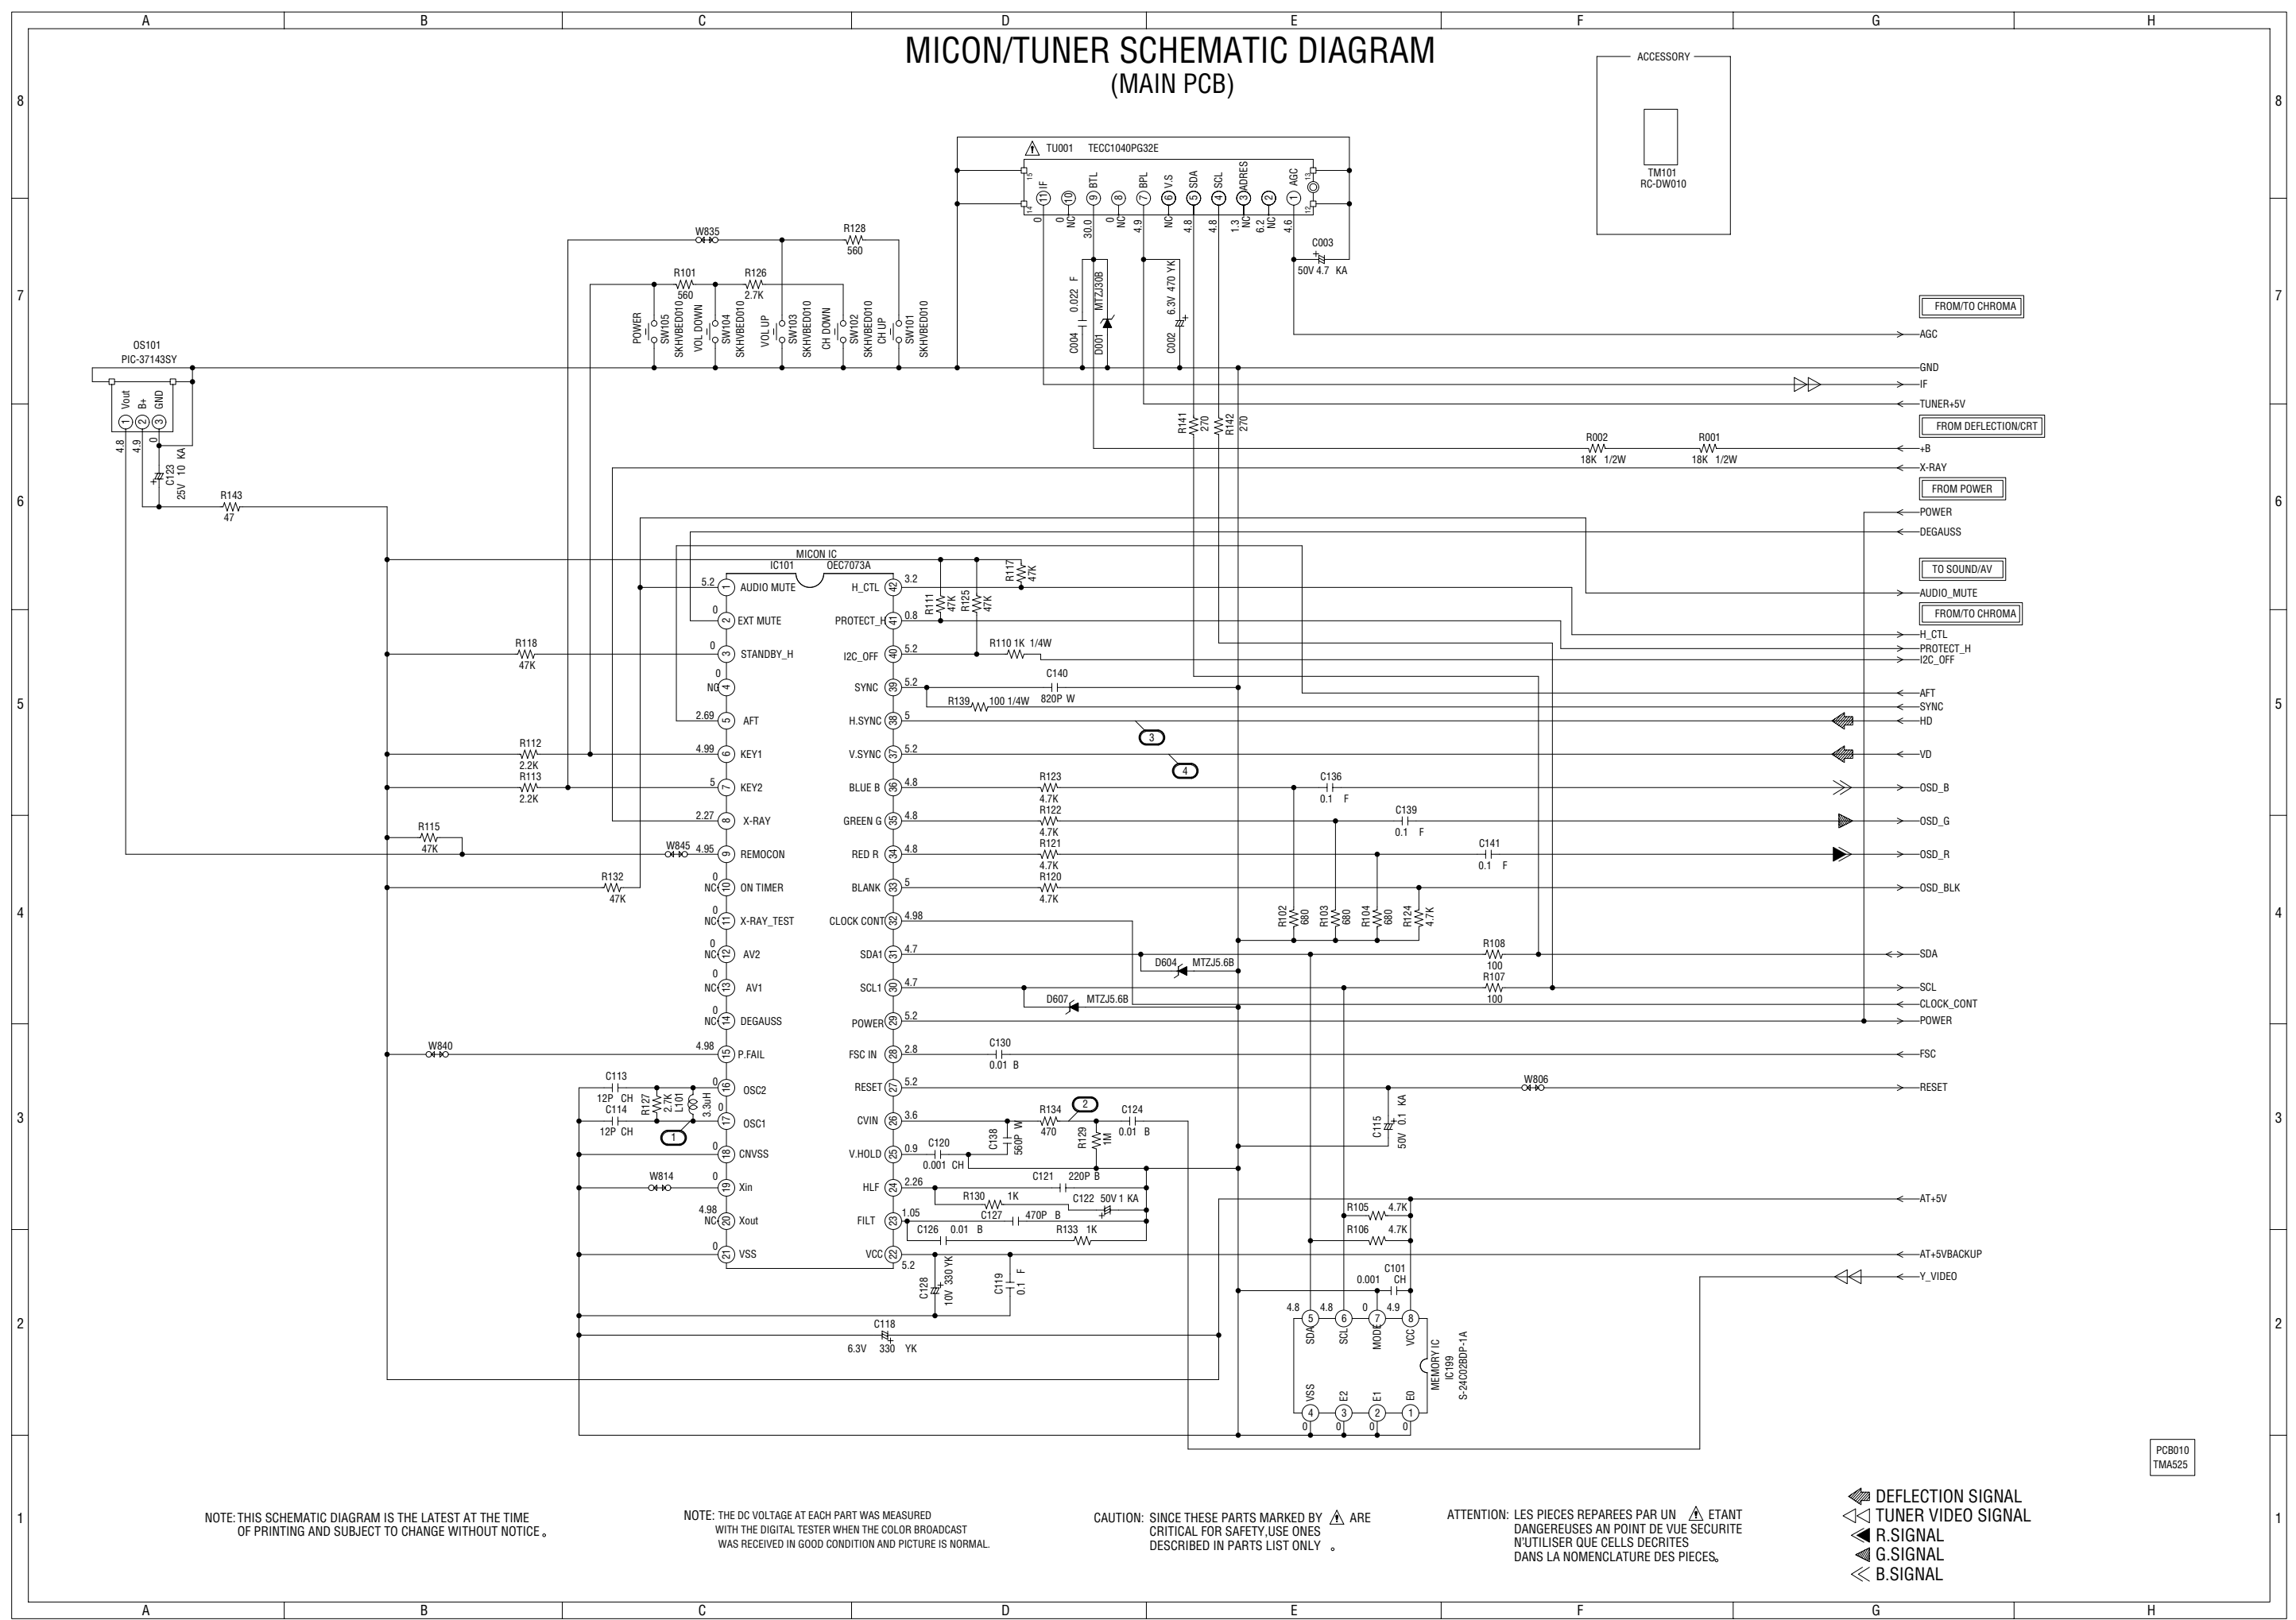

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: SINCE THESE PARTS MARKED BY  $\triangle$  ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.


ATTENTION: LES PIÈCES RÉPARÉES PAR UN  $\triangle$  ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

- $\triangle$  DEFLECTION SIGNAL
- $\blacktriangleleft$  TUNER VIDEO SIGNAL
- $\blacktriangle$  R.SIGNAL
- $\blacktriangleright$  G.SIGNAL
- $\blacktriangleleft$  B.SIGNAL

PCB010  
TMA525

# CHROMA SCHEMATIC DIAGRAM

(MAIN PCB)

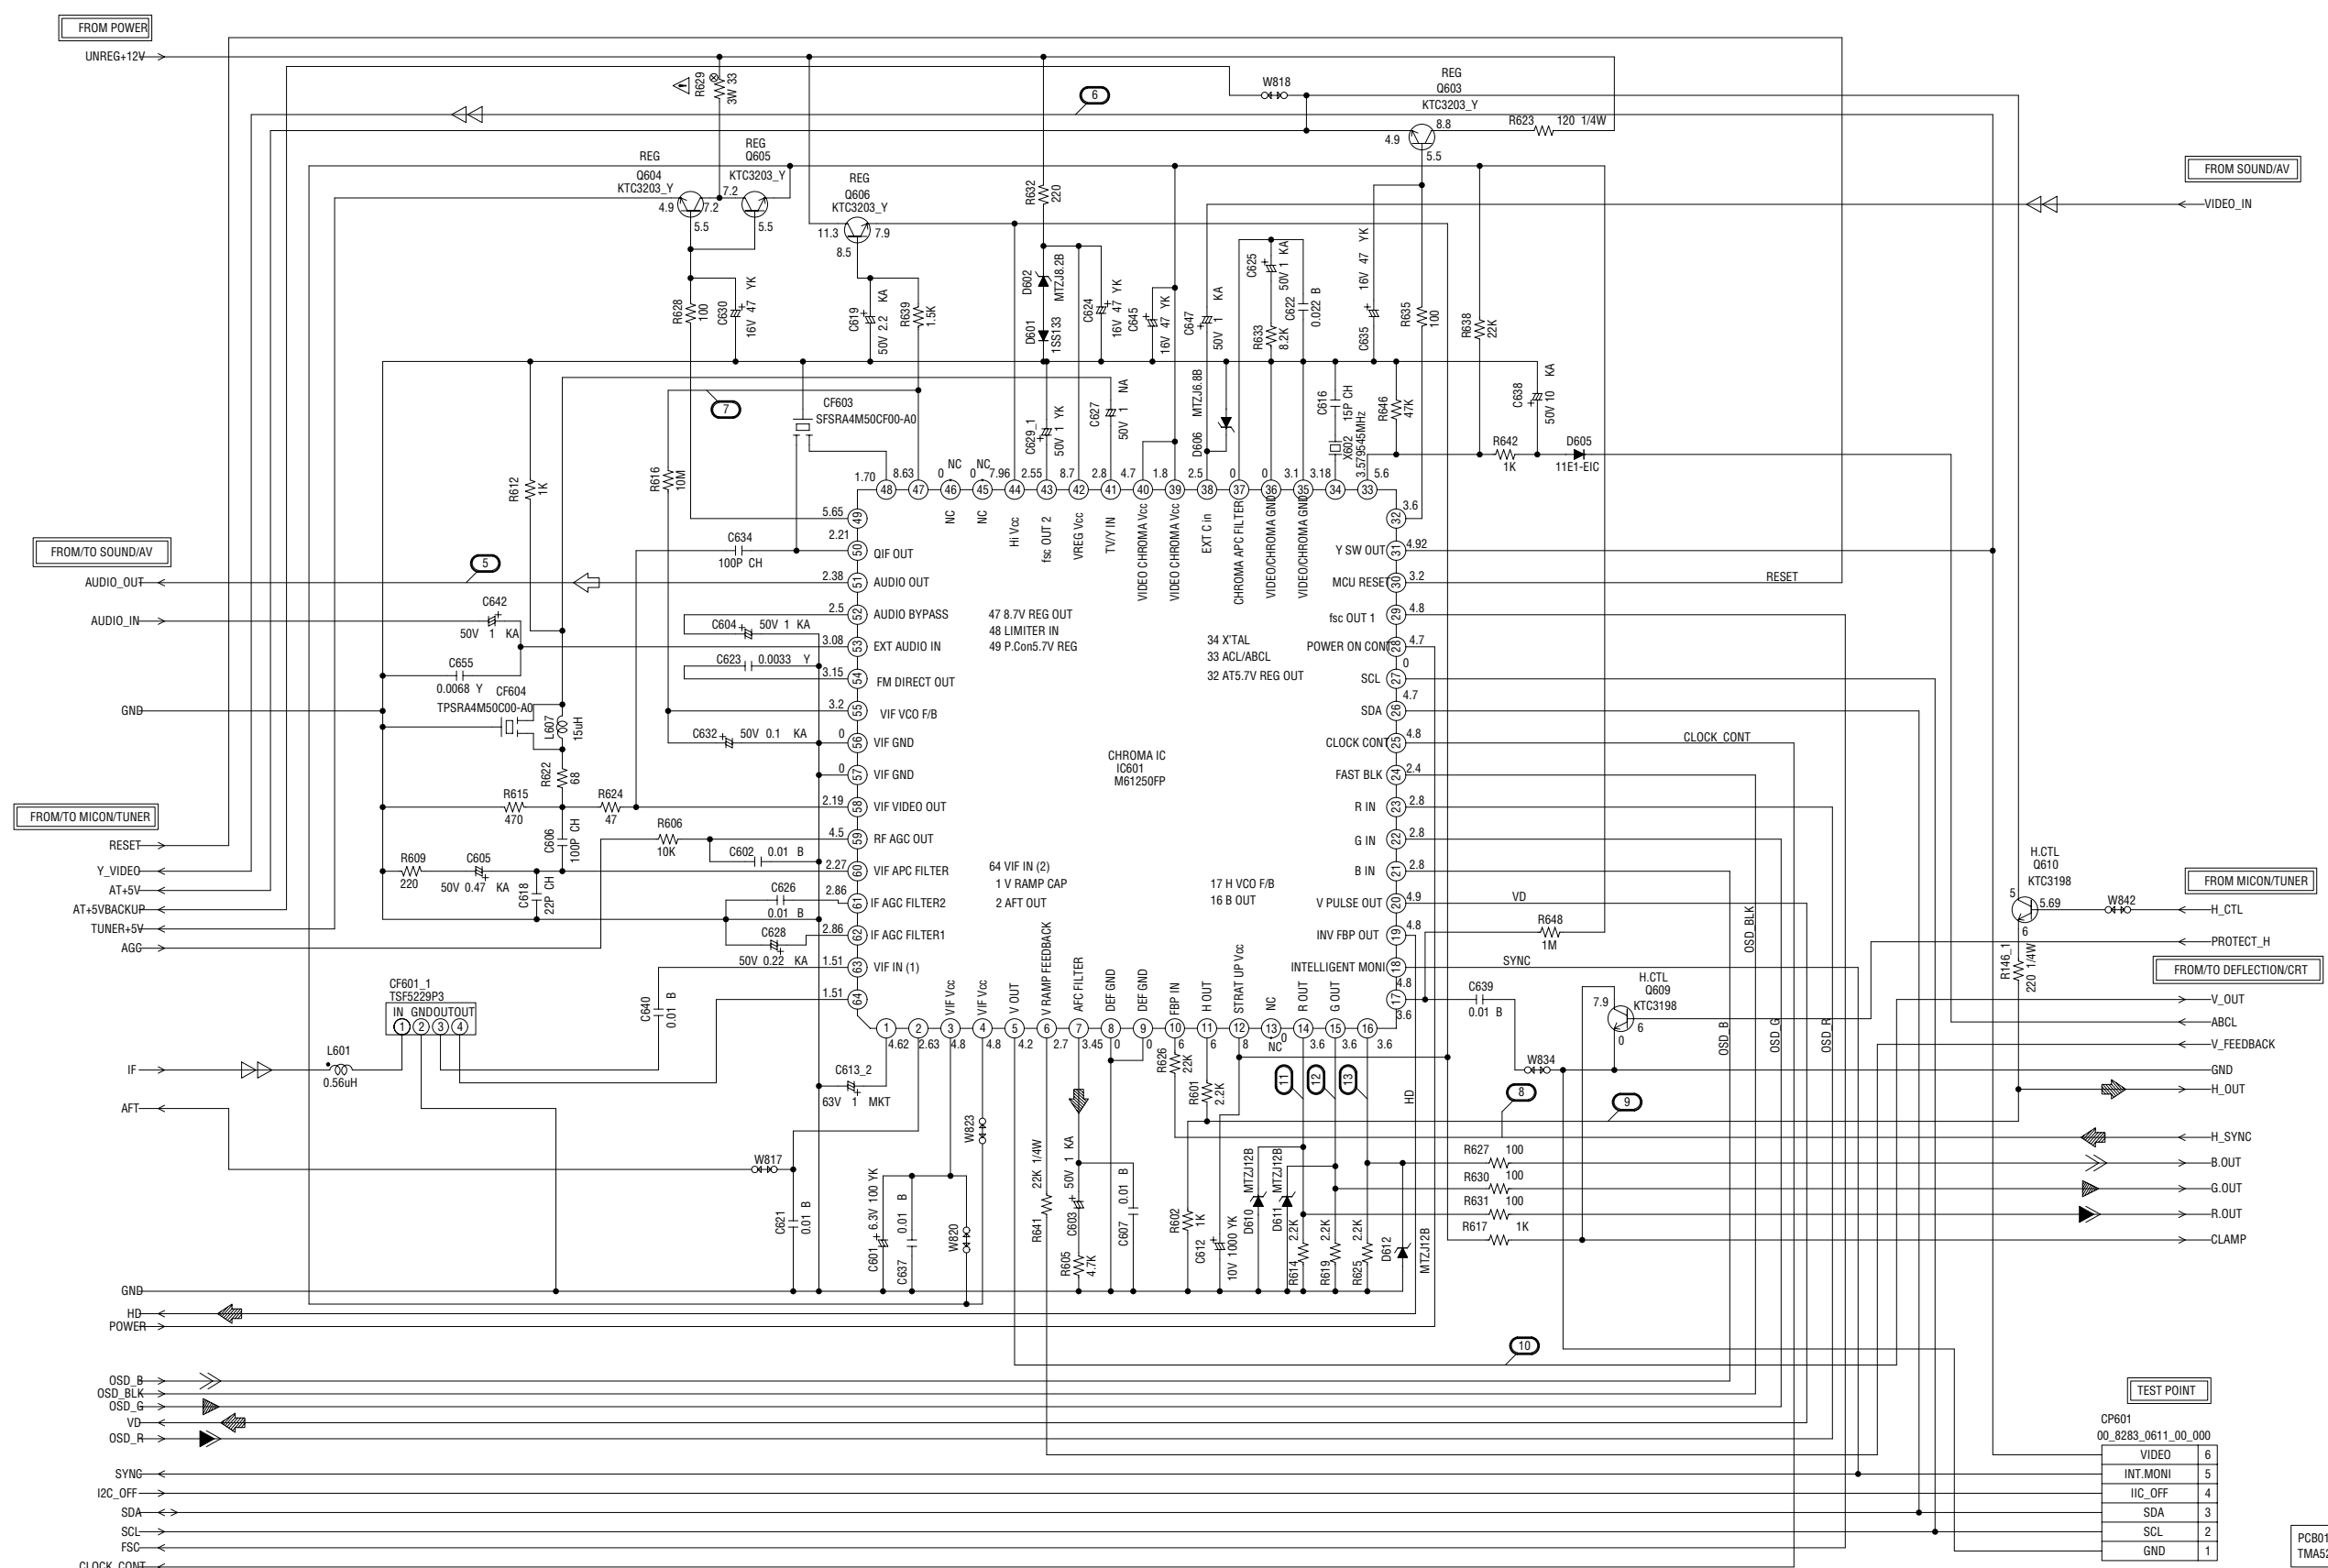

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.  
THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP  
IS NON POLAR ONE.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED  
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST  
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT  
DANGEREUSES À UN POINT DE VUE SÉCURITÉ  
N'UTILISER QUE CELLES DÉCRITES  
DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE  
CRITICAL FOR SAFETY, USE ONES  
DESCRIBED IN PARTS LIST ONLY.


- TUNER VIDEO SIGNAL
- R.SIGNAL
- G.SIGNAL
- B.SIGNAL
- LUMINANCE SIGNAL
- AUDIO SIGNAL
- DEFLECTION SIGNAL

TEST POINT	
VIDEO	6
INT.MONI	5
IIC_OFF	4
SDA	3
SCL	2
GND	1

PCB010  
TMA525

# POWER SCHEMATIC DIAGRAM (MAIN PCB)

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,  
REPLACE ONLY WITH THE SAME TYPE 4A 125V (F501)  
FUSE  
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES  
D'INCIEIE N'UTILISER QUE DES FUSIBLE DE MEME  
TYPE 4A 125V (F501).

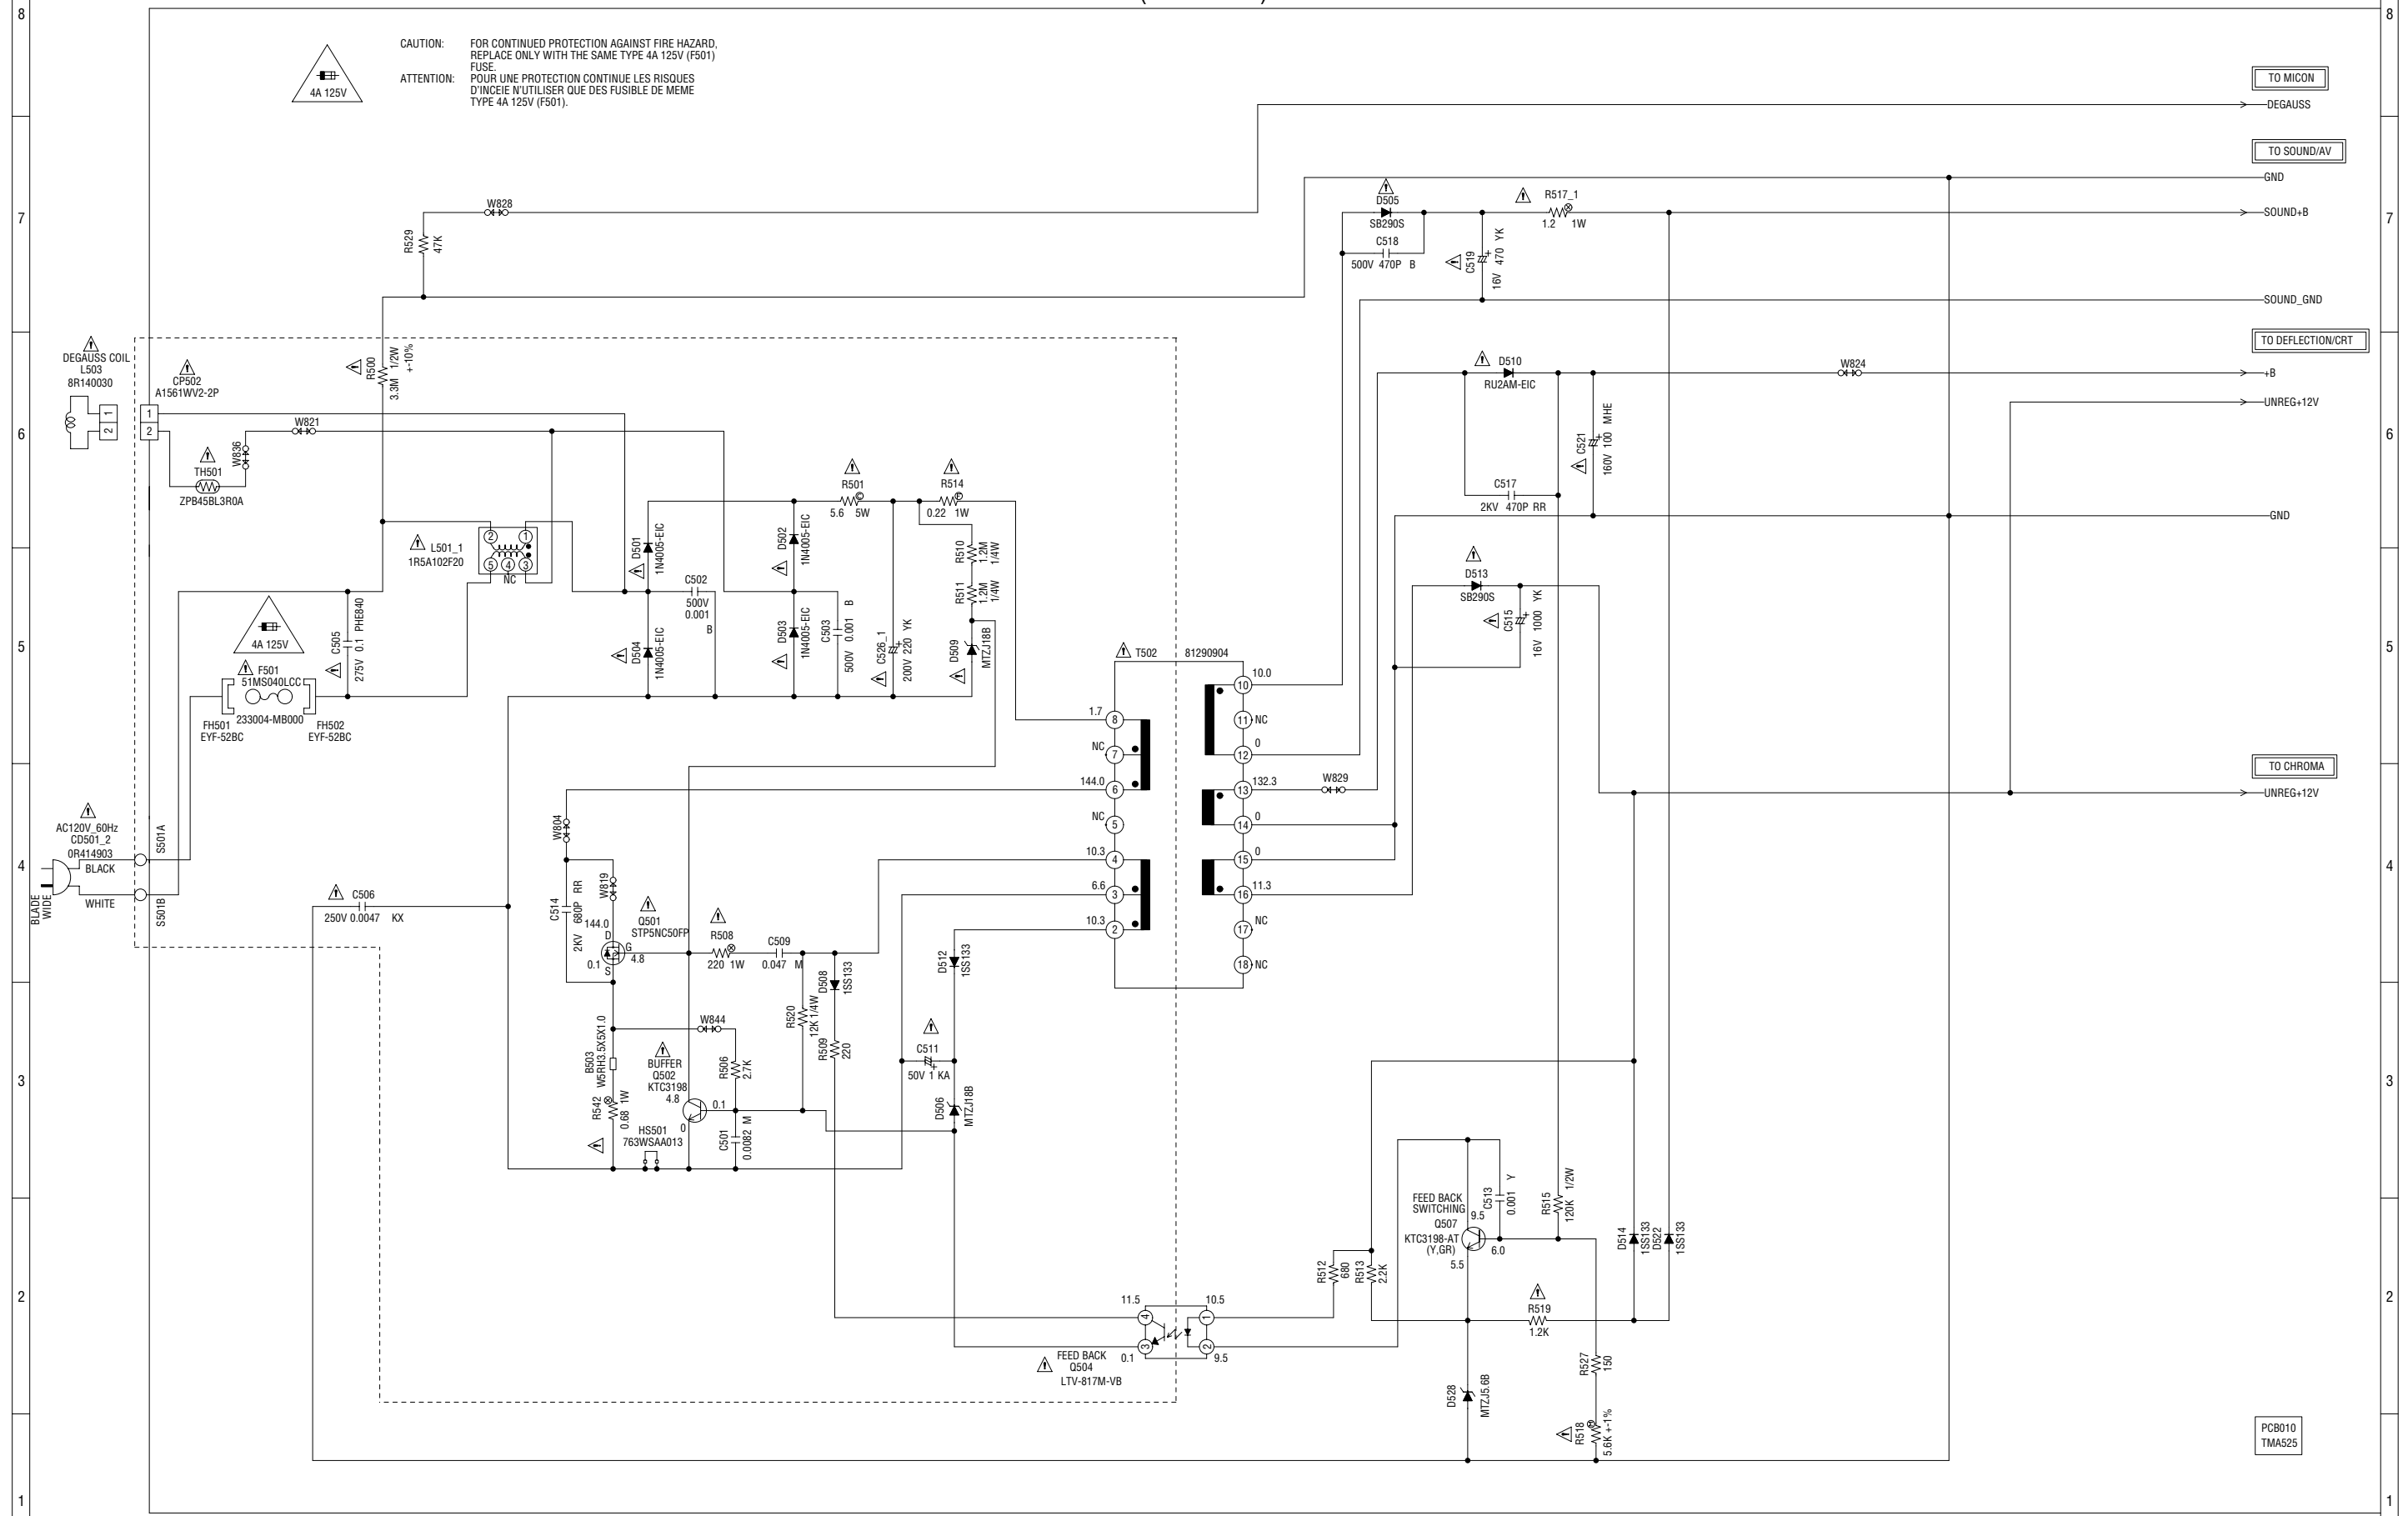

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED  
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST  
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.  
THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP  
IS NON POLAR ONE.

CAUTION: SINCE THESE PARTS MARKED BY ARE  
CRITICAL FOR SAFETY, USE ONES  
DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ETANT  
DANGEREUSES AN POINT DE VUE SECURITE  
N'UTILISER QUE CELLS DECRITES  
DANS LA NOMENCLATURE DES PIECES.

PCB010  
TMA525

# DEFLECTION/CRT SCHEMATIC DIAGRAM (MAIN PCB)

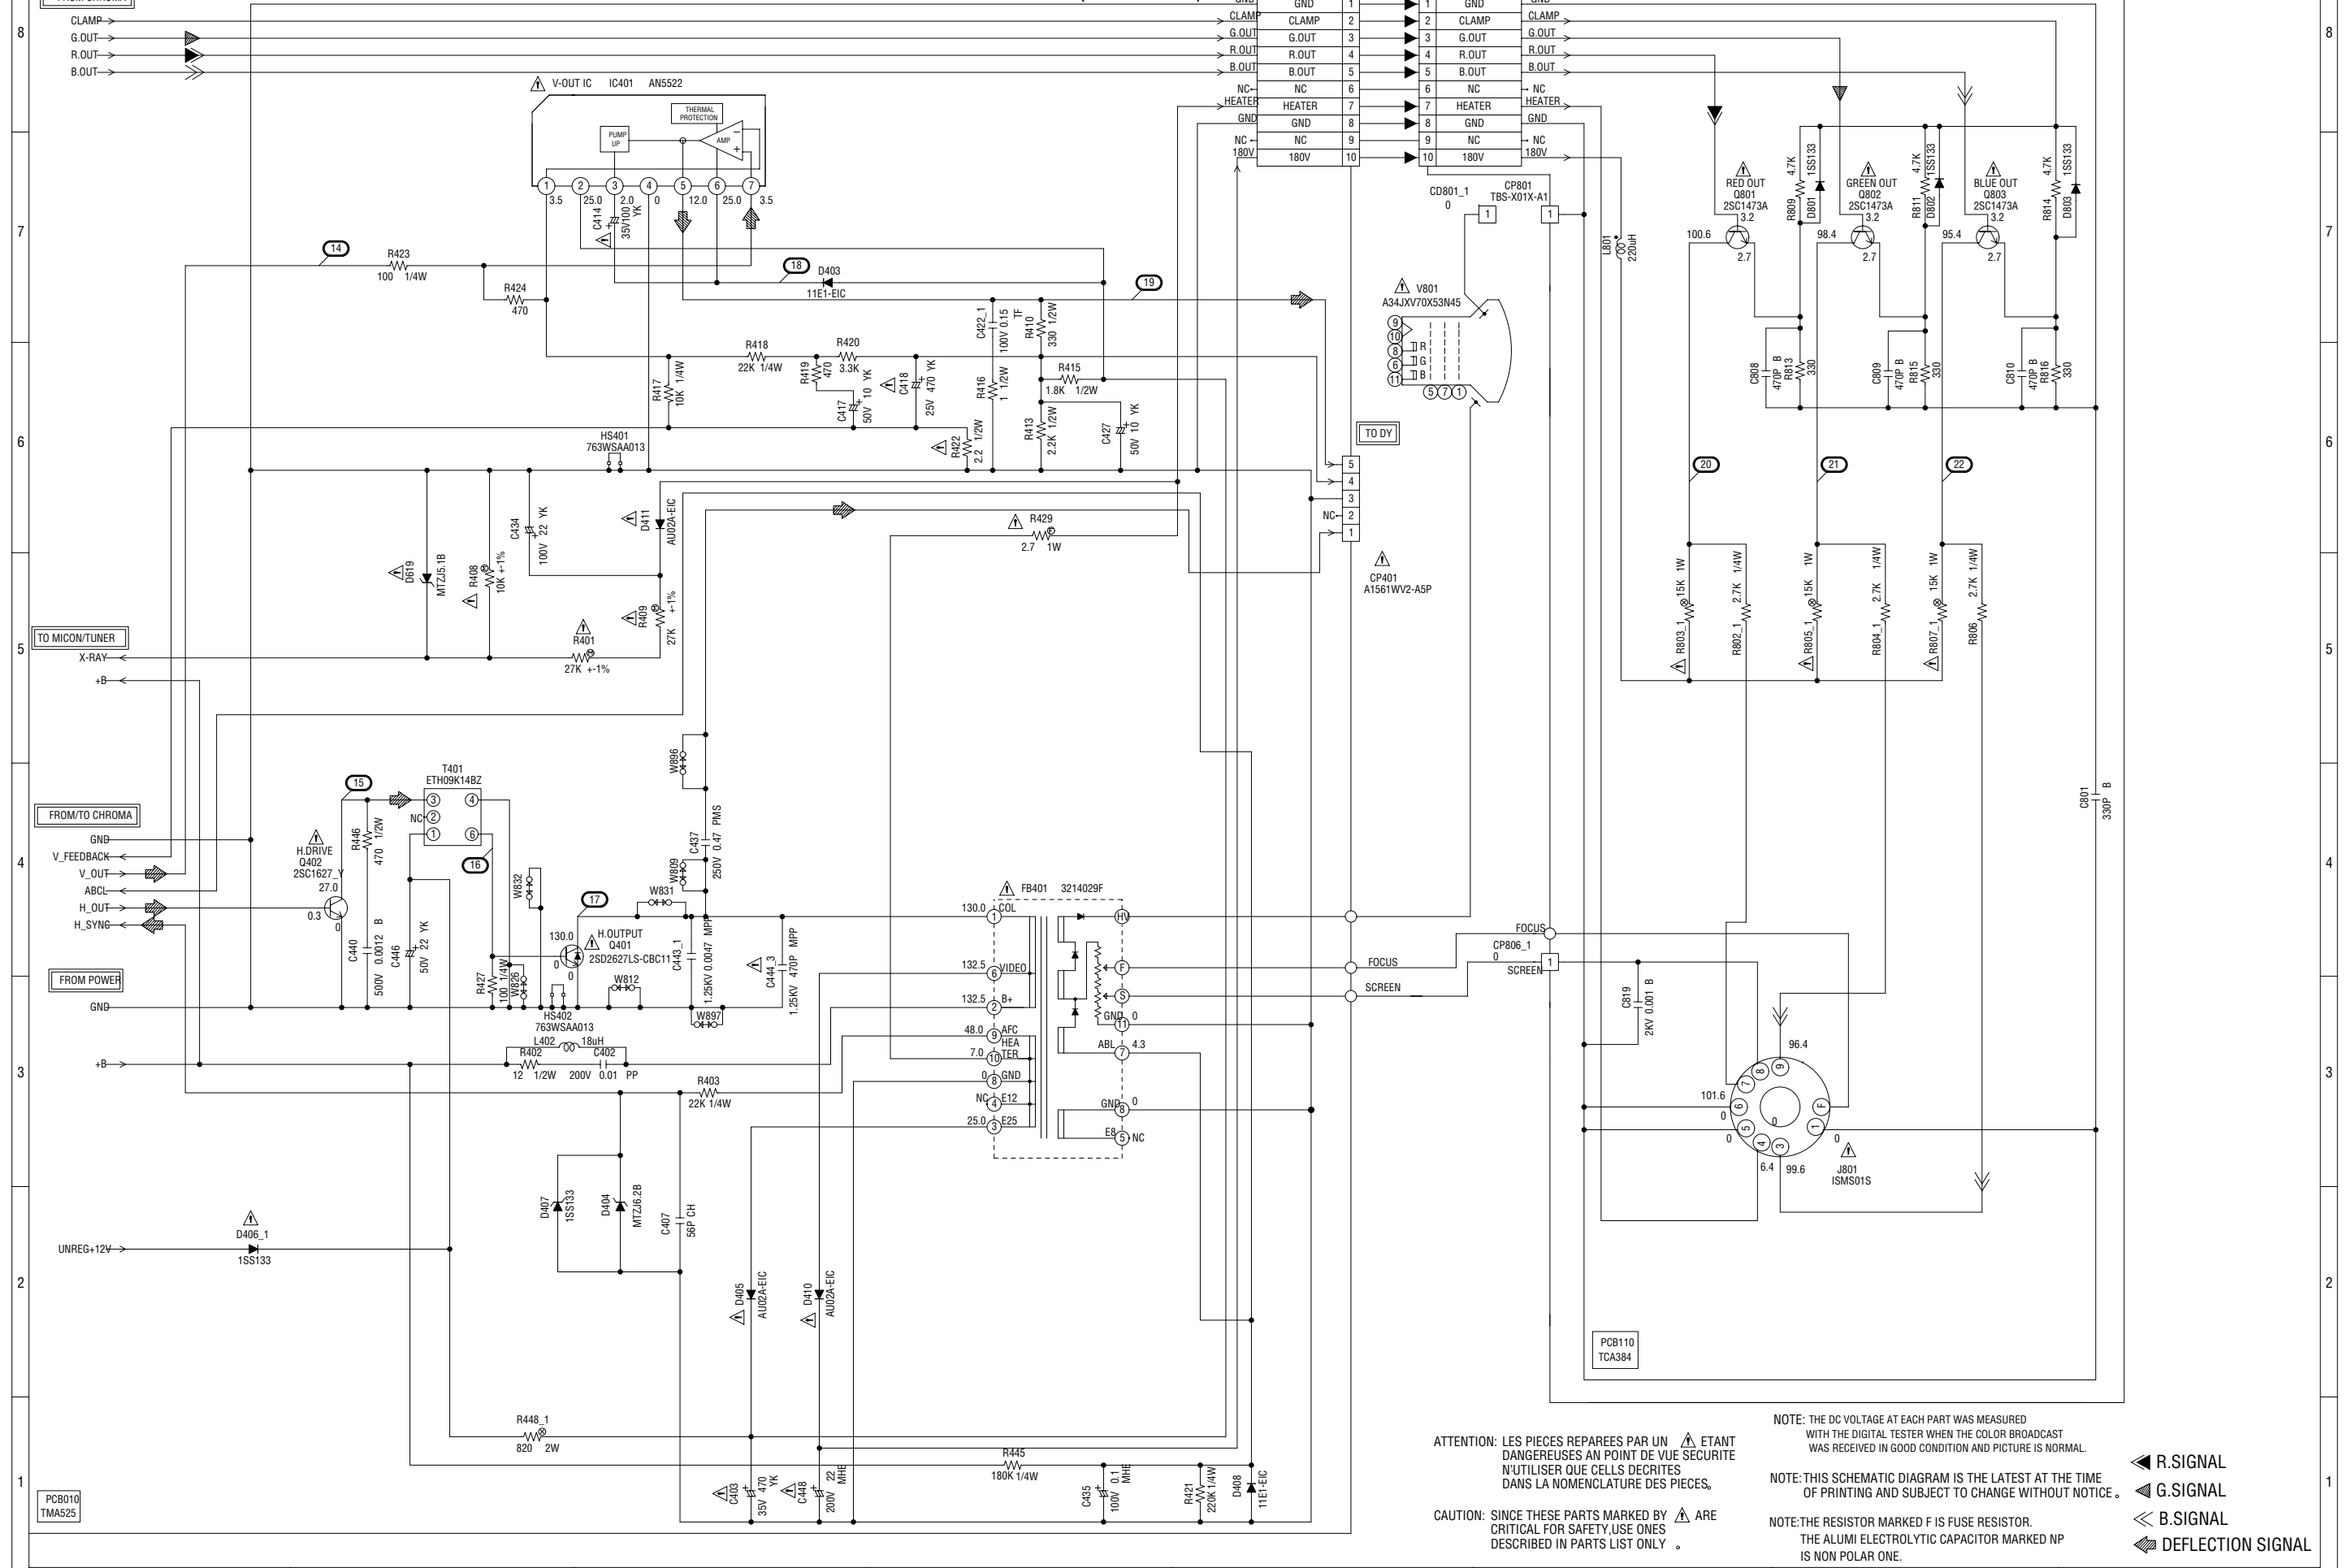

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

- R.SIGNAL
- G.SIGNAL
- B.SIGNAL
- DEFLECTION SIGNAL




# WAVEFORMS


## MICON/TUNER

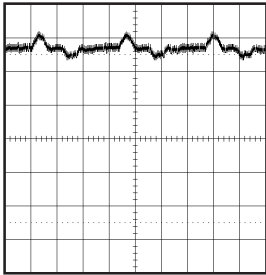


① 200mV 5ms/div

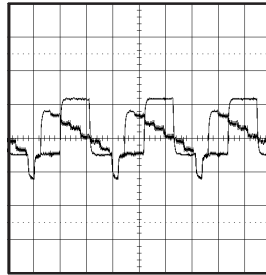


⑥ 0.5V 20μs/div

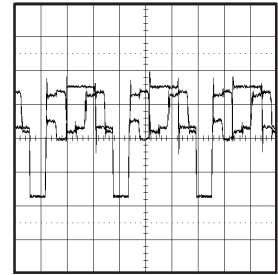


⑪ 1V 20μs/div

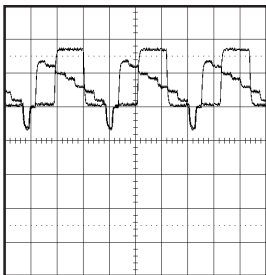


② 0.5V 20μs/div

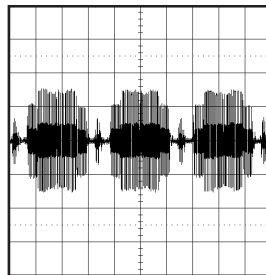


⑦ 200mV 20μs/div

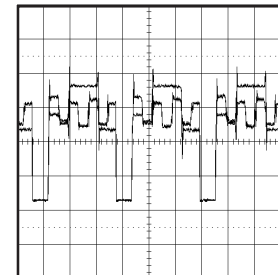


⑫ 1V 20μs/div

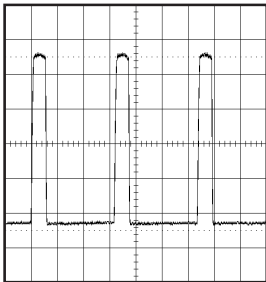


③ 200mV 20μs/div

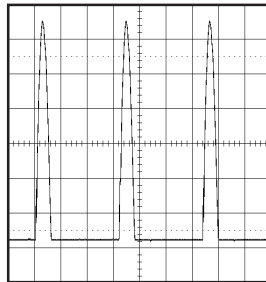


⑧ 20V 20μs/div

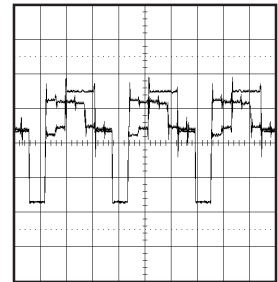


⑬ 1V 20μs/div

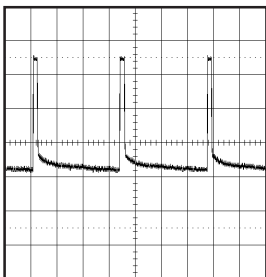

④ 200mV 5ms/div

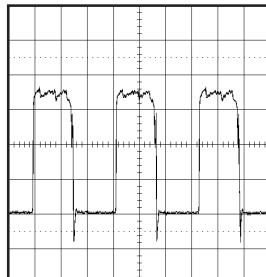


⑨ 200mV 20μs/div

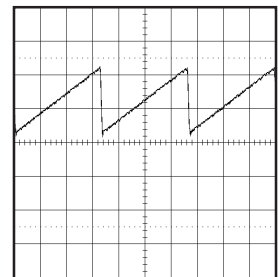


⑭ 0.5V 5ms/div


## CHROMA

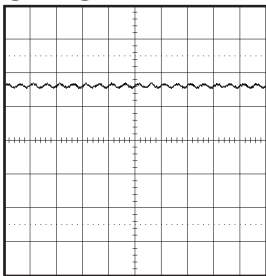

⑤ 0.5V 2ms/div

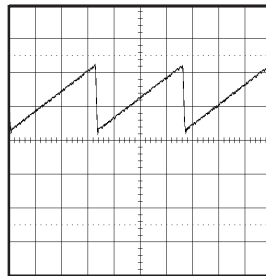

⑩ 0.5V 5ms/div

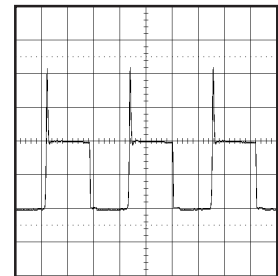


⑮ 20V 20μs/div


## DEFLECTION/CRT

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


## WAVEFORMS

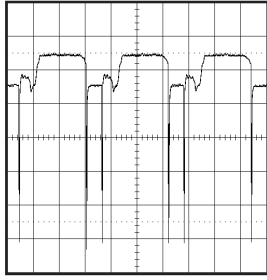


①⑥ 2V 20 $\mu$ s/div

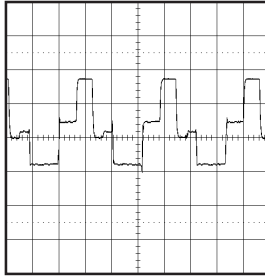


②① 50V 20 $\mu$ s/div

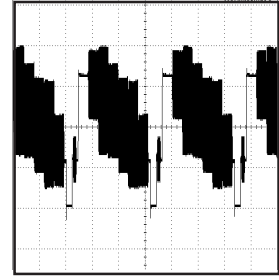

②⑥ 500mV 20 $\mu$ s/div

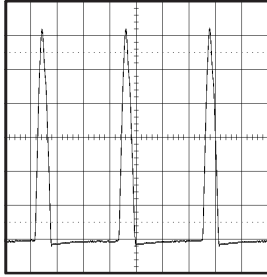


①⑦ 200V 20 $\mu$ s/div

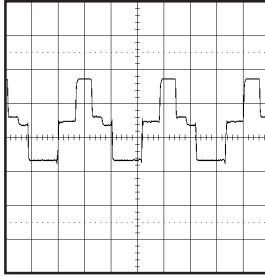


②② 50V 20 $\mu$ s/div


### SOUND/AV

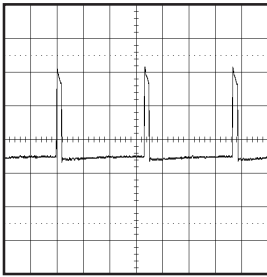


①⑧ 10V 5ms/div

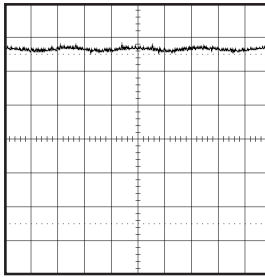


②③ 0.5V 1ms/div

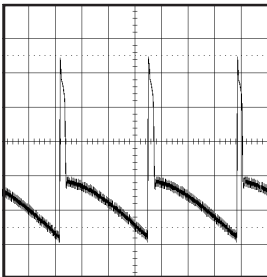


①⑨ 10V 5ms/div

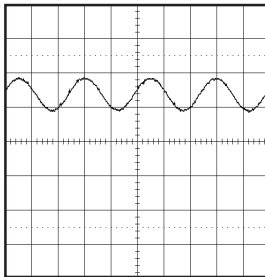

②④ 1V 1ms/div

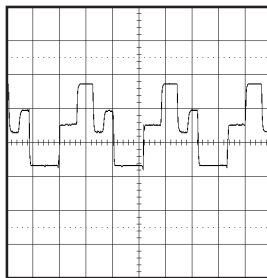

②⑦ 50V 20 $\mu$ s/div

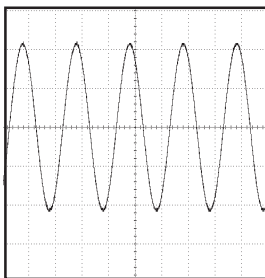


②⑤ 200mV 500 $\mu$ s/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.



# MECHANICAL EXPLODED VIEW

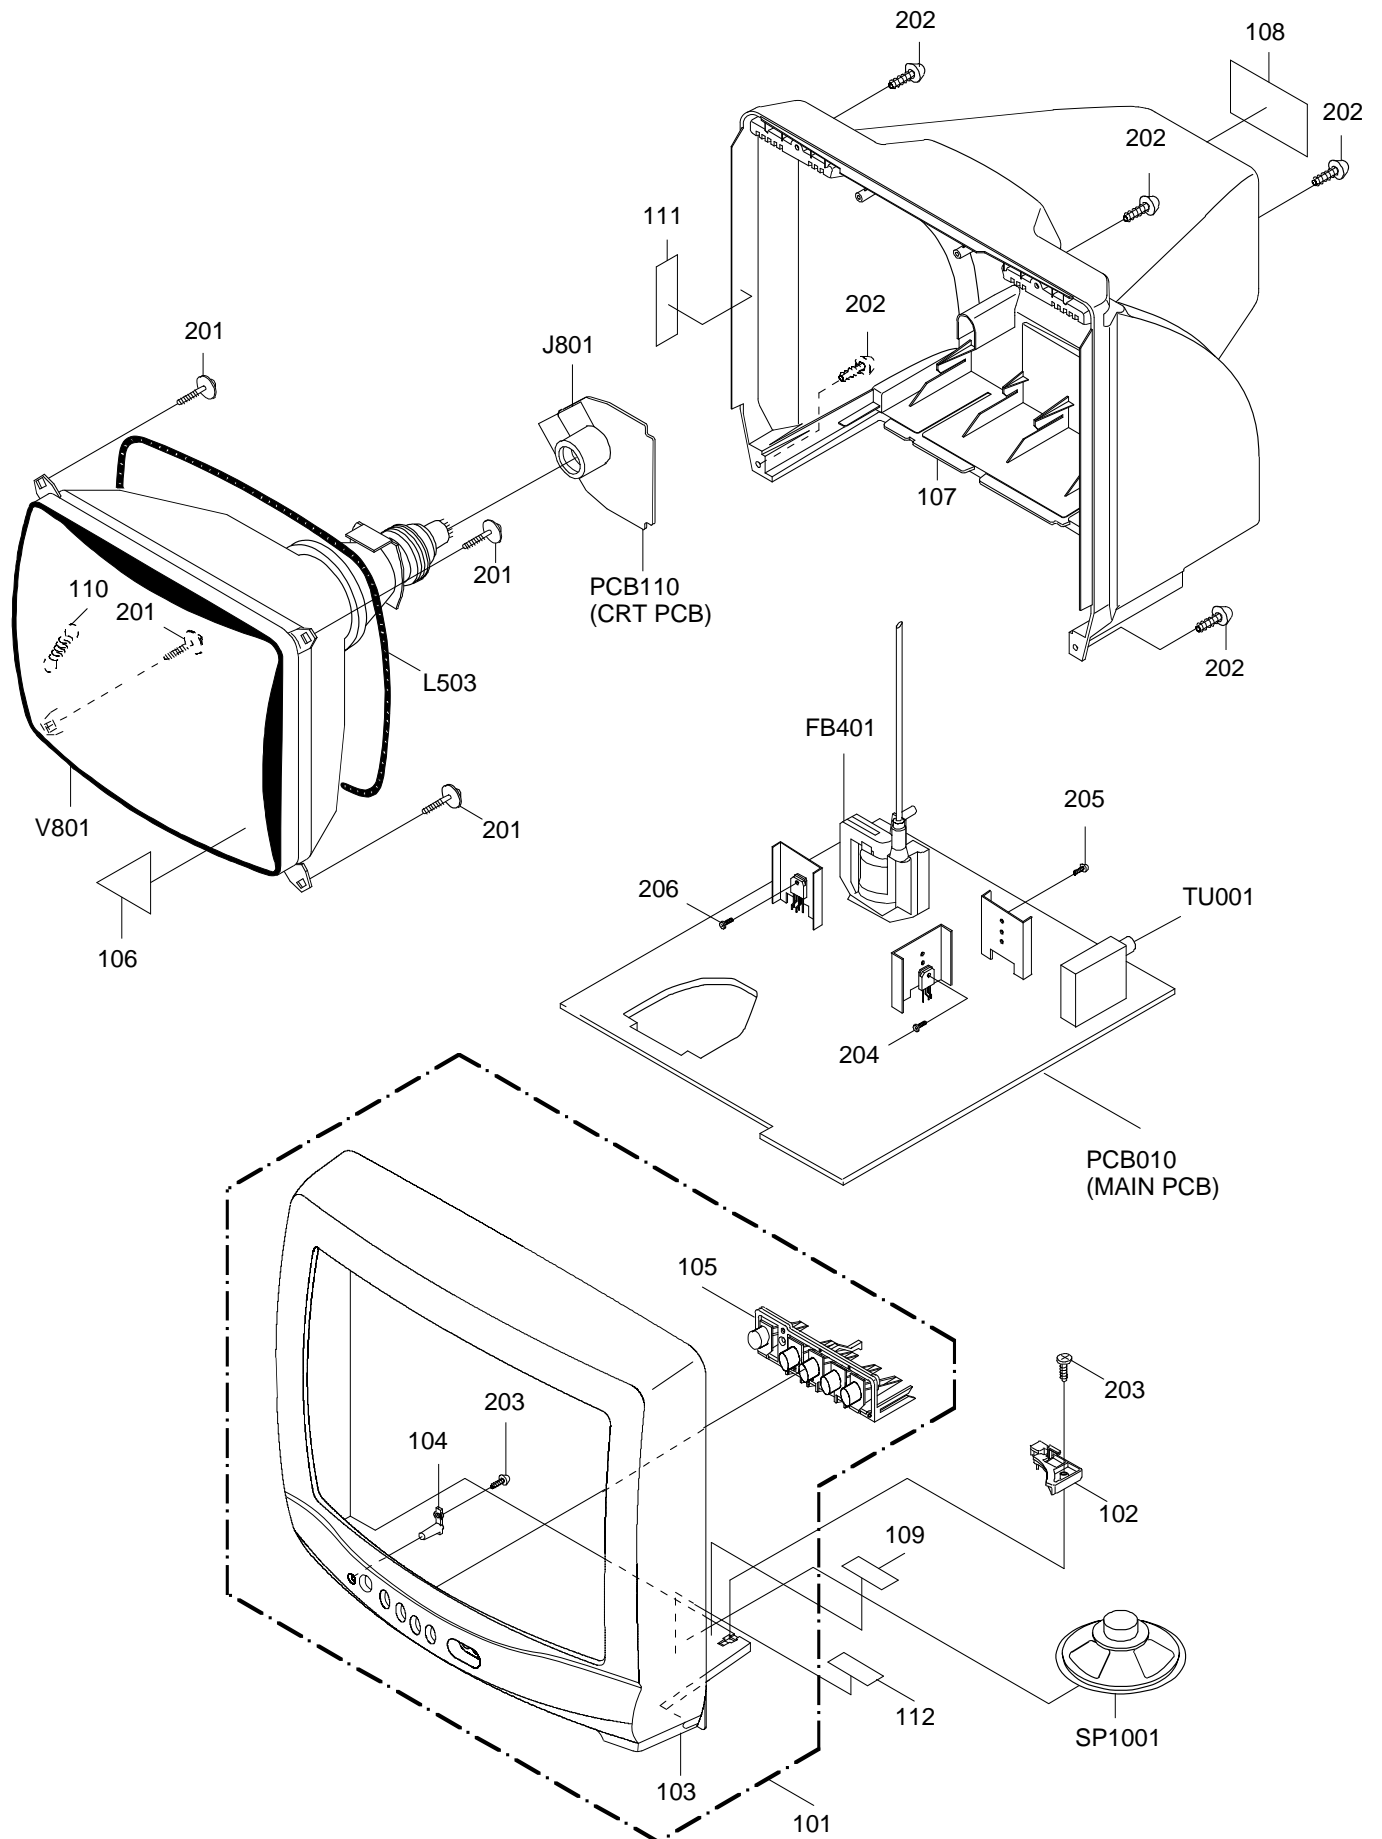

## MECHANICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION
101	A3L122C720	CABINET,FRONT ASS'Y
102	735WPA0396	SPEAKER,HOLDER
103	701WPJB679	CABINET,FRONT
104	713WPAA048	GUIDE,REMOCON
105	735WPAA417	BUTTON,FRAME
106	723000B319	FILM,DECORATION
107	702WPAA134	CABINET,BACK
108	722552A020	SHEET,RATING
109	7230006818	SHEET,CAUTION
110	741WUA0019	SPRING,EARTH
111	7220001119	SHEET,CSA WARNING
112	722000A023	SHEET,HWC
201	8121J50B54	SCREW,TAPPING(B0)      GW20      5x28
202	8117540A64	SCREW,TAPPING(B0)      TRUSS      4x16
203	8110630A04	SCREW,TAP TITE(P)      BRAZIER      3x10
204	8109I30A04	SCREW,TAP TITE(B)      WH7      3x10
205	8109630802	SCREW,TAP TITE(B)      BRAZIER      3x8
206	8109I30604	SCREW,TAP TITE(B)      WH7      3x6
---	JB5K0200	POLYBAG,INSTRUCTION
---	J3L10502	WARRANTY SHEET
---	J3L21101	INSTRUCTION BOOK
---	791WHA0023	LAMIFILM BAG
---	A3L211C975	INSTRUCTION BOOK KIT
---	792WHAA018	PACKAGE,BOTTOM
---	792WHAA019	PACKAGE,TOP
---	793WCDB256	GIFT BOX
---	7230007398	SECURITY TAG

# ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<b>RESISTORS</b>			<b>DIODES</b>		
△ R401	R4X5T6273F	R,METAL 27K OHM 1/6W	D802	D1VT001330	DIODE,SILICON 1SS133T-77
△ R408	R4X5T6103F	R,METAL 10K OHM 1/6W	D803	D1VT001330	DIODE,SILICON 1SS133T-77
△ R409	R4X5T6273F	R,METAL 27K OHM 1/6W	<b>ICS</b>		
△ R429	R655812R7J	R,FUSE 2.7 OHM 1W	IC101	I56F07073A	IC OEC7073A
R448	R3X18A821J	R,METAL OXIDE 820 OHM 2W	IC199	A3L101C015	IC S-24C02BDP-1A
△ R500	R0G3K2335K	RC 3.3M OHM 1/2W	△ IC401	I01TD55220	IC AN5522
△ R501	R5Y2C5R6J	R,CEMENT 5.6 OHM 5W	IC601	I06FC61250	IC M61250FP
△ R508	R3X181221J	R,METAL OXIDE 220 OHM 1W	IC1001	I01DP75110	IC AN7511
△ R509	R001T6221J	RC 220 OHM 1/6W	<b>TRANSISTORS</b>		
△ R514	R63581R22J	R,FUSE 0.22 OHM 1W	△ Q401	TD30026270	TRANSISTOR SILICON 2SD2627LS-CBC11
△ R515	R002T2124J	RC 120K OHM 1/2W	△ Q402	TC5T01627Y	TRANSISTOR SILICON 2SC1627_Y(TPE2)
△ R517	R3X1811R2J	R,METAL OXIDE 1.2 OHM 1W	△ Q501	TJXG5NC500	FET STP5NC50FP
△ R518	R4X5T6562F	R,METAL 5.6K OHM 1/6W	△ Q502	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
△ R519	R001T6122J	RC 1.2K OHM 1/6W	△ Q504	0002E00610	PHOTO COUPLER LTV-817M-VB
△ R542	R3X181R68J	R,METAL OXIDE 0.68 OHM 1W	Q507	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
△ R629	R3X28B330J	R,METAL OXIDE 33 OHM 3W	Q603	TCAT032034	TRANSISTOR, SILICON KTC3203_Y-AT
△ R803	R3X181153J	R,METAL OXIDE 15K OHM 1W	Q604	TCAT032034	TRANSISTOR, SILICON KTC3203_Y-AT
△ R805	R3X181153J	R,METAL OXIDE 15K OHM 1W	Q605	TCAT032034	TRANSISTOR, SILICON KTC3203_Y-AT
△ R807	R3X181153J	R,METAL OXIDE 15K OHM 1W	Q606	TCAT032034	TRANSISTOR, SILICON KTC3203_Y-AT
<b>CAPACITORS</b>			Q609	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
C402	P3N1F2103J	CCP 0.01 UF 200V	Q610	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
△ C403	E02LT4471M	CE 470 UF 35V	△ Q801	TCKT1473A0	TRANSISTOR SILICON 2SC1473A-TA-(RQ)
△ C414	E02LT4101M	CE 100 UF 35V	△ Q802	TCKT1473A0	TRANSISTOR SILICON 2SC1473A-TA-(RQ)
△ C418	E02LT3471M	CE 470 UF 25V	△ Q803	TCKT1473A0	TRANSISTOR SILICON 2SC1473A-TA-(RQ)
△ C434	E02LT8220M	CE 22 UF 100V	<b>COILS &amp; TRANSFORMERS</b>		
C437	P4J7F3474J	CMPP 0.47 UF 250V PMS	L101	021LA63R3K	COIL 3.3 UH
△ C443	P4N8FJ472H	CMPP 0.0047UF 1.25KV	L402	02186G180M	COIL 18 UH
C444	P4N8FJ471J	CMPP 470 PF 1.25KV	△ L501	029T00A7M1	COIL,LINE FILTER 1R5A102F20
	C0PLRR7Q2K	CC 470 PF 2KV RR	△ L503	028R140030	COIL,DEGAUSS 8R140030
△ C446	E02LT5220M	CE 22 UF 50V	L601	021LA6R56M	COIL 0.56 UH
△ C448	E5EZ0C220M	CE 22 UF 200V	L607	021LA6150K	COIL 15 UH
△ C503	C0JTB0513K	CC 0.001 UF 500V B	L801	021673221K	COIL 220 UH
△ C505	P2472B104M	CMP 0.1 UF 275V PHE840	T401	045009003J	TRANS,HORIZONTAL DRIVE ETH09K14BZ
C506	CB3930MQ3M	CC 0.0047UF 250V	△ T502	0481290904	TRANSFORMER,SWITCHING 81290904
C514	C0PLRR7U2K	CC 680 PF 2KV RR	<b>JACKS</b>		
△ C515	E02LT2102M	CE 1000 UF 16V	J702	060Q401077	RCA JACK AV1-09D-3
C517	C0PLRR7Q2K	CC 470 PF 2KV RR	J703	060Q401076	RCA JACK AV1-09D-4
△ C519	E02LT2471M	CE 470 UF 16V	△ J801	066F120018	SOCKET,CRT ISMS01S
C521	E5EZFB101M	CE 100 UF 160V	J1001	0602121012	JACK,RCA 3.5 HJSJ1403-01-010
△ C526	E02LFC221M	CE 220 UF 200V	<b>SWITCHES</b>		
C634	CQG0CH412J	CC 100 PF 50V CH	SW101	0504201T31	SWITCH,TACT SKHVBED010
C819	C0JBB0713K	CC 0.001 UF 2KV B	SW102	0504201T31	SWITCH,TACT SKHVBED010
			SW103	0504201T31	SWITCH,TACT SKHVBED010
			SW104	0504201T31	SWITCH,TACT SKHVBED010
			SW105	0504201T31	SWITCH,TACT SKHVBED010
<b>DIODES</b>			<b>P.C.BOARD ASSEMBLIES</b>		
D001	D97U03001B	DIODE,ZENER MTZJ30B T-77	PCB010	A3L122C010	PCB ASS'Y TMA525A
D403	D2WT011E10	DIODE SILICON 11E1-EIC	PCB110	A3L117C110	PCB ASS'Y TCA384A
D404	D97U06R21B	DIODE,ZENER MTZJ6.2B T-77	<b>MISCELLANEOUS</b>		
△ D405	D2WTAU02A0	DIODE SILICON AU02A-EIC	B503	024HT03553	CORE,BEADS W5RH3.5X5X1.0
D406	D1VT001330	DIODE,SILICON 1SS133T-77	△ CD501	120R414903	CORD AC BUSH 0R414903
D407	D1VT001330	DIODE,SILICON 1SS133T-77	CF601	1029045R7G	FILTER,SAW TSF5229P3
D408	D2WT011E10	DIODE SILICON 11E1-EIC	CF603	1012T4R520	FILTER,CERAMIC SFSRA4M50CF00-A0
△ D410	D2WTAU02A0	DIODE SILICON AU02A-EIC	CF604	1012T4R519	FILTER,CERAMIC TRAP TPSRA4M50C00-A0
△ D411	D2WTAU02A0	DIODE SILICON AU02A-EIC	△ CP401	069S4500089	CONNECTOR PCB SIDE A1561WV2-A5P
D501	D2WXN40050	DIODE SILICON 1N4005-EIC	△ CP502	069S420110	CONNECTOR PCB SIDE A1561WV2-2P
△ D502	D2WXN40050	DIODE SILICON 1N4005-EIC	CP601	069E260659	CONNECTOR PCB SIDE 00_8283_0611_00_000
△ D503	D2WXN40050	DIODE SILICON 1N4005-EIC	CP801	069W010030	CONNECTOR PCB SIDE TBS-X01X-A1
D504	D2WXN40050	DIODE SILICON 1N4005-EIC	CD101A	06CH012002	CORD CONNECTOR CH012002
△ D505	D2WXB290S0	DIODE SILICON SB290S	CD101B	06CH012003	CORD CONNECTOR CH012003
D506	D97U01801B	DIODE,ZENER MTZJ18B T-77	CP802A	067N010039	WIRE HOLDER 9253_010_000_000
D508	D1VT001330	DIODE,SILICON 1SS133T-77		067U010049	WIRE HOLDER B2013H02-10P
△ D509	D97U01801B	DIODE,ZENER MTZJ18B T-77		067N010039	WIRE HOLDER 9253_010_000_000
△ D510	D2WXRU2AM0	DIODE SILICON RU2AM-EIC		067U010049	WIRE HOLDER B2013H02-10P
D512	D1VT001330	DIODE,SILICON 1SS133T-77	△ F501	081PC04004	FUSE 51MS040LCC
△ D513	D2WXB290S0	DIODE SILICON SB290S	△ FB401	043214029F	TRANSFORMER FLYBACK 3214029F
D514	D1VT001330	DIODE,SILICON 1SS133T-77	FH501	06710T0006	HOLDER,FUSE EYF-52BC
D522	D1VT001330	DIODE,SILICON 1SS133T-77	FH502	06710T0006	HOLDER,FUSE EYF-52BC
D528	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77	OS101	077Q037003	REMOTE RECEIVER PIC-37143SY
D601	D1VT001330	DIODE,SILICON 1SS133T-77	S101	WHL6032014	FLAT CABLE AWG26 10C BLACK 320MM
D602	D97U08R21B	DIODE,ZENER MTZJ8.2B T-77	SP1001	070Y132018	SPEAKER S08F21
D604	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77	△ TH501	DF5EL3R0A0	DEGAUSS ELEMENT ZPB45BL3R0A
D605	D2WT011E10	DIODE SILICON 11E1-EIC	TM101	076N0DW010	TRANSMITTER RC-DW010
D606	D97U06R81B	DIODE,ZENER MTZJ6.8B T-77	△ TU001	0145K00056	TUNER,VHF-UHF TECC1040PG32E
D607	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77	△ V801	098Y1404B9	CRT W/DY A34JXV70X53N45
D610	D97U01201B	DIODE,ZENER MTZJ12B T-77	X602	100CT3R505	CRYSTAL HC-49/C
D611	D97U01201B	DIODE,ZENER MTZJ12B T-77			
D612	D97U01201B	DIODE,ZENER MTZJ12B T-77			
△ D619	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77			
D801	D1VT001330	DIODE,SILICON 1SS133T-77			

# ELECTRICAL REPLACEMENT PARTS LIST

## RESISTOR

RC..... CARBON RESISTOR

## CAPACITORS

CC..... CERAMIC CAPACITOR

CE..... ALUMI ELECTROLYTIC CAPACITOR

CP..... POLYESTER CAPACITOR

CPP..... POLYPROPYLENE CAPACITOR

CPL..... PLASTIC CAPACITOR

CMP..... METAL POLYESTER CAPACITOR

CMPL..... METAL PLASTIC CAPACITOR

CMPP..... METAL POLYPROPYLENE CAPACITOR

SPEC.NO.	M3L1-22C
O/R NO.	K223001

# DURABRAND

## DBTV1301 Series B

# SERVICE MANUAL

---


**COLOR TELEVISION RECEIVER**

**REVISION 1  
MFR'S VERSION A**

MFR'S VERSION	CRT
A	A34AGT13X98(L)
B	A34JXV70X53N45

# Change of CRT

## ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	MFR'S VERSION B		MFR'S VERSION A	
	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
 V801	098Y1404B9	CRT W/DY A34JXV70X53N45	098Q1404B2	CRT W/DY A34AGT13X98(L)

CRT are interchangeable.

SPEC. NO.	M3L1-27A
O/R NO.	K273045