


Memorex[®]

MT1125

SERVICE MANUAL

COLOR TELEVISION RECEIVER

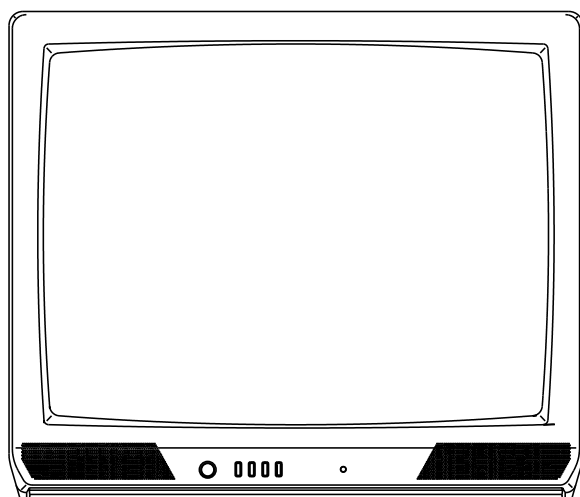

**ORIGINAL
MFR'S VERSION A**

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a \triangle mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the external exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

IMPORTANT

Inferior silicon grease can damage IC's and transistors.

When replacing an IC's or transistors, use only specified silicon grease (YG6260M).

Remove all old silicon before applying new silicon.

CONTENTS

SPECIFICATIONS	COVER
SERVICING NOTICES ON CHECKING	A1-1
HOW TO ORDER PARTS	A1-1
IMPORTANT	A1-1
CONTENTS	A2-1
GENERAL SPECIFICATIONS	A3-1~A3-4
DISASSEMBLY INSTRUCTIONS	
1. REMOVAL OF ANODE CAP	B-1
2. REMOVAL OF DEFLECTION YOKE	B-2
SERVICE MODE LIST	C-1
CONFIRMATION OF USING HOURS	C-1
NOTE FOR THE REPLACING OF MEMORY IC	C-1
ELECTRICAL ADJUSTMENTS	D1-1~D2-1
MAJOR COMPONENTS LOCATION GUIDE	D3-1
BLOCK DIAGRAM	E-1, E-2
PRINTED CIRCUIT BOARDS	
MAIN/CRT	F-1~F-4
SCHEMATIC DIAGRAMS	
MICON/TUNER	G-1, G-2
CHROMA	G-3, G-4
DEFLECTION/CRT	G-5, G-6
POWER	G-7, G-8
SOUND AMP	G-9, G-10
WAVEFORMS	H-1~H-3
MECHANICAL EXPLODED VIEW	I-1
MECHANICAL REPLACEMENT PARTS LIST	J1-1
ELECTRICAL REPLACEMENT PARTS LIST	J2-1, J2-2

GENERAL SPECIFICATIONS

G-1.Outline of the Product

25 inch(626 mmV):Measured diagonally
Color CRT 100 degree deflection

G-2.Broadcasting System

US System M

G-3.Color System NTSC PAL SECAM or Monochrome signal

G-4.NTSC Playback(PAL 60Hz) Yes No

G-5.NTSC 3.58+4.43/PAL60Hz Yes No

G-6.Antenna Input Impedance

VHF/UHF 75 ohm unbalanced

G-7.Tuner and Receiving

Contactless Electric tuner

1Tuner System

2Tuner System

channel Tuner

Oscar(W/O HYPER)

Oscar(W/ HYPER)

France CATV)

Others

Receiving channel

VHF (LOW) 2 ch~ 6 ch

(HIGH) 7 ch~ 13 ch

(CATV) A5 ch~ I ch J ch~ W+29 ch GGG ch~ W+84 ch

UHF 14 ch~ 69 ch

Tuning System

Frequency syn.

Voltage syn.

Others

G-8Preset Channel

-- channels

G-9.Intermediate Frequency

Picture(fP) 45.75 MHz MHz MHz

Sound (fS) 41.25 MHz MHz MHz

fP-fS 4.50 MHz MHz MHz

G-10.Stereo/Dual TV Sound

Yes(NICAM GERMAN USA JAPAN) No

G-11.Tuner Sound Muting

Yes No

G-12Power Source

120 V AC 50Hz AC 60Hz

G-13Power Consumption:

130 W at AC 120 V 60 Hz

 W at DC V

Stand by: 8 W at AC 120 V 60 Hz

Per Year: - kWh / Year

G-14.Dimensions(Approx.)

618 mm(W) 504 mm(D) 525 mm(H)

G-15.Weight(Approx.)

Net : 27 kg (59.9 lbs)

Gross: 29 kg (64.3 lbs)

G-16.Cabinet Material

Cabinet Front:

PS
ABS

94HB
94V2
94V0

DECABROM
NON-DECA

Back Panel:

PS
ABS

94HB
94V2
94V0

DECABROM
NON-DECA

GENERAL SPECIFICATIONS

G-17.Protector: Power Fuse

G-18.Regulation

Safety

- | | | | | | |
|--|---|----------------------------------|--------------------------------|--------------------------------|--------------------------------|
| <input checked="" type="checkbox"/> UL | <input checked="" type="checkbox"/> CSA | <input type="checkbox"/> SAA | <input type="checkbox"/> SI | <input type="checkbox"/> CE | <input type="checkbox"/> SEV |
| <input type="checkbox"/> BS | <input type="checkbox"/> NF | <input type="checkbox"/> NEMKO | <input type="checkbox"/> FEMKO | <input type="checkbox"/> DEMKO | <input type="checkbox"/> IEC65 |
| <input type="checkbox"/> SEMKO | <input type="checkbox"/> NZ | <input type="checkbox"/> HOMOLO | <input type="checkbox"/> SABS | <input type="checkbox"/> CNS | <input type="checkbox"/> SISIR |
| <input type="checkbox"/> NOM | <input type="checkbox"/> AS3159 | <input type="checkbox"/> DENTORI | <input type="checkbox"/> UNE | <input type="checkbox"/> GOST | <input type="checkbox"/> NONE |

Radiation

- | | | | | | |
|---|---|----------------------------------|---------------------------------|---------------------------------|------------------------------|
| <input checked="" type="checkbox"/> FCC | <input checked="" type="checkbox"/> DOC | <input type="checkbox"/> FTZ | <input type="checkbox"/> PTT | <input type="checkbox"/> CE | <input type="checkbox"/> SEV |
| <input type="checkbox"/> SABA | <input type="checkbox"/> SI | <input type="checkbox"/> NF | <input type="checkbox"/> NZ | <input type="checkbox"/> HOMOLO | <input type="checkbox"/> UNE |
| <input type="checkbox"/> CNS | <input type="checkbox"/> CISPR13 | <input type="checkbox"/> DENTORI | <input type="checkbox"/> AS/NZS | <input type="checkbox"/> NONE | |

X-Radiation

- | | | | | |
|------------------------------|--|---|----------------------------------|-------------------------------|
| <input type="checkbox"/> PTB | <input checked="" type="checkbox"/> DHHS | <input checked="" type="checkbox"/> HWC | <input type="checkbox"/> DENTORI | <input type="checkbox"/> NONE |
|------------------------------|--|---|----------------------------------|-------------------------------|

G-19.Temperature

Operation 5 °C ~ 40 °C

Storage -20 °C ~ 60 °C

G-20.Operating Humidity

Less than 80 %RH

G-21.Clock and Timer

Sleep Timer Yes Max 120 Min.(10 Min. Step) No

On/Off Timer Yes Programs No

Wake Up Timer Yes Programs No

G-22.Timer back up Time

More than -- Minutes (at Power Off Mode)

G-23.Terminals

- | | | | |
|---|--|---|--------------------------------------|
| <input checked="" type="checkbox"/> VHF/UHF Antenna | <input type="checkbox"/> Din Type | <input checked="" type="checkbox"/> F-Type | <input type="checkbox"/> France Type |
| <input type="checkbox"/> Video Input(Front) | <input type="checkbox"/> Phono Jack (RCA ø8.3) | <input type="checkbox"/> BNC | |
| <input type="checkbox"/> Video Input(Rear) | <input type="checkbox"/> Phono Jack (RCA ø8.3) | <input type="checkbox"/> BNC | |
| <input type="checkbox"/> Video Output(Rear) | <input type="checkbox"/> Phono Jack (RCA ø8.3) | <input type="checkbox"/> BNC | |
| <input type="checkbox"/> Audio Input(Front) | <input type="checkbox"/> Phono Jack (RCA ø8.3) | | |
| <input type="checkbox"/> Audio Input(Rear) | <input type="checkbox"/> Phono Jack (RCA ø8.3) | | |
| <input type="checkbox"/> Audio Output(Rear) | <input type="checkbox"/> Phono Jack (RCA ø8.3) | | |
| <input type="checkbox"/> 21 Pin | <input type="checkbox"/> DC Jack(Center +) | <input type="checkbox"/> Ear Phone Jack(ø3.5) | |
| <input type="checkbox"/> Head Phone Jack(ø3.5) | <input type="checkbox"/> AC Outlet | <input type="checkbox"/> Ext Speaker | |
| <input type="checkbox"/> Diversity | <input type="checkbox"/> S Input(Front) | <input type="checkbox"/> S Input(Rear) | |

G-24.Indicator

- | | | | |
|---|--|--|--|
| <input type="checkbox"/> Power
(<u> </u>) | <input type="checkbox"/> Stand By
(<u> </u>) | <input type="checkbox"/> On Timer
(<u> </u>) | <input checked="" type="checkbox"/> NONE |
|---|--|--|--|

G-25.Display

On Screen Display

- | | | | |
|---|--|---|---|
| <input checked="" type="checkbox"/> Menu | <input type="checkbox"/> Clock Set(<input type="checkbox"/> 12H <input type="checkbox"/> 24H) | <input type="checkbox"/> System Selec | <input type="checkbox"/> On/Off Timer |
| <input type="checkbox"/> Hotel Lock | <input type="checkbox"/> Sound 1/2 | <input type="checkbox"/> Area Code | <input checked="" type="checkbox"/> CH Tuning |
| <input type="checkbox"/> Guide CH Set | <input type="checkbox"/> CATV | <input type="checkbox"/> NICAM Auto Off | <input checked="" type="checkbox"/> Picture |
| <input checked="" type="checkbox"/> Control Level | <input checked="" type="checkbox"/> Sound | <input checked="" type="checkbox"/> Audio | <input checked="" type="checkbox"/> Language |
| <input checked="" type="checkbox"/> Color | <input type="checkbox"/> Tuning | <input type="checkbox"/> Pin Code Registration | <input checked="" type="checkbox"/> V-Chip |
| <input checked="" type="checkbox"/> Balance | <input type="checkbox"/> Stereo,Audio Output,Bilingual | <input checked="" type="checkbox"/> Brightness | <input checked="" type="checkbox"/> Contrast |
| <input type="checkbox"/> Stereo,Audio Output,SAP | <input checked="" type="checkbox"/> Sound Mute | <input checked="" type="checkbox"/> Tint(NTSC Only) | <input checked="" type="checkbox"/> Sharpness |
| <input type="checkbox"/> Stereo,Audio Output | <input type="checkbox"/> CH/AV | <input checked="" type="checkbox"/> Bass | <input checked="" type="checkbox"/> Treble |
| <input type="checkbox"/> CH/AV | <input type="checkbox"/> Clock | <input type="checkbox"/> Back Light | |
| <input checked="" type="checkbox"/> Sleep Timer | <input checked="" type="checkbox"/> Sound Mute | <input type="checkbox"/> Picture Menu | |
| | | <input type="checkbox"/> Mid Night Theater | |
| | | <input type="checkbox"/> GAME | |
| | | <input type="checkbox"/> Pin Code | <input type="checkbox"/> Hotel Lock |
| | | <input checked="" type="checkbox"/> Channel | |

GENERAL SPECIFICATIONS

G-32.Switch

Front

- | | | |
|--|--|--|
| <input type="checkbox"/> Power(Tact) | <input checked="" type="checkbox"/> Channel Up/Reset | <input checked="" type="checkbox"/> Volume Up/Set Up |
| <input type="checkbox"/> System Select | <input checked="" type="checkbox"/> Channel Down/Enter | <input checked="" type="checkbox"/> Volume Down/Set Down |
| <input type="checkbox"/> Main Power SW | <input checked="" type="checkbox"/> Sub Power | <input checked="" type="checkbox"/> Menu:Vol UP + Vol Down |

Rear

- | | |
|----------------------------------|---|
| <input type="checkbox"/> AC/DC | <input type="checkbox"/> TV/CATV Selector |
| <input type="checkbox"/> Degauss | <input type="checkbox"/> Main Power SW |

G-33.Magnetic Field

- | | | |
|---|--------------------------------------|--------------------------------------|
| <input checked="" type="checkbox"/> BV : +0.45G | <input type="checkbox"/> BV : +0.35G | <input type="checkbox"/> BV : +0.25G |
| BH : 0.18G | BH : 0.30G | BH : 0.30G |
| <input type="checkbox"/> BV : -0.15G | <input type="checkbox"/> BV : -0.25G | <input type="checkbox"/> BV : -0.50G |
| BH : 0.15G | BH : 0.15G | BH : 0.30G |

G-34.Remote Control Unit:

RC- 74

Power Source:

D.C 3 V Battery UM - 4 x 2

- | | | |
|---|--|---|
| <input checked="" type="checkbox"/> Power | <input checked="" type="checkbox"/> Quick View | <input type="checkbox"/> TV/AV |
| <input type="checkbox"/> Stand By | <input type="checkbox"/> Status | <input type="checkbox"/> Bar Select |
| <input checked="" type="checkbox"/> 0 | <input type="checkbox"/> Time Select | <input type="checkbox"/> PAL/SECAM |
| <input checked="" type="checkbox"/> 1 | <input type="checkbox"/> Time Set | <input checked="" type="checkbox"/> Volume Up |
| <input checked="" type="checkbox"/> 2 | <input checked="" type="checkbox"/> Muting | <input checked="" type="checkbox"/> Volume Down |
| <input checked="" type="checkbox"/> 3 | <input type="checkbox"/> CH Skip | <input type="checkbox"/> CH Call |
| <input checked="" type="checkbox"/> 4 | <input checked="" type="checkbox"/> CH1/CH2 | <input checked="" type="checkbox"/> CH Down |
| <input checked="" type="checkbox"/> 5 | <input type="checkbox"/> Channel | <input checked="" type="checkbox"/> CH Up |
| <input checked="" type="checkbox"/> 6 | <input type="checkbox"/> Text/Mix/TV | <input type="checkbox"/> CH Down/Page Down |
| <input checked="" type="checkbox"/> 7 | <input type="checkbox"/> Display Cancel | <input type="checkbox"/> CH Up/Page Up |
| <input checked="" type="checkbox"/> 8 | <input type="checkbox"/> Initial | <input type="checkbox"/> Page +/- |
| <input checked="" type="checkbox"/> 9 | <input type="checkbox"/> Store | <input type="checkbox"/> Program |
| <input type="checkbox"/> 10 | <input type="checkbox"/> Reveal | <input type="checkbox"/> F/T/B |
| <input type="checkbox"/> 11 | <input checked="" type="checkbox"/> Sleep | <input type="checkbox"/> Hold |
| <input type="checkbox"/> 12 | <input type="checkbox"/> Aft/Skip | <input type="checkbox"/> List |
| <input type="checkbox"/> 1 | <input type="checkbox"/> Preset | <input type="checkbox"/> Rotate |
| <input type="checkbox"/> 2 | <input type="checkbox"/> 5.5/6.5MHz | <input type="checkbox"/> Browse |
| <input type="checkbox"/> 0/10 | <input type="checkbox"/> Auto Memory | <input type="checkbox"/> Std/Auto |
| <input type="checkbox"/> Tone 1/2 | <input type="checkbox"/> Auto | <input type="checkbox"/> Memory |
| <input type="checkbox"/> Info | <input checked="" type="checkbox"/> Call | <input type="checkbox"/> Band Select |
| <input type="checkbox"/> Mono/Auto | <input checked="" type="checkbox"/> Reset | <input type="checkbox"/> Search |
| <input checked="" type="checkbox"/> TV/Caption/Text | <input checked="" type="checkbox"/> Menu | <input type="checkbox"/> Clock/Program |
| <input type="checkbox"/> Expand | <input checked="" type="checkbox"/> Enter | <input type="checkbox"/> Clock/Set |
| <input type="checkbox"/> Red | <input type="checkbox"/> Add | <input type="checkbox"/> Ch Set |
| <input type="checkbox"/> Cyan | <input type="checkbox"/> Delete | <input checked="" type="checkbox"/> Set + |
| <input type="checkbox"/> Normal | <input type="checkbox"/> Yellow | <input checked="" type="checkbox"/> Set - |
| <input type="checkbox"/> Color System | <input type="checkbox"/> Random | <input type="checkbox"/> Green |
| <input type="checkbox"/> Wide Seley | <input type="checkbox"/> Tuning Up/Time Text | <input type="checkbox"/> Nicam/Mono |
| <input type="checkbox"/> Auto Wide On/Off | <input type="checkbox"/> Tuning Down/Reset | <input type="checkbox"/> Tone A/B |
| <input type="checkbox"/> Picture Position | <input type="checkbox"/> Navi | <input type="checkbox"/> FM Transmitter |
| <input type="checkbox"/> Direct Change/Auto Search | | <input type="checkbox"/> Back Light |
| <input type="checkbox"/> Picture Menu | <input type="checkbox"/> Mid Night Theater | <input checked="" type="checkbox"/> Stereo/Mono |

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

- * After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- * Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. **(Refer to Fig. 1-1.)**

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.

A cracking noise will be heard as the voltage is discharged.

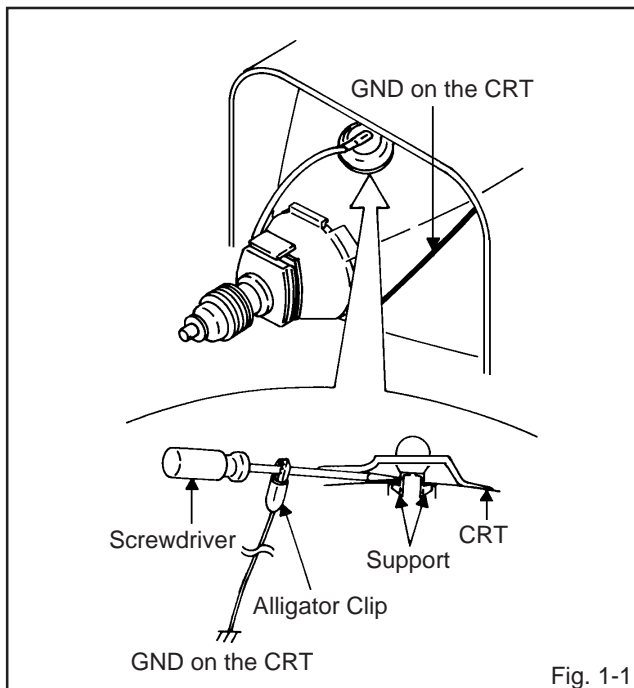


Fig. 1-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. **(Refer to Fig. 1-2.)**

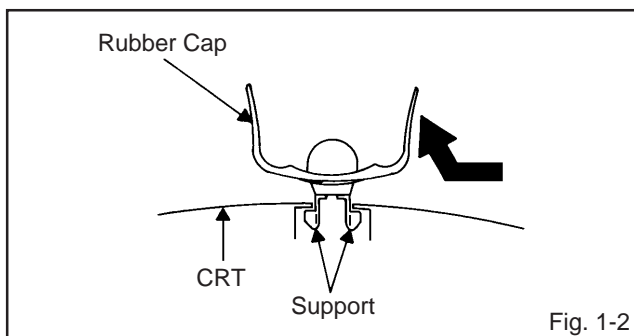


Fig. 1-2

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE

Take care not to damage the Rubber Cap.

INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. **(Refer to Fig. 1-3.)**

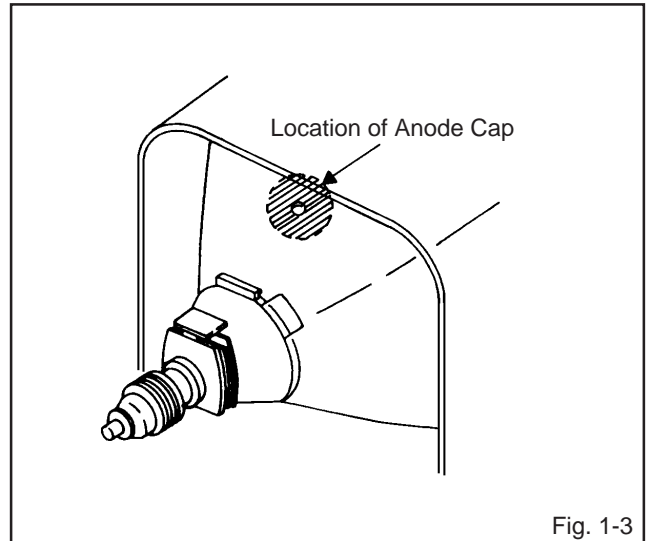


Fig. 1-3

NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. **(Refer to Fig. 1-4.)**


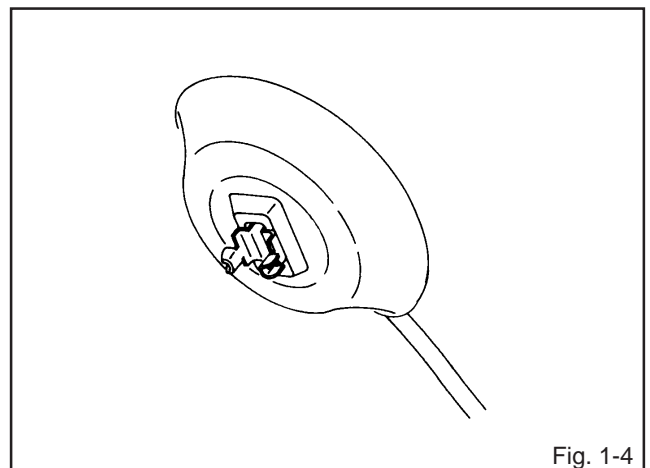


Fig. 1-4

DISASSEMBLY INSTRUCTIONS


4. Insert one end of the Anode Support into the anode button, then the other as shown in **Fig. 1-5**.

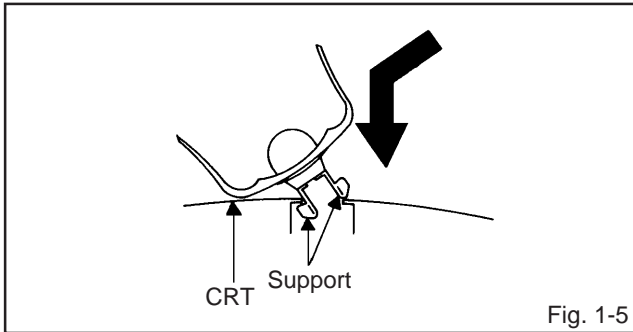

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

2. REMOVAL OF DEFLECTION YOKE (Refer to Fig. 2-1)

1. Loosen the screw ①.
2. Remove the Convergence • Purity Magnet in the direction of arrow (A).
3. Loosen the screw ②.
4. Remove the 3 Wedges.
5. Remove the Deflection Yoke in the direction of arrow (B).

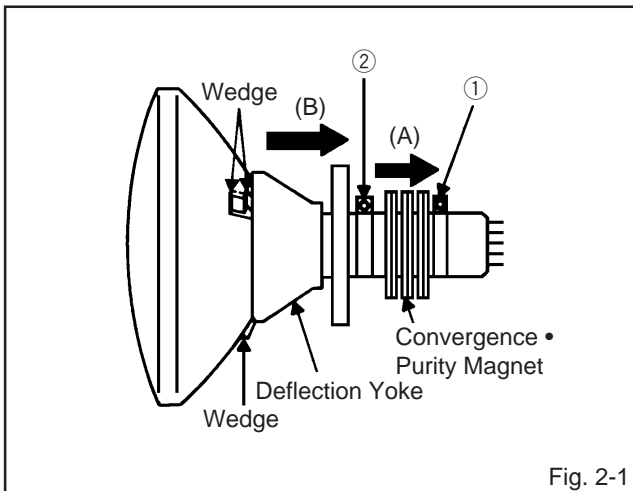

INSTALLATION

Install new Deflection Yoke in reverse steps of REMOVAL.

NOTE

After adjusting the purity and the convergence, fix the screw ② and lock the wedges.

SERVICE MODE LIST


This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.

Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF USING HOURS". Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "NOTE FOR THE REPLACING OF MEMORY IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

CONFIRMATION OF USING HOURS

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and the Channel button **(6)** on the remote control for more than 2 seconds.
3. After the confirmation of using hours, turn off the power.

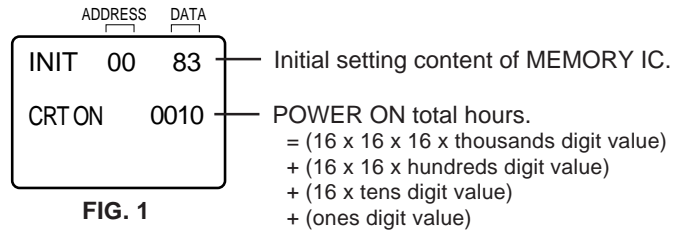

NOTE FOR THE REPLACING OF MEMORY IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: No need the setting for after INI 09.

ADDRESS	INI 00	INI 01	INI 02	INI 03	INI 04	INI 05	INI 06	INI 07	INI 08	INI 09
DATA	88	6C	80	00	00	00	00	98	07	04

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and the Channel button **(6)** on the remote control for more than 2 seconds.
3. ADDRESS and DATA should appear as FIG 1.
4. ADDRESS is now selected and should "blink". Using the SET + or - keys on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
5. Press ENTER to select DATA. When DATA is selected, it will "blink".
6. Again, step through the DATA using SET + or - until required DATA value has been selected.
7. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
8. Repeat steps 4 to 7 until all data has been checked.
9. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input. The unit will now have the correct DATA for the new MEMORY IC.

ELECTRICAL ADJUSTMENTS

1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position. Inferior silicon grease can damage IC's and transistors.
- When replacing IC's and transistors, use only specified silicon grease (YG6260M). Remove all old silicon before applying new silicon.

1-1: Prepare the following measurement tools for electrical adjustments.

1. Synchro Scope
2. Digital Voltmeter

2. BASIC ADJUSTMENTS

On-Screen Display Adjustment

In the condition of NO indication on the screen. Press both VOL. DOWN button on the set and the Channel button (9) on the remote control for more than 2 seconds to appear the adjustment mode on the screen as shown in Fig. 2-1.

NOTE

Use the Channel buttons (1-8) on the remote control to select the options shown in Fig. 2-1. Press the Channel button (0) on the remote control to end the adjustments.

1. H/V
2. AKB
3. COLOR TEMP
4. PICTURE
5. OTHERS
6. TEST PATTERN
7. STEREO/SAP
8. (VOL TEST) 0. END

Fig. 2-1

2-1: RF AGC DELAY

1. Receive an 80dB monoscope pattern.
2. Connect the digital voltmeter between the pin 2 of CP101 and the pin 6 (GND) of CP101.
3. Activate the adjustment mode display of Fig. 2-1 and press the channel button (5) on the remote control. The Fig. 2-2 appears on the display.
4. Press the channel button (1) on the remote control.
5. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is $2.0 \pm 0.05V$.

1. RF AGC DELAY
2. VIDEO LEVEL
3. FM LEVEL
4. OSD H
5. CUT OFF
6. X-RAY
- 7.
8. 0. RETURN

Fig. 2-2

2-2: CUT OFF

1. Using the remote control, set the brightness and contrast to normal position.
2. Activate the adjustment mode display of Fig. 2-1 and press the channel button (5) on the remote control. The Fig. 2-2 appears on the display.
3. Press the channel button (5) on the remote control.
4. Adjust the **Screen Volume** until a dim raster is obtained.

2-3: WHITE BALANCE

NOTE:

Adjust after performing adjustments in section 2-2.

1. Receive the color bar pattern.
2. Activate the adjustment mode display of Fig. 2-1 and press the channel button (2) on the remote control. The Fig. 2-3 appears on the display.
3. Adjust the adjustment mode display of Fig. 2-3 until the white color is looked like a white.

1. AKB AUTO
2. R. BIAS
3. G. BIAS
4. B. BIAS
5. R. DRIVE
6. G. DRIVE
7. B. DRIVE
8. AGC AUTO 0. RETURN

Fig. 2-3

2-4: SUB BRIGHTNESS

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of Fig. 2-1 and press the channel button (4) on the remote control. The Fig. 2-4 appears on the display.
4. Press the channel button (1) on the remote control.
5. Press the VOL. UP/DOWN button on the remote control until the white 10% is starting to be visible.

1. BRIGHT
2. CONTRAST
3. COLOR
4. TINT
5. SHARPNESS
6. OSD CONT
- 7.
8. 0. RETURN

Fig. 2-4

ELECTRICAL ADJUSTMENTS

2-5: SUB TINT/SUB COLOR

1. Receive the color bar pattern.
2. Connect the synchro scope to **pin 1 of CP101** and the **pin 6 (GND) of CP101**.
3. Activate the adjustment mode display of **Fig. 2-1** and press the channel button **(4)** on the remote control. The **Fig. 2-4** appears on the display.
4. Press the channel button **(4)** on the remote control.
5. Press the VOL. UP/DOWN button on the remote control until the waveform becomes as shown in **Fig. 2-5**.
6. Press the CH DOWN button once to set to "COLOR" mode.
7. Adjust the LEVEL "A" section of Blue to the LEVEL "D" section of White by pressing the VOL. UP/DOWN button on the remote control. **(Refer to Fig. 2-6)**
8. If the LEVEL "A" section through "C" section are not the same compared with "D" section, adjust the LEVEL again.

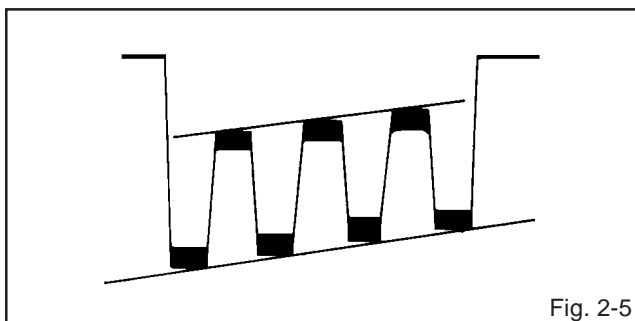


Fig. 2-5

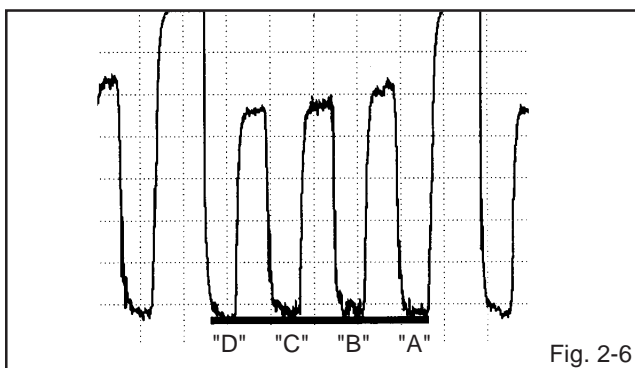


Fig. 2-6

2-6: FOCUS

1. Receive an 80dB monoscope pattern.
2. Adjust the **Focus Volume** until picture is distinct.

2-7: VERTICAL POSITION

1. Receive the color bar pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Adjust the **VR401** until the horizontal line of the color bar comes to approximate center of the CRT.

2-8: VERTICAL SIZE

1. Receive the crosshatch pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 2-1** and press the channel button **(1)** on the remote control. The **Fig. 2-7** appears on the display.
4. Press the channel button **(3)** on the remote control.
5. Press the VOL. UP/DOWN button on the remote control until the center of crosshatch is square.

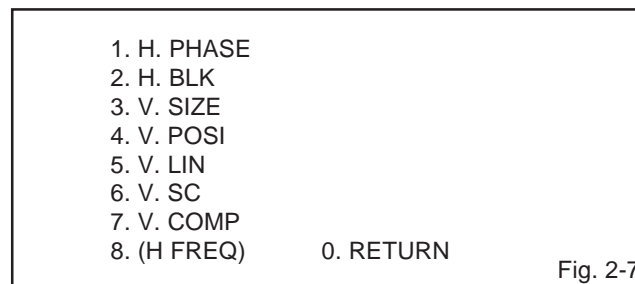


Fig. 2-7

2-9: HORIZONTAL PHASE

1. Receive the color bar pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 2-1** and press the channel button **(1)** on the remote control. The **Fig. 2-7** appears on the display.
4. Press the channel button **(1)** on the remote control.
5. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

2-10: OSD HORIZONTAL

1. Using the remote control, set the brightness and contrast to normal position.
2. Activate the adjustment mode display of **Fig. 2-1** and press the channel button **(5)** on the remote control. The **Fig. 2-2** appears on the display.
3. Press the channel button **(4)** on the remote control.
4. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum.

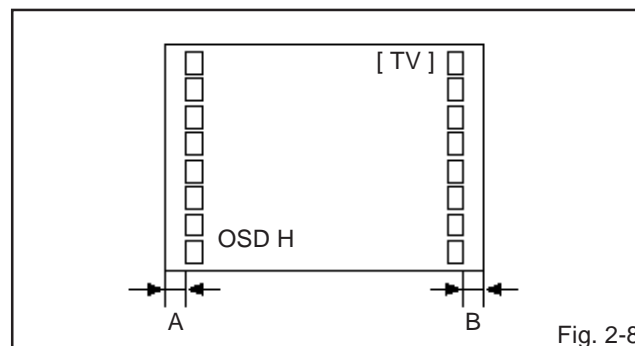


Fig. 2-8

ELECTRICAL ADJUSTMENTS

2-11: VCO FREERUN

1. Receive an 80dB monoscope pattern.
2. Connect the digital voltmeter between the **TP201** and the **Ground**.
3. Adjust the **L205** until the digital voltmeter is $3.1 \pm 0.05V$.

2-12: SEPARATION 1, 2

1. Receive the stereo broadcasting signal.
2. Connect the AC voltmeter to **CP351** through stereo filter (L=400Hz, R=2KHz).
3. Activate the adjustment mode display of **Fig. 2-1** and press the channel button **(7)** on the remote control. The **Fig. 2-9** appears on the display.
4. Press the channel button **(2)** on the remote control.
5. Press the VOL. UP/DOWN button on the remote control until the output of L-CH and R-CH become minimum.
6. Press the CH UP button once to set to "SEPARATION 2" mode.
7. Press the VOL. UP/DOWN button on the remote control until the output of L-CH and R-CH become minimum.

- | | |
|-----------------|-----------|
| 1. LEVEL ADJ | |
| 2. SEPARATION 1 | |
| 3. SEPARATION 2 | |
| 4. | |
| 5. | |
| 6. | |
| 7. | |
| 8. | 0. RETURN |

Fig. 2-9

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue colors.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

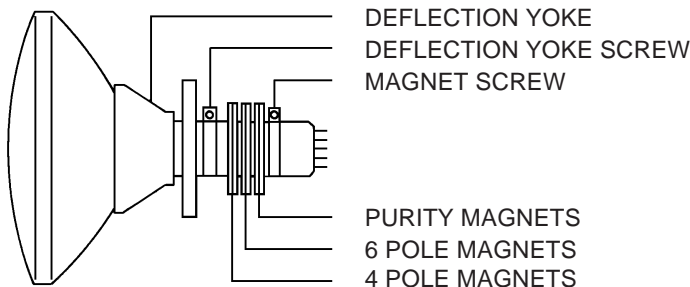


Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**

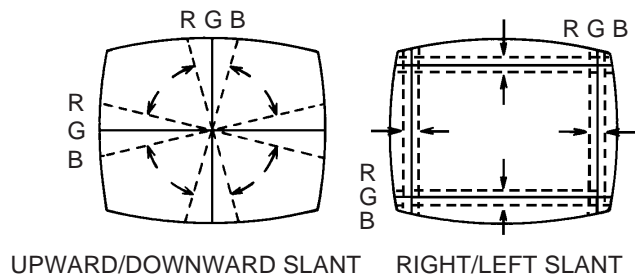


Fig. 3-2-a


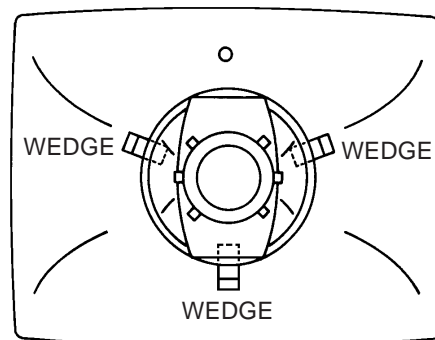


Fig. 3-2-b


MAJOR COMPONENTS LOCATION GUIDE

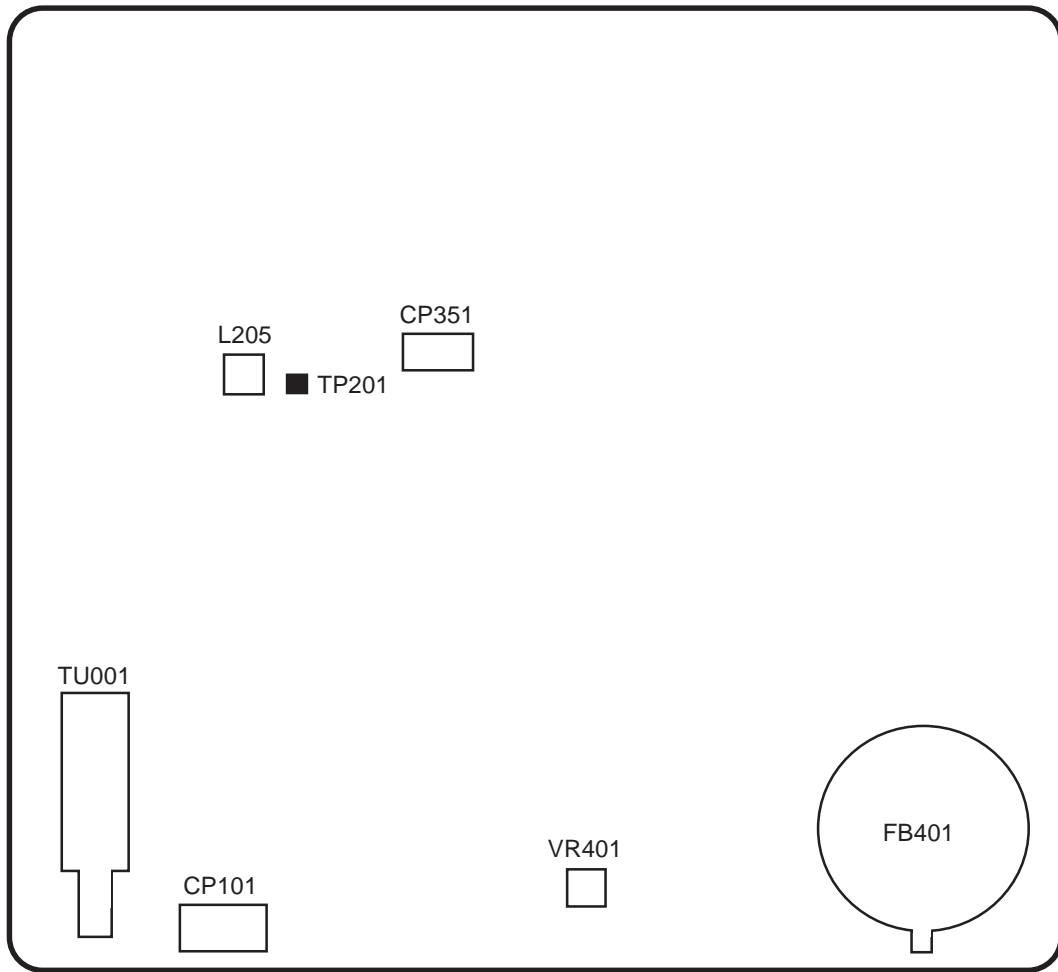


FOCUS VOLUME
SCREEN VOLUME

MAIN


BLOCK DIAGRAM

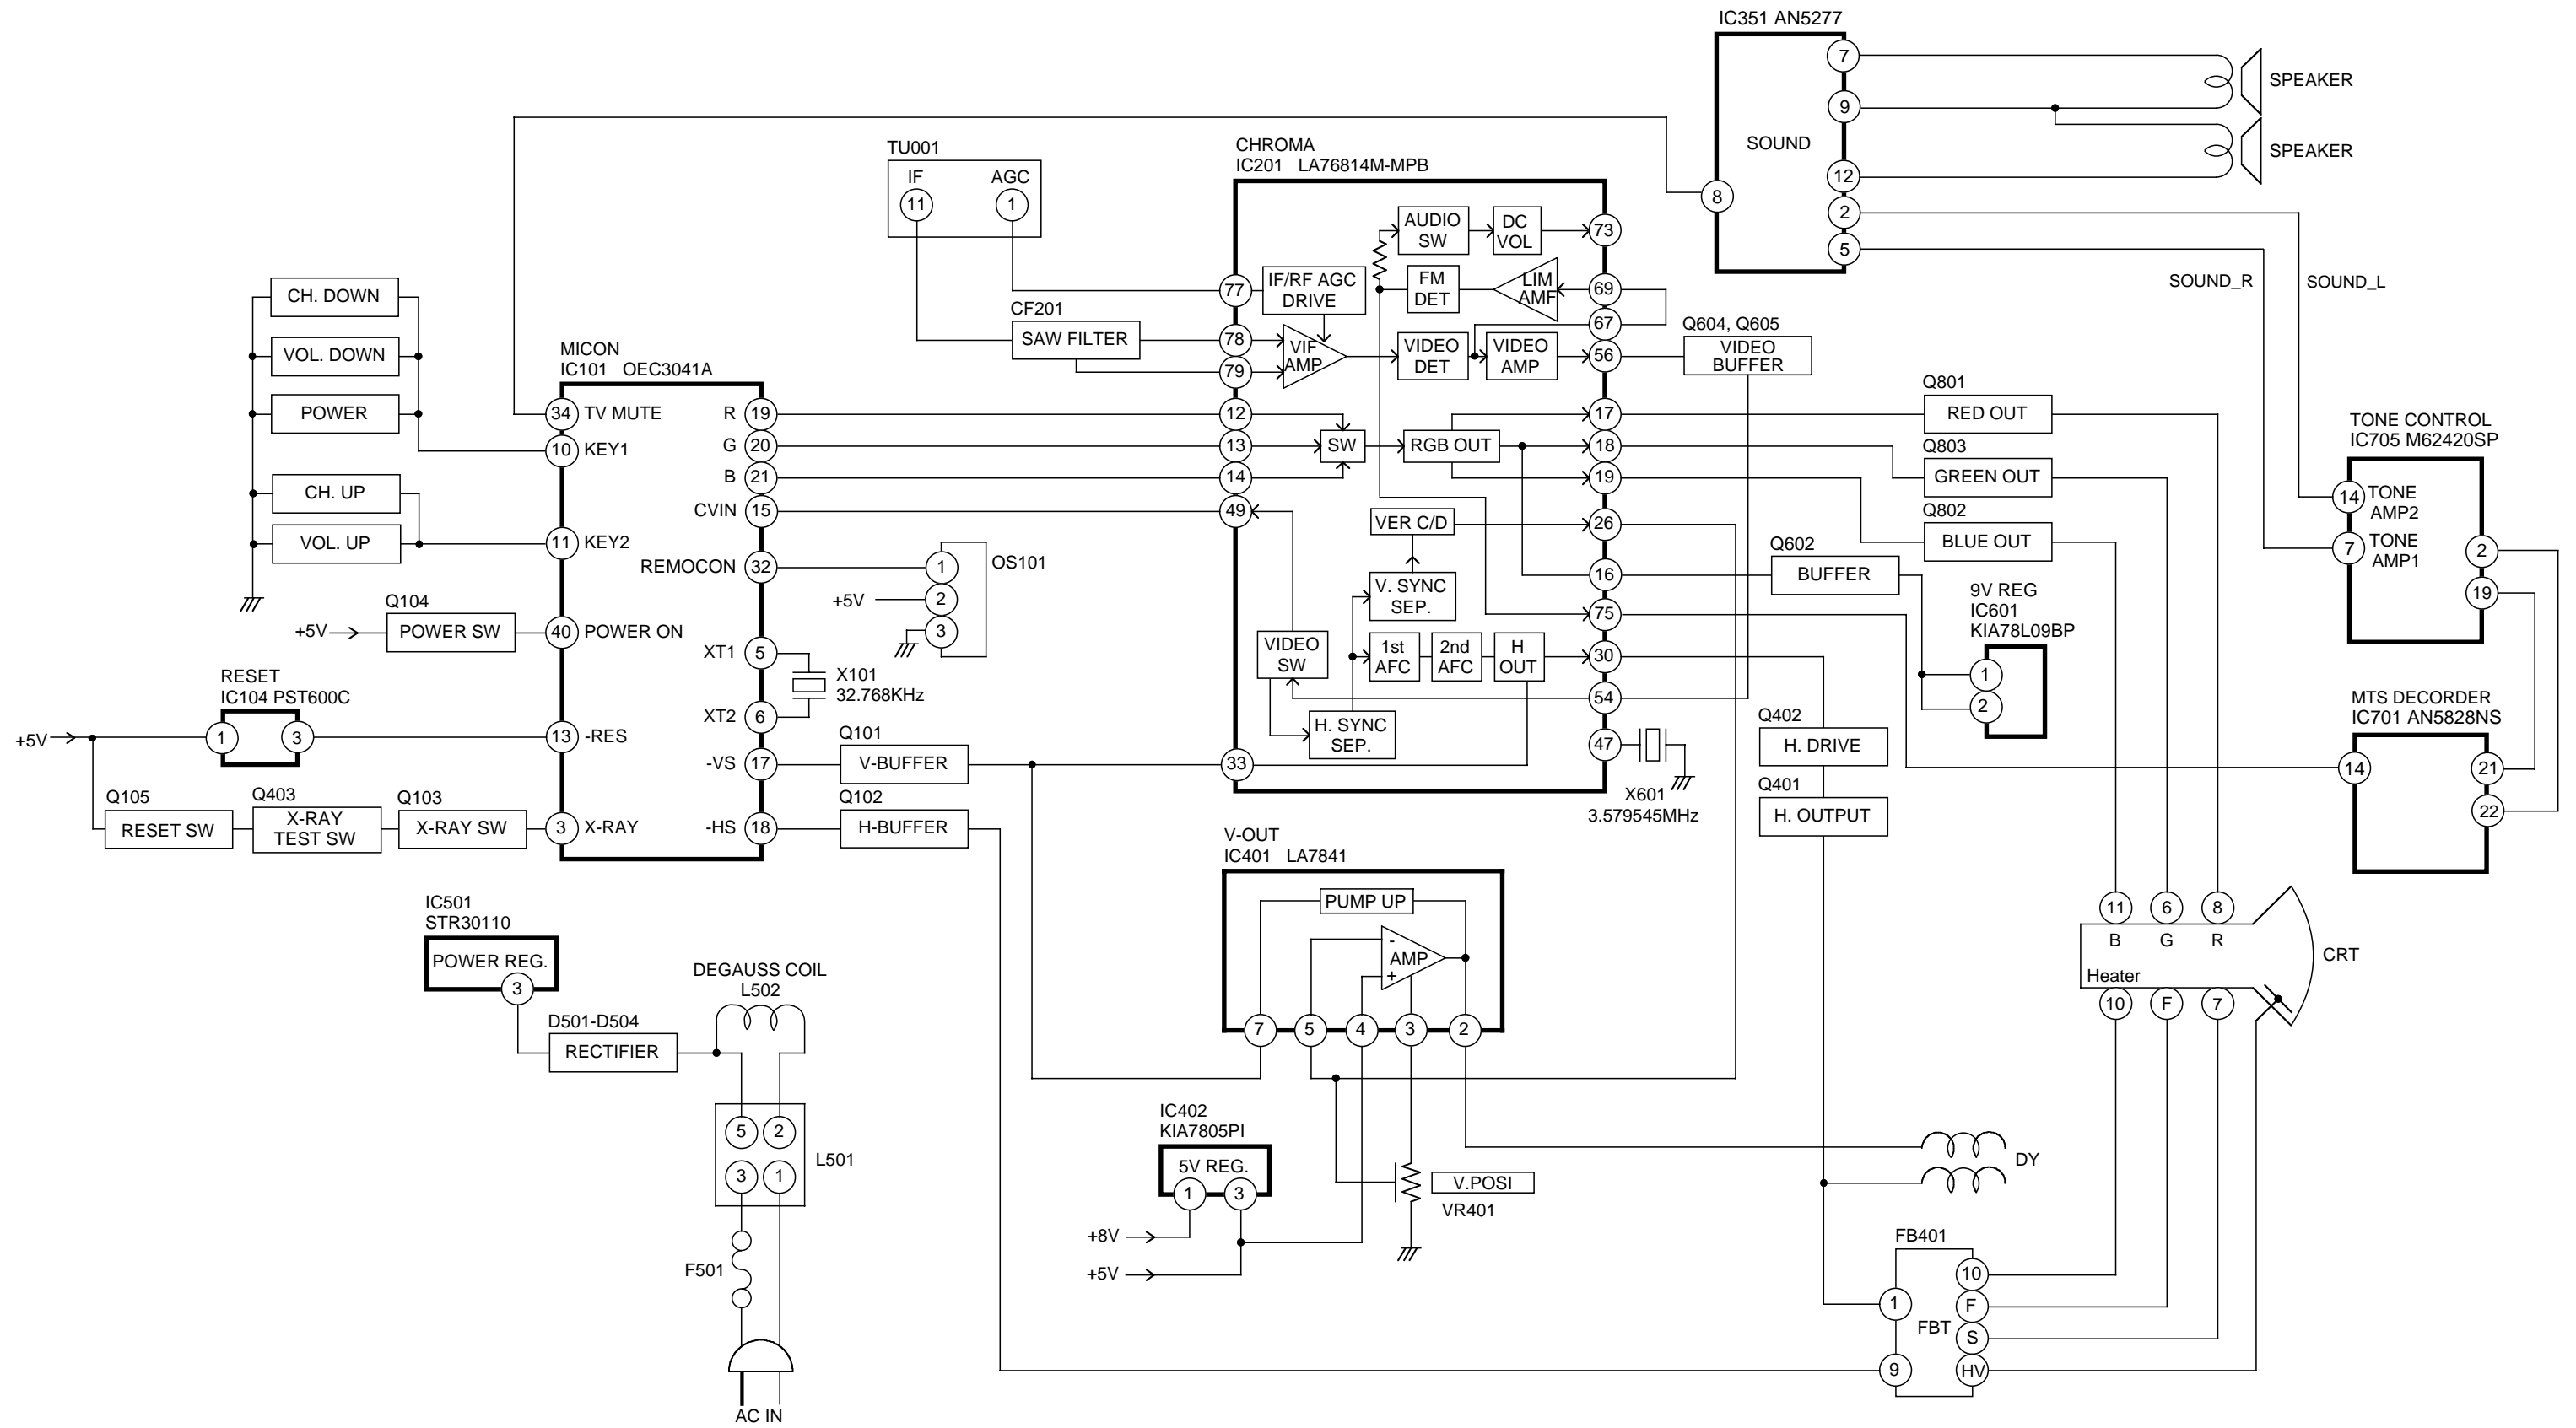


PRINTED CIRCUIT BOARDS
MAIN/CRT (INSERTED PARTS)
SOLDER SIDE

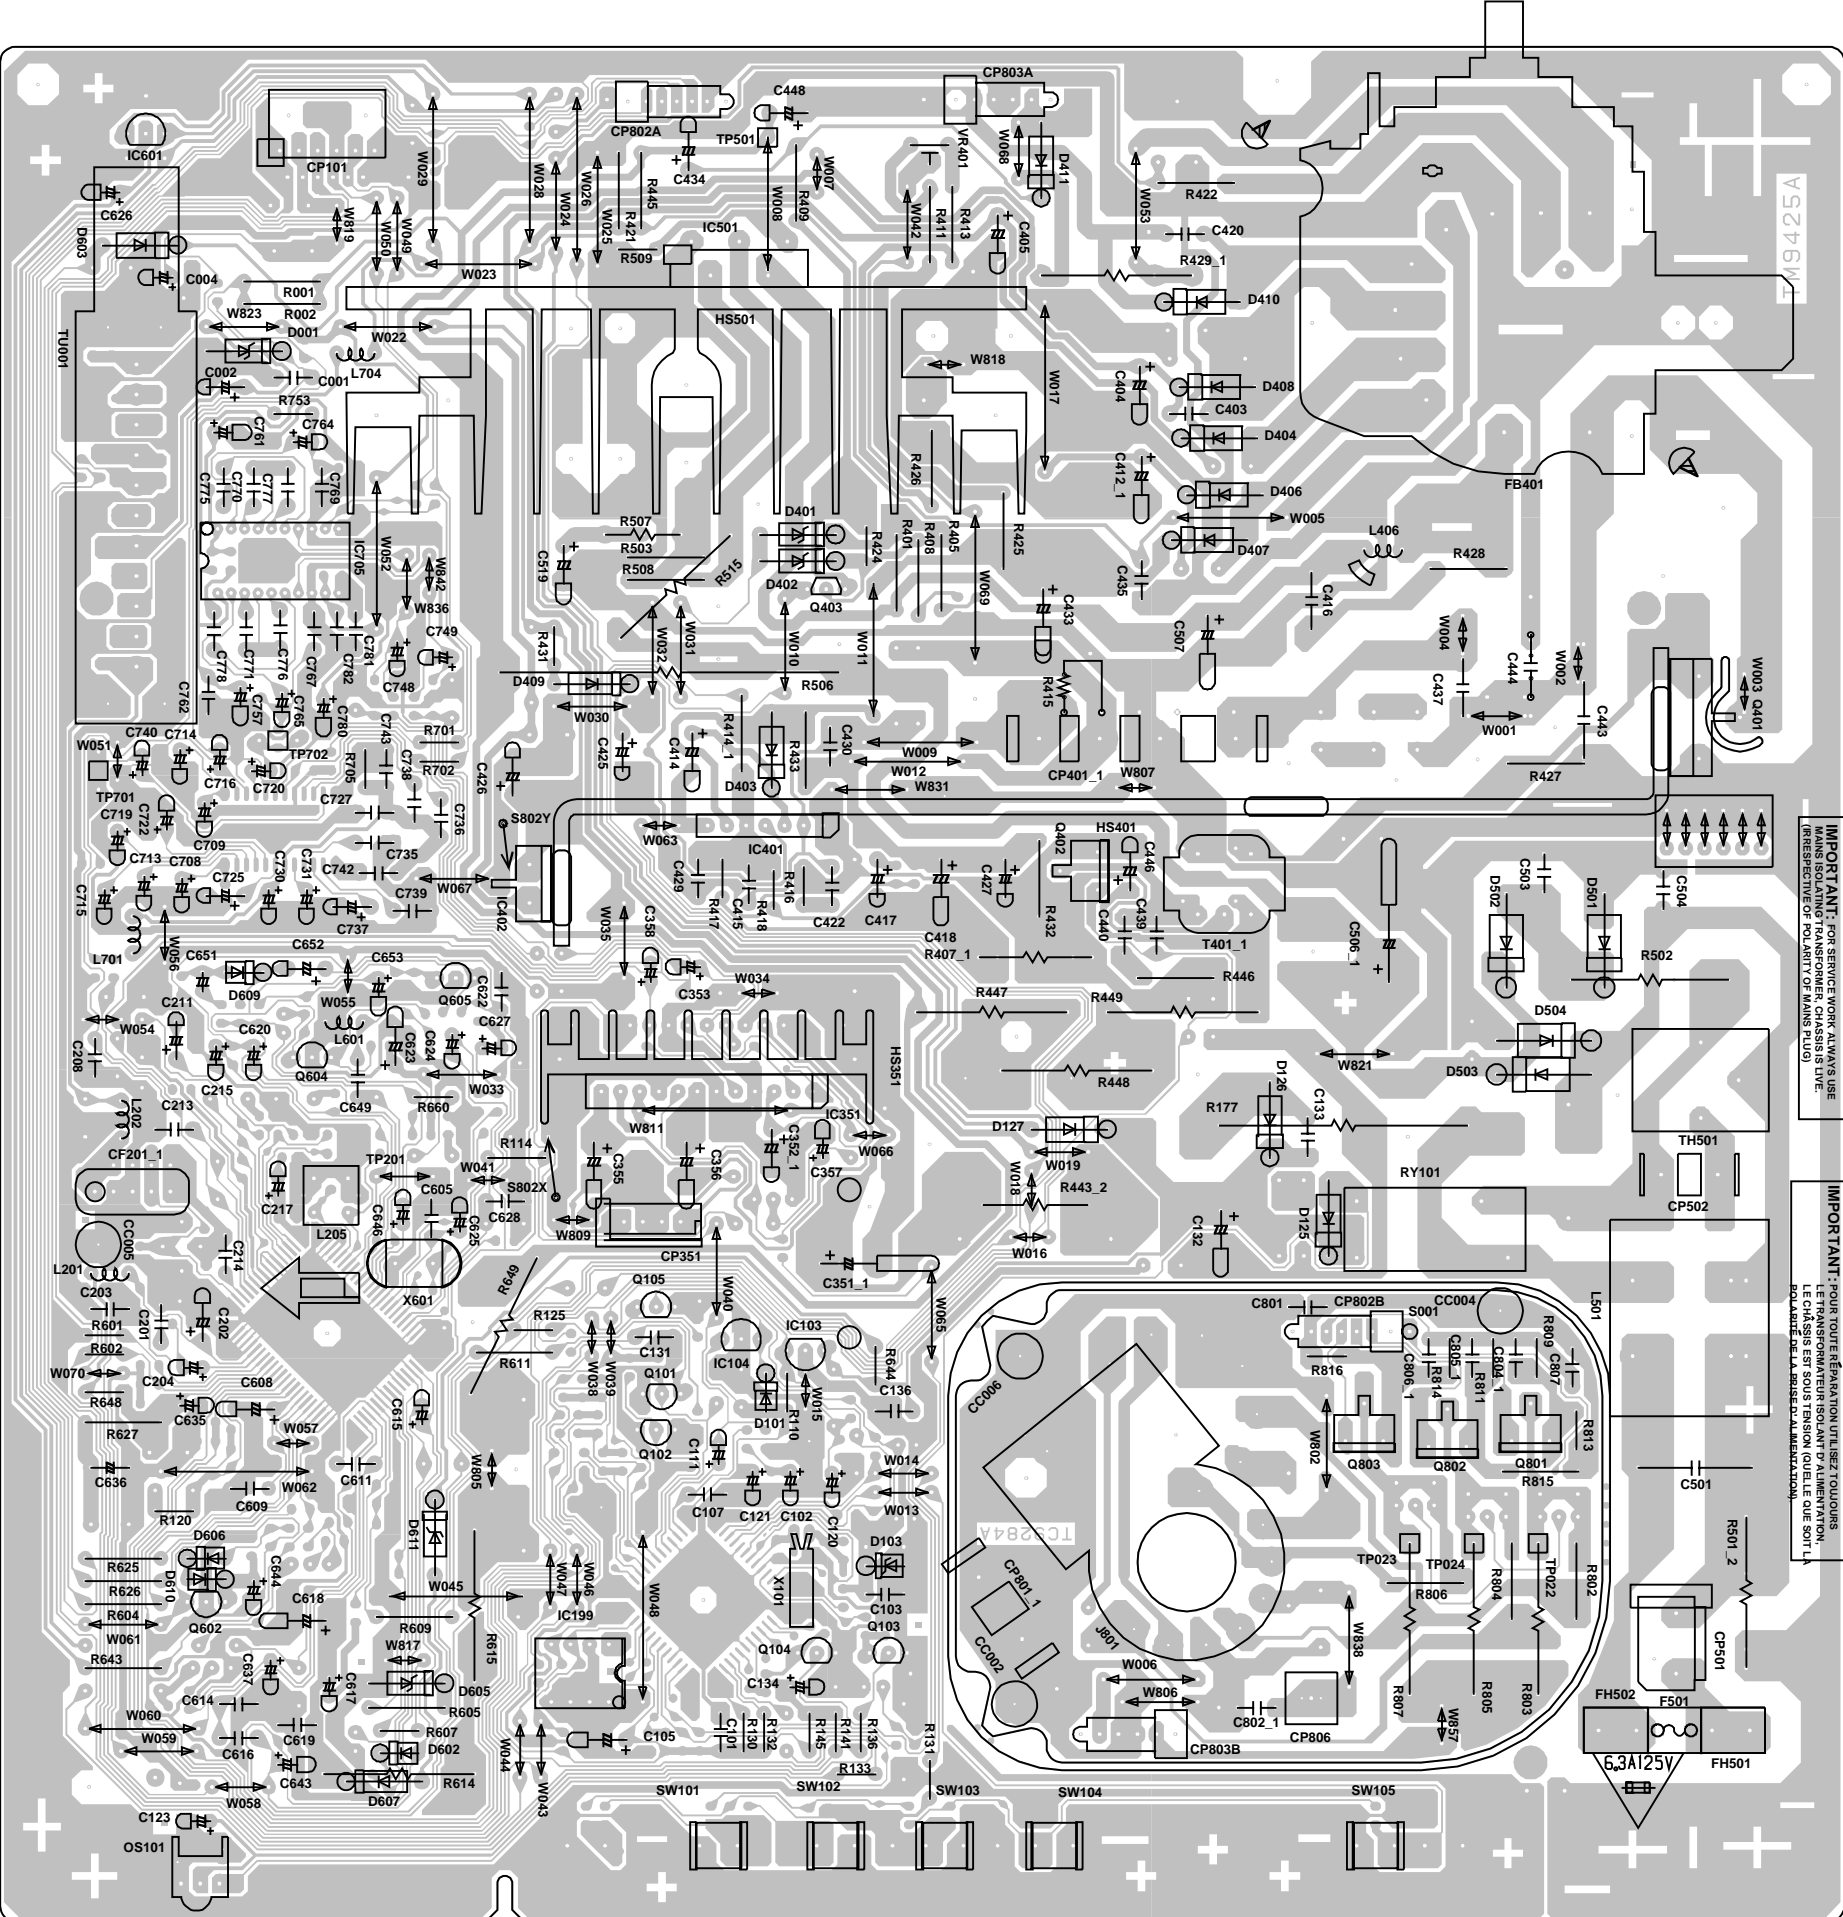

PRINTED CIRCUIT BOARDS
MAIN/CRT (CHIP MOUNTED PARTS)
SOLDER SIDE

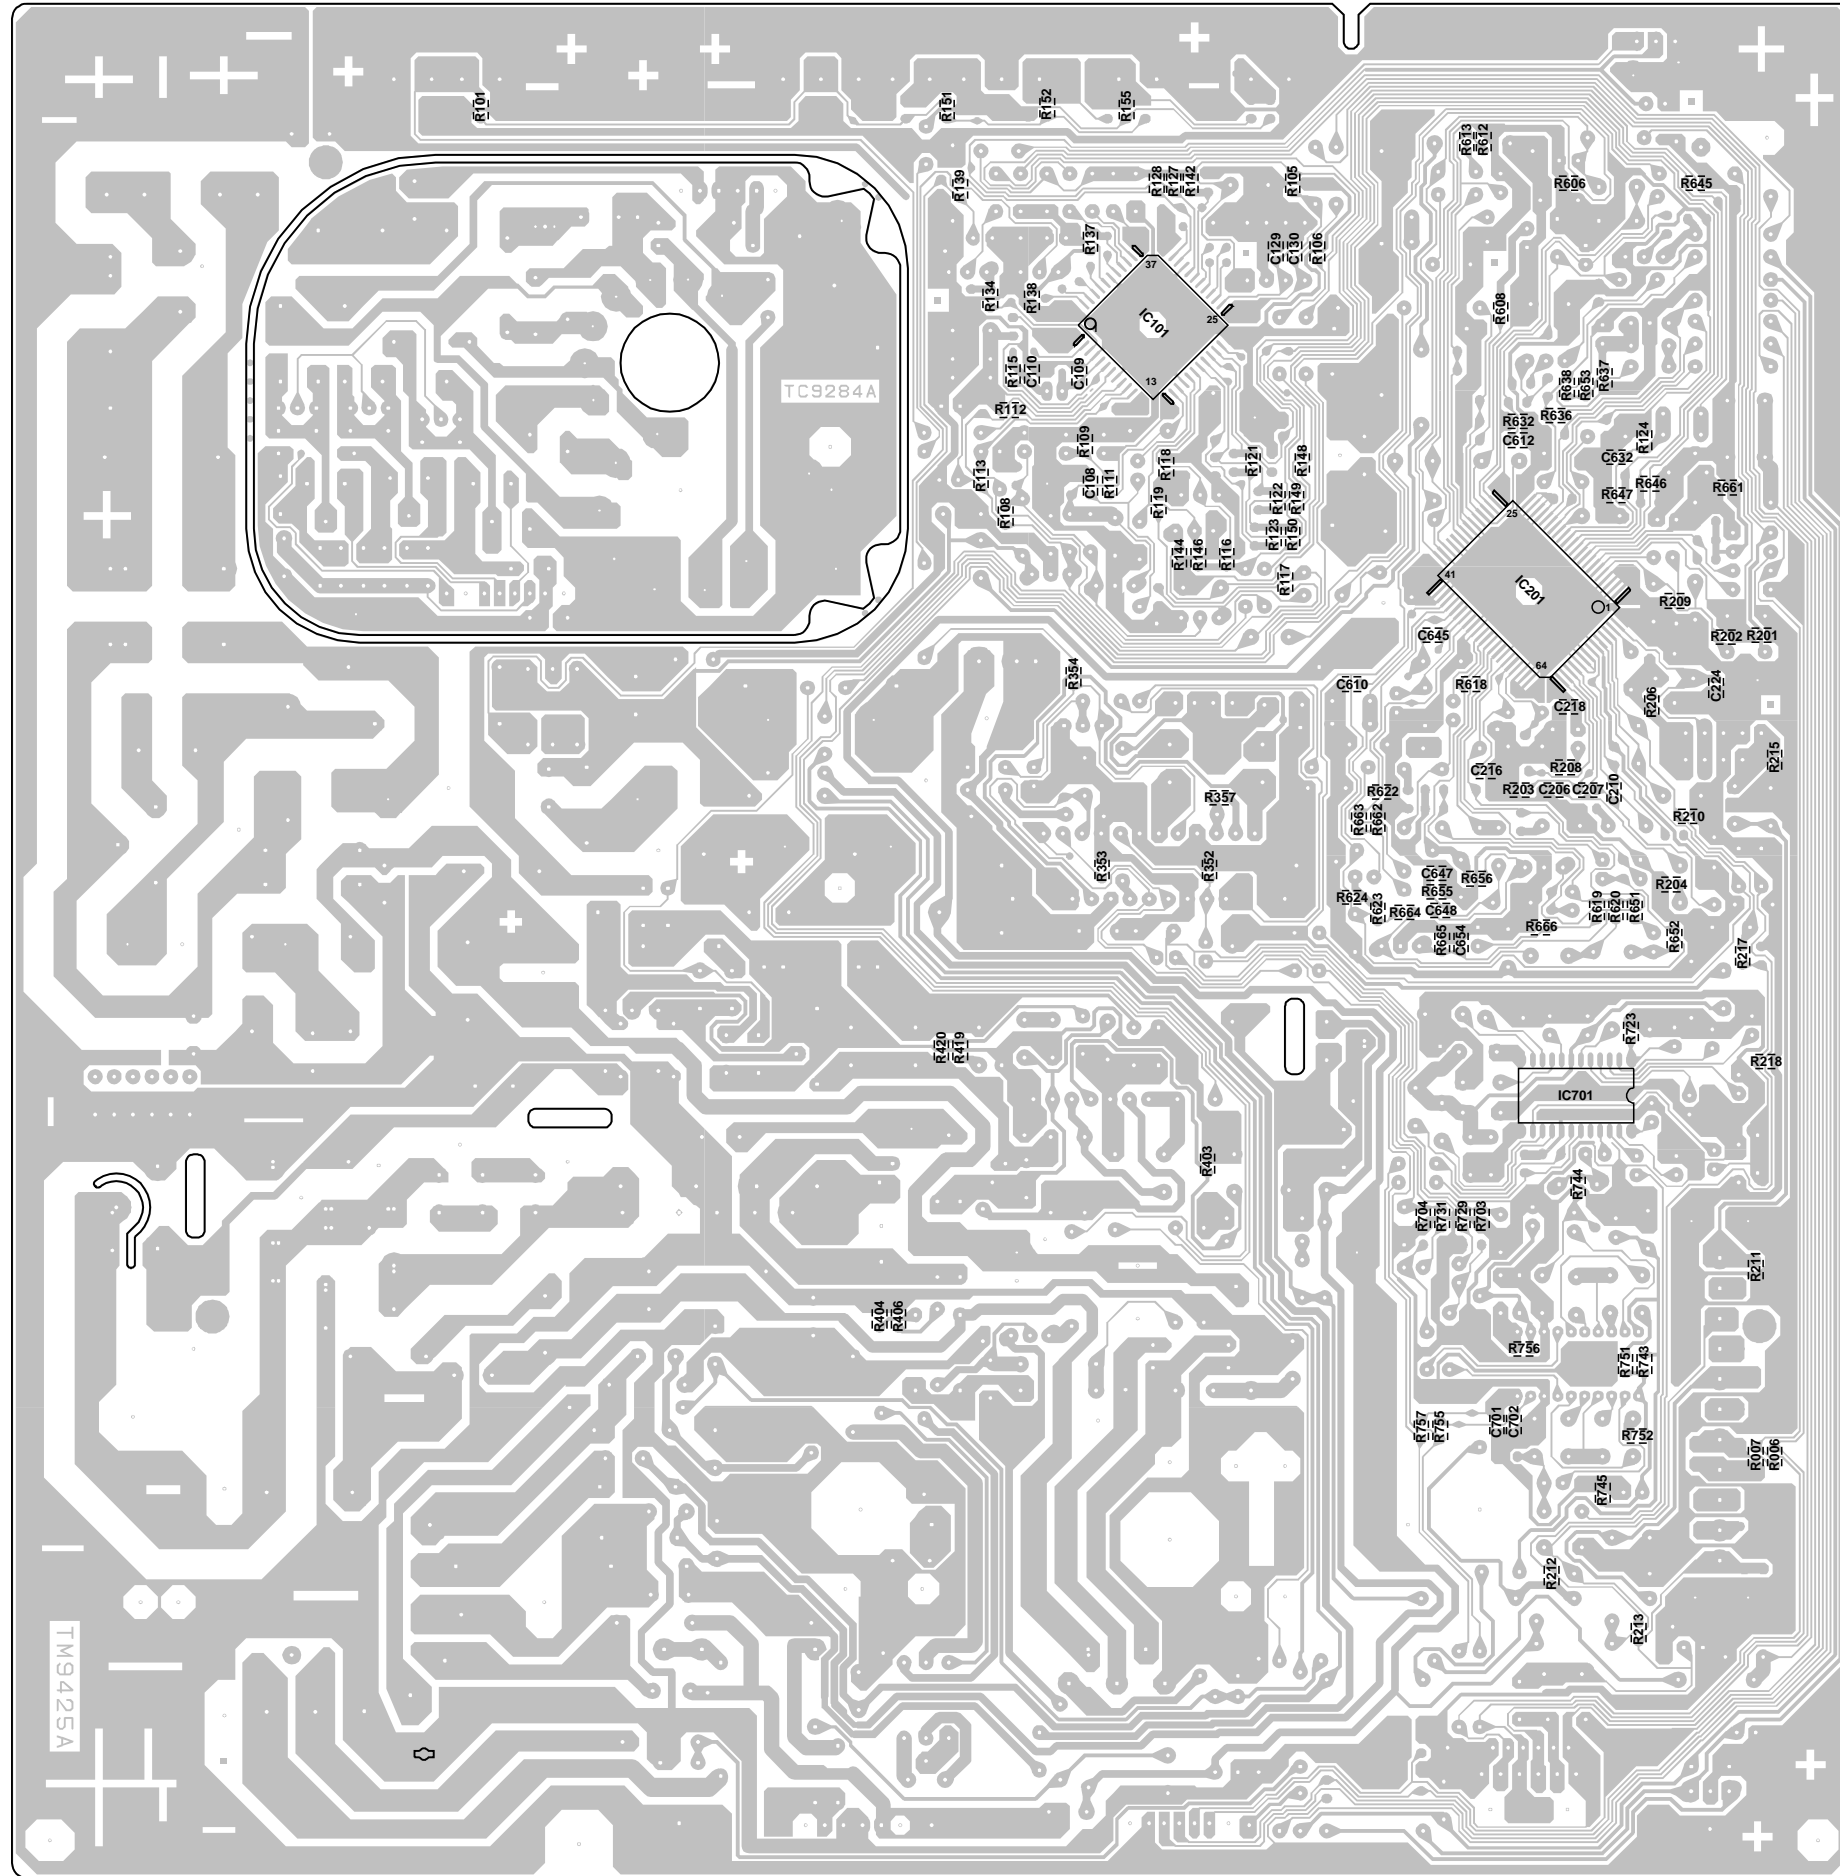

MICON/TUNER SCHEMATIC DIAGRAM

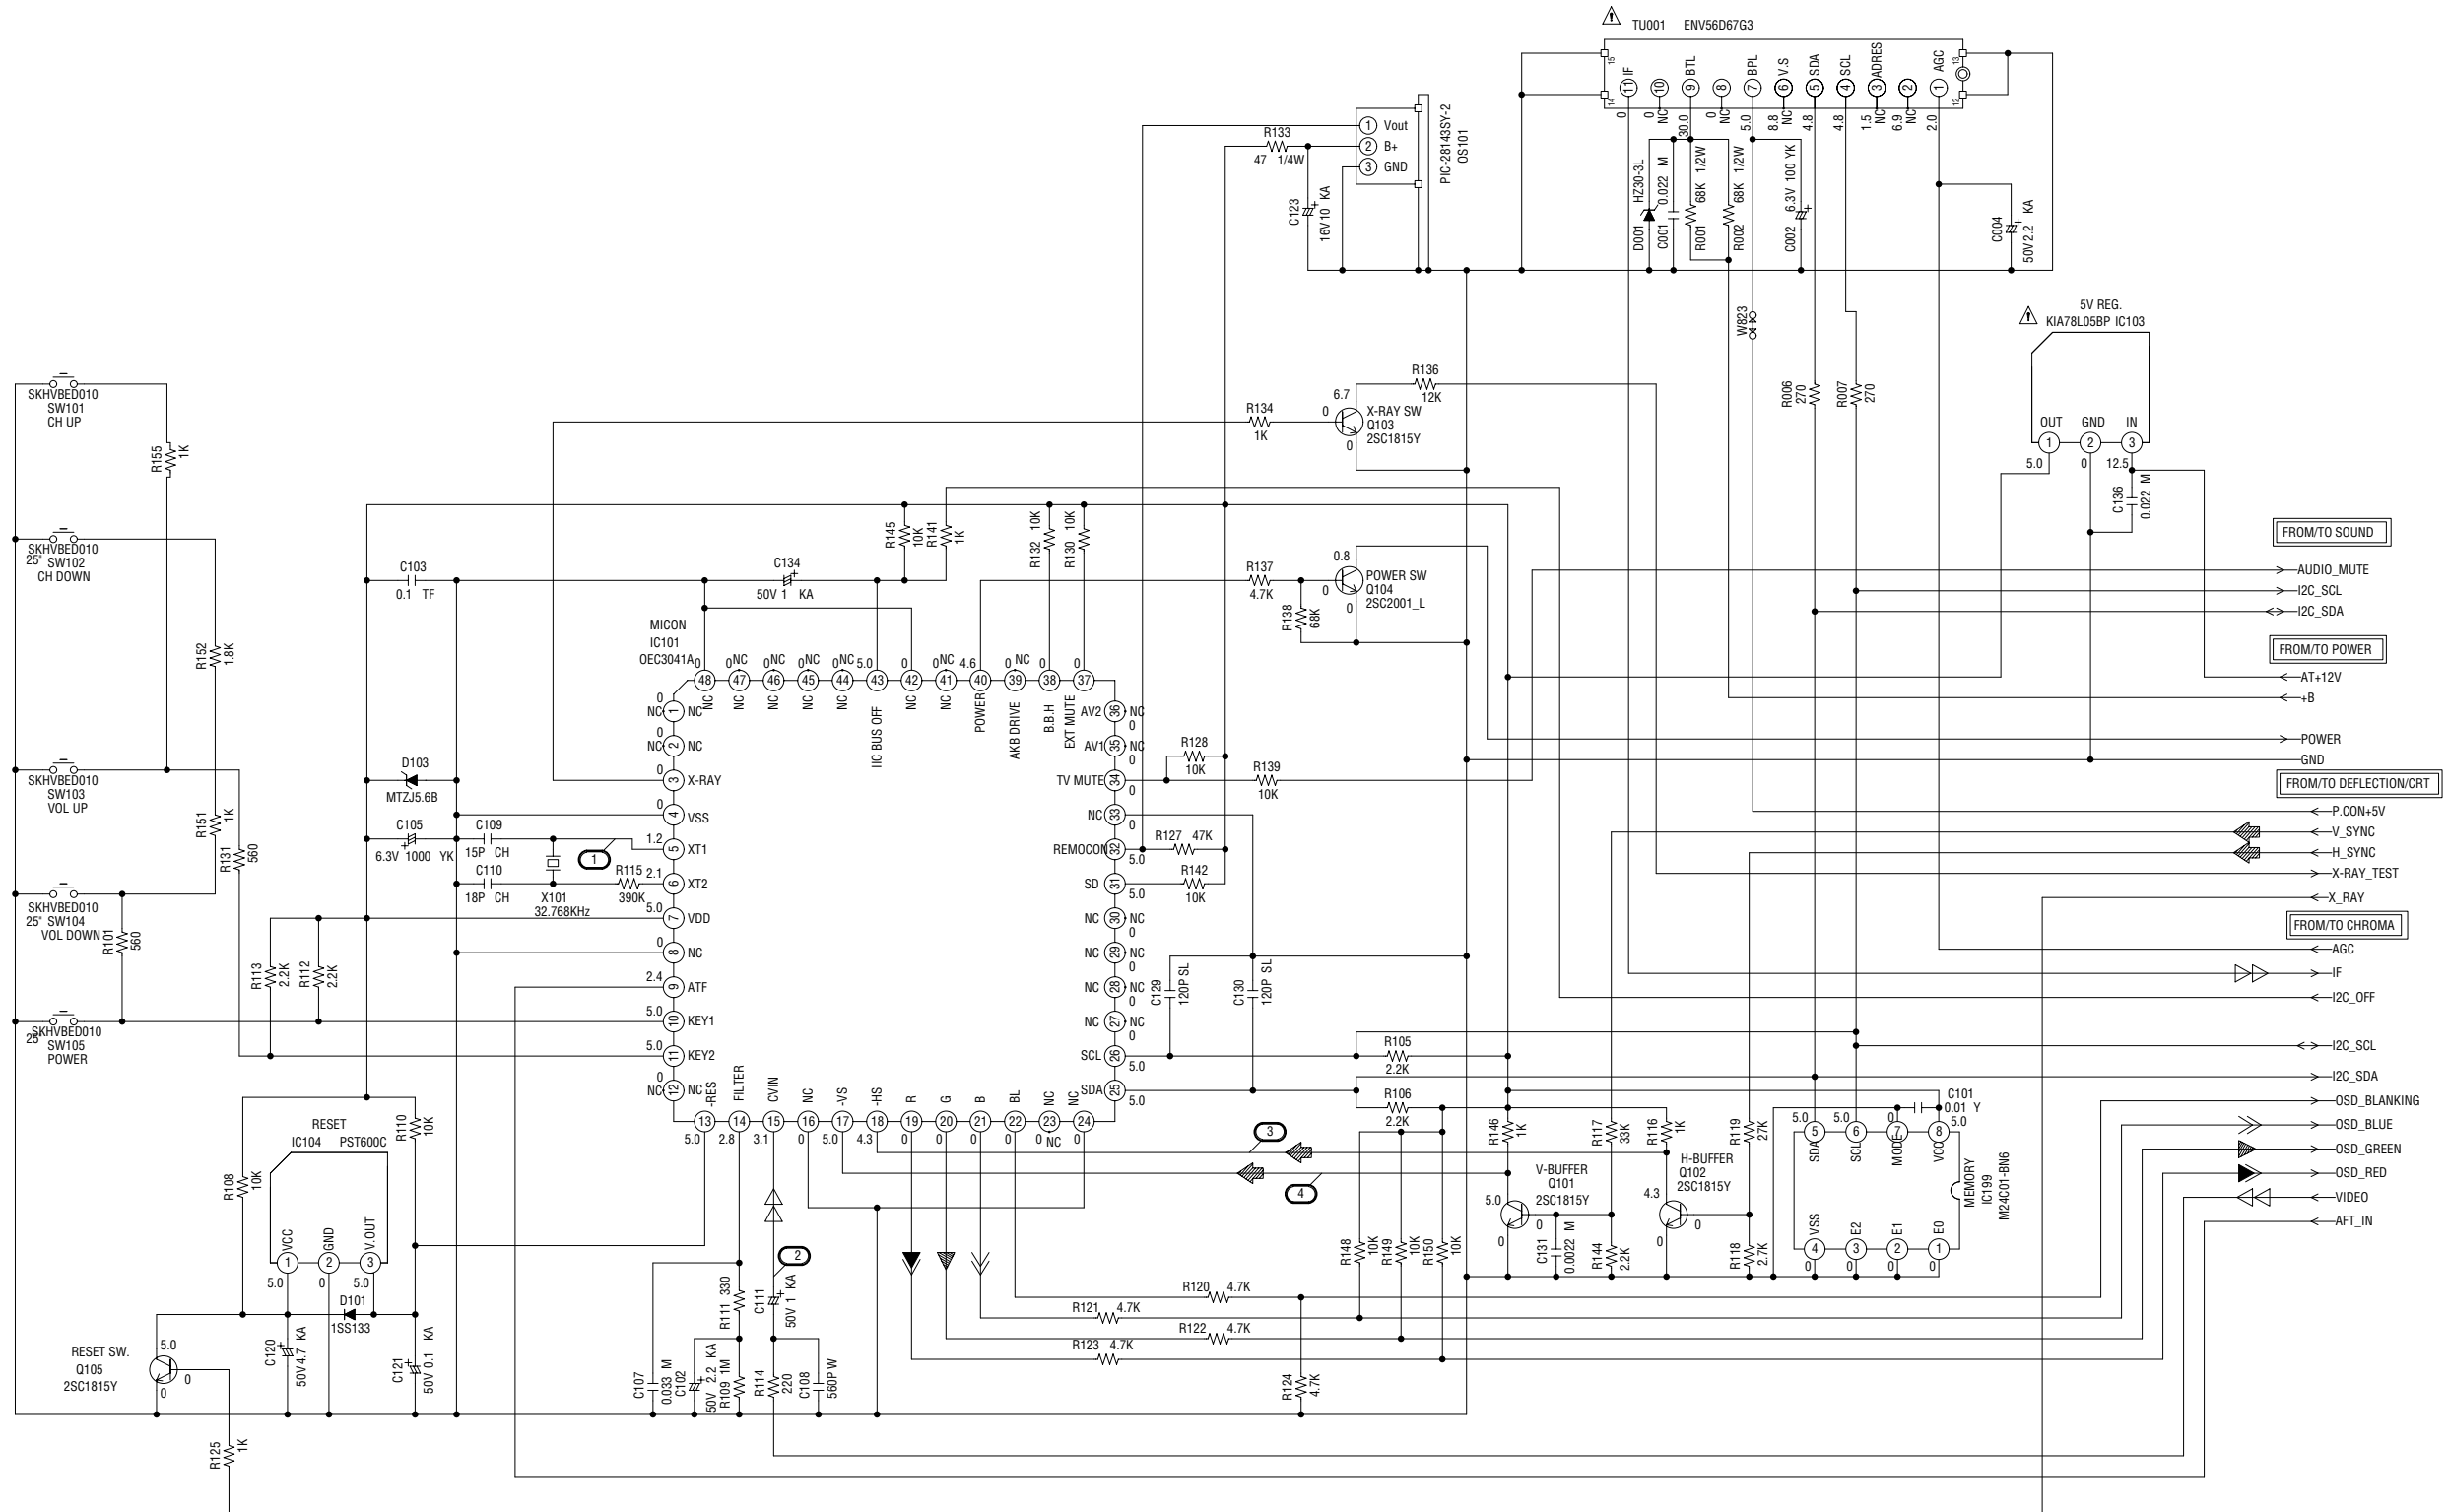

PCB010
TM9429

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

- TUNER VIDEO SIGNAL
- R.SIGNAL
- G.SIGNAL
- B.SIGNAL
- DEFLECTION SIGNAL

CHROMA SCHEMATIC DIAGRAM

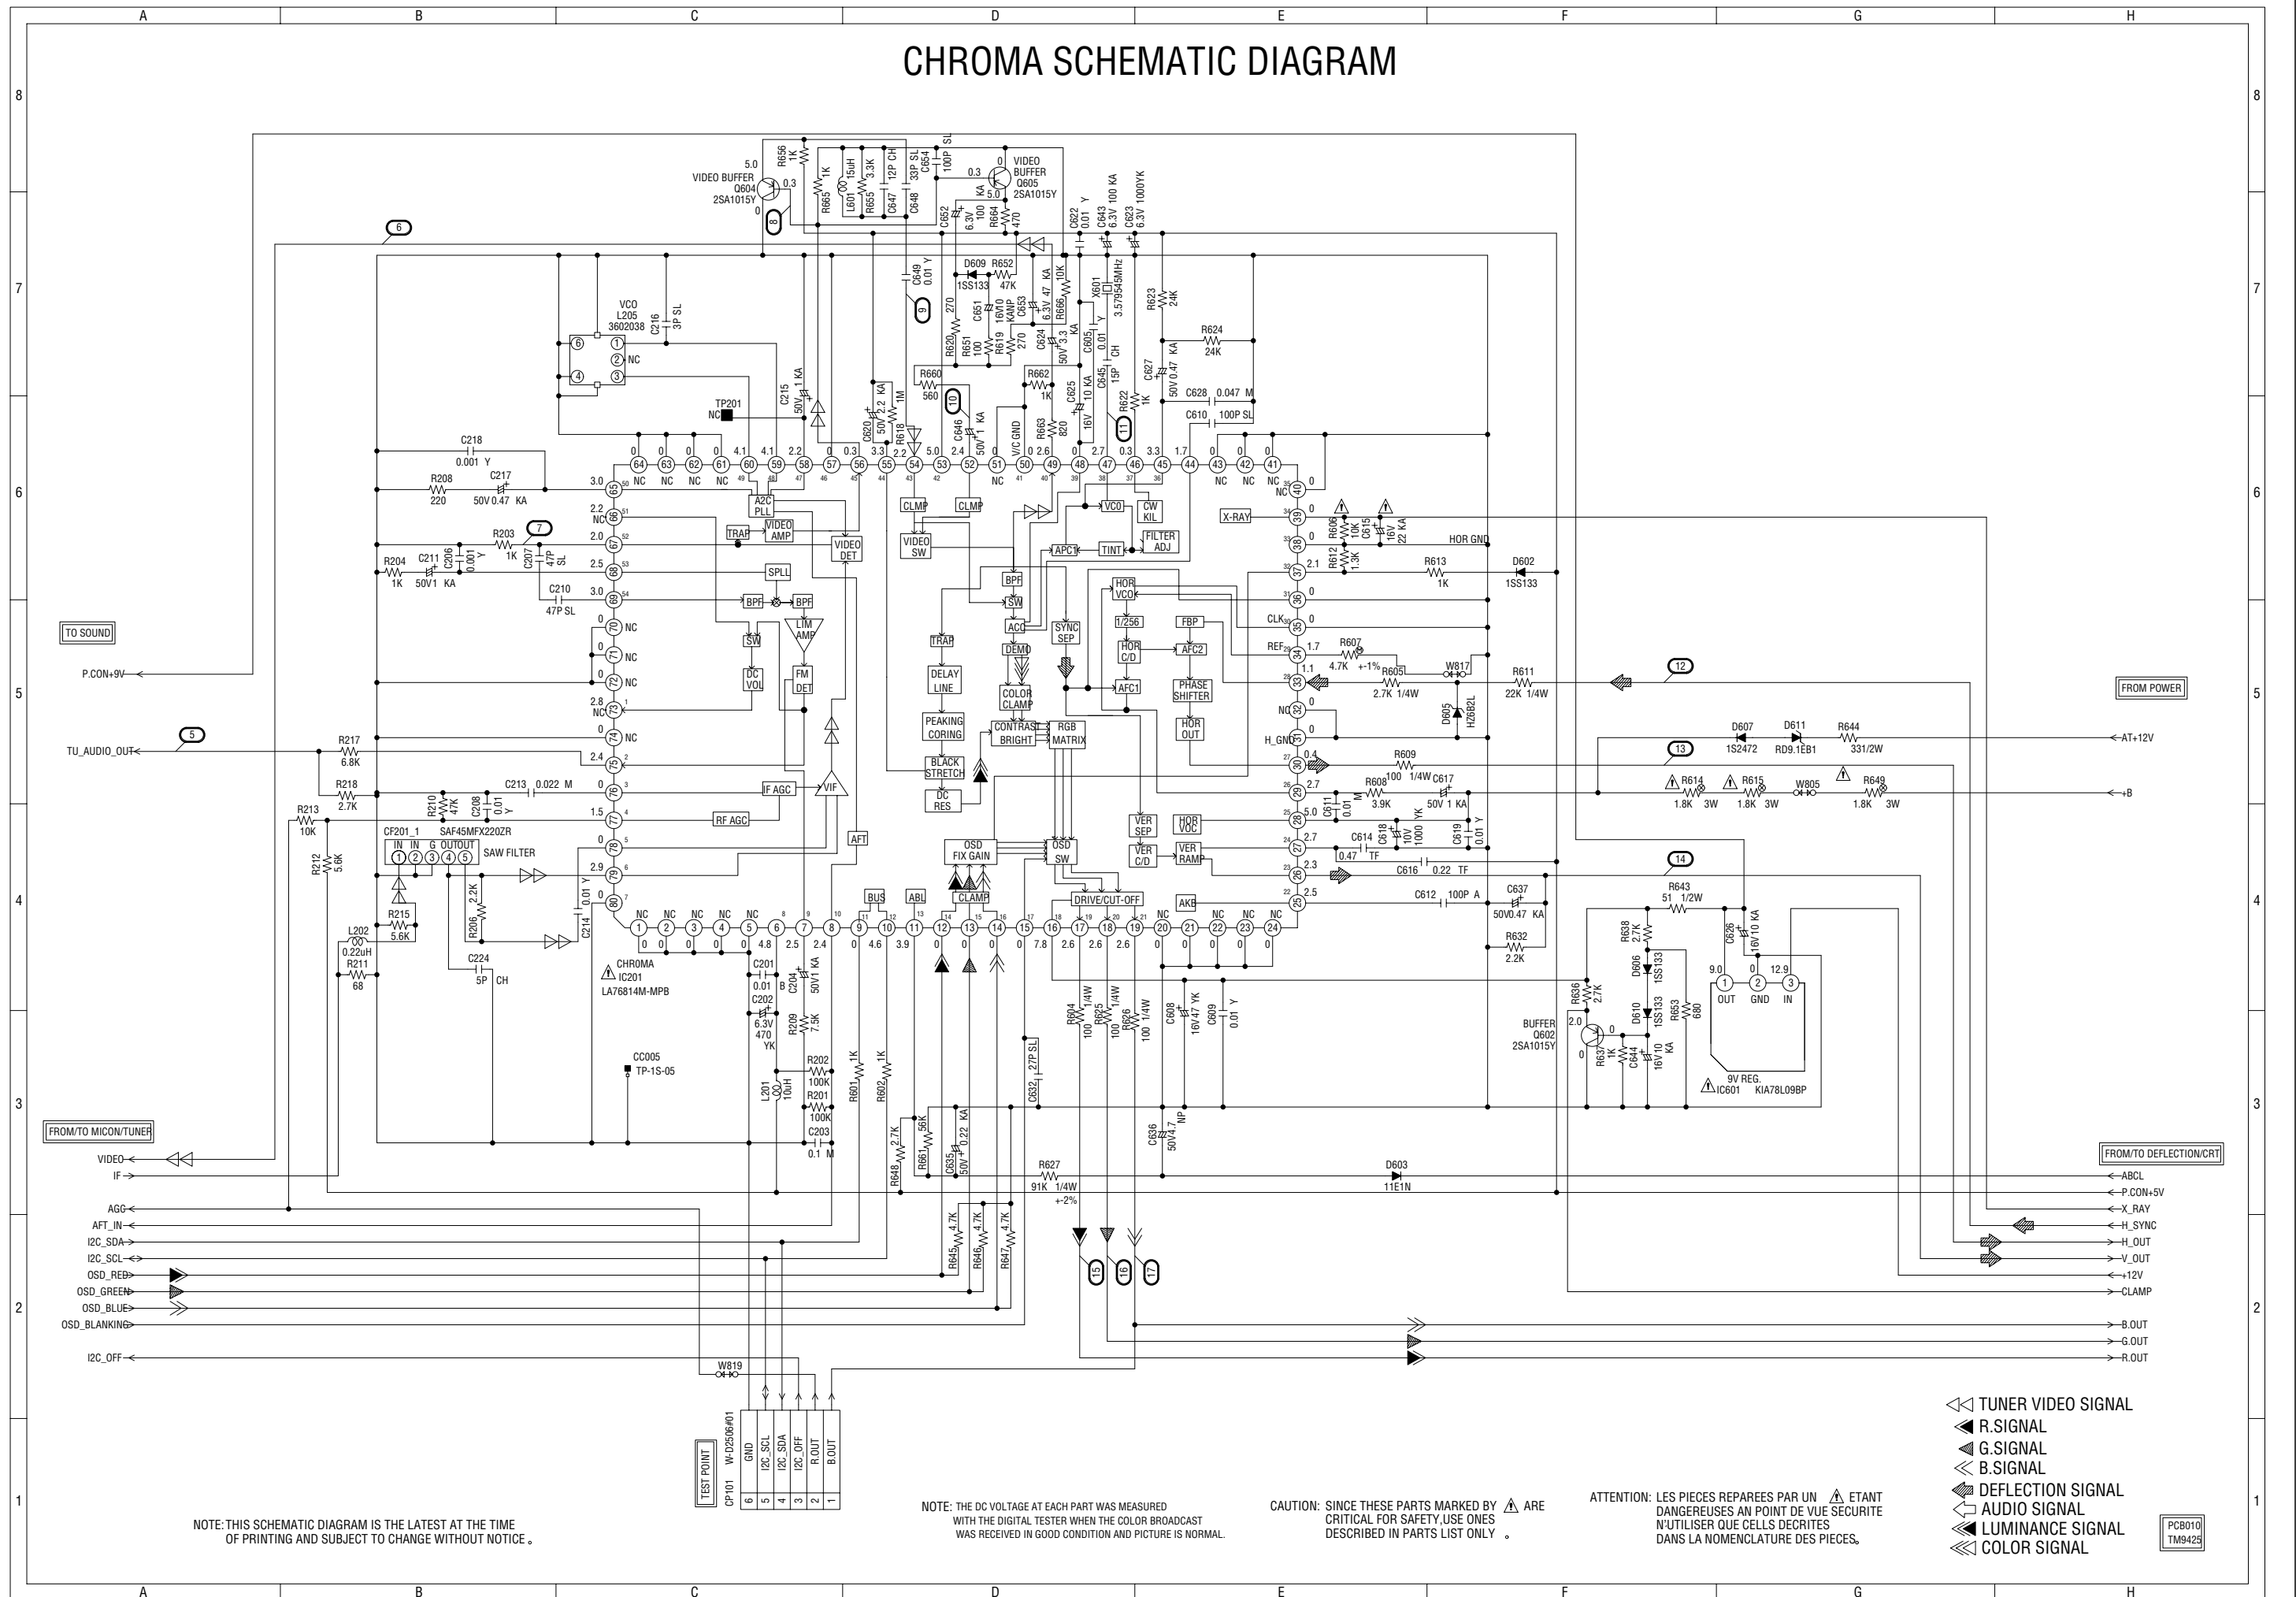

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ETANT DANGEREUSES AU POINT DE VUE SECURITE N'UTILISER QUE CELLES DECRITES DANS LA NOMENCLATURE DES PIECES.

- TUNER VIDEO SIGNAL
- R SIGNAL
- G SIGNAL
- B SIGNAL
- DEFLECTION SIGNAL
- AUDIO SIGNAL
- LUMINANCE SIGNAL
- COLOR SIGNAL

PCB010
TM9423

DEFLECTION/CRT SCHEMATIC DIAGRAM

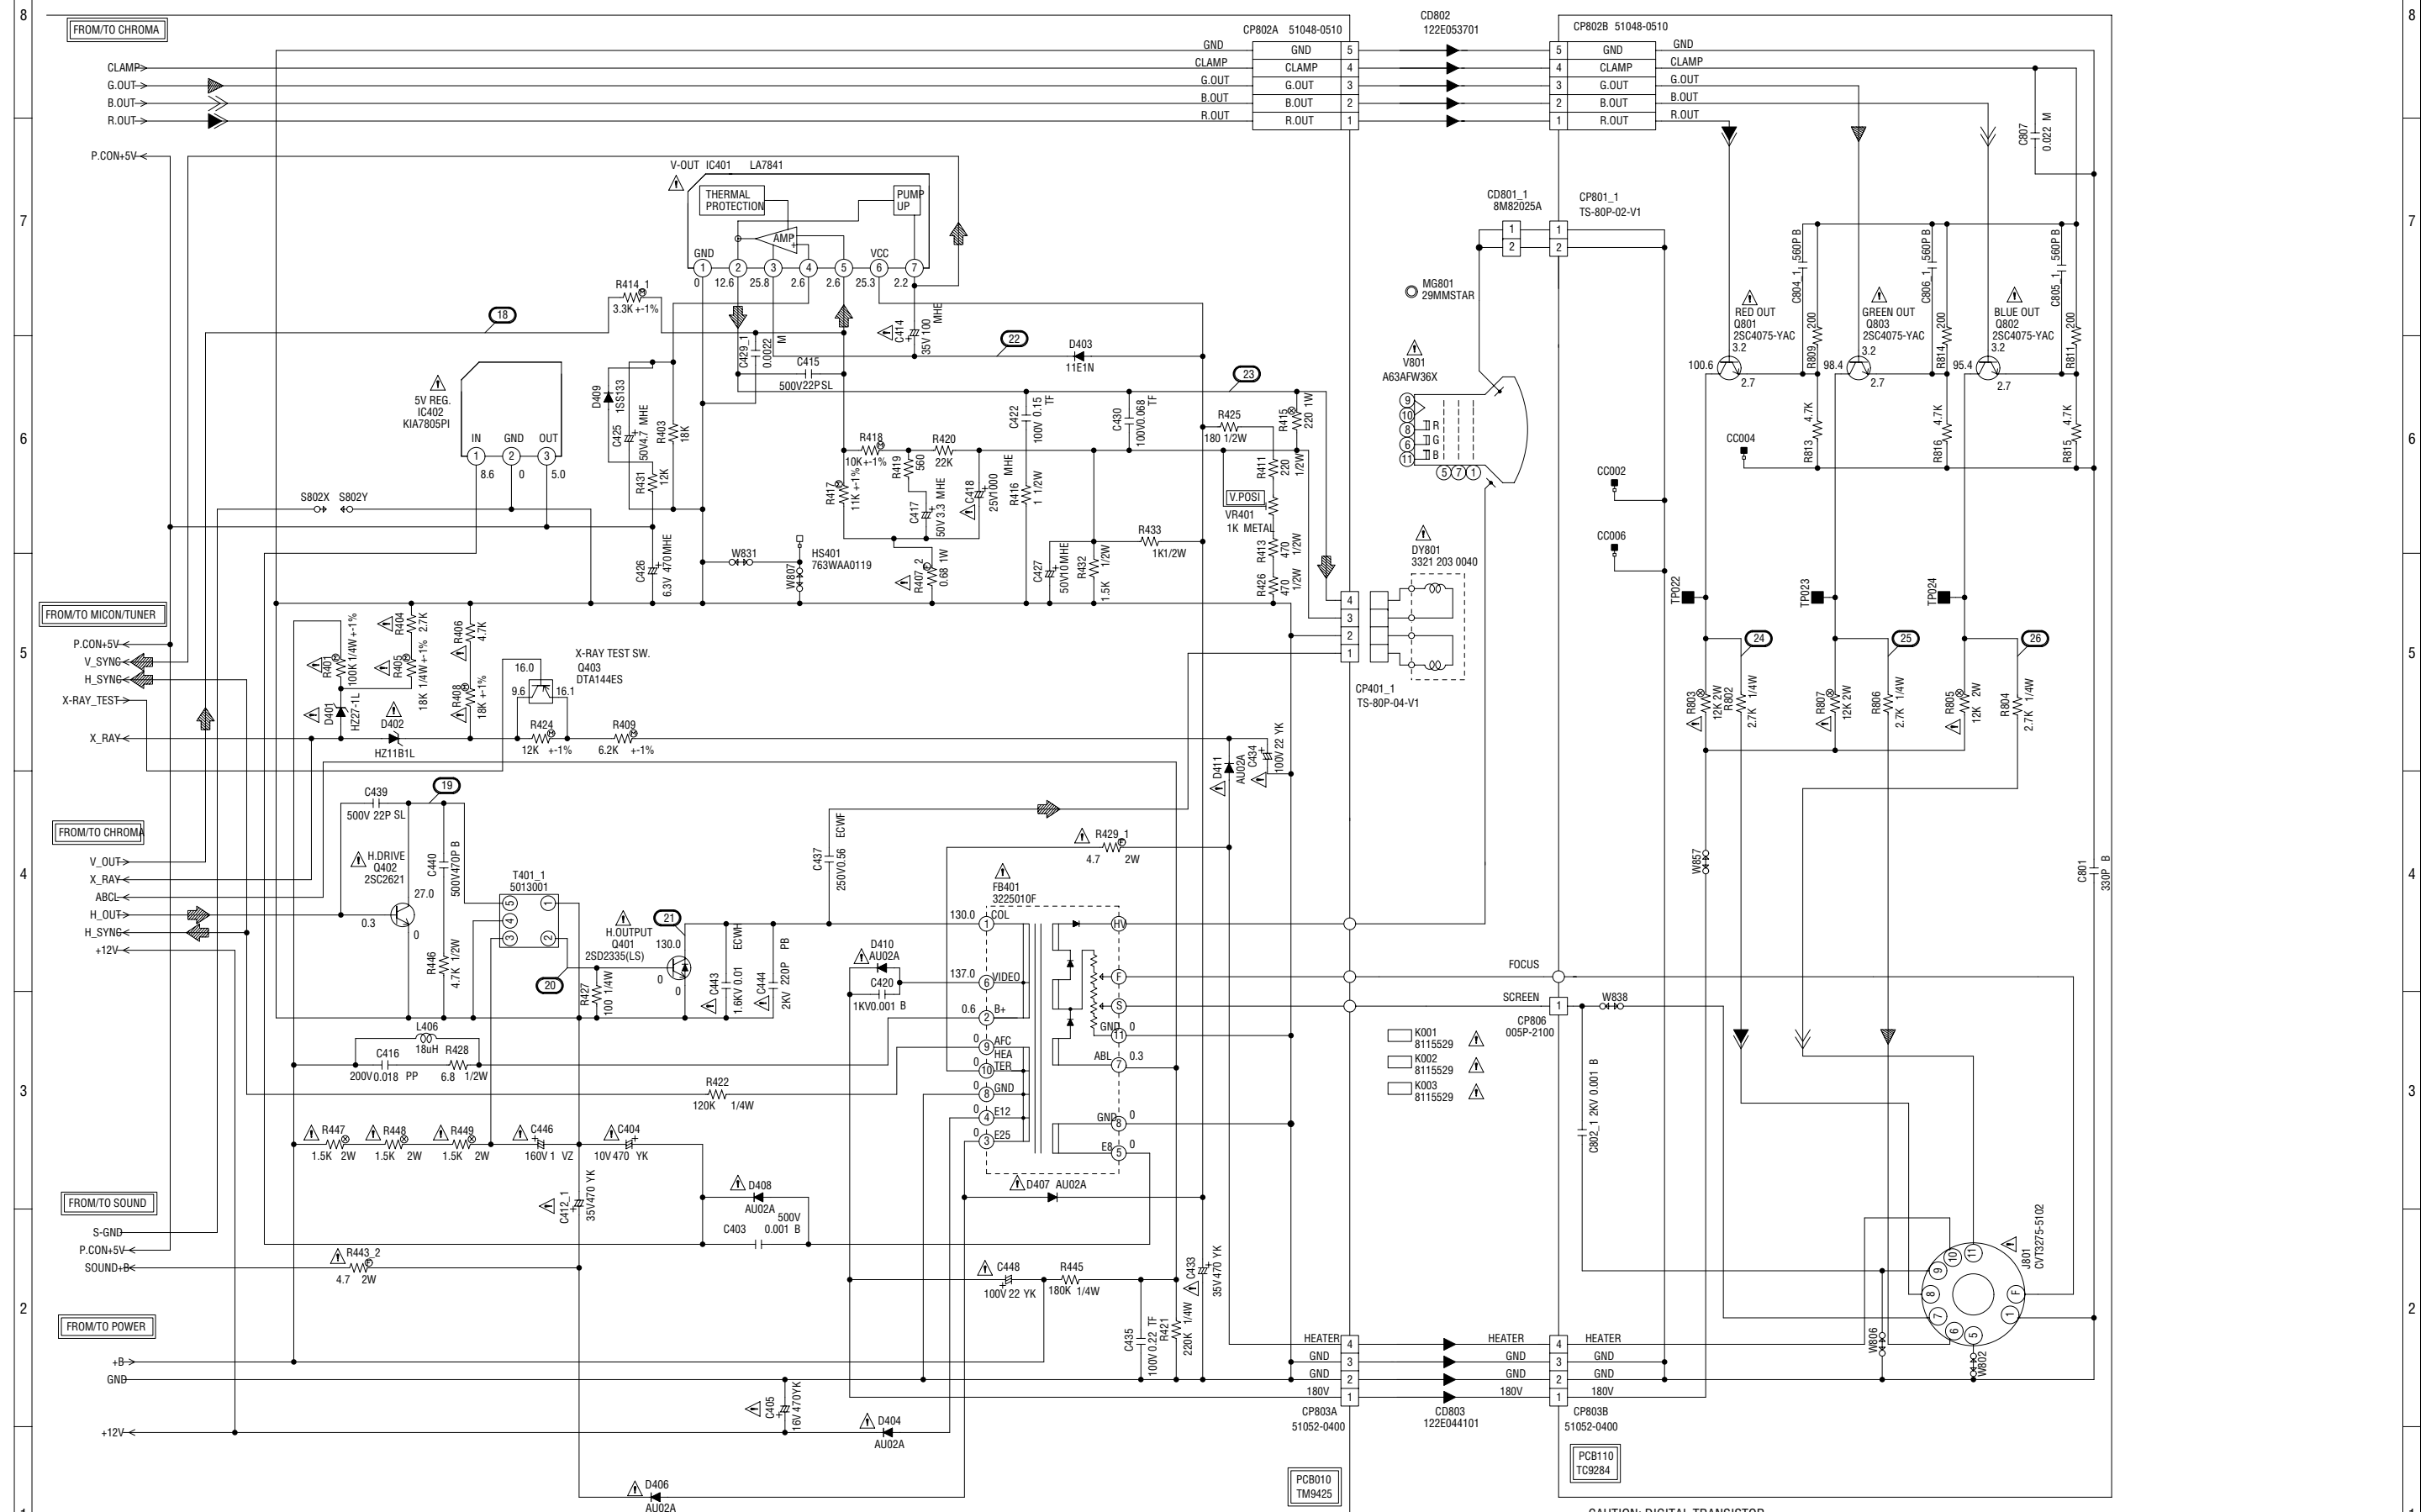

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: SINCE THESE PARTS MARKED BY Δ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN Δ ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.


CAUTION: DIGITAL TRANSISTOR

- \blacktriangleleft R.SIGNAL
- \blacktriangle G.SIGNAL
- \blacktriangleright B.SIGNAL
- \blacktriangleright DEFLECTION SIGNAL

POWER SCHEMATIC DIAGRAM



CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE 6.3A 125V (F501)
FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES
D'INCEIE N'UTILISER QUE DES FUSIBLES DE MEME
TYPE 6.3A 125V (F501).

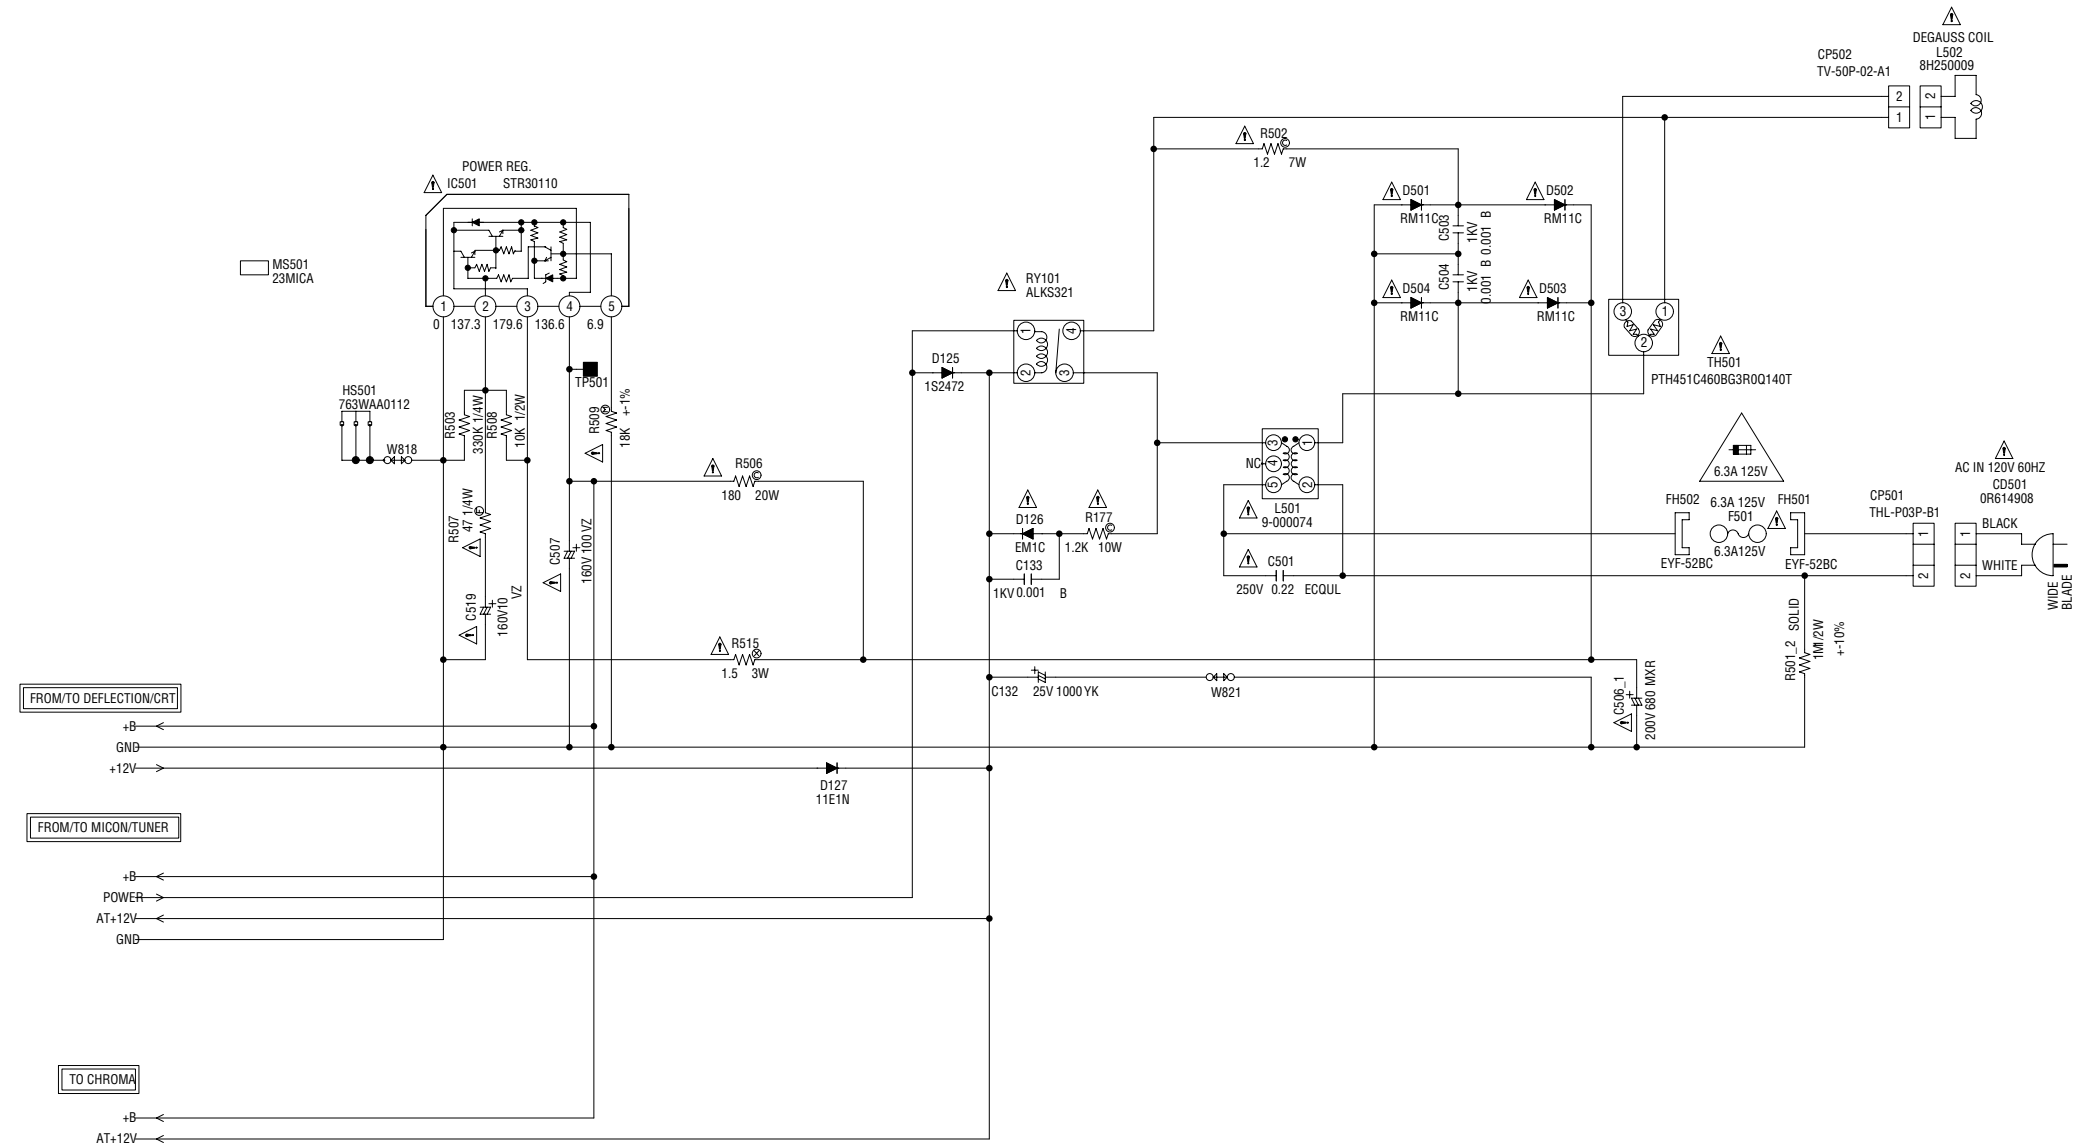

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

PC8010
TM9425

SOUND SCHEMATIC DIAGRAM

FROM MICON/TUNER


I2C_SDA
I2C_SCL
AUDIO_MUTE

FROM CHROMA

P.CON+9V
TU_AUDIO_OUT

FROM/TO DEFLECTION/CRT

P.CON+5V
SOUND-B
S-GND

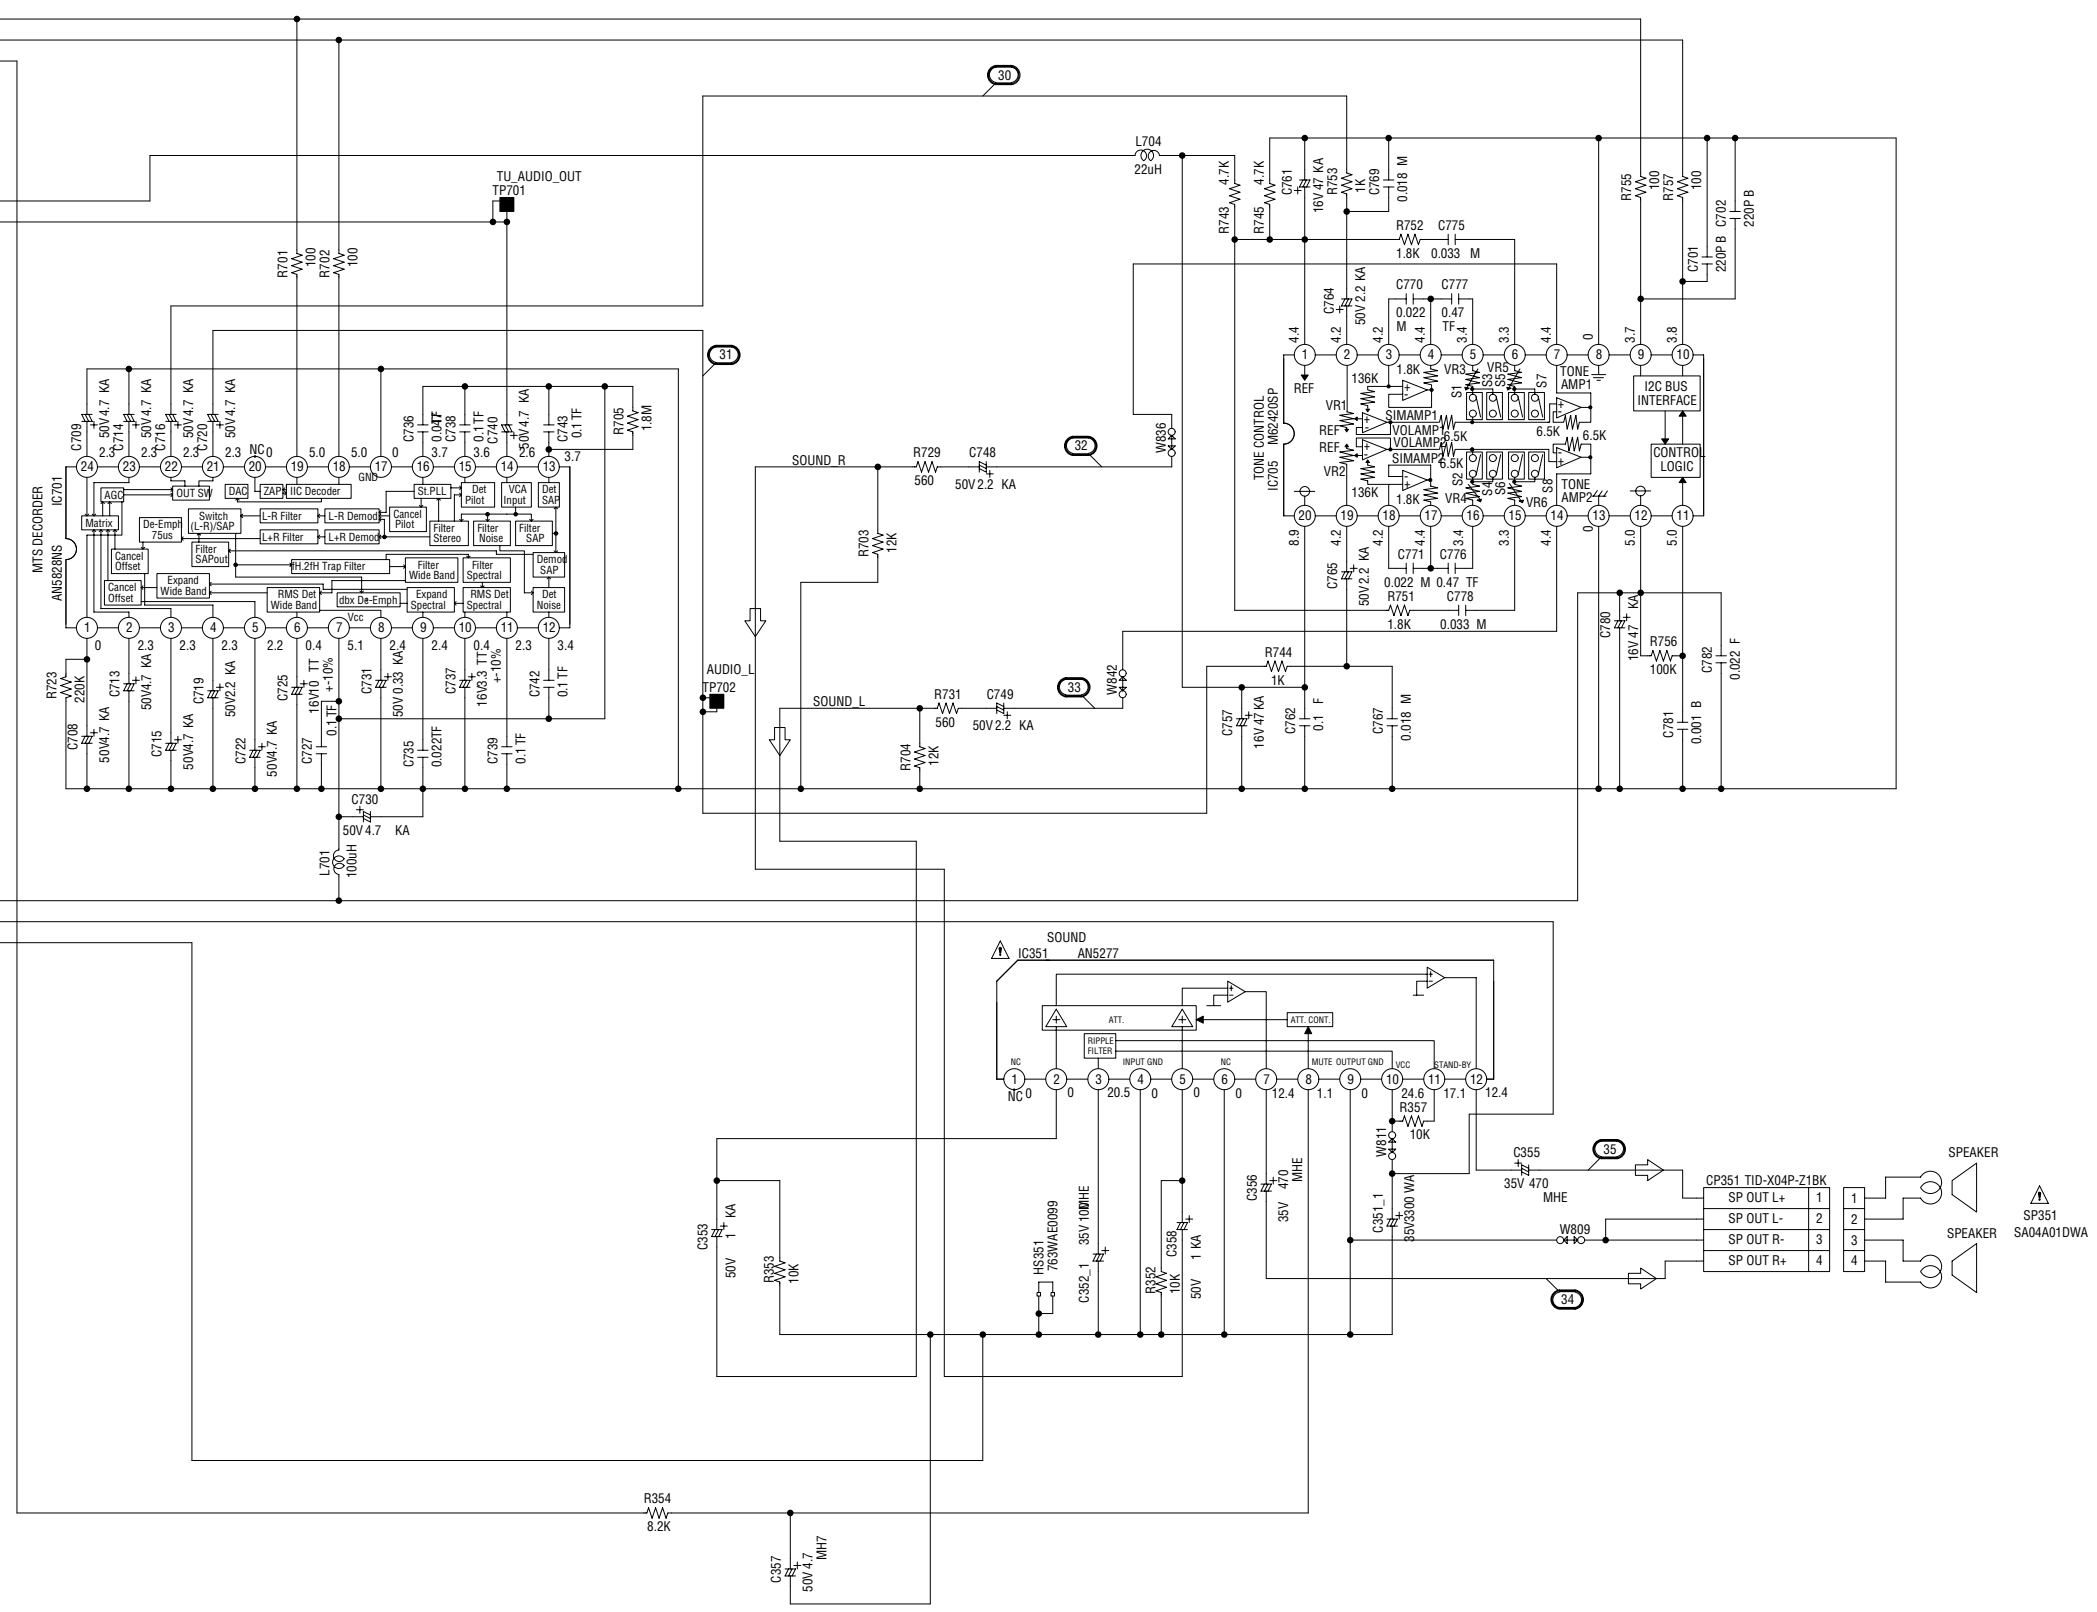

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.


ATTENTION: LES PIÈCES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLES DECRITES DANS LA NOMENCLATURE DES PIÈCES.

← AUDIO SIGNAL


PCB010
TM9425

WAVEFORMS


MICON/TUNER

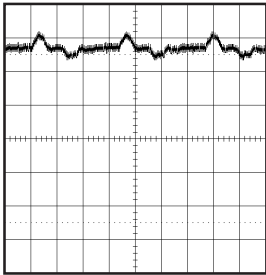


① 200mV 5ms/div

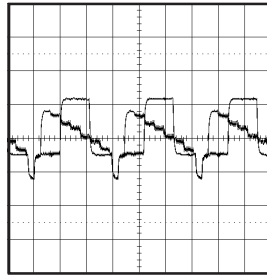


⑥ 0.5V 20μs/div

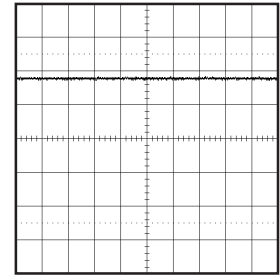


⑪ 1V 0.5ms/div

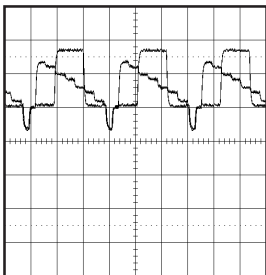


② 0.5V 20μs/div

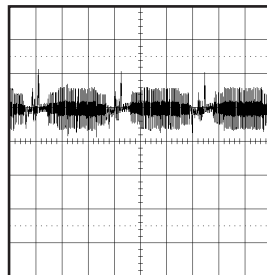


⑦ 0.5V 20μs/div

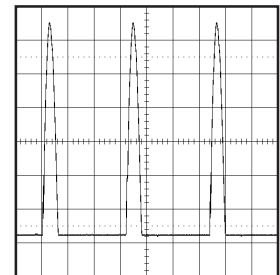


⑫ 20V 20μs/div

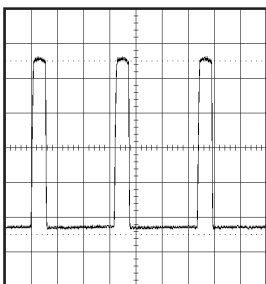


③ 200mV 20μs/div

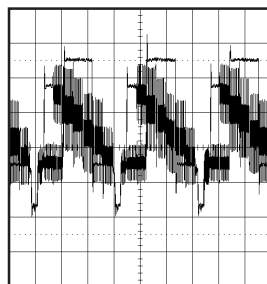


⑧ 0.5V 20μs/div

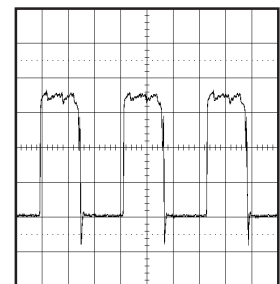


⑬ 200mV 20μs/div

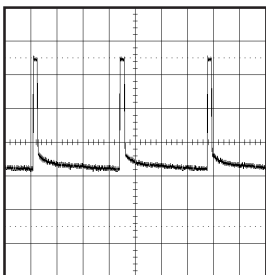

④ 200mV 5ms/div

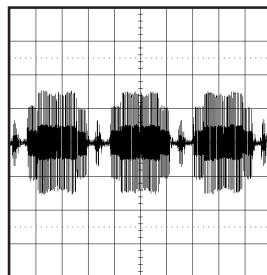


⑨ 200mV 20μs/div

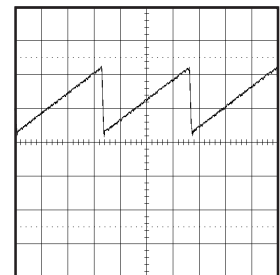


⑭ 0.5V 5ms/div


CHROMA

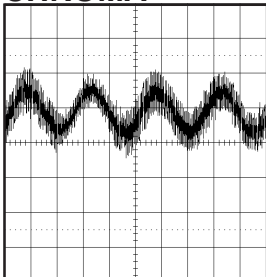

⑤ 100mV 1ms/div

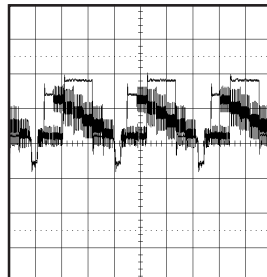


⑩ 0.5V 20μs/div

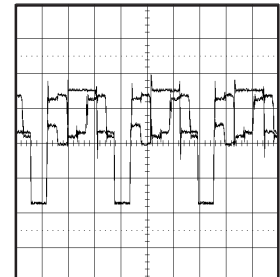


⑮ 1V 20μs/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


WAVEFORMS

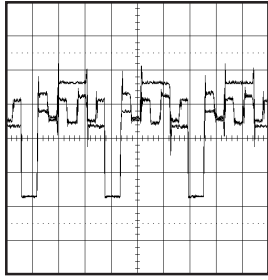


①⑥ 1V 20 μ s/div

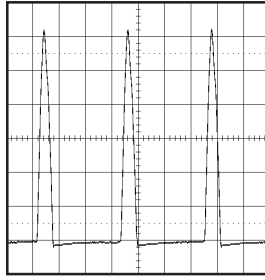


②① 200V 20 μ s/div

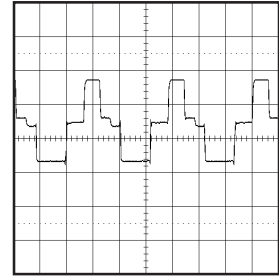


②⑥ 50V 20 μ s/div

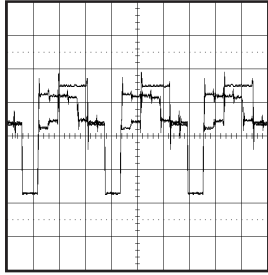

①⑦ 1V 20 μ s/div

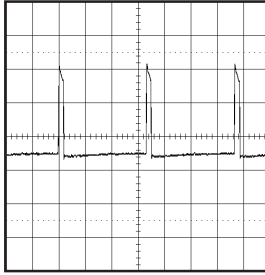


②② 10V 5ms/div

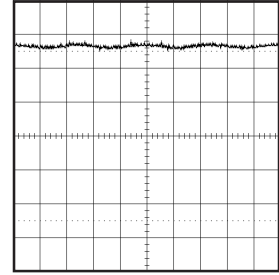


②⑦ 0.5V 1ms/div

SOUND


DEFLECTION/CRT

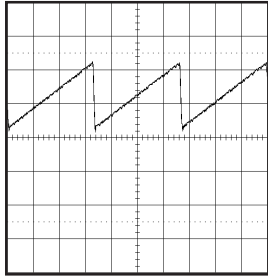


①⑧ 0.5V 5ms/div

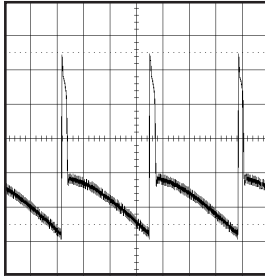


②③ 10V 5ms/div

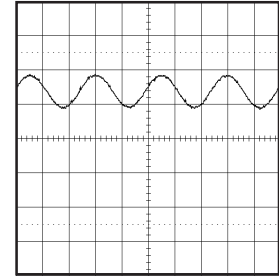


②⑧ 1V 1ms/div

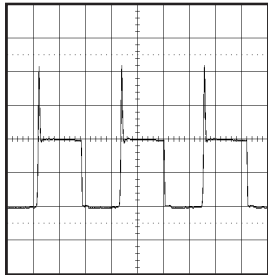


①⑨ 20V 20 μ s/div

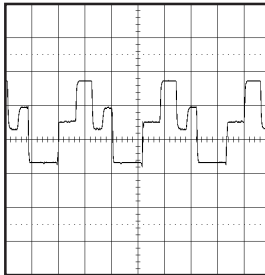


②④ 50V 20 μ s/div

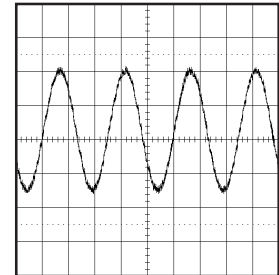


③⑩ 200mV 1ms/div

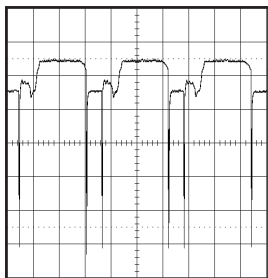

②⑩ 2V 20 μ s/div

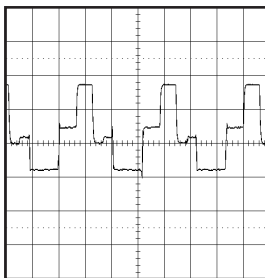


②⑤ 50V 20 μ s/div

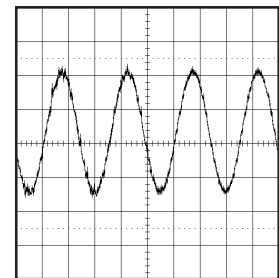


③① 200mV 1ms/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


WAVEFORMS

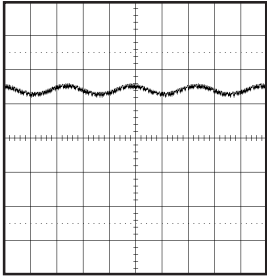


③② 1V 1ms/div

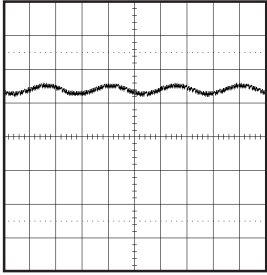

③③ 1V 1ms/div

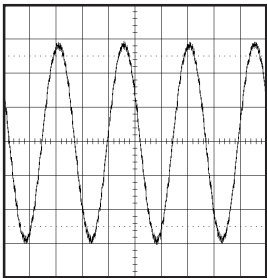


③④ 2V 1ms/div

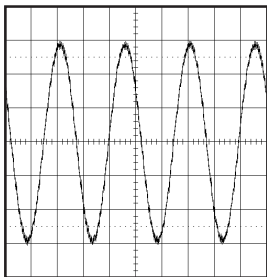

③⑤ 2V 1ms/div

MECHANICAL EXPLODED VIEW

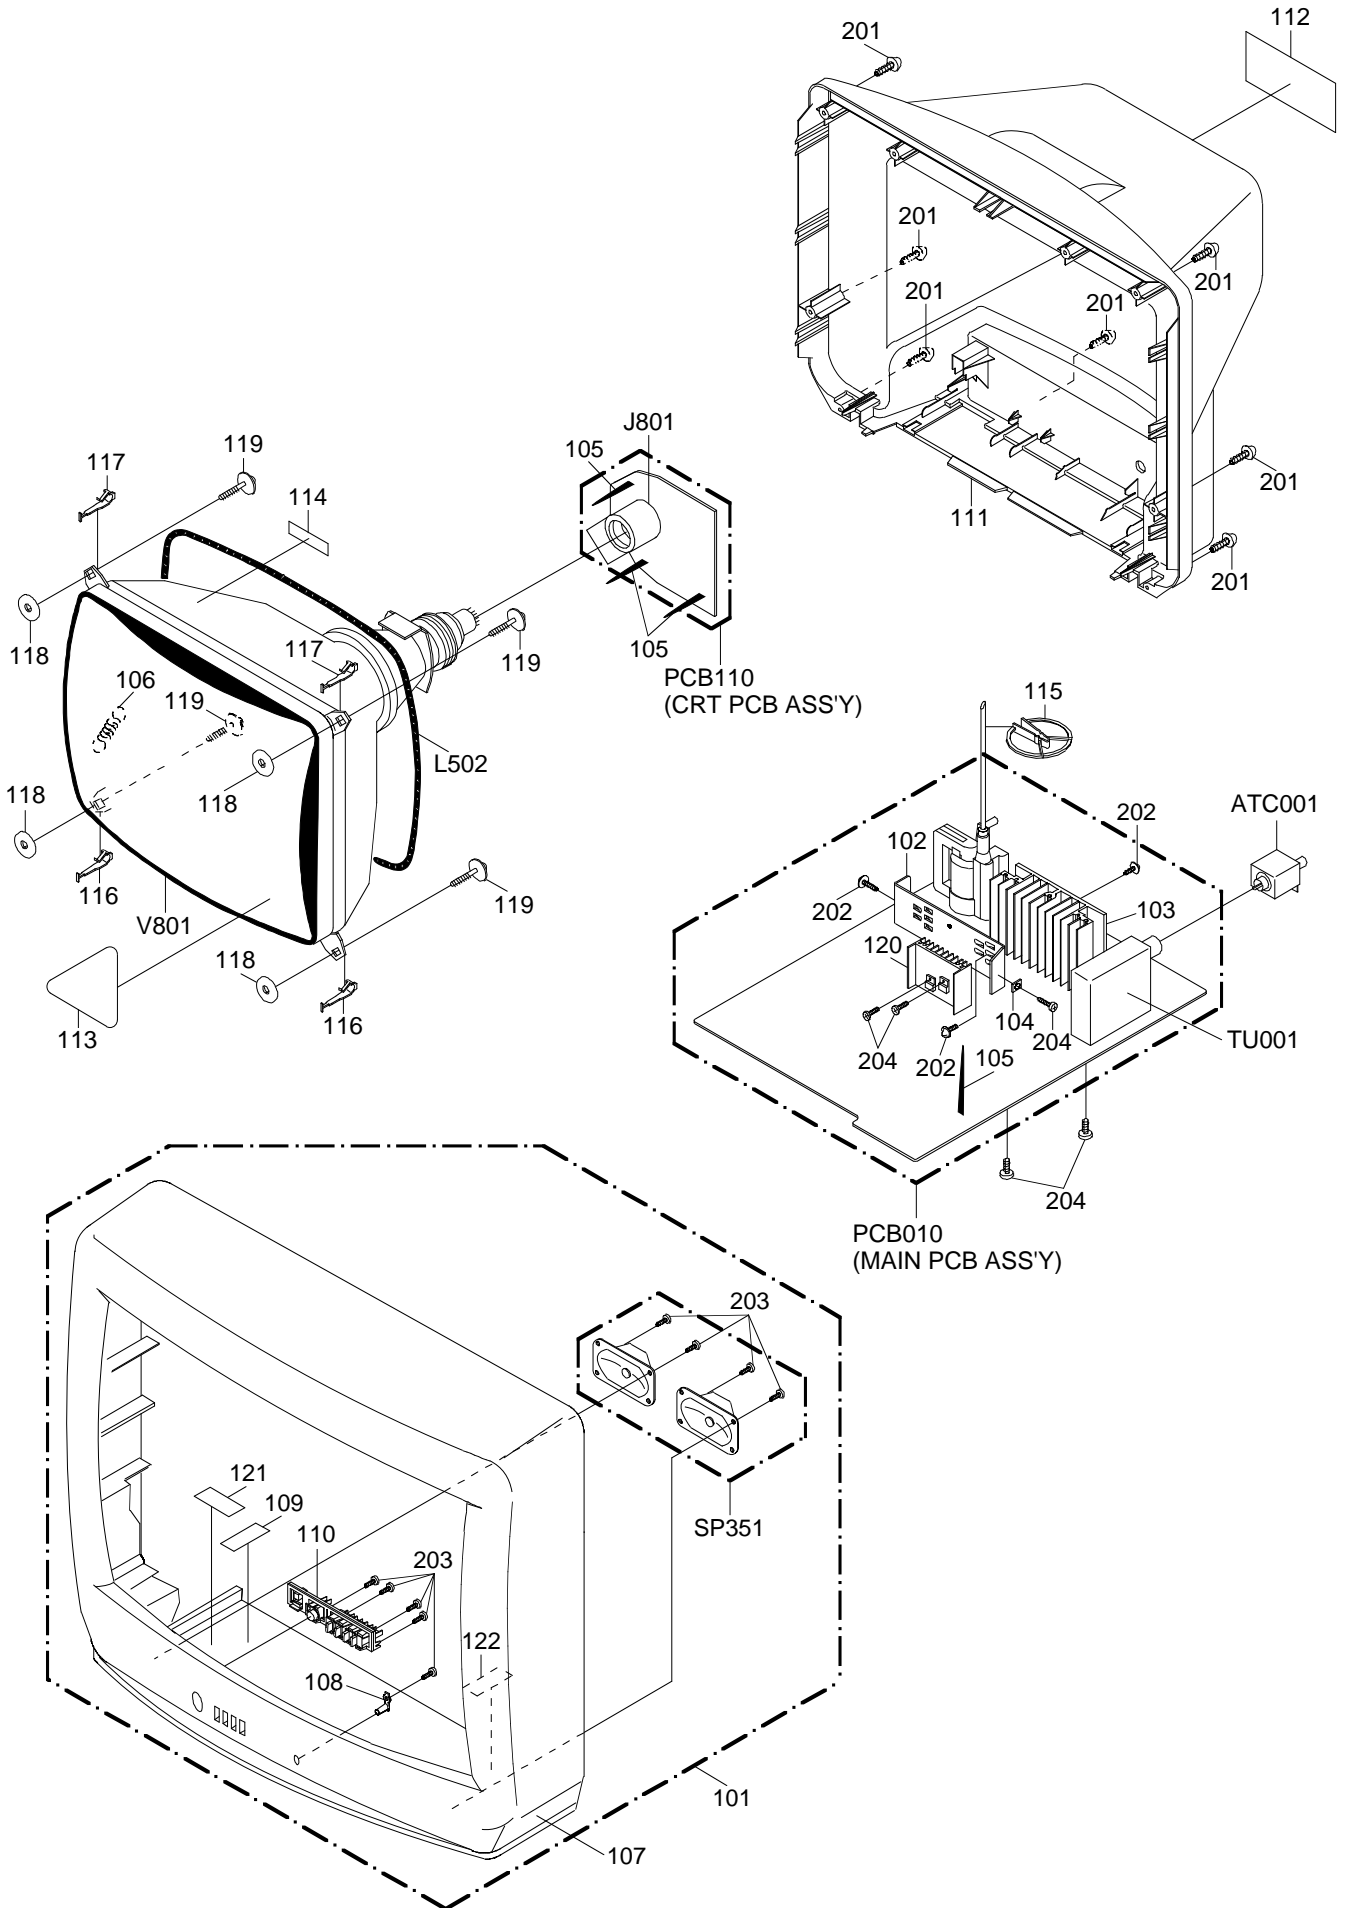

MECHANICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION
101	A3I002F720	CABINET,FRONT ASS'Y
102	----	HEAT SINK
103	----	HEAT SINK
104	----	METAL SPACER
105	----	COATING CLIP
106	741WUA0016	SPRING,EARTH
107	701APJ0066	CABINET,FRONT
108	713KPA0109	GUIDE,REMOCON
109	7230006856	SHEET,CAUTION
110	735WPA0426	BUTTON ASS'Y
111	702APA0086	CABINET,BACK
112	7222022470	SHEET,RATING
113	7230006851	FILM,DECORATION
114	7230006873	SHEET,BRAND
115	759WPA0006	HOLDER,ANODE WIRE
116	762WPA0007	HOLDER,CRT WIRE
117	8994201000	HOLDER,CRT WIRE
118	769WSA0009	WASHER CRT T=1
119	8111J50D04	SCREW,TAPPING(A) GW22 5x40
120	----	HEAT SINK
121	7220001109	SHEET,HWC
122	7240001041	SHEET,CSA WARNING
201	8117540B04	SCREW,TAPPING(B0) TRUSS 4x20
202	8117D30A04	SCREW,TAPPING(B0) WH8 BRAZIER 3x10
203	8110630A04	SCREW,TAP TITE(P) BRAZIER 3x10
204	8109630802	SCREW,TAP TITE(B) BRAZIER 3x8
---	791AHA0014	LAMIFILM BAG
---	792AHA0073	PACKAGE, TOP
---	792AHA0074	PACKAGE,BOTTOM
---	793ACD0465	GIFT BOX
---	JB5K0100	POLY BAG
---	J3I00201	INSTRUCTION BOOK

ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
RESISTORS			DIODES		
△ R177	R5Y2CF122J	R,CEMENT 1.2K OHM 10W	D610	D1VT001330	DIODE,SILICON 1SS133T-77
△ R401	R4X5T4104F	R,METAL 100K OHM 1/4W	D611	D92T09R1B1	DIODE,ZENER RD9.1EB1 TA11R
△ R404	R801R7272J	RC 2.7K OHM 1/10W	ICS		
△ R405	R4X5T4183F	R,METAL 18K OHM 1/4W	△ IC101	I53F53041A	IC OEC3041A
△ R406	R801R7472J	RC 4.7K OHM 1/10W	△ IC103	I1K998L050	IC KIA78L05BP-AT
△ R407	R65581R68J	R,FUSE 0.68 OHM 1W	IC104	I9UJ0T600C	IC PST600C
△ R408	R4X5T6183F	R,METAL 18K OHM 1/6W	IC199	A3I002E015	IC M24C01-BN6
△ R415	R3X201221J	R,METAL 220 OHM 1W	IC201	I03FE76814	IC LA76814M-MPB
△ R416	R0L2U2010J	RC 1 OHM 1/2W	△ IC351	I0FSP52770	IC AN5277
△ R417	R425T6113F	R,METAL 11K OHM 1/6W	△ IC401	I03SD78410	IC LA7841
△ R418	R425T6103F	R,METAL 10K OHM 1/6W	△ IC402	I1KA978050	IC KIA7805PI
△ R429	R6558A4R7J	R,FUSE 4.7 OHM 2W	△ IC501	I2B4901100	IC STR30110
△ R443	R6558A4R7J	R,FUSE 4.7 OHM 2W	△ IC601	I1KJ98L090	IC KIA78L05BP-AT
△ R447	R3X18A152J	R,METAL OXIDE 1.5K OHM 2W	IC701	I01FF58280	IC AN5828NS
△ R448	R3X18A152J	R,METAL OXIDE 1.5K OHM 2W	IC705	I06DF62420	IC M62420SP
△ R449	R3X18A152J	R,METAL OXIDE 1.5K OHM 2W	TRANSISTORS		
△ R501	R21202105K	R,SOLID 820K OHM 1/2W	Q101	TC5T018154	TRANSISTOR,SILICON 2SC1815Y(TPE2)
△ R502	R5Y2CE1R2J	R,CEMENT 1.2 OHM 7W	Q102	TC5T018154	TRANSISTOR,SILICON 2SC1815Y(TPE2)
△ R506	R5Y2CH181J	R,CEMENT 180 OHM 20W	Q103	TC5T018154	TRANSISTOR,SILICON 2SC1815Y(TPE2)
△ R507	R65584470J	R,FUSE 47 OHM 1/4W	Q104	TCST02001L	TRANSISTOR,SILICON 2SC2001(C)-T_L
△ R509	R4X5T6183F	R,METAL 18K OHM 1/6W	Q105	TC5T018154	TRANSISTOR,SILICON 2SC1815Y(TPE2)
△ R515	R3X28B1R5J	R,METAL 1.5 OHM 3W	△ Q401	TDKU023350	TRANSISTOR,SILICON 2SD2335(LS)
△ R606	R801R7103J	RC 10K OHM 1/10W	△ Q402	TC3Q026210	TRANSISTOR,SILICON 2SC2621(D,E)-RAC
△ R614	R3X28B182J	R,METAL OXIDE 1.8K OHM 3W	Q403	TPYTD03001	COMPOUND TRANSISTOR DTA144ESTP
△ R615	R3X28B182J	R,METAL OXIDE 1.8K OHM 3W	Q602	TA5T010154	TRANSISTOR,SILICON 2SA1015Y(TPE2)
△ R649	R3X28B182J	R,METAL OXIDE 1.8K OHM 3W	Q604	TA5T010154	TRANSISTOR,SILICON 2SA1015Y(TPE2)
△ R803	R3X18A123J	R,METAL OXIDE 12K OHM 2W	Q605	TA5T010154	TRANSISTOR,SILICON 2SA1015Y(TPE2)
△ R805	R3X18A123J	R,METAL OXIDE 12K OHM 2W	△ Q801	TC3Q040750	TRANSISTOR,SILICON 2SC4075-YAC
△ R807	R3X18A123J	R,METAL OXIDE 12K OHM 2W	△ Q802	TC3Q040750	TRANSISTOR,SILICON 2SC4075-YAC
△ Q803	TC3Q040750	TRANSISTOR,SILICON 2SC4075-YAC	COILS & TRANSFORMERS		
CAPACITORS			L201	021LA6100K	COIL 10 UH
C132	E02LF3102M	CE 1000 UF 25V	L202	021673R22M	COIL 0.22 UH
C351	E02AF4332M	CE 3300 UF 35V	L205	0336020388	COIL,VIDEO IFT 3602038
△ C404	E02LT1471M	CE 470 UF 10V	L406	021U6D180K	COIL 18 UH
△ C405	E02LT2471M	CE 470 UF 16V	△ L501	029K000074	COIL,LINE FILTER 9-000074
△ C412	E02LT4471M	CE 470 UF 35V	△ L502	028H250009	COIL,DEGAUSS 8H250009
△ C414	E5EZT4101M	CE 100 UF 35V	L601	021LA6150K	COIL 15 UH
C416	P3N1F2183J	CPP 0.018 UF 200V	L701	021673101K	COIL 100 UH
△ C418	E5EZF3102M	CE 1000 UF 25V	L704	021LA6220K	COIL 22 UH
△ C433	E02LT4471M	CE 470 UF 35V	T401	045013001J	TRANS,HORIZONTAL DRIVE 5013001
△ C434	E02LT8220M	CE 22 UF 100V	JACKS		
C437	P411F3564J	CMPP 0.56 UF 250V ECWF	△ J801	066C130015	SOCKET,CATHODE RAY TUBE CVT3275-5102
△ C443	P414F9103H	CMPP 0.01 UF 1.6KV ECWF	SWITCHES		
C444	C01BBP7H2K	CC 220 PF 2KV BP	SW101	0504201T31	SWITCH,TACT SKHVBED010
△ C446	E53ZTB010M	CE 1 UF 160V VZ	SW102	0504201T31	SWITCH,TACT SKHVBED010
△ C448	E02LT8220M	CE 22 UF 100V	SW103	0504201T31	SWITCH,TACT SKHVBED010
△ C501	P2122B224M	CMP 0.22 UF 250V ECQUL	SW104	0504201T31	SWITCH,TACT SKHVBED010
△ C506	E52SFC681M	CE 680 UF 200V	SW105	0504201T31	SWITCH,TACT SKHVBED010
△ C507	E53ZFB101M	CE 100 UF 160V	VARIABLE RESISTORS		
△ C519	E53ZTB100M	CE 10 UF 16V VZ	VR401	V126213BT2	VOLUME,SEMI FIXED RH0684C13R
△ C615	E50HU2220M	CE 22 UF 16 V	P.C.BOARD ASSEMBLIES		
DIODES			PCB010	A3I002F01A	PCB ASS'Y TM9425A
D001	D94TA30013	DIODE,ZENER HZ30-3L TD	PCB110	A3I002F11A	PCB ASS'Y TC9284A
D101	D1VT001330	DIODE,SILICON 1SS133T-77	MISCELLANEOUS		
D103	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77	△ ATC001	0632400008	ANT UNIT NXC0032-010010
D125	D1VT024720	DIODE,SILICON 1S2472T-77	△ CD501	120R614908	CORD,AC 0R614908
△ D126	D2BT0EM1C0	DIODE,SILICON EM1C V1	CD801	068M82025A	CORD,CONNECTOR 8M82025A
D127	D28T11E1N1	DIODE,SILICON 11E1N-TA1B2	CD802	122E053701	CORD,JUMPER 122E053701
△ D401	D94TA27011	DIODE,ZENER HZ27-1L TD	CD803	122E044101	CORD,JUMPER 122E044101
△ D402	D94TA11B11	DIODE,ZENER HZ11B1L TD	CF201	1022T45R71	FILTER,SAW SAF45MFX220ZR
D403	D28T11E1N1	DIODE,SILICON 11E1N-TA1B2	CP101	069Q160058	CONNECTOR PCB SIDE W-D2506#01 or 173979-6
△ D404	D2BTAU02A0	DIODE,SILICON AU02A V0	CP351	069W14T290	CONNECTOR PCB SIDE TID-X04P-Z1BK
△ D406	D2BTAU02A0	DIODE,SILICON AU02A V0	CP401	069W340018	CONNECTOR PCB SIDE TS-80P-04-V1
△ D407	D2BTAU02A0	DIODE,SILICON AU02A V0	CP501	0697320039	CORD UX CONNECTOR THL-P03P-B1
△ D408	D2BTAU02A0	DIODE,SILICON AU02A V0	CP502	069W420029	CONNECTOR PCB SIDE TV-50P-02-A1
D409	D1VT001330	DIODE,SILICON 1SS133T-77	CP801	069W320018	CONNECTOR PCB SIDE TS-80P-02-V1
△ D410	D2BTAU02A0	DIODE,SILICON AU02A V0	CP806	069W010010	CONNECTOR PCB SIDE 005P-2100
△ D411	D2BTAU02A0	DIODE,SILICON AU02A V0	CP802A	067R005019	WIRE HOLDER 51048-0510
△ D501	D2BTRM11C0	DIODE,RECTIFIER RM11C	CP802B	067R005019	WIRE HOLDER 51048-0510
△ D502	D2BTRM11C0	DIODE,RECTIFIER RM11C	CP803A	067R104019	WIRE HOLDER 51052-0400
△ D503	D2BTRM11C0	DIODE,RECTIFIER RM11C	CP803B	067R104019	WIRE HOLDER 51052-0400
△ D504	D2BTRM11C0	DIODE,RECTIFIER RM11C	CP803C	067R104019	WIRE HOLDER 51052-0400
D602	D1VT001330	DIODE,SILICON 1SS133T-77	CUS001	800WF00004	CUSHION-A
D603	D28T11E1N1	DIODE,SILICON 11E1N-TA1B2	△ DY801	027Q062501	DY 3321 203 00040
D605	D94TA6RB12	DIODE,ZENER HZ6B2L TD	△ F501	081PA6R302	FUSE 23706.3
D606	D1VT001330	DIODE,SILICON 1SS133T-77	△ FB401	043225010F	TRANSFORMER,FLYBACK 3225010F
D607	D1VT024720	DIODE,SILICON 1S2472T-77			
D609	D1VT001330	DIODE,SILICON 1SS133T-77			

ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	
MISCELLANEOUS			
FH501	06710T0006	HOLDER,FUSE	EYF-52BC
FH502	06710T0006	HOLDER,FUSE	EYF-52BC
△ K001	129A000010	WEDGE	8115529
△ K002	129A000010	WEDGE	8115529
△ K003	129A000010	WEDGE	8115529
MG801	026A062704	MAGNET,CONVERGENCE	29MMSTAR
MS501	128B000018	SHEET	23MICA
OS101	077Q014003	REMOTE RECEIVER	PIC-28143SY-2
△ RY101	0560V20115	RELAY	ALKS321
SP351	070C533011	SPEAKER	SA04A01DWA
△ TH501	DF20G3R0Q0	DEGAUSS ELEMENT	PTH451C460BG3R0Q140T
TM101	076R074170	TRANSMITTER	R25-1088
△ TU001	0145S00049	TUNER UHF-VHF	ENV56D67G3
△ V801	092T250501	COLOR PICTURE TUBE	A63AFW36X
X101	100C32R803	CRYSTAL DSVT-200	32.768KHz
X601	100CT3R505	CRYSTAL HC-49/C	3.579545MHz
	100W3R5702	CRYSTAL	3.579545MHz

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR
 CE..... ALUMI ELECTROLYTIC CAPACITOR
 CP..... POLYESTER CAPACITOR
 CPP..... POLYPROPYLENE CAPACITOR
 CPL..... PLASTIC CAPACITOR
 CMP..... METAL POLYESTER CAPACITOR
 CMPL..... METAL PLASTIC CAPACITOR
 CMPP..... METAL POLYPROPYLENE CAPACITOR

SPEC.NO.	M310-02F
O/R NO.	A953512