


Memorex[®]

MVR4040A

SERVICE MANUAL

VIDEO CASSETTE RECORDER

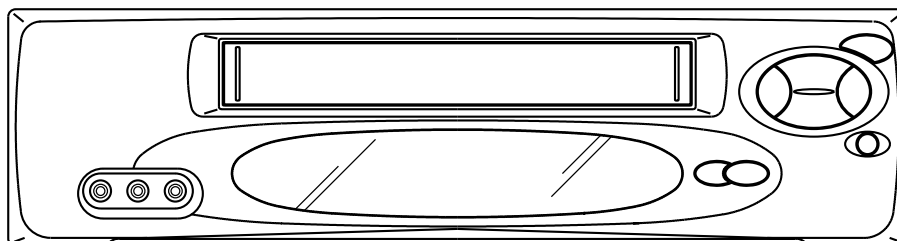

VHS

**ORIGINAL
MFR'S VERSION A**

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a \triangle mark, the designated parts must be used.

3. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board.

The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

4. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

CONTENTS

SERVICING NOTICES ON CHECKING	A1-1
HOW TO ORDER PARTS	A1-1
CONTENTS	A2-1
GENERAL SPECIFICATIONS	A3-1~A3-6
DISASSEMBLY INSTRUCTIONS	
1. REMOVAL OF MECHANICAL PARTS AND P. C. BOARDS	B1-1
2. REMOVAL OF DECK PARTS	B2-1~B2-5
KEY TO ABBREVIATIONS	C1-1, C1-2
SERVICE MODE LIST	C2-1
PREVENTIVE CHECKS AND SERVICE INTERVALS	C3-1, C3-2
NOTE FOR THE REPLACING OF MEMORY IC	C4-1
SERVICING FIXTURES AND TOOLS	C5-1
PREPARATION FOR SERVICING	C5-1
MECHANICAL ADJUSTMENTS	D1-1~D1-4
ELECTRICAL ADJUSTMENTS	D2-1, D2-2
BLOCK DIAGRAMS	
Y/C/AUDIO/CCD/HEAD AMP	E-1, E-2
SYSTEM CONTROL/SERVO	E-3, E-4
TUNER	E-5, E-6
HIFI	E-7, E-8
OPERATION/POWER	E-9, E-10
PRINTED CIRCUIT BOARDS	
SYSCON/OPERATION/DECK	F-1, F-2
SYSCON/OPERATION	F-3, F-4
SCHEMATIC DIAGRAMS	
Y/C/AUDIO/CCD/HEAD AMP	G-1, G-2
SYSTEM CONTROL/SERVO	G-3, G-4
TUNER	G-5, G-6
POWER	G-7, G-8
OPERATION	G-9, G-10
HIFI	G-11, G-12
DECK	G-13, G-14
INTERCONNECTION DIAGRAM	G-15, G-16
WAVEFORMS	H-1, H-2
MECHANICAL EXPLODED VIEW	I-1
CHASSIS EXPLODED VIEWS	I-2, I-3
MECHANICAL REPLACEMENT PARTS LIST	J1-1
CHASSIS REPLACEMENT PARTS LIST	J2-1
ELECTRICAL REPLACEMENT PARTS LIST	J3-1, J3-2

GENERAL SPECIFICATIONS

G-1. Outline of the Product

_____ 3 _____ -Speed 1/2" Video Cassette Recorder

G-2. VCR Format

VHS Standard NTSC PAL SECAM PAL-M PAL-N
VHS Hi-Fi Audio System

G-3. Video Recording System

: Rotary, slant azimuth two head helical scan system
 Luminance Component : FM recording
 Chrominance Component: Low frequency converted direct recording

G-4. Broadcasting System

_____ US _____ System _____ M _____

G-5. Color System

NTSC PAL SECAM or Monochrome

G-6. NTSC Playback(PAL60Hz)

Yes No

G-7. MESECAM

Yes No

G-8. Cassette Tape

VHS type video cassette tape Width 12.65mm (1/2 Inch)
VHS-C type video cassette tape Width 12.65mm (1/2 Inch)

G-9. Tape Speed

NTSC or PAL-M <input checked="" type="checkbox"/> SP 33.35 mm/sec <input checked="" type="checkbox"/> LP 16.67 mm/sec <input checked="" type="checkbox"/> SLP 11.12 mm/sec	PAL or SECAM <input type="checkbox"/> SP 23.39 mm/sec <input type="checkbox"/> LP 11.69 mm/sec
--	--

G-10. Recording/Playback Time

NTSC or PAL-M
at SP Mode Max. 210 min. (with T-210 cassette)
at LP Mode Max. 420 min. (with T-210 cassette)
at SLP Mode Max. 630 min. (with T-210 cassette)

PAL or SECAM
at SP Mode Max. 300 min. (with E-300 cassette)
at LP Mode Max. 600 min. (with E-300 cassette)

G-11. Rewind/Fast Forward Time(Approx.)

_____ FF:1' 48" / Rew:1' 48" _____
 (with T-120 cassette)
 (with E-180 cassette)

G-12. Search Speed

<input checked="" type="checkbox"/> SP	_____ 3 and 5 _____	Times
<input checked="" type="checkbox"/> LP	_____ 7 and 9 _____	Times
<input checked="" type="checkbox"/> SLP	_____ 9 and 15 _____	Times

G-13. Slow Speed

<input checked="" type="checkbox"/> SP	_____ 1/5 ~ 1/30 _____	Times
<input checked="" type="checkbox"/> LP	_____ 1/5 ~ 1/30 _____	Times
<input checked="" type="checkbox"/> SLP	_____ 1/5 ~ 1/30 _____	Times

G-14. Frame Advance

<input checked="" type="checkbox"/> SP	_____ 1/10 _____	Times
<input checked="" type="checkbox"/> LP	_____ 1/10 _____	Times
<input checked="" type="checkbox"/> SLP	_____ 1/10 _____	Times

G-15. Antenna Input Impedance

VHF/UHF 75 ohm unbalanced

GENERAL SPECIFICATIONS

G-16.Tuner and Receiving Channel

Tuner: Contactless Electric Tuner

Oscar(W/O HYPER) Oscar(W/ HYPER) France CATV Others

Receiving Channel

VHF (LOW) 2 ch ~ 6 ch
 (HIGH) 7 ch ~ 13 ch
 (CATV) A5 ch ~ B ch C ch~ W+11 ch W+12 ch~ W+58 ch
 UHF 14 ch ~ 69 ch

Tuning System

Frequency syn. Voltage syn. Others

G-17.Preset Channel

No channels
 Allocation ch ~ ch
 ch ~ ch
 ch ~ ch

G-18.Intermediate Frequency

Picture(FP) 45.75 MHz MHz MHz
 Sound (FS) 41.25 MHz MHz MHz
 FP-FS 4.50 MHz MHz MHz

G-19.RF Converter Output

Channel 3 or 4 ch. ~
 Level/Impedance 66 dBμ / 75 ohm
 Sound Selector Yes(G I K) No

G-20.Stereo/Dual TV Sound

Yes(NICAM GERMAN USA JAPAN) No

G-21.Tuner Sound Muting

Yes No

G-22.Video Signal

Input Level 1 Vp-p / 75 ohm
 Output Level 1 Vp-p / 75 ohm
 S/N Ratio 50 dB (Weighted)
 Horizontal Resolution at SP Mode 230 Lines

G-23.Audio Signal

Input Level Microphone dB / Kohm
 Line dB / Kohm
 RCA - 8 dB / 50 Kohm
 Output Level Line dB / Kohm
 RCA - 8 dB / 1 Kohm(OdB=0.775 Vrms)
 S/N Ratio at SP Mode 42 dB (Weighted)
 Harmonic Distortion : 1.5 % (1KHz)
 Frequency Response : at SP Mode 120 Hz ~ 10 KHz
 at LP Mode 120 Hz ~ 6 KHz
 at SLP Mode 120 Hz ~ 4 KHz

G-24.Heads

Video 4 Rotary Heads
 FM Audio 2 Rotary Heads
 Audio / Control 1 Stationary Head (Mono Stereo(L,R))
 Erase 1 Full Track Erase

G-25.Motor: 3 Motors

Tape/Cassette Loading
Cylinder (Direct Drive)
Capstan (Direct Drive)

GENERAL SPECIFICATIONS

G-26.Power Source

120 V AC 50Hz AC 60Hz

G-27.Power Consumption: 12 W at AC 120 V 60 Hz(Approx.)

Stand by: 2.5 W at AC 120 V 60 Hz(Approx.)

Per Year: - kWh / Year

G-28.Dimensions(Approx.)

360 mm(W) 240 mm(D) 95 mm(H)

G-29.Weight(Approx.) Net : 3.3 Kg (8.8 lbs)

Gross : 4.6 Kg (10.2 lbs)

G-30.Cabinet Material

Cabinet Front: PS 94HB DECABROM
 ABS 94V2 NON-DECA
 94V0

G-31.Cassette Loading System: Front Cassette Loading System

G-32.Tape Counter: Linear Time Tape Counter

G-33.Protector: Power Fuse Dew Sensor

G-34.Regulation

Safety

UL CSA SAA SI CE SEV
 NEMKO FEMKO DEMKO IEC65 CNS SISIR
 SEMKO NZ HOMOLO SABS GOST
 NOM AS3159 DENTORI UNE NONE

Radiation

FCC DOC PTT CE SEV
 SABA SI NZ HOMOLO UNE
 CNS CISPR13 DENTORI AS/NZS NONE

G-35.Temperature

Operation 5 °C ~ 40 °C

Storage -20 °C ~ 60 °C

G-36.Operating Humidity : Less than 80 %RH

G-37.Clock and Timer

Built-in 1 Month 8 Events Programmable Timer

One Touch Recording : Max Time 5 Hours

G-38.Timer back up Time

More than 1/12 Minutes (at Power Off Mode)

G-39.Terminals

VHF/UHF Antenna Din Type F-Type France Type
 Video Input(Front) Phono Jack (RCA ø8.3) BNC
 Video Input(Rear) Phono Jack (RCA ø8.3) BNC
 Video Output(Rear) Phono Jack (RCA ø8.3) BNC
 Audio Input(Front) Phono Jack (RCA ø8.3)x2
 Audio Input(Rear) Phono Jack (RCA ø8.3)x2
 Audio Output(Rear) Phono Jack (RCA ø8.3)x2
 21 Pin

G-40.Indicator

Power (Red) Play () ATR () Repeat () Tape In ()
 TV/VCR (Red) REC (Red) T-REC (Red) NONE

GENERAL SPECIFICATIONS

G-41. Display

- Fluorescent Indicator Yes No
- Clock/Counter, Channel, Timer Rec, OTR, Play, Rec, FF(Cue), Rew(Rev), Still, Pause, ATR, Eject, Stop
- WKL, Y.M.D, Start, End AFT Repeat
- VCR Memory Index VPS PDC
- SP LP SLP AM PM
- On Screen Display
- Menu
- Clock Set(Calendar 12H 24H)
- Timer Rec Set
- Auto Repeat On Off
- Sap On Off
- CH Set
- TV/CATV
- Auto CH Memory
- Add/Delete
- Language
- No Noise Back Ground
- G-CODE(or SHOWVIEW or PLUSCODE)No. Entry
- NICAM M1/2, NICAM Off, Audio Output
- Stereo, Audio Output, Bilingual
- Stereo, Audio Output, SAP Stereo, Audio Output
- Play/Stop/FF/Rew/Rec/OTR/Pause/T-Rec (Symbol)
- CH/AV Clock Memory Pin Code
- Tape Counter Index Tracking Tape Speed
- Hi-Fi

G-42. OSD Language

- Eng Ger Fre Spa Ita Por Jan

OSD Language Setting

- Eng Ger Fre Spa Ita Por Jan
- Not Applicable

G-43. Carton

- Master Carton: Need No Need
- Content: _____ Set
- Material: _____ / _____ Corrugated Carton
- Dimensions: _____ mm(W) _____ mm(D) _____ mm(H)
- Description of Origin Yes No
- Gift Box Need No Need
- Material Single/Brown Corrugated Carton (with Photo Label)
- Single/White Corrugated Carton (with Photo Label)
- Single Full Color Carton W/Photo
- Dimensions: 450 mm(W) 345 mm(D) 195 mm(H)
- Design: As Per BUYER's
- Description of Origin: Yes No
- Drop Test Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces
- Height 25cm 31cm 46cm 62cm 80cm 100cm
- Container Stuffing: 1,870 Sets / 40' container

GENERAL SPECIFICATIONS

G-44. Accessories

- | | |
|--|---|
| <input checked="" type="checkbox"/> Owner's Manual (<input type="checkbox"/> W/Guarantee Card) [English/Spanish] | <input type="checkbox"/> Dew Caution Sheet |
| <input checked="" type="checkbox"/> Remote Control Unit | <input type="checkbox"/> Battery (UM- <u>4</u> x <u>2</u>) |
| <input type="checkbox"/> Video Cassette Tape | <input type="checkbox"/> Toll Free Insert Sheet |
| <input type="checkbox"/> Safety Tip | |
| <input type="checkbox"/> Guarantee Card <input type="checkbox"/> Audio-Video Cord (RCA) | <input type="checkbox"/> U/V Mixer |
| <input type="checkbox"/> Warning Sheet <input type="checkbox"/> Quick Set-Up Sheet | |
| <input type="checkbox"/> Information Sheet | |
| <input checked="" type="checkbox"/> 75 ohm Coaxial Cable (<input checked="" type="checkbox"/> Single Shield <input type="checkbox"/> Double Shield) | |
| <input type="checkbox"/> 300 ohm to 75 ohm VHF Antenna Adaptor | <input checked="" type="checkbox"/> Registration Card |
| <input type="checkbox"/> Car Cord | <input checked="" type="checkbox"/> Tape Rewinder(Buyer Supply) |

G-45. Other Features

- | | |
|---|---|
| <input checked="" type="checkbox"/> Auto Head Cleaning | <input checked="" type="checkbox"/> Index Search |
| <input checked="" type="checkbox"/> Auto Tracking | |
| <input type="checkbox"/> CH Auto Set-Up/Auto Clock | <input type="checkbox"/> ATS |
| <input type="checkbox"/> VIDEO PLUS+, SHOWVIEW, G-CODE | <input type="checkbox"/> PDC |
| <input checked="" type="checkbox"/> HQ (VHS Standard High Quality) | <input type="checkbox"/> VPS |
| <input checked="" type="checkbox"/> Auto Power On, Auto Play, Auto Rewind, Auto Eject, Auto Power Off | |
| <input type="checkbox"/> Premiere/ Canal+ | <input checked="" type="checkbox"/> Full OSD |
| <input checked="" type="checkbox"/> Forward / Reverse Picture Search | <input type="checkbox"/> SQPB |
| <input type="checkbox"/> One Touch Playback | <input checked="" type="checkbox"/> SAP |
| <input checked="" type="checkbox"/> CATV | <input type="checkbox"/> Channel Lock |
| <input checked="" type="checkbox"/> Auto CH Memory | <input type="checkbox"/> Anti Theft |
| <input type="checkbox"/> Just Clock Function | <input type="checkbox"/> Hotel Lock |
| <input type="checkbox"/> Kurupika Guide | <input checked="" type="checkbox"/> CM Skip(30 sec. x 6 times) |
| <input type="checkbox"/> Rental | <input type="checkbox"/> Game Position |
| <input type="checkbox"/> Self Seeking | |

G-46. Switch

Front

- | | | |
|---|--|--|
| <input checked="" type="checkbox"/> Power | <input checked="" type="checkbox"/> Channel Up | <input checked="" type="checkbox"/> Channel Down |
| <input checked="" type="checkbox"/> Play | <input checked="" type="checkbox"/> F.FWD/Cue | <input checked="" type="checkbox"/> Rew/Rev |
| <input type="checkbox"/> Pause/Still | <input checked="" type="checkbox"/> Eject/Stop | <input checked="" type="checkbox"/> Rec/OTR |
| <input type="checkbox"/> System Select | <input type="checkbox"/> Input Select | <input type="checkbox"/> Output Select |
| <input type="checkbox"/> One Touch Playback | | |

Rear

- RF-Converter Output Channel Selector(1 or 2CH 3 or 4CH)
- TV/CATV Selector
- SIF Selector

GENERAL SPECIFICATIONS

G-47.Remote Control

Unit : RC-CA

Glow in Dark Remocon Yes No

Power Source: D.C 3 V Battery UM - 4 x 2

Control Key : Total 43 Key

<input checked="" type="checkbox"/> 0	<input checked="" type="checkbox"/> Ch Up	<input checked="" type="checkbox"/> Power
<input checked="" type="checkbox"/> 1	<input checked="" type="checkbox"/> Ch Down	<input checked="" type="checkbox"/> Eject
<input checked="" type="checkbox"/> 2	<input type="checkbox"/> Cancel/Ch Skip	<input checked="" type="checkbox"/> Play
<input checked="" type="checkbox"/> 3	<input checked="" type="checkbox"/> Cancel	<input type="checkbox"/> Play/Up
<input checked="" type="checkbox"/> 4	<input checked="" type="checkbox"/> Enter	<input type="checkbox"/> Play/Slow/Up
<input checked="" type="checkbox"/> 5	<input checked="" type="checkbox"/> Speed	<input checked="" type="checkbox"/> F.FWD
<input checked="" type="checkbox"/> 6	<input checked="" type="checkbox"/> Index	<input type="checkbox"/> F.FWD/Right
<input checked="" type="checkbox"/> 7	<input type="checkbox"/> Program	<input checked="" type="checkbox"/> Rew
<input checked="" type="checkbox"/> 8	<input type="checkbox"/> Program/Video Plus	<input type="checkbox"/> Rew/Left
<input checked="" type="checkbox"/> 9	<input type="checkbox"/> Video Plus	<input checked="" type="checkbox"/> Pause/Still
<input type="checkbox"/> 10	<input checked="" type="checkbox"/> Set Up	<input type="checkbox"/> Pause
<input type="checkbox"/> 11	<input checked="" type="checkbox"/> Set Down	<input checked="" type="checkbox"/> Stop
<input type="checkbox"/> 12	<input type="checkbox"/> Set Right	<input type="checkbox"/> Stop/Down
<input type="checkbox"/> ./..	<input type="checkbox"/> Set Left	<input checked="" type="checkbox"/> REC/OTR
<input checked="" type="checkbox"/> Auto Tracking	<input checked="" type="checkbox"/> Call	<input checked="" type="checkbox"/> Clock/Counter
<input type="checkbox"/> Jog/Shuttle	<input checked="" type="checkbox"/> Menu	<input checked="" type="checkbox"/> Zero Return
<input type="checkbox"/> Dial JOG	<input checked="" type="checkbox"/> TV/VCR	<input checked="" type="checkbox"/> Counter Reset
<input type="checkbox"/> Ring Shuttle	<input checked="" type="checkbox"/> Timer Rec	<input checked="" type="checkbox"/> Audio Select
<input type="checkbox"/> One Touch Playback	<input type="checkbox"/> Audio Dubbing	<input checked="" type="checkbox"/> TV Monitor
<input checked="" type="checkbox"/> Input Select	<input checked="" type="checkbox"/> Skip Search	<input checked="" type="checkbox"/> Slow Speed Up
<input checked="" type="checkbox"/> Slow	<input checked="" type="checkbox"/> Tracking Up	<input checked="" type="checkbox"/> Slow Speed Down
	<input checked="" type="checkbox"/> Tracking Down	

G-48.Hi-Fi Audio Recording

Depth Multiplex Recording Rotary, Slant Azimuth Two Head
System Helical Scan System

G-49.Hi-Fi Audio Signal

Output Level Line -6 dB 1 Kohm(0dB=0.775Vrms)

Dynamic Range : More than 90 dB

Frequency Response : 20 Hz ~ 20 KHz(+6dB)

Wow And Flutter : Less than 0.01 % Wrms

Channel Separation : More than 60 dB


Harmonic Distortion : Less than 1 %

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS


1-1: TOP CABINET, FRONT CABINET AND OPERATION PCB (Refer to Fig. 1-1)

1. Remove the 4 screws ①.
2. Remove the Top Cabinet in the direction of arrow (A).
3. Disconnect the following connector: (CP651).
4. Unlock the 7 supports ②.
5. Remove the Front Cabinet in the direction of arrow (B).
6. Remove the 4 screws ③ and remove the Operation PCB.

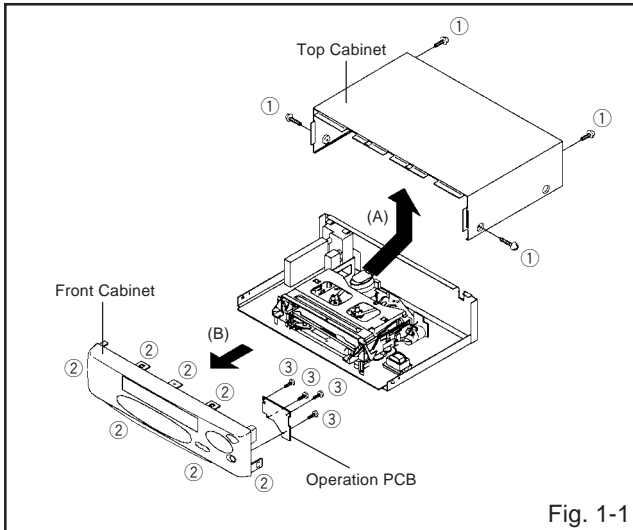


1-2: FLAP (Refer to Fig. 1-2)

1. Open Flap to 90° and flex in direction of arrow (A), at the same time slide in direction of arrow (B).
2. Then lift in direction of arrow (C).

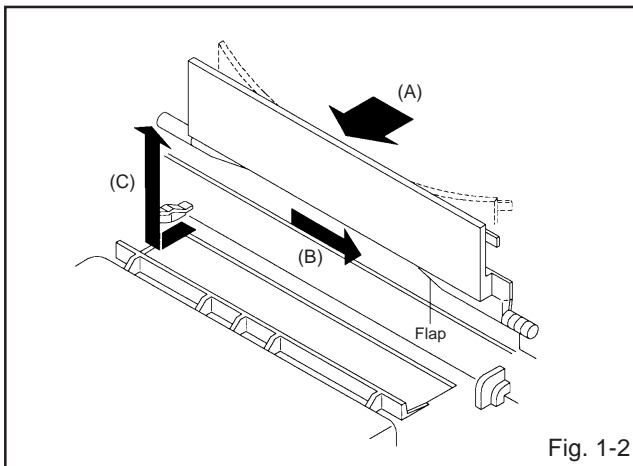


1-3: DECK CHASSIS (Refer to Fig. 1-3)

1. Remove the 3 screws ①.
2. Remove the screw ②.
3. Disconnect the following connectors: (CP1001, CP1002, CP1003, CP4001, CP4002 and CP4003).
4. Remove the Deck Chassis in the direction of arrow.

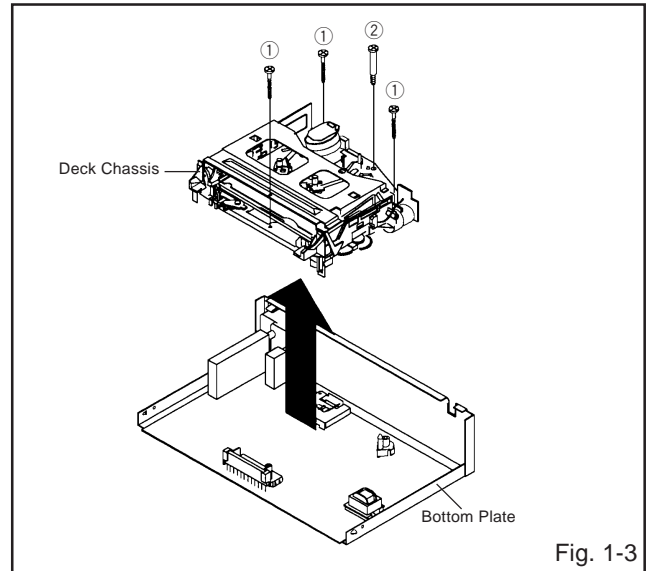

1-4: SYSCON PCB AND JACK PLATE (Refer to Fig. 1-4)

1. Remove the screw ①.
2. Remove the Syscon PCB in the direction of arrow (A).
3. Unlock the 2 supports ②.
4. Remove the Jack Plate in the direction of arrow (B).

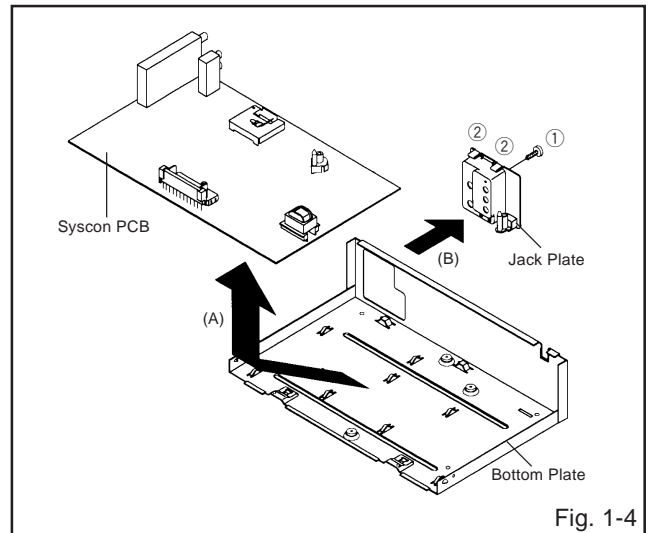

DISASSEMBLY INSTRUCTIONS

2. REMOVAL OF DECK PARTS

2-1: TOP BRACKET (Refer to Fig. 2-1)

1. Remove the 2 screws ①.
2. Slide the 2 supports ② and remove the Top Bracket.

NOTE

When you install the Top Bracket, install the screw (1) first, then install the screw (2).

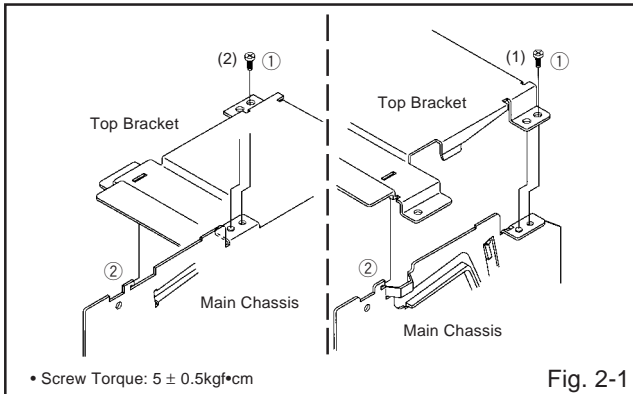


Fig. 2-1

2-2: FLAP LEVER/TAPE GUIDE R (Refer to Fig. 2-2)

1. Move the Cassette Holder Ass'y to the back side.
2. Remove the Polyslider Washer ①.
3. Remove the Flap Lever.
4. Unlock the 3 supports ② and remove the Tape Guide R.

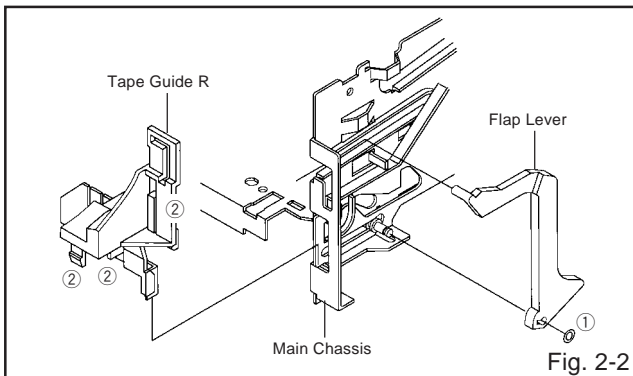


Fig. 2-2

2-3: TAPE GUIDE L (Refer to Fig. 2-3-A)

1. Move the Cassette Holder Ass'y to the back side.
2. Unlock the 2 supports ① and remove the Tape Guide L.
3. Remove the REC Lever. (Recorder only)

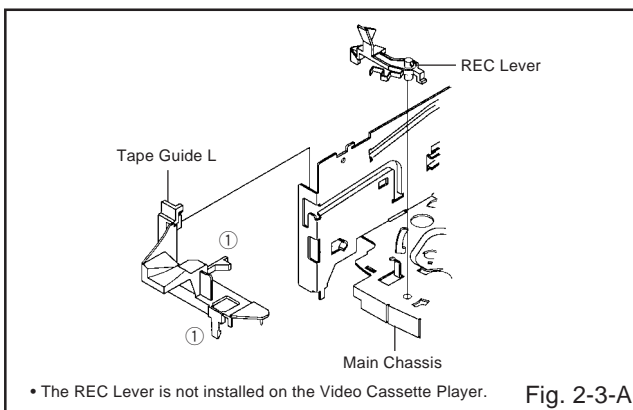


Fig. 2-3-A

NOTE

When you install the Tape Guide L, install as shown in the circle of Fig. 2-3-B. (Refer to Fig. 2-3-B)

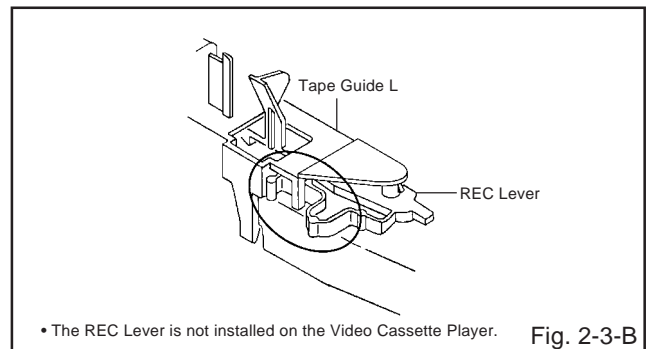


Fig. 2-3-B

2-4: CASSETTE HOLDER ASS'Y (Refer to Fig. 2-4)

1. Move the Cassette Holder Ass'y to the front side.
2. Push the Locker R to remove the Cassette Side R.
3. Remove the Cassette Side L.

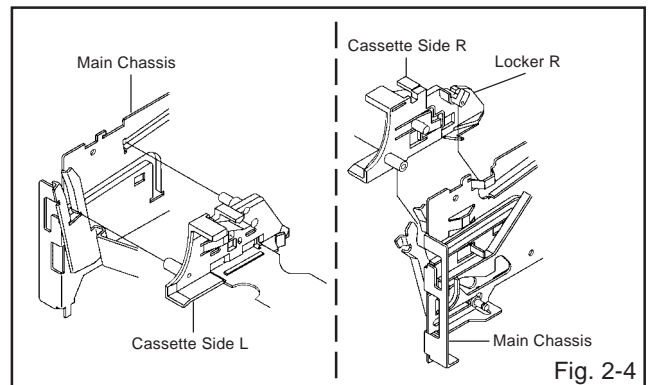


Fig. 2-4

2-5: CASSETTE SIDE L/R (Refer to Fig. 2-5)

1. Remove the Locker Spring.
2. Unlock the 4 supports ① and then remove the Cassette Side L/R.

NOTE

When you install the Cassette Side L/R, be sure to move the Locker L/R after installing.


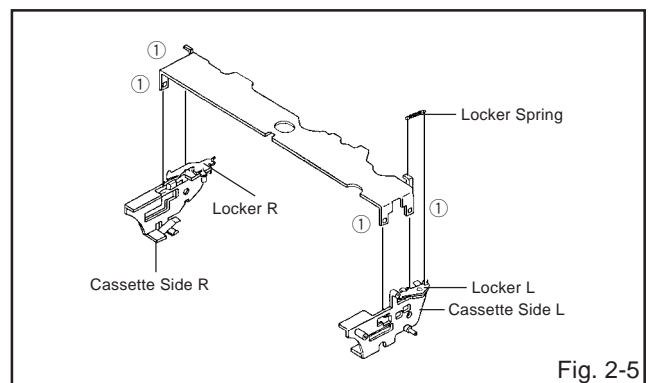


Fig. 2-5

DISASSEMBLY INSTRUCTIONS


2-6: LINK ASS'Y (Refer to Fig. 2-6)

1. Set the Link Ass'y to the Eject position.
2. Remove the (A) side of the Link Ass'y first, then remove the (B) side.

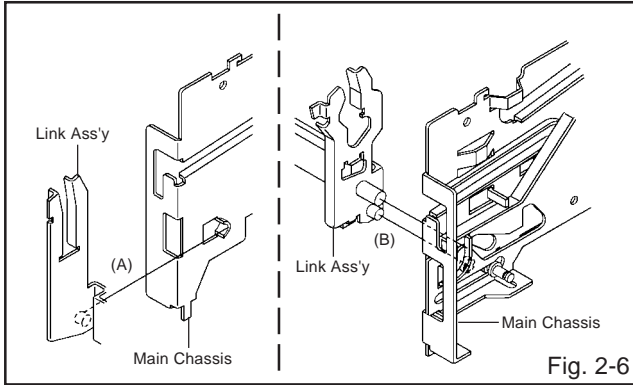


2-7: LOADING MOTOR ASS'Y (Refer to Fig. 2-7)

1. Remove the Link Lever.
2. Remove the Dumper Spring.
3. Remove the 2 screws ①.
4. Unlock the support ② and remove the Loading Motor Ass'y.
5. Unlock the 2 supports ③ and remove the Deck PCB (BOT).

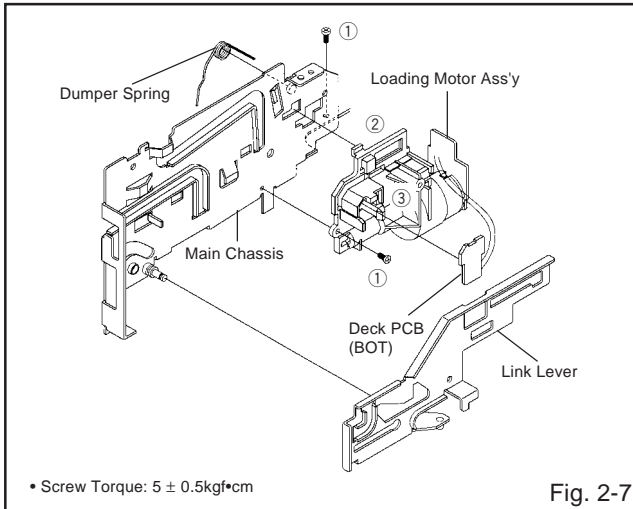


2-8: SENSOR COVER L2 (Refer to Fig. 2-8)

1. Unlock the support ① and remove the Sensor Cover L2.

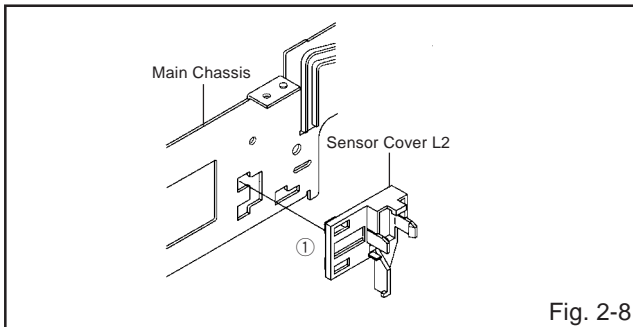


2-9: TENSION ASS'Y (Refer to Fig. 2-9-A)

1. Move the Inclined S Ass'y to the back side.
2. Remove the Tension Spring.
3. Unlock the support ① and remove the Tension Arm Ass'y.
4. Remove the Tension Adjust.
5. Unlock the 2 supports ② and remove the Tension Band Ass'y.
6. Unlock the support ③ and remove the Tension Holder.
7. Remove the SS Brake Spring.
8. Remove the SS Arm Brake.

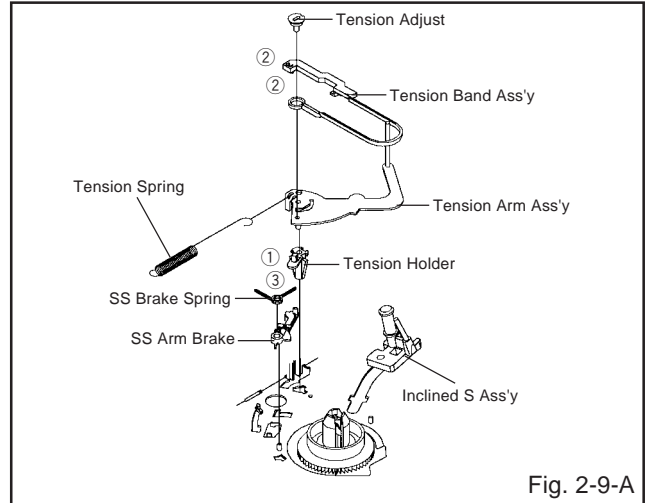


NOTE

When you install the Tension Adjust, install as shown in Fig. 2-9-B. (Refer to Fig. 2-9-B)

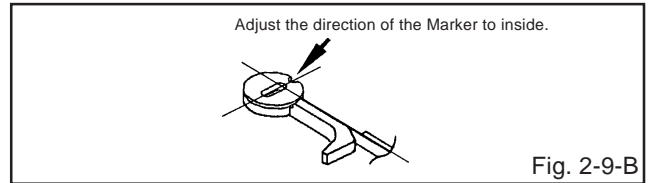

2-10: T BRAKE ASS'Y (Refer to Fig. 2-10)

1. Remove the T Brake Spring.
2. Remove the T Brake Ass'y.

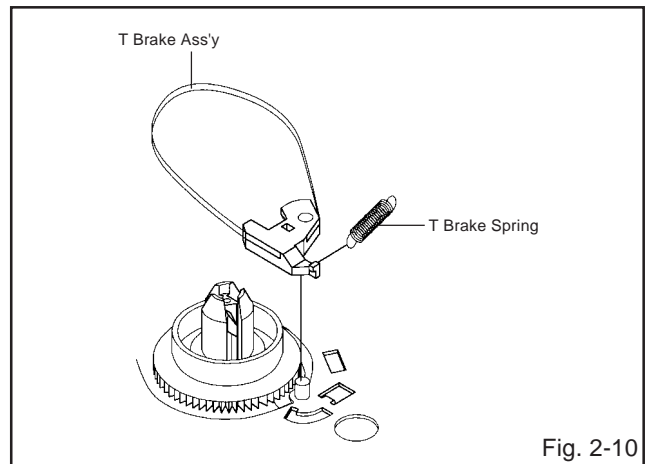

DISASSEMBLY INSTRUCTIONS

2-11: S REEL/T REEL (Refer to Fig. 2-11)

1. Remove the S Reel and T Reel.
2. Remove the 2 Polyslider Washers ①.

NOTE

1. Take care not to damage the gears of the S Reel and T Reel.
2. The Polyslider Washer may be remained on the back of the reel.
3. Take care not to damage the shaft.
4. Do not touch the section "A" of S Reel and T Reel. (Use gloves.) (Refer to Fig. 2-11) Do not adhere the stains on it.
5. When you install the reel, clean the shaft and oil it (FL OIL #6115). (If you do not oil, noise may be heard in FF/REW mode.)
6. After installing the reel, adjust the height of the reel. (Refer to MECHANICAL ADJUSTMENT)


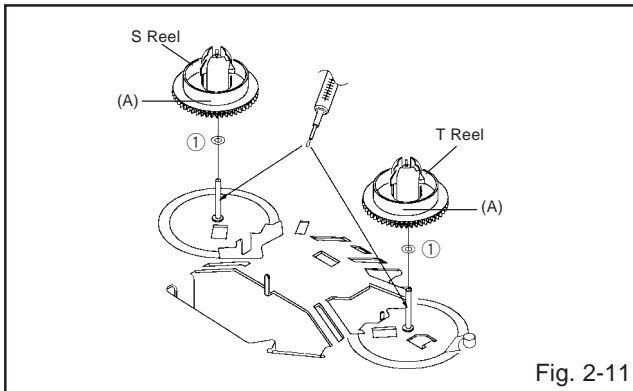


Fig. 2-11

2-12: PINCH ROLLER BLOCK/P5-3 ARM ASS'Y (Refer to Fig. 2-12-A)

1. Remove the P5 Spring.
2. Remove the screw ①.
3. Unlock the 2 supports ② and remove the Cassette Opener.
4. Remove the Pinch Roller Block, Pinch Roller Arm Spring, Pinch Roller Lever Ass'y and P5-3 Arm Ass'y.

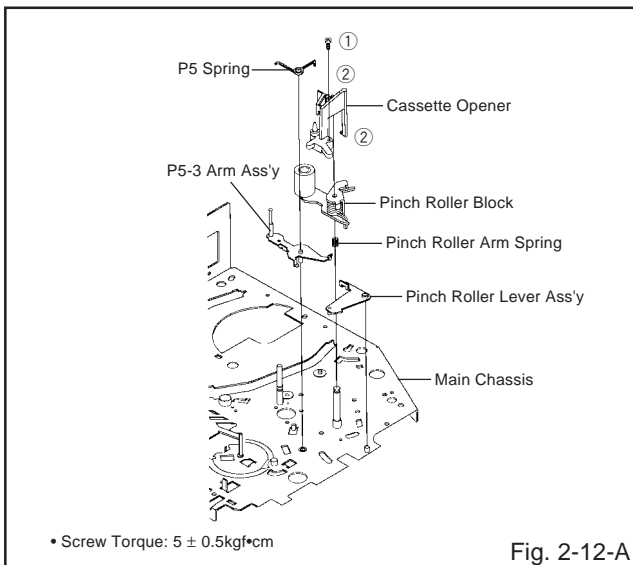

• Screw Torque: $5 \pm 0.5\text{kg}\cdot\text{cm}$

Fig. 2-12-A

NOTE

1. Do not touch the Pinch Roller. (Use gloves.)
2. When you install the Pinch Roller Block, install as shown in the circle of Fig. 2-12-B. (Refer to Fig. 2-12-B)

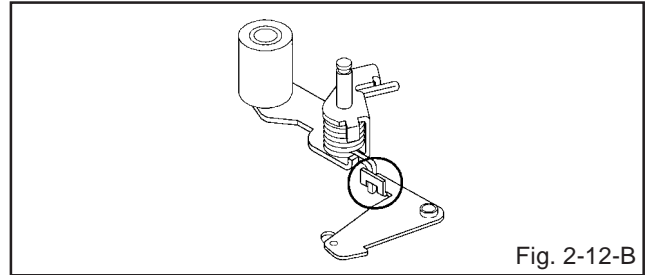


Fig. 2-12-B

2-13: A/C HEAD (Refer to Fig. 2-13-A)

1. Remove the screw ①.
2. Remove the A/C Head Base.
3. Remove the 3 screws ②.
4. Remove the A/C Head and A/C Head Spring.

NOTE

1. Do not touch the A/C Head. (Use gloves.)
2. When you install the A/C Head Spring, install as shown in Fig. 2-13-B. (Refer to Fig. 2-13-B)
3. When you install the A/C Head, tighten the screw (1) first, then tighten the screw (2), finally tighten the screw (3).

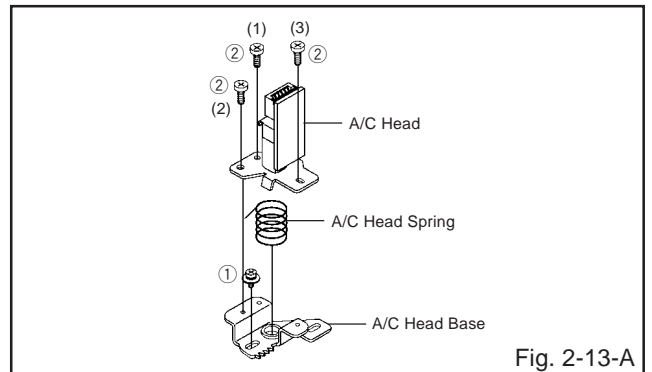


Fig. 2-13-A


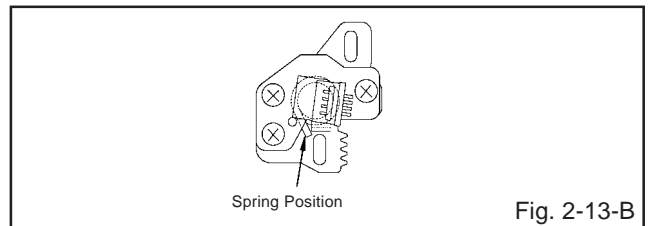


Fig. 2-13-B

2-14: FE HEAD (RECORDER ONLY) (Refer to Fig. 2-14)

1. Remove the screw ①.
2. Remove the FE Head.

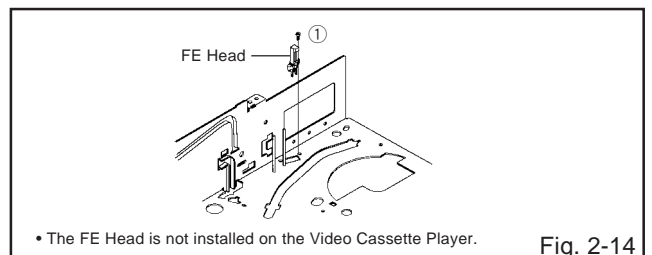

• The FE Head is not installed on the Video Cassette Player.

Fig. 2-14


DISASSEMBLY INSTRUCTIONS

2-15: AHC ASS'Y/CYLINDER UNIT ASS'Y (Refer to Fig. 2-15)

1. Unlock the support ① and remove the AHC Ass'y.
2. Remove the 3 screws ②.
3. Remove the Cylinder Unit Ass'y.


NOTE

When you install the Cylinder Unit Ass'y, tighten the screws from (1) to (3) in order while pulling the Ass'y toward the left front direction.

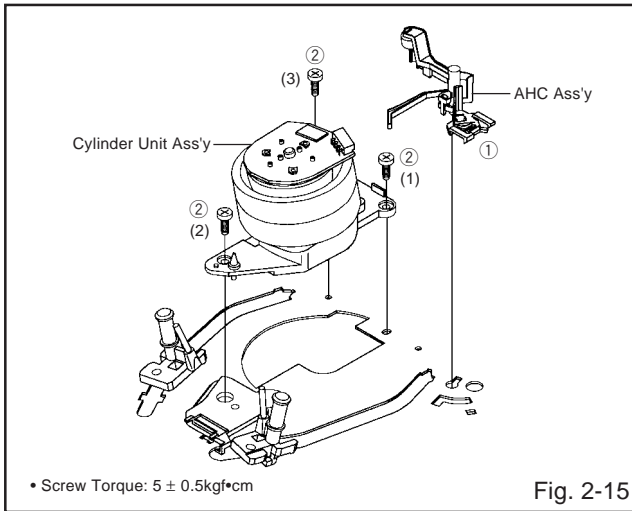


2-16: CAPSTAN DD UNIT (Refer to Fig. 2-16)

1. Remove the Capstan Belt.
2. Remove the 3 screws ①.
3. Remove the Capstan DD Unit.

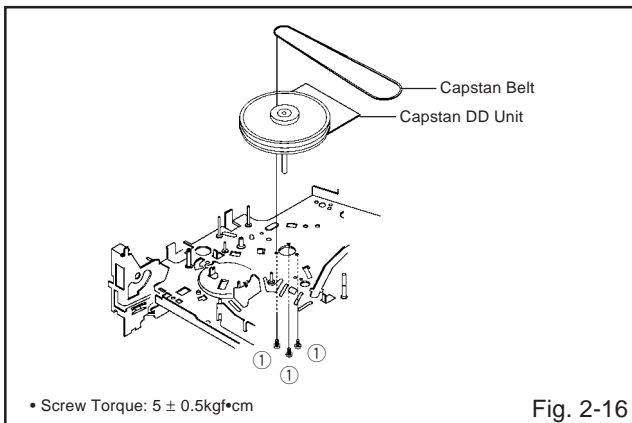


2-17: MIDDLE GEAR/MAIN CAM (Refer to Fig. 2-17-A)

1. Remove the Polyslider Washer ①, then remove the Middle Gear.
2. Remove the E-Ring, then remove the Main Cam, P5 Cam and Pinch Roller Cam.
3. Remove the Polyslider Washer ②, then remove the Joint Gear.

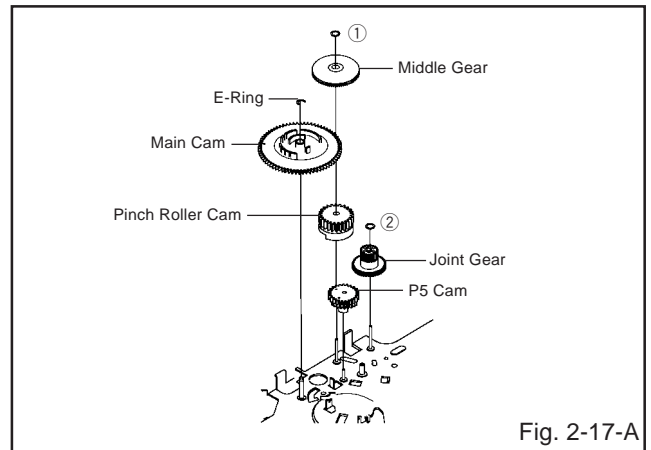


NOTE

When you install the Pinch Roller Cam, P5 Cam and Main Cam, align each marker. (Refer to Fig. 2-17-B)

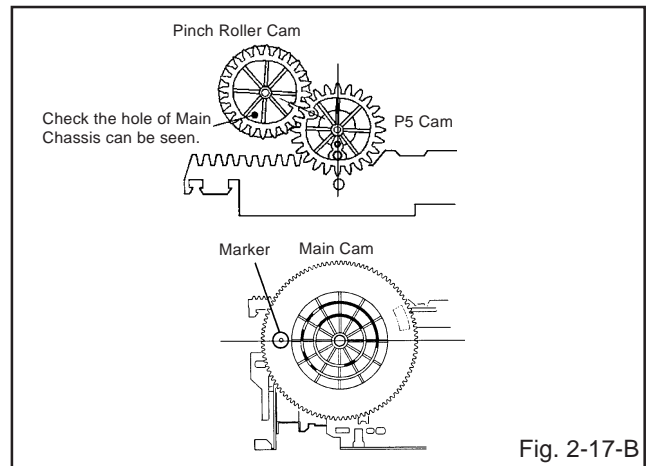

2-18: CLUTCH ASS'Y (Refer to Fig. 2-18)

1. Remove the Polyslider Washer ①.
2. Remove the Clutch Ass'y, Ring Spring and Coupling Gear.
3. Unlock the 2 supports ② and remove the Clutch Lever.

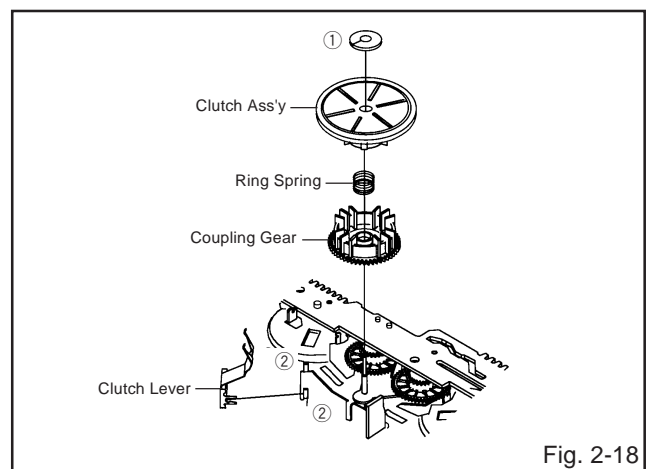

DISASSEMBLY INSTRUCTIONS

2-19: LOADING GEAR S/T ASS'Y (Refer to Fig. 2-19-A)

1. Remove the E-Ring ① and remove the Main Loading Gear.
2. Remove the Capstan Brake Spring.
3. Slide the Main Rod and remove the Capstan Brake Ass'y.
4. Remove the Main Rod, Tension Lever, Clutch Actuator, Idler Arm Ass'y.
5. Remove the screw ② and washer ③.
6. Remove the LED Reflector.
7. Remove the Loading Arm S Ass'y and Loading Arm T Ass'y.
8. Remove the Loading Gear S and Loading Gear T.
9. Remove the Loading Gear Spring.

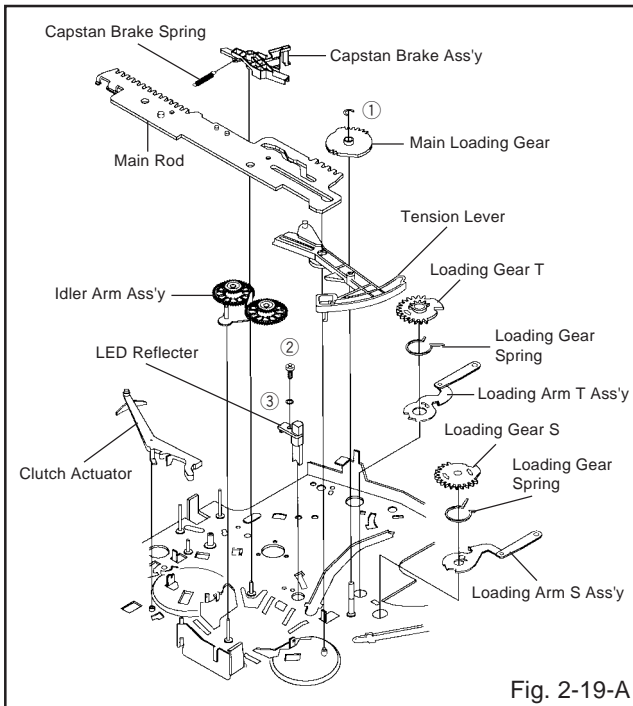


Fig. 2-19-A

NOTES

1. When you install the Loading Arm S Ass'y, Loading Arm T Ass'y and Main Loading Gear, align each marker. (Refer to Fig. 2-19-B)

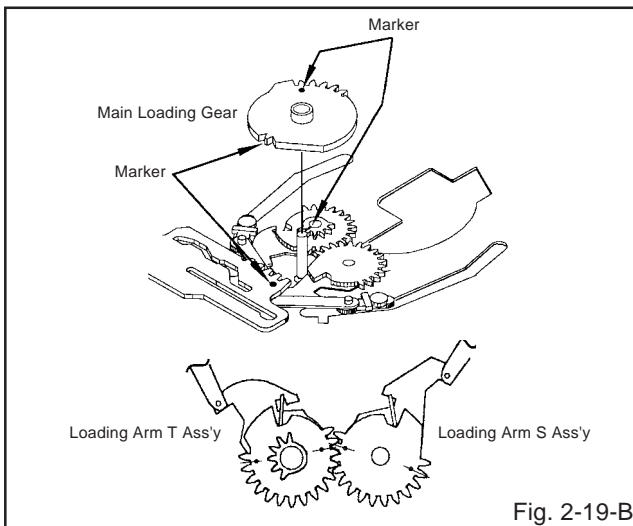


Fig. 2-19-B

2. When you install the Clutch Actuator, install as shown in the circle of Fig. 2-19-C. (Refer to Fig. 2-19-C)

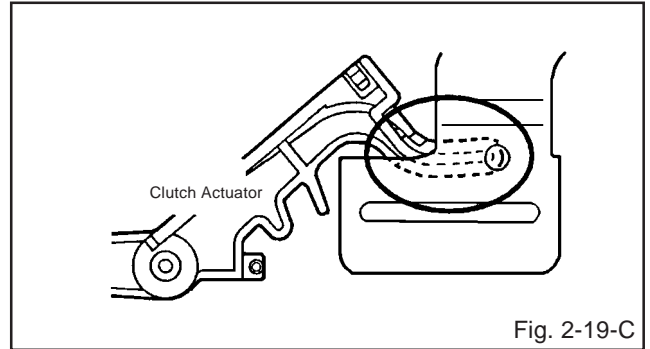


Fig. 2-19-C

2-20: INCLINED S/T ASS'Y (Refer to Fig. 2-20)

1. Unlock the support ① and remove the P4 Cover.
2. Unlock the support ② and remove the Loading Gear Holder.
3. Remove the Inclined S.
4. Remove the Inclined T.
5. Remove the 2 screws ③, then remove the Guide Roller and O-Ring.

NOTE

Do not touch the roller of Guide Roller.

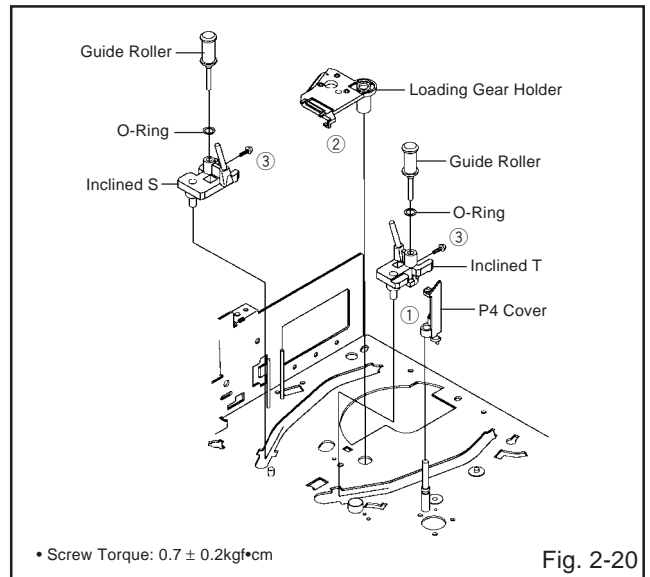


Fig. 2-20

KEY TO ABBREVIATIONS

A	A/C	: Audio/Control	H.SW	: Head Switch	
	ACC	: Automatic Color Control	Hz	: Hertz	
	AE	: Audio Erase	I	IC	: Integrated Circuit
	AFC	: Automatic Frequency Control		IF	: Intermediate Frequency
	AFT	: Automatic Fine Tuning		IND	: Indicator
	AFT DET	: Automatic Fine Tuning Detect		INV	: Inverter
	AGC	: Automatic Gain Control	K	KIL	: Killer
	AMP	: Amplifier	L	L	: Left
	ANT	: Antenna		LED	: Light Emitting Diode
	A.PB	: Audio Playback		LIMIT AMP	: Limiter Amplifier
	APC	: Automatic Phase Control		LM, LDM	: Loading Motor
	ASS'Y	: Assembly		LP	: Long Play
	AT	: All Time		L.P.F	: Low Pass Filter
	AUTO	: Automatic		LUMI.	: Luminance
	A/V	: Audio/Video	M	M	: Motor
B	BGP	: Burst Gate Pulse		MAX	: Maximum
	BOT	: Beginning of Tape		MINI	: Minimum
	BPF	: Bandpass Filter		MIX	: Mixer, mixing
	BRAKE SOL	: Brake Solenoid		MM	: Monostable Multivibrator
	BUFF	: Buffer		MOD	: Modulator, Modulation
	B/W	: Black and White		MPX	: Multiplexer, Multiplex
C	C	: Capacitance, Collector		MS SW	: Mecha State Switch
	CASE	: Cassette	N	NC	: Non Connection
	CAP	: Capstan		NR	: Noise Reduction
	CARR	: Carrier	O	OSC	: Oscillator
	CH	: Channel		OPE	: Operation
	CLK	: Clock	P	PB	: Playback
	CLOCK (SY-SE)	: Clock (Syscon to Servo)		PB CTL	: Playback Control
	COMB	: Combination, Comb Filter		PB-C	: Playback-Chrominance
	CONV	: Converter		PB-Y	: Playback-Luminance
	CPM	: Capstan Motor		PCB	: Printed Circuit Board
	CTL	: Control		P. CON	: Power Control
	CYL	: Cylinder		PD	: Phase Detector
	CYL-M	: Cylinder-Motor		PG	: Pulse Generator
	CYL SENS	: Cylinder-Sensor		P-P	: Peak-to Peak
D	DATA (SY-CE)	: Data (Syscon to Servo)	R	R	: Right
	dB	: Decibel		REC	: Recording
	DC	: Direct Current		REC-C	: Recording-Chrominance
	DD Unit	: Direct Drive Motor Unit		REC-Y	: Recording-Luminance
	DEMODO	: Demodulator		REEL BRK	: Reel Brake
	DET	: Detector		REEL S	: Reel Sensor
	DEV	: Deviation		REF	: Reference
E	E	: Emitter		REG	: Regulated, Regulator
	EF	: Emitter Follower		REW	: Rewind
	EMPH	: Emphasis		REV, RVS	: Reverse
	ENC	: Encoder		RF	: Radio Frequency
	ENV	: Envelope		RMC	: Remote Control
	EOT	: End of Tape		RY	: Relay
	EQ	: Equalizer	S	S. CLK	: Serial Clock
	EXT	: External		S. COM	: Sensor Common
F	F	: Fuse		S. DATA	: Serial Data
	FBC	: Feed Back Clamp		SEG	: Segment
	FE	: Full Erase		SEL	: Select, Selector
	FF	: Fast Forward, Flipflop		SENS	: Sensor
	FG	: Frequency Generator		SER	: Search Mode
	FL SW	: Front Loading Switch		SI	: Serial Input
	FM	: Frequency Modulation		SIF	: Sound Intermediate Frequency
	FSC	: Frequency Sub Carrier		SO	: Serial Output
	FWD	: Forward		SOL	: Solenoid
G	GEN	: Generator		SP	: Standard Play
	GND	: Ground		STB	: Serial Strobe
H	H.P.F	: High Pass Filter		SW	: Switch

KEY TO ABBREVIATIONS

S	SYNC	:	Synchronization
	SYNC SEP	:	Sync Separator, Separation
T	TR	:	Transistor
	TRAC	:	Tracking
	TRICK PB	:	Trick Playback
	TP	:	Test Point
U	UNREG	:	Unregulated
V	V	:	Volt
	VCO	:	Voltage Controlled Oscillator
	VIF	:	Video Intermediate Frequency
	VP	:	Vertical Pulse, Voltage Display
	V.PB	:	Video Playback
	VR	:	Variable Resistor
	V.REC	:	Video Recording
	VSF	:	Visual Search Fast Forward
	VSR	:	Visual Search Rewind
	VSS	:	Voltage Super Source
	V-SYNC	:	Vertical-Synchronization
	VT	:	Voltage Tuning
X	X'TAL	:	Crystal
Y	Y/C	:	Luminance/Chrominance

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.

Method	Operations
Press both PLAY button and CH UP button on the set for more than 2 seconds.	Initialization of the factory. NOTE: Do not use this for the normal servicing.
While pressing the CH UP key on the set, press the FF key on the set for more than 2 seconds.	PLAY/REC total hours are displayed on the FIP. Refer to the "PREVENTIVE CHECKS AND SERVICE INTERVALS" (CONFIRMATION OF USING HOURS). Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "NOTE FOR THE REPLACING OF MEMORY IC".
While pressing the CH UP button on the set, press the STOP button on the set for more than 2 seconds during PLAY.	Adjust the PG SHIFTER automatically. Refer to the "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
Press the ATR button on the remote control for more than 2 seconds during PLAY.	Adjusting of the Tracking to the center position. Refer to the "MECHANICAL ADJUSTMENT" (GUIDE ROLLER) and "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
Make the short circuit between the test point of SERVICE and the GND.	The EOT/BOT/Reel sensor do not work at this moment. Refer to the "PREPARATION FOR SERVICING"

PREVENTIVE CHECKS AND SERVICE INTERVALS

The following standard table depends on environmental conditions and usage. Unless maintenance is properly carried out, the following service intervals may be quite shortened as harmful effects may be had on other parts. Also, long term storage or misuse may cause transformation and aging of rubber parts.


Time Parts Name	500 hours	1,000 hours	1,500 hours	2,000 hours	3,000 hours	Notes
Audio Control Head	■	■	■	■	■	Clean those parts in contact with the tape.
Full Erase Head (Recorder only)	■	■	■	■	■	
Capstan Belt			■	■	●	Clean the rubber, and parts which the rubber touches.
Pinch Roller	■	■	■	■	■ ●	
Capstan DD Unit					●	
Loading Motor					●	
Tension Band					●	
Capstan Shaft	■	■	■	■	■	
Tape Running Guide Post	■	■	■	■	■	Replace when rolling becomes abnormal.
Cylinder Unit	■	■	■	■	●	Clean the Head

- : Clean
- : Replace

CONFIRMATION OF USING HOURS

PLAY/REC total hours can be checked on the FIP.
Total hours are displayed in 16 system of notation.

1. Turn on the POWER.
2. While pressing the CH UP button on the set, press the FF button on the set for more than 2 seconds.
3. Adjust the ADDRESS to "7D" by SET +/- button and read the DATA.
(This DATA becomes the thousands digit and hundreds digit value of the following formula.)
4. Adjust the ADDRESS to "7E" by SET +/- button and read the DATA.
(This DATA becomes the tens digit and ones digit value of the following formula.)
5. After the confirmation of using hours, turn off the power.

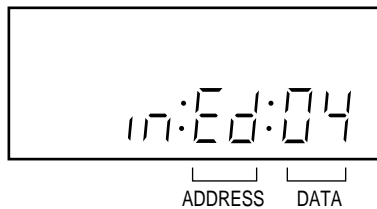

(16 x 16 x 16 x thousands digit value) + (16 x 16 x hundreds digit value) + (16 x tens digit value) + (ones digit value)

PREVENTIVE CHECKS AND SERVICE INTERVALS


CLEANING

NOTE

After cleaning the heads with isopropyl alcohol, do not run a tape until the heads dry completely. If the heads are not completely dry and alcohol gets on the tape, damage may occur.

1. AUDIO CONTROL HEAD

Wrap a piece of chamois around your finger. Dip it in isopropyl alcohol and clean the audio control head by wiping it horizontally. Clean the full erase head in the same manner. **(Refer to the figure below.)**

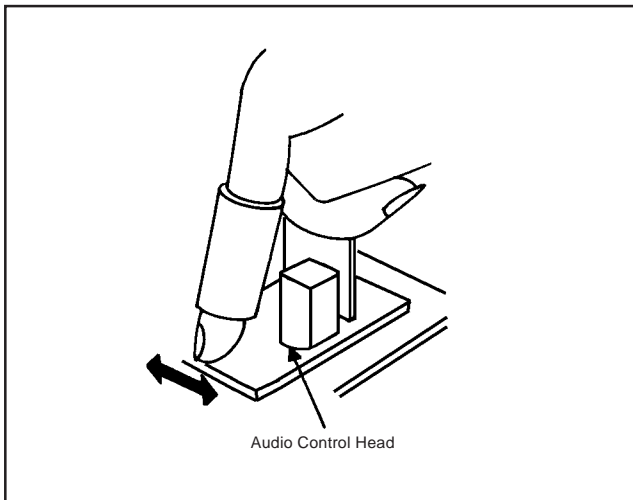

2. TAPE RUNNING SYSTEM


When cleaning the tape transport system, use the gauze moistened with isopropyl alcohol.

3. CYLINDER

Wrap a piece of chamois around your finger. Dip it in isopropyl alcohol. Hold it to the cylinder head softly. Turn the cylinder head counterclockwise to clean it (in the direction of the arrow). **(Refer to the figure below.)**

NOTE

Do not exert force against the cylinder head. Do not move the chamois upward or downward on the head. Use the chamois one by one.

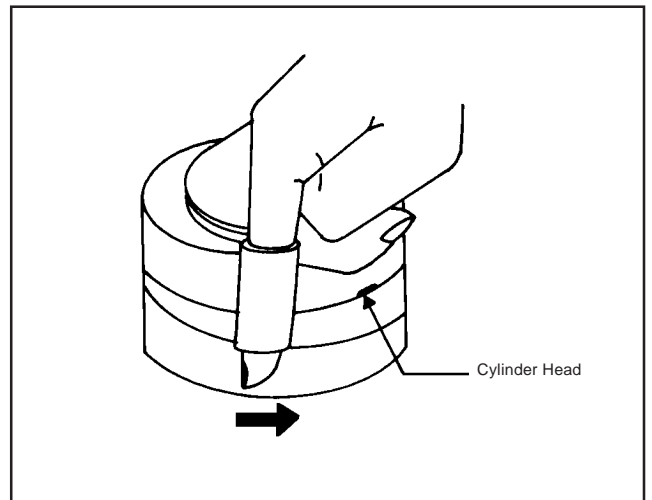

NOTE FOR THE REPLACING OF MEMORY IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

ADDRESS	INI 00	INI 01	INI 02	INI 03	INI 04	INI 05	INI 06	INI 07	INI 08	INI 09	INI 0A	INI 0B	INI 0C	INI 0D	INI 0E	INI 0F	INI 10	INI 11	INI 12
DATA	0A	00	00	64	64	4A	0A	0B	26	8A	45	0C	08	0C	0E	8C	68	5C	53

Table 1

1. Turn on the POWER.
2. While pressing the CH UP key on the set, press the FF key on the set for more than 2 seconds.
3. ADDRESS and DATA should appear as FIG 1.

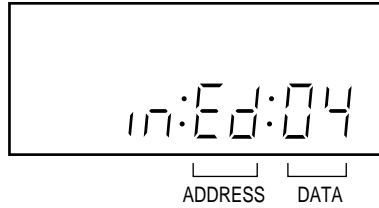
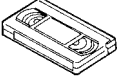
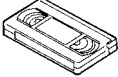
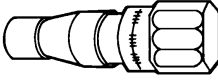
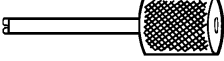
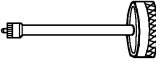
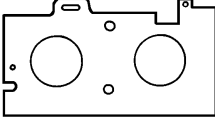
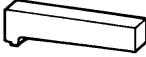
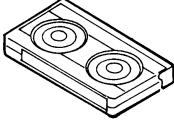
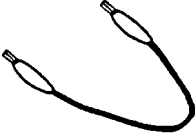
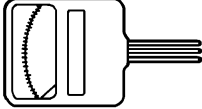


Fig. 1

4. ADDRESS is now selected and should "blink". Using the SET + or - keys on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
5. Press ENTER to select DATA. When DATA is selected, it will "blink".
6. Again, step through the DATA using SET + or - until required DATA value has been selected.
7. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
8. Repeat steps 4 to 7 until all data has been checked.
9. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input. The unit will now have the correct DATA for the new MEMORY IC.

SERVICING FIXTURES AND TOOLS

<p>(For 2 heads model) VHS Alignment Tape JG001 (VN₂S-LI6³) JG001A (VN₂S-CO1³) JG001Q (VN₂S-LI6³H) JG001T (VN₂S-X6³)</p> 	<p>(For 4 heads model) VHS Alignment Tape JG001B (VN₁S-LI6³) JG001I (VN₁S-CO1³) JG001P (VN₁S-LI6³H) JG001S (VN₁S-X6³)</p> 	<p>JG002B Adapter JG002E Dial Torque Gauge (10~90gf•cm) JG002F (60~600gf•cm)</p> 	<p>JG005 Post Adjustment Screwdriver Part No. SV-TG0-030-000 <small>(small)</small></p> 
<p>JG153 X Value Adjustment Screwdriver</p> 	<p>JG022 Master Plane</p> 	<p>JG024A Reel Disk Height Adjustment Jig</p> 	<p>JG100A Torque Tape (VHT-063)</p> 
<p>JG154 Cable</p> 	<p>Tentelometer</p> 		

Part No.	Remarks
JG001	Monoscope, 6KHz (For 2 heads model)
JG001A	Color Bar, 1KHz (For 2 heads model)
JG001Q	Hi-Fi Audio (For 2 heads Hi-Fi model)
JG001T	X Value Adjustment (For 2 heads model)
JG001B	Monoscope, 6KHz (For 4 heads model)
JG001I	Color Bar, 1KHz (For 4 heads model)
JG001P	Hi-Fi Audio (For 4 heads Hi-Fi model)
JG001S	X Value Adjustment (For 4 heads model)
JG002B	VSR Torque, Brake Torque (S Reel/T Reel Ass'y)
JG002E	Brake Torque (T Reel Ass'y)
JG002F	VSR Torque, Brake Torque (S Reel)
JG005	Guide Roller Adjustment
JG153	X Value Adjustment
JG022/JG024A	Reel Disk Height Adjustment
JG100A	Playback Torque, Back Tension Torque During Playback
JG154	Used to connect the test point of SERVICE and GROUND

PREPARATION FOR SERVICING

- Short circuit between **TP1001** and **Ground** with the cable JG154.
(Refer to MAJOR COMPONENTS LOCATION GUIDE)
The EOT, BOT and Reel Sensor do not work at this moment.
At that time, the STOP/EJECT button is available to insert and eject the Cassette Tape.

MECHANICAL ADJUSTMENTS



1. CONFIRMATION AND ADJUSTMENT

Read the following NOTES before starting work.

- Place an object which weighs between 450g~500g on the Cassette Tape to keep it steady when you want to make the tape run without the Cassette Holder. (Do not place an object which weighs over 500g.)
- When you activate the deck without the Cassette Holder, short circuit between **TP1001** and **GND**. (Refer to **ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE**) In this condition the BOT/EOT/Reel Sensor will not function.



1-1: CONFIRMATION AND ADJUSTMENT OF REEL DISK HEIGHT

1. Turn on the power and set to the STOP mode.
2. Set the master plane (**JG022**) and reel disk height adjustment jig (**JG024A**) on the mechanism framework, taking care not to scratch the drum, as shown in **Fig. 1-1-A**.
3. Confirm that "A" of the reel disk is lower than "B" of the reel disk height adjustment jig (**JG024A**), and is higher than "C". If it is not enough height, adjust to $10(+0.2, -0)$ mm with the height adjustment washer.
4. Adjust the other reel in the same way.

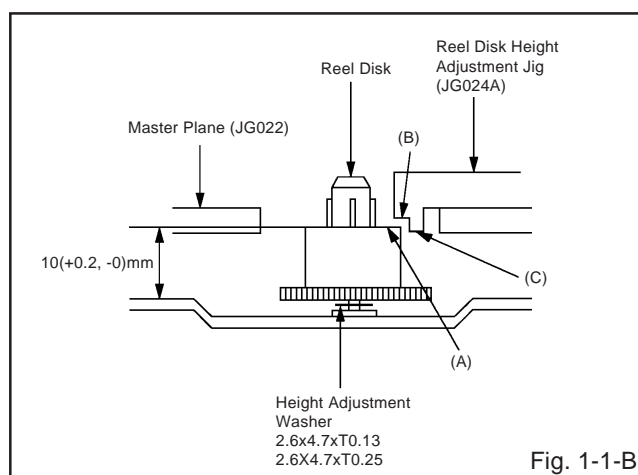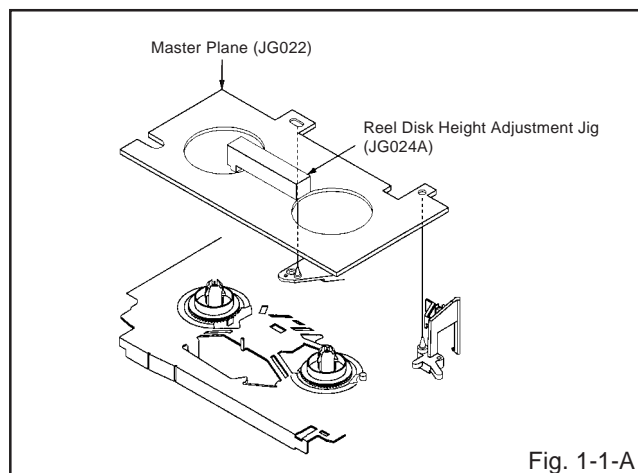

1-2: CONFIRMATION AND ADJUSTMENT OF TENSION POST POSITION

1. Set to the PLAY mode.
2. Adjust the Tension Adjust until the edge of the Tension Arm is positioning within 0.5mm range from the standard line center of Main Chassis. After this adjustment, confirm that the cut position is located in "A" area as shown in **Fig. 1-2-B**. If it is located in "B" area, adjust again.
3. While turning the S Reel clockwise, confirm that the edge of the Tension Arm is located in the position described above.

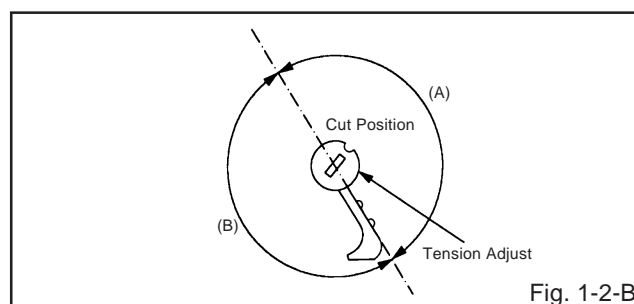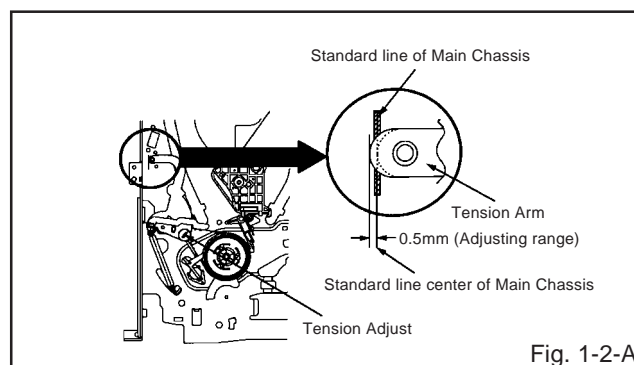


1-3: CONFIRMATION OF PLAYBACK TORQUE AND BACK TENSION TORQUE DURING PLAYBACK

1. Load a video tape (T-120) recorded in standard speed mode. Set the unit to the PLAY mode.
2. Install the tentelometer as shown in **Fig. 1-3**. Confirm that the meter indicates 20 ± 2 gf in the beginning of playback.

• USING A CASSETTE TYPE TORQUE TAPE (**JG100A**)

1. After confirmation and adjustment of Tension Post position (Refer to item 1-2), load the cassette type torque tape (**JG100A**) and set to the PLAY mode.
2. Confirm that the right meter of the torque tape indicates $60 \sim 110$ gf•cm during playback in SP mode.
3. Confirm that the left meter of the torque tape indicates $25 \sim 40$ gf•cm during playback in SP mode.

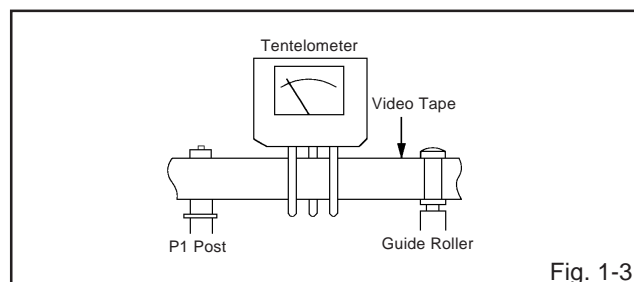

MECHANICAL ADJUSTMENTS

1-4: CONFIRMATION OF VSR TORQUE

1. Operate within 4~5 seconds after the reel disk begins to turn.
2. Install the Torque Gauge (JG002F) and Adapter (JG002B) on the S Reel. Set to the Rewind mode. (Refer to Fig.1-4)
3. Then, confirm that it indicates 120~180gf•cm.

NOTE

Install the Torque Gauge on the reel disk firmly. Press the REW button to turn the reel disk.


1-5: CONFIRMATION OF REEL BRAKE TORQUE

(S Reel Brake) (Refer to Fig. 1-4)

1. Set to the STOP mode.
2. Move the Idler Ass'y from the S Reel.
3. Install the Torque Gauge (JG002F) and Adapter (JG002B) on the S Reel. Turn the Torque Gauge (JG002F) clockwise.
4. Then, confirm that it indicates 60~100gf•cm.

(T Reel Brake) (Refer to Fig. 1-4)

1. Set to the STOP mode.
2. Move the Idler Ass'y from the T Reel.
3. Install the Torque Gauge (JG002E) and Adapter (JG002B) on the T reel. Turn the Torque Gauge (JG002E) counterclockwise.
4. Then, confirm that it indicates 45~70gf•cm.

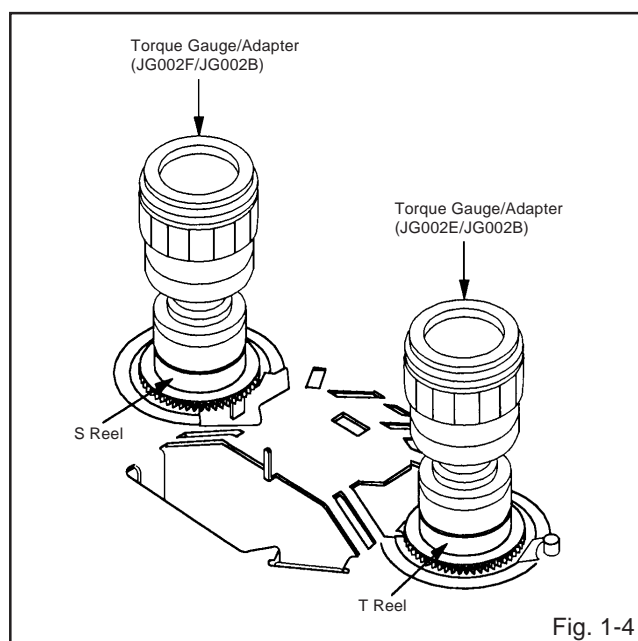

NOTE

If the torque is out of the range, replace the following parts.

Check item	Replacement Part
1-4	Idler Ass'y/Clutch Ass'y
1-5	T Brake Spring/Tension Spring

2. CONFIRMATION AND ADJUSTMENT OF TAPE RUNNING MECHANISM



Tape Running Mechanism is adjusted precisely at the factory. Adjustment is not necessary as usual. When you replace the parts of the tape running mechanism because of long term usage or failure, the confirmation and adjustment are necessary.

2-1: GUIDE ROLLER

1. Playback the VHS Alignment Tape (JG001 or JG001B). (Refer to SERVICING FIXTURE AND TOOLS)
2. Connect CH-1 of the oscilloscope to TP4001 (Envelope) and CH-2 to TP1002 (SW Pulse).
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Trigger with SW Pulse and observe the envelope. (Refer to Fig. 2-1-A)
5. When observing the envelope, adjust the Adjusting Driver (JG005) slightly until the envelope will be flat. Even if you press the Tracking Button, adjust so that flatness is not moved so much.
6. Adjust so that the A : B ratio is better than 3 : 2 as shown in Fig. 2-1-B, even if you press the Tracking Button to move the envelope (The envelope waveform will begin to decrease when you press the Tracking Button).
7. Adjust the PG shifter during playback. (Refer to the ELECTRICAL ADJUSTMENTS)

NOTE

After adjustment, confirm and adjust A/C head. (Refer to item 2-2)


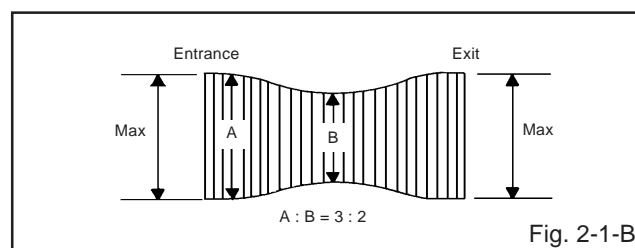
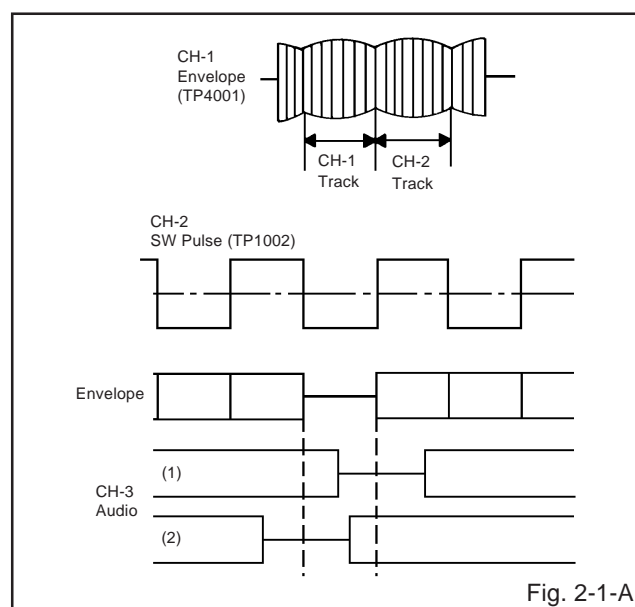


MECHANICAL ADJUSTMENTS

2-2: CONFIRMATION AND ADJUSTMENT OF AUDIO/ CONTROL HEAD

When the Tape Running Mechanism does not work well, adjust the following items.

1. Playback the VHS Alignment Tape (**JG001** or **JG001B**).
(Refer to **SERVICING FIXTURE AND TOOLS**)
2. Confirm that the reflected picture of stamp mark is appeared on the tape prior to P4 Post as shown in **Fig. 2-2-A**.
 - a) When the reflected picture is distorted, turn the screw ① clockwise until the distortion is disappeared.
 - b) When the reflected picture is not distorted, turn the screw ① counterclockwise until little distortion is appeared, then adjust the a).
3. Turn the screw ② to set the audio level to maximum.
4. Confirm that the bottom of the Audio/ Control Head and the bottom of the tape is shown in **Fig. 2-2-C**.
 - c) When the height is not correct, turn the screw ③ to adjust the height. Then, adjust the 1~3 again.

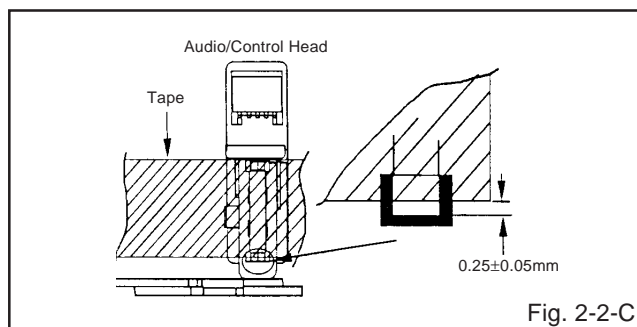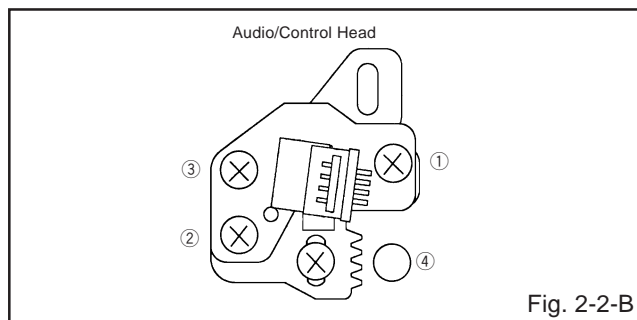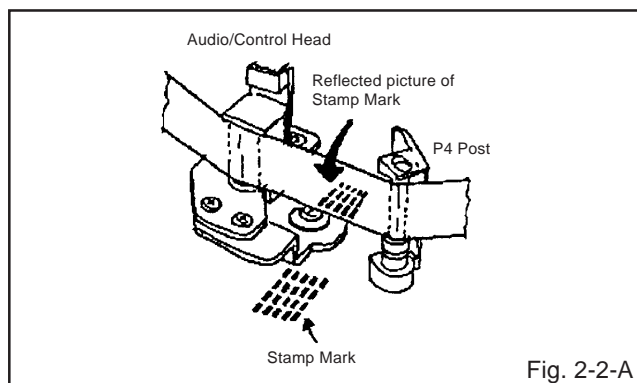

2-3: TAPE RUNNING ADJUSTMENT (X VALUE ADJUSTMENT)


1. Confirm and adjust the height of the Reel Disk.
(Refer to item 1-1)
2. Confirm and adjust the position of the Tension Post.
(Refer to item 1-2)
3. Adjust the Guide Roller. (Refer to item 2-1)
4. Confirm and adjust the Audio/Control Head.
(Refer to item 2-2)
5. Connect CH-1 of the oscilloscope to **TP4001**, CH-2 to **TP1002** and CH-3 to **HOT side of Audio Out Jack**.
6. Playback the VHS Alignment Tape (**JG001S** or **JG001T**).
(Refer to **SERVICING FIXTURE AND TOOLS**)
7. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
8. Set the X Value adjustment driver (**JG153**) to the ④ of **Fig. 2-2-B**. Adjust X value so that the envelope waveform output becomes maximum. Check if the relation between Audio and Envelope waveform becomes (1) or (2) of **Fig. 2-1-A**.

2-4: CONFIRM HI-FI AUDIO (Hi-Fi model only)

1. Connect CH-1 of the oscilloscope to **TP4001**, CH-2 to **TP1002** and CH-3 to the **Hi-Fi Audio Out Jack**.
2. Playback the VHS Alignment Tape (**JG001P** or **JG001Q**).
(Refer to **SERVICING FIXTURE AND TOOLS**)
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Press the Tracking Up button and count number of steps which the audio output is changed from Hi-Fi (10KHz) to MONO (6KHz).
5. Press the Tracking Down button and count number of steps which the audio output is changed from Hi-Fi (10KHz) to MONO (6KHz).
6. Confirm that the difference between these counted steps number in the above items are within 2 steps. If the difference are more than 3 steps, do Tape Running Adjustment again. (Refer to item 2-3)

MECHANICAL ADJUSTMENTS

3. MECHANISM ADJUSTMENT PARTS LOCATION GUIDE

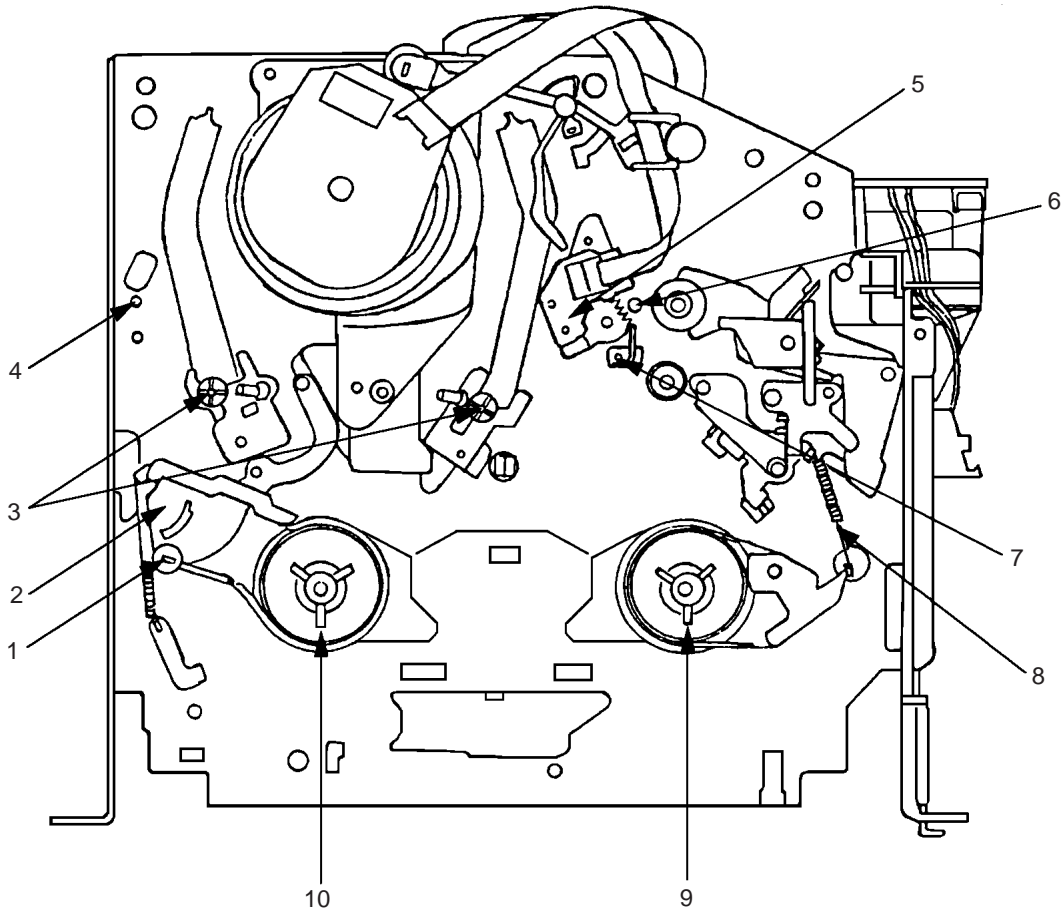

- | | |
|-----------------------|-----------------------------------|
| 1. Tension Adjust | 6. X value adjustment driver hole |
| 2. Tension Arm | 7. P4 Post |
| 3. Guide Roller | 8. T Brake Spring |
| 4. P1 Post | 9. T Reel |
| 5. Audio/Control Head | 10. S Reel |

ELECTRICAL ADJUSTMENTS

Read and perform this adjustment when repairing the circuits or replacing electrical parts or PCB assemblies.

1. BASIC ADJUSTMENT

CAUTION

When replacing IC's or transistors, use only specified silicon grease (**YG6260M**).
(To prevent the damage to IC's and transistors.)



1-1: PG SHIFTER

CONDITIONS

MODE-PLAYBACK
Input Signal-Alignment Tape (**JG001B**)


INSTRUCTIONS

1. Connect CH-1 on the oscilloscope to **TP4002** and CH-2 to **TP4201**.
2. Playback the alignment tape. (**JG001B**)
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. While pressing the CH UP button on the set, press the STOP button on the set for more than 2 seconds. If the indicator ATR disappear's, the adjustment is finished.
(Refer to Fig. 1-1-A, B)

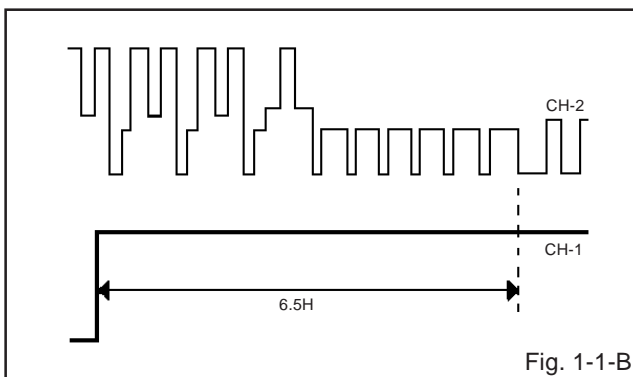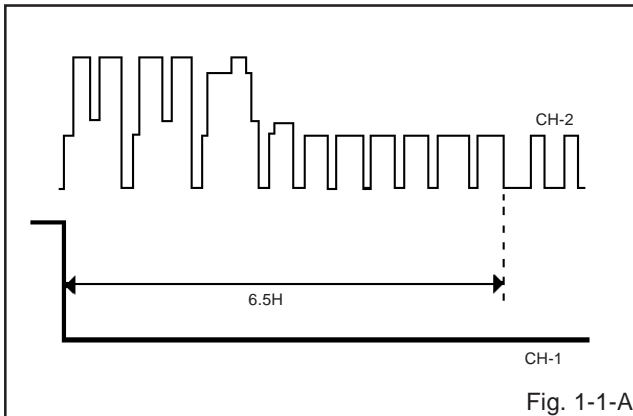


ELECTRICAL ADJUSTMENTS


2. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE

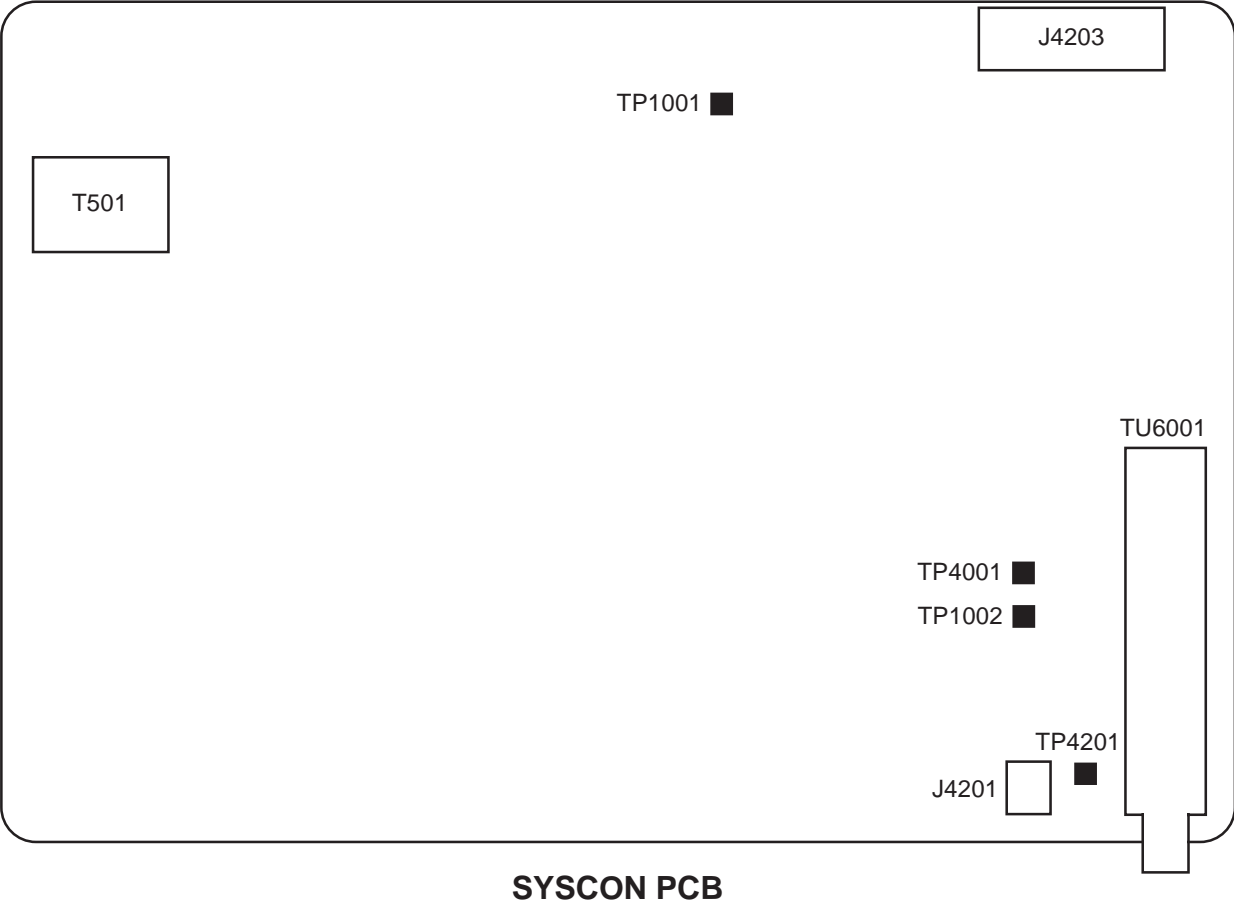


Y/C/AUDIO/CCD/HEAD AMP BLOCK DIAGRAM

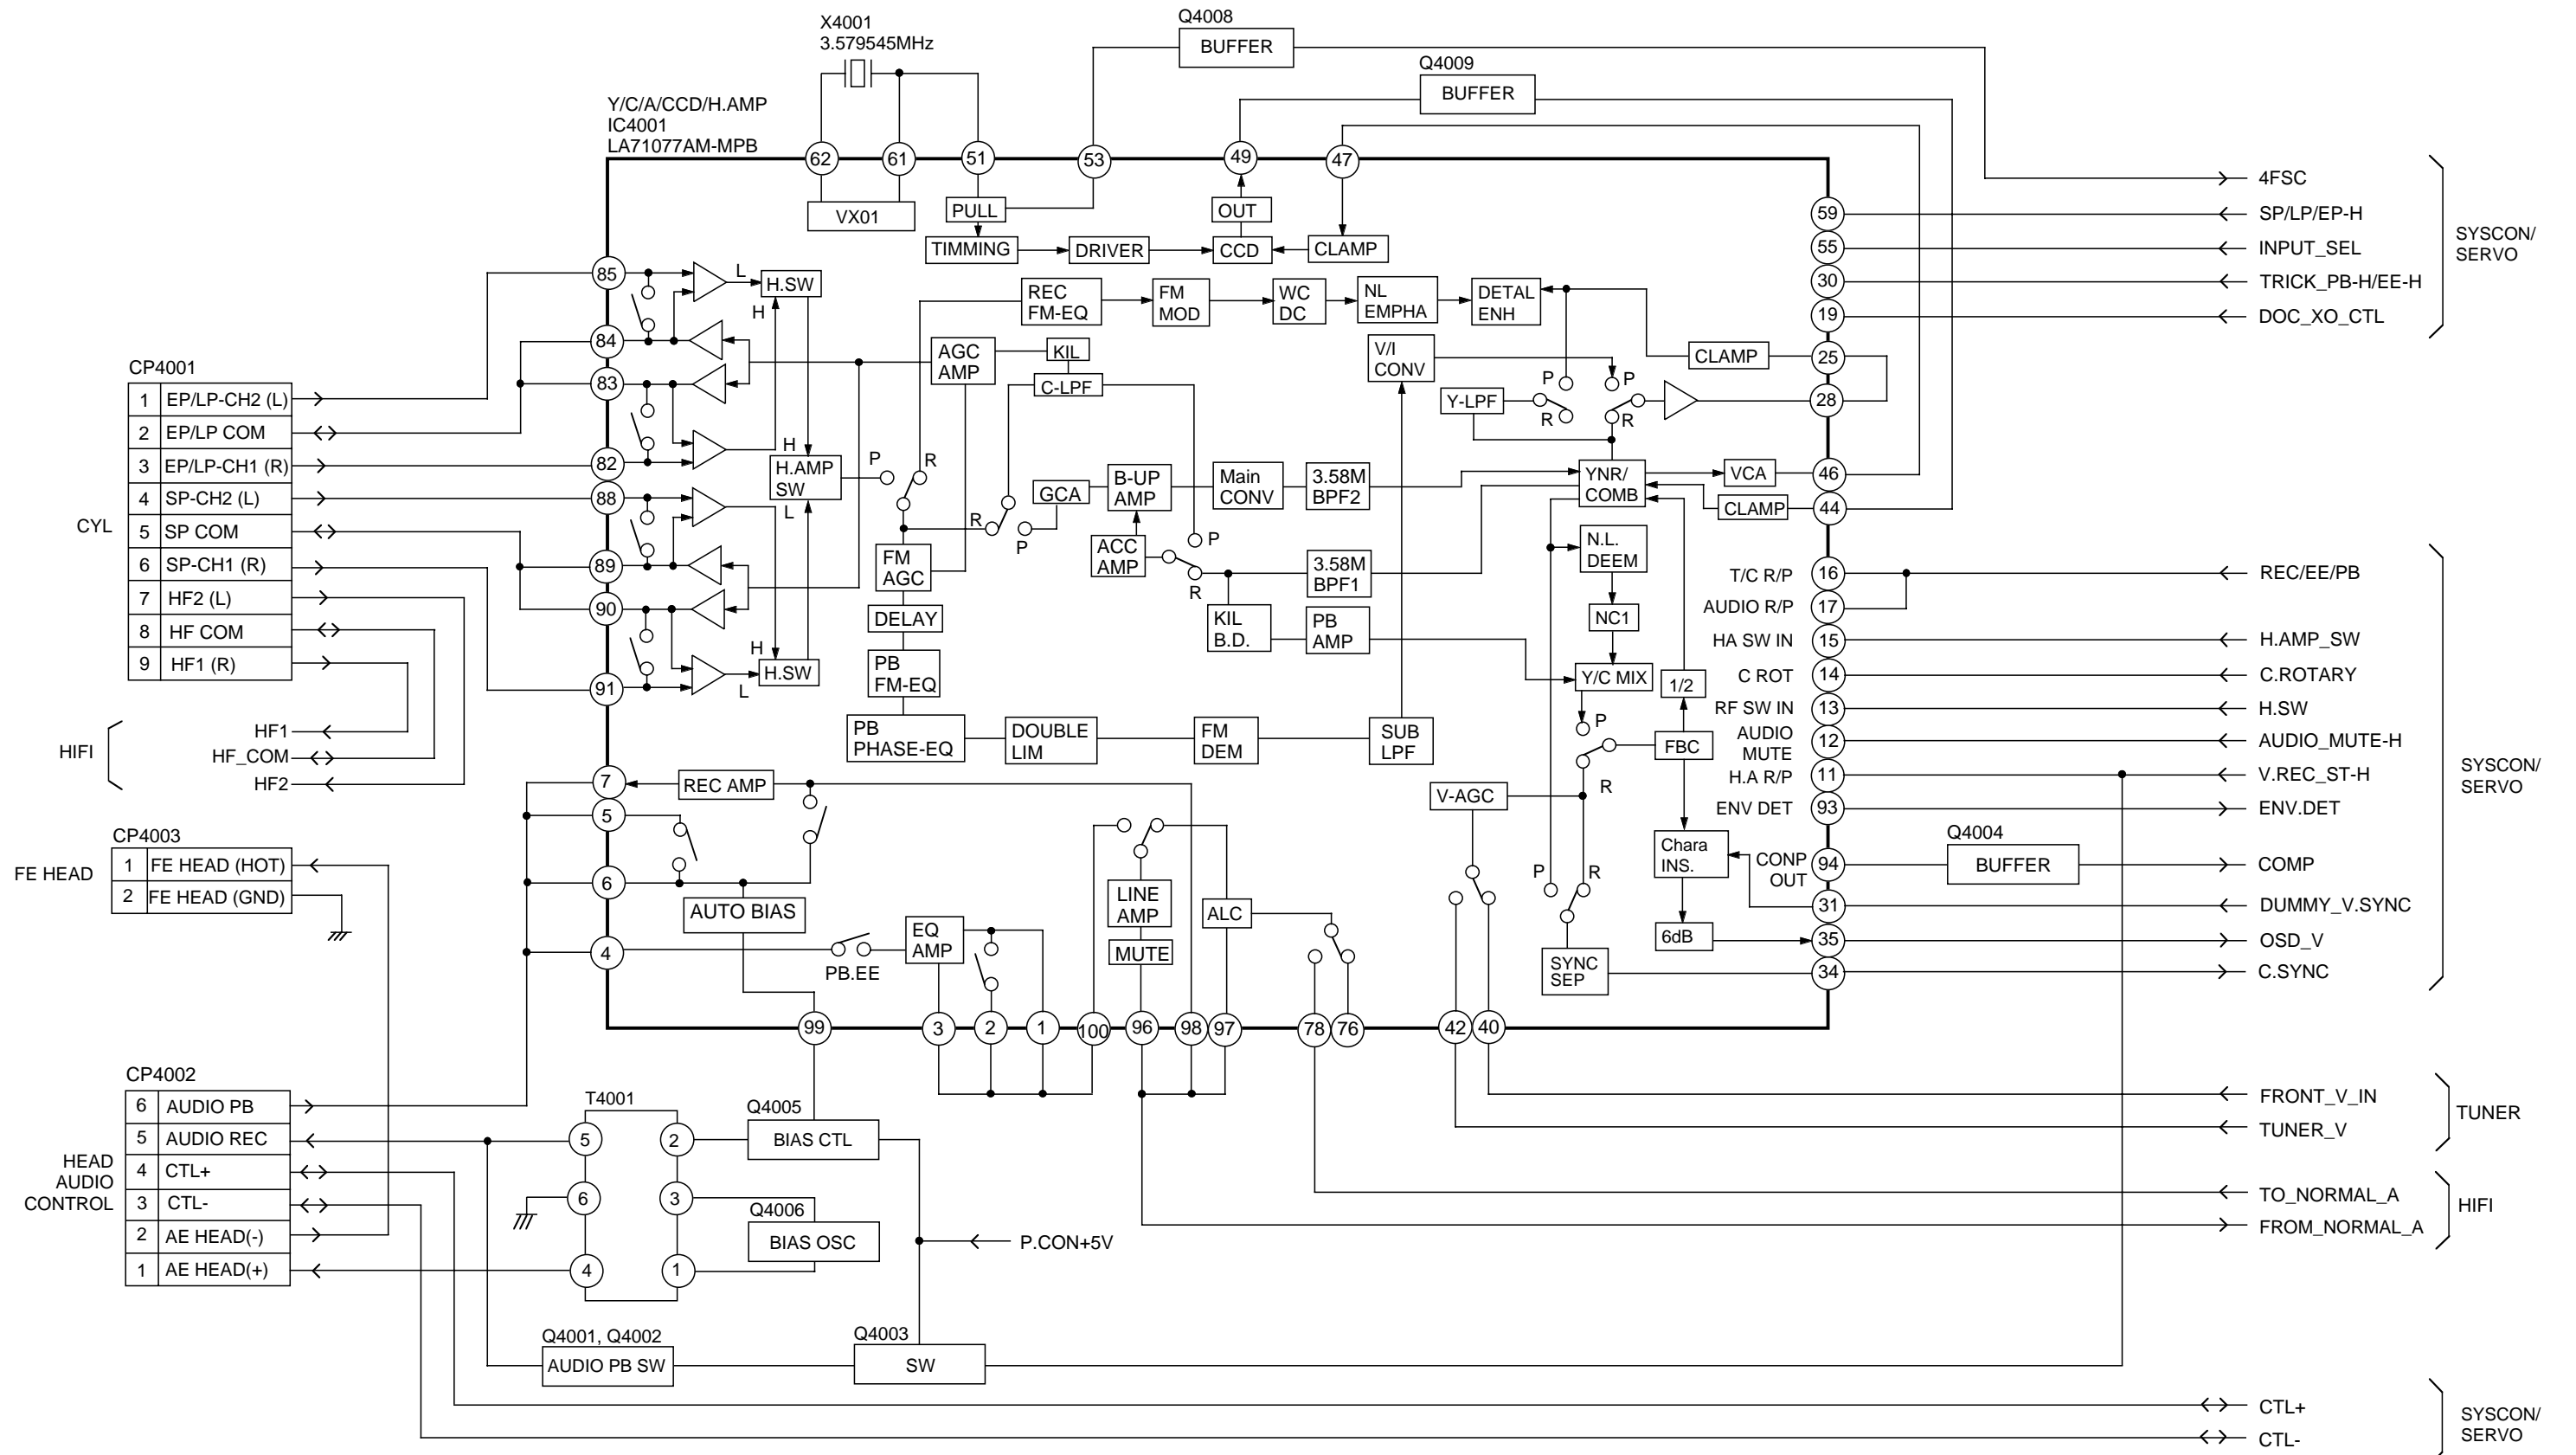


SYSTEM CONTROL/SERVO BLOCK DIAGRAM

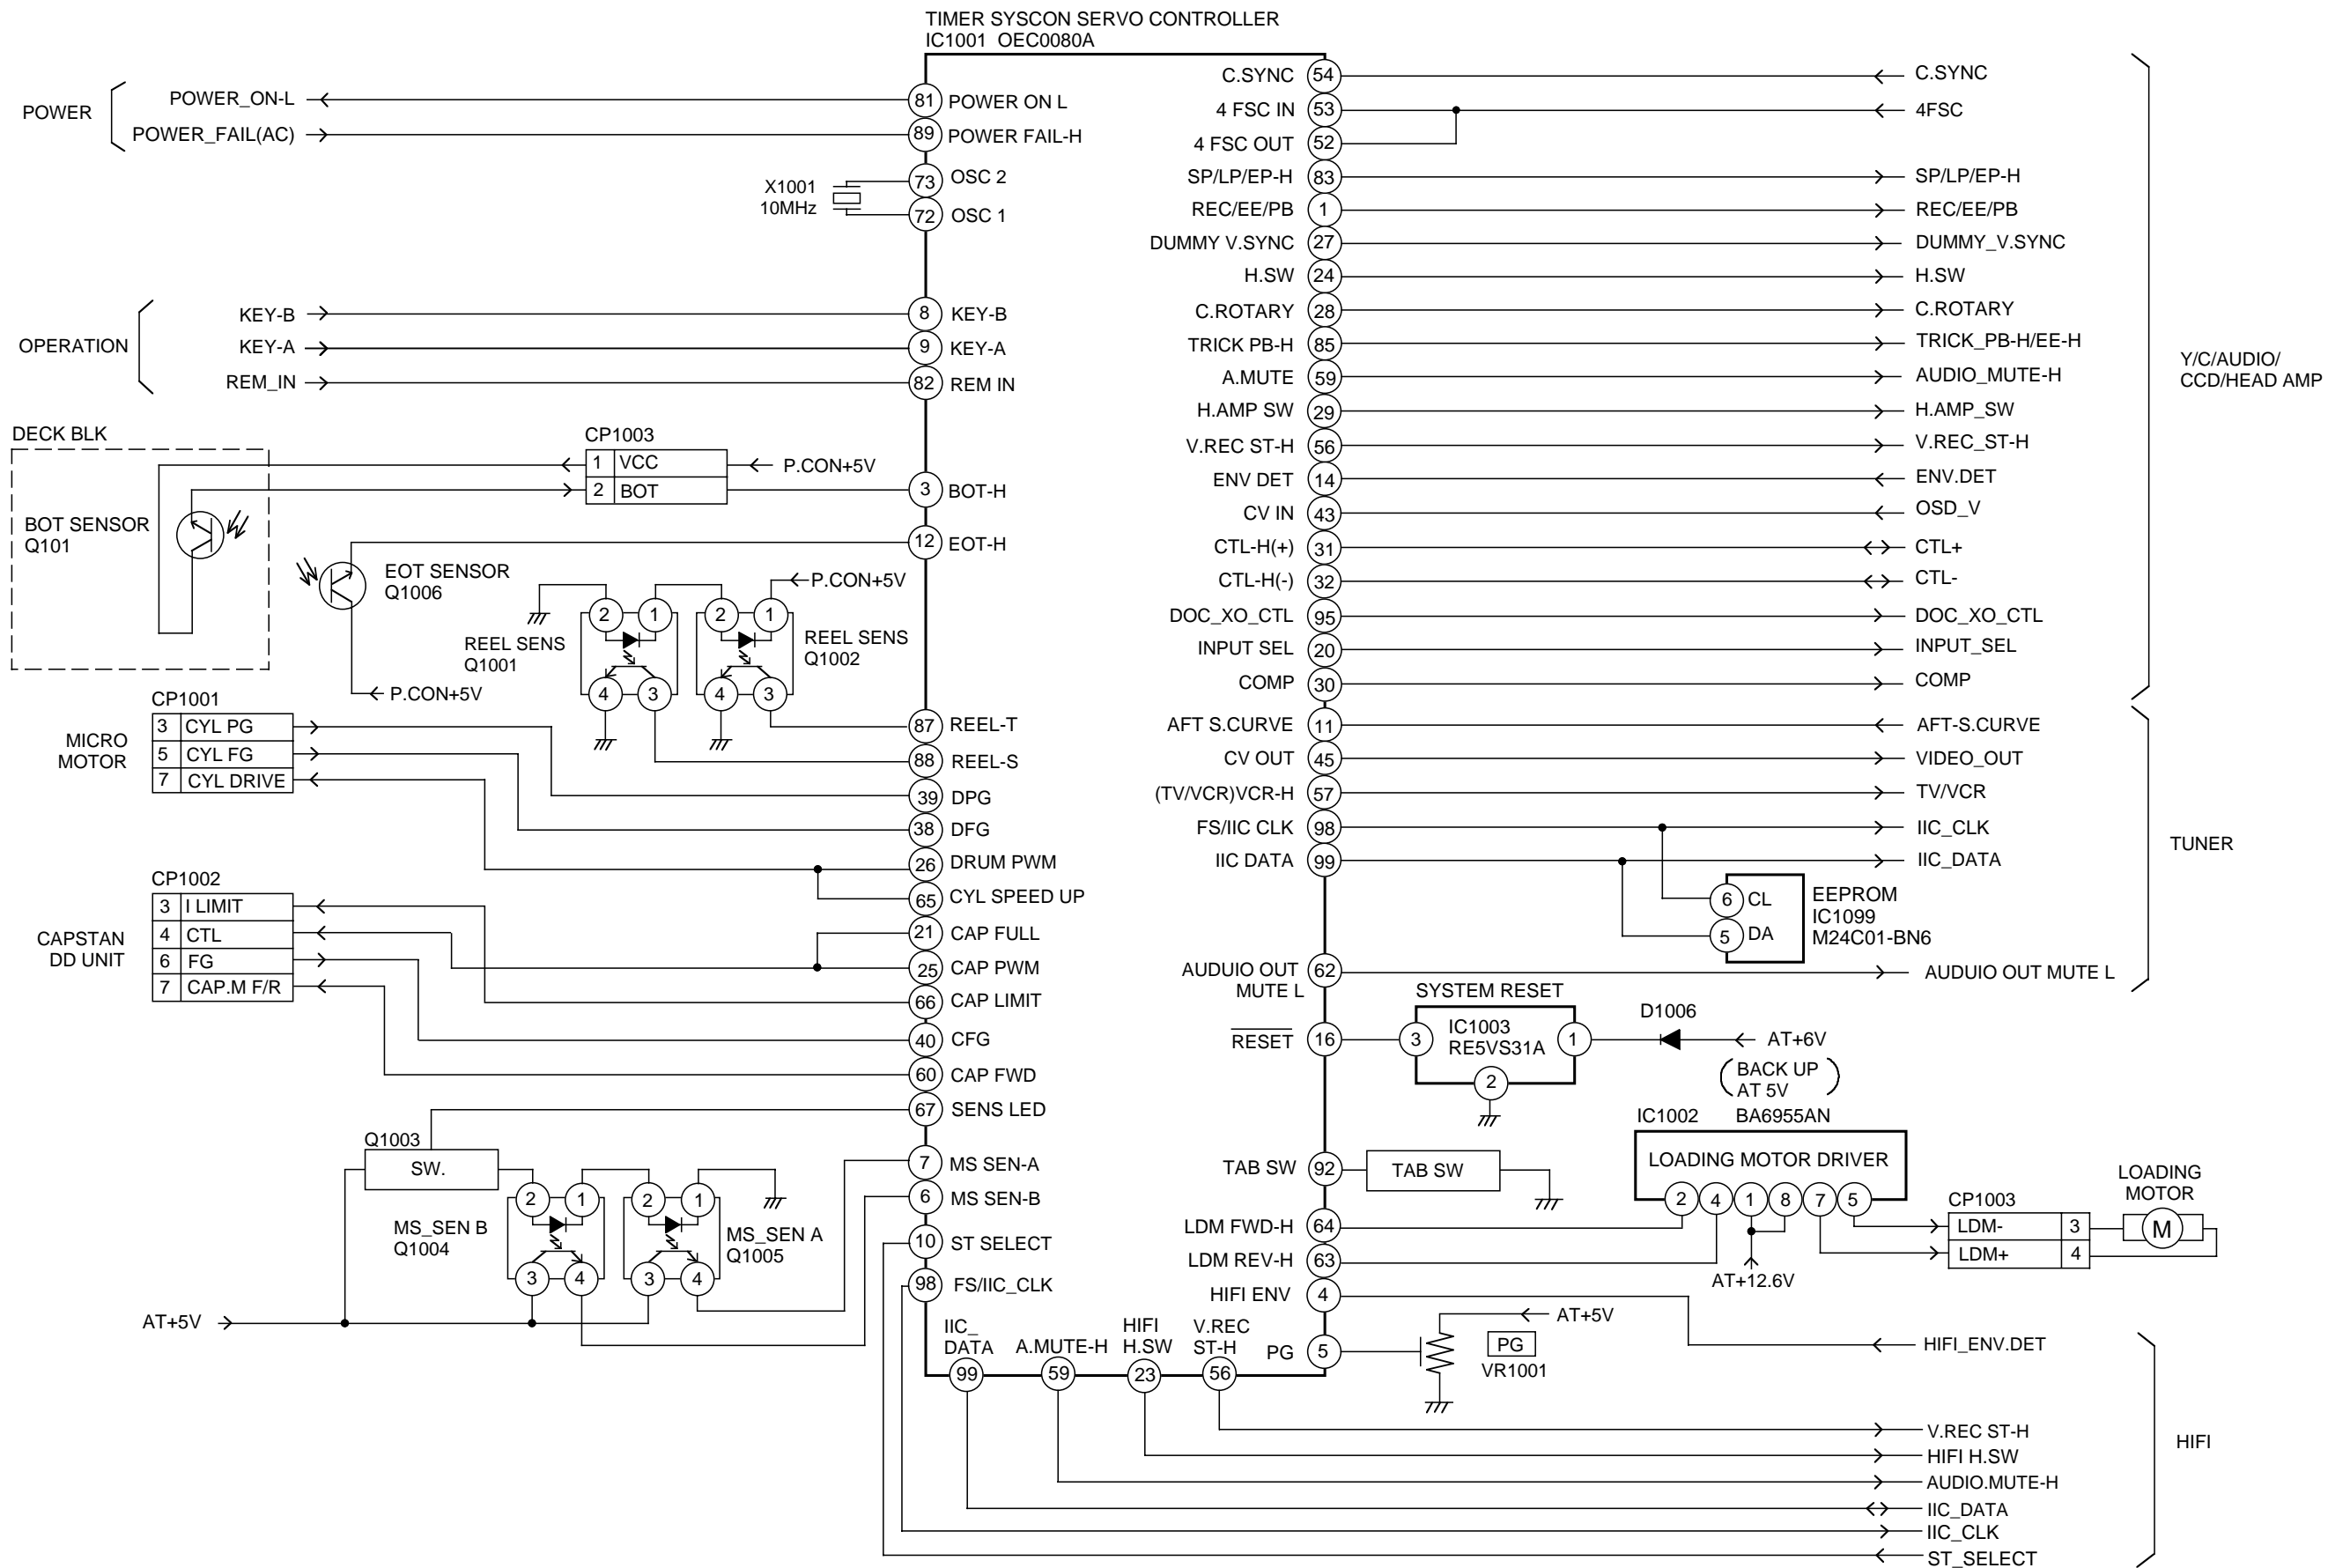


TUNER BLOCK DIAGRAM

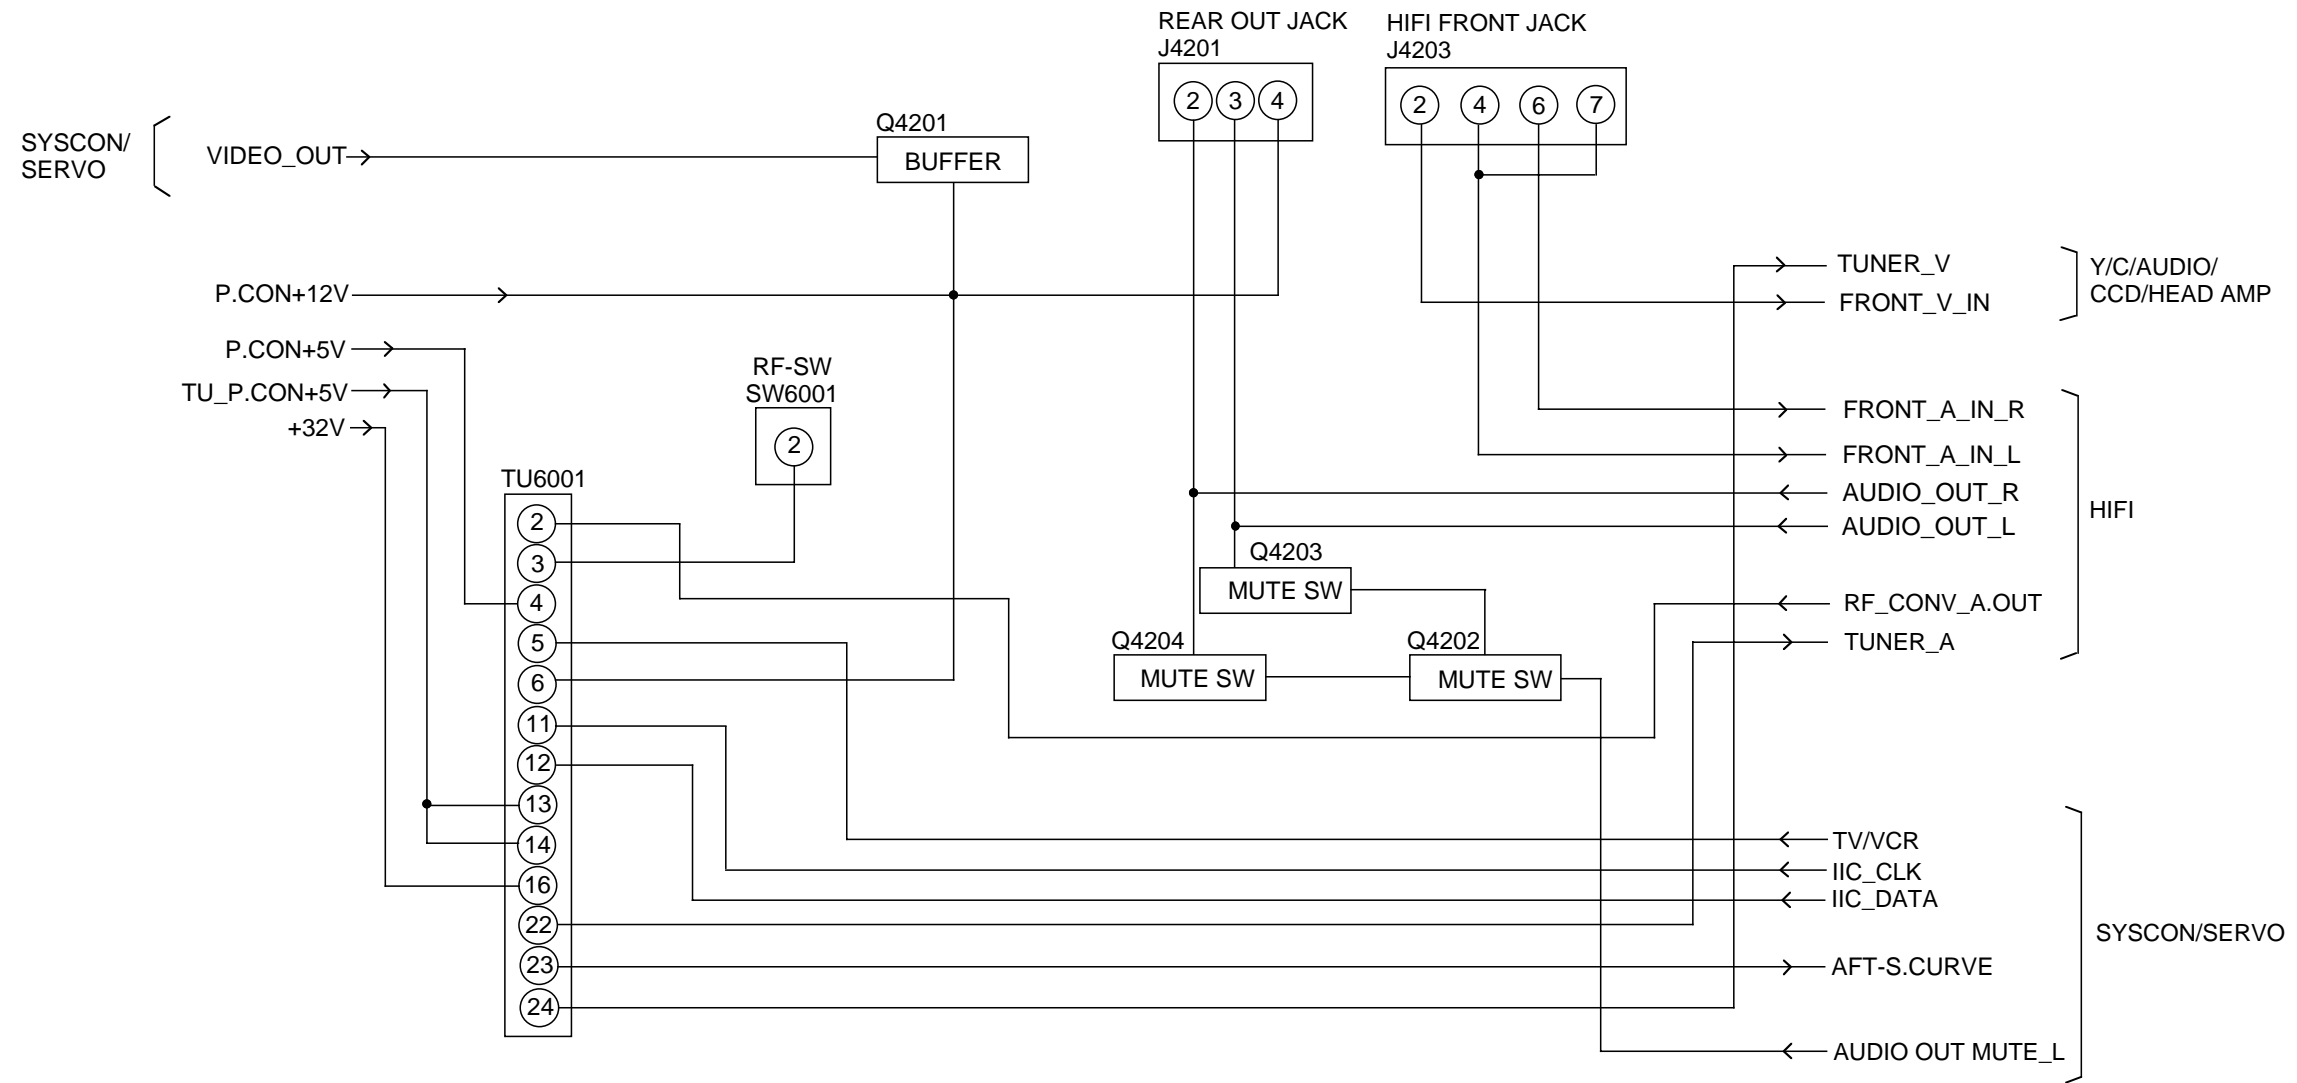


HIFI BLOCK DIAGRAM

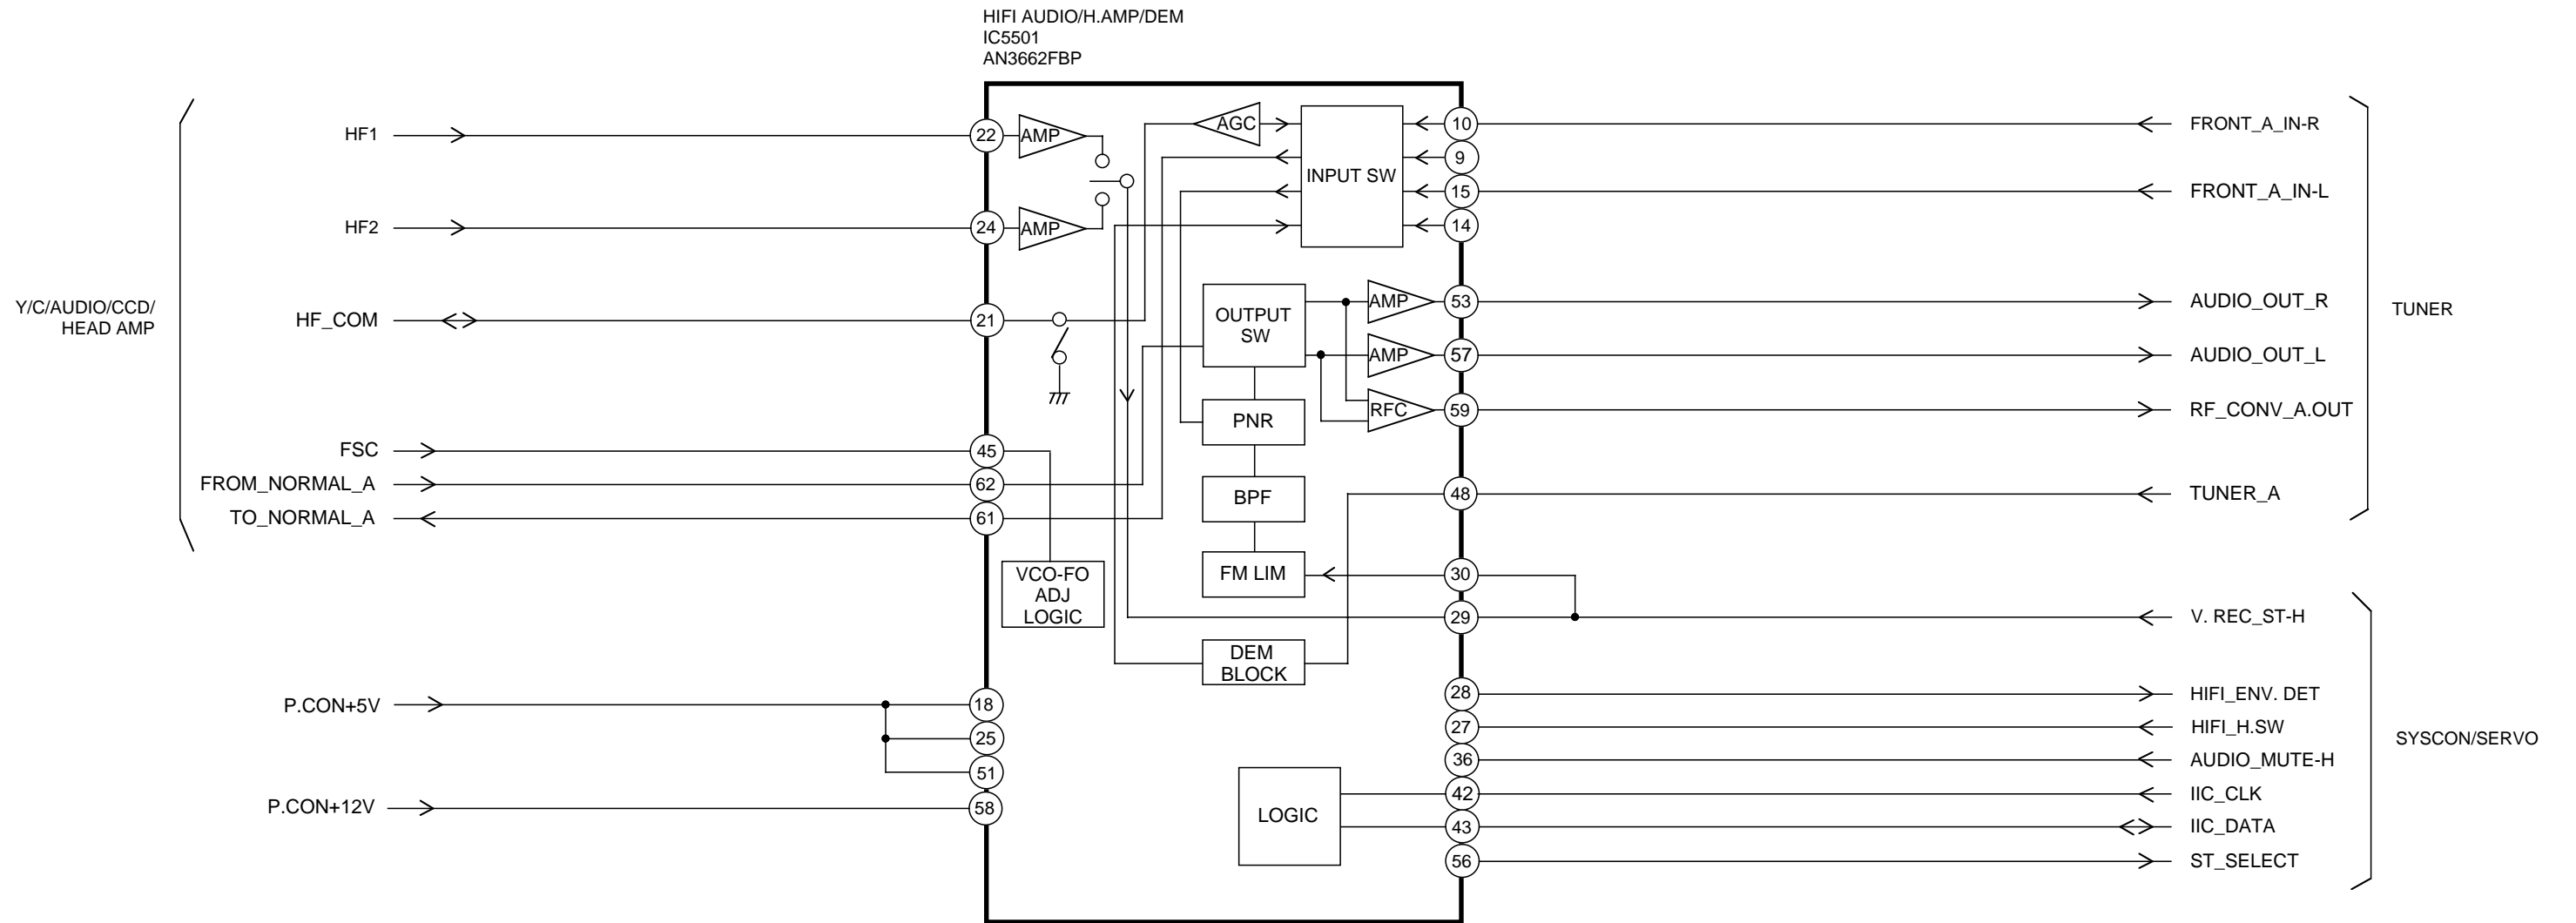

OPERATION BLOCK DIAGRAM

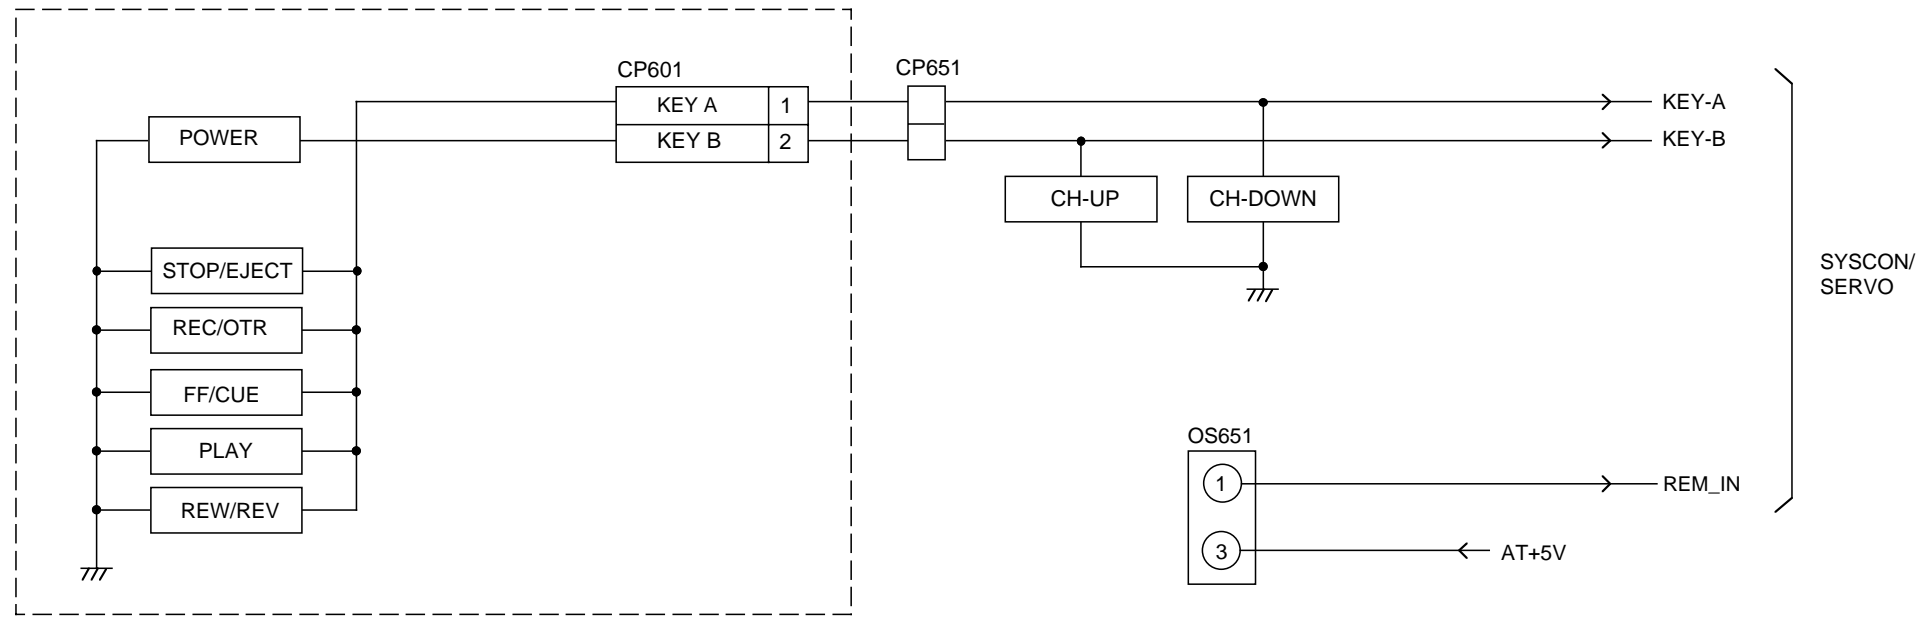



POWER BLOCK DIAGRAM

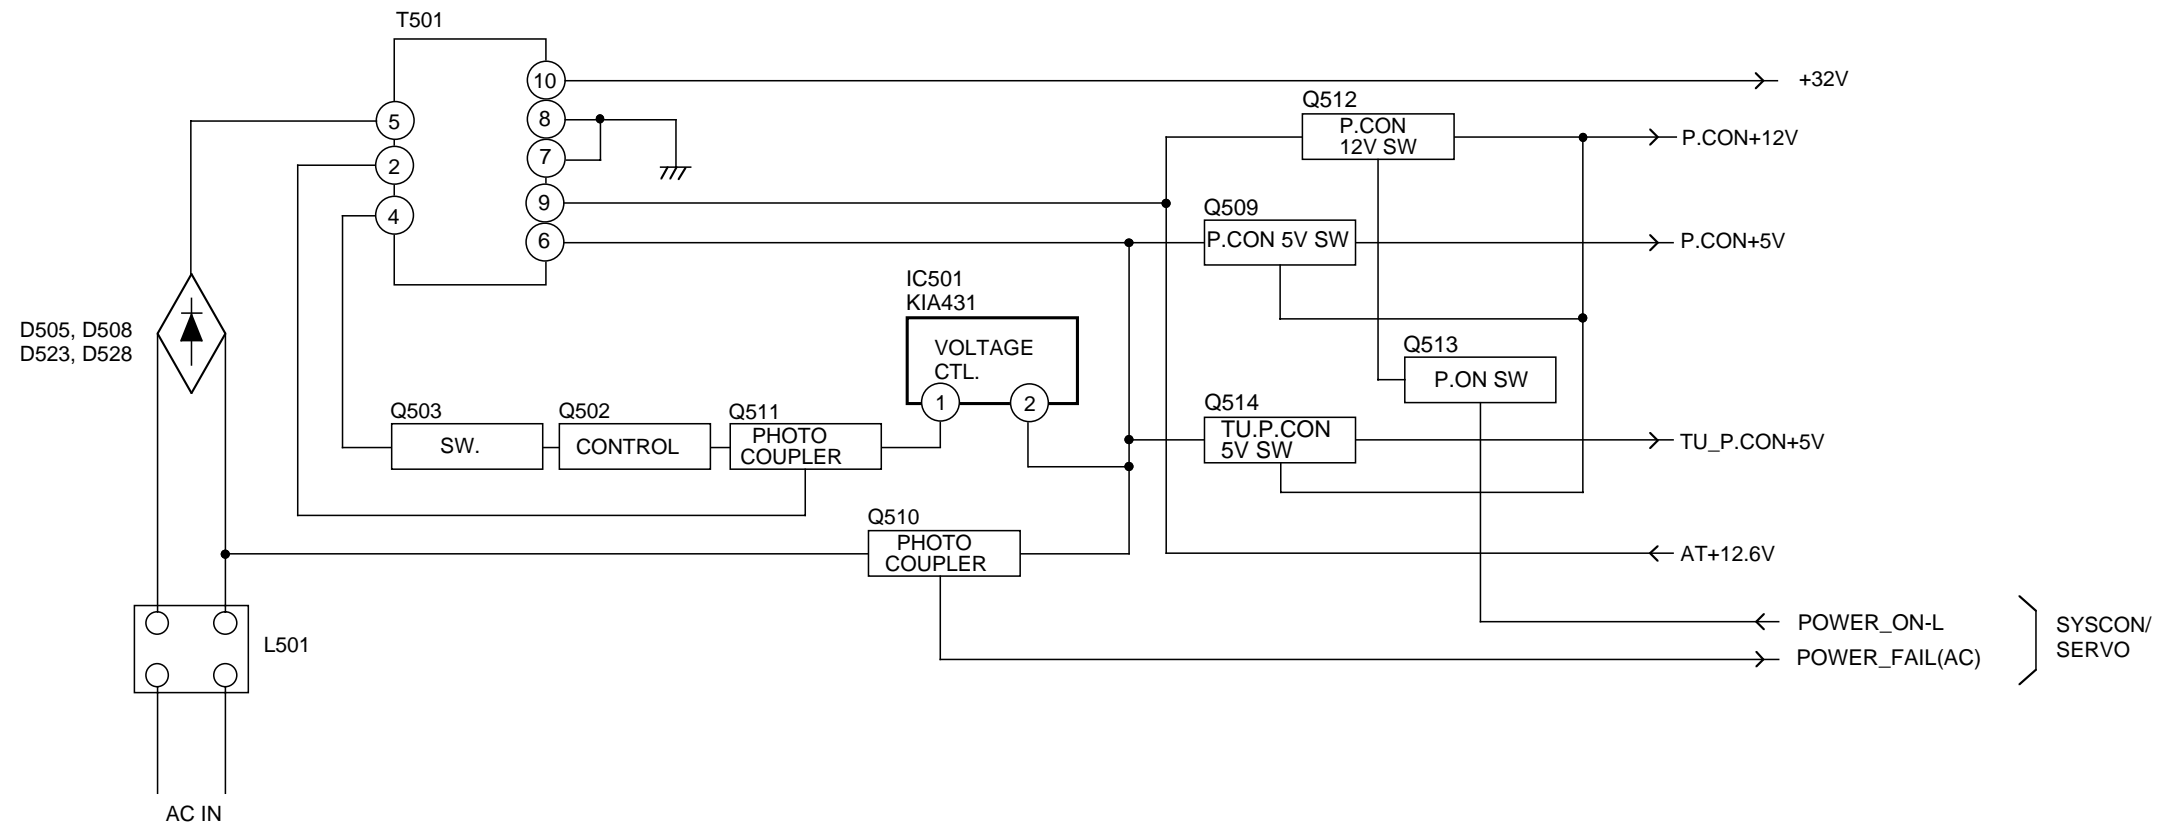


PRINTED CIRCUIT BOARDS

SYSCON/OPERATION (INSERTED PARTS) SOLDER SIDE


DECK SOLDER SIDE

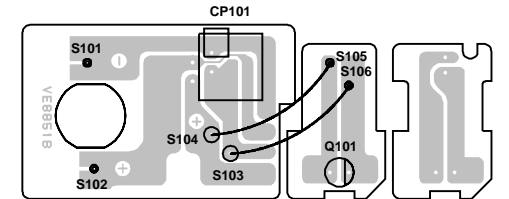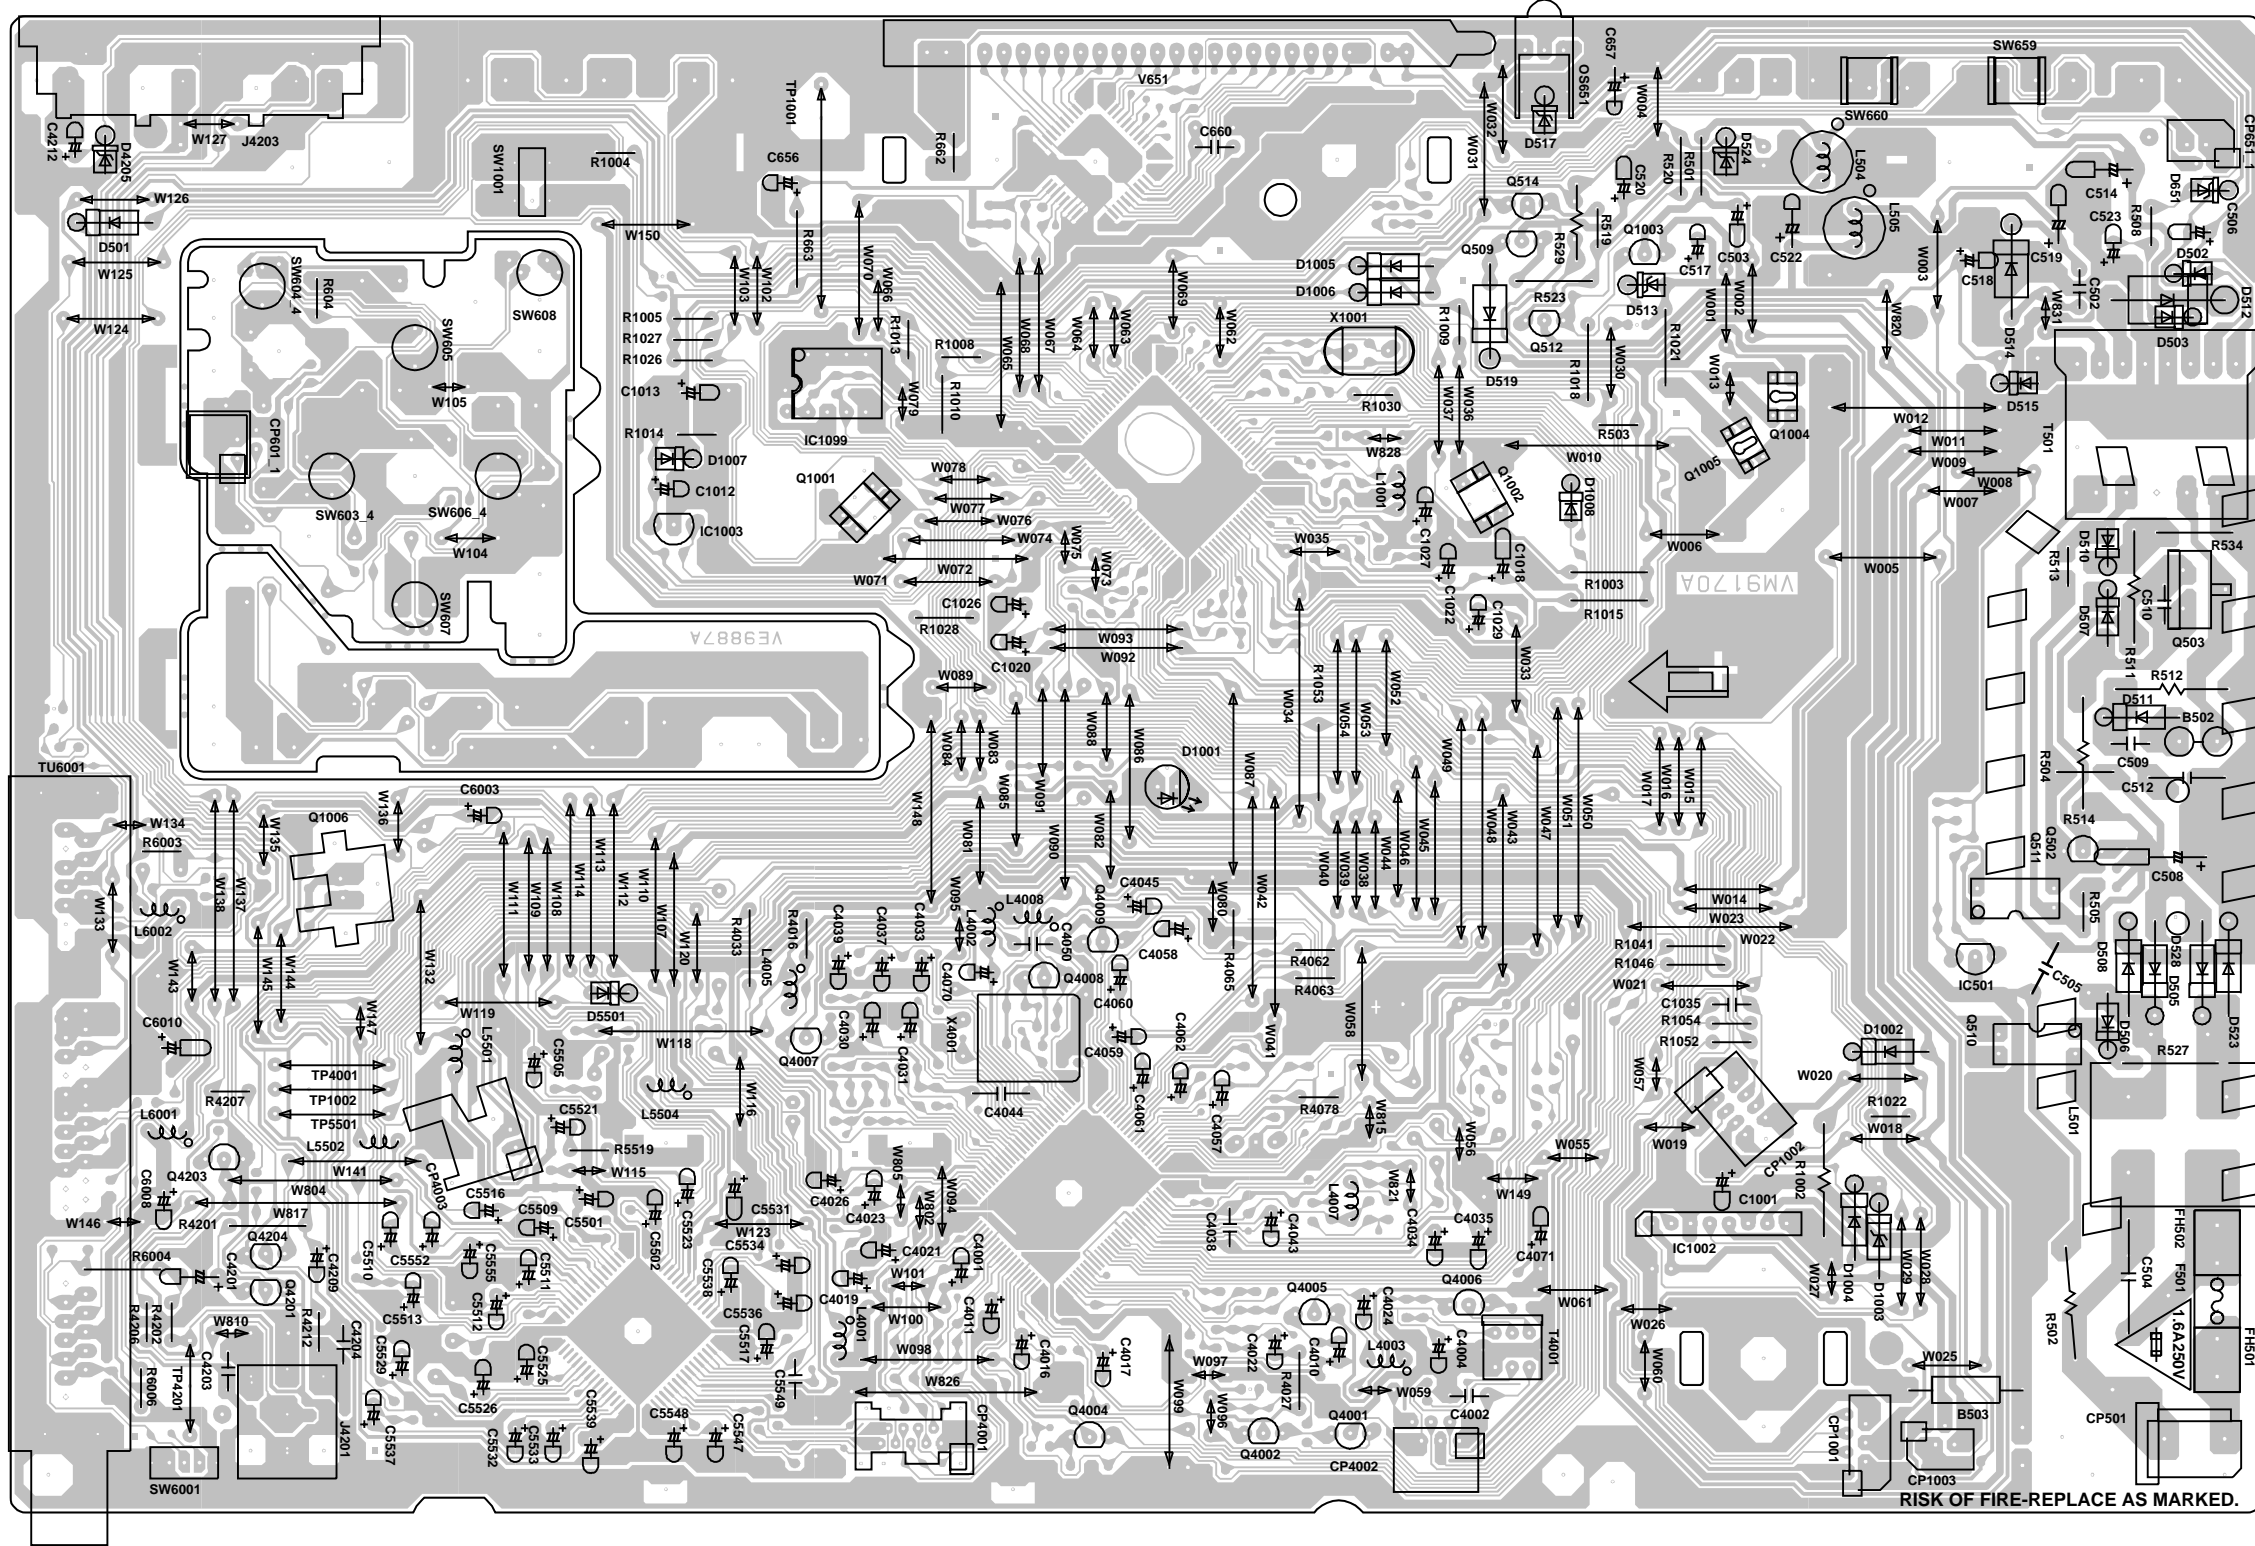

PRINTED CIRCUIT BOARDS
SYSCON/OPERATION (CHIP MOUNTED PARTS)
SOLDER SIDE

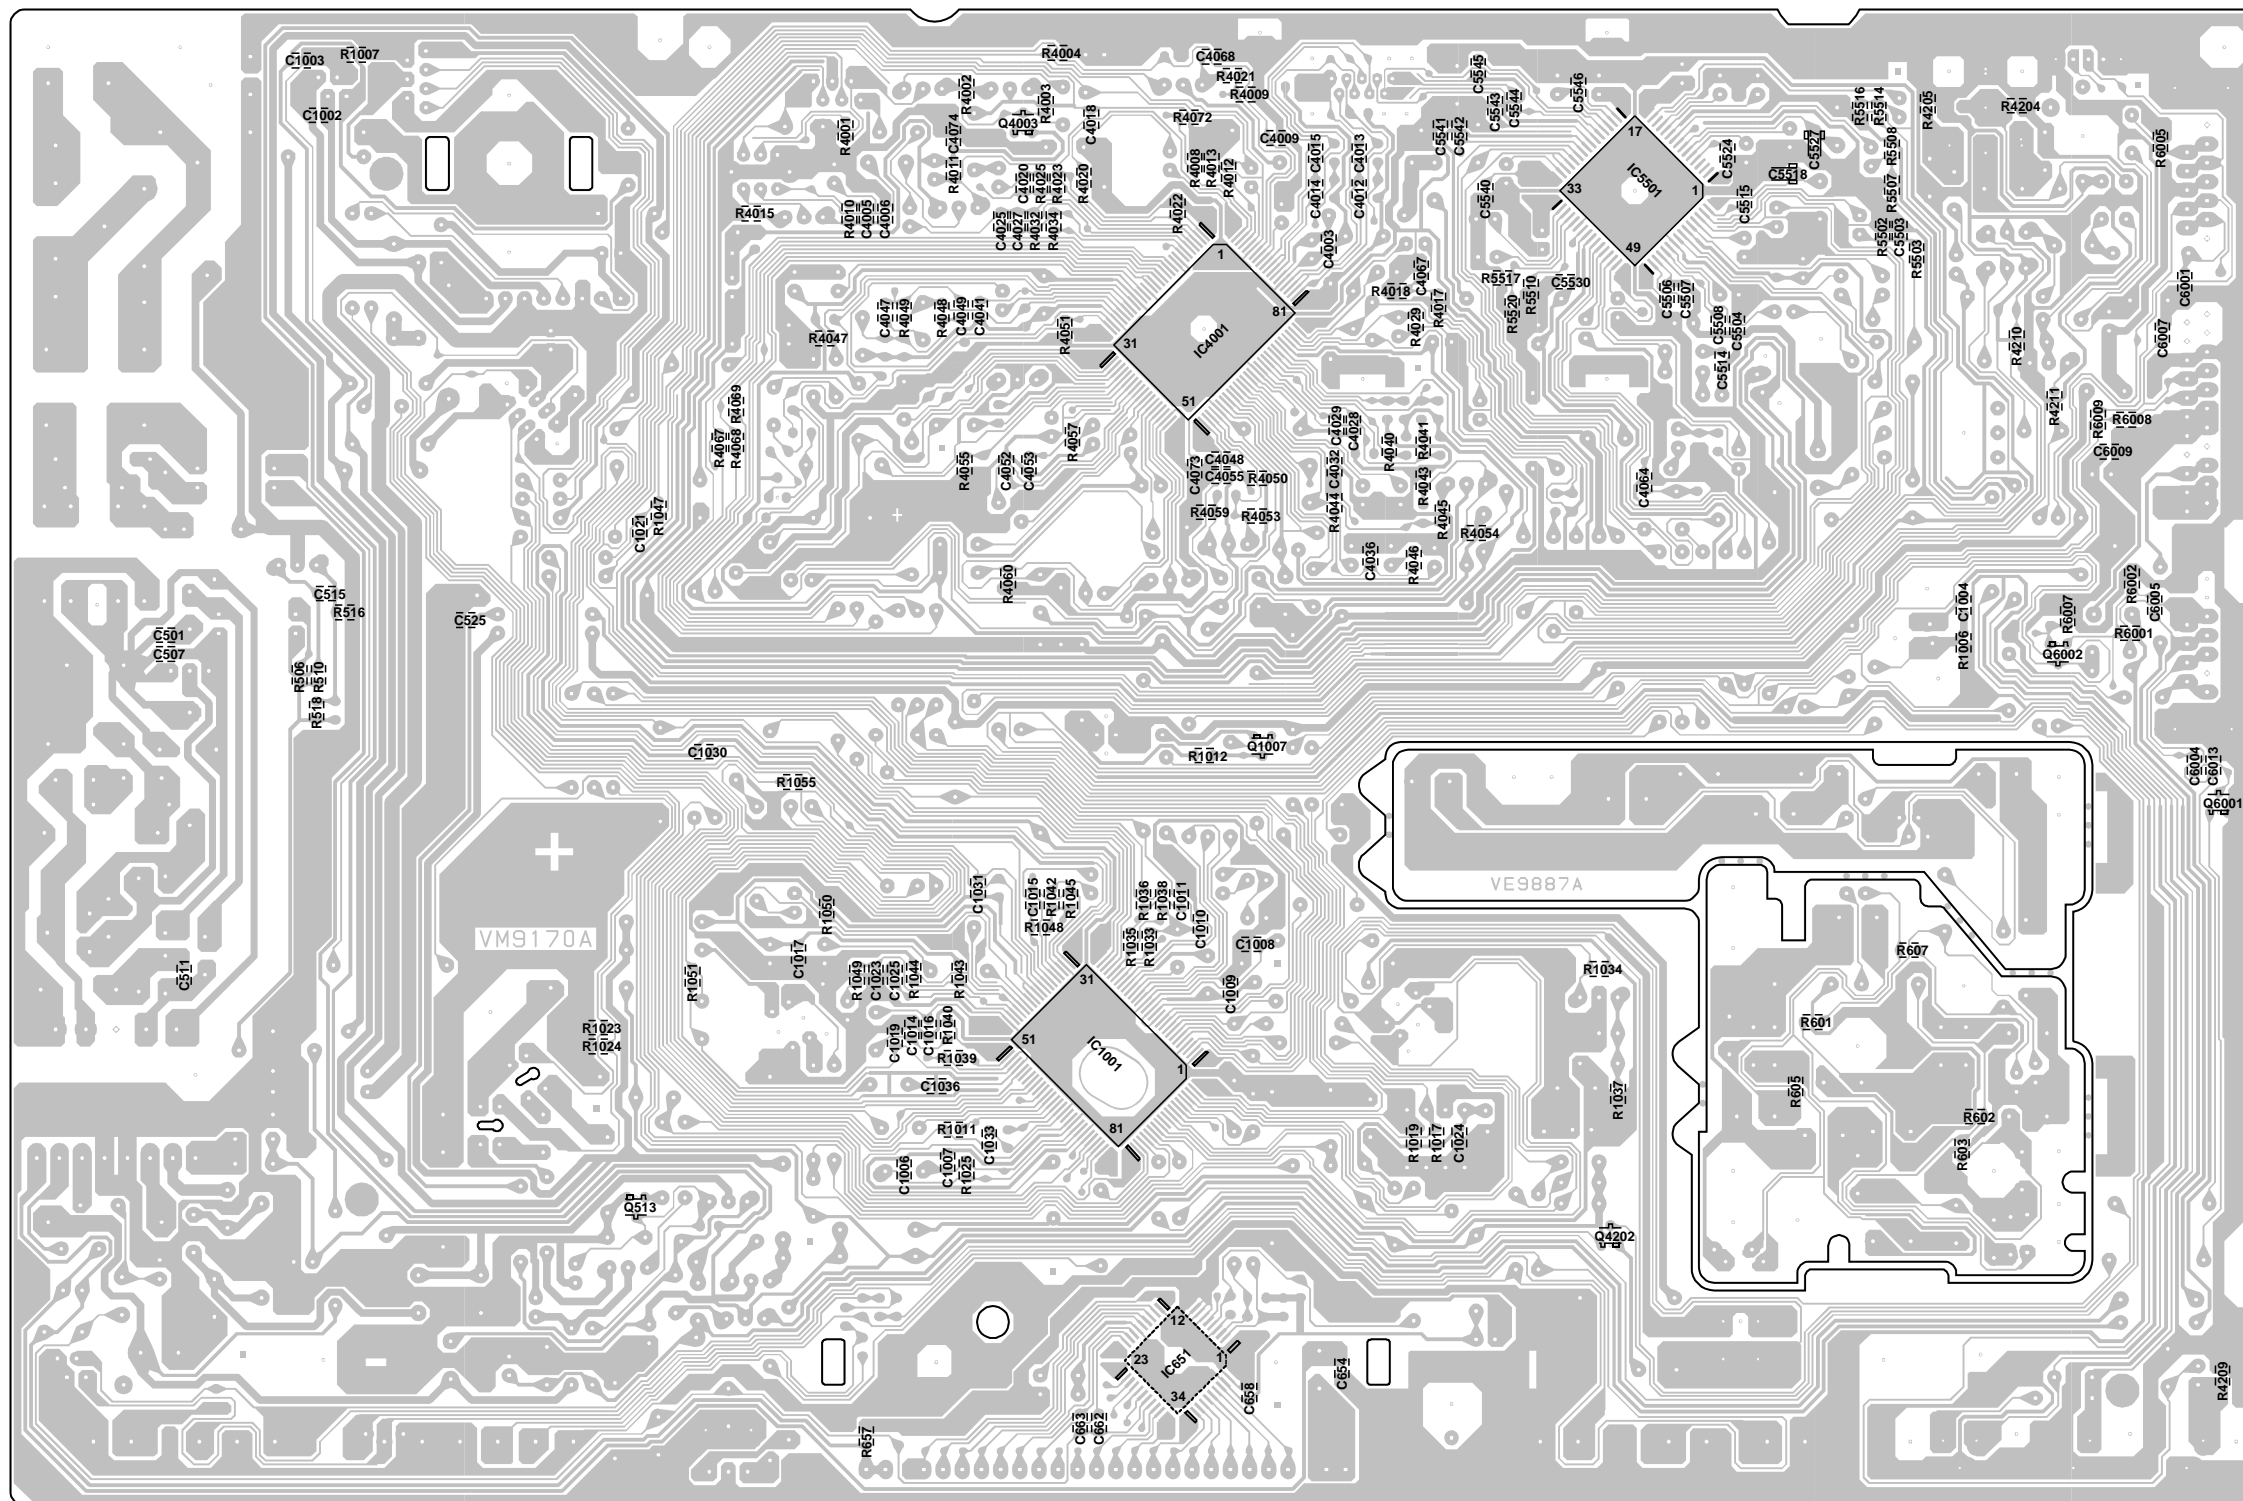


Y/C/AUDIO/CCD/HEAD AMP SCHEMATIC DIAGRAM (SYSCON PCB)

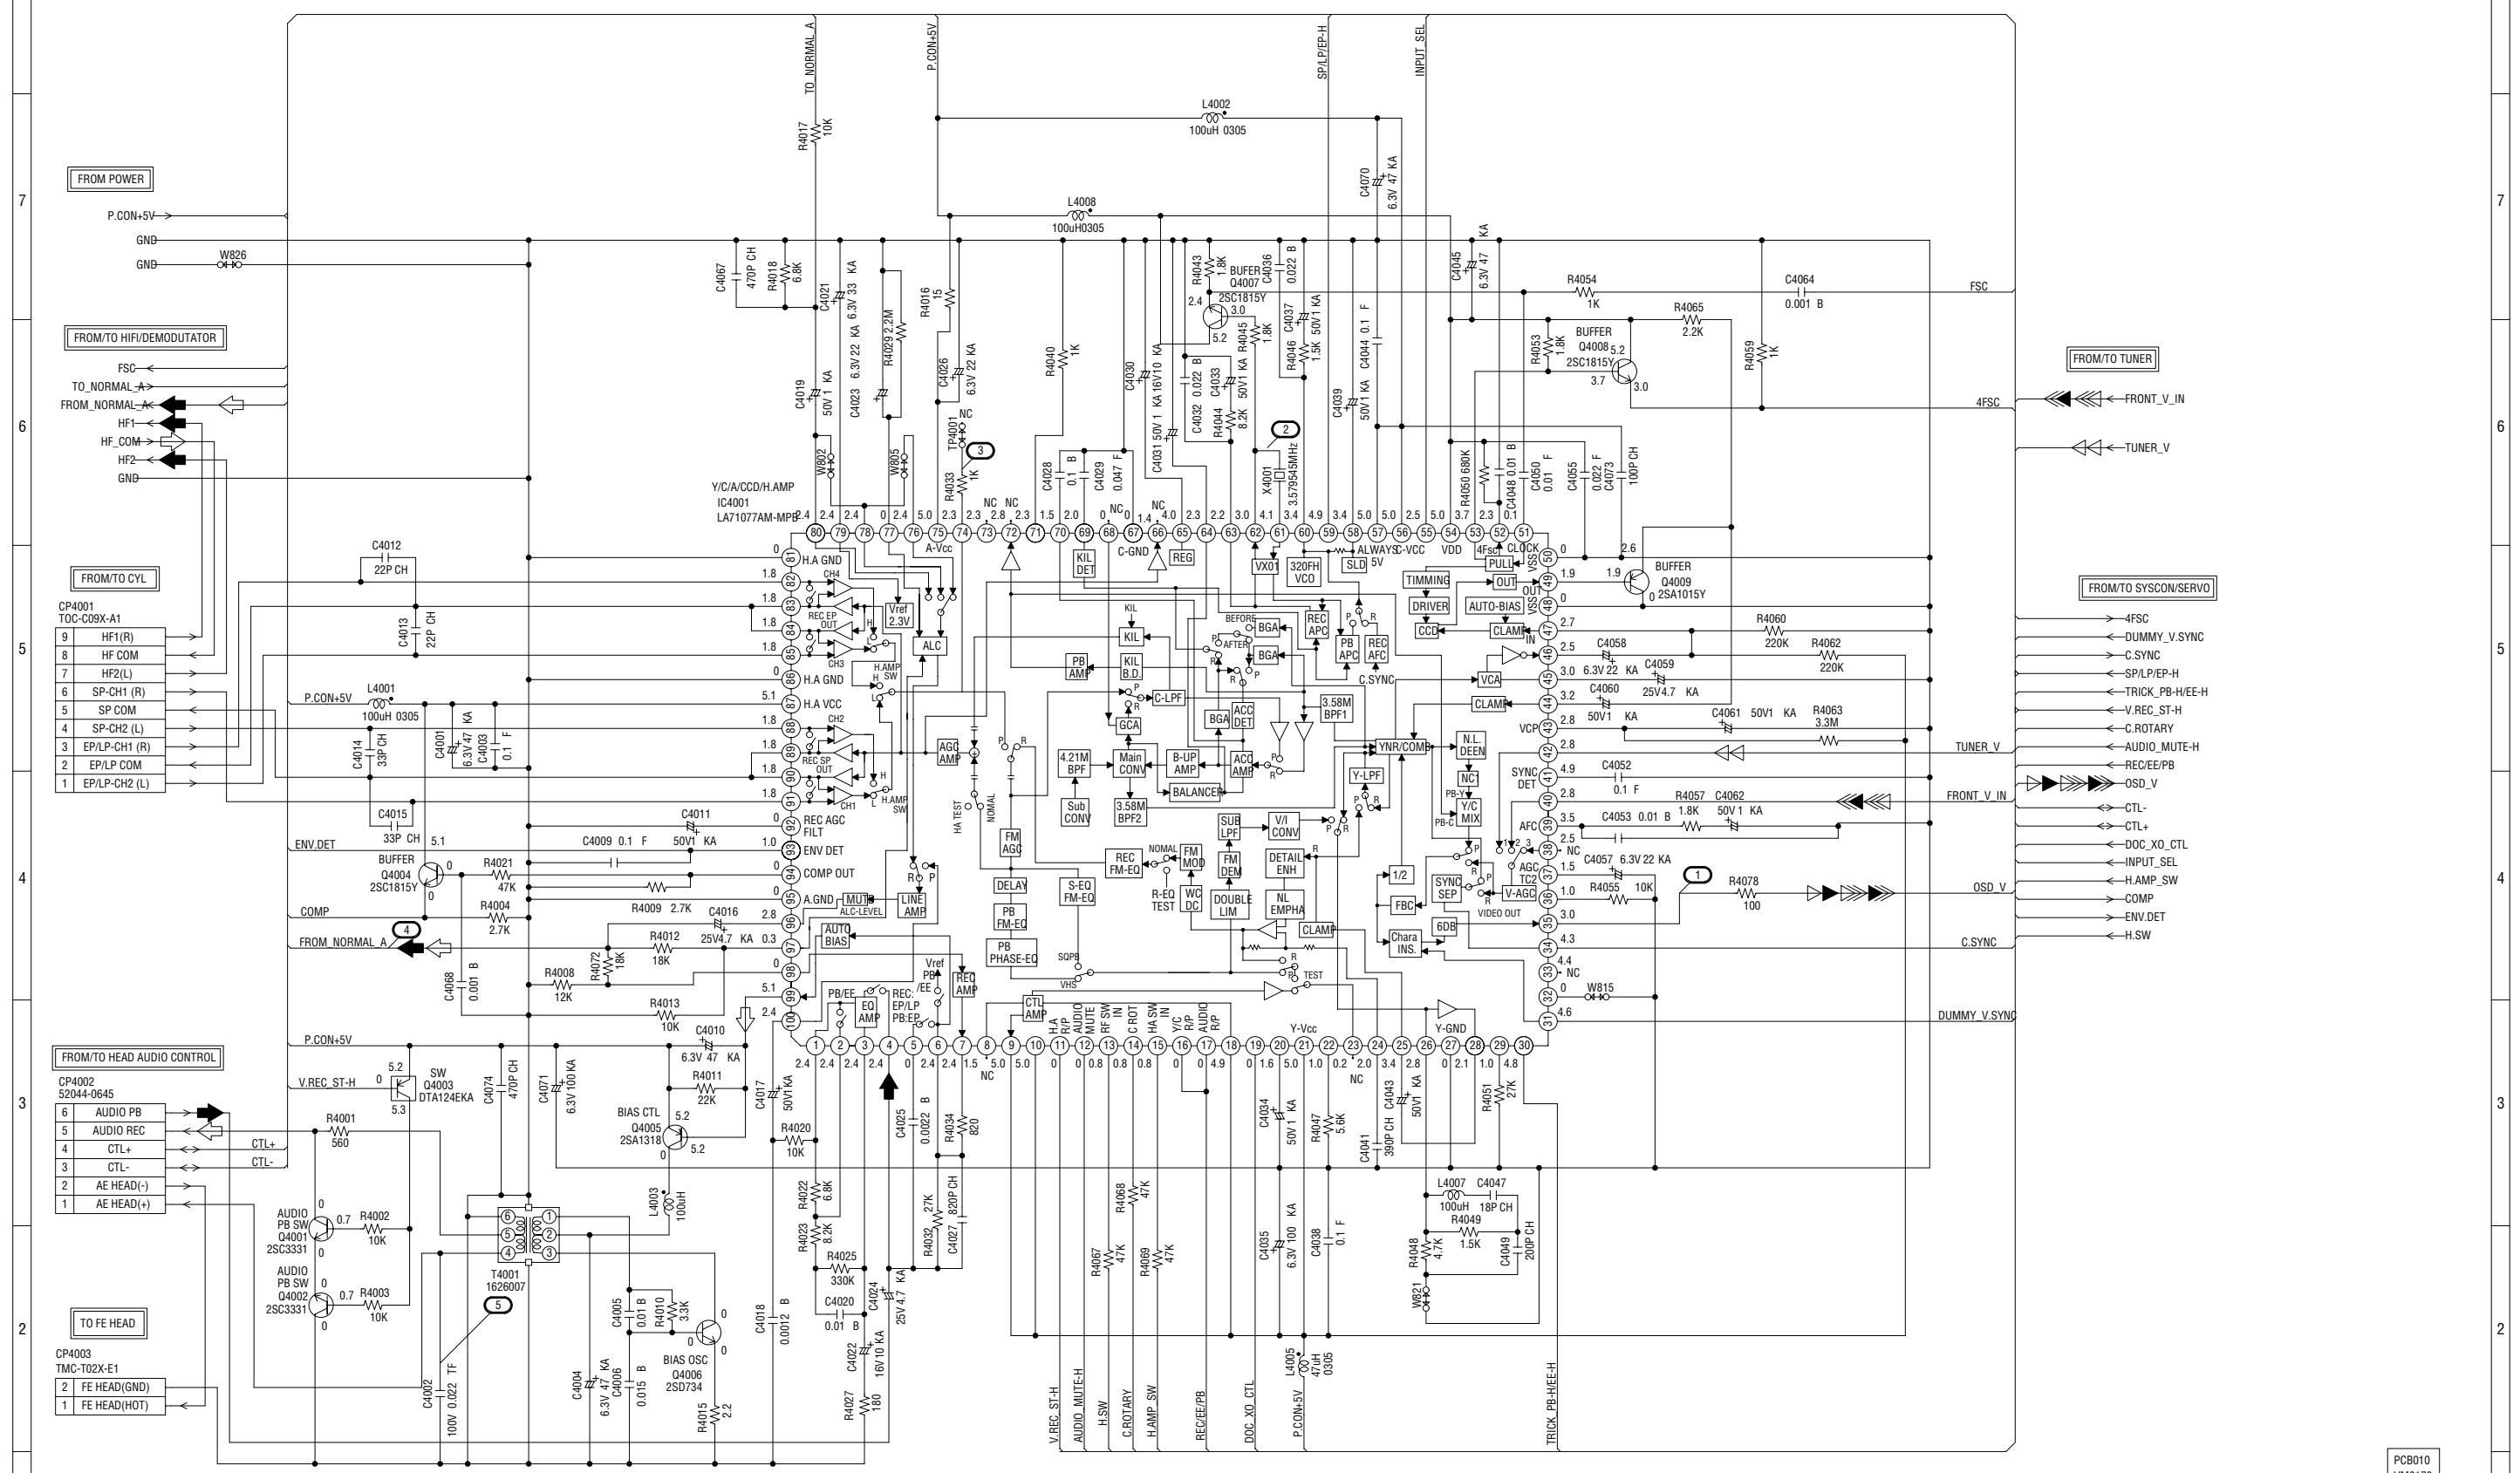

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

CAUTION: DIGITAL TRANSISTOR



- ▶ RECORD COLOR SIGNAL
- ▶ RECORD LUMINANCE SIGNAL
- ▶ AUDIO SIGNAL (REC)
- ▶ AUDIO SIGNAL (PB)
- ▶ PLAYBACK COLOR SIGNAL
- ▶ PLAYBACK LUMINANCE SIGNAL
- ▶ TUNER VIDEO SIGNAL


PC8010
VM9170

SYSTEM CONTROL/SERVO SCHEMATIC DIAGRAM (SYSCON PCB)

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

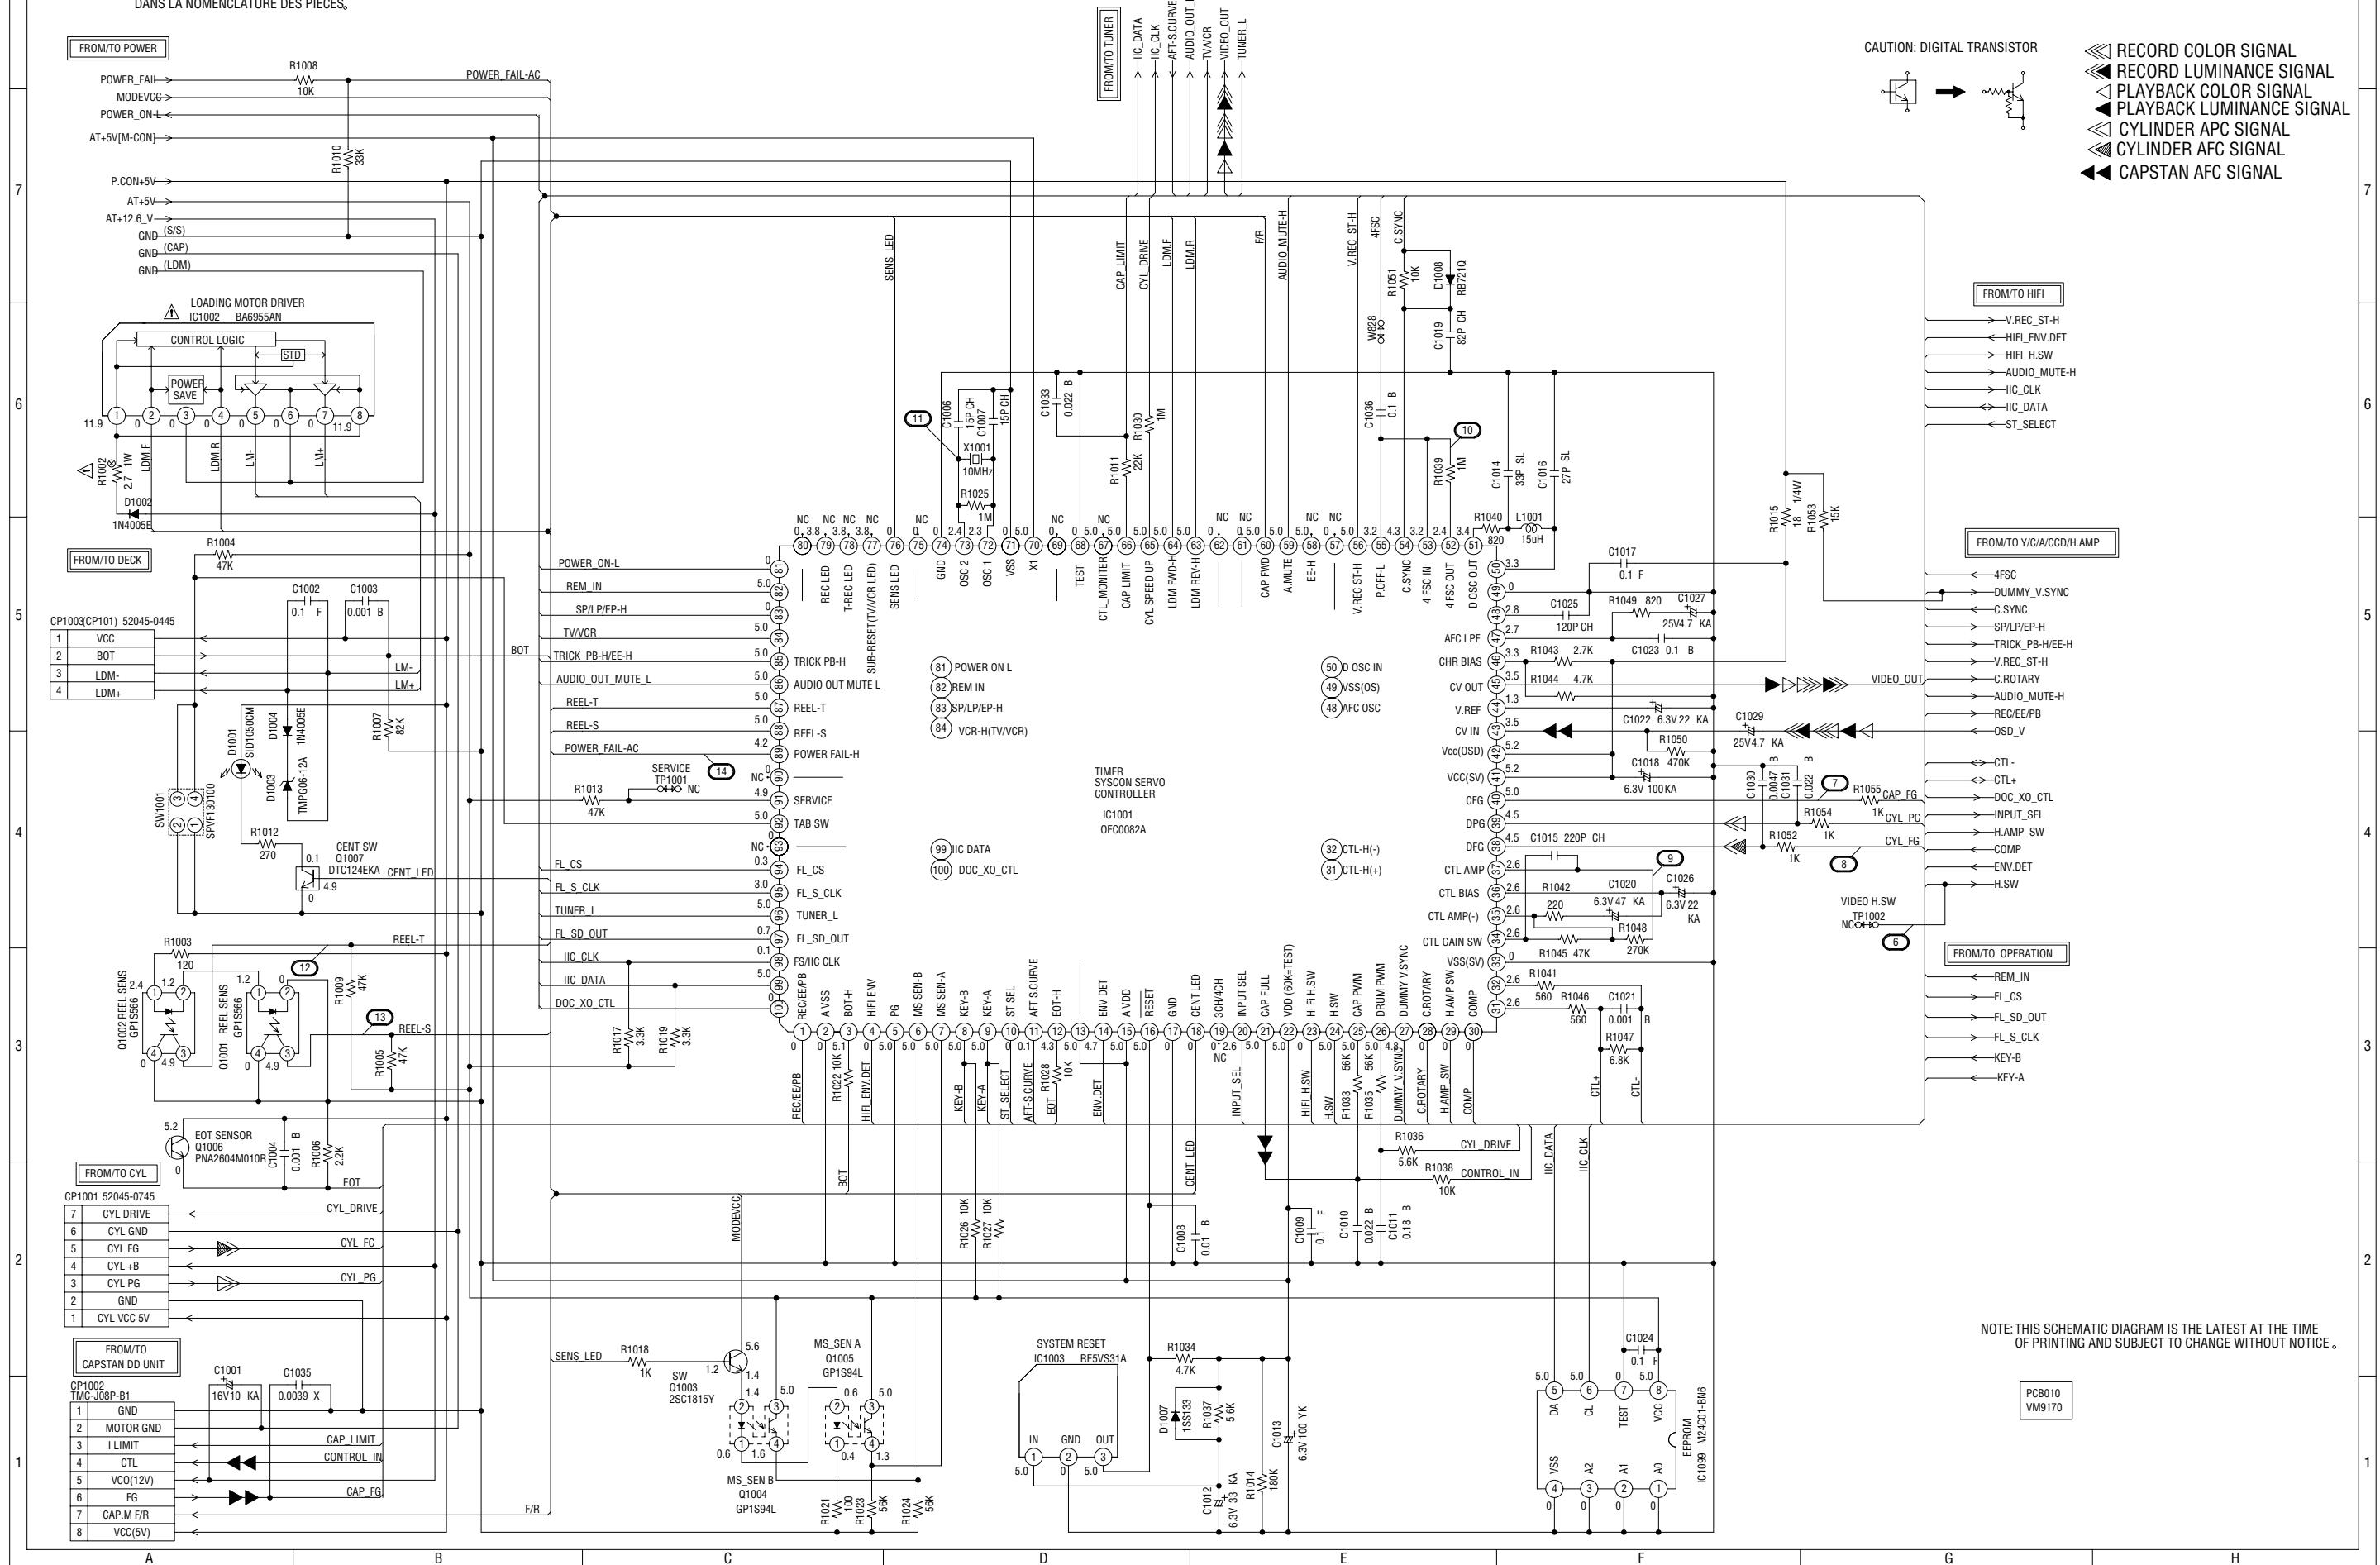


CAUTION: DIGITAL TRANSISTOR

- RECORD COLOR SIGNAL
- RECORD LUMINANCE SIGNAL
- PLAYBACK COLOR SIGNAL
- PLAYBACK LUMINANCE SIGNAL
- CYLINDER APC SIGNAL
- CYLINDER AFC SIGNAL
- CAPSTAN AFC SIGNAL


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

PCB010
VM9170


TUNER SCHEMATIC DIAGRAM (SYSCON PCB)

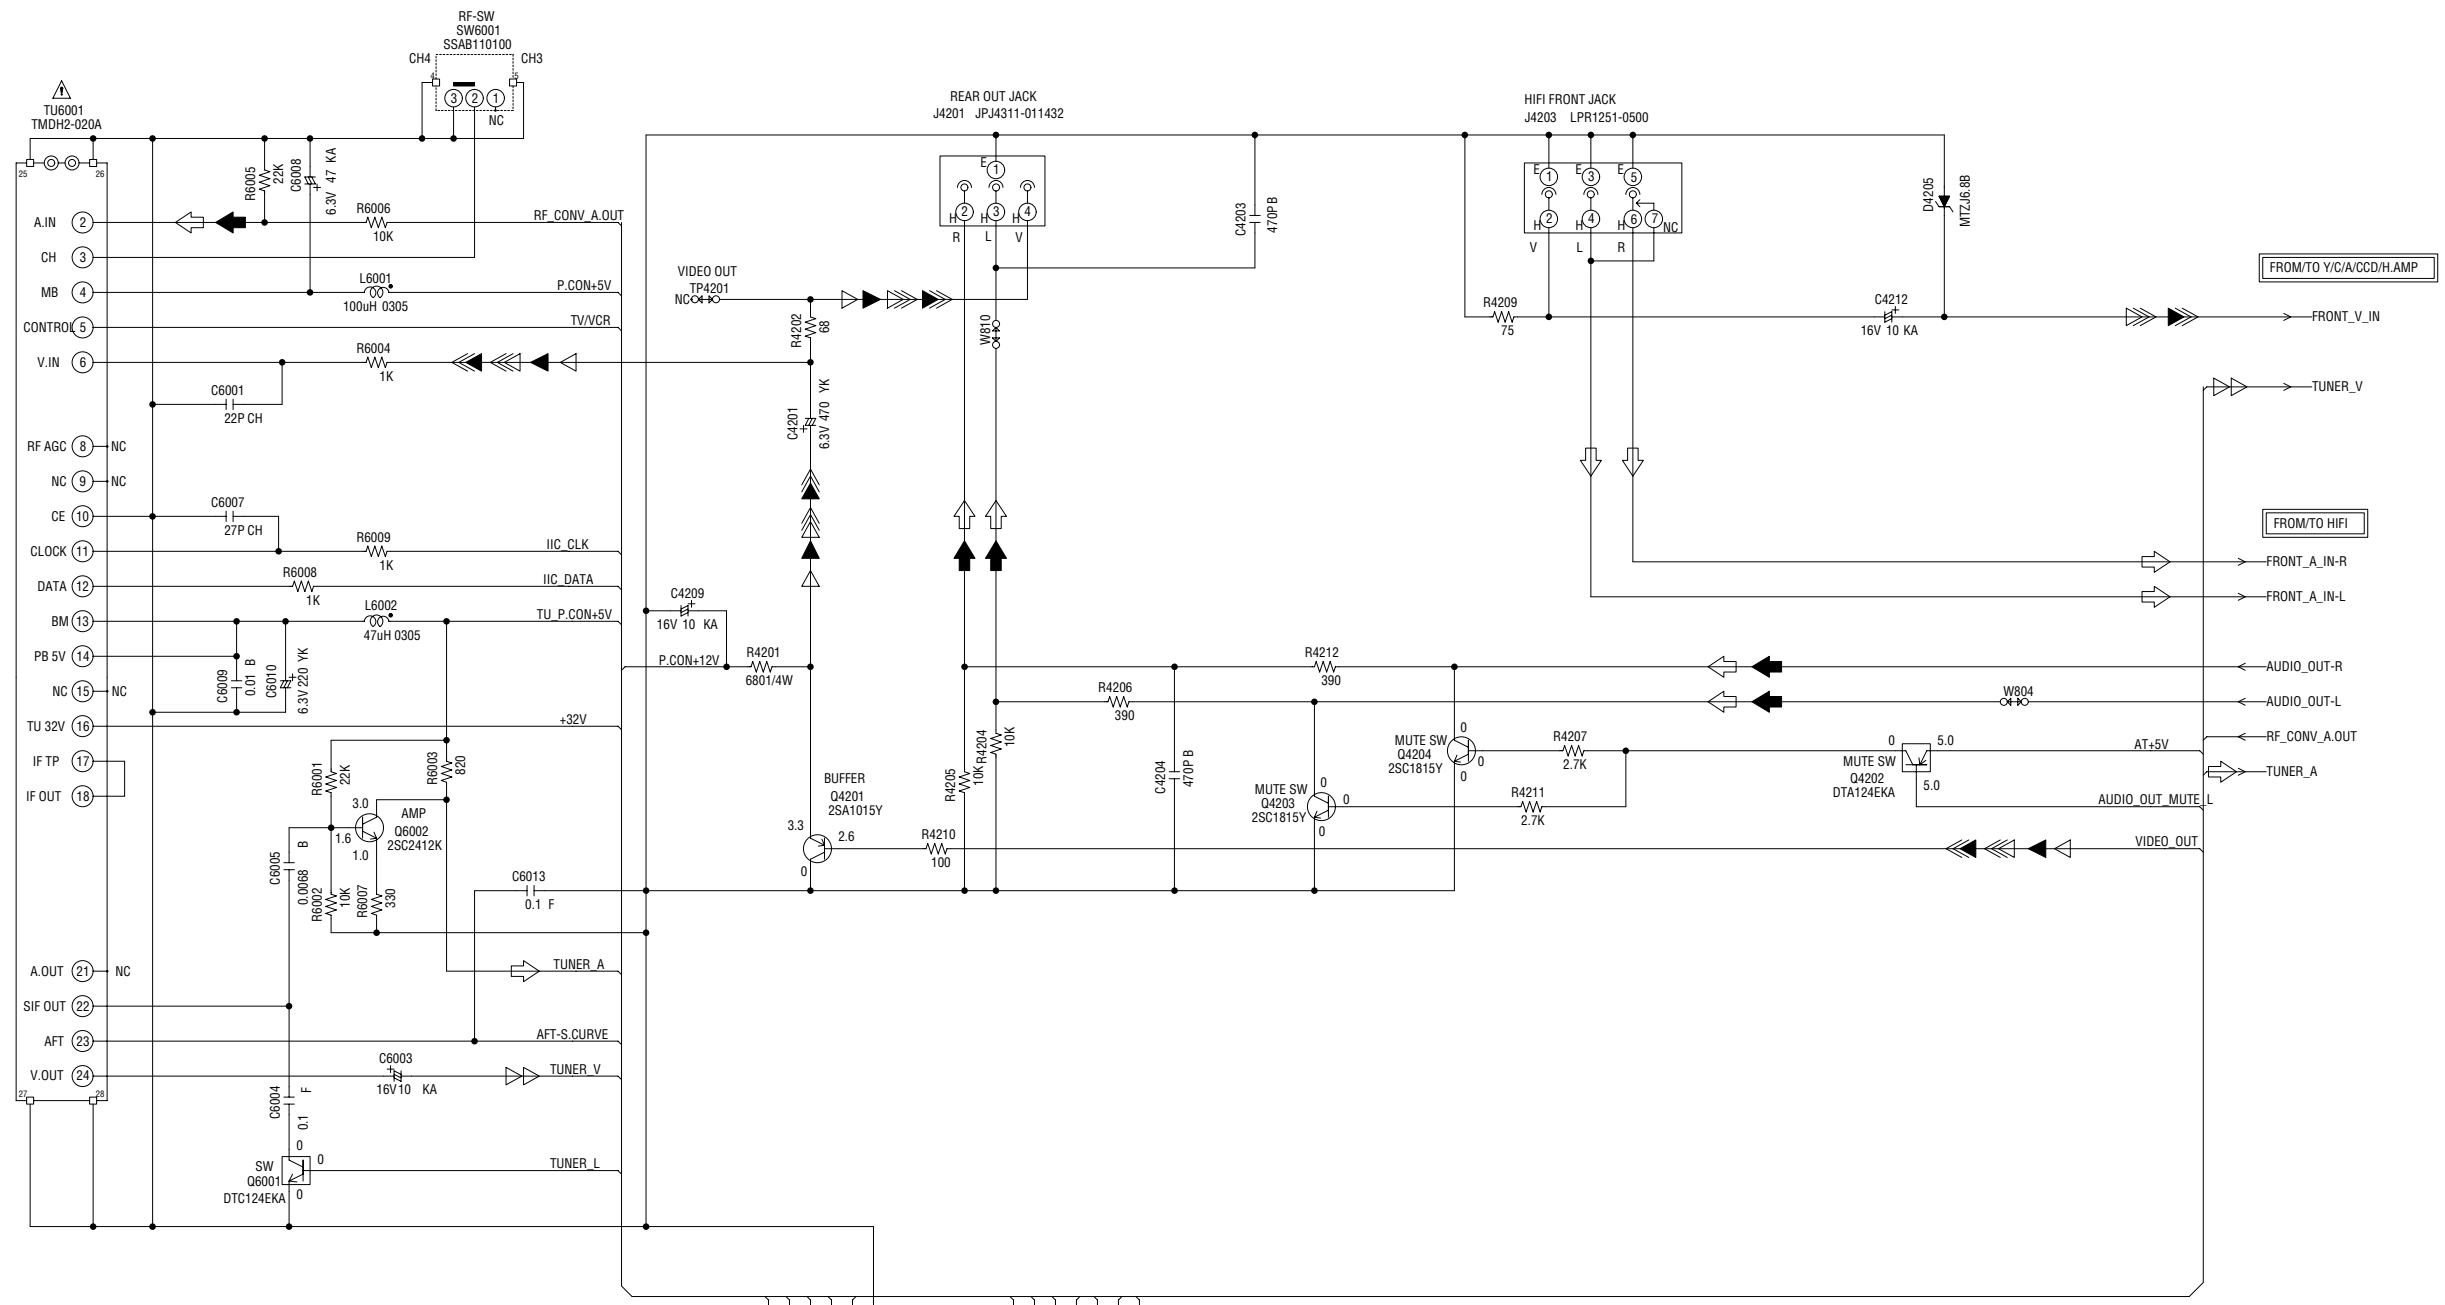

CAUTION: DIGITAL TRANSISTOR



CAUTION: DIGITAL TRANSISTOR



NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

- PLAYBACK LUMINANCE SIGNAL
- RECORD LUMINANCE SIGNAL
- PLAYBACK COLOR SIGNAL
- RECORD COLOR SIGNAL
- AUDIO SIGNAL (REC)
- AUDIO SIGNAL (PB)
- TUNER VIDEO SIGNAL

PCB010
VM9170

POWER SCHEMATIC DIAGRAM (SYSCON PCB)

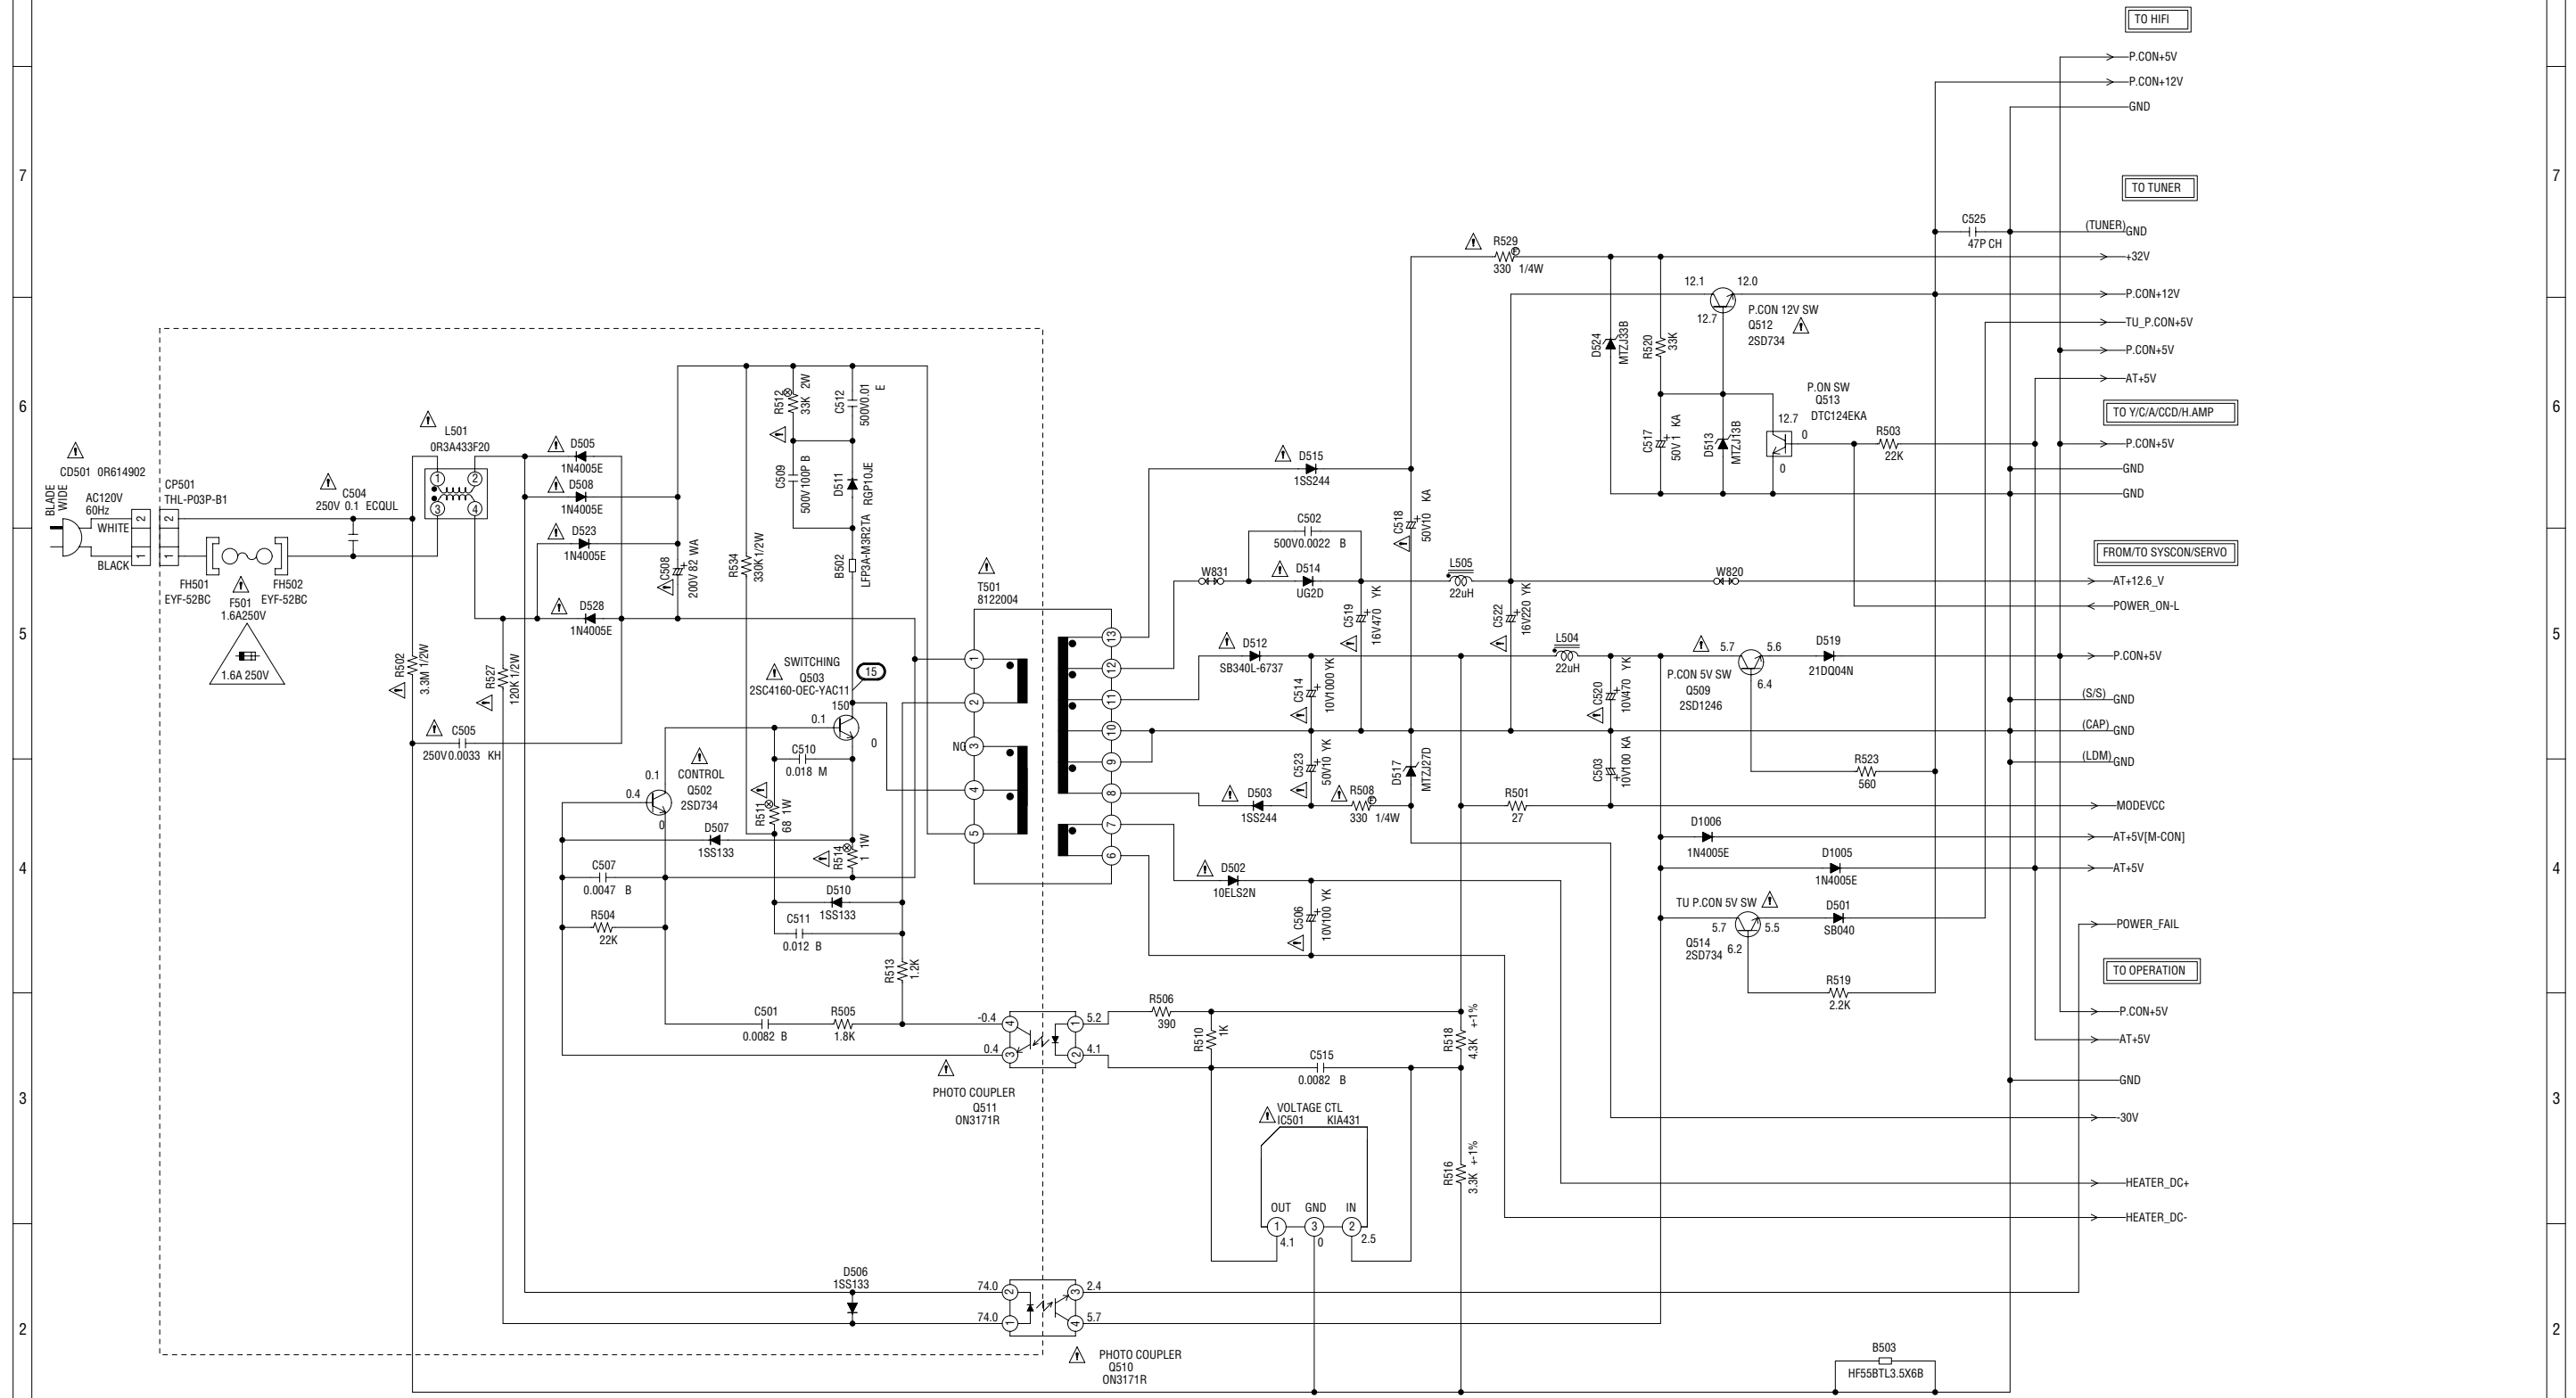

PCB010
VM9170

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE 1.6A 250V (F501).
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCENDIE N'UTILISER QUE DES FUSIBLES DE MEME TYPE 1.6A 250V (F501).


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


ATTENTION: LES PIECES REPARÉES PAR UN ETANT DANGEREUSES A UN POINT DE VUE SECURITE N'UTILISER QUE CELLES DECRITES DANS LA NOMENCLATURE DES PIECES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

CAUTION: DIGITAL TRANSISTOR



OPERATION SCHEMATIC DIAGRAM (SYSCON PCB)

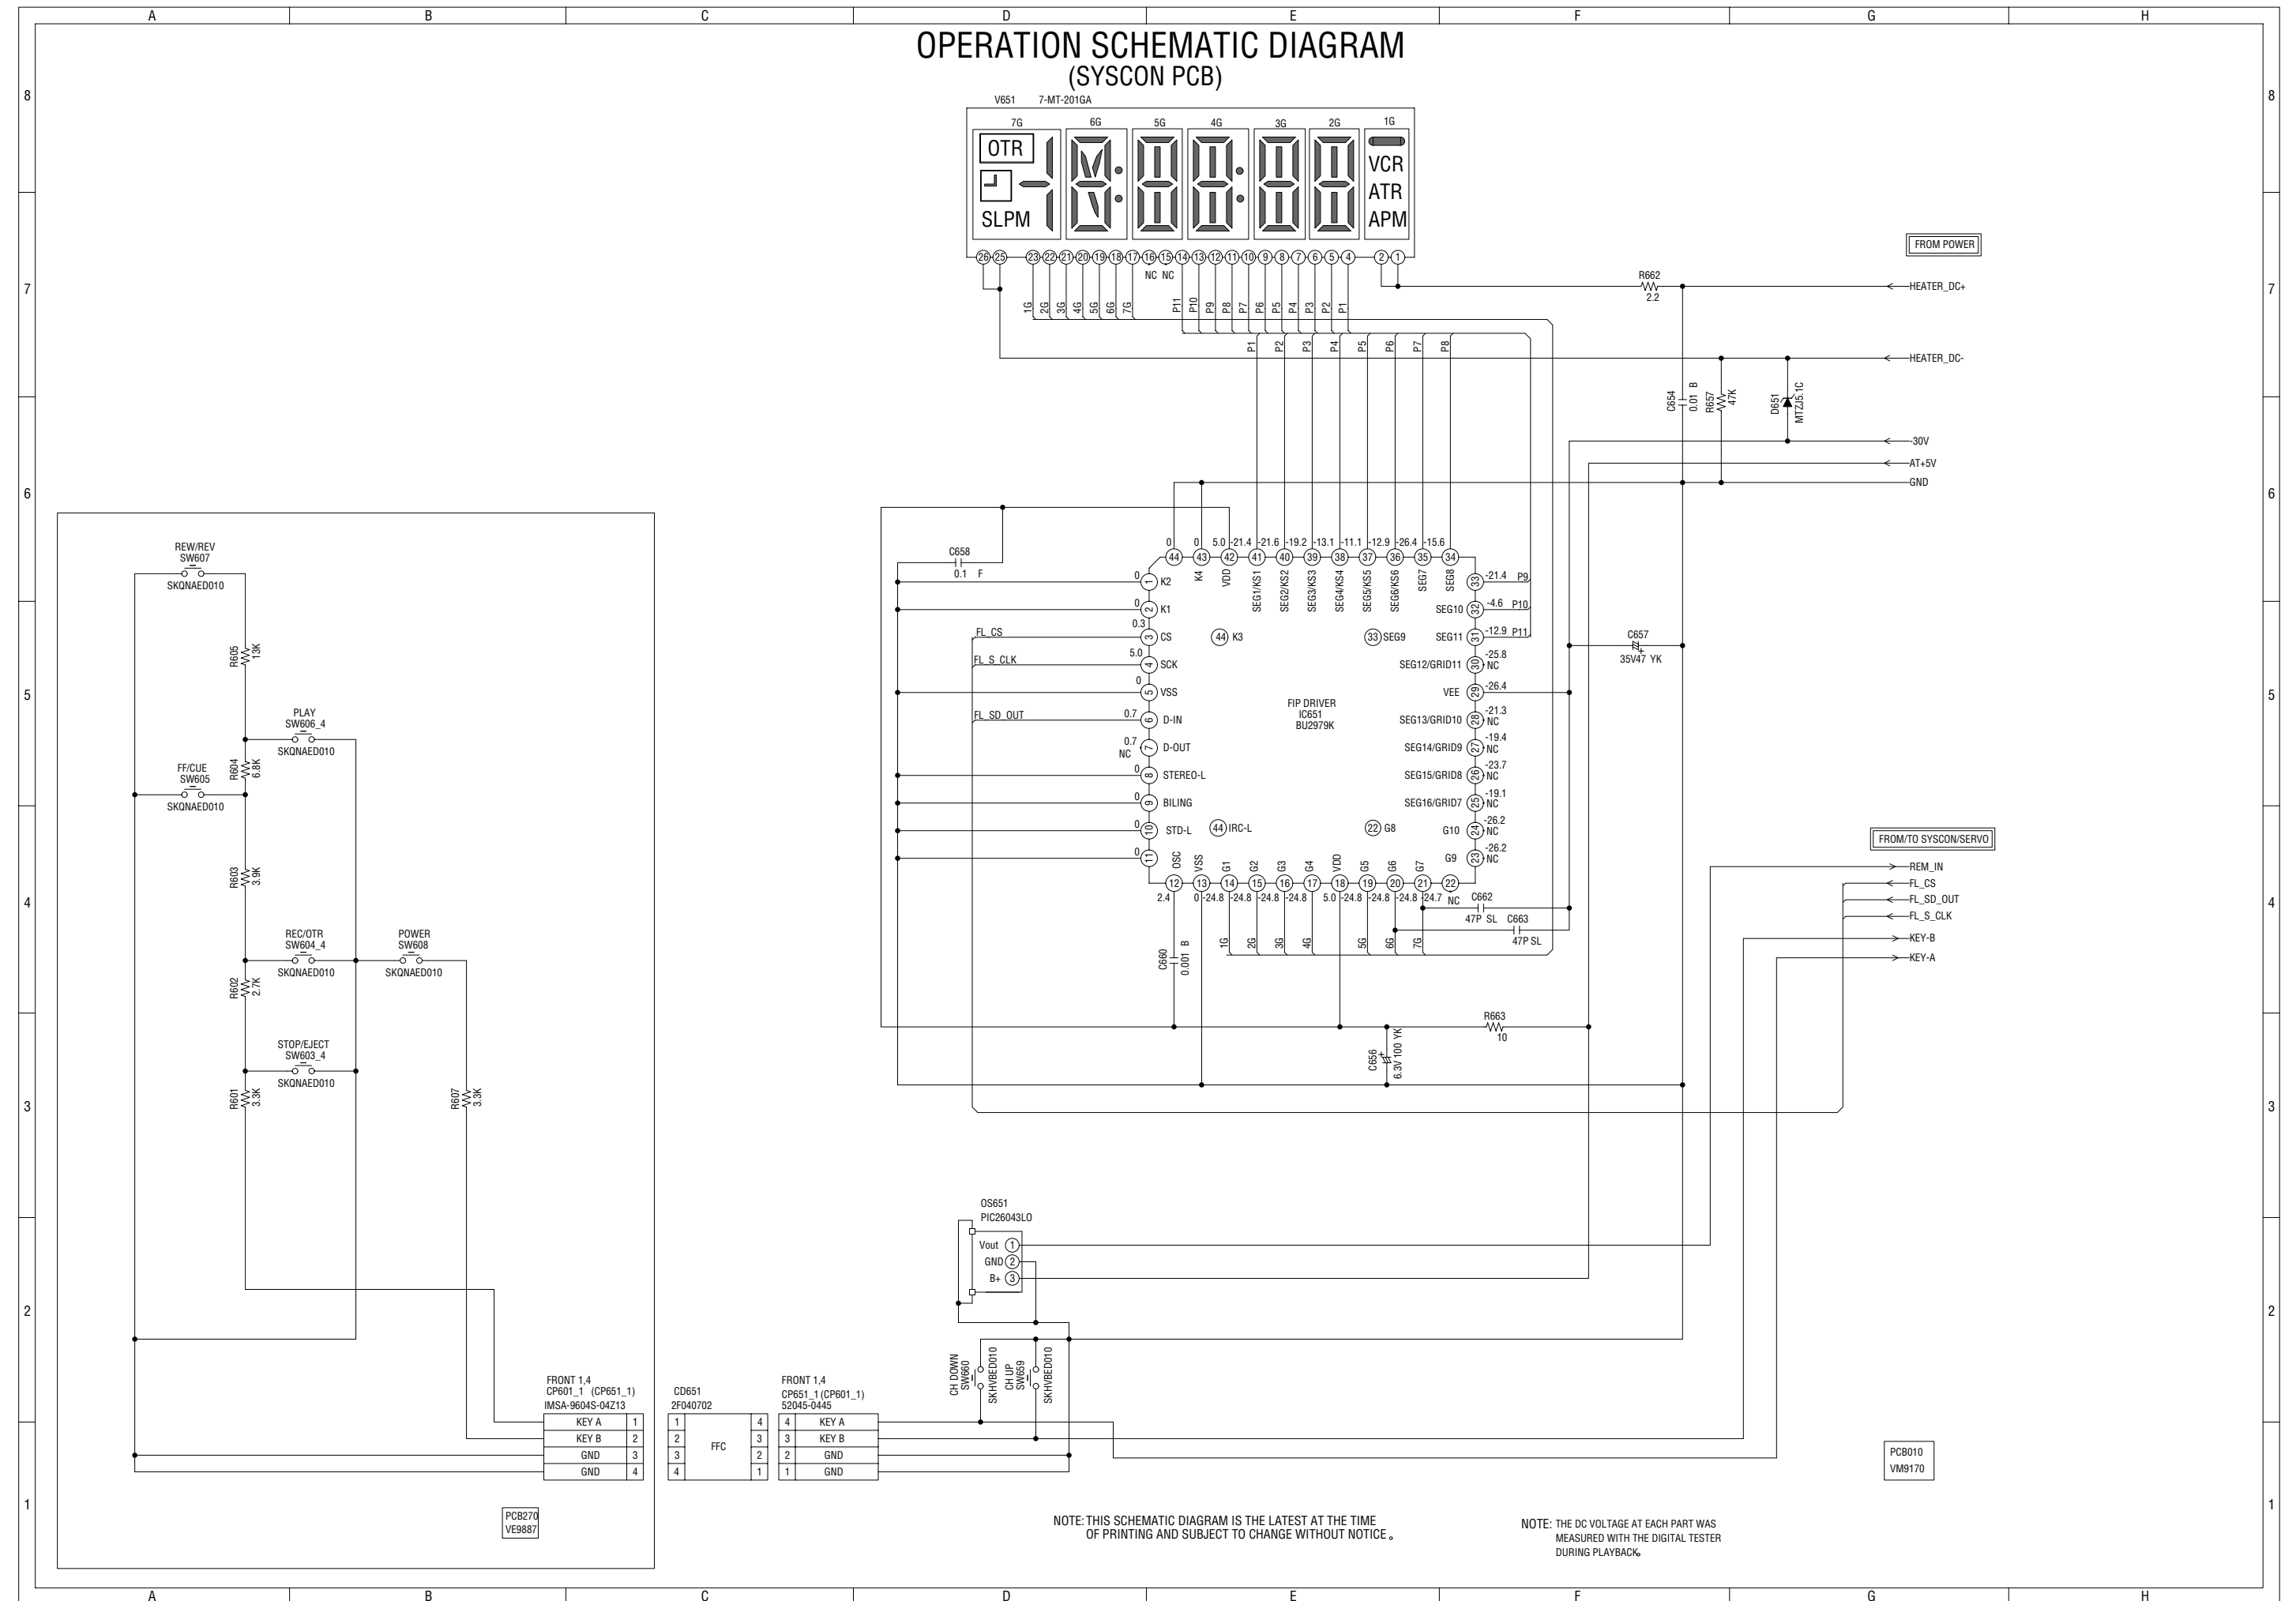

CD651 2FD0702			
1	4	4	KEY A
2	3	3	KEY B
3	2	2	GND
4	1	1	GND

FRONT 1,4 CP601_1 (CP651_1) IMSA-9604S-04Z13			
1	1	1	KEY A
2	2	2	KEY B
3	3	3	GND
4	4	4	GND


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

PCB010
VM9170

PCB270
VE9887

HIFI SCHEMATIC DIAGRAM (SYSCON PCB)

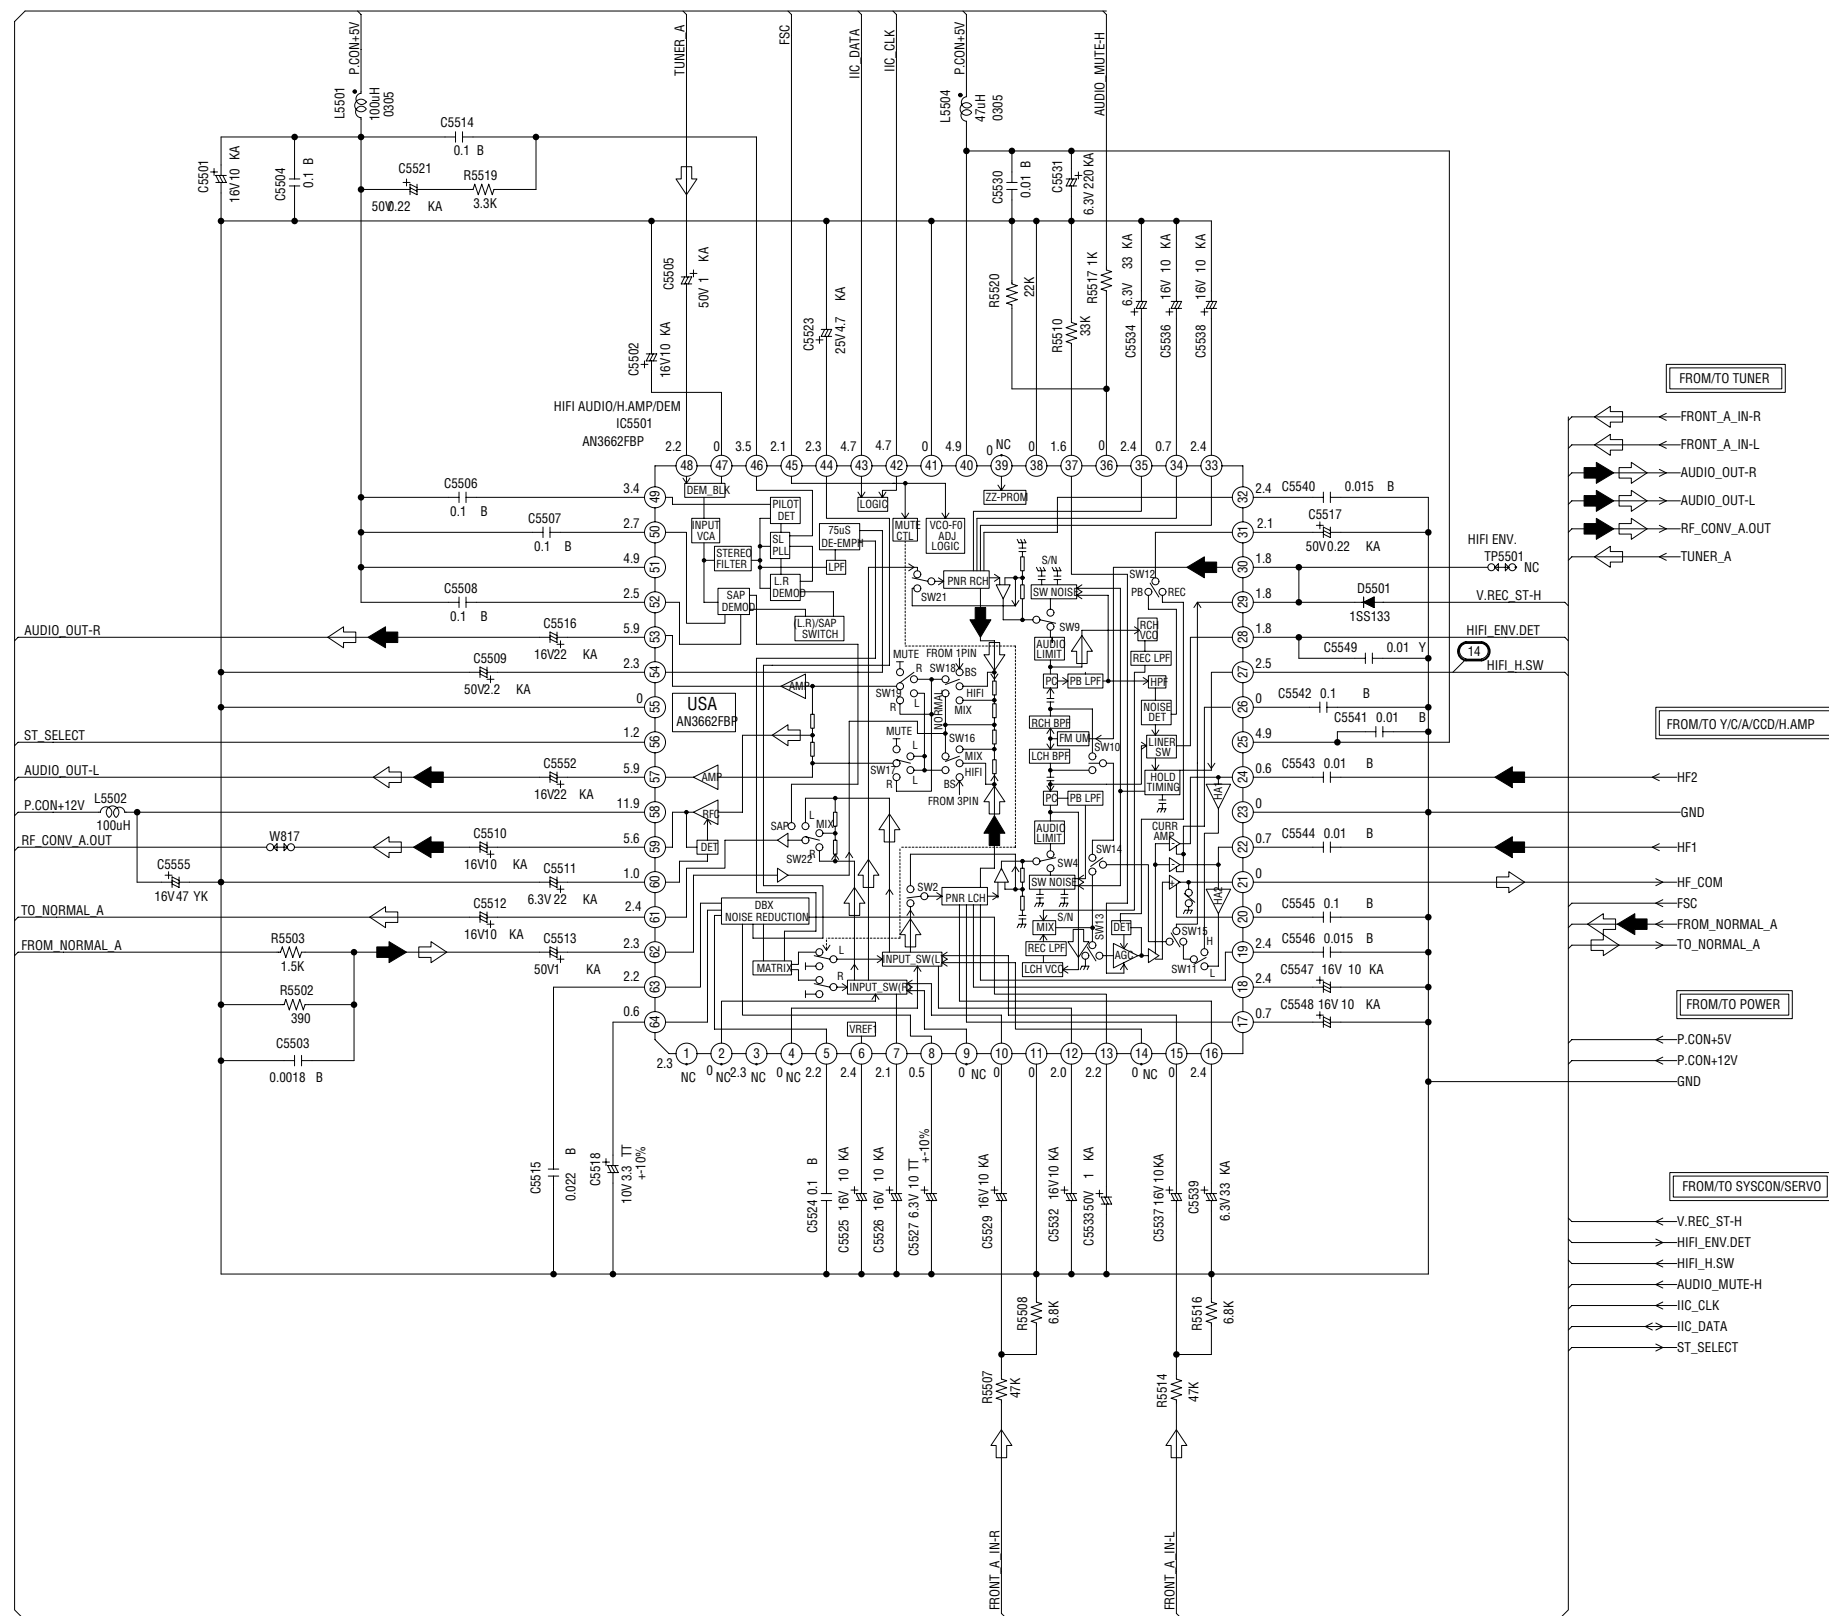


PCB010
VM9170

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

◁ AUDIO SIGNAL(REC)
▶ AUDIO SIGNAL(PB)

DECK SCHEMATIC DIAGRAM (DECK PCB)

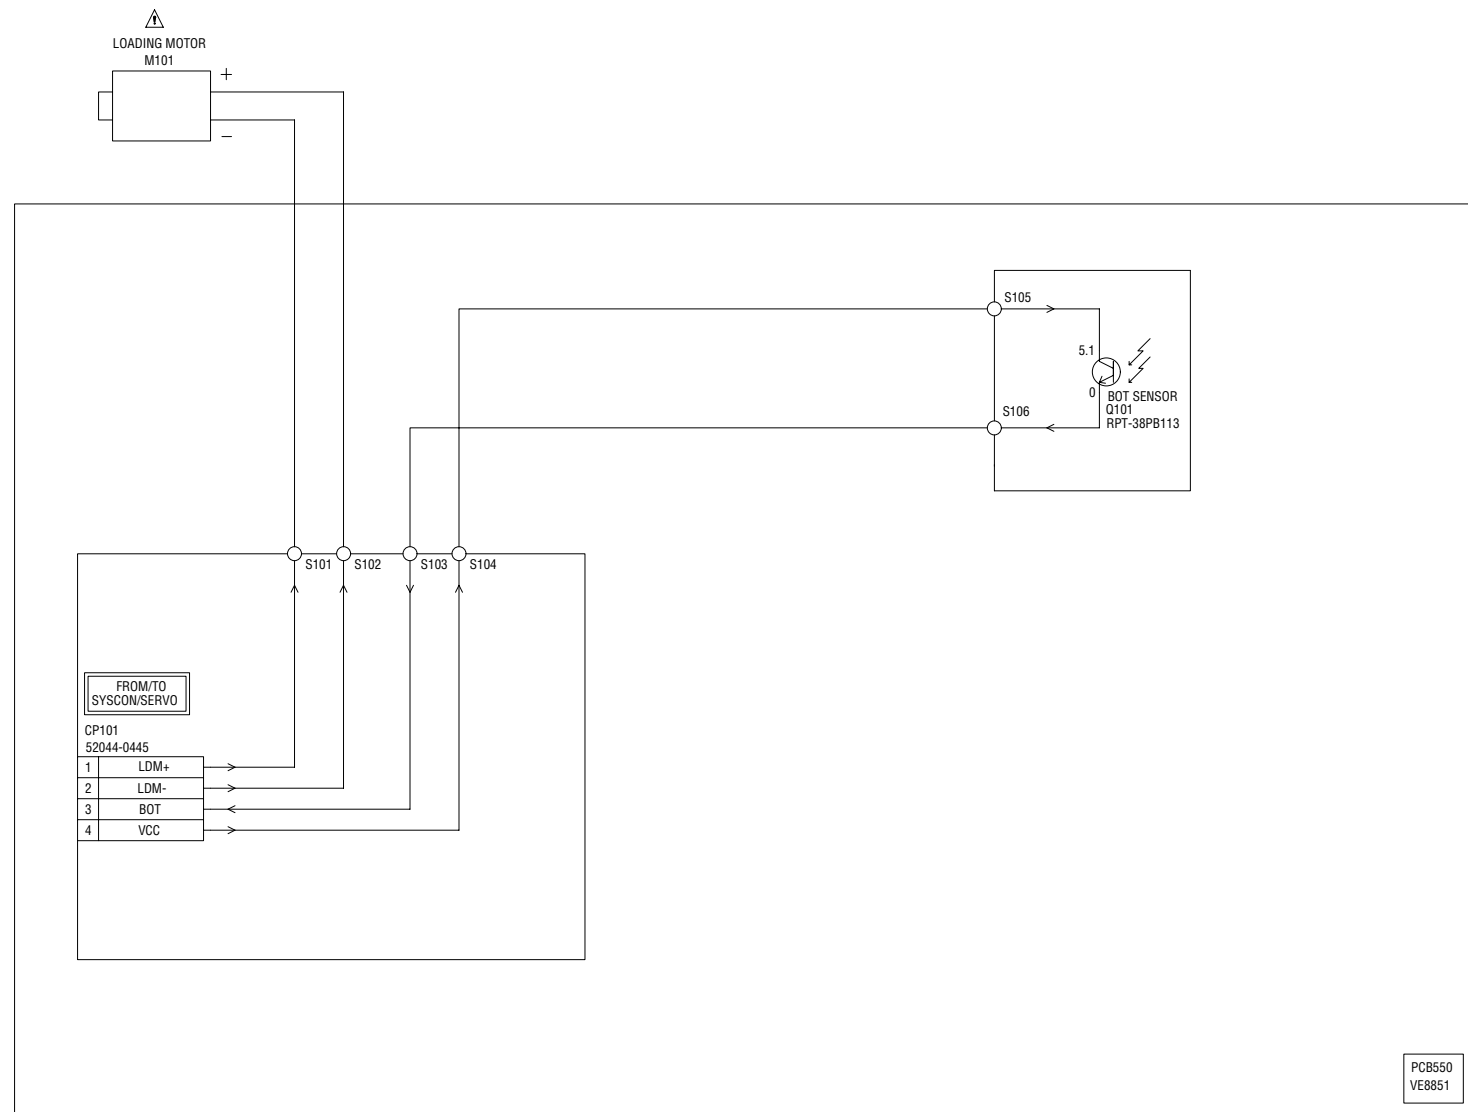


CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

INTERCONNECTION DIAGRAM

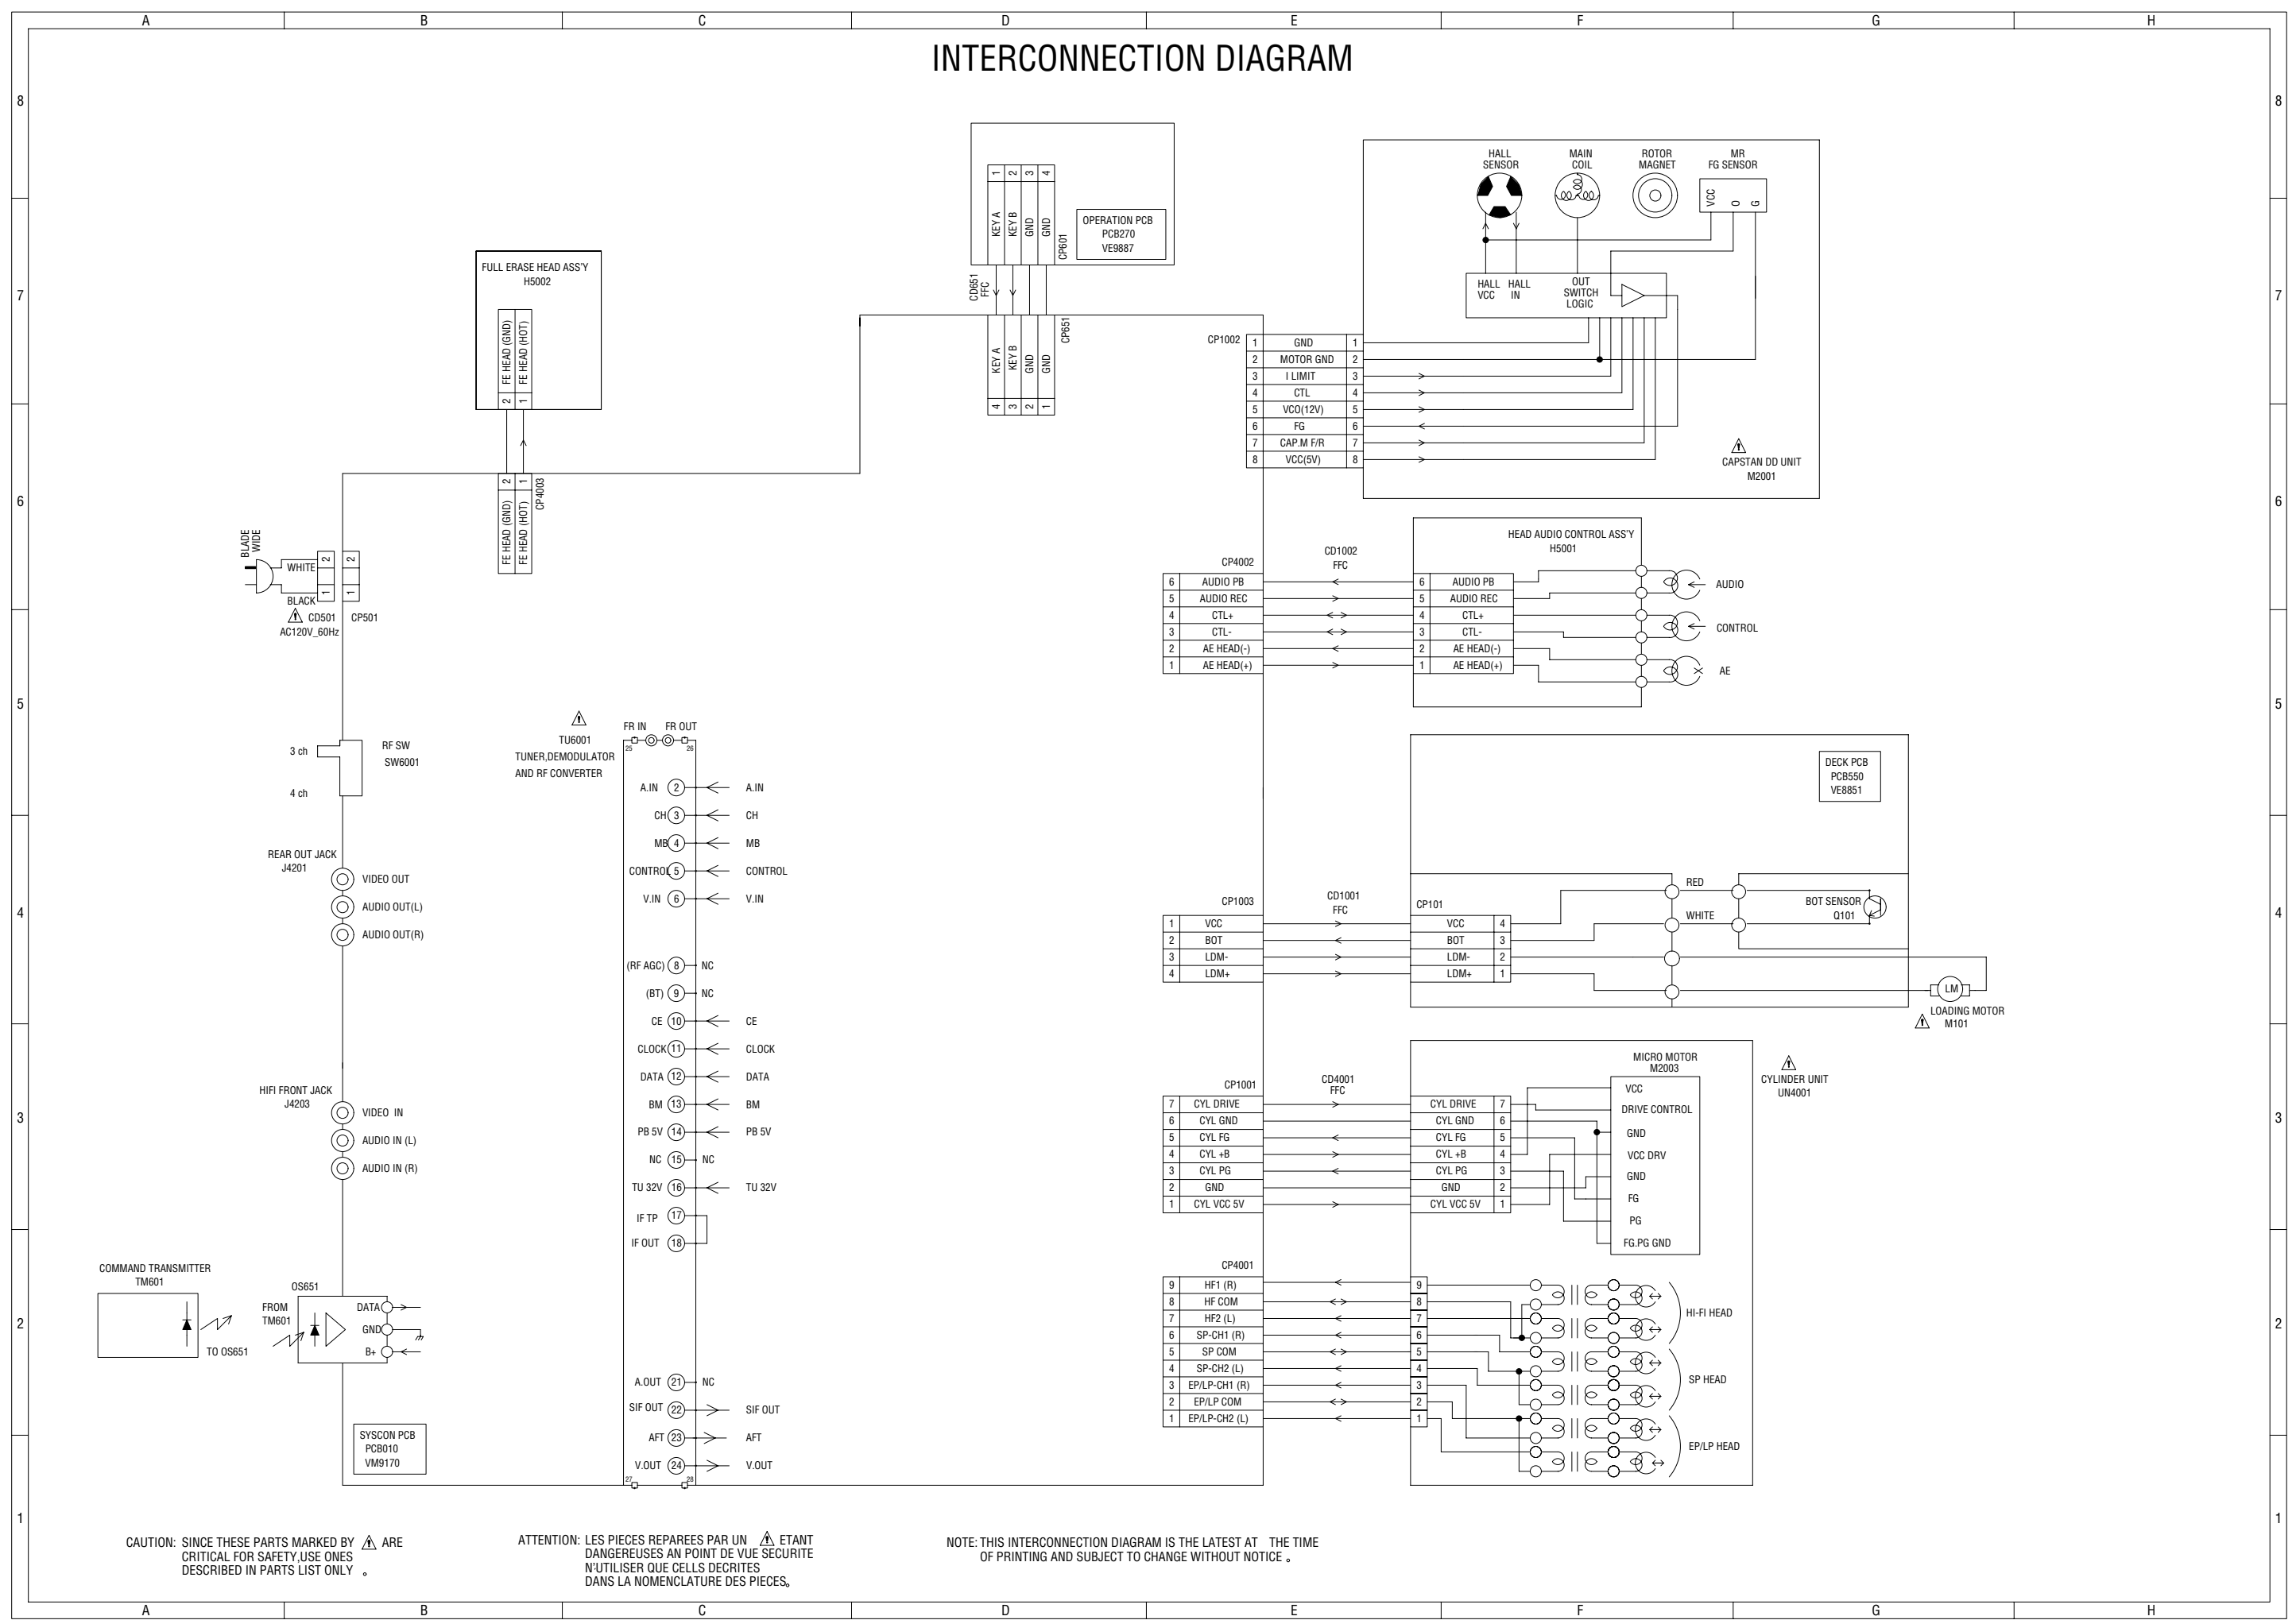


CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIÉCES REPARÉES PAR UN ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ, N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÉCES.


NOTE: THIS INTERCONNECTION DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

WAVEFORMS


Y/C/AUDIO/CCD/HEAD AMP

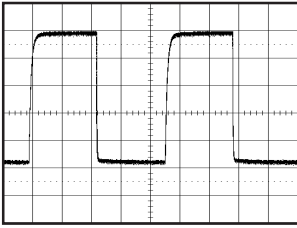


① PB
1V 0.2ms/div

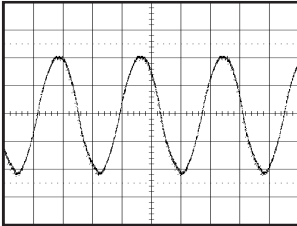


② POWER ON
100mV 0.1μs/div

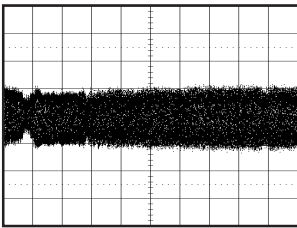

③ PB
200mV 1ms/div

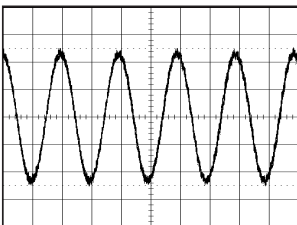


④ PB
200mV 0.5ms/div

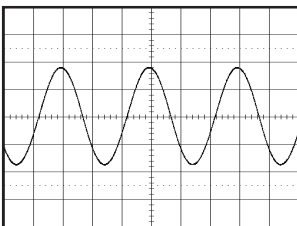


⑤ REC
20V 5μs/div


SYSCON/SERVO

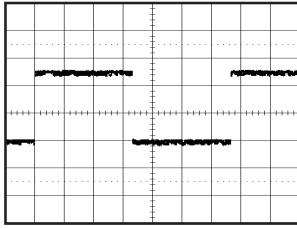


⑥ PB
2V 5ms/div

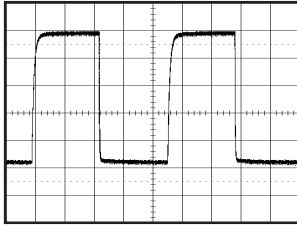


⑦ PB
1V 0.2ms/div

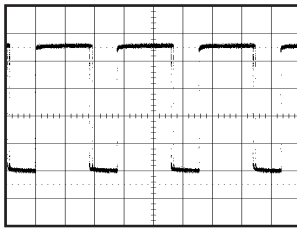


⑧ PB
1V 0.5ms/div

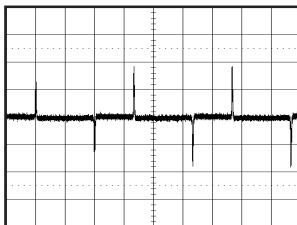


⑨ PB
0.5V 10ms/div

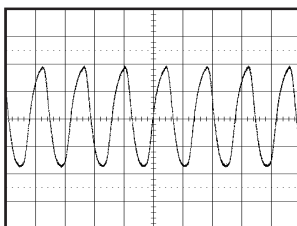


⑩ POWER ON
0.5V 50ns/div

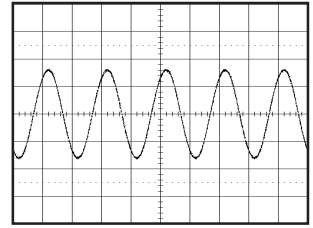


⑪ POWER ON
1V 50ns/div

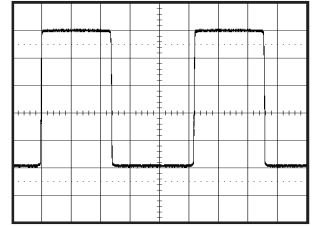

⑫ PB
1V 0.2s/div

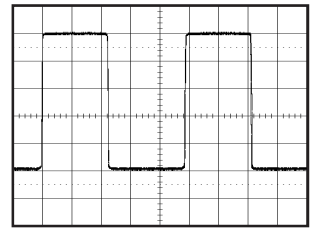


⑬ PB
1V 0.2s/div

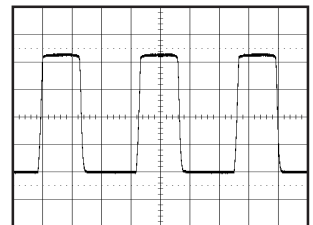

⑭ POWER ON
1V 5ms/div

POWER

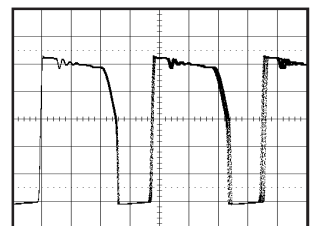


⑮ PB
50V 2μs/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS


HIFI

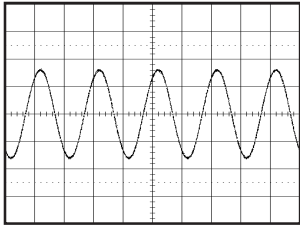


⑩ PB

1V 5ms/div

MECHANICAL EXPLODED VIEW

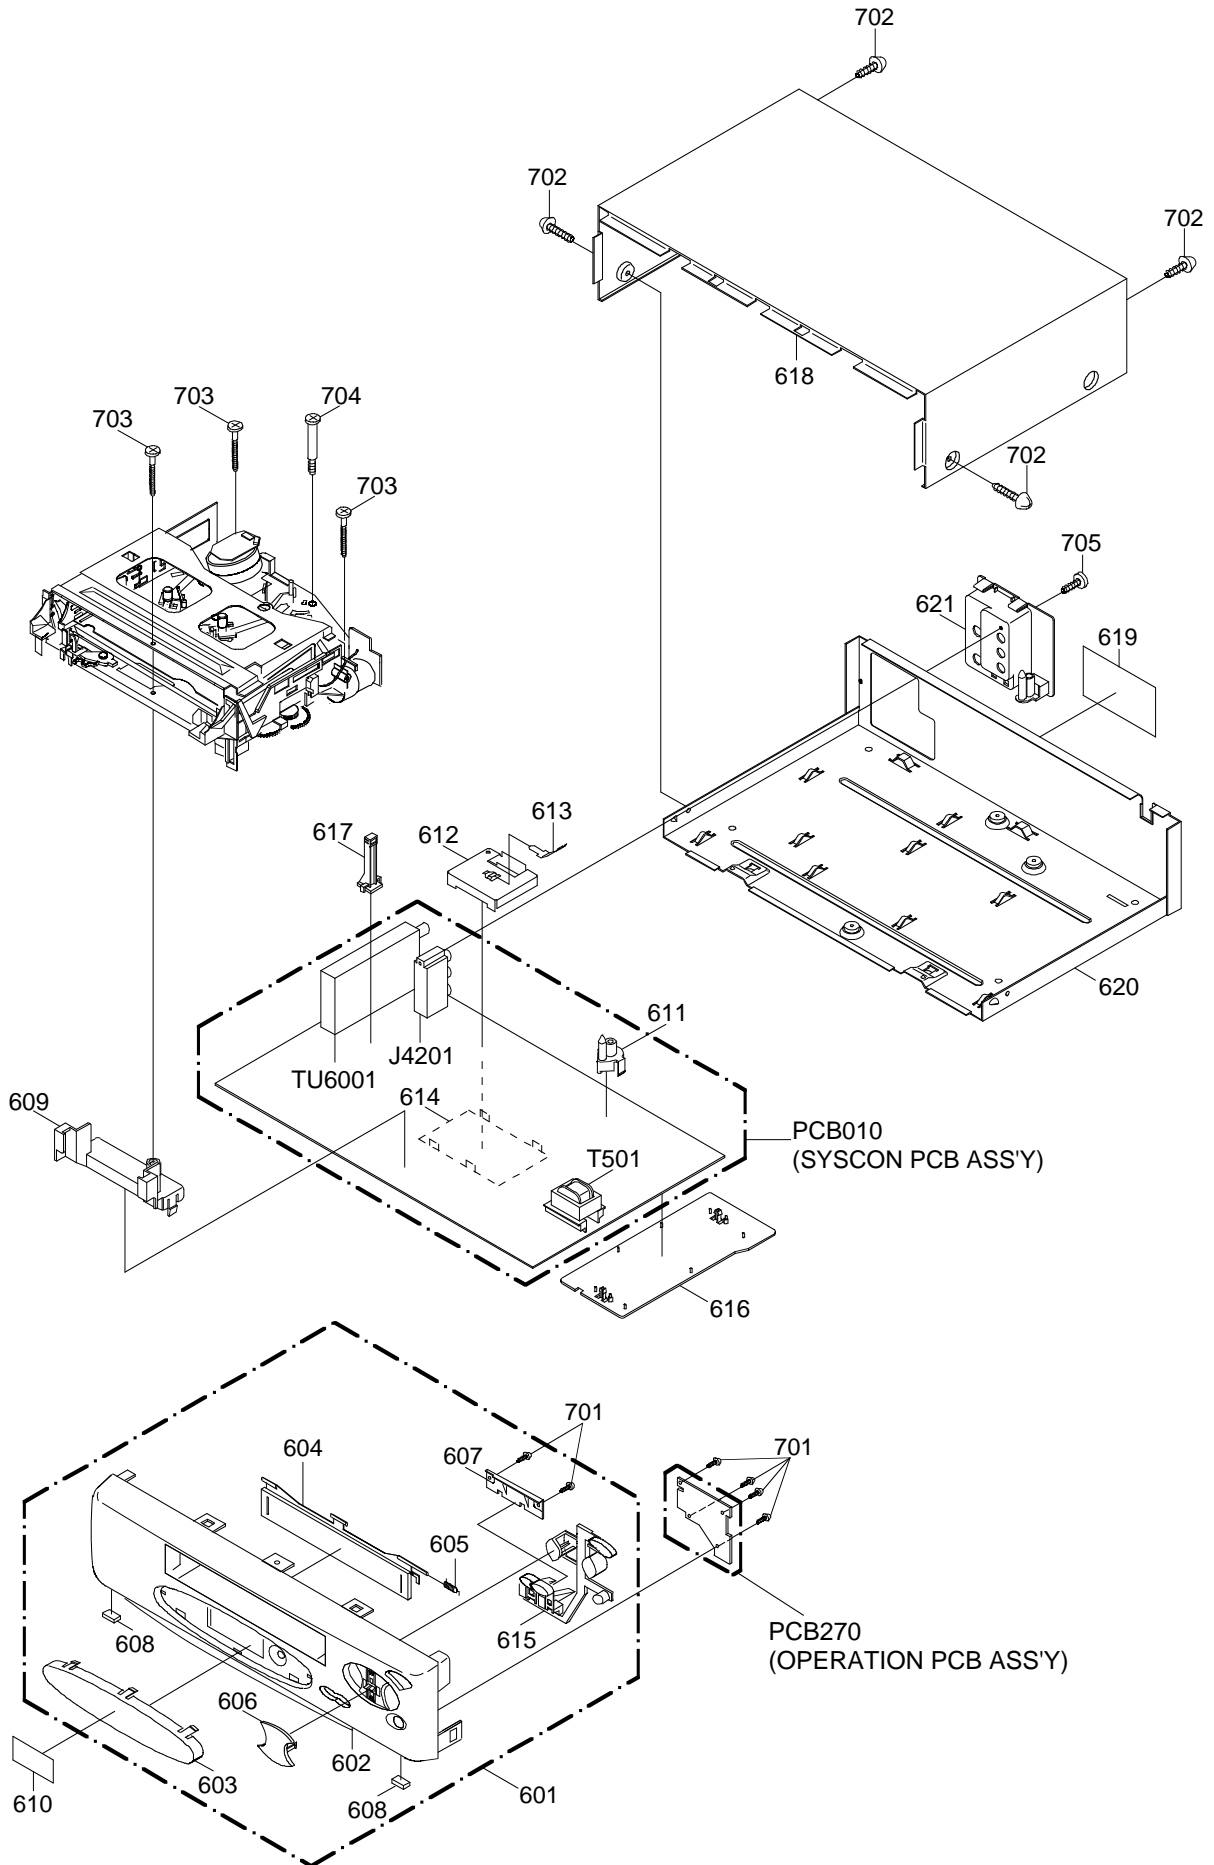


CHASSIS EXPLODED VIEW (TOP VIEW)

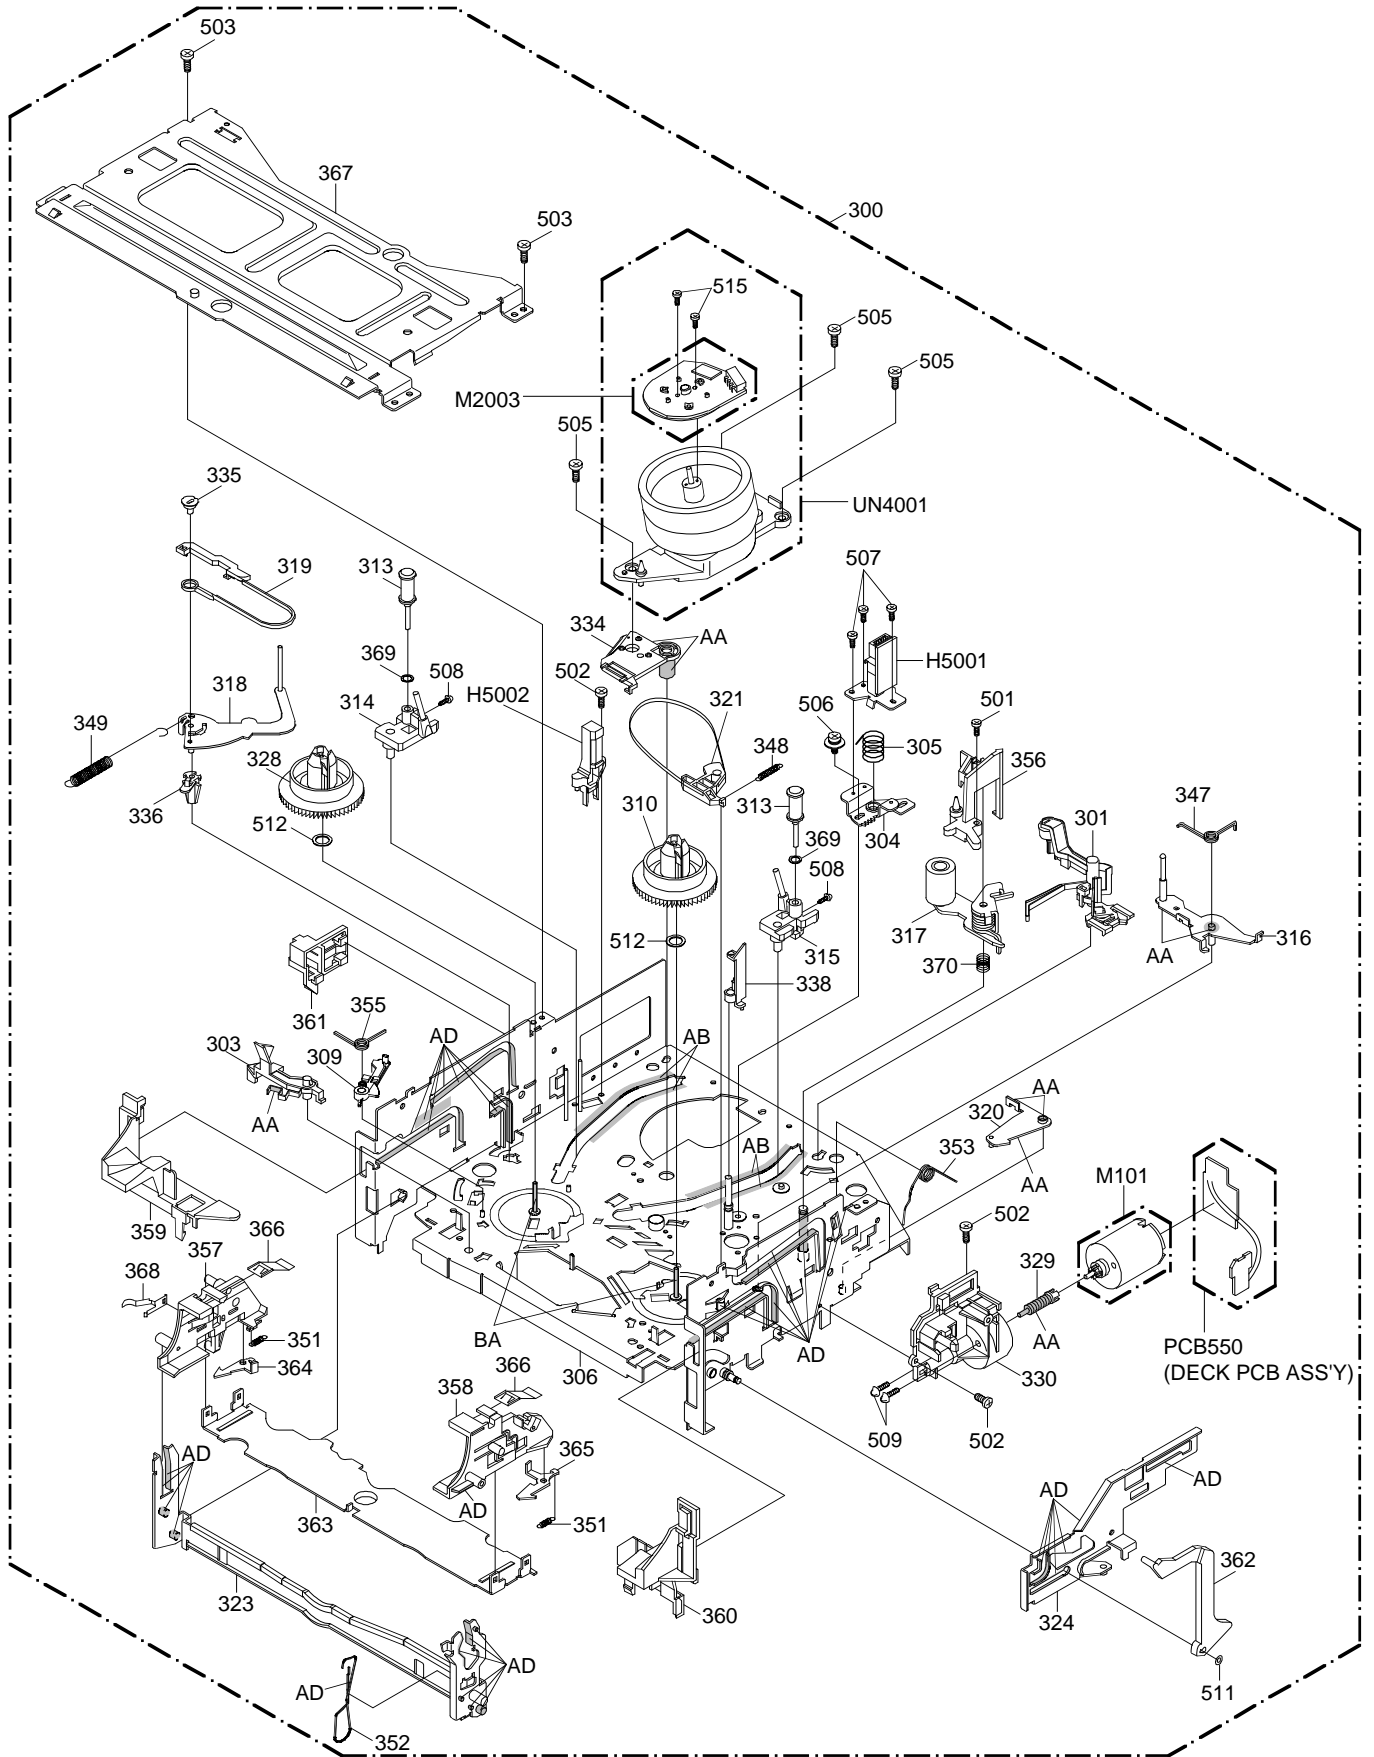

CLASS	PART NO.	MARK
GREASE	G-555G	AA
	G-488M	AB
	FL-721	AC
	MG-33	AD
OIL	FL OIL No. 6115	BA

NOTE: Applying positions AA, AB, AC, AD and BA for the grease or oil are displayed for this section. Check if the correct grease or oil is applied for each position.

CHASSIS EXPLODED VIEW (BOTTOM VIEW)

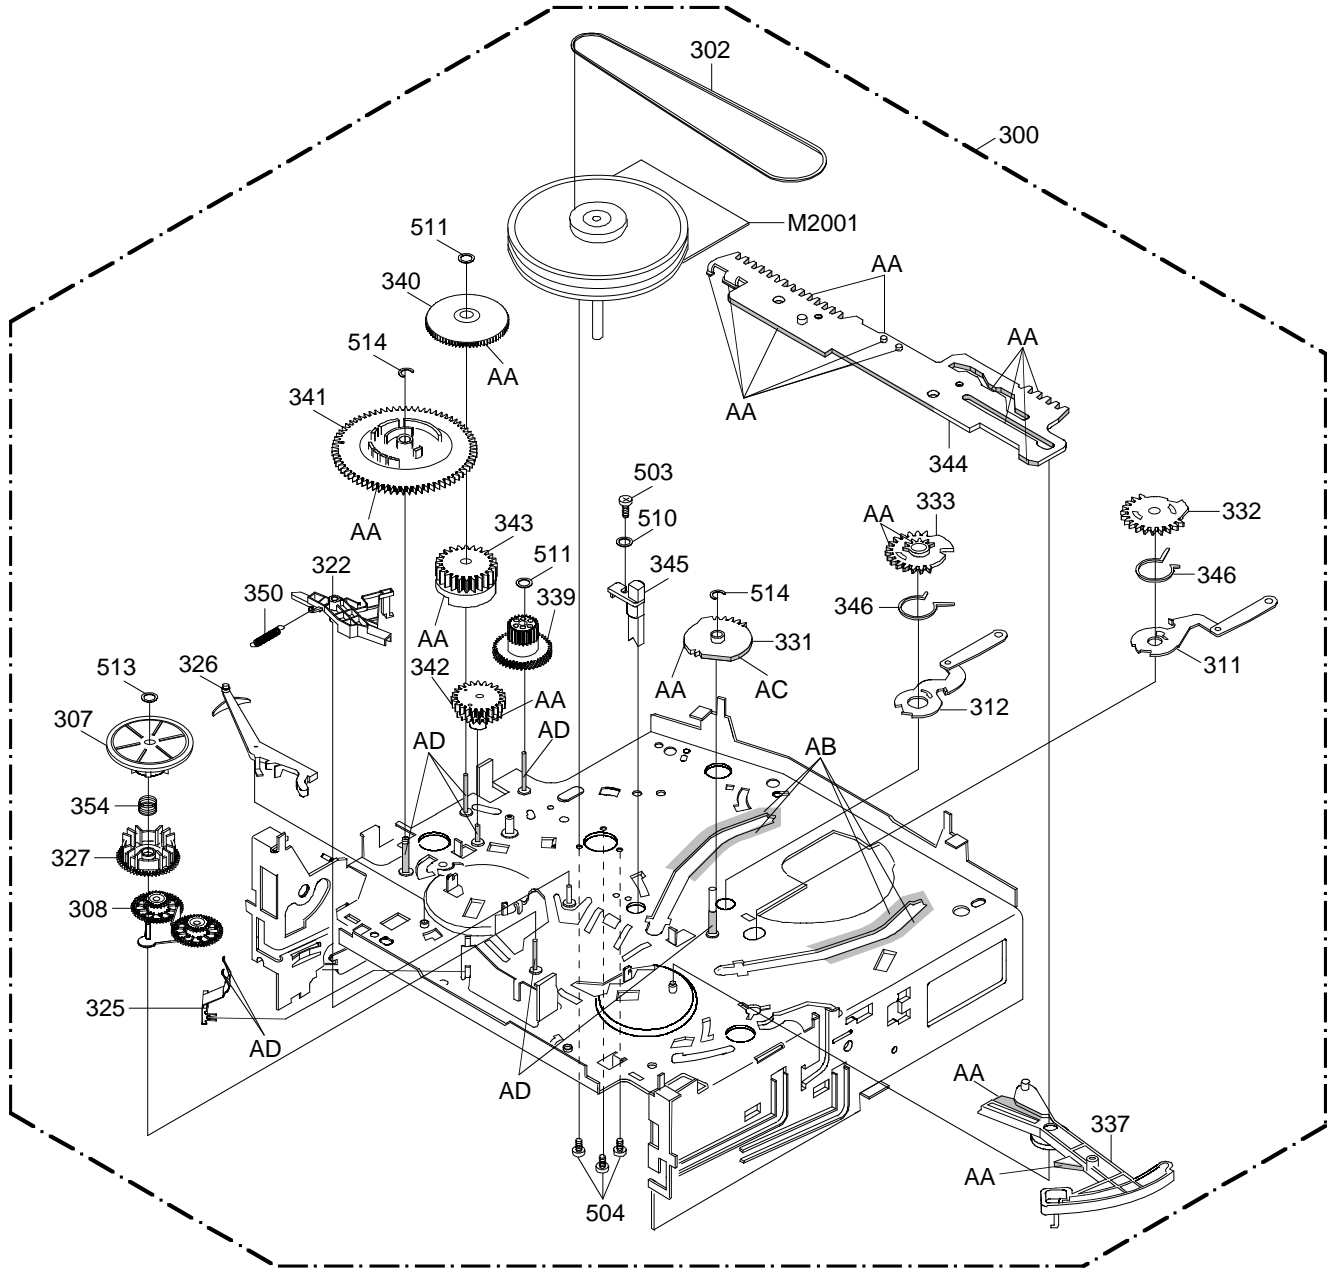

CLASS	PART NO.	MARK
GREASE	G-555G	AA
	G-488M	AB
	FL-721	AC
	MG-33	AD
OIL	FL OIL No. 6115	BA

NOTE: Applying positions AA, AB, AC, AD and BA for the grease or oil are displayed for this section. Check if the correct grease or oil is applied for each position.

MECHANICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	
601	A4C934B720	CABINET,FRONT ASS'Y	
602	701WPJ0886	CABINET,FRONT	
603	711WPA0107	PLATE,DISPLAY	
604	712WPJA324	FLAP	
605	743WKAA001	SPRING,FLAP	
606	735WPDA182	BUTTON DECK	
607	735WPA0377	HOLDER,CHANNEL	
608	800WFA0020	CUSHION,LEG	
609	701WPA0342	HOLDER,DECK(FIP)	
610	723000A698	SHEET,DISPLAY	
611	704WPA0007	HOLDER,DECK(R)	
612	752WSA0144	SHIELD,CASE HEAD AMP	
613	753WUA0051	SPRING,EARTH HEAD AMP	
614	753WSA0124	SHIELD,COVER HEAD AMP	
615	735WPDA183	BUTTON,FRAME	
616	755WPA0015	PLATE,COVER POWER	
617	85OP700036	HOLDER,EOT SENSOR	
618	702WSB0015	CABINET,TOP	
619	722A08A043	SHEET,RATING	
620	702WSA0059	PLATE,BOTTOM	
621	702WPA0646	PLATE,JACK	
701	8110226084	SCREW,TAP TITE(P) BIND	2.6x8
702	8107240802	SCREW,TAP TITE(S) BIND	4x8
703	8107140B94	SCREW,TAP TITE(S) PAN	4x29
704	8146240644	SCREW,TAP TITE(S) BIND	4x6
705	8110230A02	SCREW,TAP TITE(P) BIND	3x10
---	791WHA0010	GIFT SHEET	
---	792WHA0017	PACKAGE	
---	793WCD1189	GIFT BOX	
---	JA5U0200	POLYBAG	
---	J4C80417	REGISTRATION CARD	
---	J4C93401	INSTRUCTION BOOK	

CHASSIS REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300	A4C931B420A	DECK ASS'Y A4C931B420A	501	8107126A04	SCREW,TAP TITE(S) PAN 2.6x10
301	85OA500022	AHC ASS'Y	502	8107226804	SCREW,TAP TITE(S) BIND 2.6x8
302	85OP200290	BELT,CAPSTAN (S)	503	8107226604	SCREW,TAP TITE(S) BIND 2.6x6
303	85OP900689	LEVER,REC	504	8109126604	SCREW,TAP TITE(B) PAN 2.6x6
304	85OP500083	BASE,AC HEAD	505	810A126804	SCREW/WASHER(A) M2.6x8
305	85OP800324	SPRING,AC HEAD	506	810B126404	SCREW/WASHER(B) M2.6x4
306	85OA000305	MAIN CHASSIS ASS'Y (S)	507	8102120604	SCREW,PAN M2x6
307	85OA200077	CLUTCH ASS'Y (S)	508	8102120304	SCREW,PAN M2x3
308	85OA200080	ARM,IDLER ASS'Y (S)	509	8102130304	SCREW,PAN M3.0x3.0
309	85OP600556	ARM,SS BRAKE (S)	510	82A2675051	WASHER 2.6x7.5xT0.5
310	85OP200292	REEL,T (S)	511	82P266005N	POLYSLIDER WASHER(CUT) 2.6x6.0xT0.5
311	85OA300061	LOADING ARM S ASS'Y	512	82Q2647C5N	POLYSLIDER WASHER 2.6x4.7xT0.25
312	85OA300062	LOADING ARM T ASS'Y	513	82P184505N	POLYSLIDER WASHER(CUT) 1.8x4.5xT0.5
313	85OA400182	GUIDE ROLLER ASS'Y	514	83ETW30000	E-RING 3.0
314	85OA400188	BASE,INCL S ASS'Y	515	810A123504	SEMS A M2.3x5.0
315	85OA400196	BASE,INCL T(S) ASS'Y	CP101	069R740018	CONNECTOR PCB SIDE 52044-0445
316	85OA400199	P5-3 ARM ASS'Y(S)	H5001	1523D91034	HEAD (AUDIO CONTROL) HVMXA1072A
317	85OA400174	PINCH ROLLER BLOCK	H5002	1543D02013	HEAD (FULL ERASE) HVFHP0032A
318	85OA400175	TENSION ARM ASS'Y	△ M101	85OA600190	LOADING MOTOR ASS'Y
319	85OA400184	TENSION BAND ASS'Y (S)	△ M2001	1510398030	CAPSTAN DD UNIT F2QSB02
320	85OA400178	PINCH ROLLER LEVER ASS'Y	M2003	1589311005	MICRO MOTOR F2OEL82
321	85OA600188	BRAKE T ASS'Y (S)	PCB550	A4C831B550	DECK PCB ASS'Y VE8851
322	85OA600191	CAP BRAKE ASS'Y(S)	Q101	0000700320	TRANSISTOR,PHOTO RPT-38PB113
323	85OA900213	LINK ASS'Y	△ UN4001	A4C903B500	CYLINDER UNIT ASS'Y A4C903B500
324	85OA900216	LINK LEVER ASS'Y			
325	85OP200284	LEVER,CLUTCH (S)			
326	85OP200285	ACTUATOR,CLUTCH			
327	85OP200286	GEAR,COUPLING			
328	85OP200291	REEL,S (S)			
329	85OP600541	WORM			
330	85OP600542	BRACKET,MOTOR			
331	85OP300178	GEAR,MAIN LOADING			
332	85OP300179	GEAR,LOADING S			
333	85OP300180	GEAR,LOADING T			
334	85OP300186	HOLDER,LOADING GEAR			
335	85OP400472	ADJUST,TENSION			
336	85OP400492	HOLDER,TENSION			
337	85OP400490	LEVER,TENSION			
338	85OP400475	COVER,P4			
339	85OP600543	GEAR,JOINT			
340	85OP600544	GEAR,MIDDLE			
341	85OP600554	CAM,MAIN (S)			
342	85OP600546	CAM,P5			
343	85OP600547	CAM,PINCH ROLLER			
344	85OP600561	ROD,MAIN(S)			
345	85OP700035	REFLECTOR,LED			
346	85OP800318	SPRING,LOADING GEAR			
347	85OP800334	SPRING,P5 (S)			
348	85OP800335	SPRING,BRAKE T (S)			
349	85OP800322	SPRING,TENSION			
350	85OP800336	SPRING,CAP BRAKE (S)			
351	85OP800325	SPRING,LOCKER			
352	85OP800326	SPRING,LINK			
353	85OP800328	SPRING,DAMPER			
354	85OP800330	SPRING,RING			
355	85OP800337	SPRING,SS BRAKE (S)			
356	85OP900680	OPENER,CASS			
357	85OP900683	CASS SIDE L			
358	85OP900684	CASS SIDE R			
359	85OP900702	TAPE GUIDE L(P,R)			
360	85OP900686	TAPE GUIDE R			
361	85OP900703	COVER,SENSOR L2			
362	85OP900688	LEVER,FLAP			
363	85OP900690	CASS HOLDER			
364	85OP900691	LOCKER,L			
365	85OP900692	LOCKER,R			
366	85OP900694	SPRING,PACK			
367	85OP900695	BRACKET,TOP			
368	85OP900696	SPRING,CASS EARTH			
369	85OP400485	O-RING			
370	85OP800341	SPRING,P/R ARM			

ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
RESISTORS			TRANSISTORS		
△ R502	R03102335J	RC 3.3M OHM 1/2W	Q1006	0000100380	PHOTO TRANSISTOR PNA2604M010R
△ R508	R655U4331J	R,FUSE 330 OHM 1/4W	Q1007	TNYJC05001	COMPOUND TRANSISTOR DTC124EKAT146
△ R511	R3X181680J	R,METAL OXIDE 68 OHM 1W	Q4001	TC3T033310	TRANSISTOR,SILICON 2SC3331(S,T,U)-A
△ R512	R3X28A333J	R,METAL OXIDE 33K OHM 2W	Q4002	TC3T033310	TRANSISTOR,SILICON 2SC3331(S,T,U)-A
△ R514	R3X181010J	R,METAL OXIDE 1 OHM 1W or	Q4003	TPYJC05001	COMPOUND TRANSISTOR DTA124EKAT146
	R3U181010J	R,METAL OXIDE 1 OHM 1W or	Q4004	TC5T018154	TRANSISTOR,SILICON 2SC1815Y(TPE2)
	R3K181010J	R,METAL 1 OHM 1W	Q4005	TA3T013180	TRANSISTOR,SILICON 2SA1318(S,T)-AA
△ R527	R0X2X2124J	RC 120K OHM 1/2W	Q4006	TD3T007340	TRANSISTOR,SILICON 2SD734(E,F)-AA
△ R529	R65584331J	R,FUSE 330 OHM 1/4W	Q4007	TC5T018154	TRANSISTOR,SILICON 2SC1815Y(TPE2)
△ R1002	R3X1812R7J	R,METAL OXIDE 2.7 OHM 1W	Q4008	TC5T018154	TRANSISTOR,SILICON 2SC1815Y(TPE2)
CAPACITORS			Q4009	TA5T010154	TRANSISTOR,SILICON 2SA1015Y(TPE2)
△ C504	P2122B104M	CMP 0.1 UF 250V ECQUL	Q4201	TA5T010154	TRANSISTOR,SILICON 2SA1015Y(TPE2)
△ C505	CB3LE0ML3M	CC 0.0033UF 250V	Q4202	TPYJC05001	COMPOUND TRANSISTOR DTA124EKAT146
△ C506	E02LU1101M	CE 100 UF 10V	Q4203	TC5T018154	TRANSISTOR,SILICON 2SC1815Y(TPE2)
△ C508	E02AFC820M	CE 82 UF 200V	Q4204	TC5T018154	TRANSISTOR,SILICON 2SC1815Y(TPE2)
△ C512	C0JFE0514M	CC 0.01 UF 500V E	Q6001	TNYJC05001	COMPOUND TRANSISTOR DTC124EKAT146
△ C514	E02LT1102M	CE 1000 UF 10V	Q6002	T8YJ2412K0	TRANSISTOR,SILICON 2SC2412KT146 R,S
△ C518	E50HU5100M	CE 10 UF 50 V	COILS & TRANSFORMERS		
△ C519	E02LT2471M	CE 470 UF 16V	△ L501	029T000083	COIL,LINE FILTER 0R3A433F20
△ C520	E02LU1471M	CE 470 UF 10V	L504	021W66220M	COIL,CHOKE 22 UH
△ C522	E02LT2221M	CE 220 UF 16V	L505	021W66220M	COIL,CHOKE 22 UH
△ C523	E02LU5100M	CE 10 UF 50V	L1001	021LA6150K	COIL 15 UH
DIODES			L4001	02167F101J	COIL 100 UH
D501	D23TSB0400	DIODE,SILICON SB040-G3	L4002	02167F101J	COIL 100 UH
△ D502	D28TELS2N2	DIODE,RECTIFER 10ELS2N-TA1B2	L4003	021673101J	COIL 100 UH
△ D503	D17T002440	DIODE,SILICON 1SS244T-77	L4005	02167F470J	COIL 47 UH
△ D505	D2LXE65800	DIODE,SILICON 1N4005E-G23	L4007	021LA6101K	COIL 100 UH or
D506	D1VT001330	DIODE,SILICON 1SS133T-77		021QA6101K	COIL 100 UH
D507	D1VT001330	DIODE,SILICON 1SS133T-77	L4008	02167F101J	COIL 100 UH
△ D508	D2LXE65800	DIODE,SILICON 1N4005E-G23	L5501	02167F101J	COIL 100 UH
D510	D1VT001330	DIODE,SILICON 1SS133T-77	L5502	021LA6101K	COIL 100 UH
D511	D2LTP10JE0	DIODE,RECTIFIER RGP10JE-G3	L5504	02167F470J	COIL 47 UH
△ D512	D2LKB340L0	DIODE,SCHOTTKY SB340L-6737	L6001	02167F101J	COIL 100 UH
D513	D97U01301B	DIODE,ZENER MTZJ13B T-77	L6002	02167F470J	COIL 47 UH
△ D514	D23T0UG2D0	DIODE,SILICON UG2D-G23	△ T501	0481220044	TRANSFORMER,SWITCHING 8122004
△ D515	D17T002440	DIODE,SILICON 1SS244T-77	T4001	031626007S	COIL,BIAS OSC 1626007
D517	D97T02701D	DIODE,ZENER MTZJ27D T-77	JACKS		
D519	D28T21DQN4	DIODE,SCHOTTKY 21DQ04N-TA2B1	J4201	0602411006	JACK,RCA JPJ4311-011432
△ D523	D2LXE65800	DIODE,SILICON 1N4005E-G23	J4203	0607431012	JACK,RCA 3.5 LPR1251-0500
D524	D97U03301B	DIODE,ZENER MTZJ33B T-77	SWITCHES		
△ D528	D2LXE65800	DIODE,SILICON 1N4005E-G23	SW603	0504201T32	SWITCH,TACT SKQNAED010
D651	D97U05R11C	DIODE,ZENER MTZJ5.1C T-77	SW604	0504201T32	SWITCH,TACT SKQNAED010
D1001	0010600060	LED SID1050CM	SW605	0504201T32	SWITCH,TACT SKQNAED010
D1002	D2LXE65800	DIODE,SILICON 1N4005E-G23	SW606	0504201T32	SWITCH,TACT SKQNAED010
D1003	D93T11201A	DIODE,ZENER TMPG06-12A	SW607	0504201T32	SWITCH,TACT SKQNAED010
D1004	D2LXE65800	DIODE,SILICON 1N4005E-G23	SW608	0504201T32	SWITCH,TACT SKQNAED010
D1005	D2LXE65800	DIODE,SILICON 1N4005E-G23	SW659	0504201T31	SWITCH,TACT SKHVBED010
D1006	D2LXE65800	DIODE,SILICON 1N4005E-G23	SW660	0504201T31	SWITCH,TACT SKHVBED010
D1007	D1VT001330	DIODE,SILICON 1SS133T-77	SW1001	0508221001	SWITCH (LEAF) SPVF130100
D1008	D1VTB721Q0	DIODE,SCHOTTKY RB721QT-77	SW6001	0501201010	SWITCH,SLIDE SSAB110100
D4205	D97U06R81B	DIODE,ZENER MTZJ6.8B T-77	P.C.BOARD ASSEMBLIES		
D5501	D1VT001330	DIODE,SILICON 1SS133T-77	PCB010	A4C934B01A	PCB ASS'Y VM9170A
ICs			PCB270	A4C934B27A	PCB ASS'Y VE9887A
△ IC501	H1KJ9A4310	IC KIA431	PCB550	A4C831B550	SEE CHASSIS REPLACEMENT PARTS LIST
IC651	I07F529790	IC BU2979K	MISCELLANEOUS		
IC1001	I54F50082A	IC OEC0082A	B502	024DT03581	CORE,BEADS LFP3A-M3R2TA
△ IC1002	I07SQ955AN	IC BA6955AN	B503	0246T03561	CORE,BEADS HF55BTL3.5X6B
IC1003	IE1J0S31AH	IC RE5VS31A	△ CD501	120R614902	CORD,AC BUSH U4N 0R614902
IC1099	A4C934B015	IC M24C01-BN6	CD651	122F040702	CORD,JUMPER 2F040702
IC4001	I03F310770	IC LA71077AM-MPB	CP501	0697320039	CORD,UX CONNECTOR THL-P03P-B1
IC5501	I01F62FBP0	IC AN3662FBP	CP601	069J740019	CONNECTOR PCB SIDE IMSA-9604S-04Z13
TRANSISTORS			CP651	069R740028	CONNECTOR PCB SIDE 52045-0445
△ Q502	TD3T007340	TRANSISTOR,SILICON 2SD734(E,F)-AA	CD1001	122F040702	CORD,JUMPER 2F040702 or
△ Q503	TCWQ4160E0	TRANSISTOR,SILICON 2SC4160-OEC-YAC11		122S040703	CORD,JUMPER 2S040703
△ Q509	TD3T012460	TRANSISTOR,SILICON 2SD1246(S,T)-AA	CD1002	122F061501	CORD,JUMPER 2F061501 or
△ Q510	000210001R	PHOTO COUPLER ON3171R		122S061401	CORD,JUMPER 1.25X6X138XC
△ Q511	000210001R	PHOTO COUPLER ON3171R	CD4001	122F071701	CORD,JUMPER 2F071701 or
△ Q512	TD3T007340	TRANSISTOR,SILICON 2SD734(E,F)-AA		122S071702	CORD,JUMPER 1.25X7X170XC
Q513	TNYJC05001	COMPOUND TRANSISTOR DTC124EKAT146	CD6002	06CQL02001	CABLE SI-C108-38
△ Q514	TD3T007340	TRANSISTOR,SILICON 2SD734(E,F)-AA	CP1001	069R770028	CONNECTOR PCB SIDE 52045-0745
Q1001	0002G00540	PHOTO COUPLER GP1S566 or	CP1002	0697280590	CONNECTOR PCB SIDE TMC-J08P-B1
	0002M00570	PHOTO COUPLER SG-260	CP1003	069R740028	CONNECTOR PCB SIDE 52045-0445
Q1002	0002G00540	PHOTO COUPLER GP1S566 or	CP4001	0697290620	CONNECTOR PCB SIDE TOC-C09X-A1
	0002M00570	PHOTO COUPLER SG-260	CP4002	069R760018	CONNECTOR PCB SIDE 52044-0645
Q1003	TC5T018154	TRANSISTOR,SILICON 2SC1815Y(TPE2)	CP4003	0697120320	CONNECTOR PCB SIDE TMC-T02X-E1
Q1004	0002G00550	PHOTO COUPLER GP1S94L	CUS011	800WF00004	CUSHION-A
Q1005	0002G00550	PHOTO COUPLER GP1S94L	△ F501	080PA1R601	FUSE 23301.6-MB000

ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	
MISCELLANEOUS			
FH501	06710T0006	HOLDER,FUSE	EYF-52BC
FH502	06710T0006	HOLDER,FUSE	EYF-52BC
OS651	077Q000018	REMOTE RECEIVER	PIC26043LO
TM601	07660CA010	TRANSMITTER	SBER20169A
△ TU6001	0162600016	RF UNIT	TMDH2-020A
V651	096779R005	TUBE FLUORSCENT DISPLAY	7-MT-201GA
X1001	100CT01002	CRYSTAL HC-49/U-S	10MHz
X4001	100CF3R512	CRYSTAL HC-49/U	3.579545MHz

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR
 CE..... ALUMI ELECTROLYTIC CAPACITOR
 CP..... POLYESTER CAPACITOR
 CPP..... POLYPROPYLENE CAPACITOR
 CPL..... PLASTIC CAPACITOR
 CMP..... METAL POLYESTER CAPACITOR
 CMPL..... METAL PLASTIC CAPACITOR
 CMPP..... METAL POLYPROPYLENE CAPACITOR

SPEC.NO.	M4C9-34B
O/R NO.	B994002



MVR4040A

SERVICE MANUAL

VIDEO CASSETTE RECORDER

**REVISION 1
MFR'S VERSION B**

MFR'S VERSION	IC4001
A	LA71077AM-MPB
B	LA71077BM-MPB




DIFFERENCES

Alteration of IC.

REF.NO.	MFR'S VERSION A		MFR'S VERSION B	
	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
IC4001	I03F310770	IC LA71077AM-MPB	I03F31077B	IC LA71077BM-MPB
R4041		—————	R801R7102J	RC 1K OHM 1/10W
R4051	R903N8273J	RC 27K OHM 1/8W	R903N8333J	RC 33K OHM 1/8W
R4202	R001T6680J	RC 68 OHM 1/6W	R001T6750J	RC 75 OHM 1/6W
PCB010	A4C934B01A	SYSCON PCB ASS'Y VM9170A	A4C934B01B	SYSCON PCB ASS'Y VM9170A


SYSCON PCB's are interchangeable.

PRINTED CIRCUIT BOARDS SYSCON(CHIP MOUNTED PARTS) SOLDER SIDE

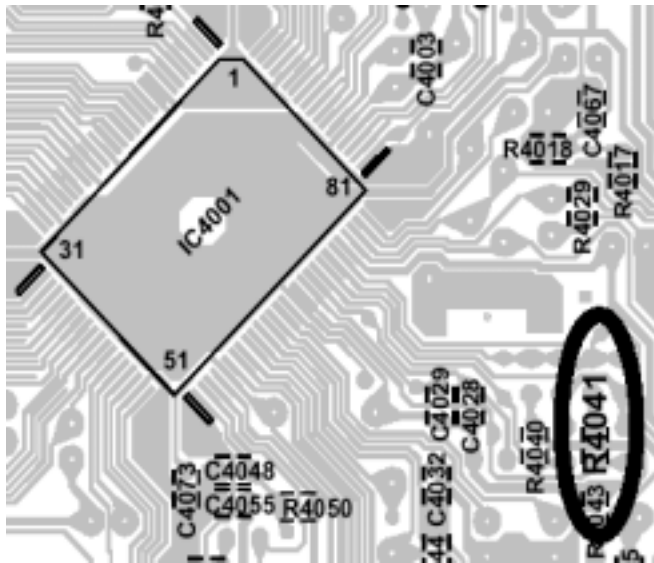

ADD R4041

Y/C/AUDIO/CCD/HEAD AMP SCHEMATIC DIAGRAM

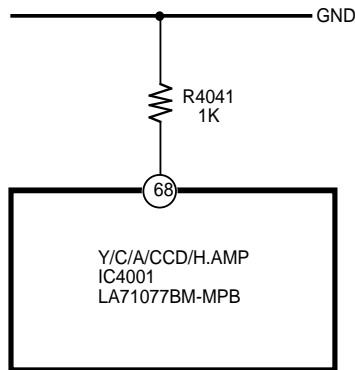

ADD R4041

SPEC. NO.	M4C9-34B
O/R NO.	B9Y4004