


**Memorex<sup>®</sup>**

**MVT2137**

# **SERVICE MANUAL**

---

**COLOR TELEVISION/VIDEO CASSETTE RECORDER**

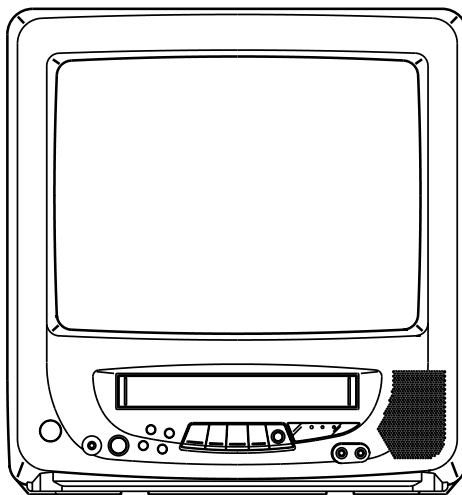

**VHS**

**ORIGINAL  
MFR'S VERSION A**

## SERVICING NOTICES ON CHECKING

### 1. KEEP THE NOTICES


As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

### 2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

### 3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  mark, the designated parts must be used.

### 4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

### 5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

### 6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

### 7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

#### (INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the eternal exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

#### **[Note 1]**

If you have not the 500V insulation resistance meter, use a Tester.

#### **[Note 2]**

External exposure metal: Antenna terminal  
Earphone jack

## HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

### 1. MODEL NUMBER and VERSION LETTER


The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

### 2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

## TAPE REMOVAL METHOD AT NO POWER SUPPLY

1. Remove the VCR block from the main unit.  
**(Refer to item 1 of the DISASSEMBLY INSTRUCTIONS.)**
2. Remove the screw ① of the Deck Chassis and remove the Loading Motor.
3. Rotate the Pinch Roller Cam in the direction of the arrow by hand to slacken the Video Tape.
4. Rotate the Clutch Ass'y either of the directions to wind the Video Tape in the Cassette Case.
5. Repeat the above step 3~4. Then take out the Video Cassette from the Deck Chassis. Be careful not to scratch on the tape.

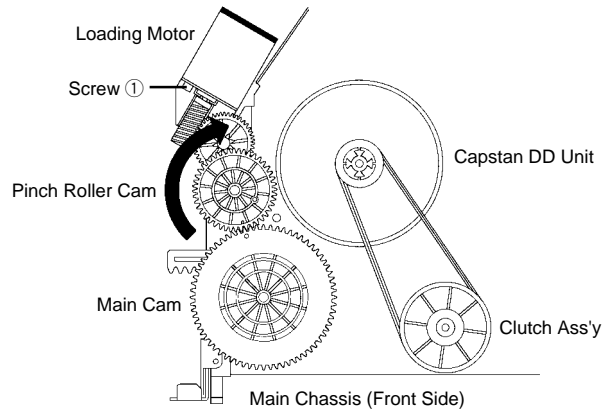

# CONTENTS

|   |            |
|---|------------|
| <b>SERVICING NOTICES ON CHECKING</b> .....            | A1-1       |
| <b>HOW TO ORDER PARTS</b> .....                       | A1-1       |
| <b>TAPE REMOVAL METHOD AT NO POWER SUPPLY</b> .....   | A1-2       |
| <b>CONTENTS</b> .....                                 | A2-1       |
| <b>GENERAL SPECIFICATIONS</b> .....                   | A3-1~A3-4  |
| <b>DISASSEMBLY INSTRUCTIONS</b>                       |            |
| 1. REMOVAL OF MECHANICAL PARTS AND P. C. BOARDS ..... | B1-1, B1-2 |
| 2. REMOVAL OF DECK PARTS .....                        | B2-1~B2-6  |
| 3. REMOVAL OF ANODE CAP .....                         | B3-1       |
| 4. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC .....  | B4-1, B4-2 |
| <b>KEY TO ABBREVIATIONS</b> .....                     | C1-1, C1-2 |
| <b>SERVICE MODE LIST</b> .....                        | C2-1       |
| <b>PREVENTIVE CHECKS AND SERVICE INTERVALS</b> .....  | C3-1, C3-2 |
| <b>WHEN REPLACING EEPROM (MEMORY) IC</b> .....        | C4-1       |
| <b>SERVICING FIXTURES AND TOOLS</b> .....             | D1-1       |
| <b>PREPARATION FOR SERVICING</b> .....                | D1-2       |
| <b>MECHANICAL ADJUSTMENTS</b> .....                   | D2-1~D2-4  |
| <b>ELECTRICAL ADJUSTMENTS</b> .....                   | D3-1~D3-6  |
| <b>BLOCK DIAGRAMS</b>                                 |            |
| TV .....  | E-1, E-2   |
| Y/C/AUDIO/CCD/HEAD AMP .....                          | E-3, E-4   |
| MICON/IN/OUT/OPERATION .....                          | E-5, E-6   |
| <b>PRINTED CIRCUIT BOARDS</b>                         |            |
| OPERATION .....                                       | F-1, F-2   |
| MAIN/CRT .....  | F-3, F-4   |
| SYSCON .....  | F-5~F-8    |
| <b>SCHEMATIC DIAGRAMS</b>                             |            |
| Y/C/AUDIO/CCD/HEAD AMP .....                          | G-1, G-2   |
| MICON .....   | G-3, G-4   |
| POWER .....   | G-5, G-6   |
| IN/OUT .....  | G-7, G-8   |
| CHROMA/IF .....                                       | G-9, G-10  |
| SOUND AMP .....                                       | G-11, G-12 |
| HI-FI .....   | G-13, G-14 |
| IF .....  | G-15, G-16 |
| TV POWER .....  | G-17, G-18 |
| DEFLECTION .....                                      | G-19, G-20 |
| CRT .....   | G-21, G-22 |
| OPERATION .....                                       | G-23, G-24 |
| INTERCONNECTION DIAGRAM .....                         | G-25, G-26 |
| <b>WAVEFORMS</b> .....                                | H-1, H-2   |
| <b>MECHANICAL EXPLODED VIEWS</b> .....                | I1-1, I1-2 |
| <b>CHASSIS EXPLODED VIEWS</b> .....                   | I2-1, I2-2 |
| <b>MECHANICAL REPLACEMENT PARTS LIST</b> .....        | J1-1       |
| <b>CHASSIS REPLACEMENT PARTS LIST</b> .....           | J2-1       |
| <b>ELECTRICAL REPLACEMENT PARTS LIST</b> .....        | J3-1, J3-3 |

# GENERAL SPECIFICATIONS

|     |                      |                                 |  |                                     |                                  |
|-----|----------------------|---------------------------------|--|-------------------------------------|----------------------------------|
| G-1 | TV System            | CRT                             | CRT Size / Visual Size                       | 13 inch / 335.4mmV                  |                                  |
|     |                      |                                 | CRT Type                                     | Normal                              |                                  |
|     |                      |                                 | Deflection                                   | 90 degree                           |                                  |
|     |                      |                                 | Magnetic Field BV/BH                         | +0.45G / 0.18G                      |                                  |
|     |                      |                                 | Color System                                 | NTSC                                |                                  |
|     |                      |                                 | Speaker                                      | 1Speaker                            |                                  |
|     |                      |                                 |  | Position                            | Front                            |
|     |                      |                                 |  | Size                                | 1.5 x 2.5 Inch                   |
|     |                      |                                 |  | Impedance                           | 8 ohm                            |
|     |                      |                                 | Sound Output                                 | MAX                                 | 1.5 W                            |
|     |                      | 10%(Typical)                    | 1.0 W  |                                     |                                  |
| G-2 | VCR System           | System                          |  | VHS Player / Recorder               |                                  |
|     |                      | Video System                    |  | NTSC                                |                                  |
|     |                      | Hi-Fi STEREO                    |  | No                                  |                                  |
|     |                      | NTSC PB                         |  | -                                   |                                  |
|     |                      | Deck                            | DECK   | OVD-7                               |                                  |
|     |                      |                                 | Loading System                               | Front                               |                                  |
|     |                      |                                 | Motor  | 3                                   |                                  |
|     |                      | Heads                           | Video Head                                   | 2 Head                              |                                  |
|     |                      |                                 | FM Audio Head                                | No                                  |                                  |
|     |                      |                                 | Audio /Control                               | Mono/Yes                            |                                  |
|     |                      |                                 | Erase(Full Track Erase)                      | Yes                                 |                                  |
|     |                      | Tape                            | Rec  | PAL                                 |                                  |
|     |                      | Speed                           |  | NTSC                                |                                  |
|     |                      |                                 | Play   | PAL                                 |                                  |
|     |                      |                                 |  | NTSC                                |                                  |
|     |                      |                                 | Fast Forward / Rewind Time (Approx.) at 25oC |                                     | FF:4'50"/REW:2'30" with Cassette |
|     | Forward/Reverse      | NTSC or PAL-M                   | SP/LP/SLP=3x,5x/7x,9x/9x,15x                 |                                     |                                  |
|     | Picture Search       |                                 | -  |                                     |                                  |
|     | Frame Advance        | Slow                            | -  |                                     |                                  |
|     | Slow Speed           | Variable Slow                   | -  |                                     |                                  |
| G-3 | Tuning System        | Broadcasting System             |  | US Sysytem M                        |                                  |
|     |                      | Tuner and Receive CH            | System                                       | 1Tuner                              |                                  |
|     |                      |                                 | Destination                                  | US (w/CATV)                         |                                  |
|     |                      |                                 | Tuning System                                | F-Synth                             |                                  |
|     |                      |                                 | Input Impedance                              | VHF/UHF 75 ohm                      |                                  |
|     |                      |                                 | CH Coverage                                  | 2-69, 4A,A-5-A-1, A-I, J-W,W+1-W+84 |                                  |
|     |                      | Intermediate Frequency          | Picture(FP)                                  | 45.75MHz                            |                                  |
|     |                      |                                 | Sound(FS)                                    | 41.25MHz                            |                                  |
|     |                      |                                 | FP-FS  | 4.5MHz                              |                                  |
|     |                      |                                 | Preset CH                                    |                                     | No                               |
|     | Stereo/Dual TV Sound |                                 | No   |                                     |                                  |
|     | Tuner Sound Muting   |                                 | Yes  |                                     |                                  |
| G-4 | Signal               | Video Signal                    | Input Level                                  | 1 V p-p/75 ohm                      |                                  |
|     |                      |                                 | Output Level                                 | 1 V p-p/75 ohm                      |                                  |
|     |                      |                                 | S/N Ratio (Weighted)                         | 50 dB                               |                                  |
|     |                      |                                 | Horizontal Resolution at SP Mode             | 220Lines                            |                                  |
|     |                      | Audio Signal                    | Input Level                                  | -8dBm/50Kohm                        |                                  |
|     |                      |                                 | Output Level                                 | -8dBm/1Kohm                         |                                  |
|     |                      |                                 | S/N Ratio at SP (Weighted)                   | 38dB                                |                                  |
|     |                      |                                 | Harmonic Distortion at SP (1KHz) Typical     | 1.5 %                               |                                  |
|     |                      |                                 | Frequency Response at SP                     | 100Hz ~10kHz                        |                                  |
|     |                      |                                 |  | at LP                               | -                                |
|     |                      |                                 |  | at SLP                              | 100Hz ~4kHz                      |
|     |                      |                                 | Hi-Fi Audio Signal                           | Dynamic Range : More than           | -                                |
|     |                      |                                 |  | Wow And Flutter : Less than         | -                                |
|     |                      |                                 |  | Channel Separation : More than      | -                                |
|     |                      | Harmonic Distortion : Less than | -  |                                     |                                  |
| G-5 | Power                | Power Source                    | AC   | 120V 60Hz                           |                                  |
|     |                      |                                 | DC   | 12V                                 |                                  |
|     |                      | Power Consumption               |  | 65 W at 120V 60Hz                   |                                  |
|     |                      |                                 | at DC  | 54W at 12V                          |                                  |
|     |                      |                                 | Stand by (at AC) Per Year                    | 4 W at 120V 60 Hz                   |                                  |
|     | Protector            | Power Fuse                      | Yes  |                                     |                                  |
|     |                      | Dew Sensor                      | Yes  |                                     |                                  |
| G-6 | Regulation           | Safety                          |  | UL                                  |                                  |
|     |                      | Radiation                       |  | FCC                                 |                                  |
|     |                      | X-Radiation                     |  | DHHS                                |                                  |
| G-7 | Temperature          | Operation                       |  | +5°C ~ +40°C                        |                                  |
|     |                      | Storage                         |  | -20°C ~ +60°C                       |                                  |
| G-8 | Operating Humidity   |                                 |  | Less then 80% RH                    |                                  |
| G-9 | On Screen Display    | Menu                            |  | Yes                                 |                                  |
|     |                      | Menu Type                       |  | Character                           |                                  |

## GENERAL SPECIFICATIONS

|             |  |                                       |
|-------------|--|---------------------------------------|
|             | Timer Rec Set  | Yes                                   |
|             | Channel Setup  | Yes                                   |
|             | TV/CATV  | Yes                                   |
|             | Auto ch Memory   | Yes                                   |
|             | Add/Delete   | Yes                                   |
|             | Guide ch Set   | No                                    |
|             | TV Setup   | Yes                                   |
|             | V-chip Set   | Yes                                   |
|             | On/Off Timer Set   | Yes                                   |
|             | Picture  | Yes                                   |
|             | Audio  | No                                    |
|             | Sap On/Off   | No                                    |
|             | Auto Repeat On/Off   | Yes                                   |
|             | System Setup   | Yes                                   |
|             | Clock Set  | Yes                                   |
|             | Language   | Yes                                   |
|             | Auto Clock On/Off  | Yes                                   |
|             | Standard Time  | Yes                                   |
|             | Daylight Saving Time   | Yes                                   |
|             | Commercial Advance   | No                                    |
|             | Marking On/Off   | No                                    |
|             | Blueback On/Off  | No                                    |
|             | Playback Auto/Manual   | No                                    |
|             | Unmarked Tape  | No                                    |
|             | Movie Advance  | No                                    |
|             | Go To Movie  | No                                    |
|             | Go To Preview  | No                                    |
|             | G-CODE(or SHOWVIEW or PLUSCODE)No. Entry                         | No                                    |
|             | Clock  | Yes                                   |
|             | CH/AV  | Yes                                   |
|             | Tape Counter(Linear Counter)                                     | Yes                                   |
|             | Tape Speed   | Yes                                   |
|             | Sleep Time   | Yes                                   |
|             | Stereo/Audio Output  | No                                    |
|             | Bilingual  | No                                    |
|             | SAP  | No                                    |
|             | Control  | Volume                                |
|             | Level  | Bright / Contrast / Sharpness / Color |
|             |  | Tint                                  |
|             |  | Bass/Treble/Balance                   |
|             |  | Manual Tracking                       |
|             | Play/Stop/FF/Rew/Rec/OTR/T-Rec/Pause/Eject/Tape In (Symbol Mark) | Yes                                   |
|             | Auto Tracking/Manual Tracking                                    | Yes                                   |
|             | Caption / Text   | Yes                                   |
|             | Index  | No                                    |
|             | Muting   | Yes                                   |
|             | Hi-Fi  | No                                    |
|             | Repeat   | Yes                                   |
|             | Zero Return  | No                                    |
|             | DEW  | Yes                                   |
| <b>G-10</b> | <b>OSD Language</b>  | English French Spanish                |
| <b>G-11</b> | <b>Clock,Timer and Timer Back-up</b>                             | Calendar<br>1990/1/1 ~ 2081/12/31     |
|             | Timer Events   | 8 prog./ 1 month                      |
|             | One Touch Recording Max Time                                     | 5 hours                               |
|             | OTPB Valid Time  | -                                     |
|             | Sleep Timer  | Max Time<br>120 min.                  |
|             |  | Step<br>10 min.                       |
|             | On/Off Timer   | Program(On Tim / Off Tim)<br>1 prog.  |
|             | Auto Shut Off  | No Signal<br>15 min.                  |
|             |  | No Operation<br>-                     |
|             | Timer Back-up (at Power Off Mode)                                | 5 sec.                                |
| <b>G-12</b> | <b>Remote Control</b>  | Unit<br>RC-CG                         |
|             | Glow in Dark Remocon   | Yes                                   |
|             | Power Source   | Voltage(D.C)<br>3V                    |
|             |  | UM size x pcs<br>UM-4 x 2 pcs         |
|             | Total Keys   | 41 Keys                               |
|             | Keys   | Power                                 |
|             |  | 1                                     |
|             |  | 2                                     |
|             |  | 3                                     |
|             |  | 4                                     |
|             |  | 5                                     |
|             |  | 6                                     |
|             |  | 7                                     |
|             |  | 8                                     |
|             |  | 9                                     |
|             |  | 0                                     |

## GENERAL SPECIFICATIONS

|             |                    |   |                   |
|-------------|--------------------|---|-------------------|
|             |                    | CH Up   | Yes               |
|             |                    | CH Down   | Yes               |
|             |                    | Volume Up   | Yes               |
|             |                    | Volume Down                                       | Yes               |
|             |                    | Input Select                                      | Yes               |
|             |                    | Play  | Yes               |
|             |                    | F.Fwd   | Yes               |
|             |                    | Rew   | Yes               |
|             |                    | Pause/Still                                       | Yes               |
|             |                    | Stop  | Yes               |
|             |                    | Rec/OTR   | Yes               |
|             |                    | Eject   | Yes               |
|             |                    | Counter Reset                                     | Yes               |
|             |                    | Speed   | Yes               |
|             |                    | Timer Rec   | Yes               |
|             |                    | TV Monitor  | Yes               |
|             |                    | Quick View  | Yes               |
|             |                    | Program   | Yes               |
|             |                    | Slow  | No                |
|             |                    | Auto Tracking                                     | Yes               |
|             |                    | Set/Tracking+                                     | Yes               |
|             |                    | Set/Tracking -                                    | Yes               |
|             |                    | Menu  | Yes               |
|             |                    | Enter   | Yes               |
|             |                    | Cancel  | Yes               |
|             |                    | Call  | Yes               |
|             |                    | TV/Caption/Text                                   | Yes               |
|             |                    | Sleep Timer                                       | Yes               |
|             |                    | Muting  | Yes               |
|             |                    | Zero Return                                       | Yes               |
|             |                    | CM Skip   | Yes               |
|             |                    | Audio Select                                      | No                |
| <b>G-13</b> | <b>Features</b>    | Auto Head Cleaning                                | Yes               |
|             |                    | Auto Tracking                                     | Yes               |
|             |                    | Auto Search                                       | No                |
|             |                    | HQ (VHS Standard High Quality)                    | Yes               |
|             |                    | Auto Power On, Auto Play, Auto Rewind, Auto Eject | Yes               |
|             |                    | VIDEO PLUS+(SHOWVIEW,G-CODE)                      | No                |
|             |                    | Auto Clock  | Yes               |
|             |                    | Forward / Reverse Picture Search                  | Yes               |
|             |                    | Reverse Slow                                      | No                |
|             |                    | One Touch Playback                                | No                |
|             |                    | Auto CH Memory                                    | Yes               |
|             |                    | Closed Caption                                    | Yes               |
|             |                    | TV Auto Shut off Function                         | Yes               |
|             |                    | End Call  | No                |
|             |                    | Index Search                                      | No                |
|             |                    | SQPB  | No                |
|             |                    | CATV  | Yes               |
|             |                    | CM Skip(30sec x 6 Times)                          | Yes               |
|             |                    | Comb Filter                                       | No                |
|             |                    | TV Monitor  | Yes               |
|             |                    | Program Extend                                    | No                |
|             |                    | Choke Coil  | No                |
|             |                    | Energy Star                                       | Yes               |
|             |                    | Protect of FBT Leak Curcuit                       | No                |
|             |                    | Dirty Head  | No                |
|             |                    | V-chip USA V-chip                                 | Yes               |
|             |                    | CANADA V-chip                                     | No                |
|             |                    | Power On Memory                                   | No                |
|             |                    | Zero Return                                       | Yes               |
|             |                    | CM Advance  | No                |
|             |                    | Movie Advance                                     | No                |
| <b>G-14</b> | <b>Accessories</b> | Owner's Manual Language                           | English / Spanish |
|             |                    | w/Guarantee Card                                  | No                |
|             |                    | Remote Control Unit                               | Yes               |
|             |                    | Battery   | No                |
|             |                    | UM size x pcs                                     | -                 |
|             |                    | OEM Brand   | -                 |
|             |                    | Rod Antenna                                       | Yes               |
|             |                    | Poles   | 2pole             |
|             |                    | Terminal  | F type            |
|             |                    | w/300 ohm to 75 ohm Antenna Adapter               | Yes               |
|             |                    | Loop Antenna                                      | No                |
|             |                    | Terminal  | -                 |
|             |                    | U/V Mixer   | No                |
|             |                    | 300 ohm to 75 ohm Antenna Adapter                 | No                |

## GENERAL SPECIFICATIONS

|                       |                                   |                       |                          |                                    |                                  |
|-----------------------|-----------------------------------|-----------------------|--------------------------|------------------------------------|----------------------------------|
|                       |                                   | Antenna Change Plug   |                          | No                                 |                                  |
|                       |                                   | DC Car Cord (Center+) |                          | Yes                                |                                  |
|                       |                                   | AC Plug Adapter       |                          | No                                 |                                  |
|                       |                                   | AC Cord               |                          | No                                 |                                  |
|                       |                                   | AV Cord (2Pin-1Pin)   |                          | No                                 |                                  |
|                       |                                   | Guarantee Card        |                          | Yes                                |                                  |
|                       |                                   | Registration Card     |                          | No                                 |                                  |
|                       |                                   | ESP Card              |                          | No                                 |                                  |
|                       |                                   | Warning Sheet         |                          | No                                 |                                  |
|                       |                                   | Dew/AHC Caution Sheet |                          | No                                 |                                  |
|                       |                                   | Quick Set-up Sheet    |                          | No                                 |                                  |
|                       |                                   | Circuit Diagram       |                          | No                                 |                                  |
|                       |                                   | Service Facility List |                          | No                                 |                                  |
|                       |                                   | Important Safeguard   |                          | No                                 |                                  |
| <b>G-15</b>           | <b>Interface</b>                  | Switch                | Power                    | Yes                                |                                  |
|                       |                                   |                       | Play                     | Yes                                |                                  |
|                       |                                   |                       | Pause/Still              | No                                 |                                  |
|                       |                                   |                       | System Select            | No                                 |                                  |
|                       |                                   |                       | One Touch Playback       | No                                 |                                  |
|                       |                                   |                       | Channel Up               | Yes                                |                                  |
|                       |                                   |                       | Channel Down             | Yes                                |                                  |
|                       |                                   |                       | F.FWD/Cue                | Yes                                |                                  |
|                       |                                   |                       | Eject/Stop               | Yes                                |                                  |
|                       |                                   |                       | Main Power SW            | No                                 |                                  |
|                       |                                   |                       | Volume Up                | Yes                                |                                  |
|                       |                                   |                       | Volume Down              | Yes                                |                                  |
|                       |                                   |                       | Rew/Rev                  | Yes                                |                                  |
|                       |                                   |                       | Rec/OTR                  | Yes                                |                                  |
|                       |                                   |                       | Input Select             | No                                 |                                  |
|                       |                                   | Indicator             | Power                    | Red                                |                                  |
|                       |                                   |                       | Rec/OTR                  | Red                                |                                  |
|                       |                                   |                       | T-Rec                    | Red                                |                                  |
|                       |                                   |                       | On Timer                 | No                                 |                                  |
|                       |                                   | Key Light up          | CS                       | No                                 |                                  |
|                       |                                   |                       | Rec/OTR                  | No                                 |                                  |
|                       |                                   |                       | One Touch Playback       | No                                 |                                  |
|                       |                                   | Terminals             | Front                    | Video Input                        | RCaX1                            |
|                       |                                   |                       |                          | Audio Input                        | RCaX1                            |
|                       |                                   |                       |                          | Other Terminal                     | Head Phone(Stereo & Mono, 3.5mm) |
|                       |                                   |                       | Rear                     | Video Input                        | RCaX1                            |
|                       |                                   |                       |                          | Audio Input                        | RCaX1                            |
|                       |                                   |                       |                          | Video Output                       | RCaX1                            |
|                       |                                   |                       |                          | Audio Output                       | RCaX1                            |
|                       |                                   |                       |                          | Euro Scart                         | No                               |
| Diversity             | No                                |                       |                          |                                    |                                  |
| Ext Speaker           | No                                |                       |                          |                                    |                                  |
| DC Jack 12V(Center +) | Yes                               |                       |                          |                                    |                                  |
| VHF/UHF Antenna Input | F Type                            |                       |                          |                                    |                                  |
| AC Inlet              | No                                |                       |                          |                                    |                                  |
|                       |                                   |                       |                          |                                    |                                  |
| <b>G-16</b>           | <b>Set Size</b>                   |                       |                          | Approx. W x D x H (mm)             | 362 x 370.5 x 382                |
| <b>G-17</b>           | <b>Weight</b>                     | Net (Approx.)         | 12.5 kg (27.6 lbs)       |                                    |                                  |
|                       |                                   | Gross (Approx.)       | 14.5 kg (32.2 lbs)       |                                    |                                  |
| <b>G-18</b>           | <b>Carton</b>                     | Master Carton         |                          | No                                 |                                  |
|                       |                                   |                       | Content                  | -                                  |                                  |
|                       |                                   |                       | Material                 | -                                  |                                  |
|                       |                                   |                       | Dimensions W x D x H(mm) | -                                  |                                  |
|                       |                                   |                       | Description of Origin    | -                                  |                                  |
|                       |                                   | Gift Box              |                          | Yes                                |                                  |
|                       |                                   |                       | Material                 | Double / Full Color Carton W/Photo |                                  |
|                       |                                   |                       | Dimensions W x D x H(mm) | 423 x 447 x 443                    |                                  |
|                       |                                   |                       | Design                   | As per Buyer's                     |                                  |
|                       |                                   |                       | Description of Origin    | Yes                                |                                  |
|                       |                                   |                       | Drop Test                | Natural Dropping At                | 1 Corner / 3 Edges / 6 Surfaces  |
|                       |                                   |                       |                          | Height (cm)                        | 62                               |
|                       | Container Stuffing(40' container) | 700 Sets              |                          |                                    |                                  |
| <b>G-19</b>           | <b>Cabinet Material</b>           | Cabinet Front         | PS 94V0 DECABROM         |                                    |                                  |
|                       |                                   | Cabinet Rear          | PS 94V0 DECABROM         |                                    |                                  |
|                       |                                   | Jack Panel            | PS 94V0                  |                                    |                                  |



# DISASSEMBLY INSTRUCTIONS

## 1. REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS

### 1-1: BACK CABINET (Refer to Fig. 1-1)

1. Remove the 4 screws (1).
2. Remove the screw (2).
3. Remove the 2 screws (3) which are used for holding the Back Cabinet.
4. Remove the AC cord from the AC cord hook (4).
5. Remove the Back Cabinet in the direction of arrow.

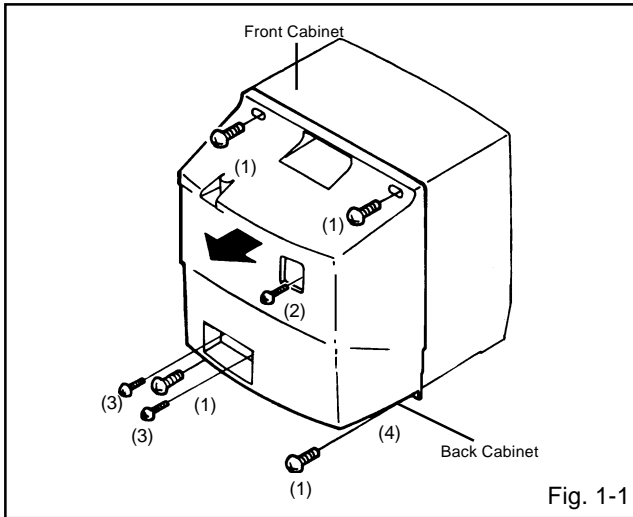


Fig. 1-1

### 1-2: CRT PCB (Refer to Fig. 1-2)

**CAUTION: BEFORE REMOVING THE ANODE CAP, DISCHARGE ELECTRICITY BECAUSE IT CONTAINS HIGH VOLTAGE. BEFORE ATTEMPTING TO REMOVE OR REPAIR ANY PCB, UNPLUG THE POWER CORD FROM THE AC SOURCE.**

1. Remove the Anode Cap.  
(Refer to REMOVAL OF ANODE CAP)
2. Disconnect the following connectors:  
(CP801 and CP850).
3. Remove the CRT PCB in the direction of arrow.

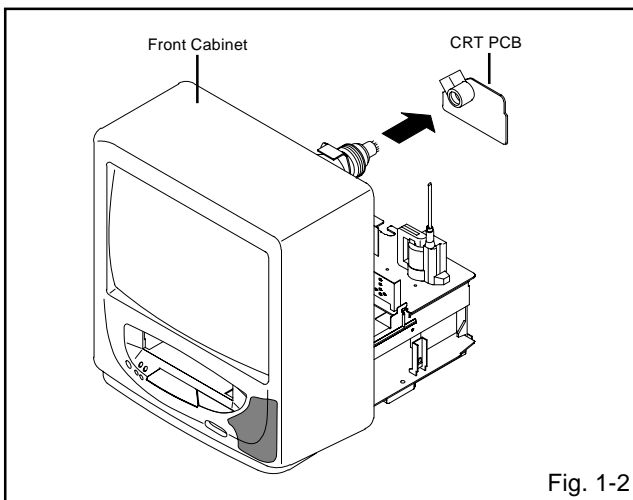


Fig. 1-2

### 1-3: TV/VCR BLOCK (Refer to Fig. 1-3)

1. Remove the 2 screws (1).
2. Disconnect the following connectors:  
(CP2201, CP4202, CP401 and CP403).
3. Unlock the support 2.
4. Remove the TV/VCR Block in the direction of arrow.

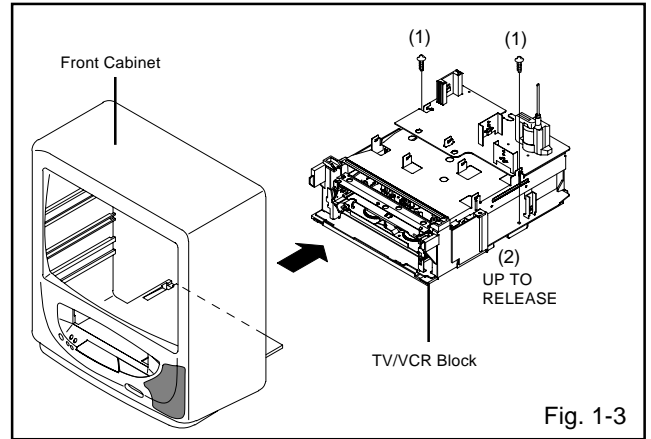


Fig. 1-3

### 1-4: MAIN PCB (Refer to Fig. 1-4)

1. Remove the screw (1).
2. Remove the Main PCB Holder.
3. Remove the 2 screws (2).
4. Remove the 3 screws (3).
5. Remove the screw (4).
6. Remove the TV-PCB Holder.
7. Disconnect the following connectors:(CP502 and CP820).
8. Remove the Main PCB in the direction of arrow.


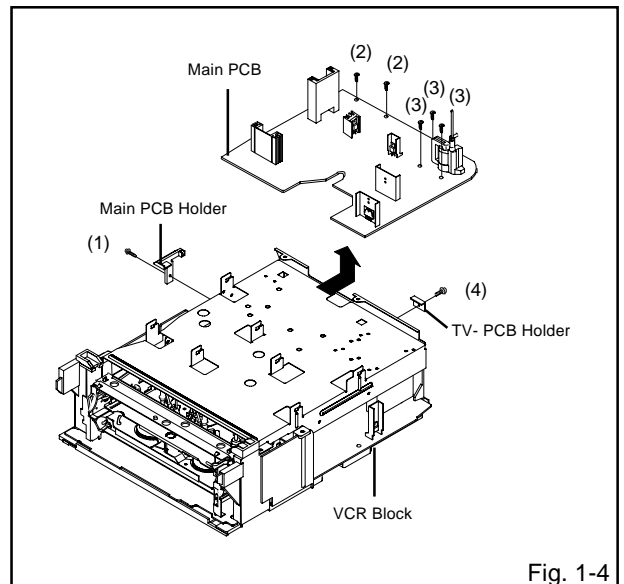


Fig. 1-4

# DISASSEMBLY INSTRUCTIONS


## 1-5: JDECK SHIELD PLATE AND BOTTOM SHIELD (Refer to Fig. 1-5)

1. Remove the 2 screws (1).
2. Remove the screw (2).
3. Remove the screw (3).
4. Remove the Deck Shield Plate in the direction of arrow (A).
5. Remove the screw (4).
6. Remove the Bottom Shield in the direction of arrow (B).

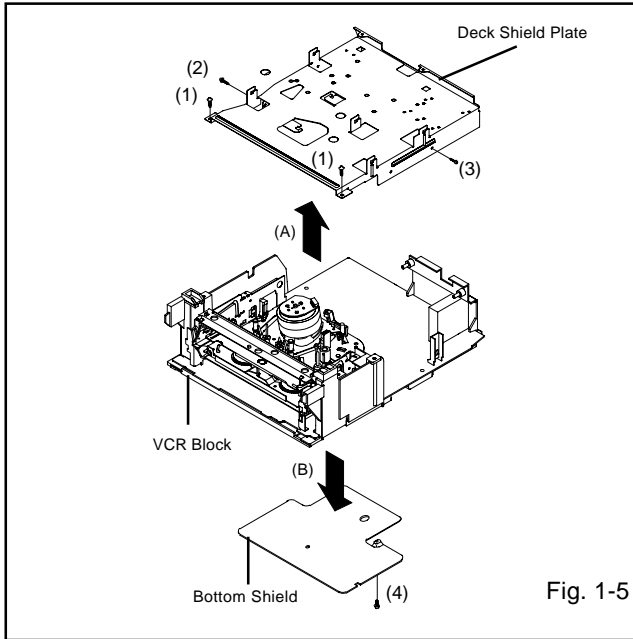


## 1-7: JACK PLATE AND SYSCON PCB (Refer to Fig. 1-7)

1. Remove the screw (1).
2. Remove the Syscon PCB in the direction of arrow (A).
3. Unlock the 2 supports (2).
4. Remove the Jack Plate in the direction of arrow (B).

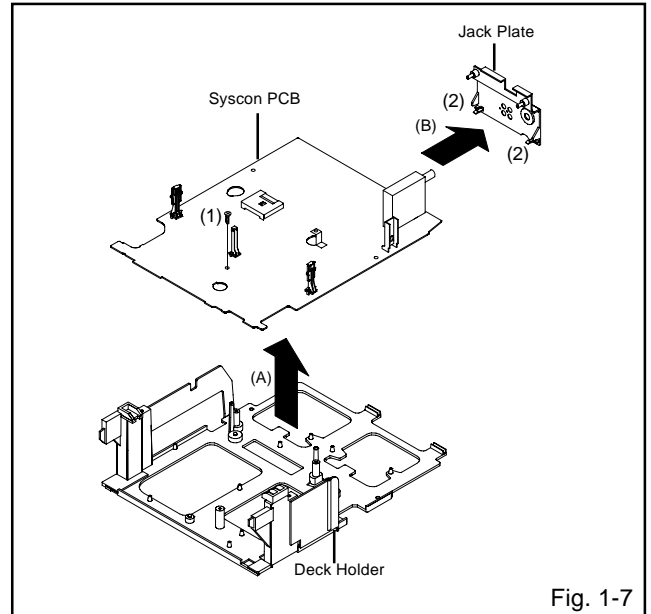

## 1-6: DECK CHASSIS (Refer to Fig. 1-6)

1. Remove the screw (1).
2. Remove the Plate Cover Light.
3. Remove the 3 screws (2).
4. Disconnect the following connectors:  
(CP605, CP1001, CP4001, CP4002 and CP4003).
5. Remove the Deck Chassis and Shield Cover Deck in the direction of arrow.

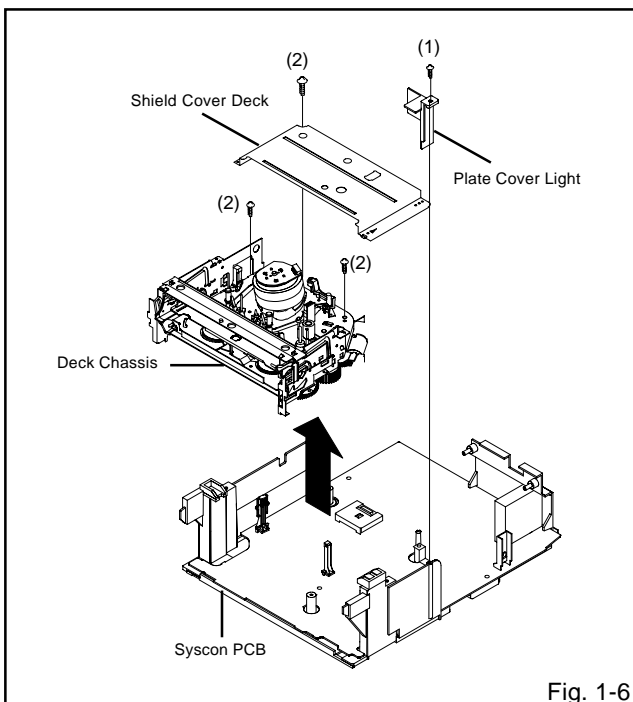

# DISASSEMBLY INSTRUCTIONS

## 2. REMOVAL OF DECK PARTS

### 2-1: TOP BRACKET (Refer to Fig. 2-1)

1. Extend the 2 supports (1).
2. Slide the 2 supports (2) and remove the Top Bracket.

#### NOTE

1. After the installation of the Top Bracket, bend the support (1) so that the Top Bracket is fixed.

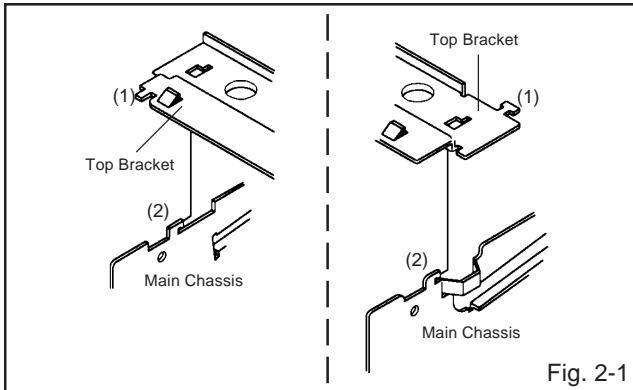


Fig. 2-1

### 2-2: CASSETTE HOLDER ASS'Y (Refer to Fig. 2-2)

1. Move the Cassette Holder Ass'y to the front side.
2. Push the Locker R to remove the Cassette Side R.
3. Remove the Cassette Side L.

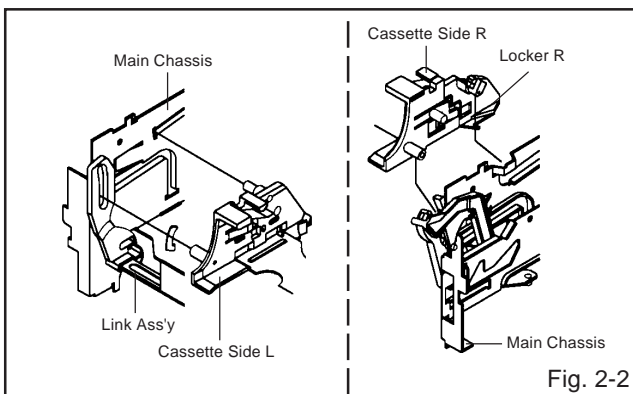


Fig. 2-2

### 2-3: CASSETTE SIDE L/R (Refer to Fig. 2-3-A)

1. Remove the Locker Spring.
2. Unlock the 4 supports (1) and then remove the Cassette Side L/R.
3. Unlock the support (2) and then remove the Locker R.

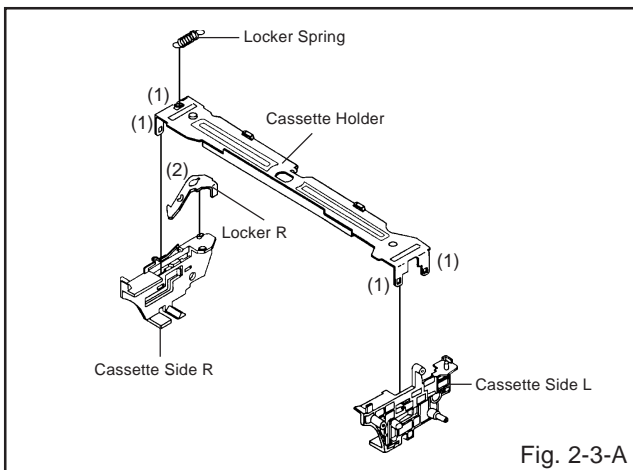


Fig. 2-3-A

#### NOTE

1. In case of the Locker R installation, check if the two positions of Fig.2-3-B are correctly locked.
2. When you install the Cassette Side R, be sure to move the Locker R after installing.

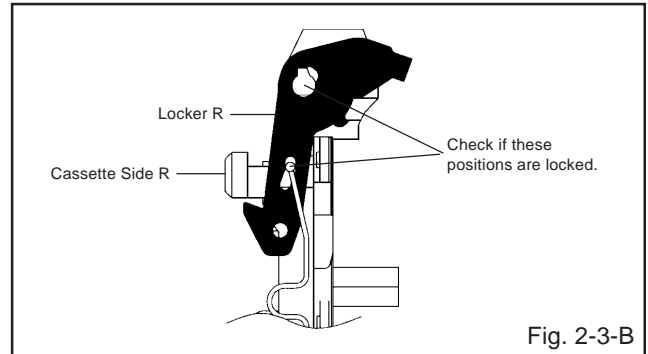


Fig. 2-3-B

### 2-4: LINK UNIT (Refer to Fig. 2-4)

1. Set the Link Unit to the Eject position.
2. Unlock the support (1).
3. Remove the (A) side of the Link Unit first, then remove the (B) side.

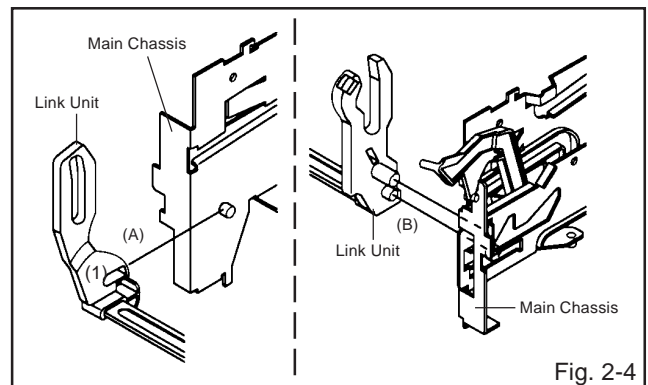


Fig. 2-4

### 2-5: LINK LEVER/FLAP LEVER/BOT COVER (Refer to Fig. 2-5)

1. Unlock the support (1).
2. Remove the BOT Cover.
3. Extend the support (2).
4. Remove the Link Lever.
5. Remove the Flap Lever.

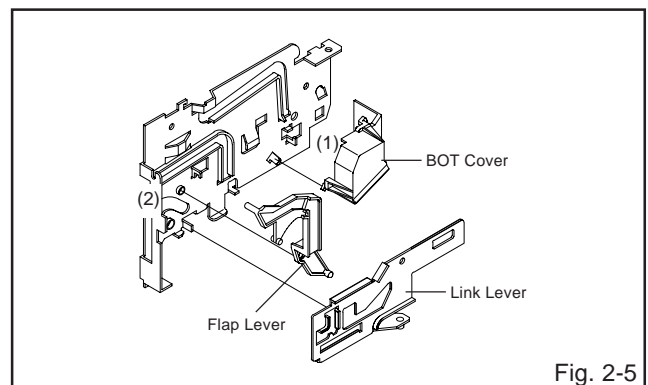


Fig. 2-5

# DISASSEMBLY INSTRUCTIONS

## 2-6: LOADING MOTOR/WORM (Refer to Fig. 2-6-A)

1. Remove the screw (1).
2. Remove the Loading Motor.
3. Remove the Worm.

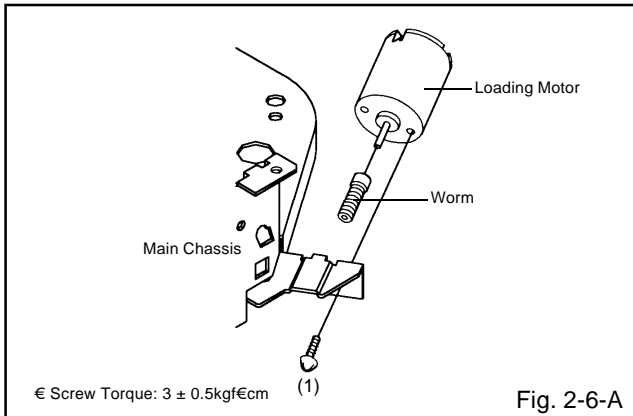


Fig. 2-6-A

### NOTE

1. In case of the Worm installation, check if the value of the Fig. 2-6-B is correct.
2. In case of the Loading Motor installation, hook the wire on the Cassette Opener as shown Fig. 2-6-C.

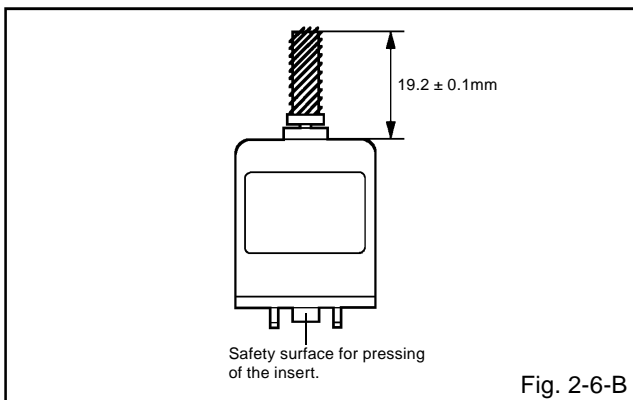


Fig. 2-6-B

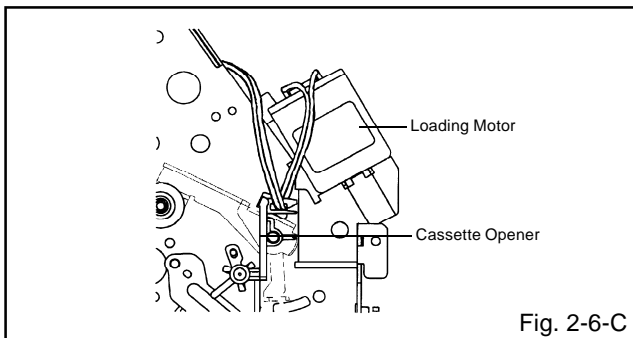


Fig. 2-6-C

## 2-7: TENSION ASS'Y (Refer to Fig. 2-7-B)

1. Turn the Pinch Roller Cam clockwise so that the Tension Holder hook is set to the position of Fig. 2-7-A to move the Tension Arm Ass'y.
2. Remove the Tension Spring.
3. Unlock the 2 supports (1) and remove the Tension Band.
4. Unlock the support (2) and remove the Tension Arm Ass'y.
5. Unlock the support (3) and remove the Tension Connect.
6. Float the hook (4) and turn it clockwise then remove the Tension Holder.

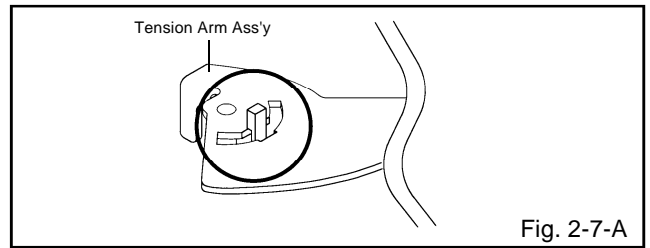


Fig. 2-7-A

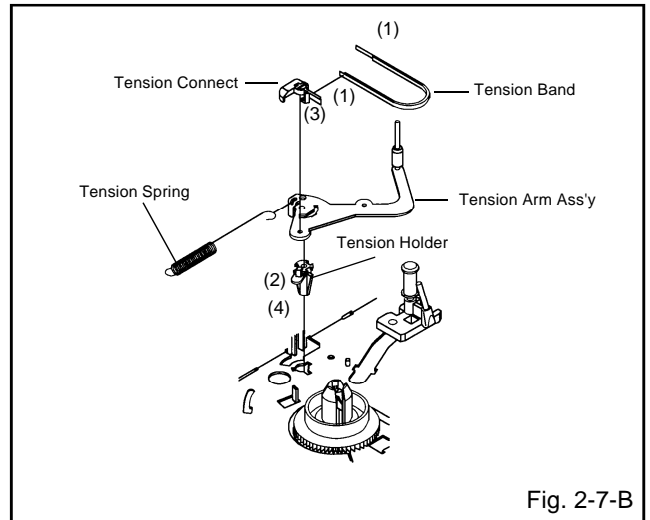


Fig. 2-7-B

### NOTE

1. In case of the Tension Band installation, note the direction of the installation. **(Refer to Fig. 2-7-C)**
2. In case of the Tension Band installation, install correctly as Fig. 2-7-D.
3. In case of the Tension Connect installation, install as the circled section of Fig. 2-7-E.

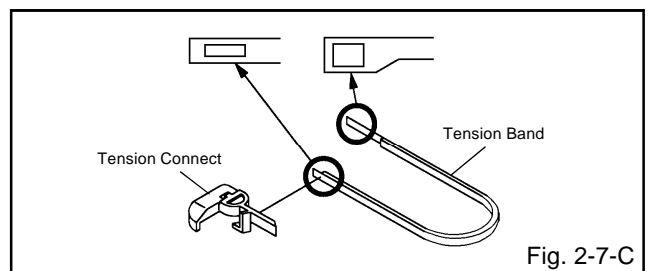


Fig. 2-7-C

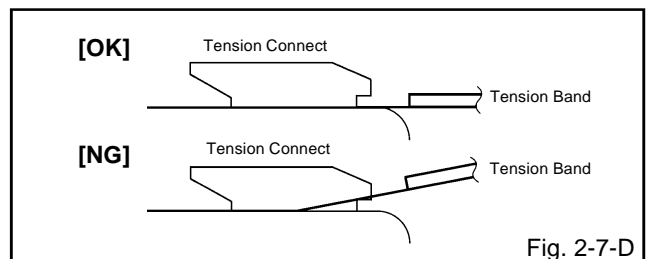


Fig. 2-7-D

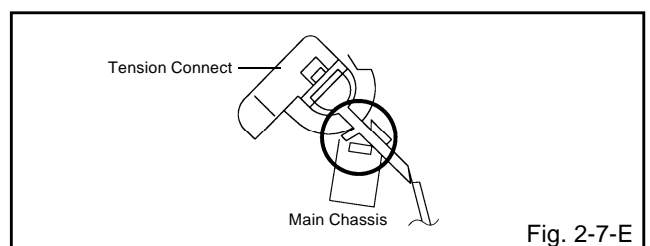


Fig. 2-7-E

# DISASSEMBLY INSTRUCTIONS

## 2-8: T BRAKE ARM/T BRAKE BAND (Refer to Fig. 2-8-A)

1. Remove the T Brake Spring.
2. Turn the T Brake Arm clockwise and bend the hook section to remove it.
3. Unlock the 2 supports (1) and remove the T Brake Band.

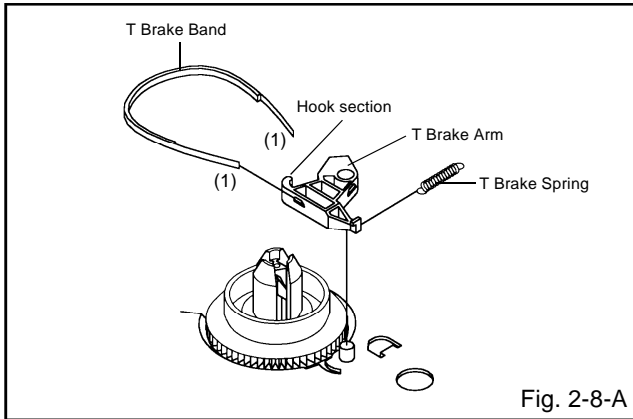


Fig. 2-8-A

### NOTE

1. In case of the T Brake Band installation, install correctly as Fig. 2-8-B.

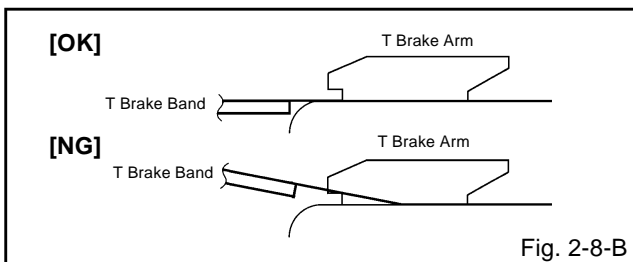


Fig. 2-8-B

## 2-9: S REEL/T REEL/IDLER ARM ASS'Y/IDLER GEAR (Refer to Fig. 2-9-A)

1. Remove the S Reel and T Reel.
2. Remove the 2 Polyslider Washers (1).
3. Remove the Idler Arm Ass'y and Idler Gear.

### NOTE

1. Take care not to damage the gears of the S Reel and T Reel.
2. The Polyslider Washer may be remained on the back of the reel.
3. Take care not to damage the shaft.
4. Do not touch the section "A" of S Reel and T Reel. (Use gloves.) (Refer to Fig. 2-9-A) Do not adhere the stains on it.
5. When you install the reel, clean the shaft and grease it (FG-84M). (If you do not grease, noise may be heard in FF/REW mode.)
6. After installing the reel, adjust the height of the reel. (Refer to MECHANICAL ADJUSTMENT)

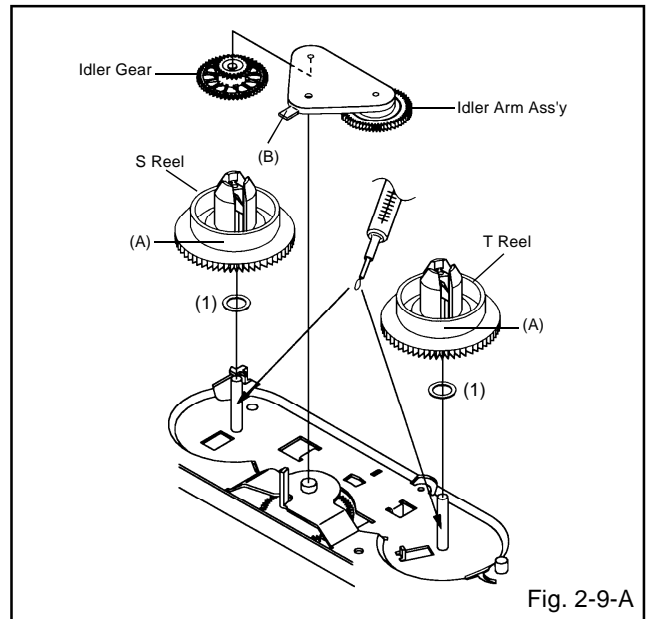


Fig. 2-9-A

### NOTE

1. In case of the S Reel and T Reel installation, check if the correct parts are installed. (Refer to Fig. 2-9-B)
2. In case of the Idler Arm Ass'y installation, install correctly as Fig. 2-9-C. And also set it so that the section "B" of Fig. 2-9-A is placed under the Main Chassis tab.

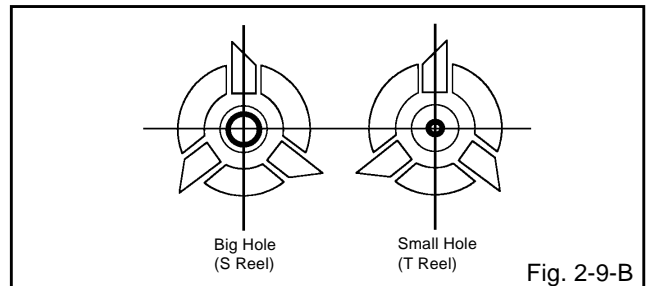


Fig. 2-9-B


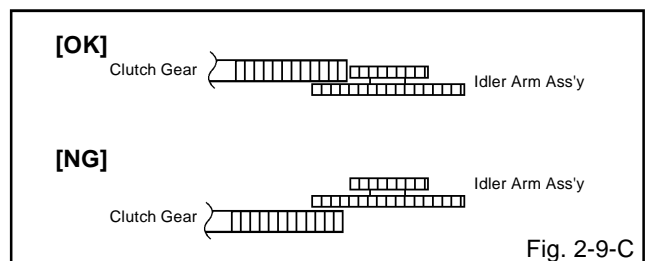


Fig. 2-9-C

# DISASSEMBLY INSTRUCTIONS


## 2-10: CASSETTE OPENER/PINCH ROLLER BLOCK/ P5 ARM ASS'Y (Refer to Fig. 2-10-A)

1. Unlock the support (1) and remove the Cassette Opener.
2. Remove the Pinch Roller Block and P5 Arm Ass'y.

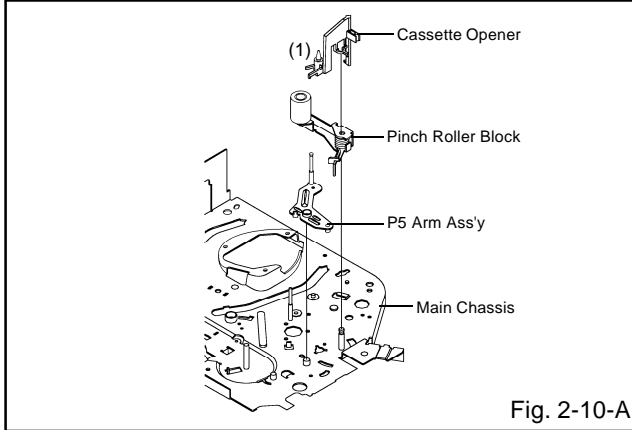

### NOTE

1. Do not touch the Pinch Roller. (Use gloves.)
2. In case of the Pinch Roller Block and the Pinch Roller Cam installation, install correctly as Fig. 2-10-B.

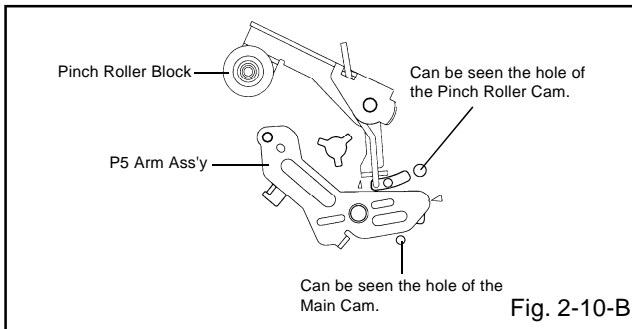


## 2-11: A/C HEAD (Refer to Fig. 2-11-A)

1. Remove the screw (1).
2. Remove the A/C Head Base.
3. Remove the 3 screws (2).
4. Remove the A/C Head and A/C Head Spring.


### NOTE

1. Do not touch the A/C Head. (Use gloves.)
2. When you install the A/C Head Spring, install as shown in Fig. 2-11-B.
3. When you install the A/C Head, tighten the screw (1) first, then tighten the screw (2), finally tighten the screw (3).

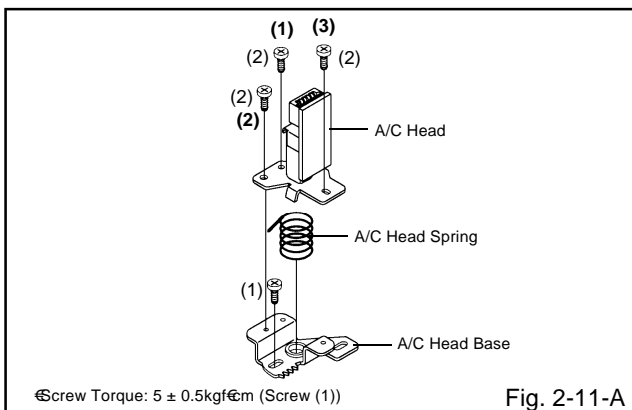


€ Screw Torque:  $5 \pm 0.5\text{kgf}\cdot\text{cm}$  (Screw (1))

Fig. 2-11-A

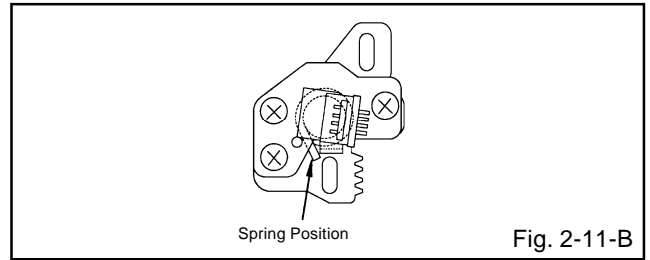

## 2-12: FE HEAD (RECORDER ONLY) (Refer to Fig. 2-12)

1. Remove the screw (1).
2. Remove the FE Head.

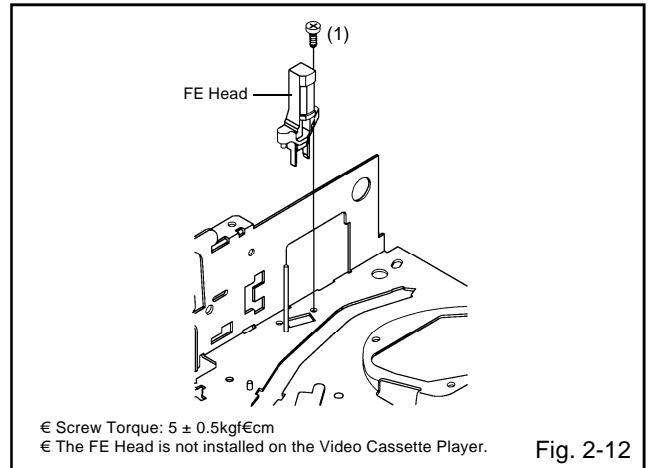

€ Screw Torque:  $5 \pm 0.5\text{kgf}\cdot\text{cm}$

€ The FE Head is not installed on the Video Cassette Player.


Fig. 2-12

## 2-13: AHC ASS'Y/CYLINDER UNIT ASS'Y (Refer to Fig. 2-13)

1. Unlock the support (1) and remove the AHC Ass'y.
2. Disconnect the following connector:  
(CD2001)
3. Remove the 3 screws (2).
4. Remove the Cylinder Unit Ass'y.

### NOTE

1. When you install the Cylinder Unit Ass'y, tighten the screws from (1) to (3) in order while pulling the Ass'y toward the left front direction.

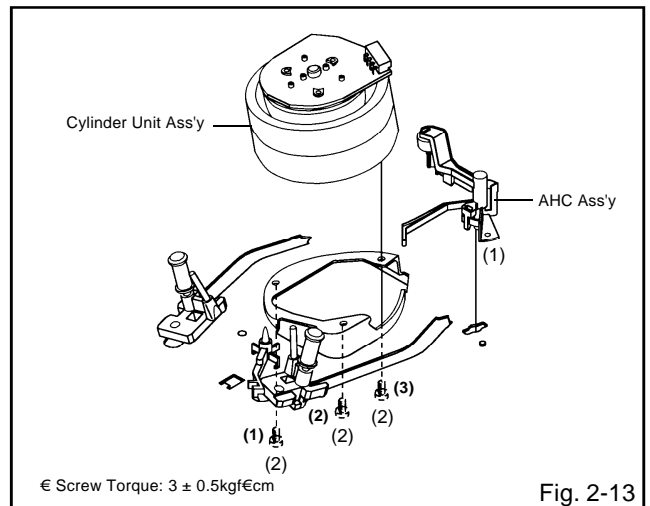


€ Screw Torque:  $3 \pm 0.5\text{kgf}\cdot\text{cm}$

Fig. 2-13

# DISASSEMBLY INSTRUCTIONS



## 2-14: CAPSTAN DD UNIT (Refer to Fig. 2-14-A)

1. Remove the Capstan Belt.
2. Remove the 3 screws (1).
3. Remove the Capstan DD Unit.

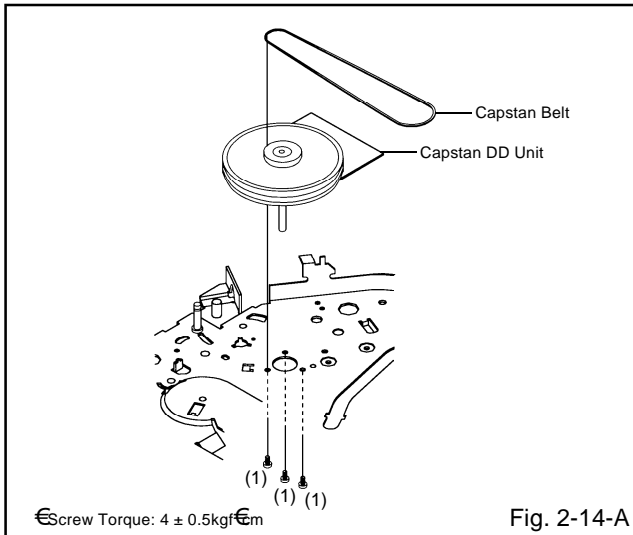


### NOTE

1. In case of the Capstan DD Unit installation, apply the silicon bond (TSE3843-W) on the position Fig. 2-14-B correctly. (If no silicon bond applied, abnormal noise will be heard on the deck operation.)  
(Refer to Fig. 2-14-B, C)

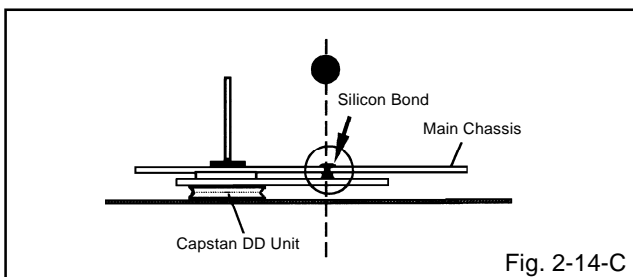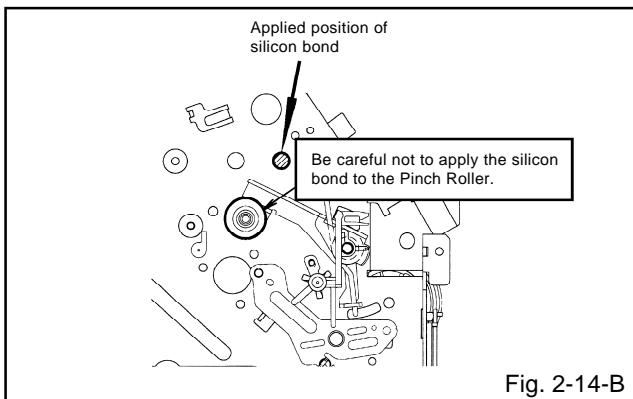


## 2-15: MAIN CAM/PINCH ROLLER CAM/JOINT GEAR (Refer to Fig. 2-15-A)

1. Remove the E-Ring (1), then remove the Main Cam.
2. Remove the E-Ring (2), then remove the Pinch Roller Cam and Joint Gear.

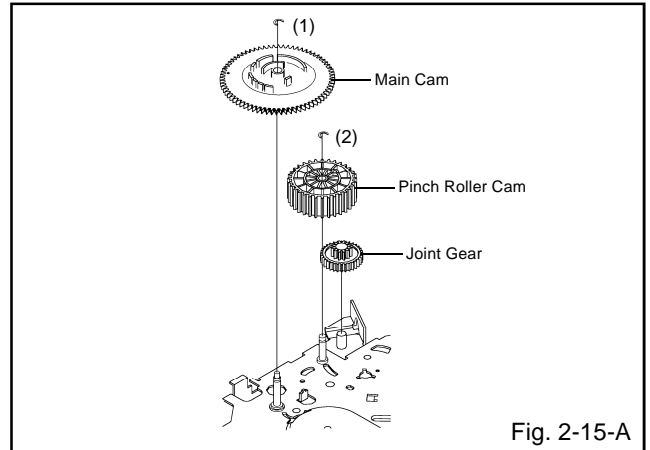


### NOTE

1. In case of the Pinch Roller Cam and Main Cam installation, install them as the circled section of Fig. 2-15-B so that the each markers are met. (Refer to Fig. 2-15-B)

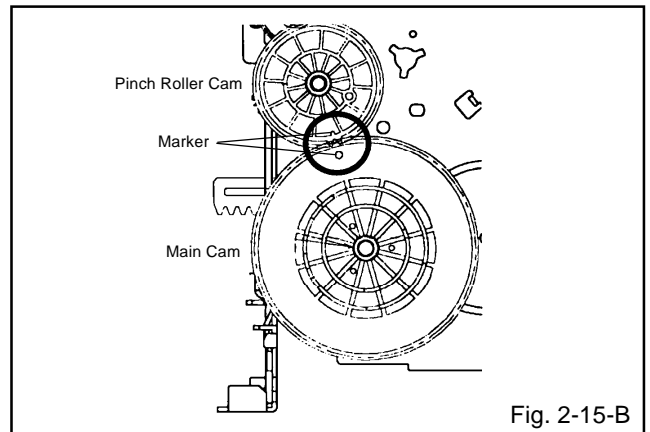

## 2-16: LOADING GEAR S/T ASS'Y (Refer to Fig. 2-16-A)


1. Remove the E-Ring (1) and remove the Main Loading Gear.
2. Remove the Main Rod, Tension Lever, Loading Arm S Ass'y and Loading Arm T Ass'y.

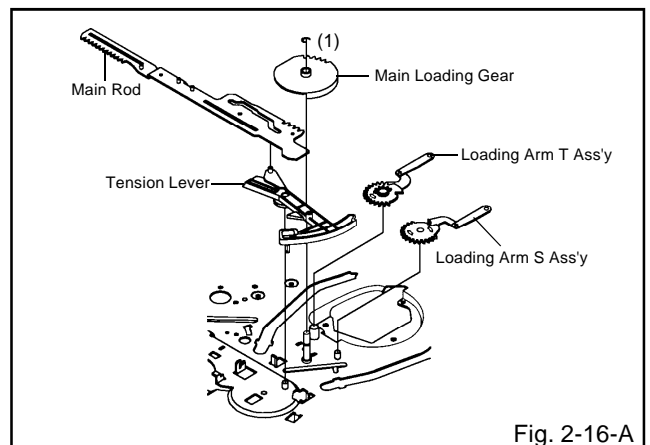

# DISASSEMBLY INSTRUCTIONS


## NOTE

1. When you install the Loading Arm S Ass'y, Loading Arm T Ass'y and Main Loading Gear, align each marker. **(Refer to Fig. 2-16-B)**

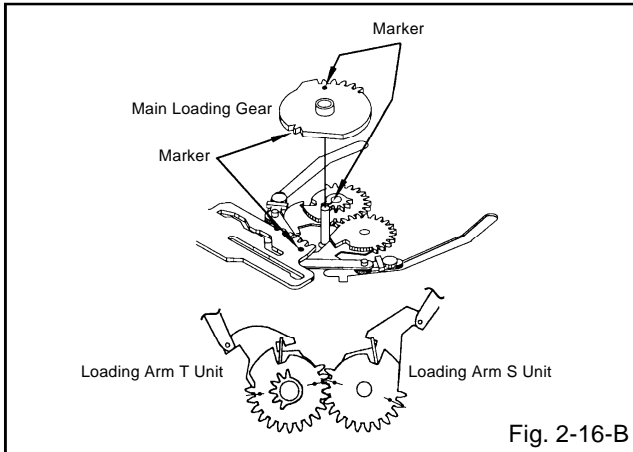


## 2-17: CLUTCH ASS'Y/RING SPRING/CLUTCH LEVER/CLUTCH GEAR (Refer to Fig. 2-17-A)

1. Remove the Polyslider Washer (1).
2. Remove the Clutch Ass'y and Ring Spring.
3. Remove the Clutch Lever.
4. Remove the Coupling Gear, Coupling Spring and Clutch Gear.

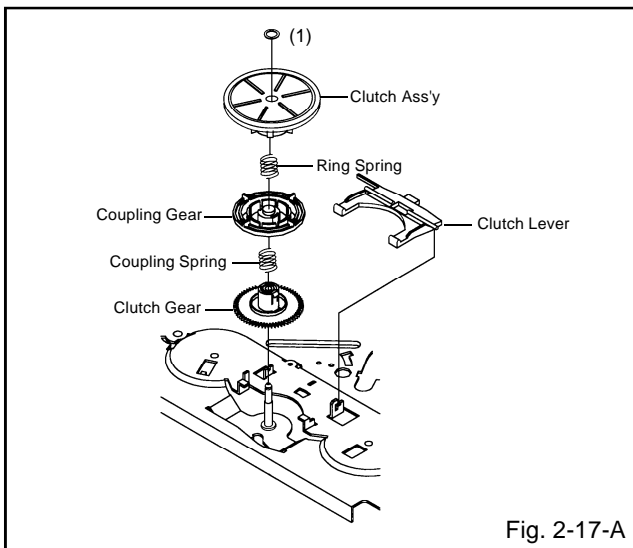


## NOTE

1. In case of the Clutch Ass'y installation, install it with inserting the spring of the Clutch Ass'y into the dent of the Coupling Gear. **(Refer to Fig. 2-17-B)**

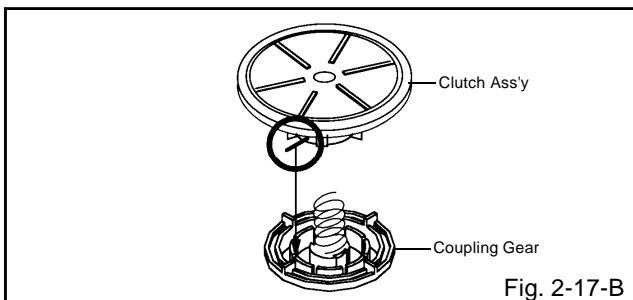



## 2-18: CASSETTE GUIDE POST/INCLINED BASE S/T UNIT/P4 CAP (Refer to Fig. 2-18-A)

1. Remove the P4 Cap.
2. Unlock the support (1) and remove the Cassette Guide Post.
3. Remove the Inclined Base S Unit and Inclined Base T Unit.

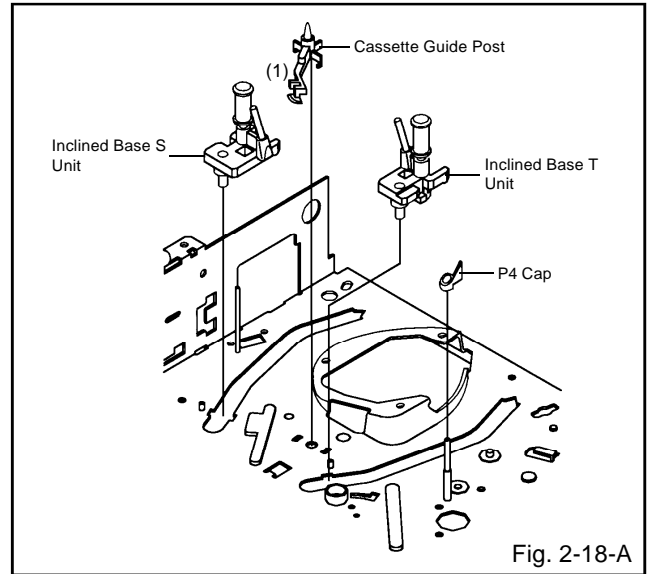

## NOTE

1. Do not touch the roller of Guide Roller.
2. In case of the P4 Cap installation, install it with parallel for "A" and "B" of Fig. 2-18-B.
3. In case of the Cassette Guide Post installation, install correctly as the circled section of Fig. 2-18-C.

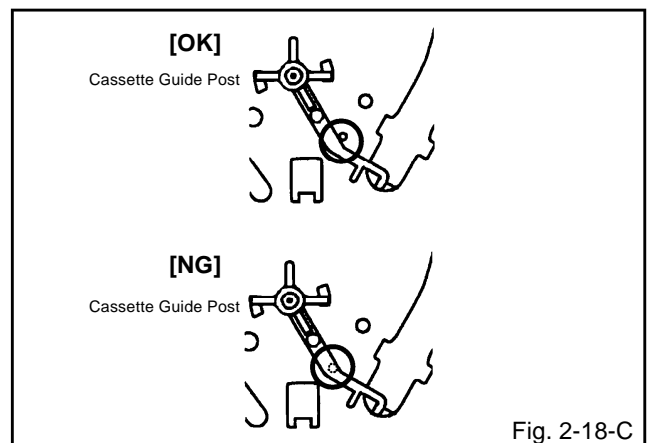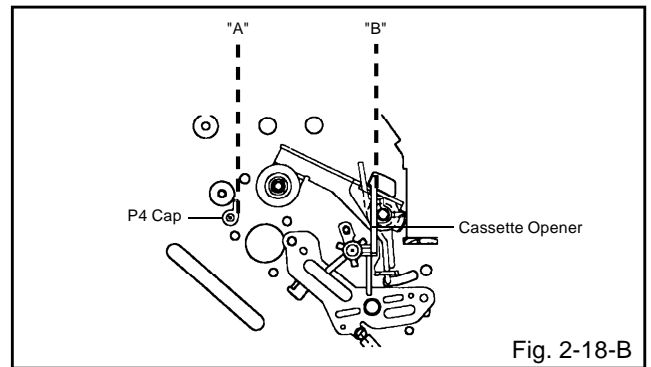



# DISASSEMBLY INSTRUCTIONS

## 3. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

- \* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- \* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

### REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. **(Refer to Fig. 3-1.)**

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.

A cracking noise will be heard as the voltage is discharged.

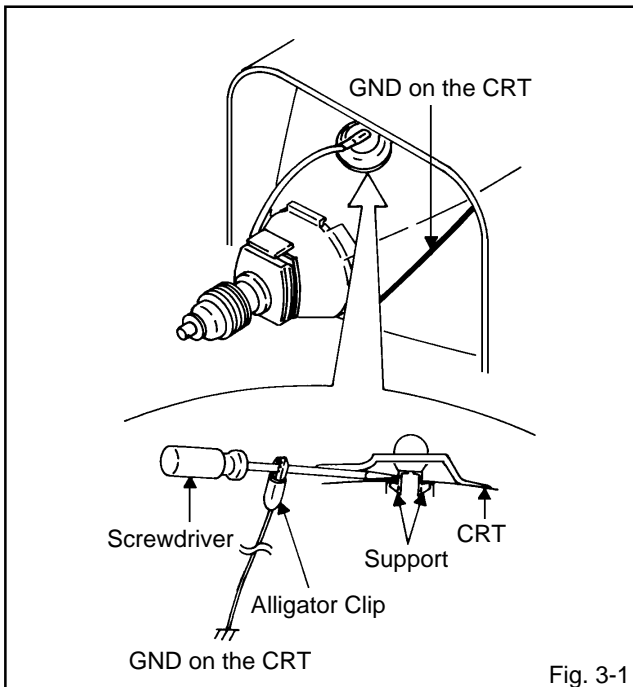


Fig. 3-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. **(Refer to Fig. 3-2.)**

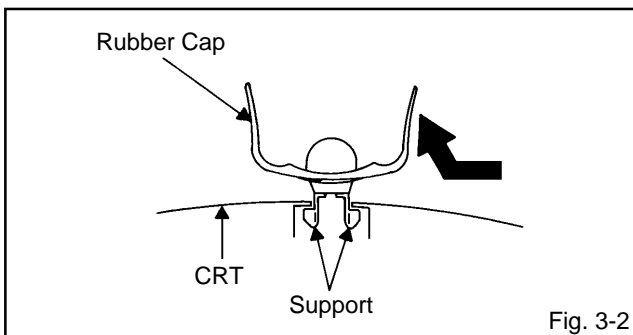


Fig. 3-2

3. After one side is removed, pull in the opposite direction to remove the other.

### NOTE

Take care not to damage the Rubber Cap.

### INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. **(Refer to Fig. 3-3.)**

### NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

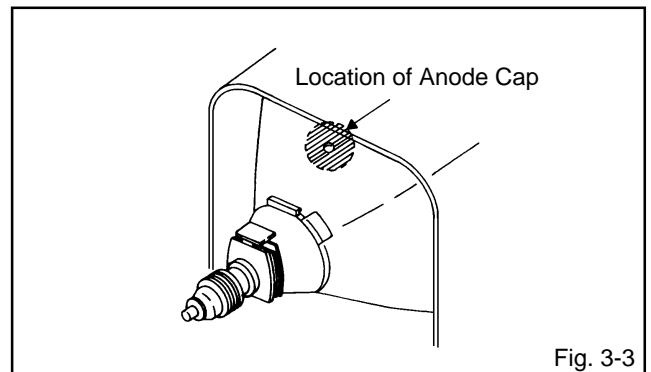


Fig. 3-3

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. **(Refer to Fig. 3-4.)**

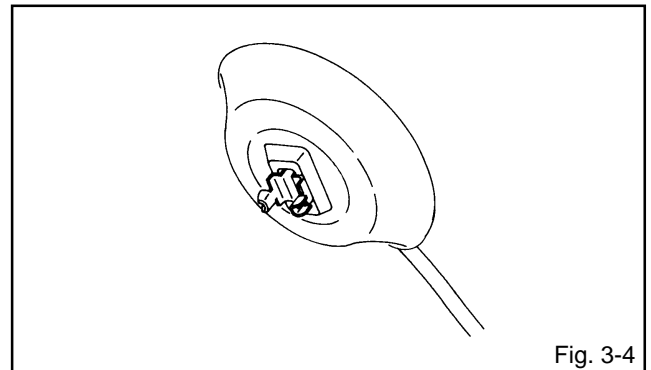


Fig. 3-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in **Fig. 3-5.**

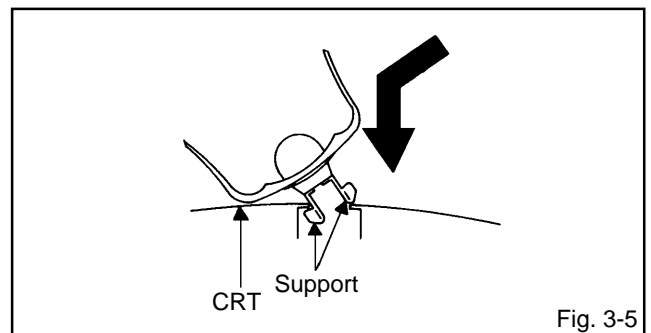


Fig. 3-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

# DISASSEMBLY INSTRUCTIONS


## 4. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

### REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 4-1.)

#### NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

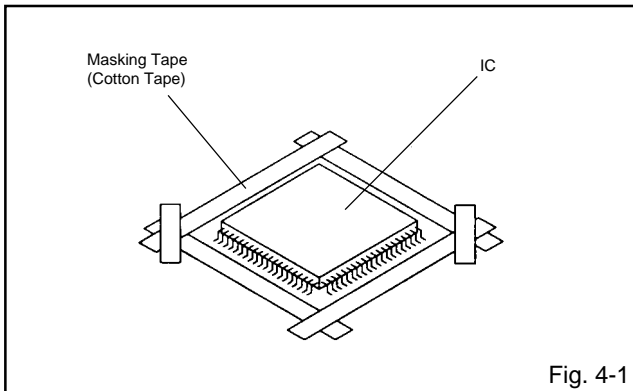

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 4-2.)

#### NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

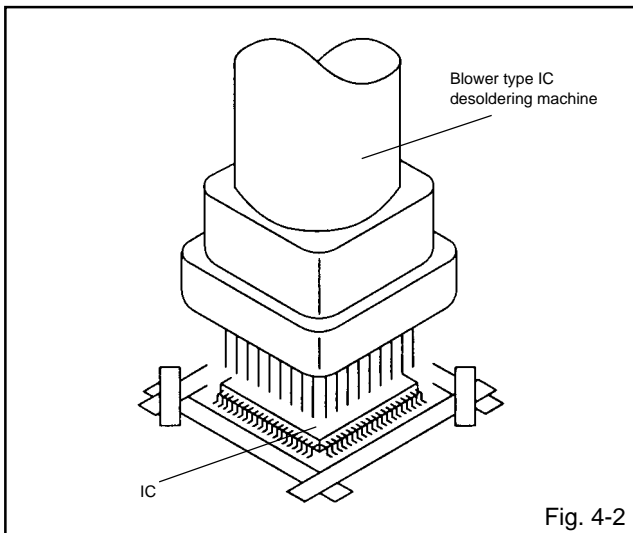

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 4-3.)

#### NOTE


Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

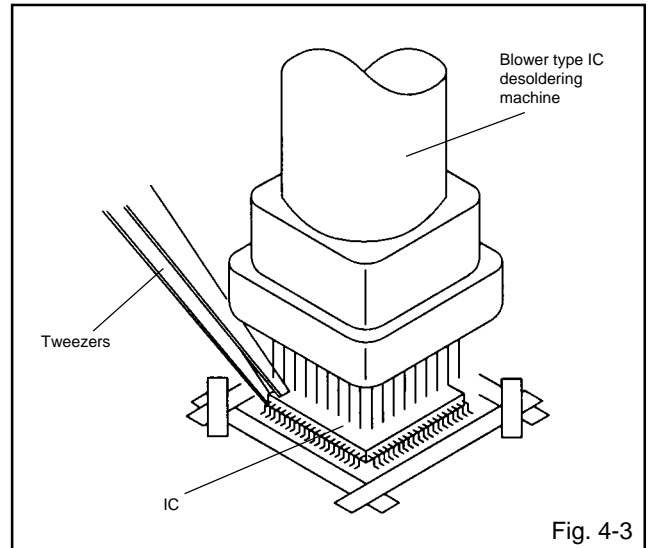

4. Peel off the Masking Tape.
5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 4-4.)

#### NOTE


Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

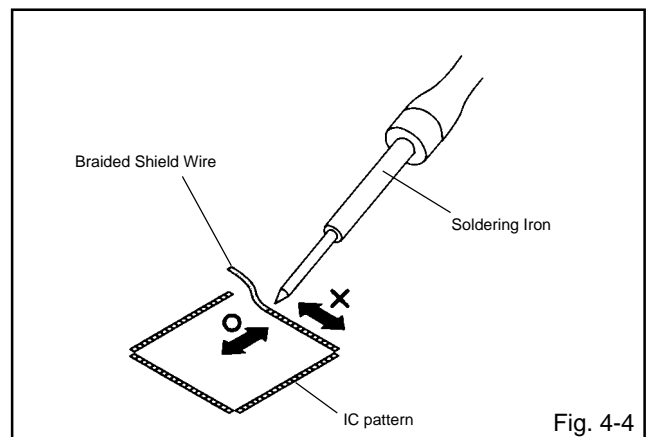


# DISASSEMBLY INSTRUCTIONS

## INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. (Refer to Fig. 4-5.)

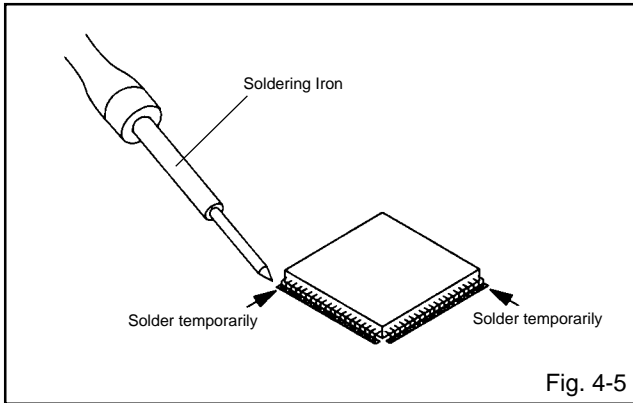


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. (Refer to Fig. 4-6.)

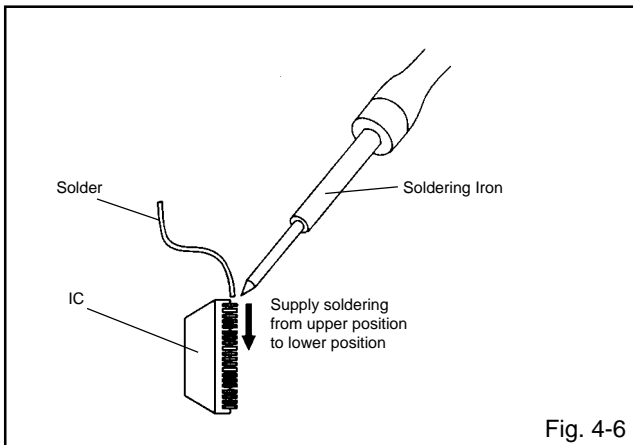


3. Absorb the solder left on the lead using the Braided Shield Wire. (Refer to Fig. 4-7.)

### NOTE

Do not absorb the solder to excess.

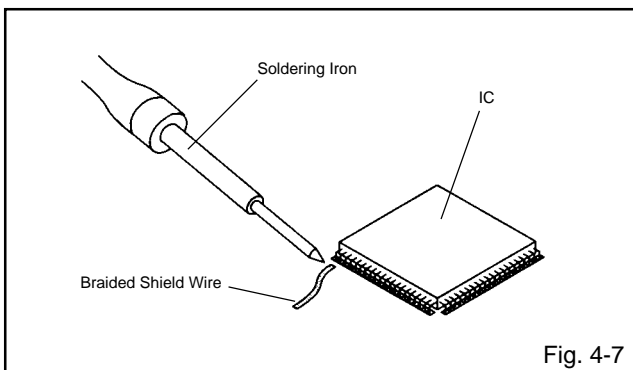

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. (Refer to Fig. 4-8.)

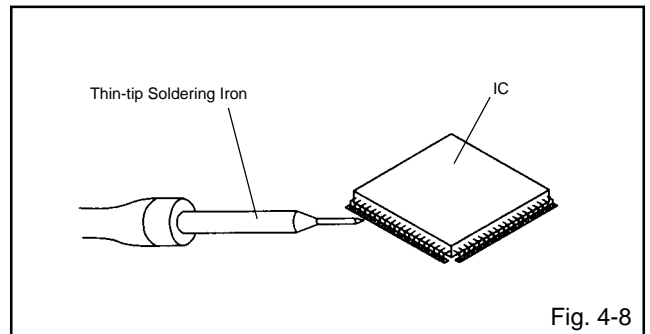

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

### NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.

## KEY TO ABBREVIATIONS

|          |                      |                                |             |                  |                                |
|----------|----------------------|--------------------------------|-------------|------------------|--------------------------------|
| <b>A</b> | <b>A/C</b>           | : Audio/Control                | <b>H.SW</b> | : Head Switch    |                                |
|          | <b>ACC</b>           | : Automatic Color Control      | <b>Hz</b>   | : Hertz          |                                |
|          | <b>AE</b>            | : Audio Erase                  | <b>I</b>    | <b>IC</b>        | : Integrated Circuit           |
|          | <b>AFC</b>           | : Automatic Frequency Control  |             | <b>IF</b>        | : Intermediate Frequency       |
|          | <b>AFT</b>           | : Automatic Fine Tuning        |             | <b>IND</b>       | : Indicator                    |
|          | <b>AFT DET</b>       | : Automatic Fine Tuning Detect |             | <b>INV</b>       | : Inverter                     |
|          | <b>AGC</b>           | : Automatic Gain Control       | <b>K</b>    | <b>KIL</b>       | : Killer                       |
|          | <b>AMP</b>           | : Amplifier                    | <b>L</b>    | <b>L</b>         | : Left                         |
|          | <b>ANT</b>           | : Antenna                      |             | <b>LED</b>       | : Light Emitting Diode         |
|          | <b>A.PB</b>          | : Audio Playback               |             | <b>LIMIT AMP</b> | : Limiter Amplifier            |
|          | <b>APC</b>           | : Automatic Phase Control      |             | <b>LM, LDM</b>   | : Loading Motor                |
|          | <b>ASS'Y</b>         | : Assembly                     |             | <b>LP</b>        | : Long Play                    |
|          | <b>AT</b>            | : All Time                     |             | <b>L.P.F</b>     | : Low Pass Filter              |
|          | <b>AUTO</b>          | : Automatic                    |             | <b>LUMI.</b>     | : Luminance                    |
|          | <b>A/V</b>           | : Audio/Video                  | <b>M</b>    | <b>M</b>         | : Motor                        |
| <b>B</b> | <b>BGP</b>           | : Burst Gate Pulse             |             | <b>MAX</b>       | : Maximum                      |
|          | <b>BOT</b>           | : Beginning of Tape            |             | <b>MINI</b>      | : Minimum                      |
|          | <b>BPF</b>           | : Bandpass Filter              |             | <b>MIX</b>       | : Mixer, mixing                |
|          | <b>BRAKE SOL</b>     | : Brake Solenoid               |             | <b>MM</b>        | : Monostable Multivibrator     |
|          | <b>BUFF</b>          | : Buffer                       |             | <b>MOD</b>       | : Modulator, Modulation        |
|          | <b>B/W</b>           | : Black and White              |             | <b>MPX</b>       | : Multiplexer, Multiplex       |
| <b>C</b> | <b>C</b>             | : Capacitance, Collector       |             | <b>MS SW</b>     | : Mecha State Switch           |
|          | <b>CASE</b>          | : Cassette                     | <b>N</b>    | <b>NC</b>        | : Non Connection               |
|          | <b>CAP</b>           | : Capstan                      |             | <b>NR</b>        | : Noise Reduction              |
|          | <b>CARR</b>          | : Carrier                      | <b>O</b>    | <b>OSC</b>       | : Oscillator                   |
|          | <b>CH</b>            | : Channel                      |             | <b>OPE</b>       | : Operation                    |
|          | <b>CLK</b>           | : Clock                        | <b>P</b>    | <b>PB</b>        | : Playback                     |
|          | <b>CLOCK (SY-SE)</b> | : Clock (Syscon to Servo)      |             | <b>PB CTL</b>    | : Playback Control             |
|          | <b>COMB</b>          | : Combination, Comb Filter     |             | <b>PB-C</b>      | : Playback-Chrominance         |
|          | <b>CONV</b>          | : Converter                    |             | <b>PB-Y</b>      | : Playback-Luminance           |
|          | <b>CPM</b>           | : Capstan Motor                |             | <b>PCB</b>       | : Printed Circuit Board        |
|          | <b>CTL</b>           | : Control                      |             | <b>P. CON</b>    | : Power Control                |
|          | <b>CYL</b>           | : Cylinder                     |             | <b>PD</b>        | : Phase Detector               |
|          | <b>CYL-M</b>         | : Cylinder-Motor               |             | <b>PG</b>        | : Pulse Generator              |
|          | <b>CYL SENS</b>      | : Cylinder-Sensor              |             | <b>P-P</b>       | : Peak-to Peak                 |
| <b>D</b> | <b>DATA (SY-CE)</b>  | : Data (Syscon to Servo)       | <b>R</b>    | <b>R</b>         | : Right                        |
|          | <b>dB</b>            | : Decibel                      |             | <b>REC</b>       | : Recording                    |
|          | <b>DC</b>            | : Direct Current               |             | <b>REC-C</b>     | : Recording-Chrominance        |
|          | <b>DD Unit</b>       | : Direct Drive Motor Unit      |             | <b>REC-Y</b>     | : Recording-Luminance          |
|          | <b>DEMODO</b>        | : Demodulator                  |             | <b>REEL BRK</b>  | : Reel Brake                   |
|          | <b>DET</b>           | : Detector                     |             | <b>REEL S</b>    | : Reel Sensor                  |
|          | <b>DEV</b>           | : Deviation                    |             | <b>REF</b>       | : Reference                    |
| <b>E</b> | <b>E</b>             | : Emitter                      |             | <b>REG</b>       | : Regulated, Regulator         |
|          | <b>EF</b>            | : Emitter Follower             |             | <b>REW</b>       | : Rewind                       |
|          | <b>EMPH</b>          | : Emphasis                     |             | <b>REV, RVS</b>  | : Reverse                      |
|          | <b>ENC</b>           | : Encoder                      |             | <b>RF</b>        | : Radio Frequency              |
|          | <b>ENV</b>           | : Envelope                     |             | <b>RMC</b>       | : Remote Control               |
|          | <b>EOT</b>           | : End of Tape                  |             | <b>RY</b>        | : Relay                        |
|          | <b>EQ</b>            | : Equalizer                    | <b>S</b>    | <b>S. CLK</b>    | : Serial Clock                 |
|          | <b>EXT</b>           | : External                     |             | <b>S. COM</b>    | : Sensor Common                |
| <b>F</b> | <b>F</b>             | : Fuse                         |             | <b>S. DATA</b>   | : Serial Data                  |
|          | <b>FBC</b>           | : Feed Back Clamp              |             | <b>SEG</b>       | : Segment                      |
|          | <b>FE</b>            | : Full Erase                   |             | <b>SEL</b>       | : Select, Selector             |
|          | <b>FF</b>            | : Fast Forward, Flipflop       |             | <b>SENS</b>      | : Sensor                       |
|          | <b>FG</b>            | : Frequency Generator          |             | <b>SER</b>       | : Search Mode                  |
|          | <b>FL SW</b>         | : Front Loading Switch         |             | <b>SI</b>        | : Serial Input                 |
|          | <b>FM</b>            | : Frequency Modulation         |             | <b>SIF</b>       | : Sound Intermediate Frequency |
|          | <b>FSC</b>           | : Frequency Sub Carrier        |             | <b>SO</b>        | : Serial Output                |
|          | <b>FWD</b>           | : Forward                      |             | <b>SOL</b>       | : Solenoid                     |
| <b>G</b> | <b>GEN</b>           | : Generator                    |             | <b>SP</b>        | : Standard Play                |
|          | <b>GND</b>           | : Ground                       |             | <b>STB</b>       | : Serial Strobe                |
| <b>H</b> | <b>H.P.F</b>         | : High Pass Filter             |             | <b>SW</b>        | : Switch                       |

## KEY TO ABBREVIATIONS

|          |                 |   |                                 |
|----------|-----------------|---|---------------------------------|
| <b>S</b> | <b>SYNC</b>     | : | Synchronization                 |
|          | <b>SYNC SEP</b> | : | Sync Separator, Separation      |
| <b>T</b> | <b>TR</b>       | : | Transistor                      |
|          | <b>TRAC</b>     | : | Tracking                        |
|          | <b>TRICK PB</b> | : | Trick Playback                  |
|          | <b>TP</b>       | : | Test Point                      |
| <b>U</b> | <b>UNREG</b>    | : | Unregulated                     |
| <b>V</b> | <b>V</b>        | : | Volt                            |
|          | <b>VCO</b>      | : | Voltage Controlled Oscillator   |
|          | <b>VIF</b>      | : | Video Intermediate Frequency    |
|          | <b>VP</b>       | : | Vertical Pulse, Voltage Display |
|          | <b>V.PB</b>     | : | Video Playback                  |
|          | <b>VR</b>       | : | Variable Resistor               |
|          | <b>V.REC</b>    | : | Video Recording                 |
|          | <b>VSF</b>      | : | Visual Search Fast Forward      |
|          | <b>VSR</b>      | : | Visual Search Rewind            |
|          | <b>VSS</b>      | : | Voltage Super Source            |
|          | <b>V-SYNC</b>   | : | Vertical-Synchronization        |
|          | <b>VT</b>       | : | Voltage Tuning                  |
| <b>X</b> | <b>X'TAL</b>    | : | Crystal                         |
| <b>Y</b> | <b>Y/C</b>      | : | Luminance/Chrominance           |

## SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.

To enter SERVICE MODE, unplug AC cord till lost actual clock time. Then press and hold Vol (-) button of main unit and remocon key simultaneously.

The both pressing of set key and remote control key will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.

| Set Key      | Remocon Key | Operations  |
|--------------|-------------|---|
| VOL. (-) MIN | 0           | Releasing of V-CHIP PASSWORD.   |
| VOL. (-) MIN | 1           | Initialization of the factory.<br>NOTE: Do not use this for the normal servicing.<br>If you set a factory initialization, the memories are reset such as the clock setting, the channel setting, the POWER ON total hours, and PLAY/REC total hours.                            |
| VOL. (-) MIN | 2           | Horizontal position adjustment of OSD.<br>NOTE: Also can be adjusted by using the Adjustment MENU.<br>Refer to the "ELECTRICAL ADJUSTMENT" (OSD HORIZONTAL).  |
| VOL. (-) MIN | 3           | Adjust the PG SHIFTER automatically.<br>Refer to the "ELECTRICAL ADJUSTMENT" (PG SHIFTER).  |
| VOL. (-) MIN | 4           | Adjust the PG SHIFTER manually.<br>Refer to the "ELECTRICAL ADJUSTMENT" (PG SHIFTER).   |
| VOL. (-) MIN | 5           | Adjusting of the Tracking to the center position.<br>NOTE: Also can be adjusted by pressing the ATR button for more than 2 seconds during PLAY.   |
| VOL. (-) MIN | 6           | POWER ON total hours and PLAY/REC total hours are displayed on the screen.<br>Refer to the "PREVENTIVE CHECKS AND SERVICE INTERVALS" (CONFIRMATION OF HOURS USED).<br><br>Can be checked of the INITIAL DATA of MEMORY IC.<br>Refer to the "WHEN REPLACING EEPROM (MEMORY) IC". |
| VOL. (-) MIN | 8           | Writing of EEPROM initial data.<br>NOTE: Do not use this for the normal servicing.  |
| VOL. (-) MIN | 9           | Display of the Adjustment MENU on the screen.<br>Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).   |

| Method  | Operations   |
|---|--|
| Press the ATR button on the remote control for more than 2 seconds during PLAY. | Adjusting of the Tracking to the center position.<br>Refer to the "MECHANICAL ADJUSTMENT" (GUIDE ROLLER) and "ELECTRICAL ADJUSTMENT" (PG SHIFTER). |
| Make the short circuit between the test point of SERVICE and the GND.           | The BOT, EOT and the Reel sensor do not work and the deck can be operated without a cassette tape.<br>Refer to the "PREPARATION FOR SERVICING"     |

## PREVENTIVE CHECKS AND SERVICE INTERVALS

The following standard table depends on environmental conditions and usage.

Parts replacing time does not mean the life span for individual parts.

Also, long term storage or misuse may cause transformation and aging of rubber parts.

The following list means standard hours, so the checking hours depends on the conditions.

| Time<br>Parts Name              | 500<br>hours | 1,000<br>hours | 1,500<br>hours | 2,000<br>hours | 2,500<br>hours | Notes   |
|---------------------------------|--------------|----------------|----------------|----------------|----------------|---|
| Audio Control Head              | ■            | ■              | ■              | ●              | ●              | Clean those parts in contact with the tape.           |
| Full Erase Head (Recorder only) | ■            | ■              | ■              | ●              | ●              |   |
| Capstan Belt                    |              | ●              | ●              | ●              | ●              | Clean the rubber, and parts which the rubber touches. |
| Pinch Roller                    | ■            | ●              | ●              | ●              | ●              |   |
| Capstan DD Unit                 |              | ●              | ●              | ●              | ●              |   |
| Loading Motor                   |              |                |                |                | ●              |   |
| Tension Band                    |              | ●              | ●              | ●              | ●              |   |
| T Brake Band                    |              | ●              | ●              | ●              | ●              |   |
| Clutch Ass'y                    |              | ●              | ●              | ●              | ●              |   |
| Idler Arm Ass'y                 |              | ●              | ●              | ●              | ●              |   |
| Capstan Shaft                   | ■            | ■              | ■              | ■              | ■              |   |
| Tape Running Guide Post         | ■            | ■              | ■              | ■              | ■              |   |
| Cylinder Unit                   | ■            | ●              | ●              | ●              | ●              | Clean the Head  |

■ : Clean

● : Check it and if necessary, replace it.

### CONFIRMATION OF HOURS USED

POWER ON total hours and PLAY/REC total hours can be checked on the screen.

Total hours are displayed in 16 system of notation.

**NOTE: If you set a factory initialization, the total hours is reset to "0".**

**The confirmation of using hours will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.**

1. Set the VOLUME to minimum.
2. While holding down VOLUME button on front cabinet, press key 6 on remote control simultaneously.
3. After the confirmation of using hours, turn off the power.

|               |   |
|---------------|---|
| INIT 00 83    | — Initial setting content of MEMORY IC. |
| POWER ON 0010 | — POWER ON total hours.                 |
| PLAY/REC 0003 | — PLAY/REC total hours.                 |

(16 x 16 x 16 x thousands digit value) + (16 x 16 x hundreds digit value) + (16 x tens digit value) + (ones digit value)

# PREVENTIVE CHECKS AND SERVICE INTERVALS


## CLEANING

### NOTE

After cleaning the heads with isopropyl alcohol, do not run a tape until the heads dry completely. If the heads are not completely dry and alcohol gets on the tape, damage may occur.

### 1. AUDIO CONTROL HEAD

Clean the Audio Control Head with the cotton stick soaked by alcohol. Clean the full erase head in the same manner. (Refer to the figure below.)

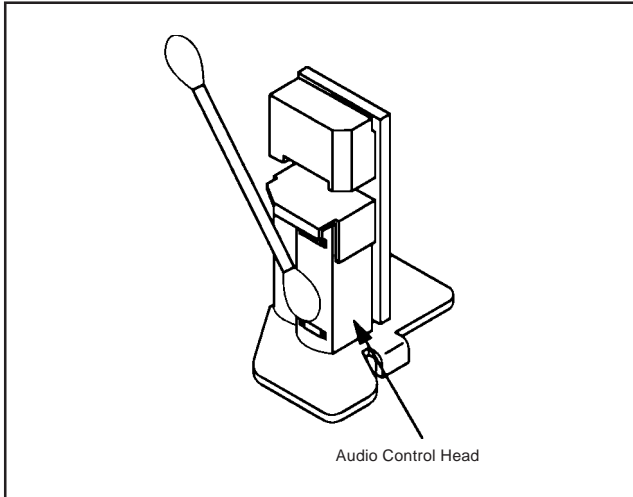

### 2. TAPE RUNNING SYSTEM


When cleaning the tape transport system, use the gauze moistened with isopropyl alcohol.

### 3. CYLINDER

Wrap a piece of chamois around your finger. Dip it in isopropyl alcohol. Hold it to the cylinder head softly. Turn the cylinder head counterclockwise to clean it (in the direction of the arrow). (Refer to the figure below.)

### NOTE

Do not exert force against the cylinder head. Do not move the chamois upward or downward on the head. Use the chamois one by one.

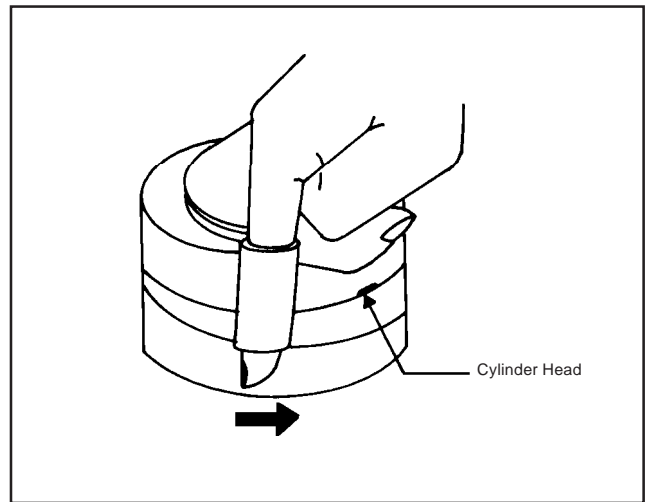



## WHEN REPLACING EEPROM (MEMORY) IC


If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

**NOTE: Initial Data setting will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On or alternatively, discharge backup capacitor.**

| INI | +0 | +1 | +2 | +3 | +4 | +5 | +6 | +7 | +8 | +9 | +A | +B | +C | +D | +E | +F |
|-----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 00  | 88 | 0A | 62 | 63 | 43 | 14 | 34 | 09 | 51 | 38 | 30 | 66 | 00 | 40 | 00 | 10 |
| 10  | B2 | 9A | 92 | 93 | 00 | 00 | 30 | 05 | 08 | 00 | A9 | 0F | 94 | 3E | 06 | 04 |
| 20  | 06 | 29 | 01 | 17 | 10 | 60 | 32 | 3A | DA | D7 | 10 | 15 | 20 | 25 | 26 | 27 |
| 30  | 28 | 29 | 2A | 2C | 2E | 30 | 32 | 34 | 36 | 38 | 3A | 3C | 3E | 40 | 41 | 42 |
| 40  | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 4A | 4B | 4C | 4D | 4E | 4F | 50 | 51 | 52 |
| 50  | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 5A | 5B | 5C | 5D | 5E | 5F | 60 | 61 | 62 |
| 60  | 63 | 64 | 66 | 69 | 6D | 74 | 79 | 7C | 7E | 7F |    |    |    |    |    |    |

**Table 1**












1. Enter DATA SET mode by setting VOLUME to minimum.
2. While holding down VOLUME button on front cabinet, press key 6 on remote control for more than 2 seconds. ADDRESS and DATA should appear as FIG 1.

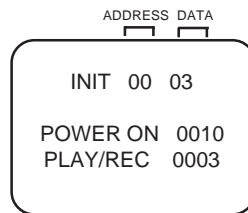

**Fig. 1**

3. ADDRESS is now selected and should "blink". Using the FF or REW button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using FF or REW button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input. The unit will now have the correct DATA for the new MEMORY IC.

## SERVICING FIXTURES AND TOOLS

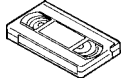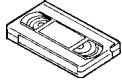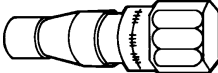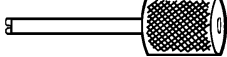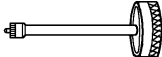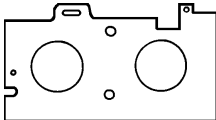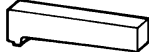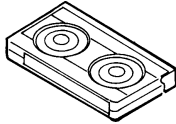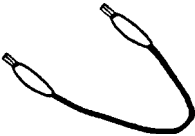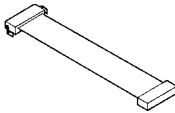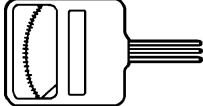
|  |   |   |   |
|--|---|---|---|
| <p><b>(For 2 heads model)</b><br/> VHS Alignment Tape<br/> JG001 (VN<sub>2</sub>S-LI6<sup>3</sup>)<br/> JG001A (VN<sub>2</sub>S-CO1<sup>3</sup>)<br/> JG001Q (VN<sub>2</sub>S-LI6<sup>3</sup>H)<br/> JG001T (VN<sub>2</sub>S-X6<sup>3</sup>)</p>  | <p><b>(For 4 heads model)</b><br/> VHS Alignment Tape<br/> JG001B (VN<sub>1</sub>S-LI6<sup>3</sup>)<br/> JG001I (VN<sub>1</sub>S-CO1<sup>3</sup>)<br/> JG001P (VN<sub>1</sub>S-LI6<sup>3</sup>H)<br/> JG001S (VN<sub>1</sub>S-X6<sup>3</sup>)</p>  | <p>JG002B Adapter<br/> JG002E Dial Torque Gauge (10~90gf•cm)<br/> JG002F (60~600gf•cm)</p>  | <p>JG005 Post Adjustment Screwdriver<br/> Part No. SV-TG0-030-000 (small)</p>  |
| <p>JG153 X Value Adjustment Screwdriver</p>   | <p>JG022 Master Plane</p>    | <p>JG024A Reel Disk Height Adjustment Jig</p>   | <p>JG100A Torque Tape (VHT-063)</p>    |
| <p>JG154 Cable</p>    | <p>JG162E Cable (13 Pins)<br/> JG162D Cable (11 Pins)<br/> JG162Y Cable (5 Pins)</p>    | <p>Tentelometer</p>   |   |

| Ref. No. | Part No.   | Parts Name                                    | Remarks  |
|----------|------------|---|--|
| JG001    | APJG001000 | VHS Alignment Tape <b>(For 2 heads model)</b> | Monoscope, 6KHz                                      |
| JG001A   | APJG001A00 | VHS Alignment Tape <b>(For 2 heads model)</b> | Color Bar, 1KHz                                      |
| JG001Q   | APJG001Q00 | VHS Alignment Tape <b>(For 2 heads model)</b> | Hi-Fi Audio  |
| JG001T   | APJG001T00 | VHS Alignment Tape <b>(For 2 heads model)</b> | X Value Adjustment                                   |
| JG001B   | APJG001B00 | VHS Alignment Tape <b>(For 4 heads model)</b> | Monoscope, 6KHz                                      |
| JG001I   | APJG001I00 | VHS Alignment Tape <b>(For 4 heads model)</b> | Color Bar, 1KHz                                      |
| JG001P   | APJG001P00 | VHS Alignment Tape <b>(For 4 heads model)</b> | Hi-Fi Audio  |
| JG001S   | APJG001S00 | VHS Alignment Tape <b>(For 4 heads model)</b> | X Value Adjustment                                   |
| JG002B   | APJG002B00 | Adapter                                       | VSR Torque, Brake Torque (S Reel/T Reel Ass'y)       |
| JG002E   | APJG002E00 | Dial Torque Gauge (10~90gf•cm)                | Brake Torque (T Reel Ass'y)                          |
| JG002F   | APJG002F00 | Dial Torque Gauge (60~600gf•cm)               | VSR Torque, Brake Torque (S Reel)                    |
| JG005    | APJG005000 | Post Adjustment Screwdriver                   | Guide Roller Adjustment                              |
| JG153    | APJG153000 | X Value Adjustment Screwdriver                | X Value Adjustment                                   |
| JG022    | APJG022000 | Master Plane                                  | Reel Disk Height Adjustment                          |
| JG024A   | APJG024A00 | Reel Disk Height Adjustment Jig               | Reel Disk Height Adjustment                          |
| JG100A   | APJG100A00 | Torque Tape (VHT-063)                         | Playback Torque, Back Tension Torque During Playback |
| JG154    | APJG154000 | Cable   | Used to connect the test point of SERVICE and GROUND |
| JG162E   | APJG162E00 | Cable (13 Pins)                               | Used to connect the Syscon PCB and Main PCB          |
| JG162D   | APJG162D00 | Cable (11 Pins)                               | Used to connect the Syscon PCB and Main PCB          |
| JG162Y   | APJG162Y00 | Cable (5 Pins)                                | Used to connect the Syscon PCB and CRT PCB           |

## PREPARATION FOR SERVICING

### How to use the Servicing Fixture

1. Unplug the connector CP2201, CP4202, CP502, CP820 and CP850, then remove the VCR Block from the set.
2. Connect as shown in the below figure using the Service Fixture.
  - Connect the Syscon PCB to the Main PCB with the cable JG162D and JG162E.
  - Connect the Syscon PCB to the CRT PCB with the cable JG162Y.
3. Remove the Operation PCB from the set, then connect it with the Syscon PCB.  
If necessary, connect CD351. (Front A/V Jack Input Terminal)
4. Short circuit between **TP1001** and **Ground** with the cable JG154.  
(The BOT, EOT and the Reel Sensor do not work and the deck can be operated without a cassette tape.)
5. In case of using a cassette tape, press the STOP/EJECT button to insert or eject a cassette tape.  
Turn on the power and re-check the cable before checking the trouble points.

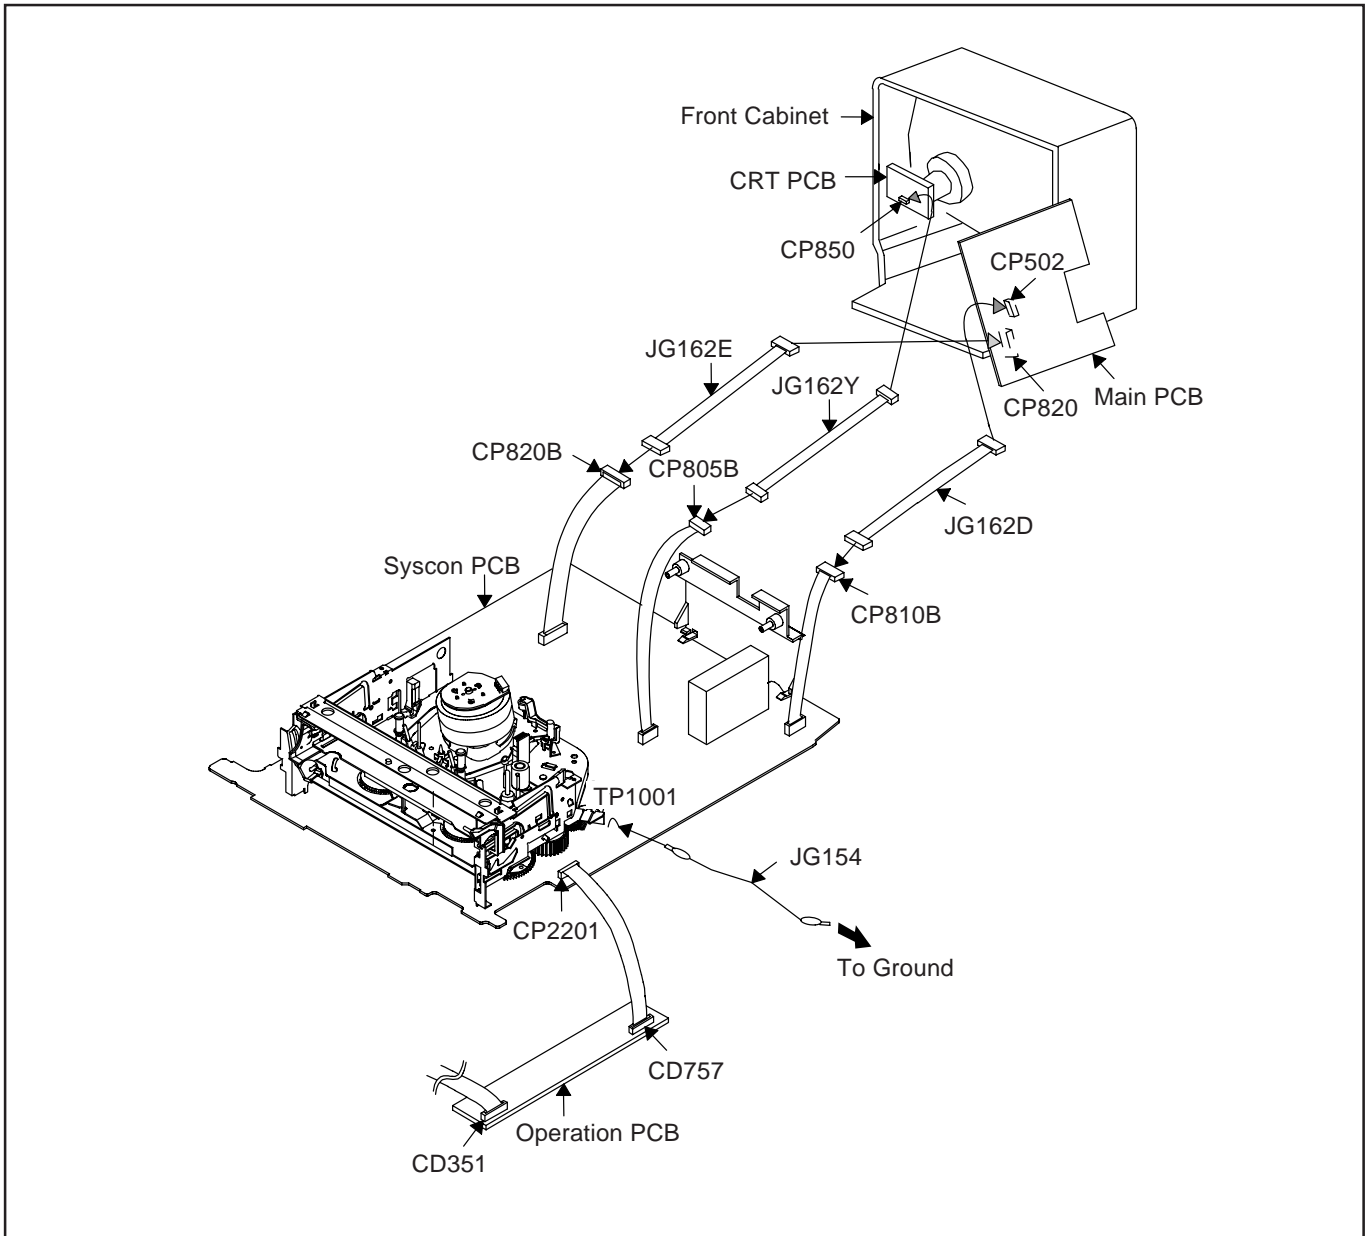

# MECHANICAL ADJUSTMENTS



## 1. CONFIRMATION AND ADJUSTMENT

Read the following NOTES before starting work.

- Place an object which weighs between 450g~500g on the Cassette Tape to keep it steady when you want to make the tape run without the Cassette Holder. (Do not place an object which weighs over 500g.)



### 1-1: CONFIRMATION AND ADJUSTMENT OF REEL DISK HEIGHT

- Turn on the power and set to the STOP mode.
- Set the master plane (**JG022**) and reel disk height adjustment jig (**JG024A**) on the mechanism framework, taking care not to scratch the drum, as shown in **Fig. 1-1-A**.
- While turning the reel and confirm the following points. Check if the surface "A" of reel disk is lower than the surface "B" of reel disk height adjustment jig (**JG024A**) and is higher than the surface "C". If it is not passed, place the height adjustment washers and adjust to 10(+2, -0)mm.
- Adjust the other reel in the same way.

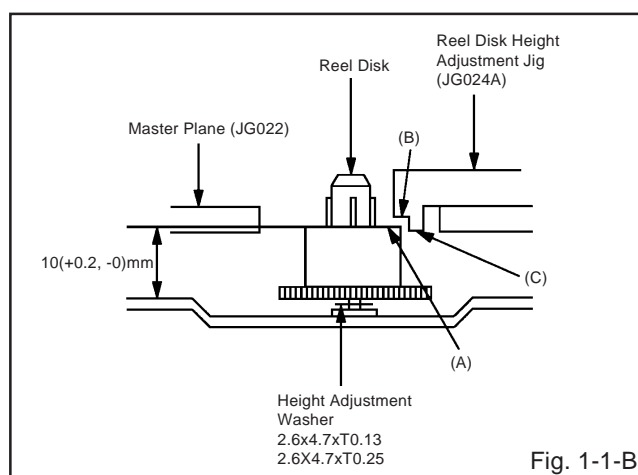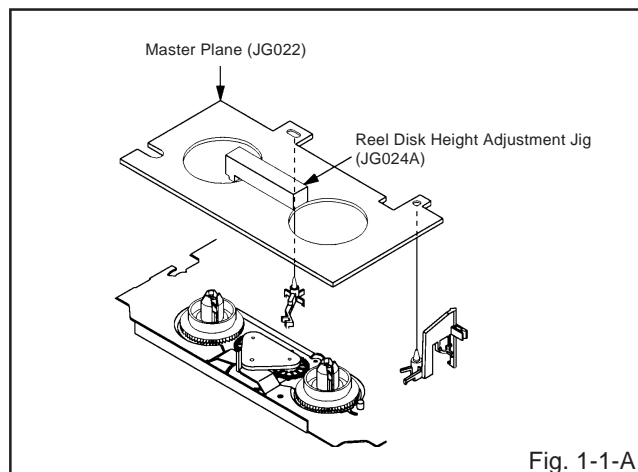

### 1-2: CONFIRMATION AND ADJUSTMENT OF TENSION POST POSITION

- Set to the PLAY mode.
- Adjust the adjusting section for the Tension Arm position so that the Tension Arm top is within the standard line of Main Chassis.
- While turning the S Reel clockwise, confirm that the edge of the Tension Arm is located in the position described above.

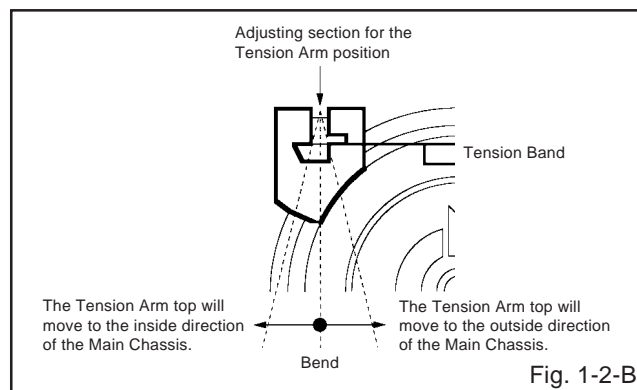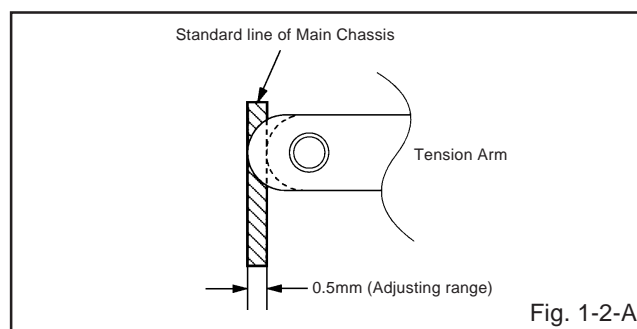


### 1-3: CONFIRMATION OF PLAYBACK TORQUE AND BACK TENSION TORQUE DURING PLAYBACK

- Load a video tape (T-120) recorded in standard speed mode. Set the unit to the PLAY mode.
- Install the tentelometer as shown in **Fig. 1-3**. Confirm that the meter indicates  $20 \pm 2$ gf in the beginning of playback.

#### • USING A CASSETTE TYPE TORQUE TAPE (**JG100A**)

- After confirmation and adjustment of Tension Post position (Refer to item 1-2), load the cassette type torque tape (**JG100A**) and set to the PLAY mode.
- Confirm that the right meter of the torque tape indicates 50~90gf•cm during playback in SP mode.
- Confirm that the left meter of the torque tape indicates 25~40gf•cm during playback in SP mode.

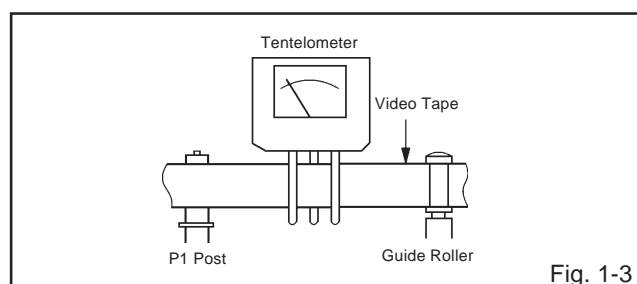

# MECHANICAL ADJUSTMENTS

## 1-4: CONFIRMATION OF VSR TORQUE

1. Install the Torque Gauge (JG002F) and Adapter (JG002B) on the S Reel. Set to the Picture Search (Rewind) mode. (Refer to Fig.1-4-B)
2. Then, confirm that it indicates 120~180gf•cm.

### NOTE

Install the Torque Gauge on the reel disk firmly. Press the REW button to turn the reel disk.

## 1-5: CONFIRMATION OF REEL BRAKE TORQUE

(S Reel Brake) (Refer to Fig. 1-4-B)

1. Once set to the Fast Forward mode then set to the Stop mode. While, unplug the AC cord when the Pinch Roller Block is on the position of Fig. 1-4-A.
2. Move the Idler Ass'y from the S Reel.
3. Install the Torque Gauge (JG002F) and Adapter (JG002B) on the S Reel. Turn the Torque Gauge (JG002F) clockwise.
4. Then, confirm that it indicates 60~100gf•cm.

(T Reel Brake) (Refer to Fig. 1-4-B)

1. Once set to the Fast Forward mode then set to the Stop mode. While, unplug the AC cord when the Pinch Roller Block is on the position of Fig. 1-4-A.
2. Move the Idler Ass'y from the T Reel.
3. Install the Torque Gauge (JG002E) and Adapter (JG002B) on the T reel. Turn the Torque Gauge (JG002E) counterclockwise.
4. Then, confirm that it indicates 30~50gf•cm.

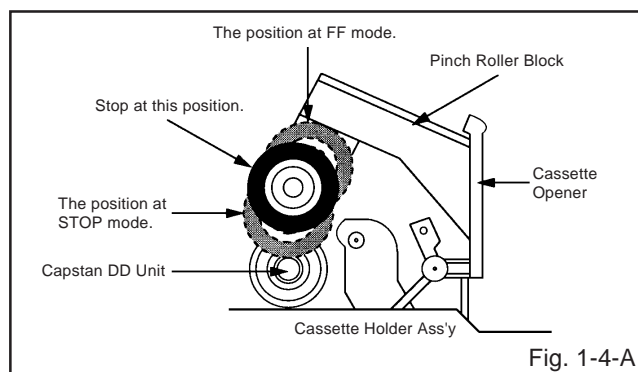


Fig. 1-4-A

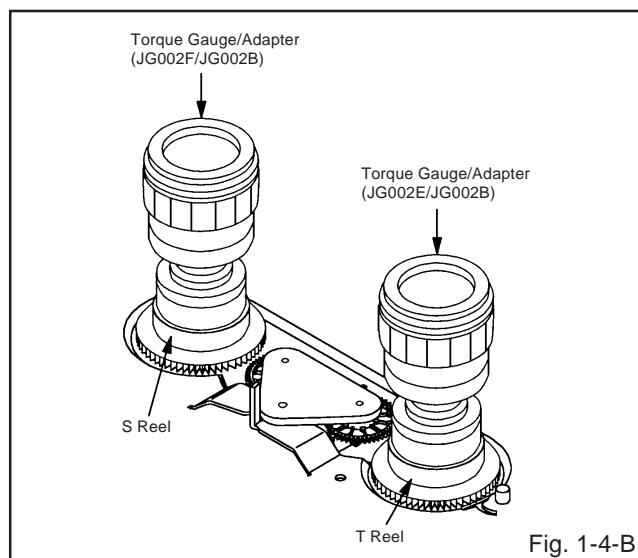


Fig. 1-4-B

### NOTE

If the torque is out of the range, replace the following parts.

| Check item | Replacement Part   |
|------------|--|
| 1-4        | Idler Ass'y/Clutch Ass'y   |
| 1-5        | S Reel side: S Reel/Tension Band/Tension Connect/Tension Arm Ass'y<br>T Reel side: T Reel/T Brake Band//T Brake Spring/T Brake Arm |

## 2. CONFIRMATION AND ADJUSTMENT OF TAPE RUNNING MECHANISM

Tape Running Mechanism is adjusted precisely at the factory. Adjustment is not necessary as usual. When you replace the parts of the tape running mechanism because of long term usage or failure, the confirmation and adjustment are necessary.

### 2-1: GUIDE ROLLER

1. Playback the VHS Alignment Tape (JG001 or JG001B). (Refer to SERVICING FIXTURE AND TOOLS)
2. Connect CH-1 of the oscilloscope to TP4001 (Envelope) and CH-2 to TP1002 (SW Pulse).
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Trigger with SW Pulse and observe the envelope. (Refer to Fig. 2-1-A)
5. When observing the envelope, adjust the Adjusting Driver (JG005) slightly until the envelope will be flat. Even if you press the Tracking Button, adjust so that flatness is not moved so much.
6. Adjust so that the A : B ratio is better than 3 : 2 as shown in Fig. 2-1-B, even if you press the Tracking Button to move the envelope (The envelope waveform will begin to decrease when you press the Tracking Button).
7. Adjust the PG shifter during playback. (Refer to the ELECTRICAL ADJUSTMENTS)

### NOTE

After adjustment, confirm and adjust A/C head. (Refer to item 2-2)

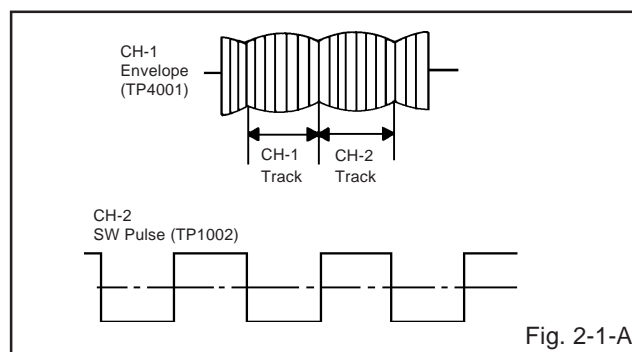


Fig. 2-1-A

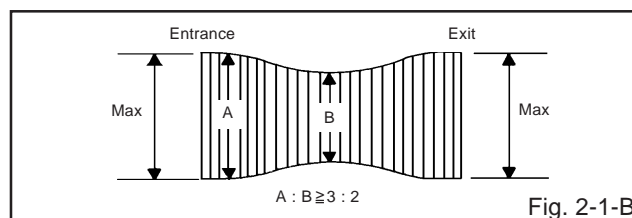





Fig. 2-1-B

## MECHANICAL ADJUSTMENTS

### 2-2: CONFIRMATION AND ADJUSTMENT OF AUDIO/CONTROL HEAD


When the Tape Running Mechanism does not work well, adjust the following items.

1. Playback the VHS Alignment Tape (**JG001 or JG001B**).  
(Refer to **SERVICING FIXTURE AND TOOLS**)
2. Confirm that the reflected picture of stamp mark is appeared on the tape prior to P4 Post as shown in **Fig. 2-2-A**.
  - a) When the reflected picture is distorted, turn the screw (1) clockwise until the distortion is disappeared.
  - b) When the reflected picture is not distorted, turn the screw (1) counterclockwise until little distortion is appeared, then adjust the a).
3. Turn the screw (2) to set the audio level to maximum.
4. Confirm that the bottom of the Audio/Control Head and the bottom of the tape is shown in **Fig. 2-2-C**.
  - a) When the height is not correct, turn the screw (3) to adjust the height. Then, adjust the 1~3 again.

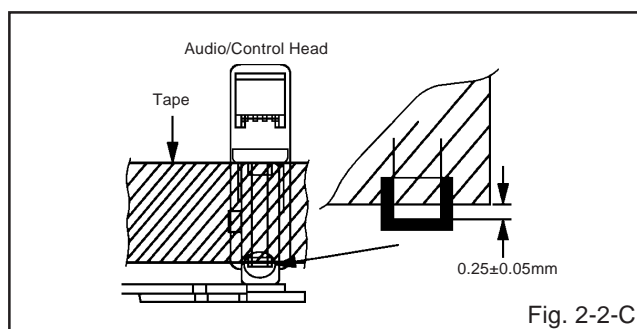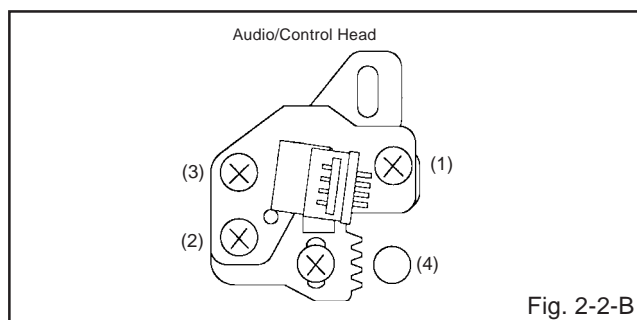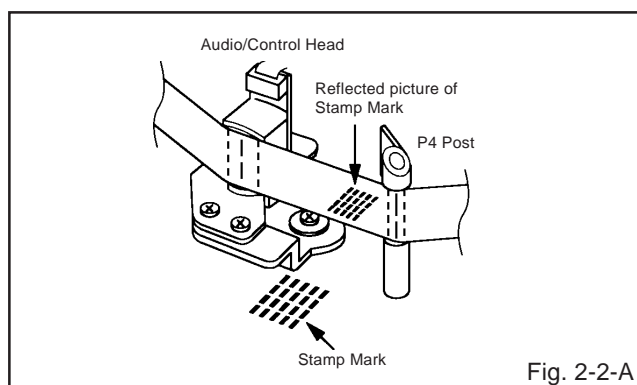

### 2-3: TAPE RUNNING ADJUSTMENT (X VALUE ADJUSTMENT)

1. Confirm and adjust the height of the Reel Disk.  
(Refer to **item 1-1**)
2. Confirm and adjust the position of the Tension Post. (Refer to **item 1-2**)
3. Adjust the Guide Roller. (Refer to **item 2-1**)
4. Confirm and adjust the Audio/Control Head.  
(Refer to **item 2-2**)
5. Connect CH-1 of the oscilloscope to **TP1002**, CH-2 to **TP4001** and CH-3 to **HOT side of Audio Out Jack**.
6. Playback the VHS Alignment Tape (**JG001S or JG001T**).  
(Refer to **SERVICING FIXTURE AND TOOLS**)
7. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
8. Set the X Value adjustment driver (**JG153**) to the (4) of **Fig. 2-2-B**. Adjust X value so that the envelope waveform output becomes maximum. Check if the relation between Audio and Envelope waveform becomes (1) or (2) of **Fig. 2-3**.

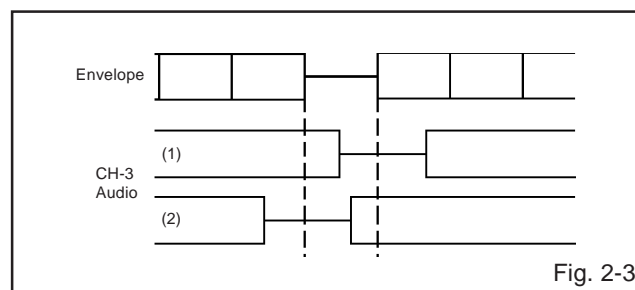


### 2-4: CONFIRM HI-FI AUDIO (Hi-Fi model only)

1. Connect CH-1 of the oscilloscope to **TP1002** and CH-2 to the **Hi-Fi Audio Out Jack**.
2. Playback the VHS Alignment Tape (**JG001P or JG001Q**).  
(Refer to **SERVICING FIXTURE AND TOOLS**)
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Press the Tracking Up button and count number of steps which the audio output is changed from Hi-Fi (10KHz) to MONO (6KHz).
5. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
6. Press the Tracking Down button and count number of steps which the audio output is changed from Hi-Fi (10KHz) to MONO (6KHz).
7. If the difference are more than 3 steps, set the X Value adjustment driver (**JG153**) to 4 of **Fig. 2-2-B**. Change the X Value and adjust it so that the value becomes within 2 steps.

# MECHANICAL ADJUSTMENTS

## 3. MECHANISM ADJUSTMENT PARTS LOCATION GUIDE

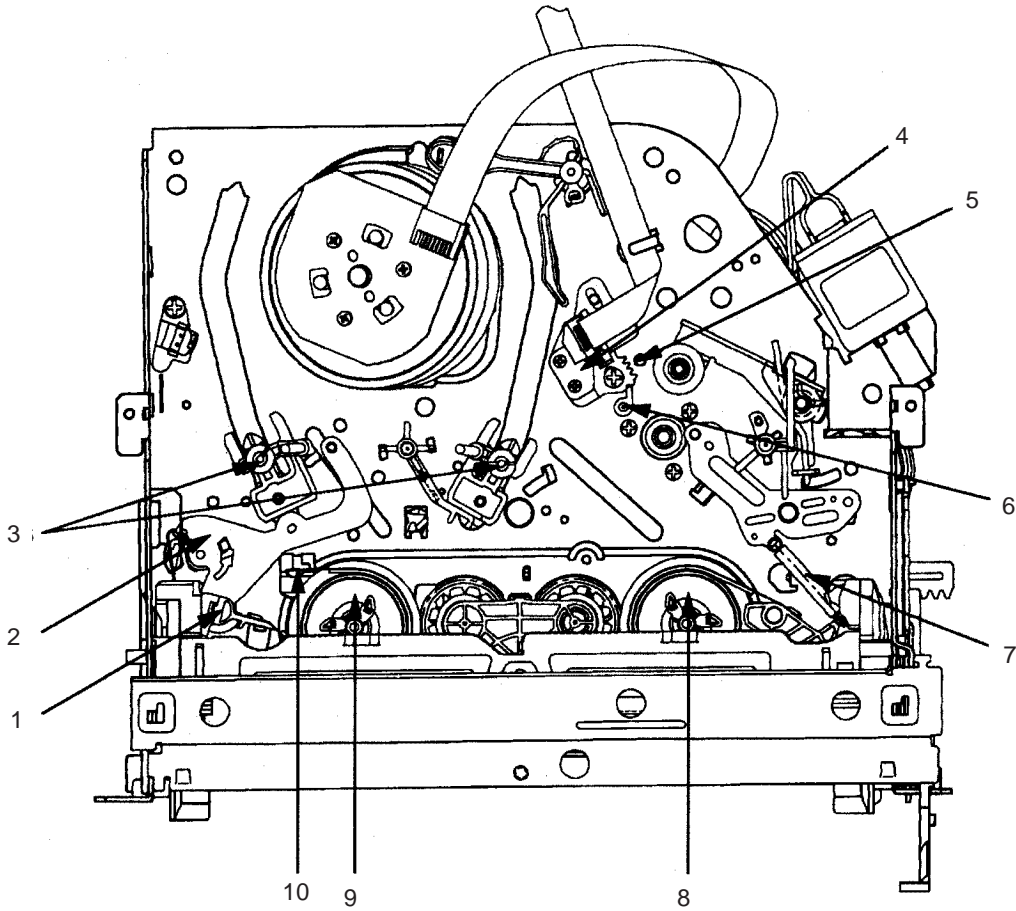

- |                                   |  |
|-----------------------------------|--|
| 1. Tension Connect                | 6. P4 Post   |
| 2. Tension Arm                    | 7. T Brake Spring                                  |
| 3. Guide Roller                   | 8. T Reel  |
| 4. Audio/Control Head             | 9. S Reel  |
| 5. X value adjustment driver hole | 10. Adjusting section for the Tension Arm position |

# ELECTRICAL ADJUSTMENTS

## 1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

### CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease (**YG6260M**) on the contact section of the heat sink, Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

### On-Screen Display Adjustment

1. Unplug the AC plug for more than 5 seconds to set the clock to the non-setting state. Then, set the volume level to minimum.
2. Press the VOL. DOWN button on the set and the Channel button **(9)** on the remote control simultaneously to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

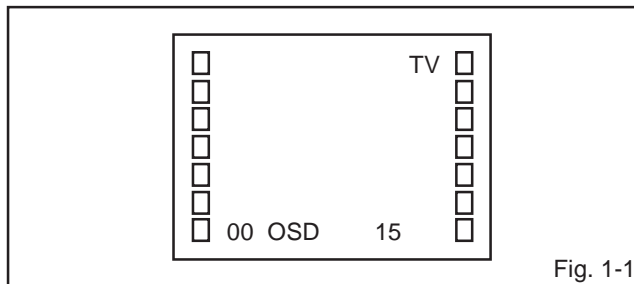


Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button **(0-9)** on the remote control to select the options shown in **Fig. 1-2**.
4. Press the MENU button on the remote control to end the adjustments.

| NO. | FUNCTION | NO. | FUNCTION     |
|-----|----------|-----|--------------|
| 00  | OSD H    | 13  | BRIGHTNESS   |
| 01  | CUT OFF  | 14  | CONTRAST     |
| 02  | RF DELAY | 15  | COLOR        |
| 03  | VIF VCO  | 16  | TINT         |
| 04  | H VCO    | 17  | SHARPNESS    |
| 05  | H PHASE  | 18  | FM LEVEL     |
| 06  | V SIZE   | 19  | LEVEL        |
| 07  | V SHIFT  | 20  | SEPARATION 1 |
| 08  | R DRIVE  | 21  | SEPARATION 2 |
| 09  | B DRIVE  | 22  | TEST MONO    |
| 10  | R BIAS   | 23  | TEST STEREO  |
| 11  | G BIAS   | 24  | X-RAY TEST   |
| 12  | B BIAS   |     |              |

Fig. 1-2

## 2. BASIC ADJUSTMENTS (VCR SECTION)

### 2-1: PG SHIFTER

1. Connect CH-1 on the oscilloscope to **TP1002** and CH-2 to **J4202**.
2. Playback the alignment tape. (**JG001A**)
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Press the VOL. DOWN button on the set and the channel button **(3)** on the remote control simultaneously until the indicator REC disappears. If the indicator REC disappears, adjustment is completed.

### (If the above adjustments doesn't work well:)

5. Press the VOL. DOWN button on the set and the channel button **(3)** on the remote control simultaneously until the indicator REC disappears.
6. When the REC indicator is blinking, press both VOL. DOWN button on the set and the channel button **(4)** on the remote control simultaneously and adjust the Tracking +/- button until the arising to the down of Head Switching Pulse becomes  $6.5 \pm 0.5H$ . (**Refer to Fig. 2-1-A, B**)
7. Press the Tracking Auto button.

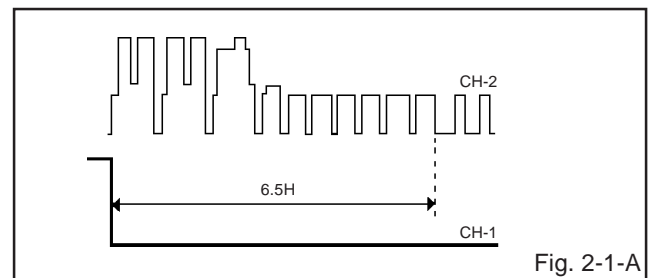


Fig. 2-1-A

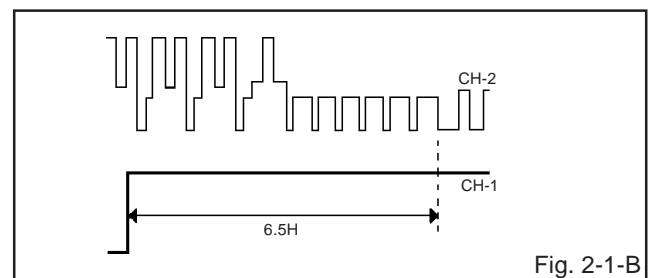


Fig. 2-1-B

### 2-2: VCO FREERUN

1. Place the set with Aging Test for more than 10 minutes.
2. Connect the digital voltmeter between the **pin 7 of CP602** and the **pin 1 (GND) of CP602**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(03)** on the remote control to select "VIF VCO".
4. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is 2.5V.



# ELECTRICAL ADJUSTMENTS

## 2-3: RF AGC

1. Receive a 63dB monoscope pattern.
2. Connect the digital voltmeter between the **pin 5 of CP602** and the **pin 1 (GND) of CP602**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**02**) on the remote control to select "RF DELAY".
4. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is  $2.65 \pm 0.05V$ .

## (TV SECTION)

### 2-4: CONSTANT VOLTAGE

1. Input DC12V to DC Jack and turn the Power ON.
2. Connect the digital voltmeter between the **FH503** or **FH504** and the **GND**.
3. Set condition is AV MODE without signal.
4. Adjust the **VR501** until the DC voltage is  $134 \pm 0.5V$ .
5. Input AC120V to AC cord and remove the DC Jack cord. Check if the Power is ON before doing the above procedure.
6. Adjust the **VR502** until the DC voltage is  $135 \pm 0.5V$ .

### 2-5: CUT OFF

1. Adjust the unit to the following settings.  
R.DRIVE=64, B.DRIVE=64, R.BIAS=128, G.BIAS=128,  
B.BIAS=128, SUB BRIGHT=128, SUB CONTRAST=100.
2. Place the set with Aging Test for more than 15 minutes.
3. Set condition is AV MODE without signal.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**01**) on the remote control to select "CUT OFF".
5. Adjust the **Screen Volume** until a dim raster is obtained.

### 2-6: WHITE BALANCE

**NOTE:** Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the white 100% signal from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**10**) on the remote control to select "R.BIAS".
5. Using the VOL. UP/DOWN button on the remote control, adjust the R.BIAS.
6. Press the CH. UP/DOWN button on the remote control to select the "R.DRIVE", "B.DRIVE", "G.BIAS" or "B.BIAS".
7. Using the VOL. UP/DOWN button on the remote control, adjust the R.DRIVE, B.DRIVE, G.BIAS or B.BIAS.
8. Perform the above adjustments 6 and 7 until the white color is looked like a white.

### 2-7: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the **Focus Volume** until picture is distinct.

### 2-8: SUB BRIGHTNESS

1. Receive the monoscope pattern. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**13**) on the remote control to select "BRIGHTNESS".
4. Press the VOL. UP/DOWN button on the remote control until the white 10% starting to be visible.
5. Receive the monoscope pattern. (Audio Video Input)
6. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.

### 2-9: HORIZONTAL PHASE

1. Receive the monoscope pattern.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**05**) on the remote control to select "H PHASE".
3. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

### 2-10: VERTICAL SHIFT

1. Receive the center cross signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**07**) on the remote control to select "V SHIFT".
4. Check if the step No. V SHIFT is "0".
5. Adjust the **VR402** until the horizontal line becomes fit to the notch of the shadow mask.

### 2-11: VERTICAL SIZE

1. Receive the center cross signal from the Pattern Generator.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**06**) on the remote control to select "V SIZE".
3. Press the VOL. UP/DOWN button on the remote control until the rectangle on the center of the screen becomes square.
4. Receive a broadcast and check if the picture is normal.


### 2-12: SUB CONTRAST

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**14**) on the remote control to select "CONTRAST".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "100".
3. Receive the color bar pattern. (Audio Video Input)
4. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 1, 2.

# ELECTRICAL ADJUSTMENTS


## 2-13: SUB TINT

1. Receive the color bar pattern. (RF Input)
2. Connect the oscilloscope to **TP803** (R810).
3. Using the remote control, set the brightness, contrast, color and tint to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**16**) on the remote control to select "TINT".
5. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes a straight line. (**Refer to Fig. 2-2**)
6. Receive the color bar pattern. (Audio Video Input)
7. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2-5.

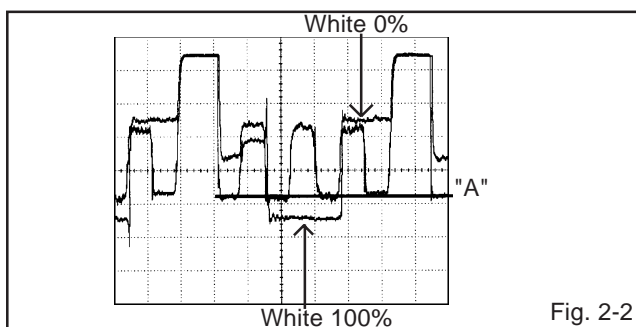


## 2-14: SUB COLOR

1. Receive the color bar pattern. (RF Input)
2. Connect the oscilloscope to **TP801** (R802).
3. Using the remote control, set the brightness, contrast, color and tint to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**15**) on the remote control to select "COLOR".
5. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set 5 scales on the screen of the oscilloscope.
6. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to  $110\% \pm 10\%$  of the white level. (**Refer to Fig. 2-3**)
7. Receive the color bar pattern. (Audio Video Input)
8. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2-6.

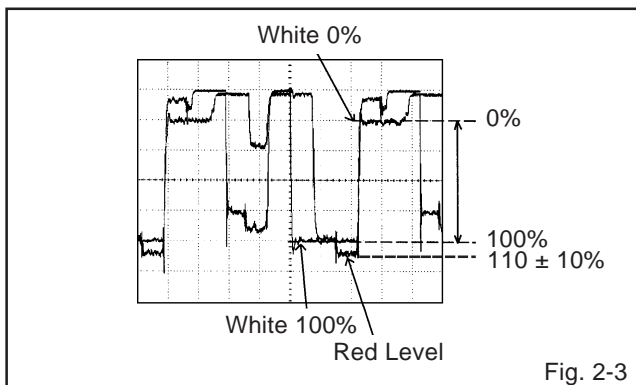

## 2-15: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. (**Refer to Fig. 2-4**)

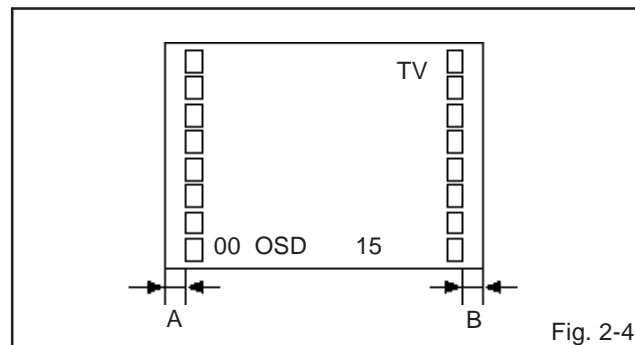

## 2-16: H VCO

1. Receive the monoscope pattern. (RF Input)
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**04**) on the remote control to select "H VCO".
3. Check if the step No. of H VCO is "4".

## 2-17: SUB SHARPNESS


1. Receive the monoscope pattern.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**17**) on the remote control to select "SHARPNESS".
3. Check if the step No. of SHARPNESS is "40".
4. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 1, 2.

## 2-18: VERTICAL LINEALITY

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast, to normal position.
3. Adjust the **VR401** of the OVER SCAN on upside and downside becomes minimum.

## 2-19: E-E LEVEL


1. Receive the color bar pattern. (Audio Video Input)
2. Connect the oscilloscope to **TP4201**.
3. Check if the VIDEO OUTPUT LEVEL is  $1 \pm 0.2V_{p-p}$ . (**Refer to Fig. 2-5**)

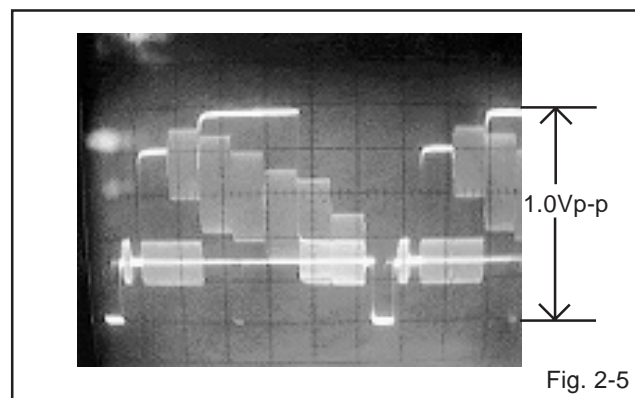

## ELECTRICAL ADJUSTMENTS

### 2-20: COLOR LEVEL

1. Receive the color bar pattern. (RF Input)
2. Connect the oscilloscope to **TP4201**.
3. When setting to the Y-LEVEL 100%, check if the MAGENTA is  $45 \pm 10\%$ . (Refer to Fig. 2-6)

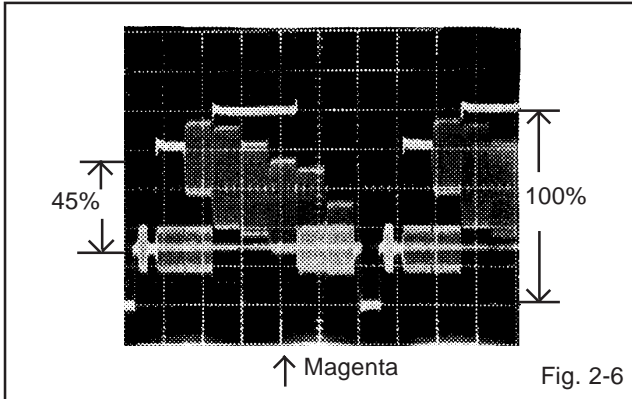

# ELECTRICAL ADJUSTMENTS

## 3. PURITY AND CONVERGENCE ADJUSTMENTS

### NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

### 3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**  
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnelside of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

### 3-2: PURITY

#### NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from the color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.  
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue colors.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

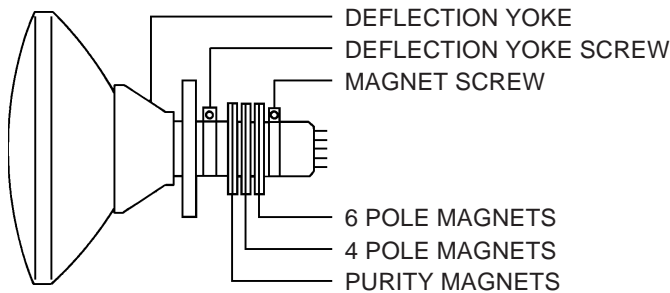


Fig. 3-1

### 3-3: STATIC CONVERGENCE

#### NOTE

Adjust after performing adjustments in section 3-2.


1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

### 3-4: DYNAMIC CONVERGENCE

#### NOTE


Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**

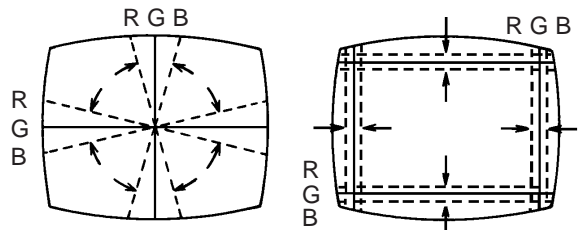

UPWARD/DOWNWARD SLANT RIGHT/LEFT SLANT

Fig. 3-2-a

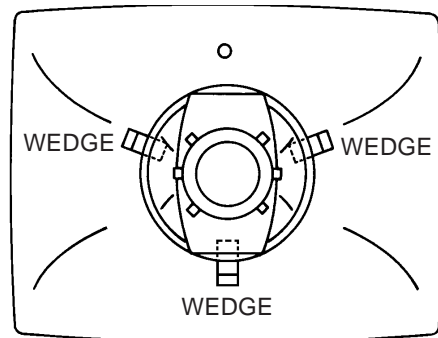


WEDGE POSITION


Fig. 3-2-b

# ELECTRICAL ADJUSTMENTS


## 4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

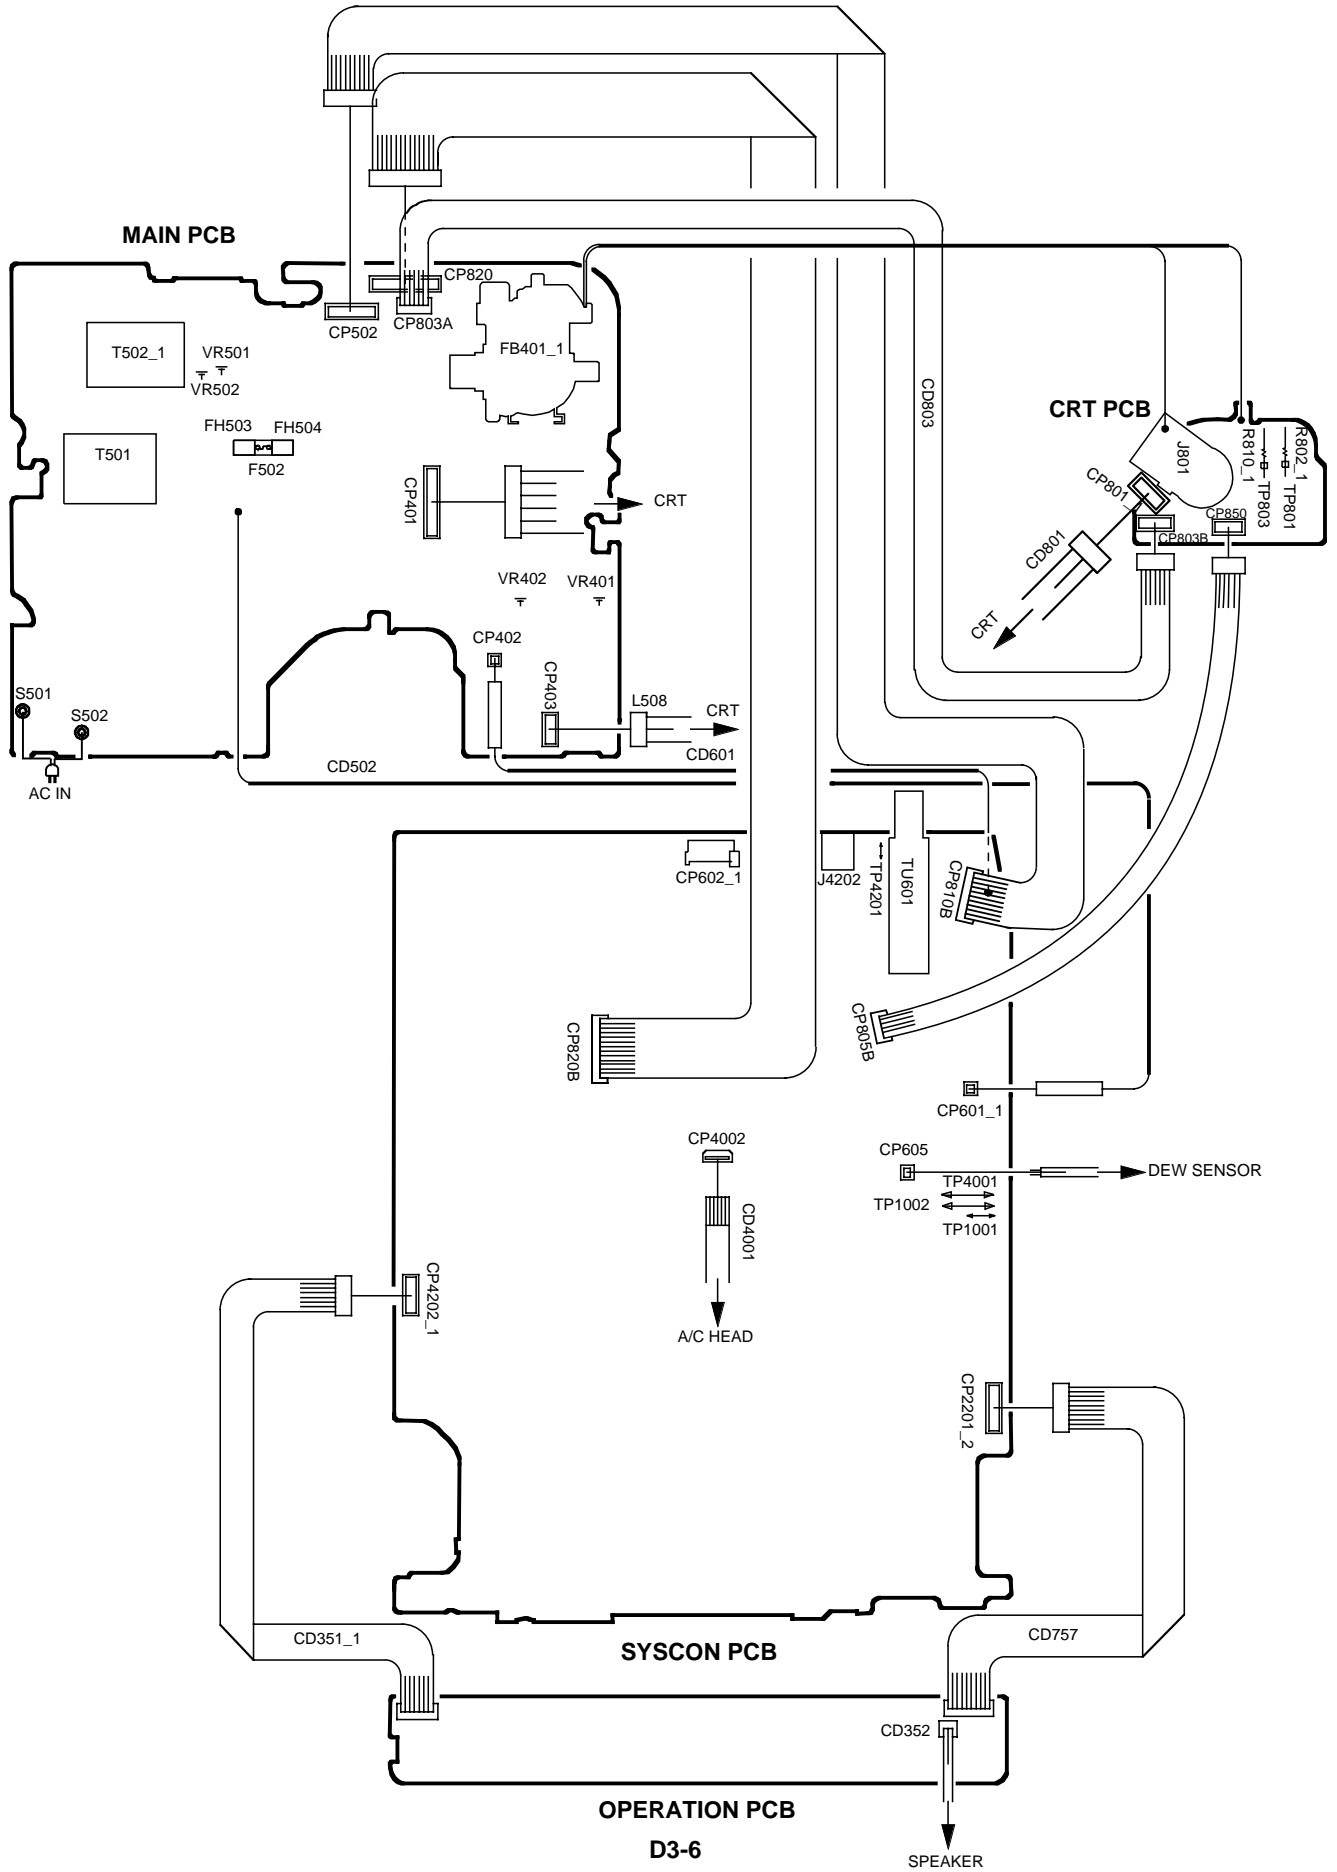


# TV BLOCK DIAGRAM

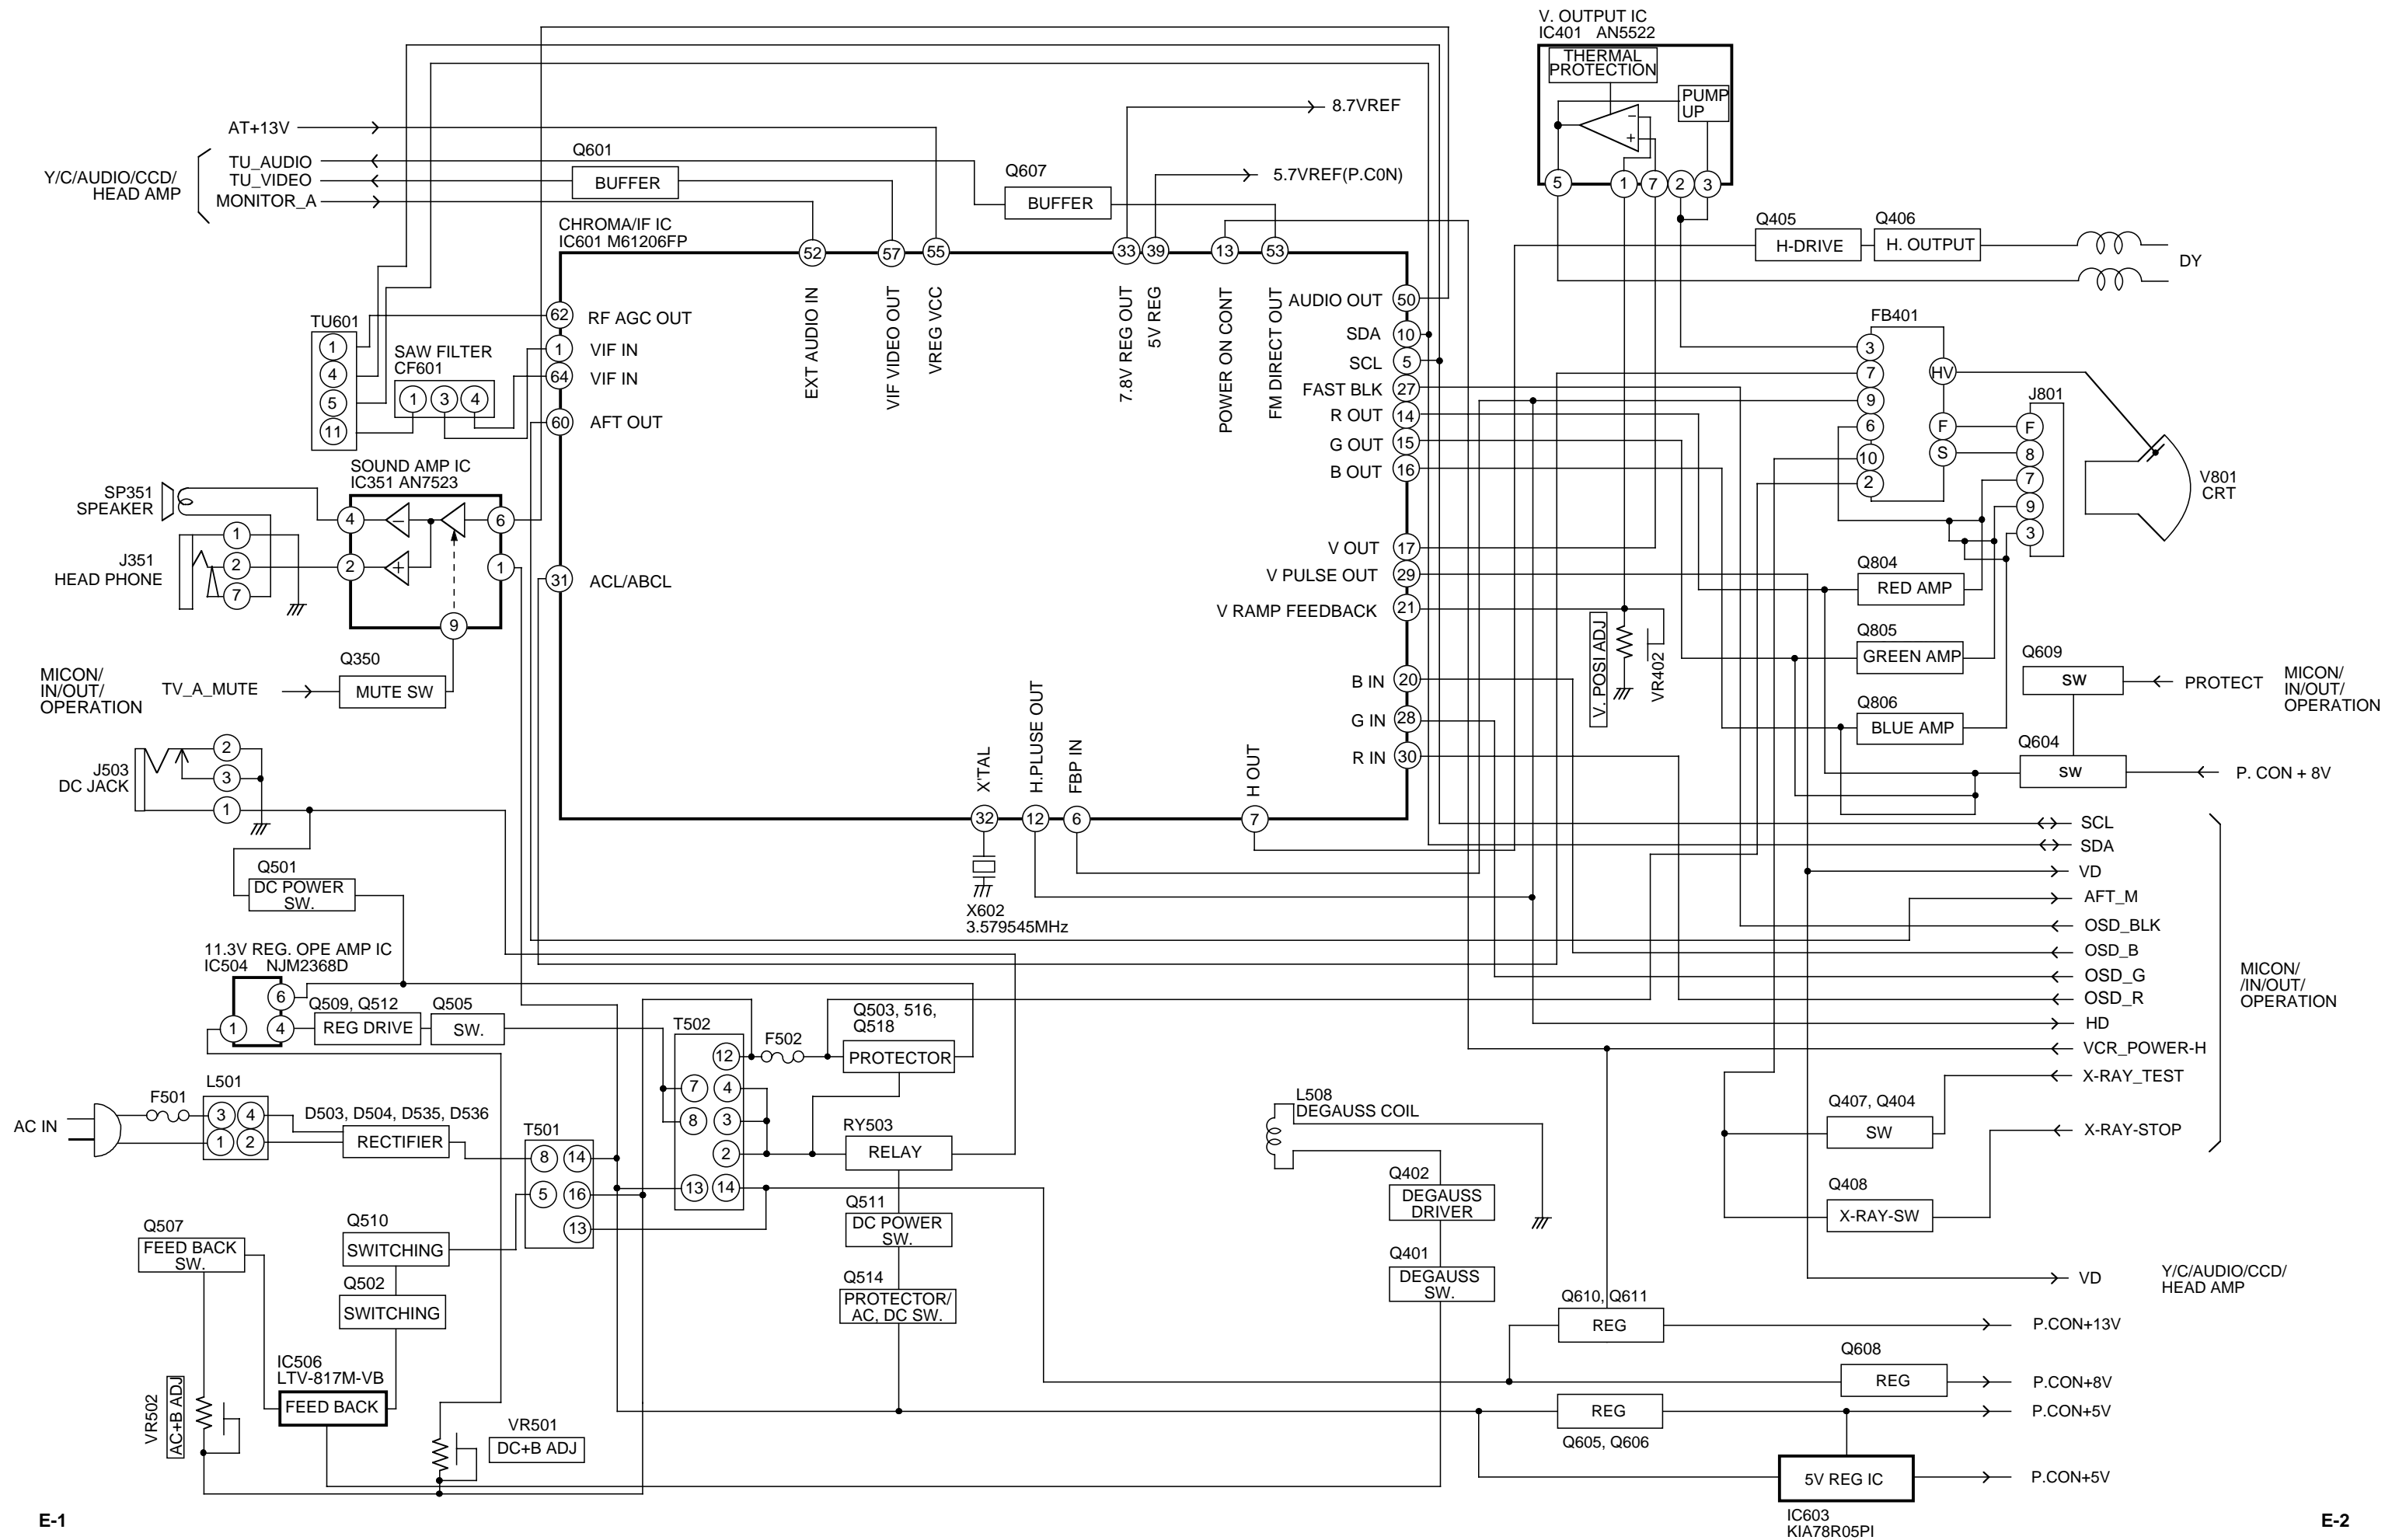

# Y/C/AUDIO/CCD/HEAD AMP BLOCK DIAGRAM

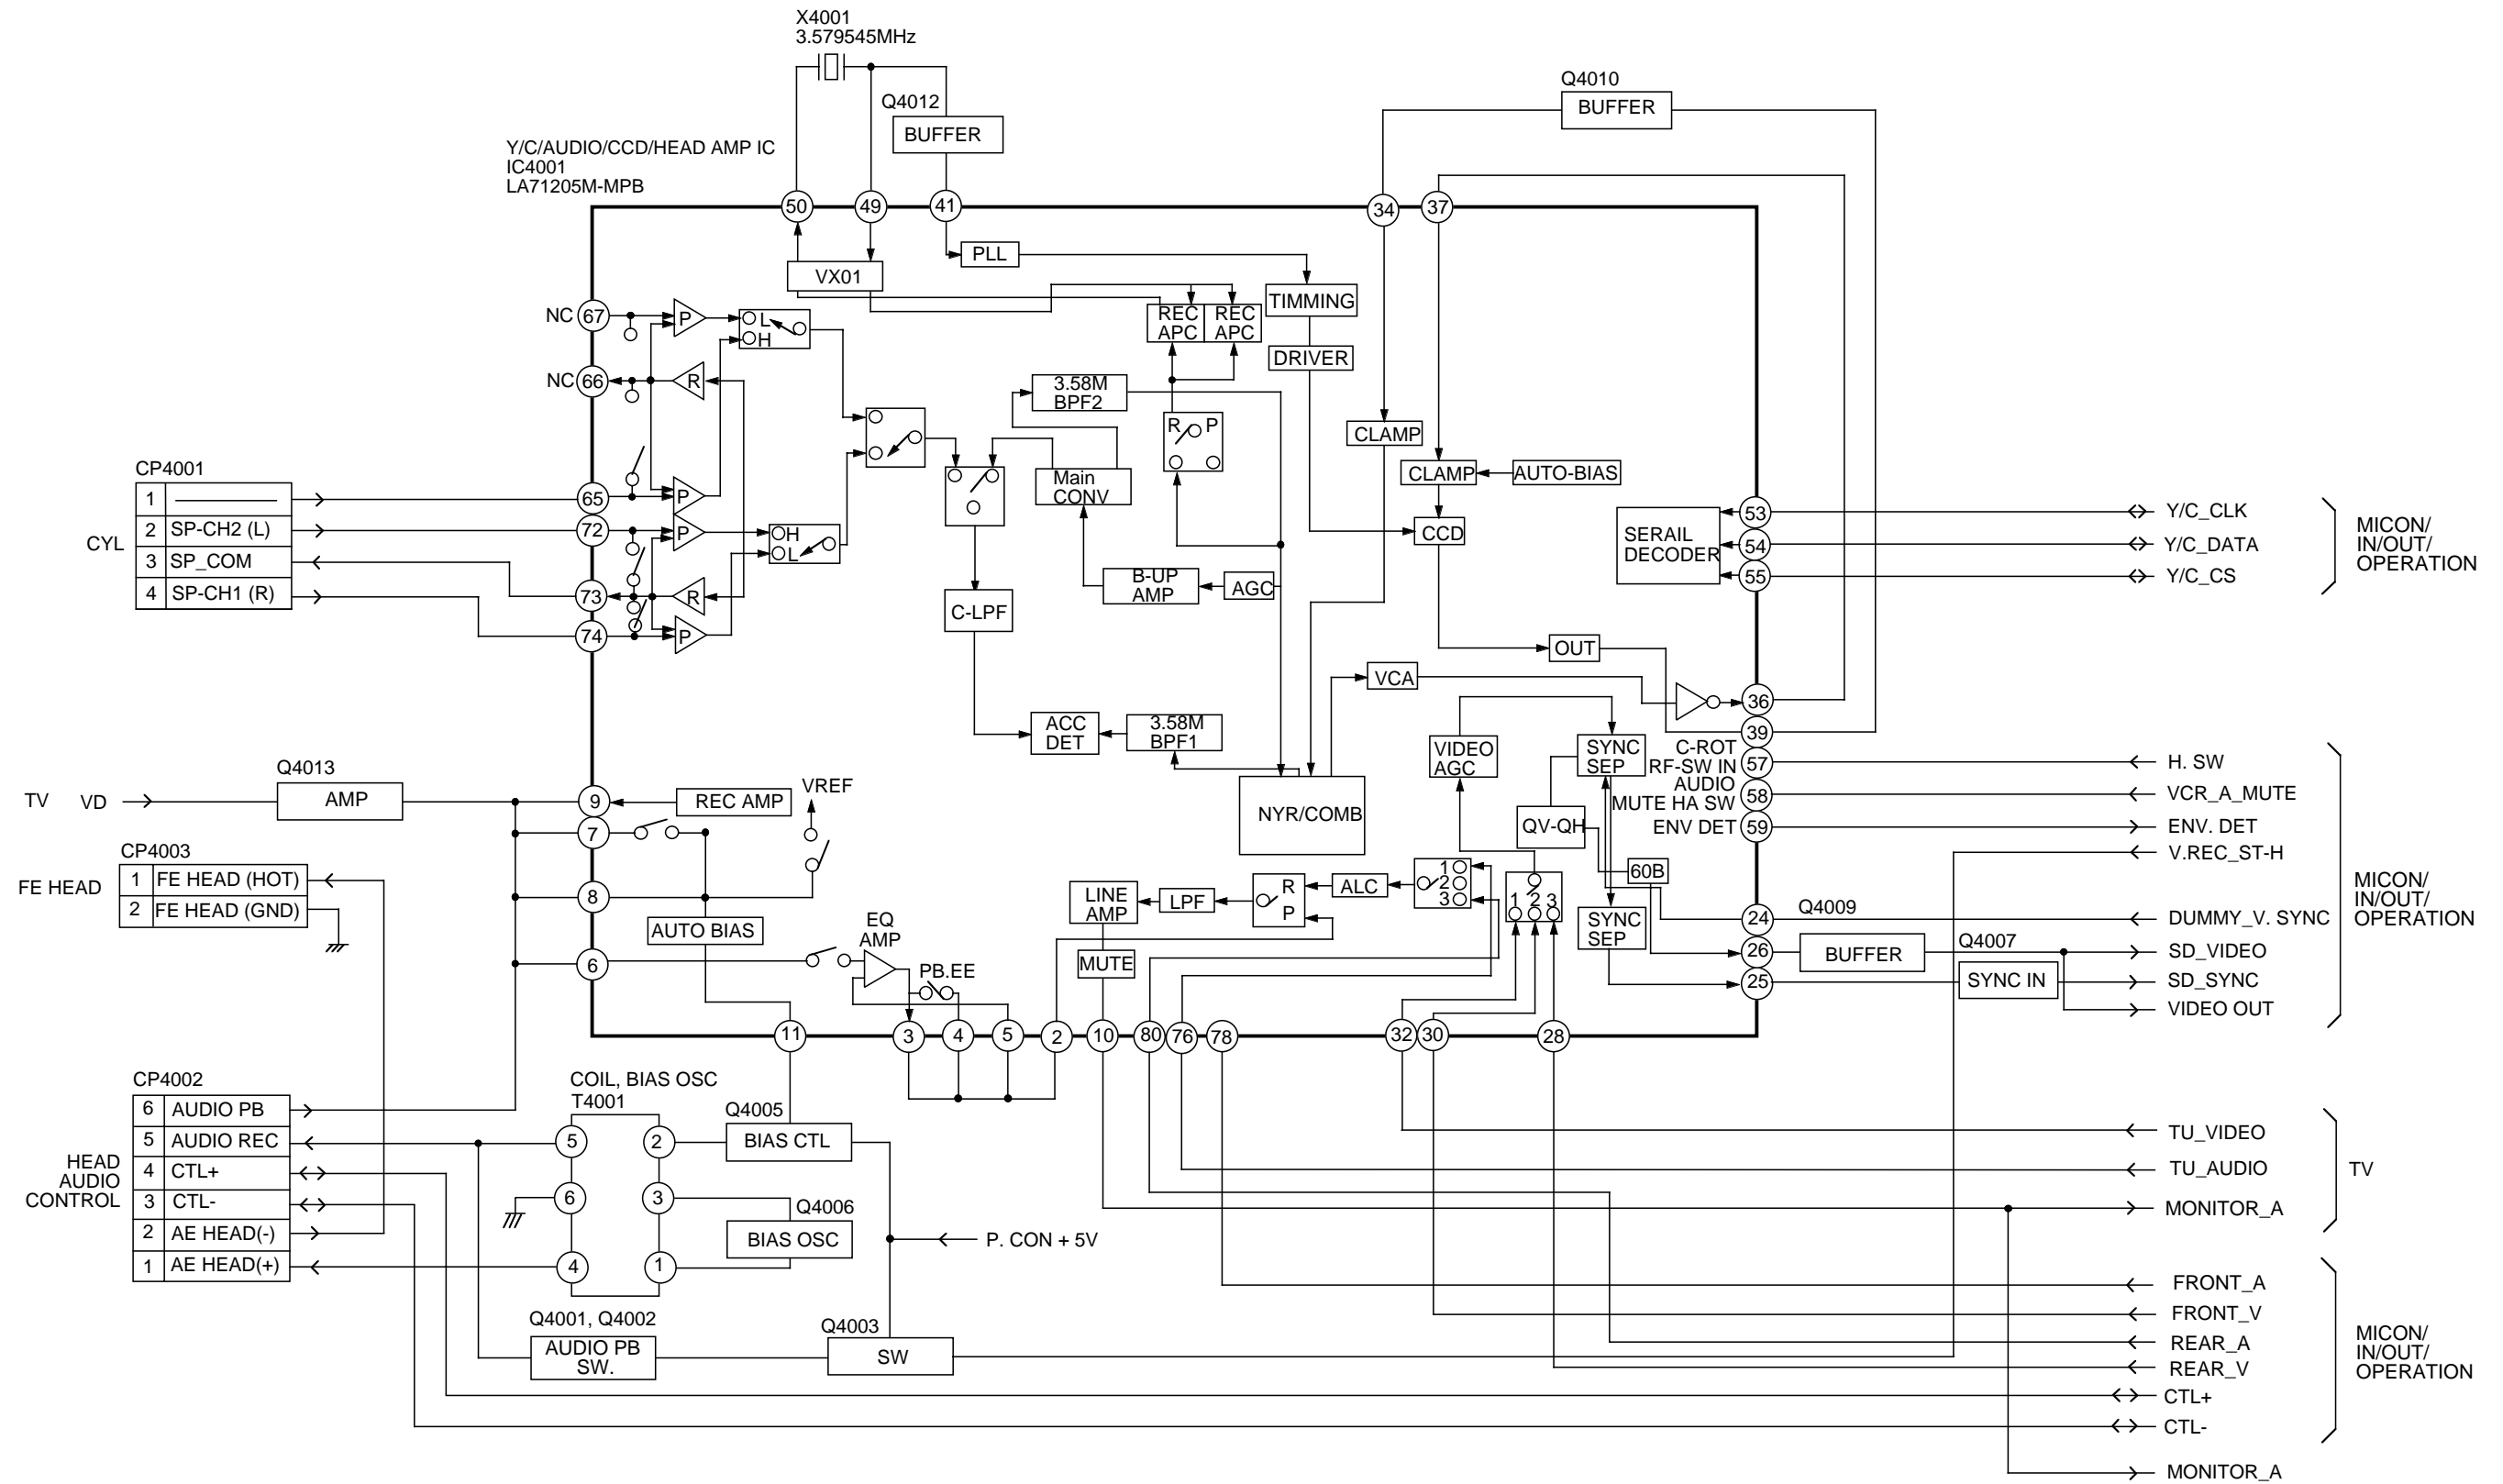


# MICON/IN/OUT/OPERATION BLOCK DIAGRAM

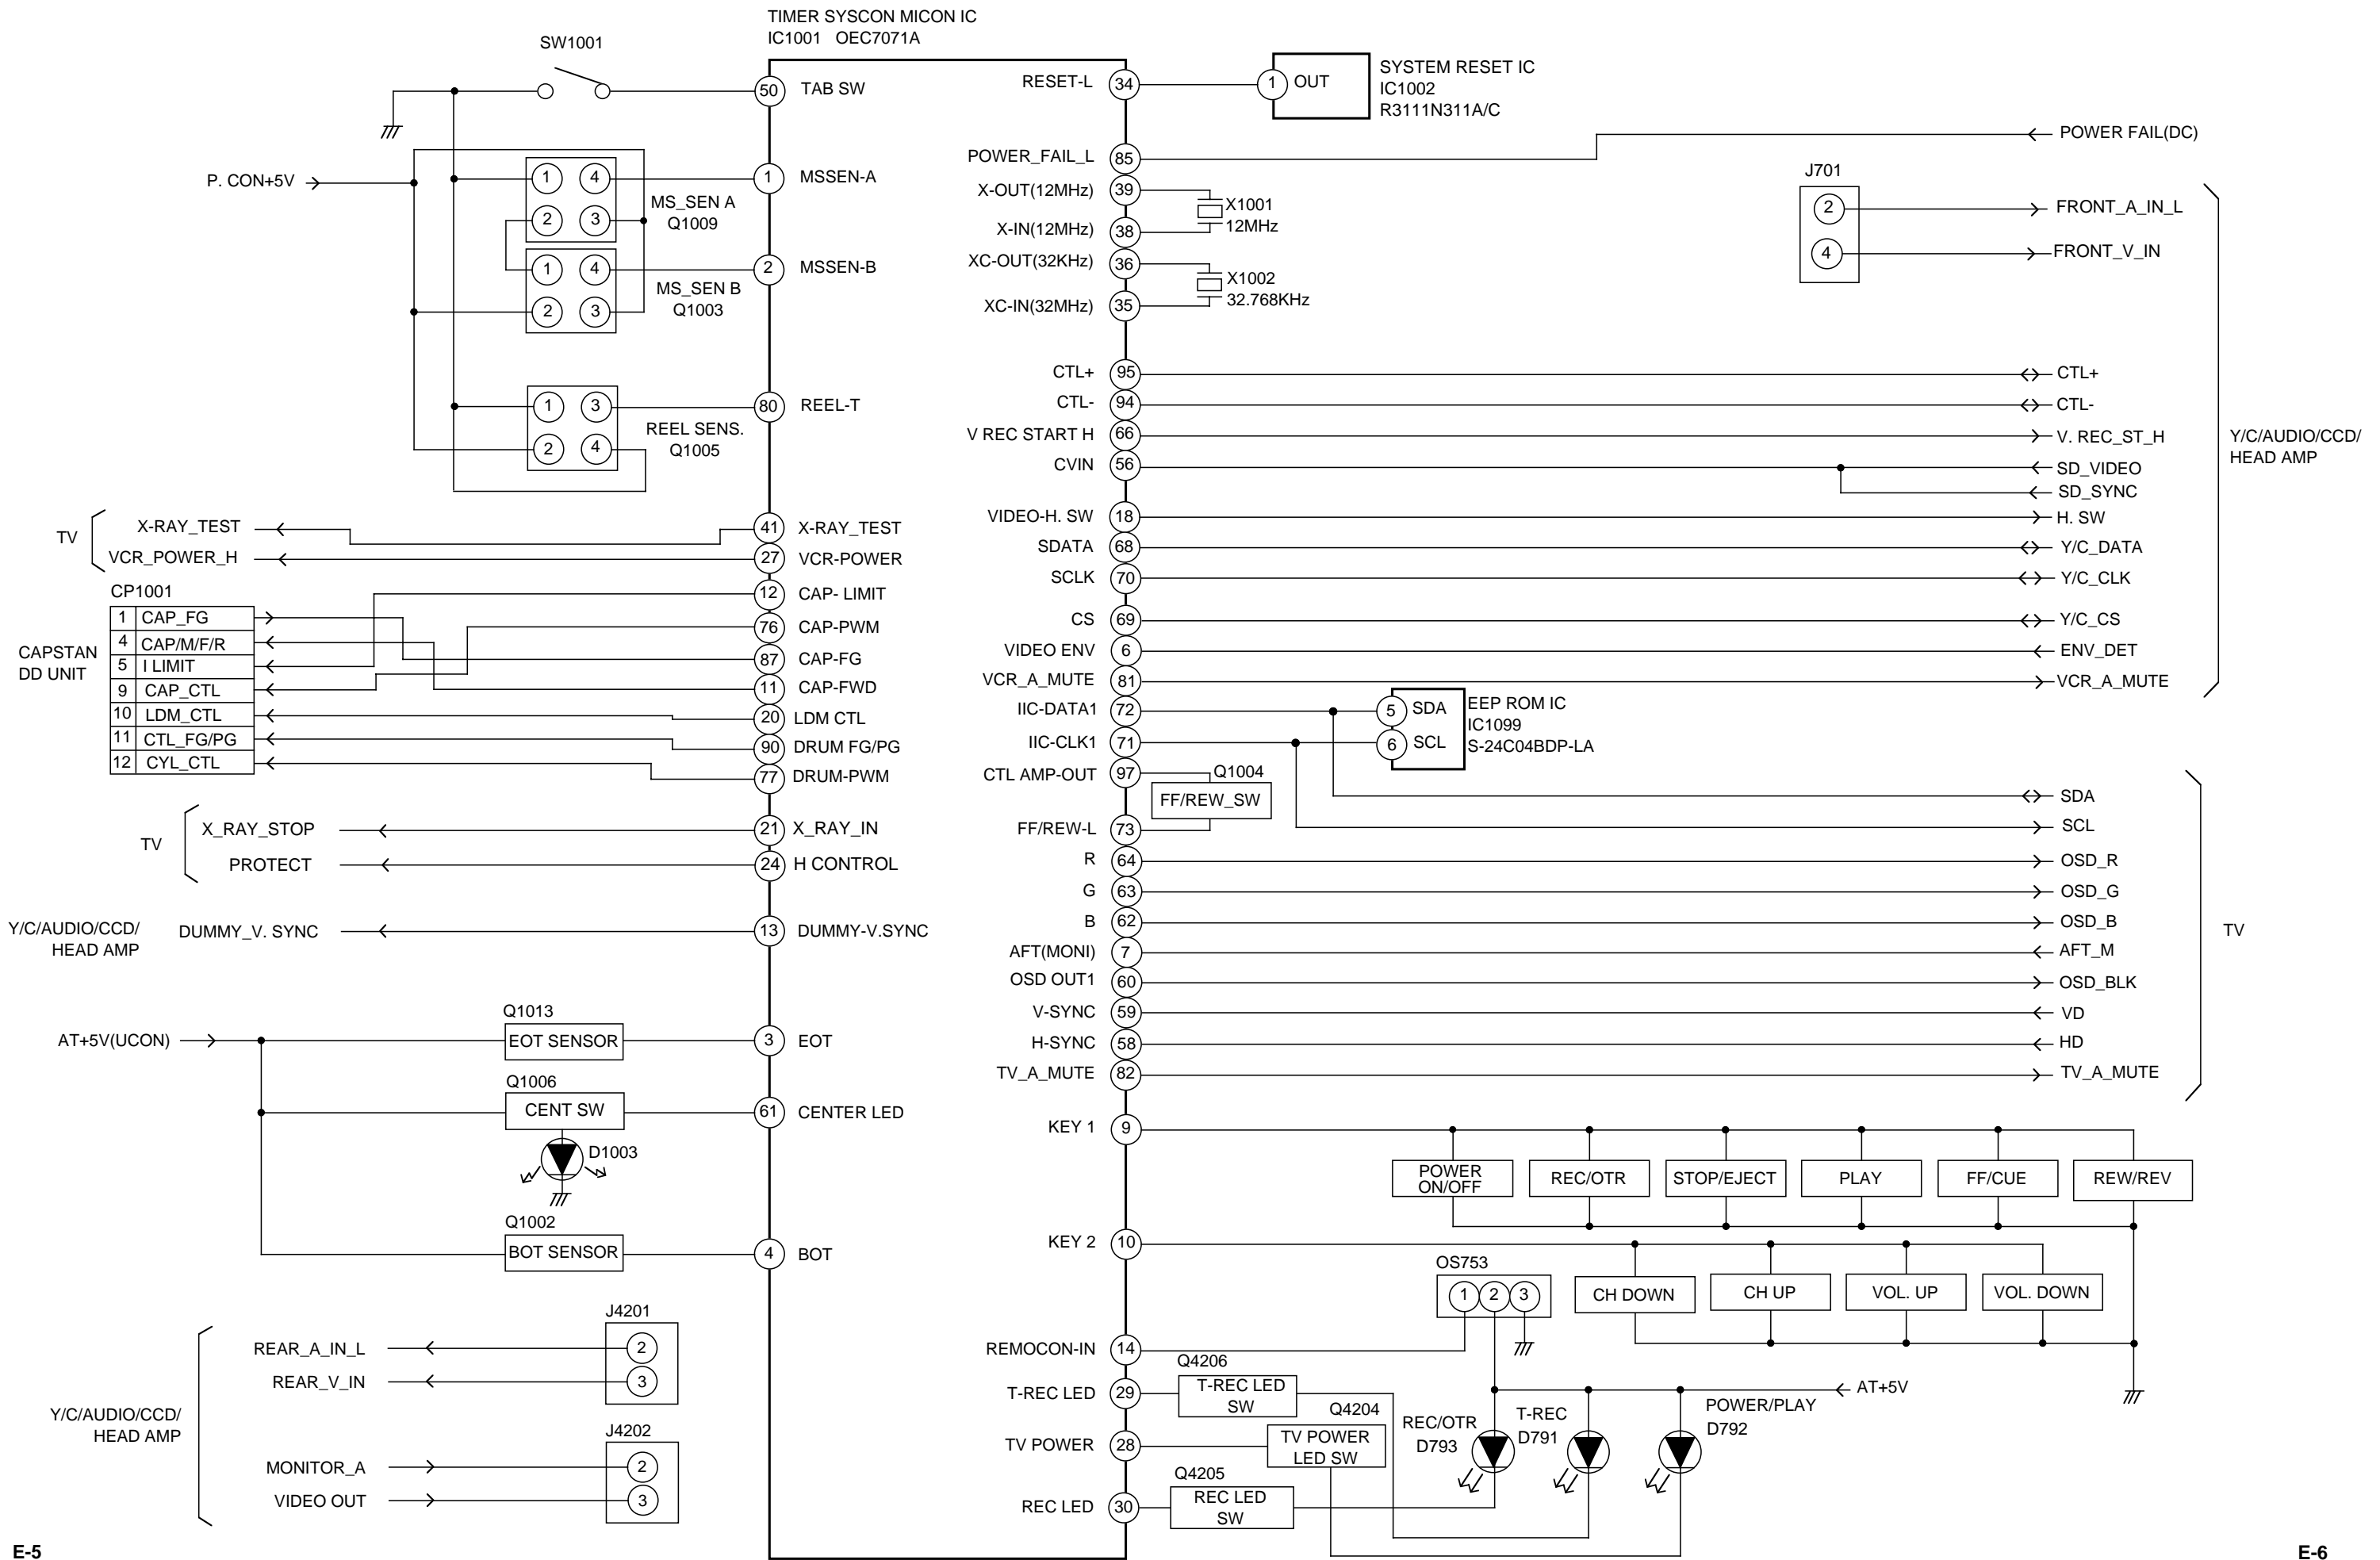





PRINTED CIRCUIT BOARDS  
OPERATION  
SOLDER SIDE

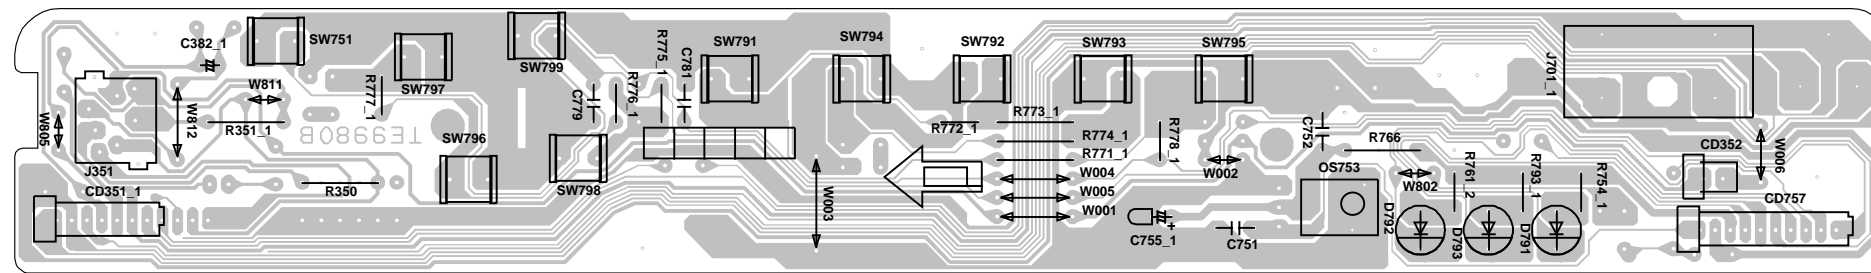


PRINTED CIRCUIT BOARDS  
MAIN/CRT  
SOLDER SIDE

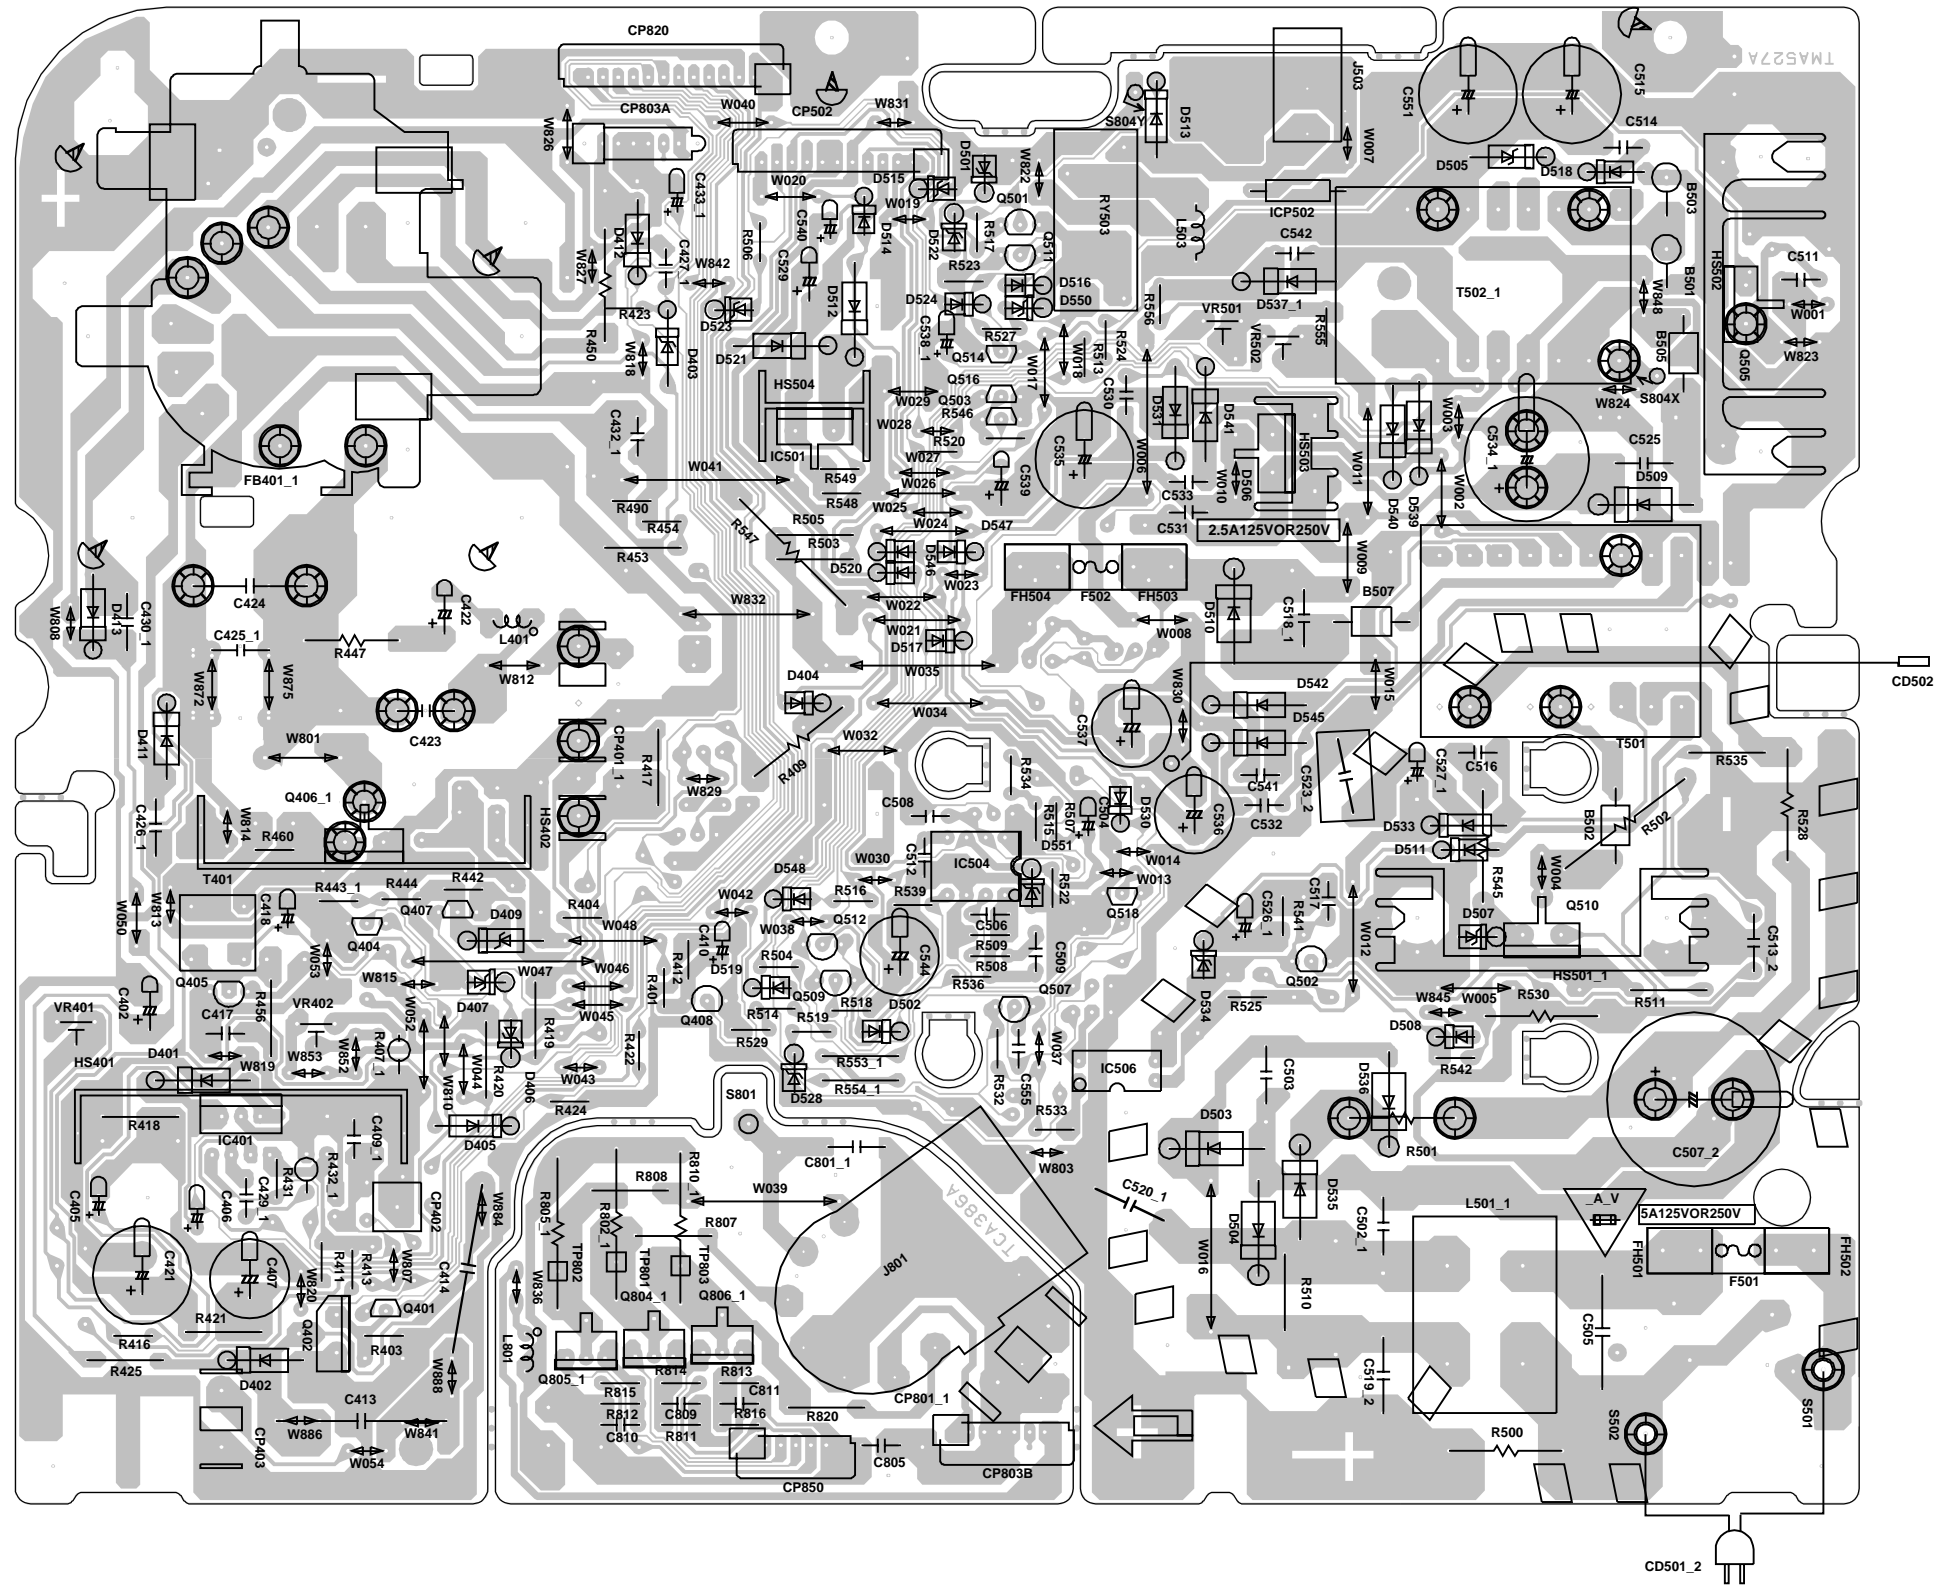


PRINTED CIRCUIT BOARDS  
 SYSCON (INSERTED PARTS)  
 SOLDER SIDE

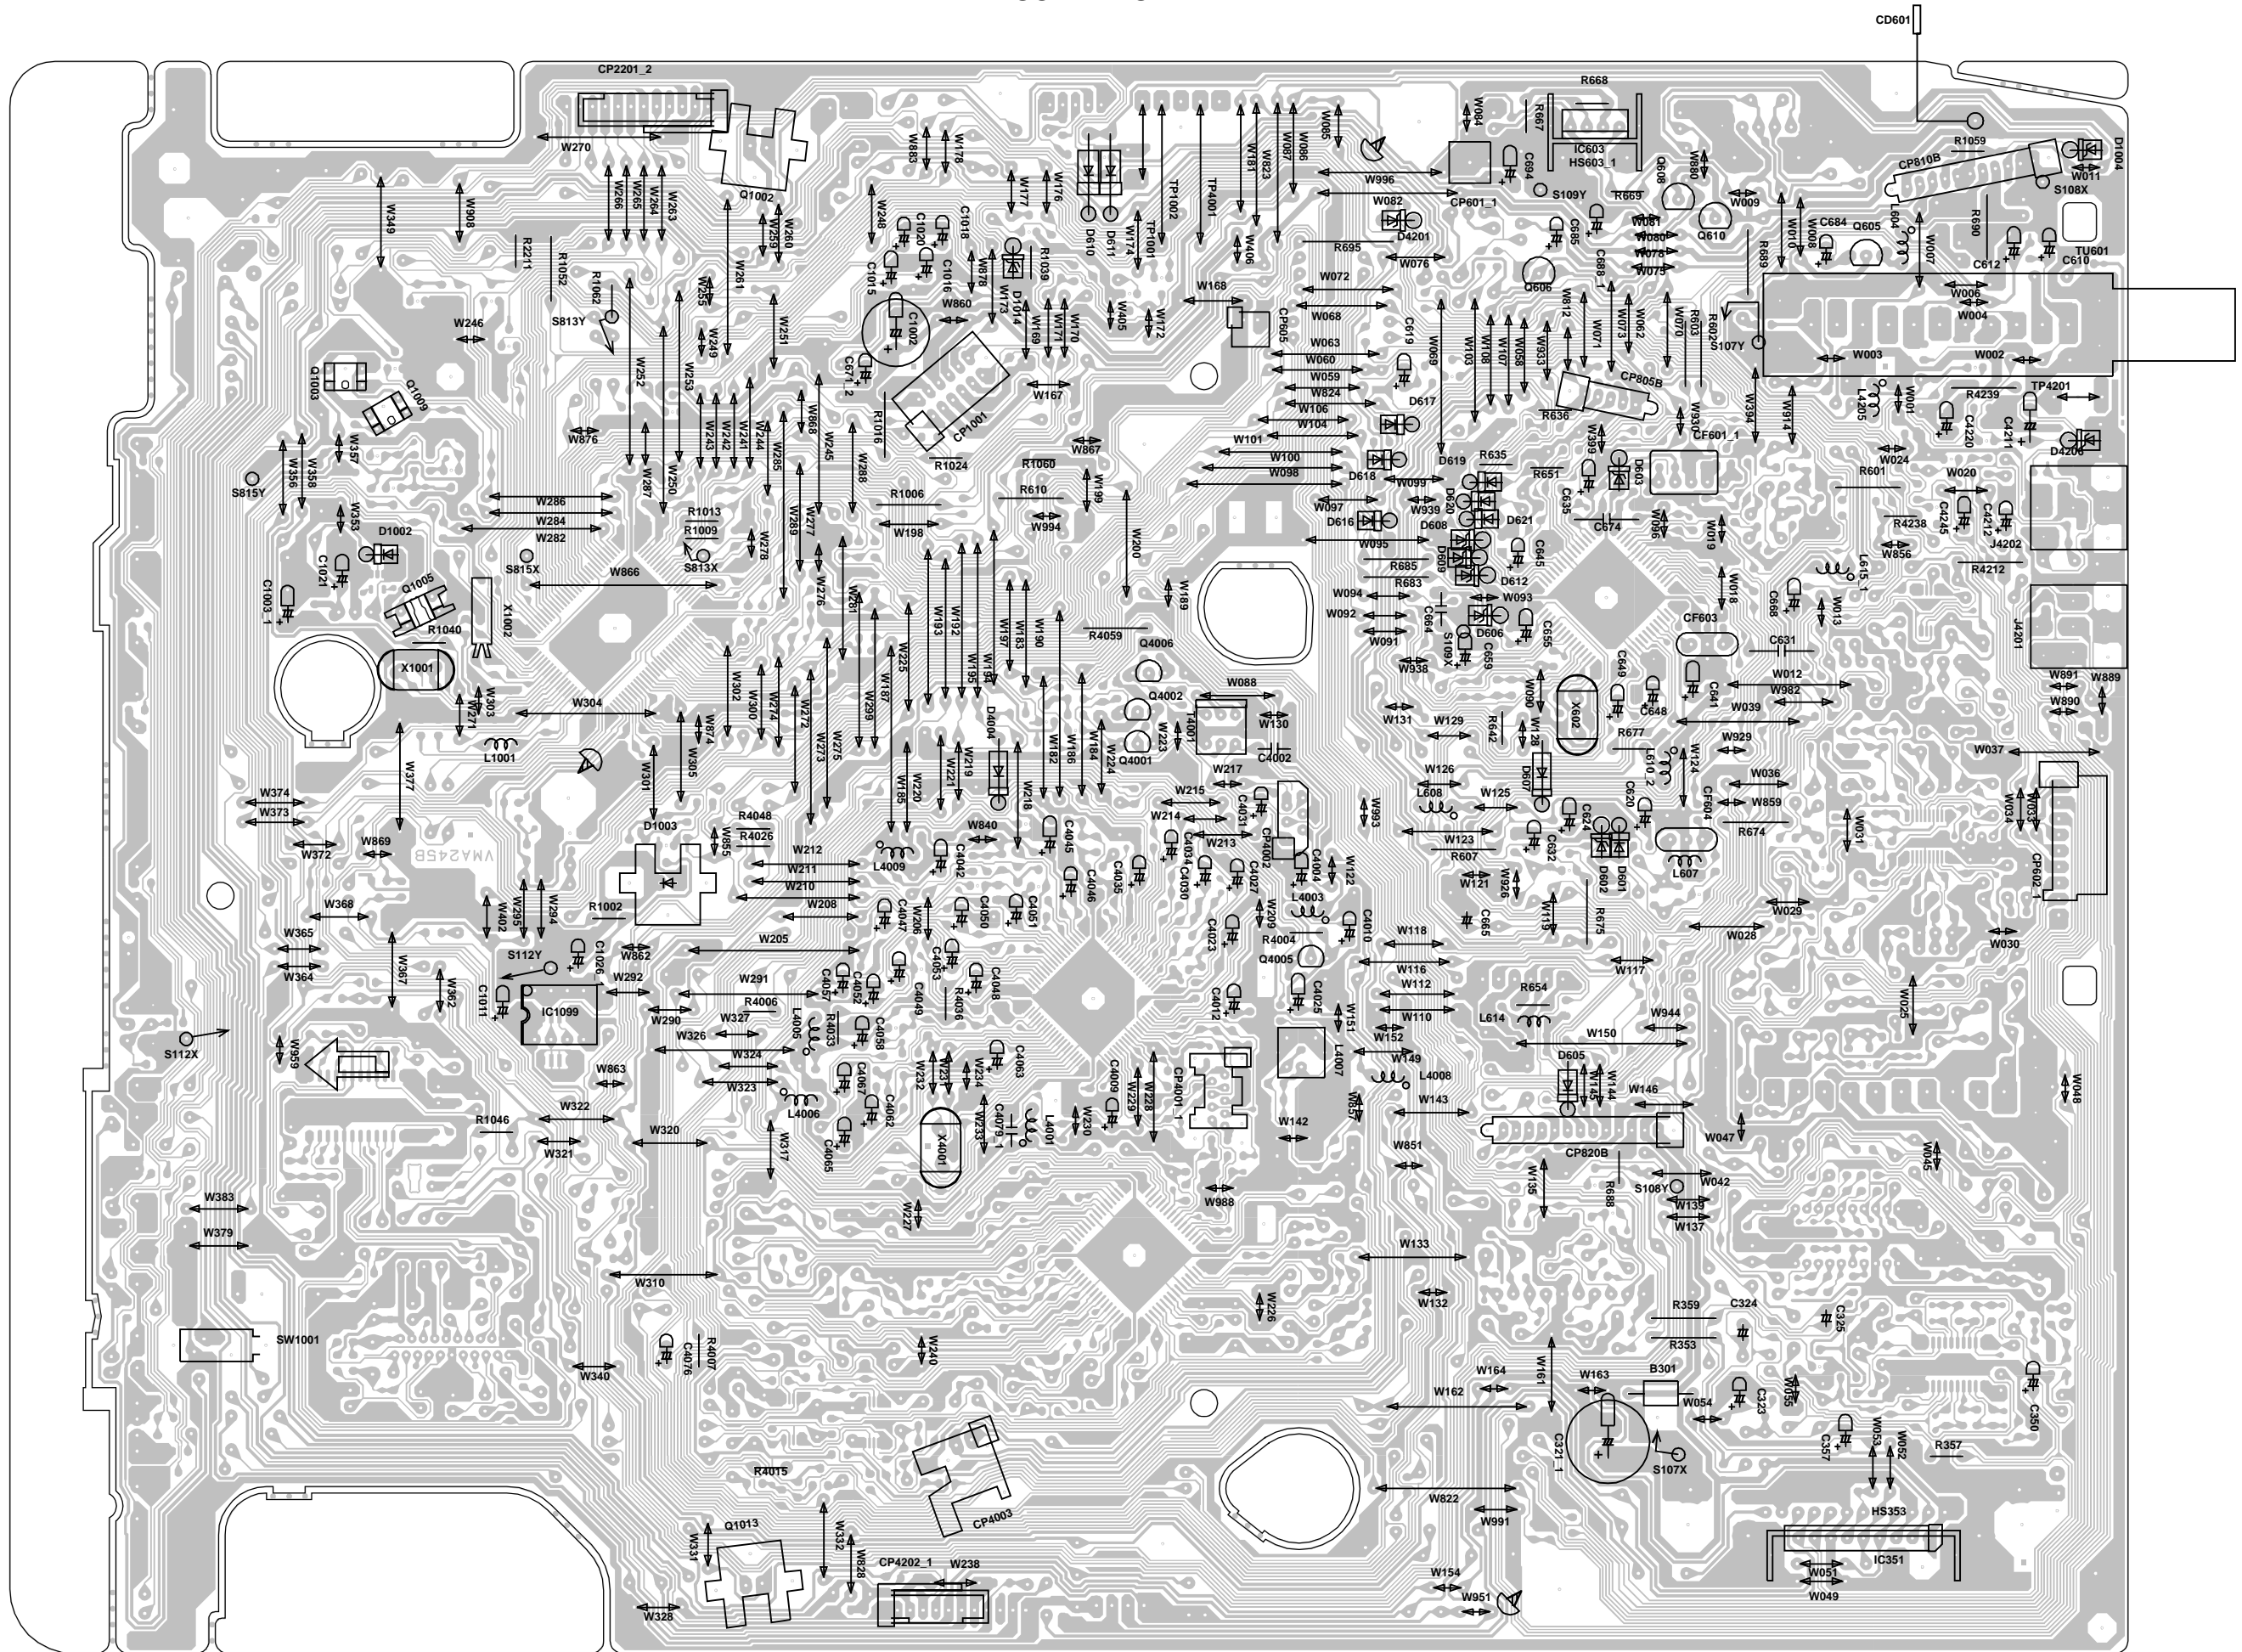


PRINTED CIRCUIT BOARDS  
SYSCON (CHIP MOUNTED PARTS)  
SOLDER SIDE

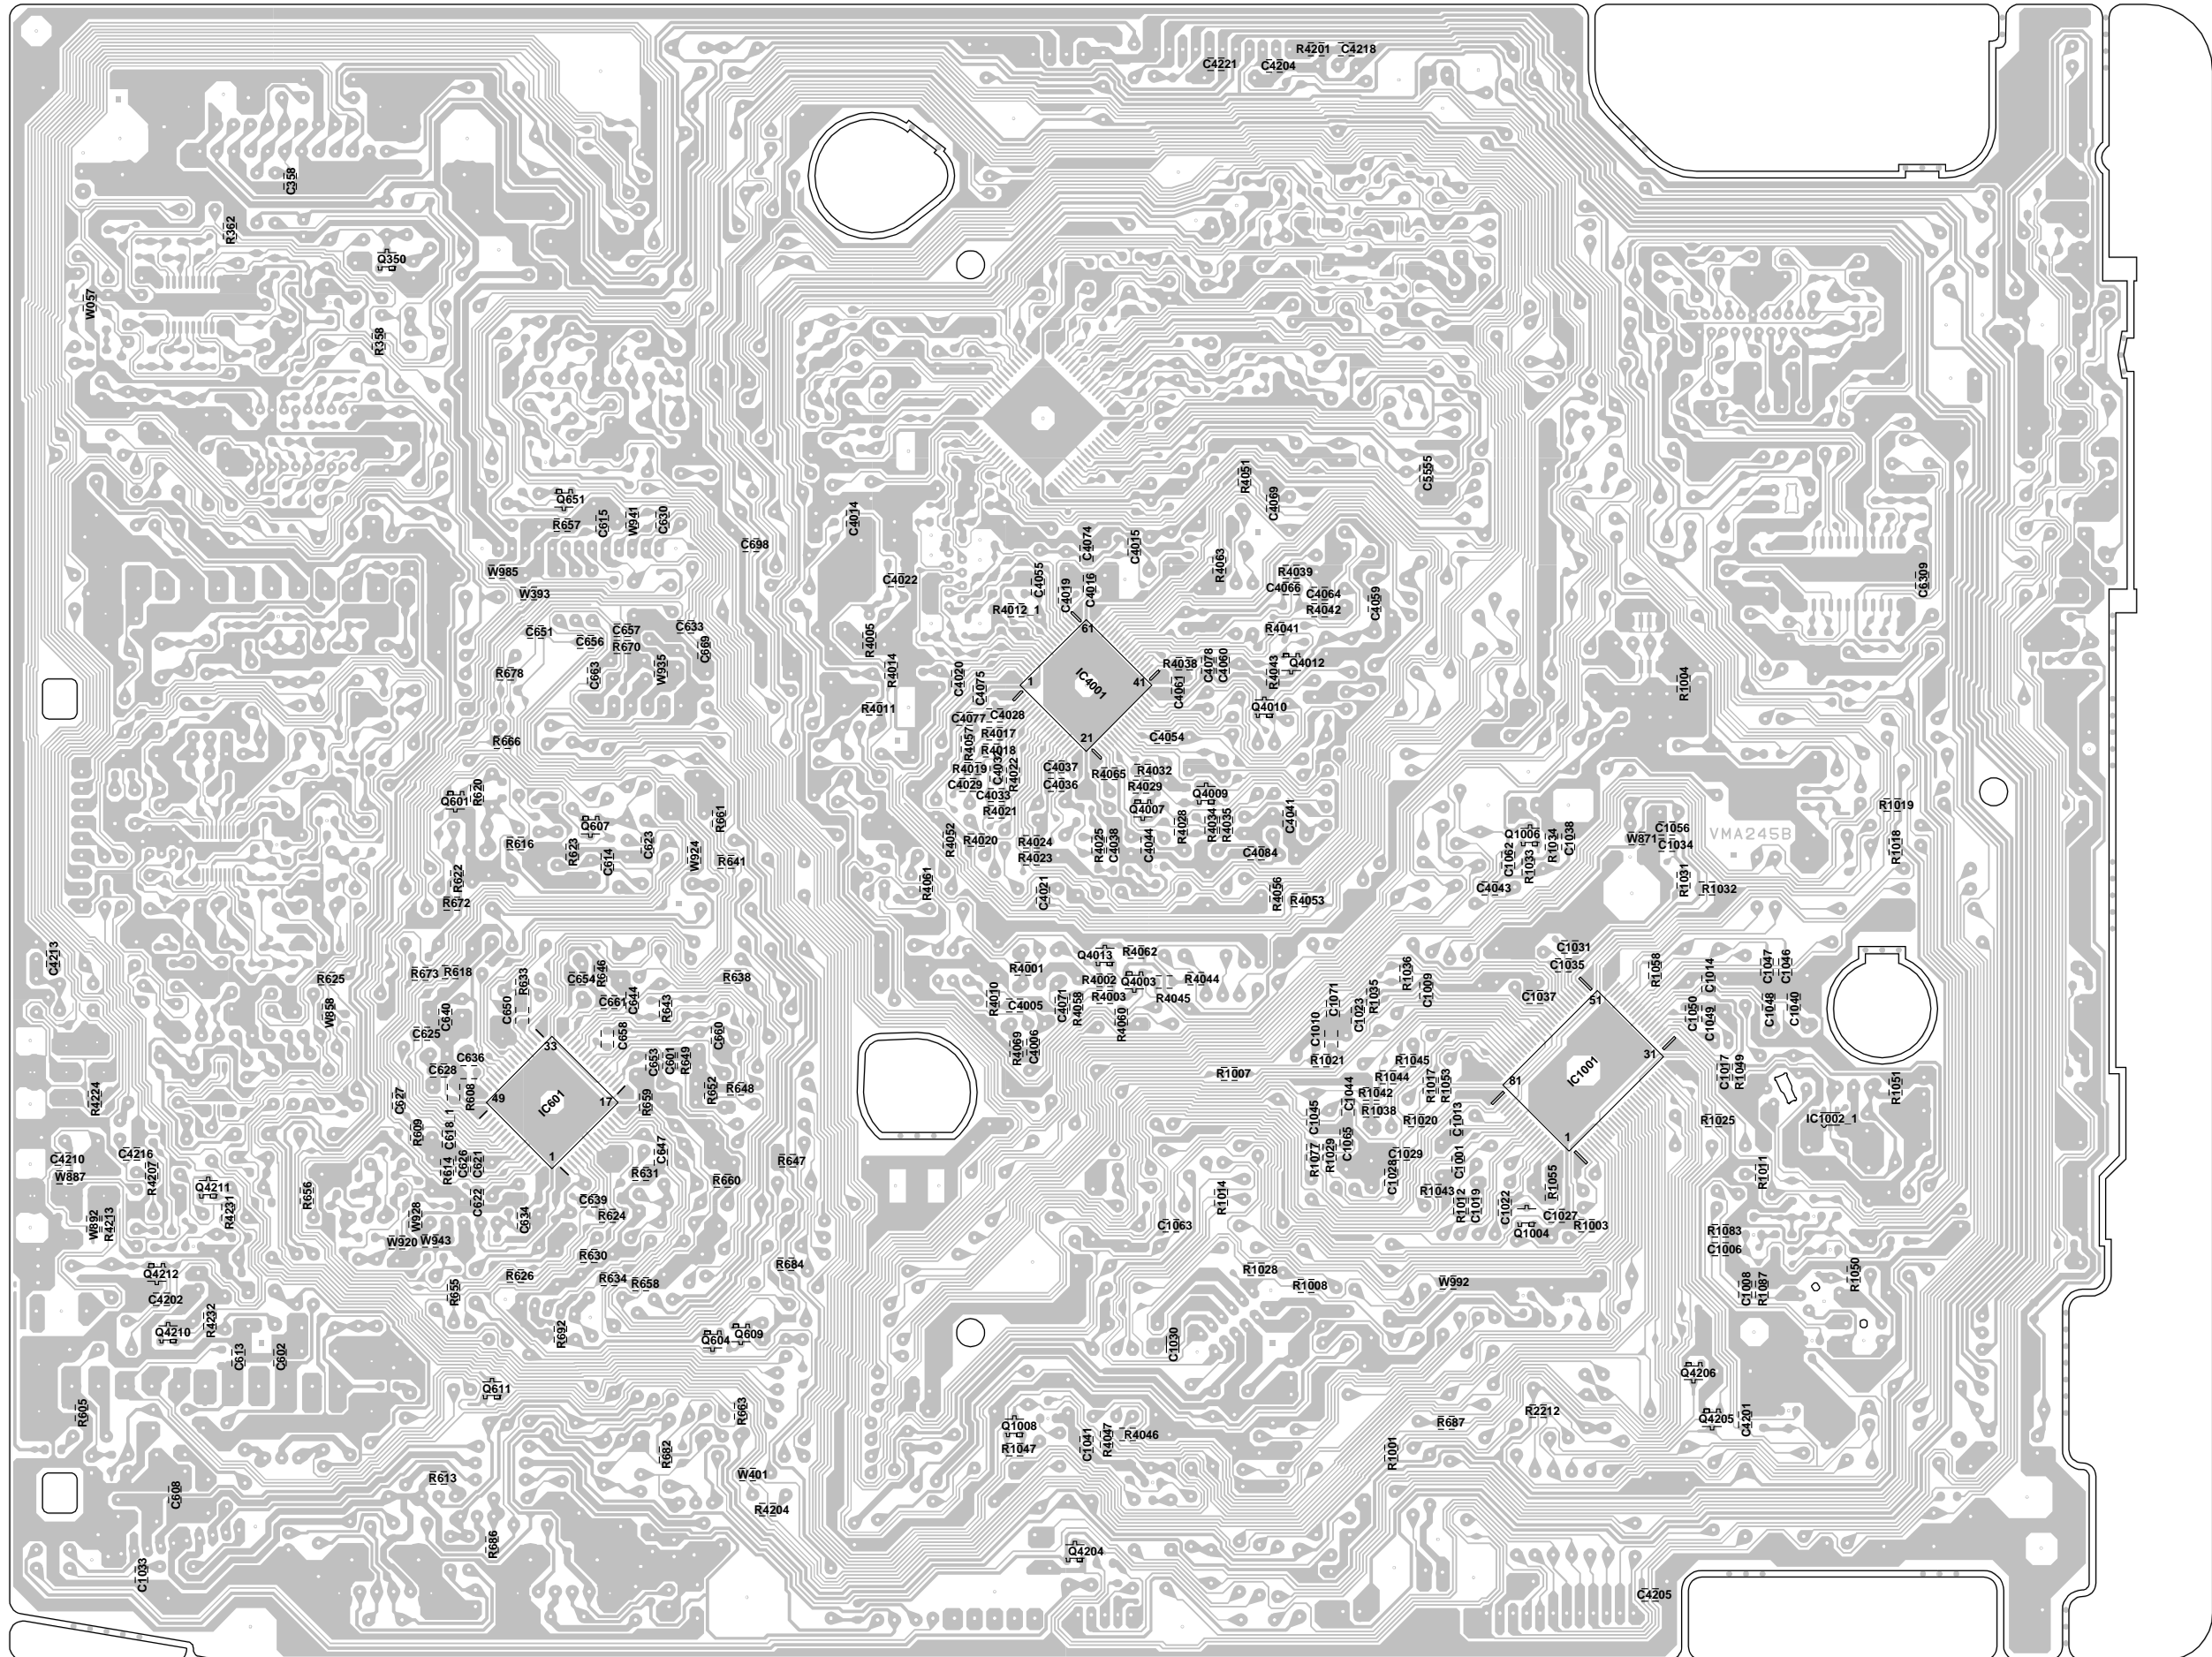

# Y/C/AUDIO/CCD/HEAD AMP SCHEMATIC DIAGRAM (SYSCON PCB)

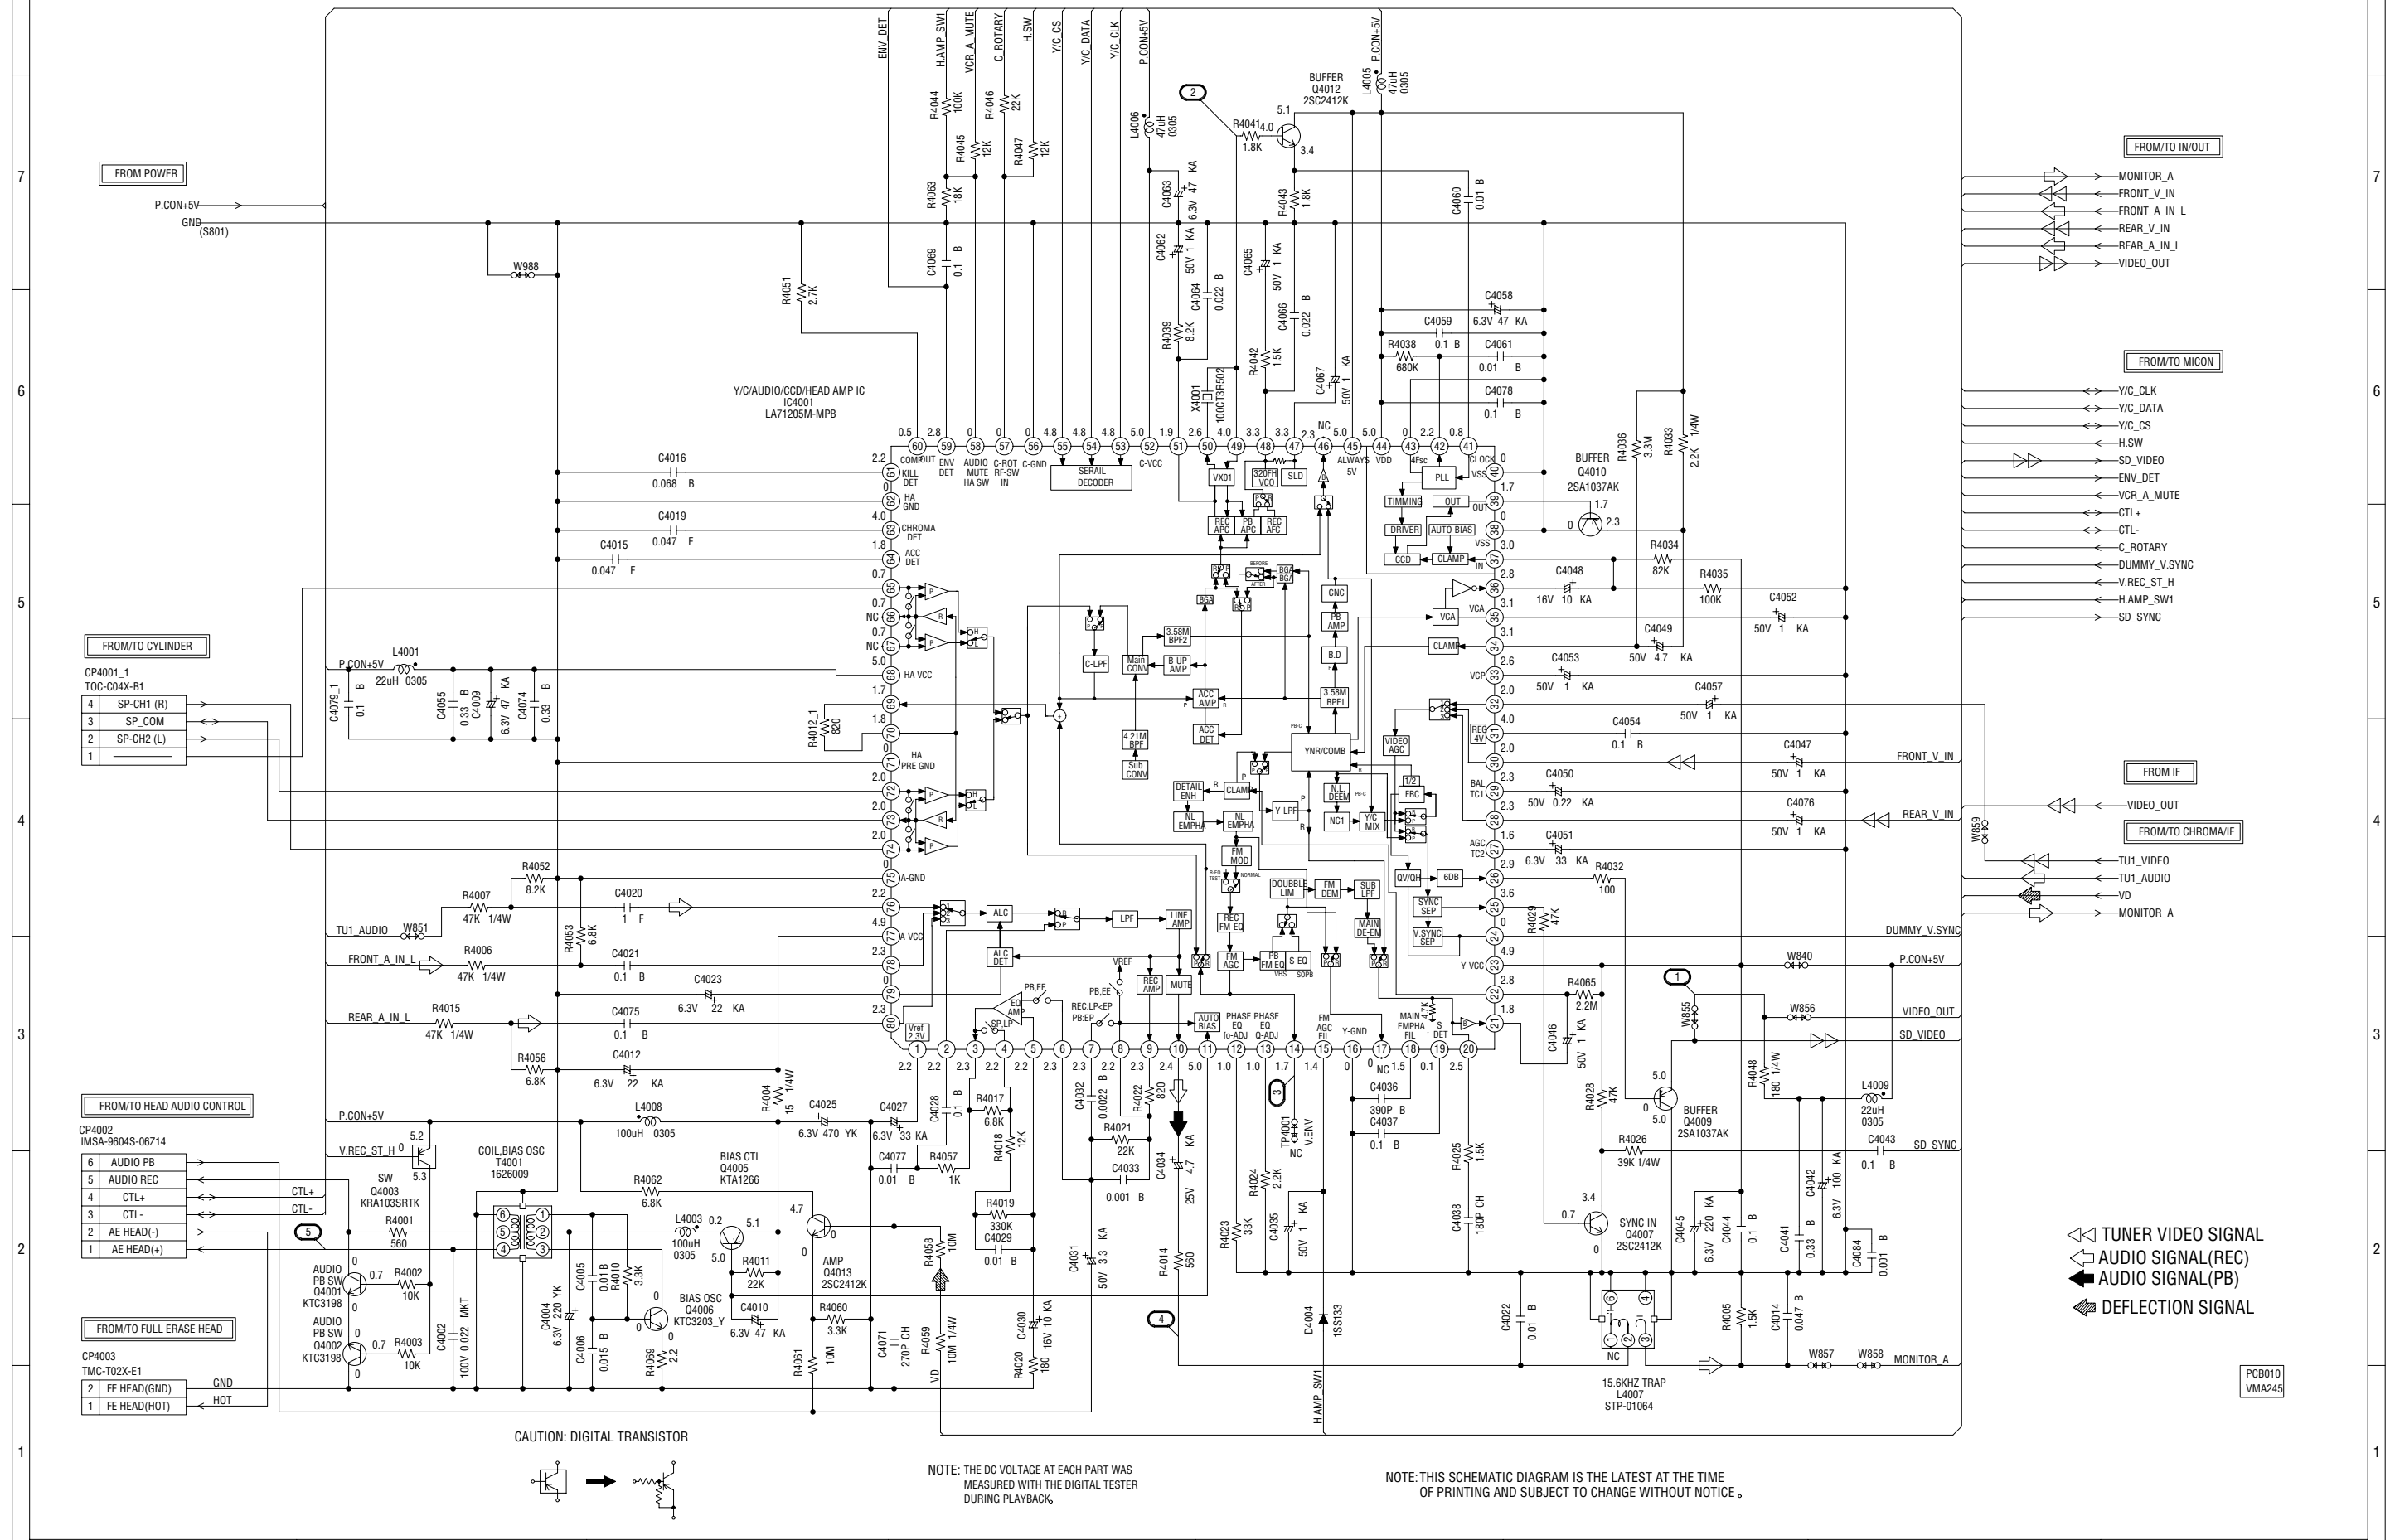

CAUTION: DIGITAL TRANSISTOR




NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

- ◁ TUNER VIDEO SIGNAL
- ▷ AUDIO SIGNAL(REC)
- ◀ AUDIO SIGNAL(PB)
- ▶ DEFLECTION SIGNAL


PCB010  
VMA245

# MICON SCHEMATIC DIAGRAM (SYSCON PCB)

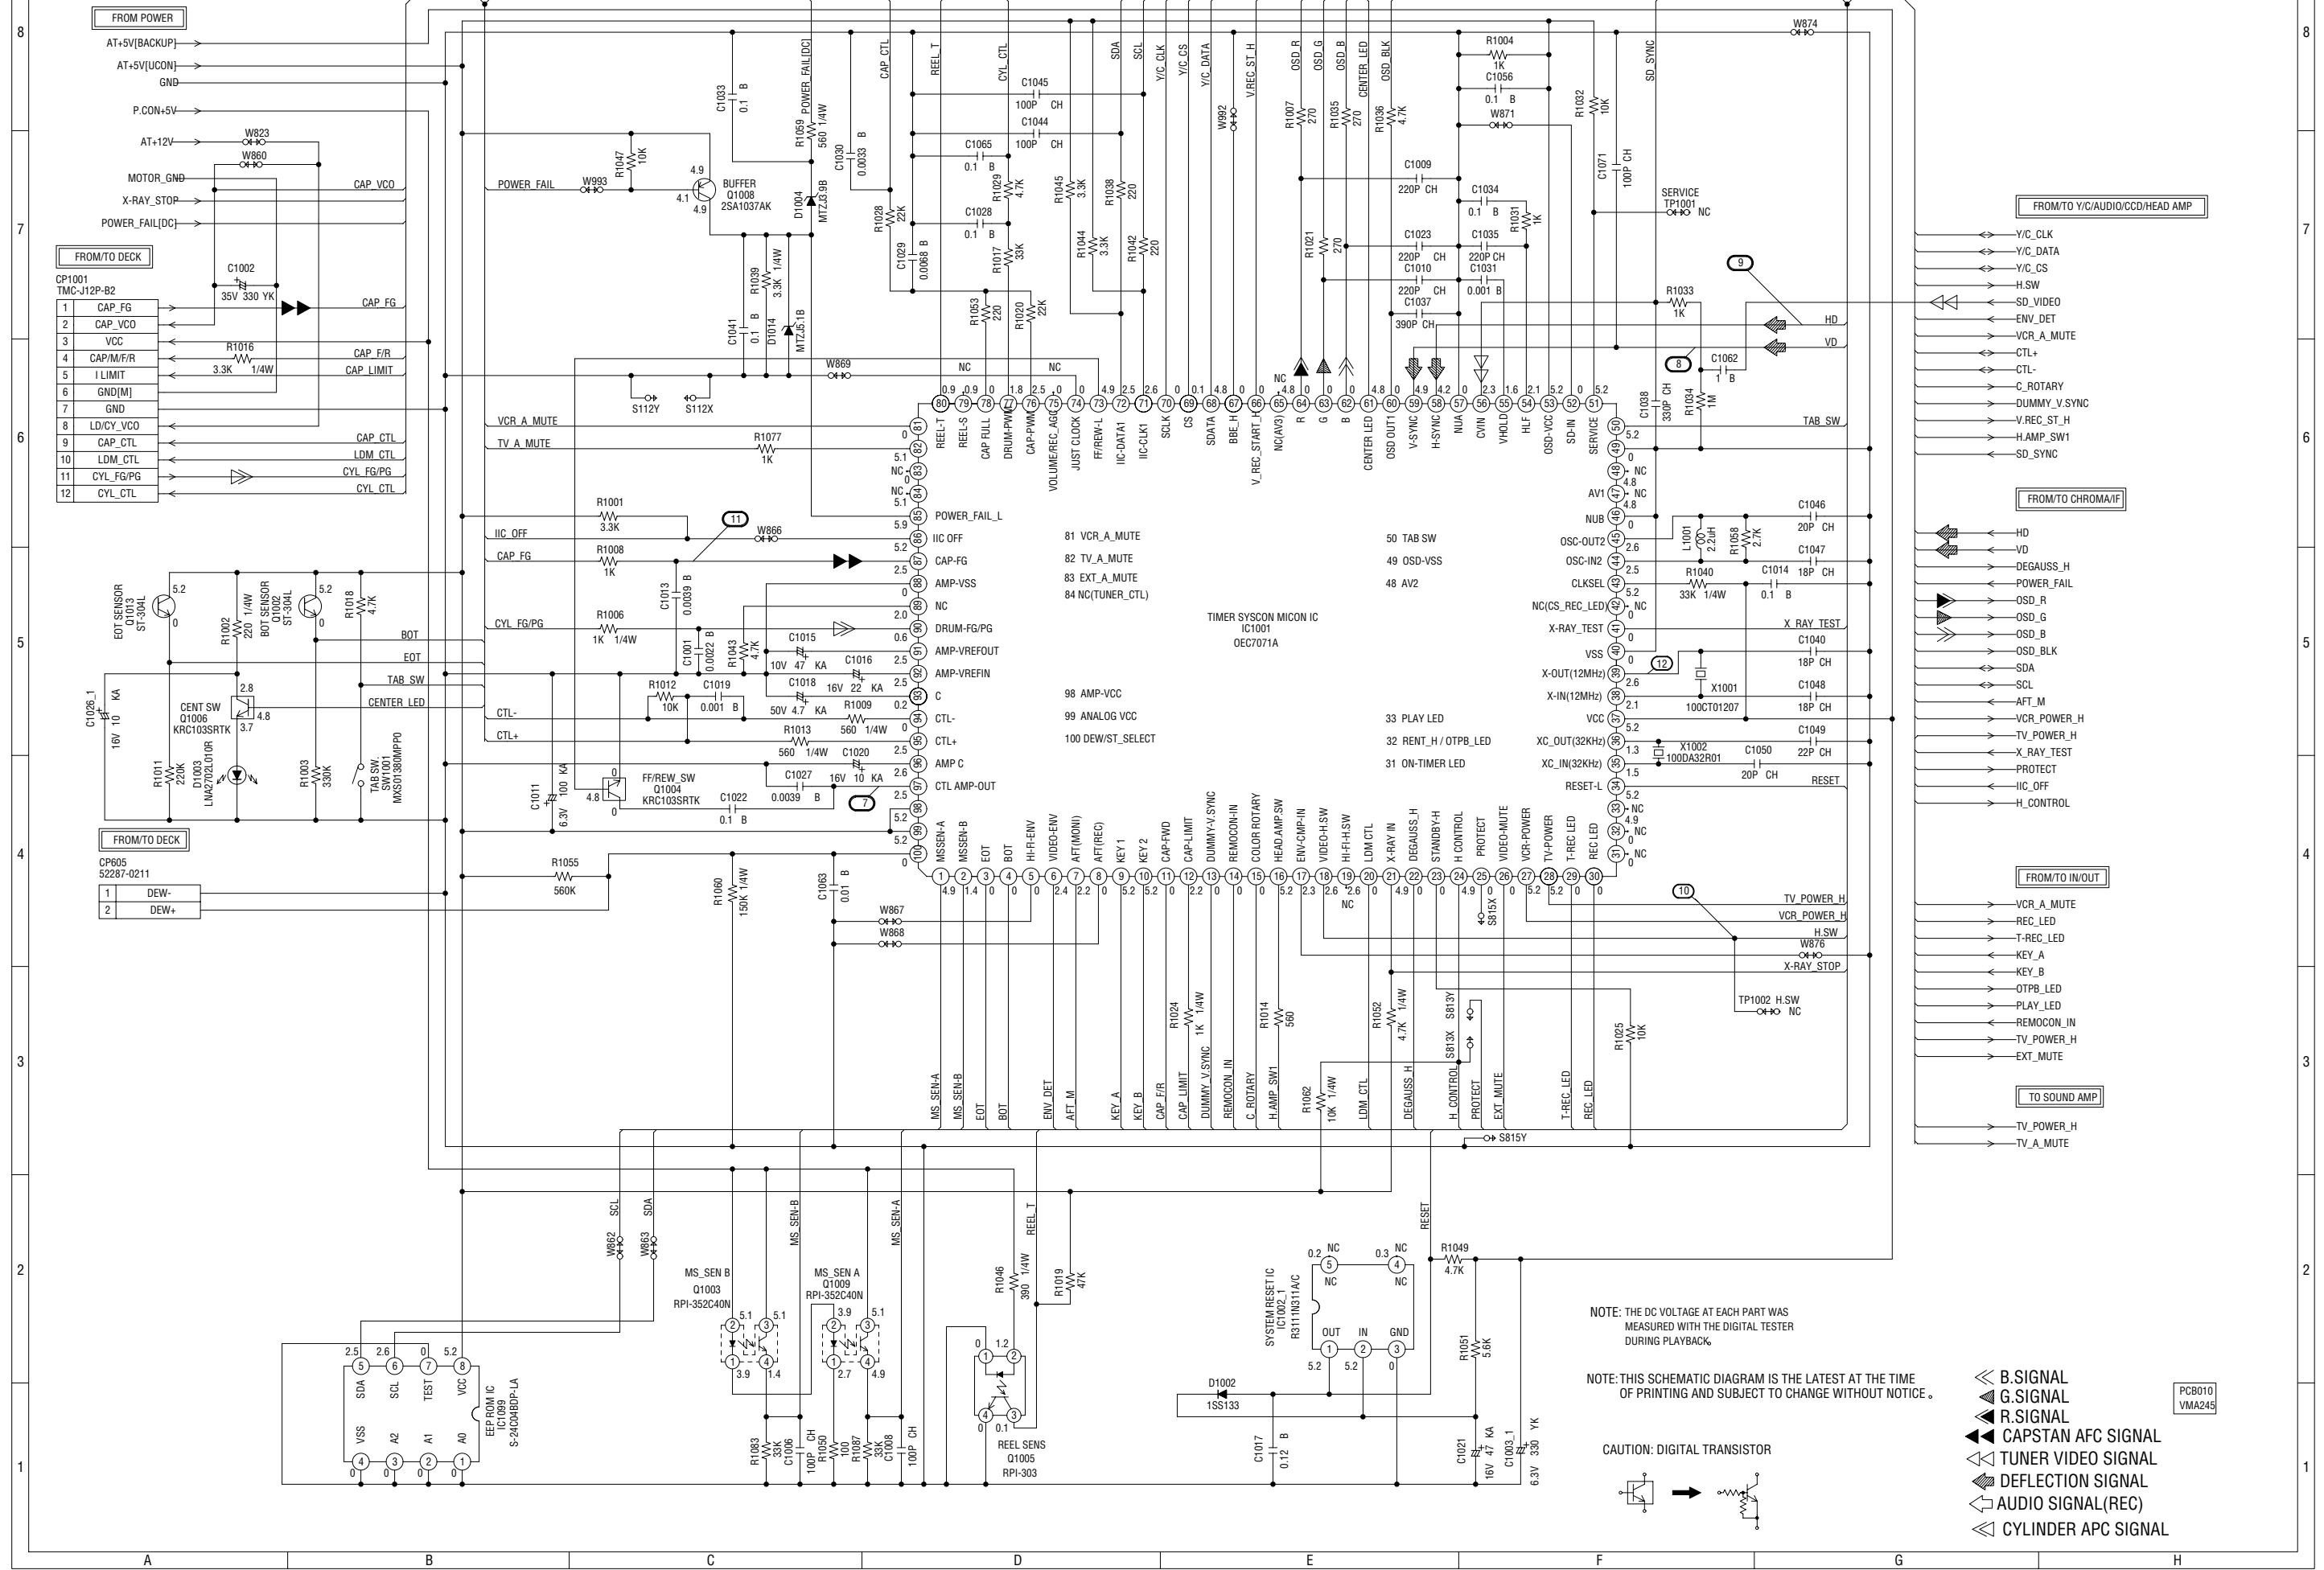

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


CAUTION: DIGITAL TRANSISTOR




- ◁ B.SIGNAL
- ▲ G.SIGNAL
- ◁ R.SIGNAL
- ◁ CAPSTAN AFC SIGNAL
- ◁ TUNER VIDEO SIGNAL
- ◁ DEFLECTION SIGNAL
- ◁ AUDIO SIGNAL(REC)
- ◁ CYLINDER APC SIGNAL

PCB010  
VMA245

# POWER SCHEMATIC DIAGRAM (SYSCON PCB)

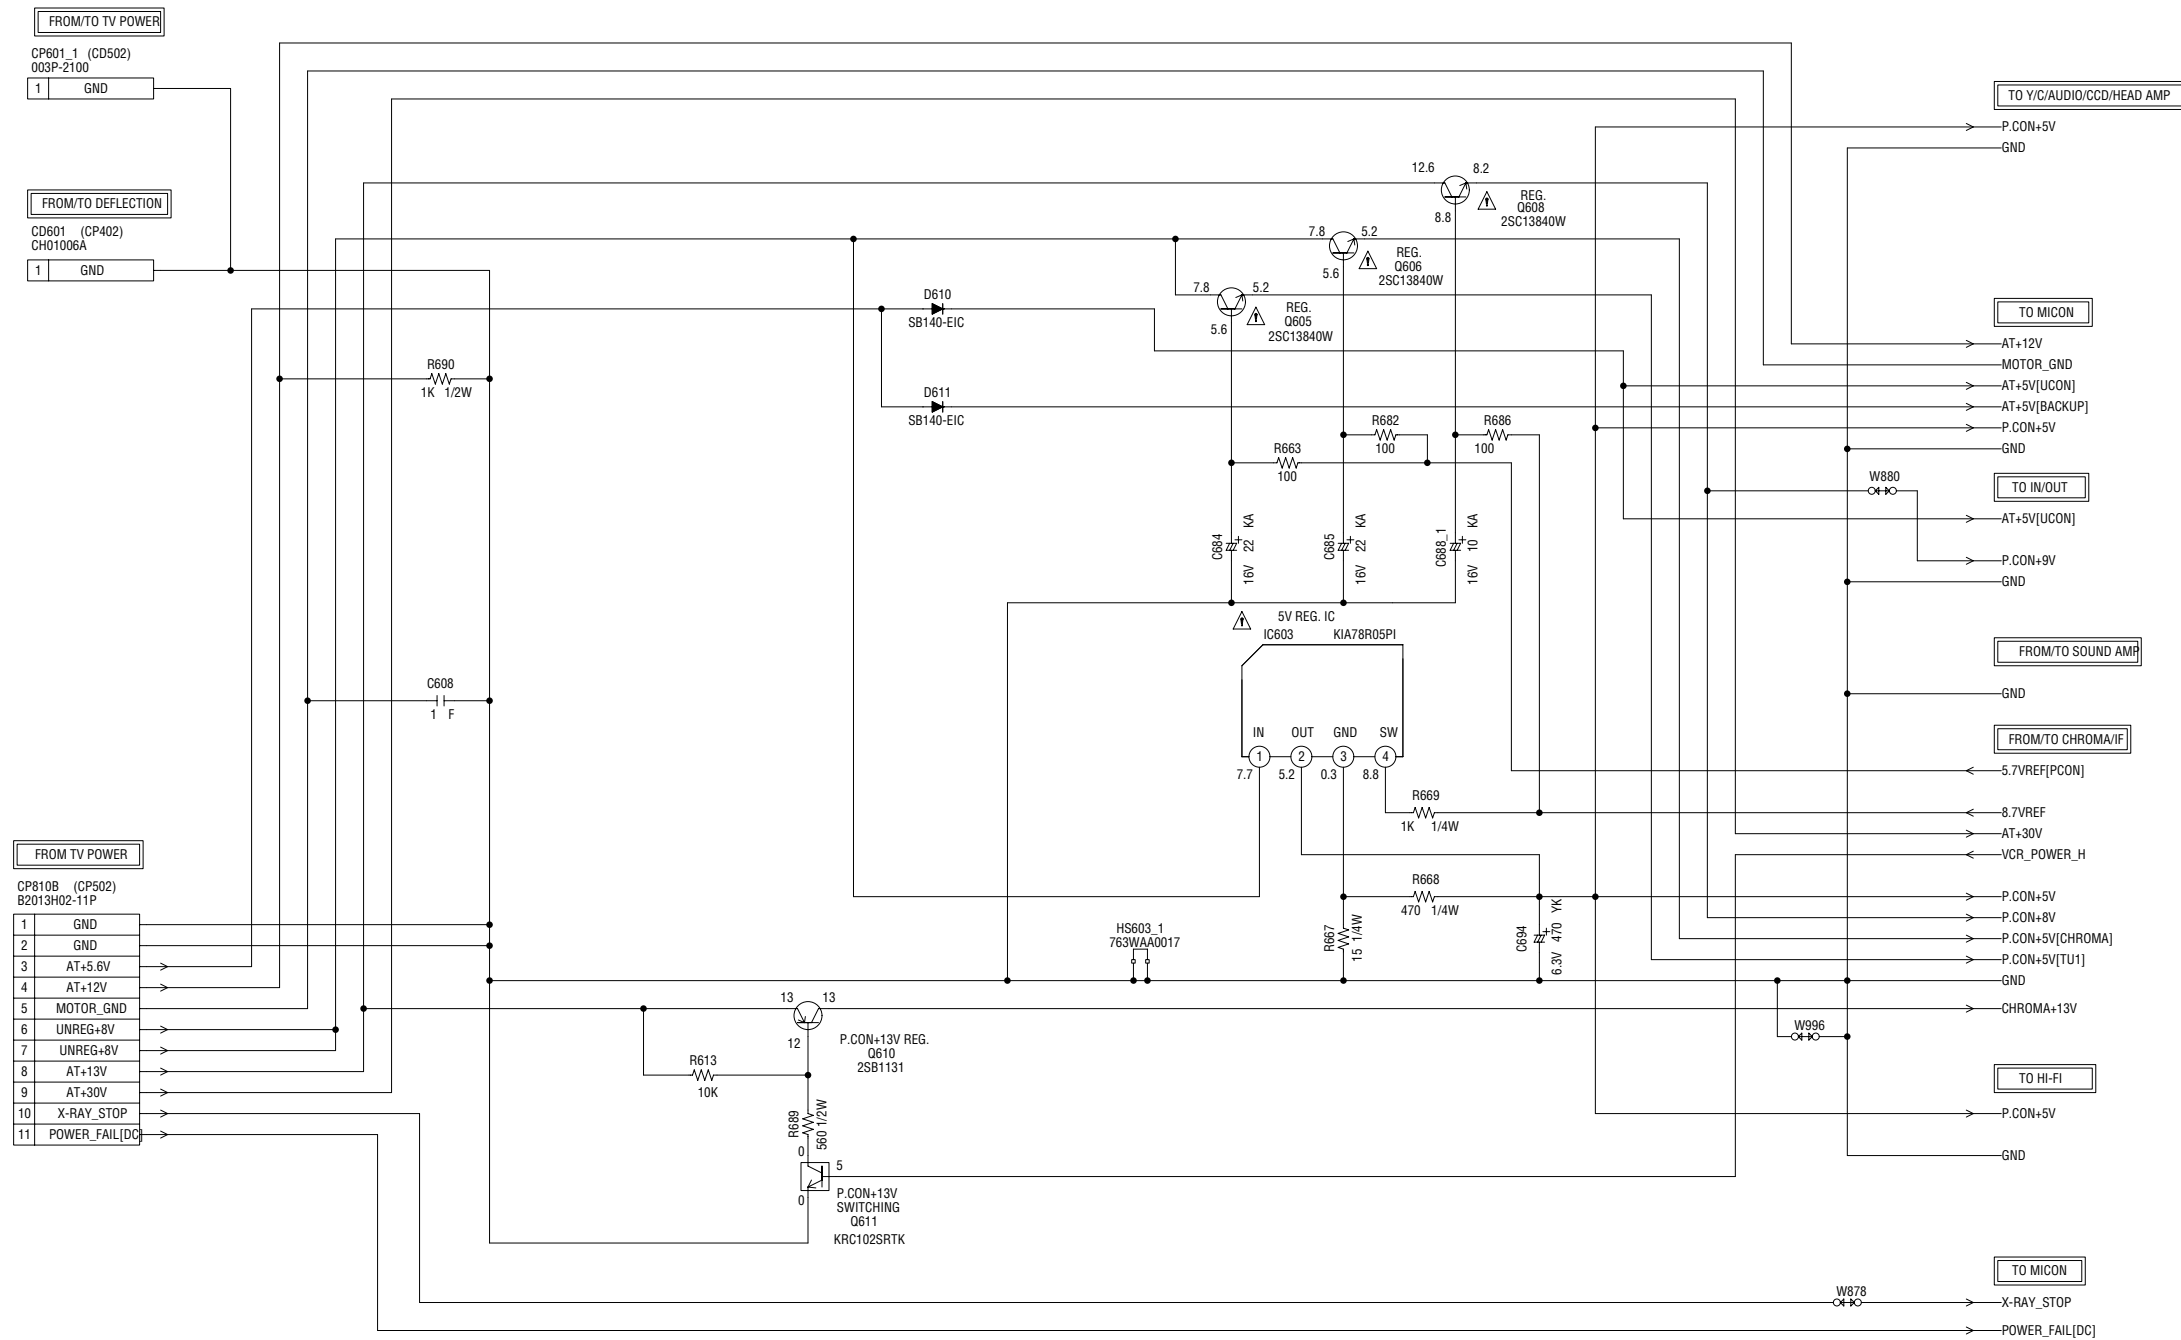

CAUTION: DIGITAL TRANSISTOR



NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING RECORDING (SP MODE)


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

PC8010  
VMA245

# IN/OUT SCHEMATIC DIAGRAM (SYSCON PCB)

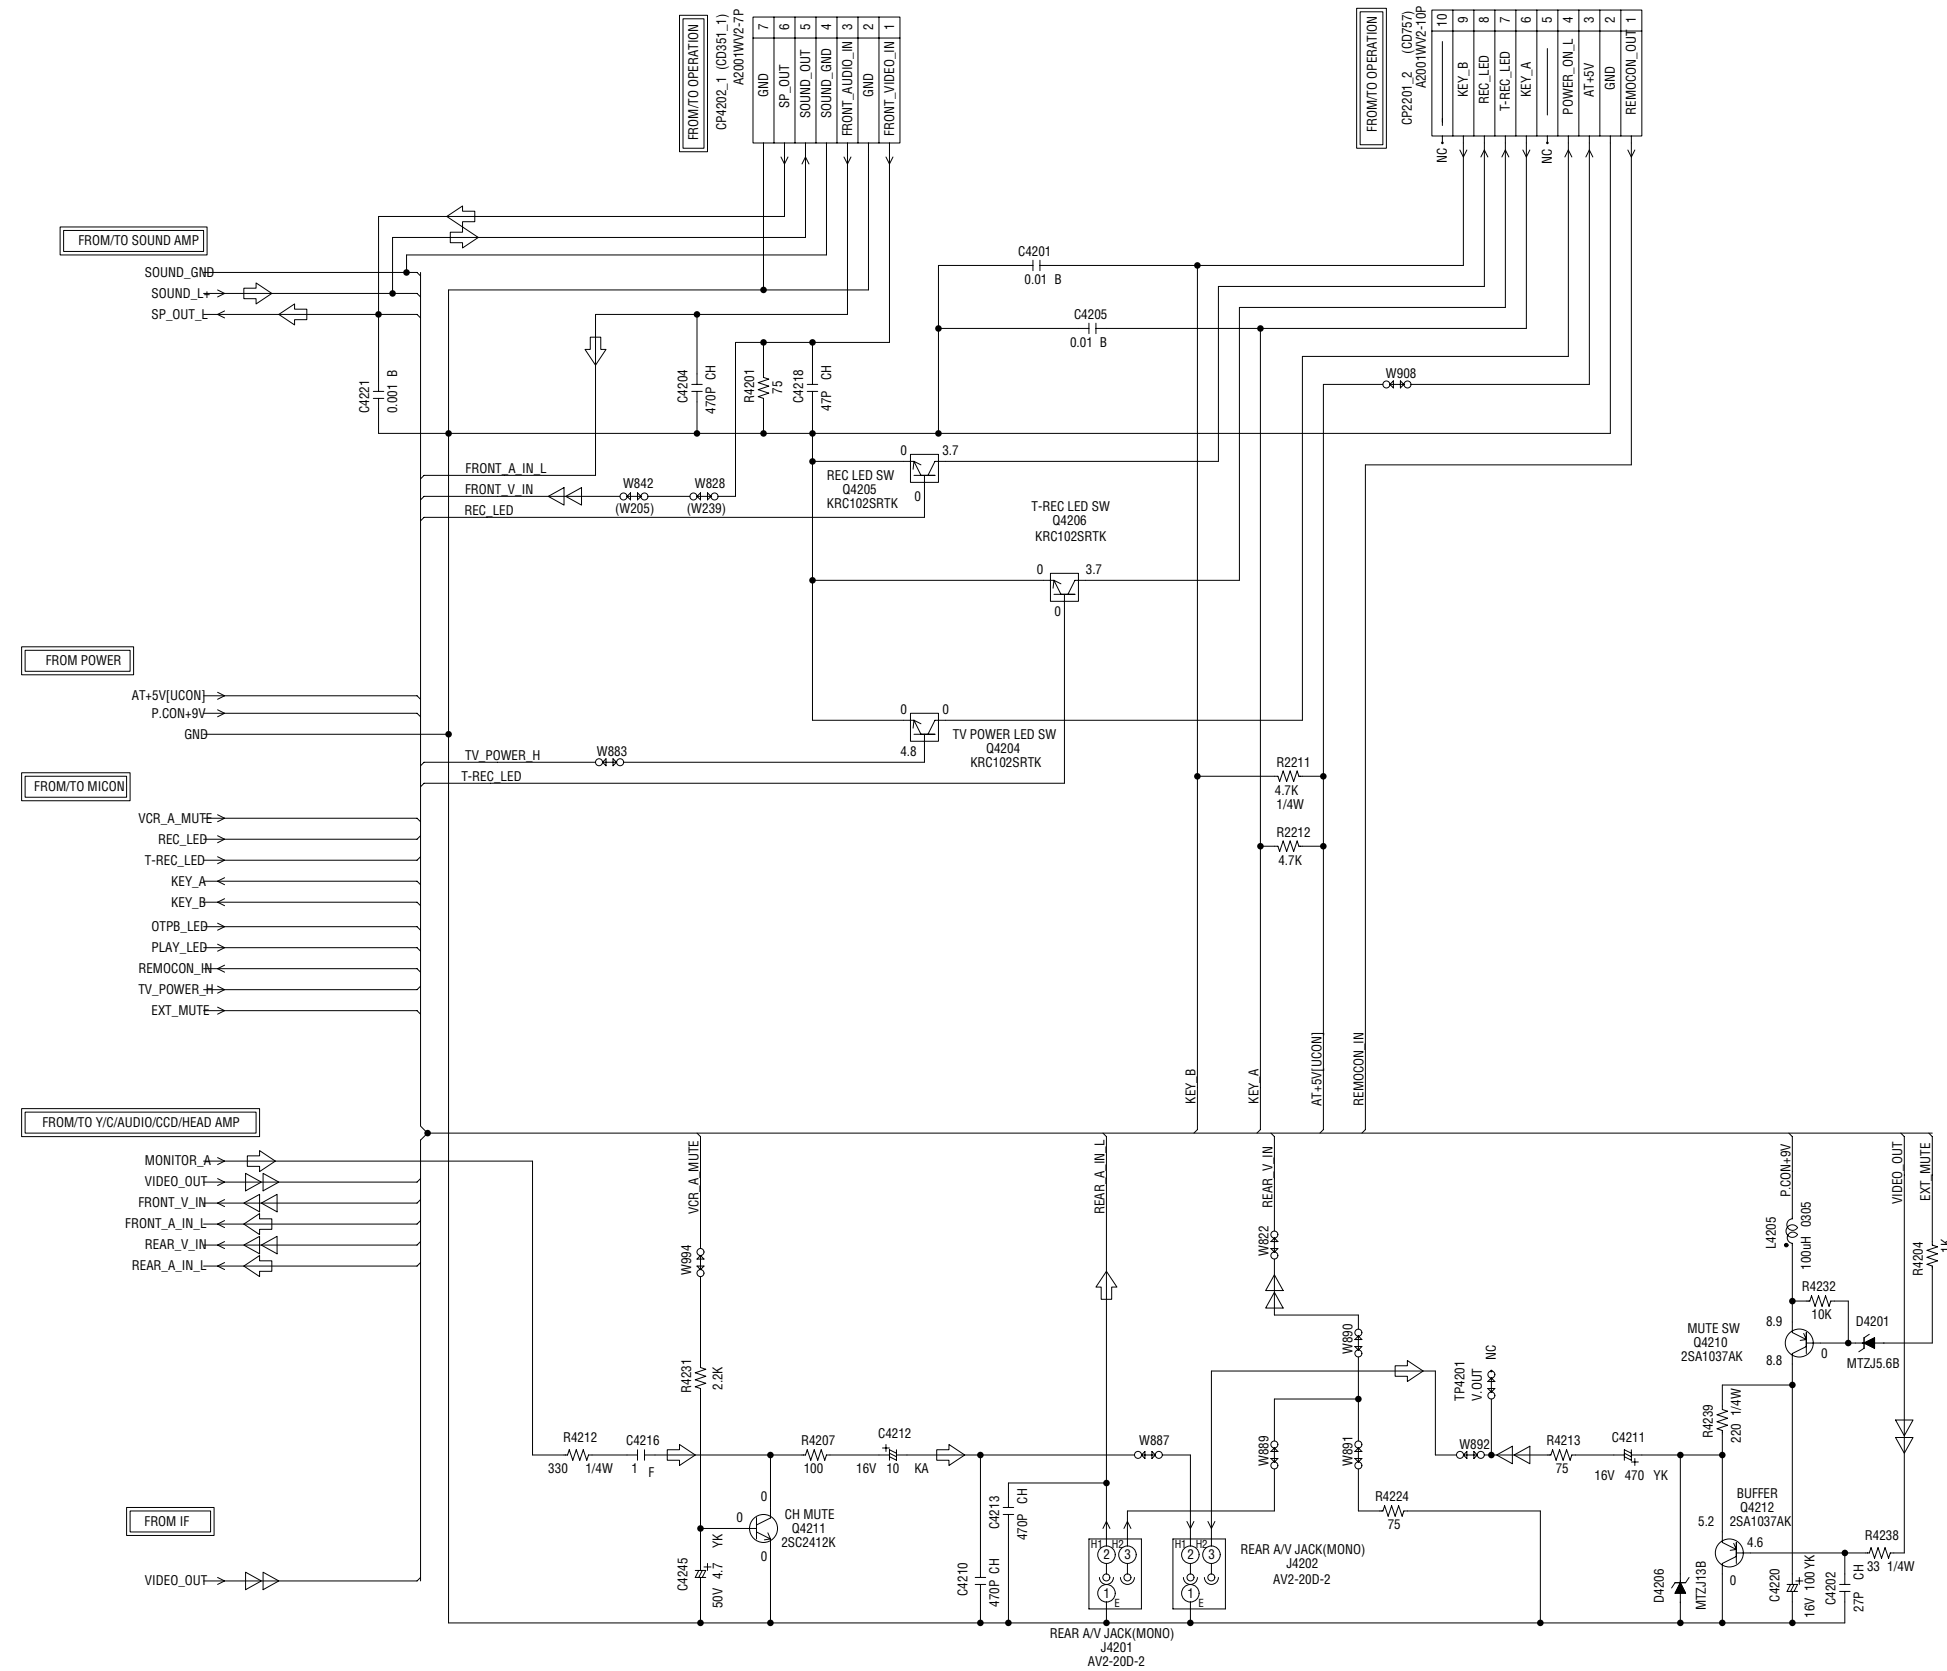

CAUTION: DIGITAL TRANSISTOR

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

◁ TUNER VIDEO SIGNAL  
 ⇐ AUDIO SIGNAL(REC)

PCB010  
VMA245



# CHROMA/IF SCHEMATIC DIAGRAM (SYSCON PCB)

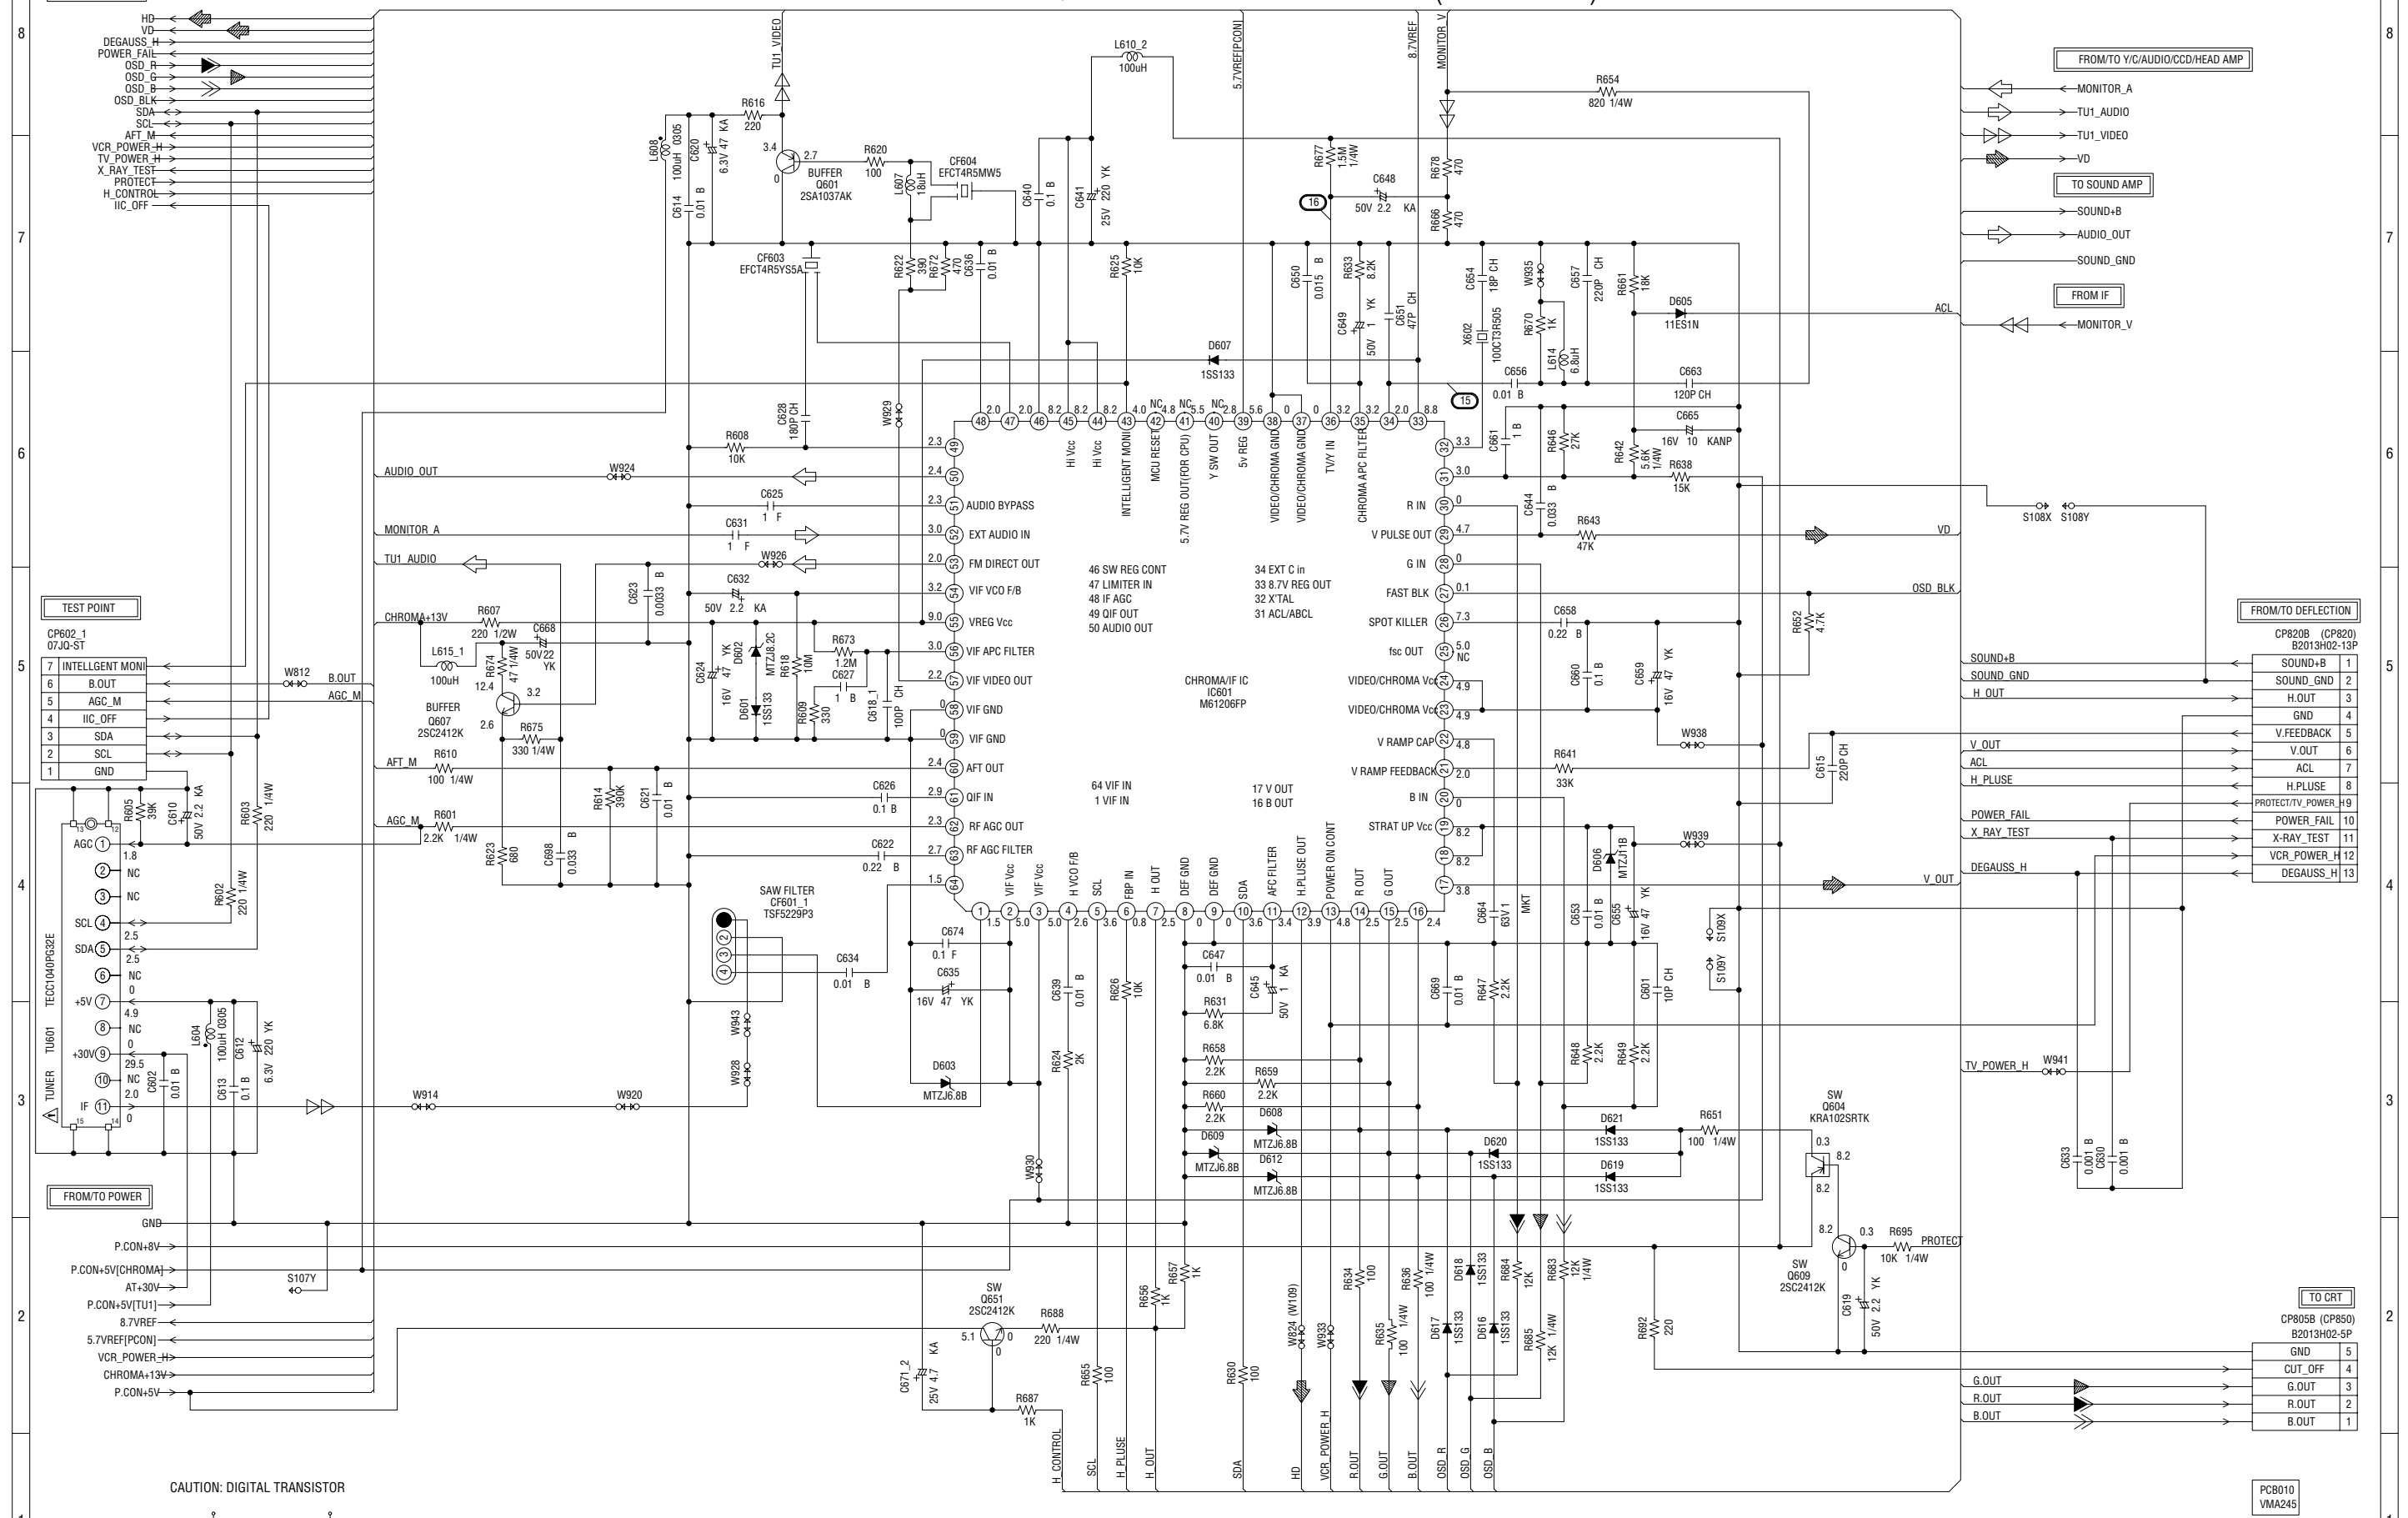

CAUTION: DIGITAL TRANSISTOR

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING RECORDING (SP MODE)

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.


R.SIGNAL  
 G.SIGNAL  
 B.SIGNAL  
 DEFLECTION SIGNAL  
 AUDIO SIGNAL (REC)  
 TUNER VIDEO SIGNAL

| FROM/TO DEFLECTION |                    |
|--------------------|--------------------|
| CP820B (CP820)     | SOUND+B 1          |
| B2013H02-13P       | SOUND_GND 2        |
|                    | H.OUT 3            |
|                    | GND 4              |
|                    | V.FEEDBACK 5       |
|                    | V.OUT 6            |
|                    | ACL 7              |
|                    | H.PLUSE 8          |
|                    | PROTECT/TV_POWER 9 |
|                    | POWER_FAIL 10      |
|                    | X-RAY_TEST 11      |
|                    | VCR_POWER_H 12     |
|                    | DEGAUSS_H 13       |

| TO CRT         |           |
|----------------|-----------|
| CP805B (CP850) | GND 5     |
| B2013H02-5P    | CUT_OFF 4 |
|                | G.OUT 3   |
|                | R.OUT 2   |
|                | B.OUT 1   |

PCB010  
VMA245

# SOUND AMP SCHEMATIC DIAGRAM (SYSCON PCB)

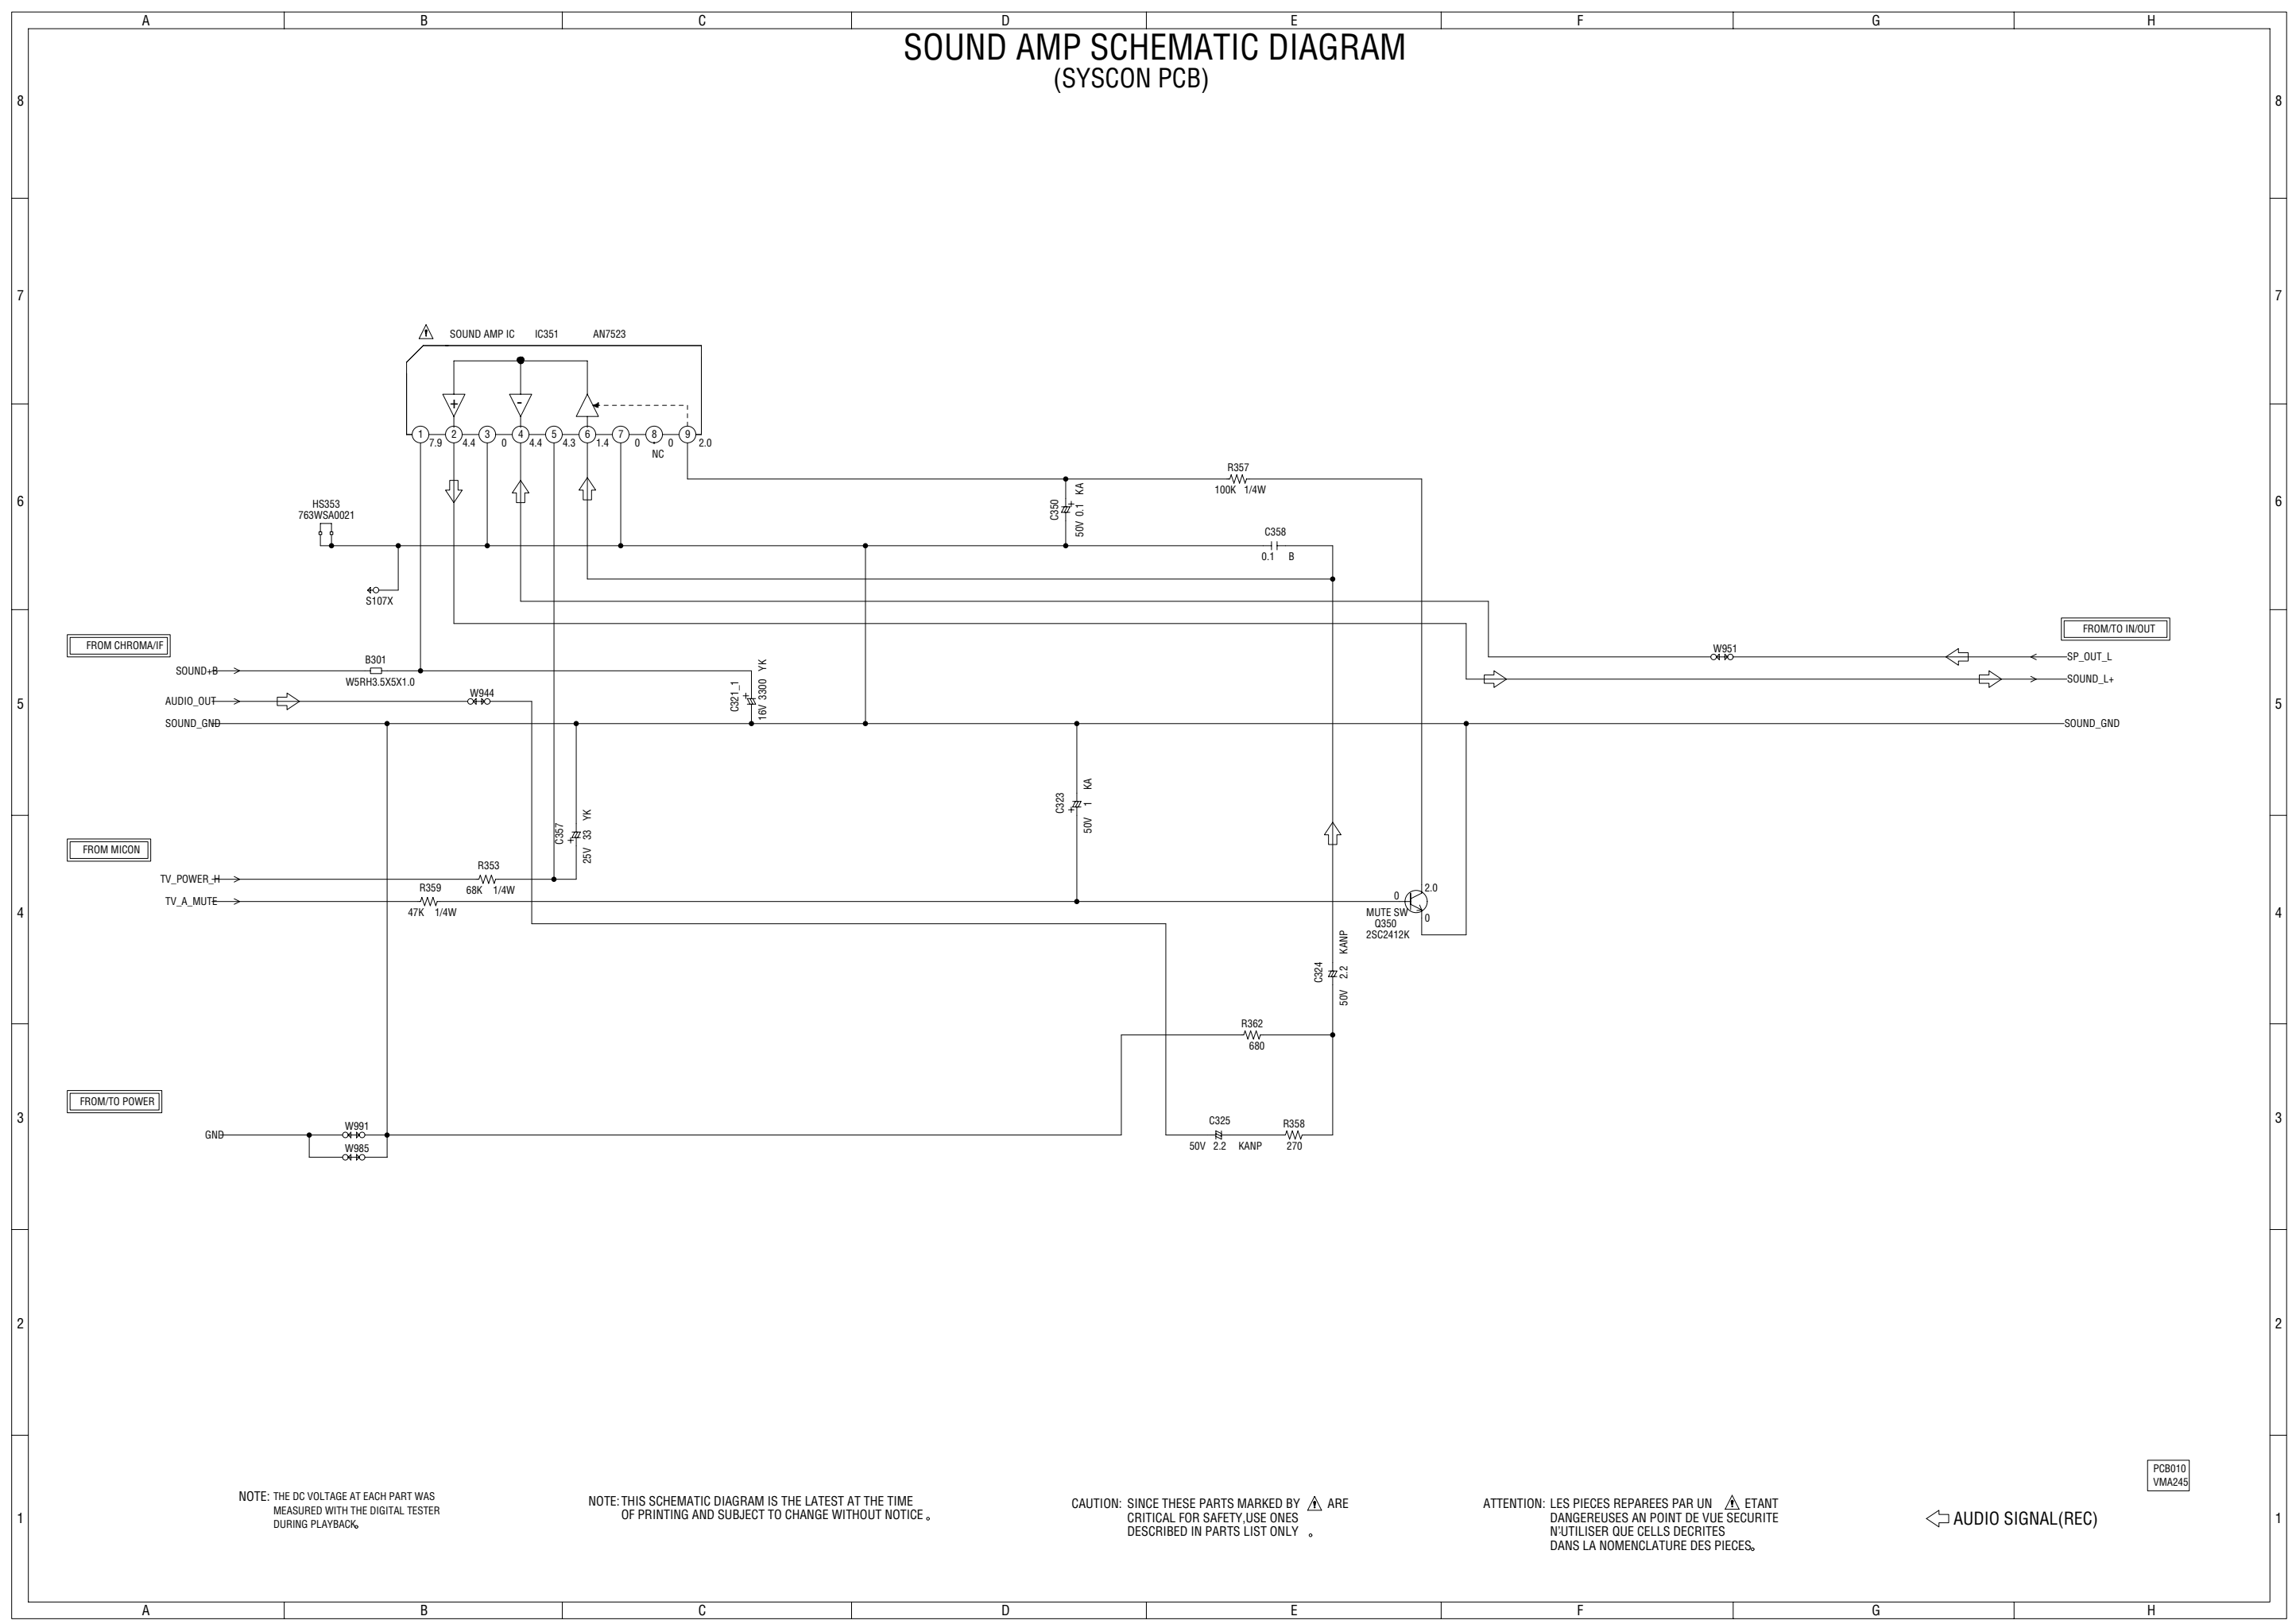

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

AUDIO SIGNAL(REC)

PCB010  
VMA245

# HI-FI SCHEMATIC DIAGRAM (SYSCON PCB)

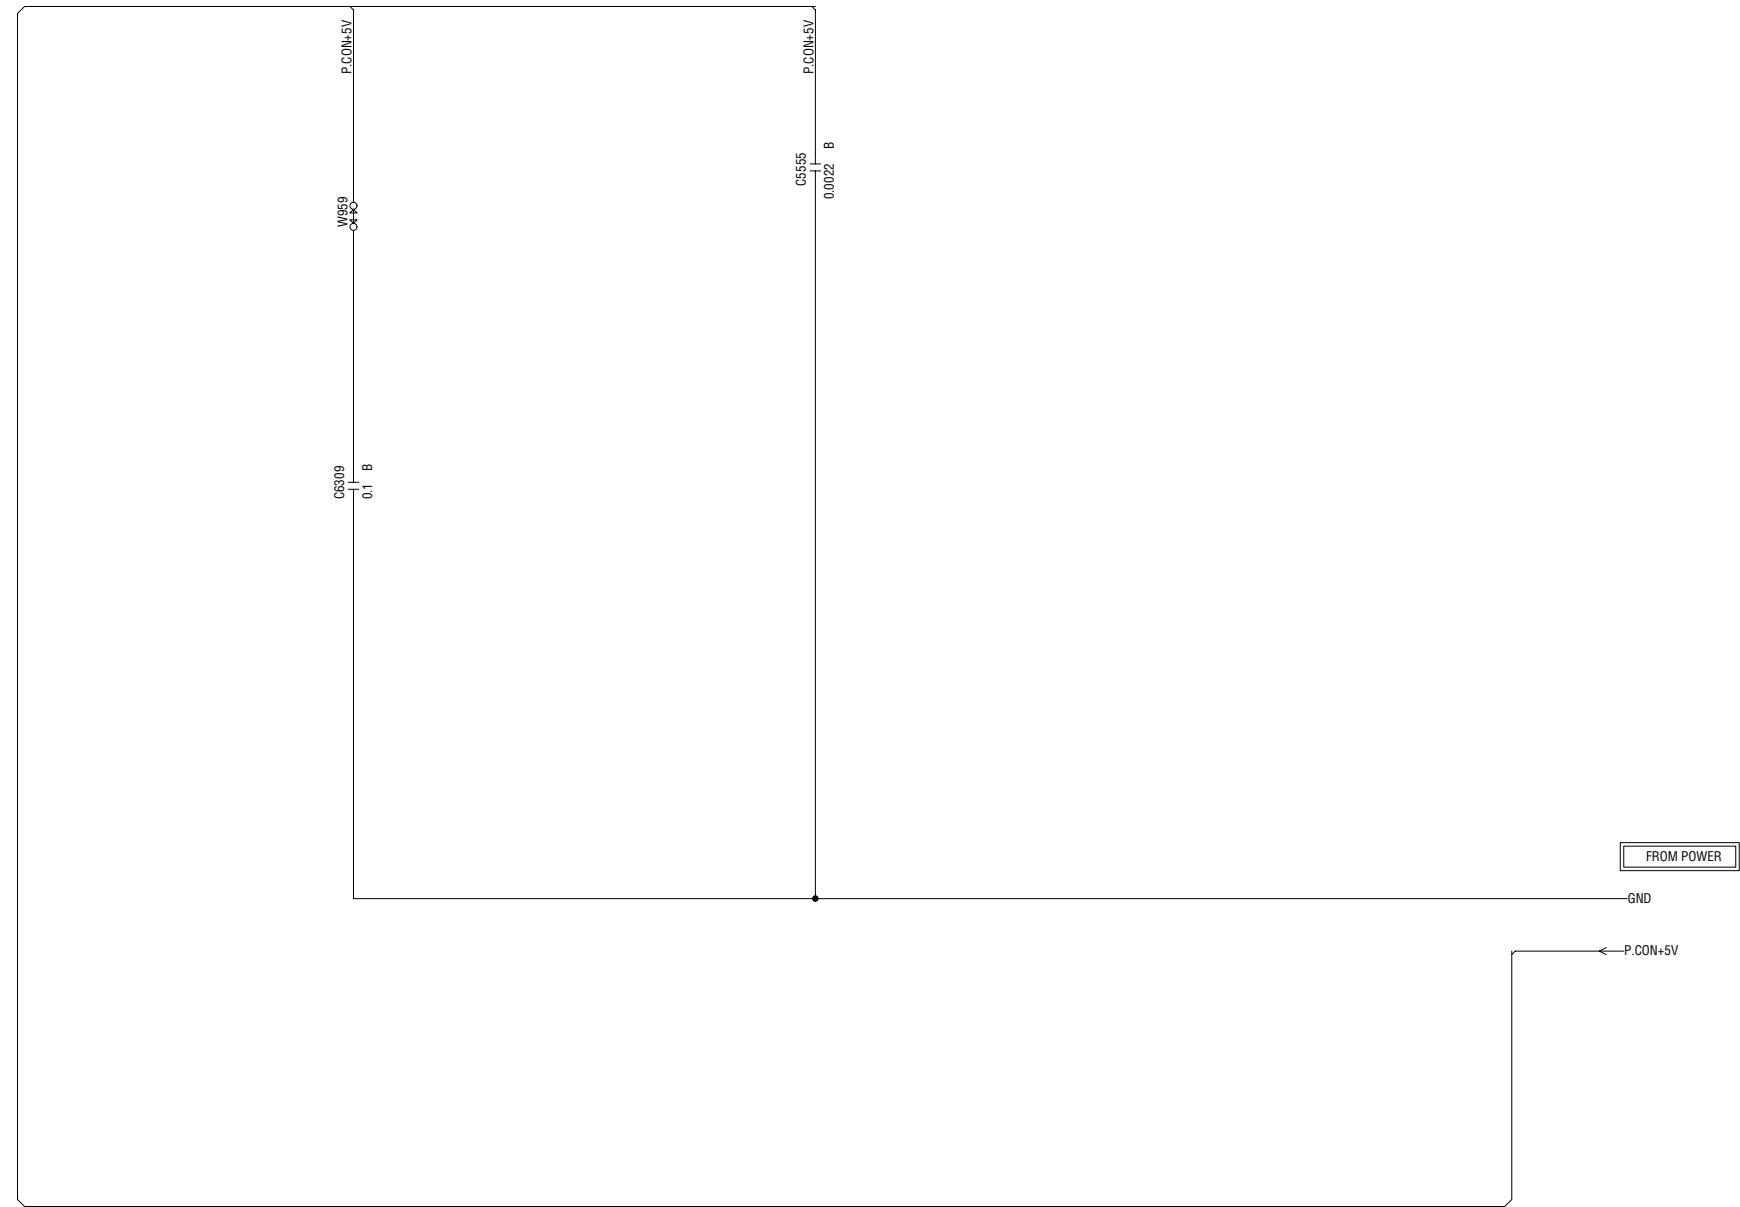

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

PC8010  
VMA245

# IF SCHEMATIC DIAGRAM (SYSCON PCB)



NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE .


◄◄ TUNER VIDEO SIGNAL

PC8010  
VMA245

8  
7  
6  
5  
4  
3  
2  
1

8  
7  
6  
5  
4  
3  
2  
1


# TV POWER SCHEMATIC DIAGRAM (MAIN PCB)



CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE 5A 125V (F501), 2.5A 125V (F502) AND 10A 125V (ICP502).

ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCENDIE N'UTILISER QUE DES FUSIBLE DE MEME TYPE 5A 125V (F501), 2.5A 125V (F502) AND 10A 125V (ICP502).

CAUTION: ICP502 ARE MANUFACTURED BY LITTELFUSE INC., TYPE 251.

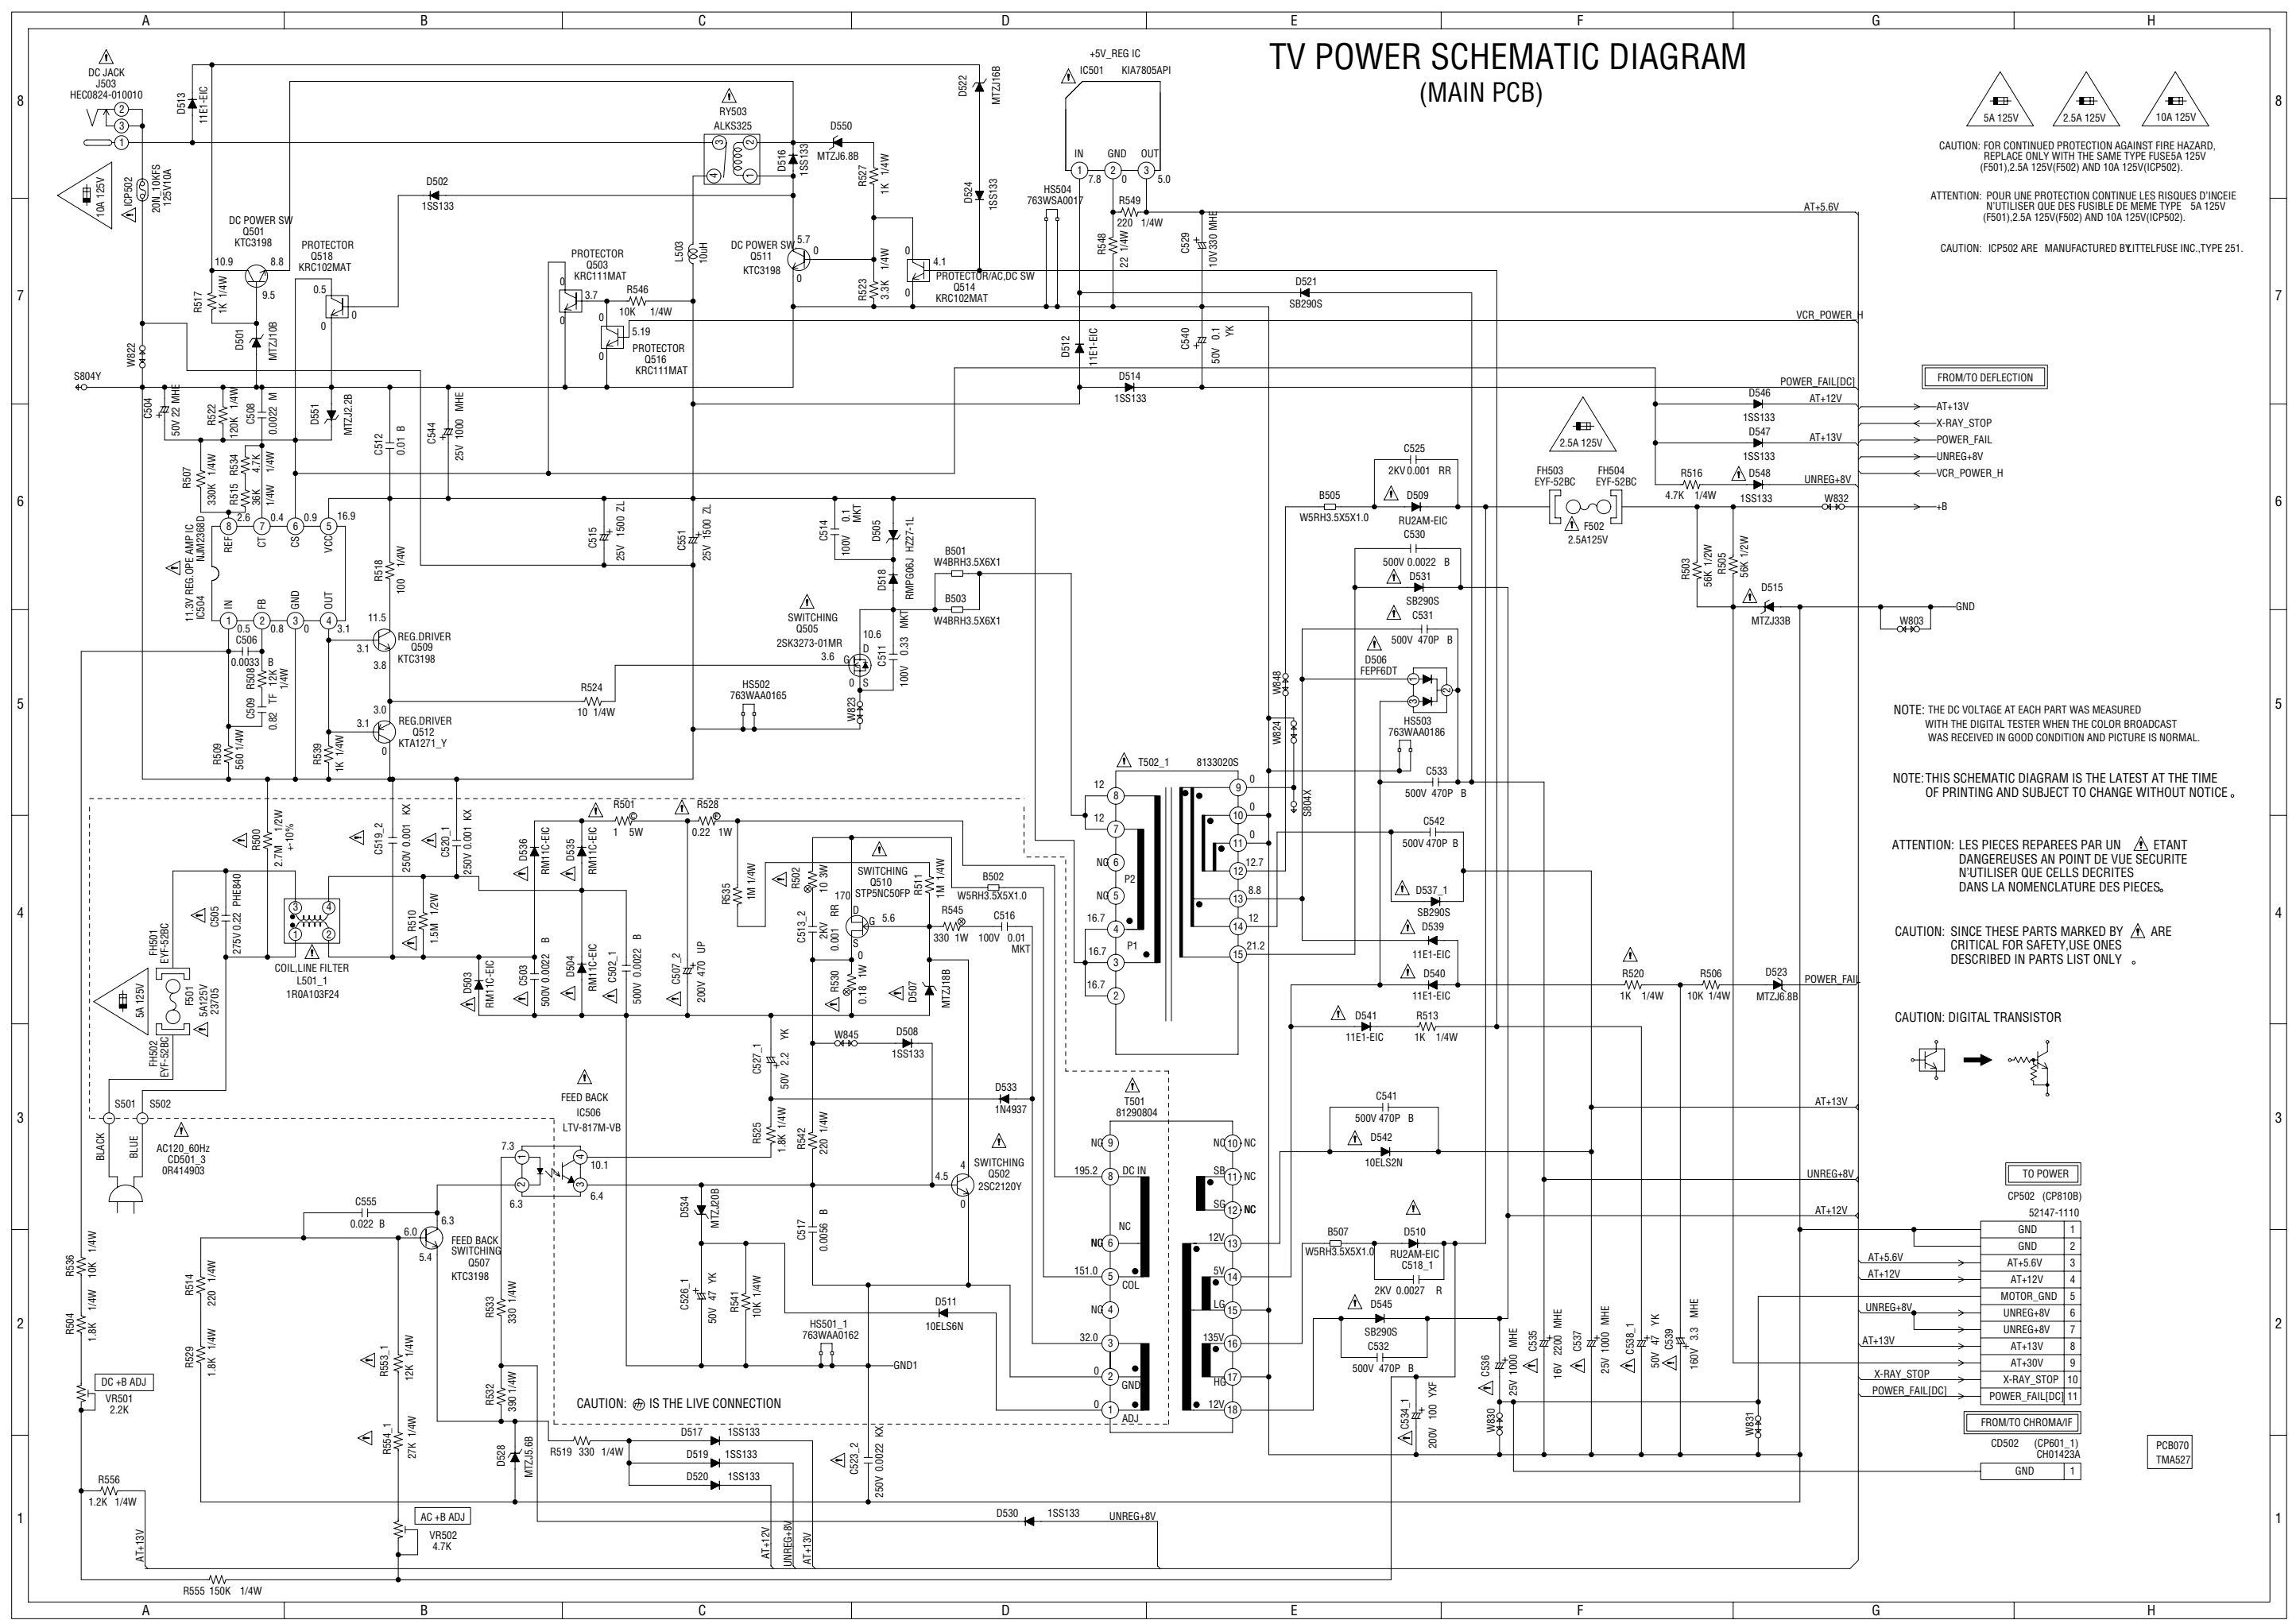

FROM/TO DEFLECTION

- AT+13V
- X-RAY\_STOP
- POWER\_FAIL
- UNREG+8V
- VCR\_POWER\_H
- +B
- GND


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

ATTENTION: LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLES DECRITES DANS LA NOMENCLATURE DES PIECES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

CAUTION: DIGITAL TRANSISTOR



TO POWER

- CP502 (CP810B) 52147-1110
- GND 1
- AT+5.6V 2
- AT+5.6V 3
- AT+12V 4
- AT+12V 5
- MOTOR\_GND 6
- UNREG+8V 7
- UNREG+8V 8
- AT+13V 9
- AT+30V 10
- X-RAY\_STOP 11
- POWER\_FAIL[DC] 11


FROM/TO CHROMA/IF

- CD502 (CP801\_1) CH01423A
- GND 1

PCB070 TMA527

CAUTION: IS THE LIVE CONNECTION

# DEFLECTION SCHEMATIC DIAGRAM (MAIN PCB)

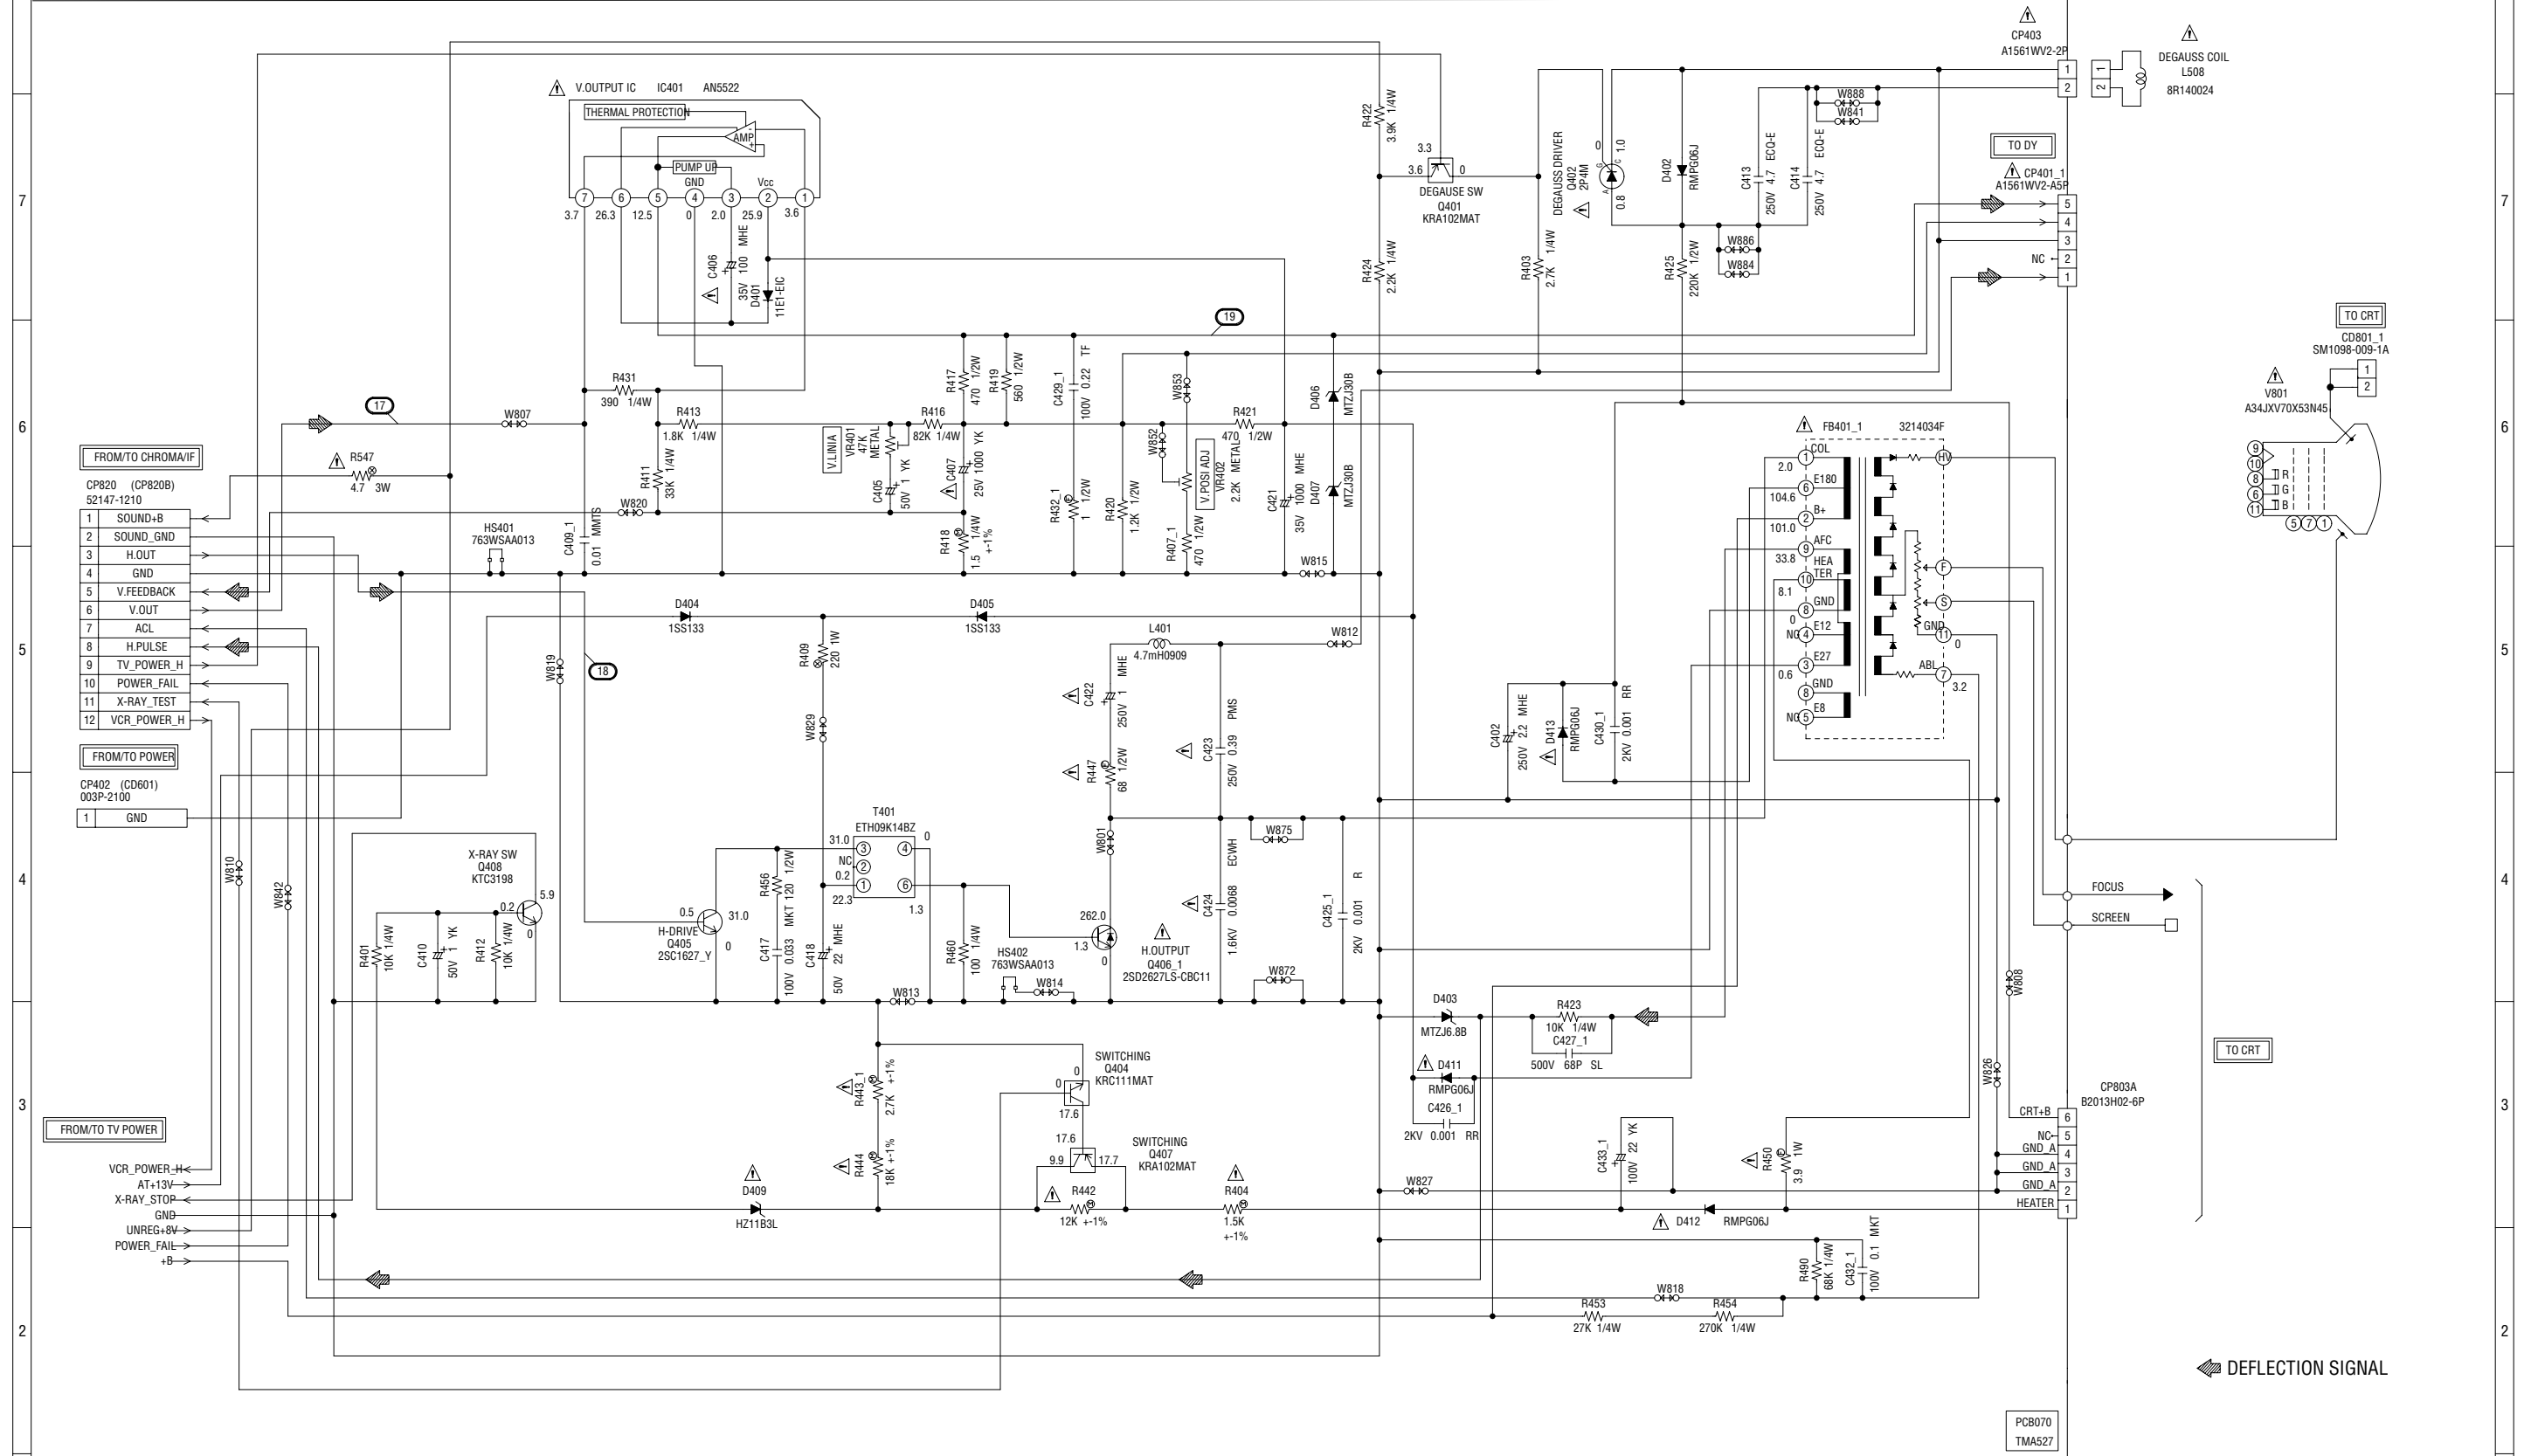

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

CAUTION: DIGITAL TRANSISTOR

CAUTION: DIGITAL TRANSISTOR

# CRT SCHEMATIC DIAGRAM (CRT PCB)

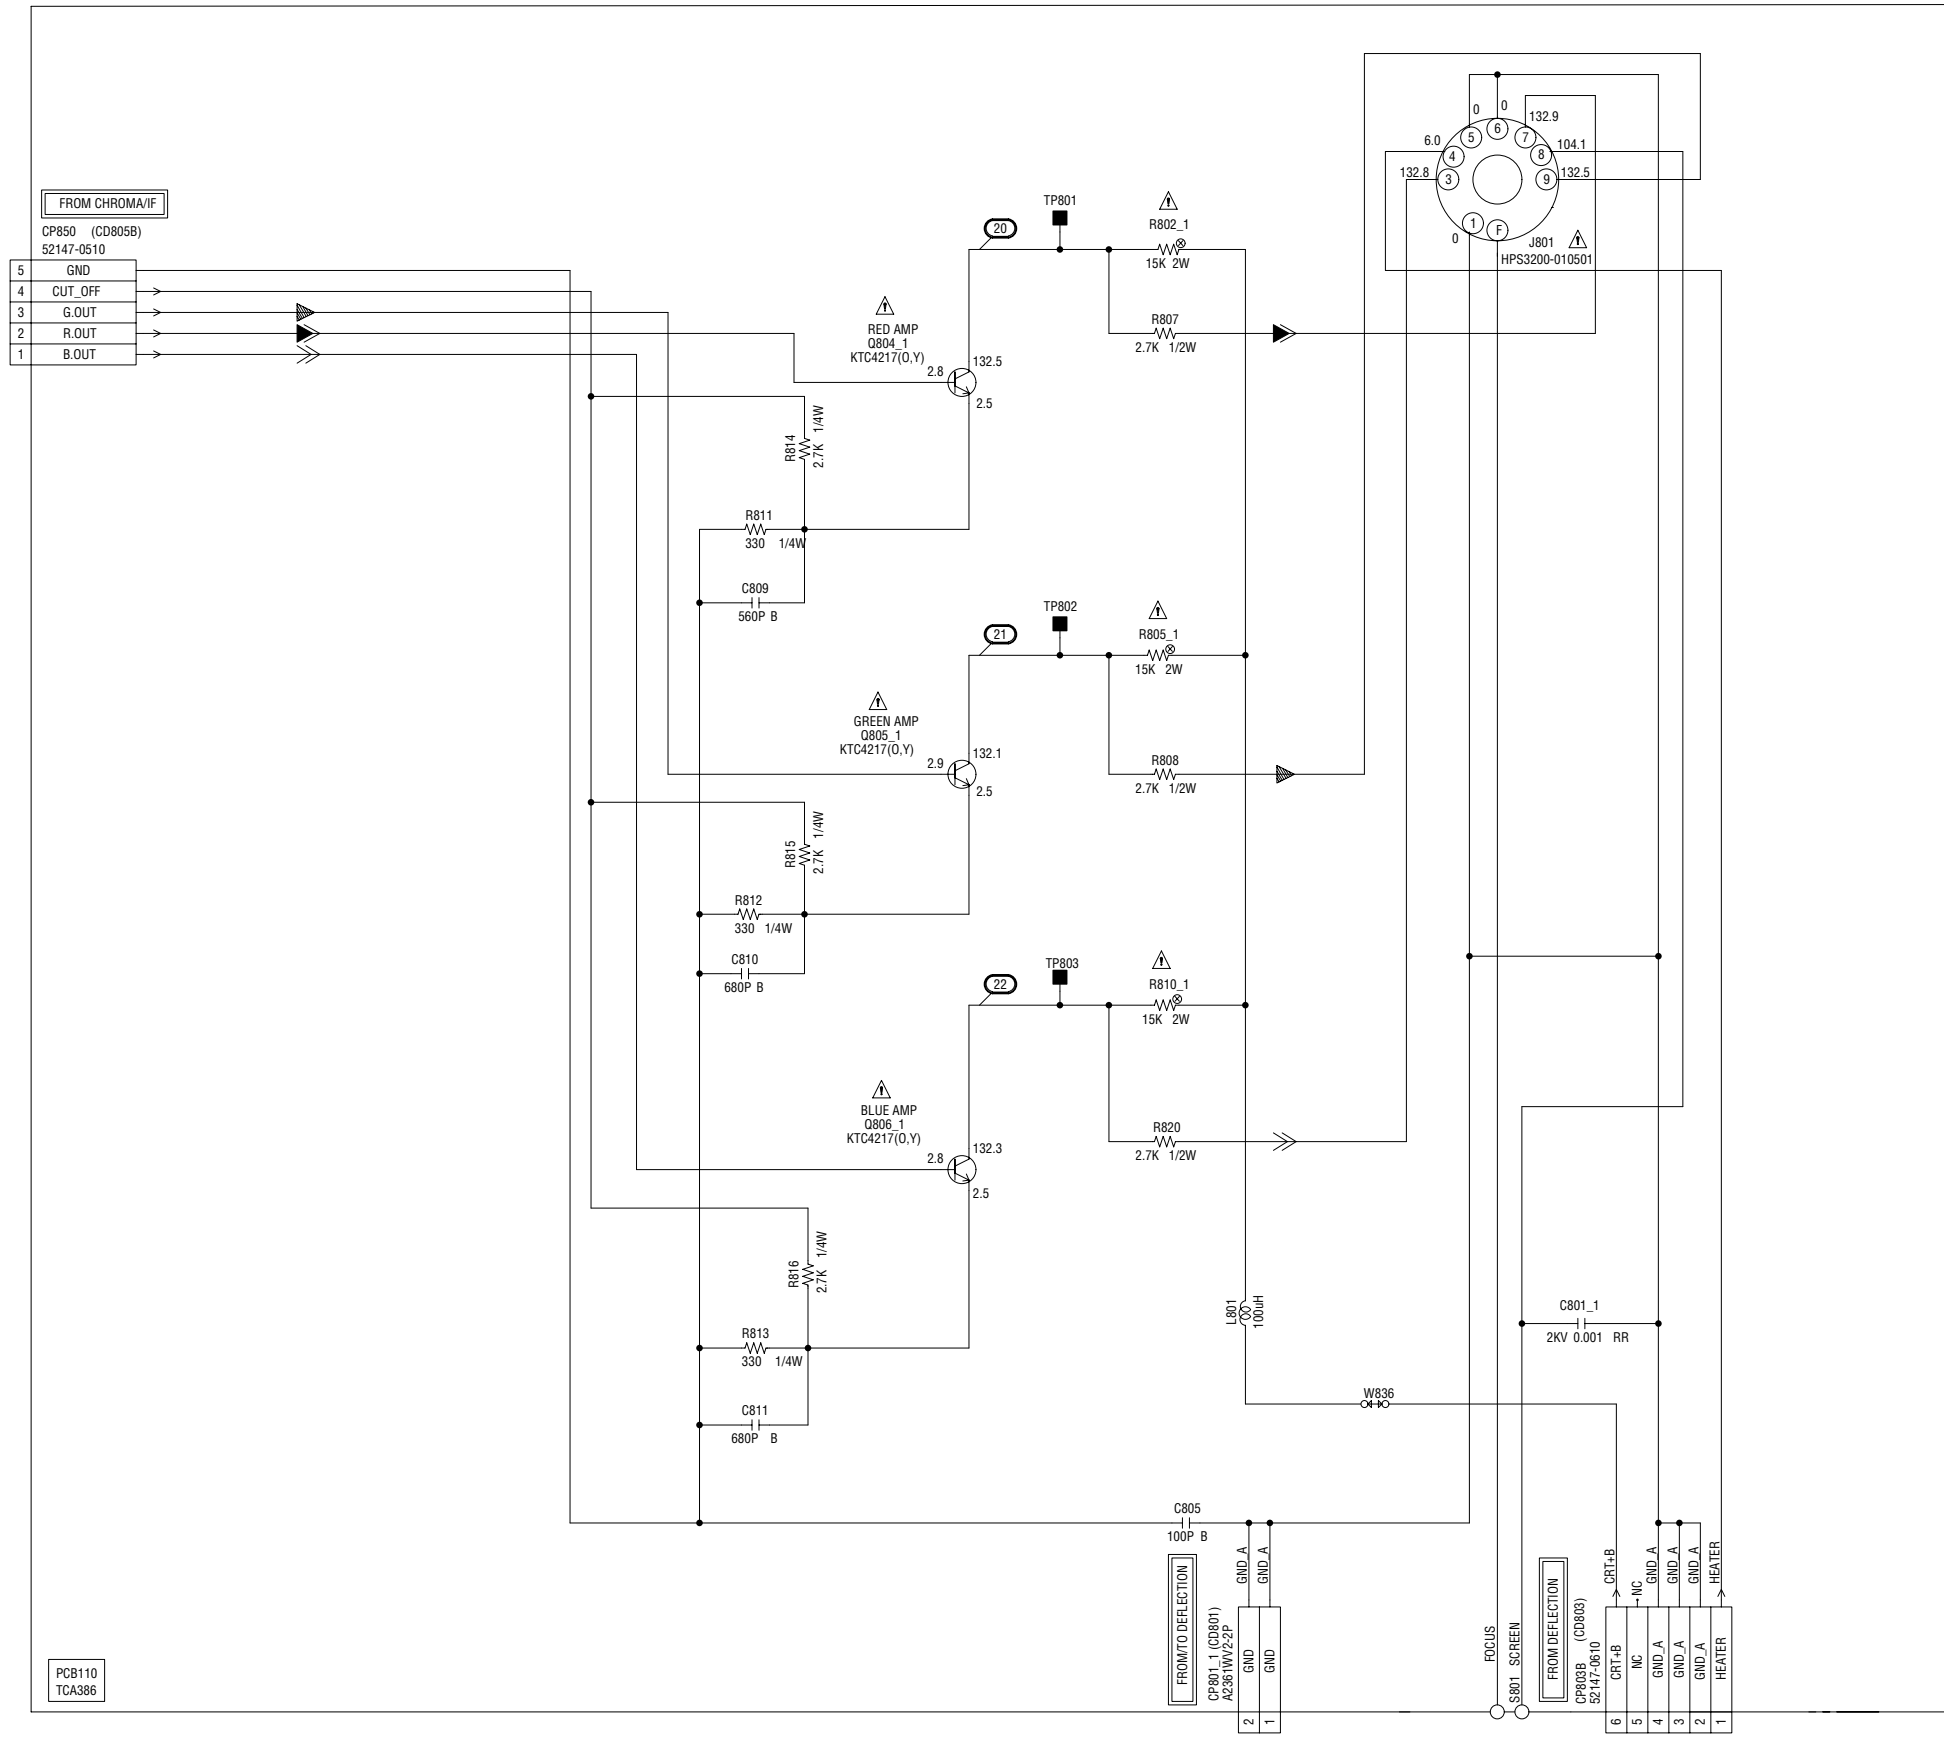


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

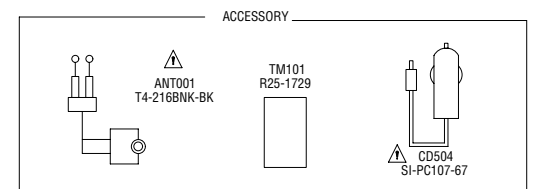

◀ R.SIGNAL  
 ◀ G.SIGNAL  
 ◀ B.SIGNAL

# OPERATION SCHEMATIC DIAGRAM (OPERATION PCB)

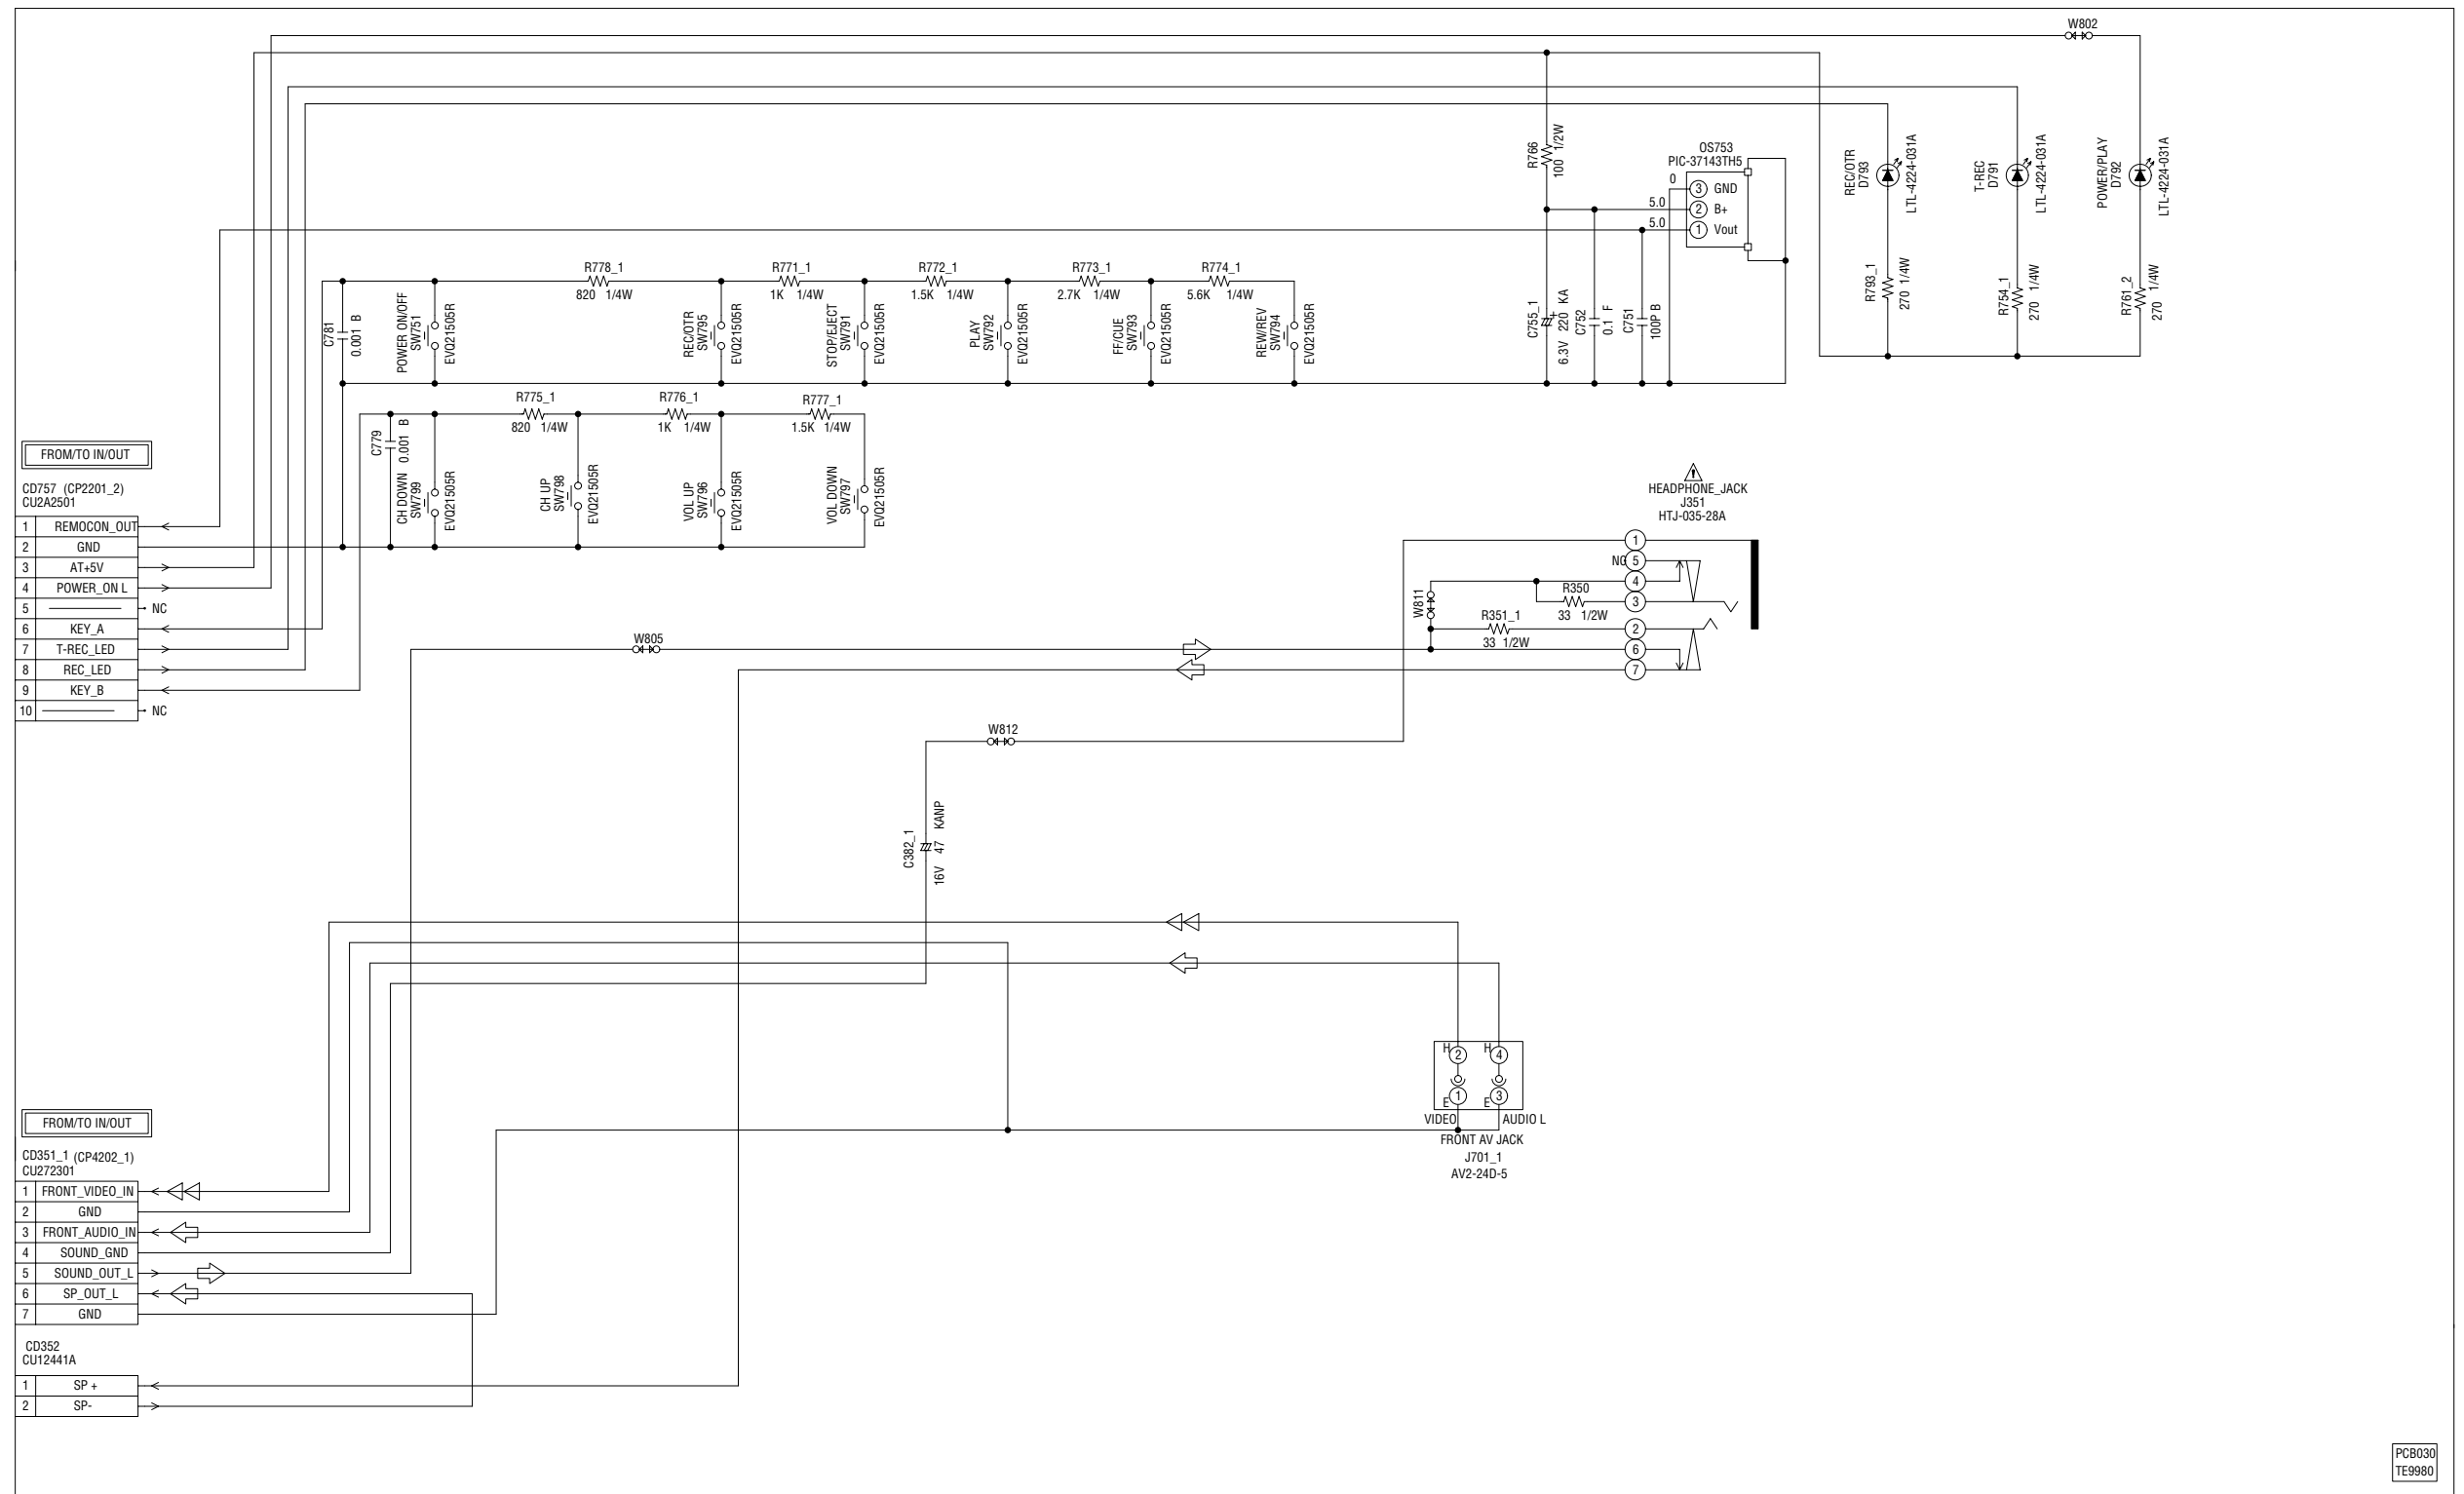

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIÈCES.

TUNER VIDEO SIGNAL  
 AUDIO SIGNAL



# INTERCONNECTION DIAGRAM

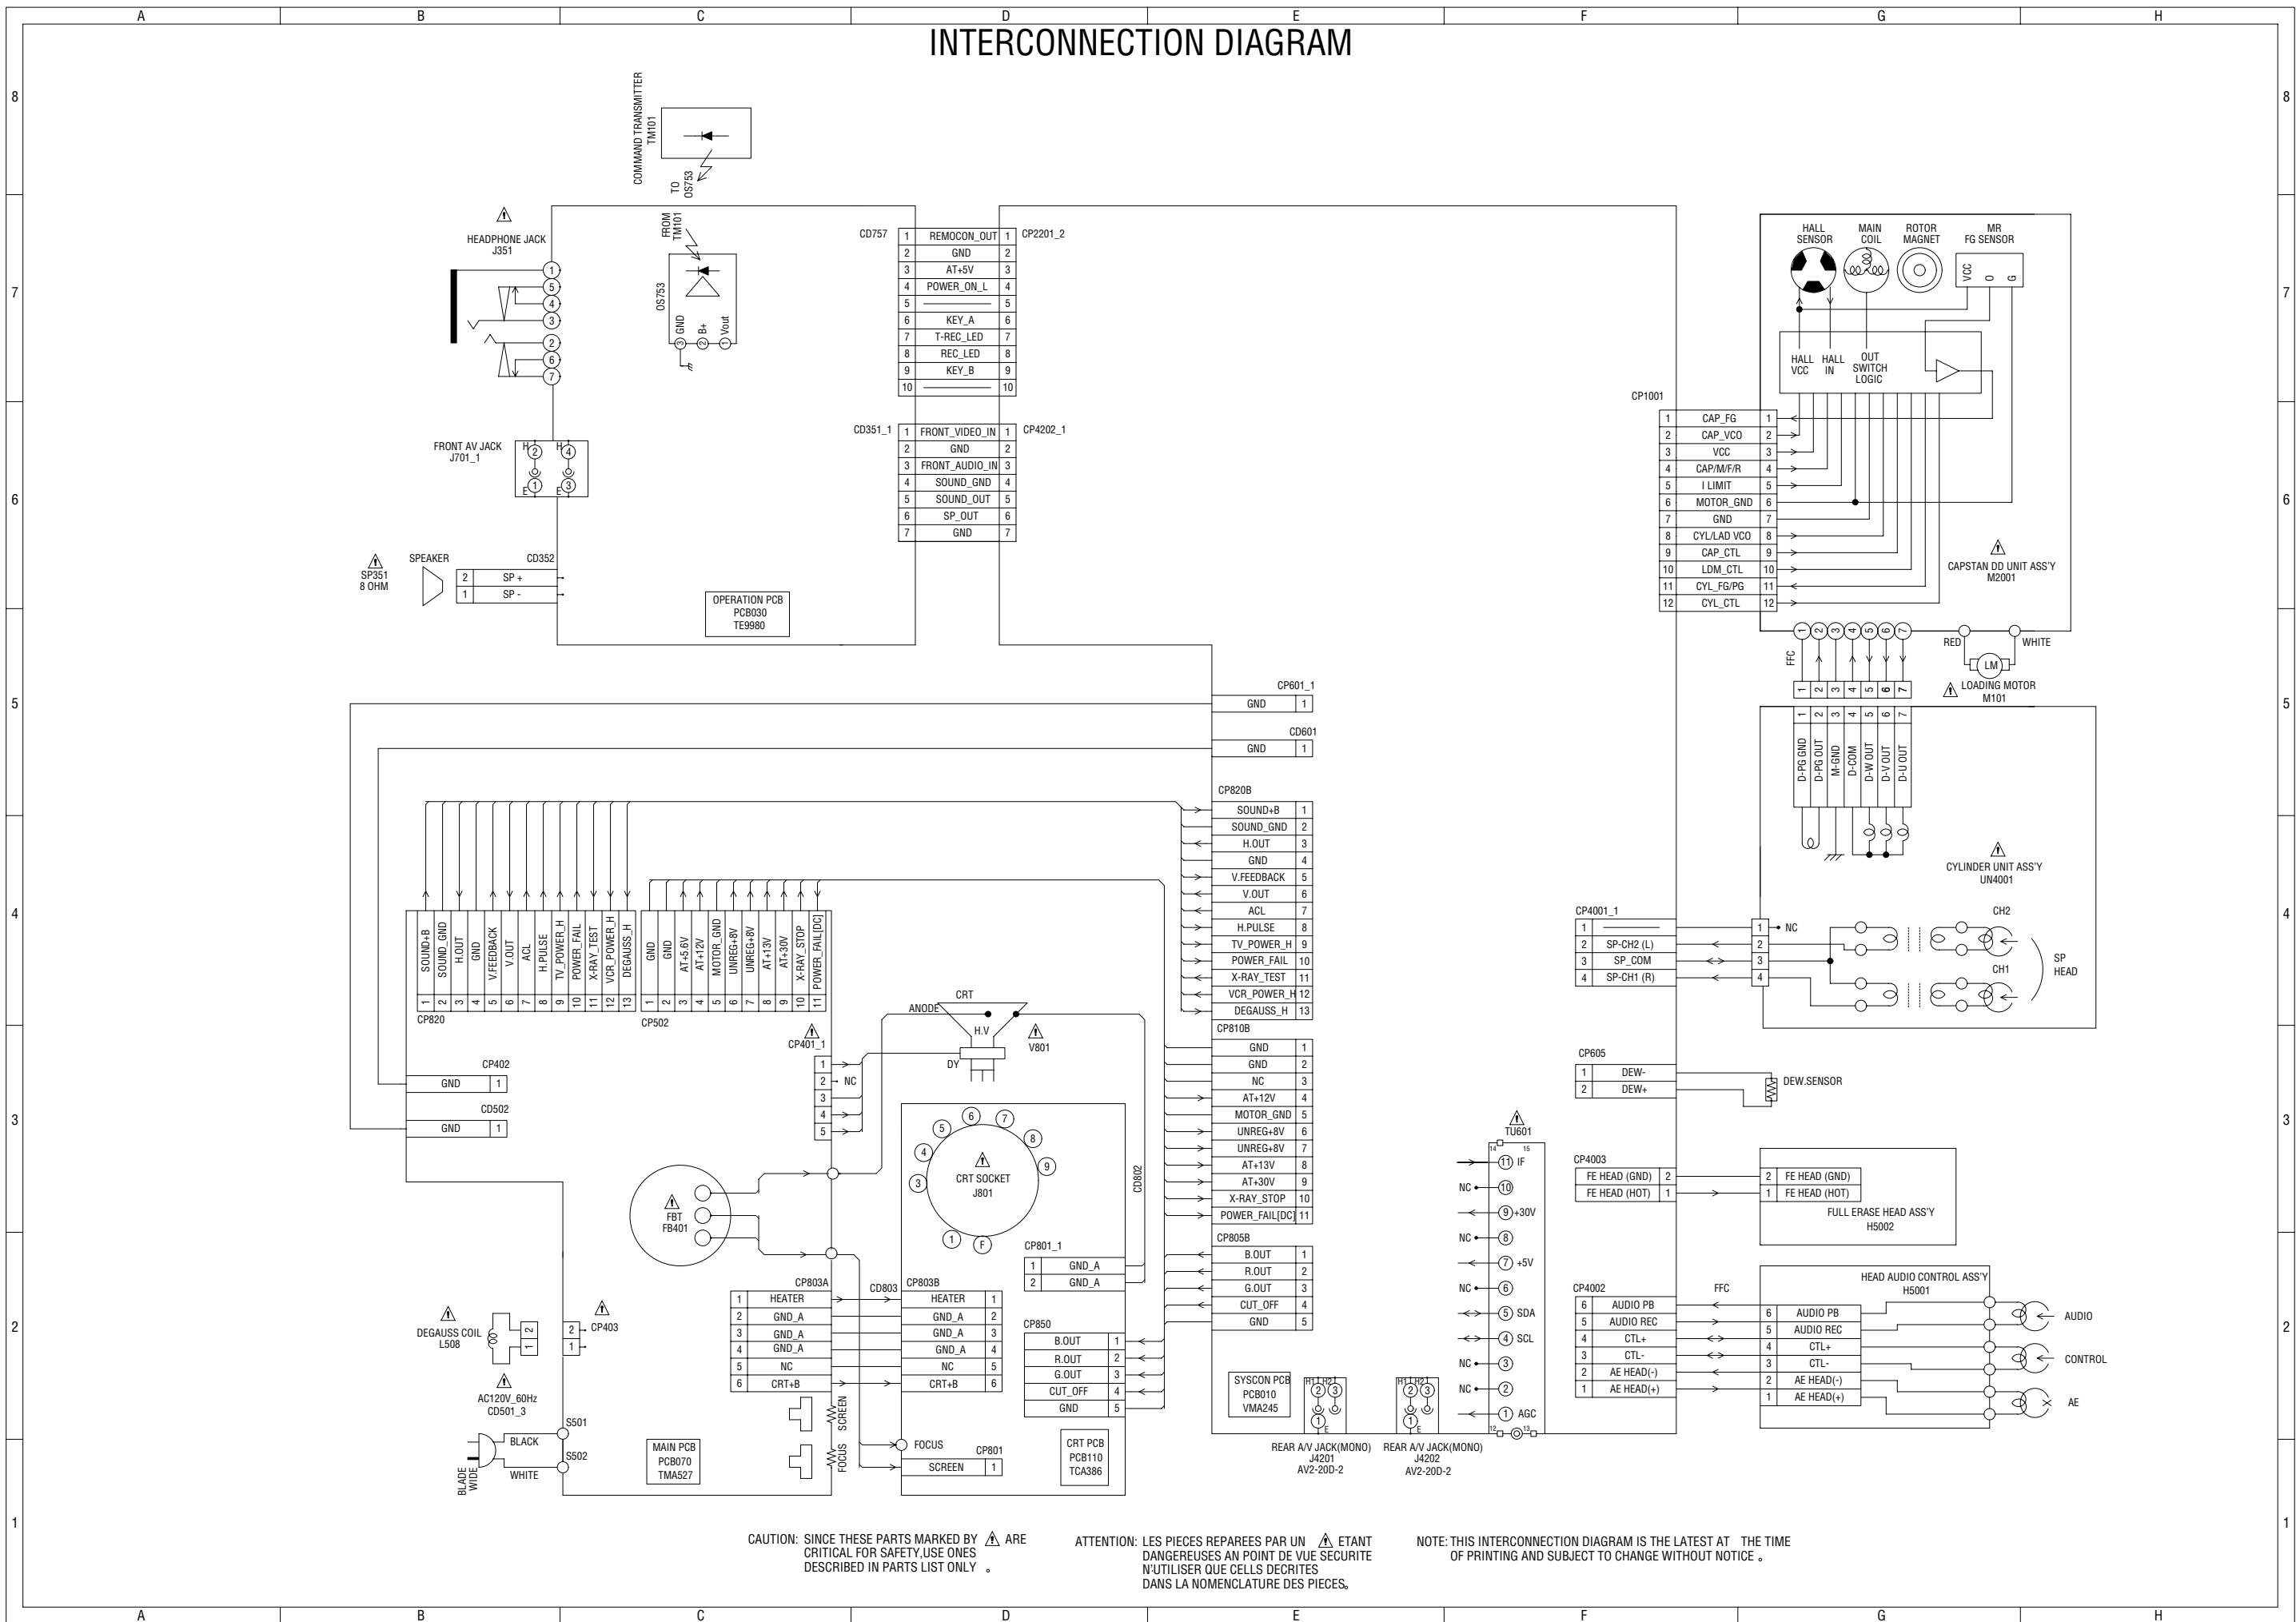


CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.


NOTE: THIS INTERCONNECTION DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

# WAVEFORMS


## Y/C/AUDIO/CCD/HEAD AMP

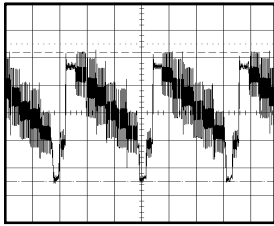


① PB  
0.5V 20 $\mu$ s/div

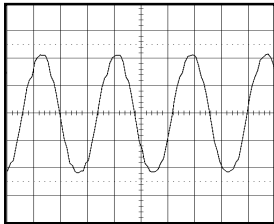


② POWER ON  
100mV 0.1 $\mu$ s/div

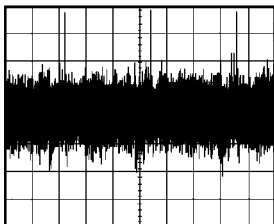

③ PB  
10mV 20 $\mu$ s/div

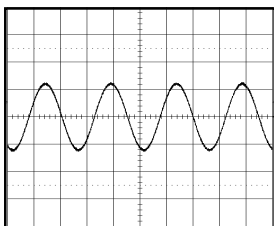


④ PB  
0.5V 1ms/div

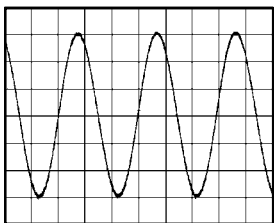


⑤ REC  
10.0V 5 $\mu$ s/div


## MICON

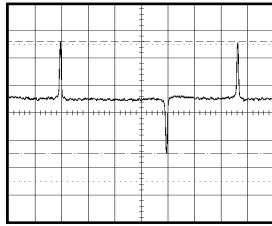


⑦ PB  
1.0V 5ms/div

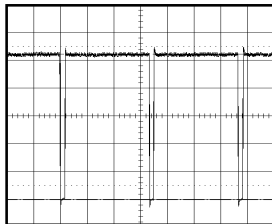


⑧ POWER ON  
0.5V 10ms/div

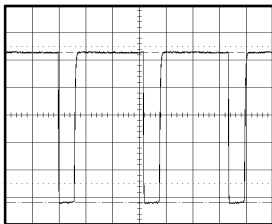


⑨ POWER ON  
1.0V 20 $\mu$ s/div

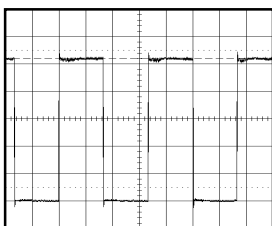

⑩ PB  
1.0V 10ms/div

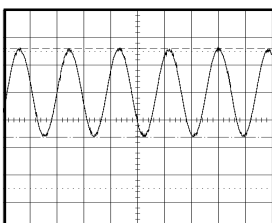


⑪ PB  
0.5V 0.5ms/div

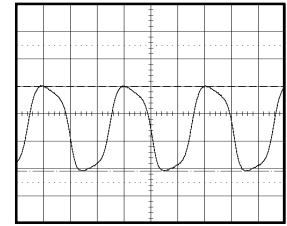


⑫ POWER ON  
1.0V 10 $\mu$ s/div


## DEFLECTION

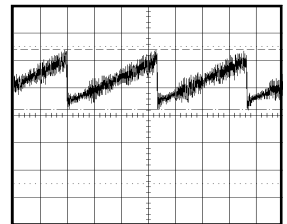

⑰ 0.5V 5ms/div

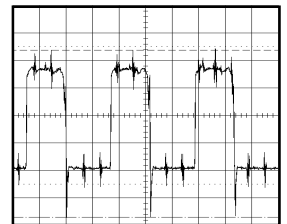


⑱ 200mV 20 $\mu$ s/div

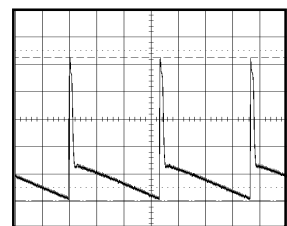

⑲ 10.0V 5ms/div


## CRT

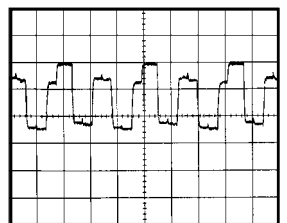


⑳ 50.0V 20 $\mu$ s/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

# WAVEFORMS

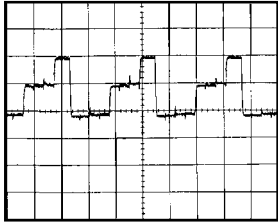


②1 50.0V 20 $\mu$ s/div

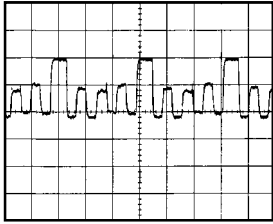


②2 50.0V 20 $\mu$ s/div

## CHROMA/IF

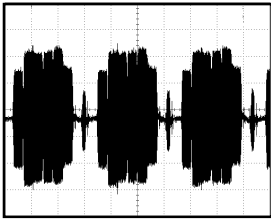


①5 100mV 20 $\mu$ s/div

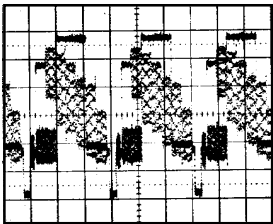


①6 200mV 20 $\mu$ s/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


# MECHANICAL EXPLODED VIEW

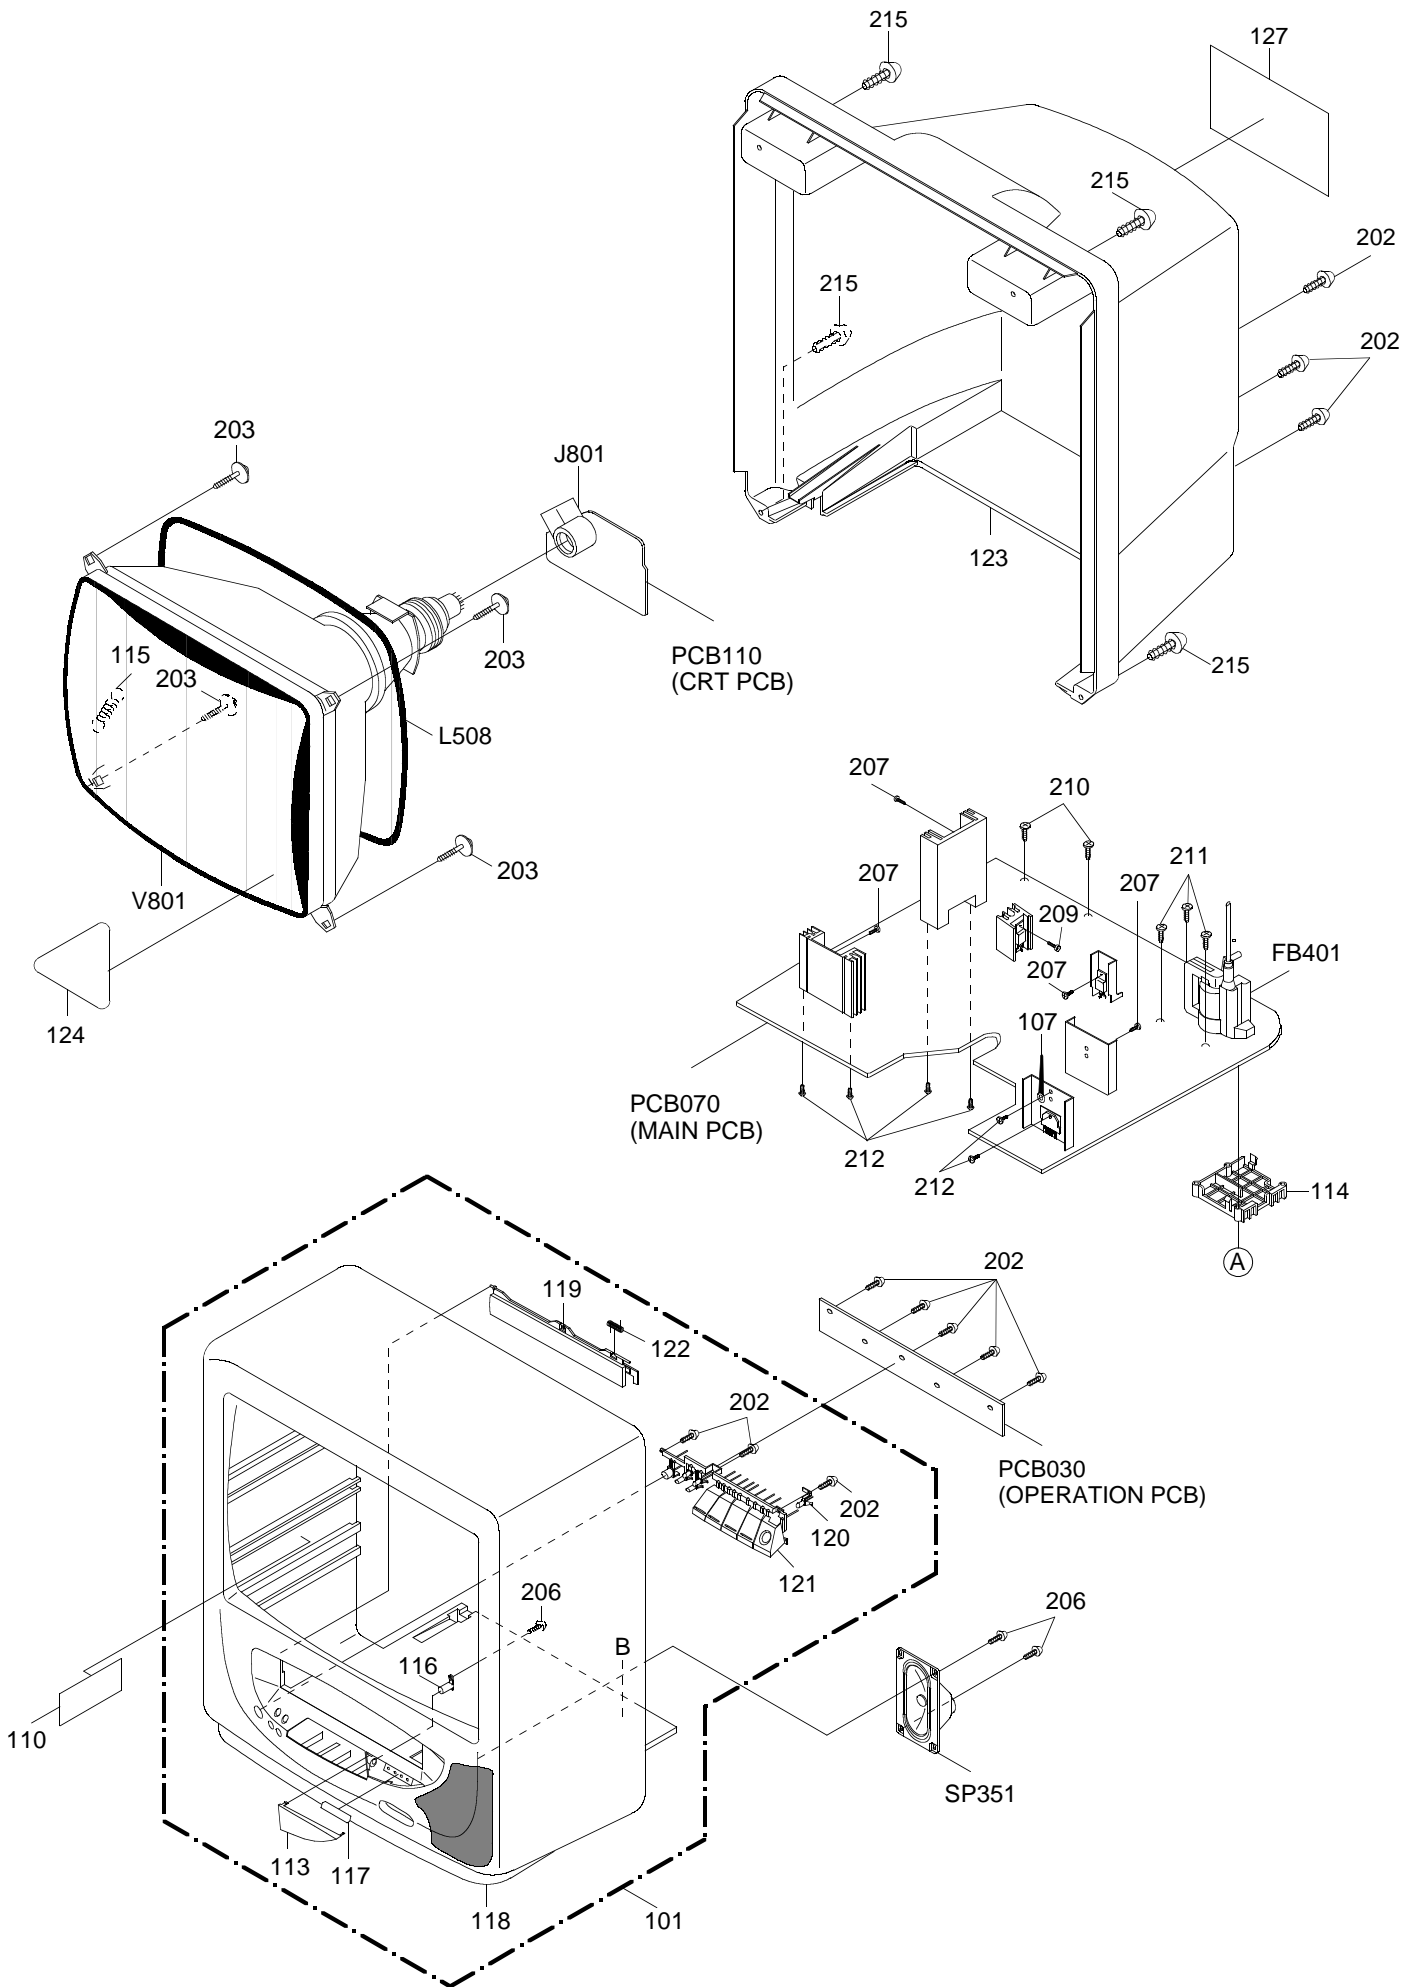

# MECHANICAL EXPLODED VIEW

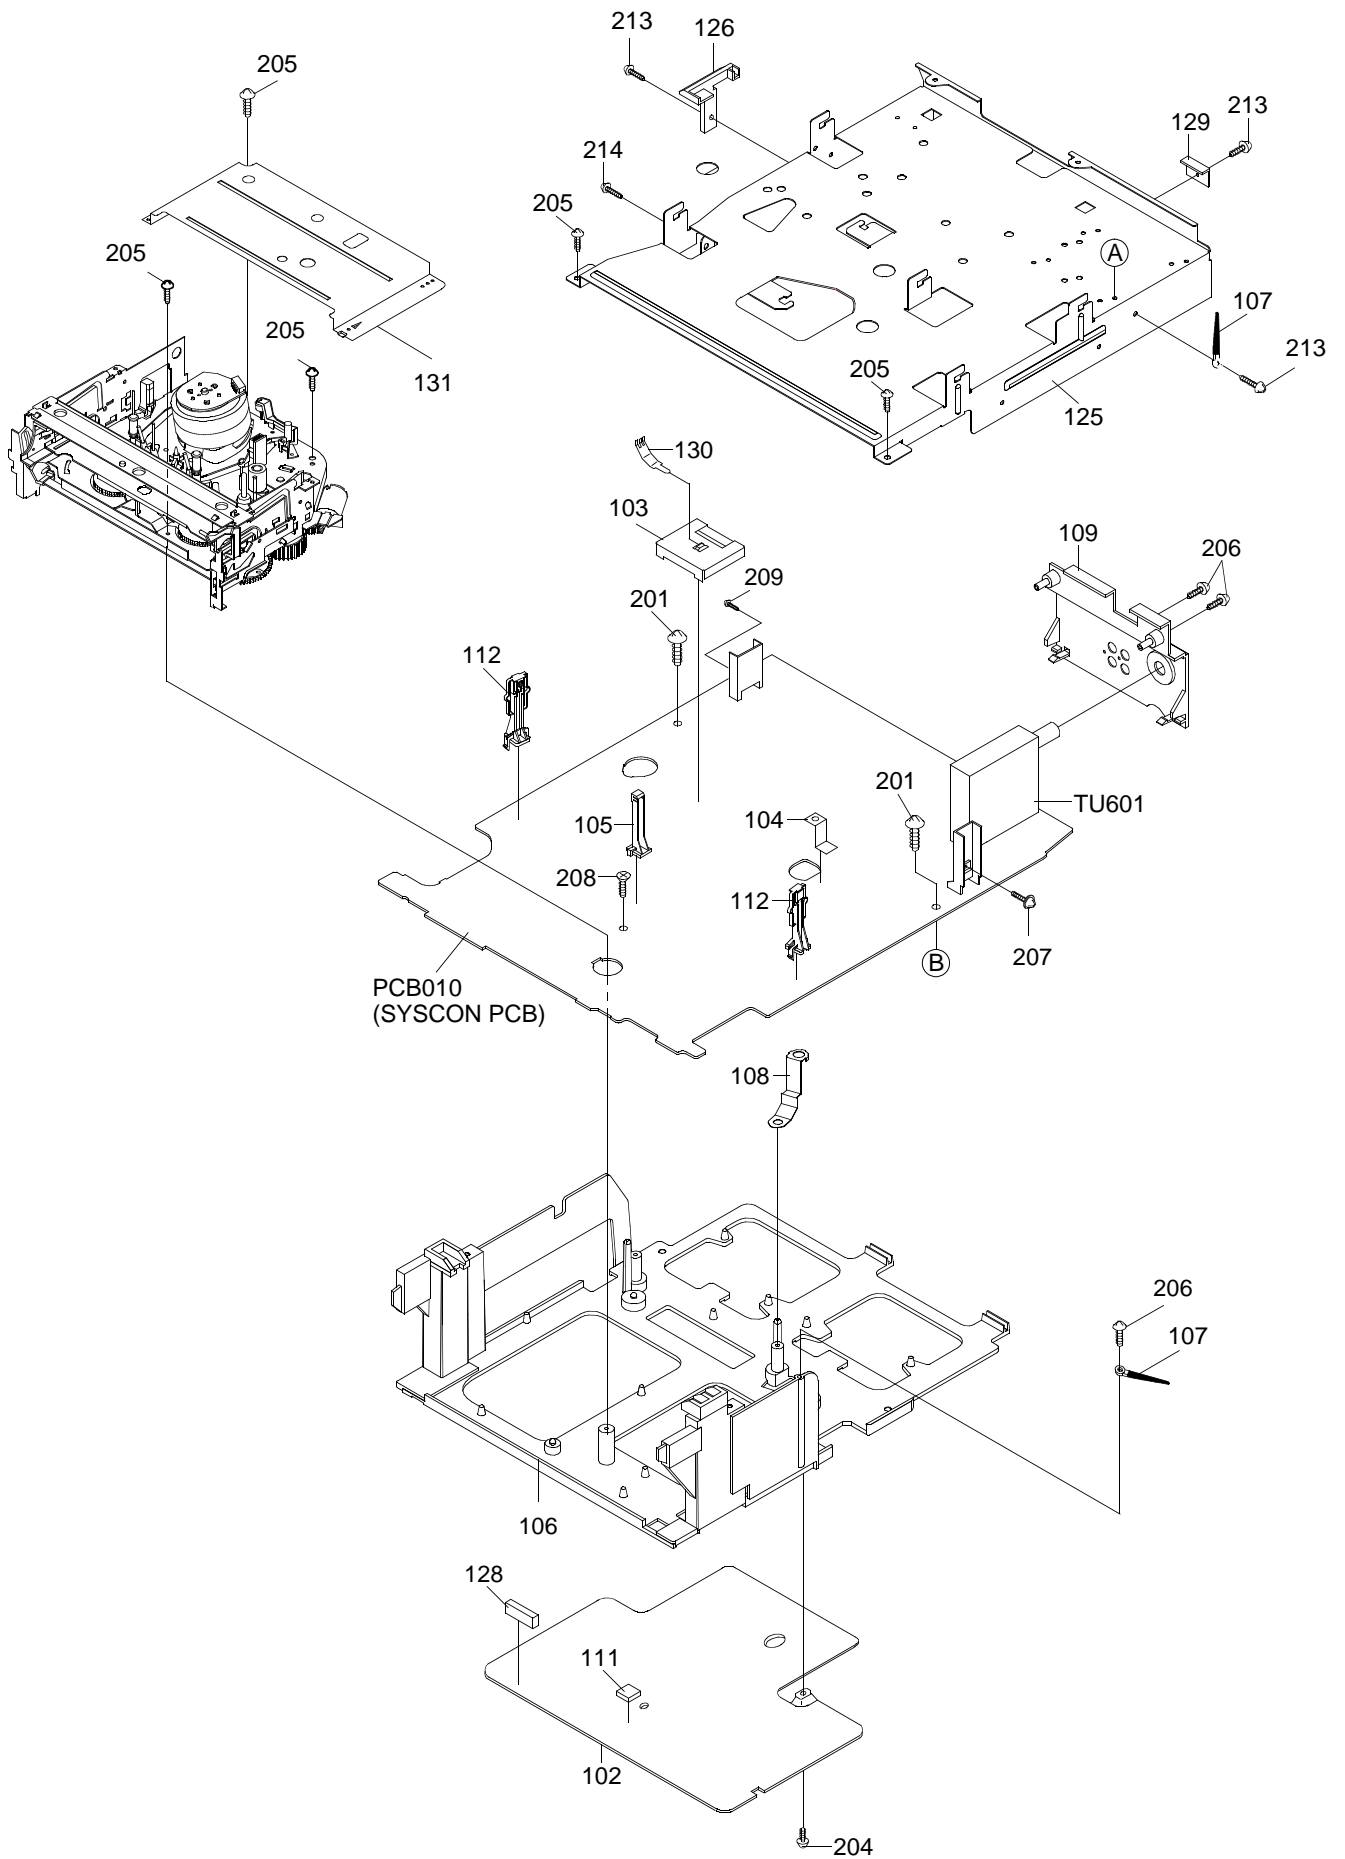


# CHASSIS EXPLODED VIEW (TOP VIEW)

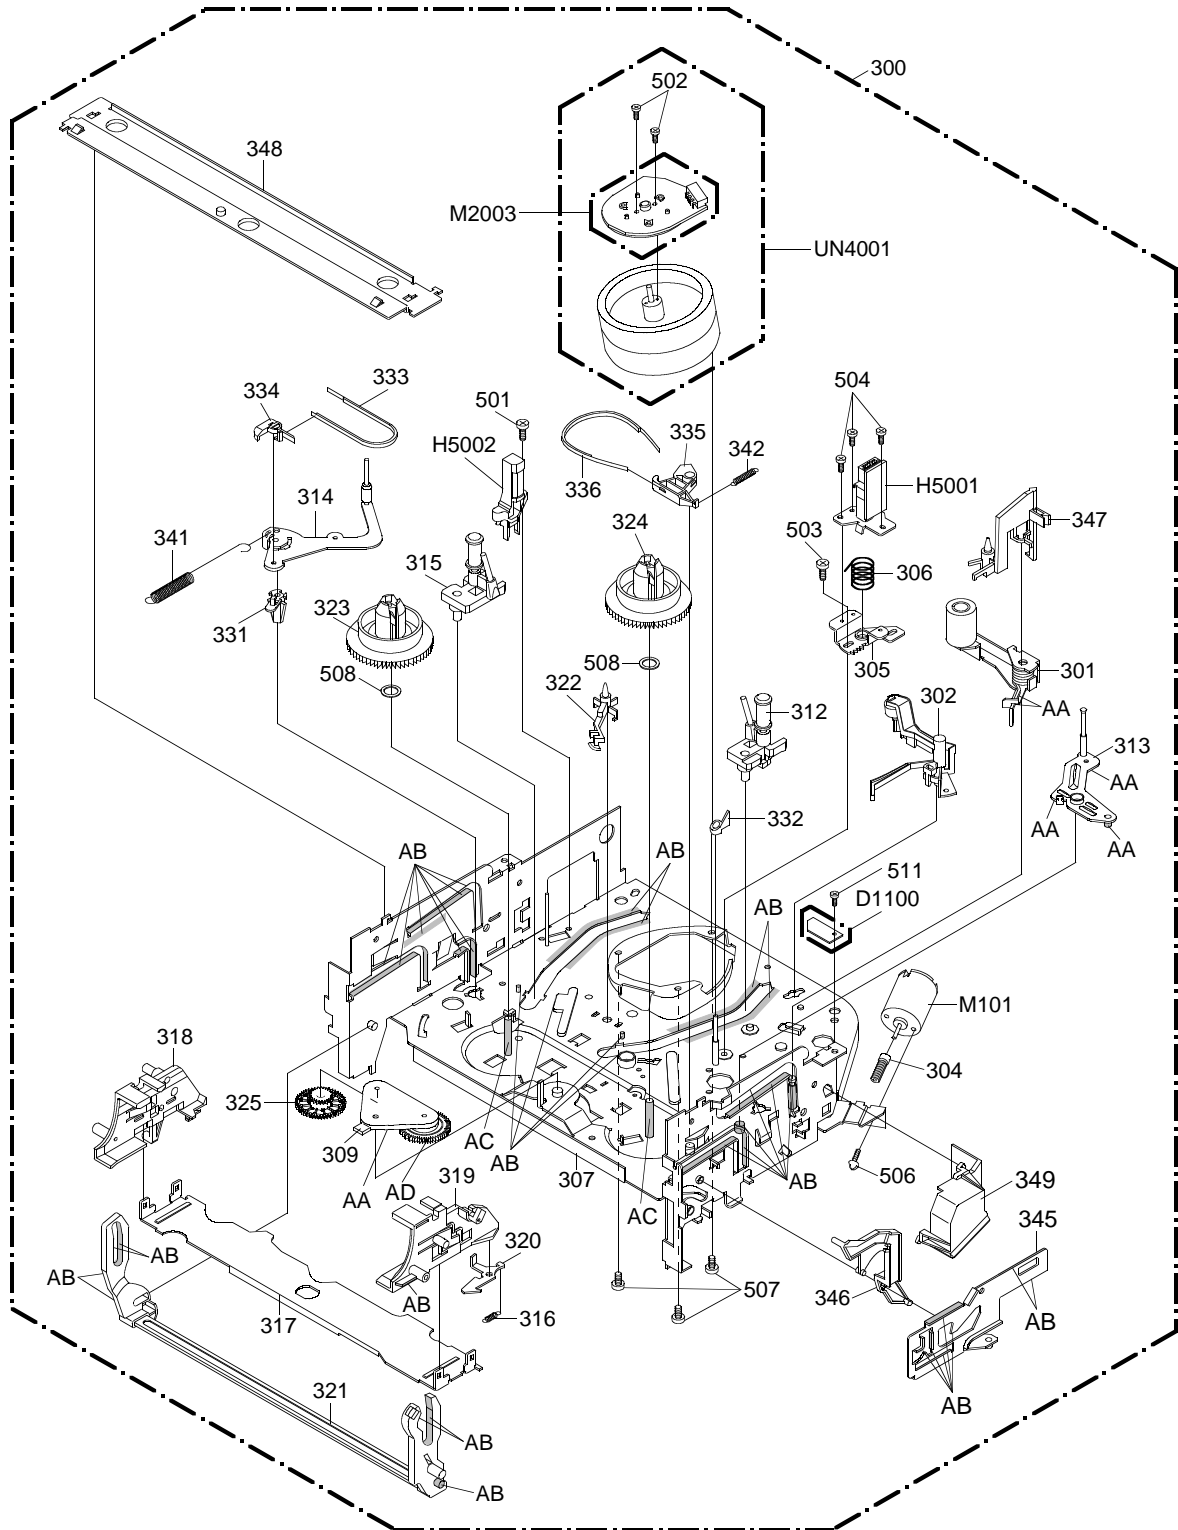

| CLASS  | PART NO. | MARK |
|--------|----------|------|
| GREASE | G-555G   | AA   |
|        | MG-33    | AB   |
|        | FG-84M   | AC   |
|        | FL-721   | AD   |

**NOTE:** Applying positions AA, AB, AC and AD for the grease are displayed for this section. Check if the correct grease is applied for each position.

# CHASSIS EXPLODED VIEW (BOTTOM VIEW)

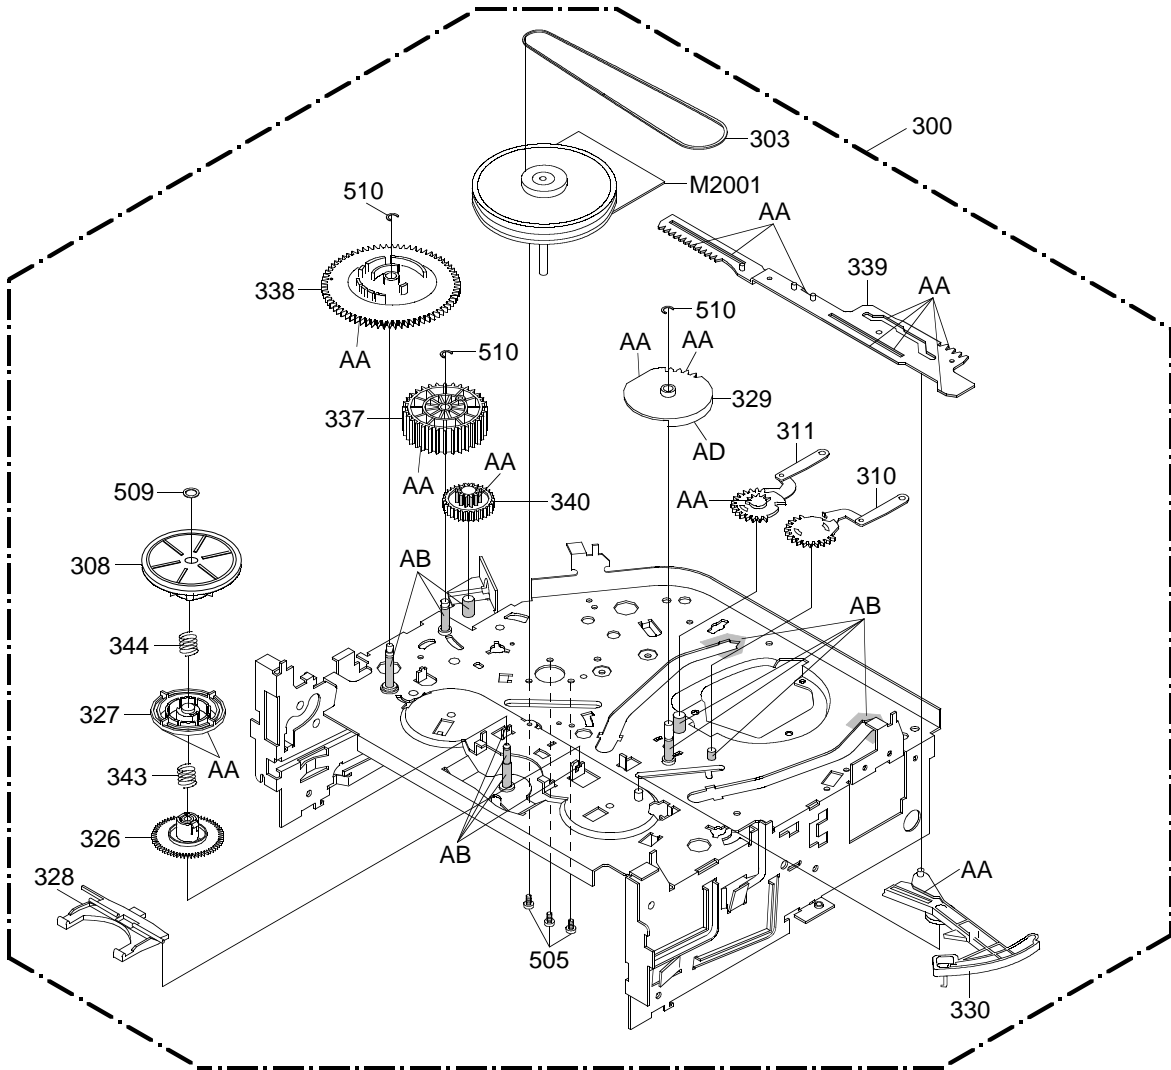

| CLASS  | PART NO. | MARK |
|--------|----------|------|
| GREASE | G-555G   | AA   |
|        | MG-33    | AB   |
|        | FG-84M   | AC   |
|        | FL-721   | AD   |

**NOTE:** Applying positions AA, AB, AC and AD for the grease are displayed for this section. Check if the correct grease is applied for each position.

# MECHANICAL REPLACEMENT PARTS LIST

| REF. NO. | PART NO.   | DESCRIPTION             |            |           |  |
|----------|------------|-------------------------|------------|-----------|--|
| 101      | A5A3A9C720 | CABINET,FRONT ASSY      |            |           |  |
| 102      | 752WSAA028 | SHIELD,BOTTOM           |            |           |  |
| 103      | 752WSA0230 | SHIELD,CASE HEAD AMP    |            |           |  |
| 104      | 753WSA0118 | PLATE,EARTH-SYSCON      |            |           |  |
| 105      | 85OP700037 | HOLDER,LED              |            |           |  |
| 106      | 761WPAA055 | HOLDER,DECK             |            |           |  |
| 107      | 8995034000 | CORD CLIP UL CO.        |            |           |  |
| 108      | 753WSA0144 | PLATE,BOTTOM-EARTH      |            |           |  |
| 109      | 771WPA0270 | PLATE,JACK              |            |           |  |
| 110      | 726000A023 | SHEET,CRT SERVICEMAN    |            |           |  |
| 111      | 800WFA0038 | CUSHION                 |            |           |  |
|          |            |                         |            | 10x10xT=2 |  |
| 112      | 85OP700038 | HOLDER,END SENSOR       |            |           |  |
| 113      | 711WPA0114 | PLATE,FRONT             |            |           |  |
| 114      | 761WPA0223 | HOLDER,FBT              |            |           |  |
| 115      | 741WUA0019 | SPRING,EARTH            |            |           |  |
| 116      | 713WPA0075 | GUIDE,REMOCON           |            |           |  |
| 117      | 7230006830 | SHEET,LED               |            |           |  |
| 118      | 701WPJB743 | CABINET,FRONT           |            |           |  |
| 119      | 712WPJB450 | FLAT,FLAP               |            |           |  |
| 120      | 735WPAA267 | BUTTON,REC              |            |           |  |
| 121      | 735WPDA546 | BUTTON,FRAME            |            |           |  |
| 122      | 743WKA0037 | SPRING,FLAP             |            |           |  |
| 123      | 702WPAA201 | CABINET,BACK            |            |           |  |
| 124      | 723000A824 | FILM,DECORATION         |            |           |  |
| 125      | 752WSAA046 | PLATE,DECK SHIELD ASS'Y |            |           |  |
| 126      | 761WPA0151 | HOLDER,M/PCB            |            |           |  |
| 127      | 722A08A119 | SHEET,RATING            |            |           |  |
| 128      | 800WFA0037 | CUSHION                 |            |           |  |
|          |            |                         |            | 15x5xT=6  |  |
| 129      | 761WPA0240 | HOLDER,TV-PCB           |            |           |  |
| 130      | 753WUAA006 | SPRING,EARTH HEAD AMP   |            |           |  |
| 131      | 752WSA0263 | SHIELD,COVER DECK       |            |           |  |
| 201      | 8117540B04 | SCREW,TAPPING(B0)       | TRUSS      | 4x20      |  |
| 202      | 8110630A04 | SCREW,TAP TITE(P)       | BRAZIER    | 3x10      |  |
| 203      | 8121F50B84 | SCREW,TAPPING(B0)       | FAI20 FLAT | 5x28      |  |
| 204      | 8110630604 | SCREW,TAP TITE(P)       | BRAZIER    | 3x6       |  |
| 205      | 8110630A24 | SCREW,TAP TITE(P)       | BRAZIER    | 3x12      |  |
| 206      | 8110630804 | SCREW,TAP TITE(P)       | BRAZIER    | 3x8       |  |
| 207      | 8109I30A04 | SCREW,TAP TITE(B)       | WH7        | 3x10      |  |
| 208      | 8110330804 | SCREW,TAP TITE(P)       | FLAT       | 3x8       |  |
| 209      | 8107630804 | SCREW,TAP TITE(S)       | BRAZIER    | 3x8       |  |
| 210      | 8107930604 | SCREW,CUP(S)            |            | 3x6       |  |
| 211      | 8107630B04 | SCREW,TAP TITE(S)       | BRAZIER    | 3x20      |  |
| 212      | 8109630802 | SCREW,TAP TITE(B)       | BRAZIER    | 3x8       |  |
| 213      | 8107630604 | SCREW,TAP TITE(S)       | BRAZIER    | 3x6       |  |
| 214      | 8109630604 | SCREW,TAP TITE(B)       | BRAZIER    | 3x6       |  |
| 215      | 8117540A64 | SCREW,TAPPING(B0)       | TRUSS      | 4x16      |  |
| ---      | JA5K0200   | POLYBAG,INSTRUCTION     |            |           |  |
| ---      | J5A3A901   | INSTRUCTION BOOK        |            |           |  |
| ---      | J5780102   | WARRANTY SHEET          |            |           |  |
| ---      | 792WHA0271 | PACKAGE,TOP             |            |           |  |
| ---      | 792WHA0272 | PACKAGE,BOTTOM          |            |           |  |
| ---      | 793WCDB303 | GIFT BOX                |            |           |  |
| ---      | A5A3A9I975 | INSTRUCTION BOOK KIT    |            |           |  |
| ---      | 791WHAA016 | LAMIFILM BAG            |            |           |  |



## CHASSIS REPLACEMENT PARTS LIST

| REF. NO. | PART NO.    | DESCRIPTION              | REF. NO. | PART NO.   | DESCRIPTION                         |
|----------|-------------|--------------------------|----------|------------|-------------------------------------|
| 300      | A5A317C420K | DECK ASSY<br>A5A317C420K | 501      | 8107226804 | SCREW,TAP TITE(S) BIND 2.6x8        |
|          |             |                          | 502      | 810A123504 | SEMS A M2.3x5.0                     |
| 301      | 85OA400234  | PINCH ROLLER BLOCK       | 503      | 8107226404 | SCREW,TAP TITE(S) BIND 2.6x4        |
| 302      | 85OA500026  | AHC ASS'Y                | 504      | 8102120604 | SCREW,PAN M2x6                      |
| 303      | 85OP200290  | BELT,CAPSTAN (S)         | 505      | 8109126604 | SCREW,TAP TITE(B) PAN 2.6x6         |
| 304      | 85OP600581  | WORM                     | 506      | 810A130404 | SCREW/WASHER(A) M3x4                |
| 305      | 85OP500083  | BASE,AC HEAD             | 507      | 810A126504 | SCREW/WASHER(A) M2.6x5              |
| 306      | 85OP800324  | SPRING,AC HEAD           | 508      | 82Q264713N | POLYSLIDER WASHER 2.6x4.7xT0.13     |
| 307      | 85OA000459  | MAIN CHASSIS ASS'Y       | 509      | 82P184505N | POLYSLIDER WASHER(CUT) 1.8x4.5xT0.5 |
| 308      | 85OA200089  | CLUTCH ASS'Y             |          |            |                                     |
| 309      | 85OA200090  | ARM IDLER ASS'Y          | 510      | 83ETW30000 | E-RING 3.0                          |
|          |             |                          | 511      | 8107226604 | SCREW,TAP TITE(S) BIND 2.6x6        |
| 310      | 85OA300065  | LOADING ARM S UNIT       |          |            |                                     |
| 311      | 85OA300066  | LOADING ARM T UNIT       | CD1501   | 122H071603 | CORD JUMPER SMCD-7X151              |
| 312      | 85OA400223  | INCLINED BASE T UNIT 3S  | CD1502   | 122Y021902 | CORD JUMPER 2Y021902                |
| 313      | 85OA400232  | P5 ARM ASS'Y 2           | D1100    | DAK0000170 | DEW SENSORCW/AL,PLATE HDP-05-26     |
| 314      | 85OA400235  | TENSION ARM ASS'Y 2      | H5001    | 1523D91034 | HEAD (AUDIO CONTROL) HVMXA1072A     |
| 315      | 85OA400231  | INCLINED BASE S UNIT     | H5002    | 1543D02013 | HEAD (FULL ERASE) HVFHP0032A        |
| 316      | 85OP800358  | SPRING,LOCKER            | △ M101   | 1596P98001 | MOTOR (LOADING) MXN13FB12K3         |
| 317      | 85OP900736  | CASS,HOLDER              | △ M2001  | 1510S98036 | CAPSTAN DD UNIT F2QVB08             |
| 318      | 85OP900748  | CASS,SIDE L              | △ M2003  | 1589S11014 | MICRO MOTOR I2OAL03                 |
| 319      | 85OP900749  | CASS,SIDE R              | △ UN4001 | A5A305A500 | CYLINDER UNIT ASS'Y A5A305A500      |
|          |             |                          |          |            |                                     |
| 320      | 85OP900739  | LOCKER,R                 |          |            |                                     |
| 321      | 85OA900228  | LINK UNIT                |          |            |                                     |
| 322      | 85OP000496  | POST,CASS GUIDE          |          |            |                                     |
| 323      | 85OP200316  | REEL,S (S)               |          |            |                                     |
| 324      | 85OP200317  | REEL,T (S)               |          |            |                                     |
| 325      | 85OP200308  | GEAR,IDLER               |          |            |                                     |
| 326      | 85OP200311  | GEAR,CLUTCH              |          |            |                                     |
| 327      | 85OP200312  | GEAR,COUPLING            |          |            |                                     |
| 328      | 85OP200313  | LEVER,CLUTCH             |          |            |                                     |
| 329      | 85OP300194  | GEAR,MAIN LOADING        |          |            |                                     |
|          |             |                          |          |            |                                     |
| 330      | 85OP400490  | LEVER,TENSION            |          |            |                                     |
| 331      | 85OP400492  | HOLDER,TENSION           |          |            |                                     |
| 332      | 85OP400520  | CAP.P4                   |          |            |                                     |
| 333      | 85OP400539  | BAND,TENSION             |          |            |                                     |
| 334      | 85OP400533  | CONNECT,TENSION          |          |            |                                     |
| 335      | 85OP600573  | ARM,BRAKE T              |          |            |                                     |
| 336      | 85OP600583  | BAND,BRAKE T             |          |            |                                     |
| 337      | 85OP600577  | CAM,PINCH ROLLER         |          |            |                                     |
| 338      | 85OP600578  | CAM,MAIN                 |          |            |                                     |
| 339      | 85OP600579  | ROD,MAIN                 |          |            |                                     |
|          |             |                          |          |            |                                     |
| 340      | 85OP600582  | GEAR,JOINT               |          |            |                                     |
| 341      | 85OP800322  | SPRING,TENSION           |          |            |                                     |
| 342      | 85OP800360  | SPRING,BRAKE T           |          |            |                                     |
| 343      | 85OP800355  | SPRING,COUPLING          |          |            |                                     |
| 344      | 85OP800356  | SPRING,RING              |          |            |                                     |
| 345      | 85OP900750  | LEVER,LINK 2             |          |            |                                     |
| 346      | 85OP900744  | LEVER,FLAP               |          |            |                                     |
| 347      | 85OP900745  | CASS,OPENER              |          |            |                                     |
| 348      | 85OP900746  | BRACKET,TOP 3V           |          |            |                                     |
| 349      | 85OP700039  | COVER,BOT                |          |            |                                     |

# ELECTRICAL REPLACEMENT PARTS LIST

| REF. NO.          | PART NO.   | DESCRIPTION               | REF. NO.      | PART NO.   | DESCRIPTION                   |
|-------------------|------------|---------------------------|---------------|------------|-------------------------------|
| <b>RESISTORS</b>  |            |                           | <b>DIODES</b> |            |                               |
| △ R404            | R4X5T6152F | R,METAL 1.5K OHM 1/6W     | △ D411        | D2LTPG06J0 | DIODE SILICON RMPG06J-G3      |
| △ R409            | R3X181221J | R,METAL OXIDE 220 OHM 1W  | △ D412        | D2LTPG06J0 | DIODE SILICON RMPG06J-G3      |
| △ R432            | R655U2010J | R,FUSE 1 OHM 1/2W         | △ D413        | D2LTPG06J0 | DIODE SILICON RMPG06J-G3      |
| △ R442            | R4X5T6123F | R,METAL 12K OHM 1/6W      | D501          | D97U01001B | DIODE,ZENER MTZJ10B T-77      |
| △ R443            | R4X5T6272F | R,METAL 2.7K OHM 1/6W     | D502          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| △ R447            | R65582680J | R,FUSE 68 OHM 1/2W        | △ D503        | D2WTRM11C0 | DIODE SILICON RM11C-EIC       |
| △ R450            | R635813R9J | R,FUSE 3.9 OHM 1W         | △ D504        | D2WTRM11C0 | DIODE SILICON RM11C-EIC       |
| △ R500            | R0G3K2275K | RC 2.7M OHM 1/2W          | D505          | D94TA27011 | DIODE ZENER HZ27-1L TD        |
| △ R501            | R5Y2CD010J | R,CEMENT 1 OHM 5W         | D506          | D230PF6D70 | DIODE SILICON FEPF6DT         |
|                   | R5X2CD010J | R,CEMENT 1 OHM 5W         | △ D507        | D97U01801B | DIODE,ZENER MTZJ18B T-77      |
| △ R502            | R3X28B100J | R,METAL OXIDE 10 OHM 3W   | D508          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| △ R505            | R002T2563J | RC 56K OHM 1/2W           | △ D509        | D2WXRU2AM0 | DIODE SILICON RU2AM-EIC       |
| △ R510            | R002T2155J | RC 1.5M OHM 1/2W          | △ D510        | D2WXRU2AM0 | DIODE SILICON RU2AM-EIC       |
| △ R511            | R002T4105J | RC 1M OHM 1/4W            | D511          | D28TELS6N6 | DIODE RECTIFIER 10EL6N-TA1B2  |
| △ R513            | R002T4102J | RC 1K OHM 1/4W            | D512          | D2WT011E10 | DIODE SILICON 11E1-EIC        |
| △ R520            | R002T4102J | RC 1K OHM 1/4W            | D513          | D2WT011E10 | DIODE SILICON 11E1-EIC        |
| △ R528            | R63581R22J | R,FUSE 0.22 OHM 1W        | D514          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| △ R529            | R002T4182J | RC 1.8K OHM 1/4W          | △ D515        | D97U03301B | DIODE,ZENER MTZJ33B T-77      |
| R530              | R3X181R18J | R,METAL OXIDE 0.18 OHM 1W | D516          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| △ R545            | R3X181331J | R,METAL OXIDE 330 OHM 1W  | D517          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| △ R547            | R3X28B4R7J | R,METAL OXIDE 4.7 OHM 3W  | D518          | D2LTPG06J0 | DIODE SILICON RMPG06J-G3      |
| R695              | R00204103J | RC 10K OHM 1/4W           | D519          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| △ R802            | R3X18A153J | R,METAL OXIDE 15K OHM 2W  | D520          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| △ R805            | R3X18A153J | R,METAL OXIDE 15K OHM 2W  | D521          | D2WXB290S0 | DIODE SILICON SB290S          |
| △ R810            | R3X18A153J | R,METAL OXIDE 15K OHM 2W  | D522          | D97U01601B | DIODE ZENER MTZJ16B T-77      |
| <b>CAPACITORS</b> |            |                           | D523          | D97U06R81B | DIODE,ZENER MTZJ6.8B T-77     |
| C321              | E0EL02332M | CE 3300 UF 16V            | D524          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
|                   | E02L02332M | CE 3300 UF 16V            | D528          | D97U05R61B | DIODE,ZENER MTZJ5.6B T-77     |
| △ C402            | E5EZTD2R2M | CE 2.2 UF 250V            | D530          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| △ C405            | E02LU5010M | CE 1 UF 50V               | △ D531        | D2WXB290S0 | DIODE SILICON SB290S          |
| △ C406            | E5EZU4101M | CE 100 UF 35V             | D533          | D2WXN49370 | DIODE SILICON 1N4937          |
| △ C407            | E02LF3102M | CE 1000 UF 25V            | D534          | D97U02001B | DIODE,ZENER MTZJ20B T-77      |
| C413              | P21503475K | CMP 4.7 UF 250V ECQ-E     | △ D535        | D2WTRM11C0 | DIODE SILICON RM11C-EIC       |
| C414              | P21503475K | CMP 4.7 UF 250V ECQ-E     | △ D536        | D2WTRM11C0 | DIODE SILICON RM11C-EIC       |
| C421              | E5EZ04102M | CE 1000 UF 35V            | △ D537        | D2WXB290S0 | DIODE SILICON SB290S          |
| △ C422            | E5EZTD010M | CE 1 UF 250V              | △ D539        | D2WT011E10 | DIODE SILICON 11E1-EIC        |
| △ C423            | P4J7F3394J | CMPP 0.39 UF 250V PMS     | △ D540        | D2WT011E10 | DIODE SILICON 11E1-EIC        |
|                   | P411F3394J | CMPP 0.39 UF 250V ECWF    | △ D541        | D2WT011E10 | DIODE SILICON 11E1-EIC        |
| △ C424            | P414F9682H | CMPP 0.0068UF 1.6KV ECW   | △ D542        | D28XELS2N2 | DIODE RECTIFIER 10ELS2N-TA2B5 |
|                   | P4N8FJ682H | CMPP 0.0068UF 1.25KV      | △ D545        | D2WXB290S0 | DIODE SILICON SB290S          |
| C425              | C03L0R713K | CC 0.001 UF 2KV R         | D546          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| C426              | C0PLRR713K | CC 0.001 UF 2KV RR        | D547          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| C430              | C0PLRR713K | CC 0.001 UF 2KV RR        | △ D548        | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| △ C433            | E02LU8220M | CE 22 UF 100V             | D550          | D97U06R81B | DIODE,ZENER MTZJ6.8B T-77     |
| △ C502            | C0JBB05H3K | CC 0.0022UF 500V B        | D551          | D97U02R21B | DIODE,ZENER MTZJ2.2B T-77     |
|                   | C034BN7H3K | CC 0.0022UF 2KV BN        | D601          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| △ C503            | C0JBB05H3K | CC 0.0022UF 500V B        | D602          | D97U08R21C | DIODE,ZENER MTZJ8.2C T-77     |
|                   | C034BN7H3K | CC 0.0022UF 2KV BN        | D603          | D97U06R81B | DIODE,ZENER MTZJ6.8B T-77     |
| △ C505            | P2472B224M | CMP 0.22UF 275V PHE840    | D605          | D28T11ESN1 | DIODE SILICON 11ES1N-TA1B2    |
| △ C507            | E51CGC471M | CE 470 UF 200V            | D606          | D97U01101B | DIODE,ZENER MTZJ11B T-77      |
|                   | E51CFC471M | CE 470 UF 200V            | D607          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| C513              | C0PLRR713K | CC 0.001 UF 2KV RR        | D608          | D97U06R81B | DIODE,ZENER MTZJ6.8B T-77     |
|                   | C03L0R713K | CC 0.001 UF 2KV R         | D609          | D97U06R81B | DIODE,ZENER MTZJ6.8B T-77     |
| C515              | E62FF3152M | CE 1500 UF 25V            | D610          | D2WXS1400  | DIODE SCHOTTKY SB140-EIC      |
| C518              | C03L0R7K3K | CC 0.0027UF 2KV R         | D611          | D2WXS1400  | DIODE SCHOTTKY SB140-EIC      |
| C519              | CB3930M13M | CC 0.001 UF 250V          | D612          | D97U06R81B | DIODE,ZENER MTZJ6.8B T-77     |
| C520              | CB3930M13M | CC 0.001 UF 250V          | D616          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| C523              | CB3930MH3M | CC 0.0022UF 250V          | D617          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| C525              | C0PLRR713K | CC 0.001 UF 2KV RR        | D618          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| △ C534            | E62NFC101M | CE 100 UF 200V            | D619          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| C535              | E5EZF2222M | CE 2200 UF 16V            | D620          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| △ C536            | E5EZF3102M | CE 1000 UF 25V            | D621          | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| △ C537            | E5EZF3102M | CE 1000 UF 25V            | D791          | 0021E2Q150 | LED LTL-4224-031A             |
| △ C538            | E02LU5470M | CE 47 UF 50V              |               | 002132Q040 | LED SLZ-936C-11-S-T1          |
| △ C540            | E02LU50R1M | CE 0.1 UF 50V             | D792          | 0021E2Q150 | LED LTL-4224-031A             |
| C544              | E5EZF3102M | CE 1000 UF 25V            |               | 002132Q040 | LED SLZ-936C-11-S-T1          |
| C551              | E62FF3152M | CE 1500 UF 25V            | D793          | 0021E2Q150 | LED LTL-4224-031A             |
| C801              | C0PLRR713K | CC 0.001 UF 2KV RR        |               | 002132Q040 | LED SLZ-936C-11-S-T1          |
| <b>DIODES</b>     |            |                           | D1002         | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| D401              | D2WT011E10 | DIODE SILICON 11E1-EIC    | D1003         | 0010100320 | INFRARED LED LNA2702L010R     |
| D402              | D2LTPG06J0 | DIODE SILICON RMPG06J-G3  | D1004         | D97U03R91B | DIODE,ZENER MTZJ3.9B T-77     |
| D403              | D97U06R81B | DIODE,ZENER MTZJ6.8B T-77 | D1014         | D97U05R11B | DIODE,ZENER MTZJ5.1B T-77     |
| D404              | D1VT001330 | DIODE,SILICON 1SS133T-77  | D4004         | D1VT001330 | DIODE,SILICON 1SS133T-77      |
| D405              | D1VT001330 | DIODE,SILICON 1SS133T-77  | D4201         | D97U05R61B | DIODE,ZENER MTZJ5.6B T-77     |
| D406              | D97U03001B | DIODE,ZENER MTZJ30B T-77  | D4206         | D97U01301B | DIODE,ZENER MTZJ13B T-77      |
| D407              | D97U03001B | DIODE,ZENER MTZJ30B T-77  | <b>ICS</b>    |            |                               |
| △ D409            | D94TA11B13 | DIODE ZENER HZ11B3L TD    | △ IC351       | I0FSP75230 | IC AN7523                     |

# ELECTRICAL REPLACEMENT PARTS LIST

| REF. NO.           | PART NO.   | DESCRIPTION                 | REF. NO.                        | PART NO.   | DESCRIPTION                              |
|--------------------|------------|-----------------------------|---------------------------------|------------|--|
| <b>ICS</b>         |            |                             | <b>COILS &amp; TRANSFORMERS</b> |            |  |
| IC351              | I0FSP7523N | IC AN7523N                  | L503                            | 021767100K | COIL 10 UH                               |
| △ IC401            | I01TD55220 | IC AN5522                   | △ L508                          | 028R140024 | COIL,DEGAUSS 8R140024                    |
| △ IC501            | I1KA97805A | IC KIA7805API               | L604                            | 02167F101J | COIL 100 UH                              |
| △ IC504            | I0QD023680 | IC NJM2368D                 | L607                            | 021LA6180K | COIL 18 UH                               |
| △ IC506            | 0002E00610 | PHOTO COUPLER               | L608                            | 02167F101J | COIL 100 UH                              |
| IC601              | I06FC61206 | IC M61206FP                 | L610                            | 021375101K | COIL 100 UH                              |
| △ IC603            | I1KA98R050 | IC KIA78R05PI               | L614                            | 021LA66R8K | COIL 6.8 UH                              |
| IC1001             | I56F57071A | IC OEC7071A                 | L615                            | 021375101K | COIL 100 UH                              |
| IC1002             | IC7J0311A0 | IC R3111N311A/C-TR          | L801                            | 021673101K | COIL 100 UH                              |
| IC1099             | A5A3A9C015 | IC S-24C04BDP-LA            | L1001                           | 021LA62R2K | COIL 2.2 UH                              |
| IC4001             | I03F3205M0 | IC LA71205M-MPB             | L4001                           | 02167F220J | COIL 22 UH                               |
| <b>TRANSISTORS</b> |            |                             | L4003                           | 02167F101J | COIL 100 UH                              |
| Q350               | T8YJ2412K0 | TRANSISTOR SILICON          | L4005                           | 02167F470J | COIL 47 UH                               |
| Q401               | TPATB03003 | COMPOUND TRANSISTOR         | L4006                           | 02167F470J | COIL 47 UH                               |
| Q402               | TF2002P4M0 | THYRISTOR                   | L4007                           | 032623004T | COIL TRAP STP-01064 or                   |
| Q404               | TNATJ03003 | COMPOUND TRANSISTOR         |                                 | 0326230038 | COIL,TRAP 2623003                        |
| △ Q405             | TC5T01627Y | TRANSISTOR SILICON          | L4008                           | 02167F101J | COIL 100 UH                              |
| △ Q406             | TD30026270 | TRANSISTOR SILICON          | L4009                           | 02167F220J | COIL 22 UH                               |
| Q407               | TPATB03003 | COMPOUND TRANSISTOR         | L4205                           | 02167F101J | COIL 100 UH                              |
| Q408               | TCATC31980 | TRANSISTOR,SILICON          | T401                            | 045009003J | TRANS,HORIZONTAL DRIVE ETH09K14BZ        |
| Q501               | TCATC31980 | TRANSISTOR,SILICON          | △ T501                          | 0481290804 | TRANSFORMER,SWITCHING 81290804           |
| △ Q502             | TC5T021204 | TRANSISTOR,SILICON          | △ T502                          | 048133020S | TRANSFORMER,SWITCHING 8133020S           |
| Q503               | TNATJ03003 | COMPOUND TRANSISTOR         | T4001                           | 031626009R | COIL,BIAS OSC 1626009                    |
| △ Q505             | T410032730 | FET                         | <b>JACKS</b>                    |            |  |
| Q507               | TCATC31980 | TRANSISTOR,SILICON          | J351                            | 060G131014 | RCA JACK HTJ-035-28A                     |
| Q509               | TCATC31980 | TRANSISTOR,SILICON          | △ J503                          | 0602602006 | JACK DC HEC0824-010010                   |
| Q510               | TJXG5NC500 | FET                         | J701                            | 060Q401075 | RCA JACK AV2-24D-5                       |
| Q511               | TCATC31980 | TRANSISTOR,SILICON          | △ J801                          | 066X120014 | SOCKET,CATHODE RAY TUBE HPS3200-010501   |
| Q512               | TAAT012714 | TRANSISTOR, SILICON         | J4201                           | 060Q401050 | RCA JACK AV2-20D-2                       |
| Q514               | TNATB03005 | COMPOUND TRANSISTOR         | J4202                           | 060Q401050 | RCA JACK AV2-20D-2                       |
| Q516               | TNATJ03003 | COMPOUND TRANSISTOR         | <b>SWITCHES</b>                 |            |  |
| Q518               | TNATB03005 | COMPOUND TRANSISTOR         | SW751                           | 0504101T34 | SWITCH,TACT EVQ21505R                    |
|                    | TNYTB03001 | COMPOUND TRANSISTOR         | SW791                           | 0504101T34 | SWITCH,TACT EVQ21505R                    |
|                    | TNYTB03001 | COMPOUND TRANSISTOR         | SW792                           | 0504101T34 | SWITCH,TACT EVQ21505R                    |
| Q601               | T6YJ1037K0 | TRANSISTOR,SILICON          | SW793                           | 0504101T34 | SWITCH,TACT EVQ21505R                    |
| Q604               | TPAAB05001 | COMPOUND TRANSISTOR         | SW794                           | 0504101T34 | SWITCH,TACT EVQ21505R                    |
| △ Q605             | TC10013840 | TRANSISTOR SILICON          | SW795                           | 0504101T34 | SWITCH,TACT EVQ21505R                    |
| △ Q606             | TC10013840 | TRANSISTOR SILICON          | SW796                           | 0504101T34 | SWITCH,TACT EVQ21505R                    |
| Q607               | T8YJ2412K0 | TRANSISTOR SILICON          | SW797                           | 0504101T34 | SWITCH,TACT EVQ21505R                    |
| △ Q608             | TC10013840 | TRANSISTOR SILICON          | SW798                           | 0504101T34 | SWITCH,TACT EVQ21505R                    |
| Q609               | T8YJ2412K0 | TRANSISTOR SILICON          | SW799                           | 0504101T34 | SWITCH,TACT EVQ21505R                    |
| Q610               | TB3T011310 | TRANSISTOR SILICON          | SW1001                          | 0508A11002 | SWITCH(LEAF) MXS01380MPP0                |
| Q611               | TNAAB05003 | COMPOUND TRANSISTOR         | <b>VARIABLE RESISTORS</b>       |            |  |
| Q651               | T8YJ2412K0 | TRANSISTOR SILICON          | VR401                           | V1K63Q4BTE | VOLUME,SEMI FIXED NVG6TLTAB473           |
| △ Q804             | TCA0042170 | TRANSISTOR SILICON          | VR402                           | V1K63H3BTE | VOLUME,SEMI FIXED NVG6TLTAB222           |
| △ Q805             | TCA0042170 | TRANSISTOR SILICON          | VR501                           | V1163H3BTC | VOLUME,SEMI FIXED EVNVCYAA03BE3          |
| △ Q806             | TCA0042170 | TRANSISTOR SILICON          | VR502                           | V1163Q3BTC | VOLUME,SEMI FIXED EVNVCYAA03BQ3          |
| Q1002              | 0000M00390 | PHOTO TRANSISTOR            | <b>P.C.BOARD ASSEMBLIES</b>     |            |  |
| Q1003              | 0002700680 | PHOTO COUPLER               | PCB010                          | A5A3A9C010 | PCB ASS'Y VMA245B                        |
|                    | 0002700670 | PHOTO COUPLER               | PCB030                          | A5A3A0I030 | PCB ASS'Y TE9980B                        |
| Q1004              | TNAAC05002 | COMPOUND TRANSISTOR         | PCB070                          | A5A3A0I070 | PCB ASS'Y TMA527A                        |
| Q1005              | 0002700690 | PHOTO COUPLER               | PCB110                          | A5A3A0I110 | PCB ASS'Y TCA386A                        |
|                    | 0002700590 | PHOTO COUPLER               | <b>MISCELLANEOUS</b>            |            |  |
| Q1006              | TNAAC05002 | COMPOUND TRANSISTOR         | △ ANT001                        | 125C108027 | ANTENNA ROD T4-216BNK-BK                 |
| Q1008              | T6YJ1037K0 | TRANSISTOR,SILICON          | B301                            | 024HT03553 | CORE,BEADS W5RH3.5X5X1.0                 |
| Q1009              | 0002700680 | PHOTO COUPLER               | B501                            | 024HT03564 | CORE,BEADS W4BRH3.5X6X1                  |
|                    | 0002700670 | PHOTO COUPLER               | B502                            | 024HT03553 | CORE,BEADS W5RH3.5X5X1.0                 |
| Q1013              | 0000M00390 | PHOTO TRANSISTOR            | B503                            | 024HT03564 | CORE,BEADS W4BRH3.5X6X1                  |
| Q4001              | TCATC31980 | TRANSISTOR,SILICON          | B505                            | 024HT03553 | CORE,BEADS W5RH3.5X5X1.0                 |
| Q4002              | TCATC31980 | TRANSISTOR,SILICON          | B507                            | 024HT03553 | CORE,BEADS W5RH3.5X5X1.0                 |
| Q4003              | TPAAC05002 | COMPOUND TRANSISTOR         | CD351                           | 06CU272301 | CORD CONNECTOR CU272301                  |
| Q4005              | TAATA12660 | TRANSISTOR,SILICON          | CD352                           | 06CU12441A | CORD CONNECTOR CU12441A                  |
| Q4006              | TCAT032034 | TRANSISTOR, SILICON         | △ CD501                         | 120R414903 | CORD AC BUSH 0R414903                    |
| Q4007              | T8YJ2412K0 | TRANSISTOR SILICON          | CD502                           | 06CH01423A | CORD CONNECTOR CH01423A                  |
| Q4009              | T6YJ1037K0 | TRANSISTOR,SILICON          | △ CD504                         | 121B164101 | CORD,CAR BATTERY SI-PC107-67             |
| Q4010              | T6YJ1037K0 | TRANSISTOR,SILICON          | CD601                           | 06CH01006A | CORD CONNECTOR CH01006A                  |
| Q4012              | T8YJ2412K0 | TRANSISTOR SILICON          | CD757                           | 06CU2A2501 | CORD CONNECTOR CU2A2501                  |
| Q4013              | T8YJ2412K0 | TRANSISTOR SILICON          | CD801                           | 06CU82039A | CORD CONNECTOR SM1098-009-1A             |
| Q4204              | TNAAB05003 | COMPOUND TRANSISTOR         | CD803                           | WDL6026038 | FLAT CABLE AWM2468 AWG26 6C BLACK 260MM  |
| Q4205              | TNAAB05003 | COMPOUND TRANSISTOR         | CD810                           | WJL6830038 | FLAT CABLE AWM2468 AWG26 11C GRAY 300 MM |
| Q4206              | TNAAB05003 | COMPOUND TRANSISTOR         | CD820                           | WKL6026038 | FLAT CABLE AWM2468 AWG26 12C BLACK 260MM |
| Q4210              | T6YJ1037K0 | TRANSISTOR,SILICON          | CD850                           | WCL6830038 | FLAT CABLE AWM2468 AWG26 5C GRAY 300MM   |
| Q4211              | T8YJ2412K0 | TRANSISTOR SILICON          | CF601                           | 1029045R7G | FILTER,SAW TSF5229P3                     |
| Q4212              | T6YJ1037K0 | TRANSISTOR,SILICON          | CF603                           | 1011T4R504 | FILTER,CERAMIC EFCT4R5Y5A                |
|                    |            |                             | CF604                           | 1011T4R517 | FILTER,CERAMIC EFCT4R5MW5                |
| L401               | 021679472K | COIL 4.7 MH                 | CP401                           | 069S450089 | CONNECTOR PCB SIDE A1561WV2-A5P          |
| △ L501             | 029T000092 | COIL,LINE FILTER 1R0A103F24 | CP402                           | 069W01001A | CONNECTOR PCB SIDE 003P-2100             |

# ELECTRICAL REPLACEMENT PARTS LIST

| REF. NO.             | PART NO.   | DESCRIPTION         |                  |
|----------------------|------------|---------------------|------------------|
| <b>MISCELLANEOUS</b> |            |                     |                  |
| △ CP403              | 069S420110 | CONNECTOR PCB SIDE  | A1561WV2-2P      |
| CP502                | 069R2B0589 | CONNECTOR PCB SIDE  | 52147-1110       |
| CP601                | 069W01001A | CONNECTOR PCB SIDE  | 003P-2100        |
| CP602                | 069X170379 | CONNECTOR PCB SIDE  | 07JQ-ST          |
| CP605                | 069R220021 | CONNECTOR PCB SIDE  | 52287-0211       |
| CP801                | 069S320010 | CONNECTOR PCB SIDE  | A2361WV2-2P      |
| CP820                | 069R2C0589 | CONNECTOR PCB SIDE  | 52147-1210       |
| CP850                | 069R250589 | CONNECTOR PCB SIDE  | 52147-0510       |
| CD4001               | 122F061502 | CORD JUMPER         | 2F061502         |
|                      | 122L061501 | CORD JUMPER         | 2L061501         |
| CP1001               | 06972C0010 | CONNECTOR PCB SIDE  | TMC-J12P-B2      |
| CP2201               | 069S2A0629 | CONNECTOR PCB SIDE  | A2001WV2-10P     |
| CP4001               | 0697240600 | CONNECTOR PCB SIDE  | TOC-C04X-B1      |
| CP4002               | 069J760029 | CONNECTOR PCB SIDE  | IMSA-9604S-06Z14 |
| CP4003               | 0697120320 | CONNECTOR PCB SIDE  | TMC-T02X-E1      |
| CP4202               | 069S270629 | CONNECTOR PCB SIDE  | A2001WV2-7P      |
| CP803A               | 067U006049 | WIRE HOLDER         | B2013H02-6P      |
| CP803B               | 069R260589 | CONNECTOR PCB SIDE  | 52147-0610       |
| CP805B               | 067U005049 | WIRE HOLDER         | B2013H02-5P      |
| CP810B               | 067U011029 | WIRE HOLDER         | B2013H02-11P     |
| CP820B               | 067U013029 | WIRE HOLDER         | B2013H02-13P     |
| CUS012               | 800WFAA007 | CUSHION B           |                  |
| CUS013               | 800WFAA008 | CUSHION C           |                  |
| EL001                | 124116281A | EYE LET             | XRY16X28BD       |
| EL002                | 124120301A | EYE LET             | XRY20X30BD       |
| △ F501               | 081PC05004 | FUSE                | 51MS050LCC       |
|                      | 081PA05003 | FUSE                | 233005-MB000     |
| △ F502               | 081PC2R504 | FUSE                | 51MS025LCC       |
| △ FB401              | 043214034F | TRANSFORMER,FLYBACK | 3214034F         |
| FH501                | 06710T0006 | HOLDER,FUSE         | EYF-52BC         |
| FH502                | 06710T0006 | HOLDER,FUSE         | EYF-52BC         |
| FH503                | 06710T0006 | HOLDER,FUSE         | EYF-52BC         |
| FH504                | 06710T0006 | HOLDER,FUSE         | EYF-52BC         |
| △ ICP502             | 0835C10003 | MICRO FUSE          | 20N_10KFS        |
| OS753                | 077Q037002 | REMOTE RECEIVER     | PIC-37143TH5     |
| △ RY503              | 0560V10118 | RELAY               | ALKS325          |
| △ SP351              | 070C533019 | SPEAKER             | SG04D11BNA       |
| TM101                | 076R0CG020 | TRANSMITTER         | R25-1729         |
| △ TU601              | 0145K00056 | TUNER,VHF-UHF       | TECC1040PG32E    |
| △ V801               | 098Y1404B9 | CRT W/DY            | A34JXV70X53N45   |
| X602                 | 100CT3R505 | CRYSTAL             | HC-49/C          |
| X1001                | 100CT01207 | CRYSTAL             | HC-49/U-S        |
| X1002                | 100DA32R01 | CRYSTAL             | DT-26            |
| X4001                | 100CT3R502 | CRYSTAL             | HC-49/U          |

**RESISTOR**

RC..... CARBON RESISTOR

**CAPACITORS**

CC..... CERAMIC CAPACITOR  
 CE..... ALUMI ELECTROLYTIC CAPACITOR  
 CP..... POLYESTER CAPACITOR  
 CPP..... POLYPROPYLENE CAPACITOR  
 CPL..... PLASTIC CAPACITOR  
 CMP..... METAL POLYESTER CAPACITOR  
 CMPL..... METAL PLASTIC CAPACITOR  
 CMPP..... METAL POLYPROPYLENE CAPACITOR

|          |          |
|----------|----------|
| SPEC.NO. | M5A3-A9C |
| O/R NO.  | K245031  |



**MVT2137**

# **SERVICE MANUAL**

---

**COLOR TELEVISION/VIDEO CASSETTE RECORDER**

**REVISION 1  
MFR'S VERSION C**

| MFR'S VERSION | PCB010  | CRT            |
|---------------|---------|----------------|
| A             | VMA245B | A34JXV70X53N45 |
| C             | VMA245D | A34AGT13X98(L) |

# PCB VERSION UP


## ELECTRICAL REPLACEMENT PARTS LIST

| REF. NO. | MFR'S VERSION A |   | MFR'S VERSION C |   |
|----------|-----------------|---|-----------------|---|
|          | PART NO.        | DESCRIPTION                             | PART NO.        | DESCRIPTION                             |
| PCB010   | A5A3A9C010      | SYSCON PCB ASS'Y (VERSION A)<br>VMA245B | A5A3A9C010      | SYSCON PCB ASS'Y (VERSION C)<br>VMA245D |

SYSCON PCB's are interchangeable.

# Change of CRT

## ELECTRICAL REPLACEMENT PARTS LIST

| REF. NO.   | MFR'S VERSION A |                         | MFR'S VERSION C |                         |
|--|-----------------|-------------------------|-----------------|-------------------------|
|  | PART NO.        | DESCRIPTION             | PART NO.        | DESCRIPTION             |
|  V801 | 098Y1404B9      | CRT W/DY A34JXV70X53N45 | 098Q1404B2      | CRT W/DY A34AGT13X98(L) |

CRT are interchangeable.

|          |          |
|----------|----------|
| SPEC.NO. | M5A3-A9A |
| O/R NO.  | K2Y5063  |