


Programmes After Market Services NHE-8/9 Series Transceivers

Disassembly & Troubleshooting


CONTENTS

Disassembly	3
Troubleshooting	4
General	4
System Module Troubleshooting	4
Phone is totally dead	5
Flash programming doesn't work	6
Power doesn't stay on or the phone is jammed	9
Display information: Contact service	11
Phone doesn't register (no serv) or doesn't make a call	12
SIM Card is out of order (insert SIM card or card rejected)	14
Audio fault	17
Charging fault	19
UIF Module troubleshooting	20
UIF- connector	20
LCD	20
Microphone	20
Earpiece	20
Buzzer	20
Keyboard and display LEDs	21


Disassembly

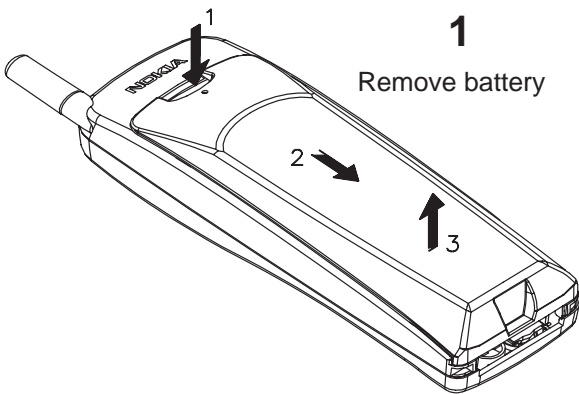

1
Remove battery

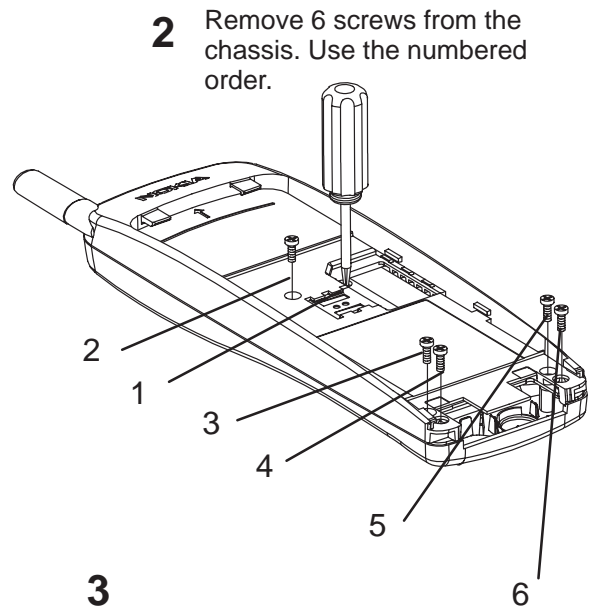


2 Remove 6 screws from the chassis. Use the numbered order.

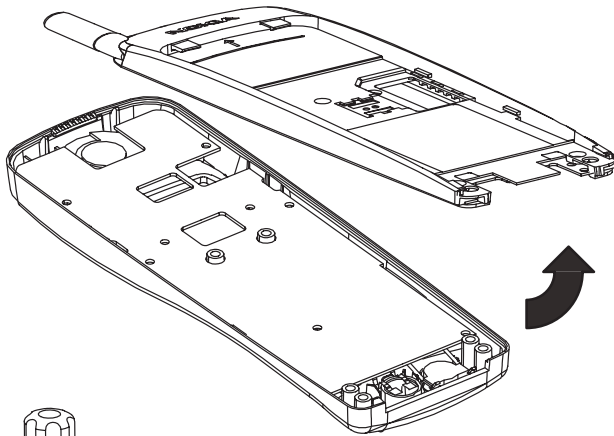


3

Remove the B cover beginning from the bottom of the phone. Be careful not to damage the board to board connector!

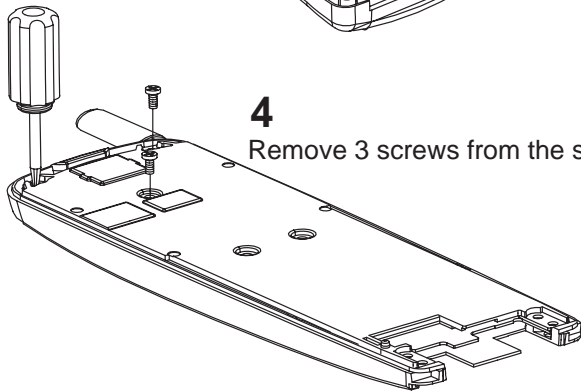


4
Remove 3 screws from the shield

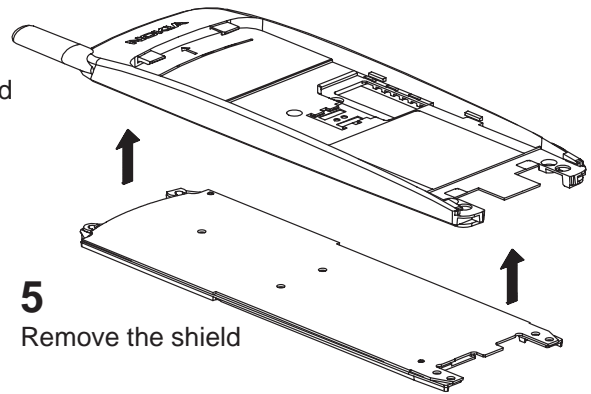

5
Remove the shield

6
Re-assemble the phone in reverse order. Note! Use the numbered order when assembling the 6 screws and tighten them to a torque of 0.15 Nm.

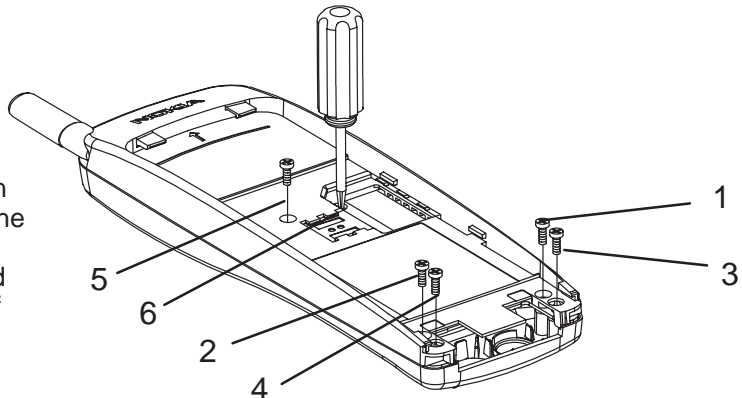

Troubleshooting

General

The purpose is to define the faulty module block, and then to locate the faulty component. The trouble shooting diagram has been planned so that the fault, whatever it is, can be found by as simple measurements as possible.

The flow charts give you the overview of the blocks. The purpose is that you proceed through the flow diagram so that, if your answer is YES for the asked question, go straight to the next level, but if your answer is NO, you have to go the sub-branch.

Required servicing equipment:

- PC for Service Software
- Power supply (2.0 A)
- Digital multimeter
- Oscilloscope
- Spectrum analyzer
- Signal generator
- RF cables
- Modular cable
- RS232/MBUS adapter
- HP8922H or equivalent
- RF measuring chassis

System Module Troubleshooting

The following hints should facilitate finding the cause of the problem when the circuitry seems to be faulty. This trouble shooting guide is divided into the following sections.


1. Phone is totally dead
2. Flash programming doesn't work
3. Power doesn't stay on or the phone is jammed
4. Display information: Contact Service
5. Phone doesn't register to the network or phone doesn't make a call.
6. Plug in SIM card is out of order (insert SIM card or card rejected).
7. Audio fault.

The first thing to do is carry out a thorough visual check of the module. Ensure in particular that:

- a) there is not any mechanical damage
- b) soldered joints are OK

Phone is totally dead

Trouble shooting diagram for this fault is represented in figure below
 Check at first that the battery back is OK and it is not empty.
 This kind of fault has been limited around the system connector (X100)
 and the PSCLD (N300).

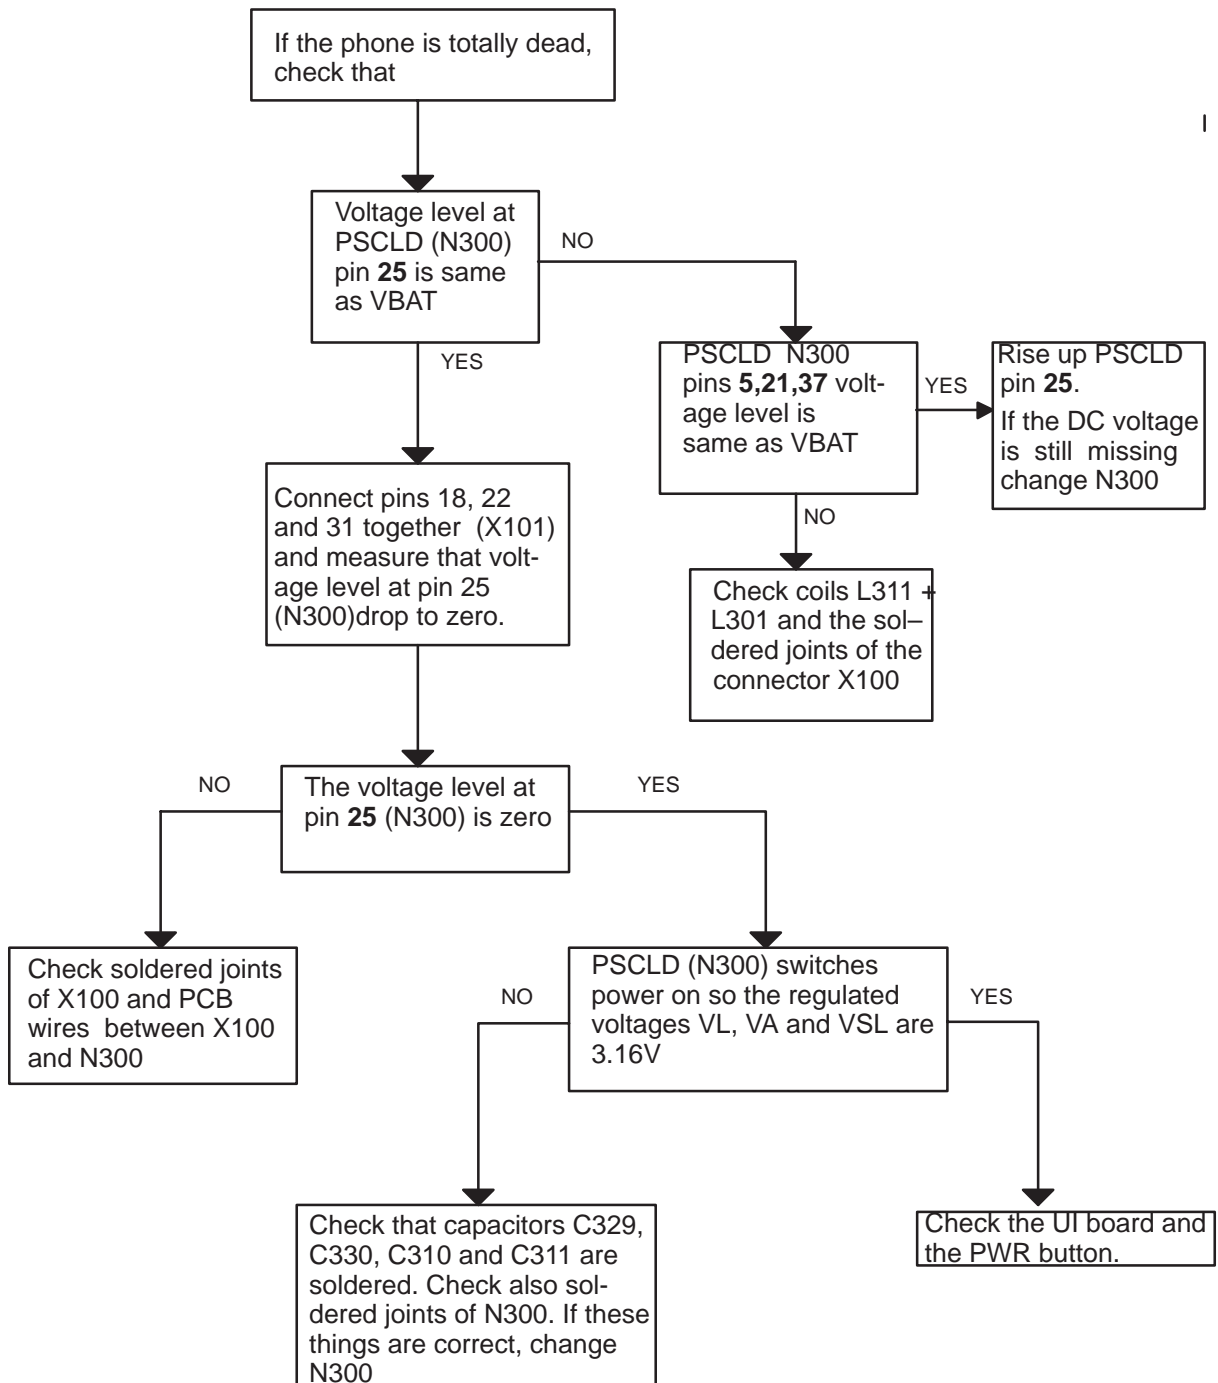

Flash programming doesn't work

In error cases, the flash programmer can give some information about a fault.

The fault information messages could be:


- MCU doesn't boot
- MCU flash Vpp error
- Serial data line failure
- Serial clock line failure
- External RAM fault
- Algorithm file or alias ID don't find


In cases that the the flash programming doesn't succeed, there is a possibility to test the interface between the ASIC and the MCU. This test is useful to do, when the fault information is: MCU doesn't boot or Serial clock line failure.

The test procedure is following:

1. Connect a short circuit wire between Asic pins 137 and gnd.
2. Switch power on.
3. If the reset line of the MCU rises up, the interface is OK. Otherwise the reset line stays low.

Note: *this test can only find short circuits, not open pins.*

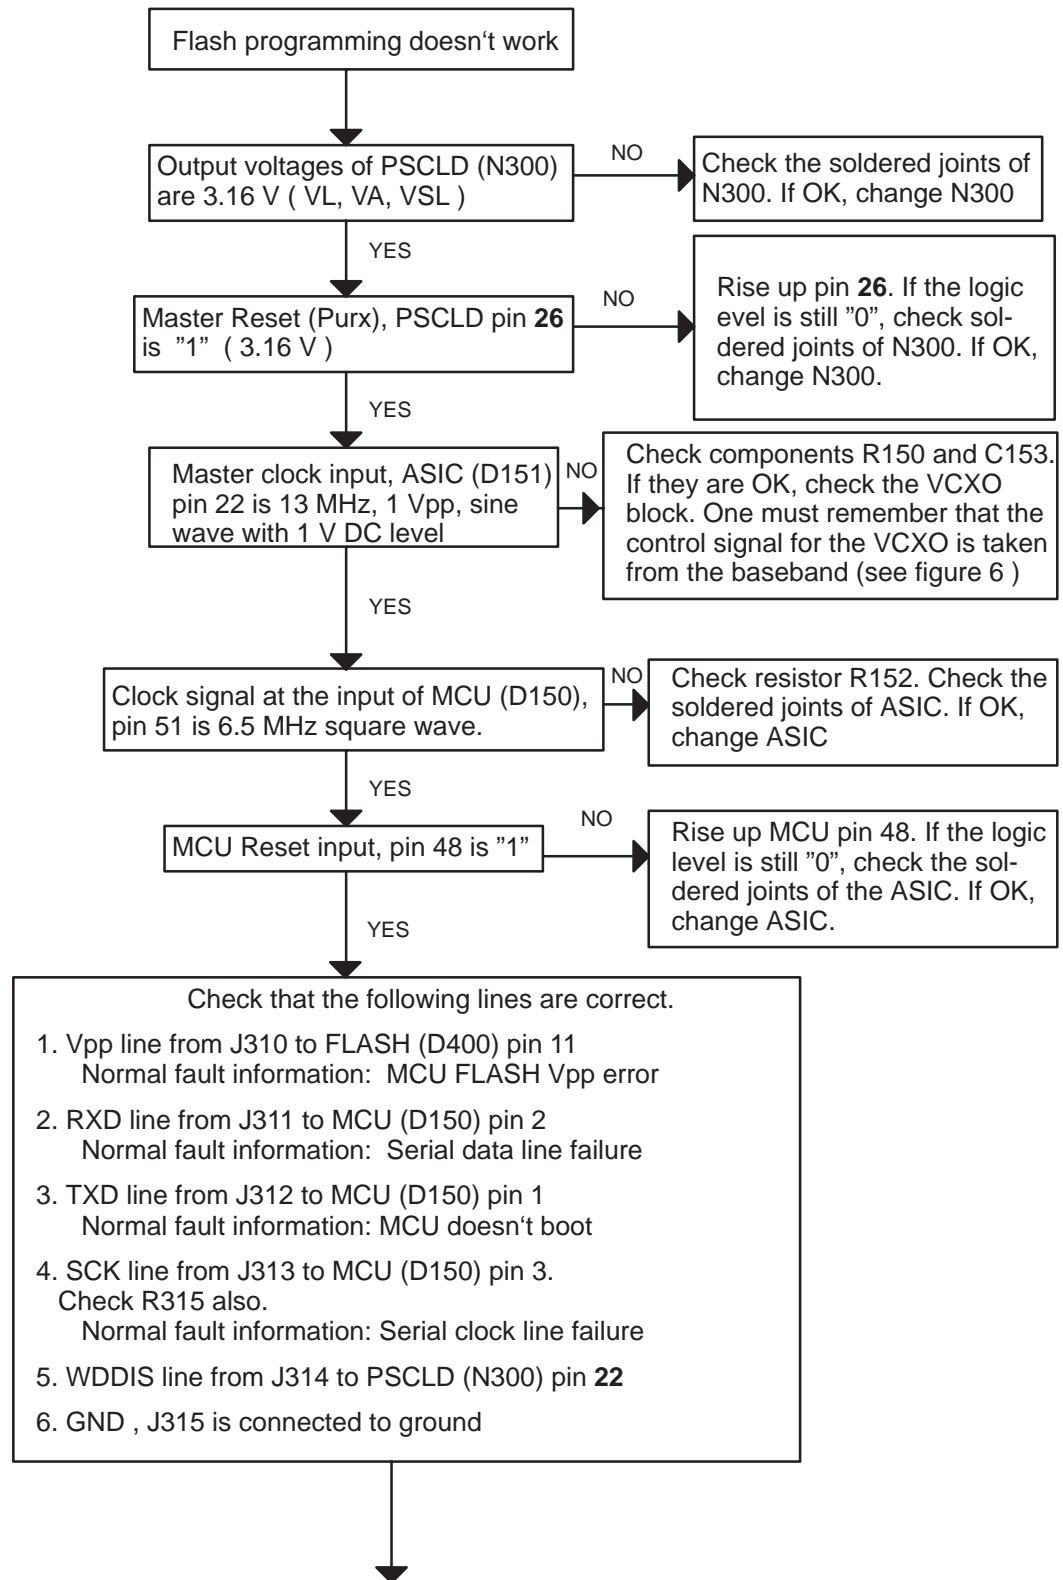

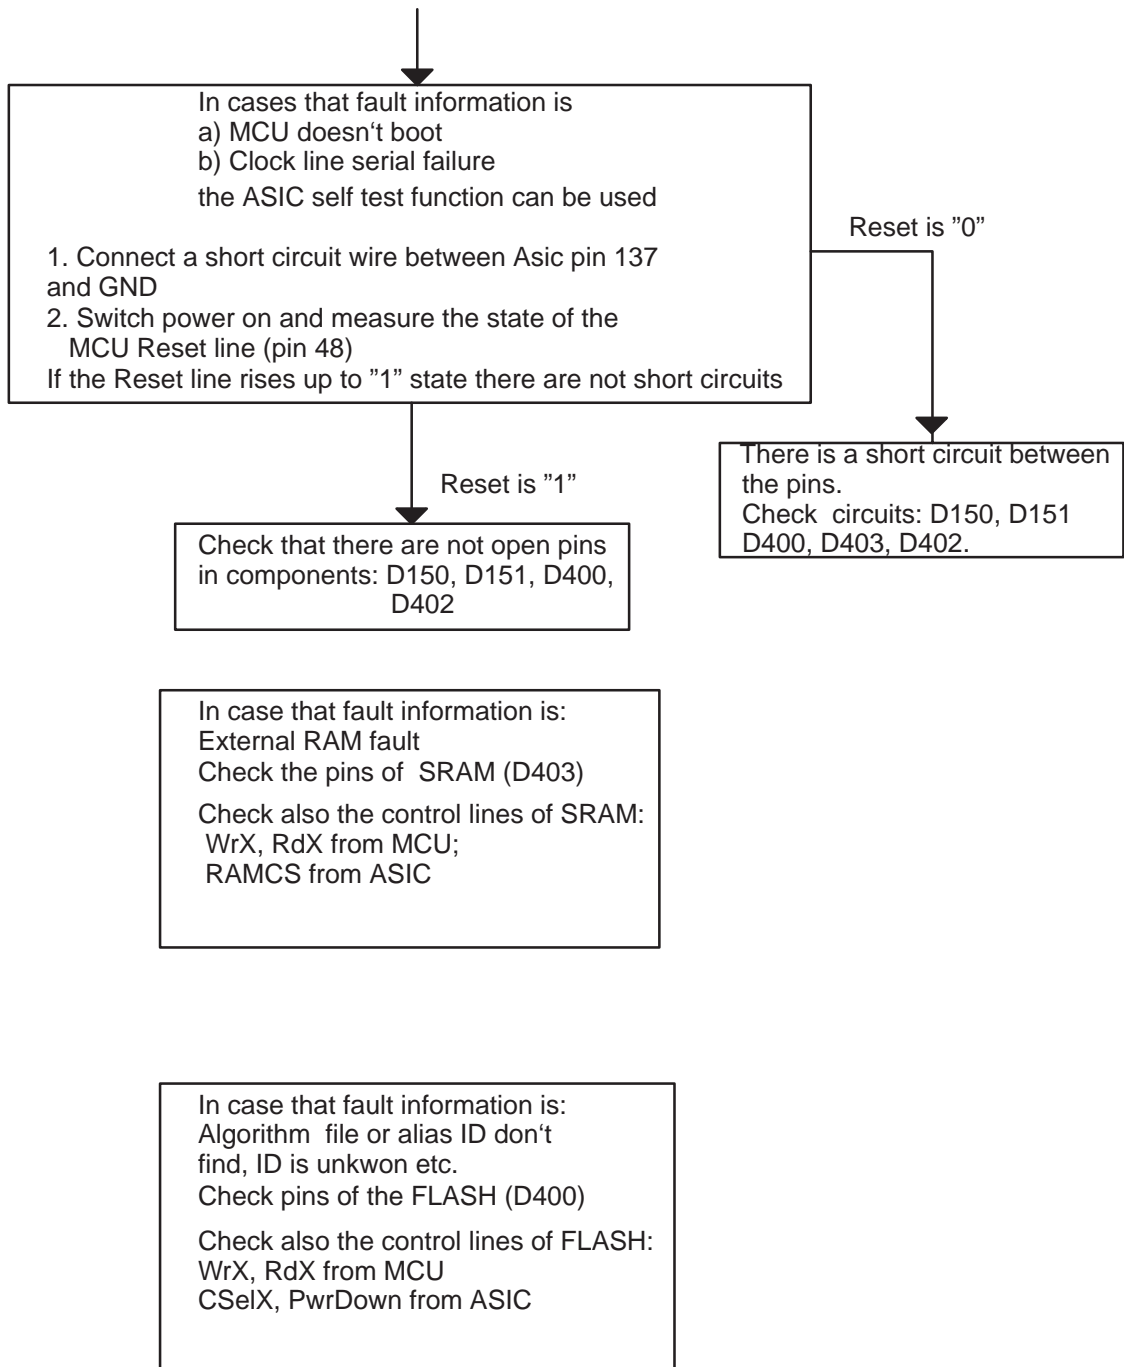

Power doesn't stay on or the phone is jammed

If a fault has come after the flash programming, there are most probably open pins in IC's.


The soldered joints of IC's : D150 (MCU), D151 (ASIC), N300(PSCLD), D400 (FLASH), D403 (SRAM) is useful to check at first.


Normally, the power switch off after 30 seconds, if the watchdog of the PSCLD can not be served by software. The power off function can be prevented by connecting a short circuit wire from the PSCLD pin **22** (WDDIS) to the ground.

If the power switches off after 1..2 seconds, the pins of PSCLD and the PSCLD's auxiliary components must be checked.

If the phone is jammed, and no other reason has been found, the function of 32 kHz clock oscillator must be checked. This can be done by setting the phone to the ASIC self test mode.

1. Connect a short circuit wire between Asic pin 137 and GND.
2. Make a short circuit between the ASIC pins 78 and 79.
3. Switch power on.
4. Measure the signal by oscilloscope at pins 78, 79 (ASIC).

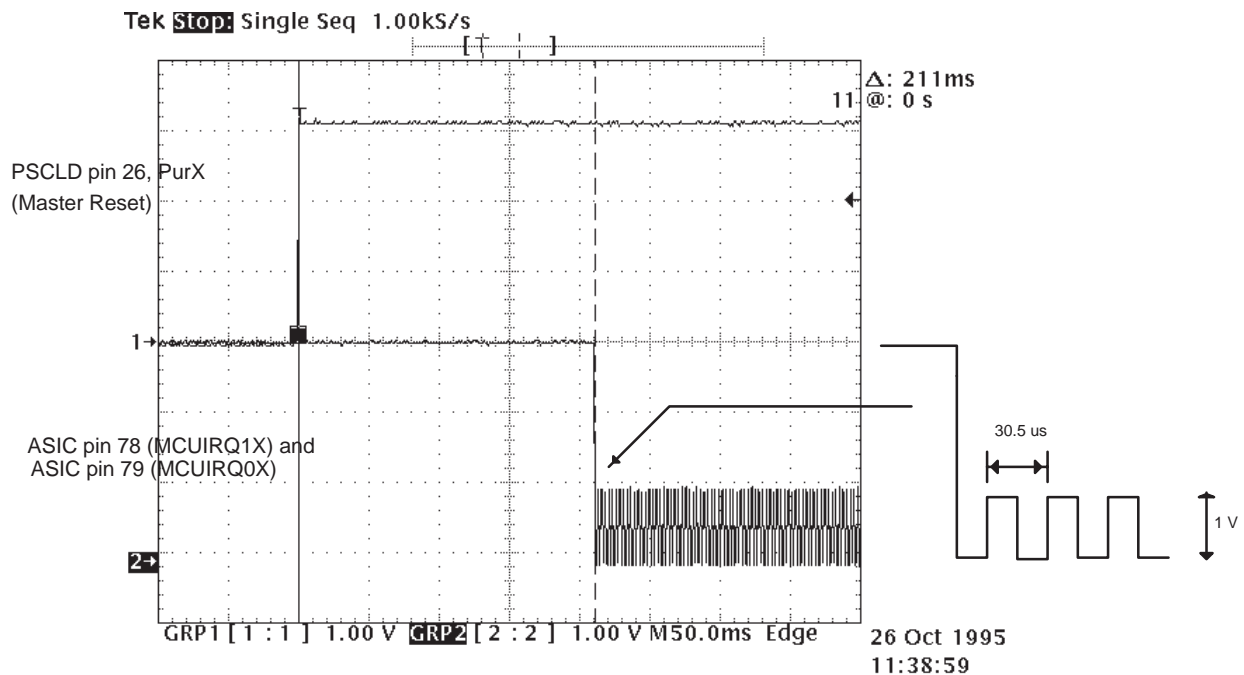

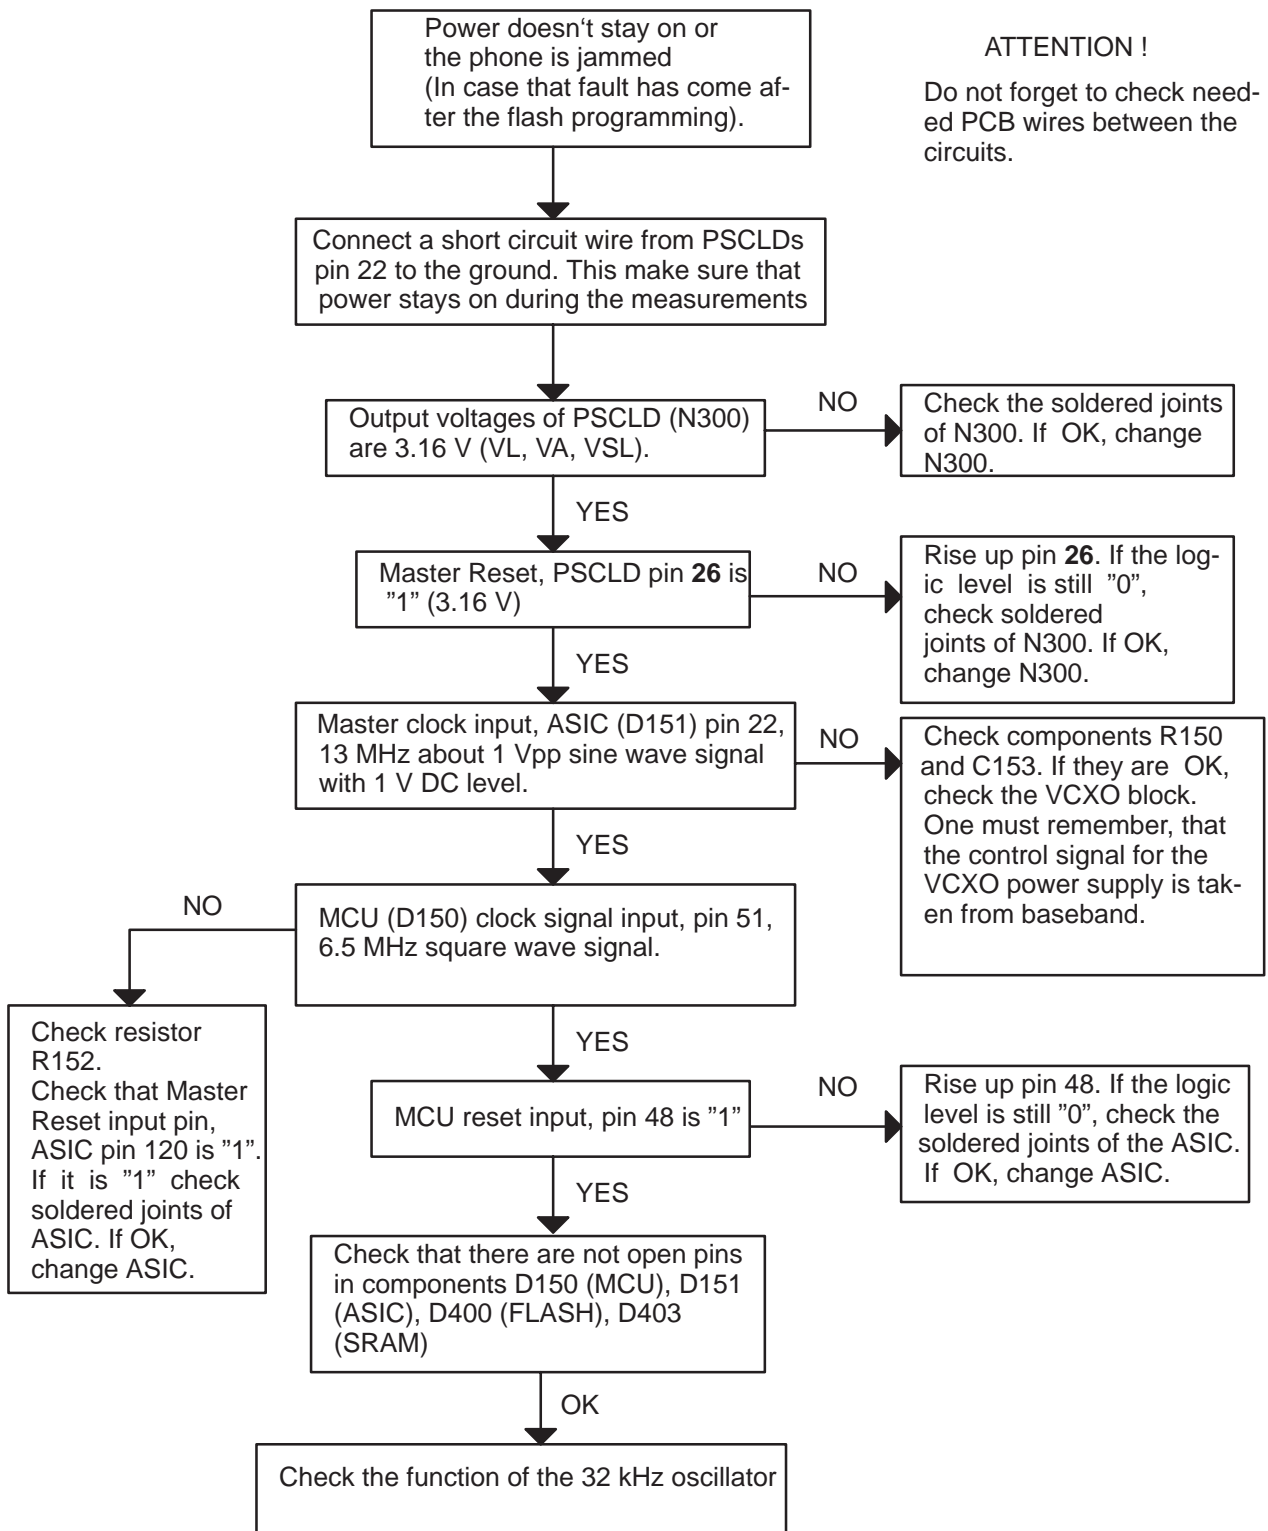


Display information: Contact service

This fault means that MCU is able to run and the watchdog of the PSCLD (N300) can be served.

Thus PCLOCAL functions can be used and some information about the fault is possible to get.

In principle, the fault for contact service information can be found around ASIC (D151), DSP (D152), RFI (N450), EEPROM (D402) or AUDIO CODEC (N200).

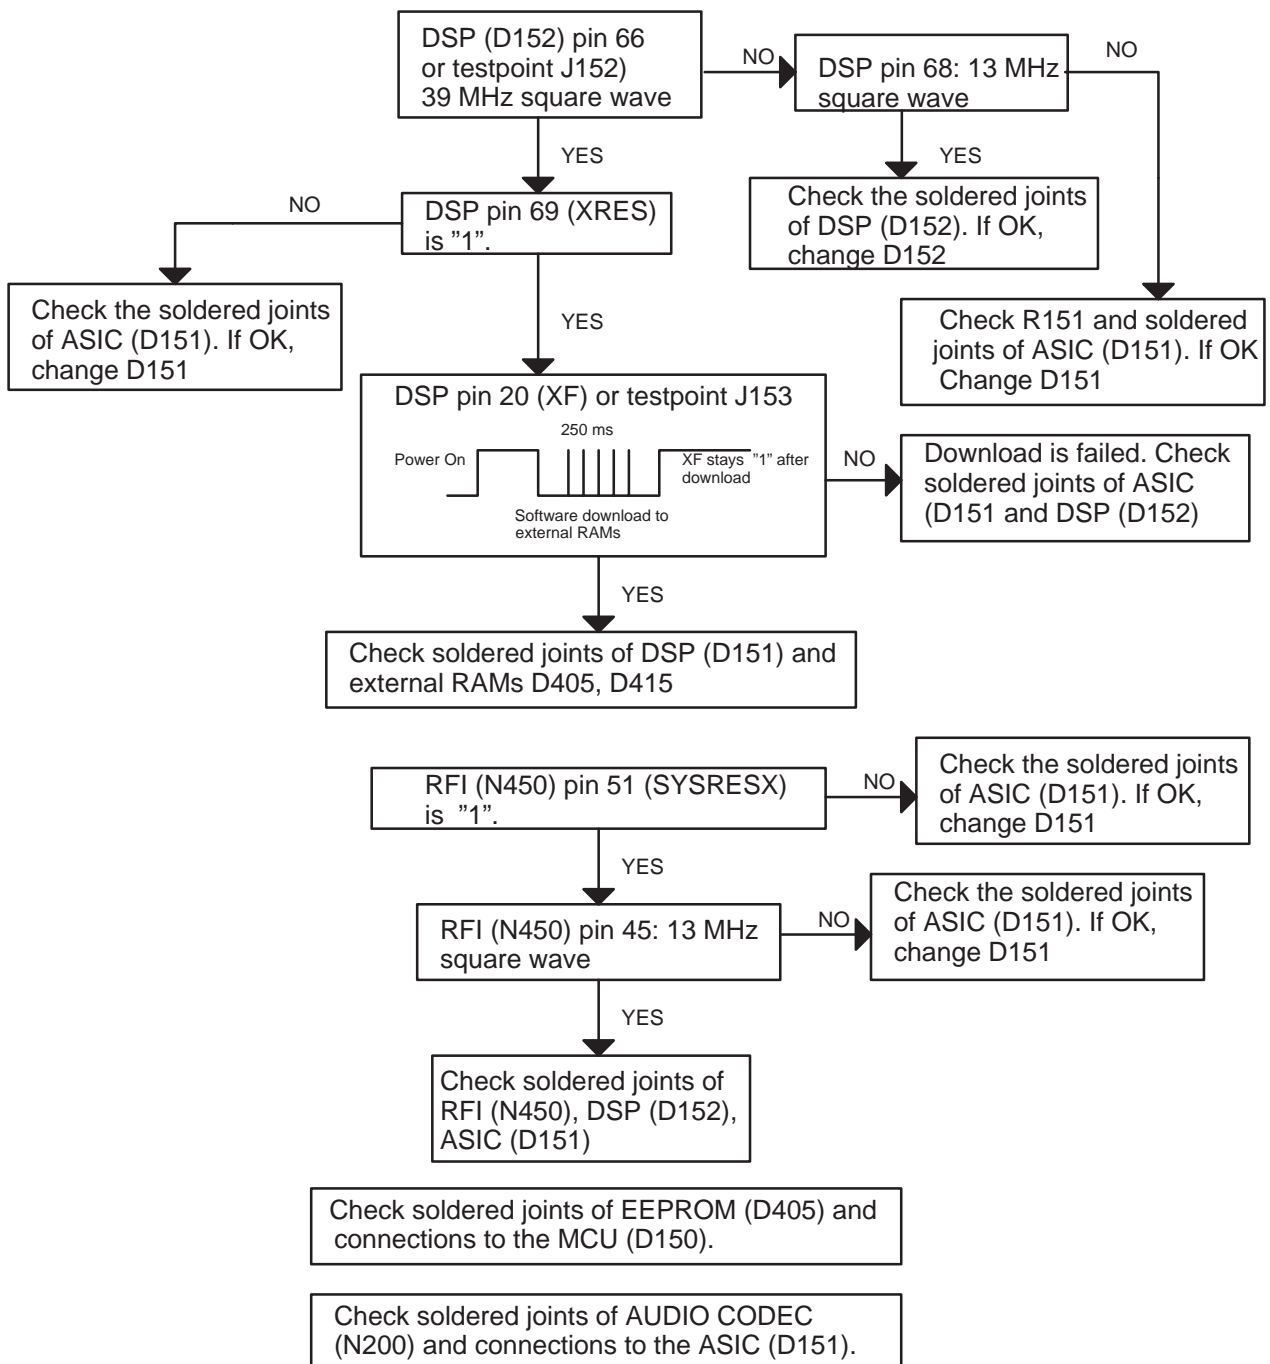


The phone doesn't register to the network (no serv) or phone doesn't make a call


If the phone doesn't register to the network or the phone doesn't make a call, the reason for this could be either the baseband or the RF part. The phone can be set to wanted mode by PCLocals software and try to find reason for fault.

The control lines for RF are supplied both the ASIC (D151) and the RFI (N450).

The ASIC handles digital control lines (between "0" = 0 V and "1" = 3.16 V) and the RFI handles analog control lines and proper input and output signals.


The DSP uses its external flag outputpin (XF pin 20) as an indicator of its operation state. During power up, DSP signals all completed functions by changing the state of the XF pin.

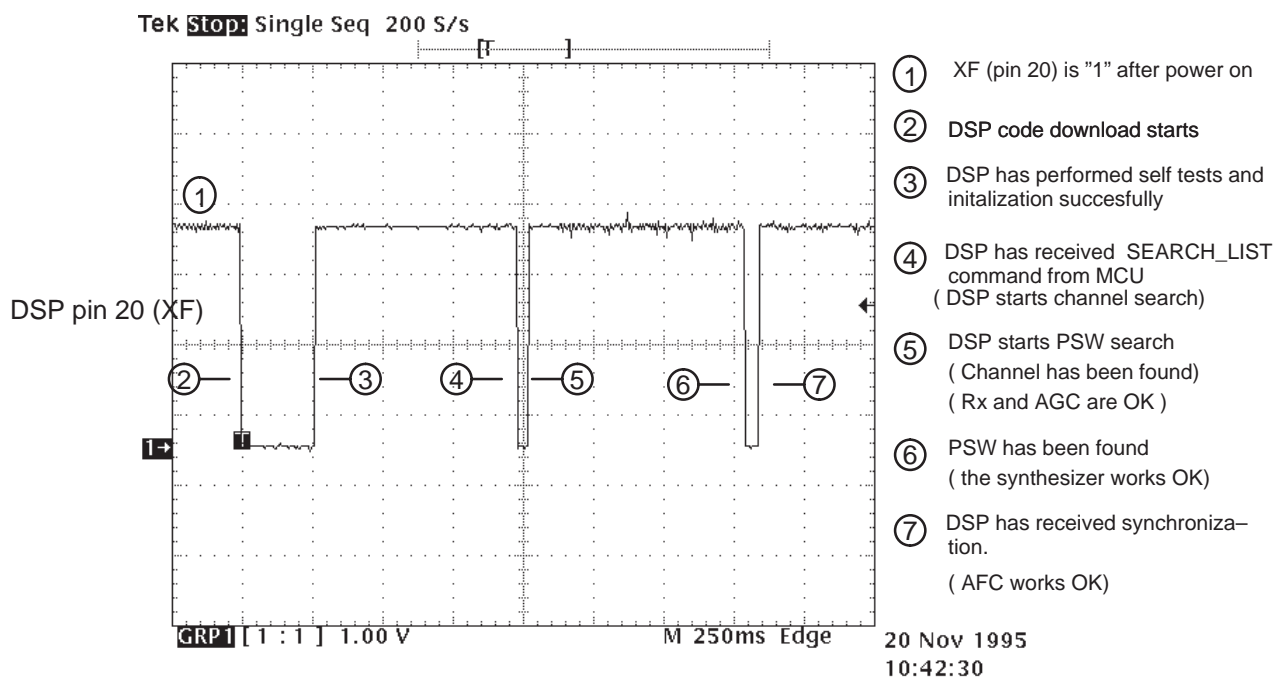


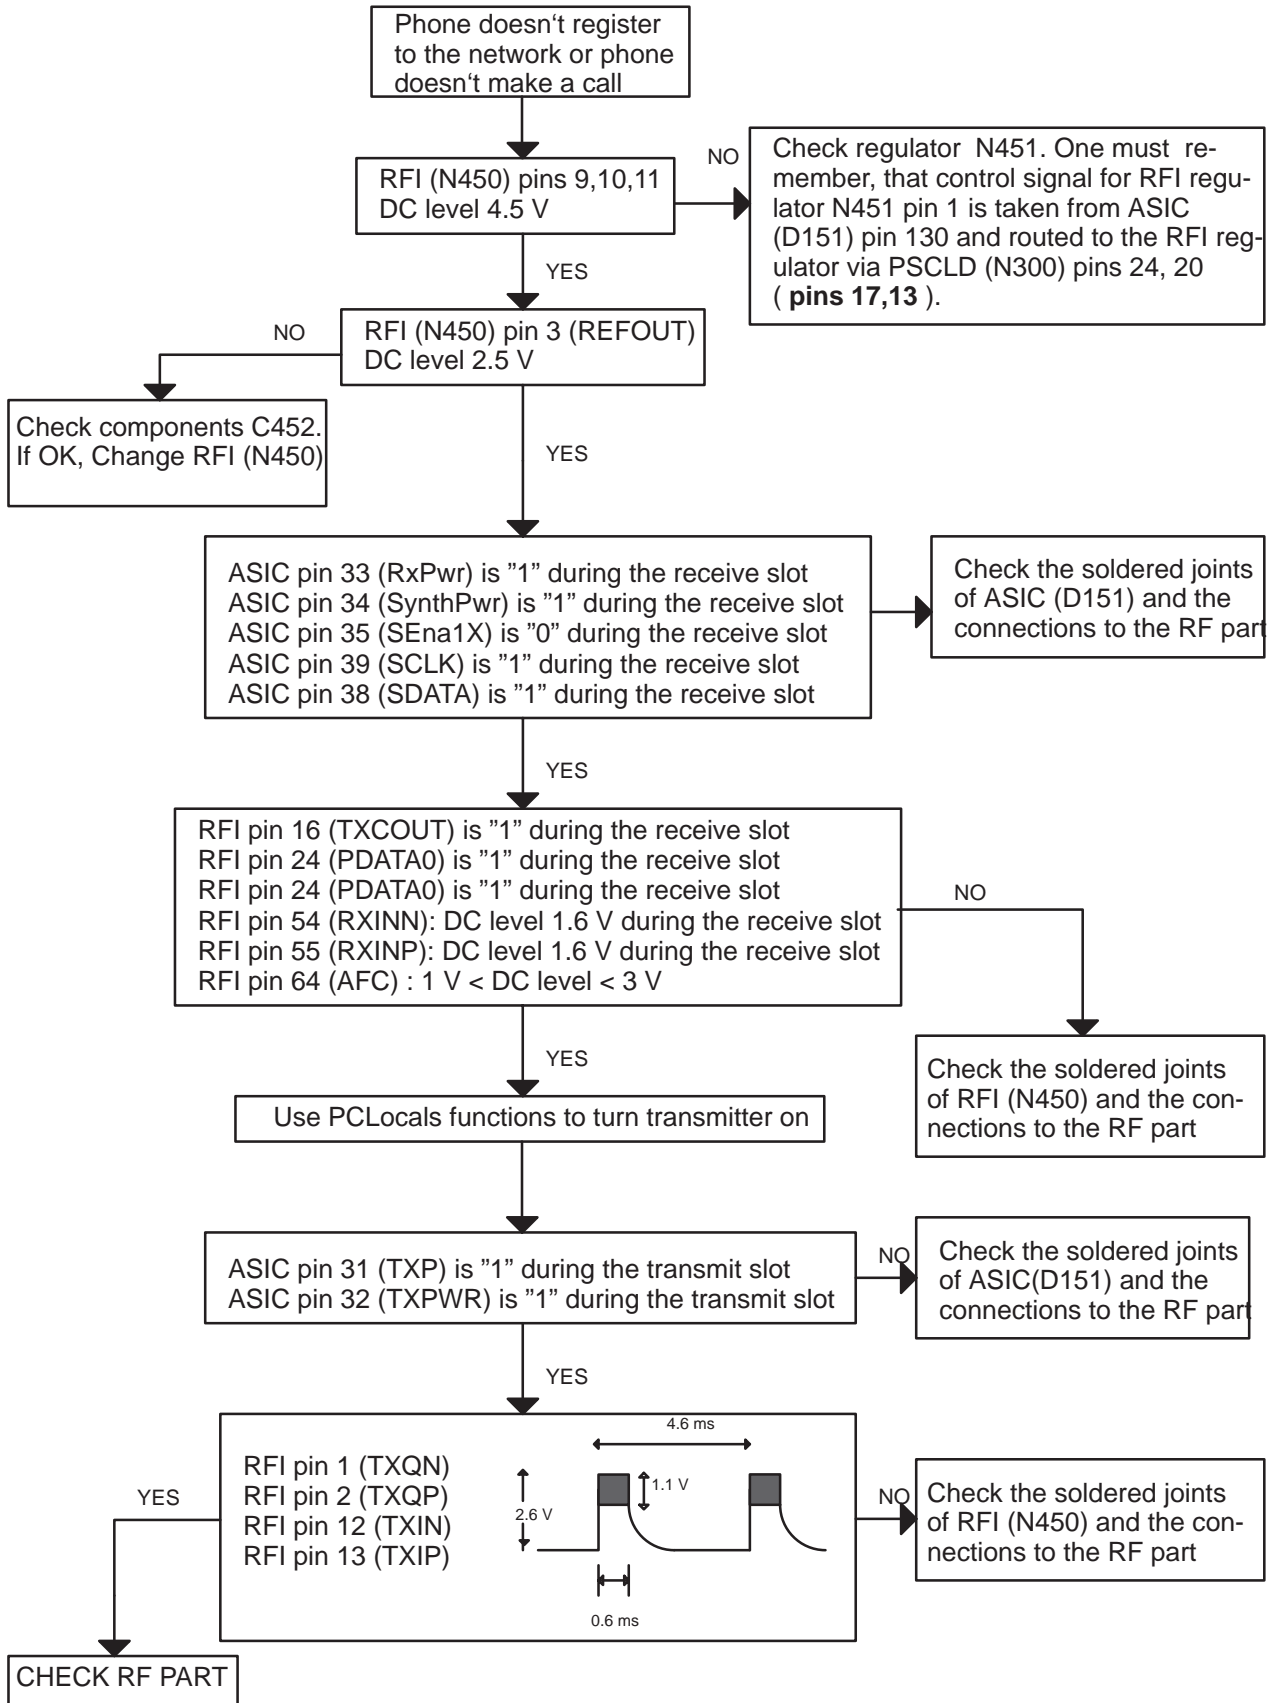

SIM Card is out of order (insert SIM card or card rejected)

The hardware of the SIM interface from the ASIC (D151) to the SIM connector (X102) can be tested without SIM card. When the power is switched on and if the BSI line is grounded by resistor, all the used lines (VSIM, RST, CLK, DATA) rises up to "1" (5 V) four times. Thus the fault can be found without SIM card most of the cases.

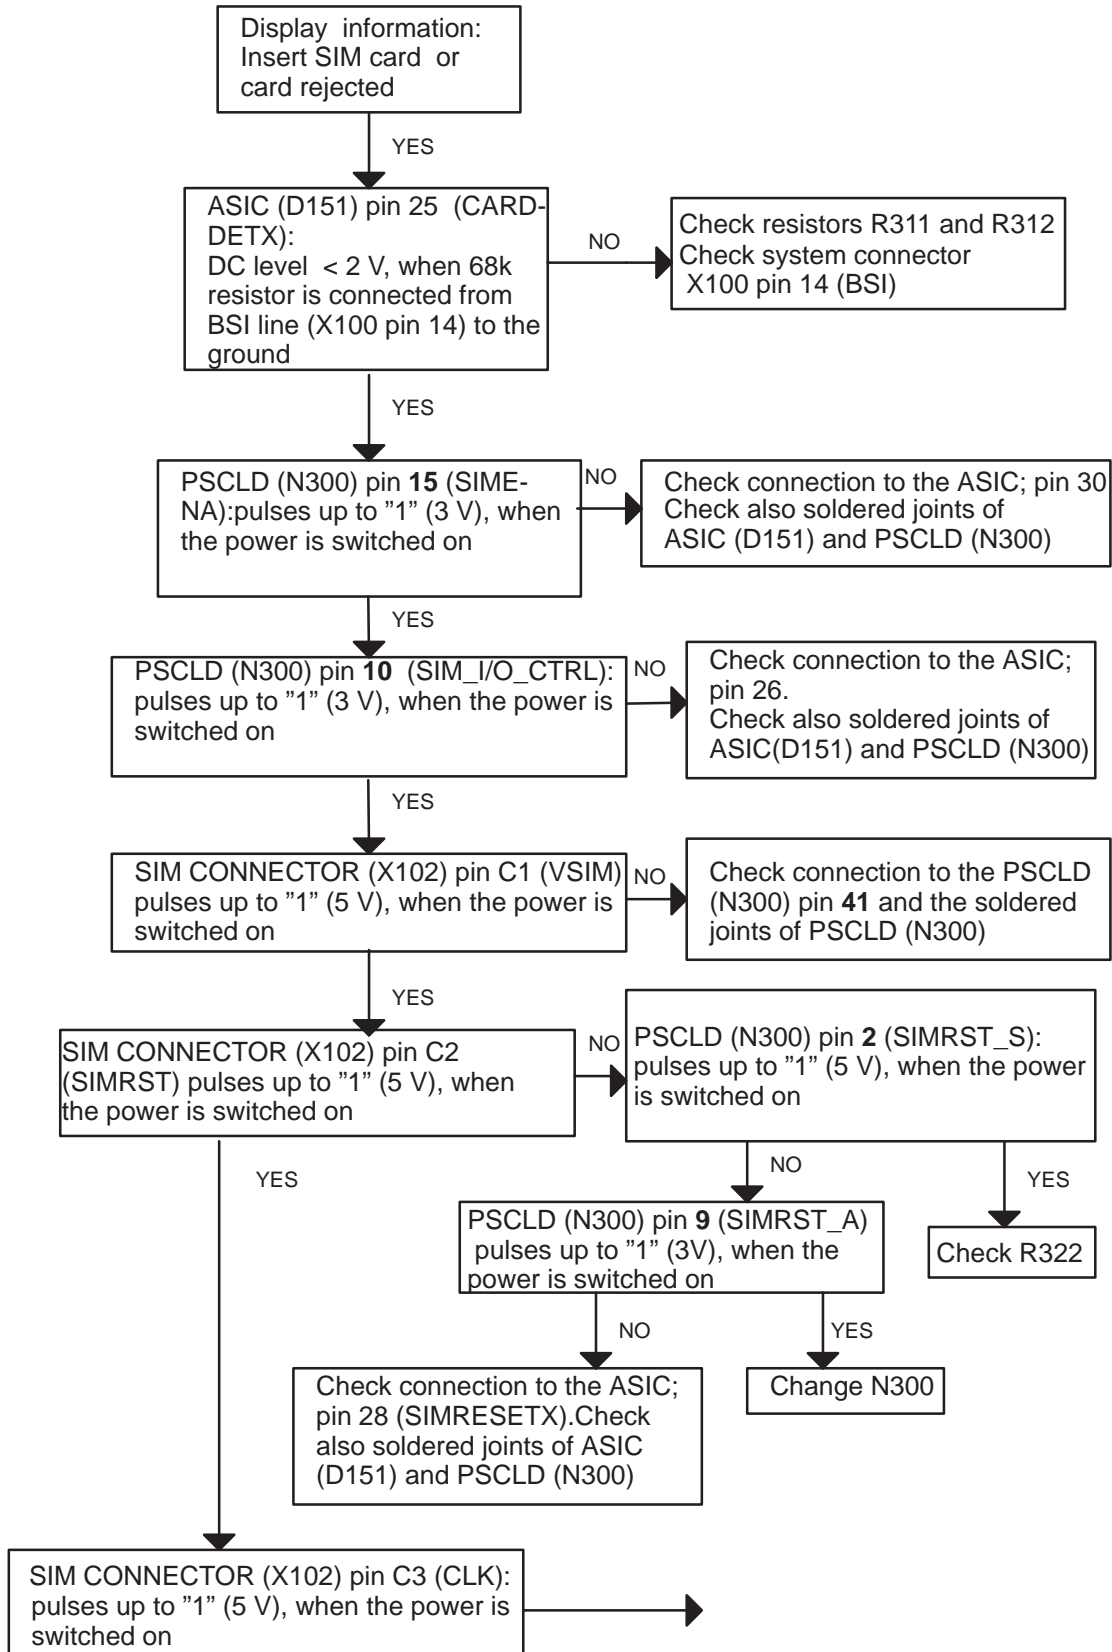

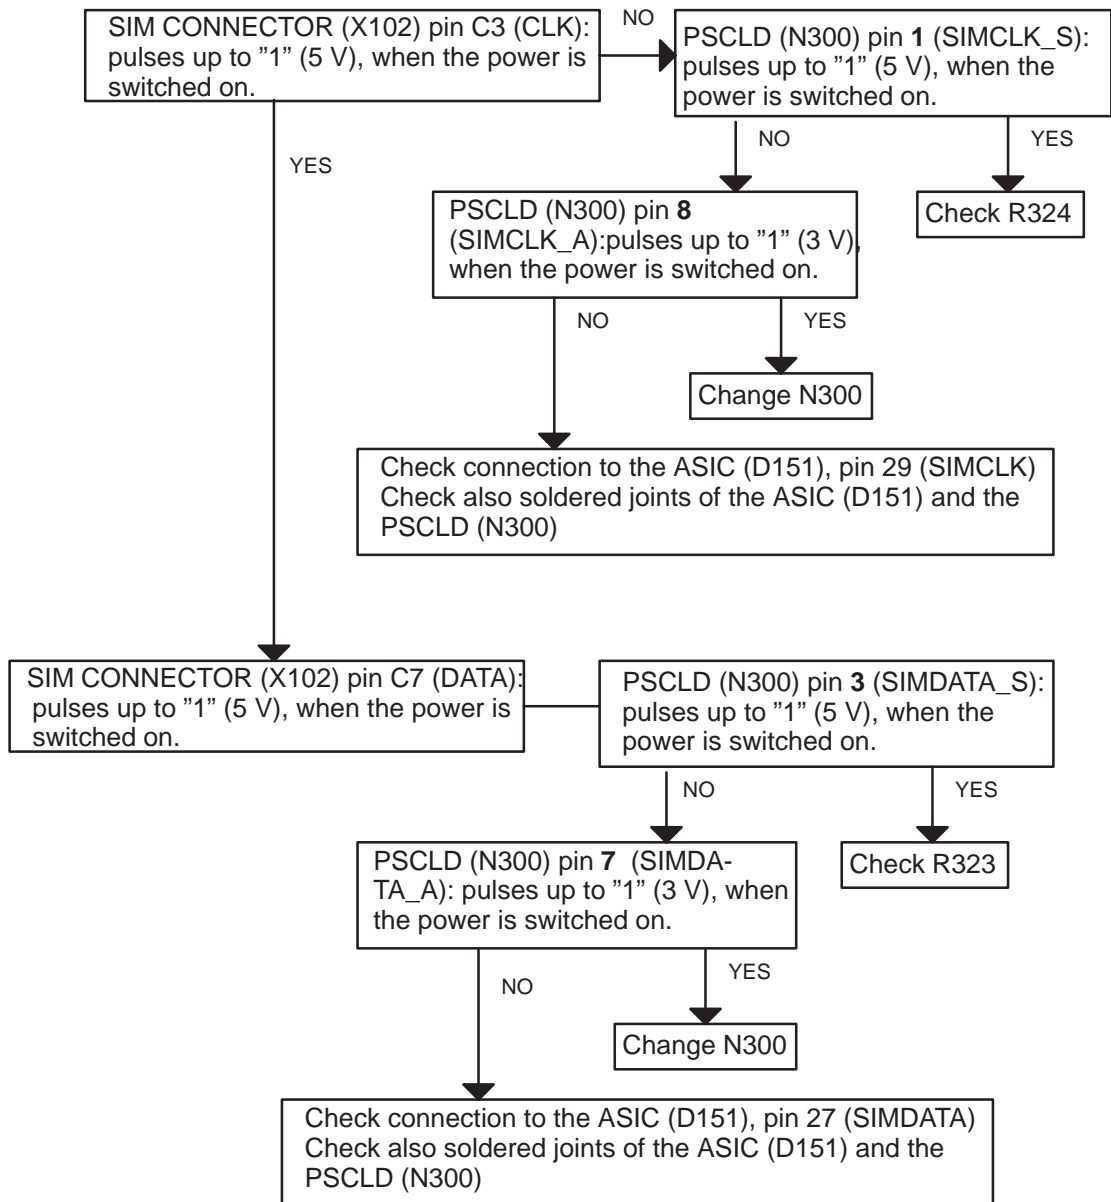


Audio fault


In cases that audio routings are totally muted, a fault could be in serial bus.

This serial bus is used for PSCLD (N300) and for Display driver also, so if the PSCLD and the display are OK, there are open pins in the AUDIO CODEC (N200) or the AUDIO CODEC is faulty.

Serial bus faults can be found with PCLocals software (self test).

Other possibilities are that PCM clock and sync lines are open. CODEC (N200), ASIC (D151) and DSP (D152) must be checked.

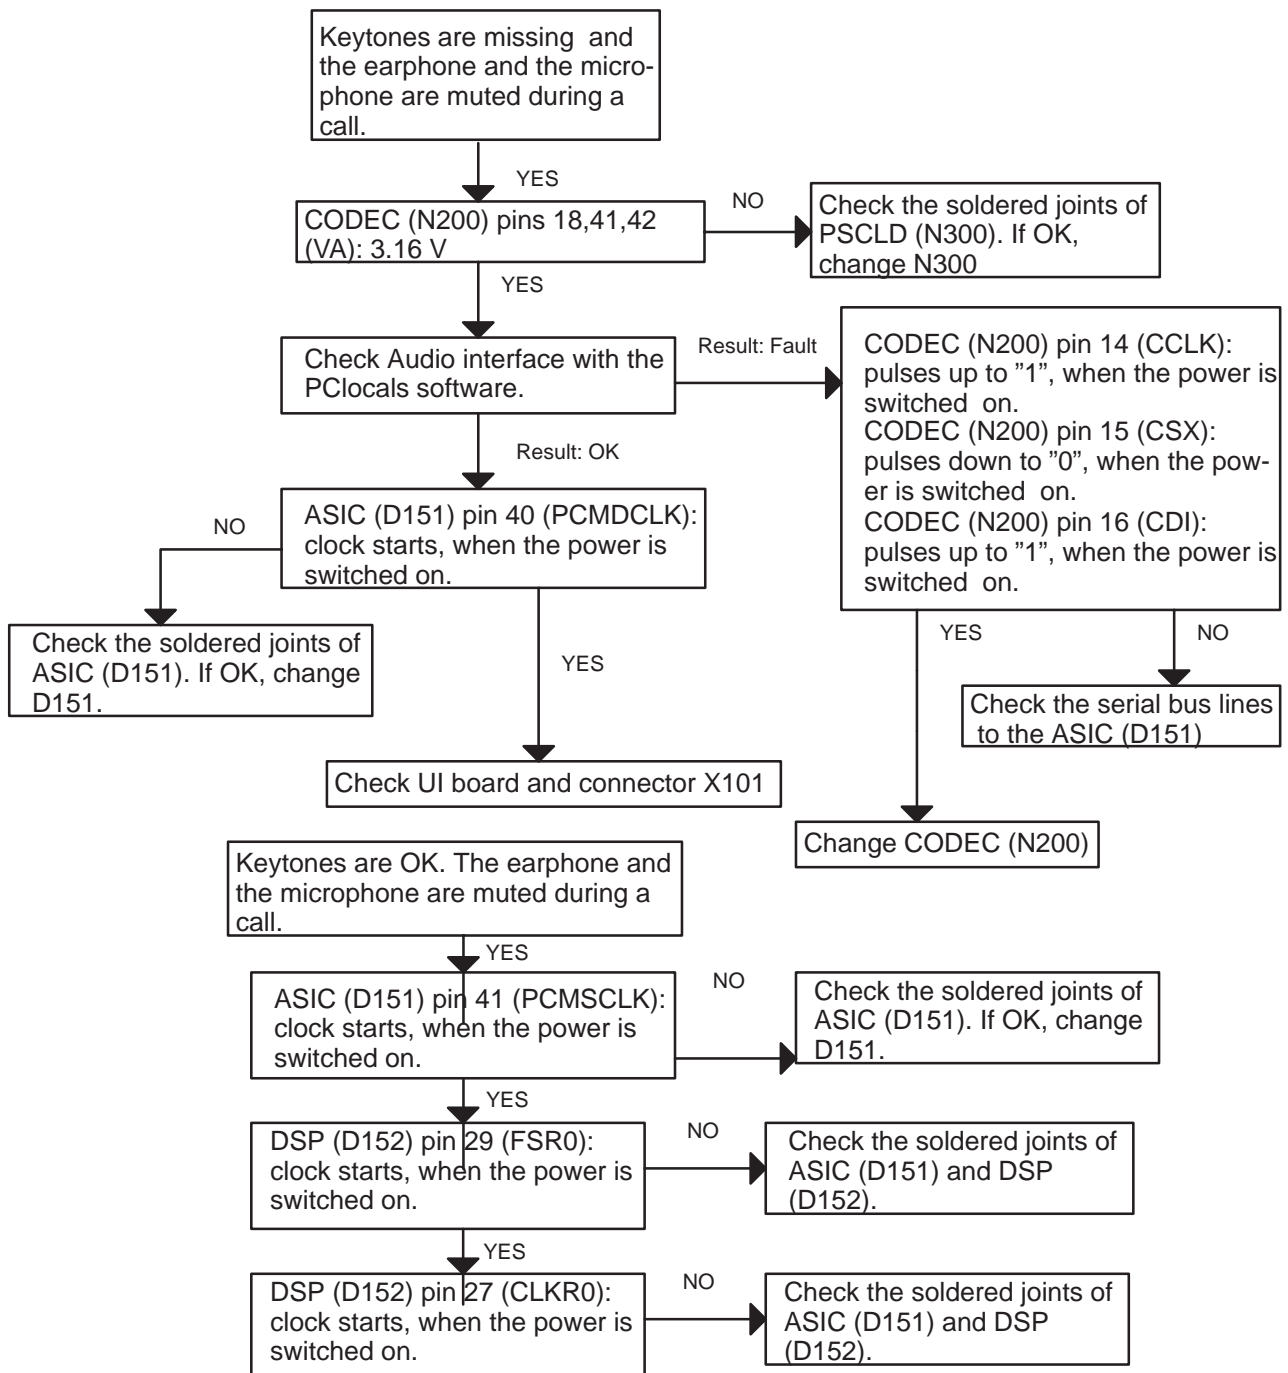

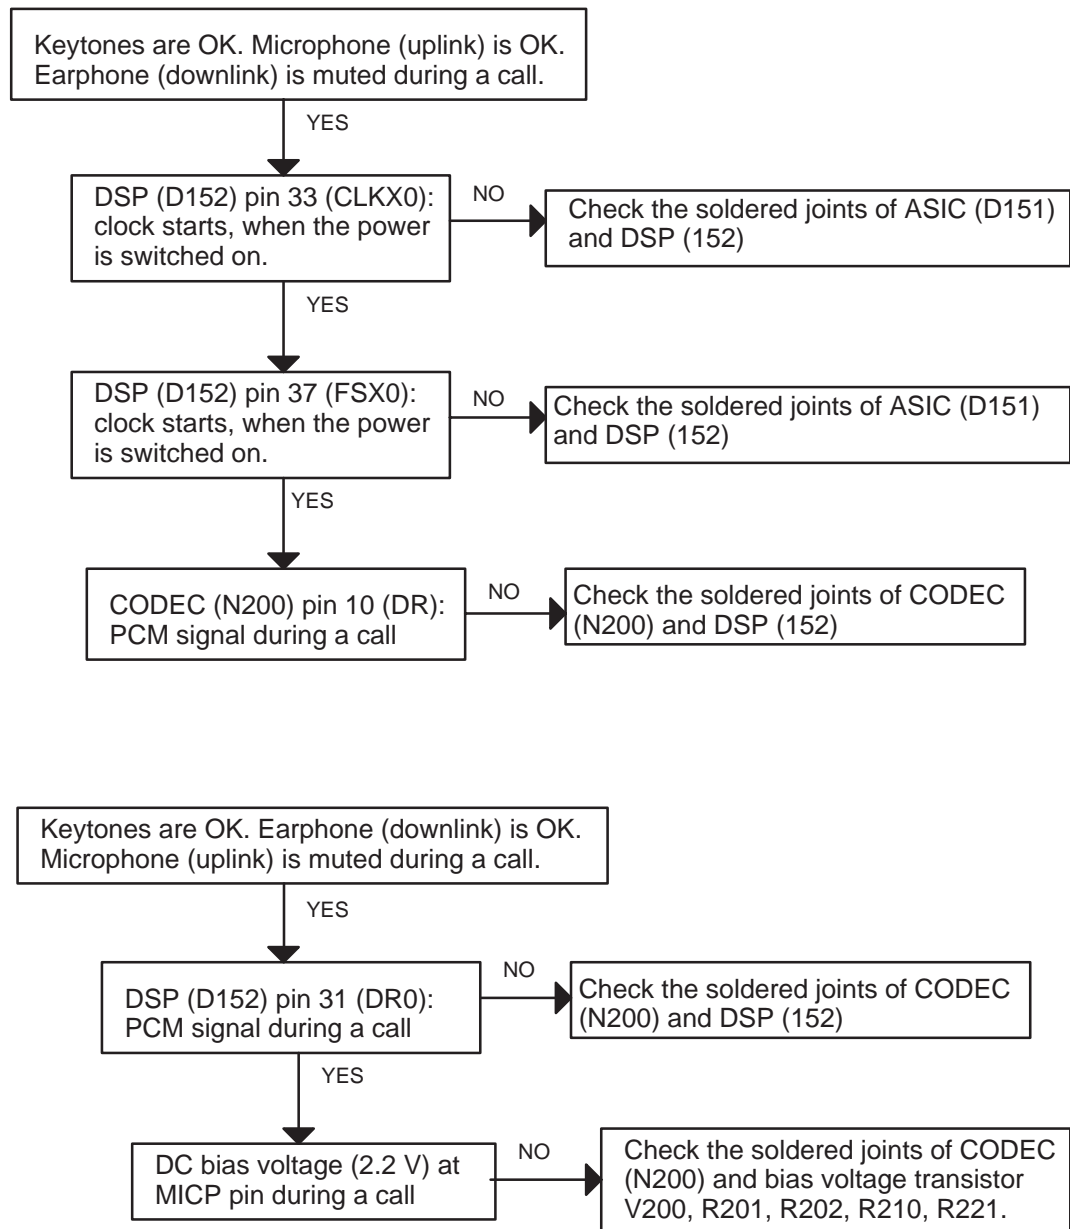


Charging fault

Two different kind of faults can be separated each other:

1. No information at all on the display, when a charger is connected.
2. Display information: Not charging.

1. In case that information on the display is not given, when a charger is connected, means that PSCLD (N300) , pin **14**, can not change the level of the CHRG_IND line (0 → 1) or the input pin of the ASIC (D151) pin 126 is unconnected.

2. If the display information is: Not charging, the charger indication has been done, but the hardware control unit can not control the charging switch transistor V304.

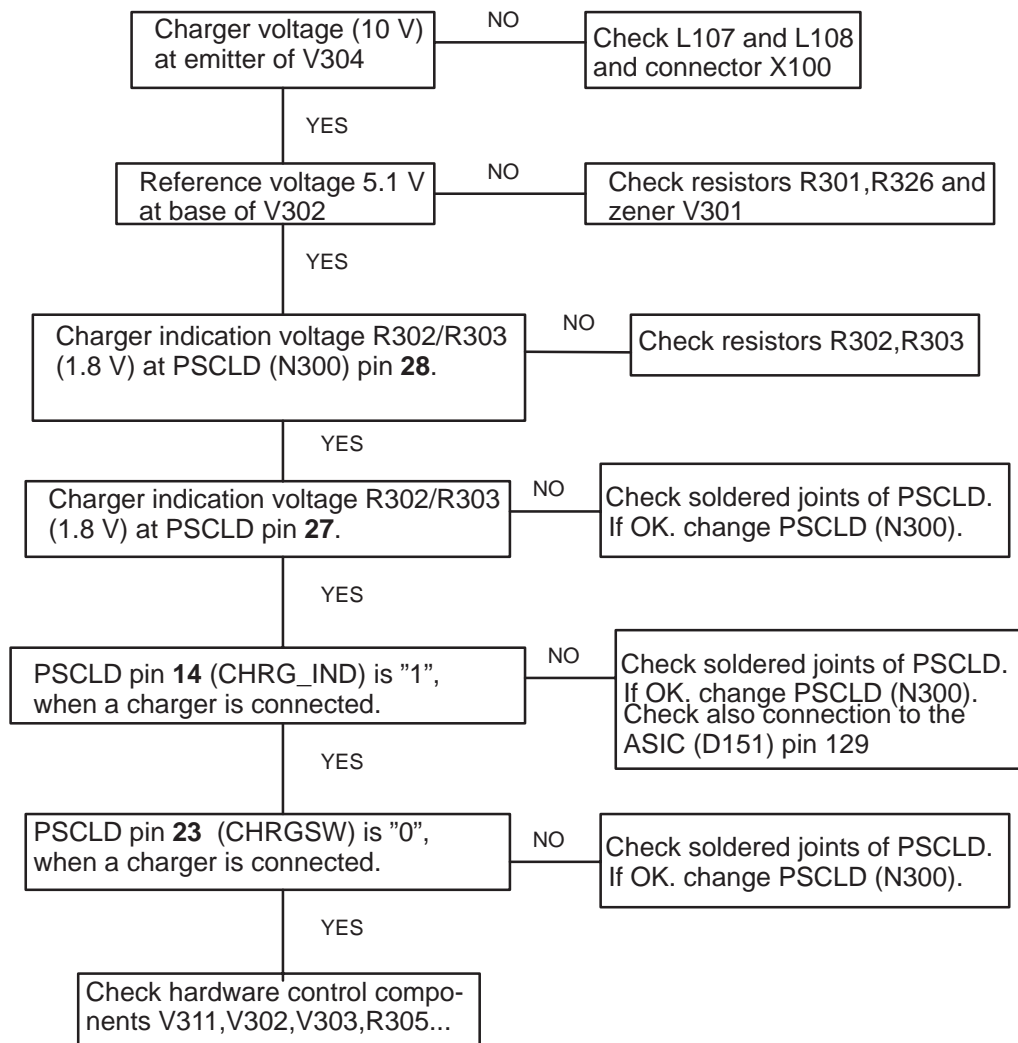

Troubleshooting and Module Repairing at Service

The tests listed, can be executed on a complete phone either at module level or by way of PC-locals on a complete handset.

UIF- connector

- if module seems not to work, first check the condition of B-B-connector

LCD

1. LCD does not work
 - check the voltages VL and V5, voltage difference (VL-V5) should be 7 to 9 volts
 - check the solderings of the TAB on to the PCB, i.e. H400
 - check that correct values of resistors R416 and R419 are mounted
 - check the solderings of the periferal components around the display
2. Missing rows in LCD
 - check if there are broken connections in the TAB. If yes, change the module.
 - check if there are breaks on LCD glass. If yes, change the module.

Microphone

1. Mic does not work
 - check board-to-board connectors
 - check microphone spring connection (eg. spring contact, dirt on springs).
 - change microphone if needed

Earpiece

1. Earpiece does not work
 - Send tone to earpiece
 - if no tone appears, check the spring contacts of earpiece (eg. spring contact to pads, dirt on springs)
 - change Earpiece if needed

Buzzer

1. Buzzer does not work
 - check the voltage VBatt
 - send tone to buzzer, connect PWM signal to BUZZER line
 - if no sound appears, check the spring connection to the buzzer
 - measure, that transistor V403 operates
 - change buzzer or transistors if needed

Keyboard and display LEDs

1. Keyboard LEDs do not work
 - check the voltage VBatt
 - connect 'KEYLIGHT' line to logical HIGH and measure, that control transistors V404 and V405 operate
 - check the solder pads of LEDs
 - change LED or transistor if needed

2. Display LEDs do not work
 - check the voltage VBatt
 - connect 'LCDLIGHT' line to logical HIGH and measure, that control transistor V402 operate
 - check the solder pads of LEDs
 - change LED or transistor if needed

[This page intentionally left blank]