

TX-28XD3 Service Manual

Safety

Specifications

Parts List

Service Information

Adjustments

Self Check

Service Hints

Mechanical View

Disassembly

Location of Controls

Waveforms

Block Diagrams

Schematic Diagrams

PCB Views

Service Support

Service and repair of this product is supported by Panasonic's LUCI interface.

This interface provides a link between the TV and a standard PC to allow a number of diagnostic and control functions to be performed.

For more details contact your local Panasonic company.



BACK

EXIT


Video / Audio

Control


BACK

B - PCB

E - PCB

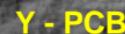
Y - PCB

B - Schematic

E - Schematic

N - Schematic

P - Schematic


Y - Schematic


BACK


BACK

Service Manual



Colour Television

TX-28XD3

EURO-2M Chassis

SPECIFICATIONS

Power Source : 220–240V AC, 50Hz

Power Consumption : 96W

Standby Power Consumption : 1W

Aerial Impedance : 75Ω unbalanced, Coaxial Type

Receiving System : PAL-I, PAL 525/60,
MNTSC, NTSC (AV Only)

Receiving Channels : UHF E21 – E69

Intermediate Frequency :

Video 39.5 MHz

Sound 33.5 MHz

Colour 32.95 MHz

35.07 MHz

Video / Audio Terminals :

AUDIO MONITOR OUT Audio(RCA x 2) 500mV rms, 1kΩ

AV1 IN Video (21 pin) 1V p-p 75Ω
Audio (21 pin) 500mV rms 10kΩ
RGB (21 pin)

AV1 OUT Video (21 pin) 1V p-p 75Ω
Audio (21 pin) 500mV rms 1kΩ

AV2 IN

Video (21 pin) 1V p-p 75Ω
Audio (21 pin) 500mV rms 10kΩ
S-Video IN Y : 1V p-p 75Ω
(21 pin) C : 0.3V p-p 75Ω

AV2 OUT

Video (21 pin) 1V p-p 75Ω
Audio (21 pin) 500mV rms 1kΩ
Audio (RCA x 2) 500mV rms, 10kΩ
Video (RCA x 1) 1V p-p 75Ω

AV3 IN

High Voltage : 28kV ± 1kV (zero beam current)

Picture Tube :

A66ECF50X32 66cm

Audio Output :

Speaker 2 x 20W (Music Power)
8Ω Impedance

Headphones 8Ω Impedance

Accessories supplied : Remote Control
Video Cabinet
2 x R6 (UM3) Batteries

Dimensions :

Height : 596.5mm
Width : 778mm
Depth : 481.5mm

Net Weight : 34kg

Specifications are subject to change without notice.
Weight and dimensions shown are approximate.

Panasonic

Panasonic CS (U.K.) Ltd.
WILLOUGHBY ROAD,
BRACKNELL,
BERKS,
RG12 8FT.

CONTENTS

SAFETY PRECAUTIONS
SERVICE HINTS
SERVICE POSITION
SERVICE MODE
ADJUSTMENT PROCEDURE
SELF CHECK
ALIGNMENT SETTINGS
WAVEFORM PATTERN TABLE
BLOCK DIAGRAMS
PARTS LOCATION
REPLACEMENT PARTS LIST
SCHEMATIC DIAGRAMS
CONDUCTOR VIEWS

Safety Precautions

General Guide Lines

1. It is advisable to insert an isolation transformer in the AC supply before servicing a hot chassis.
2. When servicing, observe the original lead dress in the high voltage circuits. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
3. After servicing, see that all the protective devices such as insulation barriers, insulation papers, shields and isolation R-C combinations are correctly installed.
4. When the receiver is not being used for a long period of time, unplug the power cord from the AC outlet.
5. Potentials as high as 29kV are present when this receiver is in operation. Operation of the receiver without the rear cover involves the danger of a shock hazard from the receiver power supply. Servicing should not be attempted by anyone who is not familiar with the precautions necessary when working on high voltage equipment. Always discharge the anode of the picture tube to the chassis before handling the tube.
6. After servicing make the following leakage current checks to prevent the customer from being exposed to shock hazards.

Leakage Current Cold Check

1. Unplug the AC cord and connect a jumper between the two prongs of the plug.
2. Turn on the receiver's power switch.
3. Measure the resistance value with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the receiver, such as screw heads, aerials, connectors, control shafts etc. When the exposed metallic part has a return path to the chassis the reading should be between 4M ohm and 20M ohm. When the exposed metal does not have a return path to the chassis the reading must be infinite.

Leakage Current Hot Check

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a 2k ohm 10W resistor in series with an exposed metallic part on the receiver and an earth such as a water pipe.
3. Use an AC voltmeter with high impedance to measure the potential across the resistor.

HOT CHECK CIRCUIT

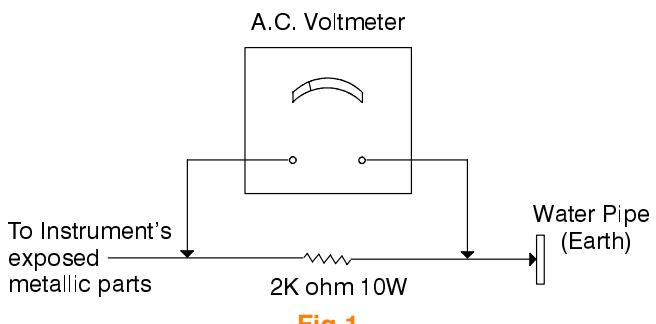


Fig.1

X-Radiation Warning

1. The potential sources of X-Radiation in TV sets are the high voltage section and the picture tube.
2. When using a picture tube test jig for service ensure that the jig is capable of handling 29kV without causing X-Radiation.

NOTE : It is important to use an accurate periodically calibrated high voltage meter

1. Set the brightness to minimum.
2. Measure the high voltage. The meter should indicate $28kV \pm 1kV$ if the meter indication is out of tolerance, immediate service and correction is required to prevent the possibility of premature component failure.
3. To prevent an X-Radiation possibility, it is essential to use the specified tube.

SERVICE HINTS

HOW TO REMOVE THE REAR COVER

1. Remove the 12 screws (A) as shown in Fig.2/Fig.3.


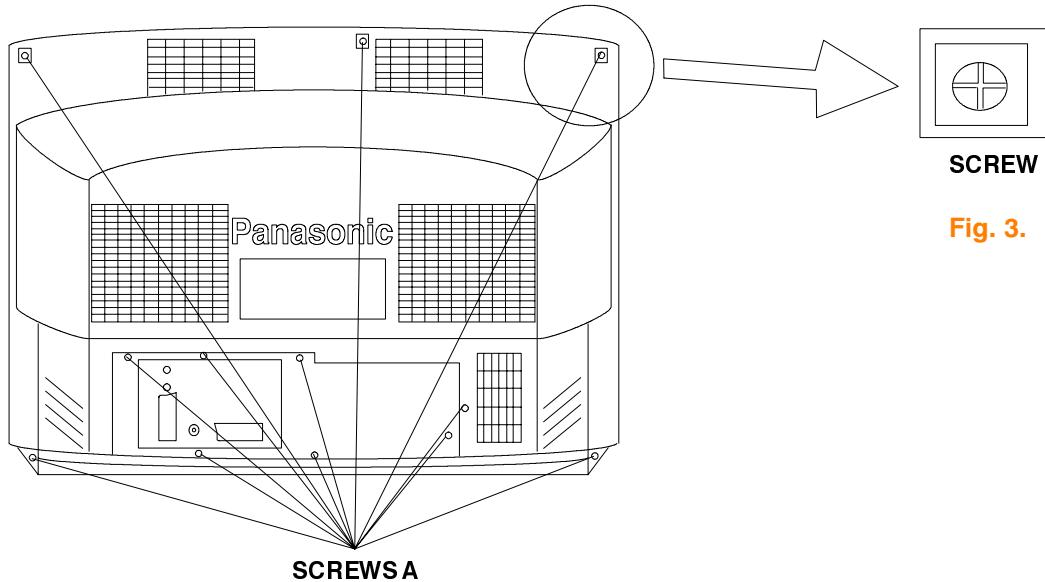


Fig. 2.

Fig. 3.

LOCATION OF CONTROLS

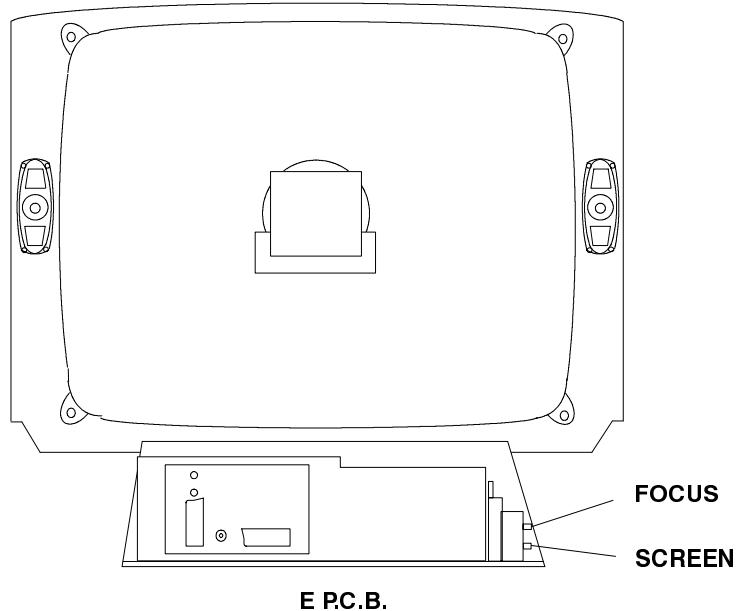

E PC.B.

Fig. 4.

HOW TO MOVE THE CHASSIS INTO SERVICE POSITION

1. Remove the bead clamper (Fig.8.) from the mains lead and screw into the left hand speaker box screw hole **A** shown in Fig.5.
2. Release the N-PCB from the cabinet Fig.6.
3. Hold and lift the rear of the E-PCB chassis and gently pull the chassis toward you.
4. Release the respective wiring clips and rotate the chassis clockwise (Fig.7.), moving the EHT lead around the left side of the CRT neck.
5. Lift the front of the E-PCB chassis and insert chassis frame pin **C** into cabinet hole **B** shown in Fig.6. and Fig.10.
6. Insert bead clamper into chassis frame hole **E** shown in Fig.9. and Fig.10.
7. After servicing ensure all wiring is returned to its original position before returning the receiver to the customer.


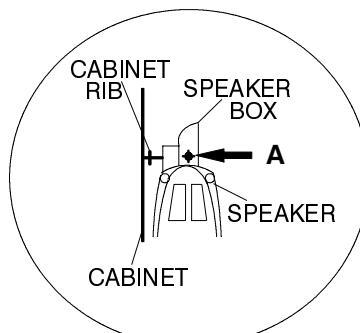


Fig. 5.

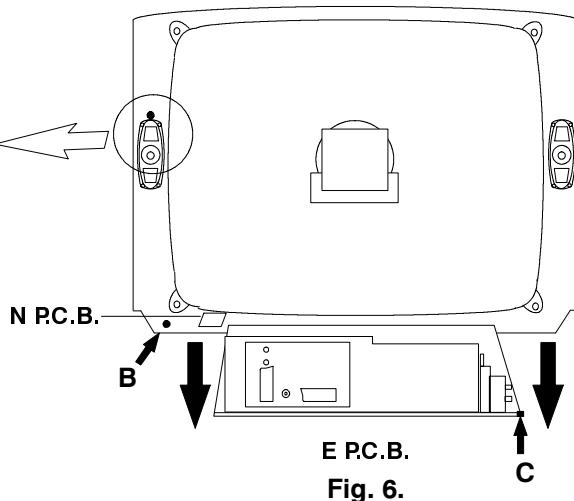

E P.C.B.
Fig. 6.

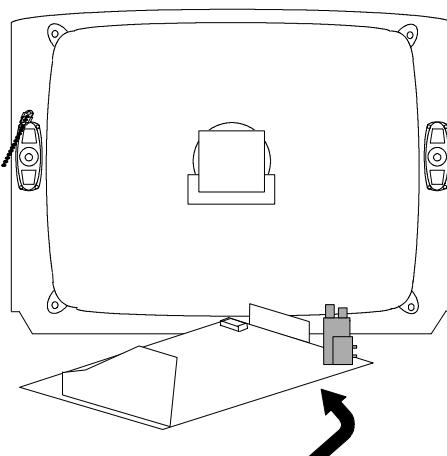


Fig. 7.

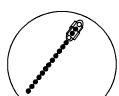


Fig. 8.

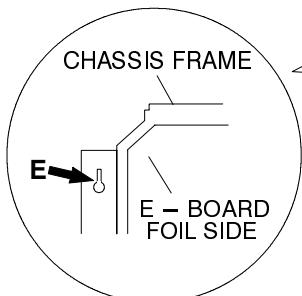


Fig. 9.

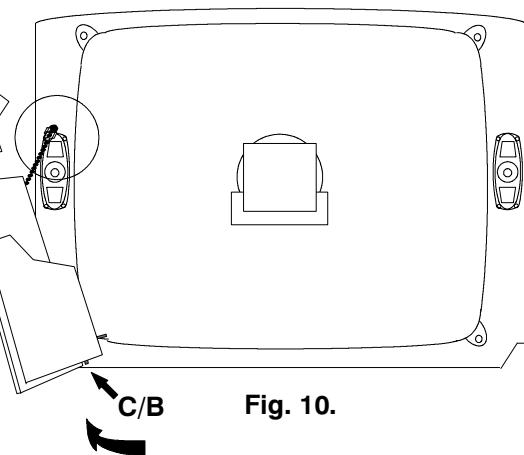


Fig. 10.

SERVICE MODE

The remote control is used for entering and storing adjustments, with the exception of cut-off adjustments which must always be done prior to service adjustment. Perform adjustments in accordance with screen display. The display on the screen also specifies the CCU variants as well as the approx. setting values. The adjustment sequence for the service mode is indicated below.

1. Set the Bass to maximum position, set the Treble to minimum position, press the Reveal button on the remote control and at the same time press the Volume down on the customer controls at the front of the TV, this will place the TV into the Service Mode.
2. Press the RED / GREEN buttons to step down / up through the functions.
3. Press the YELLOW / BLUE buttons to alter the function values.
4. Press the STORE button on the preset panel after each adjustment has been made to store the required values.
5. To exit the Service Mode press the Normalisation button.

NOTE: This TV also has the option of using a Memory Pack which enables you to copy the preset TV channels and analogue levels into the Memory Pack and then upload them onto another EURO-2M TV set.

USING THE MEMORY PACK

TV to Memory Pack process

1. Plug the memory pack into the lower of the two 21 pin terminals at the back of the TV and switch the TV on. If the TV has only one 21 pin connector then this will be able to accept the memory pack.
2. Go into the Service Mode as explained above. The screen will show:—

Program
External>>TV

3. Press the blue button on the remote control. The screen will show:—

Program
TV>>External

4. Press the STORE button on the TV. The screen will show:—

Storing

5. All the tuning information stored inside the TV will now be transferred to the Memory Pack. This process will take 2–3 minutes to complete and when finished the screen will show:—

OK!

Memory Pack to TV Process

1. Plug the memory pack into the lower of the two 21 pin terminals at the back of the TV and switch the TV on. If the TV has only one 21 pin connector then this will be able to accept the memory pack.
2. Go into the Service Mode as explained above. The screen will show:—

Program
External>>TV

3. Press the STORE button on the TV. The screen will show:—

Loading

4. All the tuning information stored inside the Memory Pack will now be transferred to the TV. This process will take 2–3 minutes to complete and when finished the screen will show:—

OK!

5. The tuning information from the Memory Pack has now been copied into the TV
6. To exit from the Service Mode switch off the TV.
7. The process has now been completed and the Memory Pack can now be removed.

Errors

If an error occurs while using the Memory Pack the TV will detect this and the screen will show:—

Program
Error!

If this happens then switch off the TV and repeat the process that was being used. If the errors continue to occur then check the connectors between the TV and the memory pack and check the 9V battery inside the memory pack.

ADJUSTMENT PROCEDURE

Item/Preparation	Adjustments																
+B SET-UP <ol style="list-style-type: none"> Receive a test pattern Set the controls: Brightness Minimum Contrast Minimum Volume Minimum 	<ol style="list-style-type: none"> Set the +B voltage up as follows: Adjust R811 so that B2 shows $147V \pm 1V$ Confirm the following voltages. <table style="margin-left: auto; margin-right: auto;"> <tr><td>B1</td><td>$200 \pm 10V$</td><td>B6</td><td>$12 \pm 0.5V$</td></tr> <tr><td>B3</td><td>$27 \pm 1V$</td><td>B7</td><td>$5 + 0.1/-0.25V$</td></tr> <tr><td>B4</td><td>$41 \pm 1V$</td><td>B8</td><td>$5 \pm 0.25V$</td></tr> <tr><td>B5</td><td>$15.5 \pm 1V$</td><td>U33</td><td>$31 \pm 1V$</td></tr> </table> 	B1	$200 \pm 10V$	B6	$12 \pm 0.5V$	B3	$27 \pm 1V$	B7	$5 + 0.1/-0.25V$	B4	$41 \pm 1V$	B8	$5 \pm 0.25V$	B5	$15.5 \pm 1V$	U33	$31 \pm 1V$
B1	$200 \pm 10V$	B6	$12 \pm 0.5V$														
B3	$27 \pm 1V$	B7	$5 + 0.1/-0.25V$														
B4	$41 \pm 1V$	B8	$5 \pm 0.25V$														
B5	$15.5 \pm 1V$	U33	$31 \pm 1V$														
RF AGC <ol style="list-style-type: none"> Receive a test pattern. Connect an oscilloscope between the tuner RF AGC and ground. Set the oscilloscope gain range to 1V/div. 	<ol style="list-style-type: none"> Check that the noise becomes large when the RF AGC VR R126 is turned counterclockwise. After the check turn it clockwise. Gradually turn the RF AGC VR anti-clockwise, and set the RF AGC VR to the point where the RF AGC voltage is just falling to a point where this voltage drops by 0.2V from the maximum value. 																
CUT OFF <ol style="list-style-type: none"> Receive a test pattern. Degauss the tube externally. Set the TV into Service Mode 1. Select Cutoff DC mode. 	<ol style="list-style-type: none"> Confirm then value is 128 and select Ug2 mode noting colour with largest value. Turn the screen VR until a colour reaches 20~30. Connect an oscilloscope to the cathode with the biggest value colour. Select Cutoff DC mode and adjust Cutoff pulse to $159V \pm 5V$. Disconnect the oscilloscope and adjust the screen to whichever colour reaches 70 ± 30 first. 																

SELF CHECK

Self check is used to automatically check the Bus lines and Hexadecimal code of the TV set. To enter the Self Check mode press Function down button, on the Preset Panel, at the same time pressing the Status button, on the Remote Control, and the screen will show:— When exiting Self Check the customer settings will return to factory setup.

1 — ok	Tuner	11 — --	Dolby IC for C/R	21 — ok	P SBLED
2 — ok	VIF	12 — ok	P S MODE	22 — ok	P OFF
3 — ok	EEPROM	13 — ok	P. TA0	23 — ok	P DEFL
4 — --	Sound AV switch1	14 — ok	P. TA1	24 — ok	P RAM
5 — ok	Video AV switch1	15 — ok	P. TA2		
6 — ok	VDP	16 — ok	P. TA3		
7 — ok	TPU	17 — ok	P SDA	06	
8 — ok	MSP	18 — ok	P SCL1	CE	
9 — --	Dolby Sub	19 — ok	P SCL 3	34	
10 — --	Dolby IC for L/R	20 — ok	P SCL4	94	
				95	
					Hex codes


If the CCU ports have been checked and found to be incorrect then "—" will appear in place of "OK".

ALIGNMENT SETTINGS


(The figures used below are nominal and used for representative purposes only)

Alignment Function		Settings / Special features
1. Vertical amplitude	V-AMP 051	Optimum setting
2. Vertical symmetry	V-SYM 013	
3. Vertical linearity	V-LIN 012	
4. Vert. D.C.	Vert. D.C. 000	No adjustment
5. V-Pos.	V. Pos. 003	Optimum setting
6. Horizontal amplitude	H-AMP -033	Optimum setting
7. Horizontal position	H-POS 049	
8. Text Position	TEXT POSITION 045	Optimum setting
9. EW-amplitude	E-W-AMP 1 -058	Optimum setting
10. EW-amplitude	E-W-AMP 2 023	Optimum setting
11. Trapezium-comp	TRAPEZ-1 -014	Optimum setting
12. Trapezium- comp	TRAPEZ-2 012	Optimum setting
13. Colour VCO	Colour VCO 015	Optimum setting
14. Cut-off DC	Cut-off DC 050	No adjustment
15. Ug2 Test	Ug 2 Test 107 021 023	Select Cutoff DC in ServiceMode and confirm the value is 128. Select Ug 2 Test noting colour with largest value, adjust on FBT until a colour reaches 20 ~ 30. Connect an oscilloscope to the cathode of the biggest value colour, select Cutoff DC mode and adjust get Cutoff pulse voltage to $159 \pm 5V$. Disconnect the oscilloscope and adjust the screen to whichever colour reaches 70 ± 30 first.
16. Cutoff	Cutoff 045 055 050	Press the GREEN button to step through the settings. Adjust for optimum.
17. White	White 224 255 237	Press the GREEN button to step through the settings. Adjust for optimum.


WAVEFORM PATTERN TABLE

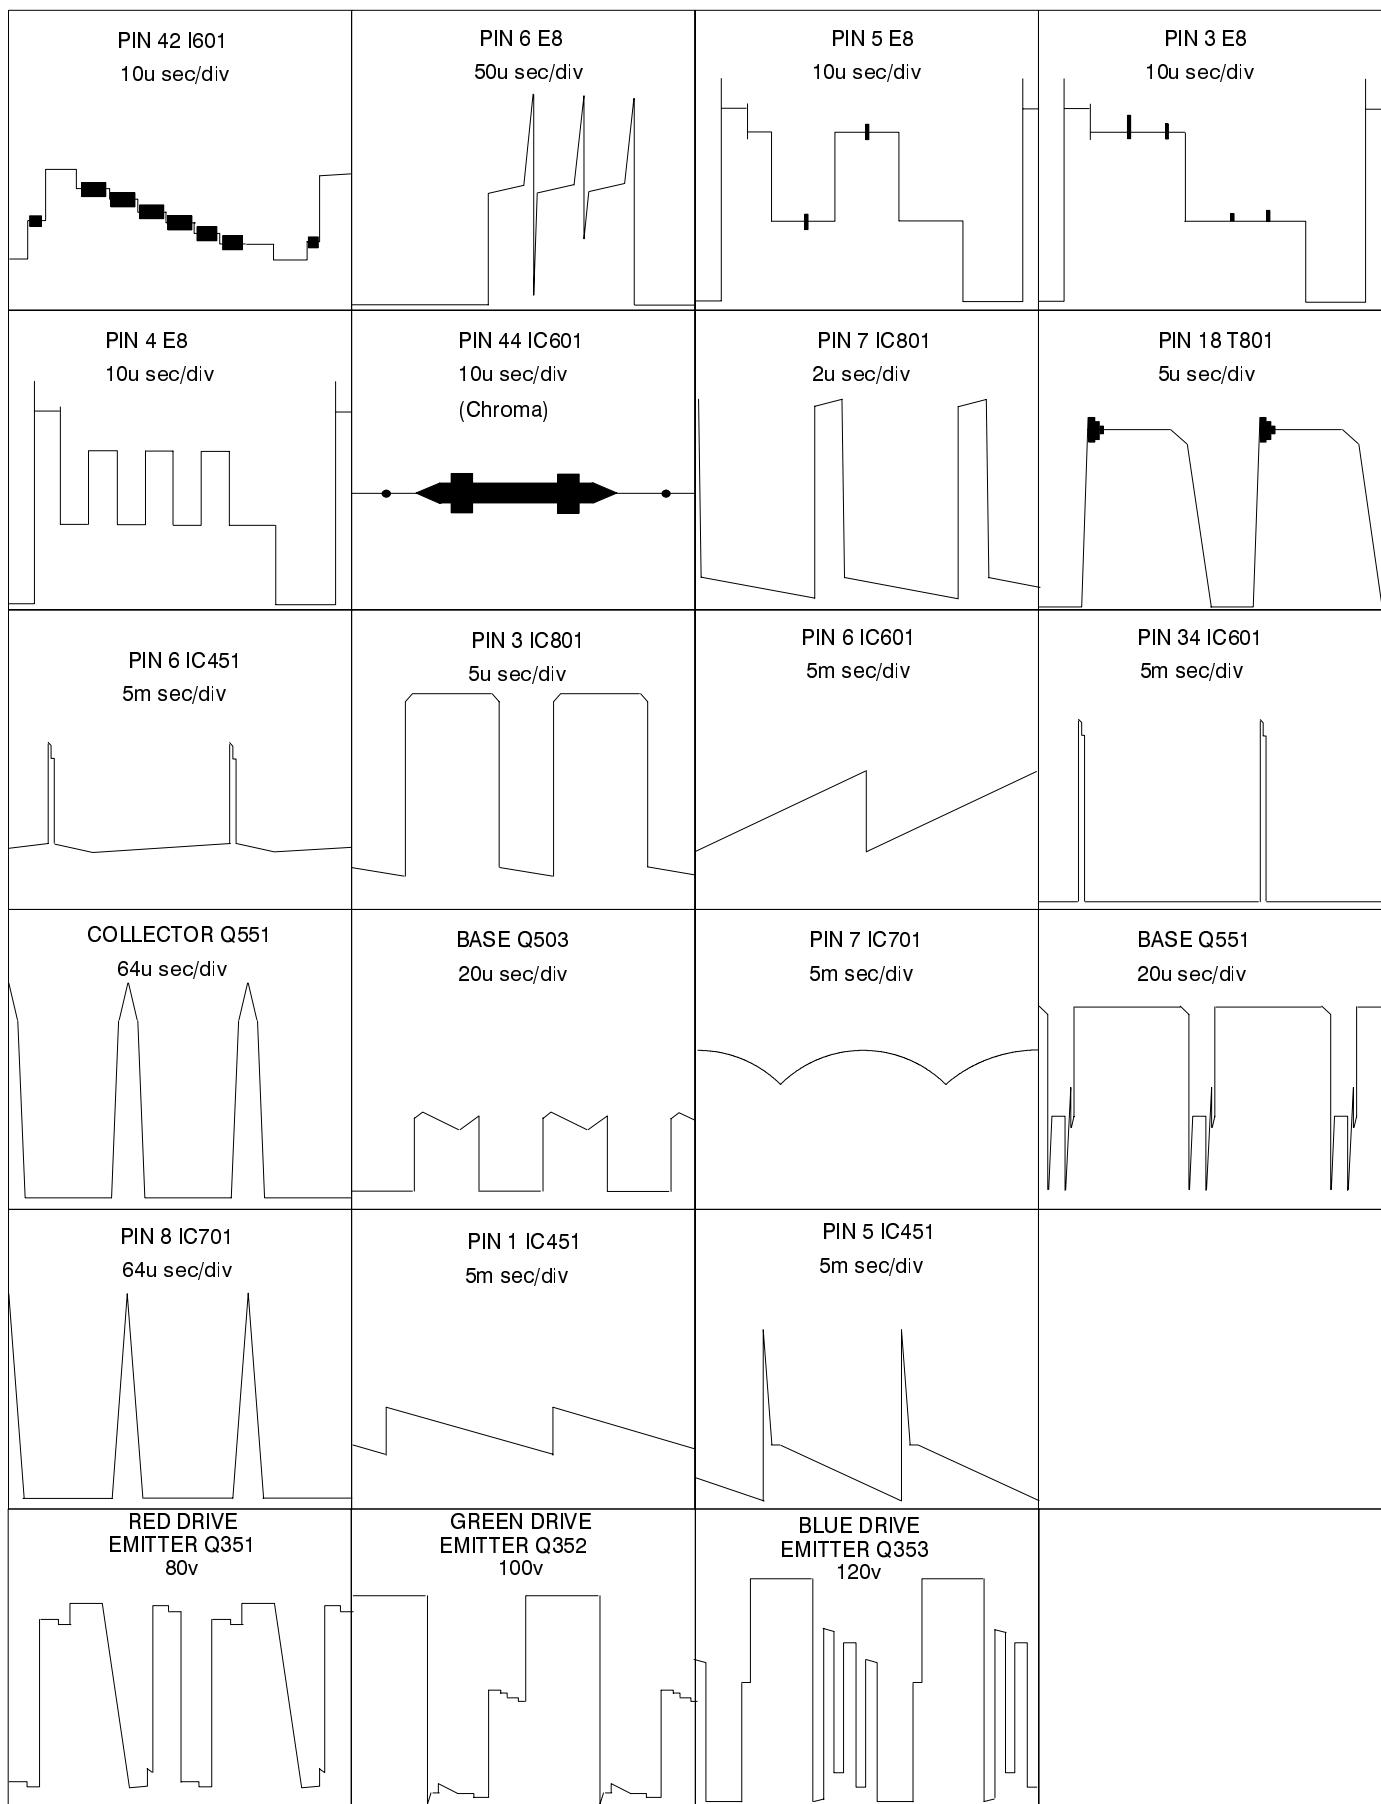


VIDEO BLOCK DIAGRAM

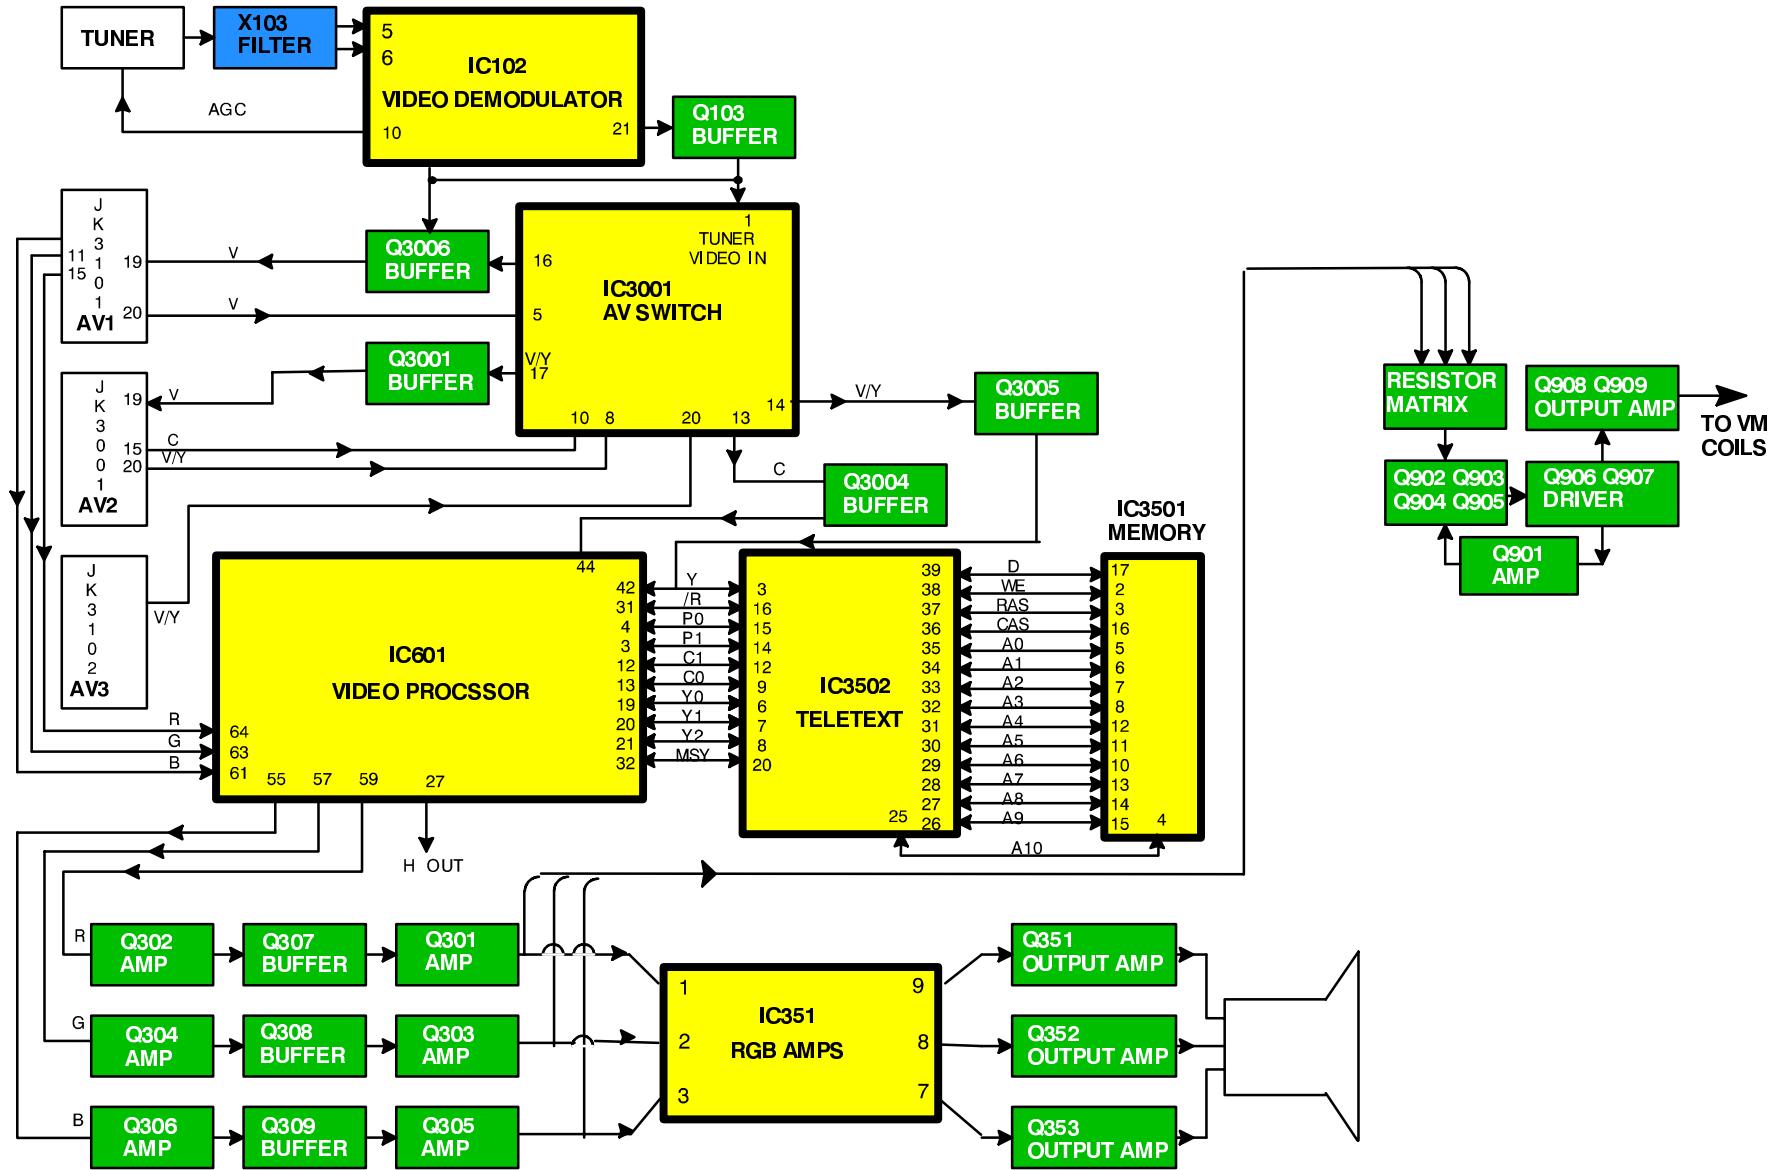

AUDIO BLOCK DIAGRAM

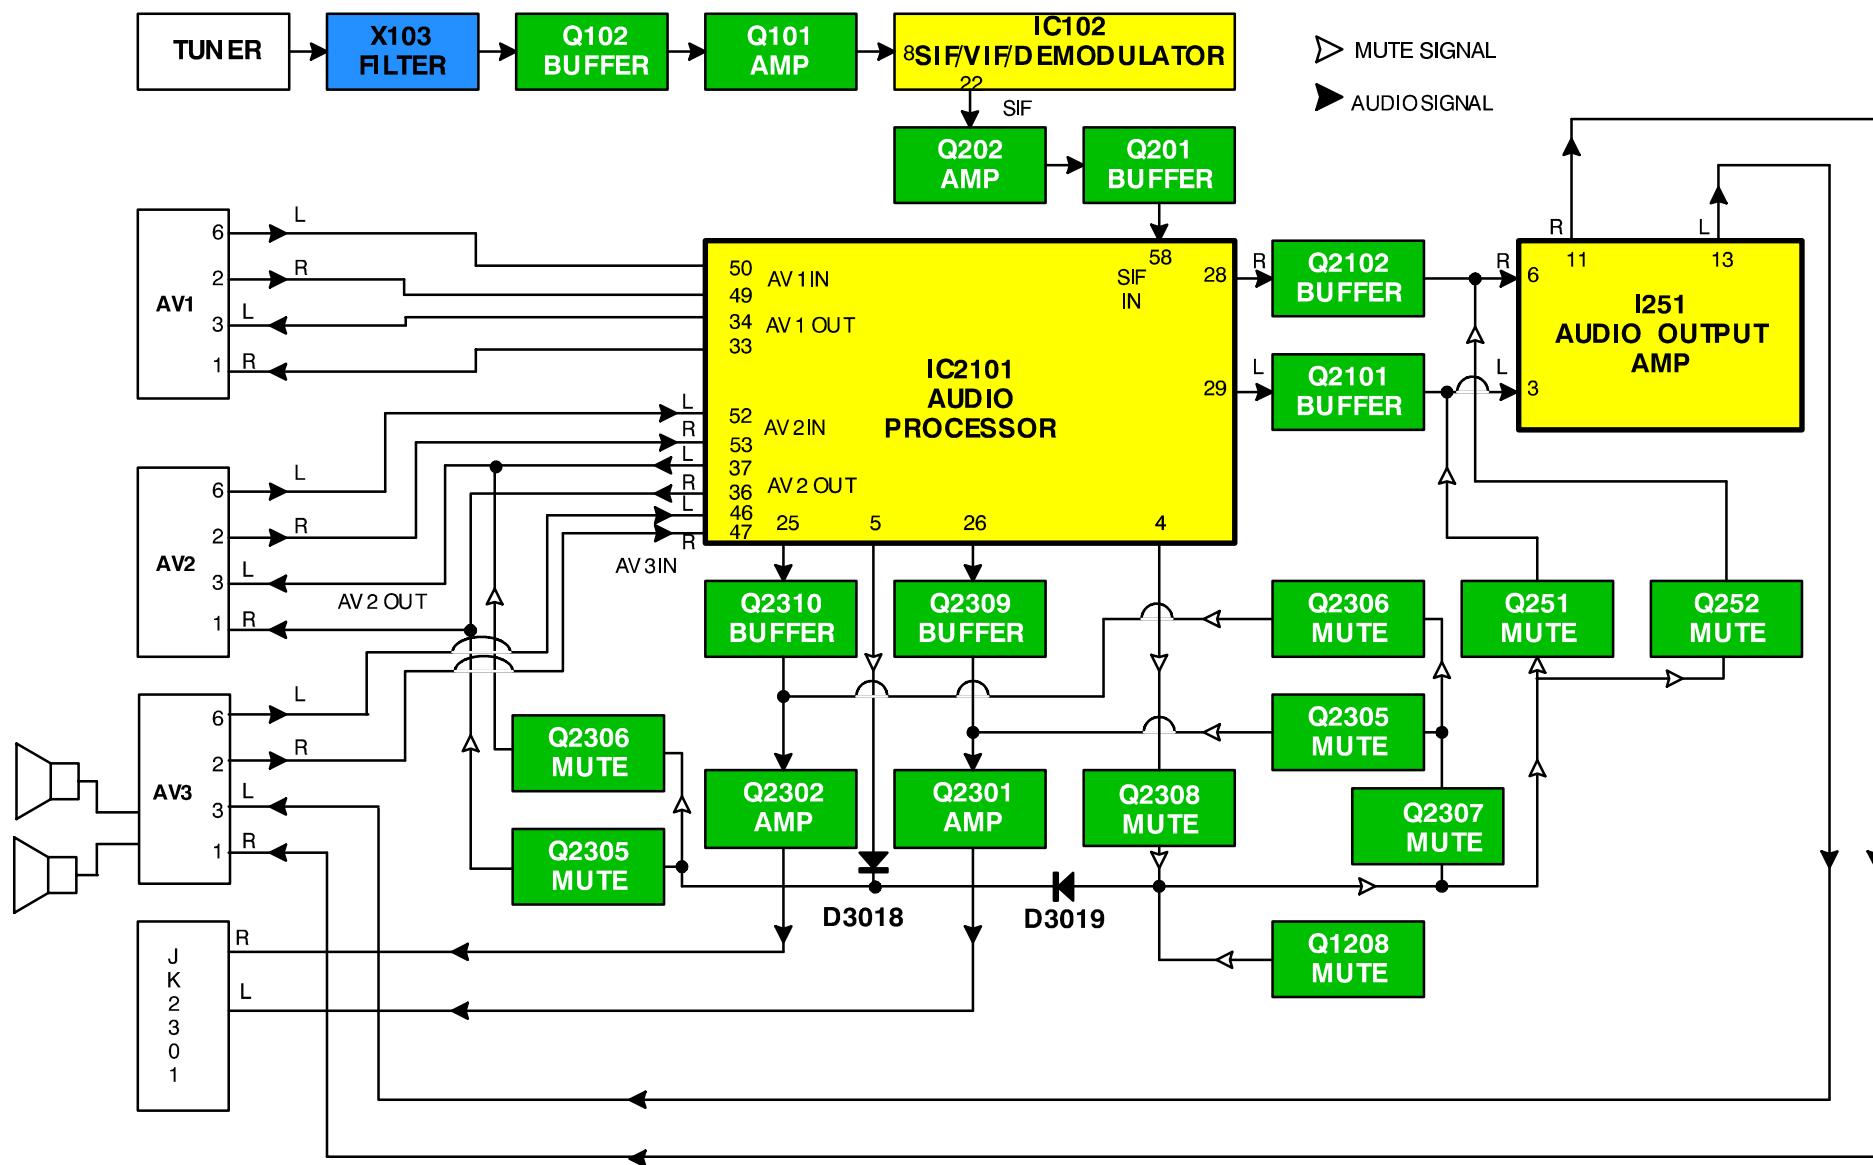


POWER SUPPLY AND CONTROL BLOCK DIAGRAM

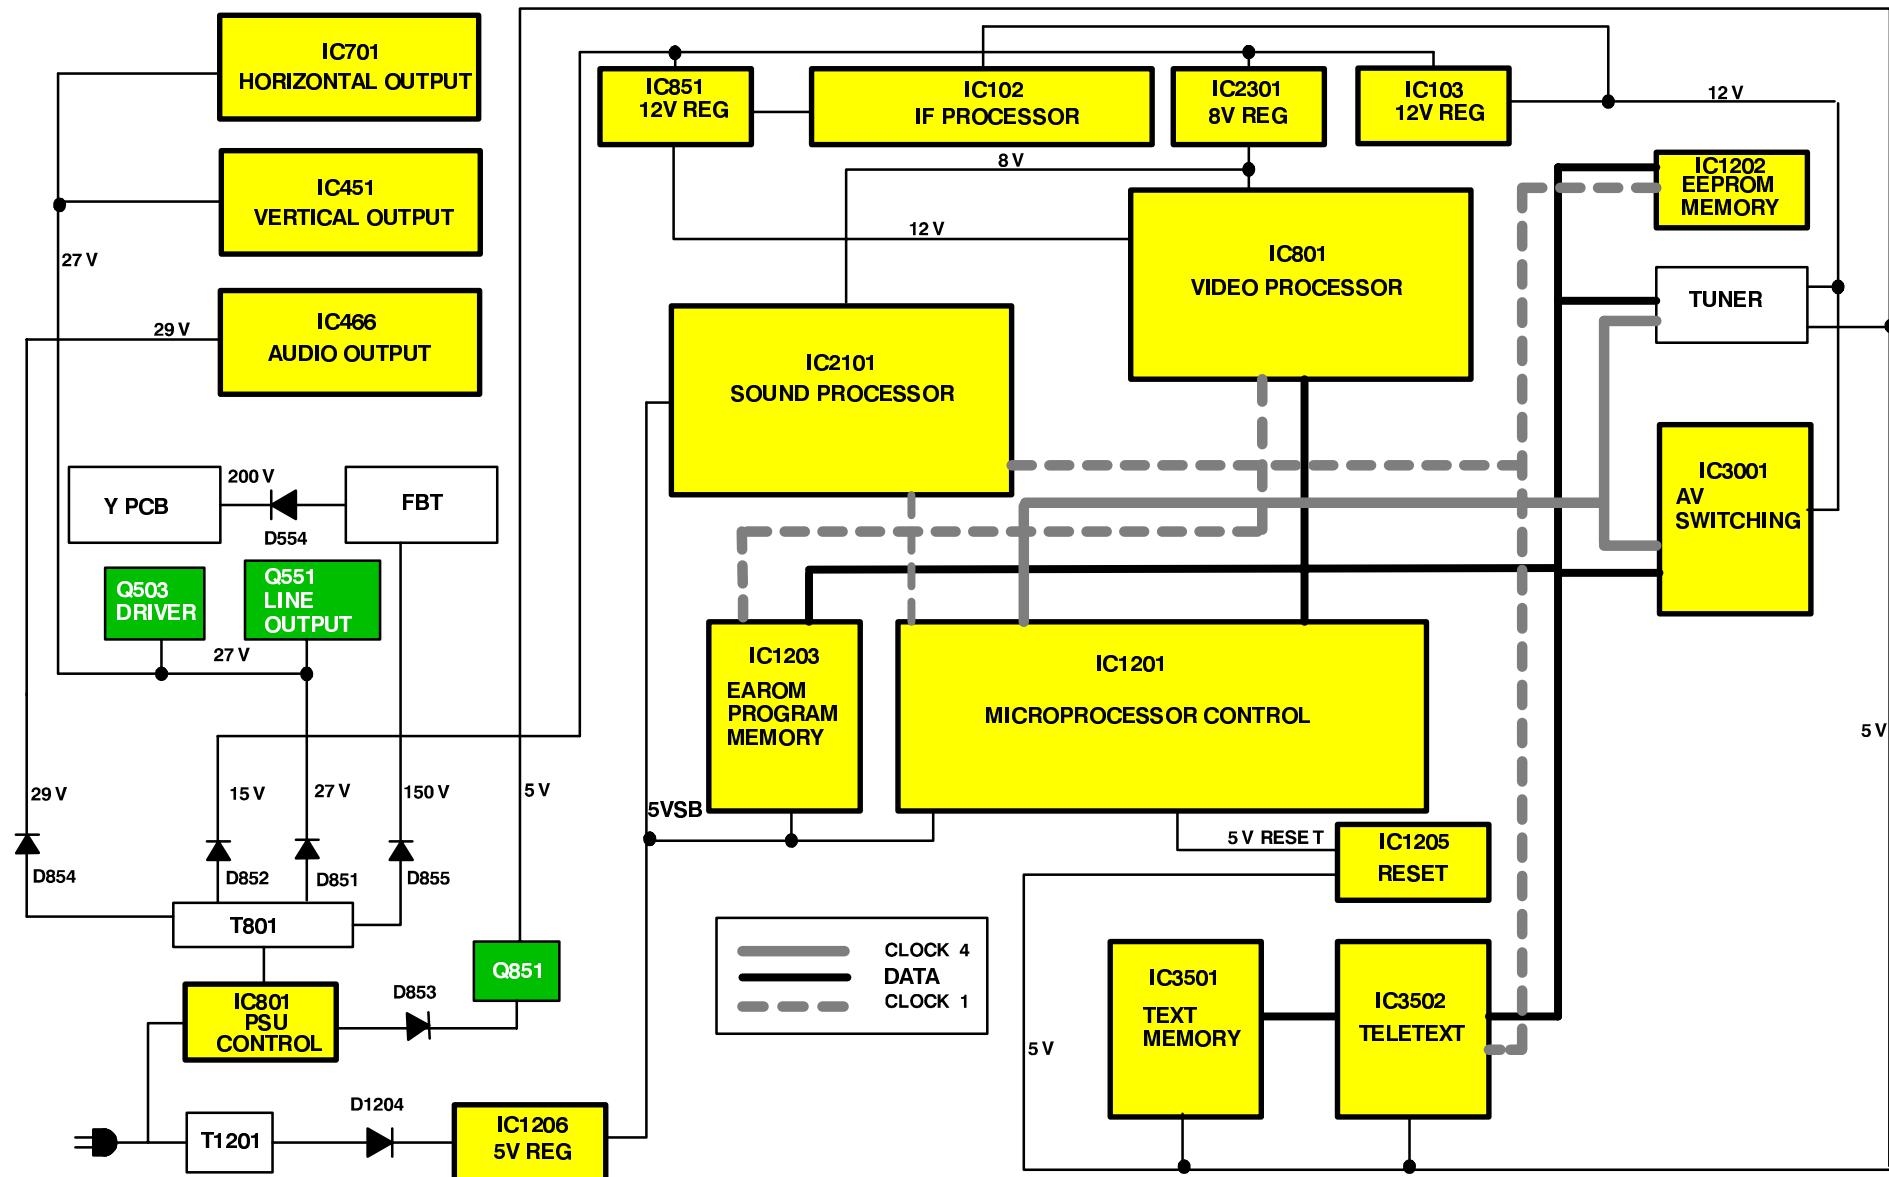

PARTS LOCATION

NOTE :

The numbers on the exploded view below refer to the miscellaneous section of the Replacement Parts List.

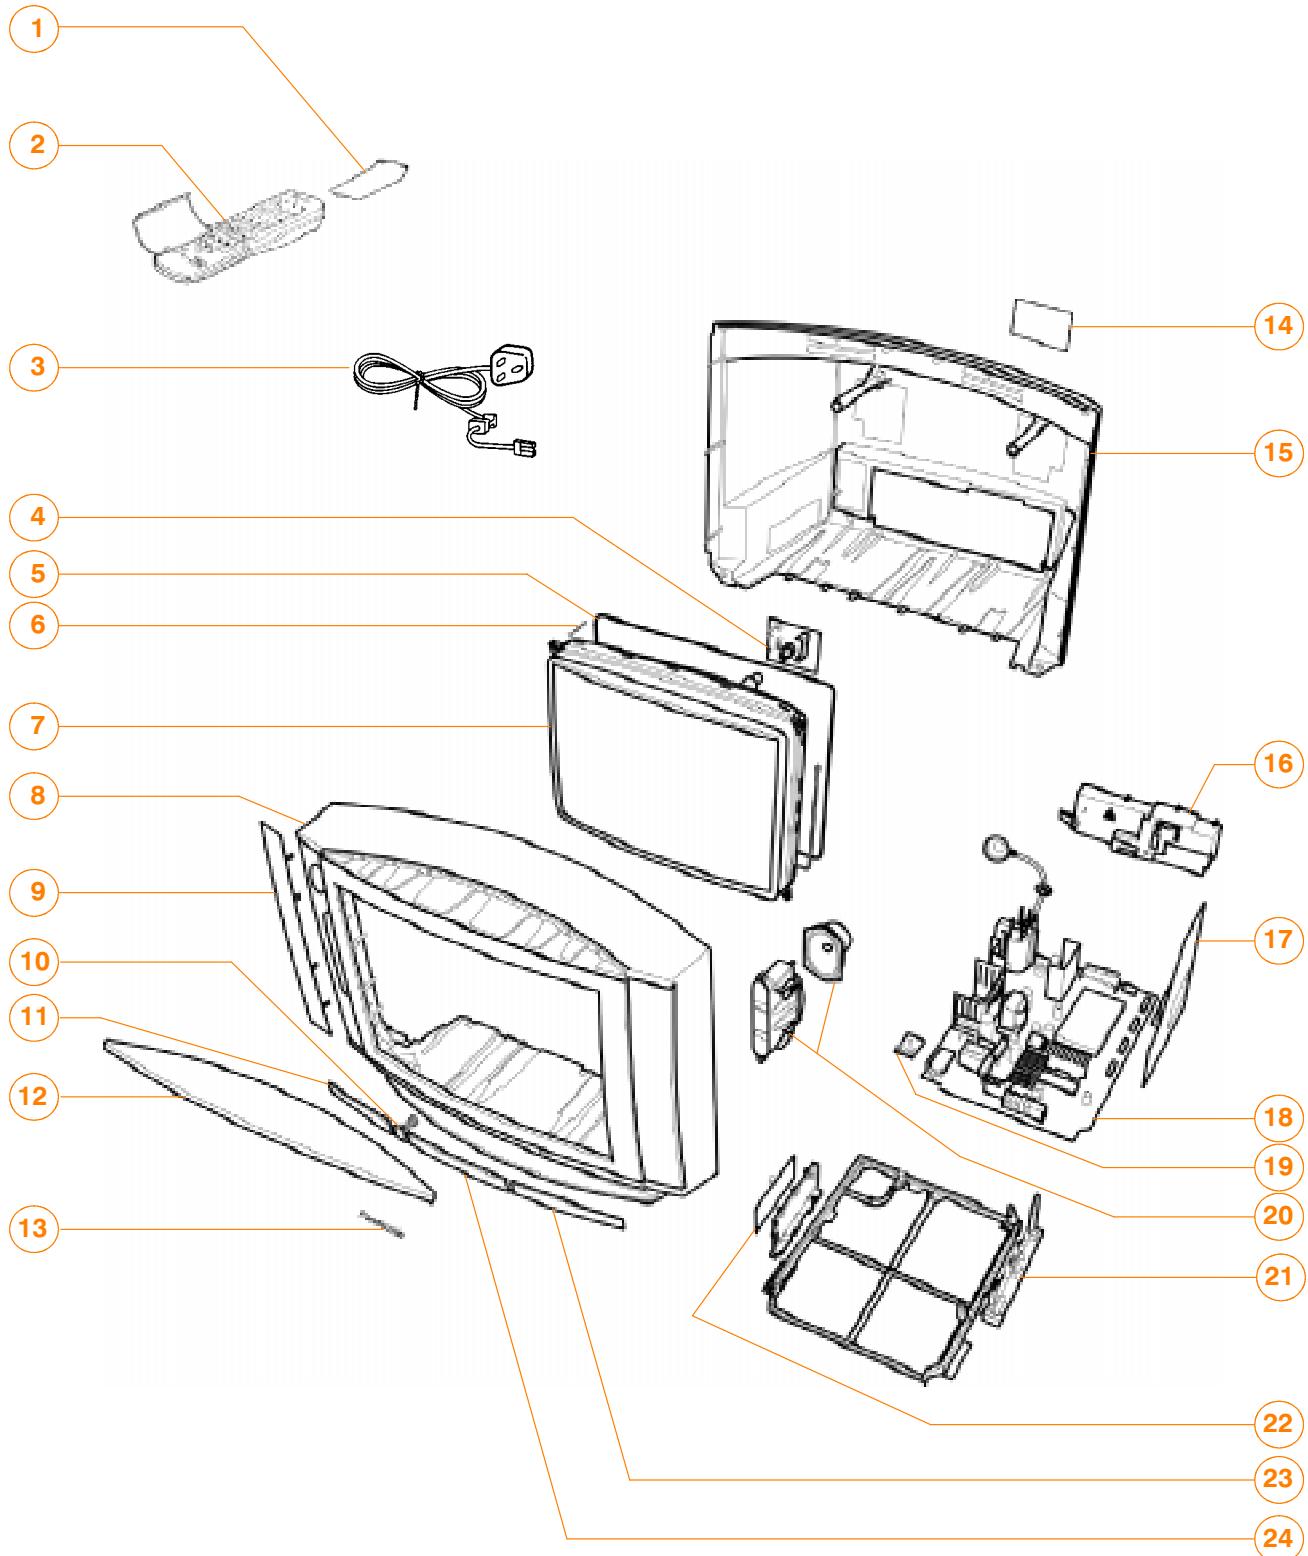

REPLACEMENT PARTS LIST

Important Safety Notice

Components identified by **▲** mark have special characteristics important for safety.
When replacing any of these components, use only manufacturer's specified parts.

Ref No.	Part No.	Description
MISCELLANEOUS COMPONENTS		
1)	UR51EC780	BATTERY COVER (REMOTE)
2)	EUR51920	REMOTE CONTROL
3)	TSX8E0018	POWER CORD ▲
4)	TNP117070AS	Y PC.B. ▲
5)	TLK8E05125	DEGAUSS COIL ▲
6)	VP17005-32	CRT FIXING SCREW
7)	A66ECF50X32	CRT ▲
8)	TKY8E160	CABINET ▲
9)	TKP8E1169	SPEAKER NET
10)	TBX8E045	POWER BUTTON (DARK WALNUT)
11)	TKP8E1184	LEFT PANEL (DARK WALNUT)
12)	TKP8E1182	TOP PANEL (DARK WALNUT)
13)	TBM8E1728	PANASONIC BADGE
14)	TBM8E1667	MODEL LABEL
15)	TKU8E00320	BACK COVER ▲
16)	TKP8E1165	AV COVER
17)	TNP8EB007AA	B P.C.B. ▲
18)	TNP8EE008AG	E P.C.B. ▲
19)	TNP8EN014AA	N P.C.B. ▲
20)	EAG1216A2	SPEAKER
21)	TMX8E010	CHASSIS BRACKET
22)	TNP8EP013AB	P .P.C.B. ▲
23)	TKP8E1186	RIGHT PANEL (DARK WALNUT)
24)	TKP8E1180	DOOR LID (DARK WALNUT)
	TBM8E1615	PRESET LABEL
	TEK6940	LID CATCHER
	TES8E015	POWER BUTTON SPRING
	TMW8E020	LED HOLDER
	TMW8E020-1	LED HOLDER
	ENG27501G	TUNER
	TPC8E4611	OUTER CARTON
	TPD8E633	TOP CUSHION
	TPD8E634	BOTTOM CUSHION
	TQB8E2306	INST BOOK ▲
	VS-XD3/A	VIDEO CABINET
	UM-3DEP-2P	BATTERY
	31221212478	FIX CLIP
	TES4537	SPRING
	F9-4-220	RELAY
	SVM100	COIL
	ERC12GK825	SOLID 0.5W 10% 8M2Ω
INTEGRATED CIRCUITS		
IC103	L78M12MRB	12V REGULATOR
IC104	AN78L09TA	9V REGULATOR
IC251	LA4280-TV	AUDIO OUTPUT
IC351	TDA6103Q-N3	R.G.B.AMPLIFIER
IC451	LA7845N	VERTICAL OUTPUT
IC601	VDP3108APPA1	VIDEO PROCESSOR
IC701	TEA2031A	HORIZONTAL OUTPUT
IC801	TDA4601	POWER SUPPLY
IC851	L78M12MRB	12V REGULATOR
IC1061	RPM-637CBRL	LED RECEIVER
IC1201	CCU3000I-07	CENTRAL CONTROL UNIT
IC1202	27C010-002AV	EPROM
IC1203	X24LM0401AE	EAROM
IC1205	MN1280R	RESET
IC2101	MSP3410BPPF7	AUDIO PROCESSOR
IC2301	AN78L08TA	8V REGULATOR
IC3001	TEA6415C	VIDEO SWITCH
IC3501	UD61256DC-08	DYNAMIC RAM
IC3502	TPU3040-20	TEXT PROCESSOR
CAPACITORS		
C124	ECEA1CKA470	ELECT 16V 47μF
C130	ECA1HMR47GB	ELECT 50V 0.47μF
C135	ECUV1H103ZFX	S.M.CAP 50V 10nF

Ref No.	Part No.	Description
C136	ECA1CM100GB	ELECT 16V 10pF
C137	ECA1EM101GB	ELECT 25V 1μF
C138	ECUV1H103ZFX	S.M.CAP 50V 10nF
C139	ECUV1H390JCX	S.M.CAP 50V 39pF
C140	ECUV1H390JCX	S.M.CAP 50V 39pF
C141	ECUV1H103ZFX	S.M.CAP 50V 10nF
C144	ECA1HMR33GB	ELECT 50V 0.33μF
C145	ECUV1H103ZFX	S.M.CAP 50V 10nF
C146	ECUV1H104ZFX	S.M.CAP 50V 100nF
C147	ECUV1H102KBX	S.M.CAP 50V 1nF
C148	ECEA1HKAR22	ELECT 50V 0.22μF
C149	ECA1EM470GB	ELECT 25V 47pF
C150	ECUV1H103ZFX	S.M.CAP 50V 10nF
C151	ECUV1H104ZFX	S.M.CAP 50V 100nF
C154	ECA1CM221GB	ELECT 16V 220pF
C170	ECUV1H331KBX	S.M.CAP 50V 330pF
C201	ECUV1H070DCX	S.M.CAP 50V 7pF
C202	ECUV1H070DCX	S.M.CAP 50V 7pF
C203	ECUV1H470JX	S.M.CAP 50V 47pF
C204	ECUV1H560JCX	S.M.CAP 50V 56pF
C205	ECUV1H100DCX	S.M.CAP 50V 10pF
C207	ECUV1H220JCX	S.M.CAP 50V 22pF
C209	ECUV1H103ZFX	S.M.CAP 50V 10nF
C210	ECUV1H103ZFX	S.M.CAP 50V 10nF
C211	ECUV1H103ZFX	S.M.CAP 50V 10nF
C251	ECA1EM330B	ELECT 25V 33pF
C252	ECUV1H223KBX	S.M.CAP 50V 22nF
C253	ECA1HM4R7GB	ELECT 50V 4.7μF
C254	222236516474	FILM 160V 470nF
C255	ECEA1EGE101	ELECT 25V 100μF
C256	ECUV1H223KBX	S.M.CAP 50V 22nF
C257	ECA1HM4R7GB	ELECT 50V 4.7μF
C258	ECA1EM330B	ELECT 25V 33pF
C259	222236516474	FILM 160V 470nF
C260	ECA1VM102GE	ELECT 35V 1nF
C261	ECA1VM102GE	ELECT 35V 1nF
C262	222236516274	FILM 160V 270nF
C263	ECA1HM010GB	ELECT 50V 1pF
C264	ECEA1HGE222	ELECT 50V 2200μF
C265	222236516274	FILM 160V 270nF
C266	ECA1HM010GB	ELECT 50V 1pF
C267	ECUV1H104KBX	S.M.CAP 50V 100nF
C268	ECUV1H104KBX	S.M.CAP 50V 100nF
C271	ECUV1H561KBX	S.M.CAP 50V 560pF
C301	ECA1CM470GB	ELECT 16V 47μF
C302	ECUV1H104ZFX	S.M.CAP 50V 100nF
C303	ECUV1H104ZFX	S.M.CAP 50V 100nF
C310	ECUV1H104ZFX	S.M.CAP 50V 100nF
C351	ECUV1H270JCX	S.M.CAP 50V 27pF
C352	ECUV1H100CCX	S.M.CAP 50V 10pF
C353	ECUV1H180JCX	S.M.CAP 50V 18pF
C354	ECQM2104KZ	FILM 250V 100nF
C355	ECUV1H222JCX	S.M.CAP 50V 2.2nF
C356	ECUV1H222JCX	S.M.CAP 50V 2.2nF
C357	ECUV1H222JCX	S.M.CAP 50V 2.2nF
C358	222236516224	FILM 160V 220nF
C360	ECKC3D152J	CERAMIC 2KV 1.5nF
C361	ECA1HMR47GB	ELECT 50V 0.47μF
C364	ECUV1H103ZFX	S.M.CAP 50V 10nF
C366	ECA1CM100GB	ELECT 16V 10pF
C451	ECUV1H102JX	S.M.CAP 50V 1nF
C452	ECUV1H102ZFX	S.M.CAP 50V 1nF
C453	ECUV1H472KBX	S.M.CAP 50V 4.7nF
C454	ECUV1H104ZFX	S.M.CAP 50V 100nF
C455	ECEA1VGE222	ELECT 35V 2200μF
C456	ECEA1HGE221	ELECT 50V 220μF
C457	ECUV1H223KBX	S.M.CAP 50V 22nF
C458	ECQM1H273J	FILM 50V 27nF
C459	222236516224	FILM 160V 220nF
C460	222236516105	FILM 160V 1μF
C462	ECEA1VGE332	ELECT 35V 3300μF

▲

Ref No.	Part No.	Description									
SOCKETS											
H1202 832AG11D-ESL I.C.SOCKET											
TERMINALS AND LINKS											
JA.1	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.1	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.10	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.11	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.12	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.13	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.14	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.15	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.16	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.17	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.18	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.19	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.2	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.2	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.20	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.21	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.22	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.24	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.25	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.26	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.27	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.28	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.29	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.3	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.30	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.4	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.5	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.6	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.7	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.8	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.9	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.33	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.34	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JA.35	ERJ8GEY0R00	S.M.CAR	.125W	5%	0Ω						
JA.36	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB1	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB10	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB11	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB12	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB13	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB14	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB15	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB16	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB17	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB18	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB19	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB2	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB20	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB21	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB22	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB23	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB24	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB25	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB26	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB27	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB28	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB29	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB3	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB30	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB31	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB32	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB33	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB34	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB35	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB36	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB37	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB38	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB39	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB40	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB41	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB42	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB43	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB44	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB45	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB46	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						
JB47	ERJ6GEY0R00	S.M.CARB	0.1W	5%	0Ω						

Ref No.	Part No.	Description									
COILS											
L001 TLT100K991R COIL											
L111	TLT101K991R	COIL									
L112	EXCELSA35T	COIL									
L113	EXCELSA35T	COIL									
L114	TLT100K991R	COIL									
L130	ELESN8R2KA	COIL									
L132	ELESN8R2KA	COIL									
L202	TLT068K991R	COIL									
L251	EXCELSA35T	COIL									
L301	TLT047K991R	COIL									
L302	EXCEMT101BT	COIL									
L303	EXCEMT101BT	COIL									
L304	EXCEMT101BT	COIL									
L352	SDL-4101	COIL									
L353	SDL-4101	COIL									
L354	SDL-4101	COIL									

Ref No.	Part No.	Description
L552	ELH5L437	COIL
L553	ELC08D055	COIL
L554	297-23293	COIL
L601	TLT047K991R	COIL
L602	EXCELDR35V	COIL
L603	TLT047K991R	COIL
L604	EXCELDR35V	COIL
L606	TLT015K991R	COIL
L607	EXCELSA35T	COIL
L701	ELC10D006	COIL
L801	EXCELSA24T	COIL
L802	TLT022K991R	COIL
L804	ELESN4R7KA	COIL
L805	298-82858001	COIL
L841	ELF18D490F	COIL
L851	EXCELDR35V	COIL
L852	EXCELSA35T	COIL
L853	ELEIE470KA	COIL
L854	ELEIN470KA	COIL
L855	ELEIN470KA	COIL
L856	ELEIN470KA	COIL
L901	EXCELSA24T	COIL
L902	EXCELSA24T	COIL
L1201	TLT047K991R	COIL
L1202	TLT047K991R	COIL
L1203	TLT047K991R	COIL
L1204	EXCELDR35V	COIL
L2101	TLT100K991R	COIL
L2102	TLT039K991R	COIL
L2103	EXCELSA35T	COIL
L2104	EXCELSA35T	COIL
L3151	EXCEMT101BT	COIL
L3152	EXCEMT101BT	COIL
L3153	EXCEMT101BT	COIL
L3154	EXCEMT101BT	COIL
L3155	ELEBT6R8KA	COIL
L3156	ELEBT6R8KA	COIL
L3158	EXCELSA39V	COIL
L3501	EXCELDR35V	COIL
L3502	EXCELDR35V	COIL
L3503	ELESN4R7KA	COIL
L3504	EXCELSA35T	COIL

TRANSISTORS

Q201	BC847B	TRANSISTOR OR 2SD601ATX
Q202	BC847B	TRANSISTOR OR 2SD601ATX
Q251	2SD1328STX	TRANSISTOR
Q252	2SD1328STX	TRANSISTOR
Q301	BC857B	TRANSISTOR OR 2SB709ATX
Q302	BC847B	TRANSISTOR OR 2SD601ATX
Q303	BC857B	TRANSISTOR OR 2SB709ATX
Q304	BC847B	TRANSISTOR OR 2SD601ATX
Q305	BC857B	TRANSISTOR OR 2SB709ATX
Q306	BC847B	TRANSISTOR OR 2SD601ATX
Q307	BC847B	TRANSISTOR OR 2SD601ATX
Q308	BC847B	TRANSISTOR OR 2SD601ATX
Q309	BC847B	TRANSISTOR OR 2SD601ATX
Q310	BC847B	TRANSISTOR OR 2SD601ATX
Q311	BC847B	TRANSISTOR OR 2SD601ATX
Q351	2SA1767	TRANSISTOR
Q352	2SA1767	TRANSISTOR
Q353	2SA1767	TRANSISTOR
Q451	BC847B	TRANSISTOR OR 2SD601ATX
Q501	BC847B	TRANSISTOR OR 2SD601ATX
Q502	BC847B	TRANSISTOR OR 2SD601ATX
Q503	2SD836-AL	TRANSISTOR
Q504	BC847B	TRANSISTOR OR 2SD601ATX
Q551	2SD1577LB	TRANSISTOR
Q552	2SC1473-RN	TRANSISTOR
Q701	BC857B	TRANSISTOR OR 2SB709ATX
Q802	S2000NLBMA	TRANSISTOR
Q851	2SD1273PLB	TRANSISTOR OR 2SD2396/JM3
Q852	TFD312SOF632	DIODE
Q901	BC847B	TRANSISTOR OR 2SD601ATX
Q902	BC847B	TRANSISTOR OR 2SD601ATX
Q903	BC847B	TRANSISTOR OR 2SD601ATX
Q904	BC857B	TRANSISTOR OR 2SB709ATX
Q905	BC847B	TRANSISTOR OR 2SD601ATX
Q906	BC847B	TRANSISTOR OR 2SD601ATX
Q907	BC857B	TRANSISTOR OR 2SB709ATX
Q908	2SB940APLB	TRANSISTOR

Ref No.	Part No.	Description
Q909	2SD1264APLB	TRANSISTOR
Q1202	BC847B	TRANSISTOR OR 2SD601ATX
Q1205	BC847B	TRANSISTOR OR 2SD601ATX
Q1206	BC847B	TRANSISTOR OR 2SD601ATX
Q1207	BC847B	TRANSISTOR OR 2SD601ATX
Q1208	BC857B	TRANSISTOR OR 2SB709ATX
Q1211	BC547B	TRANSISTOR
Q1212	BC847B	TRANSISTOR OR 2SD601ATX
Q1213	BC847B	TRANSISTOR OR 2SD601ATX
Q2101	BC860B	TRANSISTOR
Q2102	BC860B	TRANSISTOR
Q2301	BC857B	TRANSISTOR OR 2SB709ATX
Q2302	BC857B	TRANSISTOR OR 2SB709ATX
Q2305	2SD1328STX	TRANSISTOR
Q2306	2SD1328STX	TRANSISTOR
Q2307	BC860B	TRANSISTOR
Q2308	BC857B	TRANSISTOR OR 2SB709ATX
Q2309	BC860B	TRANSISTOR
Q2310	BC860B	TRANSISTOR
Q3001	2SC1318-S	TRANSISTOR
Q3004	BC847B	TRANSISTOR OR 2SD601ATX
Q3005	BC847B	TRANSISTOR OR 2SD601ATX
Q3006	2SC1318-S	TRANSISTOR
Q3011	BC857B	TRANSISTOR OR 2SB709ATX
Q3012	2SD1328STX	TRANSISTOR
Q3013	2SD1328STX	TRANSISTOR

RESISTOR

RL1201	TSE1885-1	TRANSISTOR
R.378	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
R.379	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
R.380	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
R.604	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
R.622	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
R.925	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
R.926	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
R130	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R131	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R132	ERJ6GEYJ223	S.M.CARB 0.1W 5% 22KΩ
R133	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R134	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
R136	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
R201	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R203	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
R204	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R205	ERJ6GEYJ332	S.M.CARB 0.1W 5% 3K3Ω
R206	ERJ6GEYJ681	S.M.CARB 0.1W 5% 680Ω
R207	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R208	ERJ6GEYJ222	S.M.CARB 0.1W 5% 2K2Ω
R209	ERJ6GEYJ332	S.M.CARB 0.1W 5% 3K3Ω
R210	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R251	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R252	ERJ6GEYJ272	S.M.CARB 0.1W 5% 2K7Ω
R253	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R254	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R255	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R256	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R257	ERJ6GEYJ100	S.M.CARB 0.1W 5% 10Ω
R258	ERJ6GEYJ272	S.M.CARB 0.1W 5% 2K7Ω
R259	ERJ6GEYJ100	S.M.CARB 0.1W 5% 10Ω
R260	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R261	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R262	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R265	ERD25TJ2R2	CARBON 0.25W 5% 2R2Ω
R266	ERD25TJ2R2	CARBON 0.25W 5% 2R2Ω
R267	ERF7ZK4R7	WOUND 7W 10% 4R7Ω ▲
R271	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R272	ERF7ZK4R7	WOUND 7W 10% 4R7Ω ▲
R273	ERD25TJ273	CARBON 0.25W 5% 27KΩ
R301	ERJ6GEYJ750	S.M.CARB 0.1W 5% 75Ω
R302	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R303	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R304	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R305	ERJ6GEYJ750	S.M.CARB 0.1W 5% 75Ω
R306	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R307	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R308	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R309	ERJ6GEYJ750	S.M.CARB 0.1W 5% 75Ω
R310	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R311	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R312	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω

Ref No.	Part No.	Description			
R3070	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω
R3071	ERJ6GEYJ470	S.M.CARB	0.1W	5%	47Ω
R3150	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω
R3151	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω
R3152	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω
R3153	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω
R3154	ERJ6GEYJ183	S.M.CARB	0.1W	5%	18KΩ
R3155	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω
R3156	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω
R3157	ERJ6GEYJ183	S.M.CARB	0.1W	5%	18KΩ
R3158	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω
R3502	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω
R3504	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω
R3505	ERJ6GEYOR00	S.M.CARB	0.1W	5%	0Ω
R3508	ERJ6GEYJ183	S.M.CARB	0.1W	5%	18KΩ
R3511	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ
R3512	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω

Ref No.	Part No.	Description
SWITCHES		
S.351	0330550049	CRT SOCKET
S801	ESB91232A	SWITCH
S1201	EVQ23405R	SWITCH
S1202	EVQ23405R	SWITCH
S1203	EVQ23405R	SWITCH
S1204	EVQ23405R	SWITCH
S1205	EVQ23405R	SWITCH
TRANSFORMERS		
T501	5270103200	TRANSFORMER
T551	ZTFH44011A	F.B.T.
T801	ETS42AP147AC	TRANSFORMER
T1201	ETP35KAN61ZU	TRANSFORMER
FILTERS		
X601	TSS2169-B	CRYSTAL
X1201	TSS120M2	CRYSTAL
X2101	4730007158	CRYSTAL

SCHEMATIC DIAGRAM FOR MODEL TX-28XD3 (EURO-2M CHASSIS)

IMPORTANT SAFETY NOTICE

Components identified by  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

Notes

1. RESISTOR
All resistors are carbon 1/4W resistor, unless marked.
Unit of resistance is OHM (Ω) (K=1,000, M=1,000,000).
2. CAPACITOR
All capacitors are ceramic 50V capacitors, unless marked, the unit of capacitance is μF unless otherwise stated.
3. COIL
Unit of inductance is μH , unless otherwise stated.
4. TEST POINT
 : Test Point position
5. EARTH SYMBOL
 : Chassis Earth (Cold)
 : Line Earth (Hot)
6. VOLTAGE MEASUREMENT
Voltage is measured by a DC voltmeter.
Measurement conditions are as follows:


Power source	AC 220–240V, 50Hz
Receiving Signal	Colour Bar signal (RF)
All customer controls	Maximum position
7.
 : Indicates the Video signal path
 : Indicates the Audio signal path
 : Indicates the Vertical/Horizontal signal path
8. This schematic diagram is the latest at the time of printing and is subject to change without notice.

Precautions

- a. Do not touch the hot part, or the hot and cold parts at the same time, as you are liable to a shock hazard.
- b. Do not short-circuit the hot and cold circuits as electrical components may be damaged.
- c. Do not connect an instrument, such as an oscilloscope, to the hot and cold circuits simultaneously, as this may cause fuse failure. Connect the earth of the instruments to the earth connection of the circuit being measured.
- d. Make sure to disconnect the power plug before removing the chassis.


Remarks

1. The Power Circuit contains a circuit area which uses a separate power supply to isolate the earth connection. The circuit is defined by HOT and COLD indications in the schematic diagram. All circuits, except the Power Circuit, are COLD.

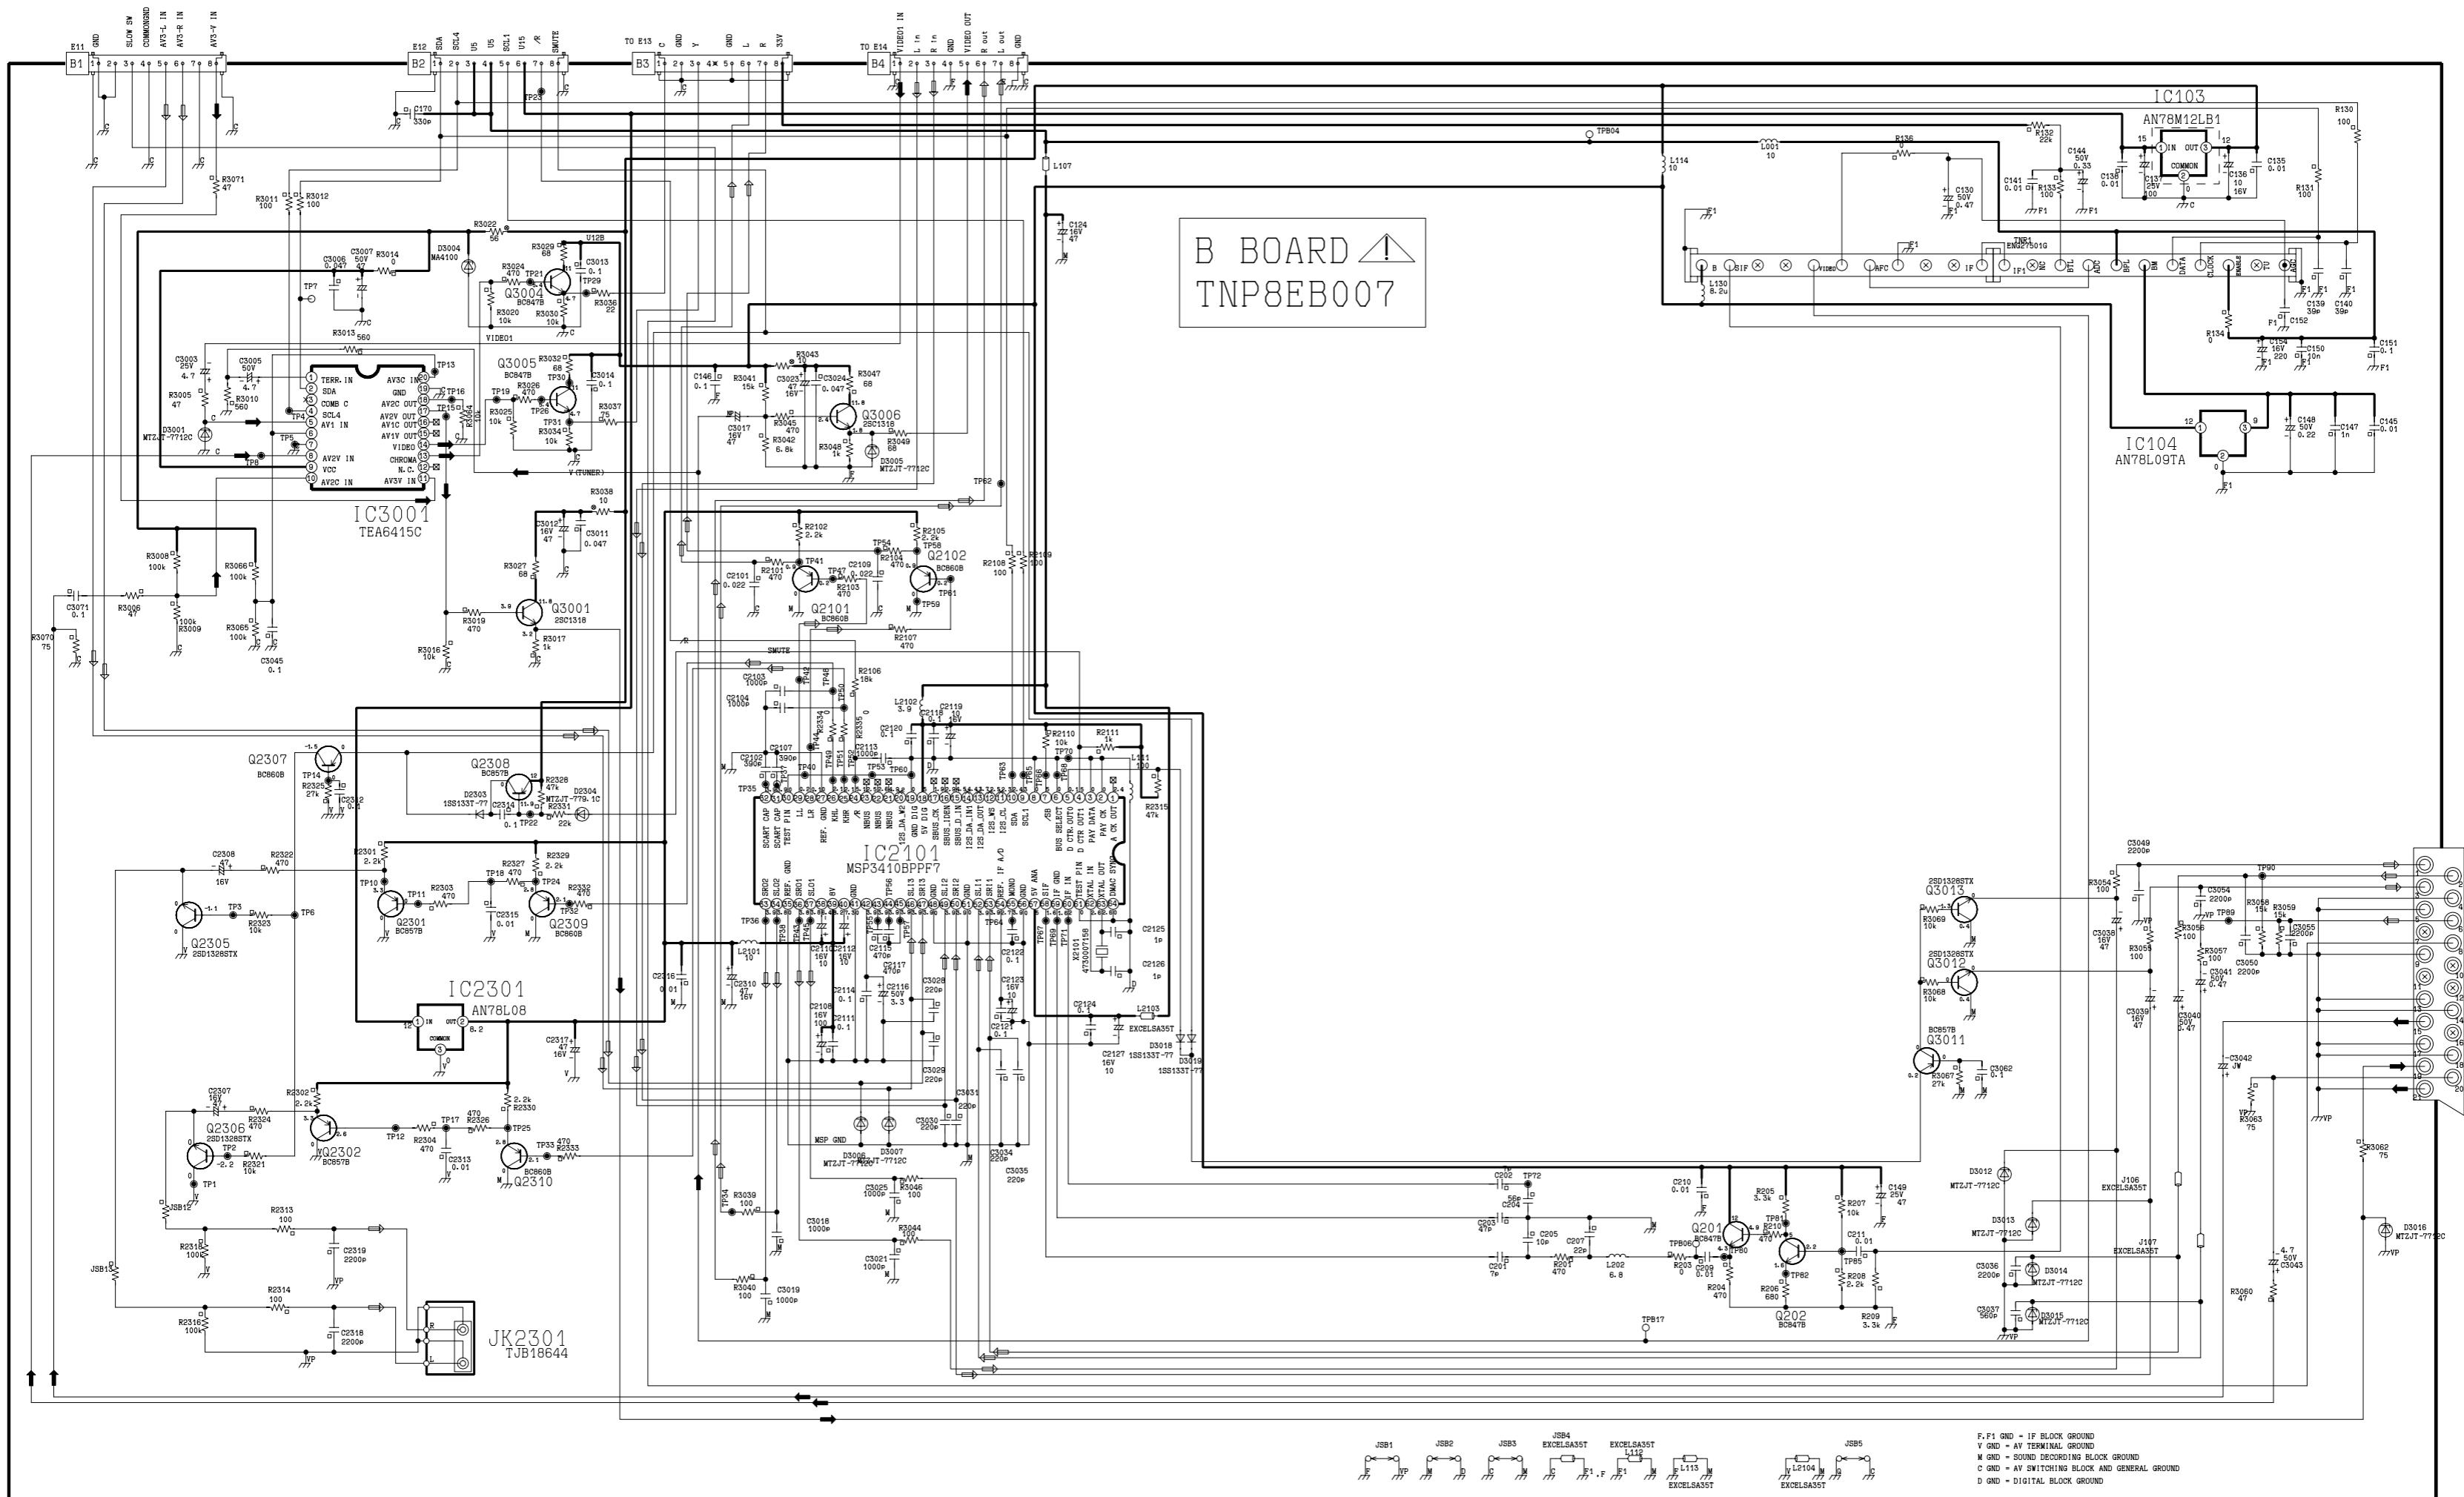



JK3102


TJB16673

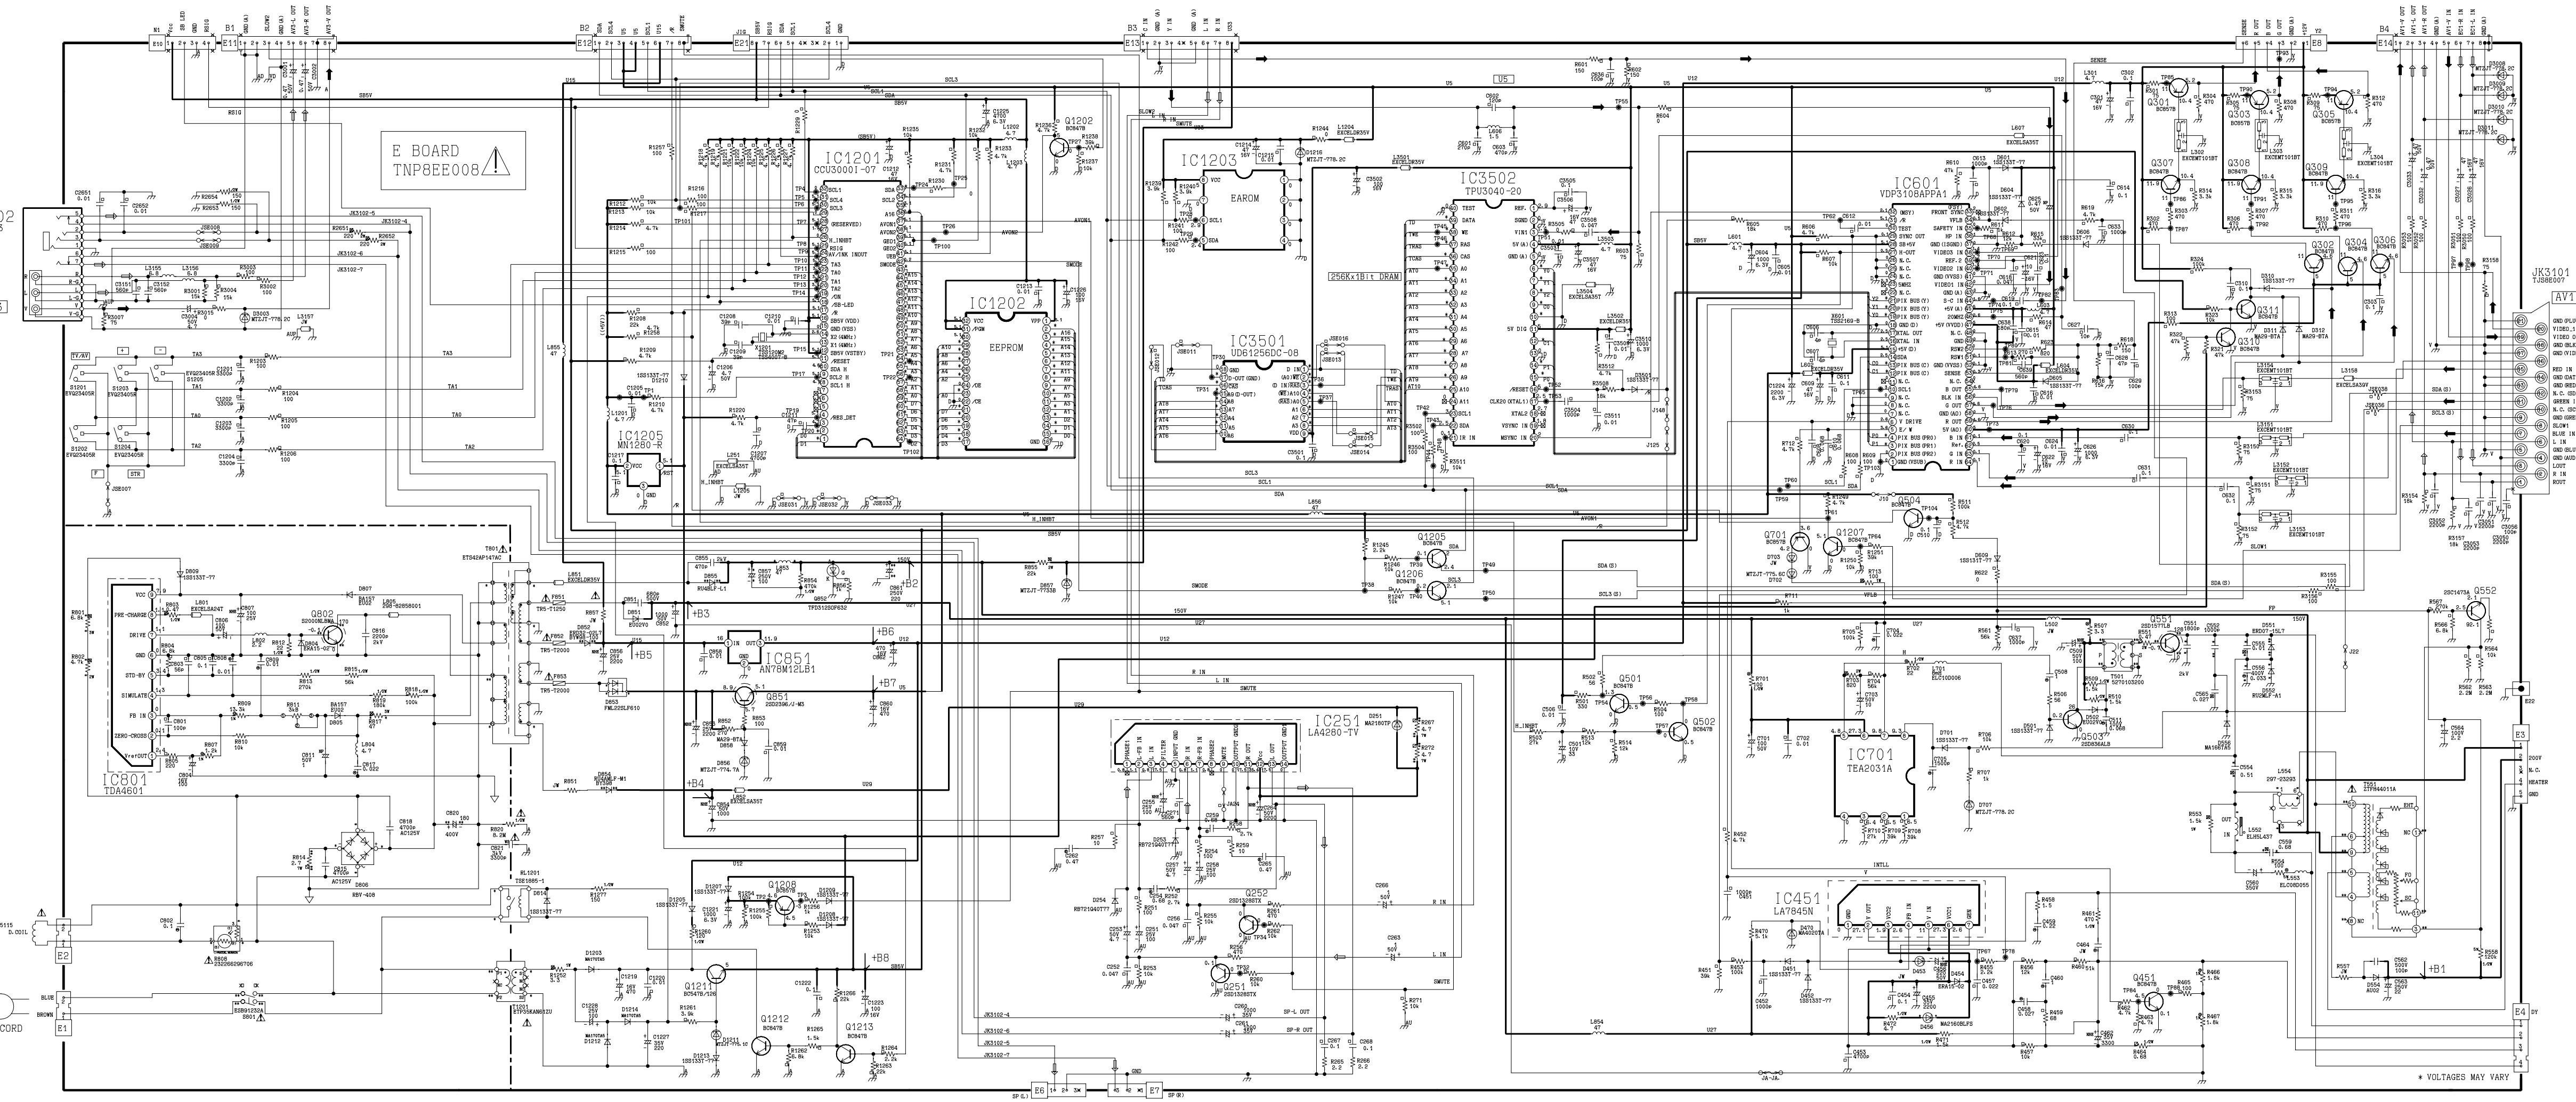

* VOLTAGES MAY VARY

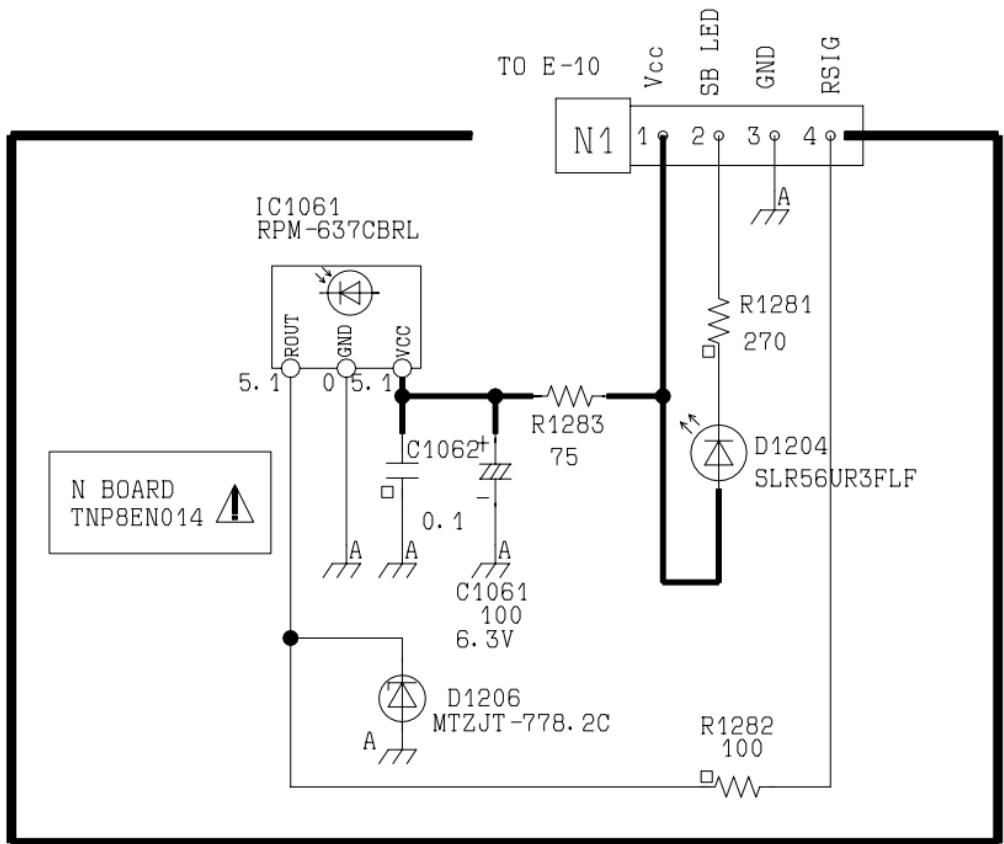

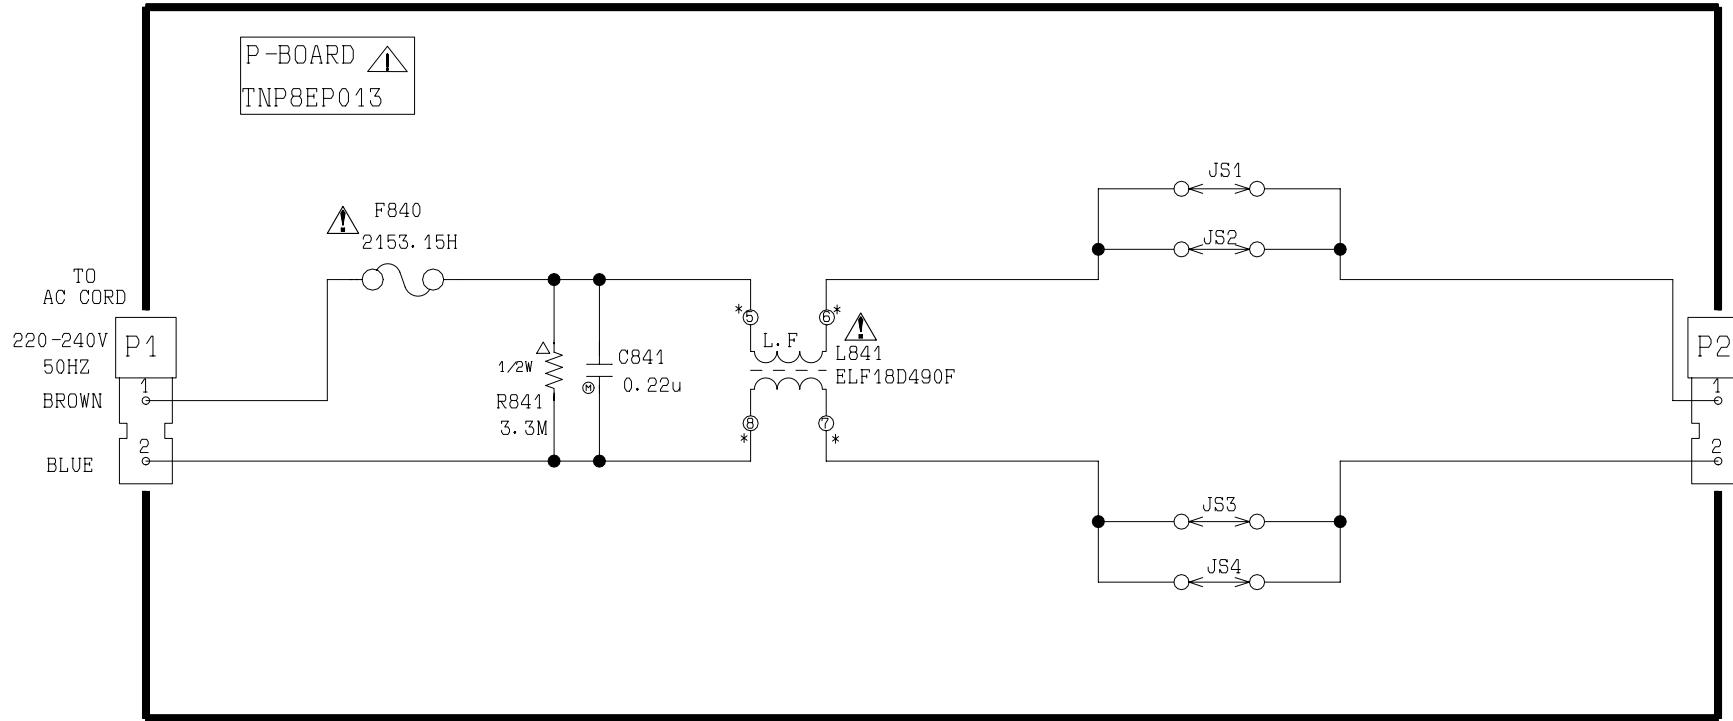

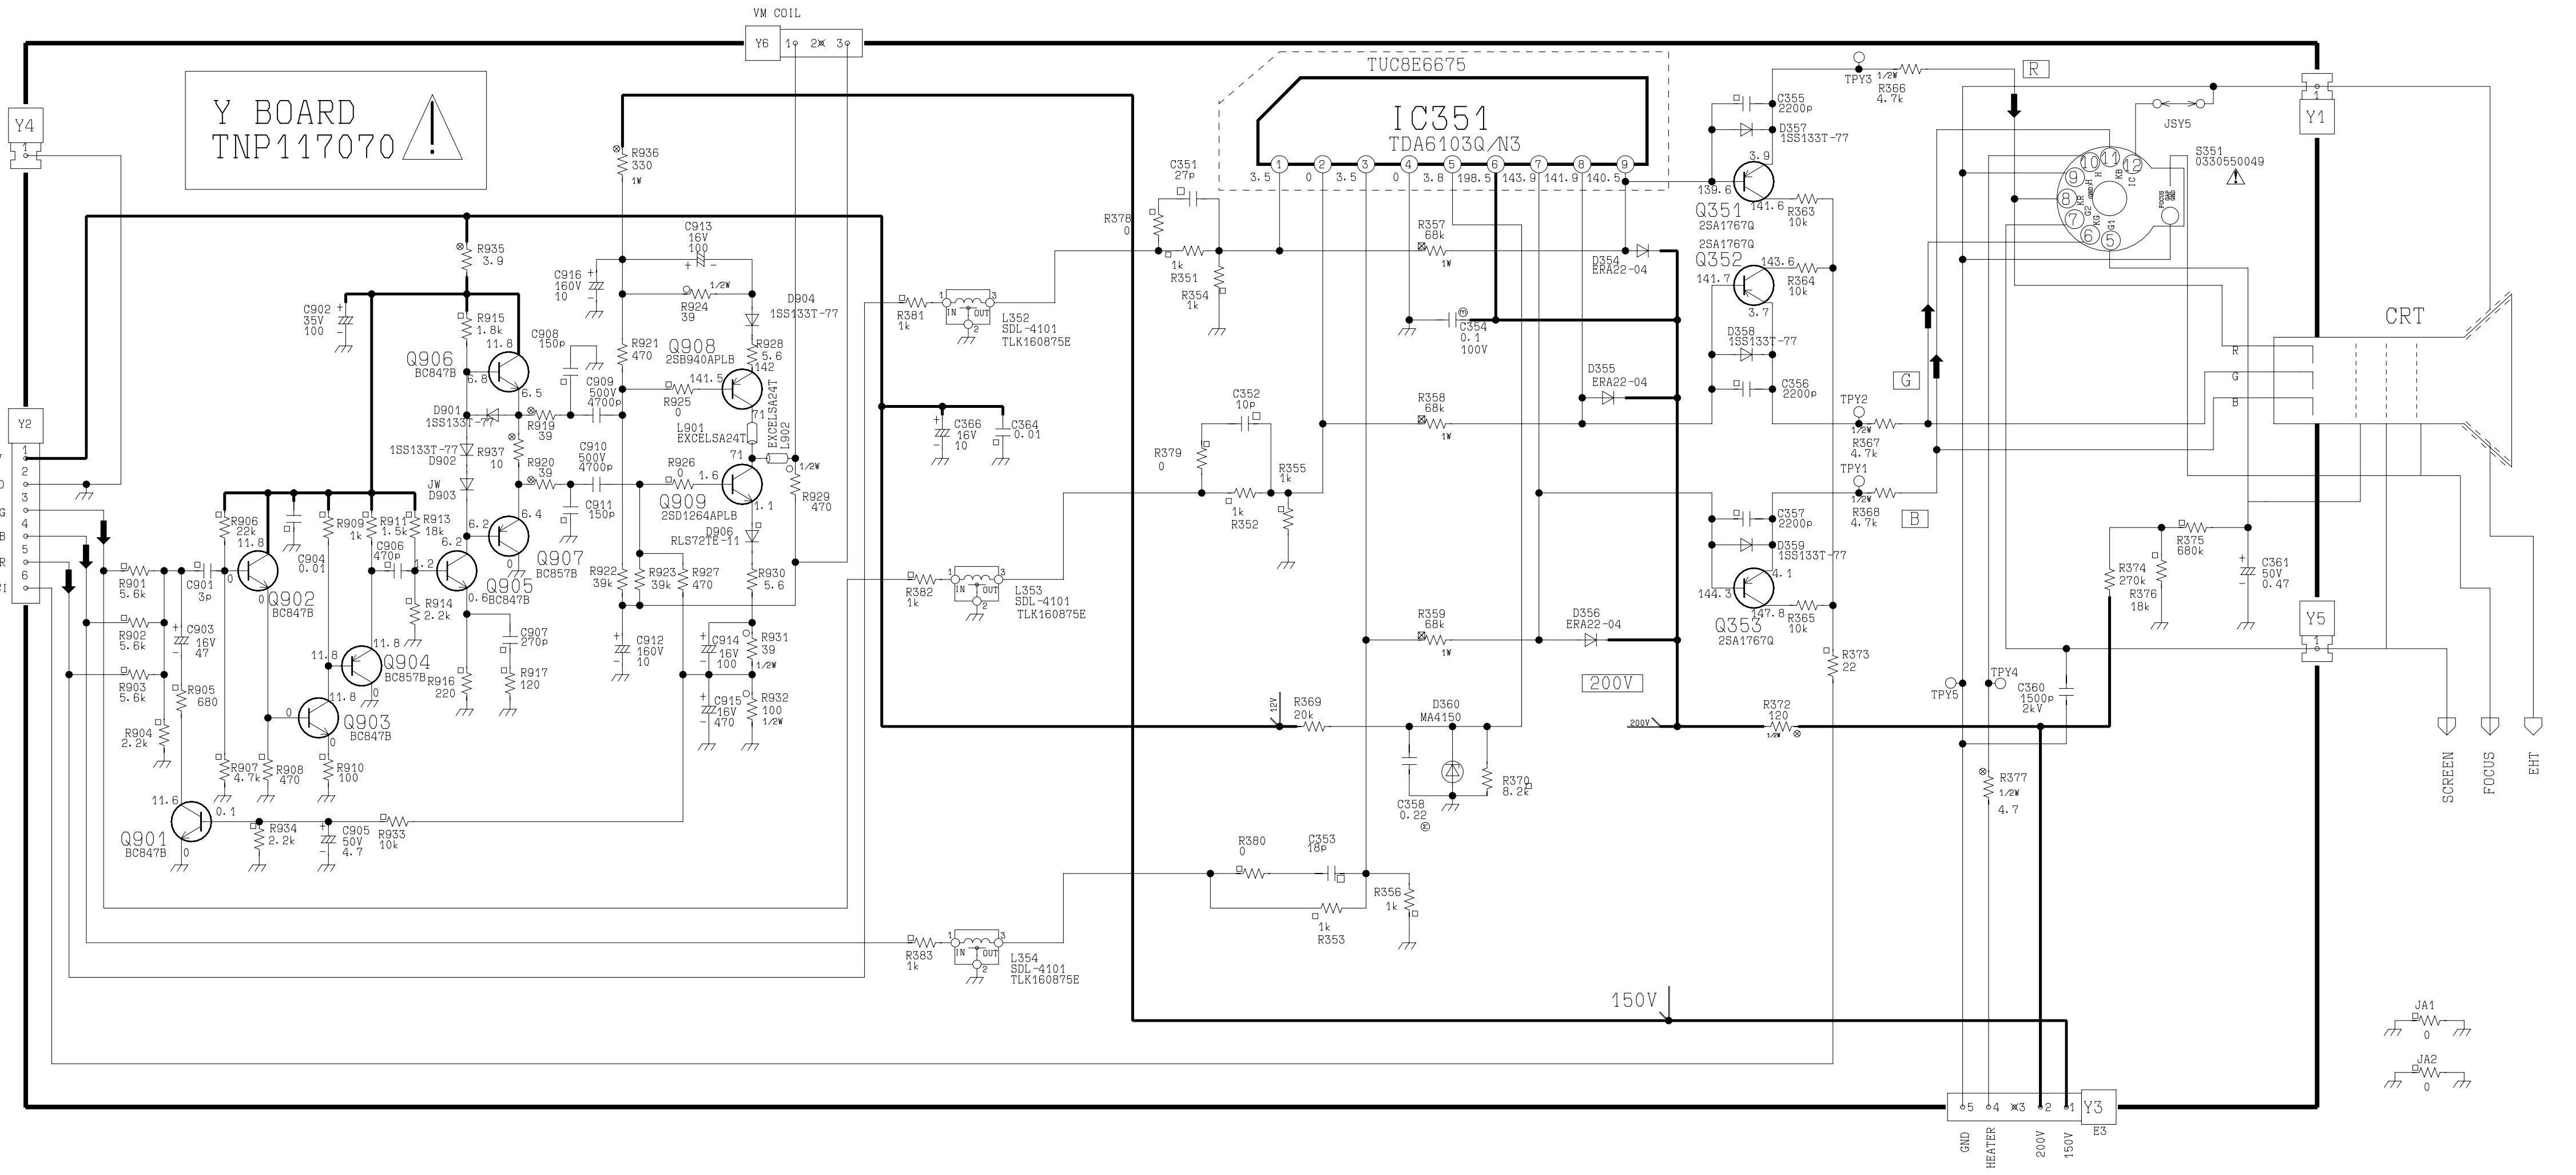

TINP4EB007

18-9

18-6
18-5

