

TX-28/25MDT4F Service Manual

Safety

Specifications

Parts List

Service Information

Adjustments

Self Check

Service Hints

Mechanical View

Disassembly

Location of Controls

Waveforms

Block Diagrams

Schematic Diagrams

PCB Views

Service Support

Service and repair of this product is supported by Panasonic's LUCI interface.

This interface provides a link between the TV and a standard PC to allow a number of diagnostic and control functions to be performed.

For more details contact your local Panasonic company.



BACK

EXIT

Audio

Control

Power supply

Video

BACK

E - PCB

Y - PCB

BACK

E - Schematic

H - Schematic

Y - Schematic

BACK

Service Manual



Colour Television

TX-28MDT4F TX-25MDT4F

EURO4 Chassis

SPECIFICATIONS

(Information in brackets { } refers to model TX-25MDT4F)

Power Source:	220-240V AC, 50Hz
Power Consumption:	85W
Aerial Impedance:	75Ω unbalanced, Coaxial Type
Stand-by Power Consumption:	1.8W
Receiving System:	PAL B, G, H, I D/K, PAL-525/60 SECAM B/G, D/K, L/L' M.NTSC NTSC (AV only)
Receiving Channels:	VHF E2-E12 VHF H1-H2 (ITALY) VHF A-H (ITALY) VHF R1-R2 VHF R3-R5 VHF R6-R12 UHF E21-E69 CATV (S01-S05) CATV S1-S10 (M1-M10) CATV S11-S20 (U1-U10) CATV S21-S41 (HYPERBAND)
Intermediate Frequency	
Video	38.9MHz 34MHz
Audio	32.9MHz, 33.4MHz, 33.16MHz 32.4MHz, 40.4MHz, 33.05MHz 32.66MHz
Colour	34.47MHz (PAL) 34.5MHz, 34.65MHz (SECAM)
Terminals:	
AUDIO MONITOR OUT	Audio (RCAx2) 500mV rms 1kΩ
AV1 IN	Video (21 pin) 1V p-p 75Ω Audio (21 pin) 500mV rms 10kΩ
AV1 OUT	Video (21 pin) 1V p-p 75Ω Audio (21 pin) 500mV rms 1kΩ

AV2 IN	Video (21 pin) Audio (21 pin) S-Video IN (21-pin)	1V p-p 75Ω 500mV rms 10kΩ Y: 1V p-p 75Ω C: 0.3V p-p 75Ω
AV2 OUT	Video (21 pin) Audio (21 pin)	1V p-p 75Ω 500mV rms 1kΩ
AV3 IN	Selectable output (21 pin) Audio (RCAx2) Video (RCAx1)	500mV rms 10kΩ 1V p-p 75Ω
High Voltage:	28.5kV ±1kV	{28.2kV ±1kV}
Picture Tube:	A66ECF50X41 {A59ECF50X41}	66cm 59cm}
Audio Output:	2 x 15W (Music Power)	
Headphones:	8Ω Impedance	
Accessories supplied :	8Ω Impedance 3.5 mm	
	Remote Control	
	2 x R6 (UM3) Batteries	

Dimensions:

Height:	580 mm	{531 mm}
Width:	666 mm	{601 mm}
Depth:	472 mm	{439 mm}

Net weight: 31kg {25kg}

Specifications are subject to change without notice.
Weights and dimensions shown are approximate.

NOTE: This Service Manual should be used in conjunction with the EURO4 Technical guide.

CONTENTS

SAFETY PRECAUTIONS.....	2
SERVICE HINTS.....	3
ADJUSTMENT PROCEDURE.....	4
ADJUSTMENT PROCEDURE AND SELF-CHECK	5
WAVEFORM PATTERN TABLE	6
ALIGNMENT SETTINGS.....	7
BLOCK DIAGRAMS	8
PARTS LOCATION	12
REPLACEMENT PARTS LIST	13
SCHEMATIC DIAGRAMS	22
CONDUCTOR VIEWS.....	26

SAFETY PRECAUTIONS

GENERAL GUIDE LINES

1. It is advisable to insert an isolation transformer in the AC supply before servicing a hot chassis.
2. When servicing, observe the original lead dress in the high voltage circuits. If a short circuit is found, replace all parts that have been overheated or damaged by the short circuit.
3. After servicing, see that all the protective devices such as insulation barriers, insulation papers, shields and isolation R-C combinations are correctly installed.
4. When the receiver is not being used for a long period of time, unplug the power cord from the AC outlet.
5. Potentials as high as 29,5kV {29,2kV} are present when this receiver is in operation. Operation of the receiver without the rear cover involves the danger of a shock hazard from the receiver power supply. Servicing should not be attempted by anyone who is not familiar with the precautions necessary when working on high voltage equipment. Always discharge the anode of the tube.
6. After servicing make the following leakage current checks to prevent the customer from being exposed to shock hazard.

LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs of the plug.
2. Turn on the receiver's power switch.
3. Measure the resistance value with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the receiver, such as screw heads, aerials, connectors, control shafts etc. When the exposed metallic part has a return path to the chassis, the reading should be between 4M ohm and 20M ohm. When the exposed metal does not have a return path to the chassis, the reading must be infinite.

LEAKAGE CURRENT HOT CHECK

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a $2\text{k}\Omega$ 10W resistor in series with an exposed metallic part on the receiver and an earth, such as a water pipe.
3. Use an AC voltmeter with high impedance to measure the potential across the resistor.
4. Check each exposed metallic part and check the voltage at each point.
5. Reverse the AC plug at the outlet and repeat each of the above measurements.

6. The potential at any point should not exceed 1,4 Vrms. In case a measurement is outside the limits specified, there is a possibility of a shock hazard, and the receiver should be repaired and rechecked before it is returned to the customer.

HOT CHECK CIRCUIT

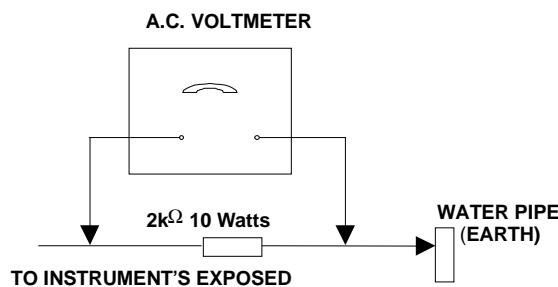


Fig. 1.

X-RADIATION WARNING

1. The potential sources of X-Radiation in TV sets are the high voltage section and the picture tube.
2. When using a picture tube test jig for service, ensure that the jig is capable of handling 29,5kV without causing X-Radiation.


NOTE: It is important to use an accurate periodically calibrated high voltage meter.

1. Set the brightness to minimum.
2. Measure the high voltage. The meter should indicate.
TX-28MDT4F 28,5kV \pm 1kV.
TX-25MDT4F 28,2kV \pm 1kV.
If the meter indication is out of tolerance, immediate service and correction is required to prevent the possibility of premature component failure.
3. To prevent any X-Radiation possibility, it is essential to use the specified tube.

SERVICE HINTS

How to remove the rear cover

1. Remove the 9 screws as shown in Fig.2.

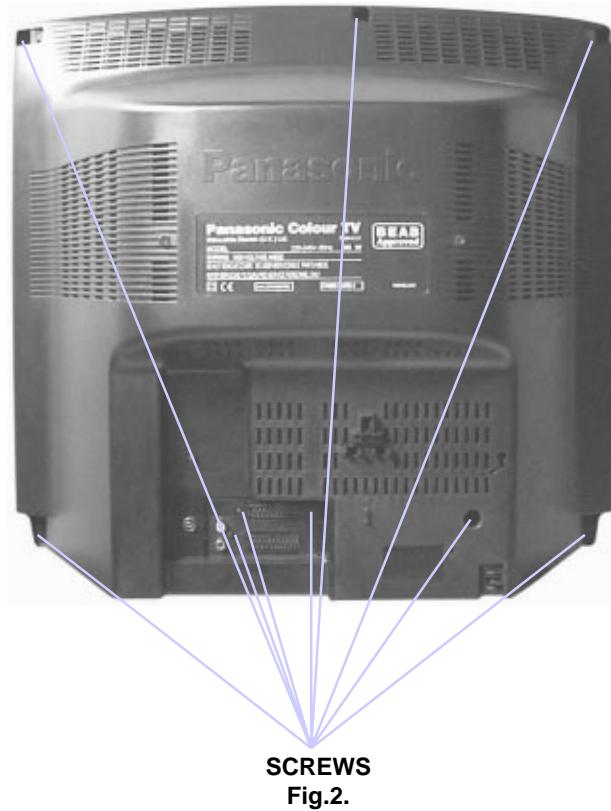

LOCATION OF CONTROLS

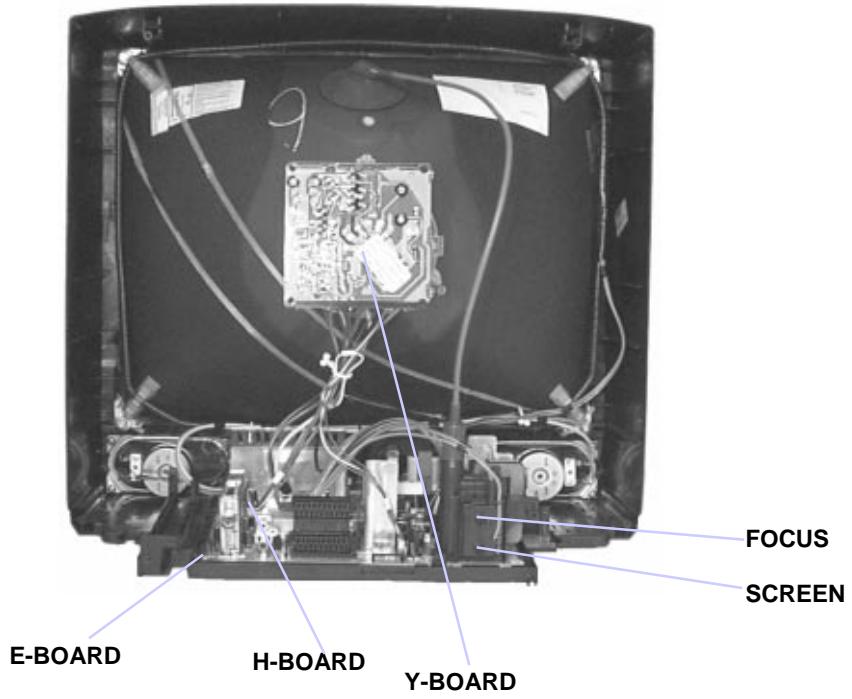


Fig.3.

ADJUSTMENT PROCEDURE

The remote control is used for entering and storing adjustments, with the exception of Cut-off adjustments, which must always be done prior to service adjustment. Perform adjustments in accordance with screen display. The display on the screen also specifies the software version as well as the approx. setting values. The adjustment sequence for the service mode is indicated below.

1. Set the Bass to maximum position, set the Treble to minimum position, press the F button followed by the volume down button on the customer controls at the front of the TV and at the same time press the "INDEX" button on the remote control, this will place the TV into the Service Mode.
2. Press the **RED / GREEN** buttons to step up / down through the functions.
3. Press the **YELLOW / BLUE** buttons to alter the function values.
4. Press the **STR** button after each adjustment has been made to store the required values.
5. To exit the Service Mode, press the "**N**" button.

NOTE: This TV also has the option of using a Memory Pack which enables you to copy the preset TV channels into the Memory Pack and then download them onto this or any other EURO-4 TV set.

TV to Memory Pack process

1. Plug the memory pack into the AV1 21 pin terminal at the back of the TV and switch the TV on.
2. Go into Service Mode as explained above.
The screen will show :-

Program
External>>TV

3. Press the **BLUE** button on the remote control.
The screen will show :-

Program
TV>>External

4. Press the **STR** button on the TV.
The screen will show :-

Please Wait

5. All the tuning information stored inside the TV will now be transferred to the Memory Pack. This process will take 2-3 minutes to complete and when finished the screen will show :-

Complete

Memory Pack to TV process

1. Plug the memory pack into the AV1 21 pin terminal at the back of the TV and switch the TV on.
2. Go into Service Mode as explained above.
The screen will show :-

Program
External>>TV

3. Press the **STR** button on the TV.
The screen will show :-

Please Wait

4. All the tuning information stored inside the Memory Pack will now be transferred to the TV. This process will take 2-3 minutes to complete and when finished the screen will show :-

Complete

5. The tuning information from the Memory Pack has now been copied into the TV.
6. To exit from the Service Mode press the "**N**" button.
7. The process has now been completed and the Memory Pack can now be removed.

ERRORS

If an error occurs while using the Memory Pack the TV will detect this and the screen will show :-

Error !!

If this happens then press the "**N**" button and repeat the process that was being used. If the errors continue to occur then check the connectors between the TV and the memory pack and check the 9V battery inside the memory pack.

ADJUSTMENT PROCEDURE

Item / Preparation	Adjustments																																				
+B SET-UP <ol style="list-style-type: none"> Receive a Greyscale signal. Set the controls :- <table> <tr> <td>Brightness</td> <td>Minimum</td> <td>B9</td> <td>5 ± 0,25V</td> <td>B10</td> <td>5 ± 0,25V</td> </tr> <tr> <td>Contrast</td> <td>Minimum</td> <td>B5</td> <td>12 ± 0,5V</td> <td>B11</td> <td>33 ± 1,5V</td> </tr> <tr> <td>Volume</td> <td>Minimum</td> <td>B4</td> <td>16 ± 1V</td> <td>B7</td> <td>8 ± 0,5V</td> </tr> <tr> <td></td> <td></td> <td>B12</td> <td>26 ± 1V</td> <td>B8</td> <td>5,5 ± 0,5V</td> </tr> <tr> <td></td> <td></td> <td>B3</td> <td>35 ± 1V</td> <td>B13</td> <td>15 ± 1V</td> </tr> <tr> <td></td> <td></td> <td>B1</td> <td>200 ± 10V</td> <td>B14</td> <td>-15 ± 1V</td> </tr> </table> 	Brightness	Minimum	B9	5 ± 0,25V	B10	5 ± 0,25V	Contrast	Minimum	B5	12 ± 0,5V	B11	33 ± 1,5V	Volume	Minimum	B4	16 ± 1V	B7	8 ± 0,5V			B12	26 ± 1V	B8	5,5 ± 0,5V			B3	35 ± 1V	B13	15 ± 1V			B1	200 ± 10V	B14	-15 ± 1V	<ol style="list-style-type: none"> Set the +B voltage up as follows:- Adjust R811 so that B2 shows $148V \pm 1V$. Confirm the following voltages.
Brightness	Minimum	B9	5 ± 0,25V	B10	5 ± 0,25V																																
Contrast	Minimum	B5	12 ± 0,5V	B11	33 ± 1,5V																																
Volume	Minimum	B4	16 ± 1V	B7	8 ± 0,5V																																
		B12	26 ± 1V	B8	5,5 ± 0,5V																																
		B3	35 ± 1V	B13	15 ± 1V																																
		B1	200 ± 10V	B14	-15 ± 1V																																
CUT OFF / Ug2 Test <ol style="list-style-type: none"> Receive a Greyscale signal. Degauss the tube externally. Set the TV into Service Mode 1. Select Cut off mode. 	<p>To adjust Cutoff connect an oscilloscope to the Blue cathode, adjust "cutoff" value using the "Yellow" and "Blue" buttons until the black level is $160V \pm 5V$ press "STR" to store the value. Remove the oscilloscope.</p> <p>Select Ug2 adjustment and adjust the screen VR until the display shows "O.K."</p>																																				

SELF CHECK

Self-check is used to automatically check the bus lines and hexadecimal code of the TV set. To get into the Self-Check mode press the down (**-v**) button on the customer controls at the front of the set, at the same time pressing the **STATUS** button on the remote control, and the screen will show :-

VDP	O.K.	PCB	O.K.
TUN	O.K.	Cab	O.K.
E2	O.K.	Sum	Factory use only
MSP	O.K.		
DPL	--		
OPTION1	3D		
OPTION2	0C		
OPTION3	1D		
OPTION4	00		
OPTION5	EF		
OPTION6	23		

If the CCU ports have been checked and found to be incorrect or not located then " -- " will appear in place of "O.K."

Service Aids

To aid in the service of our current chassis there are a number of Service Aids which have been made available.

- **LUCI** interface kit (**Linked Utility Computer Interface**)

Part number: TZS6EZ002

This contains interface and cables for connecting TV service connector and a PC as well as diagnostic software. As new models are introduced upgrade software will become available.

- **VICI** (**Visual Interactive Computer Information**)

These C.D.'s contain multimedia documentation providing quick access to service information.


















Part No. TZS7EZ006 & TZS7EZ005

1. Service Manuals
2. Instruction Books
3. Technical Information

- **TASMIN** (**Technically Advanced System for Multimedia Interactive Notes**)


As well as providing a first step towards more interactive training this product also achieves quick access to Technical Information.

WAVEFORM PATTERN TABLE

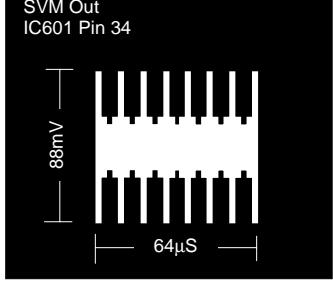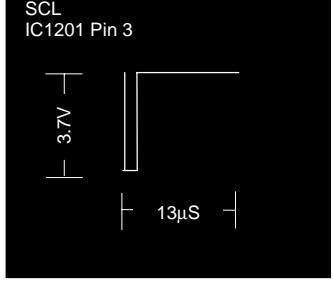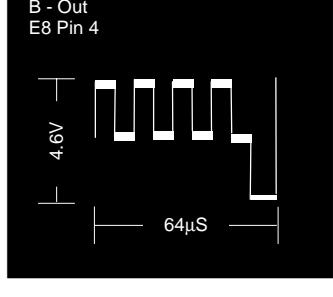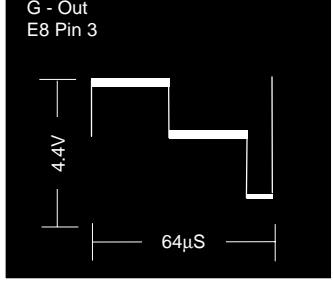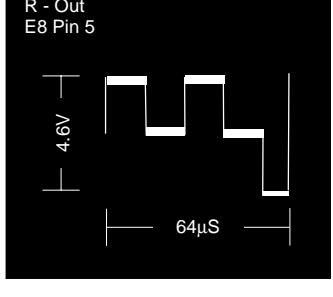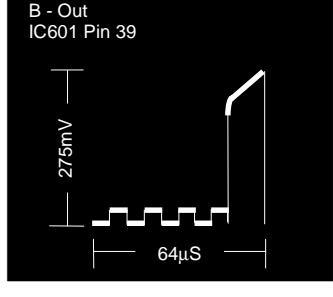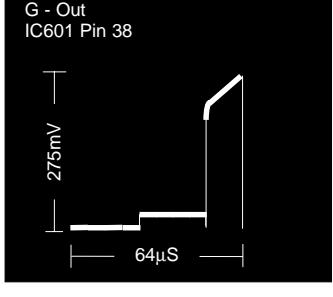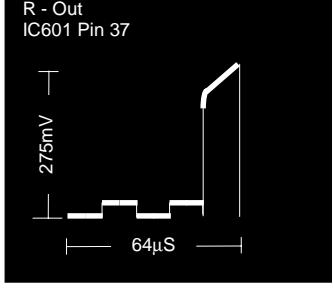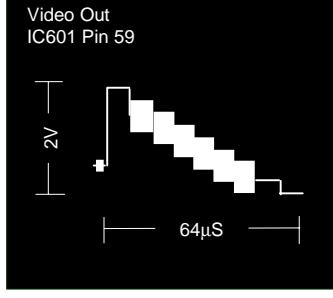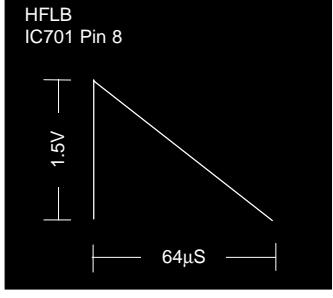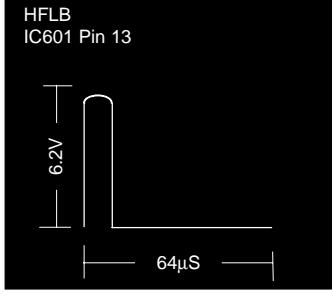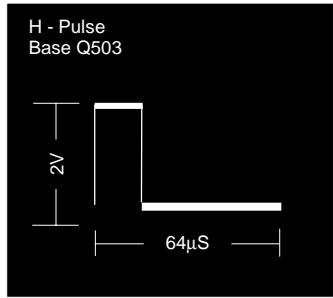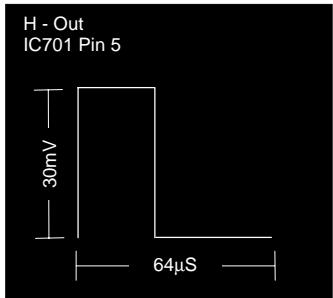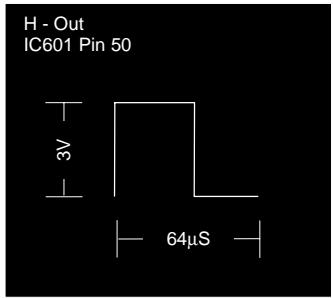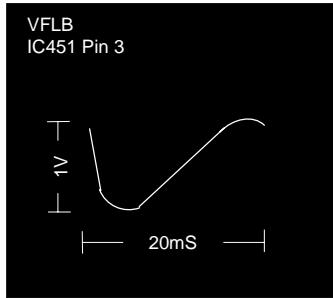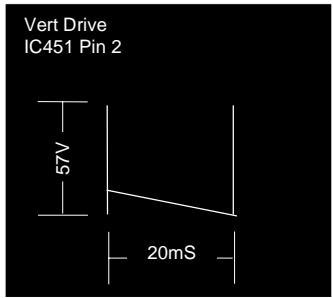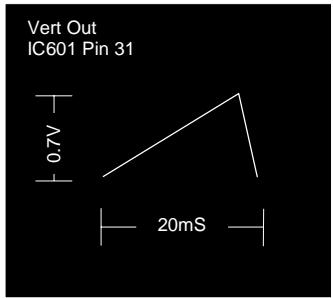


ALIGNMENT SETTINGS


(The figures below are nominal and used for representative purposes only.)

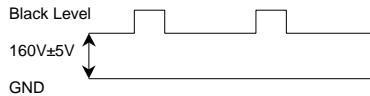Alignment Function		Settings / Special features
Horizontal Position	H-Pos 061	Optimum setting.
Vertical Position	V-Pos 005	Optimum setting.
Horizontal Amplitude	H-Amp 055	Optimum setting.
Vert. Amplitude	V-Amp 054	Optimum setting.
EW-amplitude	E/W-Amp1 -128	Optimum setting.
EW-amplitude	E/W-Amp2 006	Optimum setting.
Trapezium-comp	Trapez-1 047	Optimum setting.
Trapezium-comp	Trapez-2 -128	Optimum setting.
Vertical Linearity	V-Lin 006	Optimum setting.
Vertical Symmetry	V-Sym 002	Optimum setting.
DVCO	DVCO -005	Receive a PAL Colour Bar Pattern. For DVCO alignment press "Blue" button, wait until the colours are changing slowly and press "STR".
Cut-off DC	Cut-off 0171	To adjust Cutoff connect an oscilloscope to the blue cathode, adjust "cutoff" value using the "Yellow" and "Blue" buttons until the black level is $160V \pm 5V$ press "STR" to store the value. Remove the oscilloscope. Select Ug2 adjustment and adjust the screen VR until the display shows "O.K."
Ug2 Test	Ug2 055 O.K.	
Highlight Lowlight	High 0902 0777 0864 Low 0117 0132 0112	Optimum setting.
Sub-Brightness	Sub-Brightness 255	Optimum setting.


VIDEO BLOCK DIAGRAM

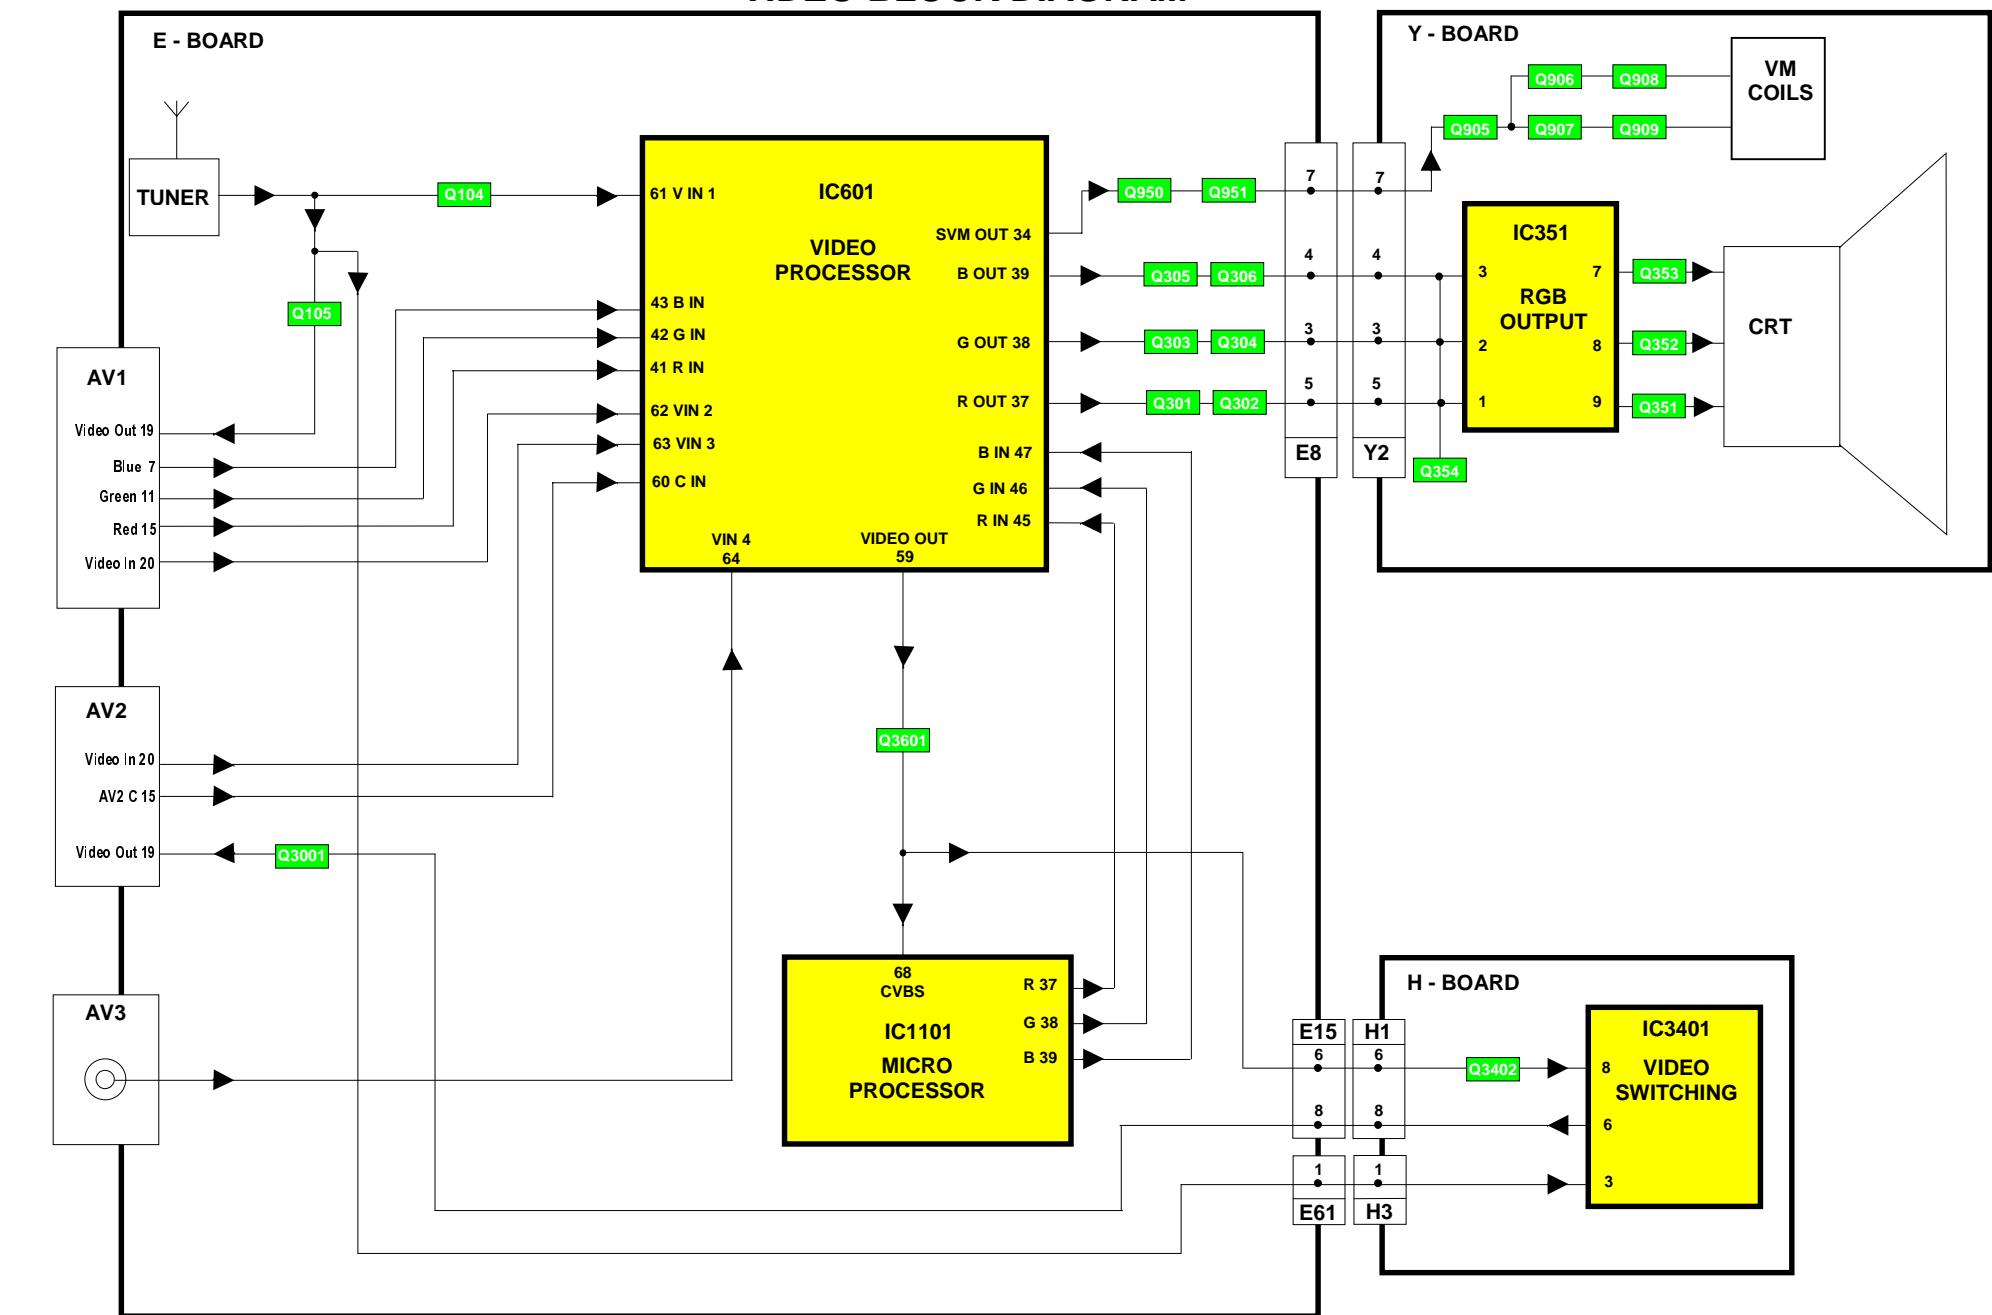

AUDIO BLOCK DIAGRAM

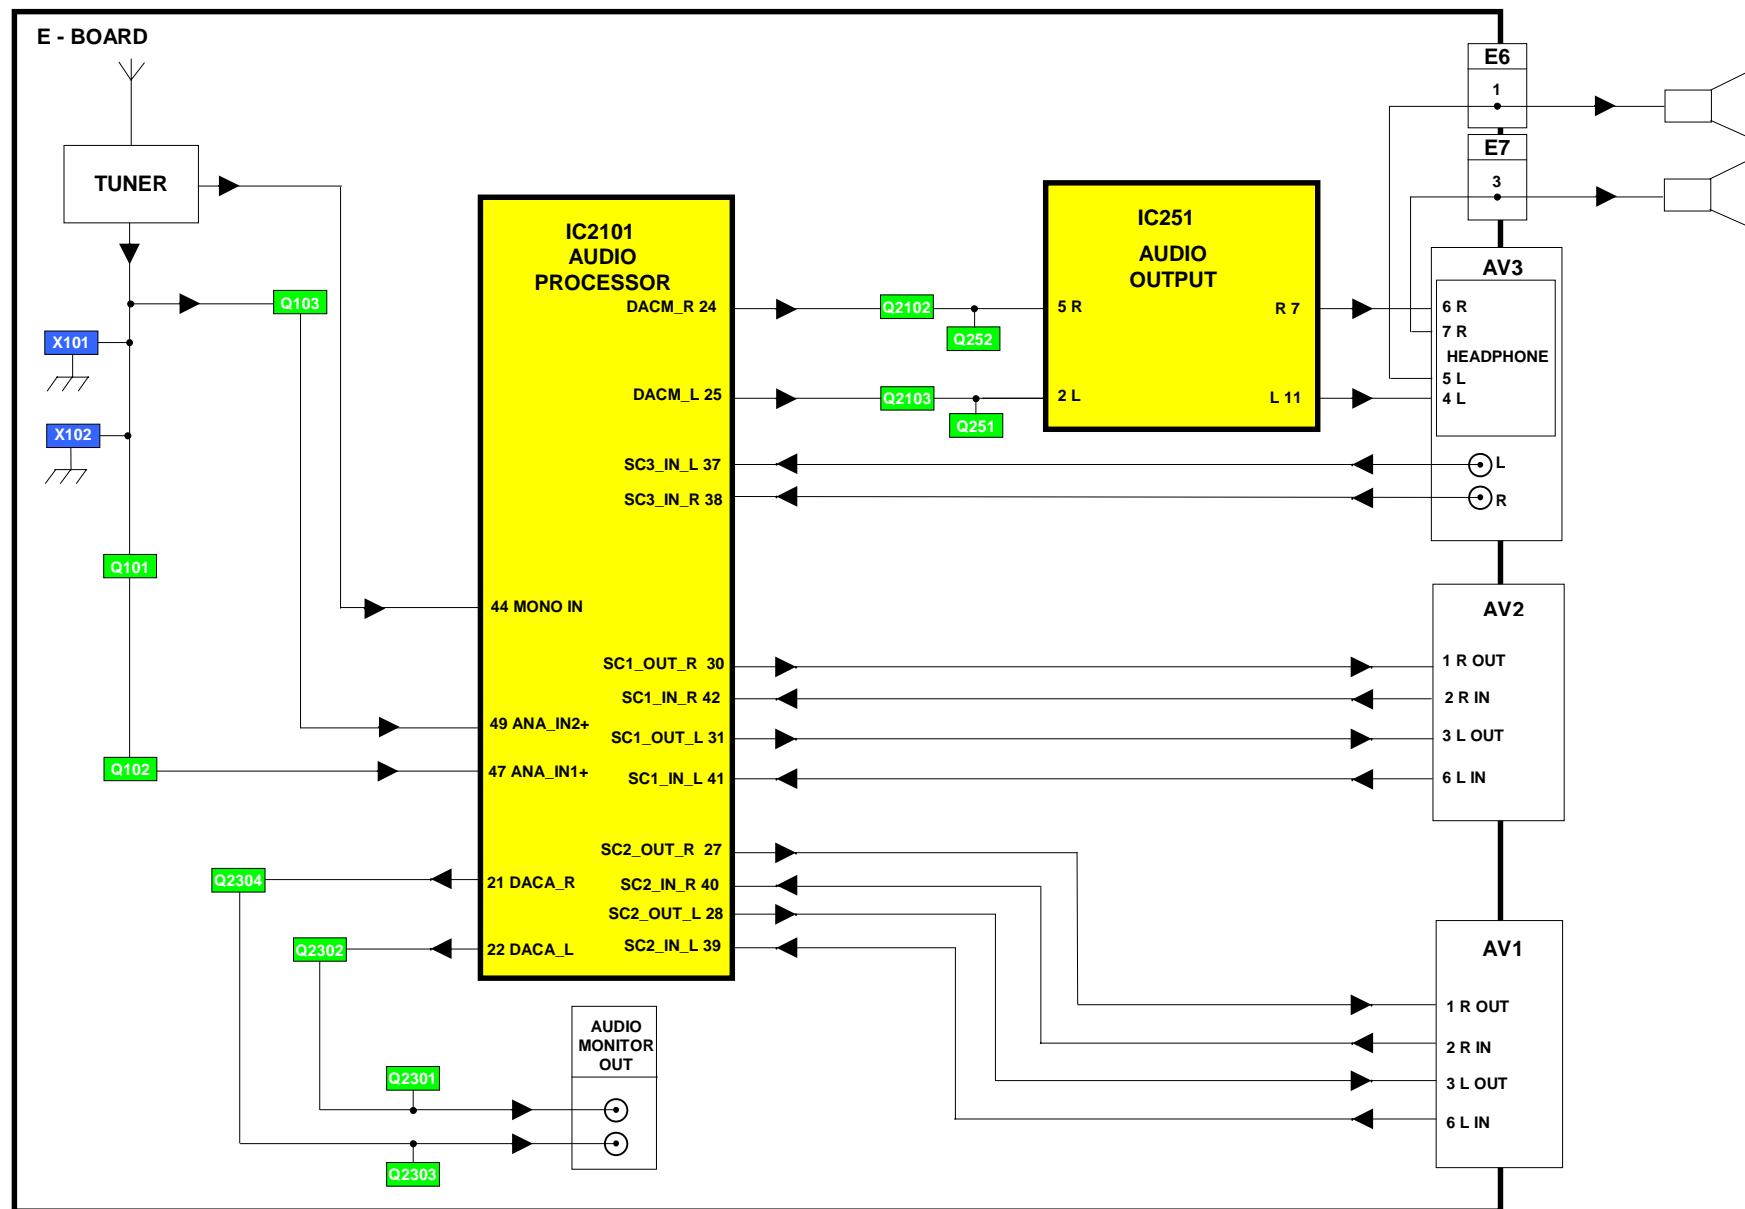


CONTROL BLOCK DIAGRAM

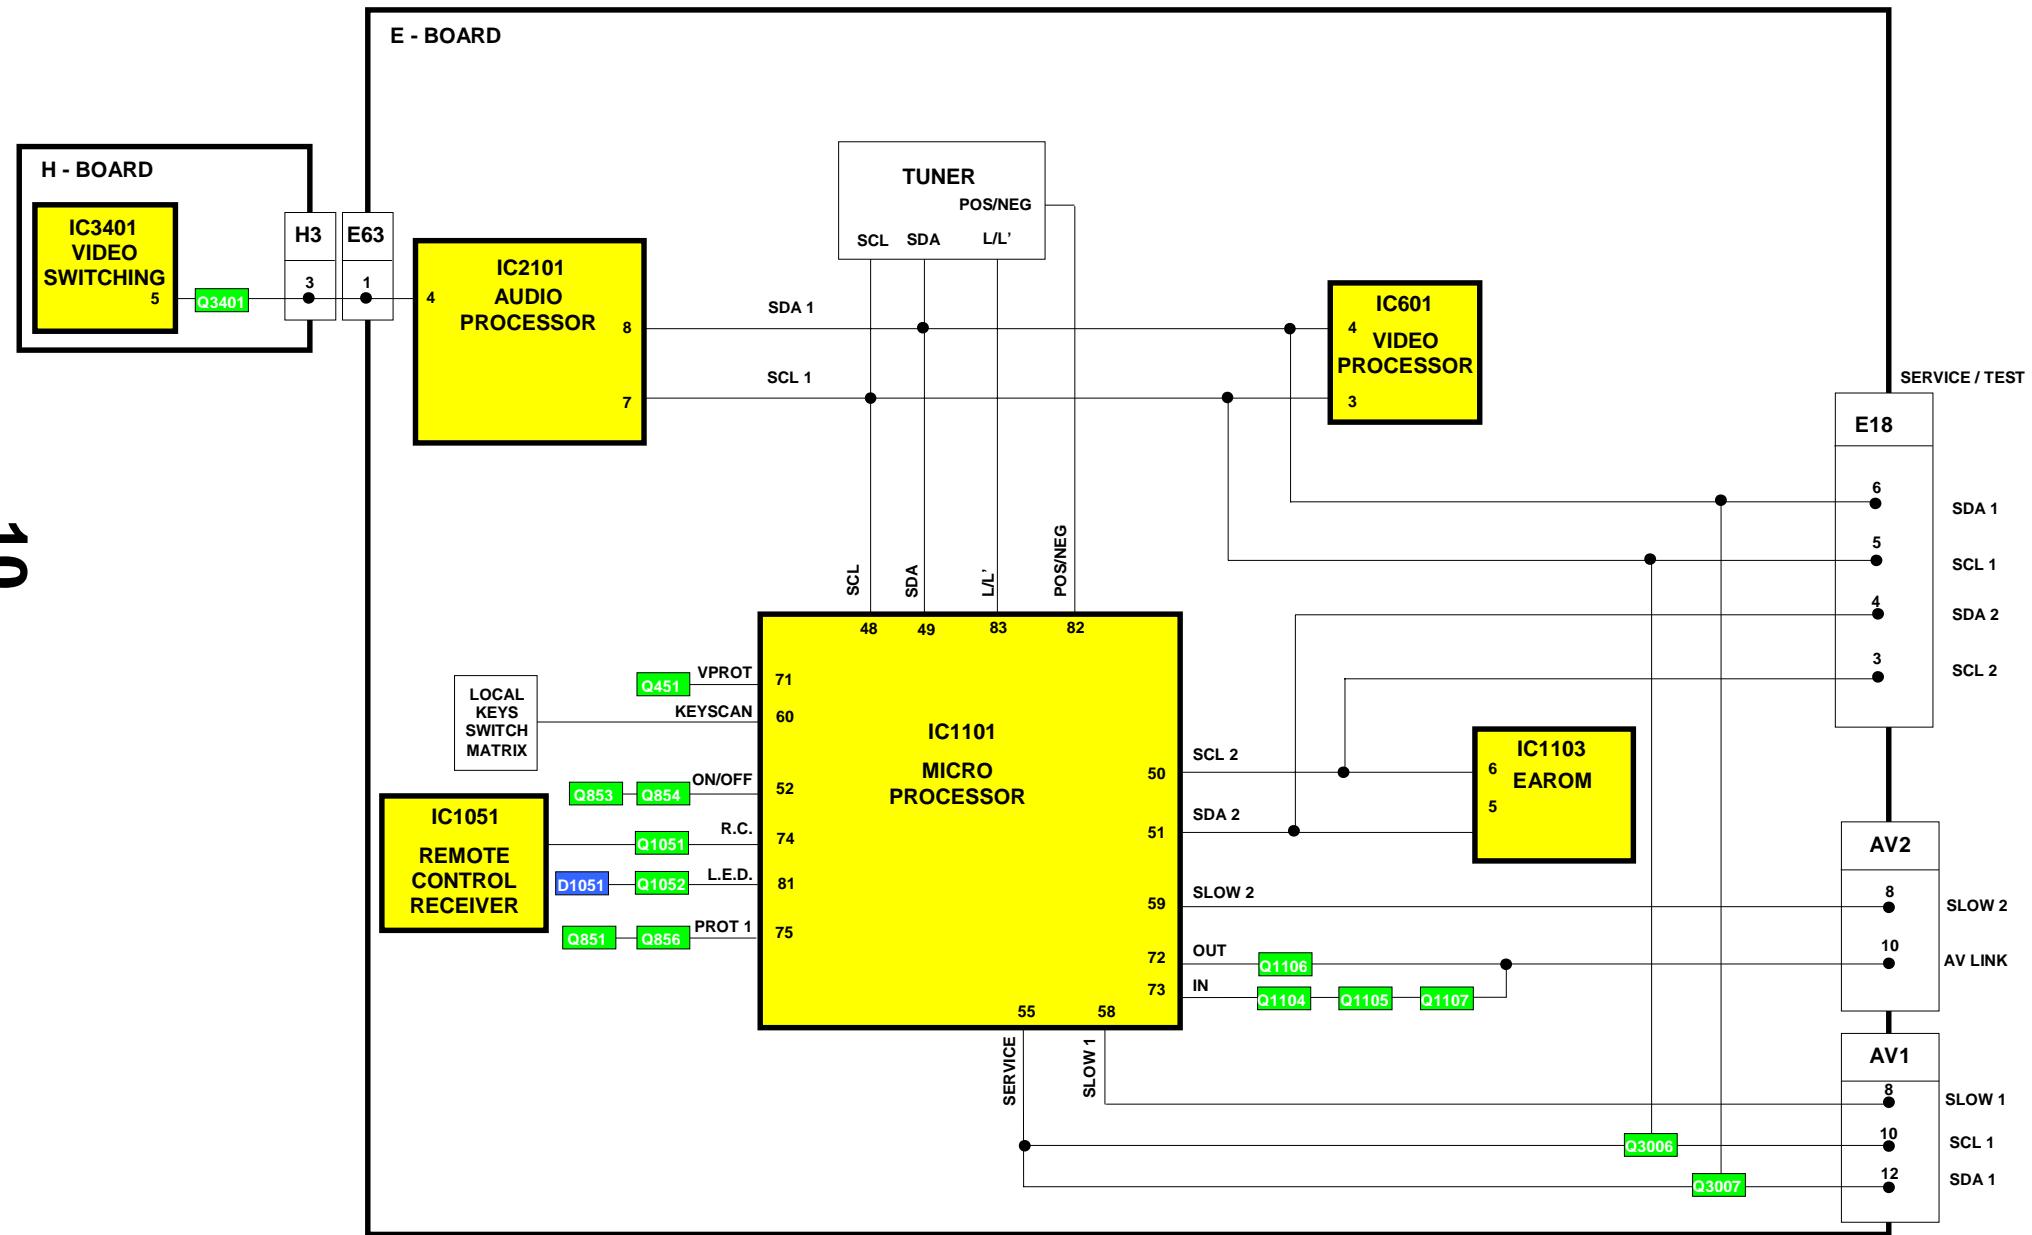


10

POWER SUPPLY BLOCK DIAGRAM

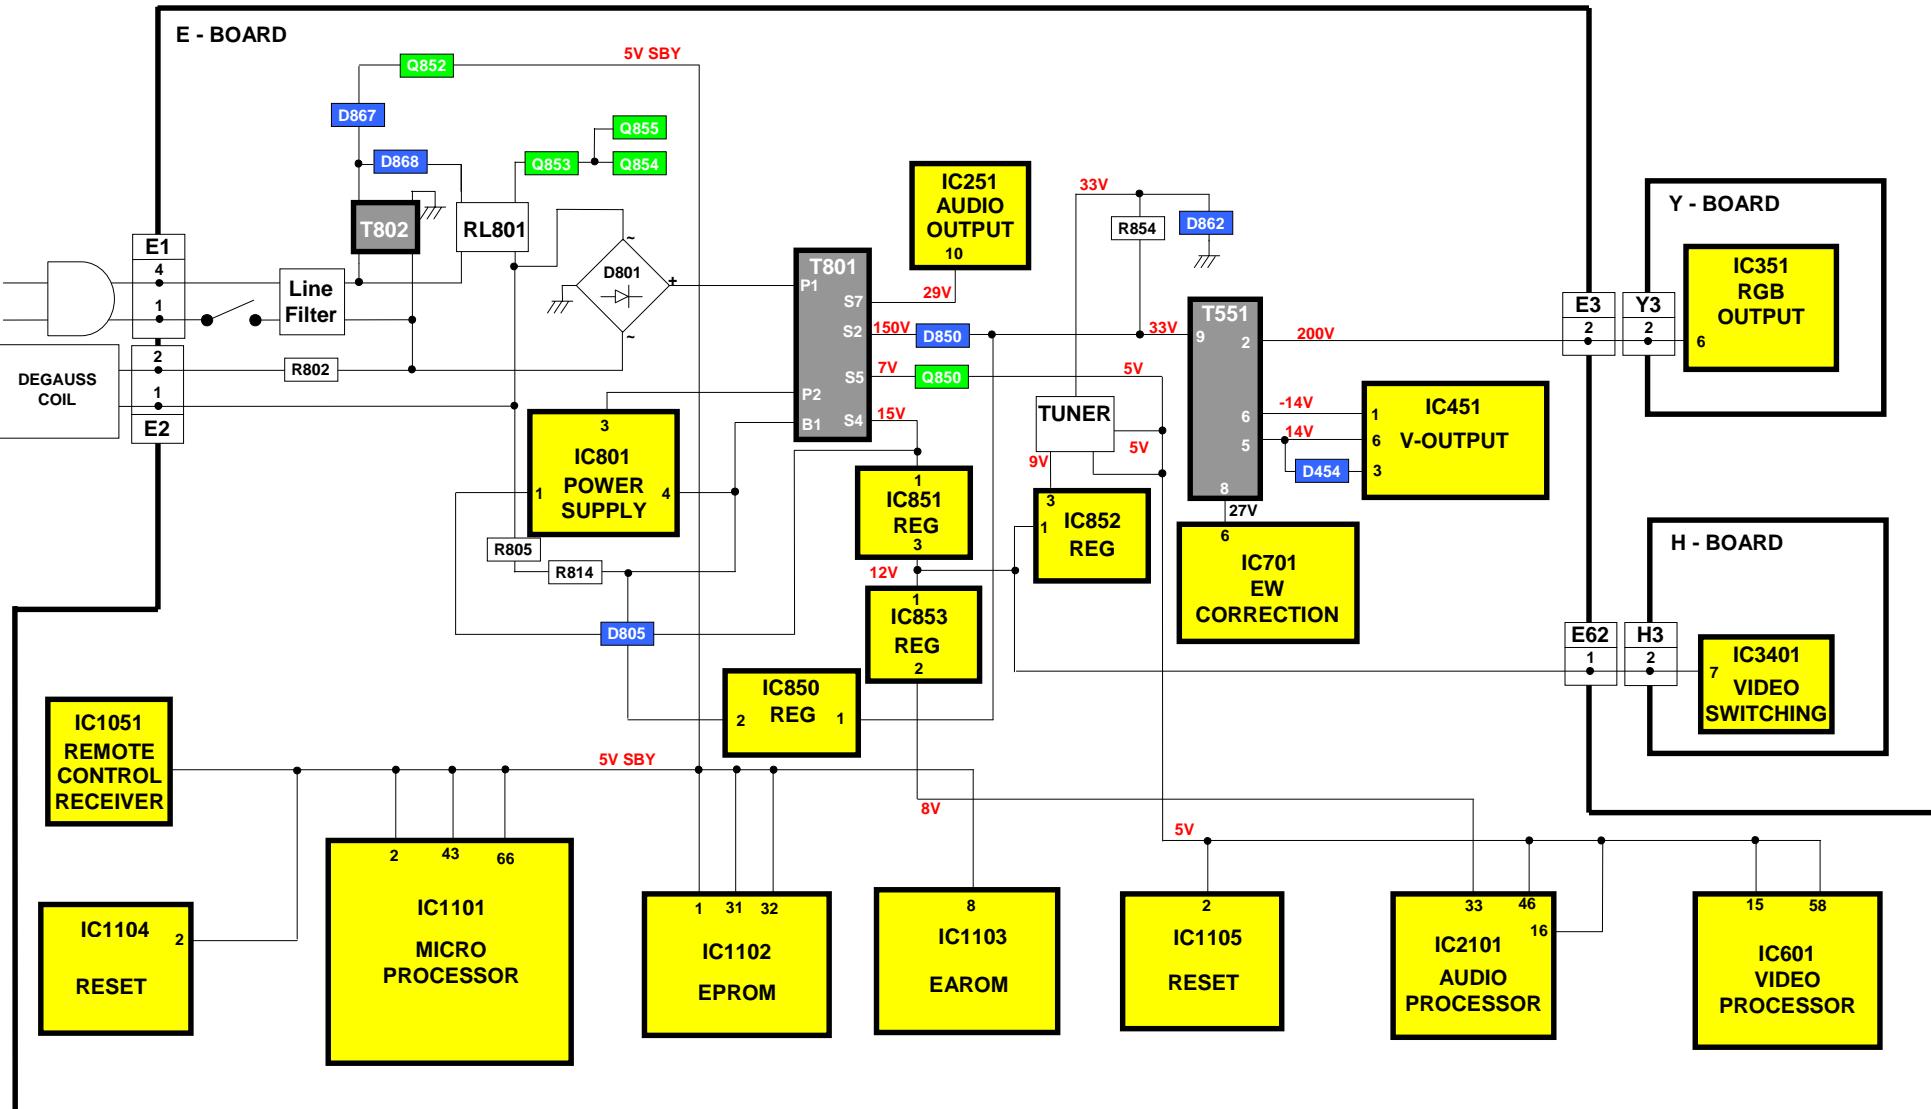

PARTS LOCATION

NOTE:
The numbers on the exploded view below
refer to the mechanical section of the
Replacement Parts List.

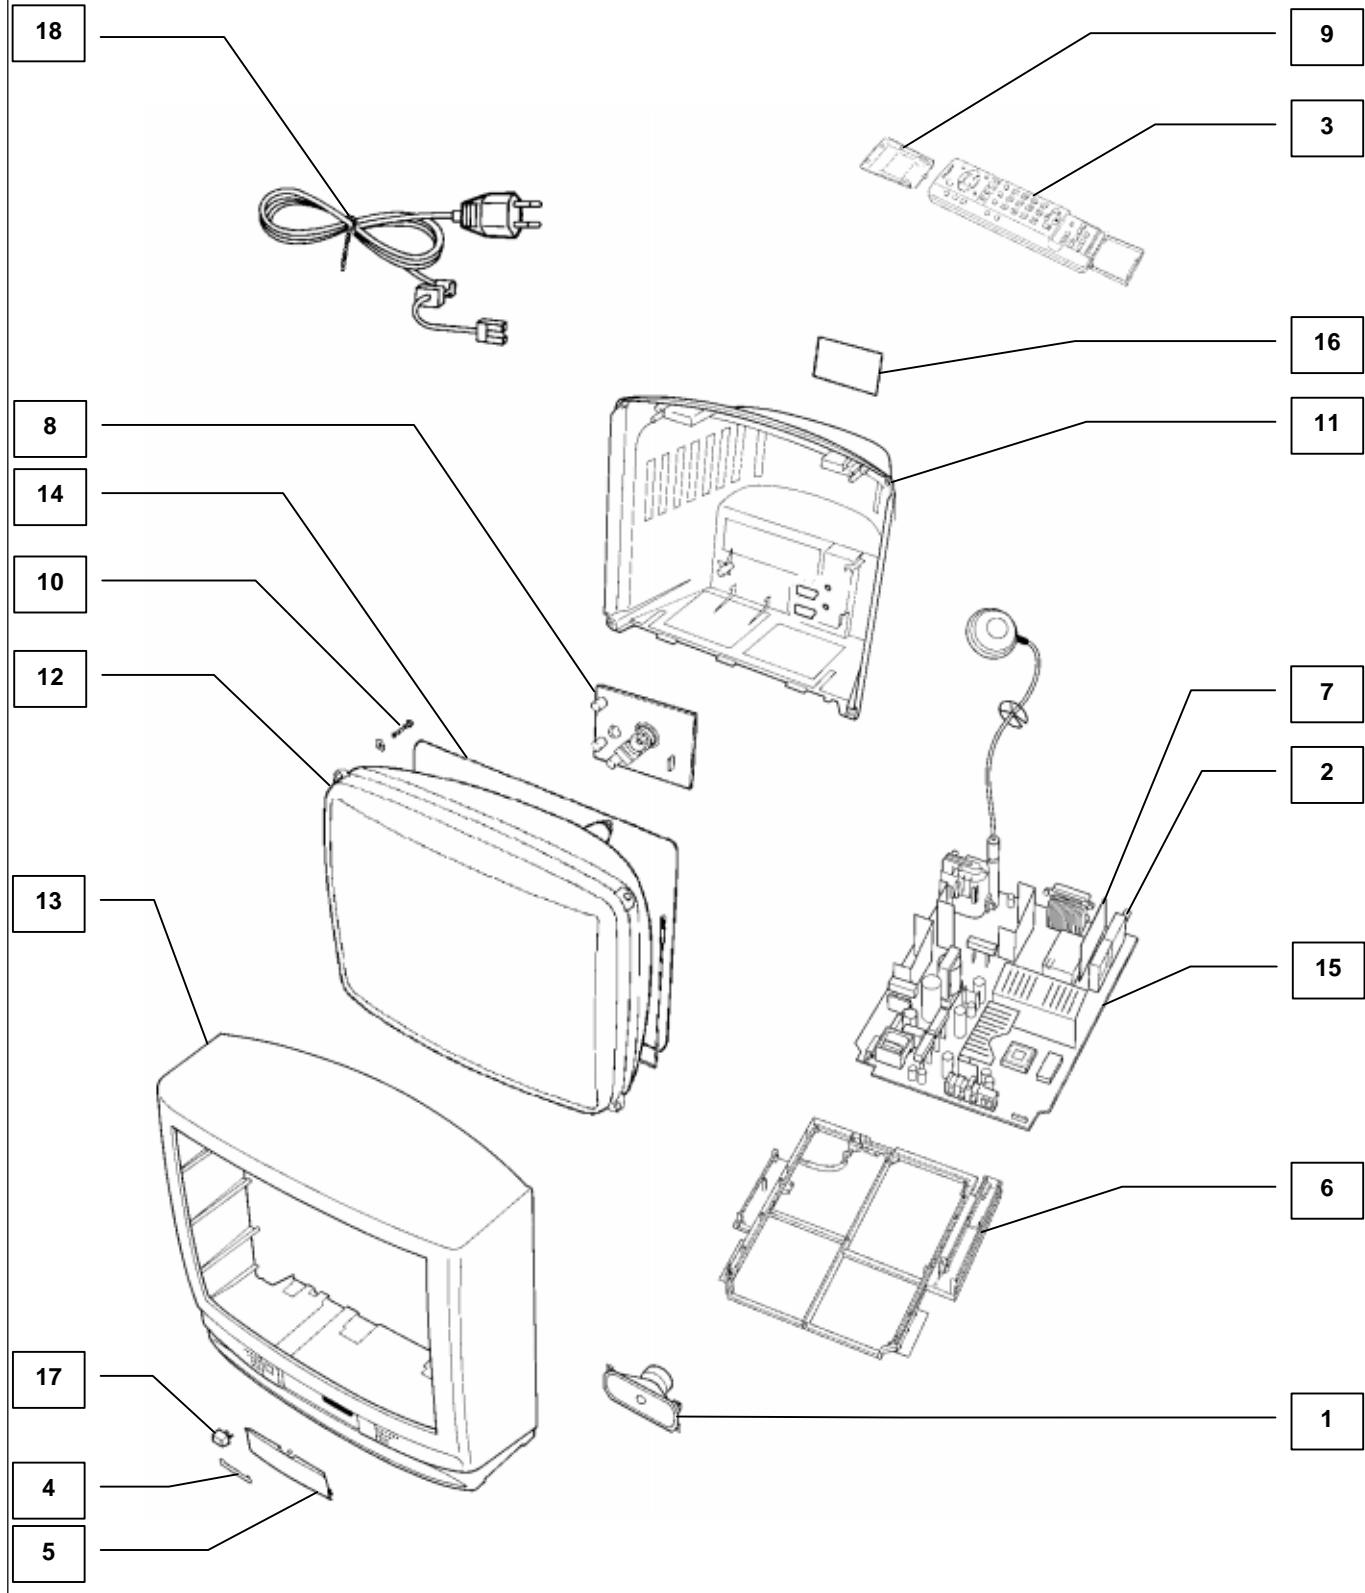

REPLACEMENT PARTS LIST

Important Safety Notice

Components Identified by  mark have special characteristics important for safety.
 * When replacing any of these components, use only manufacturers specified parts.
 In case of ordering these spare parts, please always add the complete Model-Type number to your order.

Cct Ref	Parts Number	Description
COMMON PARTS		
MECHANICAL PARTS		
1	EASG12D531P2	SPEAKER
2	ENG29504G	TUNER
3	EUR511200	REMOTE CONTROL
4	TBM8E1728	PANASONIC BADGE
5	TKP8E1177	DOOR LID
6	TMX8E023	CHASSIS FRAME
7	TNP8EH002AA	H P.C.B.
8	TNP8EY012AF	Y P.C.B.
9	UR51EC904A	BATTERY COVER (REMOTE)
10	VP17005-32	CRT FIXING SCREW
MISCELLANEOUS COMPONENTS		
	31221212478	FIX CLIP
	832AG11D-ESL	I.C. SOCKET
	F9-4-220	RELAY
	PCS-084A-1	84 PIN SOCKET
	TBM8E1619-1	RESET LABEL
	TEK6935	LID SWITCH
	TKP8E1178	LED PANEL
	TKP8E1179	LED TUBE
	UM-3DJ-2P	BATTERY PACK
	ZTUZAE550A	ANODE LEAD
RL801	TSE1885-1	RELAY
R802	232266296706	THERMISTOR
S351	0330550049	CRT SOCKET
INSTRUCTION BOOKS		
	TQB8E2587E	SPANISH
	TQB8E2587F	SWEDISH
I.C.s		
IC251	LA4282	AUDIO OUTPUT
IC351	TDA6103Q-N3	R.G.B. AMPLIFIER
IC451	LA7845N	VERTICAL OUTPUT
IC601	VDP3108BPPB1	VIDEO PROCESSOR
IC701	TEA2031A	HORIZONTAL OUTPUT
IC801	STRF6654LF51	POWER SUPPLY
IC850	SE140N	ERROR AMPLIFER
IC851	L78M12MRB	12V REGULATOR
IC852	L78M05MRB	5V REGULATOR
IC853	AN78L08TA	8V REGULATOR
IC1101	SDA5450C48	MICRO PROCESSOR
IC1102	27C2001-F17	EPROM *
IC1104	MN1381-R(TA)	DIODE
IC1105	MN1381-T(TA)	DIODE
IC2101	MSP3410DPOB4	AUDIO PROCESSOR
IC3401	TEA2114	AV SWITCHING

Cct Ref	Parts Number	Description
FUSES		
F802	19181-3.15	FUSE
F8021	EYF52BC	FUSE HOLDER
F8022	EYF52BC	FUSE HOLDER
DIODES		
D251	MA2180TP	DIODE
D253	MA700TA5	DIODE
D254	MA700TA5	DIODE
D354	1SR124-4AT82	DIODE
D355	1SR124-4AT82	DIODE
D356	1SR124-4AT82	DIODE
D357	MA165TA5	DIODE
D358	MA165TA5	DIODE
D359	MA165TA5	DIODE
D360	MTZJT-7715A	DIODE
D361	MA165TA5	DIODE
D362	MA165TA5	DIODE
D363	MA165TA5	DIODE
D364	MA165TA5	DIODE
D453	MA165TA5	DIODE
D454	ERA15-02V3	DIODE
D456	MTZJT-775.6C	DIODE
D457	MA165TA5	DIODE
D501	MA165TA5	DIODE
D502	1SR124-4AT82	DIODE
D511	MA4047	DIODE
D551	ERD07-15L7	DIODE
D552	RU3LFA1	DIODE
D553	1SR124-4AT82	DIODE
D554	1SR124-4AT82	DIODE
D556	MA165TA5	DIODE
D557	EU02	DIODE
D558	1SR124-4AT82	DIODE
D601	DAN217T146	DIODE
D603	DAN217T146	DIODE
D605	DAN212KT146	DIODE
D606	MA165TA5	DIODE
D607	MA4051	DIODE
D609	1SR124-4AT82	DIODE
D615	STZ6.2NT146	DIODE
D616	STZ6.2NT146	DIODE
D701	MA165TA5	DIODE
D702	MTZJT-775.1C	DIODE
D704	MA29TA5	DIODE
D705	MTZJT-775.6C	DIODE
D801	RBV4-08	DIODE
D803	1SR124-4AT82	DIODE
D804	1SR124-4AT82	DIODE
D805	TLP621GR-LF2	PHOTO COUPLER
D806	1SR124-4AT82	DIODE
D850	RU4BLF-L1	DIODE
D851	MTZJT776.2B	DIODE

Cct Ref	Parts Number	Description
D852	MA165TA5	DIODE
D853	MA2180BLFS	DIODE
D854	TVSRU2AMLF A5	DIODE
D855	FML22SLF610	DIODE
D856	RU4AMLF-M1	DIODE
D857	MTZJT-775.1C	DIODE
D858	MA165TA5	DIODE
D859	MA165TA5	DIODE
D861	MA165TA5	DIODE
D862	MTZJT-7736A	DIODE
D863	MA165TA5	DIODE
D865	MA165TA5	DIODE
D866	MA165TA5	DIODE
D867	EK06-V0	DIODE
D868	1N4150T-77	DIODE
D869	1N4150T-77	DIODE
D870	MA165TA5	DIODE
D871	1N4150T-77	DIODE
D873	MTZJT-775.6C	DIODE
D874	1SR124-4AT82	DIODE
D875	BZX79A75A26A	DIODE
D901	MA165TA5	DIODE
D902	MA165TA5	DIODE
D904	MA165TA5	DIODE
D905	MA165TA5	DIODE
D906	RLS72TE-11	DIODE
D1101	MA165TA5	DIODE
D1102	MA165TA5	DIODE
D2101	MA723TA5	DIODE
D2102	MA723TA5	DIODE
D2103	MA723TA5	DIODE
D2104	MA723TA5	DIODE
D2105	MTZJT-778.2C	DIODE
D2303	MA723TA5	DIODE
D2304	MA723TA5	DIODE
D3101	MTZJT-778.2C	DIODE
D3102	MTZJT-778.2C	DIODE

TRANSISTORS

Q101	BC847B	TRANSISTOR
Q102	BC847B	TRANSISTOR
Q104	BC847B	TRANSISTOR
Q105	BC847B	TRANSISTOR
Q251	2SD1328STX	TRANSISTOR
Q252	2SD1328STX	TRANSISTOR
Q253	BC847B	TRANSISTOR
Q254	BC847B	TRANSISTOR
Q301	BC847B	TRANSISTOR
Q302	FMY4T148	TRANSISTOR
Q303	BC847B	TRANSISTOR
Q304	FMY4T148	TRANSISTOR
Q305	BC847B	TRANSISTOR
Q306	FMY4T148	TRANSISTOR
Q351	2SA1767	TRANSISTOR
Q352	2SA1767	TRANSISTOR
Q353	2SA1767	TRANSISTOR
Q354	BC857B	TRANSISTOR
Q451	BC857B	TRANSISTOR
Q503	2SD2398-M2	TRANSISTOR
Q551	BU2508AXLB	TRANSISTOR
Q552	2SC1473-RN	TRANSISTOR
Q701	BC857B	TRANSISTOR
Q850	2SD1273PLB	TRANSISTOR
Q851	BC857B	TRANSISTOR
Q852	2SC1383-S	TRANSISTOR
Q853	BC847B	TRANSISTOR
Q854	BC847B	TRANSISTOR

Cct Ref	Parts Number	Description
Q855	BC847B	TRANSISTOR
Q856	BC847B	TRANSISTOR
Q857	2SA1018QTA	TRANSISTOR
Q905	BC847B	TRANSISTOR
Q906	BC847B	TRANSISTOR
Q907	BC857B	TRANSISTOR
Q908	2SA1535ARLB	TRANSISTOR
Q909	2SC3944ARLB	TRANSISTOR
Q950	BC847B	TRANSISTOR
Q951	FMY4T148	TRANSISTOR
Q1051	BC847B	TRANSISTOR
Q1101	BC847B	TRANSISTOR
Q1104	BC847B	TRANSISTOR
Q1105	BC847B	TRANSISTOR
Q1106	BC847B	TRANSISTOR
Q1107	BC847B	TRANSISTOR
Q1108	BC847B	TRANSISTOR
Q2101	BC857B	TRANSISTOR
Q2102	BC857B	TRANSISTOR
Q2103	BC857B	TRANSISTOR
Q2301	BC847B	TRANSISTOR
Q2302	BC857B	TRANSISTOR
Q2303	BC847B	TRANSISTOR
Q2304	BC857B	TRANSISTOR
Q3001	BC847B	TRANSISTOR
Q3006	BC847B	TRANSISTOR
Q3007	BC847B	TRANSISTOR
Q3401	BC847B	TRANSISTOR
Q3402	BC847B	TRANSISTOR
Q3601	BC847B	TRANSISTOR
TRANSFORMERS		
T501	ETH19Y173AY	TRANSFORMER
T551	ZTFL94002A	F.B.T.
T801	ETS39AG1J7AD	TRANSFORMER
T802	ETP35KAN619U	TRANSFORMER
COILS		
L104	EXCELSA35T	COIL
L106	TLTACT100K	COIL
L107	TLTACT6R8K	COIL
L301	TLTACT4R7K	COIL
L302	TLTACT4R7K	COIL
L451	EXCELSA35T	COIL
L501	EXCELSA35T	COIL
L552	ELH5L4105	COIL
L553	ELC08D682E	COIL
L554	ELC18B102L	COIL
L601	TLTACT4R7K	COIL
L602	TLTACT4R7K	COIL
L603	TLTACT4R7K	COIL
L604	TLTACT4R7K	COIL
L606	TLTACT4R7K	COIL
L607	ELJFC2R2KF	COIL
L701	ELC10D822E	COIL
L850	EXCELSA35T	COIL
L851	EXCELSA35T	COIL
L852	ELEIN470KA	COIL
L853	EXCELSA35T	COIL
L854	EXCELSA35T	COIL
L855	EXCELSA35T	COIL
L856	EXCELSA39V	COIL
L901	EXCELSA24T	COIL
L902	EXCELSA24T	COIL
L1103	TLTACT100K	COIL
L1104	EXCELSA35T	COIL
L1105	ELJFC2R2KF	COIL
L2101	TLTACT100K	COIL

Cct Ref	Parts Number	Description
L2103	EXCELSA35T	COIL
L2104	TLTACT4R7K	COIL
L3001	ELEMV1R5MA	COIL
L3002	ELEMV1R5MA	COIL
L3003	ELEMV1R5MA	COIL
L3004	ELEMV1R5MA	COIL
L3005	ELEBR2R2KA	COIL
L3006	ELEBR2R2KA	COIL
L3007	TLTACT2R2K	COIL
L3101	ELEBT6R8KA	COIL
L3102	ELEBT6R8KA	COIL
L3401	ELESN2R2KA	COIL
L3402	ELESN2R2KA	COIL
FILTERS		
L804	ELF18N010A	LINE FILTER
CRYSTALS		
X601	4730007267	CRYSTAL
X1101	TSSA121	CRYSTAL
X2101	4730007158	CRYSTAL
RESISTORS		
C101	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA1	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA44	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA40	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA2	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA52	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA27	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA39	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA38	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA37	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA36	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA3	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA28	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA26	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA47	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA22	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA45	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA16	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA15	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA14	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA13	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA12	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA11	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA10	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA25	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JSE35	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JSE10	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA9	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JSE18	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA48	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JSE22	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JSE26	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JSE12	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JSE33	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA60	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA58	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA57	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JSE4	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA55	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JSE5	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA54	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JSH001	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA49	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JSE3	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
JA2	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω

Cct Ref	Parts Number	Description
JA21	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA23	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA1	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA46	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA29	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA30	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA31	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA32	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA33	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA34	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA35	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA59	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA56	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA43	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA50	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA5	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA8	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
JA51	ERJ8GEY0R00	S.M.CARB .125W 5% 0Ω
R101	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
R102	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R103	ERJ6GEYJ222	S.M.CARB 0.1W 5% 2K2Ω
R104	ERJ6GEYJ332	S.M.CARB 0.1W 5% 3K3Ω
R105	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R106	ERJ6GEYJ681	S.M.CARB 0.1W 5% 680Ω
R107	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R111	ERJ6GEY0R00	S.M.CARB 0.1W 5% 0Ω
R112	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R113	ERJ6GEYJ223	S.M.CARB 0.1W 5% 22KΩ
R114	ERJ6GEYJ331	S.M.CARB 0.1W 5% 330Ω
R115	ERJ6GEYJ331	S.M.CARB 0.1W 5% 330Ω
R116	ERJ6GEYJ562	S.M.CARB 0.1W 5% 5K6Ω
R117	ERJ6GEYJ222	S.M.CARB 0.1W 5% 2K2Ω
R118	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R121	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R251	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R252	ERJ6GEYJ332	S.M.CARB 0.1W 5% 3K3Ω
R253	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R254	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R255	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R256	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R257	ERJ6GEYJ680	S.M.CARB 0.1W 5% 68Ω
R258	ERJ6GEYJ332	S.M.CARB 0.1W 5% 3K3Ω
R259	ERJ6GEYJ680	S.M.CARB 0.1W 5% 68Ω
R260	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R261	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R262	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R263	ERJ6GEYJ473	S.M.CARB 0.1W 5% 47KΩ
R264	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R265	ERD25TJ2R2	CARBON 0.25W 5% 2R2Ω
R266	ERD25TJ2R2	CARBON 0.25W 5% 2R2Ω
R267	ERF7ZK4R7	WOUND 7W 10% 4R7Ω
R268	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R269	ERQ14AJ101	METAL 0.25W 5% 100Ω
R271	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R272	ERF7ZK4R7	WOUND 7W 10% 4R7Ω
R301	ERJ6GEYJ391	S.M.CARB 0.1W 5% 390Ω
R302	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R303	ERJ6GEYJ750	S.M.CARB 0.1W 5% 75Ω
R304	ERJ6GEYJ331	S.M.CARB 0.1W 5% 330Ω
R305	ERJ6GEYJ391	S.M.CARB 0.1W 5% 390Ω
R306	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R307	ERJ6GEYJ750	S.M.CARB 0.1W 5% 75Ω
R308	ERJ6GEYJ331	S.M.CARB 0.1W 5% 330Ω
R309	ERJ6GEYJ391	S.M.CARB 0.1W 5% 390Ω
R310	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R311	ERJ6GEYJ750	S.M.CARB 0.1W 5% 75Ω

Cct Ref	Parts Number	Description			
C2127	ECUV1H010CCX	S.M. CAP	50V	1pF	
C2128	ECUV1H010CCX	S.M. CAP	50V	1pF	
C2129	ECA1CM102B	ELECT	16V	1pF	
C2130	ECA1CM331B	ELECT	16V	330μF	
C2131	ECUV1H103ZFX	S.M. CAP	50V	10nF	
C2132	ECUV1H103ZFX	S.M. CAP	50V	10nF	
C2134	ECUV1H103ZFX	S.M. CAP	50V	10nF	
C2135	ECA1HM101GB	ELECT	50V	100μF	
C2136	ECJ2VF1H104Z	ELECT	350V	100nF	
C2137	ECA1CM100GB	ELECT	16V	10μF	
C2138	ECUV1H471K BX	S.M. CAP	50V	470pF	
C2139	ECUV1H221JCX	S.M. CAP	50V	220pF	
C2140	ECA1HM101GB	ELECT	50V	100μF	
C2141	ECUV1H152JCX	S.M. CAP	50V	1.5pF	
C2301	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C2302	ECA1CM470GB	ELECT	16V	47μF	
C2303	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C2304	ECA1CM470GB	ELECT	16V	47μF	
C3001	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3002	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3003	ECA1CM470GB	ELECT	16V	47μF	
C3005	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3006	ECJ3VB1C474K	ELECT	3.5KV	470nF	
C3007	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3008	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3009	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3010	ECA1CM470GB	ELECT	16V	47μF	
C3012	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3013	ECJ3VB1C474K	ELECT	3.5KV	470nF	
C3014	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3015	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3016	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3017	ECA1CM470GB	ELECT	16V	47μF	
C3019	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3020	ECJ3VB1C474K	ELECT	3.5KV	470nF	
C3021	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3022	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3023	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3024	ECA1CM470GB	ELECT	16V	47μF	
C3026	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3027	ECJ3VB1C474K	ELECT	3.5KV	470nF	
C3028	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3029	ECA1HM101GB	ELECT	50V	100μF	
C3032	ECUV1H271JCX	S.M. CAP	50V	270pF	
C3033	ECUV1H271JCX	S.M. CAP	50V	270pF	
C3034	ECUV1H271JCX	S.M. CAP	50V	270pF	
C3035	ECUV1H271JCX	S.M. CAP	50V	270pF	
C3101	ECUV1H104KBX	S.M. CAP	50V	270pF	
C3102	ECUV1H104KBX	S.M. CAP	50V	270pF	
C3103	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3104	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3105	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3106	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3107	ECA1HM470GB	ELECT	50V	47μF	
C3108	ECA1HM470GB	ELECT	50V	47μF	
C3111	ECUV1H391JCX	S.M. CAP	50V	390pF	
C3112	ECUV1H271JCX	S.M. CAP	50V	270pF	
C3401	ECQM1H224J	FILM	50V	220nF	
C3402	ECUV1H101JCX	S.M. CAP	50V	100pF	
C3403	ECA1HM101GB	ELECT	50V	100μF	
C3404	ECQM1H224J	FILM	50V	220nF	
C3405	ECUV1H180JCX	S.M. CAP	50V	18pF	
C3406	ECUV1H271JCX	S.M. CAP	50V	270pF	
C3407	ECUV1H271JCX	S.M. CAP	50V	270pF	
C3408	ECA1HM101GB	ELECT	50V	100μF	
C3601	ECA1HM101GB	ELECT	50V	100μF	

Cct Ref	Parts Number	Description			
JSE28	ECUV1H104KBX	S.M. CAP	50V	100μF	
TERMINALS AND LINKS					
JK2301	JPJ84110320	RCA / HEADPHONE JACK			
JK3101	TJB16673	A.V. TERMINAL			
SWITCHES					
S801	ESB92S11B	SWITCH			
S1201	EVQ23405R	SWITCH			
S1202	EVQ23405R	SWITCH			
S1203	EVQ23405R	SWITCH			
S1204	EVQ23405R	SWITCH			
S1205	EVQ23405R	SWITCH			
DIFFERENCES FOR MODEL TX-25MDT4F					
MECHANICAL PARTS					
11	TKU8E00360	BACK COVER			
12	A59ECF50X41	C.R.T.			
13	TKY8E183	CABINET			
14	TLK8E05138	DEGAUSS COIL			
15	TNP8EE009AK	E P.C.B.			
16	TQF8E2696	MODEL LABEL			
17	TBX8E042-1	POWER BUTTON			
18	TSX8E0028	POWER CORD			
MISCELLANEOUS COMPONENTS					
	TPC8E4675	OUTER CARTON			
	TPD8E608-1	TOP CUSHION			
	TPD8E609	BOTTOM CUSHION			
I.C.s					
IC1103	XGL2-04EF	EAROM *			
CAPACITORS					
C551	ECKC3D152J	CERAMIC	2KV	1.5nF	
DIFFERENCES FOR MODEL TX-28MDT4F					
MECHANICAL PARTS					
11	TKU8E00350	BACK COVER			
12	A66ECF50X41	C.R.T.			
13	TKY8E193	CABINET			
14	TLK8E05140	DEGAUSS COIL			
15	TNP8EE009BB	E P.C.B.			
16	TQF8E2697	MODEL LABEL			
17	TBX8E041-1	POWER BUTTON			
18	TSX8E0027	POWER CORD			
MISCELLANEOUS COMPONENTS					
	TPC8E4685	OUTER CARTON			
	TPD8E639	TOP CUSHION			
	TPD8E640	BOTTOM CUSHION			
I.C.s					
IC1103	XGL2-04FF	EAROM *			
CAPACITORS					
C551	ECKC3D122J	CERAMIC	2KV	1.2nF	

NOTES

<hr/>

SCHEMATIC DIAGRAMS FOR MODELS

TX-28MDT4F / TX-25MDT4F

(EURO-4 CHASSIS)

IMPORTANT SAFETY NOTICE

Components identified by  mark have special characteristics important for safety. When replacing any of these components, use only manufacturers' specified parts.

NOTE

1. RESISTOR

All resistors are carbon $\frac{1}{4}W$ resistor, unless marked otherwise.
Unit of resistance is OHM (Ω) ($k=1,000$, $M=1,000,000$)


2. CAPACITORS

All capacitors are ceramic 50V unless marked otherwise.
Unit of capacitance is μF unless otherwise stated.

3. COIL

Unit of inductance is μH , unless otherwise stated.

4. TEST POINT

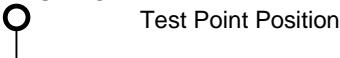

Test Point Position

5. EARTH SYMBOL



Chassis Earth (Cold)



Line Earth (Hot)

6. VOLTAGE MEASUREMENT

Voltage is measured by a DC voltmeter.

Measurement conditions are as follows:

Power source AC 220V-240V, 50Hz
Receiving Signal Colour Bar signal (RF)
All customer controls Maximum position

7.



Indicates the Video signal path



Indicates the Audio signal path

These schematic diagrams are the latest at time of printing and are subject to change without notice.


REMARKS


- a. Do not touch the hot part, or the hot and cold parts at the same time, as you are liable to a shock hazard.
- b. Do not short circuit the hot and cold circuits as electrical components may be damaged.
- c. Do not connect an instrument, such as an oscilloscope, to the hot and cold circuits simultaneously as this may cause fuse failure. Connect the earth of the instruments to the earth connection of the circuit being measured.
- d. Make sure to disconnect the power plug before removing the chassis.

NOTE

1. The Power Supply Circuit contains a circuit area, which uses a separate power supply to isolate the earth connection. The circuit is defined by HOT and COLD indications in the schematic diagram. All circuits, except the Power Circuit, are COLD.


Y BOARD △
TNP8EY012

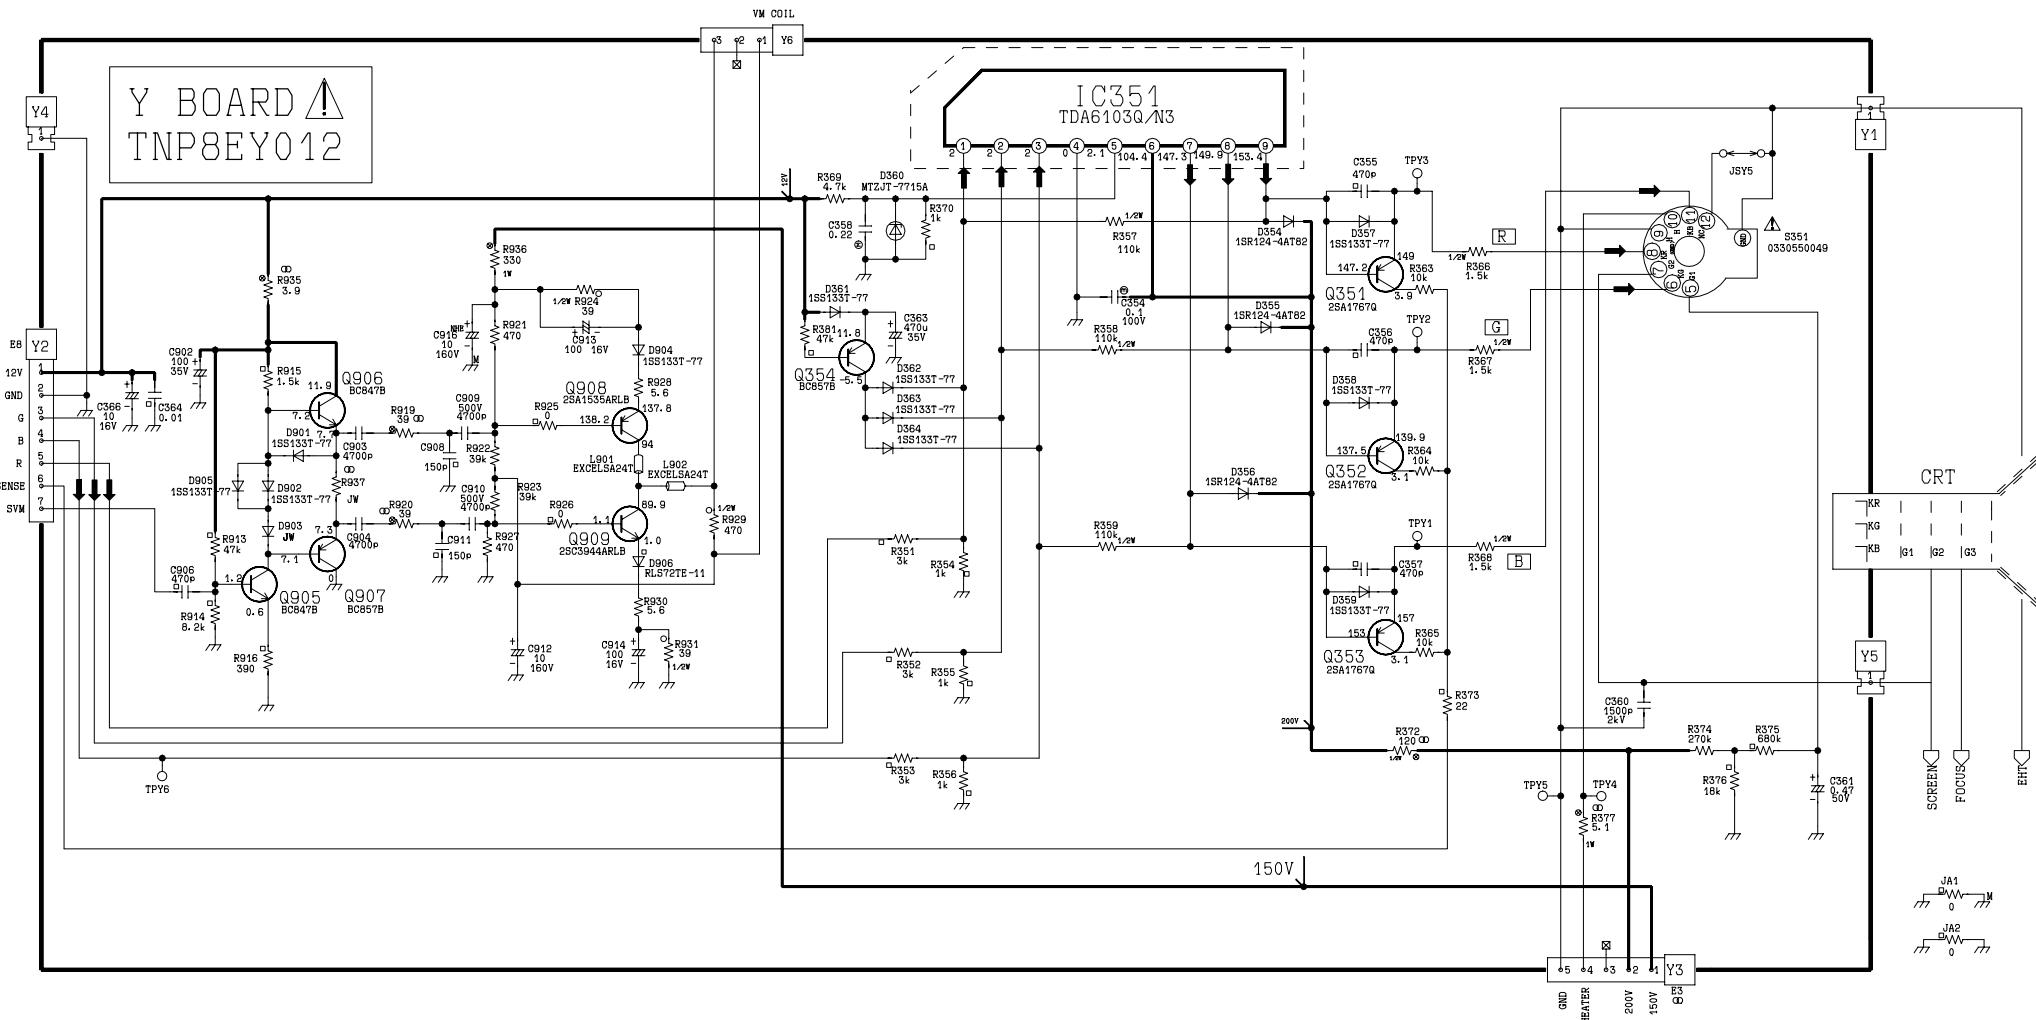

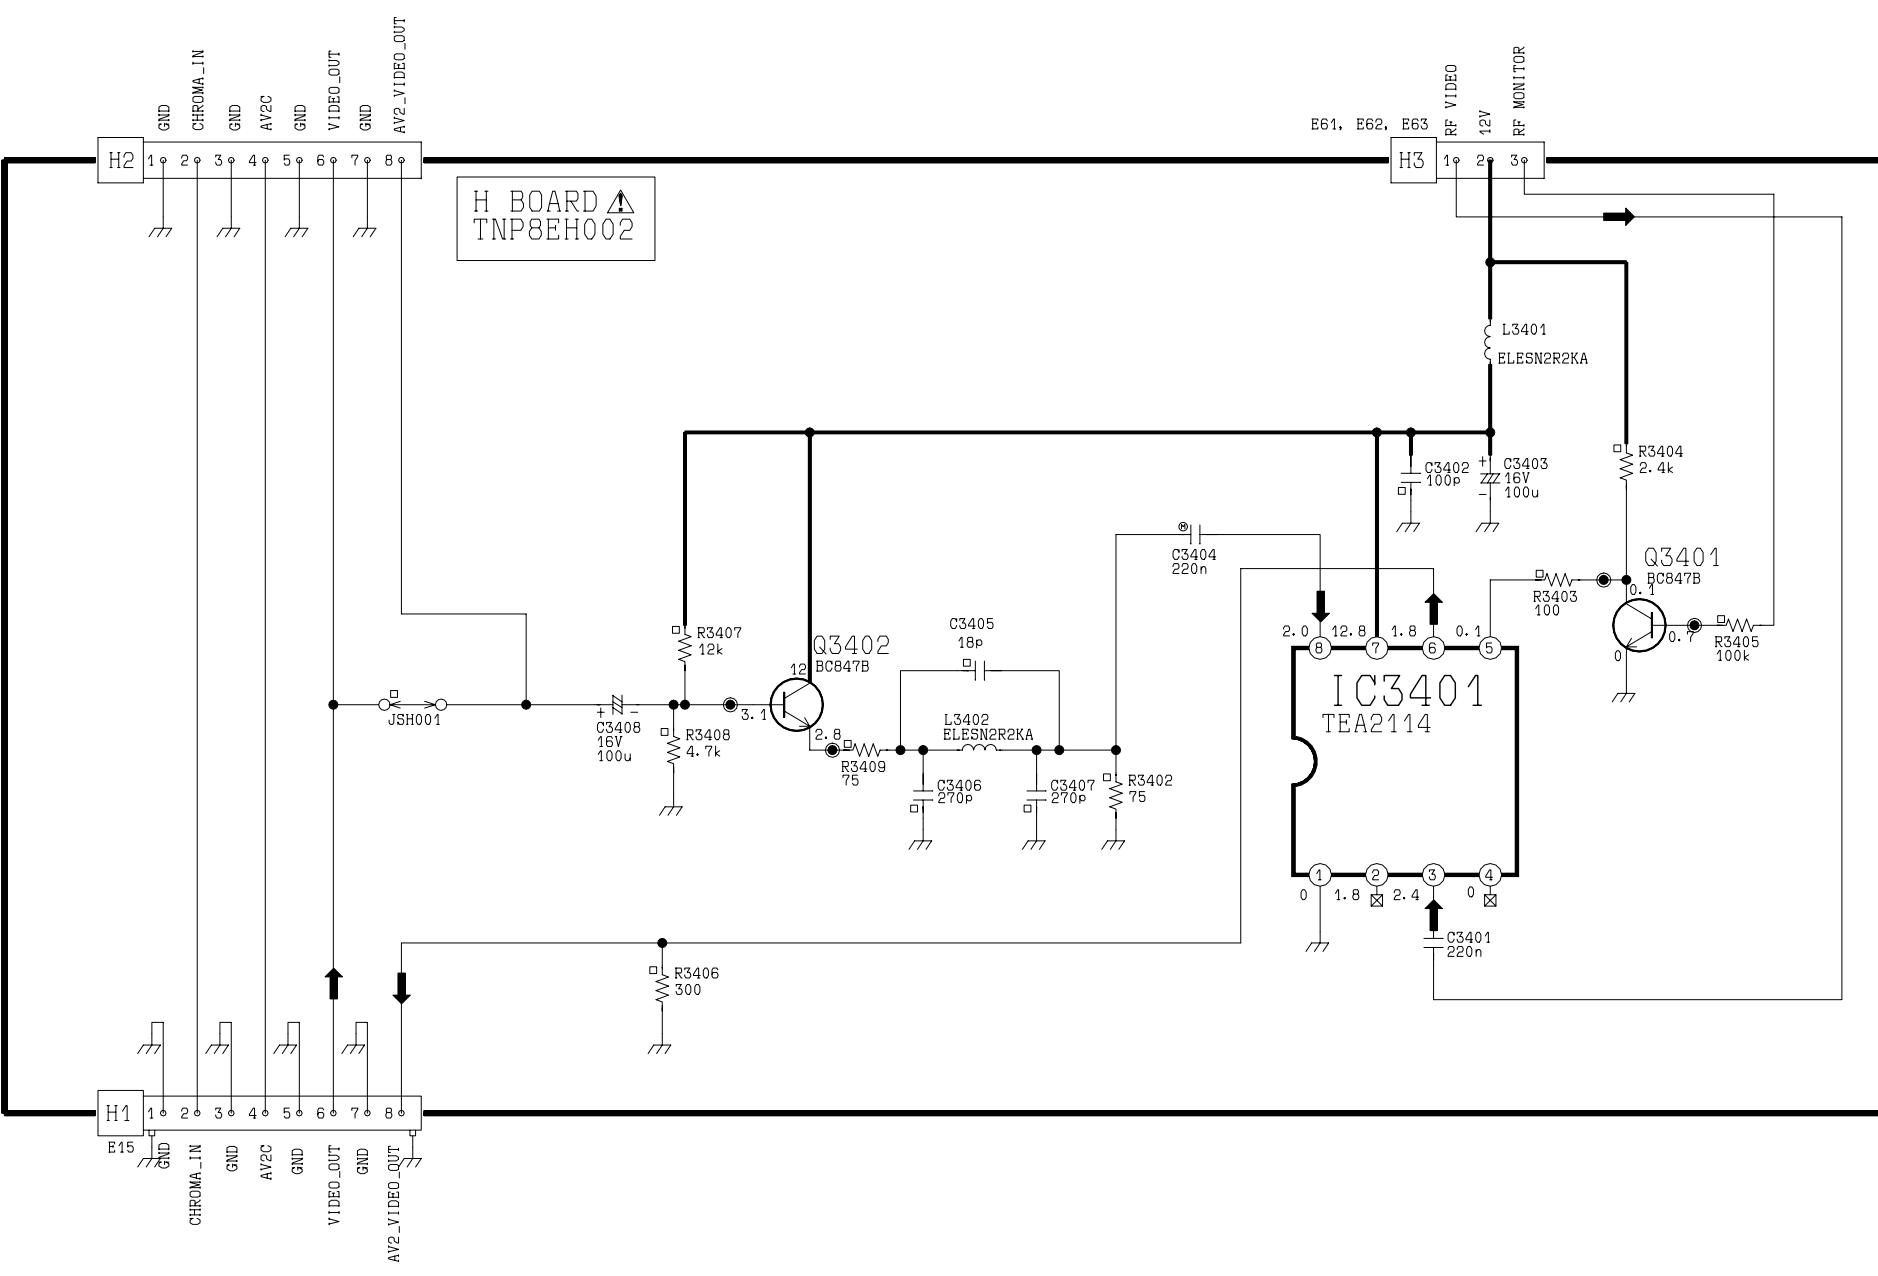

E BOARD
TNP8EE009


SERVICE/TEST

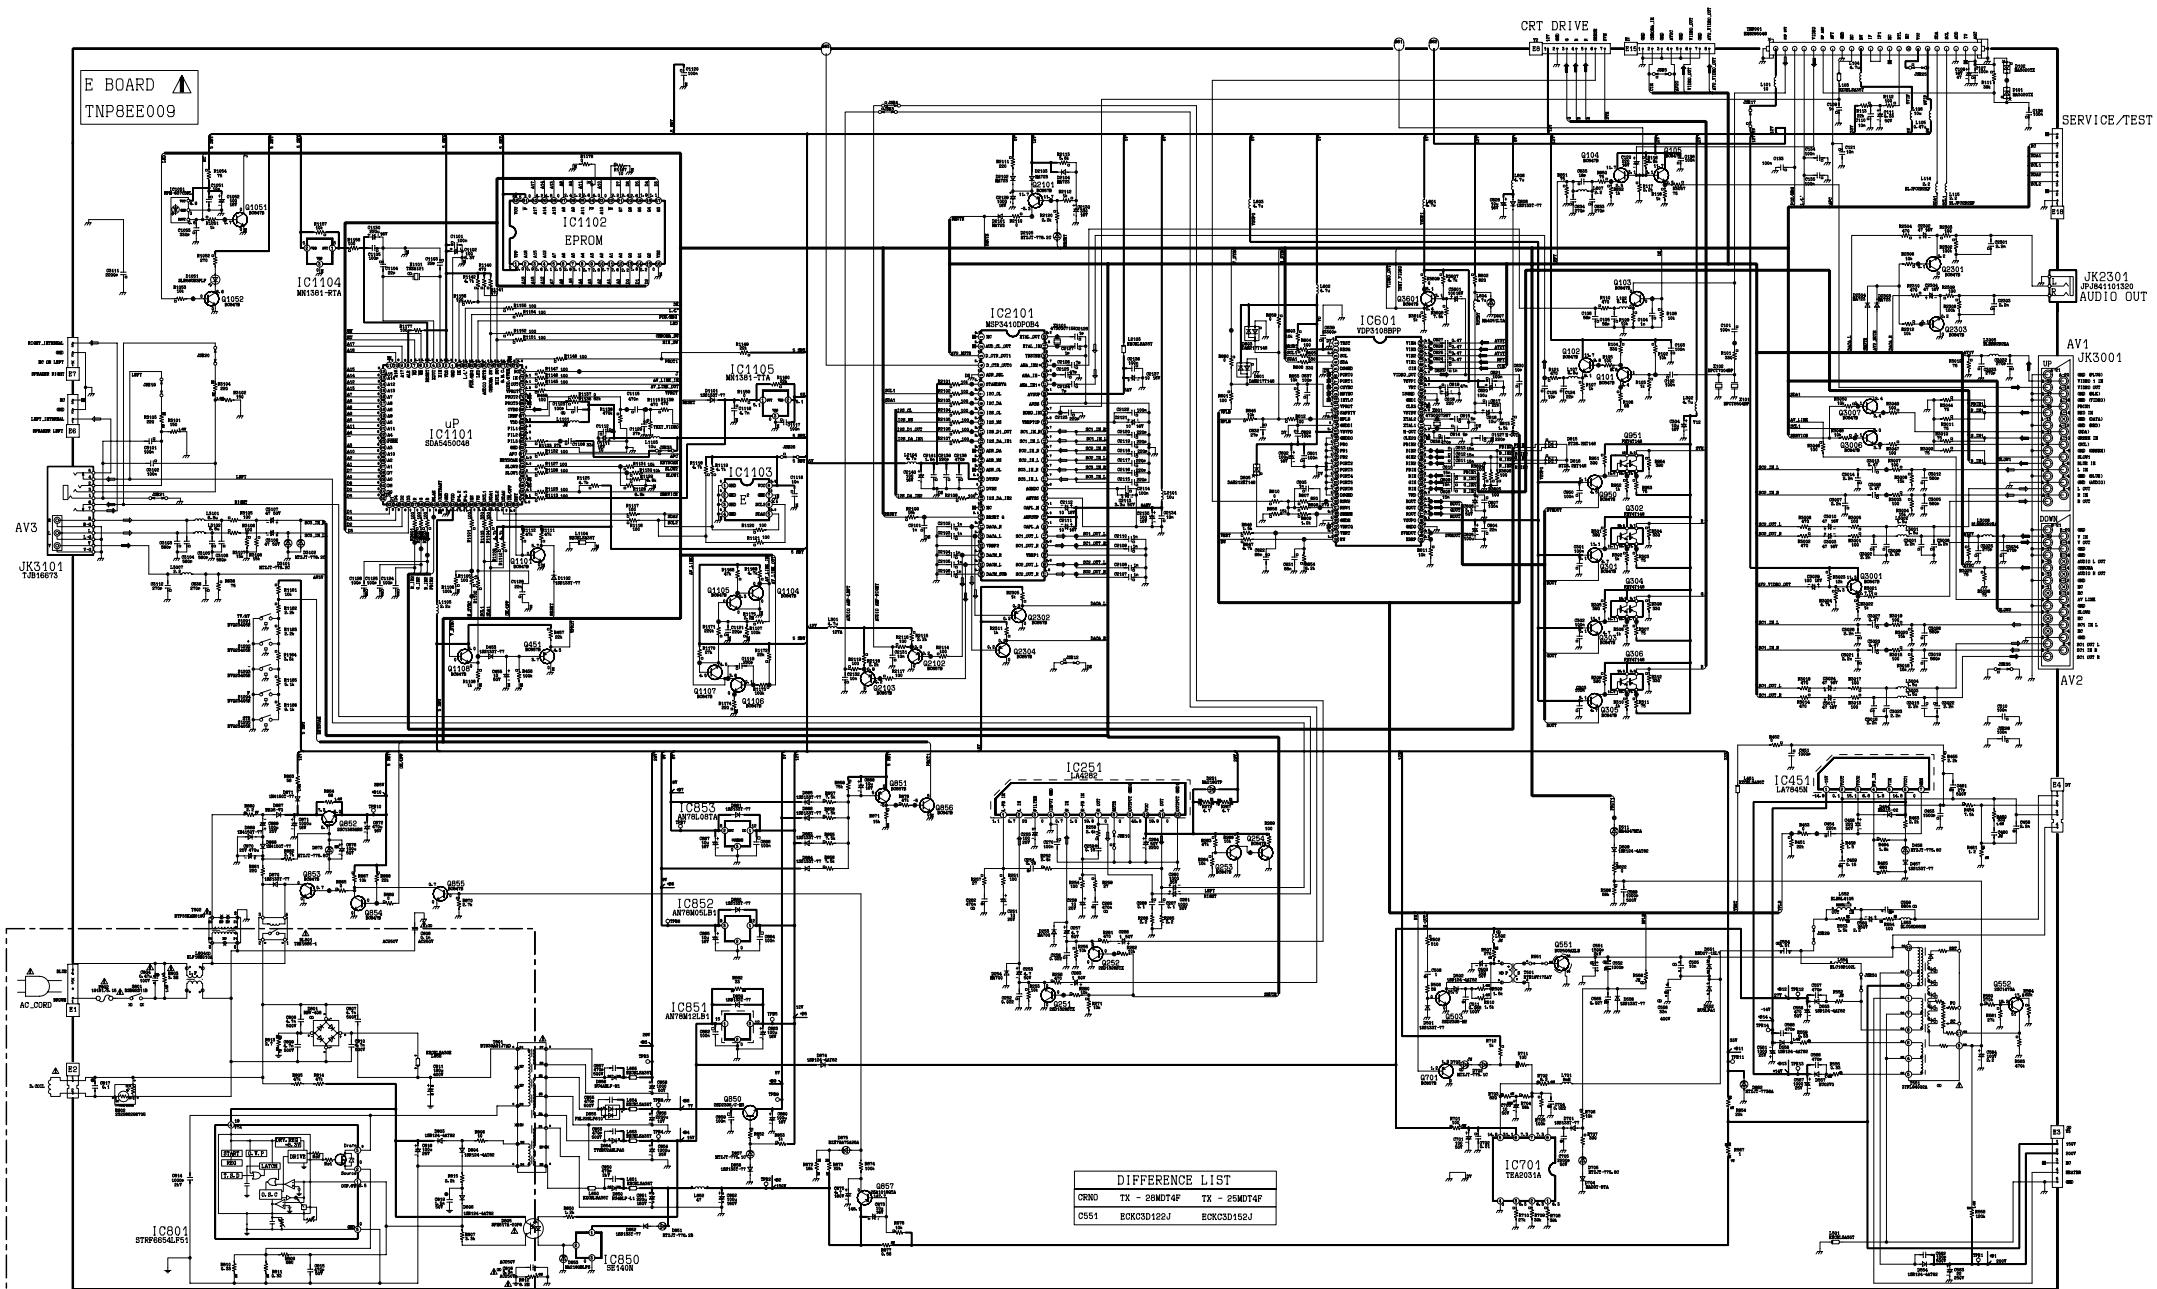

CONDUCTOR VIEWS

E - BOARD TNP8EE009

TRAN'S	DIODES	
Q3601 L8	D3103 B7	D558 L4
Q3007 M9	D3101 B7	D557 M4
Q3001 N8	D3102 B7	D556 K1
Q3006 N10	D2161 G9	D555 N3
Q2304 I7	D2105 G10	D554 M4
Q2303 M6	D2104 F9	D552 J2
Q2301 I7	D2103 G10	D551 K3
Q2103 I8	D2102 G9	D511 M5
Q2102 H8	D1103 F8	D502 I2
Q2101 G10	D1102 F7	D501 I2
Q1108 F9	D1101 G7	D457 L5
Q1107 C7	D1051 A9	D456 L5
Q1106 C7	D875 J5	D454 L5
Q1105 C7	D874 J4	D453 F9
Q1104 C7	D873 B5	D254 C5
Q1101 F7	D871 A5	D253 C5
Q1052 A9	D870 871	D252 B5
Q1051 C8	D869 B4	D251 B4
Q951 J9	D668 B4	IC'S
Q950 J9	D867 A3	IC2101 H8
Q857 J4	D866 I9	IC1105 F7
Q856 F9	D865 I9	IC1104 C9
Q855 J5	D864 I10	IC1103 F8
Q854 B4	D863 G9	IC1102 D10
Q853 B4	D862 N10	IC1101 D8
Q852 B5	D861 J9	IC1051 A10
Q850 F5	D860 I10	IC852 I10
Q701 J5	D859 H5	IC851 G5
Q552 N3	D858 E5	IC850 H4
Q551 K1	D857 E5	IC801 G2
Q503 I2	D855 F4	IC701 K5
Q451 F8	D854 G4	IC601 L7
Q394 K9	D853 H3	IC451 L5
Q305 K9	D852 I4	IC251 D6
Q303 K9	D851 I4	TP'S
Q302 J9	D850 H4	TPE14 M5
Q301 K9	D806 G2	TPE13 M4
Q253 C4	D805 H2	TPE12 K4
Q252 C4	D804 H1	TPE11 N5
Q252 C4	D803 H1	TPE10 B5
Q251 D4	D802 G2	TPE9 E5
Q105 M8	D801 E1	TPE8 F5
Q104 M9	D705 J5	TPE7 I9
Q103 F10	D704 K5	TPE6 J10
Q102 G10	D703 K5	TPE5 G5
Q101 H10	D702 K5	TPE4 G5
	D701 K5	TPE3 E5
	D609 M5	TPE2 I5
	D607 L9	TPE1 M4

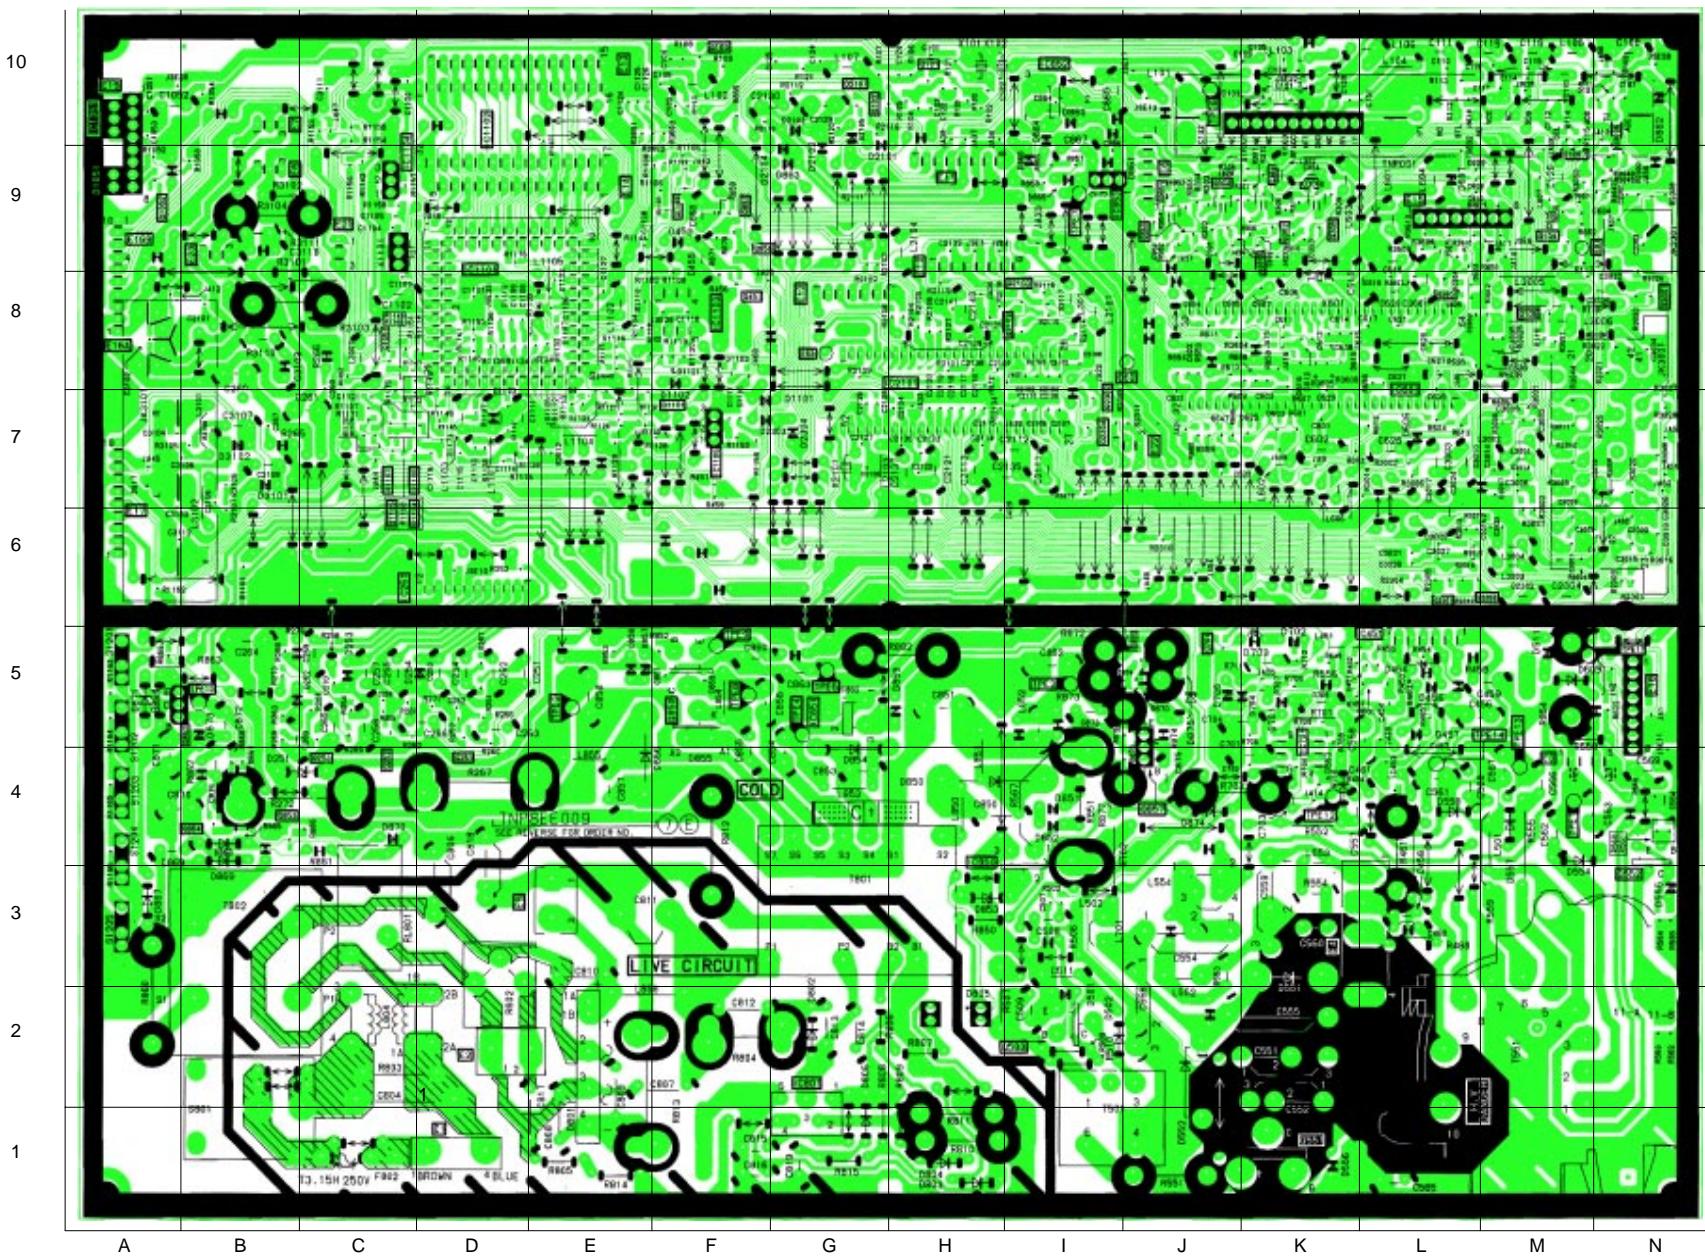

Y - BOARD TNP8EY012

TRANSISTORS

Q909	E1
Q908	C2
Q907	F4
Q906	G3
Q905	F5
Q354	A7
Q353	G6
Q352	F6
Q351	F6

DIODES

D906	F1
D905	G4
D904	D3
D902	G4
D901	G3
D364	C9
D363	C8
D362	B9
D361	B7
D360	D8
D359	G6
D358	E7
D357	F7
D356	G7
D355	F7
D354	G7

TEST POINTS

TPY6	B8
TPY5	D5
TPY4	E5
TPY3	F6
TPY2	E7
TPY1	G6

IC'S

IC351	E8
-------	----

