

TX-W28R4DP Service Manual

Safety

Specifications

Parts List

Service Information

Adjustments

Self Check

Service Hints

Mechanical View

Disassembly

Location of Controls

Waveforms

Block Diagrams

Schematic Diagrams

PCB Views

Service Support

Service and repair of this product is supported by Panasonic's LUCI interface.


This interface provides a link between the TV and a standard PC to allow a number of diagnostic and control functions to be performed.

For more details contact your local Panasonic company.




BACK


EXIT

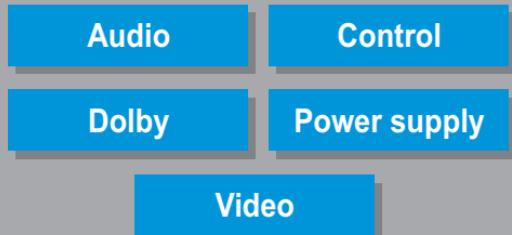

 BACK

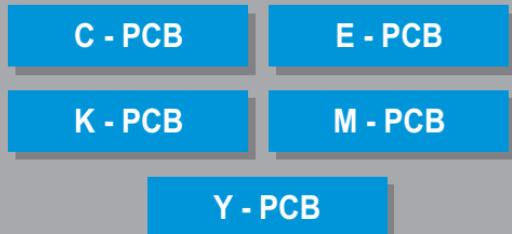

 BACK

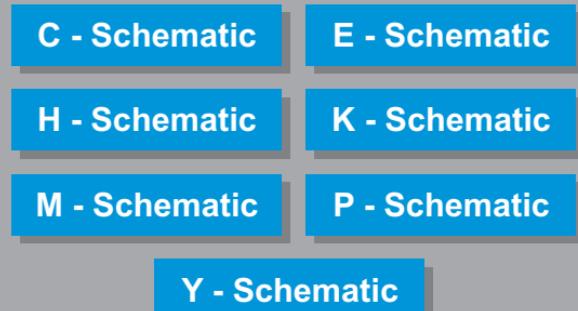

 BACK

Service Manual



Colour Television

TX-W28R4DP

EURO4 Chassis

SPECIFICATIONS

Power Source:	220-240V AC, 50Hz		Dolby Surround Out (Rear)	5 x Dolby Surround Out RCA	
Power Consumption:	135W		External Speaker connections	2 x Surround 1 x External Centre	
Aerial Impedance:	75Ω unbalanced, Coaxial Type		High Voltage:	30,5kV ±1kV	
Stand-by Power Consumption:	1,8W		Picture Tube:	W66EHK51X35 66cm	
Receiving System:	PAL I, PAL 525/60 M.NTSC NTSC (AV only)		Audio Output: (Music Power)	Front Left/Right External Centre 3D Sub-Woofer Surround 8Ω Impedance	2 x 20W 20W 26W 2 x 15W
Receiving Channels:	UHF E21-E69		Headphones:	8Ω Impedance 3,5 mm	
Intermediate Frequency:			Accessories supplied :	Remote Control 2 x R6 (UM3) Batteries TS-400DP Video cabinet / Speaker pack	
Video	39,5MHz		Dimensions:		
Audio	33,5MHz, 32,95MHz		Height:	518 mm	
Colour	35,07MHz		Width:	760 mm	
Video/Audio Terminals:			Depth:	496,8 mm	
AV1 IN	Video (21 pin)	1V p-p 75Ω	Net weight:	38kg	
	Audio (21 pin)	500mV rms 10kΩ		Specifications are subject to change without notice. Weights and dimensions shown are approximate.	
	RGB (21 pin)				
AV1 OUT	Video (21 pin)	1V p-p 75Ω			
	Audio (21 pin)	500mV rms 1kΩ			
AV2 IN	Video (21 pin)	1V p-p 75Ω			
	Audio (21 pin)	500mV rms 10kΩ			
	S-Video IN (21 pin)	Y: 1V p-p 75Ω C: 0,3V p-p 75Ω			
AV2 OUT	Video (21 pin)	1V p-p 75Ω			
	Audio (21 pin)	500mV rms 1kΩ			
	Selectable Output (21 pin)				
AV3 IN	S-Video IN (4-pin)	Y: 1V p-p 75Ω C: 0,3V p-p 75Ω			
	Audio(RCAx2)	500mV rms 10kΩ			
	Video (RCAx1)	1V p-p 75Ω			

NOTE: This Service Manual should be used in conjunction with the EURO4 Technical Guide.

Panasonic

Panasonic CS (U.K.) Ltd.
WILLOUGHBY ROAD,
BRACKNELL,
BERKS.,
RG12 8FT.

CONTENTS

SAFETY PRECAUTIONS.....	2
SERVICE HINTS.....	3
SERVICE POSITION.....	4
ADJUSTMENT PROCEDURE.....	5
ADJUSTMENT PROCEDURE AND SELF-CHECK	6
WAVEFORM PATTERN TABLE	7
ALIGNMENT SETTINGS.....	8
BLOCK DIAGRAMS	9
PARTS LOCATION	14
REPLACEMENT PARTS LIST	15
SCHEMATIC DIAGRAMS	27
CONDUCTOR VIEWS.....	32

SAFETY PRECAUTIONS

GENERAL GUIDE LINES

1. It is advisable to insert an isolation transformer in the AC supply before servicing a hot chassis.
2. When servicing, observe the original lead dress in the high voltage circuits. If a short circuit is found, replace all parts that have been overheated or damaged by the short circuit.
3. After servicing, see that all the protective devices such as insulation barriers, insulation papers, shields and isolation R-C combinations are correctly installed.
4. When the receiver is not being used for a long period of time, unplug the power cord from the AC outlet.
5. Potentials as high as 31,5kV are present when this receiver is in operation. Operation of the receiver without the rear cover involves the danger of a shock hazard from the receiver power supply. Servicing should not be attempted by anyone who is not familiar with the precautions necessary when working on high voltage equipment. Always discharge the anode of the tube.
6. After servicing make the following leakage current checks to prevent the customer from being exposed to shock hazard.

LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs of the plug.
2. Turn on the receiver's power switch.
3. Measure the resistance value with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the receiver, such as screw heads, aerials, connectors, control shafts etc. When the exposed metallic part has a return path to the chassis, the reading should be between 4M ohm and 20M ohm. When the exposed metal does not have a return path to the chassis, the reading must be infinite.

LEAKAGE CURRENT HOT CHECK

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a $2\text{k}\Omega$ 10W resistor in series with an exposed metallic part on the receiver and an earth, such as a water pipe.
3. Use an AC voltmeter with high impedance to measure the potential across the resistor.
4. Check each exposed metallic part and check the voltage at each point.

5. Reverse the AC plug at the outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 1,4 Vrms. In case a measurement is outside the limits specified, there is a possibility of a shock hazard, and the receiver should be repaired and rechecked before it is returned to the customer.

HOT CHECK CIRCUIT

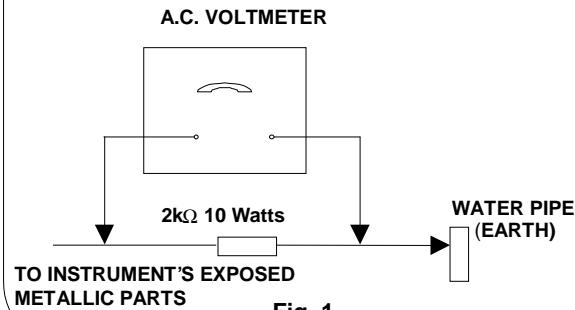


Fig. 1.

X-RADIATION WARNING

1. The potential sources of X-Radiation in TV sets are the high voltage section and the picture tube.
2. When using a picture tube test jig for service, ensure that the jig is capable of handling 30,5kV without causing X-Radiation.


NOTE: It is important to use an accurate periodically calibrated high voltage meter.

1. Set the brightness to minimum.
2. Measure the high voltage. The meter should indicate :- $30,5\text{kV} \pm 1\text{kV}$. If the meter indication is out of tolerance, immediate service and correction is required to prevent the possibility of premature component failure.
3. To prevent any X-Radiation possibility, it is essential to use the specified tube.

SERVICE HINTS

How to remove the rear cover

1. Remove the 9 screws as shown in Fig.2.

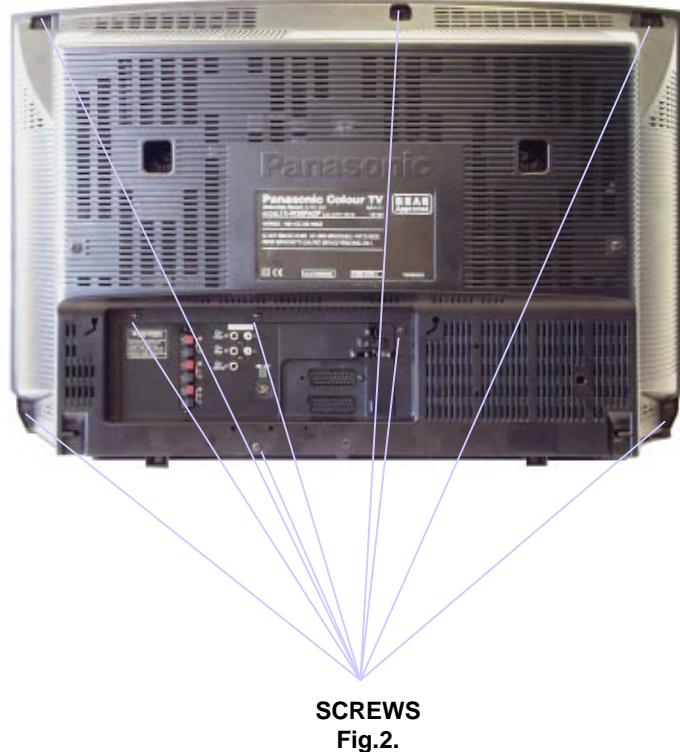

LOCATION OF CONTROLS

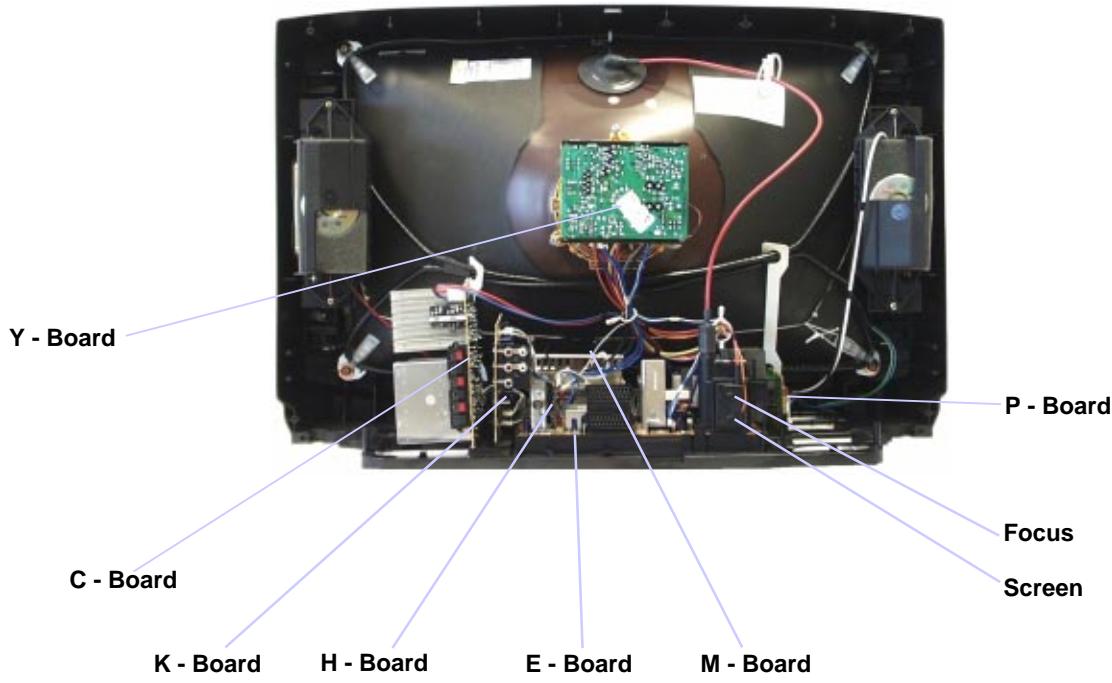


Fig.3.

HOW TO MOVE THE CHASSIS INTO SERVICE POSITION

1. Remove the bead clamper from the mains lead and affix, using back cover screw, into top right-hand cabinet rib (A), shown in **Fig.4**.
2. Hold and lift the rear of the E-PCB chassis and gently pull the chassis toward you, as shown in **Fig.4**.
3. Release the respective wiring clips and rotate the chassis vertically through 90°, anti-clockwise.
4. Locate the base of the chassis frame into the hole (B), shown in **Fig.6**.
5. Clip the chassis frame onto the bead clamper, shown in **Fig.5**.
6. After servicing replace the bead clamper and ensure all wiring is returned to its original position before returning the receiver to the customer.

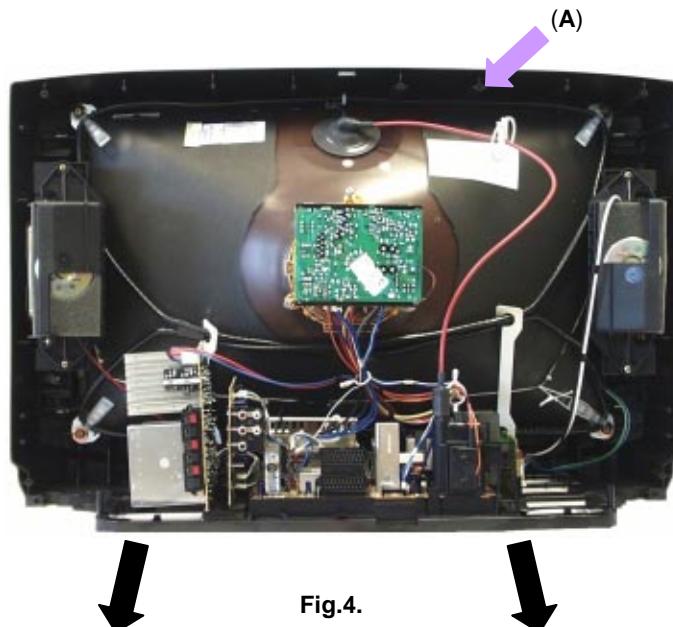


Fig.4.

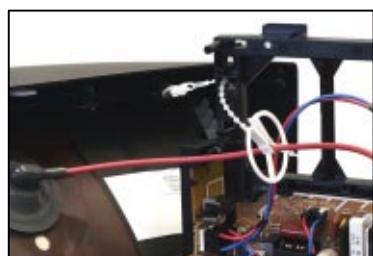


Fig.5.

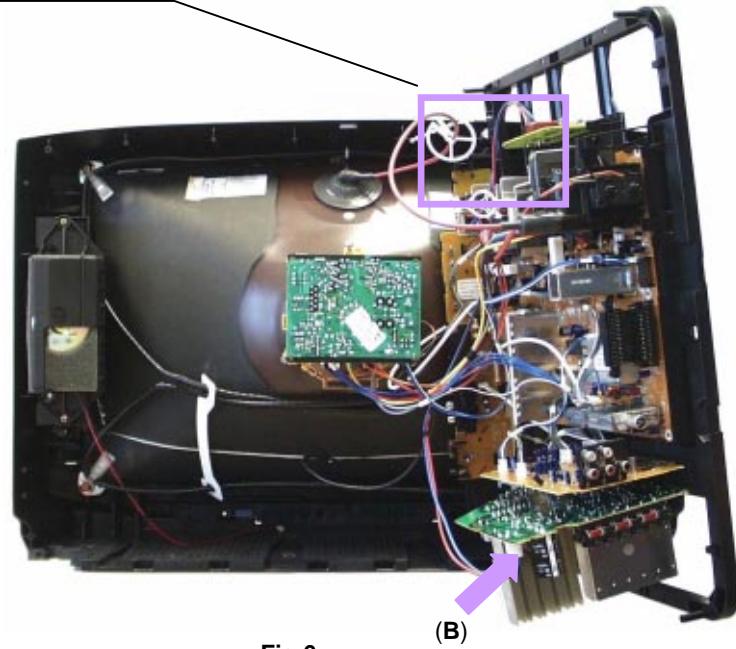


Fig.6.

ADJUSTMENT PROCEDURE

The remote control is used for entering and storing adjustments, with the exception of Cut-off adjustments, which must always be done prior to service adjustment. Perform adjustments in accordance with screen display. The display on the screen also specifies the software version as well as the approx. setting values. The adjustment sequence for the service mode is indicated below.

1. Set the Bass to maximum position, set the Treble to minimum position, press the F button followed by the volume down button on the customer controls at the front of the TV and at the same time press the "INDEX" button on the remote control, this will place the TV into the Service Mode.
2. Press the **RED / GREEN** buttons to step up / down through the functions.
3. Press the **YELLOW / BLUE** buttons to alter the function values.
4. Press the **STR** button after each adjustment has been made to store the required values.
5. To exit the Service Mode, turn the TV off at the power button.

NOTE: This TV also has the option of using a Memory Pack which enables you to copy the preset TV channels into the Memory Pack and then download them onto this or any other EURO-4 TV set.

TV to Memory Pack process

1. Plug the memory pack into the AV1 21 pin terminal at the back of the TV and switch the TV on.
2. Enter Service Mode as explained above.
The screen will show :-

Program
External>>TV

3. Press the **BLUE** button on the remote control.
The screen will show :-

Program
TV>>External

4. Press the **STR** button on the TV.
The screen will show :-

Please Wait

5. All the tuning information stored inside the TV will now be transferred to the Memory Pack. This process will take 2-3 minutes to complete and when finished the screen will show :-

Complete

Memory Pack to TV process

1. Plug the memory pack into the AV1 21 pin terminal at the back of the TV and switch the TV on.
2. Enter Service Mode as explained above.
The screen will show :-

Program
External>>TV

3. Press the **STR** button on the TV.
The screen will show :-

Please Wait

4. All the tuning information stored inside the Memory Pack will now be transferred to the TV. This process will take 2-3 minutes to complete and when finished the screen will show :-

Complete

5. The tuning information from the Memory Pack has now been copied into the TV.
6. To exit the Service Mode turn the TV off at the power button.
7. The process has now been completed and the Memory Pack can now be removed.

ERRORS

If an error occurs while using the Memory Pack the TV will detect this and the screen will show :-

Error !!

If this happens then press the "**N**" button and repeat the process that was being used. If the errors continue to occur then check the connectors between the TV and the memory pack and check the 9V battery inside the memory pack.

ADJUSTMENT PROCEDURE

Item / Preparation	Adjustments																																										
+B SET-UP <ol style="list-style-type: none"> Receive a Greyscale signal. Set the controls :- <table> <tr><td>Brightness</td><td>Minimum</td><td>B9</td><td>5 ± 0,25V</td><td>B10</td><td>5 ± 0,25V</td></tr> <tr><td>Contrast</td><td>Minimum</td><td>B5</td><td>12 ± 0,5V</td><td>B11</td><td>33 ± 1,5V</td></tr> <tr><td>Volume</td><td>Minimum</td><td>B4</td><td>16 ± 1V</td><td>B7</td><td>8 ± 0,5V</td></tr> </table> 	Brightness	Minimum	B9	5 ± 0,25V	B10	5 ± 0,25V	Contrast	Minimum	B5	12 ± 0,5V	B11	33 ± 1,5V	Volume	Minimum	B4	16 ± 1V	B7	8 ± 0,5V	<ol style="list-style-type: none"> Set the +B voltage up as follows:- Adjust R811 so that B2 shows $148V \pm 1V$. Confirm the following voltages. <table> <tr><td>B9</td><td>5 ± 0,25V</td><td>B10</td><td>5 ± 0,25V</td></tr> <tr><td>B5</td><td>12 ± 0,5V</td><td>B11</td><td>33 ± 1,5V</td></tr> <tr><td>B4</td><td>16 ± 1V</td><td>B7</td><td>8 ± 0,5V</td></tr> <tr><td>B12</td><td>26 ± 1V</td><td>B8</td><td>5,5 ± 0,5V</td></tr> <tr><td>B3</td><td>41 ± 1,5V</td><td>B13</td><td>15 ± 1V</td></tr> <tr><td>B1</td><td>200 ± 10V</td><td>B14</td><td>-15 ± 1V</td></tr> </table> 	B9	5 ± 0,25V	B10	5 ± 0,25V	B5	12 ± 0,5V	B11	33 ± 1,5V	B4	16 ± 1V	B7	8 ± 0,5V	B12	26 ± 1V	B8	5,5 ± 0,5V	B3	41 ± 1,5V	B13	15 ± 1V	B1	200 ± 10V	B14	-15 ± 1V
Brightness	Minimum	B9	5 ± 0,25V	B10	5 ± 0,25V																																						
Contrast	Minimum	B5	12 ± 0,5V	B11	33 ± 1,5V																																						
Volume	Minimum	B4	16 ± 1V	B7	8 ± 0,5V																																						
B9	5 ± 0,25V	B10	5 ± 0,25V																																								
B5	12 ± 0,5V	B11	33 ± 1,5V																																								
B4	16 ± 1V	B7	8 ± 0,5V																																								
B12	26 ± 1V	B8	5,5 ± 0,5V																																								
B3	41 ± 1,5V	B13	15 ± 1V																																								
B1	200 ± 10V	B14	-15 ± 1V																																								
CUT OFF / Ug2 Test <ol style="list-style-type: none"> Receive a Greyscale signal. Degauss the tube externally. Set the TV into Service Mode 1. Select Cut off mode. 	<p>To adjust Cutoff connect an oscilloscope to the Blue cathode, adjust "cutoff" value using the "Yellow" and "Blue" buttons until the black level is $160V \pm 5V$ press "STR" to store the value. Remove the oscilloscope.</p> <p>Select Ug2 adjustment and adjust the screen VR until the display shows "O.K."</p>																																										

FACTORY SETTINGS

To return customer settings to factory settings and clear owner ID of all information input by the customer, enter Self-Check mode. Press the down (-/v) button on the customer controls at the front of the TV set, at the same time pressing the **STATUS** button  on the remote control. To exit Self Check, switch off the TV set at the power button.

NOTE: Self Check should only be used when refurbishing the TV set and not during normal repair work.

VDP	O.K.	PCB	O.K.
TUN	O.K.	Cab	O.K.
E2	O.K.	Sum	Factory use only
MSP	O.K.		
DPL	O.K.		
OPTION 1	00		
OPTION 2	01		
OPTION 3	02		
OPTION 4	09		
OPTION 5	B1		
OPTION 6	A9		

Self Check is also used to automatically check the bus lines and hexadecimal code of the TV set. If the CCU ports have been checked and found to be incorrect or not located then " - - " will appear in place of "O.K.". For more in-depth TV diagnostics use the **LUCI** interface as listed below.

Service Aids

To aid in the service of our current chassis there are a number of Service Aids which have been made available.

- **LUCI** interface kit (**Linked Utility Computer Interface**)

Part number: TZS6EZ002

This contains interface and cables for connecting TV service connector and a PC as well as diagnostic software. As new models are introduced upgrade software will become available.

- **VICI** (**Visual Interactive Computer Information**)

These C.D.'s contain multimedia documentation providing quick access to service information.


















Part No. TZS7EZ006 & TZS7EZ005

1. Service Manuals
2. Instruction Books
3. Technical Information

- **TASMIN** (**Technically Advanced System for Multimedia Interactive Notes**)


As well as providing a first step towards more interactive training this product also achieves quick access to Technical Information.

WAVEFORM PATTERN TABLE

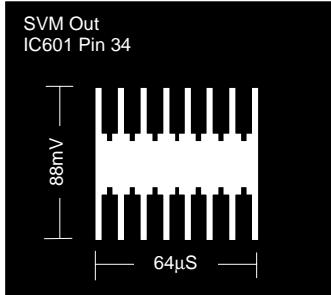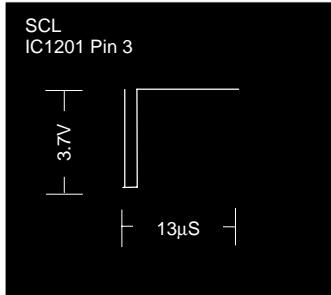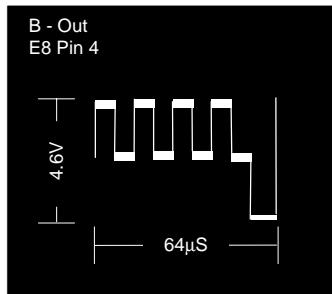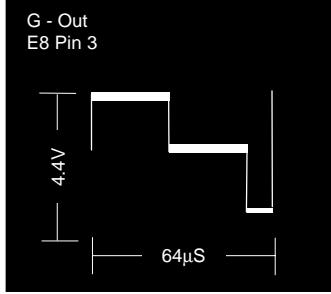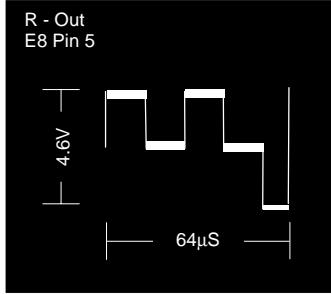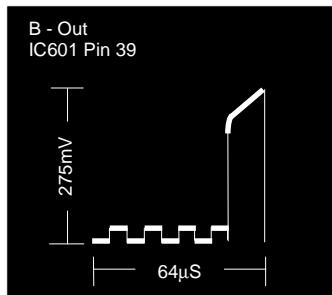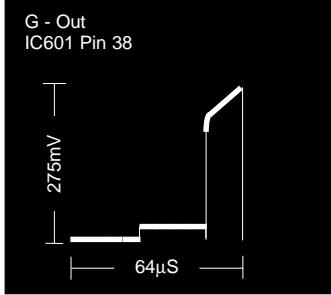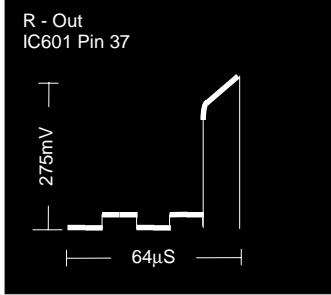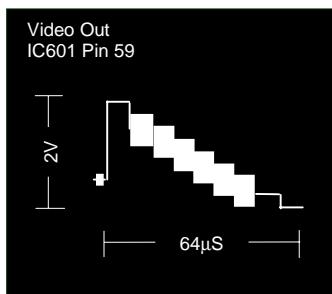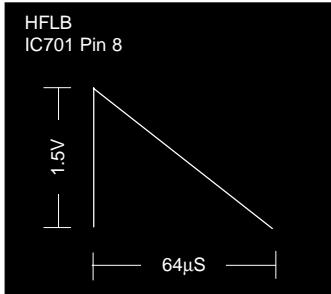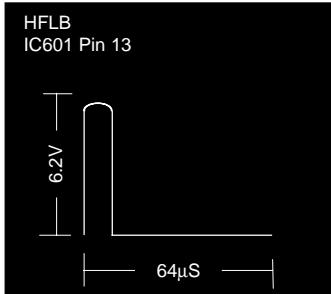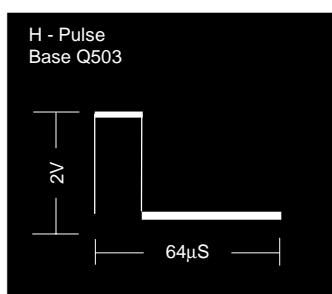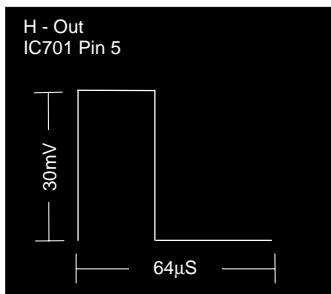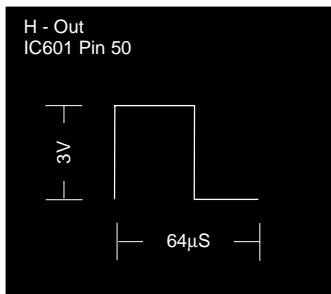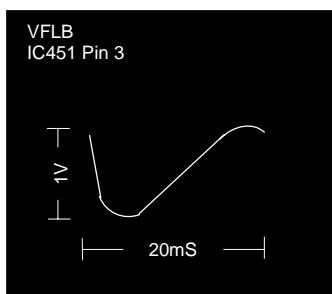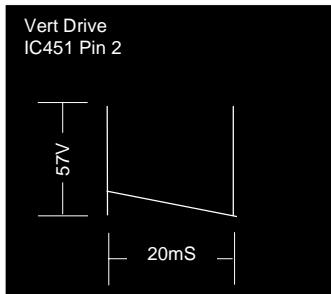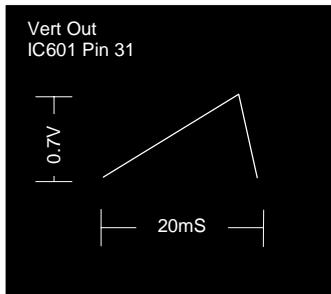


ALIGNMENT SETTINGS

(The figures below are nominal and used for representative purposes only.)

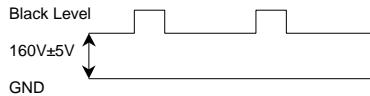
Alignment Function		Settings / Special features
Horizontal Position	H-Pos 061	Optimum setting.
Vertical Position	V-Pos 005	Optimum setting.
Horizontal Amplitude	H-Amp 055	Optimum setting.
Vert. Amplitude	V-Amp 054	Optimum setting.
EW-amplitude	E/W-Amp1 -128	Optimum setting.
EW-amplitude	E/W-Amp2 006	Optimum setting.
Trapezium-comp	Trapez-1 047	Optimum setting.
Trapezium-comp	Trapez-2 -128	Optimum setting.
Vertical Linearity	V-Lin 006	Optimum setting.
Vertical Symmetry	V-Sym 002	Optimum setting.
DVCO	DVCO -005	Receive a PAL Colour Bar Pattern. For DVCO alignment press "Blue" button, wait until the colours are changing slowly and press "STR".
Cut-off DC	Cut-off 0171	To adjust Cutoff connect an oscilloscope to the blue cathode, adjust "cutoff" value using the "Yellow" and "Blue" buttons until the black level is $160V \pm 5V$ press "STR" to store the value. Remove the oscilloscope. Select Ug2 adjustment and adjust the screen VR until the display shows "O.K."
Ug2 Test	Ug2 055 O.K.	
Highlight Lowlight	High 0902 0777 0864 Low 0117 0132 0112	Optimum setting.
Sub-Brightness	Sub-Brightness 255	Optimum setting.

VIDEO BLOCK DIAGRAM


6

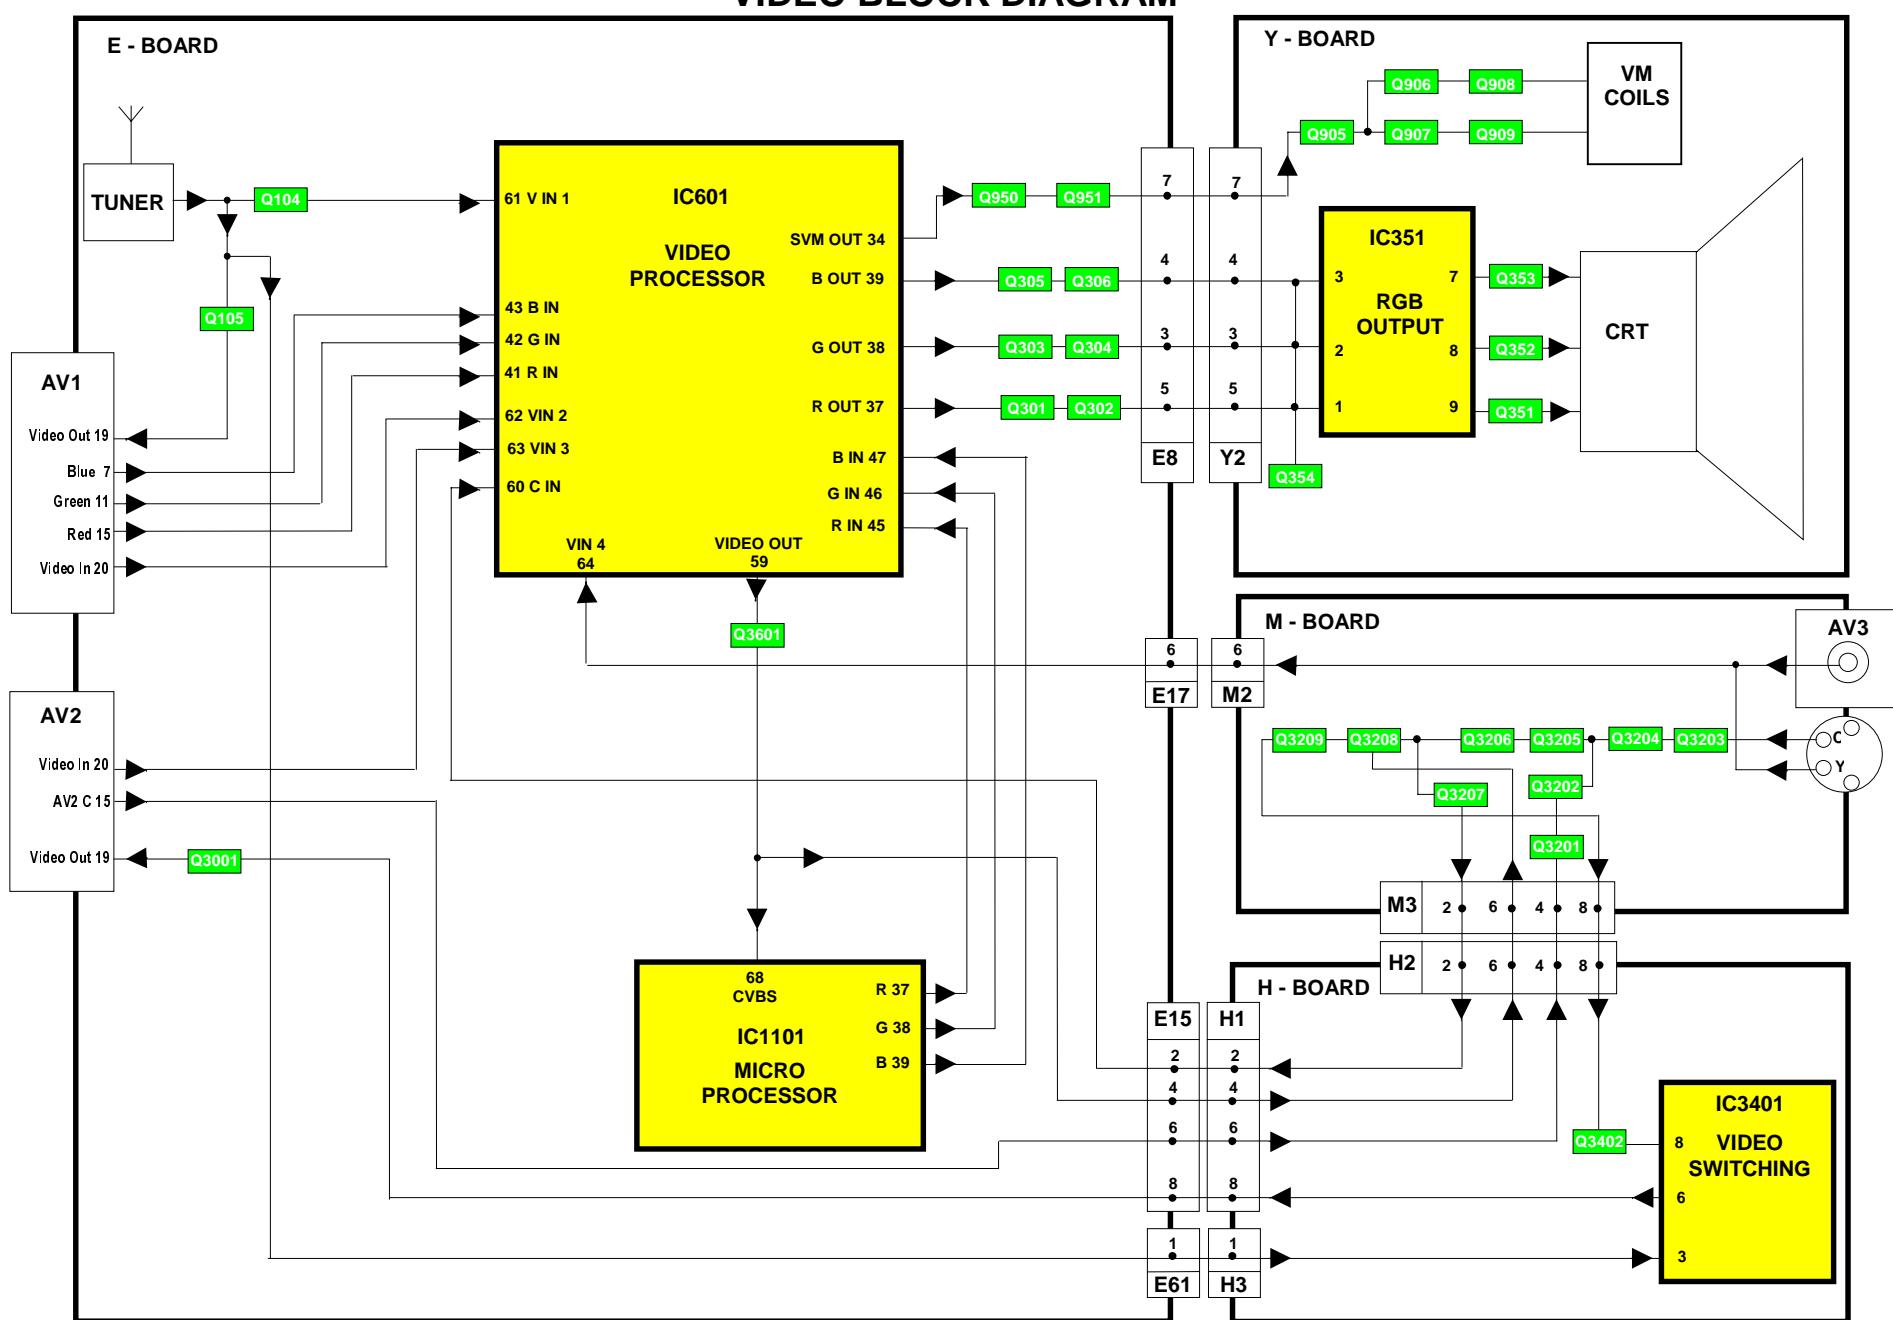


AUDIO BLOCK DIAGRAM

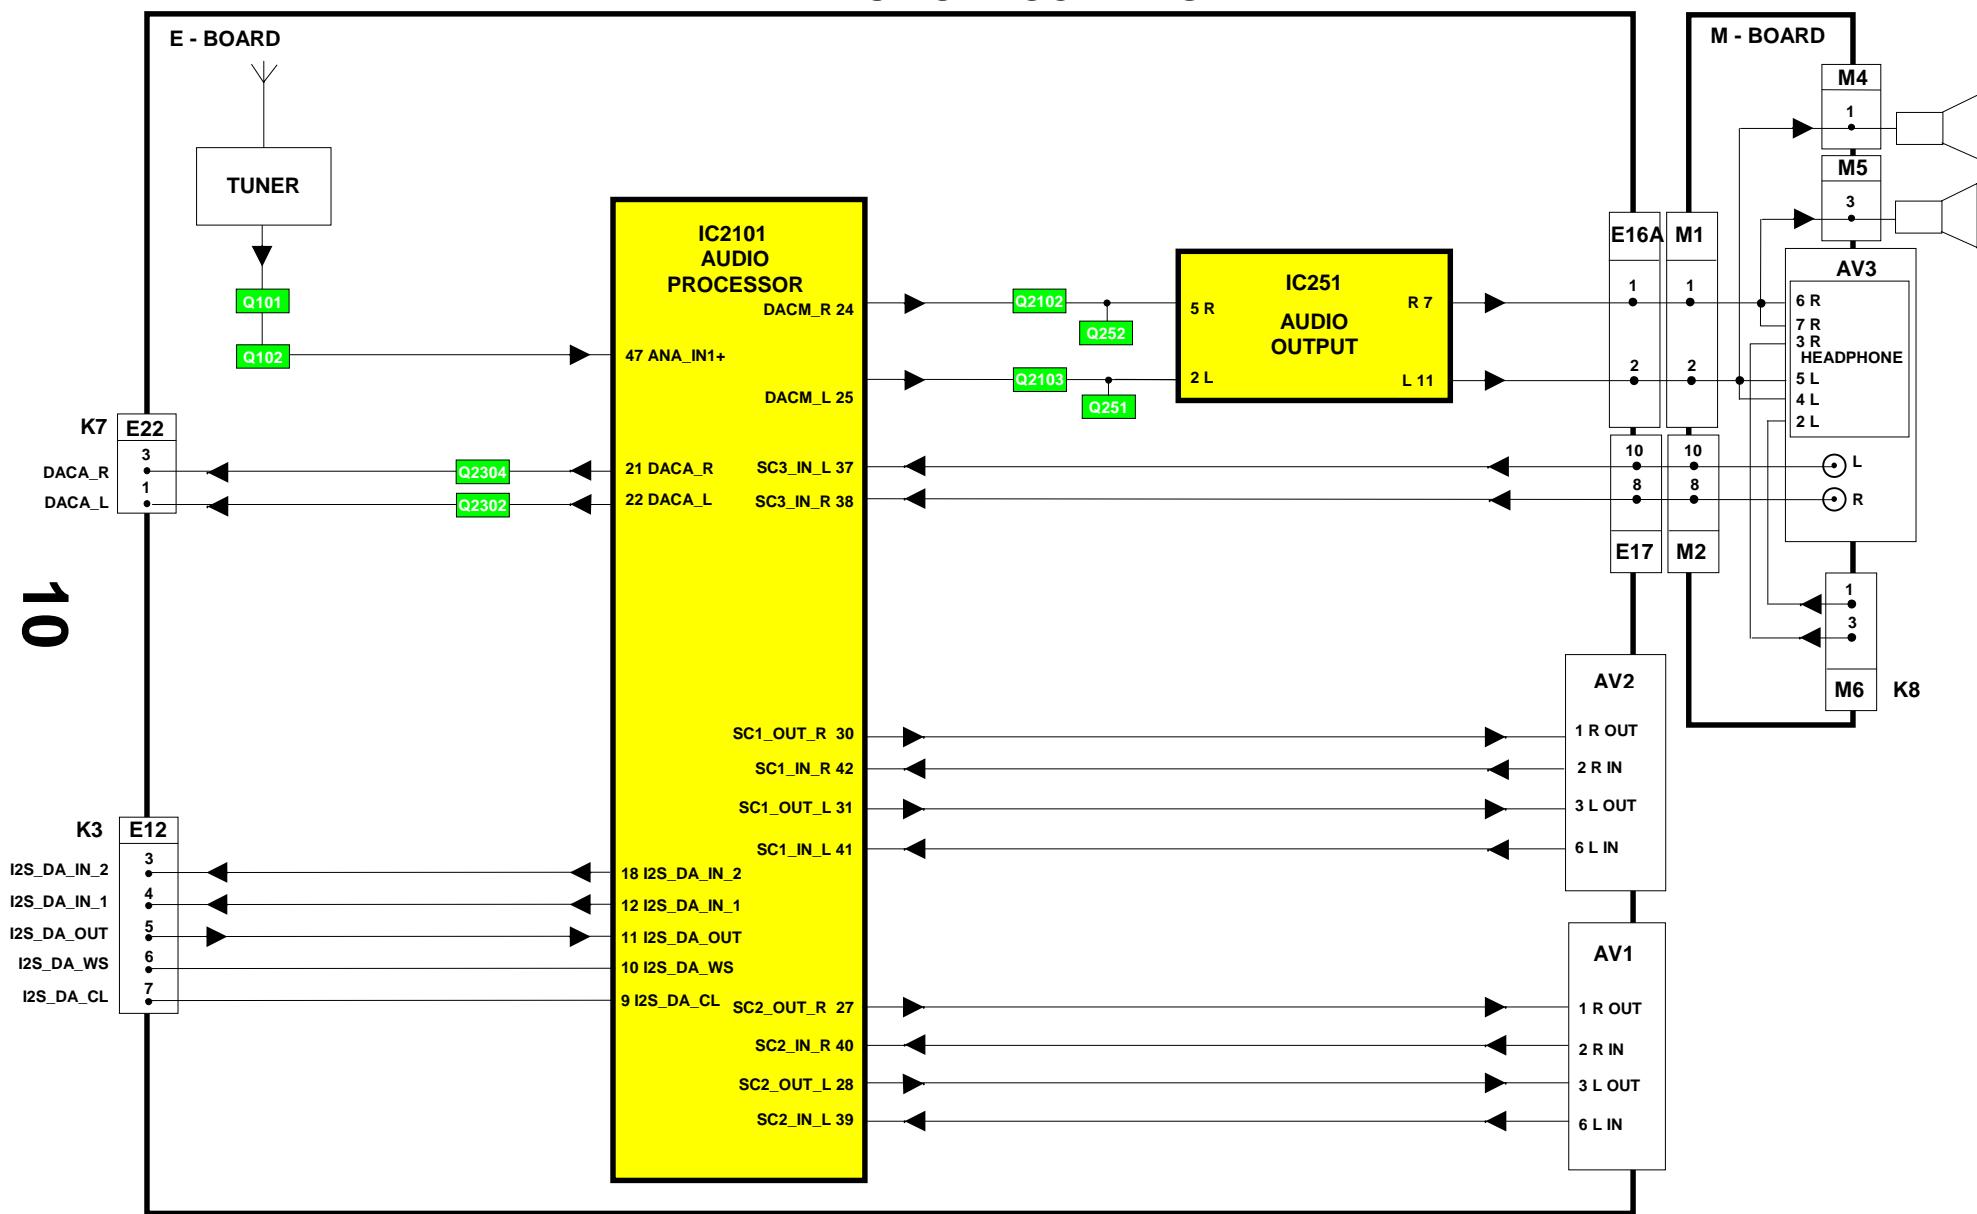


DOLBY BLOCK DIAGRAM

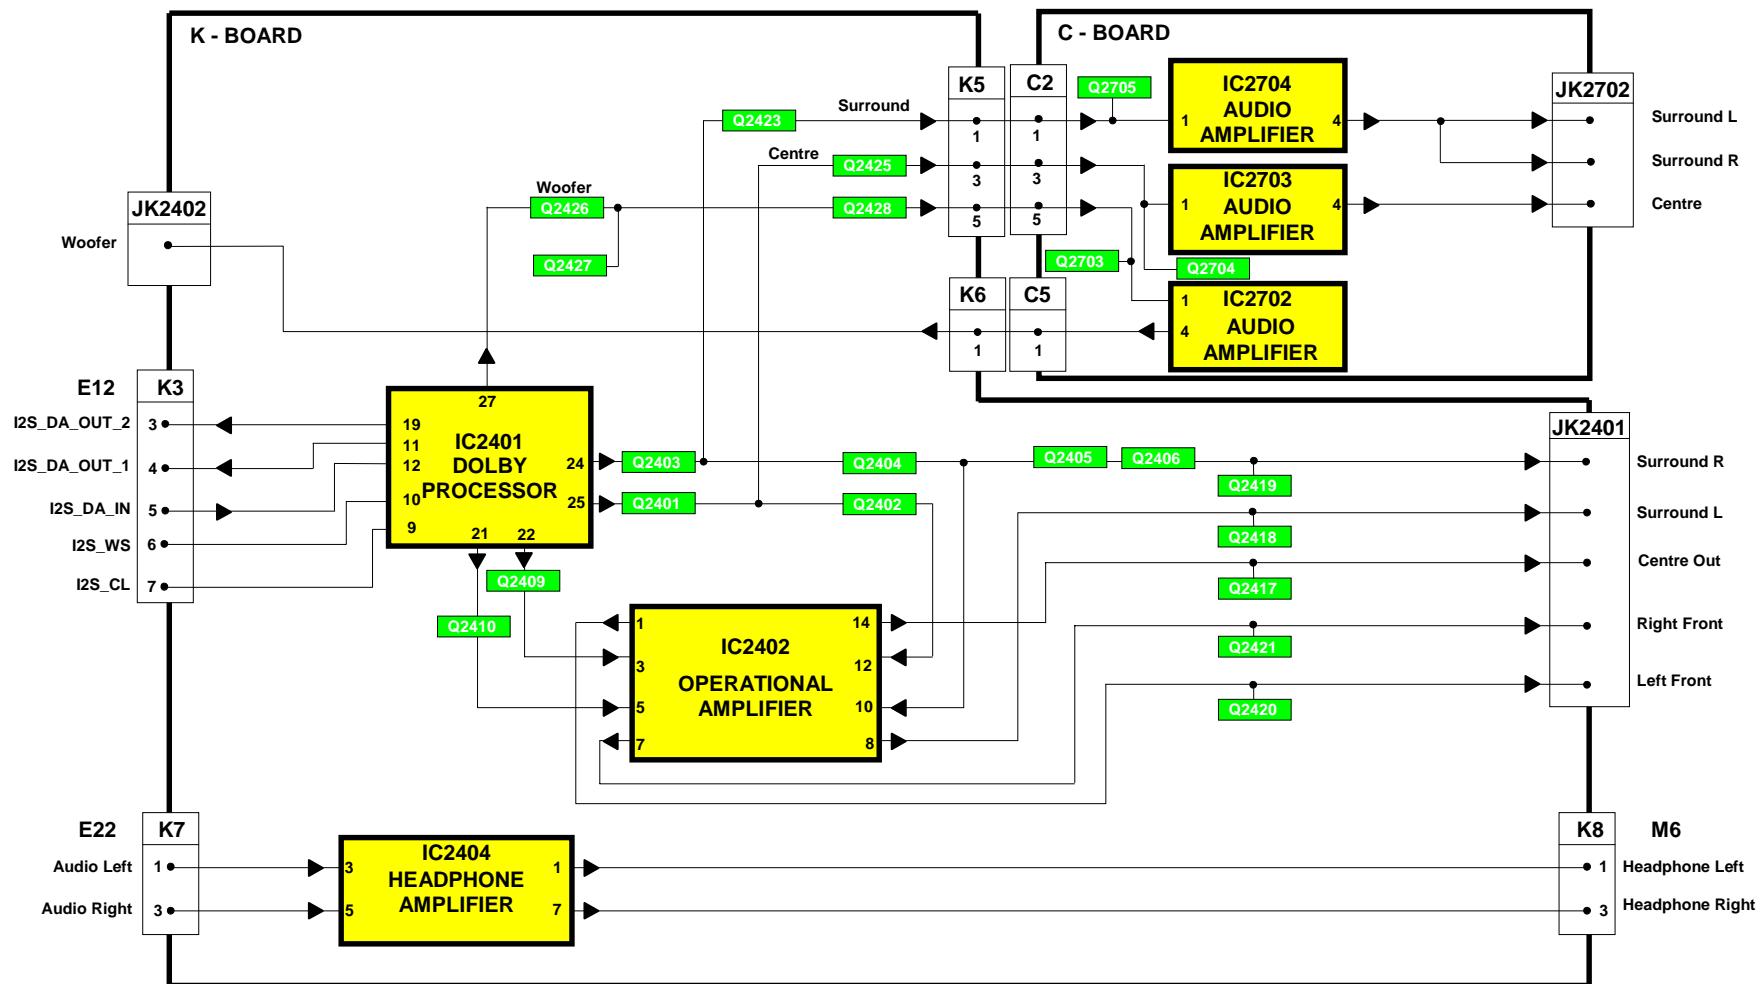

CONTROL BLOCK DIAGRAM

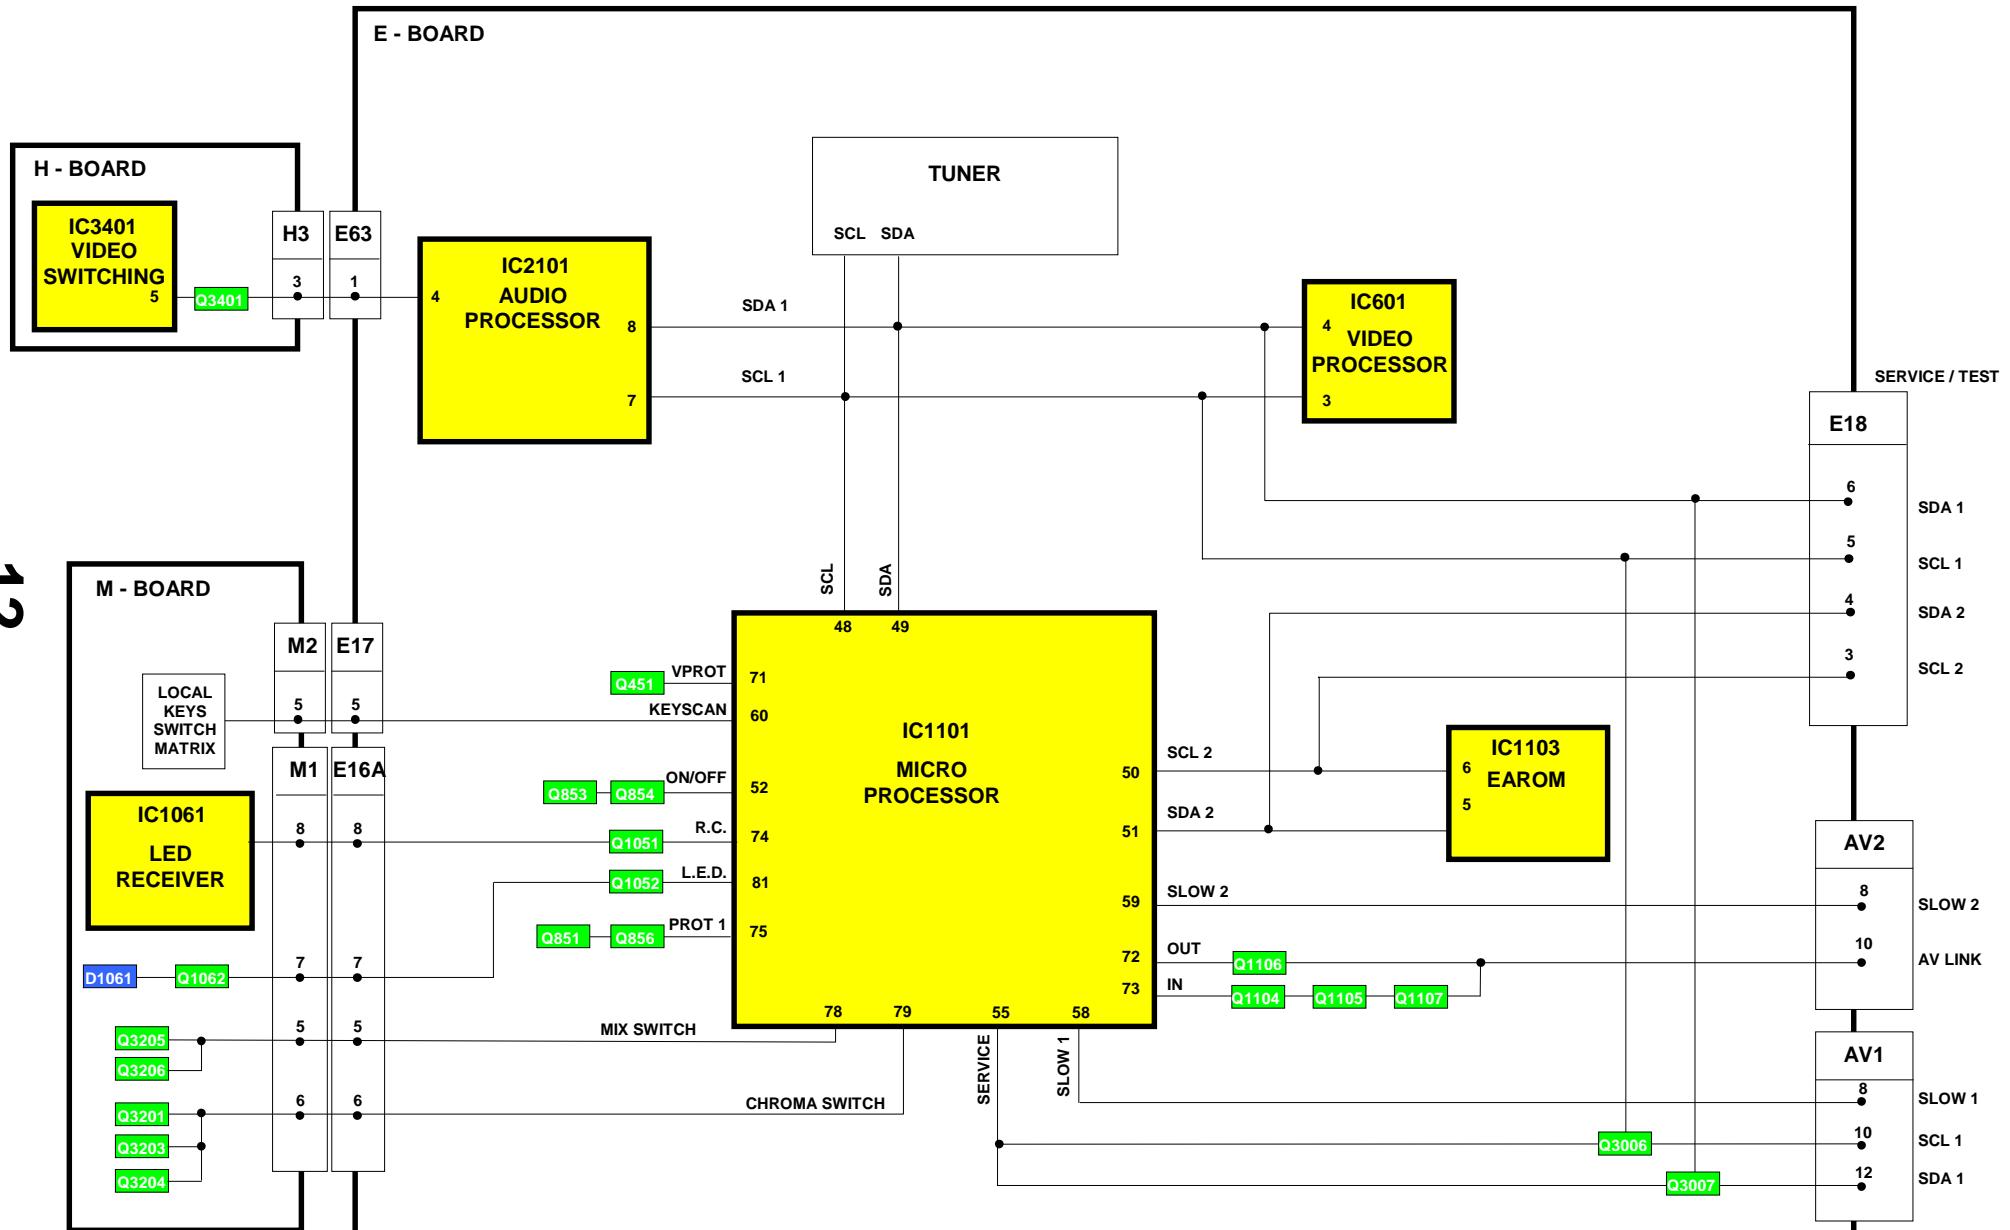


POWER SUPPLY BLOCK DIAGRAM

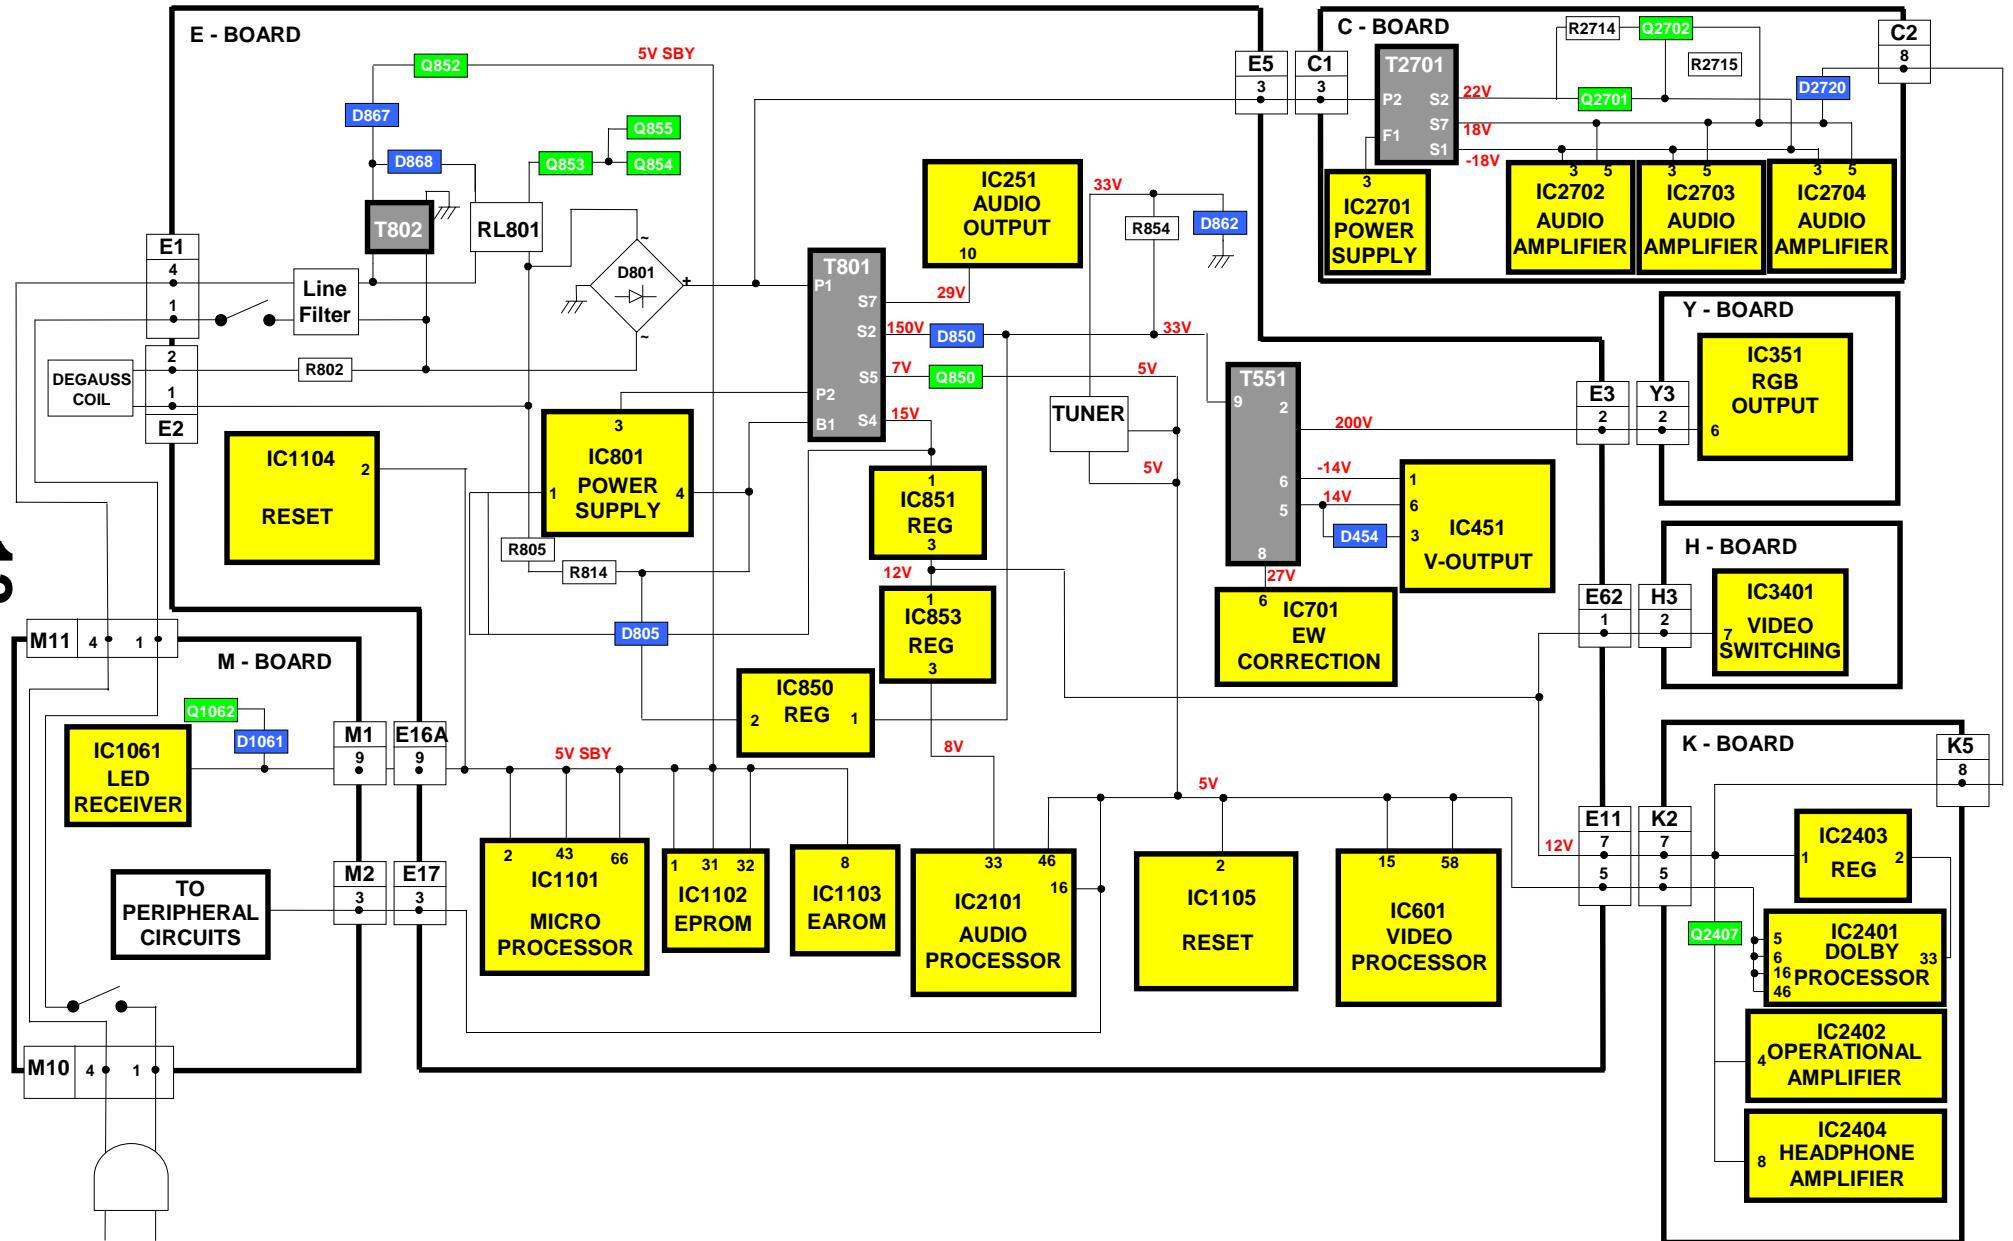

PARTS LOCATION

NOTE:

The numbers on the exploded view below refer to the mechanical section of the Replacement Parts List.

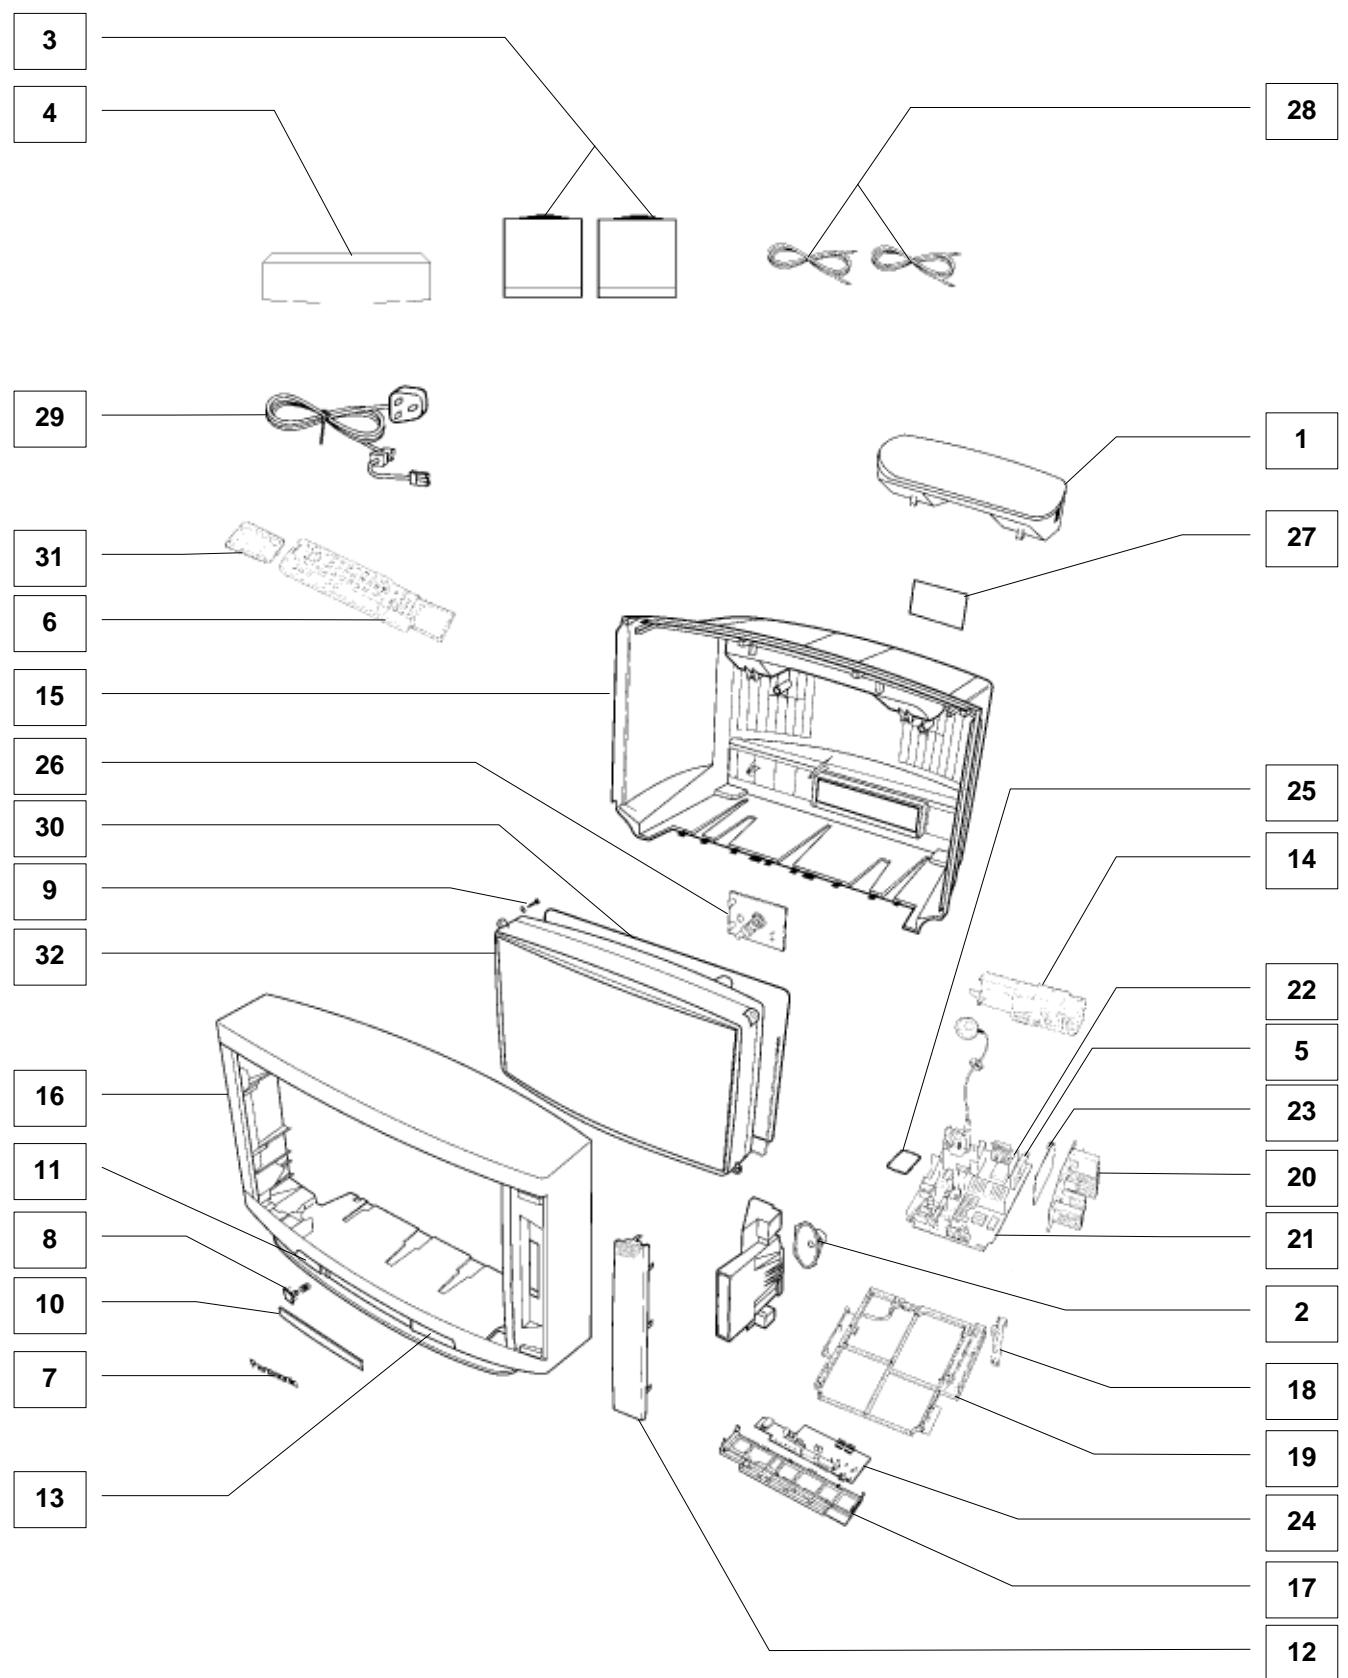

REPLACEMENT PARTS LIST

Important Safety Notice

Components Identified by  mark have special characteristics important for safety.
 * When replacing any of these components, use only manufacturers specified parts.
 In case of ordering these spare parts, please always add the complete Model-Type number to your order.

Cct Ref	Parts Number	Description
MECHANICAL PARTS		
1	EAB10102B2	3D WOOFER SPEAKER
2	EAGG1218J2	SPEAKER
3	EAS8E002-A	REAR SPEAKER COMPLETE
4	EAS8E050-B	CENTRE SPEAKER
5	ENG27506G	TUNER
6	EUR511210	REMOTE CONTROL
7	TBM8E1728	PANASONIC BADGE
8	TBX8E049	POWER BUTTON
9	THT1062	CRT FIXING SCREW
10	TKP8E1141	DOOR LID
11	TKP8E1143	PANEL LEFT
12	TKP8E1152	SPEAKER NET
13	TKP8E1155	RIGHT PANEL (DOLBY)
14	TKP8E1249	REAR AV PANEL
15	TKU8E00300	BACK COVER
16	TKY8E120	CABINET
17	TMW8E024-3	CONTROL BRACKET
18	TMX8E022	DOLBY BRACKET
19	TMX8E031	CHASSIS FRAME
20	TNP8EC003AC	C P.C.B.
21	TNP8EE009AE	E P.C.B.
22	TNP8EH002AB	H P.C.B.
23	TNP8EK005AC	K P.C.B.
24	TNP8EM013AA	M P.C.B.
25	TNP8EP015AB	P P.C.B.
26	TNP8EY012AG	Y P.C.B.
27	TQF8E2587	MODEL LABEL
28	TSX8E0015S	DOLBY SPEAKER WIRE 12M
29	TSX8E0025	POWER CORD
30	TXFLK01DAG	DEGAUSS COIL
31	UR51EC904A	BATTERY COVER (REMOTE)
32	W66EHK51X35	C.R.T.
MISCELLANEOUS COMPONENTS		
RL801	31221212478	FIX CLIP
	832AG11D-ESL	IC SOCKET
R802	F9-4-220	RELAY
	PCS-084A-1	84 PIN SOCKET
S351	TBM8E1532-2	RESET PANEL
	TBM8E1900	RESET LABEL
	TEK6940	LID CATCH
	TMW8E017	LED HOLDER
	TPC8E4676	OUTER CARTON
	TPD8E623	TOP CUSHION
	TPD8E624	BOTTOM CUSHION
	TS-400DP	TV STAND
	UM-3DJ-2P	BATTERY PACK
	ZTUZAE550A	ANODE LEAD
	TSE1885-1	RELAY
	232266296706	THERMISTOR
	0330550049	C.R.T. SOCKET

Cct Ref	Parts Number	Description
INSTRUCTION BOOKS		
		
I.C.s	TQB8E2474	ENGLISH
		
IC251	LA4282	AUDIO OUTPUT
IC351	TDA6103Q-N3	R.G.B. OUTPUT
IC451	LA7845N	VERTICAL OUTPUT
IC601	VDP3120BPPB1	VIDEO PROCESSOR
IC701	TEA2031A	E/W CORRECTION
IC801	STRF6654LF51	POWER SUPPLY
IC850	SE140N	ERROR AMPLIFIER
IC851	L78M12MRB	12V REGULATOR
IC853	AN78L08TA	8V REGULATOR
IC1061	RPM-637CBRS1	LED RECEIVER
IC1101	SDA5450C48	MICRO PROCESSOR
IC1102	27C2001-F18	EPROM *
IC1103	XGL2-01MA	EAROM *
IC1104	MN1381-R(TA)	RESET
IC1105	MN1381-T(TA)	RESET
IC2101	MSP3410DPOB4	AUDIO PROCESSOR
IC2401	DPL3519APOA1	DOLBY PROCESSOR
IC2402	AN6554	OPERATIONAL AMPLIFIER
IC2403	AN78L08TA	8V REGULATOR
IC2404	NJM4556AD	HEADPHONE AMPLIFIER
IC2701	STR10006-S	POWER SUPPLY
IC2702	TDA2030AV	AUDIO AMPLIFIER
IC2703	TDA2030AV	AUDIO AMPLIFIER
IC2704	TDA2030AV	AUDIO AMPLIFIER
IC3401	TEA2114	VIDEO SWITCHING
FUSES		
		
F801	19181-3.15	FUSE
F8011	EYF52BC	FUSE HOLDER
F8012	EYF52BC	FUSE HOLDER
R2710	TSF19252	FS LINK
R2711	TSF19632	FS LINK
		
DIODES		
D251	MA2180TP	DIODE
D253	MA700TA5	DIODE
D254	MA700TA5	DIODE
D354	1SR124-4AT82	DIODE
D355	1SR124-4AT82	DIODE
D356	1SR124-4AT82	DIODE
D357	MA165TA5	DIODE
D358	MA165TA5	DIODE
D359	MA165TA5	DIODE
D360	MTZJT-7715A	DIODE
D361	MA165TA5	DIODE
D362	MA165TA5	DIODE
D363	MA165TA5	DIODE
D364	MA165TA5	DIODE
D453	MA165TA5	DIODE
D454	ERA15-02V3	DIODE

Cct Ref	Parts Number	Description
D456	MTZJT-775.6C	DIODE
D457	MA165TA5	DIODE
D501	MA165TA5	DIODE
D502	1SR124-4AT82	DIODE
D511	MA4047	DIODE
D551	ERD07-15L7	DIODE
D552	RU3LFA1	DIODE
D553	1SR124-4AT82	DIODE
D554	1SR124-4AT82	DIODE
D556	MA165TA5	DIODE
D557	EU02	DIODE
D558	1SR124-4AT82	DIODE
D601	DAN217T146	DIODE
D603	DAN217T146	DIODE
D605	DAN212KT146	DIODE
D606	MA165TA5	DIODE
D607	MA4051	DIODE
D609	1SR124-4AT82	DIODE
D615	STZ6.2NT146	DIODE
D616	STZ6.2NT146	DIODE
D701	MA165TA5	DIODE
D702	MTZJT-775.6C	DIODE
D704	MA29TA5	DIODE
D705	MTZJT-775.6B	DIODE
D801	RBV-608LF-B	DIODE
D803	1SR124-4AT82	DIODE
D804	1SR124-4AT82	DIODE
D805	TLP621GR-LF2	PHOTO COUPLER
D806	1SR124-4AT82	DIODE
D850	RU4BLF-L1	DIODE
D851	MTZJT776.2B	DIODE
D852	MA165TA5	DIODE
D853	MA2180BLFS	DIODE
D854	TVSRU2AMLF-A5	DIODE
D855	FML22SLF610	DIODE
D856	RU4AMLF-M1	DIODE
D857	MTZJT-775.1C	DIODE
D858	MA165TA5	DIODE
D859	MA165TA5	DIODE
D861	MA165TA5	DIODE
D862	MTZJT-7736A	DIODE
D863	MA165TA5	DIODE
D865	MA165TA5	DIODE
D866	MA165TA5	DIODE
D867	EK06-V0	DIODE
D868	1N4150T-77	DIODE
D869	1N4150T-77	DIODE
D870	MA165TA5	DIODE
D871	1N4150T-77	DIODE
D873	MTZJT-775.6C	DIODE
D874	1SR124-4AT82	DIODE
D875	BZX79A75A26A	DIODE
D901	MA165TA5	DIODE
D902	MA165TA5	DIODE
D904	MA165TA5	DIODE
D905	MA165TA5	DIODE
D906	RLS72TE-11	DIODE
D1061	LN81RPHL	DIODE
D1101	MA165TA5	DIODE
D1102	MA165TA5	DIODE
D2101	MA723TA5	DIODE
D2102	MA723TA5	DIODE
D2103	MA723TA5	DIODE
D2104	MA723TA5	DIODE
D2105	MTZJT-778.2C	DIODE
D2401	MA165TA5	DIODE

Cct Ref	Parts Number	Description
D2402	MA165TA5	DIODE
D2403	MTZJT-7712C	DIODE
D2404	MTZJT-7712C	DIODE
D2405	MTZJT-7712C	DIODE
D2406	MTZJT-7712C	DIODE
D2409	MA165TA5	DIODE
D2705	EG01CV0	DIODE
D2706	1SR124-4AT82	DIODE
D2707	TVSEH1LF-F7	DIODE
D2708	MA4075	DIODE
D2709	1SR124-4AT82	DIODE
D2710	1SR124-4AT82	DIODE
D2711	RU4AMLF-M1	DIODE
D2712	MA165TA5	DIODE
D2713	MA165TA5	DIODE
D2714	MA165TA5	DIODE
D2715	MA165TA5	DIODE
D2716	MA165TA5	DIODE
D2717	MA165TA5	DIODE
D2718	MTZJT-779.1C	DIODE
D2719	MA165TA5	DIODE
D2720	1SR124-4AT82	DIODE
D3201	MTZJT-778.2C	DIODE
D3202	MTZJT-778.2C	DIODE
TRANSISTORS		
Q101	BC847B	TRANSISTOR
Q102	BC847B	TRANSISTOR
Q104	BC847B	TRANSISTOR
Q105	BC847B	TRANSISTOR
Q251	2SD1328STX	TRANSISTOR
Q252	2SD1328STX	TRANSISTOR
Q253	BC847B	TRANSISTOR
Q254	BC847B	TRANSISTOR
Q301	BC847B	TRANSISTOR
Q302	FMY4T148	TRANSISTOR
Q303	BC847B	TRANSISTOR
Q304	FMY4T148	TRANSISTOR
Q305	BC847B	TRANSISTOR
Q306	FMY4T148	TRANSISTOR
Q351	2SA1767	TRANSISTOR
Q352	2SA1767	TRANSISTOR
Q353	2SA1767	TRANSISTOR
Q354	BC857B	TRANSISTOR
Q451	BC857B	TRANSISTOR
Q503	2SD2398-M2	TRANSISTOR
Q551	BU2508AXLB	TRANSISTOR
Q552	2SC1473-RN	TRANSISTOR
Q701	BC857B	TRANSISTOR
Q850	2SD1273PLB	TRANSISTOR
Q851	BC857B	TRANSISTOR
Q852	2SC1383-S	TRANSISTOR
Q853	BC847B	TRANSISTOR
Q854	BC847B	TRANSISTOR
Q855	BC847B	TRANSISTOR
Q856	BC847B	TRANSISTOR
Q857	2SA1018QTA	TRANSISTOR
Q905	BC847B	TRANSISTOR
Q906	BC847B	TRANSISTOR
Q907	BC857B	TRANSISTOR
Q908	2SA1535ARLB	TRANSISTOR
Q909	2SC3944ARLB	TRANSISTOR
Q950	BC847B	TRANSISTOR
Q951	FMY4T148	TRANSISTOR
Q1051	BC847B	TRANSISTOR
Q1062	BC847B	TRANSISTOR
Q1101	BC847B	TRANSISTOR

Cct Ref	Parts Number	Description
Q1104	BC847B	TRANSISTOR
Q1105	BC847B	TRANSISTOR
Q1106	BC847B	TRANSISTOR
Q1107	BC847B	TRANSISTOR
Q1108	BC847B	TRANSISTOR
Q2101	BC857B	TRANSISTOR
Q2102	BC857B	TRANSISTOR
Q2103	BC857B	TRANSISTOR
Q2302	BC857B	TRANSISTOR
Q2304	BC857B	TRANSISTOR
Q2401	BC857B	TRANSISTOR
Q2402	BC857B	TRANSISTOR
Q2403	BC857B	TRANSISTOR
Q2404	BC857B	TRANSISTOR
Q2405	BC847B	TRANSISTOR
Q2406	BC847B	TRANSISTOR
Q2407	BC847B	TRANSISTOR
Q2409	BC857B	TRANSISTOR
Q2410	BC857B	TRANSISTOR
Q2416	BC857B	TRANSISTOR
Q2417	BC847B	TRANSISTOR
Q2418	BC847B	TRANSISTOR
Q2419	BC847B	TRANSISTOR
Q2420	BC847B	TRANSISTOR
Q2421	BC847B	TRANSISTOR
Q2423	BC857B	TRANSISTOR
Q2425	BC857B	TRANSISTOR
Q2426	BC857B	TRANSISTOR
Q2427	BC847B	TRANSISTOR
Q2428	BC857B	TRANSISTOR
Q2429	BC857B	TRANSISTOR
Q2430	BC847B	TRANSISTOR
Q2431	BC847B	TRANSISTOR
Q2701	BC557B	TRANSISTOR
Q2702	2SA684R	TRANSISTOR
Q2703	BC847B	TRANSISTOR
Q2704	BC847B	TRANSISTOR
Q2705	BC847B	TRANSISTOR
Q2706	BC857B	TRANSISTOR
Q3001	BC847B	TRANSISTOR
Q3006	BC847B	TRANSISTOR
Q3007	BC847B	TRANSISTOR
Q3201	BC847B	TRANSISTOR
Q3202	BC847B	TRANSISTOR
Q3203	BC857B	TRANSISTOR
Q3204	BC857B	TRANSISTOR
Q3205	BC847B	TRANSISTOR
Q3206	BC847B	TRANSISTOR
Q3207	BC847B	TRANSISTOR
Q3208	BC847B	TRANSISTOR
Q3209	BC847B	TRANSISTOR
Q3401	BC847B	TRANSISTOR
Q3402	BC847B	TRANSISTOR
Q3601	BC847B	TRANSISTOR
TRANSFORMERS		
T501	ETH19Y173AY	TRANSFORMER
T551	ZTFM05002A	F.B.T.
T801	ETS42AE226AD	TRANSFORMER
T802	ETP35KAN619U	TRANSFORMER
T2701	ETS35AA3Y7AD	TRANSFORMER
COILS		
J164	TLT331K991R	COIL
L104	EXCELSA35T	COIL
L106	TLTACT100K	COIL
L107	TLTACT6R8K	COIL
L301	TLTACT4R7K	COIL

Cct Ref	Parts Number	Description
L302	TLTACT4R7K	COIL
L451	EXCELSA35T	COIL
L501	EXCELSA35T	COIL
L552	ELH5L6110	COIL
L553	ELC08D682E	COIL
L554	ELC18B102L	COIL
L601	TLTACT4R7K	COIL
L602	TLTACT4R7K	COIL
L603	TLTACT4R7K	COIL
L604	TLTACT4R7K	COIL
L606	TLTACT4R7K	COIL
L607	ELJFC2R2KF	COIL
L701	ELC10D822E	COIL
L850	EXCELSA35T	COIL
L851	EXCELSA35T	COIL
L852	ELEIN470KA	COIL
L853	EXCELSA35T	COIL
L854	EXCELSA35T	COIL
L855	EXCELSA35T	COIL
L856	EXCELSA39V	COIL
L901	EXCELSA24T	COIL
L902	EXCELSA24T	COIL
L1061	TLT331K991R	COIL
L1103	TLTACT100K	COIL
L1104	EXCELSA35T	COIL
L1105	ELJFC2R2KF	COIL
L2101	TLTACT100K	COIL
L2103	EXCELSA35T	COIL
L2104	TLTACT4R7K	COIL
L2401	TLTACT3R3K	COIL
L2402	TLTACT3R3K	COIL
L2403	TLTACT101K	PEAKING COIL
L2703	EXCELSA35T	COIL
L2704	EXCELSA35T	COIL
L2705	EXCELSA35T	COIL
L2706	EXCELSA35T	COIL
L2707	EXCELSA35T	COIL
L2708	EXCELSA35T	COIL
L2709	EXCELSA35T	COIL
L2710	5770206400	COIL
L2711	5770206400	COIL
L2714	5770206400	COIL
L2715	5770206400	COIL
L3001	ELEMV1R5MA	COIL
L3002	ELEMV1R5MA	COIL
L3003	ELEMV1R5MA	COIL
L3004	ELEMV1R5MA	COIL
L3005	ELEBR2R2KA	COIL
L3006	ELEBR2R2KA	COIL
L3007	TLTACT2R2K	COIL
L3201	ELEBR6R8KA	COIL
L3202	ELEBR6R8KA	COIL
L3203	TLT390K991R	COIL
L3401	ELESN2R2KA	COIL
L3402	ELESN2R2KA	COIL
FILTERS		
L802	ELF18N012A	LINE FILTER
L804	ELF18N012A	LINE FILTER
CRYSTALS		
X601	4730007267	CRYSTAL
X1101	TSSA121	CRYSTAL
X2101	4730007158	CRYSTAL
X2401	4730007158	CRYSTAL
RESISTORS		
ERC12GK825	SOLID	0.5W 10% 8M2

Cct Ref	Parts Number	Description			
C2734	ECUV1H101JCX	S.M. CAP	50V	100pF	
C2735	ECA1HM330B	ELECT	50V	33μF	
C2736	ECJ2VF1H103Z	ELECT	350V	10nF	
C2737	ECA1VM102GB	ELECT	35V	1nF	
C2738	ECUV1H222KBX	S.M. CAP	50V	2.2nF	
C2739	ECA1VM102GB	ELECT	35V	1nF	
C2740	ECJ2VF1H103Z	ELECT	350V	10nF	
C2742	ECQM1H474J	FILM	50V	470nF	
C2743	ECA1HM010GB	ELECT	50V	1μF	
C2744	ECUV1H101JCX	S.M. CAP	50V	100pF	
C2745	ECA1HM330B	ELECT	50V	33μF	
C2746	ECJ2VF1H103Z	ELECT	350V	10nF	
C2747	ECA1VM221B	ELECT	35V	220μF	
C2748	ECUV1H222KBX	S.M. CAP	50V	2.2nF	
C2749	ECA1VM101GB	ELECT	35V	100μF	
C2750	ECJ2VF1H103Z	ELECT	350V	10nF	
C2751	ECJ2VF1H683Z	ELECT	350V	68nF	
C2752	ECQM1H474J	FILM	50V	470nF	
C2753	ECUV1H332KBX	S.M. CAP	50V	3.3nF	
C2755	ECUV1H332KBX	S.M. CAP	50V	3.3nF	
C2756	ECA1CM220GB	ELECT	16V	22μF	
C3001	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3002	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3003	ECA1CM470GB	ELECT	16V	47μF	
C3005	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3006	ECJ3VB1C474K	ELECT	3.5KV	470nF	
C3007	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3008	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3009	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3010	ECA1CM470GB	ELECT	16V	47μF	
C3012	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3013	ECJ3VB1C474K	ELECT	3.5KV	470nF	
C3014	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3015	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3016	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3017	ECA1CM470GB	ELECT	16V	47μF	
C3019	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3020	ECJ3VB1C474K	ELECT	3.5KV	470nF	
C3021	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3022	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3023	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3024	ECA1CM470GB	ELECT	16V	47μF	
C3026	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3027	ECJ3VB1C474K	ELECT	3.5KV	470nF	
C3028	ECUV1H222JCX	S.M. CAP	50V	2.2nF	
C3029	ECA1HM101GB	ELECT	50V	100μF	
C3032	ECUV1H271JCX	S.M. CAP	50V	270pF	
C3033	ECUV1H271JCX	S.M. CAP	50V	270pF	
C3034	ECUV1H271JCX	S.M. CAP	50V	270pF	
C3035	ECUV1H271JCX	S.M. CAP	50V	270pF	
C3101	ECUV1H104KBX	S.M. CAP	50V	100nF	
C3102	ECUV1E104KBX	S.M. CAP	25V	100nF	
C3111	ECUV1H391JCX	S.M. CAP	50V	390pF	
C3112	ECUV1H271JCX	S.M. CAP	50V	270pF	
C3201	ECUV1H103KBX	S.M. CAP	50V	10nF	
C3202	ECUV1H103KBX	S.M. CAP	50V	10nF	
C3203	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3204	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3205	ECA1HM470GB	ELECT	50V	47μF	
C3206	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3207	ECUV1H561JCX	S.M. CAP	50V	560pF	
C3208	ECA1HM470GB	ELECT	50V	47μF	
C3209	ECUV1H103KBX	S.M. CAP	50V	10nF	
C3210	ECJ2VB1C104K	ELECT	350V	100nF	
C3211	ECUV1H103KBX	S.M. CAP	50V	10nF	
C3212	ECUV1H103KBX	S.M. CAP	50V	10nF	

Cct Ref	Parts Number	Description			
C3213	ECUV1H103KBX	S.M. CAP	50V	10nF	
C3214	ECJ2VB1C104K	ELECT	350V	100nF	
C3215	ECUV1H103KBX	S.M. CAP	50V	10nF	
C3216	ECA1CM330GB	ELECT	16V	33pF	
C3217	ECJ2VB1C104K	ELECT	350V	100nF	
C3221	ECA1HM47	ELECT	50V	4R7μF	
C3401	ECQM1H224J	FILM	50V	220nF	
C3402	ECUV1H101JCX	S.M. CAP	50V	100pF	
C3403	ECA1HM101GB	ELECT	50V	100μF	
C3404	ECQM1H224J	FILM	50V	220nF	
C3405	ECUV1H180JCX	S.M. CAP	50V	18pF	
C3406	ECUV1H271JCX	S.M. CAP	50V	270pF	
C3407	ECUV1H271JCX	S.M. CAP	50V	270pF	
C3408	ECA1HM101GB	ELECT	50V	100μF	
C3601	ECA1HM101GB	ELECT	50V	100μF	
JSE28	ECUV1H104KBX	S.M. CAP	50V	100nF	
TERMINALS AND LINKS					
JK2401	LPR1250-1150	RCA JACK			
JK3201	TJB16656	A.V. TERMINAL			
JK2702	TJB8E013	6 PIN PUSH TERMINAL			
SWITCHES					
S802	ESB92S11B	SWITCH			
S1251	EVQ23405R	SWITCH			
S1252	EVQ23405R	SWITCH			
S1253	EVQ23405R	SWITCH			
S1254	EVQ23405R	SWITCH			
S1255	EVQ23405R	SWITCH			

SCHEMATIC DIAGRAMS FOR MODEL

TX-W28R4DP

(EURO-4 CHASSIS)

IMPORTANT SAFETY NOTICE

Components identified by  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

NOTE

1. RESISTOR

All resistors are carbon $\frac{1}{4}$ W resistor, unless marked otherwise.
Unit of resistance is OHM (Ω) ($k=1,000$, $M=1,000,000$)


2. CAPACITORS

All capacitors are ceramic 50V unless marked otherwise.
Unit of capacitance is μF unless otherwise stated.

3. COIL

Unit of inductance is μH , unless otherwise stated.

4. TEST POINT

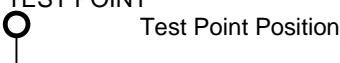

Test Point Position

5. EARTH SYMBOL



Chassis Earth (Cold)



Line Earth (Hot)

6. VOLTAGE MEASUREMENT

Voltage is measured by a DC voltmeter.

Measurement conditions are as follows:

Power source AC 220V-240V, 50Hz
Receiving Signal Colour Bar signal (RF)
All customer controls Maximum position

7.



Indicates the Video signal path



Indicates the Audio signal path

These schematic diagrams are the latest at time of printing and are subject to change without notice.


REMARKS


- a. Do not touch the hot part, or the hot and cold parts at the same time, as you are liable to a shock hazard.
- b. Do not short circuit the hot and cold circuits as electrical components may be damaged.
- c. Do not connect an instrument, such as an oscilloscope, to the hot and cold circuits simultaneously as this may cause fuse failure. Connect the earth of the instruments to the earth connection of the circuit being measured.
- d. Make sure to disconnect the power plug before removing the chassis.


NOTE


1. The Power Supply Circuit contains a circuit area, which uses a separate power supply to isolate the earth connection. The circuit is defined by HOT and COLD indications in the schematic diagram. All circuits, except the Power Circuit, are COLD.

Y BOARD △
TNP8EY012

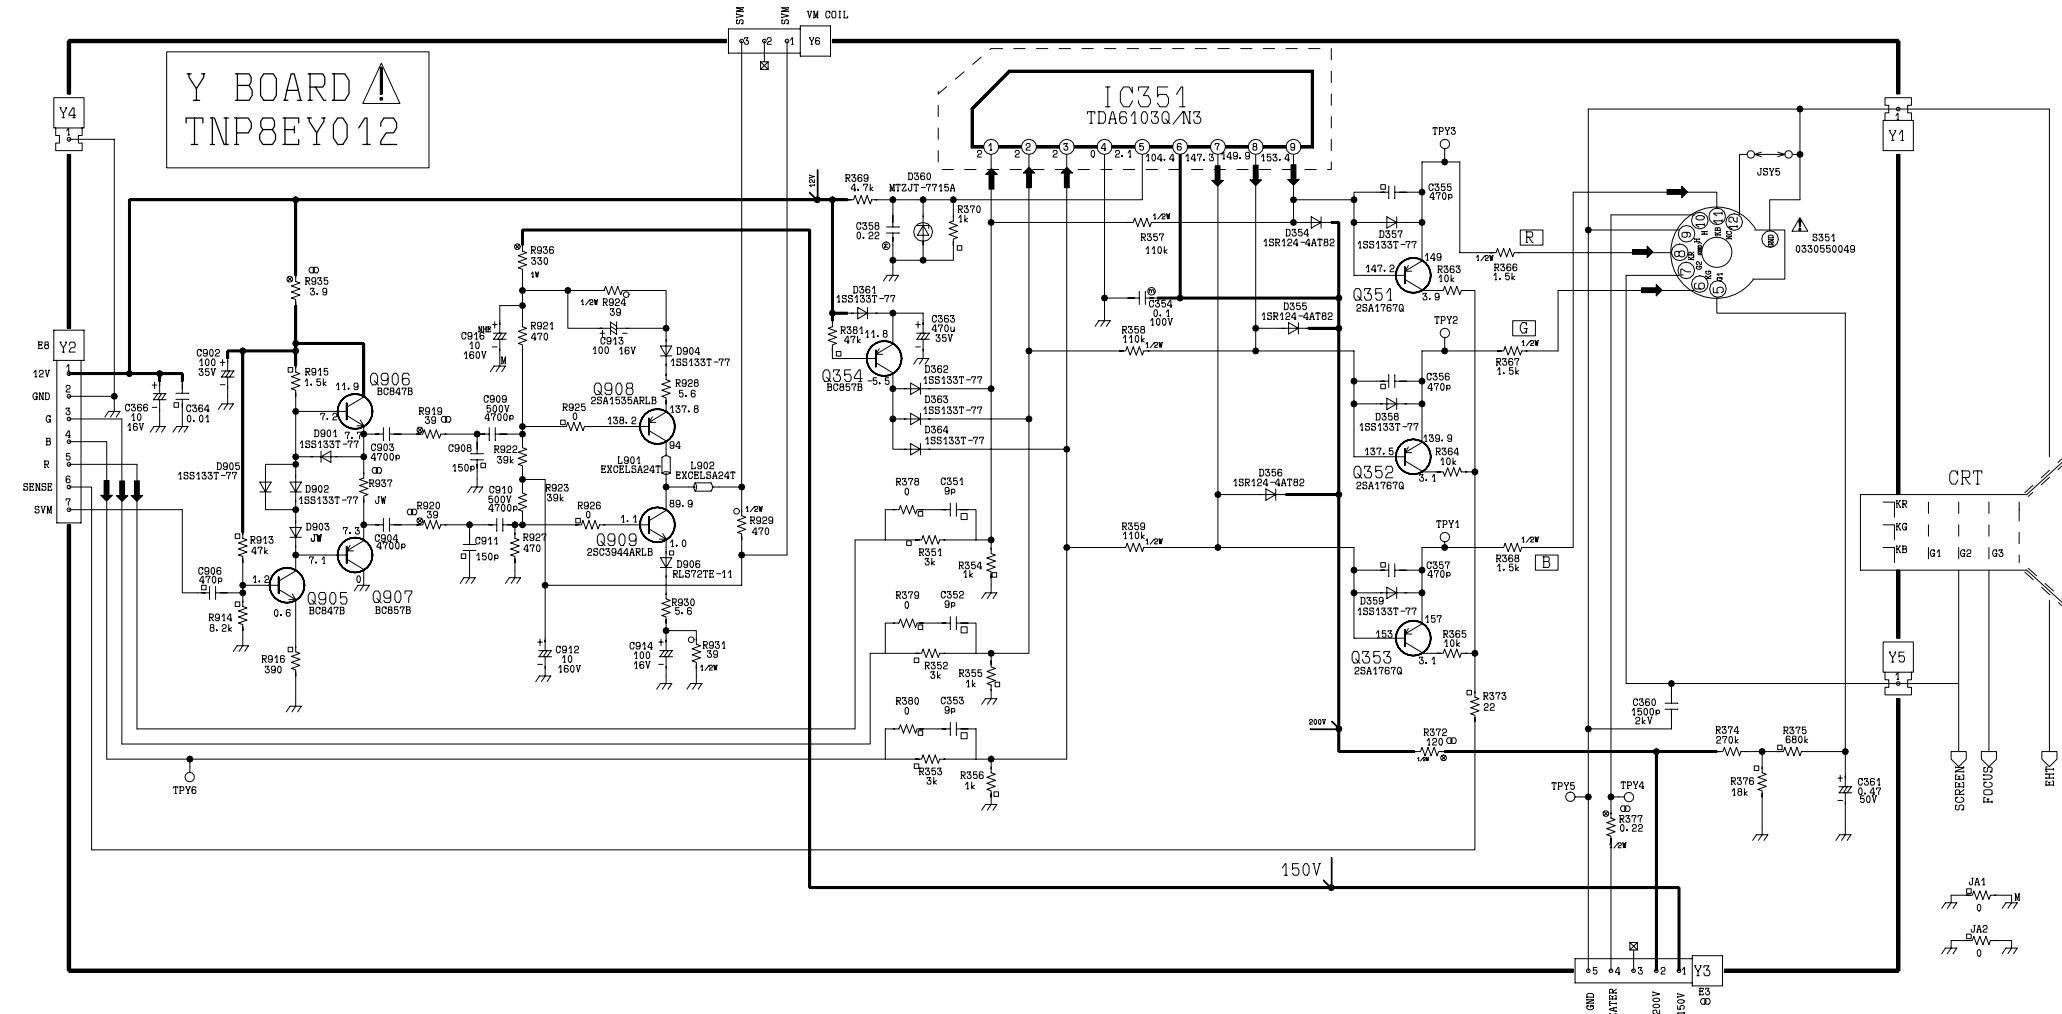

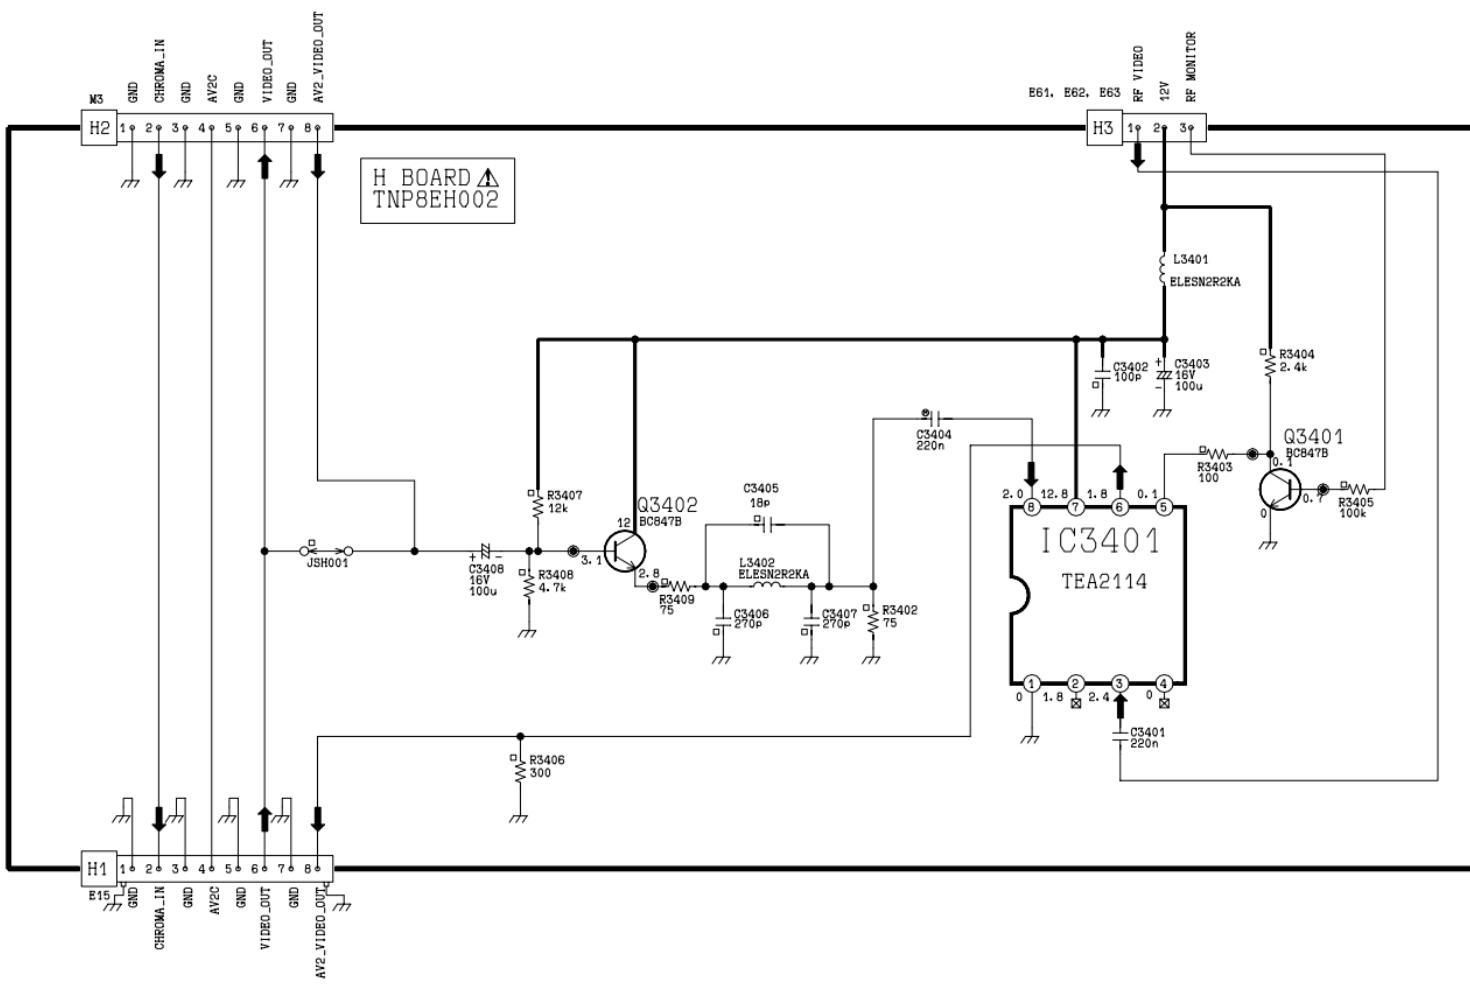

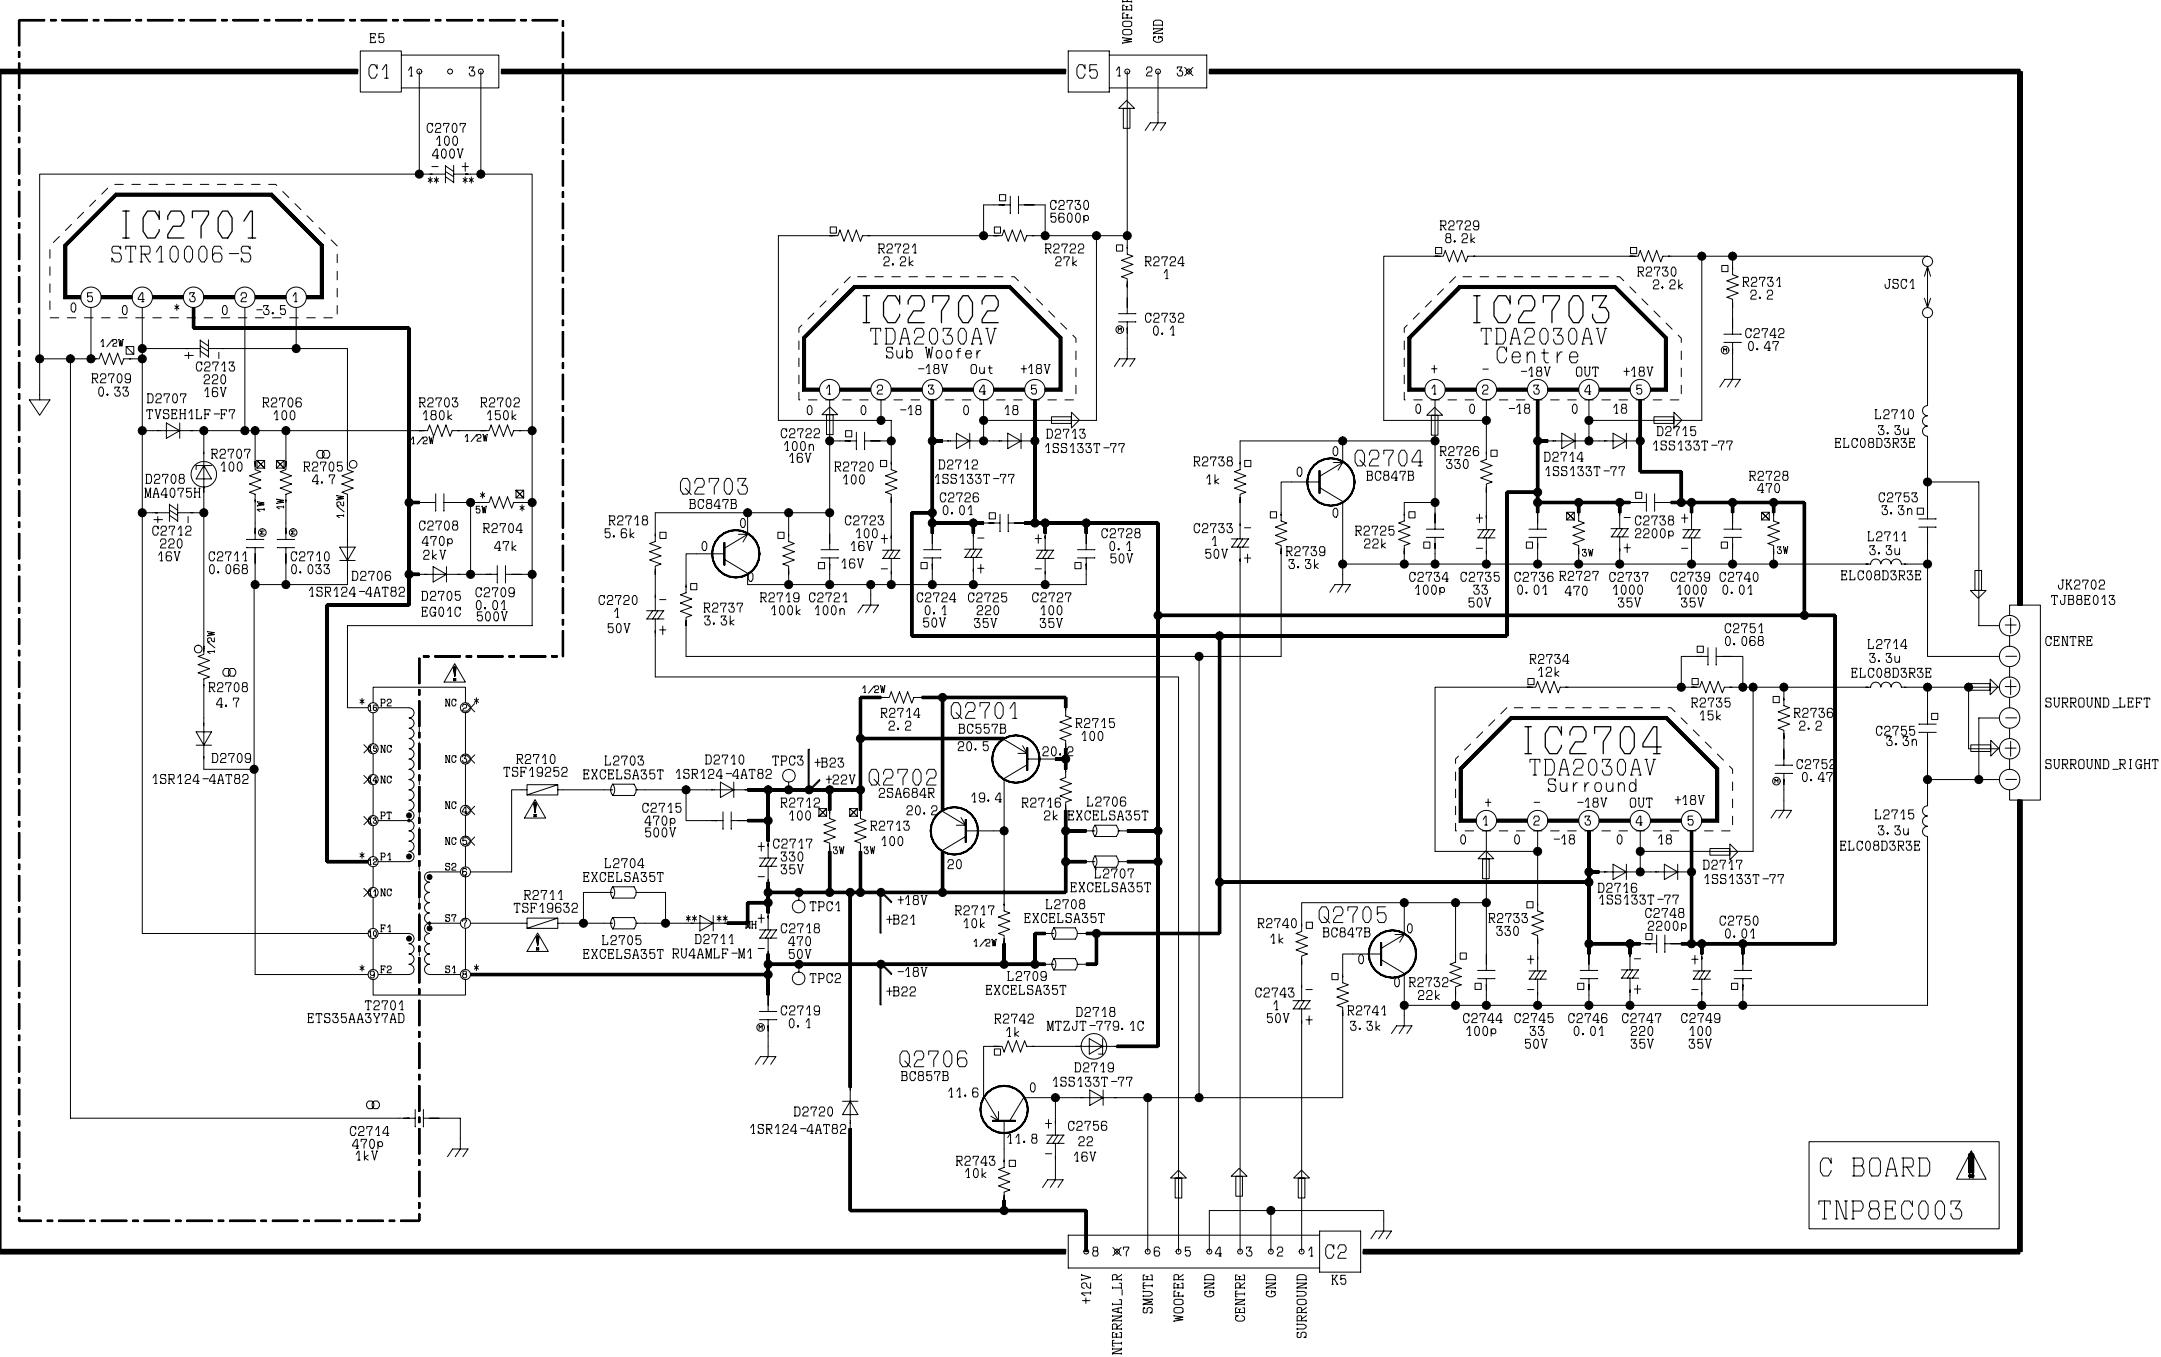

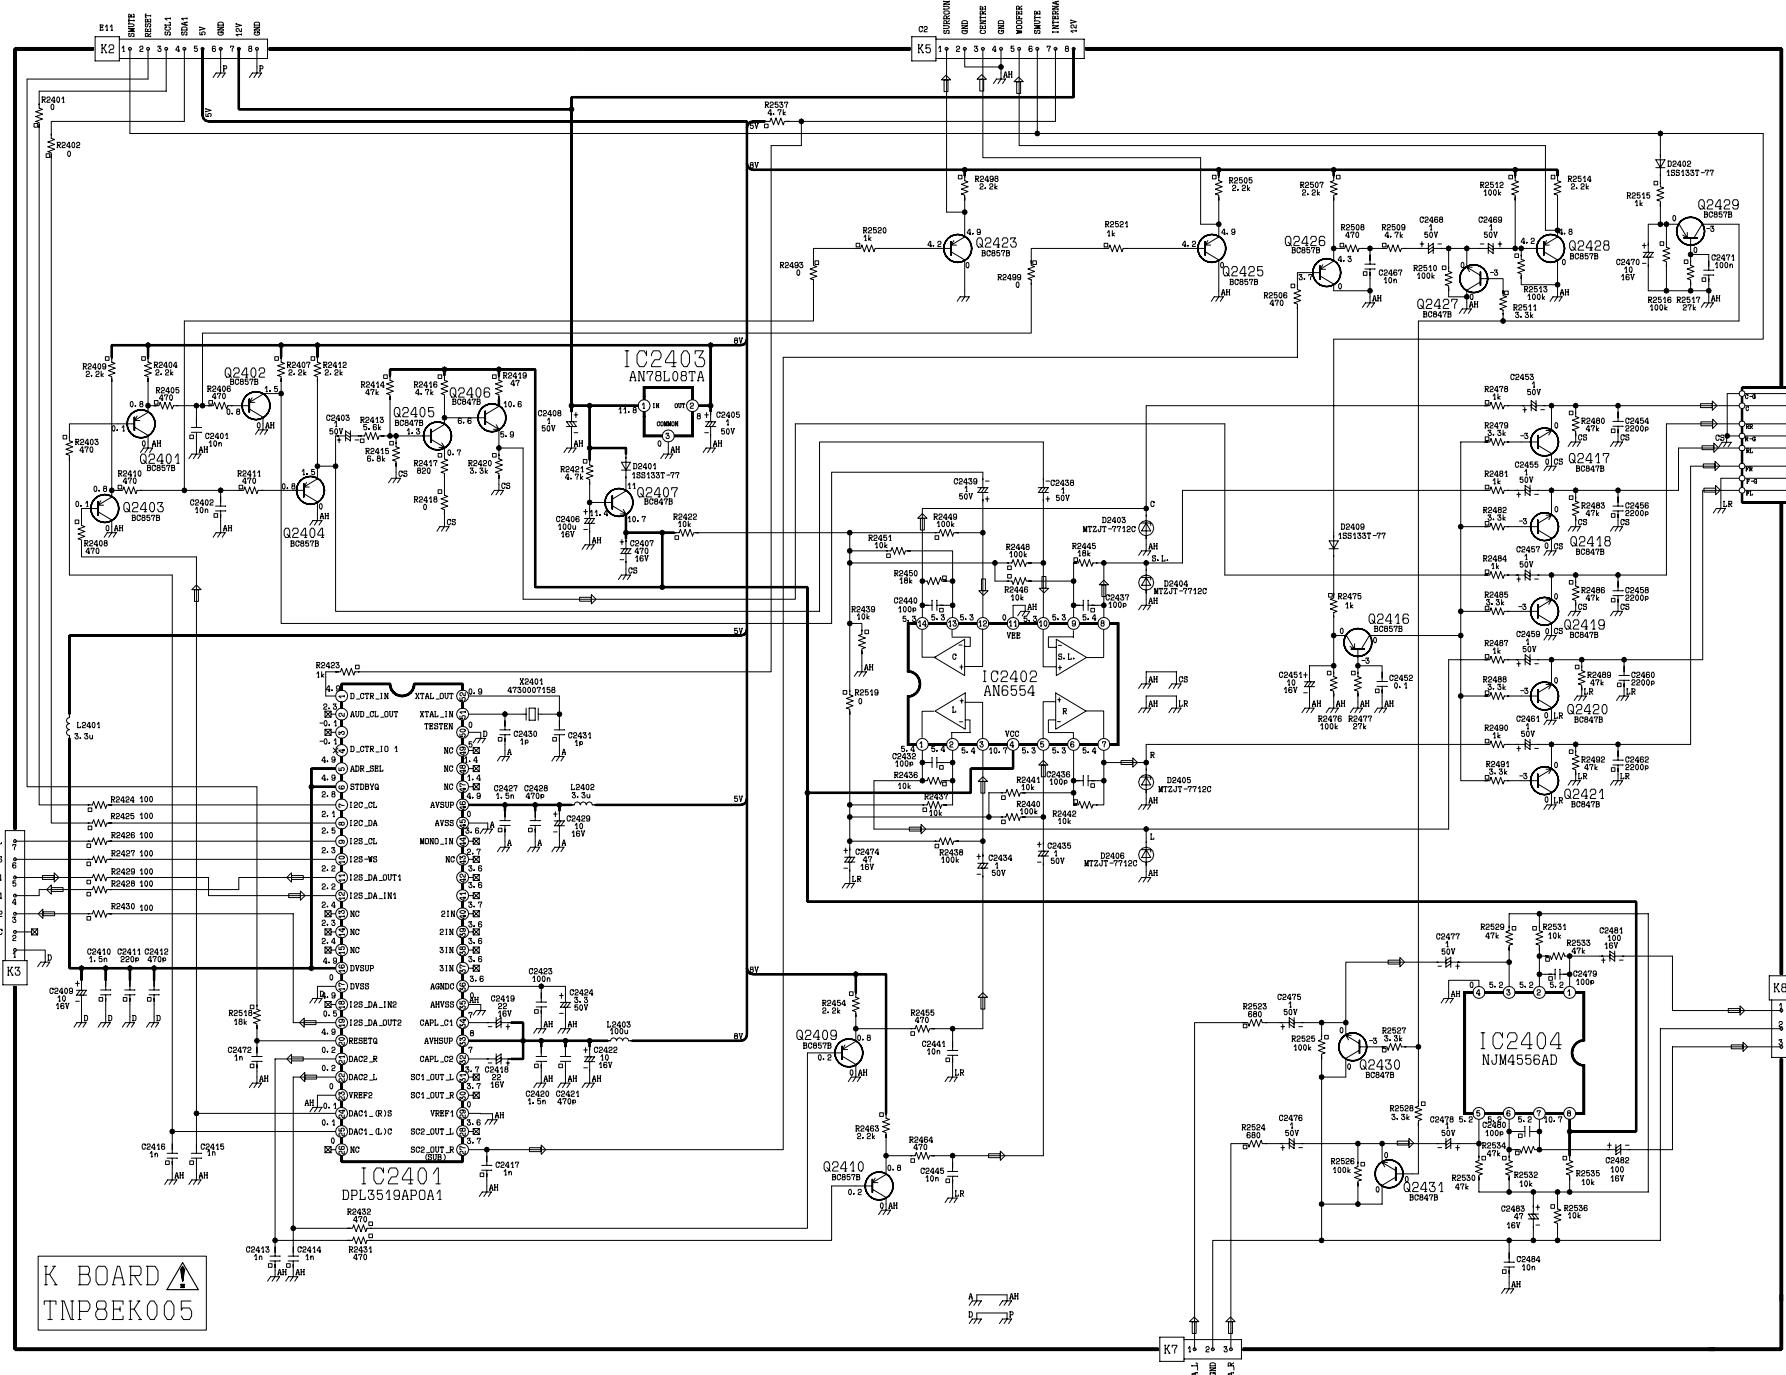


E BOARD
TNPBEE009


DOLBY DOLBY


CRT DRIVE

SERVICE/TEST

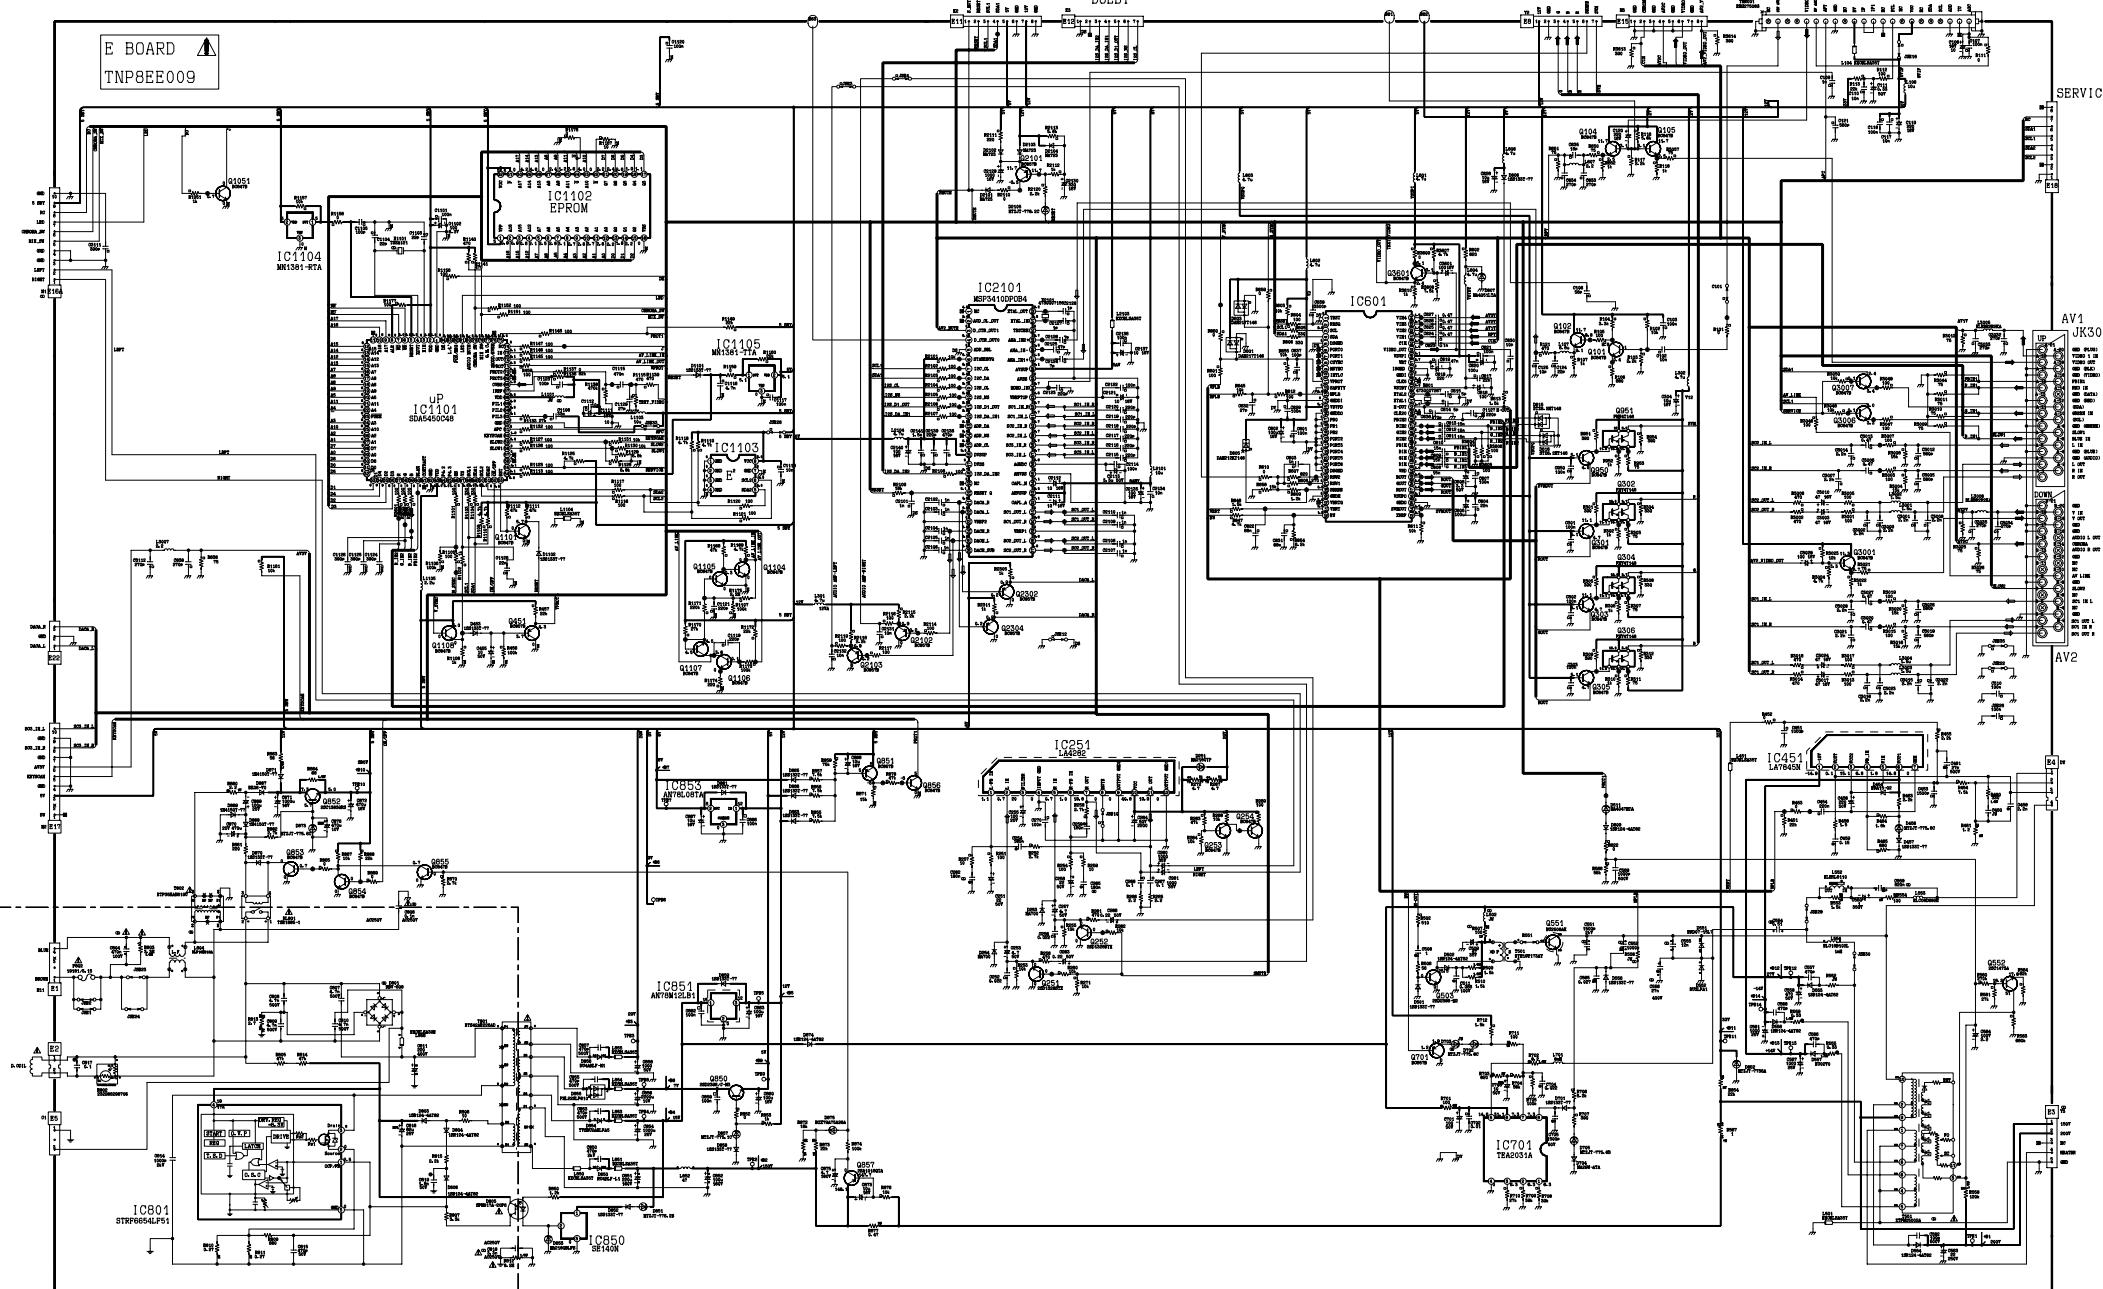

P BOARD 
TNP8EP015

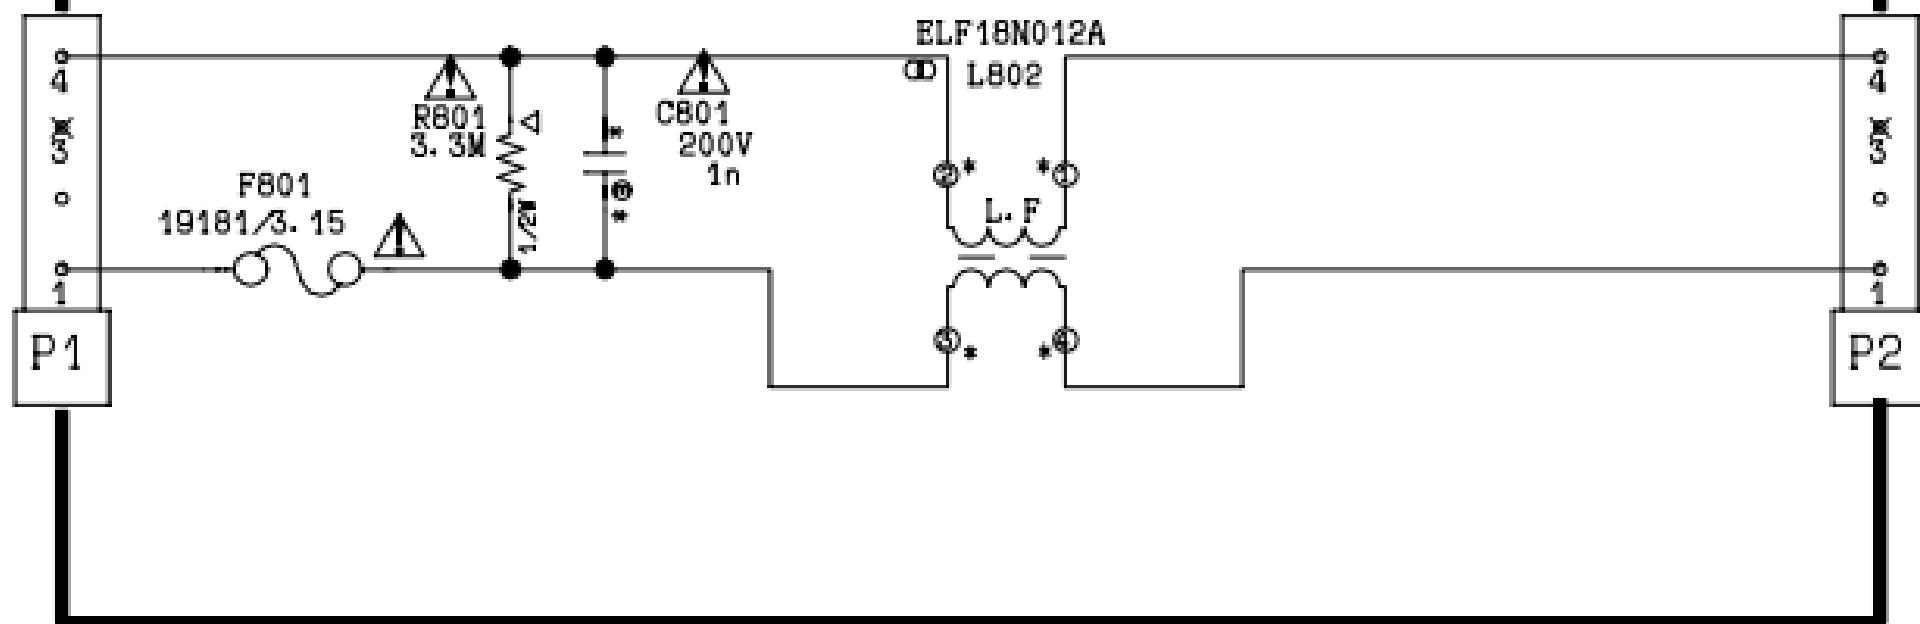

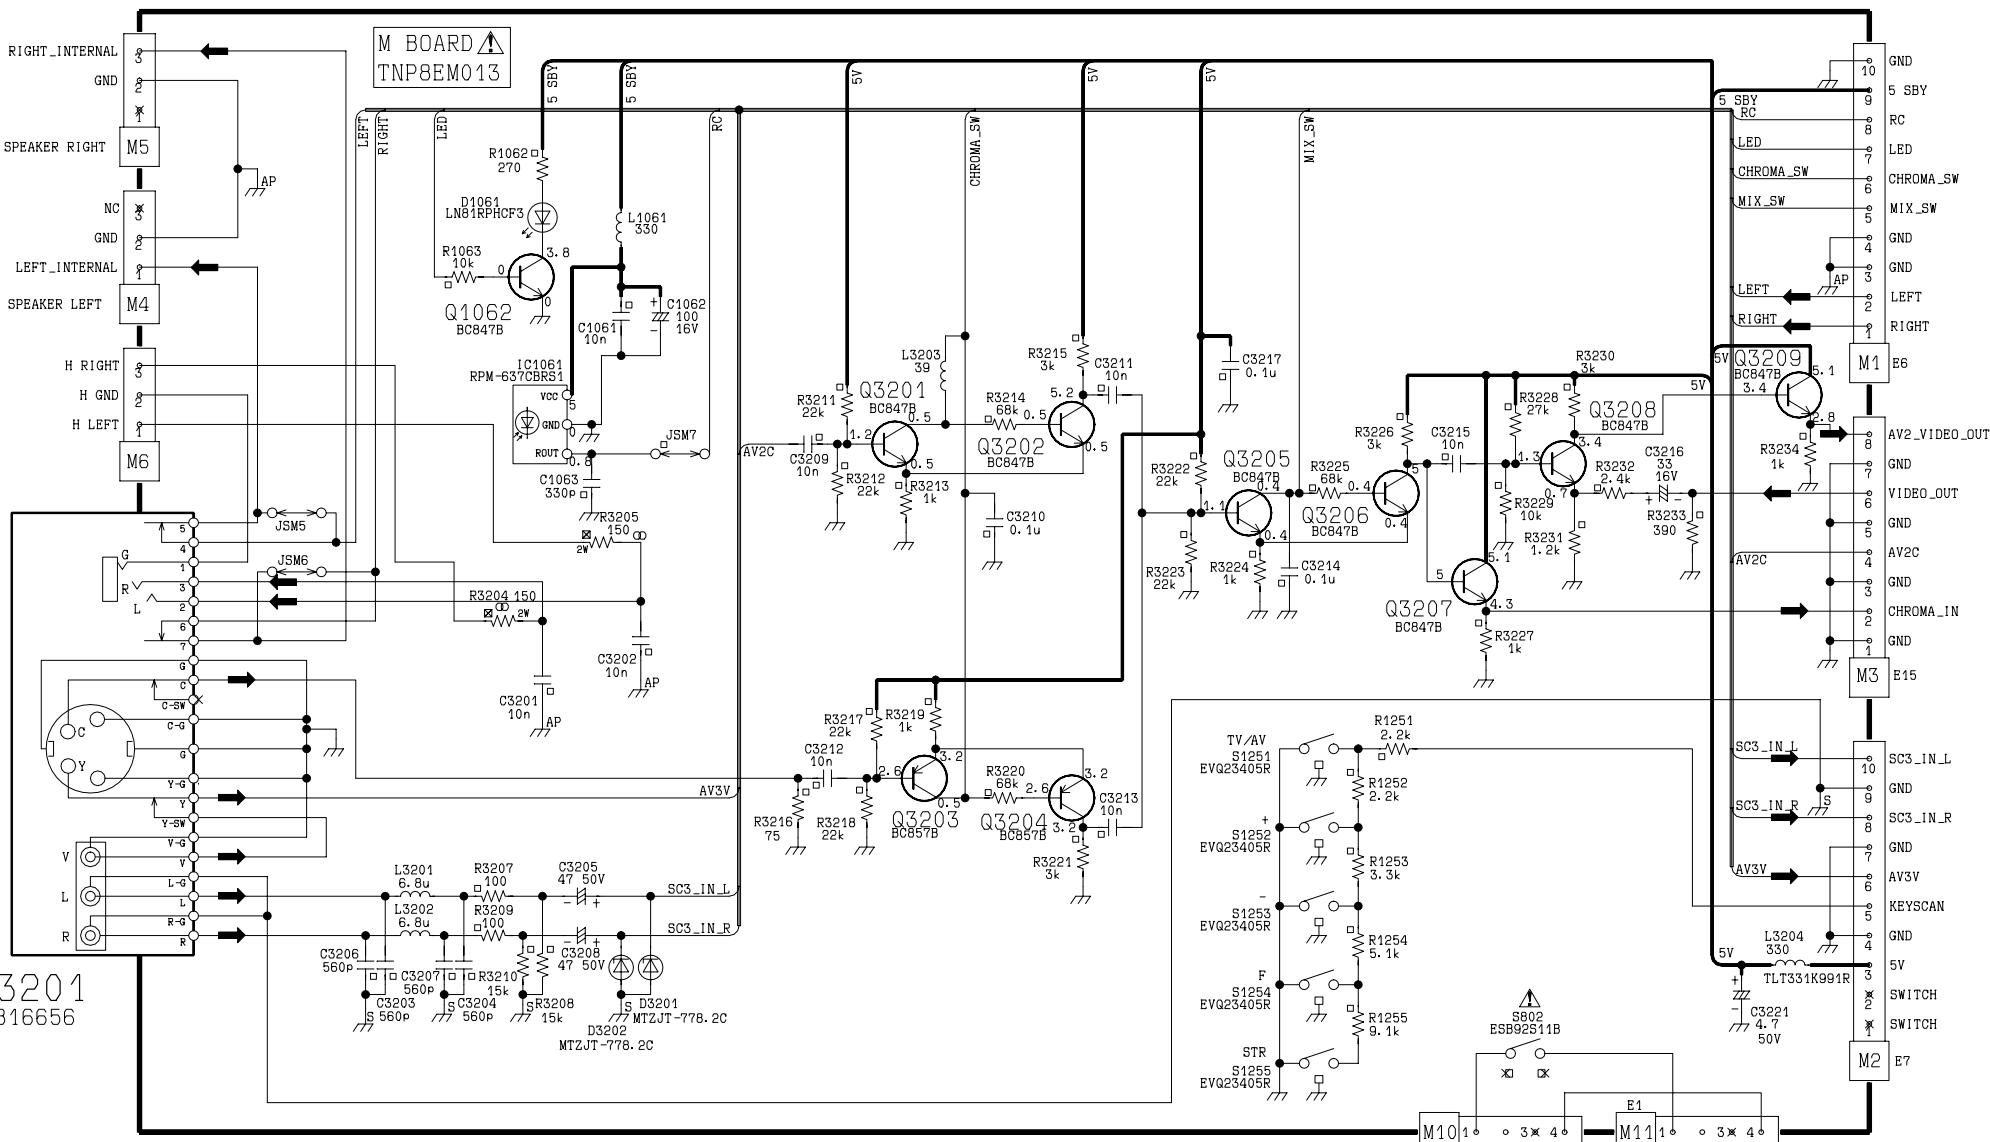


JK3201
TJB16656

CONDUCTOR VIEWS


E - BOARD TNP8EE009

TRAN'S	DIODES	
Q3601 L8	D3103 B7	D557 M4
Q3007 M9	D3101 B7	D556 K1
Q3001 N8	D3102 B7	D555 N3
Q3006 N10	D2161 G9	D554 M4
Q2304 I7	D2105 G10	D553 K4
Q2303 M6	D2104 F9	D552 J2
Q2301 I7	D2103 G10	D551 K3
Q2103 I8	D2102 G9	D511 M5
Q2102 H8	D1103 F8	D502 I2
Q2101 G10	D1102 F7	D501 I2
Q1108 F9	D1101 G7	D457 L5
Q1107 C7	D1051 A9	D456 L5
Q1106 C7	D875 J5	D454 L5
Q1105 C7	D874 J4	D453 F9
Q1104 C7	D873 B5	D254 C5
Q1101 F7	D871 A5	D253 C5
Q1052 A9	D870 871	D252 B5
Q1051 C8	D869 B4	D251 B4
Q951 J9	D868 B4	IC'S
Q950 J9	D867 A3	IC2101 H8
Q857 J4	D866 I9	IC1105 F7
Q856 F9	D865 I9	IC1104 C9
Q855 J5	D864 I10	IC1103 F8
Q854 B4	D863 G9	IC1102 D10
Q853 B4	D862 N10	IC1101 D8
Q852 B5	D861 J9	IC1051 A10
Q850 F5	D860 I10	IC852 I10
Q701 F5	D859 H5	IC851 G5
Q552 N3	D858 E5	IC850 H4
Q551 K1	D857 E5	IC801 G2
Q503 I2	D856 F4	IC701 K5
Q451 F8	D854 G4	IC601 L7
Q394 K9	D853 H3	IC451 L5
Q305 K9	D852 I4	IC251 D6
Q303 K9	D851 I4	TP'S
Q302 J9	D850 H4	TPE14 M5
Q301 K9	D806 G2	TPE13 M4
Q253 C4	D805 H2	TPE12 K4
Q252 C4	D804 H1	TPE11 N5
Q252 C4	D803 H1	TPE10 B5
Q251 D4	D802 G2	TPE9 E5
Q105 M8	D801 E1	TPE8 F5
Q104 M9	D705 J5	TPE7 I9
Q103 F10	D704 K5	TPE6 J10
Q102 G10	D703 K5	TPE5 G5
Q101 H10	D702 K5	TPE4 G5
	D701 K5	TPE3 E5
	D609 M5	TPE2 I5
	D607 L9	TPE1 M4

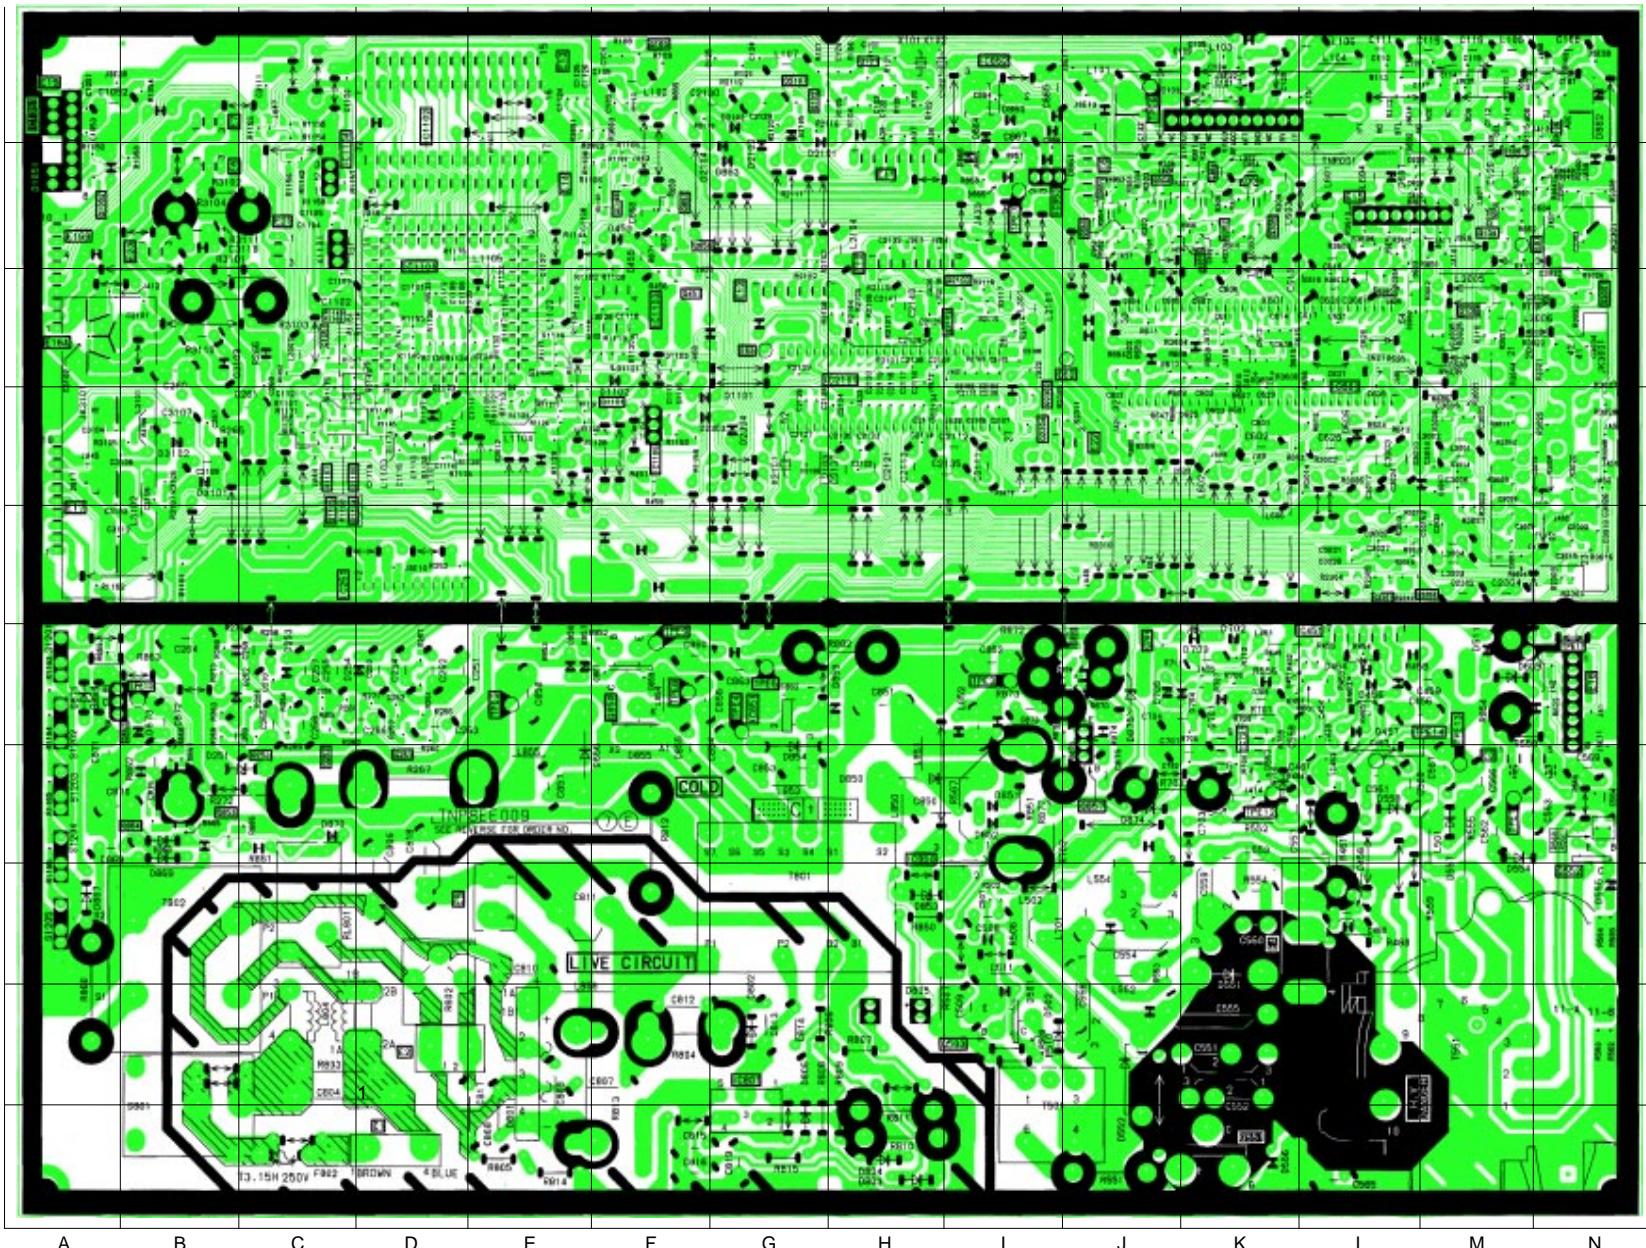


Y - BOARD TNP8EY012

TRANSISTORS	
Q909	E1
Q908	C2
Q907	F4
Q906	G3
Q905	F5
Q354	A7
Q353	G6
Q352	F6
Q351	F6
DIODES	
D906	F1
D905	G4
D904	D3
D902	G4
D901	G3
D364	C9
D363	C8
D362	B9
D361	B7
D360	D8
D359	G6
D358	E7
D357	F7
D356	G7
D355	F7
D354	G7
TEST POINTS	
TPY6	B8
TPY5	D5
TPY4	E5
TPY3	F6
TPY2	E7
TPY1	G6
IC'S	
IC351	E8

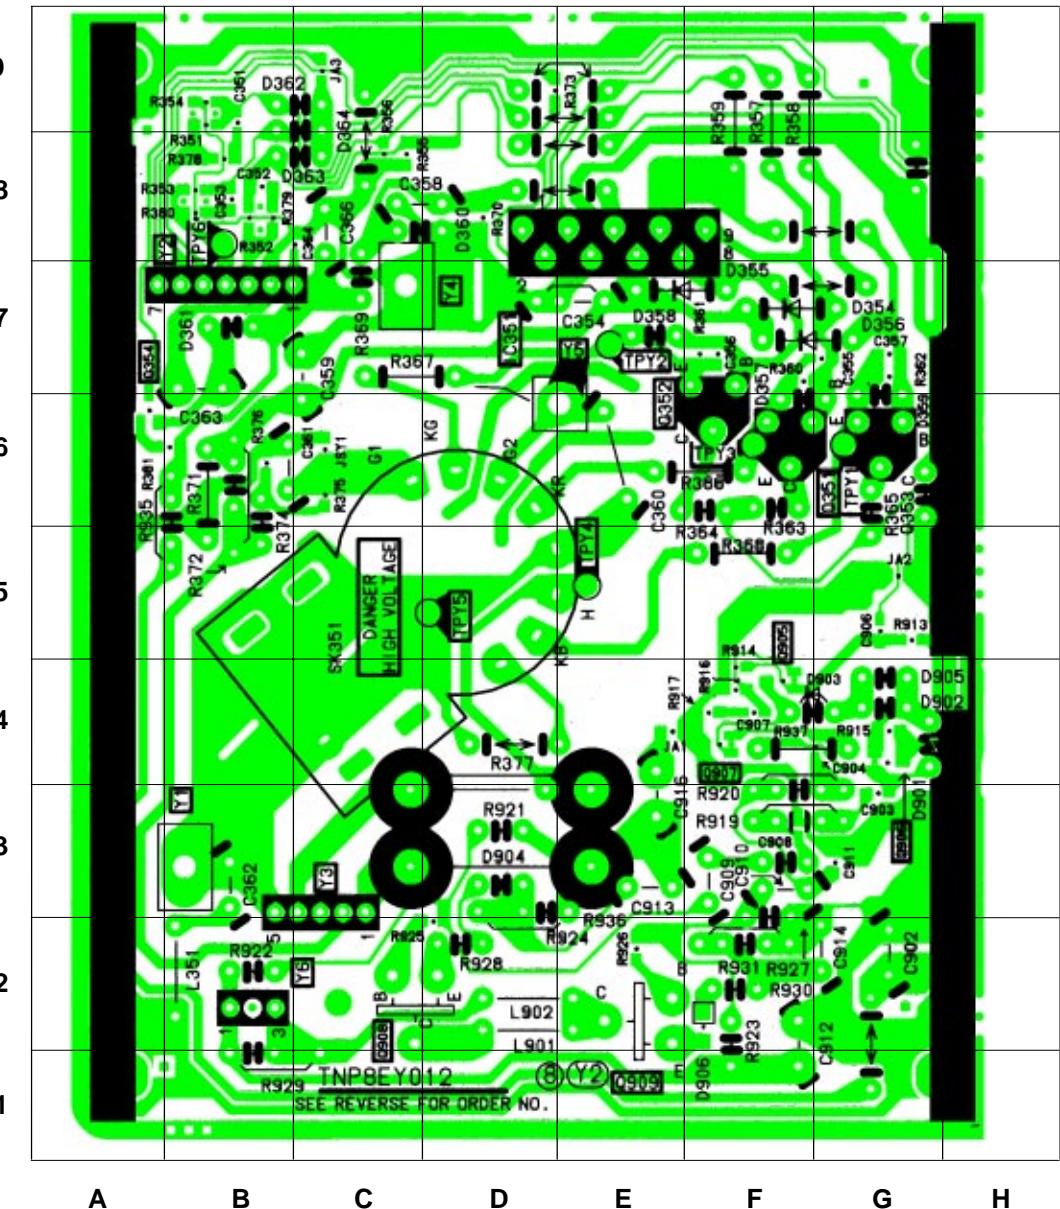


K - BOARD TNP8EK005

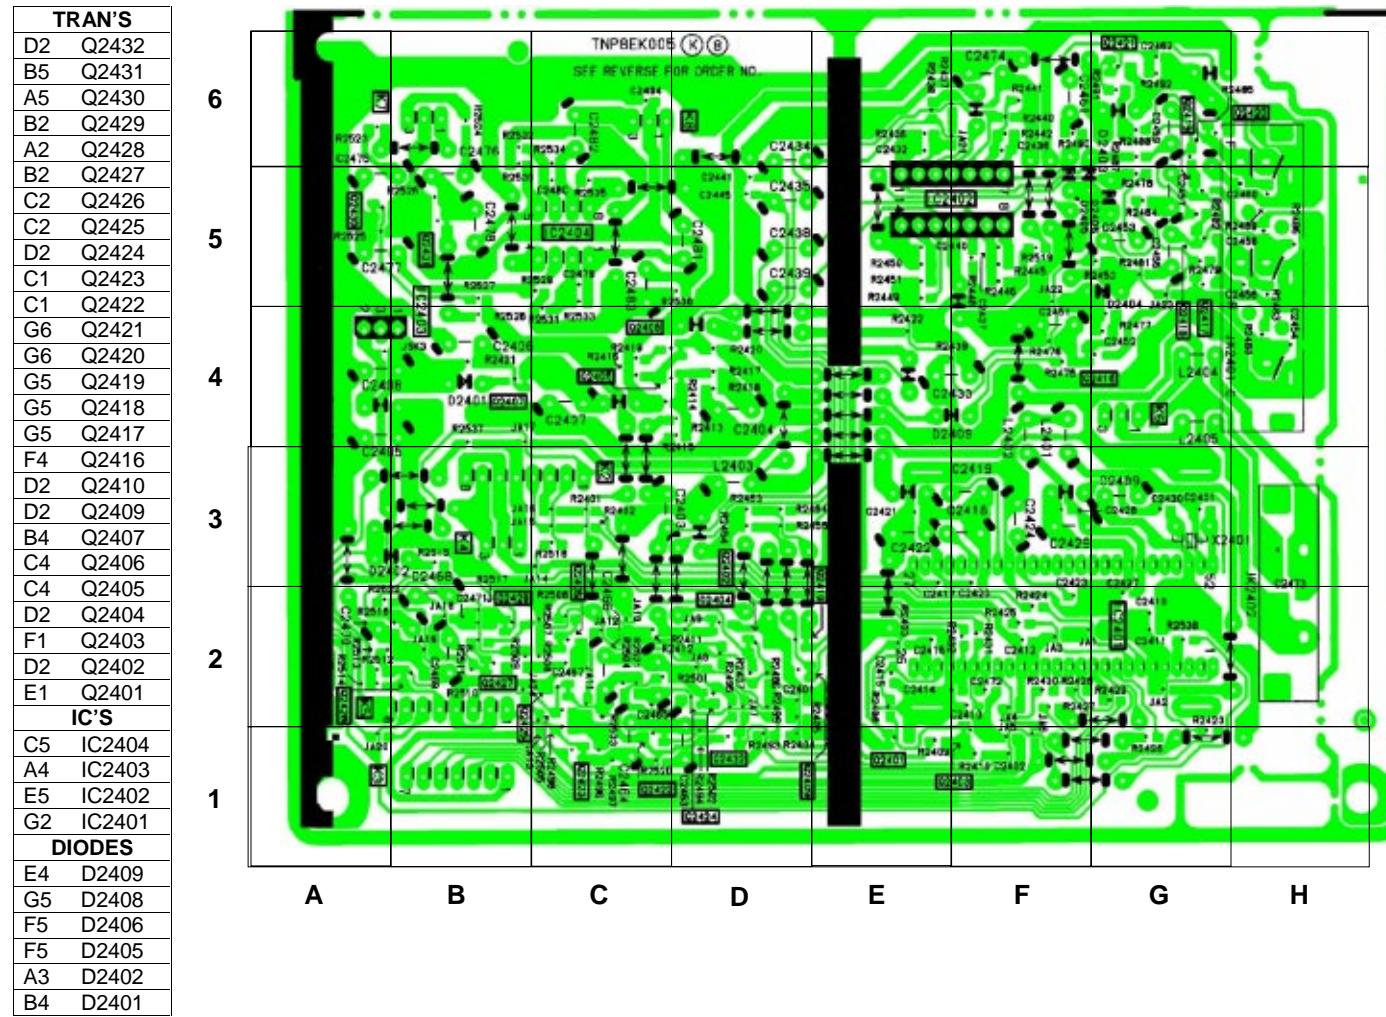

C - BOARD TNP8EC003

TRAN'S
Q2706 G10
Q2705 H6
Q2704 G7
Q2703 G9
Q2702 F9
Q2701 F9
DIODES
D2720 E6
D2719 H10
D2718 G10
D2717 F3
D2716 F2
D2715 F6
D2714 F5
D2713 F8
D2712 F8
D2711 E7
D2710 C8
D2709 C2
D2708 C3
D2707 D6
D2706 C3
D2705 B5
IC'S
IC2704 F3
IC2703 F6
IC2702 G8
IC2701 B4
TP'S
TPC1 E7
TPC2 D7
TPC3 E9

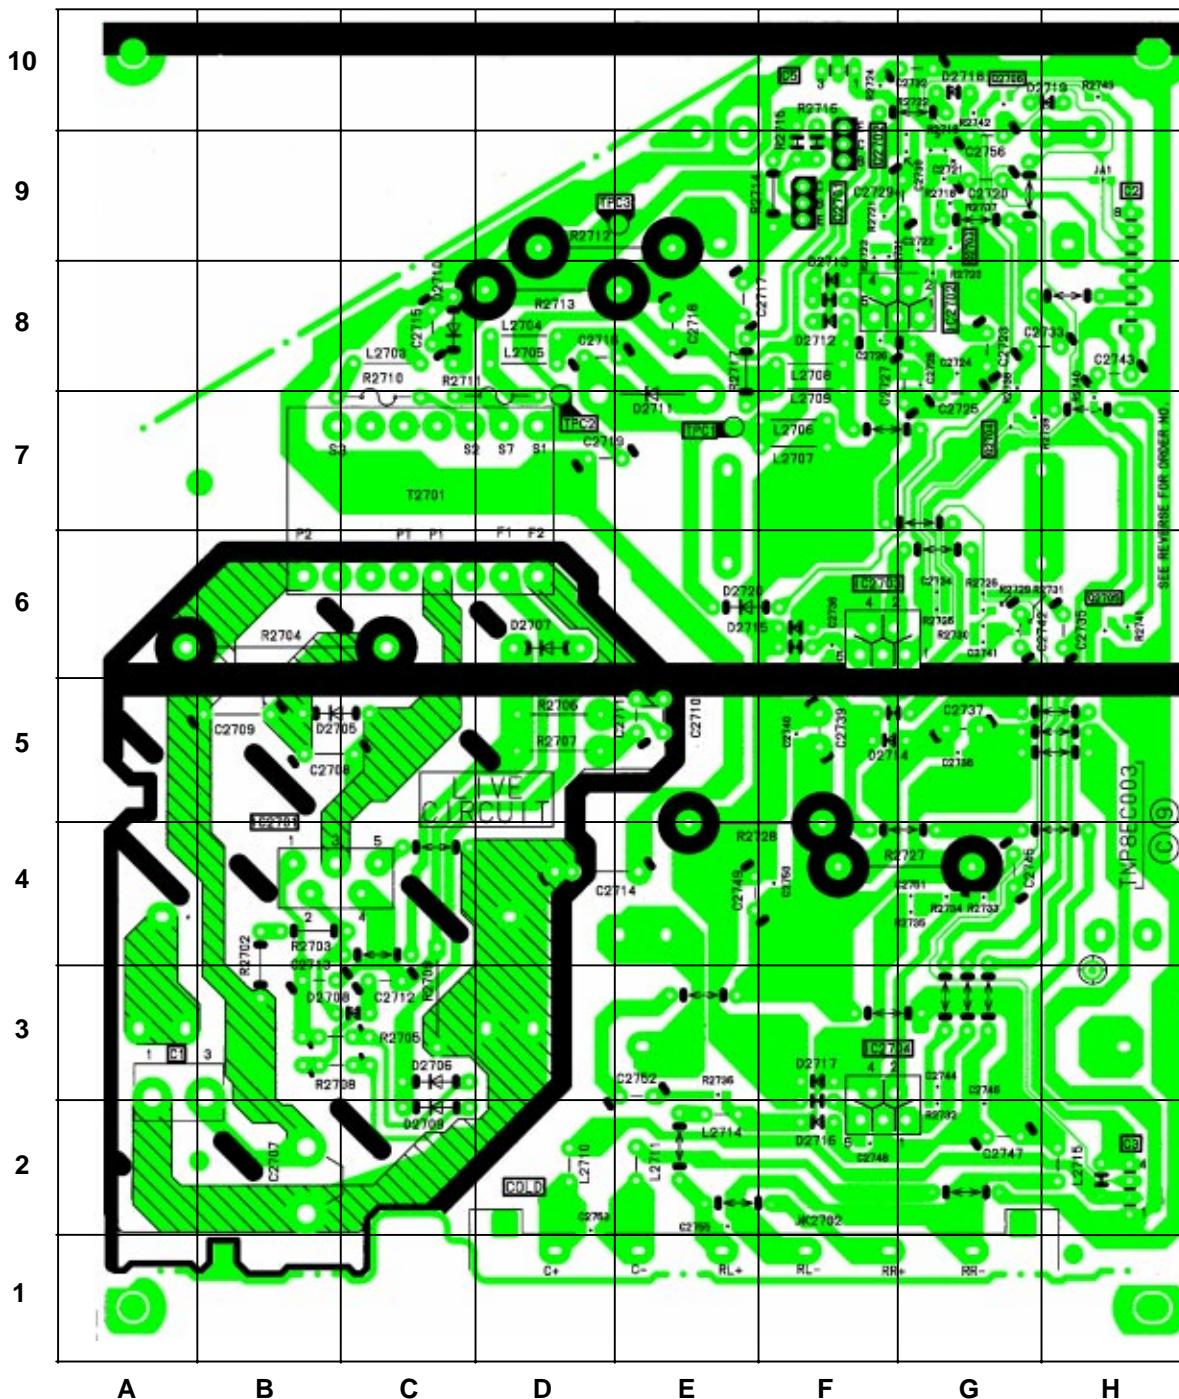

M - BOARD TNP8EM013

TRANSISTORS	
Q1061	C2
Q1062	C2
Q3201	C8
Q3202	B9
Q3203	B8
Q3204	B9
Q3205	B9
Q3206	A9
Q3207	B10
Q3208	B9
Q3209	B10
DIODES	
D1061	C1
D3201	B4
D3202	B4
D3203	B3
IC'S	
IC1601	D2

