

# Panasonic®


## Operating Instructions

### Digital Video Cassette Recorder



AJ-SD255 P

Model No. AJ-SD255 E

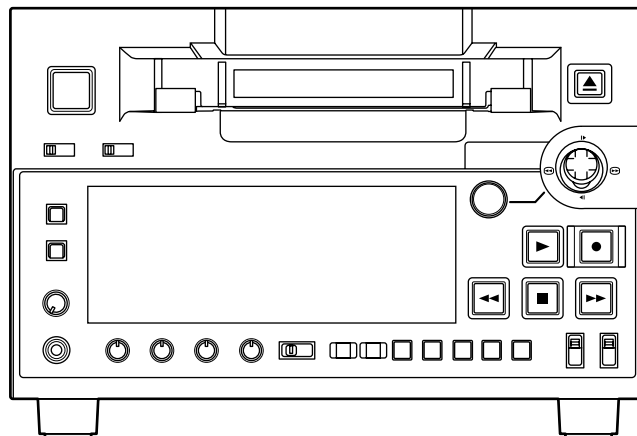

Before operating this product, please read the instructions carefully and save this manual for future use.

## For AJ-SD255P

### IMPORTANT

“Unauthorized recording of copyrighted television programmes, video tapes and other materials may infringe the rights of copyright holders and contravene copyright laws.”



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

#### ■ THIS EQUIPMENT MUST BE GROUNDED

To ensure safe operation, the three-pin plug must be inserted only into a standard three-pin power outlet which is effectively grounded through normal household wiring. Extension cords used with the equipment must have three cores and be correctly wired to provide connection to the ground. Wrongly wired extension cords are a major cause of fatalities.

The fact that the equipment operates satisfactorily does not imply that the power outlet is grounded or that the installation is completely safe. For your safety, if you are in any doubt about the effective grounding of the power outlet, please consult a qualified electrician.

#### **CAUTION:**

**THE AC RECEPTACLE (MAINS SOCKET OUTLET) SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE. TO COMPLETELY DISCONNECT THIS EQUIPMENT FROM THE AC MAINS, DISCONNECT THE POWER CORD PLUG FROM THE AC RECEPTACLE.**

#### **WARNING:**

- TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.
- TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, KEEP THIS EQUIPMENT AWAY FROM ALL LIQUIDS. USE AND STORE ONLY IN LOCATIONS WHICH ARE NOT EXPOSED TO THE RISK OF DRIPPING OR SPLASHING LIQUIDS, AND DO NOT PLACE ANY LIQUID CONTAINERS ON TOP OF THE EQUIPMENT.

#### **CAUTION:**

In order to maintain adequate ventilation, do not install or place this unit in a bookcase, built-in cabinet or any other confined space. To prevent risk of electric shock or fire hazard due to overheating, ensure that curtains and any other materials do not obstruct the ventilation.

#### **CAUTION:**

**TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.**

#### **CAUTION:**

**TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, REFER MOUNTING OF OPTIONAL INTERFACE BOARDS TO QUALIFIED SERVICE PERSONNEL.**

#### **CAUTION:**

**TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, REFER CHANGES OF SWITCH SETTINGS INSIDE THE UNIT TO QUALIFIED SERVICE PERSONNEL.**

#### **FCC Note:**

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.


**Warning:** To assure continued FCC emission limit compliance, the user must use only shielded interface cables when connecting to external units. Also, any unauthorized changes or modifications to this equipment could void the user’s authority to operate it.

#### **CAUTION:**

This apparatus can be operated at a voltage in the range of 100 – 240 V AC. Voltages other than 120 V are not intended for U.S.A. and Canada.

#### **CAUTION:**

Operation at a voltage other than 120 V AC may require the use of a different AC plug. Please contact either a local or foreign Panasonic authorized service center for assistance in selecting an alternate AC plug.

 indicates safety information.

## Caution for AC Mains Lead


**FOR YOUR SAFETY PLEASE READ THE FOLLOWING TEXT CAREFULLY.**

This product is equipped with 2 types of AC mains cable. One is for continental Europe, etc. and the other one is only for U.K.


Appropriate mains cable must be used in each local area, since the other type of mains cable is not suitable.

**FOR CONTINENTAL EUROPE, ETC.**

Not to be used in the U.K.

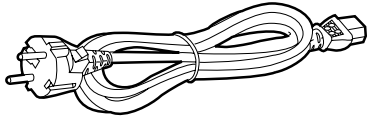

**FOR U.K. ONLY**

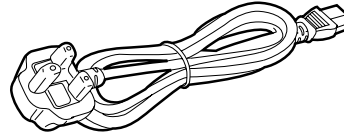

**FOR U.K. ONLY**

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 13 amp fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 13 amps and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.


If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.


A replacement fuse cover can be purchased from your local Panasonic Dealer.

**How to replace the fuse**

1. Open the fuse compartment with a screwdriver.

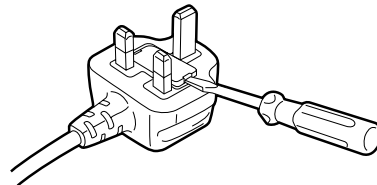

2. Replace the fuse.

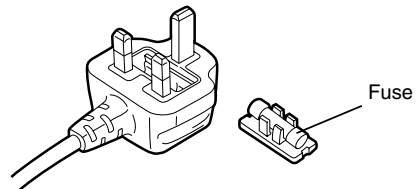

## For AJ-SD255E

### IMPORTANT

“Unauthorized recording of copyrighted television programmes, video tapes and other materials may infringe the rights of copyright holders and contravene copyright laws.”

### Operating precaution

Operation near any appliance which generates strong magnetic fields may give rise to noise in the video and audio signals. If this should be the case, deal with the situation by, for instance, moving the source of the magnetic fields away from the unit before operation.

#### ■ THIS EQUIPMENT MUST BE EARTHED

To ensure safe operation, the three-pin plug must be inserted only into a standard three-pin power point which is effectively earthed through normal household wiring. Extension cords used with the equipment must have three cores and be correctly wired to provide connection to the earth. Wrongly wired extension cords are a major cause of fatalities.

The fact that the equipment operates satisfactorily does not imply that the power point is earthed or that the installation is completely safe. For your safety, if you are in any doubt about the effective earthing of the power point, please consult a qualified electrician.

#### ■ DO NOT REMOVE PANEL COVERS BY UNSCREWING THEM.

To reduce the risk of electric shock, do not remove the covers. No user serviceable parts inside. Refer servicing to qualified service personnel.

#### CAUTION:

THE AC RECEPTACLE (MAINS SOCKET OUTLET) SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE. TO COMPLETELY DISCONNECT THIS EQUIPMENT FROM THE AC MAINS, DISCONNECT THE POWER CORD PLUG FROM THE AC RECEPTACLE.

#### WARNING:

- TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.
- TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, KEEP THIS EQUIPMENT AWAY FROM ALL LIQUIDS. USE AND STORE ONLY IN LOCATIONS WHICH ARE NOT EXPOSED TO THE RISK OF DRIPPING OR SPLASHING LIQUIDS, AND DO NOT PLACE ANY LIQUID CONTAINERS ON TOP OF THE EQUIPMENT.

#### CAUTION:

TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

#### CAUTION:

TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, REFER MOUNTING OF OPTIONAL INTERFACE BOARDS TO AUTHORIZED SERVICE PERSONNEL.

#### CAUTION:

TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, REFER CHANGES OF SWITCH SETTINGS INSIDE THE UNIT TO QUALIFIED SERVICE PERSONNEL.

#### CAUTION:

In order to maintain adequate ventilation, do not install or place this unit in a bookcase, built-in cabinet or any other confined space. To prevent risk of electric shock or fire hazard due to overheating, ensure that curtains and any other materials do not obstruct the ventilation.

# Contents

---

<b>Introduction</b> .....	<b>6</b>
<b>Included accessories</b> .....	<b>6</b>
<b>Optional boards</b> .....	<b>6</b>
<b>Features</b> .....	<b>7</b>
<b>Parts and their functions</b> .....	<b>8</b>
Front Panel .....	8
Display Panel .....	11
Rear Panel .....	12
<b>Tapes</b> .....	<b>13</b>
<b>IEEE1394 digital interface</b> .....	<b>14</b>
<b>Joystick</b> .....	<b>15</b>
<b>PF (Programmable Function)</b> .....	<b>15</b>
<b>Repeat playback</b> .....	<b>16</b>
<b>Setup (initial settings)</b> .....	<b>17</b>
<b>Setup menus</b> .....	<b>18</b>
SYSTEM menu .....	20
USER menu .....	21
<BASIC> .....	21
<OPERATION>.....	23
<INTERFACE> .....	24
<TAPE PROTECT> .....	25
<TIME CODE>.....	26
<VIDEO>.....	28
<AUDIO> .....	30
<V BLANK>.....	32
<DIF> .....	33
<MENU> .....	34
<b>Time code/user bit</b> .....	<b>35</b>
<b>Superimpose screen</b> .....	<b>36</b>
<b>Condensation</b> .....	<b>37</b>
<b>Maintenance</b> .....	<b>37</b>
<b>Audio input impedance</b> .....	<b>37</b>
<b>Error messages</b> .....	<b>38</b>
<b>Specifications</b> .....	<b>43</b>

# Introduction

---

This product is a multi-purpose digital VTR that uses 1/4-inch wide tapes. It is capable of recording and playback in DVCPRO (25 Mbps) format, recording and playback in the consumer DV format (SP mode only), and playback of DVCAM tapes.

This high-picture-quality VTR incorporates digital compression technology to reduce the deterioration of the picture quality and sound quality resulting from dubbing.

It has a compact and lightweight design so that it can readily be carried around or easily installed in a rack.

## Included accessories

---

- 3-pin power cord x 1

## Optional boards

---

- IEEE1394 interface board:**

AJ-YAD255G

- SDI interface board:**

AJ-YA94G

Use only the optional boards listed above.

# Features

---

## ■ Compact and lightweight

This unit is a DVCPRO digital VTR which uses 1/4-inch wide cassette tapes. The compact and lightweight design makes it light to carry around and ideal for usage as a desktop viewer.

## ■ Up to 184 minutes of recording

M cassettes (max. 66 minutes: using the AJ-P66MP) and L cassettes (max. 184 minutes: using the AJ-5P92LP) can be used with this unit. Tape width is a compact 1/4-inch.

## ■ 2-channel, high-sound-quality digital audio

The unit can record and play back 2-channel PCM audio. (However, it does not support cue recording or playback.)

## ■ Compatibility with general consumer video equipment

DV cassette tapes containing material shot with a consumer digital camera or the like can be played back on this unit. Recording is also possible in DV format. A cassette adapter (AJ-CS455P) is necessary when a mini DV cassette tape is to be used.

## ■ Digital slow motion

Panasonic's original digital slow-motion technology makes it possible to obtain clear pictures even during slow playback at speeds ranging from -0.43x to +0.43x. (DVCPRO only)

## ■ Joystick

The unit comes with a joystick (stick controller). It is used to control variable-speed playback during searches, etc. In addition, the settings for the on-screen menus and time code generator can also be accomplished easily using the joystick.

## ■ PF (Programmable Function) buttons

The unit comes with three PF buttons. Any three frequently used setup menus can be selected, and by operating these buttons on the front panel, it is possible to change the menu settings.

## ■ Recording and playback of UMID information

Recording and playback of UMID (Unique Material Identifier) information complies with the SMPTE 330M standard.

UMID information can be checked on the DIAG menu.

UMID information cannot be played back correctly by VTRs that do not support the recording and playback of UMID information. In addition, even if a VTR that does not support the recording and playback of UMID information is connected to this unit and recording performed, UMID information will not be recorded correctly.

## ■ Time code

The unit incorporates a TCG (time code generator)/TCR (time code reader). In addition to the internal time code, an external time code input or input signal VITC can also be recorded to the tape as a time code by this unit.

## ■ Multi-functional interfaces

### •IEEE1394 digital input/output

Use of the IEEE1394 interface board (option: AJ-YAD255G) enables an IEEE1394 digital interface for the input and output of DVCPRO/DV compressed digital video/audio signals without any reduction in image quality.

### •Serial digital input/output


Use of the SDI interface board (option: AJ-YA94G) enables input and output of the serial digital component signals.

## ■ Menu-based setup

The setup settings, which are conducted prior to operating the unit, are performed while viewing the setup menus on the unit's display or a TV monitor.

# Parts and their functions

## Front panel

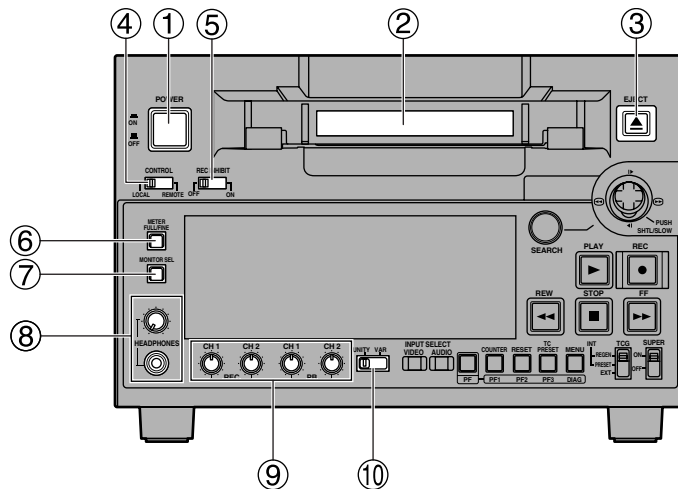

### ① POWER switch

### ② Cassette insertion slot

### ③ EJECT button

When this button is pressed, the tape is unloaded and the cassette is ejected automatically a few seconds later. When CTL display has been selected for the counter display, the display is reset. EJECT button operation can be enabled or disabled with setup menu No. 115 (EJECT SW INH).


### ④ CONTROL switch

This is selected to control the unit from an external source using the REMOTE connector.  
**REMOTE:** Set to this position to control the unit using the 9-pin REMOTE connector and IEEE1394 AV/C commands.  
**LOCAL :** Set to this position to control the unit using the controls on the unit's operation panel.

### ⑤ REC INHIBIT switch

This switch is used to enable or disable recording on the cassette tape.  
**ON:**  
 Recording on the cassette tape is disabled (inhibited). In this state, the REC INH lamp lights on the display panel.  
**OFF:**  
 Recording on the cassette tape is enabled so long as the accidental erasure prevention mechanism on the cassette tape is set to enable recording.

### ⑥ METER (FULL/FINE) selector button

This button is used to select the scale display for the audio level meter.  
**FULL mode :** The standard scale ( $-\infty$  to 0 dB) is selected.  
**FINE mode :** The scale in 0.5 dB increments is selected. The  position indicates the standard level of -20 dB (-18 dB). (See page 11)

### ⑦ MONITOR SEL button

This button is used to select the audio signals which are to be output to the AUDIO MON L and R connectors. Each time the button is pressed, the audio signals to be output to the AUDIO MON L or R connector are changed in the following sequence.

L : [CH1] → [CH1] → [CH2] → [CH1+CH2]  
 R : [CH2] → [CH1] → [CH2] → [CH1+CH2]

Which signal is currently selected is displayed by the lighting of the L or R lamp on the level meter display.

### ⑧ Headphone jack and volume control

When stereo headphones are connected to the headphone jack, the sound can be monitored using the headphones during recording or playback.

### ⑨ Audio level control knobs

These knobs are used to adjust the recording and playback level of the PCM audio signals (CH1 and CH2). The audio level control selector switch ⑩ is used to set to variable or fixed level.

#### Note:

The level of the IEEE1394 digital input/output audio signals cannot be adjusted.

### ⑩ Audio level control selector switch

**UNITY:** At this position, the audio signals are recorded or played back at a fixed level regardless of the position of the audio level control knobs ⑨.  
**VAR:** At this position, the audio signals are recorded or played back at the level adjusted by the audio level control knobs ⑨.


#### Note:

When UNITY is selected, the recording and playback levels both become UNITY (fixed level).



# Parts and their functions (continued)

## Front panel

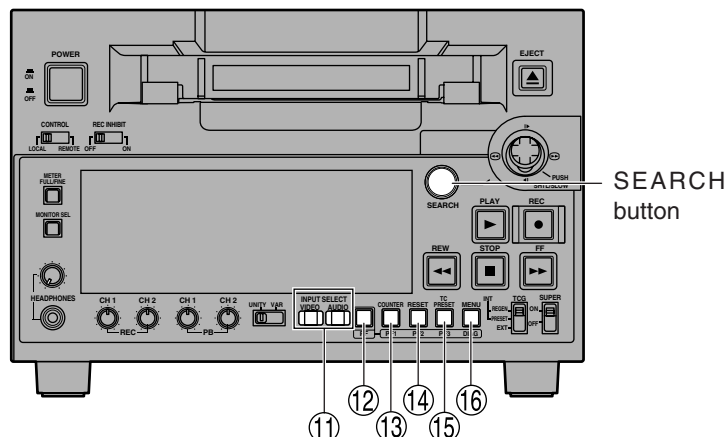

### ⑪ INPUT SELECT buttons

These buttons are used to switch the video and audio input signals. They can also be used to switch the input signals to the internal reference signal selected as the setup menu item No.600 (INT SG) setting.

#### VIDEO:

Each time the VIDEO button is pressed, the input video signal selection is switched in the order of [Y P<sub>B</sub> P<sub>R</sub>] → [CMPST] → [S-VIDEO] → [SDI] → [1394] → [SG].

- When SG has been selected, the signal is switched to the internal reference signal selected as the setup menu item No.600 (INT SG) setting.

#### AUDIO:

Each time the AUDIO button is pressed, the input audio signal selection is switched in the order of [ANALOG] → [SDI] → [1394] → [SG].

#### Notes:

- It is possible to inhibit the input switch operations (video and audio) of the INPUT SELECT buttons using setup menu item No.112 (V IN SEL INH) and item No.113 (A IN SEL INH).
- The 1394 option for the VIDEO and AUDIO buttons is available only when the optional board (AJ-YAD255G) is installed.
- The SDI setting for the VIDEO and AUDIO buttons cannot be selected unless the optional board (AJ-YA94G) has been installed.

### ⑫ PF button

When this button is pressed, buttons ⑬ to ⑮ function as the PF1, PF2 and PF3 buttons, respectively. When it is pressed again before another button is pressed, these modes are canceled.

When this button is pressed together with the MENU/DIAG button ⑯, the DIAG screen is displayed.

### ⑬ COUNTER/PF1 button

Each time this button is pressed, the counter display on the display panel changes by one step in the following sequence: CTL → TC → UB.

### ⑭ RESET/PF2 button

When this button is pressed in the CTL mode, the counter display is reset to [00:00:00:00].

When it is pressed in the TC/UB mode while holding down the TC PRESET button ⑮, the generator is reset.

### ⑮ TC PRESET/PF3 button

This button is used to set the TC or UB values.

### ⑯ MENU/DIAG button

When this button is pressed, the setup menus are displayed on the TV monitor (but only when the VIDEO MON connector is used), and the setup menu numbers are displayed on the unit's display panel.


When it is pressed again, the setup menu settings are exited, and the original status is restored.

When the button is pressed while holding down the PF button ⑫, the VTR information is displayed. When it is pressed again, the original display is restored. The VTR information consists of the WARNING, HOURS METER, UMID and DIF STATUS 1, 2 information. The SEARCH button is used to switch the displays between these kinds of information.

Descriptions of the warnings are displayed on the WARNING screen. The deck's serial number, power-on time, drum rotation time, tape travel time, number of loading times, number of power on/off times, etc. are displayed on the HOURS METER screen. The UMID (Unique Material Identifier) information is displayed on the UMID INFO screen. The IEEE1394 digital interface information is displayed on the DIF STATUS 1, 2 screen (when using AJ-YAD255G only).

# Parts and their functions (continued)

## Front panel

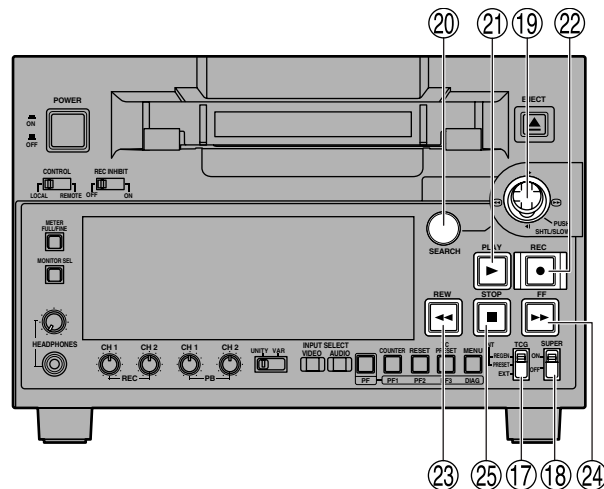

### 17 TCG switch

#### REGEN:

The internal time code generator is synchronized with the time code which the time code reader has read from the tape.

The signal that is to be used for regeneration is selected using setup menu No. 503 (TCG REGEN).

#### PRESET:

The time code generator can be preset (see page 35) on the operation panel or by remote control.

#### EXT:

The external time code which is input from the time code input connector or video signal VITC, or IEEE1394 digital input signal is used. Which of the two is to be set is selected using setup menu No. 505 (EXT TC SEL).

### 18 SUPER switch

**ON** :The time code and other superimposed information are output to the VIDEO MON connector.

**OFF** : No superimposed information is output.

### 19 Joystick

This is used for shuttle, slow and other variable-speed playback. It is also used for the menu settings, etc.

The stick can be moved upward, downward, to the left or to the right, and it can also be pressed to initiate operations.

### 20 SEARCH button

When this button is pressed, the search mode is established.

### 21 PLAY button

When this button is pressed, playback starts.

When this button and the REC button are pressed together, recording starts.

### 22 REC button

When this button is pressed together with the PLAY button, recording starts.

When it is pressed during playback, a search, fast forwarding or rewinding, the E-E mode pictures and audio signals can be monitored while it is held down.

When it is pressed in the stop mode, the E-E mode pictures and audio signals can be monitored. (When it is pressed during playback, the servo will be disrupted.)

When the STOP button is pressed, the original pictures and sound are restored.

### 23 REW button

When this button is pressed, the tape is rewound. The rewinding speed can be selected using setup menu No.102 (FF. REW MAX).

### 24 FF button

When this button is pressed, the tape is fast forwarded.

The fast forwarding speed can be selected using setup menu No.102 (FF. REW MAX).

### 25 STOP button

When this button is pressed, the tape stops traveling, and when TAPE has been selected for the setup menu item No.122 (STOP EE SEL) setting, the still images can be monitored.


Even in the stop mode, the drum continues to rotate, and the tape remains in close contact with the drum.

When the stop mode continues beyond a specific time period, the unit is automatically set to the standby OFF mode or STEP FWD mode in order to protect the tape. (This is set using setup menu item No.400 to 403.)

Immediately after a cassette has been loaded in the unit, the stop mode is established.

# Parts and their functions (continued)

## Display panel

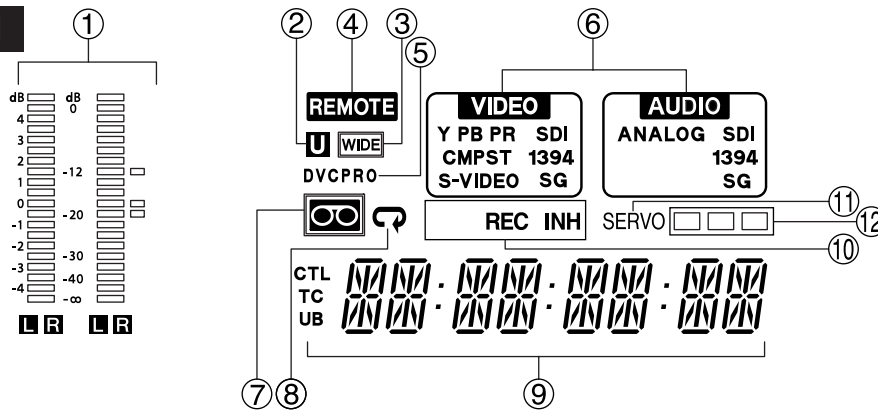


### ① Level meter

This displays the levels of the PCM audio signals for CH1 and CH2.

During recording and when the E-E mode is selected, it shows the levels of the input audio signals; during playback, it shows the levels of the output audio signals.

The audio level display is switched between the FULL mode and FINE mode using the METETER selector button

⑥. (See page 8)

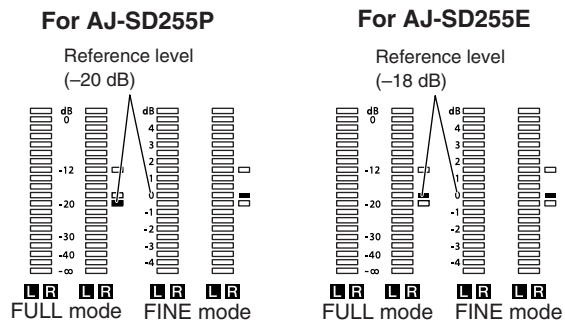

### ② Lamp

This lamp lights when UMID information is present on the input signal in E-E mode.

This lamp lights during tape playback when UMID information has been recorded on the tape.

### ③ WIDE lamp

This lamp lights when 16:9 wide-screen information is being recorded on a tape.

Recording of wide-screen information can be selected on setup menu No. 645 (WIDE SELECT).

This lights lamps during tape playback when wide-screen information has been recorded on the tape.

Regardless of the above setting, the wide-screen information cannot be superimposed onto tape playback and output.

### ④ REMOTE lamp

This lamp lights when the CONTROL switch has been set to the REMOTE position.

### ⑤ Format displays

The recording format and the format of the tape inserted in the unit are displayed here.

### ⑥ INPUT SELECT display area

The characters corresponding to the selected input signals light up in this area. With the exception of analog audio signals, flashing appears in this area if the selected input signals are not available.

#### VIDEO

**Y PB PR** : Analog component video signals

**CMPST** : Analog composite video signals

**SDI** : Serial digital video signals (option)

**S-VIDEO** : S-Video (Y/C separated) signals

**1394** : IEEE1394 digital signals (option)

**SG** : Internal reference signal

#### AUDIO

**ANALOG** : Analog audio signals

**SDI** : Serial digital audio signals (option)

**1394** : IEEE1394 digital signals (option)

**SG** : Internal reference signal

### ⑦ Lamp

This lamp lights when a cassette tape is inserted into the VTR.

In the standby OFF mode, this lamp is flashing.

### ⑧ Repeat lamp

This lights when the repeat play mode has been set.

### ⑨ Counter display

The tape counter, time code, etc. are displayed here.

The type of value displayed is indicated by CTL, TC or UB.

### ⑩ REC/REC INH lamps

**REC:**

This lights in the recording mode.

**REC INH:**

This lights in the recording inhibit mode which is established either when the REC INHIBIT switch ⑤ has been set to ON or the cassette has been set to the accidental erasure prevention status. Recording is not possible while this lamp is lighted.

Whether the lamp is to light or flash when the accidental erasure prevention tab on the cassette tape has been set to the recording inhibit position can be selected using setup menu item No.114 (REC INH LAMP).

### ⑪ SERVO lamp

This lights when both the drum servo and capstan servo are locked.

### ⑫ Channel condition lamps

These lamps light to indicate the error rate status.

(green → white → red)

**Green** : This lights when the error rates for the video and audio playback signals are both at acceptable levels.



**White** : This lights when the error rate for the video or audio playback level has increased.

The playback picture and sound remain unaffected even while this lamp is lighted.

**Red** : This lights when the error rate for the video or audio playback level has increased to the extent that correction or interpolation was performed.

# Parts and their functions (continued)

## Rear panel

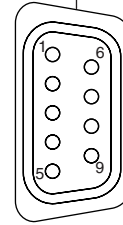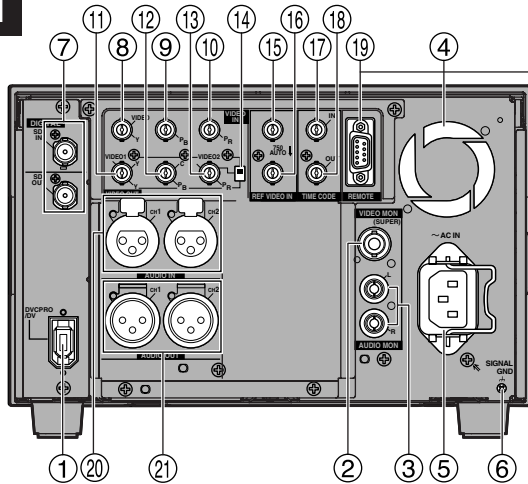

Pin No.	Signal
1	Frame Ground
2	Transmit A
3	Receive B
4	Receive Common
5	—
6	Transmit Common
7	Transmit B
8	Receive A
9	Frame Ground

### ① IEEE1394 digital input/output connector (option: AJ-YAD255G)

This enables signals to be input and output using the IEEE1394 digital interface. Use a 6-pin type of connector. Bus power is not supported.

### ② VIDEO MON connector

Analog composite video signals are output from this connector. Video signals with information superimposed on them can be output. To set the superimposing to ON or OFF, use the SUPER switch ⑱ on the front panel.

### ③ AUDIO MON (L, R) connectors

The playback signal from the PCM audio signals (CH1 and CH2) are output from these connectors.

### ④ Fan

This fan is used to cool down the VTR. If, for any reason, the fan stops, "E-10" will appear on the counter display.

### ⑤ AC IN socket

Connect one end of the power cord supplied to this socket and the other end to the power outlet.

### ⑥ SIGNAL GND terminal

This is connected to the signal ground terminal on the component connected to this VTR in order to minimize noise. It is not a safety ground.

### ⑦ SERIAL DIGITAL COMPONENT AUDIO VIDEO IN/OUT connectors (option: AJ-YA94G)

Digital component audio/video signals complying with the SMPTE 259M-C standard are input to and output from these connectors.

#### Note:

The digital audio signals to be input must be synchronized with the video input signals. Otherwise, noise will be generated in the audio output signals.

### ⑧ ⑨ ⑩ ANALOG VIDEO IN connectors

The signals which are to be supplied to these connectors are selected as follows by setting the INPUT SELECT button on the front panel.

**Y P<sub>B</sub> P<sub>R</sub>:** Analog component video signals are input.

**CMPST:** Analog composite video signals are input using the VIDEO/Y connector ⑧.

**S-VIDEO:** S-Video (Y/C separated) signals are input using the VIDEO/Y connector ⑧ and PB/C connector ⑨.

#### Note:

The wide ID superimposed on the input signals is not detected.

### ⑪ ⑫ ⑬ ANALOG VIDEO OUT connectors

The signals which are to be output from these connectors are selected as follows by setting the ANALOG VIDEO OUT selector switch ⑭.

**Y P<sub>B</sub> P<sub>R</sub> (bottom position):**

Analog component video signals are output.

### VIDEO1/VIDEO2 (top position):

Two sets of analog composite video signals are output from connectors ⑪ and ⑬.

### Y/C (middle position):

S-Video (Y/C separated) signals are output from connectors ⑪ and ⑫.

#### Note:

The wide ID is not superimposed onto the output signals.

### ⑭ ANALOG VIDEO OUT selector switch

Set this switch to the Y P<sub>B</sub> P<sub>R</sub> position (bottom) when using the ANALOG VIDEO OUT connectors for component video output, set to the VIDEO1 VIDEO2 position (top) when using for composite video output, and set to the middle position when using for S-Video (Y/C separated) output.

### ⑮ REF VIDEO IN connector

This is the input connector for the reference video signal. Input a signal with color burst.

#### Note:

Since the video or audio output signal may be disrupted if the reference video signal is not input, it is recommended that this connector be used by the system which supplies the reference video signals. Use a signal where SCH does not fluctuate for the reference video signal.

### ⑯ REF VIDEO OUT connector

This is the loop-through output connector of the REF VIDEO IN connector ⑮. When a cable is not connected to this connector, the REF VIDEO IN connector ⑮ is automatically terminated by the 75 Ω resistance. When a cable is connected, the 75 Ω termination is released.

### ⑰ TIME CODE IN connector

This connector is used for recording the external time code onto the tape.

### ⑱ TIME CODE OUT connector

The playback time code is output from this connector during playback. During recording, the time code generated by the internal time code generator is output.

### ⑲ Remote control connector

This enables the unit to be connected to the external remote controller for operation from an external source.

#### Notes:

- Set the CONTROL switch ④ to REMOTE.
- The specifications are based on the RS-422A interface, and editing-related functions do not work. In this case, use it as a player.


### ⑳ ANALOG AUDIO IN connectors

The analog audio signals are input from these connectors.

### ㉑ ANALOG AUDIO OUT connectors

The analog audio signals are output from these connectors.

# Tapes

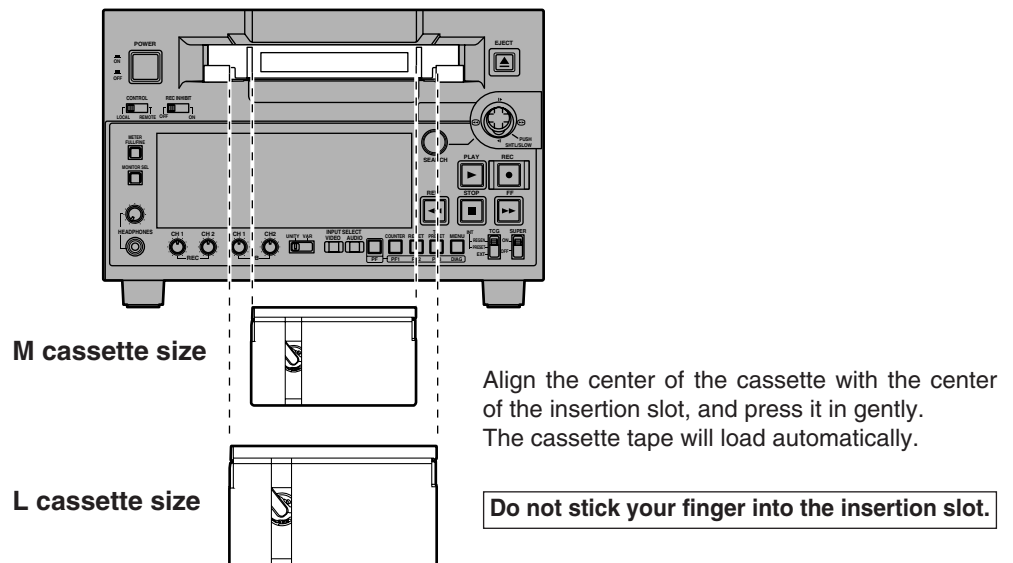

## ■ Consumer-use DV and DVCAM cassettes (Standard DV and DVCAM cassettes, mini DV and DVCAM cassettes)

- Use a cassette adapter (AJ-CS455P) when a mini DV or DVCAM cassette is to be used.

Note that inserting a mini DV or DVCAM cassette without the use of a cassette adapter will cause malfunctioning.

Also note that long-duration mini DV cassettes (80 minutes in the standard mode and 120 minutes in the LP mode) cannot be used.

Note that you cannot record to the tape when using the cassette adapter AJ-CS750.

- It is not possible to play back tapes which have been recorded in the LP mode.
- When editing material recorded on a consumer-use DV or DVCAM cassette, first record the material on a DVCPRO tape or other tape used by VTRs for broadcast applications.
- The maximum transport speed of a mini DV or DVCAM cassette tape is 32x.
- The images may be subject to disturbance during the slow motion playback of consumer-use DV and DVCAM cassette tapes.
- From the perspective of protecting consumer-use DV and DVCAM cassette tapes, minimize the number of times the tapes are cued up at the same locations as much as possible.
- When consumer-use DV and DVCAM cassette tapes are used, the maximum time for STILL TIMER is set to 20 seconds.
- The audio sampling rate recorded to consumer DV tapes is 48 kHz. When using the IEEE1394 interface board (option: AJ-YAD255G), however, sampling rates of 44.1 kHz and 32 kHz can be recorded to a consumer DV tape during 1394 input only.

- Control from a controller or computer having a REC/PAUSE command (when using the IEEE1394 interface board AJ-YAD255G) enables recording in connected segments. When using a consumer DV tape, however, the video and audio in the frame before and after the connection point may be distorted in some cases.

**It is recommended that tapes bearing the Panasonic brand be used as the consumer-use DV tapes.**

**When lifting the unit, never stick your hand into the insertion slot.**

## ■ M cassettes

Tapes capable of up to 66 minutes of recording or playback  
(AJ-P66MP, AJ-P33MP)

## ■ L cassettes

Tapes capable of up to 184 minutes of recording or playback  
(AJ-5P92LP, AJ-P126LP)

- Use recorded AJ-5P92LP tapes in the DVCPRO (25M) 184-minute compatible VTR.

# IEEE1394 digital interface

The recording format for IEEE1394 digital input data is determined based on the table below.

## For AJ-SD255P

Recording tape	Input data	Recording format
DVCPRO	DVCPRO	DVCPRO
	DV	DVCPRO (* 1)
DV	DVCPRO	DV
	DV	DV

\* 1 If the audio of the input data is 32 kHz/4CH, CH1/CH2 and CH3/CH4 can be selected in setup menu No. 889 (DIF AUD IN).

## For AJ-SD255E

Recording tape	Input data	Recording format
DVCPRO	DVCPRO	DVCPRO
	DV	Cannot record or receive data.
DV	DVCPRO	Cannot record or receive data.
	DV	DV

## For AJ-SD255P:

The format for IEEE1394 digital output data is determined based on the setup menu No. 881 (DIF TYPE) setting and playback tape (mode).

Mode	Setup menu No. 881 (DIF TYPE) setting	Output data format
During DVCPRO tape playback	AUTO	DVCPRO
	DVCPRO	DVCPRO
	DV	DV
During DV/DVCAM tape playback	AUTO	DV
	DVCPRO	DVCPRO
During EJECT or E-E	DV	DV
	AUTO	DVCPRO
	DVCPRO	DVCPRO

## For AJ-SD255E:

The format for IEEE1394 digital output data is determined based on the playback tape (mode).

Mode	Output data format
During DVCPRO tape playback	DVCPRO
During DV/DVCAM tape playback	DV
During EJECT or E-E	DVCPRO

## ■ Precautions for use

- Connect the interface with another device on a 1:1 basis.
- If the E-92 warning (1394 INITIAL ERROR) is displayed, either re-connect the connecting cable or turn the VTR's power off and back on.
- The AV signals may be disrupted when the power of the connected devices is turned on or off and when the interface cable is connected or disconnected.
- When the input signals are switched or the mode is transferred, it may take a few seconds for the system to stabilize. Proceed with the recording operation only after the system has stabilized.
- The following situation applies when recording is to be performed by selecting the IEEE1394 digital interface input, and it applies with the signals which are output by the IEEE1394 digital interface.
  - The audio level control knobs on the front panel do not work.
  - The settings in the 800 series of setup menu items concerning the vertical blanking period are ignored.
  - When playback signals other than regular 1x speed playback signals have been input, no guarantees are made for the pictures and sound which will be recorded or for the EE-type pictures and sound.
- The following situation applies when the video input selection has been set as the IEEE1394 digital interface.
  - The SDI signals, the analog video output signals and time code output signals become irregular in the E-E mode. Do not use these signals for recording purposes. (The teletext signals and other signals superimposed onto the video output signals also become irregular.)
- During SLOW/STILL playback, unprocessed video and audio signals are output as the IEEE1394 digital interface output. When these video and audio signals are monitored using another device, they may differ from the video and audio signals played back by this unit.

### Be absolutely sure not to defeat the following safeguards when connecting the IEEE1394 cable.

- Ensure that the unit and all devices to be connected are grounded (or connected to a common ground). If the equipment cannot be grounded, first turn off the power of all the connected devices, and then disconnect and re-connect the IEEE1394 cable.
- When connecting the unit to a device equipped with a 4-pin connector, connect the unit's connector (6-pin type) first.
- When making a connection to a PC equipped with a 6-pin connector, connect the 1394 cable so that it mates properly with the 1394 connector. Bear in mind that if the plug is inserted the wrong way round, the unit may be damaged as a result.

# Joystick

**(1) Press the SEARCH button to activate the joystick.**

When STICK has been selected as the setup menu item No.100 (SEARCH ENA) setting, the joystick will be activated without pressing the SEARCH button.

**(2) Press the joystick to switch between the SHTL mode and SLOW mode.**

**(3) When the joystick is inclined toward the right, the tape can be played back in the forward direction at a variable speed based on the angle that the stick is inclined. When the stick is inclined toward the left, the tape is played back in the reverse direction.**

• SHTL mode:

The maximum speed which is established when the joystick has been inclined at the maximum angle corresponds to the speed which has been set by setup menu item No.101 (SHTL MAX).


• SLOW mode:

The speed ranges from -1.0x to +1.0x.

**(4) When the joystick is inclined upward, the tape travels in 1-frame increments in the forward direction; when it is inclined downward, it travels in 1-frame increments in the reverse direction.**

Slow playback is performed if the stick is held at the top or bottom position.

• If the SEARCH button is pressed while the joystick is pressed to one side, the current speed is maintained even if the joystick is released. Pressing the STOP, PLAY, or other operation buttons cancels the fixed speed operation.

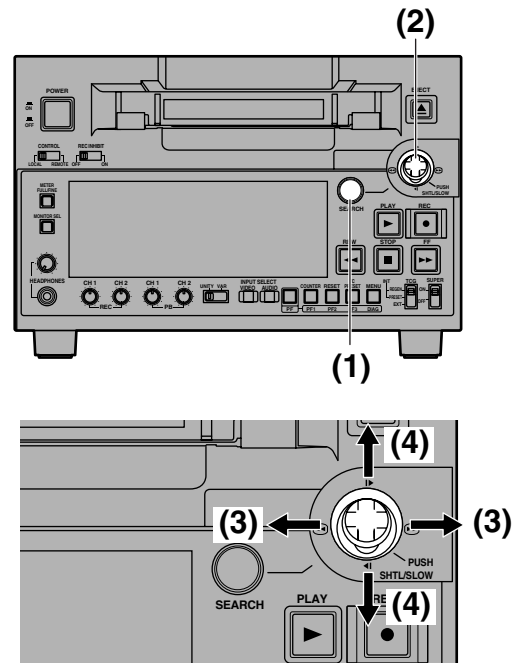


## PF (Programmable Function)

Three setup menu items can be registered in the PF buttons, and these buttons can then be used to change the setup menu settings by a simple operating procedure.


**■ Registering the items in the PF buttons**

**(1) Press the MENU button, and open the setup menu.**

**(2) Incline the joystick upward or downward to select the PF number item (A04-A06) to be registered.**

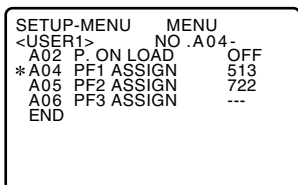

**(3) When the joystick is pressed, a list of items which can be set is displayed.**

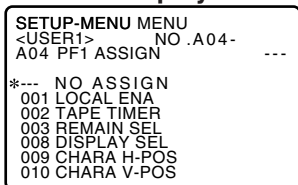


**(4) Incline the joystick upward or downward to select the item.**

**(5) When the joystick is pressed, the regular menu display screen is restored.**

When the MENU button is pressed, a confirmation screen appears. Press the PLAY button to set.

**■ Performing operations using the PF buttons**

**(1) When the PF button is pressed, the registered items are displayed on the monitor screen which is output from the VIDEO MON connector.**

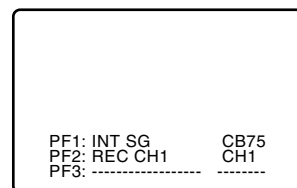

**(2) Press the PF1, PF2 or PF3 button that corresponds to the item whose setting is to be changed. Each time the button is pressed, the setting is updated in sequence.**

**(3) When the PF button is pressed again, the regular display is restored. If no operations are made, the display is also restored automatically after five seconds elapse.**

# Repeat playback

## ■ Setting the BEGIN and END points

- (1) Press the MENU button.
- (2) Select menu item No.161 (CTL(TC)BGN) or No.162 (END), and incline the joystick to the left or right.

By operating the joystick, the user can choose whether or not to set the BEGIN and END points.

“--:--:--:--” appears on the display when the points are not set. If repeat playback is initiated in this state, the tape start will serve as the BEGIN point, and the tape end will serve as the END point.

- (3) Press the joystick while the setting is displayed. The changed digits flash on the display.
- (4) Select TC or CTL using the COUNTER button.
- (5) Incline the joystick to the left or right, and select the digits to change (flashing).  
The frame digits cannot be selected. “00” is always displayed for these digits.  
When the joystick is now inclined upward or downward, the value of the digits changes.  
The counter display is reset to 00:00:00:00 when the RESET button is pressed.
- (6) After the settings have been completed, press the joystick.
- (7) Press the MENU button.  
A confirmation screen now appears. The settings are stored in the memory when the PLAY button is pressed.

## ■ Setting the repeat playback mode

- (1) Press the MENU button.
- (2) Select menu item No.160 (MEMORY MODE), and select the repeat playback mode.

Item setting	Description of operation
OFF	Normal operation
M-STOP	When the tape is fast forwarded or rewound, it stops near the BEGIN point.
REPT1	When the tape is played as far as the END point, it is rewound to the BEGIN point where it stops.
CONT	When the tape is played as far as the END point, it is rewound to the BEGIN point and played, and this sequence of operations is repeated.

- (3) Press the MENU button.

A confirmation screen now appears. The settings are stored in the memory if the PLAY button is now pressed.

### Notes:


- The picture quality deteriorates when repeat playback is initiated for the same tape over and over again. As a general rule of thumb, replace the tape with a new one after playing back the tape for about 100 times.
- The output images to be displayed while the tape is being rewound to the BEGIN point in the repeat playback mode can be set using menu item No.163 (REPT MODE).  
If FREEZE is selected as the REPT MODE setting and the tape end has been set as the END point, the playback image will not be frozen properly. Set the END point at a place on the tape where images have been recorded.
- If the counter display mode (TC or CTL), which was established when menu item No.161 (CTL(TC)BGN) and No.162 (END) were set, is different from the counter display mode (TC or CTL) in which repeat playback is to be initiated, the repeat lamp flashes, and the repeat playback operation cannot be performed.



# Setup (initial settings)

The unit's main settings are performed while making selections using a menu-driven system.

When a TV monitor is connected to the VIDEO MON connector on the unit's rear panel, the setup menus will appear on the TV monitor.

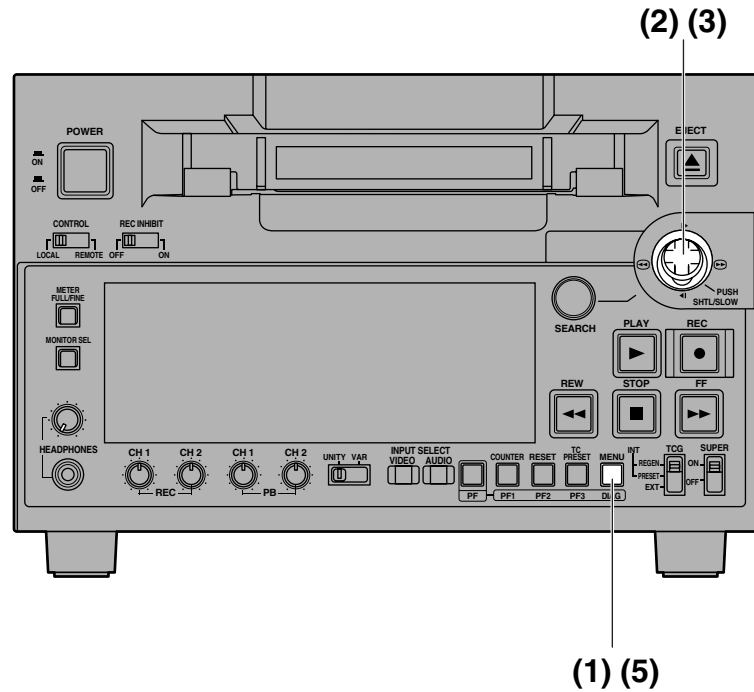

## ■ Changing the settings

### (1) Press the MENU button.

The setup menu screen appears on the TV monitor, and the setup menu item number appears on the counter display.

When the FF button is pressed for about 1.5 seconds, the name of the setup menu item is displayed on the counter display. When the same button is pressed again for about 1.5 seconds, the original item No. display is restored.

(If a setup was performed previously, the screen on which the last change was made is displayed.)

### (2) Incline the joystick upward or downward to select the item to be set.

The cursor (\*) on the menu screen moves, and the item number on the display flashes.

- When the FF or REW button is pressed while holding down the PLAY button, what is on the display is replaced with the next or previous major item.

### (3) Incline the joystick to the left or right at the position where the change is to be made.

The setting is now changed.

To return what has been established as the setting to the factory setting, press the RESET button while holding down the SEARCH button.

### (4) If there is another item to be changed, repeat steps (2) to (3).

### (5) Press the MENU button.

- If none of the settings have been changed, the menu screen display is cleared.
- If a setting has been changed, a confirmation screen appears.
- To activate the change in the setting, press the PLAY button.
- To cancel the change in the setting, press the STOP button.
- To return what has been established as the setting to the factory setting, press the RESET button while the menu is displayed. A confirmation screen now appears, and if the PLAY button is pressed in this status, the factory setting is restored.

#### Notes:

- If the RESET button is pressed to restore the factory settings, only the user files currently in use are restored. The other user files remain unaffected.
- The changes made to the SYSTEM menu contents are recorded also by pressing the MENU button to close the menu screen.


# Setup menus

This VTR can hold five user files, each of which has its own specific menu settings, and one of these files can be selected for use.

## ■ Changing the file

(1) Press the MENU button.

(2) When the FF button is pressed while holding down the PF button, the next user file is selected; conversely, when the REW button is pressed while holding down the PF button, the previous user file is selected.

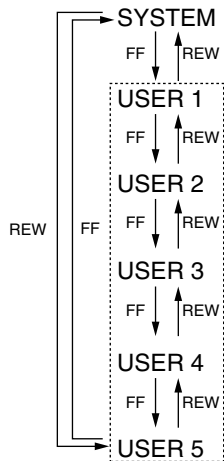

### User files

Each user file contains the following items.

- BASIC
- OPERATION
- INTERFACE
- TAPE PROTECT
- TIME CODE
- VIDEO
- AUDIO
- V BLANK
- DIF
- MENU

(3) Decide on the user file to be used in the step (2) operation, and press the MENU button.

A confirmation screen now appears.

(4) When the PLAY button is pressed, what has been set is stored in the memory.

## ■ Setting and releasing the lock mode

The lock mode can be set to protect the system file and user file (USER2 to USER5) settings. Once the lock mode is set, no further changes can be made to the settings.

Setting and releasing the lock mode can be set for the system file by using setup menu No. 30 (MENU LOCK) and for the user files by using setup menu No. A03 (MENU LOCK).

(1) Press the MENU button.

(2) Press the REW button or FF button while holding down the PF button to select the file for which the lock mode is to be set or released.

(3) Operate the joystick to move the cursor (\*) on the menu screen to item No.30 (MENU LOCK) for the system file or to item No.A03 (MENU LOCK) for a user file.

(4) Press the SEARCH button, and use the joystick to select whether the lock mode is to be set or released.

### To set the lock mode:

Select 0001 (ON) as the setting.

### To release the lock mode:

Select 0000 (OFF) as the setting.

When the lock mode has been set, LOCKED flashes on the menu screen. The counter display stops flashing and remains lighted.

(5) Press the MENU button.

A confirmation screen now appears.

(6) When the PLAY button is pressed, what has been set is stored in the memory.


### Notes:

- The lock mode cannot be set for the USER1 file.
- Once set to the lock mode, a file cannot be reset to the factory settings even by pressing the RESET button.

# Setup menus (continued)

## ■ Loading user files

The contents of the USER2, USER3, USER4 or USER5 file can be copied (loaded) into the USER1 file. Also, the contents of the USER1 file can be copied (saved) into the USER2, USER3, USER4 or USER5 file.

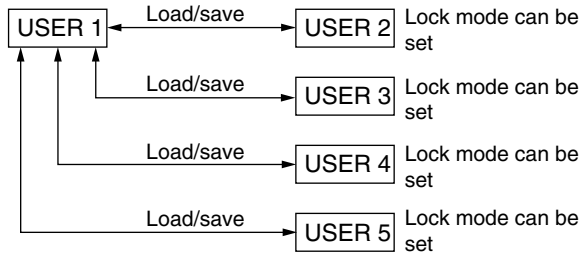

- (1) Press the MENU button.
- (2) Press the REW button or FF button while holding down the PF button to select the USER1 file.
- (3) Operate the joystick, and move the cursor (\*) on the menu screen to item No.A00 (LOAD).

```

SETUP-MENU  MENU
<USER1>    NO .A00-0000
804 BLANK LINE  BLANK
*A00 LOAD      USER2
A01 SAVE      USER2
A02 P. ON LOAD OFF
END
    
```

- (4) Incline the joystick to the left or right to select the user file whose contents are to be loaded into USER1.
- (5) Press the joystick.

The following message appears on the menu screen and counter display.

Menu screen

```

SETUP-MENU  LOAD
USER2 → USER1 OK?
YES<PLAY>/NO<STOP>
    
```

Counter display



The number of the user file selected in step (4) is displayed at ■.

- (6) Press the PLAY button

The settings of the user file selected in step (4) are loaded, and the USER1 menu display appears. If the STOP button is pressed instead, the settings are not changed, and the USER1 menu display appears.

- (7) Press the MENU button.

A confirmation screen now appears.

When the PLAY button is pressed, the USER1 settings are stored in the memory. If the settings are not to be stored in the memory, press the STOP button instead.

## ■ Saving user files

- (1) Press the MENU button.
- (2) Press the REW button or FF button while holding down the PF button to select the USER1 file.
- (3) Operate the joystick, and move the cursor (\*) on the menu screen to item No.A01 (SAVE).

```

SETUP-MENU  MENU
<USER1>    NO .A00-0000
804 BLANK LINE  BLANK
A00 LOAD      USER2
*A01 SAVE      USER2
A02 P. ON LOAD OFF
END
    
```

- (4) Incline the joystick to the left or right to select the user file in which the contents of USER1 are to be saved.

Those user files which have been set to the lock mode do not appear on the display. If all the user files have been set to the lock mode, the "LOCKED" display appears, and the contents of USER1 cannot be saved into any of the user files.

- (5) Press the joystick.


The following message appears on the menu screen and counter display.

Menu screen

```

SETUP-MENU  SAVE
USER1 → USER2 OK?
YES<PLAY>/NO<STOP>
    
```

Counter display



The number of the user file selected in step (4) is displayed at ■.

- (6) Press the PLAY button

The settings of USER1 are saved in the user file selected in step (4) and stored in the memory. If the STOP button is pressed instead, the settings are not changed, and the USER1 menu display appears.

- (7) Press the MENU button.

The regular display is restored.

## ■ Automatically recalling a user file when turning on the power

If the user file to be loaded is selected in advance using setup menu No. A02 (P.ON LOAD), the file will be automatically loaded into USER1 when the power is turned on.

# Setup menus (continued)

## SYSTEM menu

No./Item	Description
11 SYS SC	<p><b>System phase adjustment:</b> Variable range <math>\pm 180^\circ</math> -: Advanced, +: Delayed</p> <p><b>0000 -128 Note:</b> : : If setting operation is <u>0128</u> <u>0</u> performed, the setting : : value does not return to <b>0255 127</b> factory (default) setting.</p>
13 SYS H	<p><b>System phase adjustment:</b> 74 ns steps -: Advanced, +: Delayed</p> <p><b>0000 -128 Note:</b> : : If setting operation is <u>0128</u> <u>0</u> performed, the setting value : : does not return to factory <b>0255 127</b> (default) setting.</p>
14 SCH COARSE	<p><b>SCH phase adjustment:</b> 90° units (The SC phase changes but the H phase does not change.) -: Advanced, +: Delayed</p> <p><b>0000 0</b> <b>0001 90</b> <b>0002 180</b> <b>0003 270</b></p>
15 SCH FINE	<p><b>SCH phase adjustment:</b> Total variable range: <math>\pm 45^\circ</math> or more (The SC phase changes but the H phase does not change.) -: Advanced, +: Delayed</p> <p><b>0000 -32</b> : : <b>0032 0</b> : : <b>0064 32</b></p>
16 AV PHASE	<p><b>This adjusts the audio output phase with respect to the video output:</b> 20.8 <math>\mu</math>s steps -: The audio output phase is advanced with respect to the video output. +: The audio output phase is delayed with respect to the video output.</p> <p><b>0000 -128</b> : : <u>0128</u> <u>0</u> : : <b>0255 127</b></p>

No./Item	Description
18 SYS H OFFSET	<p><b>System phase adjustment.</b></p> <p><b>0000 -3</b> : -13.4 <math>\mu</math>sec <b>0001 -2</b> : -8.96 <math>\mu</math>sec <b>0002 -1</b> : -4.52 <math>\mu</math>sec <b>0003 0</b> : 0 sec <b>0004 1</b> : +4.52 <math>\mu</math>sec <b>0005 2</b> : +8.96 <math>\mu</math>sec <b>0006 3</b> : +13.4 <math>\mu</math>sec <b>Note:</b> If setting operation is performed, the setting value does not return to factory (default) setting.</p>
22 VIDEO LEVEL	<p><b>This sets the video level.</b> Max. variable range: <math>\pm 3</math> dB</p> <p><b>0000 -128</b> : : <u>0128</u> <u>0</u> : : <b>0255 127</b></p>
23 (For AJ-SD255P) SET UP LEVEL (For AJ-SD255E) BLACK LEVEL	<p><b>This sets the setup (black) level.</b> Max. variable range: 14 IRE (100 mV)</p> <p><b>0000 -128</b> : : <u>0128</u> <u>0</u> : : <b>0255 127</b></p>
24 (For AJ-SD255P) HUE (For AJ-SD255E) CHROMA PHASE	<p><b>This sets the hue (chroma phase).</b> Max. variable range: <math>\pm 30^\circ</math></p> <p><b>0000 -128</b> : : <u>0128</u> <u>0</u> : : <b>0255 127</b></p>
25 CHROMA LEVEL	<p><b>This sets the chroma level.</b> Max. variable range: <math>\pm 3</math> dB</p> <p><b>0000 -128</b> : : <u>0128</u> <u>0</u> : : <b>0255 127</b></p>
30 MENU LOCK	<p><b>This selects whether the system file lock mode is to be engaged or released.</b></p> <p><b>0000 OFF</b> : The lock is released (file data can be changed). <b>0001 ON</b> : The lock is engaged (file data cannot be changed).</p>

The underlined items indicates the initial setting.

## Setup menus (continued)

### ■ USER menu <BASIC>

No./Item	Description
001 LOCAL ENA	<p>This selects the buttons which can be operated on the front panel when the CONTROL switch has been set to REMOTE.</p> <p><b>0000 DIS :</b> No buttons can be operated.</p> <p><b><u>0001 ST&amp;EJ :</u></b> Only the STOP and EJECT buttons can be operated.</p> <p><b>0002 ENA :</b> All buttons can be operated.</p>
002 TAPE TIMER	<p>This selects the 12 or 24 hour display for the CTL counter.</p> <p><b>0000 ±12h :</b> 12 hour display <b>0001 24h :</b> 24 hour display</p>
003 REMAIN SEL	<p>This selects whether the remaining tape time and total tape length are to be displayed in the superimposed display of the VIDEO MON connector signals.</p> <p><b>0000 OFF:</b> No display. <b><u>0001 2L :</u></b> The remaining tape time is displayed on the second line. <b>0002 1L :</b> The remaining tape time is displayed on the first line. <b>0003 R/TTL :</b> The remaining tape time is displayed on the first line, and the total tape length is displayed in the second line.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• When "2L" is selected, the remaining tape time is not displayed if "TIME" or "VITC" has been selected as the setup menu item No.008 (DISPLAY SEL) setting.</li> <li>• When "R/TTL" is selected, the total tape length is not displayed if "TIME" or "VITC" has been selected as the setup menu item No.008 (DISPLAY SEL) setting.</li> </ul>

No./Item	Description
008 DISPLAY SEL	<p>This selects what information is to be provided by the time code and other super displays output to the VIDEO MON connector.</p> <p><b>0000 TIME :</b> Data only. (The data indicates the value for whichever of CTL, TC or UB currently selected by the COUNTER button.)</p> <p><b><u>0001 T&amp;STA :</u></b> Data and operation status.</p> <p><b>0002 T&amp;S&amp;M :</b> Data, operation status and mode.</p> <p><b>0003 T&amp;RT :</b> Data and REC TIME <b>0004 T&amp;YMD :</b> Data and REC DATE (year/month/day)</p> <p><b>0005 T&amp;MDY :</b> Data and REC DATE (month/day/year)</p> <p><b>0006 T&amp;DMY :</b> Data and REC DATE (day/month/year)</p> <p><b>0007 T&amp;UB :</b> Data and user bit. However, when UB has been selected with the COUNTER button, the time code is displayed after the user bit.</p> <p><b>0008 T&amp;CTL :</b> Data and CTL data. However, when CTL has been selected with the COUNTER button, the time code is displayed after the CTL data.</p> <p><b>0009 T&amp;T :</b> The data and time code recorded in the VAUX area are displayed.</p> <p><b>0010 VITC:</b> The time code and user bit recorded in the VAUX area are displayed.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• Mode display: DVCPRO (25 Mbps) = DVCPRO, DV = DV, DVCAM = DVCAM</li> <li>• An error message appears if a warning or error has occurred when "T&amp;S&amp;M" has been selected as this setting.</li> <li>• REC TIME and REC DATE are displayed during DV/DVCAM, playback only. With the DVCPRO (25 Mbps) format, the operating mode is displayed.</li> </ul>

The underlined items indicates the initial setting.

# Setup menus (continued)

## ■ USER menu <BASIC>

No./Item	Description
009 CHARA H-POS	<p>This sets the position of the characters on the horizontal plane for the time code and other super displays output to the VIDEO MON connector.</p> <p>0000 0 : : <u>0004</u> 4 : : 0016 16</p> <p><b>Note:</b> Press the joystick, then you can set the position of the characters by inclining it up or down or to the left or right.</p>
010 CHARA V-POS	<p>This sets the position of the characters on the vertical plane for the time code and other super displays output to the VIDEO MON connector.</p> <p>(For AJ-SD255P) (For AJ-SD255E) 0000 0 0000 0 : : : : <u>0018</u> 18 <u>0023</u> 23 : : : : 0022 22 0028 28</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• Press the joystick, then you can set the position of the characters by inclining it up or down or to the left or right.</li> <li>• When the DISPLAY SEL status causes characters to extend beyond the edges of the screen, the setting value is changed but the characters are automatically displayed at a position on the screen where they will not extend.</li> </ul>
011 CHARA TYPE	<p>This selects the display type for the super display output to the VIDEO MON connector as well as for displays such as the setting menu, etc.</p> <p>0000 <u>WHITE</u> : White characters against a black background. 0001 <u>W/OUT</u> : White characters with a black border.</p>

No./Item	Description
017 CHARA SIZE	<p>This selects the size of the characters for the superimposed display output from the VIDEO MON connector.</p> <p>0000 <u>NORMAL</u> : Standard size 0001 <u>LARGE</u> : 4 times larger than the standard size</p> <p><b>Note:</b> When LARGE has been selected, only time data is displayed, regardless of the setup menu No.008 (DISPLAY SEL) setting.</p>

The underlined items indicates the initial setting.

# Setup menus (continued)

## ■ USER menu <OPERATION>

No./Item	Description
100 SEARCH ENA	<p>This sets the method used to transfer to the search mode (stick operation).</p> <p><u>0000</u> <b>STICK</b> : Operation transfers to the search mode when the SEARCH button is pressed or the stick is operated.</p> <p>0001 <b>KEY</b> : Operation is not transferred to the search mode unless the SEARCH button is pressed.</p>
101 SHTL MAX	<p>This sets the maximum speed for shuttle</p> <p>0000 <b>x8.4</b> : 8.4x normal speed 0001 <b>x16</b> : 16x normal speed 0002 <b>x32</b> : 32x normal speed</p>
102 FF. REW MAX	<p>This sets the maximum speed for FF and REW operations.</p> <p>0000 <b>x32</b> : 32 x normal speed 0001 <b>x60</b> : 60 x normal speed <u>0002</u> <b>x100</b> : 100 x normal speed</p> <p><b>Note:</b> With mini DV or mini DVCAM cassette, the maximum speed is set to 32x regardless of this item's settings.</p>
104 REF ALARM	<p>This selects whether to warn the operator when the REF. VIDEO signal has not been connected.</p> <p>0000 <b>OFF</b> : Warning is not given.</p> <p><u>0001</u> <b>ON</b> : Warning is given by the flashing STOP lamp.</p> <p><b>Note:</b> Video and audio output may be disturbed when the reference video signal is not input, so it is recommended that a system which inputs the reference video signal be used.</p>
107 PLAY DELAY	<p>This set the play delay time in frame increments.</p> <p><u>0000</u> <b>0</b> : : 0015 <b>15</b></p>
108 CAP.LOCK	<p>This selects the CAPSTAN LOCK mode.</p> <p>(For AJ-SD255P) (For AJ-SD255E)</p> <p>0000 <b>2F</b> : 2F mode 0000 <b>2F</b> : 2F mode 0001 <b>4F</b> : 4F mode 0001 <b>4F</b> : 4F mode 0002 <b>8F</b> : 8F mode</p> <p><b>Note:</b> Color framing for the VIDEO MON connector output is not guaranteed.</p>

No./Item	Description
109 AUTO REW	<p>This selects whether to rewind the tape automatically to the tape start when the tape end is detected.</p> <p>0000 <b>OFF</b> : The tape stops at the tape end.</p> <p><u>0001</u> <b>ON</b> : The tape is rewound to the tape start.</p> <p><b>Note:</b> The tape stops near the BEGIN point when setup menu No. 160 (MEMORY MODE) is set to M-STOP.</p>
111 FRZ MODE SEL	<p>This selects the output picture in the STANDBY OFF (HALF LOADING) and EJECT modes.</p> <p>0000 <b>DIS</b> : The video output is muted.</p> <p><u>0001</u> <b>STB OFF</b> : When the STANDBY OFF (HALF LOADING) mode is established, the picture being played back at the time is frozen and output.</p> <p>0002 <b>SOF&amp;EJ</b> : When the STANDBY OFF (HALF LOADING) or EJECT mode is established, the picture being played back at the time is frozen and output.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>•The freeze status complies with the setup menu item No.605 (FREEZE SEL) setting.</li> <li>•The playback screen freezes only when setup menu No. 122 (STOP EE SEL) is set to STOP.</li> <li>•In the EJECT mode, the freeze image is output only when BLACK or GRAY is selected as the setup menu item No.120 (EJECT EE SEL) setting.</li> </ul>
112 V IN SEL INH	<p>This selects whether video input switching using the INPUT SELECT button is to be enabled or disabled.</p> <p>0000 <b>OFF</b> : Video input switching using the INPUT SELECT button is enabled.</p> <p><u>0001</u> <b>ON</b> : Video input switching using the INPUT SELECT button is disabled.</p> <p>0002 <b>REC</b> : Video input switching using the INPUT SELECT button after the unit has been transferred to a recording mode is disabled.</p>
113 A IN SEL INH	<p>This selects whether audio input switching using the INPUT SELECT button is to be enabled or disabled.</p> <p>0000 <b>OFF</b> : Audio input switching using the INPUT SELECT button is enabled.</p> <p><u>0001</u> <b>ON</b> : Audio input switching using the INPUT SELECT button is disabled.</p> <p>0002 <b>REC</b> : Audio input switching using the INPUT SELECT button after the unit has been transferred to a recording mode is disabled.</p>

The underlined items indicates the initial setting.

## Setup menus (continued)

### ■ USER menu <OPERATION>

No./Item	Description
114 REC INH LAMP	<p>This selects whether to cause the REC INH lamp to flash or light up when the cassette has been set to the accidental erasure prevention status.</p> <p><u>0000</u> LIGHT : The lamp lights up. 0001 FLASH : The lamp flashes. <b>Note:</b> When the REC INHIBIT switch is set to ON, the REC INH lamp always lights regardless of the general setting status.</p>
115 EJECT SW INH	<p>This selects whether to enable or disable the operation of the EJECT button on the front panel.</p> <p>0000 REC : Operation is disabled while the unit is in the recording mode. 0001 OFF : Operation is enabled in all modes.</p>
120 EJECT EE SEL	<p>This selects the modes for the picture and sound output when the tape is ejected.</p> <p>0000 EE : EE mode 0001 BLACK : The picture turns black, and the sound is muted. 0002 GRAY : The picture turns gray, and the sound is muted. <b>Note:</b> The IEEE1394 digital output video will be black even if GRAY is selected.</p>
121 F/R EE SEL	<p>This selects whether the EE mode or playback mode is to be established during fast forwarding or rewinding.</p> <p>0000 EE : EE mode 0001 TAPE : Playback mode</p>
122 STOP EE SEL	<p>This select whether the EE mode or playback mode is to be established when operation is stopped.</p> <p>0000 EE : EE mode 0001 TAPE : Playback mode <b>Note:</b> The selection is complied with even in the standby OFF mode. However, the picture will turn gray (black for IEEE1394 digital output) when TAPE is selected.</p>

No./Item	Description
160 MEMORY MODE	<p>This sets the repeat play mode.</p> <p>0000 OFF : No repeat play (normal operation) 0001 M-STOP : The tape stops near the BEGIN point when a FF or REW operation has been performed. 0002 REPT1 : During playback, the tape is rewound to the BEGIN point and stopped when the END point is reached. 0003 CONT : During playback, the tape is rewound to the BEGIN point and then played, and these steps are repeated when the END point is reached.</p>
161 CTL BGN or TC BGN	<p>This sets the BEGIN point in the repeat play mode.</p> <p>Whether TC or CTL is displayed on the counter when the COUNTER button is pressed is set here. When there is no setting, --:--:-- appears, and the tape start serves as the BEGIN point.</p>
162 END	<p>This sets the END point in the repeat play mode.</p> <p>Whether TC or CTL is displayed on the counter when the COUNTER button is pressed is set here. When there is no setting, --:--:-- appears, and the tape end serves as the END point.</p>
163 REPT MODE	<p>This sets the output image when the tape returns to the BEGIN point in the repeat play mode.</p> <p>0000 FREEZE : The tape returns to the BEGIN point while the playback image at the END point remains frozen. 0001 BLACK : The tape returns to the BEGIN point while a BLACK picture remains on the screen. 0002 EE_SEL : The tape returns to the BEGIN point with an image which is in compliance with the setup menu item No.121 (F/R EE SEL) setting. <b>Note:</b> If, when FREEZE has been selected, the END point has been set at the tape end, the playback image will not be frozen properly. Set the END point in a range where pictures have been recorded.</p>

### ■ USER menu <INTERFACE>

No./Item	Description
202 ID SEL	<p>This sets the ID information to be returned to the controller.</p> <p>0000 OTHER : 0001 DVCPRO : 0002 ORIG : <b>Notes:</b> • ID information of any VTR except for the DVCPRO's is set in OTHER. • The ORIG setting should only be used when a Panasonic controller (AG-A850 etc. sold separately) is connected.</p>

The underlined items indicates the initial setting.



## Setup menus (continued)

### ■ USER menu <TAPE PROTECT>

No./Item	Description	No./Item	Description
400 STILL TIMER	<p>This menu item is for selecting the time to elapse before the tape protection mode is established when a DVCPRO tape is used.</p> <p>It is also for selecting the time to elapse before the tape protection mode is established when the VTR has been left standing in the STOP or search STILL (JOG, SLOW or SHTL) mode. (Unit: s = second, min = minute)</p> <p><b>0000 0.5s</b>  <b>0001 5s</b>  <b>0002 10s</b>  <b>0003 20s</b>  <b>0004 30s</b>  <b>0005 40s</b>  <b>0006 50s</b>  <b>0007 1min</b>  <u><b>0008 2min</b></u></p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• STEP FWD and HALF LOADING are provided in the tape protection mode. Either of these can be set for STOP and SEARCH STILL.</li> <li>• The cumulative standby time at the same tape position increases when transmitting programs or otherwise using identical materials repeatedly. In order to protect the tape, it is recommended that the shortest possible setting for the standby time in the same tape location is used.</li> </ul>	403 STOP PROTECT	<p>When the time selected as the setup menu item No. 400 (STILL TIMER) setting elapses while the unit is in the STOP mode, the unit automatically enters one of the tape protection modes. This menu item is for selecting which tape protection mode the unit is to enter.</p> <p><b>0000 STEP</b> : STEP FWD  <u><b>0001 HALF</b></u> : HALF LOADING</p> <p><b>Note:</b>  When STEP FWD is selected, the unit is automatically transferred to the STANDBY OFF (HALF LOADING) mode when the total time during which it has been left standing in the STOP mode reaches 30 minutes (or 1 minute for a DV/DVCAM tape).</p>
401 SRC PROTECT	<p>When the time selected as the setup menu item No. 400 (STILL TIMER) setting elapses while the unit is in the search STILL (JOG/SLOW/SHTL) mode, the unit automatically enters one of the tape protection modes. This menu item is for selecting which tape protection mode the unit is to enter.</p> <p><u><b>0000 STEP</b></u> : STEP FWD  <b>0001 HALF</b> : HALF LOADING</p> <p><b>Note:</b>  When STEP FWD is selected, the unit automatically goes into the STANDBY OFF (HALF LOADING) mode when the total time for which the unit is left standing in the still status reaches 30 minutes (or 1 minute for a DV/DVCAM tape).</p>	404 DV STILL TMR	<p>This menu item is for selecting the time to elapse before the tape protection mode is established when a DV or DVCAM tape is being used.</p> <p>It is for selecting the time to elapse before the tape protection mode is established when the VTR has been left standing in the STOP or search STILL (JOG, SLOW or SHTL) mode. (Unit: s = second, min = minute)</p> <p><b>0000 0.5s</b>  <b>0001 5s</b>  <u><b>0002 10s</b></u>  <b>0003 20s</b></p> <p><b>Note:</b>  When using the unit in temperatures below 59°F (15 °C), set this item to 10 seconds to protect the tape and video heads.</p>
402 DRUM STDBY	<p>This selects the drum operation in the STANDBY OFF (HALF LOADING) mode.</p> <p><b>0000 OFF</b> :  The drum stops rotating.  <u><b>0001 ON</b></u> :  The drum continues rotating.</p>		

The underlined items indicates the initial setting.

# Setup menus (continued)

## ■ USER menu <TIME CODE>

No./Item	Description
500 VITC BLANK	<p>For selecting whether to output the VITC signal at the positions selected by setup menu items No. 501 (VITC POS-1) and No. 502 (VITC POS-2).</p> <p><b>0000 BLANK :</b> VITC signals are not output.</p> <p><b>0001 THRU :</b> VITC signals are output.</p>
501 VITC POS-1	<p>This sets the position where the VITC signal is to be inserted.</p> <p>(For AJ-SD255P)      (For AJ-SD255E)</p> <p><b>0000 10L</b>      <b>0000 7L</b></p> <p>      :           :           :</p> <p><b>0006 16L</b>      <b>0004 11L</b></p> <p>      :           :           :</p> <p><b>0010 20L</b>      <b>0015 22L</b></p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• The same line as the one used for the setup menu items No. 502 (VITC POS-2) and No. 662 (UMID POS) setting cannot be set.</li> <li>• The default settings are not restored even if the RESET button is pressed while holding down the SEARCH button.</li> </ul>
502 VITC POS-2	<p>This sets the position where the VITC signal is to be inserted.</p> <p>(For AJ-SD255P)      (For AJ-SD255E)</p> <p><b>0000 10L</b>      <b>0000 7L</b></p> <p>      :           :           :</p> <p><b>0008 18L</b>      <b>0006 13L</b></p> <p>      :           :           :</p> <p><b>0010 20L</b>      <b>0015 22L</b></p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• The same line as the one used for the setup menu items No. 501 (VITC POS-1) and No. 662 (UMID POS) setting cannot be set.</li> <li>• The default settings are not restored even if the RESET button is pressed while holding down the SEARCH button.</li> </ul>
503 TCG REGEN	<p>This selects the signal to be regenerated when the time code generator (TCG) in the REGEN mode.</p> <p><b>0000 TC&amp;UB :</b> Both the time code and user bit are regenerated.</p> <p><b>0001 TC :</b> Only the time code is regenerated.</p> <p><b>0002 UB :</b> Only the user bit is regenerated.</p>

No./Item	Description
505 EXT TC SEL	<p>This selects the time code to be used when an external time code is to be used.</p> <p><b>0000 LTC :</b> The LTC of the TIME CODE IN connector is used.</p> <p><b>0001 VITC :</b> The VITC of the input video signal or the timecode of the IEEE1394 digital input signal is used.</p>
506 BINARY GP	<p>This sets the usage status of the user bit of the time code generated by the TCG.</p> <p><b>0000 000 :</b> NOT SPECIFIED (character set not specified)</p> <p><b>0001 001 :</b> ISO CHARACTER (8 bits character set based on ISO646, ISO2022)</p> <p><b>0002 010 :</b> UNASSIGNED 1 (undefined)</p> <p><b>0003 011 :</b> UNASSIGNED 2 (undefined)</p> <p><b>0004 100 :</b> UNASSIGNED 3 (undefined)</p> <p><b>0005 101 :</b> PAGE/LINE</p> <p><b>0006 110 :</b> UNASSIGNED 4 (undefined)</p> <p><b>0007 111 :</b> UNASSIGNED 5 (undefined)</p>
507 PHASE CORR	<p>This selects whether to control the phase correction of the LTC which is output from the TIME CODE OUT connector.</p> <p><b>0000 OFF :</b> Phase correction control is not performed.</p> <p><b>0001 ON :</b> Phase correction control is performed.</p>
508 TCG CF FLAG	<p>This selects whether the CF flag of the TCG is to ON.</p> <p><b>0000 OFF :</b> CF flag is OFF.</p> <p><b>0001 ON :</b> CF flag is ON.</p>
509 DF MODE (For AJ-SD255P)	<p>This selects the DF or NDF mode for CTL and TCG.</p> <p><b>0000 DF :</b> The drop frame mode is used.</p> <p><b>0001 NDF :</b> The non-drop frame mode is used.</p> <p><b>Note:</b> DF/NDF switching is valid only when the CONTROL switch is set to LOCAL or the setup menu No. 001 (LOCAL ENA) is set to ENA.</p>

The underlined items indicates the initial setting.

## Setup menus (continued)

### ■ USER menu <TIME CODE>

No./Item	Description
510 TC OUT REF	<p>This is used to switch the phase of the time code, which is output from the TIME CODE OUT connector, for the external LTC input when the TCG switch is at the EXT position.</p> <p><u>0000 V OUT</u> : Time code is synchronized with output video signal.</p> <p><u>0001 TC_IN</u> : Time code is synchronized with external time code input.</p>
511 VITC OUT	<p>This selects how the VITC which is to be superimposed onto the output video signal is to be output.</p> <p><u>0000 SBC</u> : During recording: The input time code, which was selected by the setup menu No. 505 (EXT TC SEL) setting and TCG switch, is output as the VITC. During playback: The time code recorded in the SBC area is output as the VITC.</p> <p><u>0001 VAUX</u> : During recording: The time code detected from the input video signal is output as the VITC. During playback: The time code recorded in the VAUX area is output as the VITC.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• The time code detected from the input video signal is automatically recorded in the VAUX area while pictures are being recorded.</li> <li>• If Y P<sub>B</sub> P<sub>R</sub>, CMPST, S-VIDEO or SDI is selected as the input signal, the VITC output during recording is a timecode superimposed on the input signal regardless of the above setting.</li> </ul>
513 RUN MODE	<p>This sets the operation mode which is to make the internal time code generator advance.</p> <p><u>0000 REC</u> : The internal time code generator is advanced during recording.</p> <p><u>0001 FREE</u> : When the power is on, the internal time code generator is advanced regardless of the operation mode.</p>

No./Item	Description
514 VITC GEN	<p>This selects whether or not to record the internal time code generator value in the VAUX area.</p> <p><u>0000 OFF</u> : The internal time code generator value is not recorded in the VAUX area. When video signals on which the time code has been recorded are input, the time code of the input signals is recorded in the VAUX area.</p> <p><u>0001 ON</u> : The internal time code generator value is recorded in the VAUX area.</p>

#### SBC (sub code data) area:

This area is separate from the video and audio data area on the helical track. The time code complying with SMPTE/EBU standards is stored here. As with the conventional LTC (linear time code), the time code can be read even during rewinding or fast forwarding. It can also be read out when the tape has stopped.

#### VAUX (video auxiliary data) area:

This area is to be found in the video data area on the helical track. The additional information relating to the video data is stored here.

#### Note:

The time code and user bit are controlled during tape playback by the data which has been recorded in the SBC area. This means that all the data recorded in the SBC area alone is used as the data which is to be indicated on the counter display section in the middle of the front panel or in the superimposed display, or as the data which is to be transmitted to the editing controller or other unit.

The underlined items indicates the initial setting.

# Setup menus (continued)

## ■ USER menu <VIDEO>

No./Item	Description
600 INT SG	This selects the internal reference signal.  0001 <b>BB</b> : The black burst is generated. 0002 <b>CB100</b> : 100% color bars are generated. 0003 <b>CB75</b> : 75% color bars are generated.
602 V-MUTE SEL	This selects whether to mute the video output signals when a blank on the tape has been detected during playback.  0000 <b>N-MUTE</b> : No muting. (Freeze) 0001 <b>LOW RF</b> : Muting. (Set to gray.)
603 CC (F1) BLANK (For AJ-SD255P)	This selects ON or OFF for the closed caption signal of the first field.  0000 <b>BLANK</b> : Signal is forcibly blanked. 0001 <b>THRU</b> : Signal is not blanked.
604 CC (F2) BLANK (For AJ-SD255P)	This selects ON or OFF for the closed caption signal of the second field.  0000 <b>BLANK</b> : Signal is forcibly blanked. 0001 <b>THRU</b> : Signal is not blanked.
605 FREEZE SEL	This selects the freeze mode for still pictures.  0000 <b>FIELD</b> : Field freeze. 0001 <b>FRAME</b> : Frame freeze. <b>Note:</b> When frame freeze has been selected, the frame slow status is established with the slow setting.
609 EDH  YA94G	This selects whether to superimpose EDH onto the SDI output signals.  0000 <b>OFF</b> : EDH is not superimposed. 0001 <b>ON</b> : EDH is superimposed.
610 P <sub>B</sub> /P <sub>R</sub> IN LV (For AJ-SD255P)	This selects the analog component input level.  0000 <b>M II</b> : M II level 0001 <b>B-CAM</b> : B-CAM level
614 P <sub>B</sub> /P <sub>R</sub> OUT LV (For AJ-SD255P)	This selects the analog component output level.  0000 <b>M II</b> : M II level 0001 <b>B-CAM</b> : B-CAM level

No./Item	Description
622 SETUP (For AJ-SD255P)	<b>For setting 7.5% setup processing to be performed on input and output signals.</b> When the STOP button is pressed, operation is transferred to the sub-screen, and the setup level is set for each output. To return from the sub-screen, press the STOP button again.
<b>Sub-screen</b>	
00 CMPST IN	This selects the 7.5% setup processing for the input composite and S-Video signal.  0000 <b>THRU</b> : The signal is recorded in its original form. 0001 <b>CUT</b> : The signal is recorded with the 7.5% setup removed.
01 CMPST OUT	This selects the 7.5% setup processing for the input composite and S-Video signal.  0000 <b>THRU</b> : The signal is output in its original form. 0001 <b>ADD</b> : The signal is output with the 7.5% setup added. <b>Note:</b> Bear in mind the setting for sub-screen item No. 03 (CMPNT OUT) of setup menu item No. 622 (SETUP).
02 CMPNT IN	This selects the 7.5% setup processing for the input component signal.  0000 <b>THRU</b> : The signal is recorded in its original form. 0001 <b>CUT</b> : The signal is recorded with the 7.5% setup removed.
03 CMPNT OUT	This selects the 7.5% setup processing for the output composite, component and serial (digital) signal.  0000 <b>THRU</b> : The signal is output in its original form. 0001 <b>CUT</b> : The signal is output with the 7.5% setup removed. 0002 <b>ADD</b> : The signal is output with the 7.5% setup added.

The underlined items indicates the initial setting.

**YA94G** This appears only when the optional board AJ-YA94G has been installed.

# Setup menus (continued)

## ■ USER menu <VIDEO>

No./Item	Description
624 <b>CC REC</b> (For AJ-SD255P)	<p><b>For selecting whether to record the closed caption signals multiplexed on the input signals on the tape.</b></p> <p><b>0000 OFF :</b> No closed caption signal is recorded.</p> <p><b>0001 ON :</b> When a closed caption signal is detected from the selected input signal, it can be recorded.</p> <p><b>Note:</b> If 1394 signals have been selected as the input signals using the INPUT SELECT button, the closed caption signals which have been multiplexed onto the input signals will be recorded on the tape regardless of the setting.</p>
645 <b>WIDE SELECT</b>	<p><b>This selects whether or not to record the wide-screen information on the tape.</b></p> <p><b>0001 WIDE :</b> The wide-screen information is recorded on the tape.</p> <p><b>0002 NORMAL :</b> The wide-screen information is not recorded on the tape.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• If 1394 has been selected as the input signals using the INPUT SELECT button, the wide-screen information on the input signals will be recorded regardless of this menu's setting.</li> <li>• With input signals other than 1394 signals, the wide signals will not be detected. Select WIDE as the setting when recording the wide-screen information on the tape.</li> <li>• Regardless of the above setting, the wide-screen information cannot be superimposed onto tape playback and output.</li> </ul>
660 <b>UMID REC</b>	<p><b>This selects whether or not to record the UMID information on the tape.</b></p> <p><b>0000 OFF :</b> UMID information is not recorded on the tape.</p> <p><b>0001 ON :</b> UMID information is recorded on the tape.</p> <p><b>Note:</b> If 1394 has been selected as the input signals using the INPUT SELECT button, UMID will not be recorded even when it is set to ON unless the input signal can be detected.</p>

No./Item	Description														
661 <b>UMID GEN</b>	<p><b>This selects the basic UMID information to be recorded on the tape when ON has been selected as the setup menu item No. 660 (UMID REC) setting.</b></p> <p><b>0000 INT :</b> Newly created basic UMID information of this unit is always recorded.</p> <p><b>0001 EXT :</b> The basic UMID information of the input signals is recorded. Newly created basic UMID information of this unit is recorded if there is no basic UMID information on the input signals.</p> <p><b>Note:</b> The source pack (of the UMID information) of the input signal will be recorded on the tape, regardless of this menu's setting.</p> <p><b>YA94G</b></p> <p><b>YAD255G</b></p>														
662 <b>UMID POS</b>	<p><b>This sets the line on which the UMID information is to be superimposed.</b></p> <table style="width: 100%; border: none;"> <tr> <td style="text-align: center;">(For AJ-SD255P)</td> <td style="text-align: center;">(For AJ-SD255E)</td> </tr> <tr> <td><b>0000 BLANK</b></td> <td><b>0000 BLANK</b></td> </tr> <tr> <td><b>0001 12L</b></td> <td><b>0001 8L</b></td> </tr> <tr> <td style="text-align: center;">:</td> <td style="text-align: center;">:</td> </tr> <tr> <td><b>0006 17L</b></td> <td><b>0010 17L</b></td> </tr> <tr> <td style="text-align: center;">:</td> <td style="text-align: center;">:</td> </tr> <tr> <td><b>0008 19L</b></td> <td><b>0015 22L</b></td> </tr> </table> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• The line selected for the setup menu item No. 501 (VITC POS-1) and No. 502 (VITC POS-2) settings cannot be selected for this item.</li> <li>• The default settings are not restored even if the RESET button is pressed while holding down the SEARCH button.</li> </ul> <p><b>YA94G</b></p>	(For AJ-SD255P)	(For AJ-SD255E)	<b>0000 BLANK</b>	<b>0000 BLANK</b>	<b>0001 12L</b>	<b>0001 8L</b>	:	:	<b>0006 17L</b>	<b>0010 17L</b>	:	:	<b>0008 19L</b>	<b>0015 22L</b>
(For AJ-SD255P)	(For AJ-SD255E)														
<b>0000 BLANK</b>	<b>0000 BLANK</b>														
<b>0001 12L</b>	<b>0001 8L</b>														
:	:														
<b>0006 17L</b>	<b>0010 17L</b>														
:	:														
<b>0008 19L</b>	<b>0015 22L</b>														

The underlined items indicates the initial setting.

**YA94G** This appears only when the optional board AJ-YA94G has been installed.

**YAD255G** This appears only when the optional board AJ-YAD255G has been installed.

# Setup menus (continued)

## ■ USER menu <AUDIO>

No./Item	Description
701 CH1 IN LV	This selects the audio input (CH1) reference level switching.  0000 4dB <u>0001</u> 0dB 0002 -20dB
702 CH2 IN LV	This selects the audio input (CH2) reference level switching.  0000 4dB <u>0001</u> 0dB 0002 -20dB
706 CH1 OUT LV	This selects the audio output (CH1) reference level switching.  0000 4dB <u>0001</u> 0dB 0002 -20dB
707 CH2 OUT LV	This selects the audio output (CH2) reference level switching.  0000 4dB <u>0001</u> 0dB 0002 -20dB

No./Item	Description
722 REC CH1	This selects the input signal to be recorded on the audio CH1 track.  0000 <u>CH1</u> : Audio input CH1 signal. 0001 <u>CH2</u> : Audio input CH2 signal. 0002 <u>CH1+2</u> : Mixed audio input CH1 and CH2 signal.
723 REC CH2	This selects the input signal to be recorded on the audio CH2 track.  0000 <u>CH1</u> : Audio input CH1 signal. 0001 <u>CH2</u> : Audio input CH2 signal. 0002 <u>CH1+2</u> : Mixed audio input CH1 and CH2 signal.
727 PB FADE	This selects the processing method for the audio edit points (IN point, OUT point) during playback.  0000 <u>AUTO</u> : According to the status during recording. 0001 <u>CUT</u> : Forced CUT 0002 <u>FADE</u> : Forced FADE
728 EMBEDDED AUD YA94G	This selects whether to superimpose the audio data onto the SDI output.  0000 <u>OFF</u> : Data is not superimposed. 0001 <u>ON</u> : Data is superimposed.

The underlined items indicates the initial setting.

**YA94G** This appears only when the optional board AJ-YA94G has been installed.

## Setup menus (continued)

### ■ USER menu <AUDIO>

No./Item	Description
734 MONI SEL INH	<p>This selects whether the operation of the MONITOR SELECT button on the front panel is to be enabled or disabled.</p> <p><u>0000 OFF</u> : Operation is enabled.            0001 ON : Operation is disabled.            0002 ON1 :            Operation is disabled in the FULL display mode and enabled only in the FINE display mode.</p>
750 DV PB ATT	<p>This selects the audio output level during DV playback.</p> <p><u>0000 OFF</u> :            The audio output level is not attenuated.            0001 ON :            The audio output level is attenuated (reduced).</p>
751 REC PT MUTE	<p>This selects whether to mute the sound where recordings are joined during DV/DVCAM</p> <p><u>0000 OFF</u> : The sound is not muted.            0001 ON : The sound is muted.</p>
752 DV OUTPUT	<p>This selects the AUDIO CH1 and CH2 output signals during DV or DVCAM format playback.</p> <p><u>0000 ST1</u> :            The CH1 track signals are output to CH1 and the CH2 track signals to CH2. (Only the sound during shooting is output.)            0001 ST2 :            The CH3 track signals are output to CH1 and the CH4 track signals to CH2. (Only the audio dubbing sound is output.)            0002 ST1+2 :            The mixed CH1 and CH3 track signals are output to CH1 and the mixed CH2 and CH4 track signals to CH2. (The sound during shooting and audio dubbing sound are output simultaneously.)</p> <p><b>Note:</b>            This menu item takes effect only when a DV or DVCAM cassette tape with a 32 kHz/4-channel recording is played back.</p>
753 REF LEVEL	<p><b>For setting the audio reference level.</b></p> <p>(For AJ-SD255P) (For AJ-SD255E)  <u>0000 FS-20</u> : -20 dB 0000 FS-20 : -20 dB            0001 FS-18 : -18 dB 0001 FS-18 : -18 dB            0002 FS-12 : -12 dB 0002 FS-12 : -12 dB</p>

The underlined items indicates the initial setting.

# Setup menus (continued)

## ■ USER menu <V BLANK>

No./Item	Description																																				
802  TELETEXT SEL (For AJ-SD255P)	<p><b>For selecting the type of teletext signals to be recorded.</b></p> <p><b>0000 MOJI :</b> MOJI system  <b>0001 NABTS :</b> NABTS system  <b>Note:</b>            Signals like VITC signals are often mistakenly detected as teletext signals when the NABTS system has been selected.            If this happens, select MANU as the setting for setup menu No. 803 (TELETEXT DET), then select the line for teletext signals.</p>																																				
803  TELETEXT DET	<p><b>For selecting the method used to detect the lines in which the teletext signals are to be recorded.</b></p> <p><b>0000 OFF:</b>            The teletext signals are not recorded.  <b>0001 AUTO :</b>            The teletext signals are automatically detected  <b>0002 MANU :</b>            The lines in which the teletext signals are to be recorded are selected and set.  <b>Notes:</b>  <ul style="list-style-type: none"> <li>• The number of lines in which the teletext signals can be recorded differs depending on the setup menu item No.660 (UMID REC) setting. (See "Number of lines which can be set for teletext".)</li> <li>• When setting "MANU" is selected and the STOP button is pressed, operation transfers to the sub-screen, and the number of recording lines can be selected.                To return from the sub-screen, press the STOP button again.</li> </ul> </p>																																				
<b>Sub-screen</b>																																					
(For AJ-SD255P) 00 REC LINE1 : 12 REC LINE13  (For AJ-SD255E) 00 REC LINE1 : 13 REC LINE14	<p><b>For selecting the lines in which the teletext signals are to be recorded.</b></p> <table border="0"> <tr> <td>(For AJ-SD255P)</td> <td>(For AJ-SD255E)</td> </tr> <tr> <td><b>0000 OFF</b></td> <td><b>0000 OFF</b></td> </tr> <tr> <td><b>0002 11&amp;274</b></td> <td><b>0001 7&amp;320</b></td> </tr> <tr> <td><b>0003 12&amp;275</b></td> <td><b>0002 8&amp;321</b></td> </tr> <tr> <td><b>0004 13&amp;276</b></td> <td><b>0003 9&amp;322</b></td> </tr> <tr> <td><b>0005 14&amp;277</b></td> <td><b>0004 10&amp;323</b></td> </tr> <tr> <td><b>0006 15&amp;278</b></td> <td><b>0005 11&amp;324</b></td> </tr> <tr> <td><b>0007 16&amp;279</b></td> <td><b>0006 12&amp;325</b></td> </tr> <tr> <td><b>0008 17&amp;280</b></td> <td><b>0007 13&amp;326</b></td> </tr> <tr> <td><b>0009 18&amp;281</b></td> <td><b>0008 14&amp;327</b></td> </tr> <tr> <td><b>0010 19&amp;282</b></td> <td><b>0009 15&amp;328</b></td> </tr> <tr> <td><b>0011 20&amp;283</b></td> <td><b>0010 16&amp;329</b></td> </tr> <tr> <td><b>0012 21&amp;284</b></td> <td><b>0011 17&amp;330</b></td> </tr> <tr> <td><b>0013 22</b></td> <td><b>0012 18&amp;331</b></td> </tr> <tr> <td></td> <td><b>0013 19&amp;332</b></td> </tr> <tr> <td></td> <td><b>0014 20&amp;333</b></td> </tr> <tr> <td></td> <td><b>0015 21&amp;334</b></td> </tr> <tr> <td></td> <td><b>0016 22</b></td> </tr> </table>	(For AJ-SD255P)	(For AJ-SD255E)	<b>0000 OFF</b>	<b>0000 OFF</b>	<b>0002 11&amp;274</b>	<b>0001 7&amp;320</b>	<b>0003 12&amp;275</b>	<b>0002 8&amp;321</b>	<b>0004 13&amp;276</b>	<b>0003 9&amp;322</b>	<b>0005 14&amp;277</b>	<b>0004 10&amp;323</b>	<b>0006 15&amp;278</b>	<b>0005 11&amp;324</b>	<b>0007 16&amp;279</b>	<b>0006 12&amp;325</b>	<b>0008 17&amp;280</b>	<b>0007 13&amp;326</b>	<b>0009 18&amp;281</b>	<b>0008 14&amp;327</b>	<b>0010 19&amp;282</b>	<b>0009 15&amp;328</b>	<b>0011 20&amp;283</b>	<b>0010 16&amp;329</b>	<b>0012 21&amp;284</b>	<b>0011 17&amp;330</b>	<b>0013 22</b>	<b>0012 18&amp;331</b>		<b>0013 19&amp;332</b>		<b>0014 20&amp;333</b>		<b>0015 21&amp;334</b>		<b>0016 22</b>
(For AJ-SD255P)	(For AJ-SD255E)																																				
<b>0000 OFF</b>	<b>0000 OFF</b>																																				
<b>0002 11&amp;274</b>	<b>0001 7&amp;320</b>																																				
<b>0003 12&amp;275</b>	<b>0002 8&amp;321</b>																																				
<b>0004 13&amp;276</b>	<b>0003 9&amp;322</b>																																				
<b>0005 14&amp;277</b>	<b>0004 10&amp;323</b>																																				
<b>0006 15&amp;278</b>	<b>0005 11&amp;324</b>																																				
<b>0007 16&amp;279</b>	<b>0006 12&amp;325</b>																																				
<b>0008 17&amp;280</b>	<b>0007 13&amp;326</b>																																				
<b>0009 18&amp;281</b>	<b>0008 14&amp;327</b>																																				
<b>0010 19&amp;282</b>	<b>0009 15&amp;328</b>																																				
<b>0011 20&amp;283</b>	<b>0010 16&amp;329</b>																																				
<b>0012 21&amp;284</b>	<b>0011 17&amp;330</b>																																				
<b>0013 22</b>	<b>0012 18&amp;331</b>																																				
	<b>0013 19&amp;332</b>																																				
	<b>0014 20&amp;333</b>																																				
	<b>0015 21&amp;334</b>																																				
	<b>0016 22</b>																																				

No./Item	Description
804  BLANK LINE	<p><b>This turns the blanking ON or OFF in the vertical blanking period of the video output signals.</b></p> <p><b>0000 BLANK :</b>            Blanking is effected forcibly for all lines.  <b>0001 THRU :</b>            No blanking is effected for any of the lines.  <b>0002 MANU :</b>            Blanking ON or OFF is selected for each line.  <b>Note:</b>            When setting "MANU" is selected and the STOP button is pressed, operation transfers to the sub-screen, and ON or OFF can be selected for each line. To return from the sub-screen, press the STOP button again.</p>
<b>Sub-screen</b>	
(For AJ-SD255P) 00 LINE 10&273 : 11 LINE 21&284  (For AJ-SD255E) 00 LINE 7&320 : 15 LINE 22&335	<p><b>0000 BLANK :</b>            Blanking is forcibly effected.  <b>0001 THRU :</b>            No blanking is effected.</p>

• **Number of lines which can be set for teletext**  
 For AJ-SD255P:

No.660: UMID REC setting	Number of lines which can be set
OFF	13
ON	10

For AJ-SD255E:

No.660: UMID REC setting	Number of lines which can be set
OFF	14
ON	12

• The teletext signals which are played back do not satisfy the ITU-R BT.653 teletext standard perfectly.

The underlined items indicates the initial setting.



## Setup menus (continued)

### ■ USER menu <DIF>

No./Item	Description
880 DIF SPEED  <b>YAD255G</b>	<p>This sets the transfer rate of the IEEE1394 digital interface output.</p> <p><u>0000</u>    <u>S100</u> : 100 Mbps 0001    S200 : 200 Mbps 0002    S400 : 400 Mbps</p>
881 DIF TYPE (For AJ-SD255P)  <b>YAD255G</b>	<p>This sets the format when the IEEE1394 digital signals are output.</p> <p>0000 <b>DVCPRO</b> : The signals are forcibly output in the DVCPRO format. 0001    <b>DV</b> : The signals are forcibly output in the DV format. <u>0002</u>    <u>AUTO</u> : The same format as that of the playback tape is set.</p>
882 DIF IN CH  <b>YAD255G</b>	<p>This sets the IEEE1394 digital input channel.</p> <p>0000    0 :        : 0063    63</p> <p>0-63: These channels are fixed to assigned values. 0064    <b>AUTO</b> : The channel is not fixed to assigned values. When the power is turned on, the input channel is initialized to 63.</p>
883 DIF OUT CH  <b>YAD255G</b>	<p>This sets the IEEE1394 digital output channel.</p> <p>0000    0 :        : 0063    63</p> <p>0-63: These channels are fixed to assigned values. 0064    <b>AUTO</b> : The channel is not fixed to assigned values. When the power is turned on, the output channel is initialized to 63.</p>
886 DIF CONFIG  <b>YAD255G</b>	<p>This menu item is used to support future expansion. Normally, "DFLT" is used as the setting.</p> <p>0000        <u>DFLT</u> 0001        1 :            : 0255        255</p>

No./Item	Description
889 DIF AUD IN (For AJ-SD255P)  <b>YAD255G</b>	<p>This selects the channels to be used for recording on the tape when DV format data with audio signals in the 4CH mode are to be input and then recorded on a DVCPRO tape.</p> <p>0000 <b>CH1&amp;2</b> : Received DV format data CH1 and CH2 are selected. 0001 <b>CH3&amp;4</b> : Received DV format data CH3 and CH4 are selected.</p>
890 DIF AUD OUT  <b>YAD255G</b>	<p>(For AJ-SD255P) This selects the channels when a DV tape with audio signals in the 4CH mode is played and the signals are output in the DVCPRO format or when LOCK48 has been selected as the setup menu item No.891 (DIF DV AUDIO) setting.</p> <p>(For AJ-SD255E) When setup menu No. 891 (DIF DV AUDIO) is set to LOCK48, this selects the output channels for playing back the DV tape with audio signals in 4CH mode.</p> <p>0000 <b>CH1&amp;2</b> : DV tape CH1 and CH2 are selected. 0001 <b>CH3&amp;4</b> : DV tape CH3 and CH4 are selected.</p>
891 DIF DV AUDIO  <b>YAD255G</b>	<p>This sets the forced audio mode conversion when a DV tape is played and its signals are output in the DV format.</p> <p>0000    <b>THRU</b> : Normal (through) 0001    <b>LOCK</b> : The audio mode is forcibly converted to the LOCK mode. (The frequency is not converted.) 0002 <b>LOCK48</b> : The audio mode is forcibly converted to 48 kHz/2CH/LOCK.</p>

The underlined items indicates the initial setting.

**YAD255G** This appears only when the optional board AJ-YAD255G has been installed.

## Setup menus (continued)

### ■ USER menu <MENU>

No./Item	Description
<b>A00</b> <b>LOAD</b>	<p>This selects the user file whose contents will be loaded into USER1.</p> <p><b>0000 <u>USER2</u> :</b> The USER2 file contents are loaded.</p> <p><b>0001 <u>USER3</u> :</b> The USER3 file contents are loaded.</p> <p><b>0002 <u>USER4</u> :</b> The USER4 file contents are loaded.</p> <p><b>0003 <u>USER5</u> :</b> The USER5 file contents are loaded.</p> <p><b>Note:</b> Pressing the MENU button after loading displays a confirmation screen. Pressing the PLAY button stores the setting values. The setting values are not changed if the STOP button is pressed.</p>
<b>A01</b> <b>SAVE</b>	<p>This selects the user file into which the USER1 settings will be saved.</p> <p><b>0000 <u>USER2</u> :</b> The settings are saved in USER2.</p> <p><b>0001 <u>USER3</u> :</b> The settings are saved in USER3.</p> <p><b>0002 <u>USER4</u> :</b> The settings are saved in USER4.</p> <p><b>0003 <u>USER5</u> :</b> The settings are saved in USER5.</p> <p><b>0004 <u>LOCKED</u> :</b> This display appears when all the user files are in the change prohibit status.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• User files whose status have been set to change prohibit cannot be selected.</li> <li>• When all the user files are in the change prohibit status, the “LOCKED” display appears and the contents cannot be saved.</li> </ul>

#### Notes:

- No. A00 (LOAD), No. A01 (SAVE) and No. A02 (P. ON LOAD) are the menu items which can be set only for USER1. They are not displayed with the USER2 – USER5 files.
- No. A03 (MENU LOCK) is the menu item which can be set only for the USER2 – USER5 files. It is not displayed with USER1.

No./Item	Description
<b>A02</b> <b>P. ON LOAD</b>	<p>This loads the contents of the selected user file into USER1 and it starts operation with the USER1 settings when the power is turned on.</p> <p><b>0000 <u>OFF</u> :</b> Operation is started with the settings of the previously set user file.</p> <p><b>0001 <u>USER2</u> :</b> The contents of USER2 are loaded into USER1 and operation is started with the USER1 settings.</p> <p><b>0002 <u>USER3</u> :</b> The contents of USER3 are loaded into USER1 and operation is started with the USER1 settings.</p> <p><b>0003 <u>USER4</u> :</b> The contents of USER4 are loaded into USER1 and operation is started with the USER1 settings.</p> <p><b>0004 <u>USER5</u> :</b> The contents of USER5 are loaded into USER1 and operation is started with the USER1 settings.</p>
<b>A03</b> <b>MENU LOCK</b>	<p>This selects whether to set or release the user file (USER2 – USER5) lock mode.</p> <p><b>0000 <u>OFF</u> :</b> The lock is released (changes can be made).</p> <p><b>0001 <u>ON</u> :</b> The lock is set (changes are prohibited).</p> <p><b>Note:</b> The lock cannot be set for USER1.</p>
<b>A04</b> <b>PF1 ASSIGN</b>	The setup menu item is stored to the PF1 button.
<b>A05</b> <b>PF2 ASSIGN</b>	The setup menu item is stored to the PF2 button.
<b>A06</b> <b>PF3 ASSIGN</b>	The setup menu item is stored to the PF3 button.

The underlined items indicates the initial setting.

# Time code/user bit

## Time code

The time code is used when the time code signal generated by the time code generator (time code signal generator) is to be recorded on the tape, its values are to be read by the time code reader (time code signal reader), and the absolute position of the tape is to be displayed in increments of hours, minutes, seconds and frames.

The time code is written in the sub-code area (data area) of the helical track. Time codes for VTR playback speeds can be read from stop mode to slow-motion playback up to high-speed playback (approx. 100x when using DVCPRO tapes). The time code values are indicated using the display and superimpose functions.

TCR    00 : 07 : 04 : 24  
      ↑    ↑    ↑    ↑  
      Hours Minutes Seconds Frames

## User bit

"User bit" refers to the 32-bit (8-digit) data frame among the time code signals which has been released to users. It enables operator numbers values to be recorded.

The alphanumeric characters which can be used for the user bit are the figures 0 to 9 and the letters A to F.

## Setting the internal time code

- (1) Set the VTR to stop mode.
- (2) Select "TC" using the COUNTER button.
- (3) Set the run mode for the time code generator using setup menu No. 513 (RUN MODE).

### REC:

The internal time code generator is advanced during recording.

### FREE:

When the power is on, the internal time code generator is advanced regardless of the operation mode.

- (4) Set the TCG switch to REGEN mode.

### REGEN:

In this mode, the continuity of the original time code is maintained.

A more detailed setting can be performed using setup menu No. 503 (TCG REGEN).

### PRESET:

In this mode, recording is commenced from the value which was set by the TC PRESET button.

- (5) To preset the time code or user bit, take the following steps.

- ① Set the TCG switch to "PRESET."
- ② Select "TC" or "UB" using the COUNTER button.
- ③ When the TC PRESET button is pressed, operation is transferred to the setting mode, and the setting digits start flashing on the counter display.
- ④ Operate the joystick, and set the preset value.  
Left, right → for moving between digits; up, down → for changing the setting
  - When the RESET button is pressed, the preset value is reset to zero.
- ⑤ The preset value is set by pressing the TC PRESET button.

## Setting the external time code

- (1) Set the VTR to stop mode.
- (2) Select "TC" using the COUNTER button.
- (3) Set the TCG switch to EXT. (External time code selection)
- (4) The following settings can be selected with setup menu No. 505 (EXT TC SEL).

### LTC:

The LTC signal input to the TIME CODE IN connector (BNC) on the rear panel is recorded as time code.

### Note:

The LTC must be synchronized with the video signal.

### VITC:

The VITC of the input video signal or time code on IEEE1394 is recorded.

## Reproducing the time code/user bit

- (1) Set the VTR to stop mode.
- (2) Select "TC" or "UB" using the COUNTER button.
- (3) Press the PLAY button.

Playback starts and the time code is shown on the display.

When the SUPER switch is set to ON, the time code value is superimposed on the video signals from the VIDEO MON connector.

### Note:

When the time code signal cannot be read, the time code is automatically interpolated by the CTL signal. The display appears as shown below.

T \* R 00:01:04:07\*

When the time code signal cannot be read, an asterisk (\*) is displayed.

" ": 1, 3 field  
"\*": 2, 4 field

The colon between the seconds and frames changes to a period during drop frame mode. (For AJ-SD255P)

# Time code/user bit (continued)

## Timecodes recorded by this product

TCG switch	Setup menu No. 505 EXT TC SEL	Setup menu No. 514 VITC GEN	Selected video input signal	Recorded timecode	
				SBC area	VAUX area
INT (REGEN/ PRESET)	---	OFF	1394	Internal TCG value	Timecode on IEEE1394 digital input (VAUX area)
			Y Pb Pr/S-VIDEO/ CMPST/SDI		VITC on input video signal * 3
		ON	---	Internal TCG value	
EXT	LTC	OFF	1394	Timecode from TIME CODE IN connector input * 1	Timecode on IEEE1394 digital input (VAUX area)
			Y Pb Pr/S-VIDEO/ CMPST/SDI		VITC on input video signal * 3
		ON	---	Timecode from TIME CODE IN connector input * 1	
	VITC	OFF	1394	Timecode on IEEE1394 digital input (SBC area)	Timecode on IEEE1394 digital input (VAUX area)
			Y Pb Pr/S-VIDEO/ CMPST/SDI	VITC on input video signal * 2	VITC on input video signal * 3
		ON	1394	Timecode on IEEE1394 digital input (SBC area)	
		Y Pb Pr/S-VIDEO/ CMPST/SDI	VITC on input video signal * 2		

\* 1: The internal TCG value is used when the signal cannot be detected from the TIME CODE IN connector input.


\* 2: The internal TCG value is used when the VITC cannot be detected on the input video signal.

\* 3: Nothing is recorded if the VITC cannot be detected on the input video signal.

# Superimpose screen

The control signals, time code, etc. are displayed using abbreviations.

TV monitor

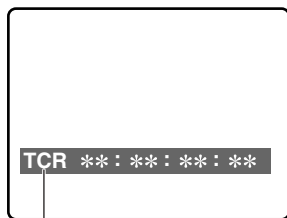

Abbreviations:

**CTL** : Control signal count value

**TCR** : Time code data recorded in the SBC area

**TCR.** : Time code data recorded in the VAUX area

**UBR** : User bit data recorded in the SBC area

**UBR.** : User bit data recorded in the VAUX area

**TCG** : Time code data of the time code generator

**UBG** : User bit data of the time code generator

**Note:**


[T \* R], [T \* R.], [U \* R] or [U \* R.] is displayed when the data has not been read correctly from the tape.

## Characters displayed

The background of characters superimposed on the display can be changed using setup menu No. 011 (CHARA TYPE).



TV monitor

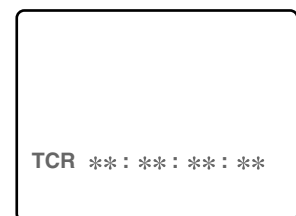

TV monitor

## Display position

The position of the characters superimposed on the display can be changed using setup menus No. 009 (CHARA H-POS) and No. 010 (CHARA V-POS).



TV monitor



TV monitor

## Operation mode

The VTR's operation mode can also be displayed using setup menu No. 008 (DISPLAY SEL).



TV monitor

VTR operation mode

# Condensation

Condensation occurs due to the same principle involved when droplets of water form on a window pane of a heated room. It occurs when the unit or tape is moved between places where the temperature or humidity varies greatly or when, for instance:

- It is moved to a very humid place full of steam or a room immediately after it has been heated up.
- It is suddenly moved from a cold location to a hot or humid location.

When moving the unit to locations such as these, leave it standing for about 10 minutes rather than switching on the power immediately. If condensation occurs in the unit, "E-20" will flash on the counter display and the cassette will be automatically ejected.

Leave the unit with the power on until "E-20" is cleared from the display.

# Maintenance

## ■ Unit cleaning

Before starting any maintenance work, switch the power to OFF and, holding the plug, unplug the cord from the socket. Use a soft cloth to clean the outside of the unit.

For stubborn dirt or stains, wipe the unit with a cloth that has been lightly dampened with well-diluted kitchen detergent and wrung out thoroughly.

After wiping off the dirt with the damp cloth, finish it off with a dry cloth.

### Note:

Do not use alcohol, benzene, thinners or any other solvents as they may affect the color of external parts or damage the unit's coating.

## ■ Video head cleaning

This unit is equipped with an auto head cleaning function which automatically reduces the amount of dirt on the video heads. However, in order to maximize the unit's reliability, it is recommended that the video heads be cleaned as and when appropriate.

For further details on how to actually clean the heads, consult with one of our service companies or with your dealer.


# Audio input impedance

## ■ Printed circuit board

### F4 board (AVIO)

Switch no.	Purpose of setting
SW1	<b>AUDIO INPUT IMPEDANCE SW</b> For setting the audio input impedance of channels 1 and 2 <u>HIGH</u> /600 Ω

The underlined items indicates the initial setting.

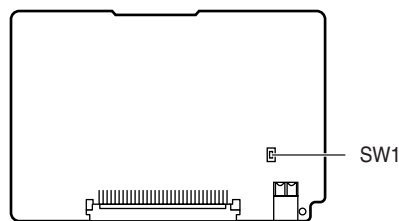


# Error messages

When a warning occurs in this unit, the error number is indicated on the counter display.

Open the DIAG menu to display a description of the error on the counter display or monitor TV.

When an operational malfunction has occurred in the unit, the error number flashes on the counter display.

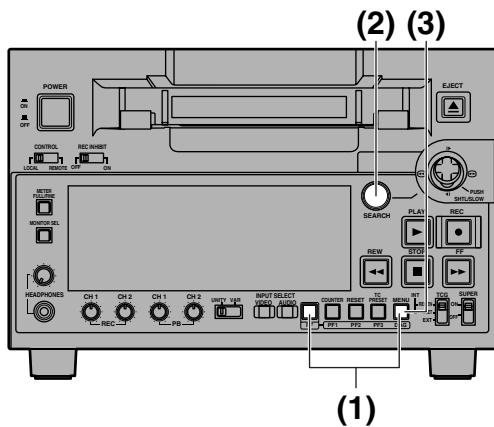

## ■ Displaying the DIAG menu

**(1) Press the MENU button while holding down the PF button.**

The DIAG menu screen appears on the TV monitor, and a message appears on the counter display.

**(2) Press the SEARCH button.**

Each time this button is pressed, the display changes by one step in the following sequence: “WARNING” → “HOURS METER” → “UMID INFO” → “DIF STATUS1” → “DIF STATUS2.”

**(3) When the MENU button is pressed again, the original display is restored.**

## ■ DIAG menu

This displays the VTR information.

The VTR information includes the warning information, hours meter (usage time) information and UMID information.

The DIAG menu appears on the TV monitor when the VIDEO MON connector on the rear panel is connected to the TV monitor.

## ■ Displaying the “HOURS METER” information

When the joystick is moved up or down, the cursor (\*) moves, and a description of the item where the cursor is located is shown on the counter display.


NO.	Item	Description
Ser	* * * * *	Displays the unit's serial No.
H00	OPERATION	Displays the time that the power has been supplied in one-hour units.
H01	DRUM RUN	Displays the time that the drum has been rotating in one-hour units.
H02	TAPE RUN	Displays the duration for which the tape has been running in the FF, REW, PLAY, SEARCH (JOG, SLOW, SHTL) and REC modes (but not in the JOG, SLOW and SHTL STILL modes) in 1-hour increments.
H03	THREADING	The number of times for threading (loading)/ unthreading (unloading) is displayed in single units.
H04	F LOADING	Displays the number of times front loading has been performed in single units.
H11	DRUM RUNr	Displays the time that the drum has been rotating in one-hour units. (Can be reset)
H12	TAPE RUNr	Displays the duration for which the tape has been running in the FF, REW, PLAY, SEARCH (JOG, SLOW, SHTL) and REC modes (but not in the JOG, SLOW and SHTL STILL modes) in 1-hour increments. (This item can be reset.)
H13	THREADINGr	The number of times for threading (loading)/ unthreading (unloading) is displayed in single units. (Can be reset)
H14	F LOADINGr	Displays the number of times front loading has been performed in single units. (Can be reset)
H30	POWER ON	The number of times the power has been turned on is displayed in single units.

### Notes:

- The resettable items in the “HOURS METER” information are reset by the dealer when maintenance work is performed.
- No operations can be performed using the SEARCH button or the joystick while the DIAG menu is displayed.

## Error messages (continued)

If "T&S&M" is selected in the setup menu No. 008 (DISPLAY SEL), a message appears in the mode display whenever a warning or error occurs. When multiple events occur, the event with the highest priority is displayed.

Priority	Display	Description
High  Low	<b>Error messages</b> (See error message table)	When an operational malfunction has occurred in the unit, the error number flashes and the error message is indicated on the counter display.
	<b>INT SG</b>	When SG has been selected as the input signal by the INPUT SELECT button, the "INT SG" display will appear for the first two seconds at the start of operation (E-E mode) when the REC button is pressed.
	<b>NO INPUT</b>	If there are no input signals--with the exception of the analog audio signals--supplied to the connectors selected by the INPUT SELECT button, the "NO INPUT" display will appear for the first two seconds at the start of operation (E-E mode) when the REC button is pressed.
	<b>Warning messages</b> (See error message table)	When a warning occurs in this unit, the error number and warning message are indicated on the counter display. When multiple warnings occur, the warning with the highest priority is displayed.

### ■ UMID information display

This is displayed when UMID information is present on the input signal in E-E mode.

This lamp lights during tape playback when UMID information has been recorded on the tape. "NO-INFO" is displayed when there is no UMID information.



Display	Description
<b>MATNO</b>	Material number
<b>COPY</b>	Instance number (No. of copies)
<b>OWNR</b>	Country, organization, user
<b>POS</b>	Reception status from GPS satellites when recording spatial coordinates (height above sea level, longitude and latitude): <b>HOLD</b> : No reception from any satellite <b>2D</b> : Reception possible, but number of satellites is insufficient. Height above sea level will not be accurate. <b>3D</b> : Good reception
<b>DATE</b>	Date
<b>TIME</b>	UTC (Coordinated Universal Time) and time difference with UTC

## Error messages (continued)

### ■ Displaying the warning information

- A warning message appears when a warning has occurred. "NO WARNING" appears when a warning has not occurred.
- When more than one warning has occurred simultaneously, move the joystick up or down to check the description of each warning.

### ■ Warning messages

Priority	Monitor display	Description	Corrective action	VTR operation
High   (Low)	<b>E-04 (UNKNOWN SIG)</b>	This appears when the signals supplied from the IEEE1394 digital interface are not DVCPRO/DV format signals.	Check that the 1394 input has been connected properly.	No recording operations are possible.
	<b>E-11 (NOT 1x 25M SIG)</b>	This appears when the signals supplied from the IEEE1394 digital interface are not DVCPRO/DV (25 Mbps) format 1x transfer signals.	Check the 1394 input signals.	No recording operations are possible.
	<b>E-14 (NO MATCH SIG) (For AJ-SD255E)</b>	This appears when a DV cassette has been inserted, and then the signals from the IEEE1394 digital interface are not DV format 1x transfer signals.	Check the 1394 input signals.	No recording operations are possible.
	<b>E-16 (INVALID VIDEO SIG)</b>	This appears when the compressed video signals supplied from the IEEE1394 digital interface are irregular signals. <ul style="list-style-type: none"> <li>• This warning appears only during recording operations. In such cases, no signals are recorded on the tape, and only erasure of existing signals is performed.</li> </ul>	Check the 1394 input signals. It is possible that playback signals of an unrecorded tape are being input.	Operation cannot be continued.
	<b>E-17 (INVALID AUDIO SIG)</b>	This appears when the audio signals supplied from the IEEE1394 digital interface are irregular signals. <ul style="list-style-type: none"> <li>• This warning appears only during recording operations. In such cases, the signals are recorded with the audio signals muted.</li> </ul>	Check the 1394 input signals. It is possible that signals other than 1x playback signals are being input from a VTR or other device.	Operation cannot be continued.
	<b>E-18 (INVALID TC SIG)</b>	This appears when the time code information supplied from the IEEE1394 digital interface is irregular information. <ul style="list-style-type: none"> <li>• This warning appears only during recording operations. In such cases, the internally generated time code is recorded.</li> </ul>	Check the time code of the device which is supplying the time code.	Operation cannot be continued.
	<b>E-91 (COPY PROTECTED)</b>	The copy protect information which has been input from the IEEE1394 digital interface is copy protected when a DV cassette has been inserted. <ul style="list-style-type: none"> <li>• This warning is displayed at all times. When it appears, a recording operation cannot be initiated from any mode other than recording. When it appears during a recording operation, the mode is transferred to stop.</li> </ul>	Check the tape. This signal can be recorded when a DVCPRO cassette has been inserted.	No recording operations are possible
	<b>E-92 (1394 INITIAL ERROR)</b>	This appears when the connection status of the IEEE1394 digital interface is irregular.	If a loop-through format has been adopted for the cable connections, re-connect each of the cables on a 1:1 basis. If such a format has not been adopted, set the POWER switch to OFF and then back to ON.	Signal input and output through the IEEE1394 digital interface is stopped.
	<b>E-10 (FAN STOP)</b>	This appears when the fan motor has shut down.	Check the fan for foreign matter.	Operation continues.
<b>E-09 (NO RF)</b>	This appears when a blank section lasting for more than one second on the tape has been detected during playback. A blank section is identified as such when all the following conditions are met: <ul style="list-style-type: none"> <li>• There are no output signals from any of the heads.</li> <li>• The playback data cannot be read.</li> <li>• There is no CTL signal (DV/DVCAM tapes excluded).</li> </ul>	Check the tape. It is possible that an unrecorded tape has been loaded.	Operation continues.	



## Error messages (continued)

Priority	Monitor display	Description	Corrective action	VTR operation
⋮ ↓ (Low)	<b>E-00 (SERVO NOT LOCKED)</b>	This appears when the servo is not locked for three or more seconds during playback or recording.	Check the tape. It is possible that a tape recorded by a system other than 525/60 has been loaded.	Operation continues.
	<b>E-01 (LOW RF)</b>	This appears when an envelope level approximately one-third of the normal level has been detected for more than one second during playback or recording.	Clean the video heads.	Operation continues.
	<b>E-02 (HIGH ERROR RATE)</b>	This appears when the error rate has increased to the extent that correction or interpolation was applied to either the video or audio playback signals.	Clean the video heads.	Operation continues.

### ■ Error messages

Monitor display	Description	Corrective action	VTR operation
<b>E-20 DEW</b>	<p>If condensation is detected, the error number flashes and the unit transfers to eject mode. The drum rotates after the cassette is ejected to eliminate the condensation. Once the unit is released from condensation status, the error message display is cleared and the VTR is able to be used.</p> <ul style="list-style-type: none"> <li>• If condensation is detected in the eject mode, the drum starts rotating as soon as it is detected.</li> <li>• If condensation is detected when the cassette has been inserted, the drum rotation is stopped, and after the tape is ejected, the drum starts rotating.</li> </ul>	Leave the power on and wait.	EJECT
<b>E-29 FRONT LOAD MOTOR</b>	<p>The unit switches to eject mode and if the cassette fails to move up within 6 seconds, this error number flashes on the display.</p> <p><b>Note:</b> If the cassette does not move down inside the machine even when 6 seconds have elapsed since the cassette was inserted, the VTR is transferred to the eject mode.</p>	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-31 LOADING MOTOR</b>	<p>If the unloading operation is not completed within 6 seconds, this error number flashes on the display.</p> <p><b>Note:</b> When the loading operation is not completed within 6 seconds, the VTR is transferred to the eject (unloading) mode.</p>	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-35 SERVO CONTROL ERROR</b>	If there is no response from the servo microcomputer for 1 second or more, this error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-37 SERVO COMM ERROR</b>	If 10 seconds or more elapses and the servo microcomputer has not followed orders issued by the system control microcomputer, this error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-51 FRONT LOAD ERROR</b>	If the take-up reel rotates without engaging for a specific period of time during the start or end processing operation while loading is underway (half position), this error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-52 W-UP REEL NOT ROTA</b>	If the take-up reel fails to take up the tape while the tape is traveling in the state where the total amount of the tape has not yet been detected after the cassette was inserted, this error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP

## Error messages (continued)

Monitor display	Description	Corrective action	VTR operation
<b>E-53 WINDUP ERROR</b>	If there is an abnormally large discrepancy between the amount of tape taken up by the take-up reel and the amount of tape supplied by the supply reel while the tape is traveling after the total amount of the tape begins to be detected, this error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-55 UNLOAD ERROR</b>	If the tape has not been taken up during unloading, this error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-57 S-FF/REW TIMEOVER</b>	If the start or end processing operation is not completed, this error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-59 DRUM ROTA TOO SLOW</b>	If the cylinder motor speed is abnormally low, this error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-60 DRUM ROTA TOO FAST</b>	If the cylinder motor speed is abnormally high, this error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-61 CAP ROTA TOO SLOW</b>	If the capstan motor speed is abnormally low, the error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-64 S REEL ROTA TOO FAST</b>	If the supply reel motor speed is abnormally high, the error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-67 T REEL ROTA TOO FAST</b>	If the take-up reel motor speed is abnormally high, the error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-69 T REEL TORQUE ERR</b>	If excess torque being applied to the take-up reel motor is detected, the error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-70 S REEL TORQUE ERR</b>	If excess torque being applied to the supply reel motor is detected or an abnormal current flowing to the current detection resistor is detected, this error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-71 CAP TENSION ERROR</b>	If abnormal tension at the supply side is detected in the capstan mode, the error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-72 REEL TENSION ERROR</b>	If abnormal tension at the supply side is detected in the reel mode, the error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-73 REEL DIR UNMATCH</b>	If the take-up reel motor has rotated in the reverse direction, this error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-74 DRUM TORQUE ERROR</b>	If excess torque being applied to the cylinder motor is detected, this error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP
<b>E-78 M-IF COMM ERROR</b>	If a problem has been encountered in communication between the servo microcomputer and mechanism relay board, this error number flashes on the display.	Set the POWER switch to OFF and then to ON again.	STOP

**Note:**

Consult your dealer if the error message is still displayed even after restarting the unit.

# Specifications

## GENERAL

**Power supply:** AC 100 - 240 V, 50 / 60 Hz  
**Power consumption:** 49 W

 indicates safety information.

**Operating ambient temperature:**  
5 °C to 40 °C (41 °F to 104 °F)

**Operating ambient humidity:**  
10 % to 80 % (no condensation)

**Weight:**  
7.2 kg (15.84 lb)

**Dimensions (W x H x D):**  
214 mm x 132 mm x 434 mm  
(inches: 8 7/16 x 5 3/16 x 17 3/32)  
(excluding support legs and connectors)

**Recording format:**  
DVCPRO/DV format selectable

**Recording video signals:**  
For AJ-SD255P: 525i system  
For AJ-SD255E: 625i system

**Recording audio signals:**  
48 kHz, 16 bits, 2 channels

**Recording tracks:**  
Digital video/audio  
Helical track  
Time code is recorded in the sub-code area.  
Control (CTL): 1 track

**Tape speed:**  
For AJ-SD255P  
33.820 mm/sec. (DVCPRO)  
For AJ-SD255E  
33.854 mm/sec. (DVCPRO)

**Recording times:**  
184 minutes (with AJ-5P92LP)  
66 minutes (with AJ-P66MP)

**Tapes used:**  
Metal tapes

**FF/REW time:**  
Less than 3 min. (with AJ-5P92LP)  
Less than 2 min. (with AJ-P66MP)

**Digital slow:**  
-0.43x to +0.43x (DVCPRO)

**Tape timer accuracy:**  
±1 frame (when using continuous CTL signal)

**Servo lock time:**  
Less than 0.5 sec. (When the format for 2F mode, standby ON, or setup menu No. 122 (STOP EE SEL) is set to TAPE)

## VIDEO

### ■ Digital video

**Sampling frequency:**  
Y:13.5 MHz; P<sub>B</sub>/P<sub>R</sub>: 3.375 MHz

**Quantizing:**  
8 bits

**Video compression method:**  
DV-Based compression (SMPTE 314M)

**Video compression rate:**  
DVCPRO : 1/5

**Error correction:**  
Reed-Solomon product code

**Bit rate:**  
DVCPRO : 25 Mbps

### ■ Digital IN/Analog Component OUT Video bandwidth (when using AJ-YA94G option):

For AJ-SD255P  
Y : 30 Hz to 5.5 MHz (±1 dB),  
5.75 MHz (-2 dB)  
P<sub>B</sub>/P<sub>R</sub> : 30 Hz to 1.3 MHz (±1 dB),  
1.5 MHz (-6 dB)

For AJ-SD255E  
Y : 25 Hz to 5.5 MHz (±1 dB),  
5.75 MHz (-2 dB)  
P<sub>B</sub>/P<sub>R</sub> : 25 Hz to 1.3 MHz (±1 dB),  
1.5 MHz (-6 dB)

**S/N ratio:**  
Better than 58 dB (Y)

**K factor:**  
Less than 1 % (Y 2T)

**Y/P<sub>B</sub>/P<sub>R</sub> delay:**  
Less than 10 nsec.

### ■ Video input signals

**Analog component input:**  
BNC x 3 (Y, P<sub>B</sub>, P<sub>R</sub>) (also used as VIDEO IN connectors)  
For AJ-SD255P

Y : 1.0 V[p-p]  
P<sub>B</sub>/P<sub>R</sub> : 0.486/0.7 V[p-p] selectable  
(75 Ω, 75 % color bar, 7.5 % setup level)

For AJ-SD255E  
Y : 1.0 V[p-p]  
P<sub>B</sub>/P<sub>R</sub> : 0.7 V[p-p]  
(75 Ω, 100 % color bar)

**Analog composite input:**  
BNC x 1  
VIDEO: 1.0 V[p-p] (75 Ω)

**S-Video input:**  
BNC x 2 (Y, C) (also used as VIDEO IN connectors)  
For AJ-SD255P

Y : 1.0 V[p-p] (75 Ω)  
C : 0.286 V[p-p] (burst level) (75 Ω)

For AJ-SD255E  
Y : 1.0 V[p-p] (75 Ω)  
C : 0.3 V[p-p] (burst level) (75 Ω)

**Reference input:**  
Analog composite, BNC x 2, loop-through, 75 Ω  
ON/OFF automatically switched

**SDI input (option: AJ-YA94G):**  
BNC x 1,  
Compliant with SMPTE 259M-C/ITU-R BT. 656-4 standard

### ■ Video output signals

**Analog component output:**  
BNC x 3 (Y, P<sub>B</sub>, P<sub>R</sub>) (switchable between composite and S-Video output)

For AJ-SD255P  
Y : 1.0 V[p-p]  
P<sub>B</sub>/P<sub>R</sub> : 0.486/0.7 V[p-p] selectable  
(75 Ω, 75 % color bar, 7.5 % setup level)

For AJ-SD255E  
Y : 1.0 V[p-p]  
P<sub>B</sub>/P<sub>R</sub> : 0.7 V[p-p]  
(75 Ω, 100 % color bar)

**Analog composite output:**  
BNC x 2, VIDEO1, VIDEO2

**S-Video output:**  
BNC x 2 (Y, C)  
(switchable between composite and component output)

For AJ-SD255P  
Y : 1.0 V[p-p] (75 Ω)  
C : 0.286 V[p-p] (burst level) (75 Ω)

For AJ-SD255E  
Y : 1.0 V[p-p] (75 Ω)  
C : 0.3 V[p-p] (burst level) (75 Ω)

**SDI output (option: AJ-YA94G):**  
BNC x 1,  
Compliant with SMPTE 259M-C/ITU-R BT. 656-4 standard

**Monitor output:**  
BNC x 1

# Specifications (continued)

## ■ Video adjustment ranges

### Video output gain:

±3 dB

### Video output chroma gain:

±3 dB

### Video output HUE (chroma phase):

±30 °

### Video output setup level (black level):

±14 IRE (±100 mV)

### Video output sync phase:

±15 µsec.

### Video output SC phase:

±180 °

## Other Input/Output Connectors

### IEEE1394 digital input/output (option: AJ-YAD255G):

IEEE1394, 6 pins x 1,

400/200/100 Mbps selectable

Compliant with IEEE1394-1995 standard

Compliant with IEC61883-Part 1, Part 2

Compliant with SMPTE 396M

AV/C Command Set supported

### Time code input:

BNC x 1, 0.5 to 8.0 V[p-p], 10 kΩ

### Time code output:

BNC x 1, low impedance, 2.0 ±0.5 V[p-p]

### RS-422A input/output:

D-sub 9-pin, RS-422A interface

## AUDIO

### ■ Digital Audio

#### Sampling frequency:

48 kHz (synchronized with video)

#### Quantizing:

16 bits

#### Frequency response:

20 Hz to 20 kHz ±1.0 dB (at reference level)

#### Dynamic range:

More than 85 dB (1 kHz, emphasis OFF, "A" weighted)

#### Distortion:

Less than 0.1 % (1 kHz, emphasis OFF, reference level)

#### Crosstalk:

Less than -80 dB (1 kHz, between 2 channels)

#### Wow & flutter:

Below measurable limits

#### Headroom:

For AJ-SD255P: 20 dB

For AJ-SD255E: 18 dB

#### De-emphasis:

T1=50 µsec., T2=15 µsec. (ON/OFF automatically selected)

### ■ Audio input signals

#### Analog input (CH1, CH2):

XLR x 2, 600 Ω/high impedance selectable,  
+4/0/-20 dBu selectable

#### SDI input (option: AJ-YA94G):

BNC x 1,

Compliant with SMPTE 259M-C/272M-A

/ITU-R BT. 656-4 standards

### ■ Audio output signals

#### Analog output (CH1, CH2):

XLR x 2, low impedance, +4/0/-20 dBu selectable

#### SDI output (option: AJ-YA94G):

BNC x 1, 75 Ω,

Compliant with SMPTE 259M-C/272M-A

/ITU-R BT. 656-4 standards

#### Monitor output:

PHONO x 2, 600 Ω, -8 dBV

#### Headphone output:

M3, stereo, 8 Ω, variable level

Weight and dimensions when shown are approximately.  
Specifications are subject to change without notice.



---

**Panasonic Broadcast Europe**  
**Panasonic Marketing Europe GmbH**  
Hagenauer Str. 43, 65203 Wiesbaden-Biebrich Deutschland Tel: 49-611-235-481

© 2004 Matsushita Electric Industrial Co., Ltd. All Rights Reserved.

