


Color CCTV Cameras
WV-CPR650/WV-CPR654

Operating Instructions

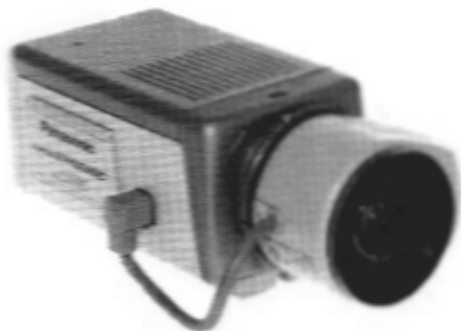

(Lens : option)

Panasonic®

Before attempting to connect or operate this product,
please read these instructions completely.

**CAUTION**RISK OF ELECTRIC SHOCK
DO NOT OPEN**CAUTION:**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



SA 1965

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



SA 1966

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Warning:

This equipment generates and uses radio frequency energy and if not installed and used properly, i.e., in strict accordance with the instruction manual, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment.

For U.S.A.

The serial number of this product may be found on the top of the unit.

You should note the serial number of this unit in the space provided and retain this book as a permanent record of your purchase to aid identification in the event of theft.

Model No. _____

Serial No. _____

WARNING:

TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CONTENTS

| | |
|--|----|
| PREFACE | 2 |
| FEATURES | 2 |
| PRECAUTIONS | 3 |
| MAJOR OPERATING CONTROLS AND THEIR FUNCTIONS | 4 |
| CONNECTIONS | 7 |
| SYSTEM CONNECTIONS | 10 |
| FOCUS OR FLANGE-BACK ADJUSTMENT | 13 |
| INSTALLATION OF CAMERA | 14 |
| SETUP | 16 |
| 1. CAMERA SET UP MENU | 16 |
| 2. SETUP OPERATION | 18 |
| SETTING PROCEDURES | 21 |
| PREVENTION OF BLOOMING AND SMEAR | 39 |
| SPECIFICATIONS | 40 |
| STANDARD ACCESSORIES | 41 |
| OPTIONAL ACCESSORIES | 41 |

PREFACE

Panasonic's WV-CPR650 series color digital camera introduces a new level of high picture quality and high resolution through the use of a 1/3-inch interline transfer CCD image sensor having 771 horizontal pixels (picture elements), and digital signal processing LSI's.

This model offers cutting-edge technology for advanced video surveillance.

Connecting with computer (Windows 95/NT system only) makes possible to remote access with no distance limit by RS485 site communication.

FEATURES

1. The following functions are built in.
 - (1) Auto Light Control (ALC)/Electronic Light Control (ELC)
 - (2) The SUPER-D function eliminates interference by strong background lighting which makes the camera picture dark, such as a spotlight. Dynamic range of 40 dB.
 - (3) Various External Sync Functions, including Gen-Lock
 - (4) Auto/Manual White Balance Function
 - (5) Electronic Shutter Function
2. Signal-to-noise ratio of 50 dB
3. Minimum illumination of 3 lux (0.3 footcandle) with F 1.4 lenses.
4. Minimum illumination of 0.9 lux (0.09 footcandle) with Panasonic aspherical high speed (F0.75) lenses.
5. 480 lines of horizontal resolution
6. High quality picture:
 - (a) 2H type vertical enhancer for greater picture sharpness
 - (b) Chroma averaging circuit for better color signal to noise ratio
 - (c) Minimum of aliasing on fine objects
 - (d) Expanded dynamic range by use of knee circuit
 - (e) Highlight aperture correction for greater picture detail of bright object
7. Ability to shoot indoor scenes with fixed iris lens by use of Electronic Light Control (ELC) function.
8. Selectable electronic sensitivity enhancing modes including : AUTO, MANUAL and OFF
9. Built in Digital Motion Detector
10. RS485 site communication is available

PRECAUTIONS

1. Do not attempt to disassemble the camera.

To prevent electric shock, do not remove screws or covers.

There are no user serviceable parts inside. Ask a qualified service person for servicing.

2. Handle the camera with care.

Do not abuse the camera. Avoid striking, shaking, etc. The camera could be damaged by improper handling or storage.

3. Do not expose the camera to rain or moisture, or try to operate it in wet areas.

Turn the power off immediately and ask a qualified service person for servicing. Moisture can damage the camera and also create the danger of electric shock.

4. Do not use strong or abrasive detergents when cleaning the camera body.

Use a dry cloth to clean the camera when dirty. In case the dirt is hard to remove, use a mild detergent and wipe gently.

5. Clean the CCD faceplate with care.

Do not clean the CCD with strong or abrasive detergents. Use lens tissue or a cotton tipped applicator and ethanol.

6. Never face the camera towards the sun.

Do not aim the camera at bright objects. Whether the camera is in use or not, never aim it at the sun or other extremely bright objects. Otherwise, blooming or smear may be caused.


7. Do not operate the camera beyond the specified temperature, humidity or power source ratings.

Use the camera under conditions where temperature is between -10°C - $+50^{\circ}\text{C}$ (14°F - 122°F), and humidity is below 90%. The input power source is 120V AC 60Hz for WV-CPR650 and DC 12V/AC 24V for WV-CPR654.

Caution:


To prevent fire or electric shock hazard, a UL listed wire (VW-1, style 1007) should be used for DC 12V or AC 24V Input Terminals.

MAJOR OPERATING CONTROLS AND THEIR FUNCTIONS

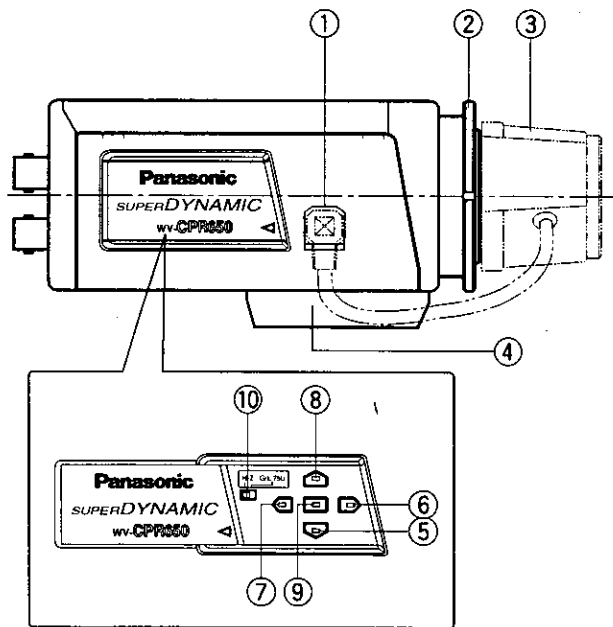


Slide the panel to the left until it locks.

<WV-CPR650>

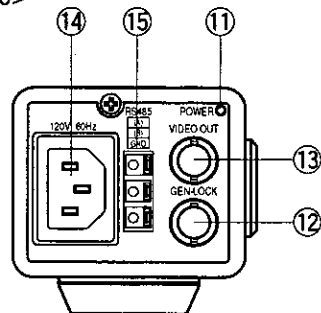

<WV-CPR654>

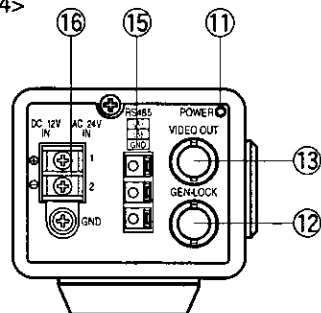

① **Auto Iris Lens Connector**

This connector is used to connect with the auto iris lens by a 4-pin male connector that is supplied as a standard accessory (Part No. YFE4191J100).

② **Flange-back Adjusting Ring**

This ring is used to adjust the back focal length or picture focus. Rotate this ring clockwise for a C-mount lens or counterclockwise for a CS-mount lens.

③ **Lens (Option)**

④ **Camera Mounting Screw Hole**

This hole is used to mount the camera onto a mounting bracket.

⑤ **Down Button (⏴)**

This button is used to move the cursor downward. It is also used to select items in the CAM SET UP menu.

⑥ **Right Button (⏵)**

This button is used to move the cursor to the right. It is also selects the mode and can be used to adjust some levels.

⑦ **Left Button (⏴)**

This button is used to move the cursor to the left. It also selects the mode and can be used to adjust some levels.

⑧ **Up Button (⏵)**

This button is used to move the cursor upward. It is also used to select items in the CAM SET UP menu.

⑨ **Set Button (⏴)**

This button is used to activate an item selected in the CAM SET UP menu.

⑩ **Gen-lock Termination Switch (Hi-Z, G/L 75Ω)**

Set this switch to Hi-Z when a gen-lock video input signal is looped through. In all other cases, set this switch to 75Ω.

⑪ **Power indicator**

This indicator lights up when the power of this camera is on.

⑫ **Gen-lock Input Connector (GEN-LOCK)**

This connector is used to connect an external system for synchronization.

⑬ **Video Output Connector (VIDEO OUT)**

This connector is used to connect with the VIDEO IN connector of the monitor.

⑭ **Power Cord Socket**

This socket is used to connect the power cord (supplied as a standard accessory).

⑮ **RS485 Terminals (RS485, A/B/GND)**

These terminals are used for RS485 site communication. Connect RS485 cables to these terminals.

⑯ **AC/DC Compatible Input Terminal (DC 12V IN/AC 24V IN)**

This terminal is for connecting the 12 V DC or 24 V AC power supply cord.

Cautions:

1. Connect to 12V DC (10.5V-16V) or 24V AC (19.5V-28V) class 2 power supply only. Make sure to connect the grounding lead to the GND terminal when the power is supplied from a 24V AC power source.
2. To prevent fire or electric shock hazard, use a UL listed wire VW-1, style 1007 cable for the Input Terminal.

CONNECTIONS

Power Cord Connection

A. WV-CPR650 (120V AC 60Hz)

1. Connect the AC power cord (supplied as standard accessory) to the power cord socket of the camera.
2. Connect the AC power cord to an electrical outlet of 120V AC 60 Hz.

Notes:


- Connect the power cord firmly.
- The power cord should be long enough for panning and tilting.
If the cable is too short, the power cord plug may pulled off the camera when the camera pans or tilts.

B. WV-CPR654 (12V DC/24V AC)

The WV-CPR654 has an AC/DC compatible input terminal. The 12V DC or 24V AC power supply cord can be connected to this terminal. The camera detects the power source automatically.

1. 12 V DC Power Supply

Connect the power cord to the AC/DC compatible input terminal on the rear panel of the camera.

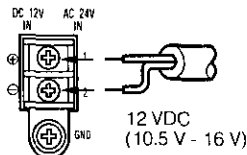

Resistance of copper wire [at 20°C (68°F)]

| Copper wire size (AWG) | #24 (0.22mm ²) | #22 (0.33mm ²) | #20 (0.52mm ²) | #18 (0.83mm ²) |
|-------------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|
| Resistance Ω /m | 0.078 | 0.050 | 0.030 | 0.018 |
| Resistance Ω /ft | 0.026 | 0.017 | 0.010 | 0.006 |

- Calculation method of maximum cable length between camera and power supply.

$$10.5V \text{ DC} \leq V_A - (R \times 0.42 \times L) \leq 16V \text{ DC}$$

L : Cable length (meter)

R : Resistance of copper wire (Ω /meter)

V_A : DC output voltage of power supply unit


$$L \text{ standard} = \frac{V_A - 12}{0.42 \times R} \quad (\text{meters})$$

$$L \text{ minimum} = \frac{V_A - 16}{0.42 \times R} \quad (\text{meters})$$

$$L \text{ maximum} = \frac{V_A - 10.5}{0.42 \times R} \quad (\text{meters})$$

2. 24 V AC Power Supply

Connect the power cable to the AC/DC compatible input terminal on the rear panel of the camera.

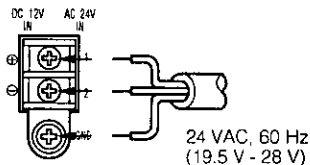

Recommended wire gauge sizes for 24V AC line.


| Copper wire size (AWG) | | #24 | #22 | #20 | #18 |
|---------------------------|------|------------------------|------------------------|------------------------|------------------------|
| | | (0.22mm ²) | (0.33mm ²) | (0.52mm ²) | (0.83mm ²) |
| Length of Cable (Approx.) | (m) | 95 | 150 | 255 | 425 |
| | (ft) | 314 | 495 | 842 | 1 403 |

Caution:

To prevent fire or electric shock hazard, a UL listed wire (VW-1, style 1007) should be used for the cable.

Video Cable

1. It is recommended to use a monitor whose resolution is at least equal to that of the camera.
2. Set the termination switch to the 75 Ω position on the last monitor.
 - A. Use a 75 Ω coaxial cable.
 - B. Set the termination switch to the 75 Ω position on the last monitor and to the Hi-Z position on the other monitors. Do not change the positions after setting.



- C. The maximum extensible coaxial cable length between the camera and the monitor is shown below.

| Type of coaxial cable | | RG-59/U (3C-2V) | RG-6/U (5C-2V) | RG-11/U (7C-2V) | RG-15/U (10C-2V) |
|----------------------------------|------|--------------------|-------------------|--------------------|---------------------|
| Recommended maximum cable length | (m) | 250 | 500 | 600 | 800 |
| | (ft) | 825 | 1 650 | 1 980 | 2 640 |

3. Wiring precautions:


- Do not bend the coaxial cable into a curve whose radius is smaller than 10 times the cable's diameter.
- Never staple the cable even if with circular staples. Impedance mismatching will occur.
- Never crush or pinch the cable.
All of the above will change the impedance of the cable and cause poor picture quality.

RS485 Termination Switch Setting


If the daisy chain connection is used, the termination switch setting is required. Follow the procedures as below.

The termination switch is set to ON at the factory.

1. Remove the mount adapter and cover by removing four screws.
2. Set the termination switch on the RS485 board to ON for the furthest camera from the RS232C/RS485 converter and OFF for the other cameras.

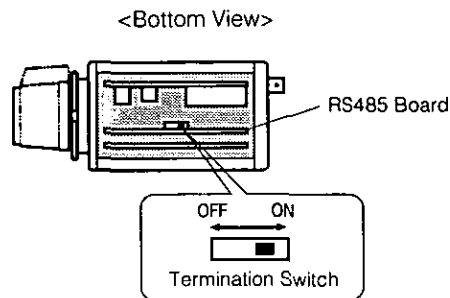

RS 485 Connection

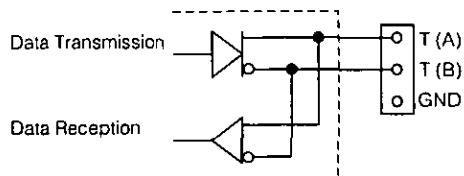


Note:

Use the cable that is described below for RS485 site communication.


- shielded, two twisted pairs cable
- Low impedance
- Wire gauge size is thicker than AWG#22 (0.33mm²)

SYSTEM CONNECTION

a) Single Camera Connection (RS485 Interface Model/Half Duplex)

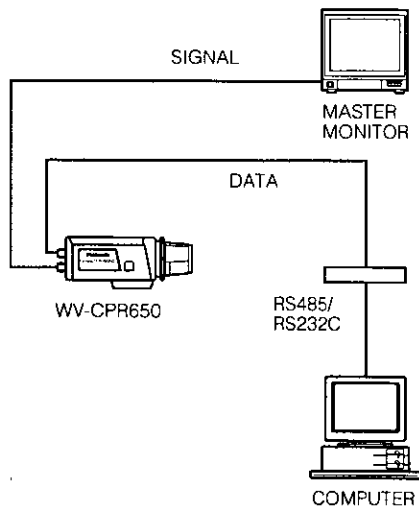

b) Daisy Chain Connection (RS485 Interface Model/Half Duplex)

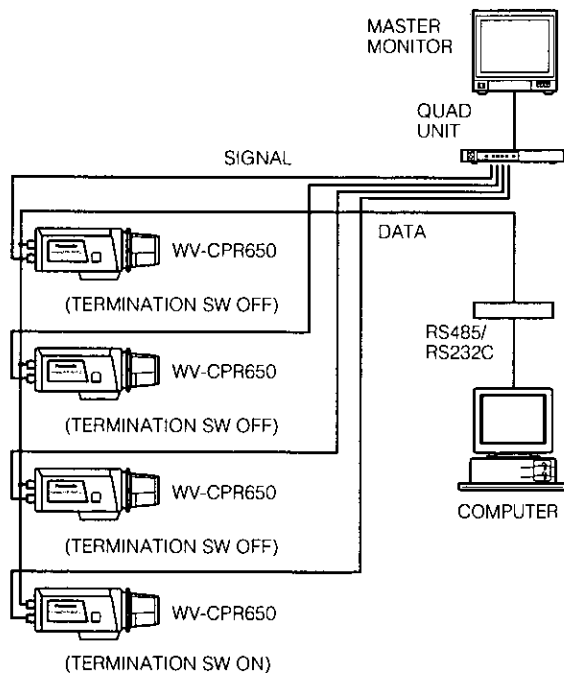

Installation of Auto Iris Lens Connector

Install the lens connector (YFE4191J100) when using a video drive ALC lens.

The installation should be made by qualified service personnel or system installers.

- (1) Cut the iris control cable at the edge of the lens connector to remove the existing lens connector and then remove the outer cable cover as shown in the diagram below.


The pin assignment of the lens connector is as follows:

Pin 1: Power source; +9V DC, 50mA Max.


Pin 2: Not used

Pin 3: Video signal; 1.3 V[p-p]/40 k Ω

Pin 4: Shield, ground

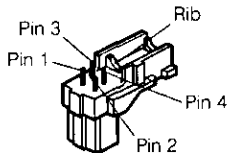

- (2) After connection, assemble the lens connector as follows.

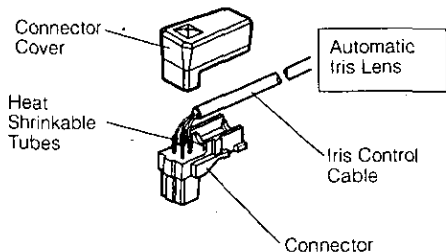


Note: When the iris control cable is too thick to lock the connector cover with the connector base, cut off the rib on the connector. (Select VIDEO for LENS DRIVE of the CAM SET UP menu.)

Mounting the Lens

Caution:


Before you mount the lens, loosen the two screws on the ring, and rotate this ring clockwise until it stops. If the ring is not at the end, the inner glass or CCD image sensor may be damaged.

1. Mount the lens by turning it clockwise on the lens mount of the camera.
2. Connect the lens cable to the auto iris lens connector on the side of the camera.

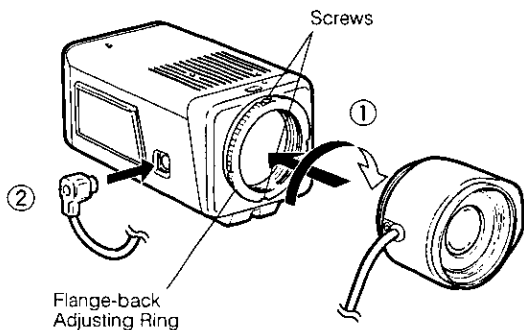

Caution for Mounting the Lens


The lens mount should be a C-mount or CS-mount (1"-32UN) and the lens weight should be less than 450g (0.99 lbs). If the lens is heavier, both the lens and camera should be secured by using the supporter. The protrusion at the rear of the lens should be as shown below:

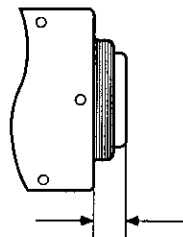

FOCUS OR FLANGE-BACK ADJUSTMENT

The following adjustment should be made by qualified service personnel or system installers.

1. Loosen the screws on the flange-back adjusting ring.

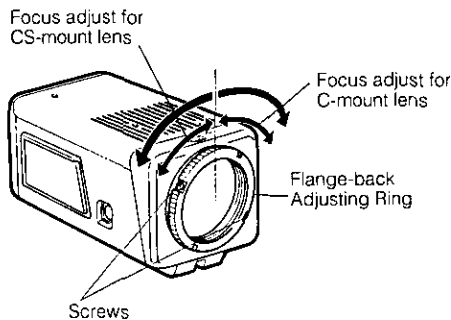

2. Turn the flange-back adjusting ring to the desired position.

Caution: When the C-mount lens is mounted, do not rotate the ring counterclockwise by force after it stops. If the ring is rotated by force, the inner lens or CCD image sensor may be damaged.



3. Tighten the screws on the flange-back adjusting ring.

INSTALLATION OF CAMERA

• Mounting from the bottom

This camera is designed to be mounted from the bottom, as shown below. The mounting hole is a standard photographic pan-head screw size (1/4" - 20).

<Mounting at top>

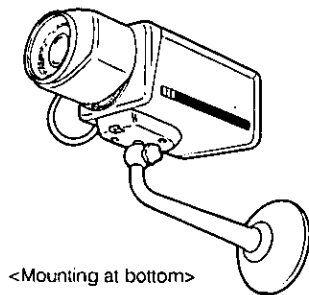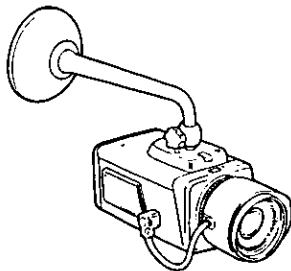


<Mounting at bottom>

• Mounting from the top


Remove the mount adapter from the bottom of the camera by removing the two fixing screws. Attach the mount adapter to the top as shown in the diagram, then mount the camera on the mounting bracket.

Make sure that the two original fixing screws are used when mounting the mount adapter as longer length screws may damage inner components.

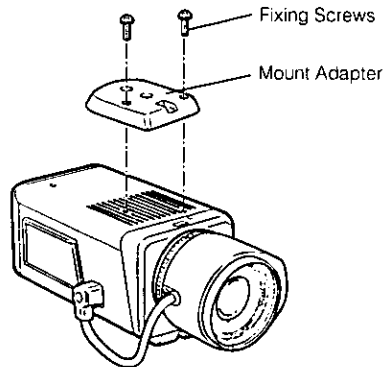


SET UP

1. CAMERA SETUP MENU

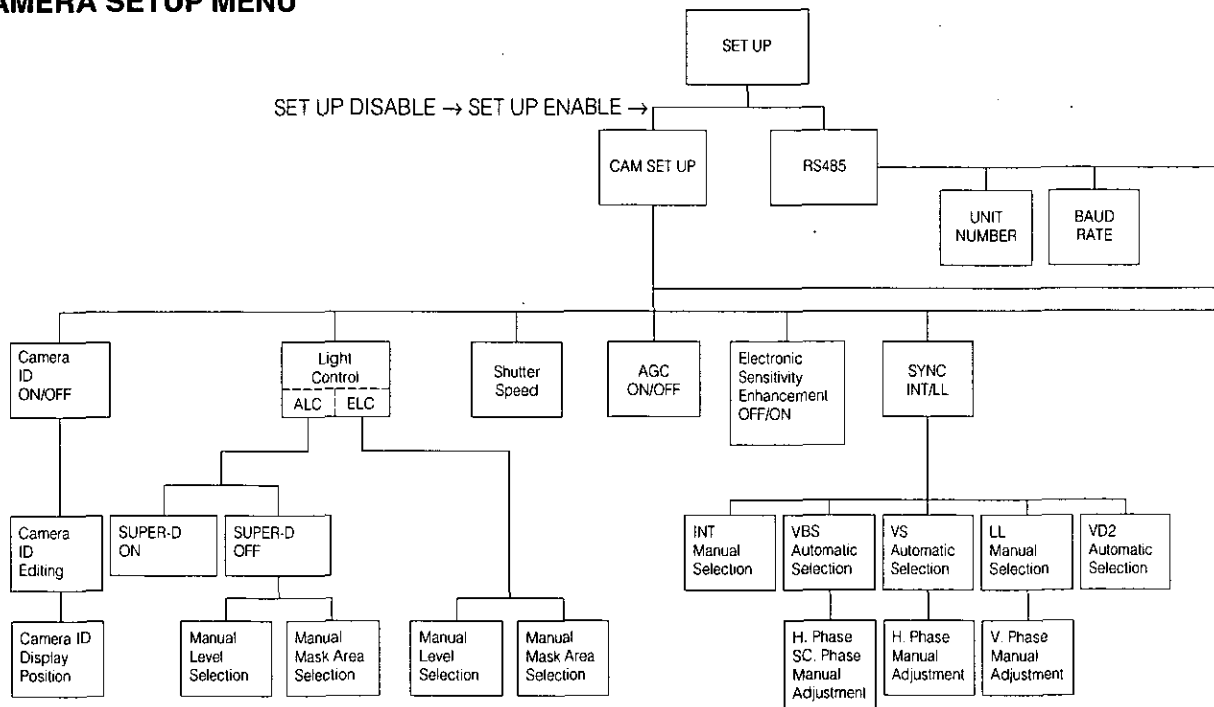


This camera utilizes a user setup menu that is displayed on-screen. The setup menu contains various items that form a tree-type structure as shown below. It is described in the following section : "2. SETUP OPERATION".

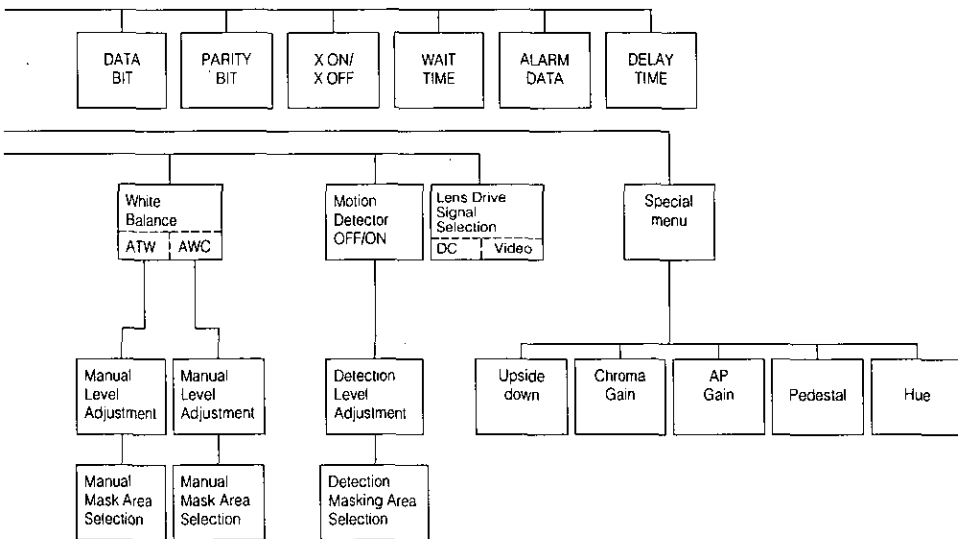

2. SETUP OPERATION

This camera utilizes a user setup menu (SET UP) that is displayed on the monitor.

To set items on the CAM SET UP and RS485 menu, use the following buttons on the side panel.

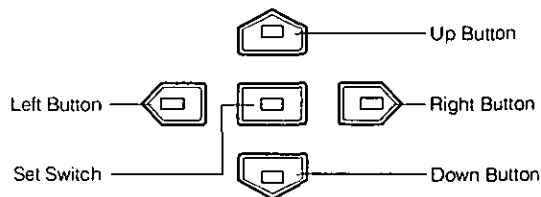

Up Button (▲): This button is used to move the cursor upwards. Use this button to select an item or adjust the parameters.

Down Button (▼): This button is used to move the cursor downwards. Use this button to select an item or adjust the parameters.

Right Button (▶): This button is used to move the cursor to the right. Use this button to select or adjust the parameters of the selected item. The parameter

changes each time this button is pressed.

Left Button (◀): This button is used to move the cursor to the left. Use this button to select or adjust the parameters of the selected item. The parameter changes each time this button is pressed.

Set Button (■): This button is used to set the determined parameter. If the item has its own setting menu (↓ indicates that the setting menu exists), press this button to display the setting menu.


• All Reset Operation

All Reset allows you to reset all setup menu items to the factory settings if you are unsure about the correct settings. Proceed as follows:

- (1) Make sure that the SET UP menu is not displayed (a camera picture is displayed).
- (2) While pressing both ▲ and ▼, press ■ for a few seconds. The words ALL RESET momentarily appear on the monitor. At this time all adjustments and parameters are reset to the factory default settings.

• Opening the Setup Menu

Press and hold down  for a second or longer.

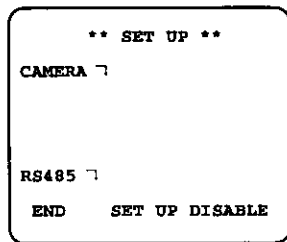






The SET UP menu appears on the monitor as shown above.

• Editing the CAM SET UP and RS485 Menu

Important Notices:




When the words SET UP DISABLE appear on the bottom line of the SET UP menu, you cannot change the currently active settings. This is to prevent accidental changing of the settings.

To edit the SET UP menu (change settings), use  and  or  and  to move the cursor to SET UP DISABLE in the bottom line.

Press . SET UP DISABLE changes to SET UP ENABLE. Move the cursor to END, then to the item(s) you want to change.

Move the cursor to CAMERA or RS485, then press .

to display the desired setting menu.
Check the current settings on the menu.

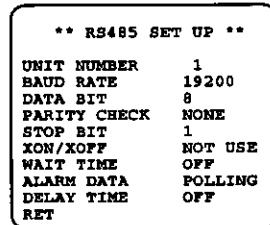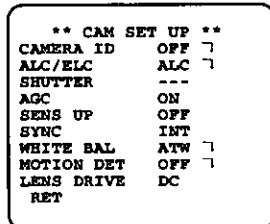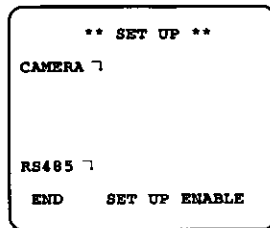

Refer to the sections below for a detailed description or menu items. If you decide not to make any changes after checking the current settings, move the cursor to END at the start of the bottom line, and press **END** to close the SET UP menu and return to the normal camera picture mode.

Important Notice:

After all the settings finished, move the cursor to RET on the menu and press **END** to return to the SET UP menu. Move the cursor to END on the SET UP menu and press **END**. The parameters you changed and set are stored as new values. If this procedure is not performed, the values are not stored.


Completing this procedure makes these values remain valid until new values are stored, even if the power of the camera is off.

• **Editing the SPECIAL menu**

To edit the SPECIAL menu (change settings), proceed as for editing the CAM SET UP menu above.

Move the cursor to RET, then, press **←** and **→** simultaneously for 2 seconds or longer.

The SPECIAL menu appears on the monitor. Select the item to be changed and change the setting as described for the CAM SET UP menu.

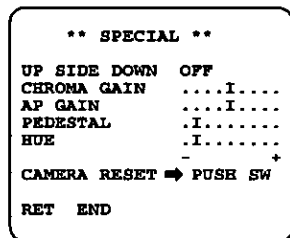

SETTING PROCEDURES

• RS485 Set Up

You can remote control this camera by using a specified extension unit such as computer with a modem. The RS485 menu is used to set the parameters of the items for RS485 site communication below.

Move the cursor to RS485 of the SET UP menu and press **[]**. The RS485 menu appears on the monitor screen.

Illustration of RS 485 menu

UNIT NUMBER

This item is used to select the camera number that is used with RS485 communication.

1. Move the cursor to the parameter of UNIT NUMBER.
2. Select the camera number to be used with RS485 communication and press **[]**.

BAUD RATE

This item is used to select the transmission speed for the RS485 communication. (BAUD is the unit of bit per second.)

1. Move the cursor to the parameter of BAUD RATE.
2. Select the transmission speed and press **[]**.

DATA BIT

This item is used to select the data bits for the RS485 communication.

1. Move the cursor to the DATA BIT parameter.
2. Select the data bits and press **[]**.

PARITY CHECK

This item is used to select the parity for the RS485 communication.

1. Move the cursor to the PARITY CHECK parameter.
2. Select the parity and press **[]**.

STOP BIT

This item is used to select the stop bit for the RS485 communication.

1. Move the cursor to the STOP BIT parameter.
2. Select the stop bits and press **[]**.


X ON/X OFF

This item is used to select applying the flow control or not.

1. Move the cursor to the X ON/X OFF parameter.
2. Select NOT USE (not apply flow control) or USE (apply flow control) and press **[]**.

WAIT TIME

This item is used to select the wait time to re-transmit after confirming that no data is received from the controller.

1. Move the cursor to the WAIT TIME parameter.
2. Select the wait time and press .

When no transmission is needed, select OFF.

ALARM DATA

This item is used to select the way of transmitting the alarm data.

1. Move the cursor to the ALARM DATA parameter.
2. Select the alarm data transmission mode from following parameters:

POLLING:

Transmit the alarm data to the controller to request from the controller.

AUTO 1:

Transmit the alarm data each time the alarm signal is received.

AUTO 2:

Transmit the alarm data five seconds each.

DELAY TIME



This item is used to select the time to transmit the acknowledge request when communicating on a two-line connection.

1. Move the cursor to the DELAY TIME parameter.
2. Select the delay time.

Note:

This item appears only when a two-line connection is used.

• Installation of Software for RS485 Communication

1. Insert the Install Disk 1 to the C drive.
2. Input command as follows.
C:\SETUP. 
The installation starts.
3. When the window that says "Please insert the disk labeled: "Disk 2" into drive C:" appears on the monitor screen, insert the Install Disk 2 and press .
4. When the installation is completed, the window that says "485_GUI Setup was completed successfully." appears on the monitor screen.
5. After installation of 485_GUI Setup is completed, open 485_GUI Setup, and set the RS485 communication parameters.


• RS485 Set Up

Move the cursor to CAMERA of the SET UP menu and press .

The CAM SET UP menu appears on the monitor screen.


1. Camera Identification (CAMERA ID) Setting

You can use the camera identification (CAMERA ID) to assign a name to the camera. The camera ID consists of up to 16 alphanumeric characters. You can select whether to have the camera ID displayed on the monitor screen or not.

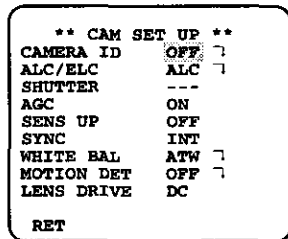

To edit the CAMERA ID

1. Move the cursor to the CAMERA ID parameter.
2. Press . The CAMERA ID menu appears. The cursor on the letter "0" starts blinking.

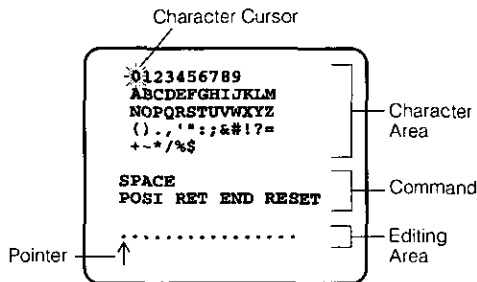

CAMERA ID menu

3. Move the cursor to the character you want to change by pressing / / / .
4. After selecting the character, press . The selected character appears in the editing area. (The pointer in the editing area moves to the right automatically at this moment.)
5. Repeat the steps above until all characters are edited.

To enter a blank space in the CAMERA ID

Move the cursor to SPACE and press .

To edit a specific character in the CAMERA ID

1. Move the cursor to the editing area by pressing .


2. Move the pointer to the character to be edited by pressing or . Then move the cursor to the character area and select a new character.
3. Press to determine the CAMERA ID.

To erase all characters in the editing area

Move the cursor to RESET and press . All characters in the editing area disappear.

To determine the display position of the CAMERA ID

1. Move the cursor to POSI, and press . The display shown below appears and the CAMERA ID starts blinking.

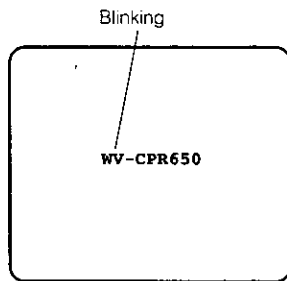

2. Move the CAMERA ID to the desired position by pressing / / / .
3. Press to fix the position of the CAMERA ID. The mode returns to the previous CAMERA ID menu.

Notes:

- The CAMERA ID stops at the edges of the monitor screen.
- The CAMERA ID moves faster if any of / / / is kept pressed for a second or longer.

To return to the CAM SET UP menu

Move the cursor to RET and press . The CAM SET UP menu appears.

2. Light Control Setting (ALC/ELC)

You can select the light control mode according to the lens type.

ALC: If you use the auto iris lens, select this parameter.

ELC: If you use a fixed or manual iris lens, select this parameter.


| | |
|------------------|--------------|
| ** CAM SET UP ** | |
| CAMERA ID | OFF ↵ |
| ALC/ELC | <u>ALC</u> ↵ |
| SHUTTER | --- |
| AGC | ON |
| SENS UP | OFF |
| SYNC | INT |
| WHITE BAL | ATW ↵ |
| MOTION DET | OFF ↵ |
| LENS DRIVE | DC |
| RET | |


1. Move the cursor to the ALC/ELC parameter.
2. Select ALC or ELC.



2-1. ALC Mode with SUPER-D ON



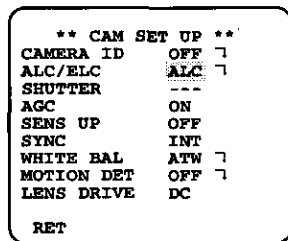

Super Dynamic Function (SUPER-D)

The important object in a scene is usually placed in the center of the monitor's screen. In SUPER-D mode, more photometric weight is given to the center of the screen (where the important object is located) than to the edge of the picture (where a bright backlight would most likely be located). You can use the SUPER-D function if you select ALC. It eliminates interference by strong background lighting which makes the camera picture dark, such as a spotlight.

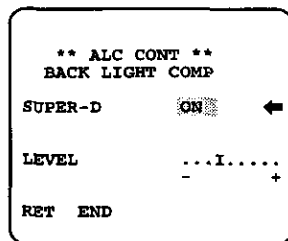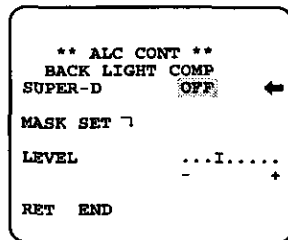

1. Press  after selecting ALC, the ALC CONT menu appears.
2. Move the cursor to the SUPER-D parameter and select ON.




3. If you want to adjust the video output level, move the cursor to the "I" position. Adjust to the desired level by pressing  or .
4. Move the cursor to RET and press  to return to the CAM SET UP menu. (To return to the camera picture, move the cursor to END and press .)


2-2. ALC Mode with SUPER-D OFF and ELC Mode

Note: If ELC is selected, set MASK SET according to this procedure.


1. Move the cursor to the SUPER-D parameter and select OFF. (When you select ELC, SUPER-D is not available.) The item MASK SET appears on the menu.

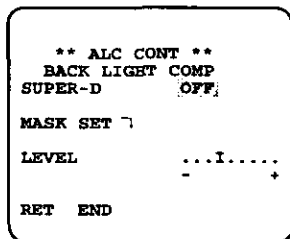


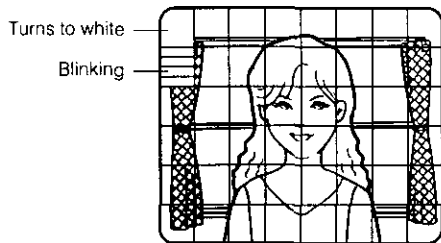
2. Move the cursor to MASK SET and press **[F4]**. The 48 mask areas appear on the monitor screen. The cursor is blinking in the top left corner of the screen.

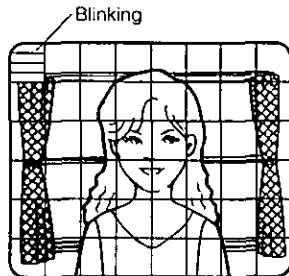

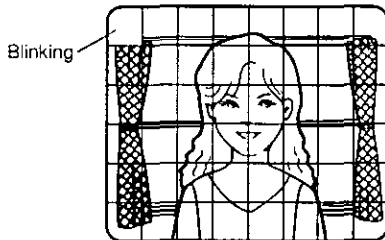

3. Move the cursor to the area where backlight is bright and press **[F4]** to mask that area. The mask turns white. (When the cursor is moved on an area that has already been masked, the mask and cursor start blinking.)



4. Repeat step 1 to 3 to mask the desired area. To cancel masking, move the cursor to that area and press .



5. After masking is completed, press  for 2 seconds or longer. The ALC CONT menu appears.
6. If you want to change the video output level (picture contrast), move the "I" cursor for LEVEL and adjust the level.
7. Move the cursor to RET and press  to return to the CAM SET UP menu. (To return to the camera picture, move the cursor to END and press the set button.)


3. Shutter Speed Setting (SHUTTER)

Note: When ON is selected for SUPER-D on the ALC CONT menu, this item is not available.



To select electronic shutter speed, select OFF for SUPER-D in the menu.


You can select an electronic shutter speed of 1/60 (OFF), 1/100, 1/250, 1/500, 1/1 000, 1/2 000, 1/4 000, or 1/10 000 seconds.

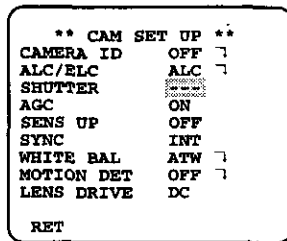This function is effective to raise the sensitivity in low light conditions when OFF is selected for ALC.



Move the cursor to the SHUTTER parameter and select the electronic shutter speed.

The preset values for SHUTTER (electronic shutter speed) change by pressing  or  as follows:



4. Gain Control Setting (AGC ON/OFF)

You can set the gain (brightness level portion of an image) to automatic level adjustment (ON) or fixed level(OFF).

| | | |
|------------------|-----|---|
| ** CAM SET UP ** | | |
| CAMERA ID | OFF | ↵ |
| ALC/ELC | ALC | ↵ |
| SHUTTER | --- | |
| AGC | ON | |
| SENS UP | OFF | |
| SYNC | INT | |
| WHITE BAL | ATW | ↵ |
| MOTION DET | OFF | ↵ |
| LENS DRIVE | DC | |
| RET | | |

Move the cursor to the AGC parameter and select automatic level adjustment (ON) or fixed level (OFF).



5. Electronic Sensitivity Enhancement (SENS UP)


There are two modes for SENS UP.

AUTO: If you select x32 AUTO, for example, the sensitivity is raised automatically to x32 max. When AUTO is selected, AGC is automatically set to ON.

FIX: If you select x32 FIX, for example, the sensitivity is raised to just x32.

| | | |
|------------------|-----|---|
| ** CAM SET UP ** | | |
| CAMERA ID | OFF | ↵ |
| ALC/ELC | ALC | ↵ |
| SHUTTER | --- | |
| AGC | ON | |
| SENS UP | OFF | |
| SYNC | INT | |
| WHITE BAL | ATW | ↵ |
| MOTION DET | OFF | ↵ |
| LENS DRIVE | DC | |
| RET | | |

Move the cursor to the SENS UP parameter and select the parameter for electronic sensitivity enhancement. The preset values for SENS UP (electronic sensitivity enhancement) change by pressing  or  as follows:



Notes:

- When ON is selected for SUPER-D in the ALC CONT menu, FIX is not available for this item.
- When you select AUTO for SENS UP and ON for SUPER-D, the SENS UP function has priority so that the SUPER-D function is not activated automatically.
- During the SENS UP function, noise or spot may be appeared on the picture when the sensitivity of camera is increased. This is normal phenomenon.


6. Synchronization Setting (SYNC)

You can select internal sync mode (INT) or line-lock mode (LL). Additionally, this model accepts the VBS signal (color composite video or blackburst signal) and VS signal (B/W composite video or composite sync signal). The VD2 signal (multiplexed vertical drive signal) with the composite video output signal from external equipment such as a Matrix Switcher is also acceptable.

Whenever the VD2 signal is supplied to this camera, the camera automatically switches to the VD2 sync mode.

1. Move the cursor to the SYNC parameter and select line-lock(LL) or internal(INT).
2. Press **[]**.

If LL is selected, the SYNC menu appears. (If INT is selected, the synchronization mode is automatically set to internal sync pulse, and the menu is not displayed.)

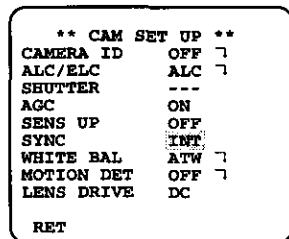


Important Notice:

1. The priority for the sync modes is as follows.
 1. Multiplexed Vertical Drive (VD2) (Highest priority)
 2. Line-lock (LL)
 3. Color Composite Video or Blackburst Signal (VBS)
 4. B/W Composite Video or Composite Sync Signal (VS)
 5. Internal Sync (INT) (Lowest priority)
2. When the internal sync mode is to be used, select INT. No gen-lock input signal should be supplied to the Gen-lock Input Connector on the rear panel.
3. Whenever the multiplexed vertical drive pulse (VD2) is supplied to the camera from an external equipment such as a Matrix Switcher, the camera sync mode is automatically switched to the VD2 mode.
4. When the VBS or VS gen-lock mode is to be used select INT from this menu and supply the gen-lock input signal to the Gen-lock Input Connector on the rear panel.
5. The VBS gen-lock mode has its own menu for horizontal and subcarrier phase adjustments. When the cable length of the video output or the gen-lock input is changed, the horizontal and subcarrier phase must be re-adjusted.

- The VS gen-lock mode has its own menu for horizontal phase adjustments. When the cable length of the video output or the gen-lock input is changed, the horizontal phase must be re-adjusted.
- The line-lock mode has its own menu for line-lock vertical phase adjustment. If the camera installation is relocated, check the vertical phase adjustment again since the AC line phase may be different.

6-1. VBS Gen-lock Mode (EXT(VBS))

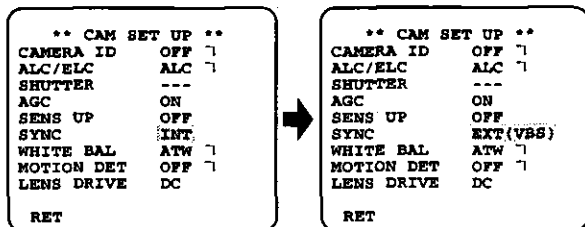


- Move the cursor to the SYNC parameter and select INT.
- Connect the coaxial cable for the blackburst or composite color video signal to the gen-lock input connector.

- Confirm that the INT parameter changed to EXT (VBS) on the menu.

Caution: The gen-lock input signal should meet the EIA RS-170A specifications and should not contain jitter, such as a VCR playback signal, as it could disturb synchronization.


- After confirming that the cursor is on EXT (VBS), press . The phase adjustment menu appears on the monitor.

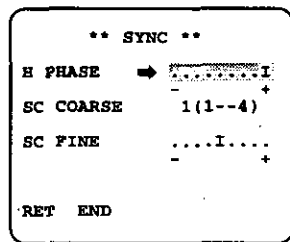

- Move the cursor to H PHASE. The cursor starts blinking.
- Supply the video output signal of the camera to be adjusted and the reference gen-lock input signal to a dual-trace oscilloscope.
- Set the oscilloscope to the horizontal rate and expand the horizontal sync portion on the oscilloscope.

8. Adjust the horizontal phase by pressing **←** or **→**. The adjustable range is 0 - 2.0 μ s.
9. Move the cursor to SC COARSE. The cursor starts blinking.
10. Press **←** or **→** to match the color (hue) of the camera's video signal, when observed at the output of the Special Effect Generator (SEG) or Switcher, as closely as possible to the color of the original scene. (SC COARSE adjustment can be incremented in steps of 90 degrees (4 steps) by pressing **←** or **→**.)

Note: After the fourth step, the adjustment returns to the first step.

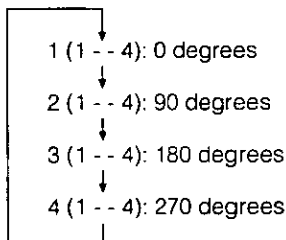

11. Move the cursor to SC FINE. The cursor starts blinking.

12. Press **←** or **→** to match the color (hue) of the camera's video signal, when observed at the output of the Special Effect Generator (SEG) or Switcher, as closely as possible to the color of the original scene.

The SC FINE adjustment has a range of 90 degrees of color shift.


Notes:

- When the "I" cursor reaches the "+" end, it jumps back to "-". At the same time, SC COARSE is incremented by one step to enable a continuous adjustment. The reverse takes place when the "I" cursor reaches the "-" end.
- When **←** or **→** is kept pressed for a second or more, the "I" cursor moves quickly.
- For more accurate adjustment, supply both the original camera video output signal and the effect output video signal (program output video signal) of the special effects generator (SEG) to a vectorscope and compare the chroma phase of both signals.
- To reset SC COARSE and SC FINE to the values preset at the factory, press **←** or **→** simultaneously. SC COARSE is reset to the factory setting.


6-2. VS Gen-lock Mode (EXT(VS))

1. Move the cursor to the SYNC parameter and select INT.
2. Connect the coaxial cable for the composite sync or composite B/W video signal to the gen-lock input connector.
3. Confirm that the parameter INT changed to EXT (VS) on the menu.

Caution: The gen-lock input signal should meet with EIA RS-170 specifications and should not contain jitter, such as a VCR playback signal, as it could disturb synchronization.

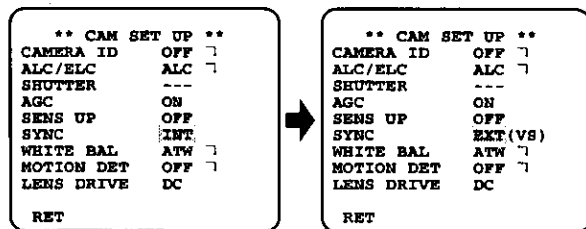

4. After confirming the cursor is on EXT (VS), press . The phase adjustment menu appears on the monitor.

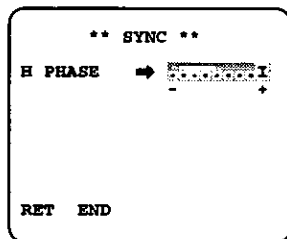

5. Move the cursor to H PHASE. The cursor starts blinking.
6. Supply the video output signal of the camera to be adjusted and the reference gen-lock input signal to a dual-trace oscilloscope.
7. Set the oscilloscope to the horizontal rate and expand the horizontal sync portion on the oscilloscope.
8. Adjust the horizontal phase by pressing or . The adjustable range is 0 - 2.0μs.


6-3. Line-lock Sync Mode (LL)

Note: The line-lock (LL) sync mode is not available when the camera operates on DC power.


1. Move the cursor to the SYNC parameter and select LL.

Note: The settings in this menu can be made only when the multiplexed vertical drive signal (VD2) is not supplied to the camera.

2. After confirming the cursor is on LL, press **[G]**. The vertical phase adjustment menu appears on the monitor.

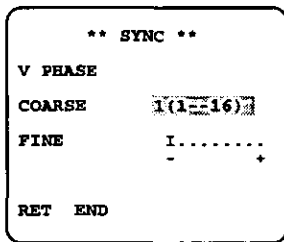

3. Move the cursor to COARSE. The cursor starts blinking.
4. Supply the video output signal of the camera to be adjusted and the reference camera video output signal to a dual-trace oscilloscope.
5. Set the oscilloscope to the vertical rate and expand the vertical sync portion on the oscilloscope.
6. Press **[←]** or **[→]** to match the vertical phase for both video output signals as closely as possible. (COARSE adjustment can be incremented in 16 steps by 22.5 degrees by pressing **[←]** or **[→]**.)

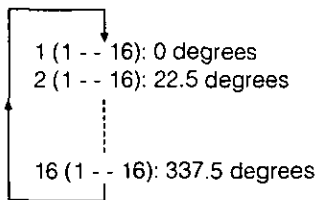

Note: After the sixteenth step, the adjustment returns to the first step.

7. Move the cursor to FINE. The cursor starts blinking.
8. Press **[←]** or **[→]** to match the vertical phase for both video output signals as closely as possible. (FINE adjustment can be made up to 22.5 degrees by pressing **[←]** or **[→]**.)

Notes:

- When the "I" cursor reaches the "+" end, it jumps back to "-". At the same time, COARSE is incremented by one step to enable a continuous adjustment. The reverse takes place when the "I" cursor reaches the "-" end.
- When **[←]** or **[→]** is kept pressed for a second or longer, the "I" cursor moves faster.

- To reset COARSE and FINE to the values preset at the factory, press **⏪** or **⏩** simultaneously. COARSE and FINE adjustments are preset at the factory to zero-crossing of the AC line phase.
- If the AC line contains noise (spike noise, etc.), the stability of the vertical phase of the camera video output signal may be disturbed.

7. White Balance Setting (WHITE BAL)

7-1. Auto-Tracing White Balance Mode (ATW)

You can select one of two modes for white balance adjustment as follows:

- **ATW (Auto Tracing White Balance)**

In this mode, the color temperature is monitored continuously and thereby white balance is set automatically. The color temperature range for the proper white balance is approximately 2 600 - 6 000K. Proper white balance may not be obtained under the following conditions:

1. The color temperature is out of the 2 600 - 6 000K range.
2. When the scene contains mostly high color temperature objects, such as a blue sky or sunset.
3. When the scene is dim.

In these cases, select the AWC mode.

Move the cursor to the WHITE BAL parameter and select ATW. The white balance of the camera is automatically set.

```

** CAM SET UP **
CAMERA ID   OFF  ↵
ALC/ELC    ALC  ↵
SHUTTER     ---
AGC         ON
SENS UP     OFF
SYNC        INT
WHITE BAL   ATW  ↵
MOTION DET  OFF  ↵
LENS DRIVE  DC
RET

```

- **Automatic White Balance Control Mode (AWC)**

In this mode, accurate white balance is obtained within a color temperature range of approximately 2 300-10 000K.


1. Move the cursor to the WHITE BAL parameter and select AWC → PUSH SW.

```


** CAM SET UP **
CAMERA ID   OFF  ↵
ALC/ELC    ALC  ↵
SHUTTER     ---
AGC         ON
SENS UP     OFF
SYNC        INT
WHITE BAL   AWC→PUSH SW
MOTION DET  OFF  ↵
LENS DRIVE  DC
RET

```

- Press **[]** to start the white balance setup. The words PUSH SW start blinking to indicate that the white balance is being set.

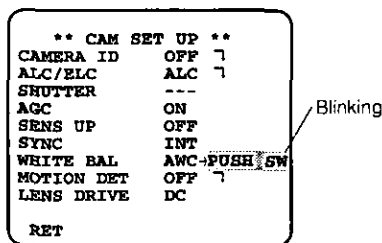

- When the white balance setting is completed, the words PUSH SW stop blinking.
- When you want to adjust the white balance manually, press **[]** to select AWC and press **[]**. The AWC menu appears on the monitor. (When ATW is selected, pressing **[]** displays the ATW menu.)

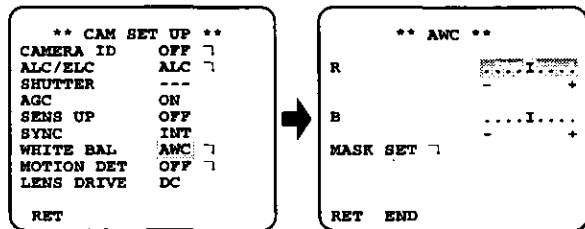

Fine Adjustment for AWC (ATW) Manually

You can add the detailed setting for white balance setting manually.


- To set MASK SET, proceed as described in steps 1 to 4 of "ALC mode with SUPER-D OFF and ELC mode" on page 26.
- Move the cursor to R.
- Press **[]** or **[]** to obtain the optimum amount of red gain.
- Move the cursor to B.
- Press **[]** or **[]** to obtain the optimum amount of blue gain.


Note: When you need to set MASK SET, re-adjust to obtain the optimum amount of red and blue gain.





8. Motion Detector Setting (MOTION DET)

The motion detector detects the moving objects in the scene by monitoring the brightness level changes. You can select the level of sensitivity for motion detection.

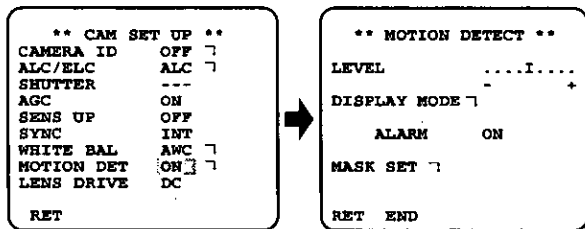Note: The alarm signal is supplied only when RS485 communication is used.

1. Move the cursor to the MOTION DET parameter and select ON.
2. Press . The MOTION DETECT menu appears on the monitor screen.



3. Move the cursor to MASK SET and press . The MASK SET menu has 48 masks. To set MASK SET, proceed as described in steps 2 to 4 of "ALC mode with SUPER-D OFF and ELC mode" on page 26.
4. Move the cursor to the ALARM parameter and select ON or OFF to set the alarm in the DISPLAY MODE.
Note: When the system controller WV-RM70, WV-CU550 or WV-CU550A is used with this model, select OFF for ALARM.
5. Move the cursor to DISPLAY MODE and press  to see the current setting. The masks that detect the brightness changes start blinking.
6. To raise detection sensitivity, press  to return to the MOTION DETECT menu.
7. To obtain the optimum detection level, move the "I" cursor to adjust the level.
8. Repeat the procedures above to obtain a satisfactory setting.
9. Move the cursor to RET and press  to return to the CAM SET UP menu.

Notes:

- Masking or adjusting the detection level is needed to prevent malfunction under the following conditions:
- When shooting an object under flickering fluorescent light or shooting in ELC.
- When leaves or curtains etc. are swayed by the wind.
- When the object is lighted by lighting equipment that constantly turns on and off.

9. Lens Drive Signal Selection (LENS DRIVE)

This item is used to select the type of auto iris lens drive signal to be supplied to the lens from the auto iris lens connector.


| | | |
|------------------|-----|---|
| ** CAM SET UP ** | | |
| CAMERA ID | OFF | ↵ |
| ALC/ELC | ALC | ↵ |
| SHUTTER | --- | |
| AGC | ON | |
| SENS UP | OFF | |
| SYNC | INT | |
| WHITE BAL | ATW | ↵ |
| MOTION DET | OFF | ↵ |
| LENS DRIVE | DC | |
| RET | | |

1. Move the cursor to the LENS DRIVE parameter.
2. Select DC if you are using the auto iris lens that requires a DC drive signal.
Select VIDEO if you are using the auto iris lens that requires a video drive signal.

10. Special Menu (SPECIAL)

This menu lets you adjust and set up the video signal of the camera to meet your requirements.

Move the cursor to RET on the bottom line of the CAM SET UP menu and press **⏏** or **⏏** simultaneously for 2 seconds or longer. The SPECIAL menu appears on the monitor as shown below.

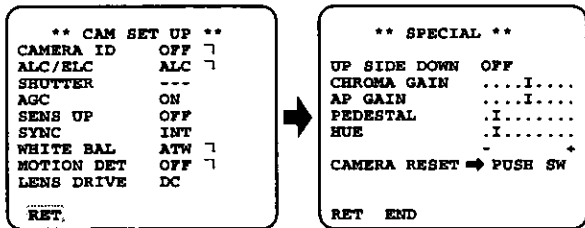

10-1. Camera Picture Upside Down Positioning (UP SIDE DOWN)

1. Move the cursor to the UP SIDE DOWN parameter.
2. Select ON when you want to turn the picture upside down.

10-2. Chroma Level Setting (CHROMA GAIN)

1. Move the cursor to the CHROMA GAIN parameter.
2. While observing the vectorscope or color video monitor, move the "I" cursor to adjust the chroma level.

10-3. Aperture Gain Setting (AP GAIN)

1. Move the cursor to the AP GAIN parameter.
2. While observing the vectorscope or video monitor, move the "I" cursor to adjust the aperture gain level.




10-4. Pedestal Level Setting (PEDESTAL)

1. Move the cursor to the PEDESTAL parameter.
2. While observing the waveform monitor/oscilloscope or video monitor, move the "I" cursor to adjust the pedestal level (black level).

10-5. Chroma Phase (Hue) Setting (HUE)

1. Move the cursor to the HUE parameter.
2. While observing the vectorscope or color video monitor, move the "I" cursor to adjust the hue (chroma phase) level.

To reset to the factory settings

1. Move the cursor to the CAMERA RESET parameter. The words PUSH SW start blinking.
2. While holding down  and , press  for 2 seconds or longer. The camera is reset to the factory settings.

To close the SPECIAL menu and return to the CAM SET UP menu


Move the cursor to RET and press .

To close the SPECIAL menu and return to the camera picture

Move the cursor to END and press .

PREVENTION OF BLOOMING AND SMEAR

When the camera is aimed at a bright light, such as a spotlight, or a surface that reflects bright light, smear or blooming may appear. Therefore, the camera should be operated carefully in the vicinity of extremely bright objects to avoid smear or blooming.

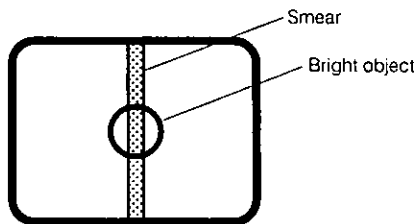

SPECIFICATIONS

| | |
|--------------------------------|--|
| Pick-up Device: | 771 (H) x 492 (V) pixels, Interline Transfer CCD |
| Scanning Area: | 4.8 (H) x 3.6 (V) mm (Equivalent to scanning area of 1/3" pick-up tube) |
| Scanning: | 525 lines / 60 fields / 30 frames |
| Horizontal: | 15.734 kHz |
| Vertical: | 59.94 Hz |
| Synchronization: | Internal, Line-locked, External (VS/VBS) or Multiplexed Vertical Drive (VD2) Selectable |
| Video Output: | 1.0 V[p-p] NTSC composite 75 Ω / BNC connector |
| Horizontal Resolution: | 480 lines |
| Signal-to-Noise Ratio: | 50 dB (AGC OFF, weight ON) |
| Dynamic Range: | 40 dB |
| Minimum Illumination: | 0.9 lx (0.09 footcandle) at F0.75 [Equivalent to 3 lx (0.3 footcandle) at F1.4] |
| Gain Control: | Selectable AGC ON or OFF (SET UP MENU) |
| White Balance: | Selectable ATW or AWC (SET UP MENU) |
| Aperture: | Set Variable (SET UP MENU) |
| Electronic Light Control: | Equivalent to continuous variable shutter speed between 1/60 s and 1/10 000 s |
| Super D: | Selectable On or Off (SET UP MENU) |
| Electronic Shutter Speed: | Selectable 1/60 (OFF), 1/100, 1/250, 1/500, 1/1 000, 1/2 000, 1/4 000, 1/10 000 s |
| Lens Mount: | Selectable C-mount or CS-mount |
| ALC Lens: | Selectable DC or Video |
| Ambient Operating Temperature: | -10°C - +50°C (14°F - 122°F) |
| Ambient Operating Humidity: | Less than 90% |

| | | |
|----------------------------|---|---|
| Power Source and | WV-CPR650: | 120V AC 60 Hz, 6.2W |
| Power Consumption: | WV-CPR654: | 24V AC 60 Hz, 6.3W |
| | | 12V DC, 690 mA |
| Dimensions (without lens): | 67 (W) x 55 (H) x 123 (D) mm | |
| | [2-5/8" (W) x 2-3/16" (H) x 4-13/16" (D)] | |
| Weights (without lens): | WV-CPR650: | 0.43 kg (0.9 lbs.) (without power cord) |
| | WV-CPR654: | 0.43 kg (0.9 lbs.) |

Weights and dimensions indicated are approximate.
Specifications are subject to change without notice.

STANDARD ACCESSORIES

| | |
|---|--------|
| Body Cap..... | 1 pc. |
| ALC Lens Connector (YFE4191J100)..... | 1 pc. |
| AC Power Cord (for only WV-CPR650)..... | 1 pc. |
| Floppy Disks..... | 2 pcs. |

OPTIONAL ACCESSORIES

| | |
|----------|--|
| Lenses : | WV-LA2R8C3B, WV-LA4R5C3B, WV-LA9C3B, WV-LA210C3, WV-LA408C3, WV-LA908C3 WV-LZ61/10, WV-LZ62/2, WV-LF4R5C3A, WV-LF9C3A |
|----------|--|

Panasonic

Video Imaging Systems Company

**A Division of Panasonic Broadcast & Television Systems Company
A Unit of Matsushita Electric Corporation of America**

Executive Office: One Panasonic Way 3E-7, Secaucus, New Jersey 07094

Regional Offices:

Northeast: 43 Hartz Way, Secaucus, NJ 07094 (201) 348-7303

Southeast: 1225 Northbrook Parkway, Suite 1-160, Suwanee, GA 30174 (770) 338-6835

Midwest: 1707 North Randall Road, Elgin, IL 60123 (847) 468-5200

Southwest: 8105 Beltsline Road, Suite 100, Irving TX 75063 (214) 915-1333

Western: 6550 Katella Ave., Cypress, CA 90630 (714) 373-7265

PANASONIC CANADA INC.

5770 Ambler Drive, Mississauga, Ontario, L4W 2T3 Canada (905)624-5010

PANASONIC SALES COMPANY

DIVISION OF MATSUSHITA ELECTRIC OF PUERTO RICO, INC.

San Gabriel Industrial Park, 65th Infantry Ave. KM. 9.5 Carolina, P.R. 00630 (809)750-4300

N1097-0

YWV8QA4720AN

Printed in Japan

Ⓝ 30