

ORDER NO. VED0012307C0

D10


Service Manual

LCD Projector

PT-LC50U

PT-LC50E

PT-LC150

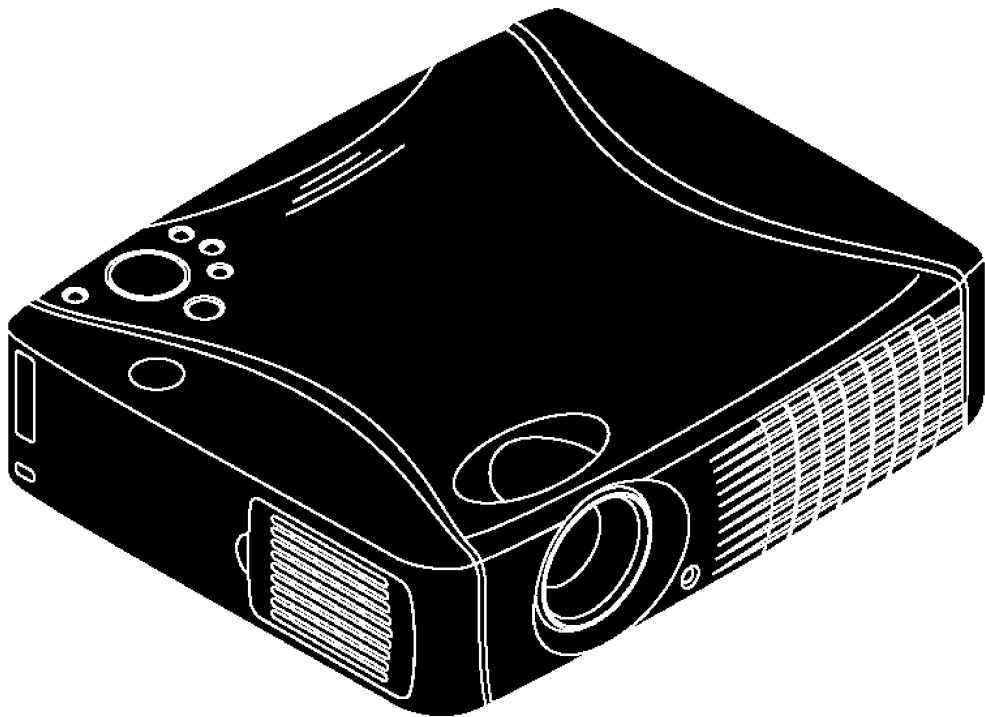

SPECIFICATIONS

Specifications

LCD panels

**0.7" Poly silicon LCD panel × 3,
RGB shutter method, using Translucent TN
crystal panels**

Drive method

**Active Matrix 4:3 Aspect Ratio panels, TFT
(Thin Film Transistor)**

No. of pixels

480 000 (800 × 600) stripe pixels × 3panels

Lens

**1-1.3 zoom lens, F2.3-2.6, f28 mm - 37 mm
Manual Focus**

Projector lamp

130 W UHM Lamp

Contrast ratio

300 : 1

Brightness

700 lumen / ANSI

No. of colors

16 777 216

Screen size

30" - 300"

Projection (throw) distance

1.6 m-15.7 m

Lens axis shift

6 : 1 Low position

Color systems

PAL/SECAM/NTSC/PAL-M/PAL-N/NTSC4.43

Video input signal

1 V [p-p], sync negative, 75 Ω terminated

S-Video input signal

**Y (luminance signal) : 1 V [p-p], sync negative,
75 Ω terminated**

**C (chrominance signal) : burst 0.286 V [p-p],
75 Ω terminated**

Audio input signal

0.32 V [rms]

Audio out

0.5 W Mono

RGB/YPB PR input signal

Video signal

**RGB Analog (0.7 V [p-p], 1.0 V [p-p] with sync
on green, 75 Ω)**

**YPB PR (Y:1.0 V [p-p], PB , PR :0.7 V [p-p], 75
Ω)**

Sync signal

H/V separate, H/V composite, or
Sync-on-Green

H-Frequency

24 KHz - 80 KHz (TTL Level)

V-Frequency

50 Hz - 86 Hz (TTL Level)

Connectors

S-Video Input : Mini Din 4-pin × 1

Video Input : RCA pin × 1

Audio Input : M3 stereo mini pin × 1

Serial Port (RS-232C) : Mini Din 8-pin × 1

RGB/YPB PR Input: D-Sub mini 15-pin × 1

Controls

Cabinet Buttons

Power ON/OFF, Menu, Input, ▲, ▼, ◀

(Volume -), ▶ (Volume +), Enter, Keystone

Remote Control Buttons

Power ON/OFF, Freeze, Shutter, Enter, Menu,

Input, ▲, ▼, ◀ (Volume -), ▶ (Volume +),

D.Zoom, Auto setup

Speaker

36 mm round

Operating Temperature

0 °C (32 °F) - 40 °C (104 °F)

Operating Humidity

20 % - 80 %

Storage Temperature

-20 °C to 40°C

(-4 °F to 104 °F)

40 °C to 60°C

(104 °F to 140 °F)

Storage Humidity

5 % - 85 %

(non-condensing)

Normal humidity

Power Supply

100 V - 240 V AC (50 Hz or 60 Hz) Automatic

Power consumption

210 W

Dimensions W × H × D

(excluding projected portion)

267 mm × 74 mm × 208 mm

Weight

2.5 kg

Approvals

FCC, UL, C-UL, CE, VED, CCIB

Note

Specifications and design subject to change without notice.


1

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagram, Circuit Boards, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

Caution: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance and prevent undesirable interference, use only the provided shielded VGA cable with 2 ferrite cores while connecting LCD to computer and all other connecting cables should be shielded. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

1. SAFETY PRECAUTIONS

1.1. GENERAL GUIDELINES

- 1. For continued safety, no modification of any circuit should be attempted.**
- 2. Disconnect AC Plug before disassembling this unit.**
- 3. It is advisable to use an isolation transformer in the AC supply before servicing.**
- 4. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.**
- 5. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers, shield, and isolation R-C combinations etc. are properly installed.**
- 6. After servicing, be sure to restore the wires, leads, insulation barriers, shields, etc.**

7. After servicing, make the leakage current checks to prevent the customer from being exposed to shock hazards.


Caution:

Use a separate Isolation Transformer for this unit when servicing.

1.2. LEAKAGE CURRENT CHECK


1. Connect AC Plug to 120 volt or 240 volt AC outlet.
Do not use the ground prong of AC Plug. (See Fig. 1-2-1)
Do not use a isolation transformer for this check.

Fig. 1-2-1

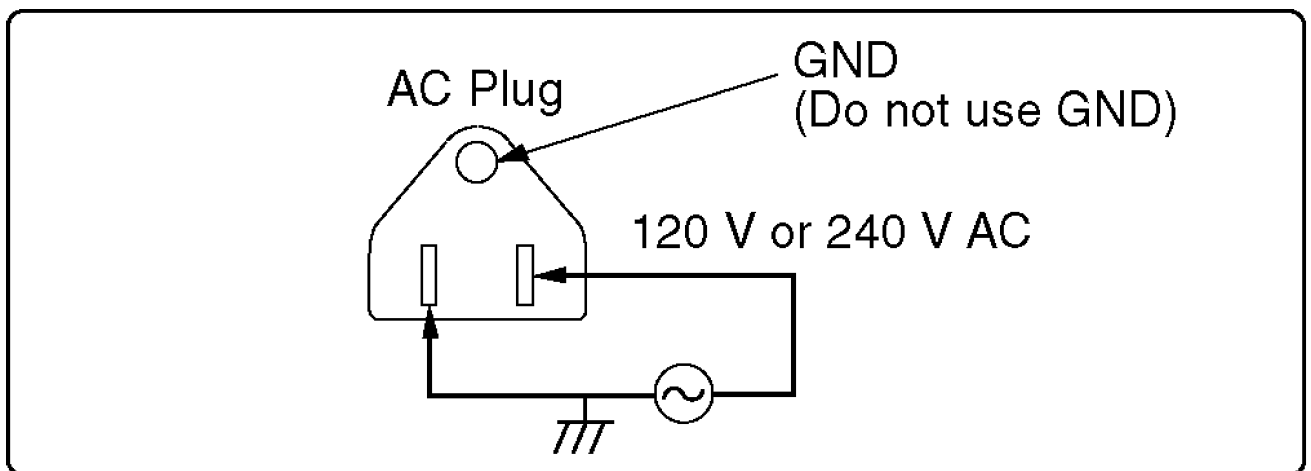

2. Connect a 1.5K ohms, 10 watts resistor, in parallel with a 0.15 μF capacitor, between each exposed metallic part on the set and a good earth ground. (See Fig. 1-2-2)

Fig. 1-2-2

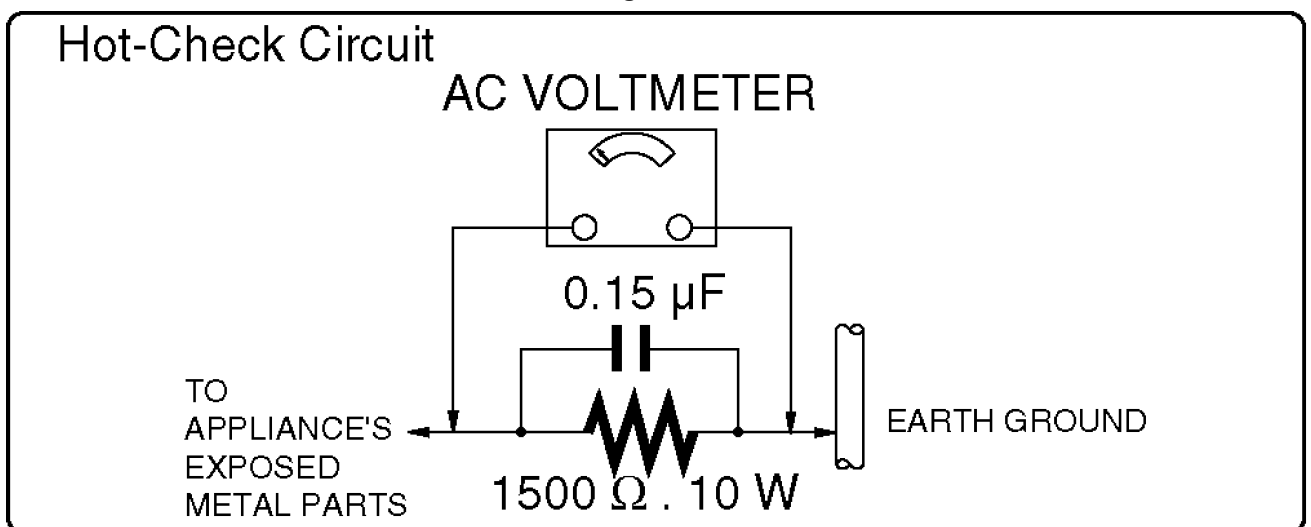


3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.

4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 1.125 volt RMS. A leakage current tester (Simpson Model 229 equivalent) may be used to make the hot checks, leakage current must not exceed 0.75 milliamp. In case a measurement is outside of the limits specified, there is a possibility of shock hazard, and the LCD Projector should be repaired and rechecked before it is returned to the customer.

1.3. UV-PRECAUTION

1. Be sure to disconnect the AC Plug when replacing the lamp.
2. Since the lamp reaches a very high temperature during its operation, wait until it has completely cooled off when replacing the Lamp Unit.
3. The lamp emits small amounts of UV-Radiation.
Avoid direct-eye contact.

Fig. 1-3-1

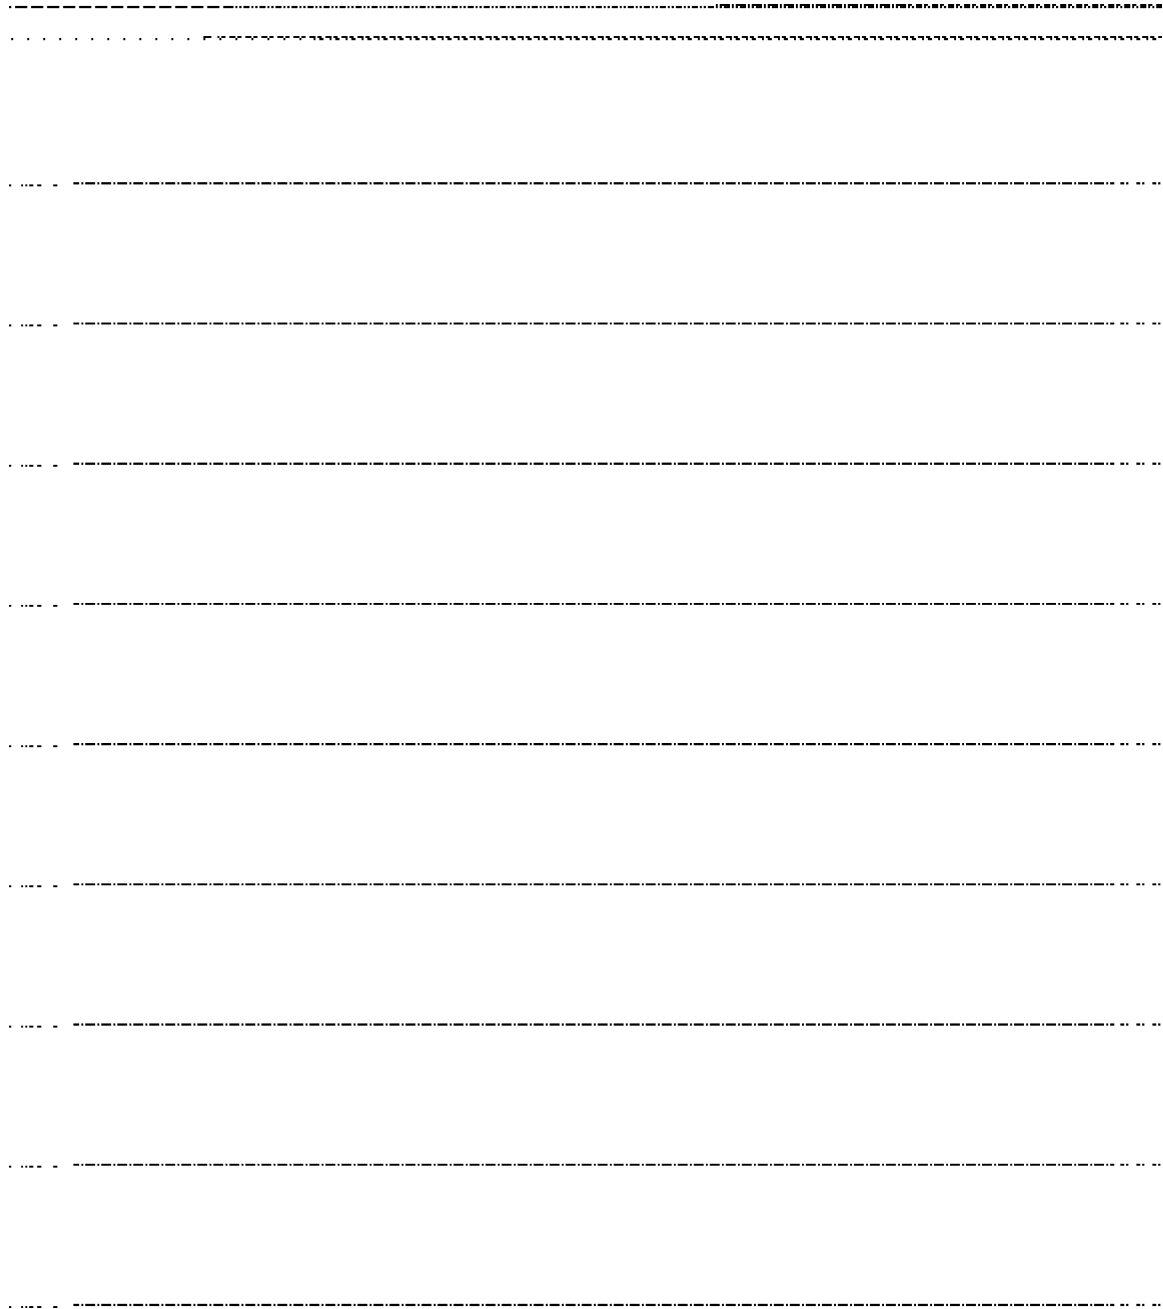

2. OPERATION GUIDE

Note:

- At this service manual, it mentions only the Operating Instructions of PT-LC50U as the representative of PT-LC50U, PT-LC50E and PT-LC150.
- Because some pages in the user instruction manual are used for this chapter (page

5 through 77 in this service manual) without change, note that the page numbers shown in the sentences of this chapter are those of the user instruction manual.




3. SERVICE CAUTIONS AND NOTES

3.1. SERVICE POSITION

Because of this projector's structure, service should be provided by turning this projector over, accordingly the screens are seen reversely during the service. The position shown in Fig. 3-1-2 is used for checking, adjusting and replacing parts. Extension Cable (LSUA0010, LSUA0032) is necessary for servicing as shown in Fig. 3-1-1.


Fig. 3-1-1

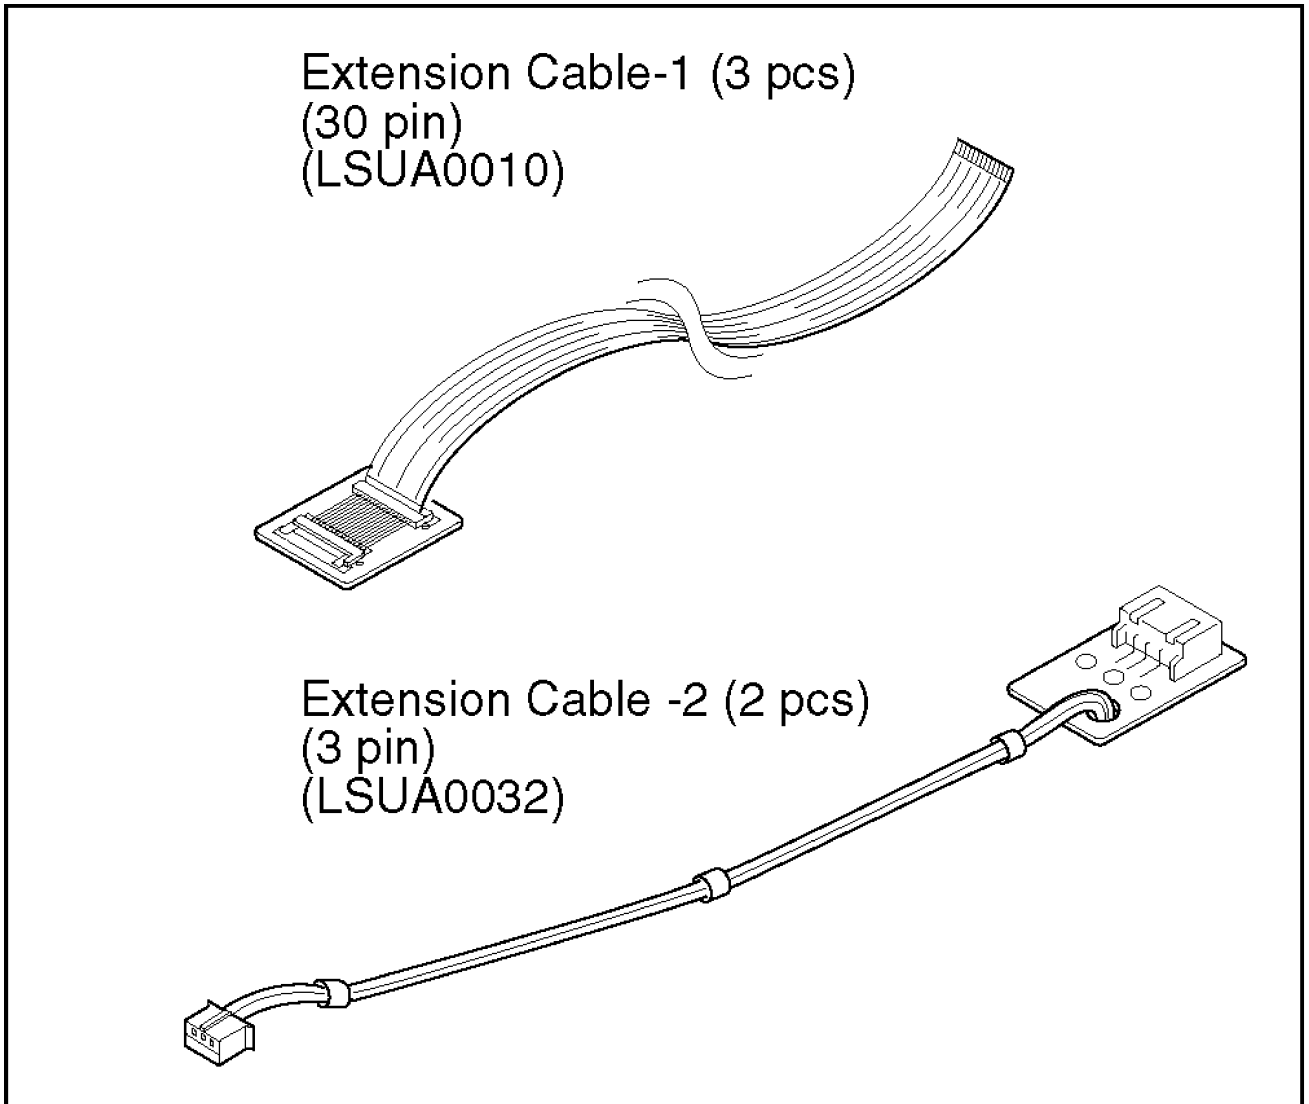

1. In the order described in the "4.2. Disassembly Method of Cabinet Parts" of "4. Disassembly/Assembly Procedures", remove the Bottom Case Unit.
2. Remove the Joint Plate L, R and Ballast Holder as shown in Fig. 4-2-7.
3. Disconnect connectors P1901, P1902, P2002-P2004 and P3501-P3503 on the Main C.B.A. as shown in Fig. 4-2-8.
4. Connect Extension Cables as follows:
 - A. Connect Extension Cable-1 (30 pin) between P3501 on the Main C.B.A. and the LCD Red Unit.
 - B. Connect Extension Cable-1 (30 pin) between P3502 on the Main C.B.A. and the LCD Green Unit.
 - C. Connect Extension Cable-1 (36 pin) between P3503 on the Main C.B.A. and the LCD Blue Unit.
 - D. Connect Extension Cable-2 (3 pin) between P1901 on the Main C.B.A. and the Duct Fan (1).
 - E. Connect Extension Cable-2 (3 pin) between P1902 on the Main C.B.A. and the Duct Fan (2).

5. Carefully place the Main C.B.A. as shown in Fig. 3-1-2.
6. After servicing, remove Extension Cables.
7. Reinstall the Main C.B.A., and reconnect connectors.
8. Make sure that all wires and leads are placed in their original position.


Fig. 3-1-2

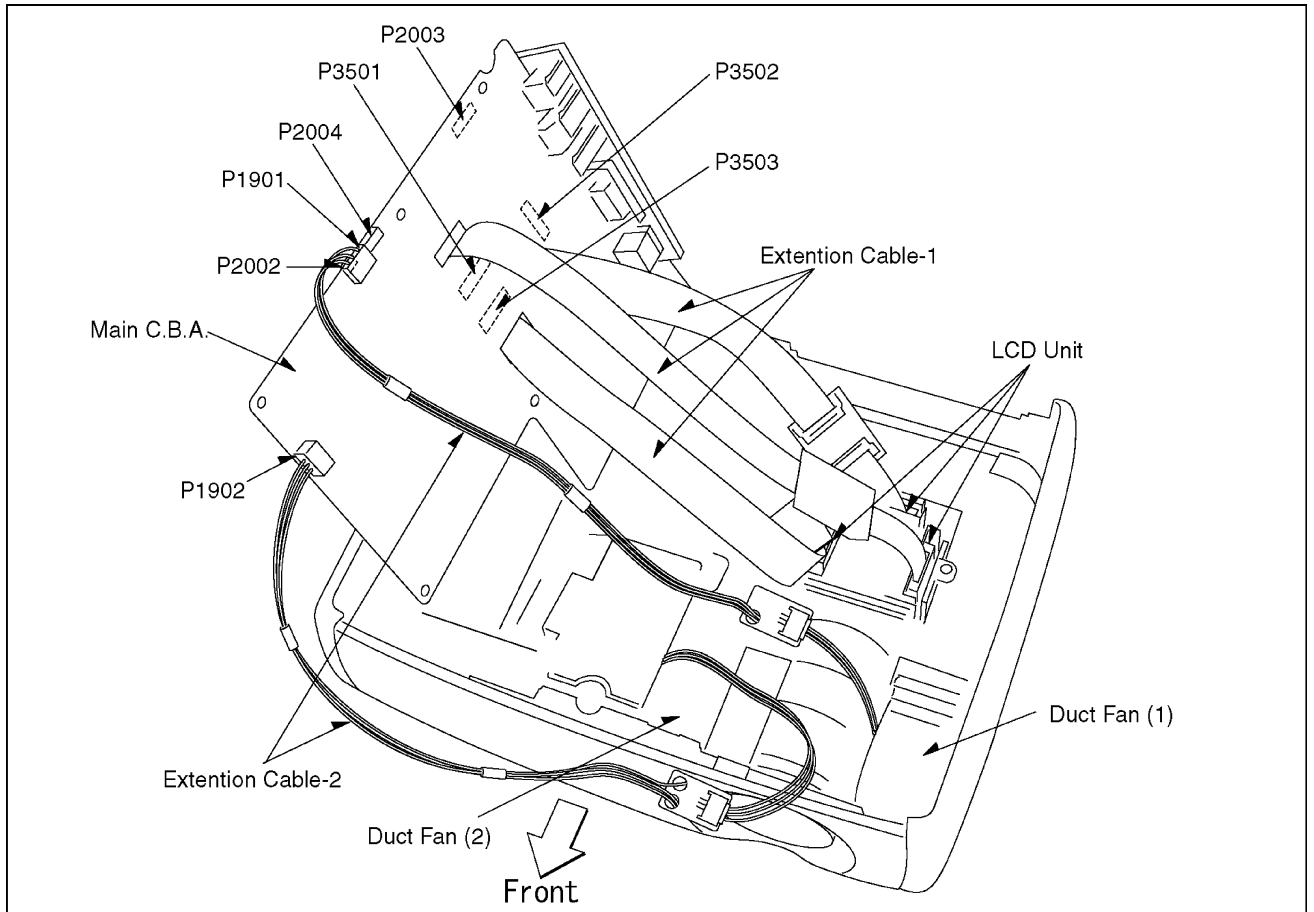

3.2. How to display Lamp operation time (Service Mode)


1. Under the condition of the Lamp Cover SW "ON", plug in the Power Cord.
2. Input a Signal.
3. Connect a jumper wire between TP2007 and TP2008 on Main C.B.A. for over 5 seconds as shown in Fig. 3-2-1.

Fig. 3-2-1

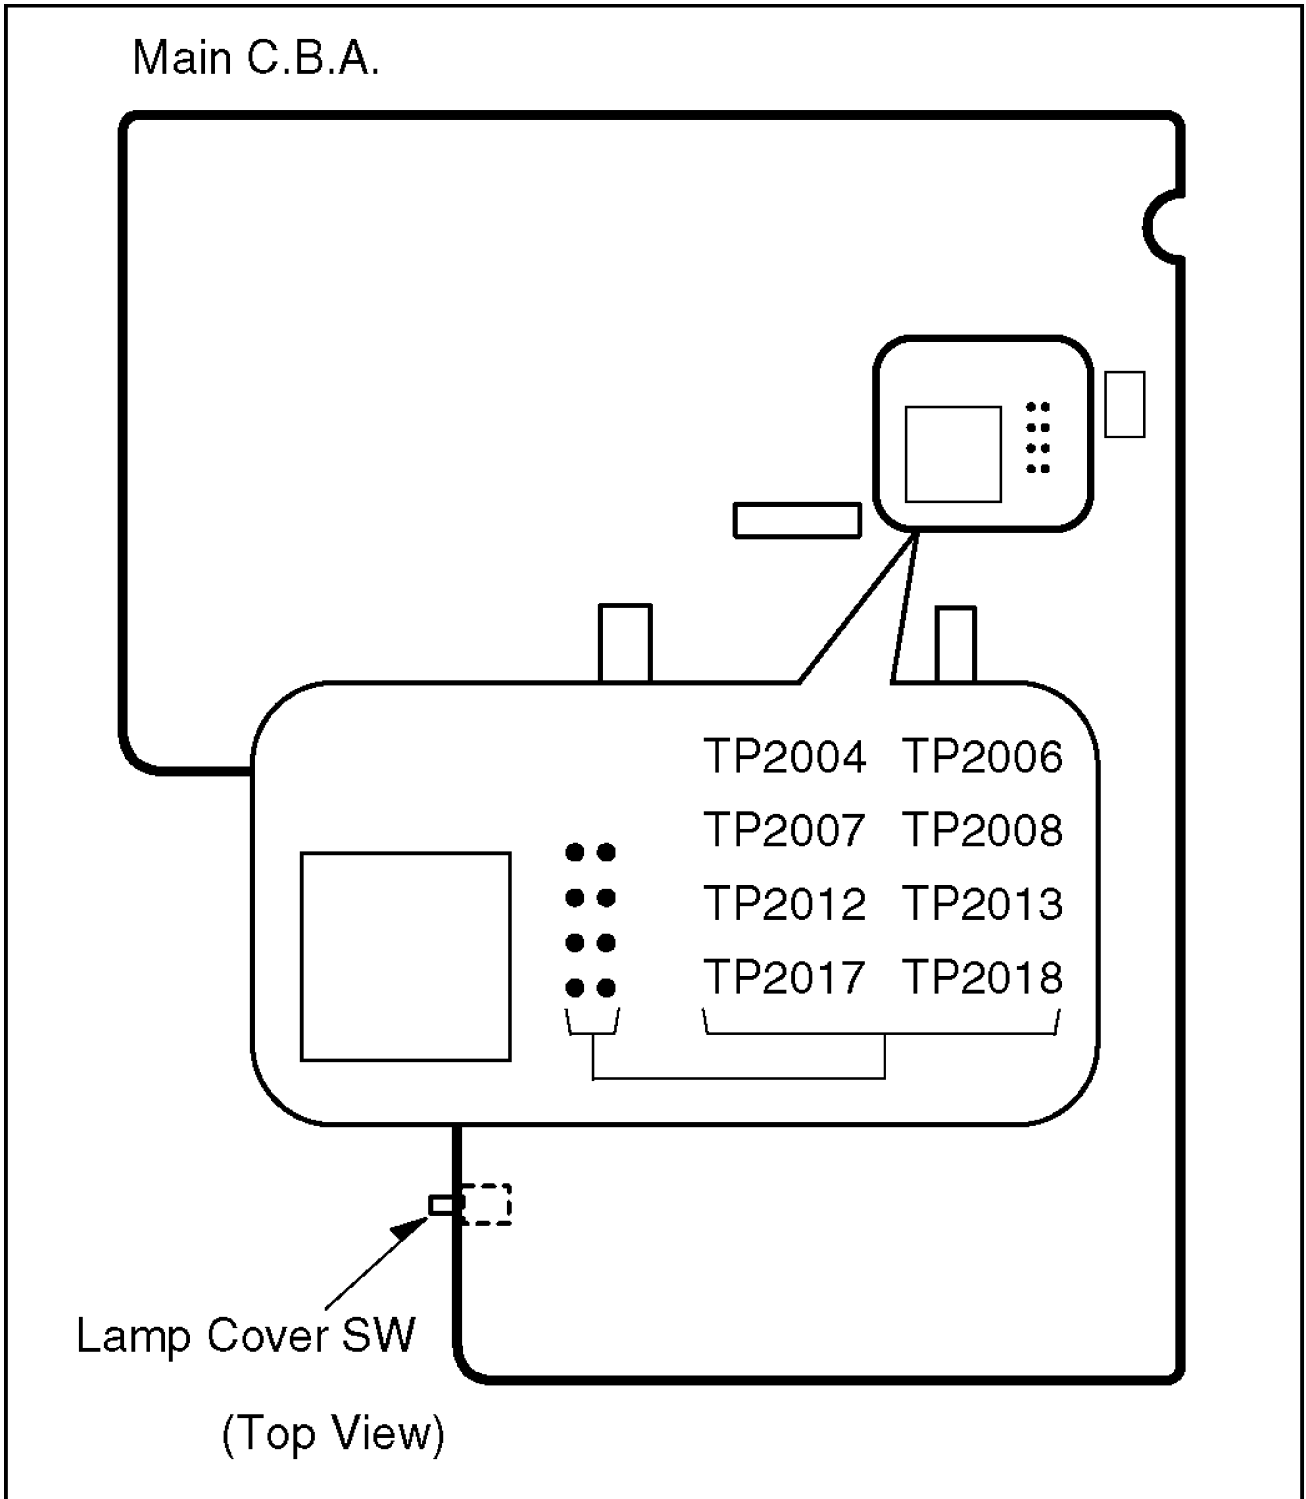

4. Lamp operation time will be displayed as shown in Fig. 3-2-2.

Fig. 3-2-2

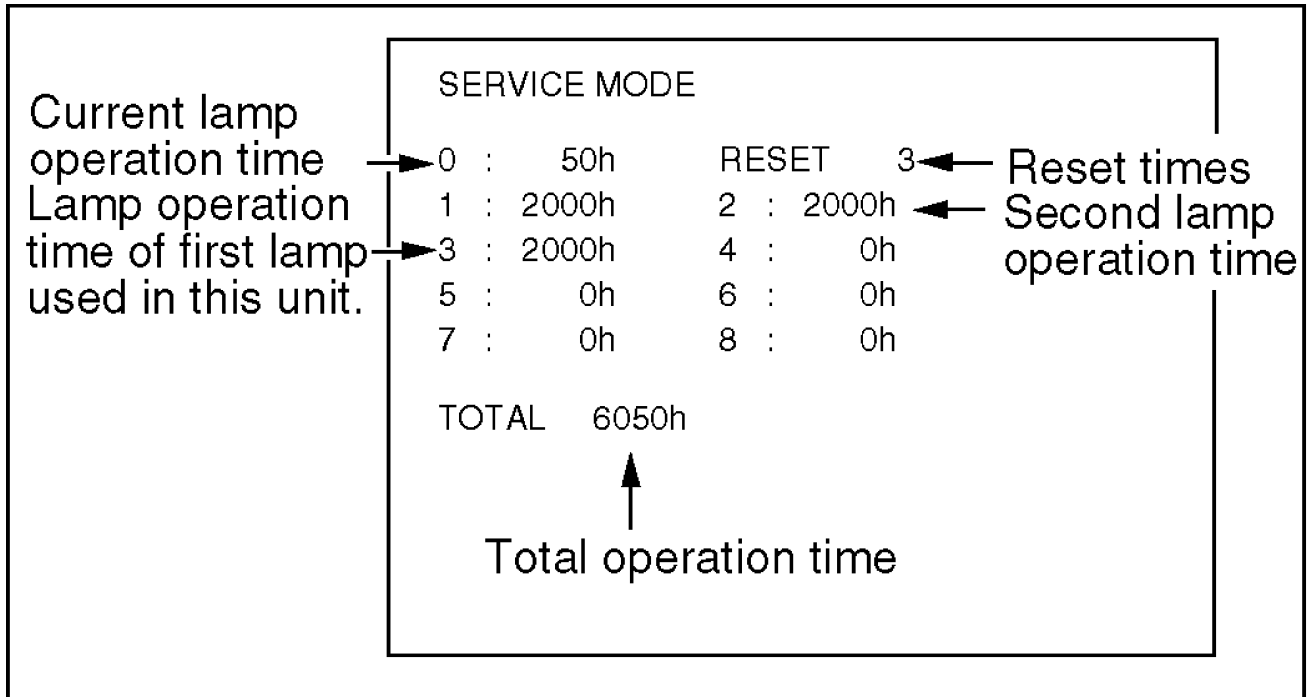

5. Connect a jumper wire between TP2007 and TP2008 for over 5 seconds again or press MENU button on remote control in order to release from service mode.

Note:

After replacing Main C.B.A., memory data such as history of lamp operation time will be reset. However, it can be remained by installing EEPROM IC (IC2006) to replaced Main C.B.A. from original Main C.B.A.

3.3. How to initialize EEPROM IC

If EEPROM IC (IC2006) on Main C.B.A. are replaced:

After replacing EEPROM IC (IC2006), be sure to perform each of following steps in the order presented.

1. Connect a jumper wire between TP2017 and TP2018 on Main C.B.A. for over 5 seconds to set to factory set mode. Then, remove the jumper wire.
2. "FACTORY" appears on screen.
3. Connect a jumper wire between TP2017 and TP2018 again for over 5 seconds to initialize EEPROM IC. Then, remove the jumper wire.
4. "SELF CHECK" appears on screen.
5. Remove jumper wires and "MEMORY OK" appears on screen.
6. Perform adjustments 5.4.1. through 5.4.8., 5.4.11. and 5.4.12.

7. After completing all adjustments, press the MENU button to memorize adjustment data in EEPROM IC and release from the Factory Adjust mode. Otherwise, adjustment data will be cancelled.

Note:

When initializing EEPROM IC, memory data such as history of lamp operation time and adjustment data will be reset.

3.4. Lamp replacement procedure

Caution:

Because of possibility of injury, strictly follow the replacement procedure below.

1. After the cooling fan has stopped, and STANDBY(R) ON(G) indicator turns solid red, unplug the power cord.


Note:

Please wait more than one hour for lamp replacement.

[If you need to replace the lamp more urgently]

- The LCD Projector has a forced cooling feature. After the POWER switch is turned OFF, and sometime during about the first minute of the normal cooling fan operation, press MENU for 5 seconds. The cooling fan will change to high speed for about 10 minutes. (The "C-d" STATUS CODE will be displayed.)
2. Loosen 2 screws (A) using a screwdriver as shown in Fig. 3-4-1.
 3. Remove the Lamp Cover Unit.

Fig. 3-4-1

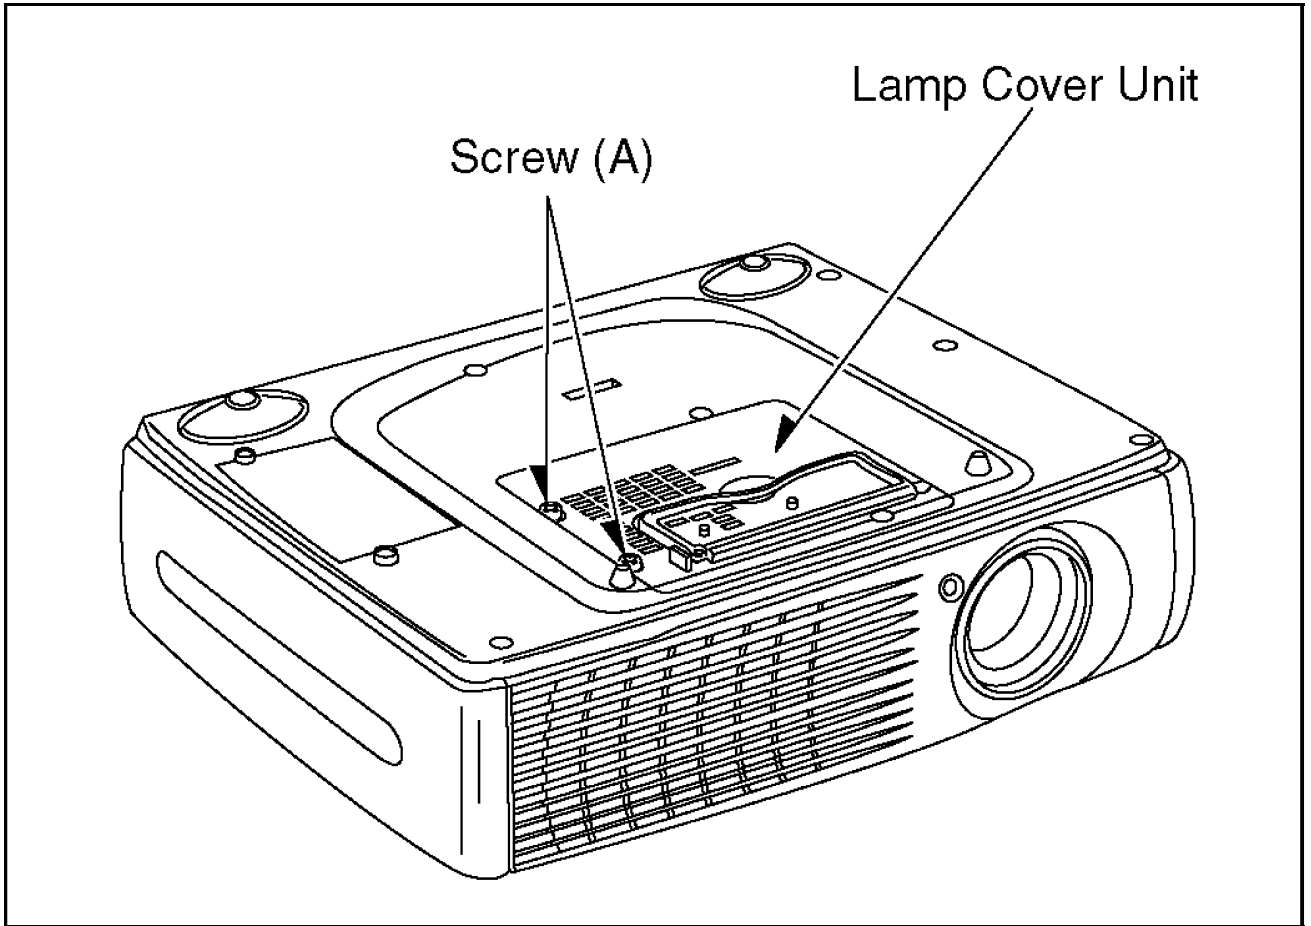

4. Push the portion (a) of the Lamp Hold Lever to the direction of the arrow as shown in Fig. 3-4-2 and release the Lamp Hold Lever from the Fastening Hook.

5. Carefully pull the Lamp Unit.

WARNING:

- The lamp may be hot. Be careful when handling.

CAUTION

- High-pressure lamp may explode if improperly handled.

- Danger of injury due to lamp fragments.

Fig. 3-4-2

6. Install the new Lamp Unit.

Caution:

- Make sure that the Lamp Hold Lever is in the original position as shown in Fig. 3-4-2.
- Properly dispose of old Lamp.

7. Replace 2 screws (A) using a screwdriver as shown in Fig. 3-4-1.


8. Plug the power code.

9. Press POWER and INPUT buttons together for about 5 seconds when lighting up red by POWER LED to reset lamp time.

3.5. Cleaning the Projection Lens

Use lens cleaning paper and cleaner available at your local camera shop, etc. Dampen the cleaning paper with cleaner and gently wipe the surface of the lens from the center outward to remove dust as shown in Fig. 3-5-1.

Fig. 3-5-1

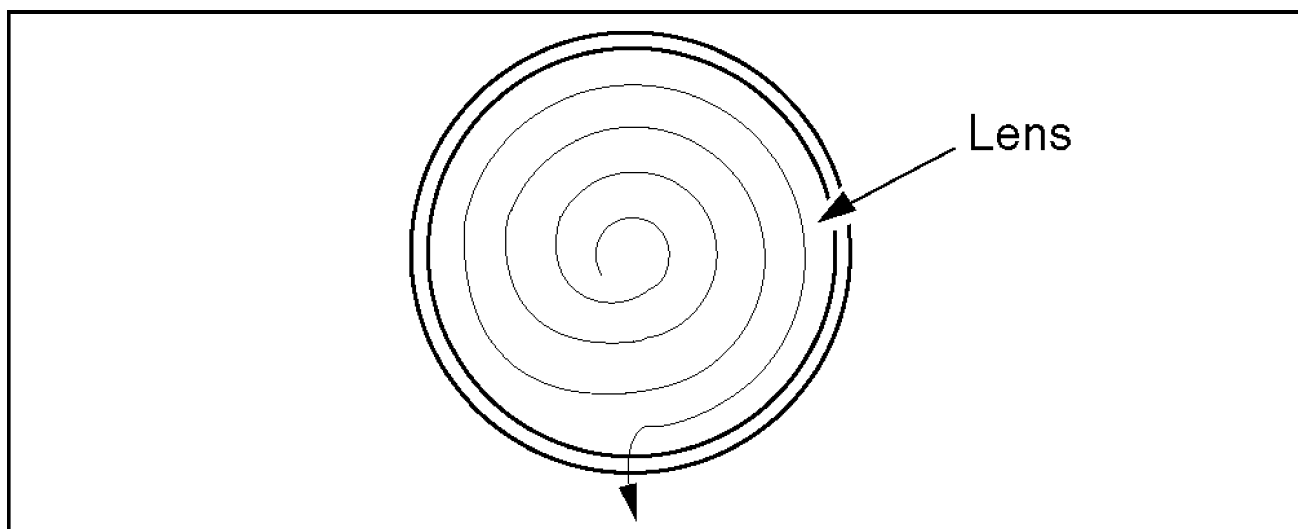

Note:

Do not use excessive force when cleaning the lens.

3.6. Connection of the Flexible Cables to Trap Connector

Fig No.	No. of Pins	C.B.A.	Type
P3501	30 pin	Main C.B.A.	A
P3502	30 pin	Main C.B.A.	B
P3503	30 pin	Main C.B.A.	A
P2003	18 pin	Main C.B.A.	B

(Removal and Installation of Flexible Cable)

■ Removal


(Type A)

1. On the Trap Connector, swing the Locking Tab to release the Trap portion of the Connector. Then pull Flexible Cable out to remove as shown in Fig. 3-6-1.

(Type B)

1. On the Trap Connector, swing both ends of the Locking Tab to release the Trap portion of the Connector. Then pull Flexible Cable out to remove as shown in Fig. 3-6-1.

Fig. 3-6-1

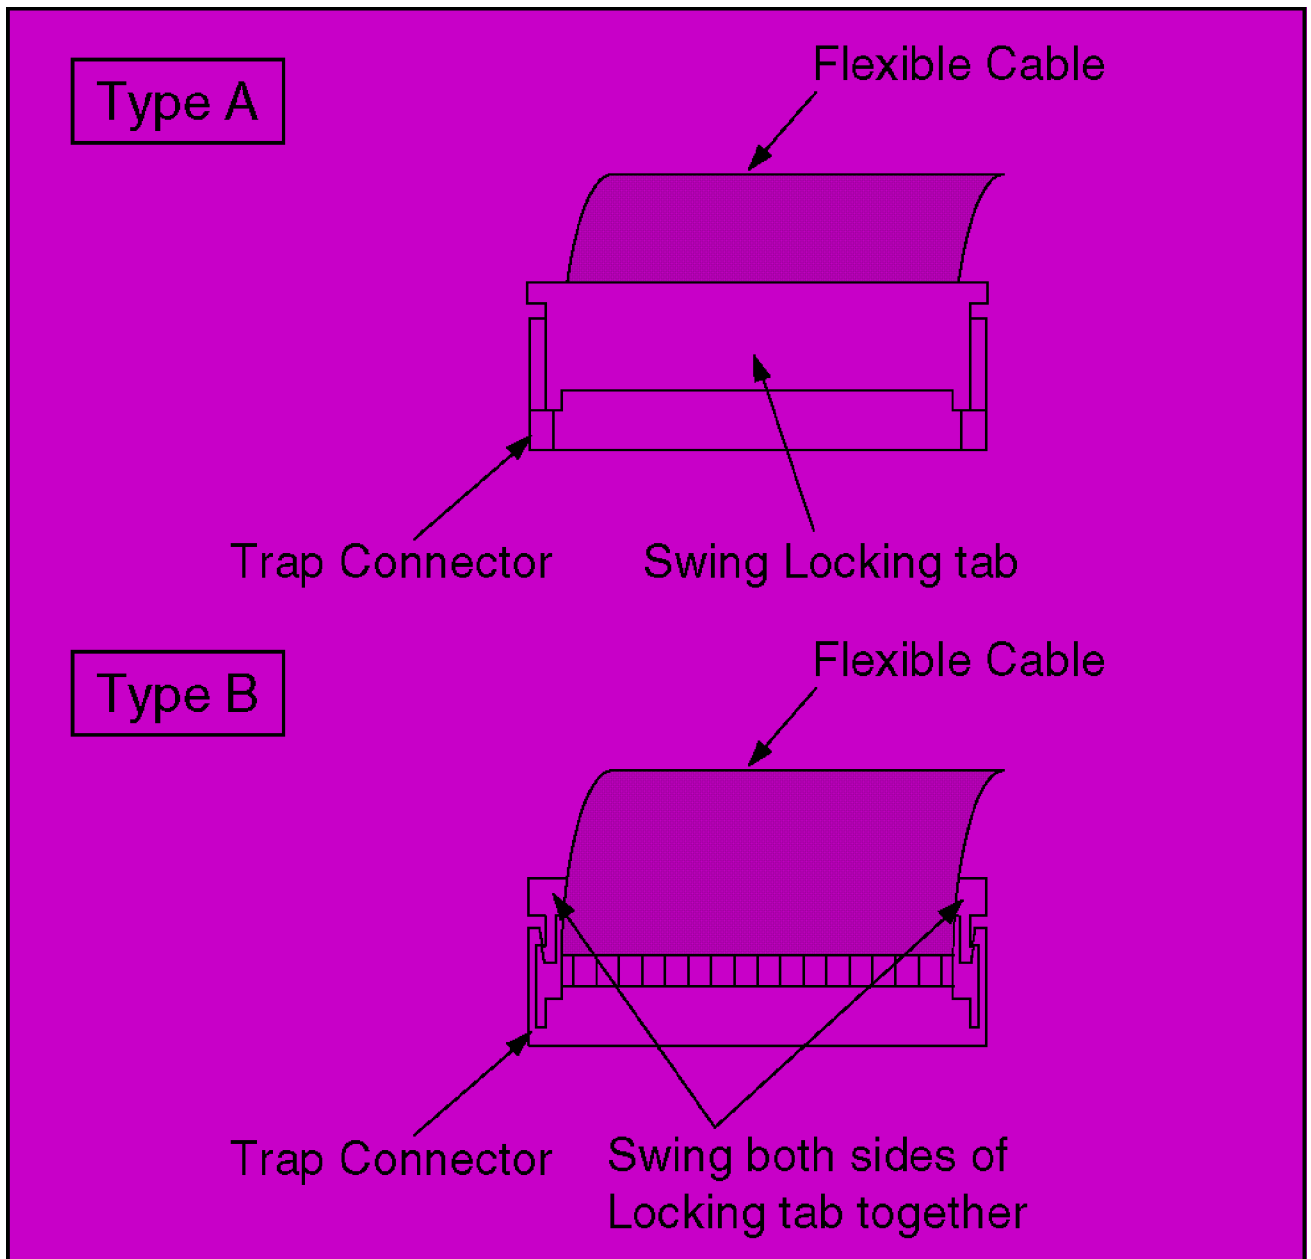

■ Installation

1. Insert the end of the Flexible Cable into the Trap Connector.
2. Without twisting the Cable, press the Locking Tab in into its locked positions.
3. Gently and slightly pull up on the Cable to confirm if it is installed firmly.

3.7. External Interface (RS-232C)

3.7.1. Outlined Function

Through connection with external equipment (e.g. personal computer), it can control the projector from outside or can inquire about status.

3.7.2. Requirements for Receiving

- Lamp control command or inquiry command can be received ordinarily.
- Other commands can be received when lamp is set at ON only.
(When lamp is set at OFF, it does communication response to command only and does no actual work.)

3.7.3. Operation

1. Communication

- Speed : 19 200 bps (ordinary control)
- Parity : NONE
- Split bit : 1 bit
- Character length : 8 bit
- XON/OFF : NONE

2. Connection

In this case, the projector is DCE (Data Circuit Ending device). Connect it with the personal computer by a straight cable.

3. Configuration of Command

A. Command Format (Personal computer→Projector)

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7 - 9	Since Byte 10
Magic Number		Type	Packet Size		CRC		Command	Parameter
0xBE	0xEF	type	size lo	size hi	crc lo	crc hi	command	parameter

Data Name	Description	Data Type
Magic Number	Command transmission starting flag (0xBE, 0xEF fixed)	BINARY
Type	Classification of command codes of Byte 7 and those that follow (Refer to Command List)	BINARY
Packet Size	Number of bytes of command codes of Byte 7 and those that follow (Refer to Command List)	BINARY
CRC	Enciphered data misconception preventing code (CRC hi = CRC lo = 0x00 fixed)	BINARY
Command	Command for actual control (Refer to Command List)	ASCII
Parameter	Parameter attached to command (Refer to Command List)	ASCII

B. Response (Projector→Personal computer)

At the end of a command, either one of the following is returned.

Put the response data between [STX] and [ETX] , and with [ACK] at the end.
(At a normal end)

- On execution of a control command

- [STX] [Command] [(parameter)] [ETX] [ACK]
 - On execution of a inquiry command
 [STX] [(parameter)] [ETX] [ACK]
 (At an abnormal end, or on reception of an invalid command/parameter))
- [STX] E R 4 N₂ N₃ [ETX] [ACK]
 N₂ and N₃ show error contents.
 - ER401 = Command invalid (or abnormal end)
 - ER402 = Parameter invalid

3.7.4. Command List

3.7.4.1. Control command (The parameter can not be omitted)

Command Name <>: Parameter Format	Description	Type	Packet Size		Projector Replying <>: Parameter Format
			size_hi	size_lo	
PON	POWER ON	0x80	0x00	0x03	PON
POF	POWER OFF	0x80	0x00	0x03	POF
IIS <input signal>	INPUT SELECT	0x82	0x00	0x06	IIS <input signal>
ORF <RGB signal>	RGB INPUT TERMINAL SETTING	0x81	0x00	0x04	ORF <RGB signal>
AVL <volume>	AUDIO VOLUME ADJUSTMENT	0x82	0x00	0x06	AVL <volume>
AMT <off on>	AUDIO MUTE ON/OFF	0x81	0x00	0x04	AMT <off on>
OPM <off on>	VIDEO MUTE ON/OFF	0x81	0x00	0x04	OPM <off on>

3.7.4.2. Inquiry command

Command Name	Description	Type	Packet Size		Projector Replying <>: Parameter Format
			size_hi	size_lo	
Q\$\$	The confirmation of the lamp condition	0x80	0x00	0x03	<lamp status>

3.7.4.3. Parameter Format

Parameter Format	Parameter Size (Byte)	Parameter Definition
<input signal>	3	VID = SVD = VIDEO (or S-VIDEO) TERMINAL INPUT RGB = RGB (or YPB PR) TERMINAL INPUT
<RGB signal>	1	0 = RGB, 1 = YPB PR
<volume>	3	DECIMAL SYSTEM (without the mark) (000 ~ 063)
<off on>	1	0 = OFF, 1 = ON
<lamp status>	1	0 = STANDBY, 1= DURING LAMP LIGHTING-UP CONTROL, 2 = LAMP ON CONDITION, 3 = DURING LAMP GOING-OUT CONTROL


3.8. Replacement Procedures for CSP(Chip Size Package) IC

3.8.1. Equipment

- 1) Spot Heater
- 2) Vacuum Pick-up


3.8.2. Preparation

Fig.3-8-1

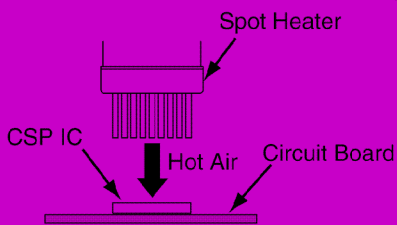Fixture	Preparation for Fixture	Condition		Warming-up
		Heat Control Level	Air Control Level	
Spot Heater	Set Spot Heater over CSP IC.	Level 8.5 (245 °C)	MAX	After setting fixtures, turn on the power. Then, wait for approx. 5 minutes to stabilize air condition.
Reference for Temperature				

3.8.3. Removal of CSP IC

Fig.3-8-2

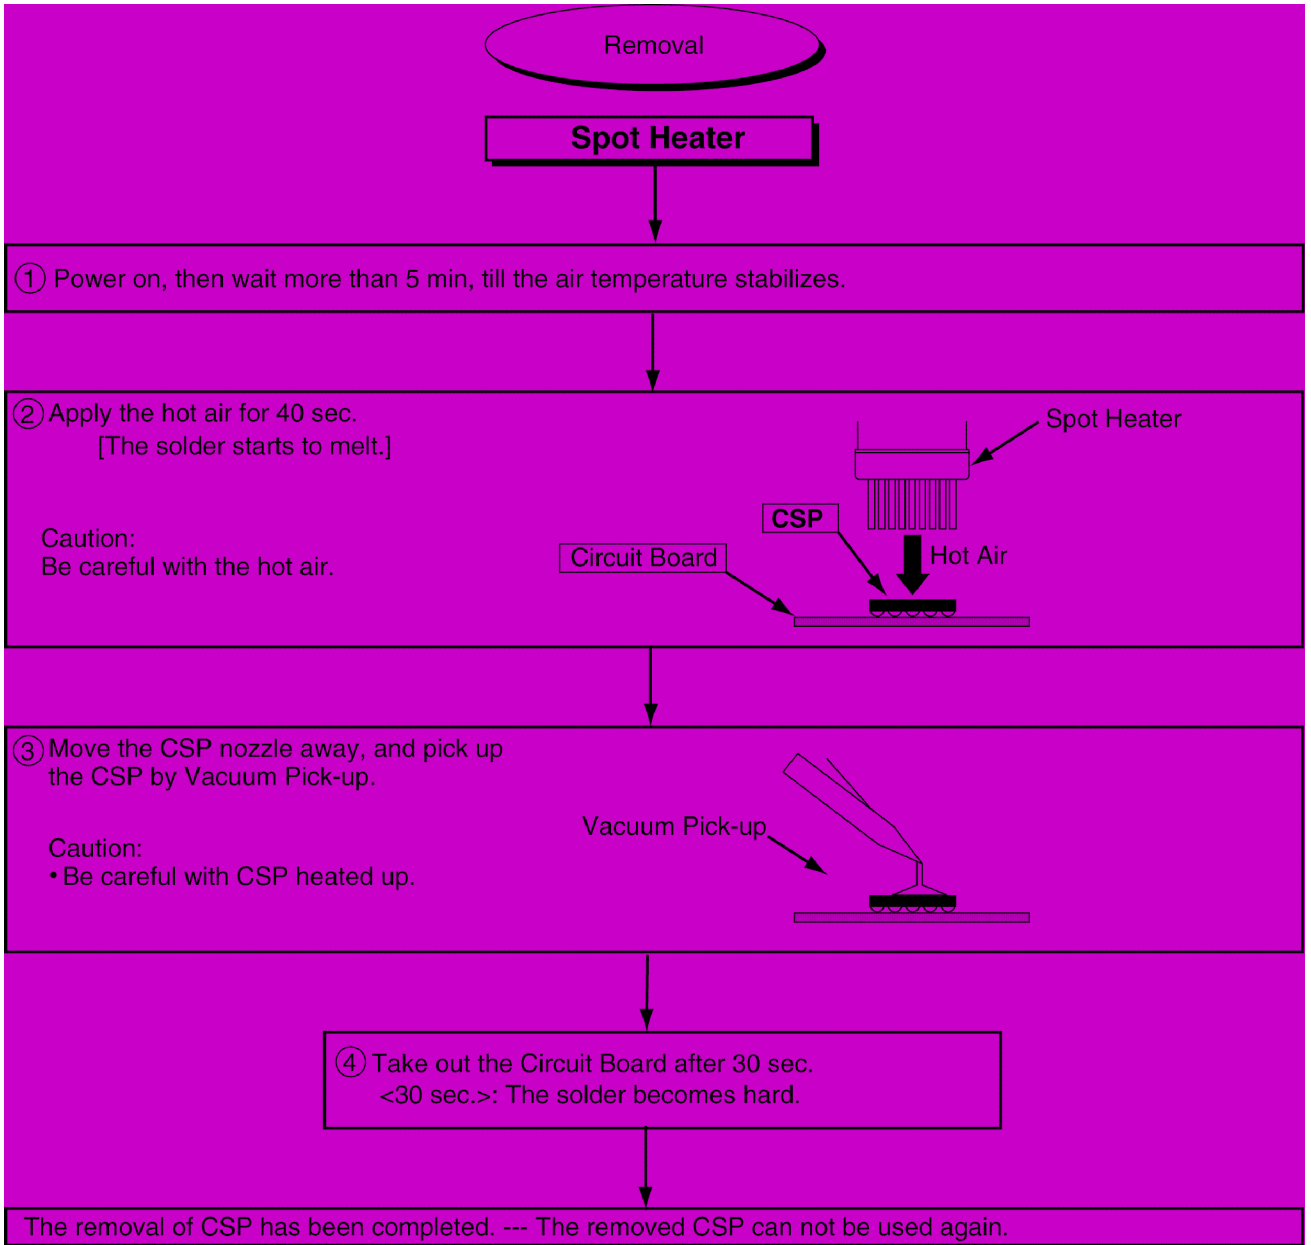

3.8.4. Installation of CSP IC

Fig.3-8-3

Mounting of CSP

A. Cleanig

① Applying the flux to the round terminal pattern.


Apply the flux using an applicator, then tap it on round terminals.

② Applying the solder to round terminals of PCB. --- [Using string solder]

Apply the solder to the soldering iron, then move the soldering iron on the round terminals so that the solder evenly stays on the round terminals (Confirm with Loupe).

Note:

- Be sure to make all solders applied are the same in size and height.

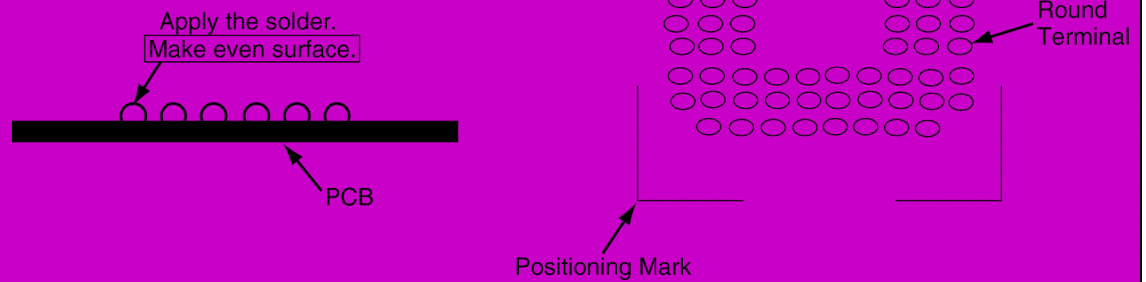

③ Cleaning of the round terminal pattern using an applicator with the cleaner (alcohol etc.).

④ Applying the flux to the round terminal pattern.


Note: Do not let any dust get into the flux.

B. Positioning

⑤ Positioning of new CSP on the round terminal pattern.

- Put CSP on the round terminal pattern so that 4 corners of CSP meet the positioning marks printed on PCB.

Fig.3-8-4

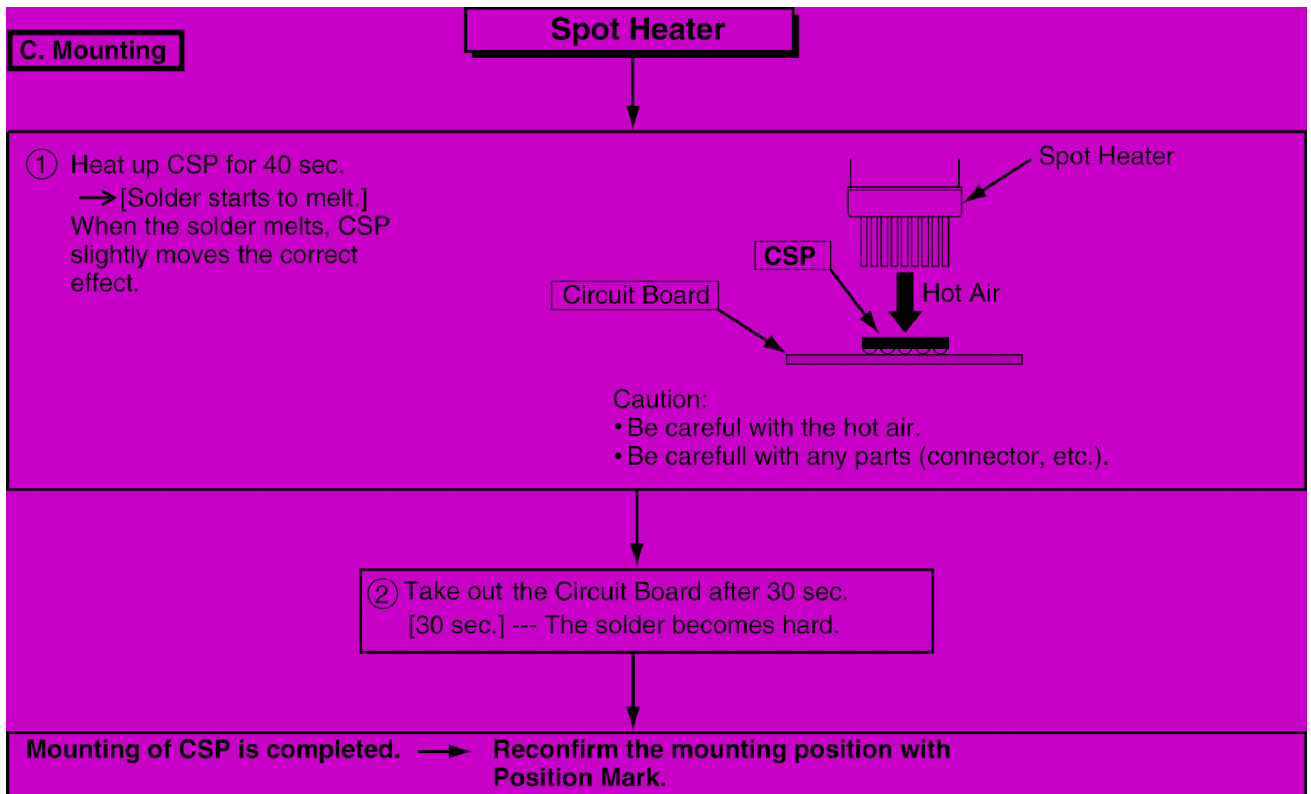

3.9. How to replace the lithium battery

Ū Inserting the battery


Insert the lithium battery which is supplied with the remote control unit, making sure that the polarities are correct.

WARNING:


Replace battery with CR2025 only. Use of another battery may present a risk of fire or explosion.

Caution: Battery may explode if mistreated. Dispose of used battery promptly. Keep away from children. Do not recharge, disassemble or dispose of in fire.


1. While pushing the battery holder tab to the right, pull out the battery holder.

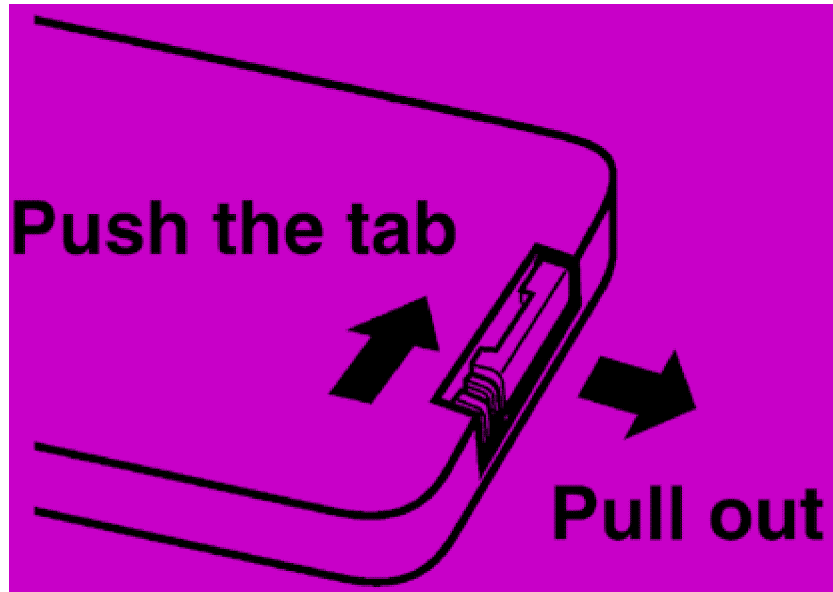

2. Insert the battery into the battery holder so that the + side is facing upward.

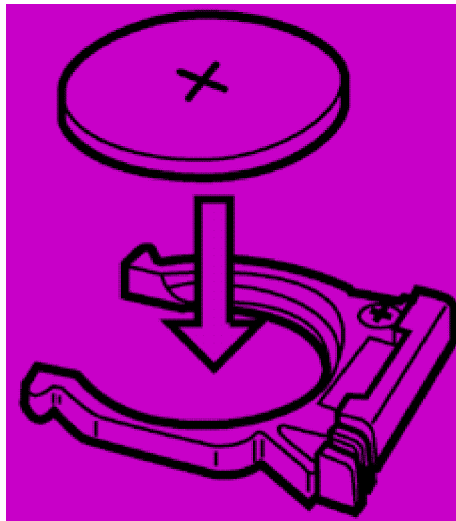

3. Insert the battery holder.

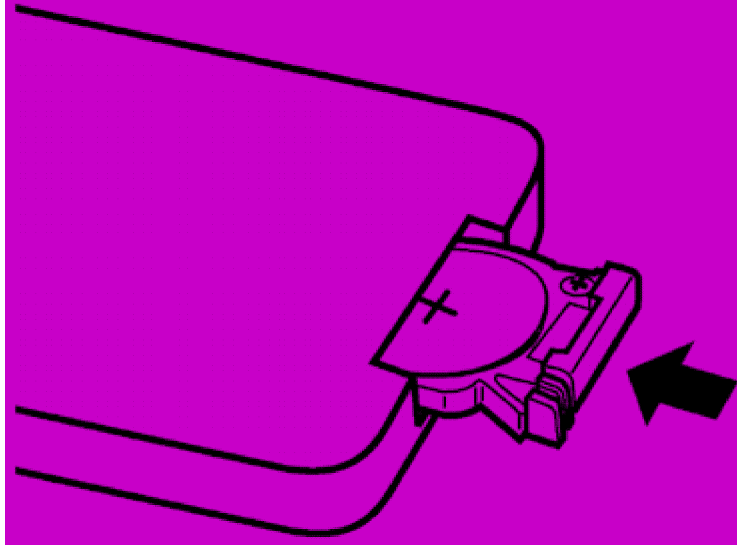

Note

- Do not drop the remote control unit.
- Keep the remote control unit away from liquids.
- Remove the battery if not using the remote control unit for long periods.

3.10. Mouse Remote Control Unit (Optional Accessory)


The Mouse Remote Control Unit is not serviceable.
Do not try to disassemble the unit.

4. DISASSEMBLY/ASSEMBLY PROCEDURES

4.1. DISASSEMBLY FLOWCHART OF CABINET PARTS

This flowchart indicates the disassembly steps of the cabinet parts and the P.C. Boards. When reassembling, perform the step(s) in the reverse order.

Fig. 4-1-1

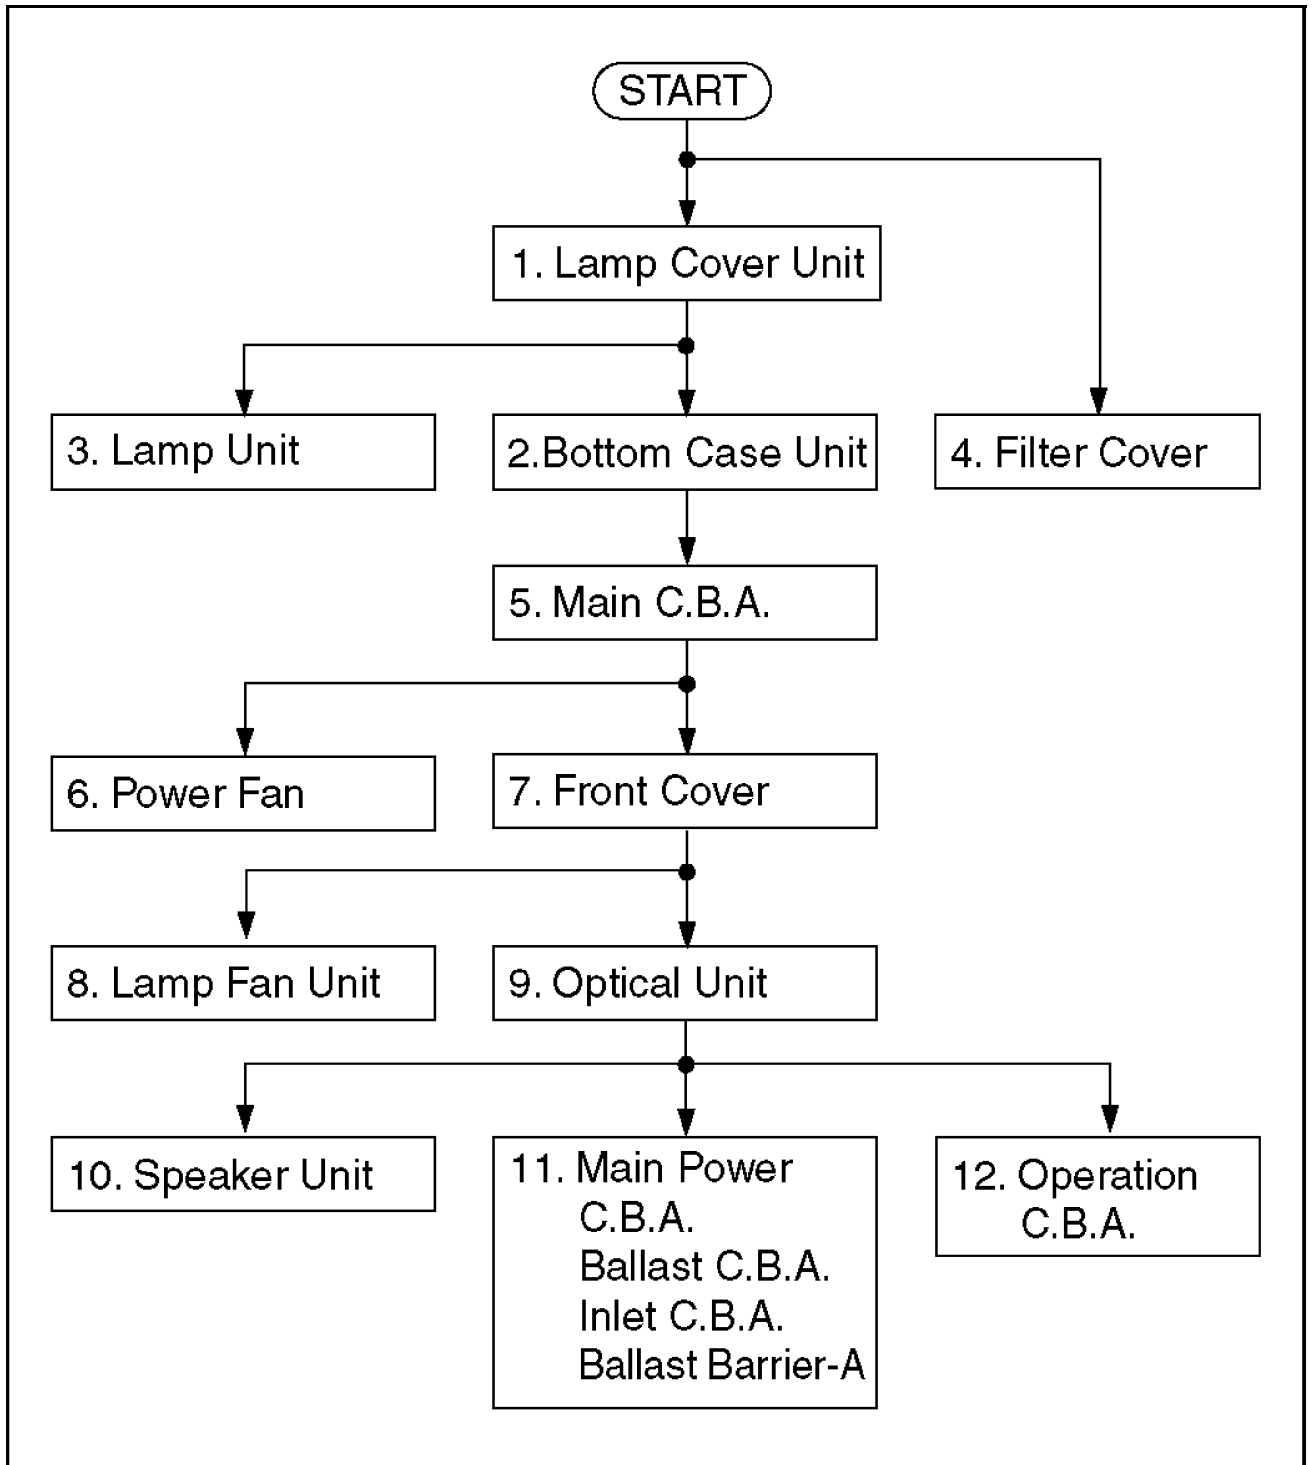


4.2. DISASSEMBLY METHOD OF CABINET PARTS

4.2.1. Removal of the Lamp Cover Unit

1. Loosen 2 screws (A) as shown in Fig. 4-2-1.


Fig. 4-2-1

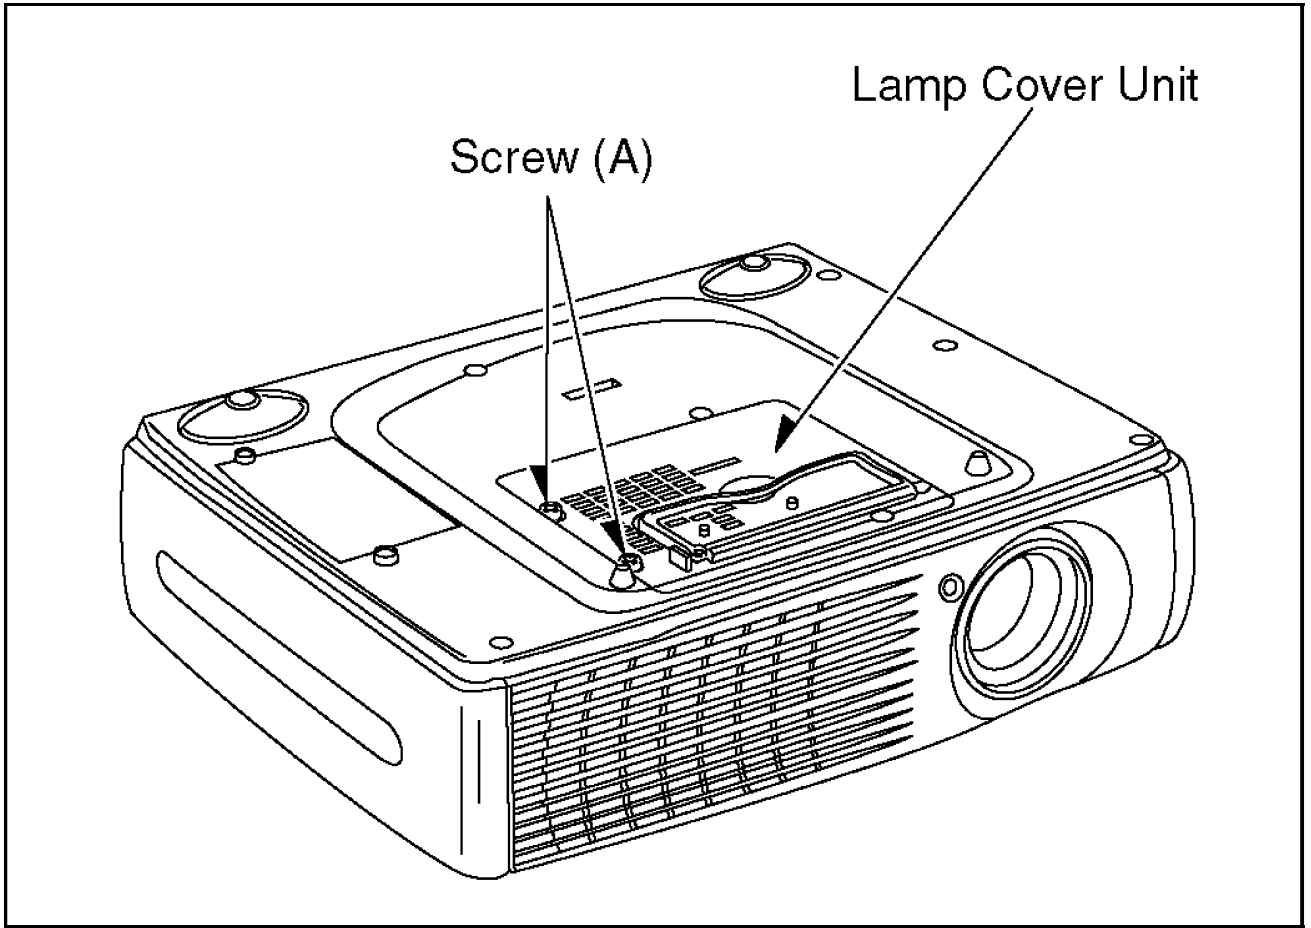

4.2.2. Removal of the Bottom Case Unit


1. Remove 4 screws (B), 6 screws (C) and a screw (D) as shown in Fig. 4-2-2.

Fig. 4-2-2

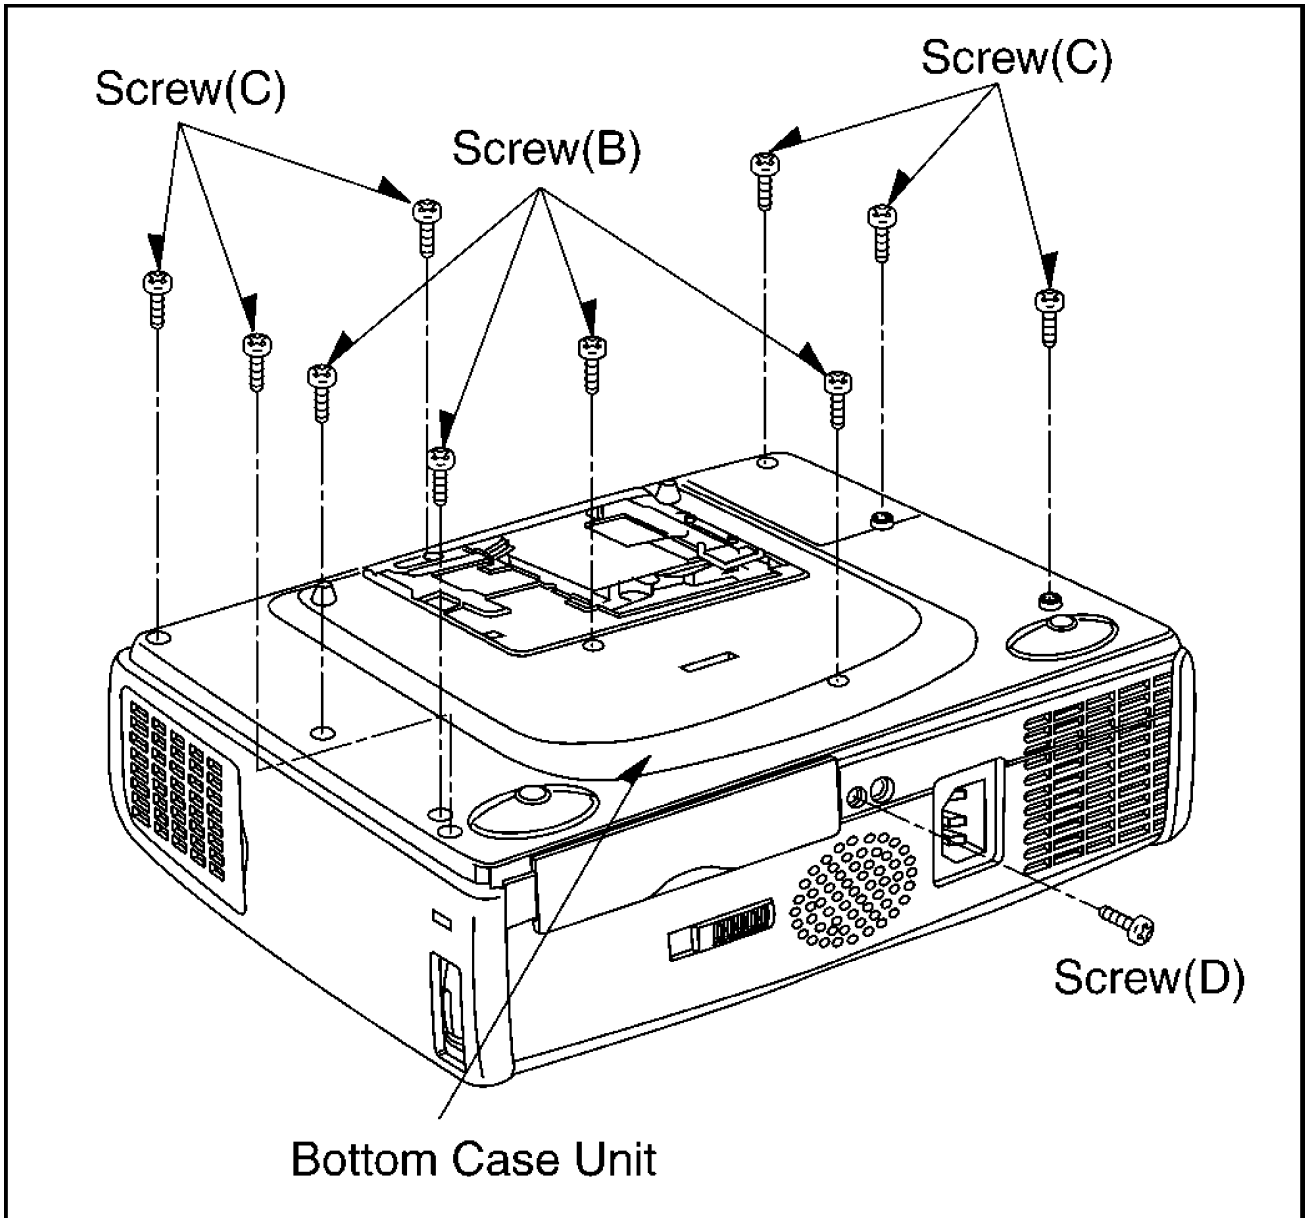

2. Carefully pull the Tab (A) side of the Bottom Case Unit as shown in Fig. 4-2-3.
3. Carefully remove the Bottom Case Unit with paying attention to the Tab (B).

Fig. 4-2-3

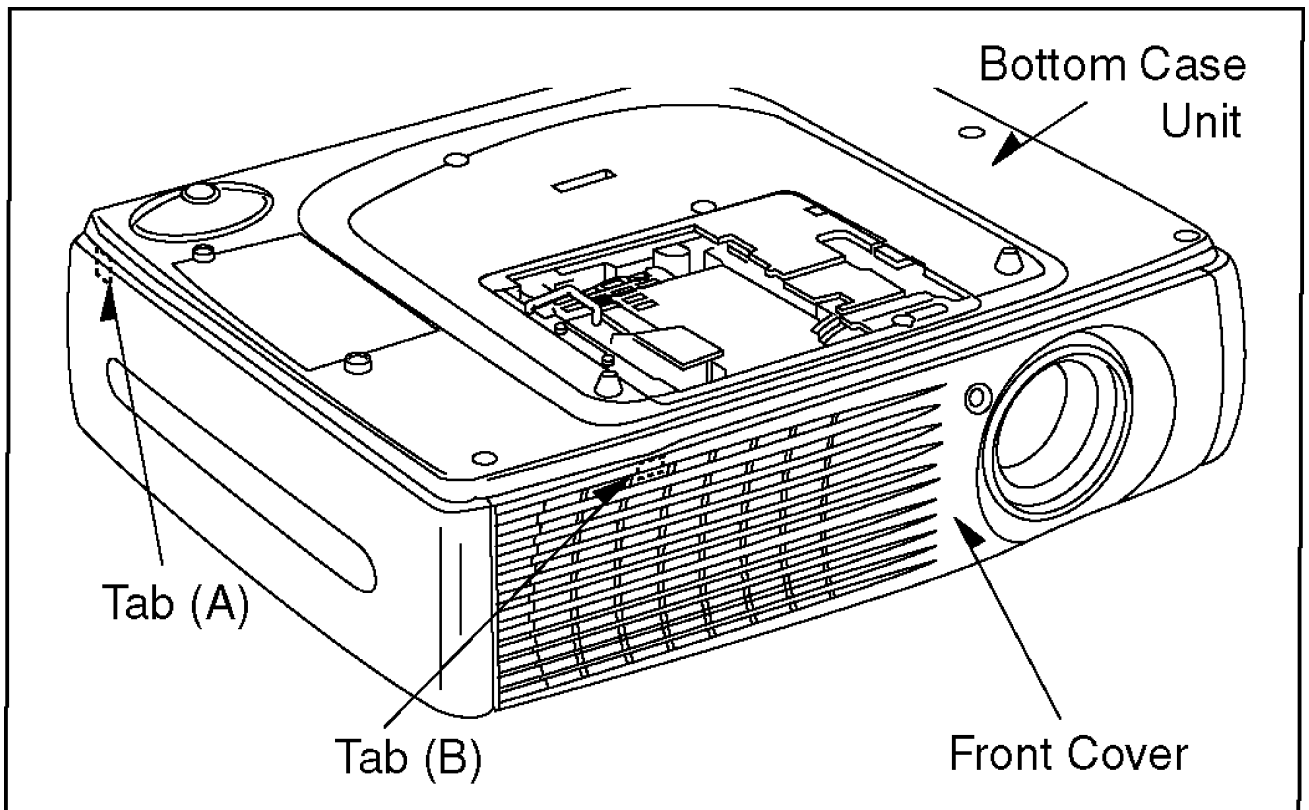

Assembly Note:

When removing the bottom Case Unit, be sure to remove the Lamp Cover Unit first. If it is assembled without removing the Lamp Cover Unit, the Interlock switch of the Main C.B.A. will be damaged. (If it is damaged, the Projector won't operate and the indication of it is "C-0".)

4.2.3. Removal of the Lamp Unit

1. Push the portion (a) of the Lamp Hold Lever to the direction of the arrow as shown in Fig. 4-2-4 and release the Lamp Hold Lever from the Fastening Hook.
2. Carefully pull the Lamp Unit.

Caution:

Do not touch the Lamp Unit until it is completely cooled off.

Fig. 4-2-4


Assembly Note:

Make sure that the Lamp Hold Lever is in the original position as shown in Fig. 4-2-4.

4.2.4. Removal of the Filter Cover

1. Hold the indent on the Filter Cover and pull the Filter Cover with the Filter as shown in Fig. 4-2-5.


Fig. 4-2-5

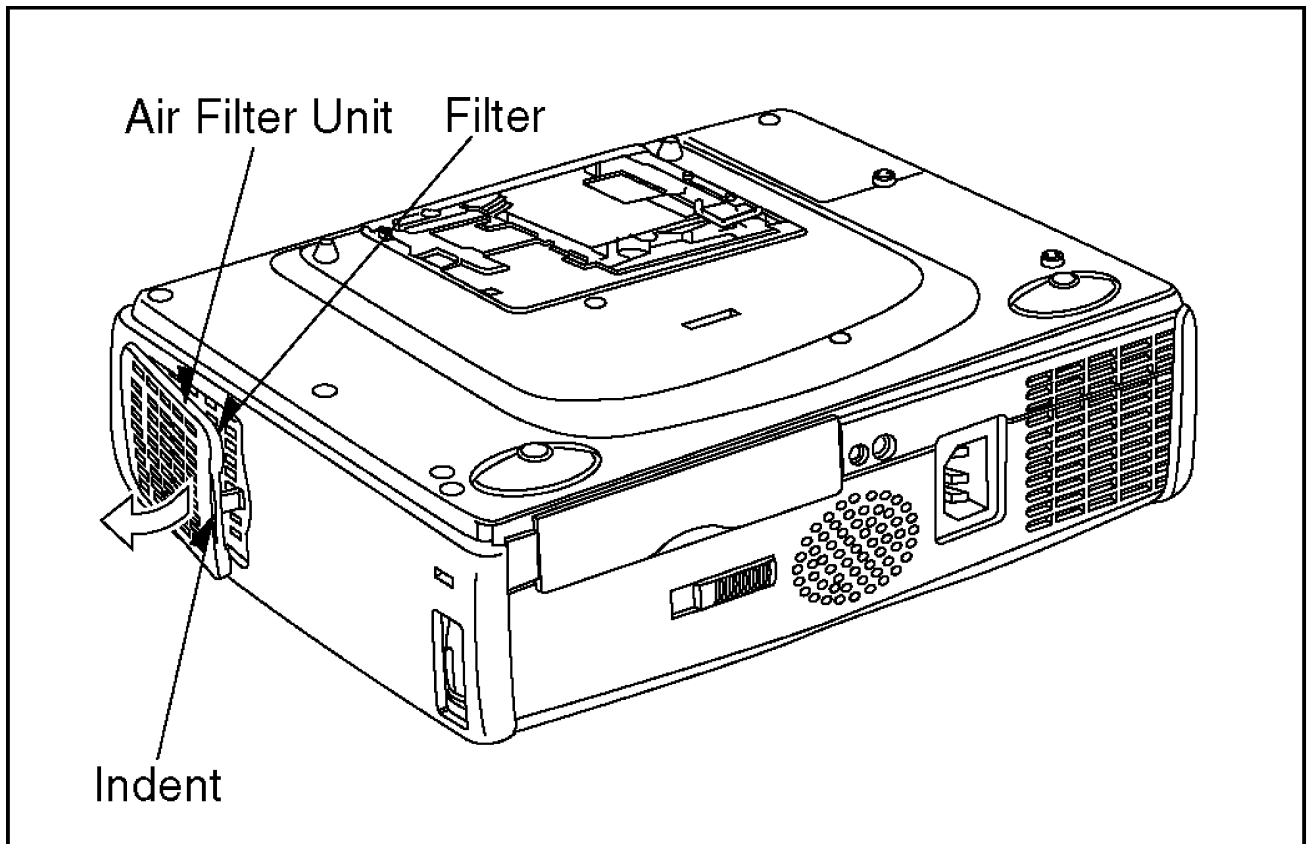

4.2.5. Removal of the Main C.B.A.

1. Remove a screw (E) as shown in Fig. 4-2-6.


Fig. 4-2-6

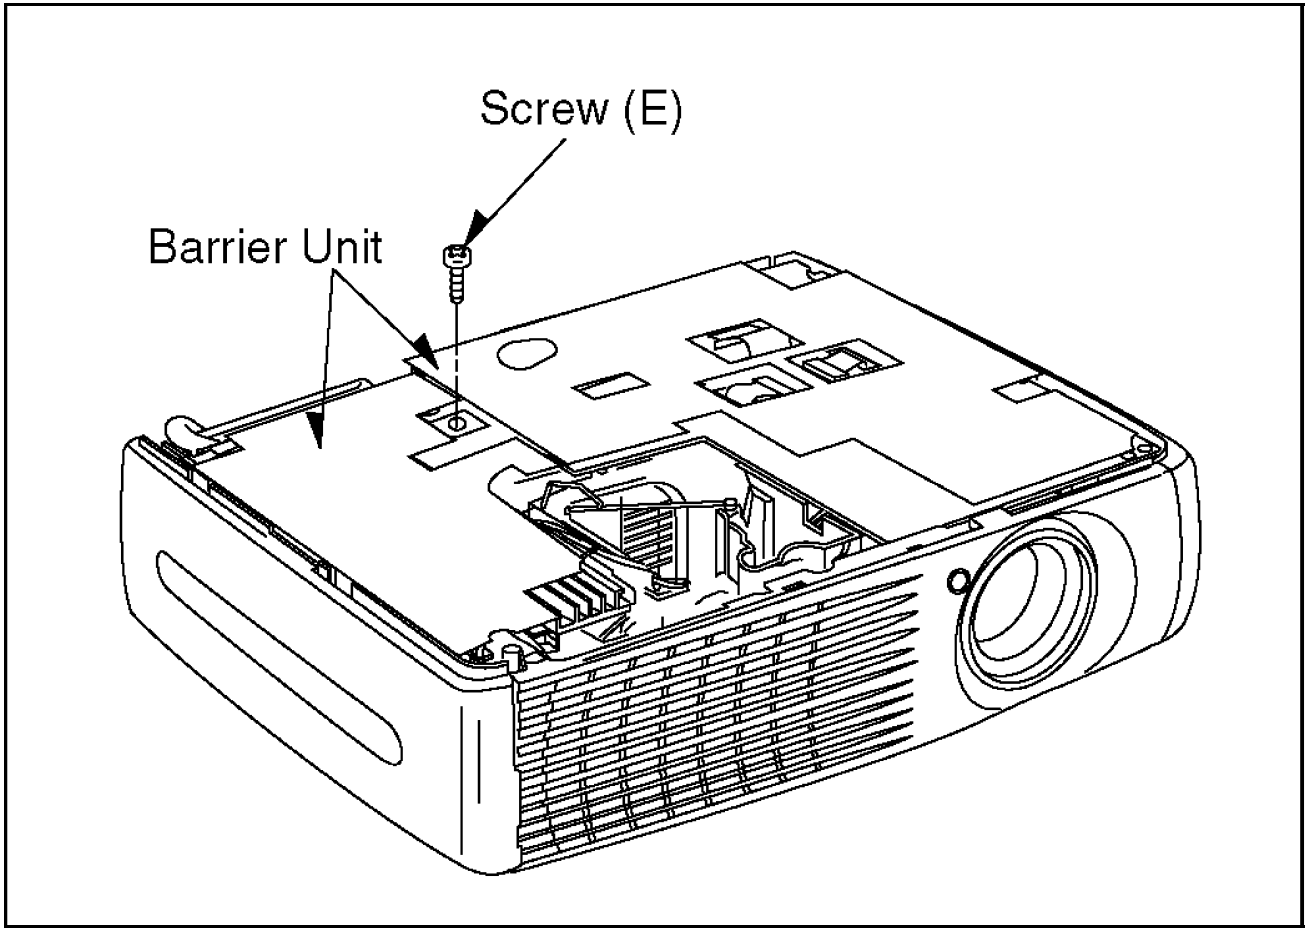

2. Open the Barrier Unit.


3. Remove the Joint Plate R, L and the Ballast Holder as shown in Fig. 4-2-7.

Fig. 4-2-7

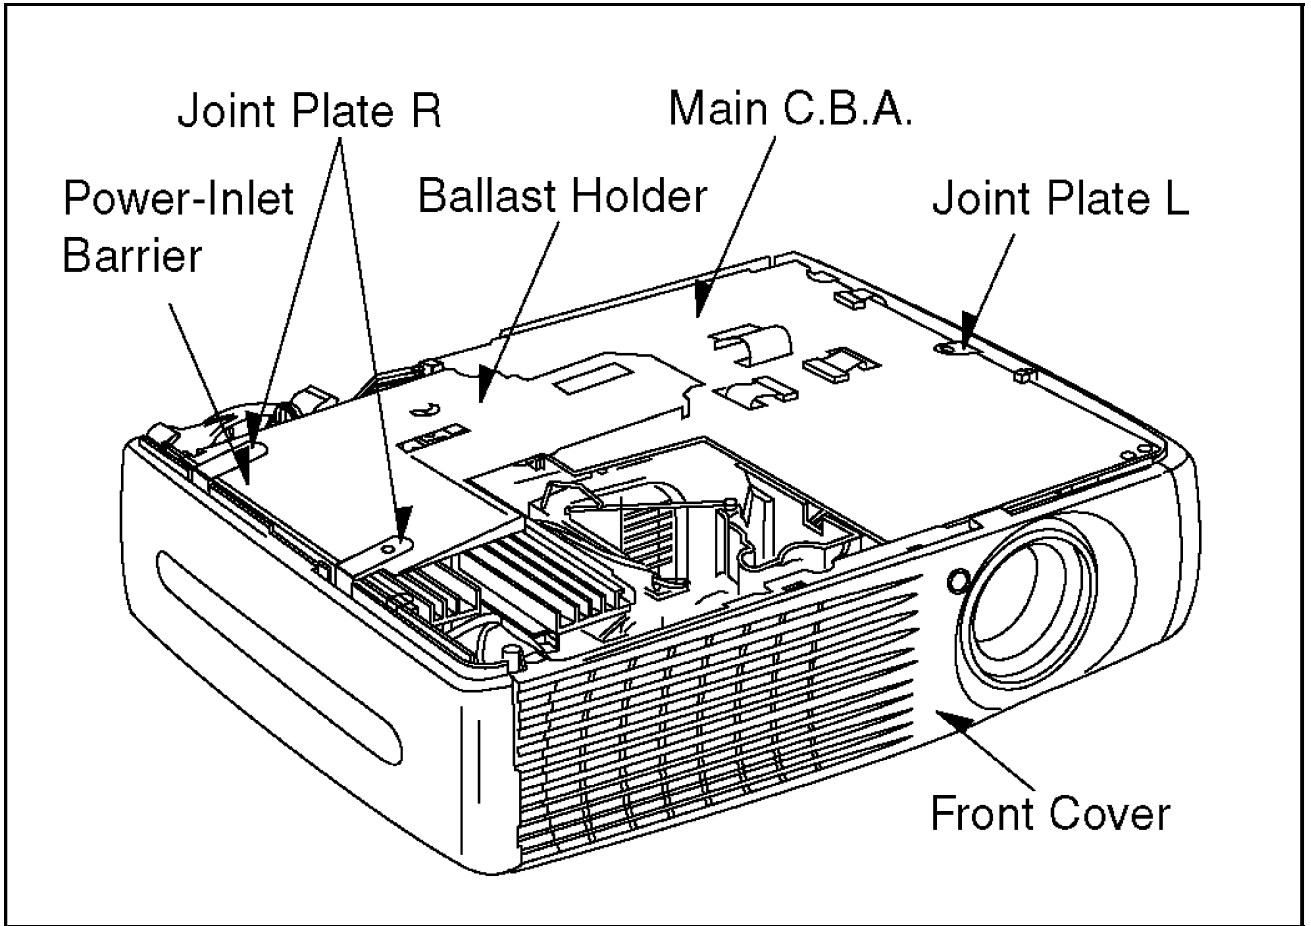

4. Disconnect 13 connectors P1901-P1907, P2002-P2004, P3501-P3503 and P4001 on the Main C.B.A as shown in Fig. 4-2-8.

Fig. 4-2-8

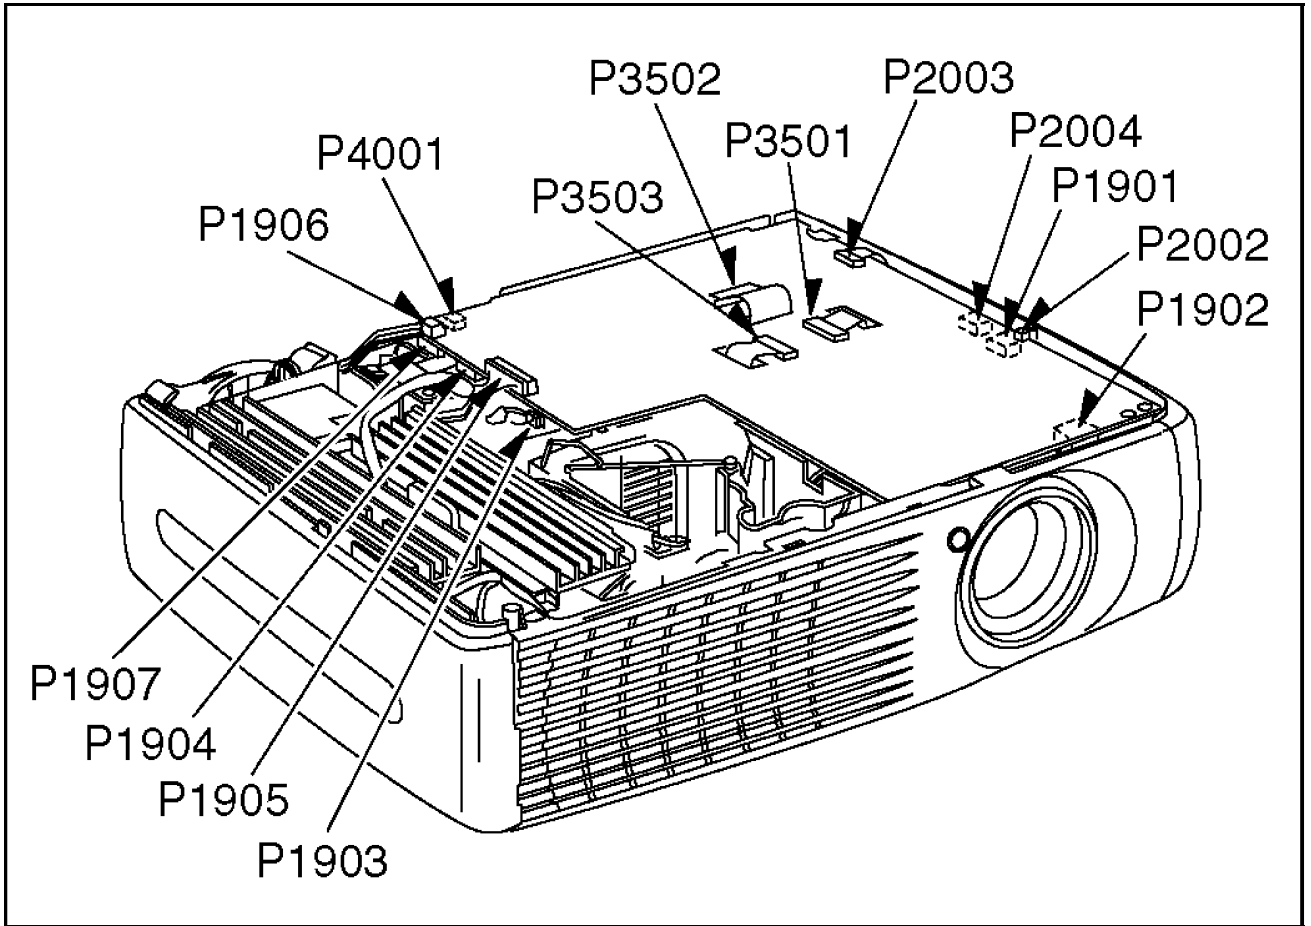


Assembly Note:

Make sure that the Joint Plate R, L and the Ballast Holder are in their original position as shown in Fig. 4-2-7.

4.2.6. Removal of the Power Fan

1. Carefully pull out the Power Fan with the Fan Piece as shown in Fig. 4-2-9.

Fig. 4-2-9

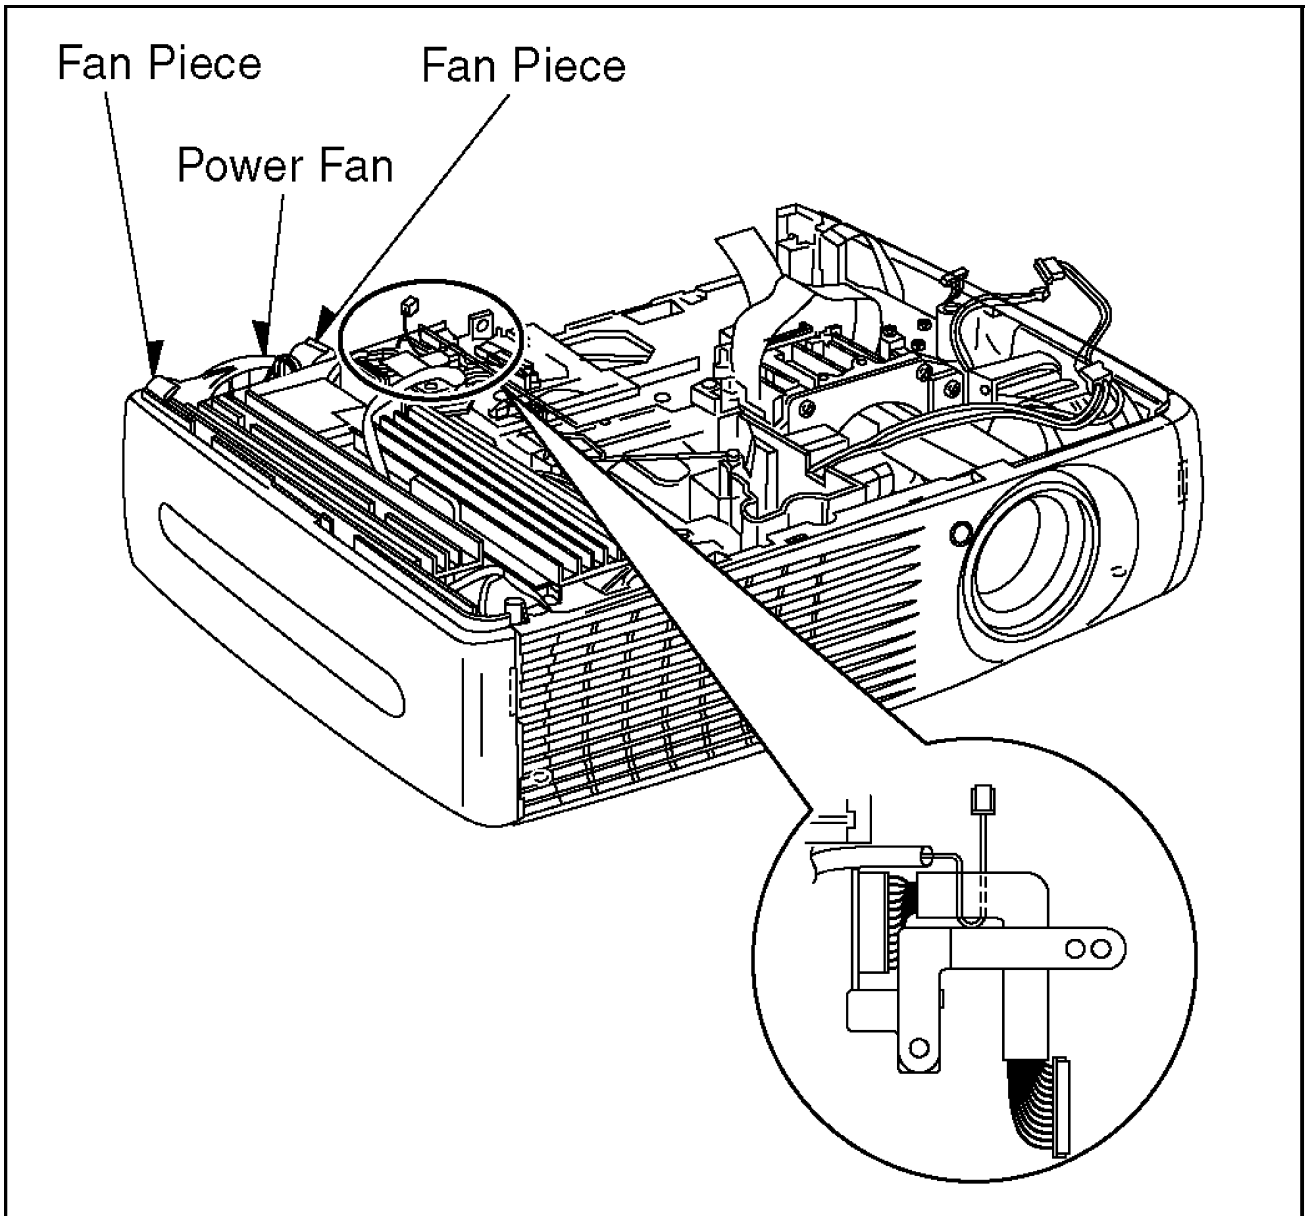


Assembly Note:

1. Installing the Power Fan so that the name plate faces in.
2. Make sure that the connector cable of the power Fan is in the original position as shown in Fig. 4-2-9.

4.2.7. Removal of the Front Cover

1. Remove 3 screws (F) as shown in Fig. 4-2-10.
2. Carefully pull and remove the portion (a) of the Front cover in the direction of the arrow with paying attention to the Tab (A).
3. Remove the Front cover with paying attention to the Tab (B).


Fig. 4-2-10

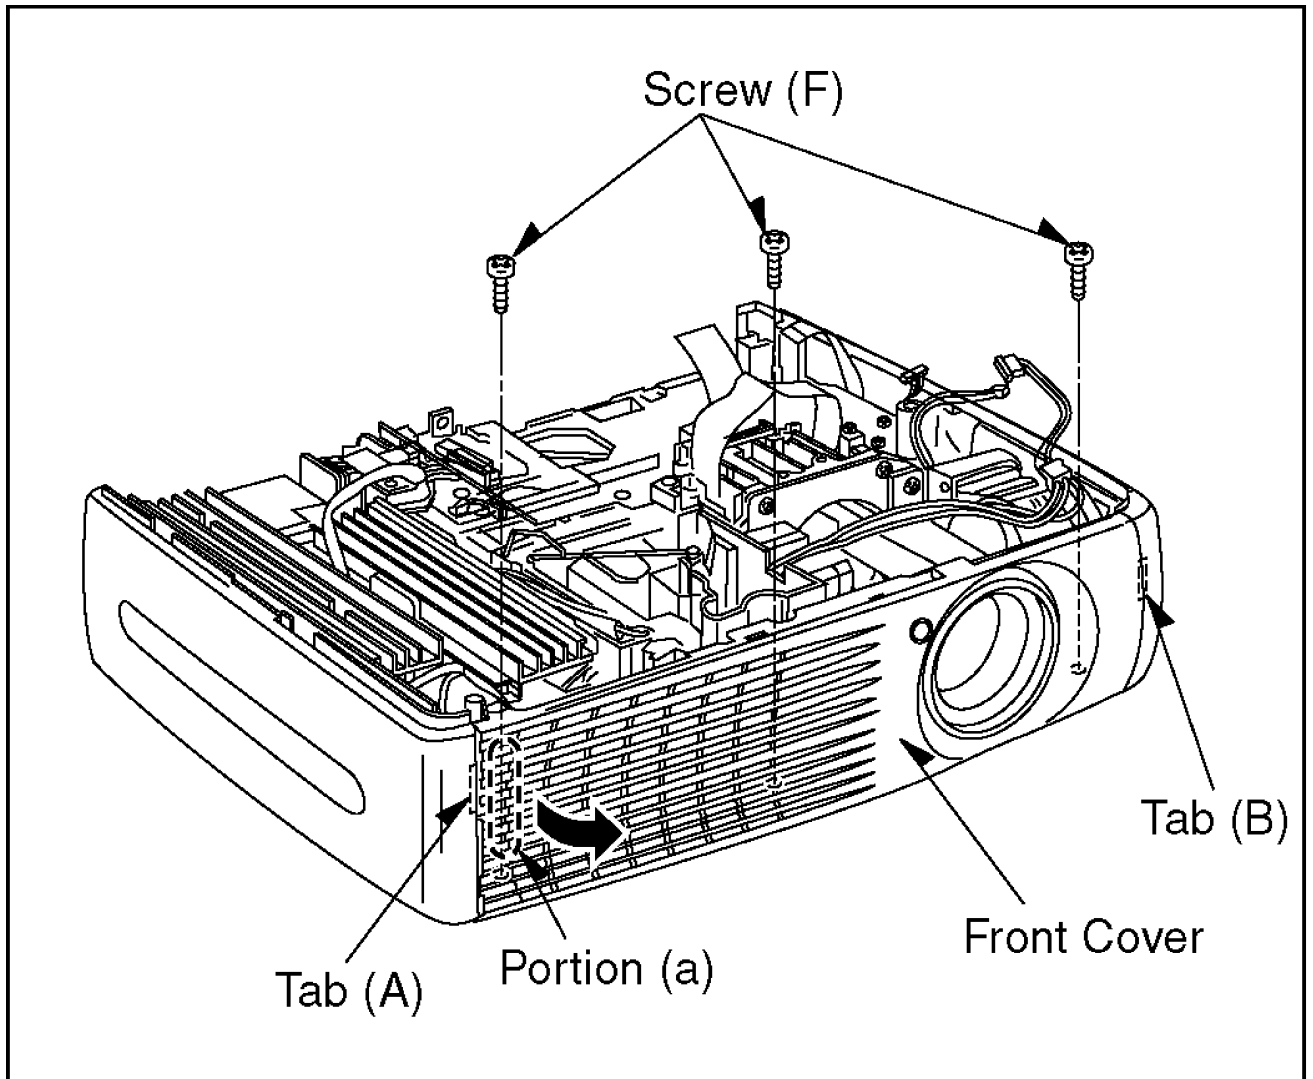

4.2.8. Removal of the Lamp Fan Unit

1. Remove 3 screws (G) as shown in Fig. 4-2-11.
2. Remove the Lamp Fan Unit with the Front Barrier L and R.

Fig. 4-2-11

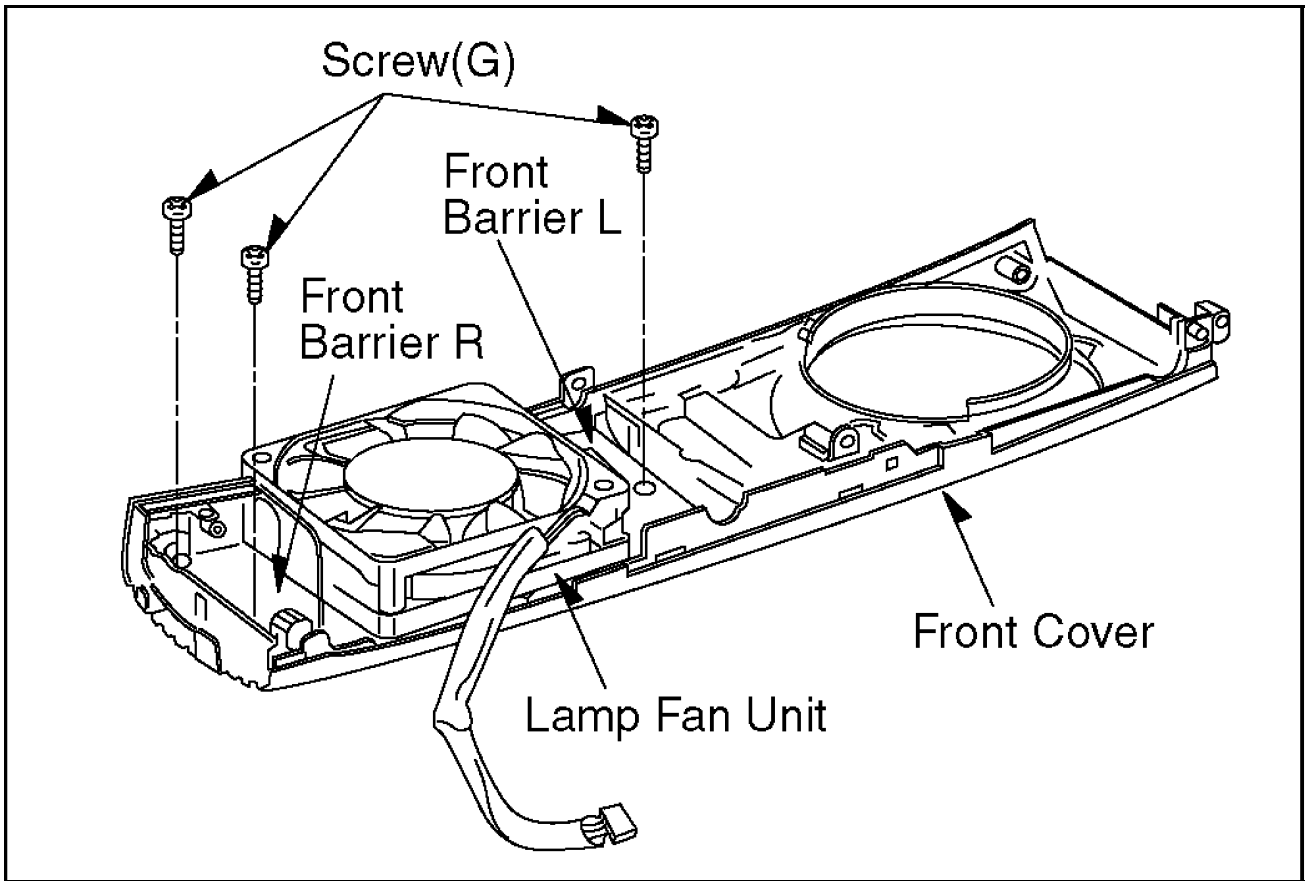


Assembly Note:

Installing the Lamp Fan Unit so that the name plate faces to the side of the Front Cover.

4.2.9. Removal of the Optical Unit


1. Remove the Main Grounding Plate as shown in Fig. 4-2-12.
2. Carefully pull out the Optical Unit.


Fig. 4-2-12

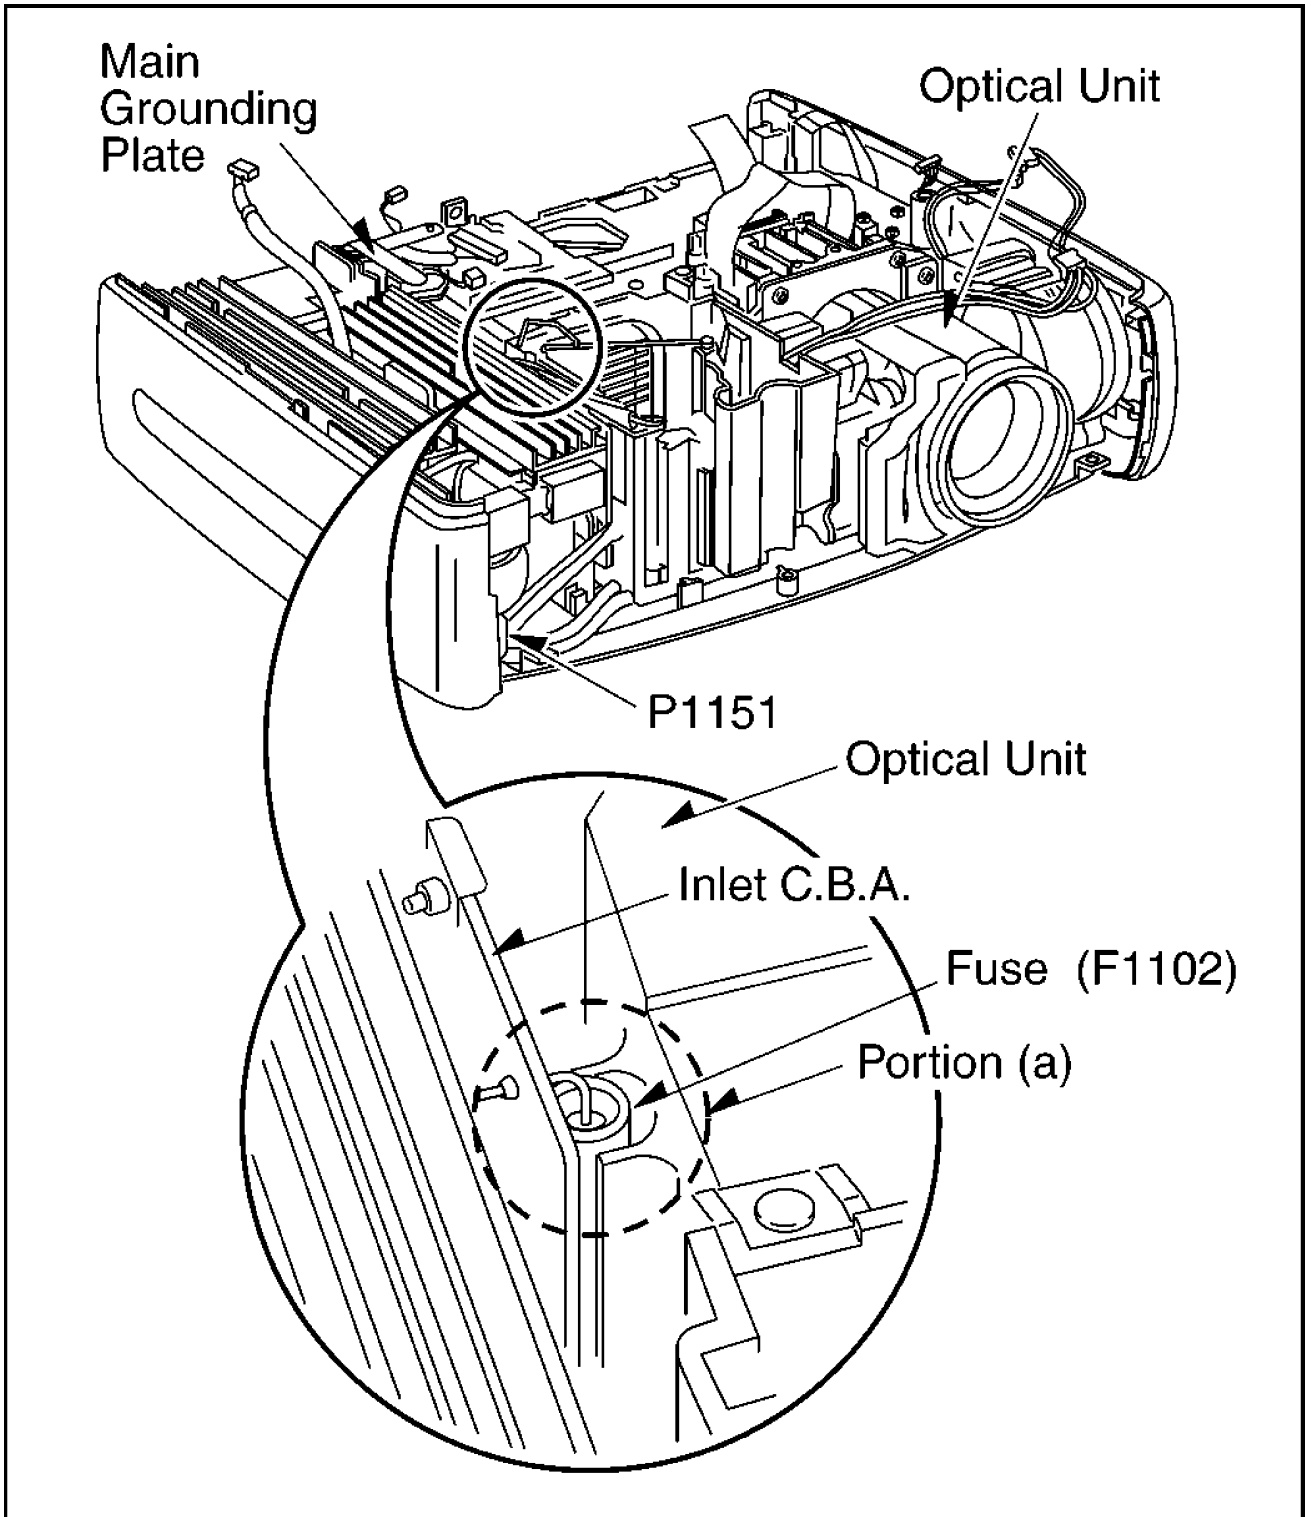

3. Remove a screw (H) as shown in Fig. 4-2-13 and remove the Lamp Connector.

Fig. 4-2-13

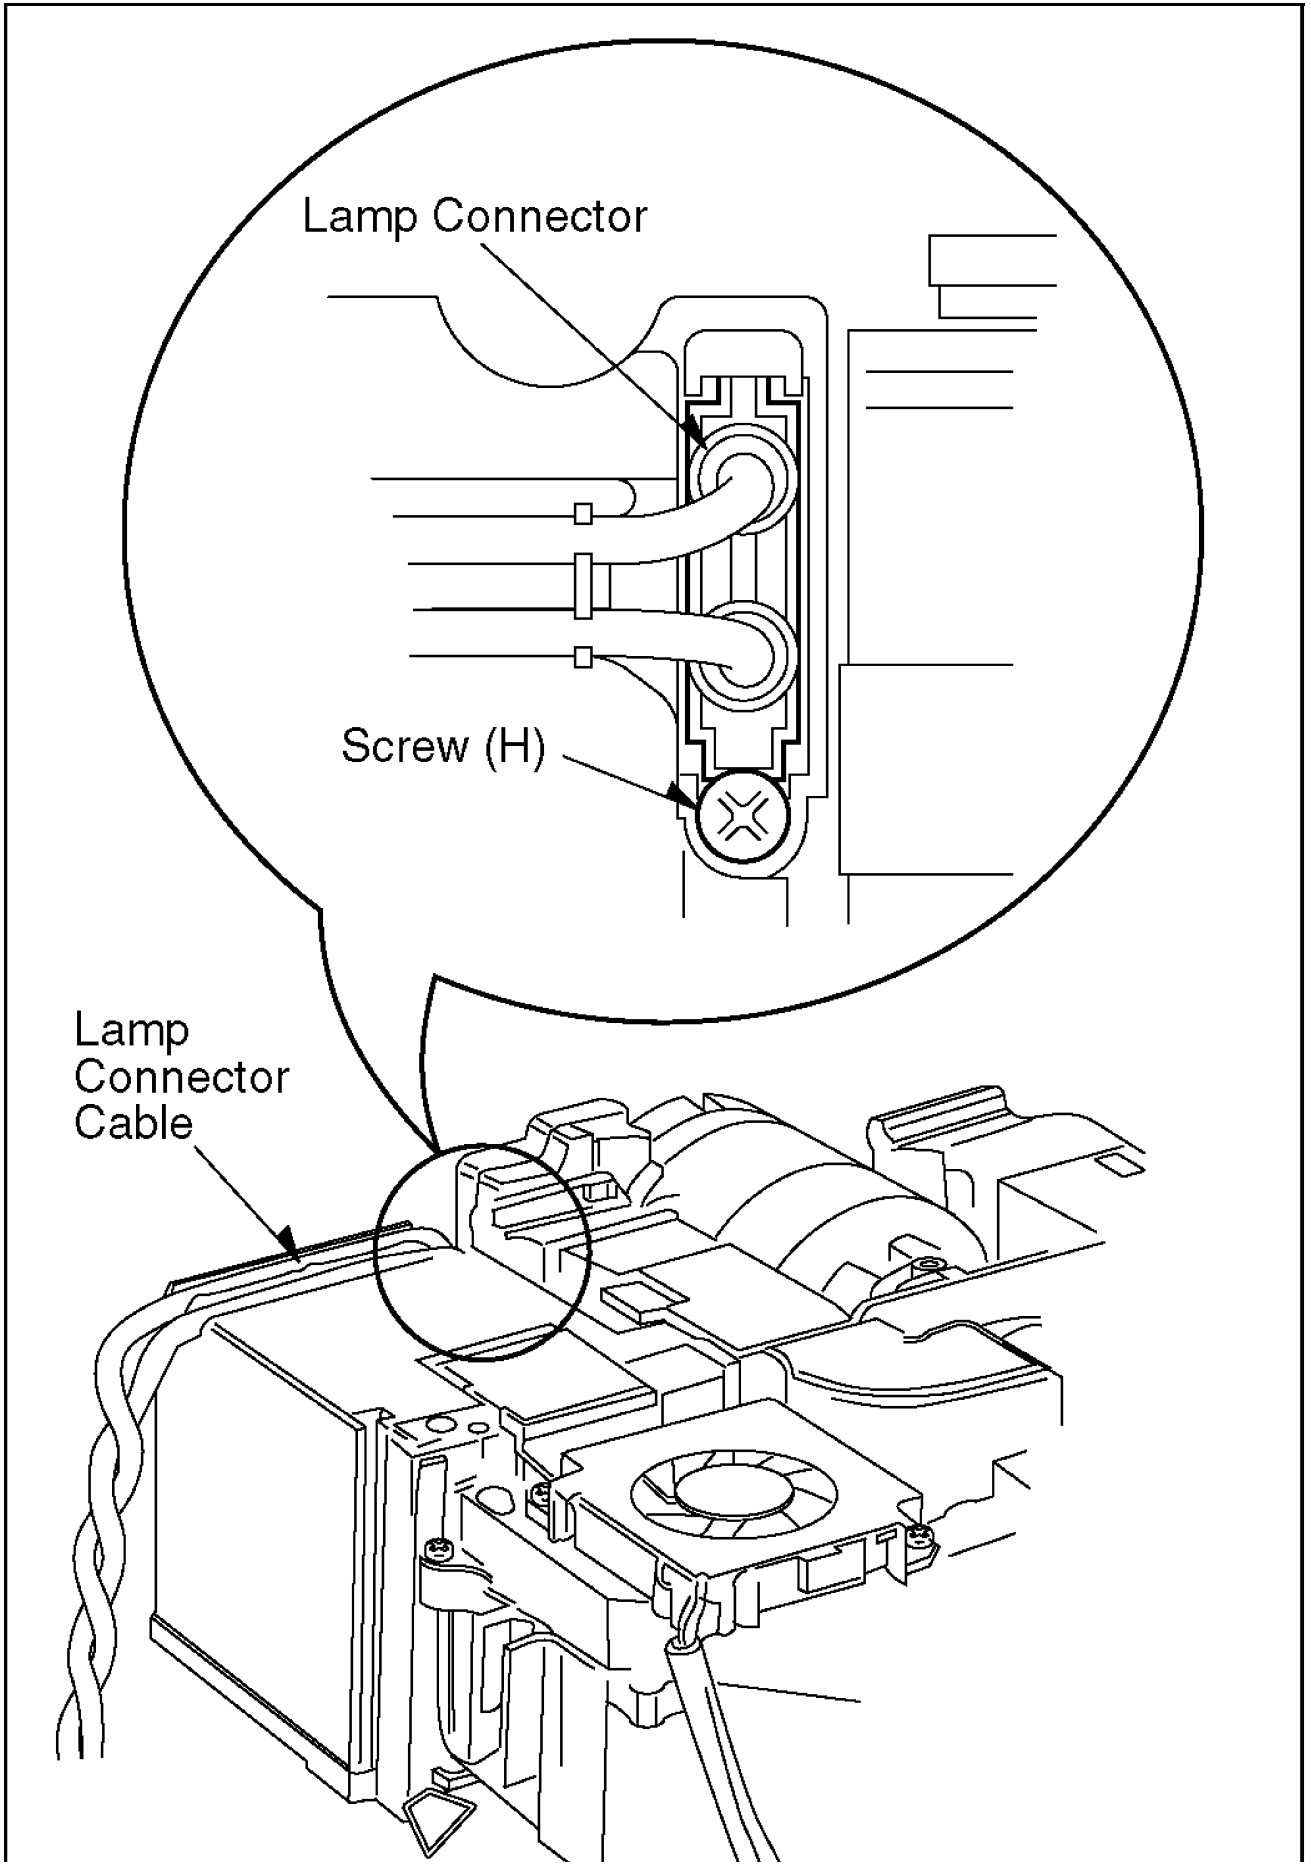

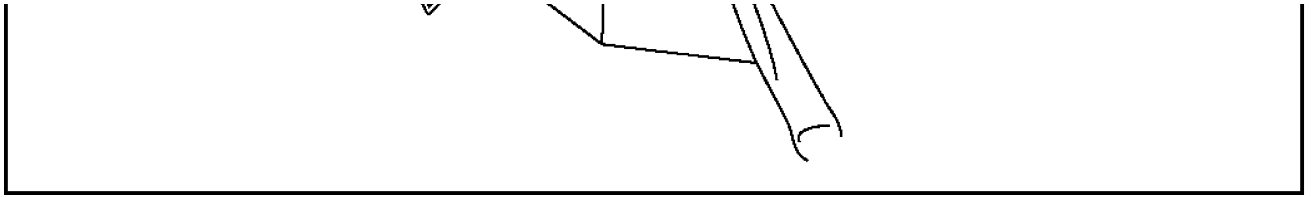


Assembly Note:

1. Twist the Lamp Connector cable 3 times on the right and insert in the original position as shown in Fig. 4-2-13.
2. When installing the Lamp Connector, be careful of the direction of the insertion as shown in Fig. 4-2-13.
3. Before installing the Optical Unit, be sure to remove the Filter Cover first. If it is installed without removing the Filter Cover, the Filter Switch may be damaged.
4. When installing the Optical Unit, make sure that the position of portion (a) is at the fuse (F1102) and pay attention not to nip the connector cable of P1151 under the Optical Unit as shown in Fig. 4-2-12.

4.2.10. Removal of the Speaker Unit

1. Detach the tape and carefully pull out the Speaker Unit as shown in Fig. 4-2-13.

Fig. 4-2-14

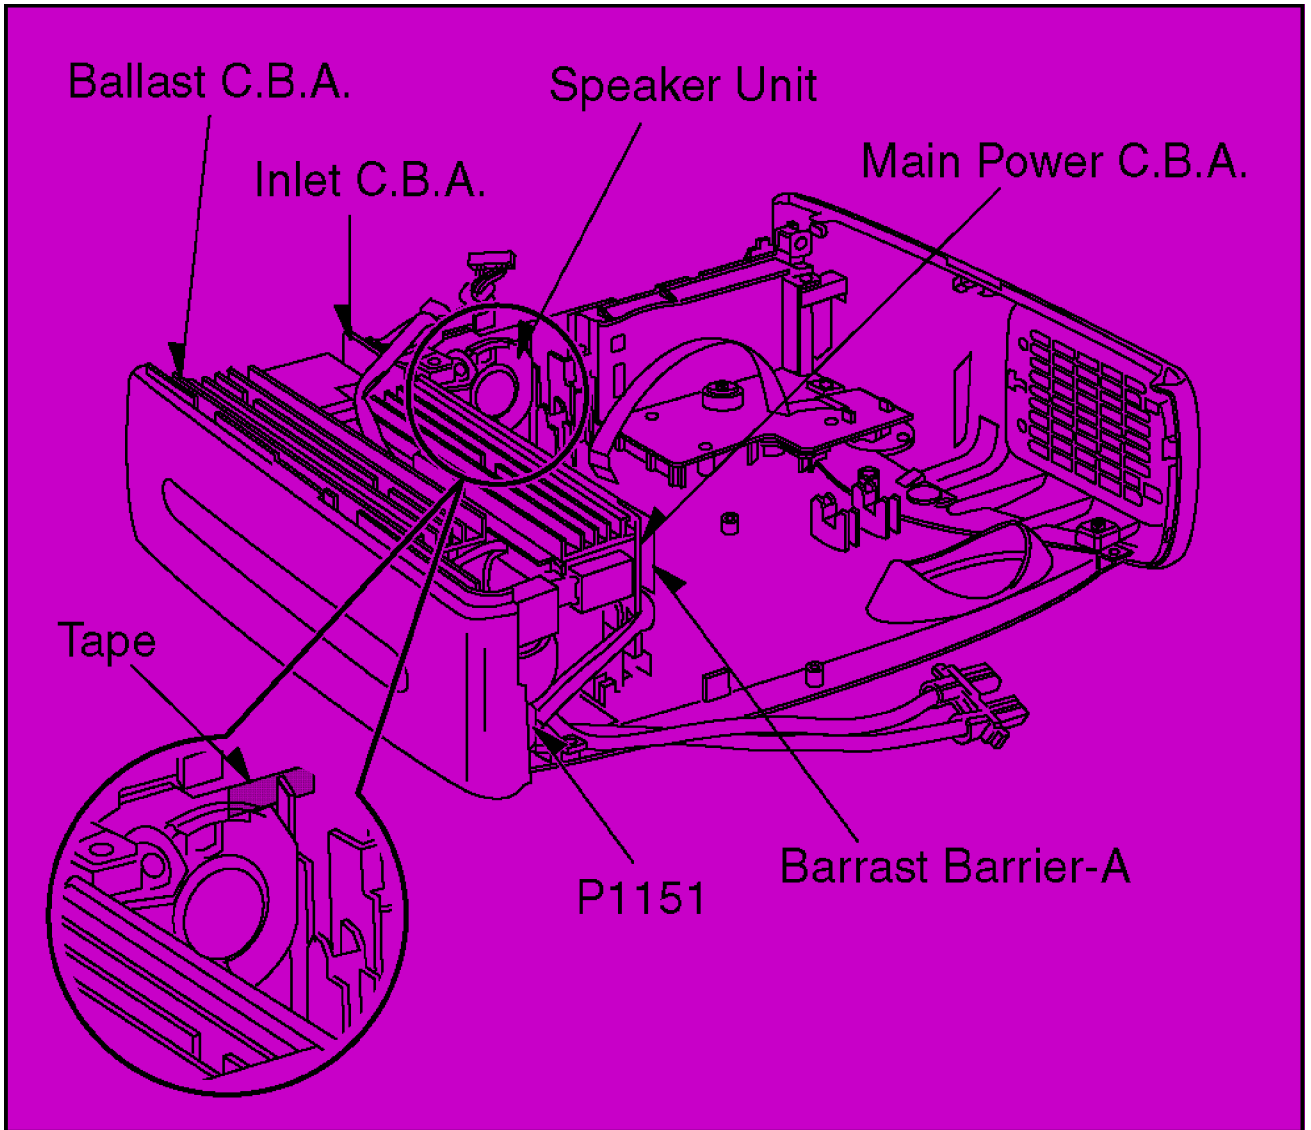


Assembly Note:

After the installation of the speaker, put on the tape in the original position.

4.2.11. Removal of the Main Power C.B.A. the Ballast C.B.A., the Inlet C.B.A. and the Ballast Barrier-A

1. Carefully pull out the Main Power C.B.A., the Ballast C.B.A. and the Inlet C.B.A. along with the Ballast Barrier-A as shown in Fig. 4-2-14.
2. Disconnect 3 connectors P1151, P1201, P1302 and P1303 as shown in Fig. 4-2-15.

Fig. 4-2-15

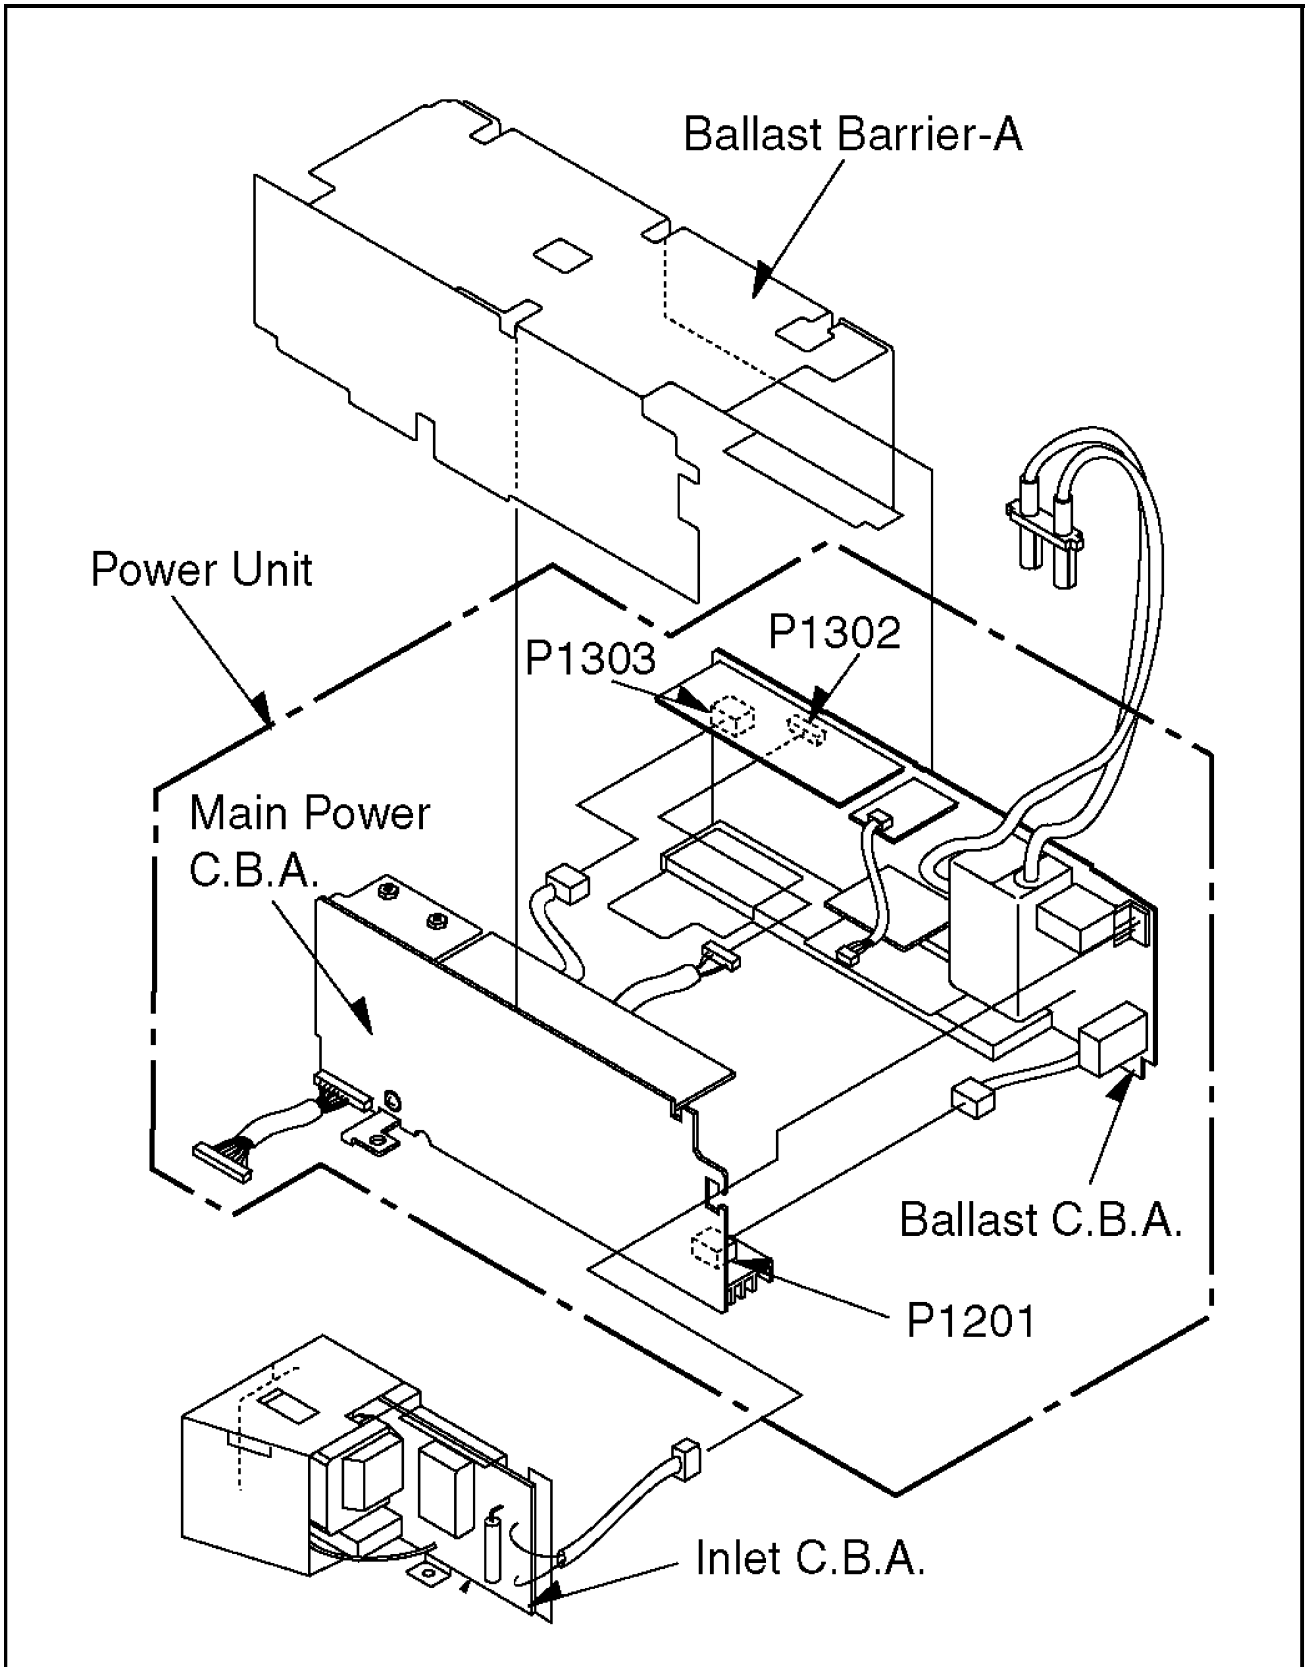


Assembly Note:

Make sure that the Main Power C.B.A., the Ballast C.B.A. the Inlet C.B.A. and the Ballast Barrier-A are in the original position as shown in Fig. 4-2-16.

4.2.12. Removal of the Operation C.B.A.


- 1. Remove 2 screws (J) as shown in Fig. 4-2-17.**
- 2. By releasing 2 tabs, remove the Eject Knob.**
- 3. Remove the Remote Control Holder Unit.**

Fig. 4-2-17

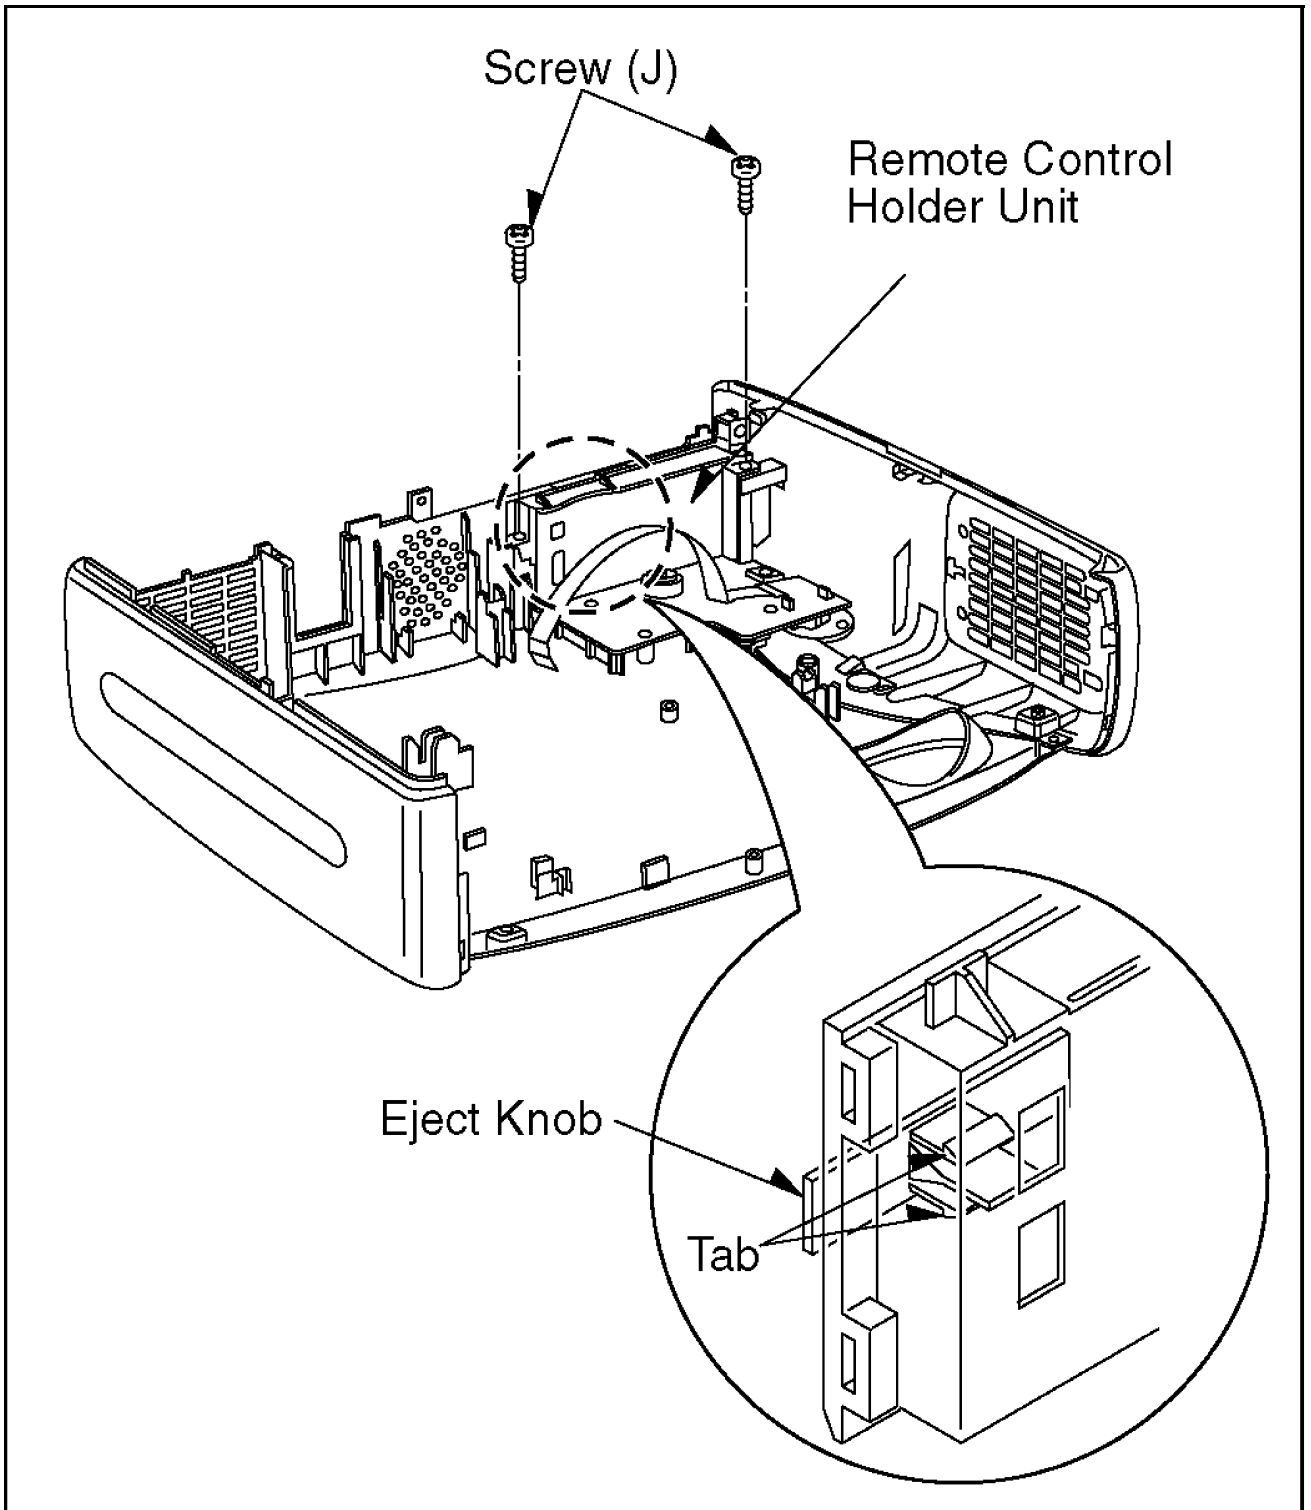


4. Remove 4 screw (K) and the Support Plate as shown in Fig. 4-2-18.
5. Carefully pull out the Operation C.B.A.

Fig. 4-2-18

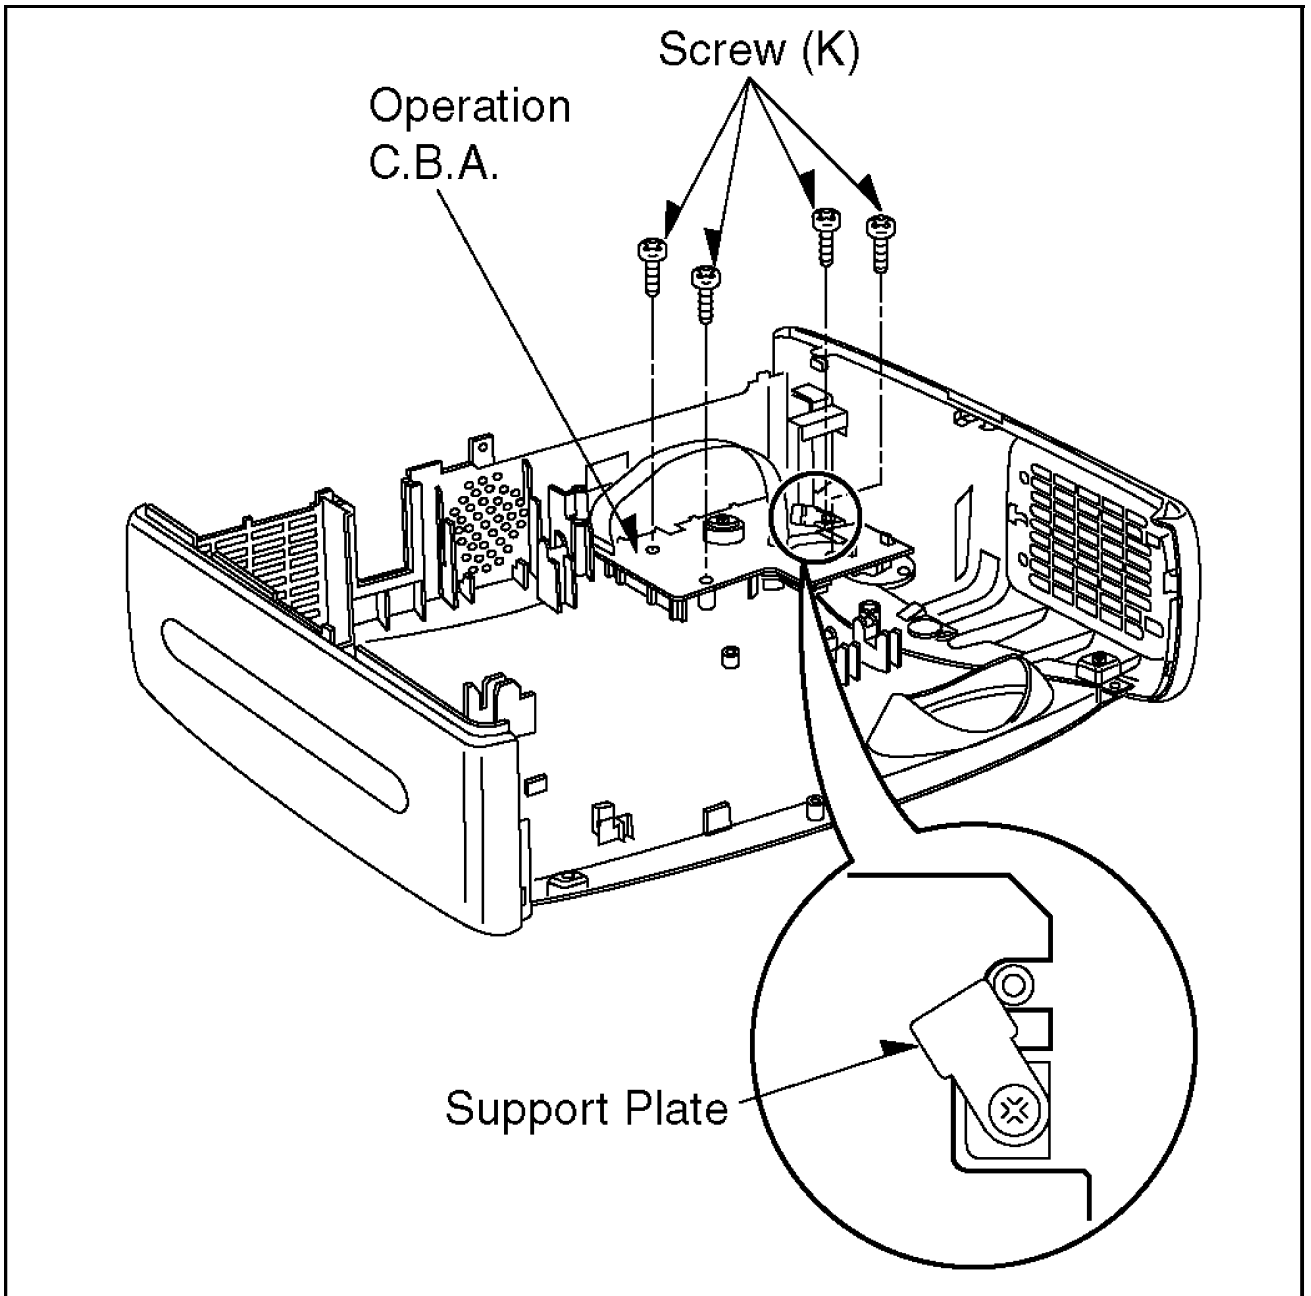

Assembly Note:
When installing the Eject Knob, be careful of the direction of the insertion as shown in Fig. 4-2-19.


Fig. 4-2-19

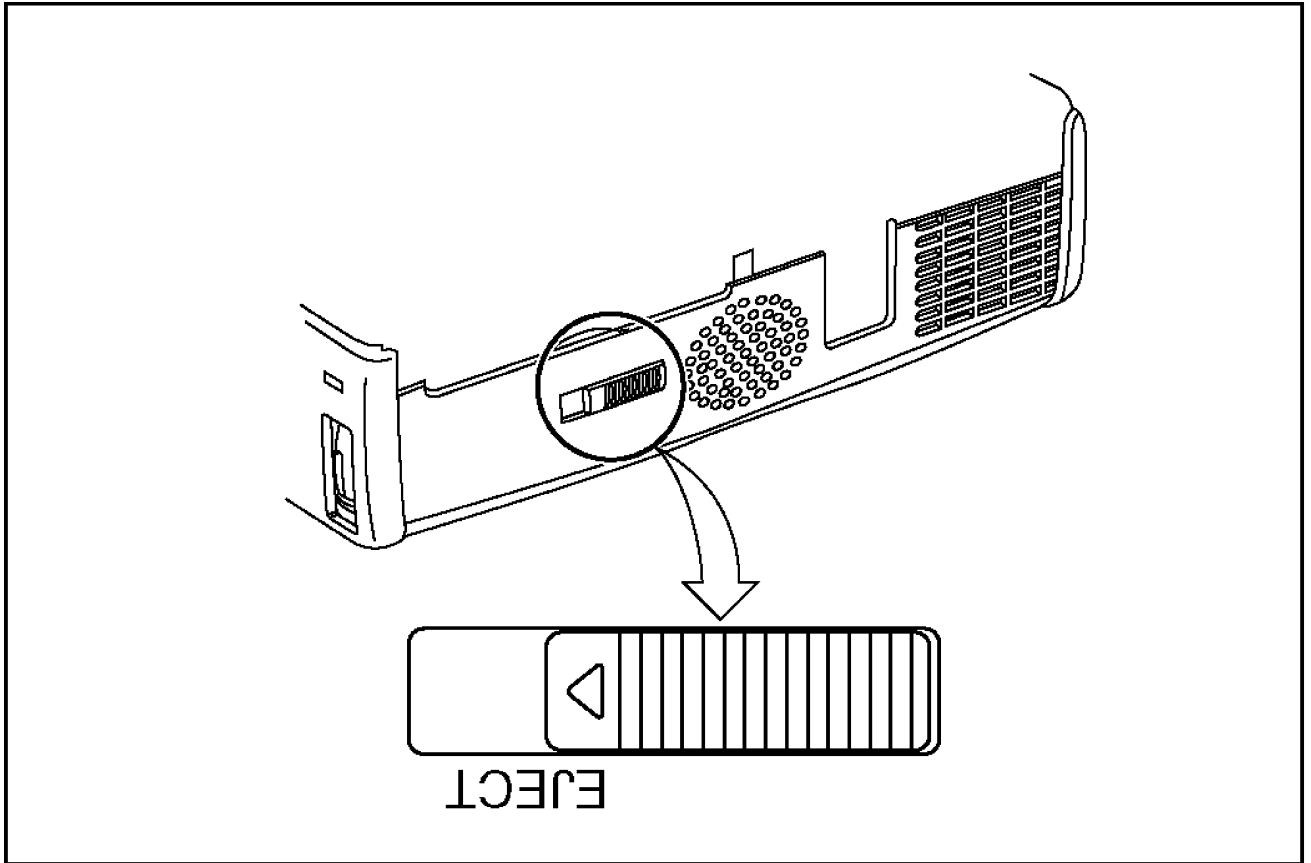

4.3. DISASSEMBLY FLOWCHART OF OPTICAL UNIT

This flowchart indicates the disassembly steps of the main parts of Optical Unit. When reassembling, perform the step(s) in the reverse order.

Fig. 4-3-1

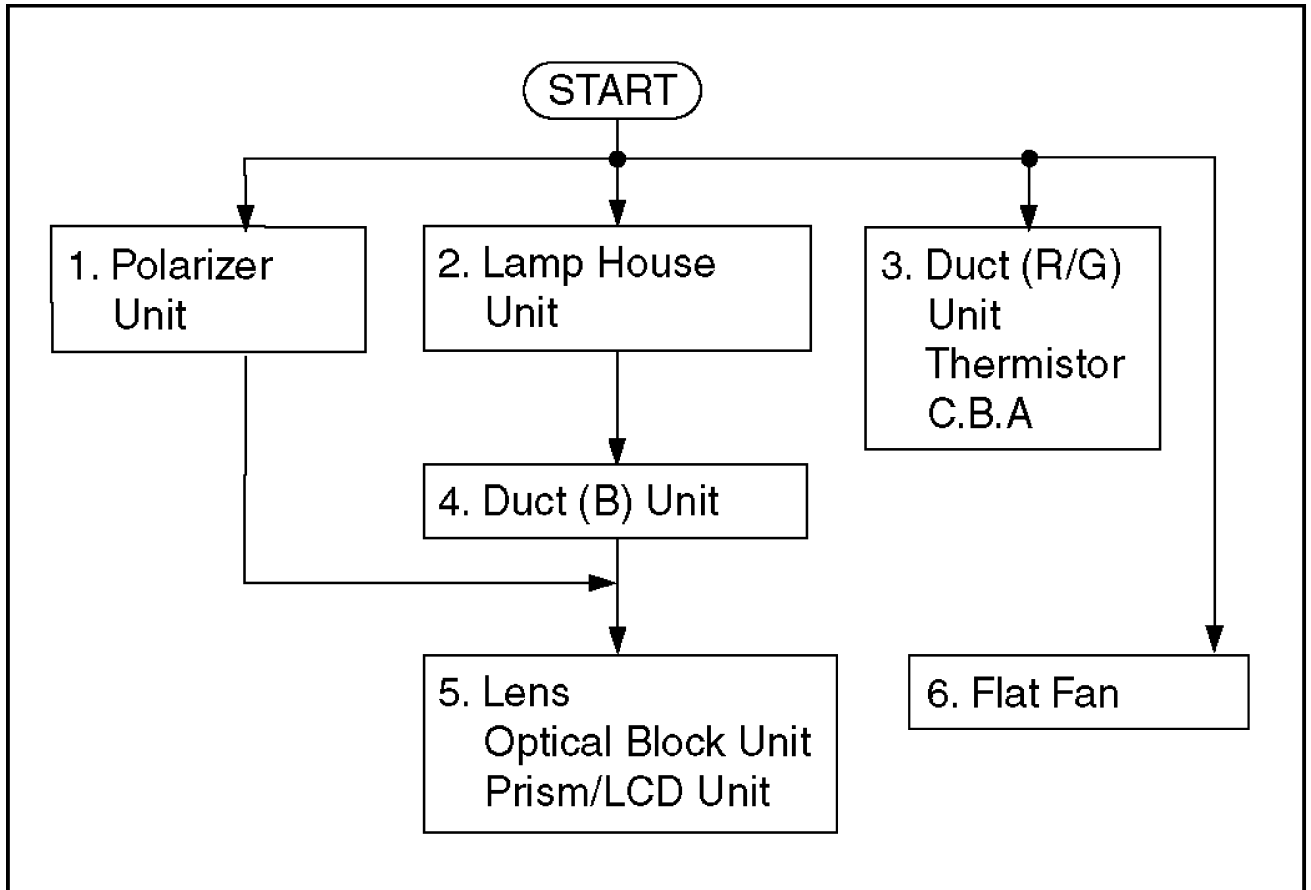

4.4. DISASSEMBLY METHOD OF OPTICAL UNIT


4.4.1. Removal of the Polarizer Units

1. Remove 3 screws (A) to remove the Polarizer Red Unit, the Polarizer Green unit and the Polarizer Blue Unit as shown in Fig. 4-4-1.

Note:

1. Take extreme care not to damage the Polarizer Units, when servicing.
2. Make sure that no dust gets on the Polarizer Units. Clean the Polarizer Units with cleaning paper moistened with lens cleaner if necessary.


Fig. 4-4-1

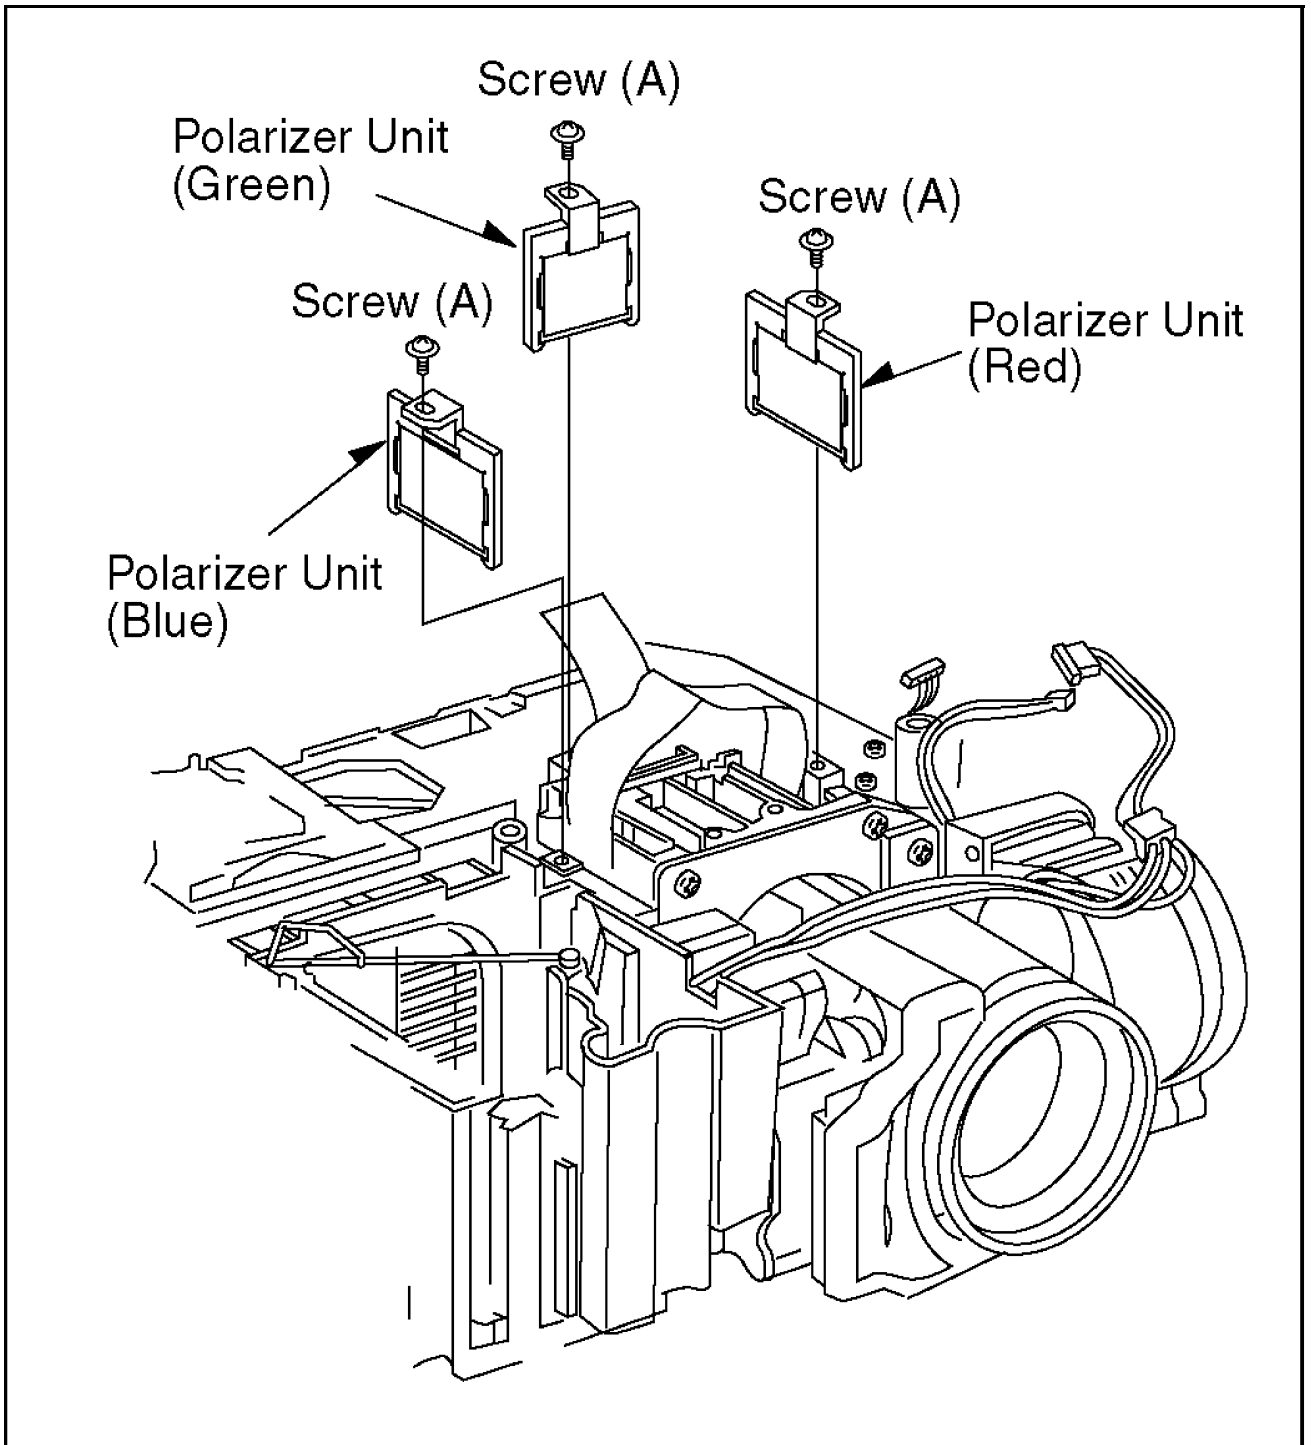

Assembly Note:

1. After replacing the Polarizer Unit, adjustment is necessary (Refer to 5.1. Initial Guide Line).
2. Make sure of the Mark color to distinguish the Polarizer Unit (Red, Green, Blue) as shown in Fig. 4-4-2.


Fig. 4-4-2

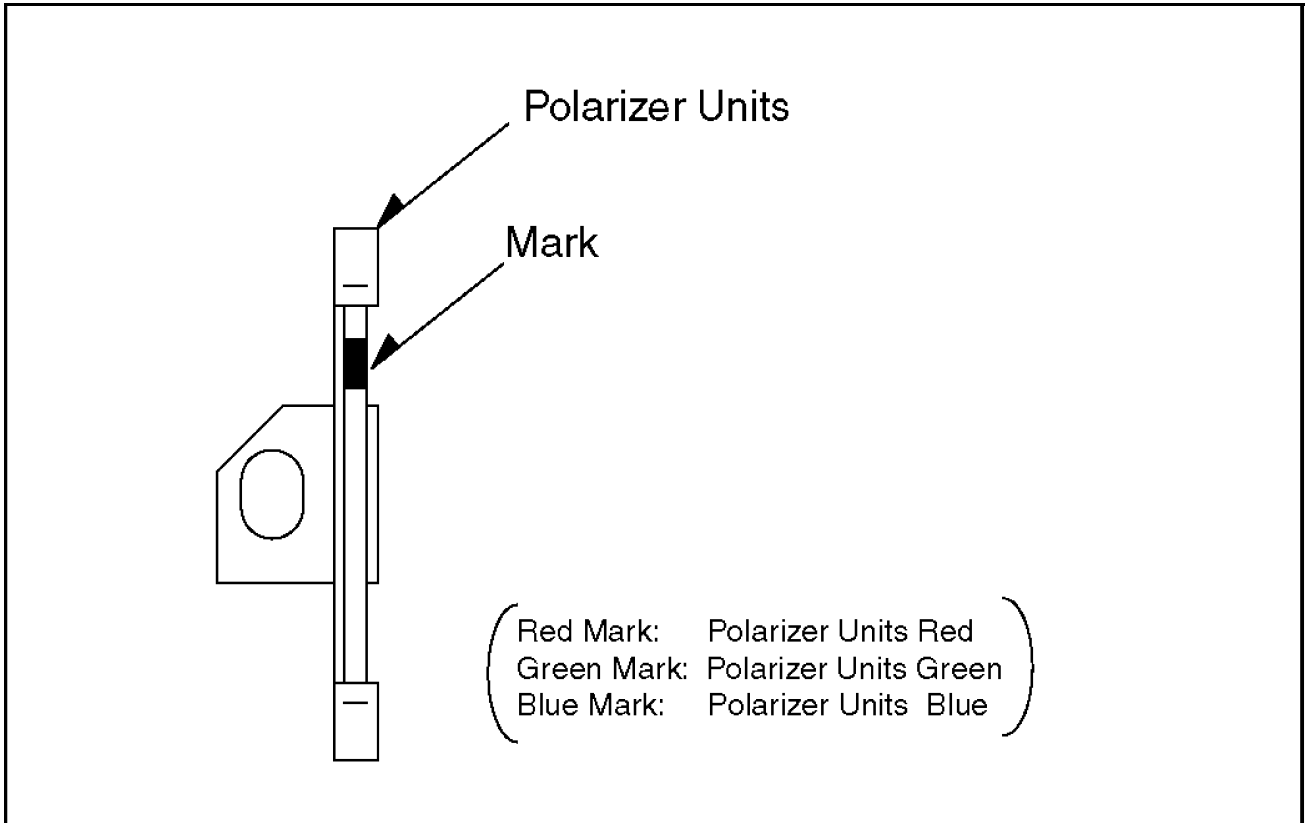

4.4.2. Removal of the Lamp House Unit


1. Remove a screw (B) as shown in Fig. 4-4-3.
2. Remove the Lamp Duct.

Fig. 4-4-3

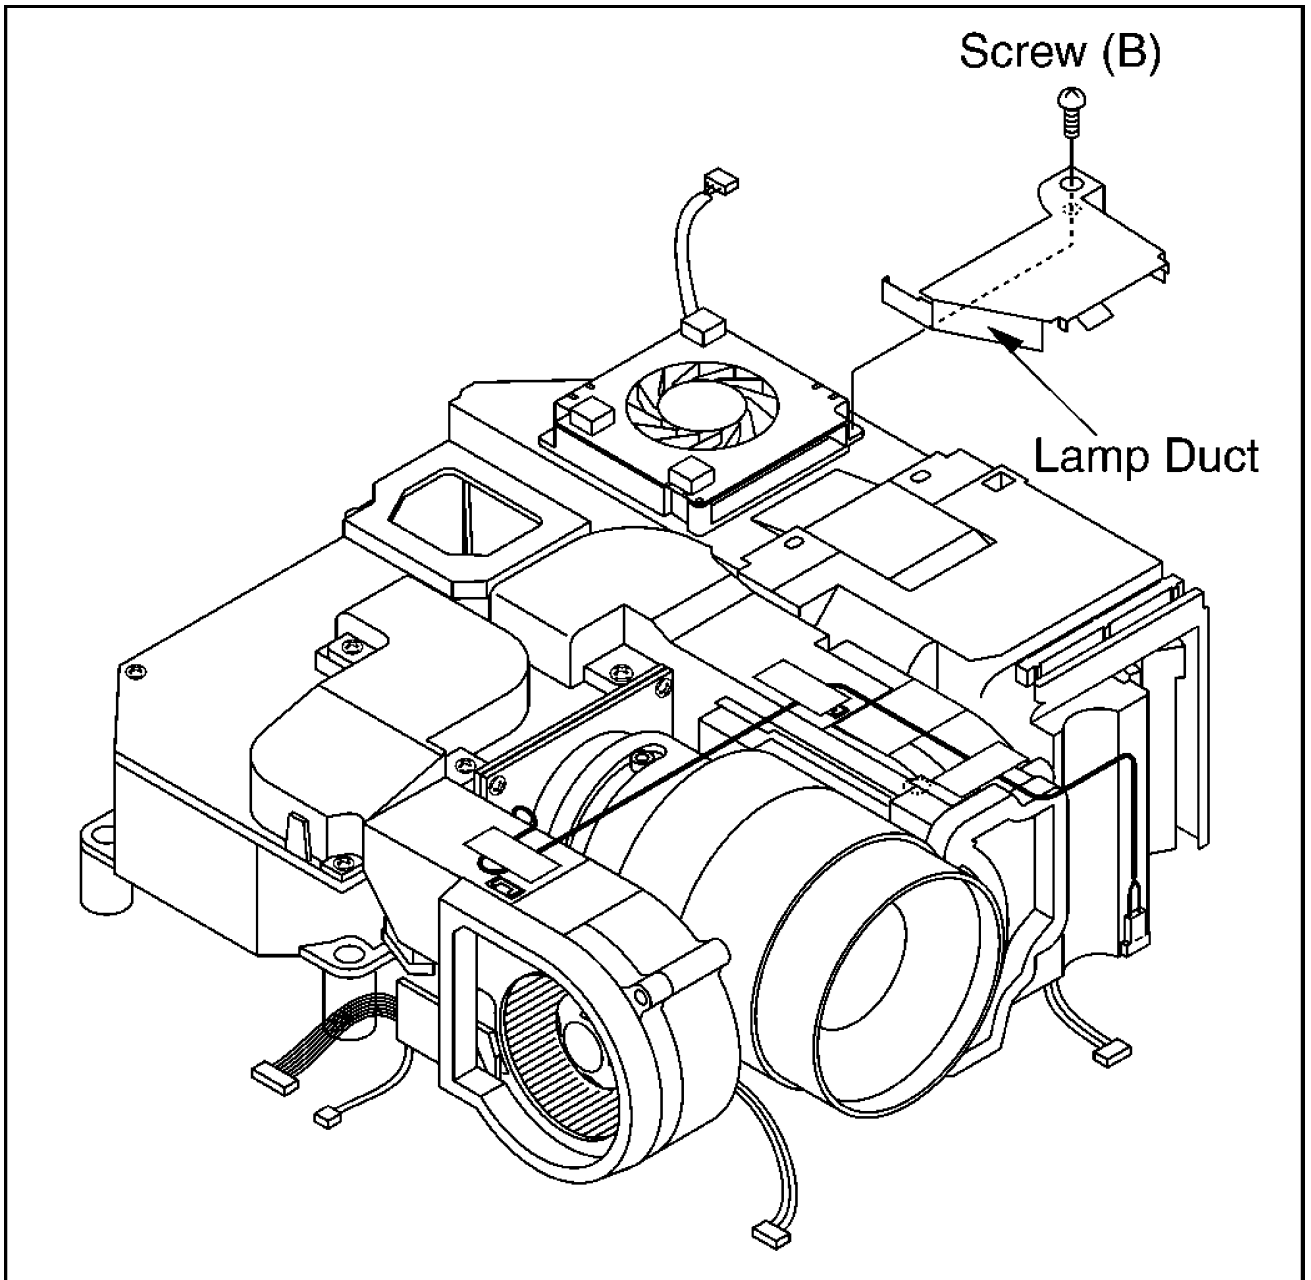

3. Remove 2 screws (C) as shown in Fig. 4-4-4.
4. Remove the Fuse Holder.
5. Lift the Lamp House Unit up to release 2 projections.

Fig. 4-4-4

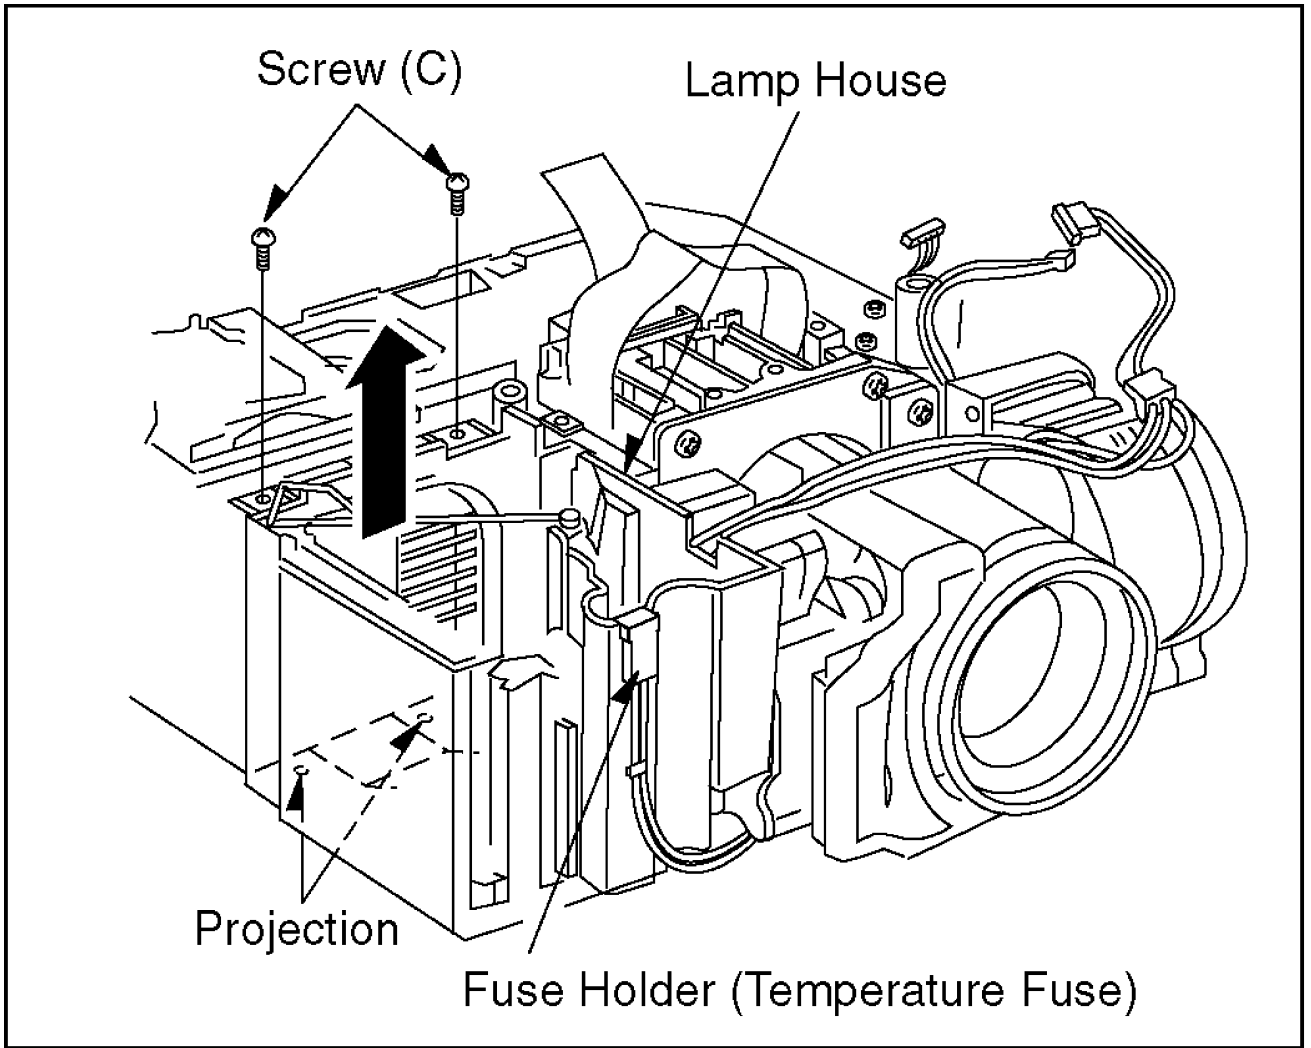

Assembly Note:

After Installing the Lamp House Unit, install the Temperature Fuse and Fuse Holder in the original position as shown in Fig. 4-4-4.

4.4.3. Removal of the Duct Blue Unit


1. Remove 2 screws (D) as shown in Fig. 4-4-5.
2. Detach 2 tapes which is fixing the cable of the Temperature Fuse.
3. Remove the Duct Blue Unit carefully.

Fig. 4-4-5

4.4.4. Removal of the Duct Red/Green Unit and Thermistor C.B.A.

- 1. Remove 3 screws (E) as shown in Fig. 4-4-6.**
- 2. Detach a tape which is fixing the cable of the Temperature Fuse.**
- 3. Remove the Duct Red/Green Unit carefully.**
- 4. Remove a screw (F) and the Thermistor C.B.A..**

Fig. 4-4-6

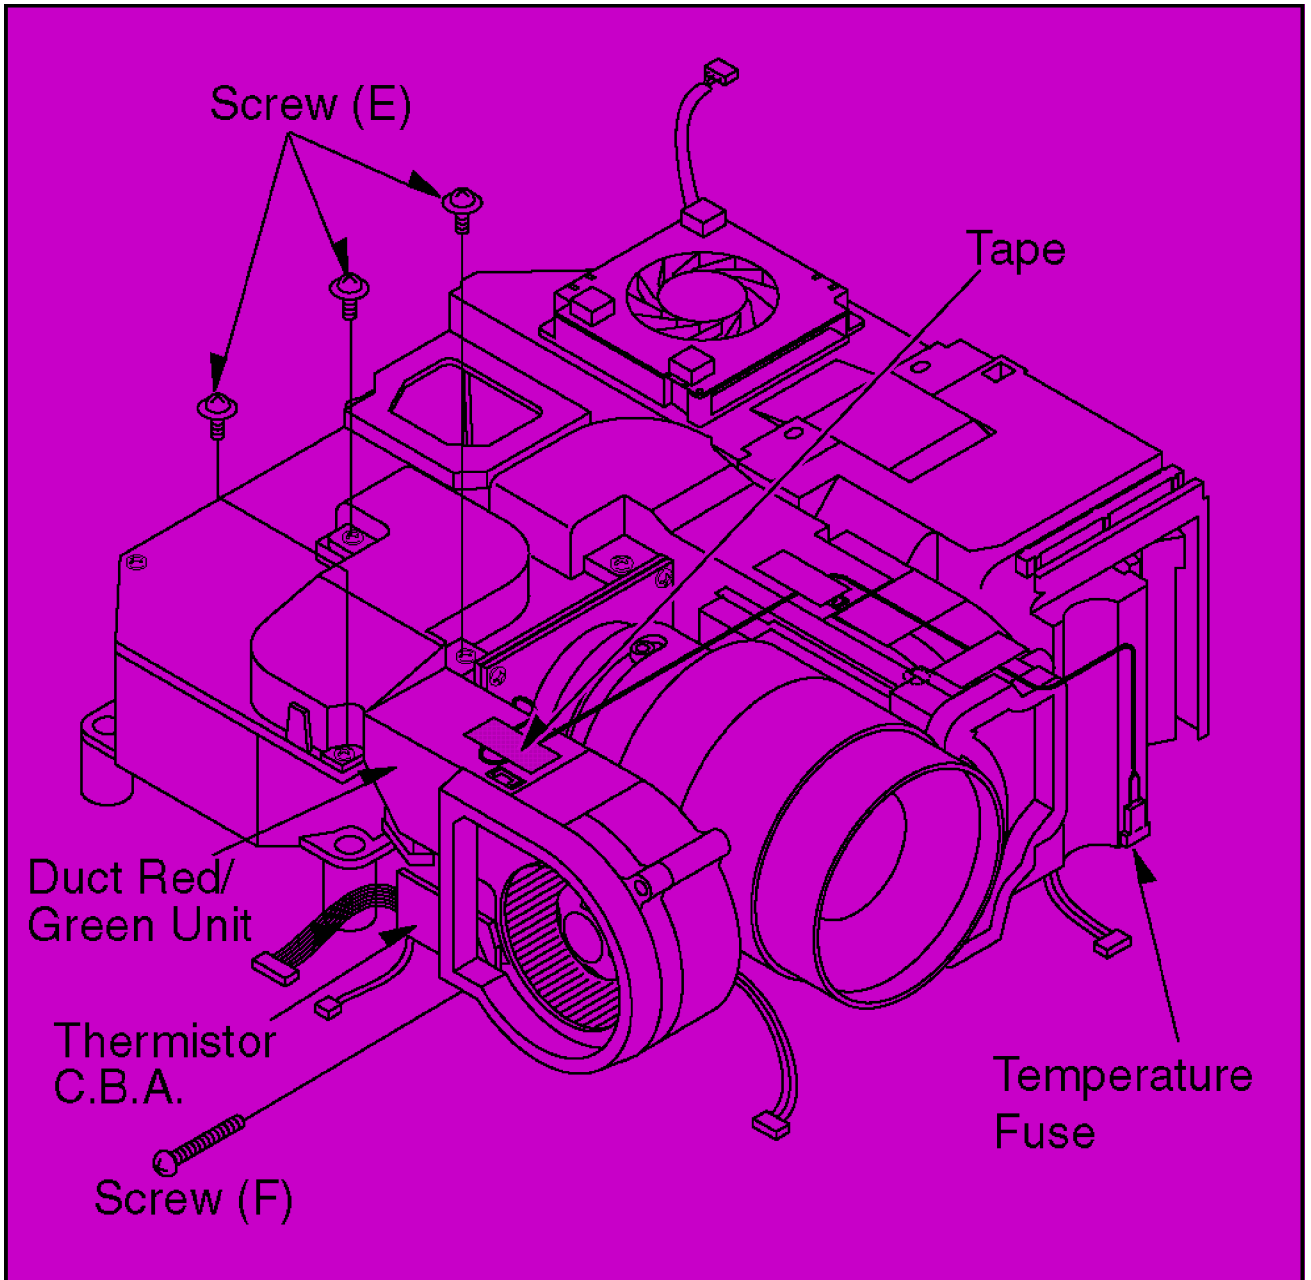


Assembly Note:

After Installing the Duct Red/Green Unit, fix the cable of the Temperature Fuse in the original position as shown in Fig. 4-4-6.

4.4.5. Removal of the Lens, Optical Block Unit and Prism/LCD Unit

1. Remove 4 screws (G) as shown in Fig. 4-4-7.
2. Remove the Prism/LCD Unit with the Lens carefully.
3. Remove 4 screws (H) and separate the Lens from the Prism/LCD Unit.


Fig. 4-4-7

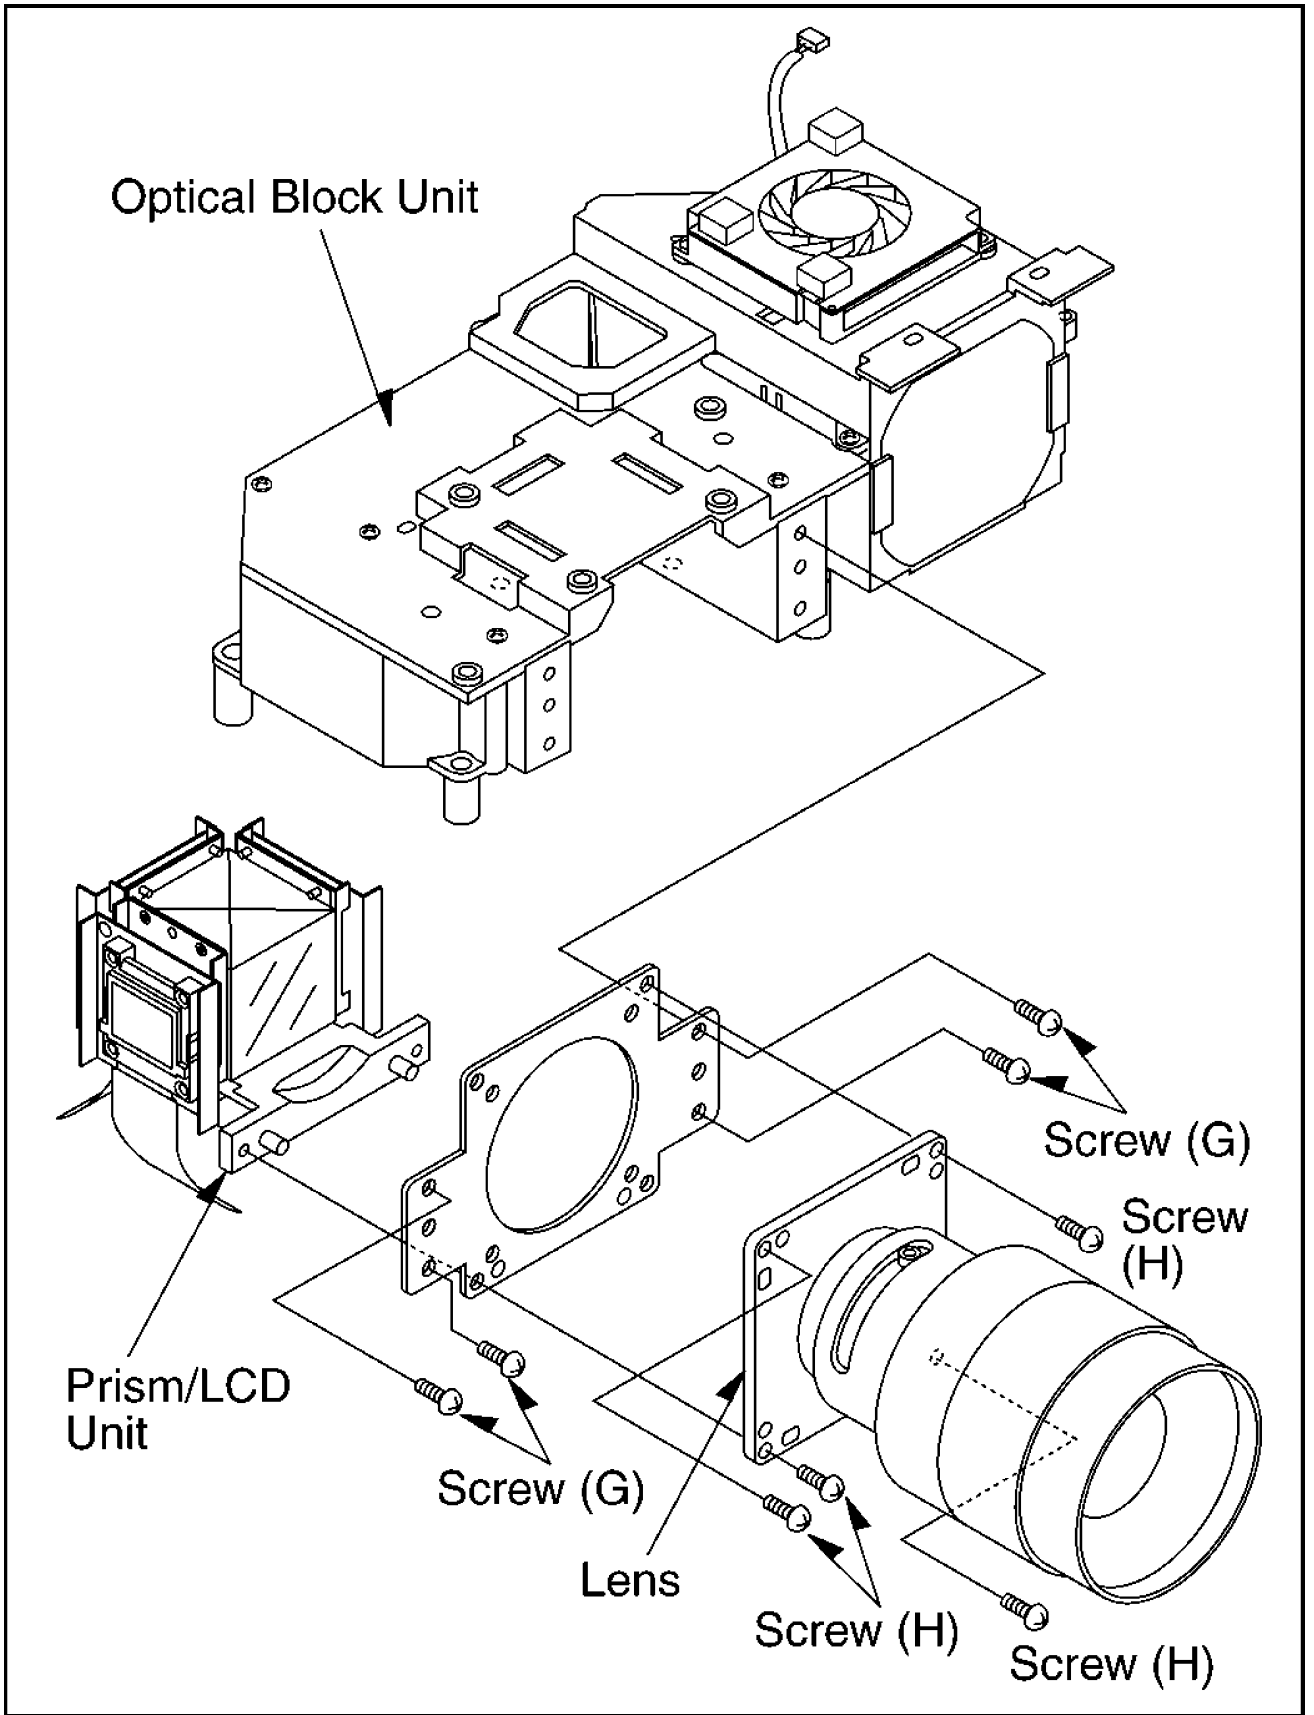

4.4.6. Removal of the Polarizer Plates

- 1. Break the tabs which fix the Polarizer Plate Red, Polarizer plate Blue and Polarizer Plate Green as shown in Fig. 4-4-8.**
- 2. Take out the Polarizer Plates by pushing from the opposite side of the broken tabs.**

Fig. 4-4-8

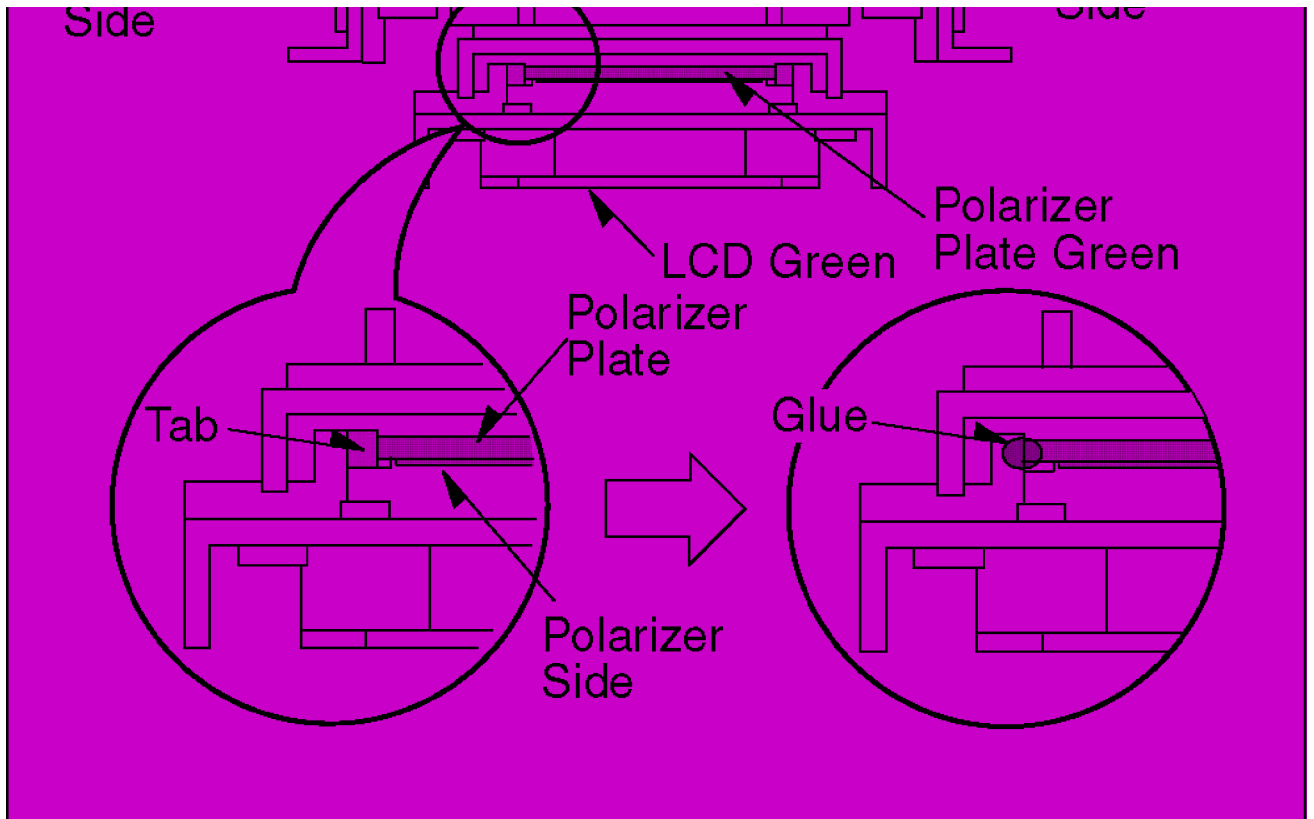


Assembly note:

1. With paying attention to the direction of the Polarizer, insert and fix it with glue.
2. Be careful not to stick glue to the surface of the Polarizer.
3. After the hardening of glue is surely confirmed, install the Prism/LCD Unit.
4. If the picture becomes bluish or reddish or greenish due to the replacement of the Polarizer Plate , follow the procedure of “ 5.4.10. POLARIZER ADJUSTMENT ”.

4.4.7. Removal of the Flat Fan

1. Remove a screw (l) as shown in Fig. 4-4-9.

Fig. 4-4-9

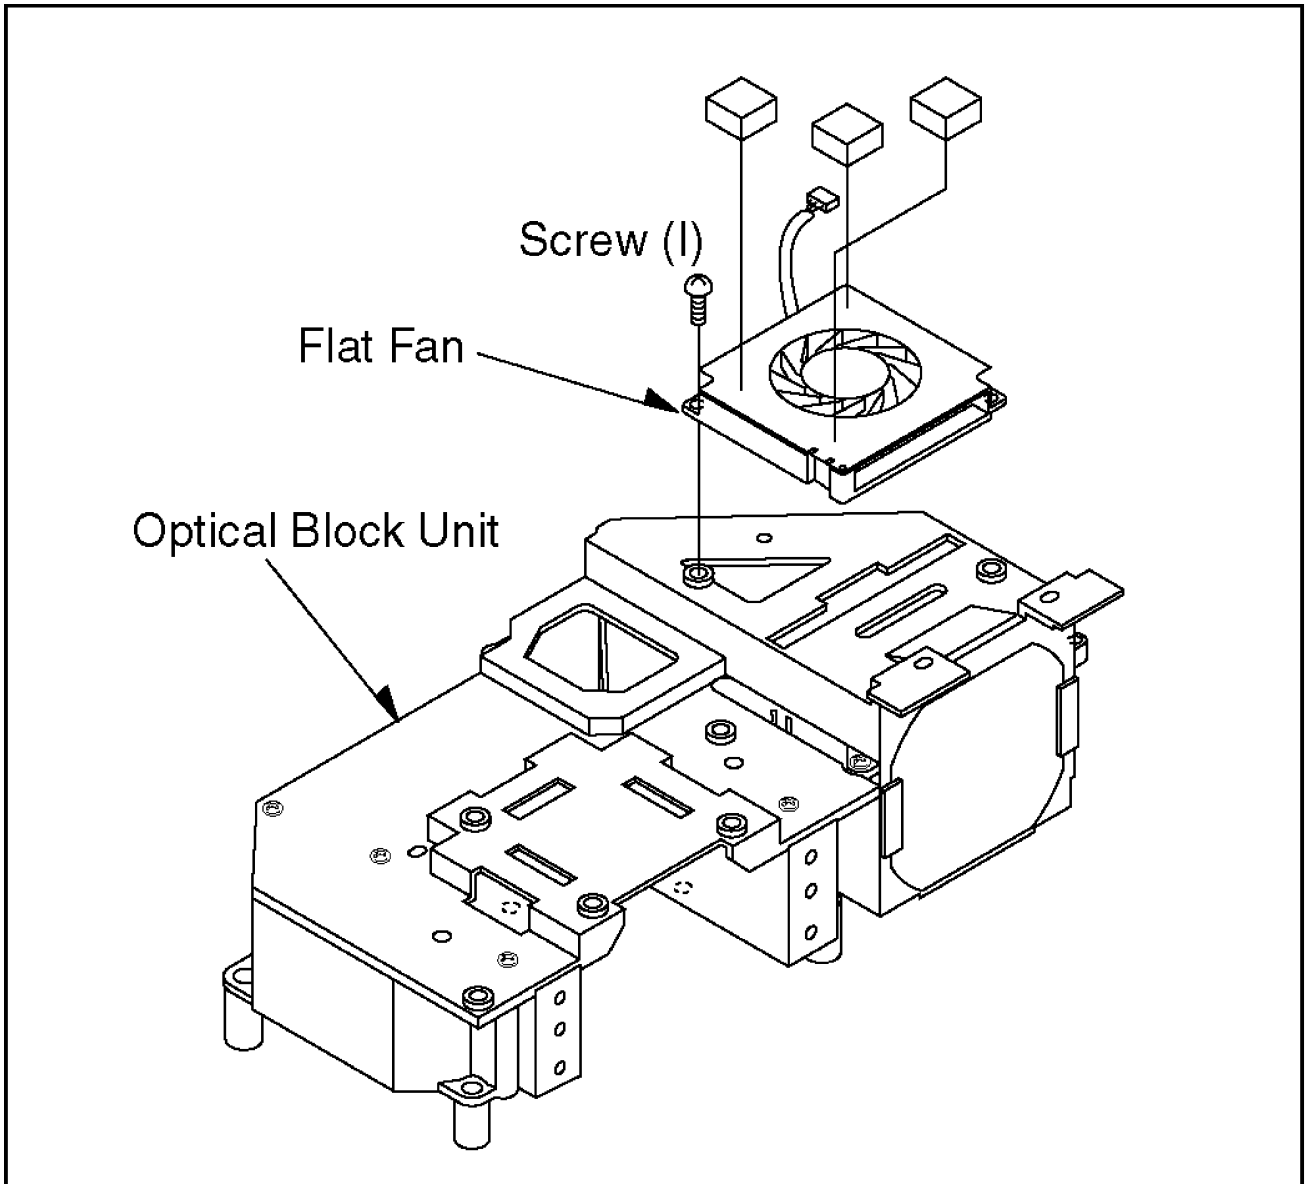

5. ADJUSTMENT PROCEDURES

5.1. INITIAL GUIDE LINE

The tables below show adjustments which will be necessary according to the unit parts and optical parts to be replaced.

Make sure to perform these adjustments shown below as necessary.

If you replace:	Adjustments
MAIN C.B.A.	(5-4-1), 5-4-2, 5-4-3, 5-4-4, 5-4-5, 5-4-6, 5-4-7, 5-4-8
OPTICAL BLOCK UNIT	5-4-9
POLARIZER UNIT	5-4-10

List of necessary adjustments	
5-4-1	LCD VOLTEGE ADJUSTMENT
5-4-2	RGB INPUT LEVEL ADJUSTMENT
5-4-3	VIDEO INPUT LEVEL ADJUSTMENT
5-4-4	COMPONENT VIDEO COLOR ADJUSTMENT
5-4-5	LCD COMMON ADJUSTMENT
5-4-6	WHITE LEVEL ADJUSTMENT
5-4-7	BLACK LEVEL ADJUSTMENT
5-4-8	WHITE BALANCE ADJUSTMENT
5-4-9	FULL MIRROR ADJUSTMENT
5-4-10	POLARIZER ADJUSTMENT

Notes:

1. () : Items which need the confirmation when replaced.
2. When any adjustments 5.4.1. through 5.4.4. are necessary, please refer to "Preparation for Adjustments 5.4.1. through 5.4.4.".
3. When any adjustments 5.4.5. through 5.4.8., 5.4.11. and 5.4.12. are necessary, please refer to "Preparation for Adjustments 5.4.5. through 5.4.8., 5.4.11. and 5.4.12.".

5.1.1. The "FACTORY ADJUST" mode

All Electrical Adjustments are performed on the "FACTORY ADJUST" mode which is used remote control unit instead of variable resistor to control the adjustment value.

1. Connect a jumper wire between TP2017 and TP2018 on Main C.B.A. for over 5 seconds to enter the "FACTORY ADJUST" mode.
2. Press the POWER button once.
3. While "Please press POWER button again to power off." is displayed, press the MENU button.
4. Press ▲ or ▼ button on remote control to select and press the ENTER button to

set the item to be adjusted.

Note:

Do not adjust all items in “DIGITAL ADJUST”, and VIDEO BRIGHT in “VIDEO/RGB ADJUST, and GAMMA R, G, B in “LCD/FAN ADJUST”.

Fig. 5-1-1

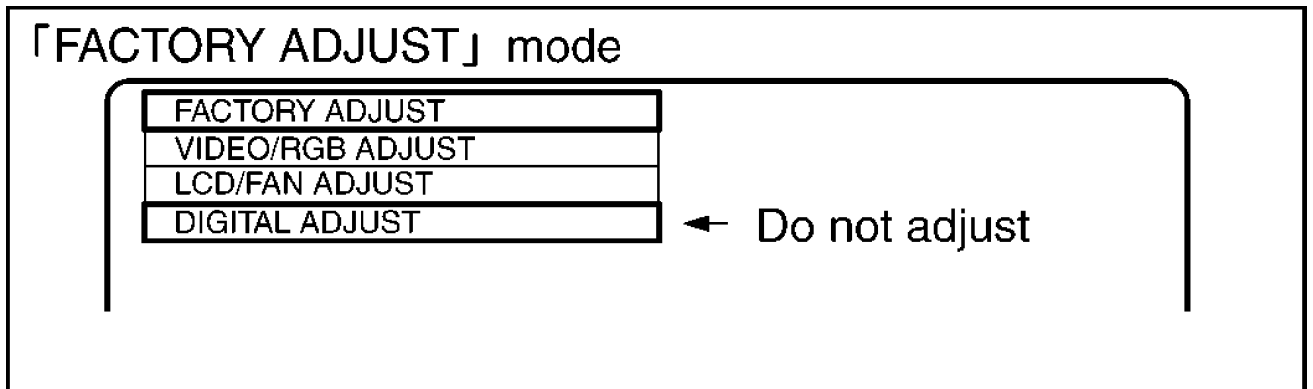


Fig. 5-1-2

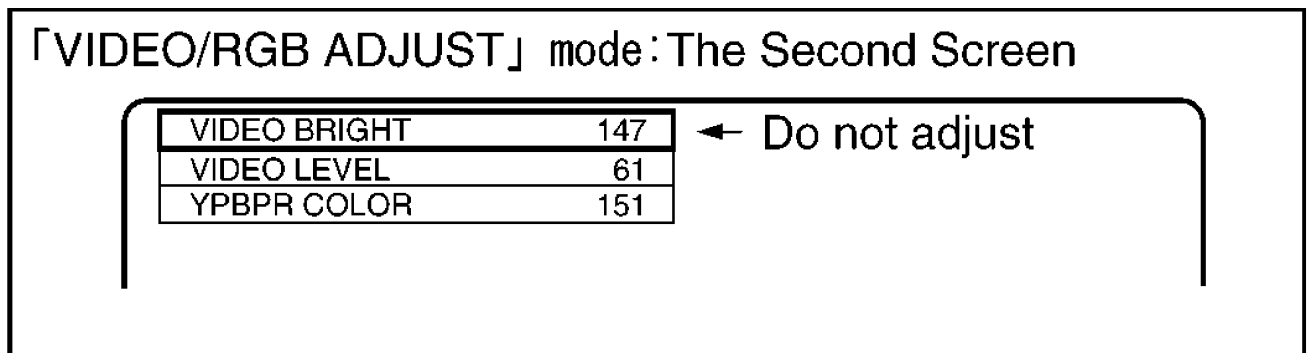


Fig. 5-1-3

「LCD/FAN ADJUST」 mode: The First Screen

VCOM R	115
VCOM G	105
VCOM B	100
BLACK LEVEL	130
WHITE LEVEL	150
CUTOFF R	140
CUTOFF B	90
GAMMA R	3
GAMMA G	3
GAMMA B	3

} Do not adjust

5.2. TEST EQUIPMENT

To do all of these adjustments, the following equipment is required.

1. Dual-Trace Oscilloscope
Voltage Range : 0.001~50 V/Div.
Frequency Range : DC~50 MHz
Probes : 10:1, 1:1
2. NTSC Video Pattern Generator
3. Plastic Tip Driver and Non-Metal Driver
4. (+) Screwdriver and (-) Screwdriver
5. Hexagon Wrench (2.5 mm)
6. Standard Screen
7. DVM (Digital Volt Meter)
8. Programmable Video Signal Generator
9. Test pattern signal (not supplied)
10. Luminance Color Meter
11. Jumper wire

5.3. HOW TO READ THE ADJUSTMENT PROCEDURES

Fig. 5-3-1


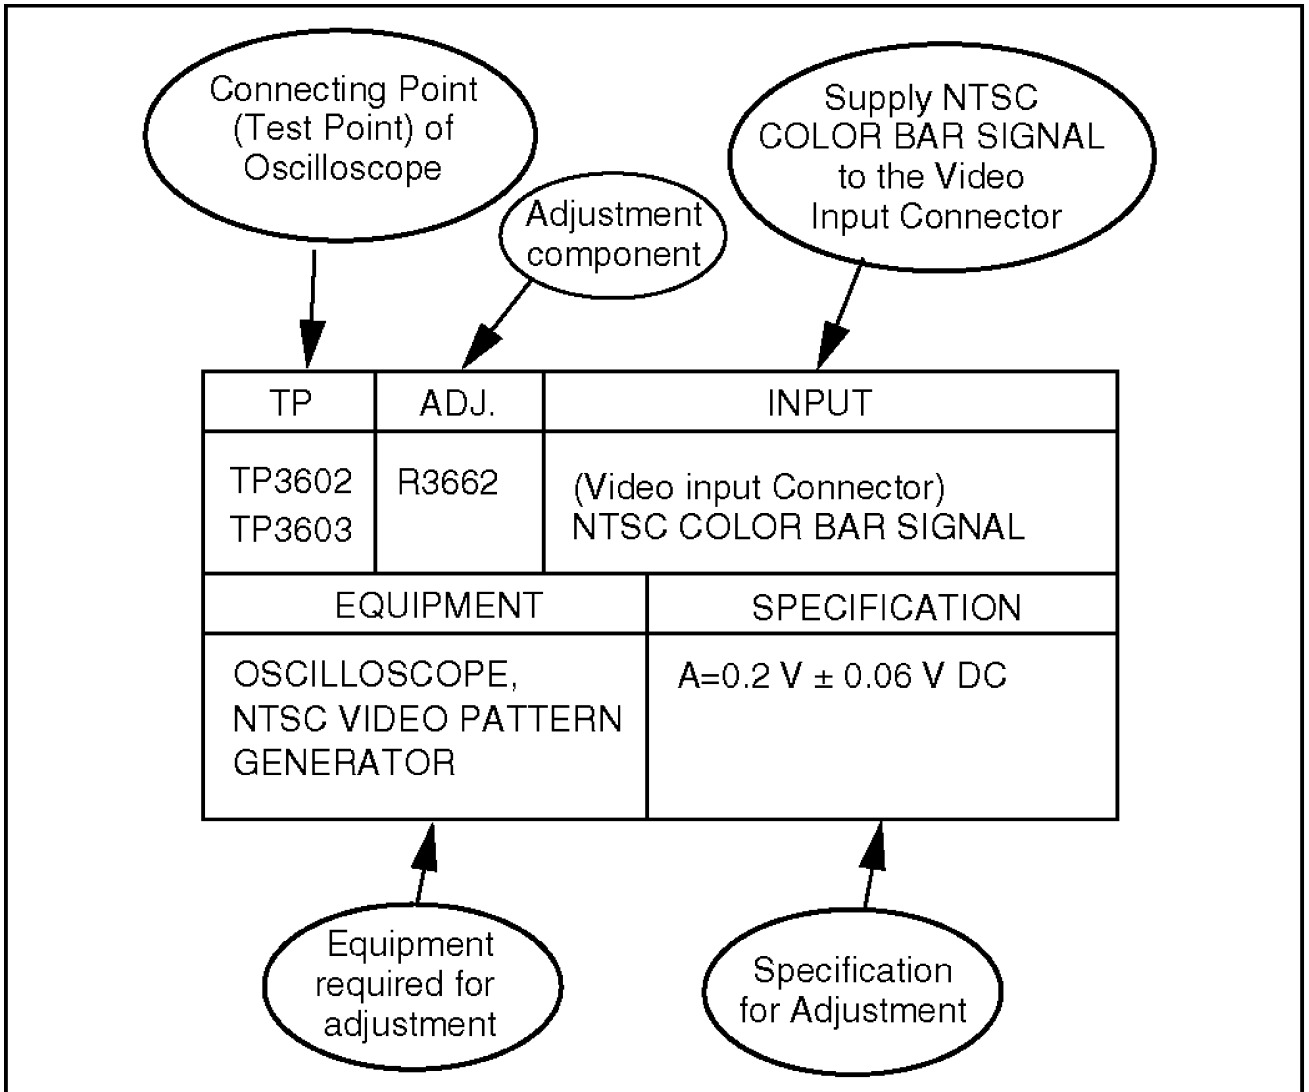


Fig. 5-3-2

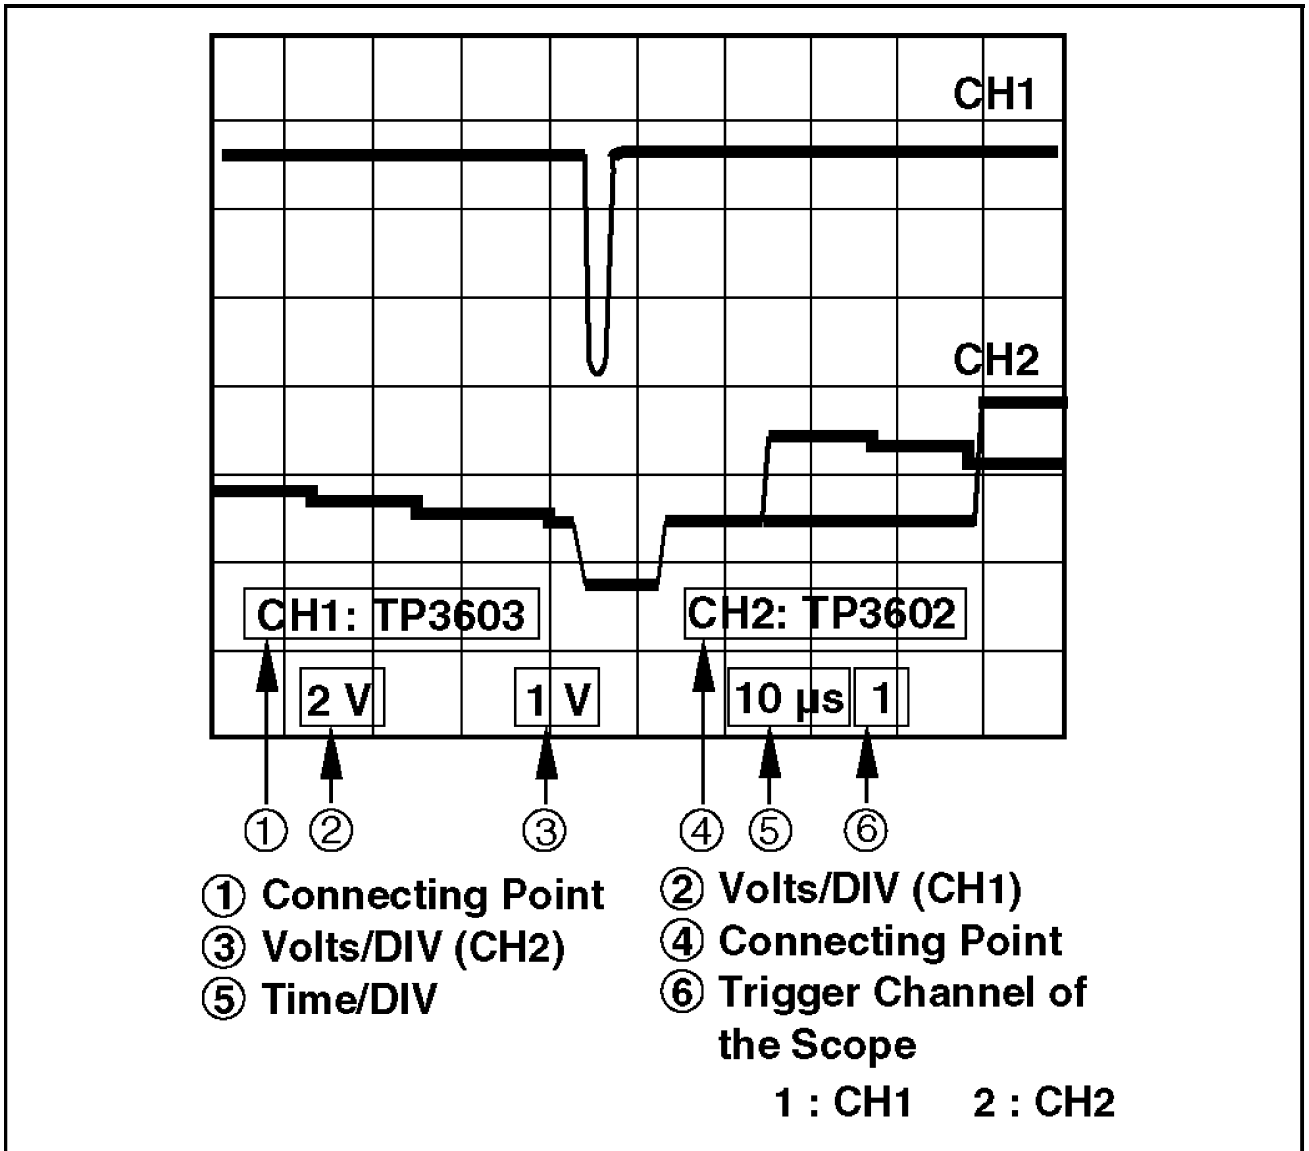

5.4. ADJUSTMENT PROCEDURES

Preparation for Adjustments 5.4.1. through 5.4.4.

1. Connect a jumper wire between TP2017 and TP2018 on Main C.B.A. for over 5 seconds to set to the "FACTORY ADJUST" mode.
2. Press the POWER button once.
3. While "Please press POWER button again to power off." is displayed, press the MENU button.
4. Press ▲ or ▼ button on remote control to select "VIDEO/RGB ADJUST" mode, and press ENTER button to set to "VIDEO/RGB ADJUST" mode.

Fig. 5-4-1

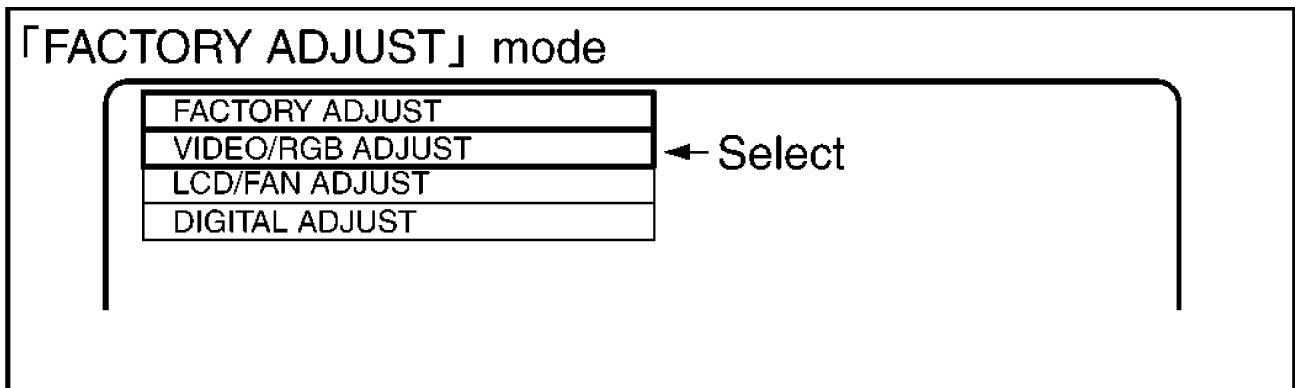


Fig. 5-4-2


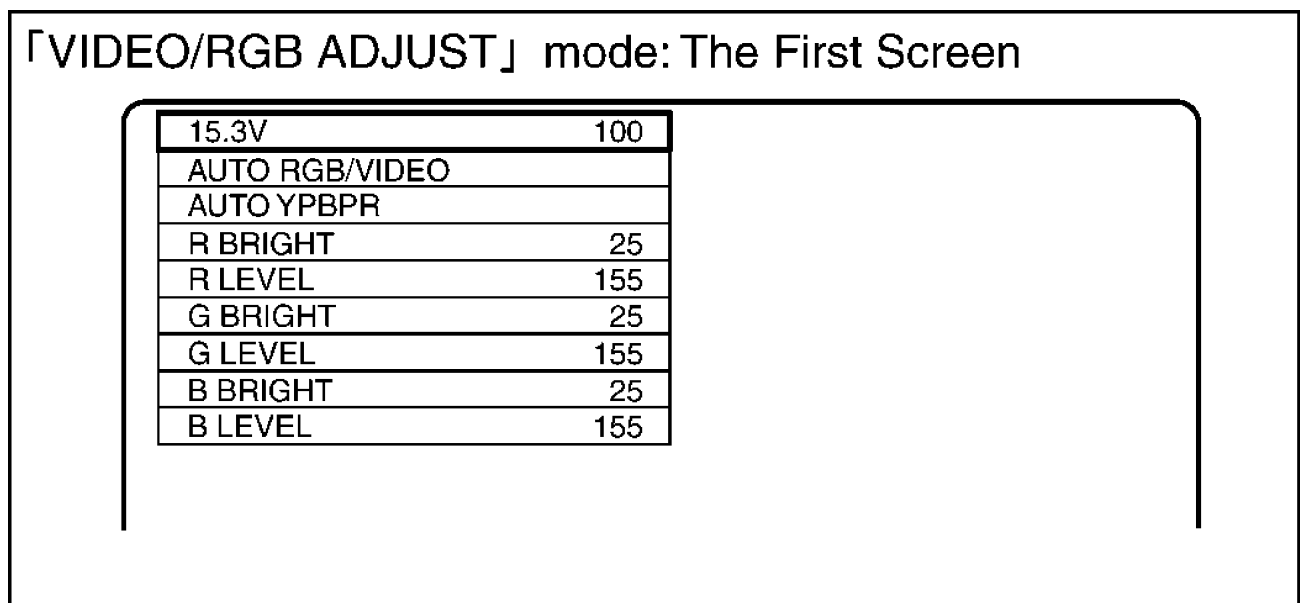


Fig. 5-4-3

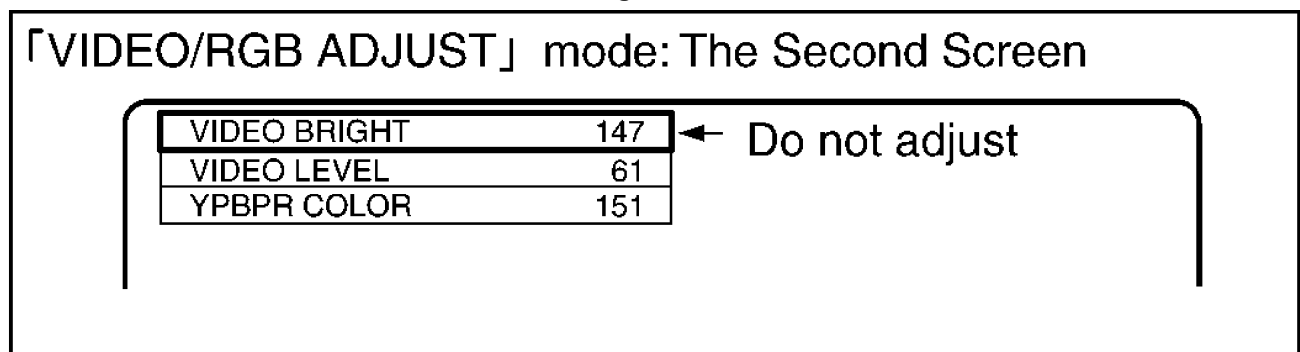

5. After completing adjustments 5.4.1. through 5.4.4., press the “MENU ” button to release from “VIDEO/RGB ADJUST” mode. (Adjustment data is memorized in EEPROM IC (IC2006) by pressing “MENU ” button.)Otherwise, adjustment data 5.4.1. through 5.4.4. will be cancelled.

Preparation for Adjustments 5.4.5. through 5.4.8., 5.4.11. and 5.4.12.

1. Connect a jumper wire between TP2017 and TP2018 on Main C.B.A. for over 5 seconds to set to the “FACTORY ADJUST” mode.

2. Press the POWER button once.
3. While "Please press POWER button again to power off." is displayed, press the MENU button.
4. Press ▲ or ▼ button on remote control to select "LCD/FAN ADJUST" mode, and press ENTER button to set to "LCD/FAN ADJUST" mode.

Fig. 5-4-4

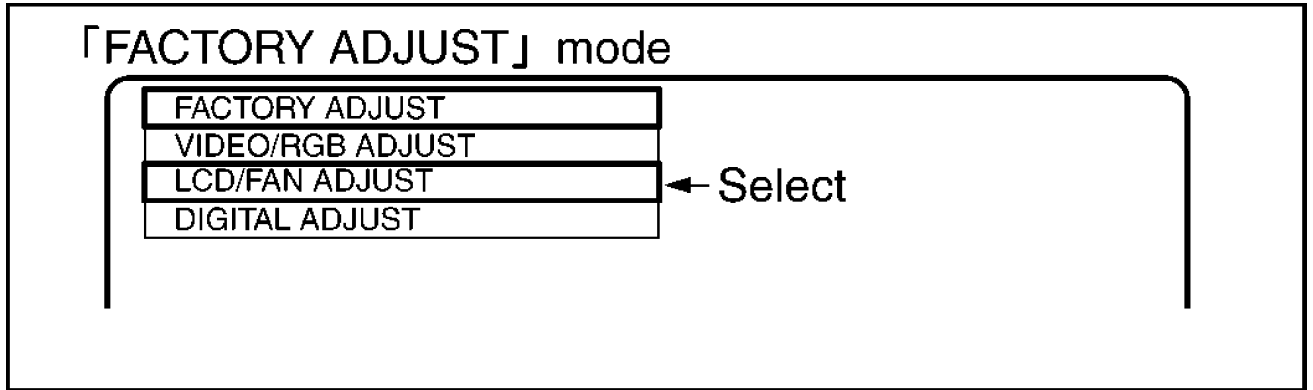


Fig. 5-4-5

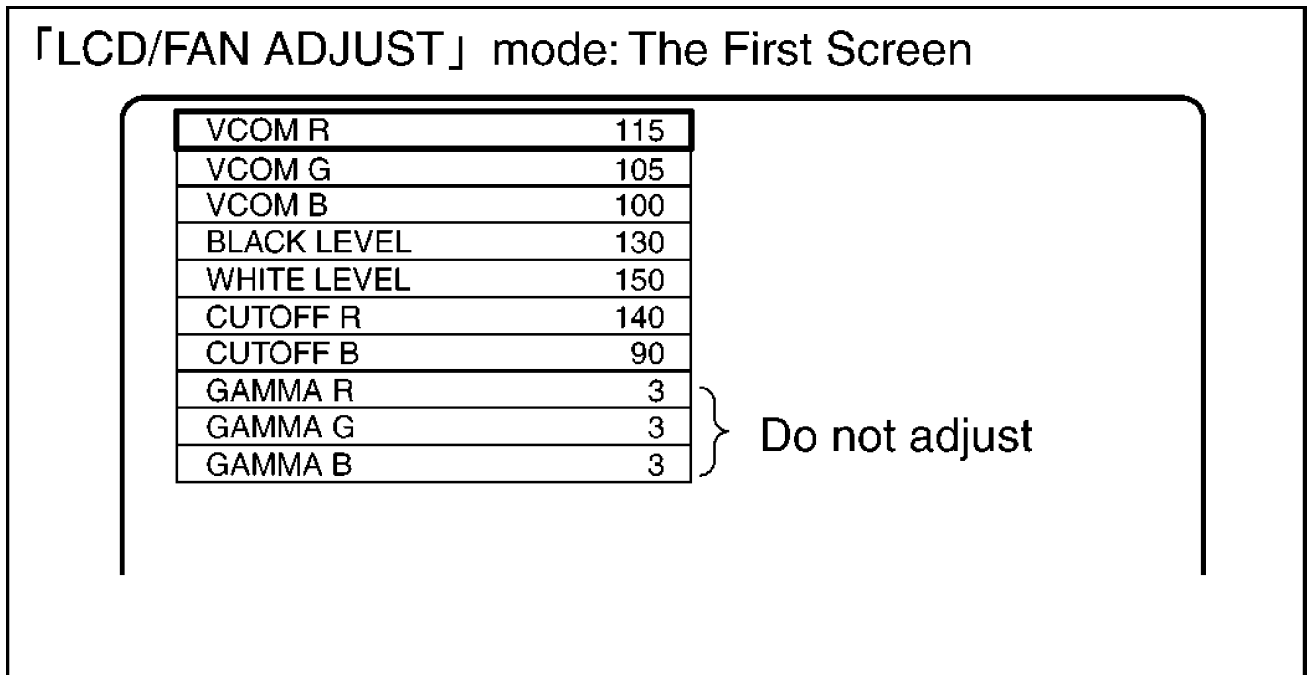


Fig. 5-4-6

「LCD/FAN ADJUST」 mode: The Second Screen

FAN1/2 SPEED	162
FAN3/4 SPEED	162

5. After completing adjustments 5.4.5. through 5.4.8., 5.4.11. and 5.4.12., press the “MENU ” button to release from “LCD/FAN ADJUST” mode. (Adjustment data is memorized in EEPROM IC (IC2006)by pressing “MENU ” button.) Otherwise, adjustment data 5.4.5. through 5.4.8., 5.4.11. and 5.4.12. will be cancelled.

5.4.1. LCD VOLTAGE ADJUSTMENT

Purpose:

To set the standard voltage for LCD panel.

Symptom of Misadjustment:

LCD panel may be damaged.

TP	ADJ.	INPUT
TP1904 TP1907 (GND)	/	/
EQUIPMENT		SPECIFICATION
DVM (DIGITAL VOLT METER)		15.3 V ± 0.05 V DC

Note:

TP1904, TP1907: MAIN C.B.A.

1. Connect the DVM (Digital Volt Meter) to TP1904.
2. Press ▲ or ▼ button on the remote control to select “15.3V”.

3. Press ◀ or ▶ button so that the voltage shown in the display of DVM is $15.3\text{ V} \pm 0.05\text{ V DC}$.

5.4.2. RGB INPUT LEVEL ADJUSTMENT

Purpose:

To set the optimum signal level.

Symptom of Misadjustment:

The picture will be too light or too dark.

TP	ADJ.	INPUT	
TP3501 TP3502 TP3503	/	(RGB Input Connector) GRAY SCALE PATTERN SIGNAL (3 SCALE)	
EQUIPMENT		SPECIFICATION	
OSCILLOSCOPE TEST PATTERN SIGNAL		Refer to Description below	


Note:

TP3501, TP3502, TP3503: Main C.B.A.

1. Supply Gray Scale Pattern Signal (3 scales).
2. Connect the oscilloscope to TP3501.
3. Press ▲ or ▼ button on remote control to select "R BRIGHT".
4. Press ◀ or ▶ button so that Black level becomes the same as OSD Black level.
5. Select "R LEVEL", and press ◀ or ▶ button so that White level becomes the same as OSD White level.
6. Connect the oscilloscope to TP3502.
7. Press ▲ or ▼ button on remote control to select "G BRIGHT".

8. Press ◀ or ▶ button so that Black level becomes the same as OSD Black level.
9. Select "G LEVEL", and press ◀ or ▶ button so that White level becomes the same as OSD White level.
10. Connect the oscilloscope to TP3503.
11. Press ▲ or ▼ button on remote control to select "B BRIGHT".
12. Press ◀ or ▶ button so that Black level becomes the same as OSD Black level.
13. Select "B LEVEL", and press ◀ or ▶ button so that White level becomes the same as OSD White level.

Fig. 5-4-7

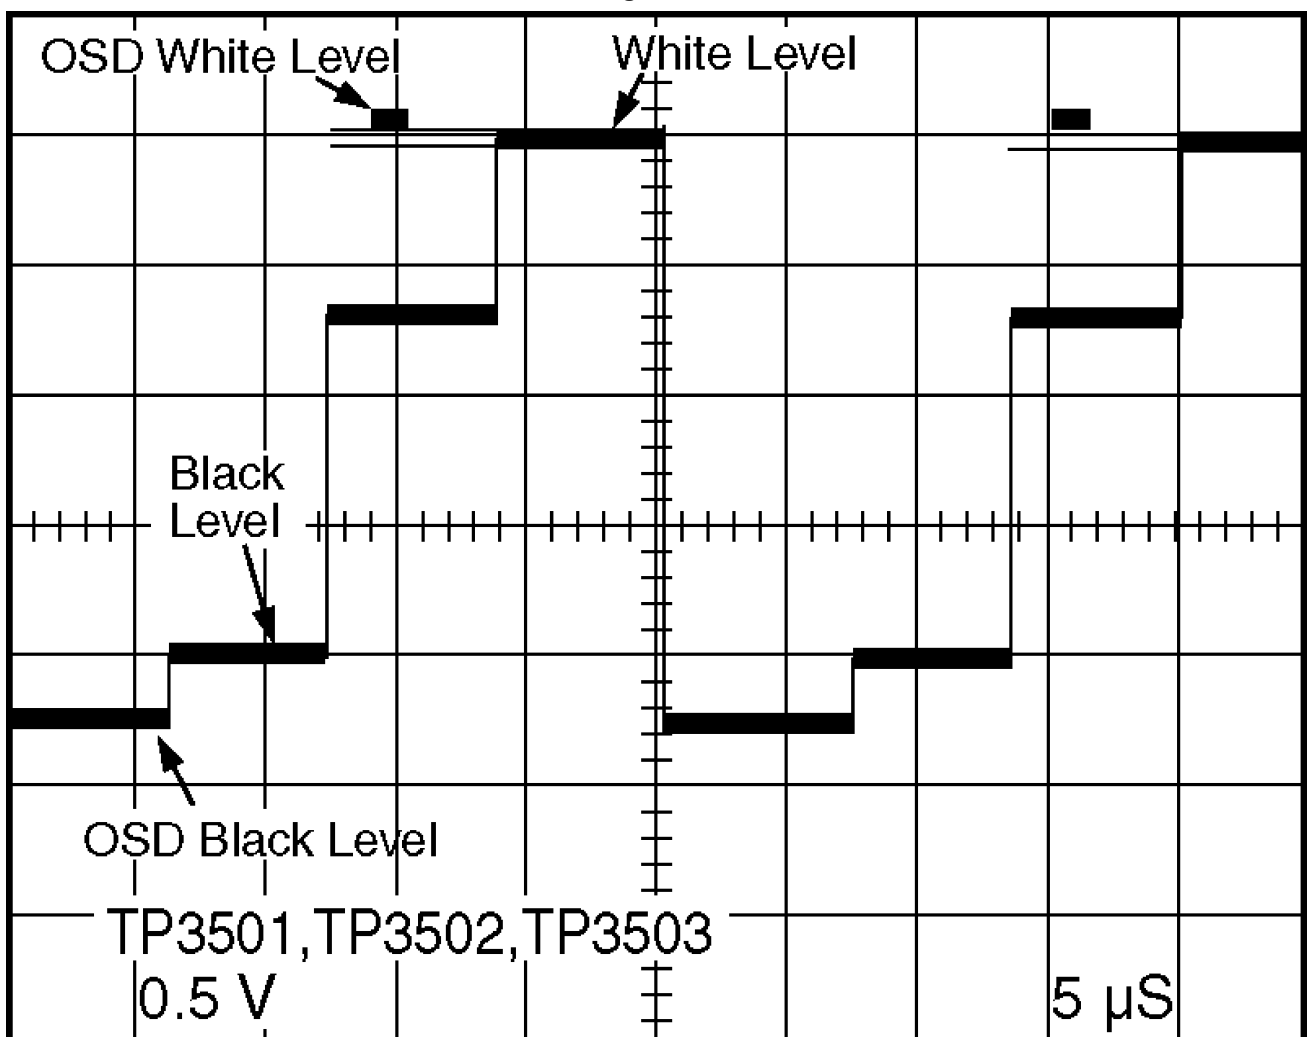

5.4.3. VIDEO INPUT ADJUSTMENT

Purpose:

To set the optimum signal level.

Symptom of Misadjustment:

The picture will be too light or too dark.


TP	ADJ.	INPUT	
TP3502		(VIDEO Input Connector) GRAY SCALE PATTERN SIGNAL (3 SCALE)	
EQUIPMENT		SPECIFICATION	
OSCILLOSCOPE NTSC VIDEO PATTERN GENERATOR		Refer to Description below	

Note:

TP3502: Main C.B.A.

1. Supply Gray Scale Pattern Signal (3 scales).
2. Connect the oscilloscope to TP3502.
3. Press ▲ or ▼ or MENU button on remote control to select "VIDEO LEVEL".
4. Press ◀ or ▶ button so that the white level becomes the same as OSD white level.

Fig. 5-4-8

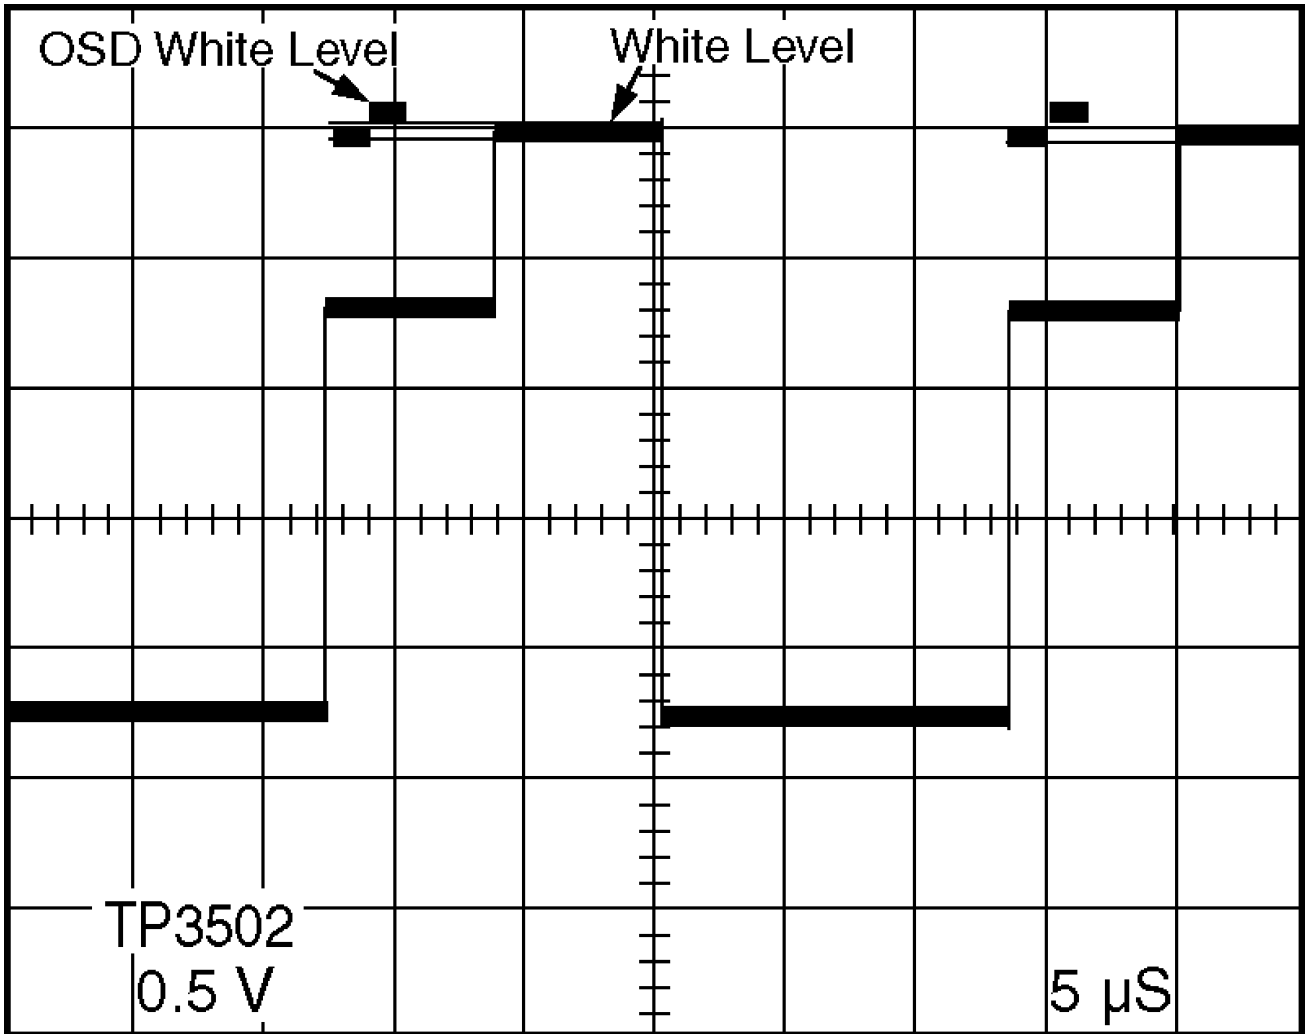

5.4.4. COMPONENT VIDEO COLOR ADJUSTMENT

Purpose:
 To set the optimum signal level.

Symptom of Misadjustment:
 The picture will be too light or too dark.


TP	ADJ.	INPUT
TP3503	/	(RGB Input Connector) COMPONENT VIDEO 480P BLUE 100 % RASTER SIGNAL (SET UP: YPBPR)
EQUIPMENT		SPECIFICATION
OSCILLOSCOPE PROGRAMMABLE VIDEO SIGNAL GENERATOR		Refer to Description below

Note:

TP3503: Main C.B.A.

1. Supply Component Video 480P Blue 100 % Raster Signal.
(Refer to "System Configuration Example" of "2 OPERATION GUIDE")
2. Connect the oscilloscope to TP3503.
3. Press ▲ or ▼ button on remote control to select "YPBPR COLOR".
4. Press ◀ or ▶ button so that the Blue level becomes the same as OSD White level.

Fig. 5-4-9

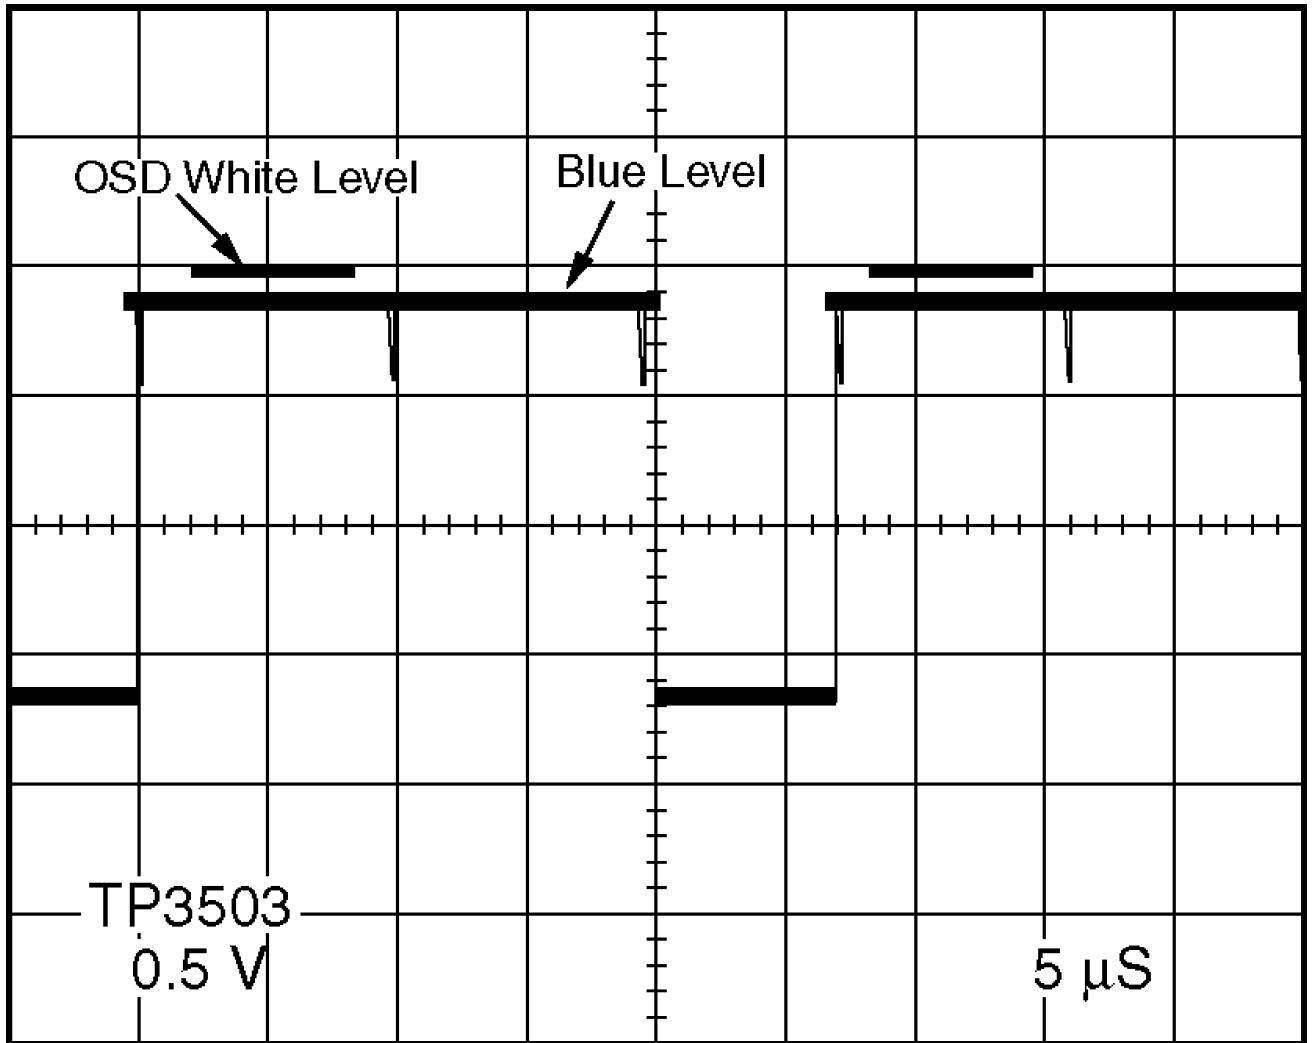

Note:

After completing adjustments, press the “MENU ” button to release from “VIDEO/RGB ADJUST” mode. (Adjustment data is memorized in EEPROM IC (IC2006) by pressing “MENU ” button.)Otherwise, adjustment data 5.4.1. through 5.4.4. will be cancelled.

5.4.5. LCD COMMON ADJUSTMENT

Purpose:

To set the optimum LCD common voltage.

Symptom of Misadjustment:

The picture will be bluish or reddish.

TP	ADJ.	INPUT	
		(RGB Input Connector) 70 % Red Horizontal Signal 70 % Green Horizontal Signal 70 % Blue Horizontal Signal	
EQUIPMENT		SPECIFICATION	
TEST PATTERN SIGNAL		Refer to Description below	

Note:

This adjustment should be done in a darkroom.

1. Supply 70 % Red Horizontal Signal and project on the screen.
2. Press ▲ or ▼ button on remote control to select “VCOM R”.
3. Press ◀ or ▶ button so that the flicker on the whole screen becomes minimal.
4. Supply 70 % Green Horizontal Signal and project on the screen.
5. Press ▲ or ▼ button on remote control to select “VCOM G”.
6. Press ◀ or ▶ button so that the flicker on the whole screen becomes minimal.
7. Supply 70 % Blue Horizontal Signal and project on the screen.
8. Press ▲ or ▼ button remote control to select “VCOM B”.
9. Press ◀ or ▶ button so that the flicker on the whole screen becomes minimal.

Note:

When the flicker is hard to see in the screen in step 1, 4, 7, press ▲ or ▼ button on remote control to select “BLACK LEVEL”, and press ◀ or ▶ button so that it appears. However, be sure to return “BLACK LEVEL” to previous value after LCD COMMON adjustment .

5.4.6. WHITE LEVEL ADJUSTMENT

Purpose:

To set the optimum signal level.

Symptom of Misadjustment:

The picture will be too light or too dark.

TP	ADJ.	INPUT	
TP3505		(RGB Input Connector) GRAY SCALE PATTERN SIGNAL (3 SCALE)	
EQUIPMENT		SPECIFICATION	
OSCILLOSCOPE TEST PATTERN SIGNAL		A=3.7 V ± 0.05 V [p-p]	

Note:

TP3505: Main C.B.A.

1. Supply Gray Scale Pattern Signal (3 scales).
2. Connect the oscilloscope to TP3505.
3. Press ▲ or ▼ button on remote control to select "WHITE LEVEL".
4. Press ◀ or ▶ button so that level A becomes $3.7\text{ V} \pm 0.05\text{ V [p-p]}$.

Fig. 5-4-10

Gray Scale Pattern Signal (3 scales)


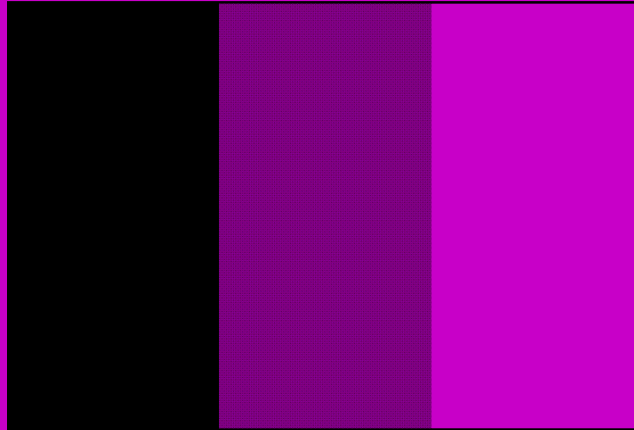


Fig. 5-4-11

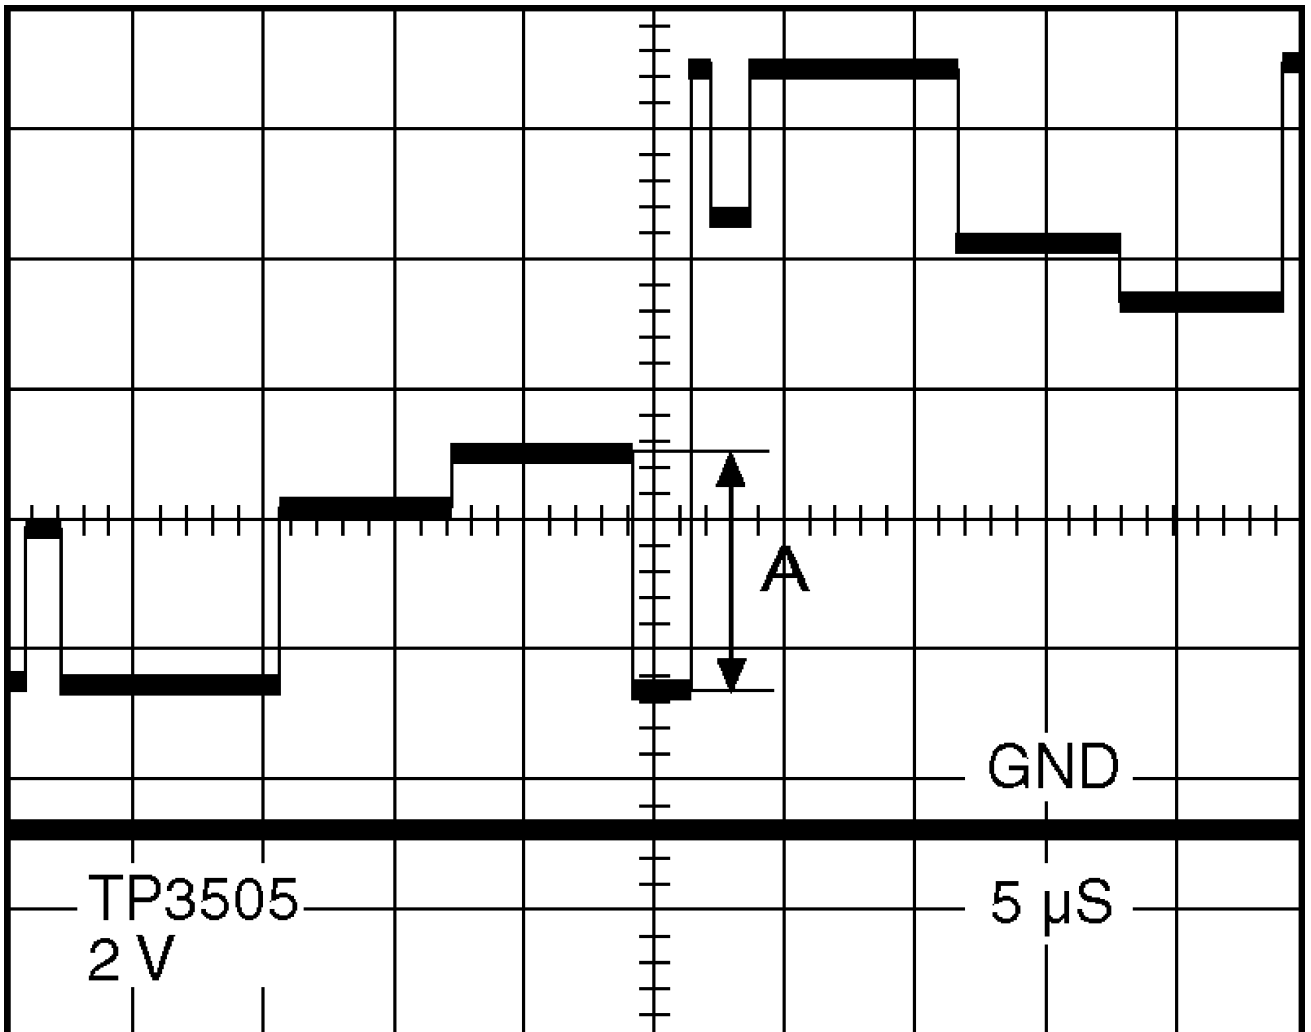

5.4.7. BLACK LEVEL ADJUSTMENT

Purpose:

To set the optimum signal level.

Symptom of Misadjustment:

The picture will be too light or too dark.


TP	ADJ.	INPUT	
		(RGB Input Connector) GREEN LEVEL ADJUSTMENT SIGNAL	
EQUIPMENT		SPECIFICATION	
TEST PATTERN SIGNAL		Refer to Description below	

Note:

This adjustment should be done in a darkroom.

1. Supply Green Level Adjustment Signal and project on the screen.
2. Press ▲ or ▼ button on remote control to select "BLACK LEVEL".
3. Press ◀ or ▶ button so that Portion (B) are invisible and Portion (A) are visible on the screen.

Fig. 5-4-12

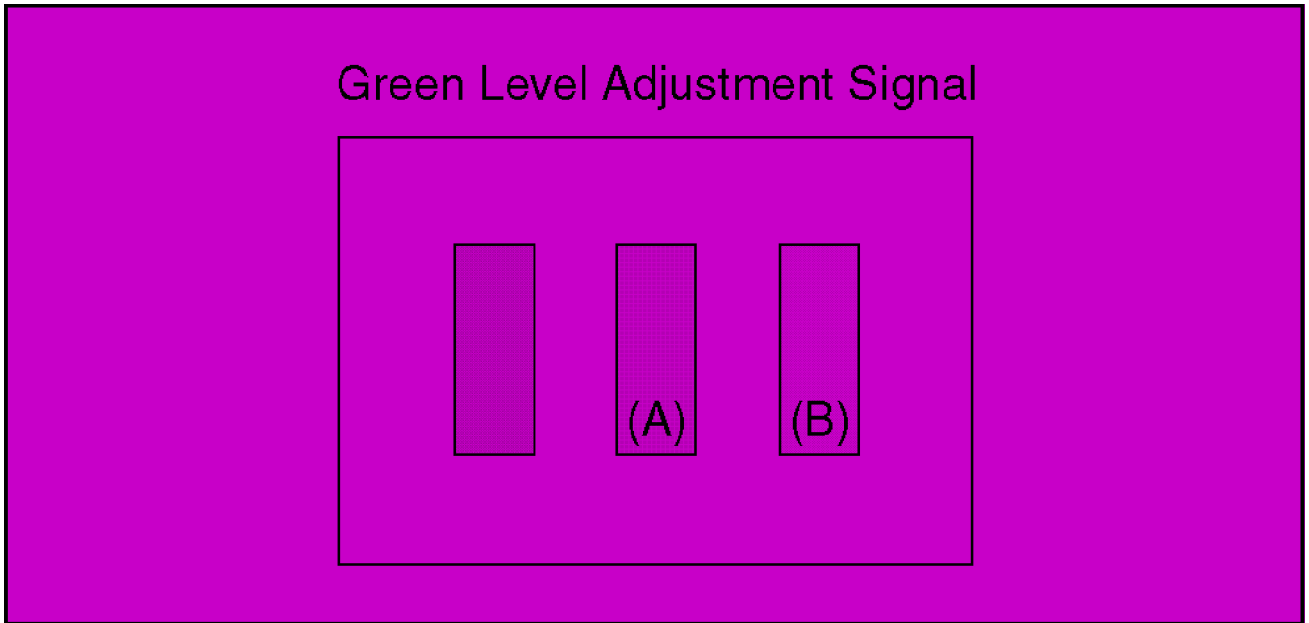

5.4.8. WHITE BALANCE ADJUSTMENT

Purpose:

To set the standard white level for each color temperature.

Symptom of Misadjustment:

White will become bluish or reddish.

This adjustment should be done in a darkroom.

5.4.8.1. METHOD 1


TP	ADJ.	INPUT	
/	/	(VIDEO Input Connector) GRAY SCALE PATTERN SIGNAL (10 scales)	
EQUIPMENT		SPECIFICATION	
NTSC VIDEO PATTERN GENERATOR		Refer to Description below	

Note:

This adjustment should be done in a darkroom.

1. Supply Gray Scale Pattern Signal (10 scales) and Project on the screen.
2. Press ▲ or ▼ button on remote control to select “CUTOFF R” or “CUTOFF B”.
3. Press ◀ or ▶ button to adjust “CUTOFF R” or “CUTOFF B” so that the area around 4rd and 6th scale (A) becomes pure gray with no red or blue tint.

Fig. 5-4-13

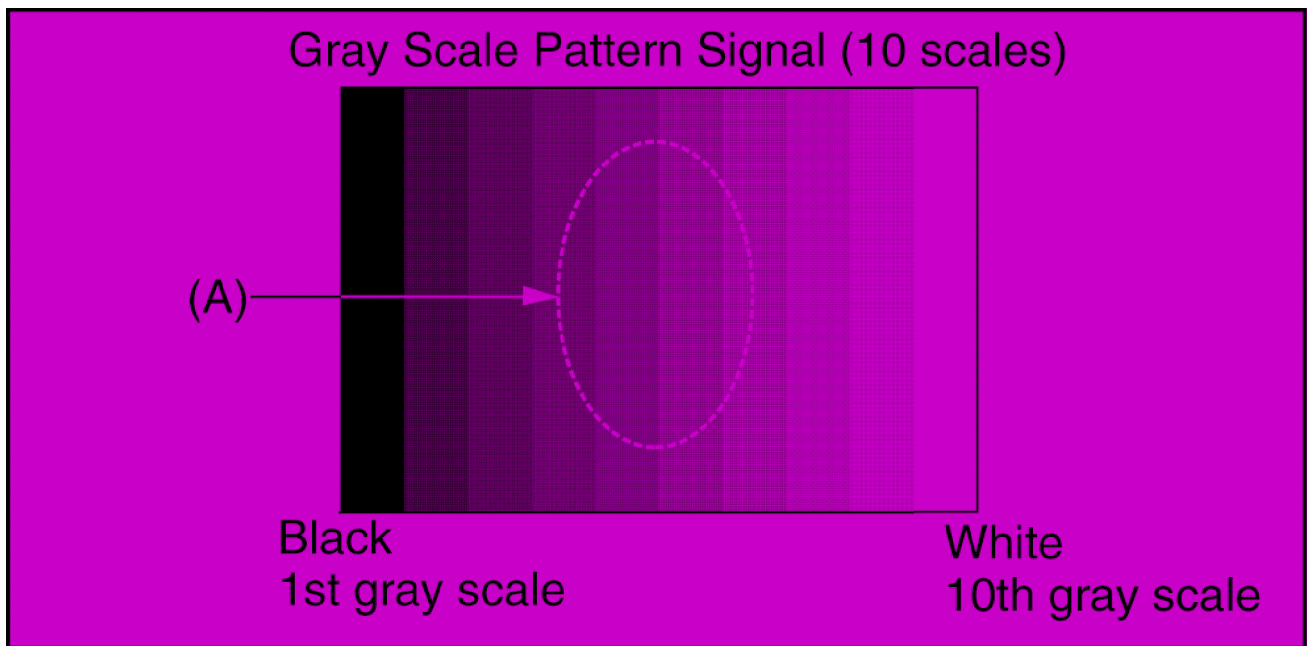

5.4.8.2. METHOD 2

TP	ADJ.	INPUT	
/	/	(RGB Input Connector) 50 % WHITE (GRAY) ADJUSTMENT SIGNAL	
EQUIPMENT		SPECIFICATION	
TEST PATTERN SIGNAL LUMINANCE COLOR METER		Refer to Description below	

1. Supply 50 % White Pattern Signal (0.35 V [p-p]) and project on the screen.
2. Press ▲ or ▼ button on remote control to select “CUTOFF R” or “CUTOFF B”.
3. Press ◀ or ▶ button to adjust “CUTOFF R” or “CUTOFF B” so that color temperature (K) and its deviation (uv) at the center of screen are 9500 K ± 1000 K and 0.015 uv + 0.003 uv - 0.005 uv respectively by Luminance Color Meter.

Note:

After completing adjustments, press the “MENU ” button to release from “LCD/FAN ADJUST” mode. (Adjustment data is memorized in EEPROM IC (IC2006) by pressing “MENU ” button.) Otherwise, adjustment data 5.4.5. through 5.4.8. will be cancelled.

5.4.9. FULL MIRROR ADJUSTMENT

Purpose:

To set the Full Mirror in the proper position.

Symptom of Misadjustment:

The non-uniformity color will appear.

TP	ADJ.	INPUT
/	FULL MIRROR FULL MIRROR RED-2 FULL MIRROR BLUE	(RGB Input Connector) 100 % GREEN SIGNAL 100 % YELLOW SIGNAL 100 % WHITE SIGNAL
EQUIPMENT		SPECIFICATION
TEST PATTERN SIGNAL		Refer to Description below


Adjustment:

Adjust the right and left sides of the screen by adjusting portion (a), portion (b) or portion (c) and adjust the top and bottom sides of the screen by adjusting back and forth direction.

1. FULL MIRROR ADJUSTMENT

- A. Supply 100 % Green Signal and project on the screen.
- B. Loosen 2 Screws (A) of the Full Mirror.
- C. Insert a (-) screwdriver into Portion (a) and move the Full Mirror in the direction shown by the arrows so that color uniformity is achieved over the whole screen. And then tighten 2 Screws (A).


Fig. 5-4-14

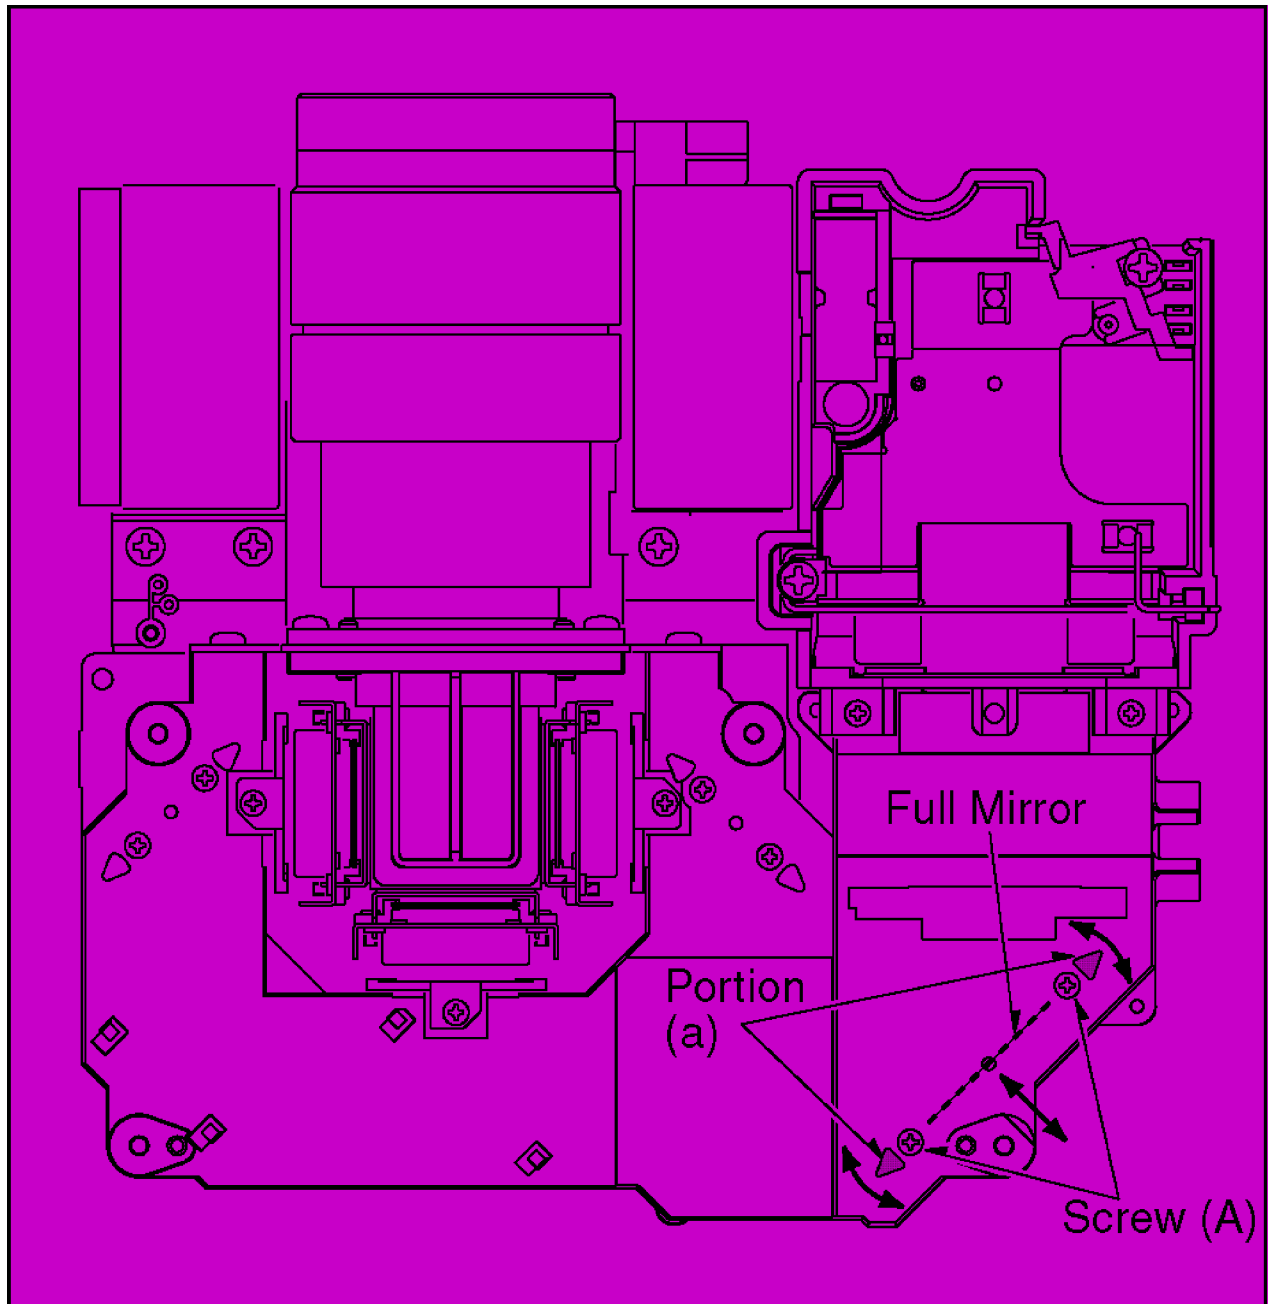

2. FULL MIRROR RED-2 ADJUSTMENT

- A. Supply 100 % Yellow Signal and project on the screen.
- B. Loosen 2 Screws (B) of the Full Mirror Red-2.
- C. Insert a (-) screwdriver into Portion (b) and move the Full Mirror Red-2 in the direction shown by the arrows so that color uniformity is achieved over the whole screen. And then tighten 2 screws (B).

Fig. 5-4-15

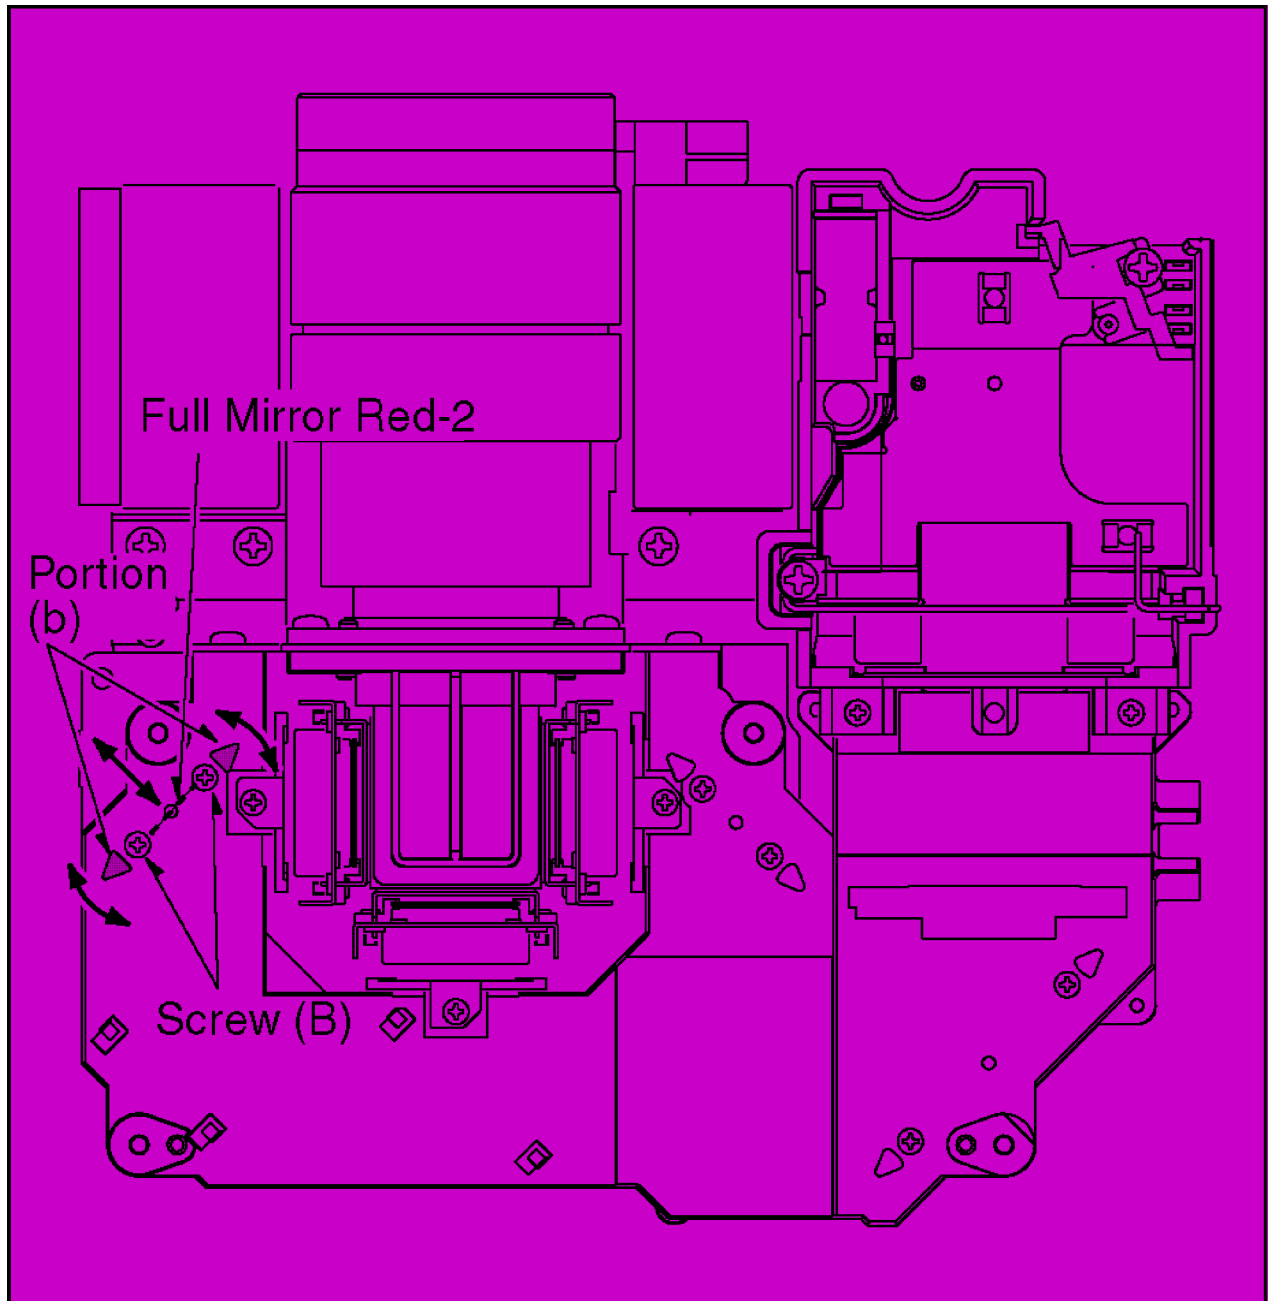


3. FULL MIRROR BLUE ADJUSTMENT

- A. Supply 100 % White Signal and project on the screen.
- B. Loosen 2 Screws (C) of the Full Mirror Blue.
- C. Insert a (-) screwdriver into Portion (c) and move the Full Mirror Blue in the direction shown by the arrows so that color uniformity is achieved over the

whole screen. And then tighten 2 screws (C).

Fig. 5-4-16

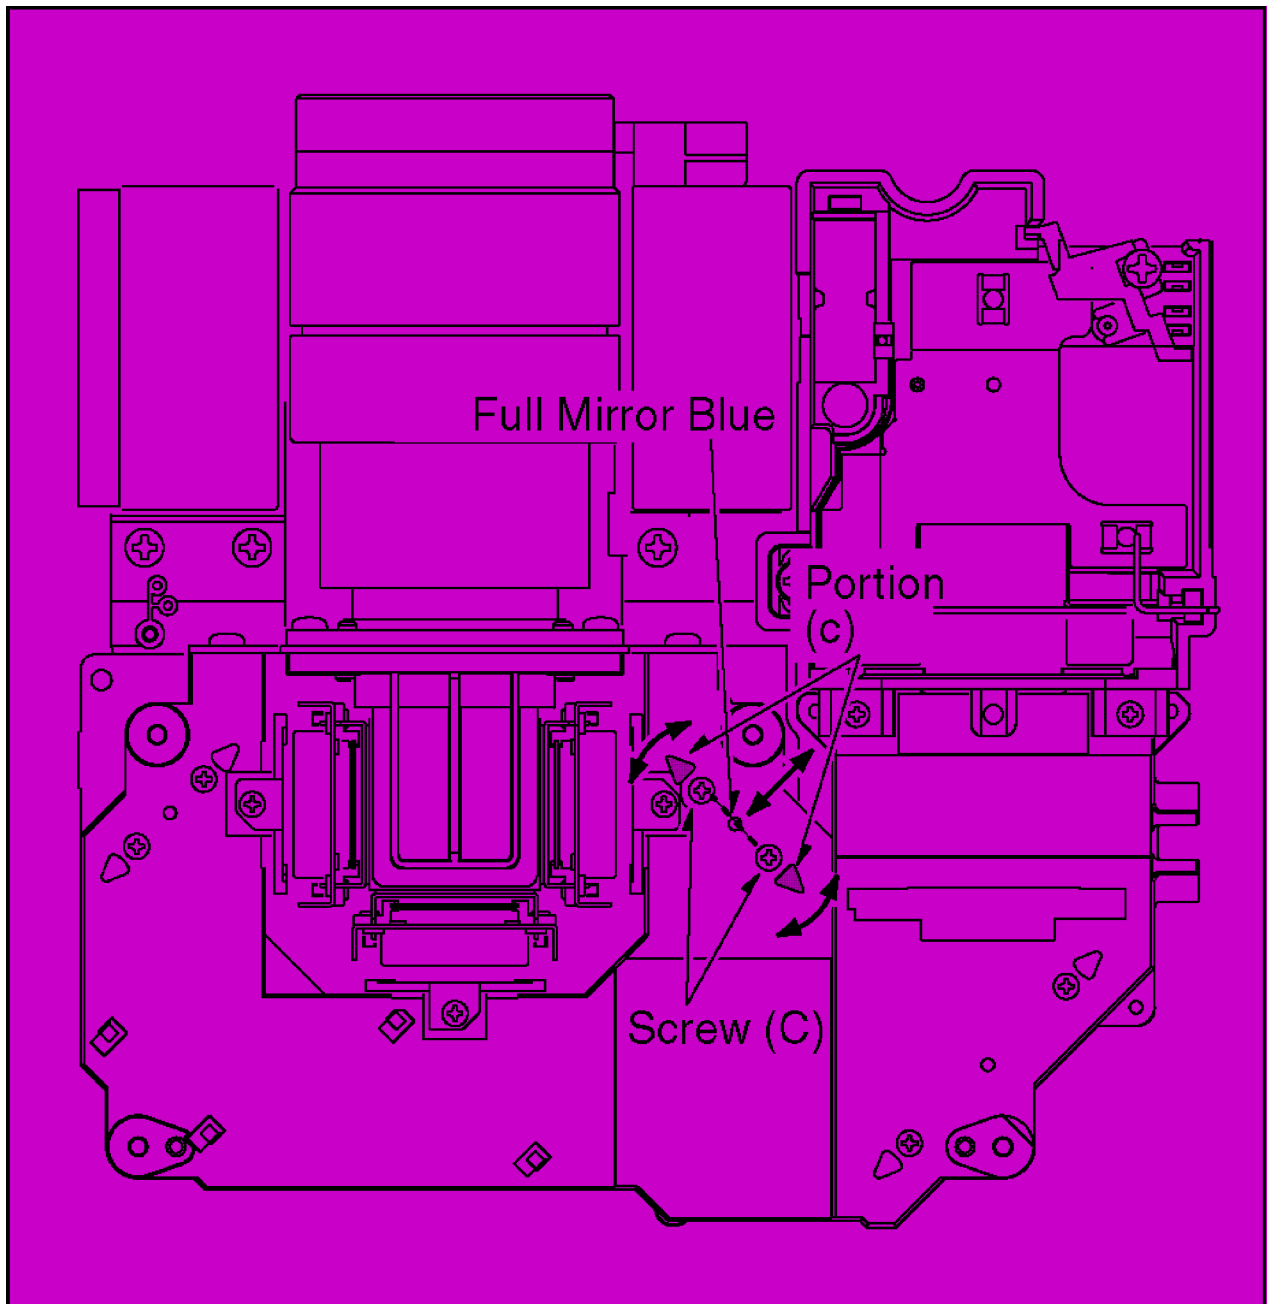

4. If the Full Mirror Blue adjustment can not be done, repeat step 1 through 2.

Note:

Do not use excessive force when adjusting the Mirror. Otherwise, the Mirror may be damaged.

5.4.10. POLARIZER ADJUSTMENT

Purpose:

To set the polarizer in the proper position.

Symptom of Misadjustment:

The picture will become bluish or reddish or greenish.

TP	ADJ.	INPUT
/	POLARIZER RED POLARIZER GREEN POLARIZER BLUE	(RGB Input Connector) BLACK SIGNAL (0 %)
EQUIPMENT		SPECIFICATION
TEST PATTERN SIGNAL		Refer to Description below

▀ **POLARIZER RED ADJUSTMENT**

1. Supply Black Signal (0 %) and project on the screen.
2. Loosen a Screw (A) of Polarizer Red Unit.
3. Move the Polarizer Red Unit to the right and left so that the whole screen becomes the blackest possible value, and then tighten a Screw (A).

▀ **POLARIZER GREEN ADJUSTMENT**


1. Supply Black Signal (0 %) and project on the screen.
2. Loosen a Screw (B) of Polarizer Green Unit.
3. Move the Polarizer Green Unit to the right and left so that the whole screen becomes the blackest possible value, and then tighten a Screw (B).

▀ **POLARIZER BLUE ADJUSTMENT**

1. Supply Black Signal (0 %) and project on the screen.
2. Loosen a Screw (C) of Polarizer Blue Unit.

3. Move the Polarizer Blue Unit to the right and left so that the whole screen becomes the blackest possible value, and then tighten a Screw (C).

Fig. 5-4-17

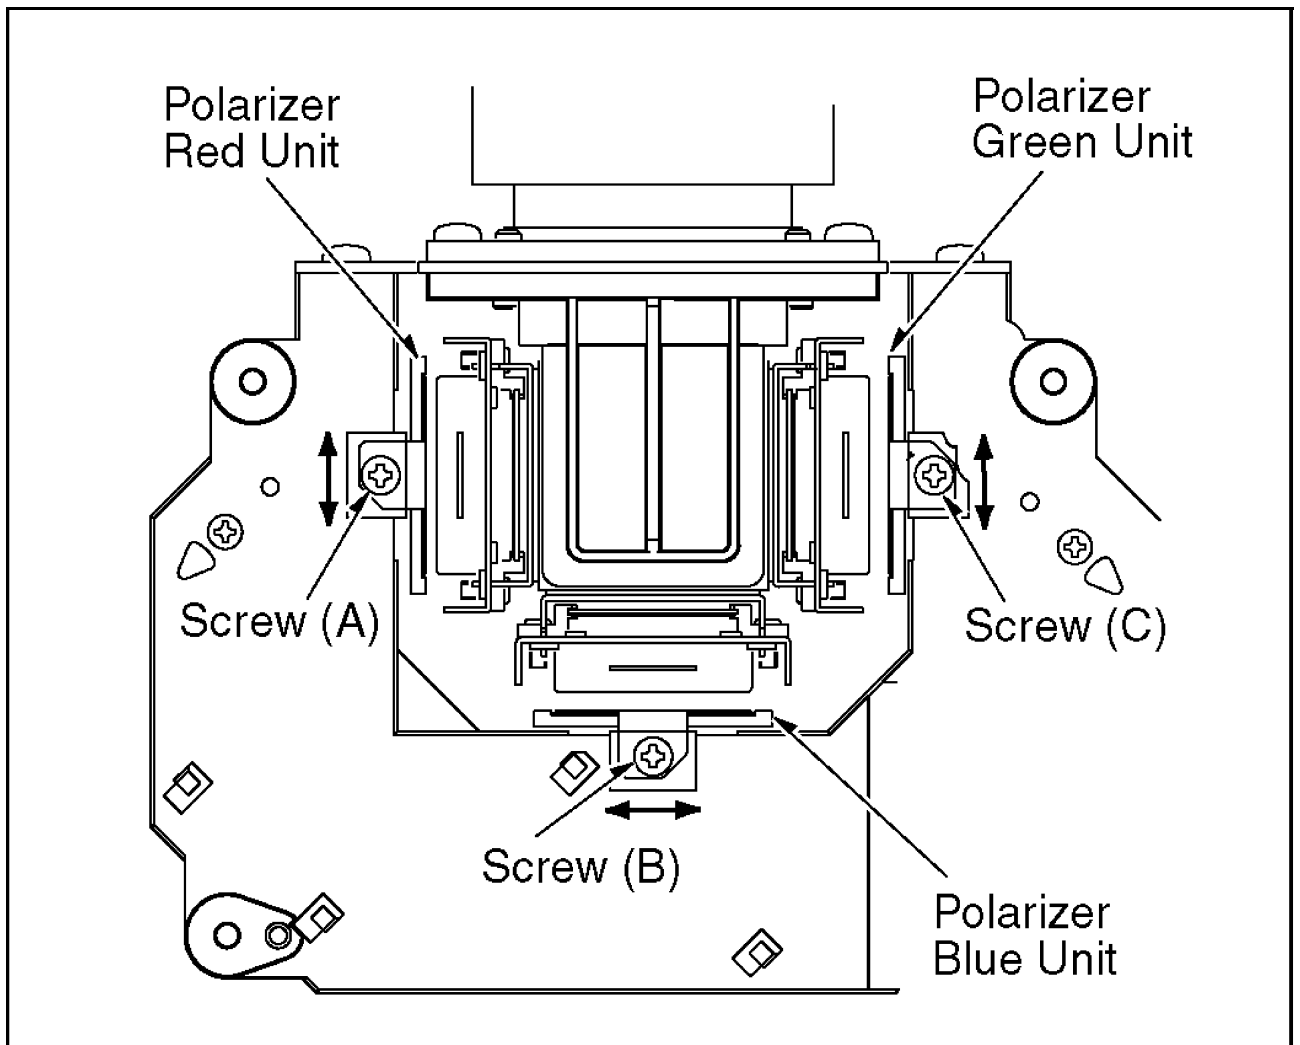

5.4.11. DUCT FAN SPEED ADJUSTMENT

Purpose:

To set the optimum turn speed of the Duct Fan.

Symptom of Misadjustment:

Temperature of the LCD projector becomes too high or sound of the Duct Fan becomes loud.

TP	ADJ.	INPUT
TP1961 TP1907 (GND)		
EQUIPMENT		SPECIFICATION
DVM (DIGITAL VOLT METER)		8.0 V ± 0.05 V DC

Note:

TP1961, TP1907: MAIN C.B.A.

1. Connect the DVM (Digital Volt Meter) to TP1961.
2. Press ▲ or ▼ or MENU button on the remote control to select “FAN1/2 SPEED”.
3. Press ◀ or ▶ button so that the voltage shown in the display of DVM is 8.0 V ± 0.05 V DC.

5.4.12. POER FAN AND LAMP FAN SPEED ADJUSTMENT

Purpose:

To set the optimum turn speed of the Power Fan and Lamp Fan.

Symptom of Misadjustment:

Temperature of the LCD projector becomes too high or sound of the Power Fan and Lamp Fan becomes loud.

TP	ADJ.	INPUT
TP1962 TP1907 (GND)		
EQUIPMENT		SPECIFICATION
DVM (DIGITAL VOLT METER)		8.0 V \pm 0.05 V DC

Note:

TP1962, TP1907: MAIN C.B.A.

1. Connect the DVM (Digital Volt Meter) to TP1962.
2. Press ▲ or ▼ button on the remote control to select "FAN3/4 SPEED".
3. Press ◀ or ▶ button so that the voltage shown in the display of DVM is 8.0 V \pm 0.05 V DC.

Note:

After completing adjustments, press the "MENU " button to release from "LCD/FAN ADJUST" mode. (Adjustment data is memorized in EEPROM IC (IC2006) by pressing "MENU " button.)Otherwise, adjustment data 5.4.11. and 5.4.12. will be cancelled.

6. BLOCK DAIGRAM




7. TROUBLESHOOTING HINTS

Status Code Display Indications

Following Status Code will be displayed in the STATUS CODE display.

**STATUS CODE
Display**

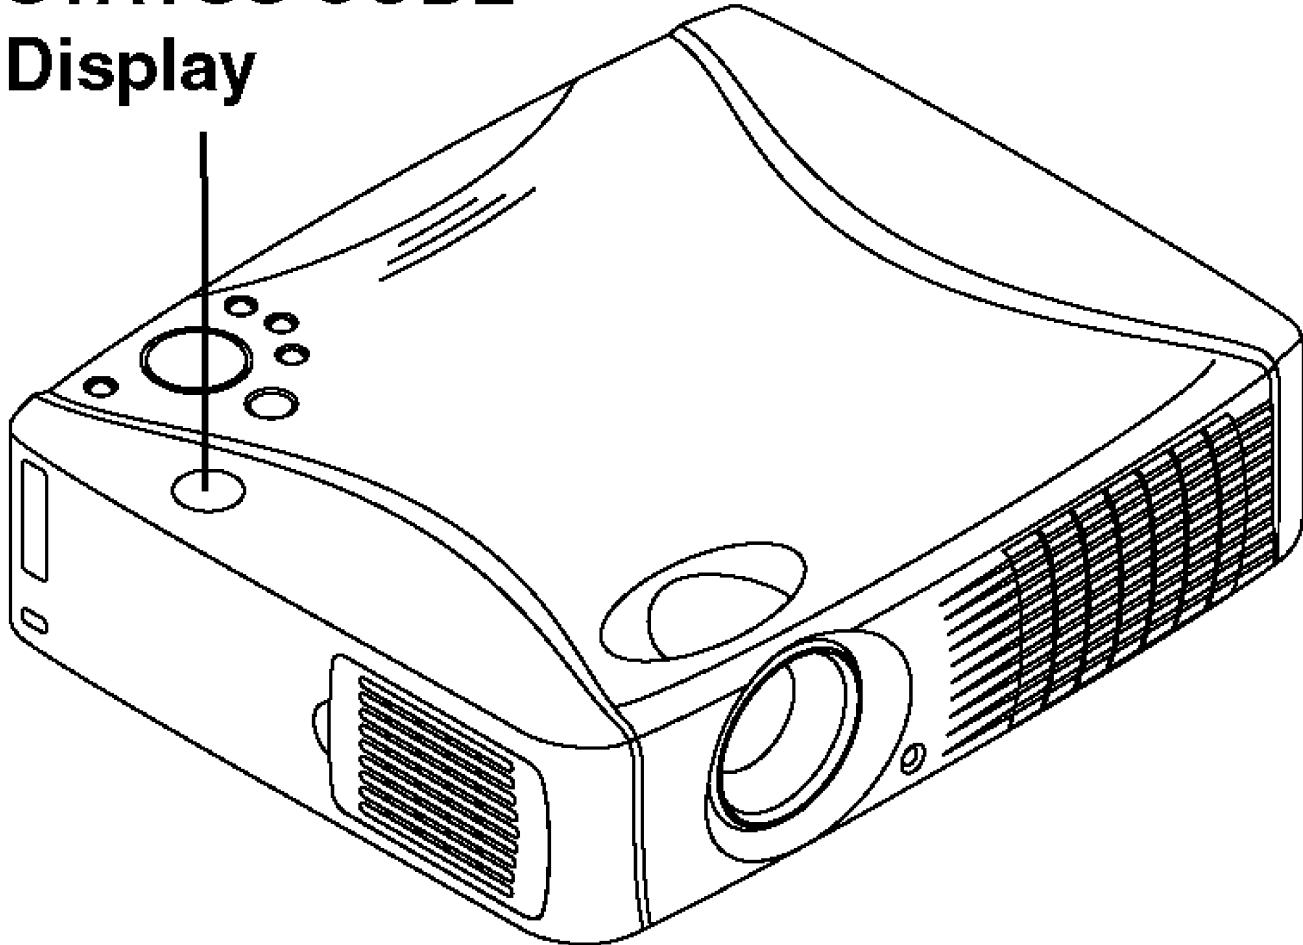


STATUS CODE	Symptom	Problem	Possible Solution
A-n		<ul style="list-style-type: none"> The surrounding temperature of the place of use may be too low. 	<ul style="list-style-type: none"> Relocate projector to a proper location. Place projector so that surrounding temperature is between 0 °C (32 °F) and 40 °C (104 °F) and the humidity is between 10 % and 80 % (with no condensation).
A-0		<ul style="list-style-type: none"> Clogged air filter. Blocked air intake. The surrounding temperature of the place of use may be too high. 	<ul style="list-style-type: none"> Clean the filter. Relocate projector to a proper location. Place projector so that surrounding temperature is between 0 °C (32 °F) and 40 °C (104 °F) and the humidity is between 10 % and 80 % (with no condensation).
L-n	Lamp does not light up.	<ul style="list-style-type: none"> There is the possibility that Lamp is burned-out. 	<ul style="list-style-type: none"> Wait until the Lamp Unit is cooled off (approx. 5 minutes) and try to turn the power back on. If this code appears, try above again and again. If this code appears continuously more than 5 or 6 times, replace the Lamp Unit. If this code appears again after replacement of the Lamp Unit, replace the Main Power C.B.A. and Ballast C.B.A.
P-2		<ul style="list-style-type: none"> Lamp Voltage is not correct. 	<ul style="list-style-type: none"> Wait until the Lamp Unit has cooled off (approx. 5 minutes) and try to turn the power back on. Replace the Lamp Unit.
P-3	Abnormally high internal temperature.	<ul style="list-style-type: none"> Abnormal temperature rise. 	<ul style="list-style-type: none"> Wait until the Lamp Unit has cooled off (approx. 5 minutes) and try to turn the power back on. Replace the Main Power C.B.A. and Ballast C.B.A.
P-4		<ul style="list-style-type: none"> Other cause. 	
L-1	Lamp operation time is over 1900 hours.	<ul style="list-style-type: none"> It is nearly time to replace the Lamp Unit. 	<ul style="list-style-type: none"> Replace the Lamp unit.
L-0	Lamp operation time is over 2000 hours.	<ul style="list-style-type: none"> The Lamp Unit must be replaced. 	
C-d	Forced cooling fan operating to expedite lamp replacement.	_____	_____

8. SCHEMATIC DIAGRAMS

8.1. SCHEMATIC DIAGRAM NOTES

1. Important safety notice

Components identified by the sign  have special characteristics important for safety. When replacing any of these components. Use only the specified parts.

2. Do not use the part number shown on this drawing for ordering.

The correct part number is shown in the parts list, and may be slightly different or amended since this drawing was prepared.

3. Use only original replacement parts:

To maintain original function and reliability of repaired units, use only original replacement parts which are listed with their part numbers in the parts list section of the service manual.

4. Parts different in shape or size may be used.

However, only interchangeable parts will be supplied as service replacement parts.

5. The part number shown on this drawing is only main part number, except for safety parts. Be sure to make your orders of replacement parts according to the parts list.

6. The Schematic Diagram of Main Power C.B.A., Ballast C.B.A. and Inlet C.B.A. is not included in this Service Manual.

Because, these Circuit Board Assemblies are supplied as a unit (C.B.A.) only.

8.2. INTERCONNECTION SCHEMATIC DIAGRAM



8.3. DIGITAL SECTION SCHEMATIC DIAGRAM



8.4. LCD DRIVE SECTION SCHEMATIC DIAGRAM



8.5. RGB/VIDEO SECTION SCHEMATIC DIAGRAM



8.6. POWER/AUDIO SECTION SCHEMATIC DIAGRAM



8.7. AD/DA/TG SECTION SCHEMATIC DIAGRAM



8.8. IO/ROM SECTION SCHEMATIC DIAGRAM



8.9. OPERATION SCHEMATIC DIAGRAM (LSEP0A34A1)



8.10. THERMISTOR SCHEMATIC DIAGRAM (LSEP0A35A1)



9. VOLTAGE CHART

9.1. DIGITAL SECTION VOLTAGE CHART



9.2. LCD DRIVE SECTION VOLTAGE CHART



9.3. RGB/VIDEO SECTION VOLTAGE CHART



9.4. POWER/AUDIO SECTION VOLTAGE CHART



9.5. AD/DA/TG SECTION VOLTAGE CHART



9.6. IO/ROM SECTION VOLTAGE CHART




10. WAVEFORM



11. CIRCUIT BOARDS

11.1. CIRCUIT BOARDS NOTES

1. Important safety notice

Components identified by the sign  have special characteristics important for safety. When replacing any of these components. Use only the specified parts.

2. Do not use the part number shown on this drawing for ordering.

The correct part number is shown in the parts list, and may be slightly different or amended since this drawing was prepared.

3. Use only original replacement parts:

To maintain original function and reliability of repaired units, use only original replacement parts which are listed with their part numbers in the parts list section of the service manual.

4. Parts different in shape or size may be used.

However, only interchangeable parts will be supplied as service replacement parts.

5. The Circuit Board of Main Power C.B.A., Ballast C.B.A. and Inlet C.B.A. is not included in this Service Manual.

Because, these Circuit Board Assemblies are supplied as a unit (C.B.A.) only.

11.2. MAIN C.B.A. (LSEP3030A1: PT-LC50U/E, LSEP3030C1: PT-LC150)



11.3. OPERATION C.B.A. (LESP0A34A1)



11.4. THERMISTOR C.B.A. (LSEP0A35A1)






13. REPLACEMENT PARTS LISTS

BEFORE REPLACING PARTS, READ THE FOLLOWING:

13.1. REPLACEMENT NOTES

13.1.1. General Notes

1. Use only original replacement parts:
To maintain original function and reliability of repaired units, use only original replacement parts which are listed with their part numbers in the parts list.
2. IMPORTANT SAFETY NOTICE
Components identified by the sign  have special characteristics important for safety. When replacing any of these components, use only the specified parts.
3. SPECIAL NOTE
All integrated circuits and many other semiconductor devices are electrostatically sensitive and therefore require the special handling techniques described under the "ELECTROSTATICALLY SENSITIVE (ES) DEVICES" section of this service manual.
4. Parts with no Ref. No. in "EXPLODED VIEWS" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.
5. Parts different in shape or size may be used. However, only interchangeable parts will be supplied as service replacement parts.
6. Parts with mark "MKA" in the Remarks column are supplied from MKA. Others are supplied from MKE.

7. Item numbers with capital letter E (Example: E10, E20,...) in the Ref. No. column are shown in the exploded views.



13.1.2. Mechanical Replacement Notes




1. Section No. of parts shown in Exploded Views are indicated in the Remarks column.
2. The Infrared Remote Control Unit (Ref. No. 117) replacement part is available as a complete assembly unit only.

13.1.3. Electrical Replacement Notes

1. Unless otherwise specified;
All resistors are in Ω , 1/4 W, carbon, K = 1 000 Ω ,
M = 1 000 k1 /2 .
All capacitors are in μF , P = $\mu\mu\text{F}$.
All coils are in μH , M = 1 000 μH .
2. Abbreviation
RTL: Retention Time Limited
This indicates that the retention time is limited for this item. After the discontinuation of this item in production, it will no longer be available.
NR: Non Repairable Board Ass'y
MGF CHIP: Metal Glaze Film Chip
C CHIP: Ceramic Chip
COMPLX CMP: Complex Component
W FLMPRF: Wirewound Flameproof
C.B.A.: Circuit Board Assembly
P.C.B.: Printed Circuit Board
E.S.D.: Electrostatically Sensitive Devices
3. SERVICE OF CHIP PARTS
When servicing chip parts, please use a soldering iron of less than 30 W. Refer to "IC, TRANSISTOR AND CHIP PART INFORMATION" page.
4. When replacing 0 resistor, a wire can be substituted for it.
5. C.B.A. replacement note:
Following C.B.A.s are supplied as a Unit(C.B.A.) only. Please note that individual parts on C.B.A. are NOT supplied.
 - E11 Sync Control C.B.A.
 - E21 Main Power C.B.A.
 - E22 Ballast C.B.A.
 - E30 Inlet C.B.A.

13.2. MECHANICAL REPLACEMENT PARTS LIST

Ref. No.	Part No.	Part Name & Description	Remarks
		MECHANICAL REPLACEMENT PARTS	
1	LSYK0554	BOTTOM CASE UNIT,ABS RESIN	1
2	LSYF0468	LAMP COVER UNIT	1
3	LSYF0475	LENS CAP UNIT	1
4	LSXY0256	BALLAST HOLDER UNIT	1
5	LSMA0490	JOINT PLATE R,STAINLESS	1
6	LSMA0489	JOINT PLATE L,STAINLESS	1
7	LSGK0076	JACK DOOR	1
8	LSKF0356	FILTER COVER	1
9	LSMF0058	FILTER	1
10	LSQL0980	CAUTION LABEL TOP	1
11	LSQL1042	CAUTION LABEL SIDE	1
12	LSQL1045	CAUTION LABEL BOTTOM-A	1 PT-LC50U/PT-LC50E
12	LSQL1046	CAUTION LABEL BOTTOM-A	1 PT-LC150
13	LSQL1138	CAUTION LABEL BOTTOM-B	1 PT-LC50U/PT-LC50E
13	LSQL1043	CAUTION LABEL BOTTOM-B	1 PT-LC150
14	LSQL1039	CAUTION LABEL BOTTOM-C	1 PT-LC50U
14	LSQL1040	CAUTION LABEL BOTTOM-C	1 PT-LC50E
15	LSQL0903	LABEL	 1 PT-LC150
16	LSSC0460	BARRIER JOINT TAPE	1
17	LSSC0462	SHIELD SHEET B,POLYESTER	2
18	LSMZ0303	FAN BARRIER	2
19	LSMA0516	SUPPORT PLATE,STAINLESS	4
20	LSMX0107	SPACER	4
21	LSMG0083	FAN PIECE	2
22	LSYF0476	SPEAKER UNIT	2
23	VRFS0014	POWER FAN	 2
24	LSMA0493	MAIN GROUNDING PLATE STEEL	2
25	LSXY0251	BARRIER UNIT	2
26	LSMZ0279	BALLAST BARRIER-A	2
27	LSMC0106	SPRING PLATE,COPPER	2
28	LSSC0458	FAN SHIELD NET,STAINLESS	2
29	VMFS0213	SHEET,NYLON+RAYON	2 MKA
30	LSSC0461	SHIELD SHEET A,POLYESTER	2
31	LSYF0470	TOP COVER UNIT	4
32	LSXY0259	REMOTE CONTROL HOLDER UNIT	4
33	LSXU0007	OPERATION BUTTON A UNIT	4
34	LSGU0207	OPERATION BUTTON B	4
35	LSGU0208	OPERATION BUTTON C	4
36	LSGT0054	EJECT KNOB	4
37	LSMB0250	SPRING	4
38	LSGL0349	SEGMENT PIECE	4
39	LSJW0021	FLEXIBLE FLAT CABLEW/OUTPLUG DC 3.3V	4
40	LSYF0474	FRONT COVER UNIT	2
41	LSMP0293	FRONT COVER	5
42	LSEM0038	LAMP FAN UNIT	 5
43	LSMZ0276	FRONT BARRIER L	5
44	LSMZ0308	FRONT BARRIER R	5
45	LSGL0350	INFRARED PANEL FRONT PLASTIC	5
46	LSMF0061	FRONT FILTER	5

Ref. No.	Part No.	Part Name & Description	Remarks
47	LSMZ0281	FILTER BARRIER	5
51	LSXA0348	OPTICAL BLOCK UNIT	3
52	LSXA0341	POLARIZER RED A UNIT	3
53	LSXA0342	POLARIZER GREEN A UNIT	3
54	LSXA0343	POLARIZER BLUE A UNIT	3
55	LSXA0361	LAMP HOUSE UNIT	3
56	LSRF0012	FLAT FAN MOTOR,DC5V	 3
57	LSMA0512	LAMP DUCT	3
58	LSMA0517	FUSE HOLDER	3
59	LSXA0370	DUCT RED/GREEN UNIT	3
60	LSXA0371	DUCT BLUE UNIT	3
61	LSDL0112	PROJECTION LENS	3
62	LSMA0472	OPTICAL PLATE,STAINLESS	3
63	LSVQ0027	PRISM/LCD UNIT	3
64	LSVQ0032	POLARIZER RED B UNIT	3
65	LSVQ0034	POLARIZER BLUE B UNIT	3
66	LSVQ0033	POLARIZER GREEN B UNIT	3
71	LSMF0069	LAMP FAN CUSHION URETHANEFORM	3
72	LSMT0066	CUSHION,POLYESTER	5
73	LSSC0453	FRONT TAPE	5
74	LSMT0065	CUSHION,POLYESTER	5
75	LSSC0488	BARRIER JOINT TAPE	5
76	LSMZ0309	ANGLE BARRIER	5
81	LSMA0495	FAN PLATE,STEEL	3
82	LSMF0056	SIDE FILTER	3
83	LSJA0345	CONNECTOR CABLE W/PLUG DC 3.3V	3
84	LSJA0346	FILTER SWITCH/TEMPERATURE FUSE UNIT	3
93	VMFS0129	SHEET,NYLON-RAYON	1,3
101	LSPG0988	PACKING CASE,PAPER	6 PT-LC50U
101	LSPG0989	PACKING CASE,PAPER	6 PT-LC50E
101	LSPG0990	PACKING CASE,PAPER	6 PT-LC150
102	LSPN0205	RIGHT CUSHION,STYROFOAM	6
103	LSPN0204	LEFT CUSHION,STYROFOAM	6
105	VPFS0054	BAG,POLYETHLENE	6
108	LSJA0308	POWER CORD W/PLUG,AC 125V	 6 PT-LC50U
	OR VJAS0179	POWER CORD W/PLUG,125V	 6 PT-LC50U
109	VJAS0188	POWER CORD W/PLUG,250V	 6 PT-LC50E
110	VJAS0189	POWER CORD W/PLUG,250V	 6 PT-LC50E
111	LSJA0239	VGA CABLE W/PLUG,DC 5V	6
114	LSJA0074	VIDEO CABLE W/PLUG,DC 5V	6
115	LSPN0207	ACCESSORY PAD S	6
116	LSJA0240	AUDIO CABLE W/PLUG,0.9VPP	6
117	LSSQ0275	CARD INFRARED REMOTE CONTROL UNIT	6
118	LSPN0208	ACCESSORY PAD L	6
121	LSFC0015	CARRYING BAG,NYLON	6
122	LSYC0162-A	SWIVEL STAND UNIT	6
123	LSQF0324	FAN BAG	6 PT-LC50U
123	LSQF0325	FAN BAG	6 PT-LC50E/PT-LC150
128	LSJA0210	POWER CORD W/PLUG	 6 PT-LC150
138	LSFT0243	INSTRUCTION BOOK CD-ROM	6
139	LSQT0324A	INSTRUCTION BOOK	6 PT-LC50U
139	LSQT0325A	INSTRUCTION BOOK	6 PT-LC50E/PT-LC150
454	XSN3+6FZ	SCREW,STEEL	3
472	XYN3+K6FZ	SCREW W/WASHER,STEEL	3
477	XYN3+K10FZ	SCREW,STEEL	3

Ref. No.	Part No.	Part Name & Description	Remarks
478	XTN3+8GFC	TAPPING SCREW,STEEL	1
479	XTW3+8PFR	SCREW,STEEL	2
480	XYC2+CG6	SCREW W/WASHER	4
481	XTB26+7GFN	TAPPING SCREW,STEEL	1
482	XTB26+7GFR	TAPPING SCREW,STEEL	2,4
483	XTB2+4G	TAPPING SCREW,STEEL	5
484	XTN26+8G	TAPPING SCREW,STEEL	3
485	XYN3+K10FN	SCREW,STEEL	1
486	XYN25+K6	SCREW,STEEL	3
487	XYN3+K8FZ	SCREW,STEEL	3
488	XYN3+F8FN	SCREW W/WASHER	1
489	LSNW0032	WASHER,STEEL	4
490	LSHD0062	SCREW,STEEL	2
491	XYN3+K30	SCREW,STEEL	3
492	XTN2+8G	SCREW,STEEL	3
493	XSB3+4	SCREW,STEEL	3
701	LSKF0336	JACK COVER	2
702	LSSC0433	JACK PLATE,STEEL	2
703	PNA4611M00YA	INFRARED RECEIVER UNIT	2 MKA
704	VMFS0114	CUSHION,RUBBER	2
705	VMTS0035	CUSHION,RUBBER	2
706	LSMZ0301	BARRIER	2
707	LSSC0451	JACK TAPE	2
E10	LSEP3030A1	MAIN C.B.A.	2 PT-LC50U/PT-LC50E
E10	LSEP3030C1	MAIN C.B.A.	2 PT-LC150
E11	LSEP0A45A1	SYNC SELECTOR C.B.A. NR	2
E20	LSEB1061A1	POWER C.B.A.	2 RTL
E21	LSEP1061A1	MAIN POWER C.B.A. NR	2
E22	LSEP1062A1	BALLAST C.B.A. NR	2
E30	LSEP1063A1	INLET C.B.A. NR	2
E40	LSEP0A34A1	OPERATION C.B.A.	4 RTL
E50	LSEP0A35A1	THERMISTOR C.B.A.	3 RTL
		SERVICE FIXTURES AND TOOLS	
	LSUA0010	EXTENSION CABLE-1	
	LSUA0032	EXTENSION CABLE-2	

13.3. ELECTRICAL REPLACEMENT PARTS LIST

Ref. No.	Part No.	Part Name & Description	Remarks
		PRINTED CIRCUIT BOARD ASSEMBLY	
E10	LSEP3030A1	MAIN C.B.A.	E.S.D. PT-LC50U/PT-LC50E
E10	LSEP3030C1	MAIN C.B.A.	E.S.D. PT-LC150
E11	LSEP0A45A1	SYNC SELECTOR C.B.A. NR	
E20	LSEB1061A1	POWER C.B.A.	RTL
E21	LSEP1061A1	MAIN POWER C.B.A. NR	
E22	LSEP1062A1	BALLAST C.B.A. NR	
E30	LSEP1063A1	INLET C.B.A. NR	
E40	LSEP0A34A1	OPERATION C.B.A.	RTL
E50	LSEP0A35A1	THERMISTOR C.B.A.	RTL
		MAIN C.B.A.	
		INTEGRATED CIRCUITS	
IC1901	PQ20VZ1U	IC, LINEAR	
IC1902	AN78L09M-E1	IC, LINEAR	
IC1903	HAT2043R-EL	IC, LINEAR	
IC1904	PQ05DZ1U	IC, LINEAR	
IC1961	PQ20VZ1U	IC, LINEAR	
IC1962	PQ20VZ1U	IC, LINEAR	
IC1963	PQ20VZ1U	IC, LINEAR	
IC1964	PQ05DZ1U	IC, LINEAR	
IC2003	LTC1694CS5	IC, LOGIC	
IC2004	PQ2TZ15U	IC, LINEAR	
IC2005	L1087DTX-3.3	IC, LINEAR	
IC2006	AT24C16NSI27	IC, 16K EEP ROM	E.S.D.
	OR S-24C16AFJA	IC, 16K EEP ROM	E.S.D.
IC2007	AD9884AKS140	IC, LINEAR	
IC2008	SAA7114H	IC, LOGIC	
IC2009	UPD4721GS	IC, RS232C DRIVER	E.S.D.
IC2011	XC9572XL	IC, CMOS STANDARD LOGIC	E.S.D.
IC2012	PW164-10RK	IC, 16BIT MICROCONTROLLER	E.S.D.
IC2013	MBM29LV850S1	IC, 8M FLASH MEMORY	E.S.D.
IC2014	MB40C958VPFV	IC, CMOS STANDARD LOGIC	E.S.D.
IC2015	UPD65945-071	IC, CMOS STANDARD LOGIC	E.S.D.
IC2016	DS1708SESA	IC, LINEAR	
IC2019	M62334FP	IC, CMOS STANDARD LOGIC	E.S.D.
IC2020	ICS601G01TEF	IC, LOGIC	E.S.D.
IC2901	74VHC123AMTX	IC, CMOS STANDARD LOGIC	E.S.D.
IC2902	SN7AH2G14HCR	IC, CMOS STANDARD LOGIC	E.S.D.
	OR TC7WH14FU	IC, CMOS STADNARD LOGIC	E.S.D.
IC2903	TC7WH74FU	IC, CMOS STANDARD LOGIC	E.S.D.
IC2904	SN74LVC125PW	IC, CMOS STANDARD LOGIC	E.S.D.
IC3001	AT24C21	IC, 2K EEP ROM DDC MEMORY	E.S.D.
IC3002	SN74AHCT32PW	IC, CMOS STANDARD LOGIC	E.S.D.
	OR TC74VHCT32FT	IC, CMOS STANDARD LOGIC	E.S.D.
IC3003	M52347FP	IC, LINEAR	
IC3501	BU4053BCF	IC, CMOS STANDARD LOGIC	E.S.D.
IC3502	BU4053BCF	IC, CMOS STANDARD LOGIC	E.S.D.
IC3503	M62339FP	IC, LINEAR	
IC3504	ET6040S0A	IC, LINEAR	
IC3505	ET6040S0A	IC, LINEAR	
IC3506	ET6040S0A	IC, LINEAR	
IC3507	LC4105V-TLM	IC, CMOS STANDARD LOGIC	E.S.D.
IC3508	LC4105V-TLM	IC, CMOS STANDARD LOGIC	E.S.D.

Ref. No.	Part No.	Part Name & Description	Remarks
IC4001	AN7512SH-E1V	IC, LINEAR	
IC4002	M62338FP	IC, LINEAR	
IC5001	BA7655AF	IC, LINEAR	
IC5002	BA7657F-E2	IC, LINEAR	
IC5003	74VHC123AMTX	IC, CMOS STANDARD LOGIC	E.S.D.
		TRANSISTORS	
Q1901	DTC114EU	CHIP	
	OR MUN5211T1	TRANSISTOR SI PNP CHIP	
	OR UN5211	CHIP	
Q1902	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q1903	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q1904	DTA114EU	CHIP	
	OR MUN5111T1	CHIP	
	OR UN5111	CHIP	
Q2001	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q2002	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q2003	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q2004	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q2005	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q2006	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q2007	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q2008	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q2009	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q2010	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q2011	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q3001	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q3002	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q3003	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q3004	2SC4081T106R	CHIP	
	OR 2SD1819A	CHIP	

Ref. No.	Part No.	Part Name & Description	Remarks
Q3005	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q3006	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q3007	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q3008	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q3009	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q3010	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q3011	DTC144EU	CHIP	
	OR MUN5213	CHIP	
	OR UN5213	CHIP	
Q3012	2SC4081T106R	CHIP	
	OR 2SD1819A	CHIP	
Q3013	2SC4081T106R	CHIP	
	OR 2SD1819A	CHIP	
Q3014	2SC4081T106R	CHIP	
	OR 2SD1819A	CHIP	
Q3015	2SC4081T106R	CHIP	
	OR 2SD1819A	CHIP	
Q3016	2SC4081T106R	CHIP	
	OR 2SD1819A	CHIP	
Q3501	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q3502	2SB1218A(R)	CHIP	
Q3503	2SC2412K1	CHIP	
	OR 2SD601(R S)	CHIP	
Q3504	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q3505	2SA1037K146R	CHIP	
	OR 2SB709A(R S)	CHIP	
Q3506	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q3507	2SB1218A(R)	CHIP	
Q3508	2SC2412K1	CHIP	
	OR 2SD601(R S)	CHIP	
Q3509	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q3510	2SA1037K146R	CHIP	
	OR 2SB709A(R S)	CHIP	
Q3511	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q3512	2SB1218A(R)	CHIP	
Q3513	2SC2412K1	CHIP	
	OR 2SD601(R S)	CHIP	
Q3514	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	

Ref. No.	Part No.	Part Name & Description	Remarks
Q3515	2SA1037K146R	CHIP	
	OR 2SB709A(R S)	CHIP	
Q3516	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q3517	2SD1819A(R,S)	CHIP	
Q3518	2SD1819A(R,S)	CHIP	
Q3519	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q3520	2SD1819A(R,S)	CHIP	
Q3521	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q3522	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q3523	2SD1819A(R,S)	CHIP	
Q3524	2SD1819A(R,S)	CHIP	
Q3525	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q3526	2SD1819A(R,S)	CHIP	
Q3527	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q3528	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q3529	2SD1819A(R,S)	CHIP	
Q3530	2SD1819A(R,S)	CHIP	
Q3531	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q3532	2SD1819A(R,S)	CHIP	
Q3533	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q4001	2SC4081T106R	CHIP	
	OR 2SD1819A	CHIP	
Q4002	2SC4081T106R	CHIP	
	OR 2SD1819A	CHIP	
Q4003	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q4004	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q4005	2SD1819A(R)	CHIP	
Q4007	2SD1819A(R)	CHIP	
Q4008	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q4010	2SD1119(R)	CHIP	
Q5001	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5002	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q5003	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q5004	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5005	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5006	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5007	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5008	2SC4965YV-TL	CHIP	

Ref. No.	Part No.	Part Name & Description	Remarks
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q5009	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q5010	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q5011	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q5012	2SA1576A106R	CHIP	
	OR 2SB1218A	CHIP	
Q5013	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q5014	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5015	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q5016	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q5017	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q5018	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q5019	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q5020	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5021	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q5022	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q5023	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q5024	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5025	2SA1576A106R	CHIP	
	OR 2SB1218ARS	CHIP	
Q5026	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5027	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q5028	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q5029	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q5030	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5031	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5032	2SC4965YV-TL	CHIP	

Ref. No.	Part No.	Part Name & Description	Remarks
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q5033	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5034	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5035	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
Q5036	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5037	2SC4081T106R	CHIP	
	OR 2SD1819A(R S)	CHIP	
Q5038	2SC4965YV-TL	CHIP	
	OR 2SC558000L	CHIP	
	OR 2SC563200L	CHIP	
		DIODES	
D1961	MA111	CHIP	
	OR 1SS355TE-17	CHIP	
D1962	DAN202UT	CHIP	
	OR MA141WK	CHIP	
	OR MA142WK	CHIP	
D1963	MA111	CHIP	
D1964	SFPL-62V	CHIP	
D1965	ERJ8GEY0R00V	MGF CHIP 1/8W 0	
D2001	MA8039-L	ZENER 3.9V	
D2002	MA8039-L	ZENER 3.9V	
D2003	RD13S	ZENER CHIP 13V	
D2004	RD13S	ZENER CHIP 13V	
D2005	NNCD12F-T1B	ZENER CHIP 12V	
D2006	MA111	CHIP	
	OR 1SS355TE-17	CHIP	
D2007	MA111	CHIP	
	OR 1SS355TE-17	CHIP	
D2008	MA111	CHIP	
	OR 1SS355TE-17	CHIP	
D2009	MA111	CHIP	
	OR 1SS355TE-17	CHIP	
D3001	DF5A6.8F	ZENER CHIP 6.8V	
	OR NNCD6.2G-T1	ZENER CHIP 6.2V	
D3501	MA111	CHIP	
	OR 1SS355TE-17	CHIP	
D3502	MA111	CHIP	
	OR 1SS355TE-17	CHIP	
D3503	MA111	CHIP	
	OR 1SS355TE-17	CHIP	
D3504	MA111	CHIP	
	OR 1SS355TE-17	CHIP	
D3505	MA111	CHIP	
	OR 1SS355TE-17	CHIP	
D3506	MA111	CHIP	
	OR 1SS355TE-17	CHIP	
D4001	DF3A6.8FE	ZENER CHIP 6.8V	
	OR MAZT068H0L	ZENER CHIP 6.8V	
D4002	DF3A6.8FE	ZENER CHIP 6.8V	

Ref. No.	Part No.	Part Name & Description	Remarks
	OR MAZT068H0L	ZENER CHIP 6.8V	
D4006	MA8051-M	ZENER CHIP 5.1V	
D4008	MA111	CHIP	
	OR 1SS355TE-17	CHIP	
D4009	MA111	CHIP	
	OR 1SS355TE-17	CHIP	
D5001	RD6.2S	ZENER CHIP 6.2V	
D5002	DF3A6.8FE	ZENER CHIP 6.8V	
	OR MAZT068H0L	ZENER CHIP 6.8V	
D5003	DF3A6.8FE	ZENER CHIP 6.8V	
	OR MAZT068H0L	ZENER CHIP 6.8V	
D5004	DF3A6.8FE	ZENER CHIP 6.8V	
	OR MAZT068H0L	ZENER CHIP 6.8V	
		RESISTORS	
R1903	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R1904	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R1905	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R1906	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	
R1907	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	
R1912	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R1913	ERJ8GEYJ222V	MGF CHIP 1/8W 2.2K	
R1914	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R1915	ERJ3GEYJ101V	MGF CHIP 1/16W 100	
R1916	ERJ3GEYJ101V	MGF CHIP 1/16W 100	
R1917	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R1919	VRJSD3D1002	MGF CHIP 1/16W 10K	
R1920	VRJSD3D1001	MGF CHIP 1/16W 1K	
R1921	ERJ3GEYJ122V	MGF CHIP 1/16W 1.2K	
R1922	ERJ14YJ220H	MGF CHIP 22	
R1961	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R1963	VRJSD3D6801	MGF CHIP 1/16W 6.8K	
R1964	VRJSD3D1001	MGF CHIP 1/16W 1K	
R1965	VRJSD3D3301	MGF CHIP 1/16W 3.3K	
R1966	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R1968	VRJSD3D6801	MGF CHIP 1/16W 6.8K	
R1969	VRJSD3D1001	MGF CHIP 1/16W 1K	
R1970	VRJSD3D3301	MGF CHIP 1/16W 3.3K	
R1971	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R1973	VRJSD3D4701	MGF CHIP 1/16W 4.7K	
R1974	VRJSD3D1001	MGF CHIP 1/16W 1K	
R1976	ERJ3GEYJ682V	MGF CHIP 1/16W 6.8K	
R1977	ERJ3GEYJ682V	MGF CHIP 1/16W 6.8K	
R1978	ERJ3GEYJ682V	MGF CHIP 1/16W 6.8K	
R1979	ERJ3GEYJ822V	MGF CHIP 1/16W 8.2K	
R1980	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R1981	ERJ3GEYJ682V	MGF CHIP 1/16W 6.8K	
R1982	ERJ8GEY0R00V	MGF CHIP 1/8W 0	
R2003	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R2004	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2005	ERJ2GEJ221X	MGF CHIP 1/16W 220	
R2006	ERJ2GEJ221X	MGF CHIP 1/16W 220	
R2007	ERJ2GEJ221X	MGF CHIP 1/16W 220	
R2009	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2010	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2011	ERJ2GE0R00X	MGF CHIP 1/16W 0	

Ref. No.	Part No.	Part Name & Description	Remarks
R2013	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2014	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2015	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2016	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2017	ERJ3GEYJ560V	MGF CHIP 1/16W 56	
R2018	ERJ3GEYJ560V	MGF CHIP 1/16W 56	
R2019	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2020	ERJ2GEJ332X	MGF CHIP 1/16W 3.3K	
R2021	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2022	ERJ3GEYJ151V	MGF CHIP 1/16W 150	
R2023	ERJ3GEYJ151V	MGF CHIP 1/16W 150	
R2024	ERJ2GEJ105X	MGF CHIP 1/16W 1M	
R2026	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2027	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R2028	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R2030	ERJ2GEJ105X	MGF CHIP 1/16W 1M	
R2031	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2032	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2034	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2035	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2036	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2037	ERJ2GEJ105X	MGF CHIP 1/16W 1M	
R2038	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2039	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2040	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2043	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2044	ERJ3GEYJ561V	MGF CHIP 1/16W 560	
R2045	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2046	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2047	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2048	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R2051	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2052	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2053	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2054	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2055	ERJ3GEYJ470V	MGF CHIP 1/16W 47	
R2056	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2057	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2058	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2060	ERJ2GEJ102X	MGF CHIP 1/16W 1K	
R2061	ERJ2GEJ102X	MGF CHIP 1/16W 1K	
R2062	ERJ2GEJ102X	MGF CHIP 1/16W 1K	
R2063	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R2064	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R2065	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R2067	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R2068	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R2069	ERJ2GEJ682X	MGF CHIP 1/16W 6.8K	
R2070	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2071	ERJ2GEJ102X	MGF CHIP 1/16W 1K	
R2072	ERJ2GEJ102X	MGF CHIP 1/16W 1K	
R2073	ERJ2GEJ102X	MGF CHIP 1/16W 1K	
R2074	ERJ2GEJ102X	MGF CHIP 1/16W 1K	
R2075	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R2076	ERJ2GEJ102X	MGF CHIP 1/16W 1K	
R2077	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	
R2078	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	

Ref. No.	Part No.	Part Name & Description	Remarks
R2079	ERJ2GEJ271X	MGF CHIP 1/16W 270	
R2080	ERJ2GEJ271X	MGF CHIP 1/16W 270	
R2081	ERJ2GEJ271X	MGF CHIP 1/16W 270	
R2082	ERJ2GEJ271X	MGF CHIP 1/16W 270	
R2083	ERJ2GEJ271X	MGF CHIP 1/16W 270	
R2084	ERJ2GEJ271X	MGF CHIP 1/16W 270	
R2085	ERJ3GEYJ271V	MGF CHIP 1/16W 270	
R2087	ERJ2GEJ104X	MGF CHIP 1/16W 100K	
R2088	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2089	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2090	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2091	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2092	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2093	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2094	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2095	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2096	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2097	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2098	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2099	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2102	ERJ2GEJ102X	MGF CHIP 1/16W 1K	
R2103	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2104	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2105	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2106	MNR14EABJ101	ARRAY CHIP 100	
R2107	MNR14EABJ101	ARRAY CHIP 100	
R2108	ERJ2GEJ332X	MGF CHIP 1/16W 3.3K	
R2109	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2110	ERJ3GEYJ680V	MGF CHIP 1/16W 68	
R2112	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2113	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2114	ERJ3GEYJ680V	MGF CHIP 1/16W 68	
R2115	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2116	ERJ3GEYJ122V	MGF CHIP 1/16W 1.2K	
R2117	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2118	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2122	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2123	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2124	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2125	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2126	ERJ2GEJ103X	MGF CHIP 1/16W 10K	PT-LC50U/PT-LC50E
R2127	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2128	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2130	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2131	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2133	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2134	ERJ2GEJ103X	MGF CHIP 1/16W 10K	PT-LC150
R2137	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2138	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2139	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2140	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2141	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2142	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2143	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2145	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R2146	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2147	ERJ3GEY0R00V	MGF CHIP 1/16W 0	

Ref. No.	Part No.	Part Name & Description	Remarks
R2150	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2151	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2152	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2153	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2154	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2155	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2156	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2157	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2158	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2159	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2161	ERJ2GEJ680X	MGF CHIP 1/16W 68	
R2162	ERJ2GEJ680X	MGF CHIP 1/16W 68	
R2163	ERJ2GEJ680X	MGF CHIP 1/16W 68	
R2164	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2165	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2166	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	
R2167	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2168	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	
R2169	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2171	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	
R2172	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2173	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2174	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2175	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2176	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2177	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2178	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2179	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2180	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2181	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2182	ERJ2GEJ680X	MGF CHIP 1/16W 68	
R2183	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2184	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2186	ERJ2GEJ332X	MGF CHIP 1/16W 3.3K	
R2187	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2188	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2189	MNR14EABJ470	ARRAY CHIP 1/16W 47	
R2190	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2192	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2193	ERJ2GEJ473X	MGF CHIP 1/16W 47K	
R2194	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2195	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2196	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2197	VRJSD3D3301	MGF CHIP 1/16W 3.3K	
R2198	VRJSD3D3301	MGF CHIP 1/16W 3.3K	
R2199	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2200	VRJSD3D3301	MGF CHIP 1/16W 3.3K	
R2202	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2203	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2212	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2213	ERJ2GEJ680X	MGF CHIP 1/16W 68	
R2214	ERJ2GEJ680X	MGF CHIP 1/16W 68	
R2215	ERJ2GEJ680X	MGF CHIP 1/16W 68	
R2216	VRJSD3D1001	MGF CHIP 1/16W 1K	
R2217	VRJSD3D1001	MGF CHIP 1/16W 1K	
R2218	ERJ2GEJ333X	MGF CHIP 1/16W 33K	
R2219	ERJ2GEJ333X	MGF CHIP 1/16W 33K	

Ref. No.	Part No.	Part Name & Description	Remarks
R2220	ERJ2GEJ333X	MGF CHIP 1/16W 33K	
R2221	VRJSD3D1001	MGF CHIP 1/16W 1K	
R2224	VRJSD3D1001	MGF CHIP 1/16W 1K	
R2225	ERJ2GEJ820X	MGF CHIP 1/16W 82	
R2226	VRJSD3D1001	MGF CHIP 1/16W 1K	
R2227	ERJ2GEJ820X	MGF CHIP 1/16W 82	
R2228	VRJSD3D1001	MGF CHIP 1/16W 1K	
R2229	ERJ2GEJ820X	MGF CHIP 1/16W 82	
R2230	ERJ2GEJ822X	MGF CHIP 1/16W 8.2K	
R2231	ERJ2GEJ822X	MGF CHIP 1/16W 8.2K	
R2232	ERJ2GEJ822X	MGF CHIP 1/16W 8.2K	
R2233	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	
R2234	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	
R2235	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	
R2236	ERJ2GEJ473X	MGF CHIP 1/16W 47K	
R2237	ERJ2GEJ473X	MGF CHIP 1/16W 47K	
R2238	ERJ2GEJ473X	MGF CHIP 1/16W 47K	
R2239	ERJ2GEJ102X	MGF CHIP 1/16W 1K	
R2240	ERJ2GEJ102X	MGF CHIP 1/16W 1K	
R2241	ERJ2GEJ102X	MGF CHIP 1/16W 1K	
R2242	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R2243	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R2244	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2245	MNR14EABJ220	ARRAY CHIP 22	
R2246	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2247	MNR14EABJ220	ARRAY CHIP 22	
R2248	MNR14EABJ220	ARRAY CHIP 22	
R2249	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2250	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2251	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2252	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2253	MNR14EABJ220	ARRAY CHIP 22	
R2254	MNR14EABJ220	ARRAY CHIP 22	
R2255	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2256	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2257	ERJ2GEJ470X	MGF CHIP 1/16W 47	
R2258	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R2261	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2262	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2263	ERJ2GEJ105X	MGF CHIP 1/16W 1M	
R2264	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2265	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2266	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2267	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2268	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2269	ERJ2GEJ331X	MGF CHIP 1/16W 330	
R2284	ERJ2GEJ183X	MGF CHIP 1/16W 18K	
R2285	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2286	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2287	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2291	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2292	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2293	ERJ3GEYJ123V	MGF CHIP 1/16W 12K	
R2294	ERJ3GEYJ682V	MGF CHIP 1/16W 6.8K	
R2295	ERJ3GEYJ273V	MGF CHIP 1/16W 27K	
R2298	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2299	ERJ3GEYJ393V	MGF CHIP 1/16W 39K	

Ref. No.	Part No.	Part Name & Description	Remarks
R2300	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R2301	ERJ3GEYJ393V	MGF CHIP 1/16W 39K	
R2302	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2303	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2304	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2305	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2307	ERJ2GEJ102X	MGF CHIP 1/16W 1K	
R2308	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2312	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2313	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2315	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2316	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2317	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2318	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R2321	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2322	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2323	ERJ2GEJ183X	MGF CHIP 1/16W 18K	
R2324	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	
R2325	ERJ6GEYJ1R2V	MGF CHIP 1/10W 1.2	
R2326	ERJ6GEYJ1R2V	MGF CHIP 1/10W 1.2	
R2327	ERJ6GEYJ1R2V	MGF CHIP 1/10W 1.2	
R2328	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R2901	ERJ6ENF2202V	MGF CHIP 1/16W 22K	
R2902	ERJ6ENF3302	MGF CHIP 1/10W 33K	
R2903	ERJ6GEYJ220V	MGF CHIP 1/10W 22	
R3001	ERA3YHD750V	MGF CHIP 1/16W 75	
R3002	ERA3YHD750V	MGF CHIP 1/16W 75	
R3003	ERA3YHD750V	MGF CHIP 1/16W 75	
R3004	ERJ3GEYJ153V	MGF CHIP 1/16W 15K	
R3005	ERJ3GEYJ273V	MGF CHIP 1/16W 27K	
R3006	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R3007	ERJ3GEYJ153V	MGF CHIP 1/16W 15K	
R3008	ERJ3GEYJ273V	MGF CHIP 1/16W 27K	
R3009	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R3010	ERJ3GEYJ153V	MGF CHIP 1/16W 15K	
R3011	ERJ3GEYJ273V	MGF CHIP 1/16W 27K	
R3012	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R3013	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R3014	ERJ3GEYJ560V	MGF CHIP 1/16W 56	
R3015	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R3016	ERJ3GEYJ560V	MGF CHIP 1/16W 56	
R3017	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R3018	ERJ3GEYJ101V	MGF CHIP 1/16W 100	
R3019	ERJ3GEYJ101V	MGF CHIP 1/16W 100	
R3020	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R3021	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R3022	ERJ3GEYJ272V	MGF CHIP 1/16W 2.7K	
R3023	ERJ3GEYJ272V	MGF CHIP 1/16W 2.7K	
R3024	ERJ3GEYJ104V	MGF CHIP 1/16W 100K	
R3025	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R3026	ERJ3GEYJ561V	MGF CHIP 1/16W 560	
R3027	ERJ3GEYJ561V	MGF CHIP 1/16W 560	
R3028	ERJ3GEYJ104V	MGF CHIP 1/16W 100K	
R3029	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R3030	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R3031	ERJ3GEYJ561V	MGF CHIP 1/16W 560	
R3032	ERJ3GEYJ222V	MGF CHIP 1/16W 2.2K	

Ref. No.	Part No.	Part Name & Description	Remarks
R3033	ERJ3GEYJ183V	MGF CHIP 1/16W 18K	
R3034	ERJ3GEYJ124V	MGF CHIP 1/16W 120K	
R3035	ERJ3GEYJ104V	MGF CHIP 1/16W 100K	
R3036	ERJ3GEYJ471V	MGF CHIP 1/16W 470	
R3037	ERJ3GEYJ182V	MGF CHIP 1/16W 1.8K	
R3038	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	
R3039	ERJ3GEYJ182V	MGF CHIP 1/16W 1.8K	
R3040	ERJ3GEYJ822V	MGF CHIP 1/16W 8.2K	
R3041	ERJ3GEYJ822V	MGF CHIP 1/16W 8.2K	
R3042	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R3043	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R3044	ERJ3GEYJ104V	MGF CHIP 1/16W 100K	
R3045	ERJ3GEYJ104V	MGF CHIP 1/16W 100K	
R3046	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R3048	ERJ3GEYJ104V	MGF CHIP 1/16W 100K	
R3049	ERJ3GEYJ184V	MGF CHIP 1/16W 180K	
R3050	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R3501	ERJ3GEYJ682V	MGF CHIP 1/16W 6.8K	
R3502	ERJ6ENF6800V	MGF CHIP 1/10W 680	
R3503	ERJ6ENF5600V	MGF CHIP 1/10W 560	
R3504	ERJ6GEYJ682V	MGF CHIP 1/10W 6.8K	
R3505	ERJ2GEJ332X	MGF CHIP 1/16W 3.3K	
R3506	ERJ6GEYJ561V	MGF CHIP 1/10W 560	
R3507	ERJ2GEJ272X	MGF CHIP 1/16W 2.7K	
R3508	ERJ6GEYJ821V	MGF CHIP 1/10W 820	
R3509	ERJ3GEYJ682V	MGF CHIP 1/16W 6.8K	
R3510	ERJ6ENF6800V	MGF CHIP 1/10W 680	
R3511	ERJ6ENF5600V	MGF CHIP 1/10W 560	
R3512	ERJ6GEYJ682V	MGF CHIP 1/10W 6.8K	
R3513	ERJ3GEYJ332V	MGF CHIP 1/16W 3.3K	
R3514	ERJ6GEYJ561V	MGF CHIP 1/10W 560	
R3515	ERJ2GEJ272X	MGF CHIP 1/16W 2.7K	
R3516	ERJ6GEYJ821V	MGF CHIP 1/10W 820	
R3517	ERJ3GEYJ682V	MGF CHIP 1/16W 6.8K	
R3518	ERJ6ENF6800V	MGF CHIP 1/10W 680	
R3519	ERJ6ENF5600V	MGF CHIP 1/10W 560	
R3520	ERJ6GEYJ682V	MGF CHIP 1/10W 6.8K	
R3521	ERJ2GEJ332X	MGF CHIP 1/16W 3.3K	
R3522	ERJ6GEYJ561V	MGF CHIP 1/10W 560	
R3523	ERJ2GEJ272X	MGF CHIP 1/16W 2.7K	
R3524	ERJ6GEYJ821V	MGF CHIP 1/10W 820	
R3525	VRJSD3D1202	MGF CHIP 1/16W 12K	
R3526	VRJSD3D1501V	MGF CHIP 1/16W 1.5K	
R3527	ERJ3GEYJ221V	MGF CHIP 1/16W 220	
R3528	VRJSD3D1202	MGF CHIP 1/16W 12K	
R3529	VRJSD3D6801	MGF CHIP 1/16W 6.8K	
R3530	VRJSD3D1101	MGF CHIP 1/16W 1.1K	
R3538	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R3539	ERJ2GE0R00X	MGF CHIP 1/16W 0	
R3540	ERJ3GEYJ562V	MGF CHIP 1/16W 5.6K	
R3541	ERJ3GEYJ562V	MGF CHIP 1/16W 5.6K	
R3542	ERJ3GEYJ562V	MGF CHIP 1/16W 5.6K	
R3548	ERJ3GEYJ153V	MGF CHIP 1/16W 15K	
R3549	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3550	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3551	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R3552	ERJ3GEYJ220V	MGF CHIP 1/16W 22	

Ref. No.	Part No.	Part Name & Description	Remarks
R3553	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R3554	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R3555	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R3556	ERJ2GEJ393X	MGF CHIP 1/16W 39K	
R3557	ERJ2GEJ223X	MGF CHIP 1/16W 22K	
R3558	ERJ2GEJ183X	MGF CHIP 1/16W 18K	
R3559	ERJ2GEJ333X	MGF CHIP 1/16W 33K	
R3560	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	
R3561	ERJ2GEJ223X	MGF CHIP 1/16W 22K	
R3562	ERJ3GEYJ123V	MGF CHIP 1/16W 12K	
R3563	ERJ3GEYJ153V	MGF CHIP 1/16W 15K	
R3564	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3565	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3566	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3567	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3568	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3569	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R3570	ERJ2GEJ473X	MGF CHIP 1/16W 47K	
R3571	ERJ3GEYJ393V	MGF CHIP 1/16W 39K	
R3572	ERJ2GEJ223X	MGF CHIP 1/16W 22K	
R3573	ERJ3GEYJ183V	MGF CHIP 1/16W 18K	
R3574	ERJ2GEJ333X	MGF CHIP 1/16W 33K	
R3575	ERJ2GEJ473X	MGF CHIP 1/16W 47K	
R3576	ERJ2GEJ223X	MGF CHIP 1/16W 22K	
R3577	ERJ2GEJ123X	MGF CHIP 1/16W 12K	
R3578	ERJ3GEYJ153V	MGF CHIP 1/16W 15K	
R3579	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R3580	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R3581	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R3582	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R3583	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R3584	ERJ3GEYJ220V	MGF CHIP 1/16W 22	
R3585	ERJ2GEJ473X	MGF CHIP 1/16W 47K	
R3586	ERJ2GEJ393X	MGF CHIP 1/16W 39K	
R3587	ERJ2GEJ223X	MGF CHIP 1/16W 22K	
R3588	ERJ3GEYJ183V	MGF CHIP 1/16W 18K	
R3589	ERJ2GEJ333X	MGF CHIP 1/16W 33K	
R3590	ERJ2GEJ473X	MGF CHIP 1/16W 47K	
R3591	ERJ3GEYJ223V	MGF CHIP 1/16W 22K	
R3592	ERJ2GEJ123X	MGF CHIP 1/16W 12K	
R3593	ERJ3GEYJ223V	MGF CHIP 1/16W 22K	
R3594	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3595	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3596	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3597	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3598	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3599	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3600	ERJ3GEYJ223V	MGF CHIP 1/16W 22K	
R3601	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3602	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3603	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3604	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3605	ERJ2GEJ101X	MGF CHIP 1/16W 100	
R3606	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3607	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3608	ERJ2GEJ220X	MGF CHIP 1/16W 22	
R3609	ERJ2GEJ220X	MGF CHIP 1/16W 22	

Ref. No.	Part No.	Part Name & Description	Remarks
R3610	ERJ2GEJ123X	MGF CHIP 1/16W 12K	
R3612	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	
R3613	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	
R3614	ERJ2GEJ100X	MGF CHIP 1/16W 10	
R3615	ERJ2GEJ100X	MGF CHIP 1/16W 10	
R3616	ERJ2GEJ100X	MGF CHIP 1/16W 10	
R3617	ERJ2GEJ100X	MGF CHIP 1/16W 10	
R3618	ERJ2GEJ123X	MGF CHIP 1/16W 12K	
R3620	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	
R3621	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	
R3622	ERJ2GEJ100X	MGF CHIP 1/16W 10	
R3623	ERJ2GEJ100X	MGF CHIP 1/16W 10	
R3624	ERJ2GEJ100X	MGF CHIP 1/16W 10	
R3625	ERJ2GEJ100X	MGF CHIP 1/16W 10	
R3626	ERJ2GEJ123X	MGF CHIP 1/16W 12K	
R3628	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	
R3629	ERJ2GEJ472X	MGF CHIP 1/16W 4.7K	
R3630	ERJ2GEJ100X	MGF CHIP 1/16W 10	
R3631	ERJ2GEJ100X	MGF CHIP 1/16W 10	
R3632	ERJ2GEJ100X	MGF CHIP 1/16W 10	
R3633	ERJ2GEJ100X	MGF CHIP 1/16W 10	
R4001	ERJ3GEYJ334V	MGF CHIP 1/16W 330K	
R4002	ERJ3GEYJ334V	MGF CHIP 1/16W 330K	
R4003	ERJ3GEYJ334V	MGF CHIP 1/16W 330K	
R4004	ERJ3GEYJ394V	MGF CHIP 1/16W 390K	
R4005	ERJ3GEYJ334V	MGF CHIP 1/16W 330K	
R4006	ERJ3GEYJ394V	MGF CHIP 1/16W 390K	
R4007	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	
R4008	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	
R4010	ERJ3GEYJ392V	MGF CHIP 1/16W 3.9K	
R4011	ERJ3GEYJ392V	MGF CHIP 1/16W 3.9K	
R4012	ERJ3GEYJ332V	MGF CHIP 1/16W 3.3K	
R4013	ERJ3GEYJ332V	MGF CHIP 1/16W 3.3K	
R4015	ERJ3GEYJ272V	MGF CHIP 1/16W 2.7K	
R4016	ERJ3GEYJ272V	MGF CHIP 1/16W 2.7K	
R4017	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R4019	ERJ3GEYJ392V	MGF CHIP 1/16W 3.9K	
R4021	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R4023	ERJ3GEYJ683V	MGF CHIP 1/16W 68K	
R4024	ERJ3GEYJ274V	MGF CHIP 1/16W 270K	
R4025	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R4026	VRJSD3D1802	MGF CHIP 1/16W 18K	
R4027	VRJSD3D4702	MGF CHIP 1/16W 47K	
R4030	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R4031	ERJ3GEYJ222V	MGF CHIP 1/16W 2.2K	
R4035	ERJ3GEYJ183V	MGF CHIP 1/16W 18K	
R4036	ERJ3GEYJ331V	MGF CHIP 1/16W 330	
R4037	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R4038	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R5001	ERJ3GEYJ223V	MGF CHIP 1/16W 22K	
R5002	ERJ3GEYJ153V	MGF CHIP 1/16W 15K	
R5003	ERJ3GEYJ223V	MGF CHIP 1/16W 22K	
R5004	ERJ3GEYJ223V	MGF CHIP 1/16W 22K	
R5005	ERJ3GEYJ333V	MGF CHIP 1/16W 33K	
R5006	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R5007	VRJSD3D18R0	MGF CHIP 1/16W 18	
R5008	ERJ3GEYJ104V	MGF CHIP 1/16W 100K	

Ref. No.	Part No.	Part Name & Description	Remarks
R5009	ERA3YHD560V	MGF CHIP 1/16W 56	
R5010	VRJSD3D18R0	MGF CHIP 1/16W 18	
R5011	ERA3YHD560V	MGF CHIP 1/16W 56	
R5012	ERJ3GEYJ223V	MGF CHIP 1/16W 22K	
R5013	ERJ3GEYJ333V	MGF CHIP 1/16W 33K	
R5014	ERJ3GEYJ223V	MGF CHIP 1/16W 22K	
R5015	ERJ3GEYJ333V	MGF CHIP 1/16W 33K	
R5016	ERJ3GEYJ152V	MGF CHIP 1/16W 1.5K	
R5017	ERJ3GEYJ152V	MGF CHIP 1/16W 1.5K	
R5018	VRJSD3D18R0	MGF CHIP 1/16W 18	
R5019	ERA3YHD560V	MGF CHIP 1/16W 56	
R5020	ERJ3GEYJ223V	MGF CHIP 1/16W 22K	
R5021	ERJ3GEYJ333V	MGF CHIP 1/16W 33K	
R5022	ERJ3GEYJ152V	MGF CHIP 1/16W 1.5K	
R5023	ERJ2GEJ393X	MGF CHIP 1/16W 39K	
R5024	ERJ2GEJ154X	MGF CHIP 1/16W 150K	
R5025	ERJ2GEJ332X	MGF CHIP 1/16W 3.3K	
R5026	ERJ2GEJ561X	MGF CHIP 1/16W 560	
R5027	ERJ2GEJ332X	MGF CHIP 1/16W 3.3K	
R5028	ERJ2GEJ272X	MGF CHIP 1/16W 2.7K	
R5029	ERA3YED681V	MGF CHIP 1/16W 680	
R5030	ERA3YED391V	MGF CHIP 1/16W 390	
R5031	ERJ2GEJ182X	MGF CHIP 1/16W 1.8K	
R5032	ERJ2GEJ821X	MGF CHIP 1/16W 820	
R5033	ERJ2GEJ222X	MGF CHIP 1/16W 2.2K	
R5034	ERJ2GEJ272X	MGF CHIP 1/16W 2.7K	
R5035	ERA3YED391V	MGF CHIP 1/16W 390	
R5036	ERJ2GEJ272X	MGF CHIP 1/16W 2.7K	
R5037	ERA3YED681V	MGF CHIP 1/16W 680	
R5038	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R5039	ERJ2GEJ222X	MGF CHIP 1/16W 2.2K	
R5040	ERJ2GEJ392X	MGF CHIP 1/16W 3.9K	
R5041	ERJ3GEYJ221V	MGF CHIP 1/16W 220	
R5042	ERJ2GEJ392X	MGF CHIP 1/16W 3.9K	
R5043	ERJ3GEYJ561V	MGF CHIP 1/16W 560	
R5045	ERJ2GEJ392X	MGF CHIP 1/16W 3.9K	
R5046	ERA3YED102V	MGF CHIP 1/16W 1K	
R5047	ERA3YED681V	MGF CHIP 1/16W 680	
R5048	ERA3YED681V	MGF CHIP 1/16W 680	
R5049	ERJ2GEJ332X	MGF CHIP 1/16W 3.3K	
R5050	ERJ2GEJ222X	MGF CHIP 1/16W 2.2K	
R5051	ERJ2GEJ222X	MGF CHIP 1/16W 2.2K	
R5052	ERJ2GEJ123X	MGF CHIP 1/16W 12K	
R5053	ERJ2GEJ123X	MGF CHIP 1/16W 12K	
R5054	ERJ2GEJ103X	MGF CHIP 1/16W 10K	
R5055	ERJ2GEJ122X	MGF CHIP 1/16W 1.2K	
R5056	ERJ2GEJ561X	MGF CHIP 1/16W 560	
R5058	ERJ2GEJ150X	MGF CHIP 1/16W 15	
R5060	ERJ2GEJ150X	MGF CHIP 1/16W 15	
R5061	ERJ2GEJ822X	MGF CHIP 1/16W 8.2K	
R5062	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R5063	ERJ2GEJ222X	MGF CHIP 1/16W 2.2K	
R5064	ERJ3GEYJ561V	MGF CHIP 1/16W 560	
R5065	ERA3YED391V	MGF CHIP 1/16W 390	
R5066	ERJ3GEYJ561V	MGF CHIP 1/16W 560	
R5067	ERJ2GEJ821X	MGF CHIP 1/16W 820	
R5068	ERJ3GEYJ221V	MGF CHIP 1/16W 220	

Ref. No.	Part No.	Part Name & Description	Remarks
C2008	ECUE1A104KBQ	C CHIP 10V 0.1	
C2010	ECUE1H100DCQ	C CHIP 50V 10P	
C2011	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2012	ECUE1H100DCQ	C CHIP 50V 10P	
C2013	ECUE1H100DCQ	C CHIP 50V 10P	
C2014	ECUV1E104ZV	C CHIP 25V 0.1	
C2015	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2016	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2017	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2018	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2019	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2020	ECST1AY106	TANTALUM CHIP 10V 10	
C2021	ECUE1A104KBQ	C CHIP 10V 0.1	
C2022	ECUE1A473KBQ	C CHIP 10V 0.047	
C2023	ECUE1A473KBQ	C CHIP 10V 0.047	
C2024	ECUE1A473KBQ	C CHIP 10V 0.047	
C2025	ECST0JY106	TANTALUM CHIP 6.3V 10	
C2026	ECUE1A393KBQ	C CHIP 10V 0.039	
C2027	ECUE1E392KBQ	C CHIP 25V 3900P	
C2028	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2029	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2030	ECST0JY106	TANTALUM CHIP 6.3V 10	
C2031	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
C2032	ECUV1H100CCV	C CHIP 50V 10P	
C2033	ECUV1H080CCV	C CHIP 50V 8P	
C2035	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2039	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2041	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2043	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2044	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2045	ECST0JY226R	TANTALUM CHIP 6.3V 22	
C2046	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2047	ECST0JY226R	TANTALUM CHIP 6.3V 22	
C2048	ECEV1VS2R2S	ELECTROLYTIC CHIP 35V 2.2	
C2049	ECUV1E104ZV	C CHIP 25V 0.1	
C2050	ECEV1VS2R2S	ELECTROLYTIC CHIP 35V 2.2	
C2051	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2052	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2056	ECST1AY106	TANTALUM CHIP 10V 10	
C2057	ECEV1VS2R2S	ELECTROLYTIC CHIP 35V 2.2	
C2058	ECEV1VS2R2S	ELECTROLYTIC CHIP 35V 2.2	
C2059	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2060	ECST0JY106	TANTALUM CHIP 6.3V 10	
C2063	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2064	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2065	ECUE1A104KBQ	C CHIP 10V 0.1	
C2067	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2068	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2069	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2070	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2075	ECUV1H080CCV	C CHIP 50V 8P	
C2076	ECUV1H080CCV	C CHIP 50V 8P	
C2077	ECST0JY106	TANTALUM CHIP 6.3V 10	
C2078	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2079	ECST0JY226R	TANTALUM CHIP 6.3V 22	
C2080	ECST0JY226R	TANTALUM CHIP 6.3V 22	
C2081	ECUE1C104ZFQ	C CHIP 16V 0.1	

Ref. No.	Part No.	Part Name & Description	Remarks
C2082	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2083	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2084	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2085	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2086	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2087	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2088	ECUV1E104ZV	C CHIP 25V 0.1	
C2089	ECUE1A104KBQ	C CHIP 10V 0.1	
C2090	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2091	ECST0JY226R	TANTALUM CHIP 6.3V 22	
C2092	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2093	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2094	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2095	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2096	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2097	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2098	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2099	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2100	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2101	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2102	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2103	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2104	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2105	ECST0JY226R	TANTALUM CHIP 6.3V 22	
C2106	ECST0JY226R	TANTALUM CHIP 6.3V 22	
C2107	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2108	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2109	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2110	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2111	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2112	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2113	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2114	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2115	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2116	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2117	ECST0JY106	TANTALUM CHIP 6.3V 10	
C2118	ECUV1E104ZV	C CHIP 25V 0.1	
C2119	ECUV1E104ZV	C CHIP 25V 0.1	
C2120	ECUV1E104ZV	C CHIP 25V 0.1	
C2121	ECUV1E104ZV	C CHIP 25V 0.1	
C2122	ECST0JY226R	TANTALUM CHIP 6.3V 22	
C2123	ECUV1C104KBV	C CHIP 16V 0.1	
C2124	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2125	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2126	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2127	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2128	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2129	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2130	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2131	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2132	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2133	VCUSTBA105KB	C CHIP 10V 1	
C2134	ECST1AY106	TANTALUM CHIP 10V 10	
C2135	ECEV1CA470S	ELECTROLYTIC CHIP 16V 47	
C2136	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2137	ECUV1E104ZV	C CHIP 25V 0.1	
C2138	ECUE1C104ZFQ	C CHIP 16V 0.1	

Ref. No.	Part No.	Part Name & Description	Remarks
C2139	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2140	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2141	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2142	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2143	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2144	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2145	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2146	ECST0JY226R	TANTALUM CHIP 6.3V 22	
C2147	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2148	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2149	ECUE1C104ZFQ	C CHIP 16V 0.1	
C2150	ECUV1E104ZV	C CHIP 25V 0.1	
C2151	ECUV1E104ZV	C CHIP 25V 0.1	
C2153	ECUV1E104KBN	C CHIP 25V 0.1	
C2167	ECUE1A104KBQ	C CHIP 10V 0.1	
C2168	ECST0JY106	TANTALUM CHIP 6.3V 10	
C2901	ECUV1E104ZFN	C CHIP 25V 0.1	
C2902	ECUV1E223KBN	C CHIP 25V 0.022	
C2903	ECUV1E223KBN	C CHIP 25V 0.022	
C2904	ECUV1E104ZFN	C CHIP 25V 0.1	
C2905	ECUV1E104ZFN	C CHIP 25V 0.1	
C2906	ECST0JY106	TANTALUM CHIP 6.3V 10	
C2907	ECUV1E104ZFN	C CHIP 25V 0.1	
C3001	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10	
C3002	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10	
C3003	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10	
C3004	ECUV1E104ZV	C CHIP 25V 0.1	
C3005	ECEV1CA220S	ELECTROLYTIC CHIP 16V 22	
C3006	ECUV1E104ZV	C CHIP 25V 0.1	
C3007	ECEV0JA220S	ELECTROLYTIC CHIP 6.3V 22	
C3008	ECUV1E104ZV	C CHIP 25V 0.1	
C3009	ECUV1E104ZV	C CHIP 25V 0.1	
C3010	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10	
C3011	ECUV1H100CCV	C CHIP 50V 10P	
C3012	ECUV1H103KBN	C CHIP 50V 0.01	
C3013	ECUV1H121JCV	C CHIP 50V 120P	
C3014	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10	
C3015	ECEV0JA470S	ELECTROLYTIC CHIP 6.3V 47	
C3016	ECUV1H103ZV	C CHIP 50V 0.01	
C3017	ECUV1H121JCV	C CHIP 50V 120P	
C3018	ECEV1CA4R7N	ELECTROLYTIC CHIP 16V 4.7	
C3019	ECUV1E683KBN	C CHIP 25V 0.068	
C3020	ECUV1H103KBN	C CHIP 50V 0.01	
C3021	ECEV1CA4R7N	ELECTROLYTIC CHIP 16V 4.7	
C3022	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10	
C3024	ECUV1H561JCV	C CHIP 50V 560P	
C3025	ECUV1H101JCV	C CHIP 50V 100P	
C3026	ECUV1H101JCV	C CHIP 50V 100P	
C3027	ECUV1A105ZV	C CHIP 10V 1	
C3028	ECUV1E104ZV	C CHIP 25V 0.1	
C3501	ECEV1EA330SP	ELECTROLYTIC CHIP 25V 33	
C3502	ECUV1E104ZV	C CHIP 25V 0.1	
C3503	ECUV1E104ZV	C CHIP 25V 0.1	
C3504	ECUV1E104ZV	C CHIP 25V 0.1	
C3505	ECUV1E104ZV	C CHIP 25V 0.1	
C3506	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3507	ECUE1C104ZFQ	C CHIP 16V 0.1	

Ref. No.	Part No.	Part Name & Description	Remarks
C3508	ECUV1E104ZV	C CHIP 25V 0.1	
C3517	ECUV1C104KBV	C CHIP 16V 0.1	
C3519	ECUV1E104ZV	C CHIP 25V 0.1	
C3520	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3521	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3522	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3523	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3524	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3525	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3526	ECUV1E104ZV	C CHIP 25V 0.1	
C3527	ECUV1E104ZV	C CHIP 25V 0.1	
C3528	ECEV1EA330SP	ELECTROLYTIC CHIP 25V 33	
C3529	ECEV0JA220S	ELECTROLYTIC CHIP 6.3V 22	
C3530	ECUV1E104ZV	C CHIP 25V 0.1	
C3531	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3532	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3533	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3534	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3535	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3536	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3537	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3538	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3539	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3540	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3541	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3542	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3543	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3544	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3545	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3546	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3547	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3548	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3549	ECUV1E104ZV	C CHIP 25V 0.1	
C3550	ECUV1E104ZV	C CHIP 25V 0.1	
C3551	ECEV1EA330SP	ELECTROLYTIC CHIP 25V 33	
C3552	ECEV0JA220S	ELECTROLYTIC CHIP 6.3V 22	
C3553	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3554	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3555	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3556	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3557	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3558	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3559	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3560	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3561	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3562	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3563	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3564	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3565	ECUV1E104ZV	C CHIP 25V 0.1	
C3566	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3567	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3568	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3569	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3570	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3571	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3572	ECUV1E104ZV	C CHIP 25V 0.1	
C3573	ECUV1E104ZV	C CHIP 25V 0.1	

Ref. No.	Part No.	Part Name & Description	Remarks
C3574	ECEV1EA330SP	ELECTROLYTIC CHIP 25V 33	
C3575	ECEV0JA220S	ELECTROLYTIC CHIP 6.3V 22	
C3576	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3577	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3578	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3579	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3580	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3581	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3582	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3583	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3584	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3585	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3586	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3587	ECUE1C104ZFQ	C CHIP 16V 0.1	
C3588	ECUV1C104KBV	C CHIP 16V 0.1	
C3589	ECUV1E104ZV	C CHIP 25V 0.1	
C3590	ECUV1E104ZV	C CHIP 25V 0.1	
C3592	ECUV1C104KBV	C CHIP 16V 0.1	
C3593	ECUV1E104ZV	C CHIP 25V 0.1	
C3594	ECUV1E104ZV	C CHIP 25V 0.1	
C3595	ECEV1EA330SP	ELECTROLYTIC CHIP 25V 33	
C3596	VCUSTBA105KB	C CHIP 10V 1	
C3597	ECUV1E104ZV	C CHIP 25V 0.1	
C3598	ECUV1E104ZV	C CHIP 25V 0.1	
C3599	ECEV1EA330SP	ELECTROLYTIC CHIP 25V 33	
C3600	VCUSTBA105KB	C CHIP 10V 1	
C3601	ECUV1E104ZV	C CHIP 25V 0.1	
C3602	ECUV1E104ZV	C CHIP 25V 0.1	
C3603	ECEV1EA330SP	ELECTROLYTIC CHIP 25V 33	
C3604	VCUSTBA105KB	C CHIP 10V 1	
C3605	ECUV1E104ZV	C CHIP 25V 0.1	
C3606	ECUV1E104ZV	C CHIP 25V 0.1	
C3607	ECEV1EA330SP	ELECTROLYTIC CHIP 25V 33	
C4001	VCUSTBA105KB	C CHIP 10V 1	
C4002	VCUSTBA105KB	C CHIP 10V 1	
C4003	ECUV1C473KBV	C CHIP 16V 0.047	
C4005	ECUV1H562KBV	C CHIP 50V 5600P	
C4007	VCUSTBA105KB	C CHIP 10V 1	
C4009	ECUV1E223KBV	C CHIP 25V 0.022	
C4011	ECEV0JA101S	ELECTROLYTIC CHIP 6.3V 100	
C4012	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10	
C4013	VCUSTBA105KB	C CHIP 10V 1	
C4014	ECUV1H103ZV	C CHIP 50V 0.01	
C4015	ECUV1E104KBN	C CHIP 25V 0.1	
C4016	ECUV1E104ZV	C CHIP 25V 0.1	
C4017	ECEV0JA331	ELECTROLYTIC CHIP 6.3V 330	
C4020	ECEV1AA101SP	ELECTROLYTIC CHIP 10V 100	
C4021	ECUV1C104KBV	C CHIP 16V 0.1	
C4022	ECUV1E104ZV	C CHIP 25V 0.1	
C4023	ECUV1E104ZV	C CHIP 25V 0.1	
C4026	ECUV1E104ZV	C CHIP 25V 0.1	
C5001	ECUV1H103ZV	C CHIP 50V 0.01	
C5002	ECUV1H103ZV	C CHIP 50V 0.01	
C5003	ECUV1E473ZV	C CHIP 25V 0.047	
C5004	ECUV1H103ZV	C CHIP 50V 0.01	
C5005	ECEV0JA220S	ELECTROLYTIC CHIP 6.3V 22	
C5006	ECEV0JA220S	ELECTROLYTIC CHIP 6.3V 22	

Ref. No.	Part No.	Part Name & Description	Remarks
C5007	ECEV0JA470S	ELECTROLYTIC CHIP 6.3V 47	
C5008	ECUV1E104ZFV	C CHIP 25V 0.1	
C5009	ECEV1CA220S	ELECTROLYTIC CHIP 16V 22	
C5010	ECEV1EA330SP	ELECTROLYTIC CHIP 25V 33	
C5011	ECUV1H150JCV	C CHIP 50V 15P	
C5012	ECEV0JA220S	ELECTROLYTIC CHIP 6.3V 22	
C5013	ECEV0JA470S	ELECTROLYTIC CHIP 6.3V 47	
C5014	ECEV0JA220S	ELECTROLYTIC CHIP 6.3V 22	
C5015	ECUV1E104ZFV	C CHIP 25V 0.1	
C5016	ECUV1E104ZFV	C CHIP 25V 0.1	
C5019	ECUV1E104ZFV	C CHIP 25V 0.1	
C5020	ECUV1E104ZFV	C CHIP 25V 0.1	
C5021	ECUV1E104ZFV	C CHIP 25V 0.1	
C5025	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10	
C5026	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10	
C5027	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10	
C5028	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10	
C5029	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10	
C5030	ECEV1CA100S	ELECTROLYTIC CHIP 16V 10	
C5031	ECEV0JA101S	ELECTROLYTIC CHIP 6.3V 100	
C5032	ECUV1E104ZFV	C CHIP 25V 0.1	
C5033	ECUV1E104ZFV	C CHIP 25V 0.1	
C5034	ECUV1E104ZFV	C CHIP 25V 0.1	
C5035	ECUV1H100CCV	C CHIP 50V 10P	
C5036	ECUV1H100CCV	C CHIP 50V 10P	
C5037	ECUV1H100CCV	C CHIP 50V 10P	
C5038	VCUSQBA225KB	C CHIP 10V 2.2	
C5039	VCUSQBA225KB	C CHIP 10V 2.2	
C5040	VCUSQBA225KB	C CHIP 10V 2.2	
C5041	ECUV1E104ZFV	C CHIP 25V 0.1	
C5042	ECUV1E104ZFV	C CHIP 25V 0.1	
C5043	ECUV1H271JCV	C CHIP 50V 270P	
C5044	ECUV1H151JCV	C CHIP 50V 150P	
C5045	ECUV1E104ZFV	C CHIP 25V 0.1	
		FILTERS	
FL2001	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2002	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2003	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2004	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2005	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2006	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2007	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2008	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2009	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2010	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2011	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2012	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2013	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2014	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2015	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2016	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL2017	LSLFAA1H102	L/C COMPLX CMP 50V 1000P	
FL2018	LSLFAA1H102	L/C COMPLX CMP 50V 1000P	
FL3001	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL3002	NFM51R20P207	L/C COMPLX CMP 200	

Ref. No.	Part No.	Part Name & Description	Remarks
FL3003	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL3004	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL4001	LSLFAA1H102	L/C COMPLX CMP 50V 1000P	
FL4002	LSLFAA1H102	L/C COMPLX CMP 50V 1000P	
FL5001	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL5002	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
FL5003	LSLFAA1H101	L/C COMPLX CMP 50V 100P	
		COILS	
L2002	VLQ0163J4R7	CHIP 4.7	
L2004	FBM2125HS420	CHIP 42	
L2006	VLQ0163J4R7	CHIP 4.7	
L2007	VLQ0163J4R7	CHIP 4.7	
L2008	VLQ0163J220	CHIP 22	
L2009	FBM2125HS420	CHIP 42	
L2010	FBM2125HS420	CHIP 42	
L2016	FBM2125HS420	CHIP 42	
L2017	FBM2125HS420	CHIP 42	
L2018	FBM2125HS420	CHIP 42	
L2020	FBM2125HS420	CHIP 42	
L2021	VLPS0090	CHIP	
L2022	VLPS0090	CHIP	
L2023	VLPS0090	CHIP	
L2024	VLPS0090	CHIP	
L2901	FBM2125HS420	CHIP 42	
L3001	VLQ0163J220	CHIP 22	
L3002	VLQ0163J220	CHIP 22	
L3003	VLQ0163J220	CHIP 22	
L3501	VLPS0090	CHIP	
L3502	VLPS0090	CHIP	
L3503	VLQ0163J220	CHIP 22	
L3504	VLQ0163J220	CHIP 22	
L3505	VLQ0163J220	CHIP 22	
L3506	VLQ0163J220	CHIP 22	
L3507	VLQ0163J220	CHIP 22	
L3508	VLQ0163J220	CHIP 22	
L3509	VLPS0090	CHIP	
L3510	VLQ0163J220	CHIP 22	
L3511	VLQ0163J220	CHIP 22	
L3512	VLQ0163J220	CHIP 22	
L3513	VLQ0163J220	CHIP 22	
L4001	VLQ0163J271	CHIP 270	
L4002	VLPS0090	CHIP	
L5001	VLQ0163J101	CHIP 100	
L5002	VLJW2YL3R9JT	CHIP 3.9	
L5003	VLQ0426J220	CHIP 22	
L5004	VLQ0426J220	CHIP 22	
L5005	VLQ0163J220	CHIP 22	
		CRYSTAL OSCILLATOR	
X2001	VSXS0810		
X2002	LSSX0052		
		PIN HEADERS	

Ref. No.	Part No.	Part Name & Description	Remarks
P1901	LSJSPC03F	CONNECTOR 3P	
P1902	LSJSPC03F	CONNECTOR 3P	
P1903	LSJSME03E	CONNECTOR 3P	
P1904	LSJSME04E	CONNECTOR 4P	
P1905	LSJSME12E	CONNECTOR 12P	
P1906	LSJSME02E	CONNECTOR 2P	
P1907	LSJSME03E	CONNECTOR 3P	
P2002	VJPW0250	CONNECTOR 2P	
P2003	LSJS0085	CONNECTOR 18P	
P2004	LSJS07AF006	CONNECTOR 6P	
P3501	LSJS07BC030	CONNECTOR 30P	
P3502	VJSS3332	CONNECTOR 30P	
P3503	LSJS07BC030	CONNECTOR 30P	
P4001	LSJSPC02F	CONNECTOR 2P	
		SWITCHES	
SW2001	ESE13H01	DETECT SWITCH	
SW2002	LSSM0002	DETECT SWITCH	
		FUSE & PROTECTOR	
PR1901	ICP-S1.8	IC PROTECTOR CHIP 1.8A	
PR1903	ICP-S1.8	IC PROTECTOR CHIP 1.8A	
PR1904	ICP-S2.3	IC PROTECTOR CHIP 2.3A	
		MISCELLANEOUS	
JK2003	LSJJ0155	RS232C JACK SOCKET	
JK3001	LSJJ0125A	D-SUB MINI JACK SOCKET	
JK4001	LSJJ0156	STEREO MINI JACK SOCKET	
JK5001	LSJJ0157	S-VIDEO JACK SOCKET	
JK5002	LSJJ0158	RCA PIN JACK SOCKET	
		MISCELLANEOUS	
E11	LSEP0A45A1	SYNC SELECTOR C.B.A. NR	
490	LSHD0062	SCREW,STEEL	
701	LSKF0336	JACK COVER	
702	LSSC0433	JACK PLATE,STEEL	
703	PNA4611M00YA	INFRARED RECEIVER UNIT	MKA
704	VMFS0114	CUSHION,RUBBER	
705	VMTS0035	CUSHION,RUBBER	
706	LSMZ0301	BARRIER	
707	LSSC0451	JACK FCC PLATE	
		INLET C.B.A. NR	
		FUSE & PROTECTOR	
F1101	LSSF0013B50T	FUSE 250V 5A	
F1102	MTG4A50121C	FUSE 250V 4A	

Ref. No.	Part No.	Part Name & Description	Remarks
		POWER C.B.A.	
		MISCELLANEOUS	
E21	LSEP1061A1	MAIN POWER C.B.A. NR	
E22	LSEP1062A1	BALLAST C.B.A. NR	
		OPERATION C.B.A.	
		DIODES	
D7001	LNJ206R5ARA	LED CHIP RED	
D7002	LNJ206R5ARA	LED CHIP RED	
D7003	LNJ206R5ARA	LED CHIP RED	
D7004	LNJ206R5ARA	LED CHIP RED	
D7005	LNJ206R5ARA	LED CHIP RED	
D7006	LNJ206R5ARA	LED CHIP RED	
D7007	LNJ206R5ARA	LED CHIP RED	
D7008	LN2162C13	LED	
		PIN HEADERS	
P7001	LSJS0085	CONNECTOR 18P	
		SWITCHES	
SW7002	LSSP0014	PUSH SWITCH	
SW7003	LSSP0014	PUSH SWITCH	
SW7004	LSSP0014	PUSH SWITCH	
SW7005	LSSP0014	PUSH SWITCH	
SW7006	LSSP0014	PUSH SWITCH	
SW7007	LSSP0014	PUSH SWITCH	
SW7008	LSSP0014	PUSH SWITCH	
SW7010	LSSP0014	PUSH SWITCH	
SW7011	LSSP0014	PUSH SWITCH	
		THERMISTOR C.B.A.	
		INTEGRATED CIRCUITS	
IC6401	DS1775R/T&R	IC, LINEAR	
		RESISTORS	
R6401	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R6402	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
		CAPACITORS	
C6401	ECUV1E104ZFB	C CHIP 25V 0.1	
		COILS	

Ref. No.	Part No.	Part Name & Description	Remarks
L6401	FBM2125HS420	CHIP 42	
		PIN HEADERS	
P6401	LSJS07AF006	CONNECTOR 6P	

DIGITAL SECTION

F


E

D

C


B

A

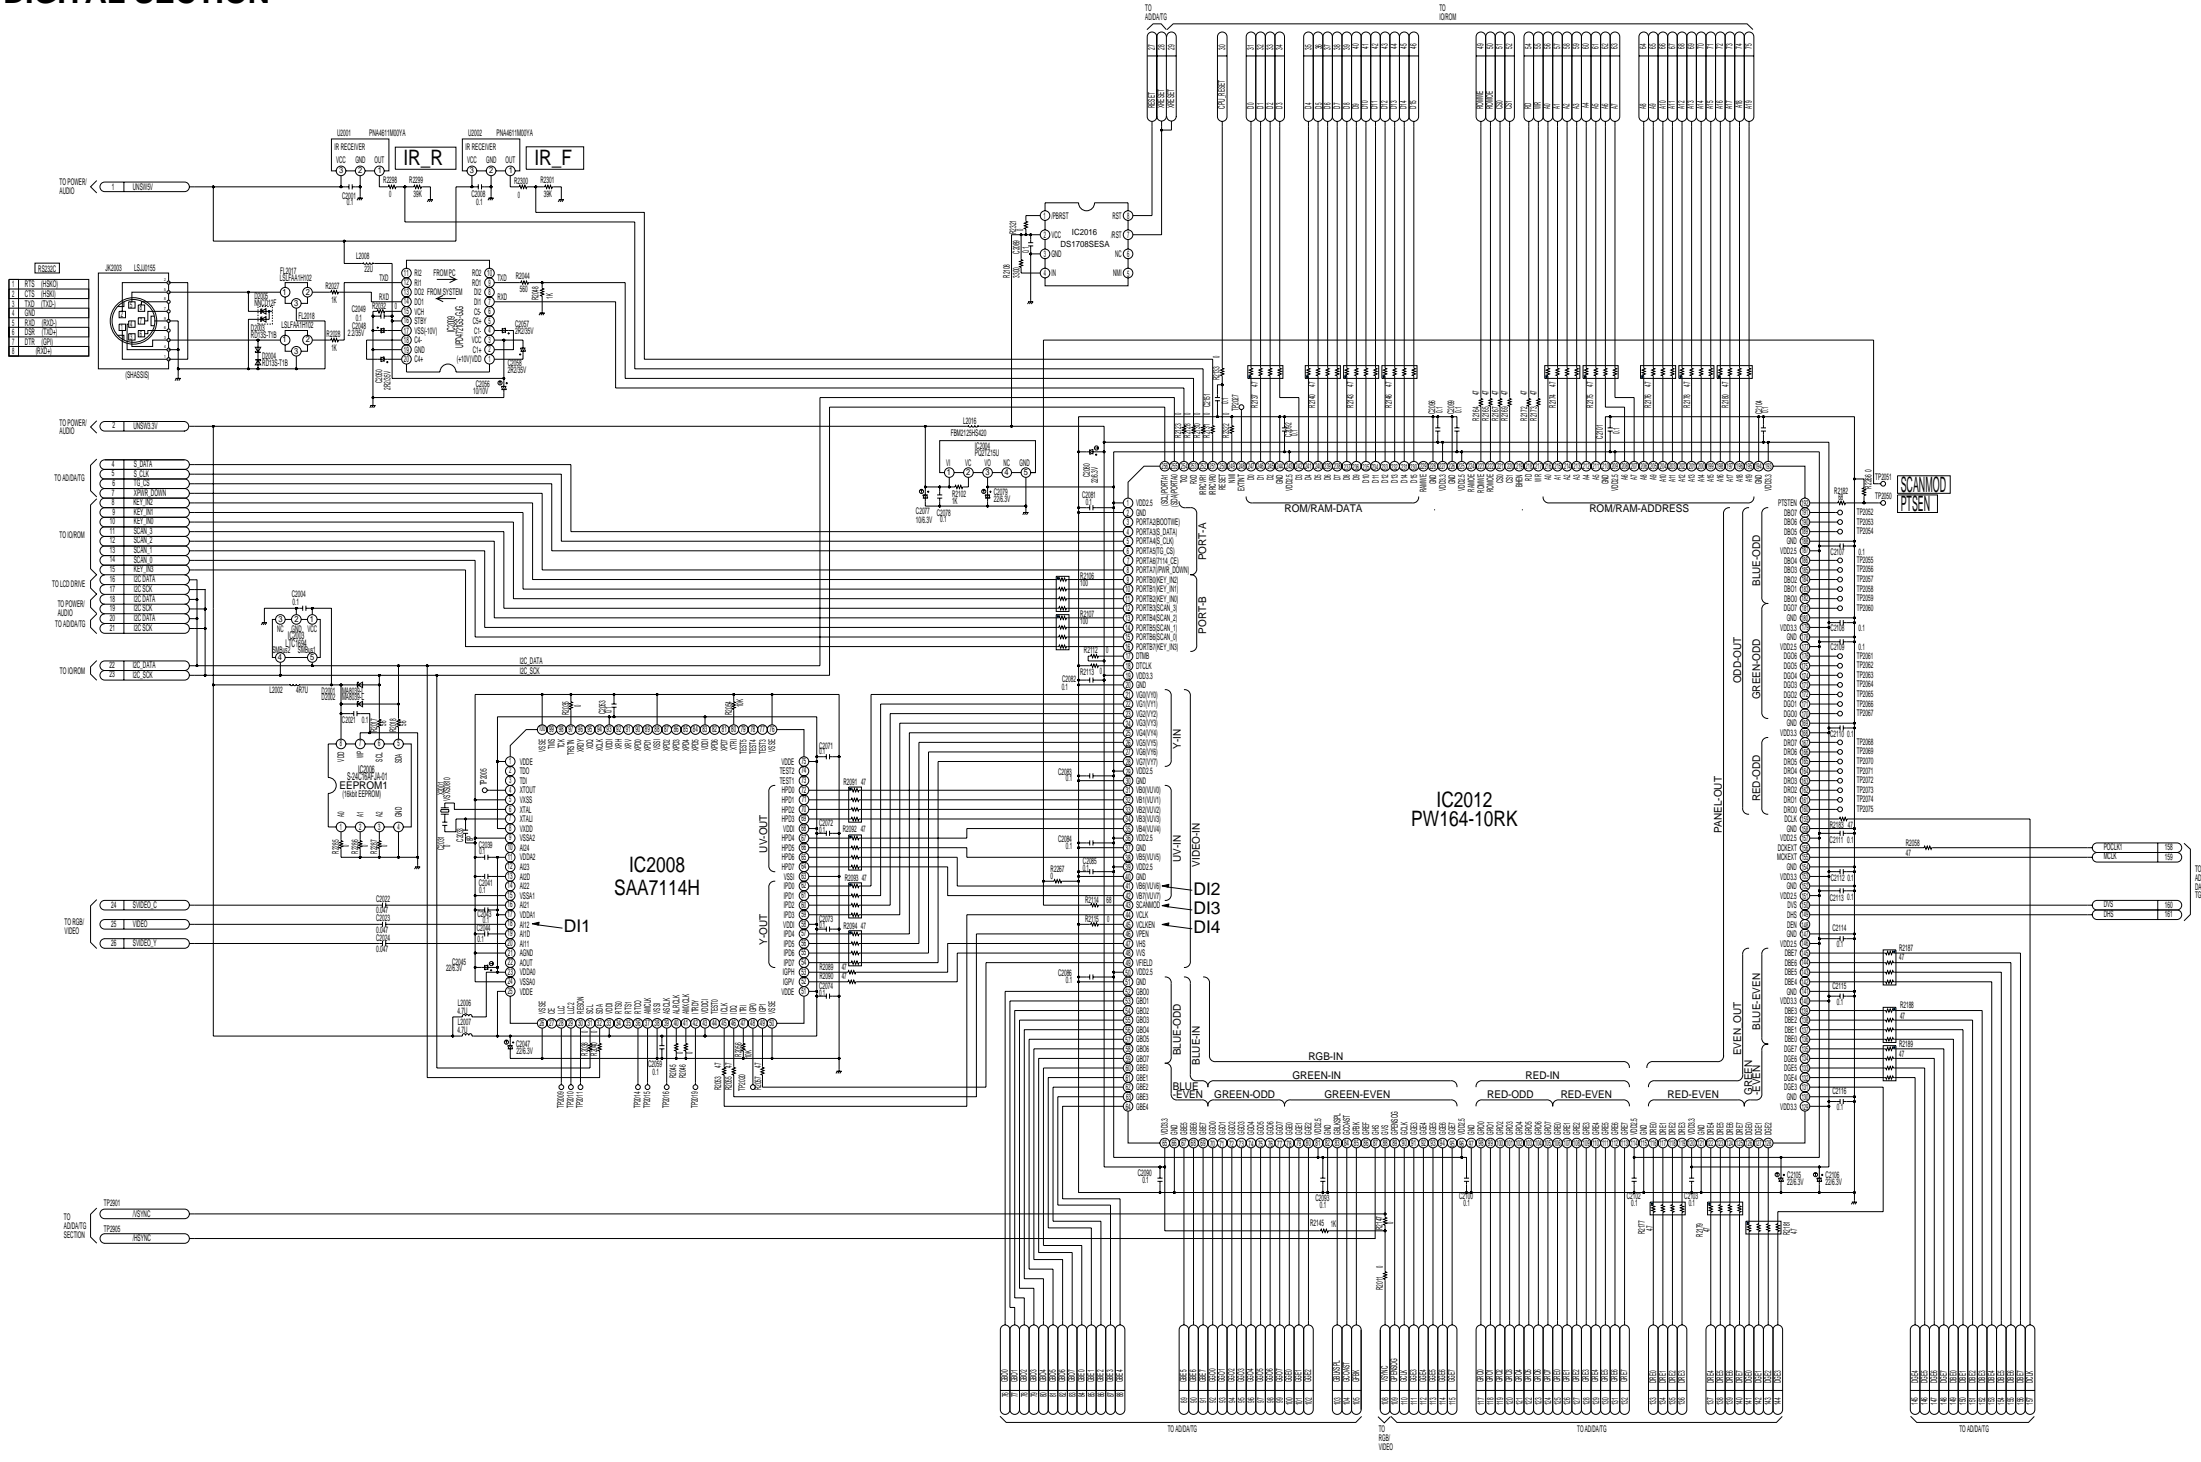

LCD DRIVE SECTION


G
F
E
D
C
B
A

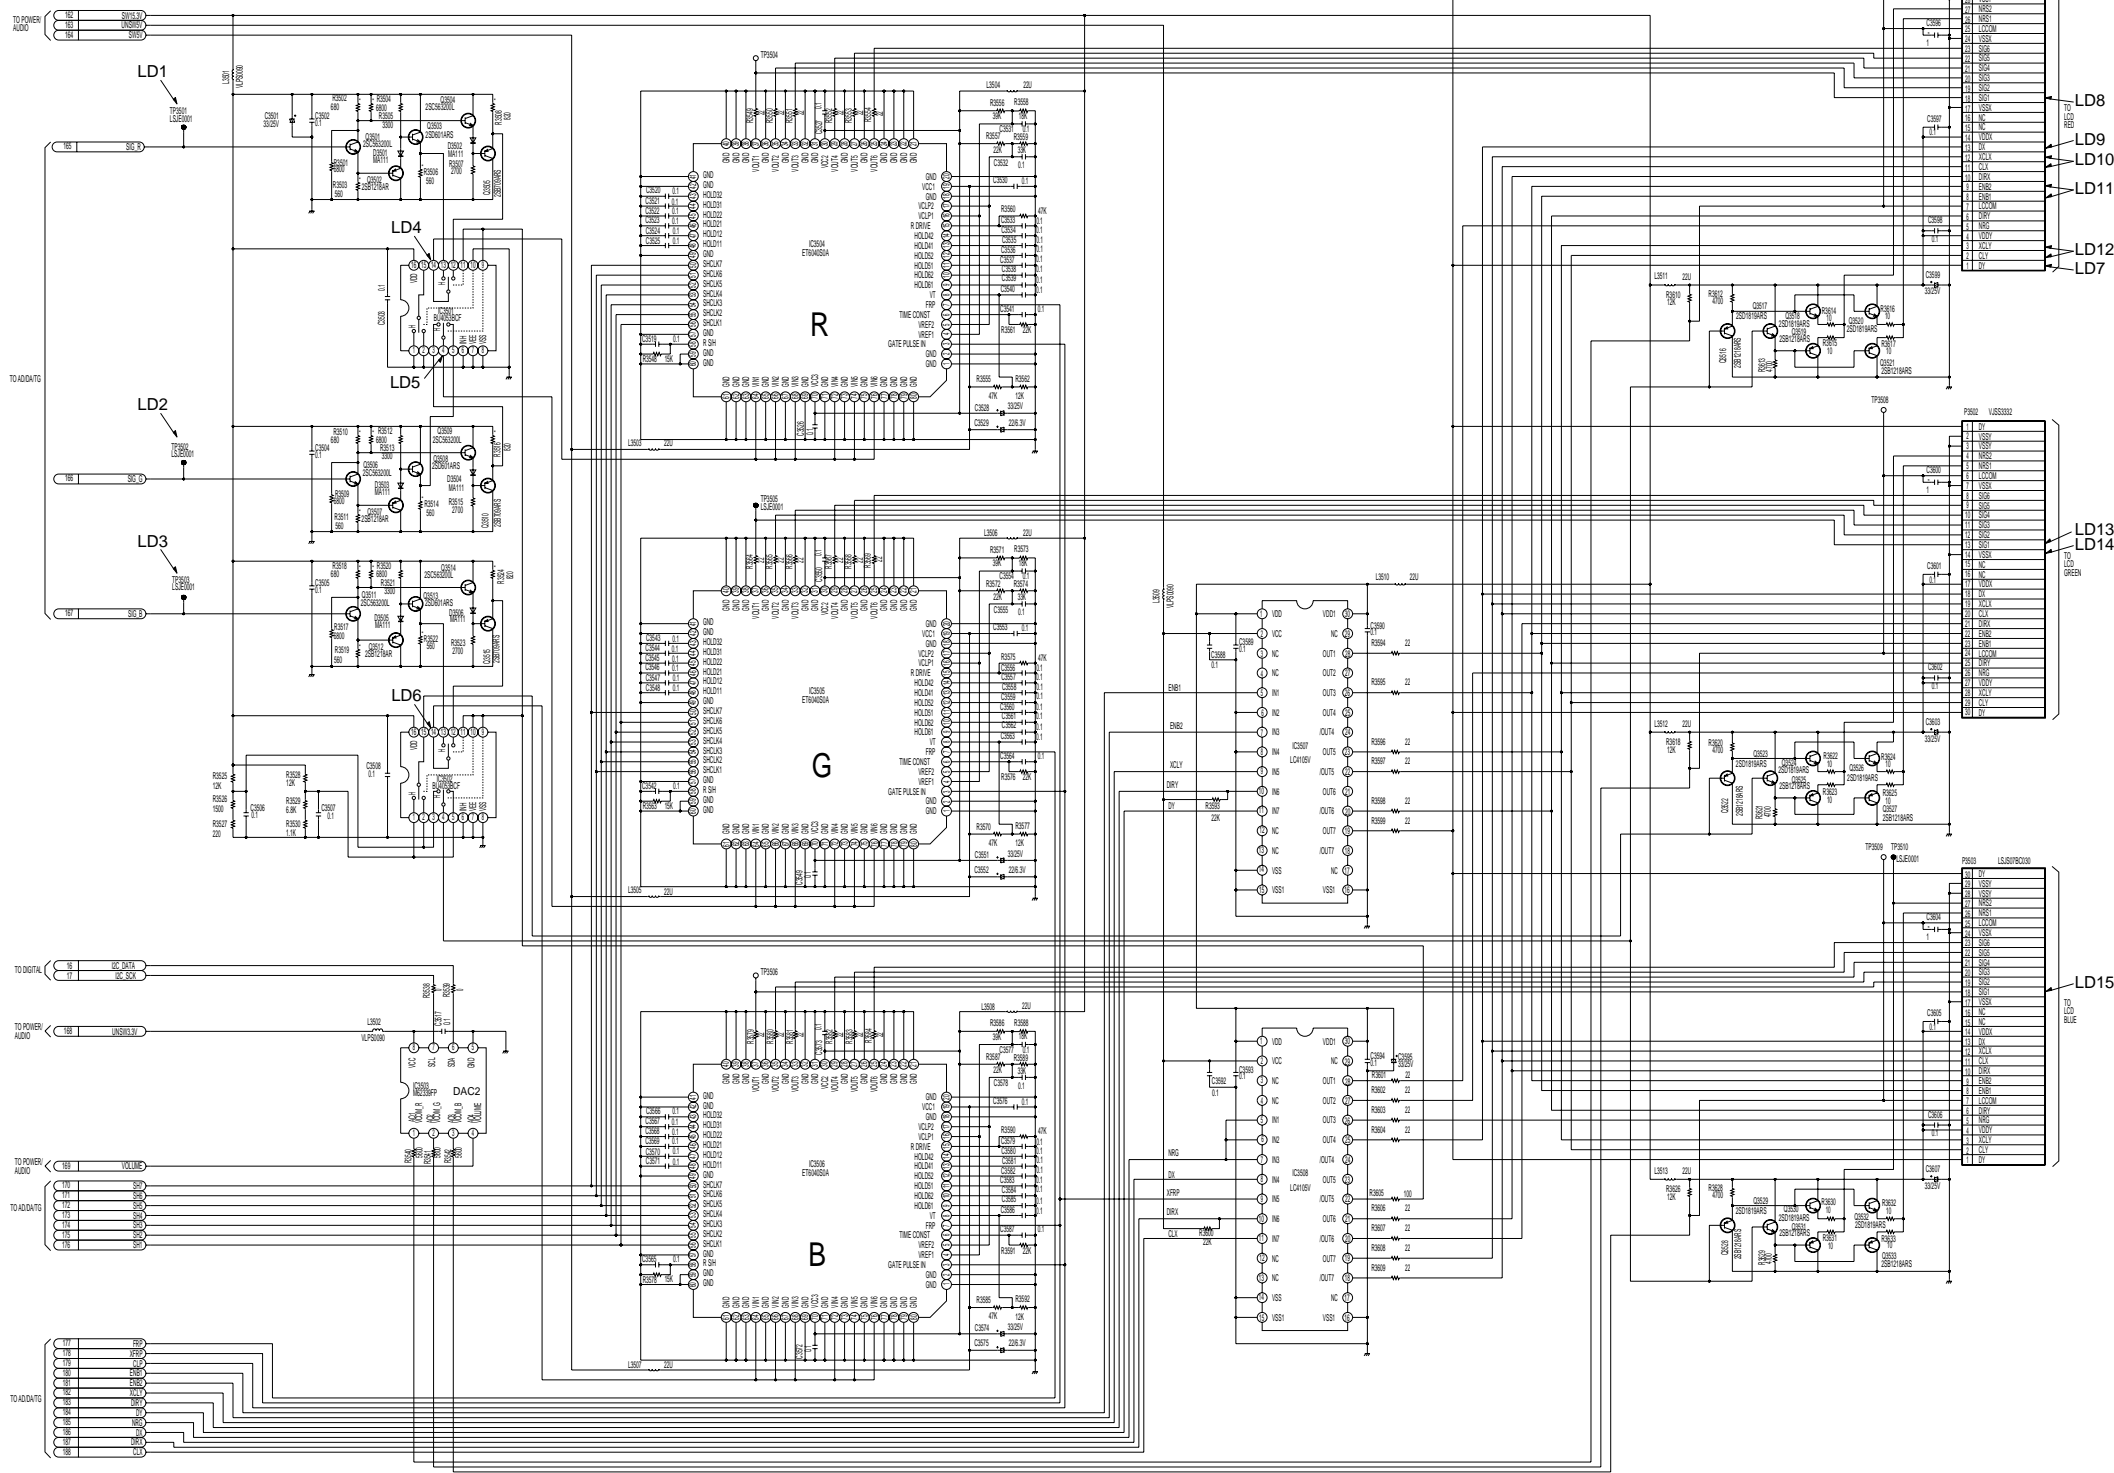

1 2 3 4 5 6 7 8 9


RGB/VIDEO SECTION

F
E
D
C
B
A

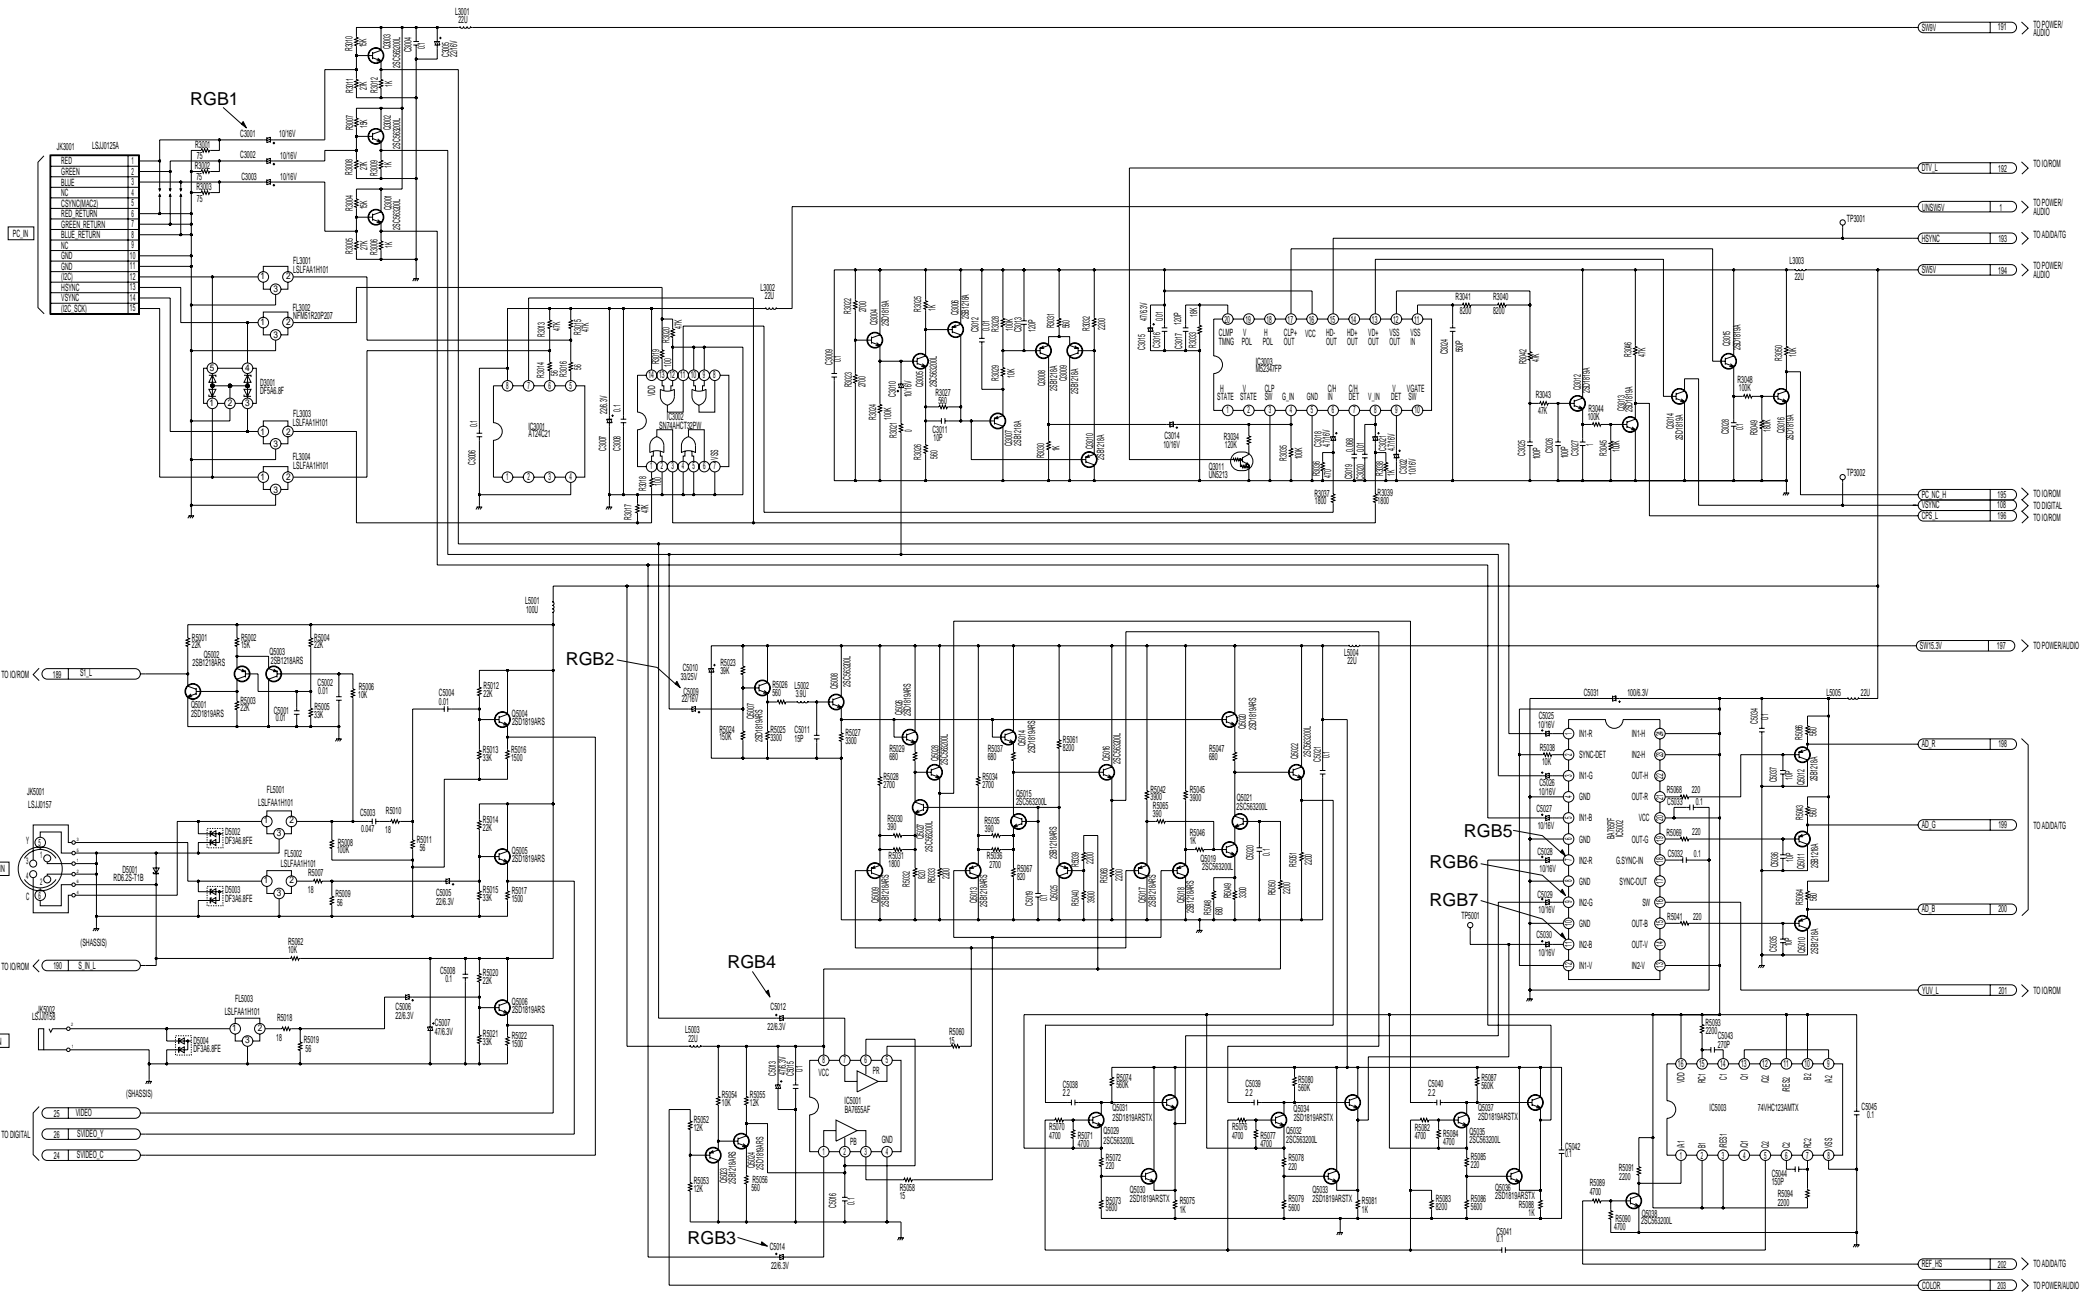

POWER/AUDIO SECTION

IMPORTANT SAFETY NOTICE:
 COMPONENTS IDENTIFIED BY THE SINE Δ HAVE SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
 WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SPECIFIED PARTS.

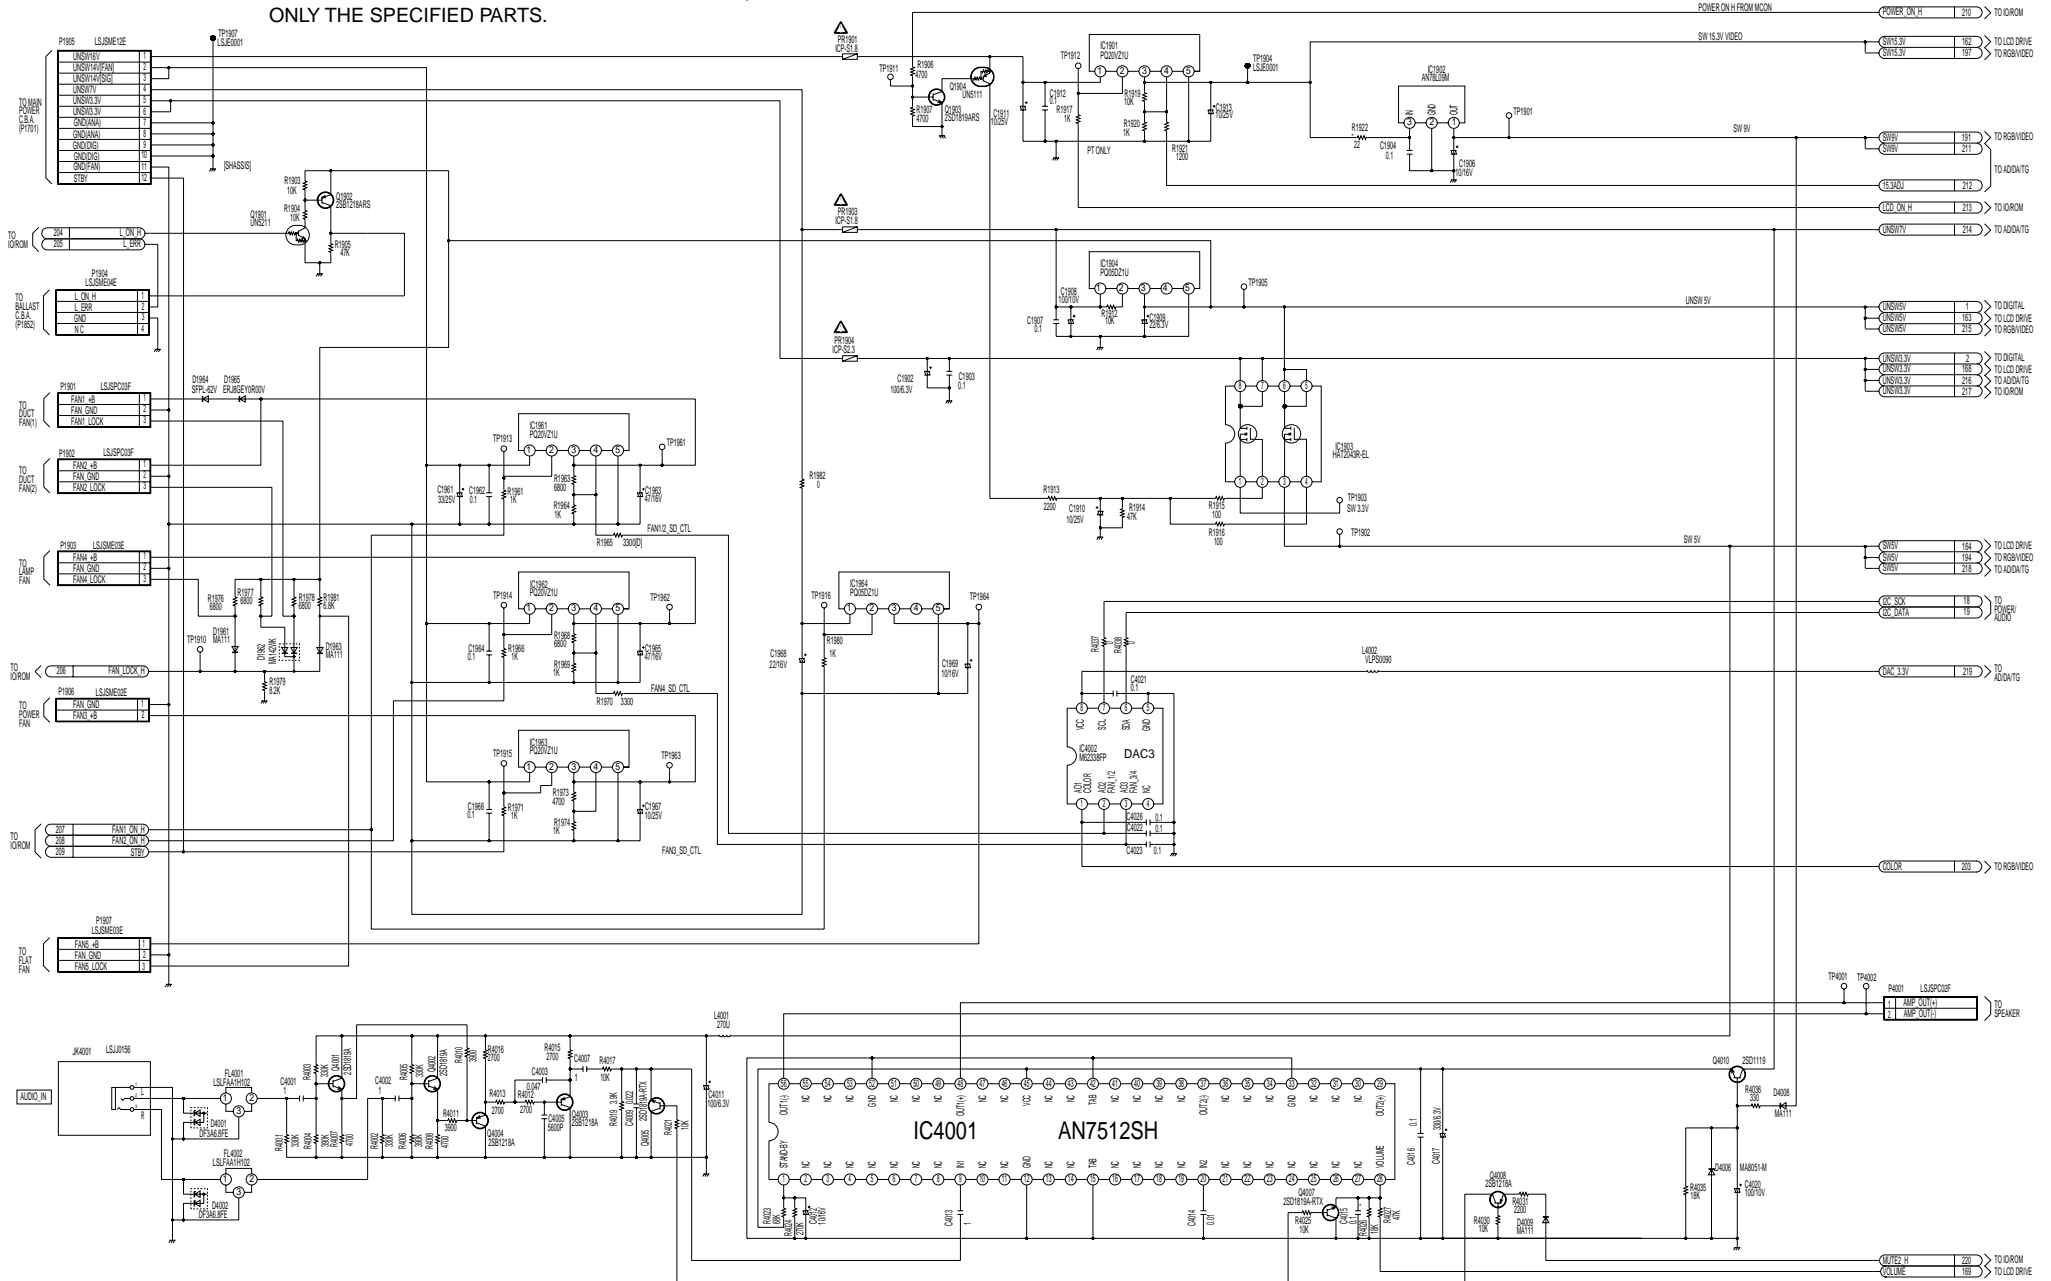


G
F
E
D
C
B
A

1 2 3 4 5 6 7 8 9

AD/DA/TG SECTION

G
F
E
D
C
B
A

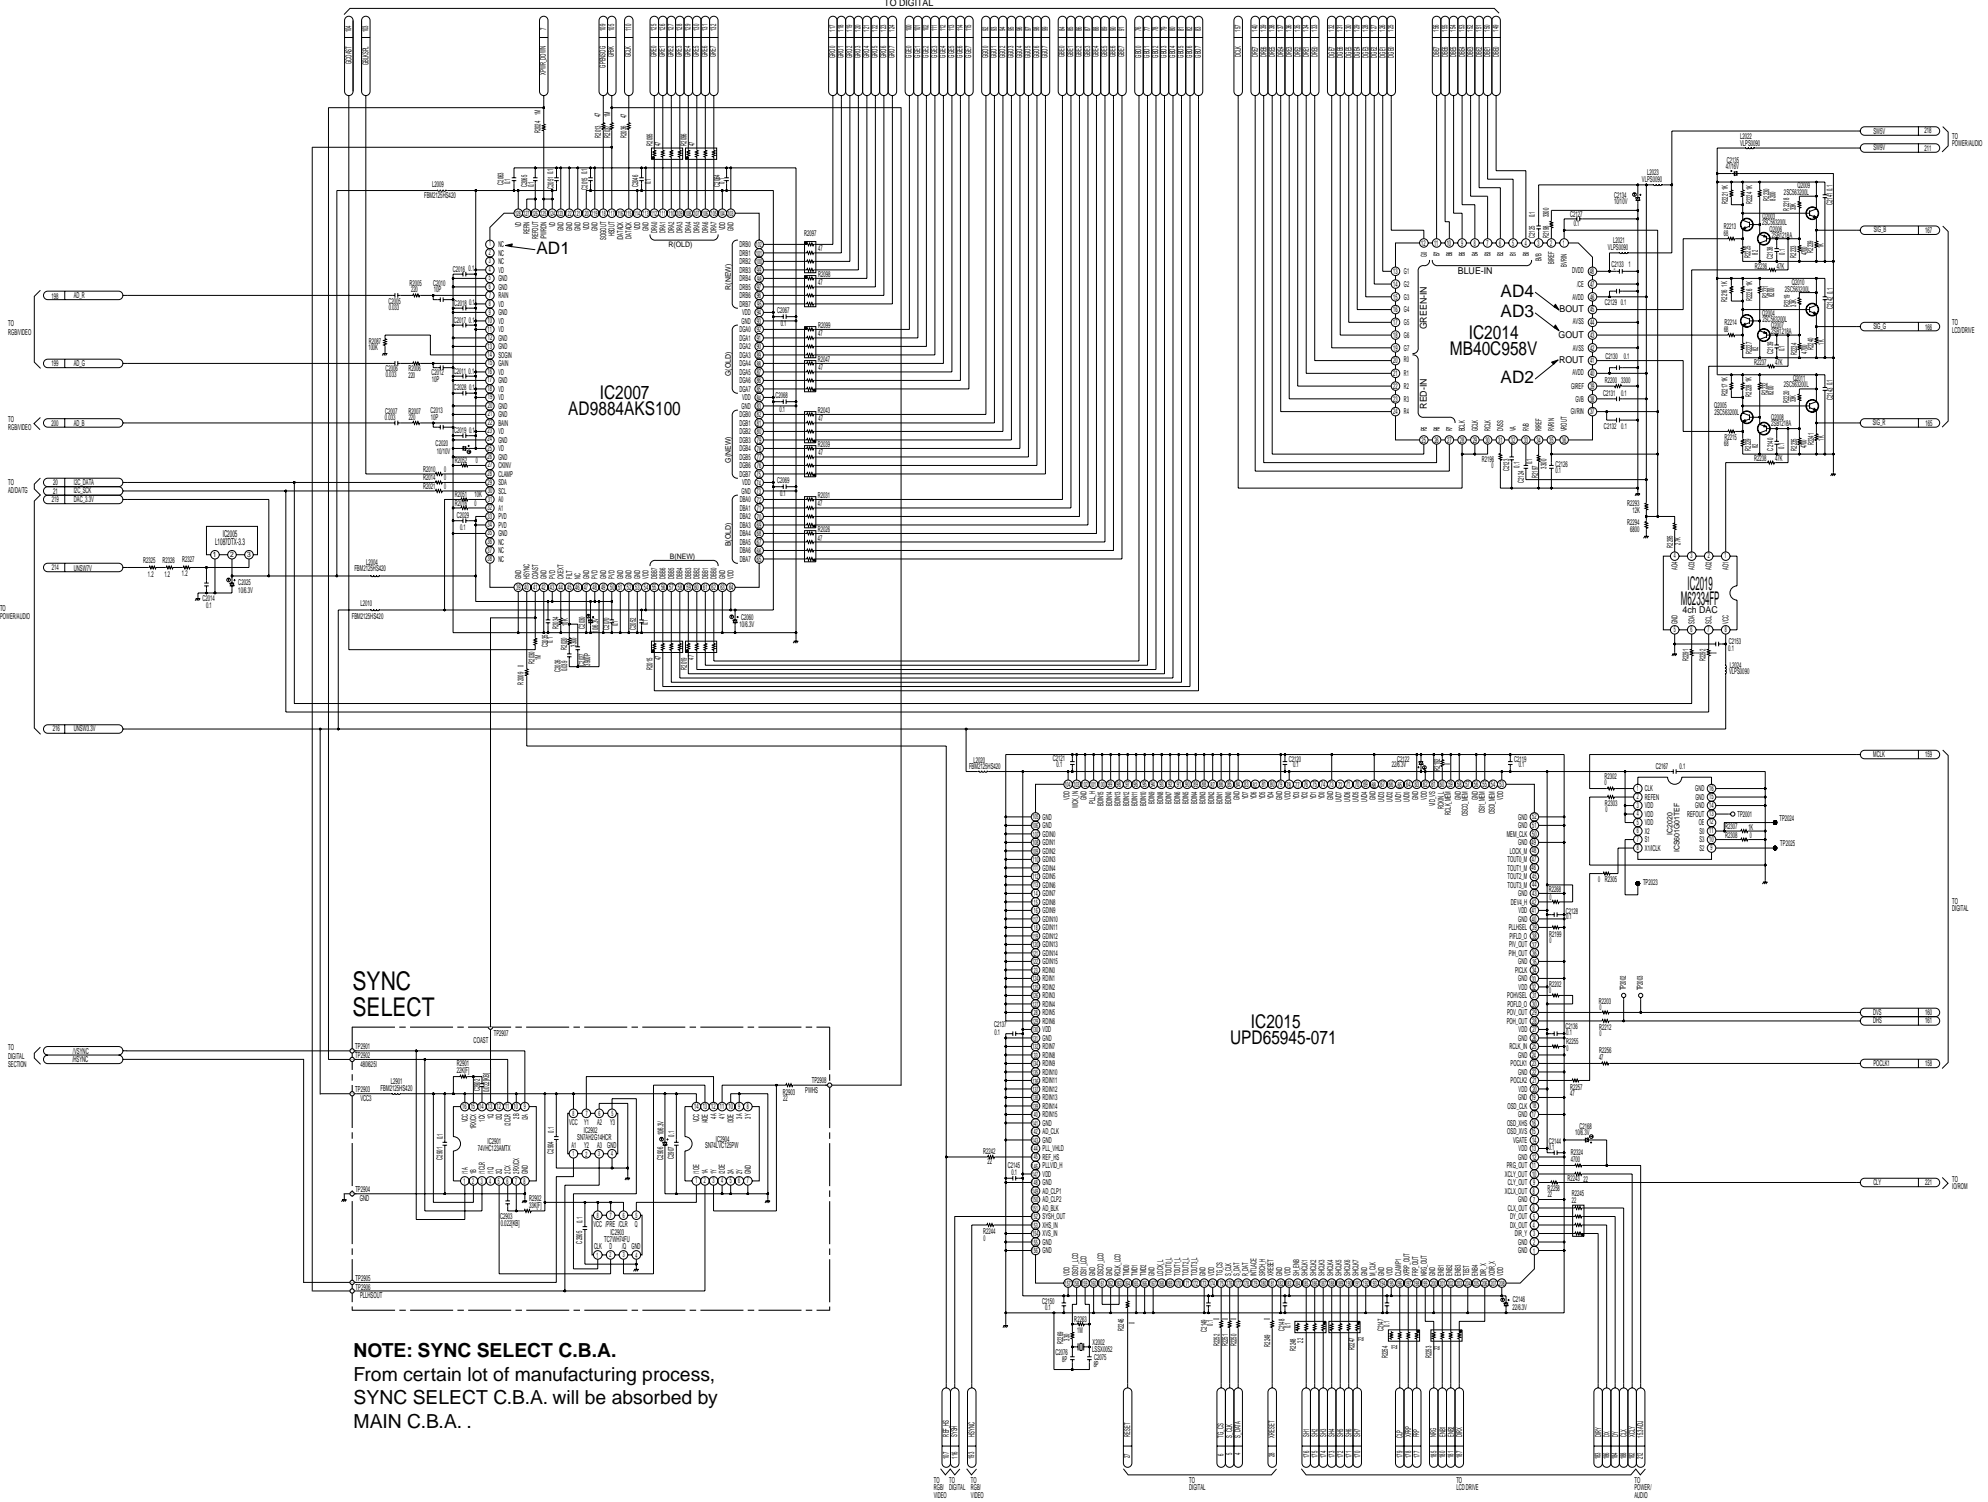

NOTE: SYNC SELECT C.B.A.
 From certain lot of manufacturing process,
 SYNC SELECT C.B.A. will be absorbed by
 MAIN C.B.A. .

1 2 3 4 5 6 7 8 9

IO/ROM SECTION

F


E

D


C

B

A

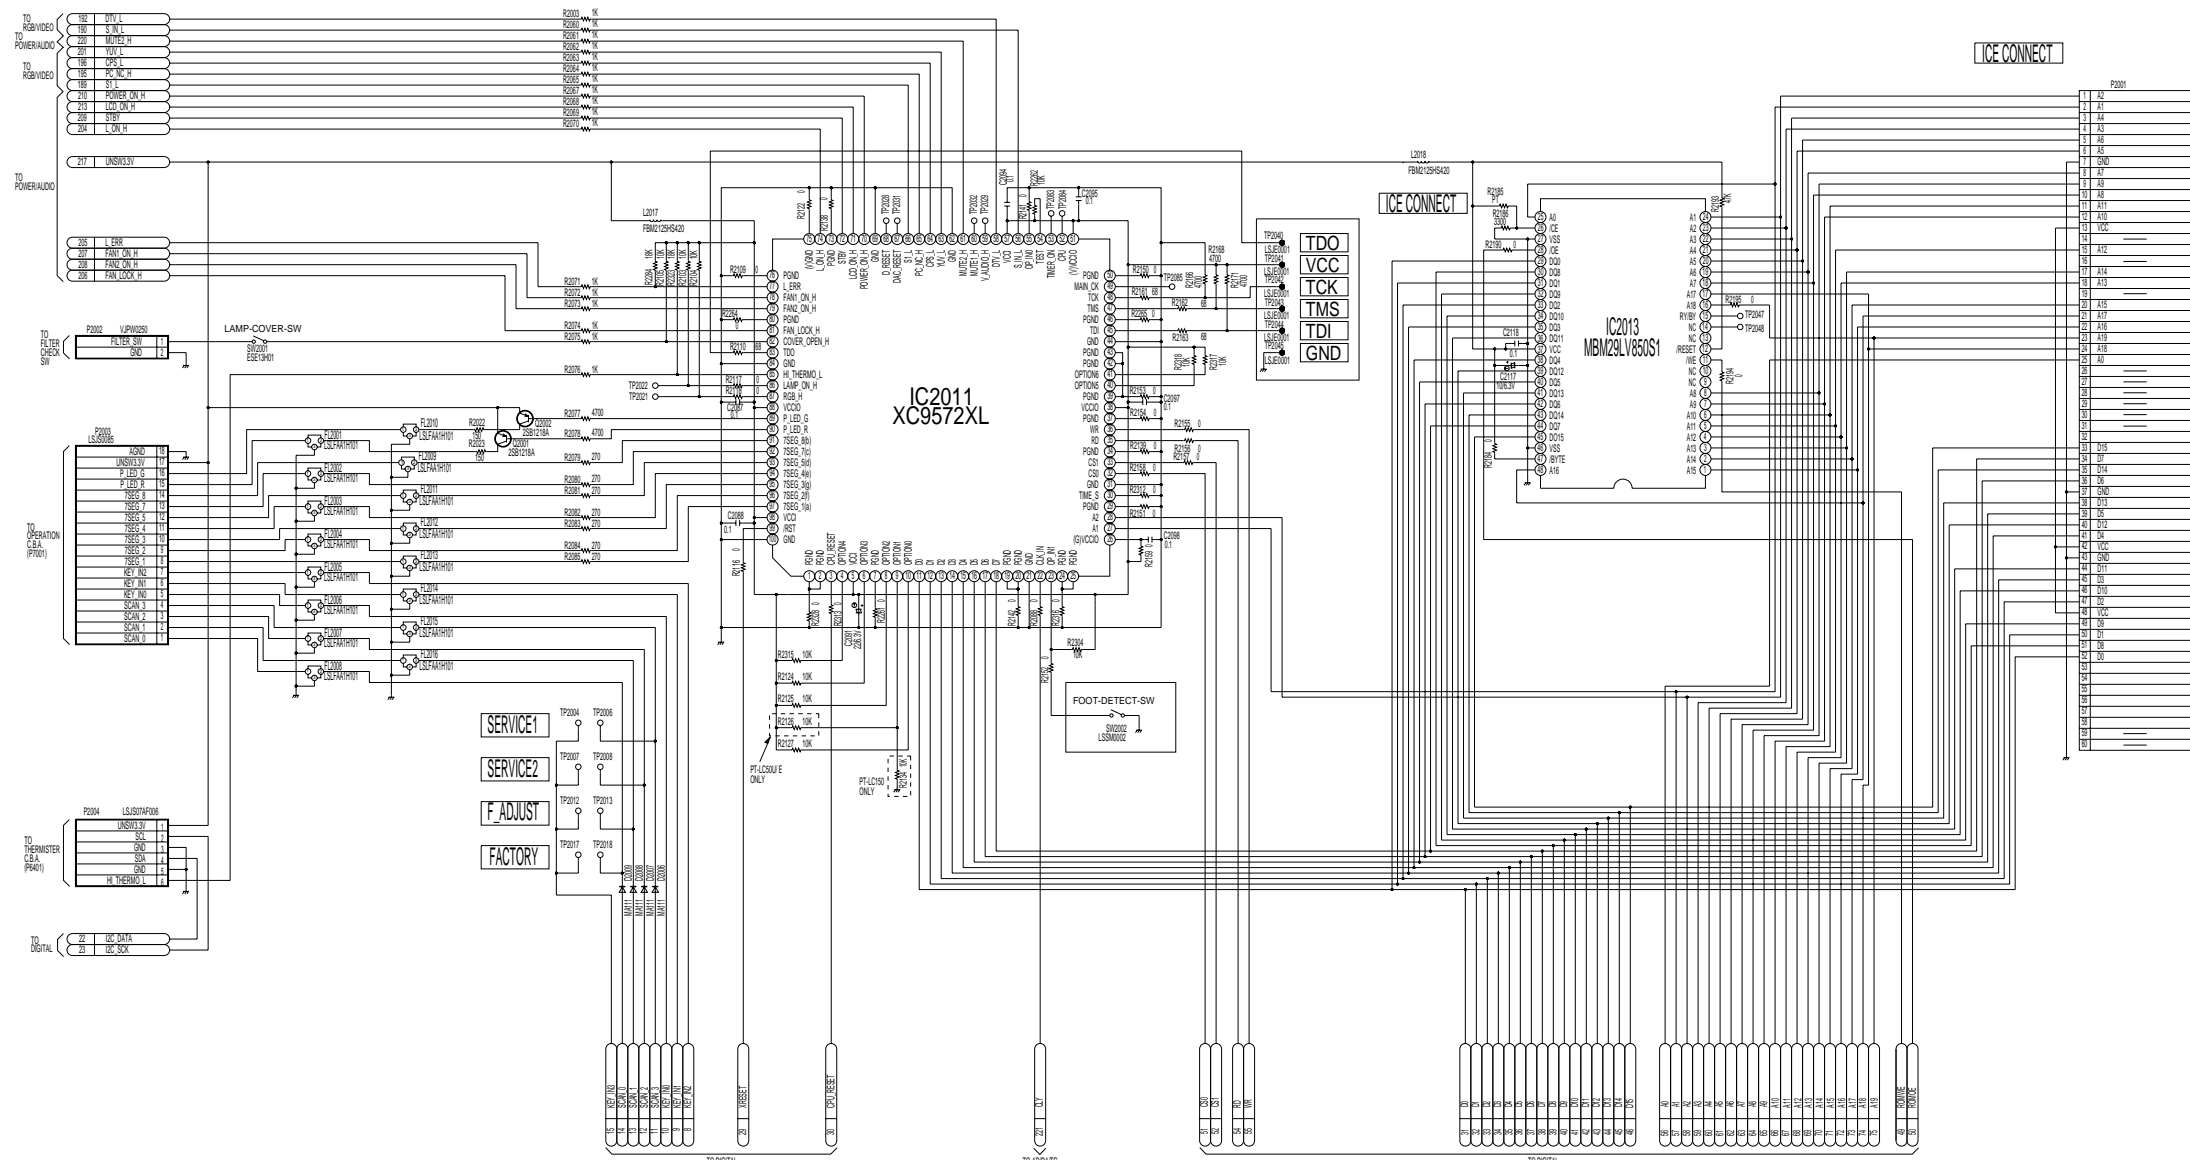

OPERATION

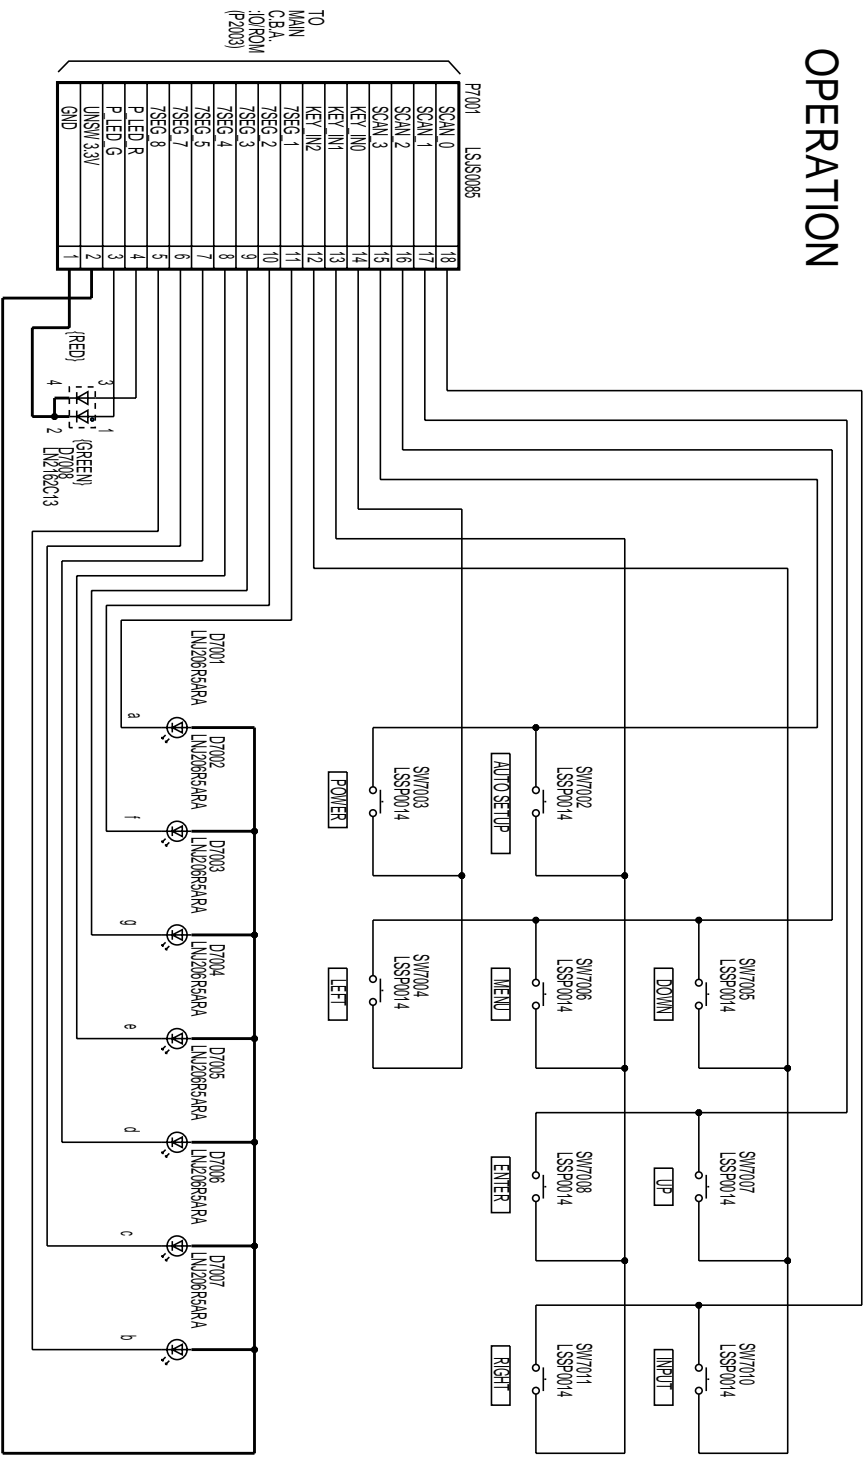


1

2

3

4


THERMISTOR

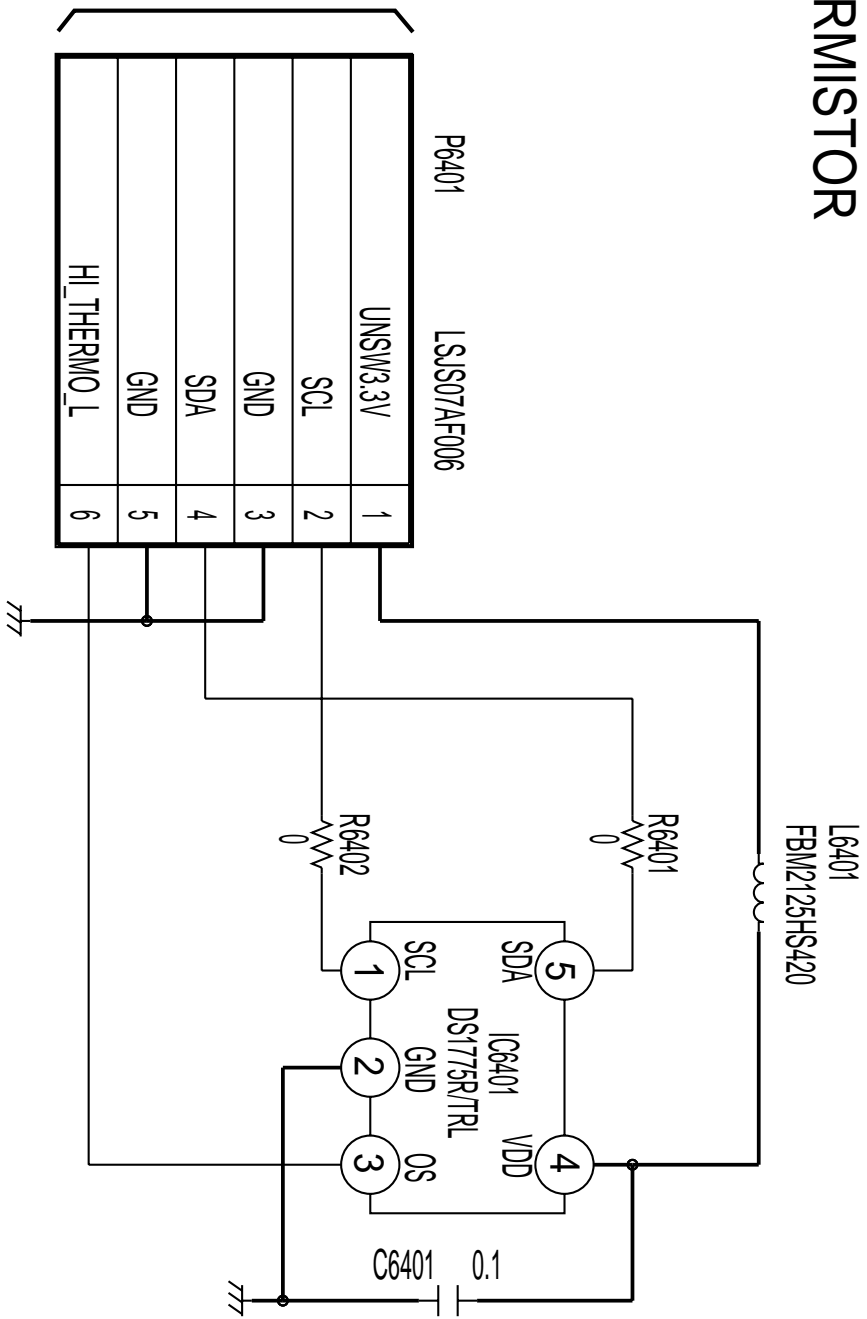


1 2 3

TO
MAIN C.B.A.
:I:OROM
(P2004)

OVERALL

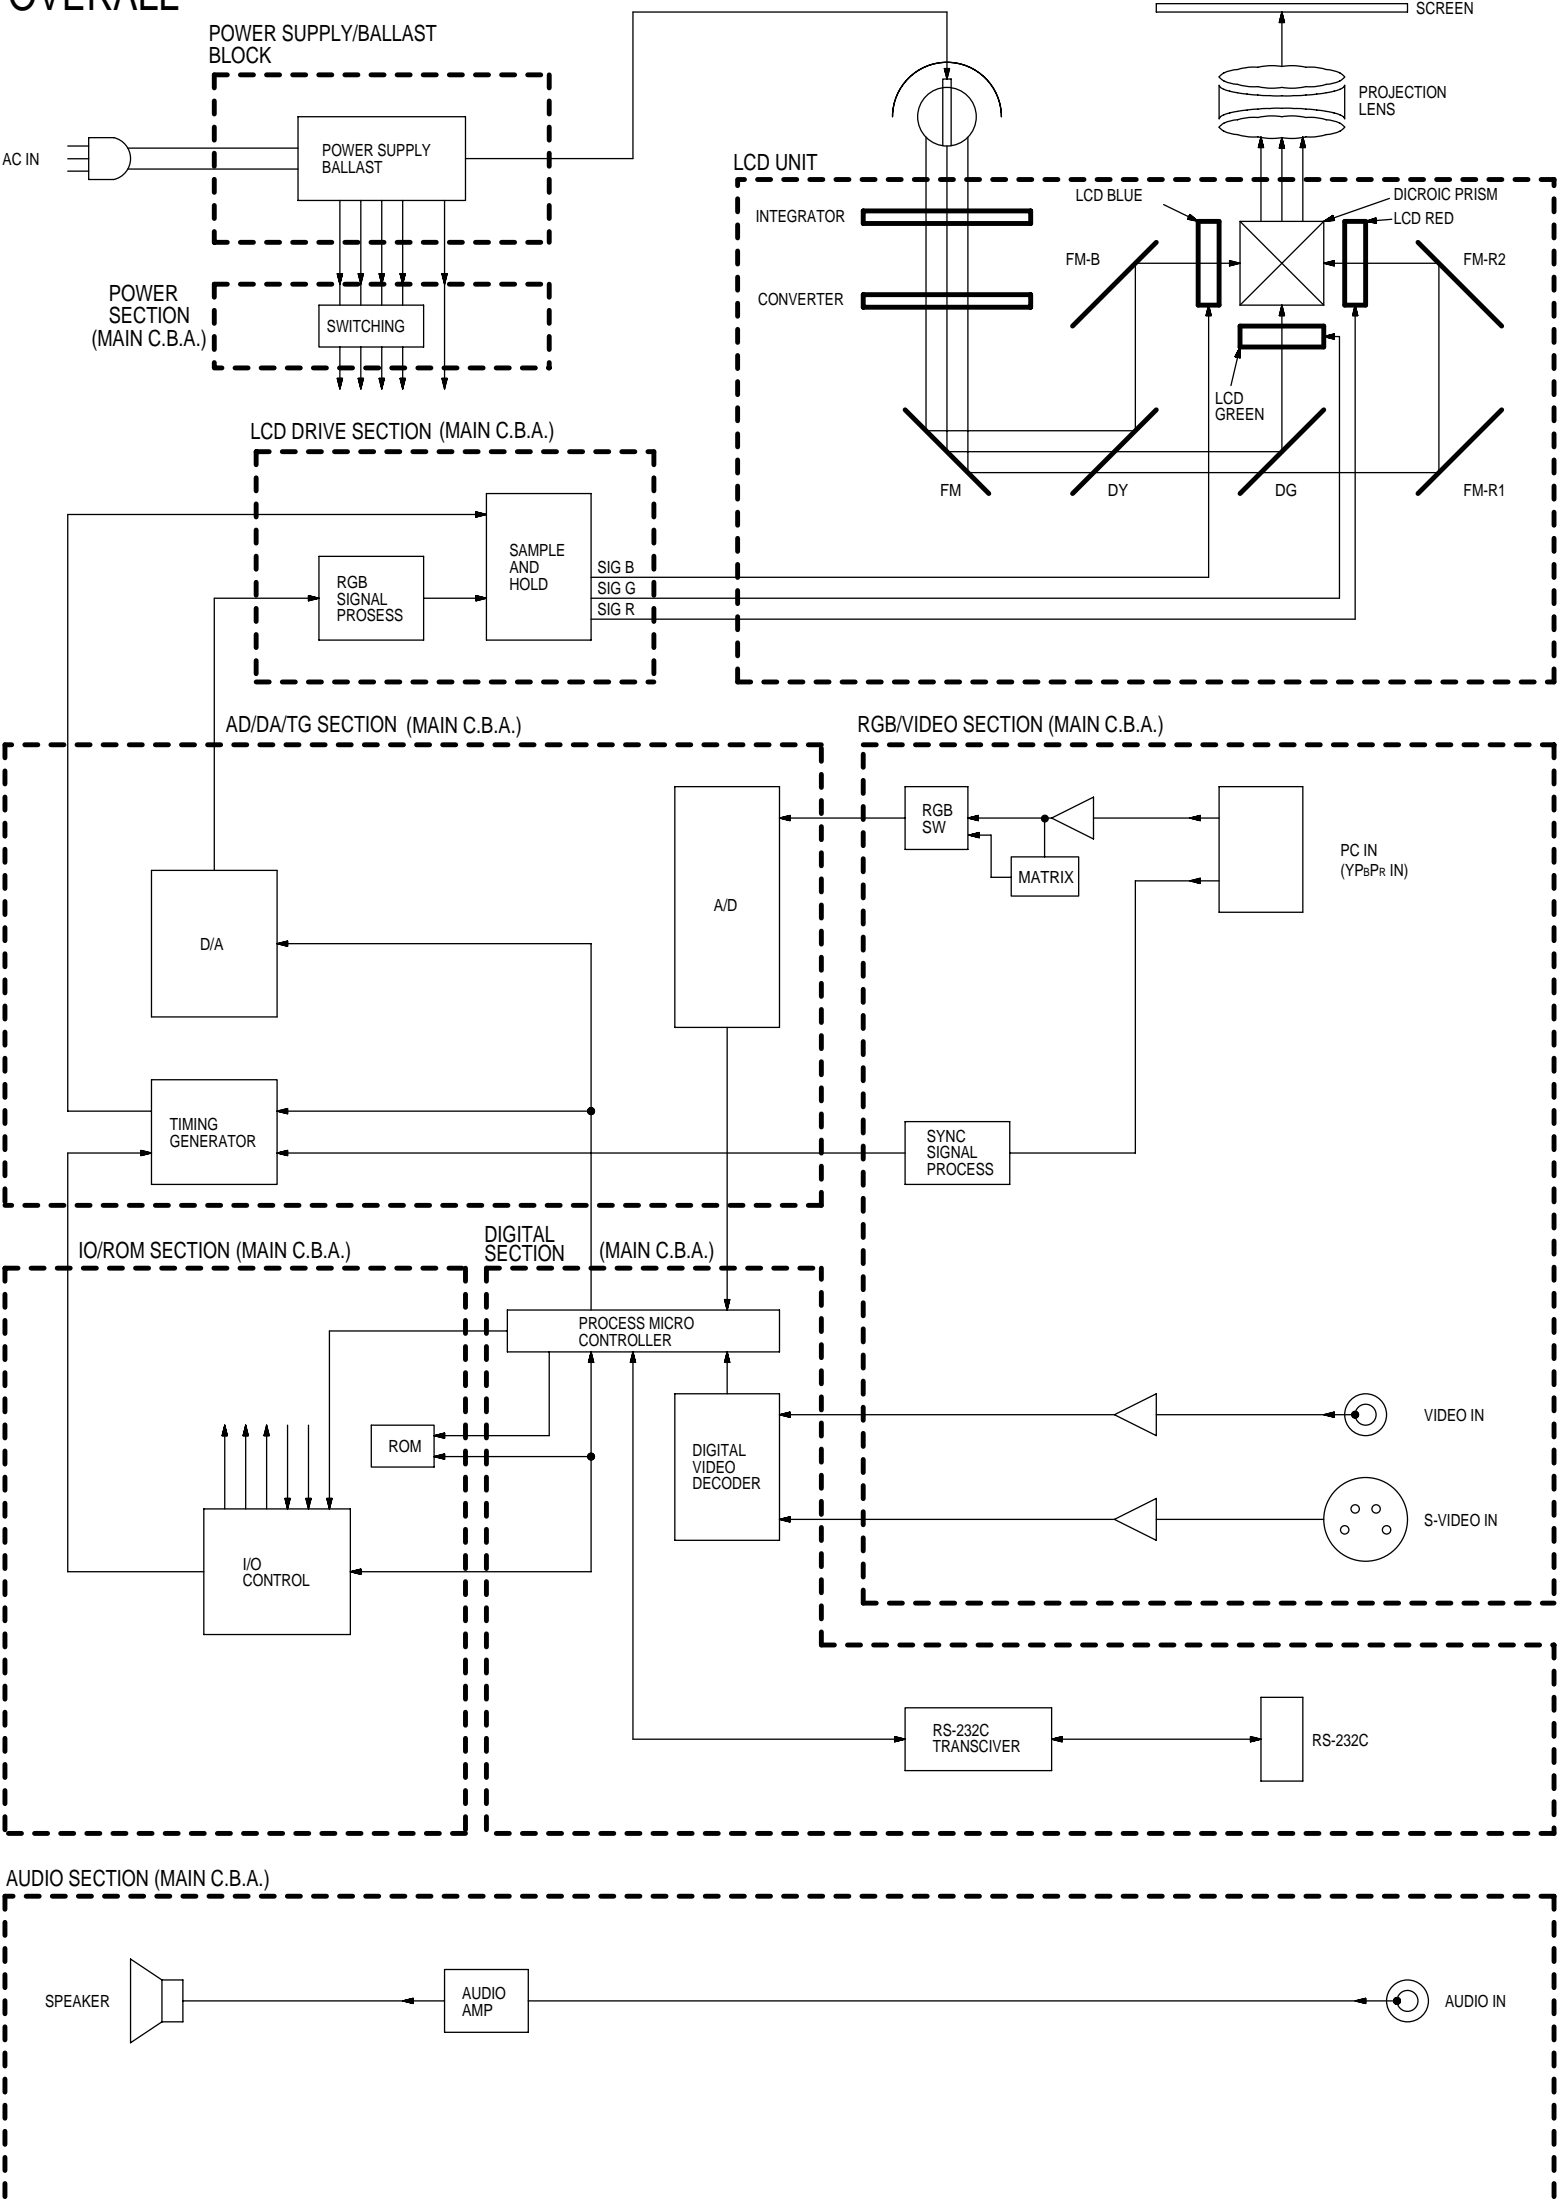


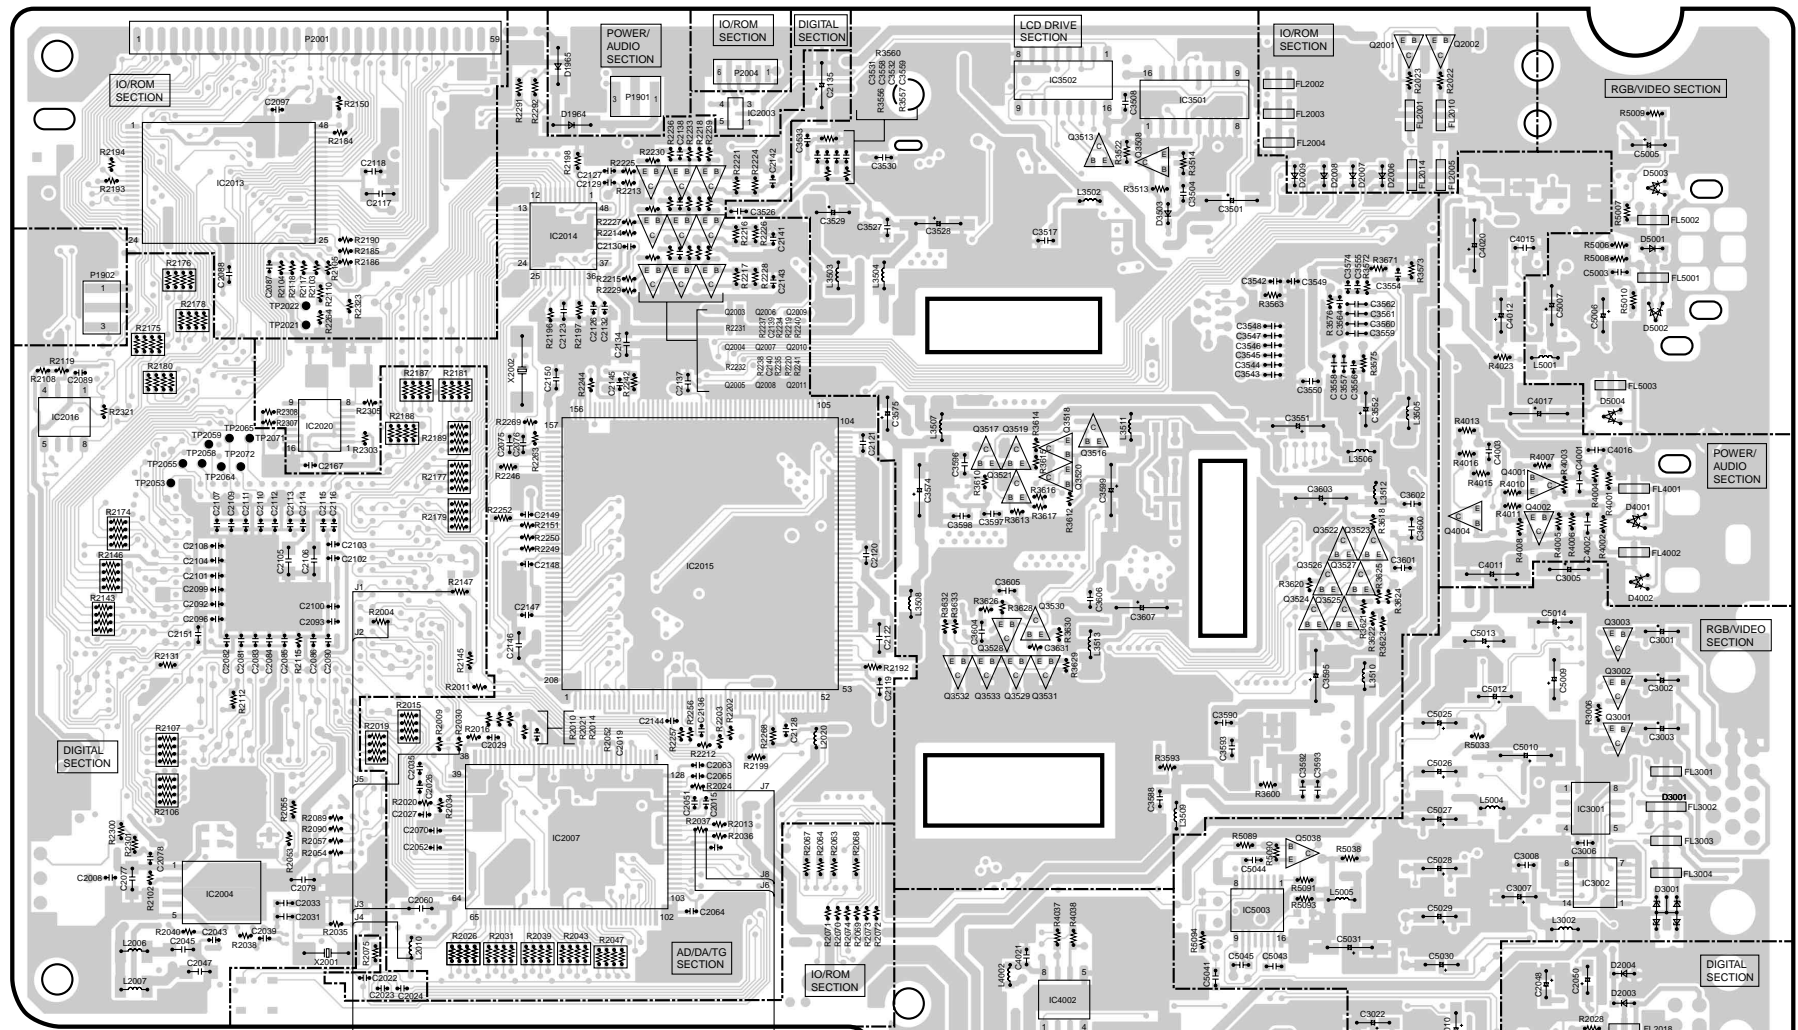

(COMPONENT SIDE)

(QUADRUPLE PATTERNS)


SYNC SELECT C.B.A.

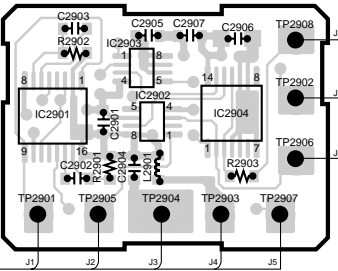


- J1: Blue
- J2: Green
- J3: Brown
- J4: Yellow
- J5: Red
- J6: Black
- J7: White
- J8: Orange

IMPORTANT SAFETY NOTICE:
 COMPONENTS IDENTIFIED BY THE SINE
 Δ HAVE SPECIAL CHARACTERISTICS
 IMPORTANT FOR SAFETY.
 WHEN REPLACING ANY OF THESE
 COMPONENTS, USE ONLY THE
 SPECIFIED PARTS.

NOTE: SYNC SELECT C.B.A.
 From certain lot of manufacturing process,
 SYNC SELECT C.B.A. will be absorbed by
 MAIN C.B.A. .

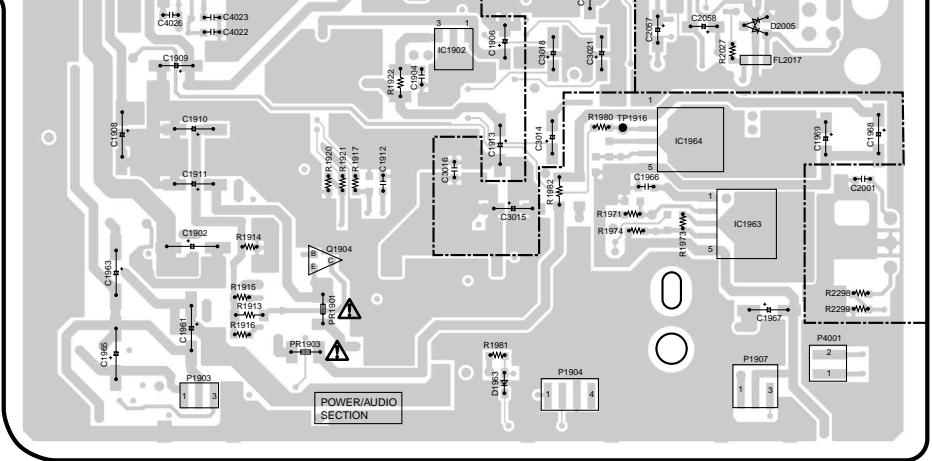

MAIN C.B.A.

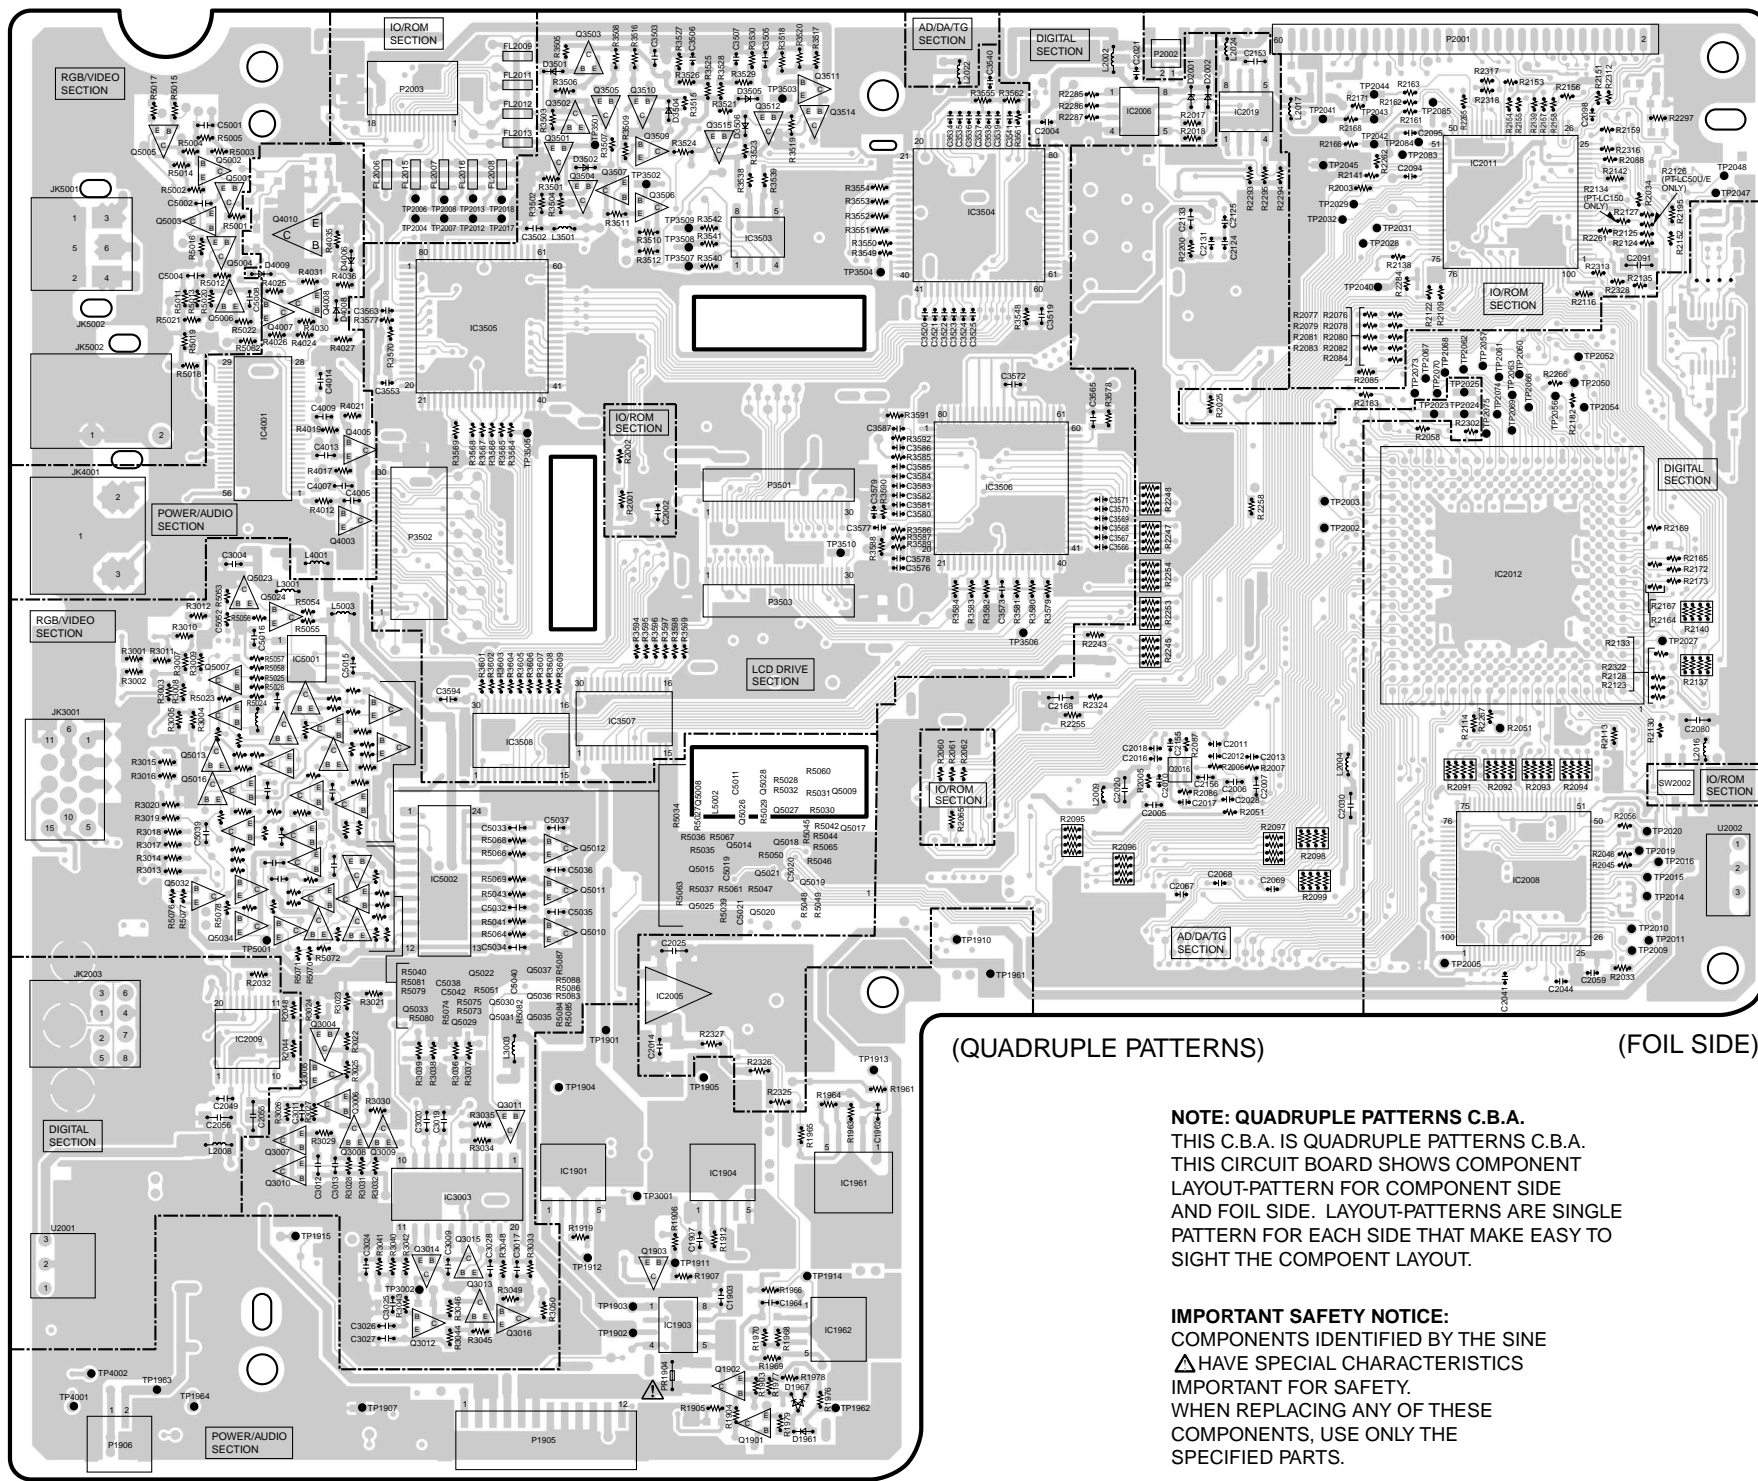


(QUADRUPLE PATTERNS)

(FOIL SIDE)


NOTE: QUADRUPLE PATTERNS C.B.A.
 THIS C.B.A. IS QUADRUPLE PATTERNS C.B.A.
 THIS CIRCUIT BOARD SHOWS COMPONENT
 LAYOUT-PATTERN FOR COMPONENT SIDE
 AND FOIL SIDE. LAYOUT-PATTERNS ARE SINGLE
 PATTERN FOR EACH SIDE THAT MAKE EASY TO
 SIGHT THE COMPONENT LAYOUT.

IMPORTANT SAFETY NOTICE:
 COMPONENTS IDENTIFIED BY THE SINE
 ▲ HAVE SPECIAL CHARACTERISTICS
 IMPORTANT FOR SAFETY.
 WHEN REPLACING ANY OF THESE
 COMPONENTS, USE ONLY THE
 SPECIFIED PARTS.


OPERATION C.B.A.

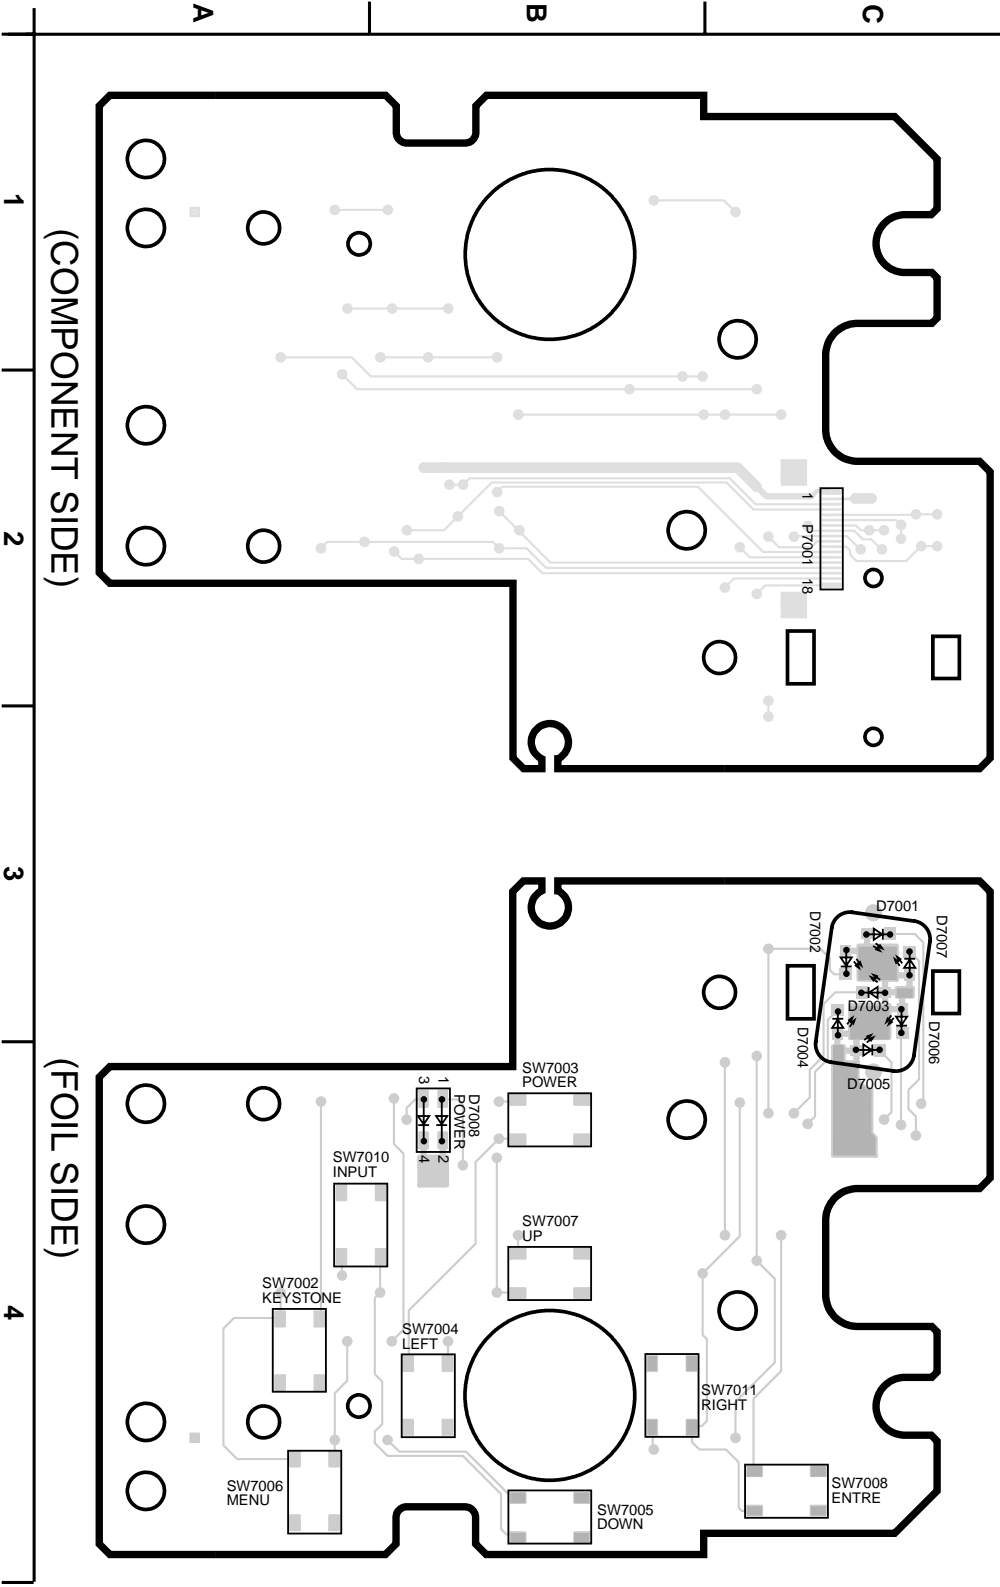

THERMISTOR C.B.A.

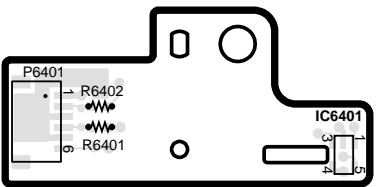

(COMPONENT SIDE)

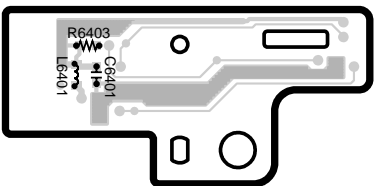

(FOIL SIDE)

1

2

3

A

B

