


# Service Manual

VHS-C Movie

**Panasonic** **VHS-C**  
PAL  
**HQ**

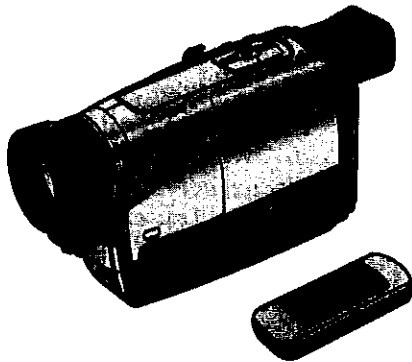

**NV-RZ1EG/B/E/EN/  
ENC/A  
NV-RZ2EG/B/EN  
CZ-MECHANISM**

## SPECIFICATIONS

| ITEM                   | SPECIFICATION   | ITEM                  | SPECIFICATION  |
|------------------------|---|-----------------------|--|
| POWER                  | Source: Battery Pack; 7.2 V DC<br>AC Adaptor; 7.9 V DC<br>Consumption (Battery Operation)<br>; 4.7 W  | FINDER                | 0.24-inch Electronic Finder  |
|                        |   | VIDEO                 | HEADS: 4 Rotary heads, 1 flying erase head<br>OUTPUT: PHONO CONNECTOR;<br>1.0 Vp-p 75 Ω terminated   |
| VIDEO RECORDING SYSTEM | 4 rotary heads, helical scanning system PAL   | AUDIO                 | HEADS: 1 Stationary head (Normal-Mono)<br>OUTPUT: PHONO CONNECTOR;<br>-6 dB (47kΩ loaded)/less than 1 kΩ   |
| TAPE FORMAT            | VHS-C Cassette Tape (Tape width 12.7 mm)  | OPERATING TEMPERATURE | 0-40 °C  |
| TAPE SPEED             | SP mode : 23.3 mm/s<br>LP mode : 11.7 mm/s<br>(Except NV-RZ1EG/E, NV-RZ2EG)<br>Record/Playback Time:<br>SP mode : 1 hour with NV-EC60<br>LP mode : 2 hours with NV-EC60<br>(Except NV-RZ1EG/E, NV-RZ2EG)<br>FF/REW Time:<br>less than 2.5 min. with NV-EC45XG | OPERATING HUMIDITY    | 10-80 %  |
|                        |   | WEIGHT                | Approx. 740g (without Battery Pack)  |
| CAMERA                 | PICK-UP ELEMENT:<br>CCD (Charge Coupled Device)   | DIMENSIONS            | 81 (W) X 118 (H) X 231 (D) mm  |
|                        | STANDARD ILLUMINATION: 1,400 lx   |                       |  |
|                        | LENS: 20 : 1 Power Zoom Lens<br>F1.6 Focal Length; 2.9-58 mm<br>Digital AI Auto Focus/Auto Iris<br>Filter Diameter ; 43 mm  |                       |  |
|                        | IMAGE SENSOR: 1/5-inch CCD Image Sensor   |                       |  |
|                        |   | STANDARD ACCESSORIES  | 1 pc. AC Adaptor<br>1 pc. Battery Pack<br>1 pc. Cassette Adaptor<br>(Except NV-RZ1B, NV-RZ2B)<br>1 pc. Shoulder Strap<br>1 pc. DC Output Cable<br>1 pc. Battery for Cassette Adaptor<br>(Except NV-RZ1B, NV-RZ2B)<br>1 pc. AC Cord<br>1 pc. AV Cord<br>1 pc. Remote Controller<br>1 pc. Lithium Battery<br>2 pc. Battery for Remote Controller |

Weight and dimensions shown are approximate.  
Specifications are subject to change without notice.

# Panasonic

© 2000 Matsushita Electric Industrial Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

**⚠ WARNING**

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

**CONTENTS**

|  | Page      |   | Page      |
|--|-----------|---|-----------|
| <b>1 INTRODUCTION</b> .....  | <b>3</b>  | <b>9.6. SYSTEM CONTROL &amp; SERVO SCHEMATIC DIAGRAM</b><br>..... | <b>30</b> |
| 1.1. INTRODUCTION1 .....   | 3         | <b>9.7. SUB SERVO SCHEMATIC DIAGRAM</b> .....                     | 33        |
| 1.2. INTRODUCTION2 .....   | 3         | <b>9.8. E.V.F. SCHEMATIC DIAGRAM</b> .....                        | 33        |
| 1.3. FEATURE COMPARISON CHART .....                                | 3         | <b>9.9. POWER SCHEMATIC DIAGRAM</b> .....                         | 34        |
| <b>2 SERVICE CAUTION</b> .....                                     | <b>4</b>  | <b>9.10. MIC SCHEMATIC DIAGRAM</b> .....                          | 35        |
| 2.1. EEPROM DATA FOR SPARE PARTS OF THE<br>CAMERA/MAIN C.B.A. .... | 4         | <b>9.11. AVS OUT SCHEMATIC DIAGRAM</b> .....                      | 35        |
| 2.2. SERVICE EXTENSION CABLES. ....                                | 4         | <b>9.12. MIC UNIT SCHEMATIC DIAGRAM</b> .....                     | 36        |
| 2.3. SET-UP FOR ADJUSTMENT OF TATSUJIN. ....                       | 5         | <b>9.13. CCD FLEX. CARD SCHEMATIC DIAGRAM</b> .....               | 36        |
| <b>3 SERVICE INFORMATION</b> .....                                 | <b>6</b>  | <b>10 CIRCUIT BOARD ASSEMBLIES</b> .....                          | <b>37</b> |
| 3.1. SERVICE INFORMATION DISPLAY (GENERAL<br>DESCRIPTION) .....    | 6         | 10.1. CAMERA/MAIN C.B.A. ADDRESS INFORMATIONS ....                | 37        |
| 3.2. ERROR CODE DISPLAY .....                                      | 6         | 10.2. CAMERA/MAIN (COMPONENT SIDE) C.B.A. ....                    | 38        |
| 3.3. SERVICE MODE 3 .....  | 6         | 10.3. CAMERA/MAIN C.B.A. (FOIL SIDE) .....                        | 39        |
| 3.4. INSERTING THE BUTTON-TYPE BATTERY .....                       | 7         | 10.4. E.V.F. C.B.A. ....  | 40        |
| <b>4 GENERAL DESCRIPTIONS</b> .....                                | <b>8</b>  | 10.5. CCD FLEX. CARD C.B.A. ....                                  | 40        |
| <b>5 ADJUSTMENT PROCEDURES</b> .....                               | <b>13</b> | 10.6. MIC UNIT .....  | 40        |
| 5.1. DISASSEMBLY PROCEDURES .....                                  | 13        | <b>11 EXPLODED VIEWS &amp; PARTS LIST</b> .....                   | <b>41</b> |
| 5.2. DISASSEMBLY PROCEDURES OF LENS UNIT .....                     | 15        | 11.1. VTR MECHANISM SECTION (1) .....                             | 41        |
| <b>6 ABBREVIATIONS</b> .....                                       | <b>16</b> | 11.2. VTR MECHANISM SECTION (1) PARTS LIST .....                  | 42        |
| <b>7 WAVEFORM TABLE</b> .....                                      | <b>18</b> | 11.3. VTR MECHANISM SECTION (2) .....                             | 43        |
| <b>8 BLOCK DIAGRAMS</b> .....                                      | <b>19</b> | 11.4. VTR MECHANISM SECTION (2) PARTS LIST .....                  | 43        |
| 8.1. CAMERA BLOCK DIAGRAM .....                                    | 19        | 11.5. VTR MECHANISM SECTION (3) .....                             | 44        |
| 8.2. SYSTEM CONTROL & SERVO/POWER BLOCK<br>DIAGRAM .....           | 20        | 11.6. VTR MECHANISM SECTION (3) PARTS LIST .....                  | 44        |
| 8.3. VIDEO BLOCK DIAGRAM .....                                     | 22        | 11.7. CAMERA LENS SECTION .....                                   | 45        |
| <b>9 SCHEMATIC DIAGRAMS</b> .....                                  | <b>23</b> | 11.8. CAMERA LENS SECTION PARTS LIST .....                        | 45        |
| 9.1. CAMERA 1 SCHEMATIC DIAGRAM .....                              | 23        | 11.9. FRAME & CASING SECTION (1) .....                            | 46        |
| 9.2. CAMERA 2 SCHEMATIC DIAGRAM .....                              | 24        | 11.10. FRAME & CASING SECTION (1) PARTS LIST .....                | 47        |
| 9.3. LENS DRIVE SCHEMATIC DIAGRAM .....                            | 26        | 11.11. PACKING PARTS & ACCESSORIES SECTION .....                  | 48        |
| 9.4. AUDIO SCHEMATIC DIAGRAM .....                                 | 27        | 11.12. PACKING PARTS & ACCESSORIES SECTION PARTS<br>LIST .....    | 49        |
| 9.5. VIDEO SCHEMATIC DIAGRAM .....                                 | 28        | <b>12 ELECTRICAL REPLACEMENT PARTS LIST</b> .....                 | <b>50</b> |

# 1 INTRODUCTION

## 1.1. INTRODUCTION1

This service manual contains technical information which will allow service personnel's to understand and service this model.

Please place orders using the parts list and not the drawing reference numbers.

Please place orders using the parts list and not the drawing reference numbers.

If the circuit is changed or modified, this information will be followed by supplement service manual to be filed with original service manual.

### Note 1:

Adjustment procedure for Mechanism-Chassis is separate volume.

Please refer to following manual for detail of adjustment procedure for Mechanism-Chassis.

**Order number for adjustment procedure of Mechanism-Chassis : VMD9912044C8**

### Note 2:

These movie cameras are using the different AC adaptor as follows.

VSK0541: For NV-RZ1B, NV-RZ2B.

VSK0564: For NV-RZ1EG/E/EN/ENC/A, NV-RZ2EG/EN.

The Service manuals for above AC adaptors are separately is used as follows.

**Order number for AC Adaptor-----VSK0541/545 (VW-AS7) : VMD9812066C8**

**Order number for AC Adaptor-----VSK0564 :VMD9907028C3**

## 1.2. INTRODUCTION2

### Note 1:

NV-RZ1EN, NV-RZ2EN series has to versions depends on countries.

Detail as follows.


| Model No. (Version) | NV-RZ1EN | NV-RZ1ENC | NV-RZ2EN |
|---------------------|----------|-----------|----------|
| PACKING CASE        | VPG0C68  | VPG0C70   | VPG0C77  |
| AC CORD             | VJA0664  | VJA0664   | VJA0664  |

## 1.3. FEATURE COMPARISON CHART

|   | RZ1EG/E | RZ1B   | RZ1A   | RZ1EN/ENC | RZ2EG  | RZ2B   | RZ2EN  |
|---|---------|--------|--------|-----------|--------|--------|--------|
| CCD Image Sensor                        | 1/5"    | 1/5"   | 1/5"   | 1/5"      | 1/5"   | 1/5"   | 1/5"   |
| CCD Capacity (Pixels)                   | 450k    | 450k   | 450k   | 450k      | 450k   | 450k   | 450k   |
| B/W EVF LCD Monitor                     | 0.24"   | 0.24"  | 0.24"  | 0.24"     | 0.24"  | 0.24"  | 0.24"  |
| EVF LCD Capacity (Pixels)               | 76,800  | 76,800 | 76,800 | 76,800    | 76,800 | 76,800 | 76,800 |
| Recording/Playback mode                 | SP      | SP/LP  | SP/LP  | SP/LP     | SP     | SP/LP  | SP/LP  |
| Optical Zoom Ratio                      | x20     | x20    | x20    | x20       | x20    | x20    | x20    |
| Digital Zoom (x40/x100/x220)            | 1/1/1   | 1/1/1  | 1/1/1  | 1/1/1     | 1/1/1  | 1/1/1  | 1/1/1  |
| Shortest Image Distance (From 1st Lens) | 1.8m    | 1.8m   | 1.8m   | 1.8m      | 1.8m   | 1.8m   | 1.8m   |
| Remote Controller                       | x       | x      | x      | x         | l      | l      | l      |




How to use extension cables.

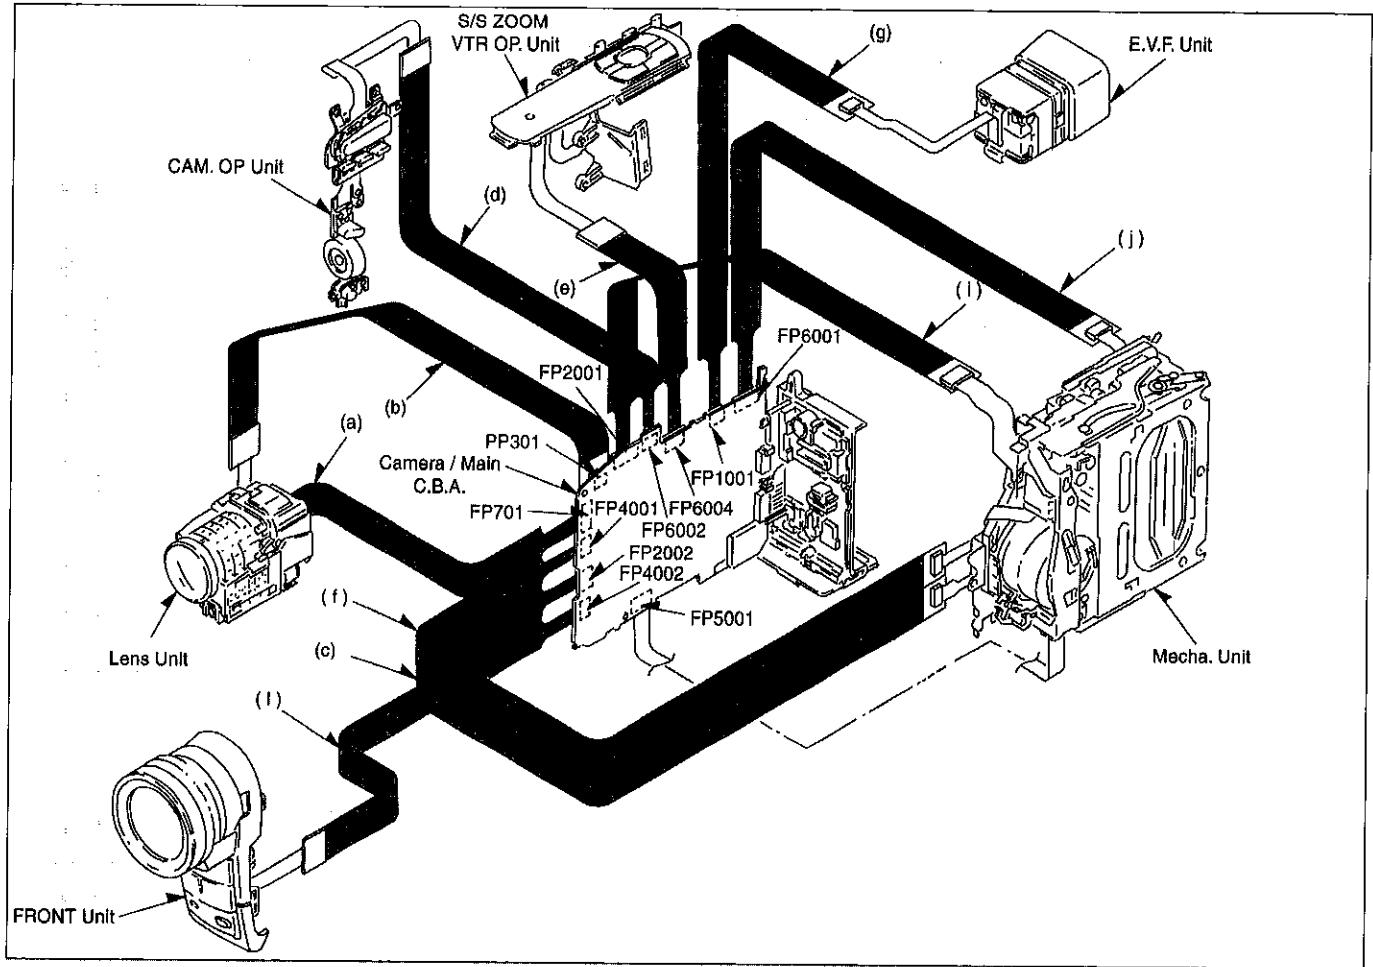


### 2.3. SET-UP FOR ADJUSTMENT OF TATSUJIN.

For adjustments with Tatsujin, it is not necessary to open the side case.  
Just open the small cover on the side case (L) by a small screwdriver.

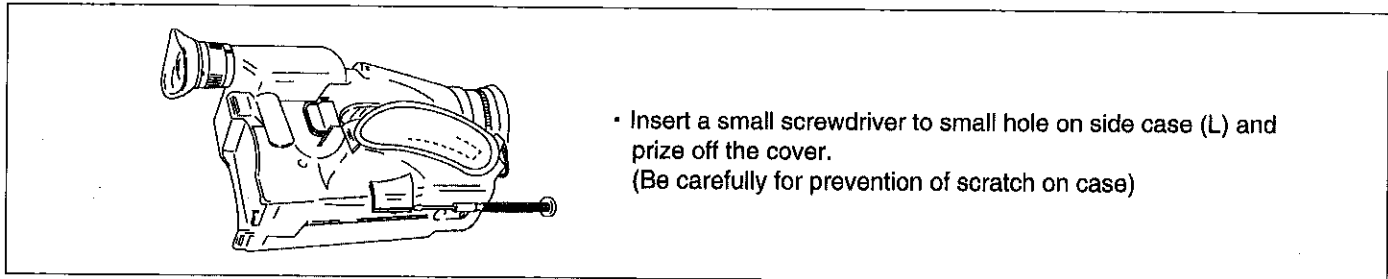

And insert the Extension board and connect Tatsujin cable as follows.

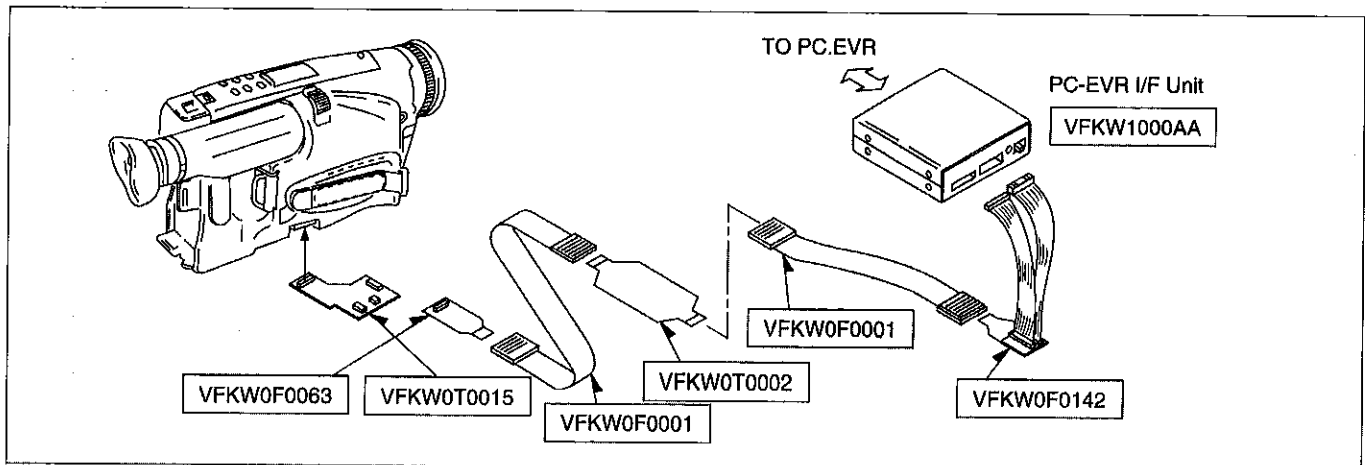

### 3 SERVICE INFORMATION

#### 3.1. SERVICE INFORMATION DISPLAY (GENERAL DESCRIPTION)

- This Movie Camera has SERVICE INFORMATION DISPLAY function which enables quick trouble-shooting.
- The Service Information Display is available with the following procedures.
- The Service Information is displayed on the EVF and LCD monitor. (There are 4 kinds of SERVICE MODES as shown below.) In the OSD Line Output Mode, the service Information can be also displayed on the TV.

| MODE NAME                   | FUNCTION   | How to use. (Push the following keys simultaneously more than 2 sec.) |                     |                                  |
|-----------------------------|--|---|---------------------|----------------------------------|
| <b>OSD Line Output MODE</b> | • Checking the EVF information on the TV monitor.                                    | FOCUS/SET<br><SIDE CASE(R)>   | STOP<br><TOP PANEL> | DATE/TITLE<br><SIDE CASE(L) TOP> |
| MODE NAME                   | FUNCTION   | How to use. (Push following keys simultaneously more than 2 sec.)     |                     |                                  |
| <b>SERVICE MODE 1</b>       | • Remaining Battery A/D Value.<br>• Safety Device.<br>• Capstan/Cylinder injections. | COLOUR<br><SIDE CASE(R)>  | STOP<br><TOP PANEL> | DATE/TITLE<br><SIDE CASE(L) TOP> |
| MODE NAME                   | FUNCTION   | How to use. (After choosing SERVICE MODE 1, Push [DATE/TITLE] key.)   |                     |                                  |
| <b>SERVICE MODE 2</b>       | • Reference Voltage A/D Value.<br>• Mechanism positio.n<br>• Serial key code.        | DATE/TITLE  |                     |                                  |
| MODE NAME                   | FUNCTION   | How to use. (After choosing SERVICE MODE 2, Push [DATA/TITLE] key.)   |                     |                                  |
| <b>SERVICE MODE 3</b>       | • ERROR CODE Display.  | DATE/TITLE  |                     |                                  |
| MODE NAME                   | FUNCTION   | How to use. (After choosing SERVICE MODE 3, Push [DATE/TITLE] key.)   |                     |                                  |
| <b>SERVICE MODE 4</b>       | • PG SHIFTER ADJUSTMENT.   | DATE/TITLE  |                     |                                  |

#### 3.2. ERROR CODE DISPLAY

- When an undesirable condition occurs, the power will be turned off. (Except zoom & focus motor lock condition. Since this model, "ERROR CODE" is not automatically displayed on the EVF and LCD monitor, also the CAMERA LED is not flashed.)
- By turning on Service Mode 3, it is possible to check what kind of undesirable condition has occurred, even after the ERROR CODE has disappeared. (The ERROR CODE is stored with EEPROM-IC.)

**NOTE1:**


The content of all Service Modes (Service Mode 1-Service Mode 4) is the previous models.  
So, please refer to the following Technical Information for the details.  
Order Number for Technical Information : **VMD9512M138**

**NOTE2:**

Since Service Mode 3 (ERROR CODE display) is important for the service, the outline is shown below.

#### 3.3. SERVICE MODE 3

- After undesirable conditions occurred, you can see what kind of error occurred by turning on the Service Mode 3.

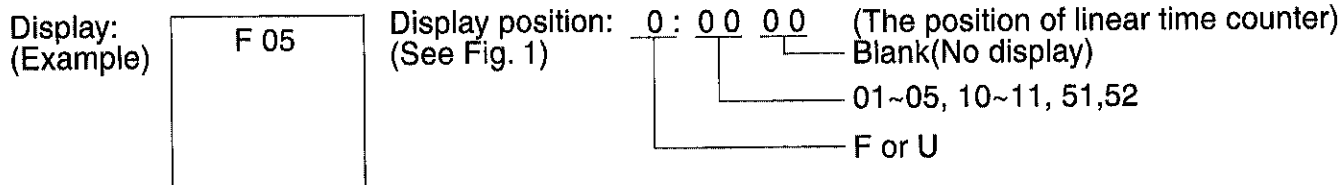

| Display | Condition        | The Power off timing                |
|---------|------------------|-------------------------------------|
| F01     | T-REEL LOCK      | After 1 minute (flashing the LED)   |
| F02     | S-REEL LOCK      |                                     |
| F03     | UNLOADING LOCK   |                                     |
| F04     | LOADING LOCK     |                                     |
| F05     | CYLINDER LOCK    |                                     |
| F51     | FOCUS MOTOR LOCK |                                     |
| F52     | ZOOM MOTOR LOCK  |                                     |
| U10     | DEW DETECTION    | After 18 minutes (flashing the LED) |
| U20     | HEAD CLOGGING    | Not turning off                     |

### 3.4. INSERTING THE BUTTON-TYPE BATTERY

Before setting the data and time, insert the button-type battery (supplied).

#### 1 Open the [BACKUP BATTERY] Cover.

#### 2 Insert the button-type battery so that its (+) side is visible.

#### 3 Close the [BACKUP BATTERY] COVER.

- Before inserting or removing the button-type battery, be sure to set the [CAMERA/OFF/VCR] Switch to [OFF].
- When the button-type battery is exhausted, the [🔋] Indication flashes. In this case, replace it with a new CR2025 battery.  
(The life of the battery is about 1 year.)
- To mark it easier to remove of the button-type battery, use a pointed object.
- When you remove the button-type battery, be careful not to drop it.

- **Keep the button-type battery out of the reach of children.**
- Make sure you insert the battery with its poles correctly aligned.
- The internal clock works even when the Movie Camera is turned off, and it consumes power from the button-type battery.

#### CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.

#### Note:

The lithium battery is a critical component (Type No.: CR2025 Manufactured by Panasonic.)

It must never be subjected to excessive heat or discharge.

It must therefore only be fitted in equipment designed specifically for its use.

Replacement batteries must be of the same type and manufacture.

They must be fitted in the same manner and location as the original battery, with the correct polarity contacts observed.

Do not attempt to re-charge the old battery or re-use it for any other purpose.

It should be disposed of in waste products destined for burial rather than incineration.

#### CAUTION

Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type recommended by the equipment manufacturer.  
Discard used batteries according to manufacturer's instructions.

#### VARNING

Explosionsfara vid felaktigt batteribyte.  
Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren.  
Kassera använt batteri enligt fabrikantens instruktion.

#### ADVARSEL!


Lithiumbatteri - Eksplosionsfare ved fejlagtig håndtering.  
Udskiftning må kun ske med batteri af samme fabrikat og type.  
Levér det brugte batteri tilbage til leverandøren.

#### VAROITUS


Paristo voi räjähtää, jos se on virheellisesti asennettu.  
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

# 4 GENERAL DESCRIPTIONS


- 19 Reverse Search Button [←SEARCH] (→ 60)  
Rewind/Review/High-Speed Rewind Button [←] (→ 66, 72, 74)
- 20 Stop Button [■] (→ 66)  
Recording Check Button [RE] (→ 50)
- 21 Forward Search Button [SEARCH+] (→ 60)  
Fast Forward/Cue Button [▶▶] (→ 74)
- 22 White Balance Button [W.B.] (→ 102)
- 23 Pause Button [II] (→ 74)  
Playback Button [▶] (→ 66)  
Backlight Button [BLC] (→ 112)
- 24 Cassette Compartment Window (→ 40)
- 25 Cassette Compartment Lock Button [LOCK] (→ 40)
- 26 Battery Holder (→ 24)

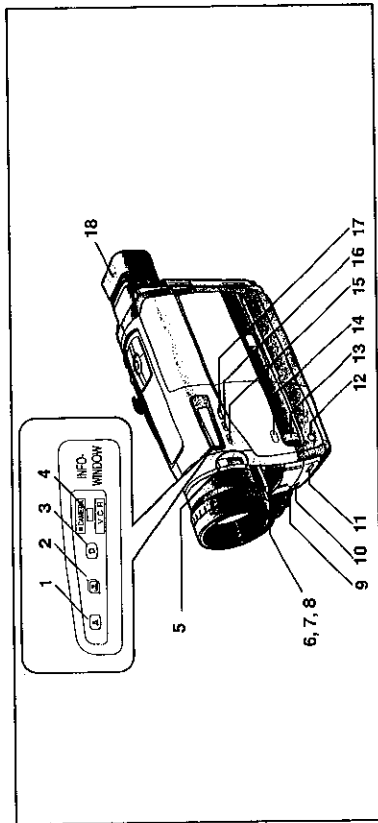


- 10 Tally Lamp (→ 58)
  - 11 Fade Button [FADE] (→ 76, 90)
  - 12 Focus Button [FOCUS] (→ 106)  
Item Set Button [SET] (→ 28)  
Tracking Button (→ 72)
  - 13 Multi-Function Dial [▲▼/MF/TRACKING] (→ 28, 72, 106)
  - 14 Menu Button [MENU] (→ 28)
  - 15 Auto Exposure Selector Button [PROG. AE] (→ 58, 102, 106, 108)
  - 16 Digital Image Store Button [STORE] (→ 124)  
Digital Image Superimpose Button [OFF/ON] (→ 124, 126, 128)
  - 17 Colour Selector Button for Digital Image [COLOUR] (→ 126)
  - 18 Eyecup
- Controls and Components**
- 1 Auto Mode Indication Lamp [LAMP] (→ 56)
  - 2 Super Image Stabilizer Indication Lamp [S.I.] (→ 80, 86)
  - 3 Digital Effect Indication Lamp [E] (→ 80, 86, 90)
  - 4 Camera Mode Lamp [CAMERA] (→ 56)  
VCR Mode Lamp [VCR] (→ 56, 66)  
Camera Mode: The lamp lights red.  
VCR Mode: The lamp lights green.
  - 5 0-Lux Recording Switch [0 LUX OFF/ON] (→ 96)
  - 6 White Balance Sensor (→ 144)
  - 7 Remote Control Sensor (→ 114)  
(Only on model NV-RZ2EG)
  - 8 Built-in Infra red Beam Emitters (→ 96)
  - 9 Microphone

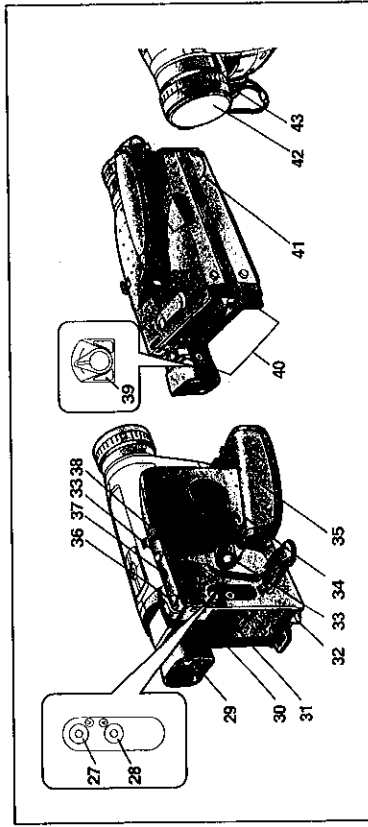

- 27 Video Output Socket [V] (→ 68, 136)
- 28 Audio Output Socket [A] (→ 66, 136)
- 29 Finder (→ 46, 76)  
Due to limitations in LCD production technology, there may be some tiny bright or dark spots on the Finder screen, the whole screen may have a slight colour cast, and flickering may occur. However, this is not a malfunction and does not affect the recorded picture.
- 30 Cover of the Buttons-type Battery's Compartment [BACKUP BATTERY] (→ 50)
- 31 DC Input Socket [DC IN] (→ 18)
- 32 Battery Eject Lever [←BATTERY EJECT] (→ 24)
- 33 Recording Start/Stop Buttons (→ 54, 56)  
Use either of these buttons depending on the recording angle.
- 34 Off/On Mode Selector Switch [CAMERA/OFF/VCR] (→ 24, 56, 56, 76)
- 35 Grip Belt (→ 46)
- 36 Cassette Eject Button [▲ EJECT] (→ 40)
- 37 Date/Time/Title Button [DATE/TITLE] (→ 54, 122)
- 38 Zoom Lever [W/T] (→ 62, 88)
- 39 Eyepiece Corrector Lever (→ 46)
- 40 Shoulder Strap Holders (→ 48)
- 41 Tripod Receptacle
- 42 Lens Cap (→ 46, 102)
- 43 Lens Cap Holder (→ 46)

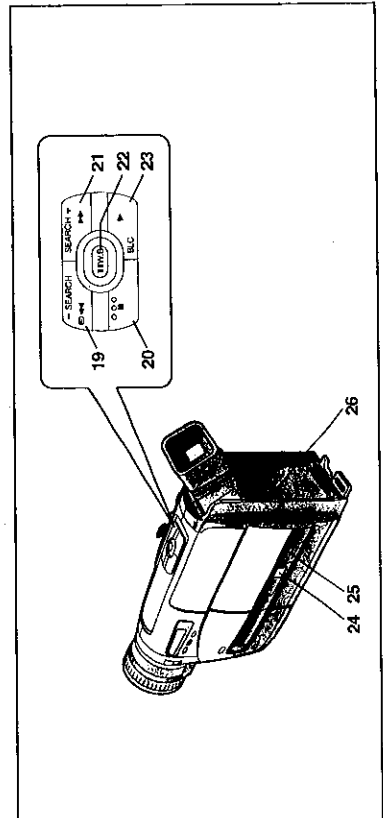



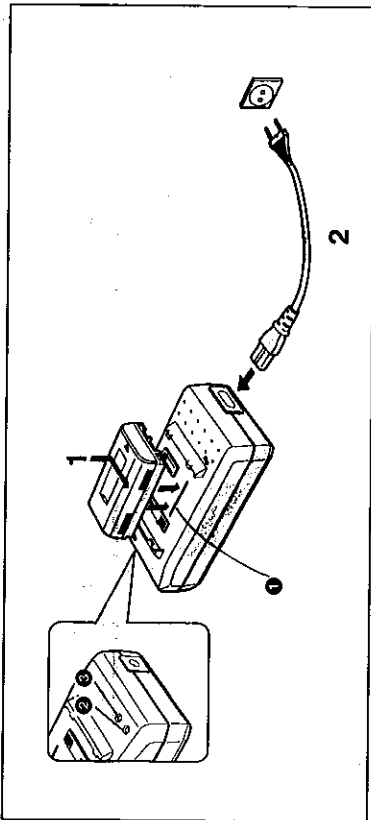

**Removing the Battery**

- Slide it in the opposite direction of that indicated in step 1 above.
- Charge the Battery at a room temperature between 10°C and 30°C.
- When charging, do not connect the DC Input Lead to the AC Adaptor.
- During recording or charging, the Battery becomes warm. However, this is normal.
- If you charge the Battery when it is not yet discharged, the [CHARGE] Lamp may flash briefly and then go out. This indicates that the Battery is fully charged. Therefore, this is not an indication of a malfunction.

**Charging the Battery**

- Charge the Battery before using it.
- Attach the Battery.**
    - Align the Battery with line ① and push it in the direction of the arrow while holding it down.
  - Securely connect the AC Mains Lead to the AC Adaptor and an AC Mains Socket.**
    - The [POWER] Lamp ② lights and then the [CHARGE] Lamp ③ flashes and charging starts.
    - If the [CHARGE] Lamp ③ does not flash even though the Battery is attached, remove the Battery and then re-attach it.
- Charging Lamp [CHARGE]**
- During charging  
 Lit: The Battery can already be used to operate the Movie Camera but it is not yet fully charged.  
 (Approx. 30-minute battery charge)  
 Off: The Battery is fully charged.


**Charging Time and Maximum Continuous Recording Time in the Manual Recording Mode**

| Battery Model No.   | Charging Time for a Full Charge | Max. Continuous Recording Time |
|---------------------|---------------------------------|--------------------------------|
| CGR-V610 (supplied) | 80 min.                         | 120 min.                       |
| CGR-V620            | 145 min.                        | 240 min.                       |
| CGR-V616            | 310 min.                        | 480 min.                       |

| Battery Model No.   | Approx. 30-Minute Charge | Max. Continuous Recording Time |
|---------------------|--------------------------|--------------------------------|
| CGR-V610 (supplied) | 30 min.                  | 50 min.                        |
| CGR-V620            |                          |                                |
| CGR-V616            |                          |                                |

(The times shown in the above charts are approximations.)

Maximum Continuous Recording Time means the duration of continuous recording performed at an ambient temperature of 25°C and 60% relative humidity. In actual recording, however, the use of the zoom and other functions increases the power consumption, and higher or lower temperatures reduce the Battery's ability to generate electricity. Therefore, the actual recording time per Battery may be approximately 30%–50% shorter than listed above.

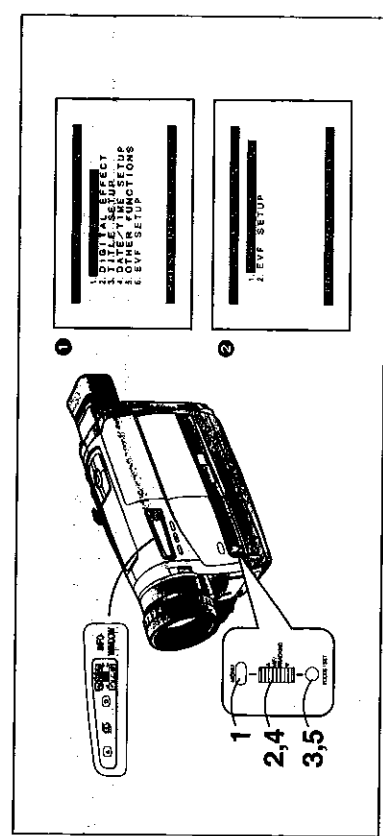

**Using the Menus**

This Movie Camera displays the settings of various functions in menus to make it easy to select the desired functions and settings.

- Press the [MENU] Button.**  
 When you press this button while the [CAMERA] Lamp is lit in red, the Camera Mode Menu ① appears. When you press this button while the [VCR] Lamp is lit in green, the VCR Mode Menu ② appears.
- Turn the [▲▼] Dial to select the desired sub-menu.**  
 Turning the [▲▼] Dial changes the highlighted item.
- Press the [SET] Button to display the selected sub-menu.**

- Turn the [▲▼] Dial to select the item to be set.**
- Press the [SET] Button to set the selected item to the desired mode.**

**Exiting the Menu**

- Press the [MENU] Button again.
- The method for making settings on the [DATE/TIME SETUP] Sub-Menu (→ 52) and [EVF SETUP] Sub-Menu (→ 38) differs slightly from that of other Sub-Menus.
  - You can display the menu during playback, but not during recording. Also, it is possible to start playback while the menu is displayed, but if you start recording, the displayed menu disappears.
  - The settings that you have selected on the menus are maintained when you turn the Movie Camera off. However, if you disconnect the power supply unit (Battery or AC Adaptor) from the Movie Camera before turning it off, the selected settings may not be maintained.

### Setting the Date and Time


If you select the [DATE/TIME SETUP] Sub-Menu of the [CAMERA FUNCTIONS] Main-Menu, the menu shown above appears.

The initial setting of date and time is 0:00, 1st January, 2000. For example: To set the clock to 15th October 2000, 14:30.

- 1 Turn the [▲▼] Dial to set to [2000].  
The years change in the following order:  
...1990...1991...2000...2099...1990...
- 2 Press the [SET] Button to select [MONTH].
- 3 Turn the [▲▼] Dial to set to [10].
- 4 Press the [SET] Button to select [DATE].
- 5 Turn the [▲▼] Dial to set to [15].
- 6 Press the [SET] Button to select [HOUR].

- 7 Turn the [▲▼] Dial to set to [14].
- 8 Press the [SET] Button to select [MIN.].
- 9 Turn the [▲▼] Dial to set to [30].
- 10 Press the [MENU] Button to finish the date and time setting.  
The operation of the clock starts from [00] seconds. Pressing the button one more time makes the menu disappear.

- If you select the [DATE/TIME SETUP] Sub-Menu when the button-type battery is not inserted into the Movie Camera or is exhausted, the Main-Menu disappears and the [RE] Indication flashes instead. Insert a new button-type battery (→ 50) and then set the date and time again.
- As the Movie Camera's built-in clock is subject to slight imprecision, be sure to check the indicated time before recording.
- The clock employs the 24-hour system.

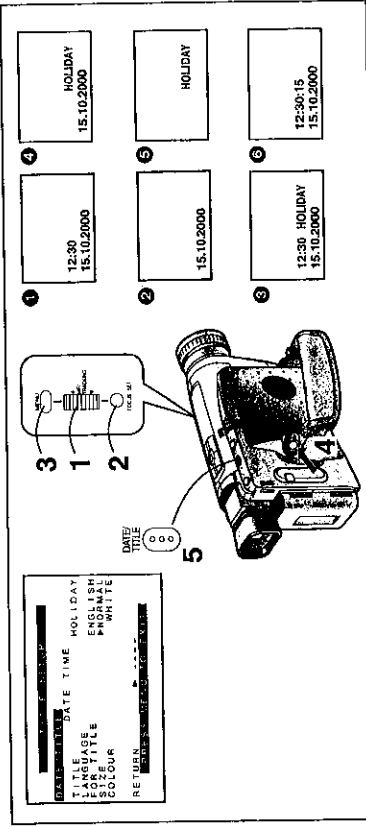

### Recording with the Time and/or Date Superimposed in the Picture


After displaying the [TITLE SETUP] Sub-Menu... (→ 28)

- 1 Turn the [▲▼] Dial to select [DATE/TITLE].
- 2 Press the [SET] Button to select the desired indication.
  - The indications change in the order: ① to ⑥.
  - ① Date and Time → ② Date → ③ Date, Time and Title → ④ Date and Title → ⑤ Title → ⑥ Date and Time with seconds →
- If the button-type battery for the built-in clock is not inserted into the Movie Camera or is exhausted, only the title is displayed. (→ 50)
- 3 Press the [MENU] Button to exit the menu.
  - The selected Date/Time/Title Indication appears.

- 4 Press the Recording Start/Stop Button to start recording.

- Deleting the Date/Time/Title Indication
- 5 During recording or when the Movie Camera is in the Recording Pause Mode, press the [DATE/TITLE] Button to make the Date/Time/Title Indication disappear.

- After turning the Movie Camera off and then on again, the previously selected Date/Time/Title Indication is no longer displayed. To make it appear again, press the [DATE/TITLE] Button once.
- Be sure to turn the Movie Camera off before removing the Battery or disconnecting the AC Adaptor. Disconnecting the power supply while the Movie Camera is on erases the Date/Time/Title Indication (→ 118) stored in memory.

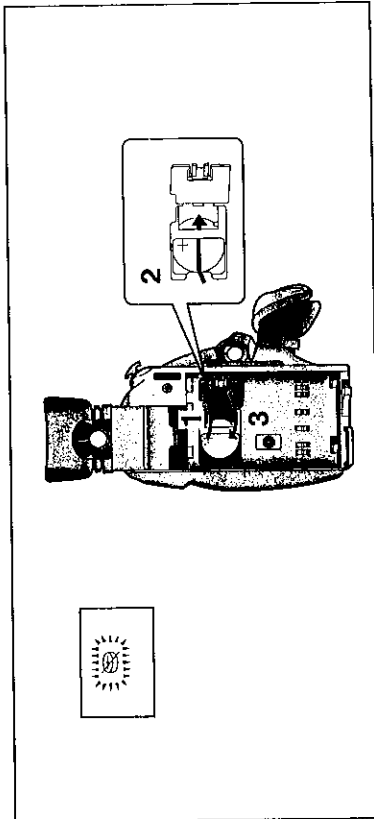

### Inserting the Button-type Battery

Before setting the date and time, insert the button-type battery (supplied).


- 1 Open the [BACKUP BATTERY] Cover.
- 2 Insert the button-type battery so that its (+) side is visible.
- 3 Close the [BACKUP BATTERY] Cover.

- Before inserting or removing the button-type battery, be sure to set the [CAMERA/OFF/VC/R] Switch to [OFF].
- When the button-type battery is exhausted, the [RE] Indication flashes. In this case, replace it with a new CR2025 battery.  
(The life of the battery is about 3 years.)

- To make it easier to remove the button-type battery, use a pointed object.
- When you remove the button-type battery, be careful not to drop it.
- Keep the button-type battery out of the reach of children.
- Make sure you insert the battery with its poles correctly aligned.
- The internal clock works even when the Movie Camera is turned off, and it consumes power from the button-type battery.

### CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.

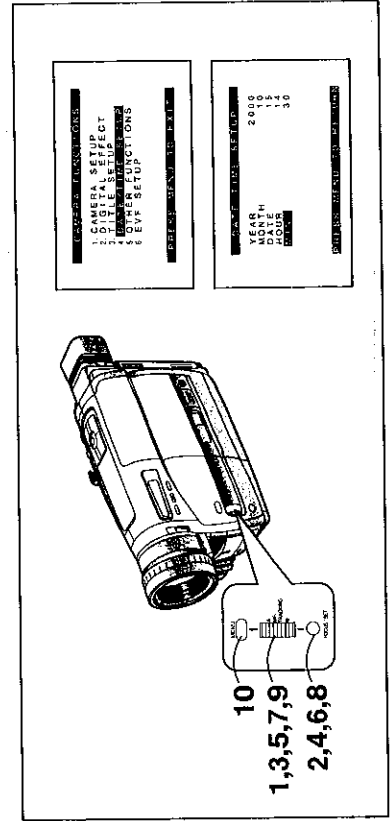


### Recording in Dark Places Without Any Illumination

**(0 Lux Night View Function)**  
 This function is convenient when you want to record at night in places without any illumination, for example for observing the behaviour of nocturnal animals, etc. In this mode, the Movie Camera emits infrared rays which makes it possible to record subjects that are invisible to the naked eye.

- 1 Set the [0 LUX OFF/ON] Switch to [ON] to make the [0LUX] Indication appear.
  - The built-in Infrared Beam Emitters ① light. Be careful not to cover them with your hand when recording.

- Do not use the 0 Lux Night View Function in brightly lit places and never aim the Movie Camera against the sun, as this could cause irreparable damage.
- The playback picture of scenes recorded with the 0 Lux Night View Function will be in Black and White.

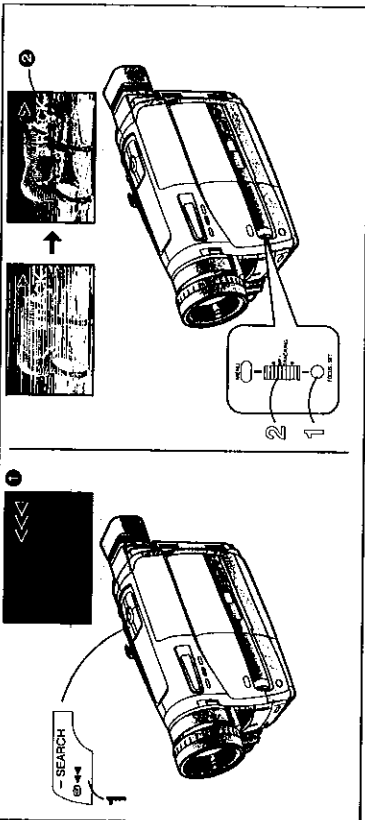

### High-Speed Rewinding


- 1 Press the [REW] Button for more than 1 second in the Stop Mode.
  - The [SEARCH] Indication ① appears.
  - During High-Speed Rewinding, the tape winding sound is louder.
  - When rewinding the tape to the beginning, the Movie Camera automatically changes over from the High-Speed Rewinding Mode to the Rewinding Mode near the beginning of the tape, and it switches over to the Stop Mode at the beginning of the tape.
  - If you press the [REW] Button during High-Speed Rewinding, it takes several seconds before the tape is stopped, in order to protect the tape from damage.
  - When using the Remote Controller, press the [REW] Button for more than 3 seconds.
  - (Only on model NV-RZ2EG) During High-Speed Rewinding, the Tape Counter shows [0:00:00].

### Eliminating Picture Distortions (Manual Tracking Adjustment)

This Movie Camera adjusts the tracking automatically. With certain cassettes, however, the tracking adjustment may not be precise. In this case, adjust the tracking manually.


- 1 Press the [FOCUS/SET] Button briefly during playback.
  - The [TRACK] Indication ② appears.
- 2 Turn the [TRACKING] Dial to adjust the tracking.
  - The Tracking Adjustment Function is automatically cancelled when the [TRACKING] Dial is not turned for 5 seconds.
  - It may not be possible to remove the noise bars completely.
  - It is not possible to adjust the tracking when a menu is displayed.
  - If you eject the cassette after adjusting the tracking, the adjusted setting is cancelled.

**Returning to the Auto Tracking Mode**  
 Press [FOCUS/SET] Button for more than 2 seconds during playback.

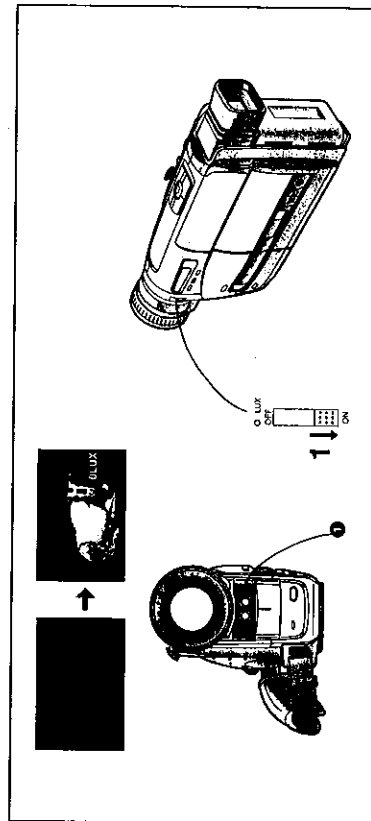

- If you change the setting of the [0 LUX OFF/ON] Switch during recording, a switching noise is also recorded.
- When recording with the 0 Lux Night View Function, it is not possible to adjust the white balance manually or to cancel the manually adjusted white balance setting.
- It is not possible to use any of the Programme AE Modes when the 0 Lux Night View Mode is activated.
- When using the 0 Lux Night View Function, the subject should be within 3 metres from the Movie Camera.
- When the automatic focusing is not precise, adjust the focus manually.
- If you do not want the Tally Lamp to light during recording using the 0 Lux Night View Function, set [TALLY LAMP] on the [CAMERA SETUP] Sub-Menu to [OFF].
- As the iris is fully opened in the 0 Lux Night View Mode, subjects in white or other light colours may be recorded whitish, blurred and with weak contrast.

**Cancelling the 0 Lux Night View Function**  
 Set the [0 LUX OFF/ON] Switch to [OFF] to make the [0LUX] Indication disappear.

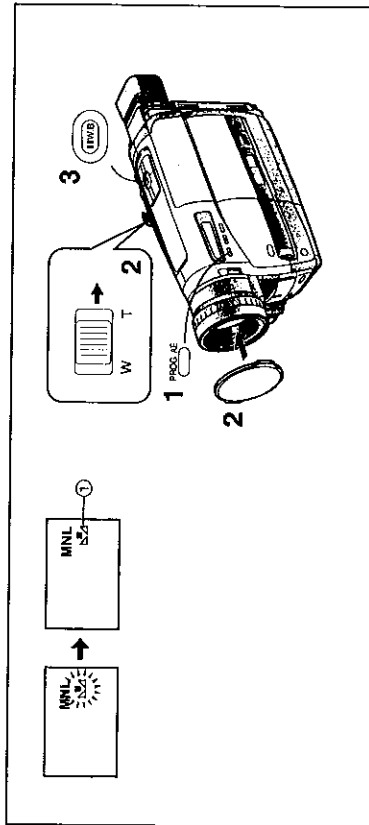

### Recording with Manual White Balance Adjustment

With this Movie Camera, you can also adjust the white balance manually. Use this mode for special subjects and recording conditions such as listed (→ 100), for which the Full Auto Mode is not suitable, and for light sources outside the range (→ 104). Use it also when you want to manually adjust the white balance for each new scene as professionals do.


- 1 Press the [PROG. AE] Button repeatedly until an indication other than [AUTO] appears.
- 2 Attach the White Lens Cap and zoom in until the entire screen is white.
- 3 Aim the Movie Camera at the subject that you want to record and then keep the [W.B] Button pressed until the [W.B] Indication ① stops flashing and remains lit.

- When the Sepia Mode, Black & White Mode or 0 Lux Night View Mode is used, it is not possible to manually adjust the white balance. Also, if the white balance was manually adjusted, it cannot be cancelled, even if you press the [W.B] Button.

**In the following cases, the [W.B] Indication flashes:**

- During manual adjustment of the white balance. (If the surroundings are dark and the white balance cannot be adjusted, the [W.B] Indication keeps flashing.)
- When the previously set white balance setting is maintained.
- When you are trying to adjust the white balance in the digital zoom range (21x - 220x). In this case, first adjust the white balance in the optical zoom range (1x - 20x) and then zoom back to within the Digital Zoom Mode.


**Cancelling the Manual White Balance Mode**  
 Press the [W.B] Button once. Or, press the [PROG. AE] Button repeatedly until the [AUTO] Indication appears.

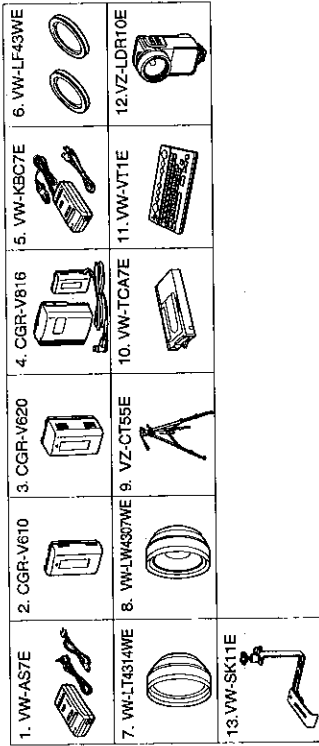

9. Tripod
  10. Cassette Adaptor
  11. Video Titrer
  12. IR/Video DC Light (Halogen & infra-red)  
(It requires the Shoe Adaptor for attaching to the Movie Camera.)
  13. Shoe Adaptor for attaching the IR/Video DC Light
- Some accessories are not available in some countries.

**Optional Accessories**

1. AC Adaptor
2. Battery Pack (Lithium-Ion)
3. Battery Pack (Lithium-Ion)
4. Battery Pack (Lithium-Ion)
5. Car Battery Charger
6. Filter Kit
7. Tele Conversion Lens
8. Wide Conversion Lens

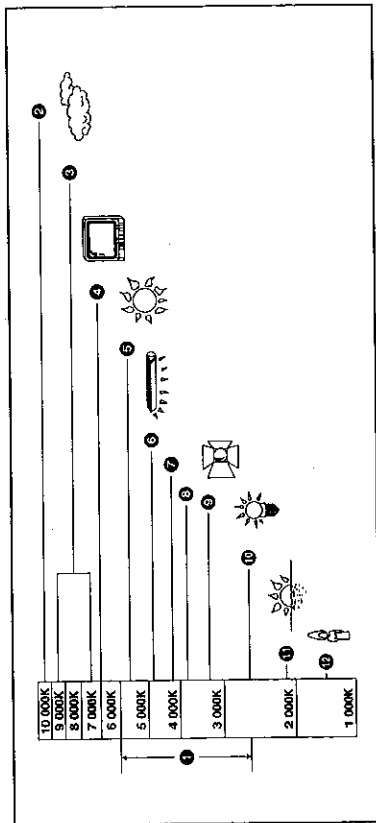

1 Control range of this Movie Camera's Auto White Balance Adjustment Mode

- 2 Blue sky
- 3 Cloudy sky (Rain)
- 4 TV screen
- 5 Sunlight
- 6 White fluorescent lamp
- 7 2 hours after sunrise or before sunset
- 8 1 hour after sunrise or before sunset
- 9 Halogen light bulb
- 10 Incandescent light bulb
- 11 Sunrise or sunset
- 12 Candlelight

**Colour Temperature and White Balance Adjustment**

Every light source has its own colour temperature measured in Kelvin (K). The higher the Kelvin value, the more bluish the light; the lower the value, the more reddish the light. The Kelvin value is related to the tint of the light, but not directly to its brightness.

The range 1 indicated in the illustration above shows the light sources for which this Movie Camera can provide precise white balance adjustment and, therefore, natural colours in the recorded pictures, when using the Full Auto Mode. For light sources outside this range, adjust the white balance manually. (→ 102) Also, additional lighting may be necessary.

# 5 ADJUSTMENT PROCEDURES

## 5.1. DISASSEMBLY PROCEDURES

Flow-Chart for Disassembly Procedure

| No. | Item/Part           | Fig. | Removal (Screw)   |
|-----|---------------------|------|---|
| 1   | Side Case (L) Unit  | 1    | 1-Screw (A)<br>1-Screw (B)<br>1-Screw (C)<br>3-Screws (D)<br>1-Screw (E)  |
|     |                     | 2    | 4-Screws (F)  |
|     |                     | 3    | Locking Tab (a)<br>Slightly open the Side Case (L) Unit.<br>Disconnect FP6004.  |
| 2   | Front Case Unit     | 4    | 4-Locking Tabs (b)<br>Disconnect FP4002.  |
| 3   | Camera/Main C.B.A.  | 5    | 1-Screw (G)<br>Remove the Shild Case.<br>Disconnect the following connectors.<br>FP6002, FP2001, PP301, FP701, FP4001, FP2002, FP5001, FP6001, FP1001, PS3509, PS1003 |
| 4   | Cassette Cover Unit | 6    | 1-Screw (H)   |
| 5   | Rear Case Unit      | 7    | 1-Screw (K)<br>2-Locking Tabs (c)   |
| 6   | EVF Unit            | 8    | 2-Screws (L)  |
| 7   | Mechanism Unit      | 9    | 3-Screws (M)  |
| 8   | Lens Unit           | 10   | 1-Screw (N)   |
| 9   | Main Frame Unit     | 6    | 1-Screw (I)<br>2-Screws (J)   |
|     |                     | 11   | 1-Screw (O)<br>7-Locking Tabs (d)   |

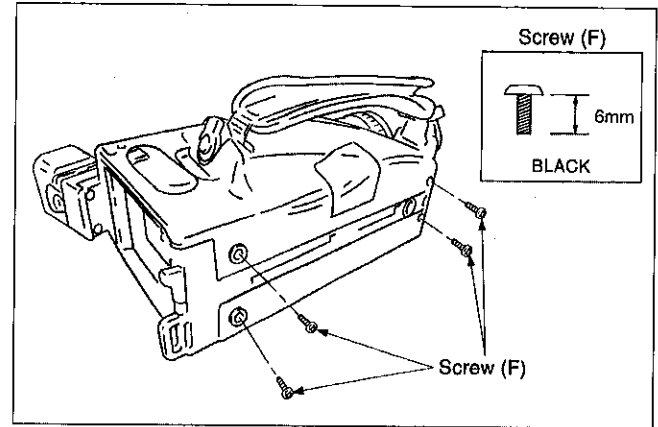


Fig. 2

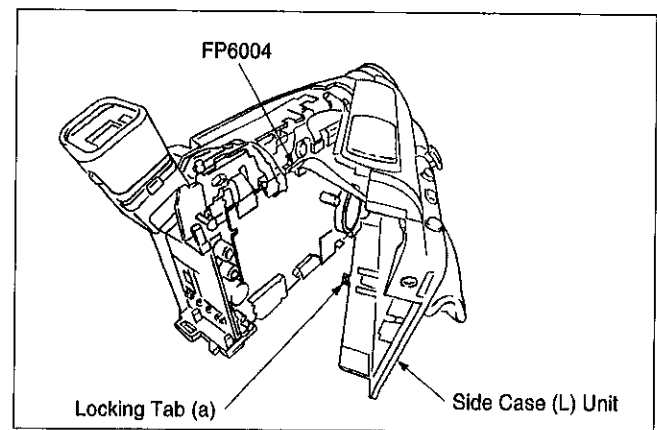


Fig. 3

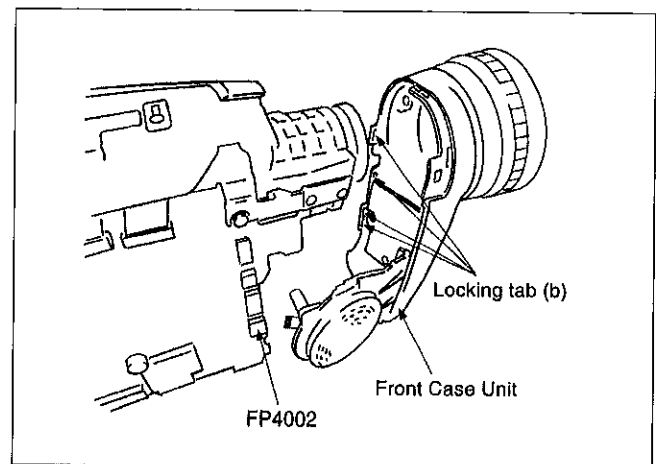


Fig. 4

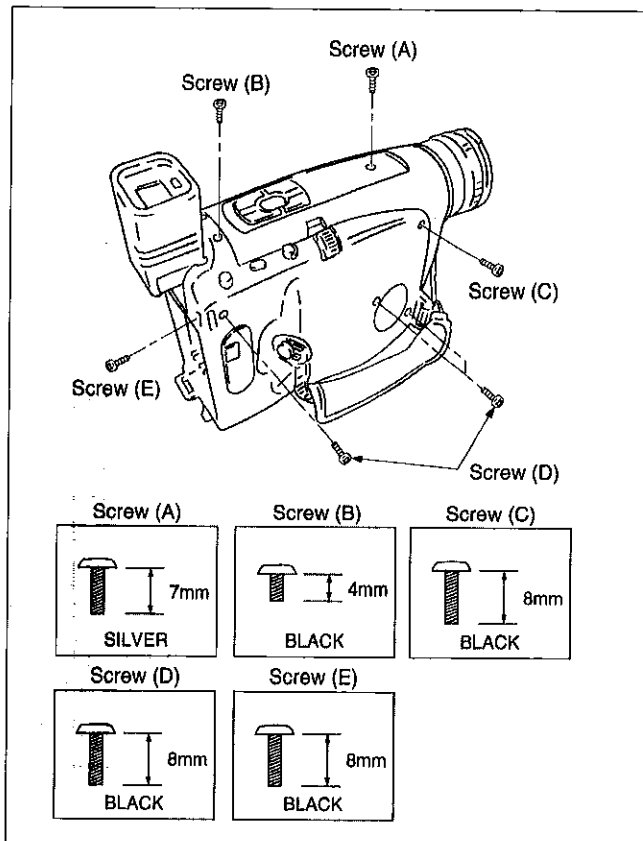


Fig. 1

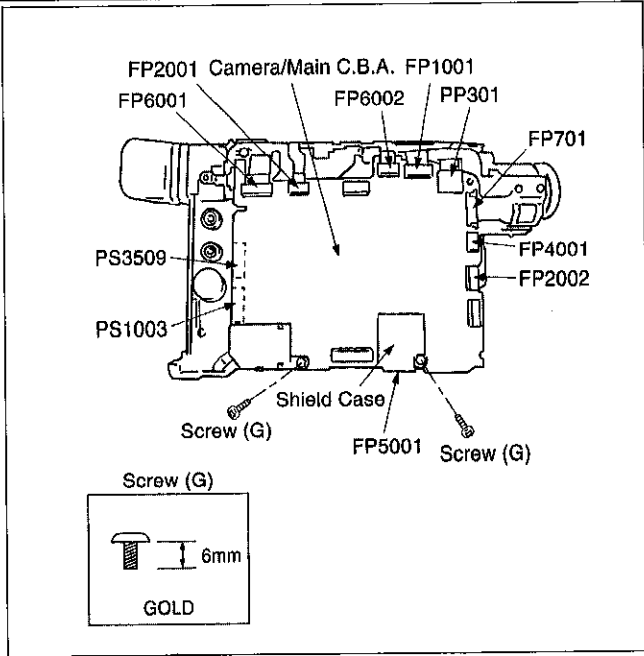


Fig. 5

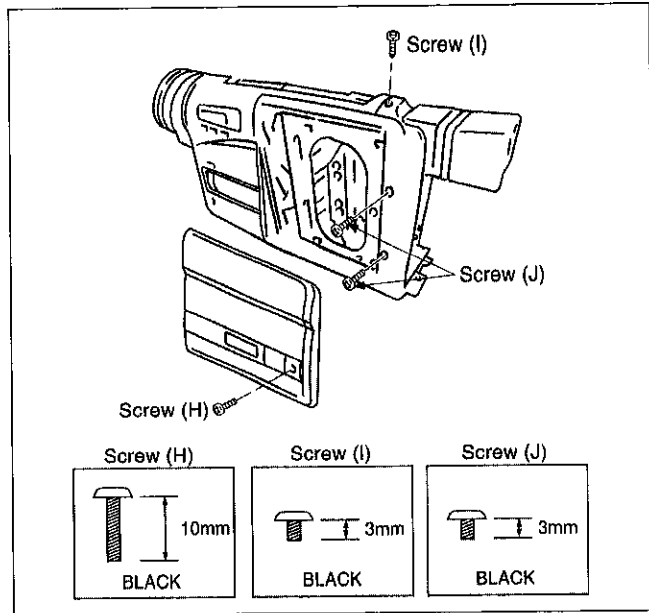


Fig. 6

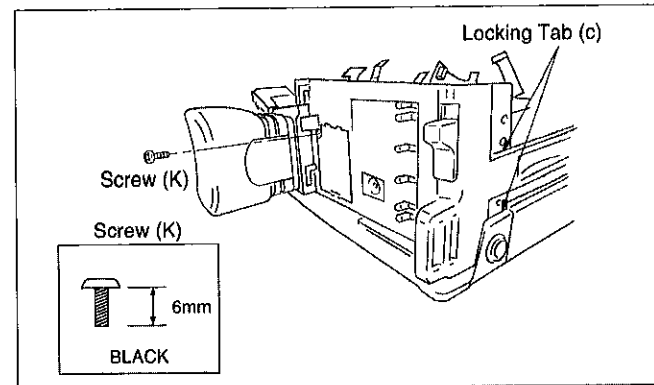


Fig. 7

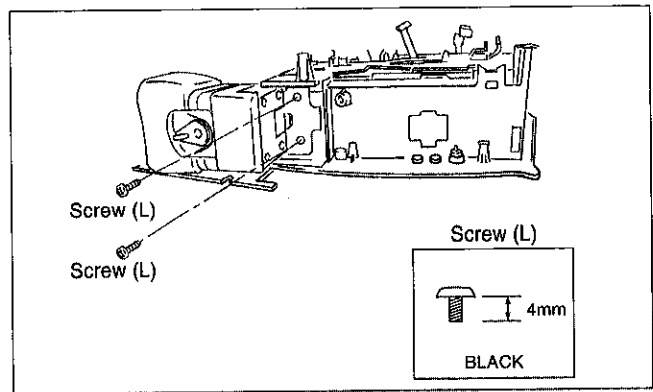


Fig. 8

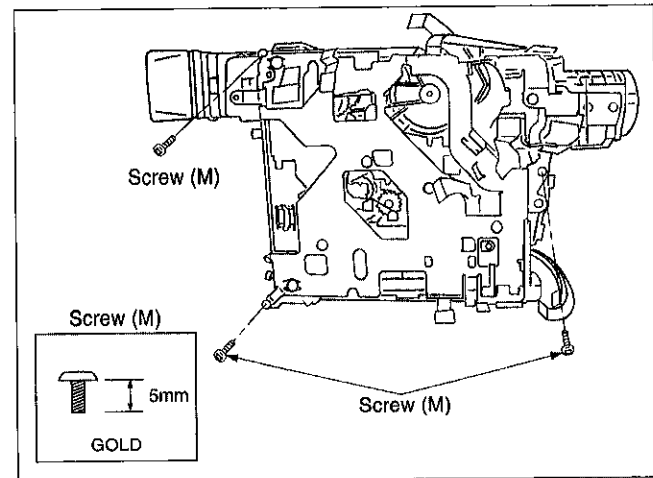


Fig. 9

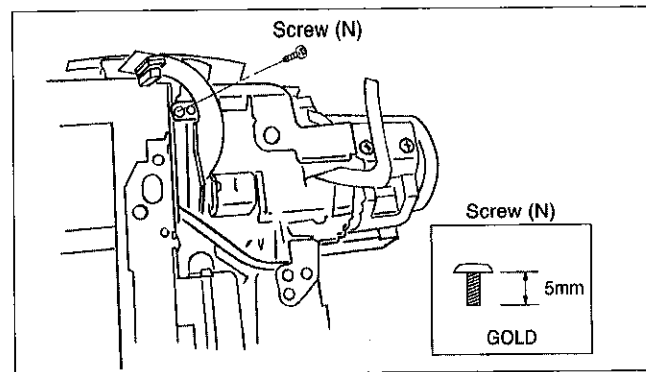


Fig. 10

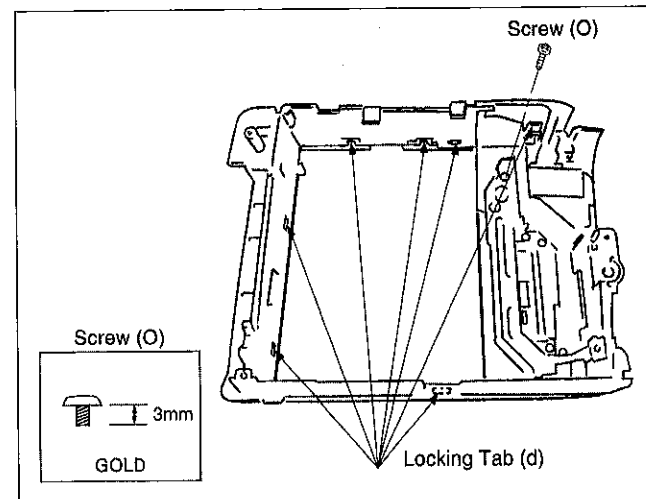


Fig. 11

## 5.2. DISASSEMBLY PROCEDURES OF LENS UNIT

- The following flowchart describes order or steps for removing the lens units and certain printed circuit boards in order to make access to the item needing service.
- To reassemble the unit follow the steps in reverse order.

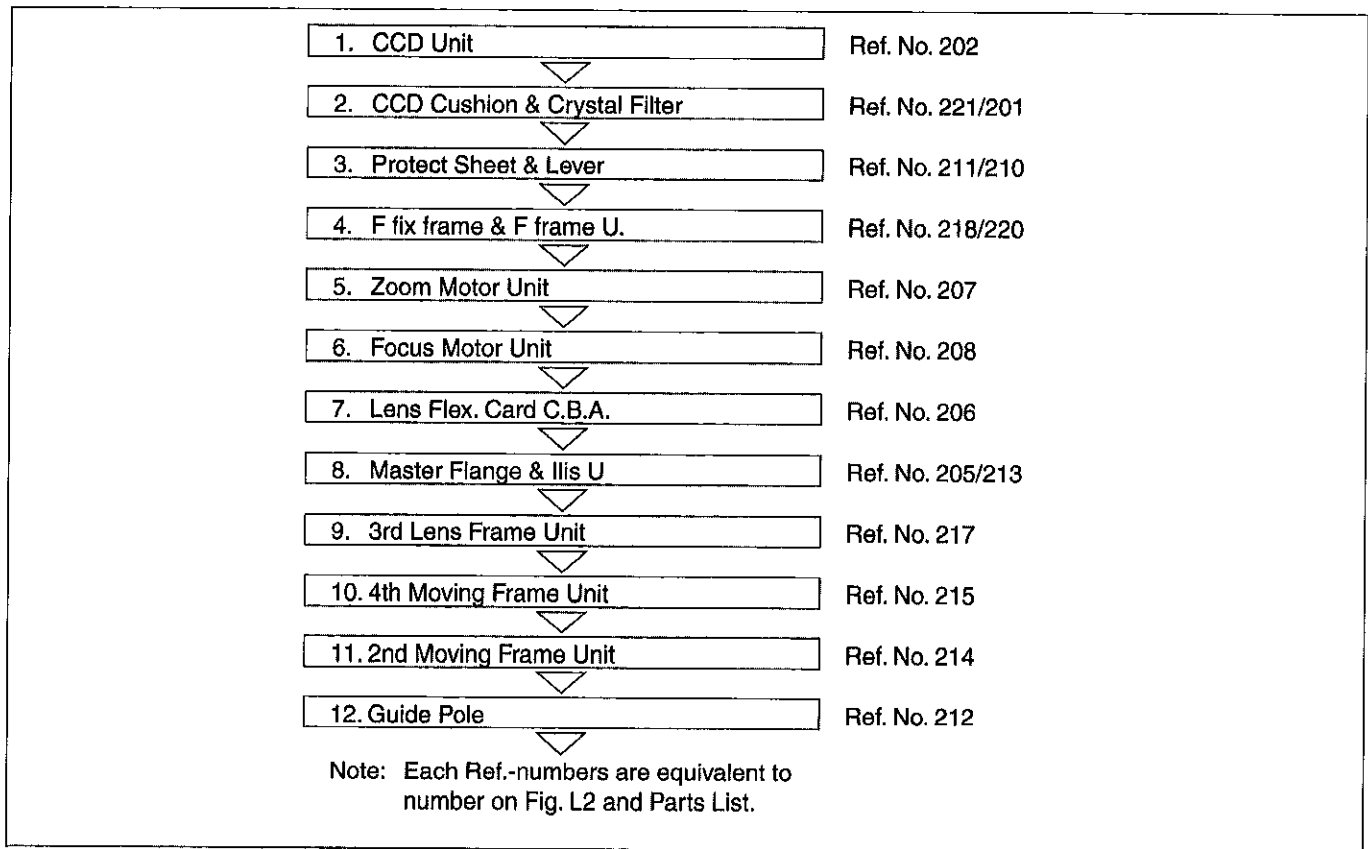


Fig. L1

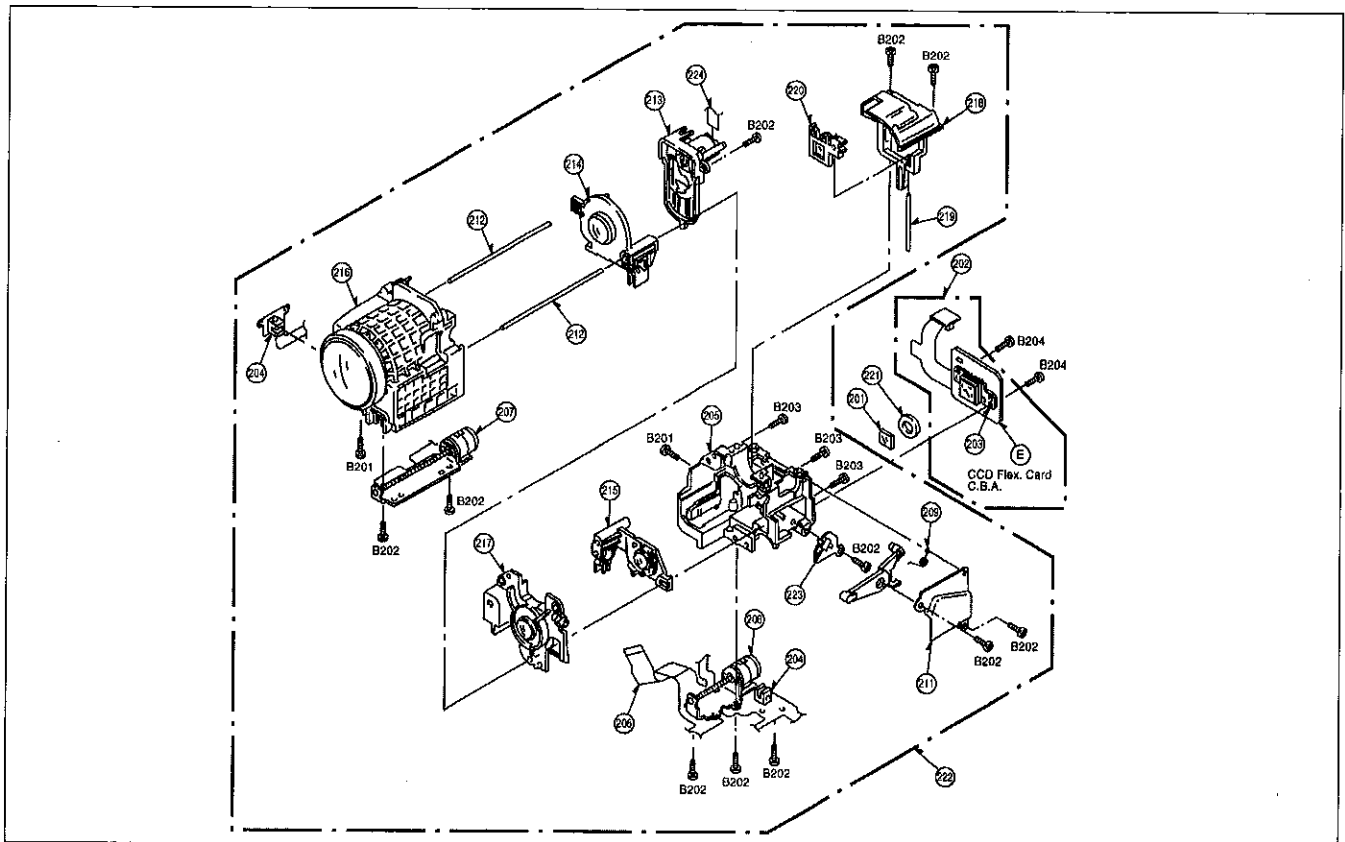


Fig. L2










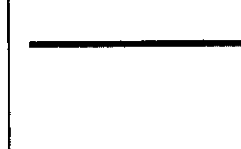
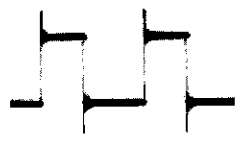

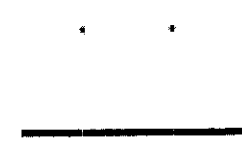
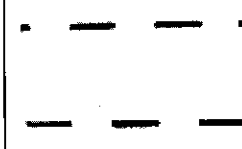

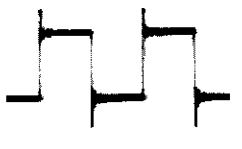





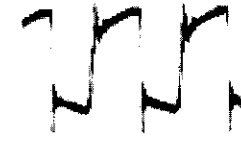


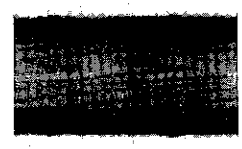

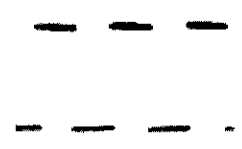


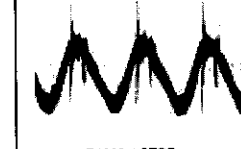

# 6 ABBREVIATIONS

|     | INITIAL/LOGO             | ABBREVIATIONS                        |                              | INITIAL/LOGO                       | ABBREVIATIONS                                   |
|-----|--------------------------|--------------------------------------|------------------------------|------------------------------------|---|
| A   | A.TR                     | Auto Tracking                        | D                            | DISCS                              | Dis Chip Select                                 |
|     | ABSF                     | Focus Encoder Input                  |                              | DISP                               | Display   |
|     | ACI                      | Analog Channel Cording IC            | DL                           | Delay Line                         |   |
|     | ADCLK                    | Analogue Digital Clock               | DL                           | Delay Line                         |   |
|     | ADCNT                    | Analogue Digital Control             | DOBLK                        | Bit Clock (to D/A Converter)       |   |
|     | ADCS                     | Analogue Digital Chip Select         | DOCTL                        | Data Output Control                |   |
|     | AE                       | Auto Expose                          | DODAT                        | Serial Data (to D/A Converter)     |   |
|     | AECNT                    | Auto Expose Control                  | DRK                          | Dark                               |   |
|     | AEIRQ                    | Auto Expose Interrupt Request        | DS                           | Double Sampling Pulse              |   |
|     | AF                       | Auto Focus                           | DS1, 2                       | Double Sampling Pulse              |   |
|     | AFADE                    | Audio Fade                           | DSP                          | Digital Signal Processor           |   |
|     | AFCS                     | Auto Focus Chip Select               | DSP                          | Digital Signal Processor           |   |
|     | AGC                      | Automatic Gain Control               | DVDD                         | Digital VDD                        |   |
|     | AGCCNT                   | Automatic Gain Control Control       | DVSS                         | Digital Ground                     |   |
|     | ALCCNT                   | Auto Level Control Control           | DZ                           | Digital Zoom                       |   |
|     | ALCMAIN                  | Auto Level Control Drive             |                              |                                    |   |
|     | AMUT                     | Audio Mute                           | E                            | E Snap                             | Electric Snap Shot                              |
|     | AORP                     | Audio Overlap Pulse                  |                              | E2P                                | EEPROM  |
|     | APCNT                    | Aperture Control                     |                              | EC                                 | Error Control                                   |
|     | ARTV                     | Artificial Vertical Sync             |                              | EC                                 | Torque Control                                  |
|     | ATF                      | Automatic Track Finding              |                              | ECM                                | Electric Condenser Mic                          |
|     | ATR                      | Auto Tracking                        |                              | EE CS                              | EEPROM Chip Select                              |
|     | AUX                      | Auxiliary                            |                              | EEPROM                             | Electric Erasable Programmable Read Only Memory |
|     | AVDD                     | Analogue VDD                         |                              | EIS                                | Electric Image Stabilizer                       |
|     | AVSS                     | Analogue Ground                      |                              | ENV                                | Envelope  |
|     | AWTB                     | Auto White Balance B-Y               |                              | EQ                                 | Equalizer                                       |
|     | AWTR                     | Auto White Balance R-Y               |                              | EVF                                | Electric View Finder                            |
|     |                          |                                      |                              | EXT DC                             | External DC (AC Adaptor)                        |
|     |                          |                                      |                              | EZOOM                              | Electric Zoom                                   |
| B   | B-Y KB                   | B-Y Carrier Balance                  | F                            | F                                  | Far (Focus)                                     |
|     | BACK                     | Back-up                              |                              | FB                                 | Feed Back                                       |
|     | BATT                     | Battery                              |                              | FCK                                | Clock   |
|     | BCBM(B-Y)                | B-Y Carrier Balance                  |                              | FENC                               | Focus Encoder                                   |
|     | BCBM(R-Y)                | R-Y Carrier Balance                  |                              | FM                                 | Field Memory                                    |
|     | BF                       | Burst Flag                           |                              | FM0-7                              | Field Memory 0 - 7                              |
|     | BFND                     | Burst Flag Pulse                     |                              | FMDIR                              | Focus Motor Direction                           |
|     | BFA                      | Burst Plug for Encoder               |                              | FMOEM                              | Field Memory Enable                             |
|     | BFO/BFI                  | Burst Plug Input/Output              |                              | FMOEO                              | Field Memory Enable                             |
|     | BL                       | Back Light                           |                              | FMT                                | Focus Motor                                     |
|     | BLC 0, 1                 | Back Light Y Control Out, In         |                              | FMT1-4                             | Focus Motor Terminal 1-4                        |
|     | BLDI/O                   | Back Light Drive Input / Output      |                              | FNO                                | F Value   |
|     | BLK                      | Blanking Pulse                       |                              | FR                                 | Capstan Reverse High                            |
|     | BLKA                     | Blanking for Encoder                 |                              |                                    |   |
|     | BLKI/O                   | Blanking Pulse In/Out                |                              |                                    |   |
|     | BM                       | Balance Modulator                    |                              |                                    |   |
|     | BUF                      | Buffer                               |                              |                                    |   |
| C   | C CNT                    | Colour Control                       | G                            | GCNT                               | Gain Control                                    |
|     | C/N                      | Carrier/Noise                        |                              | GSW                                | Ground for Switching Power                      |
|     | CAM                      | Camera                               | H                            | H1,2                               | H. CCD Drive Pulse                              |
|     | CAM T                    | Camera Test                          |                              | HASW                               | HEAD AMP SW                                     |
|     | CAM TL                   | Capstan Trque Limit                  |                              | HBRST                              | High Bright Set                                 |
|     | CAMCLK                   | Camera Clock                         |                              | HCLR                               | High Clear                                      |
|     | CAP R/F/S                | Capstan Revers(H)/Stop(M)/Forward(L) |                              | HCP                                | Shift Clock for Horizontal Drive                |
|     | CAPSTP H                 | Capstan Stop Flag (Stop High)        |                              | HD                                 | Horizontal Drive Pulse                          |
|     | CAPVM                    | Capstan Motor Current                |                              | HDTV                               | High Definition TV                              |
|     | CASDWN                   | Cassette Down                        |                              | HEX                                | Hexadecimal                                     |
|     | CBLK                     | Composite Blanking Pulse             |                              | HILT                               | High Bright Signal                              |
|     | CCD                      | Charge Coupled Devise                |                              | HSS                                | Horizontal Sinc Signal                          |
|     | CCW                      | Counter-Clockwise                    |                              | HSS                                | High Speed Shutter                              |
|     | CDS                      | Correlate Double Sampling Signal     |                              |                                    |   |
|     | CDS OUT                  | CDS Output Signal                    |                              | I                                  | INTER   |
|     | CH                       | Charge                               | INV                          |                                    | Inverter  |
|     | CH1                      | Channel 1 (Odd Field)                | IOU                          |                                    | R-Y Analogue Signal Output                      |
|     | CHR                      | Character                            | IOU                          |                                    | Analogue R Signal Output Terminal               |
|     | CHR MIX                  | Character Mix                        | IOV                          |                                    | B-Y Analogue Signal Output                      |
|     | CI, CO                   | Buffer In/Out                        | IOV                          |                                    | Analogue B Signal Output Terminal               |
|     | CK                       | Clock                                | IOY                          |                                    | Analogue Y Signal Output Terminal               |
|     | CL / CLK                 | Clock                                | IRDET                        | Infrared Rays Detection            |   |
|     | CMODE                    | Camera Mode                          | IRIS/SH                      | Iris / Shutter Control             |   |
|     | CNR                      | Chrominance Noise Reduction          | IRQ                          | Interrupt Request                  |   |
|     | CO                       | Control Out                          | K                            | KANDO                              | Digital Gain Up                                 |
|     | CO0-7                    | Chrominance Output 0 to 7 (Digital)  |                              | KB                                 | Carrier Balance                                 |
|     | COM                      | Common                               |                              | KND                                | Digital Gain Up                                 |
|     | CP                       | Clamp Pulse                          | KNEE                         | Knee Corection ( $\gamma$ Control) |   |
|     | CPOB                     | Clamp Pulse for Optical Blanking     | L                            | LCD                                | Liquid Crystal Display                          |
|     | CPS                      | Composite Signal                     |                              | LD                                 | Load Pulse                                      |
|     | CRST                     | Camera Reset                         |                              | LDD                                | Liquid Direct Drive                             |
|     | CS                       | Chip Select                          |                              | LEDCNT                             | LED Control                                     |
|     | CS 0-7                   | Chrominance Signal Out 0-7           |                              | LI-BATT                            | Lithium Battery                                 |
|     | CSEL                     | Clock Phase Select                   |                              | LOAD                               | Loading   |
|     | CSI 0-7                  | Chrominance Signal In 0-7            | LSB                          | Least Significant Bit              |   |
|     | CTSW                     | Crosstalk Switch                     | LVL                          | LPF Switch for Auto Focus          |   |
|     | CW                       | Clockwise                            | M                            | MD                                 | Modulation                                      |
|     | CYLMV                    | Cylinder Motor Current or Power      |                              | MENB                               | Focus Motor Enable                              |
|     |                          |                                      |                              | MFF                                | Manual Focus Far                                |
|     |                          |                                      |                              | MFN                                | Manual Focus Near                               |
|     |                          | MIX N.R.D.                           |                              | Non Rec Data Mix                   |   |
|     |                          | MRST                                 |                              | Focus Motor Reset                  |   |
|     |                          | MSB                                  |                              | Most Signal Bit                    |   |
|     |                          | MVSYNC                               | Monitor Vertical Sync Signal |                                    |   |
| D   | D MODE                   | Digital Mode Switch Signal           |                              |                                    |   |
|     | DAC                      | Digital Analog Converter             |                              |                                    |   |
|     | DAC                      | Digital Analogue Converter           |                              |                                    |   |
|     | DB0-7                    | Data 0-7                             |                              |                                    |   |
|     | DCLR                     | Digital Clear                        |                              |                                    |   |
|     | DCP                      | Digital Clamp Pulse                  |                              |                                    |   |
|     | DICLK                    | Digital Clock                        |                              |                                    |   |
| DIS | Digital Image Stabilizer |                                      |                              |                                    |   |




| INITIAL/LOGO |                              | ABBREVIATIONS                  | INITIAL/LOGO                           |                              | ABBREVIATIONS                         |                            |
|--------------|------------------------------|--------------------------------|--|------------------------------|---------------------------------------|----------------------------|
| N            | N                            | Near (Focus)                   | S                                      | SPA                          | ATF Sampling Pulse                    |                            |
|              | N/F                          | Near/Far Focus                 |  | SPEN                         | 8 Bit Data Enable                     |                            |
| O            | N/P                          | NTSC/PAL                       | SPST                                   | 8 Bit Data Strobe            |                                       |                            |
|              | NC                           | No Connection                  | SRT                                    | Start                        |                                       |                            |
|              | NDE                          | Non Liner De-Emphasis          | SSA                                    | Start Sync block Area        |                                       |                            |
|              | NLE                          | Non Liner Emphasis             | STAB                                   | Safety Tab Switch            |                                       |                            |
|              | NR                           | Noise Reduction                | STB                                    | Stand by Signal              |                                       |                            |
|              | NRD                          | Non Rec Data                   | STB                                    | Strobe                       |                                       |                            |
|              | NRD/BLK                      | No Rec Data Blanking           | T                                      | T                            | Tele (Zoom)                           |                            |
|              | NRD CLK                      | No Rec Data Clock              |  | T PHOT                       | Take-up Photo Transistor              |                            |
|              | NRDBLK                       | Non Rec Data Blanking          |  | TBC                          | Time Base Control                     |                            |
|              | NRE                          | Read Enable Input (Low Active) |  | TFT                          | Thin Film Transistor                  |                            |
|              | NWE                          | Write Enable (Low Active)      |  | TH                           | Thermostat for Battery                |                            |
|              | P                            | OB                             |  | Optical Black                | TI                                    | Test Mode Select           |
|              |                              | OBCNT                          |  | Optical Black Control        | TL                                    | Torque Limit               |
|              |                              | OE                             |  | Output Enable                | TM                                    | Sub Code                   |
| OFS          |                              | Offset                         |  | TMD                          | Sub Code Data                         |                            |
| OP           |                              | Operation AMP Output           |  | TRE                          | Tracking Error Signal                 |                            |
| OSD          |                              | ON Screen Display              | TREEL                                  | Take-up Reel                 |                                       |                            |
| OVL          |                              | Overlap Pulse                  | TRFIX                                  | Tracking Fix                 |                                       |                            |
| OZ           |                              | Optical Zoom                   | TRIWAVE                                | Tracking Wave                |                                       |                            |
| Q            |                              | PAJ                            | Picture Control                        | TRP                          | Tracking Position                     |                            |
|              |                              | PB1-3                          | PNP Base 1-3                           | TRP                          | Trap                                  |                            |
|              | PBCTL                        | Play Back Control              | TSR                                    | Head Switching Reference     |                                       |                            |
|              | PBCTL                        | Pre-Blanking Control           | TST                                    | Time Scale Transfer          |                                       |                            |
|              | PBH                          | Head Amp Switch                | U                                      | UV SEL                       | R-Y/B-Y Select Signal                 |                            |
|              | PBLK                         | Pre-Blanking (Pulse)           |  | UNLOAD                       | Un-Loading                            |                            |
|              | PC1-3                        | PNP Corrector 1-3              |  | UNRE                         | Microprocessor Read Enable            |                            |
|              | PCBM                         | Carrier Balance                |  | UNWE                         | Microprocessor Write Enable           |                            |
|              | PCH                          | Phase Compensator (Hole AMP)   |  | UV                           | R-Y/B-Y                               |                            |
|              | PCI                          | Phase Compensator (Current)    |  | UV SEL                       | R-Y/B-Y Select Signal                 |                            |
|              | PCO                          | Phase Compensator Out          |  | V                            | V1-V4                                 | V.CCD Drive Pulse          |
|              | PCS                          | Switching Power Control        |  |                              | VB                                    | VH Filter Switching        |
|              | PCV                          | Phase Compensator (Voltage)    |  |                              | VCE                                   | Power Terminal             |
|              | PE                           | PNP Emitter                    |  |                              | VCO                                   | Voltage Control Oscillator |
|              | PED                          | Pedestal                       | VCP                                    |                              | Shift Clock Output for Vertical Drive |                            |
|              | PEDECNT                      | Pedestal Control               | VCTRL                                  |                              | Voltage Charge Control                |                            |
|              | PPF                          | Pilot Frame Position           | VD                                     |                              | Vertical Drive Pulse                  |                            |
|              | PGC                          | Pulse Generator Comparator     | VDDX                                   |                              | X Drive Power for Colour LCD          |                            |
|              | POR                          | Power On Reset                 | VDDXY                                  |                              | XY Drive Power for Colour LCD         |                            |
|              | ROSCOM                       | Position Common                | VDDY                                   |                              | Y Drive Power for Colour LCD          |                            |
| PREAMP       | Pre-AMP                      | VDREC                          | Video Delayed Rec                      |                              |                                       |                            |
| PREBLK       | Pre-Blanking                 | Vgg                            | Voltage for Gate IC                    |                              |                                       |                            |
| PT           | Protect for V Voltage        | Vgl                            | Gate off Voltage                       |                              |                                       |                            |
| PWM          | Pulse Width Modulation       | VID                            | Video Signal Out                       |                              |                                       |                            |
| PWMB         | Pulse Width Modulation Pulse | VIN                            | Video In                               |                              |                                       |                            |
| R            | Q2H                          | Source Output Select           | VITC                                   | Vertical Interval Time Code  |                                       |                            |
|              | R                            | R/B                            | Read/Busy                              | VL                           | Low Voltage                           |                            |
|              |                              | R/L                            | Direction Select for Data Transmission | VLC                          | Variable Length Coding                |                            |
|              |                              | RA                             | Recording AMP                          | VLOCKP                       | Artificial Sync Pulse                 |                            |
|              |                              | RA1                            | Rec AMP 1                              | VLP                          | Artificial Sync Pulse                 |                            |
|              |                              | RAC AC                         | Rec Audio Current                      | VM                           | Motor Voltage                         |                            |
|              |                              | RAD                            | Read Address Data                      | VMD                          | Velocity Mode Data                    |                            |
|              |                              | RAE                            | Read Address Enable                    | VMD1-3                       | Electric Shutter Mode                 |                            |
|              |                              | RB                             | Read Busy                              | VMODE                        | NTSC/PAL Select Switch                |                            |
|              |                              | RB                             | Read Busy                              | VMVH                         | VH Filter Switching                   |                            |
|              |                              | RCB                            | R Carrier Balance                      | VORP                         | Video Overlap                         |                            |
|              |                              | RE                             | Read Enable                            | VRB                          | Voltage Reference Bottom              |                            |
|              |                              | REC CC                         | Rec Current Control                    | VRBS                         | Voltage Reference Bottom Output       |                            |
|              |                              | REC CNT                        | Rec Current Control                    | VREF1R3V                     | Reference Voltage 1.3V                |                            |
|              |                              | REC CTRL                       | Recording Control Pulse                | VREF3R3V                     | Reference Voltage 3.3V                |                            |
|              |                              | REC1                           | Rec Amp Switch                         | VREFH                        | Reference Voltage High Side           |                            |
|              |                              | RENGF                          | Lens Control (Forward)                 | VREFL                        | Reference Voltage Low Side            |                            |
|              |                              | RENCR                          | Lens Control (Reverse)                 | VRI                          | Reference Voltage Input               |                            |
|              |                              | RERASE                         | Rotary Erase Head                      | VRO                          | Reference Voltage Output              |                            |
|              |                              | RGBIV1-2                       | 1V Inverted Signal 1-2                 | VRT                          | Voltage Reference Top                 |                            |
| RST          |                              | Reset                          | VRTS                                   | Voltage Reference Top Output |                                       |                            |
| RSTB         | R Strobe                     | VSS                            | Vertical Sync Signal                   |                              |                                       |                            |
| RSTPWD       | Reset Power Down Input       | W                              | W                                      | Wide (Zoom)                  |                                       |                            |
| RSTR         | Reset Read                   |                                | WAD/WAE                                | Write Address Enable         |                                       |                            |
| RSTW         | Reset Write                  |                                | WB                                     | White Balance                |                                       |                            |
| RVCO         | Resistor for Oscillation     |                                | WE                                     | Write Enable                 |                                       |                            |
| RW           | Read Write                   |                                | WEM                                    | Memory Write Enable          |                                       |                            |
| RWAE         | Read Write Enable            | WHD                            | Wide Horizontal Drive Pulse            |                              |                                       |                            |
| S            | S PHOT                       | Supply Photo Transistor        | X                                      | XP                           | FG Logic Reset                        |                            |
|              | S/S                          | Start/Stop                     |  | Y                            | YCE                                   | Cylinder Error Code        |
|              | SBD                          | Serial Data                    | YNCST                                  |                              | Noise Canceller                       |                            |
|              | SBI                          | Serial Data Input              | YNR                                    |                              | Noise Reduction                       |                            |
|              | SBO                          | Serial Data Output             | Z                                      |                              | Z.ENC                                 | Zoom Encoder               |
|              | SCAN0-5                      | Key Scan 0-5                   |  | Z.MIC                        | Zoom Mic                              |                            |
|              | SCK                          | Serial Clock                   |  | ZENC                         | Zoom Encoder Output                   |                            |
|              | SCR                          | Search                         |  | ZMT(+)/(-)                   | Zoom Motor (+)/(-)                    |                            |
|              | *SCR, S.C.R*                 | Still Cue Review               |  | ZMTER                        | Zoom Motor Tele Side                  |                            |
|              | SEG.                         | Segment                        |  | ZMW                          | Zoom Motor Wide Side                  |                            |
|              | SH/IRIS                      | Shutter/Iris Control           |  |                              |                                       |                            |
|              | SIOC                         | Serial In/Out Control          |  |                              |                                       |                            |
|              | SNS LED                      | Sensor LED                     |  |                              |                                       |                            |
|              | SO                           | Serial Data Output             |  |                              |                                       |                            |

# 7 WAVEFORM TABLE

|  |  |   |   |  |
|--|--|---|---|--|
|  <p>IC701-12, 14 POWER ON<br/>6.0 Vp-p (5msec./div.)<br/>ZOOM MOTOR DRIVING</p> |  <p>IC3001-41 REC<br/>0.2 Vp-p (2msec./div.)<br/>COLOUR BAR</p> |  <p>IC3001-36 REC<br/>0.4 Vp-p (5msec./div.)<br/>COLOUR BAR</p>    |  <p>IC5001-1 PLAY<br/>0.4 Vp-p (2msec./div.)<br/>COLOUR BAR</p>     |  <p>IC5001-47 PLAY<br/>0.2 Vp-p (2msec./div.)<br/>COLOUR BAR</p>  |
|  <p>IC5001-8<br/>3.0 Vp-p (20msec./div.)<br/>COLOUR BAR</p>                     |  <p>IC6003-14 FF/REW<br/>2.2 Vp-p (50msec./div.)</p>            |  <p>IC6003-16 FF/REW<br/>3.0 Vp-p (20msec./div.)</p>               |  <p>IC6003-66 STOP<br/>2.6 Vp-p (50msec./div.)</p>                  |  <p>IC6003-75 FF/REW<br/>3.0 Vp-p (10msec./div.)</p>              |
|  <p>IC6003-144, IC2001-40 REC/PLAY<br/>5.2 Vp-p (1 sec./div.)</p>               |  <p>IC6003-145 REC/PLAY<br/>5.4 Vp-p (1 sec./div.)</p>          |  <p>IC6003-155, IC2001-28 REC/PLAY<br/>3.0 Vp-p (10msec./div.)</p> |  <p>IC6003-157, IC2001-25 REC/PLAY<br/>3.0 Vp-p (0.2msec./div.)</p> |  <p>IC6003-159, IC2001-27 REC/PLAY<br/>3.0 Vp-p (1msec./div.)</p> |
|  <p>IC6003-174 STOP<br/>5.4 Vp-p (0.5 sec./div.)</p>                            |  <p>IC2201-59, 61, 63 REC/PLAY<br/>2.8 Vp-p (1msec./div.)</p>   |  <p>IC2201-52, 53, 54 REC/PLAY<br/>2.8 Vp-p (20msec./div.)</p>     |  <p>IC2201-21 REC/PLAY<br/>0.6 Vp-p (0.5 sec./div.)</p>             |  <p>IC302-10 STOP<br/>1.2 Vp-p (20 sec./div.)<br/>GRAY SCALE</p>  |
|  <p>IC302-26 STOP<br/>0.6 Vp-p (20 sec./div.)<br/>GRAY SCALE</p>              |  <p>IC1001-9 STOP<br/>1.0 Vp-p (1 sec./div.)</p>              |  <p>IC1001-11 STOP<br/>1.4 Vp-p (1 sec./div.)</p>                |  <p>IC1001-15 STOP<br/>1.3 Vp-p (1 sec./div.)</p>                 |  <p>IC1001-27 STOP<br/>0.6 Vp-p (1 sec./div.)</p>               |
|  <p>Q1001-2 STOP<br/>11.8 Vp-p (1 sec./div.)</p>                              |  <p>Q1003-4 STOP<br/>12.0 Vp-p (1 sec./div.)</p>              |  <p>Q1004-2 STOP<br/>18.0 Vp-p (1 sec./div.)</p>                 |  <p>Q1061-4 STOP<br/>0.2 Vp-p (1 sec./div.)</p>                   |  <p>Q1062-4 STOP<br/>0.2 Vp-p (1 sec./div.)</p>                 |
|  <p>IC801-5 STOP<br/>1.0 Vp-p (20 sec./div.)<br/>COLOUR BAR</p>               |  |   |   |  |
|  |  |   |   |  |

## 8.2. SYSTEM CONTROL & SERVO/POWER BLOCK DIAGRAM

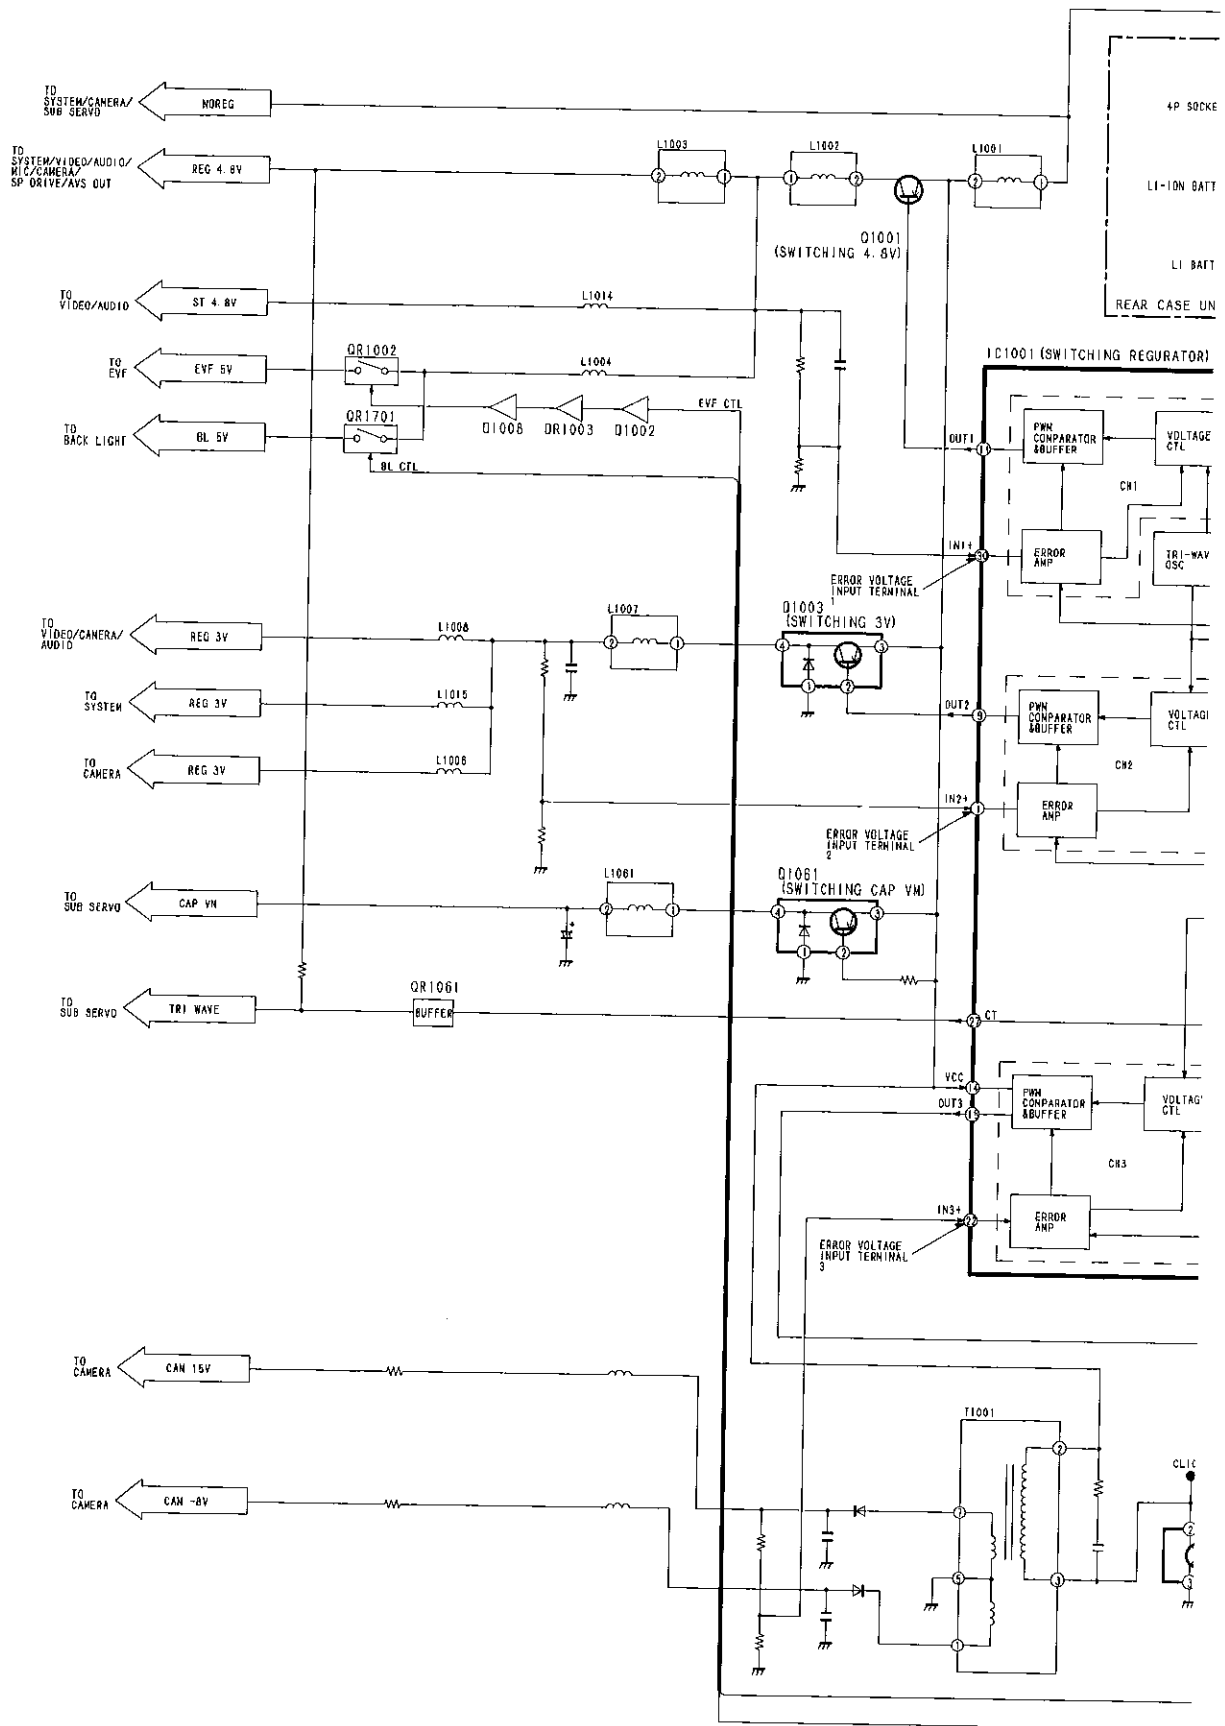










### 8.3. VIDEO BLOCK DIAGRAM

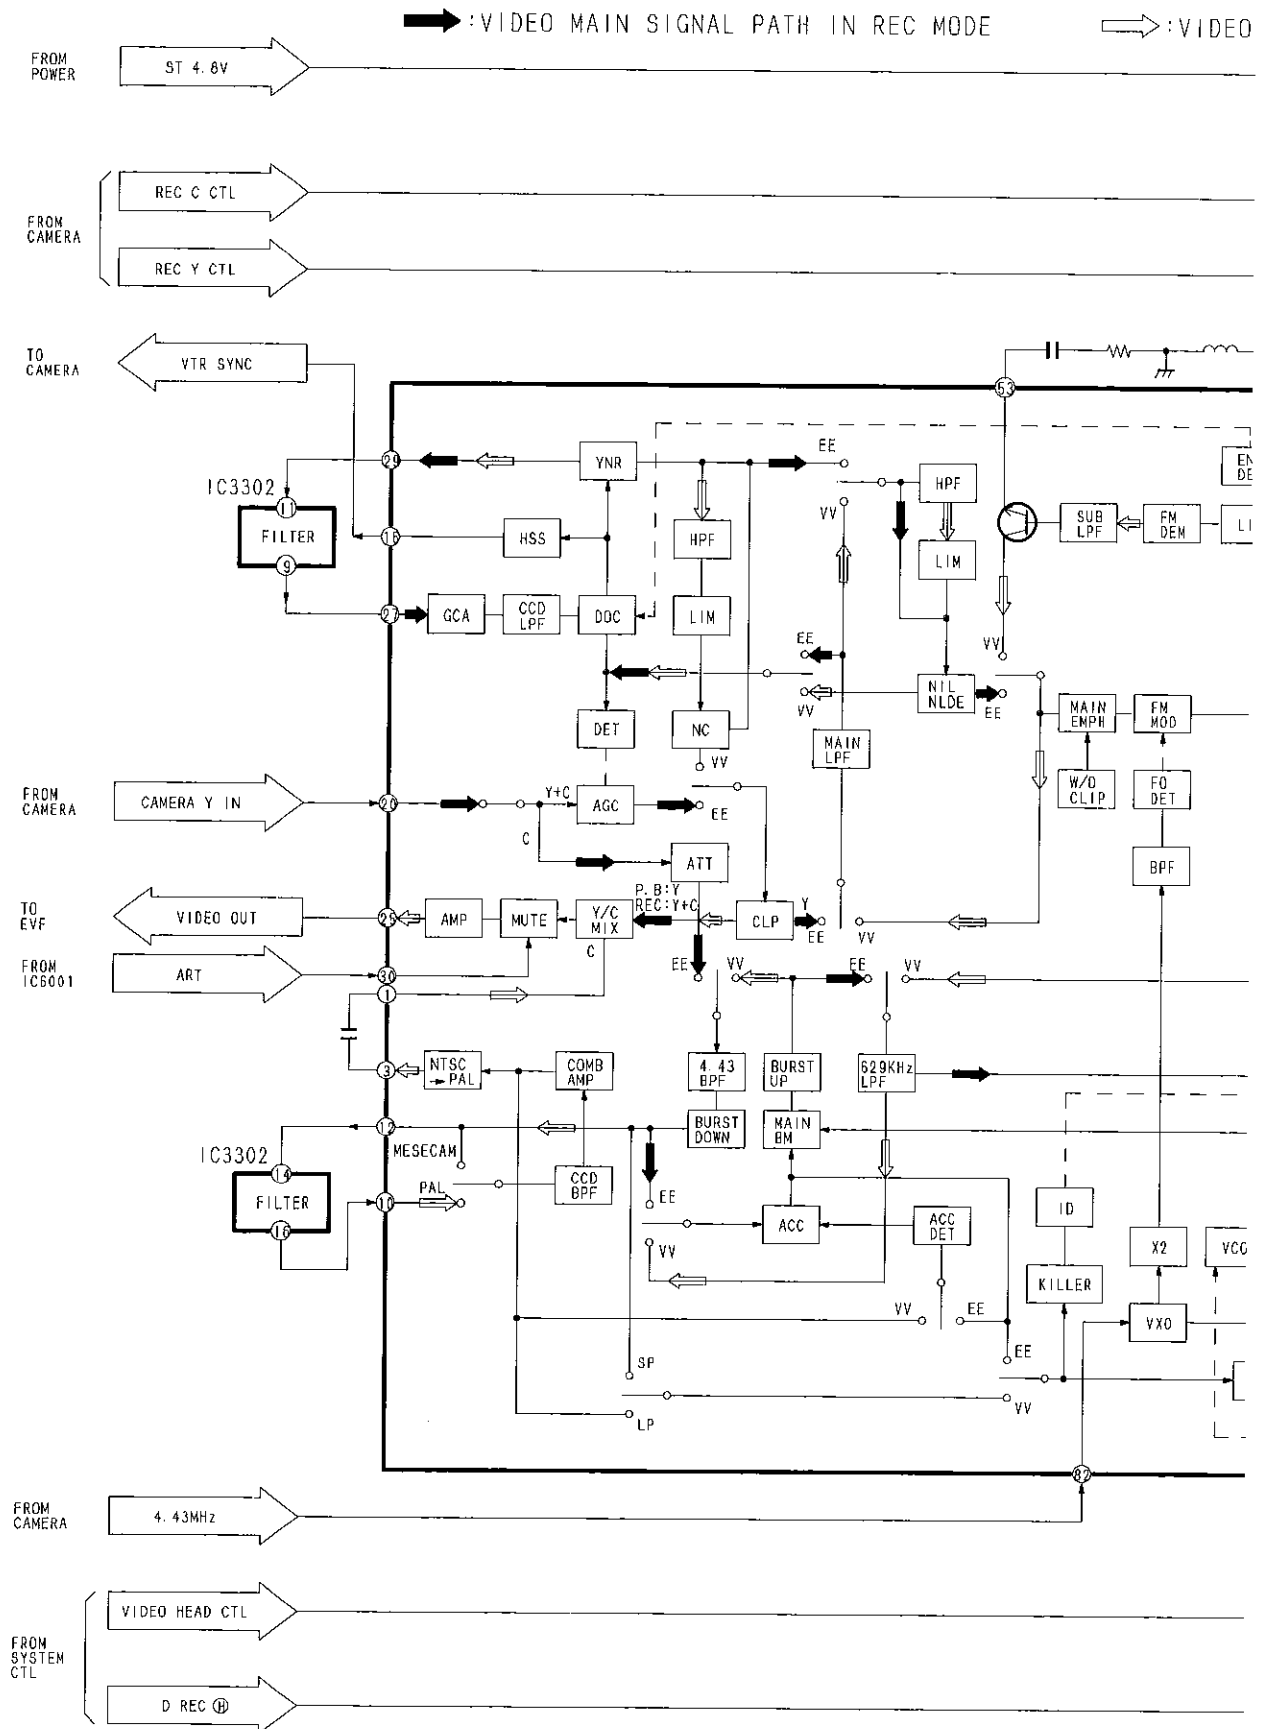

LOADING MOTOR DRIVE)

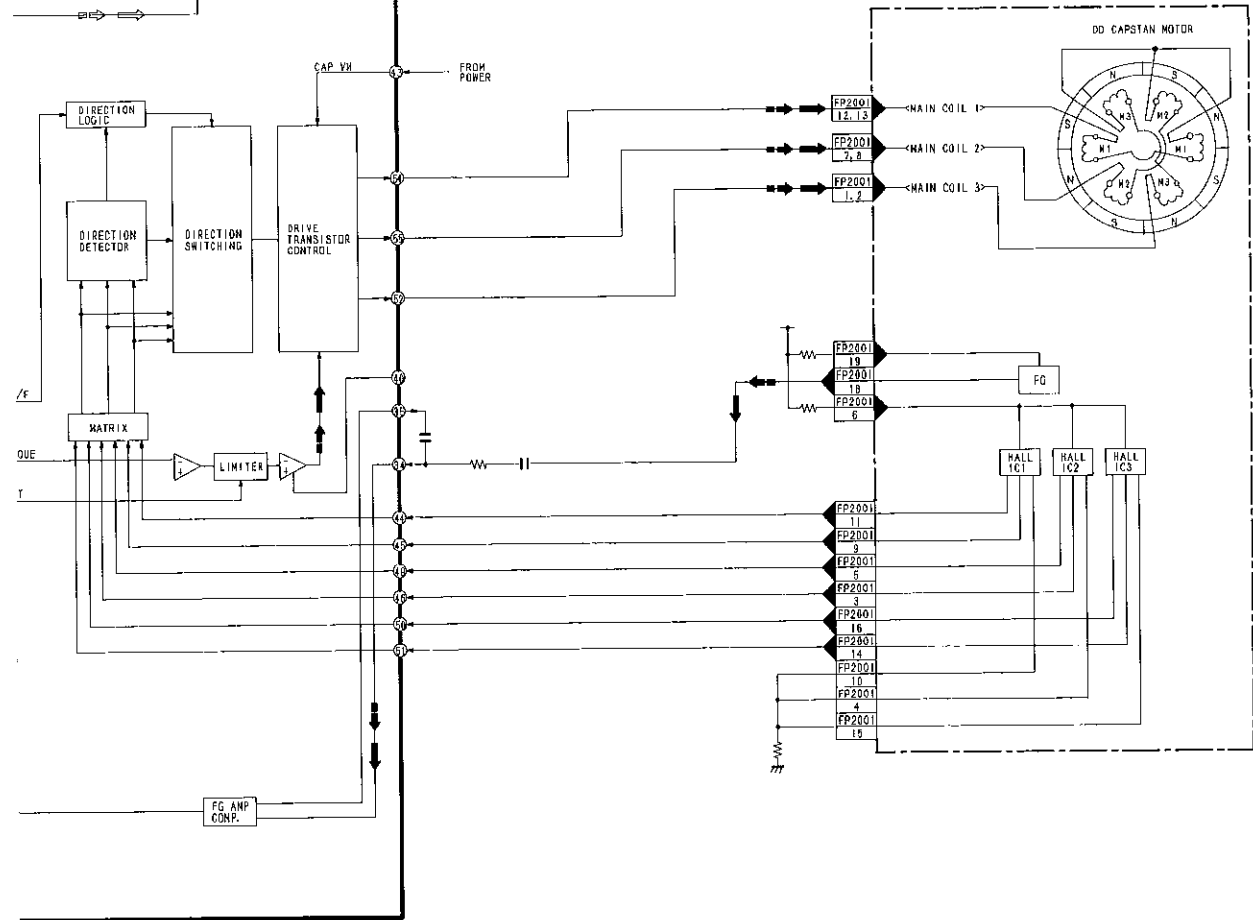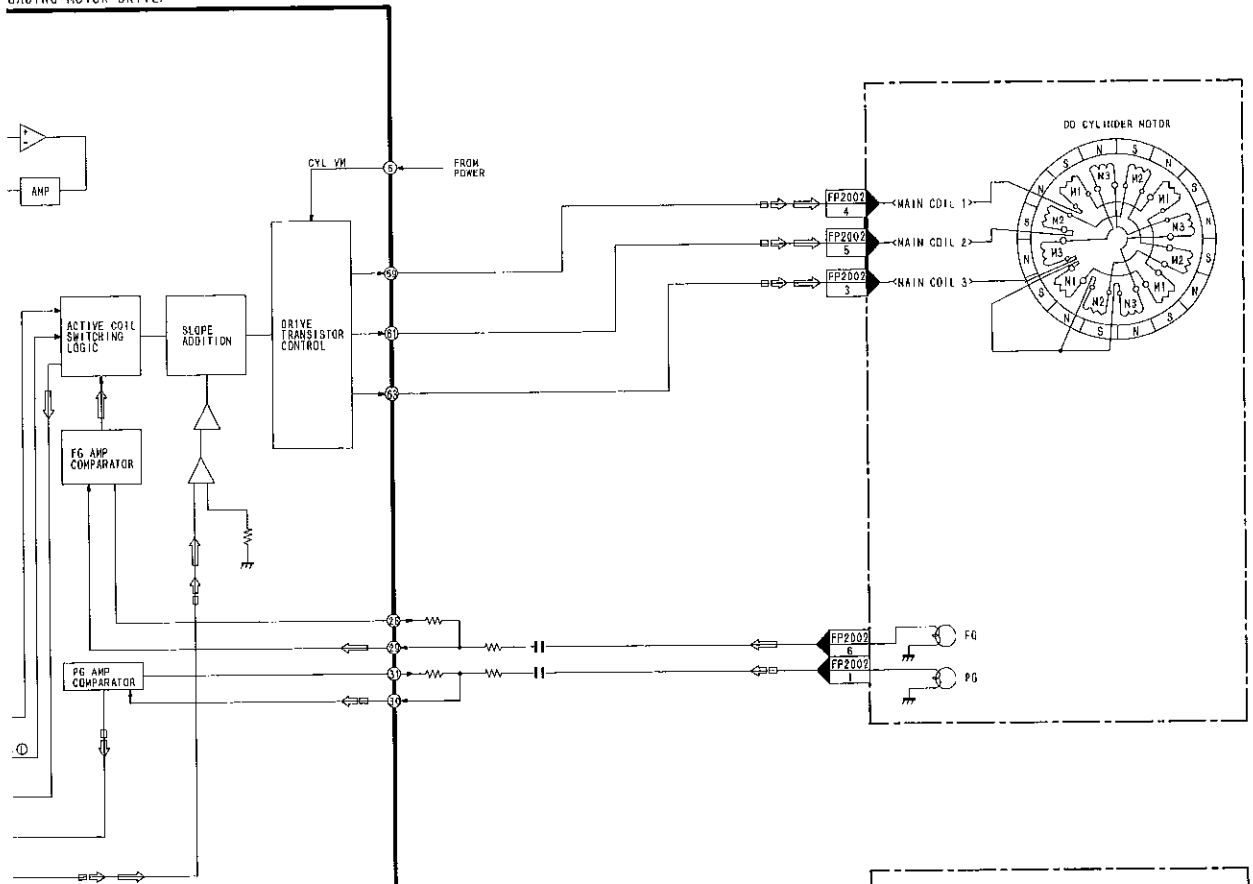




→ : CAPSTAN SERVO SPEED LOOP    ⇨ : CYLINDER SERVO SPEED LOOP  
 ⇨ : CAPSTAN SERVO PHASE LOOP    ⇨ : CYLINDER SERVO PHASE LOOP


SYSTEM CTL SECTION

SUB SERVO SECTION


IC2001 (CAP/CYL/L)

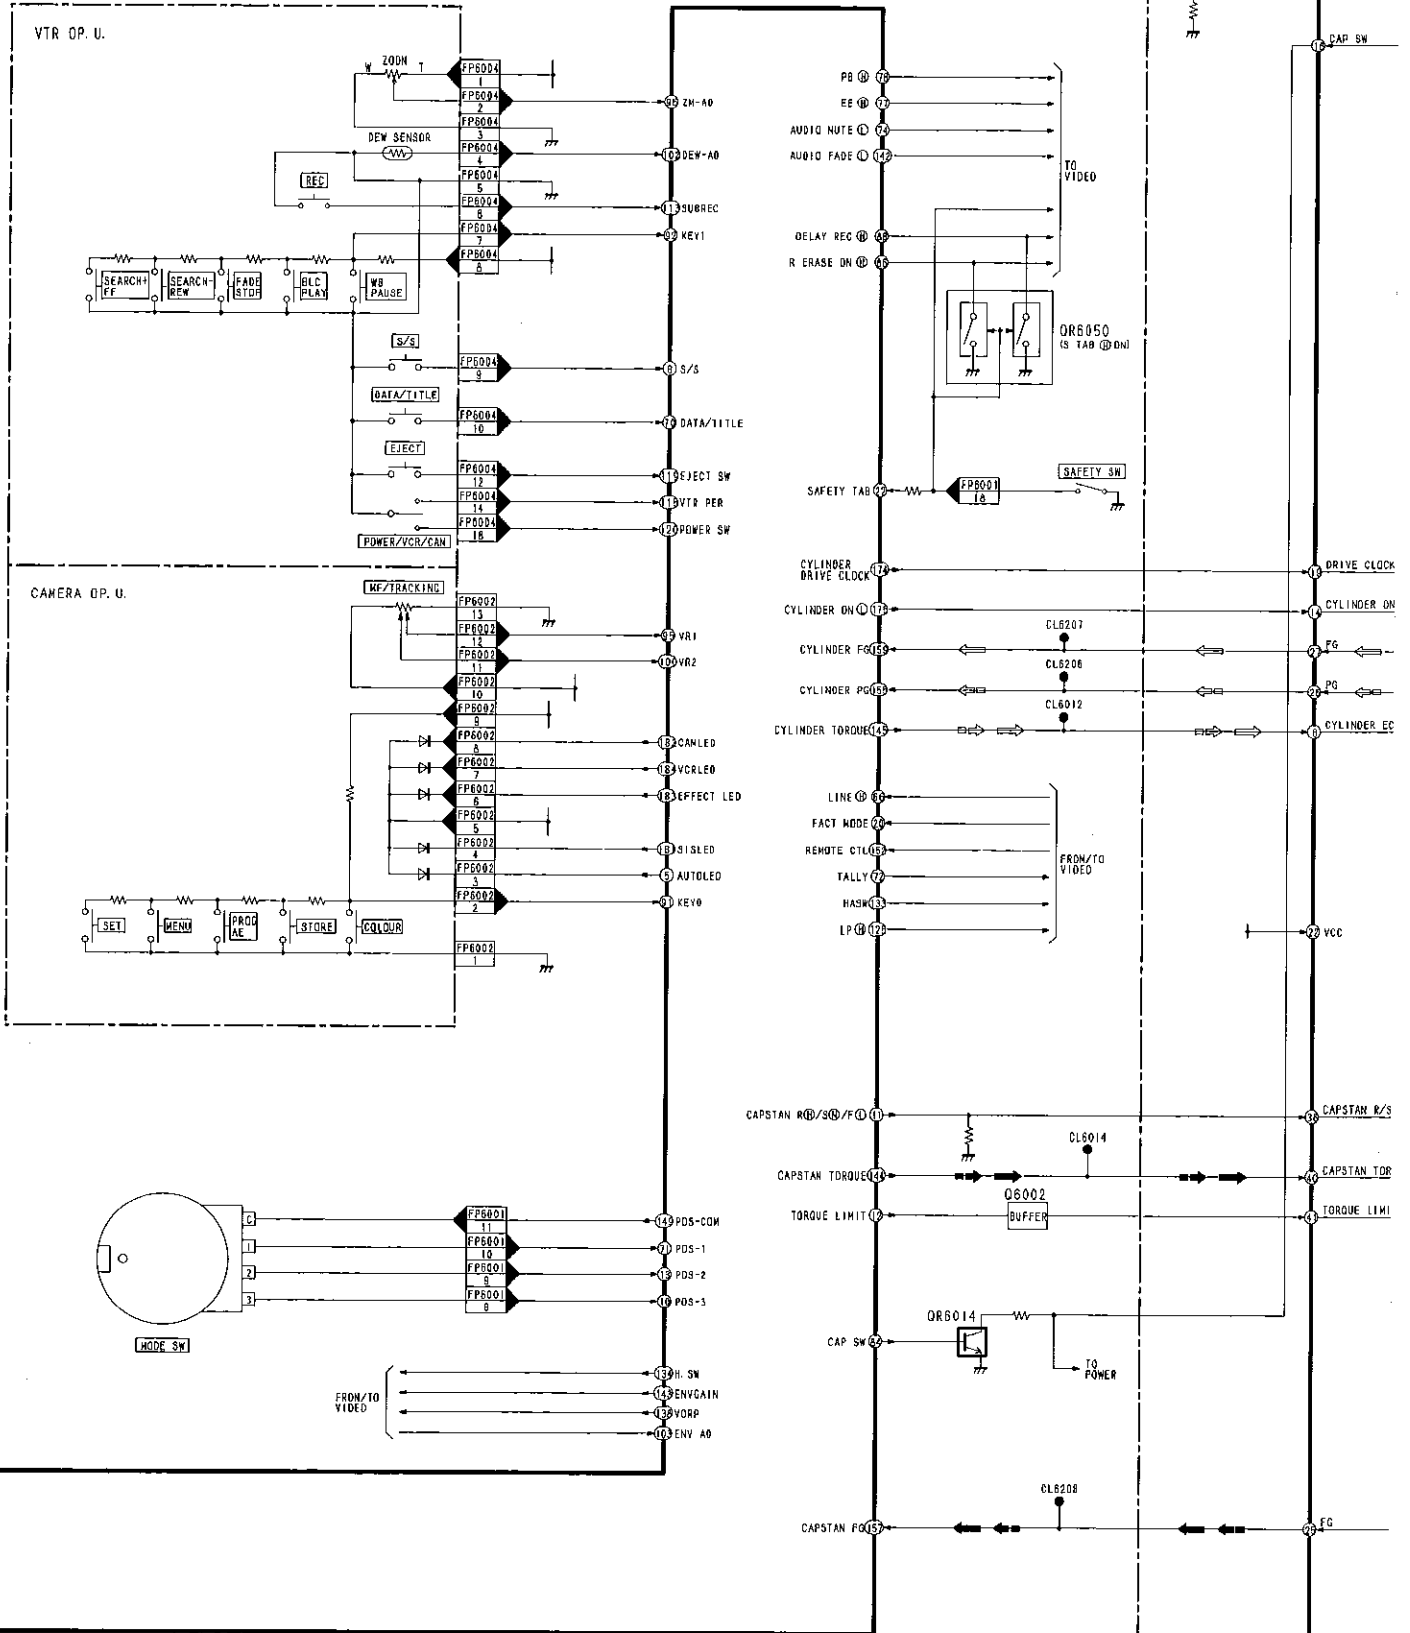


MAIN SIGNAL PATH IN PLAYBACK MODE

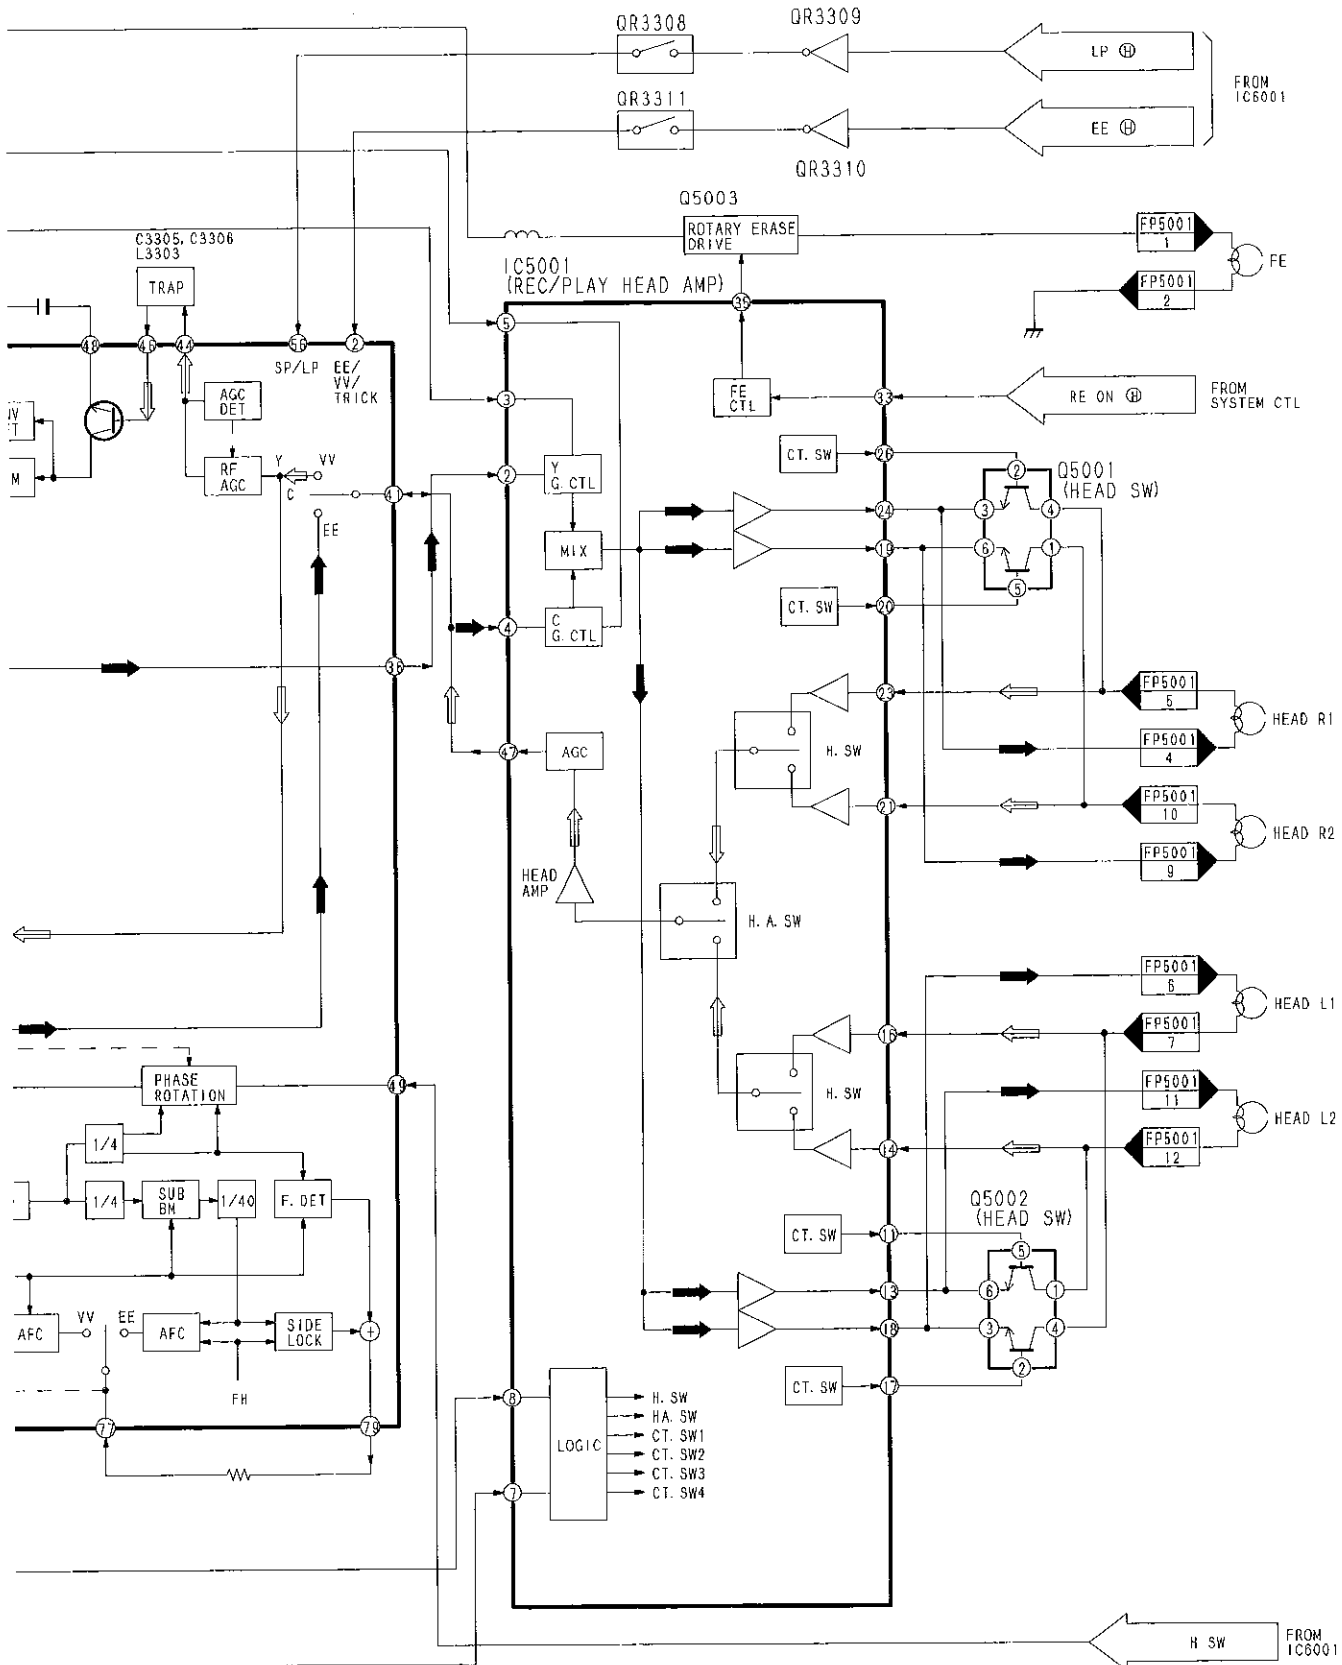

# 9.2. CAMERA 2 SCHEMATIC DIAGRAM

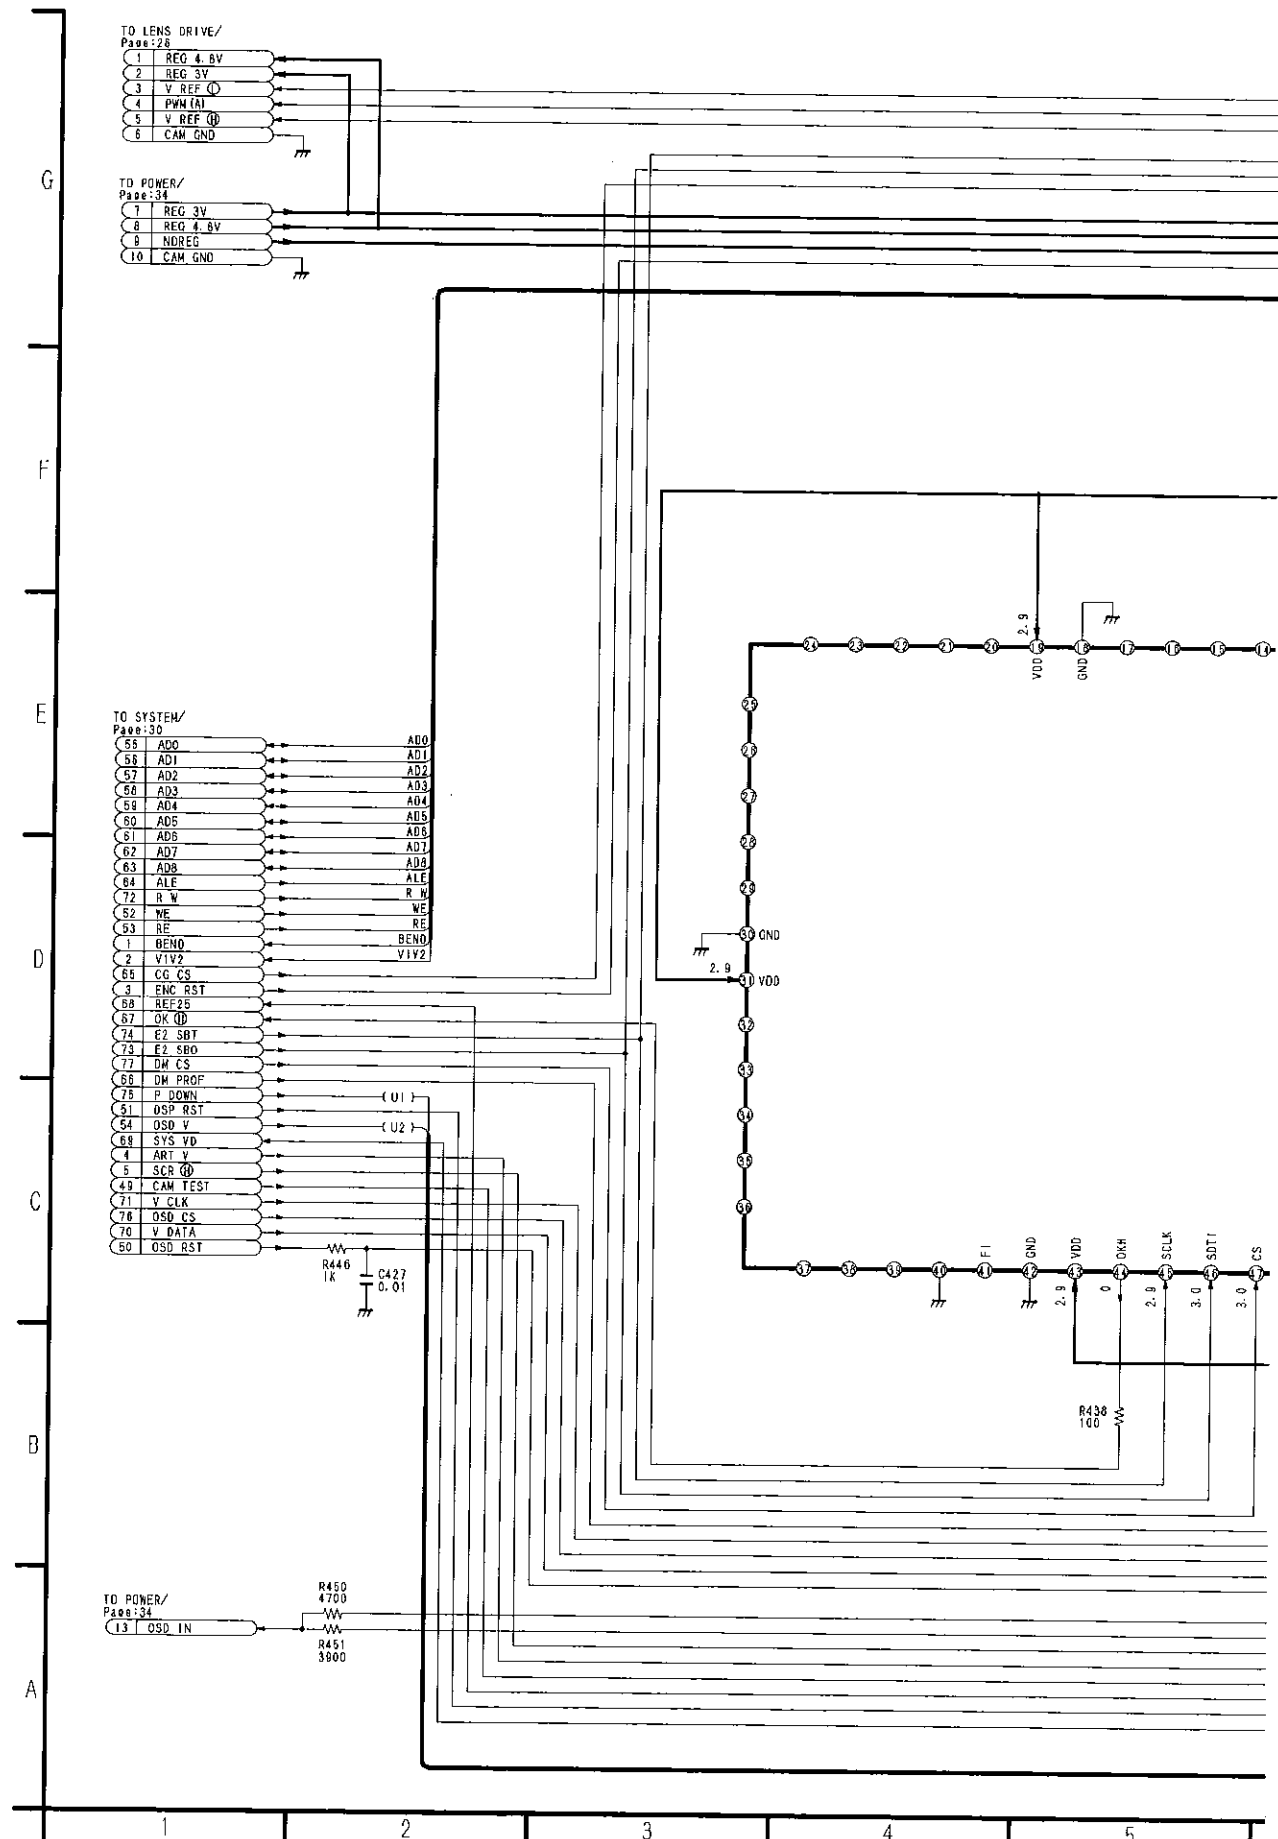


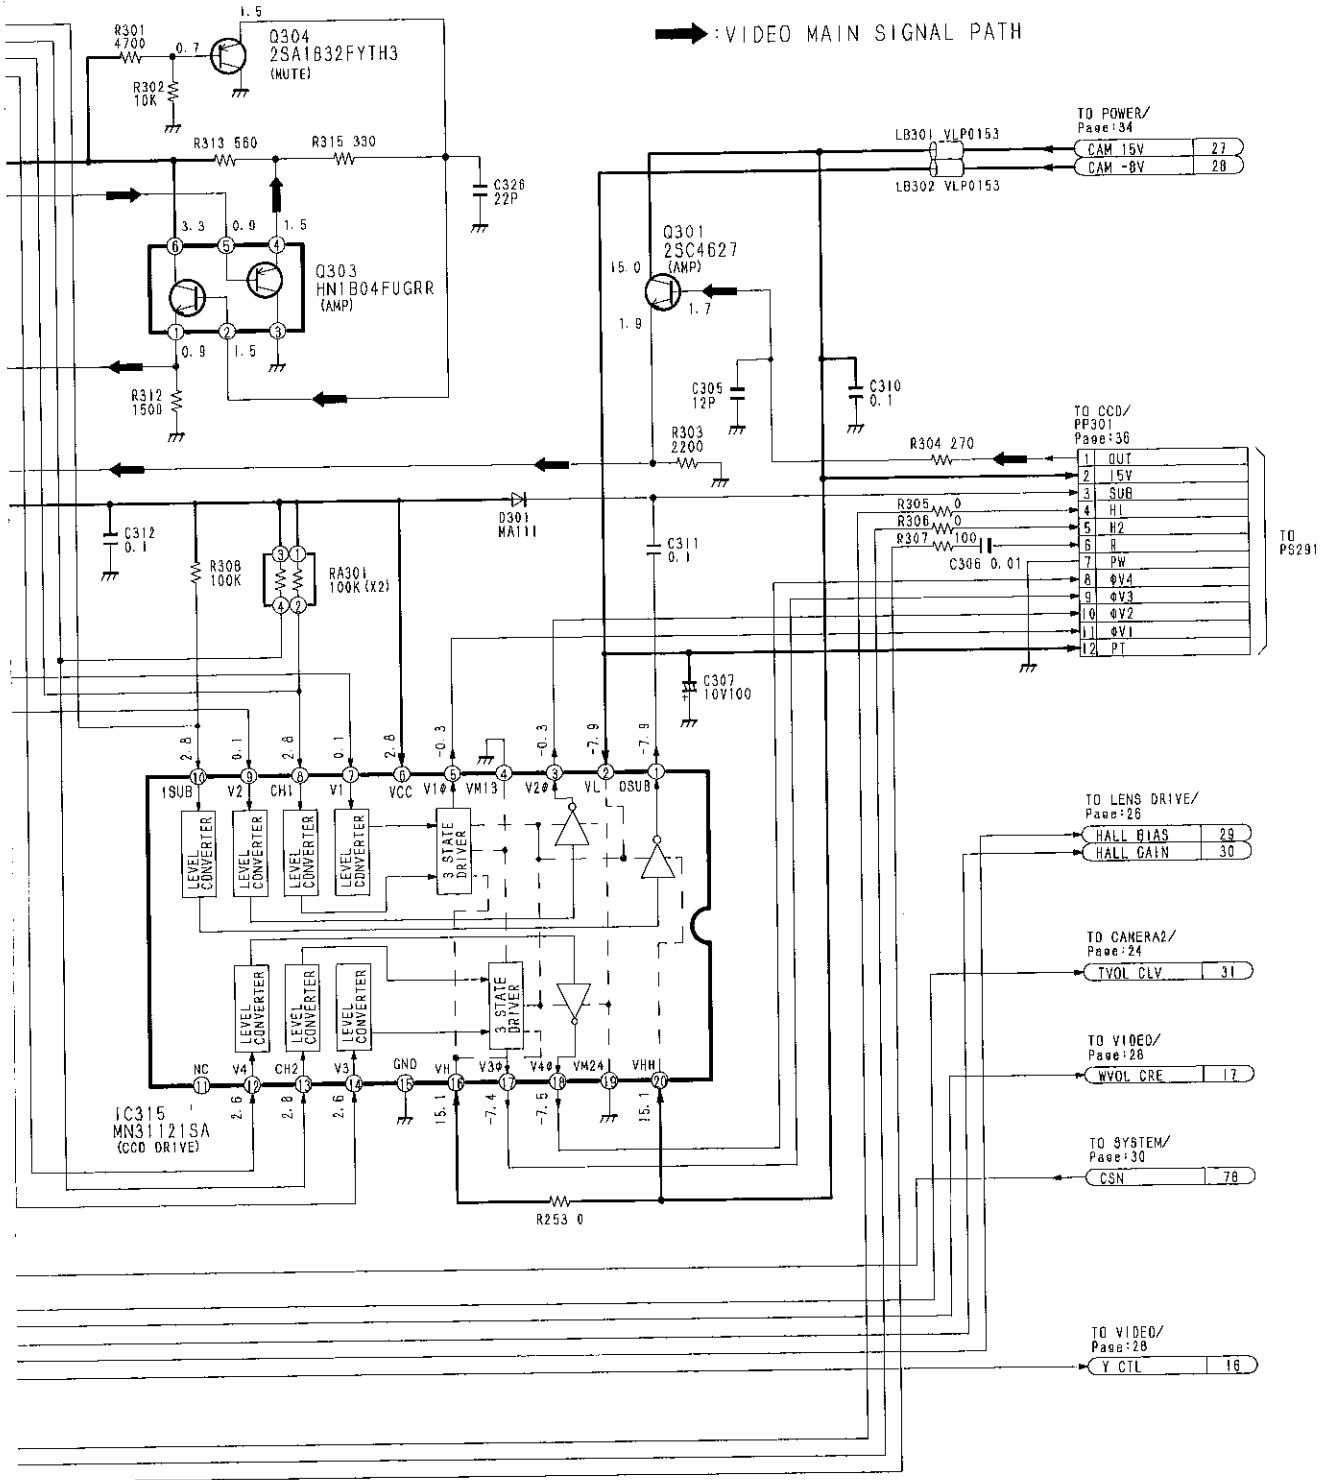


NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIST.  
NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE ON THIS DIAGRAM IS STOP MODE.

# 9 SCHEMATIC DIAGRAMS

## 9.1. CAMERA 1 SCHEMATIC DIAGRAM

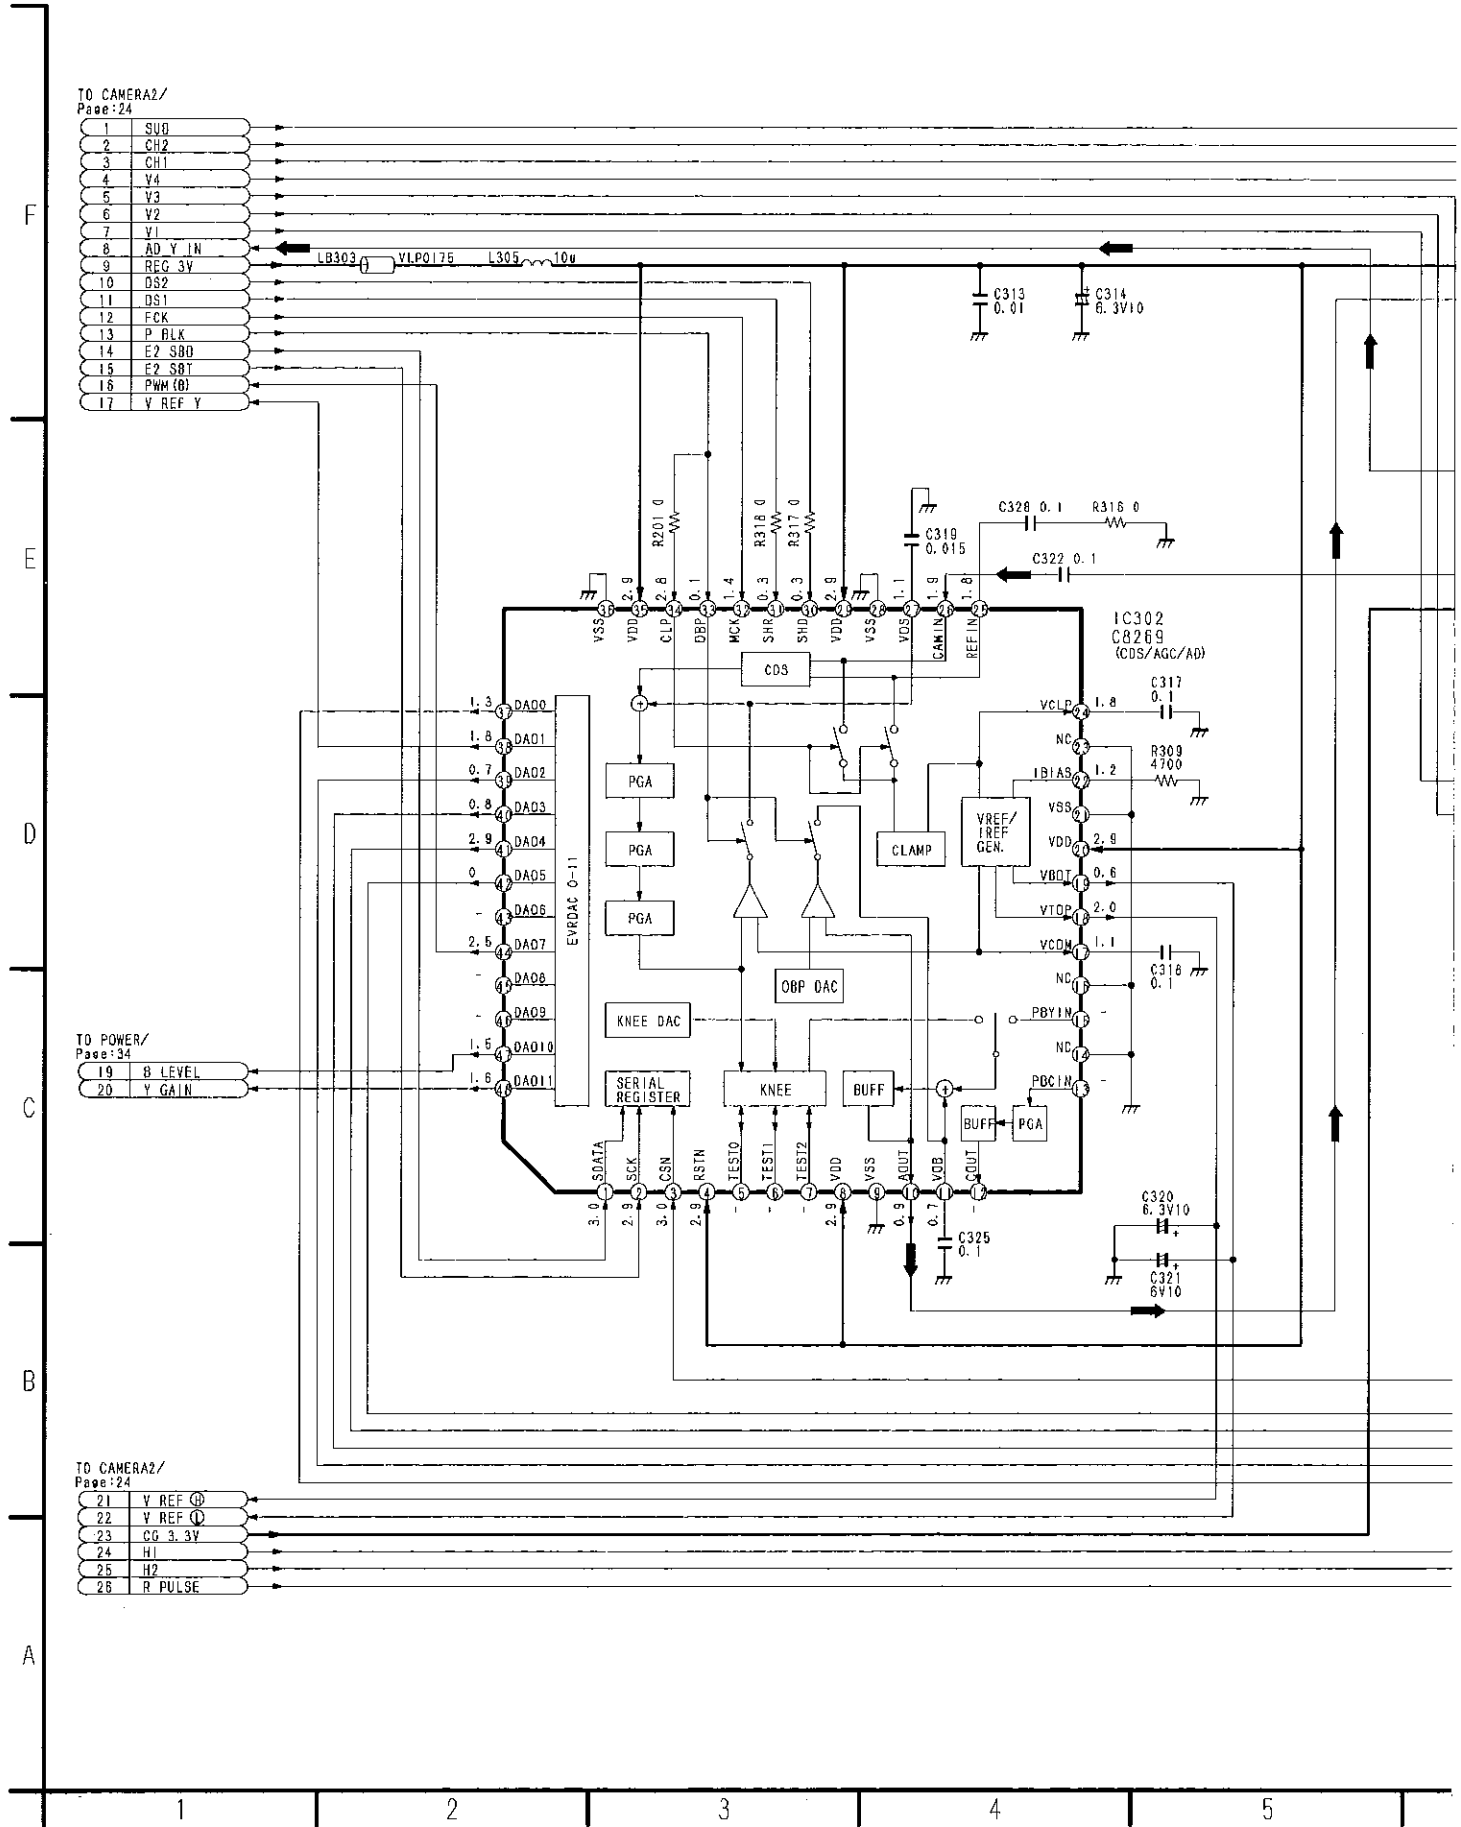


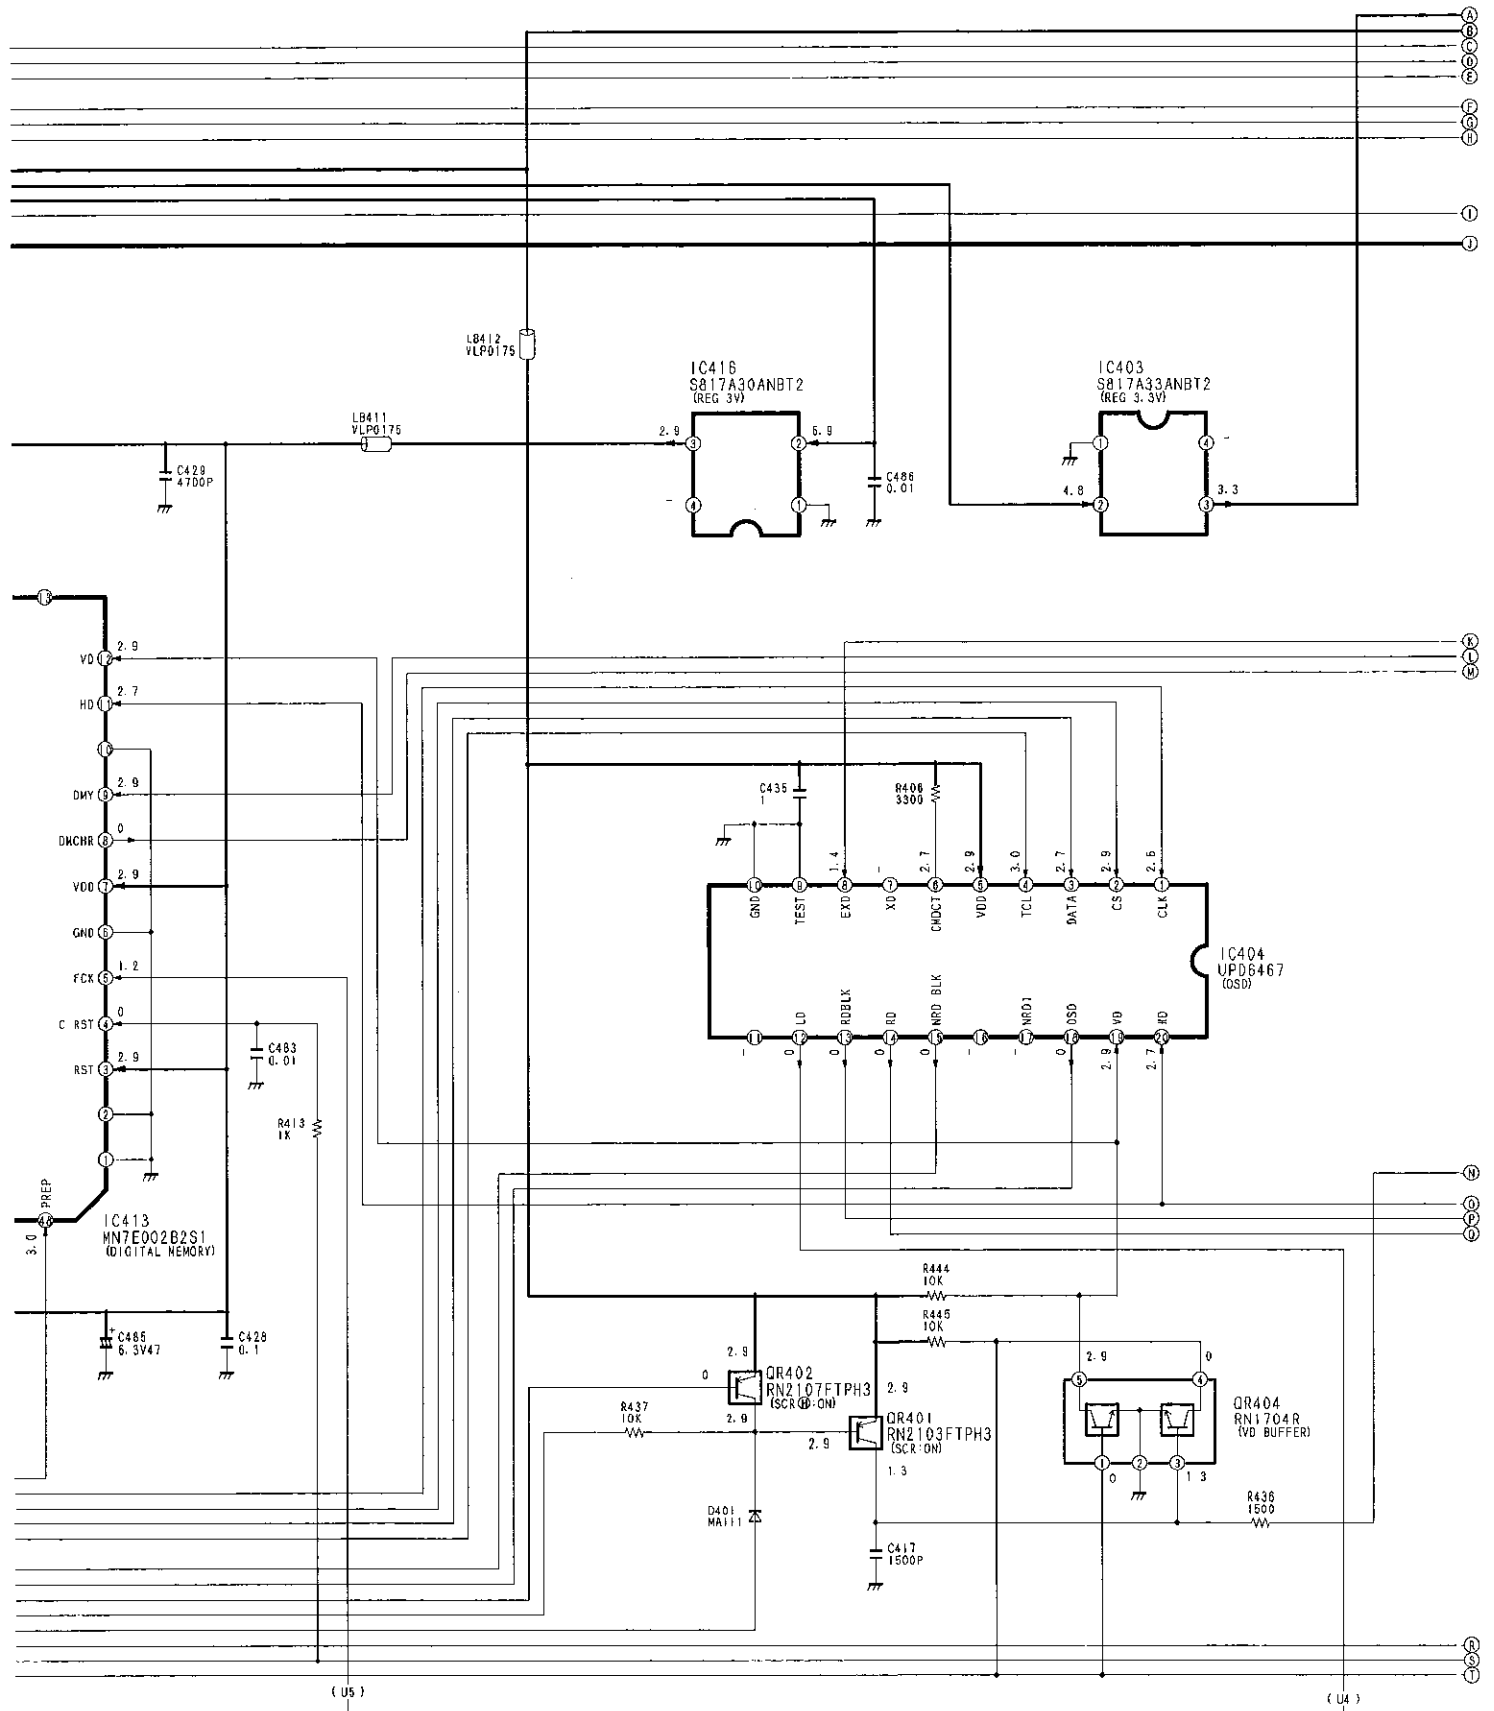

(U5)

(U4)

# 9.3. LENS DRIVE SCHEMATIC DIAGRAM

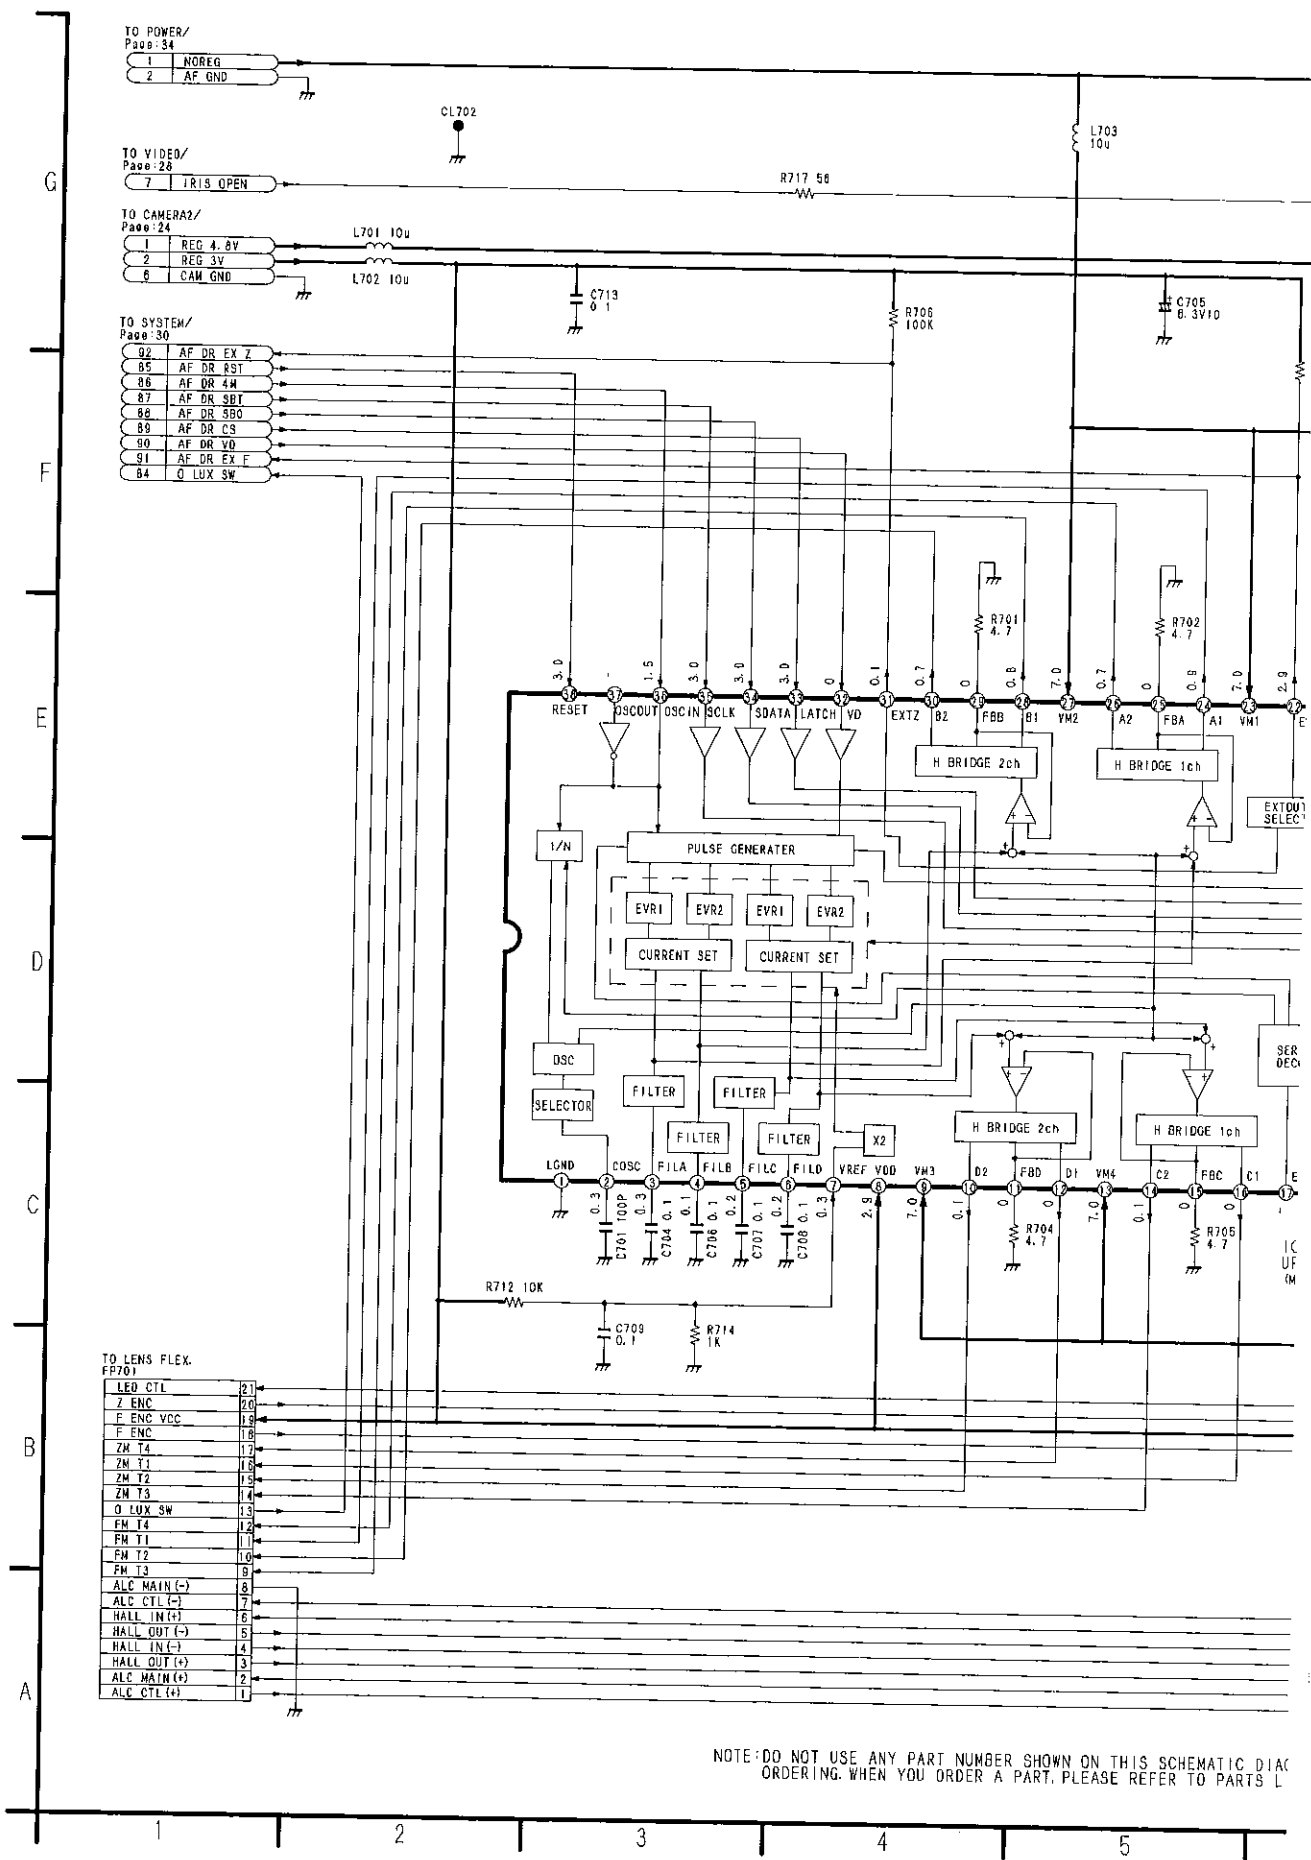

TO POWER/  
Page: 34  
1 NOREG  
2 AF GND

TO VIDEO/  
Page: 28  
7 IRIS OPEN

TO CAMERA2/  
Page: 24  
1 REG 4.8V  
2 REG 3V  
6 CAM GND

TO SYSTEM/  
Page: 30


- 92 AF DR EX Z
- 85 AF DR RST
- 86 AF DR 4M
- 87 AF DR SBT
- 88 AF DR 5BO
- 89 AF DR CS
- 90 AF DR VD
- 91 AF DR EX F
- 84 G LUX SW

TO LENS FLEX.  
FP701

- 21 LED CTL
- 20 Z ENC
- 19 F ENC VCC
- 18 F ENC
- 17 ZM T4
- 16 ZM T1
- 15 ZM T2
- 14 ZM T3
- 13 G LUX SW
- 12 FM T4
- 11 FM T1
- 10 FM T2
- 9 FM T3
- 8 ALC MAIN (-)
- 7 ALC CTL (-)
- 6 HALL IN (+)
- 5 HALL OUT (-)
- 4 HALL IN (-)
- 3 HALL OUT (+)
- 2 ALC MAIN (+)
- 1 ALC CTL (+)

NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIST.

➔ : VIDEO MAIN SIGNAL PATH

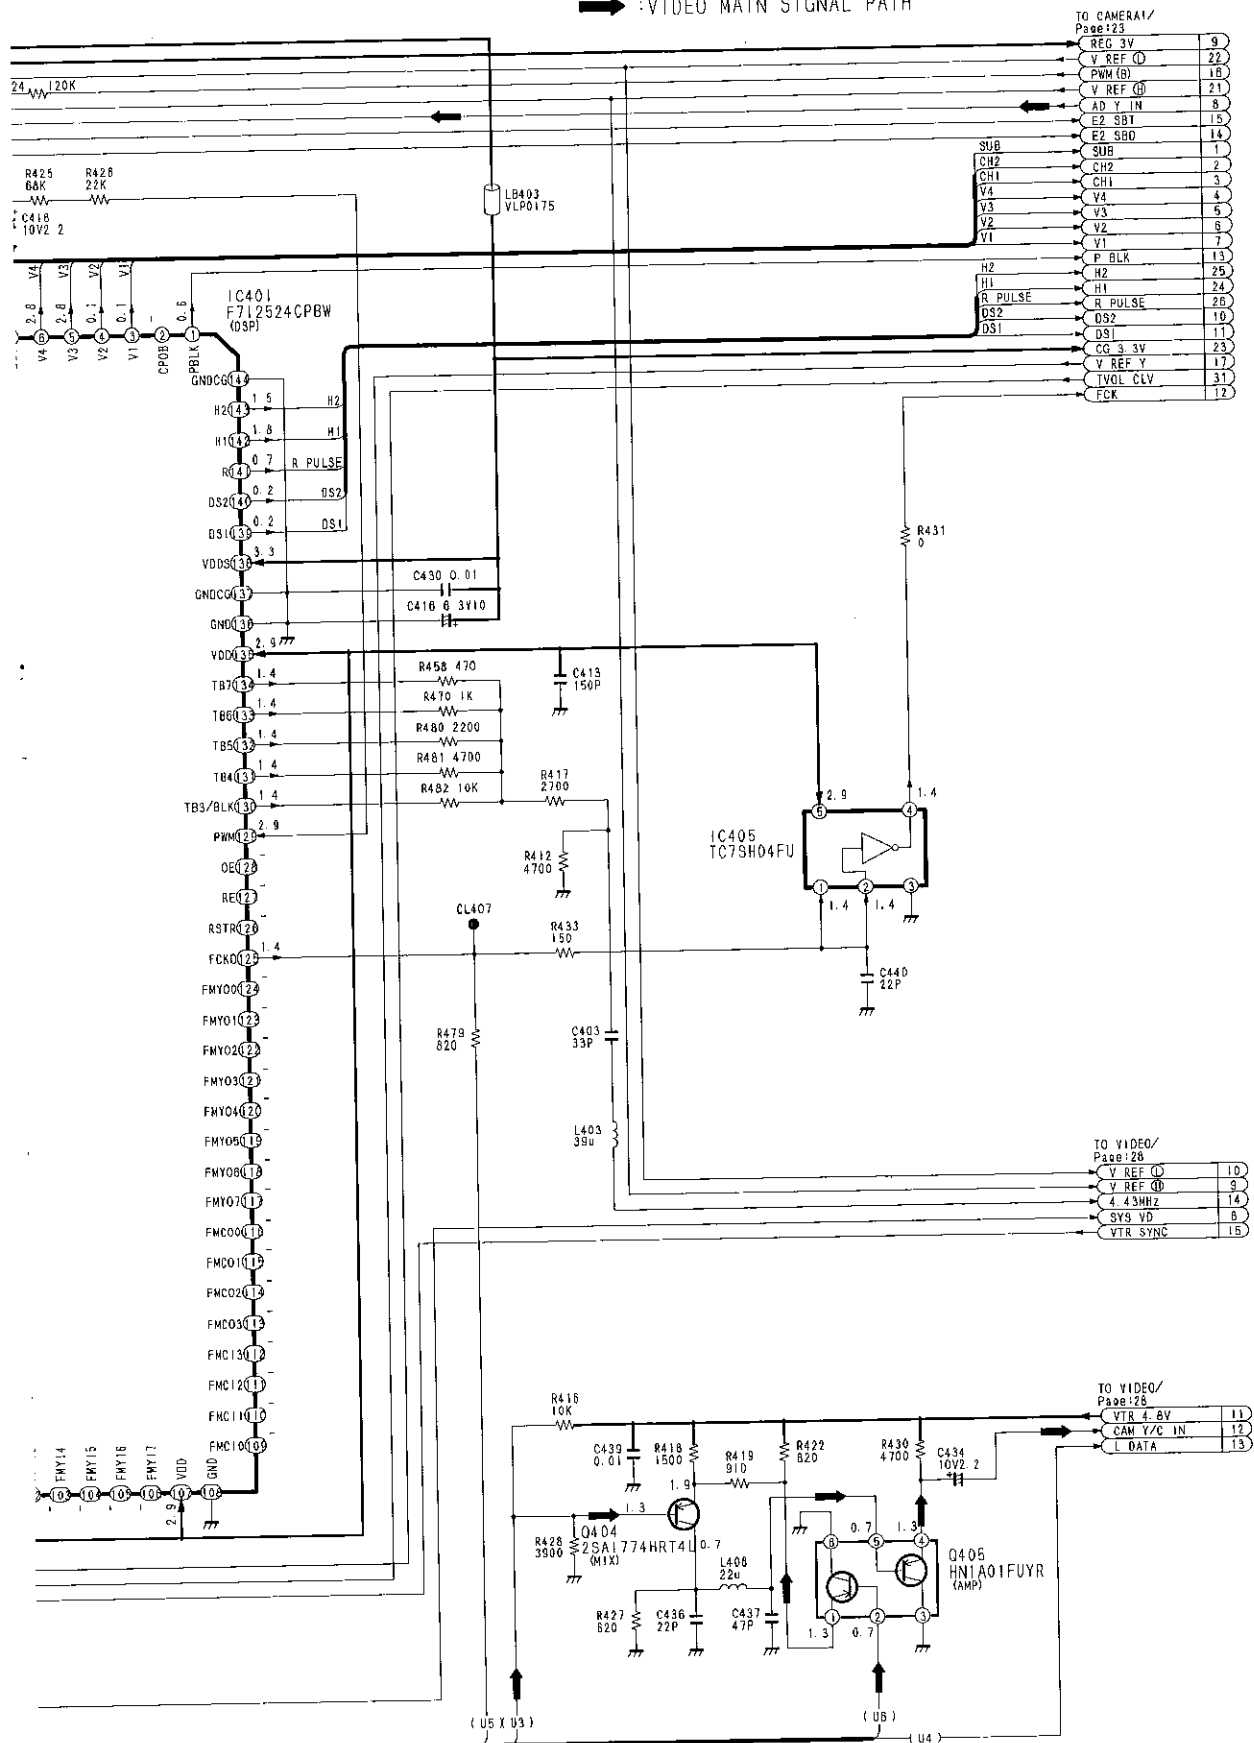

TO CAMERA1/  
Page:23

|           |    |
|-----------|----|
| REG 3V    | 9  |
| V REF (D) | 22 |
| PWM (B)   | 15 |
| V REF (D) | 21 |
| AD Y IN   | 8  |
| E2 SBT    | 15 |
| E2 SBD    | 14 |
| SUB       | 1  |
| CH2       | 2  |
| CH1       | 3  |
| V4        | 4  |
| V3        | 5  |
| V2        | 6  |
| V1        | 7  |
| P BLK     | 13 |
| H2        | 25 |
| H1        | 24 |
| R PULSE   | 25 |
| DS2       | 10 |
| DS1       | 11 |
| DS1       | 11 |
| CG 3.3V   | 23 |
| V REF Y   | 17 |
| TWOL CLV  | 31 |
| FCK       | 12 |

TO VIDEO/  
Page:28


|           |    |
|-----------|----|
| V REF (D) | 10 |
| V REF (D) | 9  |
| 4.43MHz   | 14 |
| SY9 VD    | 8  |
| VTR SYNC  | 15 |

TO VIDEO/  
Page:28

|            |    |
|------------|----|
| VTR 4.8V   | 11 |
| CAM Y/C IN | 12 |
| L DATA     | 13 |


NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE ON THIS DIAGRAM IS STOP MODE.



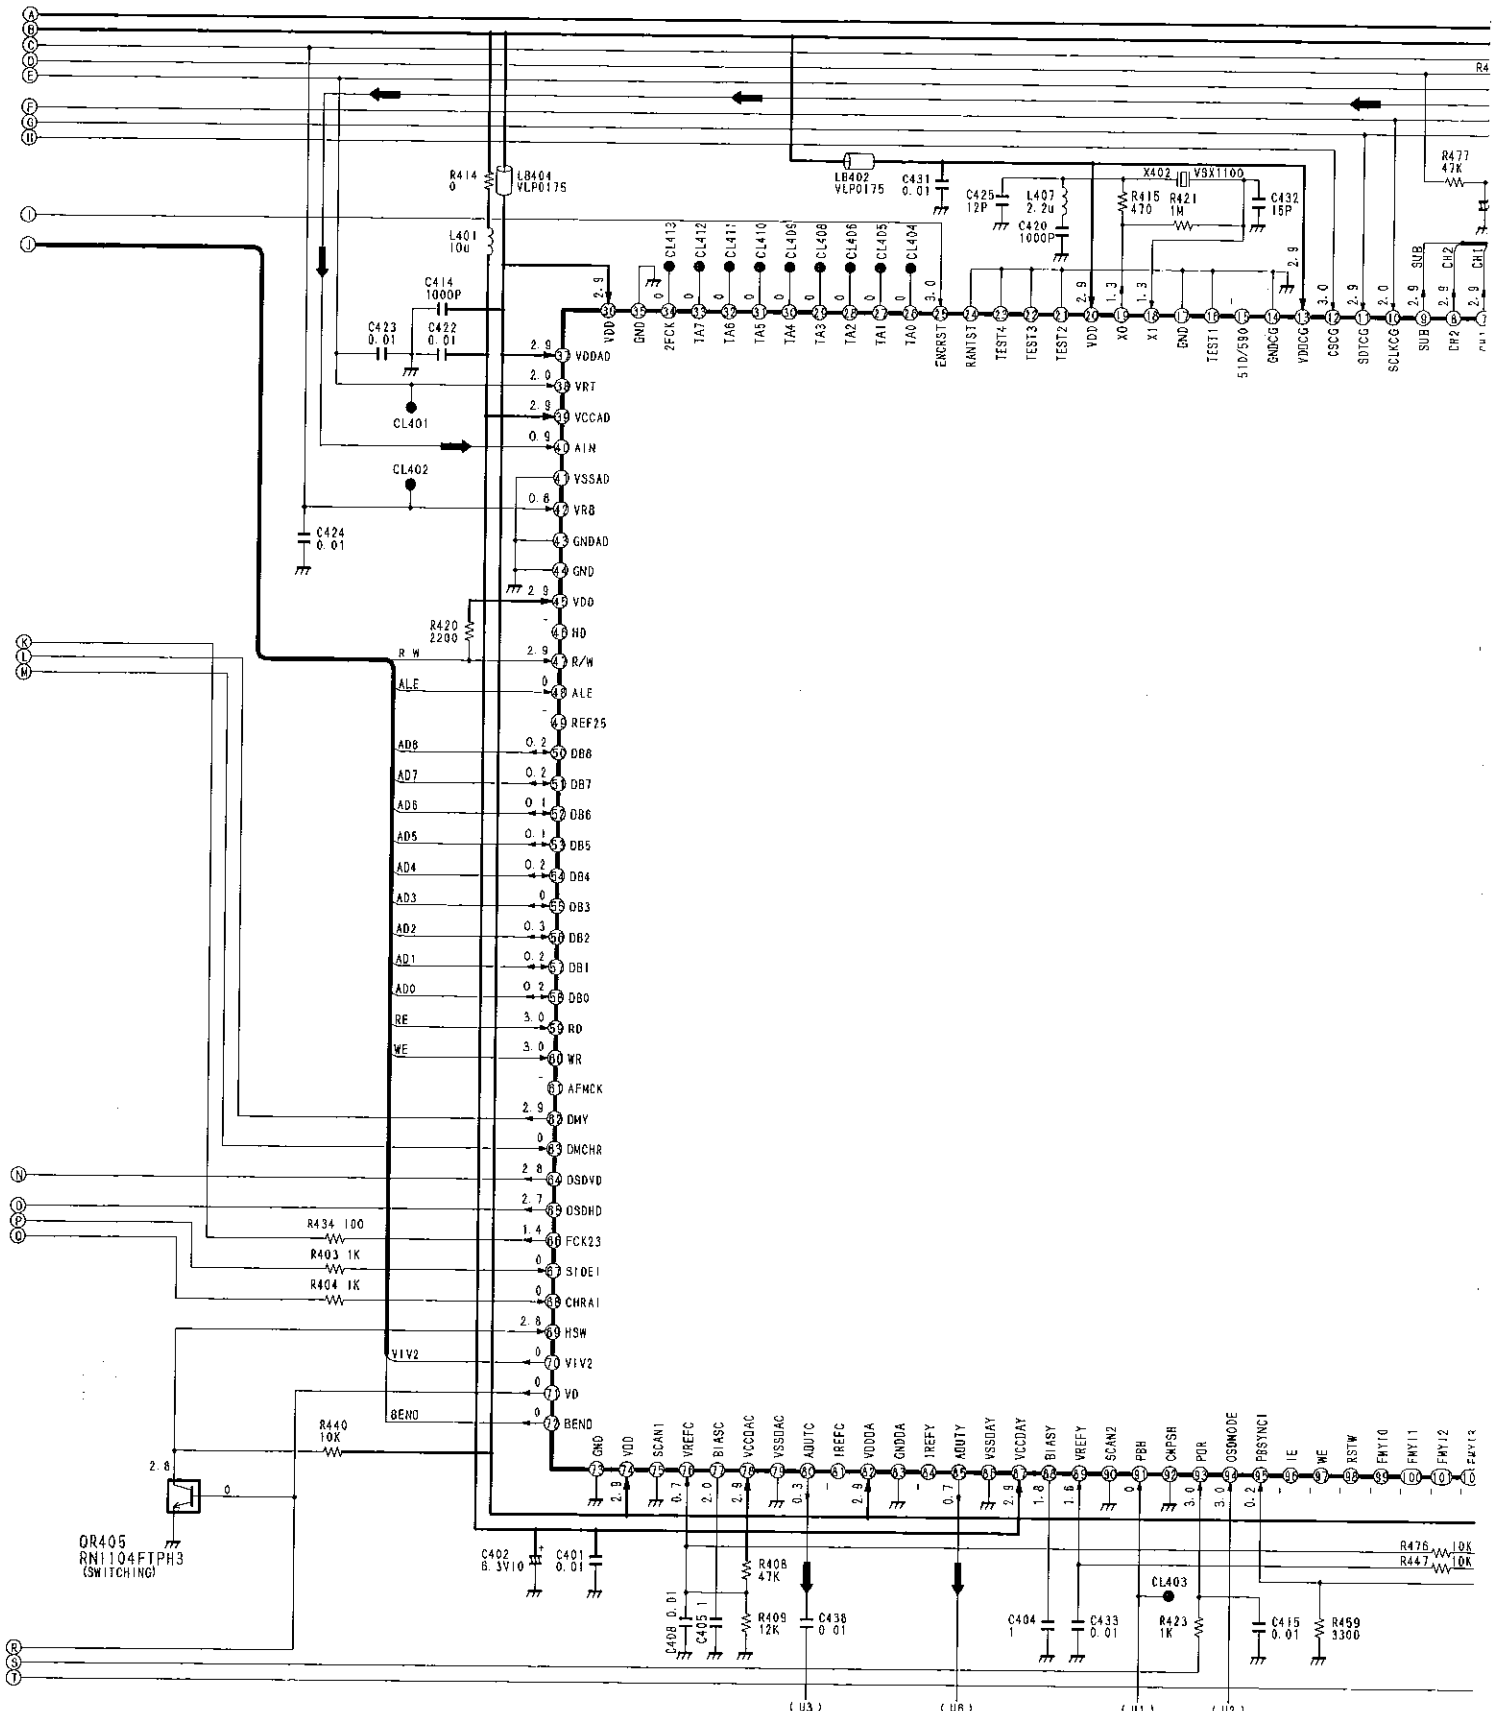

NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIS.


12 | 13 | 14 | 15 | 16 | 17

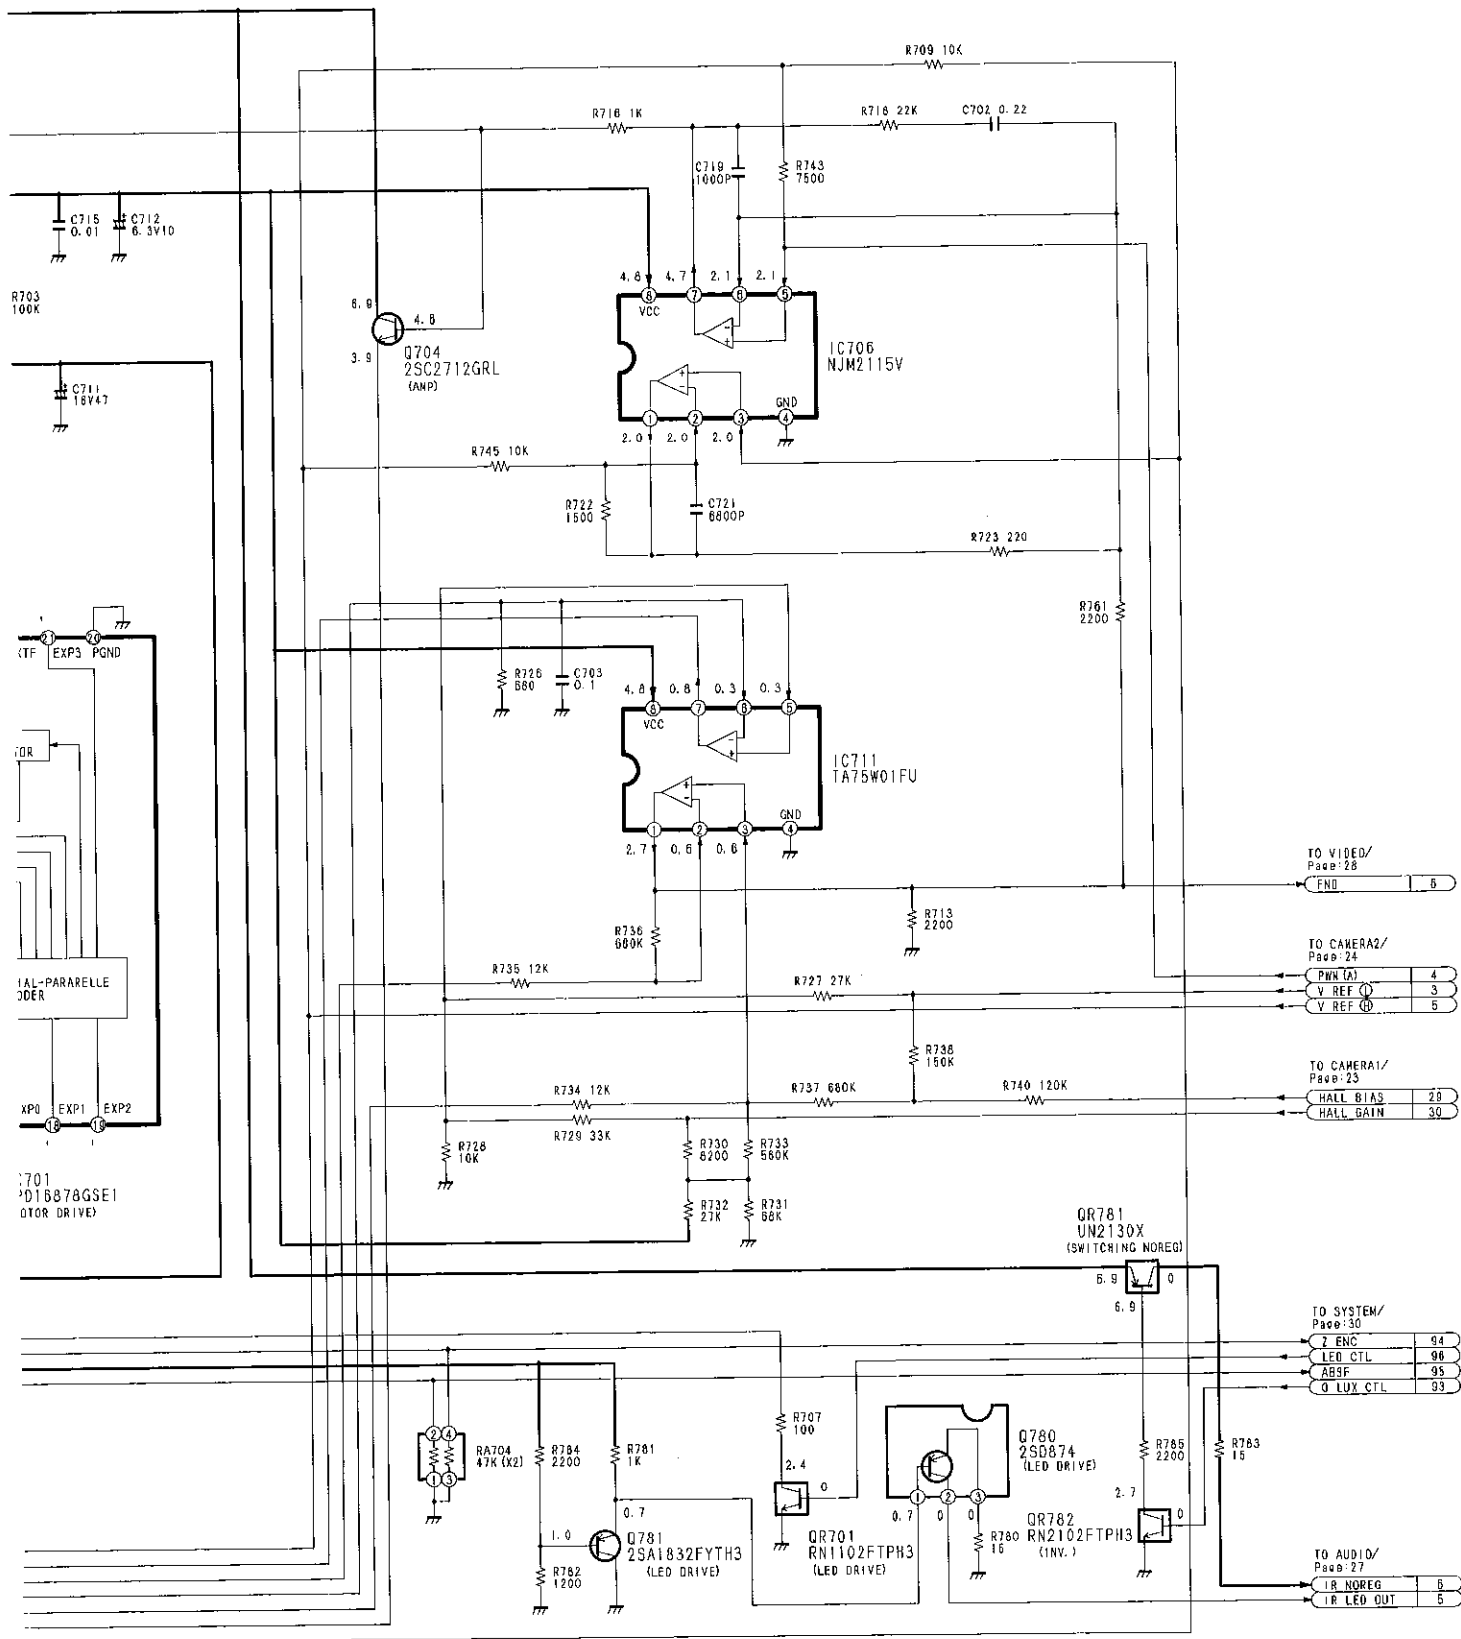


GRAM FOR  
ST.

NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE ON THIS DIAGRAM IS STOP MODE.

# 9.5. VIDEO SCHEMATIC DIAGRAM

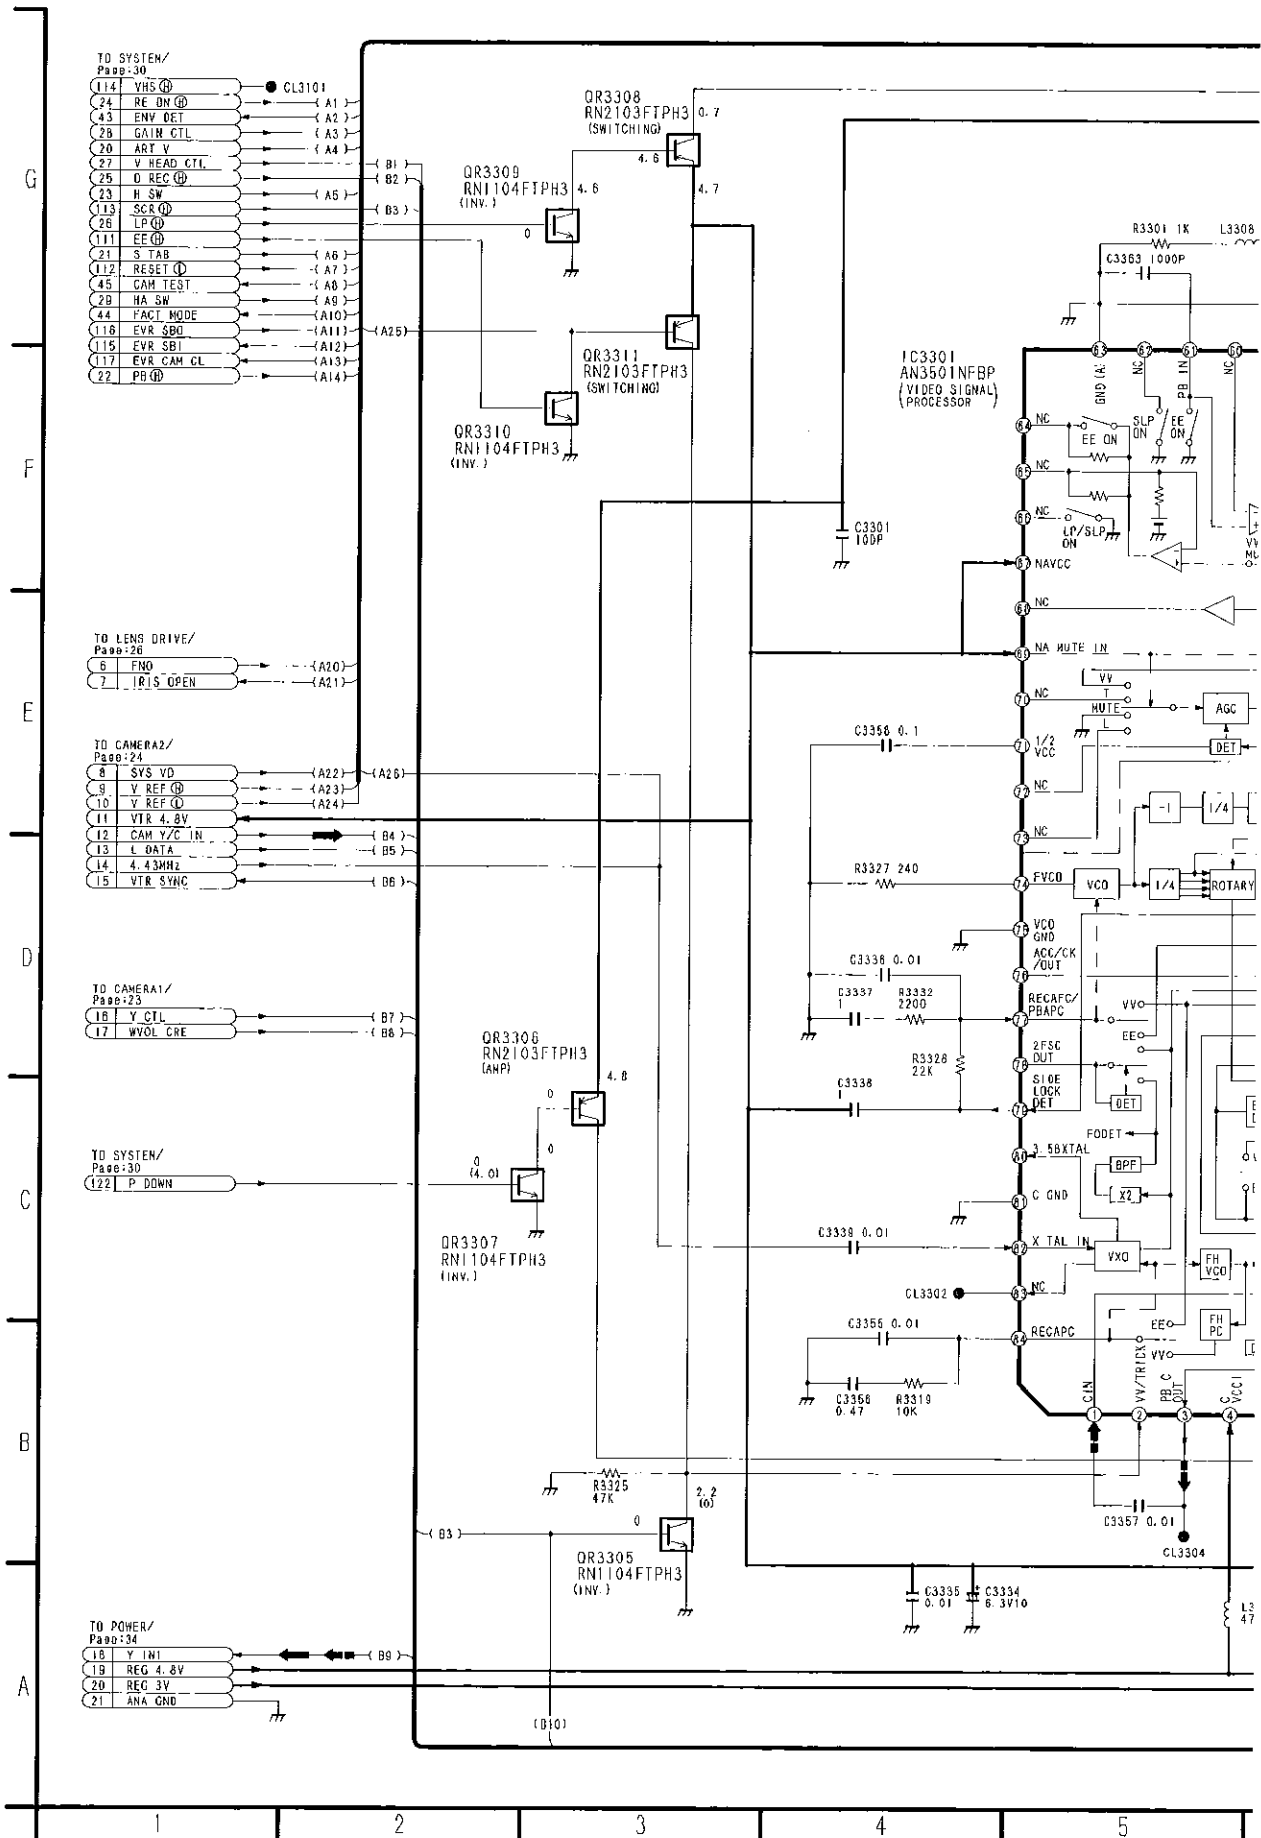

0 MAIN SIGNAL PATH IN REC MODE    **➡** :AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE

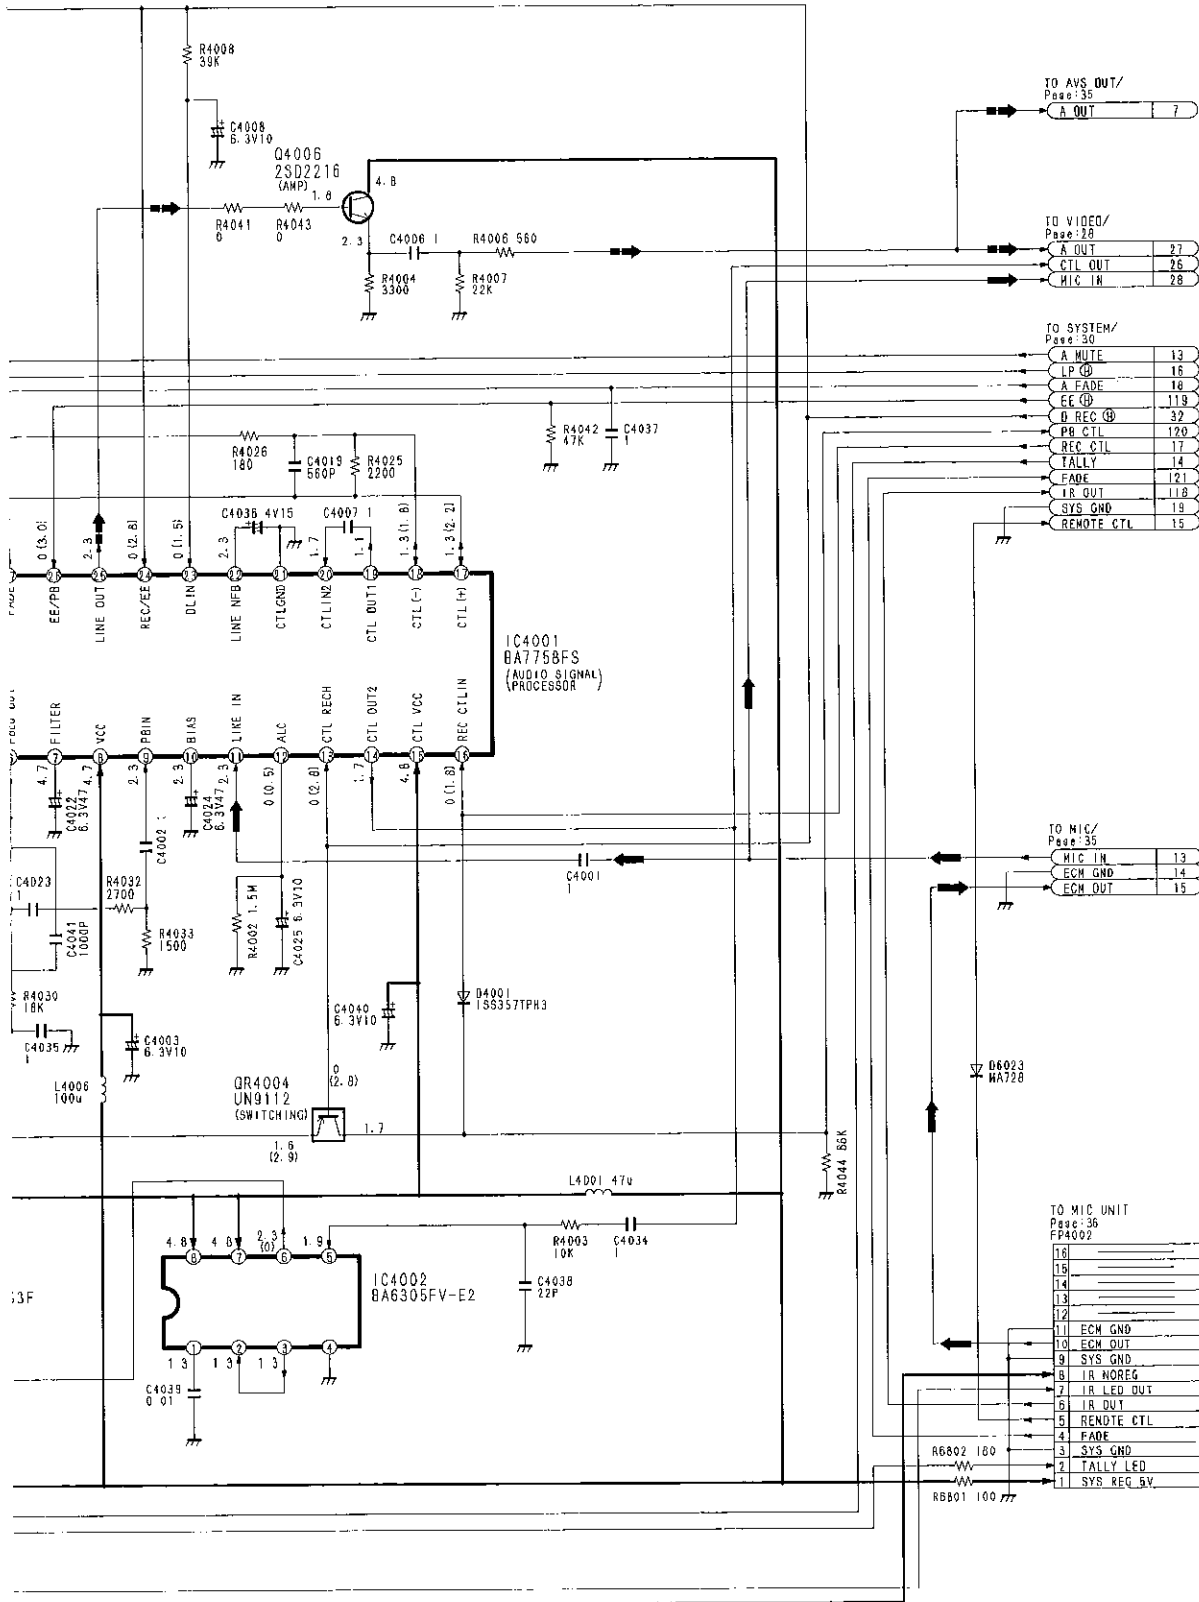

TO AVS OUT/  
Page:35  
A OUT 7

TO VIDEO/  
Page:28  
A OUT 27  
CTL OUT 26  
MIC IN 28

TO SYSTEM/  
Page:30  
A MUTE 13  
LP CD 16  
A FADE 18  
EE CD 119  
B REC CD 32  
PB CTL 120  
REC CTL 17  
TALLY 14  
FADE 121  
IR OUT 118  
SYS GND 19  
REMOTE CTL 15

TO MIC/  
Page:35  
MIC IN 13  
ECH GND 14  
ECH OUT 15


TO MIC UNIT  
Page:36  
FP4002  
18  
15  
14  
13  
12  
11 ECH GND  
10 ECH OUT  
9 SYS GND  
8 IR MOREG  
7 IR LED OUT  
6 IR OUT  
5 REMOTE CTL  
4 FADE  
3 SYS GND  
2 TALLY LED  
1 SYS REC 5V

TO FP601

THE DC VOLTAGE IN THE BRACKET ( ) ON THIS DIAGRAM IS

THE MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKET ON THIS DIAGRAM IS PLAYBACK MODE

# 9.4. AUDIO SCHEMATIC DIAGRAM

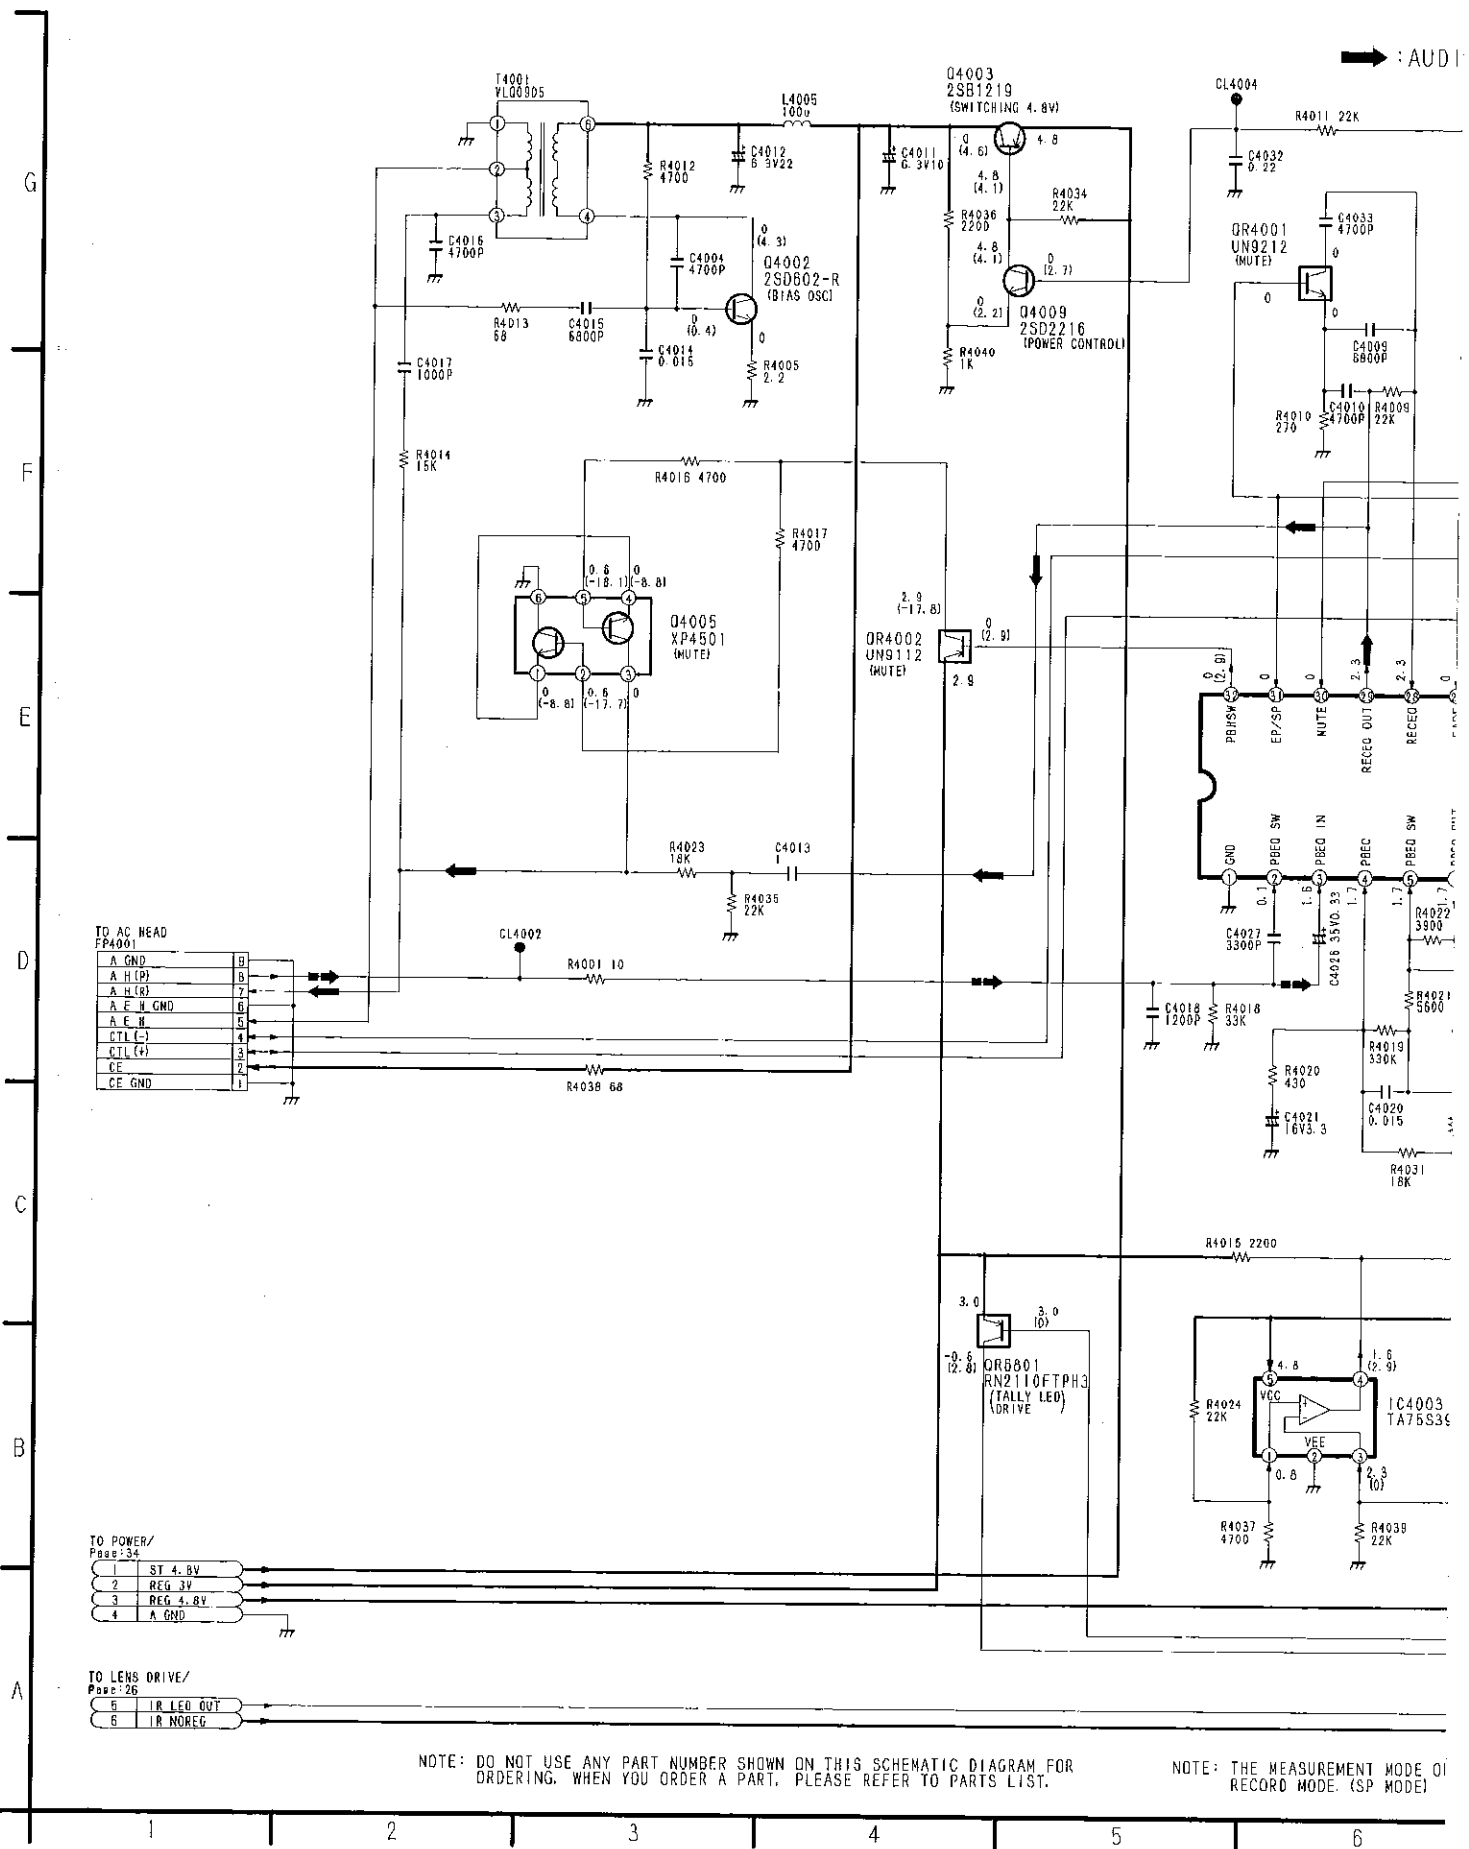

TO AC HEAD  
FP4001

|           |   |
|-----------|---|
| A GND     | 9 |
| A H (P)   | 8 |
| A H (R)   | 7 |
| A E H GND | 6 |
| A C H     | 5 |
| CTL (-)   | 4 |
| CTL (+)   | 3 |
| CE        | 2 |
| CE GND    | 1 |

TO POWER/  
P4003


|   |          |
|---|----------|
| 1 | ST 4.8V  |
| 2 | REG 3V   |
| 3 | REG 4.8V |
| 4 | A GND    |

TO LENS DRIVE/  
P4002


|   |            |
|---|------------|
| 5 | IR LED OUT |
| 6 | IR NOREG   |

NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIST.


NOTE: THE MEASUREMENT MODE OF RECORD MODE (SP MODE)

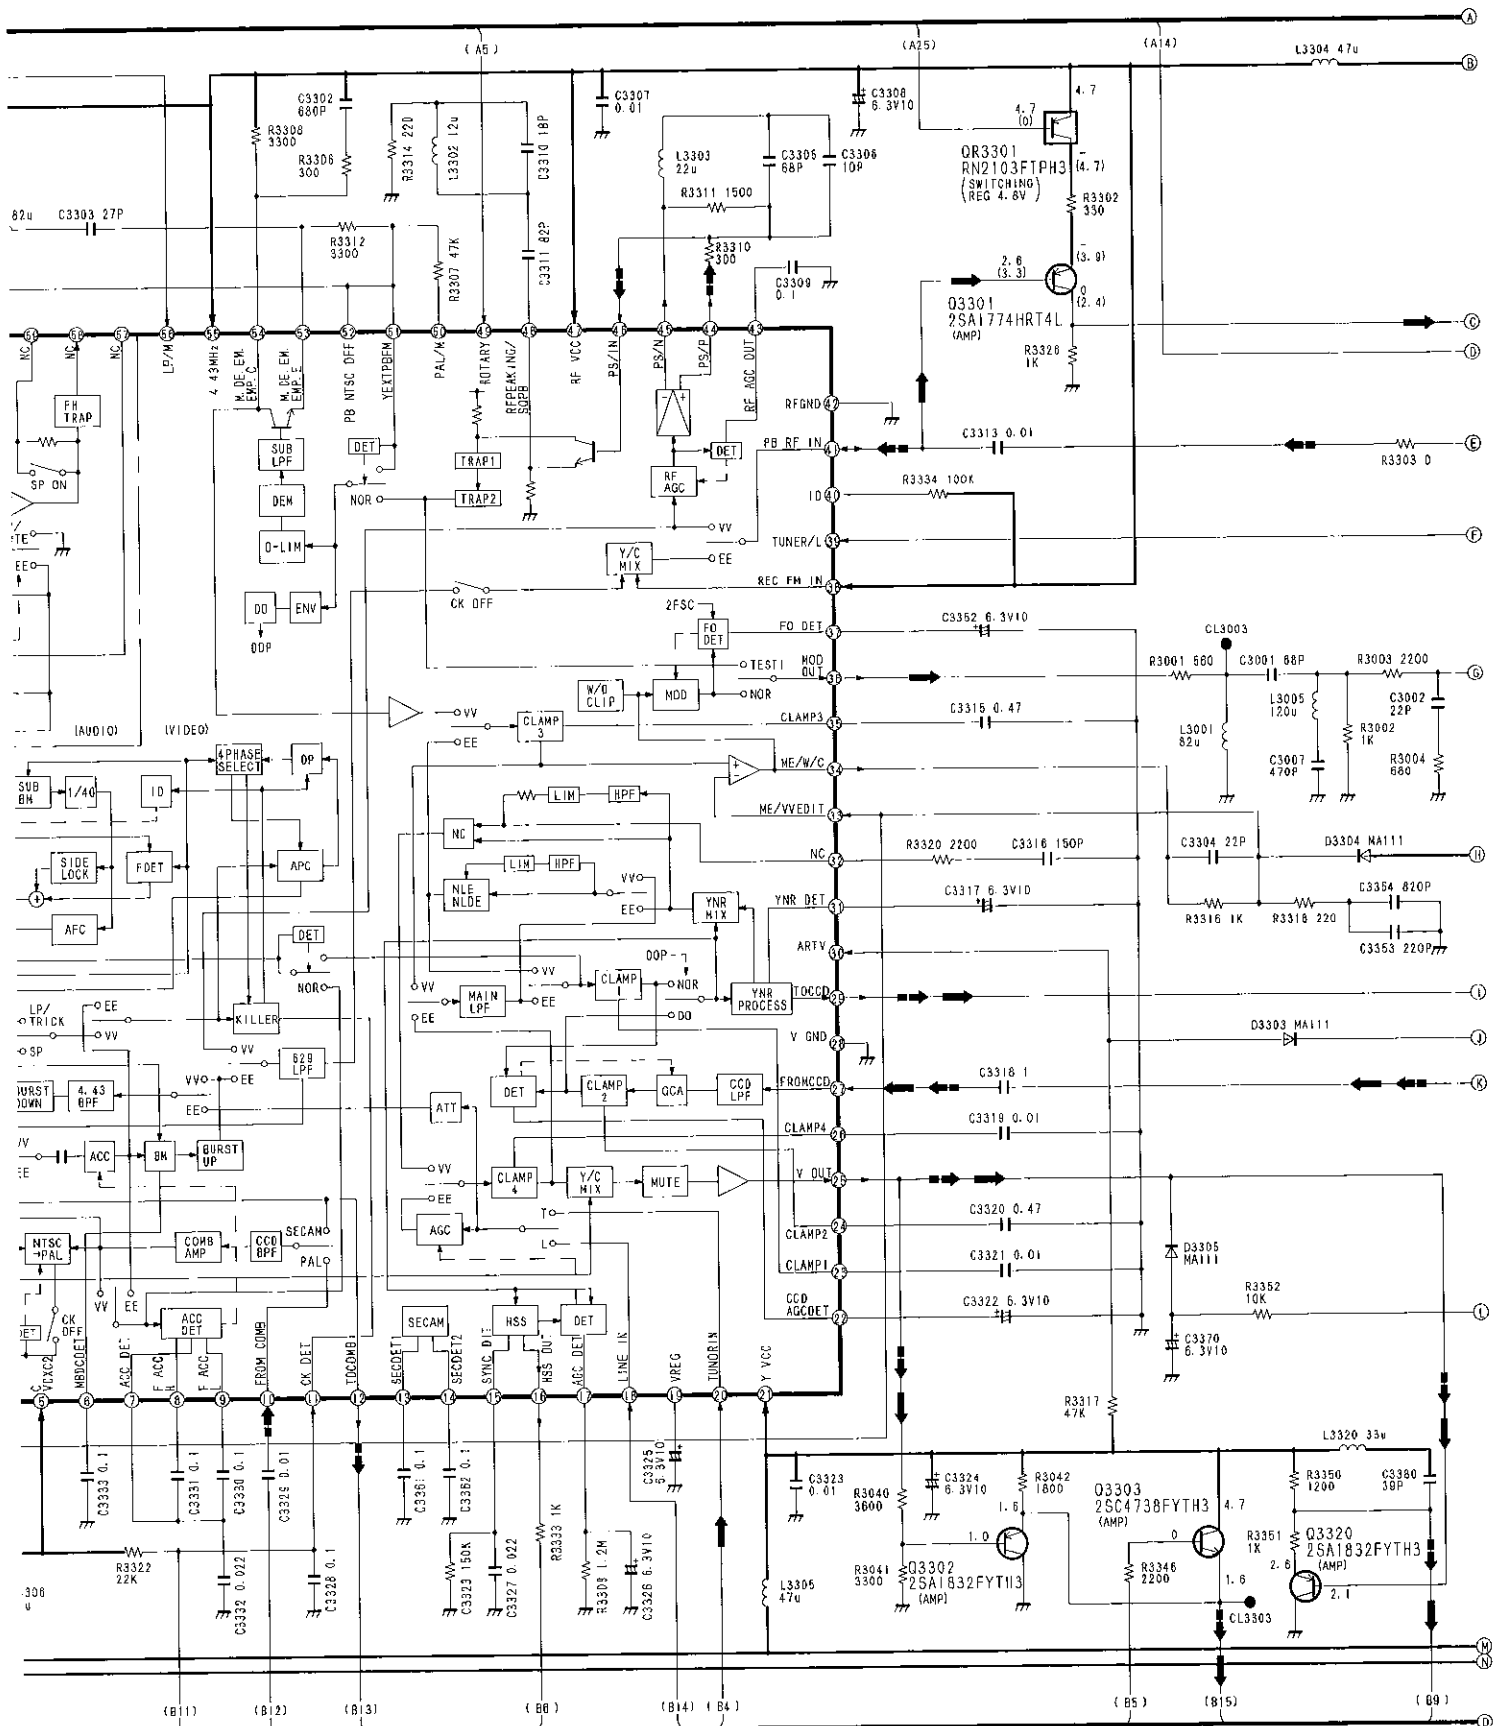

# 9.6. SYSTEM CONTROL & SERVO SCHEMATIC DIAGRAM

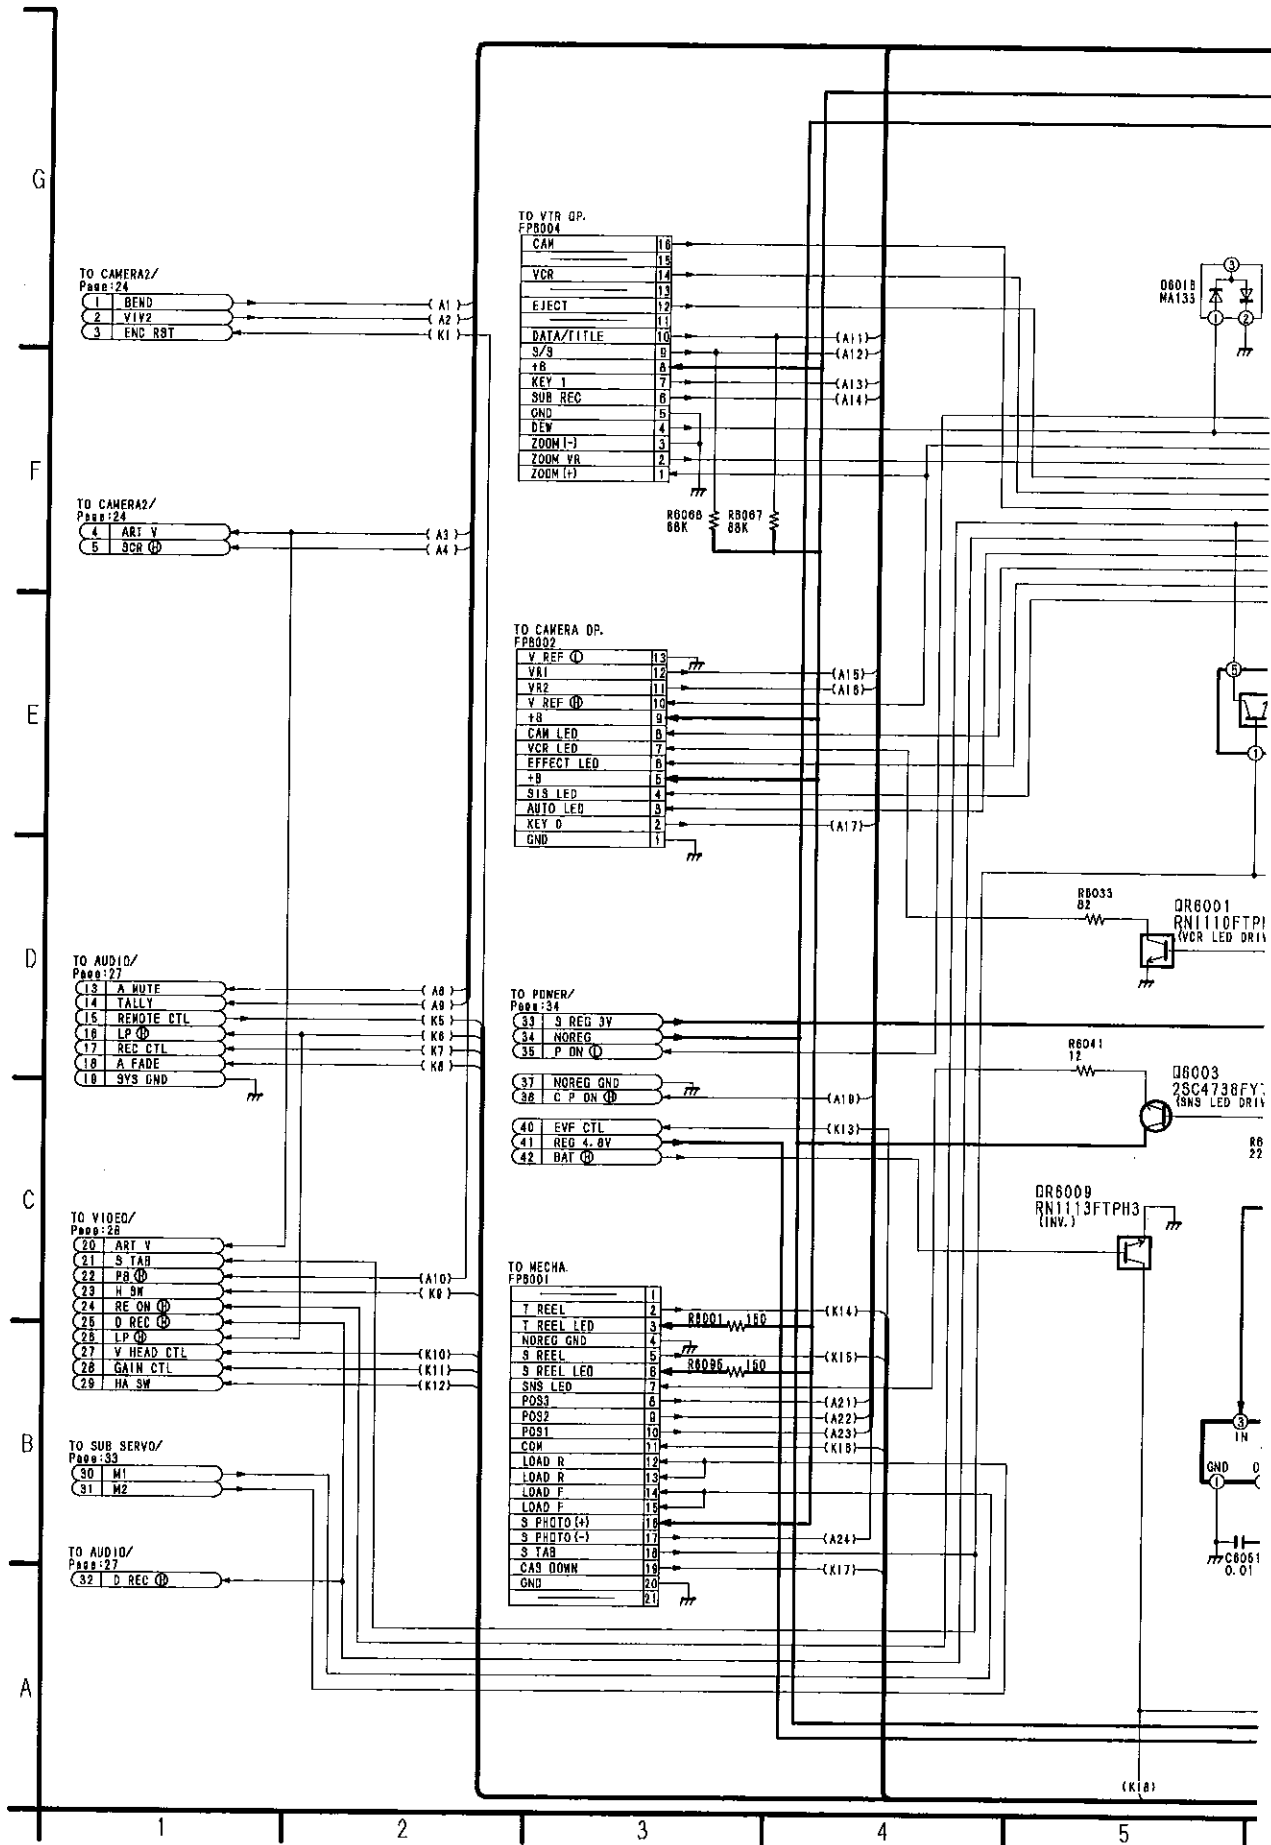

➔ : VIDEO MAIN SIGNAL PATH IN REC MODE    ➔ : VIDEO MAIN SIGNAL PATH IN PLAYBACK MODE

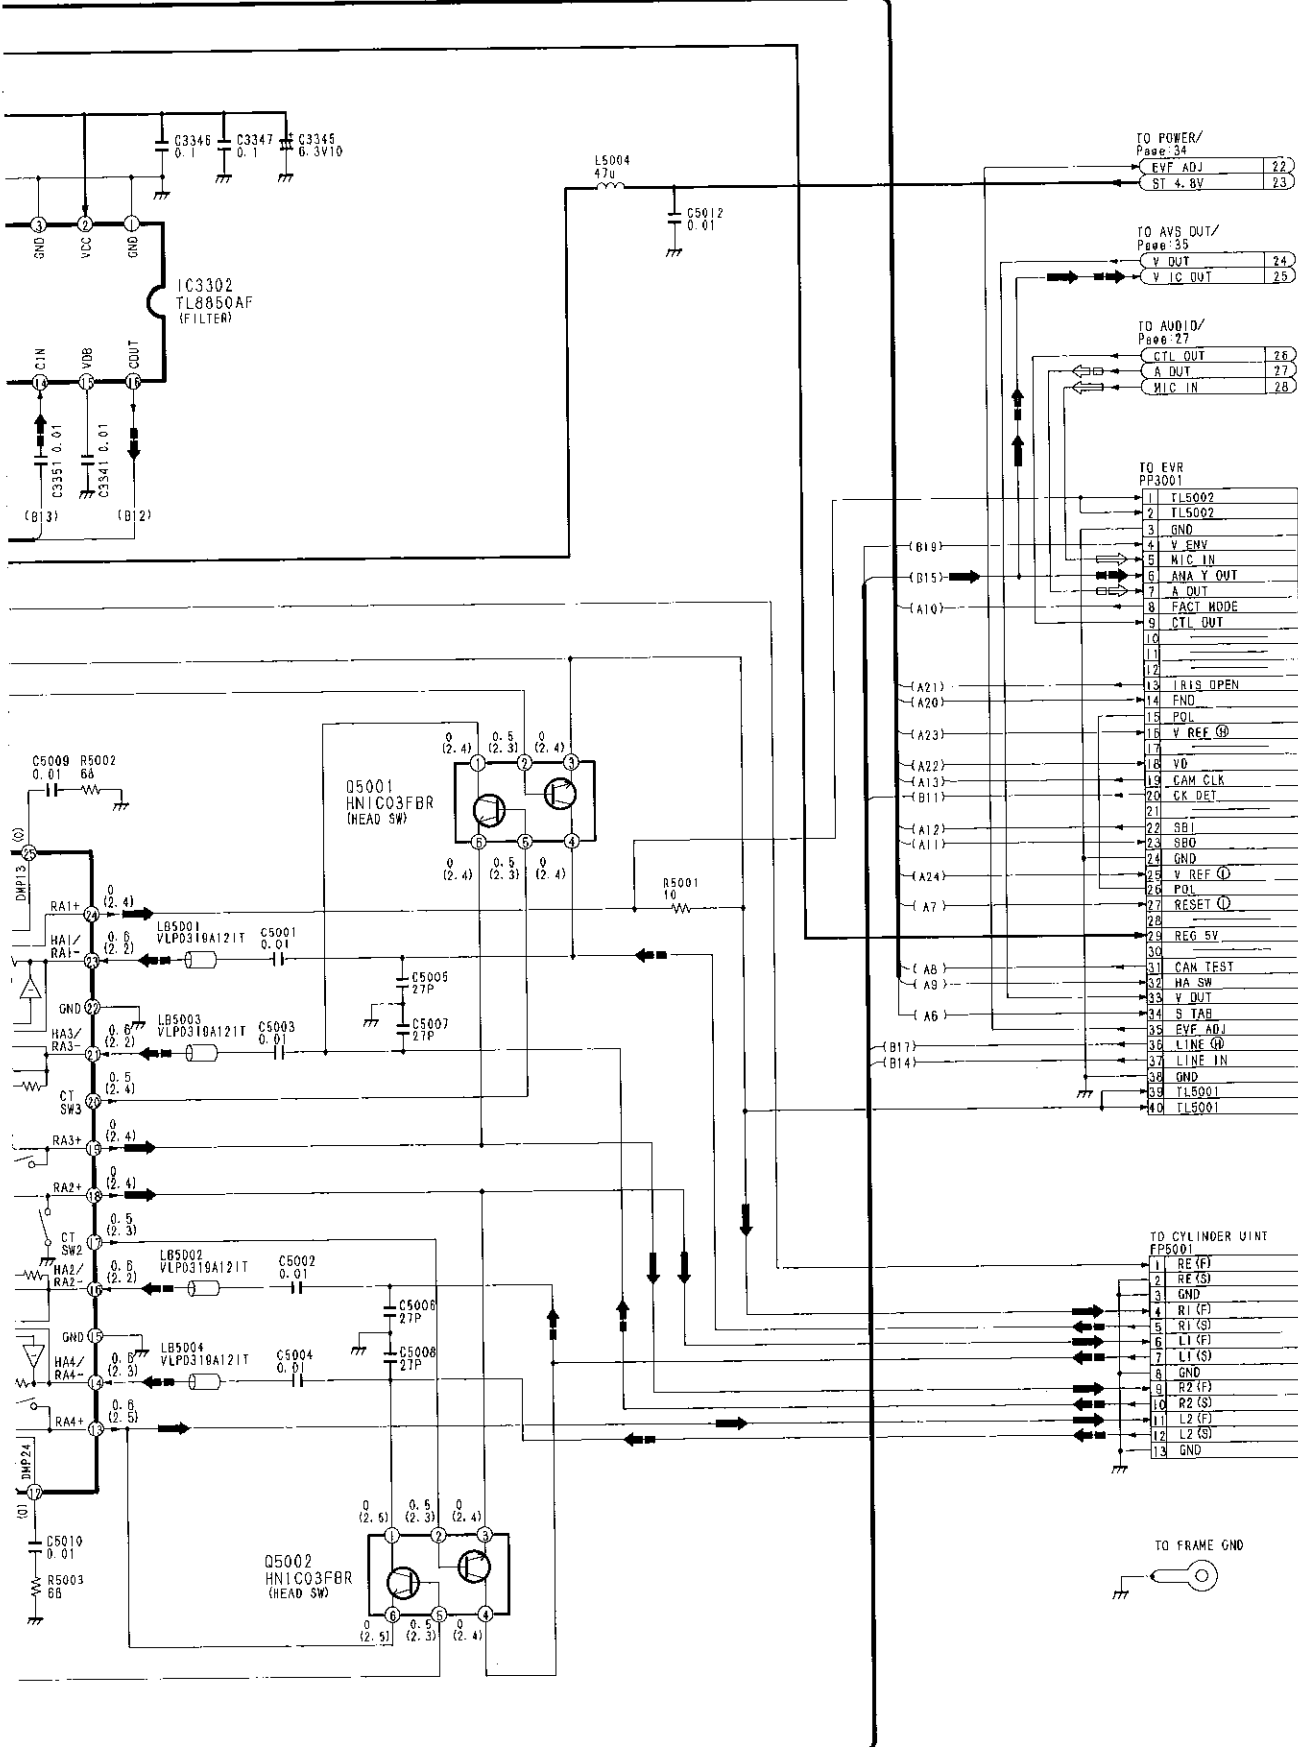

KEYS ( ) ON THIS DIAGRAM IS

THE MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKETS ON THIS DIAGRAM IS PLAYBACK MODE.

18

19


20

21

22




⇒ : AUDIO MAIN SIGNAL PATH IN REC MODE    ⇨ : AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE

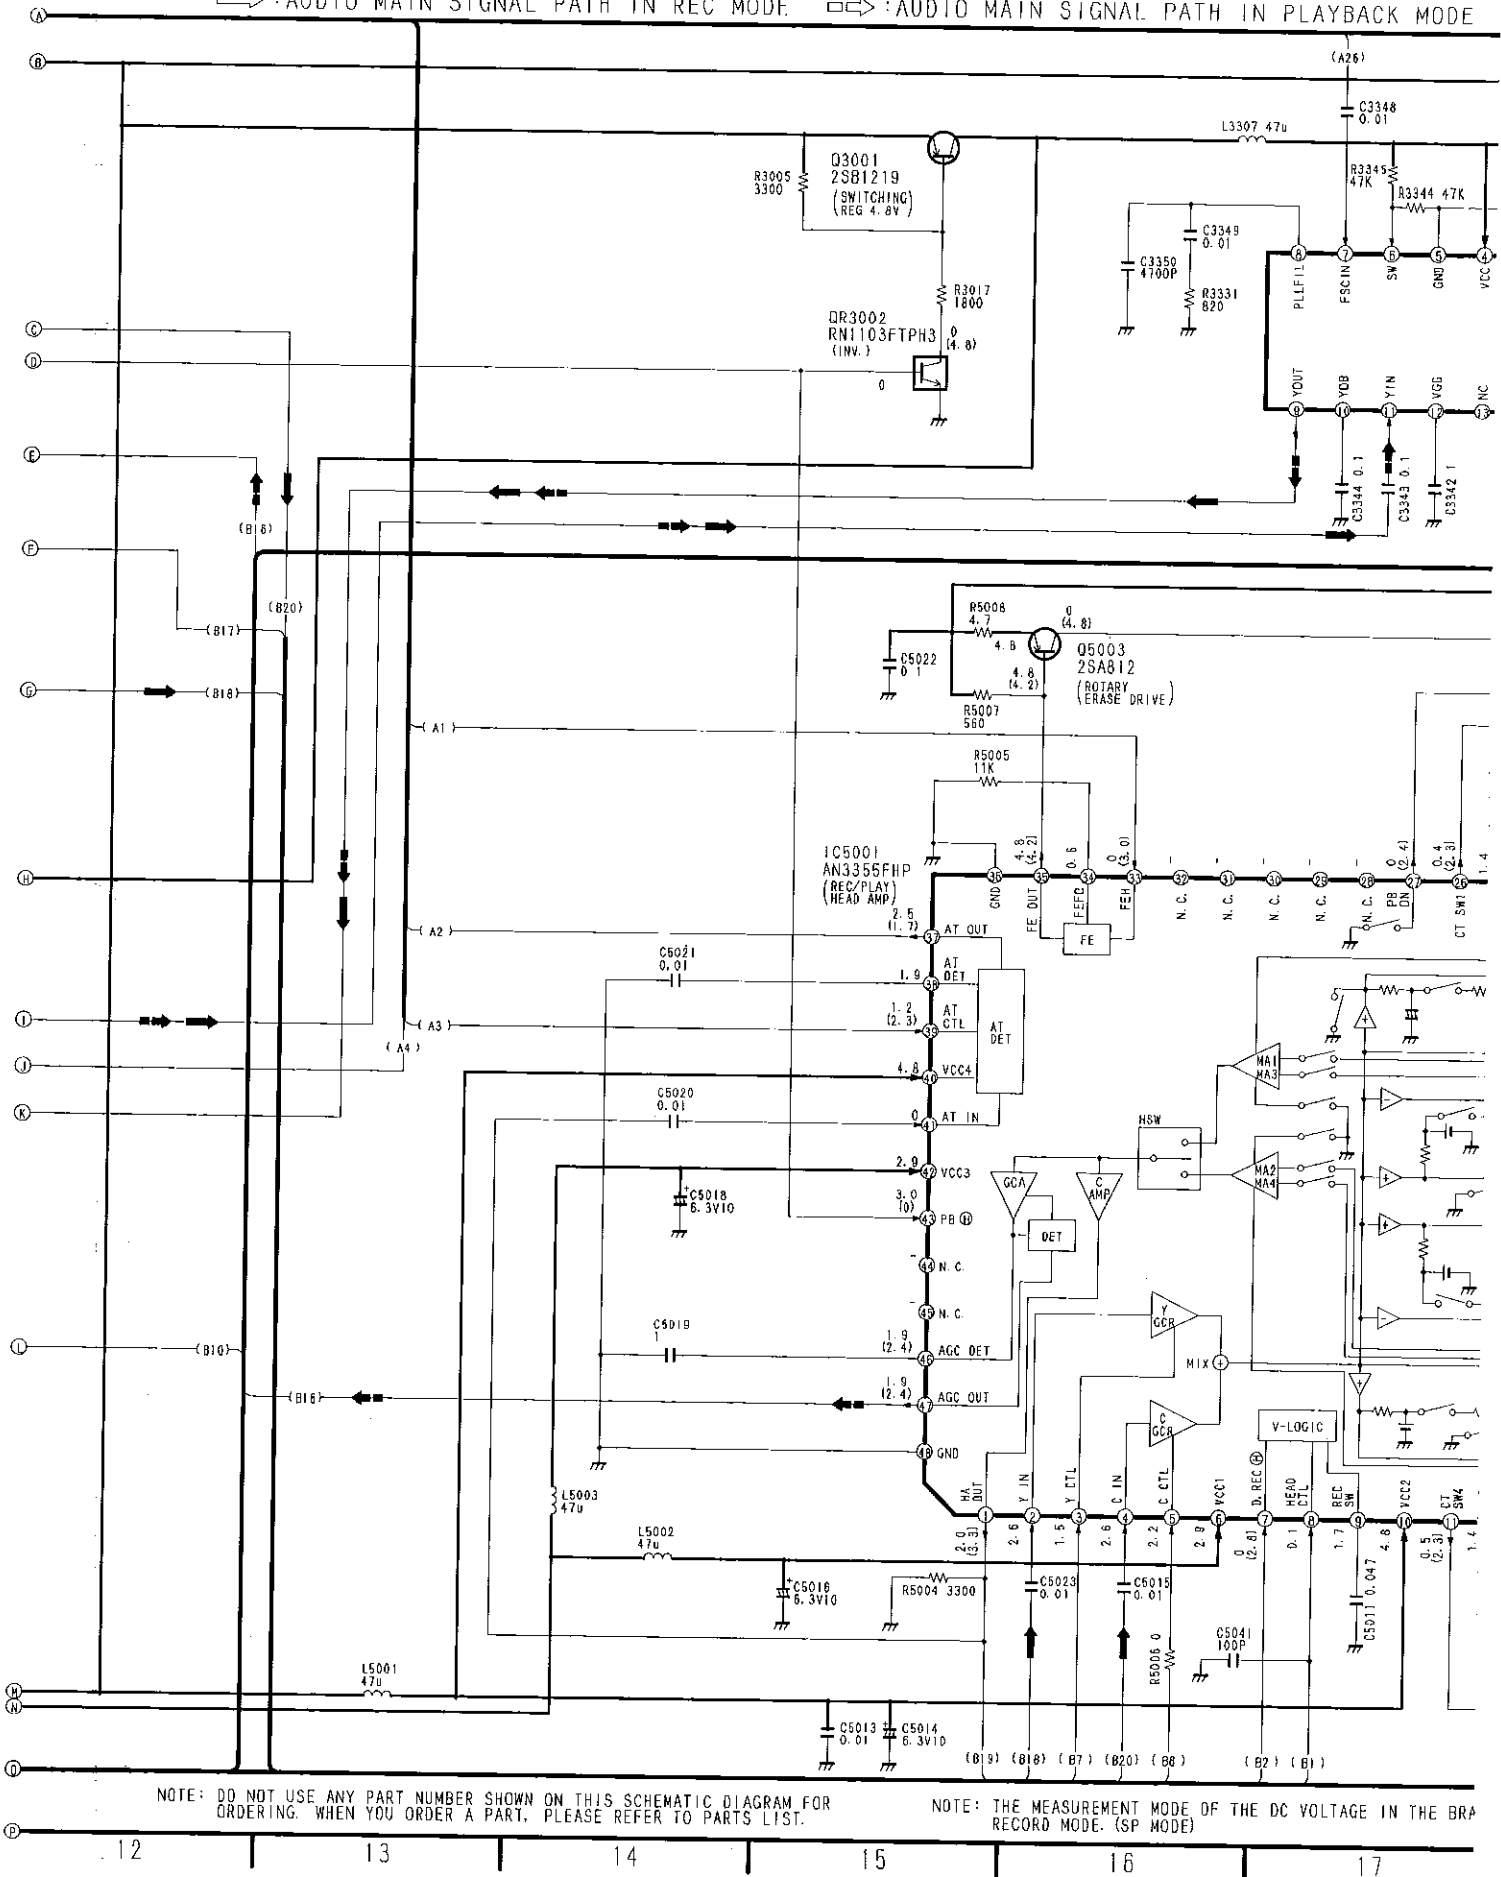

NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIST.


NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRA RECORD MODE. (SP MODE)

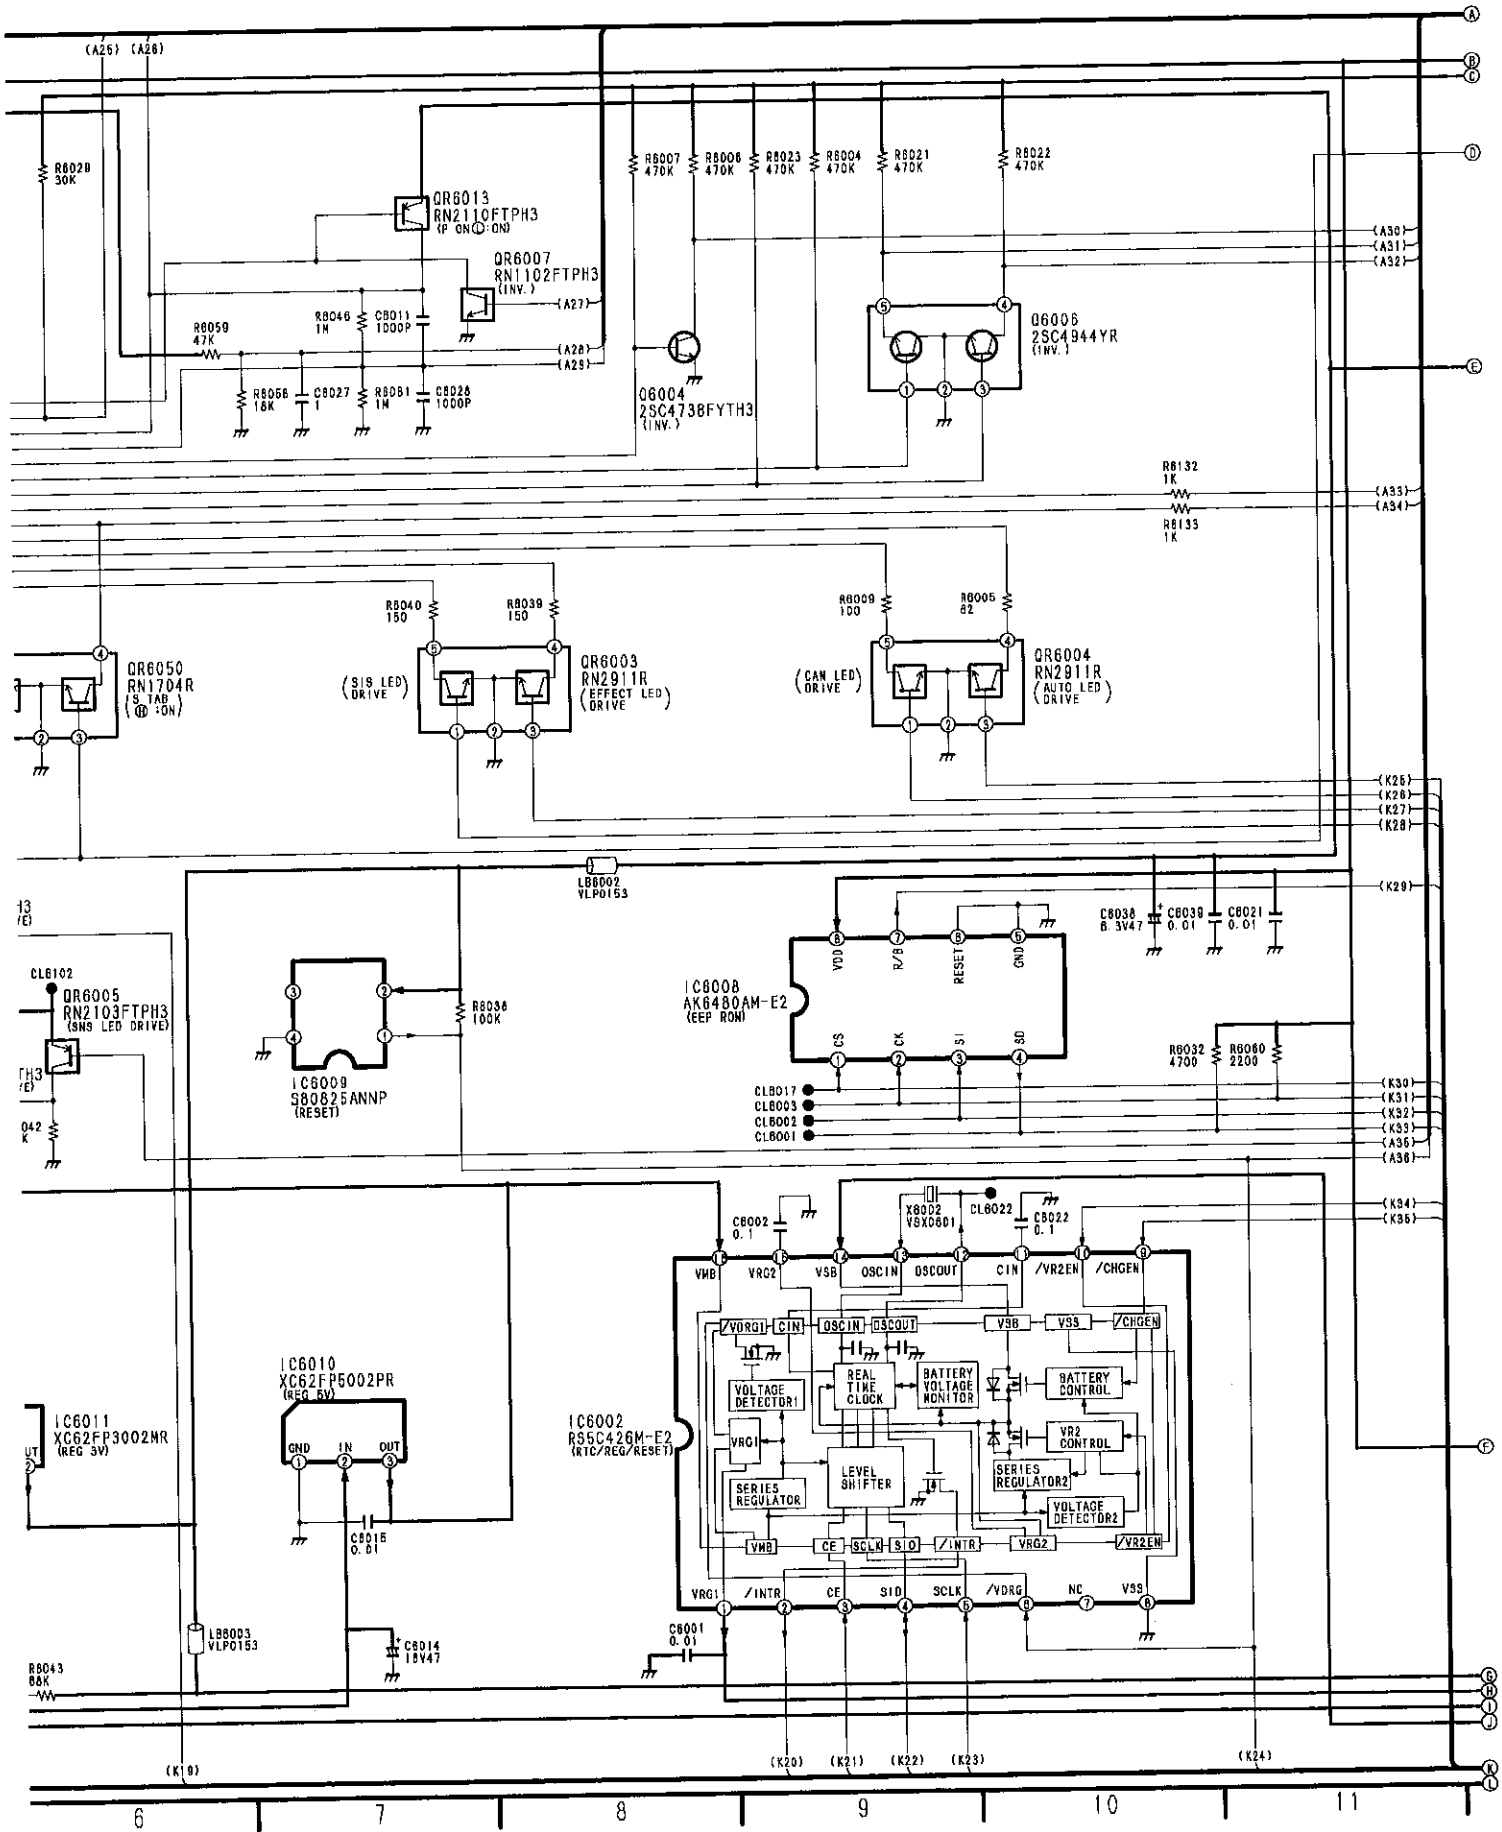


## 9.6.1. SYSTEM CONTROL & SERVO DC VOLTAGE CHART (SP MODE)

| Ref No. | IC6002 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| MODE    | 1      | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  | 13  | 14  | 15  | 16  |     |     |     |
| STOP    | 2.6    | 3.0 | 0.2 | 2.6 | 2.6 | 3.0 | -   | 0   | 3.0 | 0   | 4.9 | 0.5 | 0.4 | -   | 3.1 | 5.0 |     |     |     |
| PLAY    | 2.6    | 3.0 | 0.2 | 2.6 | 2.6 | 3.0 | -   | 0   | 3.0 | 0   | 4.9 | 0.5 | 0.4 | -   | 3.1 | 5.0 |     |     |     |
| REC.    | 2.6    | 3.0 | 0.2 | 2.6 | 2.6 | 3.0 | -   | 0   | 3.0 | 0   | 4.9 | 0.5 | 0.4 | -   | 3.1 | 5.0 |     |     |     |
| F.F.    | 2.6    | 3.0 | 0.2 | 2.6 | 2.6 | 3.0 | -   | 0   | 3.0 | 0   | 4.9 | 0.5 | 0.4 | -   | 3.1 | 5.0 |     |     |     |
| REW     | 2.6    | 3.0 | 0.2 | 2.6 | 2.6 | 3.0 | -   | 0   | 3.0 | 0   | 4.9 | 0.5 | 0.4 | -   | 3.1 | 5.0 |     |     |     |
| Ref No. | IC6003 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 1      | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  | 13  | 14  | 15  | 16  | 17  | 18  | 19  |
| STOP    | 3.0    | 0.0 | 0.0 | 3.0 | 3.0 | 0.0 | 0.0 | 2.9 | 0.0 | 3.0 | 0.0 | 0.0 | 3.0 | 0.1 | 3.0 | 2.6 | 3.0 | 2.9 | 0.0 |
| PLAY    | 3.0    | 0.0 | 0.0 | 3.0 | 3.0 | 0.0 | 0.0 | 2.9 | 0.0 | 3.0 | 0.0 | 0.0 | 3.0 | 0.1 | 3.0 | 1.4 | 3.0 | 2.9 | 0.0 |
| REC.    | 3.0    | 0.0 | 0.0 | 3.0 | 3.0 | 0.0 | 0.0 | 2.9 | 0.0 | 3.0 | 0.0 | 0.0 | 3.0 | 0.1 | 3.0 | 1.4 | 3.0 | 2.9 | 0.0 |
| F.F.    | 3.0    | 0.0 | 0.0 | 3.0 | 0.0 | 0.0 | 0.0 | 2.9 | 0.0 | 3.0 | 0.0 | 0.0 | 3.0 | 0.1 | 3.0 | 1.4 | 3.0 | 2.9 | 0.0 |
| REW     | 3.0    | 0.0 | 0.0 | 3.0 | 0.0 | 0.0 | 0.0 | 2.9 | 0.0 | 3.0 | 0.0 | 0.0 | 3.0 | 0.1 | 3.0 | 1.4 | 3.0 | 2.9 | 0.0 |
| Ref No. | IC6003 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 21     | 22  | 23  | 24  | 25  | 26  | 27  | 28  | 29  | 30  | 31  | 32  | 33  | 34  | 35  | 36  | 37  | 38  | 39  |
| STOP    | 0.0    | 0.0 | 0.0 | 0.5 | 0.0 | 0.0 | 0.0 | 3.0 | 3.0 | 3.0 | 3.0 | 0.5 | 0.5 | 0.5 | 0.5 | 0.5 | 0.5 | 0.5 | 0.5 |
| PLAY    | 0.0    | 0.0 | 0.0 | 0.5 | 0.0 | 0.0 | 0.0 | 3.0 | 3.0 | 3.0 | 3.0 | 0.5 | 0.2 | 0.3 | 0.3 | 0.2 | 0.3 | 0.2 | 0.4 |
| REC.    | 0.0    | 0.0 | 0.0 | 0.5 | 0.0 | 0.0 | 0.0 | 3.0 | 3.0 | 3.0 | 3.0 | 0.3 | 0.2 | 0.2 | 0.2 | 0.2 | 0.2 | 0.2 | 0.2 |
| F.F.    | 0.0    | 0.0 | 0.0 | 0.5 | 0.0 | 0.0 | 0.0 | 3.0 | 3.0 | 3.0 | 3.0 | 0.6 | 0.2 | 0.6 | 0.3 | 0.2 | 0.6 | 0.5 | 0.4 |
| REW     | 0.0    | 0.0 | 0.0 | 0.5 | 0.0 | 0.0 | 0.0 | 3.0 | 3.0 | 3.0 | 3.0 | 0.6 | 0.5 | 0.6 | 0.3 | 0.5 | 0.6 | 0.5 | 0.6 |
| Ref No. | IC6003 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 41     | 42  | 43  | 44  | 45  | 46  | 47  | 48  | 49  | 50  | 51  | 52  | 53  | 54  | 55  | 56  | 57  | 58  | 59  |
| STOP    | 0.5    | 0.5 | 0.5 | 0.5 | 0.5 | 0.5 | 0.5 | 0.6 | 3.0 | 3.0 | 3.0 | 3.0 | 2.9 | 0.0 | 3.0 | 0.0 | 0.0 | 0.0 | 2.9 |
| PLAY    | 0.3    | 0.3 | 0.4 | 0.4 | 0.3 | 0.3 | 0.2 | 0.4 | 3.0 | 0.0 | 3.0 | 3.0 | 2.9 | 0.0 | 3.0 | 0.0 | 0.0 | 0.0 | 2.9 |
| REC.    | 0.3    | 0.2 | 0.2 | 0.2 | 0.2 | 0.3 | 0.2 | 0.3 | 3.0 | 3.0 | 3.0 | 3.0 | 2.9 | 0.0 | 3.0 | 0.0 | 0.0 | 0.0 | 2.9 |
| F.F.    | 0.6    | 0.3 | 0.4 | 0.6 | 0.4 | 0.6 | 0.5 | 0.6 | 3.0 | 3.0 | 3.0 | 3.0 | 3.0 | 0.0 | 3.0 | 0.0 | 0.0 | 0.0 | 2.9 |
| REW     | 0.6    | 0.6 | 0.6 | 0.6 | 0.6 | 0.7 | 0.6 | 0.7 | 3.0 | 3.0 | 3.0 | 3.0 | 3.0 | 0.0 | 3.0 | 0.0 | 0.0 | 0.0 | 2.9 |
| Ref No. | IC6003 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 61     | 62  | 63  | 64  | 65  | 66  | 67  | 68  | 69  | 70  | 71  | 72  | 73  | 74  | 75  | 76  | 77  | 78  | 79  |
| STOP    | 0.0    | 0.0 | 3.0 | 0.0 | 1.4 | 1.5 | 3.0 | 1.4 | 0.0 | 2.9 | 0.0 | 3.0 | 2.6 | 0.0 | 3.0 | 3.0 | 3.0 | 0.0 | 0.0 |
| PLAY    | 0.0    | 0.0 | 3.0 | 0.0 | 1.4 | 1.5 | 3.0 | 1.4 | 0.0 | 2.9 | 0.0 | 3.0 | 2.6 | 0.0 | 3.0 | 3.0 | 3.0 | 0.0 | 0.0 |
| REC.    | 0.0    | 0.0 | 3.0 | 0.0 | 1.4 | 1.5 | 3.0 | 1.4 | 0.0 | 2.9 | 0.0 | 0.0 | 2.6 | 0.0 | 3.0 | 3.0 | 3.0 | 0.0 | 0.0 |
| F.F.    | 0.0    | 0.0 | 3.0 | 0.0 | 1.4 | 1.4 | 3.0 | 1.4 | 0.0 | 2.9 | 0.0 | 3.0 | 2.6 | 3.0 | 2.9 | 3.0 | 3.0 | 0.0 | 0.0 |
| REW     | 0.0    | 0.0 | 3.0 | 0.0 | 1.4 | 1.4 | 3.0 | 1.4 | 0.0 | 2.9 | 0.0 | 3.0 | 2.6 | 3.0 | 2.9 | 3.0 | 3.0 | 0.0 | 0.0 |
| Ref No. | IC6003 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 81     | 82  | 83  | 84  | 85  | 86  | 87  | 88  | 89  | 90  | 91  | 92  | 93  | 94  | 95  | 96  | 97  | 98  | 99  |
| STOP    | 0.0    | 3.0 | 0.0 | 0.0 | 3.0 | 0.0 | 3.0 | 0.0 | 0.0 | 3.0 | 2.9 | 2.9 | 2.9 | 0.0 | 0.0 | 1.5 | 3.0 | 0.0 | 0.0 |
| PLAY    | 0.0    | 3.0 | 0.0 | 0.0 | 3.0 | 0.0 | 3.0 | 0.0 | 0.0 | 3.0 | 2.9 | 2.9 | 2.9 | 0.0 | 0.0 | 1.5 | 3.0 | 0.0 | 0.0 |
| REC.    | 0.0    | 3.0 | 0.0 | 0.0 | 3.0 | 3.0 | 3.0 | 3.0 | 0.0 | 3.0 | 2.9 | 2.9 | 2.9 | 0.0 | 0.0 | 1.5 | 3.0 | 0.0 | 0.0 |
| F.F.    | 0.0    | 3.0 | 0.0 | 0.0 | 3.0 | 0.0 | 3.0 | 0.0 | 0.0 | 3.0 | 2.9 | 2.9 | 2.9 | 0.0 | 0.0 | 1.5 | 3.0 | 0.0 | 0.0 |
| REW     | 0.0    | 3.0 | 0.0 | 0.0 | 3.0 | 0.0 | 3.0 | 0.0 | 0.0 | 3.0 | 2.9 | 2.9 | 2.9 | 0.0 | 0.0 | 1.5 | 3.0 | 0.0 | 0.0 |
| Ref No. | IC6003 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 101    | 102 | 103 | 104 | 105 | 106 | 107 | 108 | 109 | 110 | 111 | 112 | 113 | 114 | 115 | 116 | 117 | 118 | 119 |
| STOP    | 0.0    | 0.0 | 1.6 | 1.7 | 1.9 | 3.0 | 0.0 | 3.0 | 3.0 | 0.0 | 3.0 | 0.0 | 2.9 | 0.1 | 0.0 | 0.1 | 0.0 | 3.0 | 0.0 |
| PLAY    | 0.0    | 0.0 | 2.5 | 1.7 | 2.0 | 3.0 | 0.0 | 3.0 | 0.0 | 0.0 | 3.0 | 0.0 | 2.9 | 0.1 | 2.9 | 0.1 | 0.0 | 3.0 | 0.0 |
| REC.    | 0.0    | 0.0 | 1.7 | 1.7 | 2.0 | 3.0 | 0.0 | 3.0 | 3.0 | 0.0 | 3.0 | 0.0 | 2.9 | 0.1 | 0.0 | 0.1 | 0.0 | 3.0 | 0.0 |
| F.F.    | 0.0    | 0.0 | 1.6 | 1.7 | 2.0 | 3.0 | 0.0 | 3.0 | 3.0 | 0.0 | 3.0 | 0.0 | 2.9 | 0.1 | 2.9 | 0.1 | 0.0 | 3.0 | 0.0 |
| REW     | 0.0    | 0.0 | 1.6 | 1.7 | 2.0 | 3.0 | 0.0 | 3.0 | 3.0 | 0.0 | 3.0 | 0.0 | 2.9 | 0.1 | 2.9 | 0.1 | 0.0 | 3.0 | 0.0 |
| Ref No. | IC6003 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 121    | 122 | 123 | 124 | 125 | 126 | 127 | 128 | 129 | 130 | 131 | 132 | 133 | 134 | 135 | 136 | 137 | 138 | 139 |
| STOP    | 2.6    | 3.0 | 3.0 | 3.0 | 0.0 | 0.0 | 2.9 | 0.1 | 2.8 | 0.0 | 0.0 | 0.0 | 1.5 | 1.5 | 0.0 | 0.0 | 0.0 | 0.0 | 0.1 |
| PLAY    | 2.6    | 3.0 | 3.0 | 3.0 | 0.0 | 0.0 | 2.9 | 0.1 | 2.9 | 0.0 | 0.0 | 0.0 | 1.5 | 1.5 | 0.0 | 0.0 | 0.0 | 0.0 | 0.1 |
| REC.    | 2.6    | 3.0 | 3.0 | 3.0 | 0.0 | 0.0 | 2.9 | 0.1 | 2.9 | 0.0 | 0.0 | 0.0 | 1.5 | 1.5 | 0.0 | 0.0 | 1.8 | 0.0 | 0.1 |
| F.F.    | 2.6    | 3.0 | 3.0 | 3.0 | 0.0 | 0.0 | 2.9 | 0.1 | 2.9 | 0.0 | 0.0 | 0.0 | 1.5 | 1.5 | 0.0 | 0.0 | 0.0 | 0.0 | 0.1 |
| REW     | 2.6    | 3.0 | 3.0 | 3.0 | 0.0 | 0.0 | 2.9 | 0.1 | 2.9 | 0.0 | 0.0 | 0.0 | 1.5 | 1.5 | 0.0 | 0.0 | 0.0 | 0.0 | 0.1 |
| Ref No. | IC6003 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 141    | 142 | 143 | 144 | 145 | 146 | 147 | 148 | 149 | 150 | 151 | 152 | 153 | 154 | 155 | 156 | 157 | 158 | 159 |
| STOP    | 0.0    | 0.0 | 2.3 | 0.2 | -   | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 3.0 | 2.9 | 0.0 | 0.2 | 0.1 | 2.6 | 0.5 | 0.5 | 1.5 |
| PLAY    | 0.0    | 0.5 | 1.2 | 1.2 | -   | 0.0 | 0.0 | 1.3 | 0.0 | 0.0 | 3.0 | 2.9 | 0.0 | 0.2 | 0.1 | 2.5 | 1.5 | 0.5 | 1.5 |
| REC.    | 0.0    | 0.0 | 2.3 | 1.2 | -   | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 3.0 | 2.9 | 0.0 | 0.2 | 0.1 | 2.6 | 1.5 | 0.5 | 1.5 |
| F.F.    | 0.0    | 0.0 | 0.0 | 1.1 | -   | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 3.0 | 2.9 | 0.0 | 0.2 | 0.1 | 2.6 | 1.5 | 0.5 | 1.5 |
| REW     | 0.0    | 0.0 | 1.1 | 1.1 | -   | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 3.0 | 2.9 | 0.0 | 0.2 | 0.1 | 2.6 | 1.5 | 0.5 | 1.5 |
| Ref No. | IC6003 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 161    | 162 | 163 | 164 | 165 | 166 | 167 | 168 | 169 | 170 | 171 | 172 | 173 | 174 | 175 | 176 | 177 | 178 | 179 |
| STOP    | 0.0    | 0.0 | 2.8 | 0.0 | 0.1 | 2.9 | 0.0 | 2.6 | 1.5 | 3.0 | 3.0 | 0.0 | 2.6 | 1.5 | 0.0 | 3.0 | 3.0 | 0.0 | 0.0 |
| PLAY    | 0.0    | 0.0 | 2.8 | 0.0 | 0.1 | 2.9 | 0.0 | 0.0 | 1.5 | 0.0 | 0.0 | 0.0 | 2.6 | 1.5 | 0.0 | 3.0 | 3.0 | 0.0 | 0.0 |
| REC.    | 0.0    | 0.0 | 2.8 | 0.0 | 0.1 | 2.9 | 0.0 | 1.7 | 1.8 | 3.0 | 3.0 | 0.0 | 2.6 | 1.5 | 0.0 | 3.0 | 3.0 | 0.0 | 0.0 |
| F.F.    | 0.0    | 0.0 | 2.9 | 0.0 | 0.1 | 2.9 | 0.0 | 1.6 | 1.5 | 3.0 | 3.0 | 0.0 | 2.5 | 1.5 | 0.0 | 1.3 | 3.0 | 0.0 | 0.0 |
| REW     | 0.0    | 0.0 | 2.9 | 0.0 | 0.1 | 2.9 | 0.0 | 1.6 | 1.5 | 3.0 | 3.0 | 0.0 | 2.6 | 1.5 | 0.0 | 3.0 | 3.0 | 0.0 | 0.0 |
| Ref No. | IC6003 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 181    | 182 | 183 | 184 | 185 | 186 | 187 | 188 | 189 | 190 | 191 | 192 | 193 | 194 | 195 | 196 | 197 | 198 | 199 |
| STOP    | 0.0    | 3.0 | 0.0 | 0.0 | 2.9 | 3.0 | 3.0 | 3.0 | 0.0 | 0.0 | 2.9 | 3.0 | 0.0 | 2.9 | 3.0 | 2.9 | 1.0 | 3.0 | 2.6 |
| PLAY    | 0.0    | 0.0 | 0.0 | 3.0 | 2.9 | 3.0 | 3.0 | 0.0 | 0.0 | 0.0 | 2.9 | 3.0 | 0.0 | 2.9 | 3.0 | 2.9 | 0.9 | 3.0 | 2.6 |
| REC.    | 0.0    | 3.0 | 0.0 | 0.0 | 2.9 | 3.0 | 3.0 | 3.0 | 0.0 | 0.0 | 2.9 | 3.0 | 0.0 | 2.9 | 3.0 | 2.9 | 3.0 | 3.0 | 2.6 |
| F.F.    | 0.0    | 0.0 | 0.0 | 3.0 | 2.9 | 3.0 | 3.0 | 3.0 | 0.0 | 0.0 | 2.9 | 3.0 | 0.0 | 2.9 | 3.0 | 2.9 | 3.0 | 3.0 | 2.6 |
| REW     | 0.0    | 0.0 | 0.0 | 3.0 | 2.9 | 3.0 | 3.0 | 3.0 | 0.0 | 0.0 | 2.9 | 3.0 | 0.0 | 2.9 | 3.0 | 2.9 | 3.0 | 3.0 | 2.6 |
| Ref No. | IC6003 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 201    | 202 | 203 | 204 | 205 | 206 | 207 | 208 | 209 | 210 | 211 | 212 | 213 | 214 | 215 | 216 |     |     |     |
| STOP    | 3.0    | 3.0 | 3.0 | 2.9 | 0.0 | 0.0 | 3.0 | 3.0 | 3.0 | 3.0 | 2.8 | 3.0 | 2.9 | 2.7 | 0.0 | 0.0 |     |     |     |
| PLAY    | 3.0    | 3.0 | 3.0 | 2.9 | 0.0 | 0.0 | 3.0 | 3.0 | 3.0 | 3.0 | 2.8 | 3.0 | 2.9 | 2.7 | 0.0 | 0.0 |     |     |     |
| REC.    | 3.0    | 3.0 | 3.0 | 2.9 | 0.0 | 0.0 | 3.0 | 3.0 | 3.0 | 3.0 | 2.8 | 3.0 | 2.9 | 2.7 | 0.0 | 0.0 |     |     |     |
| F.F.    | 3.0    | 3.0 | 3.0 | 2.9 | 0.0 | 0.0 | 3.0 | 3.0 | 3.0 | 3.0 | 2.8 | 3.0 | 2.9 | 2.7 | 0.0 | 0.0 |     |     |     |
| REW     | 3.0    | 3.0 | 3.0 | 2.9 | 0.0 | 0.0 | 3.0 | 3.0 | 3.0 | 3.0 | 2.8 | 3.0 | 2.9 | 2.7 | 0.0 | 0.0 |     |     |     |

E LOOP ⇨ : CYLINDER SERVO SPEED LOOP ⇨ : CYLINDER SERVO PHASE LOOP

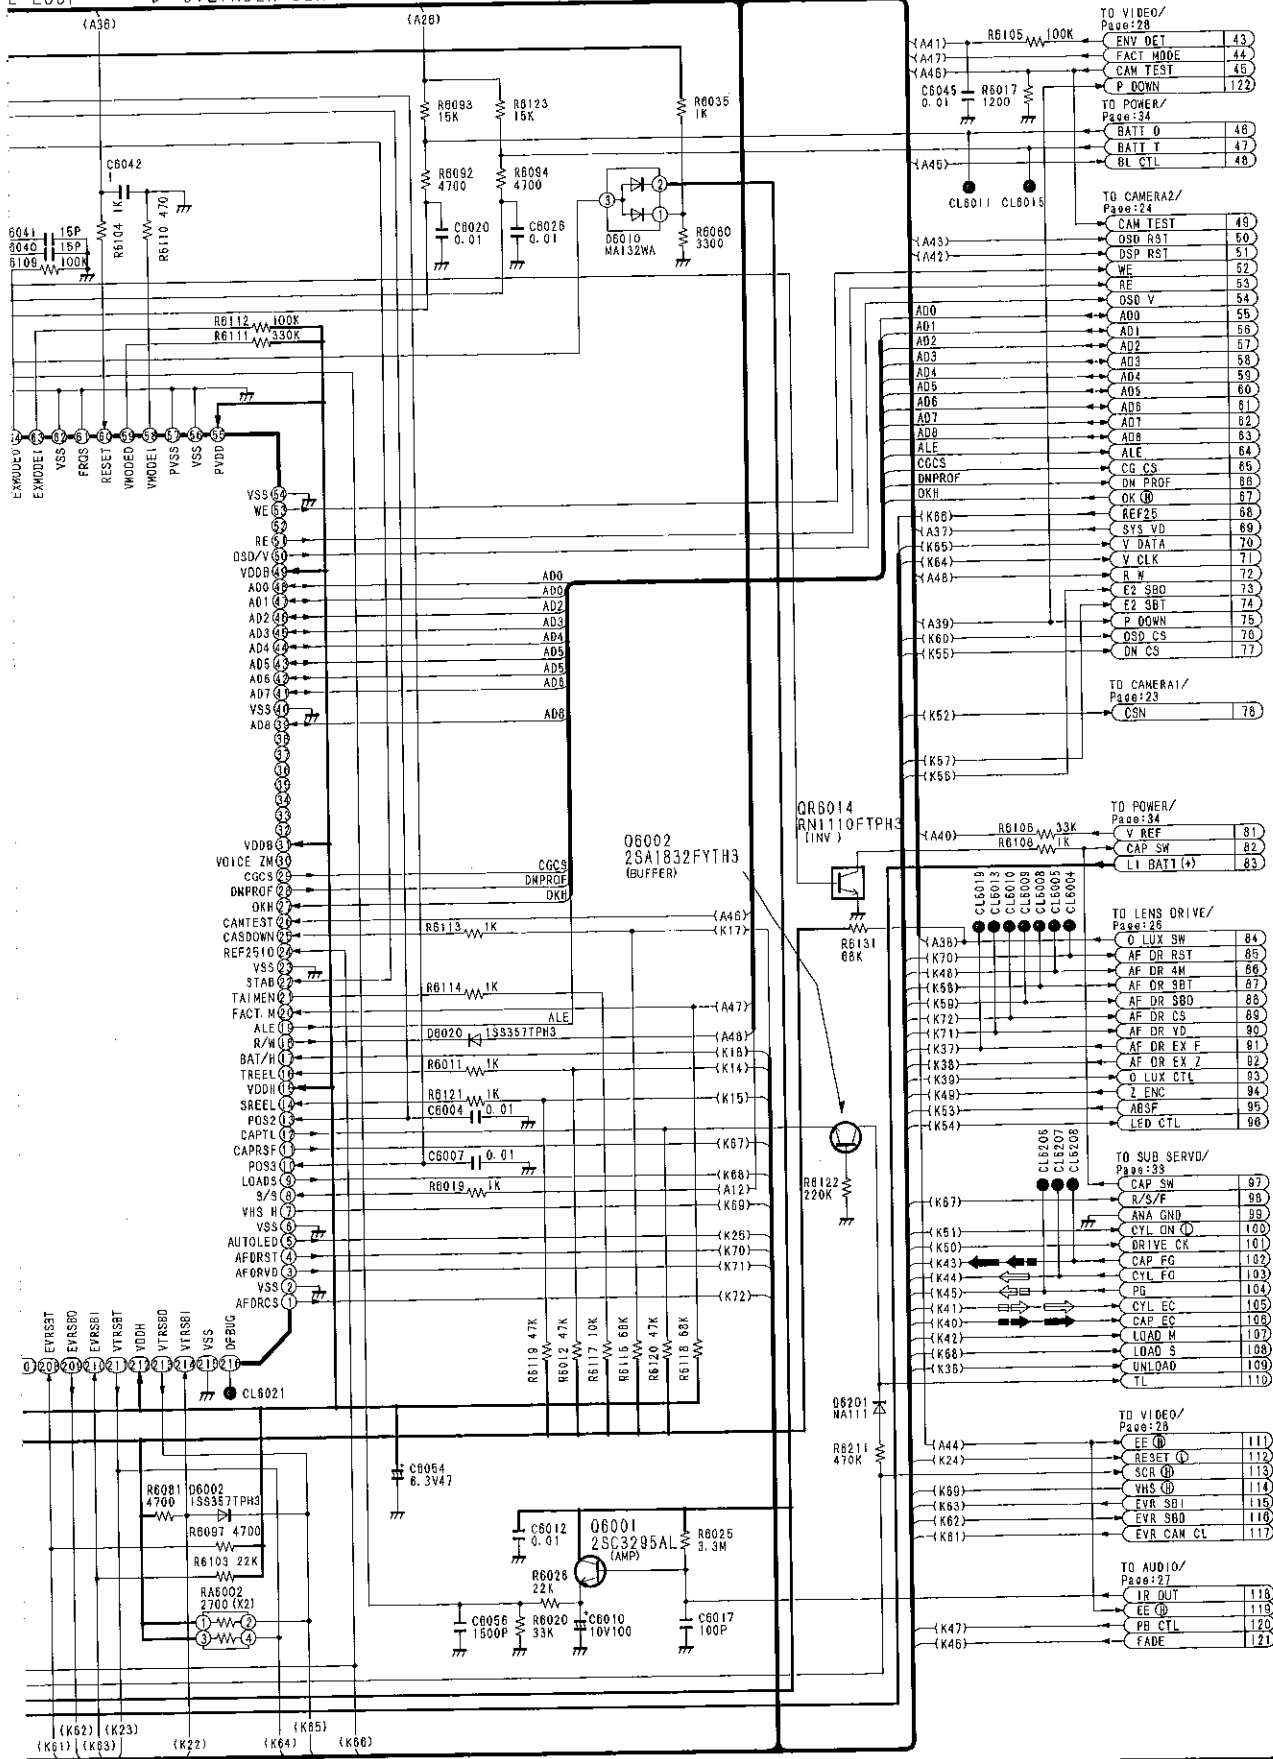

→ CAPSTAN SERVO SPEED LOOP → CAPSTAN SERVO PHAS

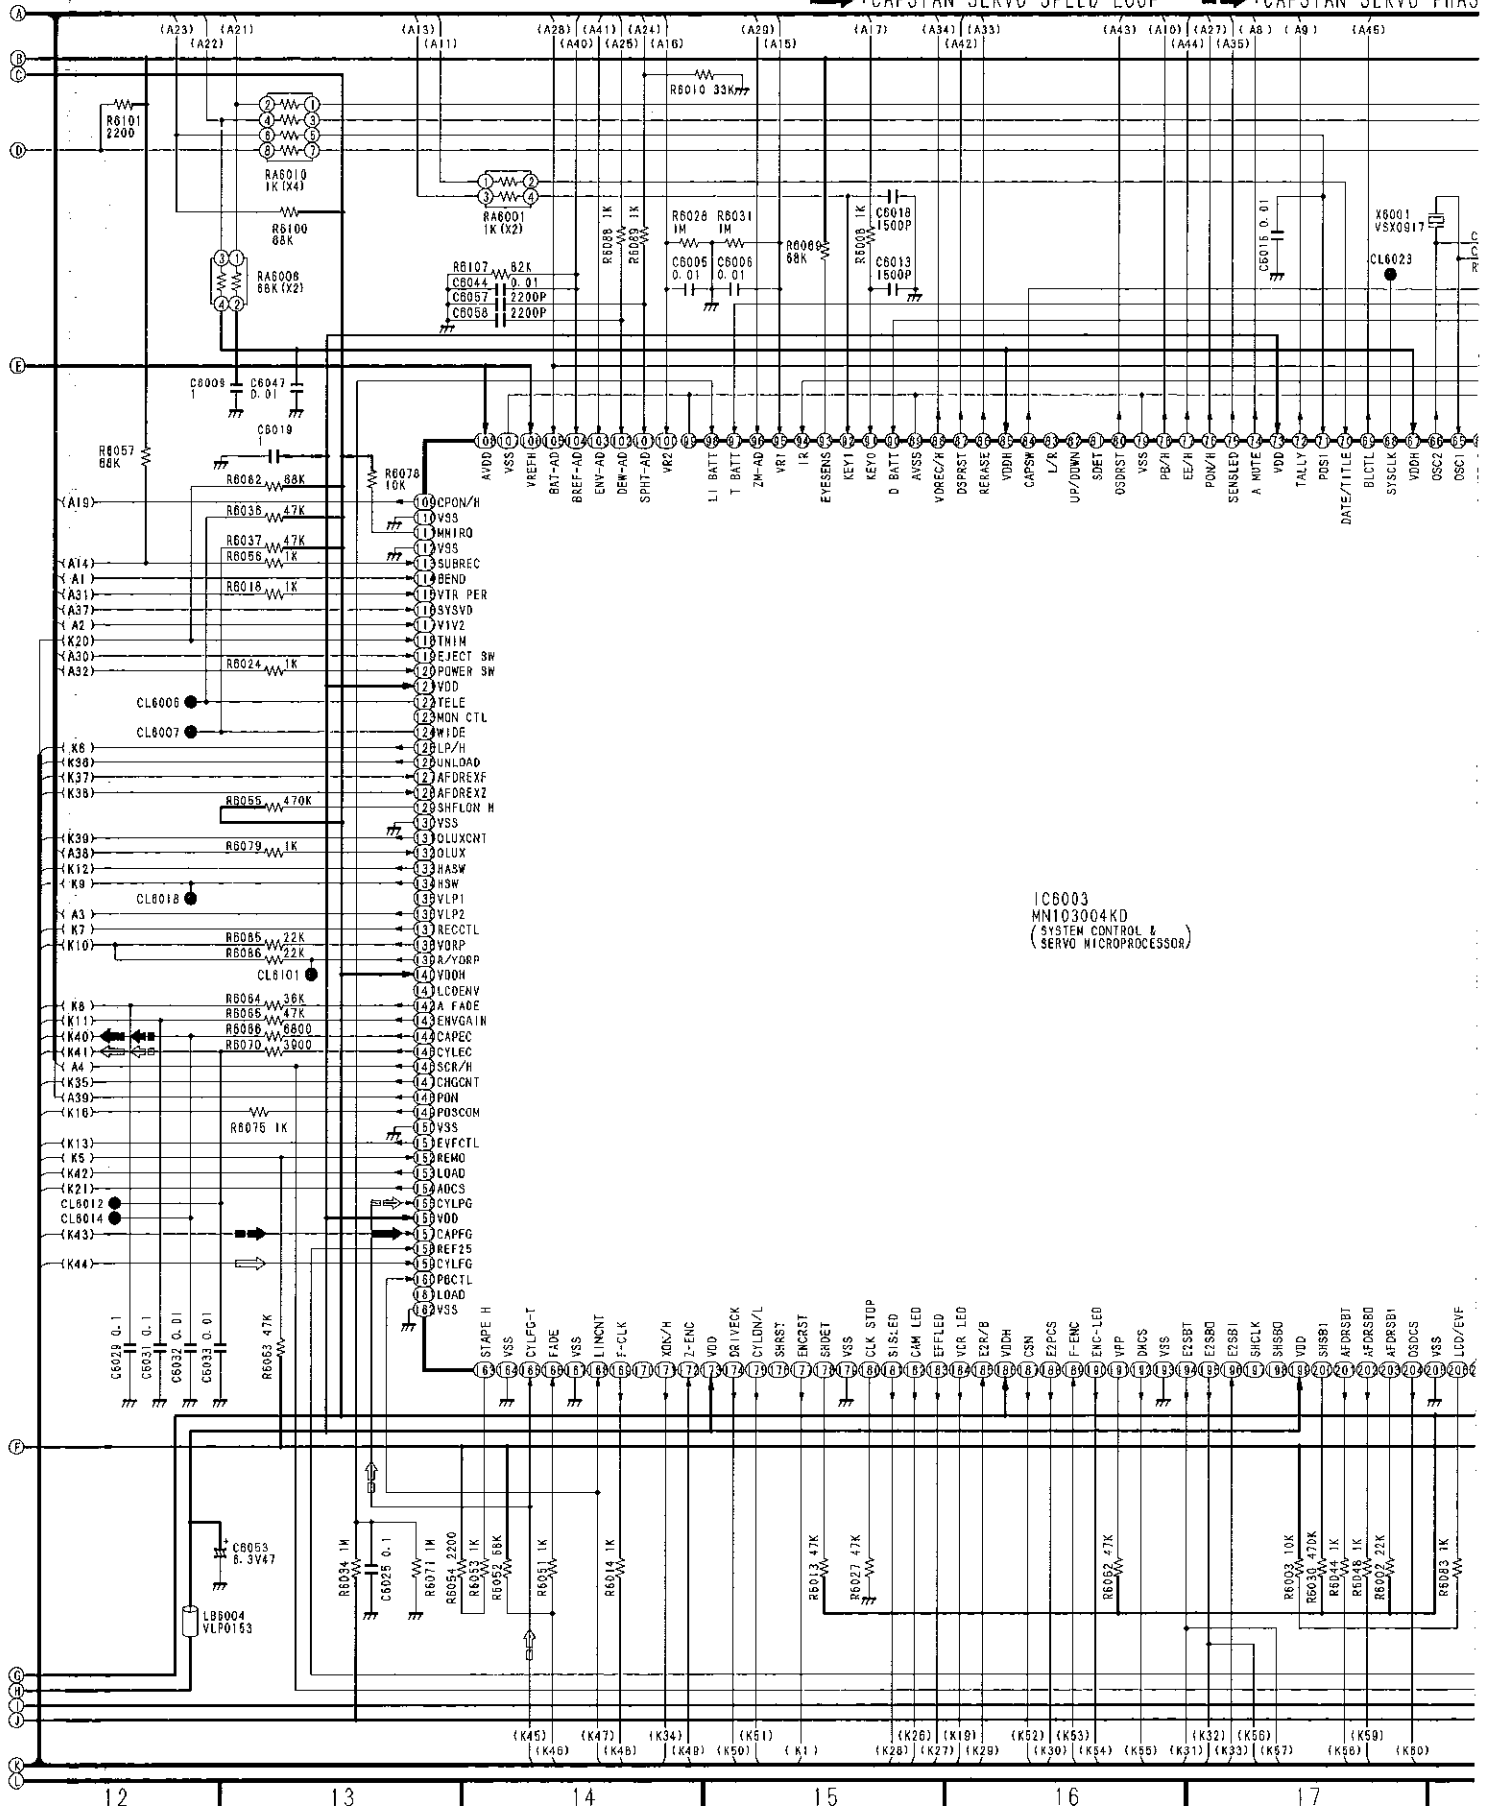

| Ref No. | IC6008 |     |     |     |     |     |     |     |  |  |  |  |  |  |  |  |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|--|--|--|--|--|--|--|--|
| MODE    | 1      | 2   | 3   | 4   | 5   | 6   | 7   | 8   |  |  |  |  |  |  |  |  |
| STOP    | 3.0    | 2.0 | 2.9 | 2.9 | 0.0 | 0.0 | 2.9 | 2.9 |  |  |  |  |  |  |  |  |
| PLAY    | 3.0    | 2.0 | 2.9 | 2.9 | 0.0 | 0.0 | 2.9 | 2.9 |  |  |  |  |  |  |  |  |
| REC.    | 3.0    | 2.0 | 2.9 | 2.9 | 0.0 | 0.0 | 2.9 | 2.9 |  |  |  |  |  |  |  |  |
| F.F.    | 3.0    | 2.0 | 2.9 | 2.9 | 0.0 | 0.0 | 2.9 | 2.9 |  |  |  |  |  |  |  |  |
| REW     | 3.0    | 2.0 | 2.9 | 2.9 | 0.0 | 0.0 | 2.9 | 2.9 |  |  |  |  |  |  |  |  |

| Ref No. | IC6009 |     |   |     |  |  |  |  | IC6010 |     |     |  |  |  |  |  |
|---------|--------|-----|---|-----|--|--|--|--|--------|-----|-----|--|--|--|--|--|
| MODE    | 1      | 2   | 3 | 4   |  |  |  |  | 1      | 2   | 3   |  |  |  |  |  |
| STOP    | 3.0    | 3.0 | - | 0.0 |  |  |  |  | 0.0    | 6.9 | 5.0 |  |  |  |  |  |
| PLAY    | 3.0    | 3.0 | - | 0.0 |  |  |  |  | 0.0    | 6.9 | 5.0 |  |  |  |  |  |
| REC.    | 3.0    | 3.0 | - | 0.0 |  |  |  |  | 0.0    | 6.9 | 5.0 |  |  |  |  |  |
| F.F.    | 3.0    | 3.0 | - | 0.0 |  |  |  |  | 0.0    | 6.9 | 5.0 |  |  |  |  |  |
| REW     | 3.0    | 3.0 | - | 0.0 |  |  |  |  | 0.0    | 6.9 | 5.0 |  |  |  |  |  |

| Ref No. | IC6011 |     |     |  |  |  |
|---------|--------|-----|-----|--|--|--|
| MODE    | 1      | 2   | 3   |  |  |  |
| STOP    | 0.0    | 3.0 | 5.0 |  |  |  |
| PLAY    | 0.0    | 3.0 | 5.0 |  |  |  |
| REC.    | 0.0    | 3.0 | 5.0 |  |  |  |
| F.F.    | 0.0    | 3.0 | 5.0 |  |  |  |
| REW     | 0.0    | 3.0 | 5.0 |  |  |  |

| Ref No. | Q6001 |     |      | Q6002 |     |     | Q6003 |     |     | Q6004 |   |     | Q6006 |   |     |   |     |   |
|---------|-------|-----|------|-------|-----|-----|-------|-----|-----|-------|---|-----|-------|---|-----|---|-----|---|
| MODE    | E     | C   | B    | E     | C   | B   | E     | C   | B   | E     | C | B   | 1     | 2 | 3   | 4 | 5   |   |
| STOP    | 0.0   | 4.8 | -0.3 | 0.0   | 0.0 | 0.0 | 0.1   | 6.9 | 0.0 | 0     | 0 | 0.5 | 0.5   | 0 | 0   | 0 | 2.9 | 0 |
| PLAY    | 0.0   | 4.8 | -0.3 | 3.0   | 3.0 | 2.4 | 0.1   | 6.8 | 0.0 | 0     | 0 | 0.5 | 0     | 0 | 0.5 | 0 | 2.9 | 0 |
| REC.    | 0.0   | 4.8 | -0.3 | 3.0   | 3.0 | 2.4 | 0.1   | 6.8 | 0.0 | 0     | 0 | 0.5 | 0.5   | 0 | 0   | 0 | 2.9 | 0 |
| F.F.    | 0.0   | 4.8 | -0.3 | 3.0   | 3.0 | 2.4 | 0.2   | 6.8 | 0.1 | 0     | 0 | 0.5 | 0     | 0 | 0.5 | 0 | 2.9 | 0 |
| REW     | 0.0   | 4.8 | -0.3 | 3.0   | 3.0 | 2.4 | 0.2   | 6.8 | 0.1 | 0     | 0 | 0.5 | 0     | 0 | 0.5 | 0 | 2.9 | 0 |

| Ref No. | QR6001 |     |     | QR6003 |     |     |     |     | QR6004 |     |     |     |     | QR6005 |     |     |
|---------|--------|-----|-----|--------|-----|-----|-----|-----|--------|-----|-----|-----|-----|--------|-----|-----|
| MODE    | E      | C   | B   | 1      | 2   | 3   | 4   | 5   | 1      | 2   | 3   | 4   | 5   | E      | C   | B   |
| STOP    | -1.2   | 0.0 | 0.0 | 0.0    | 0.0 | 0.0 | 2.2 | 2.2 | 3.0    | 0.0 | 3.0 | 0.1 | 0.1 | 2.9    | 0.0 | 3.0 |
| PLAY    | -      | 0.0 | 3.0 | 0.0    | 0.0 | 0.0 | 2.0 | 2.0 | 0.0    | 0.0 | 3.0 | 0.1 | 1.9 | 2.9    | 0.0 | 3.0 |
| REC.    | -0.9   | 0.0 | 0.0 | 0.0    | 0.0 | 0.0 | 2.2 | 2.2 | 3.0    | 0.0 | 3.0 | 0.1 | 0.1 | 2.9    | 0.0 | 3.0 |
| F.F.    | -      | 0.0 | 3.0 | 0.0    | 0.0 | 0.0 | 2.2 | 2.2 | 0.0    | 0.0 | 0.0 | 2.4 | 2.6 | 2.9    | 0.1 | 2.9 |
| REW     | -      | 0.0 | 3.0 | 0.0    | 0.0 | 0.0 | 2.2 | 2.2 | 0.0    | 0.0 | 0.0 | 2.4 | 2.6 | 2.9    | 0.1 | 2.9 |


  


| Ref No. | QR6007 |     |     | QR6009 |     |     | QR6012 |     |     | QR6013 |     |     | QR6014 |     |     |
|---------|--------|-----|-----|--------|-----|-----|--------|-----|-----|--------|-----|-----|--------|-----|-----|
| MODE    | E      | C   | B   | E      | C   | B   | E      | C   | B   | E      | C   | B   | E      | C   | B   |
| STOP    | 0.0    | 0.0 | 3.0 | 0.0    | 3.0 | 0.0 | 7.1    | 7.1 | 0.0 | 3.0    | 3.0 | 0.0 | 0.0    | 6.2 | 0.0 |
| PLAY    | 0.0    | 0.0 | 3.0 | 0.0    | 3.0 | 0.0 | 7.1    | 7.1 | 0.0 | 3.0    | 3.0 | 0.0 | 0.0    | 6.5 | 0.0 |
| REC.    | 0.0    | 0.0 | 3.0 | 0.0    | 3.0 | 0.0 | 7.1    | 7.1 | 0.0 | 3.0    | 3.0 | 0.0 | 0.0    | 6.5 | 0.0 |
| F.F.    | 0.0    | 0.0 | 3.0 | 0.0    | 3.0 | 0.0 | 7.1    | 7.1 | 0.0 | 3.0    | 3.0 | 0.0 | 0.0    | 6.3 | 0.0 |
| REW     | 0.0    | 0.0 | 3.0 | 0.0    | 3.0 | 0.0 | 7.1    | 7.1 | 0.0 | 3.0    | 3.0 | 0.0 | 0.0    | 6.3 | 0.0 |

| Ref No. | QR6050 |     |     |     |     |
|---------|--------|-----|-----|-----|-----|
| MODE    | 1      | 2   | 3   | 4   | 5   |
| STOP    | 0.0    | 0.0 | 0.0 | 0.1 | 0.0 |
| PLAY    | 0.0    | 0.0 | 0.0 | 0.1 | 0.0 |
| REC.    | 0.0    | 0.0 | 0.0 | 2.8 | 3.0 |
| F.F.    | 0.0    | 0.0 | 0.0 | 0.1 | 0.0 |
| REW     | 0.0    | 0.0 | 0.0 | 0.1 | 0.0 |


# 9.9. POWER SCHEMATIC DIAGRAM

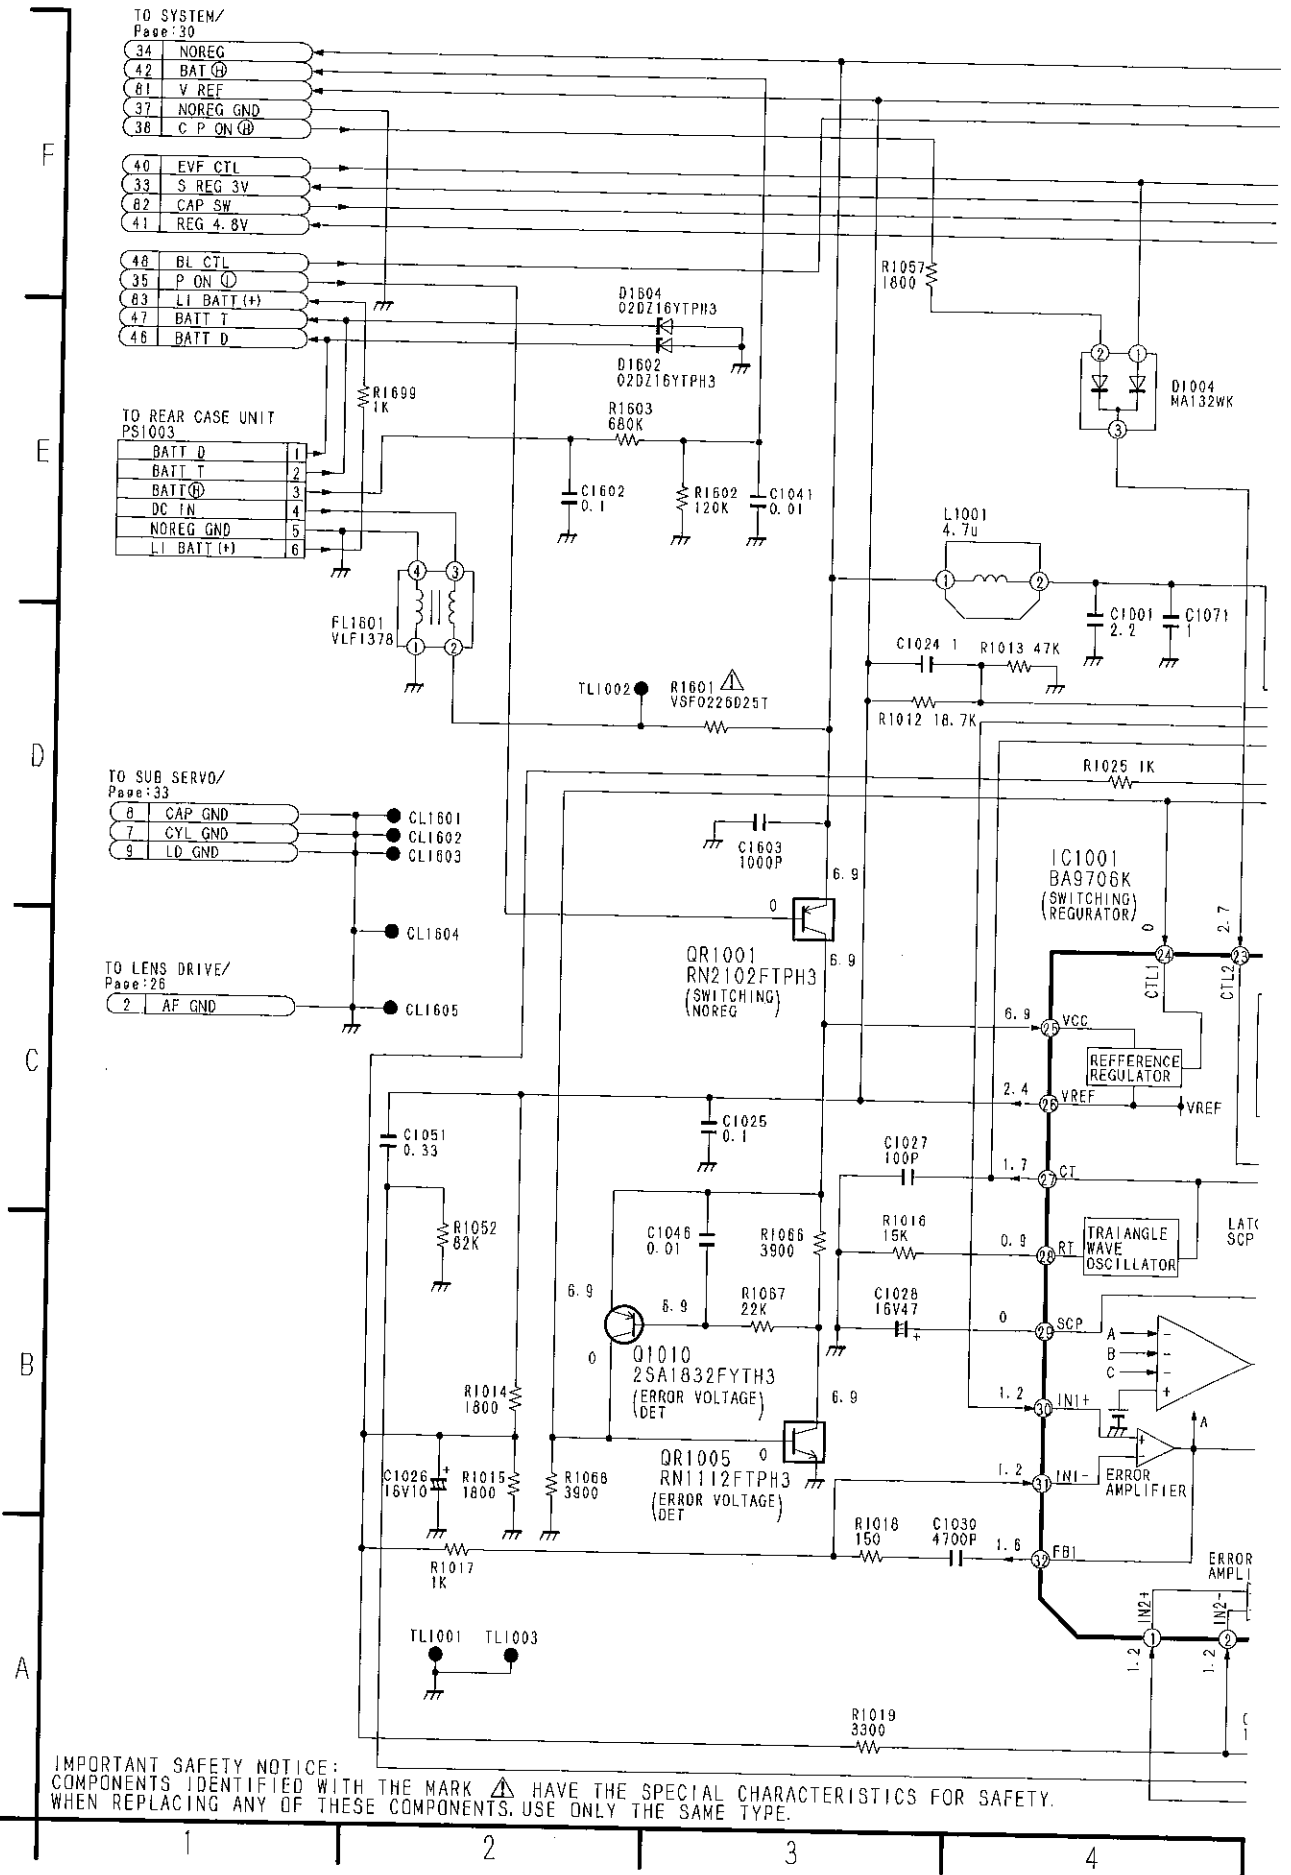

IMPORTANT SAFETY NOTICE:  
 COMPONENTS IDENTIFIED WITH THE MARK  HAVE THE SPECIAL CHARACTERISTICS FOR SAFETY.  
 WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SAME TYPE.


# E.V.F. SCHEMATIC DIAGRAM

VIDEO MAIN SIGNAL PATH

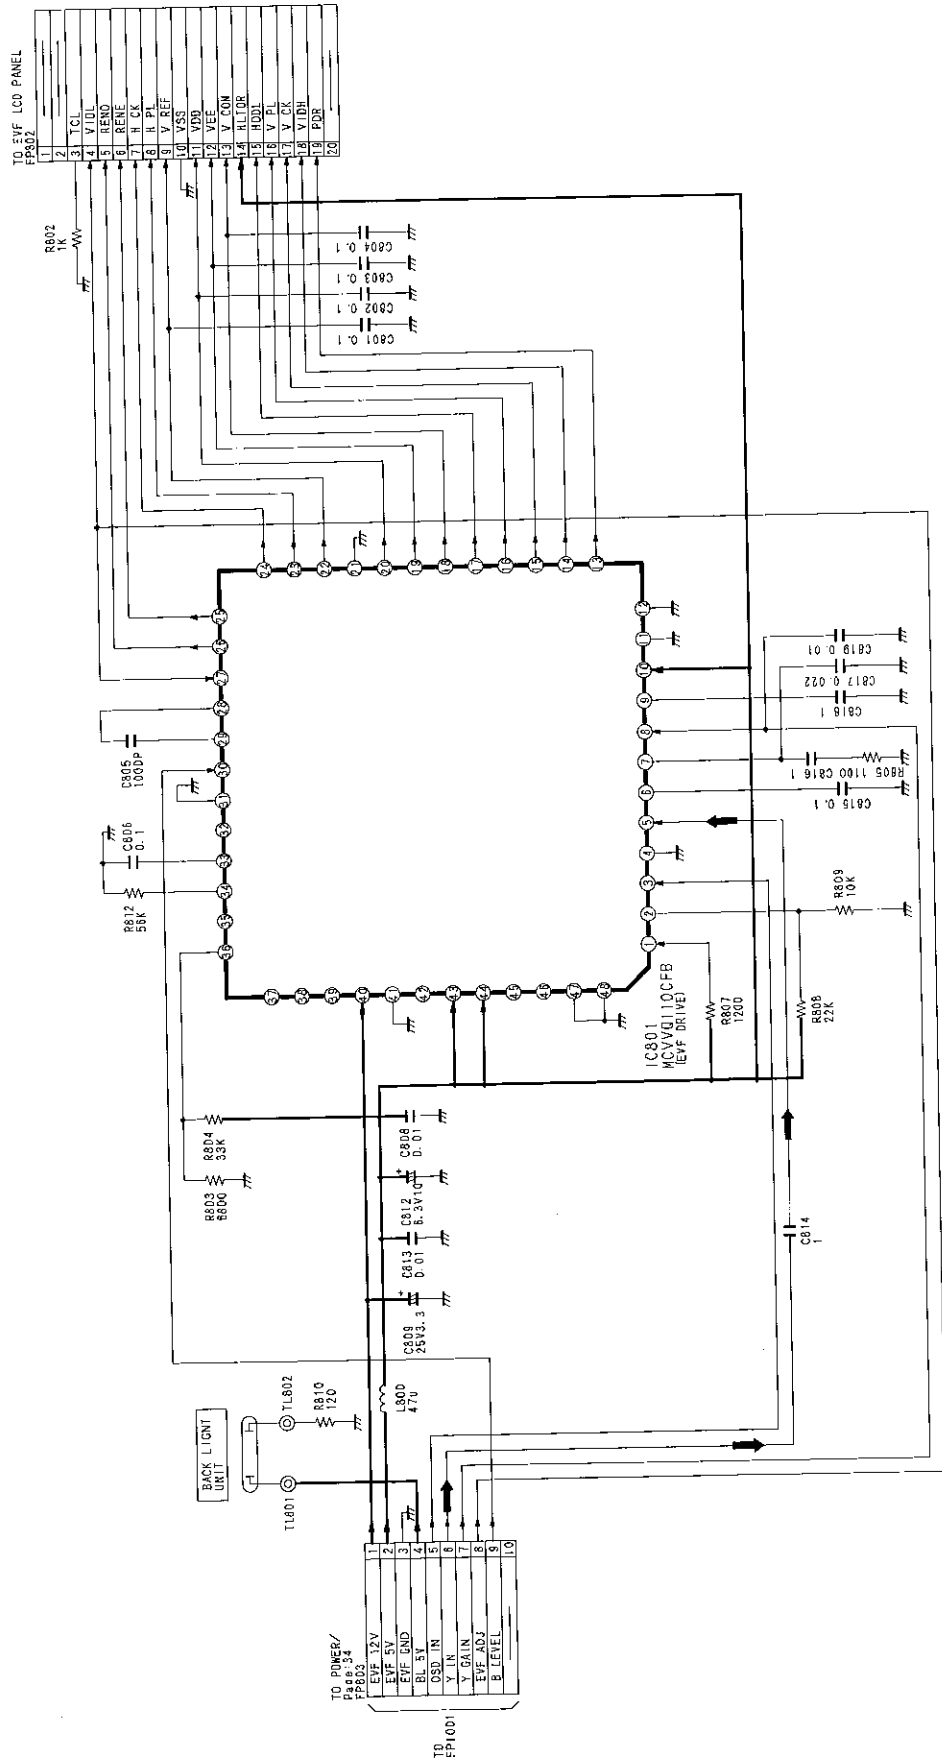

NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE ON THIS DIAGRAM IS STOP MODE. (E.V.F: ON)


NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIST.






# 9.7. SUB SERVO SCHEMATIC DIAGRAM


↑↑ : CAPSTAN SERVO SPEED LOOP  
 ↑ : CYLINDER SERVO SPEED LOOP  
 ⇨ : CAPSTAN SERVO PHASE LOOP  
 ⇨ : CYLINDER SERVO PHASE LOOP

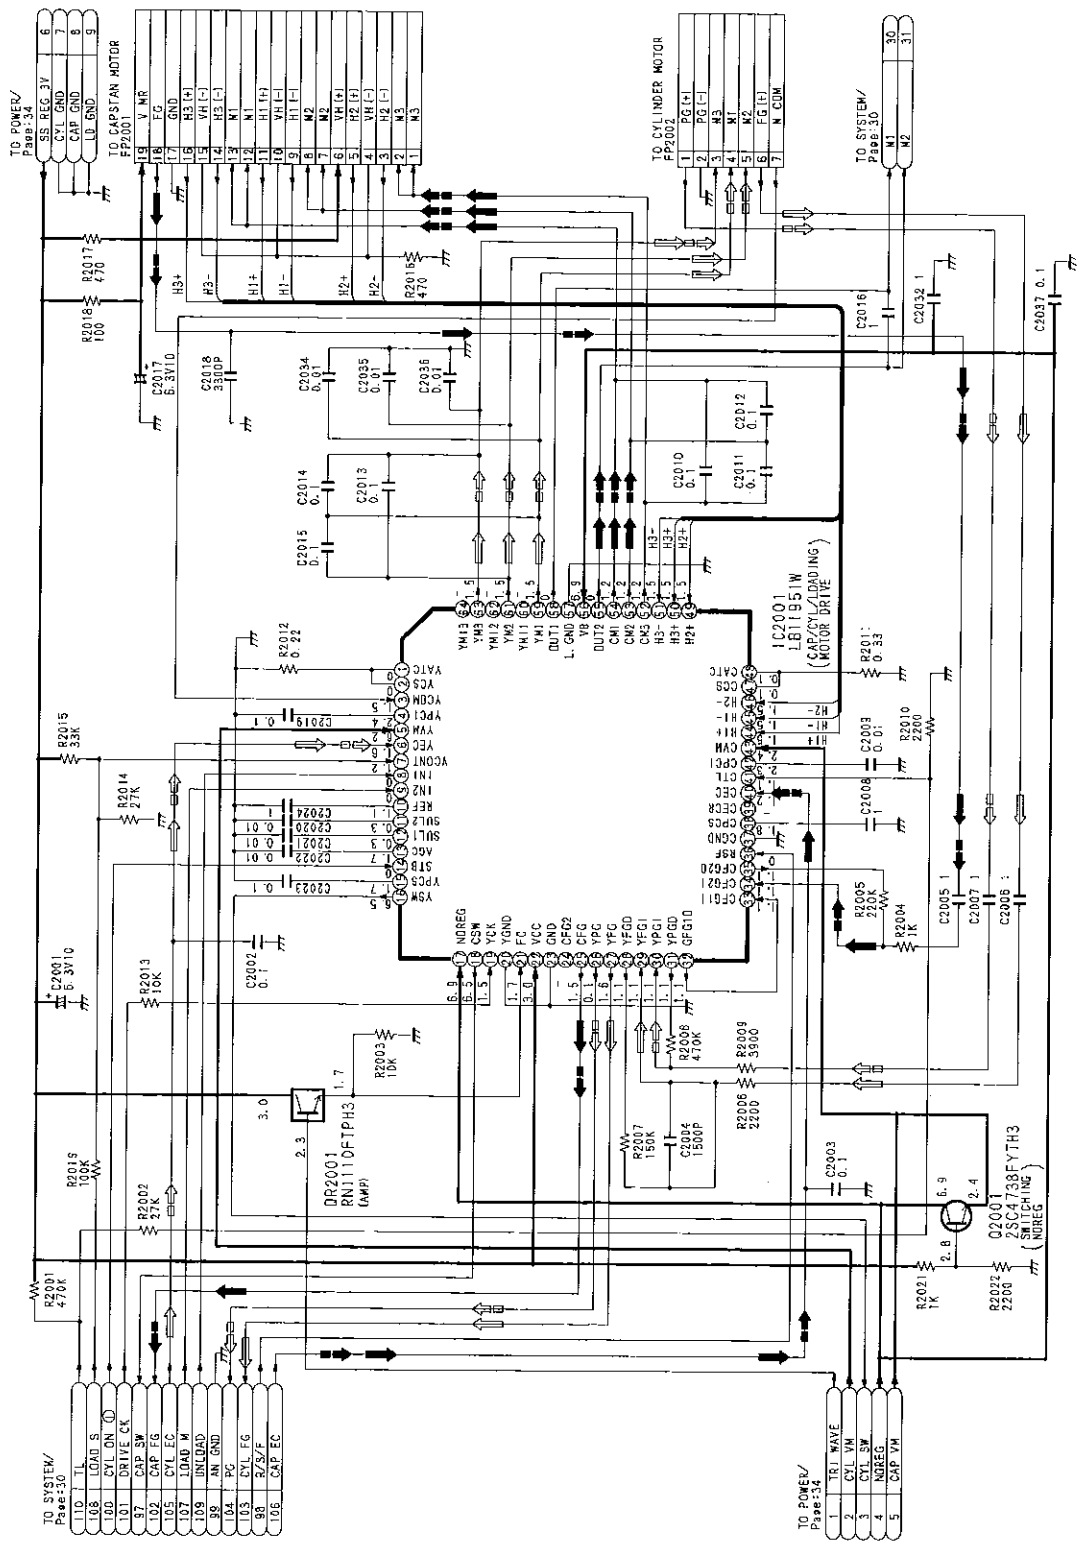


NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING WHEN YOU ORDER A PART. PLEASE REFER TO PARTS LIST.  
 NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKETS ( ) ON THIS DIAGRAM IS PLAYBACK MODE. THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRACKETS ( ) ON THIS DIAGRAM IS RECORD MODE. (SP MODE)

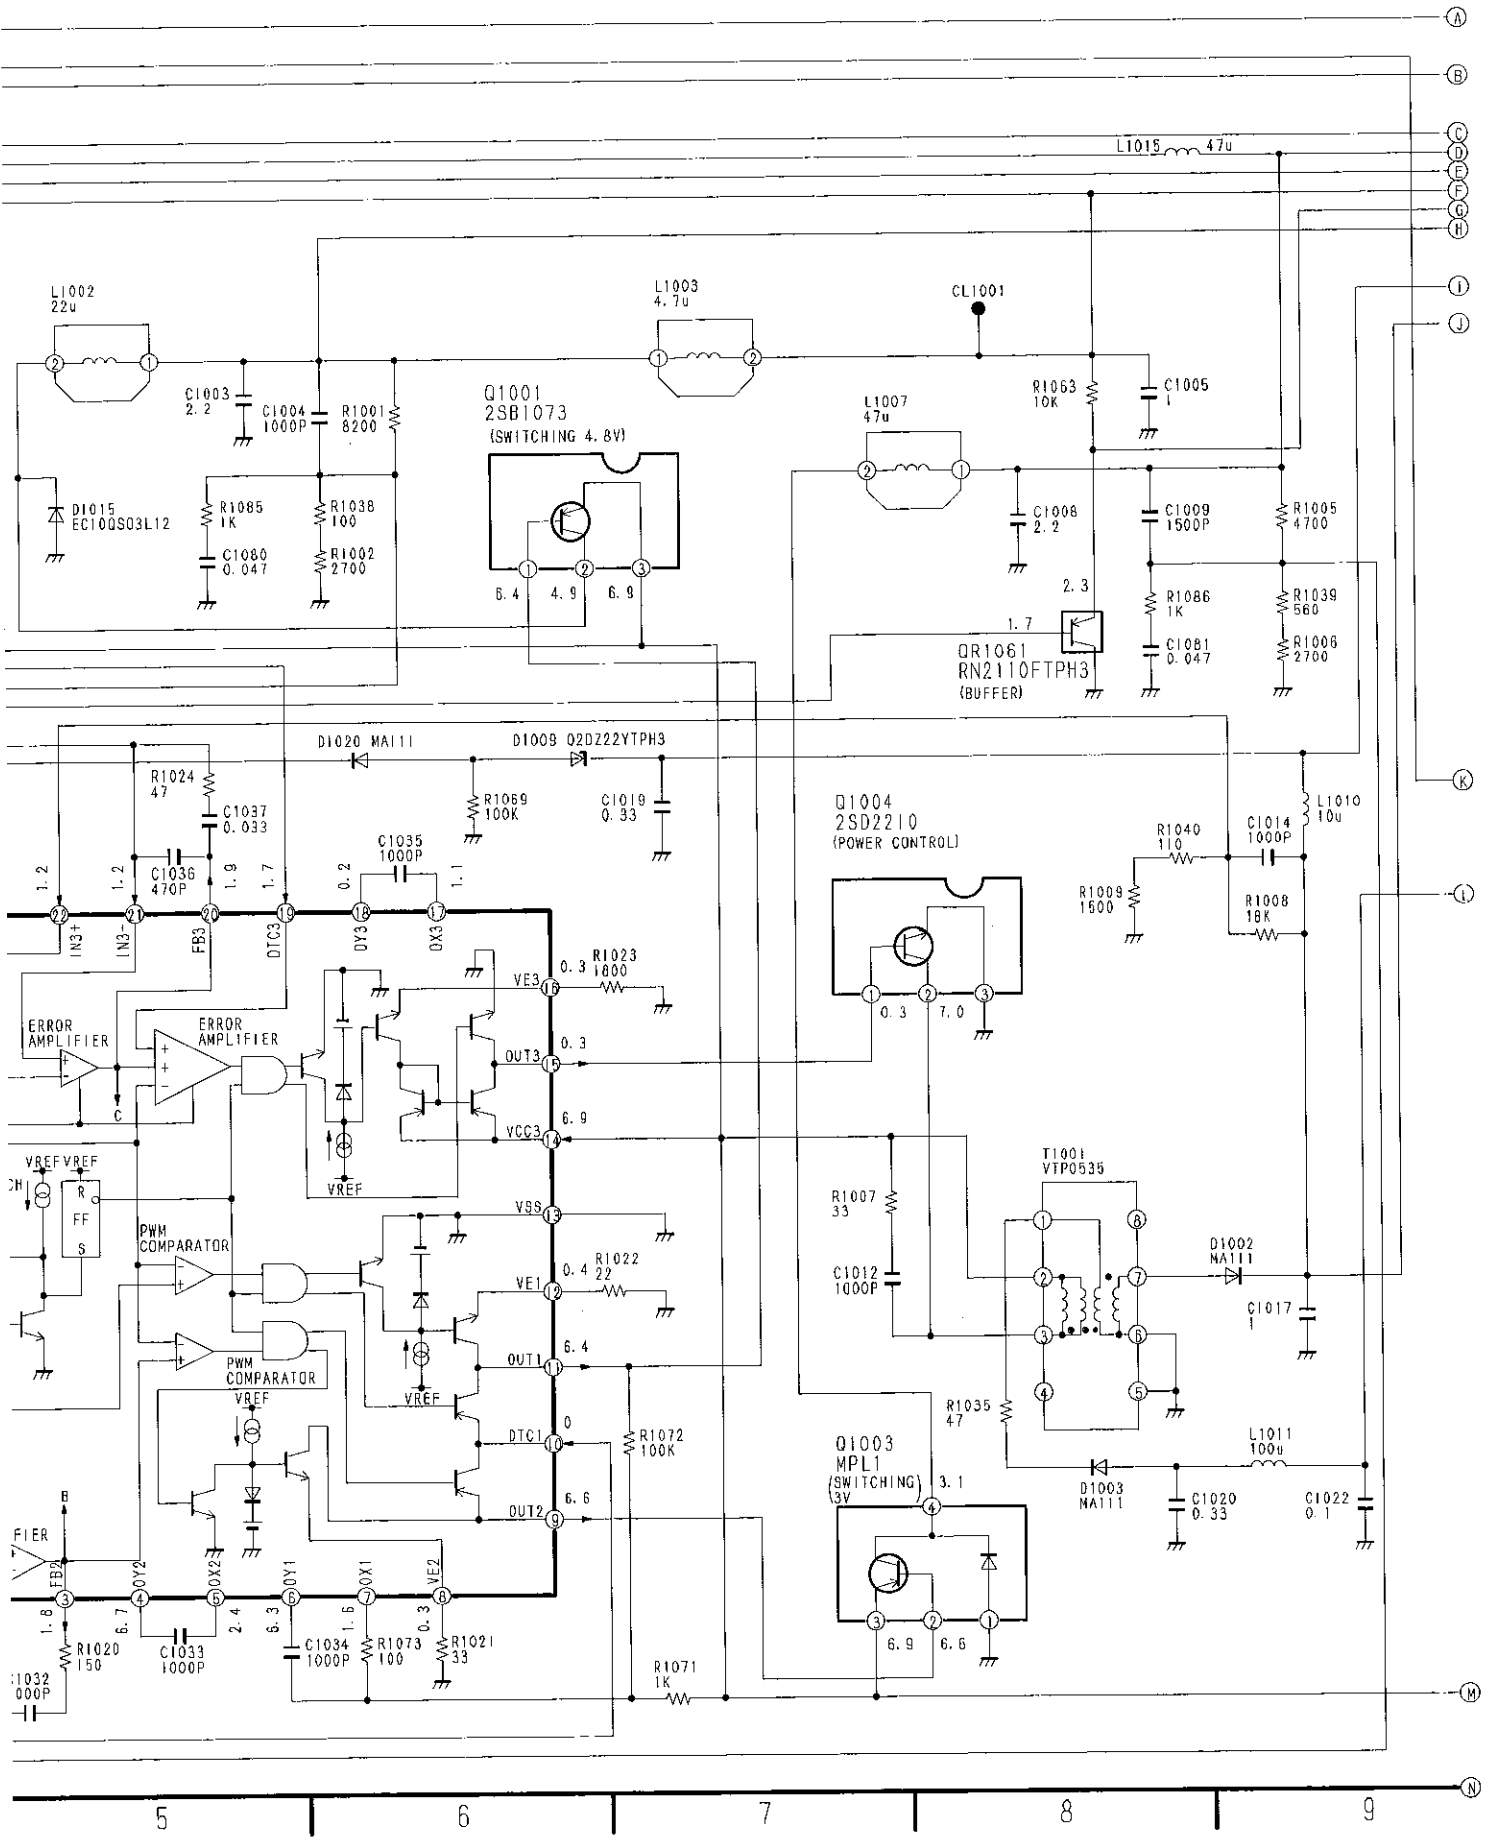


### 9.12. MIC UNIT SCHEMATIC DIAGRAM

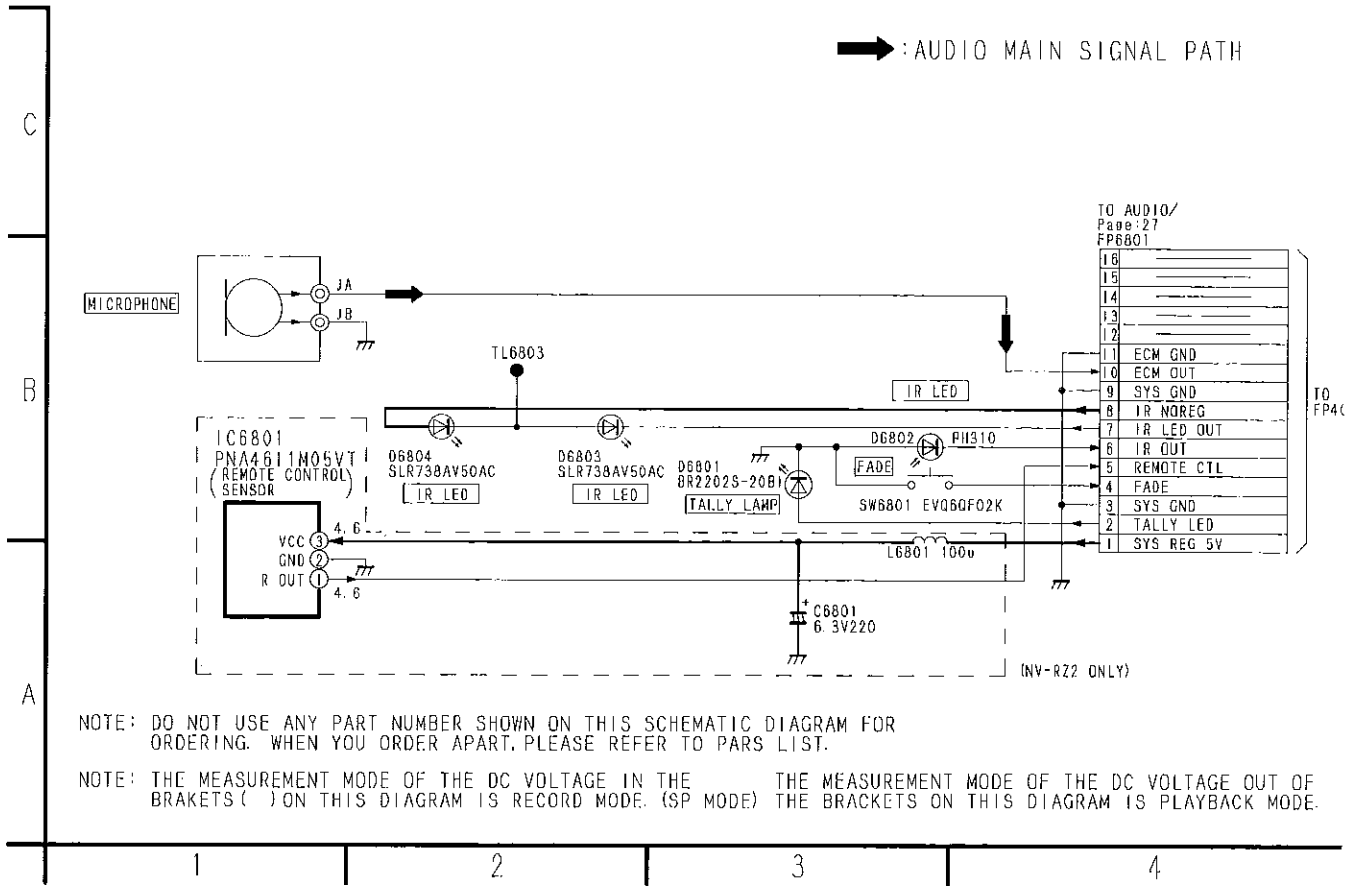

### 9.13. CCD FLEX. CARD SCHEMATIC DIAGRAM

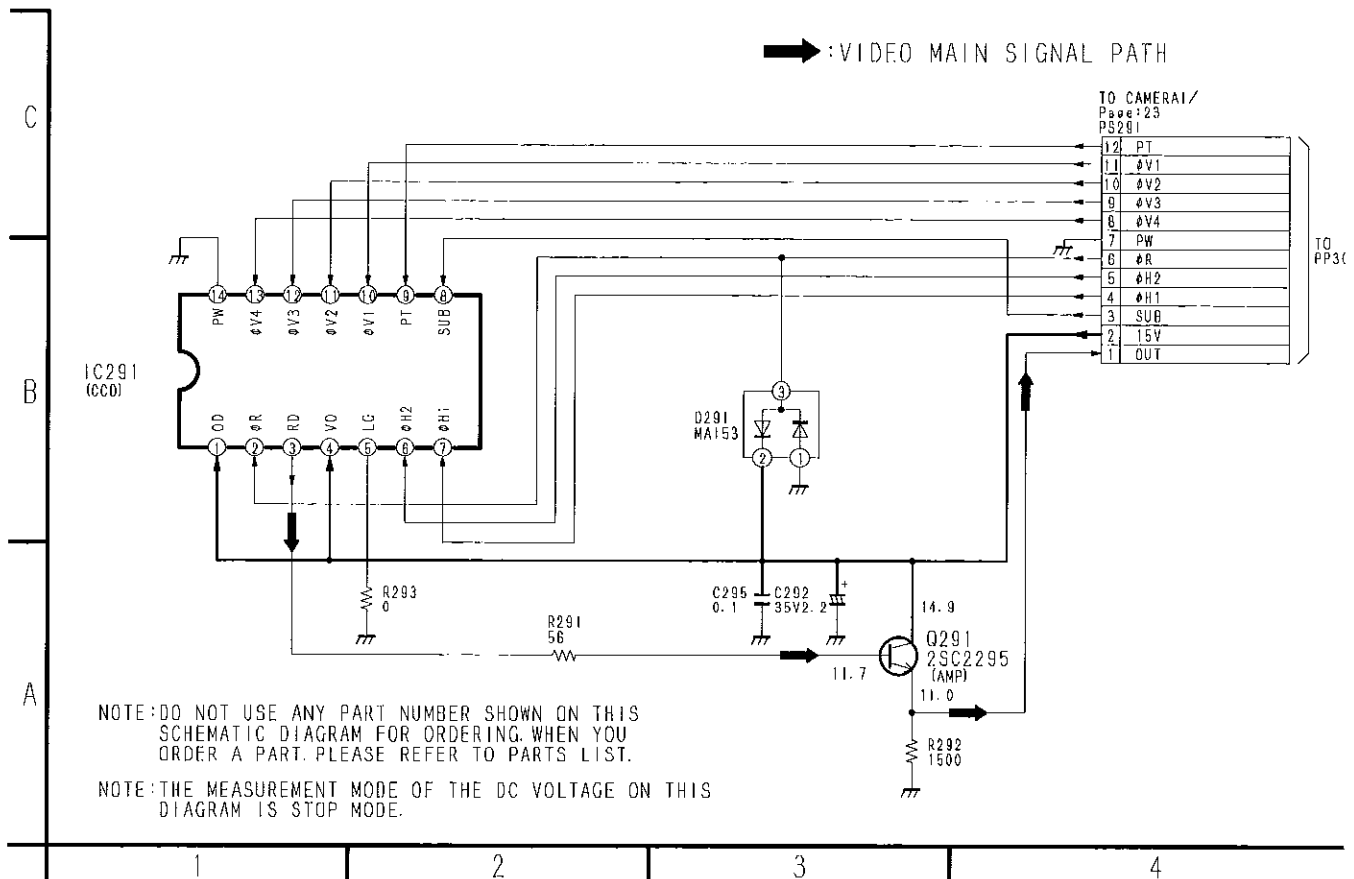



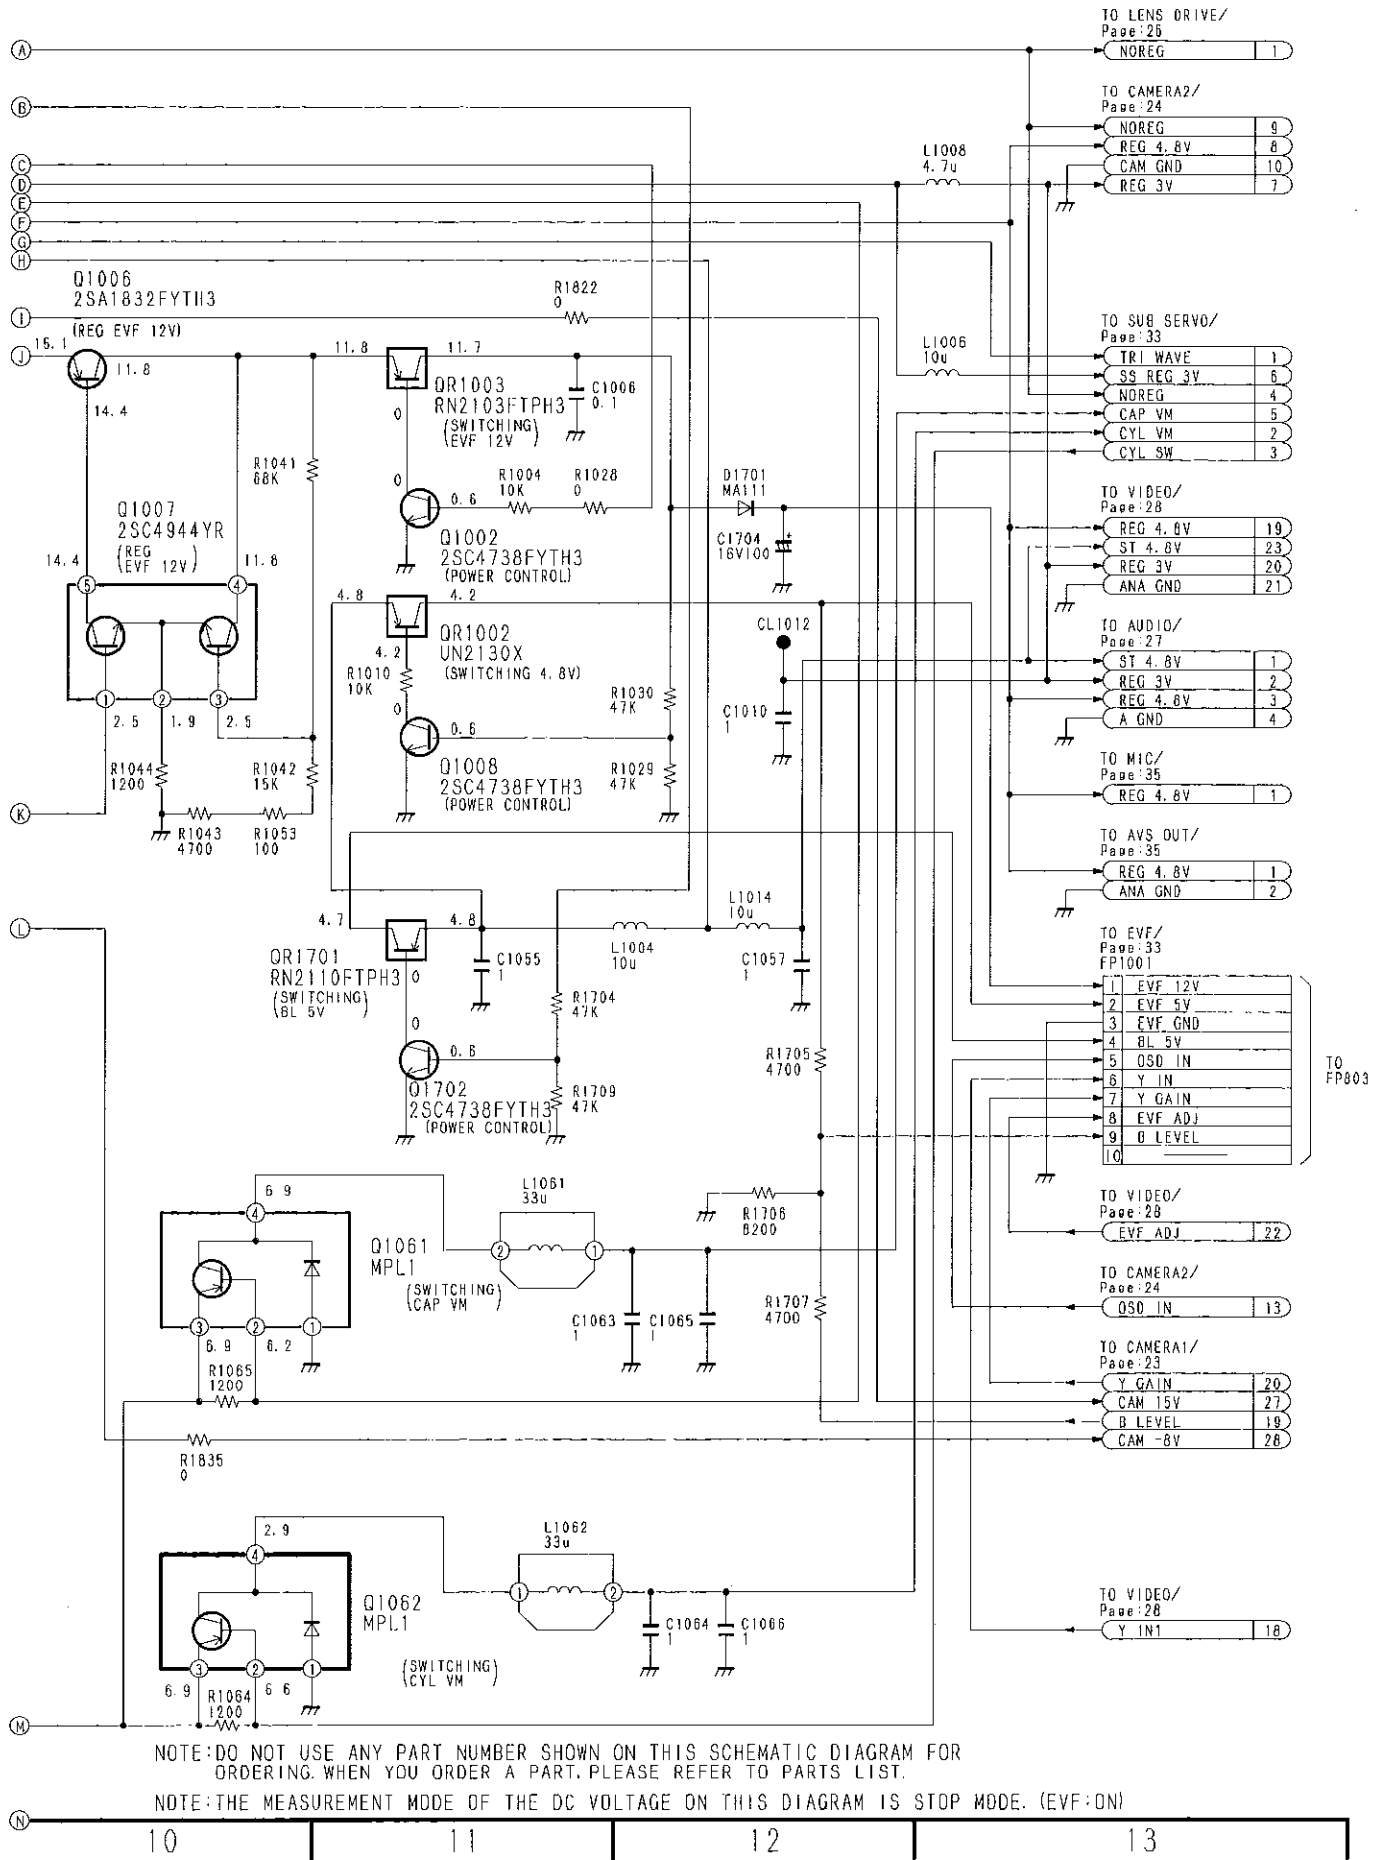

NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIST.

NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE ON THIS DIAGRAM IS STOP MODE. (EVF: ON)


102

7

11

7

# 10.2. CAMERA/MAIN (COMPONENT SIDE) C.B.A.

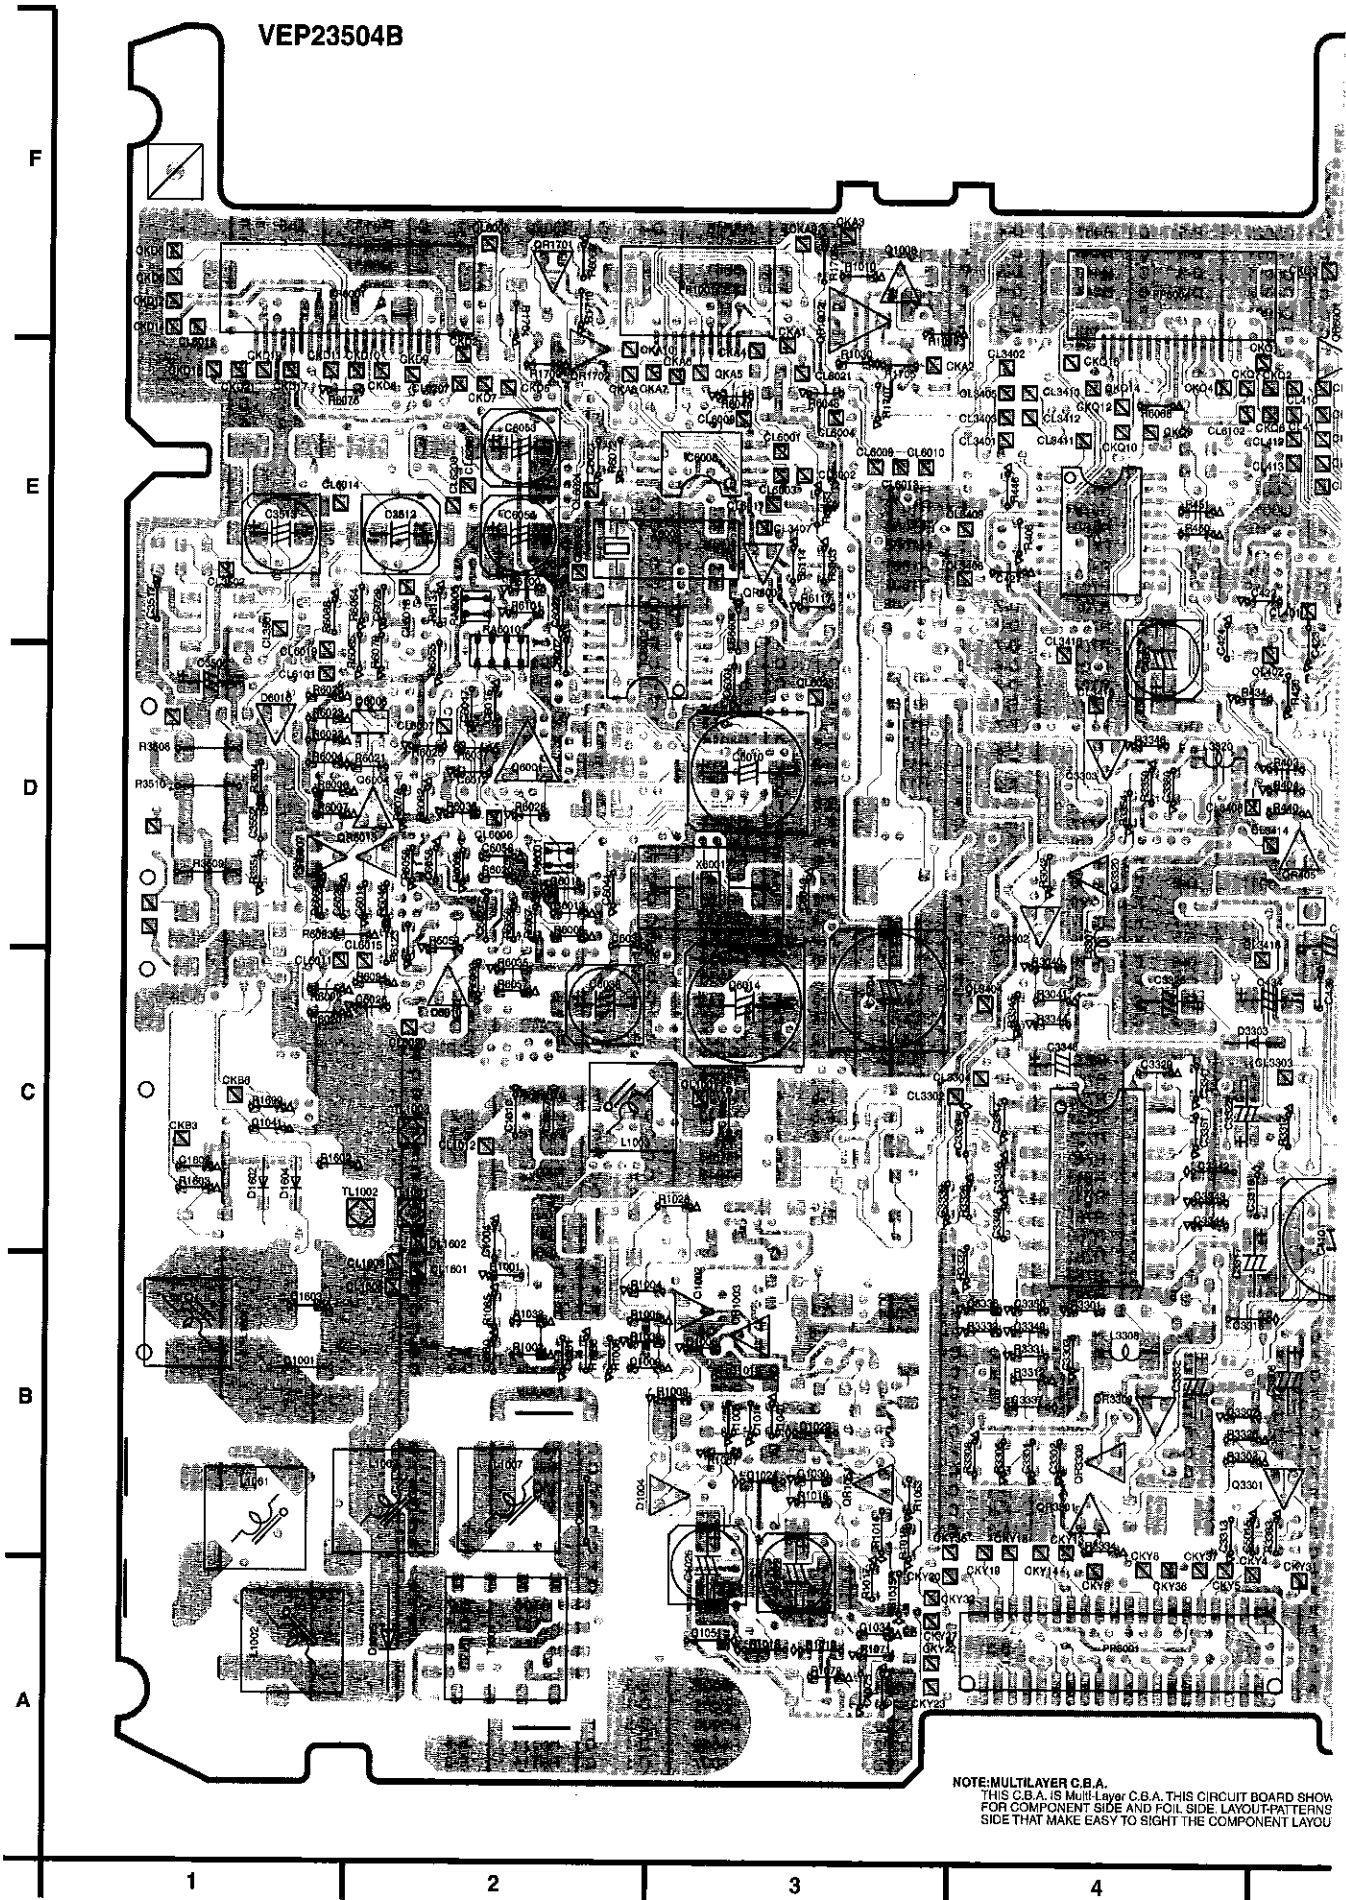


NOTE: MULTILAYER C.B.A.  
 THIS C.B.A. IS Multi-Layer C.B.A. THIS CIRCUIT BOARD SHOW FOR COMPONENT SIDE AND FOIL SIDE LAYOUT PATTERNS SIDE THAT MAKE EASY TO SIGHT THE COMPONENT LAYOUT

A.

|   |          |     |   |       |     |   |       |     |   |       |     |   |       |     |   |                |     |   |
|---|----------|-----|---|-------|-----|---|-------|-----|---|-------|-----|---|-------|-----|---|----------------|-----|---|
| C | C5016    | B-6 | C | R428  | C-5 | C | R1036 | A-6 | F | R3331 | B-4 | C | R6012 | E-5 | F | R6120          | E-5 | F |
| C | C5018    | B-6 | C | R430  | C-5 | C | R1038 | B-2 | C | R3332 | B-4 | C | R6013 | F-6 | F | R6121          | E-5 | F |
| C | C5019    | B-3 | C | R431  | E-4 | F | R1039 | B-3 | C | R3333 | C-4 | F | R6014 | F-7 | F | R6122          | F-5 | F |
| C | C5020    | B-3 | F | R433  | D-3 | F | R1040 | B-3 | C | R3334 | B-4 | C | R6017 | E-5 | F | R6123          | D-2 | C |
| C | C5021    | B-3 | F | R434  | D-4 | C | R1041 | B-6 | F | R3344 | C-4 | C | R6018 | D-7 | F | R6131          | E-2 | C |
| C | C5022    | B-4 | F | R436  | D-5 | F | R1042 | C-6 | F | R3345 | C-4 | C | R6019 | E-5 | F | R6132          | D-5 | F |
| C | C5023    | B-5 | C | R437  | D-4 | F | R1043 | C-6 | F | R3346 | D-4 | C | R6020 | D-2 | C | R6133          | D-5 | F |
| C | C5041    | B-5 | C | R438  | E-4 | F | R1044 | C-6 | F | R3350 | D-4 | C | R6021 | D-2 | C | R6211          | F-5 | F |
| C | C6001    | D-3 | C | R440  | D-5 | C | R1052 | A-5 | F | R3351 | D-4 | C | R6022 | D-1 | C | R6801          | B-1 | F |
| C | C6002    | D-2 | C | R444  | D-4 | F | R1053 | C-6 | F | R3352 | C-6 | C | R6023 | D-1 | C | R6802          | B-7 | C |
| C | C6004    | E-5 | F | R445  | D-4 | F | R1057 | B-3 | C | R3504 | D-1 | C | R6024 | D-7 | F | Resistor Array |     |   |
| C | C6005    | D-7 | F | R446  | E-4 | C | R1083 | B-3 | C | R3508 | D-1 | C | R6025 | D-2 | C | RA301          | E-6 | C |
| C | C6006    | D-6 | F | R447  | D-3 | F | R1084 | B-7 | F | R3509 | D-1 | C | R6026 | D-2 | C | RA704          | E-7 | C |
| C | C6007    | E-5 | F | R450  | E-4 | C | R1065 | B-7 | F | R3510 | D-1 | C | R6027 | F-6 | F | RA6001         | D-2 | C |
| C | C6009    | D-5 | F | R451  | E-4 | C | R1066 | B-6 | F | R3551 | D-1 | C | R6028 | D-6 | F | RA6002         | F-5 | C |
| C | C6010    | D-3 | C | R458  | D-3 | F | R1067 | B-6 | F | R4001 | D-1 | F | R6029 | D-1 | C | RA6008         | E-2 | C |
| F | C6011    | D-2 | C | R459  | D-3 | F | R1068 | B-6 | F | R4002 | C-1 | F | R6030 | F-6 | F | RA6010         | E-2 | C |
| F | C6012    | D-2 | C | R470  | D-3 | F | R1069 | B-6 | F | R4003 | C-6 | C | R6031 | D-6 | F |                |     |   |
| F | C6013    | D-2 | C | R476  | D-3 | F | R1071 | A-3 | C | R4004 | C-3 | F | R6032 | F-6 | F |                |     |   |
| F | C6014    | C-3 | C | R477  | E-2 | F | R1072 | A-3 | C | R4005 | D-2 | F | R6033 | F-5 | C |                |     |   |
| F | C6015    | D-6 | F | R479  | D-3 | F | R1073 | A-3 | C | R4006 | C-3 | F | R6034 | D-7 | F |                |     |   |
| F | C6016    | D-2 | C | R480  | D-3 | F | R1085 | B-2 | C | R4007 | C-2 | F | R6035 | C-2 | C |                |     |   |
| F | C6017    | D-2 | C | R481  | D-3 | F | R1086 | B-2 | C | R4008 | C-6 | C | R6036 | D-2 | C |                |     |   |
| F | C6018    | D-2 | C | R482  | D-3 | F | R1601 | B-7 | F | R4009 | C-2 | F | R6037 | D-2 | C |                |     |   |
| F | C6019    | D-6 | F | R701  | D-7 | C | R1602 | C-1 | C | R4010 | C-3 | F | R6038 | D-6 | F |                |     |   |
| F | C6020    | C-1 | C | R702  | D-7 | C | R1603 | C-1 | C | R4011 | C-7 | C | R6039 | F-6 | F |                |     |   |
| F | C6021    | E-2 | C | R703  | D-2 | F | R1606 | C-7 | F | R4012 | D-1 | F | R6040 | F-7 | F |                |     |   |
| F | C6022    | E-2 | C | R704  | D-7 | C | R1607 | C-7 | F | R4013 | D-1 | F | R6041 | D-6 | F |                |     |   |
| F | C6025    | D-7 | F | R705  | D-6 | C | R1699 | C-1 | C | R4014 | D-7 | C | R6042 | C-6 | F |                |     |   |
| F | C6026    | C-2 | C | R706  | D-2 | F | R1704 | F-2 | C | R4015 | C-2 | F | R6043 | E-5 | F |                |     |   |
| F | C6027    | D-2 | C | R707  | E-7 | C | R1705 | E-3 | C | R4016 | D-1 | F | R6044 | E-3 | C |                |     |   |
| F | C6028    | D-2 | C | R709  | F-7 | C | R1706 | F-3 | C | R4017 | D-1 | F | R6046 | D-2 | C |                |     |   |
| F | C6029    | E-2 | C | R712  | D-2 | F | R1707 | E-3 | C | R4018 | D-1 | F | R6048 | E-3 | C |                |     |   |
| F | C6031    | E-7 | F | R713  | E-1 | F | R1709 | E-2 | C | R4019 | C-1 | F | R6051 | F-7 | F |                |     |   |
| F | C6032    | E-7 | F | R714  | E-2 | F | R1710 | F-2 | C | R4020 | D-1 | F | R6052 | F-7 | F |                |     |   |
| F | C6033    | E-7 | F | R716  | E-1 | F | R1822 | B-5 | F | R4021 | D-1 | F | R6053 | E-7 | F |                |     |   |
| F | C6038    | C-2 | C | R717  | E-7 | C | R1835 | B-6 | F | R4022 | C-1 | F | R6054 | F-7 | F |                |     |   |
| F | C6039    | D-2 | C | R718  | E-1 | F | R2001 | F-6 | C | R4023 | D-1 | F | R6055 | D-2 | C |                |     |   |
| F | C6040    | D-3 | C | R722  | E-1 | F | R2002 | F-6 | C | R4024 | B-3 | F | R6056 | D-2 | C |                |     |   |
| F | C6041    | D-2 | C | R723  | E-1 | F | R2003 | F-5 | C | R4025 | D-7 | C | R6057 | C-2 | C |                |     |   |
| F | C6042    | D-5 | F | R726  | E-1 | F | R2004 | F-2 | F | R4026 | D-7 | C | R6058 | D-2 | C |                |     |   |
| F | C6044    | D-7 | F | R727  | E-2 | F | R2005 | F-2 | F | R4030 | C-1 | F | R6059 | D-2 | C |                |     |   |
| F | C6045    | D-7 | F | R728  | E-2 | F | R2006 | F-3 | F | R4031 | C-1 | F | R6060 | F-6 | F |                |     |   |
| F | C6047    | D-5 | F | R729  | E-2 | F | R2007 | F-3 | F | R4032 | C-7 | C | R6061 | D-1 | C |                |     |   |
| F | C6051    | C-5 | F | R730  | E-1 | F | R2008 | F-3 | F | R4033 | D-6 | C | R6062 | F-6 | F |                |     |   |
| F | C6053    | E-2 | C | R731  | E-1 | F | R2009 | F-3 | F | R4034 | D-1 | F | R6063 | F-7 | F |                |     |   |
| F | C6054    | E-2 | C | R732  | E-2 | F | R2010 | F-6 | C | R4035 | D-2 | F | R6064 | E-2 | C |                |     |   |
| F | C6056    | D-2 | C | R733  | E-1 | F | R2011 | F-2 | F | R4036 | D-1 | F | R6065 | E-7 | F |                |     |   |
| F | C6057    | D-7 | F | R734  | E-2 | F | R2012 | F-4 | F | R4037 | B-2 | F | R6066 | E-7 | F |                |     |   |
| F | C6058    | D-2 | C | R735  | E-1 | F | R2013 | F-3 | F | R4038 | D-1 | F | R6067 | D-2 | C |                |     |   |
| C | Resistor |     |   | R736  | E-1 | F | R2014 | F-5 | C | R4039 | B-2 | F | R6068 | E-4 | C |                |     |   |
| C | R201     | E-2 | F | R737  | E-2 | F | R2015 | F-6 | C | R4040 | D-1 | F | R6069 | F-2 | C |                |     |   |
| C | R219     | F-2 | F | R738  | E-2 | F | R2016 | F-6 | C | R4041 | C-6 | C | R6070 | E-7 | F |                |     |   |
| F | R301     | F-2 | F | R740  | E-2 | F | R2017 | F-6 | C | R4042 | C-2 | F | R6071 | D-7 | F |                |     |   |
| F | R302     | F-2 | F | R743  | F-7 | C | R2018 | F-6 | C | R4043 | C-6 | C | R6072 | E-2 | C |                |     |   |
| F | R303     | F-6 | C | R745  | E-1 | F | R2019 | F-5 | C | R4044 | C-6 | C | R6075 | E-2 | C |                |     |   |
| F | R304     | F-7 | C | R761  | F-7 | C | R2021 | F-4 | F | R4110 | D-3 | F | R6076 | D-2 | C |                |     |   |
| F | R305     | F-7 | C | R780  | C-1 | F | R2022 | F-4 | F | R4801 | C-1 | F | R6079 | D-2 | C |                |     |   |
| F | R306     | F-7 | C | R781  | C-1 | F | R3001 | C-5 | C | R4802 | C-1 | F | R6080 | C-2 | C |                |     |   |
| F | R307     | F-7 | C | R782  | C-1 | F | R3002 | C-5 | C | R4803 | C-2 | F | R6081 | F-6 | F |                |     |   |
| F | R308     | E-6 | C | R783  | B-1 | F | R3003 | C-5 | C | R4804 | C-2 | F | R6082 | D-2 | C |                |     |   |
| F | R309     | F-2 | F | R784  | C-1 | F | R3004 | C-5 | C | R4805 | B-1 | F | R6083 | E-3 | C |                |     |   |
| F | R312     | E-3 | F | R785  | C-1 | F | R3005 | D-3 | F | R4806 | B-2 | F | R6085 | D-2 | C |                |     |   |
| F | R313     | F-2 | F | R1001 | B-2 | C | R3017 | D-3 | F | R4807 | C-2 | F | R6086 | E-1 | C |                |     |   |
| F | R315     | F-2 | F | R1002 | B-2 | C | R3040 | C-4 | C | R4808 | C-2 | F | R6088 | D-2 | C |                |     |   |
| F | R316     | F-2 | F | R1004 | B-3 | C | R3041 | C-4 | C | R4809 | C-2 | F | R6089 | D-7 | F |                |     |   |
| F | R317     | F-2 | F | R1005 | B-3 | C | R3042 | D-4 | C | R4810 | C-2 | F | R6092 | C-1 | C |                |     |   |
| F | R318     | E-2 | F | R1006 | B-2 | C | R3301 | B-4 | C | R4811 | C-2 | F | R6093 | D-2 | C |                |     |   |
| F | R403     | D-5 | C | R1007 | A-7 | F | R3302 | B-4 | C | R4812 | B-7 | C | R6094 | C-2 | C |                |     |   |
| F | R404     | D-5 | C | R1008 | B-3 | C | R3303 | B-5 | C | R4817 | C-6 | C | R6095 | F-7 | F |                |     |   |
| F | R406     | E-4 | C | R1009 | B-3 | C | R3306 | B-4 | C | R5001 | B-5 | C | R6097 | F-6 | F |                |     |   |
| F | R408     | D-5 | C | R1010 | F-3 | C | R3307 | B-4 | F | R5002 | B-3 | F | R6100 | E-2 | C |                |     |   |
| F | R409     | C-5 | C | R1012 | A-3 | C | R3308 | B-4 | C | R5003 | B-3 | F | R6101 | E-2 | C |                |     |   |
| F | R412     | D-3 | F | R1013 | A-3 | C | R3309 | C-4 | F | R5004 | B-6 | C | R6103 | F-6 | F |                |     |   |
| F | R413     | D-4 | F | R1014 | B-3 | C | R3310 | A-4 | F | R5005 | B-3 | F | R6104 | D-6 | F |                |     |   |
| F | R414     | D-3 | F | R1015 | A-3 | C | R3311 | B-4 | F | R5006 | B-6 | C | R6105 | D-7 | F |                |     |   |
| F | R415     | E-5 | C | R1016 | B-5 | F | R3312 | B-4 | C | R5007 | A-4 | F | R6106 | D-7 | F |                |     |   |
| F | R416     | C-5 | C | R1017 | A-3 | C | R3314 | B-4 | F | R5008 | A-4 | F | R6107 | D-7 | F |                |     |   |
| F | R417     | D-3 | F | R1018 | B-3 | C | R3316 | B-4 | F | R6001 | F-7 | F | R6108 | D-6 | F |                |     |   |
| F | R418     | C-5 | C | R1019 | B-3 | C | R3317 | C-5 | C | R6002 | F-6 | F | R6109 | D-6 | F |                |     |   |
| F | R419     | C-5 | C | R1020 | B-5 | F | R3318 | B-5 | C | R6003 | E-3 | C | R6110 | D-5 | F |                |     |   |
| F | R420     | D-5 | C | R1021 | A-5 | F | R3319 | C-5 | F | R6004 | D-1 | C | R6111 | D-5 | F |                |     |   |
| F | R421     | E-3 | F | R1022 | A-5 | F | R3320 | C-5 | C | R6005 | E-5 | F | R6112 | D-6 | F |                |     |   |
| F | R422     | C-5 | C | R1023 | A-5 | F | R3322 | D-4 | F | R6006 | D-1 | C | R6113 | E-5 | F |                |     |   |
| F | R423     | D-3 | F | R1024 | B-6 | F | R3323 | C-4 | F | R6007 | D-1 | C | R6114 | E-3 | C |                |     |   |
| F | R424     | E-2 | F | R1025 | B-6 | F | R3325 | C-5 | F | R6008 | D-2 | C | R6116 | E-5 | F |                |     |   |
| F | R425     | E-2 | F | R1028 | C-3 | C | R3326 | B-4 | C | R6009 | F-5 | C | R6117 | E-3 | C |                |     |   |
| F | R426     | E-3 | F | R1029 | F-3 | C | R3327 | C-4 | C | R6010 | D-7 | F | R6118 | E-5 | F |                |     |   |
| C | R427     | C-6 | C | R1030 | E-3 | C | R3328 | C-4 | C | R6011 | E-5 | F | R6119 | E-5 | F |                |     |   |





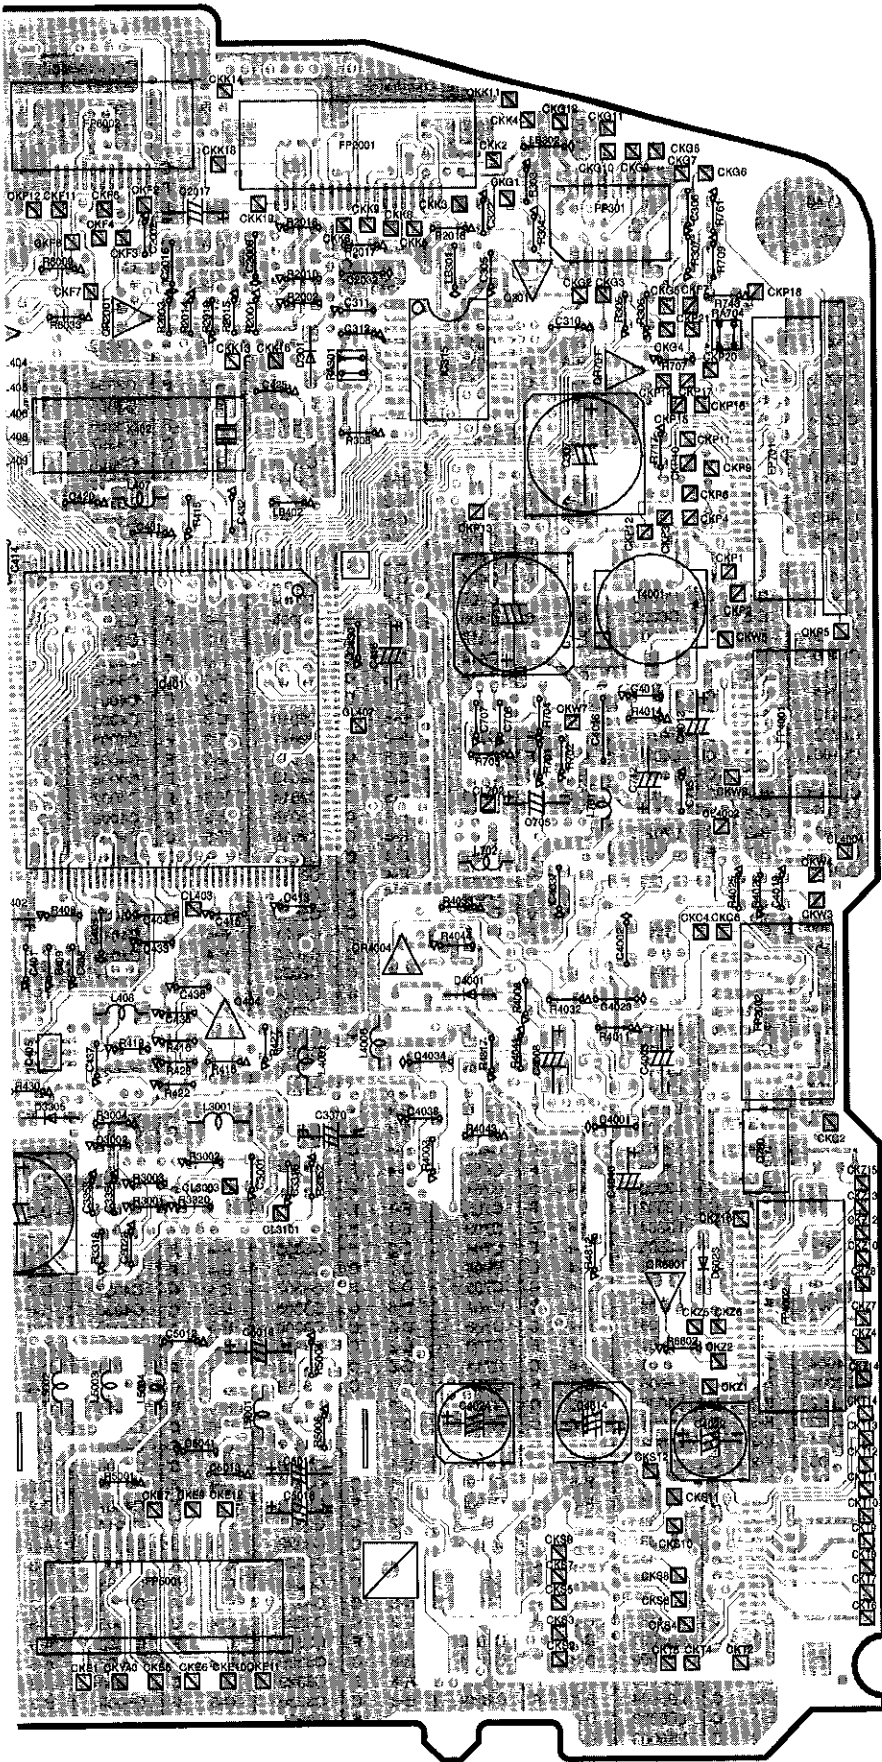

1/5 COMPONENT LAYOUT PATTERN  
ARE SINGLE PATTERN FOR EACH  
T.


(COMPONENT SIDE)

5


6

7


### 10.4. E.V.F. C.B.A.

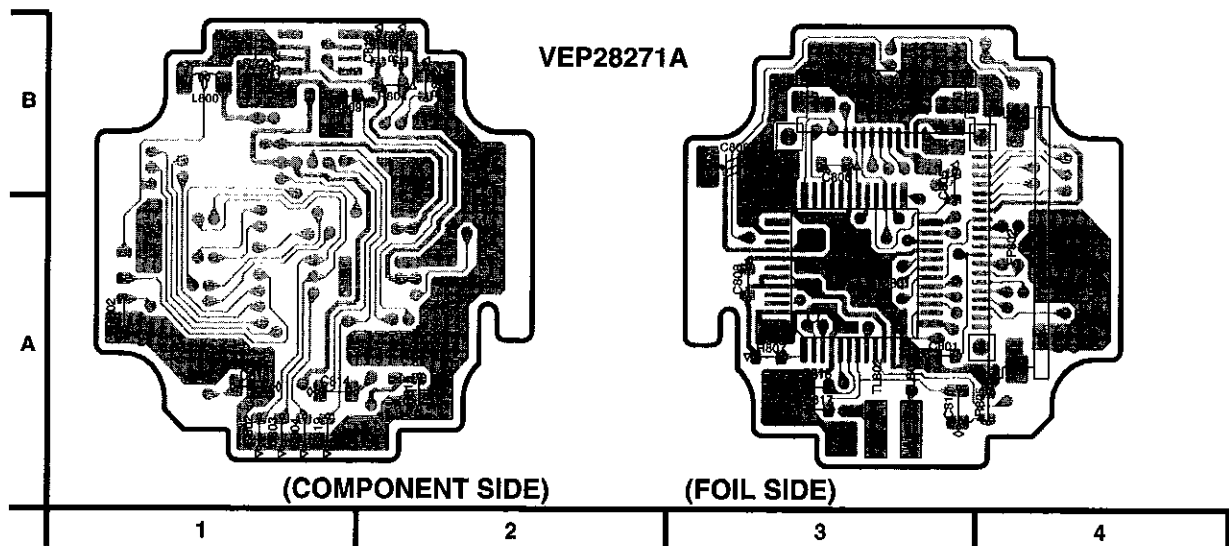


### 10.5. CCD FLEX. CARD C.B.A.

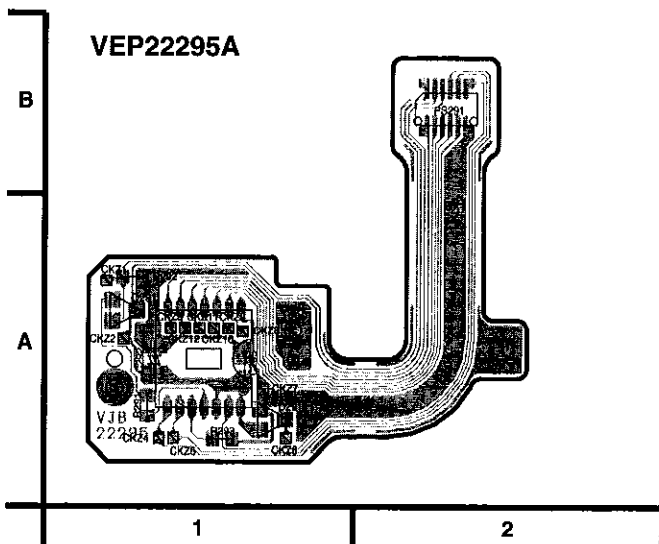

### 10.6. MIC UNIT

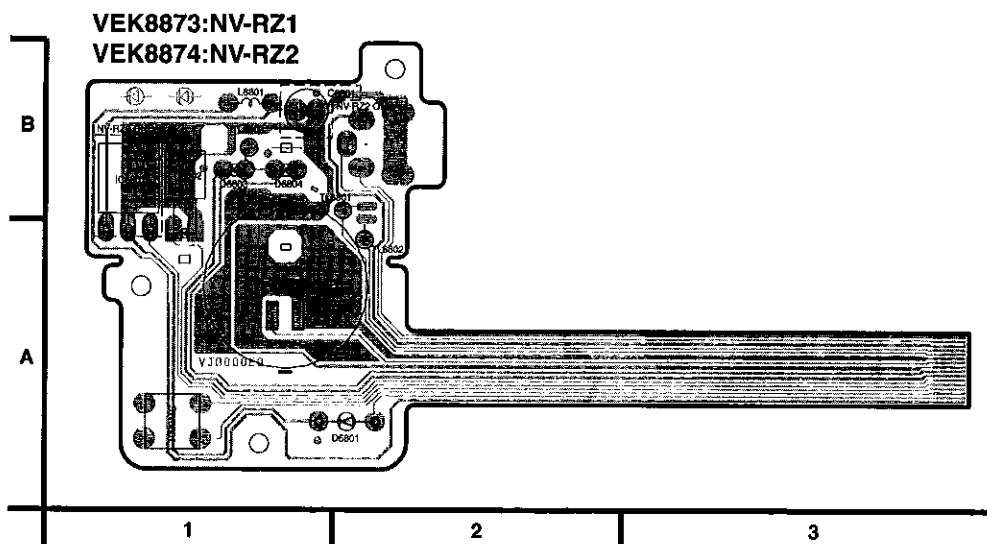

Y NOTICE:  
S IDENTIFIED WITH THE MARK  $\Delta$  HAVE THE SPECIAL CHARACTERISTICS FOR SAFETY.  
CING ANY OF THESE COMPONENTS, USE ONLY THE SAME TYPE.

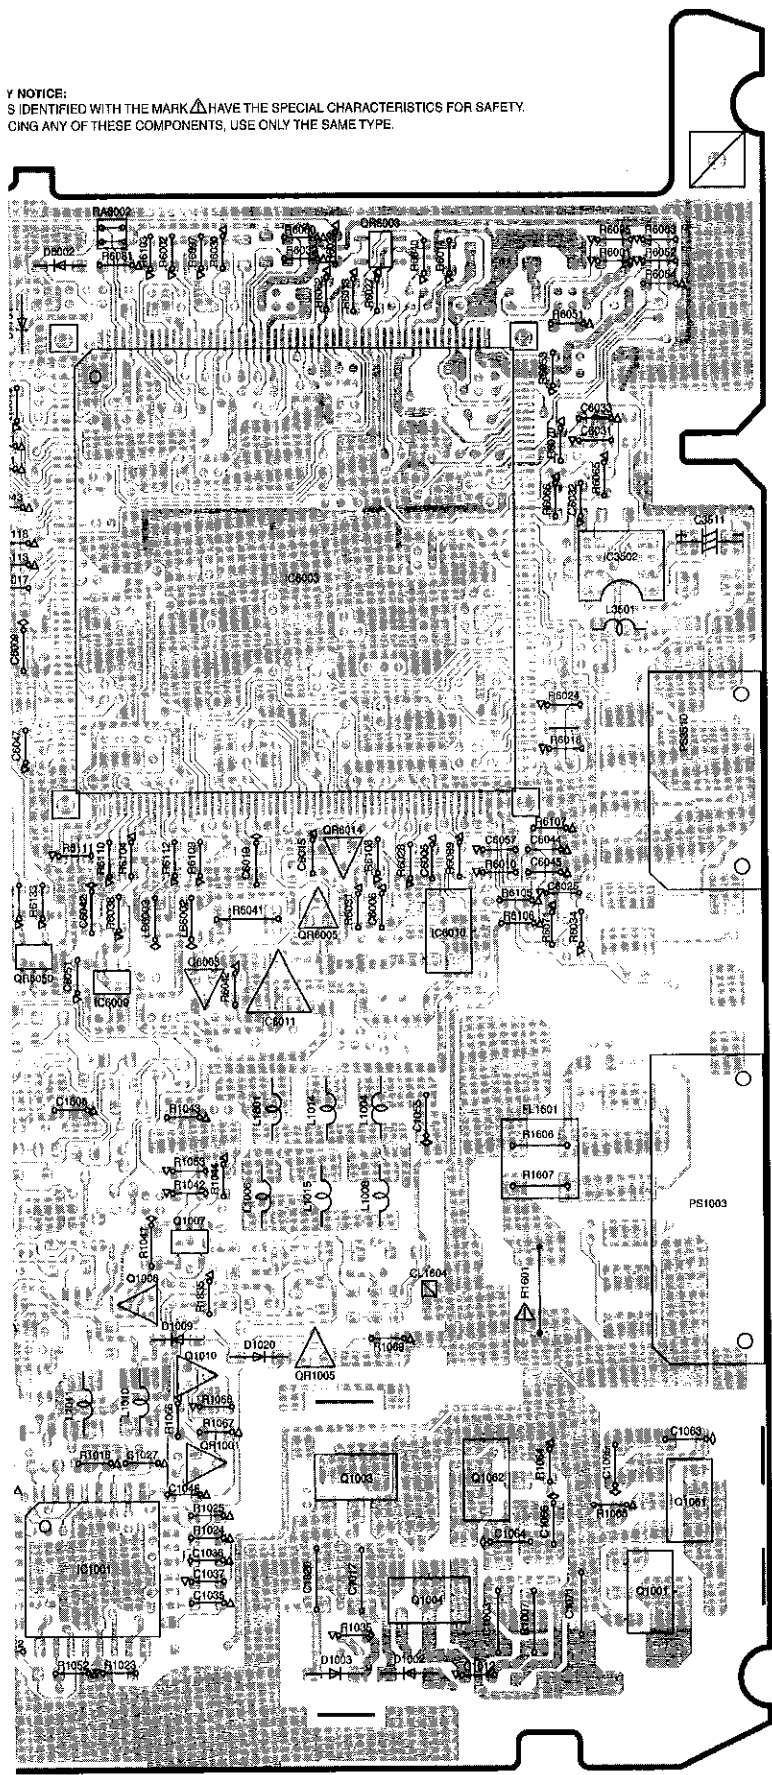


# 10.3. CAMERA/MAIN C.B.A. (FOIL SIDE)

VEP23504B

IMPORTANT SAFET  
COMPONENT  
WHEN REPLA

F  
E  
D  
C  
B  
A

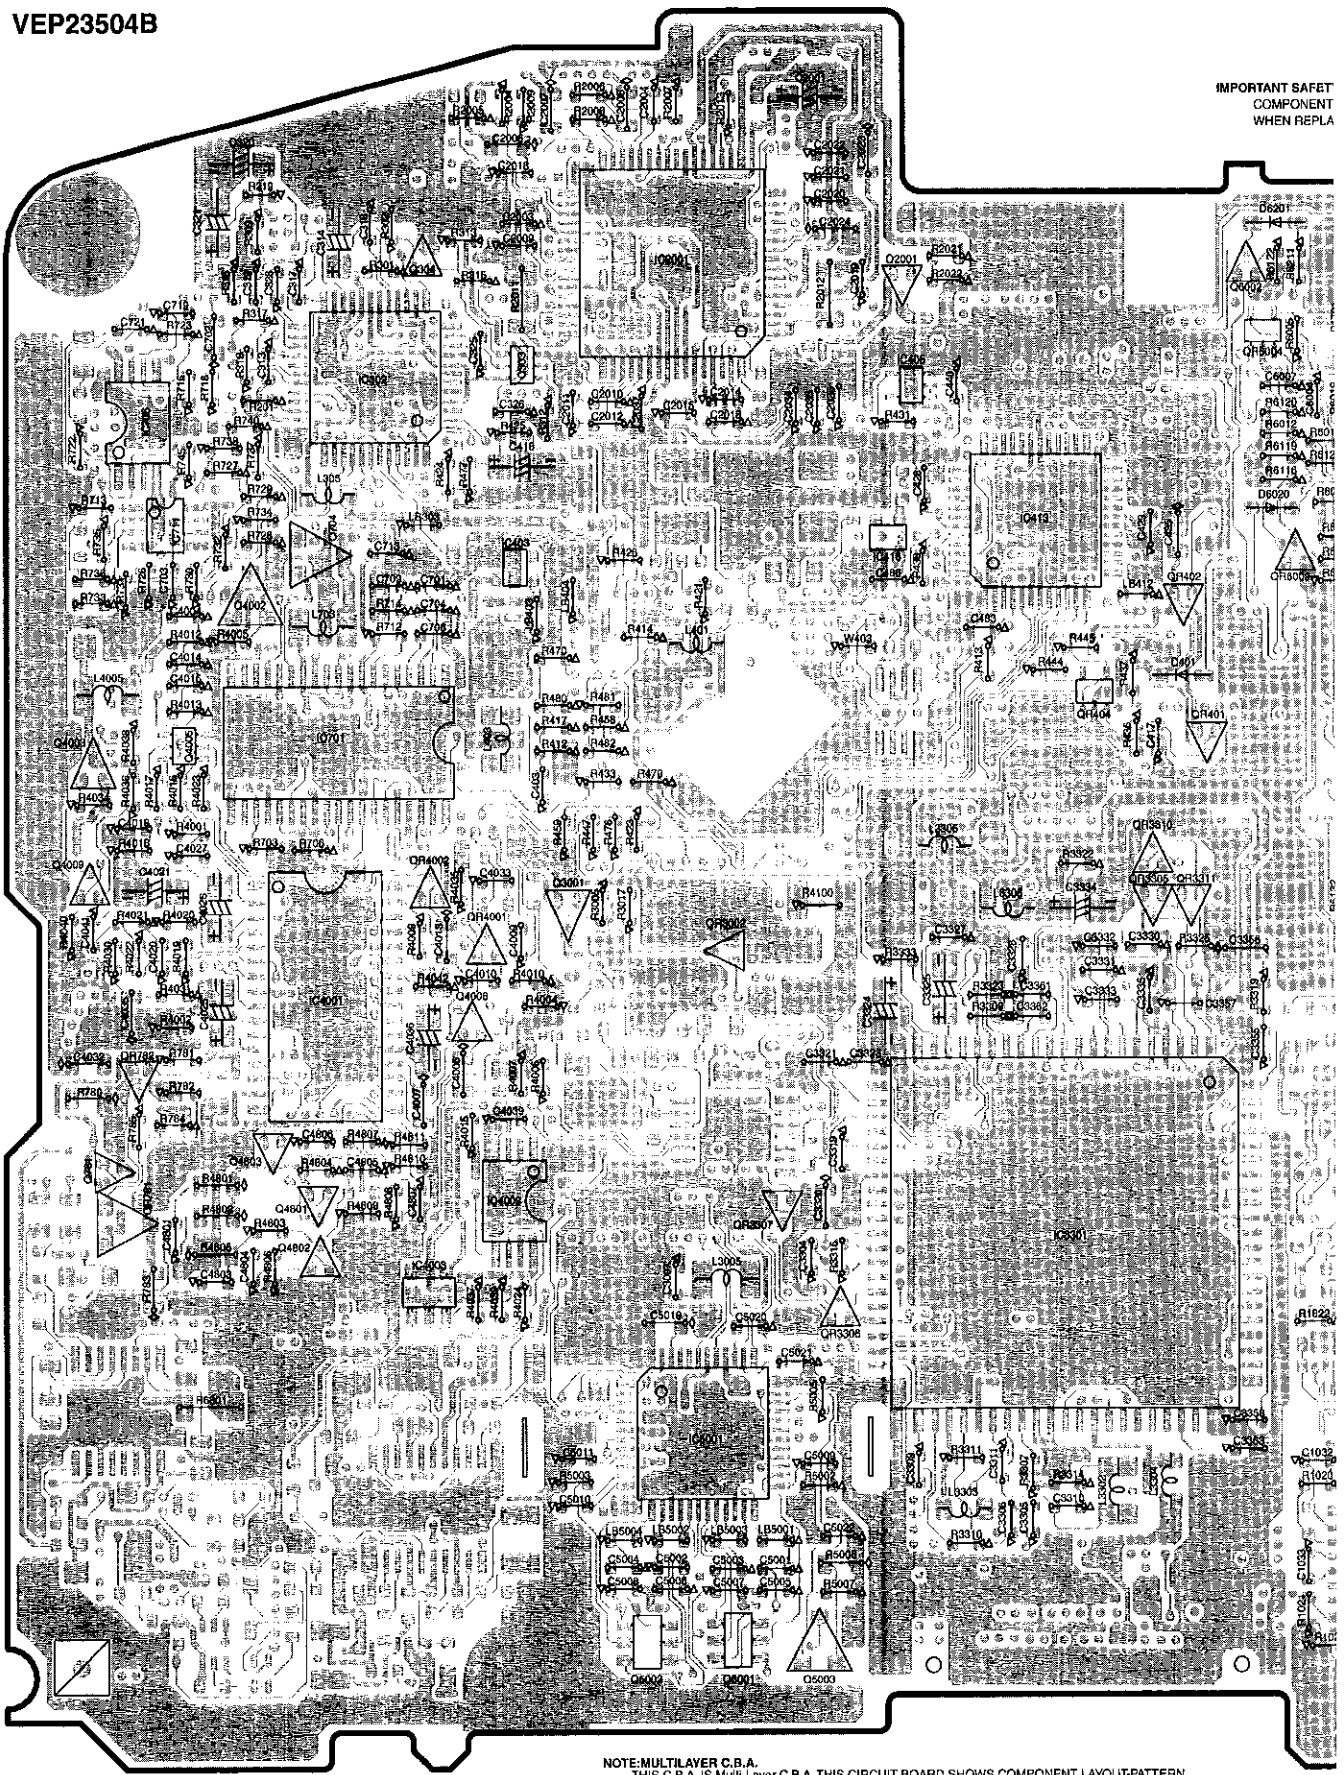

(FOIL SIDE)

NOTE: MULTILAYER C.B.A.  
THIS C.B.A. IS Multi-Layer C.B.A. THIS CIRCUIT BOARD SHOWS COMPONENT LAYOUT-PATTERN FOR COMPONENT SIDE AND FOIL SIDE. LAYOUT-PATTERNS ARE SINGLE PATTERN FOR EACH SIDE THAT MAKE EASY TO SIGHT THE COMPONENT LAYOUT.


1 2 3 4 5





# 11 EXPLODED VIEWS & PARTS LIST

## 11.1. VTR MECHANISM SECTION (1)

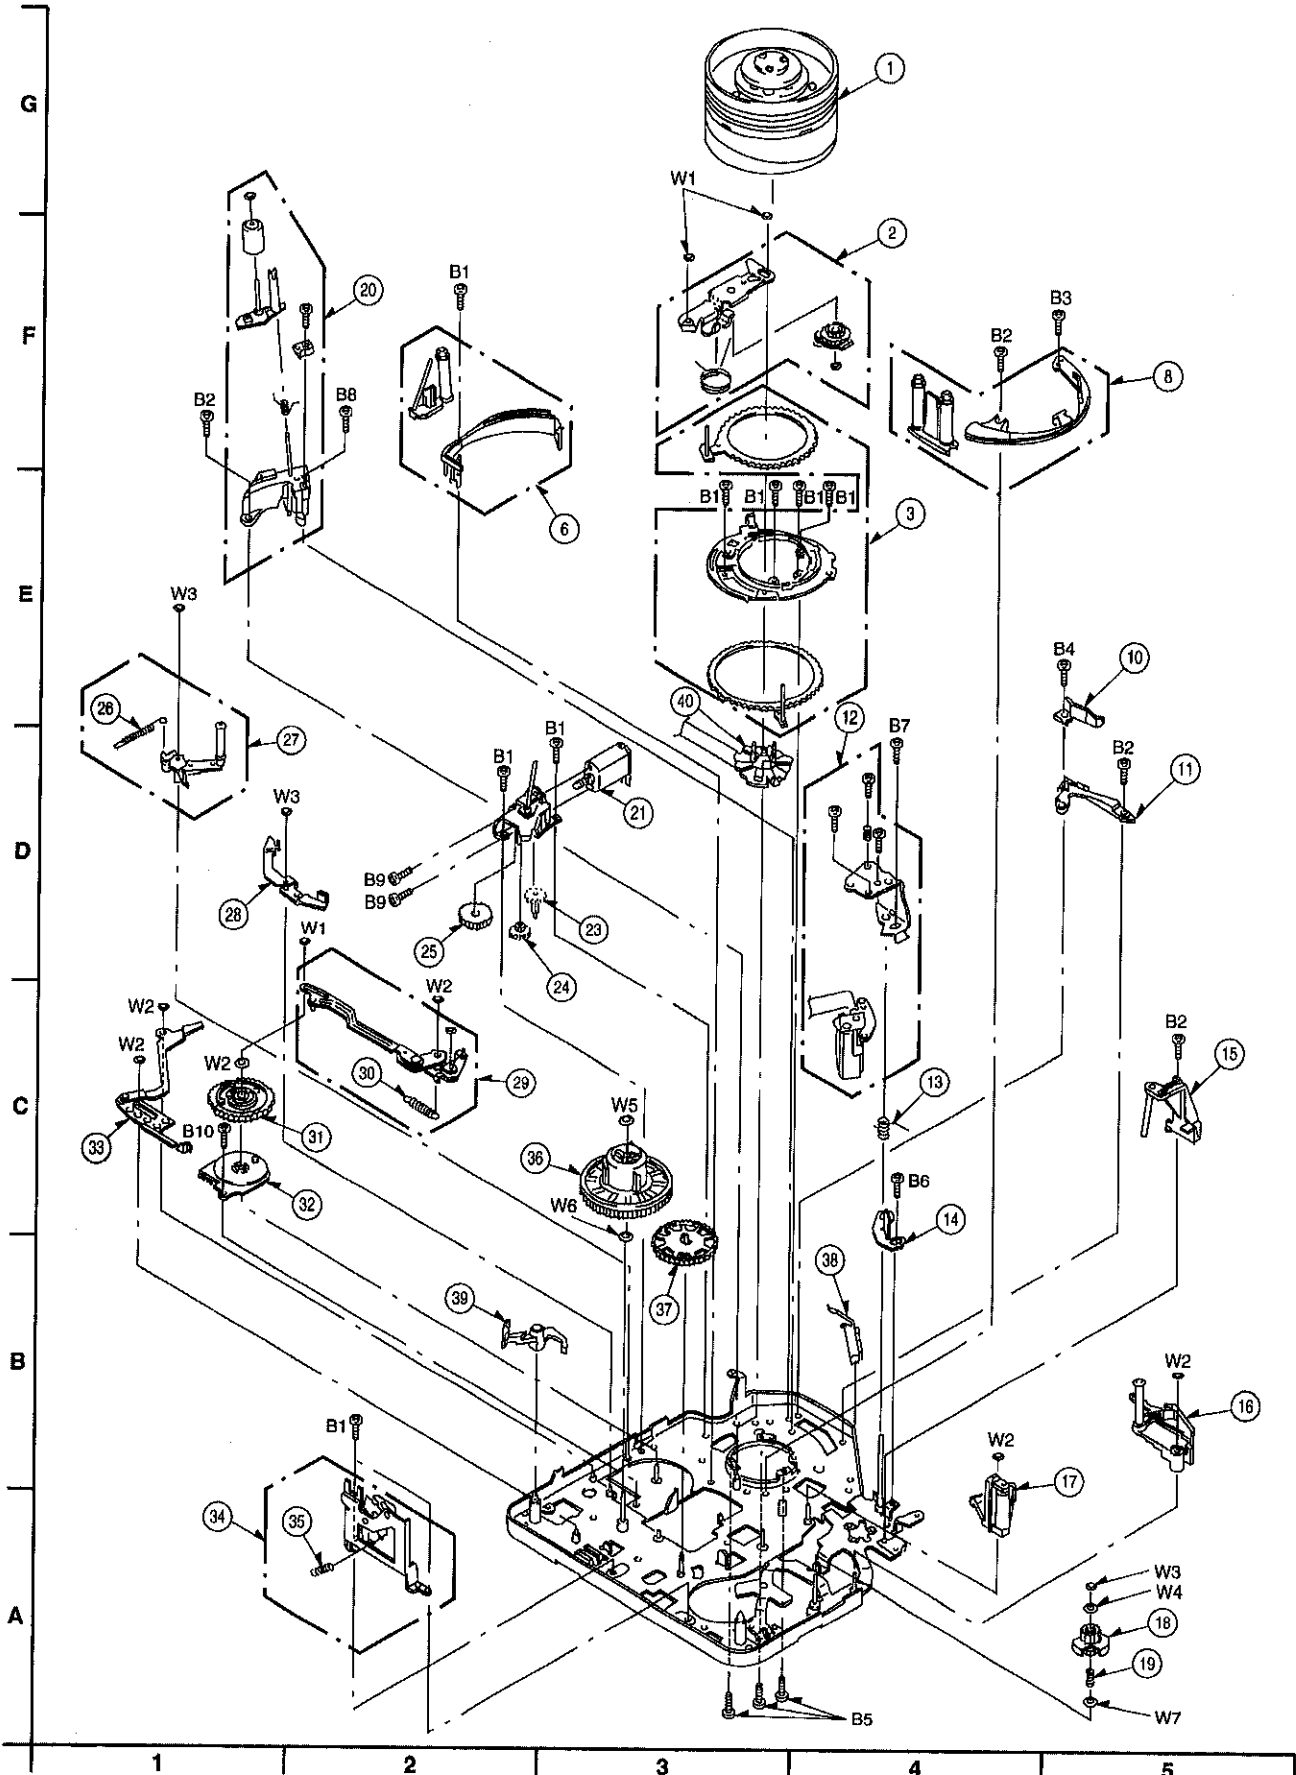








# 11.5. VTR MECHANISM SECTION (3)

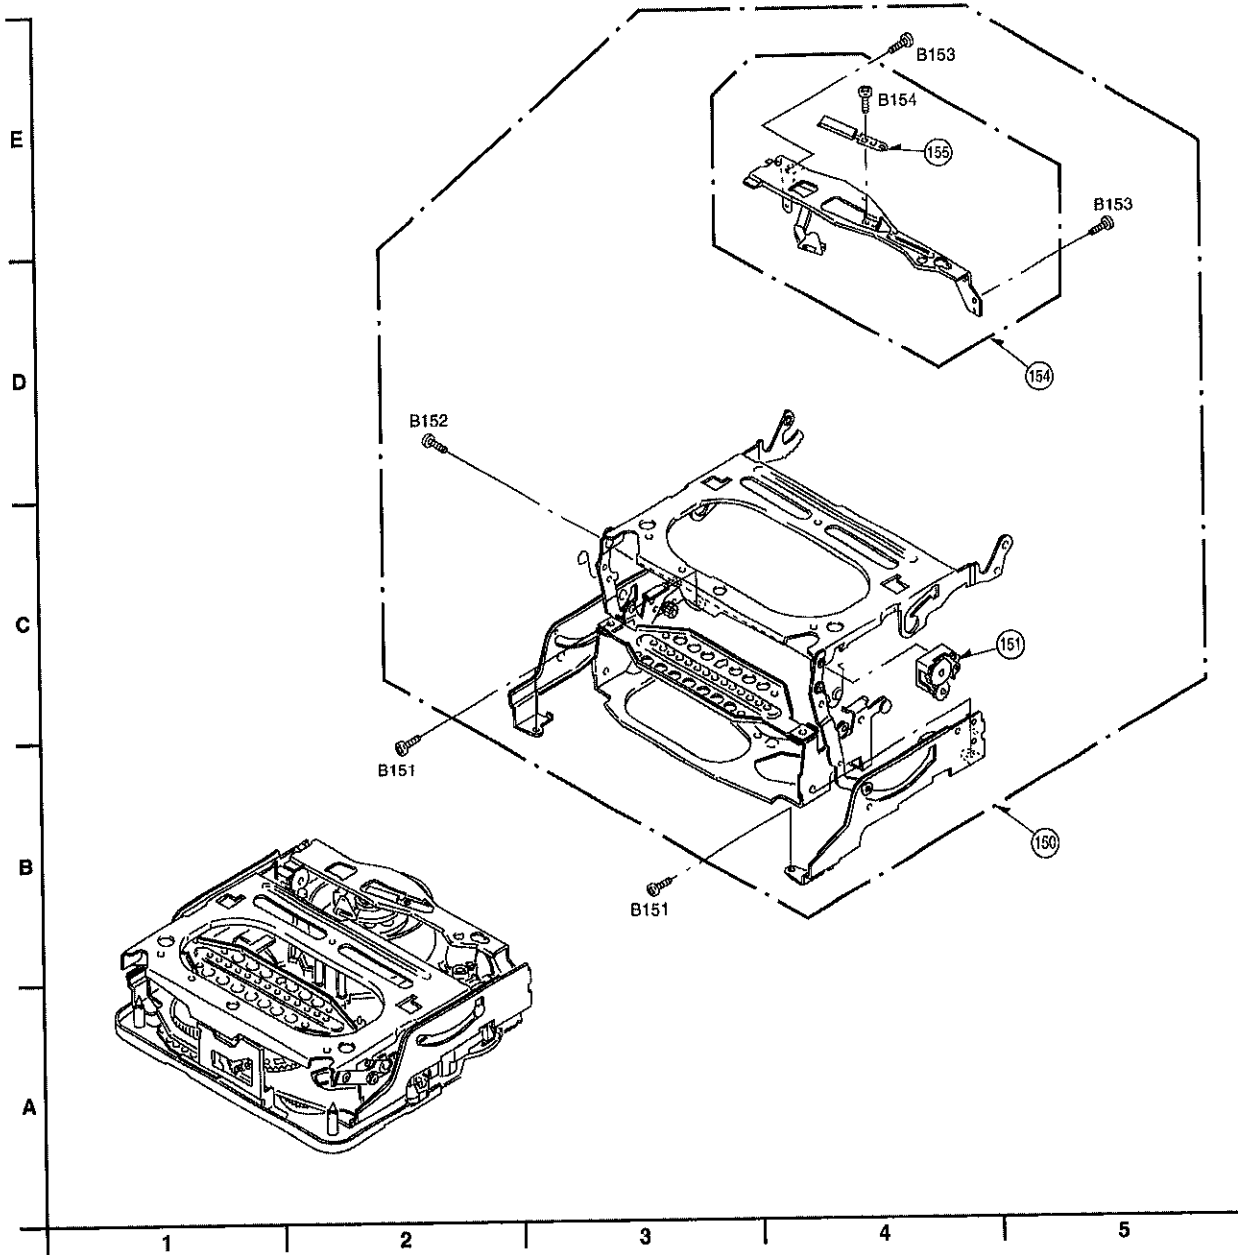


# 11.6. VTR MECHANISM SECTION (3) PARTS LIST

Note: 1. \*Be sure to make your orders of replacement parts according to this list.  
 2. IMPORTANT SAFETY NOTICE  
 Components identified with the mark Δ have the special characteristics for safety. When replacing any of these components, use only the same type.

| Ref.No. | Part No.  | Part Name & Description | Pcs | Remarks |
|---------|-----------|-------------------------|-----|---------|
| 150     | VXA6562   | GARAGE U.               | 1   |         |
| 151     | VXP1472   | DUMPER U.               | 1   |         |
| 154     | VXL2050   | TAPE GUIDE U.           | 1   |         |
| 155     | VXS0254   | EARTH BRUSH U.          | 1   |         |
| B151    | VHD0838   | SCREW                   | 4   |         |
| B152    | XQN16+AJB | SCREW                   | 1   |         |
| B153    | XQN14+BF2 | SCREW                   | 2   |         |
| B154    | VHD0711   | SCREW                   | 1   |         |
|         |           |                         |     |         |
|         |           |                         |     |         |
|         |           |                         |     |         |
|         |           |                         |     |         |

| Ref.No. | Part No. | Part Name & Description | Pcs | Remarks |
|---------|----------|-------------------------|-----|---------|
|         |          |                         |     |         |
|         |          |                         |     |         |
|         |          |                         |     |         |
|         |          |                         |     |         |
|         |          |                         |     |         |
|         |          |                         |     |         |
|         |          |                         |     |         |
|         |          |                         |     |         |
|         |          |                         |     |         |
|         |          |                         |     |         |
|         |          |                         |     |         |
|         |          |                         |     |         |
|         |          |                         |     |         |
|         |          |                         |     |         |
|         |          |                         |     |         |

# 11.7. CAMERA LENS SECTION

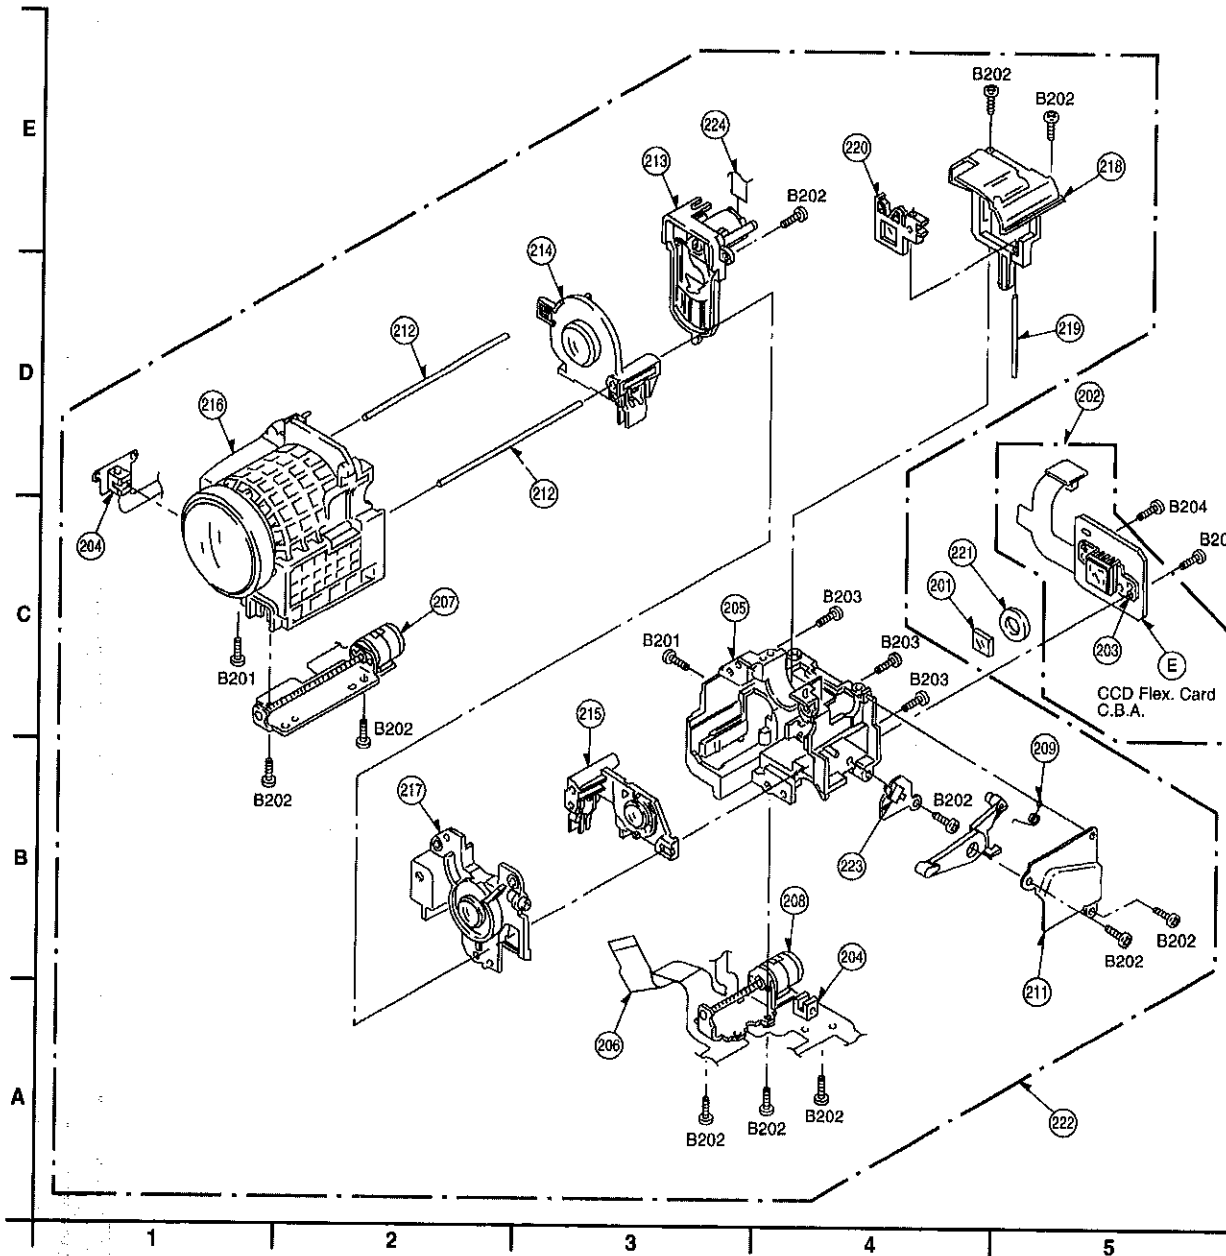


# 11.8. CAMERA LENS SECTION PARTS LIST

Note: 1. Be sure to make your orders of replacement parts according to this list.  
 2. IMPORTANT SAFETY NOTICE  
 Components identified with the mark  $\Delta$  have the special characteristics for safety. When replacing any of these components, use only the same type.

| Ref.No. | Part No. | Part Name & Description | Pcs | Remarks |
|---------|----------|-------------------------|-----|---------|
| 201     | VDL1051  | CRYSTAL FILTER          | 1   |         |
| 202     | VEK8856  | CCD U.                  | 1   |         |
| 203     | VMA9484  | CCD FIXING PLATE        | 1   |         |
| 204     | ON1004-R | PHOTO INTERRUPTER       | 2   |         |
| 205     | VDW0670  | MASTER FLANGE           | 1   |         |
| 206     | VJB20796 | FLAT CARD CABLE         | 1   |         |
| 207     | VEM0712  | ZOOM MOTOR U.           | 1   |         |
| 208     | VEM0713  | FOCUS MOTOR U.          | 1   |         |
| 209     | VMB3382  | F SPRING                | 1   |         |
| 210     | VML3486  | LEVER                   | 1   |         |
| 211     | VMP6183  | PROTECT SHEET           | 1   |         |
| 212     | VMS0714  | GUIDE POLE              | 2   |         |
| 213     | VXL2858  | IRIS U.                 | 1   |         |
| 214     | VXP1883  | 2ND. MOVING FRAME U.    | 1   |         |
| 215     | VXP1888  | 4TH. MOVING FRAME U.    | 1   |         |
| 216     | VXQ0864  | MAIN FRAME U.           | 1   |         |

| Ref.No. | Part No.  | Part Name & Description | Pcs | Remarks |
|---------|-----------|-------------------------|-----|---------|
| 217     | VXQ0885   | 3RD. LENS FRAME U.      | 1   |         |
| 218     | VDW0672   | F FIX FRAME             | 1   |         |
| 219     | VMS6494   | F GUIDE POLE            | 1   |         |
| 220     | VXQ0886   | F FRAME U.              | 1   |         |
| 221     | VMK2942   | CCD CUSHION             | 1   |         |
| 222     | VXW0468   | LENS U.                 | 1   |         |
| 223     | VSP1083   | DETECTION SW.           | 1   |         |
| 224     | HT-1208   | HALL SENSOR             | 1   |         |
| B201    | VHD0852   | SCREW                   | 2   |         |
| B202    | XQN16+CJ5 | SCREW                   | 11  |         |
| B203    | XQN16+CJ8 | SCREW                   | 3   |         |
| B204    | XQN16+CJ6 | SCREW                   | 2   |         |

# 11.9. FRAME & CASING SECTION (1)

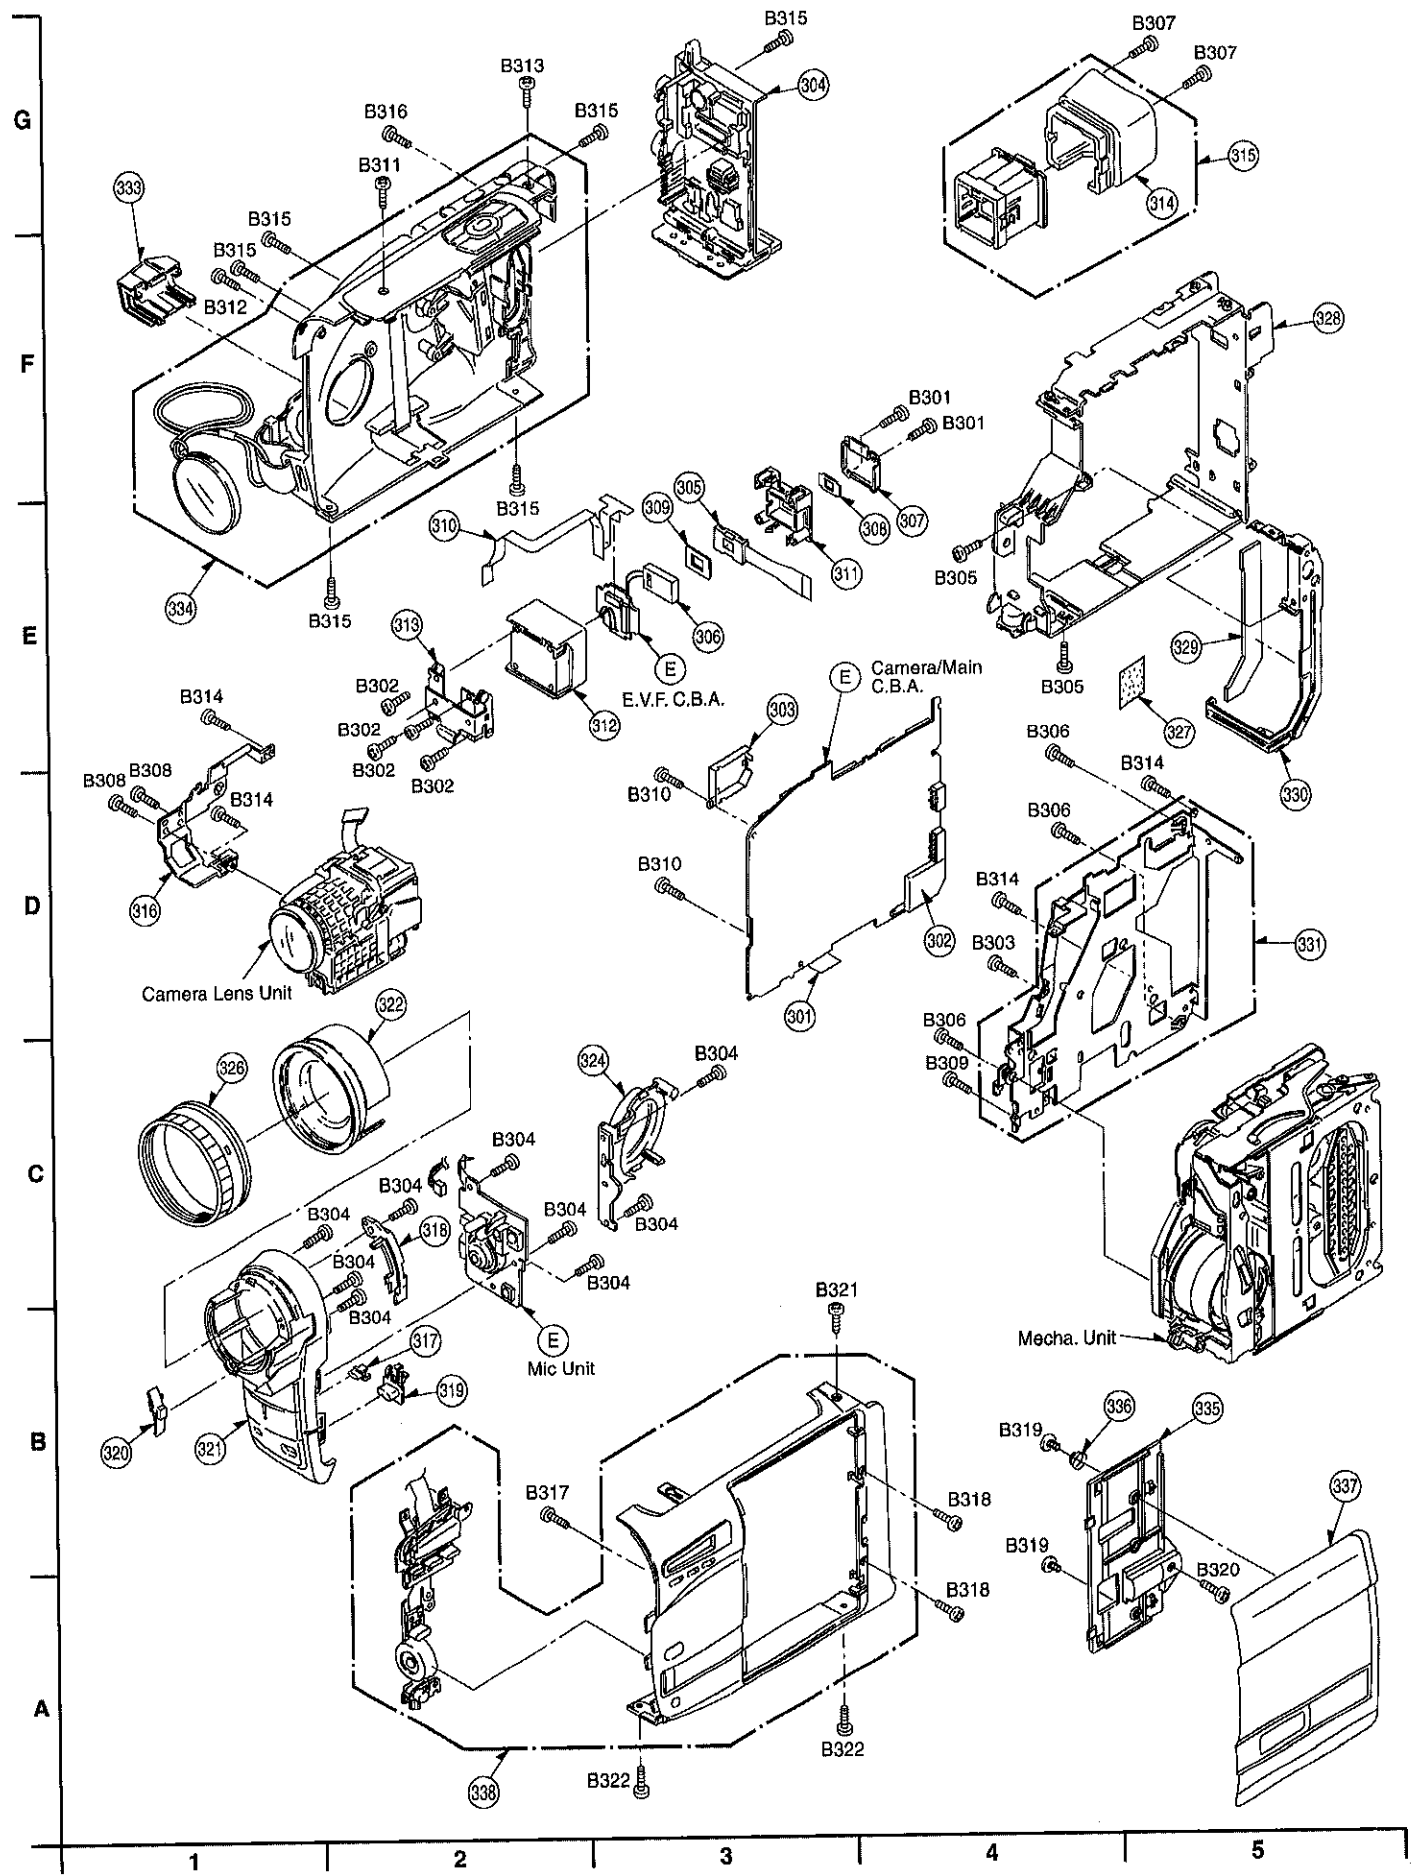


# 11.10. FRAME & CASING SECTION (1) PARTS LIST

Note: 1. \*Be sure to make your orders of replacement parts according to this list.  
 2. IMPORTANT SAFETY NOTICE  
 Components identified with the mark Δ have the special characteristics for safety. When replacing any of these components, use only the same type.

| Ref. No. | Part No.    | Part Name & Description   | Pcs | Remarks        |
|----------|-------------|---------------------------|-----|----------------|
| 301      | VSC4600     | H. A. SHIELD CASE         | 1   |                |
| 302      | VSC4959     | POWER SHIELD CASE (UPPER) | 1   |                |
| 303      | VSC4958     | POWER SHIELD CASE (LOWER) | 1   |                |
| 304      | VEK8885     | REAR CASE U.              | 1   |                |
| 305      | MCVVQ410    | EVF LCD PANEL             | 1   |                |
| 306      | VEK8887     | BACK LIGHT U.             | 1   |                |
| 307      | VQ05555     | EVF PROTECT PANEL         | 1   |                |
| 308      | VQ05556     | EVF MASK                  | 1   |                |
| 309      | VQ05590     | EVF SHEET                 | 1   |                |
| 310      | VJB000F3    | EVF FLEX.                 | 1   |                |
| 311      | VJF1391     | EVF MOUNT PIECE           | 1   |                |
| 312      | VKM5320     | EVF CASE                  | 1   |                |
| 313      | VXA6588     | EVF HINGE U.              | 1   |                |
| 314      | VMG1272     | EYE CAP                   | 1   |                |
| 315      | VYQ1821     | EYE CAP HOLDER U.         | 1   |                |
| 316      | VMP6107     | LENS FRAME                | 1   |                |
| 317      | VGL0865     | TALLY PANEL LIGHT         | 1   |                |
| 318      | VQ05570     | SELECT KNOB GUIDE         | 1   |                |
| 319      | VQU8350     | FADE BUTTON               | 1   |                |
| 320      | VQU8351     | SELECT KNOB               | 1   |                |
| 321      | VYK9385     | FRONT CASE (1) U.         | 1   |                |
| 322      | VYQ1824     | LENS COVER U.             | 1   |                |
| 324      | VQ05583     | SPEAKER PIECE             | 1   |                |
| 326      | VYQ1871     | LENS HOOD U.              | 1   |                |
| 327      | VQ05736     | MECHA. SENSOR BARRIER     | 1   |                |
| 328      | VGP5167     | MAIN FRAME                | 1   |                |
| 329      | VQ05735     | PROTECT SHEET             | 1   |                |
| 330      | VMP6105     | FRAME REINFORCEMENT PLATE | 1   |                |
| 331      | VYQ1820     | MECHA. EARTH PLATE U.     | 1   |                |
| 333      | VKF3170     | EVR COVER                 | 1   |                |
| 334      | VEK8834     | SIDE CASE (L) U.          | 1   |                |
| 335      | VQU8353     | CASSETTE LOCK BUTTON      | 1   |                |
| 336      | VMB3300     | CASSETTE COIL SPRING      | 1   |                |
| 337      | VYK9283     | CASSETTE COVER (1) U.     | 1   | NV-RZ1EG/B/E   |
| 337      | VYK9451     | CASSETTE COVER (1) U.     | 1   | NV-RZ1EN/ENC/A |
| 337      | VYK9391     | CASSETTE COVER (1) U.     | 1   | NV-RZ2EG/B/EN  |
| 338      | VYK8374     | SIDE CASE (R) (1) UA      | 1   |                |
| B301     | XQN10+BJ4FZ | SCREW                     | 2   |                |
| B302     | XQN2+BJ5FZ  | SCREW                     | 4   |                |
| B303     | VHD1140     | SCREW                     | 1   |                |
| B304     | XQN2+BJ5    | SCREW                     | 9   |                |
| B305     | XQN2+BF3    | SCREW                     | 2   |                |
| B306     | XQN14+C2    | SCREW                     | 3   |                |
| B307     | XQN2+BF4FN  | SCREW                     | 2   |                |
| B308     | XQN2+BJ5    | SCREW                     | 2   |                |
| B309     | XQN2+CF4    | SCREW                     | 1   |                |
| B310     | XQN2+CF5    | SCREW                     | 2   |                |
| B311     | XQN2+CF8FN  | SCREW                     | 1   |                |
| B312     | XQN2+CF8FZ  | SCREW                     | 1   |                |
| B313     | XQN2+CJ4FZ  | SCREW                     | 1   |                |
| B314     | XQN2+CJ5    | SCREW                     | 4   |                |
| B315     | XQN2+CJ6FZ  | SCREW                     | 6   |                |
| B316     | XQN2+CJ8FZ  | SCREW                     | 1   |                |
| B317     | XQN2+BF3    | SCREW                     | 1   |                |
| B318     | XQN2+CJ35FZ | SCREW                     | 2   |                |
| B319     | VHD0794     | SCREW                     | 2   |                |
| B320     | XQN2+CF11FZ | SCREW                     | 1   |                |
| B321     | XQN2+CJ4FZ  | SCREW                     | 1   |                |
| B322     | XQN2+CJ6FZ  | SCREW                     | 2   |                |

# 11.11. PACKING PARTS & ACCESSORIES SECTION

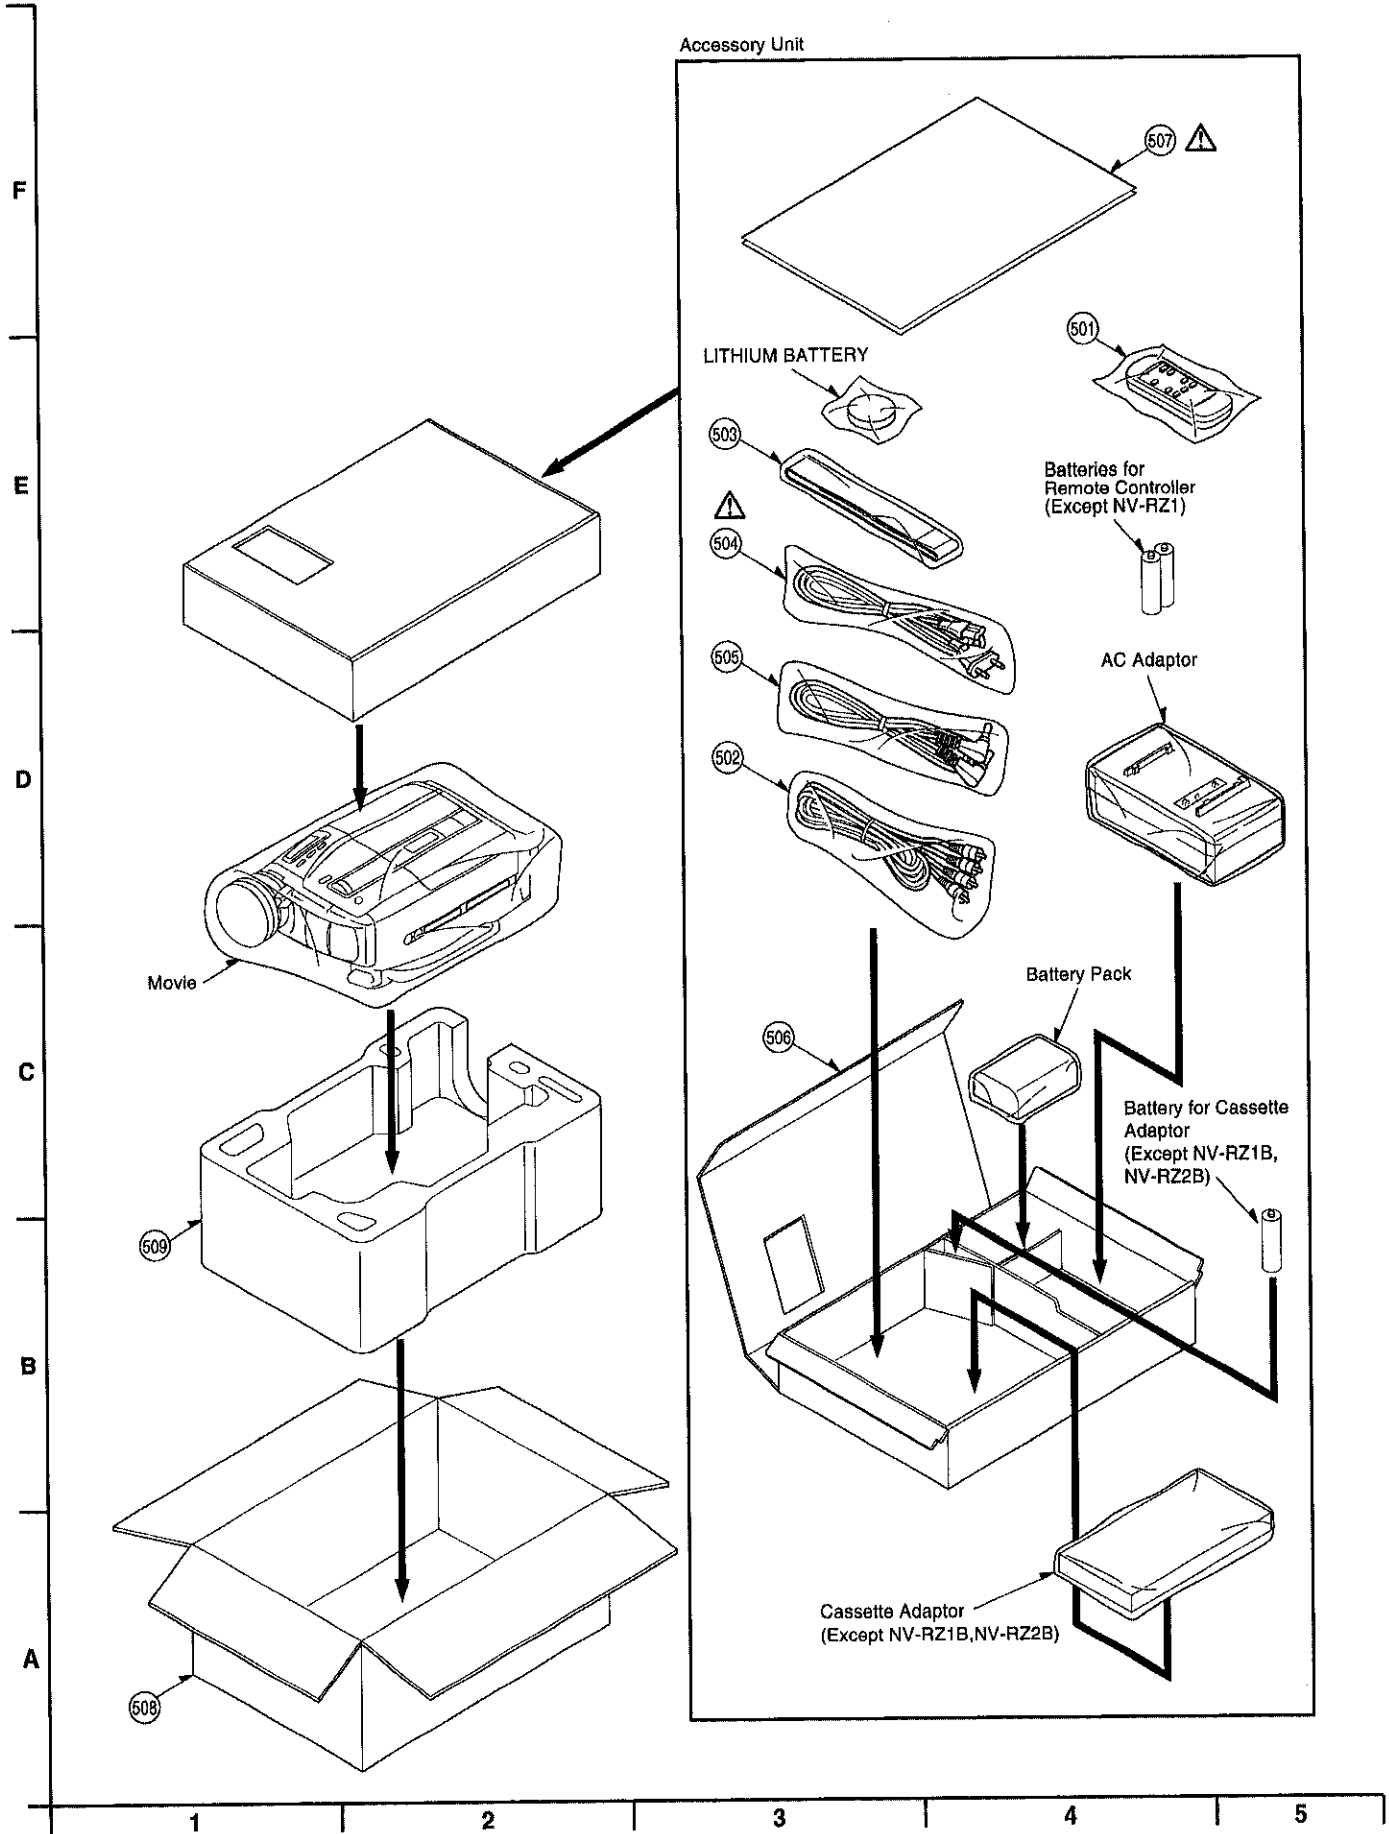

# 11.12. PACKING PARTS & ACCESSORIES SECTION PARTS LIST

Note: 1. \*Be sure to make your orders of replacement parts according to this list.  
 2. IMPORTANT SAFETY NOTICE  
 Components identified with the mark Δ have the special characteristics for safety. When replacing any of these components, use only the same type.

| Ref.No. | Part No.  | Part Name & Description   | Pcs | Remarks                            |
|---------|-----------|---|-----|------------------------------------|
| 501     | EUR848570 | REMOTE CONTROLLER   | 1   | NV-RZ2EG/B/EN                      |
| 502     | VFA0288   | AV CORD   | 1   | NV-RZ1B/EN/ENC/A<br>NV-RZ2B/EN     |
| 503     | VFC3289   | SHOULDER STRAP  | 1   |                                    |
| Δ 504   | VJA0884   | AC CORD   | 1   | NV-RZ1EG/E/EN/ENC<br>NV-RZ2EG/EN   |
| Δ 504   | VJA0840   | AC CORD   | 1   | NV-RZ1B<br>NV-RZ2B                 |
| Δ 504   | VJA0754   | AC CORD   | 1   | NV-RZ1A                            |
| 505     | VJA1128   | DC CORD   | 1   |                                    |
| 506     | VPN5108   | ACCESSORIES BOX   | 1   | NV-RZ1EG/E/EN/ENC/A<br>NV-RZ2EG/EN |
| 508     | VPN5178   | ACCESSORIES BOX   | 1   | NV-RZ1B<br>NV-RZ2B                 |
| Δ 507   | VQT8484   | OPERATING INSTRUCTIONS<br>(GERMAN/FRENCH/DUTCH/<br>DANISH)      | 1   | NV-RZ1EG                           |
| Δ 507   | VQT8485   | OPERATING INSTRUCTIONS<br>(ITALIAN/ENGLISH/SPANISH/<br>SWEDISH) | 1   | NV-RZ1E<br>NV-RZ2EG                |
| Δ 507   | VQT8472   | OPERATING INSTRUCTIONS<br>(ENGLISH)                             | 1   | NV-RZ1B<br>NV-RZ2B                 |
| Δ 507   | VQT8486   | OPERATING INSTRUCTIONS<br>(CHINESE/ENGLISH/RUSSIAN/<br>ARABIC)  | 1   | NV-RZ1EN/ENC<br>NV-RZ2EN           |
| Δ 507   | VQT8700   | OPERATING INSTRUCTIONS<br>(ENGLISH)                             | 1   | NV-RZ1A                            |
| 508     | VP80085   | PACKING CASE  | 1   | NV-RZ1EG                           |
| 508     | VP80087   | PACKING CASE  | 1   | NV-RZ1B                            |
| 508     | VP80088   | PACKING CASE  | 1   | NV-RZ1E                            |
| 508     | VP80088   | PACKING CASE  | 1   | NV-RZ1EN/A                         |
| 508     | VP80070   | PACKING CASE  | 1   | NV-RZ1ENC                          |
| 508     | VP80075   | PACKING CASE  | 1   | NV-RZ2EG                           |
| 508     | VP80076   | PACKING CASE  | 1   | NV-RZ2B                            |
| 508     | VP80077   | PACKING CASE  | 1   | NV-RZ2EN                           |
| 508     | VPN5339   | CUSHION   | 1   |                                    |

# 12 ELECTRICAL REPLACEMENT PARTS LIST

Note: 1. Be sure to make your orders of replacement parts according to this list.  
 2. IMPORTANT SAFETY NOTICE: Components identified with the mark  $\Delta$  have the special characteristics for safety. When replacing any of these components, use only the same type.  
 3. Unless otherwise specified, All resistors are in OHMS, K=1,000 OHMS. All capacitors are in MICROFARADS (uf), P=uuF.  
 4. The P.C. Board units marked with "■" show below the main assembled parts.  
 5. The marking (RTL) indicates the retention time is limited for this item.  
 After the discontinuation of this assembly in production, it will no longer be available.

| Ref. No. | Part No.     | Part Name & Description    | Pcs | Remarks               |
|----------|--------------|----------------------------|-----|-----------------------|
|          | ■ VEP23504B  | MAIN C. B. A.              | 1   | (RTL)                 |
|          | ■ VEP28271A  | EVF C. B. A.               | 1   | (RTL)                 |
|          | ■ VEK8873    | MIG UNIT                   | 1   | NV-RZ1EG/E/B/A/EN/ENC |
|          | ■ VEK8874    | MIG UNIT                   | 1   | NV-RZ2EG/B/EN         |
|          | ■ VEP22285A  | GCD FLEX. CARD C. B. A.    | 1   | (RTL)                 |
|          | ■ VEK8802    | LENS FLEX. CARD C. B. A.   | 1   | (RTL)                 |
|          | ■ VEP23504B  | MAIN C. B. A.              |     | (RTL)                 |
| C305     | ECUX1H120JCV | C. CAPACITOR CH 50V 12P    | 1   |                       |
| C308     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |                       |
| C307     | VCEV1ARV101V | E. CAPACITOR CH 10V 100U   | 1   |                       |
| C310-12  | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 3   |                       |
| C313     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |                       |
| C314     | ECST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |                       |
| C317, 18 | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 2   |                       |
| C319     | ECUX1H153KBV | C. CAPACITOR CH 50V 0.015U | 1   |                       |
| C320, 21 | ECST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 2   |                       |
| C322     | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 1   |                       |
| C325     | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 1   |                       |
| C328     | ECUX1H220JCV | C. CAPACITOR CH 50V 22P    | 1   |                       |
| C328     | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 1   |                       |
| C401     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |                       |
| C402     | ECST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |                       |
| C403     | ECUX1H330JCV | C. CAPACITOR CH 50V 33P    | 1   |                       |
| C404, 05 | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 2   |                       |
| C408     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |                       |
| C413     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |                       |
| C414     | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |                       |
| C415     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |                       |
| C416     | ECST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |                       |
| C417     | ECUX1H152KBV | C. CAPACITOR CH 50V 1500P  | 1   |                       |
| C418     | ECST1AY225Z  | T. CAPACITOR CH 10V 2.2U   | 1   |                       |
| C420     | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |                       |
| C422-24  | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 3   |                       |
| C425     | ECUX1H120JCV | C. CAPACITOR CH 50V 12P    | 1   |                       |
| C427     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |                       |
| C428     | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 1   |                       |
| C429     | ECUX1H472KBV | C. CAPACITOR CH 50V 4700P  | 1   |                       |
| C430, 31 | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 2   |                       |
| C432     | ECUX1H150JCV | C. CAPACITOR CH 50V 15P    | 1   |                       |
| C433     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |                       |
| C434     | ECST1AY225Z  | T. CAPACITOR CH 10V 2.2U   | 1   |                       |
| C435     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |                       |
| C436     | ECUX1H220JCV | C. CAPACITOR CH 50V 22P    | 1   |                       |
| C437     | ECUX1H470JCV | C. CAPACITOR CH 50V 47P    | 1   |                       |
| C438, 39 | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 2   |                       |
| C440     | ECUX1H220JCV | C. CAPACITOR CH 50V 22P    | 1   |                       |
| C483     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |                       |
| C485     | VCEVOJHY470R | E. CAPACITOR CH 6.3V 47U   | 1   |                       |
| C488     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |                       |
| C701     | ECUX1H101JCV | C. CAPACITOR CH 50V 100P   | 1   |                       |
| C702     | ECUM1C224KBN | C. CAPACITOR CH 18V 0.22U  | 1   |                       |
| C703, 04 | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 2   |                       |
| C705     | ECST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |                       |
| C706-09  | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 4   |                       |
| C711     | VCEV1CRV470V | E. CAPACITOR CH 18V 47U    | 1   |                       |
| C712     | ECST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |                       |

| Ref. No.  | Part No.     | Part Name & Description    | Pcs | Remarks |
|-----------|--------------|----------------------------|-----|---------|
| C713      | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 1   |         |
| C715      | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C718      | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |         |
| C721      | ECUX1H682KBV | C. CAPACITOR CH 50V 6800P  | 1   |         |
| C1001     | ECUM1A225KBM | C. CAPACITOR CH 10V 2.2U   | 1   |         |
| C1003     | ECUM1A225KBM | C. CAPACITOR CH 10V 2.2U   | 1   |         |
| C1004     | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |         |
| C1005     | ECUM1C105KBN | C. CAPACITOR CH 10V 1U     | 1   |         |
| C1006     | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 1   |         |
| C1008     | ECUM1A225KBM | C. CAPACITOR CH 10V 2.2U   | 1   |         |
| C1009     | ECUX1H152KBV | C. CAPACITOR CH 50V 1500P  | 1   |         |
| C1010     | ECUM1C105KBN | C. CAPACITOR CH 10V 1U     | 1   |         |
| C1012     | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |         |
| C1014     | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |         |
| C1017     | ECUM1E105KBM | C. CAPACITOR CH 25V 1U     | 1   |         |
| C1018, 20 | ECUM1E334KBM | C. CAPACITOR CH 25V 0.33U  | 2   |         |
| C1022     | ECUM1E104KBN | C. CAPACITOR CH 25V 0.1U   | 1   |         |
| C1024     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |         |
| C1025     | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 1   |         |
| C1026     | VCEV1CRV100R | E. CAPACITOR CH 18V 10U    | 1   |         |
| C1027     | ECUX1H101JCV | C. CAPACITOR CH 50V 100P   | 1   |         |
| C1028     | VCEV1HRV47R  | E. CAPACITOR CH 18V 47U    | 1   |         |
| C1030     | ECUX1H472KBV | C. CAPACITOR CH 50V 4700P  | 1   |         |
| C1032-35  | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 4   |         |
| C1036     | ECUX1H471JCV | C. CAPACITOR CH 50V 470P   | 1   |         |
| C1037     | ECUX1C333KBV | C. CAPACITOR CH 18V 0.033U | 1   |         |
| C1041     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C1046     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C1051     | ECUM1C334KBN | C. CAPACITOR CH 18V 0.33U  | 1   |         |
| C1055     | ECUM1C105KBN | C. CAPACITOR CH 10V 1U     | 1   |         |
| C1057     | ECUM1C105KBN | C. CAPACITOR CH 10V 1U     | 1   |         |
| C1083, 64 | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 2   |         |
| C1085, 88 | ECUM1C105ZFN | C. CAPACITOR CH 18V 1U     | 2   |         |
| C1071     | ECUM1C105KBN | C. CAPACITOR CH 18V 1U     | 1   |         |
| C1080, 81 | ECUX1C473KBV | C. CAPACITOR CH 18V 0.047U | 2   |         |
| C1802     | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 1   |         |
| C1803     | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |         |
| C1704     | VCEV1CHY101V | E. CAPACITOR CH 18V 100U   | 1   |         |
| C2001     | ECST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         |
| C2002, 03 | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 2   |         |
| C2004     | ECUX1H152KBV | C. CAPACITOR CH 50V 1500P  | 1   |         |
| C2005-08  | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 4   |         |
| C2009     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| Q2010-15  | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 6   |         |
| Q2016     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |         |
| Q2017     | ECST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         |
| Q2018     | ECUX1H332KBV | C. CAPACITOR CH 50V 3300P  | 1   |         |
| Q2019     | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 1   |         |
| Q2020-22  | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 3   |         |
| Q2023     | ECUM1E104KBN | C. CAPACITOR CH 25V 0.1U   | 1   |         |
| Q2024     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |         |
| Q2032     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |         |
| Q2034-36  | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 3   |         |
| Q2037     | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 1   |         |
| C3001     | ECUX1H880JCV | C. CAPACITOR CH 50V 88P    | 1   |         |
| C3002     | ECUX1H220JCV | C. CAPACITOR CH 50V 22P    | 1   |         |
| C3007     | ECUX1H471JCV | C. CAPACITOR CH 50V 470P   | 1   |         |
| C3301     | ECUX1H101JCV | C. CAPACITOR CH 50V 100P   | 1   |         |
| C3302     | ECUX1H681JCV | C. CAPACITOR CH 50V 680P   | 1   |         |
| C3303     | ECUX1H270JCV | C. CAPACITOR CH 50V 27P    | 1   |         |
| C3304     | ECUX1H220JCV | C. CAPACITOR CH 50V 22P    | 1   |         |
| C3305     | ECUX1H680JCV | C. CAPACITOR CH 50V 68P    | 1   |         |
| C3306     | ECUX1H100CCV | C. CAPACITOR CH 50V 10P    | 1   |         |
| C3307     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C3308     | ECST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         |
| C3309     | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 1   |         |
| C3310     | ECUX1H180JCV | C. CAPACITOR CH 50V 18P    | 1   |         |
| C3311     | ECUX1H820JCV | C. CAPACITOR CH 50V 82P    | 1   |         |
| C3313     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C3315     | ECUM1C474KBN | C. CAPACITOR CH 18V 0.47U  | 1   |         |
| C3316     | ECUX1H151JCV | C. CAPACITOR CH 50V 150P   | 1   |         |
| C3317     | ECST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         |
| C3318     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |         |
| C3319     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C3320     | ECUM1C474KBN | C. CAPACITOR CH 18V 0.47U  | 1   |         |



| Ref. No.  | Part No.     | Part Name & Description    | Pcs | Remarks | Ref. No.  | Part No.     | Part Name & Description    | Pcs | Remarks |
|-----------|--------------|----------------------------|-----|---------|-----------|--------------|----------------------------|-----|---------|
| C3321     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         | C4803     | ECUX1E223KBV | C. CAPACITOR CH 25V 0.022U | 1   |         |
| C3322     | EGST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         | C4804     | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |         |
| C3323     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         | C4805, 08 | ECUX1E223KBV | C. CAPACITOR CH 25V 0.022U | 2   |         |
| C3324, 25 | EGST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 2   |         | C4807     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C3326     | ECUM1A475MBM | C. CAPACITOR CH 10V 4.7U   | 1   |         | C4814     | VCEVOJHY470R | E. CAPACITOR CH 6.3V 47U   | 1   |         |
| C3327     | ECUX1E223KBV | C. CAPACITOR CH 25V 0.022U | 1   |         | C5001-04  | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 4   |         |
| C3328     | ECUX1C104KBV | C. CAPACITOR CH 16V 0.1U   | 1   |         | C5005-08  | ECUX1H270JCV | C. CAPACITOR CH 50V 27P    | 4   |         |
| C3329     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         | C5009, 10 | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 2   |         |
| C3330, 31 | ECUX1C104KBV | C. CAPACITOR CH 16V 0.1U   | 2   |         | C5011     | ECUX1C473KBV | C. CAPACITOR CH 16V 0.047U | 1   |         |
| C3332     | ECUX1E223KBV | C. CAPACITOR CH 25V 0.022U | 1   |         | C5012, 13 | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 2   |         |
| C3333     | ECUX1C104KBV | C. CAPACITOR CH 16V 0.1U   | 1   |         | C5014     | EGST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         |
| C3334     | EGST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         | C5015     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C3335, 36 | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 2   |         | C5018     | EGST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         |
| C3337, 38 | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 2   |         | C5019     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |         |
| C3339     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         | C5020, 21 | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 2   |         |
| C3341     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         | C5022     | ECUX1C104KBV | C. CAPACITOR CH 16V 0.1U   | 1   |         |
| C3342     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |         | C5023     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C3343, 44 | ECUX1C104KBV | C. CAPACITOR CH 16V 0.1U   | 2   |         | C5041     | ECUX1H101JCV | C. CAPACITOR CH 50V 100P   | 1   |         |
| C3345     | EGST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         | C8001     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C3346, 47 | ECUX1C104KBV | C. CAPACITOR CH 16V 0.1U   | 2   |         | C8002     | ECUX1C104KBV | C. CAPACITOR CH 16V 0.1U   | 1   |         |
| C3348, 49 | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 2   |         | C8004-07  | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 4   |         |
| C3350     | ECUX1H472KBV | C. CAPACITOR CH 50V 4700P  | 1   |         | C8009     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |         |
| C3351     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         | C8010     | VCEV1ARV101V | E. CAPACITOR CH 10V 100U   | 1   |         |
| C3352     | EGST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         | C8011     | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |         |
| C3353     | ECUX1H221JCV | C. CAPACITOR CH 50V 220P   | 1   |         | C8012     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C3354     | ECUX1H821JCV | C. CAPACITOR CH 50V 820P   | 1   |         | C8013     | ECUX1H152KBV | C. CAPACITOR CH 50V 1500P  | 1   |         |
| C3355     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         | C8014     | VCEV1CRV470V | E. CAPACITOR CH 16V 47U    | 1   |         |
| C3356     | ECUM1C474KBN | C. CAPACITOR CH 16V 0.47U  | 1   |         | C8015, 16 | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 2   |         |
| C3357     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         | C8017     | ECUX1H101JCV | C. CAPACITOR CH 50V 100P   | 1   |         |
| C3358     | ECUX1C104KBV | C. CAPACITOR CH 16V 0.1U   | 1   |         | C8018     | ECUX1H152KBV | C. CAPACITOR CH 50V 1500P  | 1   |         |
| C3361, 82 | ECUX1C104KBV | C. CAPACITOR CH 16V 0.1U   | 2   |         | C8019     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |         |
| C3363     | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |         | C8020, 21 | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 2   |         |
| C3370     | EGST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         | C8022     | ECUX1C104KBV | C. CAPACITOR CH 16V 0.1U   | 1   |         |
| C3380     | ECUX1H390JCV | C. CAPACITOR CH 50V 39P    | 1   |         | C8025     | ECUX1C104KBV | C. CAPACITOR CH 16V 0.1U   | 1   |         |
| C3505     | EGST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         | C8026     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C3511     | EGST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         | C8027     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |         |
| C3512     | VCEVOJHY470R | E. CAPACITOR CH 6.3V 47U   | 1   |         | C8028     | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |         |
| C3513     | VCEVOJRV220R | E. CAPACITOR CH 6.3V 22U   | 1   |         | C8029     | ECUX1C104KBV | C. CAPACITOR CH 16V 0.1U   | 1   |         |
| C3517     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         | C8031     | ECUX1C104KBV | C. CAPACITOR CH 16V 0.1U   | 1   |         |
| C3552     | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |         | C8032, 33 | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 2   |         |
| C3662     | ECUX1C104KBV | C. CAPACITOR CH 16V 0.1U   | 1   |         | C8038     | VCEVOJHY470R | E. CAPACITOR CH 6.3V 47U   | 1   |         |
| C4001, 02 | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 2   |         | C8039     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C4003     | EGST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         | C8040, 41 | ECUX1H150JCV | C. CAPACITOR CH 50V 15P    | 2   |         |
| C4004     | ECUX1H472KBV | C. CAPACITOR CH 50V 4700P  | 1   |         | C8042     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |         |
| C4006, 07 | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 2   |         | C8044, 45 | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 2   |         |
| C4008     | EGST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         | C8047     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C4009     | ECUX1H882KBV | C. CAPACITOR CH 50V 8800P  | 1   |         | C8051     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |
| C4010     | ECUX1H472KBV | C. CAPACITOR CH 50V 4700P  | 1   |         | C8053, 54 | VCEVOJHY470R | E. CAPACITOR CH 6.3V 47U   | 2   |         |
| C4012     | EGST0JX228Z  | T. CAPACITOR CH 6.3V 22U   | 1   |         | C8056     | ECUX1H152KBV | C. CAPACITOR CH 50V 1500P  | 1   |         |
| C4013     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |         | C8057, 58 | ECUX1H222KBV | C. CAPACITOR CH 50V 2200P  | 2   |         |
| C4014     | ECUX1H153KBV | C. CAPACITOR CH 50V 0.015U | 1   |         |           |              |                            |     |         |
| C4015     | ECUX1H682KBV | C. CAPACITOR CH 50V 6800P  | 1   |         | D301      | MA111        | DIODE                      | 1   |         |
| C4016     | ECUM2A472JCM | C. CAPACITOR CH 100V 4700P | 1   |         | D401      | MA111        | DIODE                      | 1   |         |
| C4017     | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |         | D1002, 03 | MA111        | DIODE                      | 2   |         |
| C4018     | ECUX1H122KBV | C. CAPACITOR CH 50V 1200P  | 1   |         | D1004     | MA132WK      | DIODE                      | 1   |         |
| C4019     | ECUX1H561JCV | C. CAPACITOR CH 50V 560P   | 1   |         | D1009     | 02D222Y      | DIODE                      | 1   |         |
| C4020     | ECUX1H153KBV | C. CAPACITOR CH 50V 0.015U | 1   |         | D1015     | EC10Q503L12  | DIODE                      | 1   |         |
| C4021     | EGST1CY335Z  | T. CAPACITOR CH 16V 3.3U   | 1   |         | D1020     | MA111        | DIODE                      | 1   |         |
| C4022     | VCEVOJHY470R | E. CAPACITOR CH 6.3V 47U   | 1   |         | D1802     | 02D218Y      | DIODE                      | 1   |         |
| C4023     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |         | D1804     | 02D218Y      | DIODE                      | 1   |         |
| C4024     | VCEVOJHY470R | E. CAPACITOR CH 6.3V 47U   | 1   |         | D1701     | MA111        | DIODE                      | 1   |         |
| C4025     | EGST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         | D3303     | MA111        | DIODE                      | 1   |         |
| C4026     | EGST1VY334Z  | T. CAPACITOR CH 35V 0.33U  | 1   |         | D3305     | MA111        | DIODE                      | 1   |         |
| C4027     | ECUX1H332KBV | C. CAPACITOR CH 50V 3300P  | 1   |         | D4001     | 1SS357       | DIODE                      | 1   |         |
| C4032     | ECUM1C224KBN | C. CAPACITOR CH 16V 0.22U  | 1   |         | D8002     | 1SS357       | DIODE                      | 1   |         |
| C4033     | ECUX1H472KBV | C. CAPACITOR CH 50V 4700P  | 1   |         | D8010     | MA132WA      | DIODE                      | 1   |         |
| C4034, 35 | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 2   |         | D8016     | MA133        | DIODE                      | 1   |         |
| C4036     | EGST0QY156Z  | T. CAPACITOR CH 4V 15U     | 1   |         | D8020     | 1SS357       | DIODE                      | 1   |         |
| C4037     | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |         | D8023     | MA72B        | DIODE                      | 1   |         |
| C4038     | ECUX1H220JCV | C. CAPACITOR CH 50V 22P    | 1   |         | D8201     | MA111        | DIODE                      | 1   |         |
| C4039     | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |         |           |              |                            |     |         |
| C4040     | EGST0JY108Z  | T. CAPACITOR CH 6.3V 10U   | 1   |         | FL1801    | VL1378       | FILTER                     | 1   |         |
| C4041     | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |         |           |              |                            |     |         |
| C4101     | VCEVOJHY151V | E. CAPACITOR CH 6.3V 150U  | 1   |         | FP701     | VJS3319B021  | CONNECTOR (FEMALE) 21P     | 1   |         |
| C4801     | ECUX1C823KBV | C. CAPACITOR CH 16V 0.082U | 1   |         |           |              |                            |     |         |

| Ref. No.  | Part No.     | Part Name & Description | Pcs   | Remarks |
|-----------|--------------|-------------------------|-------|---------|
| FP1001    | VJS3931B010  | CONNECTOR (FEMALE)      | 10P   | 1       |
| FP2001    | VJS3931B019  | CONNECTOR (FEMALE)      | 18P   | 1       |
| FP2002    | VJS3913B007P | CONNECTOR (FEMALE)      | 7P    | 1       |
| FP4001    | VJS3931B009  | CONNECTOR (FEMALE)      | 9P    | 1       |
| FP4002    | VJS3931B018  | CONNECTOR (FEMALE)      | 18P   | 1       |
| FP5001    | VJS2959B013  | CONNECTOR (FEMALE)      | 13P   | 1       |
| FP6001    | VJS3931B021  | CONNECTOR (FEMALE)      | 21P   | 1       |
| FP6002    | VJS3930B013  | CONNECTOR (FEMALE)      | 13P   | 1       |
| FP6004    | VJS3930B018  | CONNECTOR (FEMALE)      | 18P   | 1       |
| IC302     | C8209        | IC                      |       | 1       |
| IC315     | MN31121SA    | IC                      |       | 1       |
| IC401     | F712524CPBW  | IC                      |       | 1       |
| IC403     | S817A33ANB   | IC                      |       | 1       |
| IC404     | UPD6467GR504 | IC                      |       | 1       |
| IC405     | TC7SH04FU    | IC                      |       | 1       |
| IC413     | MN7E002B2S1  | IC                      |       | 1       |
| IC416     | S817A30ANB   | IC                      |       | 1       |
| IC701     | UPD18878GS   | IC                      |       | 1       |
| IC708     | NJM2115V     | IC                      |       | 1       |
| IC711     | TA75W01FU    | IC                      |       | 1       |
| IC1001    | BA9706K      | IC                      |       | 1       |
| IC2001    | LB11051W     | IC                      |       | 1       |
| IC3301    | AN3501NFBP   | IC                      |       | 1       |
| IC3302    | TL8850AF     | IC                      |       | 1       |
| IC3502    | TK15407M     | IC                      |       | 1       |
| IC4001    | BA7758FS     | IC                      |       | 1       |
| IC4002    | BA8305FV     | IC                      |       | 1       |
| IC4003    | TA75S393F    | IC                      |       | 1       |
| IC5001    | AN3355FHP    | IC                      |       | 1       |
| IC6002    | RS5C426M     | IC                      |       | 1       |
| IC8003    | MN103004KCT  | IC                      |       | 1       |
| IC8008    | AK6480AM     | IC                      |       | 1       |
| IC8009    | S80825ANNP   | IC                      |       | 1       |
| IC8010    | XC82FP5002PR | IC                      |       | 1       |
| IC8011    | XC82FP3002MR | IC                      |       | 1       |
| L305      | VLQ0910K100  | COIL                    | 10UH  | 1       |
| L401      | VLQ0910K100  | COIL                    | 10UH  | 1       |
| L403      | ELJFA390JB   | CHIP INDUCTOR           | 39UH  | 1       |
| L407      | VLQ0909J2R2  | COIL                    | 2.2UH | 1       |
| L408      | VLQ0909J220  | COIL                    | 22UH  | 1       |
| L701_02   | VLQ0428J100  | COIL                    | 10UH  | 2       |
| L703      | VLQ0318K100  | COIL                    | 10UH  | 1       |
| L1001     | VLQ0902M4R7  | COIL                    | 4.7UH | 1       |
| L1002     | VLQ0827M220  | COIL                    | 22UH  | 1       |
| L1003     | VLQ0902M4R7  | COIL                    | 4.7UH | 1       |
| L1004     | VLQ0319K100  | COIL                    | 10UH  | 1       |
| L1006     | VLQ0318K100  | COIL                    | 10UH  | 1       |
| L1007     | VLQ0827M470  | COIL                    | 47UH  | 1       |
| L1008     | VLQ0319M4R7  | COIL                    | 4.7UH | 1       |
| L1010     | VLQ0318K100  | COIL                    | 10UH  | 1       |
| L1011     | VLQ0318K101  | COIL                    | 100UH | 1       |
| L1014     | VLQ0318K100  | COIL                    | 10UH  | 1       |
| L1015     | ELJPA470KB   | COIL                    | 47UH  | 1       |
| L1061_02  | VLQ0827M330  | COIL                    | 33UH  | 2       |
| L1801     | VLQ0318K100  | COIL                    | 10UH  | 1       |
| L3001     | ELJFA820JB   | CHIP INDUCTOR           | 82UH  | 1       |
| L3005     | ELJFA121JB   | CHIP INDUCTOR           | 120UH | 1       |
| L3302     | ELJFA120JB   | CHIP INDUCTOR           | 12UH  | 1       |
| L3303     | VLQ0909J220  | COIL                    | 22UH  | 1       |
| L3304-07  | VLQ0910K470  | COIL                    | 47UH  | 4       |
| L3308     | ELJFA820JB   | CHIP INDUCTOR           | 82UH  | 1       |
| L3320     | VLQ0909J330  | COIL                    | 33UH  | 1       |
| L3501     | VLQ0910K100  | COIL                    | 10UH  | 1       |
| L4001     | ELJPA470KB   | COIL                    | 47UH  | 1       |
| L4005     | VLQ0319K101  | COIL                    | 100UH | 1       |
| L4006     | VLQ0909J101  | COIL                    | 100UH | 1       |
| L5001-04  | VLQ0910K470  | COIL                    | 47UH  | 4       |
| LB301_02  | VLP0153      | COIL                    |       | 2       |
| LB303     | VLP0175      | COIL                    |       | 1       |
| LB402-04  | VLP0175      | COIL                    |       | 3       |
| LB412     | VLP0175      | COIL                    |       | 1       |
| LB5001-04 | VLP0319A121T | CHIP BEAD               |       | 4       |

| Ref. No.  | Part No.    | Part Name & Description | Pcs | Remarks |
|-----------|-------------|-------------------------|-----|---------|
| LB6002-04 | VLP0153     | COIL                    |     | 3       |
| PP301     | VJP3358A012 | CONNECTOR (MALE)        | 12P | 1       |
| PP3001    | VJP3359D040 | CONNECTOR (MALE)        | 40P | 1       |
| PS1003    | VJS4005B006 | CONNECTOR (FEMALE)      | 6P  | 1       |
| PS3510    | VJS4005B004 | CONNECTOR (FEMALE)      | 4P  | 1       |
| Q301      | 2SC4827     | TRANSISTOR              |     | 1       |
| Q303      | HN1B04FUGRR | TRANSISTOR              |     | 1       |
| Q304      | 2SA1832FY   | TRANSISTOR              |     | 1       |
| Q404      | 2SA1774HR   | TRANSISTOR              |     | 1       |
| Q405      | HN1A01FUJR  | TRANSISTOR              |     | 1       |
| Q704      | 2SC2712GR   | TRANSISTOR              |     | 1       |
| Q780      | 2SD674      | TRANSISTOR              |     | 1       |
| Q781      | 2SA1832FY   | TRANSISTOR              |     | 1       |
| Q1001     | 2SB1073     | TRANSISTOR              |     | 1       |
| Q1002     | 2SC4738FY   | TRANSISTOR              |     | 1       |
| Q1003     | MPL1        | TRANSISTOR              |     | 1       |
| Q1004     | 2SD2210     | TRANSISTOR              |     | 1       |
| Q1006     | 2SA1832FY   | TRANSISTOR              |     | 1       |
| Q1007     | 2SC4944YR   | TRANSISTOR              |     | 1       |
| Q1008     | 2SC4738FY   | TRANSISTOR              |     | 1       |
| Q1010     | 2SA1832FY   | TRANSISTOR              |     | 1       |
| Q1061_02  | MPL1        | TRANSISTOR              |     | 2       |
| Q1702     | 2SC4738FY   | TRANSISTOR              |     | 1       |
| Q2001     | 2SC4738FY   | TRANSISTOR              |     | 1       |
| Q3001     | 2SB1218     | TRANSISTOR              |     | 1       |
| Q3301     | 2SA1774HR   | TRANSISTOR              |     | 1       |
| Q3302     | 2SA1832FY   | TRANSISTOR              |     | 1       |
| Q3303     | 2SC4738FY   | TRANSISTOR              |     | 1       |
| Q3320     | 2SA1832FY   | TRANSISTOR              |     | 1       |
| Q4002     | 2SD802-R    | TRANSISTOR              |     | 1       |
| Q4003     | 2SB1219     | TRANSISTOR              |     | 1       |
| Q4005     | XP4501      | TRANSISTOR-TRANSISTOR   |     | 1       |
| Q4006     | 2SC4617HR   | TRANSISTOR              |     | 1       |
| Q4009     | 2SC4617HR   | TRANSISTOR              |     | 1       |
| Q4801-03  | 2SC4617HR   | TRANSISTOR              |     | 3       |
| Q5001_02  | HN1C03FBR   | TRANSISTOR              |     | 2       |
| Q5003     | 2SA812      | TRANSISTOR              |     | 1       |
| Q6001     | 2SC3285A    | TRANSISTOR              |     | 1       |
| Q6002     | 2SA1832FY   | TRANSISTOR              |     | 1       |
| Q6003_04  | 2SC4738FY   | TRANSISTOR              |     | 2       |
| Q6006     | 2SC4944YR   | TRANSISTOR              |     | 1       |
| QR401     | RN2103F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR402     | RN2107F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR404     | RN1704R     | TRANSISTOR-RESISTOR     |     | 1       |
| QR405     | RN1104F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR701     | RN1102F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR781     | UN2130X     | TRANSISTOR-RESISTOR     |     | 1       |
| QR782     | RN1103F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR1001    | RN2102F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR1002    | UN2130X     | TRANSISTOR-RESISTOR     |     | 1       |
| QR1003    | RN2103F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR1005    | RN1112F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR1061    | RN2111F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR1701    | RN2111F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR2001    | RN1111F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR3002    | RN1103F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR3301    | RN2103F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR3305    | RN1104F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR3306    | RN2103F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR3307    | RN1104F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR3308    | RN2103F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR3309_10 | RN1104F     | TRANSISTOR-RESISTOR     |     | 2       |
| QR3311    | RN2103F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR4001    | RN1103F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR4002    | RN2103F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR4004    | RN2103F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR6001    | RN1111F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR6002    | UN911EJ     | TRANSISTOR-RESISTOR     |     | 1       |
| QR6003_04 | RN1711R     | TRANSISTOR-RESISTOR     |     | 2       |
| QR6005    | RN2103F     | TRANSISTOR-RESISTOR     |     | 1       |
| QR6007    | RN1102F     | TRANSISTOR-RESISTOR     |     | 1       |

| Ref. No. | Part No.    | Part Name & Description   | Pcs | Remarks |
|----------|-------------|---------------------------|-----|---------|
| QR009    | RN113F      | TRANSISTOR-RESISTOR       | 1   |         |
| QR013    | RN211F      | TRANSISTOR-RESISTOR       | 1   |         |
| QR014    | RN111F      | TRANSISTOR-RESISTOR       | 1   |         |
| QR050    | RN1704R     | TRANSISTOR-RESISTOR       | 1   |         |
| QR001    | RN211F      | TRANSISTOR-RESISTOR       | 1   |         |
| R201     | ERJ3GEY0R00 | M. RESISTOR CH 1/16W 0    | 1   |         |
| R210     | ERJ3GEYJ335 | M. RESISTOR CH 1/16W 3.3K | 1   |         |
| R301     | ERJ3RBD022  | M. RESISTOR CH 1/16W 0.2K | 1   |         |
| R302     | ERJ3RBD103  | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R303     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R304     | ERJ3GEYJ271 | M. RESISTOR CH 1/16W 270  | 1   |         |
| R305_06  | ERJ3GEY0R00 | M. RESISTOR CH 1/16W 0    | 2   |         |
| R307     | ERJ3GEYJ101 | M. RESISTOR CH 1/16W 100  | 1   |         |
| R308     | ERJ3GEYJ104 | M. RESISTOR CH 1/16W 100K | 1   |         |
| R309     | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K | 1   |         |
| R312     | ERJ3GEYJ152 | M. RESISTOR CH 1/16W 1.5K | 1   |         |
| R313     | ERJ3GEYJ501 | M. RESISTOR CH 1/16W 500  | 1   |         |
| R315     | ERJ3GEYJ331 | M. RESISTOR CH 1/16W 330  | 1   |         |
| R316-18  | ERJ3GEY0R00 | M. RESISTOR CH 1/16W 0    | 3   |         |
| R403_04  | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 2   |         |
| R406     | ERJ3GEYJ332 | M. RESISTOR CH 1/16W 3.3K | 1   |         |
| R408     | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K  | 1   |         |
| R409     | ERJ3GEYJ123 | M. RESISTOR CH 1/16W 12K  | 1   |         |
| R412     | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K | 1   |         |
| R413     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R414     | ERJ3GEY0R00 | M. RESISTOR CH 1/16W 0    | 1   |         |
| R415     | ERJ3GEYJ471 | M. RESISTOR CH 1/16W 470  | 1   |         |
| R416     | ERJ3RBD103  | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R417     | ERJ3GEYJ272 | M. RESISTOR CH 1/16W 2.7K | 1   |         |
| R418     | ERJ3GEYJ152 | M. RESISTOR CH 1/16W 1.5K | 1   |         |
| R419     | ERJ3RBD911  | M. RESISTOR CH 1/16W 910  | 1   |         |
| R420     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R421     | ERJ3GEYJ105 | M. RESISTOR CH 1/16W 1M   | 1   |         |
| R422     | ERJ3GEYJ821 | M. RESISTOR CH 1/16W 820  | 1   |         |
| R423     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R424     | ERJ3GEYJ124 | M. RESISTOR CH 1/16W 120K | 1   |         |
| R425     | ERJ3RBD683  | M. RESISTOR CH 1/16W 68K  | 1   |         |
| R426     | ERJ3RBD223  | M. RESISTOR CH 1/16W 22K  | 1   |         |
| R427     | ERJ3RBD621  | M. RESISTOR CH 1/16W 620  | 1   |         |
| R428     | ERJ3RBD392  | M. RESISTOR CH 1/16W 3.9K | 1   |         |
| R430     | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K | 1   |         |
| R431     | ERJ3GEY0R00 | M. RESISTOR CH 1/16W 0    | 1   |         |
| R433     | ERJ3GEYJ151 | M. RESISTOR CH 1/16W 150  | 1   |         |
| R434     | ERJ3GEYJ101 | M. RESISTOR CH 1/16W 100  | 1   |         |
| R436     | ERJ3GEYJ152 | M. RESISTOR CH 1/16W 1.5K | 1   |         |
| R437     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R438     | ERJ3GEYJ101 | M. RESISTOR CH 1/16W 100  | 1   |         |
| R440     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R444_45  | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 2   |         |
| R446     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R447     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R450     | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K | 1   |         |
| R451     | ERJ3GEYJ392 | M. RESISTOR CH 1/16W 3.9K | 1   |         |
| R458     | ERJ3GEYJ471 | M. RESISTOR CH 1/16W 470  | 1   |         |
| R459     | ERJ3GEYJ332 | M. RESISTOR CH 1/16W 3.3K | 1   |         |
| R470     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R476     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R477     | ERJ3RBD473  | M. RESISTOR CH 1/16W 47K  | 1   |         |
| R479     | ERJ3GEYJ821 | M. RESISTOR CH 1/16W 820  | 1   |         |
| R480     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R481     | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K | 1   |         |
| R482     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R701_02  | ERJ3GEYJ47  | M. RESISTOR CH 1/16W 4.7  | 2   |         |
| R703     | ERJ3GEYJ104 | M. RESISTOR CH 1/16W 100K | 1   |         |
| R704_05  | ERJ3GEYJ47  | M. RESISTOR CH 1/16W 4.7  | 2   |         |
| R706     | ERJ3GEYJ104 | M. RESISTOR CH 1/16W 100K | 1   |         |
| R707     | ERJ3GEYJ101 | M. RESISTOR CH 1/16W 100  | 1   |         |
| R709     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R712     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R713     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R714     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R716     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R717     | ERJ3GEYJ500 | M. RESISTOR CH 1/16W 50   | 1   |         |
| R718     | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 1   |         |

| Ref. No. | Part No.    | Part Name & Description    | Pcs | Remarks |
|----------|-------------|----------------------------|-----|---------|
| R722     | ERJ3GEYJ152 | M. RESISTOR CH 1/16W 1.5K  | 1   |         |
| R723     | ERJ3RBD221  | M. RESISTOR CH 1/16W 220   | 1   |         |
| R726     | ERJ3GEYJ681 | M. RESISTOR CH 1/16W 680   | 1   |         |
| R727     | ERJ3GEYJ273 | M. RESISTOR CH 1/16W 27K   | 1   |         |
| R728     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K   | 1   |         |
| R729     | ERJ3GEYJ333 | M. RESISTOR CH 1/16W 33K   | 1   |         |
| R730     | ERJ3GEYJ822 | M. RESISTOR CH 1/16W 8.2K  | 1   |         |
| R731     | ERJ3GEYJ683 | M. RESISTOR CH 1/16W 68K   | 1   |         |
| R732     | ERJ3GEYJ273 | M. RESISTOR CH 1/16W 27K   | 1   |         |
| R733     | ERJ3GEYJ564 | M. RESISTOR CH 1/16W 560K  | 1   |         |
| R734_35  | ERJ3GEYJ123 | M. RESISTOR CH 1/16W 12K   | 2   |         |
| R736_37  | ERJ3GEYJ684 | M. RESISTOR CH 1/16W 680K  | 2   |         |
| R738     | ERJ3GEYJ154 | M. RESISTOR CH 1/16W 150K  | 1   |         |
| R740     | ERJ3GEYJ124 | M. RESISTOR CH 1/16W 120K  | 1   |         |
| R743     | ERJ3RBD752  | M. RESISTOR CH 1/16W 7.5K  | 1   |         |
| R745     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K   | 1   |         |
| R761     | ERJ3RBD222  | M. RESISTOR CH 1/16W 2.2K  | 1   |         |
| R780     | ERJ8GEYJ150 | M. RESISTOR CH 1/10W 15    | 1   |         |
| R781     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K    | 1   |         |
| R782     | ERJ3GEYJ122 | M. RESISTOR CH 1/16W 1.2K  | 1   |         |
| R783     | ERJ8GEYJ150 | M. RESISTOR CH 1/10W 15    | 1   |         |
| R784_85  | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K  | 2   |         |
| R1001    | ERJ3RBD922  | M. RESISTOR CH 1/16W 8.2K  | 1   |         |
| R1002    | ERJ3RBD272  | M. RESISTOR CH 1/16W 2.7K  | 1   |         |
| R1004    | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K   | 1   |         |
| R1005    | ERJ3RBD472  | M. RESISTOR CH 1/16W 4.7K  | 1   |         |
| R1006    | ERJ3RBD272  | M. RESISTOR CH 1/16W 2.7K  | 1   |         |
| R1007    | ERJ8GEYJ330 | M. RESISTOR CH 1/16W 33    | 1   |         |
| R1008    | ERJ3RBD163  | M. RESISTOR CH 1/16W 16K   | 1   |         |
| R1009    | ERJ3RBD152  | M. RESISTOR CH 1/16W 1.5K  | 1   |         |
| R1010    | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K   | 1   |         |
| R1012    | ERJ6RHD1872 | M. RESISTOR CH 1/10W 18.7K | 1   |         |
| R1013    | ERJ6RBD473  | M. RESISTOR CH 1/10W 47K   | 1   |         |
| R1014_15 | ERJ6RBD182  | M. RESISTOR CH 1/10W 1.8K  | 2   |         |
| R1016    | ERJ3RBD153  | M. RESISTOR CH 1/16W 15K   | 1   |         |
| R1017    | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K    | 1   |         |
| R1018    | ERJ3GEYJ151 | M. RESISTOR CH 1/16W 150   | 1   |         |
| R1019    | ERJ3GEYJ332 | M. RESISTOR CH 1/16W 3.3K  | 1   |         |
| R1020    | ERJ3GEYJ151 | M. RESISTOR CH 1/16W 150   | 1   |         |
| R1021    | ERJ3GEYJ330 | M. RESISTOR CH 1/16W 33    | 1   |         |
| R1022    | ERJ3GEYJ220 | M. RESISTOR CH 1/16W 22    | 1   |         |
| R1023    | ERJ3GEYJ182 | M. RESISTOR CH 1/16W 1.8K  | 1   |         |
| R1024    | ERJ3GEYJ470 | M. RESISTOR CH 1/16W 47    | 1   |         |
| R1025    | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K    | 1   |         |
| R1026    | ERJ3GEY0R00 | M. RESISTOR CH 1/16W 0     | 1   |         |
| R1029_30 | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K   | 2   |         |
| R1035    | ERJ3GEYJ470 | M. RESISTOR CH 1/16W 47    | 1   |         |
| R1038    | ERJ3RBD101  | M. RESISTOR CH 1/16W 100   | 1   |         |
| R1039    | ERJ3RBD561  | M. RESISTOR CH 1/16W 560   | 1   |         |
| R1040    | ERJ3RBD111  | M. RESISTOR CH 1/16W 110   | 1   |         |
| R1041    | ERJ6RBD683  | M. RESISTOR CH 1/10W 68K   | 1   |         |
| R1042    | ERJ3RBD153  | M. RESISTOR CH 1/16W 15K   | 1   |         |
| R1043    | ERJ3RBD472  | M. RESISTOR CH 1/16W 4.7K  | 1   |         |
| R1044    | ERJ3GEYJ122 | M. RESISTOR CH 1/16W 1.2K  | 1   |         |
| R1052    | ERJ3GEYJ823 | M. RESISTOR CH 1/16W 82K   | 1   |         |
| R1053    | ERJ3RBD101  | M. RESISTOR CH 1/16W 100   | 1   |         |
| R1057    | ERJ3GEYJ182 | M. RESISTOR CH 1/16W 1.8K  | 1   |         |
| R1063    | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K   | 1   |         |
| R1064_65 | ERJ3GEYJ122 | M. RESISTOR CH 1/16W 1.2K  | 2   |         |
| R1066    | ERJ3GEYJ392 | M. RESISTOR CH 1/16W 3.9K  | 1   |         |
| R1067    | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K   | 1   |         |
| R1068    | ERJ3GEYJ392 | M. RESISTOR CH 1/16W 3.9K  | 1   |         |
| R1069    | ERJ3GEYJ104 | M. RESISTOR CH 1/16W 100K  | 1   |         |
| R1071    | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K    | 1   |         |
| R1072    | ERJ3GEYJ104 | M. RESISTOR CH 1/16W 100K  | 1   |         |
| R1073    | ERJ3GEYJ101 | M. RESISTOR CH 1/16W 100   | 1   |         |
| R1085_86 | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K    | 2   |         |
| R1801    | VSF0220D25T | FUSE                       | 1   |         |
| R1802    | ERJ3GEYJ124 | M. RESISTOR CH 1/16W 120K  | 1   |         |
| R1803    | ERJ3GEYJ684 | M. RESISTOR CH 1/16W 680K  | 1   |         |
| R1806_07 | ERJ8GEY0R00 | M. RESISTOR CH 1/16W 0     | 2   |         |
| R1699    | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K    | 1   |         |
| R1704    | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K   | 1   |         |
| R1705    | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K  | 1   |         |
| R1706    | ERJ3GEYJ822 | M. RESISTOR CH 1/16W 8.2K  | 1   |         |

| Ref. No.  | Part No.    | Part Name & Description   | Pcs | Remarks |
|-----------|-------------|---------------------------|-----|---------|
| R1707     | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K | 1   |         |
| R1709     | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K  | 1   |         |
| R1710     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R1822     | ERJ3GEY0R00 | M. RESISTOR CH 1/16W 0    | 1   |         |
| R1835     | ERJ3GEY0R00 | M. RESISTOR CH 1/16W 0    | 1   |         |
| R2001     | ERJ3GEYJ474 | M. RESISTOR CH 1/16W 470K | 1   |         |
| R2002     | ERJ3GEYJ273 | M. RESISTOR CH 1/16W 27K  | 1   |         |
| R2003     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R2004     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R2005     | ERJ3GEYJ224 | M. RESISTOR CH 1/16W 220K | 1   |         |
| R2006     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R2007     | ERJ3GEYJ154 | M. RESISTOR CH 1/16W 150K | 1   |         |
| R2008     | ERJ3GEYJ474 | M. RESISTOR CH 1/16W 470K | 1   |         |
| R2009     | ERJ3GEYJ302 | M. RESISTOR CH 1/16W 3.0K | 1   |         |
| R2010     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R2011     | ERJ8GEYJR33 | M. RESISTOR CH 1/8W 0.33  | 1   |         |
| R2012     | ERJ8RQRJ22  | M. RESISTOR CH 1/8W 0.22  | 1   |         |
| R2013     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R2014     | ERJ3GEYJ273 | M. RESISTOR CH 1/16W 27K  | 1   |         |
| R2015     | ERJ3GEYJ333 | M. RESISTOR CH 1/16W 33K  | 1   |         |
| R2016, 17 | ERJ3GEYJ471 | M. RESISTOR CH 1/16W 470  | 2   |         |
| R2018     | ERJ3GEYJ101 | M. RESISTOR CH 1/16W 100  | 1   |         |
| R2019     | ERJ3GEYJ104 | M. RESISTOR CH 1/16W 100K | 1   |         |
| R2020     | ERJ3GEYJ333 | M. RESISTOR CH 1/16W 33K  | 1   |         |
| R2021     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R2022     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R3001     | ERJ3GEYJ561 | M. RESISTOR CH 1/16W 560  | 1   |         |
| R3002     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R3003     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R3004     | ERJ3GEYJ081 | M. RESISTOR CH 1/16W 80   | 1   |         |
| R3005     | ERJ3GEYJ332 | M. RESISTOR CH 1/16W 3.3K | 1   |         |
| R3017     | ERJ3GEYJ182 | M. RESISTOR CH 1/16W 1.8K | 1   |         |
| R3040     | ERJ3RBD362  | M. RESISTOR CH 1/16W 3.6K | 1   |         |
| R3041     | ERJ3RBD332  | M. RESISTOR CH 1/16W 3.3K | 1   |         |
| R3042     | ERJ3GEYJ182 | M. RESISTOR CH 1/16W 1.8K | 1   |         |
| R3301     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R3302     | ERJ3GEYJ331 | M. RESISTOR CH 1/16W 330  | 1   |         |
| R3303     | ERJ3GEY0R00 | M. RESISTOR CH 1/16W 0    | 1   |         |
| R3306     | ERJ3RBD301  | M. RESISTOR CH 1/16W 300  | 1   |         |
| R3307     | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K  | 1   |         |
| R3308     | ERJ3RBD332  | M. RESISTOR CH 1/16W 3.3K | 1   |         |
| R3309     | ERJ3GEYJ125 | M. RESISTOR CH 1/16W 1.2M | 1   |         |
| R3310     | ERJ3RBD301  | M. RESISTOR CH 1/16W 300  | 1   |         |
| R3311     | ERJ3GEYJ152 | M. RESISTOR CH 1/16W 1.5K | 1   |         |
| R3312     | ERJ3RBD332  | M. RESISTOR CH 1/16W 3.3K | 1   |         |
| R3314     | ERJ3GEYJ221 | M. RESISTOR CH 1/16W 220  | 1   |         |
| R3316     | ERJ3RBD102  | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R3317     | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K  | 1   |         |
| R3318     | ERJ3RBD221  | M. RESISTOR CH 1/16W 220  | 1   |         |
| R3319     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R3320     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R3322     | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 1   |         |
| R3323     | ERJ3GEYJ154 | M. RESISTOR CH 1/16W 150K | 1   |         |
| R3325     | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K  | 1   |         |
| R3326     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R3327     | ERJ3RBD241  | M. RESISTOR CH 1/16W 240  | 1   |         |
| R3328     | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 1   |         |
| R3331     | ERJ3GEYJ821 | M. RESISTOR CH 1/16W 820  | 1   |         |
| R3332     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R3333     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R3334     | ERJ3GEYJ104 | M. RESISTOR CH 1/16W 100K | 1   |         |
| R3342     | ERJ3GEYJ182 | M. RESISTOR CH 1/16W 1.8K | 1   |         |
| R3344, 45 | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K  | 2   |         |
| R3346     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R3350     | ERJ3GEYJ122 | M. RESISTOR CH 1/16W 1.2K | 1   |         |
| R3351     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R3352     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R3504     | ERJ3RED020  | M. RESISTOR CH 1/16W 82   | 1   |         |
| R3508-10  | ERJ8GEY0R00 | M. RESISTOR CH 1/8W 0     | 3   |         |
| R3551     | ERJ3GEYJ331 | M. RESISTOR CH 1/16W 330  | 1   |         |
| R4001     | ERJ3GEYJ100 | M. RESISTOR CH 1/16W 10   | 1   |         |
| R4002     | ERJ3GEYJ155 | M. RESISTOR CH 1/16W 1.5M | 1   |         |
| R4003     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R4004     | ERJ3GEYJ332 | M. RESISTOR CH 1/16W 3.3K | 1   |         |
| R4005     | ERJ3GEYJ2R2 | M. RESISTOR CH 1/16W 2.2  | 1   |         |

| Ref. No.  | Part No.    | Part Name & Description   | Pcs | Remarks |
|-----------|-------------|---------------------------|-----|---------|
| R4006     | ERJ3GEYJ561 | M. RESISTOR CH 1/16W 560  | 1   |         |
| R4007     | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 1   |         |
| R4008     | ERJ3GEYJ303 | M. RESISTOR CH 1/16W 30K  | 1   |         |
| R4009     | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 1   |         |
| R4010     | ERJ3GEYJ271 | M. RESISTOR CH 1/16W 270  | 1   |         |
| R4011     | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 1   |         |
| R4012     | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K | 1   |         |
| R4013     | ERJ3GEYJ680 | M. RESISTOR CH 1/16W 68   | 1   |         |
| R4014     | ERJ3RBD153  | M. RESISTOR CH 1/16W 15K  | 1   |         |
| R4015     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R4016, 17 | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K | 2   |         |
| R4018     | ERJ3GEYJ333 | M. RESISTOR CH 1/16W 33K  | 1   |         |
| R4019     | ERJ3GEYJ334 | M. RESISTOR CH 1/16W 330K | 1   |         |
| R4020     | ERJ3RBD431  | M. RESISTOR CH 1/16W 430  | 1   |         |
| R4021     | ERJ3RBD562  | M. RESISTOR CH 1/16W 5.6K | 1   |         |
| R4022     | ERJ3GEYJ392 | M. RESISTOR CH 1/16W 3.9K | 1   |         |
| R4023     | ERJ3GEYJ183 | M. RESISTOR CH 1/16W 18K  | 1   |         |
| R4024     | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 1   |         |
| R4025     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R4026     | ERJ3GEYJ181 | M. RESISTOR CH 1/16W 180  | 1   |         |
| R4030, 31 | ERJ3GEYJ183 | M. RESISTOR CH 1/16W 18K  | 2   |         |
| R4032     | ERJ3RBD272  | M. RESISTOR CH 1/16W 2.7K | 1   |         |
| R4033     | ERJ3RBD152  | M. RESISTOR CH 1/16W 1.5K | 1   |         |
| R4034, 35 | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 2   |         |
| R4036     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R4037     | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K | 1   |         |
| R4038     | ERJ3GEYJ680 | M. RESISTOR CH 1/16W 68   | 1   |         |
| R4039     | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 1   |         |
| R4040     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R4041     | ERJ3GEY0R00 | M. RESISTOR CH 1/16W 0    | 1   |         |
| R4042     | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K  | 1   |         |
| R4043     | ERJ3GEY0R00 | M. RESISTOR CH 1/16W 0    | 1   |         |
| R4044     | ERJ3GEYJ683 | M. RESISTOR CH 1/16W 68K  | 1   |         |
| R4110     | ERJ8GEY0R00 | M. RESISTOR CH 1/8W 0     | 1   |         |
| R4801     | ERJ8GEYJ222 | M. RESISTOR CH 1/10W 2.2K | 1   |         |
| R4802     | ERJ8GEYJ561 | M. RESISTOR CH 1/10W 560  | 1   |         |
| R4803     | ERJ3GEYJ334 | M. RESISTOR CH 1/16W 330K | 1   |         |
| R4804     | ERJ3GEYJ822 | M. RESISTOR CH 1/16W 8.2K | 1   |         |
| R4805     | ERJ8GEYJ224 | M. RESISTOR CH 1/10W 220K | 1   |         |
| R4806     | ERJ3GEYJ122 | M. RESISTOR CH 1/16W 1.2K | 1   |         |
| R4807     | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 1   |         |
| R4806, 09 | ERJ3GEYJ823 | M. RESISTOR CH 1/16W 82K  | 2   |         |
| R4810     | ERJ3GEYJ332 | M. RESISTOR CH 1/16W 3.3K | 1   |         |
| R4811     | ERJ3GEY0R00 | M. RESISTOR CH 1/16W 0    | 1   |         |
| R4812     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R4817     | ERJ3GEY0R00 | M. RESISTOR CH 1/16W 0    | 1   |         |
| R5001     | ERJ3GEYJ100 | M. RESISTOR CH 1/16W 10   | 1   |         |
| R5002, 03 | ERJ3GEYJ680 | M. RESISTOR CH 1/16W 68   | 2   |         |
| R5004     | ERJ3GEYJ332 | M. RESISTOR CH 1/16W 3.3K | 1   |         |
| R5005     | ERJ3GEYJ113 | M. RESISTOR CH 1/16W 11K  | 1   |         |
| R5006     | ERJ3GEY0R00 | M. RESISTOR CH 1/16W 0    | 1   |         |
| R5007     | ERJ3GEYJ561 | M. RESISTOR CH 1/16W 560  | 1   |         |
| R5008     | ERJ8GEYJ4R7 | M. RESISTOR CH 1/10W 4.7  | 1   |         |
| R6001     | ERJ3GEYJ151 | M. RESISTOR CH 1/16W 150  | 1   |         |
| R6002     | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 1   |         |
| R6003     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R6004     | ERJ3GEYJ474 | M. RESISTOR CH 1/16W 470K | 1   |         |
| R6005     | ERJ3GEYJ820 | M. RESISTOR CH 1/16W 82   | 1   |         |
| R6006, 07 | ERJ3GEYJ474 | M. RESISTOR CH 1/16W 470K | 2   |         |
| R6008     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6009     | ERJ3GEYJ101 | M. RESISTOR CH 1/16W 100  | 1   |         |
| R6010     | ERJ3GEYJ333 | M. RESISTOR CH 1/16W 33K  | 1   |         |
| R6011     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6012, 13 | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K  | 2   |         |
| R6014     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6017     | ERJ3GEYJ122 | M. RESISTOR CH 1/16W 1.2K | 1   |         |
| R6018, 18 | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 2   |         |
| R6020     | ERJ3GEYJ333 | M. RESISTOR CH 1/16W 33K  | 1   |         |
| R6021-23  | ERJ3GEYJ474 | M. RESISTOR CH 1/16W 470K | 3   |         |
| R6024     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6025     | ERJ3GEYJ335 | M. RESISTOR CH 1/16W 3.3M | 1   |         |
| R6026     | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 1   |         |
| R6027     | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K  | 1   |         |
| R6028     | ERJ3GEYJ105 | M. RESISTOR CH 1/16W 1M   | 1   |         |
| R6029     | ERJ3GEYJ304 | M. RESISTOR CH 1/16W 30K  | 1   |         |

| Ref. No.  | Part No.    | Part Name & Description   | Pcs | Remarks |
|-----------|-------------|---------------------------|-----|---------|
| R6030     | ERJ3GEYJ474 | M. RESISTOR CH 1/16W 470K | 1   |         |
| R6031     | ERJ3GEYJ105 | M. RESISTOR CH 1/16W 1M   | 1   |         |
| R6032     | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K | 1   |         |
| R6033     | ERJ3GEYJ820 | M. RESISTOR CH 1/16W 82   | 1   |         |
| R6034     | ERJ3GEYJ105 | M. RESISTOR CH 1/16W 1M   | 1   |         |
| R6035     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6036, 37 | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K  | 2   |         |
| R6038     | ERJ3GEYJ104 | M. RESISTOR CH 1/16W 100K | 1   |         |
| R6039, 40 | ERJ3GEYJ151 | M. RESISTOR CH 1/16W 150  | 2   |         |
| R6041     | ERJ3GEYJ120 | M. RESISTOR CH 1/8W 12    | 1   |         |
| R6042     | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 1   |         |
| R6043     | ERJ3GEYJ683 | M. RESISTOR CH 1/16W 68K  | 1   |         |
| R6044     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6046     | ERJ3GEYJ105 | M. RESISTOR CH 1/16W 1M   | 1   |         |
| R6048     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6051     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6052     | ERJ3GEYJ683 | M. RESISTOR CH 1/16W 68K  | 1   |         |
| R6053     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6054     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R6055     | ERJ3GEYJ474 | M. RESISTOR CH 1/16W 470K | 1   |         |
| R6056     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6057     | ERJ3GEYJ683 | M. RESISTOR CH 1/16W 68K  | 1   |         |
| R6058     | ERJ3RBD183  | M. RESISTOR CH 1/16W 18K  | 1   |         |
| R6059     | ERJ3RBD433  | M. RESISTOR CH 1/16W 47K  | 1   |         |
| R6060     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R6061     | ERJ3GEYJ105 | M. RESISTOR CH 1/16W 1M   | 1   |         |
| R6062, 63 | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K  | 2   |         |
| R6064     | ERJ3RBD363  | M. RESISTOR CH 1/16W 36K  | 1   |         |
| R6065     | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K  | 1   |         |
| R6066     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R6067-69  | ERJ3GEYJ683 | M. RESISTOR CH 1/16W 68K  | 3   |         |
| R6070     | ERJ3GEYJ392 | M. RESISTOR CH 1/16W 3.9K | 1   |         |
| R6071     | ERJ3GEYJ105 | M. RESISTOR CH 1/16W 1M   | 1   |         |
| R6072     | ERJ3GEYJ393 | M. RESISTOR CH 1/16W 39K  | 1   |         |
| R6075     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6078     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R6079     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6080     | ERJ3GEYJ332 | M. RESISTOR CH 1/16W 3.3K | 1   |         |
| R6081     | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K | 1   |         |
| R6082     | ERJ3GEYJ683 | M. RESISTOR CH 1/16W 68K  | 1   |         |
| R6083     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6085, 86 | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 2   |         |
| R6088, 89 | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 2   |         |
| R6092     | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K | 1   |         |
| R6093     | ERJ3RBD153  | M. RESISTOR CH 1/16W 15K  | 1   |         |
| R6094     | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K | 1   |         |
| R6095     | ERJ3GEYJ151 | M. RESISTOR CH 1/16W 150  | 1   |         |
| R6097     | ERJ3GEYJ472 | M. RESISTOR CH 1/16W 4.7K | 1   |         |
| R6100     | ERJ3GEYJ683 | M. RESISTOR CH 1/16W 68K  | 1   |         |
| R6101     | ERJ3GEYJ222 | M. RESISTOR CH 1/16W 2.2K | 1   |         |
| R6103     | ERJ3GEYJ223 | M. RESISTOR CH 1/16W 22K  | 1   |         |
| R6104     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6105     | ERJ3GEYJ104 | M. RESISTOR CH 1/16W 100K | 1   |         |
| R6106     | ERJ3RBD333  | M. RESISTOR CH 1/16W 33K  | 1   |         |
| R6107     | ERJ3RBD823  | M. RESISTOR CH 1/16W 82K  | 1   |         |
| R6108     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6109     | ERJ3GEYJ104 | M. RESISTOR CH 1/16W 100K | 1   |         |
| R6110     | ERJ3GEYJ471 | M. RESISTOR CH 1/16W 470  | 1   |         |
| R6111     | ERJ3GEYJ334 | M. RESISTOR CH 1/16W 330K | 1   |         |
| R6112     | ERJ3GEYJ104 | M. RESISTOR CH 1/16W 100K | 1   |         |
| R6113, 14 | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 2   |         |
| R6116     | ERJ3GEYJ683 | M. RESISTOR CH 1/16W 68K  | 1   |         |
| R6117     | ERJ3GEYJ103 | M. RESISTOR CH 1/16W 10K  | 1   |         |
| R6118     | ERJ3GEYJ683 | M. RESISTOR CH 1/16W 68K  | 1   |         |
| R6119, 20 | ERJ3GEYJ473 | M. RESISTOR CH 1/16W 47K  | 2   |         |
| R6121     | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 1   |         |
| R6122     | ERJ3GEYJ224 | M. RESISTOR CH 1/16W 220K | 1   |         |
| R6123     | ERJ3RBD153  | M. RESISTOR CH 1/16W 15K  | 1   |         |
| R6131     | ERJ3GEYJ683 | M. RESISTOR CH 1/16W 68K  | 1   |         |
| R6132, 33 | ERJ3GEYJ102 | M. RESISTOR CH 1/16W 1K   | 2   |         |
| R6211     | ERJ3GEYJ474 | M. RESISTOR CH 1/16W 470K | 1   |         |
| R6801     | ERJ3GEYJ101 | M. RESISTOR CH 1/8W 100   | 1   |         |
| R6802     | ERJ3GEYJ181 | M. RESISTOR CH 1/16W 180  | 1   |         |
| RA301     | EXBV4V104J  | RESISTOR-RESISTOR         | 1   |         |

| Ref. No.    | Part No.     | Part Name & Description    | Pcs | Remarks               |
|-------------|--------------|----------------------------|-----|-----------------------|
| RA704       | EXBV4V473J   | RESISTOR-RESISTOR          | 1   |                       |
| RA8001      | EXBV4V102J   | RESISTOR-RESISTOR          | 1   |                       |
| RA6002      | EXBV4V272J   | RESISTOR-RESISTOR          | 1   |                       |
| RA8008      | EXBV4V683J   | RESISTOR-RESISTOR          | 1   |                       |
| RA6010      | EXBV8V102J   | RESISTOR-RESISTOR          | 1   |                       |
| T1001       | VTP0535      | TRANSFORMER                | 1   |                       |
| T4001       | VLQ0905      | OSCILLATOR COIL            | 1   |                       |
| X402        | VXS1100      | CRYSTAL OSCILLATOR         | 1   |                       |
| X8001       | VXS0917      | CRYSTAL OSCILLATOR         | 1   |                       |
| X8002       | VXS0801      | CRYSTAL OSCILLATOR         | 1   |                       |
| ■ VEP28271A | EVF C. B. A. |                            |     | (RTL)                 |
| C801-04     | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 4   |                       |
| C805        | ECUX1H102KBV | C. CAPACITOR CH 50V 1000P  | 1   |                       |
| C806, 07    | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 2   |                       |
| C808        | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |                       |
| C809        | ECST1EX335Z  | T. CAPACITOR CH 25V 3.3U   | 1   |                       |
| C812        | ECSTOJY10BZ  | T. CAPACITOR CH 6.3V 10U   | 1   |                       |
| C813        | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |                       |
| C814        | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |                       |
| C815        | ECUX1C104KBV | C. CAPACITOR CH 18V 0.1U   | 1   |                       |
| C816        | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |                       |
| C817        | ECUX1E223KBV | C. CAPACITOR CH 25V 0.022U | 1   |                       |
| C818        | ECUM1A105KBN | C. CAPACITOR CH 10V 1U     | 1   |                       |
| C819        | ECUX1H103KBV | C. CAPACITOR CH 50V 0.01U  | 1   |                       |
| FP802       | VJS4365B020  | CONNECTOR (FEMALE) 20P     | 1   |                       |
| FP803       | VJS4297B010  | CONNECTOR (FEMALE) 10P     | 1   |                       |
| IC801       | MCVVQ110CFB  | IC                         | 1   |                       |
| IC802       | TC7W74FU     | IC                         | 1   |                       |
| L800        | VLQ0910K470  | COIL 47UH                  | 1   |                       |
| R802        | ERJ3GEYJ102  | M. RESISTOR CH 1/16W 1K    | 1   |                       |
| R803        | ERJ3RBD103   | M. RESISTOR CH 1/16W 10K   | 1   |                       |
| R804        | ERJ3RBD333   | M. RESISTOR CH 1/16W 33K   | 1   |                       |
| R805        | ERJ3GEYJ112  | M. RESISTOR CH 1/16W 1.1K  | 1   |                       |
| R807        | ERJ3GEYJ122  | M. RESISTOR CH 1/16W 1.2K  | 1   |                       |
| R809        | ERJ3GEY0R00  | M. RESISTOR CH 1/16W 0     | 1   |                       |
| R810        | ERJ3GEYJ121  | M. RESISTOR CH 1/16W 120   | 1   |                       |
| R812        | ERJ3GEYJ563  | M. RESISTOR CH 1/16W 56K   | 1   |                       |
| ■ VEK8873   | MIC UNIT     |                            |     | NV-RZ1EG/E/B/A/EN/ENC |
| D8801       | BR2202S-20B1 | DIODE                      | 1   |                       |
| D8802       | PH310        | DIODE                      | 1   |                       |
| D8803, 04   | SLR738AV50AC | LED                        | 2   |                       |
| SW8801      | EVQ8F02K     | SWITCH                     | 1   |                       |
| ■ VEK8874   | MIC UNIT     |                            |     | NV-RZ2EG/B/EN         |
| C8801       | ECEA0JKA221  | E. CAPACITOR 6.3V 220U     | 1   |                       |
| D8801       | BR2202S-20B1 | DIODE                      | 1   |                       |
| D8802       | PH310        | DIODE                      | 1   |                       |
| D8803, 04   | SLR738AV50AC | LED                        | 2   |                       |
| IC8801      | PNA4811M05VT | IR RECEIVER                | 1   |                       |
| L8801       | VLQEL05S101K | COIL 100UH                 | 1   |                       |
| SW8801      | EVQ8F02K     | SWITCH                     | 1   |                       |





**Panasonic**  
MATSUSHITA ELECTRIC