

Service
Service
Service



Service Manual

TABLE OF CONTENTS

	Page
Location of pc boards & Version variations	1-2
Technical Specifications	1-3
Measurement setup	1-4
Service Aids, Safety Instruction, etc	1-5
Preparations & Controls	2-1
Disassembly Instructions & Service positions	3-1
Service Test Programs	3-4
Set Block diagram	4-1
Set Wiring diagram	4-2
Front Control Board	5
Front Display Board	6
ECO6 Tuner Board : Systems Non-Cenelec	7A
ECO6 Tuner Board : Systems Cenelec	7B
ETF7 ND Tape Module	9
ETF7 DB Tape Module	9A
3CDC-LLC-DA11 Module	10
Power 2001 Module (30-70W Version)	11
AF9 Board	12
Set Mechanical Exploded view & parts list	13



© Copyright 2001 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by SL 0246 Service Audio Printed in The Netherlands Subject to modification



3140 785 32300


Version 1.0



PHILIPS


MEASUREMENT SETUP

Tuner FM

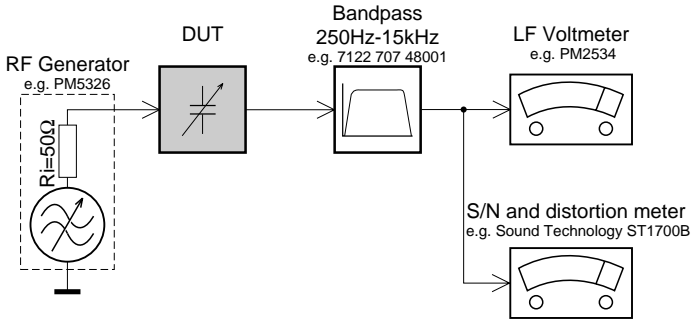

Use a bandpass filter to eliminate hum (50Hz, 100Hz) and disturbance from the pilotone (19kHz, 38kHz).


Tuner AM (MW,LW)

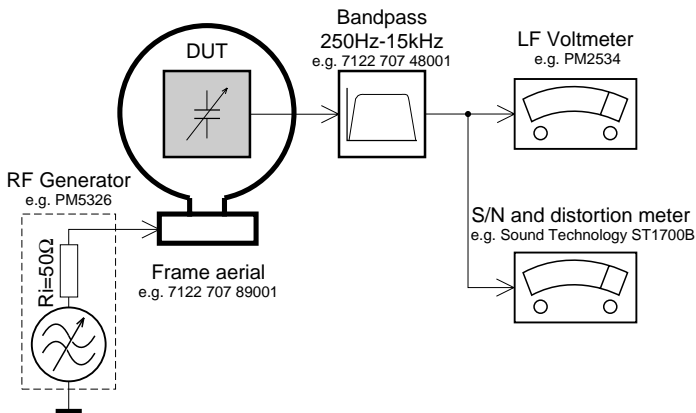

To avoid atmospheric interference all AM-measurements have to be carried out in a Faraday's cage.
Use a bandpass filter (or at least a high pass filter with 250Hz) to eliminate hum (50Hz, 100Hz).


CD

Use Audio Signal Disc SBC429 4822 397 30184
(replaces test disc 3)

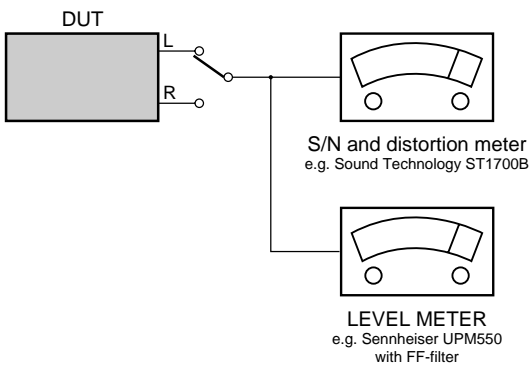

Recorder

Use Universal Test Cassette **CrO2** SBC419 4822 397 30069
or Universal Test Cassette **Fe** SBC420 4822 397 30071

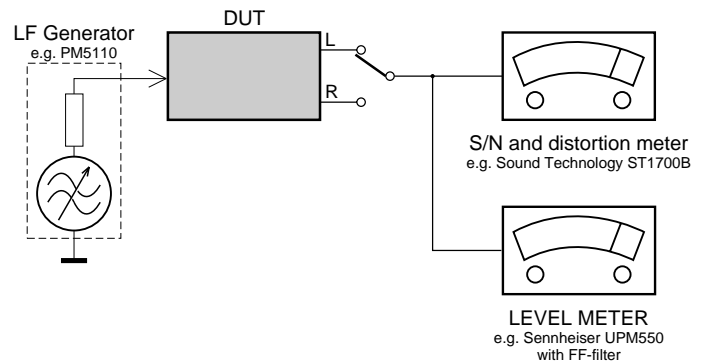

SERVICE AIDS

Service Tools:

Universal Torx driver holder	4822 395 91019
Torx bit T10 150mm	4822 395 50456
Torx driver set T6 - T20	4822 395 50145
Torx driver T10 extended	4822 395 50423

Cassette:

SBC419 Test cassette CrO2	4822 397 30069
SBC420 Test cassette Fe	4822 397 30071
MTT150 Dolby level 200nWb/M	4822 397 30271






Compact Disc:

SBC426/426A Test disc 5 + 5A	4822 397 30096
SBC442 Audio Burn-in Test disc 1kHz	4822 397 30155
SBC429 Audio Signals disc	4822 397 30184
Dolby Pro-logic Test Disc	4822 395 10216

ESD Equipment:

Anti-static table mat - large 1200x650x1.25mm ...	4822 466 10953
Anti-static table mat - small 600x650x1.25mm	4822 466 10958
Anti-static wristband	4822 395 10223
Connector box (1M Ω)	4822 320 11307
Extension cable (to connect wristband to conn. box)	4822 320 11305
Connecting cable (to connect table mat to conn. box)	4822 320 11306
Earth cable (to connect product to mat or box)	4822 320 11308
Complete kit ESD3 (combining all above products)	4822 320 10671
Wristband tester	4822 344 13999

HANDLING CHIP COMPONENTS

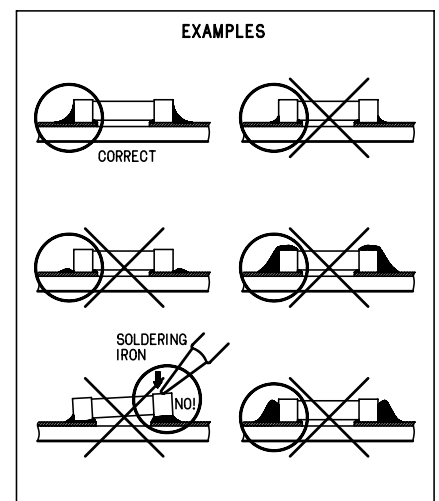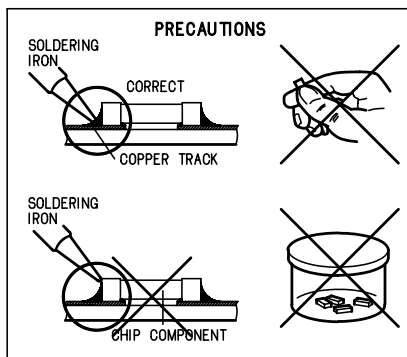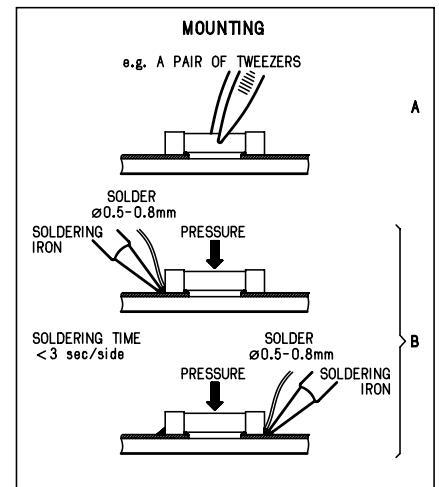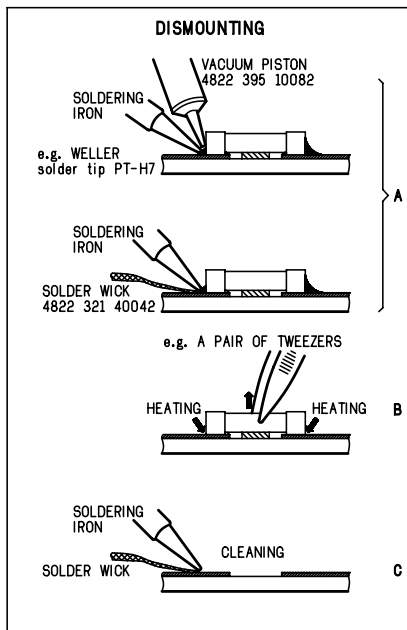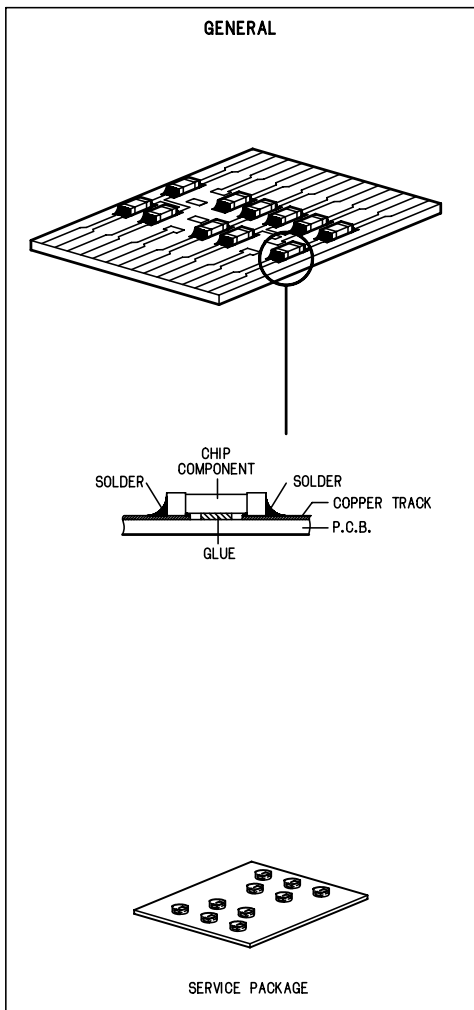

(GB) WARNING

All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.

When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance.

Keep components and tools also at this potential.

ESD**(NL) WAARSCHUWING**

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD).

Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen.

Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat.

Houd componenten en hulpmiddelen ook op ditzelfde potentiaal.

(F) ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD).

Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation.

Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfiler le bracelet serti d'une résistance de sécurité.

Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

(D) WARNUNG

Alle ICs und viele andere Halbleiter sind empfindlich gegenüber elektrostatischen Entladungen (ESD).

Unvorsichtige Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren.

Veranlassen Sie, dass Sie im Reparaturfall über ein Pulsarmband mit Widerstand verbunden sind mit dem gleichen Potential wie die Masse des Gerätes.

Bauteile und Hilfsmittel auch auf dieses gleiche Potential halten.

(I) AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD).

La loro longevità potrebbe essere fortemente ridatta in caso di non osservazione della più grande cauzione alla loro manipolazione.

Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza.

Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

(GB)

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified, be used.

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

(NL)

Veiligheidsbepalingen vereisen, dat het apparaat bij reparatie in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast.

(F)

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisés les pièces de rechange identiques à celles spécifiées.

(D)

Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Original zustand des Geräts darf nicht verändert werden; für Reparaturen sind Original-Ersatzteile zu verwenden.

(I)

Le norme di sicurezza esigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati.

**(GB) Warning !**

Invisible laser radiation when open.
Avoid direct exposure to beam.

(S) Varning !

Osynlig laserstrålning när apparaten är öppnad och spärren är urkopplad. Betrakta ej strålen.

(SF) Varoitus !

Avatussa laitteessa ja suojalukituksen ohitettaessa olet alltiina näkymättömälle laserisäteilylle. Älä katso säteeseen!


(DK) Advarse !

Usynlig laserstråling ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

"After servicing and before returning set to customer perform a leakage current measurement test from all exposed metal parts to earth ground to assure no shock hazard exist. The leakage current must not exceed 0.5mA."

PREPARATIONS AND CONTROLS

Preparations

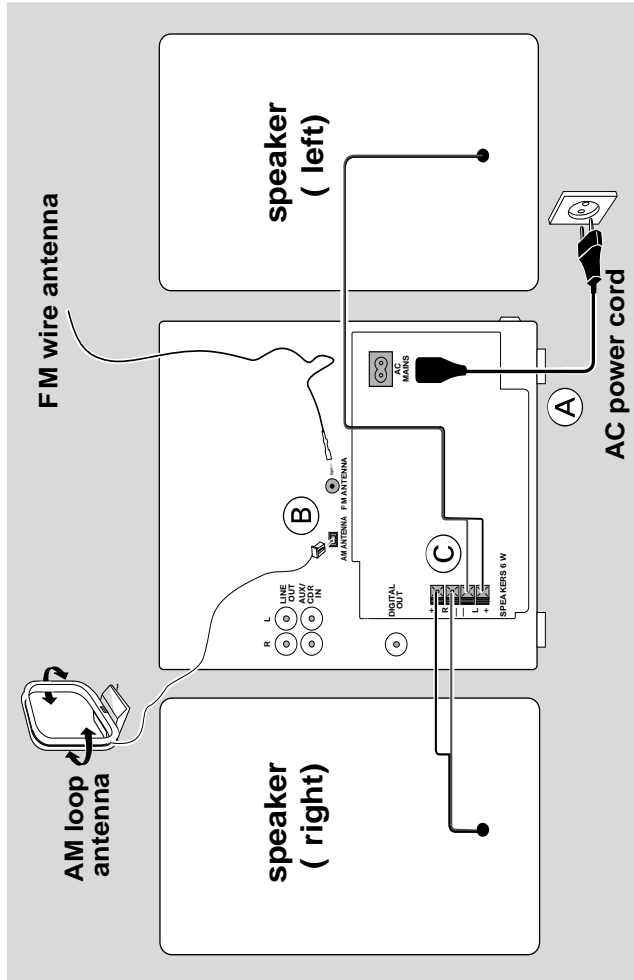

Rear Connections

The type plate is located at the rear of the system.
For users in the U.K.: please follow the instructions on page 2-2.

A Power

Before connecting the AC power cord to the wall outlet, ensure that all other connections have been made.

WARNING!


- For optimal performance, use only the original power cable.
- Never make or change connections with the power switched on.

To avoid overheating of the system, a safety circuit has been built in. Therefore, your system may switch to Standby mode automatically under extreme conditions. If this happens, let the system cool down before reusing it (not available for all versions).

B Antennas Connection

Connect the supplied AM loop antenna and FM antenna to the respective terminals. Adjust the position of the antenna for optimal reception.

AM Antenna

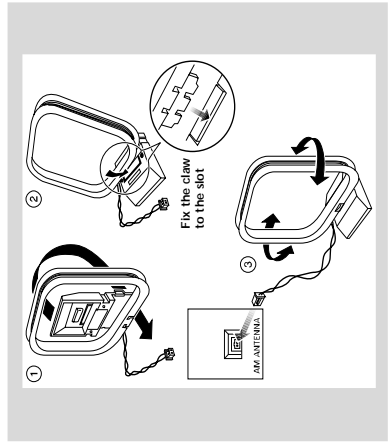

- Position the antenna as far as possible from a TV, VCR or other radiation source.

Preparations

Connecting other equipment to your system

Connect the audio left and right OUT terminals of a TV, VCR, Laser Disc player, DVD player or CD Recorder to the **AUX/CDR IN** terminals.

Notes:


- Do not connect equipment to both the **LINE OUT** and **AUX/CDR IN** terminals at the same time. Otherwise, noise will be generated and malfunction might occur.
- If you are connecting equipment with a mono output (a single audio out terminal), connect it to the **AUX/CDR IN** left terminal. Alternatively, you can use a "single to double" cinch cable (still be mono sound).

Digital Out Connection

Connect this digital output when recording on any audio equipment with digital input (CD Recorder, Digital Audio Tape [DAT] deck, Digital to Analogue Converter and Digital Signal Processor, for example). Use a cinch cable to connect the **DIGITAL OUT** terminal to the digital input terminal of the equipment.

Inserting batteries into the Remote Control


Insert two batteries (Type R06 or AA) into the remote control with the correct polarity as indicated by the **+** and **-** symbols inside the battery compartment.

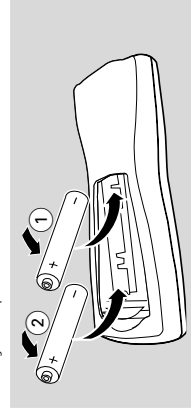

CAUTION!

- Remove batteries if they are exhausted or not to be used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed off properly.

FM Antenna

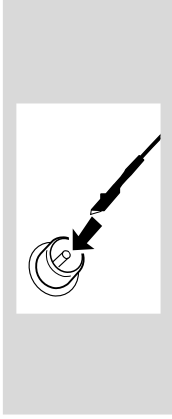


- For better FM stereo reception, connect an outdoor FM antenna to the **FM ANTENNA** terminal.

C Speakers Connection

Front Speakers

Connect the speaker wires to the **SPEAKERS (FRONT)** terminals, right speaker to "R" and left speaker to "L", coloured (marked) wire to **+** and black (unmarked) wire to **-**.

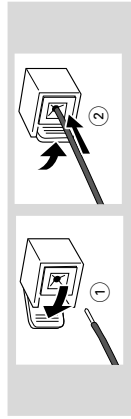

- Clip the stripped portion of the speaker wire as shown.

Notes:

- For optimal sound performance, use the supplied speakers.
- Do not connect more than one speaker to any one pair of **+** / **-** speaker terminals.
- Do not connect speakers with an impedance lower than the speakers supplied. Please refer to the **SPECIFICATIONS** section of this manual.

Optional Connections

The optional equipment and connecting cords are not supplied. Refer to the operating instructions of the connected equipment for details.

Line Out Connection

Connect this output to any analogue audio equipment for playback or recording (CD recorder, tape recorder or amplifier for example). Use a cinch cable to connect the **LINE OUT** terminals to the analogue audio in terminals of the equipment.

PREPARATIONS AND CONTROLS

Important notes for users in the U.K.

Mains plug

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- 1 Remove fuse cover and fuse.
- 2 Fix new fuse which should be a BS1362 5 Amp, A.S.T.A. or BSI approved type.
- 3 Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.

Note: These vered plug must be disposed of to avoid a possible shock hazard should it be inserted into a 13 Amp socket else where.

How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L).

- As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:
 - Connect the blue wire to the terminal marked N or coloured black.
 - Connect the brown wire to the terminal marked L or coloured red.
 - Do not connect either wire to the earth terminal in the plug, marked E (or ♂) or coloured green (or green and yellow).
- Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

Copyright in the U.K.

Recording and playback of material may require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

Italia

DICHIARAZIONE DI CONFORMITA'

Si dichiara che l'apparecchio FW-C.717 Philips risponde alle prescrizioni dell'art. 2 comma 1 del D.M. 28 Agosto 1995 n. 548.

Fatto a Eindhoven

Philips Consumer Electronics
Philips, Glaslaan 2
5616 JB Eindhoven, The Netherlands

Norge

Typeskilt finnes på apparatens underside.

Observer: Nettbyteren er sekundært innkoplet. Den innebygde nettdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.


PREPARATIONS AND CONTROLS

Controls

Controls on the system and remote control

- ① **ECO POWER**
to switch the system on or to Eco Power Standby mode.
- ② **STANDBY ON** ϕ
to switch the system on or to Standby mode.
- ③ **DISPLAY SCREEN**
to view the current status of the system.
- ④ **DISCTRAY**
- ⑤ **DISC CHANGE**
to change disc(s).
- ⑥ **DISC 1 / DISC 2 / DISC 3 (CD DIRECT)**
to select a disc tray for playback.
- ⑦ **OPEN-CLOSE**
to open or close the disc tray
- ⑧ **INTERACTIVE VU METER**
to show the VU (volume unit) meter in music or volume mode depending on the display mode selected.
- ⑨ **VOLUME**
to increase or decrease the volume.
- ⑩ **Tape Deck Operation**
AUTO REPLAY (AUTO RE.)
to select continuous playback in either AUTO PLAY or ONCE mode only.
- DUBBING**
to dub a tape.
- REC**
to start recording on tape deck 2.
- ⑪ **SOUND NAVIGATION**
to select the desired sound feature : DSC or VAC.
- ⑫ **JOG CONTROL**
to select the desired sound effect for the selected sound feature :
DSCDIGITAL, ROCK, POP NEWAGE, CLASSIC or ELECTRIC.
VACHALL, CONCERT, CINEMA, DISCO ,ARCADE or CYBER.
- ⑬ **INCREDIBLE SURROUND (IS)**
to activate or deactivate the surround sound effect.
- ⑭ **WOOX ON-OFF**
to select enhanced or normal WOox sound effect.
- WOOX LEVEL**
to select desired WOox level : WOox 1, WOox 2 or WOox 3.

- ⑮ \blacktriangle
to open the tape deck door.
- ⑯ **TAPE DECK 2**
- ⑰ **TAPE DECK 1**
- ⑱ **SOURCE** – to select the following:
CD / (CD 1•2•3)
to select disc tray 1, 2 or 3.
- TUNER / (BAND)**
to select waveband : FM, MW or LW.
- TAPE / (TAPE 1•2)**
to select tape deck 1 or 2.
- AUX / (CDR/DVD)**
to select a connected external source : CDR/DVD or AUX (auxiliary) mode .
- ⑲ **Mode Selection**
PLAY PAUSE \blacktriangleright \blacksquare \blacktriangleleft
for CDto start or interrupt playback.
for TAPEto start playback.
for PLUG & PLAY ... (on the system only) to initiate and start plug & play mode
- SEARCH•TUNING** \blacktriangleleft \blacktriangle \blacktriangleright
for CDto search backward/forward.
for TUNERto tune to a lower or higher radio frequency
for TAPEto rewind or fast forward.
for CLOCK(on the system only) to set the hour.
- DEMO STOP/CLEAR** \blacksquare
for CDto stop playback or to clear a programme.
for TUNERto stop programming.
.....(on the system only) to delete the preset radio station.
for TAPEto stop playback or recording
.....to reset tape counter number.
for DEMO(on the system only) to activate/deactivate the demonstration.
for CLOCK(on the system only) to exit clock setting or cancel timer.
for PLUG & PLAY ... (on the system only) to exit plug & play mode.
- PREV / PRESET / NEXT** \blacktriangleleft \blacktriangleright \blacktriangle
for CDto skip to the beginning of the current, previous, or next track.
for TUNERto select a preset radio station.
for CLOCK(on the system only) to set the minute.

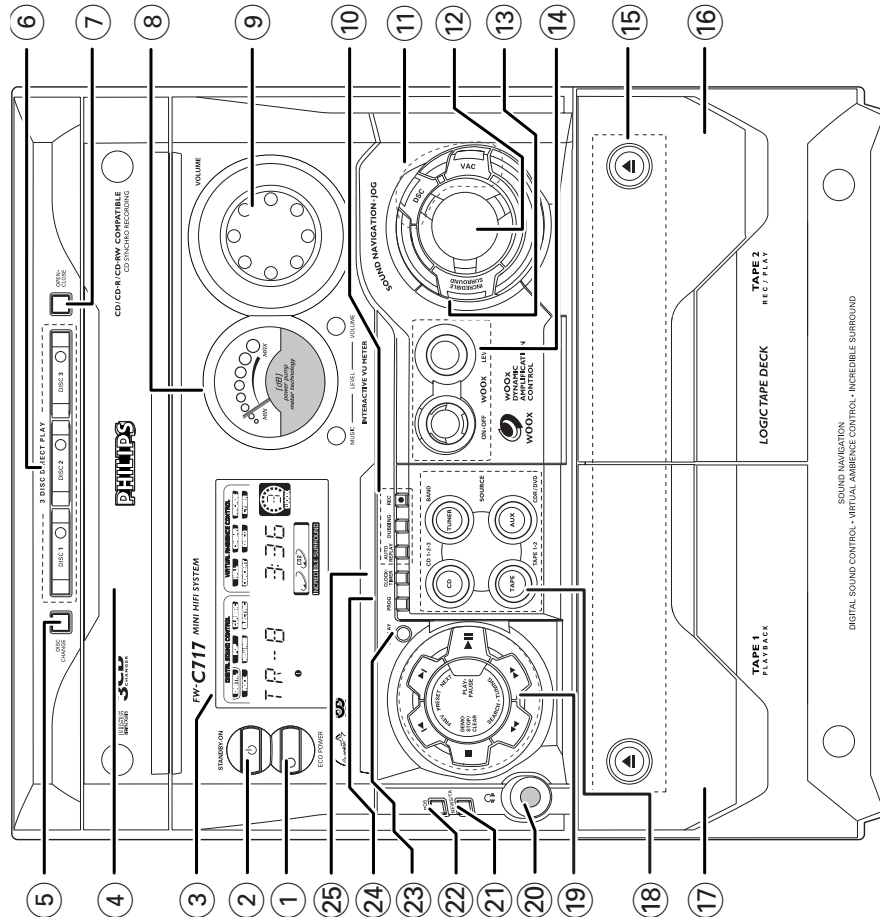


Controls

Controls on the system and remote control

- ① **ECO POWER**
to switch the system on or to Eco Power Standby mode.
- ② **STANDBY ON**
to switch the system on or to Standby mode.
- ③ **DISPLAY SCREEN**
to view the current status of the system.
- ④ **DISCTRAY**
- ⑤ **DISC CHANGE**
to change disc(s).
- ⑥ **DISC 1 / DISC 2 / DISC 3 (CD DIRECT)**
to select a disc tray for playback.
- ⑦ **OPEN-CLOSE**
to open or close the disc tray
- ⑧ **INTERACTIVE VU METER**
to show the VU (volume unit) meter in music or volume mode depending on the display mode selected.
- ⑨ **VOLUME**
to increase or decrease the volume.
- ⑩ **Tape Deck Operation**
AUTO REPLAY (AUTO RE.)
to select continuous playback in either AUTO PLAY or ONCE mode only.
- DUBBING**
to dub a tape.
- REC**
to start recording on tape deck 2.
- ⑪ **SOUND NAVIGATION**
to select the desired sound feature : DSC or VAC.
- ⑫ **JOG CONTROL**
to select the desired sound effect f for the selected sound feature .
DSCDIGITAL, ROCK, POP, NEWAGE, CLASSIC or ELECTRIC.
VACHALL, CONCERT, CINEMA, DISCO, ARCADE or CYBER.
- ⑬ **INCREDIBLE SURROUND (IS)**
to activate or deactivate the surround sound effect.
- ⑭ **WOOX ON-OFF**
to select enhanced or normal WOOX sound effect.
WOOX LEVEL
to select desired WOOX level : WOOX 1, WOOX 2 or WOOX 3.

- ⑮
to open the tape deck door.
- ⑯ **TAPE DECK 2**
- ⑰ **TAPE DECK 1**
- ⑱ **SOURCE** – to select the following:
CD / (CD 1-2-3)
to select disc tray 1, 2 or 3.
TUNER / (BAND)
to select waveband : FM, MW or LW.
TAPE / (TAPE 1-2)
to select tape deck 1 or 2.
AUX / (CDR/DVD)
to select a connected external source : CDR/DVD or AUX (auxiliary) mode.
- ⑲ **Mode Selection**
PLAY PAUSE **II**
for CD to start or interrupt playback.
for TAPE to start playback.
for PLUG & PLAY ... (on the system only) to initiate and start plug & play mode.
SEARCH-TUNING **▶▶**
for CD to search backward/forward.
for TUNER to tune to a lower or higher radio frequency.
for TAPE to rewind or fast forward.
for CLOCK (on the system only) to set the hour.
DEMO STOP/CLEAR **■**
for CD to stop playback or to clear a programme.
for TUNER to stop programming.
..... (on the system only) to delete the preset radio station.
for TAPE to stop playback or recording.
..... to reset tape counter number.
for DEMO (on the system only) to activate/deactivate the demonstration.
for CLOCK (on the system only) to exit clock setting or cancel timer.
for PLUG & PLAY ... (on the system only) to exit plug & play mode.
PREV / PRESET / NEXT **▶▶**
for CD to skip to the beginning of the current, previous, or next track.
for TUNER to select a preset radio station.
for CLOCK (on the system only) to set the minute.

Controls

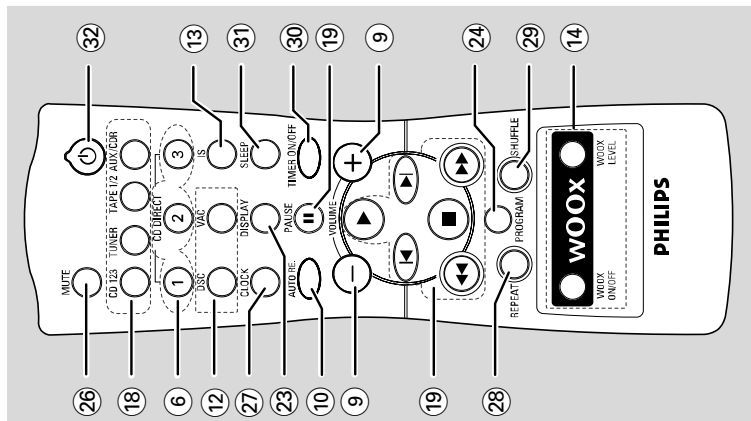

- ⑳
to connect headphones.
- ㉑ **NEWS/TA**
to hear News or Traffic Announcement automatically
- ㉒ **RDS**
to select RDS information.
- ㉓ **DISPLAY**
to select different screen display mode : NORMAL, MODE 1, MODE 2, or MODE 3.
- ㉔ **PROG (PROGRAM)**
for CD to programme disc tracks.
for TUNER to programme preset radio stations.
for CLOCK (on the system only) to select 12- or 24-hour clock mode.
- ㉕ **CLOCK-TIMER**
to view the clock, set the clock or set the timer.
- ㉖ **MUTE**
to interrupt or resume sound reproduction.
- ㉗ **CLOCK**
to view the clock display
- ㉘ **REPEAT**
to playback track(s)/disc(s)/programme repeatedly
- ㉙ **SHUFFLE**
to playback all a available discs and their tracks/ programme in random order.
- ㉚ **TIMER ON/OFF**
to activate or deactivate the timer.
- ㉛ **SLEEP**
to activate, deactivate or set the sleep timer.
- ㉜
to switch the system to Standby mode.
to switch the system to Eco Power Standby mode.


Notes for remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (CD 123 or TUNER, for example).
- Then select the desired function (▶, ◀, ▶▶, ◀◀, for example).

MAINTENANCE AND TROUBLESHOOTING

Maintenance

- **Cleaning the Cabinet**
Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

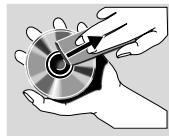


- **Cleaning Discs**
When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out. Do not wipe in a circular motion.
Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

Cleaning the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good playback quality, clean the disc lens with Philips CD Lens Cleaner or any commercially available cleaner. Follow the instructions supplied with the cleaner.

Cleaning the Heads and the Tape Paths

- To ensure good recording and playback quality, clean the heads (A), the capstan(s) (B), and pressure roller(s) (C) after every 50 hours of tape operation.
Use a cotton swab slightly moistened with cleaning fluid or alcohol.
You also can clean the heads by playing a cleaning tape once.

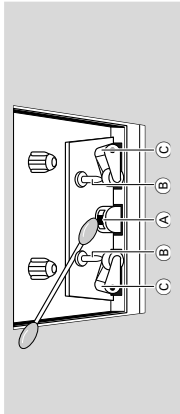

Demagnetising the heads

- Use a demagnetising tape available at your dealer.

Troubleshooting

RADIO RECEPTION

Radio reception is poor

- If the signal is too weak, adjust the antenna or connect an external antenna for better reception.
- Increase the distance between the Mini HiFi System and your TV or VCR.

TAPE OPERATION/RECORDING

Recording or playback cannot be made.

- Clean deck parts, see "Maintenance".
- Use only NORMAL (IECI) tape.
- Apply a piece of adhesive tape over the missing tab space.

The tape deck door cannot open.

- Remove and reconnect the AC power plug and switch on the system again.

GENERAL

The system does not react when buttons are pressed.

- Remove and reconnect the AC power plug and switch on the system again.

Sound cannot be heard or is of poor quality.

- Adjust the volume.
- Disconnect the headphones.
- Check that the speakers are connected correctly.
- Check if the stripped speaker wire is clamped.

The left and right sound outputs are reversed.

- Check the speaker connections and location.

The remote control does not function properly.

- Select the source (CD or TUNER, for example) before pressing the function button (▶, ◀, ►, ◄).
- Reduce the distance between the remote control and the system.
- Insert the batteries with their polarities (+/- signs) aligned as indicated.
- Replace the batteries.
- Point the remote control in the direction of the system's IR sensor.

The timer is not working.

- Set the clock correctly.
- Press TIMER ON/OFF to switch on the timer.
- If recording is in progress, stop recording.

Not all lighted buttons are showing light.

- Press DISPLAY to select NORMAL or MODE 1 display mode.

The Clock/Timer setting is erased.

- Power has been interrupted or the power cord has been disconnected. Reset the clock/timer.

The system displays features automatically and buttons start flashing.

- Press and hold DEMO STOP ■ on the system to switch off the demonstration.

Troubleshooting

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

Problem

Solution

CD OPERATION


"NO DISC" is displayed.

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc, see "Maintenance".
- Use a finalised CD-R(W) or CD-R.


"DISC NOT FINALIZED" is displayed.

DISMANTLING INSTRUCTIONS

Dismantling of the Cassette Cover

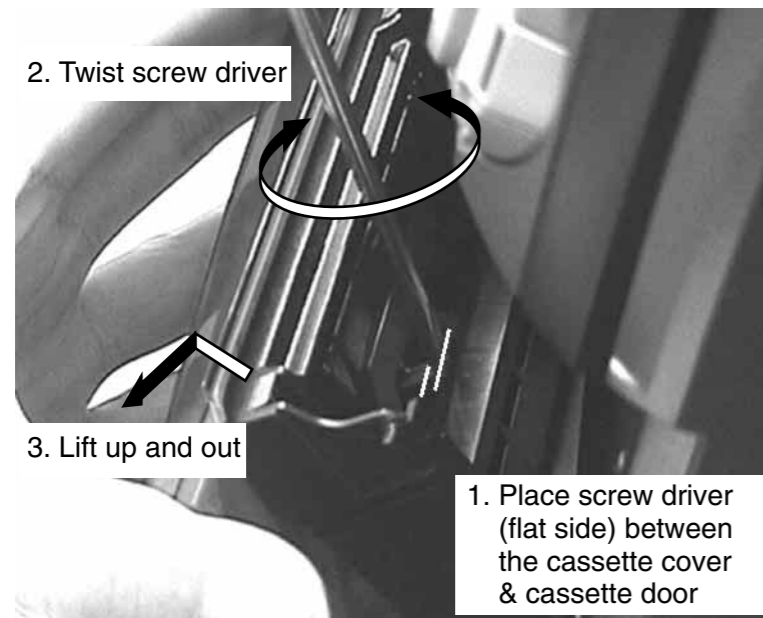


Remove Cassette Cover

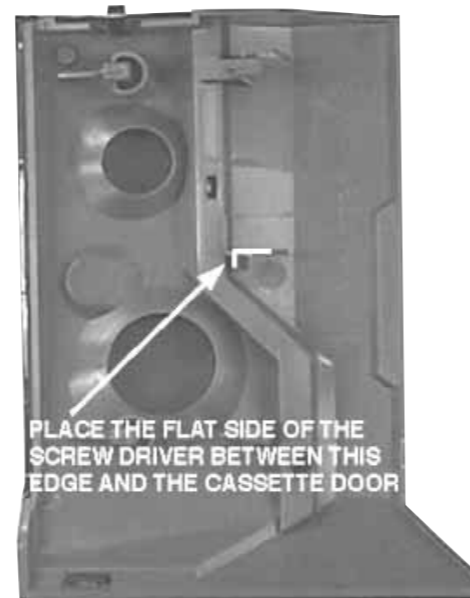


Cassette Cover

Dismantling of the CDC Module and Front Panel

- 1) Loosen 4 screws to remove the Cover Top (pos 255) of the set.
- 2) Loosen 2 screws to remove the Panel Left (pos 253) and 2 screws to remove the Panel Right (pos 254) of the set.
- 3) Slide out the CDC Tray as shown in the diagram below with the help of a flat head screw driver.

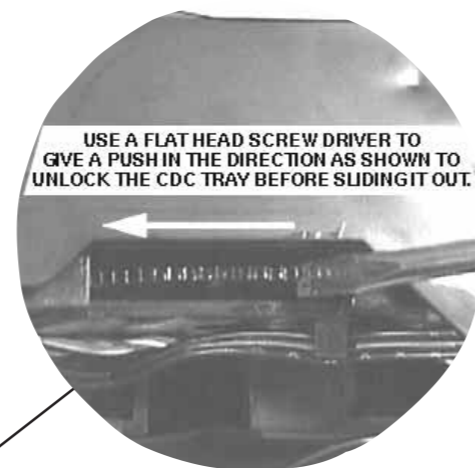


Sliding out the CDC Tray

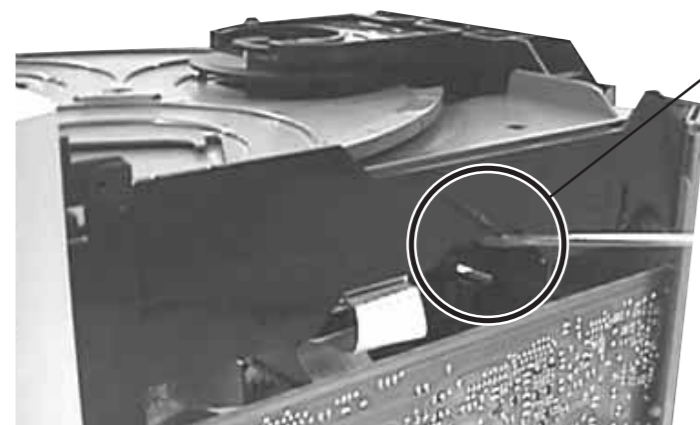

Dismantling of the CDC Module and Front Panel

- 4) Remove the Cover Tray CDC (pos 106) as indicated.

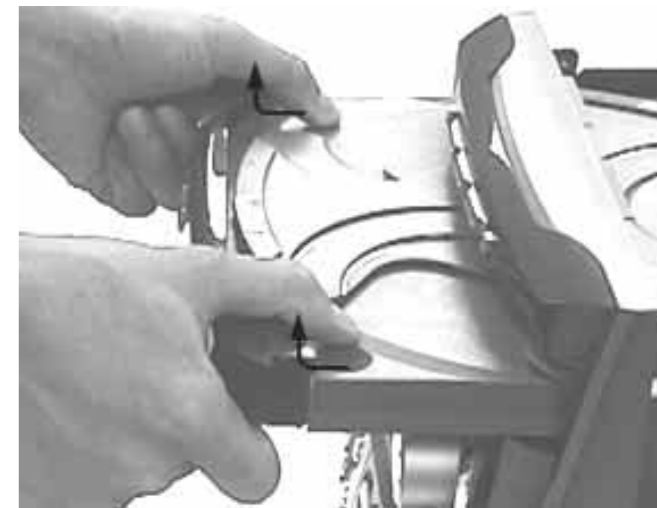


Remove Cover Tray CDC

- 5) Loosen 2 screws A and 2 screws B to remove the CDC Module (pos 1105) as indicated.
- 6) Remove 2 screws (pos 226) at the bottom to separate the Front Panel Assembly from the Plate Bottom (pos 265).




Front View CDC

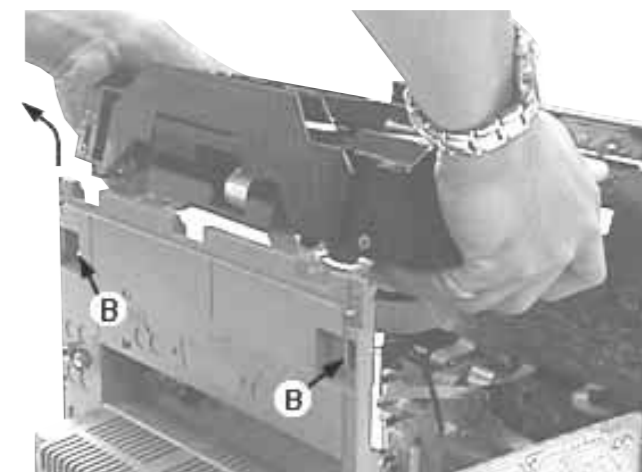


Remove CDC Module

Dismantling of the Front Display Board and Front Control Board


- 1) Remove 1 screw C as indicated to loosen the Headphone Board (pos 1101-B).
- 2) Remove 5 screws D as indicated to loosen the Front Display Board (pos 1101-A).
- 3) Remove 9 screws E as indicated to loosen the Front Control Board (pos 1107-A).
- 4) Remove 1 screw F as indicated to loosen the IR-Eye Board (pos 1107-D).
- 5) Remove 3 screws N as indicated to loosen the VU Meter Board (pos 1107-C).

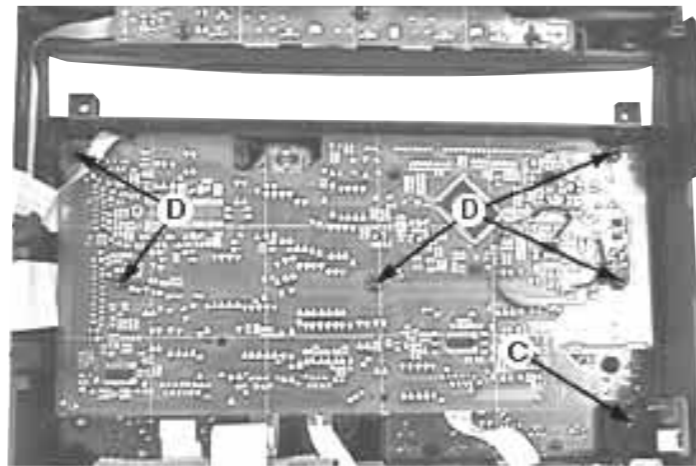

Remove Front Display Board and Headphone Board

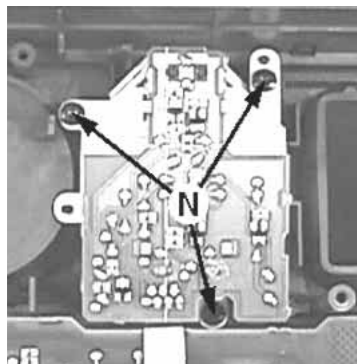


Remove VU Meter Board

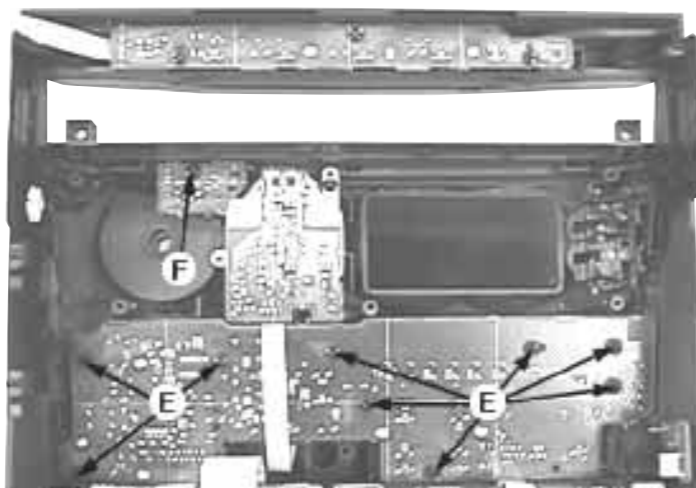

Remove Front Control Board and IR-Eye Board


Dismantling of the ETF Tape Module

- 1) Remove 6 screws G as indicated to loosen the ETF Tape Module (pos 1104).

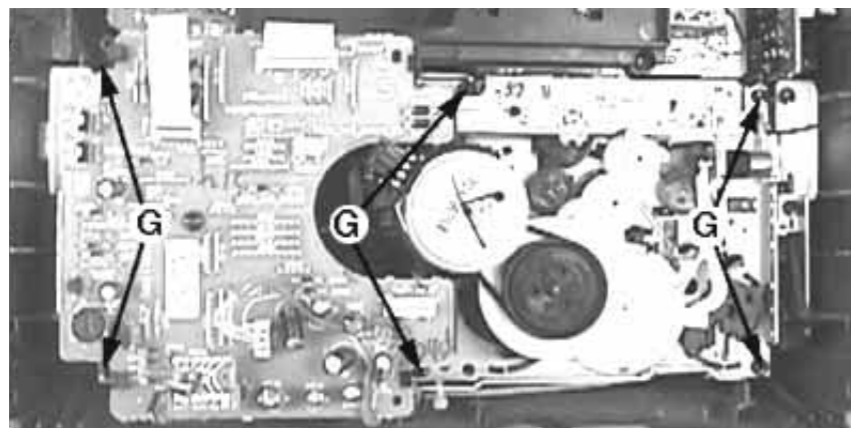


Dismantling of Rear Portion

- 1) Remove 3 screws J and uncatch M1 as indicated to loosen the AF Board (pos 1102-A).
- 2) Remove 3 screws K and uncatch M2 as indicated to loosen the Tuner Board (pos 1103).
- 3) Remove 4 screws L as indicated to loosen the Panel Rear (pos 256).

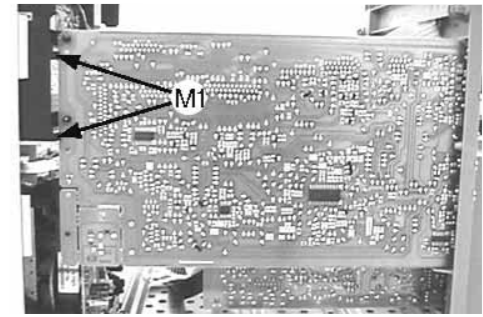


Remove AF Board

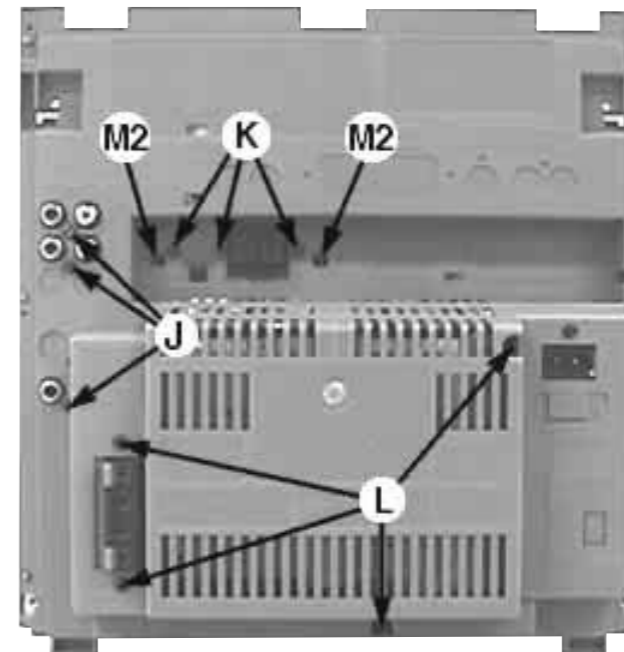

Repair Hints


- 1) The Knob Volume Rotary (pos 117) can be remove by inserting a strong string into the slot and pull it out in the direction as indicated. See picture 1.

Picture 1

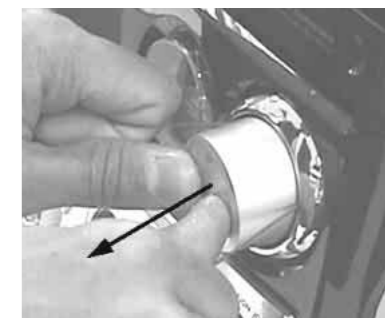

- 2) The Knob Jog Rotary (pos 140) can be remove by inserting a strong string into the slot and pull it out in the direction as indicated. See picture 2.

Picture 2

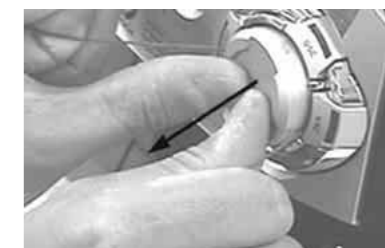


Repair Hints

- 3) During repair it is possible to disconnect the Tuner board and CDC Module completely unless the fault is suspected to be in that area. This will not affect the performance of the rest of the set.
- 4) Due to the short flex cable wires in the ETF Module, the pc board should be disconnected and reconnected on the reverse side of the tape mechanism to keep it electrically connected during repair. See picture 3.

Note: The flex cables are very fragile, care should be taken not to damage them during repair. After repair, be very sure that the flex cables are inserted properly into the flex sockets before encasing, otherwise faults may occur.


Picture 3

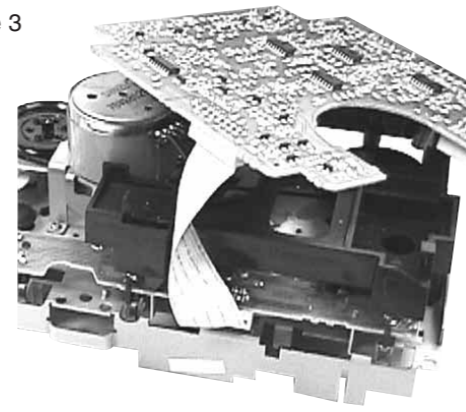


Service pos A




Service pos B

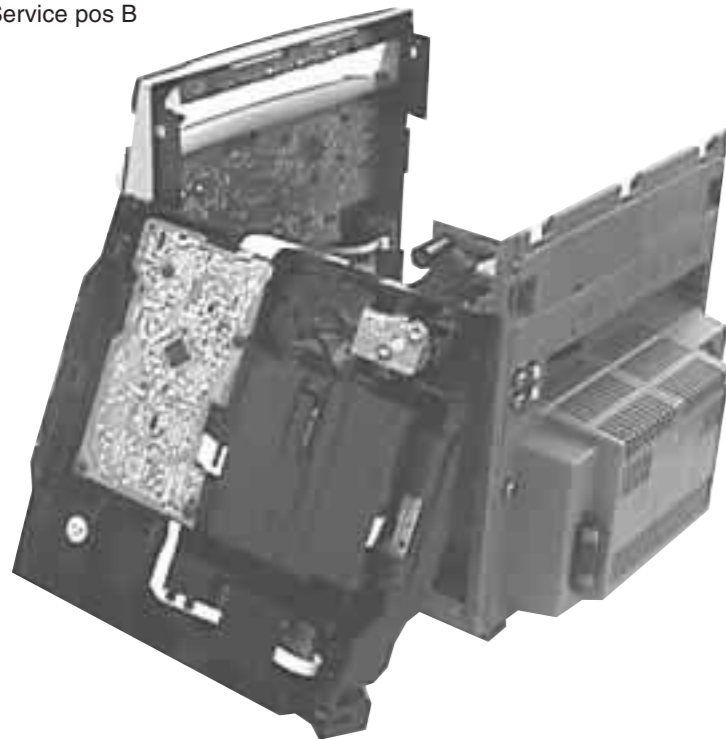

Service pos C

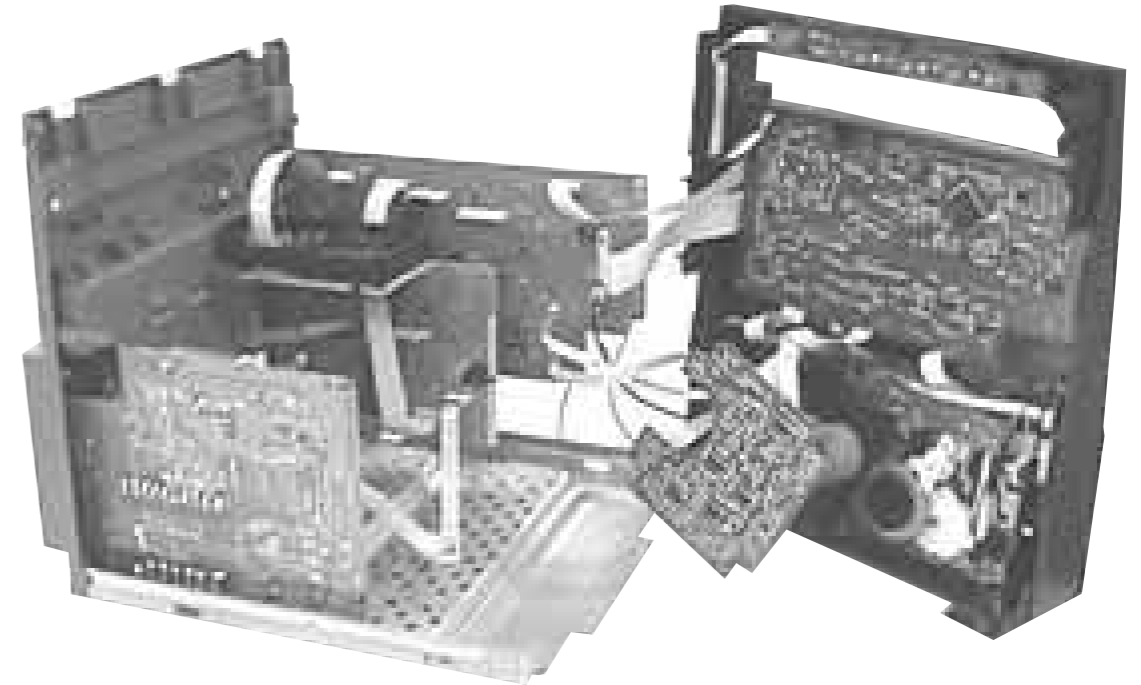

Service pos D

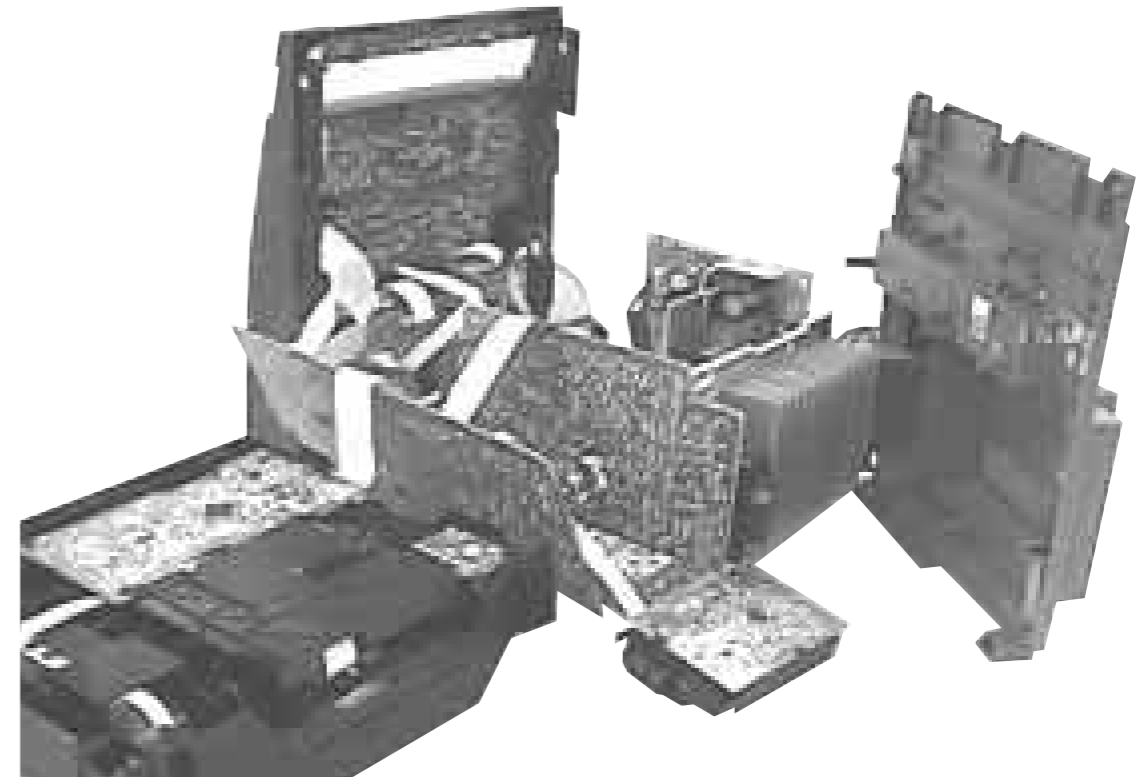

SERVICE TEST PROGRAM

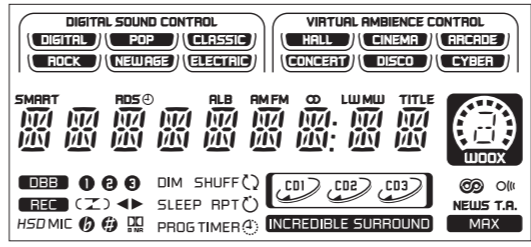
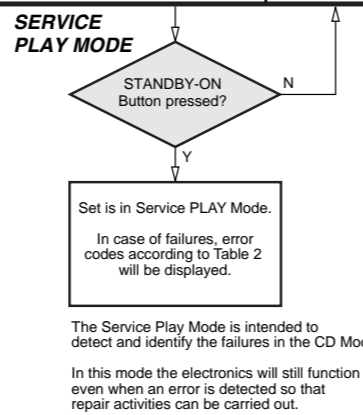
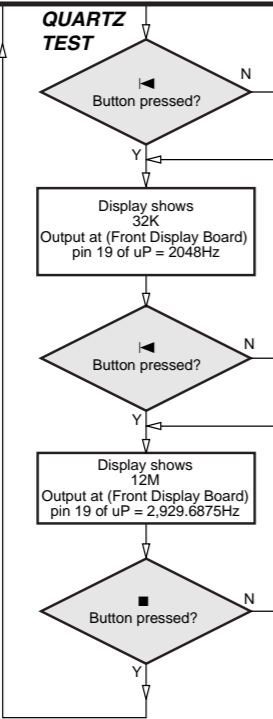
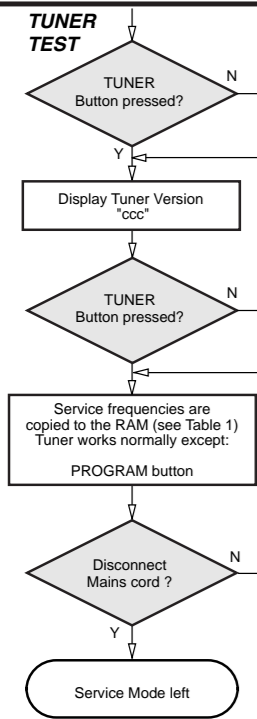
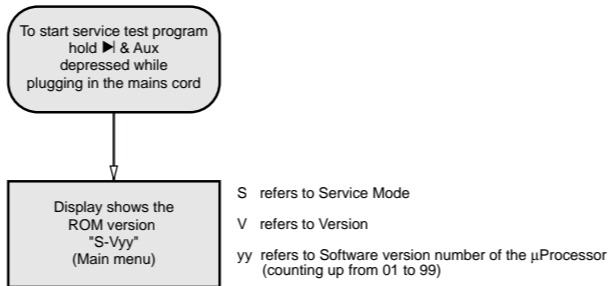


Figure 1


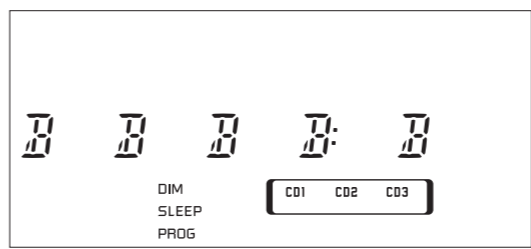


Figure 2

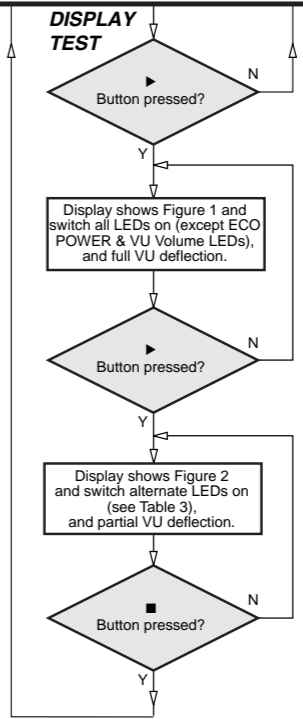

LEDs	FW-C500, FW-C550	FW-C700, FW-C717, FW-C720, FW-C780	FW-P750
DISC 1	On	On	On
DISC 3	On	On	On
TAPE	On	On	On
TUNER	On	On	On
CENTRE			On
SURROUND LEFT			On
STEREO RIGHT			On
VAC	On	On	On
DBB	On		On
VU BACK LIGHT	On	On	On
VU VOLUME	On	On	On

Table 3

Various other Tests

PRESET	Europe "EUR"	East Eur. "EAS"	East Eur. Extended-band "EAS"	USA "USA"	Oversea "OSE"
1	87.5MHz	87.5MHz	65.81MHz	87.5MHz	87.5MHz
2	108MHz	108MHz	108MHz	108MHz	108MHz
3	531kHz	531kHz	74MHz	530kHz	531/530kHz*
4	1602kHz	1602kHz	87.5MHz	1700kHz	1602/1700kHz*
5	558kHz	558kHz	531kHz	560kHz	558/560kHz*
6	1494kHz	1494kHz	1602kHz	1500kHz	1494/1500kHz*
7	153kHz	87.5MHz	558kHz	98MHz	87.5MHz
8	279kHz	87.5MHz	1494kHz	87.5MHz	87.5MHz
9	198kHz	87.5MHz	98MHz	87.5MHz	87.5MHz
10	98MHz	87.5MHz	70.01MHz	87.5MHz	87.5MHz
11	87.5MHz	98MHz	65.81MHz	87.5MHz	98MHz

Table 1

Note: * Depending on the selected grid frequency (9 or 10kHz)
 By holding the TUNER and ►► buttons depressed while switching on the Mains supply, one of the undermentioned features will be activated:
 - the tuning grid frequency is toggled between 9kHz and 10kHz for the Oversea (/21) version.
 - the extended FM1 (65.81MHz - 74MHz) is toggled on and off for East Eur. (/34) version.


Error code	Error Description
E1000	Focus Error Triggered when the focus could not be found within a certain time when starting up the CD or when the focus is lost for a certain time during play.
E1001	Radial Error Triggered when the radial servo is off-track for a certain time during play.
E1002	Sledge In Error The sledge did not reach its inner position (inner-switch is still close) before approximately 6 Sec. have passed by. Inner-switch or sledge motor problem.
E1003	Sledge Out Error The sledge did not come out of its inner position (inner-switch is still open) before approximately 250 mSec. have passed by. Inner-switch or sledge motor problem.
E1005	Jump-offtrack error Triggered in normal play when the jump destination could not be found within a certain time. When this error occurred, software will try to recover by initiating the jump command again. If it is recoverable, the disc will continue to play.
E1006	Subcode Error Triggered when a new subcode was missing for a certain time during play.
E1007	PLL Error The Phase Lock Loop could not lock within a certain time.
E1008	Turntable Motor Error Generated when the CD could not reached 75% of speed during startup within a certain time. Discmotor problem.
E1020	Focus Search Error The focus point has not been found within a certain time.
E1070	The carousel switch is not open within certain time. This can happen when either the switch is defective and closed all the time, or when the carousel is blocked when located exactly at a disc position.
E1071	The carousel position switch did not close within a certain time. This can happen when the switch is defective and never closes electrically, or when the carousel is blocked in between two disc positions. The time-out is approximately 5 Sec.
E1079	The drawer could not enter the inside position is opening again. This can be caused because the drawer is blocked by something and cannot go fully inside, or the drawer switch is defective and does not close.

Table 2


TEST	Activated with	ACTION
EEPROM TEST	►► ■ to Exit	A test pattern will be sent to the EEPROM. "PASS" is displayed if the uProcessor read back the test pattern correctly, otherwise "ERROR" will be displayed.
EEPROM FORMAT TEST	◄◄	Load default data. Display shows "NEW" for 1 second. Caution! All presets from the customer will be lost!!
ROTARY ENCODER TEST	Rotary Volume Knob or Jog Shuttle Knob	Display shows value for 2 seconds. Values increases or decreases in steps of 1 until 0 (Min.) or 40 (Max.) is reached.
LEAVE SERVICE TESTPROGRAM	Disconnect mains cord	

SET BLOCK DIAGRAM

NOTE :
 → MAIN SIGNAL PATH
 MEASUREMENTS ARE IN AUX MODE :
 XX mV LEVELS AT MAX VOL
 YY dBA S/N AT 500mW
 ZZ dB HEADROOM (1% THD) WRT TO LEVEL AT MAX VOL

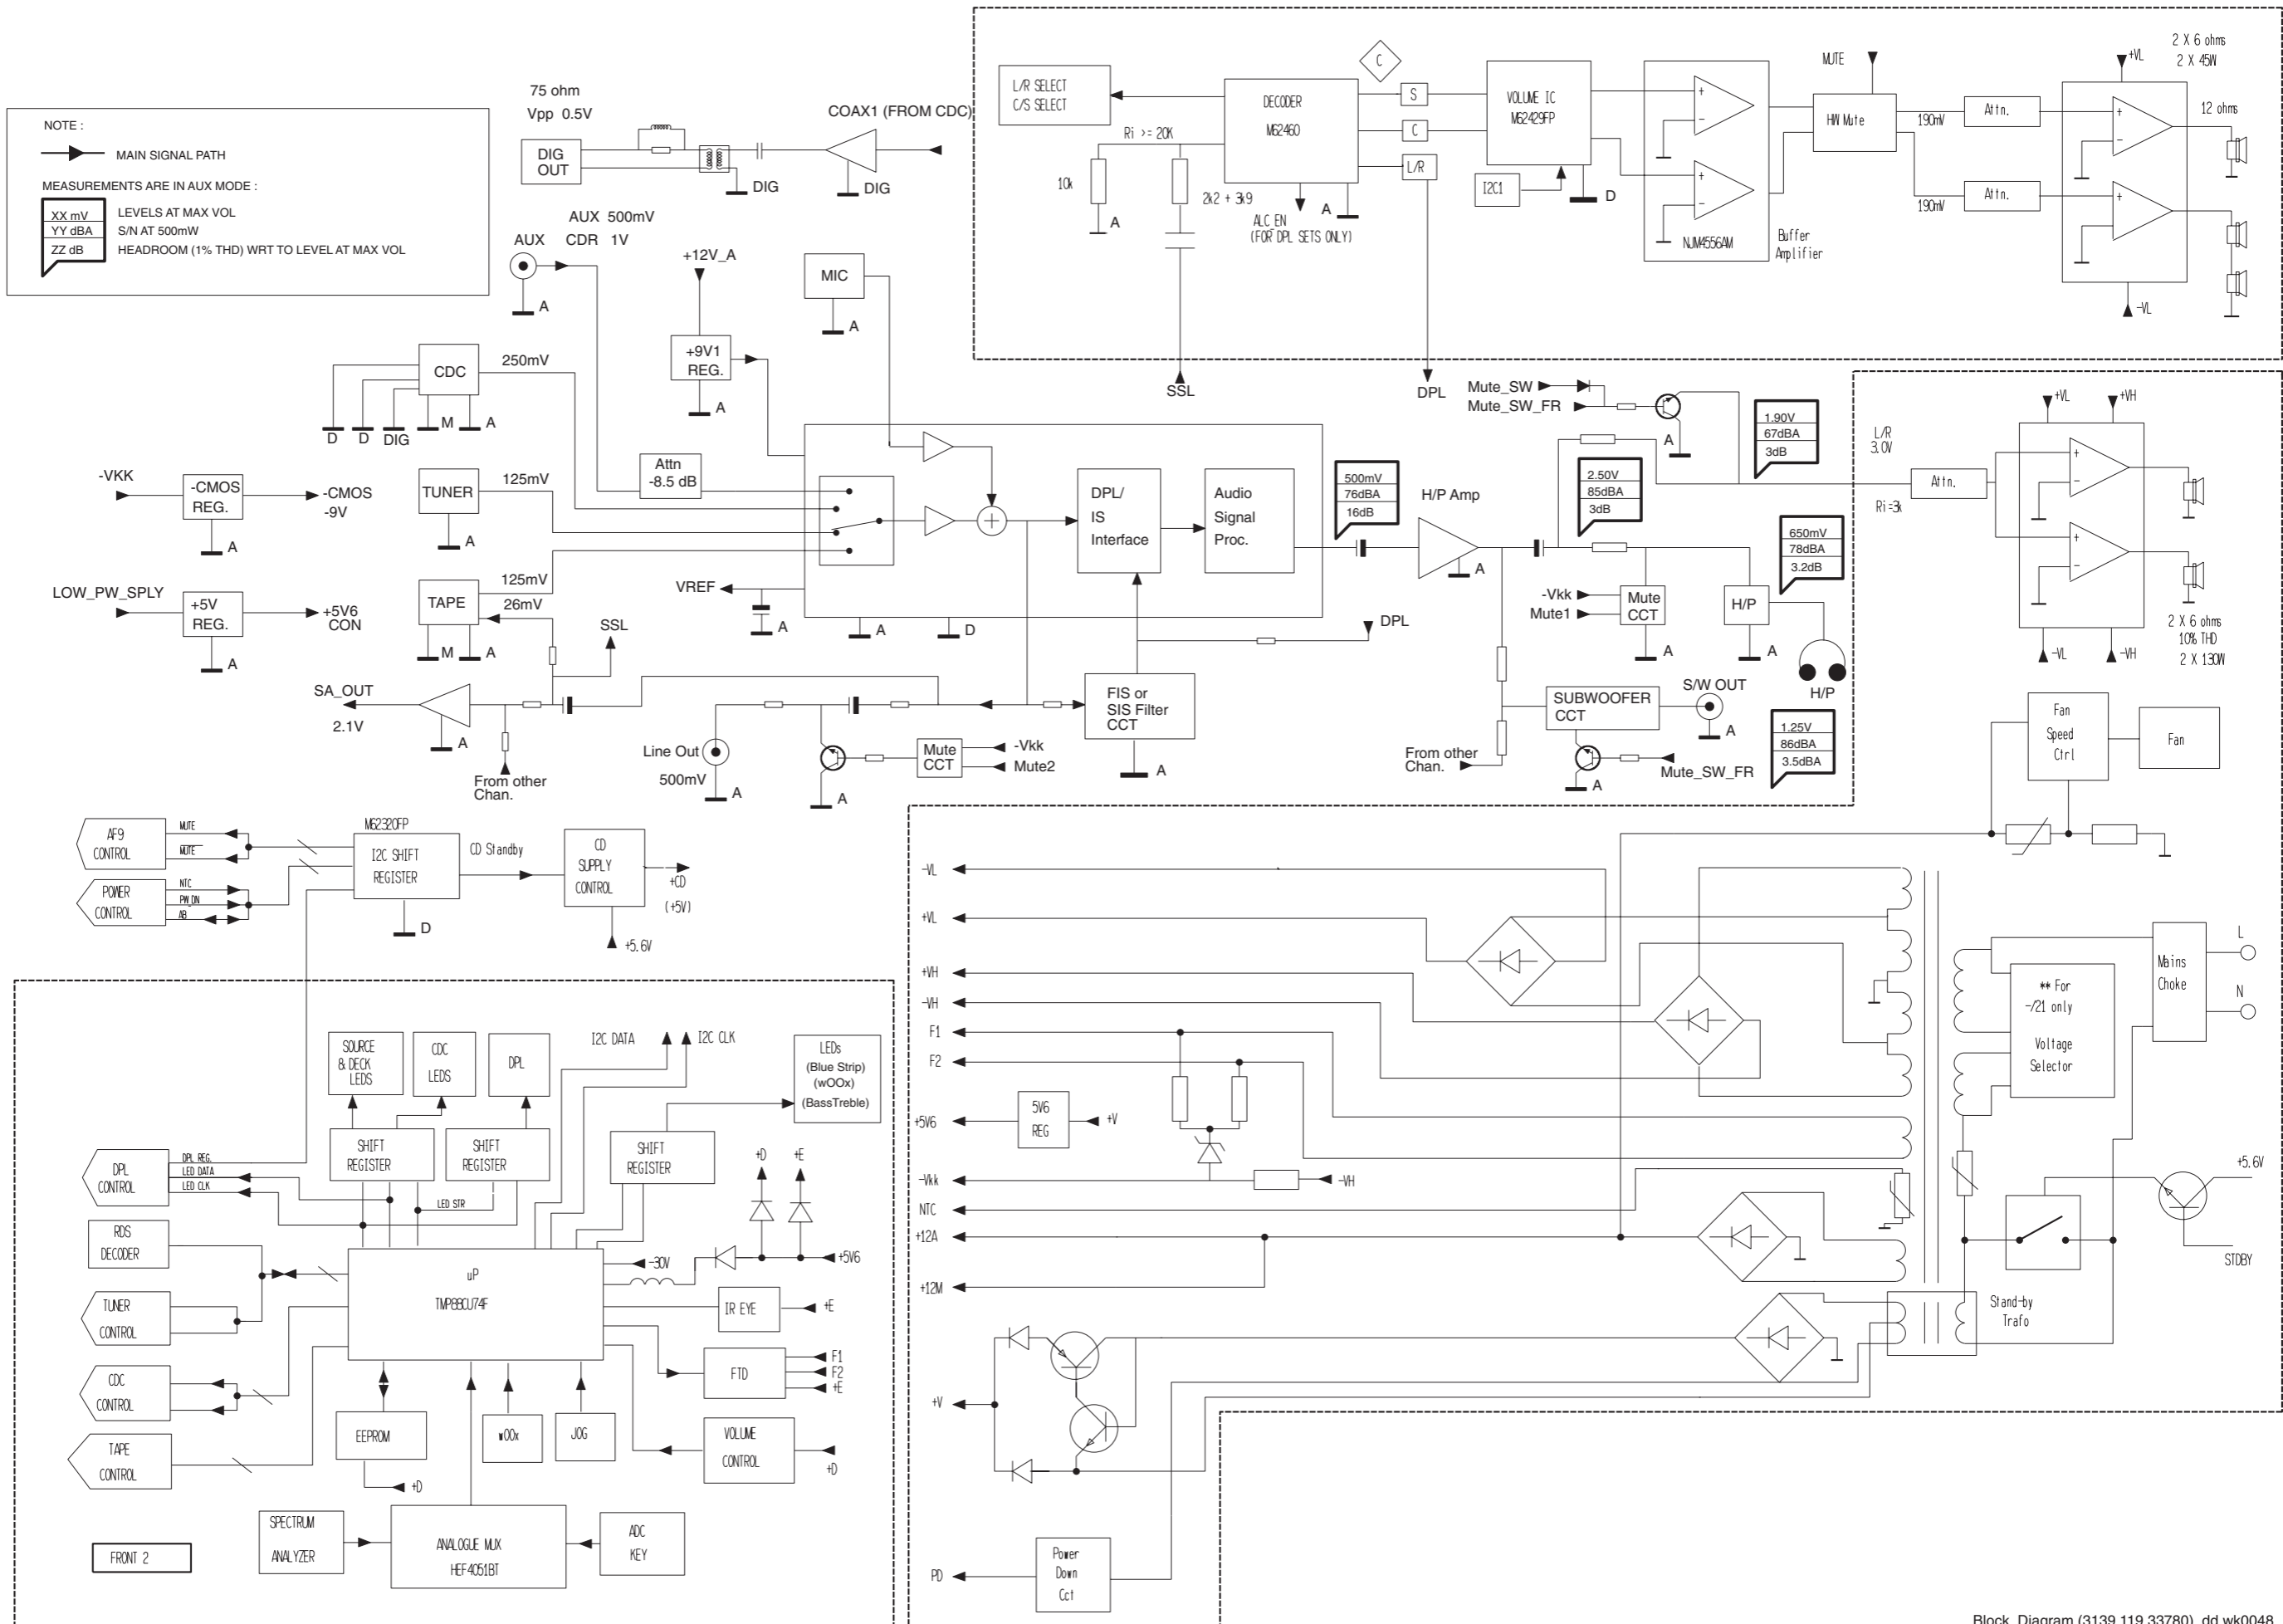

SET WIRING DIAGRAM

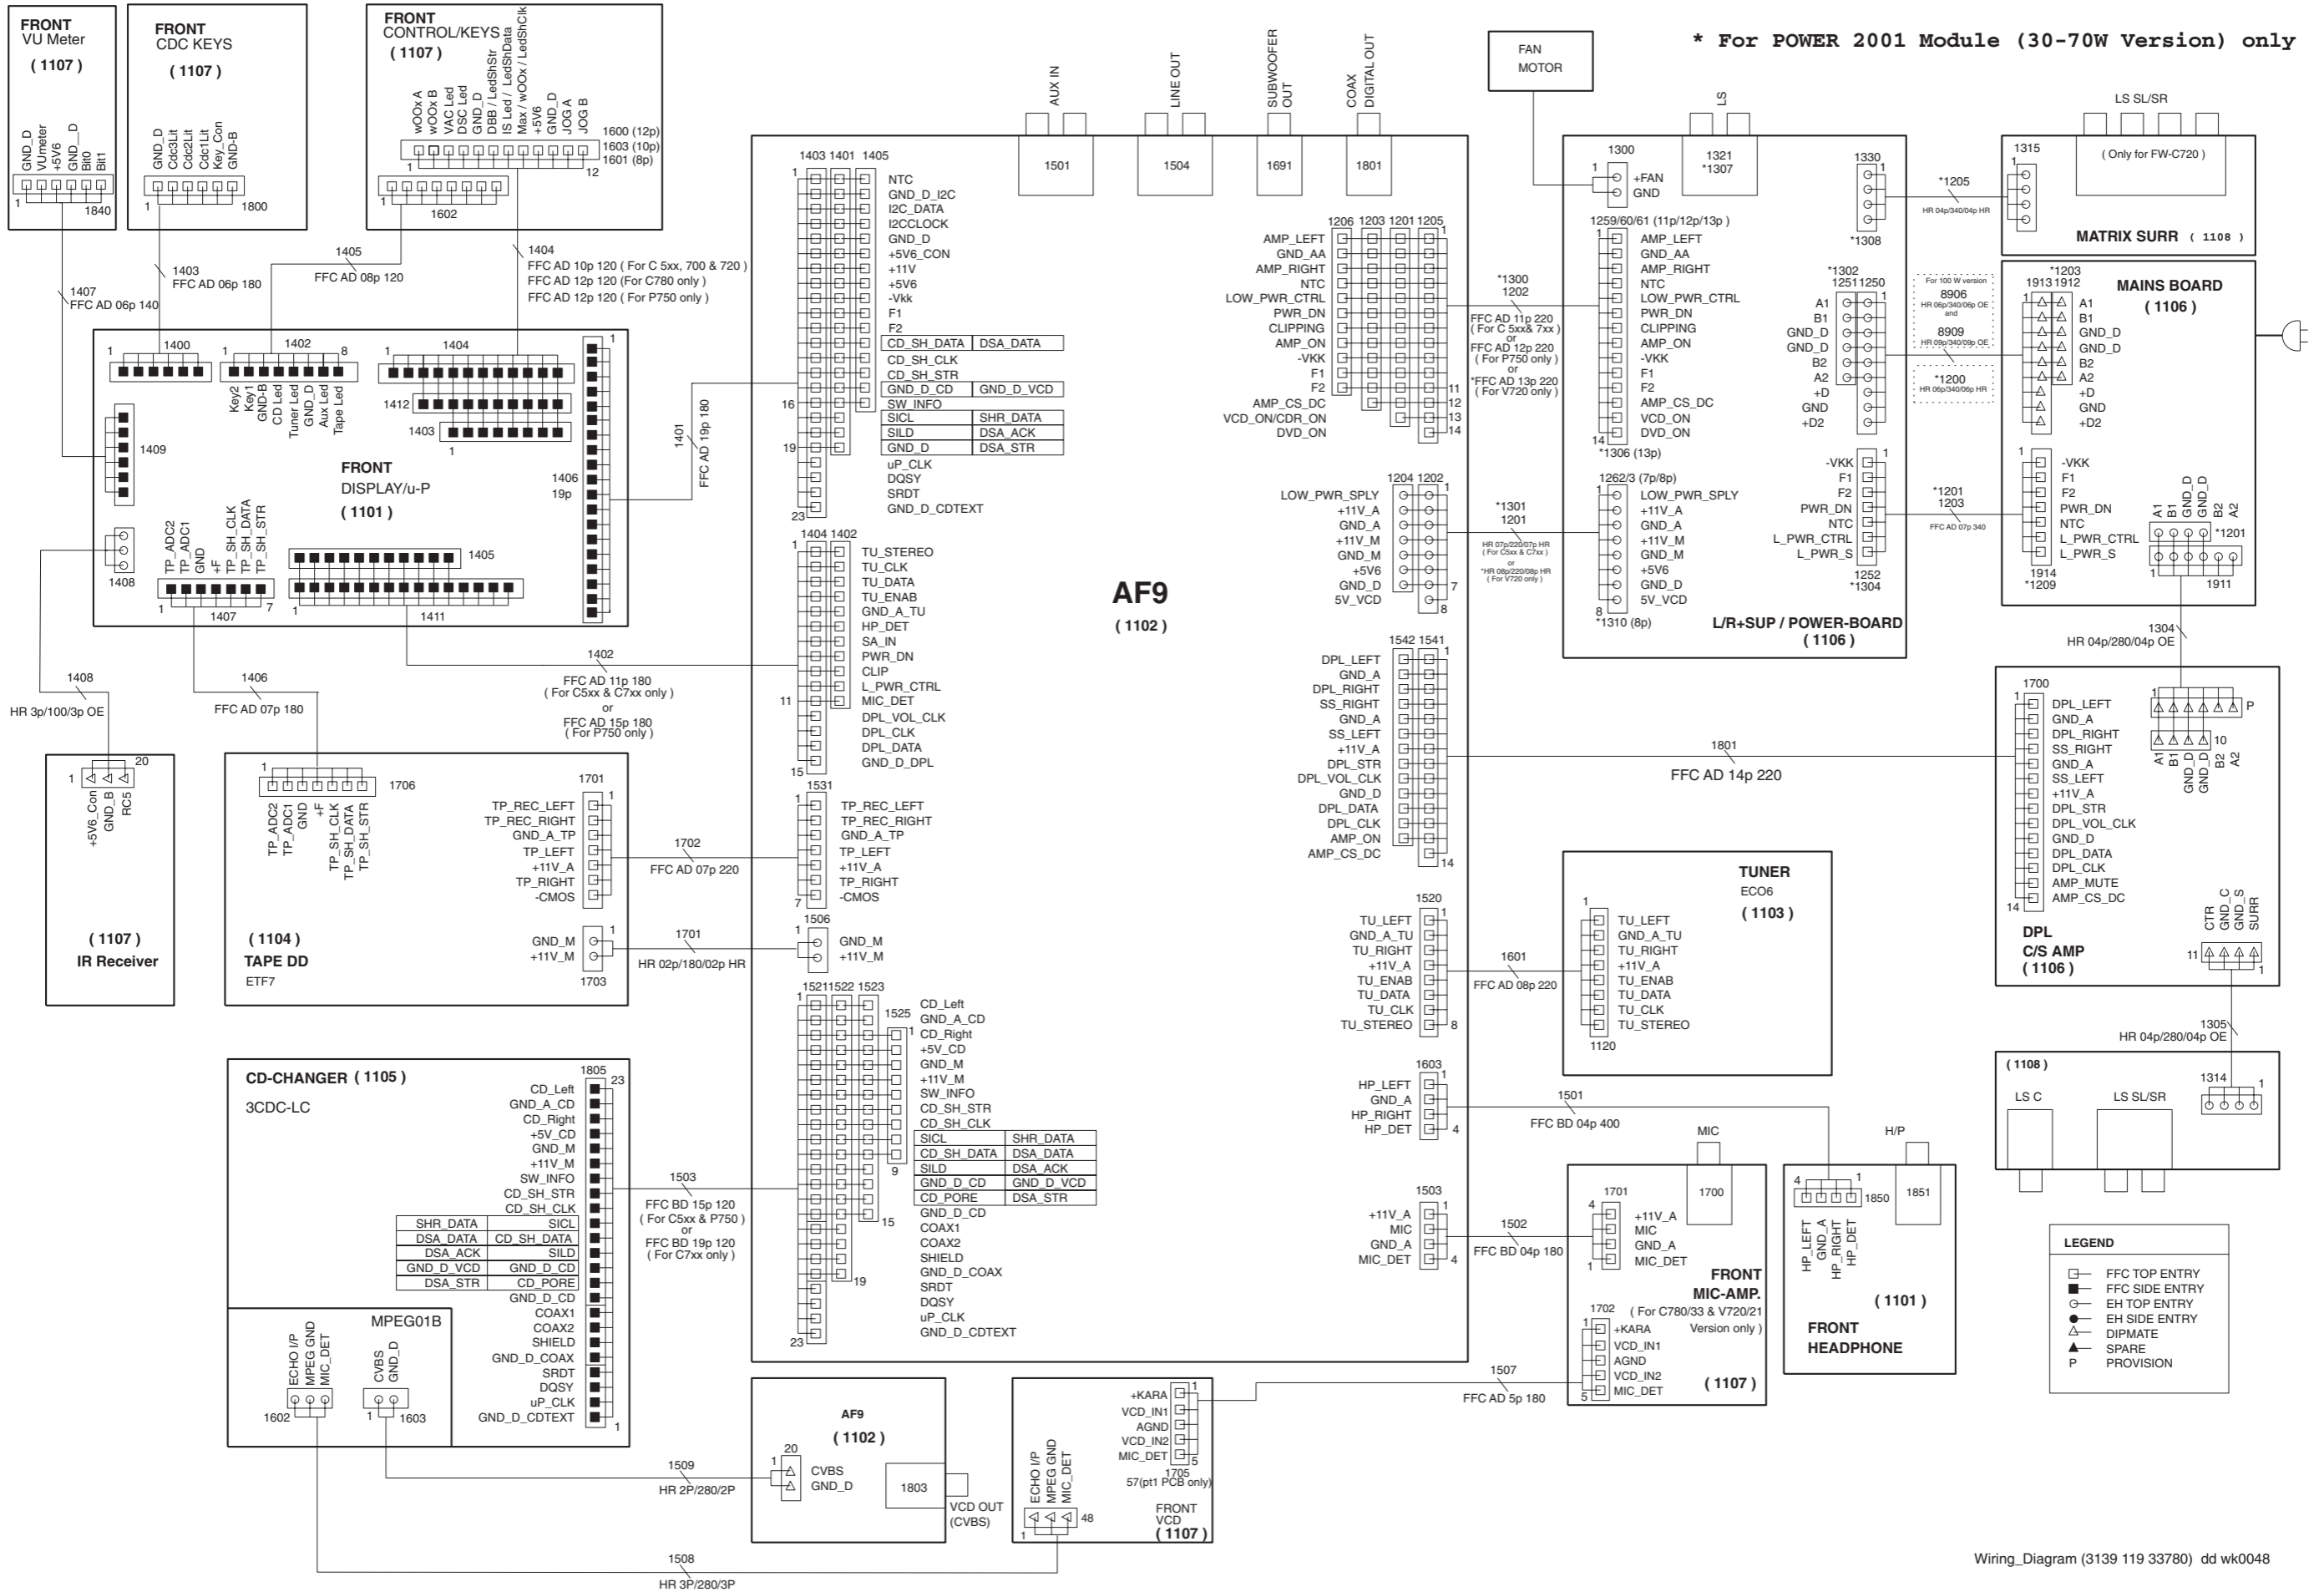

REMARKS :


FRONT CONTROL BOARD

TABLE OF CONTENTS

Front Control Board - Component & Chip layout	5-2
Front Control Board - Circuit diagram	5-3
IR-Eye Part - Layout & Circuit diagram	5-3
Key-CDC Part - Layout & Circuit diagram	5-4
VU Meter Part - Layout & Circuit diagram	5-4
Karaoke Part - Layout & Circuit diagram	5-5
Electrical parts list	5-5


FRONT CONTROL BOARD - COMPONENT LAYOUT

1600 B6 1650 B2 1654 B3 1658 B1 1662 B7 1666 B6 1670 A3 1674 A2 2615 A7 5601 A6 6605 A3 6612 B7 6622 A4 9602 B3 9606 A5 9610 A6 9615 A6 9620 A7 9625 B7
 1601 B6 1651 B2 1655 B3 1659 B1 1663 B7 1667 B5 1671 A3 1675 A1 2620 A6 6602 A6 6606 A3 6613 B6 6623 A4 9603 B3 9607 B5 9611 A6 9616 A6 9621 A7 9626 B7
 1602 B2 1652 B3 1656 A2 1660 A1 1664 A7 1668 B5 1672 A3 1690 A7 3600 B6 6603 B3 6610 B7 6620 A5 6624 A5 9604 A4 9608 A5 9613 B1 9617 B6 9622 A7 9628 A7
 1603 B6 1653 B4 1657 A2 1661 A1 1665 A4 1669 B5 1673 A3 1691 A5 3618 B7 6604 B3 6611 A7 6621 A5 9601 B2 9605 A4 9609 A5 9614 A6 9618 B6 9623 B6

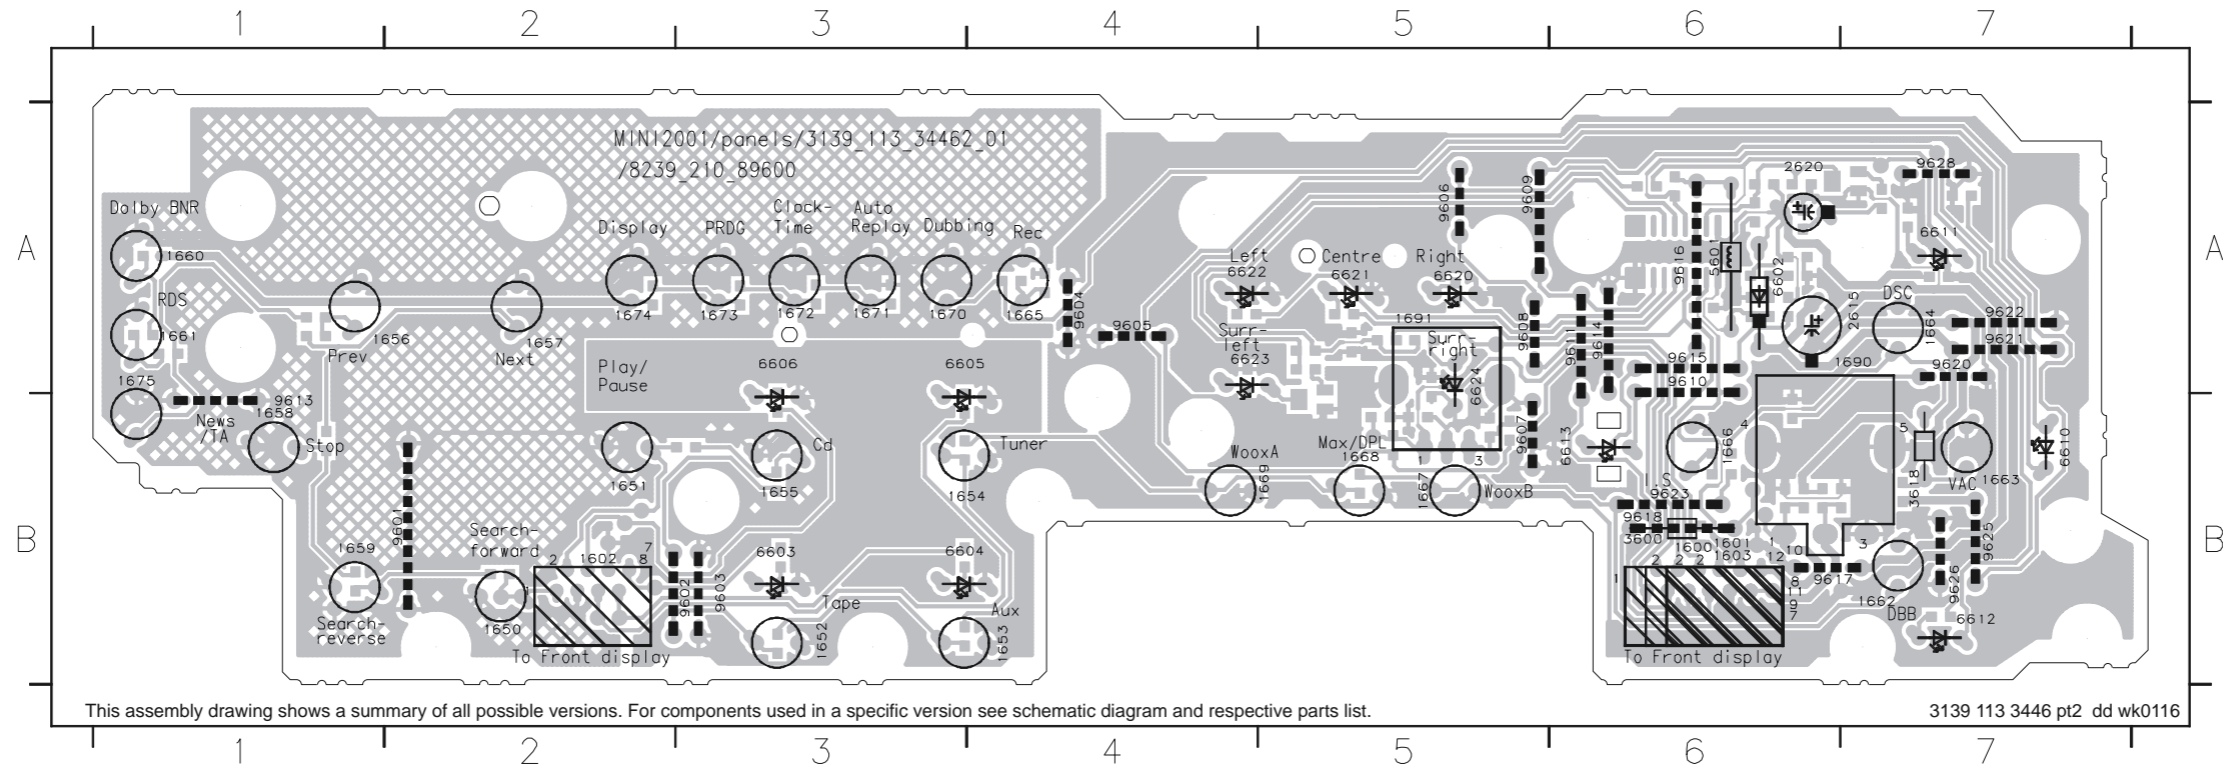


FRONT CONTROL BOARD - CHIP LAYOUT

2600 B2 2606 B2 2622 A2 3604 B3 3608 A2 3612 B5 3616 B2 3621 B5 3630 B6 3634 A7 3638 A6 3644 A4 3648 A2 3652 A1 4600 A2 4604 A1 4627 A3 7650 A1
 2603 A2 2607 B1 2623 A2 3605 B3 3609 A2 3613 B5 3617 B2 3622 B5 3631 B7 3635 A7 3639 A5 3645 A3 3649 A1 3653 B1 4601 B3 4605 A3 4628 A3
 2604 B3 2608 A4 2624 A2 3606 B2 3610 B5 3614 B5 3619 B1 3623 B5 3632 B7 3636 A7 3640 A5 3646 A4 3650 A2 3654 A2 4602 B2 4606 A3 7601 A2
 2605 B3 2613 A5 2625 A2 3607 B2 3611 B5 3615 B3 3620 A4 3624 B5 3633 A7 3637 A7 3643 A3 3647 A3 3651 A1 3655 A3 4603 A2 4607 A2 7602 B3

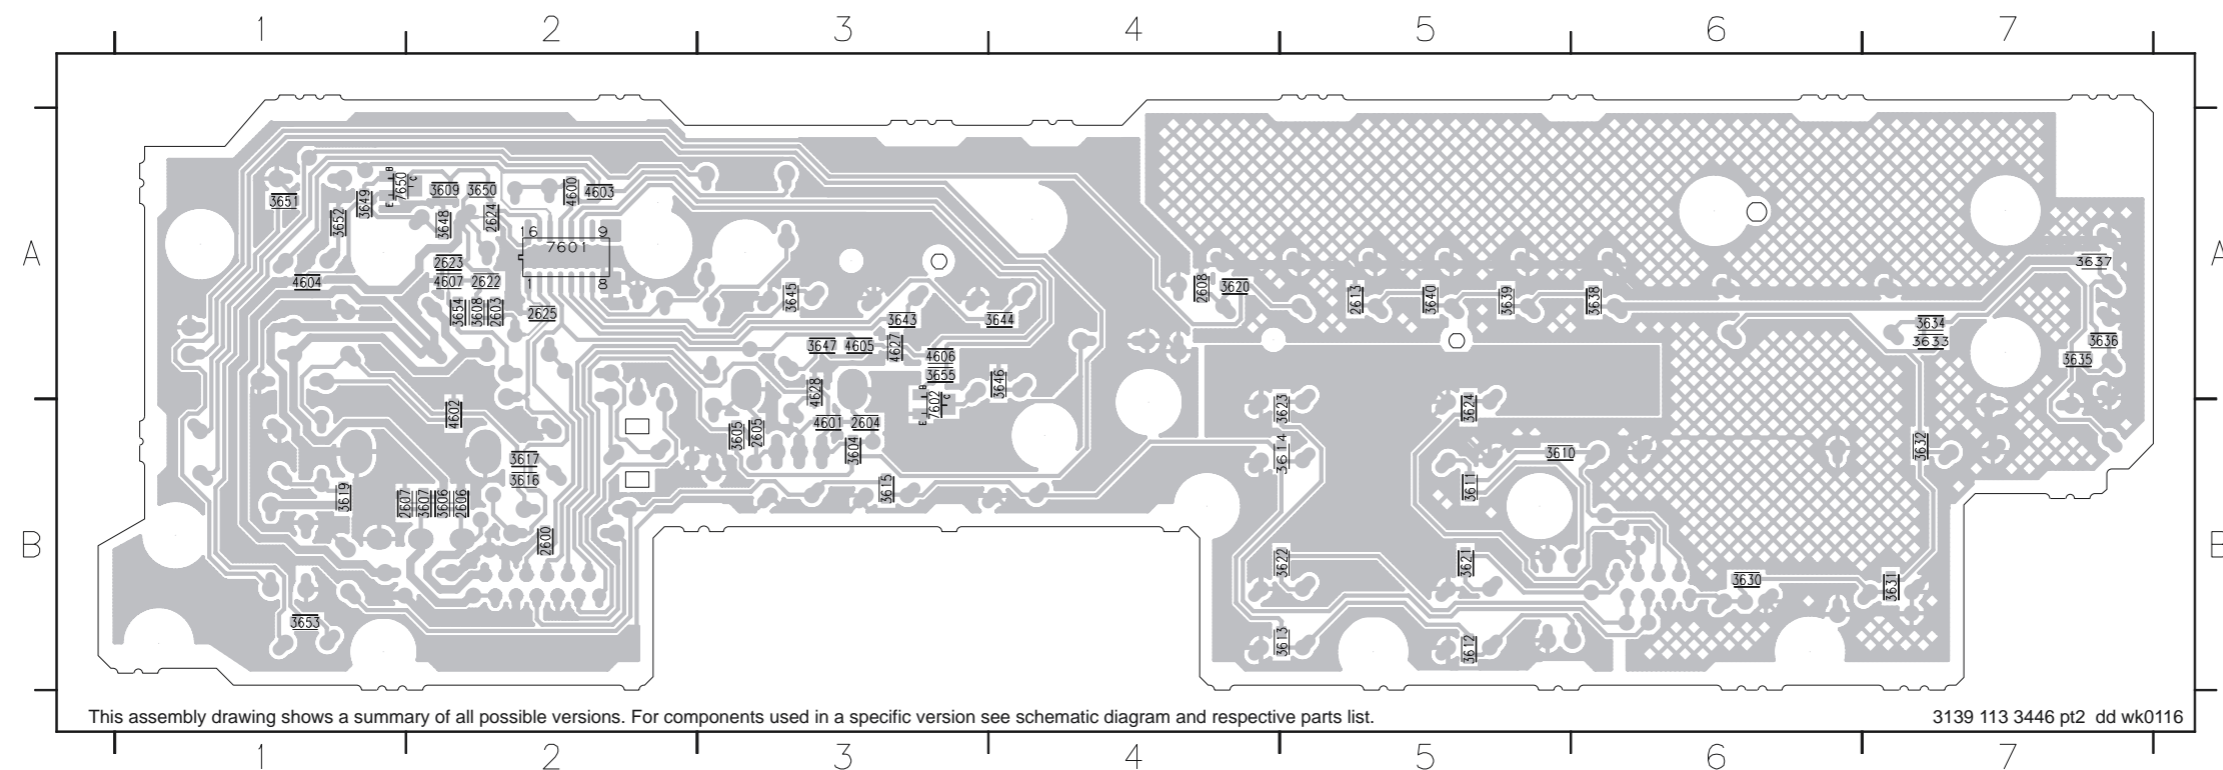

FRONT CONTROL BOARD - CIRCUIT DIAGRAM

1600 F1	1653 C3	1660 D5	1667 C4	1674 D5	2605 B4	2622 F6	3606 A2	3613 C3	3620 C7	3632 D3	3639 D6	3648 G3	3655 H6	6604 E4	6621 G7	9610 G2
1601 H2	1654 C3	1661 D4	1668 C4	1675 D4	2606 B2	2623 F7	3607 A2	3614 C4	3621 E4	3633 D3	3640 D6	3649 F3	4600 G2	6605 E4	6622 G7	9618 G2
1602 D1	1655 C2	1662 C5	1669 C4	1690 B1	2607 B2	2624 G4	3608 G5	3615 C4	3622 E4	3634 D4	3643 G6	3650 F3	4605 H5	6606 E4	6623 H7	
1603 H1	1656 D3	1663 C6	1670 C6	1691 A3	2608 C7	2625 G4	3609 G4	3616 C5	3623 E4	3635 D4	3644 G6	3651 H3	4606 H6	6610 H3	6624 H7	
1650 D2	1657 D3	1664 C6	1671 D6	2600 G5	2613 D6	3600 G2	3610 C2	3617 C5	3624 E4	3636 D4	3645 G6	3652 H3	5601 F5	6611 H3	7601 F5	
1651 C2	1658 D3	1665 C7	1672 D6	2603 G5	2615 A4	3604 A4	3611 C3	3618 C6	3630 D2	3637 D5	3646 H7	3653 H3	6602 A4	6613 H3	7602 H7	
1652 C3	1659 D2	1666 C5	1673 D5	2604 B4	2620 F3	3605 A4	3612 C3	3619 C6	3631 D3	3638 D5	3647 H6	3654 H3	6603 E4	6620 G7	7650 F3	


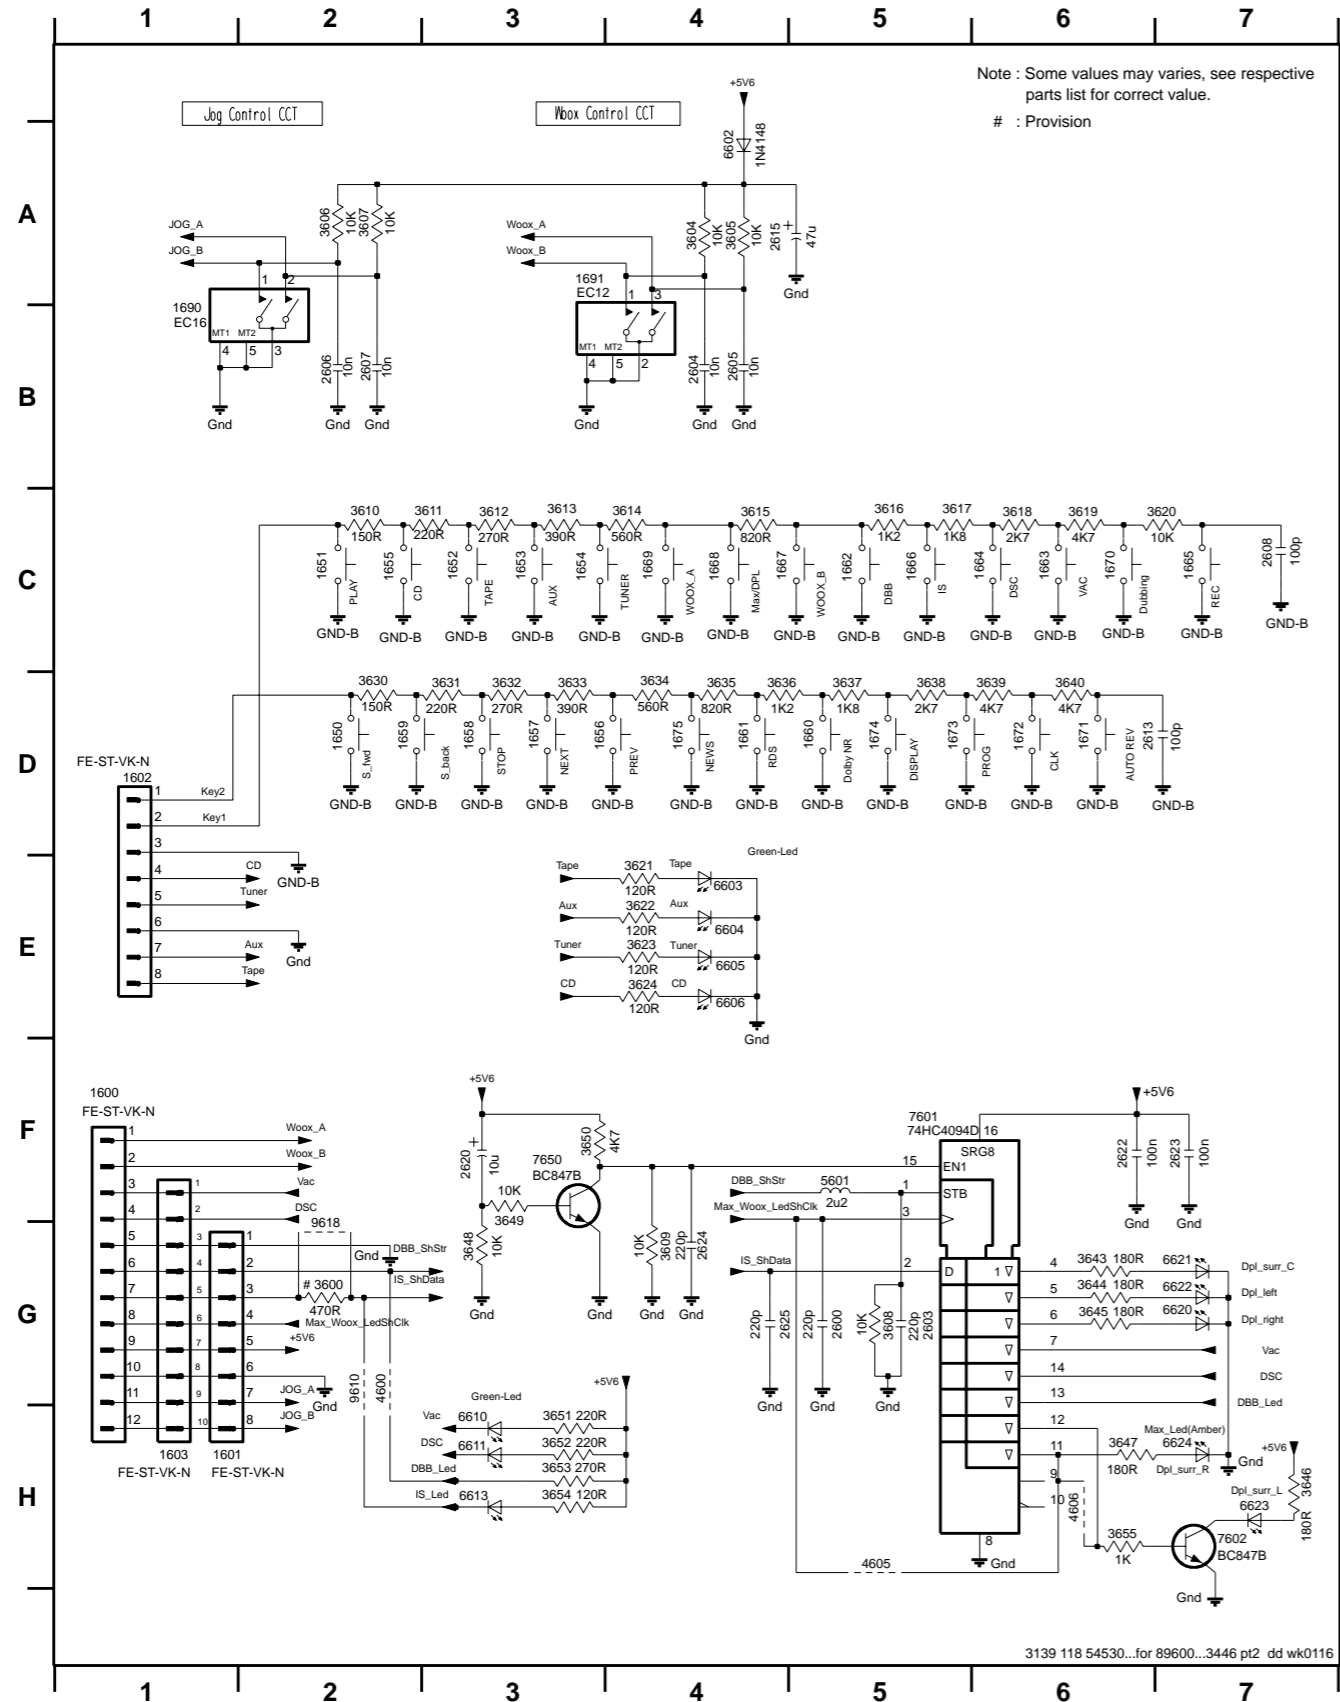


IR-EYE BOARD - COMPONENT LAYOUT

IR-EYE BOARD - CHIP LAYOUT


20 A2 3862 A2 9600 A1
2860 A2 7800 A1

2861 A1 2862 A2 3860 A1 3861 A2

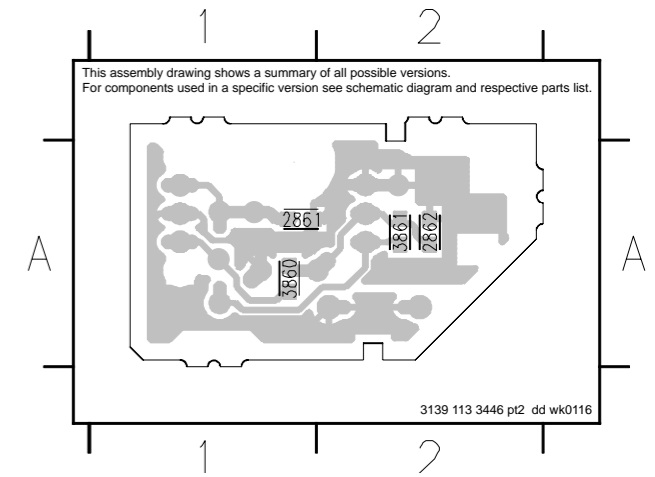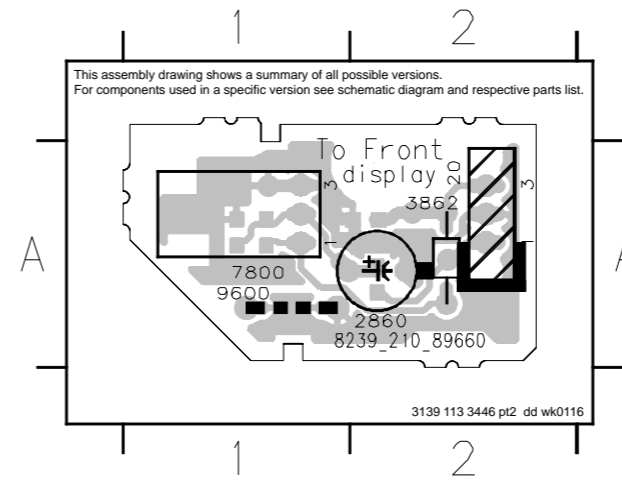


IR-EYE BOARD - CIRCUIT DIAGRAM


20 A1 2860 A2 2861 B1 2862 A1 3860 A1 3861 A2 3862 B2 7800 A2

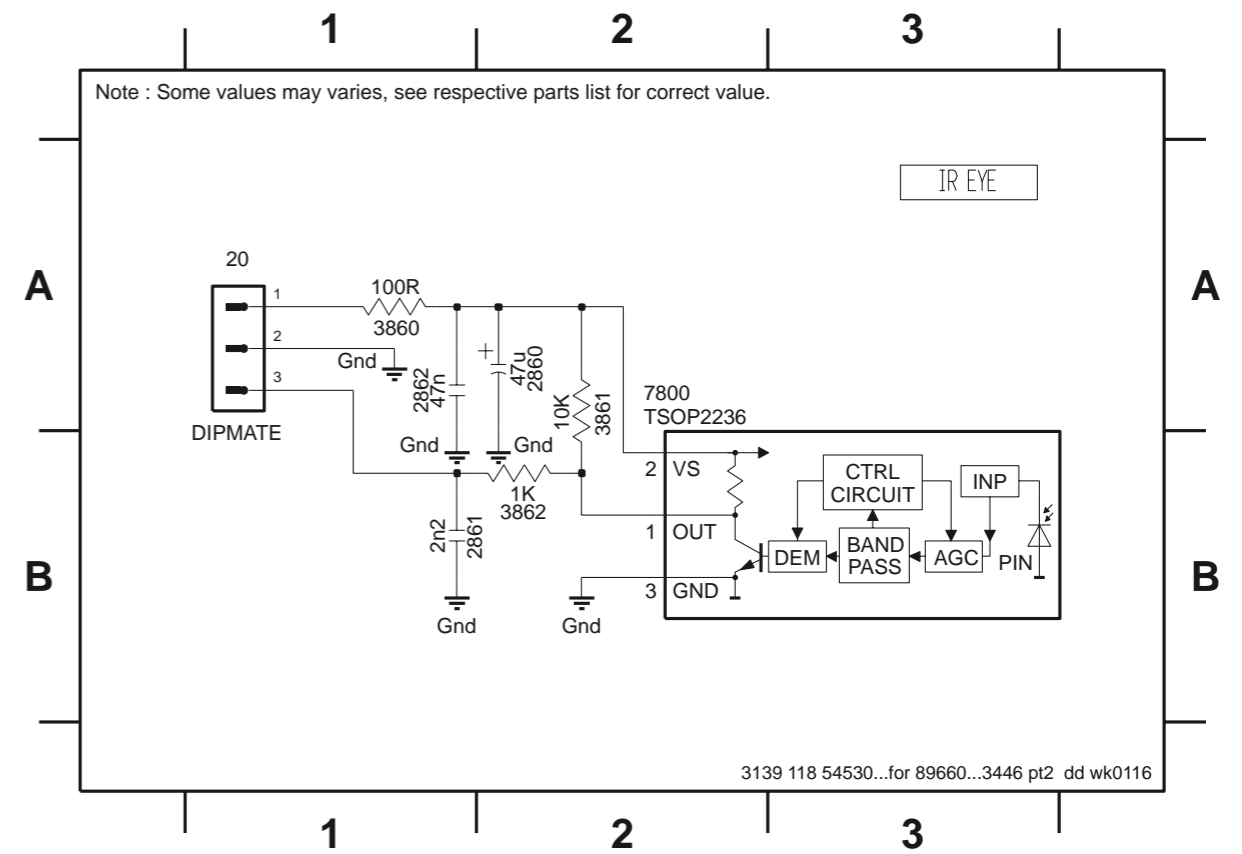


KEY-CDC BOARD - COMPONENT LAYOUT

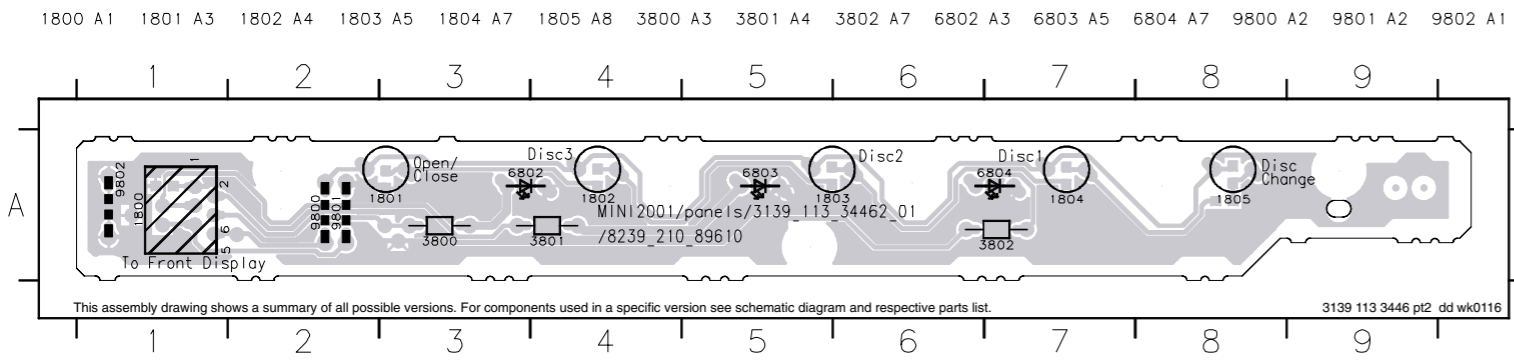


KEY-CDC BOARD - CHIP LAYOUT

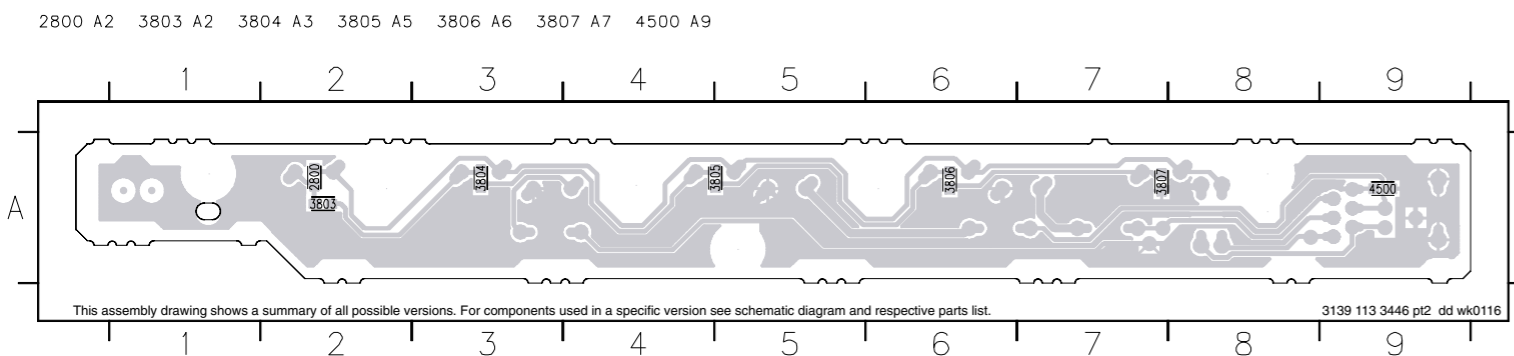


VU METER BOARD - COMPONENT LAYOUT

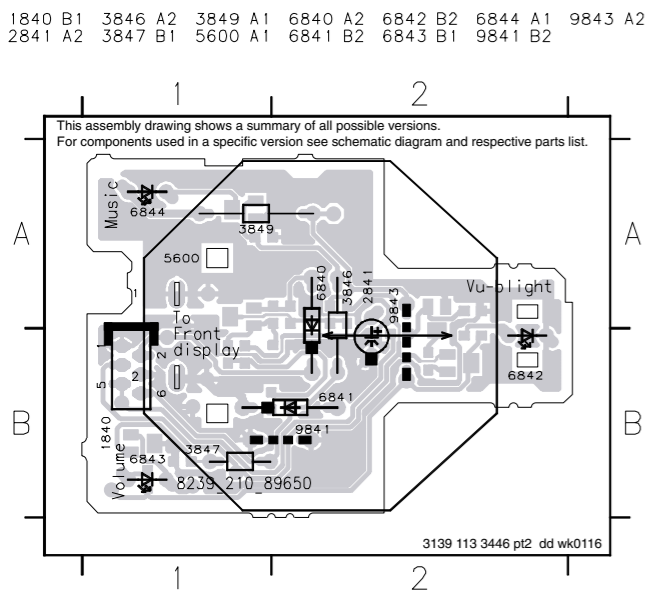


VU METER BOARD - CHIP LAYOUT

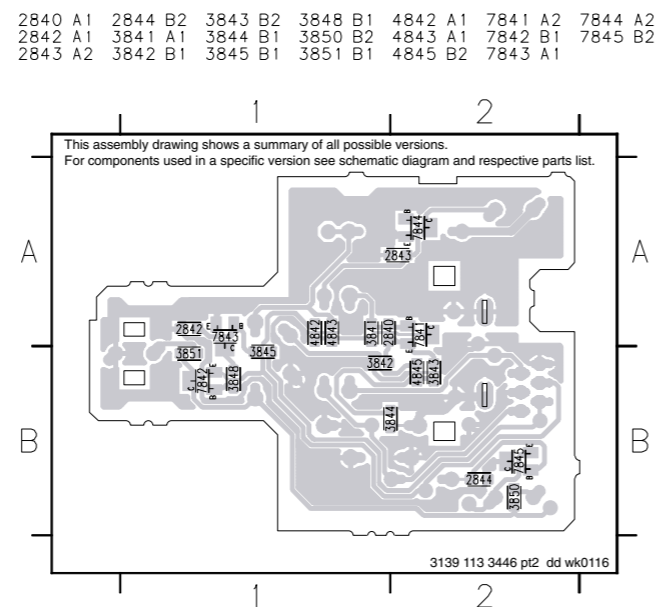

KEY-CDC BOARD - CIRCUIT DIAGRAM

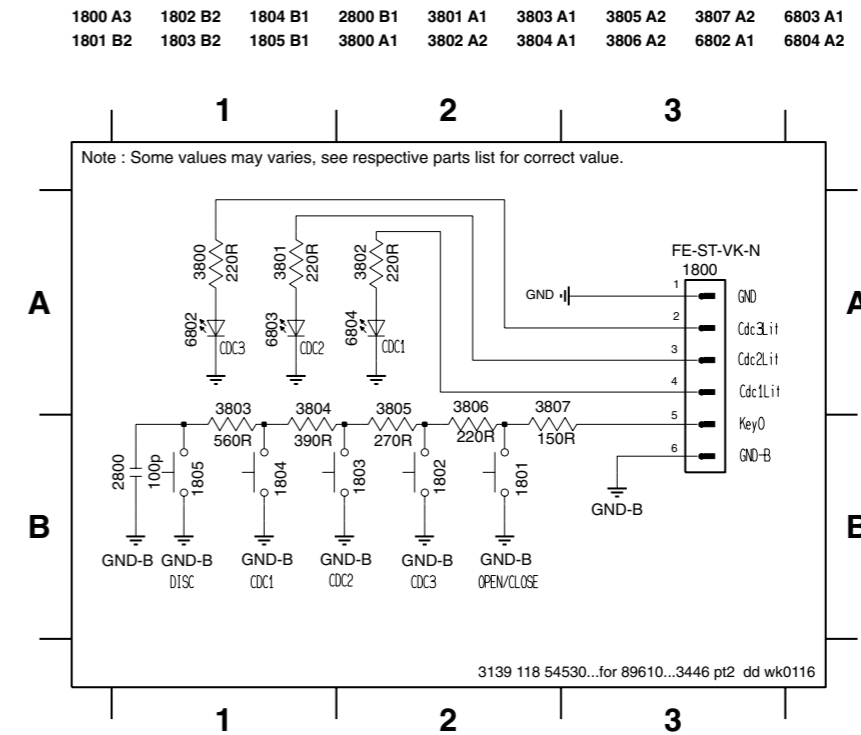


VU METER BOARD - CIRCUIT DIAGRAM

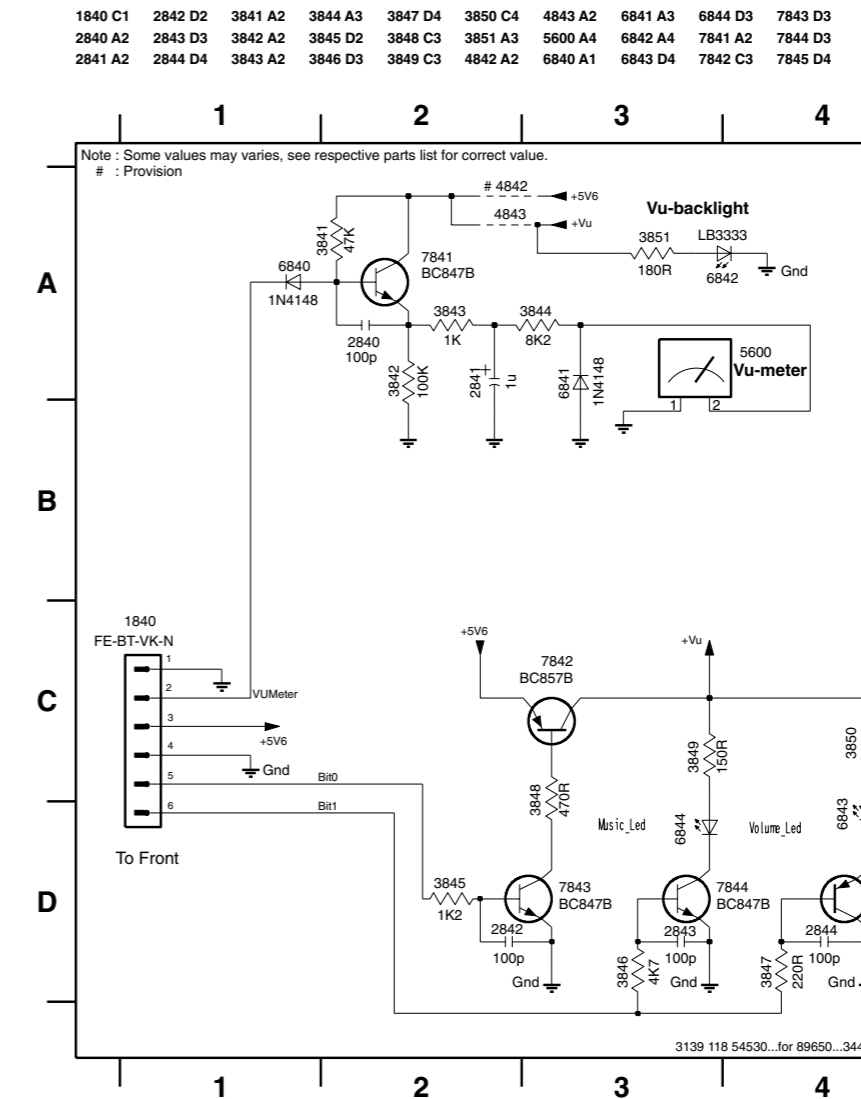


KARAOKE BOARD - COMPONENT LAYOUT

- 1700 A2 2701 A2 3700 A2 5700 A2 6701 A1 9702 A2
- 1701 A2 2706 A2 3706 A2 5702 A2 7700 A1
- 1702 A2 2708 A1 3707 A1 6700 A1 7701 A1

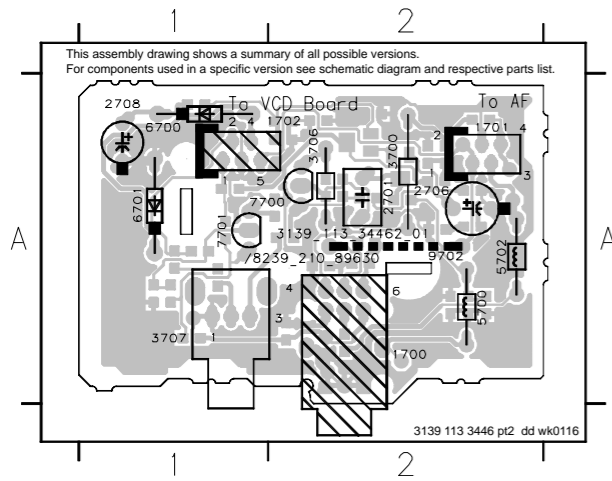


KARAOKE BOARD - CHIP LAYOUT

- 2/00 A1 2/19 A2 3/05 A1 3/14 A1 4/09 A1 4/21 A1
- 2702 A1 2720 A1 3709 A2 3715 A2 4710 A1 4723 A1
- 2703 A1 3701 A1 3710 A1 4704 A1 4711 A1 4724 A2
- 2704 A2 3702 A1 3711 A2 4705 A1 4713 A1 4726 A1
- 2705 A2 3703 A1 3712 A1 4707 A1 4714 A2 7702 A1
- 2707 A1 3704 A1 3713 A1 4708 A2 4715 A1 7703 A1

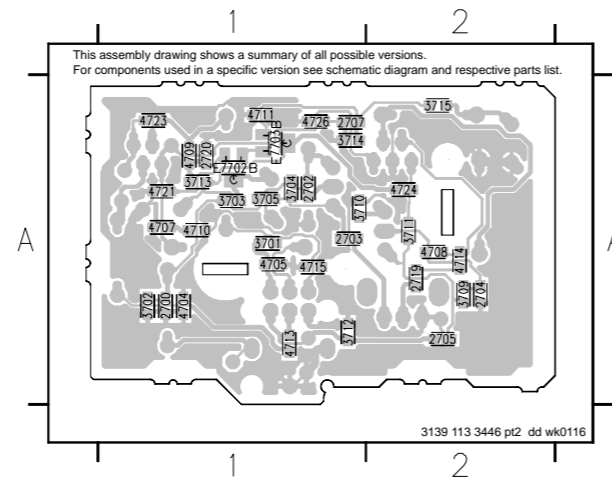


KARAOKE BOARD - CIRCUIT DIAGRAM

- 1700 C1 2700 C1 2703 C3 2706 A3 2719 C3 3701 C2 3704 C2 3707 C3 3711 B4 3714 E3 5700 C1 6701 E4 7702 E2
- 1701 A4 2701 C2 2704 C3 2707 E2 2720 B2 3702 C1 3705 B2 3709 B4 3712 C4 3715 E3 5702 A4 7700 C2 7703 E2
- 1702 D4 2702 C2 2705 B4 2708 E3 3700 B1 3703 C2 3706 C2 3710 C4 3713 A4 4708 C3 6700 E3 7701 C4 9702 A4

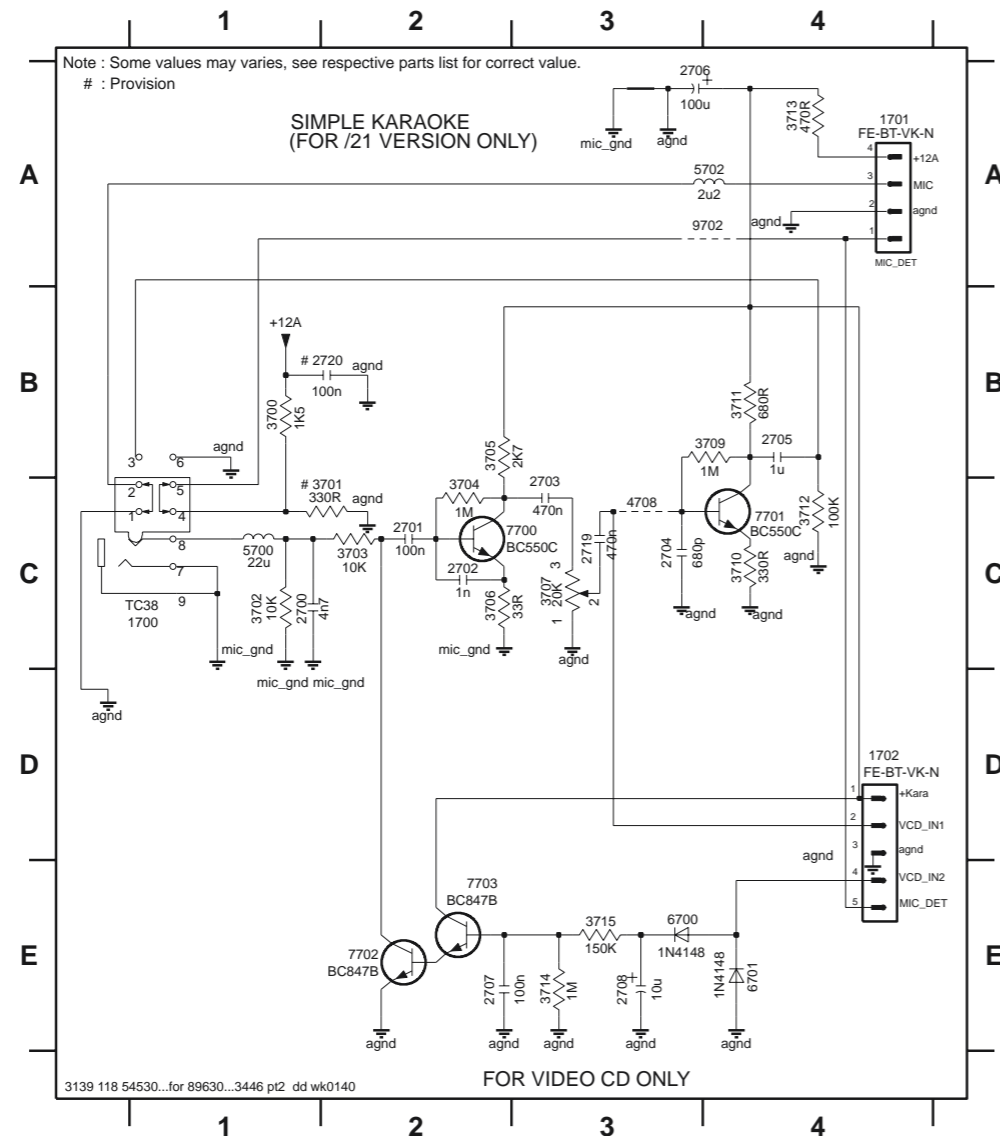


VCD INTERFACE BOARD - COMPONENT LAYOUT

- 48 A2 57 A2 9750 A2

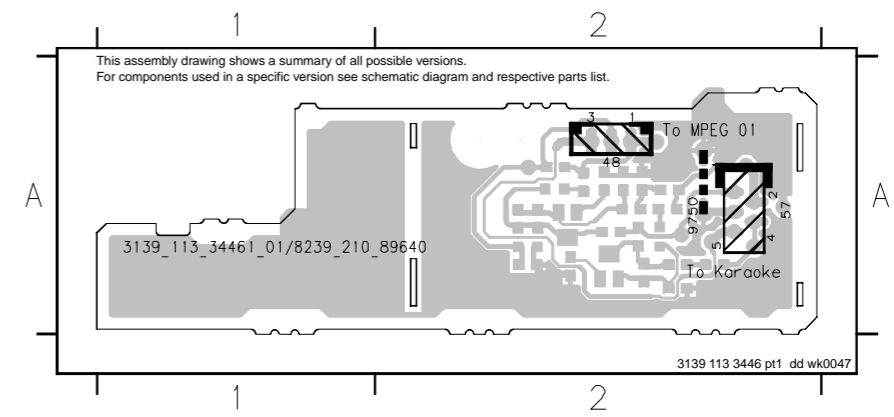


VCD INTERFACE BOARD - CHIP LAYOUT

- 2709 A1 2713 A1 2717 A1 3719 A1 3724 A1 4725 A1
- 2710 A1 2714 A1 2718 A1 3721 A1 4700 A1 7704 A1
- 2711 A1 2715 A1 3717 A1 3722 A1 4716 A1 7705 A1
- 2712 A1 2716 A1 3718 A1 3723 A1 4720 A1

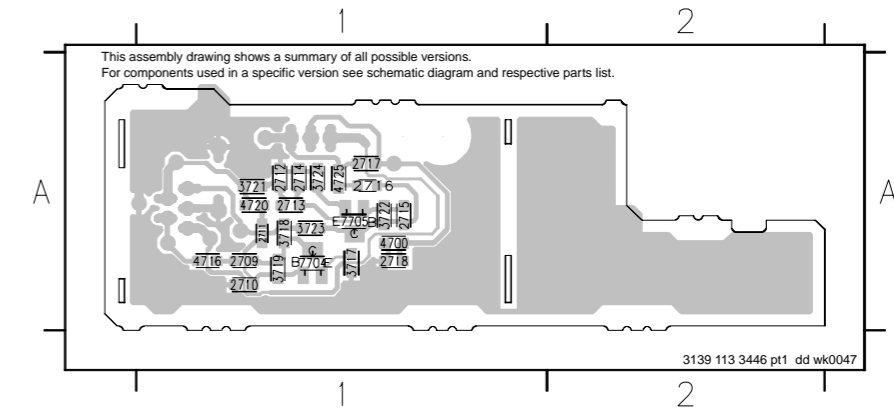

VCD INTERFACE BOARD - CIRCUIT DIAGRAM

- 48 B4 2709 B1 2711 B2 2713 B3 2715 A3 2717 B4 3717 B1 3719 B1 3722 B3 3724 B3 4716 B1 4725 B4 7705 B3
- 57 A1 2710 B1 2712 B3 2714 B3 2716 B4 2718 C4 3718 A1 3721 B2 3723 A3 4700 C4 4720 B2 7704 B1

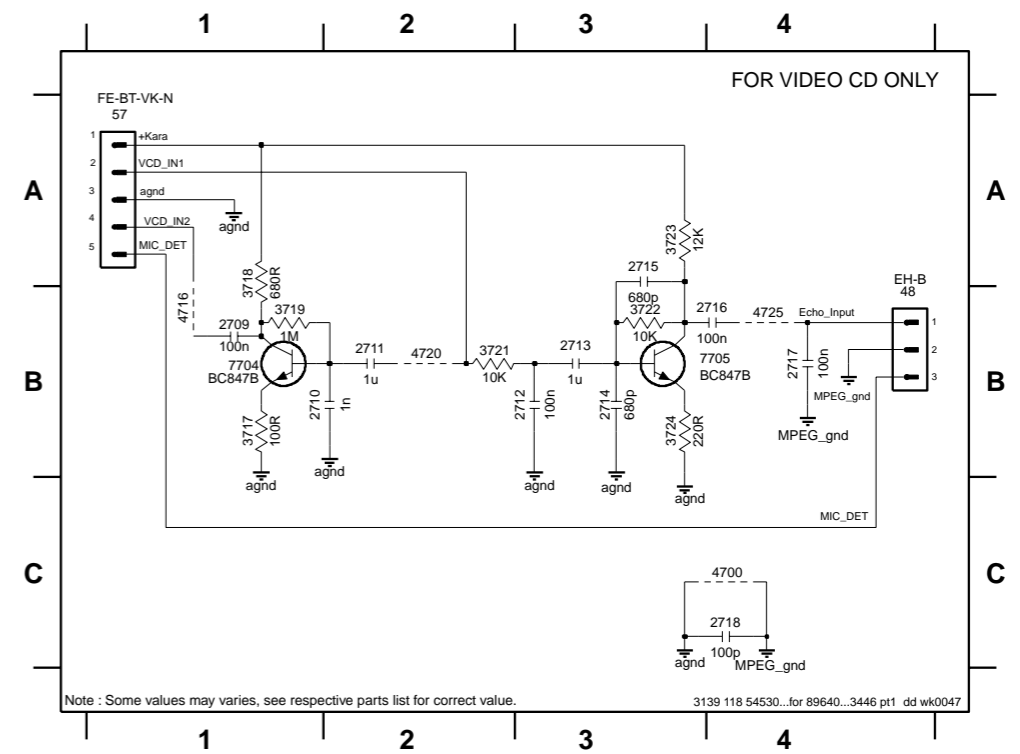

ELECTRICAL PARTS LIST - FRONT CONTROL BOARD**MISCELLANEOUS**

1602	4822 265 11535	Flex Connector 8P
1603	4822 265 11208	Flex Connector 10P
1650	4822 276 13775	Tact Switch
1651	4822 276 13775	Tact Switch
1652	4822 276 13775	Tact Switch
1653	4822 276 13775	Tact Switch
1654	4822 276 13775	Tact Switch
1655	4822 276 13775	Tact Switch
1656	4822 276 13775	Tact Switch
1657	4822 276 13775	Tact Switch
1658	4822 276 13775	Tact Switch
1659	4822 276 13775	Tact Switch
1661	4822 276 13775	Tact Switch /22
1663	4822 276 13775	Tact Switch
1664	4822 276 13775	Tact Switch
1665	4822 276 13775	Tact Switch
1666	4822 276 13775	Tact Switch
1667	4822 276 13775	Tact Switch
1669	4822 276 13775	Tact Switch
1670	4822 276 13775	Tact Switch
1671	4822 276 13775	Tact Switch
1672	4822 276 13775	Tact Switch
1673	4822 276 13775	Tact Switch
1674	4822 276 13775	Tact Switch
1675	4822 276 13775	Tact Switch /22
1690	2422 129 16385	Rotary Encoder 12P
1800	4822 265 11207	Flex Connector 6P
1801	4822 276 13775	Tact Switch
1802	4822 276 13775	Tact Switch
1803	4822 276 13775	Tact Switch
1804	4822 276 13775	Tact Switch
1805	4822 276 13775	Tact Switch
1840	4822 267 10731	Flex Connector 6P

CAPACITORS

2606	5322 126 11583	10nF 10% 50V
2607	5322 126 11583	10nF 10% 50V
2608	4822 122 31765	100pF 2% 63V
2613	4822 122 31765	100pF 2% 63V
2615	4822 124 12233	47µF 20% 25V
2622	4822 126 14305	100nF 10% 16V
2623	4822 126 14305	100nF 10% 16V
2800	4822 122 31765	100pF 2% 63V
2840	4822 122 31765	100pF 2% 63V
2841	4822 124 22651	1µF 20% 50V
2842	4822 122 31765	100pF 2% 63V
2843	4822 122 31765	100pF 2% 63V
2844	4822 122 31765	100pF 2% 63V
2860	4822 124 81286	47µF 20% 16V
2861	4822 126 14238	2,2nF 50V
2862	3198 017 34730	47nF 16V

RESISTORS

3606	4822 051 30103	10k 5% 0,062W
3607	4822 051 30103	10k 5% 0,062W
3610	4822 051 30151	150R 5% 0,062W
3611	4822 051 30221	220R 5% 0,062W
3612	4822 051 30271	270R 5% 0,062W
3613	4822 051 30391	390R 5% 0,062W
3614	4822 051 30561	560R 5% 0,062W
3615	4822 117 12968	820R 5% 0,62W
3616	4822 117 11817	1k2 1% 1/16W
3617	4822 117 12903	1k8 1% 0,063W
3618	4822 116 52263	2k7 5% 0,5W
3619	4822 051 30472	4k7 5% 0,062W
3620	4822 051 30103	10k 5% 0,062W
3621	4822 051 30121	120R 5% 0,062W
3622	4822 051 30121	120R 5% 0,062W
3623	4822 051 30121	120R 5% 0,062W
3624	4822 051 30121	120R 5% 0,062W
3630	4822 051 30151	150R 5% 0,062W
3631	4822 051 30221	220R 5% 0,062W
3632	4822 051 30271	270R 5% 0,062W
3633	4822 051 30391	390R 5% 0,062W
3634	4822 051 30561	560R 5% 0,062W
3635	4822 117 12968	820R 5% 0,62W
3636	4822 117 11817	1k2 1% 1/16W
3637	4822 117 12903	1k8 1% 0,063W
3638	4822 051 30272	2k7 5% 0,062W
3639	4822 051 30472	4k7 5% 0,062W
3640	4822 051 30103	10k 5% 0,062W
3646	4822 051 30181	180R 5% 0,062W
3651	4822 051 30221	220R 5% 0,062W
3652	4822 051 30221	220R 5% 0,062W
3653	4822 051 30271	270R 5% 0,062W
3654	4822 051 30121	120R 5% 0,062W
3655	4822 051 30102	1k 5% 0,062W
3800	4822 116 83872	220R 5% 0,5W
3801	4822 116 83872	220R 5% 0,5W
3802	4822 116 83872	220R 5% 0,5W
3803	4822 051 30561	560R 5% 0,062W
3804	4822 051 30391	390R 5% 0,062W
3805	4822 051 30271	270R 5% 0,062W
3806	4822 051 30221	220R 5% 0,062W
3807	4822 051 30151	150R 5% 0,062W
3841	4822 117 12925	47k 1% 0,063W
3842	4822 117 13632	100k 1% 0,62W
3843	4822 051 30102	1k 5% 0,062W
3844	4822 117 12902	8k2 1% 0,063W
3845	4822 117 11817	1k2 1% 1/16W
3846	4822 116 52283	4k7 5% 0,5W
3847	4822 116 83872	220R 5% 0,5W
3848	4822 051 30471	470R 5% 0,062W
3849	4822 116 83868	150R 5% 0,5W
3850	4822 051 30391	390R 5% 0,062W

ELECTRICAL PARTS LIST - FRONT CONTROL BOARD

3851	4822 051 30181	180R 5% 0,062W
3860	4822 051 30101	100R 5% 0,062W
3861	4822 051 30103	10k 5% 0,062W
3862	4822 050 11002	1k 1% 0,4W
4500	4822 051 30008	OR Jumper 0603
4600	4822 051 30008	OR Jumper 0603
4601	4822 051 30008	OR Jumper 0603
4602	4822 051 30008	OR Jumper 0603
4603	4822 051 30008	OR Jumper 0603
4604	4822 051 30008	OR Jumper 0603
4605	4822 051 30008	OR Jumper 0603
4606	4822 051 30008	OR Jumper 0603
4607	4822 051 30008	OR Jumper 0603
4627	4822 051 30008	OR Jumper 0603
4628	4822 051 30008	OR Jumper 0603
4843	4822 051 30008	OR Jumper 0603
4845	4822 051 30008	OR Jumper 0603

COILS & FILTERS

5600	3139 110 53000	METER VU P-47SI-W WHITE
------	----------------	-------------------------

DIODES




6602	4822 130 30621	1N4148
6603	4822 130 10791	LTL-1CHGE
6604	4822 130 10791	LTL-1CHGE
6605	4822 130 10791	LTL-1CHGE
6606	4822 130 10791	LTL-1CHGE
6610	4822 130 10791	LTL-1CHGE
6611	4822 130 10791	LTL-1CHGE
6613	4822 130 10791	LTL-1CHGE
6623	9322 153 37676	LB3333RT-E7898
6802	4822 130 10791	LTL-1CHGE
6803	4822 130 10791	LTL-1CHGE
6804	4822 130 10791	LTL-1CHGE
6840	4822 130 30621	1N4148
6841	4822 130 30621	1N4148
6842	9322 153 37676	LB3333RT-E7898
6843	4822 130 82978	LTL-1CHPE
6844	4822 130 11589	LTL-1CHAE

TRANSISTORS & INTEGRATED CIRCUITS

7602	5322 130 60159	BC847B
7800	9322 155 22667	TSOP2236ZC1
7841	5322 130 60159	BC847B
7842	4822 130 60373	BC857B
7843	5322 130 60159	BC847B
7844	5322 130 60159	BC847B
7845	4822 130 60373	BC857B

Note : Only the parts mentioned in this list are normal service spare parts.

FTD DISPLAY PIN CONNECTIONS

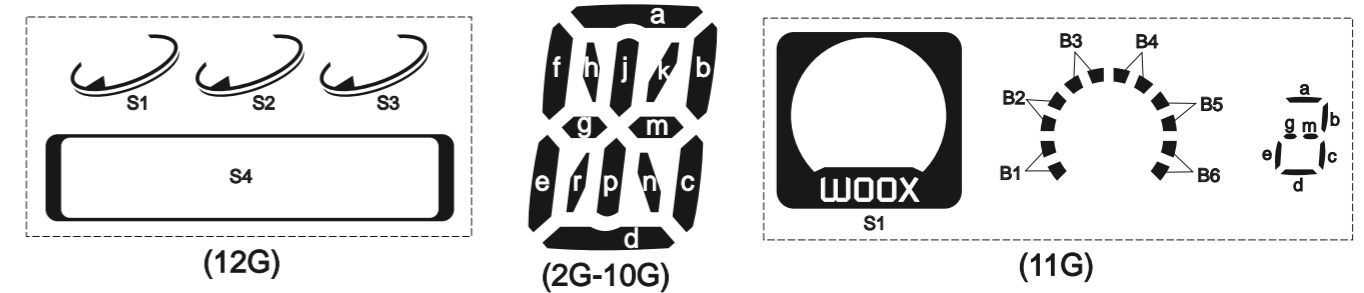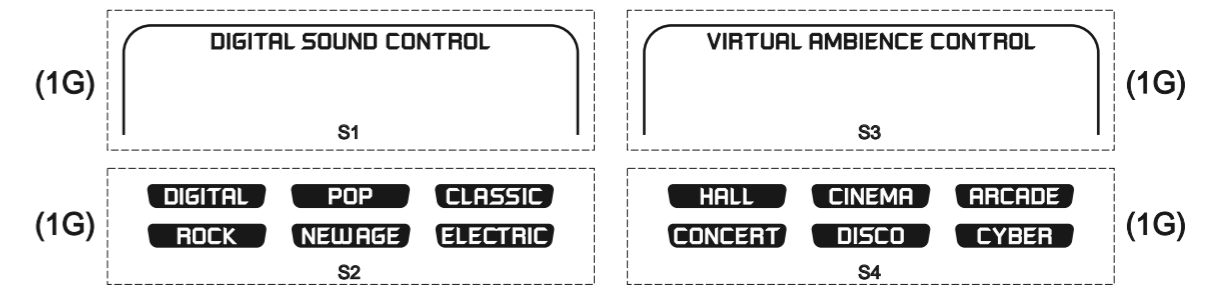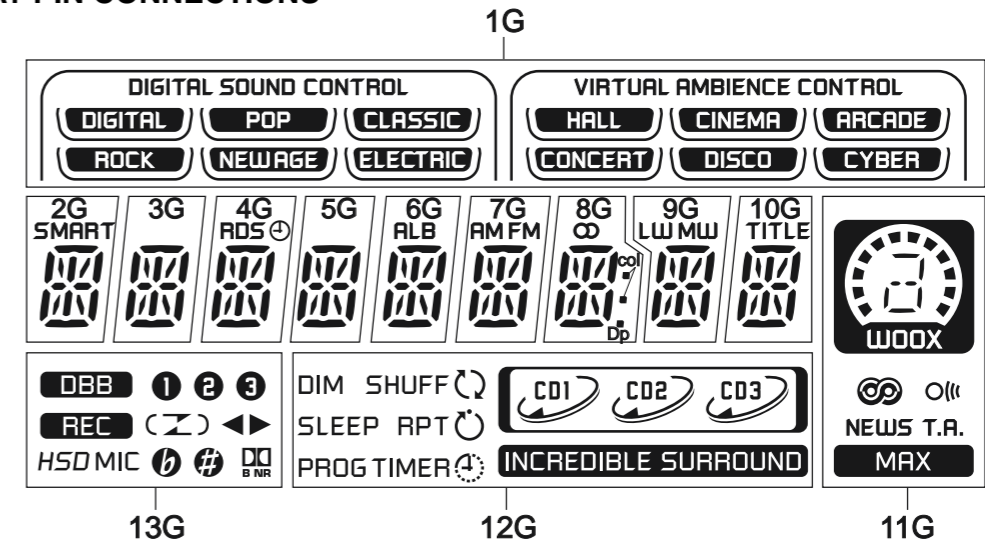

FRONT DISPLAY BOARD


TABLE OF CONTENTS

FTD pin connection 6-1
 Front Display Board - Chip layout 6-2
 Front Display Board - Component layout 6-3
 Front Display Board - Circuit diagram 6-4
 Headphone Part - Layout & Circuit diagram 6-5
 Electrical parts list 6-5

	1G	2G	3G	4G	5G	6G	7G	8G	9G	10G	11G	12G	13G
P1	S1	a	a	a	a	a	a	a	a	a	S1	DIM	DBB
P2	S2	h	h	h	h	h	h	h	h	h	B1	SHUFF	1
P3	(CLASSIC)	j, p	j, p	j, p	j, p	j, p	j, p	j, p	j, p	j, p	B2	SLEEP	2
P4	(POP)	k	k	k	k	k	k	k	k	k	B3	RPT	3
P5	(DIGITAL)	b	b	b	b	b	b	b	b	b	B4	PROG	REC
P6	(ELECTRIC)	f	f	f	f	f	f	f	f	f	B5	TIMER	C
P7	(NEWAGE)	m	m	m	m	m	m	m	m	m	B6	CD1	Z
P8	(ROCK)	g	g	g	g	g	g	g	g	g	a, g, m, d	S1)
P9	S3	c	c	c	c	c	c	c	c	c	b	CD2	◀
P10	S4	e	e	e	e	e	e	e	e	e	c	S2	▶
P11	(ARCADE)	r	r	r	r	r	r	r	r	r	e	CD3	HSD
P12	(CINEMA)	n	n	n	n	n	n	n	n	n	NEWS	S3	MIC
P13	(HALL)	d	d	d	d	d	d	d	d	d	O	S4	b
P14	(CYBER)	SMART	-	RDS	-	ALB	AM	∞	LW	TITLE	NEWS	INCREDIBLE SURROUND	#
P15	(DISCO)	-	-	-	-	-	FM	col	MW	-	T.R.	-	DC
P16	(CONCERT)	-	-	-	-	-	-	Dp	-	-	MAX	-	-

FRONT DISPLAY BOARD - CHIP LAYOUT


2500 A5	2512 A1	2531 B5	2545 C3	2557 B1	2575 A4	2587 A3	3410 A2	3423 B4	3439 B1	3455 A5	3468 A4	3485 A6	3517 A1	3532 A5	3547 C5	3559 C4	3577 A1	3589 A3	4402 C4	4419 C1	4434 B3	7409 A6
2501 A5	2513 A2	2533 C6	2546 C3	2558 A1	2576 A4	2588 B1	3411 A2	3424 B4	3444 A5	3457 A5	3469 A4	3490 B1	3518 A1	3533 B5	3548 C5	3562 C3	3578 A1	3590 A3	4403 C4	4420 A6	4435 B4	7410 A6
2502 A5	2515 A1	2534 A1	2547 C3	2559 A1	2577 A4	2589 A6	3413 A1	3425 B4	3445 A5	3458 A5	3470 A4	3491 B1	3519 A1	3534 B5	3549 C5	3563 B1	3579 B1	3591 B3	4404 A5	4422 B2	6415 A4	7411 B6
2503 A5	2516 A1	2535 A1	2548 C2	2560 A1	2578 A5	3400 A3	3414 B4	3428 B5	3446 A5	3459 A4	3471 A4	3492 B1	3520 B1	3535 A3	3550 C4	3564 B1	3580 A1	3592 C1	4405 C1	4423 B1	7400 A4	7412 A5
2504 A6	2517 A1	2536 C4	2549 B1	2561 A1	2579 A6	3401 A3	3415 B4	3431 B5	3447 A5	3460 A4	3472 A4	3500 A5	3521 C1	3536 A2	3551 C4	3565 B1	3581 A1	3593 C1	4410 C3	4424 A1	7401 A1	7413 C4
2505 A5	2519 A3	2537 C5	2550 B1	2562 A1	2580 A6	3402 A3	3416 B4	3432 B5	3448 A5	3461 A4	3473 A4	3501 A5	3522 C1	3539 A3	3552 C3	3570 A3	3582 A1	3594 C1	4411 C3	4425 B1	7402 C1	
2506 A6	2520 B4	2538 C5	2551 B1	2563 A1	2581 A3	3403 A3	3417 B4	3433 B5	3449 A5	3462 A4	3474 A4	3502 A5	3523 C1	3540 A1	3553 C4	3571 A2	3583 A1	3595 C1	4412 C2	4426 A1	7403 C4	
2507 A5	2521 B3	2539 C5	2552 B1	2564 C1	2582 A3	3404 A3	3418 B4	3434 B5	3450 A5	3463 A4	3475 A4	3503 A5	3527 B6	3541 A1	3554 C5	3572 C3	3584 A1	3596 C1	4413 C2	4427 A1	7404 C5	
2508 A4	2522 A3	2541 C4	2553 B1	2565 C1	2583 B2	3406 C5	3419 B4	3435 B5	3451 A5	3464 A4	3476 A4	3511 C1	3528 B6	3543 C5	3555 B4	3573 C4	3585 A1	3597 A1	4414 C2	4428 A1	7405 B5	
2509 C5	2523 B6	2542 C3	2554 B1	2567 C1	2584 B3	3407 A3	3420 B4	3436 B5	3452 A5	3465 A4	3477 A4	3512 C1	3529 C1	3544 C5	3556 B4	3574 B1	3586 A1	3598 C1	4415 C1	4429 A1	7406 A4	
2510 C1	2524 B1	2543 C4	2555 B1	2568 A4	2585 C1	3408 A3	3421 B4	3437 B5	3453 A5	3466 A4	3479 A4	3515 A1	3530 C1	3545 C5	3557 B4	3575 C1	3587 A1	3599 C1	4416 C1	4430 C2	7407 A3	
2511 B1	2526 B1	2544 C4	2556 B1	2574 A4	2586 C1	3409 A4	3422 B4	3438 B1	3454 A5	3467 A4	3480 A4	3516 A1	3531 B5	3546 C5	3558 B4	3576 A1	3588 A1	4401 B1	4418 C1	4431 A4	7408 A5	

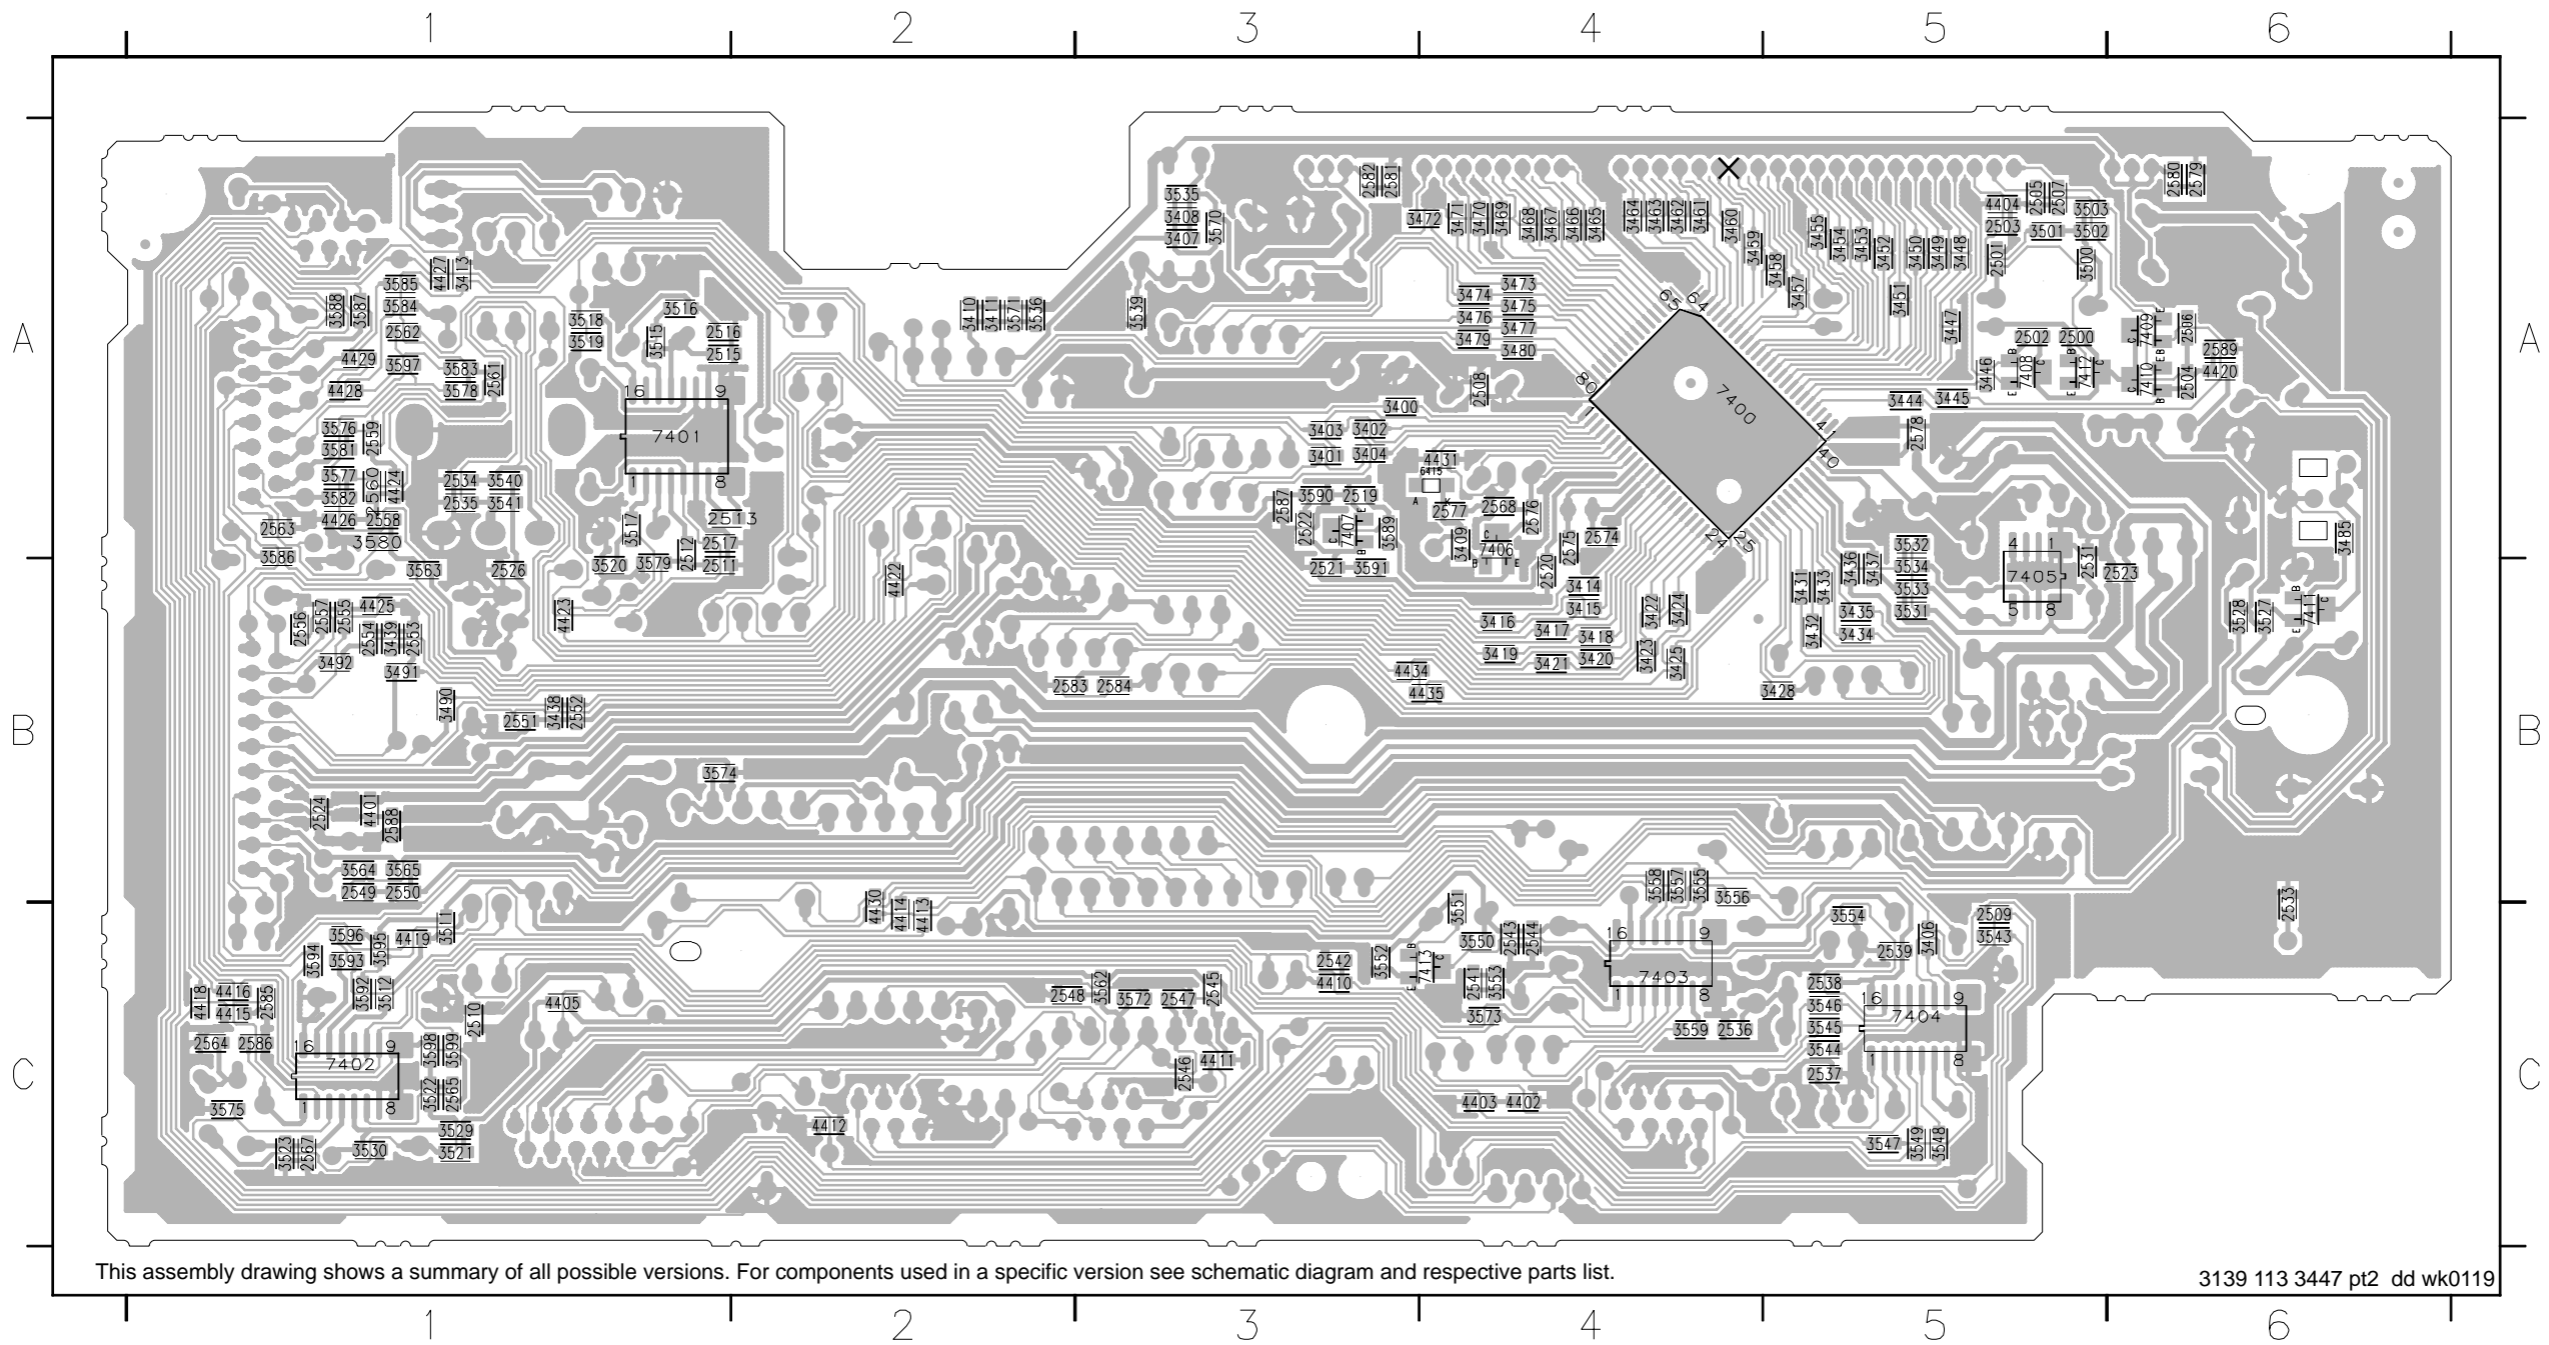

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram and respective parts list.

FRONT DISPLAY BOARD - COMPONENT LAYOUT


1400 A6	1409 C5	2514 A6	2569 B3	3504 B6	5400 B1	5408 A6	6406 A4	6414 C6	9412 A2	9420 B2	9428 C2	9437 C3	9445 B4	9455 A5	9463 B4	9471 B5	9479 C4	9487 C5	9496 C6	9505 C6	9516 A6
1402 C3	1411 A6	2518 B1	2570 A2	3505 A4	5401 A2	5409 A6	6407 A4	6420 A1	9413 A1	9421 B2	9429 C2	9438 C3	9448 A4	9456 A5	9464 B4	9472 B5	9480 C4	9488 C5	9497 B6	9506 B6	9517 A6
1403 C6	1412 C6	2525 B6	2571 A2	3526 C6	5402 A3	6400 A4	6408 A1	9400 C2	9414 B2	9422 B2	9430 C3	9439 C3	9449 A5	9457 A5	9465 B4	9473 B5	9481 C4	9489 C5	9498 C6	9507 B6	9518 A6
1404 C6	1420 A4	2527 A4	2572 A3	3537 A4	5403 A3	6401 A4	6409 A1	9401 A6	9415 B2	9423 B2	9431 C3	9440 C4	9450 A5	9458 A5	9466 B4	9474 B5	9482 C4	9490 C5	9499 C6	9509 B6	
1405 A6	1520 A1	2528 A4	2573 A4	3538 A4	5404 A6	6402 A4	6410 A1	9402 B2	9416 B1	9424 B2	9432 C3	9441 C4	9451 A5	9459 A5	9467 B4	9475 B5	9483 C5	9491 C5	9500 C6	9510 A6	
1406 B6	1521 B1	2529 A1	3429 B2	3542 C2	5405 B6	6403 A4	6411 B6	9405 B6	9417 B1	9425 B3	9433 A4	9442 C4	9452 A5	9460 A5	9468 B5	9476 B5	9484 C5	9492 C5	9501 C6	9511 B6	
1407 C4	1533 C1	2530 A1	3430 B2	3560 C4	5406 A6	6404 A4	6412 B1	9410 A6	9418 B2	9426 C2	9435 C3	9443 C4	9453 A5	9461 B5	9469 B5	9477 B5	9485 C5	9493 C5	9502 C6	9512 A6	
1408 A6	1550 A6	2566 C6	3456 A2	3561 C4	5407 C3	6405 A4	6413 B2	9411 A1	9419 B2	9427 C2	9436 C3	9444 B4	9454 A5	9462 B4	9470 B5	9478 B6	9486 C5	9495 B1	9504 C6	9515 A6	

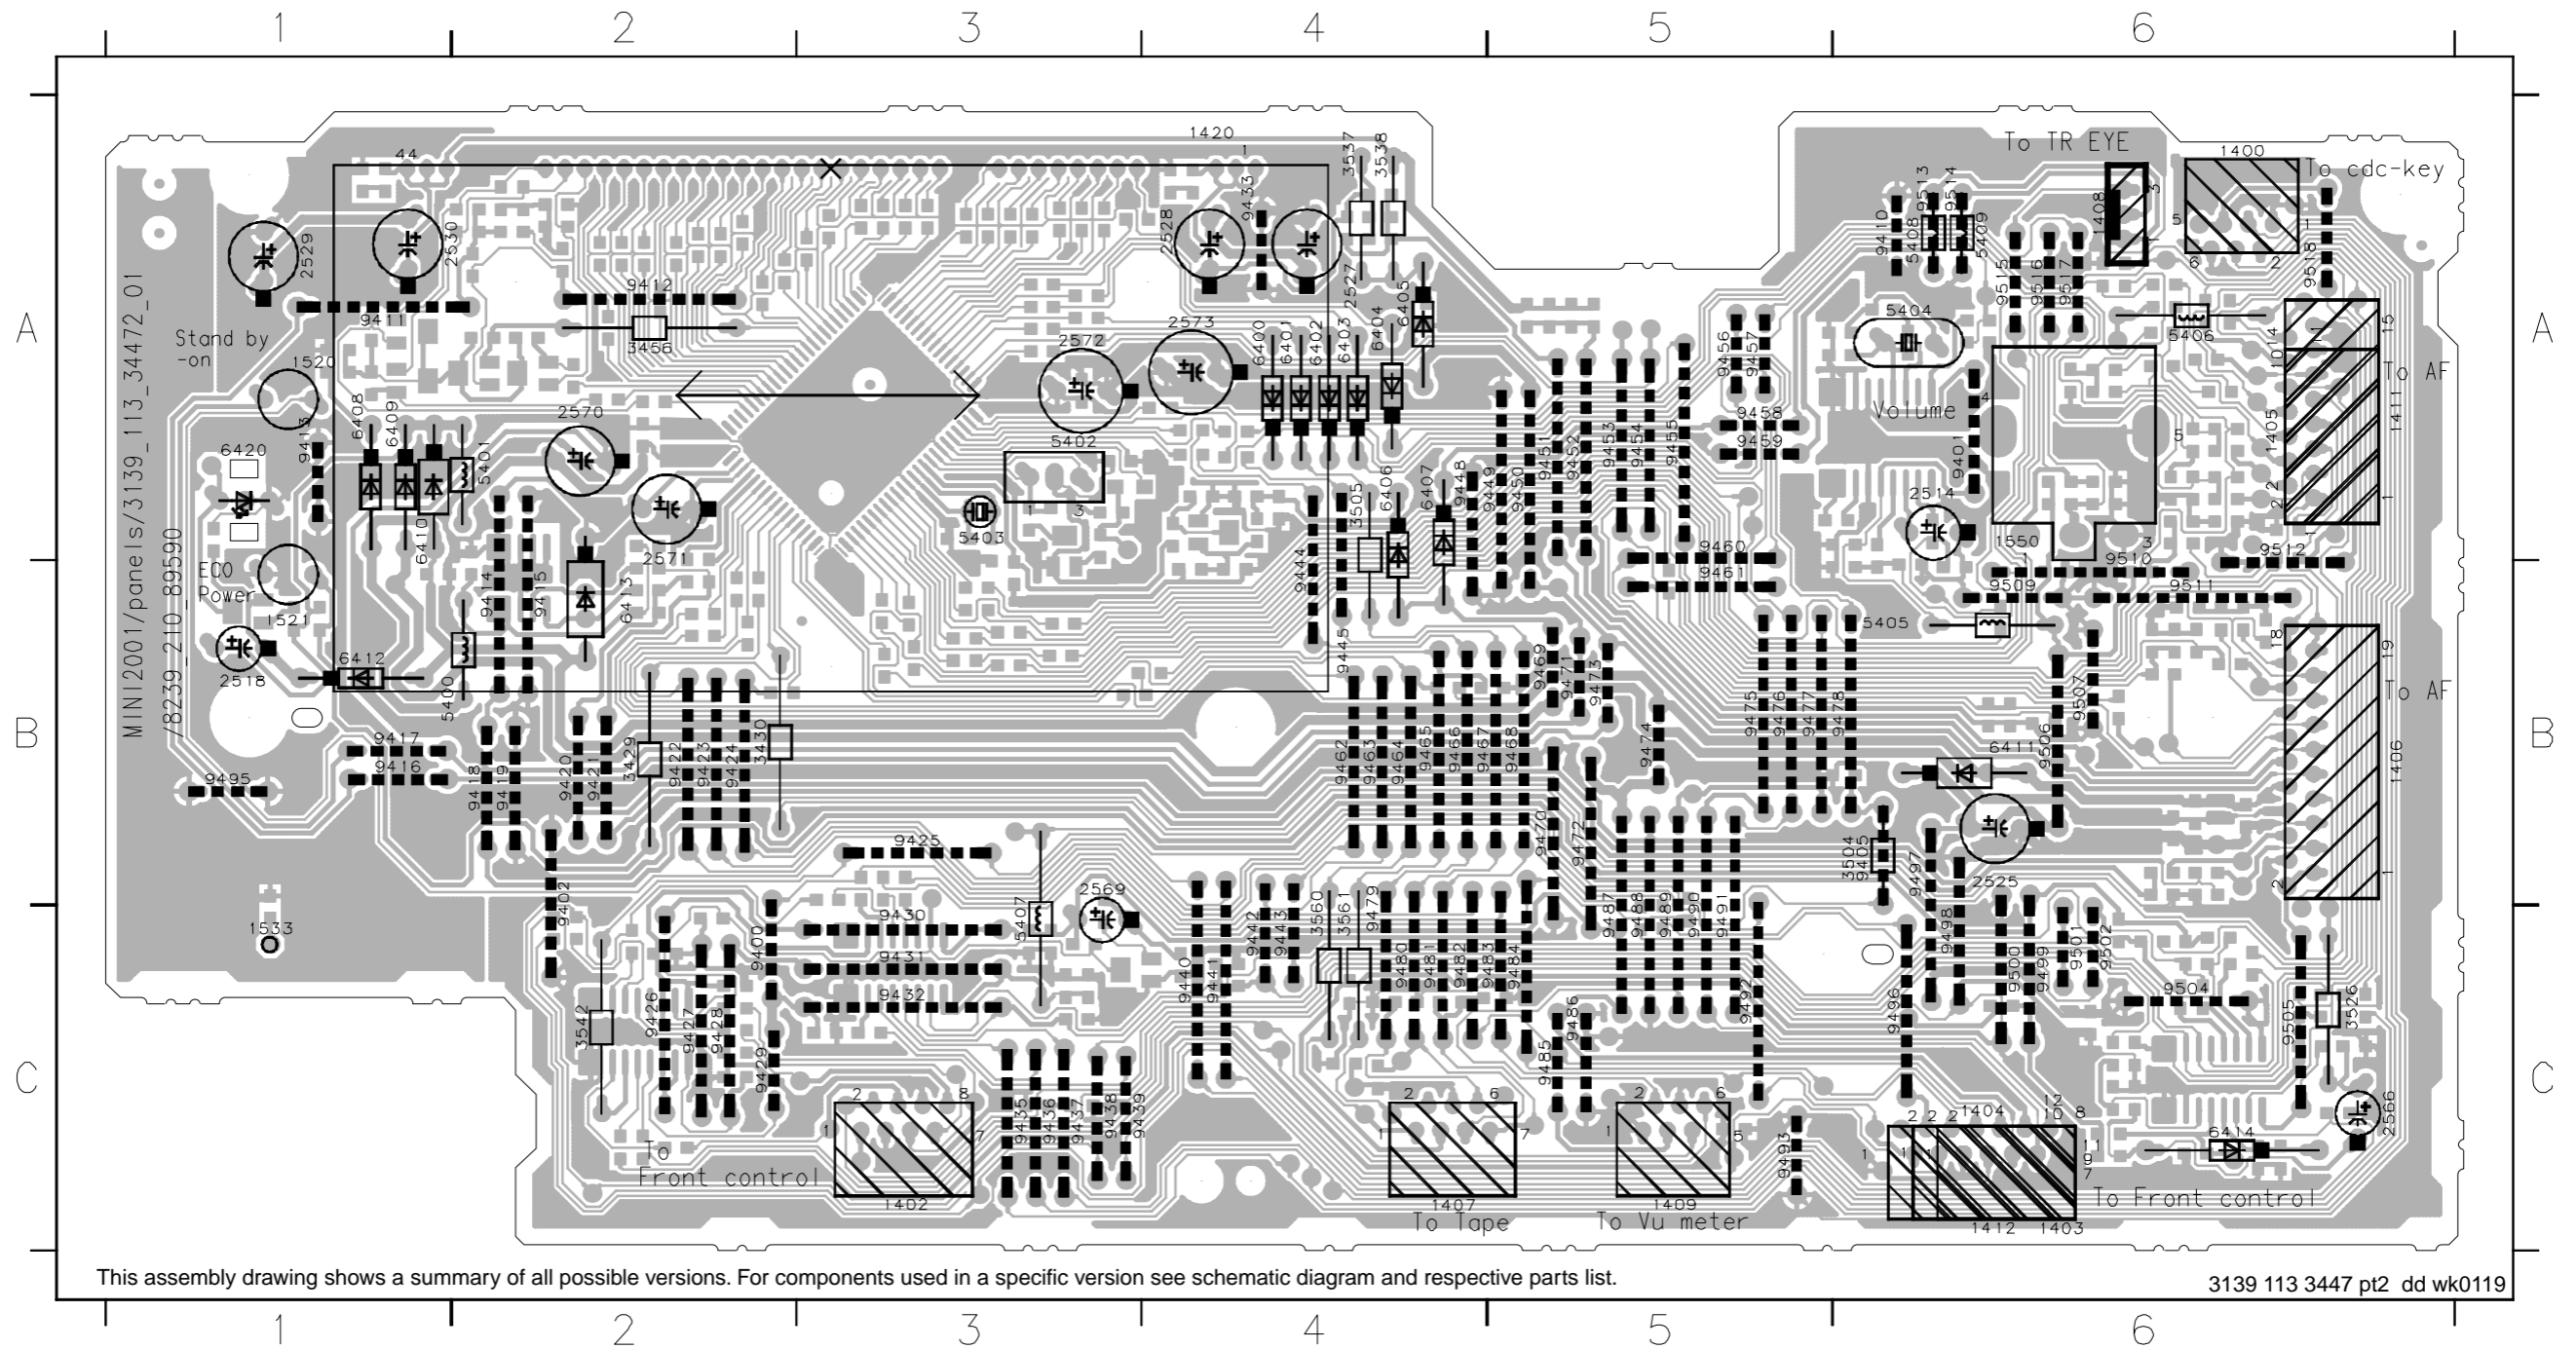

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram and respective parts list.

FRONT DISPLAY BOARD - CIRCUIT DIAGRAM

1400 D1	1408 F1	1533 J16	2505 B6	2512 I1	2519 J10	2526 J13	2534 J17	2542 C15	2549 C19	2556 E19	2563 G20	2570 C13	2577 H10	2584 A18	3401 F10	3409 G10	3417 F12	3424 F13	3433 D13	3444 C13	3451 C11	3458 C10	3465 C9	3472 D9	3480 F9	3502 B6	3516 H3	3523 H8	3532 H14	3539 I15	3546 H16	3553 D15	3560 A18	3571 J14	3578 F19	3585 H19	3592 E7	3599 G4	5404 H3	6401 E8	6408 I12	6415 F10	7405 H12	7412 B4
1402 I18	1409 G1	1550 I16	2506 A7	2513 I1	2520 I10	2527 I14	2535 J17	2543 B16	2550 C19	2557 E19	2564 H7	2571 C14	2578 C13	2585 G7	3402 F10	3410 J14	3418 F12	3425 F13	3434 D13	3445 C12	3452 C11	3459 C10	3466 D9	3473 E9	3485 I7	3504 E8	3518 J5	3527 B	3534 H13	3541 I17	3548 G16	3555 D16	3562 A19	3573 E5	3580 F20	3587 H19	3594 E7	4401 D18	5405 H4	6402 E8	6409 C14	6420 J6	7406 G11	7413 E15
1404 I20	1412 K20	2501 B4	2508 F8	2515 H3	2522 J10	2529 K14	2537 G15	2545 B19	2552 D19	2559 G19	2566 H7	2573 F9	2580 B9	2587 I10	3404 F10	3413 F9	3420 F12	3429 E13	3436 D13	3447 C12	3454 C11	3461 C10	3468 D9	3475 E9	3491 E20	3505 E8	3519 J5	3528 I9	3535 H14	3542 G16	3549 G16	3556 D16	3563 F18	3574 F8	3581 G20	3588 I19	3595 D7	5400 G13	5407 F15	6404 E8	6411 I12	7401 H1	7408 B5	9405 E8
1405 F20	1420 A10	2502 A4	2509 H17	2516 H4	2523 J12	2530 J14	2538 F16	2546 B19	2553 E19	2560 G19	2567 H9	2574 G11	2581 B13	2588 C19	3406 H16	3414 F11	3421 F12	3430 E13	3437 D13	3448 C12	3455 C11	3462 C10	3469 D9	3476 E9	3492 E20	3511 D7	3520 J5	3529 I11	3536 J14	3543 H16	3550 E16	3557 C16	3564 C19	3575 G6	3582 G20	3589 I10	3596 D7	5401 C14	5408 E1	6405 H6	6412 I8	7402 D5	7409 B7	
1406 C20	1520 G7	2503 B5	2510 D5	2517 H5	2524 J12	2531 H14	2539 F16	2547 B19	2554 E19	2561 G19	2568 G10	2575 G11	2582 B13	2589 I13	3407 I14	3415 F11	3422 F12	3431 E13	3438 F18	3449 C12	3456 C11	3463 C10	3470 D9	3477 E9	3500 B4	3512 E7	3521 H7	3530 J11	3537 H14	3544 H16	3551 E16	3558 C16	3565 C20	3576 F18	3583 G19	3590 J10	3597 F18	5402 F11	5409 E1	6406 H6	6413 C14	7403 B15	7410 B6	
1407 A20	1521 J9	2504 A6	2511 I1	2518 J8	2525 J12	2533 J15	2541 D14	2548 B19	2555 E19	2562 F19	2569 E16	2576 G11	2583 A18	3400 F9	3408 I14	3416 F12	3423 F13	3432 E13	3439 F18	3450 C12	3457 C11	3464 C10	3471 D9	3479 E9	3501 B5	3515 H3	3522 H7	3531 H13	3538 J14	3545 H16	3552 E16	3559 C16	3570 I14	3577 F19	3584 G20	3591 J10	3598 F5	5403 F11	6400 E8	6407 F1	6414 H8	7404 F15	7411 J8	

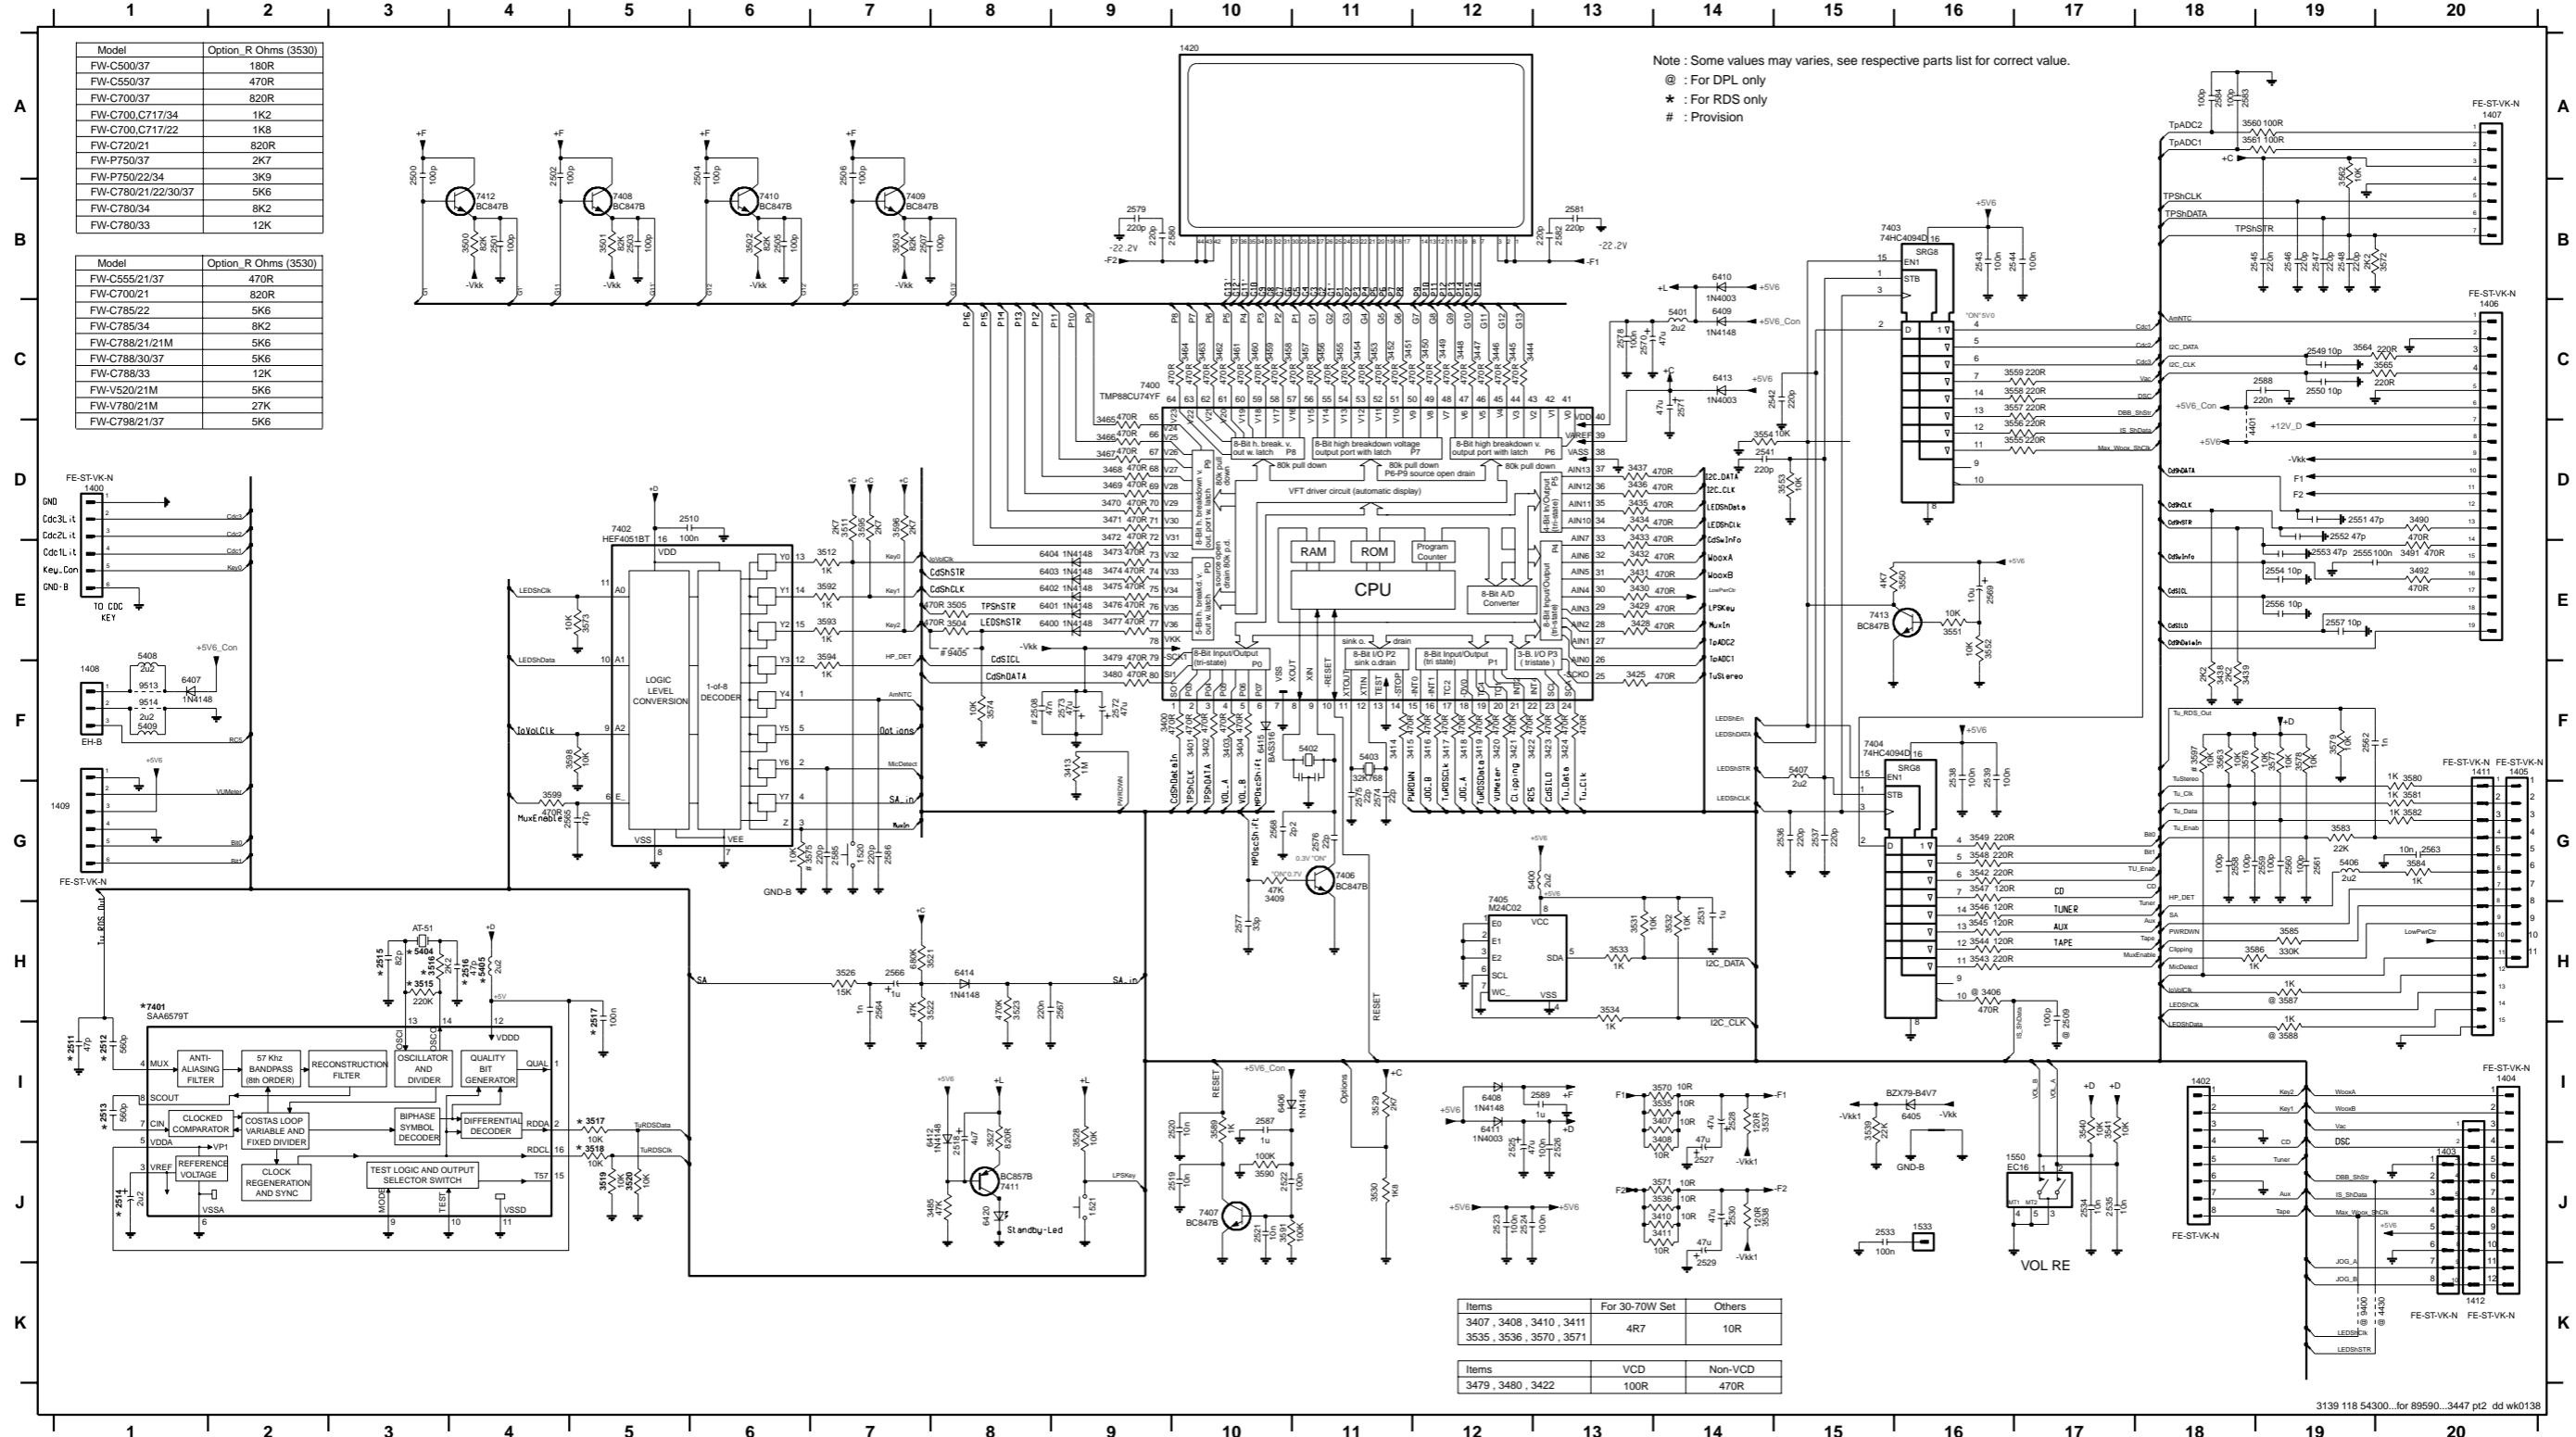

Note: Some values may vary, see respective parts list for correct value.
 @ : For DPL only
 * : For RDS only
 # : Provision


Model	Option_R Ohms (3530)
FW-C50/37	180R
FW-C50/37	470R
FW-C70/37	820R
FW-C700,C717/34	1K2
FW-C700,C717/22	1K8
FW-C720/21	820R
FW-P750/37	2K7
FW-P750/22/34	3K9
FW-C780/21/22/30/37	5K6
FW-C780/34	8K2
FW-C780/33	12K

Model	Option_R Ohms (3530)
FW-C555/21/37	470R
FW-C700/21	820R
FW-C785/22	5K6
FW-C785/34	8K2
FW-C788/21/21M	5K6
FW-C788/30/37	5K6
FW-C788/33	12K
FW-V520/21M	5K6
FW-V780/21M	27K
FW-C798/21/37	5K6

Items	For 30-70W Set	Others
3407, 3408, 3410, 3411	4R7	10R
3535, 3536, 3570, 3571		
Items	VCD	Non-VCD
3479, 3480, 3422	100R	470R


HEADPHONE BOARD - COMPONENT LAYOUT

1850 A1 1891 A1 5851 A1 9851 A1
 1851 A2 1892 A1 5852 A1
 1890 A2 5850 A1 9550 A1

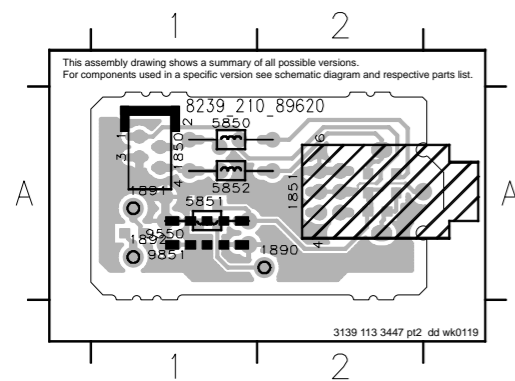


HEADPHONE BOARD - CHIP LAYOUT

2850 A1 2852 A1 2854 A2
 2851 A2 2853 A2 4850 A1

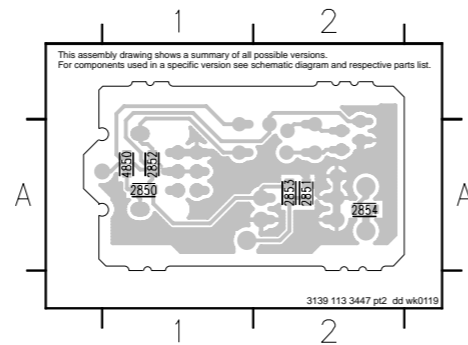

HEADPHONE BOARD - CIRCUIT DIAGRAM

1850 C1 1890 A3 1892 C3 2851 A3 2853 A2 5850 B1 5852 B2
 1851 B3 1891 C3 2850 A2 2852 A2 2854 C3 5851 A2 9550 A2

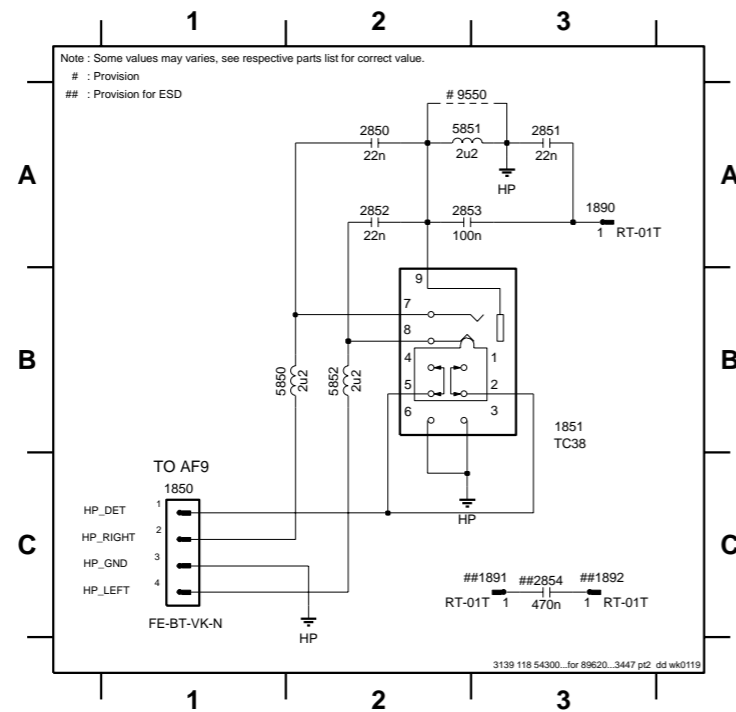

ELECTRICAL PARTS LIST - FRONT DISPLAY BOARD

MISCELLANEOUS

1400	4822 265 11207	Flex Connector 6P
1402	4822 265 11535	Flex Connector 8P
1405	2422 025 14541	Flex Connector 11P
1406	4822 265 11545	Flex Connector 19P
1407	4822 267 10956	Flex Connector 7P
1409	4822 265 11207	Flex Connector 6P
1412	4822 265 11208	Flex Connector 10P
1420	3139 110 52550	FTD Display
1520	4822 276 13775	Tact Switch
1521	4822 276 13775	Tact Switch
1550	4822 273 10365	Rotary Encoder 24P
1850	4822 267 10733	Flex Connector 4P

1851 4822 265 11529 Headphone Socket

CAPACITORS

2500	4822 122 31765	100pF 2% 63V
2501	4822 122 31765	100pF 2% 63V
2502	4822 122 31765	100pF 2% 63V
2503	4822 122 31765	100pF 2% 63V
2504	4822 122 31765	100pF 2% 63V
2505	4822 122 31765	100pF 2% 63V
2506	4822 122 31765	100pF 2% 63V
2507	4822 122 31765	100pF 2% 63V
2508	3198 024 44730	47nF Y5V 50V
2510	4822 126 14305	100nF 10% 16V

ELECTRICAL PARTS LIST - FRONT DISPLAY BOARD

2511	4822 122 33777	47pF 5% 63V	2567	4822 126 13879	220nF +80/-20% 16V
2512	4822 126 14249	560pF 10% 50V	2568	4822 126 14223	2,2pF 50V
2513	4822 126 14249	560pF 10% 50V	2569	4822 124 11947	10µF 20% 16V
2514	4822 124 22652	2,2µF 20% 50V	2570	4822 124 12233	47µF 20% 25V
2515	4822 126 14226	82pF 5% 50V	2571	4822 124 12233	47µF 20% 25V
2516	4822 122 33777	47pF 5% 63V	2572	3198 028 44790	47µF 20% 35V
2517	4822 126 14305	100nF 10% 16V	2573	3198 028 44790	47µF 20% 35V
2518	4822 124 11947	10µF 20% 16V /22	2574	4822 122 33761	22pF 5% 50V
2519	5322 126 11583	10nF 10% 50V	2575	4822 122 33761	22pF 5% 50V
2520	5322 126 11583	10nF 10% 50V	2576	4822 122 33761	22pF 5% 50V
2521	5322 126 11583	10nF 10% 50V	2577	4822 126 11671	33pF
2522	4822 126 14305	100nF 10% 16V	2578	4822 126 14305	100nF 10% 16V
2523	4822 126 14305	100nF 10% 16V	2579	4822 126 13883	220pF 5% 50V
2524	4822 126 14305	100nF 10% 16V	2580	4822 126 13883	220pF 5% 50V
2525	4822 124 12233	47µF 20% 25V	2581	4822 126 13883	220pF 5% 50V
2526	4822 126 14305	100nF 10% 16V	2582	4822 126 13883	220pF 5% 50V
2527	4822 124 22726	4,7µF 35V	2583	4822 122 31765	100pF 2% 63V
2528	4822 124 22726	4,7µF 35V	2584	4822 122 31765	100pF 2% 63V
2529	4822 124 22726	4,7µF 35V	2585	4822 126 13883	220pF 5% 50V
2530	4822 124 22726	4,7µF 35V	2586	4822 126 13883	220pF 5% 50V
2531	3198 017 41050	1µF 10V	2587	3198 017 41050	1µF 10V
2533	4822 126 14305	100nF 10% 16V	2588	4822 126 13879	220nF +80/-20% 16V
2534	5322 126 11583	10nF 10% 50V	2589	3198 017 41050	1µF 10V
2535	5322 126 11583	10nF 10% 50V	2850	4822 126 14494	22nF 10% 25V
2536	3198 016 36810	680pF 25V	2851	4822 126 14494	22nF 10% 25V
2537	4822 126 13883	220pF 5% 50V	2852	4822 126 14494	22nF 10% 25V
2538	4822 126 14305	100nF 10% 16V	2853	4822 126 14305	100nF 10% 16V
2539	4822 126 14305	100nF 10% 16V	RESISTORS		
2541	4822 126 13883	220pF 5% 50V	3400	4822 051 30471	470R 5% 0,062W
2542	4822 126 13883	220pF 5% 50V	3401	4822 051 30471	470R 5% 0,062W
2543	4822 126 14305	100nF 10% 16V	3402	4822 051 30471	470R 5% 0,062W
2544	4822 126 14305	100nF 10% 16V	3403	4822 051 30471	470R 5% 0,062W
2545	4822 126 13879	220nF +80/-20% 16V	3404	4822 051 30471	470R 5% 0,062W
2546	4822 126 13883	220pF 5% 50V	3407	4822 051 20478	4R7 5% 0,1W
2547	4822 126 13883	220pF 5% 50V	3408	4822 051 20478	4R7 5% 0,1W
2548	4822 126 13883	220pF 5% 50V	3409	4822 117 12925	47k 1% 0,063W
2549	4822 122 33741	10pF 10% 50V	3410	4822 051 20478	4R7 5% 0,1W
2550	4822 122 33741	10pF 10% 50V	3411	4822 051 20478	4R7 5% 0,1W
2551	4822 122 33777	47pF 5% 63V	3413	4822 051 30105	1M 5% 0,062W
2552	4822 122 33777	47pF 5% 63V	3414	4822 051 30471	470R 5% 0,062W
2553	4822 122 33777	47pF 5% 63V	3415	4822 051 30471	470R 5% 0,062W
2554	4822 122 33741	10pF 10% 50V	3416	4822 051 30471	470R 5% 0,062W
2555	4822 126 14305	100nF 10% 16V	3417	4822 051 30471	470R 5% 0,062W
2556	4822 122 33741	10pF 10% 50V	3418	4822 051 30471	470R 5% 0,062W
2557	4822 122 33741	10pF 10% 50V	3419	4822 051 30471	470R 5% 0,062W
2558	4822 122 31765	100pF 2% 63V	3420	4822 051 30471	470R 5% 0,062W
2559	4822 122 31765	100pF 2% 63V	3421	4822 051 30471	470R 5% 0,062W
2560	4822 122 31765	100pF 2% 63V	3422	4822 051 30471	470R 5% 0,062W
2561	4822 122 31765	100pF 2% 63V	3423	4822 051 30471	470R 5% 0,062W
2562	3198 016 31020	1nF 25V	3424	4822 051 30471	470R 5% 0,062W
2563	5322 126 11583	10nF 10% 50V	3425	4822 051 30471	470R 5% 0,062W
2564	5322 126 11578	1nF 10% 50V	3428	4822 051 30471	470R 5% 0,062W
2565	4822 122 33777	47pF 5% 63V	3429	4822 116 83883	470R 5% 0,5W
2566	4822 124 22651	1µF 20% 50V	3430	4822 116 83883	470R 5% 0,5W

ELECTRICAL PARTS LIST - FRONT DISPLAY BOARD

RESISTORS

3431	4822 051 30471	470R 5% 0,062W	3504	4822 116 83883	470R 5% 0,5W
3432	4822 051 30471	470R 5% 0,062W	3505	4822 116 83883	470R 5% 0,5W
3433	4822 051 30471	470R 5% 0,062W	3511	4822 051 30272	2k7 5% 0,062W
3434	4822 051 30102	1k 5% 0,062W	3512	4822 051 30102	1k 5% 0,062W
3435	4822 051 30471	470R 5% 0,062W	3515	4822 117 12891	220k 1%
3436	4822 051 30471	470R 5% 0,062W	3516	4822 051 30222	2k2 5% 0,062W
3437	4822 051 30471	470R 5% 0,062W	3517	4822 051 30103	10k 5% 0,062W
3438	4822 051 30222	2k2 5% 0,062W	3518	4822 051 30103	10k 5% 0,062W
3439	4822 051 30222	2k2 5% 0,062W	3519	4822 051 30103	10k 5% 0,062W
3444	4822 051 30471	470R 5% 0,062W	3520	4822 051 30103	10k 5% 0,062W
3445	4822 051 30471	470R 5% 0,062W	3521	4822 051 30684	680k 5% 0,062W
3446	4822 051 30471	470R 5% 0,062W	3522	4822 117 12925	47k 1% 0,063W
3447	4822 051 30471	470R 5% 0,062W	3523	4822 051 30474	470k 5% 0,062W
3448	4822 051 30471	470R 5% 0,062W	3524	4822 051 30109	10R 5% 0,062W
3449	4822 051 30471	470R 5% 0,062W	3526	4822 116 52244	15k 5% 0,5W
3450	4822 051 30471	470R 5% 0,062W	3527	4822 117 12968	820R 5% 0,62W
3451	4822 051 30471	470R 5% 0,062W	3528	4822 051 30103	10k 5% 0,062W
3452	4822 051 30471	470R 5% 0,062W	3529	4822 051 30272	2k7 5% 0,062W
3453	4822 051 30471	470R 5% 0,062W	3530	4822 117 12903	1k8 1% 0,063W /22
3454	4822 051 30471	470R 5% 0,062W	3531	4822 051 30103	10k 5% 0,062W
3455	4822 051 30471	470R 5% 0,062W	3532	4822 051 30103	10k 5% 0,062W
3456	4822 116 83883	470R 5% 0,5W	3533	4822 051 30102	1k 5% 0,062W
3457	4822 051 30471	470R 5% 0,062W	3534	4822 051 30102	1k 5% 0,062W
3458	4822 051 30471	470R 5% 0,062W	3535	4822 051 20478	4R7 5% 0,1W
3459	4822 051 30471	470R 5% 0,062W	3536	4822 051 20478	4R7 5% 0,1W
3460	4822 051 30471	470R 5% 0,062W	3537	4822 116 52206	120R 5% 0,5W
3461	4822 051 30471	470R 5% 0,062W	3538	4822 116 52206	120R 5% 0,5W
3462	4822 051 30471	470R 5% 0,062W	3539	4822 051 30223	22k 5% 0,062W
3463	4822 051 30471	470R 5% 0,062W	3540	4822 051 30103	10k 5% 0,062W
3464	4822 051 30471	470R 5% 0,062W	3541	4822 051 30103	10k 5% 0,062W
3465	4822 051 30471	470R 5% 0,062W	3542	4822 116 83872	220R 5% 0,5W
3466	4822 051 30471	470R 5% 0,062W	3543	4822 051 30221	220R 5% 0,062W
3467	4822 051 30471	470R 5% 0,062W	3544	4822 051 30121	120R 5% 0,062W
3468	4822 051 30471	470R 5% 0,062W	3545	4822 051 30121	120R 5% 0,062W
3469	4822 051 30471	470R 5% 0,062W	3546	4822 051 30121	120R 5% 0,062W
3470	4822 051 30471	470R 5% 0,062W	3547	4822 051 30121	120R 5% 0,062W
3471	4822 051 30471	470R 5% 0,062W	3548	4822 051 30221	220R 5% 0,062W
3472	4822 051 30471	470R 5% 0,062W	3549	4822 051 30221	220R 5% 0,062W
3473	4822 051 30471	470R 5% 0,062W	3550	4822 051 30472	4k7 5% 0,062W
3474	4822 051 30221	220R 5% 0,062W	3551	4822 051 30103	10k 5% 0,062W
3475	4822 051 30221	220R 5% 0,062W	3552	4822 051 30103	10k 5% 0,062W
3476	4822 051 30471	470R 5% 0,062W	3553	4822 051 30103	10k 5% 0,062W
3477	4822 051 30471	470R 5% 0,062W	3554	4822 051 30103	10k 5% 0,062W
3479	4822 051 30471	470R 5% 0,062W	3555	4822 051 30221	220R 5% 0,062W
3480	4822 051 30471	470R 5% 0,062W	3556	4822 051 30121	120R 5% 0,062W
3485	4822 117 12925	47k 1% 0,063W	3557	4822 051 30271	270R 5% 0,062W
3490	4822 051 30471	470R 5% 0,062W	3558	4822 051 30221	220R 5% 0,062W
3491	4822 051 30471	470R 5% 0,062W	3559	4822 051 30221	220R 5% 0,062W
3492	4822 051 30471	470R 5% 0,062W	3560	4822 116 52175	100R 5% 0,5W
3500	4822 117 12864	82k 5% 0,6W	3561	4822 116 52175	100R 5% 0,5W
3501	4822 117 12864	82k 5% 0,6W	3562	4822 051 30103	10k 5% 0,062W
3502	4822 117 12864	82k 5% 0,6W	3563	4822 051 30103	10k 5% 0,062W
3503	4822 117 12864	82k 5% 0,6W	3564	4822 051 30221	220R 5% 0,062W

ELECTRICAL PARTS LIST - FRONT DISPLAY BOARD

3565	4822 051 30221	220R 5% 0,062W	3570	4822 051 20478	4R7 5% 0,1W
3570	4822 051 20478	4R7 5% 0,1W	3571	4822 051 20478	4R7 5% 0,1W
3571	4822 051 20478	4R7 5% 0,1W	3572	4822 051 30222	2k2 5% 0,062W
3572	4822 051 30222	2k2 5% 0,062W	3573	4822 051 30103	10k 5% 0,062W
3573	4822 051 30103	10k 5% 0,062W	3574	4822 051 30103	10k 5% 0,062W
3574	4822 051 30103	10k 5% 0,062W	3576	4822 051 30103	10k 5% 0,062W
3576	4822 051 30103	10k 5% 0,062W	3577	4822 051 30103	10k 5% 0,062W
3577	4822 051 30103	10k 5% 0,062W	3578	4822 051 30103	10k 5% 0,062W
3578	4822 051 30103	10k 5% 0,062W	3579	4822 051 30103	10k 5% 0,062W
3579	4822 051 30103	10k 5% 0,062W	3580	4822 051 30102	1k 5% 0,062W
3580	4822 051 30102	1k 5% 0,062W	3581	4822 051 30102	1k 5% 0,062W
3581	4822 051 30102	1k 5% 0,062W	3582	4822 051 30102	1k 5% 0,062W
3582	4822 051 30102	1k 5% 0,062W	3583	4822 051 30223	22k 5% 0,062W
3583	4822 051 30223	22k 5% 0,062W	3584	4822 051 30102	1k 5% 0,062W
3584	4822 051 30102	1k 5% 0,062W	3585	4822 051 30334	330k 5% 0,062W
3585	4822 051 30334	330k 5% 0,062W	3586	4822 051 30102	1k 5% 0,062W
3586	4822 051 30102	1k 5% 0,062W	3589	4822 051 30102	1k 5% 0,062W
3589	4822 051 30102	1k 5% 0,062W	3590	4822 117 13632	100k 1% 0,62W
3590	4822 117 13632	100k 1% 0,62W	3591	4822 117 13632	100k 1% 0,62W
3591	4822 117 13632	100k 1% 0,62W	3592	4822 051 30102	1k 5% 0,062W
3592	4822 051 30102	1k 5% 0,062W	3593	4822 051 30102	1k 5% 0,062W
3593	4822 051 30102	1k 5% 0,062W	3594	4822 051 30102	1k 5% 0,062W
3594	4822 051 30102	1k 5% 0,062W	3595	4822 051 30272	2k7 5% 0,062W
3595	4822 051 30272	2k7 5% 0,062W	3596	4822 051 30272	2k7 5% 0,062W
3596	4822 051 30272	2k7 5% 0,062W	3598	4822 051 30103	10k 5% 0,062W
3598	4822 051 30103	10k 5% 0,062W	3599	4822 051 30471	470R 5% 0,062W
3599	4822 051 30471	470R 5% 0,062W	4401	4822 051 30008	0R Jumper 0603
4401	4822 051 30008	0R Jumper 0603	4402	4822 051 30008	0R Jumper 0603
4402	4822 051 30008	0R Jumper 0603	4403	4822 051 30008	0R Jumper 0603
4403	4822 051 30008	0R Jumper 0603	4404	4822 051 30008	0R Jumper 0603
4404	4822 051 30008	0R Jumper 0603	4410	4822 051 30008	0R Jumper 0603
4410	4822 051 30008	0R Jumper 0603	4411	4822 051 30008	0R Jumper 0603
4411	4822 051 30008	0R Jumper 0603	4412	4822 051 30008	0R Jumper 0603
4412	4822 051 30008	0R Jumper 0603	4413	4822 051 30008	0R Jumper 0603
4413	4822 051 30008	0R Jumper 0603	4414	4822 051 30008	0R Jumper 0603
4414	4822 051 30008	0R Jumper 0603	4415	4822 051 30008	0R Jumper 0603
4415	4822 051 30008	0R Jumper 0603	4416	4822 051 30008	0R Jumper 0603
4416	4822 051 30008	0R Jumper 0603	4418	4822 051 30008	0R Jumper 0603
4418	4822 051 30008	0R Jumper 0603	4419	4822 051 30008	0R Jumper 0603
4419	4822 051 30008	0R Jumper 0603	4420	4822 051 30008	0R Jumper 0603
4420	4822 051 30008	0R Jumper 0603	4422	4822 051 30008	0R Jumper 0603
4422	4822 051 30008	0R Jumper 0603	4423	4822 051 30008	0R Jumper 0603
4423	4822 051 30008	0R Jumper 0603	4424	4822 051 30008	0R Jumper 0603
4424	4822 051 30008	0R Jumper 0603	4425	4822 051 30008	0R Jumper 0603
4425	4822 051 30008	0R Jumper 0603	4426	4822 051 30008	0R Jumper 0603
4426	4822 051 30008	0R Jumper 0603	4427	4822 051 30008	0R Jumper 0603
4427	4822 051 30008	0R Jumper 0603	4428	4822 051 30008	0R Jumper 0603
4428	4822 051 30008	0R Jumper 0603	4429	4822 051 30008	0R Jumper 0603
4429	4822 051 30008	0R Jumper 0603	4431	4822 051 30008	0R Jumper 0603
4431	4822 051 30008	0R Jumper 0603	4434	4822 051 30008	0R Jumper 0603
4434	4822 051 30008	0R Jumper 0603	4435	4822 051 30008	0R Jumper 0603
4435	4822 051 30008	0R Jumper 0603	4850	4822 051 30008	0R Jumper 0603
4850	4822 051 30008	0R Jumper 0603			

COILS & FILTERS


5400	4822 157 62552	Coil 2,2μH 5%
5401	4822 157 62552	Coil 2,2μH 5%
5402	5322 242 73686	RES CER 12MHz
5403	2422 543 01069	RES XTL 32,768kHz
5404	4822 242 11033	RES XTL 4,332MHz
5405	4822 157 62552	Coil 2,2μH 5%
5406	4822 157 62552	Coil 2,2μH 5%
5407	4822 157 62552	Coil 2,2μH 5%
5408	4822 157 62552	Coil 2,2μH 5%
5409	4822 157 62552	Coil 2,2μH 5%
5850	4822 157 62552	Coil 2,2μH 5%
5851	4822 157 62552	Coil 2,2μH 5%
5852	4822 157 62552	Coil 2,2μH 5%

DIODES


6400	4822 130 30621	1N4148
6401	4822 130 30621	1N4148
6402	4822 130 30621	1N4148
6403	4822 130 30621	1N4148
6404	4822 130 30621	1N4148
6405	4822 130 34174	BZX79-B4V7
6406	4822 130 30621	1N4148
6407	4822 130 30621	1N4148
6408	4822 130 30621	1N4148
6409	4822 130 30621	1N4148
6410	4822 130 31878	1N4003G
6411	4822 130 31878	1N4003G
6412	4822 130 30621	1N4148
6413	4822 130 31878	1N4003G
6414	4822 130 30621	1N4148
6415	4822 130 11397	BAS316
6420	9322 167 73676	LTL-4221NLC-KA

TRANSISTORS & INTEGRATED CIRCUITS

7400	3139 110 52600	TMP88CU74YF-'C55S52601'
7401	4822 209 31981	SAA6579T/V1
7402	5322 209 11446	HEF4051BT
7403	4822 209 15449	74HC4094D
7404	4822 209 15449	74HC4094D
7405	9322 145 26668	M24C02-WMN6
7406	5322 130 60159	BC847B
7407	5322 130 60159	BC847B
7408	5322 130 60159	BC847B
7409	5322 130 60	

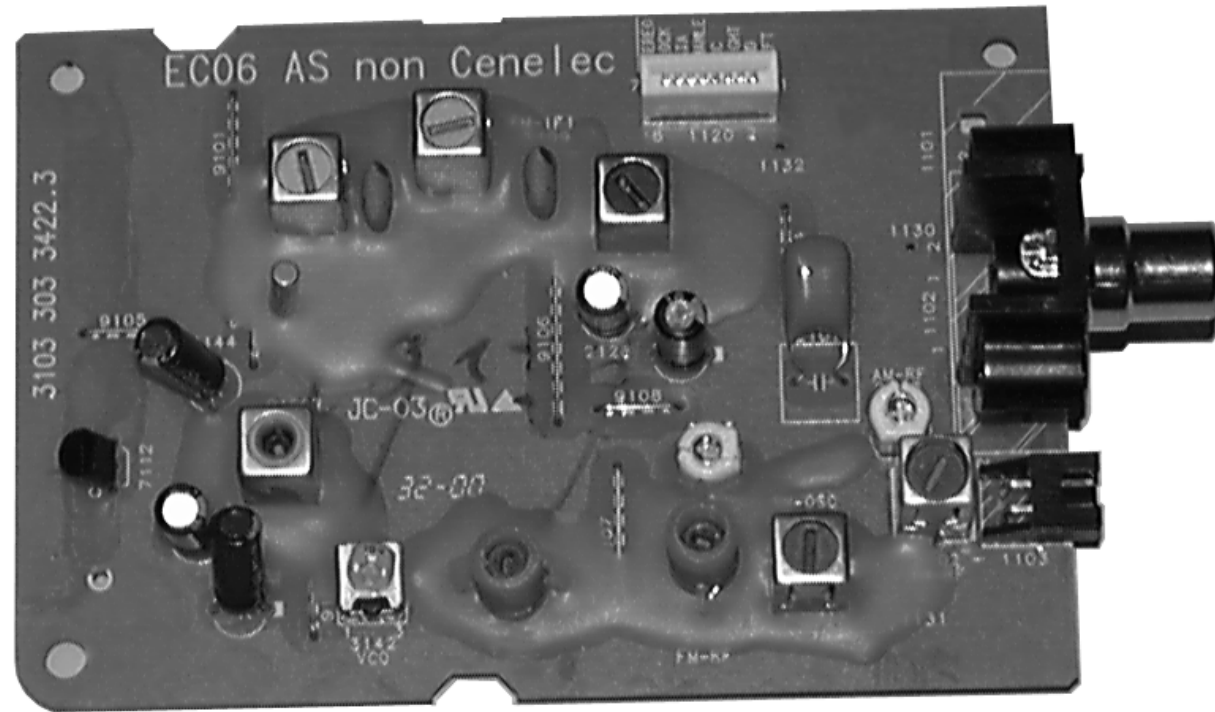

BLOCK DIAGRAM

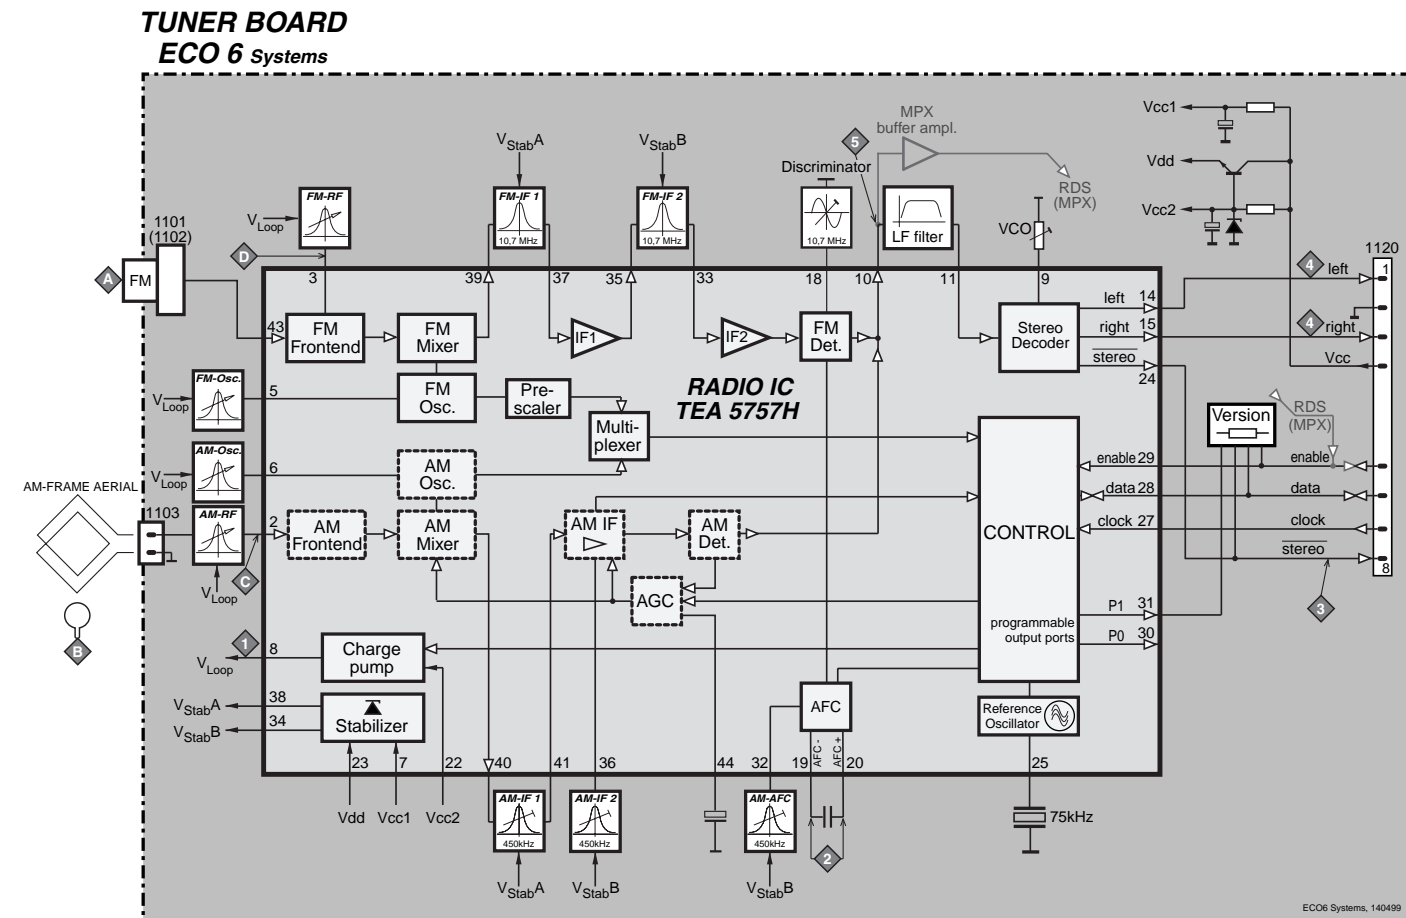


ECO6 Tuner Board

version: **SYSTEMS non-CENELEC**

TABLE OF CONTENTS

Blockdiagram7A-1
 Schematic Diagram7A-2
 Component Layout.....7A-3
 Adjustment table7A-3
 Electrical Partslist.....7A-4


TUNER BOARD ECO6 / SYSTEMS NON CENELEC

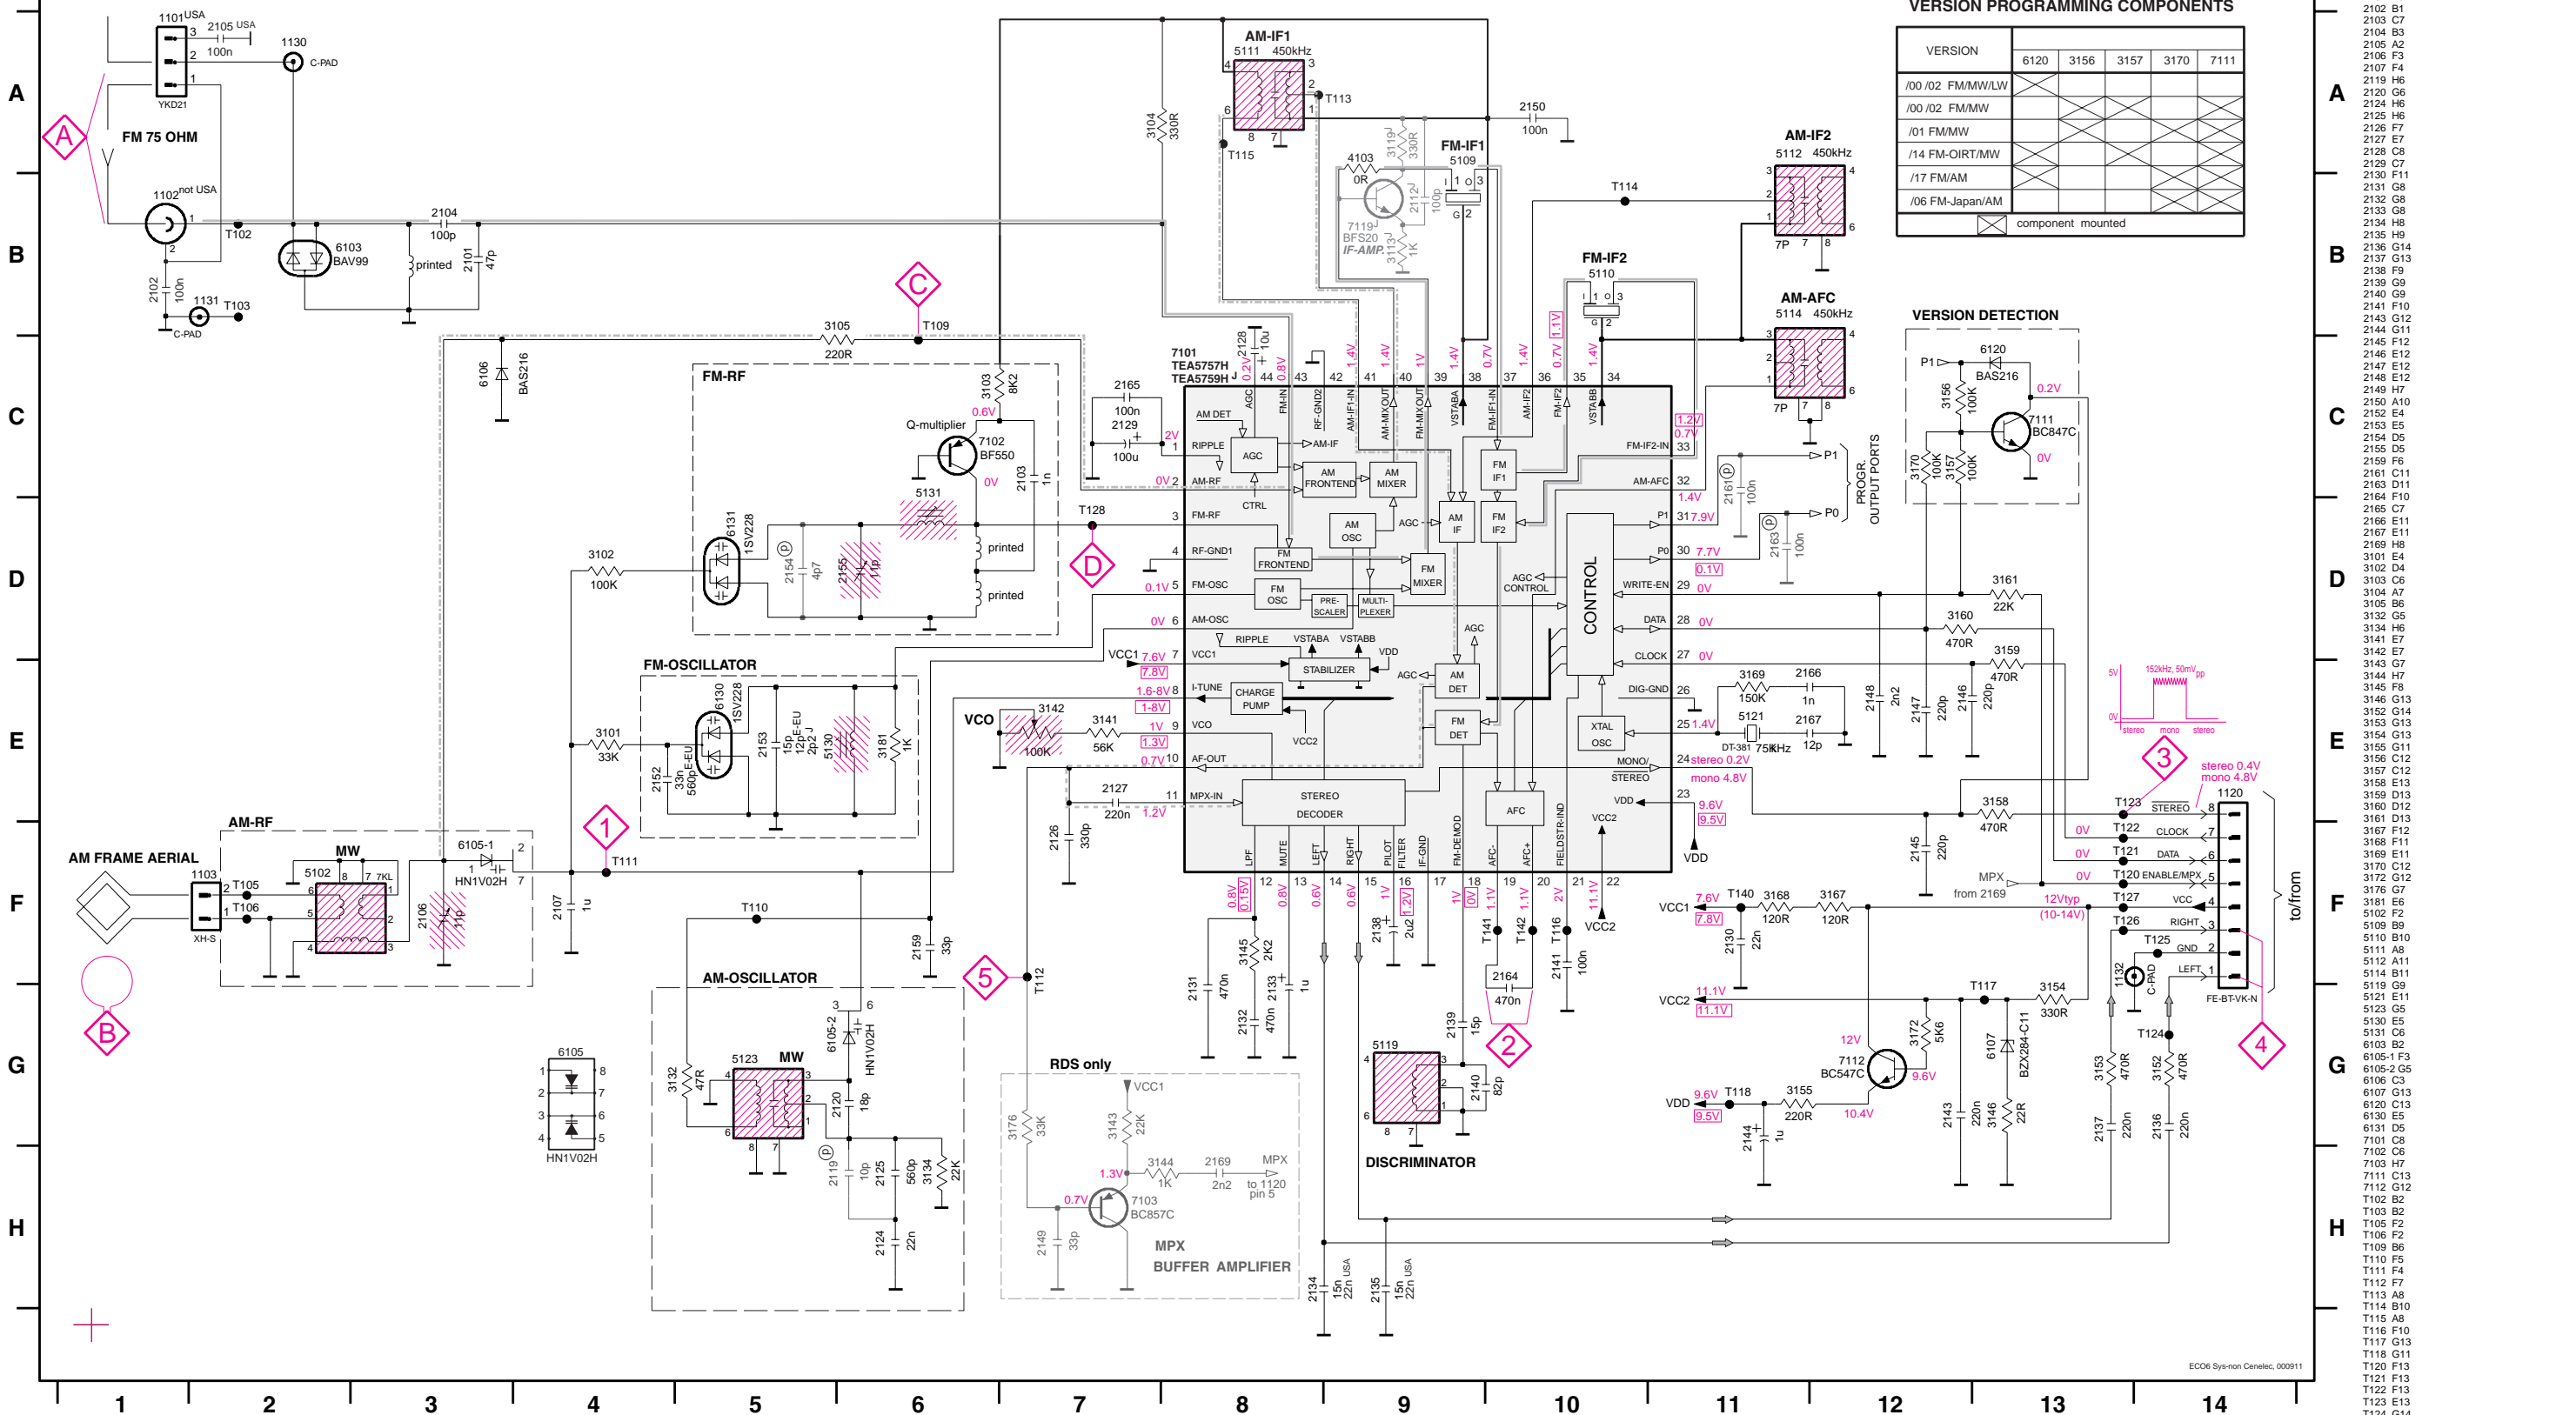

VERSION PROGRAMMING COMPONENTS

VERSION	6120	3156	3157	3170	7111
/00 /02 FM/MW/LW					
/00 /02 FM/MW					
/01 FM/MW					
/14 FM-OIRT/MW					
/17 FM/AM					
/06 FM-Japan/AM					

component mounted

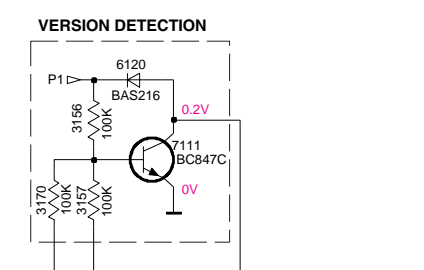


- 1101 A1
- 1102 B1
- 1103 F2
- 1120 E14
- 1130 A2
- 1131 B2
- 1132 G13
- 2101 B3
- 2102 B1
- 2103 C7
- 2104 B3
- 2105 A2
- 2106 F3
- 2107 F4
- 2119 H6
- 2120 G6
- 2124 H6
- 2125 H6
- 2126 F7
- 2127 E7
- 2128 C8
- 2129 C7
- 2130 F11
- 2131 G8
- 2132 G8
- 2133 G8
- 2134 H8
- 2135 H9
- 2136 G14
- 2137 G13
- 2138 F9
- 2139 G9
- 2140 G9
- 2141 F10
- 2143 G12
- 2144 G11
- 2145 F12
- 2146 E12
- 2147 E12
- 2148 E12
- 2149 H7
- 2150 A10
- 2152 E4
- 2153 E5
- 2154 D5
- 2155 D5
- 2159 F6
- 2161 C11
- 2163 D11
- 2164 F10
- 2165 C7
- 2166 E11
- 2167 E11
- 2169 H8
- 3101 E4
- 3102 D4
- 3103 C6
- 3104 A7
- 3105 B6
- 3132 G5
- 3134 H6
- 3141 E7
- 3142 E7
- 3143 G7
- 3144 H7
- 3145 F8
- 3146 G13
- 3152 G14
- 3153 G13
- 3154 G13
- 3155 G11
- 3156 C12
- 3157 C12
- 3158 E13
- 3159 D13
- 3160 D12
- 3161 D13
- 3167 F12
- 3168 F11
- 3169 E11
- 3170 C12
- 3172 G12
- 3176 G7
- 3181 E6
- 5102 F2
- 5109 B9
- 5110 B10
- 5111 A8
- 5112 A11
- 5119 G9
- 5121 E11
- 5123 G5
- 5130 E5
- 5131 C6
- 5132 B2
- 6105-1 F3
- 6105-2 G5
- 6106 C3
- 6107 G13
- 6120 G13
- 6130 E5
- 6131 D5
- 7101 C8
- 7102 C6
- 7103 H7
- 7111 C13
- 7112 F13
- T102 B2
- T103 B2
- T105 F2
- T106 F2
- T109 B6
- T110 F5
- T111 F4
- T112 F7
- T113 A8
- T114 B10
- T115 A8
- T116 B10
- T117 A8
- T118 G13
- T121 F13
- T122 F13
- T123 F13
- T124 F13
- T125 F13
- T126 F13
- T127 F13
- T128 D7
- T140 F11
- T141 F10
- T142 F10

LEGEND
 (P)...for provision only
 USA ... for USA version only
 E-EU ... for East European version only
 J ... for Japanese version only


...V FM mode stereo
 ...V MW mode
 ...V LW mode
 voltages measured while set is tuned to a strong transmitter

Signal path
 — FM
 - - - AM
 - - - MPX (Audio Frequency)
 ⇨ AF - left/right

1101 A6 1120 A4 1132 A5 2128 C4 2138 C2 3142 D2 5110 B3 5114 A2 5123 D5 7112 C1 9104 B5 9107 D4
 1102 B6 1130 B5 2106 C5 2129 B4 2144 B2 5102 D6 5111 B4 5119 C2 5130 D3 9101 A2 9105 B1 9108 C4
 1103 D6 1131 D5 2107 B5 2133 D2 2155 C4 5109 A3 5112 A3 5121 B2 5131 D4 9103 B2 9106 B3 9109 D2

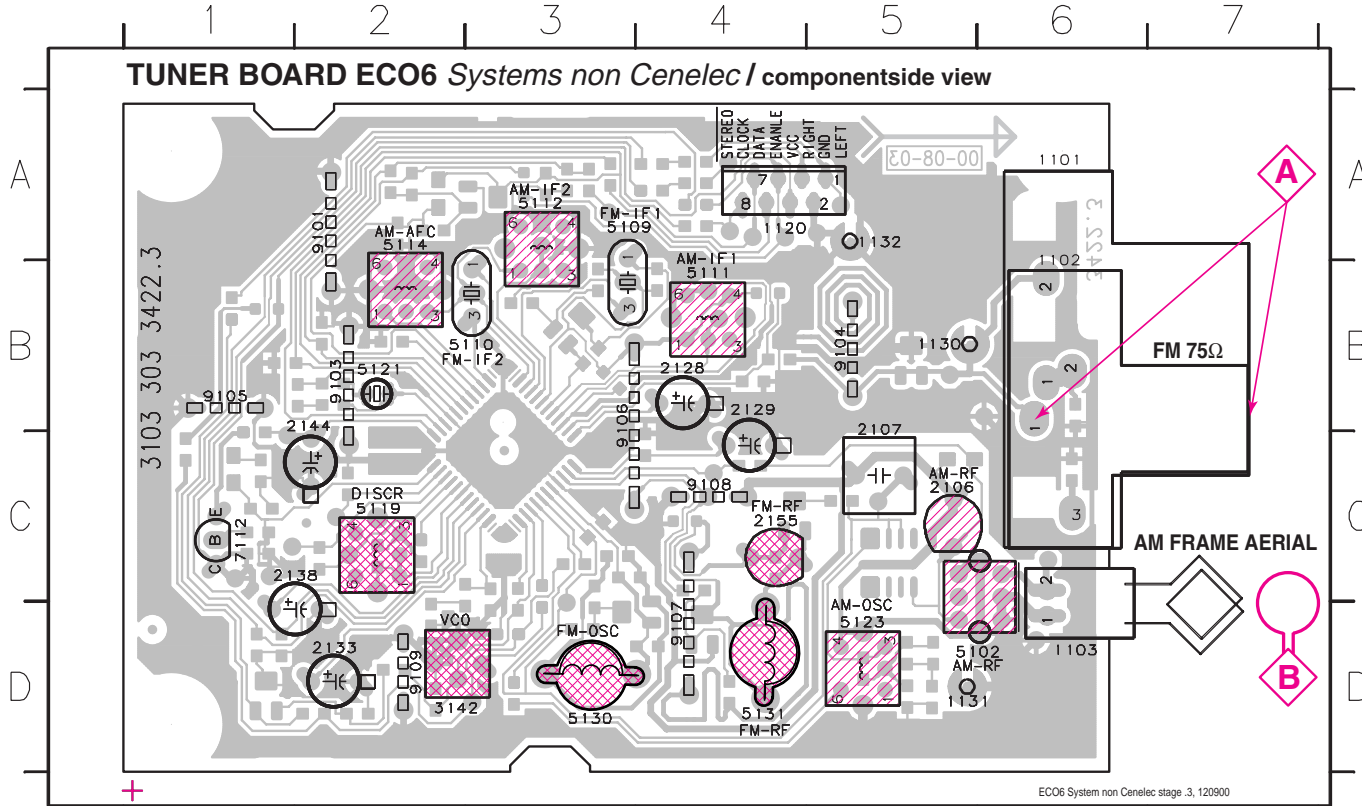

2101 B4 2119 D3 2130 D5 2137 A4 2146 B7 2153 C5 2165 C4 3103 C4 3134 D3 3152 A4 3158 A4 3169 B6 4106 C4 6107 C7 7103 D7
 2102 B1 2120 D3 2131 C5 2139 C6 2147 A5 2154 C4 2166 B6 3104 B4 3141 C5 3153 A4 3159 A5 3170 A6 4107 C5 6120 A6 7111 A5
 2103 D4 2124 D3 2132 D6 2140 C6 2148 B6 2159 C5 2167 B6 3105 C4 3143 D6 3154 C7 3160 A5 3172 C7 4108 C5 6130 D4 7119 B5
 2104 B4 2125 D3 2134 D7 2141 C6 2149 D6 2161 A6 2169 A4 3113 B5 3144 B7 3155 C7 3161 A5 3176 D6 6103 B3 6131 C4
 2105 C1 2126 D6 2135 D7 2143 C7 2150 B5 2163 B6 3101 D5 3119 B5 3145 C5 3156 A6 3167 B7 3181 D4 6105 C3 7101 C5
 2112 B5 2127 C5 2136 A4 2145 A5 2152 C5 3102 C3 3132 D5 3146 C7 3157 A6 3168 C7 4103 B5 6106 C3 7102 D4

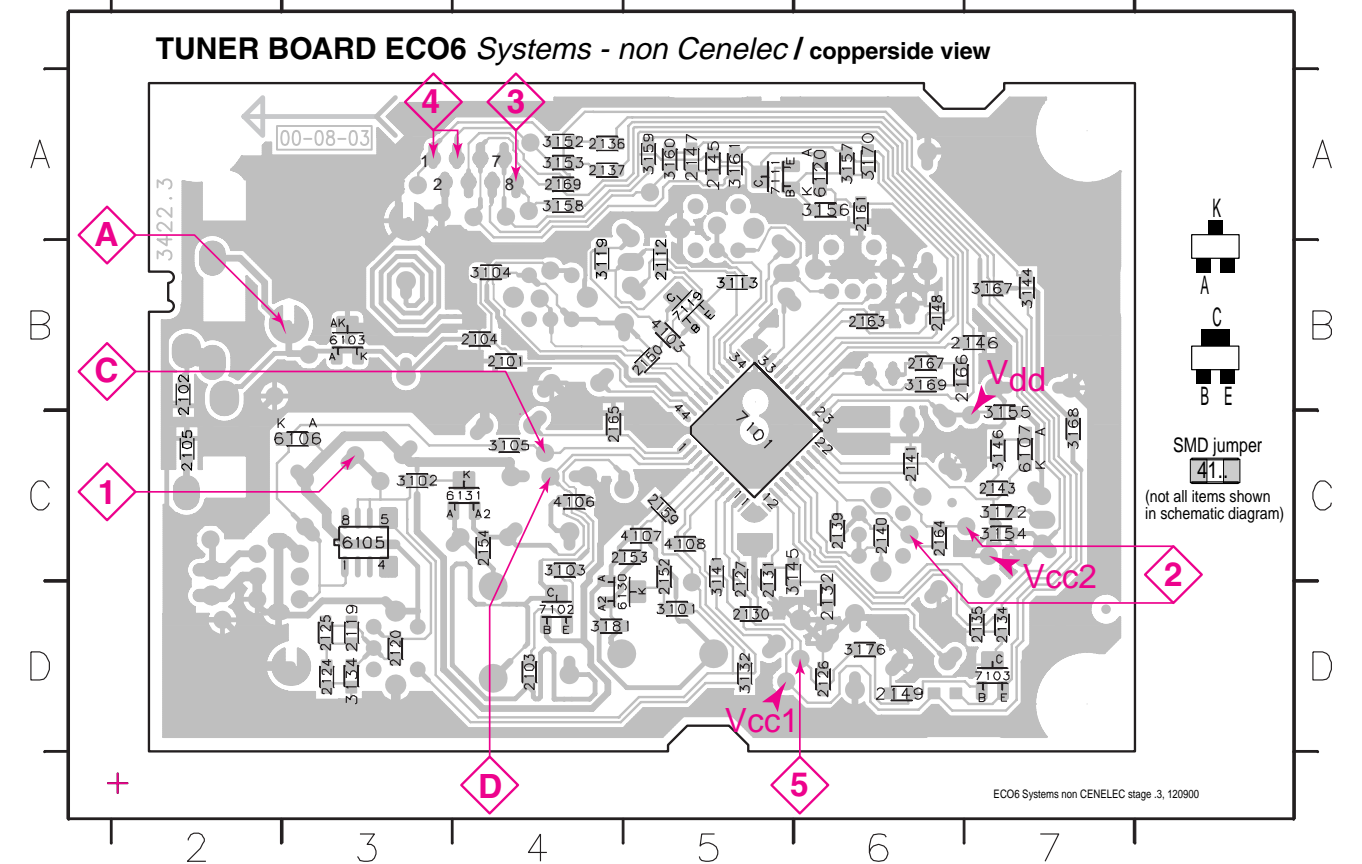

These assembly drawings show a summary of all possible versions.
 For components used in a specific version see schematic diagram respectively partlist.

TUNER ADJUSTMENT TABLE (ECO6 FM/MW- and FM/MW/LW - versions with AM-frame aerial)

Waverange	Input frequency	Input	Tuned to	Adjust	Output	Scope/Voltmeter
VARICAP ALIGNMENT						
FM 87.5 - 108MHz (65.81 - 74, 87.5 - 108MHz)	108MHz		108MHz	5130		8V ±0.2V
	87.5MHz (65.81MHz)		87.5MHz (65.81MHz)	check		4.3V ±0.5V (1.2V ±0.5V)
MW FM/AM-version, 10kHz grid 530 - 1700kHz	1700kHz		1700kHz	5123		8V ±0.2V
	530kHz		530kHz	check		1.1V ±0.4V
FM/MW-version, 9kHz grid 531 - 1602kHz	1602kHz		1602kHz	5123	1	6.9V ±0.2V
	531kHz		531kHz	check		1.1V ±0.4V
LW 153 - 279kHz	279kHz		279kHz	5122		8V ±0.2V
	153kHz		153kHz	check		1.1V ±0.4V
MW FM/MW/LW- version, 9kHz grid 531 - 1602kHz	1602kHz		1602kHz	5123		8V ±0.2V
	531kHz		531kHz	check		1.1V ±0.4V
FM IF						
FM	10.7MHz, 45mV continuous wave	D		5119	2	0 ± 3 mV DC
FM RF						
FM 87.5 - 108MHz (65.81 - 74, 87.5 - 108MHz)	108MHz	A	108MHz	2155	4	MAX
	87.5MHz (65.81MHz)	mod=1kHz Δf=±22.5kHz	87.5MHz (65.81MHz)	5131		
VCO						
FM	98MHz, 1mV continuous wave	A	98MHz	3142	3	152kHz ±1kHz ¹⁾
AM IF						
MW	450kHz connect pin 6 of IC 7101 (AM Osc.) with 3.3kΩ to Vcc	C		5111	5	
		C		5112		
AM AFC MW		C	continuous wave V _{RF} = 2mV	5114	2	0 ± 2 mV DC
AM RF³⁾						
MW⁴⁾ FM/MW/LW- and FM/MW-version (9kHz grid)	1494kHz	B	1494kHz	2106	5	
	558kHz		558kHz	5102		
LW	198kHz		198kHz	5103		
MW FM/AM-version, 10kHz grid 530 - 1700kHz	1500kHz	B	1500kHz	2106	5	
	560kHz		560kHz	5102		

Use Service Testprogram. By selecting the TUNER TEST test frequencies will be stored as preset frequencies automatically.

- 1) If sensitivity of frequency counter is too low adjust to max. channel separation (input signal: stereo left 90% + 9%, adjust output on right channel to minimum)
- 2) RC network serves for damping the IF-filter while adjusting the other one.
- 3) For AM RF adjustments the original frame antenna has to be used!
- 4) MW has to be aligned before LW.

↑ Repeat

MISCELLANEOUS

1101	2422 015 19376	SOCKET 2P CLICKFIT	USA only
1102	4822 267 10283	SOCKET COAX, IEC 75Ω	not USA
1103	4822 265 31184	JST CONNECTOR 2 POLE	
1120	4822 265 11515	FFC SOCKET, 8P	

CAPACITORS

2101	4822 126 13692	47pF	1%	63V	
2102	4822 126 13838	100nF	10%	50V	not USA
2103	5322 122 31647	1nF	10%	63V	
2104	5322 122 32531	100pF	5%	50V	
2105	4822 126 13838	100nF	10%	50V	USA only

2106	2020 800 00191	3-11pF TRIMCAP.,N450		
2107	4822 121 51319	1μF	20%	50V
2120	4822 126 13689	18pF	1%	63V
2124	5322 122 32654	22nF	10%	63V
2125	2020 552 96199	560pF	1%	50V

2126	5322 122 31863	330pF	5%	50V
2127	4822 126 14076	220nF	20%	25V
2128	4822 124 40248	10μF	20%	63V
2129	4822 124 41584	100μF	20%	10V
2130	5322 122 32654	22nF	10%	63V

2131	4822 126 13482	470nF	20%	16V	
2132	4822 126 13482	470nF	20%	16V	
2133	4822 124 21913	1μF	20%	63V	
2134	4822 126 13188	15nF	5%	63V	not USA
2134	5322 122 32654	22nF	10%	63V	USA only

2135	4822 126 13188	15nF	5%	63V	not USA
2135	5322 122 32654	22nF	10%	63V	USA only
2136	4822 126 14076	220nF	20%	25V	
2137	4822 126 14076	220nF	20%	25V	
2138	4822 124 22652	2,2μF	20%	50V	

2139	4822 126 14236	15pF	5%	50V
2140	4822 126 13695	82pF	1%	63V
2141	4822 126 13838	100nF	10%	50V
2143	4822 126 14076	220nF	20%	25V
2144	4822 124 21913	1μF	20%	63V

2145	4822 122 33575	220pF	5%	50V	
2146	4822 122 33575	220pF	5%	50V	
2147	4822 122 33575	220pF	5%	50V	
2148	4822 122 33127	2,2nF	10%	63V	
2149	5322 122 32659	33pF	5%	50V	RDS only

2150	4822 126 13838	100nF	10%	50V	
2152	4822 126 12105	33nF	5%	63V	not for East Europe
2152	5322 116 80853	560pF	5%	63V	for East Europe only
2153	4822 126 13486	15pF	2%	63V	not for East Europe
2153	4822 122 33926	12pF	2%	50V	for East Europe only

2155	2020 800 00191	3-11pF TRIMCAP.,N450		
2159	5322 122 32659	33pF	5%	50V
2164	4822 126 13482	470nF	20%	16V
2165	4822 126 13838	100nF	10%	50V
2166	5322 122 31647	1nF	10%	63V

2167	4822 122 33926	12pF	5%	50V	
2169	4822 122 33127	2,2nF	10%	63V	RDS only

RESISTORS

3101	4822 051 20333	33kΩ	5%	0,1W
3102	4822 117 10837	100kΩ	1%	0,1W
3103	4822 051 20822	8,2kΩ	5%	0,1W
3104	4822 117 13577	330Ω	1%	0,1W
3105	4822 117 11503	220Ω	5%	0,1W

3132	4822 051 20479	47Ω	5%	0,1W
3134	4822 051 20223	22kΩ	5%	0,1W
3141	4822 117 11148	56kΩ	1%	0,1W
3142	4822 100 12159	TRIMPOT. 100kΩ		

RESISTORS

3143	4822 051 20223	22kΩ	5%	0,1W	RDS only
3144	4822 051 10102	1kΩ	2%	0,25W	RDS only
3145	4822 117 11449	2,2kΩ	1%	0,1W	
3146	4822 051 20229	22Ω	5%	0,1W	
3152	4822 051 20471	470Ω	5%	0,1W	

3153	4822 051 20471	470Ω	5%	0,1W
3154	4822 117 13577	330Ω	1%	0,1W
3155	4822 117 11503	220Ω	5%	0,1W
3156	4822 117 10837	100kΩ	1%	0,1W
3157	4822 117 10837	100kΩ	1%	0,1W

3158	4822 051 20471	470Ω	5%	0,1W
3159	4822 051 20471	470Ω	5%	0,1W
3160	4822 051 20471	470Ω	5%	0,1W
3161	4822 051 20223	22kΩ	5%	0,1W
3167	4822 051 20121	120Ω	5%	0,1W

3168	4822 051 20121	120Ω	5%	0,1W	
3169	4822 051 20154	150kΩ	5%	0,1W	
3170	4822 117 10837	100kΩ	1%	0,1W	
3172	4822 051 20562	5,6kΩ	5%	0,1W	
3176	4822 051 20333	33kΩ	5%	0,1W	RDS only

3181	4822 051 10102	1kΩ	2%	0,25W
4103	4822 051 20008	CHIP JUMPER 0805		
4106	4822 051 20008	CHIP JUMPER 0805		
4107	4822 051 20008	CHIP JUMPER 0805		
4108	4822 051 20008	CHIP JUMPER 0805		

COILS

5102	4822 157 71634	RF-COIL MW
5109	4822 242 70665	FM-IF FILTER 10,7MHz
5110	4822 242 70665	FM-IF FILTER 10,7MHz
5111	2422 549 44023	AM-IF FILTER 450kHz
5112	4822 157 70302	AM-IF FILTER 450kHz

5114	4822 157 70302	AM-IF FILTER 450kHz
5119	4822 157 11443	DISCRIMINATOR COIL
5121	4822 242 10261	QUARTZ 75kHz
5123	2422 549 44108	RF-COIL, AM-OSCILLATOR
5130	4822 157 11843	RF COIL 1,5 TURNS

5131	4822 157 11843	RF COIL 1,5 TURNS
------	----------------	-------------------

DIODES

6103	5322 130 34337	BAV99
6105	4822 130 83075	HN1V02H
6106	4822 130 83757	BAS216
6107	9340 386 90115	BZX284-C11
6120	4822 130 83757	BAS216


6130	4822 130 82833	1SV228
6131	4822 130 82833	1SV228

TRANSISTORS

7102	4822 130 42131	BF550	
7103	5322 130 42756	BC857C	RDS only
7111	5322 130 42755	BC847C	
7112	4822 130 44503	BC547C	

INTEGRATED CIRCUITS

7101	9351 740 80557	TEA5757H/V1, RADIO IC
------	----------------	-----------------------

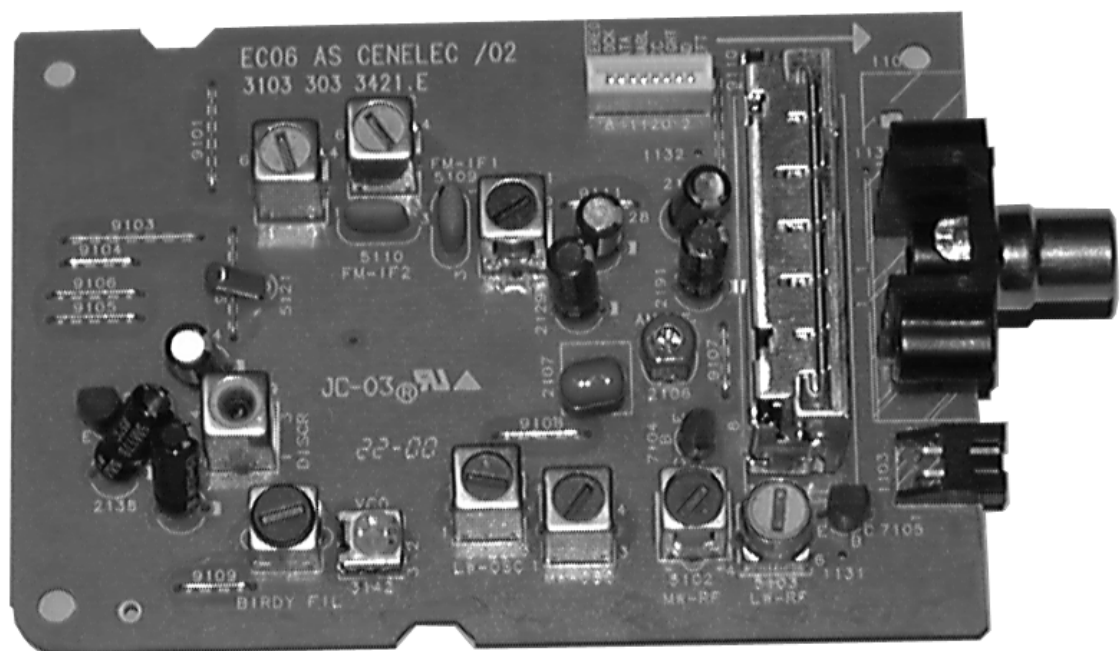


ECO6 Tuner Board

version: *SYSTEMS CENELEC*


TABLE OF CONTENTS

- Blockdiagram7B-1
- Schematic Diagram7B-2
- Component Layout7B-3
- Adjustment table7B-3
- Electrical Partslist7B-4

BLOCK DIAGRAM

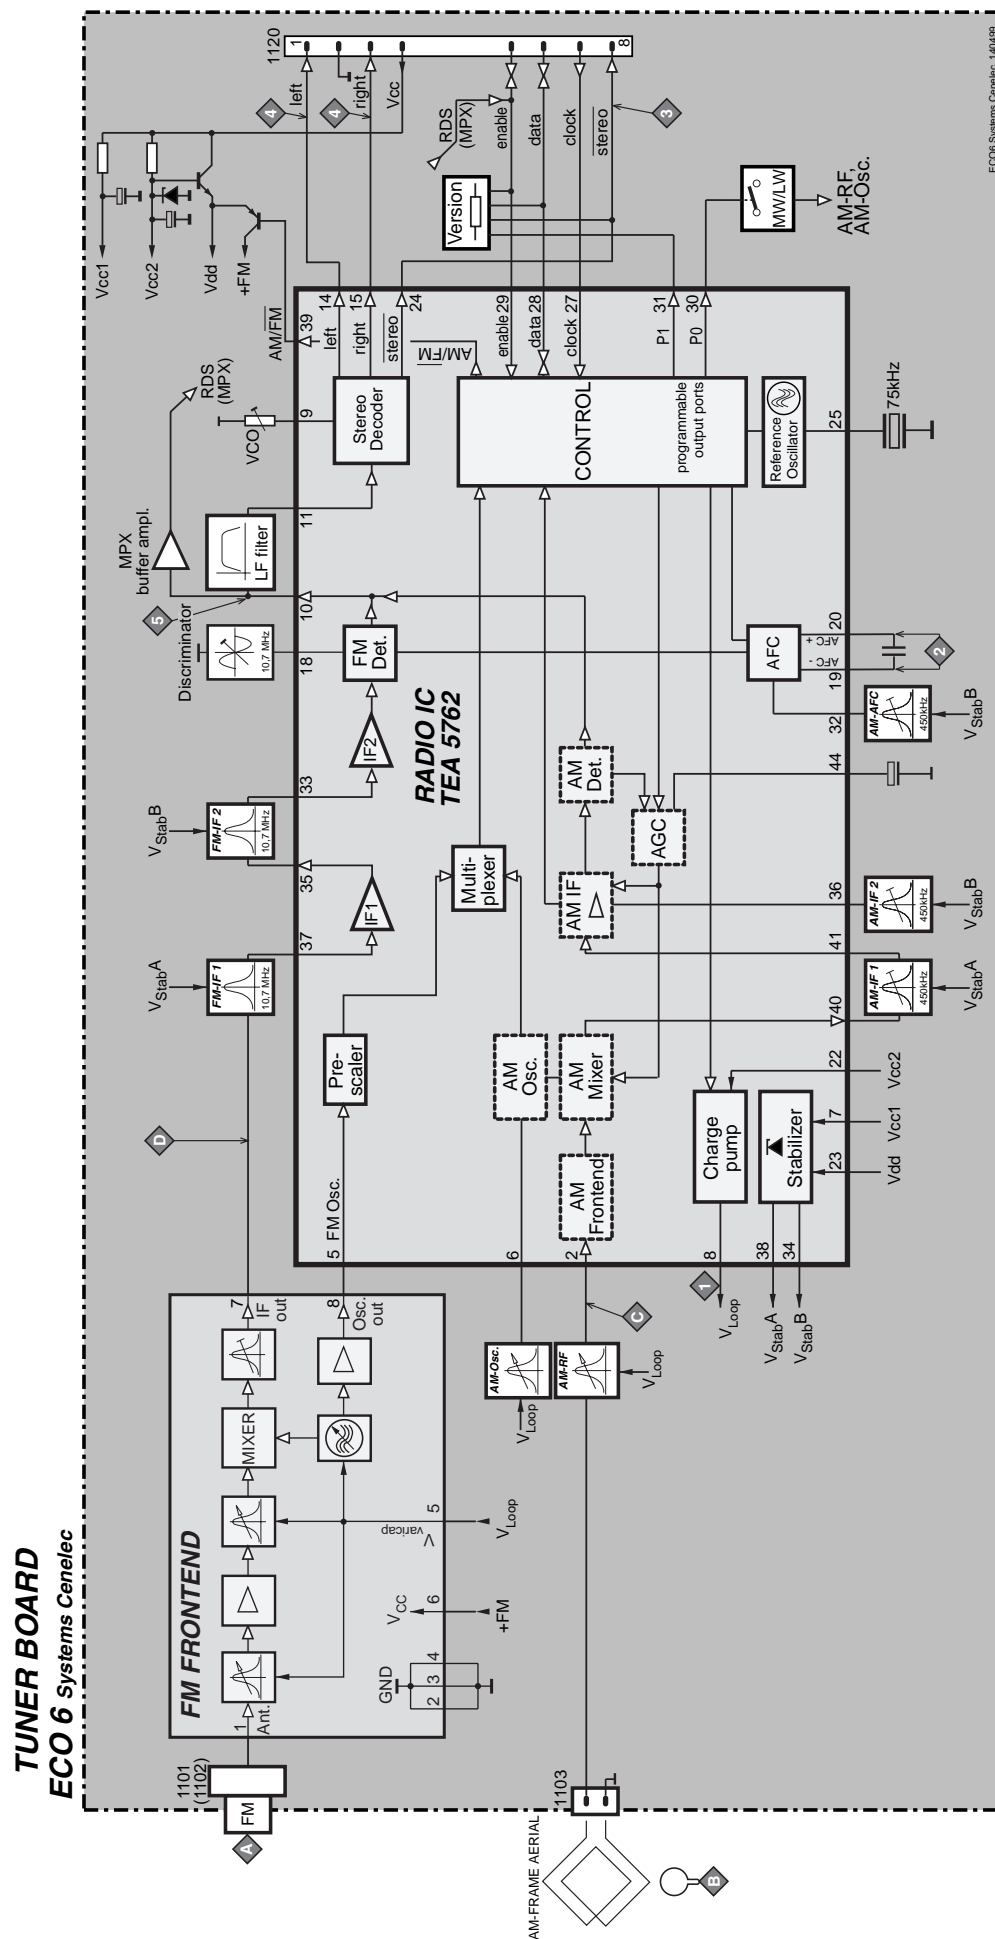



TUNER BOARD ECO6 / SYSTEMS-CENELEC

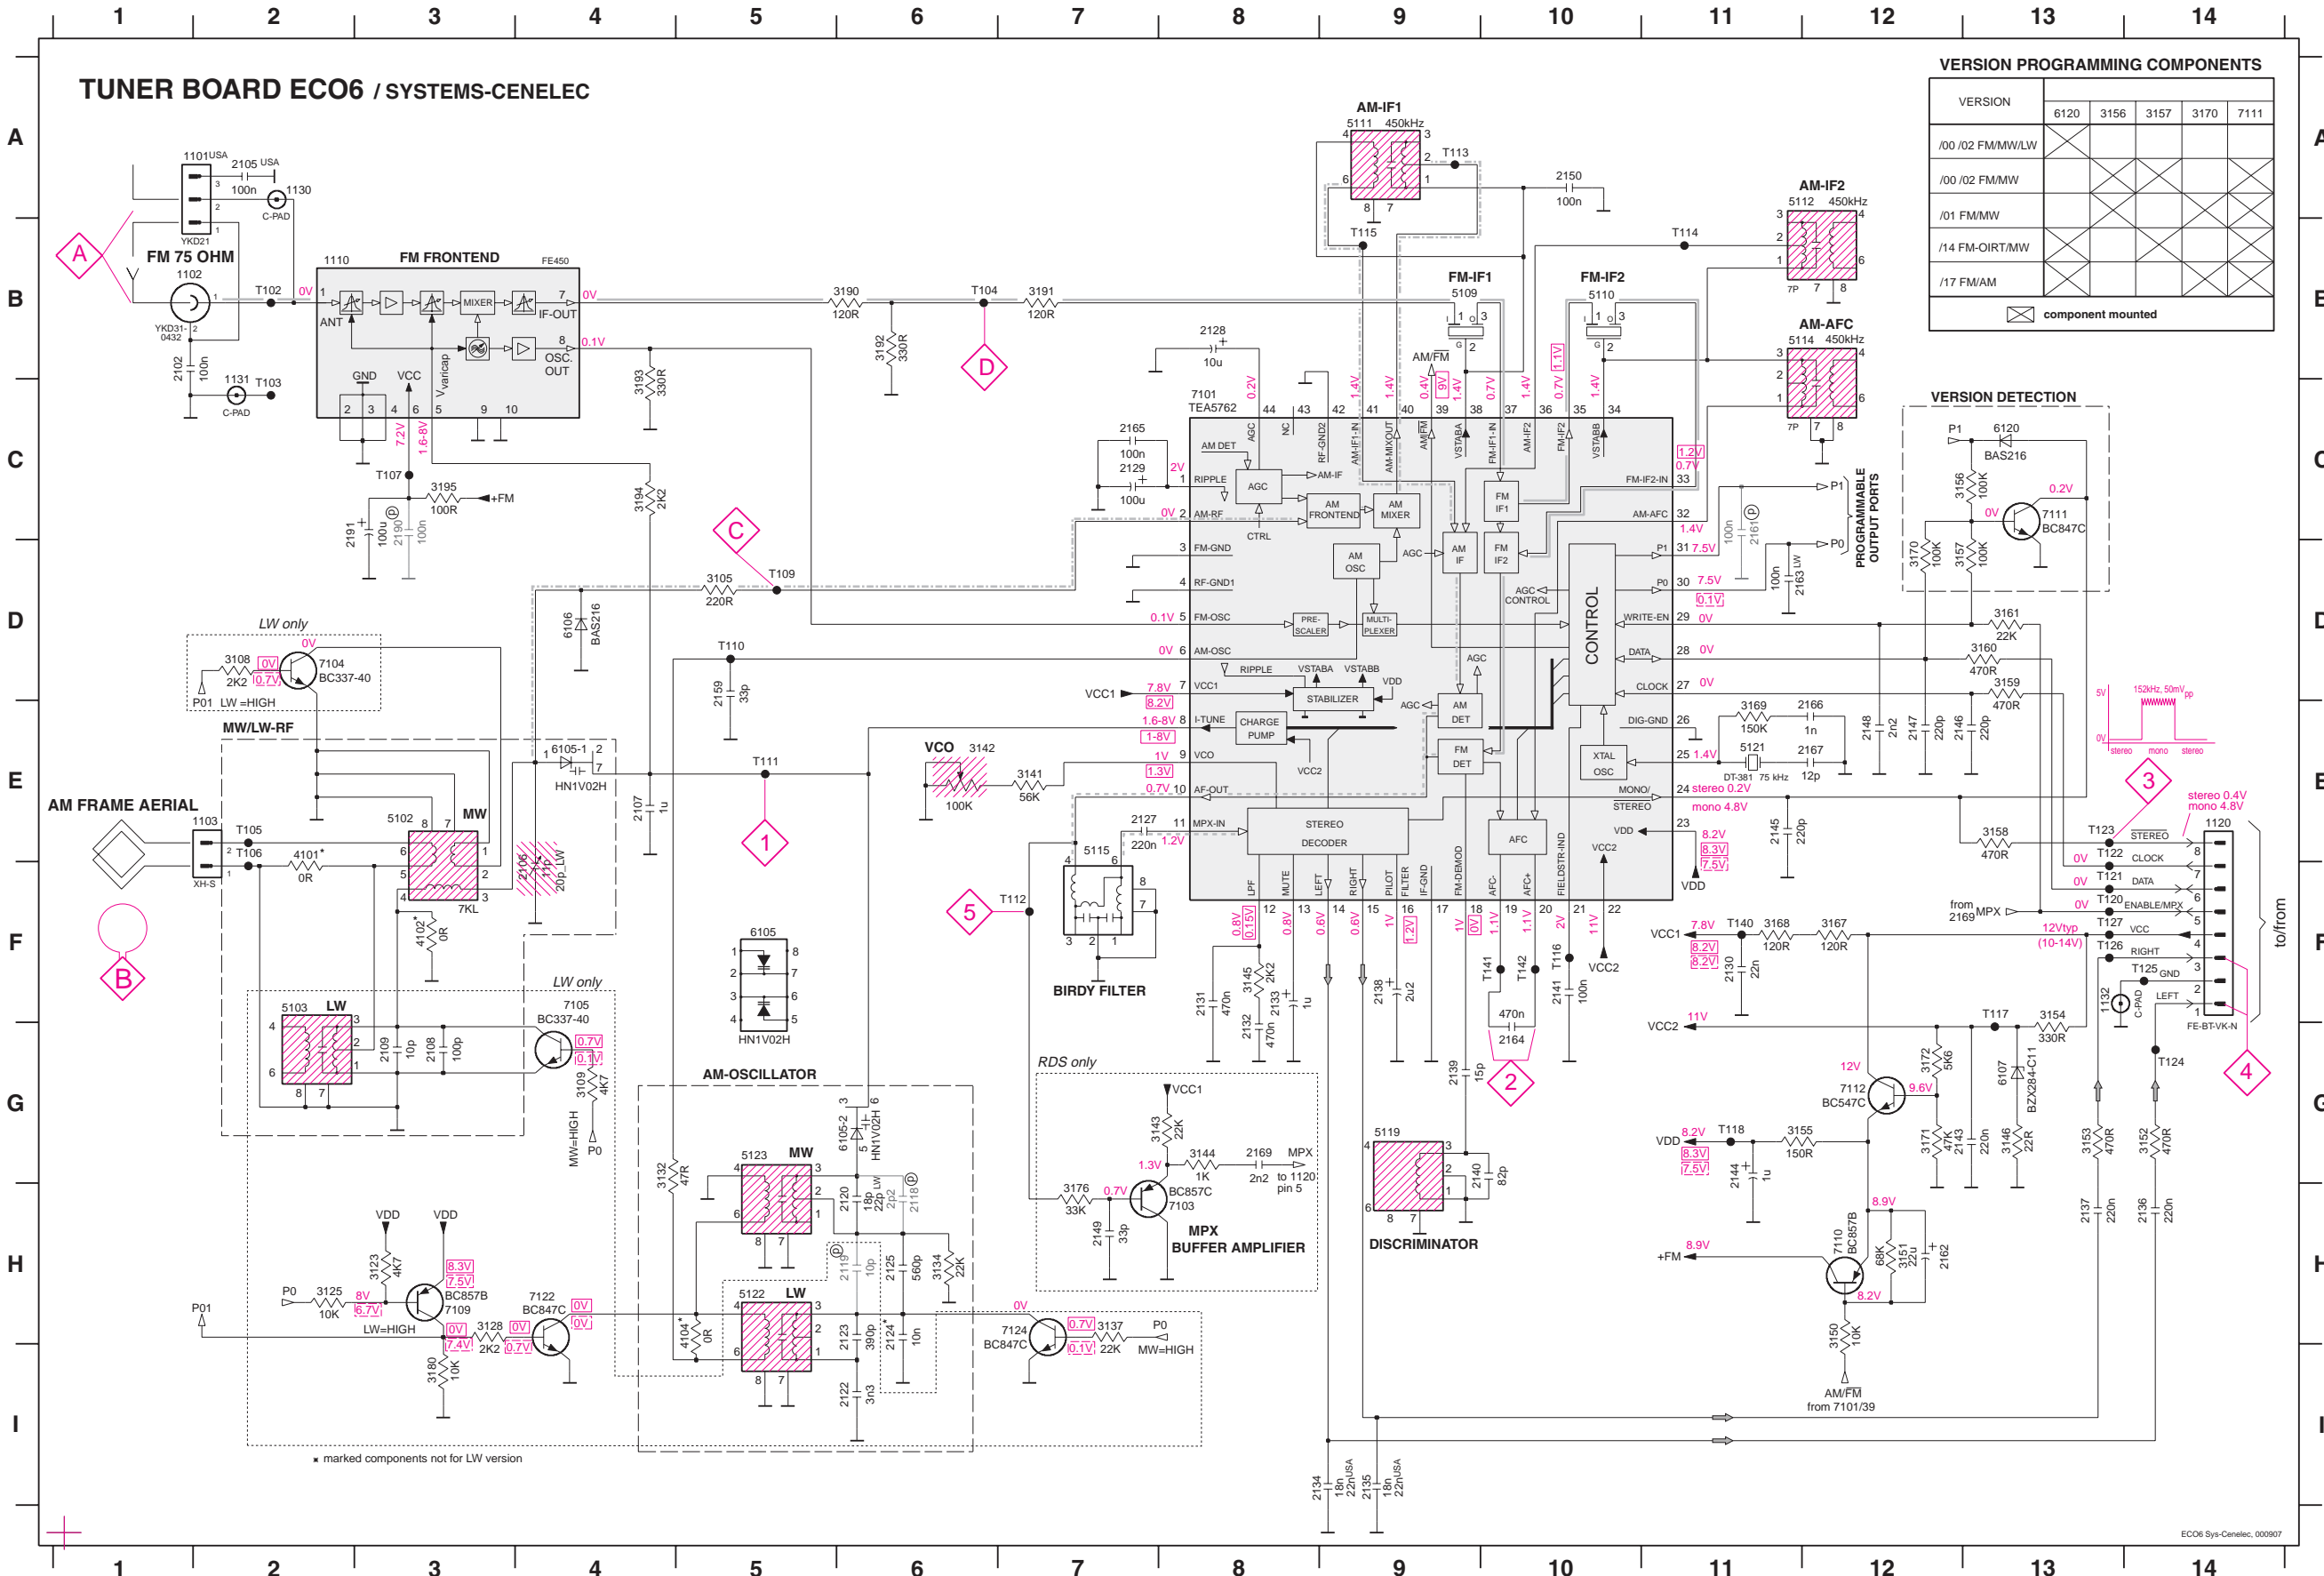

VERSION PROGRAMMING COMPONENTS

VERSION	6120	3156	3157	3170	7111
/00 /02 FM/MW/LW					
/00 /02 FM/MW					
/01 FM/MW					
/14 FM-OIRT/MW					
/17 FM/AM					

☒ component mounted

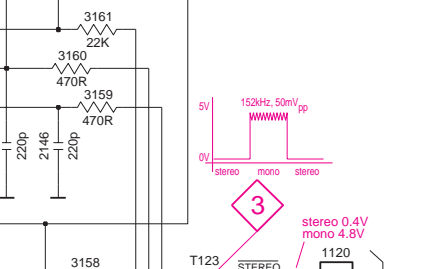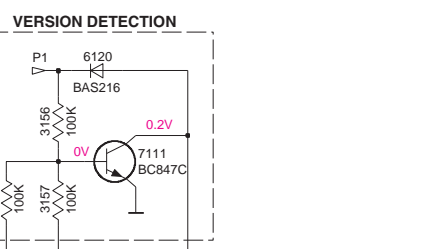


- A102 A2
- A102 B1
- A102 E2
- A102 B2
- A102 C8
- A102 E14
- A102 H8
- A102 D2
- A102 F4
- A102 H3
- A102 B1
- A102 C13
- A102 A2
- A102 C13
- A102 E3
- A102 G12
- A102 E4
- A102 H4
- A102 G3
- A102 H7
- A102 G3
- A102 B2
- A102 H6
- A102 B2
- A102 H6
- A102 B6
- A102 E2
- A102 H6
- A102 E2
- A102 H6
- A102 C3
- A102 H6
- A102 D5
- A102 E5
- A102 E7
- A102 E5
- A102 B8
- A102 F7
- A102 C7
- A102 A9
- A102 F11
- A102 B11
- A102 F10
- A102 F10
- A102 F13
- A102 G11
- A102 F8
- A102 G11
- A102 F10
- A102 E11
- A102 E12
- A102 E12
- A102 H7
- A102 A10
- A102 D6
- A102 H3
- A102 C11
- A102 H12
- A102 D12
- A102 H11
- A102 G10
- A102 C7
- A102 E11
- A102 E11
- A102 G8
- A102 C3
- A102 C3
- A102 D5
- A102 D2
- A102 G4
- A102 H3
- A102 C11
- A102 H3
- A102 G4
- A102 H6
- A102 H7
- A102 E7
- A102 E6
- A102 G7
- A102 G8
- A102 F8
- A102 G13
- A102 H2
- A102 C11
- A102 G13
- A102 G12
- A102 D12
- A102 E13
- A102 D13
- A102 D13
- A102 F12
- A102 F11
- A102 H12
- A102 E11
- A102 D12
- A102 G12
- A102 G12
- A102 I3
- A102 B6
- A102 B7
- A102 B6
- A102 B4
- A102 C4
- A102 C3
- A102 E2
- A102 F3
- A102 H5
- A102 E3
- A102 F2
- A102 B9
- A102 B9
- A102 B10
- A102 A9
- A102 A11
- A102 B11
- A102 E7
- A102 G9
- A102 E11
- A102 H5
- A102 G6
- A102 E4
- A102 E4
- A102 G6

LEGEND


- * ... only assembled in FM/AM version
- Ⓧ ... for provision only
- USA ... for USA version only
- LW ... for LW version only




- ...V FM mode stereo
- ...V MW mode
- ...V LW mode
- Ⓧ voltages measured while set is tuned to a strong transmitter

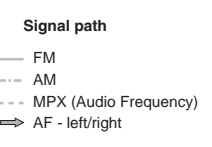

1101 B5 1110 B4 1131 C5 2107 B3 2133 C1 2162 A4 5102 C4 5110 A2 5114 A2 5121 B2 7104 C4 9101 A2 9104 B1 9107 B4 9110 A4
 1102 B5 1120 A4 1132 A4 2128 A3 2138 B1 2191 B4 5103 C4 5111 A3 5115 C2 5122 C3 7105 C5 9102 B2 9105 B1 9108 B3 9111 A3
 1103 C5 1130 A5 2106 B4 2129 B3 2144 B1 3142 C2 5109 B3 5112 A2 5119 B2 5123 C3 7112 B1 9103 A1 9106 B1 9109 C2



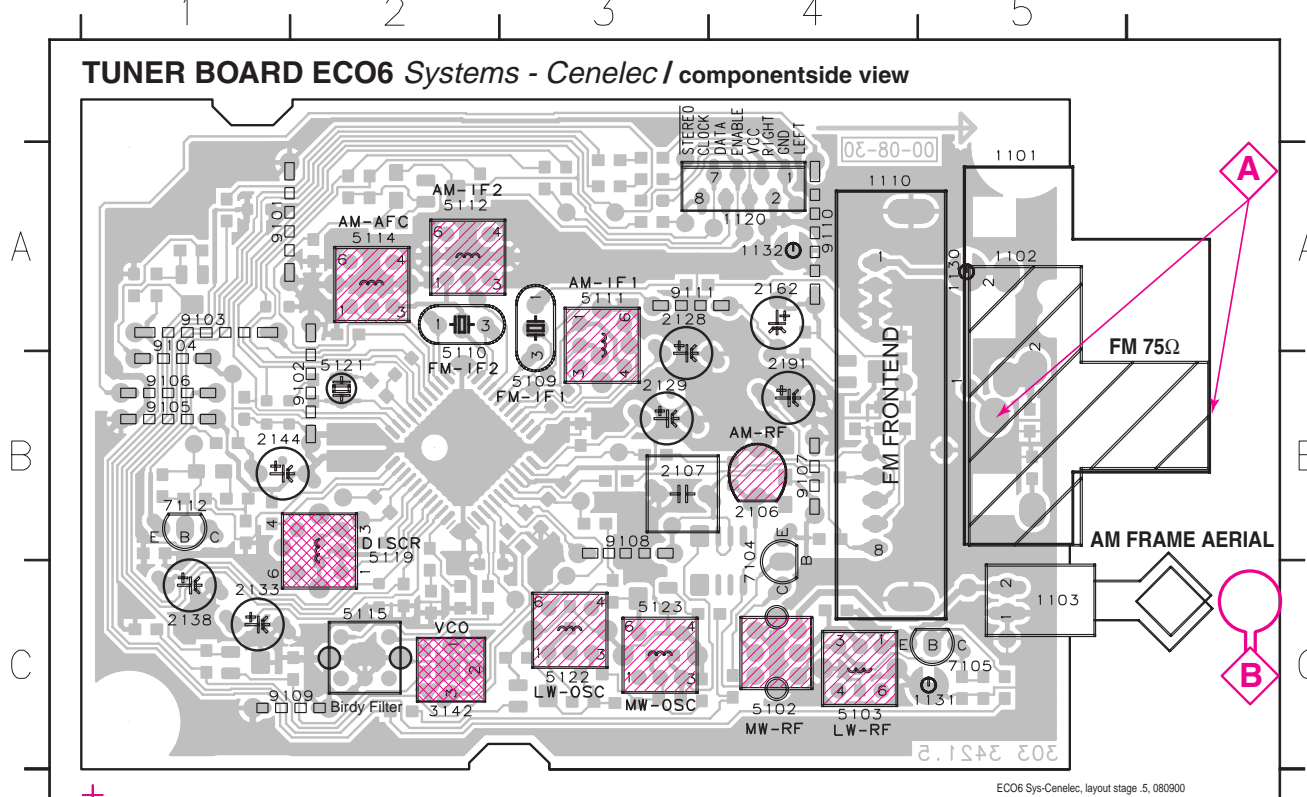

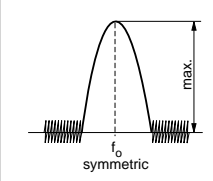


2102 B1 2120 C3 2130 B3 2137 A3 2146 B5 2161 A4 2169 A3 3125 A5 3143 C5 3152 A3 3158 A3 3169 B4 3190 B2 4101 C2 6105 B2 7109 A5
 2105 B1 2122 C3 2131 C4 2139 B4 2147 A5 2163 A4 2190 B2 3128 C2 3144 A5 3153 A3 3159 A3 3170 A4 3191 A3 4102 C2 6106 B2 7110 B2
 2108 C1 2123 C3 2132 C4 2140 B4 2148 B4 2164 B4 3105 B3 3132 B3 3145 C4 3154 B5 3160 A3 3171 B5 3192 A2 4104 C3 6107 B5 7111 A4
 2109 C1 2124 C3 2134 C4 2141 B5 2149 C4 2165 B3 3108 C2 3134 C3 3146 B5 3155 B5 3161 A4 3172 B5 3193 B2 4105 B2 6120 A4 7122 C3
 2118 C3 2125 C3 2135 C5 2143 B5 2150 B3 2166 B5 3109 C1 3137 C4 3150 B3 3156 A4 3167 A5 3176 C4 3194 B2 4106 B3 7101 B4 7124 C3
 2119 C3 2127 C4 2136 A3 2145 B5 2159 B3 3123 A5 3141 B3 3151 A2 3157 A4 3168 C5 3180 A5 3195 B2 4107 C4 7103 C5

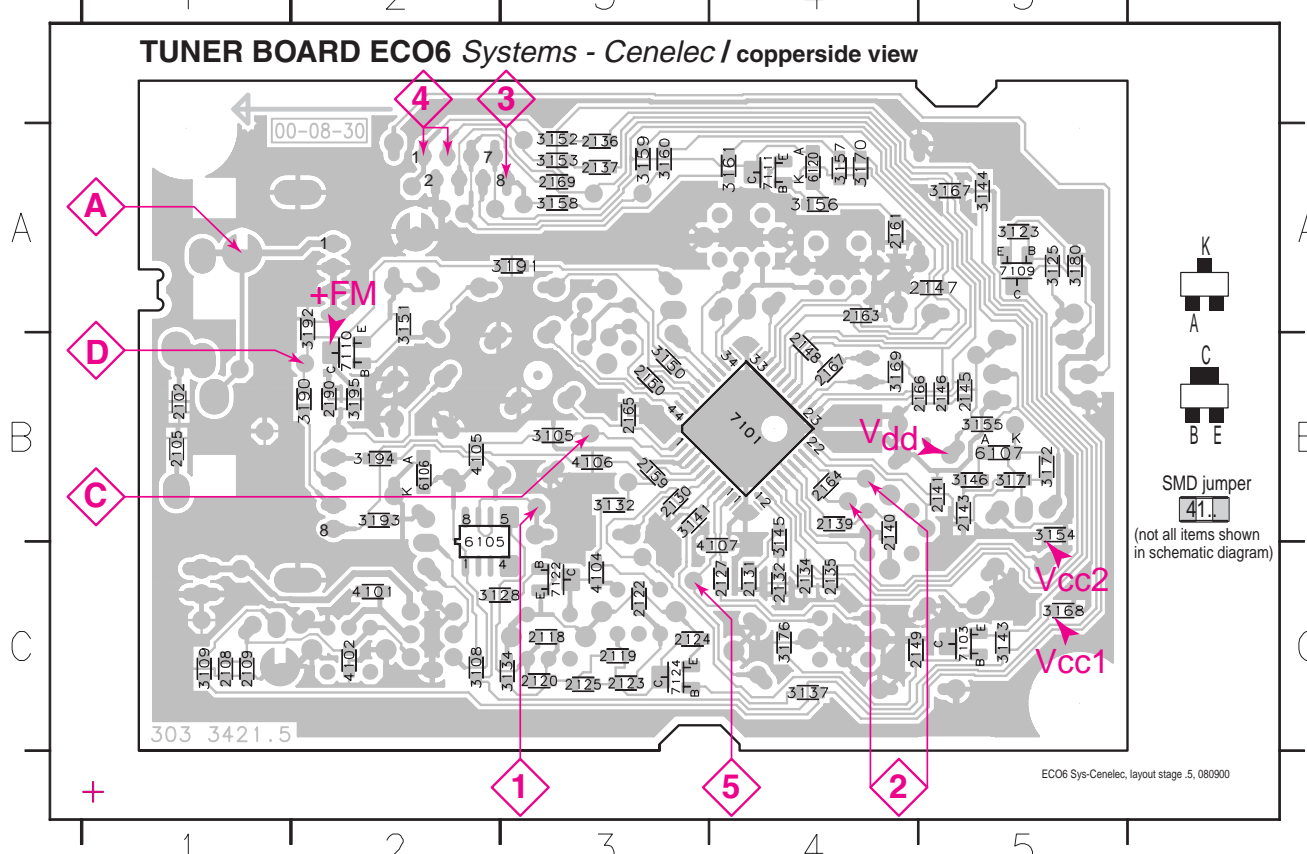

These assembly drawings show a summary of all possible versions. For components used in a specific version see schematic diagram respectively partslist.

TUNER ADJUSTMENT TABLE (ECO6 Cenelec FM/MW - and FM/MW/LW - versions with AM-frame aerial)

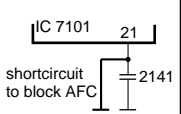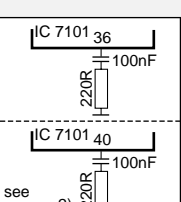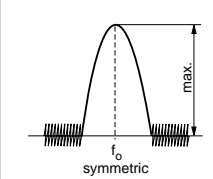Waverange	Input frequency	Input	Tuned to	Adjust	Output	Scope/Voltmeter
VARICAP ALIGNMENT						
FM 87.5 - 108MHz (50kHz grid)			108MHz	check		8V ±1.2V
			87.5MHz	check		1.6V ±0.5V
MW 531 - 1602kHz (9kHz grid)			1602kHz	5123	1	8V ±0.2V 3-band 6.9V ±0.2V 2-band
			531kHz	check		1.1V ±0.4V
LW 153 - 279kHz (3kHz grid)			279kHz	5122		8V ±0.2V
			153kHz	check		1.1V ±0.4V
FM - IF						
FM	10.7MHz, 45mV continuous wave	D		5119	2	0mV ±3mV
FM - VCO						
FM	98MHz, 1mV continuous wave	A	98MHz	3142	3	152kHz ±1kHz ¹⁾
FM RF (channel separation) Note: The FM-frontend unit has already been adjusted by the factory and needs therefore no further adjustments for service purposes.						
FM	98MHz, 1mV 90% Left + 9% pilot mod=1kHz	A	98MHz	IF coil inside FM frontend 1110	4	right channel min.
AM IF						
MW	450kHz connect pin 6 of IC 7101 (AM Osc.) with 3.3kΩ to Vcc	C $\Delta f = \pm 10\text{kHz}$ $V_{RF} = 0.5\text{mV}$ (as low as possible)		5111	5	
				5112		
AM AFC MW		C continuous wave $V_{RF} = 2\text{mV}$		5114	2	0mV ±2mV
AM RF³⁾						
MW	1494kHz	B 	1494kHz	2106	5	
	558kHz		558kHz	5102		
LW	198kHz	$\Delta f = \pm 30\text{kHz}$ V_{RF} as low as possible	198kHz	5103		

Use Service Testprogram. By selecting the TUNER TEST test frequencies will be stored as preset frequencies automatically.
 1) If sensitivity of frequency counter is too low adjust to max. channel separation (input signal: stereo left 90% + 9%, adjust output on right channel to minimum)
 2) RC network serves for damping the IF-filter while adjusting the other one.
 3) For AM RF adjustments the original frame antenna has to be used!
 MW has to be aligned before LW.
 ↑ Repeat

Electrical Partslist ECO6 SYSTEMS-CENELEC
MISCELLANEOUS

1101	2422 015 19376	SOCKET CLICKFIT 2P	USA only
1102	4822 267 10283	SOCKET COAX, IEC 75Ω	not USA
1103	4822 265 31184	JST CONNECTOR, 2 POLE	
1110	2422 542 90071	FM FRONTEND	
1120	4822 265 11515	FFC SOCKET, 8P	

CAPACITORS

2102©	4822 126 13838	100nF 10%	50V	not USA
2105©	4822 126 13838	100nF 10%	50V	USA only
2106	2020 800 00204	TRIMCAP. 4,2 - 20pF, N750		LW only
2106	2020 800 00191	TRIMCAP. 3 - 11pF, N450		FM/AM only
2107	4822 121 51319	1μF 20%	50V	
2108©	5322 122 32531	100pF 5%	50V	LW only
2109©	5322 122 32448	10pF 5%	50V	LW only
2120©	4822 126 13689	18pF 1%	63V	FM/AM only
2120©	5322 122 32658	22pF 5%	50V	LW only
2122©	4822 122 33891	3,3nF 10%	63V	LW only
2123©	2020 552 93494	390pF 1%	50V	LW only
2124©	4822 122 33177	10nF 20%	50V	FM/AM only
2125©	2020 552 96199	560pF 1%	50V	
2127©	4822 126 14076	220nF 20%	25V	
2128	4822 124 40248	10μF 20%	63V	
2129	4822 124 41584	100μF 20%	10V	
2130©	5322 122 32654	22nF 10%	63V	
2131©	4822 126 13482	470nF 20%	16V	
2132©	4822 126 13482	470nF 20%	16V	
2133	4822 124 21913	1μF 20%	63V	
2134©	4822 122 33893	18nF 5%	63V	not USA
2134©	5322 122 32654	22nF 10%	63V	USA only
2135©	4822 122 33893	18nF 5%	63V	not USA
2135©	5322 122 32654	22nF 10%	63V	USA only
2136©	4822 126 14076	220nF 20%	25V	
2137©	4822 126 14076	220nF 20%	25V	
2138	4822 124 22652	2,2μF 20%	50V	
2139©	4822 126 14236	15pF 5%	50V	
2140©	4822 126 13695	82pF 1%	63V	
2141©	4822 126 13838	100nF 10%	50V	
2143©	4822 126 14076	220nF 20%	25V	
2144	4822 124 21913	1μF 20%	63V	
2145©	4822 122 33575	220pF 5%	50V	
2146©	4822 122 33575	220pF 5%	50V	
2147©	4822 122 33575	220pF 5%	50V	
2148©	4822 122 33127	2,2nF 10%	63V	
2149©	5322 122 32659	33pF 5%	50V	RDS only
2150©	4822 126 13838	100nF 10%	50V	
2159©	5322 122 32659	33pF 5%	50V	
2162	4822 124 81151	22μF 20%	50V	
2163©	4822 126 13838	100nF 10%	50V	LW only
2164©	4822 126 13482	470nF 20%	16V	
2165©	4822 126 13838	100nF 10%	50V	
2166©	5322 122 31647	1nF 10%	63V	
2167©	4822 122 33926	12pF 5%	50V	
2169©	4822 122 33127	2,2nF 10%	63V	RDS only
2190©	4822 126 13838	100nF 10%	50V	
2191	4822 124 40178	100μF 20%	10V	

RESISTORS

3105©	4822 117 11503	220Ω 5%	0,1W	
3108©	4822 117 11449	2,2kΩ 1%	0,1W	LW only
3109©	4822 051 20472	4,7kΩ 5%	0,1W	LW only
3123©	4822 051 20472	4,7kΩ 5%	0,1W	LW only
3125©	4822 117 10833	10kΩ 1%	0,1W	LW only
3128©	4822 117 11449	2,2kΩ 1%	0,1W	LW only

RESISTORS

3132©	4822 051 20479	47Ω 5%	0,1W	
3134©	4822 051 20223	22kΩ 5%	0,1W	
3137©	4822 051 20223	22kΩ 5%	0,1W	LW only
3141©	4822 117 11148	56kΩ 1%	0,1W	
3142	4822 100 12159	TRIMPOT. 100kΩ		
3143©	4822 051 20223	22kΩ 5%	0,1W	RDS only
3144©	4822 051 10102	1kΩ 2%	0,25W	RDS only
3145©	4822 117 11449	2,2kΩ 1%	0,1W	
3146©	4822 051 20229	22Ω 5%	0,1W	
3150©	4822 117 10833	10kΩ 1%	0,1W	
3151©	4822 051 20683	68kΩ 5%	0,1W	
3152©	4822 051 20471	470Ω 5%	0,1W	
3153©	4822 051 20471	470Ω 5%	0,1W	
3154©	4822 117 13577	330Ω 1%	0,1W	
3155©	4822 117 10353	150Ω 5%	0,1W	
3156©	4822 117 10837	100kΩ 1%	0,1W	
3157©	4822 117 10837	100kΩ 1%	0,1W	
3158©	4822 051 20471	470Ω 5%	0,1W	
3159©	4822 051 20471	470Ω 5%	0,1W	
3160©	4822 051 20471	470Ω 5%	0,1W	
3161©	4822 051 20223	22kΩ 5%	0,1W	
3167©	4822 051 20121	120Ω 5%	0,1W	
3168©	4822 051 20121	120Ω 5%	0,1W	
3169©	4822 051 20154	150kΩ 5%	0,1W	
3170©	4822 117 10837	100kΩ 1%	0,1W	
3171©	4822 117 10834	47kΩ 1%	0,1W	
3172©	4822 051 20562	5,6kΩ 5%	0,1W	
3176©	4822 051 20333	33kΩ 5%	0,1W	RDS only
3180©	4822 117 10833	10kΩ 1%	0,1W	LW only
3190©	4822 051 20121	120Ω 5%	0,1W	
3191©	4822 051 20121	120Ω 5%	0,1W	
3192©	4822 117 13577	330Ω 1%	0,1W	
3193©	4822 117 13577	330Ω 1%	0,1W	
3194©	4822 117 11449	2,2kΩ 1%	0,1W	
3195©	4822 051 20101	100Ω 5%	0,1W	
4101©	4822 051 20008	CHIP JUMPER 0805		FM/AM only
4102©	4822 051 20008	CHIP JUMPER 0805		FM/AM only
4104©	4822 051 20008	CHIP JUMPER 0805		FM/AM only
4105©	4822 051 20008	CHIP JUMPER 0805		
4106©	4822 051 20008	CHIP JUMPER 0805		
4107©	4822 051 20008	CHIP JUMPER 0805		

COILS

5102	4822 157 71634	RF-COIL MW	
5103	2422 549 44107	RF-COIL LW	LW only
5109	4822 157 71639	FM-IF FILTER 10,7MHz	
5110	4822 242 70665	FM-IF FILTER 10,7MHz	
5111	2422 549 44023	AM-IF FILTER 450kHz	
5112	4822 157 70302	AM-IF FILTER 450kHz	
5114	4822 157 70302	AM-IF FILTER 450kHz	
5115	4822 157 71636	ANTI BIRDY FILTER	
5119	4822 157 11443	DISCRIMINATOR COIL	
5121	4822 242 10261	QUARTZ 75kHz	
5122	2422 549 44108	RF-COIL, LW-OSCILLATOR	LW only
5123	2422 549 44108	RF-COIL, MW-OSCILLATOR	

DIODES

6105©	4822 130 83075	HN1V02H	
6106©	4822 130 83757	BAS216	
6107©	9340 386 90115	BZX284-C11	
6120©	4822 130 83757	BAS216	

TRANSISTORS

7103©	5322 130 42756	BC857C	RDS only
7104	9322 003 64676	TBC337-40	LW only
7105	9322 003 64676	TBC337-40	LW only
7109©	4822 130 60373	BC856B	LW only
7110©	4822 130 60373	BC856B	
7111©	5322 130 42755	BC847C	
7112	4822 130 44503	BC547C	
7122©	5322 130 42755	BC847C	LW only
7124©	5322 130 42755	BC847C	LW only

INTEGRATED CIRCUITS

7101	4822 209 90315	TEA5762H/V1, RADIO IC	
------	----------------	-----------------------	--


ETF7 TAPE MODULE

(Non-Dolby Version)

TABLE OF CONTENTS

Tape Module Wiring & variation table 9-1
 Block diagram 9-2
 Brief Introduction 9-3
 Connector assignment 9-4
 Tape deck electronics & Tape adjustments 9-5
 ETF7 Non-Dolby board layouts 9-6
 Analog Circuit diagram 9-7
 Servo Circuit diagram 9-8
 Exploded views & parts list 9-9
 Electrical parts list 9-13

Tapedeck wiring (Double deck)



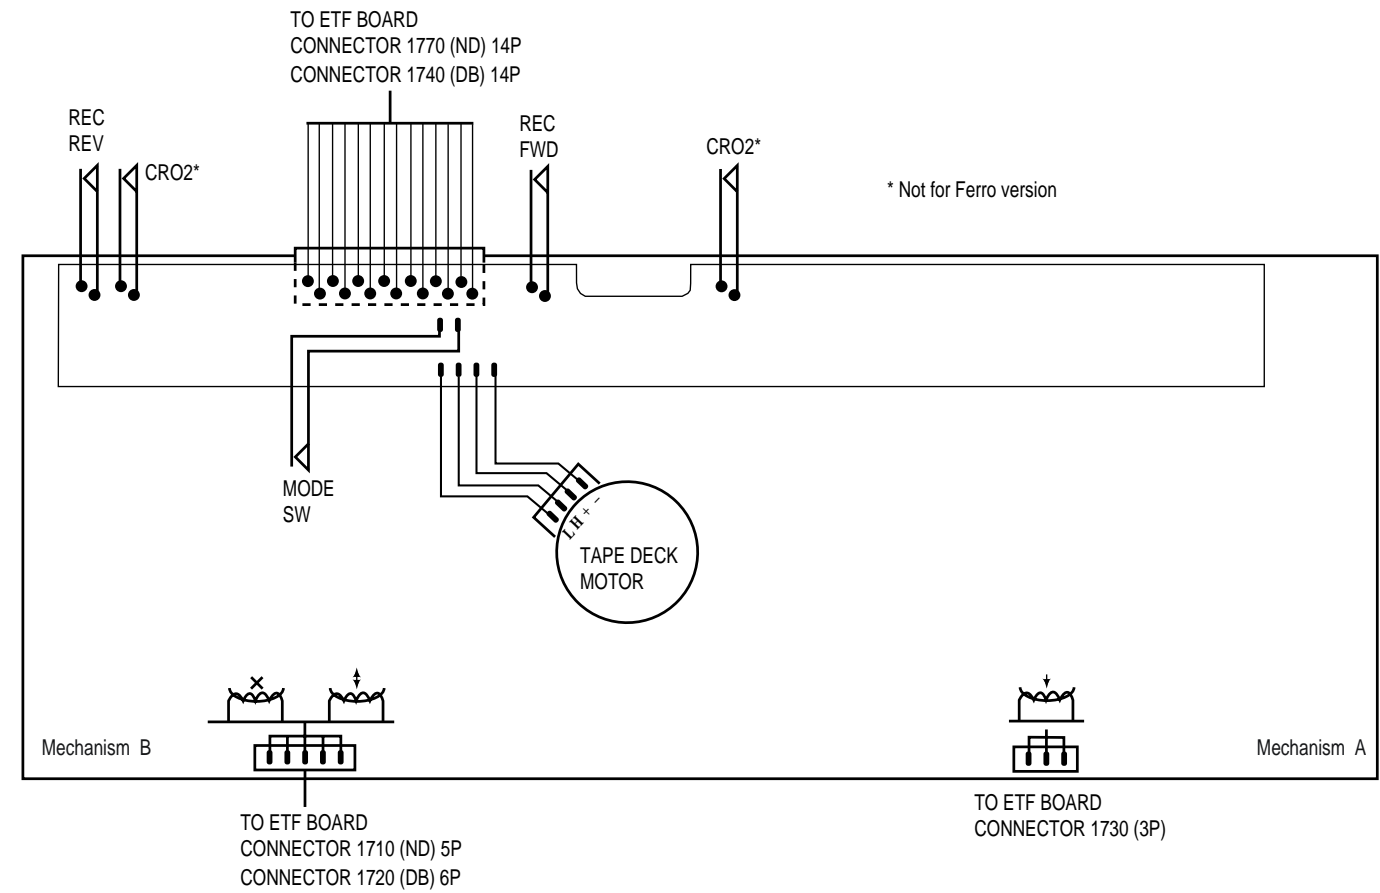


Variations table for Analog Circuit

	Autoreverse	Non-autoreverse	
	ND/DD/FR	ND/DD/FR	ND/DD/FF
	Chrome/Ferro	Chrome/Ferro	Ferro
2624	-	-	100nF
2701 , 2702	150pF	270pF	270pF
2703 , 2704	100pF	220pF	220pF
2717 , 2718	10nF	15nF	15nF
2721 , 2722	6,8nF	6,8nF	-
2727 , 2728	470pF	1nF	1nF
3616	10k	1k	1k
3618	6k8	-	-
3620	10k trimmer	-	-
3622	-	10k trimmer	10k trimmer
3672	4k7	-	-
3676	47k	-	-
3687	220R	220R	-
3688	680R	-	-
3723 , 3724	15k	18k	18k
3725 , 3726	10R	10R	-
3727 , 3728	5k6	6k8	6k8
3729 , 3730	3k3	4k7	4k7
3743 , 3744	1k5	2k2	2k2
3745 , 3746	3k3	5k6	5k6
3754 , 3755	1M	47R	47R

	Autoreverse	Non-autoreverse	
	ND/DD/FR	ND/DD/FR	ND/DD/FF
	Chrome/Ferro	Chrome/Ferro	Ferro
3769	12k	8k2	8k2
3772	6k8	5k6	5k6
4785	-	-	0R jumper
3774	15k	8k2	8k2
6614	1N4148	-	-
7616	BC857B	-	-
7622	BC847B	-	-

BLOCK DIAGRAM

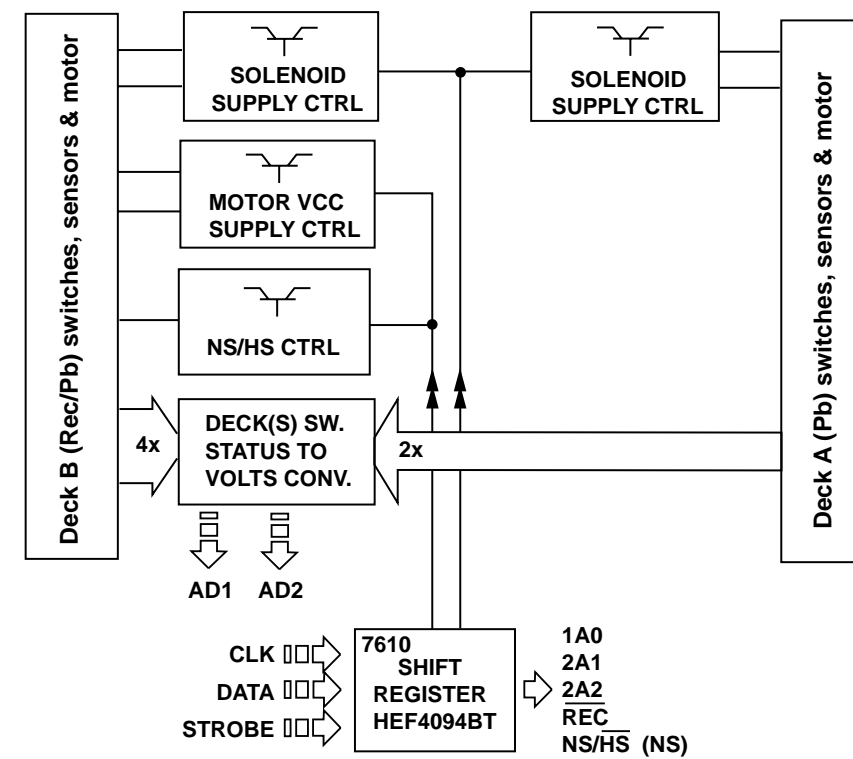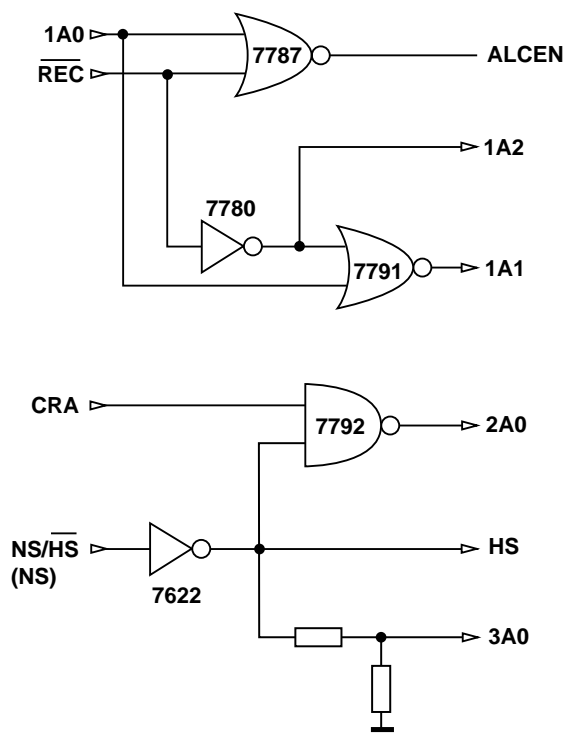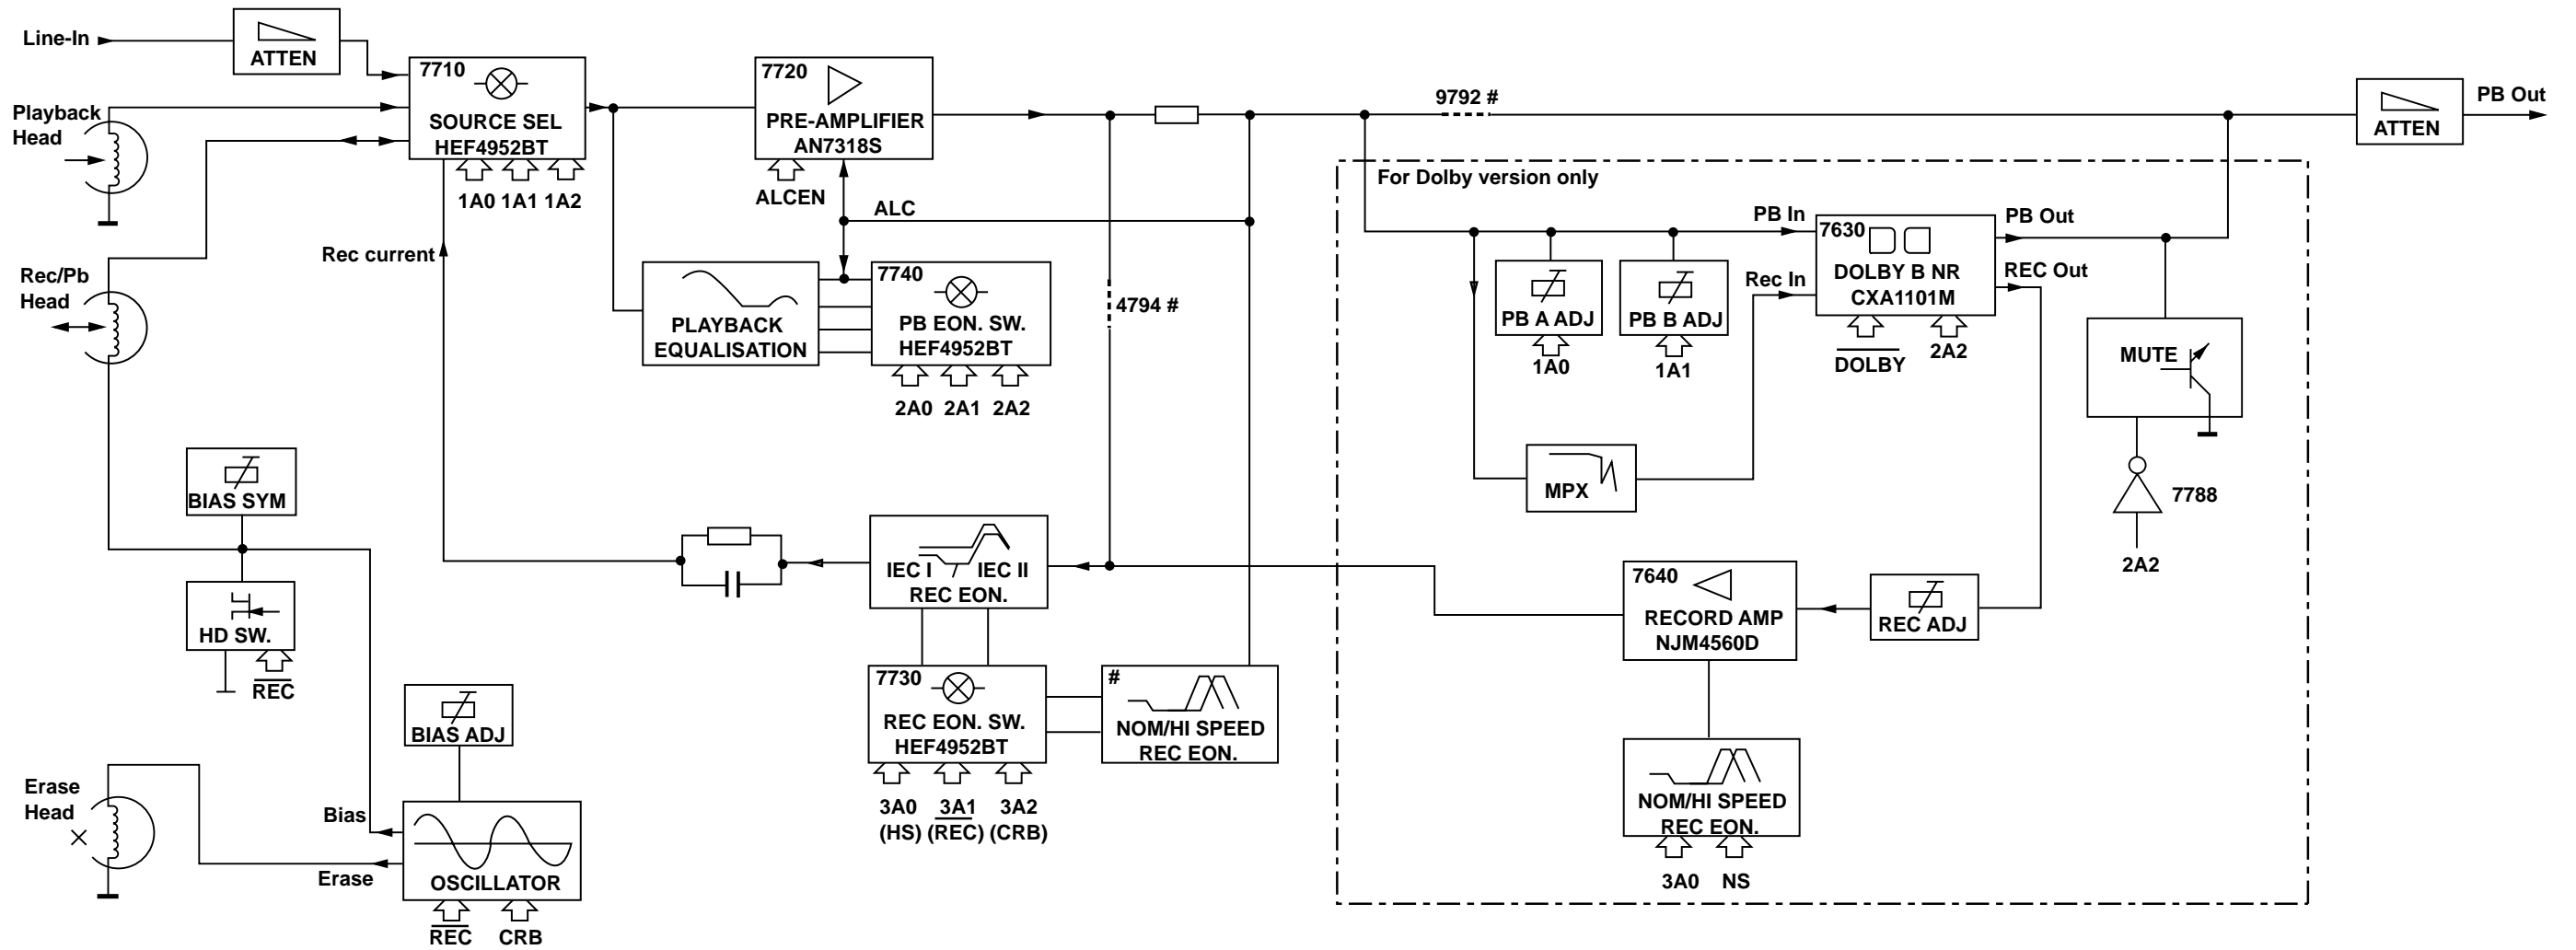

NOTE: # For Non-dolby version only
Only 1 channel is presented.

MicroProcessor Control / Communication lines
Direct / Indirect Control lines from Shift Registers

Brief introduction

General

1. Playback Mode
Signal from the playback head Deck A or Deck B is selected and fed through by the Mode Selector IC7710 (HEF4952BT). The signal is amplified by amplifier IC7720 (AN7323S) before feeding to the IC7740 (HEF4952BT) and out to the AF Board via connector 1701.
2. Recording Mode
Recording Signal is selected and fed through by the Mode Selector IC7710 (HEF4952BT) which is then amplified by the amplifier IC7720 (AN7323S). The amplified output signal will pass through IC7730 (HEF4952BT) for record equalization and back to IC7710 (HEF4952BT) before registered into the Rec/PB Head of Deck B.
3. Dubbing Mode
In Dubbing mode, signal from the playback head Deck A is selected and fed through by the Mode Selector IC7710 (HEF4952BT) which is then equalised for playback mode by the amplifier IC7720 (AN7323S) so that a flat response is obtained after the pre-amp. The equalised signal will then follow the same path as in the Recording mode.
4. Mode Selector
The Mode Selector IC7710 (HEF4952BT) caters for 4 inputs signal, namely Playback Signal from Deck A, Playback Signal from Deck B, Recording Signal and Dubbing Signal.
5. Amplifier PB/REC
Amplifier IC7720 (AN7323S) is for the purpose of amplifying the Playback and Recording signal from the Mode Selector.
6. Automatic Level Control (ALC)
ALC circuit consists of resistors (3760, 3765, 3766, 3767), capacitors (2762, 2763) and control by transistor 7787 (BC847B). ALC limits the amplifier output to a constant value when input signal becomes too large, thus limiting recording current to below saturation level, to prevent recording distortion.
7. Muting Circuit (For Non-Dolby version only)
Switch S4 of the IC7740 (HEF4952BT) is for the purpose of muting the output during Recording mode. During Recording mode, S4 is closed and shorted to the ground.
8. IC7740 (HEF4952BT)
The function of the IC7740 (HEF4952BT) is to change time constant between 120us Ferro (IEC I) and 70us Chrome (IEC II) during playback mode. It will automatically determined whether the tape type is 120us Ferro (IEC I) or 70us Chrome (IEC II). This IC will switch to Flat Gain during the Recording mode.
9. IC7730 (HEF4952BT)
The function of the IC7730 (HEF4952BT) is to change gain and time constant according to tape type and recording speed to boost recording current at higher frequency during recording to compensate for head loss. It will automatically determined whether the tape type is 120us Ferro (IEC I) or 70us Chrome (IEC II).
10. Bias Level
Bias Level making use of the Variable resistor (3773) for adjusting the optimal level of the bias current for Ferro or Chrome.
11. Bias Symm (For Dolby B NR version only)
Bias Symm making use of the Variable resistor (3785) to adjust the bias current for the left and the right channel to be equal.
12. PB Switch
Playback Switch which consists of the FETs 7785 (For Dolby B NR version only) & 7786 (J111) is for the purpose of providing a virtual ground for the Rec/PB Head (Deck B) during Playback mode. During the Playback mode, the FETs are turn on and shorted pin 2 and 4 of connector 1720 to the ground. During Recording mode, the FETs are turn off to allow the oscillator signal to be superposition onto the Recording signal for recording.

13. Motor Speed (For FR versions only)
During High speed dubbing, a feedback signal from the uP through pin 03 of the IC7610 (HEF4094BT) will trigger the transistors 7622 (BC847B) and 7616 (BC857B) to cause a change in the voltage level between High and Low, thus changing the speed of the motor.
14. IC7610 (HEF4094BT)
IC7610 (HEF4094BT) is a Shift Register use for issues the logic for cmos switch ICs (HEF4952BT) via 1A0, 2A1 and 2A2. It also issues logic to On/Off SOL_A, SOL_B and MOT. Recording speed is controlled via NS/HS.

Dolby Circuit (For sets with Dolby B NR version only)

15. IC7630 (CXA1551M)
IC7630 (CXA1551M) in the Dolby circuit is a Dolby Noise Reduction Type B IC for the Playback and Recording signal. Noise Reduction ON/OFF are controlled by $\overline{\text{DOLBY}}$, which is from CLK, direct from uP. After clocking in DATA, CLK is set to HIGH/LOW for NR OFF/ON.
16. 19kHz Filter
The 19kHz filters 5631 & 5632 (LXD-210) in the Dolby circuit is for the purpose of filtering the 19kHz Pilot Tone (for Tuner signal only) of the Recording signal.
17. Level Adjust
The Variable resistor 3635, 3636, 3641 and 3642 in the Dolby circuit is for adjusting the playback level of the Dolby reference (400Hz, 200nWb/m). Transistor 7631, 7632 are ON to enable adjustment of 3641, 3642 during Playback Deck A. Transistor 7633, 7634 and 3635, 3636 are active for Playback Deck B.
18. Amplifier IC7640 (NJM4560M)
The Amplifiers 7640A & 7640B (NJM4560M) in the Dolby circuit is for the purpose of amplified the Recording signal.
19. Muting Circuit
The muting circuit which consists of transistors 7788, 7789 and 7790 (BC847B) is for the purpose of muting the output during Recording mode.

NOTATIONS & ABBREVIATIONS USED IN THIS DOCUMENT

CR	Chrome (IEC type II)
DB	Dolby NR type B
DD	Double Deck
DM	Double Motor
FE	Ferro (IEC type I)
FF	Non-Autoreverse
FR	Autoreverse Deck B
Gnd x	Ground x
HSD	High speed dubbing
ND	Non Dolby
NR	Noise Reduction
NSD	Normal speed dubbing
PB	Playback
REC	Record
S/A	Sub-assy
SD	Single Deck
SM	Single Motor

CONNECTORS ASSIGNMENTS:CONNECTOR 1701INTERCONNECTION TO AF BOARD

○ 1	REC-L	Record input left
○ 2	REC-R	Record input right
○ 3	GND A	AF Ground
○ 4	TAPE-L	Playback output left
○ 5	+12V	D.C. supply (+12V) for AF electronics
○ 6	TAPE-R	Playback output right
○ 7	-CMOS	Negative d.c. supply (-9V) for CMOS ICs

CONNECTOR 1703INTERCONNECTION TO AF BOARD

○ 1	GND M	Motor Ground
○ 2	+MOTOR	D.C. supply (+12V) for tape deck motor & solenoid

CONNECTOR 1706INTERCONNECTION TO FRONT BOARD

○ 1	AD2	Deck sensing switches output voltage / Deck A EOT
○ 2	AD1	Deck sensing switches output voltage / Deck B EOT
○ 3	+5V	DC supply +5V for ADC network
○ 4	GND P	Control & Oscillator Ground
○ 5	CLK	HEF4094BT shift register Clock line
○ 6	DATA	HEF4094BT shift register Data line
○ 7	STROBE	HEF4094BT shift register Strobe line

CONNECTOR 1710DECK B HEADS CONNECTON (For Non-Dolby version only)

○ 1	B R/P HD L+	R/P Head left channel positive
○ 2	GND A	R/P Head return ground
○ 3	B R/P HD R+	R/P Head right channel positive
○ 4	ERASE HEAD	Erase Head
○ 5	GND A	Erase Head ground

CONNECTOR 1720DECK B HEADS CONNECTON (For Dolby B NR version only)

○ 1	B R/P HD L+	R/P Head left channel positive
○ 2	B R/P HD L-	R/P Head left channel negative
○ 3	B R/P HD R+	R/P Head right channel positive
○ 4	B R/P HD R-	R/P Head right channel negative
○ 5	ERASE HEAD	Erase Head
○ 6	GND A	Erase Head ground

CONNECTOR 1730DECK A HEAD CONNECTIONS (For Double Deck versions only)

○ 1	A PB HD L+	Pb Head left channel positive
○ 2	GND A	Pb Head return ground shield
○ 3	A PB HD R+	Pb Head right channel positive

CONNECTOR 1740

○ 1	REC REW
○ 2	CrO2 B
○ 3	REC FWD
○ 4	PHOTO B
○ 5	SOL B
○ 6	Vcc
○ 7	MODE B
○ 8	GND M
○ 9	SOL A
○ 10	PHOTO A
○ 11	MODE A
○ 12	L
○ 13	CrO2 A
○ 14	H

CONNECTOR 1770

○ 1	REC REW
○ 2	CrO2 B
○ 3	REC FWD
○ 4	PHOTO B
○ 5	SOL B
○ 6	Vcc
○ 7	MODE B
○ 8	GND M
○ 9	SOL A
○ 10	PHOTO A
○ 11	MODE A
○ 12	L
○ 13	CrO2 A
○ 14	H


DECK A & B CONTROL INTERFACE (For Dolby B NR version only)

Record tab protection status switch (reverse)	[open=on: close=off]
Chrome tape detection switch deck B	[open=Cr: close=Fe]
Record tab protection status switch (forward)	[open=on: close=off]
Photo sensor output (tape movement indication)	
Solenoid supply for deck B	
Deck / Motor supply	
Mode switch (head engagement)	[open=off: close=engaged]
Deck / Motor ground	
Solenoid supply for deck A	
Photo sensor output (tape movement indication)	
Mode switch (head engagement)	[open=off: close=engaged]
L pin for motor	
Chrome tape detection switch deck A	[open=Cr: close=Fe]
H pin for motor	

DECK A & B CONTROL INTERFACE (For Non-Dolby version only)


Record tab protection status switch (reverse)	[open=on: close=off]
Chrome tape detection switch deck B	[open=Cr: close=Fe]
Record tab protection status switch (forward)	[open=on: close=off]
Photo sensor output (tape movement indication)	
Solenoid supply for deck B	
Deck / Motor supply	
Mode switch (head engagement)	[open=off: close=engaged]
Deck / Motor ground	
Solenoid supply for deck A	
Photo sensor output (tape movement indication)	
Mode switch (head engagement)	[open=off: close=engaged]
L pin for motor	
Chrome tape detection switch deck A	[open=Cr: close=Fe]
H pin for motor	

TAPE MECHANISM ELECTRONICS

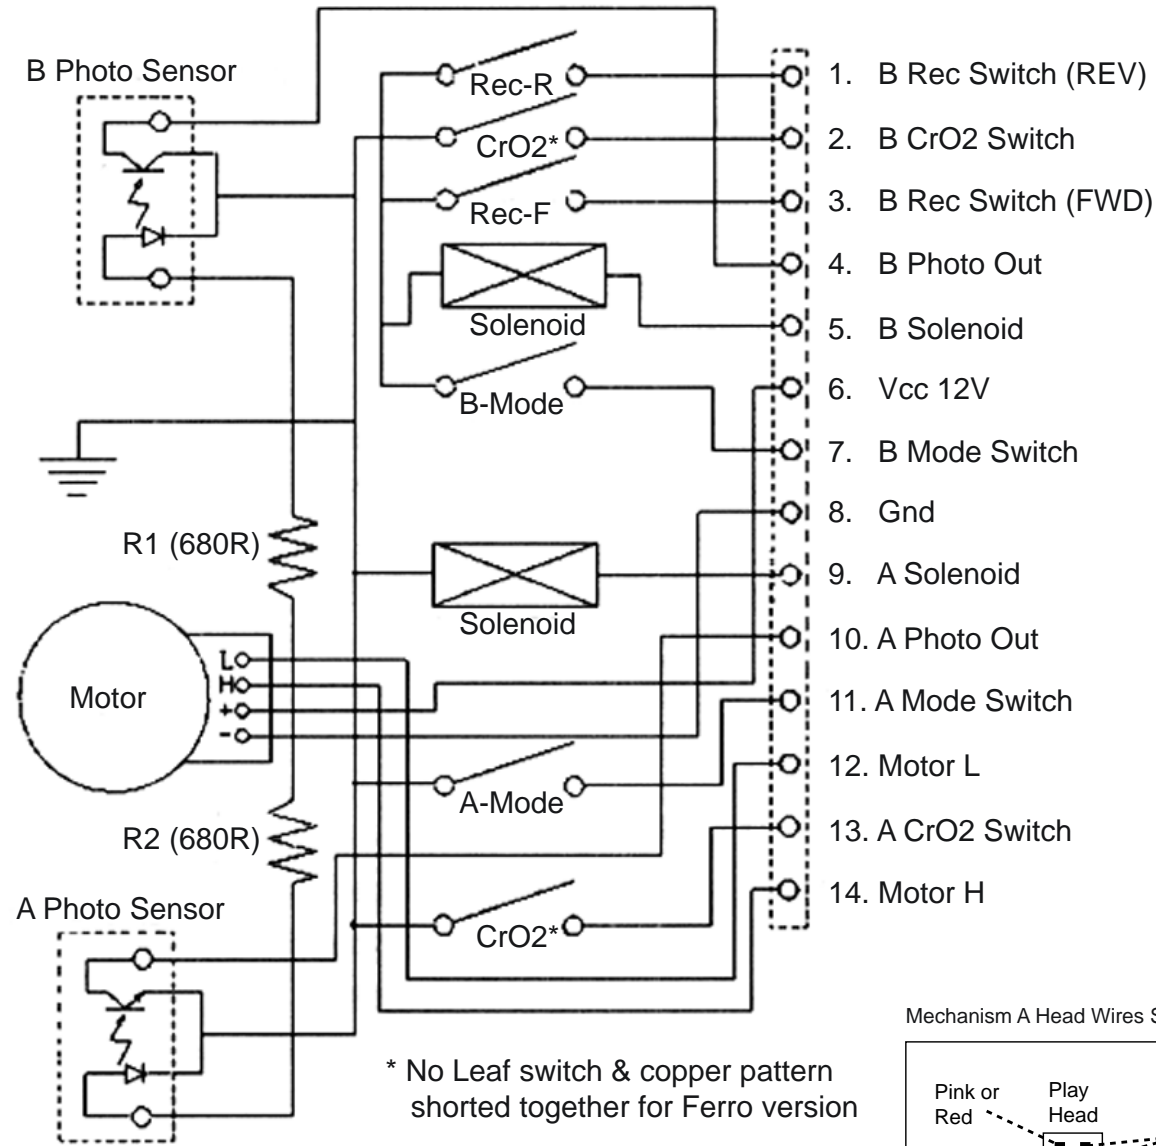


* No Leaf switch & copper pattern shorted together for Ferro version


Mechanism A Head Wires Soldering

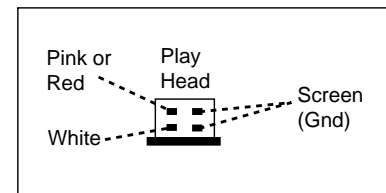

Mechanism B Head Wires Soldering (Non-Dolby version)

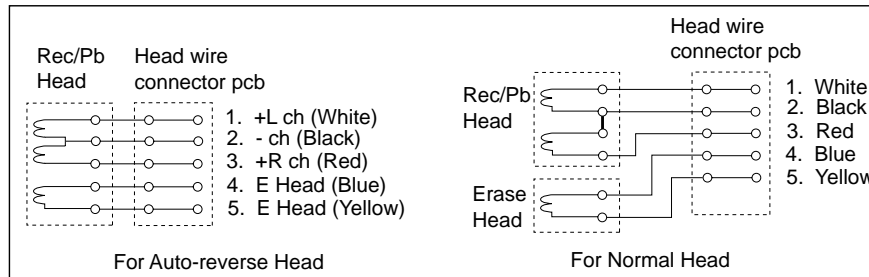

Mechanism B Head Wires Soldering (Dolby B NR version)


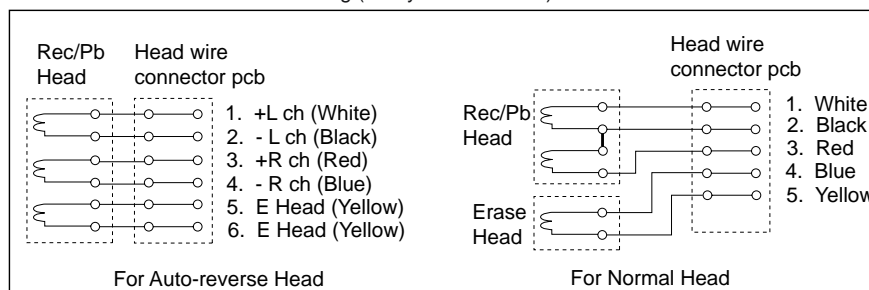


TAPE ADJUSTMENT & CHECK TABLE

	TEST CASSETTE	RECORDER MODE	MEASURE ON	READ ON	ADJUST	
					with	to
ADJUST MOTOR SPEED						
NORMAL SPEED	SBC420 3150Hz	PLAY B	1 or 2	frequency counter	3620	3150Hz +/- 0.5%
		PLAY A	LEFT RIGHT		check	3150Hz -0.8/+1.8%
CHECK WOW & FLUTTER						
DECK A & B	SBC420 3150Hz	PLAY	1 or 2	W&F-meter	check	<0.4 % DIN
ADJUST AZIMUTH						
DECK A & B	SBC420 10kHz	PLAY FWD	1 or 2	mV-meter	left hand screw	max. output level & left=right
		PLAY REV #	LEFT RIGHT		right hand screw	
CHECK PLAYBACK FREQUENCY RESPONSE						
DECK A & B	SBC420	PLAY	1 or 2	mV-meter	check	limits see fig.1
ADJUST BIAS CURRENT						
DECK B	SBC419A^	RECORD	5 or 6	mV-meter	3773	995mV
	SBC420		LEFT RIGHT		check	750mV +/- 1.5dB
CHECK OVERALL FREQUENCY RESPONSE AND DISTORTION						
Inject 3mV signals 100Hz, 250Hz, 1kHz, 10kHz, 12.5kHz via 3 or 4	SBC419A^ or SBC420	RECORD B				
	RECORDED CASSETTE	PLAY B	1 or 2	mV-meter	check	limits see fig. 2 *
Inject 1kHz 8.85mV via 3 or 4	SBC419A^ or SBC420	RECORD B				
	RECORDED CASSETTE	PLAY B	1 or 2	THD-meter	check	<3% *


SBC419A^ : 4822 397 30069
 SBC420 : 4822 397 30071

For Auto-reverse version only
 * If high frequencies are not within limits, decrease bias and re-measure.
 If distortion is too high, increase bias and re-measure
 ^ Not applicable for Ferro version

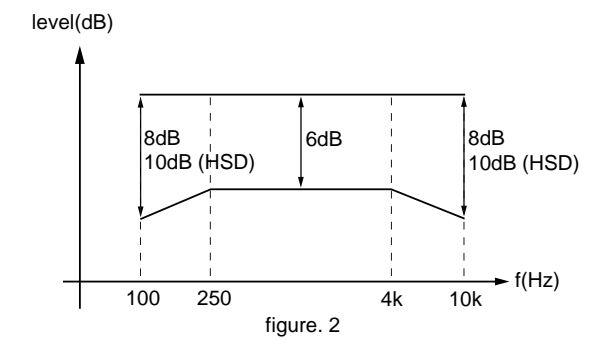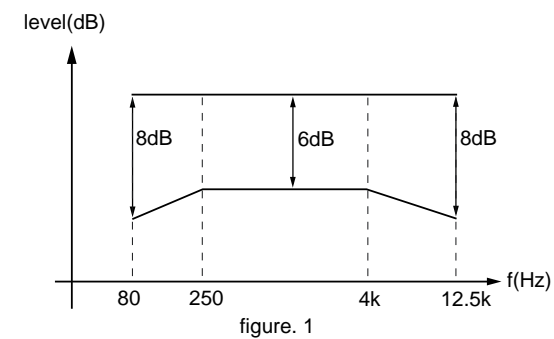


COMPONENT LAYOUT

1701	B2	2714	B2	2784	B1	3761	A1	6770	A1	6782	A2	9706	A1	9715	A1	9724	B2
1702	A2	2715	B2	2785	B1	3764	B2	6771	A1	6785	B2	9707	A2	9716	A2	9725	A2
1703	A2	2716	B2	3607	A1	3773	A1	6772	B1	6786	B2	9708	A2	9717	A2	9726	B2
1706	A1	2741	B1	3609	A1	3778	B1	6773	B1	7782	B1	9709	A2	9718	B2	9727	A2
1710	B1	2761	B2	3611	A1	5701	B1	6774	B1	7786	B2	9710	A1	9719	B1	9728	A2
1730	B2	2762	B2	3620	A1	5703	B1	6775	A1	9702	A1	9711	A1	9720	B1	9729	B1
1760	A2	2763	B2	3622	A1	6611	A2	6776	A1	9703	A1	9712	A1	9721	B1	9791	A2
1770	A2	2765	B2	3674	A2	6612	A2	6777	A1	9704	A2	9713	A1	9722	B1	9792	A2
2713	B2	2780	A1	3685	A1	6614	A1	6778	A1	9705	A2	9714	A1	9723	B2	9793	A1

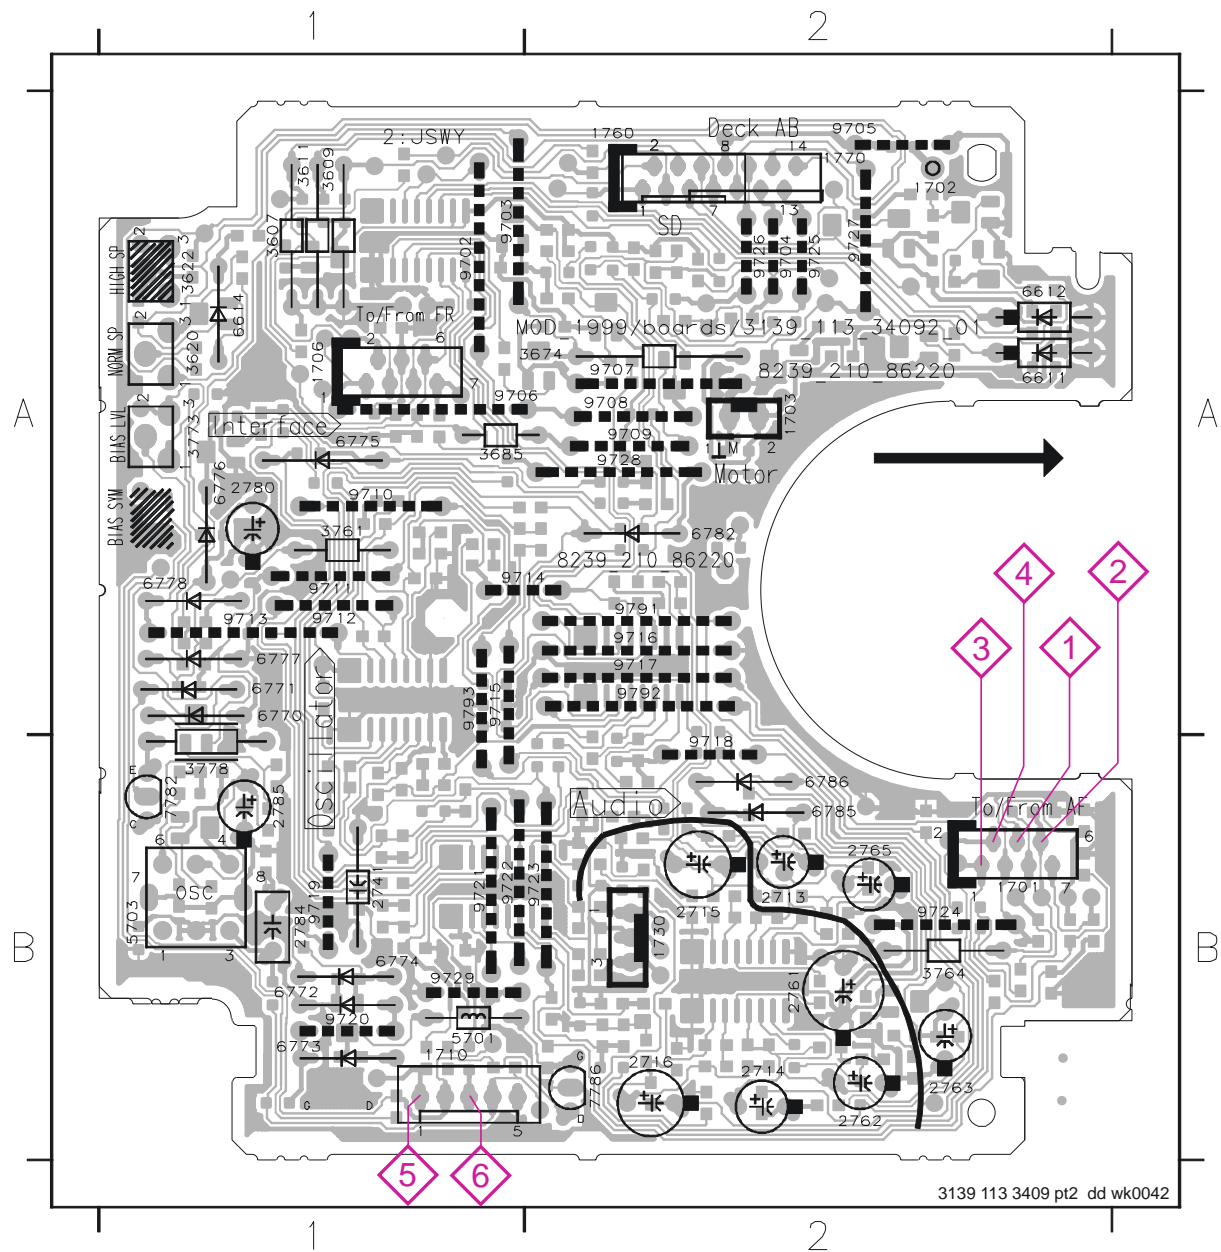


CHIP LAYOUT

2621	A2	2724	B2	3602	A1	3688	A2	3725	A2	3757	A1	4701	A1	4727	B1	7612	A1
2622	A2	2725	A2	3603	A1	3689	A1	3726	B2	3758	A2	4702	A1	4728	B1	7613	A1
2623	A2	2726	B2	3604	A1	3701	B2	3727	B1	3759	A1	4703	A1	4729	B1	7614	A1
2624	A1	2727	B2	3605	A1	3702	B2	3728	B1	3760	B1	4704	A1	4730	B1	7616	A2
2625	A2	2728	B2	3606	A1	3703	B1	3729	A1	3762	A2	4705	A1	4731	B1	7618	A1
2626	A1	2729	A1	3608	A2	3704	B1	3730	B1	3763	B1	4706	A1	4732	B2	7619	A1
2627	A1	2730	B1	3610	A2	3705	B1	3731	A1	3765	B1	4707	A2	4733	B2	7620	A1
2701	B2	2733	B1	3612	A2	3706	B1	3732	B1	3766	B1	4708	A2	4734	B1	7622	A1
2702	B2	2734	B1	3613	A1	3707	B1	3733	B1	3767	B1	4709	A2	4735	B1	7623	A1
2703	B1	2735	B1	3614	A2	3708	B1	3734	B1	3768	B1	4710	A2	4736	B1	7624	A2
2704	B1	2737	B1	3616	A2	3709	B1	3735	B1	3769	A2	4711	A2	4737	B1	7710	B2
2705	B1	2738	B1	3618	A2	3710	B1	3736	B1	3770	B2	4712	A2	4738	B1	7720	B1
2706	B1	2742	A2	3619	A2	3711	B1	3741	B1	3771	B2	4713	A1	4739	B1	7730	A2
2707	B1	2743	B2	3623	A1	3712	B1	3742	B1	3772	A2	4714	A1	4740	B1	7740	A1
2708	B1	2744	B1	3624	A1	3713	B1	3743	B1	3774	A2	4715	A1	4741	B2	7780	A2
2709	B1	2745	B2	3625	A1	3714	B1	3744	B1	3775	B2	4716	A1	4742	B2	7781	B2
2710	B1	2746	B1	3626	A1	3715	B1	3745	B1	3776	B2	4717	A1	4744	A2	7783	A2
2711	B1	2747	B1	3628	A1	3716	B1	3746	B1	3777	B2	4718	A1	4745	A1	7784	B2
2712	B1	2760	A2	3630	A2	3717	A1	3748	B1	3779	B2	4719	A2	4746	A1	7787	B1
2717	A2	2769	B1	3672	A2	3718	B2	3749	A1	3780	B2	4720	A2	4747	A1	7791	A1
2718	B2	2770	B1	3676	A2	3719	A2	3751	A1	3781	B1	4721	A2	4748	B1	7792	A2
2719	A2	2781	B2	3678	A1	3720	B2	3752	A1	3784	B2	4722	A2	4785	A2		
2720	B2	2782	B2	3679	A1	3721	A2	3753	A1	3786	A2	4723	B1	4790	B2		
2721	A2	2786	B2	3680	A1	3722	B2	3754	A1	3787	A2	4724	B1	4794	B1		
2722	B2	2787	B2	3686	A2	3723	B2	3755	A1	3788	B2	4725	A1	4795	A1		
2723	A2	3601	A1	3687	A2	3724	B2	3756	A1	3789	A2	4726	B1	7610	A2		

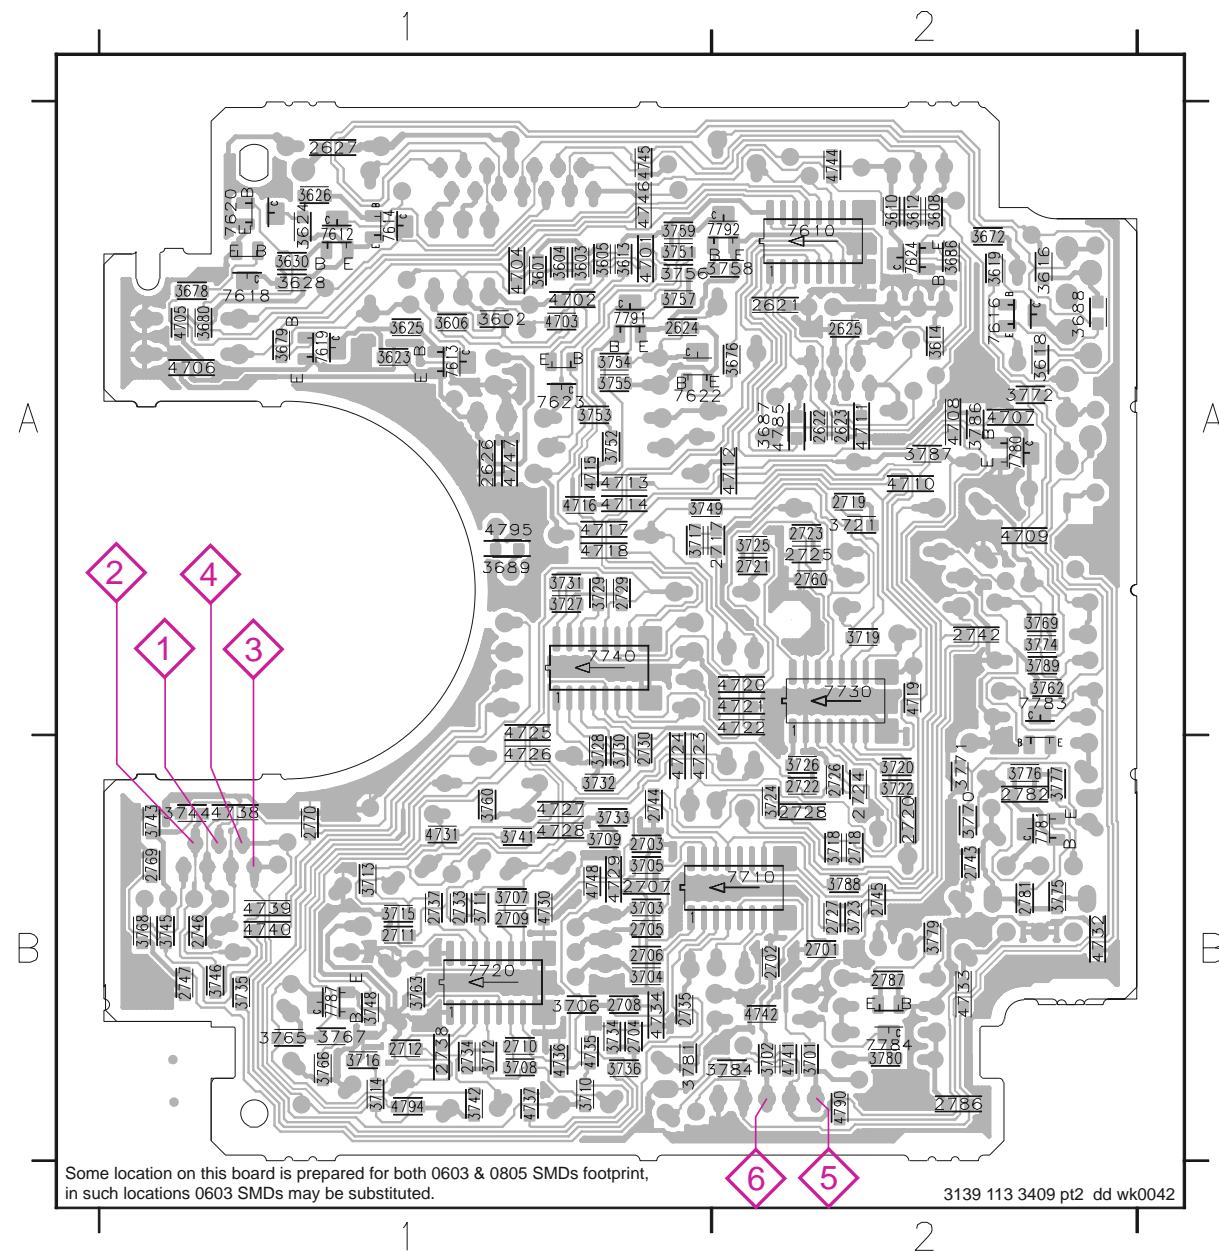


ANALOG CIRCUIT


1701 F9	2705 A2	2712 B6	2719 C5	2726 D4	2735 B3	2745 F5	2765 B4	2785 F1	3705 A4	3712 B4	3719 C6	3726 D5	3733 A2	3744 F8	3753 F5	3760 A7	3767 A7	3774 E3	3781 D2	4794 C6	6774 D3	6786 B7	7782 E1	9791 A8
1710 C1	2706 A2	2713 A6	2720 D5	2727 A3	2737 A6	2746 F8	2769 F7	2786 D1	3706 B4	3713 A7	3720 E6	3727 A7	3734 B2	3745 F8	3754 E8	3761 E3	3768 E8	3775 F3	3784 D1	5701 D2	6775 C3	7710 A3	7783 E2	9792 B8
1730 A1	2707 A4	2714 B6	2721 C5	2728 E5	2738 B6	2747 E8	2770 F8	2787 D3	3707 A5	3714 B7	3721 C6	3728 B7	3735 A2	3746 E8	3755 E7	3762 E2	3769 E4	3776 F2	3786 F4	5703 F1	6776 F3	7720 A5	7784 D2	9793 A6
2701 B2	2708 B4	2715 A4	2722 D5	2729 A8	2741 D6	2760 E3	2780 F3	3701 B1	3708 B4	3715 A6	3722 D6	3729 A7	3736 B1	3748 C8	3756 D8	3763 A5	3770 F2	3777 F2	3787 C3	6770 E2	6777 E2	7730 D6	7786 C2	
2702 B2	2709 A5	2716 C4	2723 C5	2730 B8	2742 C3	2761 B5	2781 F2	3702 C2	3709 A4	3716 B6	3723 A3	3730 B7	3741 A6	3749 C7	3757 D8	3764 A5	3771 F2	3778 E1	3788 C3	6771 E2	6778 E4	7740 A8	7787 C8	
2703 A2	2710 B5	2717 C6	2724 D5	2733 A5	2743 F1	2762 B6	2782 F2	3703 A2	3710 C4	3717 C6	3724 D5	3731 A7	3742 C7	3751 E5	3758 D8	3765 B6	3772 F3	3779 D3	3789 F4	6772 D1	6782 C7	7780 F4	7791 F5	
2704 B2	2711 A6	2718 D6	2725 D4	2734 C4	2744 A4	2763 B6	2784 F1	3704 B1	3711 A5	3718 E6	3725 C5	3732 B7	3743 F8	3752 F4	3759 D7	3766 B7	3773 E3	3780 D2	4790 C3	6773 D1	6785 A7	7781 F3	7792 D8	

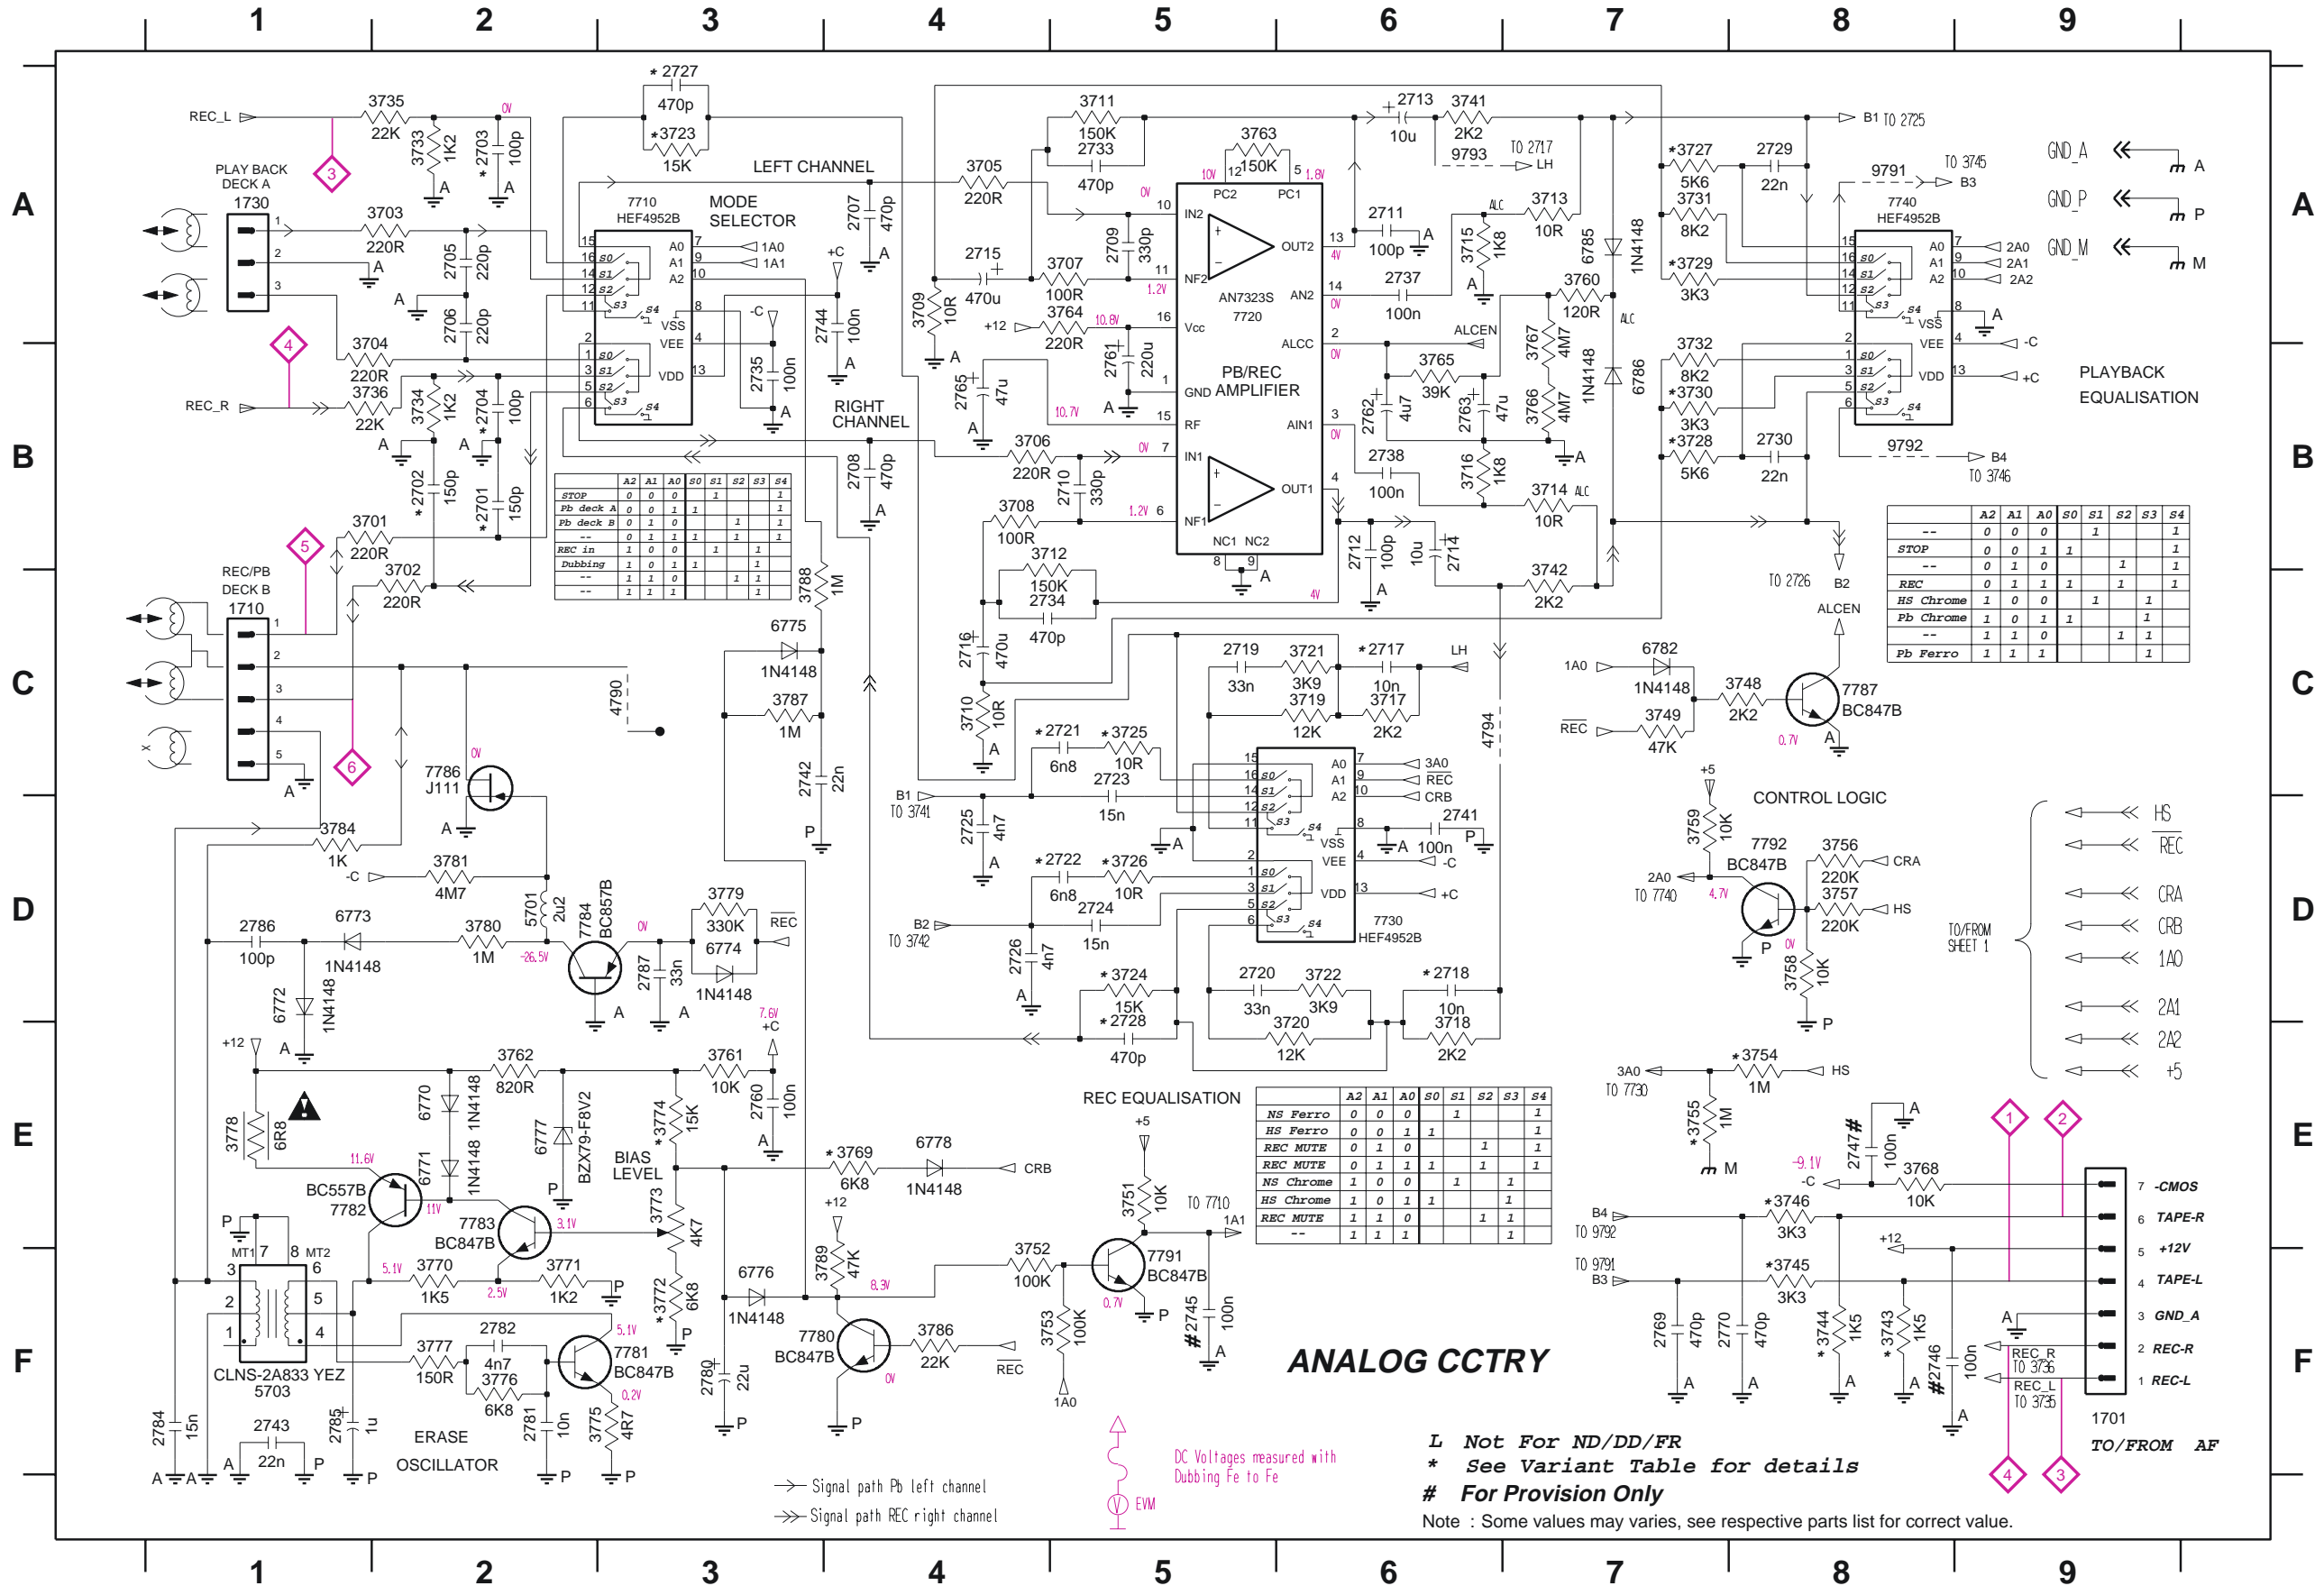

SERVO CONTROL CIRCUIT

1702 A7	1760 B8	2622 D2	2625 E4	3601 B2	3604 C2	3607 C6	3610 D6	3613 B2	3618 A4	3622 A4	3625 B3	3630 A6	3676 C5	3680 C5	3687 D2	4785 D2	6612 B6	7612 A6	7616 A4	7620 B6	7624 D6
1703 B1	1770 B7	2623 D2	2626 B1	3602 C2	3605 B3	3608 D6	3611 C6	3614 C6	3619 A4	3623 B3	3626 B6	3672 B4	3678 B5	3685 D2	3688 A5	4795 E3	6614 B4	7613 A3	7618 B6	7622 B5	9705 A7
1706 E1	2621 D2	2624 E2	2627 A7	3603 B2	3606 C3	3609 C6	3612 D6	3616 A5	3620 A4	3624 B6	3628 A5	3674 B5	3679 B3	3686 E6	3689 E3	6611 A2	7610 D4	7614 A6	7619 B4	7623 D2	

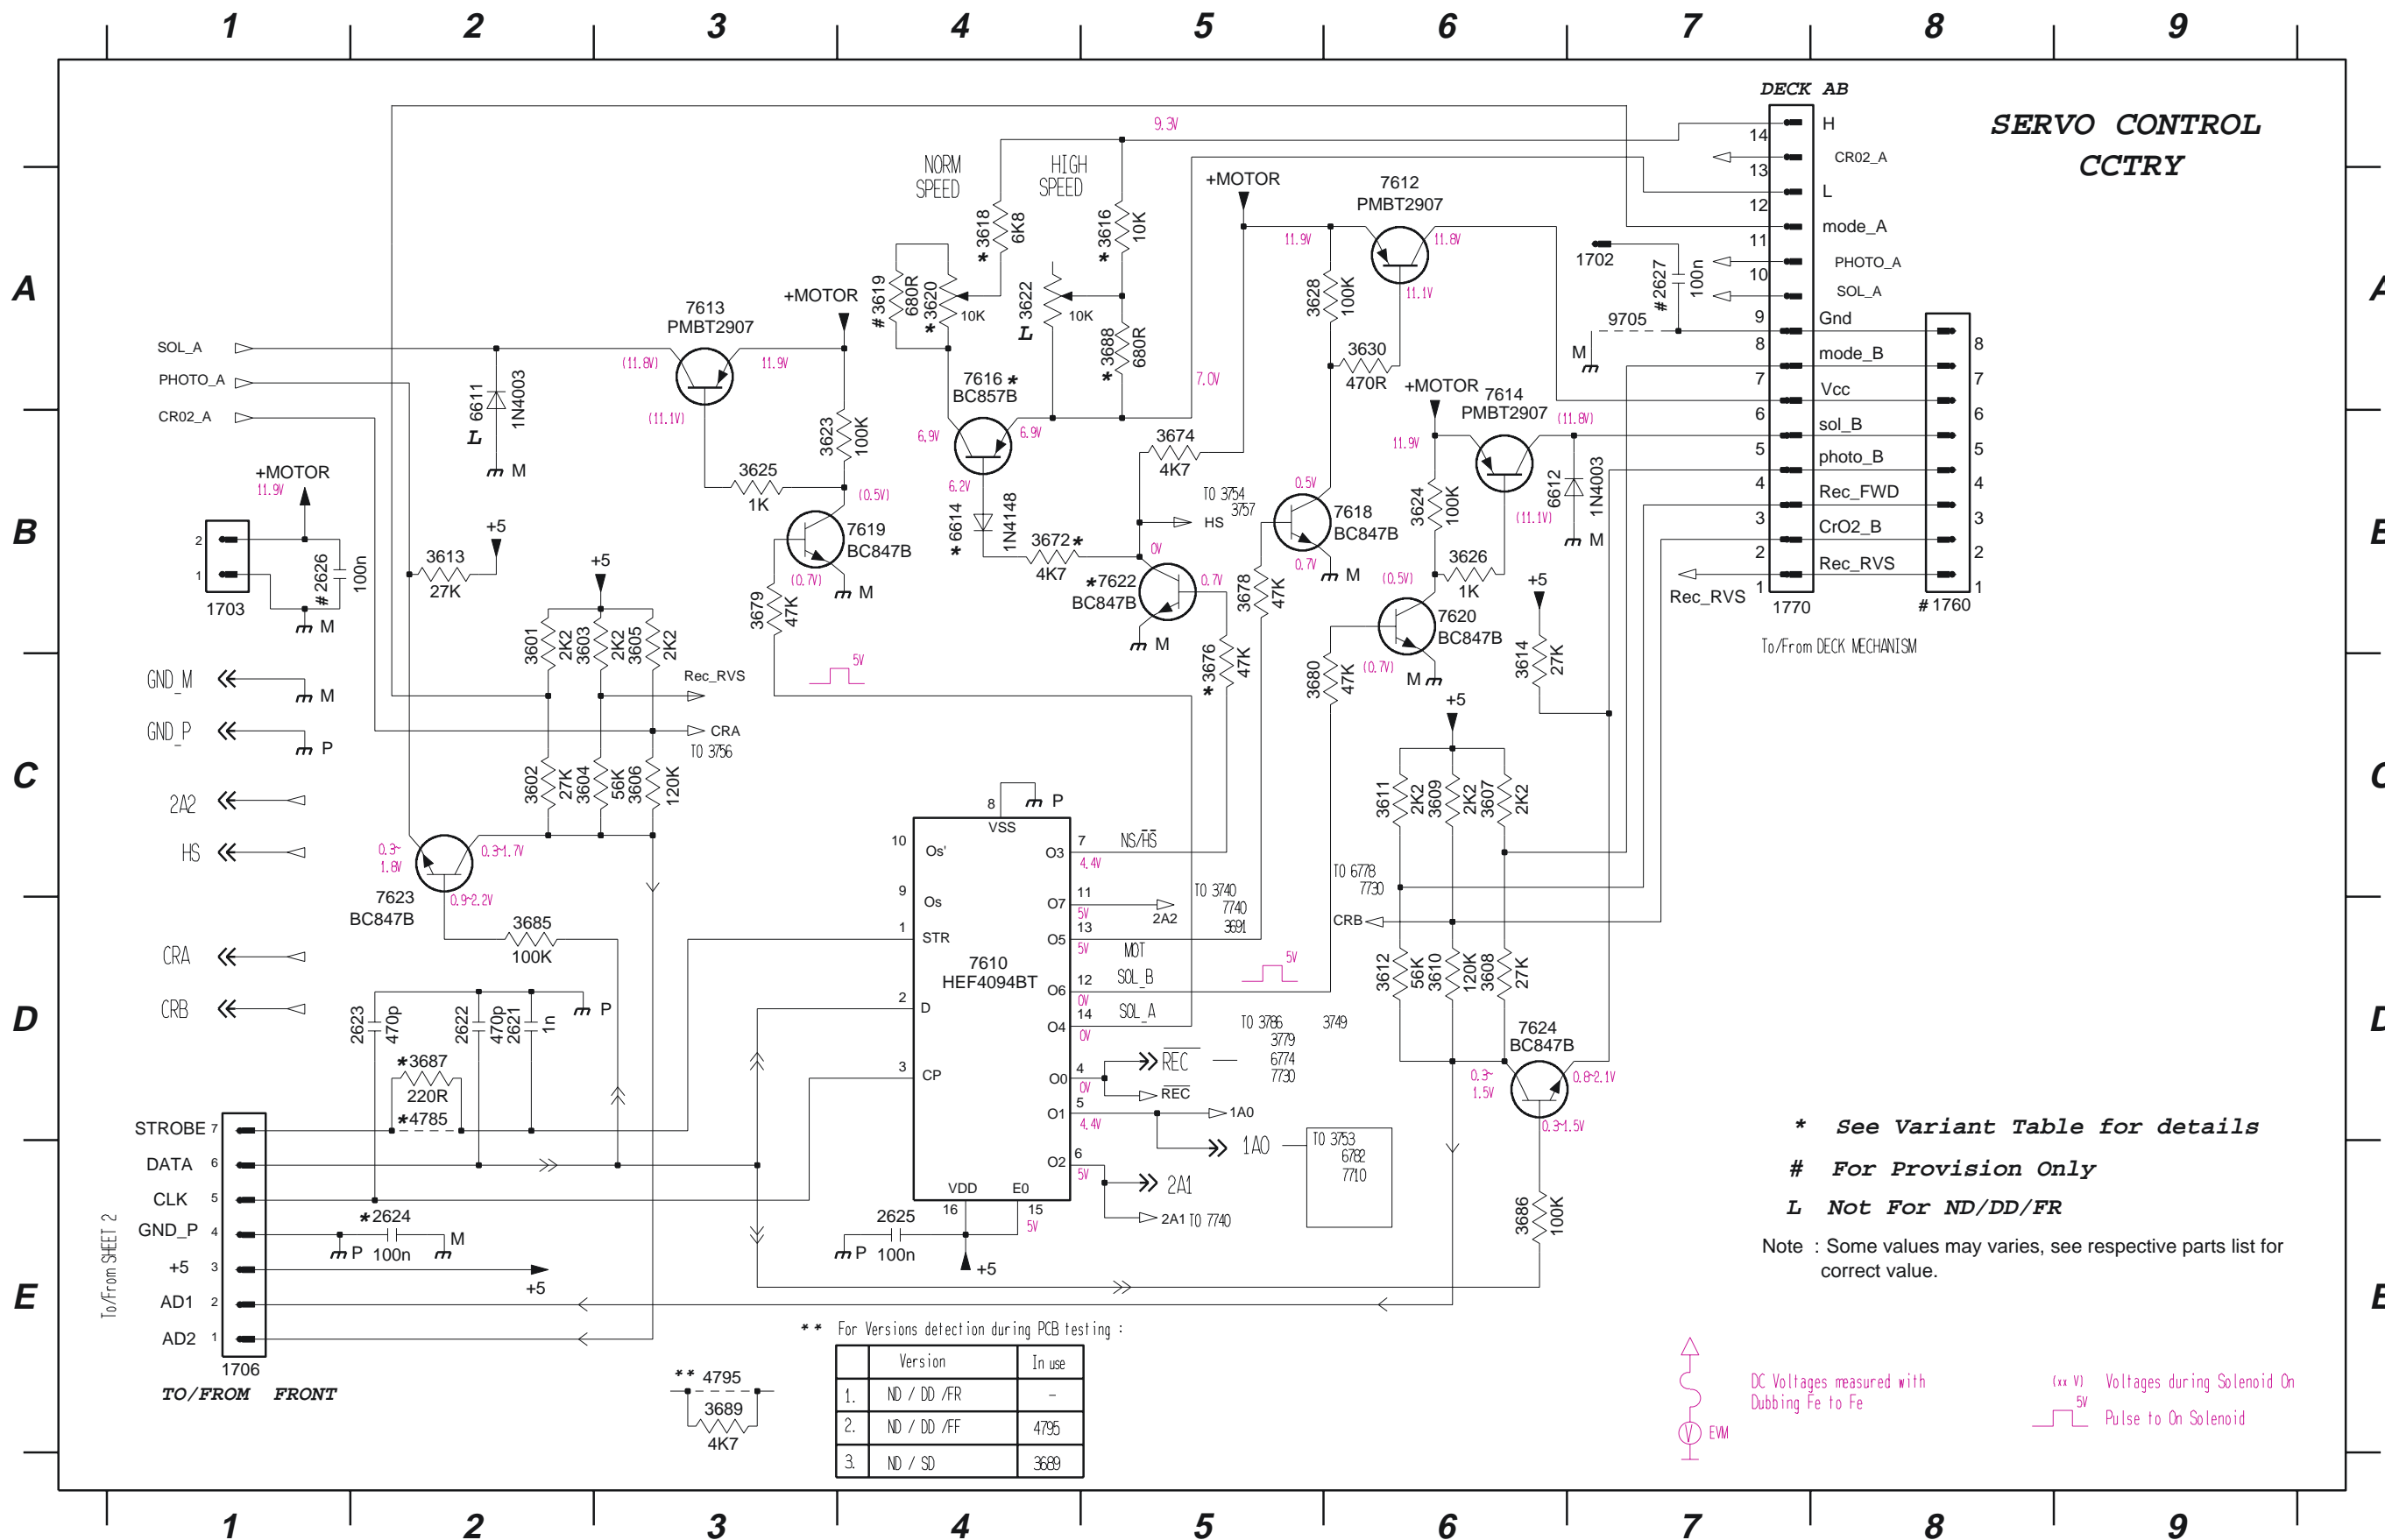

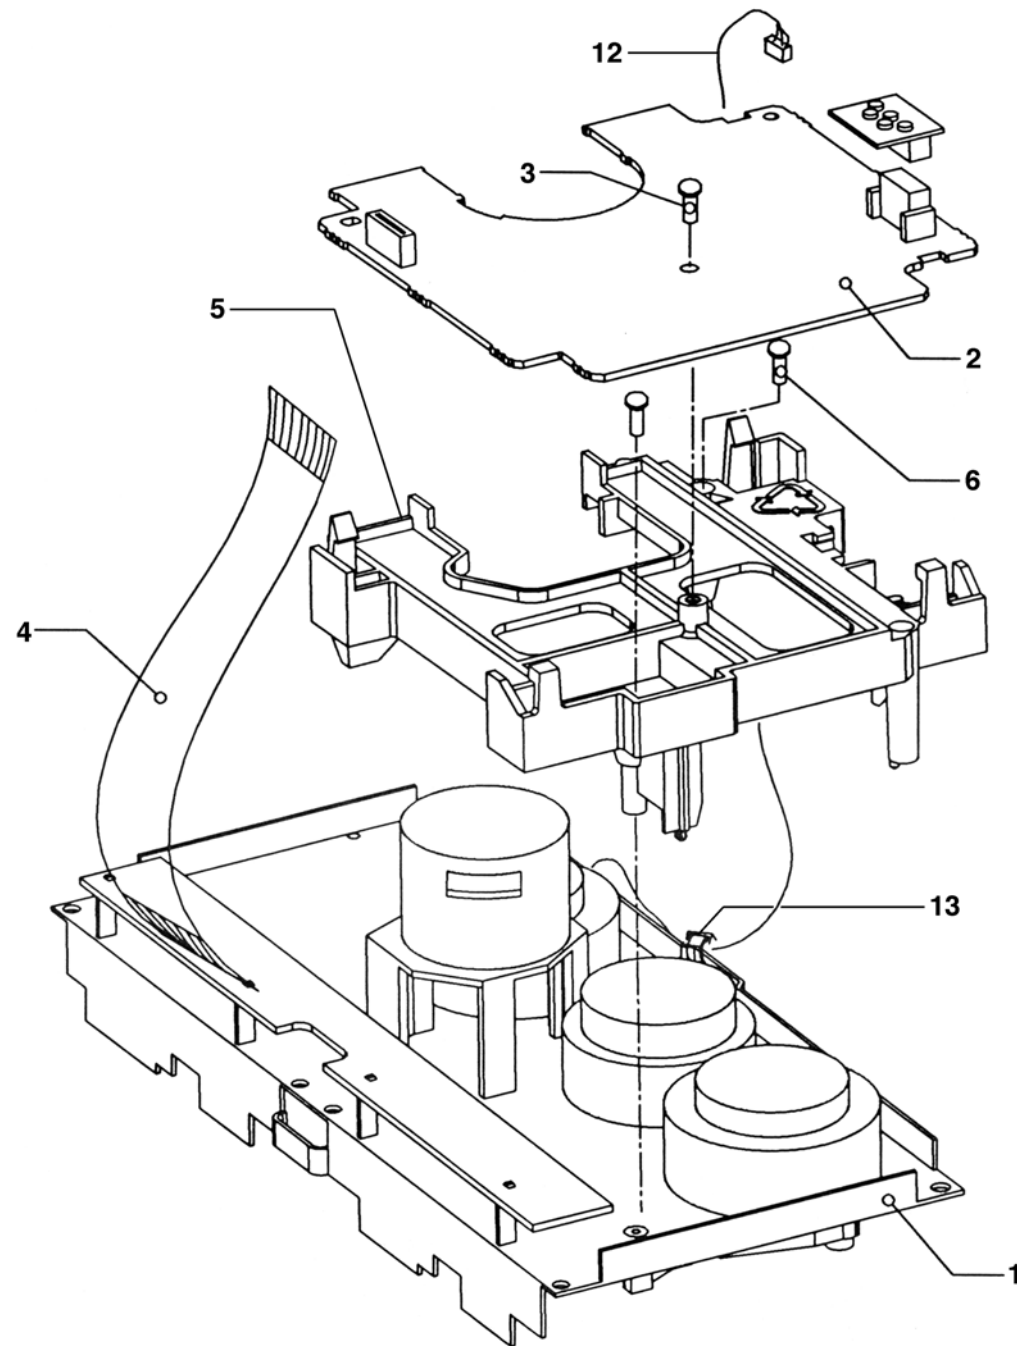


3139 118 77070 (Incl. ...77080) dd wk926

TAPE MODULE EXPLODED VIEW

- 1 3139 118 77130 Autoreverse Mech. CWE44FR01
- 1 3139 118 77140 Non-Autoreverse Mech. CWE44FF02 Chrome/Ferro
- 1 3139 118 77950 Non-Autoreverse Mech. CWE44FF05 Ferro
- 3 - Screw D3 x 10
- 6 - Screw M2 x 16
- 7 3139 110 34080 Flex Cable 14 pin 7,5 cm

Note: Only the parts mentioned in this list are normal service spare parts.

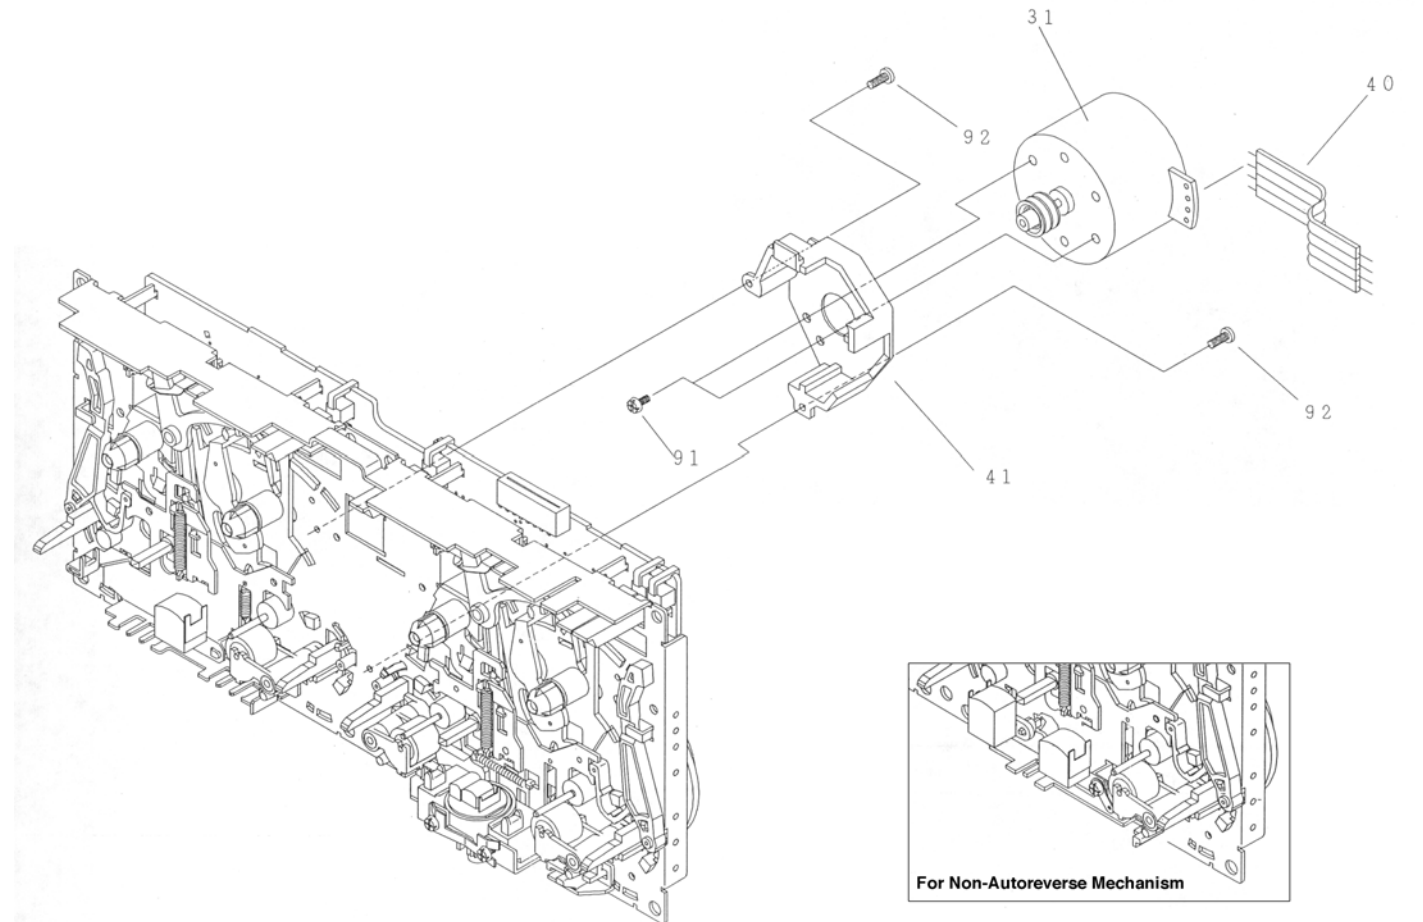

For Non-Autoreverse Mechanism

TAPE MECHANISM - MOTOR EXPLODED VIEW

- 31 4822 361 11055 Motor Assembly
- 91 - Screw M2,6 x 5
- 92 - Screw M2 x 5

Note: Only the parts mentioned in this list are normal service spare parts.

TAPE MECHANISM A - PLAY


MECHANICAL PARTS - PLAY MECHANISM

- 1 9965 000 02313 Play Head (Non-Autoreverse deck)
- 1 9965 000 02321 Play Head (Autoreverse deck)
- 12 4822 402 10972 Pinch Arm Assembly R
- 23 9965 000 02314 Coil Assembly

- 25 9965 000 06443 Cam Gear
- 32 4822 528 11209 Flywheel Assembly RV
- 42 9965 000 02315 Belt AF (Autoreverse deck)
- 42 9965 000 02718 Belt AF (Non-autoreverse deck)

- 69 4822 492 11761 Spring
- 102 4822 532 12931 Washer
- 103 4822 532 12932 Washer
- 104 4822 532 12933 Washer

Note: Only the parts mentioned in the list are normal service spare parts.

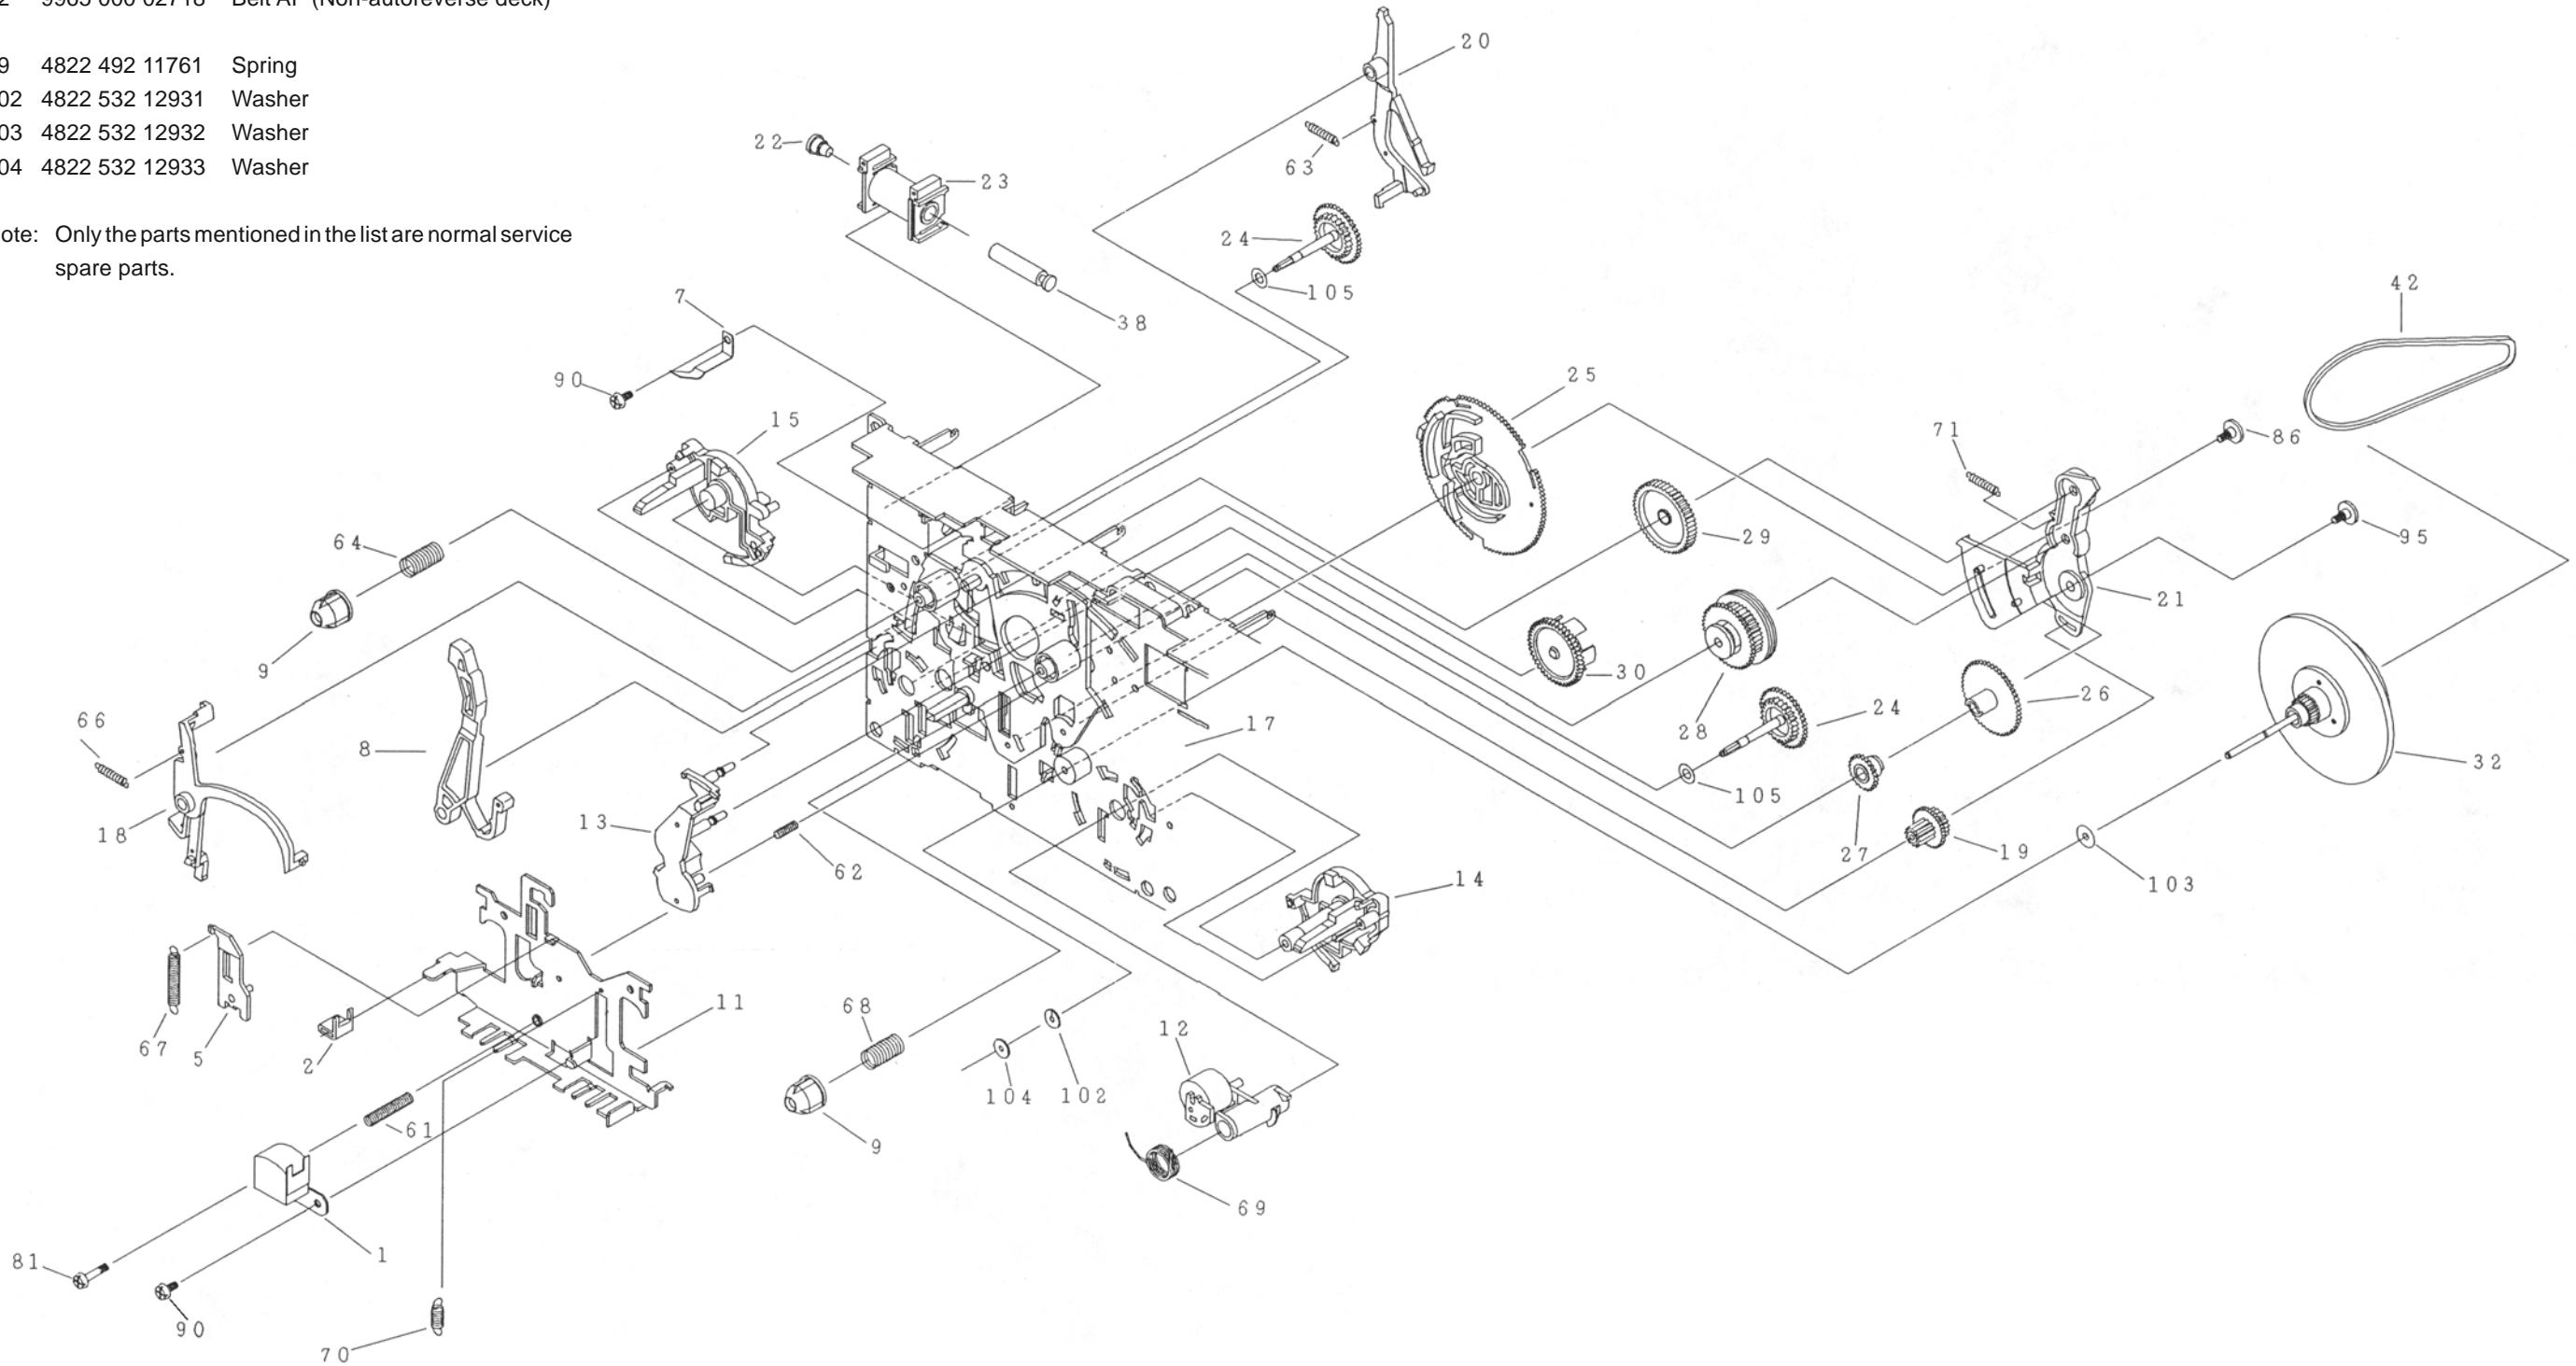


TAPE MECHANISM B - RECORD/PLAYBACK (Non-Autoreverse version)

MECHANICAL PARTS - REC/PB MECHANISM

1	9965 000 02313	Play Head
3	9965 000 02600	Head, Erase
12	4822 402 10972	Pinch Arm Assembly R
23	9965 000 02314	Coil Assembly
25	9965 000 06443	Cam Gear
32	4822 528 11209	Flywheel Assembly RV
44-2	9965 000 02317	Flex Socket 14 Pin
44-3	9965 000 02320	Photo Interrupter
44-4	4822 050 16801	680R 1% 0,4W
44-6	9965 000 02318	Leaf Switch
44-7	9965 000 02319	Mode Switch
59	9965 000 02719	Belt BF (Large)
69	4822 492 11761	Spring
102	4822 532 12931	Washer
103	4822 532 12932	Washer
104	4822 532 12933	Washer

Note: Only the parts mentioned in the list are normal service spare parts.

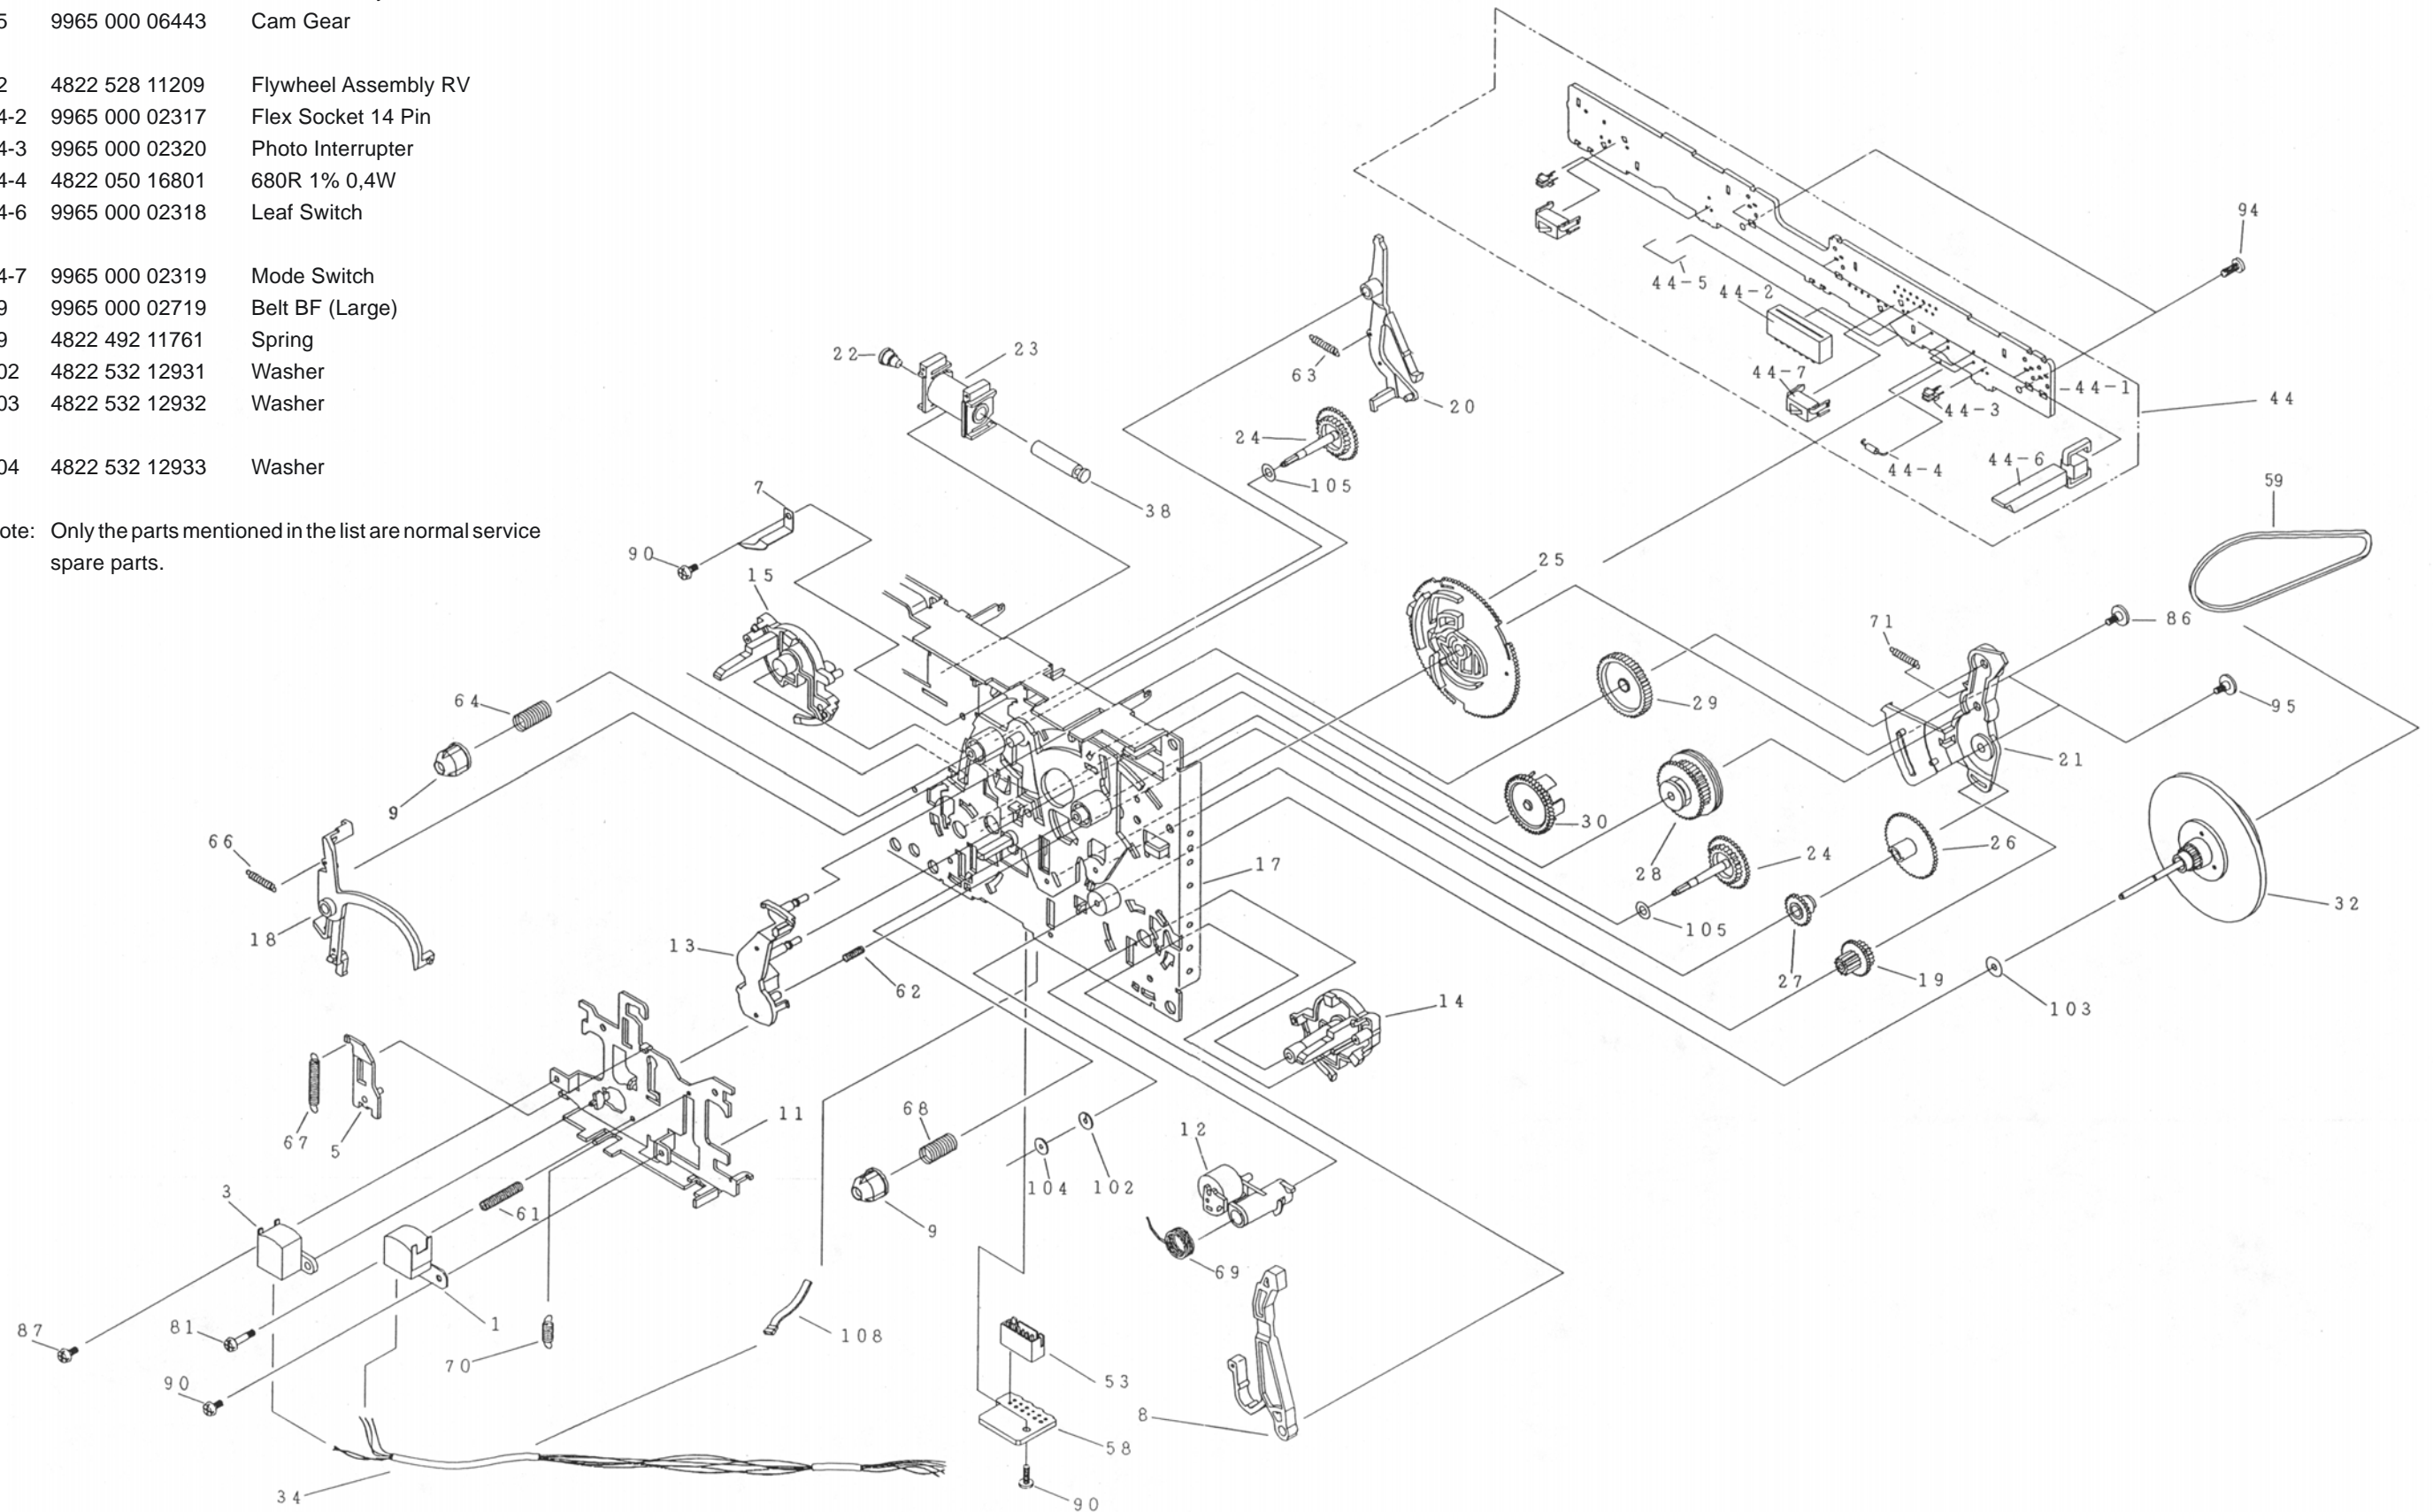


TAPE MECHANISM B - RECORD/PLAYBACK (Autoreverse version)

MECHANICAL PARTS - REC/PB MECHANISM

12	4822 402 10972	Pinch Arm Assembly R
23	9965 000 02314	Coil Assembly
25	9965 000 06443	Cam Gear
32	4822 528 11209	Flywheel Assembly RV
39	9965 000 02322	Belt AF
44-2	9965 000 02317	Flex Socket 14 Pin
44-3	9965 000 02320	Photo Interrupter
44-4	4822 050 16801	680R 1% 0,4W
44-6	9965 000 02318	Leaf Switch
44-7	9965 000 02319	Mode Switch
45	9965 000 02323	Rec/Pb Head Assembly
50	4822 402 10973	Pinch Arm Assembly L
54	9965 000 02324	Flywheel Assembly L
69	4822 492 11761	Spring
73	4822 492 11762	Spring
101	9965 000 02325	Washer
102	4822 532 12931	Washer
103	4822 532 12932	Washer
104	4822 532 12933	Washer
107	9965 000 02326	Washer
109	9965 000 02327	Washer

Note: Only the parts mentioned in the list are normal service spare parts.

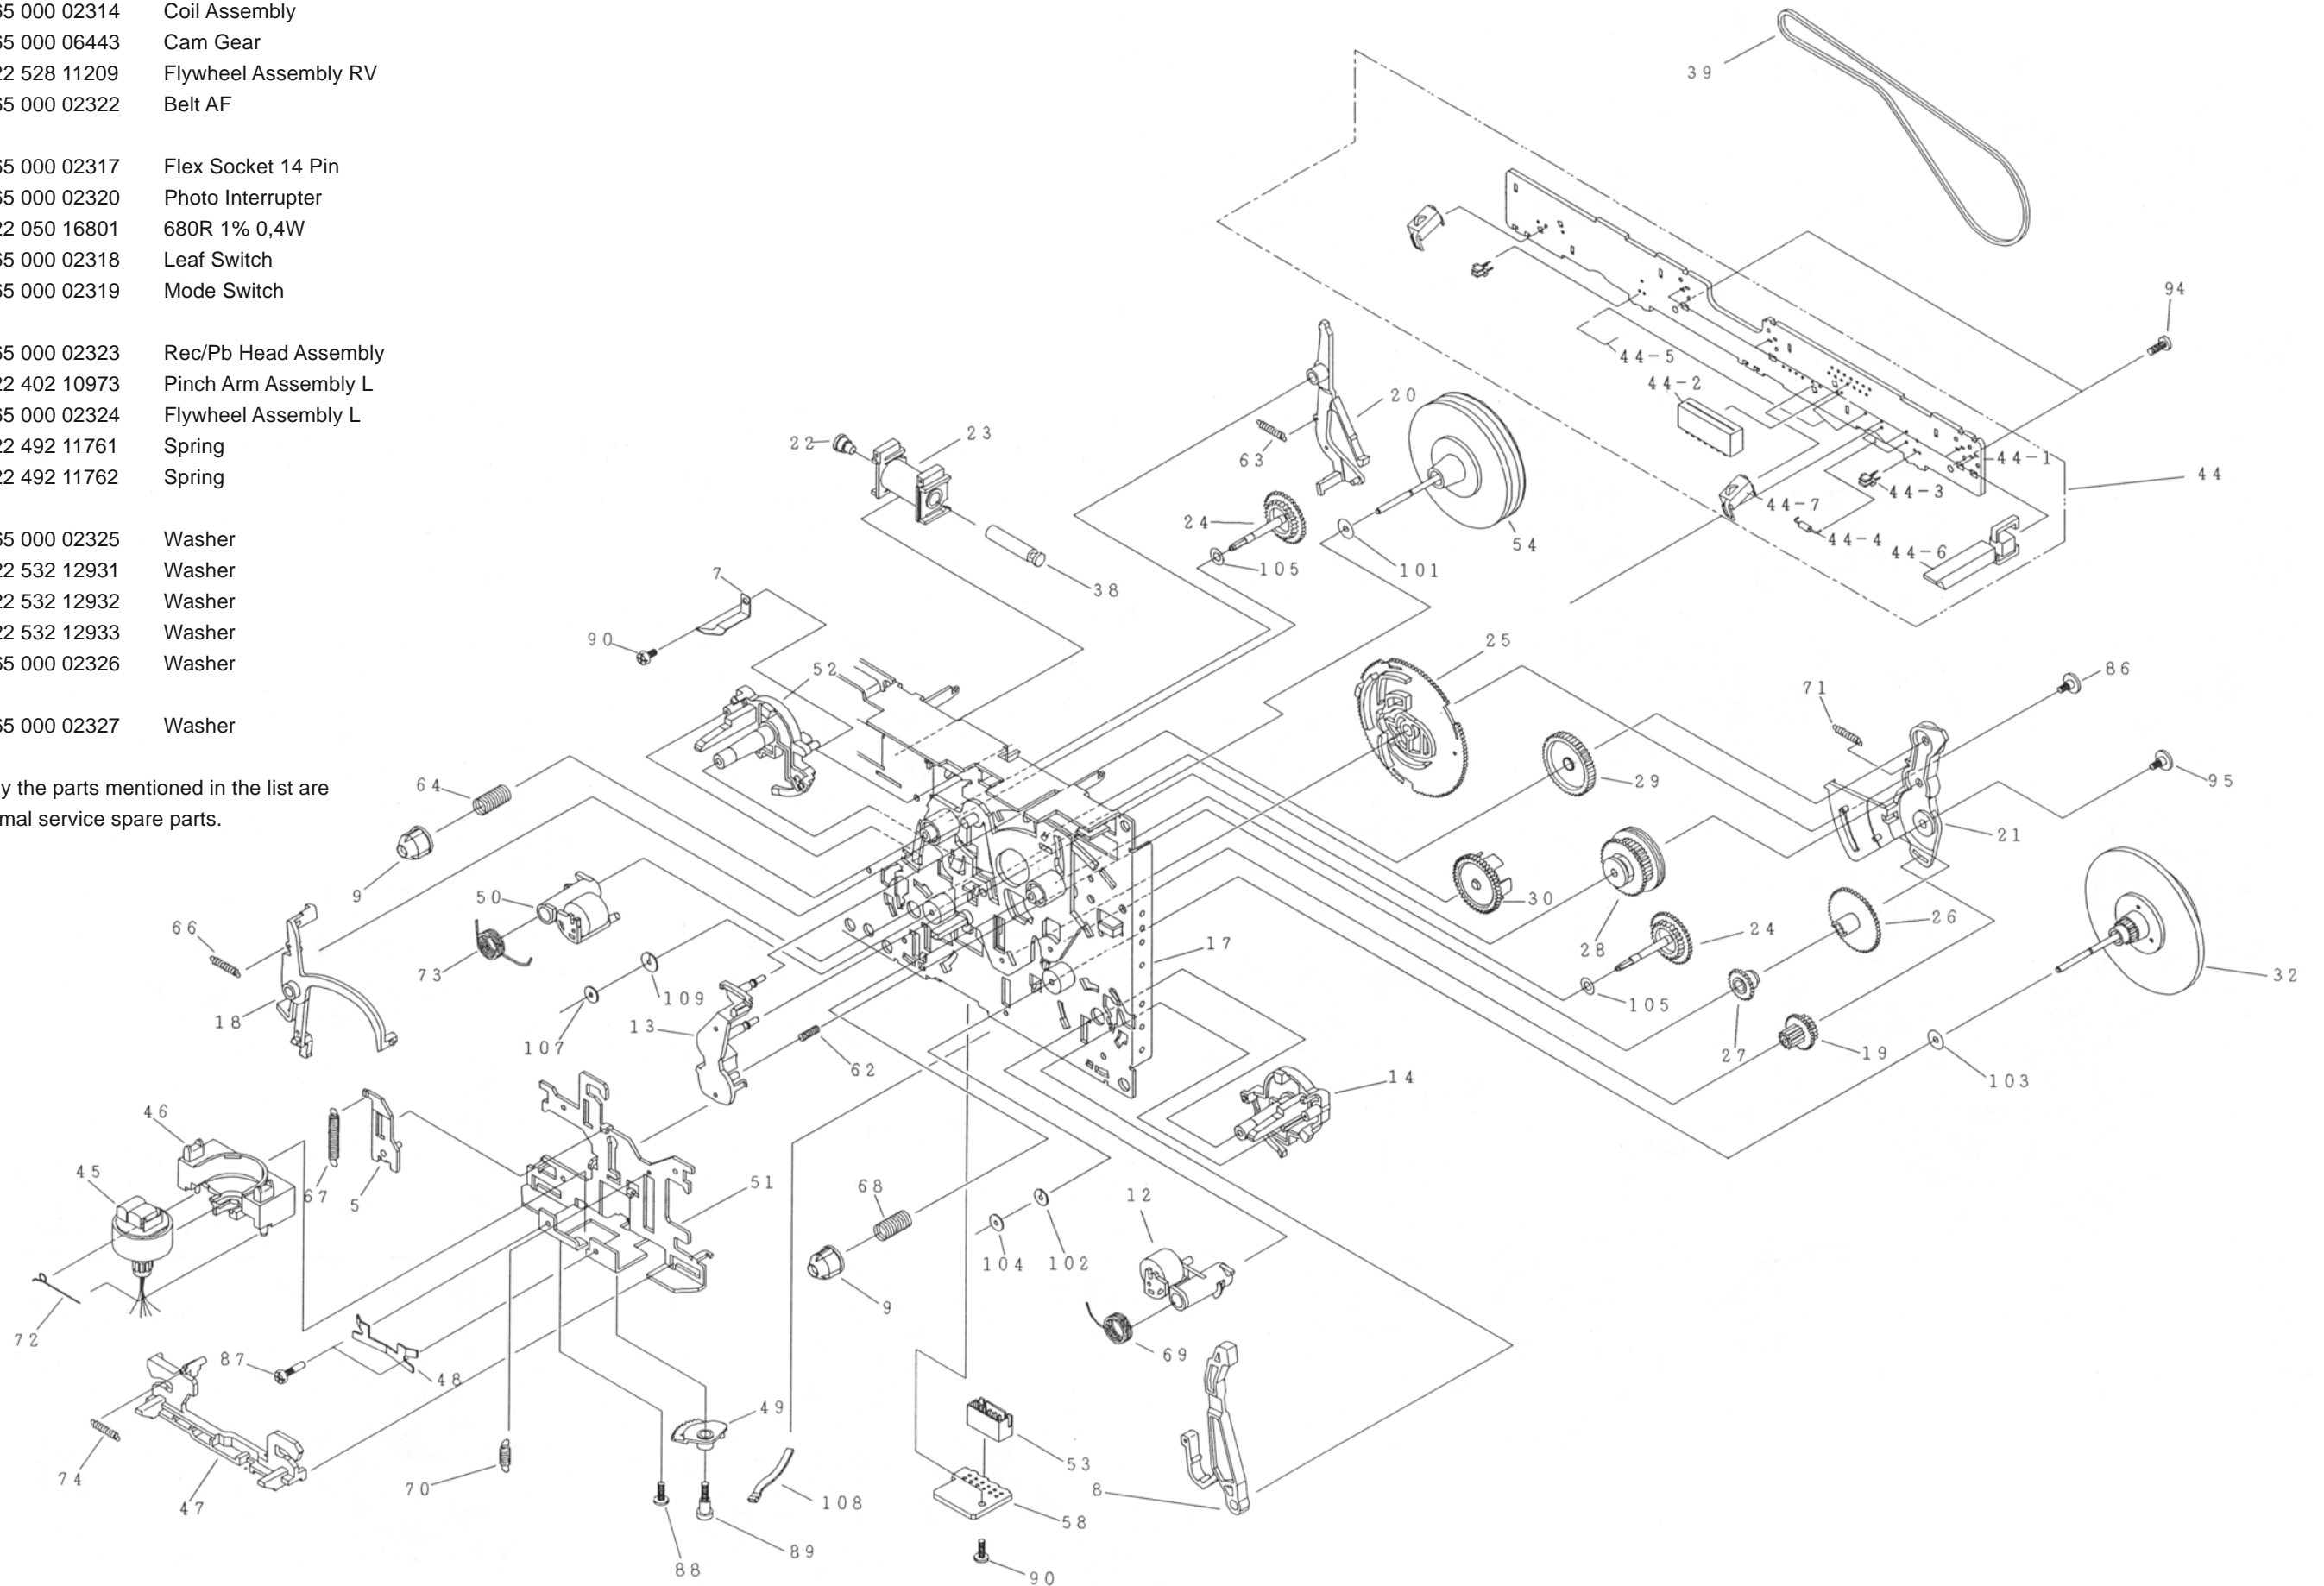

ELECTRICAL PARTS LIST - ETF7 NON-DOLBY BOARD

MISCELLANEOUS

1701	482226710953	Flex Socket 7pin Vert.
1706	482226710953	Flex Socket 7pin Vert.
1770	482226751255	Flex Socket 14pin Vert.

CAPACITORS

2621	532212231647	1nF 10% 63V
2622	532212234099	470pF 10% 63V
2623	532212234099	470pF 10% 63V
2624	482212614585	100nF 10% 50V only for Ferro
2625	482212614585	100nF 10% 50V
2701	532212233538	150pF 2% 63V Autoreverse
2701	482212233216	270pF 5% 63V Non-autoreverse
2702	532212233538	150pF 2% 63V Autoreverse
2702	482212233216	270pF 5% 63V Non-autoreverse
2703	532212232531	100pF 5% 50V Autoreverse
2703	482212233575	220pF 5% 63V Non-autoreverse
2704	532212232531	100pF 5% 50V Autoreverse
2704	482212233575	220pF 5% 63V Non-autoreverse
2705	482212233575	220pF 5% 63V
2706	482212233575	220pF 5% 63V
2707	532212234099	470pF 10% 63V
2708	532212234099	470pF 10% 63V
2709	532212231863	330pF 5% 63V
2710	532212231863	330pF 5% 63V
2711	532212232531	100pF 5% 50V
2712	532212232531	100pF 5% 50V
2713	482212440248	10µF 20% 63V
2714	482212440248	10µF 20% 63V
2715	482212480195	470µF 20% 10V
2716	482212480195	470µF 20% 10V
2717	482212233177	10nF 20% 50V Autoreverse
2717	482212613188	15nF 5% 63V Non-autoreverse
2718	482212233177	10nF 20% 50V Autoreverse
2718	482212613188	15nF 5% 63V Non-autoreverse
2719	482212612105	33nF 5% 50V
2720	482212612105	33nF 5% 50V
2721	532212231866	6,8nF 10% 63V not for Ferro
2722	532212231866	6,8nF 10% 63V not for Ferro
2723	482212613188	15nF 5% 63V
2724	482212613188	15nF 5% 63V
2725	532212610223	4,7nF 10% 63V
2726	532212610223	4,7nF 10% 63V
2727	532212234099	470pF 10% 63V Autoreverse
2727	532212231647	1nF 10% 63V Non-autoreverse
2728	532212234099	470pF 10% 63V Autoreverse
2728	532212231647	1nF 10% 63V Non-autoreverse
2729	532212232654	22nF 10% 63V
2730	532212232654	22nF 10% 63V
2733	532212234099	470pF 10% 63V
2734	532212234099	470pF 10% 63V
2735	482212614585	100nF 10% 50V
2737	482212614585	100nF 10% 50V

2738	482212614585	100nF 10% 50V
2741	482212611585	22nF +80/-20% 25V
2742	532212232654	22nF 10% 63V
2743	532212232654	22nF 10% 63V
2744	482212614585	100nF 10% 50V
2760	482212614585	100nF 10% 50V
2761	482212480144	220µF 20% 25V
2762	482212440769	4,7µF 20% 100V
2763	482212440433	47µF 20% 25V
2765	482212440433	47µF 20% 25V
2769	532212234099	470pF 10% 63V
2770	532212234099	470pF 10% 63V
2780	482212481151	22µF 20% 50V
2781	482212233177	10nF 20% 50V
2782	532212610223	4,7nF 10% 63V
2784	482212151305	15nF 10% 50V
2785	482212421913	1µF 20% 63V
2786	532212232531	100pF 5% 50V
2787	482212612105	33nF 5% 50V

RESISTORS

3601	482211711449	2k2 1% 0,1W
3602	482205120273	27k 5% 0,1W
3603	482211711449	2k2 1% 0,1W
3604	482211711148	56k 1% 0,1W
3605	482211711449	2k2 1% 0,1W
3606	482205120124	120k 5% 0,1W
3607	482211652256	2k2 5% 0,5W
3608	482205120273	27k 5% 0,1W
3609	482211652256	2k2 5% 0,5W
3610	482205120124	120k 5% 0,1W
3611	482211652256	2k2 5% 0,5W
3612	482211711148	56k 1% 0,1W
3613	482205120273	27k 5% 0,1W
3614	482205120273	27k 5% 0,1W
3616	482211710833	10k 1% 0,1W Autoreverse
3616	482205110102	1k 2% 0,25W Non-autoreverse
3618	482211711507	6k8 1% 0,1W Autoreverse
3620	482210011141	Trim. 10k 30% Autoreverse
3622	482210011141	Trim. 10k 30% Non-autoreverse
3623	482211710837	100k 1% 0,1W
3624	482211710837	100k 1% 0,1W
3625	482205110102	1k 2% 0,25W
3626	482205110102	1k 2% 0,25W
3628	482211710837	100k 1% 0,1W
3630	482205120471	470R 5% 0,1W
3672	482205120472	4k7 5% 0,1W Autoreverse
3674	482211652283	4k7 5% 0,5W
3676	482211710834	47k 1% 0,1W Autoreverse
3678	482211710834	47k 1% 0,1W
3679	482211710834	47k 1% 0,1W
3680	482211710834	47k 1% 0,1W

ELECTRICAL PARTS LIST - ETF7 NON-DOLBY BOARD

3685	482211652234	100k 5% 0,5W
3686	482211710837	100k 1% 0,1W
3687	482211711503	220R 1% 0,1W not for Ferro
3688	482211710361	680R 1% 0,1W Autoreverse
3701	482211711503	220R 1% 0,1W
3702	482211711503	220R 1% 0,1W
3703	482211711503	220R 1% 0,1W
3704	482211711503	220R 1% 0,1W
3705	482211711503	220R 1% 0,1W
3706	482211711503	220R 1% 0,1W
3707	482205120101	100R 5% 0,1W
3708	482205120101	100R 5% 0,1W
3709	482205120109	10R 5% 0,1W
3710	482205120109	10R 5% 0,1W
3711	482205120154	150k 5% 0,1W
3712	482205120154	150k 5% 0,1W
3713	482205120109	10R 5% 0,1W
3714	482205120109	10R 5% 0,1W
3715	482205120182	1k8 5% 0,1W
3716	482205120182	1k8 5% 0,1W
3717	482211711449	2k2 1% 0,1W
3718	482211711449	2k2 1% 0,1W
3719	482211711383	12k 1% 0,1W
3720	482211711383	12k 1% 0,1W
3721	482205120392	3k9 5% 0,1W
3722	482205120392	3k9 5% 0,1W
3723	482211683933	15k 1% 0,1W Autoreverse
3723	482211710965	18k 1% 0,1W Non-autoreverse
3724	482211683933	15k 1% 0,1W Autoreverse
3724	482211710965	18k 1% 0,1W Non-autoreverse
3725	482205120109	10R 5% 0,1W not for Ferro
3726	482205120109	10R 5% 0,1W not for Ferro
3727	482205120562	5k6 5% 0,1W Autoreverse
3727	482211711507	6k8 1% 0,1W Non-autoreverse
3728	482205120562	5k6 5% 0,1W Autoreverse
3728	482211711507	6k8 1% 0,1W Non-autoreverse
3729	482205120332	3k3 5% 0,1W Autoreverse
3729	482205120472	4k7 5% 0,1W Non-autoreverse
3730	482205120332	3k3 5% 0,1W Autoreverse
3730	482205120472	4k7 5% 0,1W Non-autoreverse
3731	482205120822	8k2 5% 0,1W
3732	482205120822	8k2 5% 0,1W
3733	482205120122	1k2 5% 0,1W
3734	482205120122	1k2 5% 0,1W
3735	482205120223	22k 5% 0,1W
3736	482205120223	22k 5% 0,1W
3741	482211711449	2k2 1% 0,1W
3742	482211711449	2k2 1% 0,1W
3743	482211711139	1k5 1% 0,1W Autoreverse
3743	482211711449	2k2 1% 0,1W Non-autoreverse
3744	482211711139	1k5 1% 0,1W Autoreverse
3744	482211711449	2k2 1% 0,1W Non-autoreverse

3745	482205120332	3k3 5% 0,1W Autoreverse
3745	482205120562	5k6 5% 0,1W Non-autoreverse
3746	482205120332	3k3 5% 0,1W Autoreverse
3746	482205120562	5k6 5% 0,1W Non-autoreverse
3748	482211711449	2k2 1% 0,1W
3749	482211710834	47k 1% 0,1W
3751	482211710833	10k 1% 0,1W
3752	482211710837	100k 1% 0,1W
3753	482211710837	100k 1% 0,1W
3754	482205120105	1M 5% 0,1W Autoreverse
3754	482205120479	47R 5% 0,1W Non-autoreverse
3755	482205120105	1M 5% 0,1W Autoreverse
3755	482205120479	47R 5% 0,1W Non-autoreverse
3756	482211713579	220k 1% 0,1W
3757	482211713579	220k 1% 0,1W
3758	482211710833	10k 1% 0,1W
3759	482211710833	10k 1% 0,1W
3760	482205120121	120R 5% 0,1W
3761	482205021003	10k 1% 0,6W
3762	482211711454	820R 1% 0,1W
3763	482205120154	150k 5% 0,1W
3764	482211683872	220R 5% 0,5W
3765	482205120393	39k 5% 0,1W
3766	482205120475	4M7 5% 0,1W
3767	482205120475	4M7 5% 0,1W
3768	482211710833	10k 1% 0,1W
3769	482211711383	12k 1% 0,1W Autoreverse
3769	482205120822	8k2 5% 0,1W Non-autoreverse
3770	482211711139	1k5 1% 0,1W
3771	482205120122	1k2 5% 0,1W
3772	482211711507	6k8 1% 0,1W Autoreverse
3772	482205120562	5k6 5% 0,1W Non-autoreverse
3773	482210012227	Trimmer 4k7 30% 0,1W
3774	482211683933	15k 1% 0,1W Autoreverse
3774	482205120822	8k2 5% 0,1W Non-autoreverse
3775	482205120478	4R7 5% 0,1W
3776	482211711507	6k8 1% 0,1W
3777	482211710353	150R 1% 0,1W
3778	482205210688	△ 6R8 5% 0,33W
3779	482205120334	330k 5% 0,1W
3780	482205120105	1M 5% 0,1W
3781	482205120475	4M7 5% 0,1W
3784	482205110102	1k 2% 0,25W
3786	482205120223	22k 5% 0,1W
3787	482205120105	1M 5% 0,1W
3788	482205120105	1M 5% 0,1W
3789	482211710834	47k 1% 0,1W
4701	482205120008	0R Jumper 0805
4702	482205120008	0R Jumper 0805
4703	482205120008	0R Jumper 0805
4704	482205120008	0R Jumper 0805
4705	482205120008	0R Jumper 0805

ELECTRICAL PARTS LIST - ETF7 NON-DOLBY BOARD**RESISTORS**

4706	482205120008	OR Jumper 0805	6612	482213031878	1N4003G	
4707	482205120008	OR Jumper 0805	6614	482213030621	1N4148	Autoreverse
4708	482205120008	OR Jumper 0805	6770	482213030621	1N4148	
4709	482205120008	OR Jumper 0805	6771	482213030621	1N4148	
4710	482205120008	OR Jumper 0805	6772	482213030621	1N4148	
4711	482205120008	OR Jumper 0805	6773	482213030621	1N4148	
4712	482205120008	OR Jumper 0805	6774	482213030621	1N4148	
4713	482205120008	OR Jumper 0805	6775	482213030621	1N4148	
4714	482205120008	OR Jumper 0805	6776	482213030621	1N4148	
4715	482205120008	OR Jumper 0805	6777	482213034382	BZX79-F8V2	
4716	482205120008	OR Jumper 0805	6778	482213030621	1N4148	
4717	482205120008	OR Jumper 0805	6782	482213030621	1N4148	
4718	482205120008	OR Jumper 0805	6785	482213030621	1N4148	
4719	482205120008	OR Jumper 0805	6786	482213030621	1N4148	
4720	482205120008	OR Jumper 0805				
4721	482205120008	OR Jumper 0805				
4722	482205120008	OR Jumper 0805				
4723	482205120008	OR Jumper 0805				
4724	482205120008	OR Jumper 0805				
4725	482205120008	OR Jumper 0805				
4726	482205120008	OR Jumper 0805				
4727	482205120008	OR Jumper 0805				
4728	482205120008	OR Jumper 0805				
4729	482205120008	OR Jumper 0805				
4730	482205120008	OR Jumper 0805				
4731	482205120008	OR Jumper 0805				
4732	482205120008	OR Jumper 0805				
4733	482205120008	OR Jumper 0805				
4734	482205120008	OR Jumper 0805				
4735	482205120008	OR Jumper 0805				
4736	482205120008	OR Jumper 0805				
4737	482205120008	OR Jumper 0805				
4738	482205120008	OR Jumper 0805				
4739	482205120008	OR Jumper 0805				
4740	482205120008	OR Jumper 0805				
4741	482205120008	OR Jumper 0805				
4742	482205120008	OR Jumper 0805				
4744	482205120008	OR Jumper 0805				
4745	482205120008	OR Jumper 0805				
4746	482205120008	OR Jumper 0805				
4748	482205120008	OR Jumper 0805				
4785	482205120008	OR Jumper 0805 only for Ferro				
4790	482205120008	OR Jumper 0805				
4794	482205120008	OR Jumper 0805				
4795	482205120008	OR Jumper 0805				

TRANSISTORS & INTEGRATED CIRCUITS

7610	532220911306	HEF4094BT			
7612	482213011201	PMBT2907			
7613	482213011201	PMBT2907			
7614	482213011201	PMBT2907			
7616	482213060373	BC857B			Autoreverse
7618	482213060511	BC847B			
7619	482213060511	BC847B			
7620	482213060511	BC847B			
7622	482213060511	BC847B			Autoreverse
7623	482213060511	BC847B			
7624	482213060511	BC847B			
7710	482220932919	HEF4952BT			
7720	932214000668	AN7323S			
7730	482220932919	HEF4952BT			
7740	482220932919	HEF4952BT			
7780	482213060511	BC847B			
7781	482213042804	BC817-25			
7782	482213044568	BC557B			
7783	482213060511	BC847B			
7784	482213060373	BC857B			
7786	482213063494	J111			
7787	482213060511	BC847B			
7791	482213060511	BC847B			
7792	482213060511	BC847B			

Note: Only the parts mentioned in this list are normal service spare parts.

COILS & FILTERS

5701	482215711477	Coil 2,2μH 5%
5703	482215620946	Osc Coil 100kHz

DIODES

6611	482213031878	1N4003G
------	--------------	---------


ETF7 TAPE MODULE

(Dolby Version)

TABLE OF CONTENTS

Tape Module Wiring & variation table9A-1
 Block diagram9A-2
 Brief Introduction9A-3
 Connector assignment.....9A-4
 Tape deck electronics9A-5
 Tape adjustments9A-6
 ETF7 Dolby Board Component layout9A-7
 ETF7 Dolby Board Chip layout9A-8
 Analog Circuit diagram9A-9
 Servo Circuit diagram9A-10
 Dolby Circuit diagram9A-11
 Exploded views & parts list.....9A-12
 Electrical parts list.....9A-15

Tapedeck wiring (Double deck)



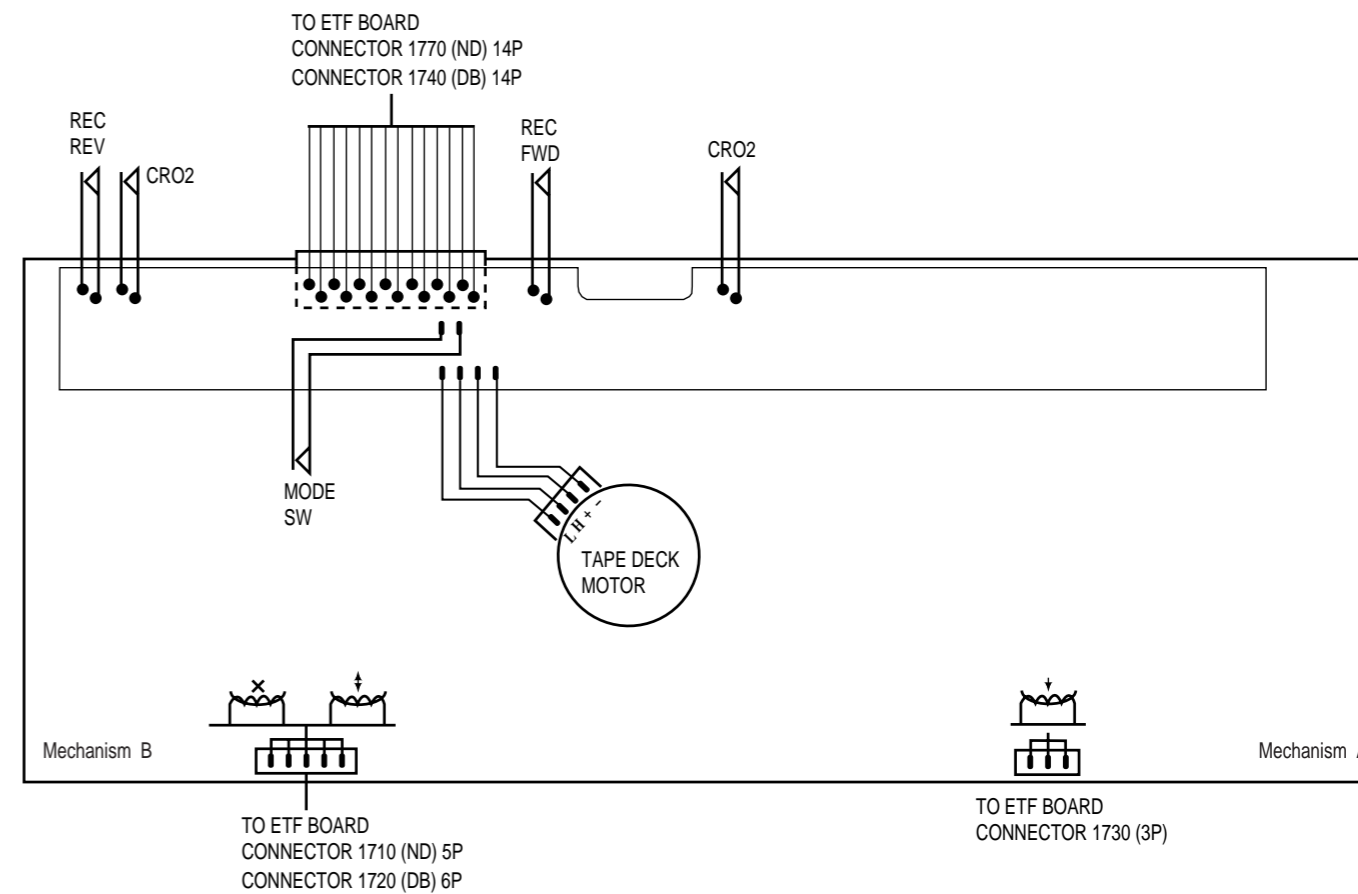


OPTIONS / VARIANTS TABLE

MODULE	ETF7		
VARIANT	1	2	3
FEATURES	DB/DD/FR	ND/DD/FR	ND/DD/FF
Deck configuration	double	double	double
Deck type (Tokyo Pigeon)	CWE	CWE	CWE
Autoreverse	yes (B)	yes (B)	no
Auto Replay	no	no	yes (A+B)
Motor configuration	single	single	single
Auto tape type selection	yes	yes	yes
Dolby type B Noise Reduction	yes	no	no
19 kHz pilot suppression	yes	no	no
Normal / High speed dubbing	yes	yes	no
Cue/Review & Fwd/Rewind	yes	yes	yes

- DB = Dolby B NR
- DD = Double Deck
- FF = Non-Autoreverse
- FR = Autoreverse Deck B
- ND = Non-Dolby
- SD = Single Deck

BLOCK DIAGRAM

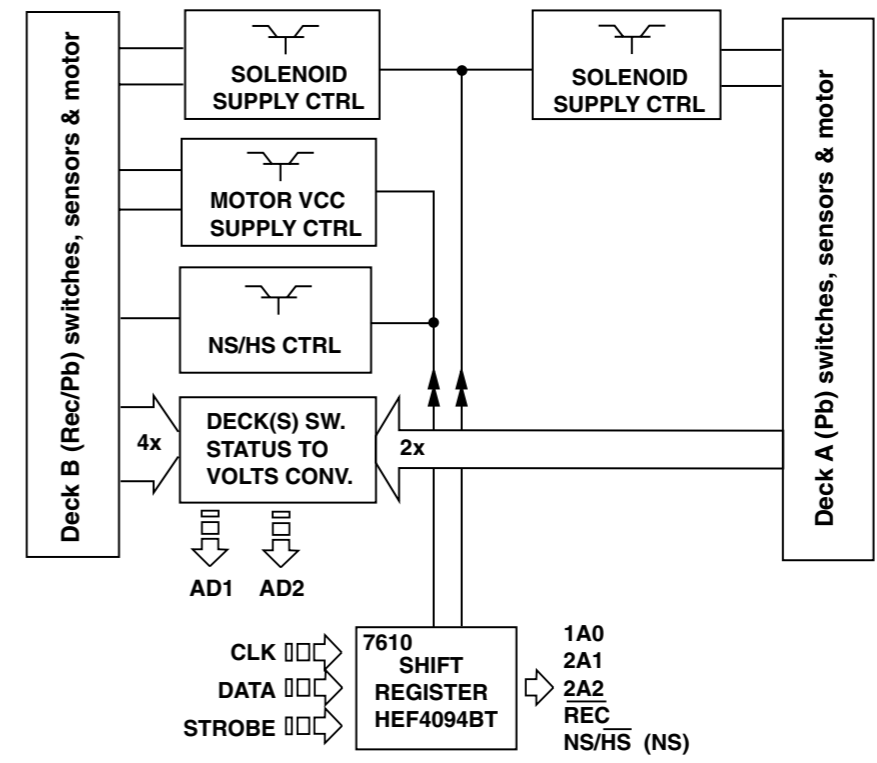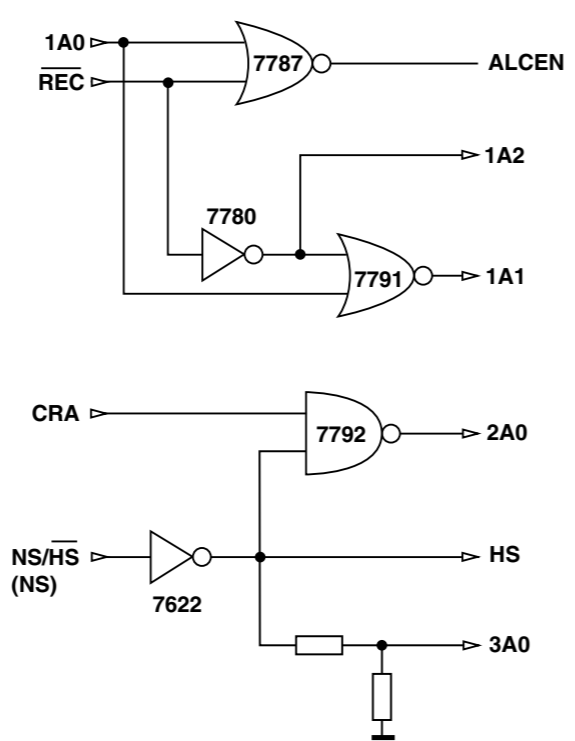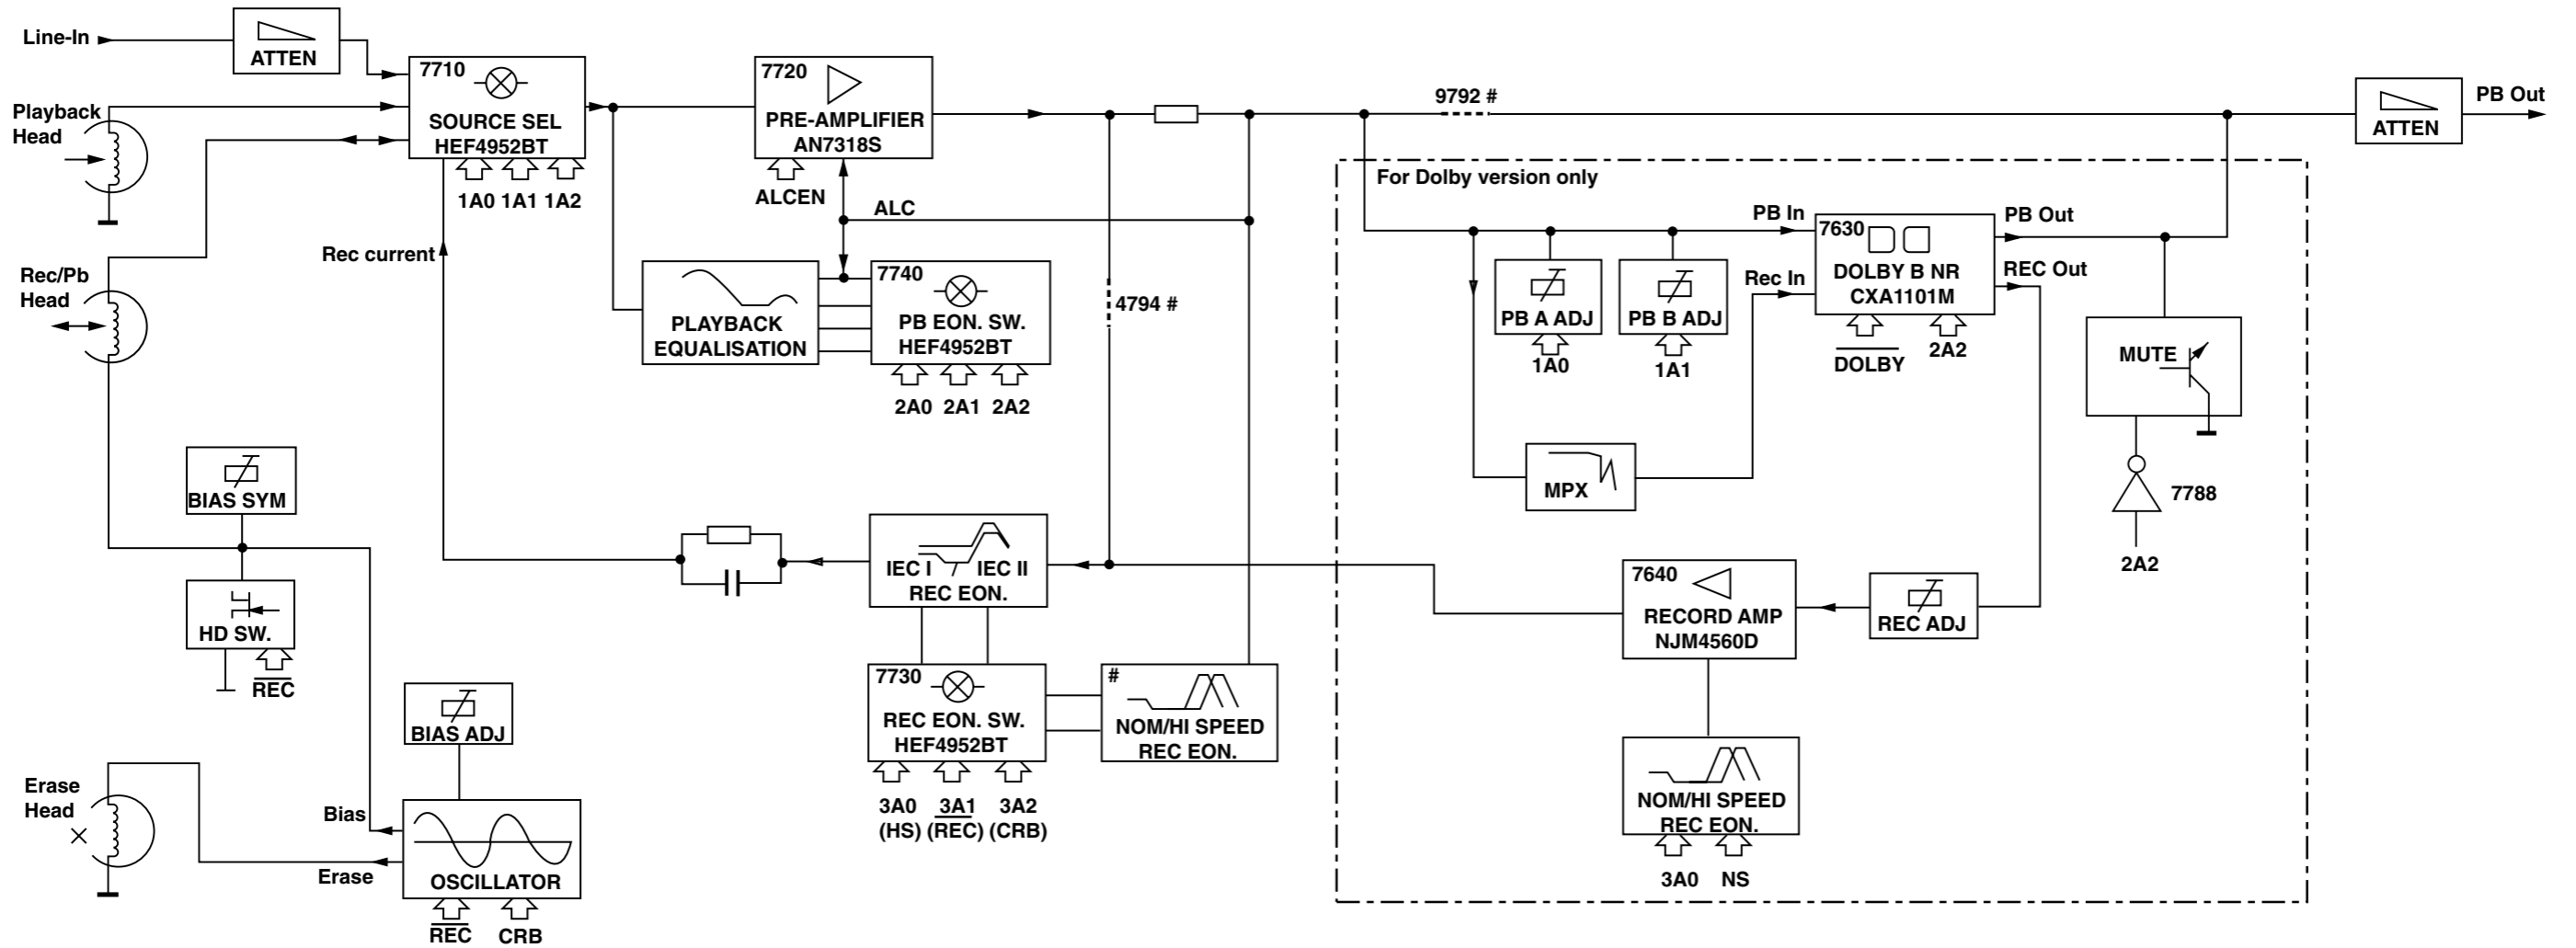

NOTE: # For Non-dolby version only
 Only 1 channel is presented.

MicroProcessor Control / Communication lines

Direct / Indirect Control lines from Shift Registers

Brief introduction

General

1. Playback Mode
Signal from the playback head Deck A or Deck B is selected and fed through by the Mode Selector IC7710 (HEF4952BT). The signal is amplified by amplifier IC7720 (AN7323S) before feeding to the IC7740 (HEF4952BT) and out to the AF Board via connector 1701.
2. Recording Mode
Recording Signal is selected and fed through by the Mode Selector IC7710 (HEF4952BT) which is then amplified by the amplifier IC7720 (AN7323S). The amplified output signal will pass through IC7730 (HEF4952BT) for record equalization and back to IC7710 (HEF4952BT) before registered into the Rec/PB Head of Deck B.
3. Dubbing Mode
In Dubbing mode, signal from the playback head Deck A is selected and fed through by the Mode Selector IC7710 (HEF4952BT) which is then equalised for playback mode by the amplifier IC7720 (AN7323S) so that a flat response is obtained after the pre-amp. The equalised signal will then follow the same path as in the Recording mode.
4. Mode Selector
The Mode Selector IC7710 (HEF4952BT) caters for 4 inputs signal, namely Playback Signal from Deck A, Playback Signal from Deck B, Recording Signal and Dubbing Signal.
5. Amplifier PB/REC
Amplifier IC7720 (AN7323S) is for the purpose of amplifying the Playback and Recording signal from the Mode Selector.
6. Automatic Level Control (ALC)
ALC circuit consists of resistors (3760, 3765, 3766, 3767), capacitors (2762, 2763) and control by transistor 7787 (BC847B). ALC limits the amplifier output to a constant value when input signal becomes too large, thus limiting recording current to below saturation level, to prevent recording distortion.
7. Muting Circuit (For Non-Dolby version only)
Switch S4 of the IC7740 (HEF4952BT) is for the purpose of muting the output during Recording mode. During Recording mode, S4 is closed and shorted to the ground.
8. IC7740 (HEF4952BT)
The function of the IC7740 (HEF4952BT) is to change time constant between 120us Ferro (IEC I) and 70us Chrome (IEC II) during playback mode. It will automatically determined whether the tape type is 120us Ferro (IEC I) or 70us Chrome (IEC II). This IC will switch to Flat Gain during the Recording mode.
9. IC7730 (HEF4952BT)
The function of the IC7730 (HEF4952BT) is to change gain and time constant according to tape type and recording speed to boost recording current at higher frequency during recording to compensate for head loss. It will automatically determined whether the tape type is 120us Ferro (IEC I) or 70us Chrome (IEC II).
10. Bias Level
Bias Level making use of the Variable resistor (3773) for adjusting the optimal level of the bias current for Ferro or Chrome.
11. Bias Symm (For Dolby B NR version only)
Bias Symm making use of the Variable resistor (3785) to adjust the bias current for the left and the right channel to be equal.
12. PB Switch
Playback Switch which consists of the FETs 7785 (For Dolby B NR version only) & 7786 (J111) is for the purpose of providing a virtual ground for the Rec/PB Head (Deck B) during Playback mode. During the Playback mode, the FETs are turn on and shorted pin 2 and 4 of connector 1720 to the ground. During Recording mode, the FETs are turn off to allow the oscillator signal to be superposition onto the Recording signal for recording.

13. Motor Speed (For FR versions only)
During High speed dubbing, a feedback signal from the uP through pin 03 of the IC7610 (HEF4094BT) will trigger the transistors 7622 (BC847B) and 7616 (BC857B) to cause a change in the voltage level between High and Low, thus changing the speed of the motor.
14. IC7610 (HEF4094BT)
IC7610 (HEF4094BT) is a Shift Register use for issues the logic for cmos switch ICs (HEF4952BT) via 1A0, 2A1 and 2A2. It also issues logic to On/Off SOL_A, SOL_B and MOT. Recording speed is controlled via NS/HS.

Dolby Circuit (For sets with Dolby B NR version only)

15. IC7630 (CXA1551M)
IC7630 (CXA1551M) in the Dolby circuit is a Dolby Noise Reduction Type B IC for the Playback and Recording signal. Noise Reduction ON/OFF are controlled by $\overline{\text{DOLBY}}$, which is from CLK, direct from uP. After clocking in DATA, CLK is set to HIGH/LOW for NR OFF/ON.
16. 19kHz Filter
The 19kHz filters 5631 & 5632 (LXD-210) in the Dolby circuit is for the purpose of filtering the 19kHz Pilot Tone (for Tuner signal only) of the Recording signal.
17. Level Adjust
The Variable resistor 3635, 3636, 3641 and 3642 in the Dolby circuit is for adjusting the playback level of the Dolby reference (400Hz, 200nWb/m). Transistor 7631, 7632 are ON to enable adjustment of 3641, 3642 during Playback Deck A. Transistor 7633, 7634 and 3635, 3636 are active for Playback Deck B.
18. Amplifier IC7640 (NJM4560M)
The Amplifiers 7640A & 7640B (NJM4560M) in the Dolby circuit is for the purpose of amplified the Recording signal.
19. Muting Circuit
The muting circuit which consists of transistors 7788, 7789 and 7790 (BC847B) is for the purpose of muting the output during Recording mode.

NOTATIONS & ABBREVIATIONS USED IN THIS DOCUMENT

CR	Chrome (IEC type II)
DB	Dolby NR type B
DD	Double Deck
DM	Double Motor
FE	Ferro (IEC type I)
FF	Non-Autoreverse
FR	Autoreverse Deck B
Gnd x	Ground x
HSD	High speed dubbing
ND	Non Dolby
NR	Noise Reduction
NSD	Normal speed dubbing
PB	Playback
REC	Record
S/A	Sub-assy
SD	Single Deck
SM	Single Motor

CONNECTORS ASSIGNMENTS:CONNECTOR 1701INTERCONNECTION TO AF BOARD

○ 1	REC-L	Record input left
○ 2	REC-R	Record input right
○ 3	GND A	AF Ground
○ 4	TAPE-L	Playback output left
○ 5	+12V	D.C. supply (+12V) for AF electronics
○ 6	TAPE-R	Playback output right
○ 7	-CMOS	Negative d.c. supply (-9V) for CMOS ICs

CONNECTOR 1703INTERCONNECTION TO AF BOARD

○ 1	GND M	Motor Ground
○ 2	+MOTOR	D.C. supply (+12V) for tape deck motor & solenoid

CONNECTOR 1706INTERCONNECTION TO FRONT BOARD

○ 1	AD2	Deck sensing switches output voltage / Deck A EOT
○ 2	AD1	Deck sensing switches output voltage / Deck B EOT
○ 3	+5V	DC supply +5V for ADC network
○ 4	GND P	Control & Oscillator Ground
○ 5	CLK	HEF4094BT shift register Clock line
○ 6	DATA	HEF4094BT shift register Data line
○ 7	STROBE	HEF4094BT shift register Strobe line

CONNECTOR 1710DECK B HEADS CONNECTON (For Non-Dolby version only)

○ 1	B R/P HD L+	R/P Head left channel positive
○ 2	GND A	R/P Head return ground
○ 3	B R/P HD R+	R/P Head right channel positive
○ 4	ERASE HEAD	Erase Head
○ 5	GND A	Erase Head ground

CONNECTOR 1720DECK B HEADS CONNECTON (For Dolby B NR version only)

○ 1	B R/P HD L+	R/P Head left channel positive
○ 2	B R/P HD L-	R/P Head left channel negative
○ 3	B R/P HD R+	R/P Head right channel positive
○ 4	B R/P HD R-	R/P Head right channel negative
○ 5	ERASE HEAD	Erase Head
○ 6	GND A	Erase Head ground

CONNECTOR 1730DECK A HEAD CONNECTIONS (For Double Deck versions only)

○ 1	A PB HD L+	Pb Head left channel positive
○ 2	GND A	Pb Head return ground shield
○ 3	A PB HD R+	Pb Head right channel positive


CONNECTOR 1740DECK A & B CONTROL INTERFACE (For Dolby B NR version only)

○ 1	REC REW	Record tab protection status switch (reverse)	[open=on: close=off]
○ 2	CrO2 B	Chrome tape detection switch deck B	[open=Cr: close=Fe]
○ 3	REC FWD	Record tab protection status switch (forward)	[open=on: close=off]
○ 4	PHOTO B	Photo sensor output (tape movement indication)	
○ 5	SOL B	Solenoid supply for deck B	
○ 6	Vcc	Deck / Motor supply	
○ 7	MODE B	Mode switch (head engagement)	[open=off: close=engaged]
○ 8	GND M	Deck / Motor ground	
○ 9	SOLA	Solenoid supply for deck A	
○ 10	PHOTO A	Photo sensor output (tape movement indication)	
○ 11	MODE A	Mode switch (head engagement)	[open=off: close=engaged]
○ 12	L	L pin for motor	
○ 13	CrO2 A	Chrome tape detection switch deck A	[open=Cr: close=Fe]
○ 14	H	H pin for motor	


CONNECTOR 1770DECK A & B CONTROL INTERFACE (For Non-Dolby version only)

○ 1	REC REW	Record tab protection status switch (reverse)	[open=on: close=off]
○ 2	CrO2 B	Chrome tape detection switch deck B	[open=Cr: close=Fe]
○ 3	REC FWD	Record tab protection status switch (forward)	[open=on: close=off]
○ 4	PHOTO B	Photo sensor output (tape movement indication)	
○ 5	SOL B	Solenoid supply for deck B	
○ 6	Vcc	Deck / Motor supply	
○ 7	MODE B	Mode switch (head engagement)	[open=off: close=engaged]
○ 8	GND M	Deck / Motor ground	
○ 9	SOLA	Solenoid supply for deck A	
○ 10	PHOTO A	Photo sensor output (tape movement indication)	
○ 11	MODE A	Mode switch (head engagement)	[open=off: close=engaged]
○ 12	L	L pin for motor	
○ 13	CrO2 A	Chrome tape detection switch deck A	[open=Cr: close=Fe]
○ 14	H	H pin for motor	


TAPE MECHANISM ELECTRONICS

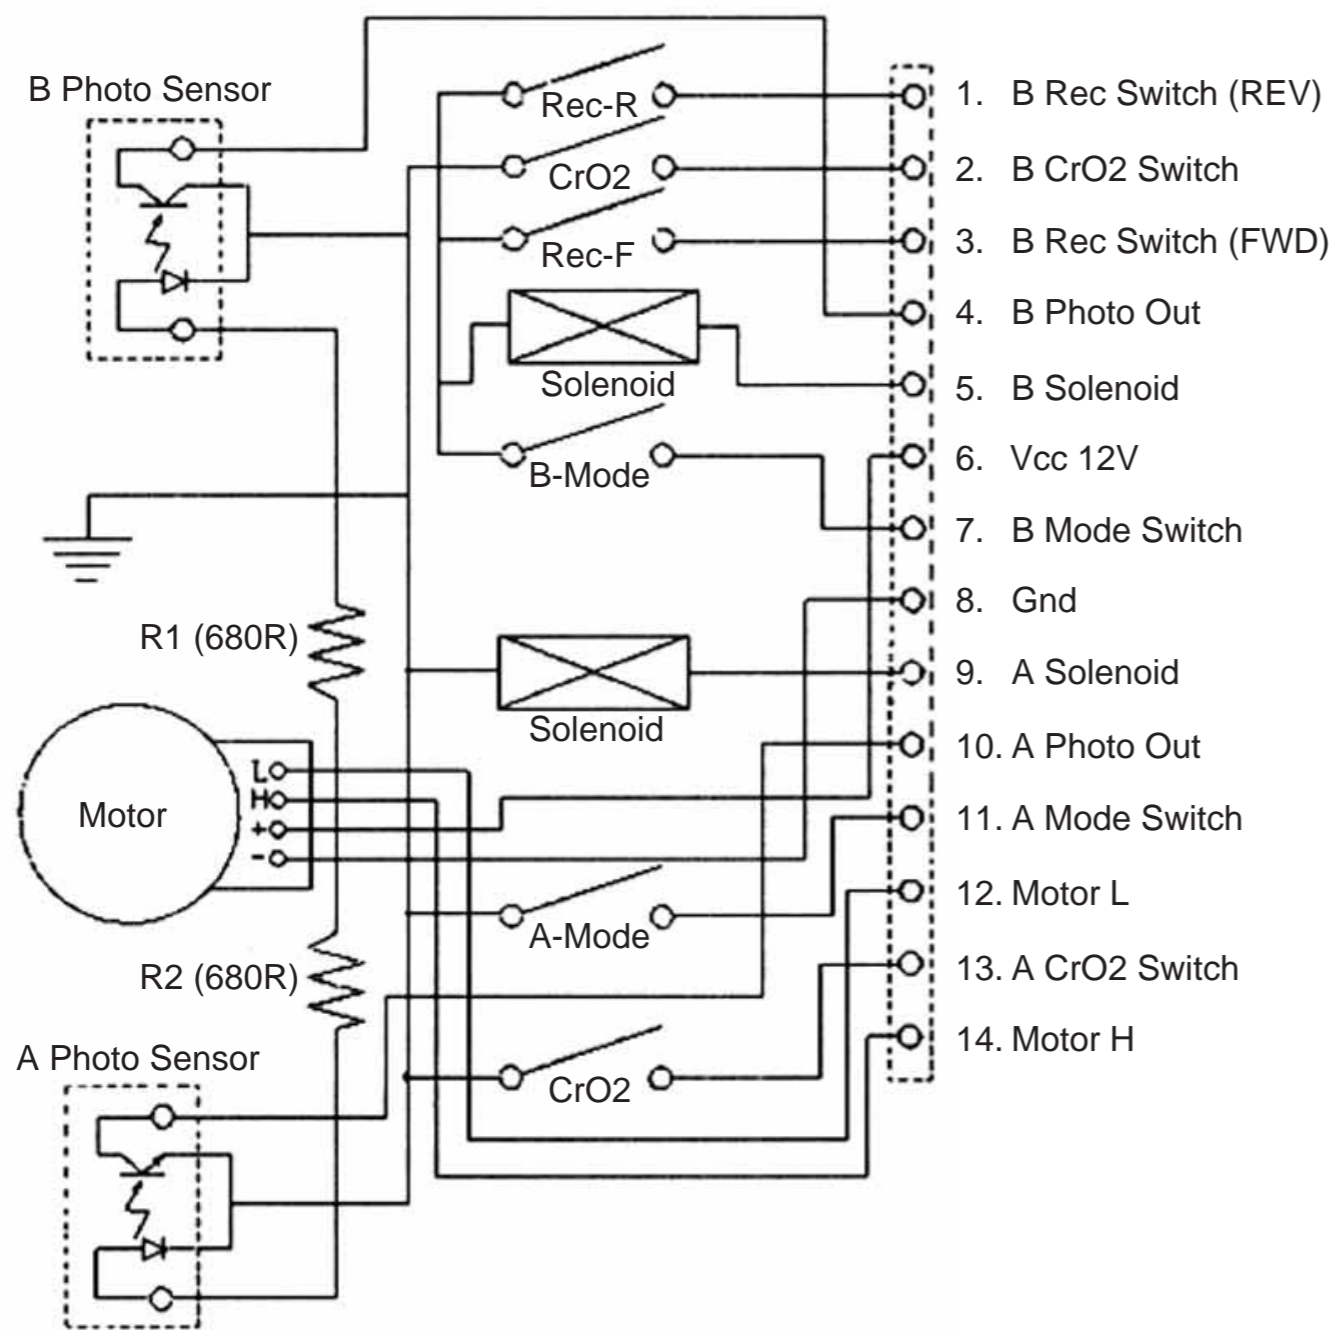


Mechanism A Head Wires Soldering

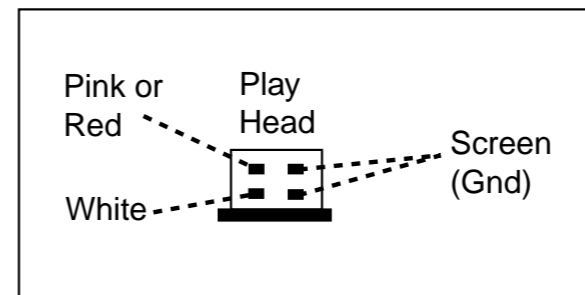

Mechanism B Head Wires Soldering (Non-Dolby version)

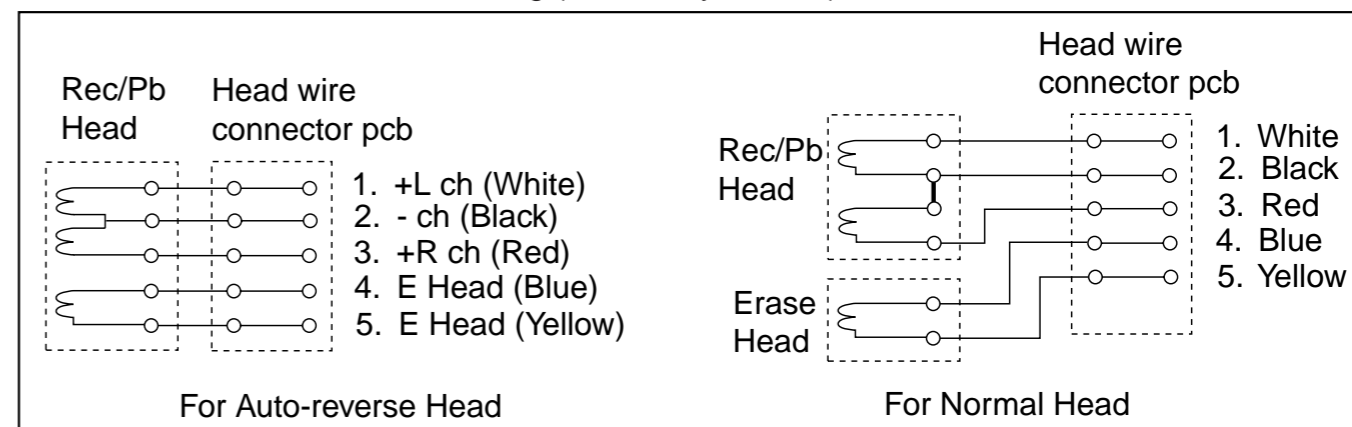

Mechanism B Head Wires Soldering (Dolby B NR version)

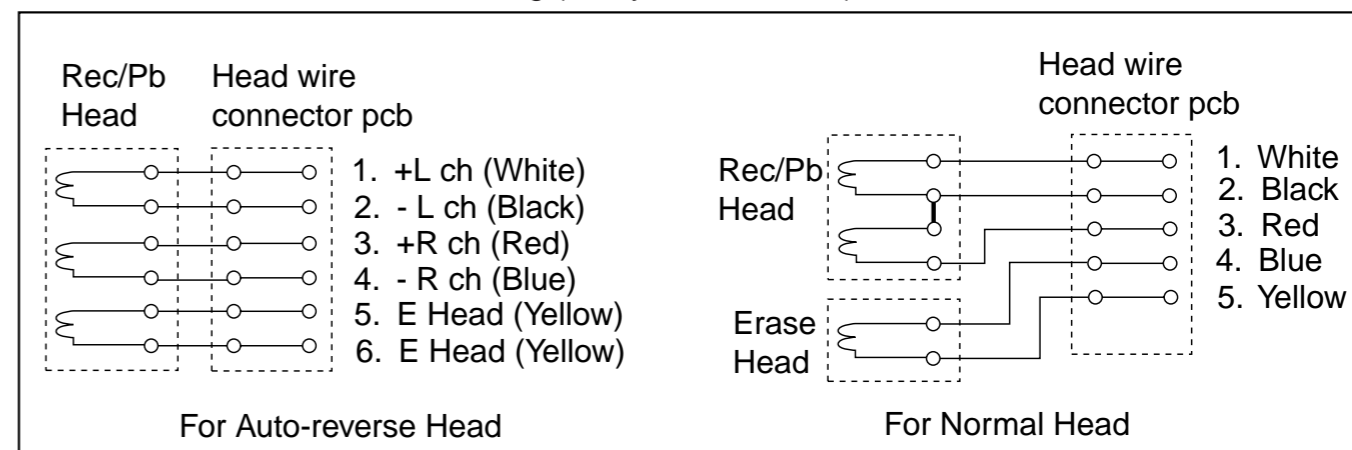

General

	TEST CASSETTE	RECORDER MODE	MEASURE ON	READ ON	ADJUST	
					with	to
ADJUST MOTOR SPEED						
HIGH SPEED	SBC420 (4822 397 30071)	DUBBING	1 or 2 LEFT RIGHT	frequency counter	3622 *	5040Hz ± 0.5%
NORMAL SPEED	3150Hz	PLAY B			3620	3150Hz ± 0.5%
		PLAY A			check	3150Hz -0.8/+1.8%
CHECK WOW & FLUTTER						
DECK A & B	SBC420 (4822 397 30071) 3150Hz	PLAY	1 or 2 LEFT RIGHT	W&F-meter	check only	≤0.4 % DIN or ≤0.35 % CCIR *
ADJUST AZIMUTH						
DECK A & B	SBC420 (4822 397 30071) 10kHz	PLAY FWD	1 or 2 LEFT RIGHT	mV-meter	left hand screw	max. output level & left=right
		PLAY REV #			right hand screw	

Playback

	TEST CASSETTE	RECORDER MODE	MEASURE ON	READ ON	ADJUST	
					with	to
ADJUST DOLBY PLAYBACK LEVEL *						
DECK A	TCC-130 (4822 397 30269) 200nWb/m	PLAY	7 or 8 LEFT RIGHT	mV-meter	3641(L), 3642(R)	548mV ±0.5dB
DECK B		PLAY FWD			3635(L), 3636(R)	
		PLAY REV #			Check	
CHECK PLAYBACK FREQUENCY RESPONSE						
PB. FREQ. RESP.	SBC420 (4822 397 30071)	PLAY	1 or 2 LEFT RIGHT	mV-meter	Check	limits see fig.1

* For Dolby version only

For Auto-reverse version only

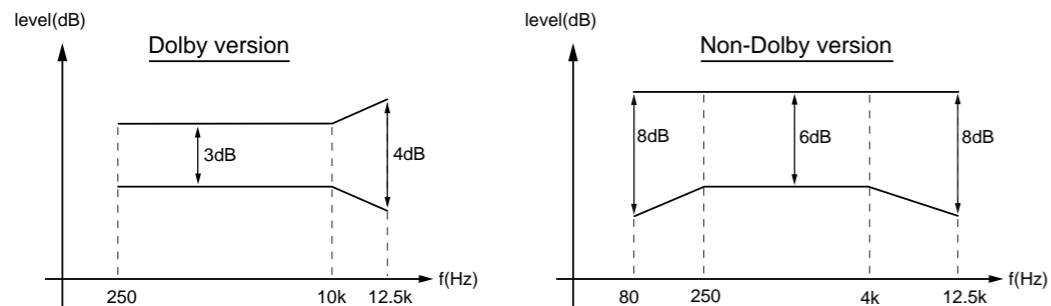


figure. 1

Recording

	TEST CASSETTE	RECORDER MODE	MEASURE ON	READ ON	ADJUST	
					with	to
PRE-ADJUST BIAS AND BIAS-SYMMETRY						
DECK B	CrO ₂	RECORD	5 or 6 LEFT RIGHT	mV-meter	3773	995mV
					3785 *	left = right
	FERRO		check only	750mV ± 1.5dB		
CHECK OVERALL FREQUENCY RESPONSE AND DISTORTION						
Inject 3mV signals 100Hz, 250Hz, 1kHz, 10kHz, 12.5kHz via 3 or 4	CrO ₂	RECORD				
	RECORDED CASSETTE	PLAY	1 or 2 LEFT RIGHT	mV-meter	check only	limits see fig.2
Inject 1kHz 8.85mV via 3 or 4	CrO ₂	RECORD				
	RECORDED CASSETTE	PLAY	1 or 2 LEFT RIGHT	THD-meter	check only	≤3%
Remark: If high frequencies are not within limits, decrease bias and re-measure. If distortion is too high increase bias and re-measure.						
ADJUST DOLBY RECORD LEVEL *						
Inject 400Hz 8.85mV via 3 or 4	CrO ₂	RECORD	9 or 10 LEFT RIGHT	mV-meter	3655 & 3556	420mV
	RECORDED CASSETTE	PLAY	7 or 8 LEFT RIGHT	mV-meter	check	170mV ± 1dB
Remark: If measured value is out, re-adjust record level up or down slightly to attain play level.						

* For Dolby version only


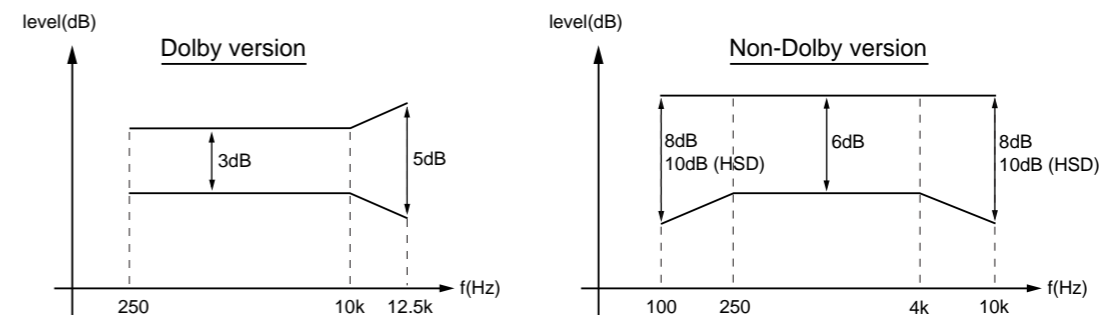



figure. 2

COMPONENT LAYOUT

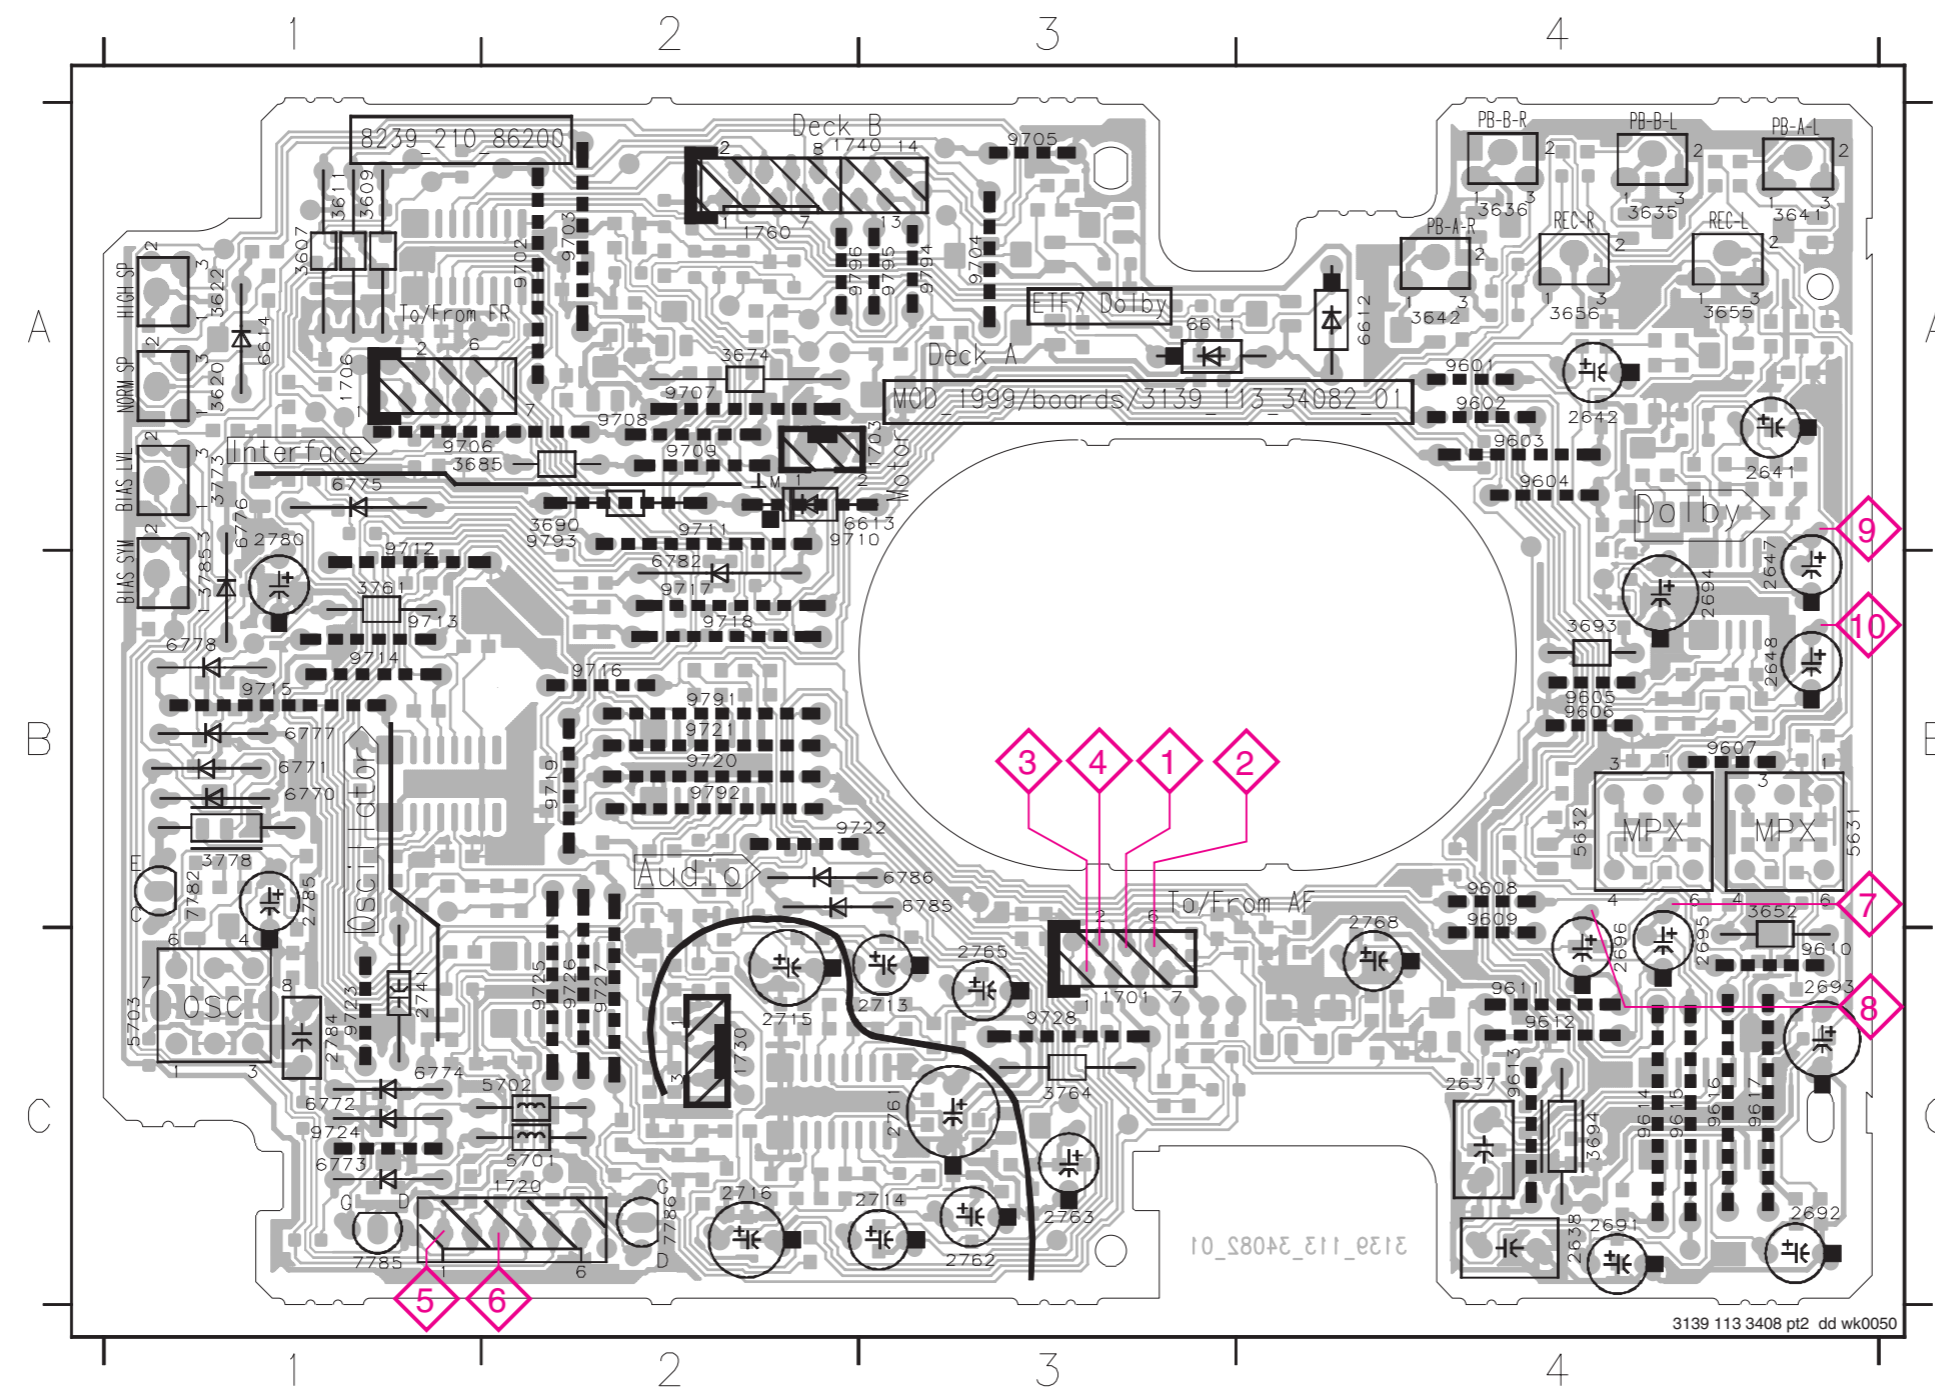


1701	C3	5631	B4	9715	B1
1703	A3	5632	B4	9716	B2
1706	A1	5701	C2	9717	B2
1720	C2	5702	C2	9718	B2
1730	C2	5703	C1	9719	B2
1740	A2	6611	A3	9720	B2
1760	A2	6612	A4	9721	B2
2637	C4	6613	A3	9722	B3
2638	C4	6614	A1	9723	C1
2641	A4	6770	B1	9724	C1
2642	A4	6771	B1	9725	C2
2647	B4	6772	C1	9726	C2
2648	B4	6773	C1	9727	C2
2691	C4	6774	C1	9728	C3
2692	C4	6775	A1	9791	B2
2693	C4	6776	A1	9792	B2
2694	B4	6777	B1	9793	A2
2695	C4	6778	B1	9794	A3
2696	C4	6782	B2	9795	A3
2713	C3	6785	B3	9796	A2
2714	C3	6786	B3		
2715	C2	7782	B1		
2716	C2	7785	C1		
2741	C1	7786	C2		
2761	C3	9601	A4		
2762	C3	9602	A4		
2763	C3	9603	A4		
2765	C3	9604	A4		
2768	B4	9605	B4		
2780	A1	9606	B4		
2784	C1	9607	B4		
2785	B1	9608	B4		
3607	A1	9609	B4		
3609	A1	9610	C4		
3611	A1	9611	C4		
3620	A1	9612	C4		
3622	A1	9613	C4		
3635	A4	9614	C4		
3636	A4	9615	C4		
3641	A4	9616	C4		
3642	A4	9617	C4		
3652	B4	9702	A2		
3655	A4	9703	A2		
3656	A4	9704	A3		
3674	A2	9705	A3		
3685	A1	9706	A1		
3690	A2	9707	A2		
3693	B4	9708	A2		
3694	C4	9709	A2		
3761	B1	9710	A2		
3764	C3	9711	A2		
3773	A1	9712	A1		
3778	B1	9713	B1		
3785	B1	9714	B1		

CHIP LAYOUT

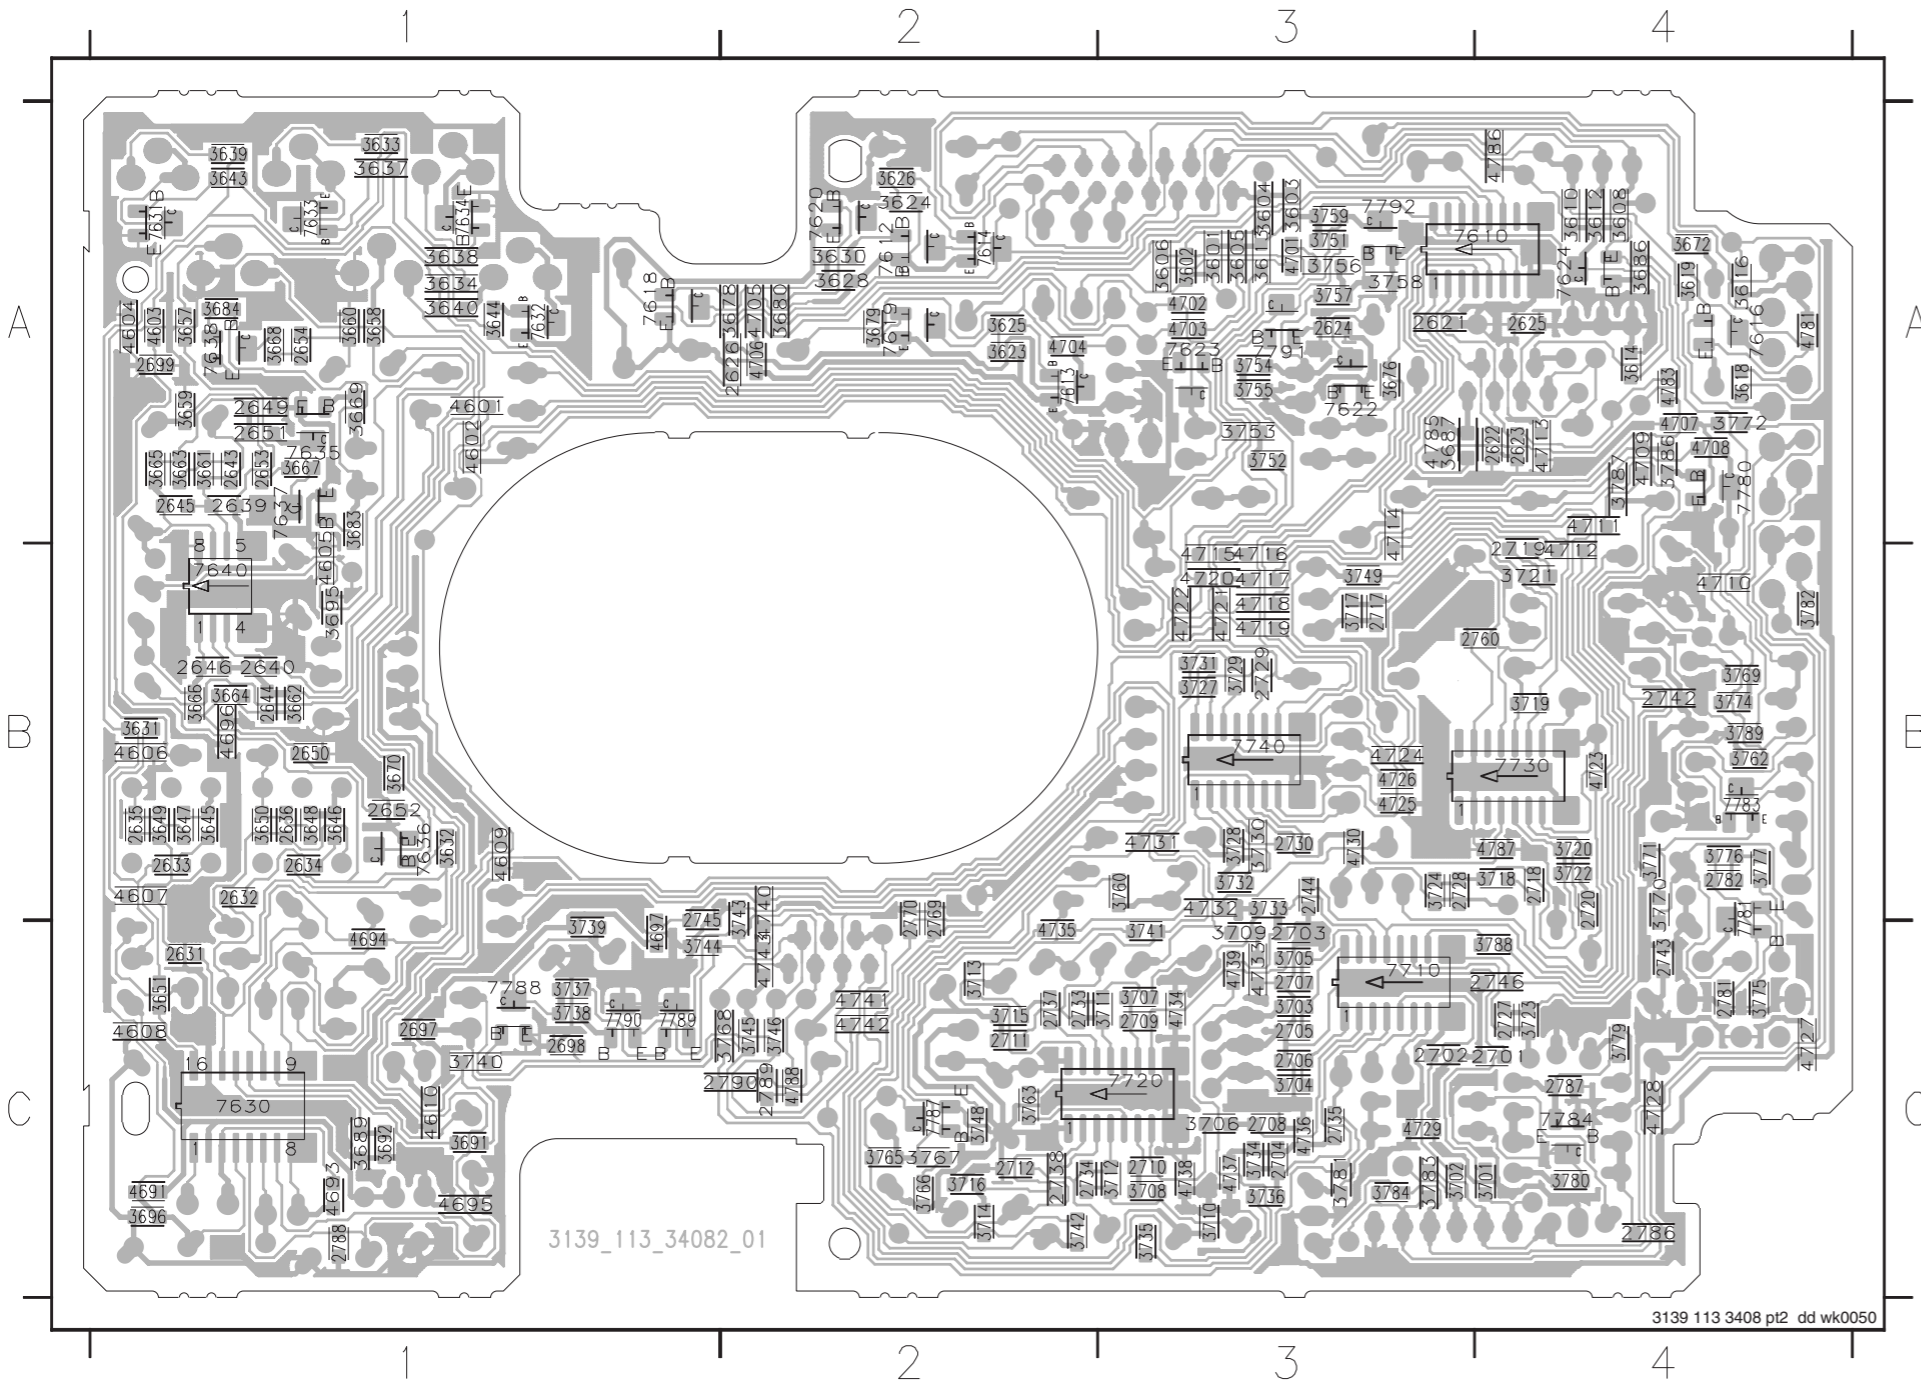


2621	A3	2744	B3	3661	A1	3733	B3	4605	B1	4743	C2
2622	A4	2745	B1	3662	B1	3734	C3	4606	B1	4781	A4
2623	A4	2746	C4	3663	A1	3735	C3	4607	B1	4783	A4
2624	A3	2760	B4	3664	B1	3736	C3	4608	C1	4785	A3
2625	A4	2769	B2	3665	A1	3737	C1	4609	B1	4786	A4
2626	A2	2770	B2	3666	B1	3738	C1	4610	C1	4787	B4
2631	C1	2781	C4	3667	A1	3739	C1	4691	C1	4788	C2
2632	B1	2782	B4	3668	A1	3740	C1	4693	C1	7610	A4
2633	B1	2786	C4	3669	A1	3741	C3	4694	C1	7612	A2
2634	B1	2787	C4	3670	B1	3742	C2	4695	C1	7613	A2
2635	B1	2788	C1	3672	A4	3743	B2	4696	B1	7614	A2
2636	B1	2789	C2	3676	A3	3744	C1	4697	C1	7616	A4
2639	A1	2790	C2	3678	A2	3745	C2	4701	A3	7618	A1
2640	B1	3601	A3	3679	A2	3746	C2	4702	A3	7619	A2
2643	A1	3602	A3	3680	A2	3748	C2	4703	A3	7620	A2
2644	B1	3603	A3	3683	A1	3749	B3	4704	A2	7622	A3
2645	A1	3604	A3	3684	A1	3751	A3	4705	A2	7623	A3
2646	B1	3605	A3	3686	A4	3752	A3	4706	A2	7624	A4
2649	A1	3606	A3	3687	A3	3753	A3	4707	A4	7630	C1
2650	B1	3608	A4	3689	C1	3754	A3	4708	A4	7631	A1
2651	A1	3610	A4	3691	C1	3755	A3	4709	A4	7632	A1
2652	B1	3612	A4	3692	C1	3756	A3	4710	B4	7633	A1
2653	A1	3613	A3	3695	B1	3757	A3	4711	A4	7634	A1
2654	A1	3614	A4	3696	C1	3758	A3	4712	B4	7635	A1
2697	C1	3616	A4	3701	C4	3759	A3	4713	A4	7636	B1
2698	C1	3618	A4	3702	C3	3760	B3	4714	A3	7637	A1
2699	A1	3619	A4	3703	C3	3762	B4	4715	B3	7638	A1
2701	C4	3623	A2	3704	C3	3763	C2	4716	B3	7640	B1
2702	C3	3624	A2	3705	C3	3765	C2	4717	B3	7710	C3
2703	C3	3625	A2	3706	C3	3766	C2	4718	B3	7720	C3
2704	C3	3626	A2	3707	C3	3767	C2	4719	B3	7730	B4
2705	C3	3628	A2	3708	C3	3768	C2	4720	B3	7740	B3
2706	C3	3630	A2	3709	C3	3769	B4	4721	B3	7780	A4
2707	C3	3631	B1	3710	C3	3770	B4	4722	B3	7781	B4
2708	C3	3632	B1	3711	C3	3771	B4	4723	B4	7783	B4
2709	C3	3633	A1	3712	C3	3772	A4	4724	B3	7784	C4
2710	C3	3634	A1	3713	C2	3774	B4	4725	B3	7787	C2
2711	C2	3637	A1	3714	C2	3775	C4	4726	B3	7788	C1
2712	C2	3638	A1	3715	C2	3776	B4	4727	C4	7789	C1
2717	B3	3639	A1	3716	C2	3777	B4	4728	C4	7790	C1
2718	B4	3640	A1	3717	B3	3779	C4	4729	C3	7791	A3
2719	B4	3643	A1	3718	B4	3780	C4	4730	B3	7792	A3
2720	B4	3644	A1	3719	B4	3781	C3	4731	B3		
2727	C4	3645	B1	3720	B4	3782	B4	4732	B3		
2728	B3	3646	B1	3721	B4	3783	C3	4733	C3		
2729	B3	3647	B1	3722	B4	3784	C3	4734	C3		
2730	B3	3648	B1	3723	C4	3786	A4	4735	C2		
2733	C2	3649	B1	3724	B3	3787	A4	4736	C3		
2734	C2	3650	B1	3727	B3	3788	C4	4737	C3		
2735	C3	3651	C1	3728	B3	3789	B4	4738	C3		
2737	C2	3657	A1	3729	B3	4601	A1	4739	C3		
2738	C2	3658	A1	3730	B3	4602	A1	4740	B2		
2742	B4	3659	A1	3731	B3	4603	A1	4741	C2		
2743	C4	3660	A1	3732	B3	4604	A1	4742	C2		

ANALOG CIRCUIT

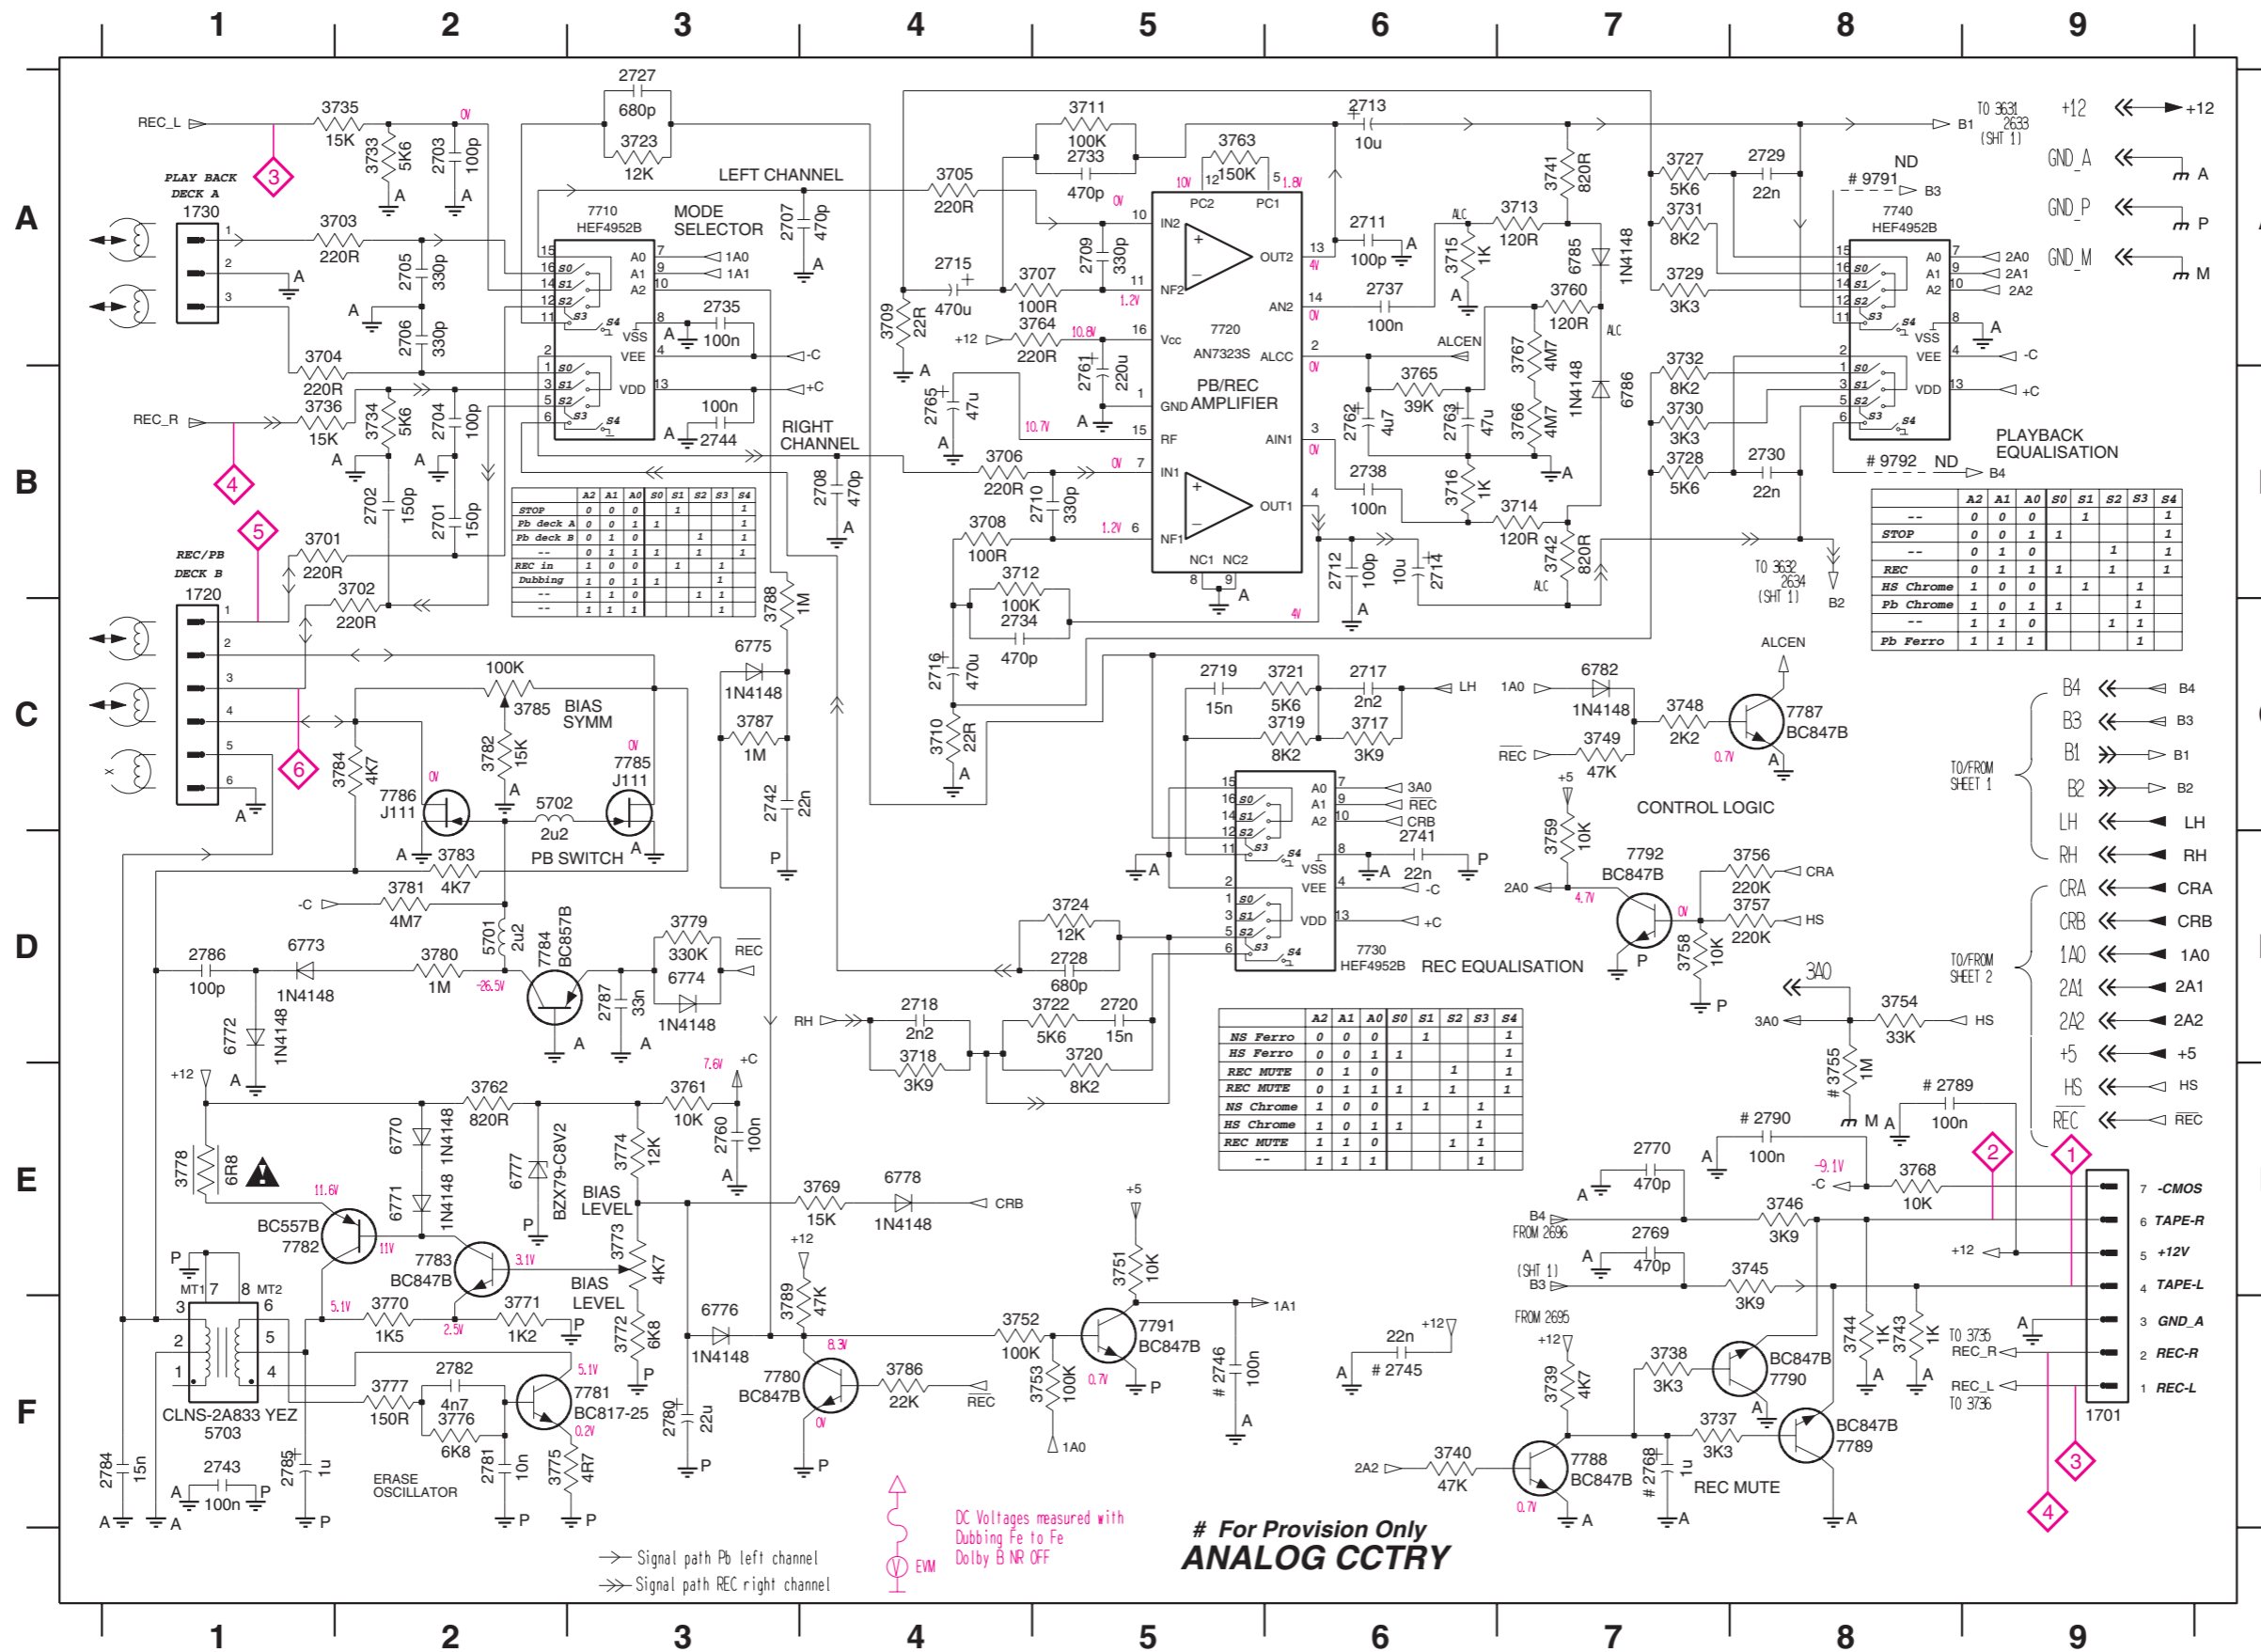

- 1701 F9
- 1720 C1
- 1730 A1
- 2701 B2
- 2702 B2
- 2703 A2
- 2704 B2
- 2705 A2
- 2706 A2
- 2707 A3
- 2708 B4
- 2709 A5
- 2710 B5
- 2711 A6
- 2712 B6
- 2713 A6
- 2714 B6
- 2715 A4
- 2716 C4
- 2717 C6
- 2718 D4
- 2719 C5
- 2720 D5
- 2727 A3
- 2728 D5
- 2729 A8
- 2730 B8
- 2733 A5
- 2734 C4
- 2735 A3
- 2737 A6
- 2738 B6
- 2741 D6
- 2742 C3
- 2743 F1
- 2744 B3
- 2745 F6
- 2746 F5
- 2760 E3
- 2761 B5
- 2762 B6
- 2763 B6
- 2765 B4
- 2768 F7
- 2769 E7
- 2770 E7
- 2780 F3
- 2781 F2
- 2782 F2
- 2784 F1
- 2785 F1
- 2786 D1
- 2787 D3
- 2789 E8
- 2790 E8
- 3701 B1
- 3702 B2
- 3703 A2
- 3704 A1
- 3705 A4
- 3706 B4
- 3707 A5
- 3708 B4
- 3709 A4
- 3710 A4
- 3711 A5
- 3712 B4
- 3713 A7
- 3714 B7
- 3715 A6
- 3716 B6
- 3717 B7
- 3718 D4
- 3719 C6
- 3720 D5
- 3721 C6
- 3722 D5
- 3723 A3
- 3724 D5
- 3727 A7
- 3728 B7
- 3729 A7
- 3730 B7
- 3731 A7
- 3732 A7
- 3733 A2
- 3734 B2
- 3735 A2
- 3736 B1
- 3737 F7
- 3738 F7
- 3739 F7
- 3740 F6
- 3741 A7
- 3742 B7
- 3743 F8
- 3744 F8
- 3745 E8
- 3746 E8
- 3747 F8
- 3748 A
- 3749 A
- 3750 A
- 3751 A
- 3752 A
- 3753 A
- 3754 A
- 3755 A
- 3756 A
- 3757 A
- 3758 A
- 3759 A
- 3760 A
- 3761 A
- 3762 A
- 3763 A
- 3764 A
- 3765 A
- 3766 A
- 3767 A
- 3768 A
- 3769 A
- 3770 A
- 3771 A
- 3772 A
- 3773 A
- 3774 A
- 3775 A
- 3776 A
- 3777 A
- 3778 A
- 3779 A
- 3780 A
- 3781 A
- 3782 A
- 3783 A
- 3784 A
- 3785 A
- 3786 A
- 3787 A
- 3788 A
- 3789 A
- 3790 A
- 3791 A
- 3792 A
- 3793 A
- 3794 A
- 3795 A
- 3796 A
- 3797 A
- 3798 A
- 3799 A
- 3800 A
- 3801 A
- 3802 A
- 3803 A
- 3804 A
- 3805 A
- 3806 A
- 3807 A
- 3808 A
- 3809 A
- 3810 A
- 3811 A
- 3812 A
- 3813 A
- 3814 A
- 3815 A
- 3816 A
- 3817 A
- 3818 A
- 3819 A
- 3820 A
- 3821 A
- 3822 A
- 3823 A
- 3824 A
- 3825 A
- 3826 A
- 3827 A
- 3828 A
- 3829 A
- 3830 A
- 3831 A
- 3832 A
- 3833 A
- 3834 A
- 3835 A
- 3836 A
- 3837 A
- 3838 A
- 3839 A
- 3840 A
- 3841 A
- 3842 A
- 3843 A
- 3844 A
- 3845 A
- 3846 A
- 3847 A
- 3848 A
- 3849 A
- 3850 A
- 3851 A
- 3852 A
- 3853 A
- 3854 A
- 3855 A
- 3856 A
- 3857 A
- 3858 A
- 3859 A
- 3860 A
- 3861 A
- 3862 A
- 3863 A
- 3864 A
- 3865 A
- 3866 A
- 3867 A
- 3868 A
- 3869 A
- 3870 A
- 3871 A
- 3872 A
- 3873 A
- 3874 A
- 3875 A
- 3876 A
- 3877 A
- 3878 A
- 3879 A
- 3880 A
- 3881 A
- 3882 A
- 3883 A
- 3884 A
- 3885 A
- 3886 A
- 3887 A
- 3888 A
- 3889 A
- 3890 A
- 3891 A
- 3892 A
- 3893 A
- 3894 A
- 3895 A
- 3896 A
- 3897 A
- 3898 A
- 3899 A
- 3900 A
- 3901 A
- 3902 A
- 3903 A
- 3904 A
- 3905 A
- 3906 A
- 3907 A
- 3908 A
- 3909 A
- 3910 A
- 3911 A
- 3912 A
- 3913 A
- 3914 A
- 3915 A
- 3916 A
- 3917 A
- 3918 A
- 3919 A
- 3920 A
- 3921 A
- 3922 A
- 3923 A
- 3924 A
- 3925 A
- 3926 A
- 3927 A
- 3928 A
- 3929 A
- 3930 A
- 3931 A
- 3932 A
- 3933 A
- 3934 A
- 3935 A
- 3936 A
- 3937 A
- 3938 A
- 3939 A
- 3940 A
- 3941 A
- 3942 A
- 3943 A
- 3944 A
- 3945 A
- 3946 A
- 3947 A
- 3948 A
- 3949 A
- 3950 A
- 3951 A
- 3952 A
- 3953 A
- 3954 A
- 3955 A
- 3956 A
- 3957 A
- 3958 A
- 3959 A
- 3960 A
- 3961 A
- 3962 A
- 3963 A
- 3964 A
- 3965 A
- 3966 A
- 3967 A
- 3968 A
- 3969 A
- 3970 A
- 3971 A
- 3972 A
- 3973 A
- 3974 A
- 3975 A
- 3976 A
- 3977 A
- 3978 A
- 3979 A
- 3980 A
- 3981 A
- 3982 A
- 3983 A
- 3984 A
- 3985 A
- 3986 A
- 3987 A
- 3988 A
- 3989 A
- 3990 A
- 3991 A
- 3992 A
- 3993 A
- 3994 A
- 3995 A
- 3996 A
- 3997 A
- 3998 A
- 3999 A
- 4000 A

SERVO CONTROL CIRCUIT

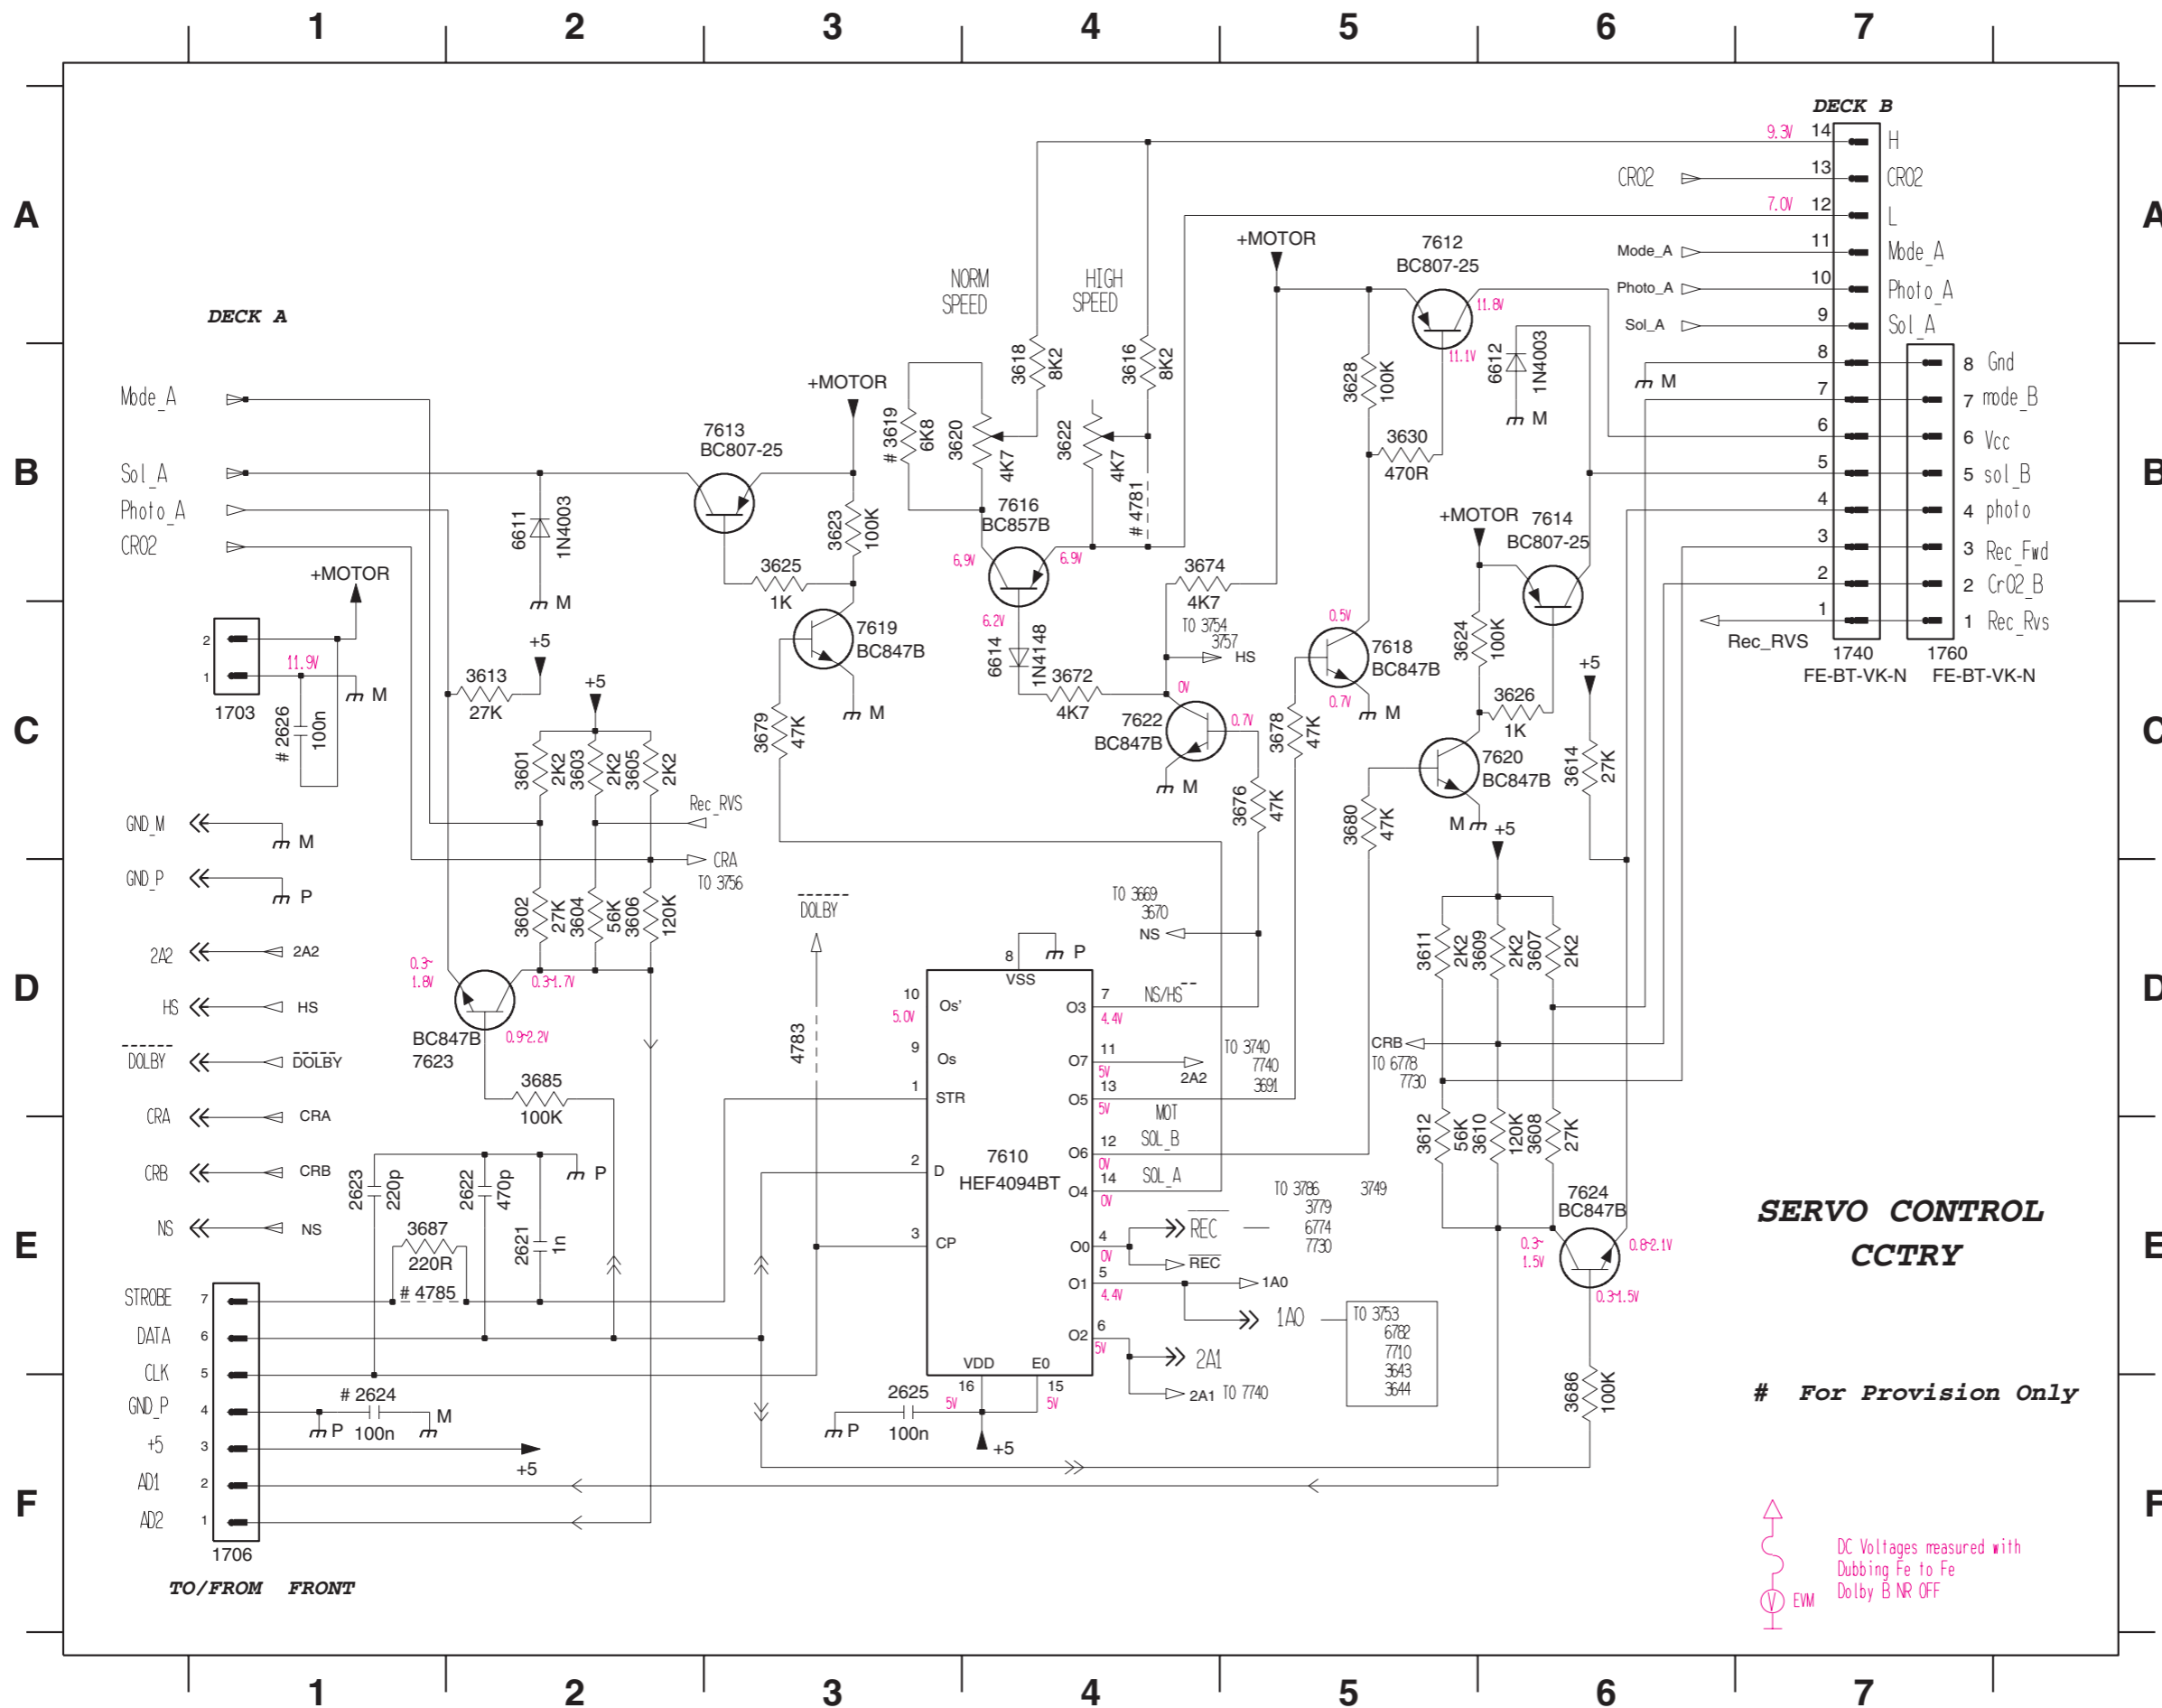


- 1703 C1
- 1706 F1
- 1740 C7
- 1760 C7
- 2621 E2
- 2622 E2
- 2623 E1
- 2624 F1
- 2625 F3
- 2626 C1
- 3601 C2
- 3602 D2
- 3603 C2
- 3604 D2
- 3605 C2
- 3606 D2
- 3607 D6
- 3608 E6
- 3609 D6
- 3610 E6
- 3611 D5
- 3612 E5
- 3613 C2
- 3614 C6
- 3616 B4
- 3618 B4
- 3619 B3
- 3620 B3
- 3622 B4
- 3623 B3
- 3624 C5
- 3625 B3
- 3626 C6
- 3628 B5
- 3630 B5
- 3672 C4
- 3674 B4
- 3676 C5
- 3678 C5
- 3679 C3
- 3680 C5
- 3685 D2
- 3686 F6
- 3687 E1
- 4781 B4
- 4783 D3
- 4785 E1
- 6611 B2
- 6612 B6
- 6614 C4
- 7610 E4
- 7612 A5
- 7613 B2
- 7614 B6
- 7616 B4
- 7618 C5
- 7619 C3
- 7620 C6
- 7622 C4
- 7623 D1
- 7624 E6

SERVO CONTROL CCTRY

For Provision Only

DC Voltages measured with Dubbing Fe to Fe Dolby B NR OFF

DOLBY CIRCUIT

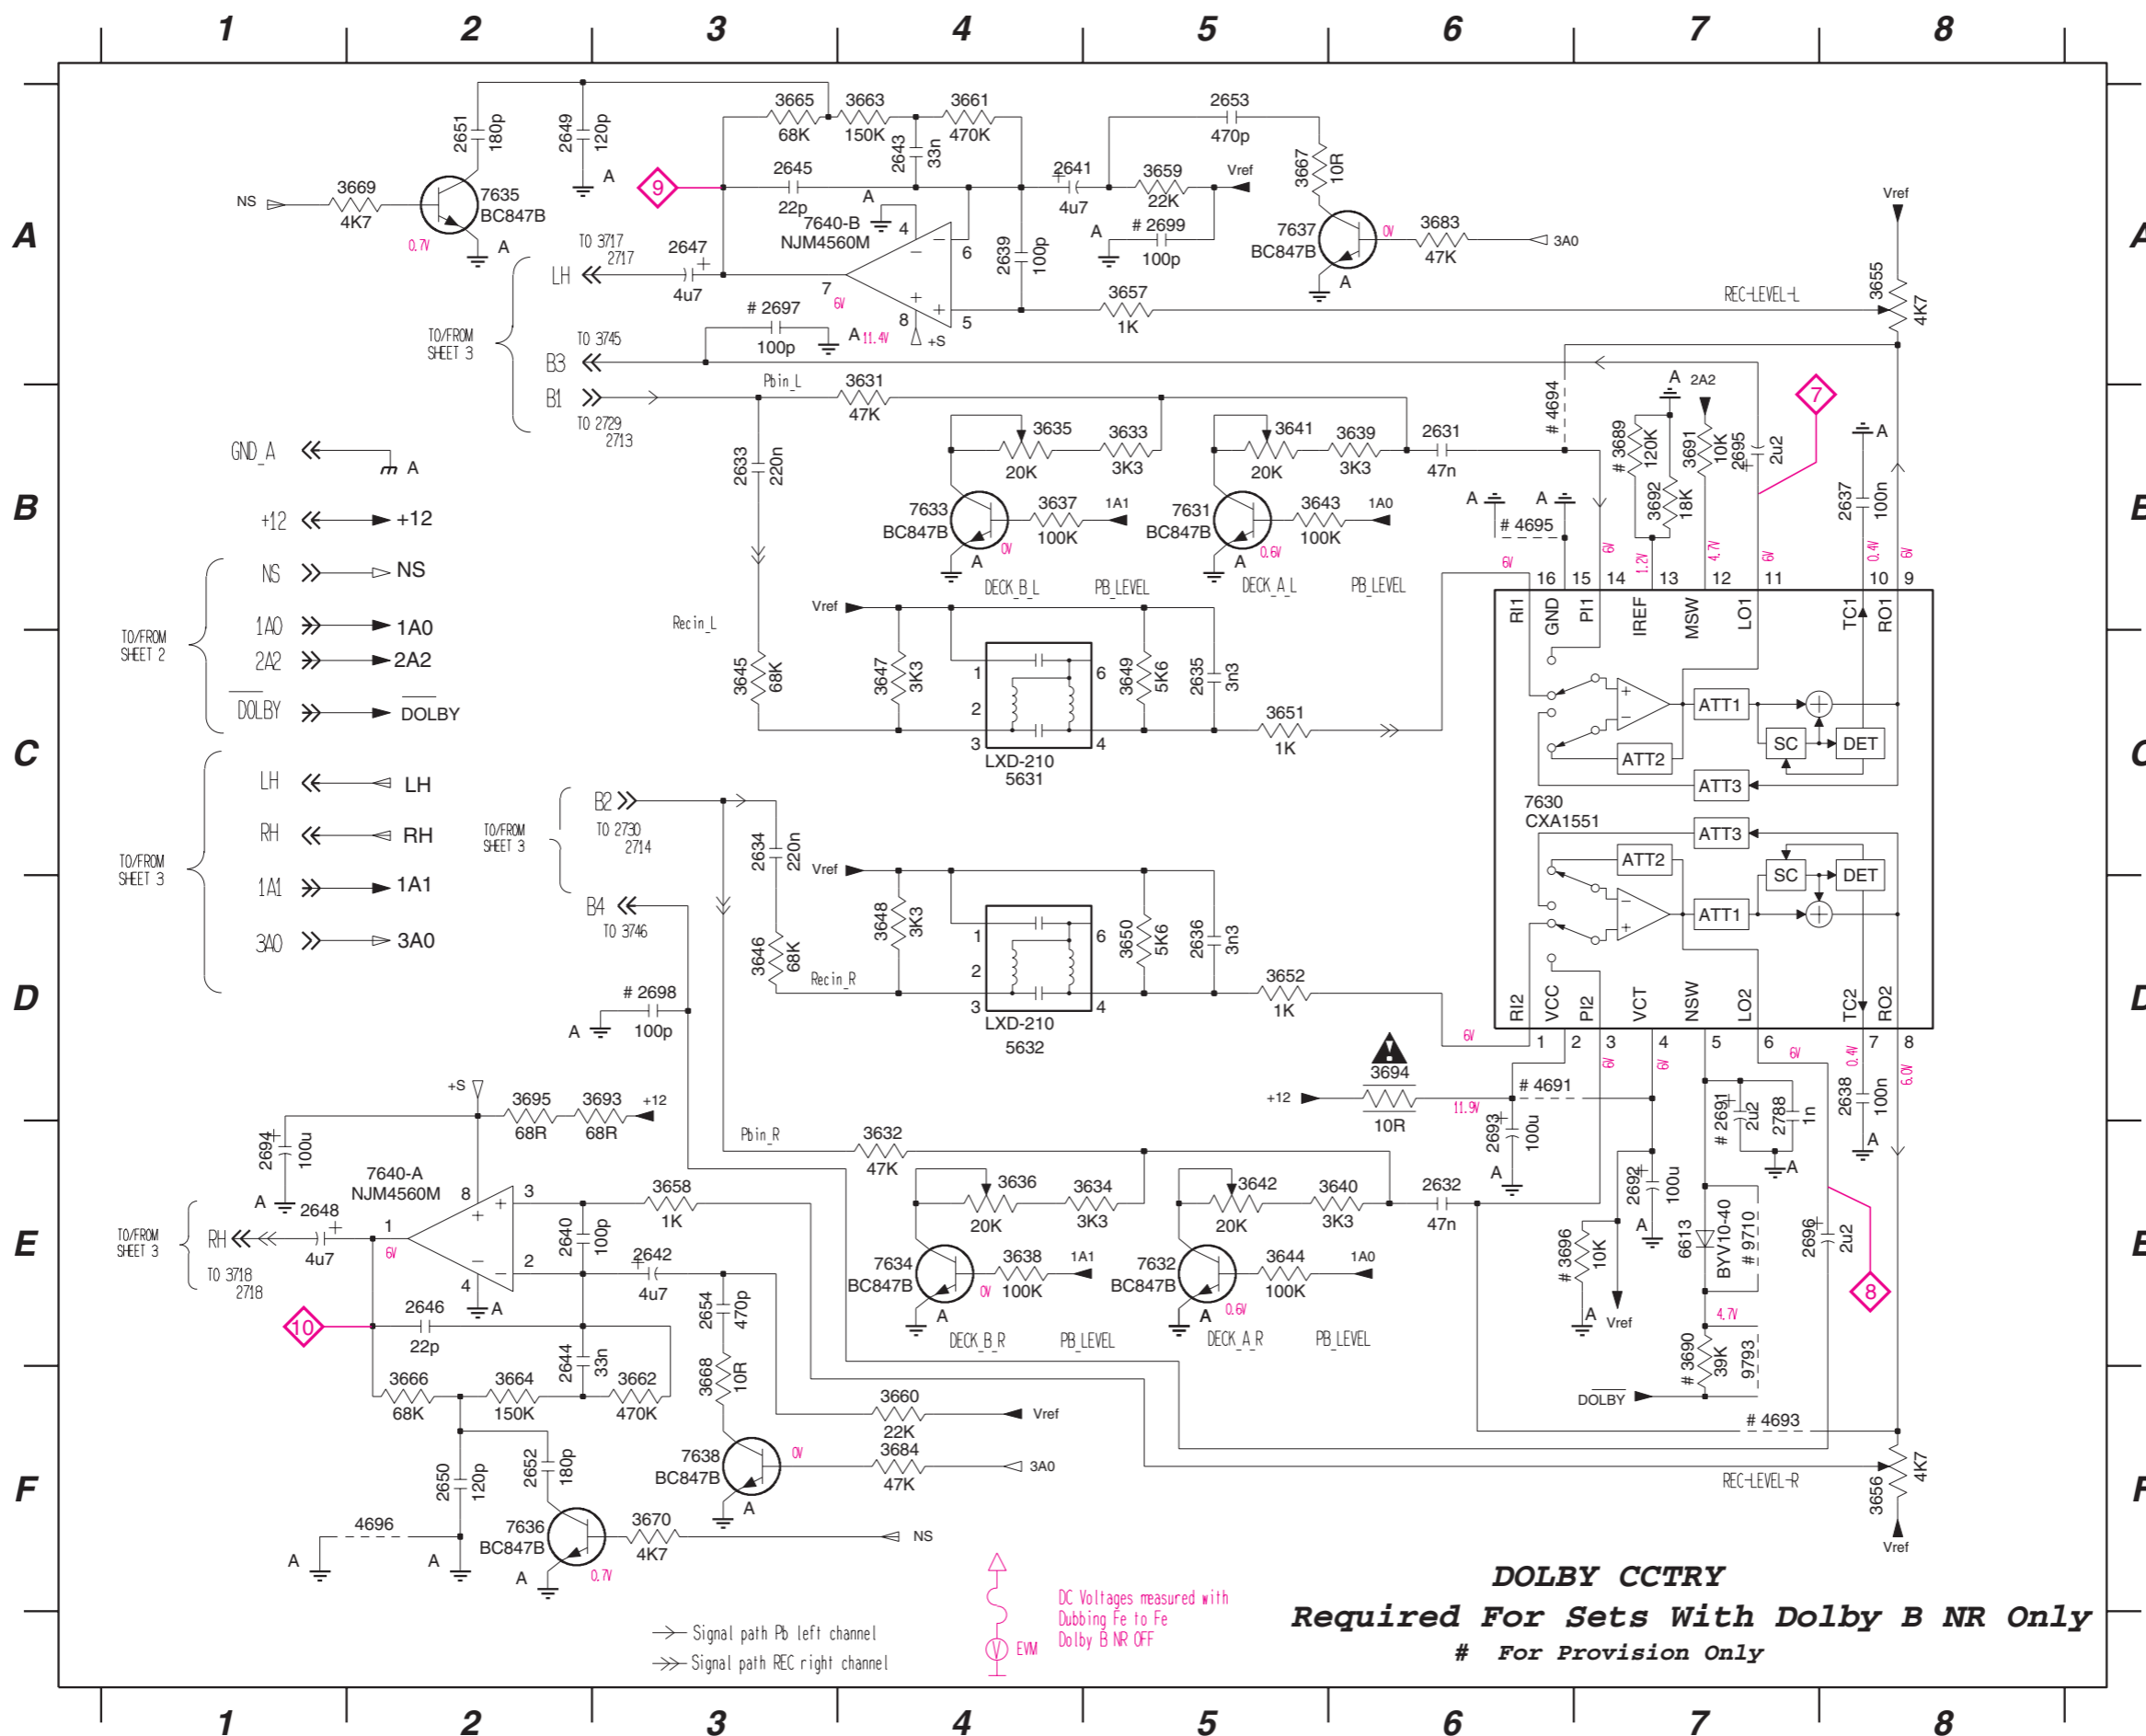

2631 B6	3684 F4
2632 E6	3689 B7
2633 B3	3690 E7
2634 C3	3691 B7
2635 C5	3692 B7
2636 D5	3693 D3
2637 B8	3694 D6
2638 D8	3695 D2
2639 A4	3696 E6
2640 E2	4691 D6
2641 A4	4693 F7
2642 E3	4694 B6
2643 A4	4695 B6
2644 E2	4696 F2
2645 A3	5631 C4
2646 E2	5632 D4
2647 A3	6613 E7
2648 E1	7630 C6
2649 A2	7631 B5
2650 F2	7632 E5
2651 A2	7633 B4
2652 F2	7634 E4
2653 A5	7635 A2
2654 E3	7636 F2
2691 D7	7637 A5
2692 E7	7638 F3
2693 E6	7640-A E2
2694 E1	7640-B A4
2695 B7	9710 E7
2696 E7	9793 E7
2697 A3	
2698 D3	
2699 A5	
2788 D7	
3631 B4	
3632 E4	
3633 B5	
3634 E5	
3635 B4	
3636 E4	
3637 B4	
3638 E4	
3639 B6	
3640 E6	
3641 B5	
3642 E5	
3643 B5	
3644 E5	
3645 C3	
3646 D3	
3647 C4	
3648 D4	
3649 C5	
3650 D5	
3651 C5	
3652 D5	
3655 A8	
3656 F8	
3657 A5	
3658 E3	
3659 A5	
3660 F4	
3661 A4	
3662 F3	
3663 A4	
3664 F2	
3665 A3	
3666 F2	
3667 A5	
3668 F3	
3669 A2	
3670 F3	
3683 A6	


DOLBY C CTRRY
Required For Sets With Dolby B NR Only
 # For Provision Only


TAPE MECHANISM A - PLAY

MECHANICAL PARTS - PLAY MECHANISM

1	996500002313	Play Head (Non-Autoreverse deck)
1	996500002321	Play Head (Autoreverse deck)
12	482240210972	Pinch Arm Assembly R
23	996500002314	Coil Assembly
32	482252811209	Flywheel Assembly RV
42	996500002315	Belt AF (Autoreverse deck)
42	996500002718	Belt AF (Non-autoreverse deck)
69	482249211761	Spring
102	482253212931	Washer
103	482253212932	Washer
104	482253212933	Washer

Note: Only the parts mentioned in the list are normal service spare parts.

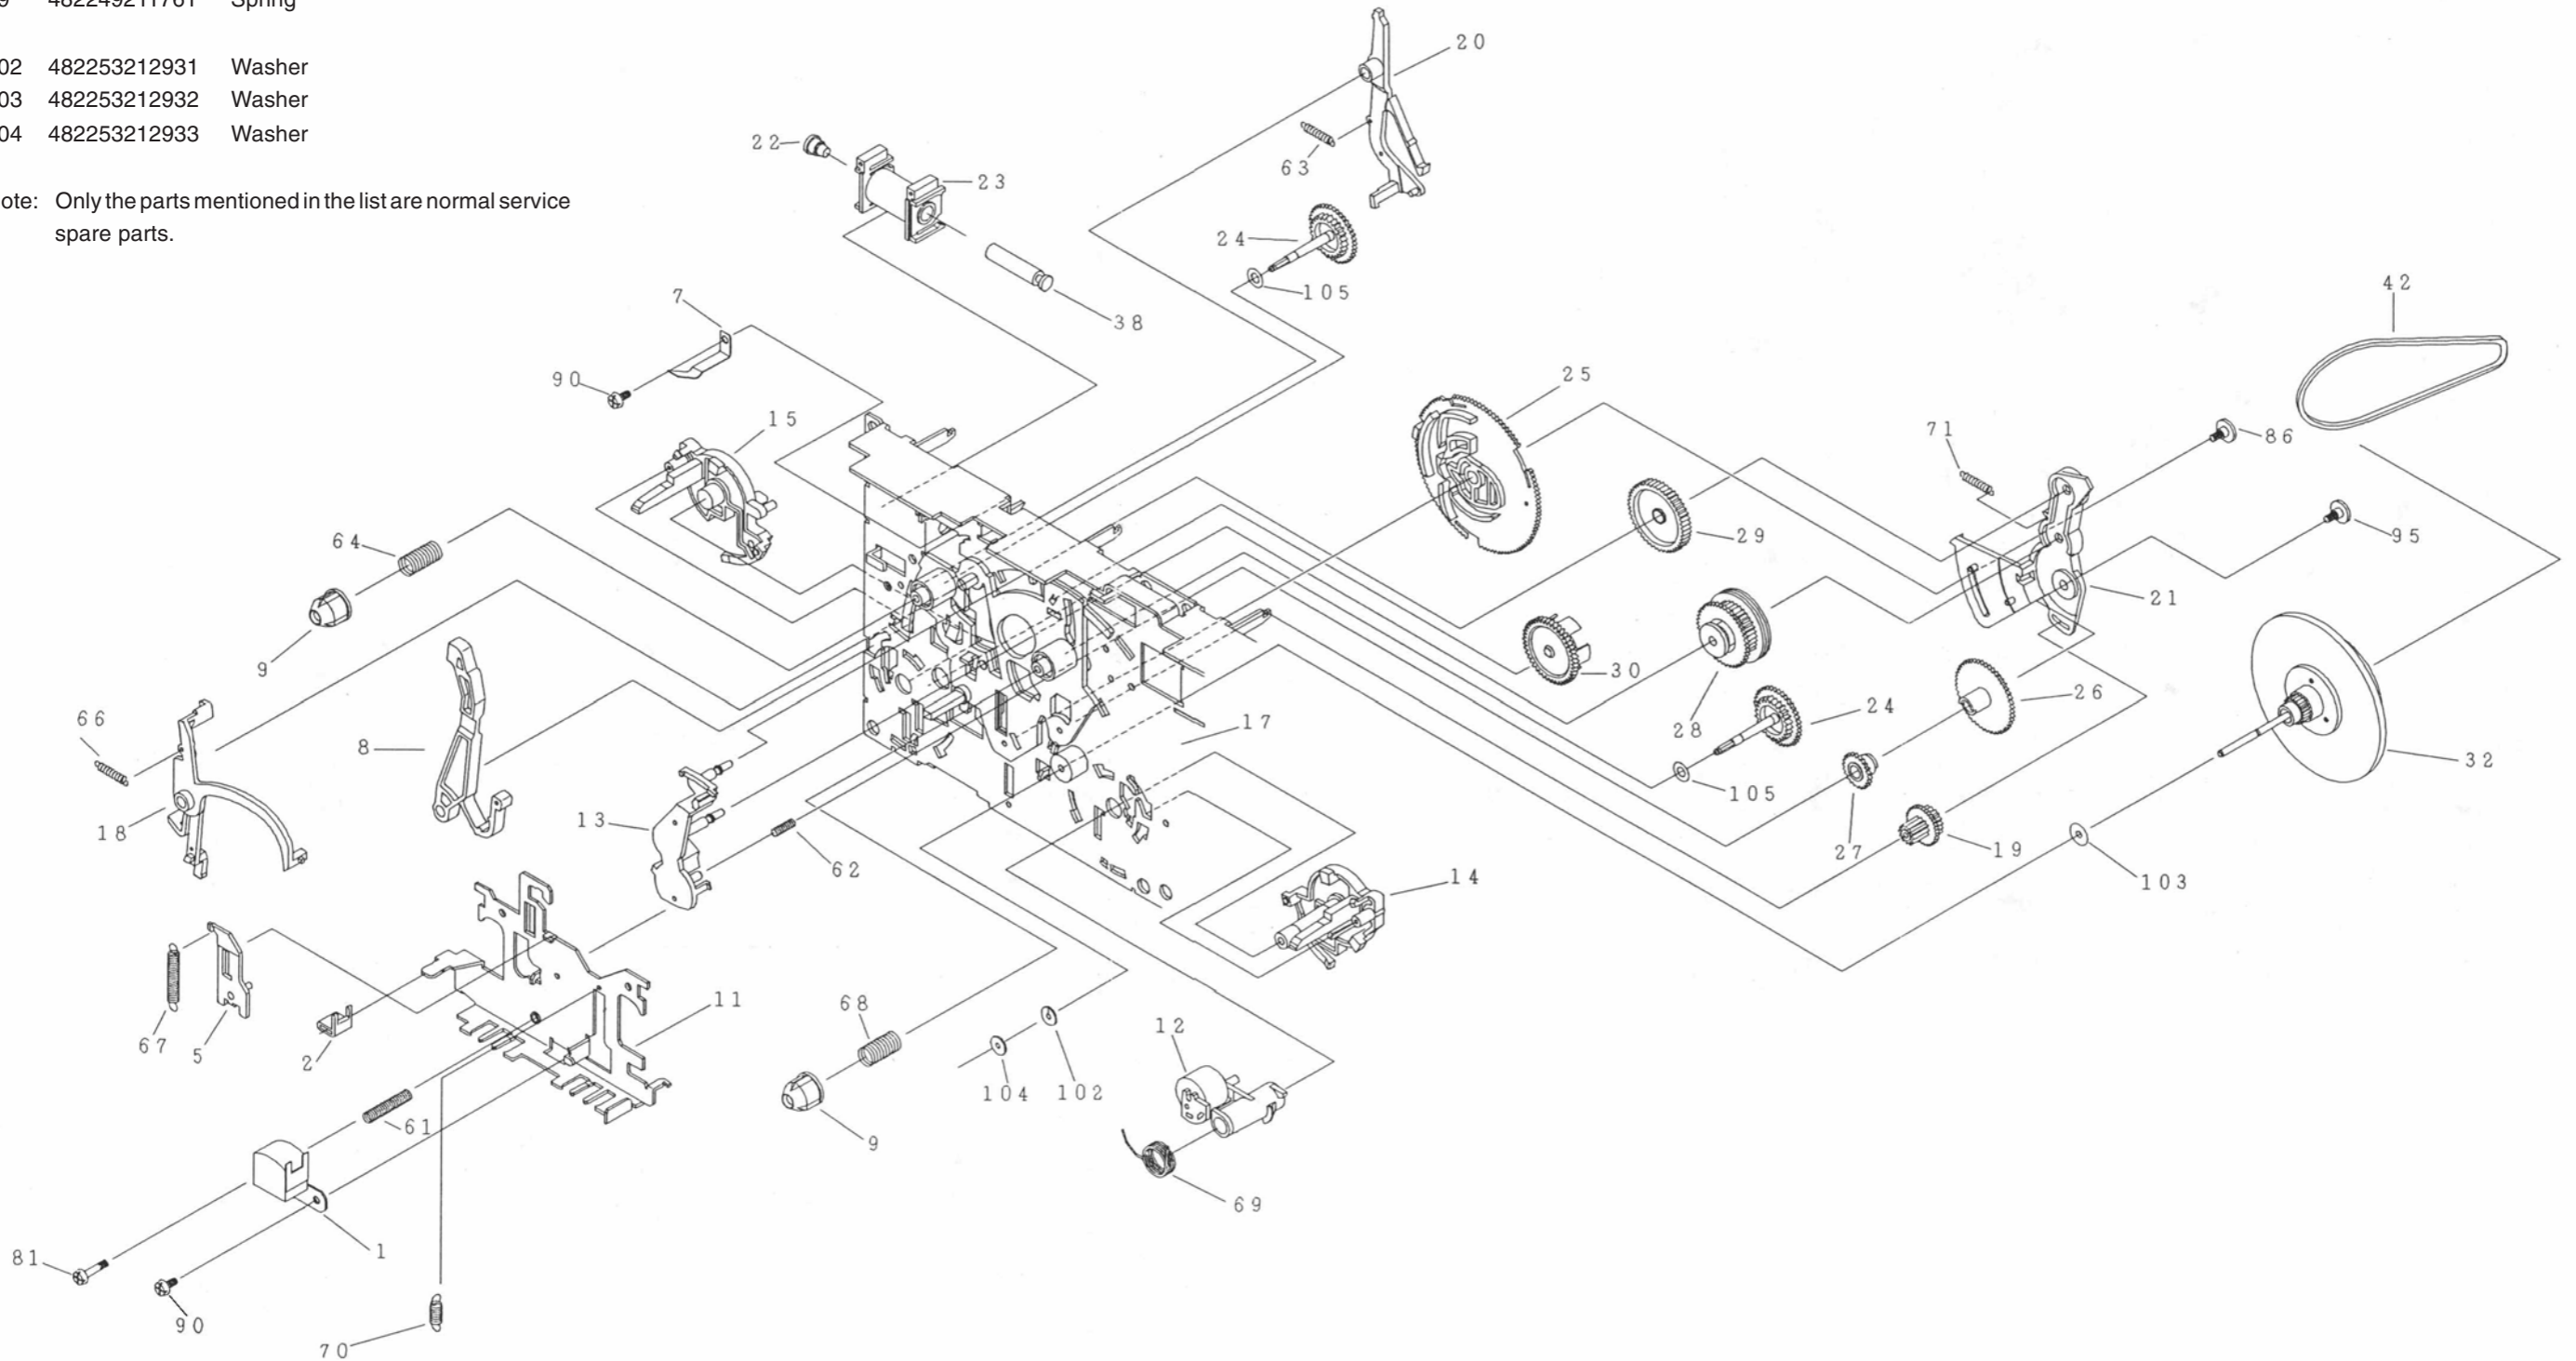


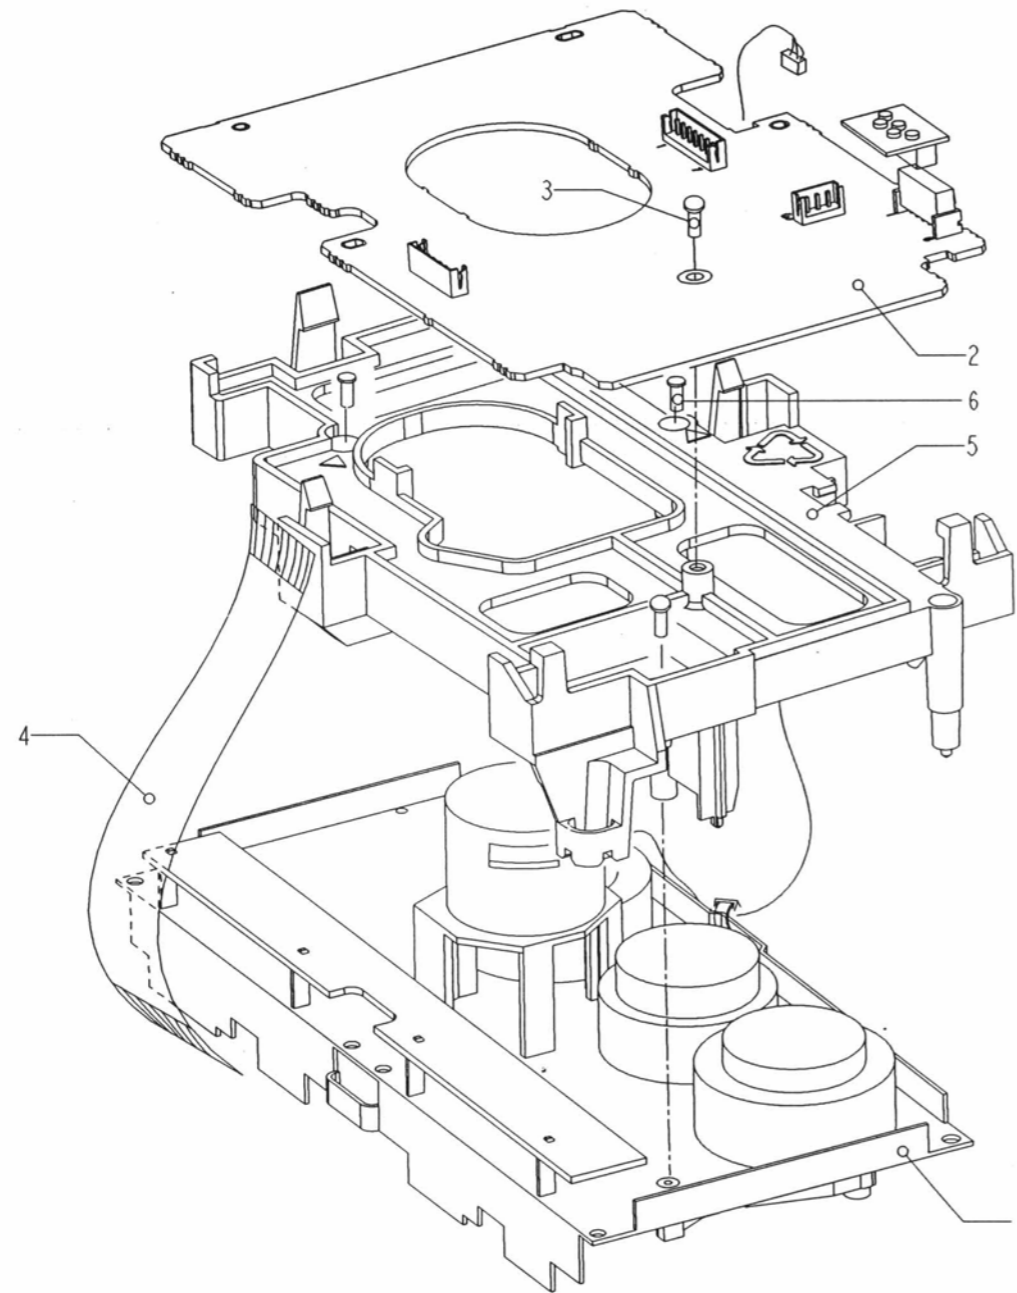

TAPE MODULE EXPLODED VIEW

1	313911877150	Autoreverse Mech. CWE44FR03
3	-	Screw D3 x 10
4	313911034080	Flex Cable 14 pin 7,5 cm
6	-	Screw M2 x 16

Note: Only the parts mentioned in this list are normal service spare parts.

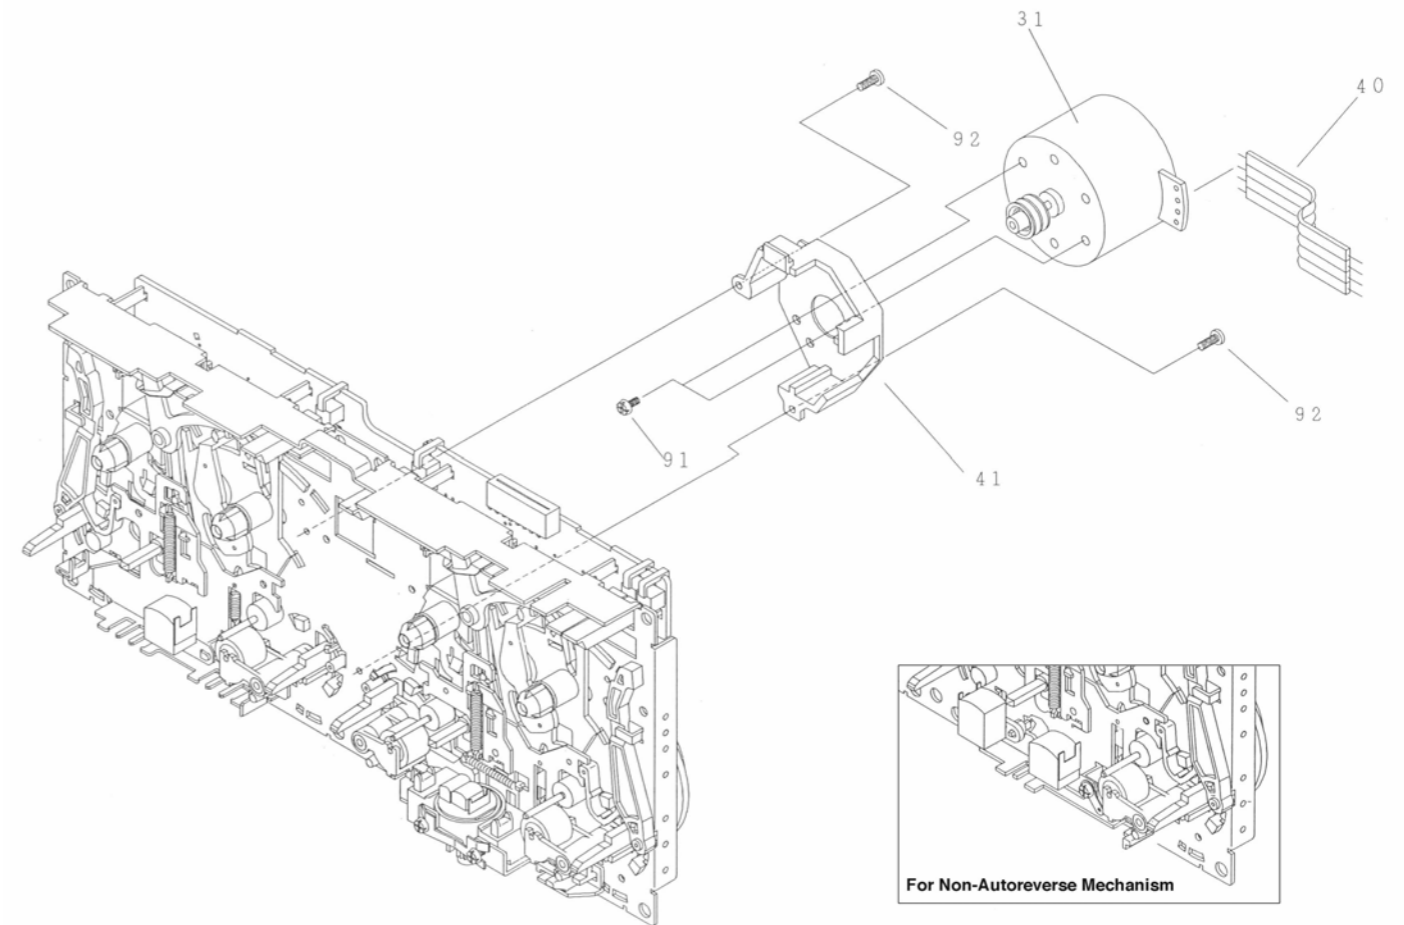

TAPE MECHANISM - MOTOR EXPLODED VIEW

31	996500003006	Motor Assembly
91	-	Screw M2,6 x 5
92	-	Screw M2 x 5


Note: Only the parts mentioned in this list are normal service spare parts.

TAPE MECHANISM B - RECORD/PLAYBACK (Autoreverse version)

MECHANICAL PARTS - REC/PB MECHANISM

12	482240210972	Pinch Arm Assembly R
23	996500002314	Coil Assembly
32	482252811209	Flywheel Assembly RV
39	996500003001	Belt BF
44-2	996500002317	Flex Socket 14 Pin
44-3	996500002320	Photo Interrupter
44-4	482205016801	680R 1% 0,4W
44-6	996500002318	Leaf Switch
44-7	996500002330	Mode Switch
45	996500003002	Rec/Pb Head Assembly
50	482252810975	Pinch Arm Assembly L
54	996500002324	Flywheel Assembly L
69	482249211761	Spring
73	482249211762	Spring
101	996500002325	Washer
102	482253212931	Washer
103	482253212932	Washer
104	482253212933	Washer
107	996500002326	Washer
109	996500002327	Washer

Note: Only the parts mentioned in the list are normal service spare parts.

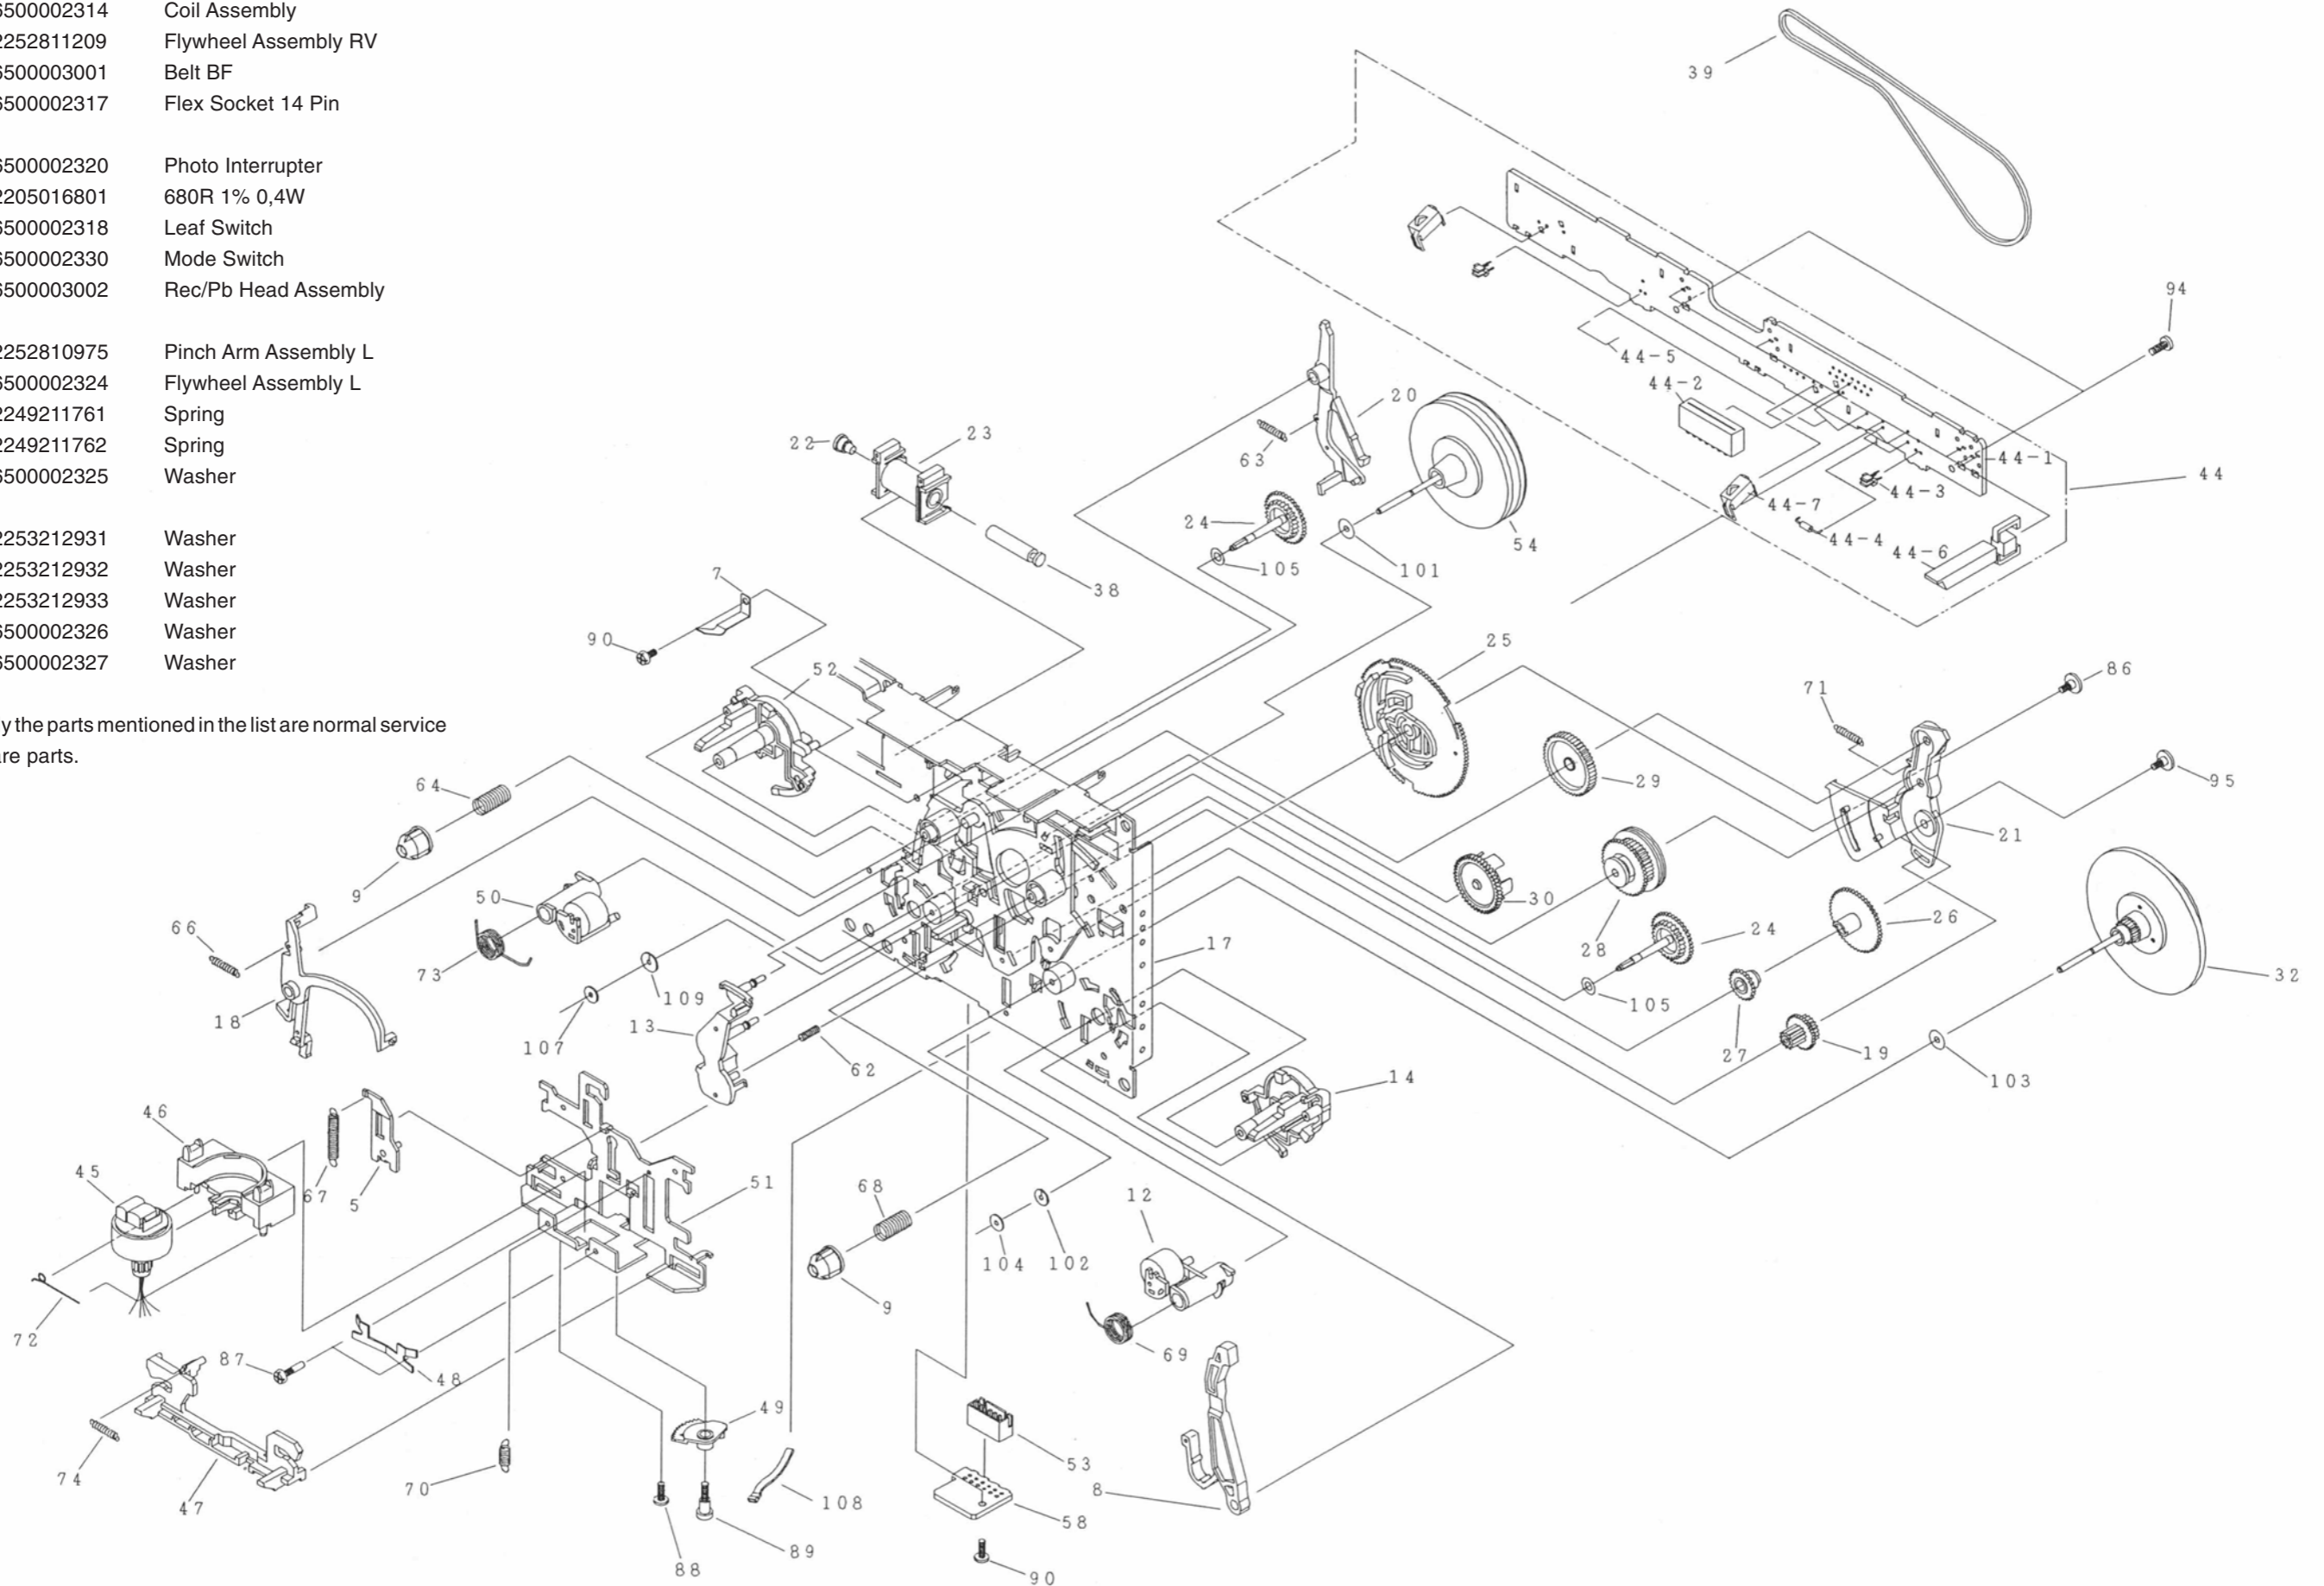

ELECTRICAL PARTS LIST - ETF7 DOLBY BOARD**MISCELLANEOUS**

1701	482226710953	Flex Connector 7P
1706	482226710953	Flex Connector 7P
1740	482226751255	Flex Connector 14P

CAPACITORS

2621	532212231647	1nF 10% 63V
2622	532212234099	470pF 10% 63V
2623	482212233575	220pF 5% 63V
2625	482212614585	100nF 10% 50V
2631	482212613751	47nF 10% 63V
2632	482212613751	47nF 10% 63V
2633	482212613473	220nF +80/-20% 50V
2634	482212613473	220nF +80/-20% 50V
2635	482212233891	3,3nF 10% 63V
2636	482212233891	3,3nF 10% 63V
2637	532212142386	100nF 5% 63V
2638	532212142386	100nF 5% 63V
2639	532212232531	100pF 5% 50V
2640	532212232531	100pF 5% 50V
2641	482212440769	4,7μF 20% 100V
2642	482212440769	4,7μF 20% 100V
2643	482212612105	33nF 5% 50V
2644	482212612105	33nF 5% 50V
2645	532212232658	22pF 5% 50V
2646	532212232658	22pF 5% 50V
2647	482212440769	4,7μF 20% 100V
2648	482212440769	4,7μF 20% 100V
2649	532212233861	120pF 10% 50V
2650	532212233861	120pF 10% 50V
2651	482212610326	180pF 5% 63V
2652	482212610326	180pF 5% 63V
2653	532212234099	470pF 10% 63V
2654	532212234099	470pF 10% 63V
2692	482212441584	100μF 20% 10V
2693	482212440207	100μF 20% 25V
2694	482212440207	100μF 20% 25V
2695	482212422652	2,2μF 20% 50V
2696	482212422652	2,2μF 20% 50V
2701	532212233538	150pF 2% 63V
2702	532212233538	150pF 2% 63V
2703	532212232531	100pF 5% 50V
2704	532212232531	100pF 5% 50V
2705	532212231863	330pF 5% 63V
2706	532212231863	330pF 5% 63V
2707	532212234099	470pF 10% 63V
2708	532212234099	470pF 10% 63V
2709	532212231863	330pF 5% 63V
2710	532212231863	330pF 5% 63V
2711	532212232531	100pF 5% 50V
2712	532212232531	100pF 5% 50V
2713	482212440248	10μF 20% 63V
2714	482212440248	10μF 20% 63V

2715	482212480195	470μF 20% 10V
2716	482212480195	470μF 20% 10V
2717	482212233127	2,2nF 10% 63V
2718	482212233127	2,2nF 10% 63V
2719	482212613188	15nF 5% 63V
2720	482212613188	15nF 5% 63V
2727	482212232535	680pF 10% 63V
2728	482212232535	680pF 10% 63V
2729	532212232654	22nF 10% 63V
2730	532212232654	22nF 10% 63V
2733	532212234099	470pF 10% 63V
2734	532212234099	470pF 10% 63V
2735	482212614585	100nF 10% 50V
2737	482212614585	100nF 10% 50V
2738	482212614585	100nF 10% 50V
2741	482212611585	22nF +80/-20% 25V
2742	532212232654	22nF 10% 63V
2743	482212614585	100nF 10% 50V
2744	482212614585	100nF 10% 50V
2760	482212614585	100nF 10% 50V
2761	482212480144	220μF 20% 25V
2762	482212440769	4,7μF 20% 100V
2763	482212440433	47μF 20% 25V
2765	482212440433	47μF 20% 25V
2769	532212234099	470pF 10% 63V
2770	532212234099	470pF 10% 63V
2780	482212481151	22μF 50V
2781	482212233177	10nF 20% 50V
2782	532212610223	4,7nF 10% 63V
2784	482212151305	15nF 10% 50V
2785	482212421913	1μF 20% 63V
2786	532212232531	100pF 5% 50V
2787	482212612105	33nF 5% 50V
2788	532212231647	1nF 10% 63V

RESISTORS

3601	482211711449	2k2 1% 0,1W
3602	482205120273	27k 5% 0,1W
3603	482211711449	2k2 1% 0,1W
3604	482211711148	56k 1% 0,1W
3605	482211711449	2k2 1% 0,1W
3606	482205120124	120k 5% 0,1W
3607	482211652256	2k2 5% 0,5W
3608	482205120273	27k 5% 0,1W
3609	482211652256	2k2 5% 0,5W
3610	482205120124	120k 5% 0,1W
3611	482211652256	2k2 5% 0,5W
3612	482211711148	56k 1% 0,1W
3613	482205120273	27k 5% 0,1W
3614	482205120273	27k 5% 0,1W
3616	482205120822	8k2 5% 0,1W
3618	482205120822	8k2 5% 0,1W

ELECTRICAL PARTS LIST - ETF7 DOLBY BOARD

3620	482210012227	4k7 30% 0,1W
3622	482210012227	4k7 30% 0,1W
3623	482211710837	100k 1% 0,1W
3624	482211710837	100k 1% 0,1W
3625	482205110102	1k 2% 0,25W
3626	482205110102	1k 2% 0,25W
3628	482211710837	100k 1% 0,1W
3630	482205120471	470R 5% 0,1W
3631	482211710834	47k 1% 0,1W
3632	482211710834	47k 1% 0,1W
3633	482205120332	3k3 5% 0,1W
3634	482205120332	3k3 5% 0,1W
3635	482210011771	20k 30% 0,1W
3636	482210011771	20k 30% 0,1W
3637	482211710837	100k 1% 0,1W
3638	482211710837	100k 1% 0,1W
3639	482205120332	3k3 5% 0,1W
3640	482205120332	3k3 5% 0,1W
3641	482210011771	20k 30% 0,1W
3642	482210011771	20k 30% 0,1W
3643	482211710837	100k 1% 0,1W
3644	482211710837	100k 1% 0,1W
3645	482205120683	68k 5% 0,1W
3646	482205120683	68k 5% 0,1W
3647	482205120332	3k3 5% 0,1W
3648	482205120332	3k3 5% 0,1W
3649	482205120562	5k6 5% 0,1W
3650	482205120562	5k6 5% 0,1W
3651	482205110102	1k 2% 0,25W
3652	482205011002	1k 1% 0,4W
3655	482210012227	4k7 30% 0,1W
3656	482210012227	4k7 30% 0,1W
3657	482205110102	1k 2% 0,25W
3658	482205110102	1k 2% 0,25W
3659	482205120223	22k 5% 0,1W
3660	482205120223	22k 5% 0,1W
3661	482205120474	470k 5% 0,1W
3662	482205120474	470k 5% 0,1W
3663	482205120154	150k 5% 0,1W
3664	482205120154	150k 5% 0,1W
3665	482205120683	68k 5% 0,1W
3666	482205120683	68k 5% 0,1W
3667	482205120109	10R 5% 0,1W
3668	482205120109	10R 5% 0,1W
3669	482205120472	4k7 5% 0,1W
3670	482205120472	4k7 5% 0,1W
3672	482205120472	4k7 5% 0,1W
3674	482211652283	4k7 5% 0,5W
3676	482211710834	47k 1% 0,1W
3678	482211710834	47k 1% 0,1W
3679	482211710834	47k 1% 0,1W
3680	482211710834	47k 1% 0,1W

3683	482211710834	47k 1% 0,1W
3684	482211710834	47k 1% 0,1W
3685	482211652234	100k 5% 0,5W
3686	482211710837	100k 1% 0,1W
3687	482211711503	220R 1% 0,1W
3691	482211710833	10k 1% 0,1W
3692	482211710965	18k 1% 0,1W
3693	482211652199	68R 5% 0,5W
3694	482205210109	△ 10R 5% 0,33W
3695	482211712521	68R 1% 0,1W
3701	482211711503	220R 1% 0,1W
3702	482211711503	220R 1% 0,1W
3703	482211711503	220R 1% 0,1W
3704	482211711503	220R 1% 0,1W
3705	482211711503	220R 1% 0,1W
3706	482211711503	220R 1% 0,1W
3707	482205120101	100R 5% 0,1W
3708	482205120101	100R 5% 0,1W
3709	482205120229	22R 5% 0,1W
3710	482205120229	22R 5% 0,1W
3711	482211710837	100k 1% 0,1W
3712	482211710837	100k 1% 0,1W
3713	482205120121	120R 5% 0,1W
3714	482205120121	120R 5% 0,1W
3715	482205110102	1k 2% 0,25W
3716	482205110102	1k 2% 0,25W
3717	482205120392	3k9 5% 0,1W
3718	482205120392	3k9 5% 0,1W
3719	482205120822	8k2 5% 0,1W
3720	482205120822	8k2 5% 0,1W
3721	482205120562	5k6 5% 0,1W
3722	482205120562	5k6 5% 0,1W
3723	482211711383	12k 1% 0,1W
3724	482211711383	12k 1% 0,1W
3727	482205120562	5k6 5% 0,1W
3728	482205120562	5k6 5% 0,1W
3729	482205120332	3k3 5% 0,1W
3730	482205120332	3k3 5% 0,1W
3731	482205120822	8k2 5% 0,1W
3732	482205120822	8k2 5% 0,1W
3733	482205120562	5k6 5% 0,1W
3734	482205120562	5k6 5% 0,1W
3735	482211683933	15k 1% 0,1W
3736	482211683933	15k 1% 0,1W
3737	482205120332	3k3 5% 0,1W
3738	482205120332	3k3 5% 0,1W
3739	482205120472	4k7 5% 0,1W
3740	482211710834	47k 1% 0,1W
3741	482211711454	820R 1% 0,1W
3742	482211711454	820R 1% 0,1W
3743	482205110102	1k 2% 0,25W
3744	482205110102	1k 2% 0,25W

ELECTRICAL PARTS LIST - ETF7 DOLBY BOARD**ELECTRICAL PARTS LIST - ETF7 DOLBY BOARD****RESISTORS**

3745	482205120392	3k9 5% 0,1W	4697	482205120008	OR Jumper 0805
3746	482205120392	3k9 5% 0,1W	4701	482205120008	OR Jumper 0805
3748	482211711449	2k2 1% 0,1W	4702	482205120008	OR Jumper 0805
3749	482211710834	47k 1% 0,1W	4703	482205120008	OR Jumper 0805
3751	482211710833	10k 1% 0,1W	4704	482205120008	OR Jumper 0805
3752	482211710837	100k 1% 0,1W	4705	482205120008	OR Jumper 0805
3753	482211710837	100k 1% 0,1W	4706	482205120008	OR Jumper 0805
3754	482205120333	33k 5% 0,1W	4707	482205120008	OR Jumper 0805
3756	482211713579	220k 1% 0,1W	4708	482205120008	OR Jumper 0805
3757	482211713579	220k 1% 0,1W	4709	482205120008	OR Jumper 0805
3758	482211710833	10k 1% 0,1W	4710	482205120008	OR Jumper 0805
3759	482211710833	10k 1% 0,1W	4711	482205120008	OR Jumper 0805
3760	482205120121	120R 5% 0,1W	4712	482205120008	OR Jumper 0805
3761	482205021003	10k 1% 0,6W	4713	482205120008	OR Jumper 0805
3762	482211711454	820R 1% 0,1W	4714	482205120008	OR Jumper 0805
3763	482205120154	150k 5% 0,1W	4715	482205120008	OR Jumper 0805
3764	482211683872	220R 5% 0,5W	4716	482205120008	OR Jumper 0805
3765	482205120393	39k 5% 0,1W	4717	482205120008	OR Jumper 0805
3766	482205120475	4M7 5% 0,1W	4718	482205120008	OR Jumper 0805
3767	482205120475	4M7 5% 0,1W	4719	482205120008	OR Jumper 0805
3768	482211710833	10k 1% 0,1W	4720	482205120008	OR Jumper 0805
3769	482211683933	15k 1% 0,1W	4721	482205120008	OR Jumper 0805
3770	482211711139	1k5 1% 0,1W	4722	482205120008	OR Jumper 0805
3771	482205120122	1k2 5% 0,1W	4723	482205120008	OR Jumper 0805
3772	482211711507	6k8 1% 0,1W	4724	482205120008	OR Jumper 0805
3773	482210012227	4k7 30% 0,1W	4725	482205120008	OR Jumper 0805
3774	482211711383	12k 1% 0,1W	4726	482205120008	OR Jumper 0805
3775	482205120478	4R7 5% 0,1W	4727	482205120008	OR Jumper 0805
3776	482211711507	6k8 1% 0,1W	4728	482205120008	OR Jumper 0805
3777	482211710353	150R 1% 0,1W	4729	482205120008	OR Jumper 0805
3778	482205210688	△ 6R8 5% 0,33W	4730	482205120008	OR Jumper 0805
3779	482205120334	330k 5% 0,1W	4731	482205120008	OR Jumper 0805
3780	482205120105	1M 5% 0,1W	4732	482205120008	OR Jumper 0805
3781	482205120475	4M7 5% 0,1W	4733	482205120008	OR Jumper 0805
3782	482211683933	15k 1% 0,1W	4734	482205120008	OR Jumper 0805
3783	482205120472	4k7 5% 0,1W	4735	482205120008	OR Jumper 0805
3784	482205120472	4k7 5% 0,1W	4736	482205120008	OR Jumper 0805
3785	532210011539	100k 30% 0,1W	4737	482205120008	OR Jumper 0805
3786	482205120223	22k 5% 0,1W	4738	482205120008	OR Jumper 0805
3787	482205120105	1M 5% 0,1W	4739	482205120008	OR Jumper 0805
3788	482205120105	1M 5% 0,1W	4740	482205120008	OR Jumper 0805
3789	482211710834	47k 1% 0,1W	4741	482205120008	OR Jumper 0805
4601	482205120008	OR Jumper 0805	4742	482205120008	OR Jumper 0805
4602	482205120008	OR Jumper 0805	4743	482205120008	OR Jumper 0805
4603	482205120008	OR Jumper 0805	4783	482205120008	OR Jumper 0805
4604	482205120008	OR Jumper 0805	4786	482205120008	OR Jumper 0805
4605	482205120008	OR Jumper 0805	4787	482205120008	OR Jumper 0805
4606	482205120008	OR Jumper 0805	4788	482205120008	OR Jumper 0805
4607	482205120008	OR Jumper 0805			
4608	482205120008	OR Jumper 0805			
4610	482205120008	OR Jumper 0805			
4696	482205120008	OR Jumper 0805			

COILS & FILTERS

5631	482215711865	Filter MPX 20kHz
5632	482215711865	Filter MPX 20kHz

5701	482215711477	Coil 2,2μH 5%
5702	482215711477	Coil 2,2μH 5%
5703	482215620946	Osc. Coil 100kHz

DIODES


6611	482213031878	1N4003G
6612	482213031878	1N4003G
6613	482213032245	BYV10-40
6614	482213030621	1N4148
6770	482213030621	1N4148
6771	482213030621	1N4148
6772	482213030621	1N4148
6773	482213030621	1N4148
6774	482213030621	1N4148
6775	482213030621	1N4148
6776	482213030621	1N4148
6777	482213034382	BZX79-C8V2
6778	482213030621	1N4148
6782	482213030621	1N4148
6785	482213030621	1N4148
6786	482213030621	1N4148

TRANSISTORS & INTEGRATED CIRCUITS

7610	532220911306	HEF4094BT
7612	532213060845	BC807-25
7613	532213060845	BC807-25
7614	532213060845	BC807-25
7616	482213060373	BC857B
7618	482213060511	BC847B
7619	482213060511	BC847B
7620	482213060511	BC847B
7622	482213060511	BC847B
7623	482213060511	BC847B
7624	482213060511	BC847B
7630	482220917322	CXA1551M
7631	482213060511	BC847B
7632	482213060511	BC847B
7633	482213060511	BC847B
7634	482213060511	BC847B
7635	482213060511	BC847B
7636	482213060511	BC847B
7637	482213060511	BC847B
7638	482213060511	BC847B
7640	482220983357	NJM4560M
7710	482220932919	HEF4952BT
7720	932214000668	AN7323S
7730	482220932919	HEF4952BT
7740	482220932919	HEF4952BT
7780	482213060511	BC847B
7781	482213042804	BC817-25
7782	482213044568	BC557B
7783	482213060511	BC847B

7784	482213060373	BC857B
7785	482213063494	J111
7786	482213063494	J111
7787	482213060511	BC847B
7788	482213060511	BC847B
7789	482213060511	BC847B
7790	482213060511	BC847B
7791	482213060511	BC847B
7792	482213060511	BC847B

Note : Only the parts mentioned in this list are normal service spare parts.

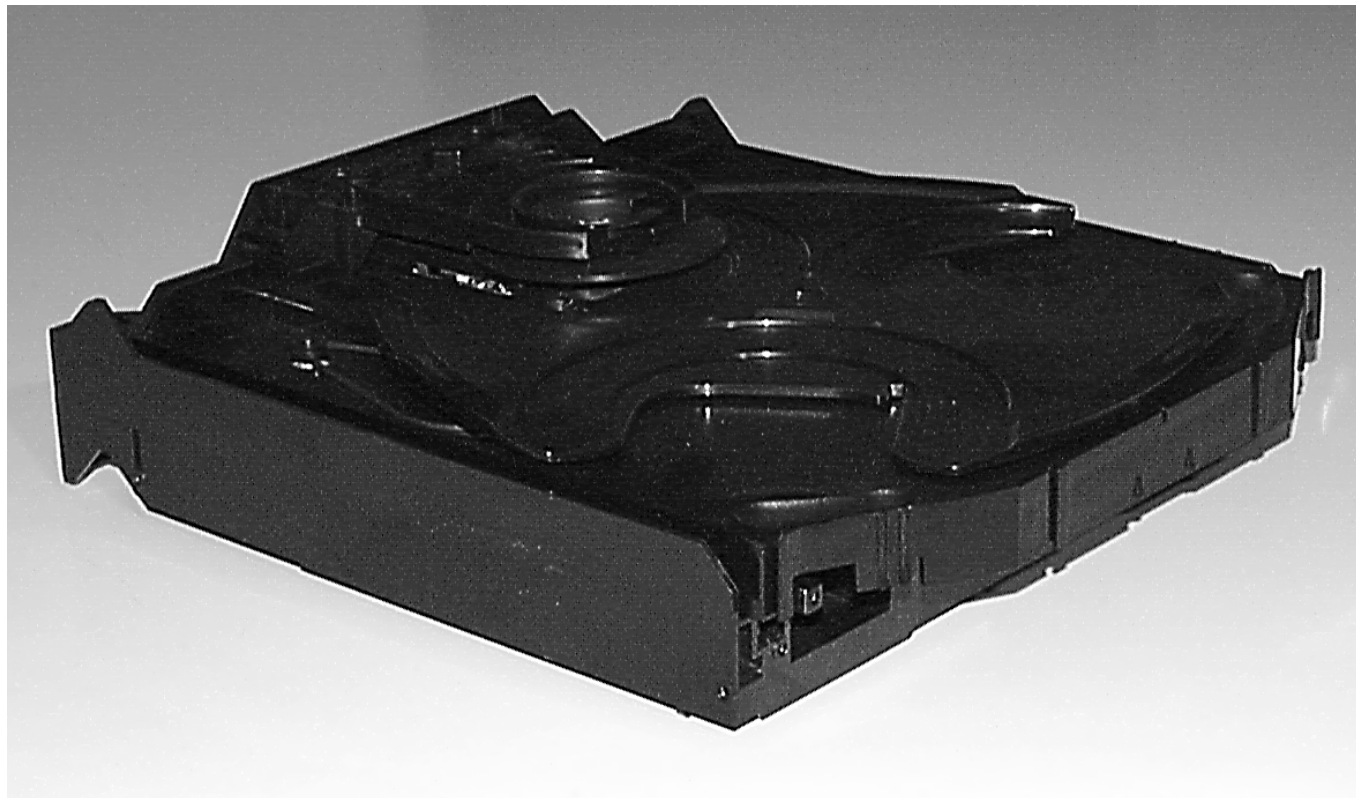

WARNING


CHARGED CAPACITORS ON THE SERVO BOARD MAY DAMAGE THE CD DRIVE ELECTRONICS WHEN CONNECTING A NEW CDM MECHANISM. THAT'S WHY, BESIDES THE SAFETY MEASURES LIKE

- **SWITCH OFF POWER SUPPLY**
- **ESD PROTECTION**

ADDITIONAL ACTIONS MUST BE TAKEN BY THE REPAIR TECHNICIAN.

The following steps have to be done when replacing the CD mechanism:

1. Disconnect CD drive flexfoil from old CD drive
2. Connect paperclip to CD drive flexfoil to short-circuit flexfoil (fig.1)
3. Remove old CD drive
4. Remove short-circuit from flexfoil of CD drive
5. Connect flexfoil to new CD drive
6. Position new CD drive in its studs
7. Remove short-circuit from Laserunit

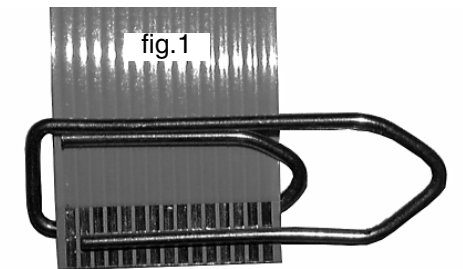

Attention: The laser diode of this CD drive is protected against ESD by a solder joint which shortcircuits the laserdiode to ground.
For proper functionality of the CD drive this solder joint must be removed **after** connection the drive to the set.


3CDC-LC-MB-DA11 Module

(3 Disc Carousel Changer)

Layout stage .2


TABLE OF CONTENTS


Servicing Hints	10-2
Blockdiagram	10-5
Component Layout Main Board	10-6
Circuit Diagram part1	10-7
Component Layout Main Board	10-8
Circuit Diagram part2	10-9
Exploded View	10-10
Partslist	10-12

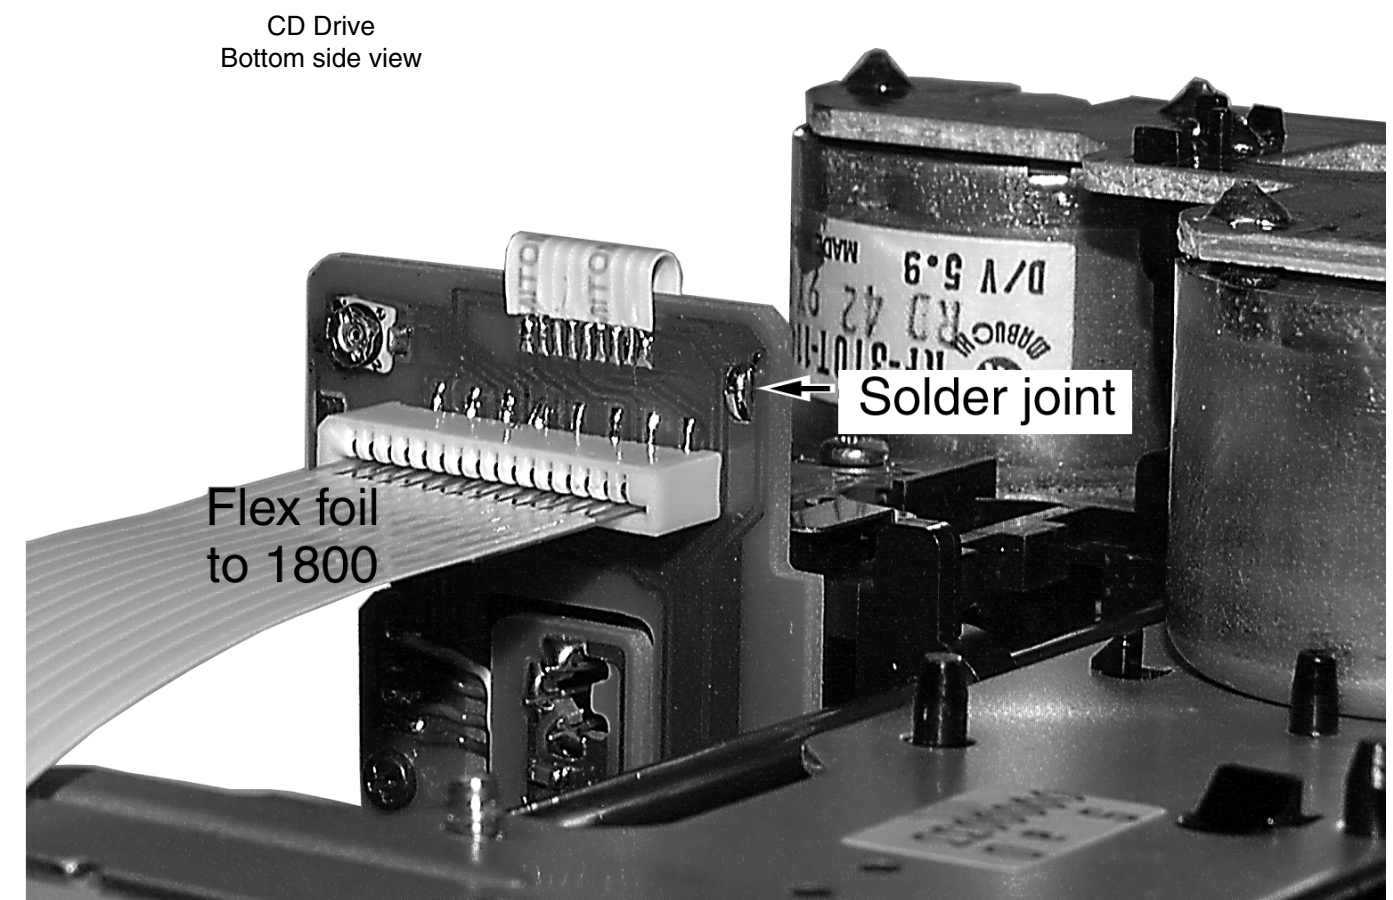

Service Position


Technical Remarks

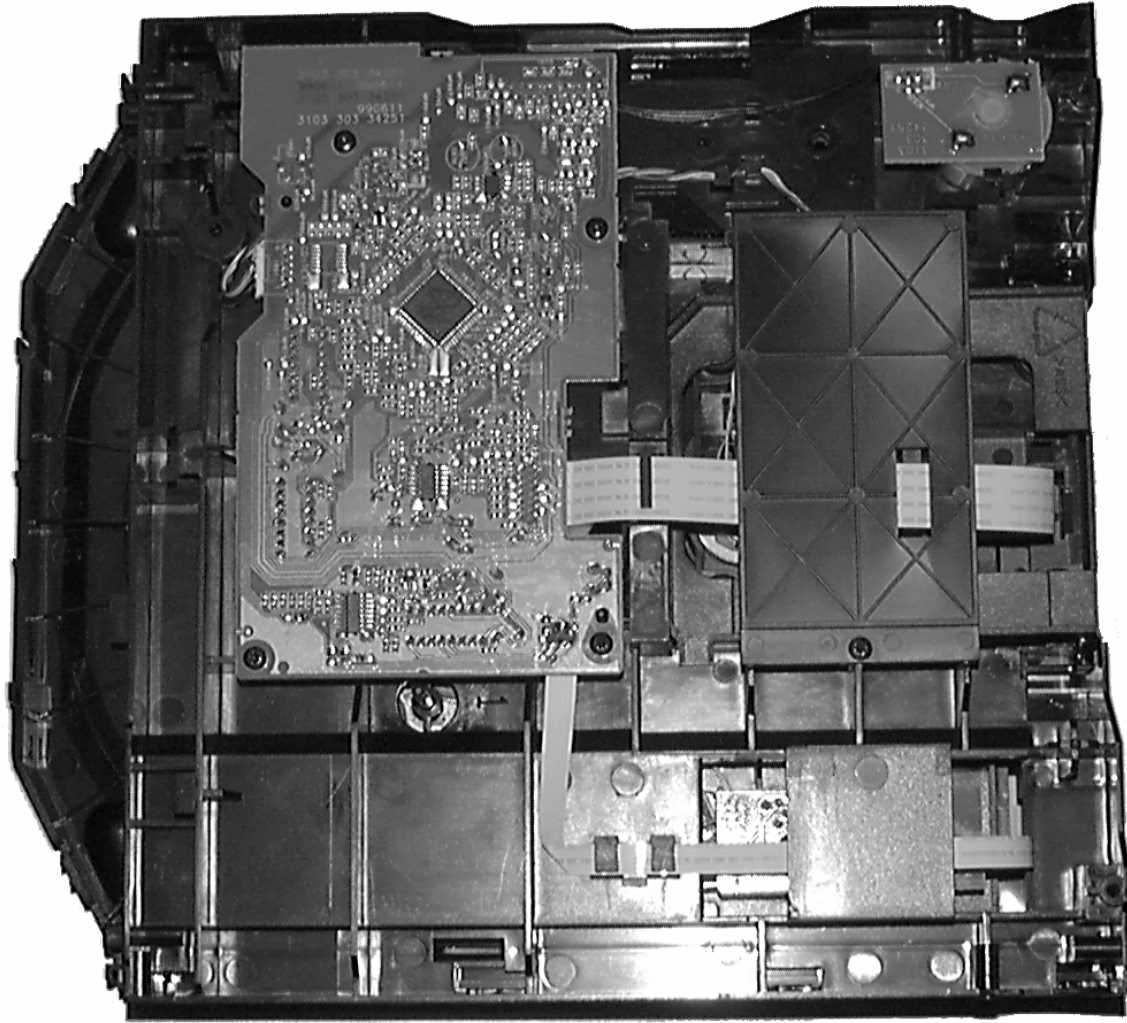

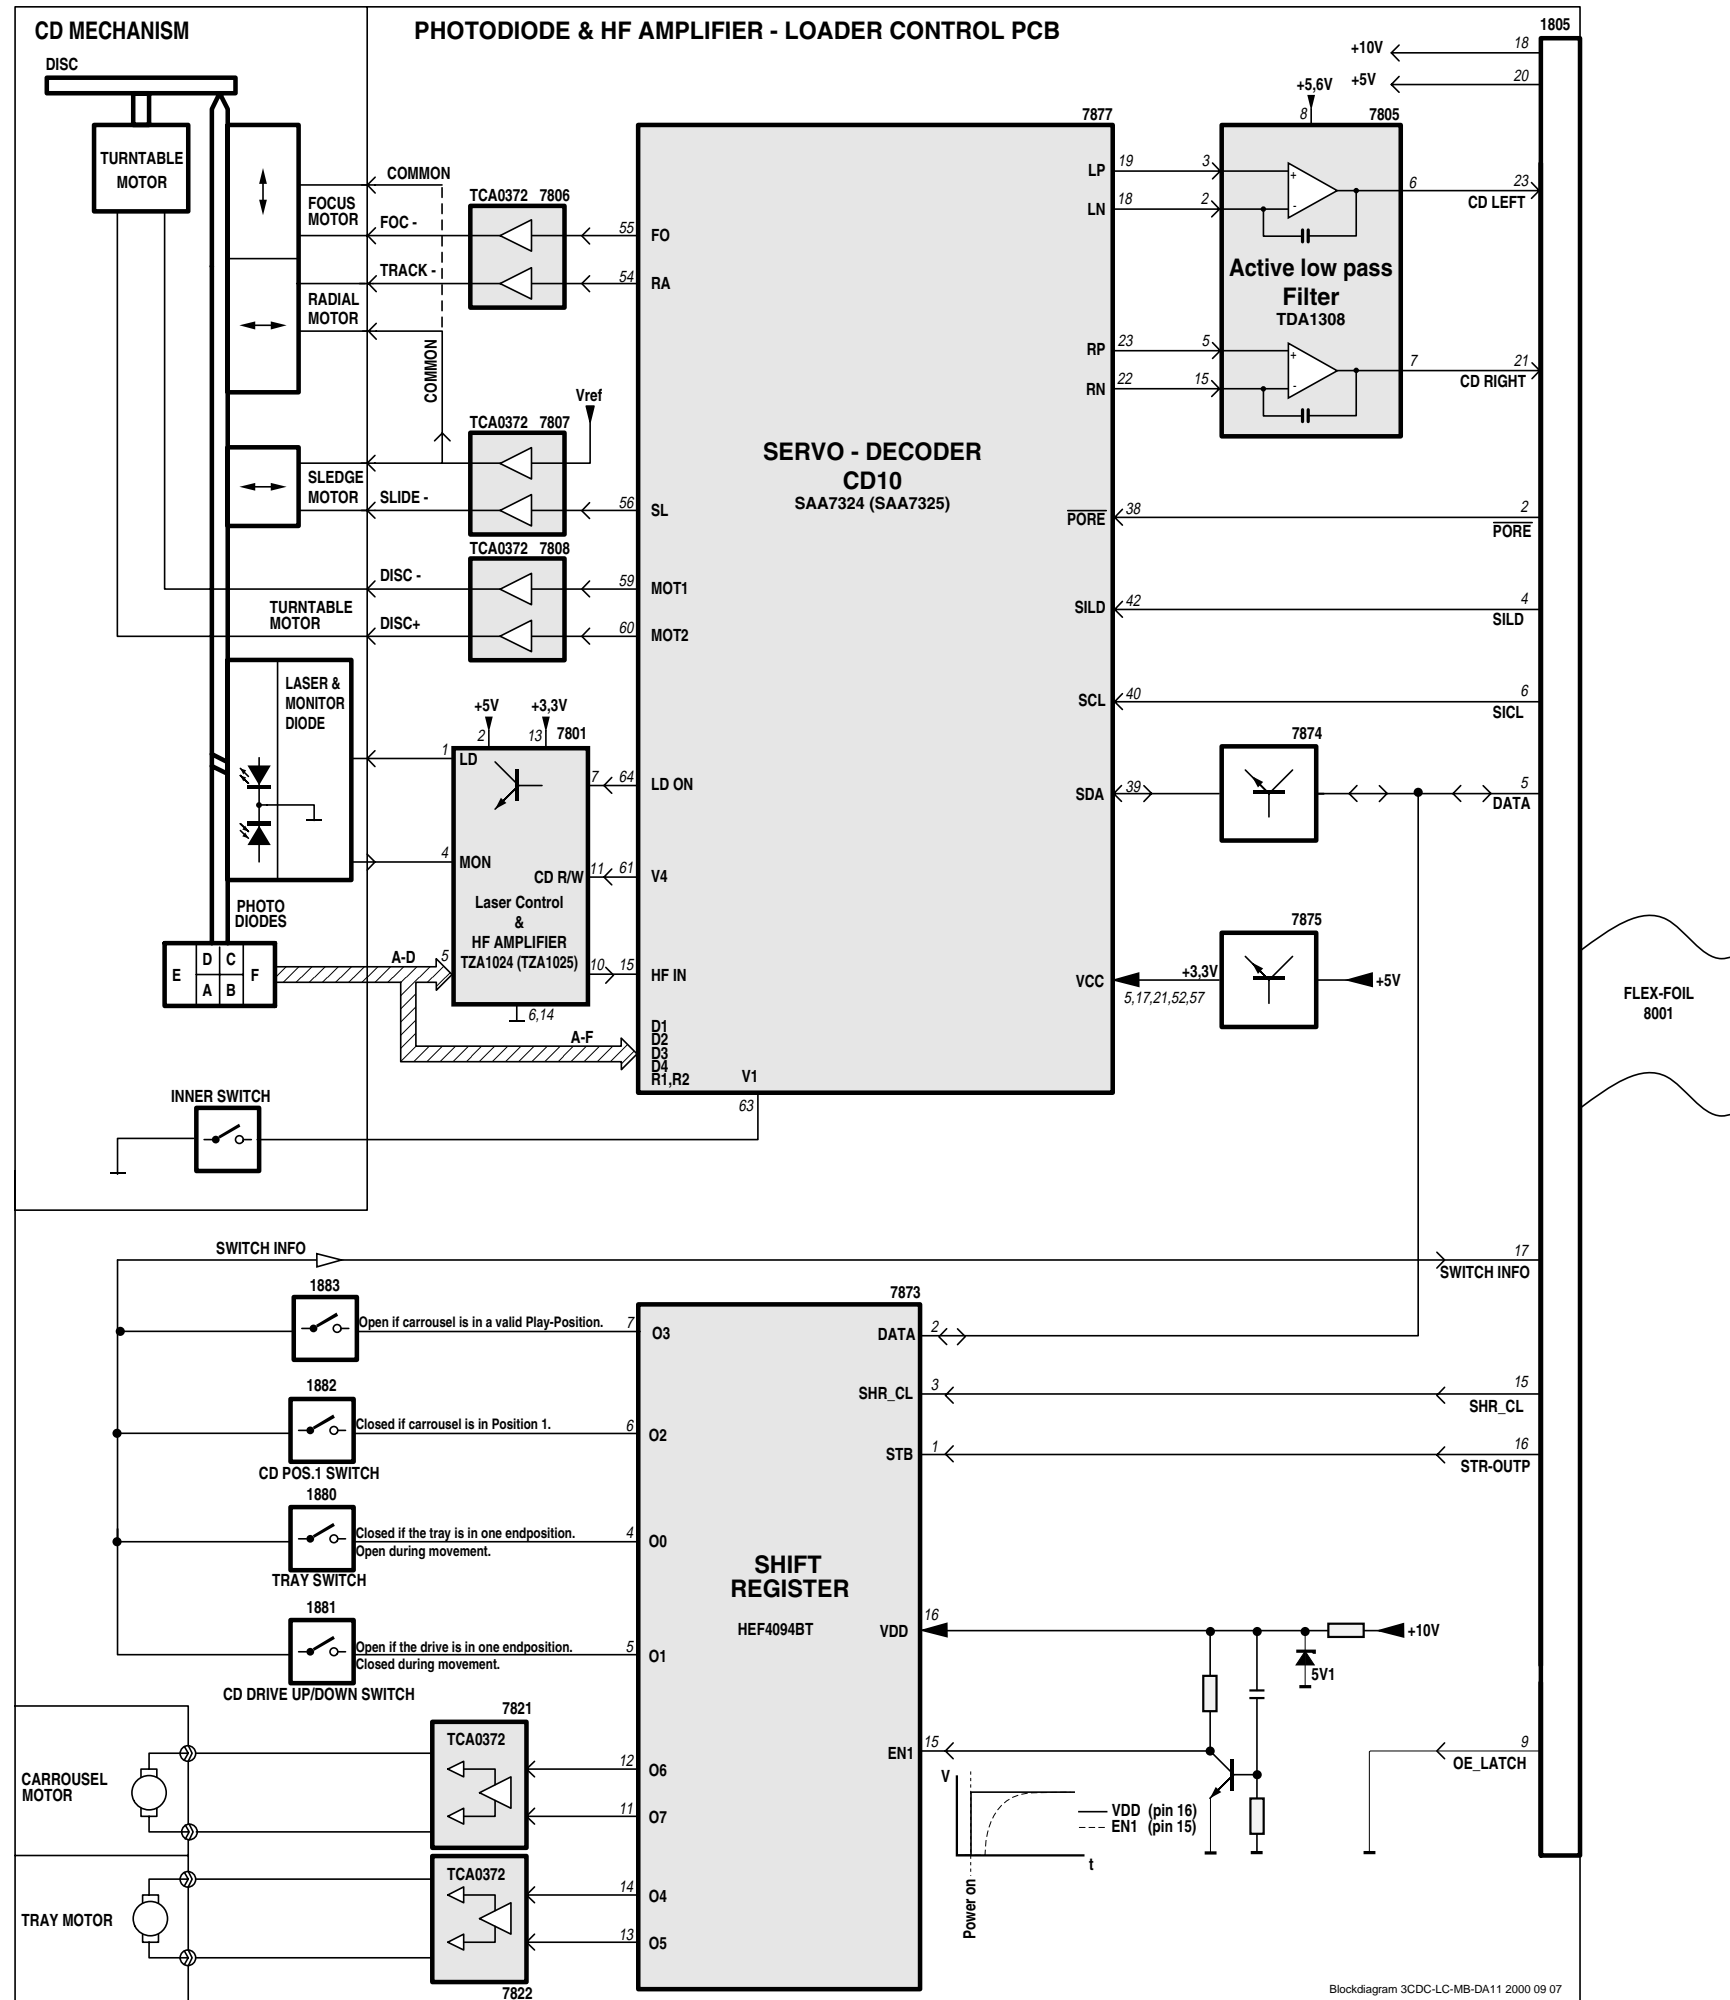

Mapping


3CDC-LC-MB Copperside view

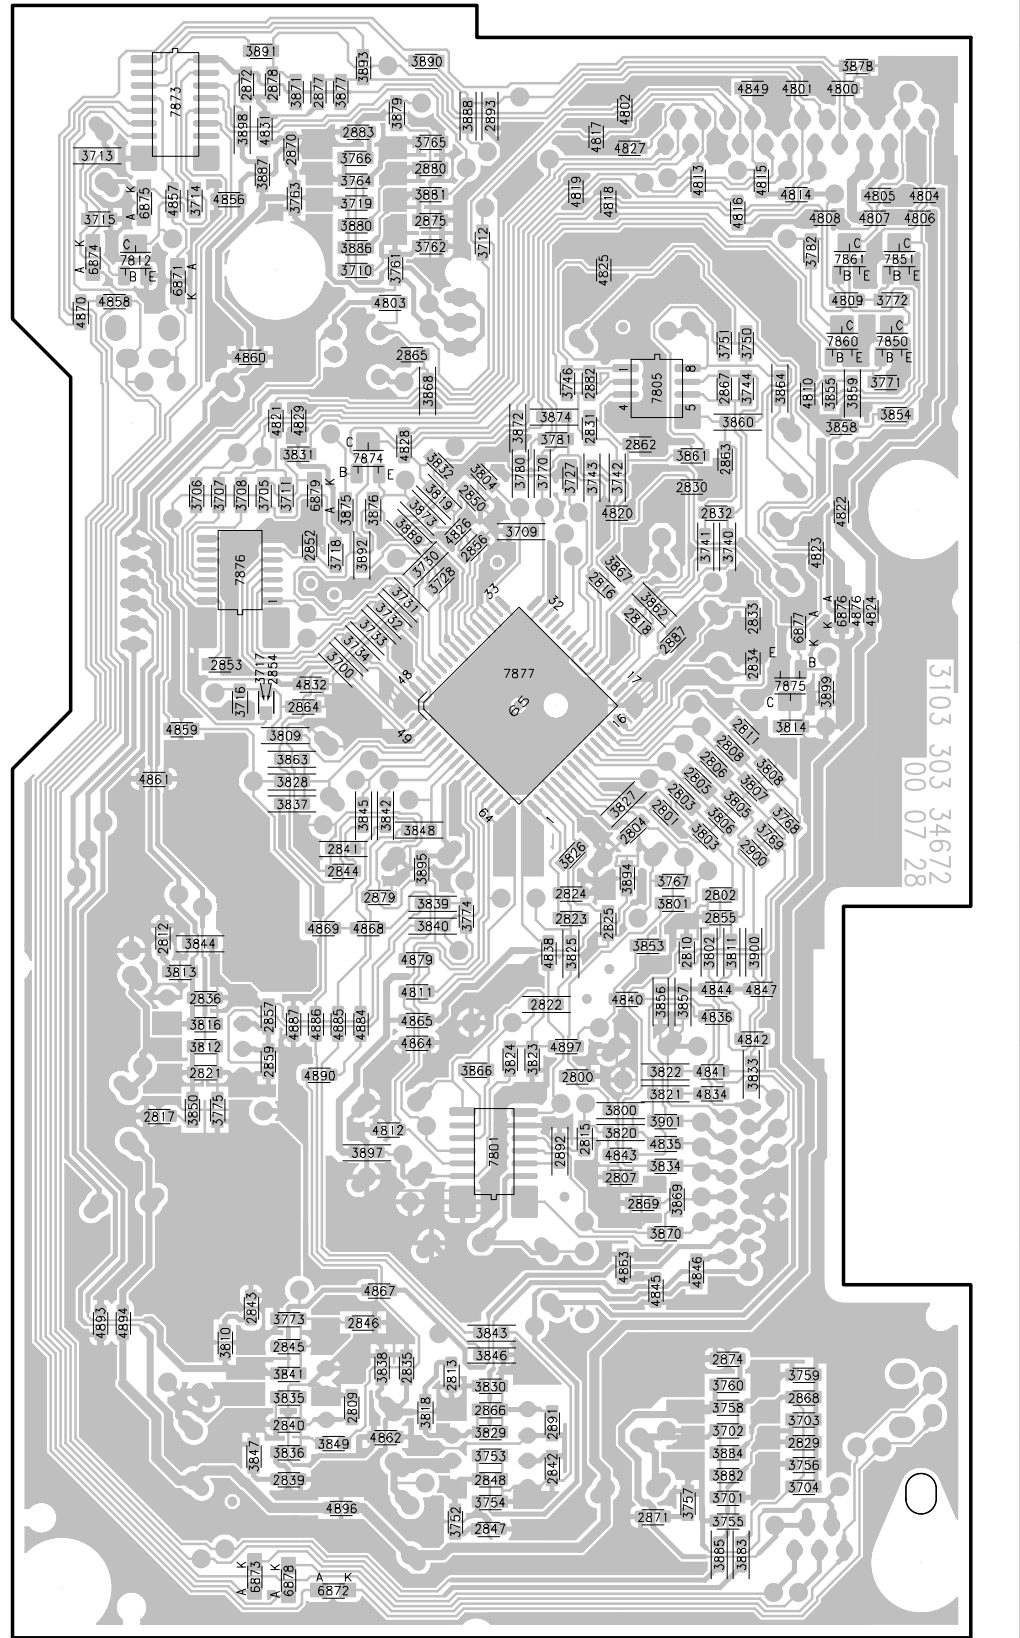

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram respectively partslist.





Copperside		Componentside		
2800 F3	3746 B3	3880 A2	7860 B5	1800 F2
2801 D4	3750 B4	3881 A3	7861 B5	1801 C5
2802 E4	3751 B4	3882 H4	7873 A1	1805 A2
2803 D4	3752 H3	3883 H4	7874 C2	1810 C2
2804 D4	3753 H3	3884 H4	7875 D4	1875 H1
2805 D4	3754 H3	3885 H4	7876 C2	1878 B3
2806 D4	3755 H4	3886 B2	7877 D3	1880 B5
2807 F4	3756 H4	3887 A2		1881 G1
2808 D4	3757 H4	3888 A3		2814 G2
2809 G2	3758 G4	3889 C2		2819 G3
2810 E4	3759 G4	3890 A3		2820 G4
2811 D4	3760 G4	3891 A2		2826 D3
2812 E1	3761 B2	3892 C2		2828 D4
2813 G3	3762 B3	3893 A2		2837 E5
2815 F3	3763 A2	3894 E4		2838 F4
2816 C3	3764 A2	3895 E3		2849 E2
2817 F1	3765 A3	3897 F2		2851 C2
2818 C4	3766 A2	3898 A2		2858 B2
2821 F1	3767 E4	3899 D5		2860 C1
2822 E3	3768 D4	3900 E4		2861 C1
2823 E3	3769 D4	3901 F4		2873 B4
2824 E3	3770 C3	4800 A5		2876 B2
2825 E3	3771 B5	4801 A4		2881 A5
2829 H4	3772 B5	4802 A4		2884 F4
2830 C4	3773 G2	4803 B2		2885 D2
2831 B3	3774 E3	4804 A5		2888 F3
2832 C4	3775 F2	4805 A5		3815 G3
2833 C4	3780 C3	4806 A5		3817 H5
2834 D4	3781 B3	4807 A5		3851 F5
2835 G2	3782 B5	4808 A5		3852 F5
2836 E1	3800 F4	4809 B5		3865 H2
2839 H2	3801 E4	4810 B4		3896 H3
2840 G2	3802 E4	4811 E3		5802 B4
2841 E2	3803 D4	4812 F2		7806 H3
2842 H3	3804 C3	4813 A4		7807 G4
2843 G2	3805 D4	4814 A4		7808 E5
2844 E2	3806 D4	4815 A4		7821 G2
2845 G2	3807 D4	4816 A4		7822 A3
2846 G2	3808 D4	4817 A3		
2847 H3	3809 D2	4818 A3		
2848 H3	3810 G2	4819 A3		
2850 C3	3811 E4	4820 C4		
2852 C2	3812 F1	4821 B2		
2853 D2	3813 E1	4822 C5		
2854 D2	3814 D4	4823 C5		
2855 E4	3816 E1	4824 C5		
2856 C3	3818 G3	4825 B3		
2857 E2	3819 C3	4826 C3		
2859 F2	3820 F4	4827 A4		
2862 C4	3821 F4	4828 C2		
2863 C4	3822 F4	4829 B2		
2864 D2	3823 F3	4831 A2		
2865 B3	3824 F3	4832 D2		
2866 G3	3825 E3	4834 F4		
2867 B4	3826 E3	4835 F4		
2868 G4	3827 D4	4836 E4		
2869 F4	3828 D2	4838 E3		
2870 A2	3829 G3	4840 E4		
2871 H4	3830 G3	4841 F4		
2872 A2	3831 C2	4842 E4		
2874 G4	3832 C3	4843 F4		
2875 A3	3833 F4	4844 E4		
2877 A2	3834 F4	4845 G4		
2878 A2	3835 G2	4846 G4		
2879 E2	3836 H2	4847 E4		
2880 A3	3837 D2	4849 A4		
2882 B3	3838 G2	4856 A2		
2883 A2	3839 E3	4857 A1		
2887 C4	3840 E3	4858 B1		
2891 G3	3841 G2	4859 D1		
2892 F3	3842 D2	4860 B2		
2893 A3	3843 G3	4861 D1		
2900 E4	3844 E1	4862 G2		
3700 D2	3845 D2	4863 G4		
3701 H4	3846 G3	4864 F3		
3702 G4	3847 H2	4865 E3		
3703 G4	3848 D3	4867 G2		
3704 H4	3849 H2	4868 E2		
3705 C2	3850 F1	4869 E2		
3706 C1	3853 E4	4870 B1		
3707 C2	3854 B5	4876 C5		
3708 C2	3855 B5	4879 E3		
3709 C3	3856 E4	4884 E2		
3710 B2	3857 E4	4885 E2		
3711 C2	3858 B5	4886 E2		
3712 A3	3859 B5	4887 E2		
3713 A1	3860 B4	4890 F2		
3714 A1	3861 C4	4893 G1		
3715 A1	3862 C4	4894 G1		
3716 D2	3863 D2	4896 H2		
3717 D2	3864 B4	4897 F3		
3718 C2	3866 F3	6871 B1		
3719 A2	3867 C4	6872 H2		
3727 C3	3868 B3	6873 H2		
3728 C3	3869 F4	6874 B1		
3730 C3	3870 F4	6875 A1		
3731 C2	3871 A2	6876 C5		
3732 C2	3872 B3	6877 C4		
3733 C2	3873 C3	6878 H2		
3734 D2	3874 B3	6879 C2		
3740 C4	3875 C2	7801 F3		
3741 C4	3876 C2	7805 B4		
3742 C4	3877 A2	7812 B1		
3743 C3	3878 A5	7850 B5		
3744 B4	3879 A2	7851 B5		

3CDC-LC-MB Componentside view

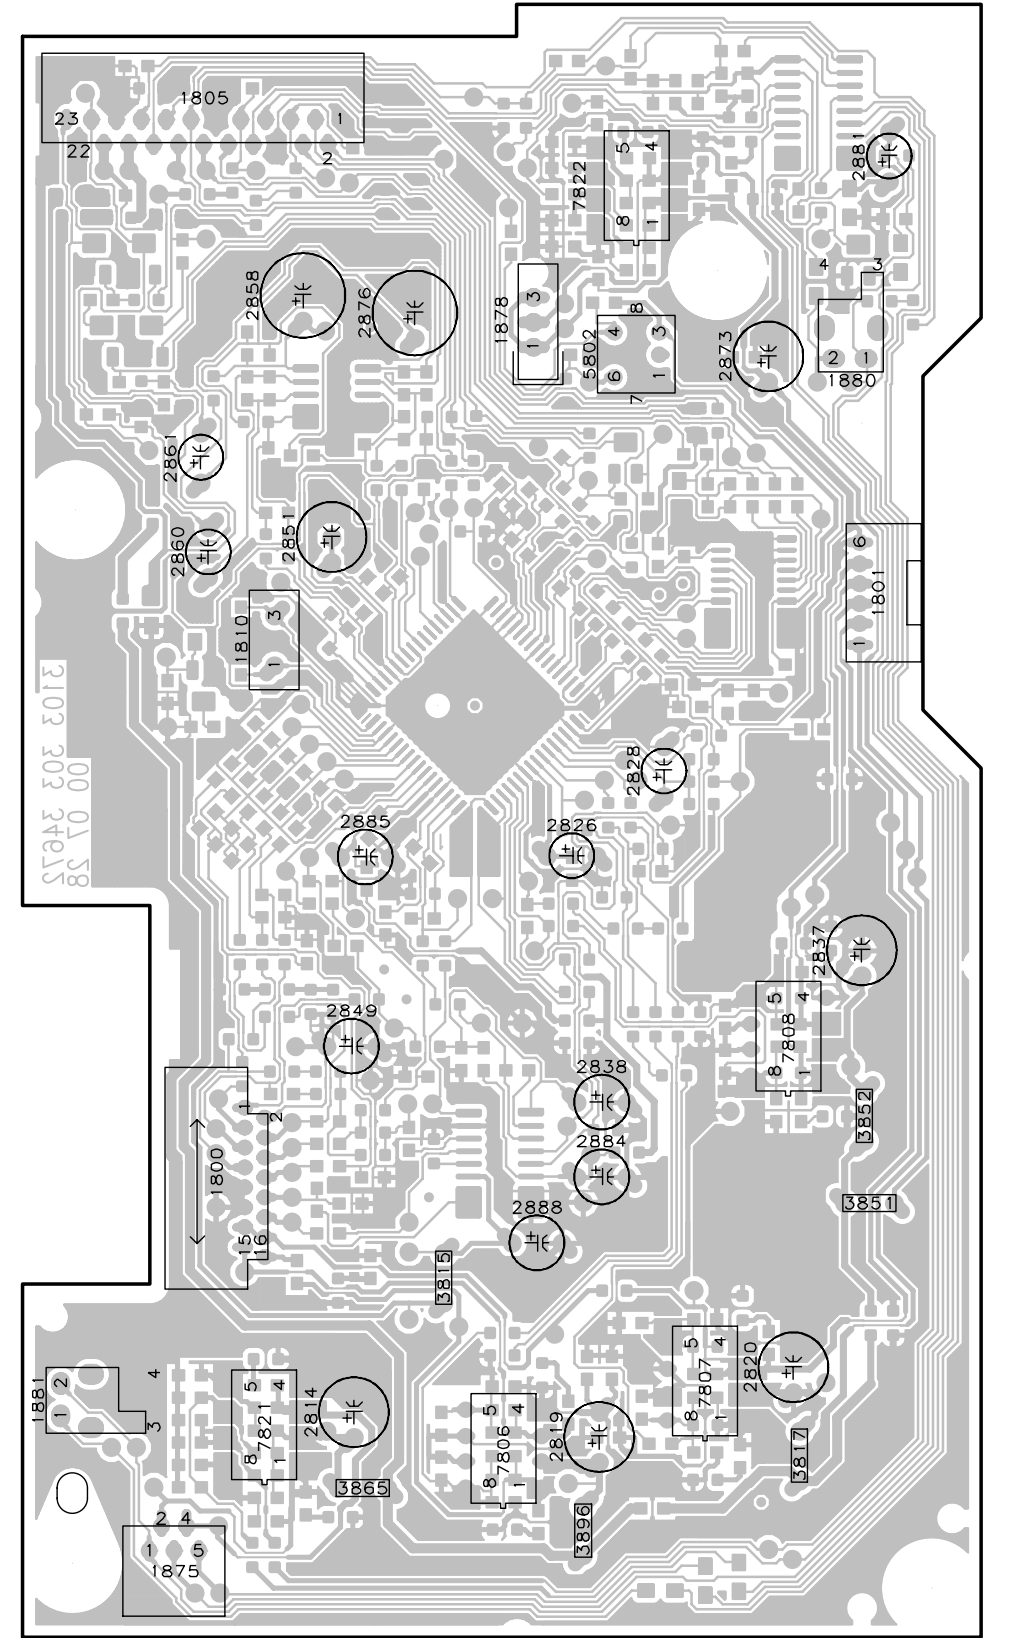

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram respectively partslist.


1800 D1 2801 C5 2805 B5 2809 H4 2813 F3 2818 B11 2822 F9 2826 G12 2835 B13 2839 H3 2843 G3 2847 G3 2851 B11 2859 I4 2864 E7 2891 E4 3727 B12 3754 G3 3773 G3 3801 C4 3805 B4 3810 G3 3815 E5 3819 D14 3823 E8 3827 E10 3832 D15 3836 H3 3840 I5 3844 I3 3848 H5 3853 E9 3863 B14 3870 E3 3894 E9 3900 B3 7801 E7 7877 D12
 1801 G1 2802 C4 2806 B5 2810 A4 2815 D5 2819 A13 2823 F10 2828 B14 2836 I4 2840 H4 2844 F5 2848 F4 2855 B4 2866 F4 2868 F9 2892 D5 3728 E14 3767 E9 3774 G12 3802 C4 3806 B4 3811 B4 3816 I3 3819 D14 3823 E8 3827 E10 3832 D15 3836 H3 3840 I5 3844 I3 3848 H5 3853 E9 3863 B14 3870 E3 3894 E9 3900 B3 7801 E7 7806 E4
 1810 C10 2803 C5 2807 A4 2811 A5 2816 B12 2820 A13 2824 F10 2833 C10 2837 A13 2841 G5 2845 G4 2849 C2 2856 D14 2869 E4 2887 B10 2900 B4 3752 F3 3768 A4 3775 I3 3803 C4 3807 A4 3812 I3 3817 A14 3821 D3 3825 F10 3829 F3 3834 A3 3838 B14 3842 F5 3846 E5 3850 I3 3852 A14 3857 C2 3867 B11 3889 D14 3896 A14 4811 F8 7807 G4 7808 H4
 2800 C4 2804 E10 2808 A5 2812 I3 2817 I3 2821 I4 2825 F10 2834 C10 2838 E8 2842 F4 2846 G4 2850 D14 2857 H4 2879 H5 2888 E5 3709 C14 3753 F3 3769 A4 3800 C4 3804 C14 3808 A4 3813 I3 3818 F3 3822 D3 3826 F9 3830 F3 3835 H3 3839 I5 3843 F5 3847 H3 3852 A14 3862 B10 3869 E4 3892 E14 3897 E7 4812 F8 7808 H4

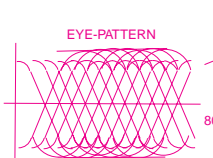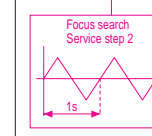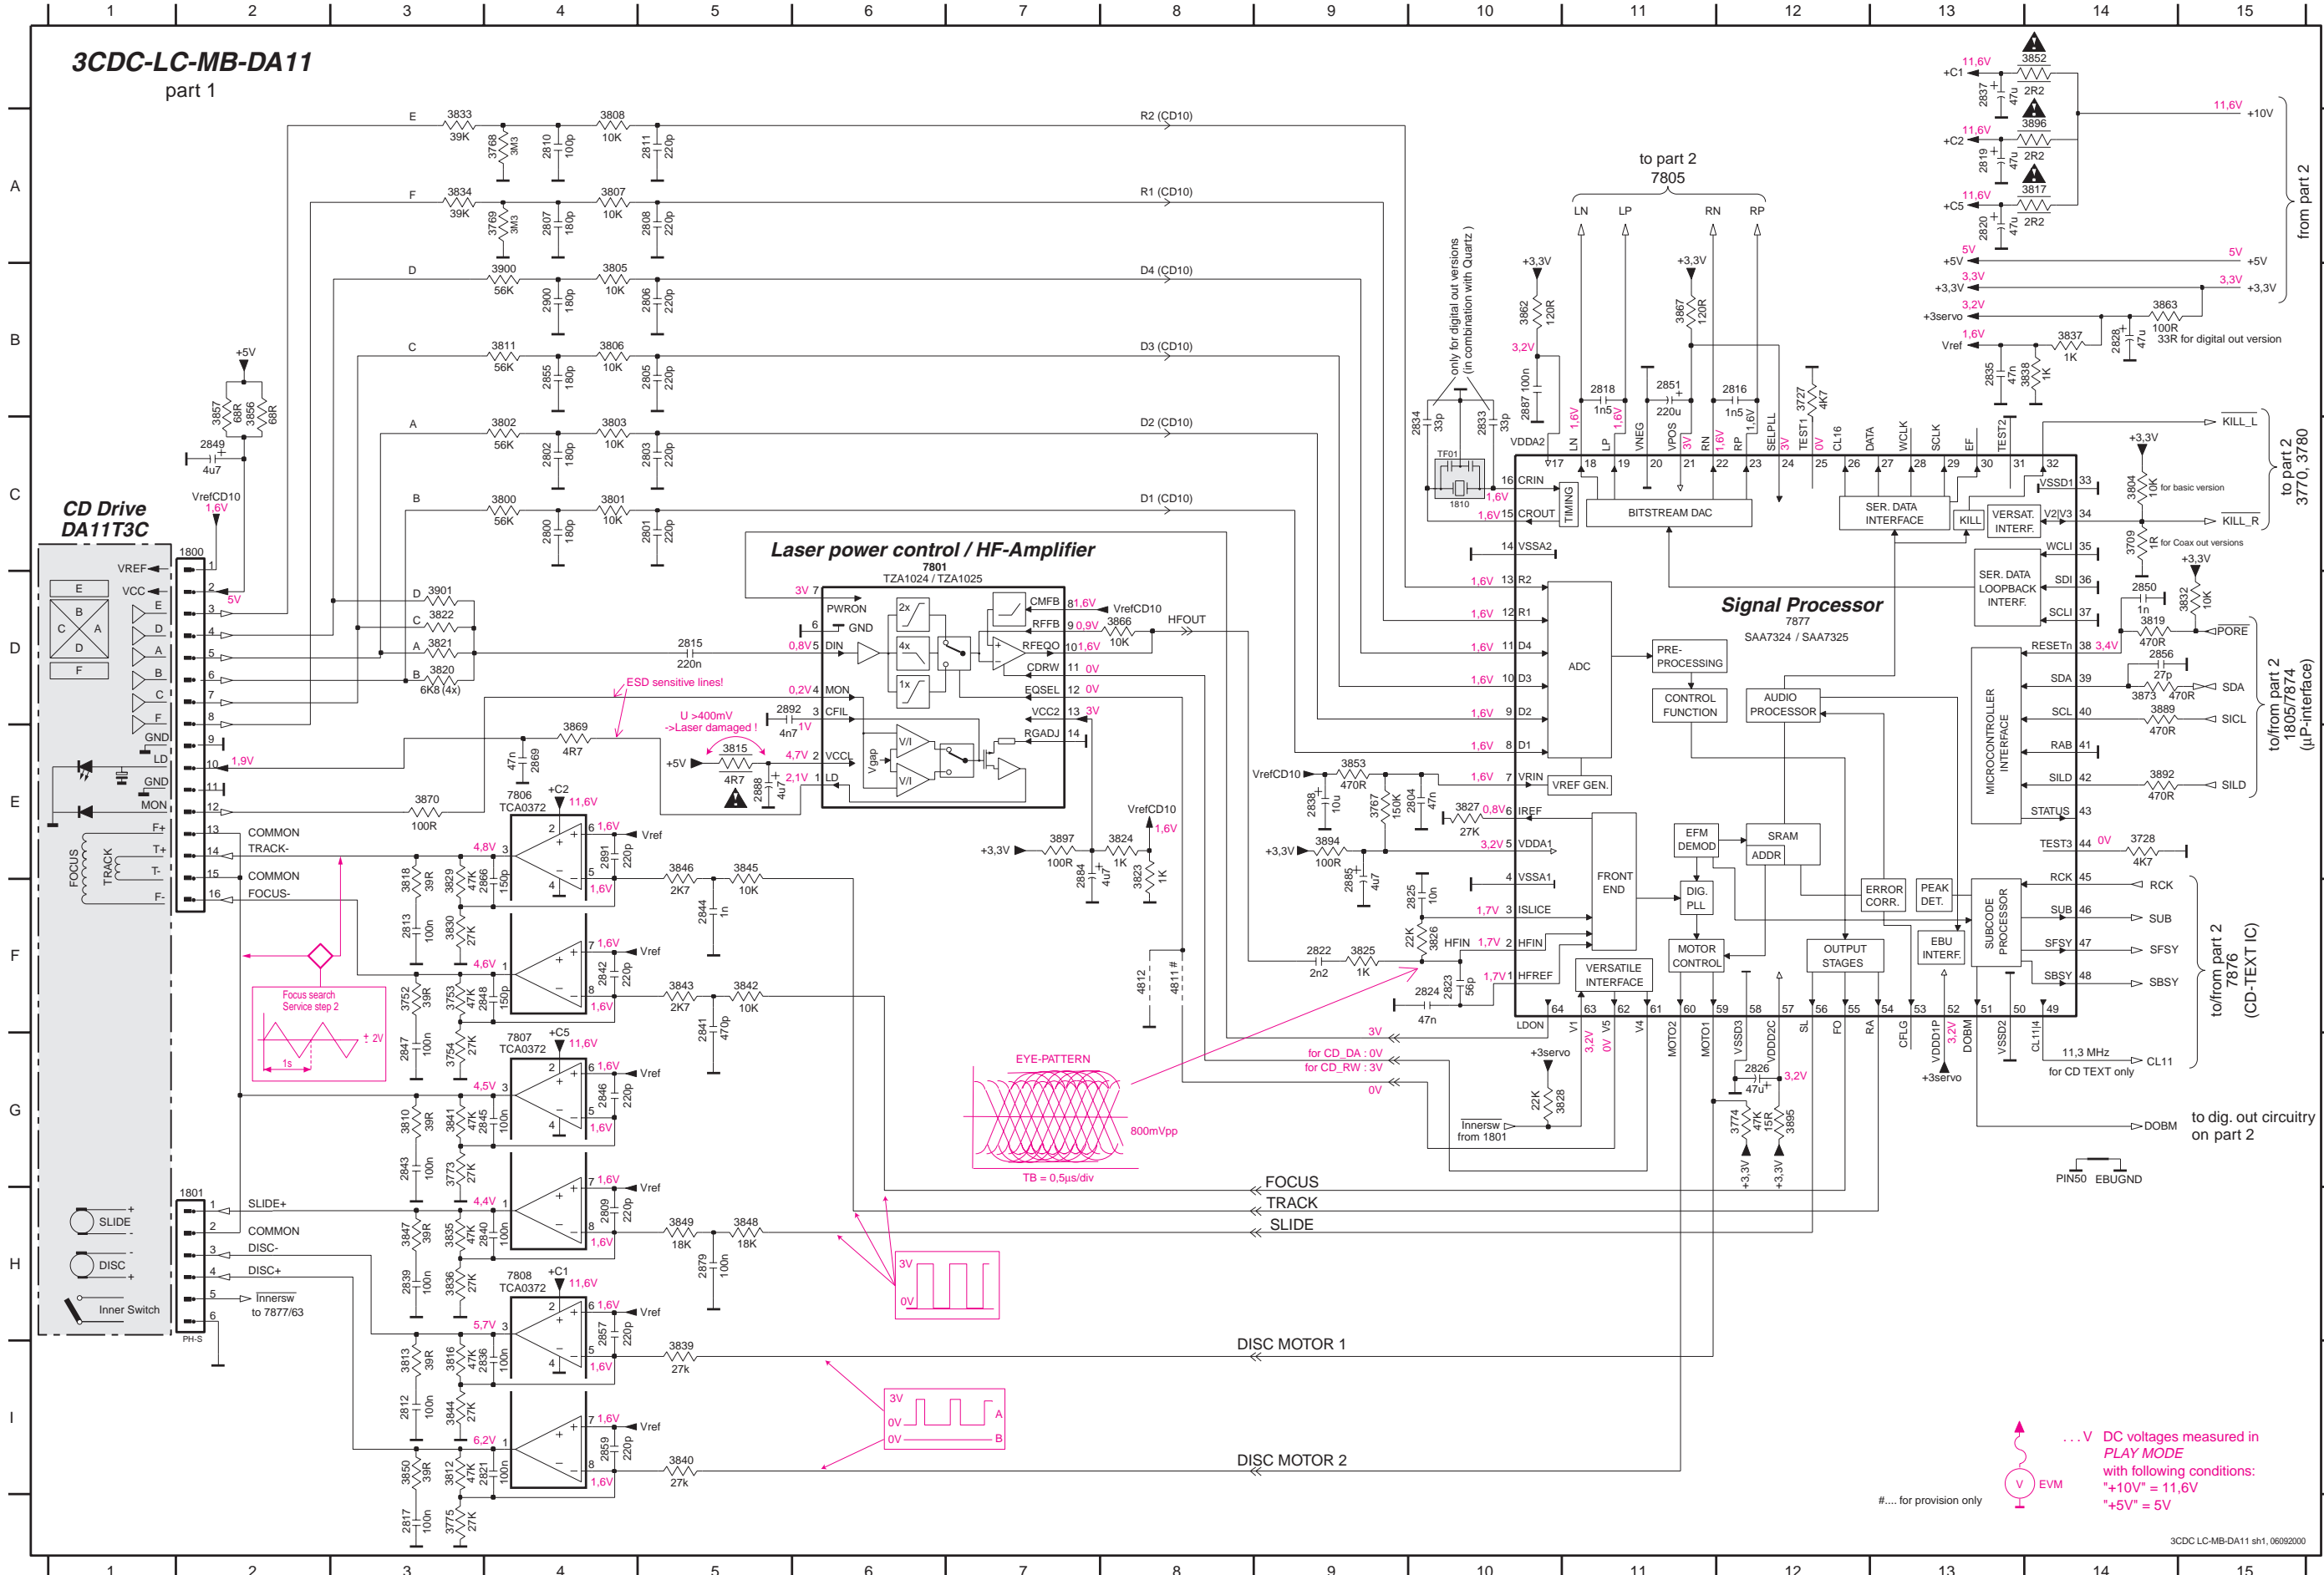

... V DC voltages measured in PLAY MODE with following conditions: "+10V" = 11.6V "+5V" = 5V

#... for provision only


3CDC-LC-MB Copperside view

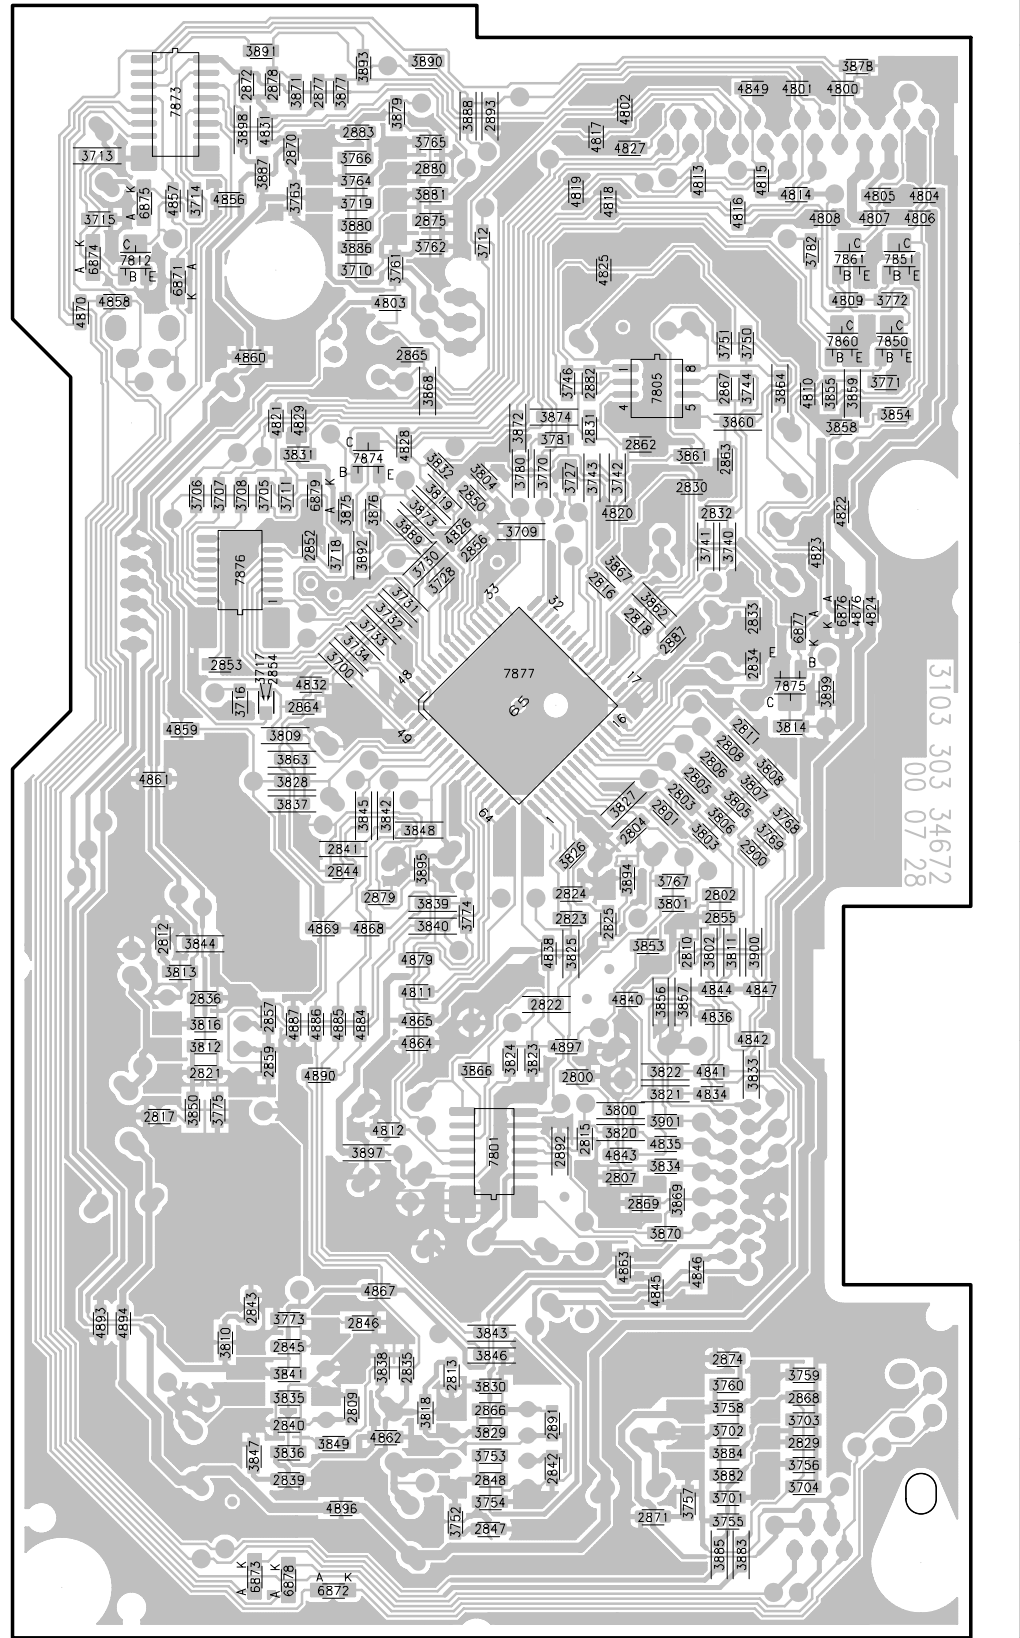

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram respectively partslist.


Copperside			Componentside		
2800	F3	3746 B3	3880	A2	7860 B5
2801	D4	3750 B4	3881	A3	7861 B5
2802	E4	3751 B4	3882	H4	7873 A1
2803	D4	3752 H3	3883	H4	7874 C2
2804	D4	3753 H3	3884	H4	7875 D4
2805	D4	3754 H3	3885	H4	7876 C2
2806	D4	3755 H4	3886	B2	7877 D3
2807	F4	3756 H4	3887	A2	
2808	D4	3757 H4	3888	A3	
2809	G2	3758 G4	3889	C2	
2810	E4	3759 G4	3890	A3	
2811	D4	3760 G4	3891	A2	
2812	E1	3761 B2	3892	C2	
2813	G3	3762 B3	3893	A2	
2815	F3	3763 A2	3894	E4	
2816	C3	3764 A2	3895	E3	
2817	F1	3765 A3	3897	F2	
2818	C4	3766 A2	3898	A2	
2821	F1	3767 E4	3899	D5	
2822	E3	3768 D4	3900	E4	
2823	E3	3769 D4	3901	F4	
2824	E3	3770 C3	4800	A5	
2825	E3	3771 B5	4801	A4	
2829	H4	3772 B5	4802	A4	
2830	C4	3773 G2	4803	B2	
2831	B3	3774 E3	4804	A5	
2832	C4	3775 F2	4805	A5	
2833	C4	3780 C3	4806	A5	
2834	D4	3781 B3	4807	A5	
2835	G2	3782 B5	4808	A5	
2836	E1	3800 F4	4809	B5	
2839	H2	3801 E4	4810	B4	
2840	G2	3802 E4	4811	E3	
2841	E2	3803 D4	4812	F2	
2842	H3	3804 C3	4813	A4	
2843	G2	3805 D4	4814	A4	
2844	E2	3806 D4	4815	A4	
2845	G2	3807 D4	4816	A4	
2846	G2	3808 D4	4817	A3	
2847	H3	3809 D2	4818	A3	
2848	H3	3810 G2	4819	A3	
2850	C3	3811 E4	4820	C4	
2852	C2	3812 F1	4821	B2	
2853	D2	3813 E1	4822	C5	
2854	D2	3814 D4	4823	C5	
2855	E4	3816 E1	4824	C5	
2856	C3	3818 G3	4825	B3	
2857	E2	3819 C3	4826	C3	
2859	F2	3820 F4	4827	A4	
2862	C4	3821 F4	4828	C2	
2863	C4	3822 F4	4829	B2	
2864	D2	3823 F3	4831	A2	
2865	B3	3824 F3	4832	D2	
2866	G3	3825 E3	4834	F4	
2867	B4	3826 E3	4835	F4	
2868	G4	3827 D4	4836	E4	
2869	F4	3828 D2	4838	E3	
2870	A2	3829 G3	4840	F4	
2871	H4	3830 G3	4841	F4	
2872	A2	3831 C2	4842	F4	
2874	G4	3832 C3	4843	F4	
2875	A3	3833 F4	4844	E4	
2877	A2	3834 F4	4845	G4	
2878	A2	3835 G2	4846	G4	
2879	E2	3836 H2	4847	E4	
2880	A3	3837 D2	4849	A4	
2882	B3	3838 G2	4856	A2	
2883	A2	3839 E3	4857	A1	
2887	C4	3840 E3	4858	B1	
2891	G3	3841 G2	4859	D1	
2892	F3	3842 D2	4860	B2	
2893	A3	3843 G3	4861	D1	
2900	E4	3844 E1	4862	G2	
3700	D2	3845 D2	4863	G4	
3701	H4	3846 G3	4864	F3	
3702	G4	3847 H2	4865	E3	
3703	G4	3848 D3	4867	G2	
3704	H4	3849 H2	4868	E2	
3705	C2	3850 F1	4869	E2	
3706	C1	3853 F4	4870	B1	
3707	C2	3854 B5	4876	C5	
3708	C2	3855 B5	4879	E3	
3709	C3	3856 E4	4884	E2	
3710	B2	3857 E4	4885	E2	
3711	C2	3858 B5	4886	E2	
3712	A3	3859 B5	4887	F2	
3713	A1	3860 B4	4890	F2	
3714	A1	3861 C4	4893	G1	
3715	A1	3862 C4	4894	G1	
3716	D2	3863 D2	4896	H2	
3717	D2	3864 B4	4897	F3	
3718	C2	3866 F3	6871	B1	
3719	A2	3867 C4	6872	H2	
3727	C3	3868 B3	6873	H2	
3728	C3	3869 F4	6874	B1	
3730	C3	3870 F4	6875	A1	
3731	C2	3871 A2	6876	C5	
3732	C2	3872 B3	6877	C4	
3733	C2	3873 C3	6878	H2	
3734	D2	3874 B3	6879	C2	
3740	C4	3875 C2	7801	F3	
3741	C4	3876 C2	7805	B4	
3742	C4	3877 A2	7812	B1	
3743	C3	3878 A5	7850	B5	
3744	B4	3879 A2	7851	B5	

3CDC-LC-MB Componentside view

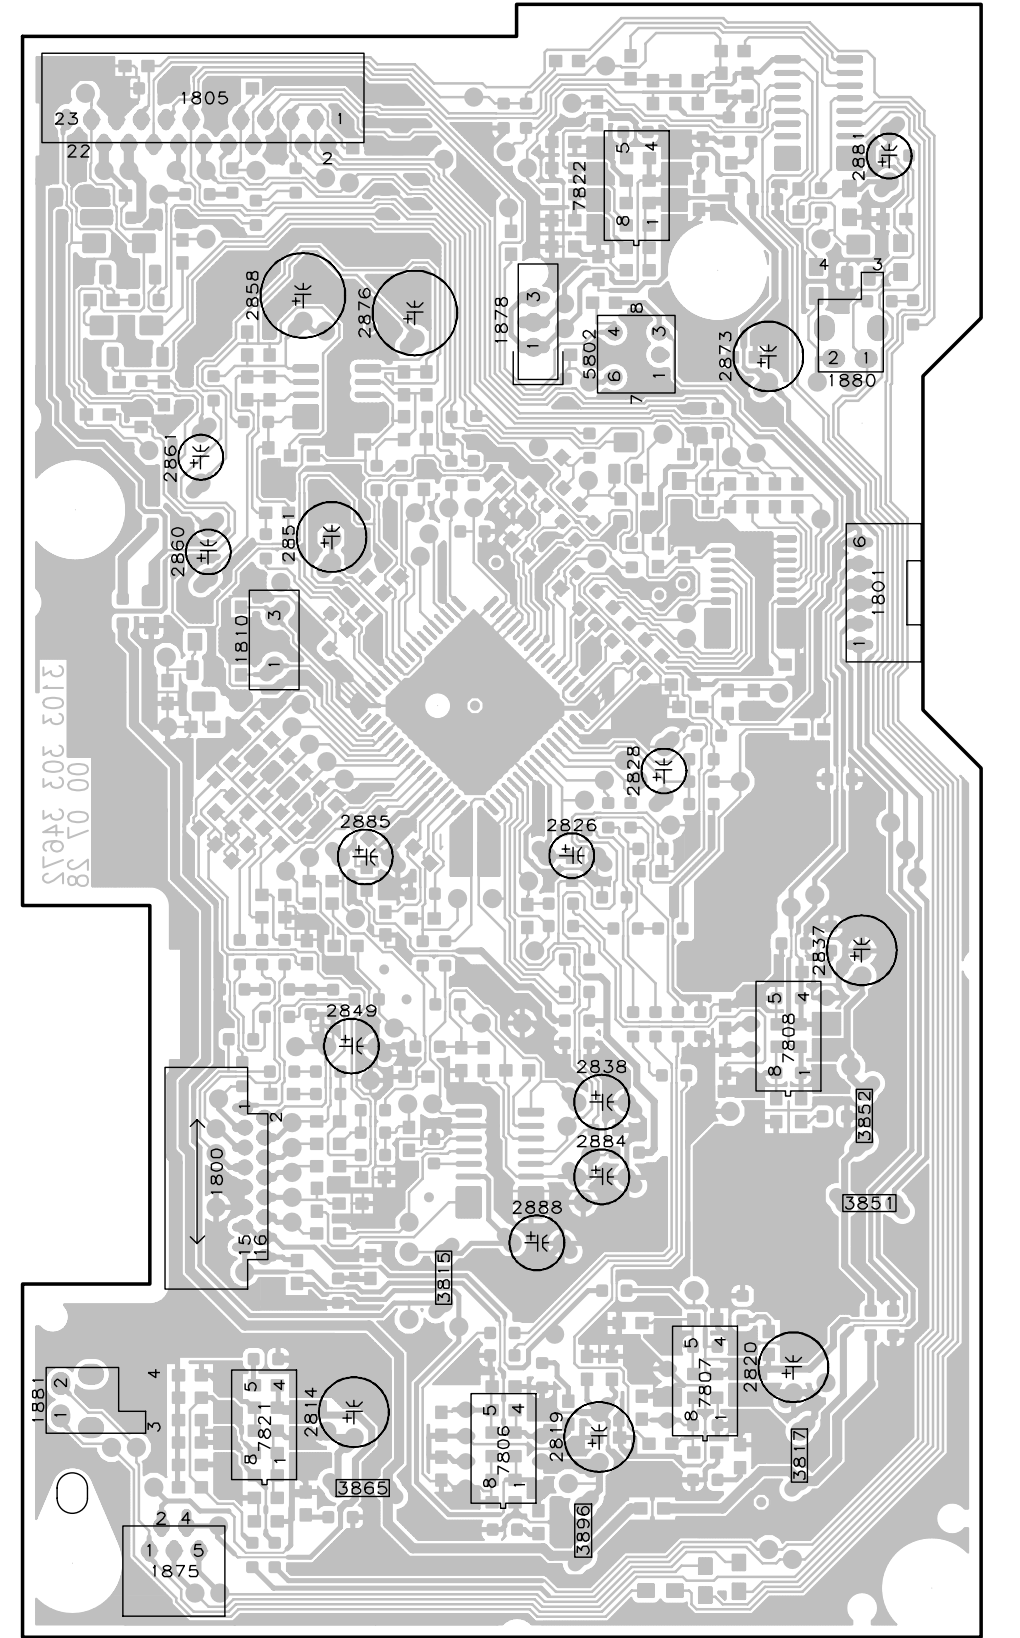

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram respectively partslist.


1805	E14	1880	E7	2831	B8	2861	B9	2870	E4	2877	G10	3372	C13	3705	H10	3713	D10	3730	I7	3743	B6	3757	G3	3764	D2	3781	B15	3855	B9	3871	F10	3881	D5	3888	F11	4827	H13	6874	D10	7805-B	B8	7851	B14
1850	G3	1881	E7	2832	A7	2862	B7	2871	G3	2878	G10	3374	C13	3706	I10	3714	D9	3732	I7	3744	B8	3758	G4	3765	E2	3782	B15	3858	B9	3875	D12	3882	F1	3890	F10	4849	G13	6875	D8	7812	D9	7860	B15
1875	E8	1882	E7	2852	I8	2863	A6	2872	D8	2880	D10	3700	I7	3707	I10	3715	D10	3733	I7	3746	B9	3759	G4	3766	D3	3809	H2	3859	B9	3876	C11	3883	F5	3891	F10	4876	D12	6876	D12	7821-A	F2	7861	C14
1876	E7	1883	E7	2853	H9	2864	I3	2873	D6	2881	D10	3701	F2	3708	I10	3716	I3	3734	I7	3750	A6	3760	G4	3770	A15	3814	D12	3860	A6	3877	F10	3884	F5	3893	F10	5802	H4	6877	E12	7821-B	F4	7873	D9
1877	E3	2814	F6	2854	H3	2865	I4	2874	G4	2882	B8	3702	F5	3710	D5	3718	H8	3740	A6	3751	A6	3761	G4	3771	A14	3831	H11	3861	A7	3878	E6	3885	F1	3898	D7	6871	E8	6878	E8	7822-A	D4	7874	C12
1878	D3	2829	F2	2858	A5	2867	B8	2875	D5	2883	E3	3703	F1	3711	I10	3719	D2	3741	A6	3755	G2	3762	E4	3772	B14	3851	C6	3864	A5	3879	D1	3886	D5	3899	E12	6872	E8	6879	H10	7822-B	D2	7875	D12
1878	G3	2830	C8	2860	A9	2868	F5	2876	A6	2893	G11	3704	F5	3712	H4	3730	I7	3742	B6	3756	G2	3763	D4	3780	B15	3854	A9	3865	F6	3880	D1	3887	D7	4813	G13	6873	E8	7805-A	A7	7850	A14	7876	I8

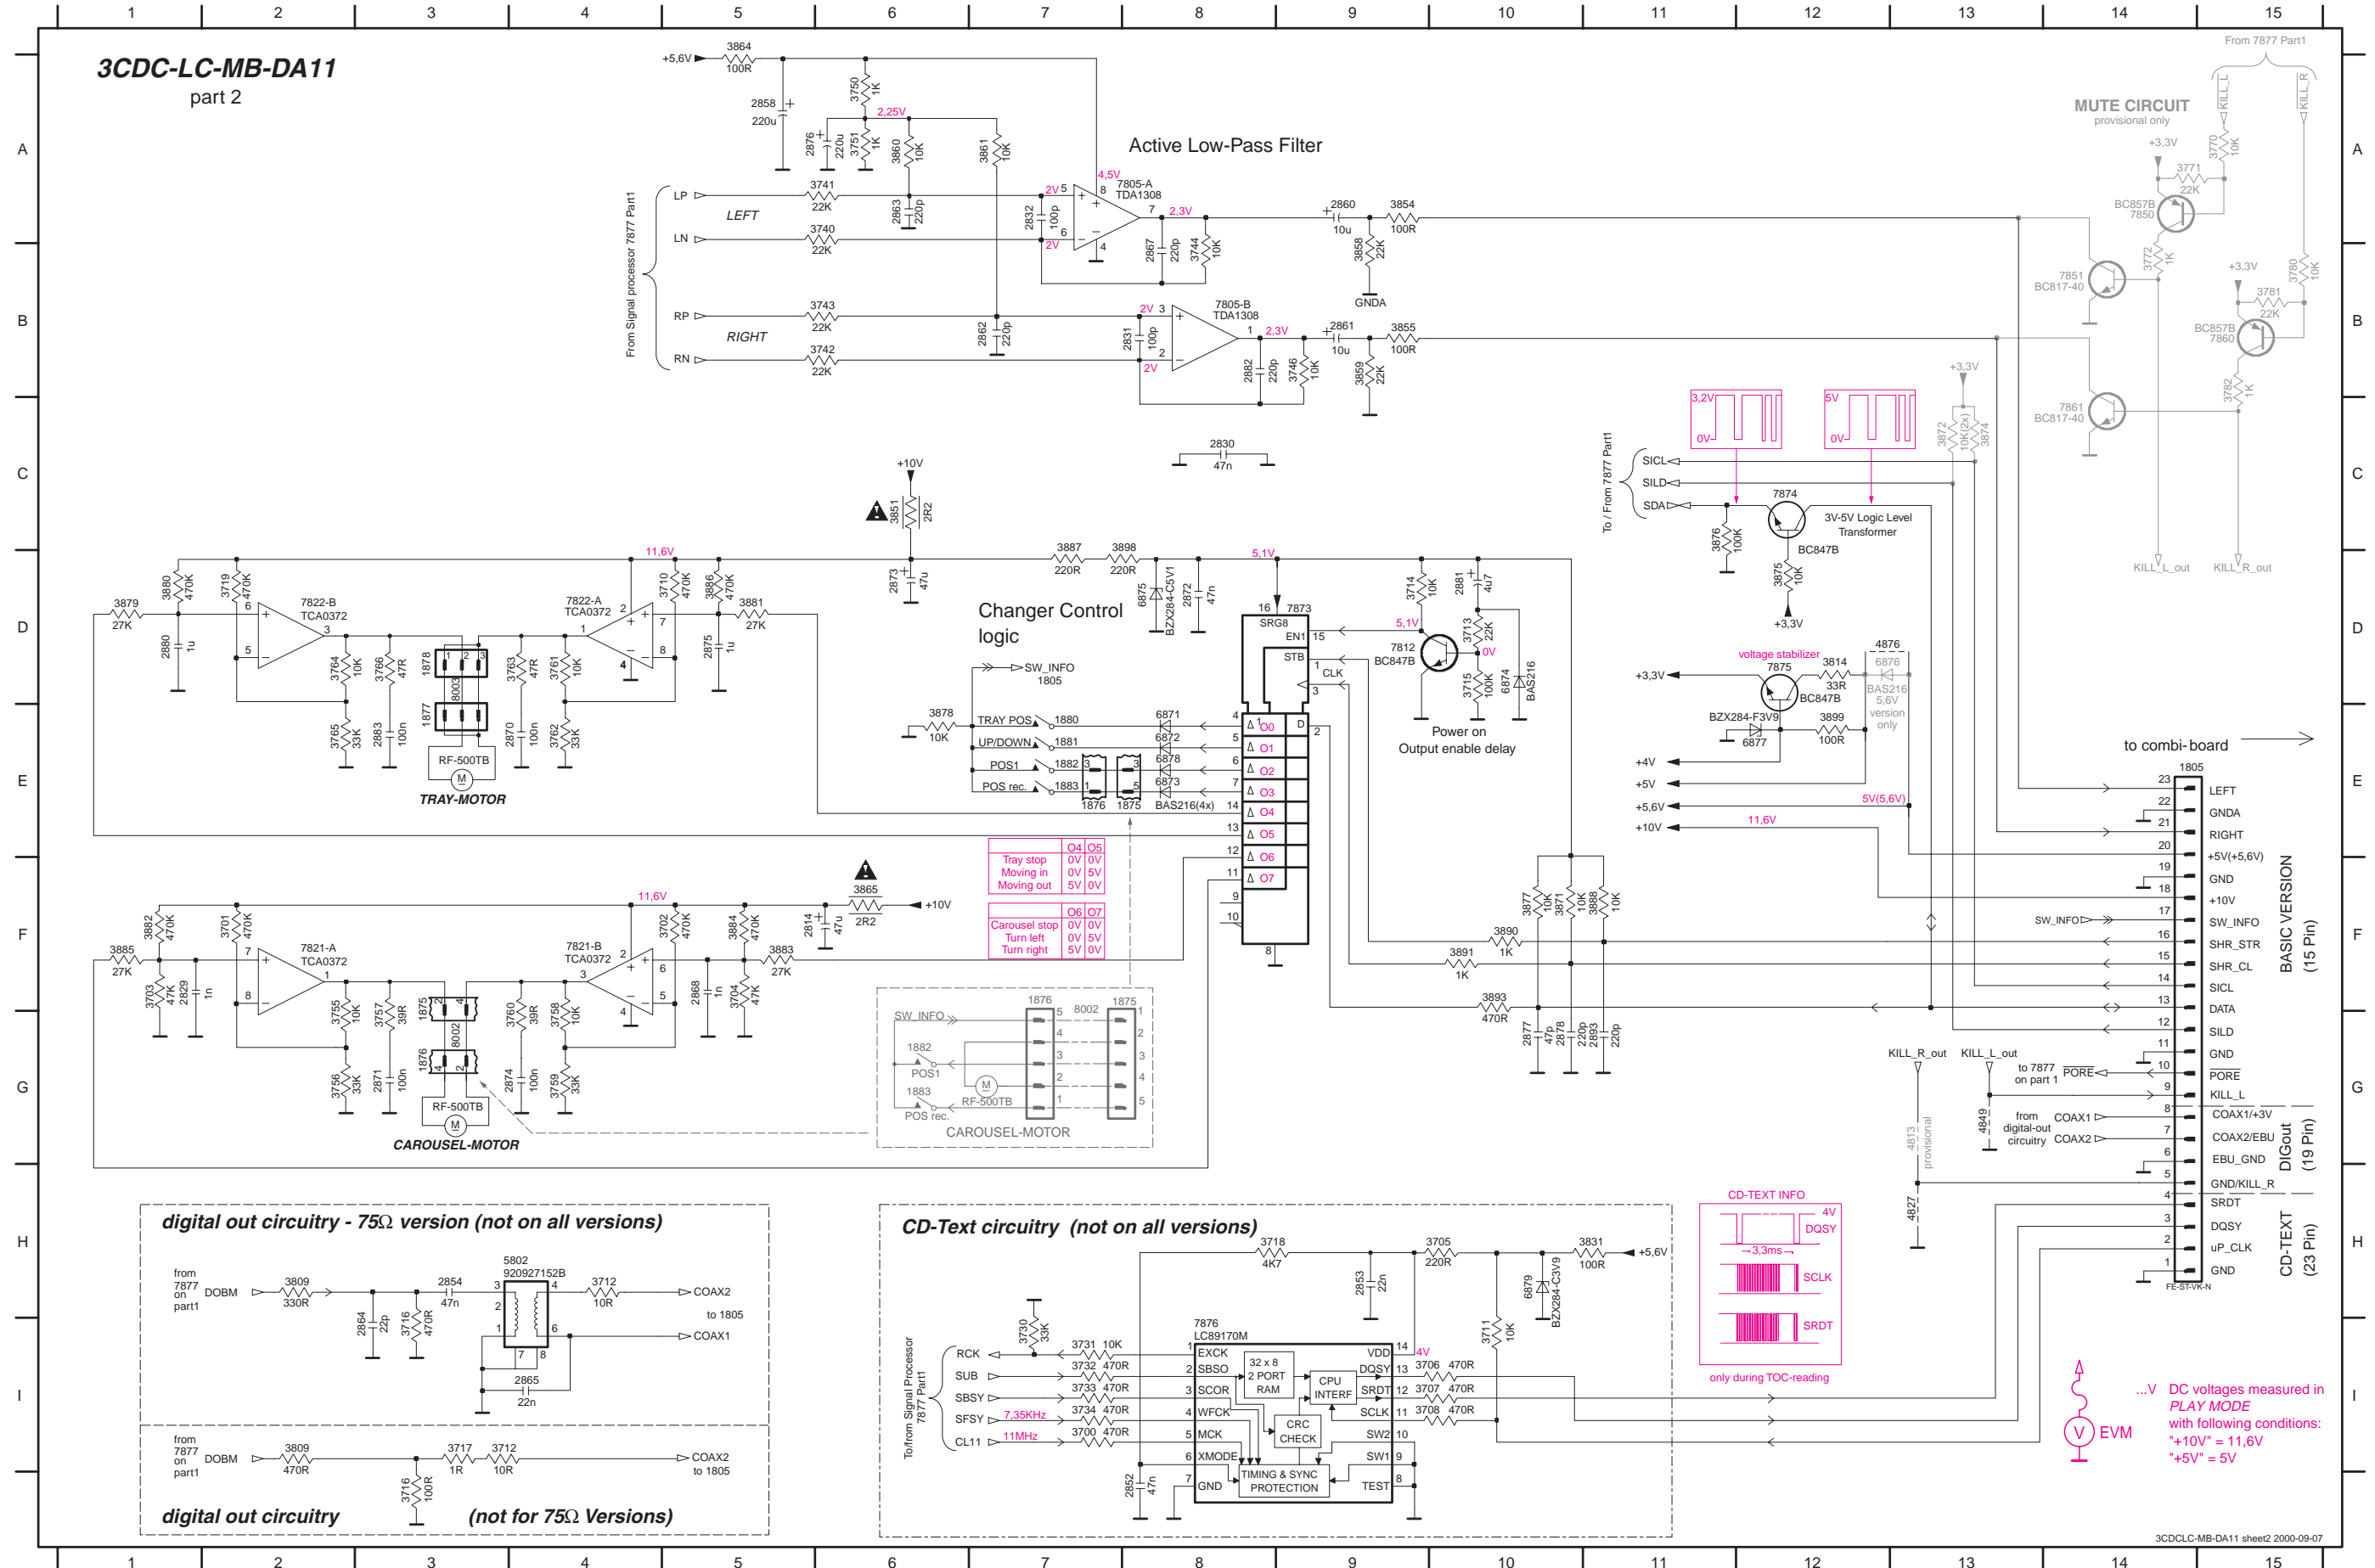

EXPLODED VIEW (3CDC-LC-DA11 MODULE)

MECHANICAL PARTS Loader → this page

- 20 3103 304 66500 DRAWER
- 21 3140 114 29070 PRESSURE RING-DA11
- 23 3140 111 21270 METAL RING-DA11
- 30 3103 304 66560 SUPPORT
- 31 4822 529 10386 DAMPER - RUBBER (Rear)
- 32 4822 529 10387 DAMPER - RUBBER (Front)
- 33 3103 304 06970 WASHER
- 35 3103 309 05310 CD DRIVE DA11T3C
- 41 3103 304 66480 FRAME
- 42 3103 304 66540 BRACKET-GUIDING
- 43 3103 301 06460 SPRING-GUIDING
- 44 3103 304 06890 GEAR-3
- 45 3103 304 06980 NAIL FIXATION
- 46 3103 304 06880 GEAR-2
- 47 3103 304 66530 BRACKET-LOAD
- 48 3103 304 06910 CAM
- 49 3103 304 66510 GUIDING
- 51 3103 304 06900 GEAR-4
- 52 3103 304 06870 GEAR-1
- 53 3103 304 06960 PULLEY-FRAME
- 54 3103 304 66910 DRIVING-BELT-DRAWER
- 55 4822 361 10753 TRAY MOTOR
- 56 4822 502 12548 SCREW M2,6X3,5
- 57 3103 304 69880 COVER-DA11
- 59 4822 466 12146 RUBBER

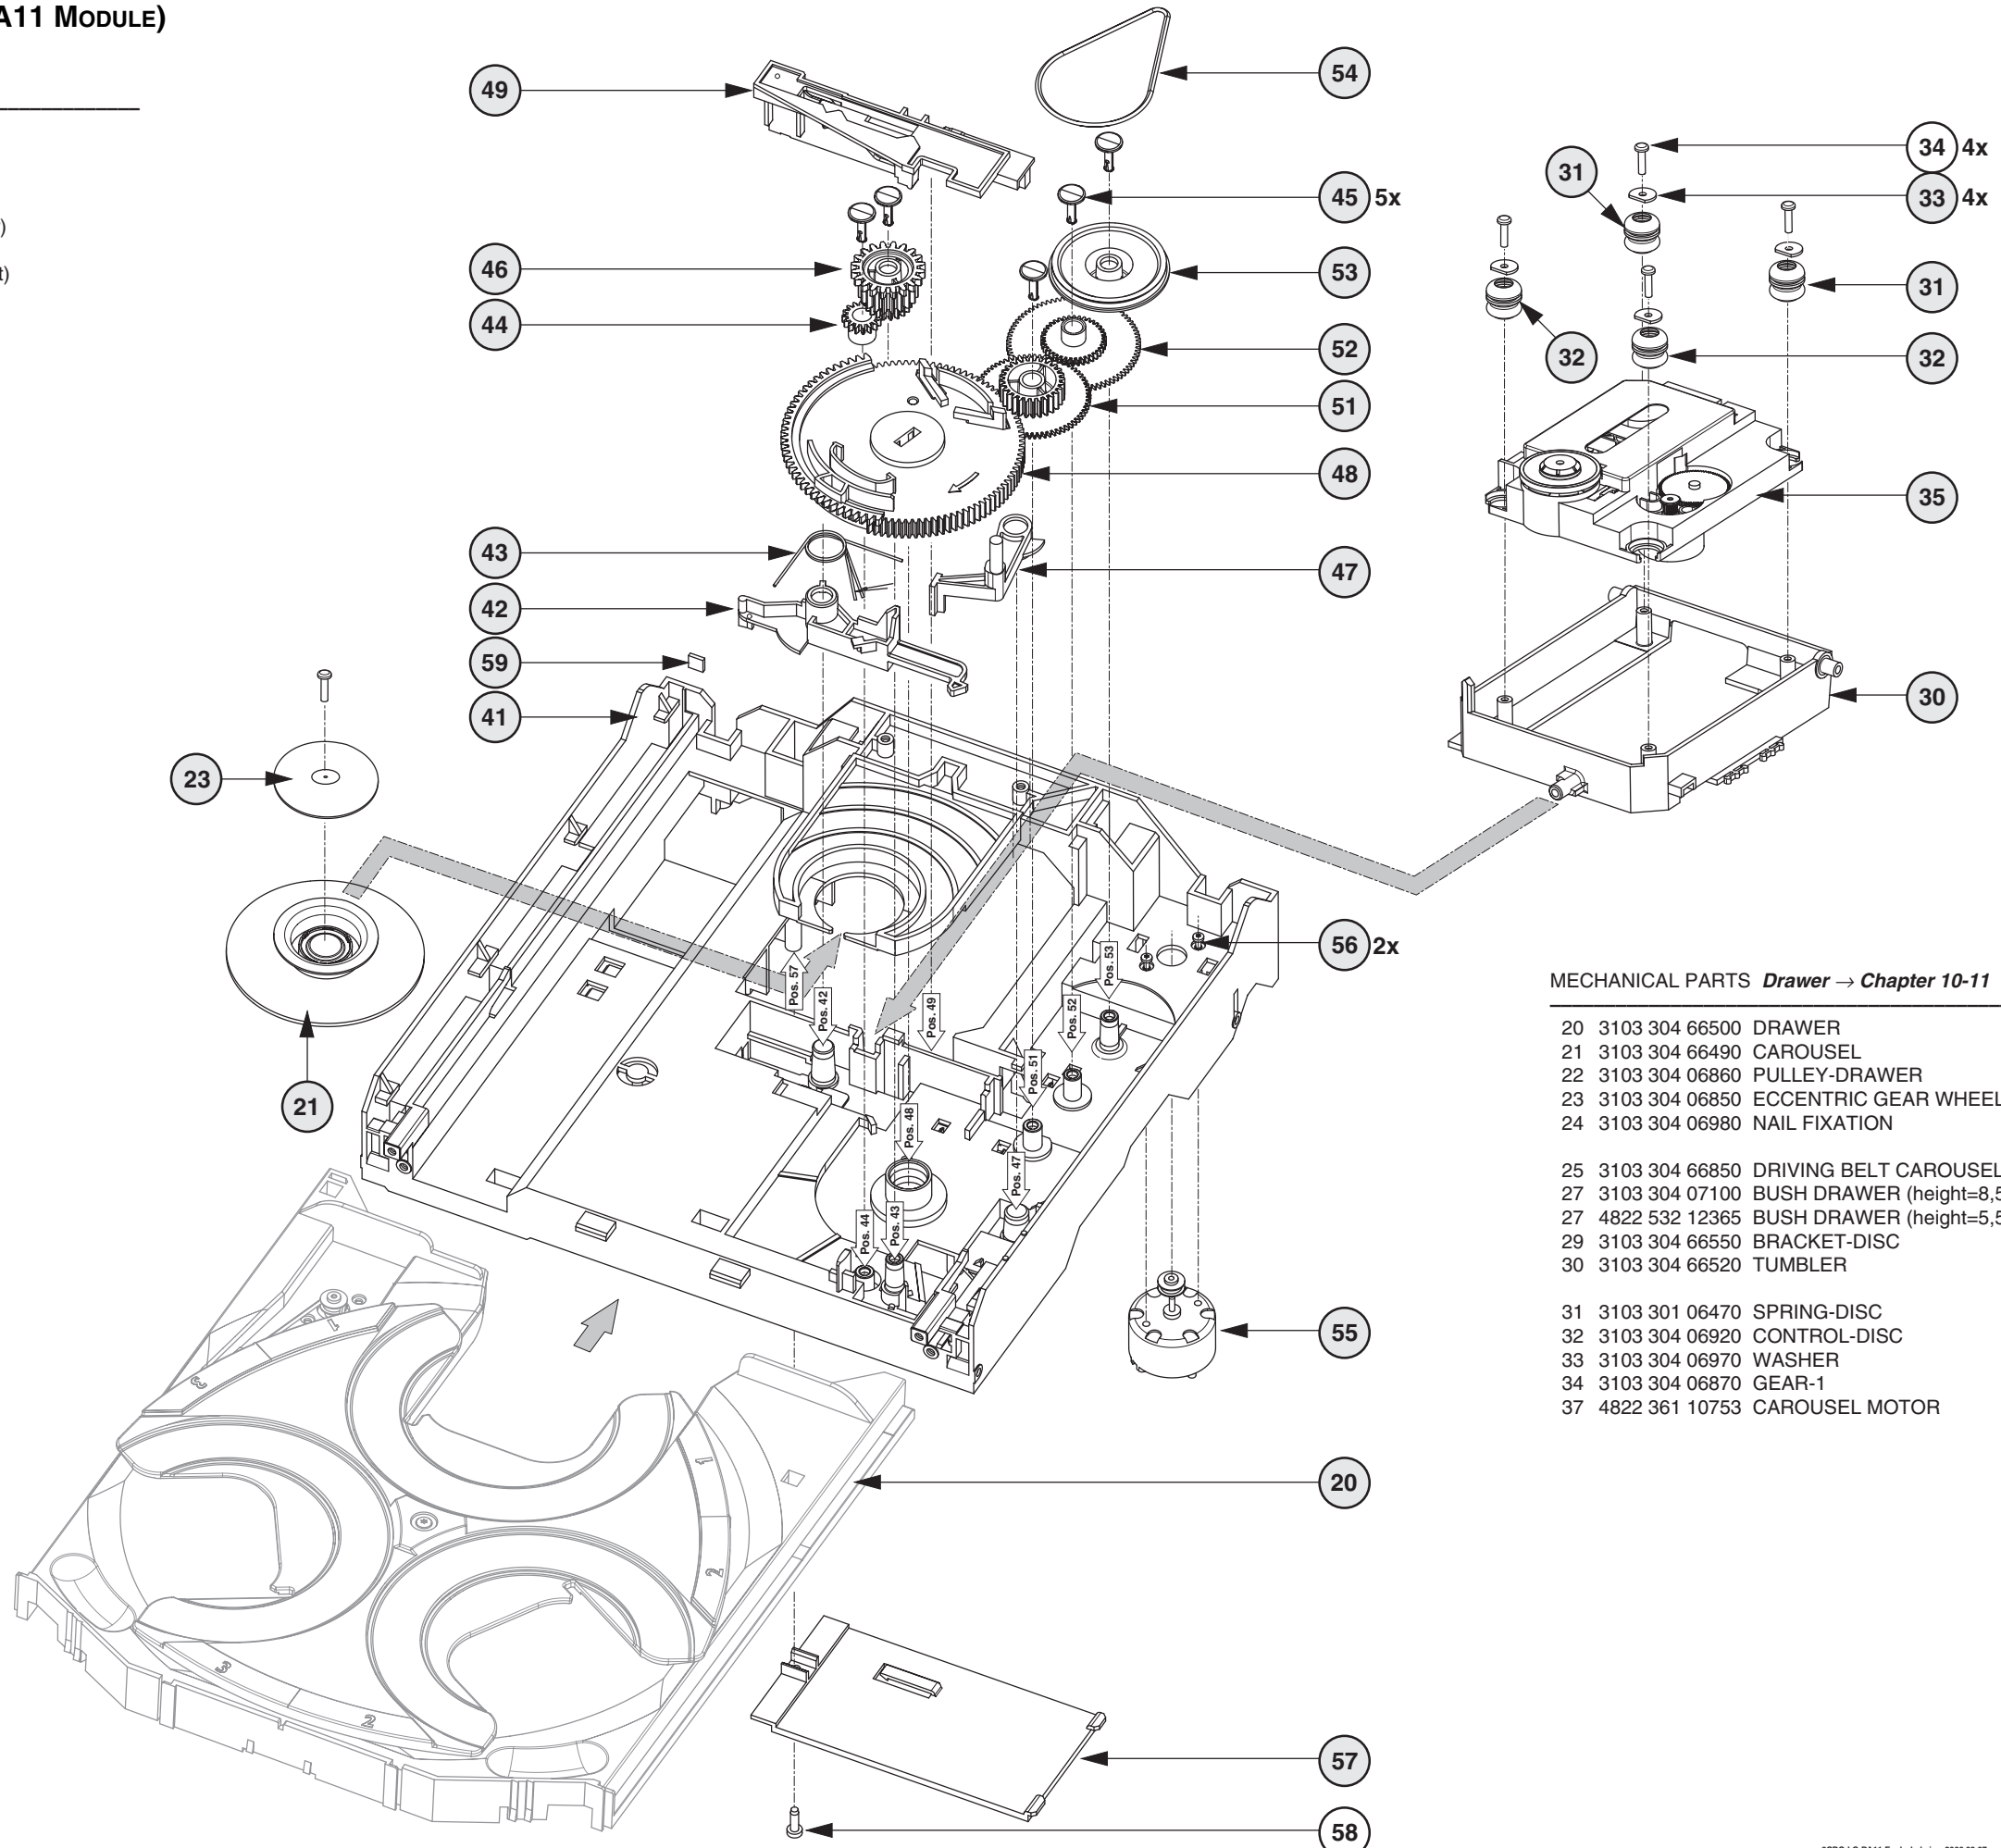


MECHANICAL PARTS Drawer → Chapter 10-11


- 20 3103 304 66500 DRAWER
- 21 3103 304 66490 CAROUSEL
- 22 3103 304 06860 PULLEY-DRAWER
- 23 3103 304 06850 ECCENTRIC GEAR WHEEL
- 24 3103 304 06980 NAIL FIXATION
- 25 3103 304 66850 DRIVING BELT CAROUSEL
- 27 3103 304 07100 BUSH DRAWER (height=8,5mm,d=16mm)
- 27 4822 532 12365 BUSH DRAWER (height=5,5mm,d=9,4mm)
- 29 3103 304 66550 BRACKET-DISC
- 30 3103 304 66520 TUMBLER
- 31 3103 301 06470 SPRING-DISC
- 32 3103 304 06920 CONTROL-DISC
- 33 3103 304 06970 WASHER
- 34 3103 304 06870 GEAR-1
- 37 4822 361 10753 CAROUSEL MOTOR

- X** spare part
- Y** non spare part

Drawer bottom view

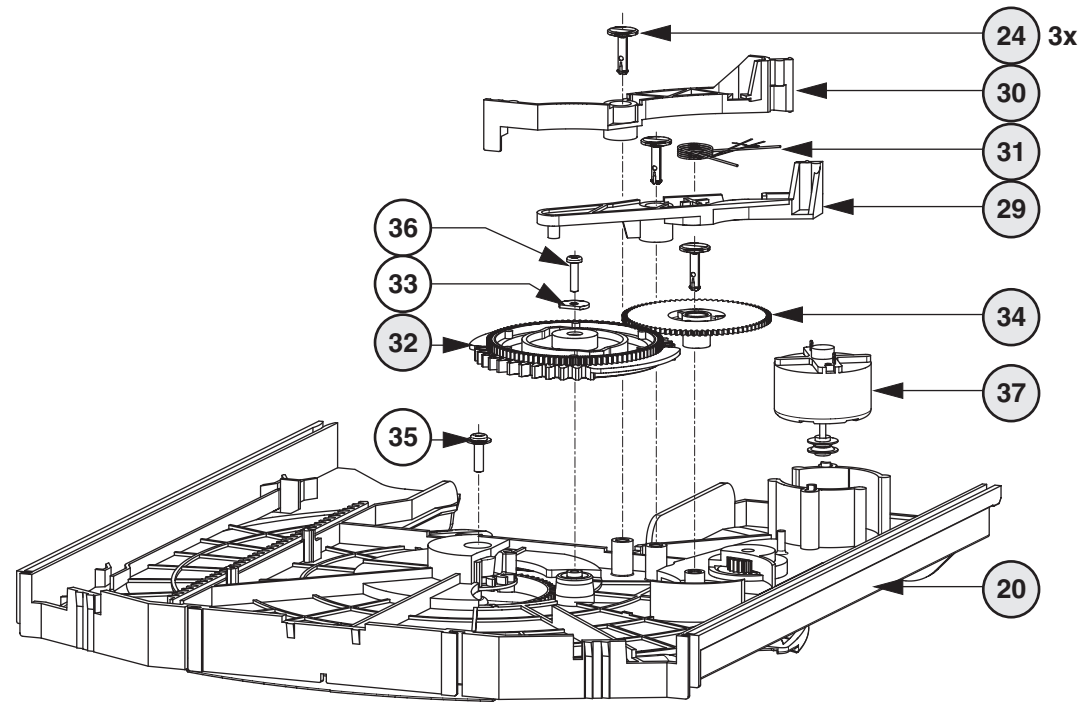

Drawer top view

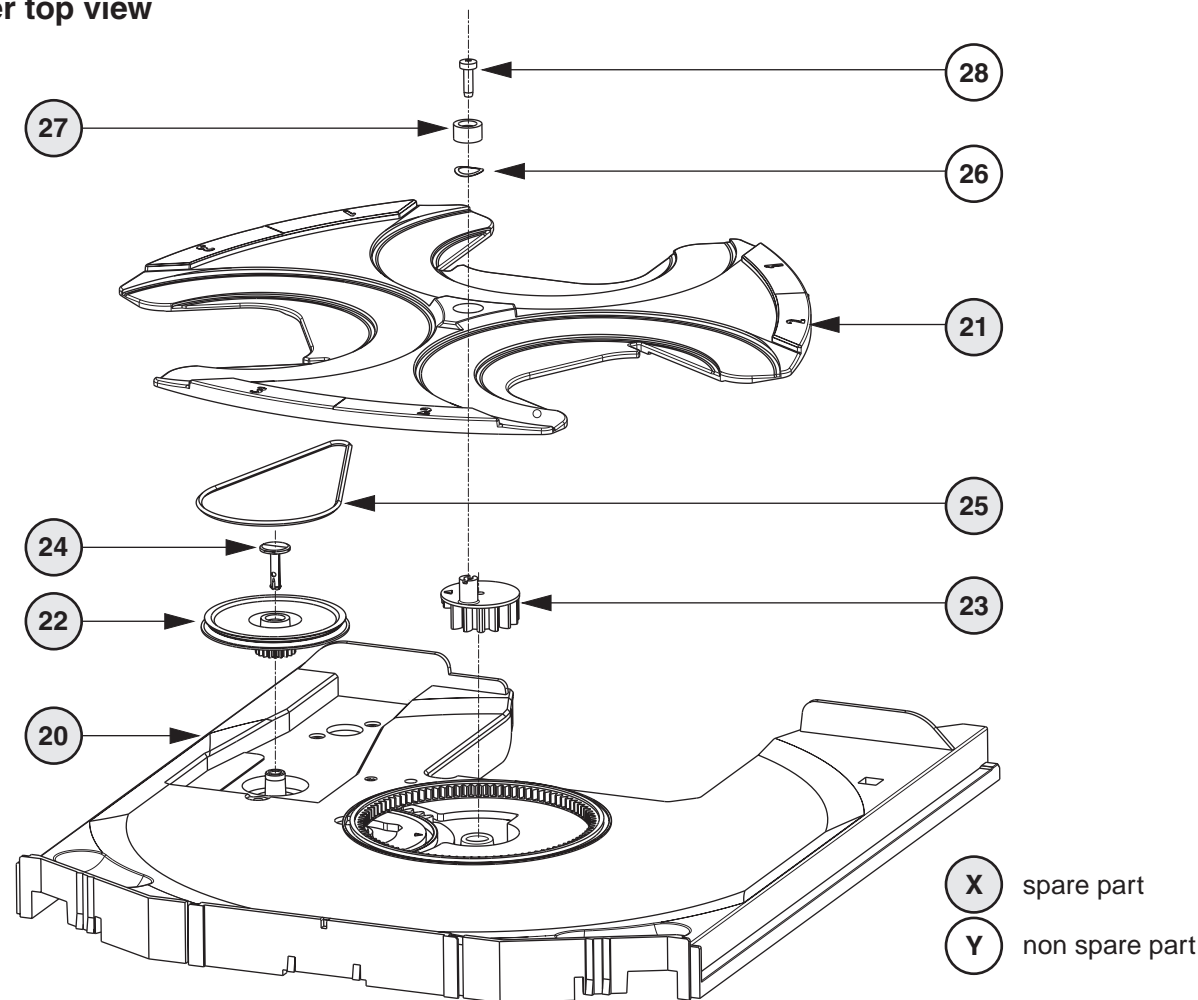

ELECTRICAL PARTSLIST 3CDC-LC-MB-DA11 MODULE

MISCELLANEOUS


37	4822 361 10753	CARROUSEL MOTOR
55	4822 361 10753	CARROUSEL MOTOR
1800	2422 025 12133	FLEX FOIL CONNECTOR 16PIN
1805	4822 265 10979	FLEX FOIL CONNECTOR 15PIN
1805	4822 265 11545	FLEX FOIL CONNECTOR 19PIN
1875	4822 267 10958	FLEX FOIL CONNECTOR 5P
1876	2422 025 08332	FLEX FOIL CONNECTOR 5P
1880	4822 276 13503	SWITCH, Tray in endposition
1881	4822 276 13503	SWITCH, Drive up/down
1882	4822 276 13503	SWITCH, Position 1
1883	4822 276 13503	SWITCH, Position recogiced
8002	3103 308 91990	FLEX FOIL CABLE 5P, 200mm
8005	3103 308 92620	FLEX FOIL CABLE 16P, 170mm
8005	3103 308 91980	FLEX FOIL CABLE 15P, 170mm

CAPACITORS

2800	4822 126 14508	180pF	5%	50V
2801	4822 126 13883	220pF	5%	50V
2802	4822 126 14508	180pF	5%	50V
2803	4822 126 13883	220pF	5%	50V
2804	3198 024 44730	47nF	5%	50V
2805	4822 126 13883	220pF	5%	50V
2806	4822 126 13883	220pF	5%	50V
2807	4822 126 14508	180pF	5%	50V
2808	4822 126 13883	220pF	5%	50V
2809	4822 126 13883	220pF	5%	50V
2810	4822 122 31765	100pF	5%	50V
2811	4822 126 13883	220pF	5%	50V
2812	4822 126 14585	100nF	10%	50V
2813	4822 126 14585	100nF	10%	50V
2814	4822 124 40433	47µF	20%	25V
2815	4822 126 13879	220nF	20%	16V
2816	4822 126 13344	1,5nF	5%	63V
2817	4822 126 14585	100nF	10%	50V
2818	4822 126 13344	1,5nF	5%	63V
2819	4822 124 40433	47µF	20%	25V
2820	4822 124 40433	47µF	20%	25V
2821	4822 126 14585	100nF	10%	50V
2822	2222 861 15222	2,2nF	10%	50V
2823	4822 126 14225	56pF	5%	50V
2824	4822 126 13751	47nF	10%	50V
2825	5322 126 11583	10nF	10%	63V
2826	4822 124 12362	47µF	20%	4V
2828	4822 124 12362	47µF	20%	4V
2829	5322 126 11578	1nF	10%	63V
2830	4822 126 13751	47nF	10%	50V
2831	4822 122 31765	100pF	5%	50V
2832	4822 122 31765	100pF	5%	50V
2833	4822 126 11671	33pF	5%	50V
2834	4822 126 11671	33pF	5%	50V
2835	3198 024 44730	47nF	5%	50V
2836	4822 126 14585	100nF	10%	50V
2837	4822 124 40433	47µF	20%	25V
2838	4822 124 40248	10µF	20%	63V
2839	4822 126 14585	100nF	10%	50V
2840	4822 126 14585	100nF	10%	50V
2841	5322 122 31647	1nF	10%	63V
2842	4822 126 13883	220pF	5%	50V
2843	4822 126 14585	100nF	10%	50V
2844	5322 122 34099	470pF	10%	63V
2845	4822 126 14585	100nF	10%	50V

CAPACITORS

2846	4822 126 13883	220pF	5%	50V
2847	4822 126 14585	100nF	10%	50V
2848	4822 122 33753	150pF	5%	50V
2849	4822 124 40769	4,7µF	20%	100V
2850	5322 126 11578	1nF	10%	63V
2851	4822 124 42383	220µF	20%	4V
2854	4822 126 13751	47nF	10%	50V
2855	4822 126 14508	180pF	5%	50V
2856	4822 126 11669	27pF	10%	50V
2857	4822 126 13883	220pF	5%	50V
2858	4822 124 12245	220µF	20%	16V
2859	4822 126 13883	220pF	5%	50V
2860	4822 124 11947	10µF	20%	16V
2861	4822 124 11947	10µF	20%	16V
2862	4822 126 13883	220pF	5%	50V
2863	4822 126 13883	220pF	5%	50V
2864	4822 122 33761	22pF	5%	50V
2865	4822 126 14494	22nF	10%	25V
2866	4822 122 33753	150pF	5%	50V
2867	4822 126 13883	220pF	5%	50V
2868	5322 126 11578	1nF	10%	63V
2869	3198 024 44730	47nF	5%	50V
2870	4822 126 14585	100nF	10%	50V
2871	4822 126 14585	100nF	10%	50V
2872	3198 024 44730	47nF	5%	50V
2873	4822 124 40433	47µF	20%	25V
2874	4822 126 14585	100nF	10%	50V
2875	3198 017 41050	1µF	20%	10V
2876	4822 124 12245	220µF	20%	16V
2877	4822 122 33777	47pF	5%	63V
2878	4822 126 13883	220pF	5%	50V
2879	4822 126 14585	100nF	10%	50V
2880	3198 017 41050	1µF	20%	10V
2881	4822 124 40769	4,7µF	20%	100V
2882	4822 126 13883	220pF	5%	50V
2883	4822 126 14585	100nF	10%	50V
2884	4822 124 40769	4,7µF	20%	100V
2885	4822 124 40769	4,7µF	20%	100V
2887	4822 126 14585	100nF	10%	50V
2888	4822 124 40769	4,7µF	20%	100V
2891	4822 126 13883	220pF	5%	50V
2892	5322 126 10223	4,7nF	10%	63V
2893	4822 122 33575	220pF	5%	50V
2900	4822 126 14508	180pF	5%	50V
3701	4822 051 30474	470kΩ	5%	0,06W
3702	4822 051 30474	470kΩ	5%	0,06W
3703	4822 117 12925	47kΩ	1%	0,06W
3704	4822 117 12925	47kΩ	1%	0,06W
3709	4822 117 10833	10kΩ	1%	0,1W
3710	4822 051 30474	470kΩ	5%	0,06W
3712	4822 051 30109	10Ω	5%	0,06W
3713	4822 051 20223	22kΩ	5%	0,1W
3714	4822 051 30103	10kΩ	5%	0,06W
3715	4822 117 13632	100kΩ	1%	0,06W
3716	4822 051 30471	470Ω	5%	0,06W
3719	4822 051 30474	470kΩ	5%	0,06W
3727	4822 051 30472	4,7kΩ	5%	0,06W
3728	4822 051 30472	4,7kΩ	5%	0,06W
3730	4822 051 20333	33kΩ	5%	0,1W

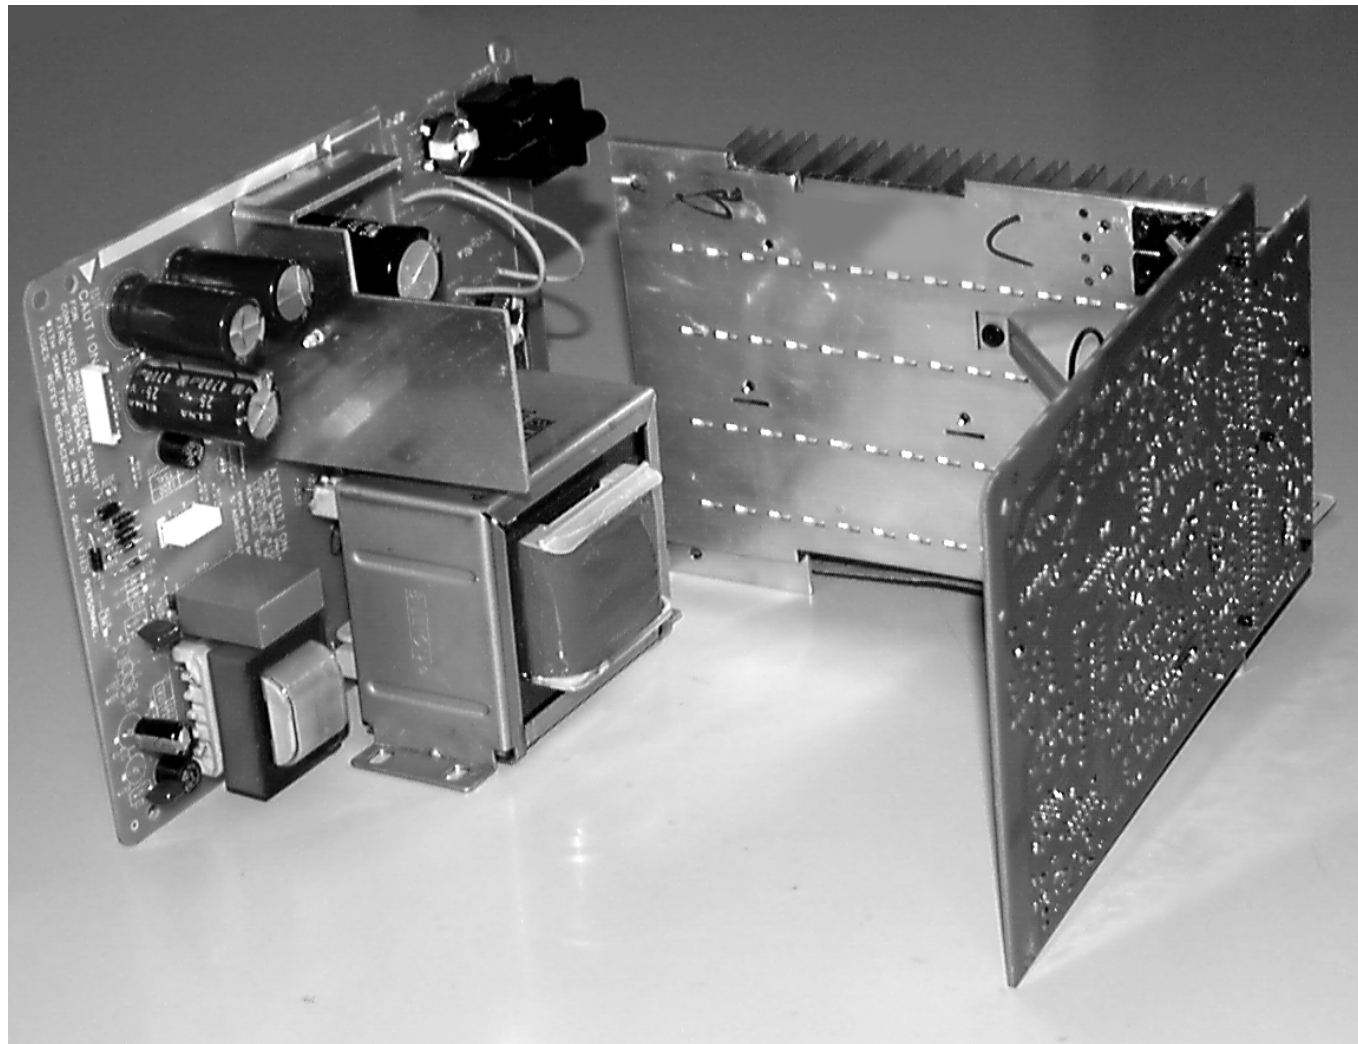

POWER 2001 Module

(30 - 70W Version)

stage .7

TABLE OF CONTENTS

Brief Circuit Description.....	11-1
Block Diagram.....	11-3
Component Layout <i>Mains part</i>	11-4
Circuit Diagram <i>Mains part</i>	11-5
Component Layout <i>Power part</i>	11-6
Circuit Diagram <i>Power part</i>	11-7
Partslst	11-8

Circuit details:



Amplifier:

Attention: In the POWER 2001 module the power amplifier IC AN7591 is used as a bridge-amplifier.
Any connection from output to ground will destroy the output stages!

- Via the AMP_ON control line, connected to pins 6 (Stby), the power amplifiers are switched on/off by the μ P.
High level (approx. 4,5V): power amplifiers switched on
Low level (approx. 0V): power amplifiers switched off
- Super class G - operation

The power amplifiers operate as so-called super class G - amplifiers:
The supply pins 12 (Vcc) are not just connected to one fixed DC-supply as in conventional amplifiers.
Dependent on the output power there are three different DC-voltages supplied to the power amplifiers:
⇒ +C1 (+20V) for low output power
⇒ +B1 (+29V) for medium output power
⇒ +A1 (+41V for high output power

Principle / benefit of Super Class G

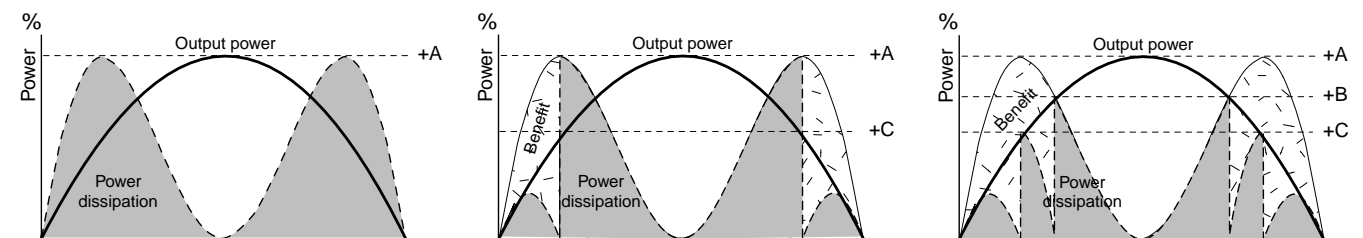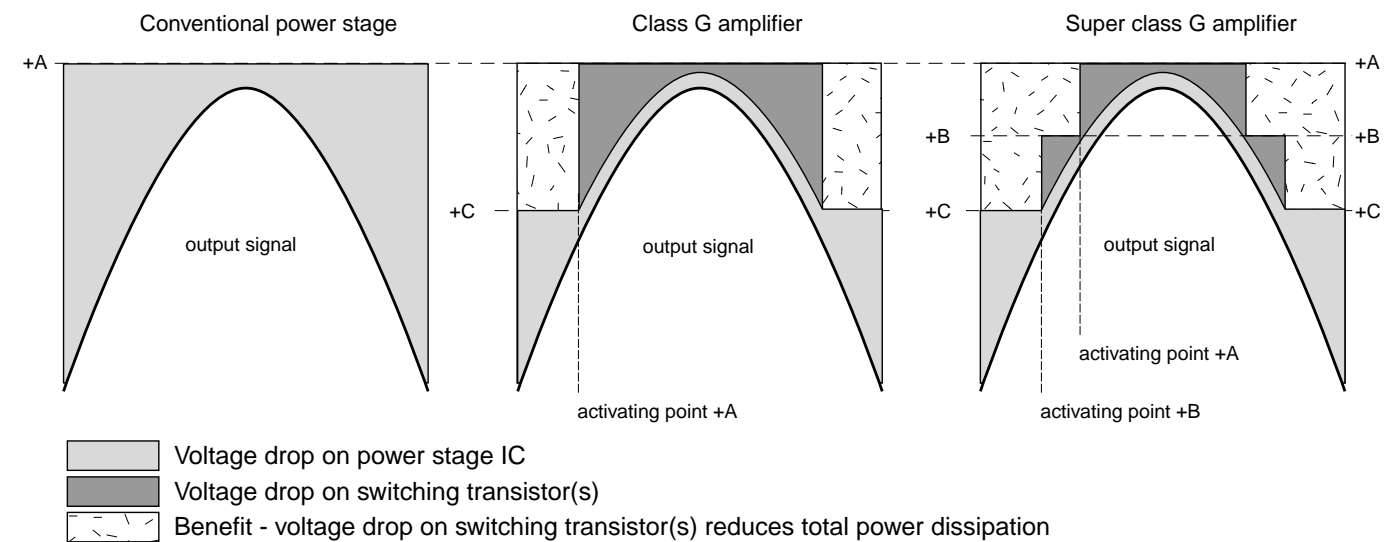

Circuit details continued:

• **Low power standby feature**

An additional small standby transformer, reduces power consumption in standby-mode. In case power is switched on, the control line ECO is low → relay 1210 is activated → contacts 1 and 2 are closed → transformer 5001 is connected to mains. When the set is switched off (standby) the control line ECO is high → relay 1210 is not activated → main transformer is disconnected. Via standby transformer and rectifiers 6210-6214 the supply voltage LOW_PWR_SUP is substituted. This voltage is always available and so the microprocessor is kept running.

• **DC voltages +A1, +B1, +C1**


These voltages supply the Super Class G amplifier, described on previous page. The whole power supply is optimized for the special characteristic of this type of amplifier. For that reason several “tricky” details have been applied to ensure optimal efficiency and symmetrical load to the mains transformer.

Generation of +A1

Common full wave rectifying with bridge rectifier 6202, using 100% secondary winding of mains transformer (pin 10-14).

Generation of +B1


The supply for +B1 consists of one full wave rectifier:
 – 2 diodes of bridge rectifier 6202, with 6200(6220 in parallel) 6201(6221 in parallel) for generation of +B1 using approx. 70% secondary winding of mains transformer (pin 10-13 respectively pin 11-14).
 As example for generation of +B1 see picture 1.

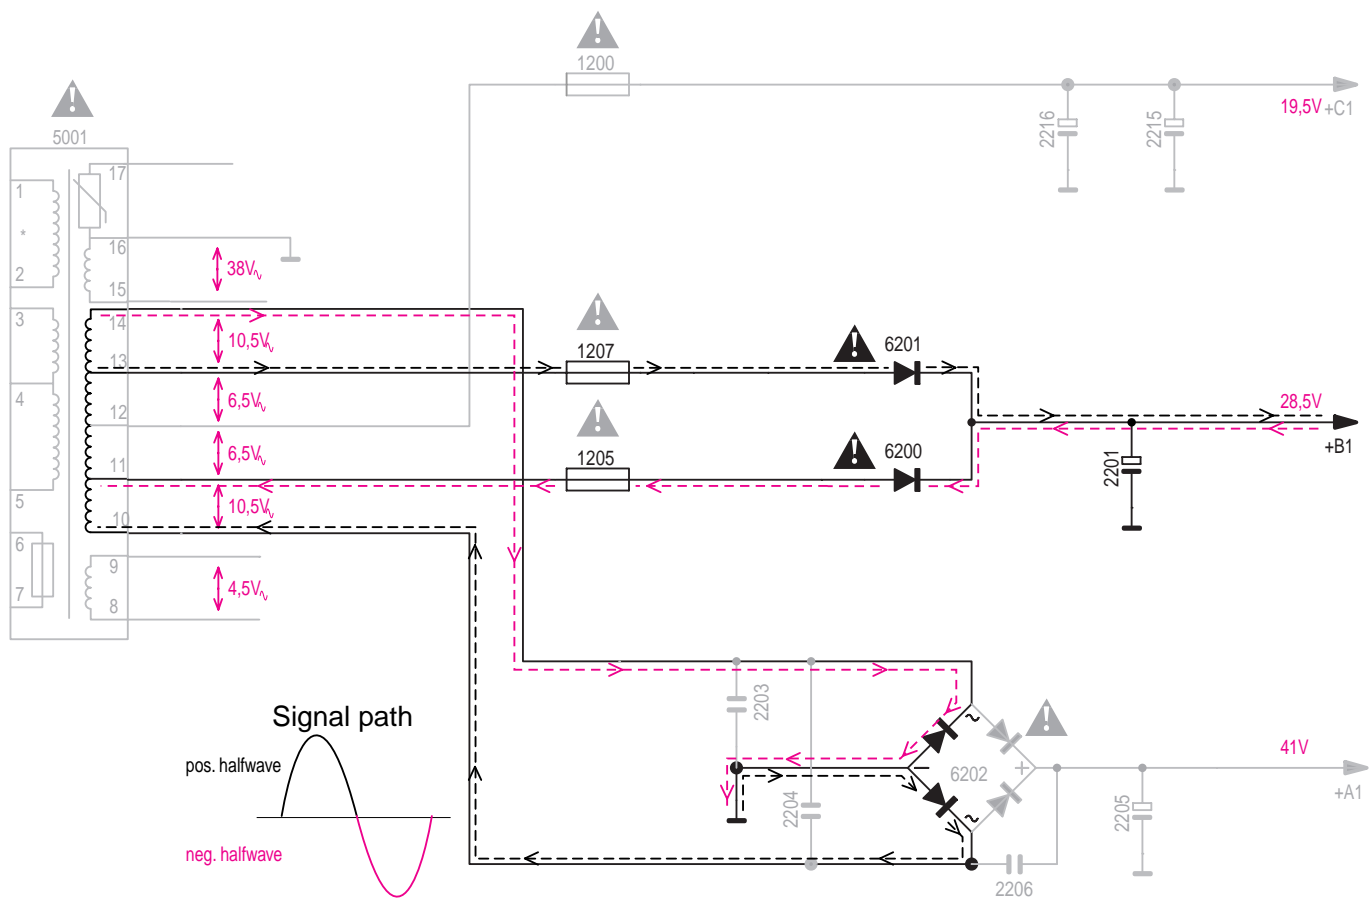


picture 1

Generation of +C1

Full wave rectifying with 2 diodes of bridge rectifier 6202, using 50% secondary winding of mains transformer (pin 13-15/13-11). See picture 2 below.


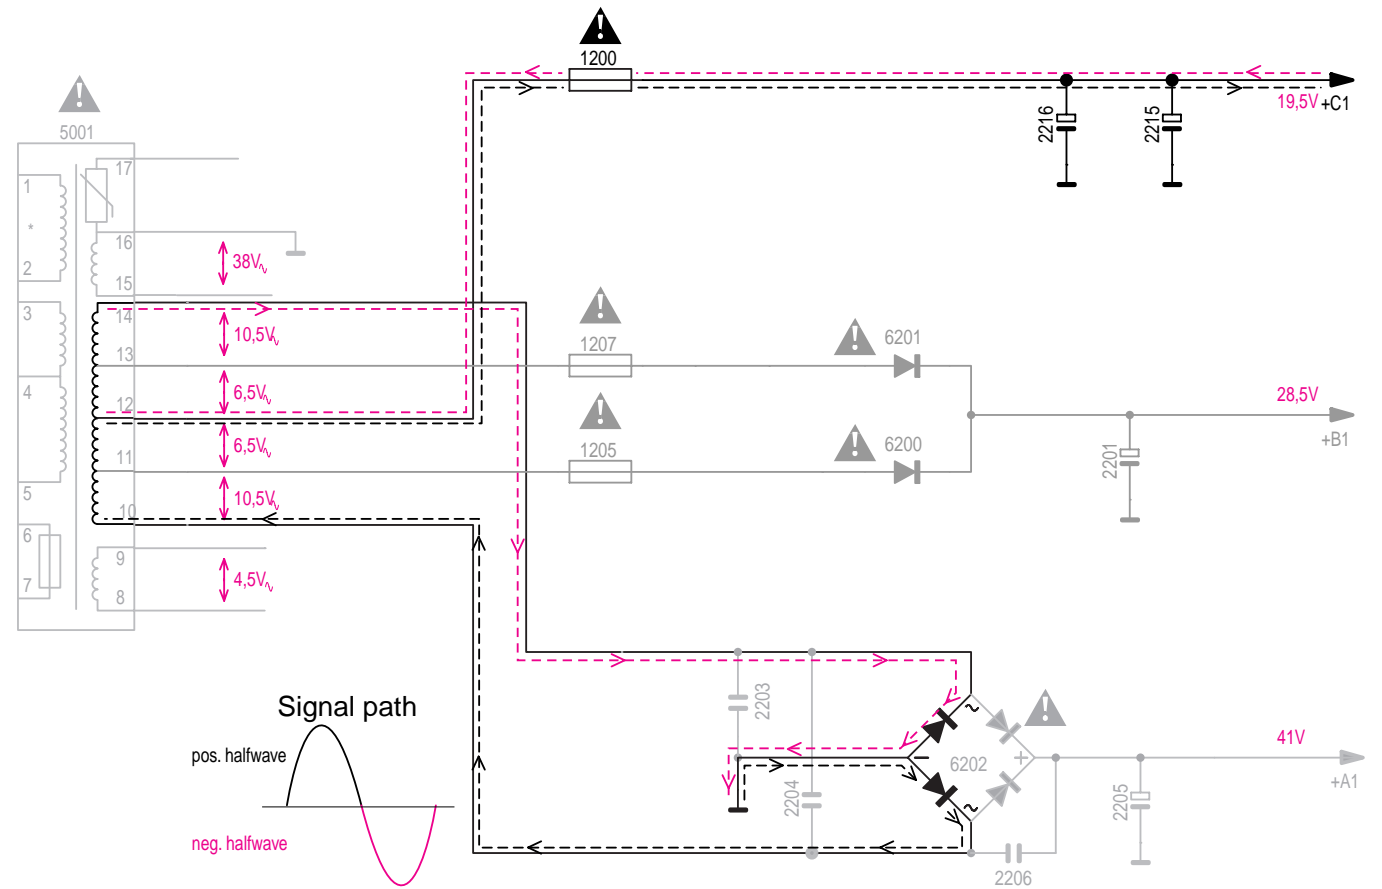


simplified:

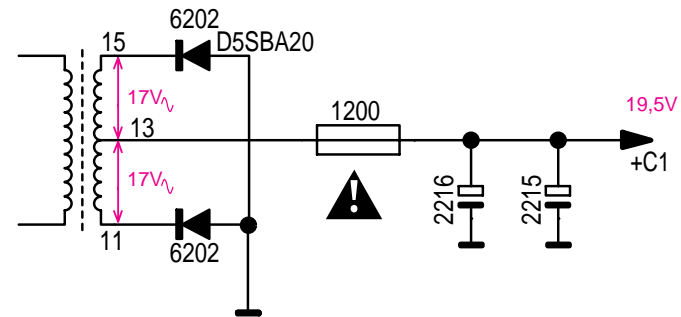


picture 2

Block Diagram

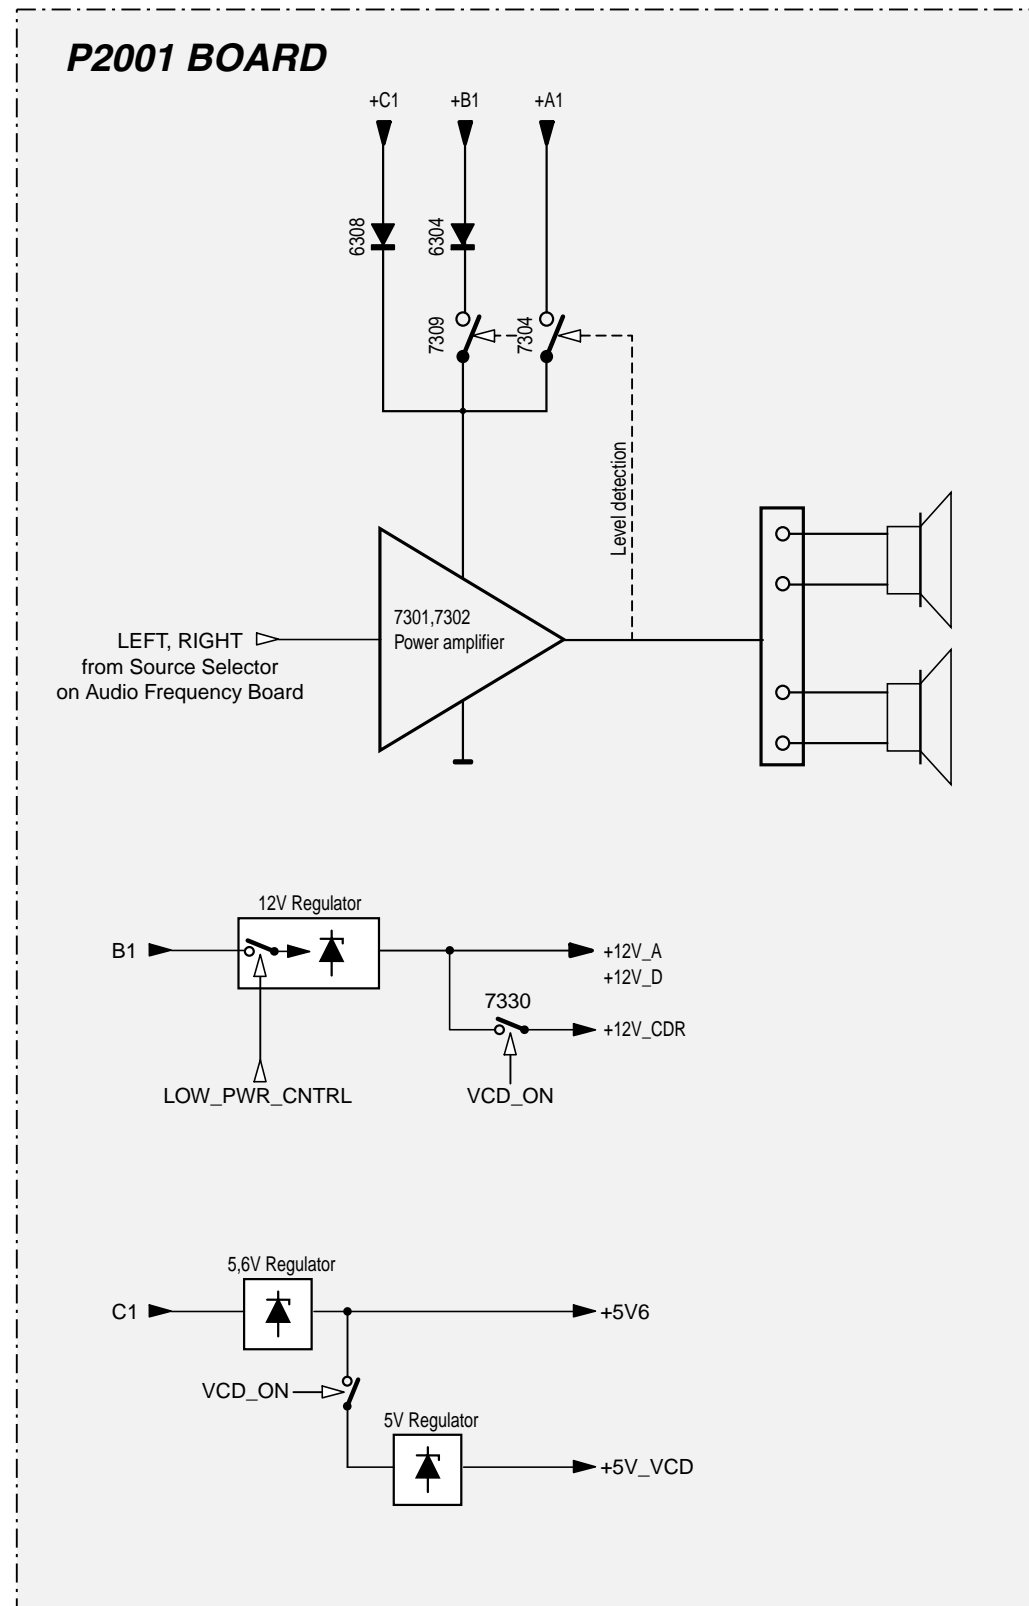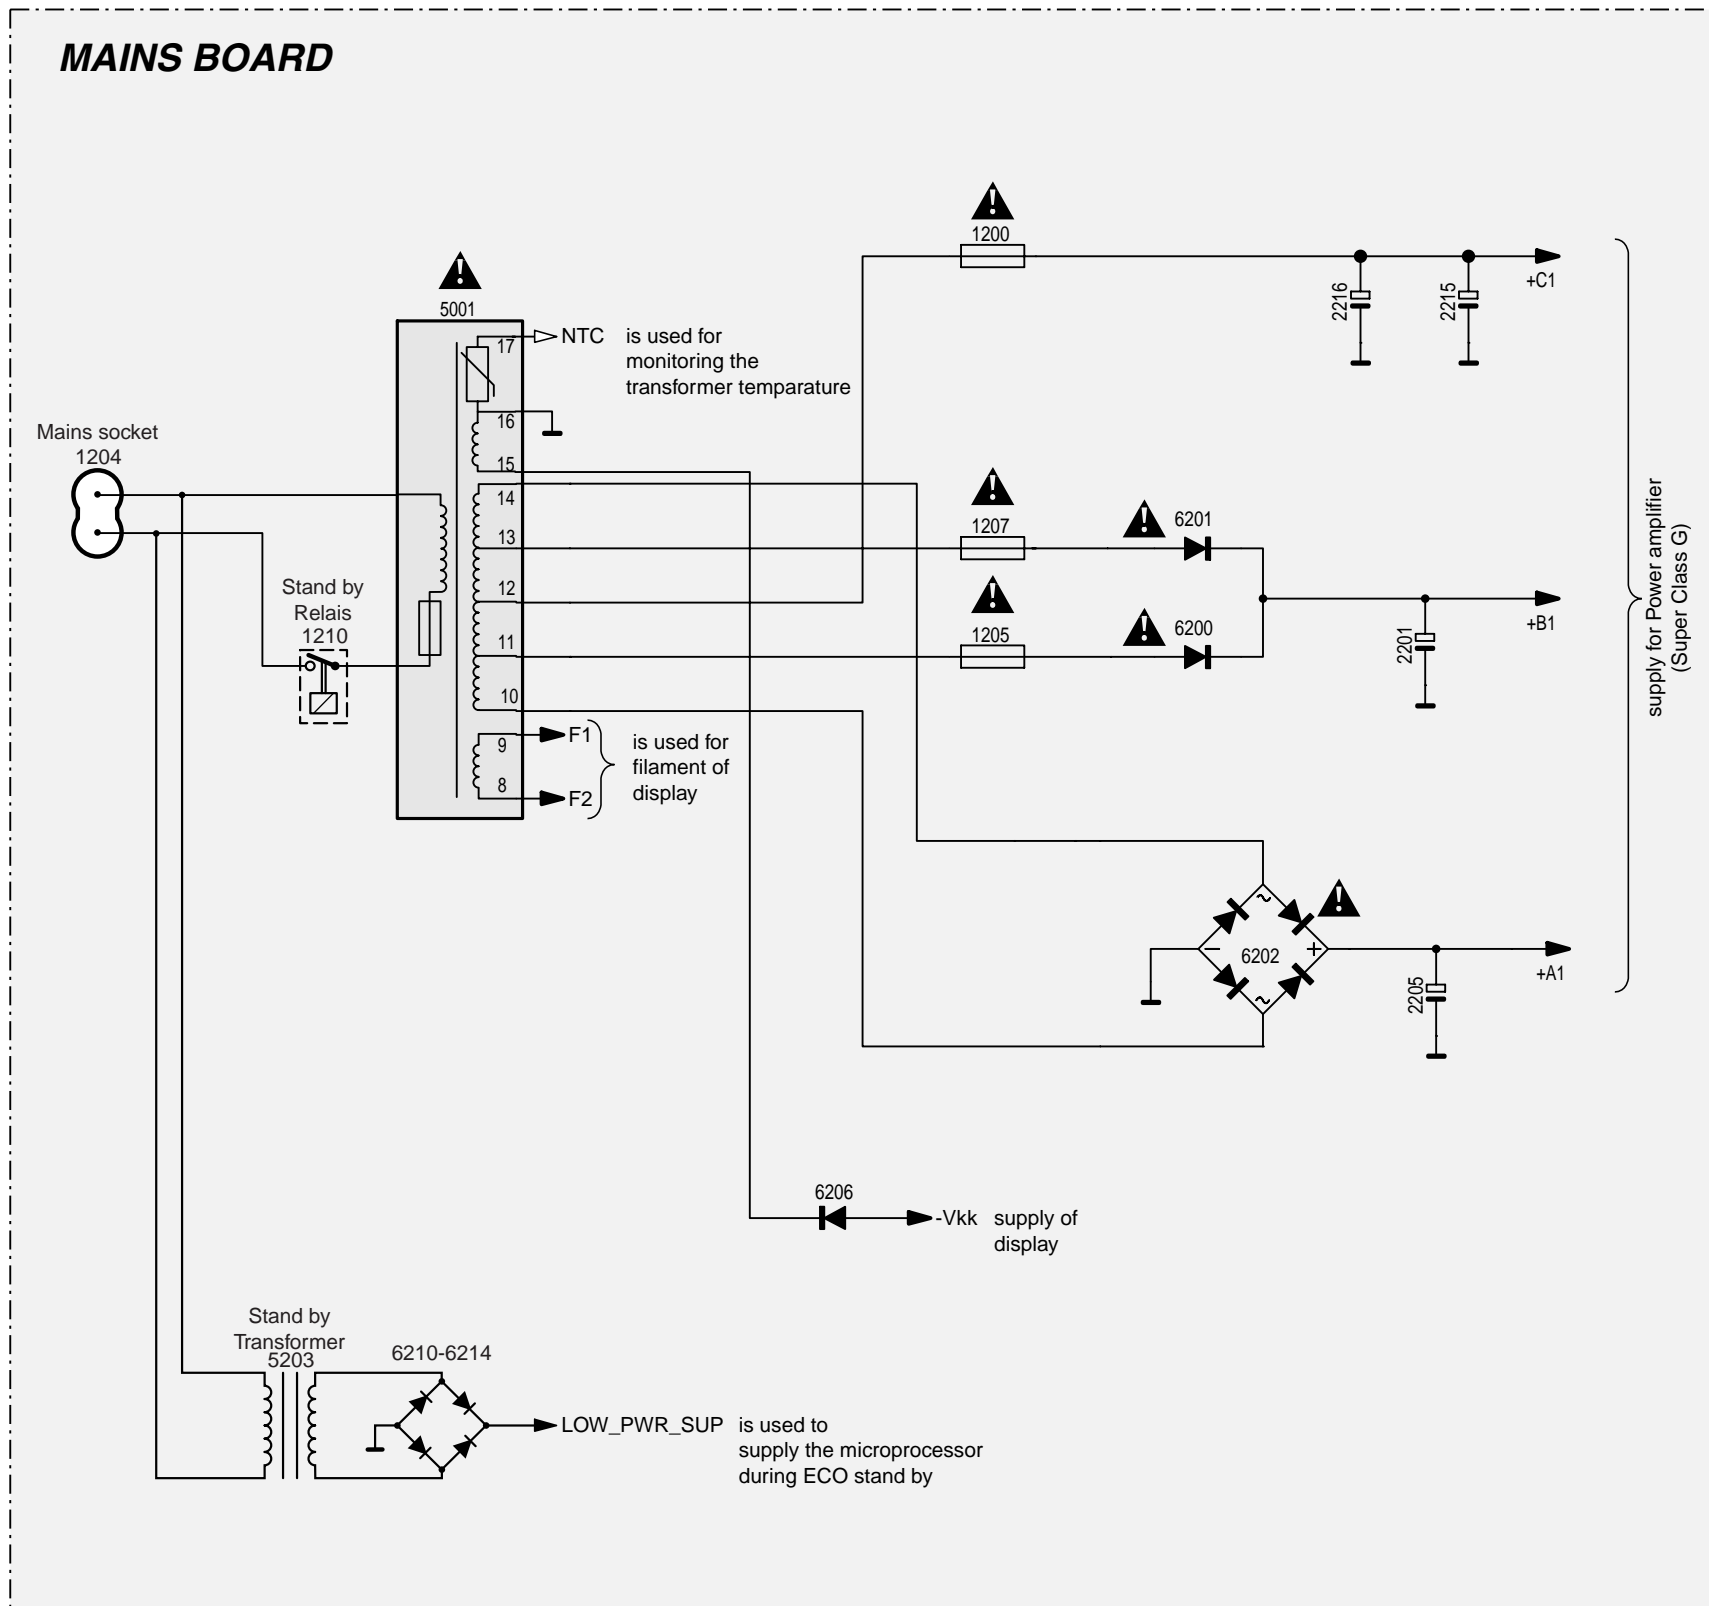

Mains Board Copperside view

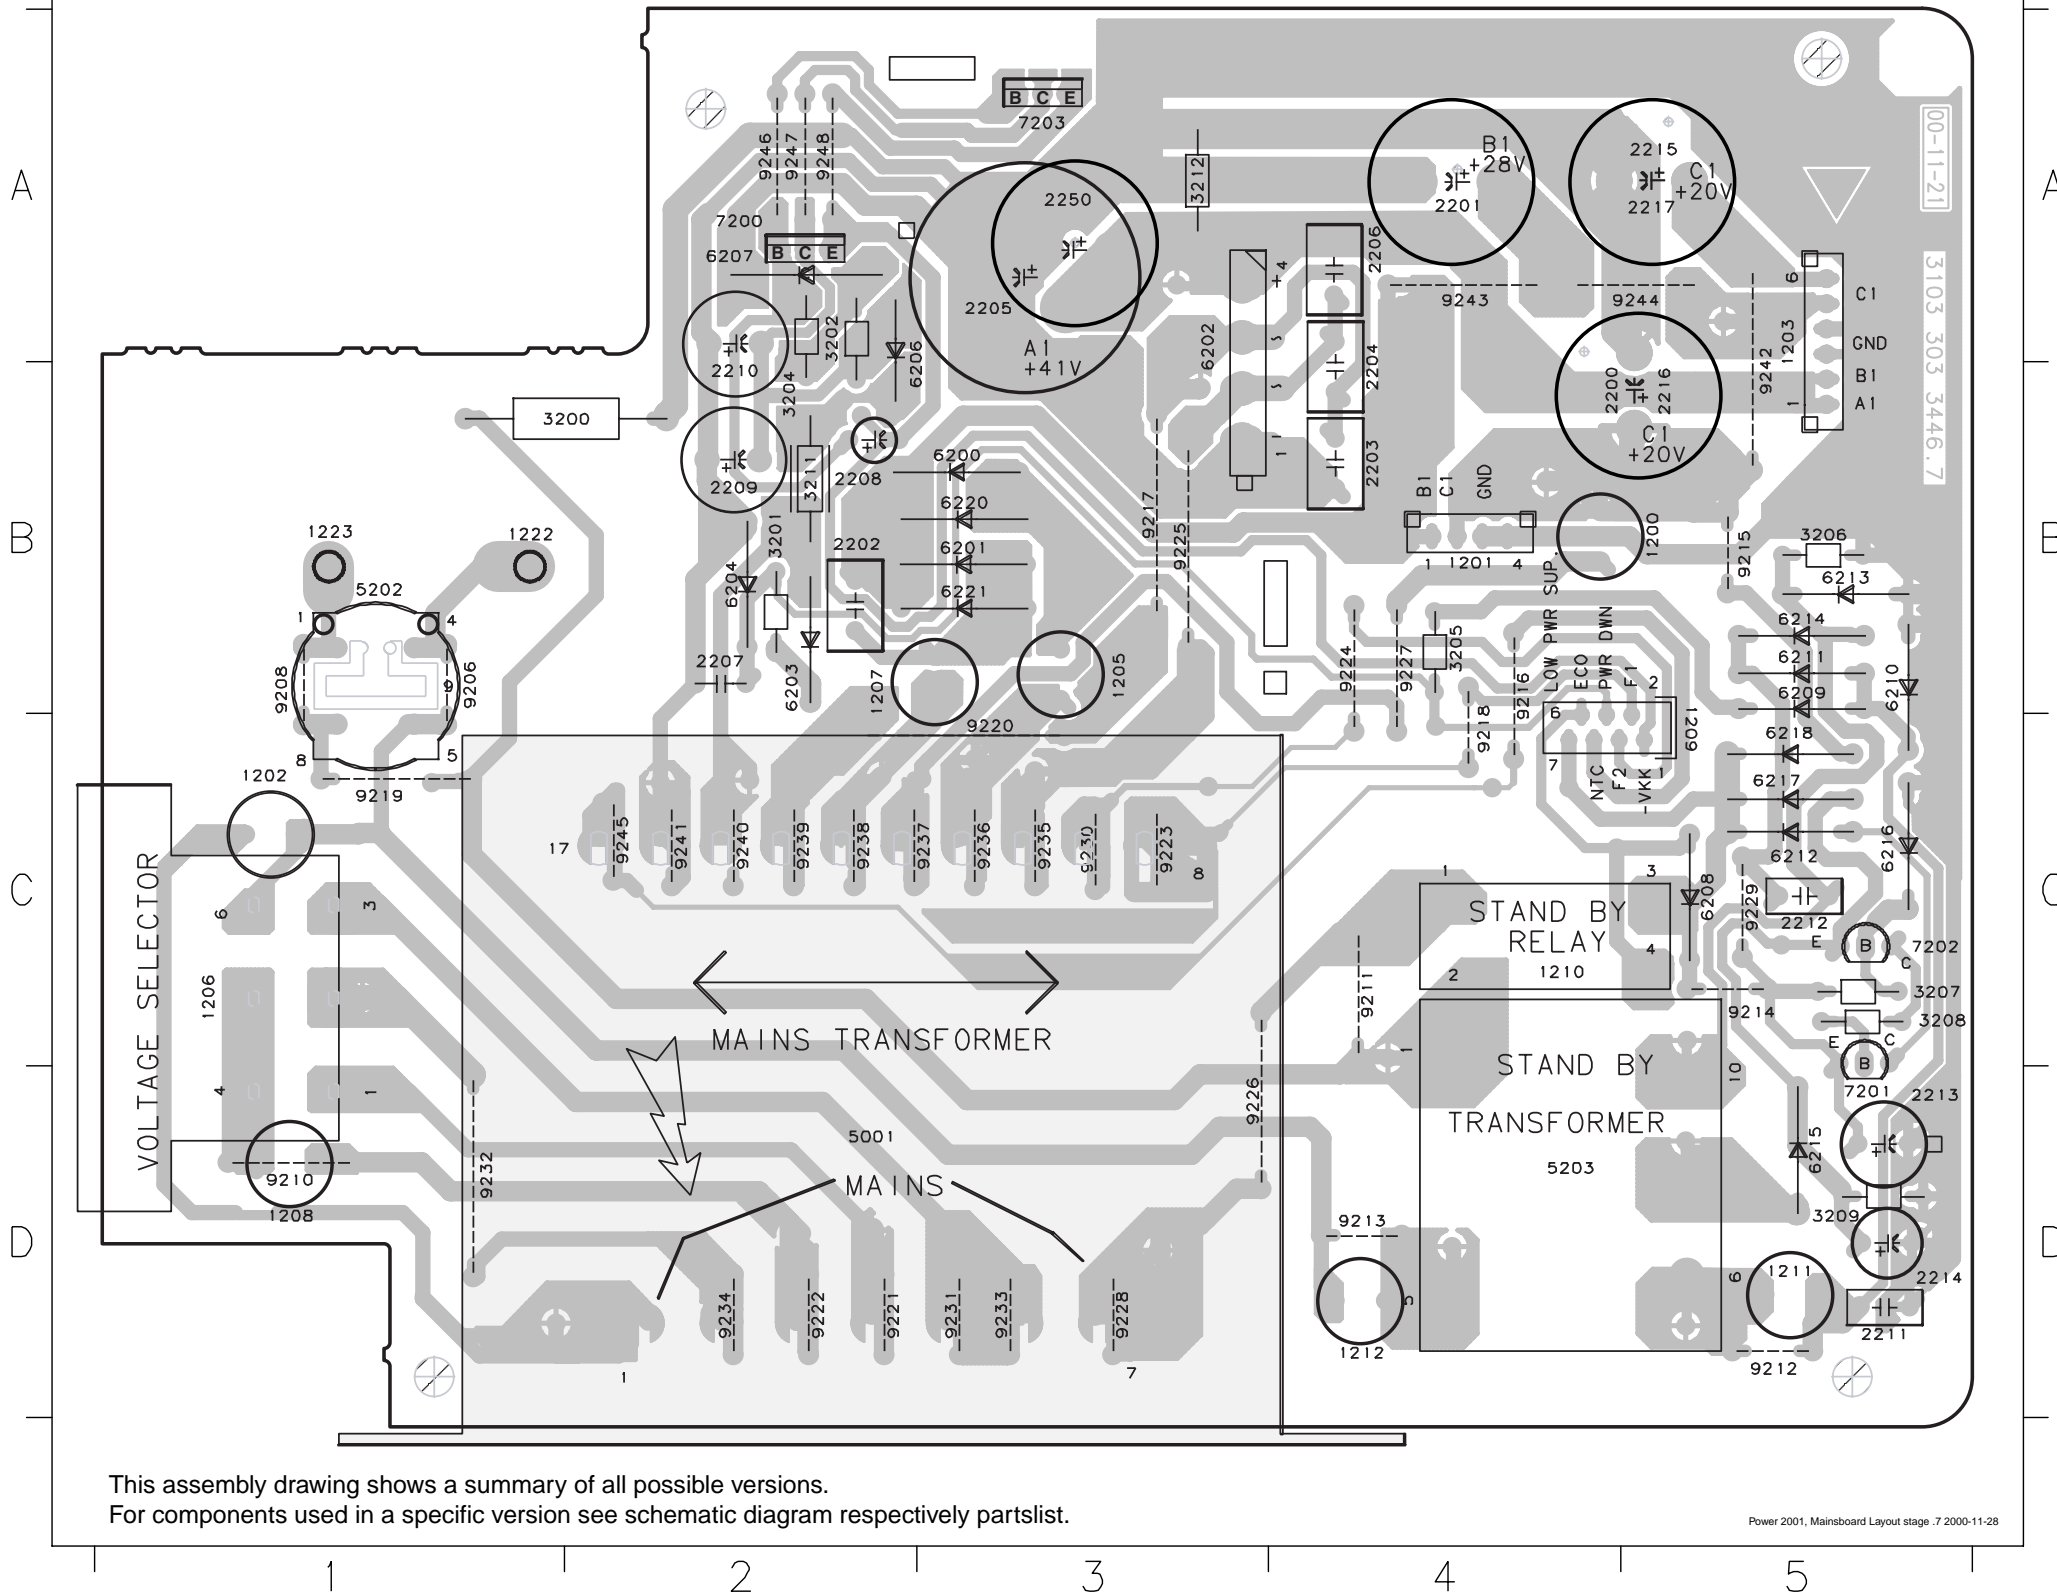


- | | |
|---------|---------|
| 1200 B5 | 6213 B5 |
| 1201 B4 | 6214 B5 |
| 1202 C1 | 6215 D5 |
| 1203 A5 | 6216 C5 |
| 1205 B3 | 6217 C5 |
| 1206 C1 | 6218 C5 |
| 1207 C3 | 6220 B3 |
| 1208 D1 | 6221 B3 |
| 1209 C5 | 7200 A2 |
| 1210 C5 | 7201 D5 |
| 1211 D5 | 7202 C5 |
| 1212 D4 | 7203 A3 |
| 1222 B2 | 9206 B2 |
| 1223 B1 | 9208 B1 |
| 2200 B5 | 9210 D1 |
| 2201 A4 | 9211 D4 |
| 2202 B3 | 9212 D5 |
| 2203 B4 | 9213 D4 |
| 2204 B4 | 9214 C5 |
| 2205 B3 | 9215 B5 |
| 2206 A4 | 9216 B4 |
| 2207 B2 | 9217 B3 |
| 2208 B3 | 9218 C4 |
| 2209 B2 | 9219 C1 |
| 2210 B2 | 9220 C3 |
| 2211 D5 | 9221 D3 |
| 2212 C5 | 9222 D3 |
| 2213 D5 | 9223 C4 |
| 2214 D5 | 9224 B4 |
| 2215 A5 | 9225 B4 |
| 2216 B5 | 9226 D4 |
| 2217 A5 | 9227 B4 |
| 2250 A3 | 9228 D3 |
| 3200 B2 | 9229 C5 |
| 3201 B2 | 9230 C3 |
| 3202 B3 | 9231 D3 |
| 3204 A3 | 9232 D2 |
| 3205 B4 | 9233 D3 |
| 3206 B5 | 9234 D2 |
| 3207 C5 | 9235 C3 |
| 3208 C5 | 9236 C3 |
| 3209 D5 | 9237 C3 |
| 3211 B3 | 9238 C3 |
| 3212 A4 | 9239 C3 |
| 5001 C2 | 9240 C2 |
| 5202 B1 | 9241 C2 |
| 5203 D5 | 9242 B5 |
| 6200 B3 | 9243 A4 |
| 6201 B3 | 9244 A5 |
| 6202 B4 | 9245 C2 |
| 6203 B2 | 9246 A2 |
| 6204 B2 | 9247 A2 |
| 6206 B3 | 9248 A3 |
| 6207 A2 | |
| 6208 C5 | |
| 6209 C5 | |
| 6210 C5 | |
| 6211 B5 | |
| 6212 C5 | |


This assembly drawing shows a summary of all possible versions.
 For components used in a specific version see schematic diagram respectively partslist.

Power 2001, Mainsboard Layout stage 7 2000-11-28

Mains Socket

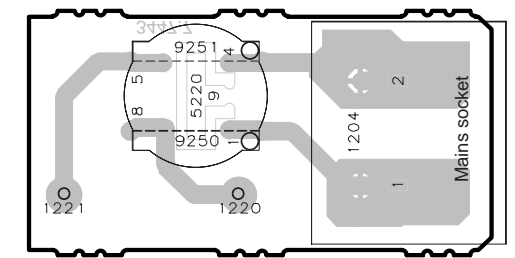


1200 A6	1207 B6	1222 A2	2204 D7	2210 E7	2216 A7	3205 E4	3212 D9	6202 C8	6209 E4	6215 F3	7200 D7	9211 C4
1201 A9	1208 B4	1223 B2	2205 D8	2211 E3	2217 A8	3206 E3	5001 C5	6203 D6	6210 E3	6216 F4	7201 E4	9212 D2
1202 A4	1209 E9	2200 A7	2206 D8	2212 E3	3200 C2	3207 E4	5202 A2	6204 D9	6211 E3	6217 F5	7202 F5	9213 E1
1203 B9	1210 D4	2201 C8	2207 D8	2213 E4	3201 D6	3208 F4	5203 E1	6206 E6	6212 E5	6218 F6	9206 A2	9214 E5
1205 B6	1211 E2	2202 C8	2208 E8	2214 F3	3202 E7	3209 F3	6200 B8	6207 F7	6213 E3	6220 B8	9208 B2	9215 F6
1206 B3	1212 E1	2203 C7	2209 E6	2215 A7	3204 E7	3211 E6	6201 B8	6208 D4	6214 E3	6221 C8	9210 B4	

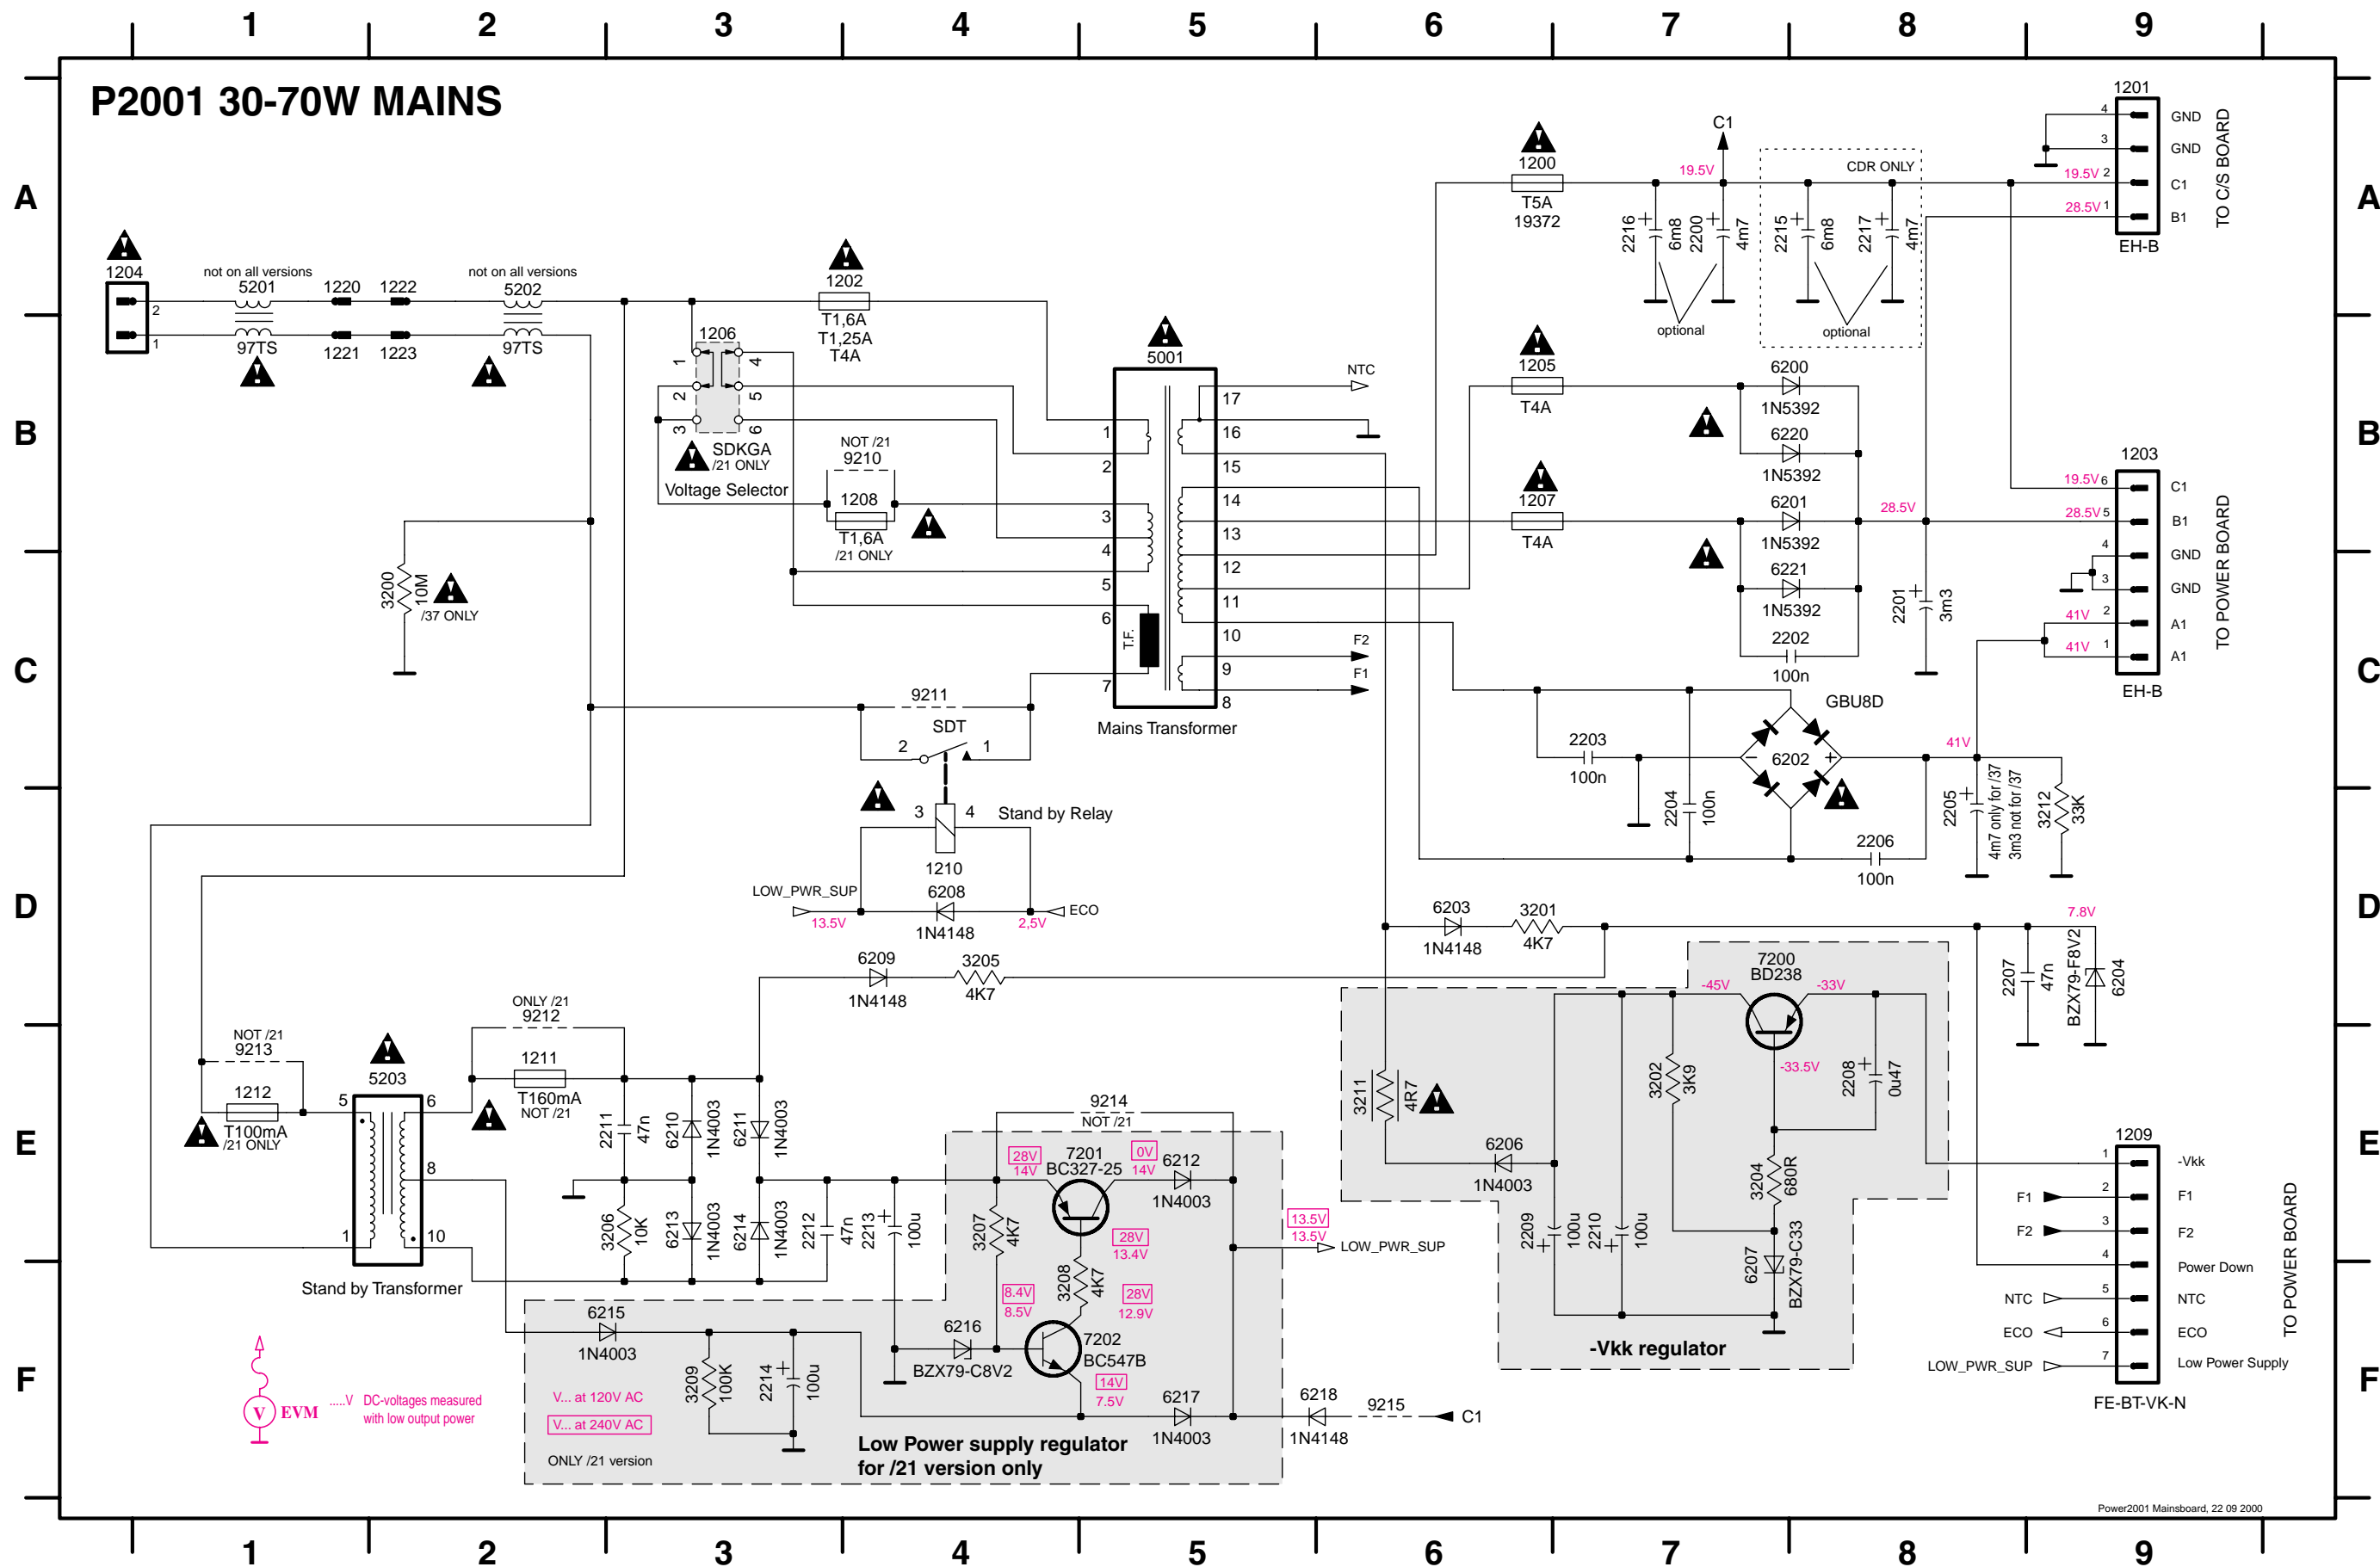

0300 B3	1307 B5	1316 C1	2306 A4	2313 B4	2320 A5	2327 B3	2334 C3	2341 B1	3303 C4	3310 A5	3317 C3	3324 A3	3331 C1	3340 C5	3347 A3	3354 A4	3361 A1	3368 A4	3375 C1	3382 C2	7302 A4
1300 A5	1308 A2	2300 B4	2307 C4	2314 A4	2321 C5	2328 A3	2335 C2	2342 B1	3304 B4	3311 C5	3318 C5	3325 A3	3332 B3	3341 B5	3348 C2	3355 A2	3362 A1	3369 B1	3376 A1	3383 C1	7303 A3
1301 B5	1310 A2	2301 C4	2308 A4	2315 C4	2322 A5	2329 A4	2336 A1	2343 A3	3305 C4	3312 B5	3319 B1	3326 C5	3333 B2	3342 A4	3349 C2	3356 A1	3363 A1	3370 A1	3377 B3	3391 C1	7304 B4
1302 A3	1312 B2	2302 B4	2309 B5	2316 A4	2323 A3	2330 A4	2337 A1	2344 C2	3306 A4	3313 B3	3320 B1	3327 B2	3336 A2	3343 A3	3350 B1	3357 A1	3364 C5	3371 B1	3378 A3	3392 B1	7305 A4
1304 C1	1313 B1	2303 C4	2310 A5	2317 C5	2324 B4	2331 A3	2338 A2	3300 C3	3307 C4	3314 B4	3321 B1	3328 A4	3337 B3	3344 A3	3351 C2	3358 A2	3365 C5	3372 A1	3379 C5	3393 C2	7306 C2
1305 A3	1314 A2	2304 B4	2311 B4	2318 B5	2325 B2	2332 A2	2339 A1	3301 C4	3308 A4	3315 C5	3322 C1	3329 C3	3338 B3	3345 A2	3352 C3	3359 A1	3366 C1	3373 B1	3380 B2	3394 C1	7307 C5
1306 C2	1315 C1	2305 C4	2312 A4	2319 B5	2326 C3	2333 B4	2340 C1	3302 B4	3309 B5	3316 C3	3323 B3	3330 C3	3339 A3	3346 A3	3353 C3	3360 B1	3367 C1	3374 C2	3381 B3	3395 C2	7308 B4


3396 A1	7309 C4
3397 C2	7310 C3
3398 A4	7311 C3
5300 A5	7312 B2
5301 B5	7313 B3
5302 A5	7314 B3
5303 B5	7315 B2
6300 B5	7316 B2
6301 C5	7317 A4
6302 B5	7318 A4
6303 C5	7319 A1
6304 C4	7320 C2
6305 C2	7321 C2
6306 B3	7322 C2
6307 B4	7323 A2
6308 B3	7324 A1
6309 A3	7325 A1
6310 A4	7326 C5
6311 B3	7327 B1
6312 B3	7328 B1
6313 A2	7330 B2
6314 B3	7331 C2
6315 C3	7332 B1
6316 A2	7333 C1
6317 A4	7334 C2
6318 A3	9300 B3
6319 A3	9302 A2
6320 B2	9303 A2
6321 B1	9306 A3
6322 C2	9307 A3
6323 C4	9308 A3
6324 C4	9309 A3
6325 A1	9310 B2
6326 A1	9320 A4
6327 A1	9321 A5
6328 C1	9322 B5
6329 B1	9323 B5
6330 A1	9324 B4
6331 A3	9325 B4
6332 A3	9326 A1
6333 C1	9327 A2
6334 A1	9328 B1
7300 A4	9329 B3
7301 C4	9330 B2
	9331 B3
	9332 C1
	9333 C1
	9334 C3
	9335 B4
	9336 C3
	9337 B1
	9338 B2
	9339 B3
	9340 B3
	9341 B4
	9342 C1
	9343 A1
	9344 C3
	9345 A2
	9346 B3
	9347 A3
	9348 B1
	9349 C1
	9350 B4
	9351 C1
	9352 B2
	9353 B2
	9354 A2
	9355 B3
	9356 C4
	9358 A4
	9359 B2
	9360 A3
	9361 B1
	9362 B1
	9363 A3
	9364 C1
	9365 C1
	9367 C4
	9368 C5
	9369 C1
	9370 A1
	9371 C2
	9372 B1

Power Board Copperside view

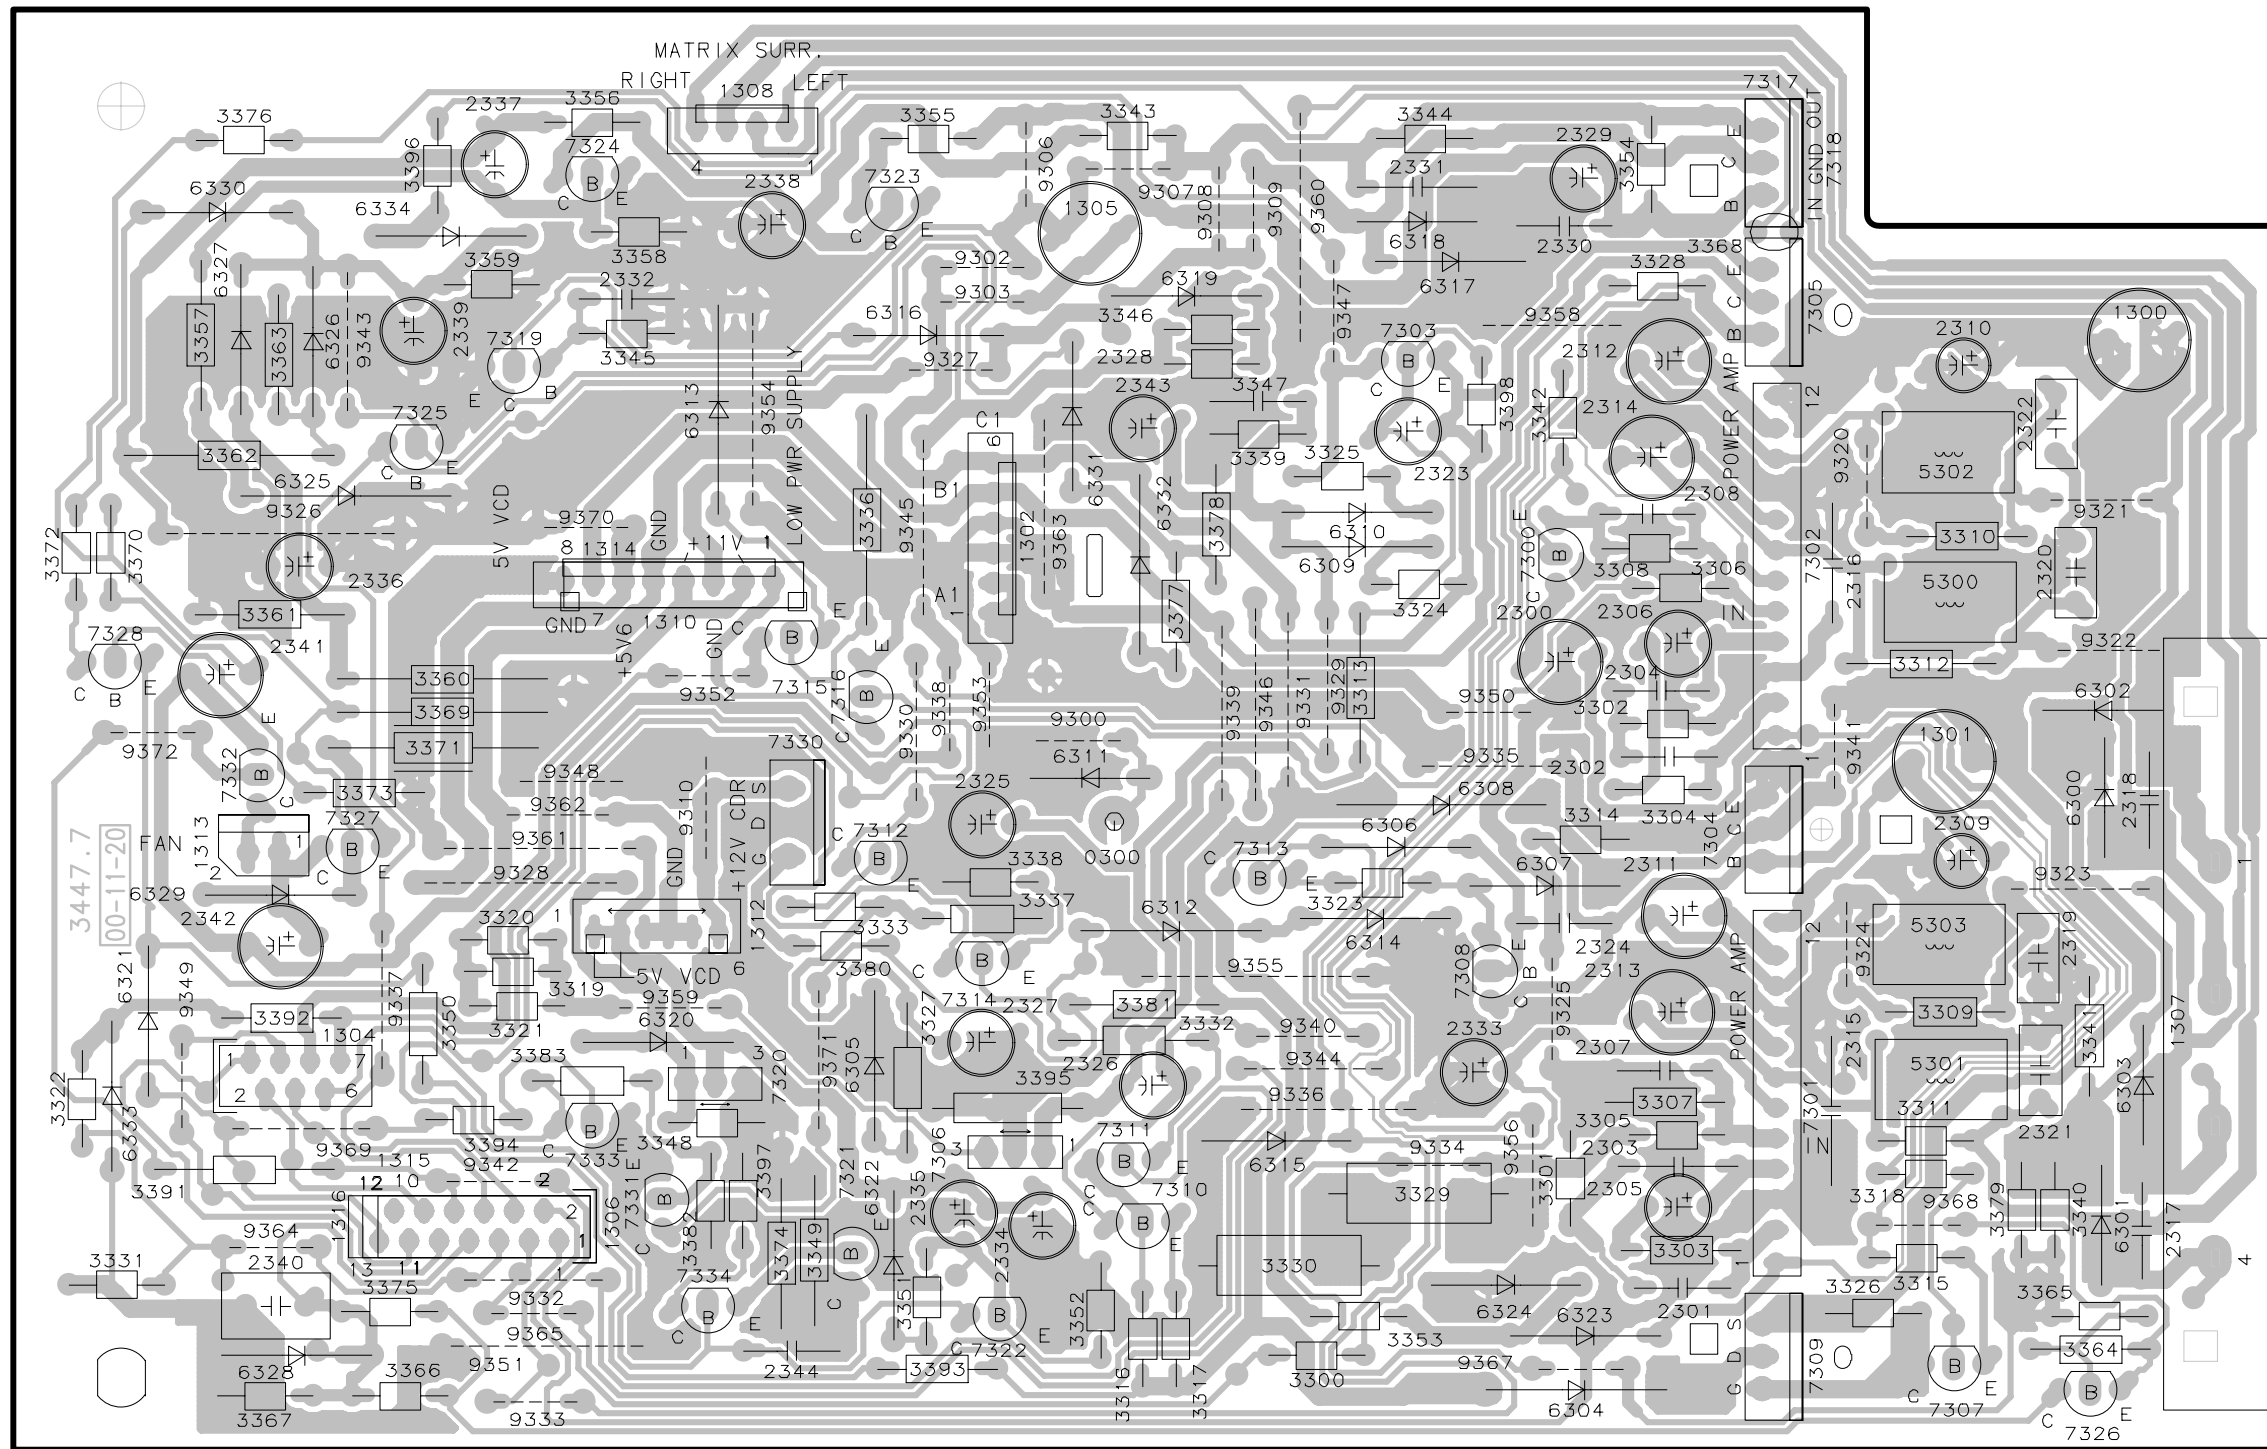

This assembly drawing shows a summary of all possible versions.
 For components used in a specific version see schematic diagram respectively partslist.

0300	D10	1307-a	F14	1315	D1	2305	B8	2312	F10	2319	F13	2326	B3	2333	G7	2340	I14	3303	B8	3310	F10	3317	A3	3324	B4	3331	B2	3340	D14	3347	G2	3354	E3	3361	I3	3368	I6	3375	I13	3382	A8	6300	E12	6307	B13	6314	D2	6321	H5	6328	I13	7302	F8	7309	B12	7316	C5	7323	F3	7331	A8	9308	D4
1300	F9	1307-b	E14	1316	D1	2306	G7	2313	C10	2320	F13	2327	B6	2334	H6	2341	I7	3304	F7	3311	C10	3318	B13	3325	B4	3332	B3	3341	E10	3348	G4	3355	F3	3362	H3	3369	H7	3376	I7	3383	A8	6301	E12	6308	C11	6315	D14	6322	H5	6329	I7	7303	A4	7310	B3	7317	E3	7324	F4	7332	I9	9309	D4
1301	B9	1308	F12	2300	E8	2307	D8	2314	G10	2321	F14	2328	D4	2335	H5	2342	I8	3305	C7	3312	G10	3319	B4	3326	B12	3333	C6	3342	E10	3349	H4	3356	F4	3363	I3	3370	I7	3377	A10	3384	I8	6302	E13	6309	C4	6316	F5	6323	E8	6330	H11	7304	A13	7311	B3	7318	D6	7325	I2	9300	D9	9310	A5
1302	A1	1310	G1	2301	B7	2308	H8	2315	D9	2322	F13	2329	E5	2336	E4	2343	D3	3306	H7	3313	A5	3320	B6	3327	B6	3334	C5	3343	F3	3350	H5	3357	H5	3364	H2	3371	H8	3378	A10	6303	E12	6310	C4	6317	E6	6324	E7	6331	A10	7305	A3	7312	B6	7319	F6	7326	I12	9302	D3				
1304	C1	1312	H1	2302	F7	2309	B9	2316	H9	2323	A4	2330	E5	2337	F4	3300	G6	3307	D8	3314	A14	3321	B5	3328	B3	3335	C6	3344	E6	3351	H5	3358	F5	3365	I12	3372	I11	3379	D13	6301	C10	6304	B11	6311	D9	6318	E6	6325	E5	6332	A11	7306	A5	7313	D12	7320	G4	7327	H8	9303	D2		
1305	D3	1313	I9	2303	B7	2310	F9	2317	F13	2324	B4	2331	E6	2338	F4	3301	B7	3308	H8	3315	A12	3322	B2	3329	C14	3336	C2	3345	E5	3352	I5	3359	H3	3366	I13	3373	I10	3380	A7	6305	A6	6312	C2	6319	G3	6326	H2	6333	A10	7307	B12	7314	C2	7321	H4	7328	H10	9306	D3				
1306	E1	1314	G1	2304	G7	2311	B10	2318	F13	2325	A5	2332	F5	2339	I2	3302	F7	3309	B10	3316	A3	3323	B13	3330	C14	3337	D4	3346	G2	3353	E7	3360	H3	3367	I4	3374	H4	3381	A8	6306	B14	6313	D5	6320	H4	6327	H3	7301	B8	7308	B14	7315	C5	7322	I5	7330	A7	9307	E3				

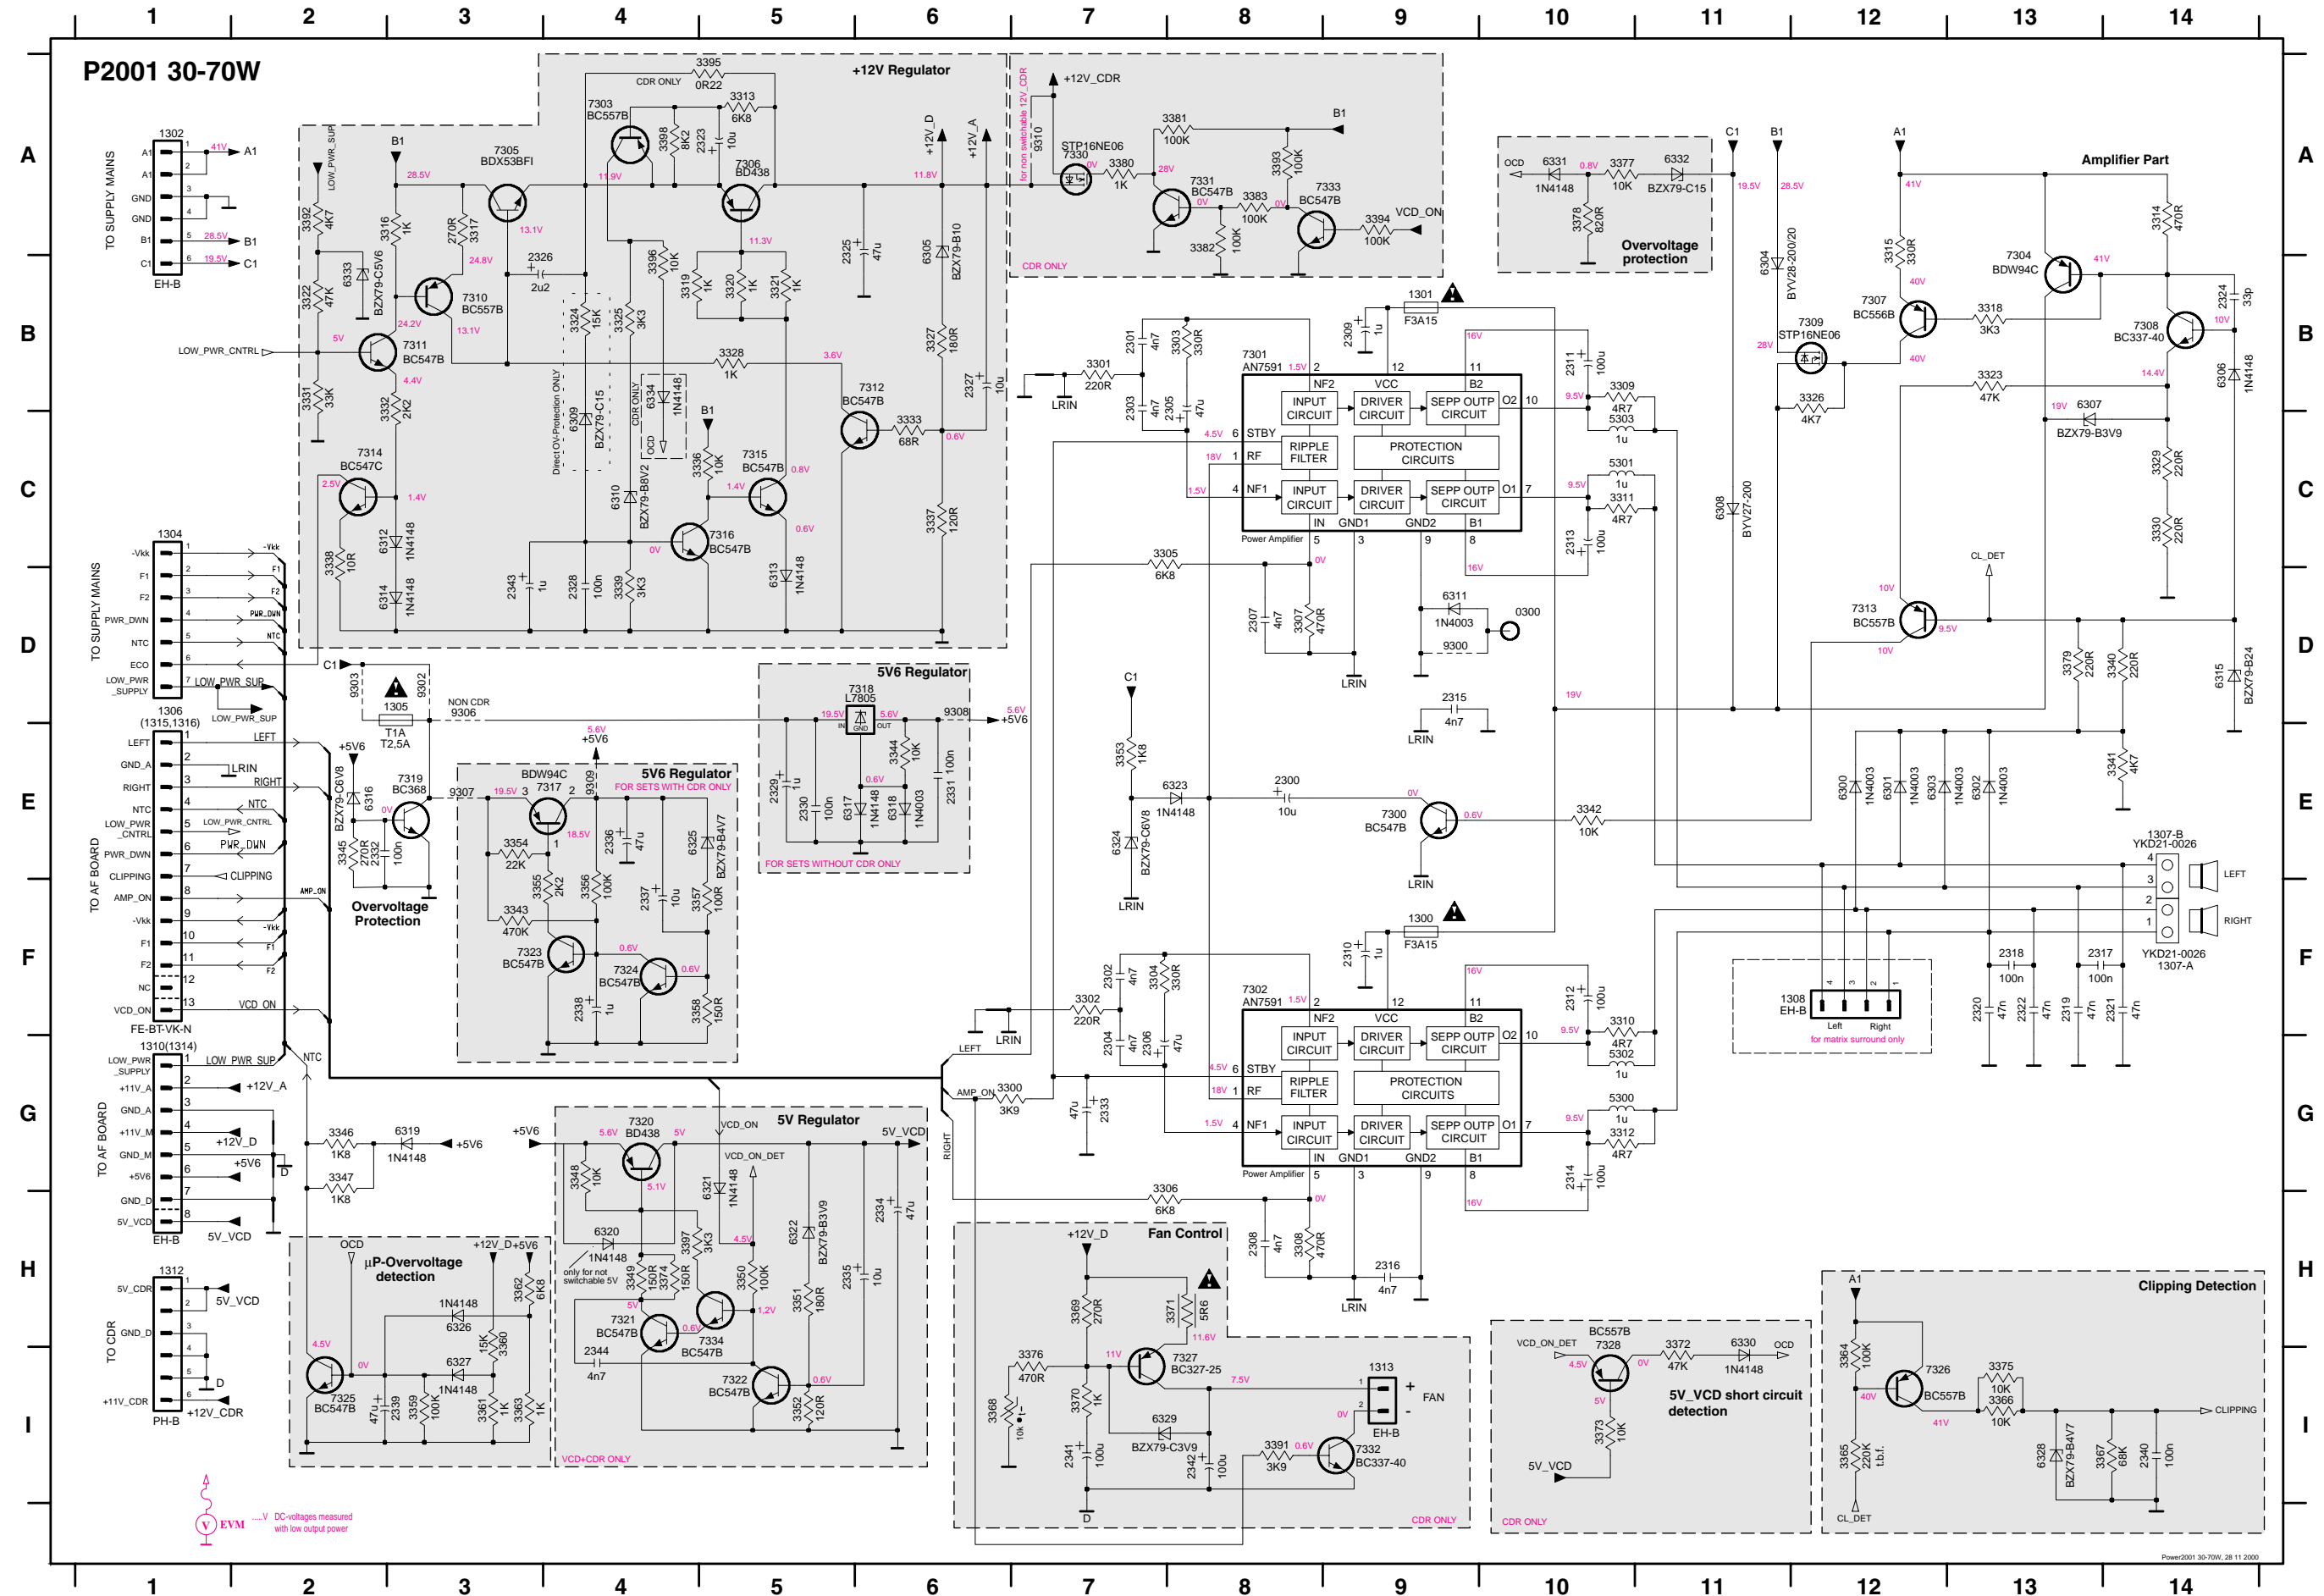

EVM — V DC-voltages measured with low output power

ELECTRICAL PARTSLIST POWER2001 MODULE

MISCELLANEOUS				CAPACITORS						
1200 ▲	2422 086 10963	FUSE RAD 5A 250V IEC		2326	4822 124 22652	2,2µF	20%	50V		
1202 ▲	4822 071 51252	FUSE 1.25A for sets without 5203		2327	4822 124 40248	10µF	20%	63V		
1202 ▲	4822 071 51602	FUSE 1,6A for sets with 5203		2328	4822 126 12882	100nF	20%	50V		
1202 ▲	4822 253 10126	FUSE T4A		2329	4822 124 21913	1µF	20%	63V		
1204 ▲	2422 030 00328	MAINS SOCKET /37		2330	4822 126 12882	100nF	20%	50V		
1204 ▲	4822 265 31015	MAINS SOCKET /21, /22		2331	4822 126 12882	100nF	20%	50V		
1205 ▲	2422 086 10786	FUSE RAD 4A 250V IEC		2332	4822 126 12882	100nF	20%	50V		
1206 ▲	2422 129 16478	VOLTAGE SELECTOR		2333	4822 124 40433	47µF	20%	25V		
1207 ▲	2422 086 10786	FUSE RAD 4A 250V IEC		2334	4822 124 40433	47µF	20%	25V		
1208 ▲	4822 071 51252	FUSE 1.25A for sets without 5203		2335	4822 124 40248	10µF	20%	63V		
1208 ▲	4822 071 51602	FUSE 1,6A for sets with 5203		2336	4822 124 40433	47µF	20%	25V		
1209	4822 267 10953	FLEX FOIL CONNECTOR 7P		2337	4822 124 40248	10µF	20%	63V		
1210 ▲	2422 132 07402	RELAY 1P 12V		2338	4822 124 21913	1µF	20%	63V		
1211 ▲	2422 086 10771	FUSE RAD 160mA 250V IEC		2339	4822 124 40433	47µF	20%	25V		
1212 ▲	4822 071 51001	FUSE 100mA		2341	4822 124 23052	100µF	20%	16V		
1300 ▲	4822 252 11225	FUSE F3.15A IEC 250V		2342	4822 124 23052	100µF	20%	16V		
1301 ▲	4822 252 11225	FUSE F3.15A IEC 250V		2343	4822 124 21913	1µF	20%	63V		
1304	4822 267 10953	FLEX FOIL CONNECTOR 7P		RESISTORS						
1305 ▲	4822 071 51002	FUSE T1A for sets without 5203		3200	4822 053 21106	10MΩ	5%	0,5W		
1305 ▲	4822 071 52502	FUSE T 2,5A for sets with 5203		3201	4822 116 52283	4,7kΩ	5%	0,5W		
1306	4822 267 10738	FFC-CONNECTOR 13P		3202	4822 116 52276	3,9kΩ	5%	0,5W		
1307	4822 267 31176	SPEAKER TERMINAL		3204	4822 116 52228	680Ω	5%	0,5W		
5203 ▲	3103 308 30600	STANDBY TRANSFORMER /21		3205	4822 116 52283	4,7kΩ	5%	0,5W		
5203 ▲	3103 308 30610	STANDBY TRANSFORMER /22		3206	4822 050 21003	10kΩ	2%	0,25W		
5203 ▲	3103 308 30800	STANDBY TRANSFORMER /37		3207	4822 116 52283	4,7kΩ	5%	0,5W		
8010	3139 110 34600	FLEX FOIL CABLE 7Pin, 280mm		3208	4822 116 52283	4,7kΩ	5%	0,5W		
	4822 492 11735	SPRING FIXATION TRANSISTOR		3209	4822 116 52234	100kΩ	5%	0,5W		
CAPACITORS				3211	4822 052 10478	4,7Ω	5%	NFR		
2200	4822 124 12012	4700µF	20%	25V	3212	4822 050 23303	33kΩ	1%	0,6W	
2201	4822 124 42367	3300µF	20%	35V	3300	4822 116 52276	3,9kΩ	5%	0,5W	
2202	5322 121 42386	100nF	5%	63V	3301	4822 116 83872	220Ω	5%	0,5W	
2203	5322 121 42386	100nF	5%	63V	3302	4822 116 83872	220Ω	5%	0,5W	
2204	5322 121 42386	100nF	5%	63V	3303	4822 116 52219	330Ω	5%	0,5W	
2205	4822 124 80415	4700µF	20%	50V	only for /37	3304	4822 116 52219	330Ω	5%	0,5W
2205	8203 303 85640	3300µF	20%	50V	not for /37	3305	4822 116 83961	6,8kΩ	5%	0,16W
2206	5322 121 42386	100nF	5%	63V	3306	4822 116 83961	6,8kΩ	5%	0,16W	
2207	4822 122 33449	47nF	30%	50V	3307	4822 116 83883	470Ω	5%	0,16W	
2208	5322 124 41948	0,47µF	20%	50V	3308	4822 116 83883	470Ω	5%	0,16W	
2209	2020 012 93547	100µF	20%	63V	3309	4822 050 24708	4,7Ω	1%	0,6W	
2211	4822 121 43526	47nF	5%	100V	3310	4822 050 24708	4,7Ω	1%	0,6W	
2212	4822 121 43526	47nF	5%	100V	3311	4822 050 24708	4,7Ω	1%	0,6W	
2213	4822 124 40255	100µF	20%	50V	3312	4822 050 24708	4,7Ω	1%	0,6W	
2214	4822 124 40207	100µF	20%	25V	3313	4822 116 83961	6,8kΩ	5%	0,16W	
2217	4822 124 12012	4700µF	20%	25V	3314	4822 116 83883	470Ω	5%	0,16W	
2300	4822 124 40248	10µF	20%	63V	3315	4822 116 52219	330Ω	5%	0,5W	
2301	4822 126 11714	4,7nF	20%	16V	3316	4822 050 11002	1kΩ	5%	0,2W	
2302	4822 126 11714	4,7nF	20%	16V	3317	4822 116 83876	270Ω	5%	0,16W	
2303	4822 126 11714	4,7nF	20%	16V	3318	4822 116 52269	3,3kΩ	5%	0,5W	
2304	4822 126 11714	4,7nF	20%	16V	3319	4822 050 11002	1kΩ	5%	0,2W	
2305	4822 124 40433	47µF	20%	25V	3320	4822 050 11002	1kΩ	5%	0,2W	
2306	4822 124 40433	47µF	20%	25V	3321	4822 050 11002	1kΩ	5%	0,2W	
2307	4822 126 11714	4,7nF	20%	16V	3322	4822 116 83884	47kΩ	5%	0,16W	
2308	4822 126 11714	4,7nF	20%	16V	3323	4822 116 83884	47kΩ	5%	0,16W	
2309	4822 124 21913	1µF	20%	63V	3324	4822 116 52244	15kΩ	5%	0,5W	
2310	4822 124 21913	1µF	20%	63V	3325	4822 116 52269	3,3kΩ	5%	0,5W	
2311	4822 124 40207	100µF	20%	25V	3326	4822 116 52283	4,7kΩ	5%	0,5W	
2312	4822 124 40207	100µF	20%	25V	3327	4822 116 52213	180Ω	5%	0,5W	
2313	4822 124 40207	100µF	20%	25V	3328	4822 050 11002	1kΩ	5%	0,2W	
2314	4822 124 40207	100µF	20%	25V	3329	4822 053 11221	220Ω	5%	2W	
2315	4822 126 11714	4,7nF	20%	16V	3330	4822 053 11221	220Ω	5%	2W	
2316	4822 126 11714	4,7nF	20%	16V	3331	4822 050 23303	33kΩ	1%	0,6W	
2317	4822 126 12882	100nF	20%	50V	3332	4822 116 52256	2,2kΩ	5%	0,16W	
2318	4822 126 12882	100nF	20%	50V	3333	4822 116 52199	68Ω	5%	0,16W	
2319	4822 121 43526	47nF	5%	100V	3336	4822 050 21003	10kΩ	2%	0,25W	
2320	4822 121 43526	47nF	5%	100V	3337	4822 116 52206	120Ω	5%	0,5W	
2321	4822 121 43526	47nF	5%	100V	3338	4822 116 52176	10Ω	5%	0,5W	
2322	4822 121 43526	47nF	5%	100V	3339	4822 116 52269	3,3kΩ	5%	0,5W	
2323	4822 124 40248	10µF	20%	63V	3340	4822 116 83872	220Ω	5%	0,5W	
2324	4822 122 33069	33pF	5%	50V	3341	4822 116 52283	4,7kΩ	5%	0,5W	
2325	4822 124 40433	47µF	20%	25V	3342	4822 050 21003	10kΩ	2%	0,25W	

ELECTRICAL PARTSLIST POWER2001 MODULE

RESISTORS				DIODES			
3343	4822 116 52285	470kΩ	5%	0,5W	6303	4822 130 31878	1N4003G
3344	4822 050 21003	10kΩ	2%	0,25W	6304	9340 550 66112	BYV28-200/24
3345	4822 116 83876	270Ω	5%	0,16W	6305	4822 130 61219	BZX79-C10
3346	4822 116 52249	1,8kΩ	5%	0,16W	6306	4822 130 30621	1N4148
3347	4822 116 52249	1,8kΩ	5%	0,16W	6307	3198 010 53980	BZX79-B3V9
3348	4822 050 21003	10kΩ	2%	0,25W	6308	5322 130 31938	BYV27-200
3349	4822 116 52213	180Ω	5%	0,5W	6309	4822 130 34281	BZX79-C15
3350	4822 050 21003	10kΩ	2%	0,25W	6310	3198 010 58280	BZX79-B8V2
3351	4822 116 83868	150Ω	5%	0,5W	6311	4822 130 31878	1N4003G
3352	4822 116 52206	120Ω	5%	0,5W	6312	4822 130 30621	1N4148
3353	4822 116 52249	1,8kΩ	5%	0,16W	6313	4822 130 30621	1N4148
3354	4822 116 52257	22kΩ	5%	0,5W	6314	4822 130 30621	1N4148
3355	4822 116 52256	2,2kΩ	5%	0,16W	6315	4822 130 34398	BZX79-C24
3356	4822 116 52234	100kΩ	5%	0,5W	6316	4822 130 34278	BZX79-C6V8
3357	4822 116 52175	100Ω	5%	0,5W	6317	4822 130 30621	1N4148
3358	4822 116 83868	150Ω	5%	0,5W	6318	4822 130 31878	1N4003G
3359	4822 116 52234	100kΩ	5%	0,5W	6319	4822 130 30621	1N4148
3360	4822 116 52244	15kΩ	5%	0,5W	6321	4822 130 30621	1N4148
3361	4822 050 11002	1kΩ	5%	0,2W	6322	3198 010 53980	BZX79-B3V9
3362	4822 116 83961	6,8kΩ	5%	0,16W	6323	4822 130 30621	1N4148
3363	4822 050 11002	1kΩ	5%	0,2W	6324	4822 130 34278	BZX79-C6V8
3368	2322 640 63103	10kΩ	NTC		6325	4822 130 34174	BZX79-B4V7
3369	4822 116 83876	270Ω	5%	0,16W	6326	4822 130 30621	1N4148
3370	4822 050 11002	1kΩ	5%	0,2W	6327	4822 130 30621	1N4148
3371	4822 052 10568	5,6Ω	5%	0,33W	6329	4822 130 31981	BZX79-B3V9
3372	4822 116 83884	47kΩ	5%	0,16W	6330	4822 130 30621	1N4148
3373	4822 050 21003	10kΩ	2%	0,25W	6331	4822 130 30621	1N4148
3374	4822 116 52213	180Ω	5%	0,5W	6332	4822 130 34281	BZX79-C15
3376	4822 116 83883	470Ω	5%	0,16W	6333	4822 130 34173	BZX79-B5V6
3377	4822 050 21003	10kΩ	2%	0,25W	TRANSISTORS		
3378	4822 116 52231	820Ω	5%	0,5W	7200	4822 130 40917	BD238
3379	4822 116 83872	220Ω	5%	0,5W	7201	4822 130 41246	BC327-25
3380	4822 050 11002	1kΩ	5%	0,2W	7202	4822 130 40959	BC547B
3381	4822 116 52234	100kΩ	5%	0,5W	7300	4822 130 40959	BC547B
3382	4822 116 52234	100kΩ	5%	0,5W	7303	4822 130 44568	BC557B
3383	4822 116 52234	100kΩ	5%	0,5W	7304	4822 130 10847	BDW94C
3391	4822 116 52276	3,9kΩ	5%	0,5W	7305	9322 139 23687	BDX53BFP
3392	4822 116 52283	4,7kΩ	5%	0,5W	7306	4822 130 40995	BD438
COILS				7307	4822 130 41691	BC556B	
5202	4822 157 11832	400µH			7308	4822 130 40855	BC337-40
5220	4822 157 11832	400µH			7309	4822 130 11336	STP16NE06FP
5300	4822 157 62255	COIL 18,5 TURNS			7310	4822 130 44568	BC557B
5301	4822 157 62255	COIL 18,5 TURNS			7311	4822 130 40959	BC547B
5302	4822 157 62255	COIL 18,5 TURNS			7312	4822 130 40959	BC547B
5303	4822 157 62255	COIL 18,5 TURNS		</			

AF9 BOARD

TABLE OF CONTENTS

Brief Introduction of the AF9 Board	12-1
AF9 Board - Component layout	12-2
AF9 Board - Chip layout	12-3
AF9 Board - Circuit Diagram (Part 1)	12-4
AF9 Board - Circuit Diagram (Part 2)	12-5
AF9 Board - Circuit Diagram (Part 3)	12-6
Video Out Cinch part - Layout & Circuit diagram	12-7
Electrical parts list.....	12-7

BRIEF INTRODUCTION OF THE AF9 BOARD

The AF9 Board consists of the following features :

a. TDA7468D IC

TDA7468D IC (7501) which includes functions such as source selection, loudness control, dynamic bass control, treble control, volume control and muting function. Sound features such as ALC, DBB, DSC and IS are controllable via I²C Bus from the microprocessor.

The TDA7468D IC caters for 4 input sources namely TUNER, TAPE, CD and AUX. It also has a Mic mix input. In our application, software will switch the input source to previous source MUTE during STANDBY mode and some other occasions where noise from other input source is undesirable.

Note that the input to the TDA7468D IC must be ac coupled to prevent 'pop' noise. Input networks are included to provide appropriate attenuation for various sources.

b. SIMPLE MIC MIXING

The AF9 Board has provisions which can be configured to cater for one of the following:

MM : which caters for Mic mixing with additional Mic amplifier board.

NM : non Mic mixing.

c. DOLBY PRO LOGIC (DPL) INTERFACE

The AF9 Board has provisions which can be configured to cater for DPL.

d. LINE OUT

Line out cinch socket for connection to external amplifier.

e. SUB-WOOFER OUT

Sub-woofer out cinch socket for connection to active sub-woofer speaker.

f. INCREDIBLE SURROUND

Incredible surround effect using transistor circuit to create phase shifting and spatial effect.

g. HEADPHONE AMPLIFIER

Headphone amplifier to drive 32 ohm to 1kohm headphone.

h. CD STANDBY CONTROL

CD Standby Control circuit which switches on the supply to CD servo control IC, digital out buffer IC, HF circuit and the laser light pen in CD mode only.

i. ATTENUATION NETWORK


Attenuation network is provided at the output of the AF9 Board for interfacing with power board of different output power.

j. CD DIGITAL OUT

CD Digital out cinch socket for connection to external digital audio decoders.

AF9 BOARD - COMPONENT LAYOUT

1100 D6	1503 C6	1603 C6	2535 D5	2603 D4	2923 C6	3627 D5	6202 A3	9401 B4	9513 C2	9529 C2	9547 B2	9570 A3	9587 B4	9603 A6	9620 C6	9637 C5	9657 B1
1102 D6	1504 A1	1691 C1	2536 D5	2604 D5	3205 C6	3628 C5	6204 C6	9402 A4	9514 B2	9530 C2	9548 B2	9571 A3	9588 B4	9604 A6	9621 B3	9638 C5	9658 C5
1103 D6	1505 B1	1801 C1	2541 C3	2611 C5	3403 B6	3631 C6	6205 C6	9405 B6	9515 C2	9531 C2	9549 B4	9573 B4	9589 B4	9605 A6	9623 C6	9640 C5	9659 B1
1201 A3	1506 C6	2201 B2	2542 D3	2612 D5	3410 B4	3640 C6	6206 B6	9483 A2	9516 C2	9532 D2	9550 B2	9574 C2	9590 B5	9606 A6	9624 B1	9641 D5	9660 B2
1202 A3	1510 C6	2202 C2	2546 C3	2621 B2	3412 A4	3643 C4	6207 A4	9484 B5	9517 C2	9533 D3	9551 B2	9575 B4	9591 B5	9607 A6	9625 C6	9642 C5	9661 D3
1203 A3	1520 A2	2203 C2	2549 B3	2623 D4	3435 D6	3663 A1	6208 A4	9486 A2	9518 C1	9534 D3	9552 C1	9576 A5	9592 B5	9608 A6	9626 C5	9643 C4	9662 B5
1204 A3	1521 A5	2204 B3	2550 D3	2625 D5	3436 D6	3804 C1	6209 B6	9501 A3	9519 C1	9535 C3	9554 A2	9577 B2	9593 B5	9609 C2	9627 C5	9644 A6	9663 C1
1205 A3	1522 A5	2207 C6	2551 B3	2626 B5	3437 D5	3820 B6	6401 B4	9502 C2	9520 C1	9536 C3	9555 A2	9578 A4	9594 A5	9610 A6	9628 C5	9646 C4	9664 D6
1206 A3	1523 A5	2209 B6	2552 D2	2661 A1	3438 D6	3821 A4	6641 D4	9503 A1	9521 C1	9537 C3	9557 A2	9579 A6	9595 B5	9612 B4	9629 C5	9647 D2	9665 A1
1401 B6	1524 A5	2503 B1	2565 C3	2662 A1	3542 D4	5401 B6	6642 D4	9504 C3	9522 C1	9538 C3	9558 A2	9580 A4	9596 A5	9613 A6	9630 C5	9648 C4	9666 D6
1402 A6	1525 A5	2504 A1	2589 C4	2681 B5	3571 C2	5403 C6	6771 D3	9505 B2	9523 C2	9540 C4	9559 A3	9581 A5	9597 A6	9614 B6	9631 B3	9649 C4	9904 C6
1403 B6	1531 D6	2511 C4	2590 C3	2696 C1	3572 C2	5404 C5	6772 C5	9508 D5	9524 D2	9541 C4	9560 B3	9582 A5	9598 B5	9615 B6	9632 D5	9650 D2	
1404 A6	1532 C6	2512 B4	2591 C4	2771 D4	3581 C4	5621 D4	6774 B3	9509 B2	9525 D2	9542 B3	9564 B3	9583 A2	9599 B6	9616 B6	9633 C5	9651 A5	
1405 B6	1541 A6	2520 A2	2592 D3	2772 D4	3601 C5	5801 D1	6775 D3	9510 B2	9526 D2	9543 B3	9566 A3	9584 B4	9600 B6	9617 B6	9634 A4	9653 B4	
1501 B1	1542 A6	2531 D1	2593 C4	2803 D1	3602 D5	5802 C1	7202 A6	9511 B6	9527 D2	9544 A2	9567 C4	9585 B4	9601 B6	9618 C6	9635 C5	9654 C5	
1502 B1	1602 C6	2532 D2	2594 D3	2901 B6	3608 C5	6201 A3	7401 B4	9512 B3	9528 D1	9546 B3	9568 B4	9586 B4	9602 B6	9619 C6	9636 C5	9656 C4	

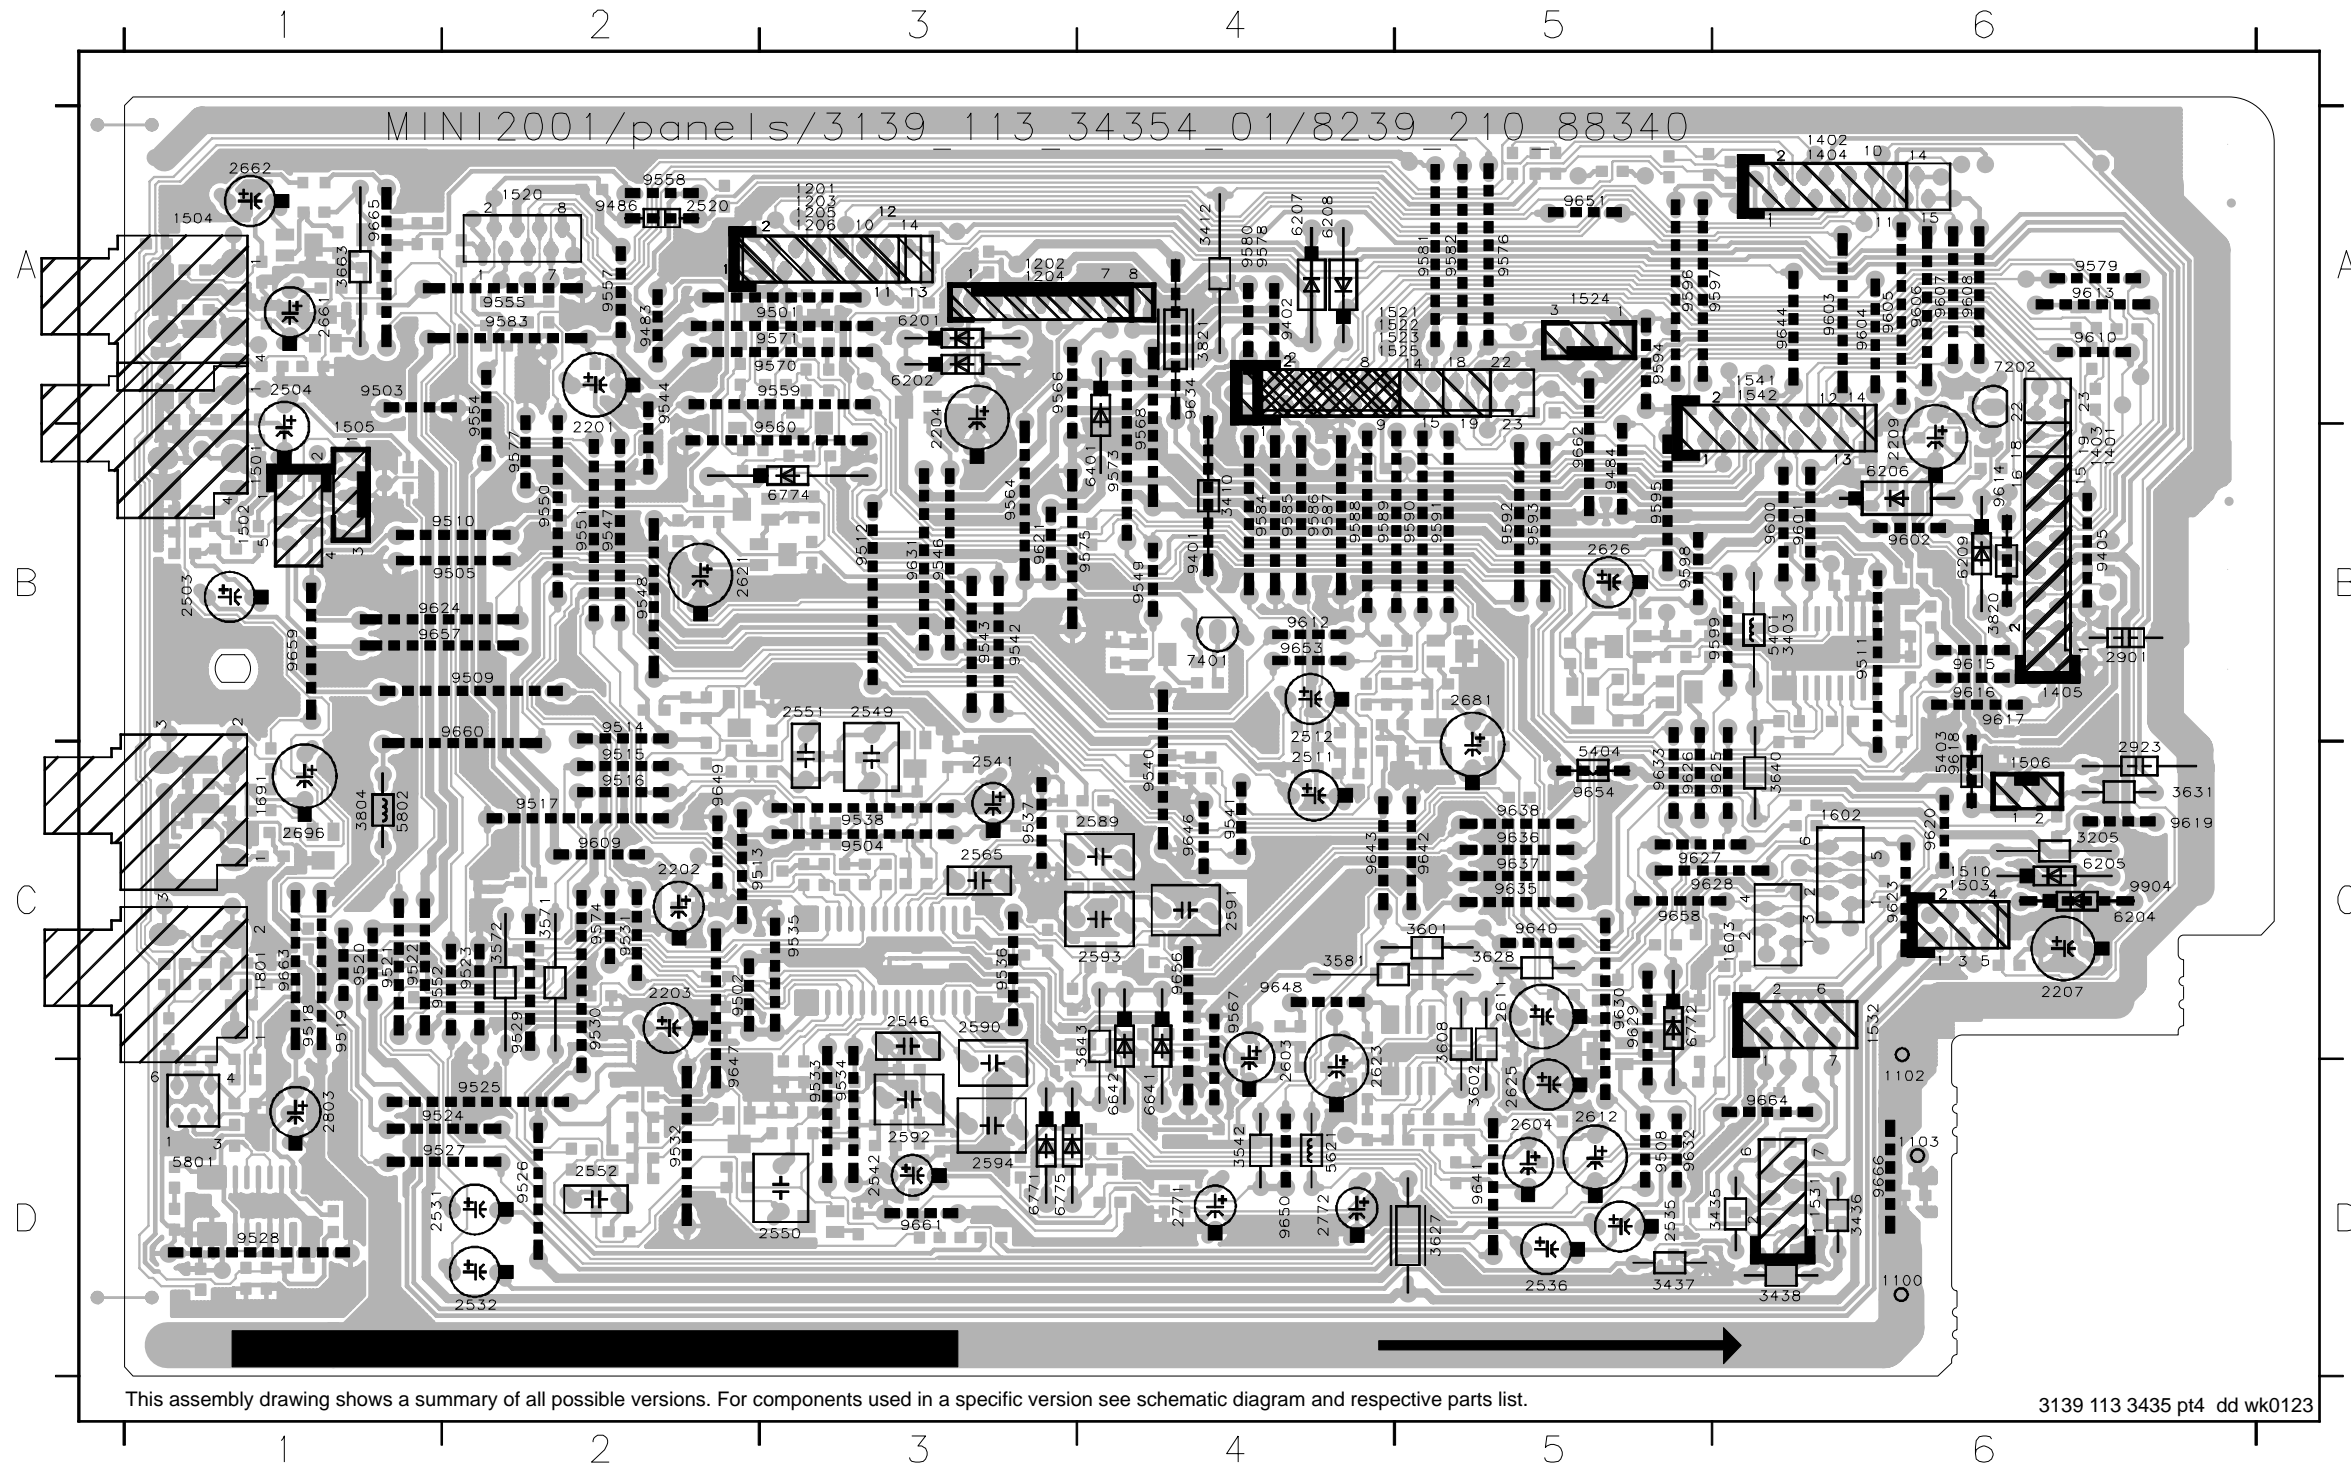


This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram and respective parts list.


3139 113 3435 pt4 dd wk0123

AF9 BOARD - CHIP LAYOUT

2205 A4	2523 C4	2567 C4	2641 C3	2805 D6	3202 A4	3521 A5	3552 D5	3591 C4	3624 B2	3654 B4	3676 D3	3803 D6	4124 C4	4148 A5	4904 C1	7501 C4	7693 C6
2206 C5	2524 C5	2568 D4	2642 C4	2806 D6	3401 B1	3522 A5	3553 C4	3592 D4	3625 B2	3655 B5	3677 D3	3805 C6	4125 C5	4149 C6	4905 B3	7585 C4	7802 D6
2208 B1	2533 C4	2581 D3	2653 A5	2807 C6	3402 B1	3523 A5	3554 D5	3593 C3	3626 B2	3656 A4	3678 D3	3806 C6	4126 A2	4150 C6	4906 A6	7586 D4	7803 B4
2210 B1	2534 D4	2582 D2	2654 A4	2808 C6	3404 B1	3524 A5	3555 C4	3594 D4	3629 C2	3657 A4	3683 B3	3807 D6	4127 B2	4151 A2	4907 A1	7601 C2	
2211 B1	2543 C4	2583 C3	2663 A6	2809 D6	3405 B1	3525 C4	3556 D5	3605 C1	3630 C1	3658 A4	3684 B2	3808 D6	4128 C3	4152 A2	4908 A1	7603 C2	
2401 B1	2544 D4	2584 D2	2664 A6	2810 D6	3406 B1	3526 C4	3557 C4	3606 D2	3633 B5	3659 C2	3686 B3	3809 D6	4130 C2	4153 B1	4909 C6	7604 C2	
2402 B1	2547 C4	2585 C3	2665 A6	2902 D1	3408 B3	3531 D1	3558 D5	3607 C2	3634 B5	3660 D2	3687 B2	3822 B1	4132 C1	4403 B1	4910 C6	7621 B2	
2403 B1	2548 D4	2586 D2	2666 A6	2904 A6	3409 B3	3532 D1	3559 B5	3609 C2	3635 C3	3661 A6	3688 B2	4100 A4	4133 C1	4404 A4	4911 C6	7622 B2	
2404 B2	2553 C4	2587 C3	2667 A6	2905 C2	3501 B6	3533 D2	3560 D5	3610 D2	3636 B4	3662 A6	3689 C2	4101 C6	4134 D4	4405 B3	4912 B1	7623 B2	
2501 B6	2554 D5	2588 D2	2669 B6	2908 C3	3502 A6	3534 D1	3561 B5	3611 C2	3637 C3	3664 A6	3690 C6	4104 B6	4135 C2	4406 B1	4913 B1	7635 B5	
2502 A6	2555 C4	2601 D3	2682 B2	2921 C6	3503 B6	3541 C3	3562 D5	3612 D2	3638 B4	3665 A6	3692 B3	4108 C5	4137 D1	4407 C3	4914 B3	7636 C3	
2505 C4	2556 D4	2602 C3	2683 B3	2922 C1	3504 A6	3543 C4	3563 C5	3613 C2	3639 B5	3666 A6	3694 B1	4110 C5	4138 D2	4501 C5	4915 A1	7651 A5	
2506 C5	2557 C5	2605 C3	2691 B4	2924 C6	3505 B6	3544 D4	3564 D5	3614 C2	3641 D3	3667 A6	3699 C6	4111 C6	4139 B1	4641 D3	4920 C6	7652 A4	
2507 C5	2558 D5	2606 D3	2697 C6	2950 A1	3506 B6	3545 C4	3565 C4	3615 C2	3642 D3	3668 A6	3700 C6	4112 D4	4141 B1	4642 D3	4921 C6	7653 A4	
2513 C3	2559 C4	2607 C3	2698 C6	2951 A2	3507 B6	3546 D4	3566 D5	3616 C2	3644 A2	3669 A6	3707 C3	4113 D4	4142 B1	4801 D6	7201 A4	7654 A5	
2514 C3	2560 D5	2608 D3	2707 C4	2952 A2	3508 B6	3547 C4	3567 C4	3619 C2	3645 C4	3671 D4	3708 C3	4114 C2	4143 A4	4802 A2	7402 B3	7661 A6	
2515 C4	2561 B5	2609 C2	2708 C4	2953 A2	3511 B3	3548 D4	3568 D4	3620 C1	3646 C4	3672 D3	3711 B3	4115 D4	4144 B4	4811 C3	7403 B1	7662 A6	
2516 D4	2562 D5	2610 D2	2801 C6	2954 A5	3512 B3	3549 C4	3569 B4	3621 B2	3651 B4	3673 D4	3712 A6	4116 B5	4145 A1	4812 D2	7404 B1	7663 A6	
2521 A5	2563 C3	2622 B2	2802 D6	2955 B1	3513 C3	3550 D4	3570 D4	3622 B2	3652 C1	3674 D3	3801 C6	4119 D4	4146 A4	4813 C6	7485 B5	7668 B2	
2522 A5	2564 D4	2624 D3	2804 D6	3201 A5	3514 C3	3551 C4	3582 D2	3623 B2	3653 A4	3675 D3	3802 D6	4122 C2	4147 A1	4903 A1	7488 D5	7682 B2	

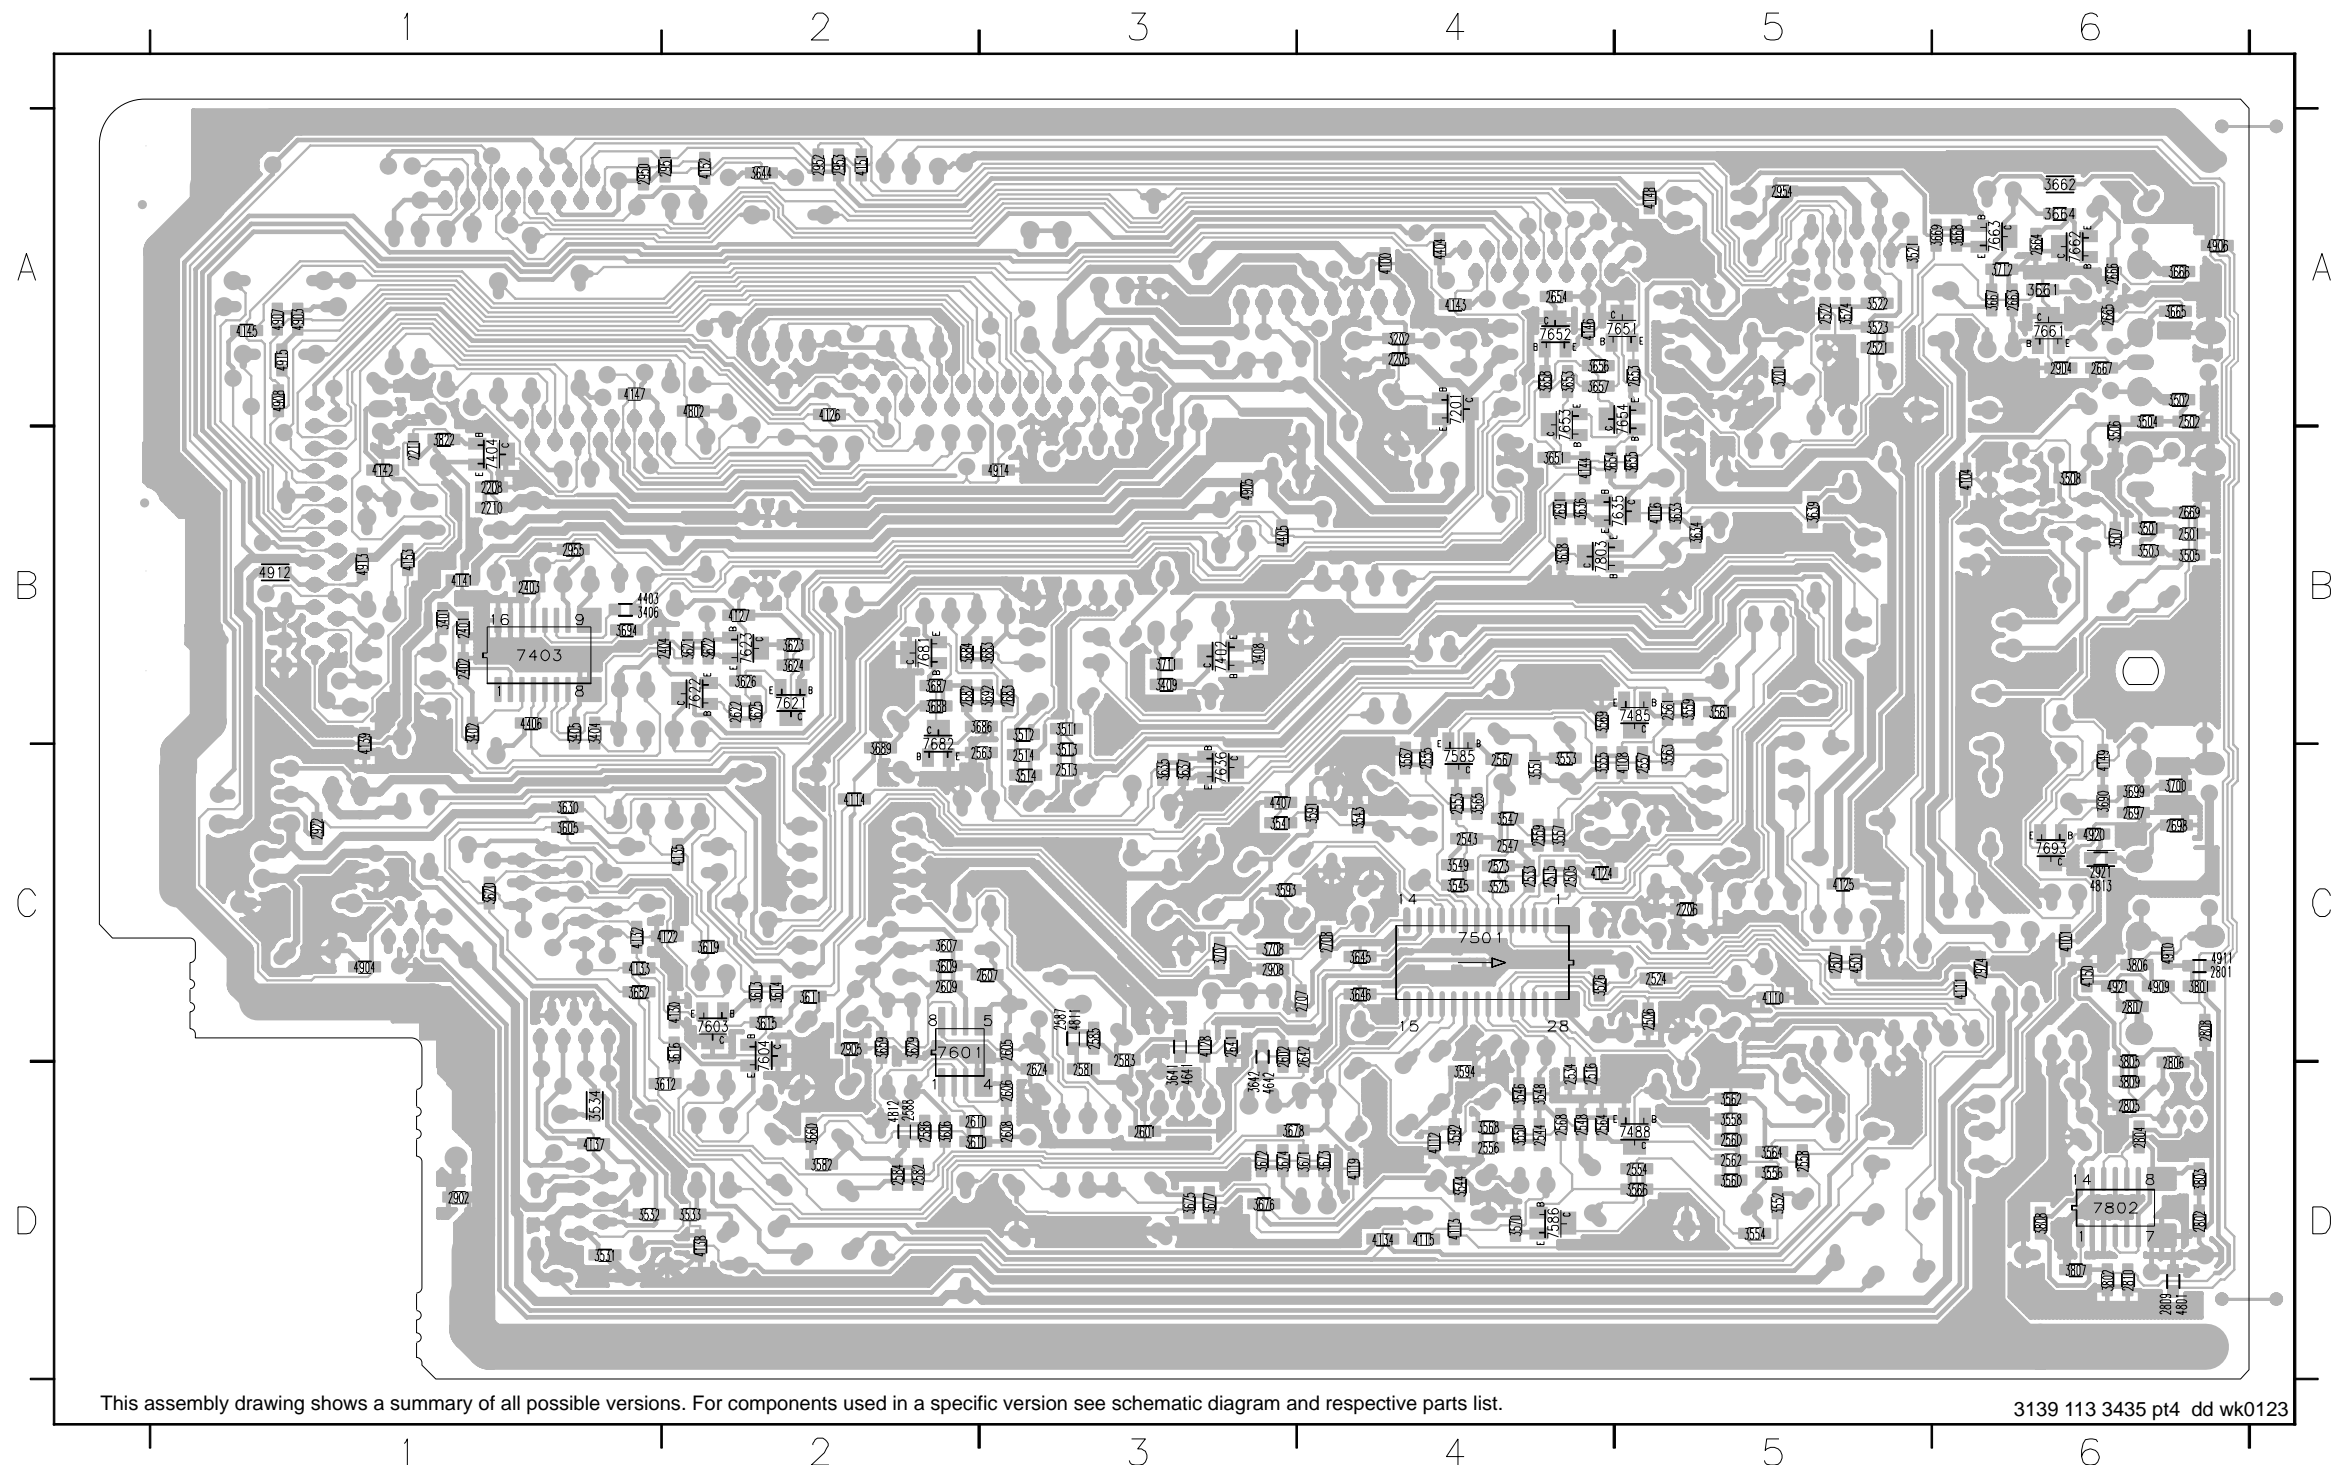


AF9 BOARD - CIRCUIT DIAGRAM (PART 1)

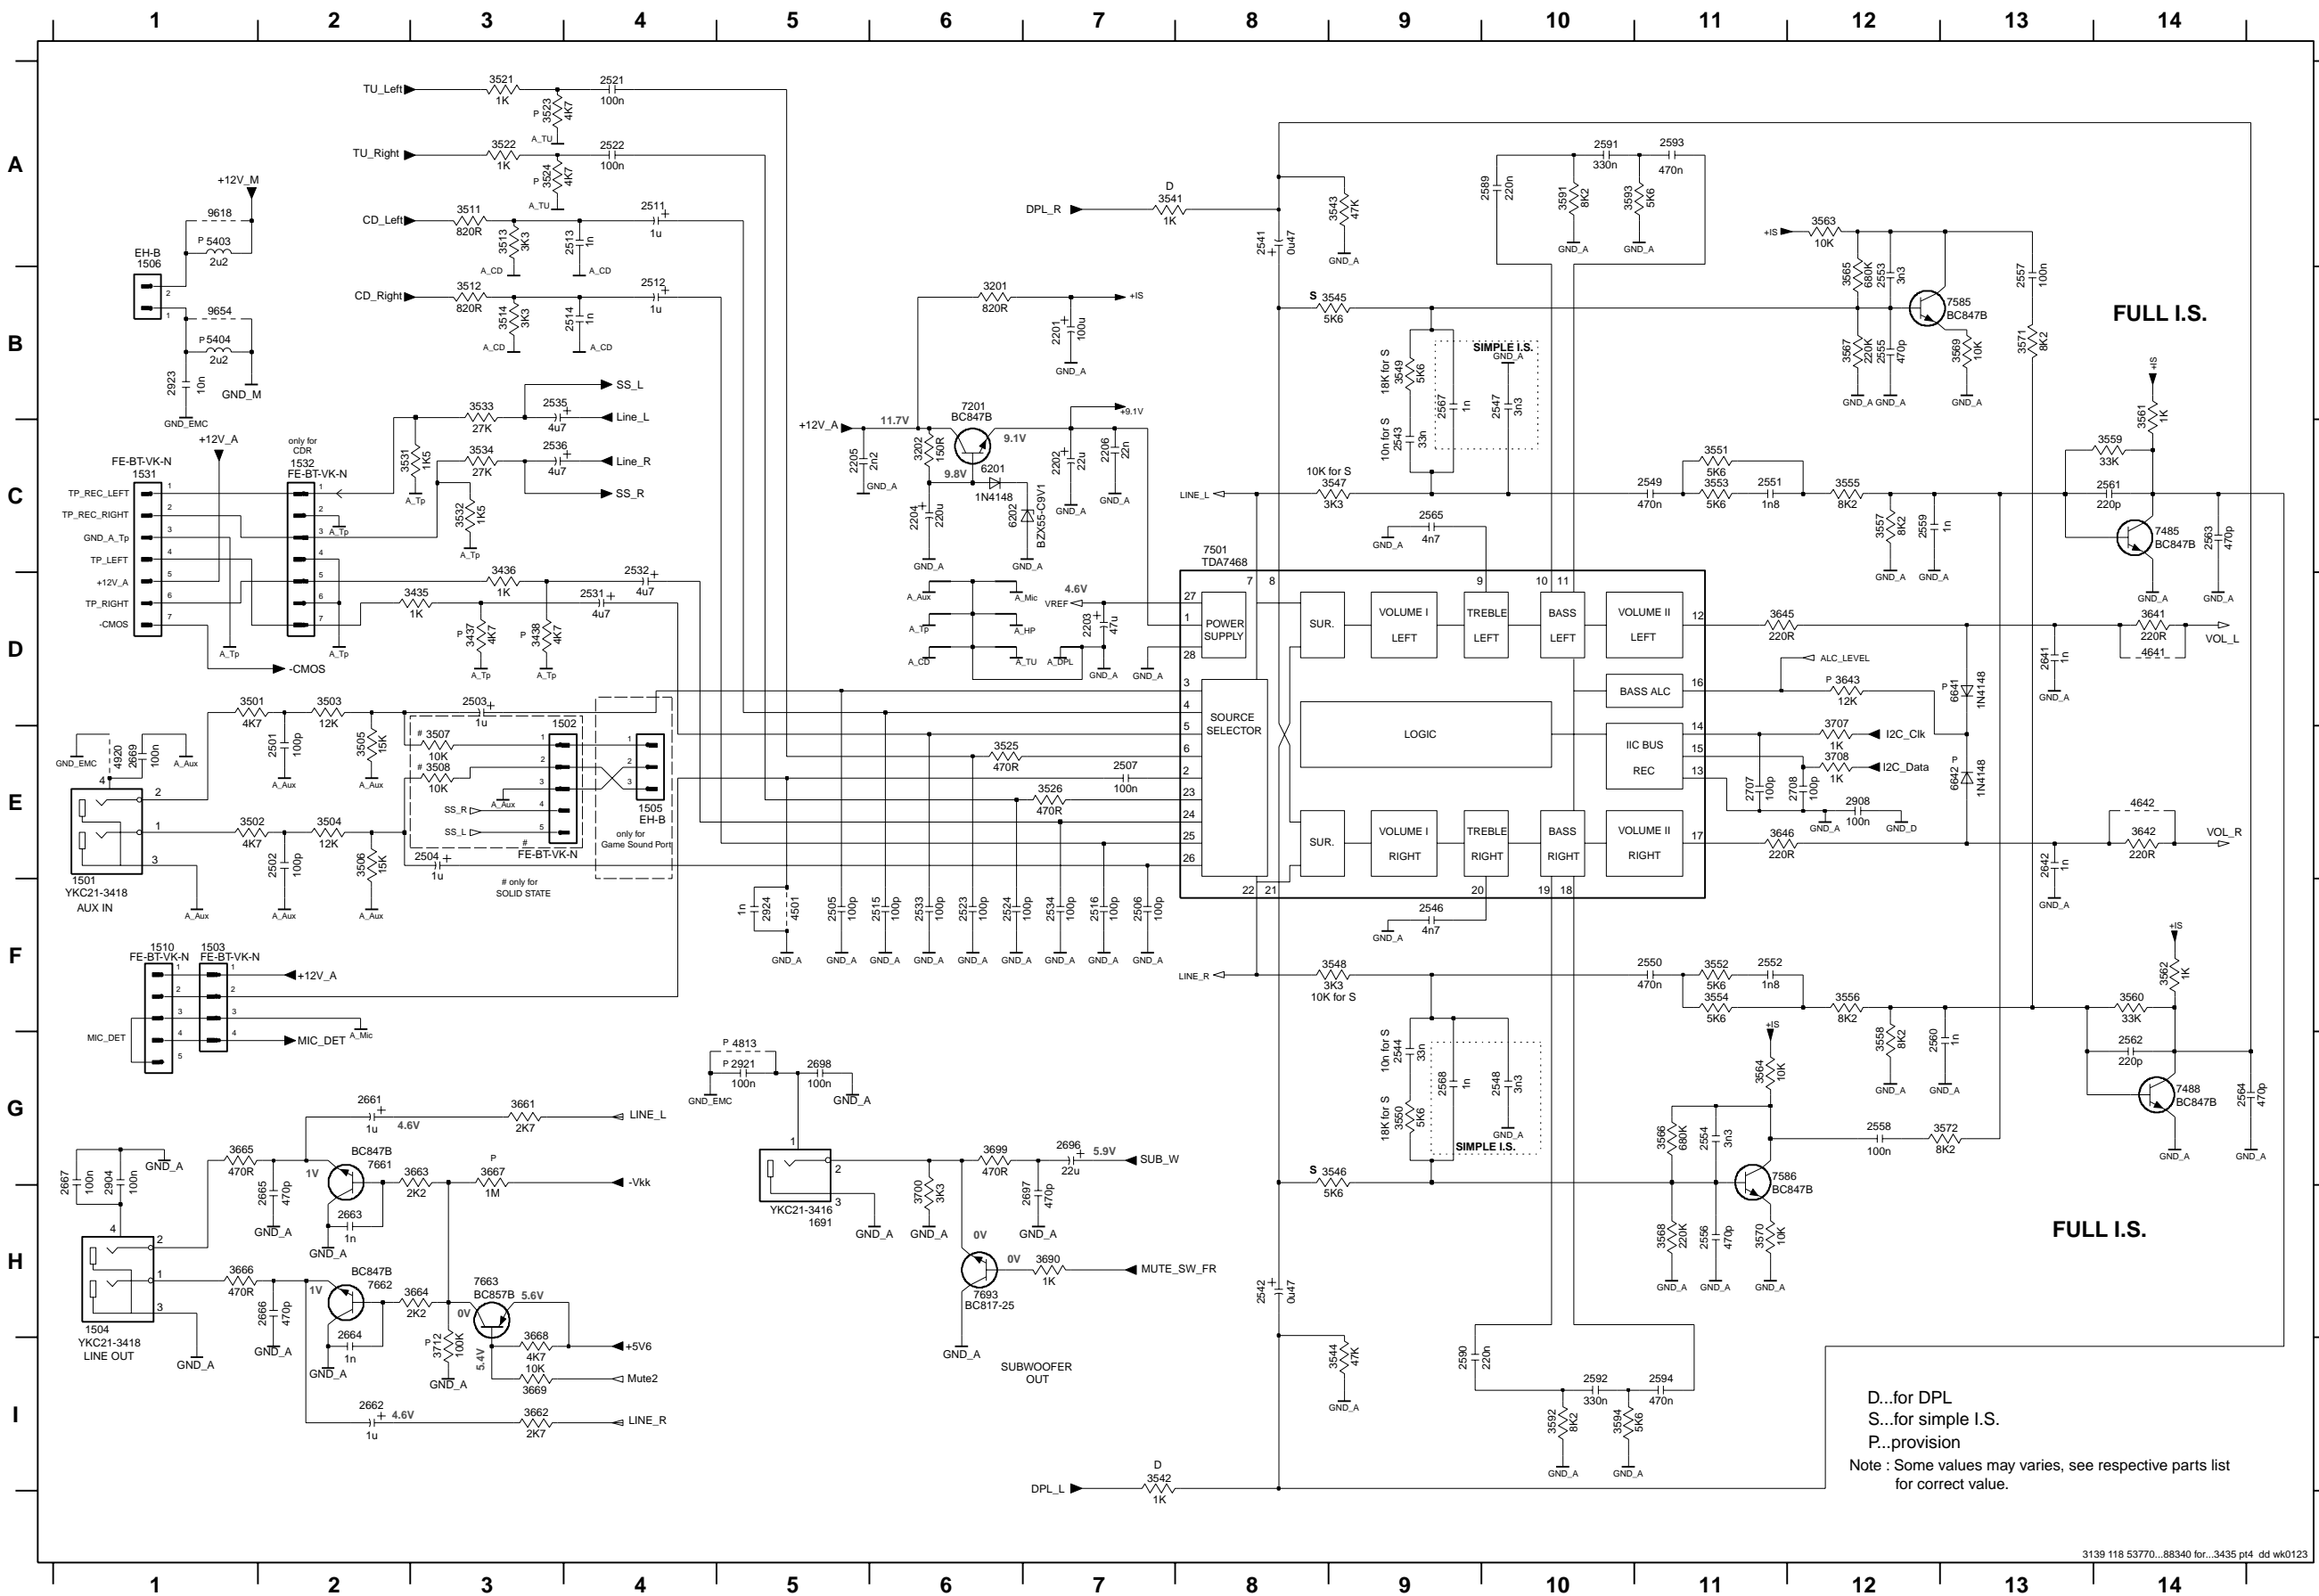

- 1501 E1
- 1502 E3
- 1503 F1
- 1504 H1
- 1505 E4
- 1506 A1
- 1510 F1
- 1531 C1
- 1532 C2
- 1691 H5
- 2201 B7
- 2202 C7
- 2203 D7
- 2204 C6
- 2205 C5
- 2206 C7
- 2501 E2
- 2502 E2
- 2503 D3
- 2504 E3
- 2505 F5
- 2506 F7
- 2507 E7
- 2511 A4
- 2512 B4
- 2513 A4
- 2514 B4
- 2515 F6
- 2516 F7
- 2521 A4
- 2522 A4
- 2523 F6
- 2524 F6
- 2525 D4
- 2532 C4
- 2533 F6
- 2534 F7
- 2535 B3
- 2536 C3
- 2541 A8
- 2542 H8
- 2543 C9
- 2544 G9
- 2546 F9
- 2547 B10
- 2548 G10
- 2549 C11
- 2550 F11
- 2551 C11
- 2552 F11
- 2553 B12
- 2554 G11
- 2555 B12
- 2556 H11
- 2557 B13
- 2558 G12
- 2559 C12
- 2560 G12
- 2561 C14
- 2562 G14
- 2563 C14
- 2564 G14
- 2565 C9
- 2567 B9
- 2568 G9
- 2569 A10
- 2590 I9
- 2591 A10
- 2592 I10
- 2593 A11
- 2594 H11
- 2641 D13
- 2642 E13
- 2661 G2
- 2662 I2
- 2663 H2
- 2664 I2
- 2665 H2
- 2666 H2
- 2667 G1
- 2669 E1
- 2696 G7
- 2697 H7
- 2698 G5
- 2707 E11
- 2904 G1
- 2908 E12
- 2921 G5
- 2923 B1
- 2924 F5
- 3201 B6
- 3202 C6
- 3435 D3
- 3437 D3
- 3438 D3
- 3501 D1
- 3502 E1
- 3503 D2
- 3504 E2
- 3505 E2
- 3506 E2
- 3507 E3
- 3508 E3
- 3511 B3
- 3512 B3
- 3513 B3
- 3514 B3
- 3521 A3
- 3522 A3
- 3523 A3
- 3524 A3
- 3525 A3
- 3526 A3
- 3527 A3
- 3528 A3
- 3529 A3
- 3530 A3
- 3531 A3
- 3532 A3
- 3533 A3
- 3534 A3
- 3535 A3
- 3536 A3
- 3537 A3
- 3538 A3
- 3539 A3
- 3540 A3
- 3541 A7
- 3542 I7
- 3543 A9
- 3544 I9
- 3545 B9
- 3546 G9
- 3547 C9
- 3548 F9
- 3549 B9
- 3550 G9
- 3551 C11
- 3552 F11
- 3553 C11
- 3554 F11
- 3555 C12
- 3556 F12
- 3557 C12
- 3558 G12
- 3559 C14
- 3560 F14
- 3561 B14
- 3562 F14
- 3563 A12
- 3564 G11
- 3565 B12
- 3566 G11
- 3567 B12
- 3568 H11
- 3569 B13
- 3570 H11
- 3571 B13
- 3572 G13
- 3591 A10
- 3592 I10
- 3593 A10
- 3594 I10
- 3641 D14
- 3642 E14
- 3643 D12
- 3644 D11
- 3645 E11
- 3661 G3
- 3662 I3
- 3663 G3
- 3664 H3
- 3665 G1
- 3666 H1
- 3667 G3
- 3668 I3
- 3669 I3
- 3696 H7
- 3697 G6
- 3700 H6
- 3707 E12
- 3708 E12
- 3712 I3
- 4501 F5
- 4641 D14
- 4642 E14
- 4813 G5
- 4920 E1
- 5403 A1
- 5404 B1
- 6201 C6
- 6202 C6
- 6641 D13
- 6642 E13
- 7201 B6
- 7485 C14
- 7501 C8
- 7585 B13
- 7586 G11
- 7661 G2
- 7662 H2
- 7663 H3
- 7693 H6
- 9618 A1
- 9654 B1

AF9 BOARD - CIRCUIT DIAGRAM (PART 2)

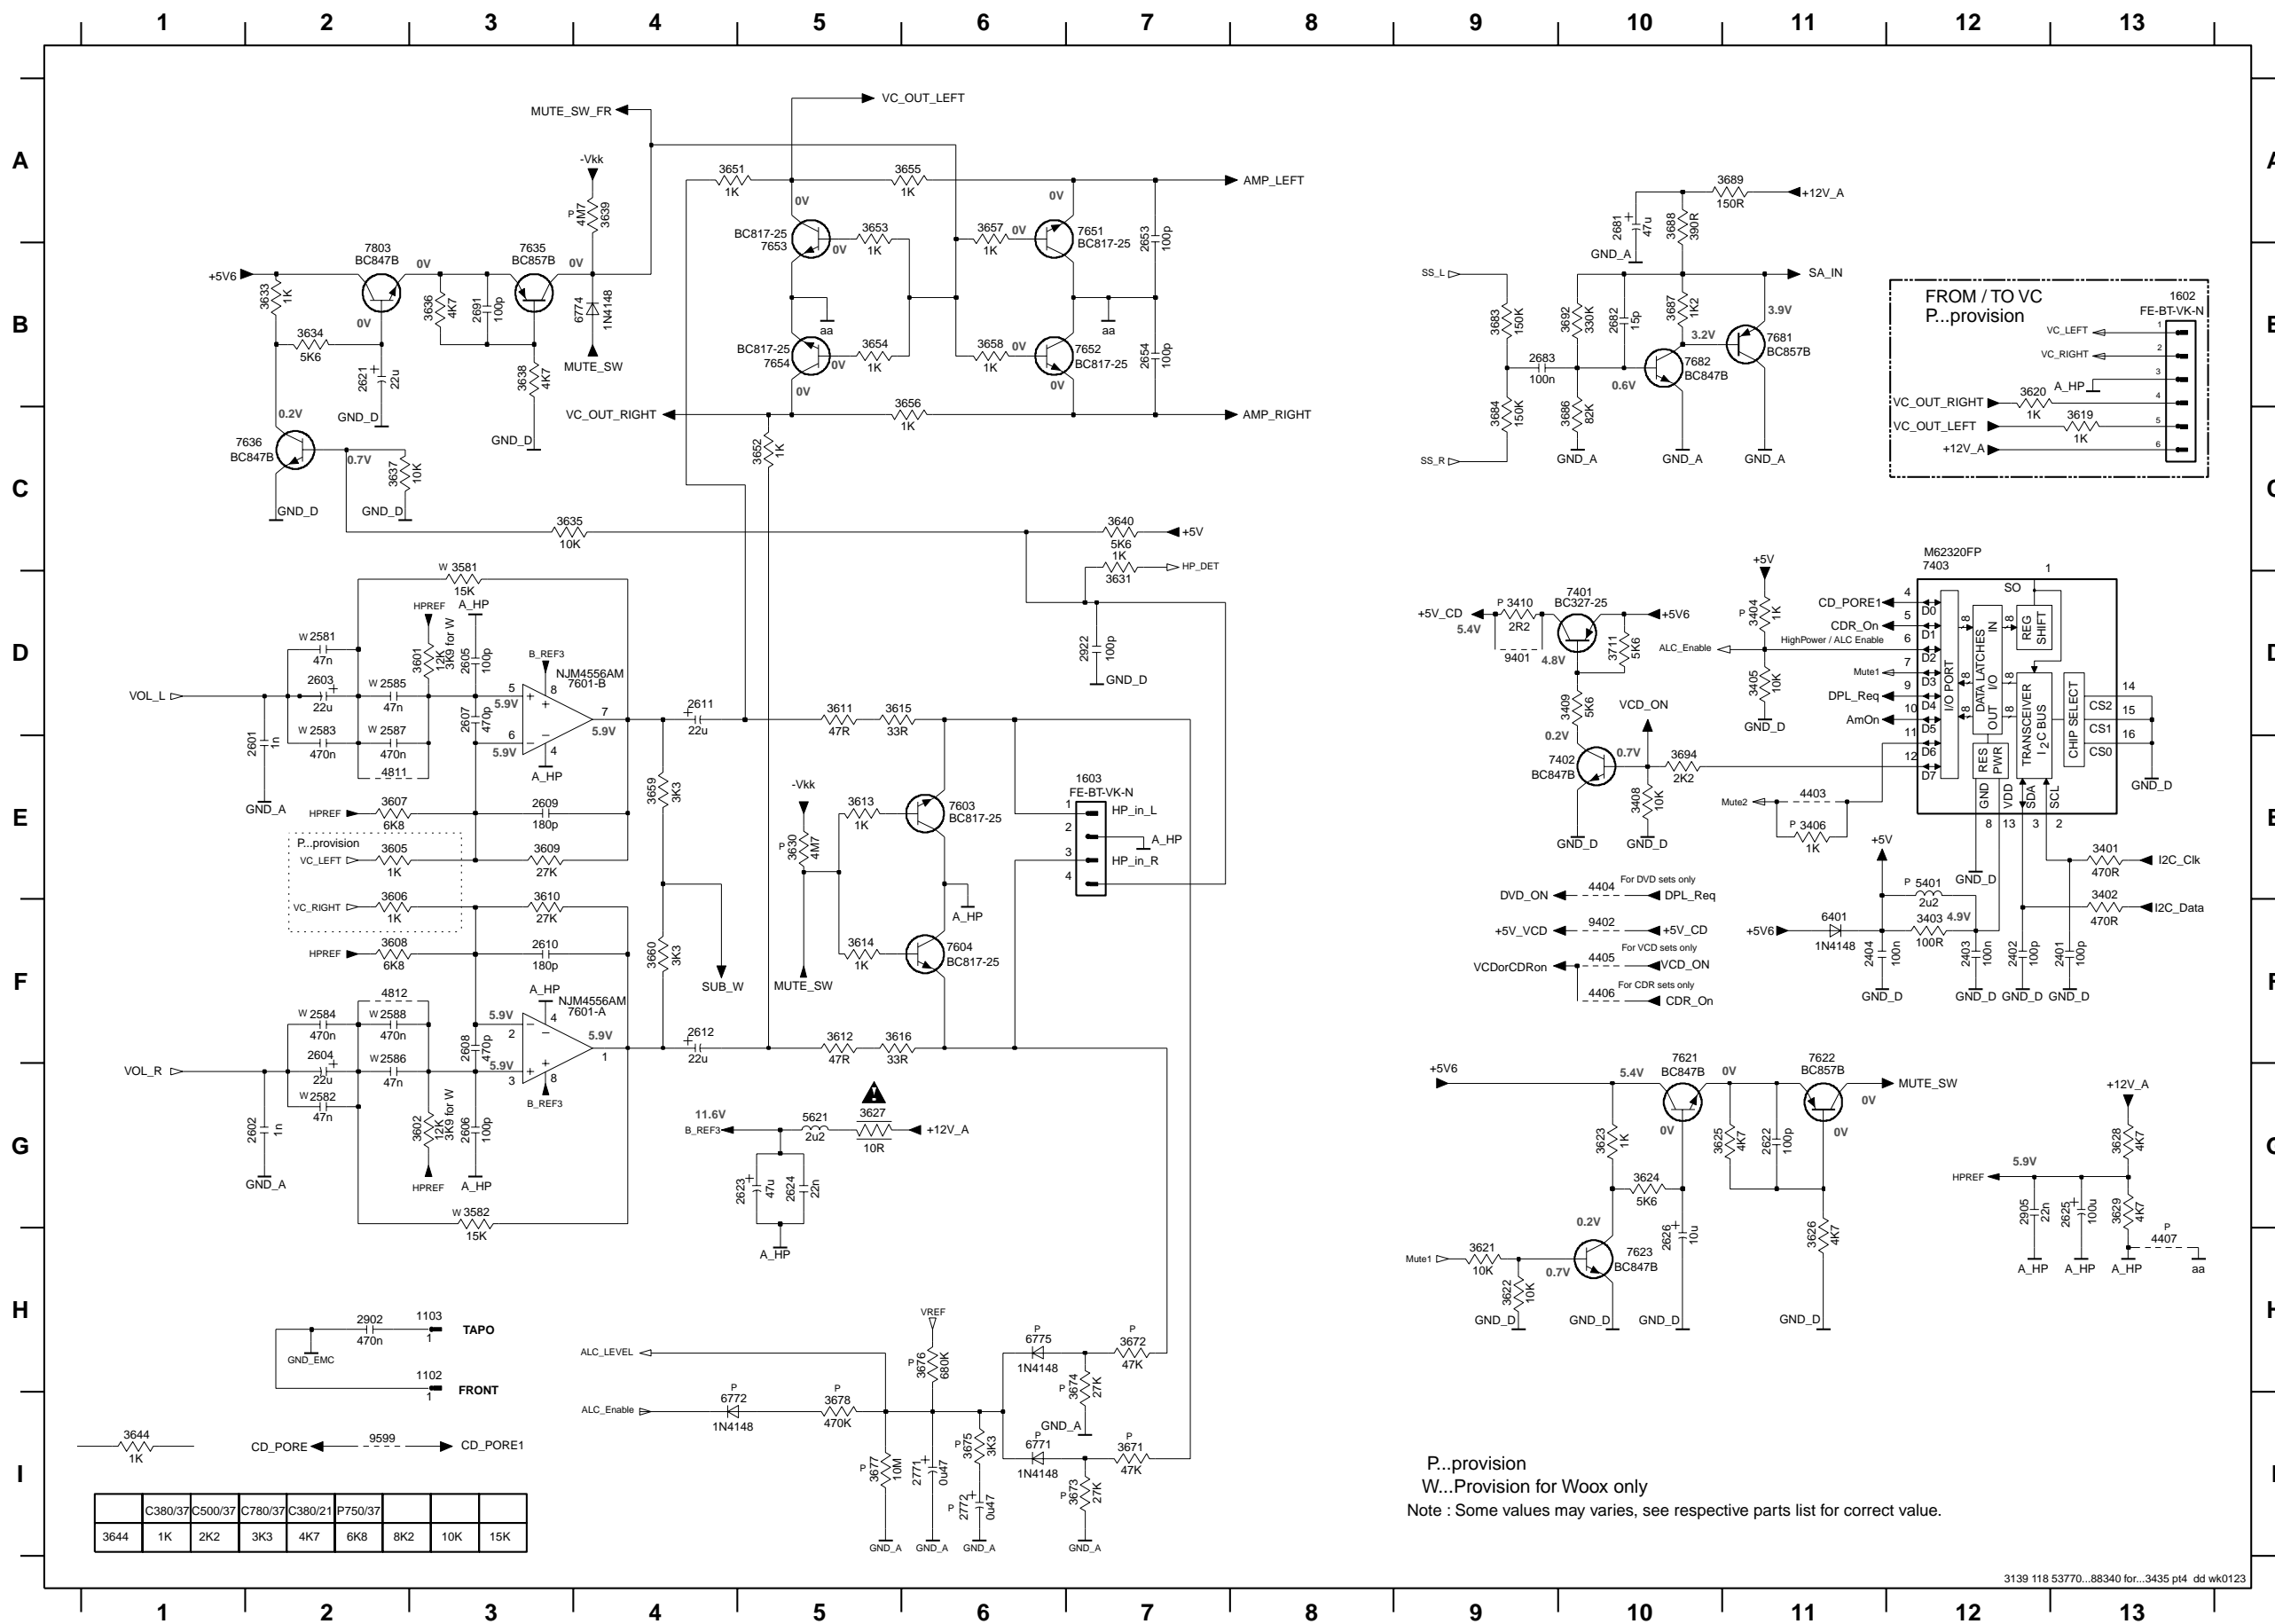


	C380/37	C500/37	C780/37	C380/21	P750/37		
3644	1K	2K2	3K3	4K7	6K8	8K2	10K

P...provision
W...Provision for Woox only
Note : Some values may varies, see respective parts list for correct value.


- 1102 H3
- 1103 H3
- 1602 B13
- 1603 E7
- 2401 F13
- 2402 F12
- 2403 F12
- 2404 F12
- 2581 D2
- 2582 G2
- 2583 D2
- 2584 F2
- 2585 D2
- 2586 F2
- 2587 D2
- 2588 F2
- 2601 E2
- 2602 G2
- 2603 D2
- 2604 F2
- 2605 D3
- 2606 G3
- 2607 D3
- 2608 F3
- 2609 E3
- 2610 F3
- 2611 D4
- 2612 F4
- 2621 B2
- 2622 G11
- 2623 G5
- 2624 G5
- 2625 G13
- 2626 H10
- 2653 A7
- 2654 B7
- 2681 A10
- 2682 B10
- 2683 B9
- 2691 B3
- 2771 I6
- 2772 I6
- 2902 H2
- 2905 G12
- 2922 D7
- 3401 E13
- 3402 E13
- 3403 F12
- 3404 D11
- 3405 D11
- 3406 E11
- 3408 E10
- 3409 D10
- 3410 D9
- 3581 D3
- 3582 G3
- 3601 D3
- 3602 G3
- 3605 E2
- 3606 F2
- 3607 E2
- 3608 F2
- 3609 E3
- 3610 F3
- 3611 D5
- 3612 F5
- 3613 E5
- 3614 F5
- 3615 D5
- 3616 F5
- 3619 C13
- 3620 B12
- 3621 H9
- 3622 H9
- 3623 G10
- 3624 G10
- 3625 G10
- 3626 H11
- 3627 G5
- 3628 G13
- 3629 G13
- 3630 E5
- 3631 D7
- 3633 B2
- 3634 B2
- 3635 C3
- 3636 B3
- 3637 C2
- 3638 B3
- 3639 A4
- 3640 C7
- 3644 I1
- 3651 A4
- 3652 C5
- 3653 A5
- 3654 B5
- 3655 A6
- 3656 C6
- 3657 A6
- 3658 B6
- 3659 E4
- 3660 F4
- 3671 I7
- 3672 H7
- 3673 I7
- 3674 H7
- 3675 I6
- 3676 H6
- 3677 I5
- 3678 I5
- 3683 B9
- 3684 C9
- 3686 C10
- 3687 B10
- 3688 A10
- 3689 A11
- 3692 B10
- 3694 E10
- 3711 D10
- 4403 E11
- 4404 E10
- 4405 F10
- 4406 F10
- 4407 H13
- 4811 E2
- 4812 F2
- 5401 E12
- 5621 G5
- 6401 F11
- 6771 I6
- 6772 I4
- 6774 B4
- 6775 H6
- 7401 D10
- 7402 E10
- 7403 C12
- 7601-A G3
- 7601-B D3
- 7603 E6
- 7604 F6
- 7621 F10
- 7622 F11
- 7623 H10
- 7635 B3
- 7636 C2
- 7651 A7
- 7652 B7
- 7653 B5
- 7654 B5
- 7681 B11
- 7682 B10
- 7803 B2
- 9401 D9
- 9402 F10
- 9599 I2

AF9 BOARD - CIRCUIT DIAGRAM (PART 3)


1100 F6 1203 C1 1206 C1 1403 A9 1520 E6 1523 D6 1541 D4 2207 D3 2210 F2 2801 B4 2804 B3 2807 B1 2810 A4 2951 E7 2954 E6 3412 A8 3803 B3 3806 A1 3809 B2 3822 F3 4903 B8 4906 A5 4909 A3 4912 B8 4915 C8 5802 A3 6206 F3 6209 F3 7802 A3 9484 D4 9634 E2
 1201 C1 1204 E1 1401 A9 1404 D9 1521 A7 1524 A5 1542 D4 2208 F2 2211 F3 2802 C3 2805 B2 2808 B4 2901 F6 2952 E7 2955 E1 3801 B4 3804 A3 3807 B4 3820 E3 4801 B4 4904 F7 4907 C8 4910 A3 4913 B8 4921 B1 5802 A3 6204 F7 6207 C5 7202 E3 9405 C8 9486 E7 9904 F7
 1202 E1 1205 C1 1402 D9 1405 A9 1522 A6 1525 B5 1801 A1 2209 E3 2520 E7 2803 B3 2806 B2 2809 B4 2950 E7 2953 E7 3205 D2 3802 A4 3805 B2 3808 A3 3821 E2 4802 C4 4905 C3 4908 C8 4911 A4 4914 B5 5801 B2 6205 D3 6208 C5 7404 F3 9483 F6 9614 E3

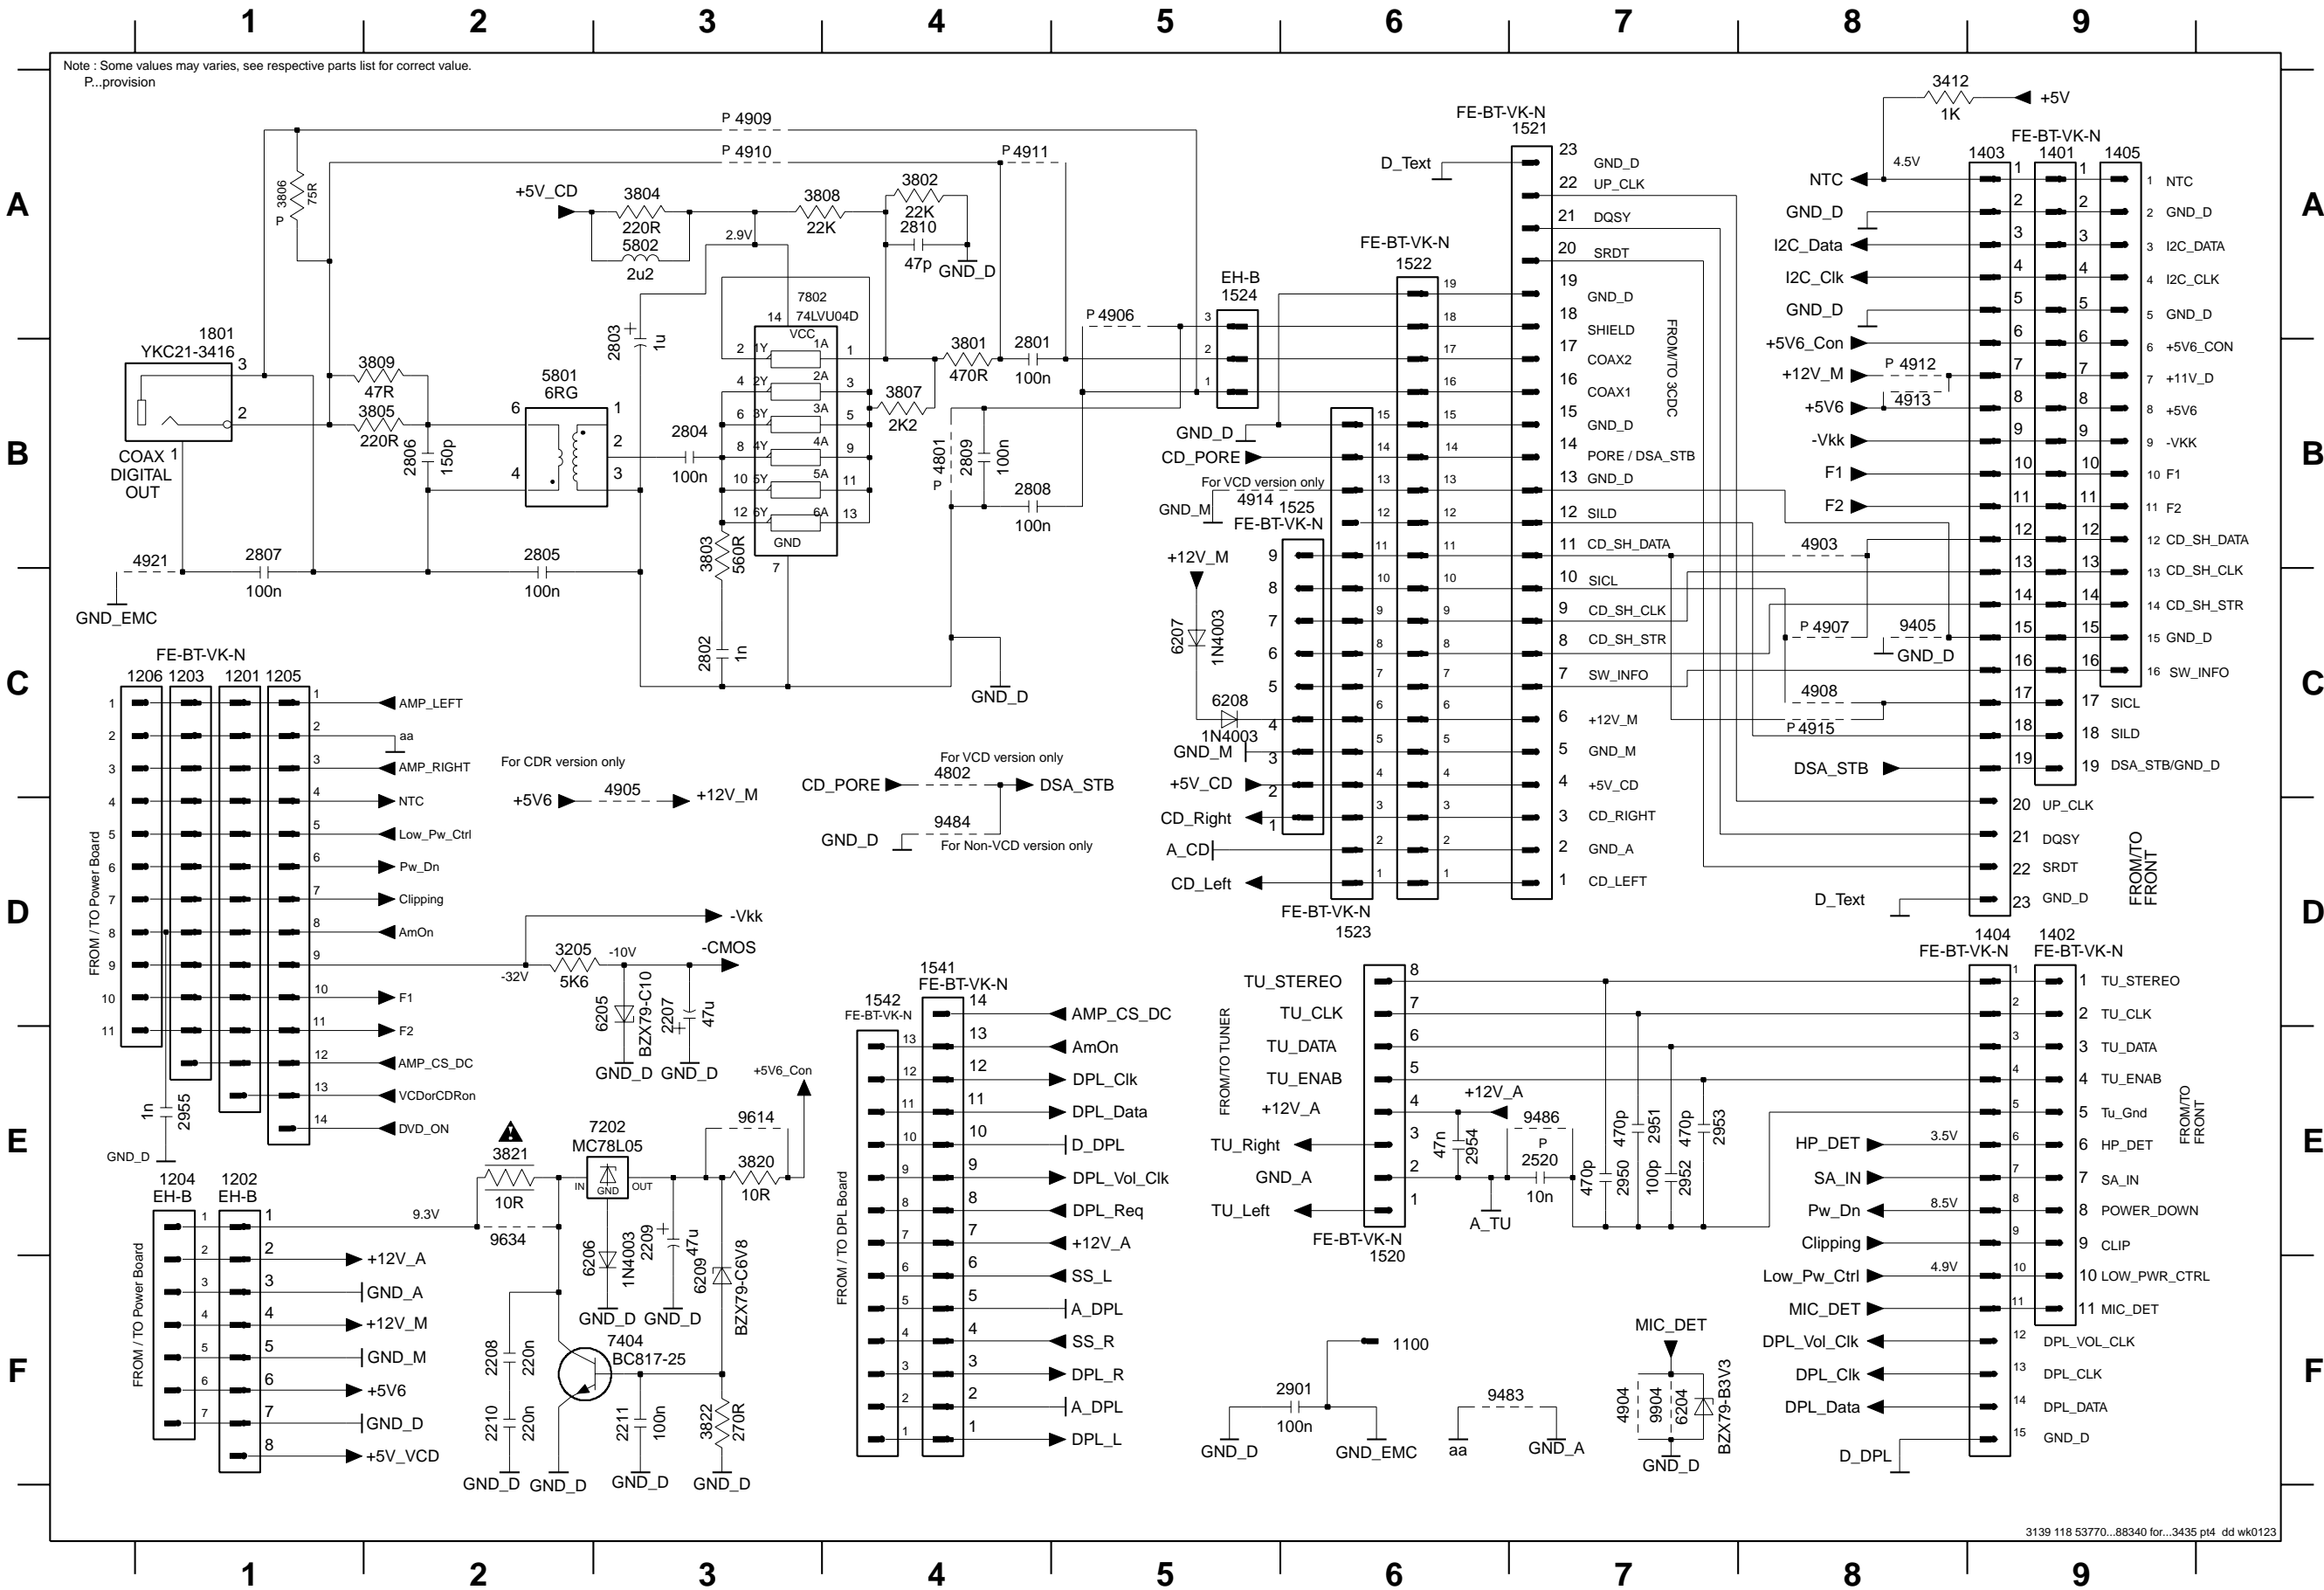


VIDEO OUT CINCH BOARD - COMPONENT LAYOUT

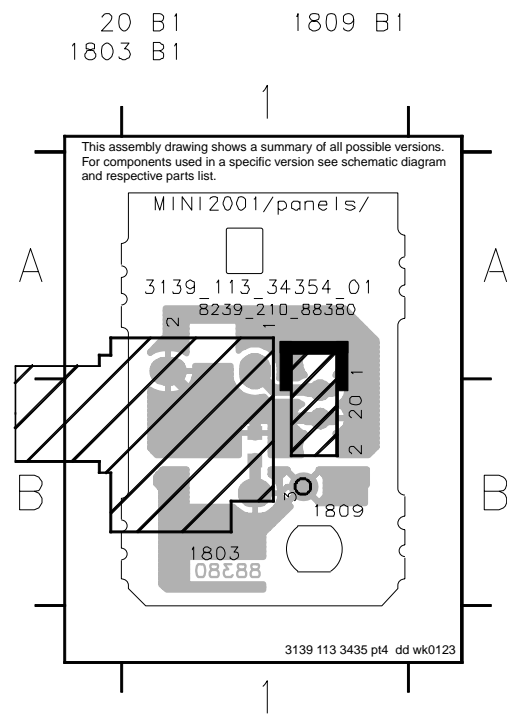

VIDEO OUT CINCH BOARD - CHIP LAYOUT

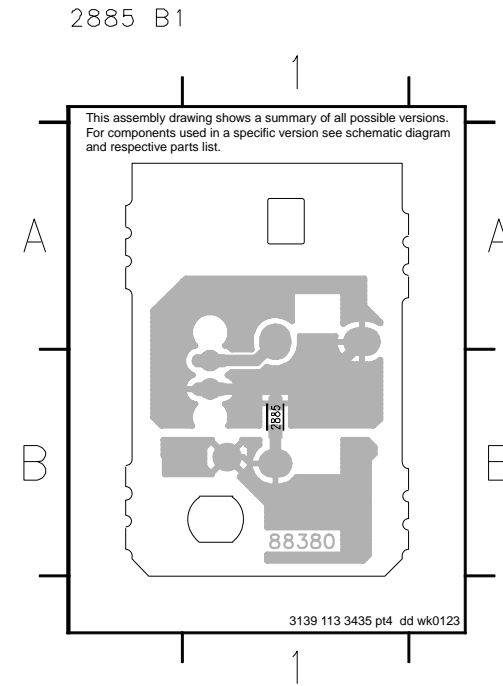

VIDEO OUT CINCH PART - CIRCUIT DIAGRAM

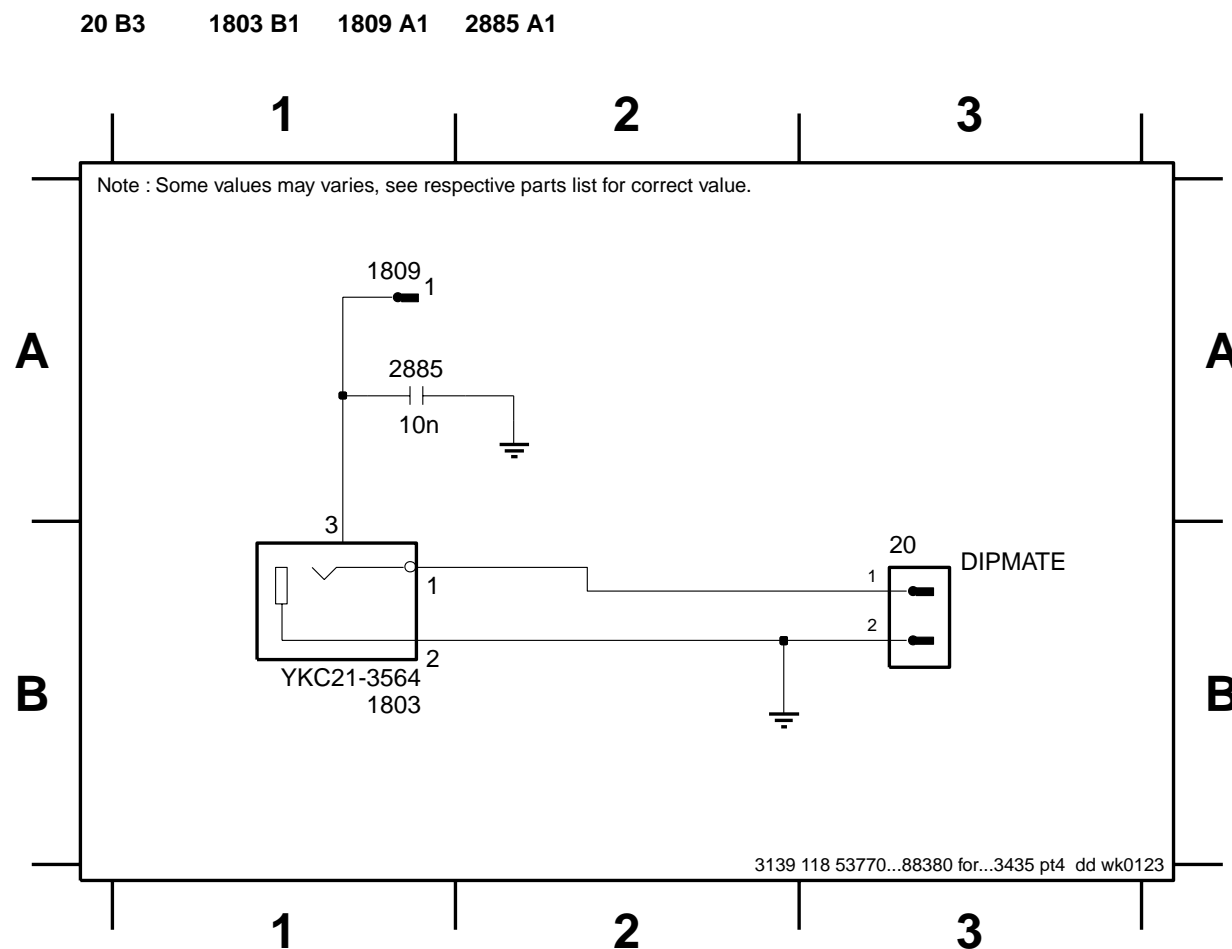

ELECTRICAL PARTS LIST - AF9 BOARD

MISCELLANEOUS

1206	4822 267 11309	Flex Connector 11P	2544	5322 126 11583	10nF 10% 50V
1401	4822 265 11553	Flex Connector 19P	2546	4822 121 43856	4,7nF 5% 250V
1402	4822 267 11039	Flex Connector 11P	2547	5322 126 11579	3,3nF 10% 63V
1501	4822 265 20553	Cinch Socket - Aux in	2548	5322 126 11579	3,3nF 10% 63V
1504	4822 265 20553	Cinch Socket - Line out	2565	4822 121 43856	4,7nF 5% 250V
1520	4822 265 11515	Flex Connector 8P	2567	3198 016 31020	1nF 25V
1522	4822 265 11553	Flex Connector 19P	2568	3198 016 31020	1nF 25V
1531	4822 267 10953	Flex Connector 7P	2589	4822 121 42408	220nF 5% 63V
1603	4822 267 10733	Flex Connector 4P	2590	4822 121 42408	220nF 5% 63V
1801	4822 267 31729	Cinch Socket - Digital out	2591	5322 121 42661	330nF 5% 63V
			2592	5322 121 42661	330nF 5% 63V
			2593	4822 121 51252	470nF 5% 63V
			2594	4822 121 51252	470nF 5% 63V

CAPACITORS

2201	4822 124 40207	100µF 20% 25V	2601	3198 016 31020	1nF 25V
2202	4822 124 81151	22µF 50V	2602	3198 016 31020	1nF 25V
2203	4822 124 40433	47µF 20% 25V	2603	4822 124 81151	22µF 50V
2204	4822 124 40196	220µF 20% 16V	2604	4822 124 81151	22µF 50V
2205	4822 126 14238	2,2nF 50V	2605	4822 122 31765	100pF 2% 63V
2206	4822 126 14494	22nF 10% 25V	2606	4822 122 31765	100pF 2% 63V
2207	4822 124 40433	47µF 20% 25V	2607	4822 126 13881	470pF 5% 50V
2208	4822 126 13879	220nF +80/-20% 16V	2608	4822 126 13881	470pF 5% 50V
2209	4822 124 41751	47µF 20% 50V	2609	4822 126 14508	180pF 5% 50V
2210	4822 126 13879	220nF +80/-20% 16V	2610	4822 126 14508	180pF 5% 50V
2401	4822 122 31765	100pF 2% 63V	2611	4822 124 81151	22µF 50V
2402	4822 122 31765	100pF 2% 63V	2612	4822 124 81151	22µF 50V
2403	4822 126 14305	100nF 10% 16V	2621	4822 124 81151	22µF 50V
2404	4822 126 14305	100nF 10% 16V	2622	4822 122 31765	100pF 2% 63V
2501	4822 122 31765	100pF 2% 63V	2623	4822 124 40433	47µF 20% 25V
2502	4822 122 31765	100pF 2% 63V	2624	3198 017 42230	22nF 50V
2503	4822 124 22466	1µF 20% 50V	2625	4822 124 40207	100µF 20% 25V
2504	4822 124 22466	1µF 20% 50V	2626	4822 124 40769	4,7µF 20% 100V
2505	4822 122 31765	100pF 2% 63V	2641	3198 016 31020	1nF 25V
2506	4822 122 31765	100pF 2% 63V	2642	3198 016 31020	1nF 25V
2507	4822 126 14305	100nF 10% 16V	2653	4822 122 31765	100pF 2% 63V
2511	4822 124 22466	1µF 20% 50V	2654	4822 122 31765	100pF 2% 63V
2512	4822 124 22466	1µF 20% 50V	2661	4822 124 21913	1µF 20% 63V
2513	3198 016 31020	1nF 25V	2662	4822 124 21913	1µF 20% 63V
2514	3198 016 31020	1nF 25V	2663	3198 016 31020	1nF 25V
2515	4822 122 31765	100pF 2% 63V	2664	3198 016 31020	1nF 25V
2516	4822 122 31765	100pF 2% 63V	2665	4822 126 13881	470pF 5% 50V
2521	4822 126 14305	100nF 10% 16V	2666	4822 126 13881	470pF 5% 50V
2522	4822 126 14305	100nF 10% 16V	2667	4822 126 14305	100nF 10% 16V
2523	4822 122 31765	100pF 2% 63V	2669	4822 126 14305	100nF 10% 16V
2524	4822 122 31765	100pF 2% 63V	2681	4822 124 40433	47µF 20% 25V
2531	4822 124 40769	4,7µF 20% 100V	2682	4822 122 33752	15pF 5% 50V
2532	4822 124 40769	4,7µF 20% 100V	2683	4822 126 14305	100nF 10% 16V
2533	4822 122 31765	100pF 2% 63V	2691	4822 122 31765	100pF 2% 63V
2534	4822 122 31765	100pF 2% 63V	2707	4822 122 31765	100pF 2% 63V
2535	4822 124 40769	4,7µF 20% 100V	2708	4822 122 31765	100pF 2% 63V
2536	4822 124 40769	4,7µF 20% 100V	2771	4822 124 41407	0,47µF 20% 63V
2541	4822 124 41407	0,47µF 20% 63V	2801	4822 126 14305	100nF 10% 16V
2542	4822 124 41407	0,47µF 20% 63V	2802	3198 016 31020	1nF 25V
2543	5322 126 11583	10nF 10% 50V			

ELECTRICAL PARTS LIST - AF9 BOARD**CAPACITORS**

2803	4822 124 40756	1µF 20% 100V
2804	4822 126 14305	100nF 10% 16V
2805	4822 126 14305	100nF 10% 16V
2806	4822 122 33753	150pF 5% 50V
2807	4822 126 14305	100nF 10% 16V
2808	4822 126 14305	100nF 10% 16V
2809	4822 126 14305	100nF 10% 16V
2810	4822 122 33777	47pF 5% 63V
2902	3198 017 44740	470nF 10V
2905	3198 017 42230	22nF 50V
2908	4822 126 14305	100nF 10% 16V
2950	4822 126 13881	470pF 5% 50V
2951	4822 126 13881	470pF 5% 50V
2952	4822 122 31765	100pF 2% 63V
2953	4822 126 13881	470pF 5% 50V

RESISTORS

3201	4822 117 12968	820R 5% 0,62W
3202	4822 051 30151	150R 5% 0,062W
3205	4822 116 52289	5k6 5% 0,5W
3401	4822 051 30471	470R 5% 0,062W
3402	4822 051 30471	470R 5% 0,062W
3403	4822 116 52175	100R 5% 0,5W
3405	4822 051 30103	10k 5% 0,062W
3408	4822 051 30103	10k 5% 0,062W
3409	4822 051 30562	5k6 5% 0,063W
3412	4822 050 11002	1k 1% 0,4W
3435	4822 050 11002	1k 1% 0,4W
3436	4822 050 11002	1k 1% 0,4W
3501	4822 051 30472	4k7 5% 0,062W
3502	4822 051 30472	4k7 5% 0,062W
3503	4822 051 30123	12k 5% 0,062W
3504	4822 051 30123	12k 5% 0,062W
3505	4822 051 30153	15k 5% 0,062W
3506	4822 051 30153	15k 5% 0,062W
3511	4822 117 12968	820R 5% 0,62W
3512	4822 117 12968	820R 5% 0,62W
3513	4822 051 30332	3k3 5% 0,062W
3514	4822 051 30332	3k3 5% 0,062W
3521	4822 051 30102	1k 5% 0,062W
3522	4822 051 30102	1k 5% 0,062W
3525	4822 051 30471	470R 5% 0,062W
3526	4822 051 30471	470R 5% 0,062W
3531	4822 051 30152	1k5 5% 0,062W
3532	4822 051 30152	1k5 5% 0,062W
3533	4822 051 30273	27k 5% 0,062W
3534	4822 051 30273	27k 5% 0,062W
3543	4822 117 12925	47k 1% 0,063W
3544	4822 117 12925	47k 1% 0,063W
3545	4822 051 30562	5k6 5% 0,063W
3546	4822 051 30562	5k6 5% 0,063W
3547	4822 051 30103	10k 5% 0,062W
3548	4822 051 30103	10k 5% 0,062W
3549	4822 051 30183	18k 5% 0,062W
3550	4822 051 30183	18k 5% 0,062W
3591	4822 117 12902	8k2 1% 0,063W
3592	4822 117 12902	8k2 1% 0,063W
3593	4822 051 30562	5k6 5% 0,063W
3594	4822 051 30562	5k6 5% 0,063W
3601	4822 116 52238	12k 5% 0,5W
3602	4822 116 52238	12k 5% 0,5W
3607	4822 051 30682	6k8 5% 0,062W
3608	4822 116 83961	6k8 5%
3609	4822 051 30273	27k 5% 0,062W
3610	4822 051 30273	27k 5% 0,062W
3611	4822 051 30479	47R 5% 0,062W
3612	4822 051 30479	47R 5% 0,062W
3613	4822 051 30102	1k 5% 0,062W
3614	4822 051 30102	1k 5% 0,062W
3615	4822 051 30339	33R 5% 0,062W
3616	4822 051 30339	33R 5% 0,062W
3621	4822 051 30103	10k 5% 0,062W
3622	4822 051 30103	10k 5% 0,062W
3623	4822 051 30102	1k 5% 0,062W
3624	4822 051 30562	5k6 5% 0,063W
3625	4822 051 30472	4k7 5% 0,062W
3626	4822 051 30472	4k7 5% 0,062W
3627	4822 052 10109	△ 10R 5% 0,33W
3628	4822 116 52283	4k7 5% 0,5W
3629	4822 051 30472	4k7 5% 0,062W
3631	4822 050 11002	1k 1% 0,4W
3633	4822 051 30102	1k 5% 0,062W
3634	4822 051 30562	5k6 5% 0,063W
3635	4822 051 30103	10k 5% 0,062W
3636	4822 051 30472	4k7 5% 0,062W
3637	4822 051 30103	10k 5% 0,062W
3638	4822 051 30472	4k7 5% 0,062W
3640	4822 116 52289	5k6 5% 0,5W
3644	4822 117 12902	8k2 1% 0,063W
3645	4822 051 30221	220R 5% 0,062W
3646	4822 051 30221	220R 5% 0,062W
3651	4822 051 30102	1k 5% 0,062W
3652	4822 051 30102	1k 5% 0,062W
3653	4822 051 30102	1k 5% 0,062W
3654	4822 051 30102	1k 5% 0,062W
3655	4822 051 30102	1k 5% 0,062W
3656	4822 051 30102	1k 5% 0,062W
3657	4822 051 30102	1k 5% 0,062W
3658	4822 051 30102	1k 5% 0,062W
3661	4822 051 30272	2k7 5% 0,062W
3662	4822 051 30272	2k7 5% 0,062W
3663	4822 116 52256	2k2 5% 0,5W
3664	4822 051 30222	2k2 5% 0,062W
3665	4822 051 30471	470R 5% 0,062W

ELECTRICAL PARTS LIST - AF9 BOARD**RESISTORS**

3666	4822 051 30471	470R 5% 0,062W
3668	4822 051 30472	4k7 5% 0,062W
3669	4822 051 30103	10k 5% 0,062W
3683	4822 051 30154	150k 5% 0,062W
3684	4822 051 30154	150k 5% 0,062W
3686	4822 117 12864	82k 5% 0,6W
3687	4822 117 11817	1k2 1% 1/16W
3688	4822 051 30391	390R 5% 0,062W
3689	4822 051 30151	150R 5% 0,062W
3692	4822 051 30334	330k 5% 0,062W
3694	4822 051 30222	2k2 5% 0,062W
3707	4822 051 30102	1k 5% 0,062W
3708	4822 051 30102	1k 5% 0,062W
3711	4822 051 30562	5k6 5% 0,063W
3801	4822 051 30471	470R 5% 0,062W
3802	4822 051 30223	22k 5% 0,062W
3803	4822 051 30561	560R 5% 0,062W
3804	4822 116 83872	220R 5% 0,5W
3805	4822 051 30221	220R 5% 0,062W
3807	4822 051 30222	2k2 5% 0,062W
3808	4822 051 30223	22k 5% 0,062W
3809	4822 051 30479	47R 5% 0,062W
3820	4822 116 52176	10R 5% 0,5W
3821	4822 052 10109	△ 10R 5% 0,33W
4100	4822 051 30008	OR Jumper 0603
4101	4822 051 30008	OR Jumper 0603
4104	4822 051 30008	OR Jumper 0603
4108	4822 051 30008	OR Jumper 0603
4110	4822 051 30008	OR Jumper 0603
4111	4822 051 30008	OR Jumper 0603
4112	4822 051 30008	OR Jumper 0603
4113	4822 051 30008	OR Jumper 0603
4114	4822 051 30008	OR Jumper 0603
4115	4822 051 30008	OR Jumper 0603
4116	4822 051 30008	OR Jumper 0603
4119	4822 051 30008	OR Jumper 0603
4122	4822 051 30008	OR Jumper 0603
4124	4822 051 30008	OR Jumper 0603
4125	4822 051 30008	OR Jumper 0603
4126	4822 051 30008	OR Jumper 0603
4127	4822 051 30008	OR Jumper 0603
4128	4822 051 30008	OR Jumper 0603
4130	4822 051 30008	OR Jumper 0603
4132	4822 051 30008	OR Jumper 0603
4133	4822 051 30008	OR Jumper 0603
4134	4822 051 30008	OR Jumper 0603
4135	4822 051 30008	OR Jumper 0603
4137	4822 051 30008	OR Jumper 0603
4138	4822 051 30008	OR Jumper 0603
4139	4822 051 30008	OR Jumper 0603
4141	4822 051 30008	OR Jumper 0603
4142	4822 051 30008	OR Jumper 0603

4143	4822 051 30008	OR Jumper 0603
4144	4822 051 30008	OR Jumper 0603
4145	4822 051 30008	OR Jumper 0603
4146	4822 051 30008	OR Jumper 0603
4147	4822 051 30008	OR Jumper 0603
4148	4822 051 30008	OR Jumper 0603
4150	4822 051 30008	OR Jumper 0603
4151	4822 051 30008	OR Jumper 0603
4152	4822 051 30008	OR Jumper 0603
4153	4822 051 30008	OR Jumper 0603
4403	4822 051 30008	OR Jumper 0603
4501	4822 051 30008	OR Jumper 0603
4641	4822 051 30008	OR Jumper 0603
4642	4822 051 30008	OR Jumper 0603
4811	4822 051 30008	OR Jumper 0603
4812	4822 051 30008	OR Jumper 0603
4903	4822 051 30008	OR Jumper 0603
4904	4822 051 30008	OR Jumper 0603
4908	4822 051 30008	OR Jumper 0603
4913	4822 051 30008	OR Jumper 0603
4921	4822 051 30008	OR Jumper 0603

COILS & FILTERS

5621	4822 157 62552	Coil 2,2µH 5%
5801	2422 536 00019	Transformer 6RG

DIODES

6201	4822 130 30621	1N4148
6202	4822 130 30862	BZX55-C9V1
6205	4822 130 61219	BZX79-C10
6206	4822 130 31878	1N4003G
6207	4822 130 31878	1N4003G
6208	4822 130 31878	1N4003G
6401	4822 130 30621	1N4148
6774	4822 130 30621	1N4148

TRANSISTORS & INTEGRATED CIRCUITS

7201	5322 130 60159	BC847B
7202	4822 209 72042	MC78L05ACP
7401	4822 130 41246	BC327-25
7402	5322 130 60159	BC847B
7403	4822 209 17345	M62320FP
7501	9322 150 74668	TDA7468D
7601	4822 209 31378	NJM4556AM
7603	4822 130 42804	BC817-25
7604	4822 130 42804	BC817-25
7621	5322 130 60159	BC847B
7622	4822 130 60373	BC857B
7623	5322 130 60159	BC847B
7635	4822 130 60373	BC857B
7636	5322 130 60159	BC847B
7651	4822 130 42804	BC817-25


ELECTRICAL PARTS LIST - AF9 BOARD

TRANSISTORS & INTEGRATED CIRCUITS

7652	4822 130 42804	BC817-25
7653	4822 130 42804	BC817-25
7654	4822 130 42804	BC817-25
7661	5322 130 60159	BC847B
7662	5322 130 60159	BC847B
7663	4822 130 60373	BC857B
7681	4822 130 60373	BC857B
7682	5322 130 60159	BC847B
7802	4822 209 17235	74LVU04D
7803	5322 130 60159	BC847B

Note : Only the parts mentioned in this list are normal service spare parts.

SET MECHANICAL EXPLODED VIEW

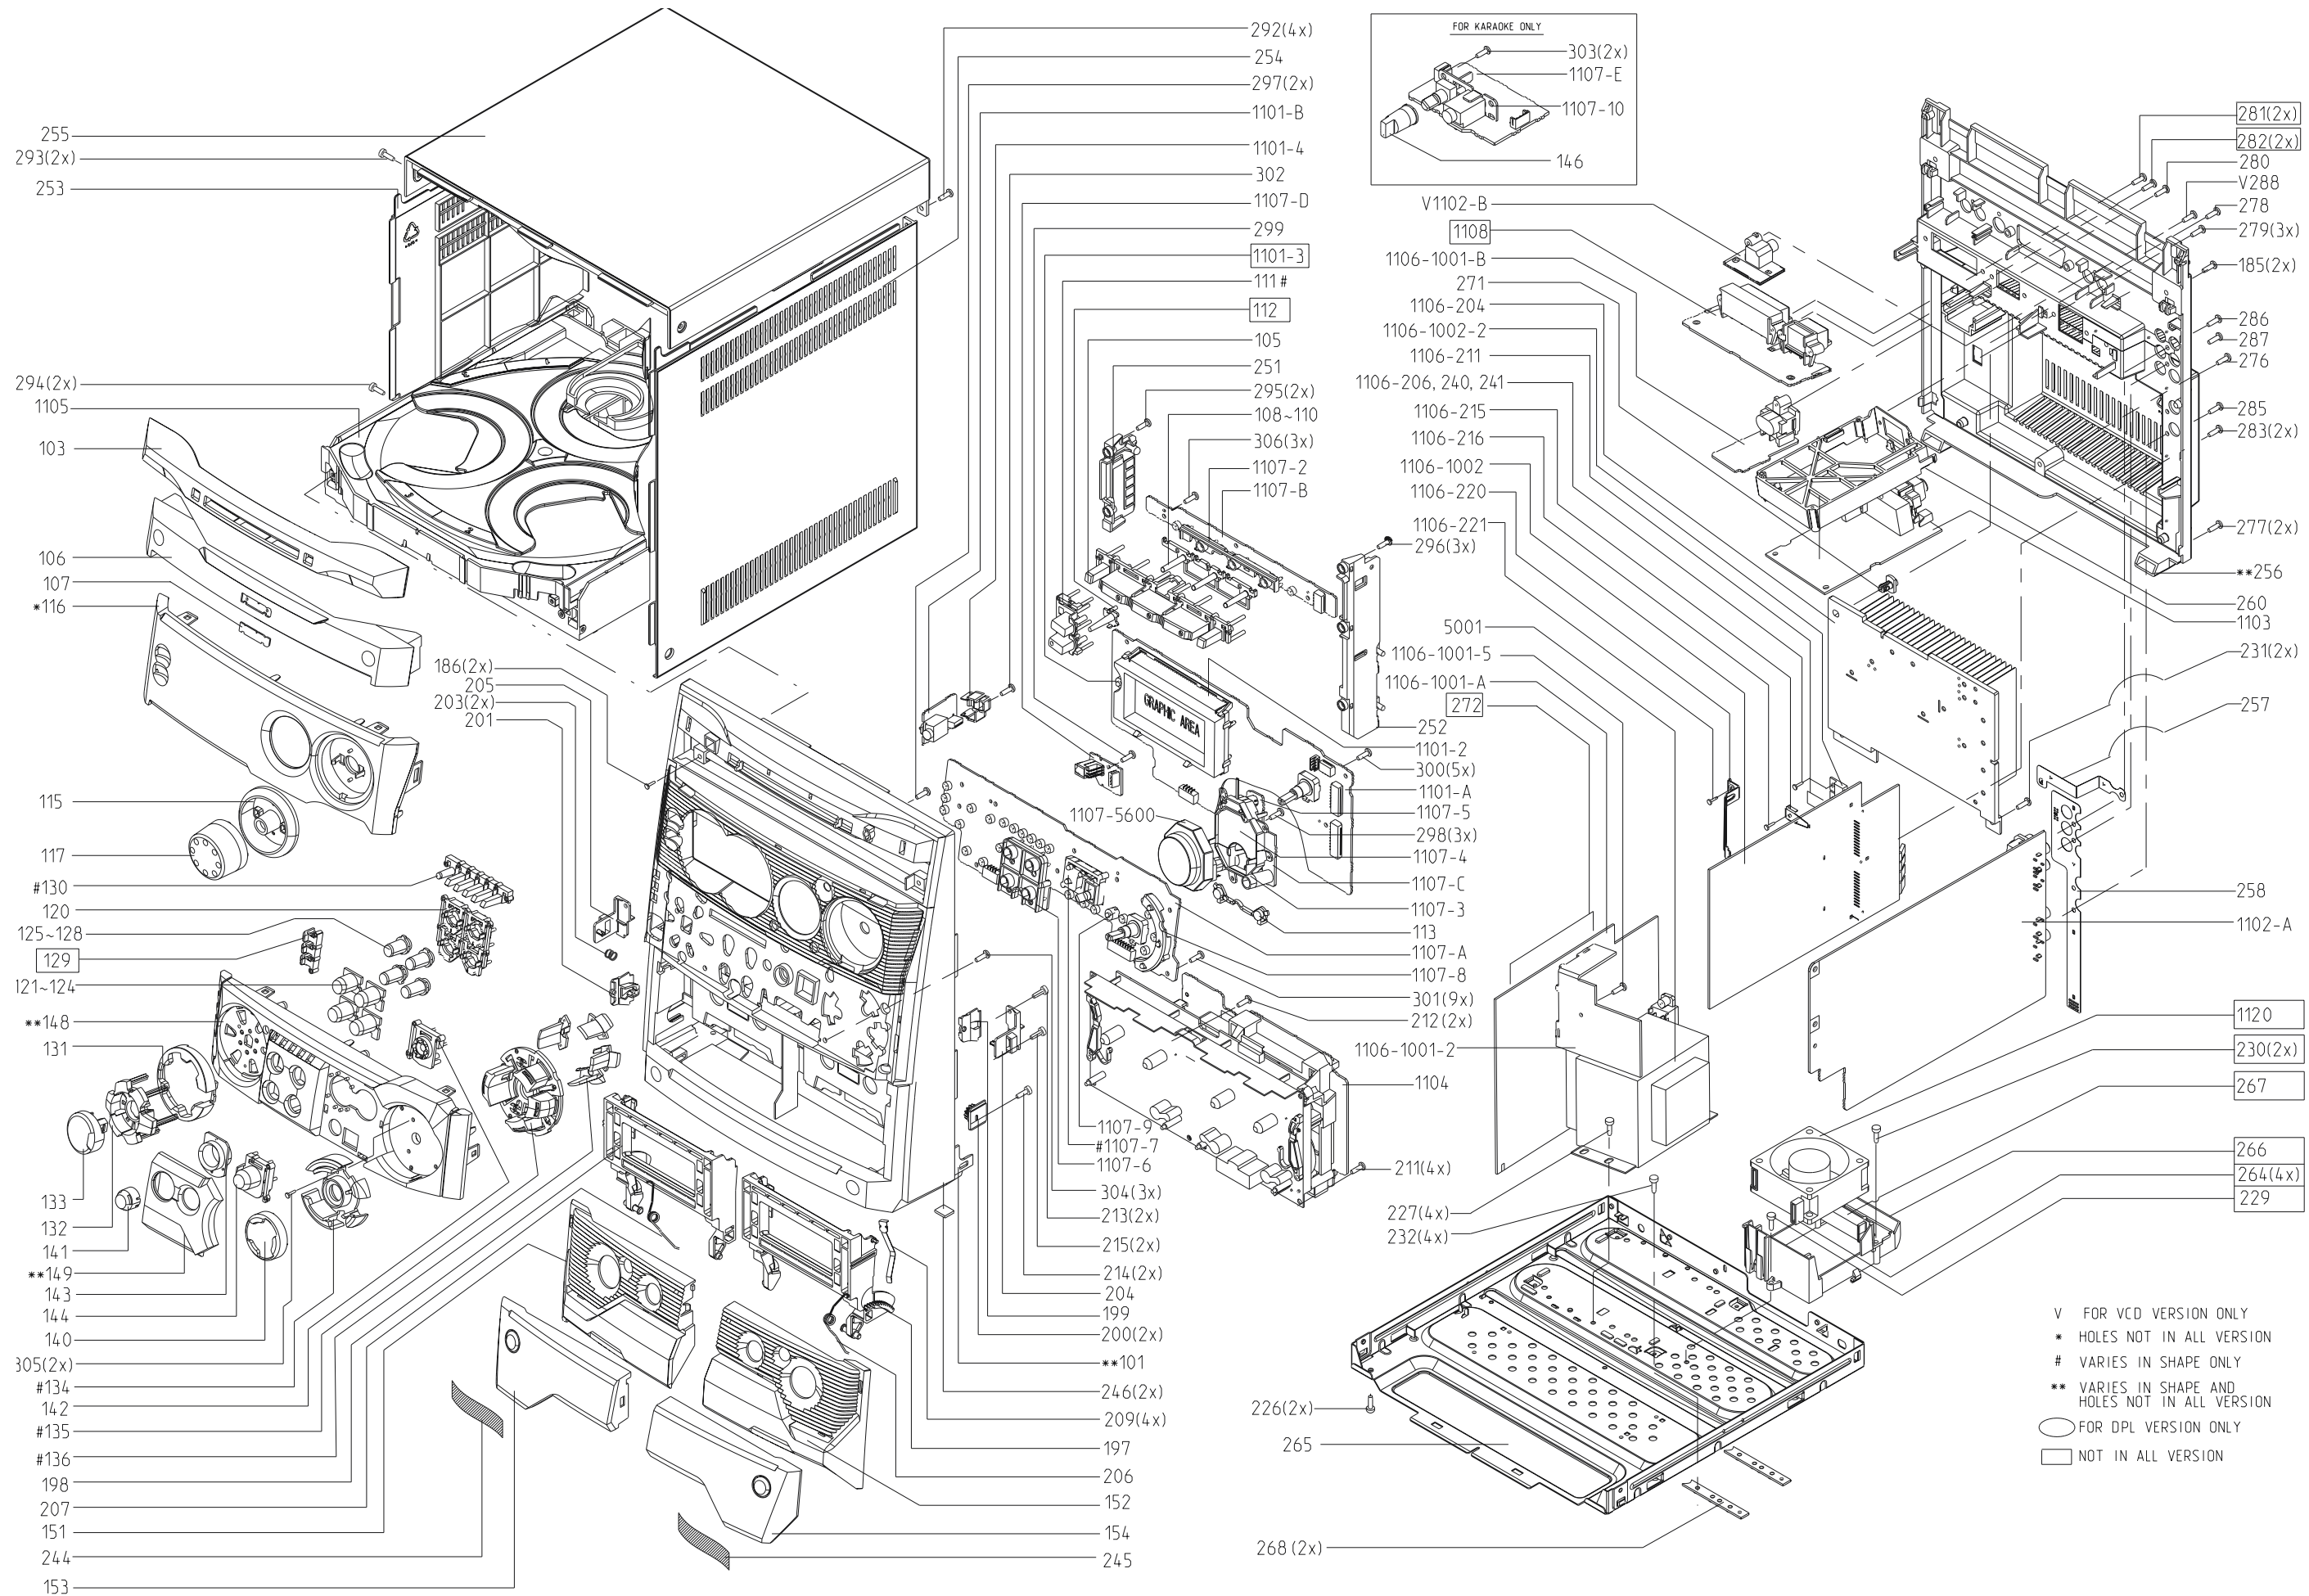

V FOR VCD VERSION ONLY
 * HOLES NOT IN ALL VERSION
 # VARIES IN SHAPE ONLY
 ** VARIES IN SHAPE AND HOLES NOT IN ALL VERSION
 ○ FOR DPL VERSION ONLY
 □ NOT IN ALL VERSION

MECHANICAL & ACCESSORIES PARTS LIST - MAIN UNIT**SCREW LISTS - MAIN UNIT**

0101	3139 118 16980	Cabinet Front /22	0204	4822 402 11246	Bracket Right	185	D3 x 10
0101	3139 118 16990	Cabinet Front /34	0205	4822 402 11245	Bracket Left	186	D3 x 12
0103	3139 118 14320	Window CDC	0206	3139 111 01380	Spring Torsion Right	211	D3 x 12
0105	3139 118 16820	Button Set CDC Select	0207	3139 111 01390	Spring Torsion Left	212	D3 x 12
0106	3139 118 14340	Cover Tray CDC	0209	4822 492 42787	Spring Cassette	213	D3 x 12
0107	4822 454 13408	Badge Philips	0246	4822 462 40683	Foot Rubber (SQ)	214	M3 x 12
0111	3139 118 14350	Button Standby/Eco Power	0251	3139 114 72750	Bracket CDC Left	215	M3 x 12
0115	3139 118 14370	Cover Ring Volume/VU Chrome	0252	3139 114 72760	Bracket CDC Right	226	M3 x 6
0116	3140 117 64900	Window Display	0253	3139 114 73570	Panel Left	227	M3 x 6
0117	3139 118 16840	Knob Volume Rotary	0254	3139 114 73580	Panel Right	231	M3 x 6
0120	3139 114 72360	Frame Button Set Source Select	0255	3139 114 73590	Cover Top	232	M3 x 6
0121	3139 118 14390	Button Cap Source-CD	0256	3139 114 72790	Panel Rear /22	276	M3 x 6
0122	3139 118 14400	Button Cap Source-Tuner	0256	3139 114 73100	Panel Rear /34	277	M3 x 10
0123	3139 118 14410	Button Cap Source-Tape	0271	3139 114 71010	Stopper Heatsink	278	D3 x 12
0124	3139 118 14420	Button Cap Source-Aux	0350	3140 118 51360	L/R Loudspeaker Box	279	D3 x 12
0125	3139 114 72410	Lightguide Source-CD	0351	4822 303 50063	FM Aerial	280	D3 x 12
0126	3139 114 72420	Lightguide Source-Tuner	0356	3139 118 78260	Remote Control	283	D3 x 12
0127	3139 114 72430	Lightguide Source-Tape	0384	2422 549 45067	AM Frame Aerial	285	D3 x 12
0128	3139 114 72440	Lightguide Source-Aux	0385	2422 070 98151	△ Mains Cord	286	D3 x 12
0129	3139 118 14720	Button Set RDS/NEWS /22	0387	3140 115 29980	Instruction For Use /22	287	D3 x 12
0129	3139 118 15320	Button Set RDS/NEWS/DOLBY /34	0387	3140 115 29990	Instruction For Use /34	292	M3 x 12
0130	3139 118 14440	Button Prog/Time-Disp	1202	3139 110 35350	FFC Foil 11P/220/11P AD	293	M3 x 12
0131	3139 118 16850	Cover Ring Func Control	1204	3139 110 34600	FFC Foil 07P/280/07P AD	294	M3 x 6
0132	3139 118 15460	Button Set Func Control	1401	3139 110 34970	FFC Foil 19P/180/19P AD	295	D3 x 12
0133	3139 118 14470	Cap Function Control /22	1402	3139 110 34610	FFC Foil 11P/180/11P AD	296	D3 x 12
0133	3139 118 15350	Cap Function Control /34	1403	3139 110 35130	FFC Foil 06P/180/06P AD	297	D2 x 8
0134	3139 118 14820	Cover Ring DSC/VAC/IS	1404	3139 110 35280	FFC Foil 10P/120/10P AD	298	D3 x 10
0135	3139 118 16830	Button DSC/VAC/IS	1405	3139 110 35000	FFC Foil 08P/120/08P AD	299	D3 x 10
0140	3139 118 14500	Knob Jog Rotary	1406	4822 320 12752	FFC Foil 07P/180/07P AD	300	D3 x 12
0141	3139 118 14780	Button WOOX Plus	1407	3139 110 34010	FFC Foil 06P/140/06P AD	301	D3 x 12
0142	3139 114 72470	Frame Button Set WOOX	1501	3139 110 35120	FFC Foil 04P/400/04P BD	302	D3 x 12
0144	3140 117 64950	Button Plus WOOX Level	1503	3139 110 34800	FFC Foil 19P/120/19P BD	304	D3 x 12
0148	3139 118 17000	Cover Orn Control /22	1601	3139 110 35050	FFC Foil 08P/220/08P AD	305	D2 x 8
0148	3139 118 17010	Cover Orn Control /34	1702	4822 320 12654	FFC Foil 07P/220/07P AD	306	D3 x 12
0149	3139 118 16790	Cover Control WOOX	5001	3103 308 30630	△ Mains Transformer		
0151	3139 118 16800	Cover Cassette Left					
0152	3139 118 16810	Cover Cassette Right					
0153	3139 114 74910	Lens Cassette Left					
0154	3139 114 74920	Lens Cassette Right					
0197	3139 114 68630	Door Cassette Right					
0198	3139 114 68620	Door Cassette Left					
0199	4822 402 10621	Push-Catch					
0200	4822 529 10322	Damper Assembly					
0201	3139 114 68640	Push Catch Left					
0203	4822 492 11344	Spring Compression					

Note : Only the parts mentioned in this list are normal service spare parts.