



PRESENTED


BY BGI

PUBLICATION NO. 980513

OPERATORS MANUAL

6000

MICROPROCESSING
DIGITAL MULTIMETER

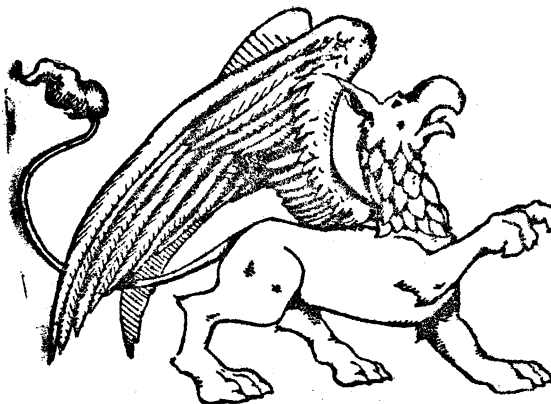

RACAL-DANA

RACAL-DANA INSTRUMENTS INC.

4 Goodyear Street, P.O. Box C-19541, Irvine, CA 92713
Telephone: 714/859-8999, TWX: 910-595-1136, TLX: 67-8341

RACAL-DANA INSTRUMENTS LTD.

Hardley Industrial Estate, Hythe, Southampton, Hampshire, S04 6ZH, England
Telephone: (0703) 843265, FAX: (0703) 848919, TLX: 47600

RACAL-DANA INSTRUMENTS S.A.

18 Avenue Dutartre, 78150 Le Chesnay, France
Telephone: (1) 3-955-8888, TLX: 697 215

RACAL-DANA INSTRUMENTS GmbH.

Hermannstrasse 29, D-6078 Neu Isenburg, Federal Republic of Germany
Telephone: 06102-2861/2, TLX: 412896

RACAL-DANA INSTRUMENTS ITALIA srl.

Via Mecenate 84/A, 20138 Milano MI, Italy
Telephone: (02) 5062767, (02) 5052686, (02) 503444; TLX: 315697

RACAL

PUBLICATION DATE: OCTOBER 1985

WARRANTY

Within one year of purchase, Racal-Dana will repair or replace your instrument, at our option, if in any way it is defective in material or workmanship. The instrument must be returned to the country of purchase, unless prior arrangement has been made, and Racal-Dana Instruments will pay all parts and labor charges. Just call Racal-Dana Customer Service at (714) 859-8999 in U.S.A., (0703) 843265 in England, (1) 3-955-8888 in France, 06102-2861/2 in Germany or (02) 5062767, 5052686, or 503444 in Italy for assistance. We will advise you of the proper shipping address for your prepaid shipment. Your instrument will be returned to you freight prepaid.



PROPRIETARY NOTICE

This document and the technical data herein disclosed, are proprietary to Racal-Dana Instruments, Inc., and shall not, without express written permission of Racal-Dana Instruments, Inc., be used, in whole or in part to solicit quotations from a competitive source or used for manufacture by anyone other than Racal-Dana Instruments, Inc. The information herein has been developed at private expense, and may only be used for operation and maintenance reference purposes or for purposes of engineering evaluation and incorporation into technical specifications and other documents which specify procurement of products from Racal-Dana Instruments, Inc.

FOR YOUR SAFETY

Before undertaking any maintenance procedure, whether it be a specific troubleshooting or maintenance procedure described herein or an exploratory procedure aimed at determining whether there has been a malfunction, read the applicable section of this manual and note carefully the **WARNING** and **CAUTION** notices contained therein.

The equipment described in this manual contains voltage hazardous to human life and safety and which is capable of inflicting personal injury. The cautionary and warning notes are included in this manual to alert operator and maintenance personnel to the electrical hazards and thus prevent personal injury and damage to equipment.

If this instrument is to be powered from the AC line (mains) through an autotransformer (such as a Variac or equivalent) ensure that the common connector is connected to the neutral (earthed pole) of the power supply.

Before operating the unit ensure that the protective conductor (green wire) is connected to the ground (earth) protective conductor of the power outlet. Do not defeat the protective feature of the third protective conductor in the power cord by using a two conductor extension cord or a three-prong/two-prong adaptor.

Maintenance and calibration procedures contained in this manual sometimes call for operation of the unit with power applied and protective covers removed. Read the procedures carefully and heed Warnings to avoid "live" circuit points to ensure your personal safety.


Before operating this instrument:

1. Ensure that the instrument is configured to operate on the voltage available at the power source. See Installation Section.
2. Ensure that the proper fuse is in place in the instrument for the power source on which the instrument is to be operated.
3. Ensure that all other devices connected to or in proximity to this instrument are properly grounded or connected to the protective third-wire earth ground.

If at any time the instrument:

- Fails to operate satisfactorily
- Shows visible damage
- Has been stored under unfavorable conditions
- Has sustained stress

It should not be used until its performance has been checked by qualified personnel.



AMENDMENT
SLIDE RACK-MOUNT KIT INSTALLATION INSTRUCTIONS
NOVEMBER, 1987

In recent slide rack-mount kits, the front and rear rack-brackets are the same size and each has only one screw slot. Otherwise, the installation procedure remains as described in the manual.



TABLE OF CONTENTS

| Section | Title | Page |
|----------|---|------------|
| 1 | GENERAL DESCRIPTION | 1-1 |
| 1.1 | Introduction | 1-1 |
| 1.2 | Description | 1-1 |
| 1.3 | Specifications | 1-1 |
| 2 | INSTALLATION & INTERFACE | 2-1 |
| 2.1 | Unpacking and Inspection | 2-1 |
| 2.2 | Bench Operation | 2-1 |
| 2.3 | Rack Mounting | 2-1 |
| 2.4 | Power Connections | 2-1 |
| 2.5 | Input/Output Cabling | 2-2 |
| 2.5.1 | Binding Posts | 2-2 |
| 2.5.2 | Fast A/D Output Connector (Options 03 and 03SH) | 2-2 |
| 2.5.3 | Interface Bus Connector (Option 55) | 2-2 |
| 2.5.4 | Parallel BCD Output/Program Connector (Option 59) | 2-2 |
| 3 | OPERATION | 3-1 |
| 3.1 | Introduction | 3-1 |
| 3.2 | Controls, Indicators and Connectors | 3-1 |
| 3.3 | Bench Operation | 3-12 |
| 3.3.1 | Auto Test/Auto-Cal | 3-12 |
| 3.3.2 | Range Control | 3-12 |
| 3.3.3 | Autorange | 3-13 |
| 3.3.4 | DC Volts Measurement | 3-13 |
| 3.3.5 | AC Volts Measurement | 3-13 |
| 3.3.6 | Resistance Measurement | 3-13 |
| 3.3.7 | High-Low-Limit Operation | 3-17 |
| 3.3.8 | Minimum-Average-Maximum | 3-18 |
| 3.3.9 | Tri-Function Ratio | 3-22 |
| 3.3.10 | Decibel (dB) Operation | 3-24 |
| 3.3.11 | Math Function | 3-24 |
| 3.3.12 | Heirarchy of Operations | 3-25 |
| 3.3.13 | Error Messages | 3-26 |
| 3.4 | System Operation | 3-28 |
| 3.4.2 | General Purpose Interface Bus | 3-28 |
| 3.4.3 | GPIB Description | 3-28 |
| 3.4.4 | Handshake | 3-30 |
| 3.4.5 | Address Assignment | 3-30 |
| 3.4.6 | Bus Operation Sequence | 3-30 |
| 3.4.7 | Interface Message Repertoire | 3-31 |
| 3.4.8 | Device Dependent Messages | 3-36 |
| 3.4.9 | Function Commands | 3-37 |
| 3.4.10 | Range Commands | 3-37 |
| 3.4.11 | Trigger Commands | 3-37 |
| 3.4.12 | Integration Time Commands | 3-37 |
| 3.4.13 | Null Commands | 3-37 |
| 3.4.14 | Display Commands | 3-38 |

TABLE OF CONTENTS (continued)


| Section | Title | Page |
|---------|---|------------|
| 3.4.15 | Interrupt Commands | 3-38 |
| 3.4.16 | Hi-Low Limit Commands | 3-39 |
| 3.4.17 | Filter Commands | 3-39 |
| 3.4.18 | Front/Rear Input Commands | 3-39 |
| 3.4.19 | External Reference Function Commands | 3-39 |
| 3.4.20 | External Reference Range Commands | 3-39 |
| 3.4.21 | Min-Avg-Max Commands | 3-39 |
| 3.4.22 | Calibration Commands | 3-40 |
| 3.4.23 | Equation Command | 3-40 |
| 3.4.24 | Variable Manipulation Commands (A, B or C) | 3-41 |
| 3.4.25 | Initialization Commands | 3-41 |
| 3.4.26 | Fast Analog-to-Digital (Fast A/D) Operation | 3-41 |
| 3.4.27 | dB Commands | 3-41 |
| 3.4.28 | Software Organization | 3-42 |
| 3.4.29 | Constant Manipulation From The GPIB | 3-43 |
| 3.4.30 | External Trigger | 3-44 |
| 3.4.31 | Read Rate Time Estimate | 3-44 |
| 3.5 | Parallel BCD Operation | 3-51 |
| 3.5.2 | Printer Output J212 | 3-51 |
| 3.5.3 | Program Input J209 | 3-51 |
| 3.5.4 | Logic Levels and Electronic Interface | 3-51 |
| 3.5.5 | Printer Output | 3-56 |
| 3.5.6 | Remote Programming | 3-58 |
| 3.6 | Fast A/D (Options 03 and 03SH) | 3-61 |
| 3.6.7 | Sample and Hold Fast A/D (Option 03SH) | 3-62 |
| 3.7 | Calibration Check - Specification Validation | 3-65 |
| 3.7.1 | General | 3-65 |
| 3.7.2 | Required Equipment | 3-65 |
| 3.7.3 | Procedure | 3-68 |
| 3.8 | Laboratory Calibration | 3-78 |
| 3.8.2 | Calibration Setup | 3-78 |
| 3.8.3 | Inhibiting Automatic Auto-Cal | 3-79 |
| 3.8.4 | Basic Cal-Module Calibration | 3-79 |
| 3.8.5 | Cal-Module Calibration With Options Installed | 3-79 |
| 3.8.6 | Internal Reference Adjustments | 3-92 |
| 3.8.7 | Repair Adjustment | 3-93 |
| | | |
| 4 | APPLICATIONS | 4-1 |
| 4.1 | Introduction | 4-1 |
| | | |
| 5 | THEORY OF OPERATION | |
| 6 | MAINTENANCE | |
| 7 | DRAWINGS | |
| 8 | PARTS LIST | |

}

These sections are included in the Model 6000 Maintenance Manual. Publication No. 980514.


LIST OF ILLUSTRATIONS

| Figure | Title | Page |
|--------|--|------|
| 1.1 | Dimensional Outline | 1-11 |
| 2.1 | Rack Mount Installation | 2-1 |
| 2.2 | Fast A/D Output Connector - Option 03 (Rear Panel) | 2-3 |
| 2.3 | Sample and Hold Fast A/D Output Connector - Option 03SH (Rear Panel) | 2-3 |
| 2.4 | GPIB Connector (Rear Panel) | 2-4 |
| 2.5 | J209 Parallel BCD Program Input Connector (Rear Panel) | 2-4 |
| 2.6 | J212 Parallel BCD Printer Output Connector (Rear Panel) | 2-5 |
| 3.1 | Front Panel Controls, Indicators and Connectors | 3-2 |
| 3.1A | Keyboard Control Layout | 3-6 |
| 3.2 | Rear Panel Controls and Connectors | 3-11 |
| 3.3A | Complete Ohms Guard Circuit | 3-15 |
| 3.3B | Simplified Ohms Guard Circuit | 3-15 |
| 3.4 | Two Wire Ohms Measurement | 3-15 |
| 3.5 | Four Wire Ohms Measurement | 3-16 |
| 3.6 | LO-PASS-HI Displays | 3-17 |
| 3.7 | Seven Bin Sort Display Examples | 3-18 |
| 3.8 | dB Vs. Voltage | 3-23 |
| 3.9 | Heirarchy of Operations | 3-25 |
| 3.10 | Interface Signal Pin Assignments | 3-29 |
| 3.11 | Interface Timing | 3-33 |
| 3.12 | Handshake Flow Chart | 3-34 |
| 3.13 | GPIB Output Formats | 3-36 |
| 3.14 | Model 6000 DMM Trigger Command Timing | 3-38 |
| 3.15 | Software Organization | 3-42 |
| 3.16 | 6000 DMM Transaction For DC Volts Measurement | 3-43 |
| 3.17 | Program/Read Timing Chart | 3-45 |
| 3.18 | Measurement Sequence | 3-52 |
| 3.19 | Command Timing | 3-54 |
| 3.20 | Read Rate Vs. Input | 3-55 |
| 3.21 | Superfast Read Rate (Worst Case) | 3-56 |
| 3.22 | Internally Generated Timing Chart | 3-59 |
| 3.23 | Trigger Waveform | 3-60 |
| 3.24 | Option 03 Output Waveforms | 3-60 |
| 3.25 | Option 03 SH Output Waveforms | 3-62 |
| 3.26 | Programming Model For Option 03-S/H | 3-63 |
| 3.27 | GPIB Data Output Format (Options 03 and 03 SH) | 3-64 |
| 3.28 | 10 Volt Source | 3-67 |
| 3.29 | Generating Accurate DC Levels | 3-67 |
| 3.30 | AC Source | 3-68 |
| 3.31 | Calibration Test Assembly Front Panel | 3-78 |
| 3.32 | Zero Ohms Connection for DMM's with 1 Ohm Range | 3-87 |
| 3.33 | Calibration Adjustment Locations | 3-88 |



LIST OF TABLES

| Table | Title | Page |
|-------|--|------|
| 1.1 | Specifications | 1-2 |
| 3.1 | Front Panel Controls, Indicators and Connectors | 3-3 |
| 3.2 | Keyboard Control Functions | 3-7 |
| 3.3 | Rear Panel Controls and Connectors | 3-11 |
| 3.4 | Example of HLL Operating Procedure | 3-19 |
| 3.5 | Example of Min-Avg-Max Operating Procedure | 3-21 |
| 3.6 | Example of Software Ratio Operation | 3-22 |
| 3.7 | Error Messages | 3-26 |
| 3.8 | IEEE 488-1975 Standard Interface Subset Capability of 6000 DMM | 3-29 |
| 3.9 | Model 6000 Interface Addressing | 3-32 |
| 3.10 | Bus Operation Sequence | 3-33 |
| 3.11 | Interface Messages Used With Model 6000 DMM | 3-35 |
| 3.12 | Model 6000 GPIB Programming Codes | 3-45 |
| 3.13 | Positive True Logic Relationships | 3-51 |
| 3.14 | Pin Assignments J201 (Printer Output) | 3-57 |
| 3.15 | Range Codes (Printer Output) | 3-58 |
| 3.16 | Pin Assignments J209 (Program Input) | 3-58 |
| 3.17 | Function Programming | 3-59 |
| 3.18 | Range Codes (Programmer) | 3-59 |
| 3.19 | Timeouts | 3-60 |
| 3.20 | Maximum Input Voltage | 3-61 |
| 3.21 | Fast A/D Output Data Conversion Reference | 3-64 |
| 3.22 | Required Equipment | 3-65 |
| 3.23 | DC Source Accuracies | 3-66 |
| 3.24 | AC Source Accuracies | 3-68 |
| 3.25 | DC Range Check (Low-Ranges) | 3-69 |
| 3.26 | DC Range Check (High Ranges) | 3-70 |
| 3.27 | 4-Wire Ratio Check (Option 34) | 3-71 |
| 3.28 | RMS AC Converter Range Check (Option 10) | 3-72 |
| 3.29 | AC/AC Ratio Check (Option 11) | 3-73 |
| 3.30 | Ohms - Megohms Range Check (Options 24 and 41) | 3-74 |
| 3.31 | Common Mode Rejection (In DC Volts Function) | 3-75 |
| 3.32 | Normal Mode Noise Rejection (In DC Volts Function) | 3-76 |
| 3.33 | Common Mode Rejection (In AC Volts Function) | 3-77 |
| 3.34 | Non-Vol Memory Contents | 3-78 |
| 3.35 | Laboratory Calibration Procedure | 3-80 |

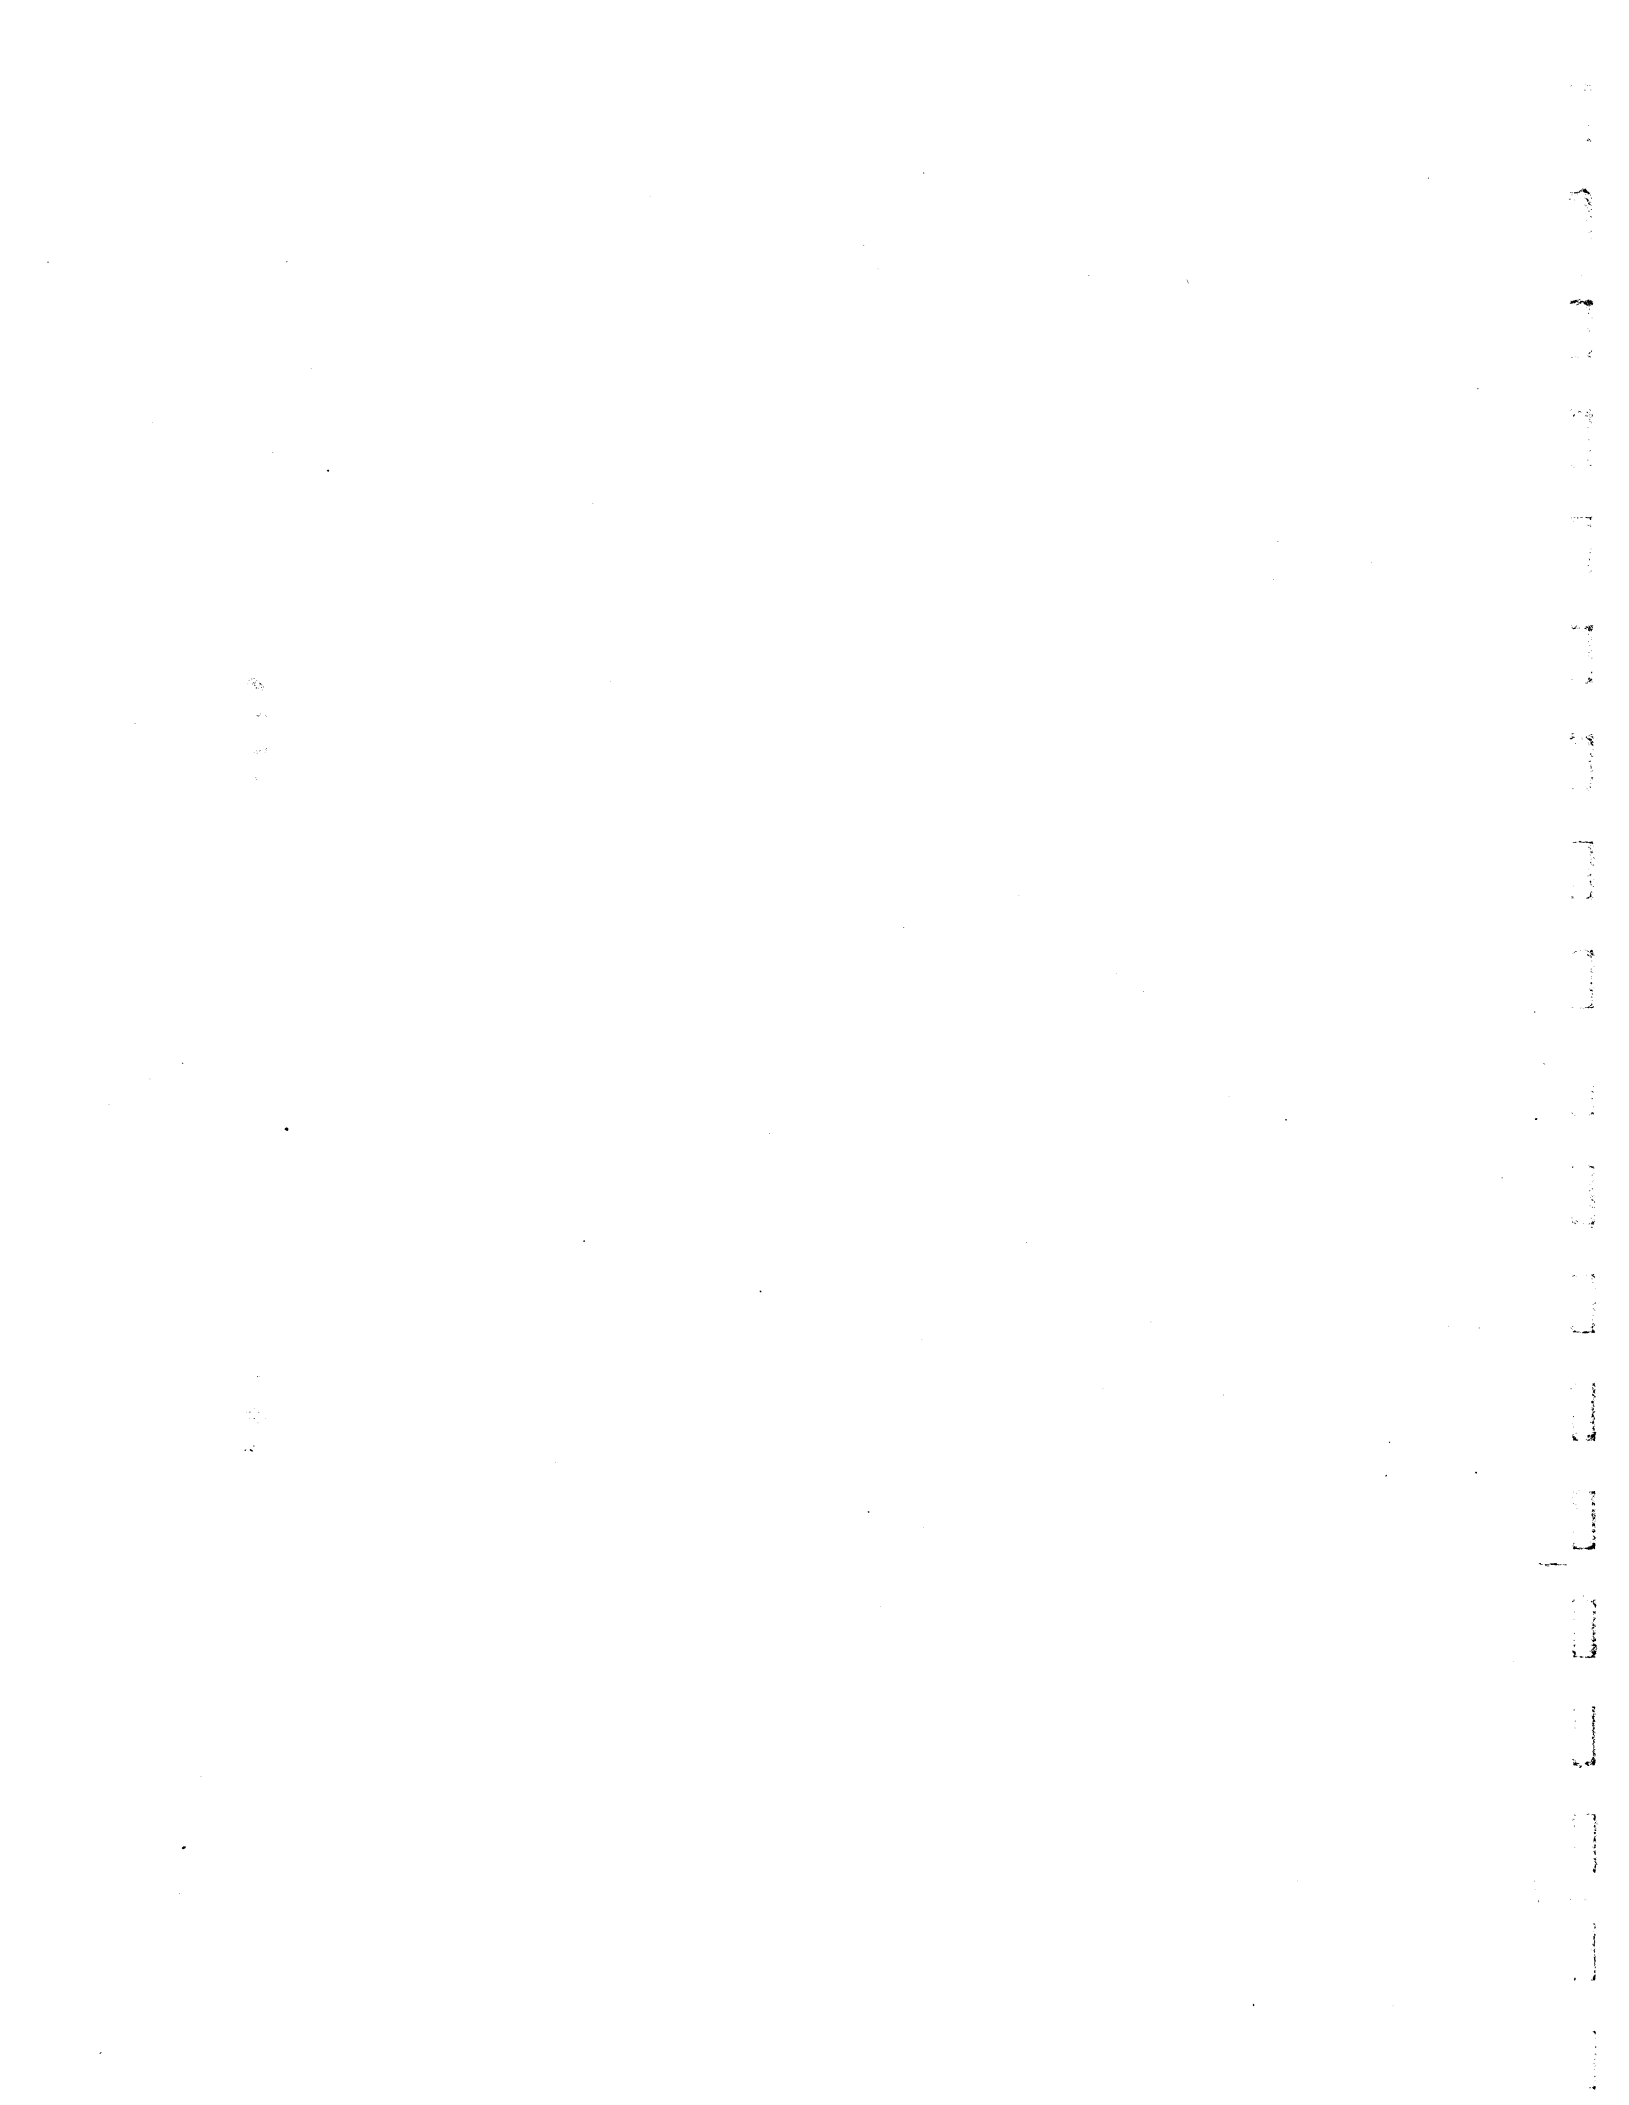

1.1 INTRODUCTION.

1.1.1 This manual contains the operating instructions for the Racal-Dana Model 6000 Microprocessing Digital Multimeter. This section of the manual contains a base description of the operating features of the instrument along with the technical specifications. Section 2 of this manual contains unpacking and installation instructions along with details necessary for system connection. Section 3 contains the operating instructions. These operating instructions include illustrations and the description of all controls, connectors and indicators on the front and rear panels of the instrument. Also included is a description of the operating characteristics and step by step operating instructions for each mode and feature of the instrument. A calibration check is also included in Section 3 for the convenience of operating personnel who desire to verify that the instrument is operating properly and that it is operating within its specifications.

1.1.2 The instrument is designed to operate with the IEEE-488-1975 General Purpose Interface Bus. The device dependent messages for operating the Model 6000 DMM in the remote mode are also included in Section 3 along with addressing instructions and a description of the system communication format and sequence.

1.1.3 Section 4 contains the laboratory calibration procedure. The laboratory calibration routine is designed to prompt the operator and the laboratory cal procedure provided in Section 4 is designed to operate step by step with pre-programmed Digital™ digital calibration sequence built into the instrument.

1.2 DESCRIPTION.

1.2.1 The Racal-Dana Model 6000 Microprocessing Digital Multimeter is a 6 1/2 digit "delayed dual sloped" instrument capable of measuring DC volts on 6 ranges, AC volts on 4 ranges and resistance on 9 ranges. The instrument will automatically select the correct range if operated in the autorange mode or a specific range may be selected manually by the operator. It is equipped with a selectable input filter which may be used to reduce possible error when making measurements in an electrical noise environment.

1.2.2 It is equipped to make resistance measurements conveniently in the 2-wire resistance mode. It may be selected simply by setting a front panel switch to the 2-wire mode position. If the accuracy of a 4-wire resistance measurement is required, the front panel switch is set to the 4-wire position and the unknown resistance is connected

to the ohms source terminals on the front of the instrument and to the input terminals by separate lead pairs.

1.2.3 The input terminals of the measurement circuits are floating but the low side of the input terminals may be easily connected to guard through use of a front panel switch.

1.2.4 Bench operation is controlled by the operator through use of a front panel keyboard. For a system operation the instrument is connected through a standard GPIB interface connector on the rear panel.

1.2.5 In addition to voltage and resistance measurements the instrument is capable of measuring the ratio between voltages connected to the front panel input terminals and input terminals located on the rear panel. If the optional AC converter is used the instrument will calculate AC/DC, DC/AC, and AC/AC ratios. The instrument is not restricted to a single range, e.g., the 10 volt range for ratio measurements; the operator can select any range for making ratio measurements. The DMM is also capable of measuring the ratio between a resistance and AC or DC voltage (with the voltage source used as the reference). With the True RMS AC converter and ohms option more than 70 combinations of ratio functions and ranges can be commanded from the keyboard or over the IEEE 488 interface.

1.3 SPECIFICATIONS.

1.3.1 The specifications are given in Table 1.1

Table 1.1 - Specifications

| DC VOLTS (Included In Basic Instrument) | |
|--|--|
| Ranges: | ± 100.000 mV, ± 1.00000 , ± 10.0000 , ± 100.000 , $\pm 1000.00V$ |
| Resolution: | 0.001% Range on 5 1/2 Digit Mode 0.0001% Range on 6 1/2 Digit Mode |
| Overrange: | 60% except 1000V Range. 1100V DC, 1500 Peak AC. |
| Maximum Input Voltage: | 1100V DC or 1500V Peak AC All Ranges |
| Accuracy: | (5 1/2 digit mode, after Auto-Cal, following two hour warm-up). |
| 24 Hours, 23°C \pm 1°C | |
| 10V Range 1,100,1000V Ranges 100mV Ranges | ± 1 Digit $\pm (.001\% \text{ Input} + 1 \text{ Digit})$ $\pm (.002\% \text{ Input} + 5 \text{ Digits})$ |
| 90 Days, 23°C \pm 5°C | |
| 10V Range 1,100,1000V Ranges 100mV Range | $\pm (.001\% \text{ Input} + 1 \text{ Digit})$ $\pm (.002\% \text{ Input} + 1 \text{ Digit})$ $\pm (.003\% \text{ Input} + 5 \text{ Digits})$ |
| 1 Year, 23°C \pm 5°C | |
| 10V Range 1,100,1000V Ranges 100mV Range | $\pm (.003\% \text{ Input} + 1 \text{ Digit})$ $\pm (.004\% \text{ Input} + 1 \text{ Digit})$ $\pm (.005\% \text{ Input} + 5 \text{ Digits})$ |
| Temperature Coefficient: | (0°C to 50°C, 5 1/2 digit mode, after Auto-Cal, after temperature change) |
| 10V Range 1,100,1000V Range 100mV Range | $\pm (1.5 \text{ ppm} + .05 \text{ Digit})/^{\circ}\text{C}$ $\pm (3 \text{ ppm} + .1 \text{ Digit})/^{\circ}\text{C}$ $\pm (4 \text{ ppm} + .5 \text{ Digit})/^{\circ}\text{C}$ |
| Non-Linearity: 23°C \pm 5°C | All Ranges ≤ 1.0 Digit to 160% F.S. in 5 1/2 Digit Mode |

| DC VOLTS continued | |
|--|--|
| Input Impedances: | 100 mV, 1V, 10V Ranges: $> 10,000M\Omega$ 100V, 1KV-Ranges: 10M Ω |
| Input Bias Current: | ≤ 30 pA at 23°C |
| Input Bias Current TC: | Doubles Every 10°C |
| Normal Mode Rejection: | |
| Unfiltered | 48 dB at Multiples of 60 Hz |
| Filtered | 100 dB at 60 Hz |
| Settling Time: | |
| Unfiltered | Analog output settles to within 0.01% of final value in 5 msec with 10K source; 10 msec on 100V range. |
| Filtered | Analog output settles to within 0.01% of final value in 450 msec with 10K source on all ranges. |
| Common Mode Rejection: | |
| (With 100 Ω Unbalance in either Lead) | |
| Unfiltered | 140 dB DC 120 dB at 61 Hz and Below Plus an Additional 54 dB at Harmonics of 60 Hz |
| Filtered | 140 dB DC to 61 Hz 126 dB 61 Hz to 100 KHz |

| DC MILLIVOLTS (Option 41) | |
|-------------------------------|---|
| Ranges: | ± 10 mV |
| Resolution: | .001% F.S. (100 nV) |
| Overrange: | 120% (Reads 22 mV input with no degradation of accuracy) |
| Maximum Input Voltage: | 350V DC or 250V RMS |
| Input Impedance: | 100 M Ω minimum shunted by 4.8 K Ω in series with 1.5 μF |
| Input Bias Current: | 300 pA Typical at 23°C |
| Normal Mode Rejection: | Same as DC Function |
| Common Mode Rejection: | Same as DC Function |

Table 1.1 - Specifications (continued)

| DC MILLIVOLTS continued | |
|------------------------------------|--|
| Settling Time, Unfiltered: | Analog output settles to within .01% of final value in 850 msec with up to 10KΩ source resistance. |
| Accuracy: | (5 1/2 digit mode, after Auto-Cal, following two hour warm-up. With source resistance ≤ 1KΩ and input zeroed by pushing NULL with shorted input leads.) |
| 24 Hours, 23°C ± 1°C 10mV Range | ± (.005% Input + 5 Digits) |
| 90 Days, 23°C ± 5°C 10mV Range | ± (.008% Input + 5 Digits) |
| 1 Year, 23°C ± 5°C 10mV Range | ± (.01% Input + 5 Digits) |
| Temperature Coefficient: | (0°C to 50°C, 5 1/2 digit mode, after Auto-Cal, after temperature change. With source resistance ≤ 1KΩ and input zeroed by pushing NULL with shorted input leads.) |
| 10mV Range | ± (.002% Input + .5 Digit)/°C |

| OHMS Standard on Models 6001, 6002 (Option 24) | |
|--|--|
| Ranges: | 1.00000Ω with Option 41 10.0000Ω, 100.000Ω, 1.00000KΩ, 10.0000KΩ, 100.000KΩ, 1.00000MΩ, 10.0000MΩ, 100.000MΩ |
| Resolution: | 0.001% F.S. in all Ranges, 5 1/2 Digit Mode 0.0001% F.S. in all Ranges, 6 1/2 Digit Mode |
| Overrange: | 60% on all Ranges |
| Maximum Input Voltage: | ± 350V Peak on 1Ω Range ± 500V Peak on 10Ω-100MΩ |
| Measurement Scheme: | Modified 4-Wire |

| OHMS continued | |
|---------------------------------|--|
| Accuracy: | (5 1/2 digit mode, after Auto-Cal, following two hour warm-up) |
| 24 Hours, 23°C ± 1°C | |
| 1Ω Range | ± (.015% Input + 50 Digits)* |
| 10Ω Range | ± (.003% Input + 5 Digits)** |
| 100Ω - 1MΩ Ranges | ± (.002% Input + 1 Digit) |
| 10MΩ Range | ± (.01% Input + 1 Digit) |
| 100MΩ Range | ± (.02% Input + 1 Digit) |
| 90 Days, 23°C ± 5°C | |
| 1Ω Range | ± (.02% Input + 50 Digits)* |
| 10Ω Range | ± (.005% Input + 5 Digits)** |
| 100Ω - 1MΩ Ranges | ± (.003% Input + 1 Digit) |
| 10MΩ Range | ± (.03% Input + 1 Digit) |
| 100MΩ Range | ± (.03% Input + 1 Digit) |
| 1 Year, 23°C ± 5°C | |
| 1Ω Range | ± (.03% Input + 50 Digits)* |
| 10Ω Range | ± (.006% Input + 5 Digits)** |
| 100Ω - 1MΩ Ranges | ± (.004% Input + 1 Digit) |
| 10MΩ Range | ± (.04% Input + 1 Digit) |
| 100MΩ Range | ± (.04% Input + 1 Digit) |
| Temperature Coefficient: | (0°C to 50°C, 5 1/2 digit mode, after Auto-Cal, after temperature change.) |
| 1Ω Range | ± (.002% Input + 2 Digits)/°C |
| 10Ω Range | ± (.0008% Input + .5 Digit)/°C |
| 100Ω - 1MΩ Ranges | ± (.0007% Input + .1 Digit)/°C |
| 10MΩ Range | ± (.003% Input + .1 Digit)/°C |
| 100MΩ Range | ± (.005% Input + .1 Digit)/°C |
| Open Circuit Voltage: | 1Ω Range: 24V Max 10Ω to 1KΩ Range: 8V Max 10KΩ to 100MΩ Range: 24V Max |
| Current Through Unknown: | 1Ω, 10Ω, 100Ω Ranges: 10 mA 1KΩ, 10KΩ Ranges: 1 mA 100KΩ Range: 100μA 1MΩ Range: 10μA 10MΩ Range: 1μA 100MΩ Range: 100 nA |
| Normal Mode Rejection: | |
| Unfiltered | 48 dB at Multiples of 60 Hz |
| Filtered | 100 dB at 60 Hz |

* When making measurements in the 1Ω range, it is necessary to let the measurement circuit (DMM leads and Rx) stabilize with the + ohm source lead open before initiating a null command. (≈ 2 minutes stabilization time is required).

** after null

Table 1.1 - Specifications (continued)

| OHMS continued | |
|-------------------------------------|--|
| Settling Time: To Rated Accuracy | 1Ω Range: 1 Second 10Ω to 10MΩ Ranges: 30 mSec 100MΩ Range: 300 mSec |
| Ohms Guard: | Use "Analog Out" Low on Rear Panel when in Ohms |

| ANALOG SIGNAL OUTPUT | |
|----------------------|---|
| General Description: | Input scaled and buffered. DC voltage is available for driving a recorder |
| Output Impedance: | Less than 0.5Ω |
| Current Available: | 1 mA maximum. Protected if output is shorted |
| Over-Voltage: | Output clamped with diodes (no current limit) to ± 24V |
| Settling Time: | Same as Function selected |

| HARDWARE RATIO (OPTIONS 11 & 34) | |
|--------------------------------------|--|
| Signal Input: | Any voltage range front or rear input terminals as selected |
| Reference Input: | Rear reference input terminals |
| DC REFERENCE (OPTION 34) | |
| Readout: | Signal Input ÷ Ref Input Ratios are displayed in scientific notation. |
| Signal Ranges: | Same as Selected Function |
| Reference Polarity: | Positive Only |
| Signal Polarity: | Bipolar |
| Reference Voltage Range: | +1V to +10.5V |
| Reference Common Mode Voltage Range: | Voltage between + Ref In and - Sig In less than ± 15V |
| Maximum Signal Voltage: | Same as Selected Function |

| HARDWARE RATIO continued | |
|---|--|
| DC REFERENCE continued | |
| Reference Input Impedance: Both leads with respect to -Sig In | 10 ⁹ Ω minimum (+ Lead) 3.3 x 10 ⁷ Ω ± 10% (- Lead) |
| Reference Input Bias Current: Either Lead | Less than 7 nA |
| Reference Settling Time: | Settles to .01% of final value in 50 msec |
| Accuracy: After Auto Cal with reference voltage applied | DC/DC Ratio Same as DC Accuracy (see Section 4) with error multiplied by $\left[\frac{10V}{REF V} \right] \times 2$ AC/DC Ratio Same as AC Accuracy with error multiplied by $\left[\frac{10V}{REF V} \right] \times 2$ |
| Noise | (Noise of function) x $\frac{10V}{Ref V}$ |
| AC REFERENCE (OPTION 11) | |
| Readout: | Signal input ÷ reference input Ratios are displayed in scientific notation. |
| Reference Ranges: | 1V, 10V, 100V, 1000V RMS |
| Signal Ranges: | Same as Selected Function |
| Maximum Reference Voltage: | 1000V RMS or 1500V Peak |
| Maximum Signal Voltage: | Same as Selected Function |
| Reference Voltage Range: | 10% of F.S. to 160% F.S. except 1000V Range which is 10% to 100% of F.S. |
| Reference Input Impedance: | Same as AC Option 10 |
| Ratio Accuracy: (Up to 10 KHz) | (Accuracy of Function) + (Accuracy of Option 10) The sum multiplied by $\frac{Reference Range}{Reference Input}$ |
| Frequency Range: | 20 Hz to 10 KHz |
| Reference Temperature Coefficient: (0°C to 50°C) After Auto-Cal | ± (0.004% RDG + 0.005% F.S.)/°C |

Table 1.1 - Specifications (continued)

| AC VOLTS TRUE RMS (Option 10) | | Standard on Model 6002 | |
|---|---|------------------------|--|
| Ranges: | 1.00000V, 10.0000V RMS 100.000V, 1000.00V RMS | | |
| Resolution: | 0.001% of Range | | |
| Maximum Input Voltage: | 1000V RMS or 1500V Peak, decreasing to 50V RMS at 300 KHz. (1.5 x 10 ⁷ V)(Hz) max. any Range. | | |
| Settling Time: Zero to F.S. "Filter" Out "Filter" In F.S. to 10% F.S. "Filter" Out "Filter" In | Settles to within 0.1% of Range: 80 mSec 350 mSec Settles to within 0.1% Range: 100 mSec 400 mSec | | |
| Input Impedance: | 1MΩ in series with .22 μF, shunted by less than 200 pF to common. In DC coupled mode the .22 μF capacitor is shorted. | | |
| Common Mode Rejection: 100Ω Unbalance either lead. DC to 60 Hz | <u>Range</u> | <u>CMRR</u> | |
| | 1V | 120 dB | |
| | 10V | 100 dB | |
| | 100V | 80 dB | |
| | 1000V | 60 dB | |
| Accuracy: 24 Hours, 23°C ± 1°C | (After Auto-Cal, following two hour warm-up, sinewave input.) Vin ≤ 500V 0.1% F.S. < Vin ≤ 160% F.S. For Vin > 500V, add 0.1% of RDG to specification. | | |
| 20 Hz - 30 Hz (Filt.) | ± (.5% Input + 50 Digits) | | |
| 30 Hz - 50 Hz (Filt.) | ± (.2% Input + 50 Digits) | | |
| 50 Hz - 100 Hz (Filt.) | ± (.1% Input + 50 Digits) | | |
| 100 Hz - 20 KHz (Filt.) | ± (.06% Input + 50 Digits) | | |
| 200 Hz - 20 KHz (Unfilt.) | ± (.06% Input + 50 Digits) | | |
| 20 KHz - 50 KHz (Both) | ± (.09% Input + 100 Digits) | | |
| 50 KHz - 100 KHz (Both) | ± (.38% Input + 180 Digits) | | |
| 100 KHz - 300 KHz (Both) (10V, 100V, 1000V Ranges) | ± (3% Input + 500 Digits) | | |
| 100 KHz - 300 KHz (Both) (1V Range) | ± (5% Input + 1000 Digits) | | |
| For full accuracy above 150 VAC the FILTER should be selected. | | | |

| AC VOLTS continued | |
|--|--|
| 90 Days, 23°C ± 5°C | |
| 20 Hz - 30 Hz (Filt.) | ± (.5% Input + 60 Digits) |
| 30 Hz - 50 Hz (Filt.) | ± (.21% Input + 60 Digits) |
| 50 Hz - 100 Hz (Filt.) | ± (.11% Input + 60 Digits) |
| 100 Hz - 20 KHz (Filt.) | ± (.07% Input + 60 Digits) |
| 200 Hz - 20 KHz (Unfilt.) | ± (.07% Input + 60 Digits) |
| 20 KHz - 50 KHz (Both) | ± (.1% Input + 100 Digits) |
| 50 KHz - 100 KHz (Both) | ± (.4% Input + 200 Digits) |
| 100 KHz - 300 KHz (Both) (10V, 100V, 1000V Ranges) | ± (3% Input + 500 Digits) |
| 100 KHz - 300 KHz (Both) (1V Range) | ± (5% Input + 1000 Digits) |
| For full accuracy above 150 VAC the FILTER should be selected. | |
| 6 Months, 23°C ± 5°C | |
| 20 Hz - 30 Hz (Filt.) | ± (.52% Input + 70 Digits) |
| 30 Hz - 50 Hz (Filt.) | ± (.22% Input + 70 Digits) |
| 50 Hz - 100 Hz (Filt.) | ± (.12% Input + 70 Digits) |
| 100 Hz - 20 KHz (Filt.) | ± (.08% Input + 70 Digits) |
| 200 Hz - 20 KHz (Unfilt.) | ± (.08% Input + 70 Digits) |
| 20 KHz - 50 KHz (Both) | ± (.11% Input + 110 Digits) |
| 50 KHz - 100 KHz (Both) | ± (.42% Input + 220 Digits) |
| 100 KHz - 300 KHz (Both) (10V, 100V, 1000V Ranges) | ± (4% Input + 600 Digits) |
| 100 KHz - 300 KHz (Both) (1V Range) | ± (6% Input + 1100 Digits) |
| For full accuracy above 150 VAC the FILTER should be selected. | |
| Temperature Coefficient: | ± (0.004% RDG + 0.005% F.S.)/°C |
| Crest Factor: | 7:1 at full scale 7 x $\sqrt{\frac{F.S.}{V_{IN}}}$ for other voltages |

Table 1.1 - Specifications (continued)

| AC VOLTS AVERAGING (Option 14) | | | | | |
|---|--|-------|------|--|--|
| Ranges: | 1.00000V, 10.0000V, 100.000V, 1000.00V | | | | |
| Resolution: | .001% of Range | | | | |
| Maximum Input Voltage: | 1000V RMS or 1500V Peak, decreasing to 20V RMS at 1 MHz. (2×10^7 V)(Hz) max any Range. | | | | |
| Settling Time: Zero to F.S. "Filter" Out "Filter" In F.S. to 10% F.S. "Filter" Out "Filter" In | Settles to within rated accuracy of range: 200 msec 600 msec 200 msec 600 msec | | | | |
| Input Impedance: | 1M Ω in series with .22 μ F, shunted by less than 100 pF to common. | | | | |
| Common Mode Rejection: | <table border="1"> <thead> <tr> <th>Range</th> <th>CMRR</th> </tr> </thead> <tbody> <tr> <td>100Ω Unbal- ance either lead. DC to 60 Hz</td> <td>1V 120 dB 10V 100 dB 100V 80 dB 1000V 60 dB</td> </tr> </tbody> </table> | Range | CMRR | 100 Ω Unbal- ance either lead. DC to 60 Hz | 1V 120 dB 10V 100 dB 100V 80 dB 1000V 60 dB |
| Range | CMRR | | | | |
| 100 Ω Unbal- ance either lead. DC to 60 Hz | 1V 120 dB 10V 100 dB 100V 80 dB 1000V 60 dB | | | | |
| Accuracy: | (After Auto-Cal, following two hour warm-up, sinewave input.) Vin \leq 500V 0.1% F.S. < Vin \leq 160% F.S. For Vin \geq 500V, add 0.1% of RDG to specification for f \leq 5 KHz; add 0.2% of RDG for f > 5 KHz. | | | | |
| 24 Hours, 23 $^{\circ}$ C \pm 1 $^{\circ}$ C | | | | | |
| 20 Hz - 30 Hz (Filt.) | \pm (.3% Input + 2 Digits) | | | | |
| 30 Hz - 50 Hz (Filt.) | \pm (.2% Input + 2 Digits) | | | | |
| 50 Hz - 100 Hz (Filt.) | \pm (0.05% Input + 2 Digits) | | | | |
| 100 Hz - 5 KHz (Filt.) | \pm (.03% Input + 2 Digits) | | | | |
| 300 Hz - 5 KHz (Unfilt.) | \pm (.03% Input + 2 Digits) | | | | |
| 5 KHz - 50 KHz (Both) | \pm (.04% Input + 5 Digits) | | | | |
| 50 KHz - 100 KHz (Both) | \pm (.05% Input + 10 Digits) | | | | |
| 100 KHz - 300 KHz (Both) | \pm (.6% Input + 20 Digits) | | | | |
| 300 KHz - 1 MHz (Both) | \pm (2.5% Input + 70 Digits) | | | | |

| AC VOLTS continued | |
|---|---|
| 90 Days, 23 $^{\circ}$ C \pm 5 $^{\circ}$ C | |
| 20 Hz - 30 Hz (Filt.) | \pm (.31% Input + 4 Digits) |
| 30 Hz - 50 Hz (Filt.) | \pm (.21% Input + 4 Digits) |
| 50 Hz - 100 Hz (Filt.) | \pm (.06% Input + 4 Digits) |
| 100 Hz - 5 KHz (Filt.) | \pm (.04% Input + 4 Digits) |
| 300 Hz - 5 KHz (Unfilt.) | \pm (.04% Input + 4 Digits) |
| 5 KHz - 50 KHz (Both) | \pm (.05% Input + 7 Digits) |
| 50 KHz - 100 KHz (Both) | \pm (.06% Input + 12 Digits) |
| 100 KHz - 300 KHz (Both) | \pm (.61% Input + 22 Digits) |
| 300 KHz - 1 MHz (Both) | \pm (2.5% Input + 72 Digits) |
| 6 Months, 23 $^{\circ}$ C \pm 5 $^{\circ}$ C | |
| 20 Hz - 30 Hz (Filt.) | \pm (.32% Input + 5 Digits) |
| 30 Hz - 50 Hz (Filt.) | \pm (.22% Input + 5 Digits) |
| 50 Hz - 100 Hz (Filt.) | \pm (.07% Input + 5 Digits) |
| 100 Hz - 5 KHz (Filt.) | \pm (.05% Input + 5 Digits) |
| 300 Hz - 5 KHz (Unfilt.) | \pm (.05% Input + 5 Digits) |
| 5 KHz - 50 KHz (Both) | \pm (.06% Input + 8 Digits) |
| 50 KHz - 100 KHz (Both) | \pm (.07% Input + 13 Digits) |
| 100 KHz - 300 KHz (Both) | \pm (.62% Input + 23 Digits) |
| 300 KHz - 1 MHz (Both) | \pm (2.5% Input + 73 Digits) |
| Temperature Coefficient: | (0 $^{\circ}$ C to 50 $^{\circ}$ C, after Auto-Cal, after temperature change). |
| 50 Hz - 20 KHz (Filt.) | \pm (.003% Input + .5 Digit) |
| 20 KHz - 100 KHz (Both) | \pm (.005% Input + 2 Digits) |
| 100 KHz - 1 MHz (Both) | \pm (.02% Input + 10 Digits) |

Table 1.1 - Specifications (continued)

| SAMPLE & HOLD FAST A/D (OPTION 03SH) GENERAL INFORMATION (NORMAL DVM INPUT TERMINALS) | |
|--|---|
| Optional A/D converter which allows conversion at up to 34,000 readings/sec. | |
| Function: | Any range in DC function except millivolts (opt. 41). |
| Ranges: | Same as DC Function Option 41 and Ohms below 10 K Ω range not specified. |
| Maximum Input: | Same as DC Function |
| Settling Time: | Same as DC Function |
| Accuracy: | 24 hr., 23 $^{\circ}$ C \pm 1 $^{\circ}$ C |
| 0V to \pm Full Scale | \pm .05% R _{dg} \pm 1.5 counts |
| \pm Full Scale to 160% Full Scale | \pm .05% R _{dg} \pm 3 counts 1 yr., 23 $^{\circ}$ C \pm 5 $^{\circ}$ C |
| 0V to \pm Full Scale | \pm .5% R _{dg} \pm 4 counts |
| \pm Full Scale to 160% Full Scale | \pm .5% R _{dg} \pm 6 counts |
| Temperature Coefficient: | \pm .015% R _{dg} \pm .1 count/ $^{\circ}$ C |
| DC Function except mV | |
| Read Rate: | |
| With display | 250 reading/sec |
| Without display | |
| (GPIB output) | 6000 reading/sec |
| With external trigger pulse (negative going TTL pulse 200 ns to 20 μ s in duration. Must be bounce free) | 34,000 reading/sec (Does not include settling time.) |
| Output Format: | 12 bit, two's complement |
| Data Scale Factor: | |
| Signal Directly to Fast A/D Pins 24, 25 | 10 mV/count \pm 20.47 volts produces octal data display of \pm 3777 |
| Signal Taken From Isolator Output | Linear up to 160% of selected range. Isolator output of \pm 16.00 volts produces octal data display of \pm 3067 |
| 1000V Range | 1V/count |
| 100V Range | 100 mV/count |
| 10V Range | 10 mV/count |
| 1V Range | 1 mV/count |
| 100 mV Range | 100 μ V/count |

| SAMPLE & HOLD FAST A/D (OPTION 03 SH) ADDITIONAL INFORMATION | |
|--|--|
| Delay (Variable): | 2 to 20 μ sec. |
| Delay Offset: (External Trigger to Delay Out) No Delay Selected Repeatability | 100ns \pm 30ns \pm 2ns |
| Offset: Delay Out to Signal Hold (For total delay add offset to delay or delay offset) Repeatability | 140ns \pm 20ns \pm 3ns |
| 03SH INPUT CONNECTOR SPECIFICATIONS (PINS 24, 25) | |
| Input Voltage Range | \pm 10 Volts DC |
| Max. Measureable Input: | \pm 20 Volts |
| Maximum Input Without Damage: | 100 Volts DC or Peak AC |
| Accuracy: | 24 hr., 23 $^{\circ}$ C \pm 1 $^{\circ}$ C |
| 0V to \pm 10V | \pm .05% \pm 1.5 counts |
| -10V to -20V and +10V to +20V | \pm .05% \pm 3 counts 1 yr., 23 $^{\circ}$ C \pm 5 $^{\circ}$ C |
| 0V to \pm 10V | \pm .5% \pm 4 counts |
| -10V to -20V and +10V to +20V | \pm .5 \pm 6 counts |
| Temperature Coefficient: | \pm .015% R _{dg} \pm .1 count/ $^{\circ}$ C |
| Input Resistance: | > 100K Ω |
| Bandwidth (3 dB): | 1 MHz |
| Settling Time: 20V Step, 1K Ω Source | 6 μ s to 30 mV 2 μ s to 200 mV |

Table 1.1 - Specifications (continued)

| GENERAL | |
|---|--|
| Display: | 5 full decades plus overrange digit |
| Overrange: | 60% overrange with full accuracy on all ranges and functions except: AC (1000 VAC RMS maximum) DC (1100 volts maximum) 10 mV (120% overrange) 1Ω (120% overrange) |
| Overrange Indication: | Display reads "OL" except in 10mV range. DMM automatically upranges when 10 mV range is overloaded. |
| Warm-up Time To 24 Hr. Specifications: | 2 hours |
| Warm-up Time To Fully Stabilize To 6 Month Specifications: | 1 hour |
| Maximum Common Mode Voltage: | 1000V DC or peak AC, Guard to case with interface common tied to case. 250V, analog common to guard. |
| Front Panel Input Terminals: | + signal input + I (+ Ω current output) - I (- Ω current return) - IN (- signal common) guard |
| Rear Panel Terminals: | + EXT REF input EXT REF Common + INPUT (+ signal input) + I (+ Ω current output) - INPUT (- signal common) guard - I (- Ω current return) Analog Output Analog Common Ext Trigger |
| Ranging: | Autorange standard Uprange at 160% range (nominal) Downrange at 10% range (nominal) Manual range standard |
| Range of Mathematical Constants: | ± 1 E-9 to ± 9999.99E9 |

| GENERAL continued | |
|--|--|
| Power Requirements: | 100, 120, 220, or 240V ± 10% 75 watts maximum 60 Hz Standard |
| Weight: | 25 lbs. (net) |
| Dimensions: (See Figure 1.1) | 3.5" Height x 18" Deep x 16.75" Wide |
| Rack Mounting: | Standard corporate package |
| Temperature Range: | Operating 0°C to 50°C Storage -40°C to +70°C at 80% RH |
| Humidity, Operating: | < 75% RH; 25°C to 40°C < 50% RH; 40°C to 50°C |
| Vibration - Operating: | 0.025" Double amplitude to 55 Hz for 15 minutes |

| SYSTEMS (BCD, OPTION 59) | |
|--|--|
| Data Output Information: | All BCD outputs of display, 4-Bit Range code function flags, polarity flags, special flags, and logic supplies |
| Logic Type: | Low power Schottky TTL levels, 8-4-2-1 BCD |
| Maximum Read Rate: | 13 per sec. to full scale, 33 per sec. to full scale in Superfast, 60 Hz Operation |
| Isolation: | Data output common may be floated up to 200V peak from power line common |
| Remote Programming Input Information: | Provides isolated programming of all DMM functions and ranges |
| Functions: | Function lines are programmed by a closure to ground (low TTL level) |
| Ranges: | Range lines are 8-4-2-1 coded positive true logic |

Table 1.1 - Specifications (continued)

| GPIB INTERFACE (Option 55 GPIB) | | Standard on Models 6001, 6002 |
|---|--|--|
| Output Information: | Numeric data, polarity, function, range, and special flags. | |
| Input Information: | Functions, ranges, microprocessing functions. (Full control of all instrument capabilities.) | |
| Bus Compatibility: | IEEE STD-488-1975 | |
| IEEE STD-488-1975 Subset Capability | | |
| Subset | Function | Capability |
| SH1 | Source Handshake | Complete |
| AH1 | Acceptor Handshake | Complete |
| T5 | Talker | Complete |
| TE0 | Extended Talker | None |
| L4 | Listener | All except listen only |
| LE0 | Extended Listener | None |
| SR1 | Service Request | Complete |
| RL1 | Remote/Local | Complete |
| PP0 | Parallel Poll | None |
| DC1 | Device Clear | Complete |
| DT1 | Device Trigger | Complete |
| C0 | Controller | None |
| E1 | Open collector bus drivers | - |
| Handshake Times: | | |
| Address/Universal Commands | <75 μ S (15 μ S typical) | |
| Programming Codes | <350 μ S per character | |
| Data Output | <100 μ S per character (<85 μ S/character - HSD) | |
| Output Format: | Remote/local, addressed to talk, addressed to listen, service request, bus address | |

| 6 1/2 DIGIT MODE | |
|--------------------------------|---|
| Ranges & Functions: | All ranges and functions same |
| Selection: | May be selected via front panel keyboard or programming via GPIB only |
| Display: | 6 digit display with % overrange as noted for 5 1/2 digit operation |
| Accuracy: | Same as 5 1/2 digit |

| 4 1/2 DIGIT MODE | |
|--|---|
| Fast integration mode, 1-2/3 msec. (60 Hz) conversion maximum (not including internal 15 msec reset) | |
| Integrate Time: | 1-2/3 msec (60 Hz) 2 msec (50 Hz) |
| Ranges & Functions: | All ranges and functions same |
| Selection: | May be selected via front panel keyboard or programming |
| Display: | Four digit display with % overrange as noted for 5 1/2 digit operation |
| Accuracy: | Standard accuracy for range and function plus .03% of reading plus .03% of F.S. |

| READ RATES | | |
|------------------------|---------------------|------------------------|
| | With Display | Without Display |
| 6 1/2 Digit | 2 readings/sec | same |
| 5 1/2 Digit | 17 readings/sec | same |
| 4 1/2 Digit | 45 readings/sec | 50 readings/sec |
| 3 1/2 Digit (Fast A/D) | 250 readings/sec | 6000 readings/sec |

Table 1.1 - Specifications (continued)

| AUTOMATIC SOFTWARE RATIO $\frac{V1}{V2}$ | |
|---|---|
| Signal Input (V1): | Front input terminals* |
| Reference Input (V2): | Rear input terminals* |
| Normal Mode Rejection: | Same as for function selected for both signal (V1) and reference (V2) inputs |
| Isolation: | 1000 megohms between any front input terminal and any rear input terminal. Max 1000V DC or 1500 peak AC from any front input terminal to any rear input terminal. |
| *Inputs may be reversed using front/rear input programming by keyboard and remotely | |
| Signal Ranges: | Same as selected function |
| Reference Ranges: | 1, 10, 100, 1000V DC 1, 10, 100, 1000 V AC |
| Accuracy - DC/DC: Same Reference & Signal Range: | |
| 1-1000V Range: | $\pm .001\% \text{ Rdg} \pm (.001\% \text{ F.S. } \frac{RR}{RI})^*$ |
| 100mV Range: | $\pm .001\% \text{ Rdg} \pm (.005\% \text{ F.S. } \frac{RR}{RI})^*$ |
| Different Signal & Reference Range: | |
| 1-1000V Range: | $\pm .002\% \text{ Rdg} \pm (.002\% \text{ F.S. } \frac{RR}{RI})^*$ |
| 100mV Range: | $\pm .007\% \text{ Rdg} \pm (.01\% \text{ F.S. } \frac{RR}{RI})^*$ |
| Accuracy - AC/AC: Same Reference & Signal Range & Frequency: | |
| 100 Hz - 20 KHz | $\pm .06\% \text{ Input} \pm (.05\% \text{ FS } \frac{RR}{RI})^*$ |
| 50 Hz - 50 KHz | $\pm .1\% \text{ Input} \pm (.1\% \text{ FS } \frac{RR}{RI})^*$ |
| Accuracy - Mixed Functions: | Signal function specification and reference function specification (with % of range multiplied by $\frac{RR}{RI}$) * |
| Speed: | Approximately 1 second per reading + timeouts for signal/reference functions and ranges (Max timeout approx 500 mS) |

*RR = Ref. Range

RI = Ref. Input

$$\frac{RR}{RI} \geq 1$$

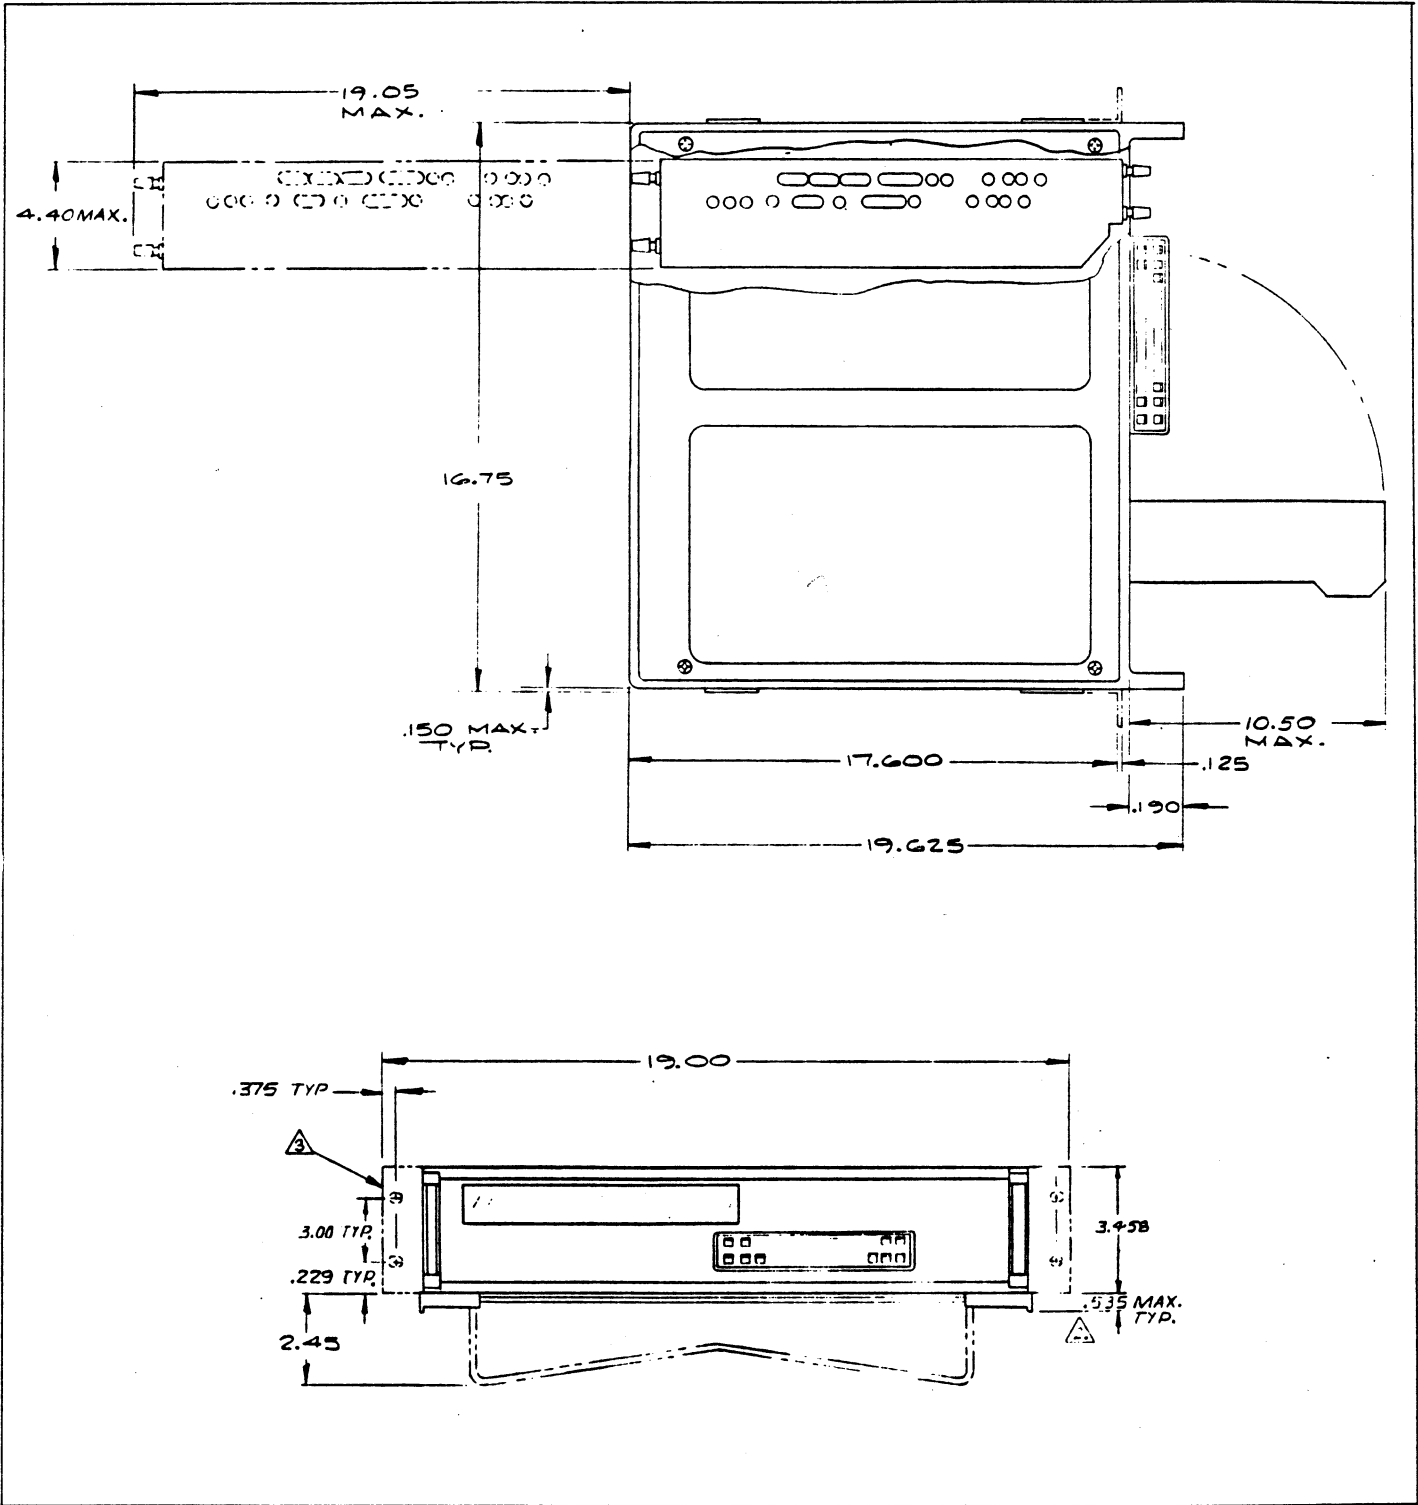


Figure 1.1 - Dimensional Outline

SECTION 2

INSTALLATION & INTERFACE

2.1 UNPACKING AND INSPECTION.

2.1.1 The Model 6000 DMM is packed in a molded plastic-foam form within a cardboard carton for shipment. The plastic form holds the DMM securely in the carton and absorbs any reasonable external shock normally encountered in transit. Prior to unpacking, examine the exterior of the shipping carton for any signs of damage. Carefully remove the DMM from the carton and inspect the exterior of the instrument for any signs of damage. If damage is found, notify the carrier immediately.

2.1.2 Included with the instrument in the packing container are the instruction manual and power cord.

2.1.3 For the convenience of the user during maintenance or field installation of options, the Model 6000 has an option label affixed to the transformer cover on the rear panel. It indicates the location of all option assemblies for that unit.

2.2 BENCH OPERATION.

2.2.1 Each Model 6000 is equipped with a tilt bail or "kickstand" to enable the front of the instrument to be elevated for convenient bench use. The tilt bail is attached to the two front supporting "feet" at the bottom of the instrument. For use, the bail is pulled down to its supporting position.

2.3 RACK MOUNTING.

2.3.1 The instrument can be mounted in a standard 19-inch rack with the optional rack-mounting flanges (403402, includes attaching hardware). To install the flanges, proceed as follows:

- a. With instrument on its side, remove four Phillips-head screws holding bottom cover. Remove cover. Remove screws holding feet (and bail) in place. Replace bottom cover.
- b. Next, remove the Special Purpose Function tray attached to the bottom cover by lifting the four metal tabs with an appropriate tool. Replace the bottom cover.
- c. Place one of the supplied screws through each of the two holes in the mounting flange (figure 2.1). Thread a securing nut onto each screw just enough to attach it to the screw (approximately one turn).
- d. Place the mounting flange onto the mounting slot in the instrument side panel so that the securing

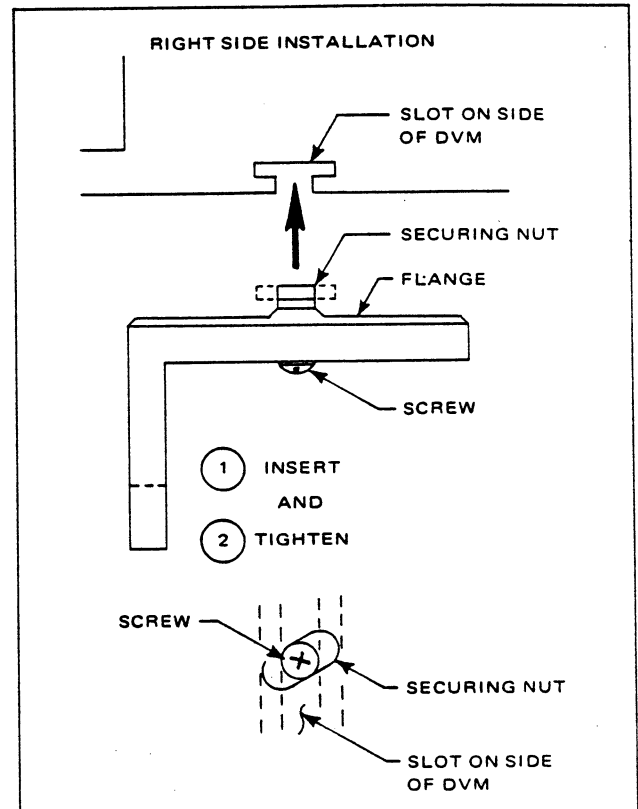


Figure 2.1 - Rack Mount Installation

nuts fit entirely into the slot. Be sure the rack-mount slots on the flange are toward the front of the instrument.

- e. Tighten screws. The securing nuts will rotate and hold the flange securely in place.

2.4 POWER CONNECTIONS

2.4.1 Standard units operate on either 100, 115, 230 or 240 volts, 60 Hz (50 or 400 Hz available). Power consumption is less than 75 watts. Operation on either of the four line voltages is selectable by placement of a small printed circuit card in the combination voltage selector/fuse holder/power cord connector assembly. Selection of a specific line voltage is accomplished as follows:

- a. Disconnect the AC power cord from the power connector (reference ⑨, Figure 3.3, Table 3.3) and slide the plastic fuse cover to the left so that it covers the power cord connector pins. This exposes the fuse and the safety interconnect device.

- b. Pull the small lever marked FUSE PULL and swing it to the left. This removes the fuse from the fuse holder and makes the voltage selector card accessible for removal.
- c. Remove the voltage selector PCB and reinsert it so that the desired operating line voltage is visible.
- d. Swing the lever marked FUSE PULL back to the right and snap it into the closed position.
- e. Replace the fuse and slide the plastic window to the right so that it covers the voltage selector PCB and fuse.
- f. Plug the AC line cord into the line cord connector. The instrument is now ready for operation.

2.4.2 A standard power cable having a three-pin plug is supplied with the instrument. It connects to POWER connector J214. The ground pin is attached to the instrument case. It is important that this pin be connected to a good quality earth ground.

2.4.3 Fuse receptacle F201 on the rear panel is equipped with a .75 amp fuse.

2.5 INPUT/OUTPUT CABLING.

2.5.1 Binding Posts.

2.5.1.1 Several connectors on the Model 6000 consist of a pair of binding posts spaced so as to accept standard "banana" plugs. The connectors are:

| Front Panel | Rear Panel |
|------------------|---------------|
| ± INPUT | ± EXT REF |
| ± OHMS CURRENT | ± INPUT |
| GUARD | ± 4-WIRE Ω |
| BNC CONNECTORS { | GUARD |
| | EXT TRIG |
| | ANALOG OUTPUT |

2.5.1.2 Input cables to fit the above connectors can be ordered from Racal-Dana. The Part Numbers are shown below:

| CABLE ASSEMBLY | PART NUMBER |
|--|-------------|
| AC POWER | 403530 |
| INPUT 4-WIRE Ω SOURCE EXTERNAL REFERENCE | 402190 |

2.5.2 Fast A/D Output Connector (Options 03 and 03SH).

2.5.2.1 When Option 03 or 03SH is installed the instrument is equipped with a rear panel connector for system connection of the fast analog-to-digital output. The pin-signal assignments for these connectors are illustrated in Figures 2.2 and 2.3. The instrument is supplied with the mating connector.

2.5.3 Interface Bus Connector (Option 55).

2.5.3.1 When Option 55 is installed the instrument is equipped with a General Purpose Interface Bus connector for connection to a system. The pin-signal assignments for this connector are illustrated in Figure 2.4. This connector is configured to conform to the IEEE-488-1975 Standard Interface Specification.

2.5.4 Parallel BCD Output/Program Connector (Option 59).

When the instrument is configured for remote control and parallel BCD output, data is routed out to the system through the rear panel connectors illustrated in Figures 2.5 and 2.6. This illustration shows the pin signal assignments for the parallel BCD program input connector and parallel BCD output connector.

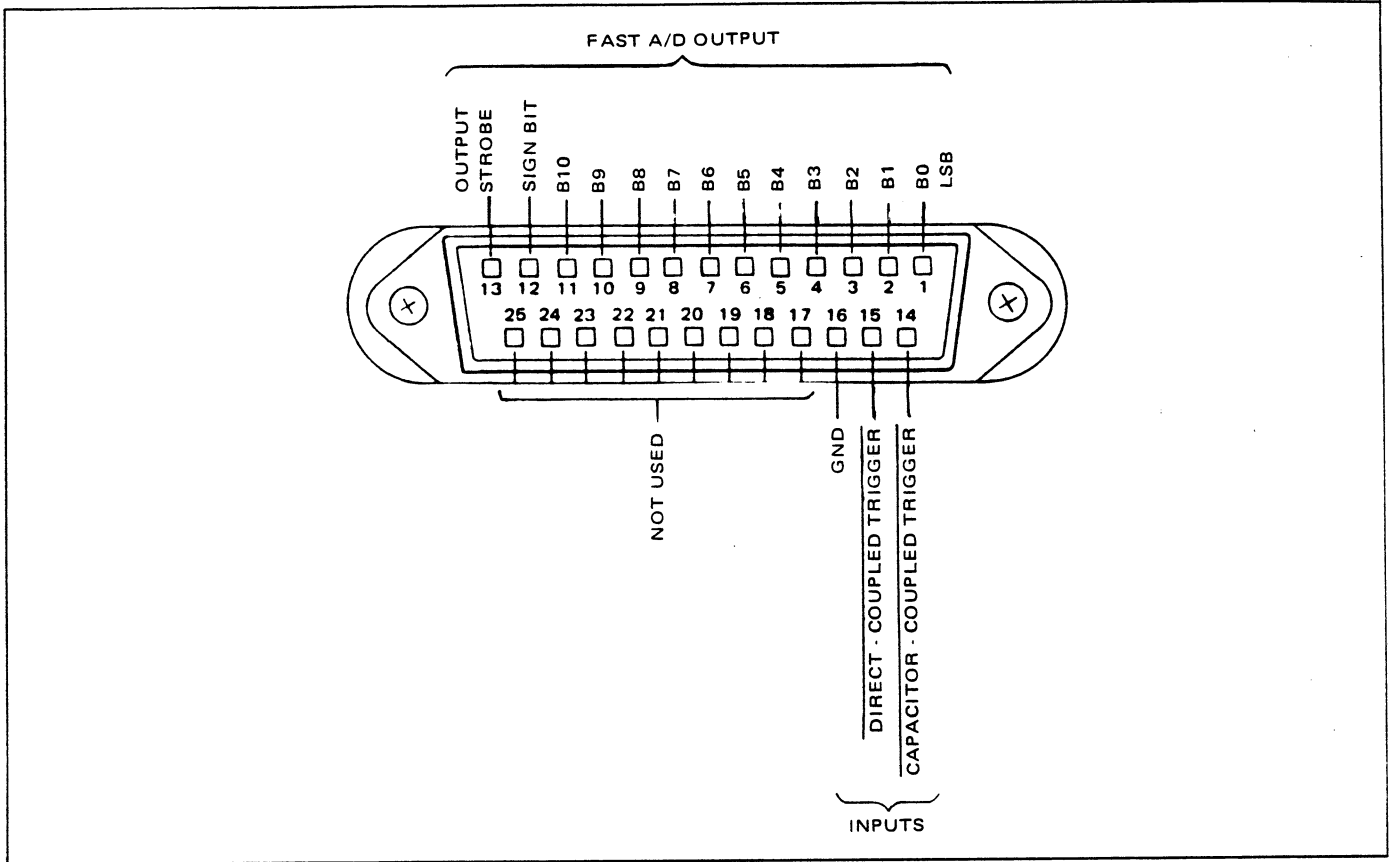


Figure 2.2 - Fast A/D Output Connector - Option 03 (Rear Panel)

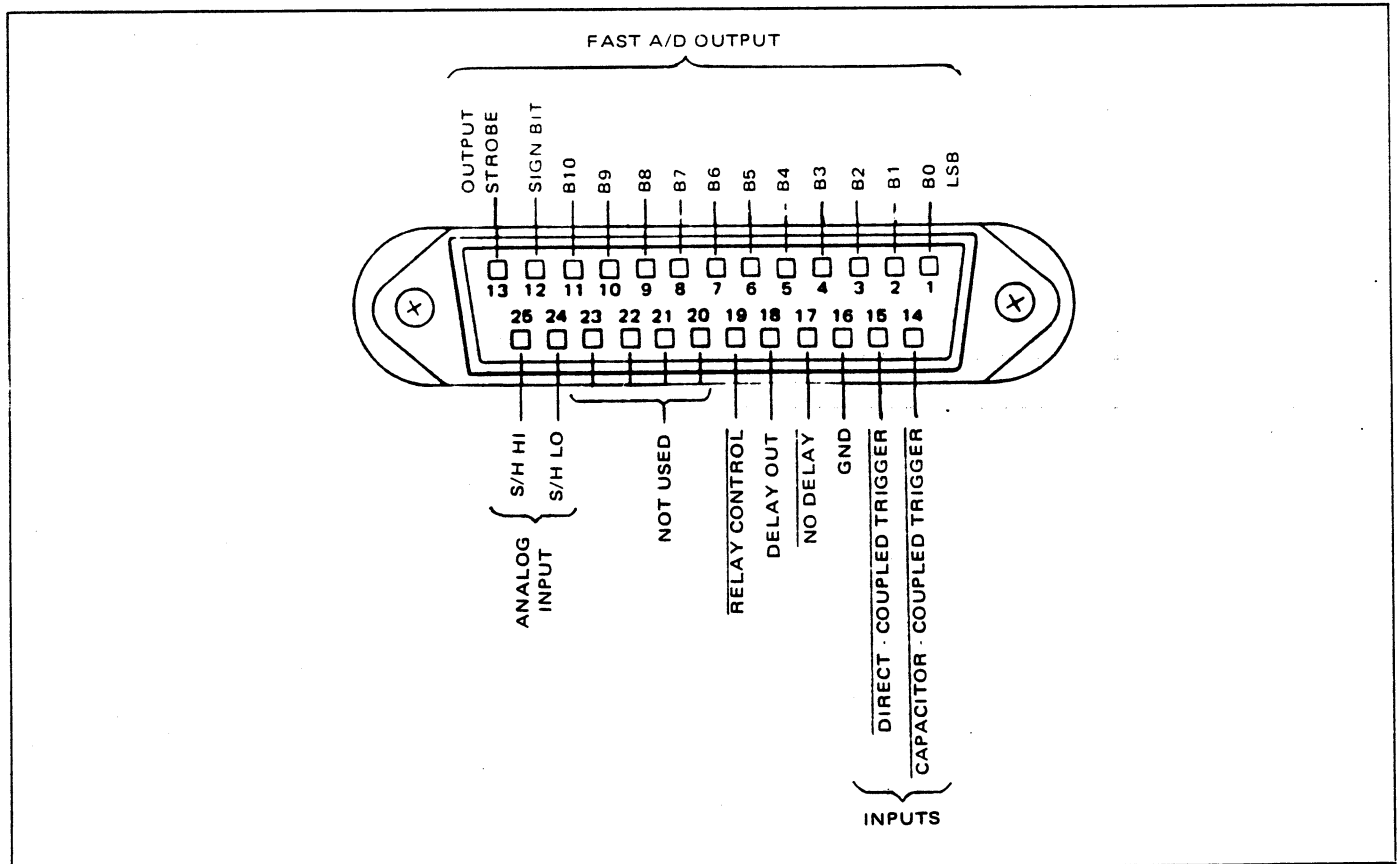


Figure 2.3 - Sample & Hold Fast A/D Output Connector - Option 03SH (Rear Panel)

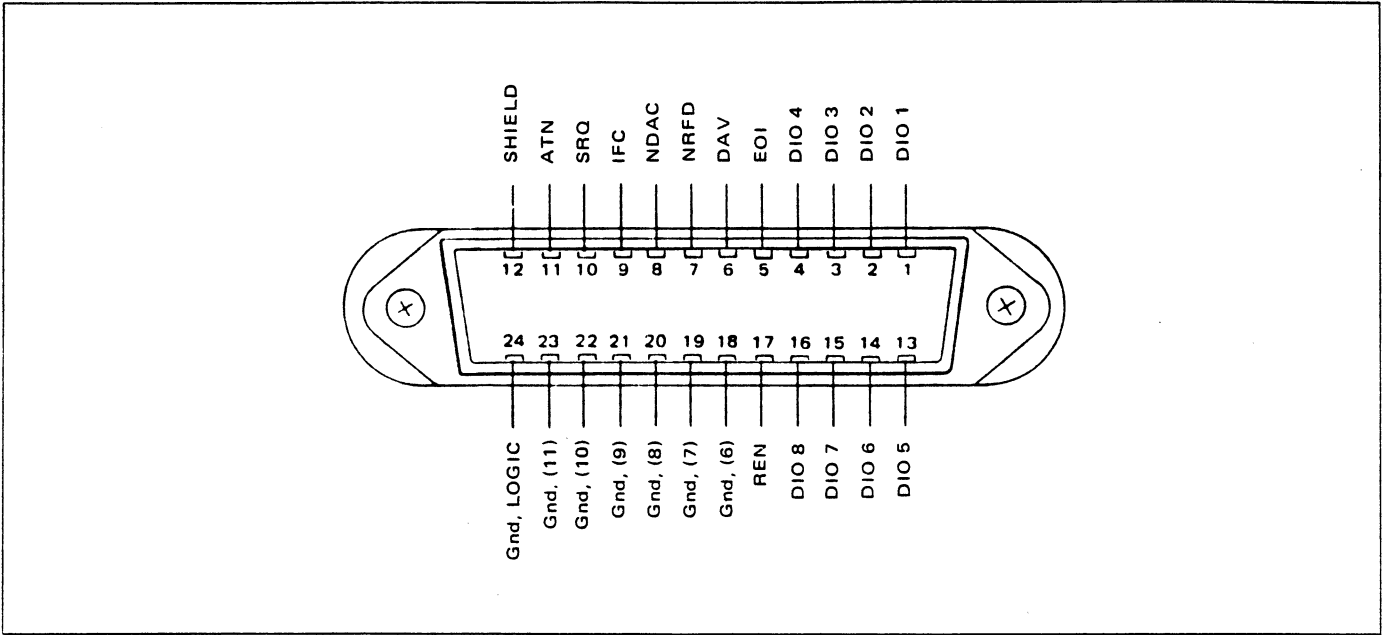


Figure 2.4 - GPIB Connector (Rear Panel)

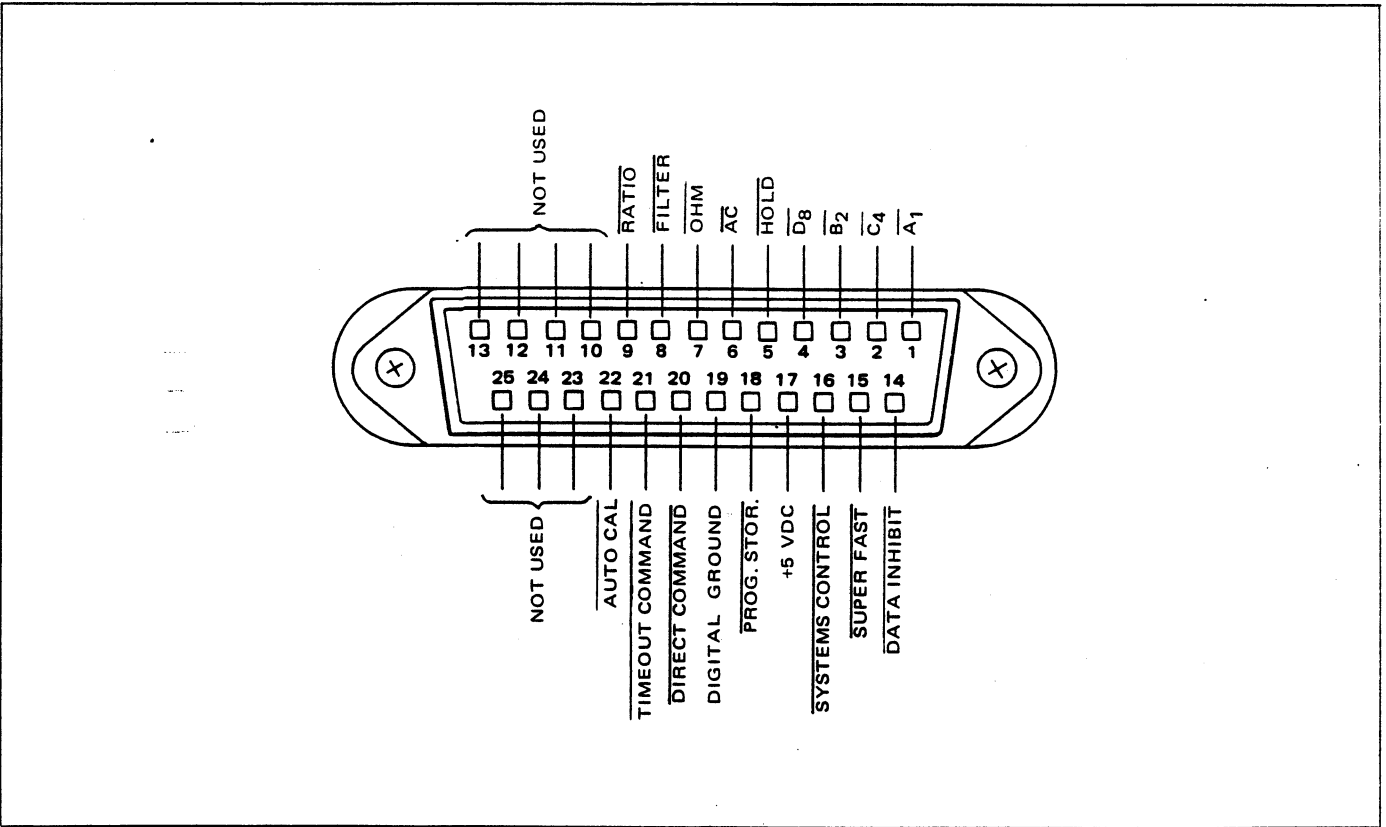


Figure 2.5 - J209 Parallel BCD Program Input Connector (Rear Panel)


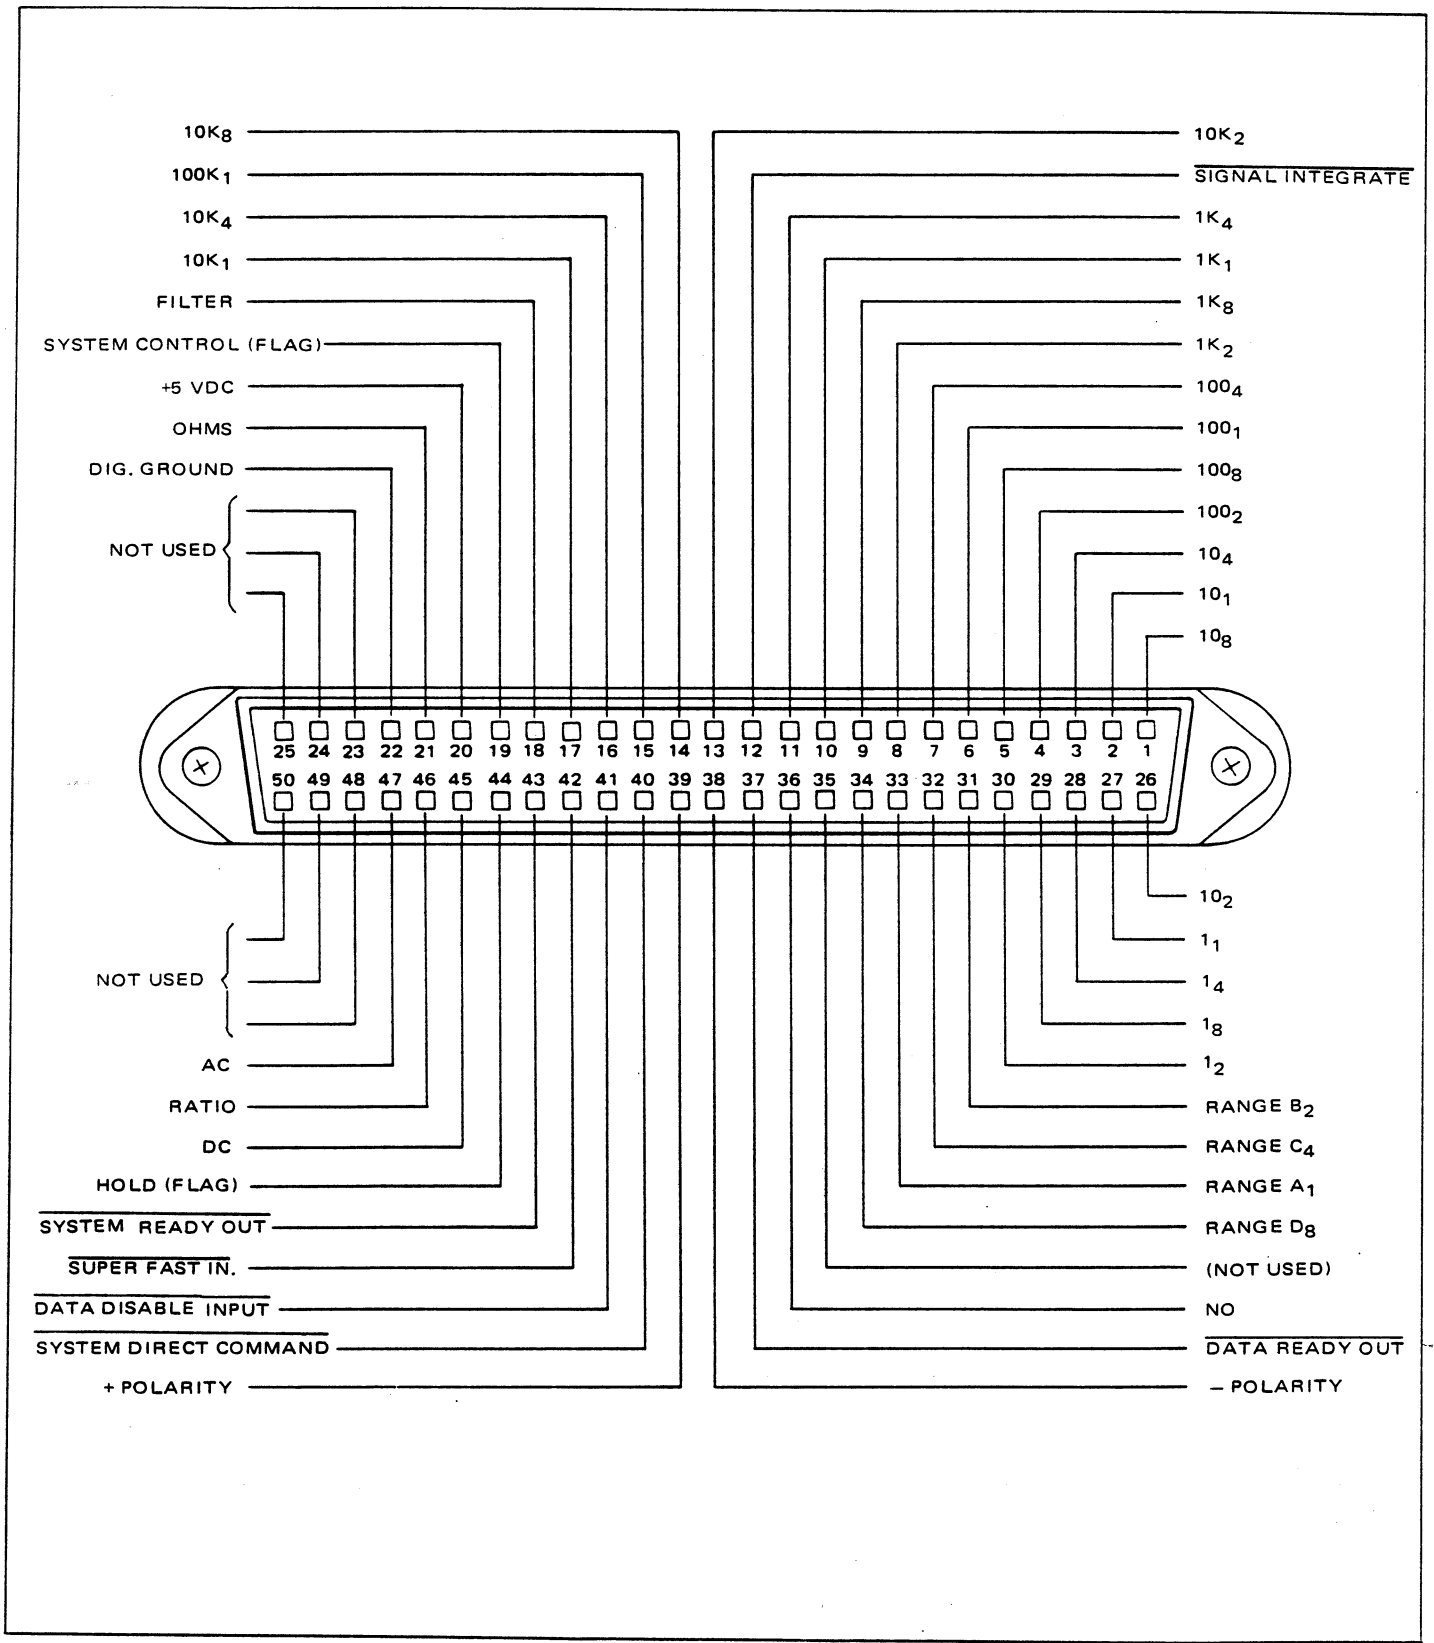


Figure 2.6 - J212 Parallel BCD Printer Output Connector (Rear Panel)



3.1 INTRODUCTION.

3.1.1 This section contains operating and calibration information for the Model 6000 DMM. The operating information contains illustrations of all front and rear panel controls, indicators and connectors along with tabular listings of the function and purpose of each. Operating instructions for manual or bench operation are presented in two ways; a description of each operating feature followed, where necessary, with a step-by-step operating example. Some operating features or functions are simple one or two step operations and thus no operating examples are included.

3.1.2 Remote operation via the IEEE-STD-488-1975 General Purpose Interface Bus is one of the principal features of the 6000 DMM and the section presents bus address selection information and a tabular listing of the device-dependent messages used to program the instrument. Also included is a GPIB program, measurement and data transfer example in tabular form. This example is a step-by-step listing of the interface command messages, data messages and interface control signal line operation required to perform a typical program and data transfer cycle. A timing diagram accompanies the GPIB program cycle to illustrate

the timing relationship of the interface, handshake and data lines of the bus in operation.

3.1.4 A calibration check procedure is provided and this procedure includes step-by-step instructions for the calibration check along with illustrations showing the connection of the 6000 DMM and the calibration equipment.

3.1.5 Following the calibration check procedure is a laboratory calibration procedure. This is a step-by-step procedure providing instructions for complete calibration of the instrument.

3.2 CONTROLS, INDICATORS AND CONNECTORS.

3.2.1 The location, nomenclature and function of all controls, indicators and connectors are illustrated and described in Figures 3.1, 3.1A, 3.2 and the accompanying Tables 3.1 through 3.3. The front panel information is presented in Figure 3.1, Table 3.1; the keyboard information in Figure 3.1A, Table 3.2 and, the rear panel is shown and described in Figure 3.2 and Table 3.3.

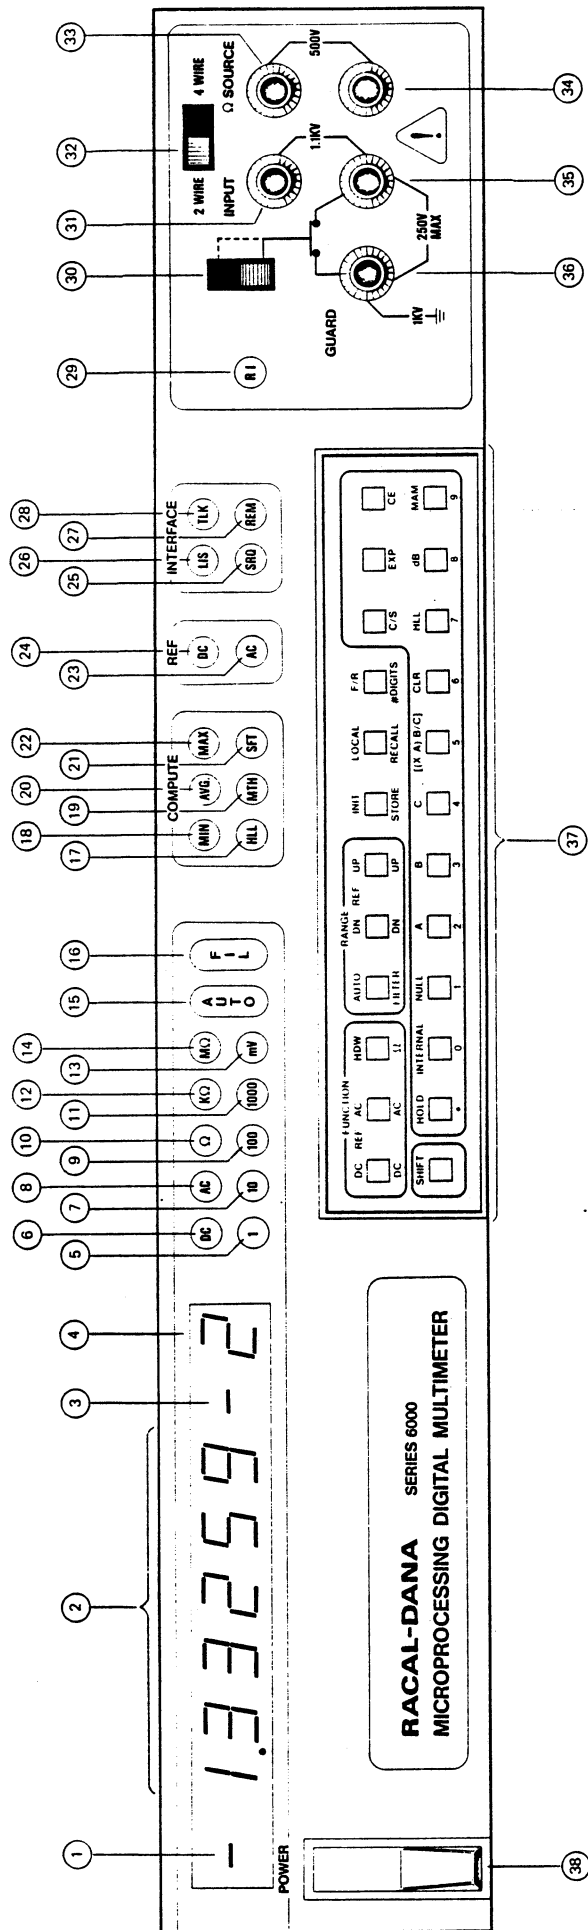


Figure 3.1 - Front Panel Controls, Indicators and Connectors

Table 3.1 - Front Panel Controls, Indicators and Connectors

| Reference | Item/Position | Function |
|-----------|-------------------------------|---|
| ① | Mantissa sign indicator (LED) | Displays the – polarity of the mantissa appearing on the display LEDs. |
| ② | Mantissa display LEDs | For the DC, AC and ohms functions these LEDs display the value of the measurement along with any appropriate decimal point. They are also used to display constants and function symbols such as “db”, “Hi” and “Lo”. |
| ③ | Exponent sign indicator | Displays the negative sign indication for the exponent. |
| ④ | Exponent indicator | Indicates the numeric value of the exponent. Also indicates LSD when in 6 1/2 digit mode. |
| ⑤ | 1 range indicator LED | Indicates that the instrument is on the 1 volt range when on AC or DC functions or in the 1 Ω , 1K Ω or 1 Megohm range in the resistance function. |
| ⑥ | DC annunciator | Indicates that the instrument is on the DC volt function. |
| ⑦ | 10 annunciator | Indicates that the instrument is on the 10 volt or 10 mV range when on the AC or DC volts function or on the 10 Ω , 10K Ω or 10 Megohm range in the resistance function. |
| ⑧ | AC annunciator | Indicates the instrument is performing an AC volts measurement function. |
| ⑨ | 100 annunciator | Indicates the instrument is on the 100 volt or 100 mV range when performing an AC volts or DC volts measurement or on the 100 Ω , 100K Ω or 100 Megohm range in the resistance function. |
| ⑩ | Ω annunciator | Indicates that the instrument is performing a resistance measurement function and that the display is indicating the value of the measurement in ohms. |
| ⑪ | 1000 annunciator | Indicates that the instrument is on the 1000 volt range while performing in an AC volts or DC volts measurement. |
| ⑫ | K Ω annunciator | Indicates that the instrument is performing a resistance measurement function and that the value shown on the display is in kilohms. |
| ⑬ | mV | Indicates that the instrument is measuring DC volts and that the display is showing the voltage measurement in mV. |
| ⑭ | M Ω annunciator | Indicates that the instrument is performing a resistance measurement and that the display is indicating the resistance value in Megohms. |
| ⑮ | AUTO annunciator | Indicates that the instrument is in the auto range mode. |

Table 3.1 - Front Panel Controls, Indicators and Connectors continued

| Reference | Item/Position | Function |
|-----------|--------------------|---|
| ①6 | FIL indicator | Indicates that the input filter has been switched in the measurement input circuit. |
| ①7 | HLL annunciator | Indicates that the instrument is performing the high-low-limit function. When this annunciator is lit it indicates that the display is showing a relative measurement of the value based on a pre-selected and preprogrammed input limit. |
| ①8 | MIN annunciator | Indicates that the display is presenting the recalled minimum value measured during a min-avg-max measurement function. The min avg max are all lit when MAM routine is being used. Min lit by itself only during "Recall Min" operation. |
| ①9 | MTH annunciator | Indicates that NULL or $\frac{(X-A)B}{C}$ is being used. |
| ②0 | AVG annunciator | Indicates that the display is presenting the recalled average result of the min-average-maximum computation. The min avg max are all lit when MAM routine is being used. Avg lit by itself only during "Recall Avg" operation. |
| ②1 | SFT annunciator | Indicates that the keyboard is in the SHIFT mode. |
| ②2 | MAX annunciator | Indicates that the display is presenting the value of the highest measurement made during a min-average-maximum function. The min avg max are all lit when MAM routine is being used. Max lit by itself only during "Recall Max" operation. |
| ②3 | AC REF annunciator | Indicates that the instrument is using an external AC reference voltage. |
| ②4 | DC REF annunciator | Indicates that the instrument is using an external DC reference voltage. |
| ②5 | SRQ annunciator | Indicates that the instrument is transmitting a service request (interrupt) to the controller in system operation. |
| ②6 | LIS annunciator | Indicates that the instrument has been programmed by the controller to function as a listener on the General Purpose Interface Bus. |
| ②7 | REM annunciator | Indicates that the instrument has been put into the remote operating mode by the controller (parallel BCD or GPIB) or by the operator via the keyboard (parallel BCD only). |
| ②8 | TLK annunciator | Indicates that the instrument has been programmed by the controller to function as a talker on the General Purpose Interface Bus. |

Table 3.1 - Front Panel Controls, Indicators and Connectors continued

| Reference | Item/Position | Function |
|-----------|---------------------------|---|
| 29 | RI annunciator | Indicates that the instrument is in the rear input mode. |
| 30 | COMMON-GUARD switch | When set to the lower position this switch connects the input common to the guard terminal. |
| 31 | INPUT high connector | Serves as the front panel connection for DC volts, AC volts, millivolts and 2-wire resistance measurements. |
| 32 | 2 WIRE/4 WIRE switch | This switch controls the front panel inputs only. When set to the 2 wire position this switch connects the ohms source terminals to the input terminals to facilitate convenient 2 wire resistance measurements. When set to the 4 wire position, the ohms source terminals are disconnected from the input terminals. When used in the 4 wire position the instrument must be connected to the unknown resistance via 4 input connection leads. This switch should be in the 4-wire position when measuring High Voltage AC or DC (> 500V). The 2-wire/4-wire Operation is explained in paragraph 3.3.6, page 3-13. |
| 33 | OHMS SOURCE connector | Provides the output source current for resistance measurement. |
| 34 | OHMS SOURCE low connector | Provides the source current for resistance measurements. |
| 35 | INPUT low connector | Provides the front panel input connection for AC volts, DC volts, millivolts and ohms 2-wire resistance measurements. |
| 36 | GUARD connector | Provides the front panel connection for the guard plane of the instrument. |
| 37 | Keyboard | Provides operate control of all instrument functions in local mode. Functions of the individual pushbuttons on the keyboard are described in Table 2. |
| 38 | PWR switch/indicator | Lights the switch and applies main AC line power to the instrument when set to the ON position. Causes the DMM to perform the following Initialization Sequence: <ul style="list-style-type: none"> a. Performs Auto-Test/Auto-Cal. b. Sets DMM to Internal Reference, DC Volts, Auto-range and Continuous Readings. |

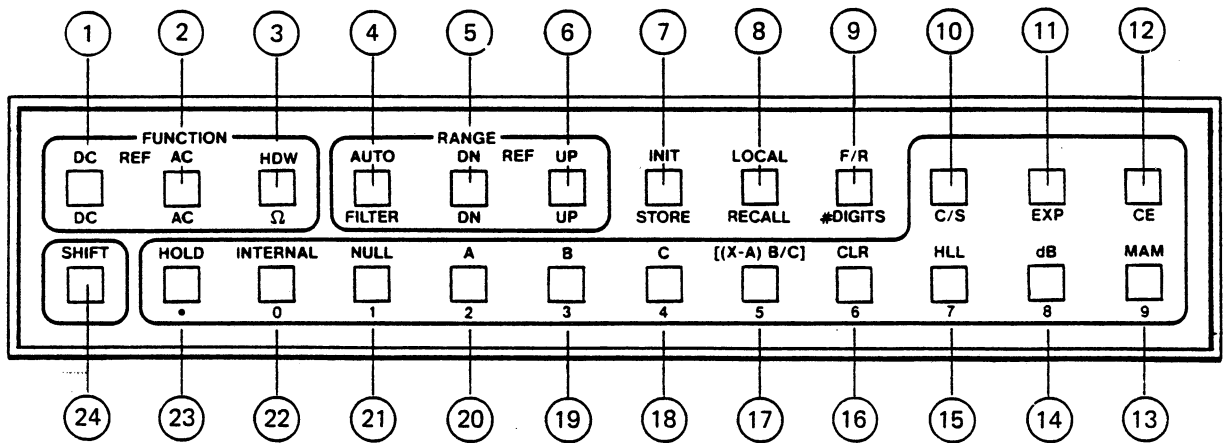


Figure 3.1A - Keyboard Control Layout

Table 3.2 - Keyboard Control Functions

| Reference | Control | Function |
|-----------|--|---|
| ① | <input type="checkbox"/> DC | Selects the DC volts/millivolts function and puts the instrument in AUTO range. |
| | SHIFT DC <input type="checkbox"/> <input type="checkbox"/> | Selects the Software Ratio function, DC reference (applied to deselected input). |
| ② | <input type="checkbox"/> AC | Selects the AC volts function and puts the instrument in AUTO range. Requires Option 10 or Option 14. |
| | SHIFT AC <input type="checkbox"/> <input type="checkbox"/> | Selects the Software Ratio function, AC reference (applied to deselected input). Requires Option 10 or Option 14. |
| ① | SHIFT HDW DC <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> | Selects DC external reference voltage at EXT REF terminals and 4-wire DC ratio mode (Option 34) for hardware ratio measurements. |
| ② | SHIFT HDW AC <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> | Selects AC external reference voltage at EXT REF terminals. (Requires Option 11 for hardware ratio measurements.) |
| ① ② | SHIFT HDW <input type="checkbox"/> <input type="checkbox"/> THEN DC AC <input type="checkbox"/> <input type="checkbox"/> SIMULTANEOUSLY | Prepares instrument for external reference selection. Pressing both keys simultaneously selects DC coupled AC external reference voltage at EXT REF terminals (Option 11) for hardware ratio measurements. |
| ① ② | SIMULTANEOUSLY <input type="checkbox"/> <input type="checkbox"/> DC AC | Pressing both keys simultaneously selects DC coupled AC when True RMS Converter (Option 10) is installed. |
| ③ | <input type="checkbox"/> Ω | Selects the resistance function and puts the instrument in AUTO range. (Requires Option 24.) |
| ④ | <input type="checkbox"/> FILTER | Toggles the 4-pole active filter (on, off, on, etc.). |
| | SHIFT AUTO <input type="checkbox"/> <input type="checkbox"/> | Toggles the AUTO range function (on, off, on, etc.). |
| ⑤ | SHIFT DN <input type="checkbox"/> <input type="checkbox"/> | Causes the reference voltage range to down-range on each depression and causes the instrument to display the range of the reference voltage on the range annunciators for as long as the key is held down. |
| | <input type="checkbox"/> DN | Takes the instrument out of AUTO range (if in auto) on first depression. Each subsequent depression causes the instrument to down-range. |

Table 3.2 - Keyboard Control Functions continued

| Reference | Control | Function |
|-----------|---|--|
| ⑥ | SHIFT <input type="checkbox"/> UP <input type="checkbox"/> | Causes the reference voltage range to up-range on each depression and causes the instrument to display the range of the reference voltage on the range annunciators for as long as the button is held down. |
| | <input type="checkbox"/> UP | Takes the instrument out of AUTO range (if in auto) on first depression. Each subsequent depression causes the instrument to up-range. |
| ⑦ | SHIFT <input type="checkbox"/> INIT <input type="checkbox"/> | Takes the instrument out of high level function modes and returns it to internal reference. |
| | <input type="checkbox"/> STORE (X) <input type="checkbox"/> | Causes the instrument to store the previous reading or the value shown on the display into the location determined by the operator. Storage location selection is accomplished by depressing one of the keys: <input type="checkbox"/> A <input type="checkbox"/> B <input type="checkbox"/> C <input type="checkbox"/> dB <input type="checkbox"/> HLL <input type="checkbox"/> * |
| ⑧ | SHIFT <input type="checkbox"/> LOCAL <input type="checkbox"/> | Sends an RTL (return to local) request to the systems interface. Returns the instrument to local operation unless the instrument has been given a local lockout (LLO) command. Holding the button down causes the instrument to display the GPIB device address on the readout. |
| | <input type="checkbox"/> RECALL (X) <input type="checkbox"/> | Causes the instrument to recall and display the present value stored in anyone of the following locations: <input type="checkbox"/> A <input type="checkbox"/> B <input type="checkbox"/> C <input type="checkbox"/> dB <input type="checkbox"/> NULL <input type="checkbox"/> MAM <input type="checkbox"/> HLL <input type="checkbox"/> * |
| ⑨ | SHIFT <input type="checkbox"/> F/R <input type="checkbox"/> | Toggles the front/rear relay so that either input may be used for measurement. When the rear input is in use the RI indicator on the front panel is lit (reference 29, table 3-1). |
| | <input type="checkbox"/> #DIGITS <input type="checkbox"/> 4 <input type="checkbox"/> 5 <input type="checkbox"/> 6 | Selects the display length, integration time and causes the instrument to perform an Auto-Test/Auto-Cal routine. After depressing the number of digits pushbutton the 4, 5 or 6 button must be depressed to select the number of digits. |
| ⑨ | <input type="checkbox"/> #DIGITS <input type="checkbox"/> 0 | Disables Auto-Test/Auto-Cal until SHIFT/INIT is pressed. |
| ⑨ | <input type="checkbox"/> #DIGITS <input type="checkbox"/> 3 | Causes the output of the Fast A/D converter to be displayed in signed octal. |
| ⑩ | <input type="checkbox"/> C/S | The "change sign" pushbutton reverses the polarity of entered mantissas and exponents. |
| ⑪ | <input type="checkbox"/> EXP | Enables the entry of exponents. The depression of this key signals the instrument that numbers to follow are to be stored as exponents. |
| ⑫ | <input type="checkbox"/> CE | "Clear Entry Key" clears the numbers in display and returns the machine to its previous state. |

Table 3.2 - Keyboard Control Functions continued

| Reference | Control | Function |
|-----------|---|---|
| 13 | SHIFT <input type="checkbox"/> MAM <input type="checkbox"/> | Toggles the MAM function. MIN, AVG and MAX annunciators are lit while the MAM function is selected. |
| | <input type="checkbox"/> 9 | Enters the digit 9 which will then be displayed until it is assigned a memory location. |
| 14 | SHIFT <input type="checkbox"/> dB <input type="checkbox"/> | Toggles the dB function. This function displays the measurement value in decimals referenced to 1 milliwatt in 600 ohms. (The resistance value may be changed to any desired value; see the Decibel operating procedure (page 3.21). |
| | <input type="checkbox"/> 8 | Enters the digit 8 which will then be displayed until it is assigned a storage location. |
| 15 | SHIFT <input type="checkbox"/> HLL <input type="checkbox"/> | Toggles the HLL function. See the hi/low limit operating procedure. |
| | <input type="checkbox"/> 7 | Enters the digit 7 which will then be displayed until it is assigned a memory location. |
| 16 | SHIFT <input type="checkbox"/> CLR <input type="checkbox"/> | Causes the selected storage register to be set to a value which least affects the display as follows: SHIFT CLR ((X-A) B/C) <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> Sets A to 0, B and C to 1.0 SHIFT CLR A <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> Sets A to 0, B and C unaffected SHIFT CLR B <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> Sets B to 1.0, A and C unaffected SHIFT CLR C <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> Sets C to 1.0, A and B unaffected SHIFT CLR MAM <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> Clears the min, max and average SHIFT CLR dB <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> Sets R to 600 ohms (0 dB = 1 mW into 600Ω) |
| | <input type="checkbox"/> 6 | Enters the digit 6 which will then be displayed until it is assigned a memory location. |
| 17 | SHIFT <input type="checkbox"/> ((X-A) B/C) <input type="checkbox"/> | Causes the instrument to perform the mathematical formula indicated above the key. X is the present measurement value (reference Figure 3.9). When selected, the constant stored in memory location A is subtracted from the present measurement value. The difference is then multiplied by the constant stored in memory location B and divided by the constant stored in memory location C. The values of A, B and C must have been entered prior to using the math function. The function may be exited by again pressing SHIFT ((X A) B/C) <input type="checkbox"/> <input type="checkbox"/> . The constants will remain in memory until they are cleared or changed. |
| | <input type="checkbox"/> 5 | Enters the digit 5 which will then be displayed until it is assigned a memory location. |

Table 3.2 - Keyboard Control Functions continued

| Reference | Control | Function |
|-----------|--|---|
| 18 | SHIFT <input type="checkbox"/> C <input type="checkbox"/> | Used with the store and recall keys for entering or recalling values in the storage location C. |
| | <input type="checkbox"/> 4 | Enters the digit 4 which will then be displayed until it is assigned a memory location. |
| 19 | SHIFT <input type="checkbox"/> B <input type="checkbox"/> | Used with the store and recall keys for entering or recalling values in the storage location B. |
| | <input type="checkbox"/> 3 | Enters the digit 3 which will then be displayed until it is assigned a memory location. |
| 20 | SHIFT <input type="checkbox"/> A <input type="checkbox"/> | Used with the store and recall keys for entering or recalling values in the storage location A. |
| | <input type="checkbox"/> 2 | Enters the digit 2 which will then be displayed until it is assigned a memory location. |
| 21 | SHIFT <input type="checkbox"/> NULL <input type="checkbox"/> | Causes the instrument to store the present measurement value for subtraction from all future readings and begins the null function. When the null function is in use the MTH annunciator is lit. Depressing the recall button and the null button will cause the instrument to display the values stored in the null constant storage location. Note: When the null function is activated, the 6000 should not be down-ranged below the voltage range in which the null function was originally activated. Note: If filter is to be used on 10mV range (Option 41), it must be enabled prior to setting NULL. The function may be exited by again pressing <input type="checkbox"/> <input type="checkbox"/> . The constant will remain in memory until it is cleared or changed. |
| | <input type="checkbox"/> 1 | Enters the digit 1 which will then be displayed until it is assigned a memory location. |
| 22 | SHIFT <input type="checkbox"/> INTERNAL <input type="checkbox"/> | Enables the internal trigger of the instrument. This pushbutton is used to take the instrument out of the hold mode. |
| | <input type="checkbox"/> 0 | Enters the digit 0 which will then be displayed until it is assigned a memory location. |
| 23 | SHIFT <input type="checkbox"/> HOLD <input type="checkbox"/> | Places the instrument in the "hold" mode (no internal trigger) and calls for a single measurement to be made and displayed. |
| | <input type="checkbox"/> . | Enters the decimal character which will then be displayed until it is assigned a memory location. |
| 24 | SHIFT <input type="checkbox"/> | Toggles the keyboard shift. When in the shift mode the SFT annunciator is lit and the instrument interprets keyboard depression according to the shift (yellow colored) markings. For example, to initialize the instrument press the shift key so that the SFT annunciator lights then press the INIT/STORE key. To select the STORE function, the INIT/STORE push-button must be depressed while the SFT annunciator is extinguished. |

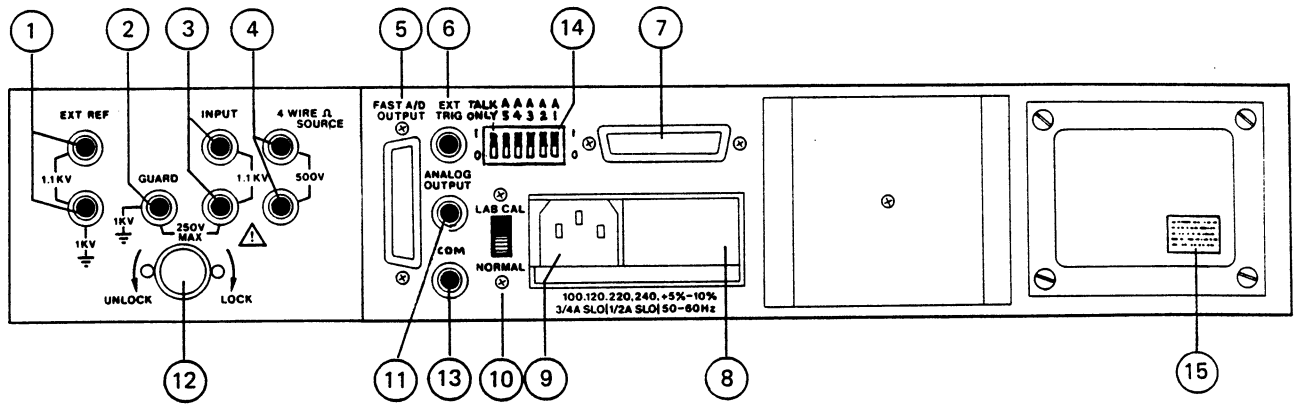


Figure 3.2 - Rear Panel Controls and Connectors

Table 3.3 - Rear Panel Controls and Connectors


| Reference | Item | Function |
|-----------|-----------------------------------|---|
| ① | EXT REF input connectors | External reference input connectors for hardware ratio measurements. |
| ② | GUARD connector | Provides rear panel connection for guard plane of the instrument. |
| ③ | INPUT connectors | Rear panel connection for AC volts, DC volts and 4-wire resistance measurements. Also may be used as a reference input when using automatic software ratio. For 2-wire measurements, source terminals must be connected to input terminals. |
| ④ | 4 WIRE Ω SOURCE connectors | Provides the source current for 4-wire resistance measurements. |
| ⑤ | FAST A/D OUTPUT connector | Provides output connection for FAST A/D data if Option 03 or 03SH is installed. Provides programming input if Option 59 is installed. Pin signal assignment is presented in Section 2 of this manual. |
| ⑥ | EXT TRIG connector | Provides rear panel connection point for external trigger signal. (BNC connector) |
| ⑦ | GPIB or BCD Output connector | Provides interface bus connection. The connector is configured in accordance with IEEE 488-1975 standard digital interface if Option 55 is installed. It is the BCD output if Option 59 is installed. The pin signal assignments are presented in Section 2 of this manual. |
| ⑧ | Fuse holder | Fuse holder/safety interlock. Primary power fuse. Uses 3/4 amp slo blo fuse for 100-120 volt operation; 1/2 slo blo fuse for 220-240 volt operation. |
| ⑨ | Power connector | Connection point for primary AC power line cord. |
| ⑩ | LAB CAL/NORMAL | Used for calibrating the instrument against lab standards. Not used for operation. |
| ⑪ | ANALOG OUTPUT connector | Provides rear panel connection of analog output signal (isolator output). |
| ⑫ | LOCK/UNLOCK knob | A mechanical fastener used to lock the calibration module in the instrument. |
| ⑬ | COM connector | Provides the low-analog output connection and serves as the Ohms Guard when the Ohms function is selected. |
| ⑭ | GPIB Address Switch | Allows selection of "Talk Only" mode as well as selection of DMM's GPIB address which identifies the DMM in systems operation. |
| ⑮ | Option Label | See paragraph 2.1.3. |

3.3 BENCH OPERATION.

3.3.1 Auto Test/Auto-Cal.

3.3.1.1 When the Model 6000 is initialized by power turn on (and at predetermined intervals after turn on) the Auto Test/Auto-Cal routines are performed. The type and number of routines are determined by the particular options installed in the DMM.

3.3.1.2 Each Auto Test/Auto-Cal routine is programmed to set the circuitry to a particular configuration and then take a reading. The reading is then compared to the applicable set of four limits stored in ROM. If the reading is within the Nominal Region a correction factor will be stored in memory and the next routine will be performed.

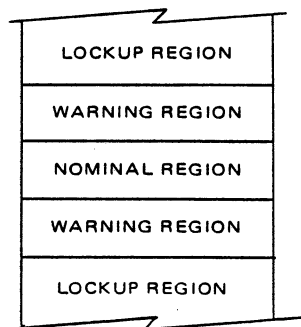

3.3.1.3 Readings which fall in one of the two Warning Regions will cause the DMM to momentarily display an error message before proceeding to the next routine. The temporary error message indicates that a larger than normal correction factor was required to bring the DMM readings within tolerance. The message is also an indication that the instrument should be scheduled for maintenance in the near future. Reference Table 3.7 for error messages.

3.3.1.4 Readings which fall in one of the Lockup Regions will cause the DMM to stop the Auto Test/Auto-Cal routines and display an error message. The error message and lockup condition indicate that the DMM should be scheduled for immediate maintenance because it cannot self correct to required tolerances. The lockup condition may be bypassed (for troubleshooting purposes) by pressing any key on the keyboard. Reference Table 3.7 for error messages.

3.3.1.5 If the Model 6000 is equipped with a GPIB (Option 55), any Auto Test/Auto-Cal related error message will cause an SRQ to be sent to the controller. A bit will also be set in the serial poll status byte (reference Figure 3.12). A lockup condition will also cause the GPIB to refuse

acceptance of program codes. The GPIB will, however, still be able to output the serial poll status byte.

3.3.1.6 DC CAL.

3.3.1.6.1 The standard DMM will perform seven DC Cal routines (DC Cal 1 through DC Cal 7). If a Preamplifier (Option 41) is installed, the instrument will also perform the DC Cal 8 routine.

3.3.1.7 OHMS CAL.

3.3.1.7.1 The Model 6000 will perform five Ohms Cal routines (Ohms Cal 1 through Ohms Cal 5) when the Ohms board (Option 24) is installed. If a Preamplifier (Option 41) is also installed, the instrument will also perform the Ohms Cal 6 routine.

3.3.2 Range Control.

3.3.2.1 Upon initialization the instrument goes to its home state; autorange, DC volts and the range is set to whatever the instrument sees at the input terminals. For example, if a 1.5 volt battery is connected to the input terminal and the instrument is initialized by power turn on, the instrument will turn on, go through Auto-Cal routines and initialize in the home state (autorange, DC volts, 1 volt range).

3.3.2.2 To change the range manually depress the up or down keyboard buttons once to take the instrument out of autorange. This extinguishes the auto annunciator and the instrument will now respond to depression of the up or down keyboard buttons changing the range one increment for each depression.

3.3.2.3 To illustrate the manual range control sequence short the input terminals and apply power to the instrument. Note that it initializes in autorange on the 100 millivolt range. The instrument initializes to the range appropriate for the voltage it sees at the input terminals but it does not autorange down to the 10 millivolt range. Depressing the UP key once will extinguish the AUTO annunciator and put the instrument in manual range control mode. The next depression of the up pushbutton switches the instrument to the 1 volt range and each successive depression causes the

instrument to progress to the 10, 100 and the 1000 volt DC range. The instrument can be manually down ranged by depression of the down pushbutton. Each successive depression will cause the instrument to progress to the 100, 10, 1 and the 100 millivolt range. If the Millivolt DC Option (41) is installed the instrument may be manually down-ranged to the 10 millivolt range provided the input is less than 22 millivolts. If the input signal is over the 10 millivolt range the instrument will automatically uprange to the 100 mV range.

3.3.2.4 The instrument will go into autorange as a result of only 4 possible operations: 1) power on initialization, 2) manual depression of the SHIFT AUTO keyboard push-buttons, 3) transmission of the autorange command by the controller in system operation and 4) a manual function change.

3.3.3 Autorange.

3.3.3.1 In the autorange mode except for the 10 millivolt DC and 1 ohm ranges, the instrument automatically changes its ranges as the measurement signal is increased above 160% of range. For example, when the instrument is on the DC 1 volt range in the autorange mode as the measurement voltage increases to approximately 1.6 volts the instrument will automatically switch to the 10 volt range. Conversely, as the voltage is decreased to approximately 0.9 volts the instrument will automatically downrange again to the 1 volt DC range. In the 10 millivolt and 1 ohm ranges the instrument automatically upranges at 220% of range. For best results, the DMM should be placed in manual ranging when switching inputs greater than 500 VDC.

3.3.4 DC Volts Measurement.

3.3.4.1 The Model 6000 basic instrument is capable of measuring DC volts in 5 ranges: 100 mV, 1V, 10V, 100V and 1000V. A 10 mV range is also available when the instrument is equipped with a Preamplifier (Option 41). To measure DC voltage proceed as follows:

1. Connect the instrument to the primary AC power source, turn the power switch on and allow it to initialize. Verify that the instrument initializes to the home state: DC volts function and AUTO range.
2. Set 2-wire/4-wire switch to 4-wire position if measuring voltages above 500V.
3. Connect the measurement voltage to the INPUT terminals and read the measurement value from the display and range annunciators.

3.3.5 AC Volts Measurement.

3.3.5.1 The Model 6000 instrument is capable of measuring AC RMS volts in 4 ranges: 1V, 10V, 100V and 1000V when equipped with either AC Option 10 (True RMS) or

Option 14 (Averaging) AC converters. To measure AC voltage proceed as follows:

1. Connect the instrument to the primary AC power source, turn the power switch on and allow it to initialize. Verify that the instrument initializes to the home state: DC volts function and AUTO range.
2. Set 2-wire/4-wire switch to 4-wire position if measuring voltages above 500V.
3. Select the AC volts function by pressing the AC key and verify that the AC annunciator lites.
4. Connect the measurement voltage to the INPUT terminals and read the measurement value from the display and range annunciators.

NOTE

If the True RMS Option is installed the instrument can measure AC, DC or a signal composed of a DC voltage containing an AC component. To measure a signal containing both AC and DC components "DC coupled AC" mode must be selected.

3.3.5.2 To select DC coupled AC mode press the DC and AC keys simultaneously and verify that both the DC and AC annunciators come on.

3.3.6 Resistance Measurement.

3.3.6.1 The basic Model 6000 instrument is capable of measuring resistance in 8 ranges: 10 Ω , 100 Ω , 1K Ω , 10K Ω , 100K Ω , 1M Ω , 10M Ω and 100M Ω . A ninth range (1 Ω) is available with the addition of Option 41.

3.3.6.2 OHMS GUARD

3.3.6.2.1 One of the features of the Model 6000 is the Ohms Guard which eliminates errors due to shunt leakage effects during high resistance measurements and allows certain in-circuit resistance measurements to be made with full accuracy. Use of the Ohms Guard during high resistance measurements is described in Paragraph 3.3.6.3. In-circuit resistance measurements are described in Paragraph 3.3.6.2.2.

3.3.6.2.2 Using the Ohms Guard during measurement of resistor networks eliminates the need to disassemble the network to determine individual resistor values. On the 6000, the low ANALOG OUTPUT terminal (COM) on the rear panel serves as the Ohms Guard when OHMS is selected. A typical in-circuit resistance measurement is shown in Figure 3.3A where the desired value R_X is shunted by R_1 and R_2 . Connecting the Ohms Guard to the junction of R_1 and R_2 effectively removes them from the measurement circuit, as shown in Figure 3.3B. Since neither R_1 or R_2 are in the Ohms Amplifier feedback loop, they will not seriously affect the accuracy of the measure-

ment. R_1 and R_2 may have any value above the minimum values listed below:

$$R_1 \text{ minimum value} = 20\% \text{ of Range F.S.} \\ (5000\Omega \text{ min.})$$

$$R_2 \text{ minimum value} = 5000\Omega$$

R_1 's minimum value is limited by error produced by the ohms amplifier's offset voltage. R_2 's minimum value is limited by the maximum output current available from the ohms amplifier.

3.3.6.3 To measure resistance proceed as follows:

1. Connect the instrument to the primary AC power source, turn the power switch on and allow it to initialize. Verify that the instrument initializes to the home state: DC volts function and AUTO range.
2. Select the resistance function by pressing the Ω push-button and verify that one of the Ω annunciators (Ω , $K\Omega$ or $M\Omega$) lites.

3. TWO-WIRE MEASUREMENTS.

a. Connections for a simple two-wire shielded ohms measurement are shown in Figure 3.4. It consists simply of a single-conductor shielded cable with the conductor serving as both the + Ω SOURCE and + INPUT leads and the shield carrying - Ω SOURCE and - INPUT. If front panel terminals are used, connections between + INPUT and + Ω SOURCE, and - INPUT and - Ω SOURCE can be made by setting the 2-WIRE/4-WIRE Switch to the 2-WIRE position. While reasonably accurate measurements can be made with this method, shunt leakage problems result from the parallel combinations of R_x and the cable impedance. This causes loss of accuracy, especially at high resistance (100 $M\Omega$ range). Also, lead resistance becomes a factor in the 1, 10 and 100 ohms ranges; the four wire measurement system is recommended for these ranges.

b. A more accurate two-wire measurement connection is shown in Figure 3.4b. The + INPUT and + Ω SOURCE, - INPUT and - Ω SOURCE terminals are again tied together. But now, the positive side is a single-conductor, shielded cable with the shield tied to Ohms Guard. Ohms Guard is the low ANALOG OUTPUT terminal on the rear panel of the Model 6000 when ohms is selected. The negative side is a single wire connected as shown. Guard current is present in the low side, but the leakage problems of the first configuration are eliminated.

c. In high noise-level environments, the configuration shown in Figure 3.4c is recommended. This method

also eliminates error due to shunt leakage, but provides more complete shielding. The positive terminals are tied together and carried in a single-conductor, double-shielded cable with the inner shield tied to Ohms Guard (- ANALOG OUTPUT). The outer shield is tied to GUARD. The negative terminals are tied together and carried in a single-conductor shielded cable with the shield tied to GUARD. This configuration eliminates guard current sensitivity, thereby increasing guarding characteristics.

4. FOUR-WIRE MEASUREMENTS.

a. In most system applications, the device to be measured is located at a remote location requiring interconnection by cables of lengths from several to possibly hundreds of feet. When measuring low resistance values over long cables, most lead resistance problems can be solved by the use of a four-wire measurement system. If front panel terminals are used, set the 2-WIRE/4-WIRE Switch to 4-WIRE position.


b. For high resistance measurements over long cables, other problems are encountered: noise pick-up, leakage resistance, and capacitive loading of the system. These problems can be minimized by proper shielding and the use of ohms guard.

c. Figure 3.5a shows a basic shielded four-wire ohms measurement configuration. This method uses two single-conductor shielded teflon cables. The conductors carry the positive sides of the INPUT and CURRENT lines while each shield carries the low side.


d. This configuration, although shielded, places the shield capacitance and cable leakage in parallel with R_x . This results in loss of accuracy and slow measurements. In addition, it is very responsive to the triboelectric effect at high resistance measurements.

e. Better guarding is achieved by the use of the configuration shown in Figure 3.5b. Here again, RG196U teflon dielectric cable (either single-conductor shielded or two-conductor shielded) is used on the positive terminals. The shield(s) are connected to Ohms Guard (low ANALOG OUTPUT terminal). The negative leads are single wires with the - INPUT terminal tied to GUARD.

f. This eliminates much of the shunt leakage problem of the previous configuration since guard current now flows through the low side of the measurement circuit. Measurement is much faster since the shield capacity is driven by the guard current.

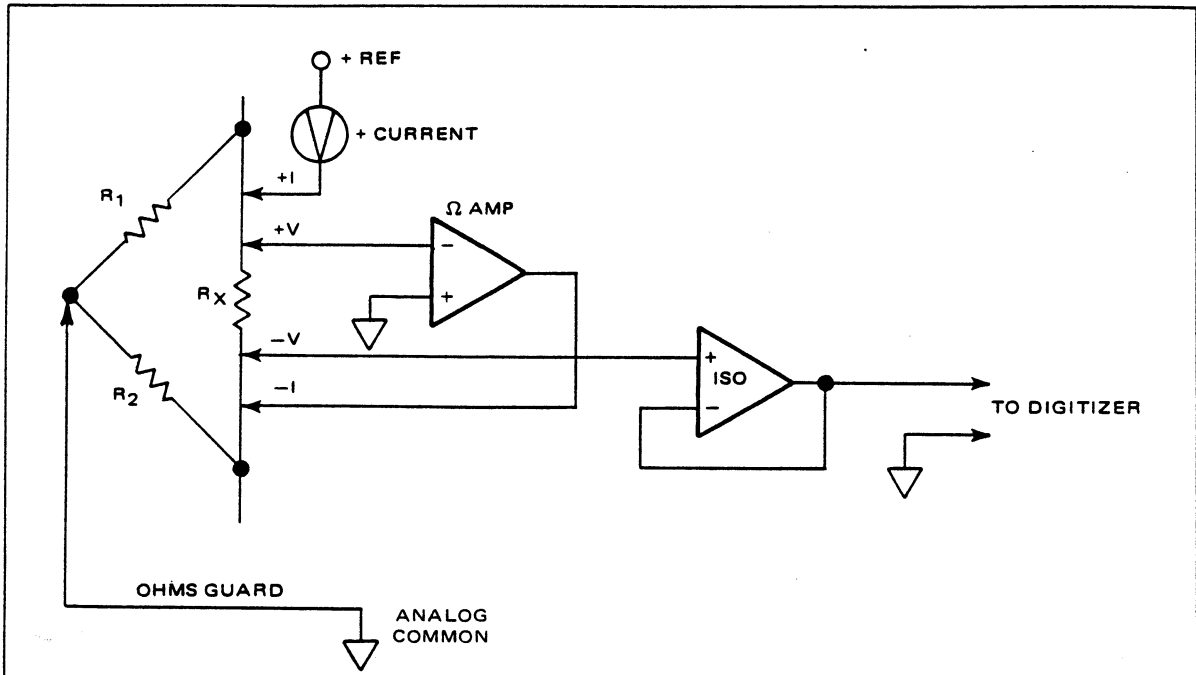


A - Complete Circuit

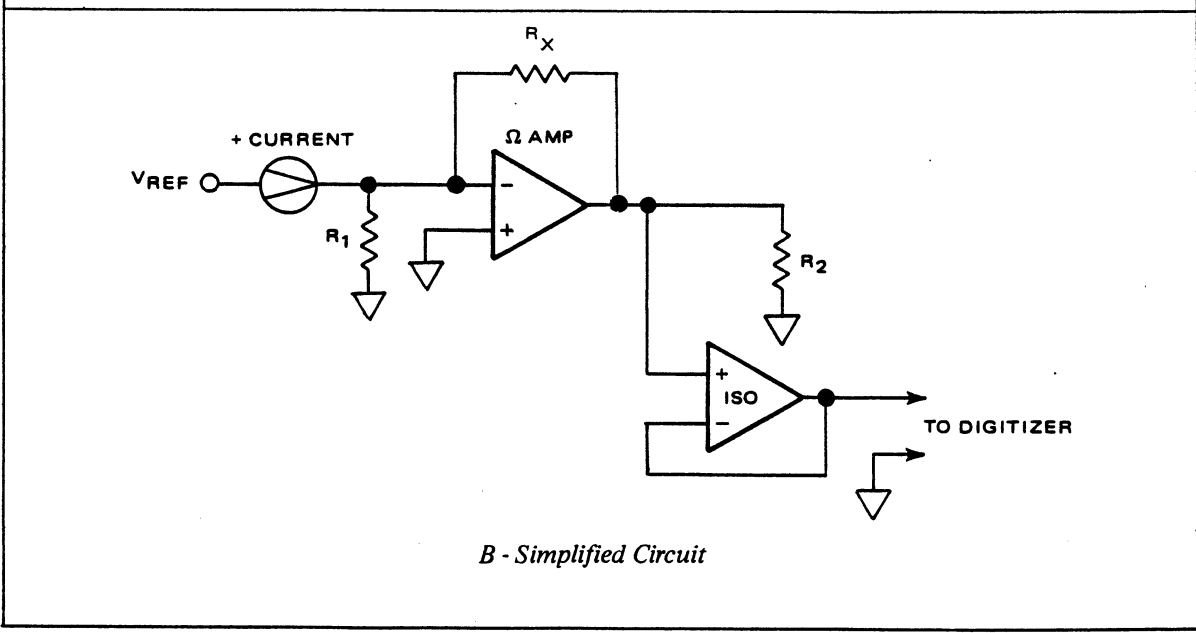

B - Simplified Circuit

Figure 3.3 - In-Circuit Resistance Measurement

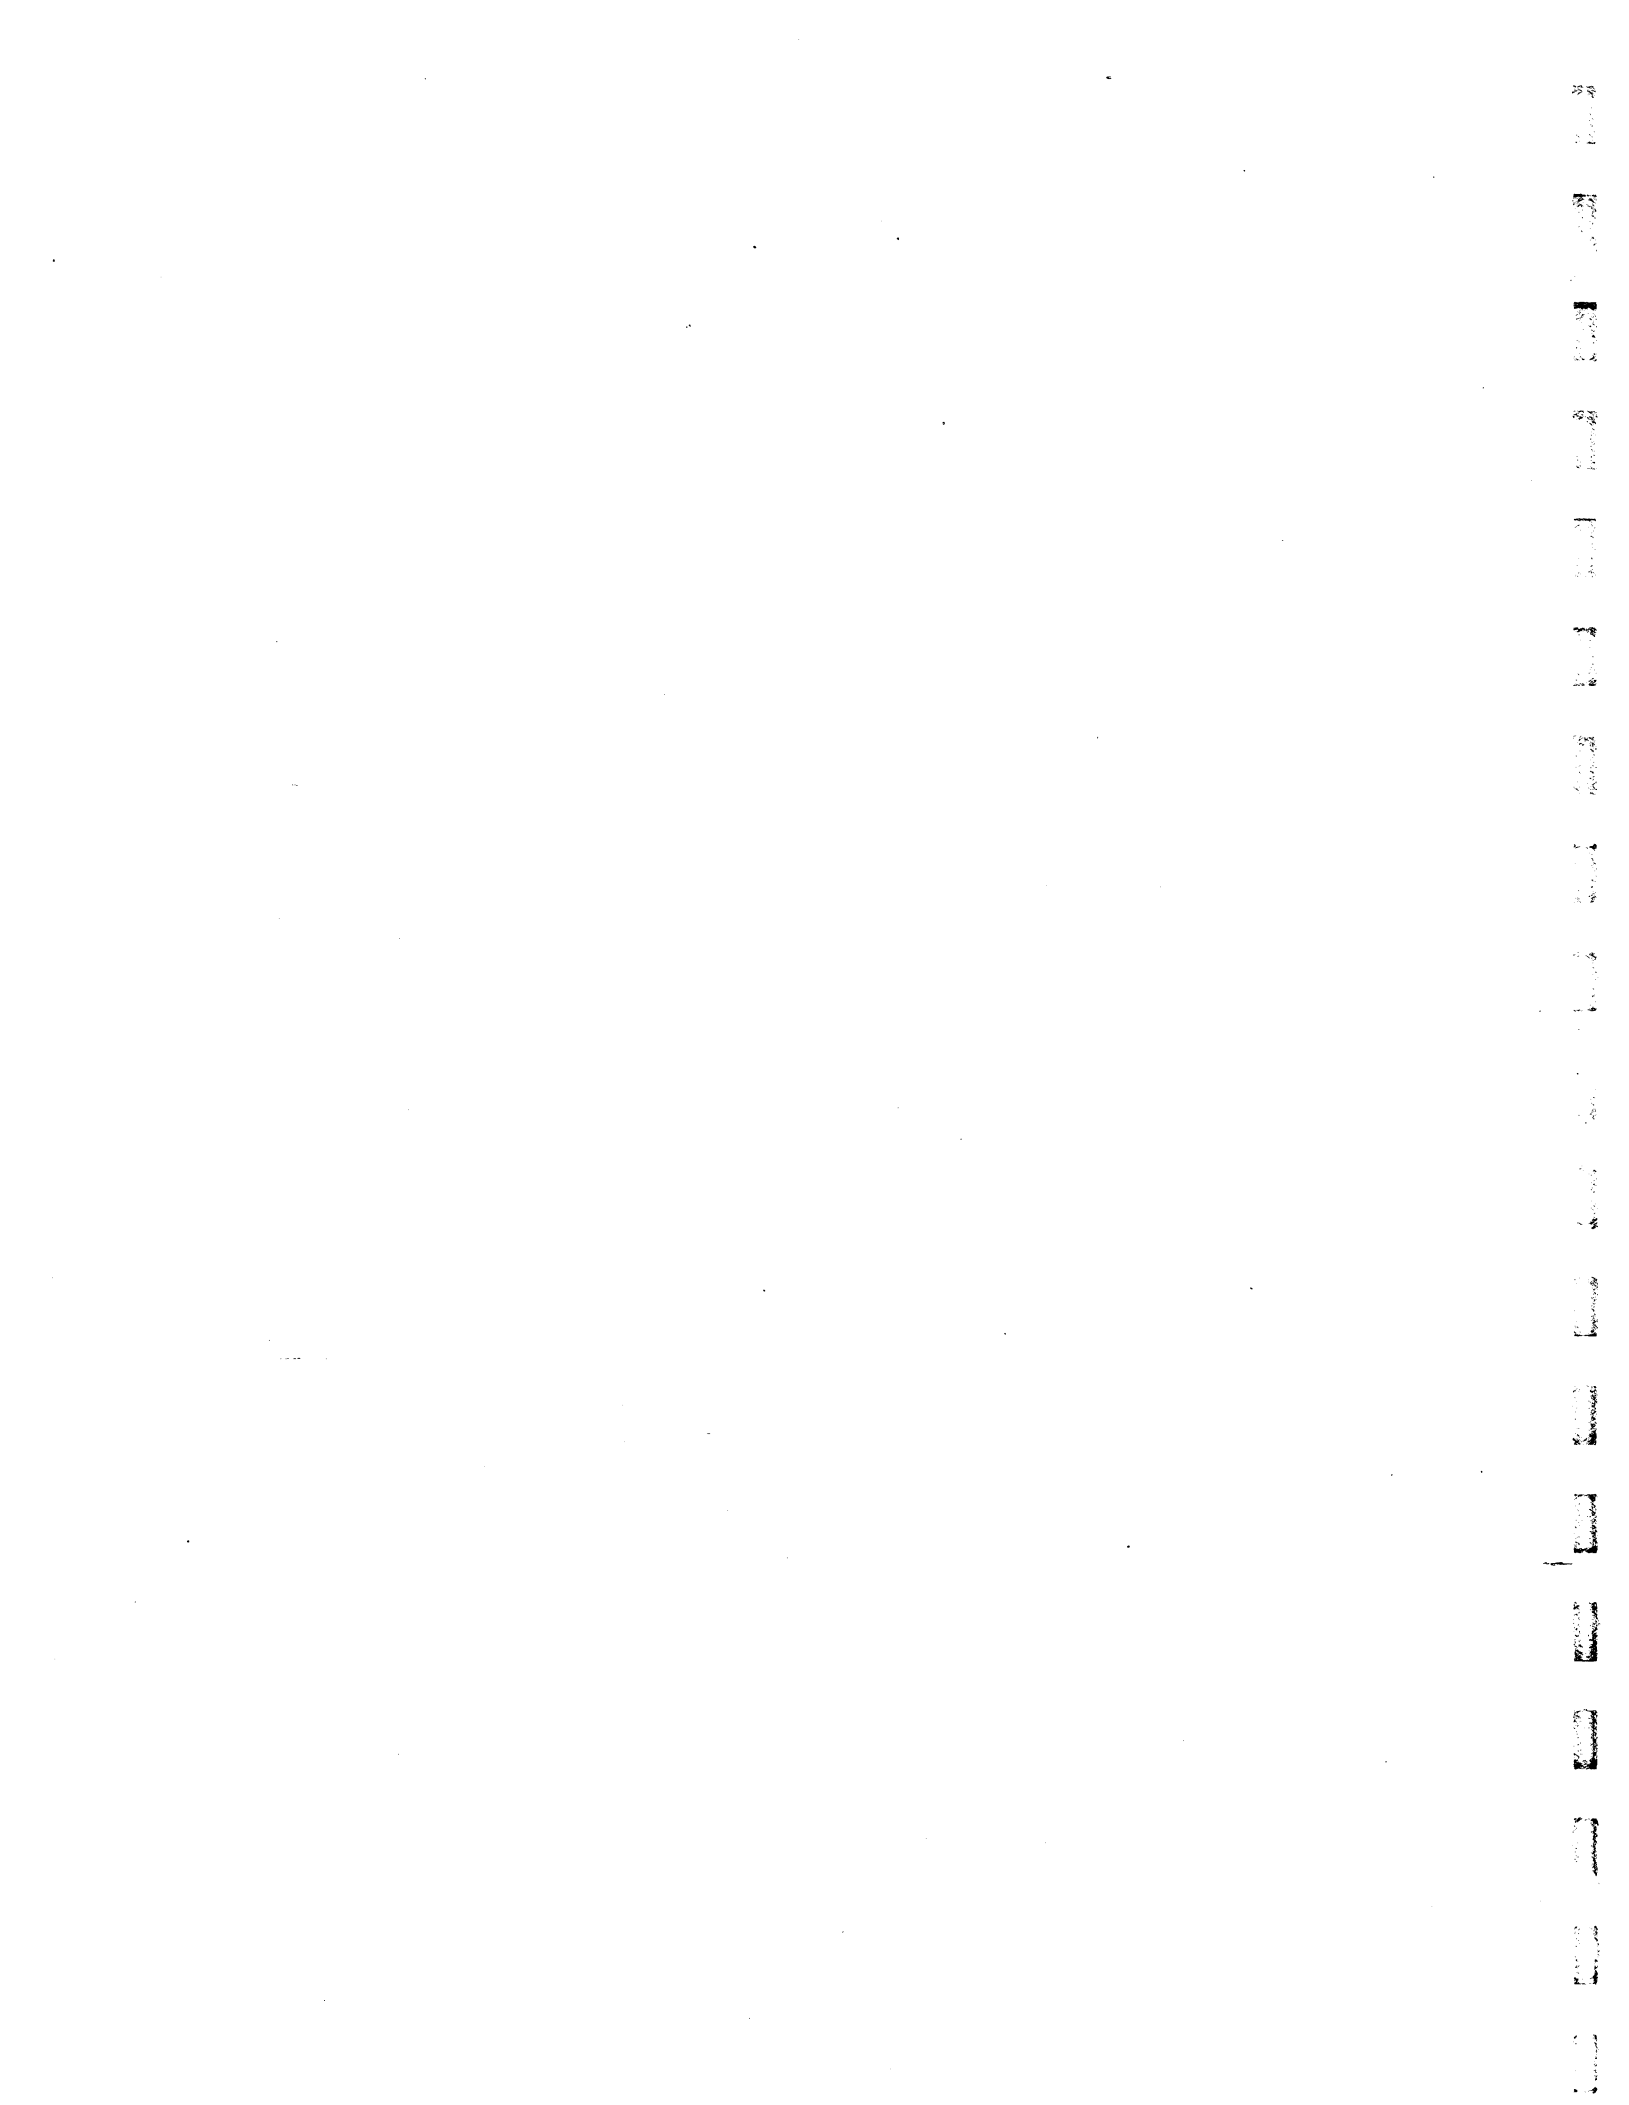

g. A high-noise environment calls for the "super" configuration shown in Figure 3.5c. Here, a two-conductor, double-shielded cable is used as the positive leads. The inner shield is tied to Ohms Guard. A two-conductor shielded cable is used as

the negative leads. Its shield is tied to GUARD and to the outer shield of the positive cable. The shield is also tied to $-\Omega$ SOURCE at the measurement point. This configuration maintains high guarding characteristics while eliminating guard current sensitivity.

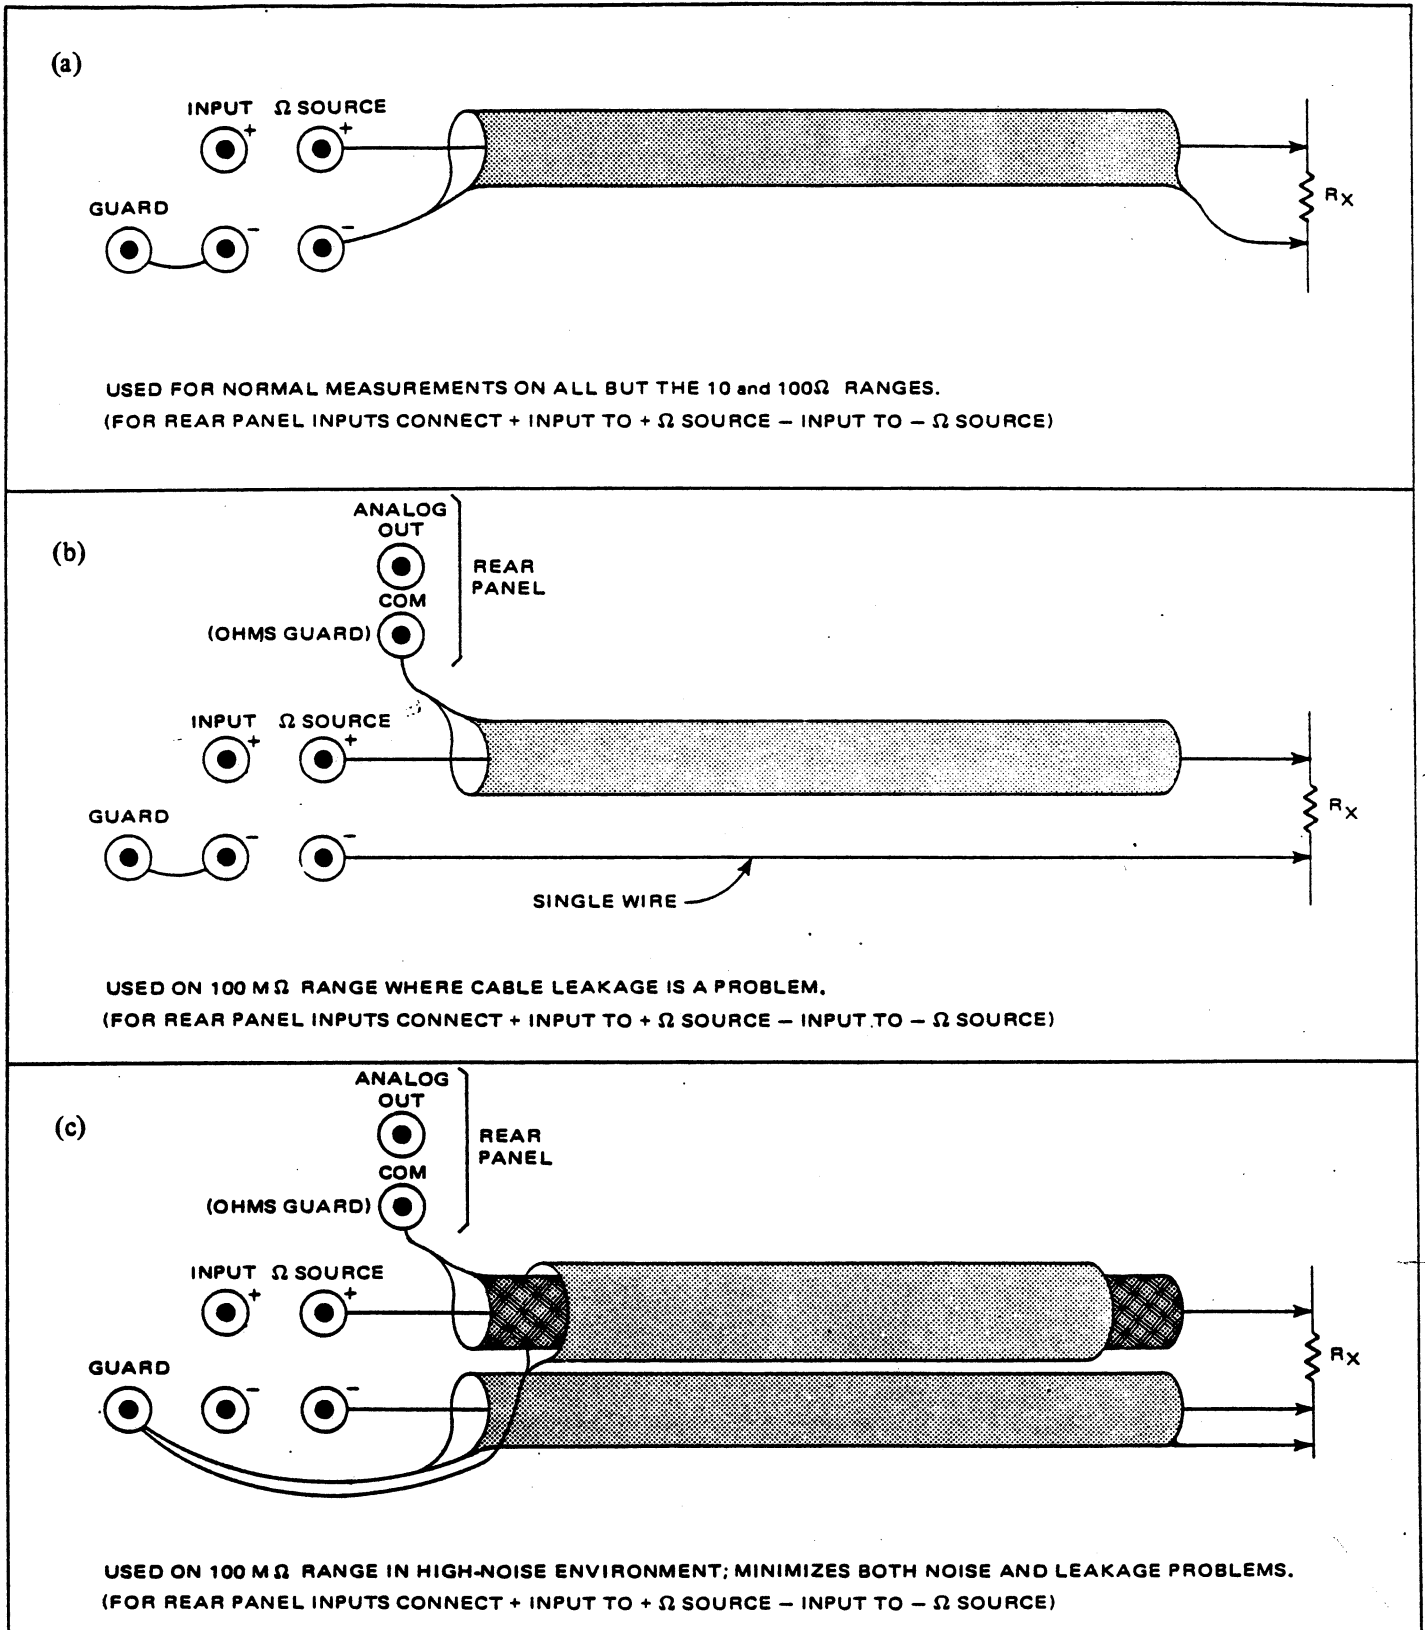


Figure 3.4 - Two Wire Ohms Measurements

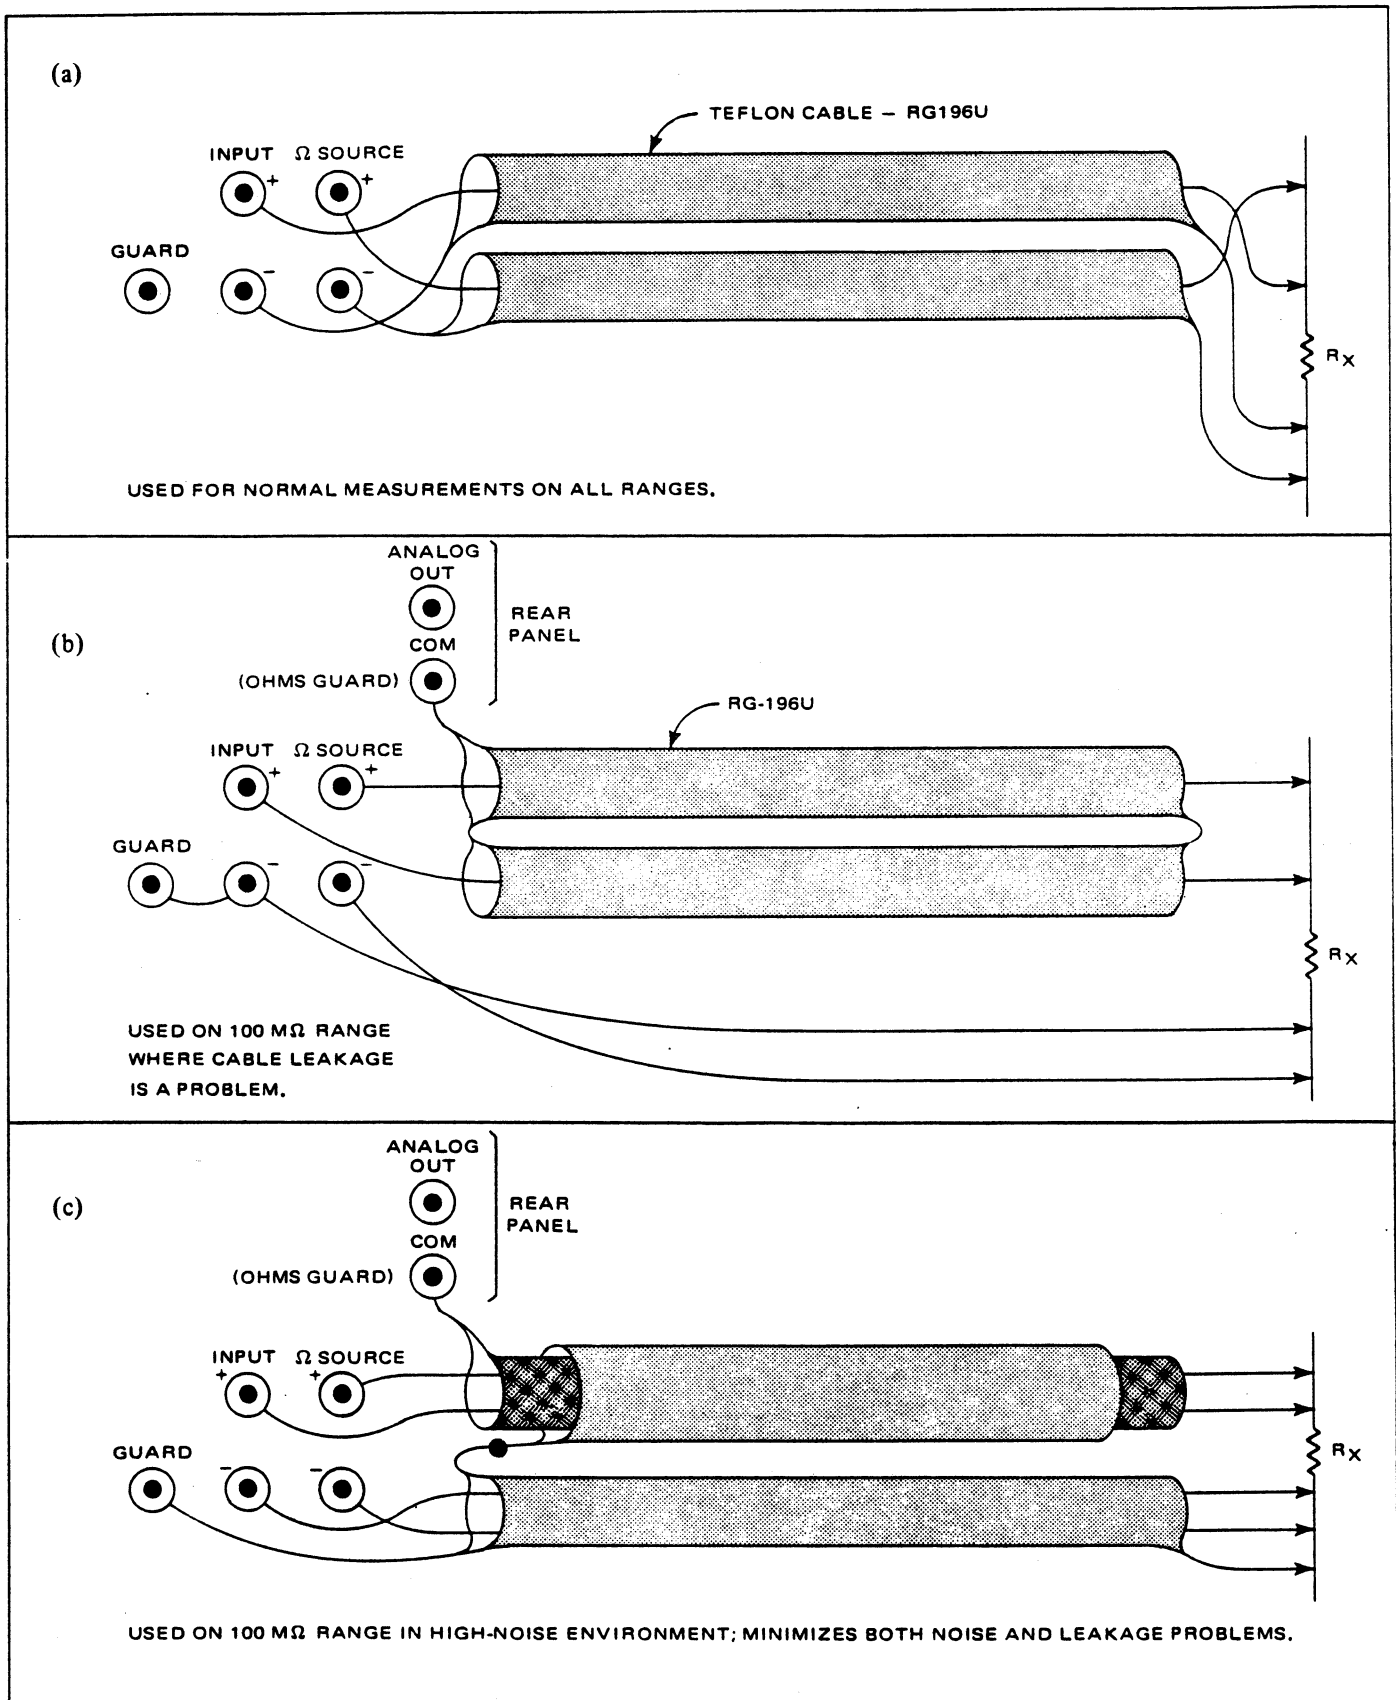


Figure 3.5 - Four Wire Ohms Measurement

5. If measuring on 1Ω range, disconnect the +I (+ current) lead at the Voltmeter terminal. Wait until the display value is stable within ± 5 digits and press NULL key. Reconnect the +I lead and read the value from the display. Extreme care must be exercised to avoid generating thermal voltages between connection points. Use cables with Kelvin clips, or other low thermal terminations at resistor connection points.
6. Read the measurement value from the display and range annunciators.

3.3.7 High-Low-Limit Operation.

3.3.7.1 The high-low-limit (HLL) function provides two basic modes of operation. The first mode is the one or two limit, two or three category mode which compares the measurement with preprogrammed limits entered by the operator. The second HLL mode is the three to five limit, four to seven category mode. In this mode the operator enters between three and five limits and the instrument will then compare the input measurement with these limits and categorize the input into four to seven categories.

3.3.7.2 SINGLE OR DUAL LIMIT.

3.3.7.2.1 This is the simplest mode of HLL operation. In this mode the operator enters an upper and lower limit into memory and selects HLL operation mode. The instrument then compares each measurement to the lower and upper limit and presents the message Lo, Pass or Hi on the front panel display.

3.3.7.2.2 For example, if the operator wanted to verify that a voltage falls between 4 and 5 volts DC, he simply enters 4 as the lower limit (HLL-1) and 5 as the upper limit (HLL-2); once the HLL mode is selected any measurement falling below 4 volts will cause the display to present the message Lo, any measurement voltage between 4 and 5 volts will cause the display to present the message PASS, while any measurement voltage above 5 volts causes the display to present the message HI as shown in Figure 3.6.

3.3.7.2.3 If it is desired to set only one boundary limit, the instrument will present only two messages. For example, to determine whether a measurement is higher than a predetermined minimum the limit is entered in limit location 1 and for measurements falling under the limit the instrument will display the message Lo. For a measurement above the limit the instrument will display the PASS message. Similarly if the single limit is entered in location 2 the instrument will display the PASS or HI messages.

3.3.7.2.4 At this time it should be pointed out that the HLL mode is useable with AC volts, DC volts, resistance and ratio measurements. Further, the operator may set the parameters for limits as tightly or as broadly as desired. The

| MEASUREMENT VALUE | HLL DISPLAY | | | | |
|-------------------|-------------|---|---|---|-----|
| <4V | L | o | . | . | |
| 4-5V | P | A | S | S | |
| >5V | | | . | . | H I |

Figure 3.6 - LO-PASS-HI Displays

pass category may be set so that the lower limit and upper limit are only a few microvolts apart. On the other hand, the lower and upper limits may be set hundreds of volts apart, depending on the requirements of the measurement application.

3.3.7.2.5 The measurement value or ratio value (defined as X) may be part of the mathematical function (X-Null) - (A x B ÷ C). In this case, the scaled values of X will be tested against the HLL limits.

3.3.7.2.6 When using the HLL function with single or dual limits remember the following:

SHIFT, CLR, HLL

1. The key sequence should be executed prior to storing limits. This procedure sets all limits to their power-on values and enables the Lo-PASS-HI display mode.
2. If the Lo-PASS-HI display mode is desired, HLL-1 and HLL-2 should be used for storage of limits. Do NOT store limits using HLL-3 to 6, otherwise the 7-bin sort display will appear.

3.3.7.3 SEVEN BIN SORT OPERATION.

3.3.7.3.1 The multiple category HLL operation is selected automatically whenever the operator enters more than 2 limit parameters. In the multiple category HLL mode the instrument can present up to 7 display messages as shown below.

| LIMIT MEMORY LOCATIONS | 5 | 3 | 1 | 2 | 4 | 6 | |
|------------------------|------|-----|-----|-----|-----|-----|------|
| DISPLAY CATEGORIES | Lo.. | c.. | b.. | .A. | ..b | ..c | ..HI |
| LIMITS (VOLTS OR OHMS) | 2 | 3 | 4 | 5 | 6 | 7 | |

| MEASUREMENT VALUE | HLL DISPLAY | | | | |
|-------------------|-------------|---|---|---|---|
| <2V | L | O | . | . | |
| 2-3V | C | | . | . | |
| 3-4V | | b | . | . | |
| 4-5V | | | A | . | . |
| 5-6V | | | . | b | . |
| 6-7V | | | . | . | C |
| >7V | | | . | H | I |

Figure 3.7 - Seven Bin Sort Display Examples

3.3.7.3.2 To illustrate the application of this measurement sorting function, referred to as HLL, assume that it is desired to fit measurements into the seven categories shown by the limits in Figure 3.6. The limits could be applicable to AC or DC voltages or to resistance values in ohms. For the sake of discussion assume that the limits shown in the illustration represent DC voltage limits. Note that the "A" category falls between the 4 and the 5 volts. This is common TTL logic voltage. Note also that the other six categories fall between 1 volt steps. Note also that the voltage limits selected increase in voltage from left to right. It is absolutely essential that limits be entered into limit locations in ascending values with the more negative or lower value on the left and the more positive or higher value on the right.

3.3.7.3.3 To make the limit locations easier for an operator to memorize the storage locations have been numbered as shown; the centered limit A is bracketed by limit locations 1 and 2. The neighboring lower and higher limit locations are bracketed on the left by the odd numbers 3 and 5 and on the right by the even numbers 4 and 6. In the example shown all voltages are entered as positive voltages between 2 and 7 volts. Note that the center voltage category "A" is between 4 and 5 volts while the next lower category is between 3 and 4 volts. With limits entered into locations as shown the instrument will display the message LO for any voltage less than 2 volts and the message HI for voltage higher than 7 volts. Measurement voltages falling

between 2 and 6 volts will be displayed as upper case A, lower case b or c. Figure 3.7 illustrates the display presented for the measurement inputs shown. Note that there are two lower case b categories and two lower case c categories. These may be distinguished from one another by their location on the display relative to the two flashing decimals adjacent to the category A display location.

3.3.7.3.4 Table 3.4 presents a step-by-step operating sequence demonstrating operation of the Series 6000 DMM in the HLL mode.

3.3.8 Minimum-Average-Maximum.

3.3.8.1 The Series 6000 DMM provides a minimum-average-maximum (MAM) measurement capability. When used in this mode the instrument performs the following operations: a) stores the least positive (or most negative) value measured during the MAM operating cycle, b) stores the value of the most positive (or least negative) measurement made during the MAM cycle, c) calculates the average value of all measurements taken during the MAM cycle, d) counts the number of total measurements made during the MAM measurement cycle.

3.3.8.2 To accomplish this function, the instrument makes the first measurement and stores it. It then compares each successive reading with the previous measurement to determine whether the present reading is higher or lower than the previous reading. If the second reading is lower than the first, the instrument will store the present reading in the Min memory location. The instrument will also perform an arithmetic average on the two readings and store the result in the Avg memory location. The machine then makes a new measurement, performs the comparison again and, if the new measurement is higher or lower than a previous reading it is stored in the Min or Max memory location. The instrument uses a fourth memory location to store the count of the number of measurements made during the MAM measurement cycle.

3.3.8.3 In a typical application, the instrument may be connected to another device or system and used to monitor a power supply voltage or the AC line voltage over a period of time. The operator can leave the instrument unattended and return at a later time and recall the minimum voltage level the average of all measurements made, the maximum voltage level and the total number of measurements made. Table 3.5 presents a step-by-step operating procedure for using the 6000 in the MAM mode.

NOTE

The MAM function will update the minimum and maximum readings indefinitely, but will not update the average or the number of measurements readings beyond the first 10,000 samples.

Table 3.4 - Example of HLL Operating Procedure

| Step | Equipment Connection | Control or Key | Display and Annunciators | Function or Interpretation |
|------|-----------------------------------|--------------------------------------|--|---|
| 1 | AC Power | | | |
| 2 | | POWER <input type="checkbox"/> ON | Initialization Sequence - See Table 3.1, Reference 38 | |
| 3 | 4.5 VDC to Input | | 4.5XXX DC 10 AUTO | Display indicates input voltage |
| 4 | | <input type="checkbox"/> 4 | 4. | Enters 4 volt limit |
| 5 | | <input type="checkbox"/> STORE | 4. DC 10 AUTO SFT | Instructs instrument to store value on display when location entered |
| 6 | | HLL <input type="checkbox"/> | HL DC 10 AUTO | Selects HLL limit storage area for storage |
| 7 | | <input type="checkbox"/> 1 | 4.5XXX DC 10 AUTO | Selects HLL storage location 1, stores value entered (4) and returns to DC, 10, AUTO |
| 8 | | <input type="checkbox"/> 5 | Display and annunciator sequence similar to steps 4 thru 7 except for values and storage locations | This Key entry sequence stores the limit value 5 in HLL location 2 as described in steps 4 thru 7 |
| 9 | <input type="checkbox"/> STORE | | | |
| 10 | HLL <input type="checkbox"/> | | | |
| 11 | <input type="checkbox"/> 2 | | | |
| 12 | | <input type="checkbox"/> 3 | Stores value 3 in HLL limit location 3 | |
| 13 | <input type="checkbox"/> STORE | | | |
| 14 | HLL <input type="checkbox"/> | | | |
| 15 | <input type="checkbox"/> 3 | | | |

Table 3.4 - Example of HLL Operating Procedure continued














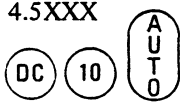
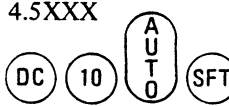
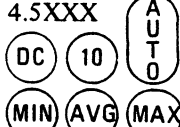
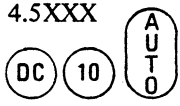
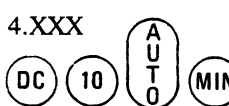
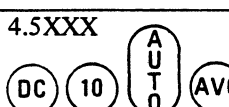
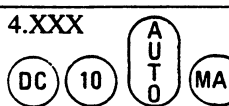
| Step | Equipment Connection | Control or Key | Display and Annunciators | Function or Interpretation |
|------|--|-----------------------------------|--|------------------------------------|
| 16 | | <input type="checkbox"/> 6 | | Stores value 6 in limit location 4 |
| 17 | | <input type="checkbox"/> STORE | | |
| 18 | | HLL <input type="checkbox"/> | | |
| 19 | | <input type="checkbox"/> 4 | | |
| 20 | | <input type="checkbox"/> 2 | | Stores value 2 in limit location 5 |
| 21 | | <input type="checkbox"/> STORE | | |
| 22 | | <input type="checkbox"/> HLL | | |
| 23 | | <input type="checkbox"/> 5 | | |
| 24 | | <input type="checkbox"/> 7 | | Stores value 7 in limit location 6 |
| 25 | | <input type="checkbox"/> STORE | | |
| 26 | | <input type="checkbox"/> HLL | | |
| 27 | | <input type="checkbox"/> 6 | | |
| 28 | | SHIFT <input type="checkbox"/> | 4.5 XXX     | Selects upper case key functions |
| 29 | | HLL <input type="checkbox"/> | .A.     | Selects HLL function |
| 30 | The instrument is now ready to perform the HLL function. If the input voltage is varied the instrument will present display messages from Lo to HI as described in previous paragraphs. | | | |
| 31 | The function may be exited by again pressing   . The constants will remain in memory until they are cleared or changed. | | | |
| 32 | The constants may be cleared by pressing    . | | | |

Table 3.5 - Example of MIN-AVG-MAX Operating Procedure

| Step | Equipment Connection | Control or Key | Display and Annunciators | Function or Interpretation |
|------|---|--|---|--|
| 1 | AC Power | | | |
| 2 | | POWER <input type="checkbox"/> ON | Initialization sequence - see Table 3.1, Reference 38 | |
| 3 | 4.5 VDC to INPUT | | 4.5XXX  | Display indicates input voltage |
| 4 | | SHIFT <input type="checkbox"/> | 4.5XXX  | Selects upper case keyboard functions |
| 5 | | MAM <input type="checkbox"/> | 4.5XXX  | Selects the Min-Avg-Max function |
| 6 | Allow the instrument to measure the input voltage for approximately one minute while varying the input voltage between approximately 4 and 5 VDC. | | | |
| 7 | | SHIFT <input type="checkbox"/> | 4.5XXX  | Selects upper case keyboard functions |
| 8 | | MAM <input type="checkbox"/> | | Toggles the instrument out of MAM function |
| 9 | | <input type="checkbox"/> RECALL MAM <input type="checkbox"/> | 4.XXX  | Display indicates lowest measurement value recorded during MIN-AVG-MAX function |
| 10 | | <input type="checkbox"/> RECALL MAM <input type="checkbox"/> | 4.5XXX  | Display indicates average measurement value of all measurements recorded during MIN-AVG-MAX function |
| 11 | | <input type="checkbox"/> RECALL MAM <input type="checkbox"/> | 4.XXX  | Display indicates maximum measurement value recorded during MIN-AVG-MAX function |
| 12 | | <input type="checkbox"/> RECALL MAM <input type="checkbox"/> | XXX n | Display indicates number of measurements made during MIN-AVG-MAX cycle |
| 13 | <p style="text-align: center;">SHIFT CLR MAM</p> <p>The MAM measurement values may be cleared by pressing <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> . The MAM function may be reentered without first clearing the measurement values. In this case, the present MAM values will be updated by the new readings.</p> | | | |
| 14 | <p>The MAM measurement values may be recalled, without leaving the function, by performing steps 9 thru 12. The MAM function will stop during the recall period, but it may be started again by pressing <input type="checkbox"/> .</p> <p style="text-align: center;">CE</p> | | | |

3.3.9 Tri-Function Ratio.™

3.3.9.1 The Series 6000 can operate in three different ratio modes: Math Ratio, Automatic Software Ratio and Hardware Ratio (Option 34).

3.3.9.2 MATH RATIO.

3.3.9.3 The Math Ratio is provided as a part of the standard Series 6000, and fits the following formula:

$$R = \frac{X}{C} \quad \text{Where: } X = \text{the measured input}$$

$$C = \text{the stored constant}$$

$$R = \text{the displayed ratio}$$

An example of the Math Ratio key sequence is shown below.

| | |
|--|---|
| SHIFT CLR [(X-A) B/C] | |
| <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> | Clears constants A, B and C. |
| <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> | Stores constant "6" in memory location C. |
| SHIFT [(X-A) B/C] | |
| <input type="checkbox"/> <input type="checkbox"/> | Display reading will now equal the measured input divided by 6. |

3.3.9.4 SOFTWARE RATIO.

3.3.9.5 The Software Ratio is also a part of the standard DMM. The input signal and the reference signal are connected to the DMM input terminals (one signal to the front and one to the rear). Ratio mode is entered by selecting SHIFT AC (for AC reference signal) or SHIFT DC (for DC reference signal). The instrument will alternately measure the front and rear inputs and perform a ratio calculation. The relationship of the inputs in the ratio calculation is dependent upon the status of the (RI) (rear input) annunciator. The table shown below illustrates the signal relationships for the on-off conditions of the (RI) annunciator.

| (RI) Annunciator Condition | Front Input Terminals | Rear Input Terminals | Ratio Displayed |
|----------------------------|-----------------------|----------------------|--|
| Off | Measurement Signal | Reference Signal | Ratio = $\frac{\text{Front}}{\text{Rear}}$ |
| On | Reference Signal | Measurement Signal | Ratio = $\frac{\text{Rear}}{\text{Front}}$ |

An example of the software ratio procedure is shown in Table 3.6.


Table 3.6 - Example of Software Ratio Operation

| Step | Equipment Connection | Control or Key | Display and Annunciators | Function or Interpretation |
|------|---------------------------------|--|---|---|
| 1 | AC Power | | | |
| 2 | | POWER <input type="checkbox"/> ON | Initialization Sequence - See Table 3.1, Reference 38 | |
| 3 | 28V DC to Front INPUT Terminals | | 28.XXX DC 100 AUTO | |
| 4 | 7 VDC to Rear INPUT Terminals | | 28.XXX DC 100 AUTO | |
| 5 | | SHIFT <input type="checkbox"/> DC <input type="checkbox"/> | 4 DC 100 AUTO | Display = Front Input/Rear Input |
| 6 | | SHIFT <input type="checkbox"/> F/R <input type="checkbox"/> | .25 DC 100 AUTO RI | Note: Each depression of SHIFT F/R causes the (RI) annunciator to go on and off. Press F/R so that (RI) is ON thereby selecting rear input. |
| 7 | | SHIFT <input type="checkbox"/> F/R <input type="checkbox"/> | 4 DC 100 AUTO | Select Front Input ((RI) off). |

3.3.9.6 The reference range is selectable and can be set between 1V and 1000V when the AC reference function is selected, or between .1V and 1000V when the DC reference function is selected. The reference range is selected by

pressing the SHIFT UP or SHIFT DOWN keyboard buttons. While the button is held depressed, the LED range annunciators indicate the presently selected reference range.

Formula for V-dB

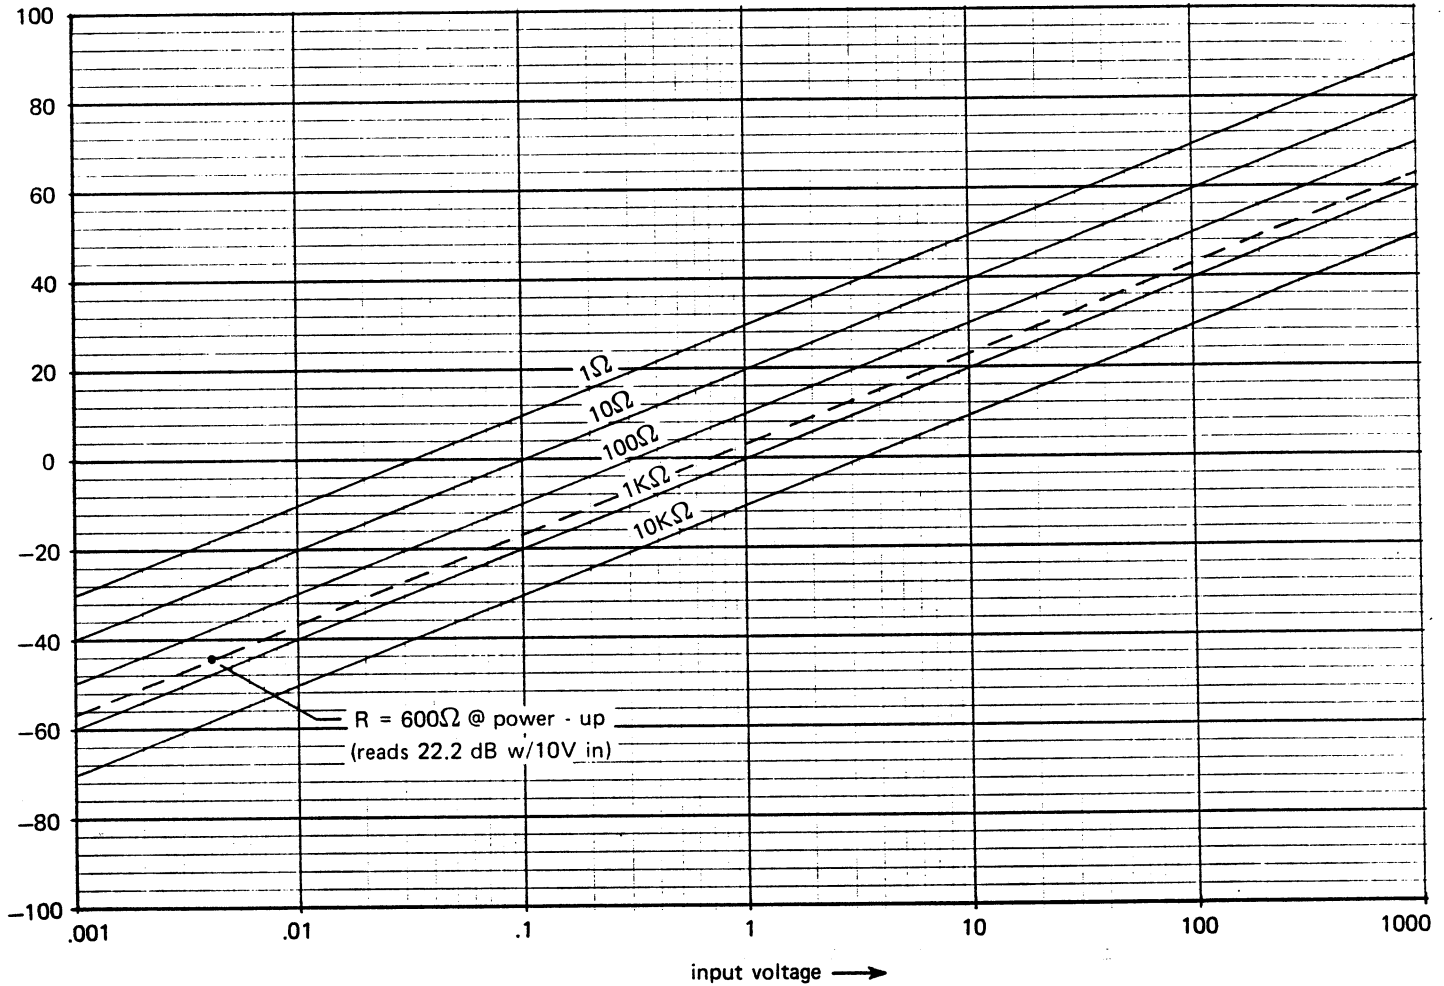

| Internal Reference | External Reference |
|---|--|
| $\text{display} = 10 \log \left[\frac{\text{input power in mW}}{1 \text{ mW}} \right]$ | $\text{display} = 20 \log \frac{V_1}{V_2}$ |
| | $V_1 = \text{signal}$ |
| | $V_2 = \text{reference voltage}$ |

Figure 3.8 - dB vs Voltage

3.3.9.6 HARDWARE RATIO (OPTIONS 34 AND 11).

3.3.9.7 The Model 6000 is capable of performing hardware ratio measurements when equipped with Option 34 and/or Option 11. Option 34 provides for four-wire DC/DC, AC/DC and Ohms/DC ratios. Option 11 provides four ranges of AC reference input for AC/AC, AC/DC and Ohms/AC ratios. Due to hardware constraints, the 6000 will uprange or display "OL" whenever the signal becomes approximately ± 1.6 times the reference voltage.

3.3.10 Decibel (dB) Operation.

3.3.10.1 The 6000 DMM uses internal software to compute the value displayed when making dB measurements. The equation used for the dBm is: $\text{dBm} = 10 \text{ Log } (P1/.001)$ where $P1 = (\text{Voltage})^2/\text{Rref}$. The 6000 initializes with the reference resistor (Rref) set to the value of 600 ohms.

3.3.10.2 To perform dB measurements put the instrument into the dB mode by pressing the SHIFT and dB keys. Depress the F/R key as required to select the front input. Note that the display indicates dB. Apply the unknown voltage to the front panel input terminals and read the value in dB from the front panel display.

3.3.10.3 The simplest dB measurement is made by applying a signal to the front panel input terminals and displaying the voltage in terms of dB referenced to 1 millivolt expended in the standard 600 ohm resistor. Refer to Figure 3.8 (a graphic log chart of voltage vs dB). Note that the 600 ohm power value line (shown as a dotted line and marked "600 OHM POWER UP") crosses through the junction point of the 10 volt input voltage and 22 dB point on the chart. Thus the note, "reads 22.2 dB with 10 volts input".

3.3.10.4 The reference resistor value may also be programmed to values other than 600 ohms. This allows the Model 6000 to directly display dB measurements for other input impedances (eg: 50Ω , 300Ω , $1K\Omega$, $1M\Omega$). If, for example, measurements in dBV are to be made ($0\text{dBV} = 1 \text{ volt into } 1K\Omega$), then the reference resistor value may be set to $1K\Omega$. The table shown below illustrates the key sequence and the resultant display for this example (assume a 10 volt input).

| Step | Key | Display |
|------|--|----------------|
| 1 | <input type="checkbox"/> 1 <input type="checkbox"/> 0 <input type="checkbox"/> 0 <input type="checkbox"/> 0 | 1000. |
| 2 | <input type="checkbox"/> STORE | 1000. (SFT) |
| 3 | dB <input type="checkbox"/> | 20.0 dB |

3.3.10.5 The instrument may be used to make ratio measurements and present results in terms of decibels. For example, to measure the gain of an amplifier, connect the amplifier's input voltage to the rear panel input terminals of the Model 6000 DVM. Connect the amplifier output to the front panel input terminals of the instrument. Put the instrument in the ratio mode by pressing SHIFT and DC keys on the keyboard. The instrument will now display the ratio between the front and rear inputs in terms of decibels. If the output of the amplifier is less than the input of the amplifier the value displayed on the front panel of the Model 6000 will be preceded with the minus sign indicating a gain loss. Refer to the External Reference formula in Figure 3.8.

3.3.10.6 It should be noted that the dB function can be used in combination with other measurement functions such as the ratio measurement described above. Further the value of Rref does not affect the display result in a ratio operation because the instrument measures the ratio of the two input signals and then converts the ratio value to dB for display.

3.3.11 Math Function.

3.3.11.1 The Model 6000 includes in its repertoire a software mathematical function which provides for offset and scaling of measurement values or ratio values. The formula used is $(X-A) \times B \div C$ where X stands for the measurement or ratio value displayed on the front panel. When the math function is selected, the instrument performs the equation on the displayed value (ie: it subtracts the value of constant A from the measurement, multiplies this by the constant B and divides the result by the constant C). The math function may be selected by pressing the [(X-A)B/C] key on the keyboard or by sending the appropriate command to the GPIB interface (reference Table 3.12).

3.3.11.2 When the instrument initializes, the constants A, B and C are set to values calculated to have no effect on the measurement value X. Constant A is set to zero, constant B is set to 1 and constant C is set to 1. Thus, it can be seen that if the equation with these constants were performed on any value the result would be the same as the original value of X.

3.3.11.3 To store the A, B and C constant values used in the math algorithm, enter the desired value through the keyboard and then press the store key followed by the key of the desired memory location. Repeat this procedure for each of the three memory locations. If not changed, the constants will remain at their initialized values. The memory locations may be individually cleared by pressing the Shift, Clear and memory location keys.

3.3.11.4 OFFSET.

3.3.11.4.1 The math function may be used to perform simple measurement offsets. In this mode $R = X - A$, where R is the displayed value, X is the measured value and A is the offset constant. Since the stored constant (A) may be either positive or negative, the offset may be either added or subtracted from the measurement (X).

3.3.11.5 SCALING.

3.3.11.5.1 The math function may also be used to perform scaling operations. As an example, the math function may

be used to convert the 1 mV/°C output of the Racal-Dana Model T-10 Temperature Probe into Fahrenheit degrees. In this example the displayed reading would be equal to $\frac{(X-A)B}{C}$, where X is the measured value (in mV/°C), A is the constant “-.017778”, B is the constant “9000” and C is the constant “5”. The resulting display will represent the Probe temperature reading in °F.

3.3.12 Hierarchy of Operations.

3.3.12.1 Multiple operations, if selected, will occur in the order shown in Figure 3.9.

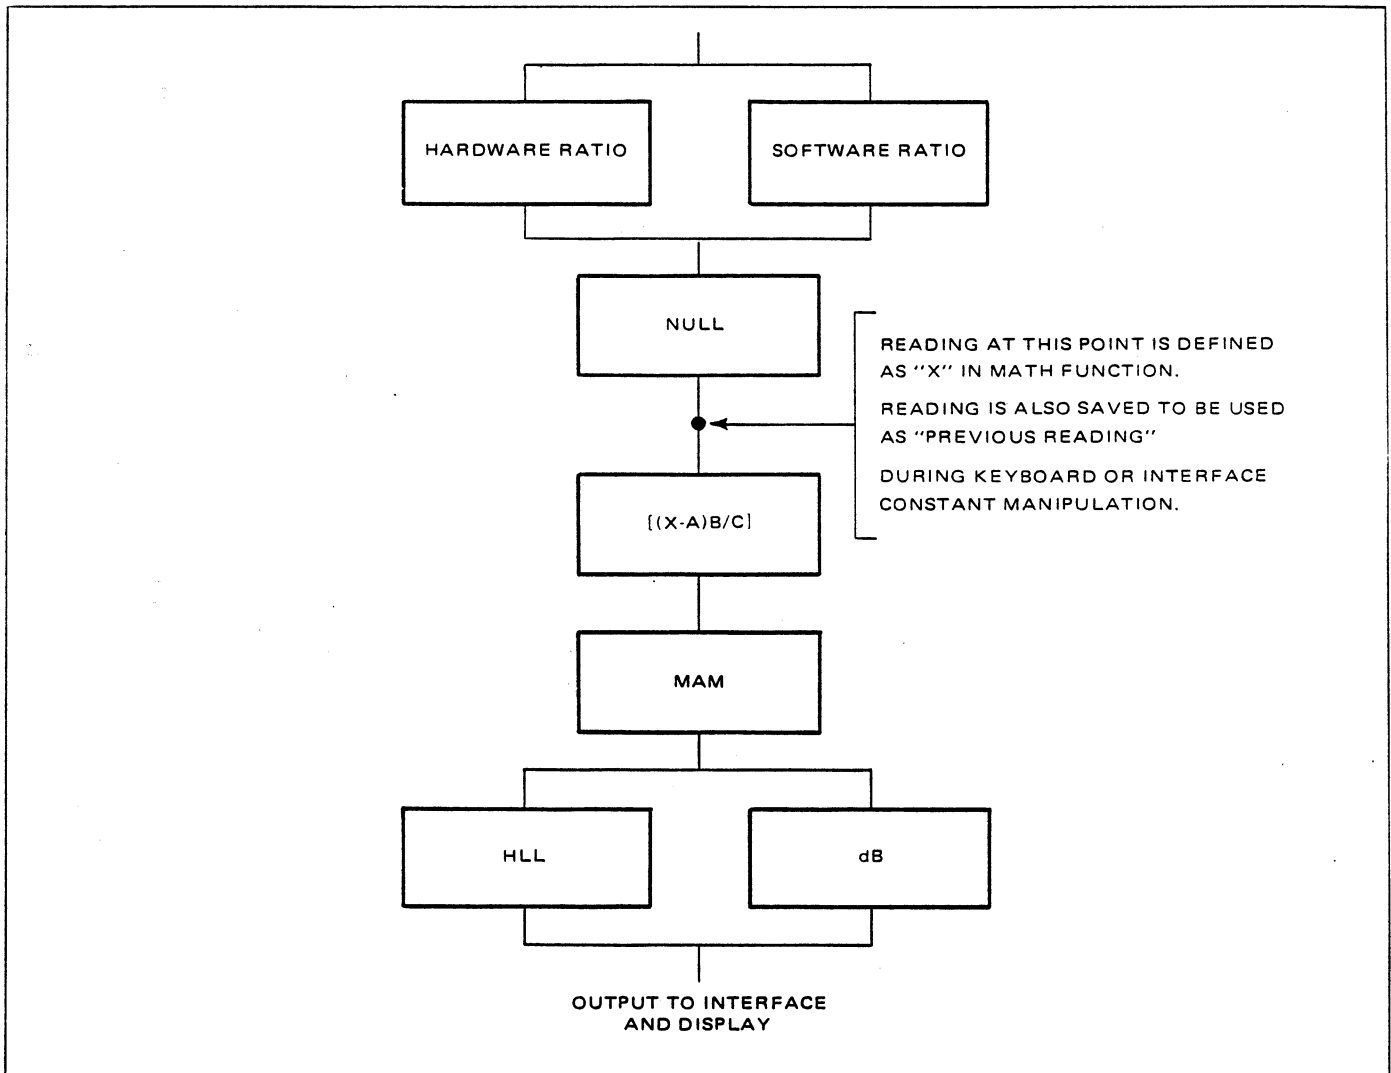


Figure 3.9 - Hierarchy of Operations

3.3.13 Error Messages.

3.3.13.1 Error messages and their descriptions are listed in Table 3.7.

Table 3.7 - Error Messages

| Error Number | Description |
|--------------|--|
| 0 | Cannot calculate Log of zero |
| 2 | Attempted Auto-Cal when in 1000V signal or reference range |
| 10 | Improper Key sequence |
| 11 | Illegal # digits request |
| 12 | Divide by zero |
| 13 | Exponent cannot be displayed when in 6 1/2 digit mode |
| 14 | Display exponent beyond + 9 |
| 20 | Required board missing from main analog section |
| 21 | Required board missing from CAL module |
| 22 | Signal RMS converter not installed |
| 23 | Reference RMS converter not installed |
| 24 | AC converter not installed |
| 25 | Ohms converter not installed |
| 26 | 4-wire DC external reference not installed |
| 29 | Fast Digitizer not installed |
| 30 | RAM failure on computer board |
| 31 | DC or reference Non Vol number out of spec |
| 32 | Ohms Non Vol number out of spec |
| 33 | Non Vol will not write or Cal switch bad |
| 34 | Clock on Non Vol board not oscillating |
| 35 | Reading will not trigger on control logic board |
| 36 | No axis crossing detected from Integrator board |
| | Warning Auto-Cal reading taken during: |
| 61 | DC CAL 1 (Isolator/Digitizer - Positive Ref. Voltage) |
| 62 | DC CAL 2 (Attenuator - Positive Ref. Voltage) |
| 63 | DC CAL 3 (Isolator/Digitizer - Negative Ref. Voltage) |
| 64 | DC CAL 4 (Attenuator - Negative Ref. Voltage) |
| 65 | DC CAL 5 (10 Volt Range) |
| 66 | DC CAL 6 (1 Volt Range) |
| 67 | DC CAL 7 (100 mV Range) |
| 68 | DC CAL 8 (10 mV Range) |
| 71 | OH CAL 1 (10 Ω Range) |
| 72 | OH CAL 2 (100 Ω , 1K Ω Ranges) |
| 73 | OH CAL 3 (10K Ω - 100M Ω Ranges) |
| 74 | OH CAL 4 (Input Bias Current) |
| 75 | OH CAL 5 (Internal 10K Ω Resistor Standard) |
| 76 | OH CAL 6 (1 Ω Range) |

Table 3.7 - Error Messages continued

| Error Number | Description |
|--------------|---|
| 81 | Unable to Auto-Cal during: DC CAL 1 (Isolator/Digitizer - Positive Ref. Voltage) |
| 82 | DC CAL 2 (Attenuator - Positive Ref. Voltage) |
| 83 | DC CAL 3 (Isolator/Digitizer - Negative Ref. Voltage) |
| 84 | DC CAL 4 (Attenuator - Negative Ref. Voltage) |
| 85 | DC CAL 5 (10 Volt Range) |
| 86 | DC CAL 6 (1 Volt Range) |
| 87 | DC CAL 7 (100 mV Range) |
| 88 | DC CAL 8 (10 mV Range) |
| 91 | OH CAL 1 (10 Ω Range) |
| 92 | OH CAL 2 (100 Ω , 1K Ω Ranges) |
| 93 | OH CAL 3 (10K Ω - 100M Ω Ranges) |
| 94 | OH CAL 4 (Input Bias Current) |
| 95 | OH CAL 5 (Internal 10K Ω Resistor Standard) |
| 96 | OH CAL 6 (1 Ω Range) |

3.4 SYSTEM OPERATION.

3.4.1 This subsection presents information on the operation of the 6000 in a system. Two programmable interfaces are available. An IEEE-488 interface allows the 6000 to be connected to controllers and instruments which are manufactured by a variety of companies around the world. A parallel BCD interface is designed for those customers who are presently using the Racal-Dana Model 5900 and would like to upgrade to the 6000. In order to maximize throughput during system operation, the front panel display is given a low priority by the 6000's microprocessor. Consequently, there may be times when the 6000's seven segment display becomes incorrect or unreadable. This is no cause for concern and will not affect the accuracy of data being outputted to the interface.

3.4.2 General Purpose Interface Bus.

3.4.2.1 The Interface Board provides for remote programming of all controls and the output of data from the 6000. Inputs and outputs for the option are made via a 24 pin connector located on the rear panel. The pin location, line identification, and operation of the option are in compliance with IEEE-STD-488-1975. The Interface Board provides interface capability with other instruments and with a controller also utilizing the "interface bus" structure. Connector contact assignments are shown in Figure 3.10. The IEEE-488-1975 subsets available in the Series 6000 are listed in Table 3.8.

3.4.2.2 By assigning a unique address to the 6000, it can be "called up" by the controller or another device on the bus without interfering with other units on the bus. Switches located on the rear panel of the 6000 permit the programming of the instrument address. The coding used for the address on the option board is ASCII (hexadecimal). Any one of 31 codes can be used for the address of an instrument, but a total of 15 is the maximum number of devices that can be used on one bus. The 6000 address can be displayed by first pressing the "Shift" key and then holding the "Local" key down.

3.4.3 GPIB Description.

3.4.3.1 Of the twenty-four lines available at the connector (shown in Figure 2.4) seven are grounds, one is a shield, and the remaining 16 lines are the signal lines. All of the signal lines are either input or output lines and have the following characteristics:

Logic Levels: 1 = Low = $\leq .8V$ 0 = Hi = $\geq 2.0V$

Input Loading: Each input ~ two TTL loads

Output: The output is capable of driving 15 interface bus loads. It consists of an open collector driver and is capable of sinking 48 mA with a maximum voltage drop of 0.4 volts. See IEEE 488 Electrical Specifications.

3.4.3.2 The signal lines, as shown in Figure 3.10, consist of three functionally separate sets: Data, Handshake and Interface.

3.4.3.3 DATA.

3.4.3.3.1 The data lines consist of lines DIO-1 through DIO-8. These lines are the lines over which data flows between all instruments on the bus in bit parallel, byte serial form.

3.4.3.4 HANDSHAKE.

3.4.3.4.1 The transfer lines consist of: DAV (data valid), NDAC (not data accepted), and NRFD (not ready for data). These lines provide communication (between the instrument that is talking and the instruments that are listening) to synchronize the flow of information across the eight data lines. These lines derive their nomenclature from their meaning in the low or one state (eg: when NRFD is low the device is Not Ready For Data).

- a. DAV. Signifies that valid information is available on the data lines.
- b. NRFD. Signifies that the instrument is not ready to accept information.
- c. NDAC. Signifies that the information is not accepted by the acceptor.

3.4.3.5 INTERFACE.

3.4.3.5.1 The five interface lines coordinate the flow of information on the bus.

- a. IFC. Places the Model 6000 in the IDLE state. (Untalk, Unlisten).
- b. ATN. Indicates the nature of information on data lines during a handshake transfer sequence. Low indicates data lines carry interface commands; high indicates that the data lines carry data.
- c. REN. Arms instrument to select Remote operation. (Low for Remote.)
- d. SRQ. Service request signal line. Signals the controller that a peripheral or bus member wants attention for such purposes as transmitting measurement, status or condition information to the bus controller.
- e. EOI. End or Identify signal. Used for two purposes: (1) to signify the end of a message and (2) to signal bus peripherals to set the I/O bit assigned for parallel poll identification process.

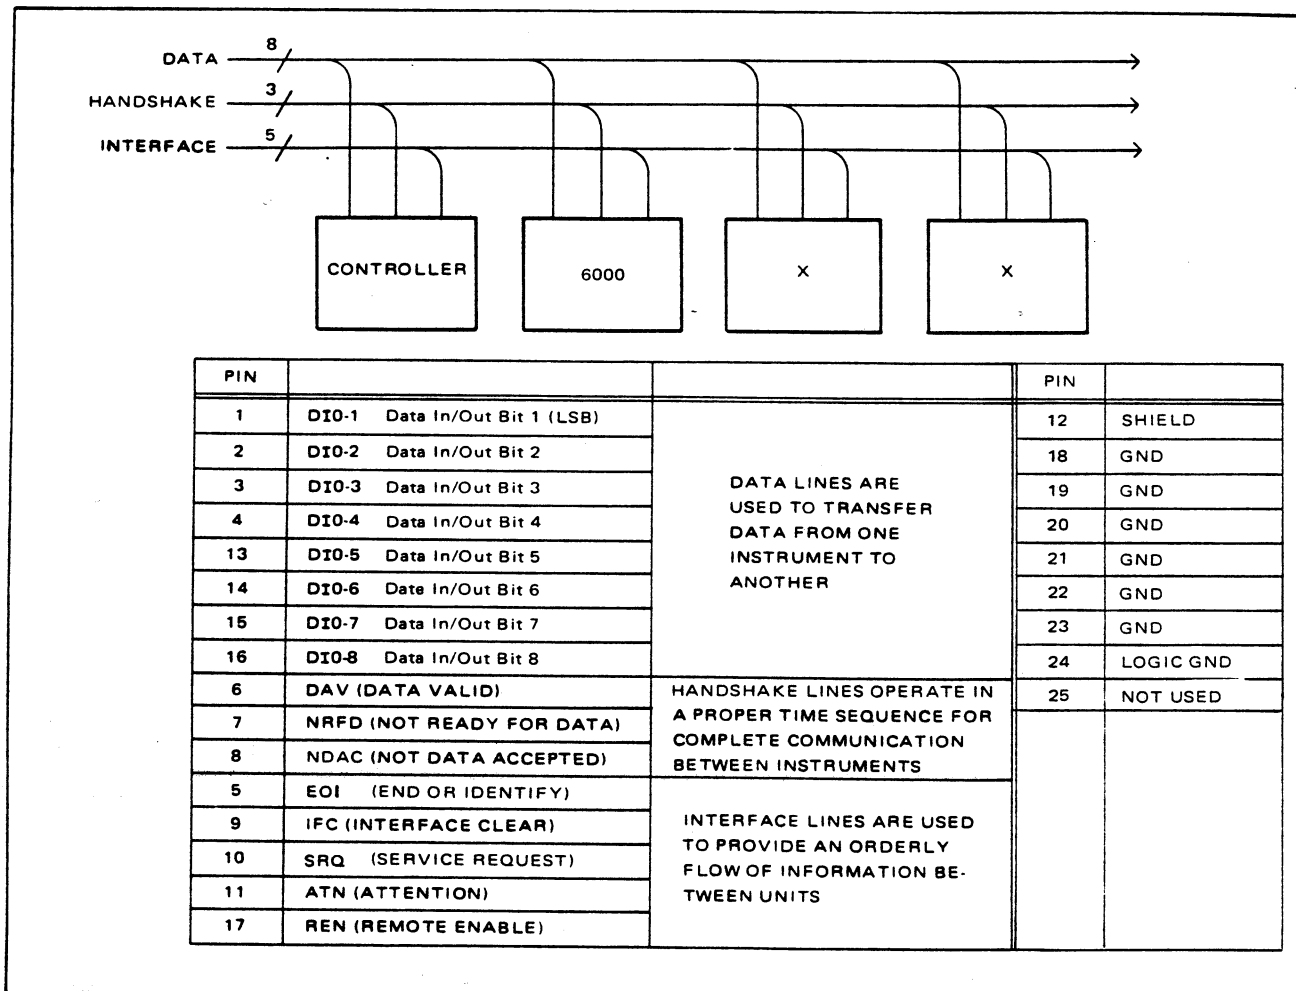


Figure 3.10 - Interface Signal Pin Assignments

Table 3.8 - IEEE 488 1975 Standard Interface Subset Capability of 6000 DMM

| Subset Mnemonic | Function | Capability |
|-----------------|----------------------------|------------------------|
| SHI | Source Handshake | Complete |
| AHI | Acceptor Handshake | Complete |
| T5 | Talker | Complete |
| TE0 | Extended Talker | None |
| L4 | Listener | All except listen only |
| LE0 | Extended Listener | None |
| SR1 | Service Request | Complete |
| RL1 | Remote/Local | Complete |
| PP0 | Parallel Poll | None |
| DC1 | Device Clear | Complete |
| DT1 | Device Trigger | Complete |
| C0 | Controller | None |
| E1 | Open collector bus drivers | - |

3.4.4 Handshake.

3.4.4.1 The handshake is the process by which each data byte is transferred from the source to the acceptor. Figure 3.11 illustrates the sequential relationship between the DAV, NRFD, and NDAC lines (used to transfer data bytes). Figure 3.12 illustrates the handshake flow chart.

3.4.5 Address Assignment.

3.4.5.1 When the Series 6000 is used as a system instrument it must be assigned an address as a bus member. The instrument is equipped with an address switch located on the rear panel which enables the user to assign it one of 31 decimal addresses. The decimal addresses available are the numbers 00 through 30.

3.4.5.2 Table 3.9 contains all of the information required for setting the instrument address switch and for determining the talk and listen address codes used in programming the controller.

3.4.5.3 Refer to Table 3.9 and note that the right hand column shows the decimal addresses available for assignment to the 6000. The column titled Address Switch Setting illustrates the positions of the switches for each decimal address. To set the address on the instrument at the desired decimal address, refer to Table 3.9, and set the switches on the address switch to the pattern shown in the Address Switch column of the table.

3.4.5.4 As an aid in setting the address switches, the decimal address may be displayed on the 6000 readout by first pressing the "Shift" key and then holding the "Local" key down. The address switches may then be set until the desired address appears on the display.

3.4.5.5 Once the instrument has been assigned an address, and the address switch has been set, the controller may address the instrument as a talker or as a listener by transmitting the appropriate ASCII character on the data lines. The Data Lines column shows the 7 bit binary code required for each talk and listen address assigned to the instrument. These are the codes the controller must transmit to establish the talker/listener condition of the 6000. Note that there are two address codes used for each decimal address. Each of these address codes constitutes a different ASCII character. For example, if it is desired to use the decimal address 02, the address switch on the rear panel of the instrument is set to the pattern shown in Table 3.9. As shown in the table, the talk address is the ASCII character " and the listen address is the ASCII character B. Note that the only difference in the binary code in each case is the state of data lines D6 and D7.

3.4.5.6 Table 3.9 illustrates the data line code in binary form for each decimal address. Again, using the example for decimal address 02, note that bits D1 through D5 are the same for both talk and listen address and that the only difference is in bits D6 and D7.

3.4.6 Bus Operation Sequence.

3.4.6.1 The transmission of programming instructions to the Series 6000 and the subsequent transmission of measurement data to the controller are accomplished by transmitting programming instructions as outlined in the bus operation sequence in Table 3.10. Table 3.10 and the accompanying timing chart (Figure 3.11) illustrate the sequence of the transmission of device dependent messages to the 6000 which cause it to measure the voltage of a measurement signal applied to the input and then transmit the resultant measurement data to the controller via the interface bus.

3.4.6.2 Note that the left hand column of Table 3.10 contains line numbers. These are used for reference purposes throughout the following description of the bus operation sequence. The column titled Handshake Lines indicates the high/low condition of the handshake lines at various points throughout the two-way transmission of information. In a similar fashion the columns titled Interface Lines and Data Lines contain entries reflecting the state of the interface lines and data lines during operation. The column titled Meaning or Function contains entries explaining the purpose of each operational step during the data transfer.

3.4.6.3 A timing chart is included to illustrate the condition of each individual bus line at each stage of the data transfer operation. Note that the timing chart includes numbers adjacent to each level change. These numbers refer to the individual line entries of the table.

3.4.6.4 The measurement operation used in Table 3.10 is a simple voltage measurement. The measurement parameters are as follows: Function DC volts, Range 10 volts, Trigger continuous. Note that the measurement parameters are shown in the meaning or function column of the table in lines 17 through 22 and that the program string required to perform this measurement is F1R5T1. The program string will include a carriage return and line feed, but in this case this command is automatically transmitted by the Hewlett Packard 9825.

3.4.6.5 For purposes of this example it is assumed that the Model 6000 has been assigned the decimal address 02 and that the controller is a Hewlett Packard 9825 calculator with a talk address U. It is further assumed that both the controller and the Model 6000 are system connected, turned on and operational.

3.4.6.6 Table 3.10 shows the sequence of bus operation. Lines 1 through 13 show the detailed operation of the bus for one handshake cycle (ie: the transmission of one ASCII character as a bus message). Lines 14 through 44 do not indicate the detail for each handshake cycle; they indicate only the transmission of the characters required for the programming commands and the subsequent transmission of the data by the Series 6000. Each transmission by the controller or the DMM, shown in lines 14 through 44, requires the handshake cycle illustrated by line entries 1 through 13 of the table.

3.4.6.7 Refer to Table 3.10, line 1, and note that the first operation performed is the setting of the Remote Enable (REN) line to the low state. As explained in the table, this operation arms the bus members to go to the remote mode. The controller then transmits the interface clear (IFC) signal which stops bus activity and the attention (ATN) line is set low indicating that the next data byte placed on the bus by the controller will be a Bus Message. Note in the timing chart that when the ATN line is set low (3) that the 6000 responds by setting the NRFD line high (4). This response by the 6000 indicates that it is now ready to accept data.

3.4.6.8 When the DMM transmits the ready for data signal by setting the NRFD line high (line 4 of Table 3.10) the controller puts the bus message UNL on the data lines. As shown in line 5 of the table this is the ASCII character ?. The unlisten message is a universal message understood by all bus members as the command "unlisten". Having placed the data character on the lines, the controller now says the data is valid by setting the DAV line low (6). The DMM then says "I'm going to accept the data now on the data lines; don't change the data lines". The DMM then reads the data lines (8) and acknowledges acceptance of the data by setting the NDAC line high (9). The controller then removes the data valid signal (10), removes or changes data (11) and the DMM removes the data accepted signal from the bus (12).

3.4.6.9 At this point, one ASCII character has been transmitted by the controller to the DMM and the DMM is now ready to accept a new data byte. It indicates this (13) by setting the NRFD line high. The controller now puts the next character on the data line and the handshake cycle for the transfer of the character is repeated. The next character transmitted by the controller is the ASCII character U which is the talk address of the Hewlett-Packard 9825 calculator. As indicated in Table 3.10, by transmitting this character the calculator is making itself a talker. The

next character transmitted is the quotation mark which is the listen address of the 6000 DMM when it has been assigned the decimal address 02.

3.4.6.10 Lines 16 through 24 of the table illustrate the sequence of transmission of the program string which instructs the DMM to make the DC voltage measurement. Lines 26 and 29 of the table indicate the end of transmission with the characters CR (carriage return) and LF (line feed). Note that at line 16 of the table the controller sets the ATN line high indicating that the program string to follow in lines 17 through 24 are device dependent messages.

3.4.6.11 Having transmitted the program string of device dependent messages to the DMM, the controller then sets the ATN line low which indicates that the characters to follow in lines 26 through 28 are bus messages. These bus messages change the talker/listener relationship of the controller and DMM; the DMM is made a talker and the controller becomes a listener.

3.4.6.12 Lines 30 through 44 illustrate the sequence of the transmission of data by the DMM. The handshake sequence is the same when the DMM is transmitting data as that outlined in lines 1 through 13 of the table, except that the DMM is controlling the handshake lines.

3.4.6.13 Upon completion of the data transmission, the Series 6000 transmits a carriage return (CR) and line feed (LF) to indicate the end of the data transmission.

3.4.7 Interface Message Repertoire.

3.4.7.1 The Series 6000 DMM is equipped with a standard GPIB interface which conforms to the specifications contained in IEEE-488-1975. The specification includes the definition of multi-line interface messages and this definition divides the messages into two groups: the primary command group and the secondary command group. The 6000 includes none of the secondary command group in its interface message repertoire.

3.4.7.2 The primary command group of interface messages is further broken down into four lower categories: (1) the listen address group, (2) the talk address group, (3) the universal command group and (4) the addressed command group. The 6000 is designed to include in its interface message repertoire 31 listen addresses and 31 talk addresses.

Table 3.10 - Bus Operation Sequence

| | HANDSHAKE LINES | BUS LINES | DATA LINES | MEANING OR FUNCTION |
|----|-----------------|-----------|------------|---|
| 1 | | REN Lo | | Arms bus peripherals to go to remote mode. |
| 2 | | IFC | | Stops activity on the bus. |
| 3 | | ATN Lo | | Signifies that data byte will be a "Bus Message". |
| 4 | NRFD Hi | | | DMM says ready for data. |
| 5 | | | ? | UNL (Unlisten) message (ASCII character ?) on data bus by controller means "all bus peripherals unlisten". |
| 6 | DAV Lo | | | Controller says data on bus is valid. |
| 7 | NRFD Lo | | | DMM says its not ready for new data; do not change data lines while DMM is accepting data. |
| 8 | | | | DMM reads data lines. |
| 9 | NDAC Hi | | ↓ | DMM says it has read data. |
| 10 | DAV Hi | | ? | Controller says data no longer valid. |
| 11 | NDAC Lo | | | DMM removes data accepted flag. |
| 12 | NRFD Hi | | | DMM says it's ready for next data byte. |
| 13 | | | | Controller removes or changes data on bus. |
| 14 | | | U | "I talk", controller becomes talker (HP9825 talker address). |
| 15 | | | " | "You listen", addressed peripheral becomes listener (In this case it is the 6000 DMM set to decimal address 02; see table 3.9). |
| 16 | | ATN Hi | | Signifies that data byte will be a "Device Dependent Message" as opposed to an "Interface Message". |
| 17 | | | F | Function |
| 18 | | | 1 | DC Volts |
| 19 | | | R | Range |
| 20 | | | 5 | 10 Volts |
| 21 | | | T | Trigger |
| 22 | | | 1 | Continuous |
| 23 | | | CR | End of transmission by HP9825. |
| 24 | | | LF | |
| 25 | | ATN Lo | | Byte to follow is a Bus Message. |
| 26 | | | ? | UNL (unlisten) bus message. |
| 27 | | | B | "You talk", 6000 talk address (02). |
| 28 | | | 5 | "I listen", HP9825 listen address. |
| 29 | | ATN Hi | | Message to be transmitted by DMM is Data. |
| 30 | | | + | } Measurement data transmitted by DMM |
| 31 | | | 1 | |
| 32 | | | . | |
| 33 | | | 0 | |
| 34 | | | 2 | |
| 35 | | | 5 | |
| 36 | | | 4 | |
| 37 | | | 6 | |
| 38 | | | 8 | |
| 39 | | | E | Exponent Indicator means X 10 ⁰¹ |
| 40 | | | + | Sign of exponent. |
| 41 | | | 0 | } Exponent. Here it indicates 10 ¹⁰ . |
| 42 | | | 1 | |
| 43 | | | CR | } End of 6000 data message. |
| 44 | | | LF | |

Faint, illegible text along the right edge of the page, possibly bleed-through from the reverse side.

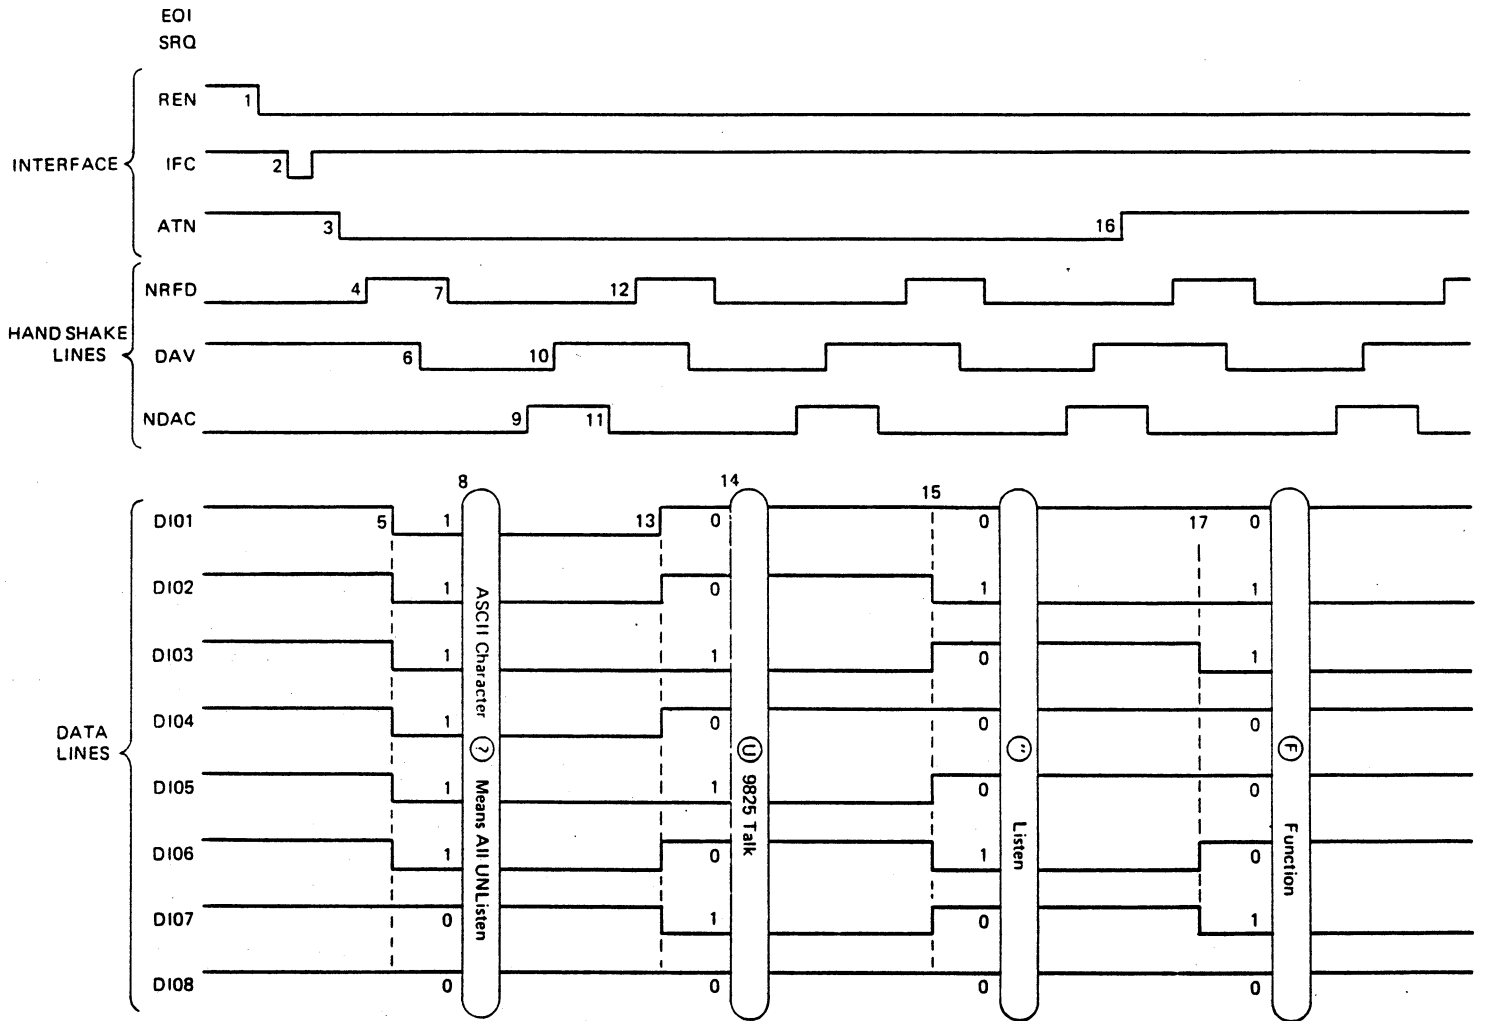


Figure 3.11 - Interface Timing

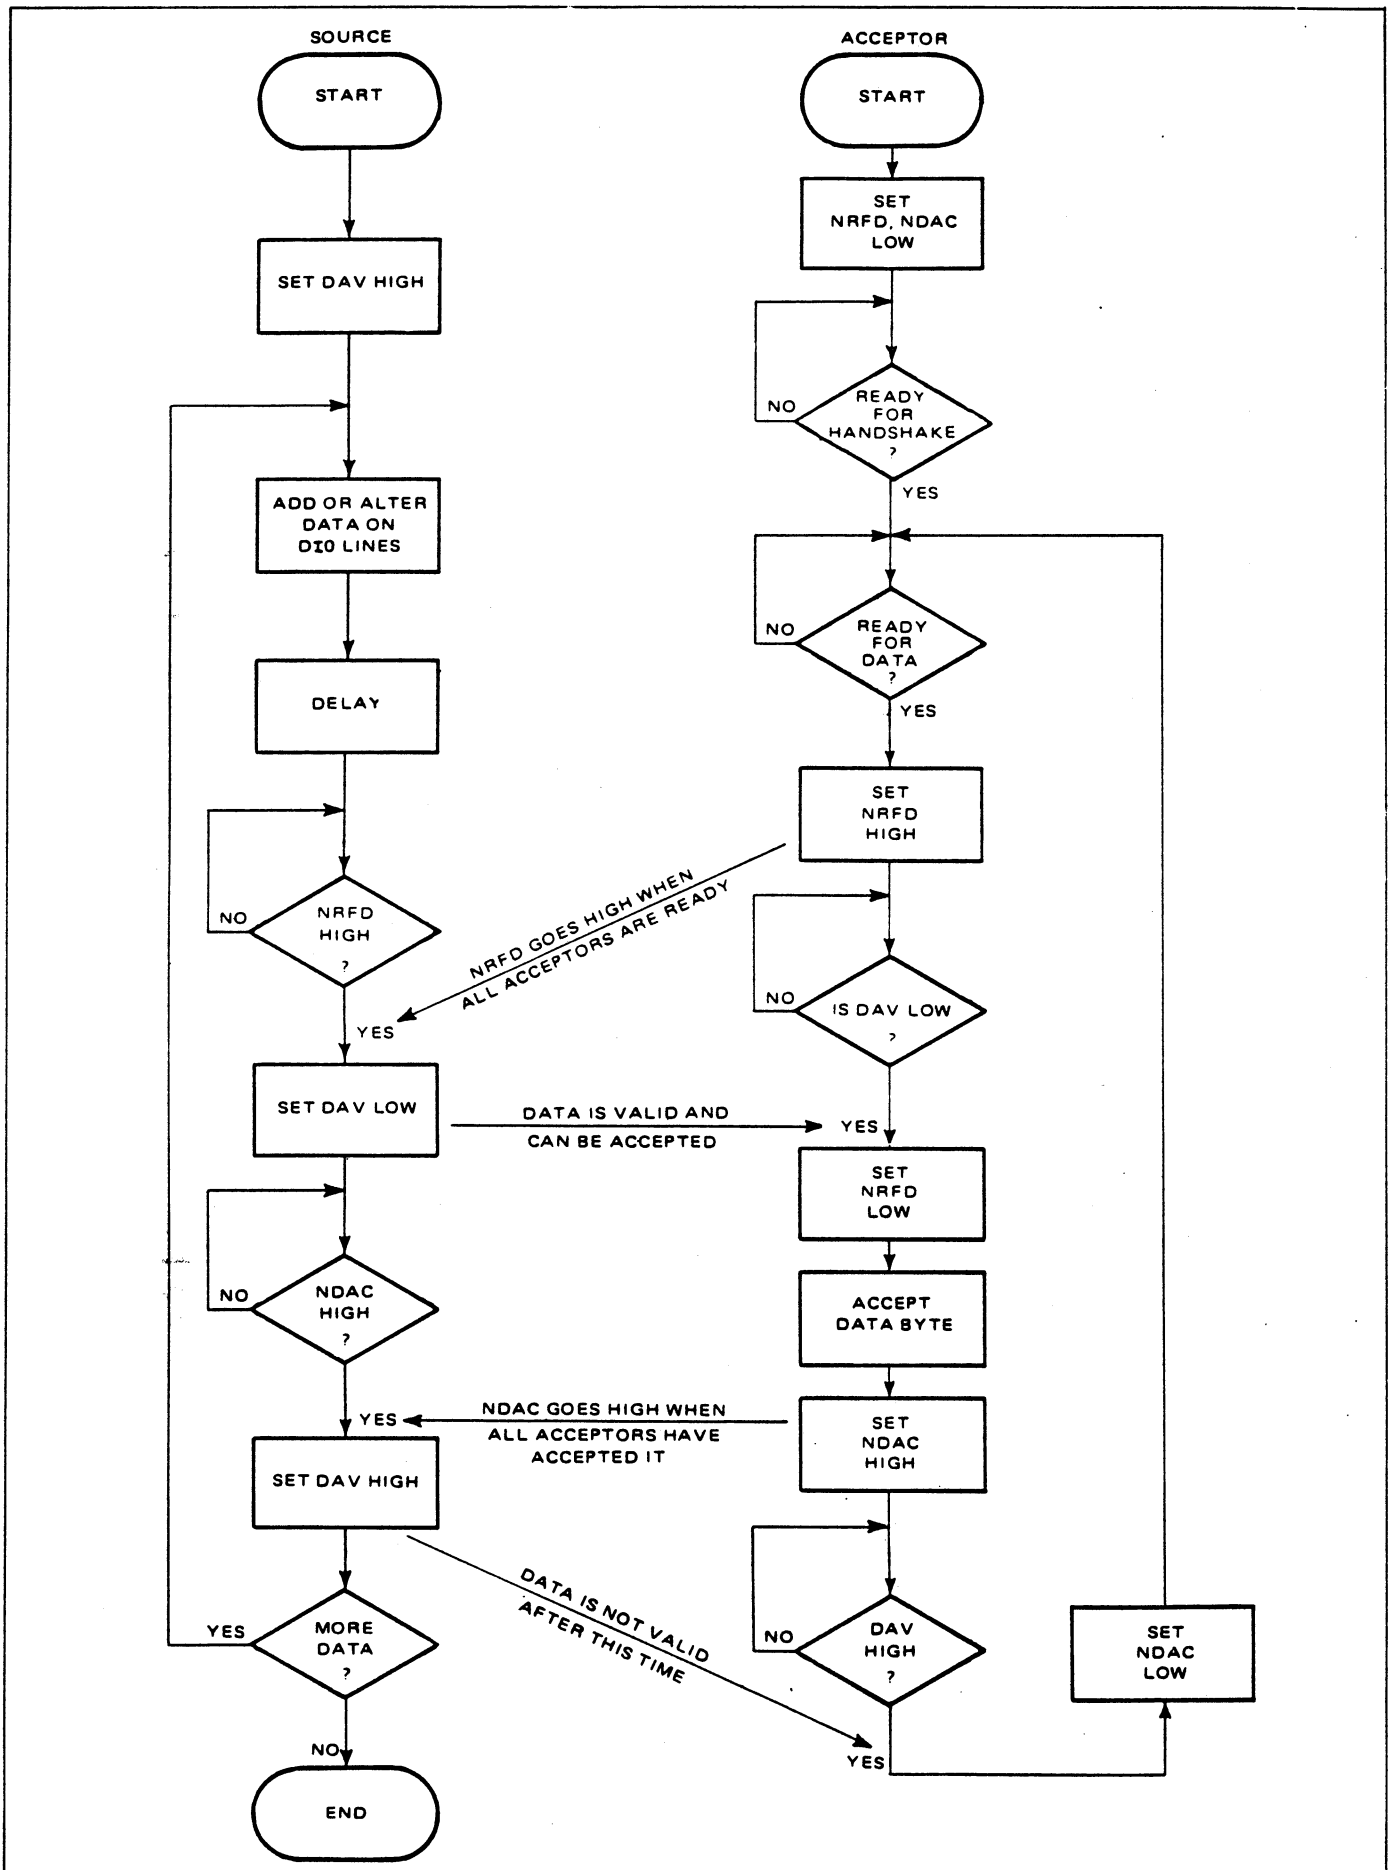


Figure 3.12 - Handshake Flow Chart

Table 3.11 - Interface Messages Used With Model 6000 DMM

| Message | Meaning | HEX CODE | Decimal Equiv. | DATA LINE CODE | | | | | | |
|---------|-----------------------|----------|----------------|----------------|---|---|---|---|---|---|
| | | | | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
| GTL | Go To Local | 01 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 1 |
| SDC * | Selected Device Clear | 04 | 4 | 0 | 0 | 0 | 0 | 1 | 0 | 0 |
| GET * | Group Execute Trigger | 08 | 8 | 0 | 0 | 0 | 1 | 0 | 0 | 0 |
| LLO | Local Lock Out | 11 | 17 | 0 | 0 | 1 | 0 | 0 | 0 | 1 |
| DCL | Device Clear | 14 | 20 | 0 | 0 | 1 | 0 | 1 | 0 | 0 |
| SPE | Serial Poll Enable | 18 | 24 | 0 | 0 | 1 | 1 | 0 | 0 | 0 |
| SPD | Serial Poll Disable | 19 | 25 | 0 | 0 | 1 | 1 | 0 | 0 | 1 |
| UNL | Unlisten | 3F | 63 | 0 | 1 | 1 | 1 | 1 | 1 | 1 |
| UNT | Untalk | 5F | 95 | 1 | 0 | 1 | 1 | 1 | 1 | 1 |

*Instrument will ignore message unless it is a listener

The listen and talk addresses to which the 6000 may be set are listed in Table 3.9.

3.4.7.3 The interface messages to which the 6000 DMM is designed to respond are listed in Table 3.11 along with their decimal equivalents, hex equivalents, meanings and data line codes. The function of the 6000 in response to each of these commands is described in the following paragraphs.

3.4.7.4 GO TO LOCAL (GTL).

3.4.7.4.1 As shown in Table 3.11, the GTL command means go to local and the decimal and hex equivalent are both 01. Upon receipt of this interface message, the 6000, if previously programmed for remote, will return to its local operational state. This means that the instrument will then perform the function according to the settings of the front panel controls on the instrument until such time as it returns to remote control.

3.4.7.5 SELECTED DEVICE CLEAR (SDC).

3.4.7.5.1 Upon receipt of the SDC command, the 6000 will go to the home state. The decimal and hex equivalent are both 04.

3.4.7.6 GROUP EXECUTE TRIGGER (GET).

3.4.7.6.1 As shown in Table 3.11, the decimal and hex equivalents of the GET command are both 08. Upon receipt of the GET interface message, the 6000 will trigger a reading if it had previously been placed in the HOLD mode. The group execute trigger command is used to trigger the simultaneous execution of a number of functions by a number of bus members at the same time. To use this command, two or more bus members are programmed to perform a function on receiving the GET interface message or a trigger command. Subsequently, the controller will transmit the GET command and all bus members previously programmed will begin execution on receipt of the command.

3.4.7.7 LOCAL LOCK OUT (LLO).

3.4.7.7.1 The Series 6000 is armed to go to remote operation when the remote enable (REN) bus management line is set to the 1 (low) state by the controller. The 6000 may be brought back into local control by pressing the "Shift" key and then the "Local" key on the keyboard. If, however, the 6000 receives an LLO (Hex 11 or decimal 17) command while in remote operation, it may not be brought back into local control through keyboard operation.

3.4.7.8 DEVICE CLEAR (DCL).

3.4.7.8.1 The decimal equivalent of the DCL command (as shown in Table 3.11) is 20, and the hex equivalent is 14. This command is identical in operation to the SDC command except that it is a universal command and will not necessarily include the address of the 6000. When this command is transmitted on the bus, all devices on the bus which respond to the DCL will clear.

3.4.7.9 SERIAL POLL ENABLE (SPE).

3.4.7.9.1 As shown in Table 3.11, the decimal equivalent of this interface command is 24; the hex equivalent is 18. The function of this command is to cause all bus members responding to the SPE command to ready their status word. Thus, when a bus member has transmitted a service request (SRQ), the bus controller can transmit the serial poll enable command, sequentially command each bus member to transmit its status byte and thus identify the bus member

requesting attention. Upon receipt of the SPE interface message, the 6000 immediately prepares to respond to a status request from the controller. If the 6000 has previously transmitted an SRQ, it will set bit 7 of the status byte to 1. The serial poll allows a bus member to set the service request line to the 1 state, thus indicating to the controller that it wants attention. The controller may then sequentially interrogate each bus member to determine which one has requested service and the purpose of the request. The meanings of the bits in the status bytes are shown in Figure 3.13.

3.4.7.10 SERIAL POLL DISABLE (SPD).

3.4.7.10.1 As shown in Table 3.11 the decimal equivalent to the SPD command is 25; the hex equivalent is 19. The function of this command is to return the bus members to their original states after the serial poll transaction has been completed.

3.4.7.11 UNLISTEN (UNL).

3.4.7.11.1 As shown in Table 3.11 the decimal equivalent of this command is 63; the hex equivalent is 3F. This command is also a universal interface message understood by all members of the bus as a command to go to the unlisten state. When this command is transmitted, all bus members previously in the listen state will return to the unlisten state.

3.4.8 Device Dependent Messages.

3.4.8.1 The messages which control the operation of the Series 6000 DMM when in system operation are referred to as device dependent messages. These messages are simply combinations of ASCII characters which the instrument recognizes as specific instructions. To program the instrument for a specific operation, the operator programs the controller to transmit a sequence of these messages (referred to as a program string). The program string is variable in length and has no fixed format. Individual commands may be transmitted in any order and require no delimiters or spacing for the instrument to understand. A terminator character(s) should be sent as the last character in each program string. Acceptable terminators are CR (Carriage Return), LF (Line Feed), or both. Most controllers will add these to the program string automatically. Alphabetic characters may be either upper or lower case.

3.4.8.2 The device dependent messages are listed in Table 3.12 along with the 6000 operation and any special notes that apply. The device dependent messages applicable to the Series 6000 are divided into subcategories of Function Commands and Range Commands. In general, the various commands cause the instrument to perform the same functions as the front panel controls. There are special cases however, where there are extra functions available under remote control which are not available in the bench operation mode. Further, there are some special situations re-

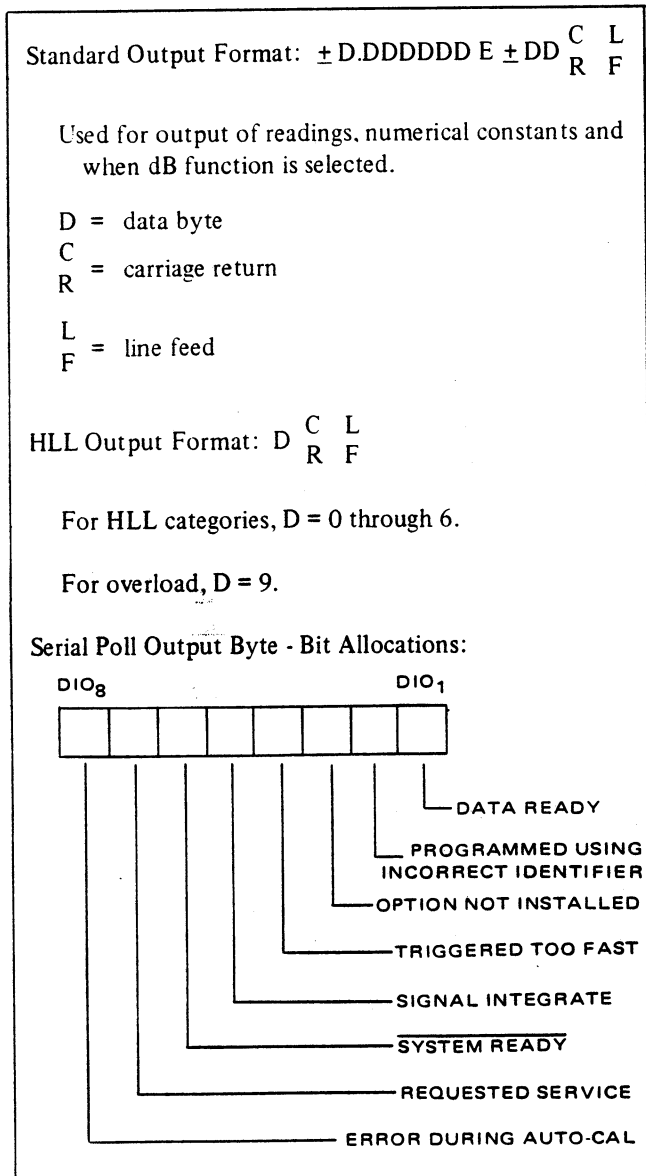


Figure 3.13 - GPIB Output Formats

quiring special attention to the operation sequence used with the 6000.

3.4.8.3 To assemble a program string, first list the requirements of the program, and then select the appropriate program codes from Table 3.12. Table 3.10 shows a program string listing for a typical measurement procedure.

3.4.9 Function Commands.

3.4.9.1 Function commands are available to program the instrument to perform any operation which may be commanded through use of front panel keyboard controls. Note that in Table 3.12 the 6000 Operation column lists the functions available on the instrument and that the Program Code column shows the ASCII characters required to program the instrument for each of these functions. To program a function the controller need only transmit the ASCII characters required for the desired function (eg: to program the measurement function DC volts, the controller simply transmits the two ASCII characters F and 1 over the bus to the Model 6000).

3.4.10 Range Commands.

3.4.10.1 Ten individual range commands are available to the controller: one to command the autorange and nine additional commands for selecting specific ranges for the instrument. Note that the R1 and R2 commands both call for the 10 millivolt range when used in a program string for voltage measurements. If the instrument is commanded to go to the 10 millivolt range with the use of an R1 command it will uprange automatically to 100 millivolts if overload occurs. If the instrument is commanded to go to the 10 millivolt range with an R2 command it will remain on the 10 millivolt range even if an overload occurs. Note that the commands R1 through R9 all serve dual purposes; they command ranges for voltage measurements and for resistance measurements.

3.4.11 Trigger Commands.

3.4.11.1 Trigger commands T0 through T5 control the beginning of a measurement cycle of the series 6000.

3.4.11.2 INTERNAL TRIGGER

3.4.11.2.1 When the T1 command is transmitted, the instrument triggers itself continuously. This is shown at the top of Figure 3.14, where the program string "F1R5T1" causes multiple integrate cycles in the DMM's A/D converter.

3.4.11.2.2 When operating in the internal trigger mode, the DMM may occasionally output 2 sign bytes onto the

GPIB, such as - - 1.234567E + 89. This may cause problems for some GPIB controllers, such as the commodore "PET". Depending upon the make and model GPIB controller used, one or more of the following suggestions may be helpful if problems are encountered.

- a) Use the T2 command (hold mode) rather than T1.
- b) Read the answer into the calculator as a string (rather than numeric) variable and perform one of the following:
 - 1) Test for excessive string length. If string is too long, delete the first character in the string.
 - 2) Test the second character to see if it is a 'plus' or 'minus' character, If so, delete the first character in the string.

3.4.11.3 EXTERNAL TRIGGER

When the T2 command is transmitted to the DMM, the instrument must be triggered by an external logic signal inputted through a BNC connector on the rear panel of the instrument. The rear BNC trigger input pulse and the resulting integrator waveform are shown in Figure 3.14.

3.4.11.4 HOLD MODE.

3.4.11.4.1 When the T3 command is transmitted, the instrument is put in the "Hold" state and will stay there until it is triggered either from the front panel or from the GPIB. Trigger commands from the GPIB can be either a T0 command or a Group Execute Trigger. Trigger commands are given from the keyboard by pressing (shift) hold when the machine is in local control.

3.4.11.5 When transmitting a T0 command or Group execute trigger to the 6000, the user may find that once in a great while the 6000 'rejects' the trigger command and issues an SRQ to the controller. Reading the serial poll status byte will then indicate that the 6000 has been triggered too fast. If this occurs, the controller can correct the situation by waiting approximately 10 milliseconds and then re-issuing the T0 or G.E.T. command.

3.4.11.6 TIMEOUT COMMANDS.

3.4.11.6.1 Upon receipt of the T4 program code the instrument goes into the External Trigger mode and must be triggered by an external signal connected to the rear panel BNC connector. After being triggered via the rear panel BNC, the 6000 executes a timeout which allows time

for analog signals to settle. The timeout will vary, depending upon which functions and ranges are selected, before triggering a single reading. When program code T5 is transmitted, the instrument goes into the "Hold" mode described above except that its measurement cycle is again affected by the timeouts applicable to each function and range.

3.4.12 Integration Time Commands.

3.4.12.1 The measurement accuracy of the 6000 is directly proportional to the signal integration time (ie: the longer the integration time, the more accurate the measurement). If the measurement time is available, more accuracy may be obtained by programming the longer integration period. In situations where speed is required, the shorter integration time may be programmed at some sacrifice in measurement accuracy, see Figure 3.20. The program code IO calls for the Fast Analog-to-Digital (Fast A/D) operating mode. This mode is useable in internal trigger and external trigger modes only and, in this mode of operation, the DMM makes repeated high speed measurements and transmits the information over the GPIB. Integration time commands I1 through I5, refer to Table 3.12, call for the specific integration times shown in the 6000 Operation column of the table. Note that the Special Notes column of the table indicates the number of digits displayed for each selected integration time.

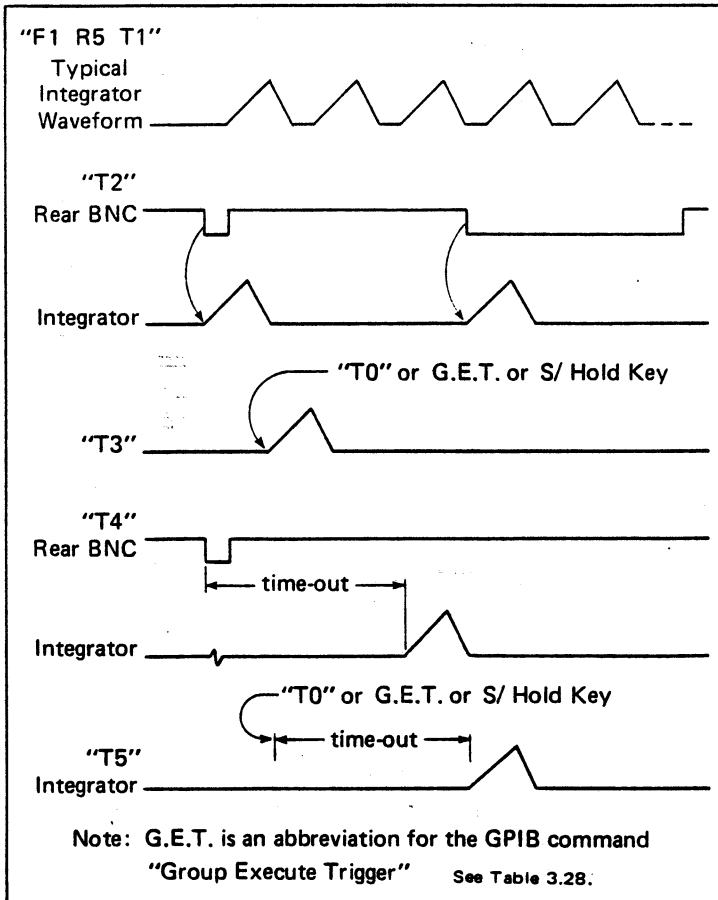


Figure 3.14 - Model 6000 DMM Trigger Command Timing

3.4.13 Null Commands.

3.4.13.1 Program codes N0 through N3 call for the Null functions. The N1 program code enables the Null function. Upon receipt of N1 from the interface, a flag is set in memory which signals the Computer board to subtract the Null constant from future readings. The N2 program code allows for the storage of Null constants. Upon receipt of the N2 command, the previous reading is stored into memory for use as the Null constant. The N3 program code causes the DMM to transmit the Null constant to the controller.

3.4.13.2 The N1N2 program string accomplishes the same operation as selection of the "Shift" and "Null" keys on the keyboard. Program code N0 disables the Null function but does not change the Null constant.

3.4.14 Display Commands.

3.4.14.1 The display of measurements takes extra time in the normal measurement cycle. This time may be saved in remote operation by disabling the display feature of the 6000. To disable the numeric display, the controller need only transmit the P0 program code. This reduces the internal measurement cycle time by 3 milliseconds, thereby allowing faster read rates. To restore the front panel display, the controller transmits the program code P1. When in the IO mode, the display should be disabled if high read rates are desired.

3.4.15 Interrupt Commands.

3.4.15.1 Commands may be transmitted by the controller to instruct the 6000 as to the transmission of SRQ signals on the GPIB. When the controller transmits the D1 code, the Series 6000 indicates the completion of each reading by sending a SRQ. If the D0 code is received, no SRQ will be sent upon completion of a reading.

3.4.16 Hi-Low Limit Commands.

3.4.16.1 The GPIB commanded Hi-Low Limit feature of the Series 6000 operates in a similar fashion to the manual or bench mode. The enabling and disabling of the HLL function is controlled by transmission of the H1 and H0 program codes respectively. In a manner similar to manual operation, the controller can enter the Hi-Low Limit constants in the HLL locations 1 thru 6 by transmitting the storage location program codes H2 through H7 respectively. For example, to store the constant 1.5 in HLL constant location 1 the controller would transmit the constant 1.5 followed by the command H2. A similar sequence would be used to store the other HLL constants 2 thru 6 in the other locations. The program code H8 is unique to remote operation in that it calls for the retrieval from storage and transmission via GPIB of the program constants. When program code H8 is transmitted to the Model 6000 DVM

the instrument retrieves the HLL constants stored in location 6 and transmits it first, followed by the remaining constants in reverse order as noted in the special notes column of the table. When using the H6 command, it should be the last command in the program string. The program code H9 initializes all six limits by setting them to $\pm 9.99E9$.

3.4.16.2 When the HLL function is enabled, using the H1 command, the normal GPIB reading output is replaced with a single GPIB digit followed by the terminator characters CR and LF. The following shows the GPIB digit output along with its corresponding front panel LED display.

| | | | | | | | |
|--------------|----|----|----|---|----|----|----|
| GPIB Digit: | 0 | 1 | 2 | 3 | 4 | 5 | 6 |
| LED Display: | LO | c. | b. | A | .b | .c | HI |

If the reading is OL (overload), the digit "9" is output to the bus. Also, if the HLL function is enabled over the GPIB, the 7-bin display format is automatically selected. That is, the 3-bin display format of "LO," "PASS," and "HI" cannot be selected over the GPIB.

3.4.17 Filter Commands.

3.4.17.1 Control of the filter in the remote mode is the same as manual control of the filter except that the controller transmits the program code commands J0 and J1 (as shown in Table 3.12).

3.4.18 Front/Rear Input Commands.

3.4.18.1 Selection of the Front/Rear input status is performed by transmitting the program code V0 to select the front input terminals of the instrument, or by transmitting program code V1 to select the rear input terminals.

3.4.19 External Reference Function Commands.

3.4.19.1 External reference function commands are used to select the reference used by the digital multimeter in making measurements. The controller may select the normal internal reference or an external ratio reference which may be applied to the input terminals or to the external reference connector located on the rear panel. Transmission of the X0 or X4 program codes by the controller causes the instrument to use the internal reference for all measurements. When using the instrument in the software ratio mode (DC reference), the input signal is applied to the selected input terminals as indicated by the RI lamp on the front panel. The reference is applied to the deselected input terminals, and the controller transmits the program

code X1. For further explanation of input terminal selection refer to paragraph 3.3.9.4.

3.4.19.2 When using an AC reference voltage in the software ratio mode, the reference voltage is applied to the deselected input terminals and the input signal is applied to the selected input terminals. The controller then transmits program code X2 for AC coupled software ratio measurements.

3.4.19.3 It is possible to make software ratio measurements using a ratio reference voltage which is a DC voltage containing an AC component. The ratio reference voltage is applied to the deselected input terminals and the controller transmits program code X3. In this case the deselected terminals are DC coupled to the input of the instrument.

3.4.19.4 When using the instrument for hardware ratio measurements, the measurement signal is applied to the input terminals and the ratio reference voltage is applied to the connector marked EXT REF on the rear panel of the instrument. In this case, the reference voltage applied to the external reference connector is substituted for the internal reference and the program code transmitted by the controller is X5. In a similar fashion, an AC ratio reference voltage may be applied to the external reference connector. In this case the controller must transmit the program code X6.

3.4.19.5 The ratio reference voltage used with the hardware ratio mode of operation may be a DC voltage containing an AC component. In this case it is connected to the rear EXT REF connector and the program code transmitted by the controller is X7.

3.4.20 External Reference Range Commands.

3.4.20.1 There are six ranges for external reference voltages applied to the external reference connector on the rear panel of the instrument. These are the 10 millivolt* through 1000 volt ranges listed in Table 3.12 under the 6000 Operation column. When using an external reference voltage in the remote mode, the controller must transmit the appropriate program code Y2* through Y7 to select the correct range for the external reference signal.

3.4.21 Min-Avg-Max Commands.

3.4.21.1 The Min-Avg-Max (MAM) commands used in remote operation allow operation of the instrument in exactly the same fashion as the MAM modes under manual operation. The program codes M0 through M6 listed in Table 3.12 are the equivalent of the keyboard controls used to operate the MAM feature of the instrument. To

*Y2-10mV range available only if Option 41 (preamp) installed.

perform a MAM measurement the controller must transmit a series of program strings as outlined in the following paragraph.

3.4.21.2 To initiate the MAM cycle, the controller must transmit the program code M6. This is equivalent of depressing the "Shift" and "MAM" keys on the keyboard. At the end of the desired measurement period, the controller should transmit the M0 program code to disable the MAM function. To acquire the results of the MAM measurement, the controller must call for each data result separately. This means the controller must transmit the program code M2, make the DMM a talker so that it can transmit the Min measurement value, make the DMM a listener so that it can be programmed with the M3 program code and thereby transmit the Avg measurement value and so on for each of the four measurement results from the MAM measurement cycles. Thus, for the controller to make a complete MAM measurement and acquire all the resulting data, the controller must transmit six program instruction strings; two (M6 and M0) to start and stop the MAM function followed by the M2 through M5 function codes to call for the results. The 6000, in turn, must transmit four measurement values: the minimum, the average, the maximum and the number of measurement samples.


3.4.21.3 When using MAM in conjunction with the GPIB, certain precautions should be taken to ensure that the 6000 isn't commanded over the bus while the Average is being up-dated internally. If the Average calculation is disrupted by GPIB programming, the accuracy of the average constant cannot be guaranteed, although the minimum, maximum and number of readings constants will not be jeopardized. For this discussion, all commands listed in Table 3.12 of the Operator's Manual are considered to be GPIB programming commands. It should be pointed out, however, that GPIB interface commands (such as Serial Poll) will not affect the accuracy of the average constant.

3.4.21.4 In order to guarantee the accuracy of the average constant, the programming of the MAM function should be handled as follows:

- a. Program the MAM function as usual using the M1 or M6 command.
- b. Delay as usual.
- c. Via the GPIB, Program the 6000 to be a talker and take two readings from it. These two readings can then be thrown away.
- d. Reprogram the 6000 as usual.

Steps should be taken to prevent delays of more than 10 milliseconds from occurring anywhere during or between steps c. and d. above. These steps may include the disabling of interrupts inside the controller and the execution of items c. and d. in succession.

3.4.21.5 This procedure guarantees that the 6000 will not be in the average calculation when reprogrammed via the GPIB. An HP 9825A example program using this procedure is shown.

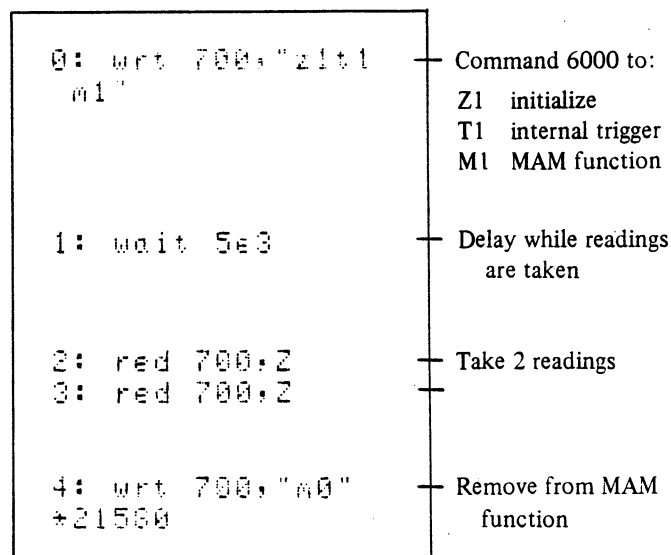

3.4.22 Calibration Commands.

3.4.22.1 The Series 6000, in normal manual or remote operation, automatically goes into a self calibration cycle (Auto-Cal) on a predetermined time schedule. In order to disable the Auto-Cal the controller must transmit program code K0. To reestablish the Auto-Cal timing the controller transmits program code K1. To command an immediate Auto-Cal the controller transmits program code K2.

3.4.22.2 When commanding autocal from a controller, the programmer needs to know when the autocal has finished so that he can continue program execution. The best way to do this is to command the autocal and trigger the 6000 and then wait for the 6000 to output the resulting reading. For

```
0: wrt 700, "k2t3  
t0"  
1: red 700,Z
```

example, in the calculator program shown above, the 6000 is programmed to the hold mode (T3), an autocal is commanded (K2), and a reading is triggered (T0). The controller then waits for the reading to be transmitted to it from the 6000, which is an indication that the autocal has completed. The reading may then be processed as usual. If the programmer wishes to receive an SRQ when the autocal has completed, the D1 command may be added to the program string in the above example.

3.4.23 Equation Command.

3.4.23.1 To enter the instrument into the arithmetic mode of operation, the controller must transmit the program code Q1. Upon receipt of this command, the instrument will perform the arithmetic equation using the constants in storage. Before calling for the equation function, the controller should transmit any constants required for use in the equation or arithmetic functions. If no constants have been transmitted and stored, prior to transmission of the program code Q1, the equation will have no effect on the present reading. This results when initialization sets the A constant at 0 and the constants B and C to 1.

3.4.24 Variable Manipulation Commands (A, B or C).

3.4.24.1 In a manner similar to that for manual operation, the controller can store or clear all arithmetic variables used in the mathematics equation. The codes for storing, clearing or the transmission of the variables are shown in Table 3.12. For example, to store 1.25 in the constant "A" location the controller must transmit 1.25A1.

3.4.25 Initialization Commands.

3.4.25.1 The controller can initialize the Series 6000 much in the same manner that the operator would use. In manual mode, the operator may depress the "Shift" and "Initialize" keys. This puts the instrument into the initialized state. The instrument can be initialized from the GPIB by using the command code Z1.

3.4.25.2 The Z1 command is equivalent to the program string F1, R0, T3, N0, P1, H0, J0, X0, M0, Q0, W0. The initialization command causes Null, HLL, MAM, Filter, Equation [(X-A)B/C] and Status Output (of Cal constants) to be disabled, Internal Reference and Numeric Display to be enabled and sets the DMM to DC Volts, Autorange and Hold condition.

3.4.26 Fast Analog-to-Digital (Fast A/D) Operation.

3.4.26.1 Measurement information can be obtained and transmitted at a high speed rate if the Fast A/D mode is used (Option 03 or 03SH).

3.4.26.2 GENERAL OPERATION PROCEDURES.

3.4.26.2.1 When programming the Fast A/D from the GPIB, it is important to note that program codes will produce a delay period before the 6000 is able to begin taking readings from the Fast A/D. Each command string sent to the 6000 will cause a delay of 1 timeout (reference Table 3.19) plus approximately 3 milliseconds. As an example, if the 6000 is in the DC function, then any command string sent to the DMM will cause a timeout of 30 milliseconds (for the DC function) plus approximately 3 milliseconds. After the command string has been executed and the 33 millisecond delay is completed, the 6000 will begin to take readings from the Fast A/D.

3.4.26.2.2 For most Fast A/D GPIB applications, the P0 command (disable front panel) should be used in conjunction with the I0 (Fast A/D) command. The P0 command will disable both the display and the keyboard of the 6000. If an I0 P0 command is sent by the controller, then a P1 command (enable front panel) must be sent before the 6000 is returned to local operation.

3.4.26.3 INTERNAL TRIGGER.

3.4.26.3.1 The Fast A/D can be programmed to trigger internally by sending the command string I0 P0 T1 to the 6000. The time between readings may then be controlled via the S command (delay).

3.4.26.3.2 In order to operate the Fast A/D at the fastest conversion rate, the controller should transmit 000 S1 which indicates no A/D delay. The numbers preceding the S1 command may range from 000 thru 255 (reference Table 3.12 for the delay formula).

3.4.26.3.3 As shown in Figure 3.27, the Fast A/D information is transmitted over the GPIB in two bytes by the 6000. Bits 1 thru 6 of each byte contain the data information (in two's complement), and bit 8 (DIO8) is the byte identification bit (1 for the first byte and 0 for second byte).

3.4.26.3.4 The controller must be fast enough to accept each byte as it becomes available from the 6000. Therefore, the controller has to be faster than the 6000 in order to guarantee that no data will be lost. If the controller is too slow to accommodate the data rate of the 6000 certain bytes of the data will include a 1 in the overrun flag position (DIO7).

3.4.26.3.5 If the overrun bit is detected, the delay between readings should be increased by programming a larger delay constant as referenced in paragraph 3.4.26.3.2 and Table 3.12.

3.4.26.4 EXTERNAL TRIGGER.

3.4.26.4.1 The Fast A/D can be programmed to wait for an external trigger by sending the command string I0 P0 T2 to the 6000. The time between readings may then be controlled by applying trigger pulses to pin 14 or pin 15 of the Fast A/D or Sample and Hold Fast A/D connector.

3.4.26.4.2 When the 6000 is in the external trigger mode, the external triggers will be ignored until the internal delay period is completed (reference paragraph 3.4.26.2.1). At the end of the delay period, the 6000 will monitor the Fast A/D, waiting for an external trigger. The 6000 transmits the GPIB data bytes in the same format as described in subsection 3.4.26.3, except that the DIO7 bit is always 0.

3.4.26.4.3 If the external trigger rate exceeds the rate at which data bytes are taken from the 6000, then the DMM will output only the first byte of each two byte data word.

3.4.27 dB Commands.

3.4.27.1 Decibel measurement is handled in the remote mode very much the same as in bench operation mode. To enable dB measurement the controller transmits program code L1. To disable the function the controller transmits

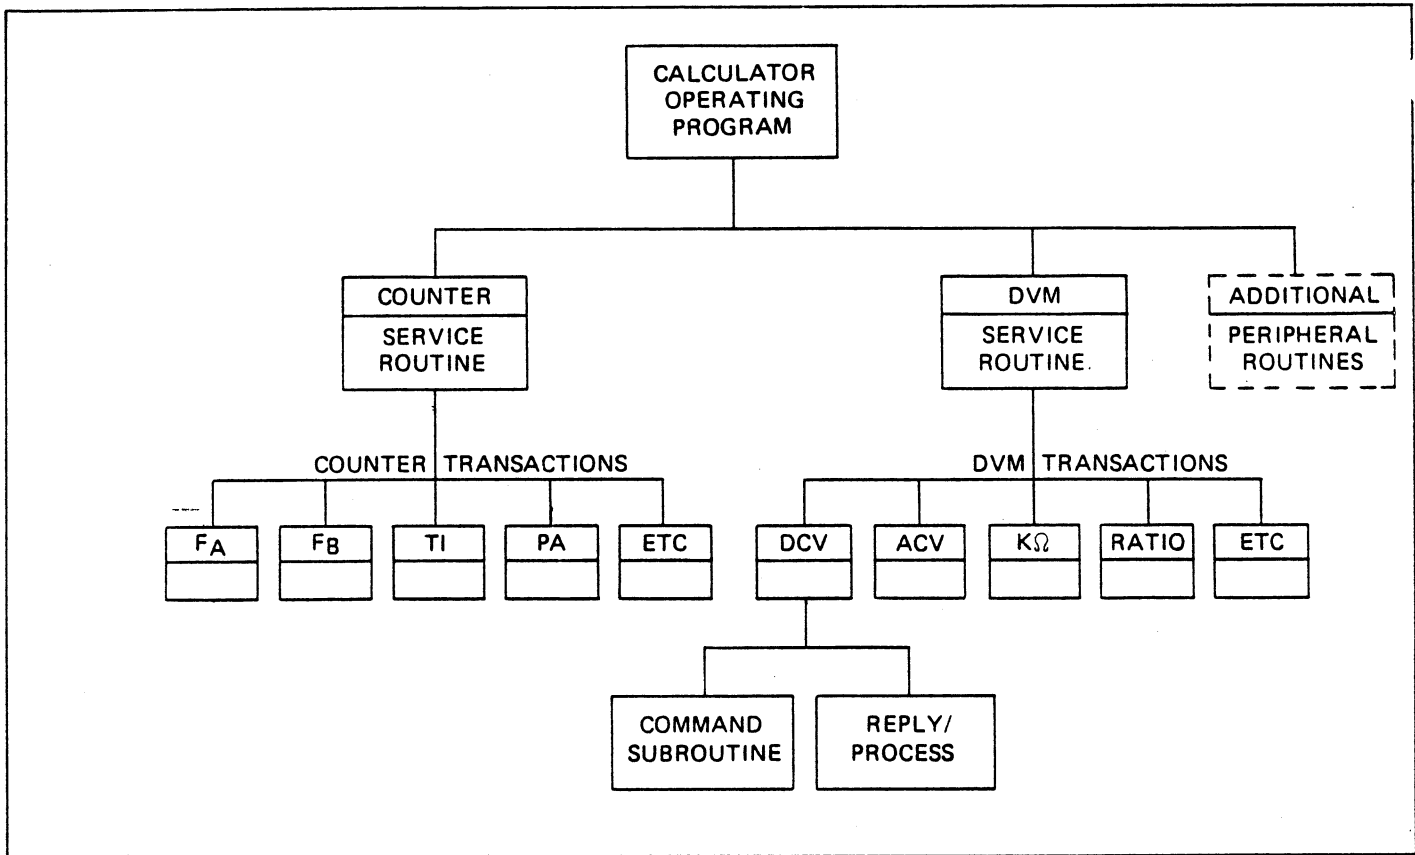


Figure 3.15 - Software Organization

L0. Just as in the bench operation mode the controller can change the value of the internal reference resistor from its normal 600 ohm value to a new desired value by transmitting the value followed by the program code L2.

3.4.28 Software Organization.

3.4.28.1 The following paragraphs are presented to acquaint the operator with the device messages used when operating the 6000 DMM and to explain the relationship of these device dependent messages to the user's overall software package.

3.4.28.2 A calculator, computer or other controller device software package usually includes a collection of transactions, service routines and subroutines for controlling all of the elements of a system. The relationship of the various parts of a typical software operating system are illustrated in Figure 3.15. A complete operating system may include the main executive program, the keyboard monitor program, some form of statistical routine, an arithmetic or decision making routine and a set of peripheral servicing routines. Figure 3.15 illustrates a portion of a software package referred to as an operating system. The portion illustrated is a typical collection of peripheral service routines. These

peripheral service routines are groups of subroutines known as transactions. Note that the illustration shows a service routine for a counter, a digital voltmeter and a number of additional peripheral equipments. A DVM service routine for the Series 6000 might include a number of transactions depending on the application of the instrument in the system. Each transaction will include the bus commands and device messages necessary to accomplish the specific function for each transaction. Note that the transactions shown are for DCV (DC volts), ACV (AC volts), $K\Omega$ (kilohms), Ratio and any number of other transactions necessary for the particular counter application. Note that under the DCV transaction block a further breakdown is illustrated: that of the command subroutine and the reply or process subroutine. This is the point in the overall software structure that the 6000 device messages appear.

3.4.28.3 VOLTMETER TRANSACTIONS.

3.4.28.4 Figure 3.16 illustrates a typical voltmeter transaction designed to operate the Series 6000. The left-hand column of the illustration titled Bus Action or Message contains a sequence of bus control line titles and device characters. The second column of the illustration indicates


whether the controller or the DMM is controlling the bus or transmitting the characters. This column is titled Active Unit or Talker. The boxes to the right of the second column identify the portion of the transaction as the command subroutine or the reply subroutine. Note that the command portion of the transaction includes an interface message which establishes the talker/listener relationship and the device dependent message which instructs the DMM to perform a specific operation. Once the peripheral, in this case the 6000 DMM, has been programmed to perform a function, the controller transmits the second interface message to reestablish the listener/talker relationship and the 6000 makes the measurement and transmits the data over the interface bus.

3.4.29 Constant Manipulation From The GPIB.

3.4.29.1 There are 10 constant storage locations inside the 6000 which can be used regardless of whether the corresponding mode is selected or not. These locations are:

- NULL
- A
- B
- C
- HLL₁ - HLL₆

3.4.29.2 Two main buffers are used in GPIB operation. The output buffer holds the ASCII characters which are waiting to be transmitted to the controller. The input buffer has two uses. During the entry of numerical constants from the bus, the input buffer is used as the holding register. Also, the input buffer is used to hold the number which was most recently transferred to the output buffer. For instance, if given the command N2, the input buffer will contain the value of the null constant. Also, the output buffer will contain the ASCII characters corresponding to the null constant. If a reading is taken, it will be placed in both the input and output buffers.

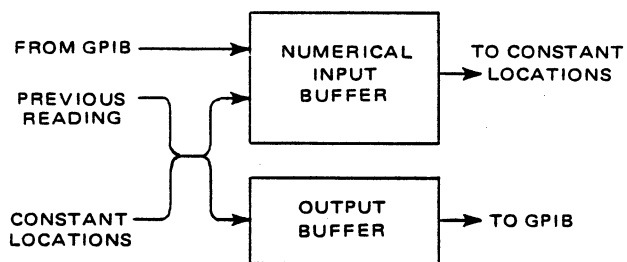

| Bus Action or Message | Active Unit or Talker | Transaction | |
|---|-----------------------|--|--------------------|
| IFC | | Interface Message | COMMAND Subroutine |
| ATN | | | |
| UNLISTEN | C | | |
| I TALK | C | | |
| YOU LISTEN | C | | |
| F1 | C | Device Dependent Message Command Characters | |
| R5 | C | | |
| T1 | C | | |
| ATN | | Interface Message | REPLY Subroutine |
| UNLISTEN | C | | |
| YOU TALK | C | | |
| I LISTEN | C | | |
| + 1 . 0 2 5 9 6 8 E + 0 1 CR LF | 6000 ↓ 6000 | Peripheral Message Reply (Data, Status) Characters | |

Figure 3.16 - 6000 DMM Transaction For DC Volts Measurement

3.4.29.3 Whenever a 'store' command such as H3 or A1 is executed, the present contents of the input buffer are stored in the given location. For instance, if a reading is completed and then a B1 command is given, the reading will be stored in B. If the command $-2.05E-7A1$ is executed, $-2.05E-7$ will be stored in A. A constant can be transferred from one location to another as follows: 1) move the constant to the buffers by using a transmit command, 2) transfer the contents of the input buffer to the new location with a store command. As an example, C2H4 moves the contents of C into HLL3 without disturbing C.

3.4.29.4 Whenever transfer of multiple constants over the bus (to the Model 6000) is required, the constants should be separated from each other by a CR (carriage return), a LF (line feed) or both. With most controllers this places a limit of one constant to the bus per command string.


3.4.30 External Trigger.

3.4.30.1 DMM can be triggered via rear panel BNC connector after being placed in the 'Hold' mode via the keyboard (see Table 3.2 reference (23)) or after having received a T2 or T4 command via the GPIB (see Section 3.4.11).

Logic Compatibility: TTL
Required Drive Capability

Source: 0 mA
Sink: 2 mA

Required Timing:

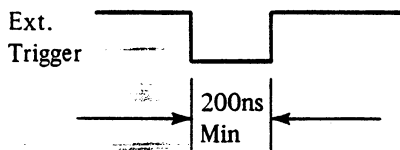

Maximum Fall Time: $1\mu S$

Delay between falling edge of external trigger and start of reading: $< 1\mu S$

NOTE

If a mechanical switch is used to generate the external trigger, contact bounce should be limited to $10\mu S$ at the waveform's falling edge and $0\mu S$ at the rising edge.

3.4.31 Read Rate Time Estimate .

3.4.31.1 The following GPIB Read Timing Program using the Hewlett Packard HP9825 calculator is presented as one example to estimate the DMM's throughput when successive readings are taken on different functions and ranges. This program string allows the programmer to estimate the time necessary to program the 6000 to a Function or Range, settle to 0.01%, take a reading, and output the reading to the bus.

Program String: Wrt 700, "FIR5"; red 700, A

3.4.31.2 Figure 3.17 shows the two GPIB lines ATN and DAV (Attention and Data Valid) along with the DMM's integrator waveform which indicates when a reading takes place. Also shown are the other delays needed to calculate the DMM's throughput time. From the figure, the total time = (10 ms) + (timeout time) + (signal integrate) + (reference integrate) + (15 ms).

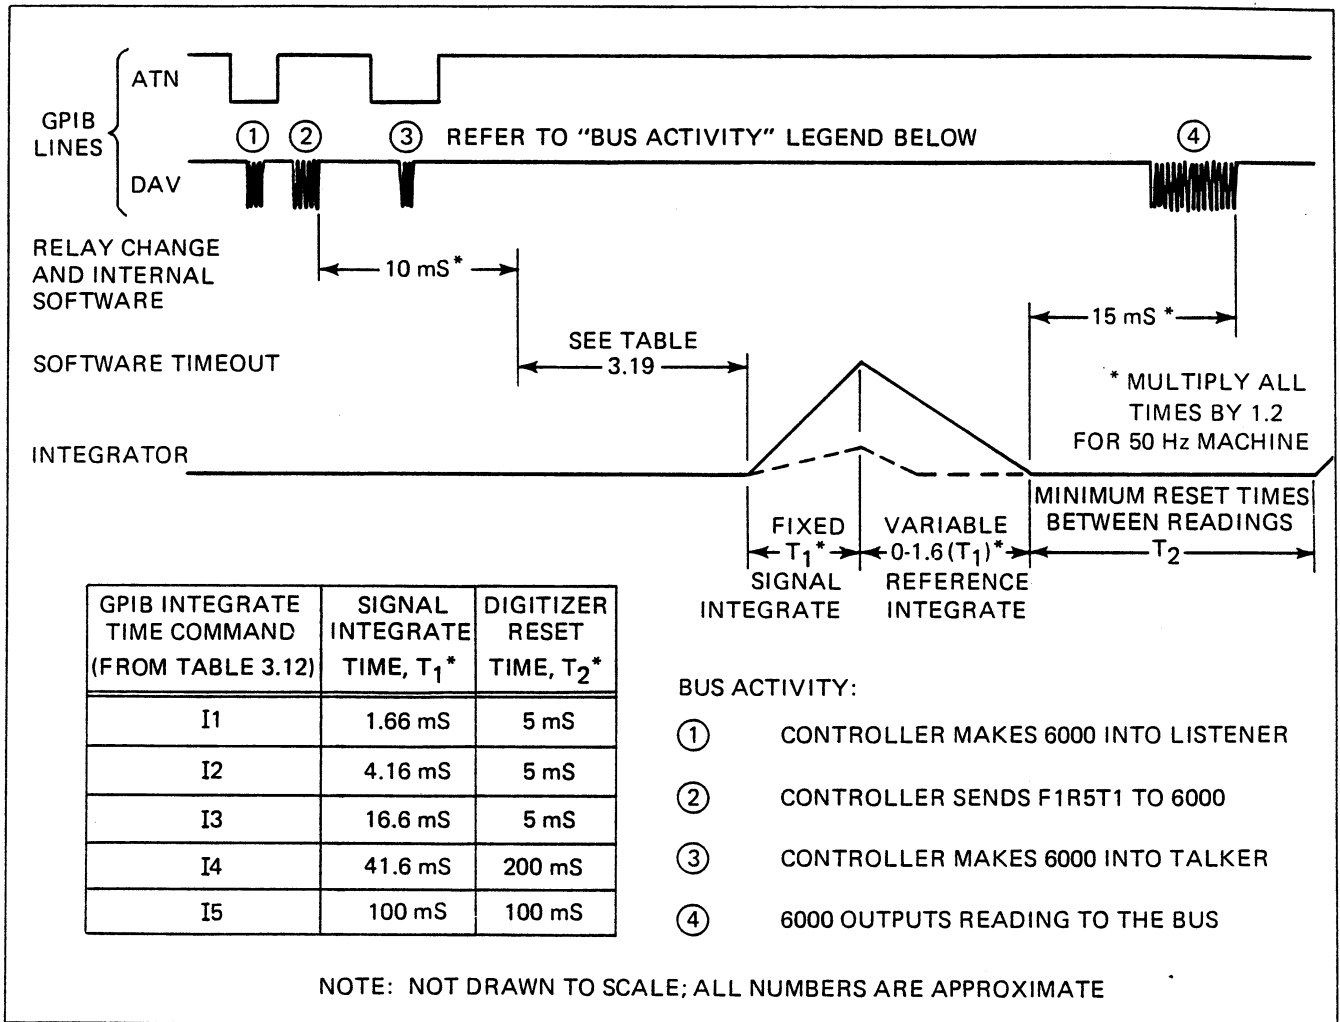


Figure 3.17 - Program/Read Timing Chart

Table 3.12 - Model 6000 GPIB Programming Codes

INTEGRATION TIME COMMANDS

| 6000 Operation | Program Code | Special Notes |
|-------------------------|--------------|---|
| Fast A/D | I0 | Usable in internal trigger and external trigger modes only (T_1 , T_2). 4 1/2 digit display; automatically initiates Auto-Cal. 5 1/2 digit display; automatically initiates Auto-Cal. 6 1/2 digit display; automatically initiates Auto-Cal. |
| 1.6 mS Integration Time | I1 | |
| 4 mS Integration Time | I2 | |
| 16 mS Integration Time | I3 | |
| 40 mS Integration Time | I4 | |
| 100 mS Integration Time | I5 | |

NULL COMMANDS

| 6000 Operation | Program Code | Special Notes |
|----------------|--------------|---|
| Disable Null | N0 | Subtracts null constant from reading. Stores previous reading or entered constant as null constant. Output null constant to GPIB. |
| Enable Null | N1 | |
| Store as Null | N2 | |
| Transmit Null | N3 | |

Table 3.12 - Model 6000 GPIB Programming Codes (continued)

DISPLAY COMMANDS

| 6000 Operation | Program Code | Special Notes |
|-------------------------|--------------|---|
| Disable Numeric Display | P0 | Reduces internal DVM cycle time by 3 ms for faster read rates, etc. |
| Enable Numeric Display | P1 | |

INTERRUPT COMMANDS

| 6000 Operation | Program Code | Special Notes |
|------------------------|--------------|--|
| No SRQ when Data Ready | D0 | Informs controller when reading is ready to output to the GPIB |
| SRQ when Data Ready | D1 | |

FUNCTION COMMANDS

| 6000 Operation | Program Code | Special Notes |
|----------------------|--------------|-------------------------------------|
| DC Volts | F1 | RMS AC converter must be installed. |
| AC Volts | F2 | |
| AC Volts, DC Coupled | F3 | |
| Ohms | F4 | |

RANGE COMMANDS

| 6000 Operation | Program Code | Special Notes |
|--------------------|--------------|--|
| AUTO Range | R0 | Upranges automatically to 100 mV if overload occurs. Remains on 10 mV range if overload occurs. |
| 10mV-1 Ω | R1 | |
| 10mV-10 Ω | R2 | |
| 100mV-100 Ω | R3 | |
| 1V-1K Ω | R4 | |
| 10V-10K Ω | R5 | |
| 100V-100K Ω | R6 | |
| 1000V-1M Ω | R7 | |
| Auto-10M Ω | R8 | |
| Auto-100M Ω | R9 | |

Table 3.12 - Model 6000 GPIB Programming Codes (continued)

TRIGGER COMMANDS

| 6000 Operation | Program Code | Special Notes |
|--------------------------------|--------------|---|
| Trigger Immediate | T0 | Normally used in conjunction with T3. |
| Internal Trigger | T1 | Causes continuous readings. |
| External Trigger | T2 | Waits for trigger from rear panel BNC or from Fast A/D trigger input. |
| Hold/Manual | T3 | Waits for trigger from GPIB or from keyboard. |
| External Trigger with Timeouts | T4 | } Same as T ₂ and T ₃ , except that an internal time delay is inserted to allow for analog settling times |
| Hold/Manual with Timeouts | T5 | |

EQUATION COMMAND

| 6000 Operation | Program Code | Special Notes |
|--|--------------|------------------------------|
| No Equation | Q0 | Returns to normal operation. |
| Perform Equation $\frac{(X-A)B}{C}$ | Q1 | Enables offset and scaling. |

VARIABLE MANIPULATION COMMANDS (A, B, or C)

| 6000 Operation | Program Code | Special Notes |
|-------------------|----------------|--|
| Clear Constant | A0 or B0 or C0 | A0 sets A to zero; B0 or C0 set B or C to 1.0. |
| Store as Constant | A1 or B1 or C1 | Stores previous reading or entered constant into A, B, or C. |
| Transmit Constant | A2 or B2 or C2 | Outputs present value of A, B or C to the bus. |

INITIALIZE COMMANDS*

| 6000 Operation | Program Code | Special Notes |
|----------------|--------------|---|
| Initialize | Z1 | Same as F1 R0 T3 N0 P1 H0 J0 X0 M0 Q0 W0 F1 DC R0 Autorange T3 Hold Mode N0 Disable NULL P1 Enable Display H0 Disable HLL J0 Disable Filter X0 Disable Ext. Ref. M0 Disable MMM Q0 Disable (X-A)B/C W0 Disable Status Output |

* Note that a Z1 command differs slightly from the keyboard command "Initialize".

Table 3.12 - Model 6000 GPIB Programming Codes (continued)

EXTERNAL REFERENCE RANGE COMMANDS

| 6000 Operation | Program Code | Special Notes For use with "X" commands |
|----------------|--------------|--|
| 10mV* | Y2* | DC software ratio only. This reference range selected automatically with "X5". These reference ranges OK with "X2", "X3", "X6", "X7". These reference ranges permitted with "X1". |
| 100mV | Y3 | |
| 1V | Y4 | |
| 10V | Y5 ← | |
| 100V | Y6 | |
| 1000V | Y7 | |

*Available only if Option 41 (Preamp) installed.

MIN-AVG-MAX COMMANDS

| 6000 Operation | Program Code | Special Notes |
|----------------------------|--------------|---|
| Disable MAM | M0 | Returns to normal operation. |
| Clear & Enable MAM | M1 | Initializes MIN, AVG, MAX and enables MAM. |
| Transmit MIN | M2 | Outputs MIN to the GPIB. |
| Transmit AVG | M3 | Outputs AVG to the GPIB. |
| Transmit MAX | M4 | Outputs MAX to the GPIB. |
| Transmit Number of Samples | M5 | Outputs Number of Samples to the GPIB. |
| Enable MAM | M6 | Enables MAM without initializing the MIN, AVG or MAX. |

CALIBRATION COMMANDS

| 6000 Operation | Program Code | Special Notes |
|------------------------|--------------|---|
| Disable Auto Cal | K0 | Prevents Auto-Cal from occurring automatically. |
| Normal Auto Cal Timing | K1 | Allows Auto-Cal to initiate themselves automatically. |
| Do Auto Cal Now | K2 | Perform an Auto-Cal immediately. |

Table 3.12 - Model 6000 GPIB Programming Codes (continued)

FAST A/D DELAY COMMANDS

| 6000 Operation | Program Code | Special Notes For use with "I0" and "T1" commands |
|----------------|--------------|--|
| Clear Delay | S0 | Same as "000S1"; sets fast A/D delay = 0 and inhibits data overrun error check. |
| Store Delay | S1 | <p>"nnnS1" stores a delay constant where nnn is between 000 and 255. A non-zero delay enables data overrun error check.</p> <p>"S0" or "0S1" gives a delay of 79 μs. } 60 Hz line "nnnS1" gives a delay of (95+ nnn * 44) μs. } voltage only</p> <p>"S0" or "0S1" gives a delay of 95 μs. } 50 Hz line "nnnS1" gives a delay of (114+ nnn * 52.8) μs. } voltage only</p> |

dB COMMANDS

| 6000 Operation | Program Code | Special Notes "H1" and "L1" cannot be performed simultaneously |
|------------------------|--------------|--|
| dB Disable | L0 | Returns to normal operation. |
| Enable dB | L1 | Enables dB function. |
| Store as dB Resistance | L2 | Stores the previous reading or entered constant as the reference resistance for dB calculations. |

STATUS OUTPUT COMMANDS

| 6000 Operation | Program Code | Special Notes |
|--|--------------|--|
| No Status Output | W0 | Returns to normal operation. |
| Output Cal Constants for this function and range | W1 | <p>Outputs positive offset, negative offset, positive and negative scale factors (4 constants) and then returns to normal operation.</p> <p>When using W1 it should be the last command in the program string.</p> |

FAST A/D CONFIGURATION COMMANDS

| 6000 Operation | Program Code | Special Notes For use with S/H Fast A/D |
|----------------------------|--------------|--|
| Fast A/D to Isolator | G0 | Connects Fast A/D input to DVM input terminals via the isolator. |
| Fast A/D to rear connector | G1 | Connects Fast A/D input to Fast A/D connector on back panel. |

Table 3.12 - Model 6000 GPIB Programming Codes (continued)

HIGH-LOW-LIMIT COMMANDS

| 6000 Operation | Program Code | Special Notes "H1" and "L1" cannot be performed simultaneously |
|---------------------------------------|--------------|--|
| Disable HLL | H0 | Returns to normal operation. |
| Enable HLL Function | H1 | See text for description of output format. |
| Enter HLL Constants 1 thru 6 | H2 thru H7 | Stores the previous reading or an entered constant as HLL 1 thru HLL 6. |
| Transmit all 6 Constants | H8 | Transmitted in reverse order (HLL6...HLL1) over the GPIB When using H8 it should be the last command in the program string. |
| Initializes HLL Constants 1 thru 6 | H9 | HLL constants are cleared. |

FILTER COMMANDS

| 6000 Operation | Program Code | Special Notes |
|----------------|--------------|-----------------------------------|
| Filter Out | J0 | |
| Filter In | J1 | Selects the 4-pole active filter. |

FRONT/REAR INPUT COMMANDS

| 6000 Operation | Program Codes | Special Notes |
|----------------|---------------|--|
| Front Input | V0 | Measurements taken from the front input terminals. |
| Rear Input | V1 | Measurements taken from the rear input terminals. |

EXTERNAL REFERENCE FUNCTION COMMANDS

| 6000 Operation | Program Code | Special Notes |
|----------------------------------|--------------|---|
| Internal Reference | X0 or X4 | Normal mode of operation. |
| Software Ratio DC | X1 | |
| Software Ratio AC | X2 | Reference applied to input terminals which were not selected via the "V" command. |
| Software Ratio AC, DC Coupled | X3 | |
| Hardware Ratio DC | X5 | Reference applied to external reference terminals. |
| Hardware Ratio AC | X6 | |
| Hardware Ratio AC, DC Coupled | X7 | |

3.5 PARALLEL BCD OPERATION.

3.5.1 This subsection presents information on the Parallel BCD operation in the 6000.

3.5.2 Printer Output J212.

3.5.2.1 Through this connector the 6000 supplies BCD representations of the decimal display; various flags or indicators of the mode of operation, function and range; and a print command. Provision has also been made for 60 Hz instruments to accept a fast (17 readings per second maximum) or a superfast (50 readings per second minimum) read command. In 50 Hz units, the fast command obtains 14 readings per second, minimum, and the superfast command 49 readings per second.

3.5.3 Program Input J209.

3.5.3.1 Through this connector the 6000 receives externally generated signals that select the function, range, mode of operation, auto calibration and initiate the read commands.

3.5.4 Logic Levels And Electronic Interface.

3.5.4.1 TTL-compatible positive-true logic levels are used in the 6000. In some instances, however, complementary signals are used. These terms are more specifically defined below:

Signals and Their Complements –



3.5.4.2 If the non-inverting output of gate A is defined as signal X, then it follows that the inverting output is \bar{X} ; in other words, the complement of X is \bar{X} . The truth table shows that the two signals X and \bar{X} , are by definition, in opposite logic states (see Table 3.13).


Table 3.13 - Positive True Logic Relationships

| Signal | Logic State | Voltage Level of Output Line "X" | Voltage Level of Output Line " \bar{X} " |
|--------|--------------|----------------------------------|--|
| "X" | True or "1" | 2.4 - 5.0 Volts | 0.0 - 0.4 |
| | False or "0" | 0.0 - 0.4 Volts | 2.4 - 5.0 |

3.5.4.3 As seen above, if gate A has a true or "1" level on output X, its voltage level is the most positive of the two ranges present, and output \bar{X} must be in a false or "0" state with the lowest or most negative voltage range present. The reverse would be true for a false or "0" level on output X.


3.5.4.4 DRIVING THE INPUTS.

3.5.4.4.1 All inputs are low power schottky TTL compatible and most are the equivalent of one 74LS series TTL input with a pull-up resistor for contact closure operation.

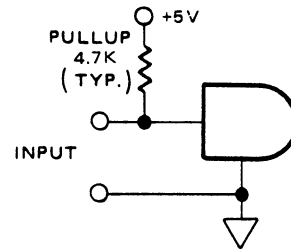

3.5.4.5 TTL LOADING CONDITIONS.

3.5.4.5.1 To input a "1" level the pull-up resistor will supply the necessary source current (40 μ A) to maintain the minimum 2.4 volts. In fact, the pull-up resistor will maintain a one level as long as the input source resistance (R1) to ground is greater than 7.5K ohms.

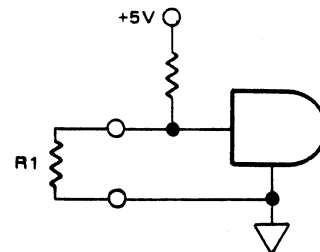

3.5.4.5.2 To input a "0" level, at least .5 ma of current must be sunk maintaining the input voltage below 0.4 volts. This requires a resistance to ground of 800 ohms or less.

3.5.4.6 EXCEPTIONS TO INPUT LOADING CONDITIONS.

- a. Program Storage Input (J209, pin B-18) is the standard TTL inputs and requires a minimum 2 ma sinking current, or 200 ohms or less to common.
- b. Maximum input voltage level, referenced to common, must not exceed 5.5 volts peak. Otherwise, gate destruction will occur.

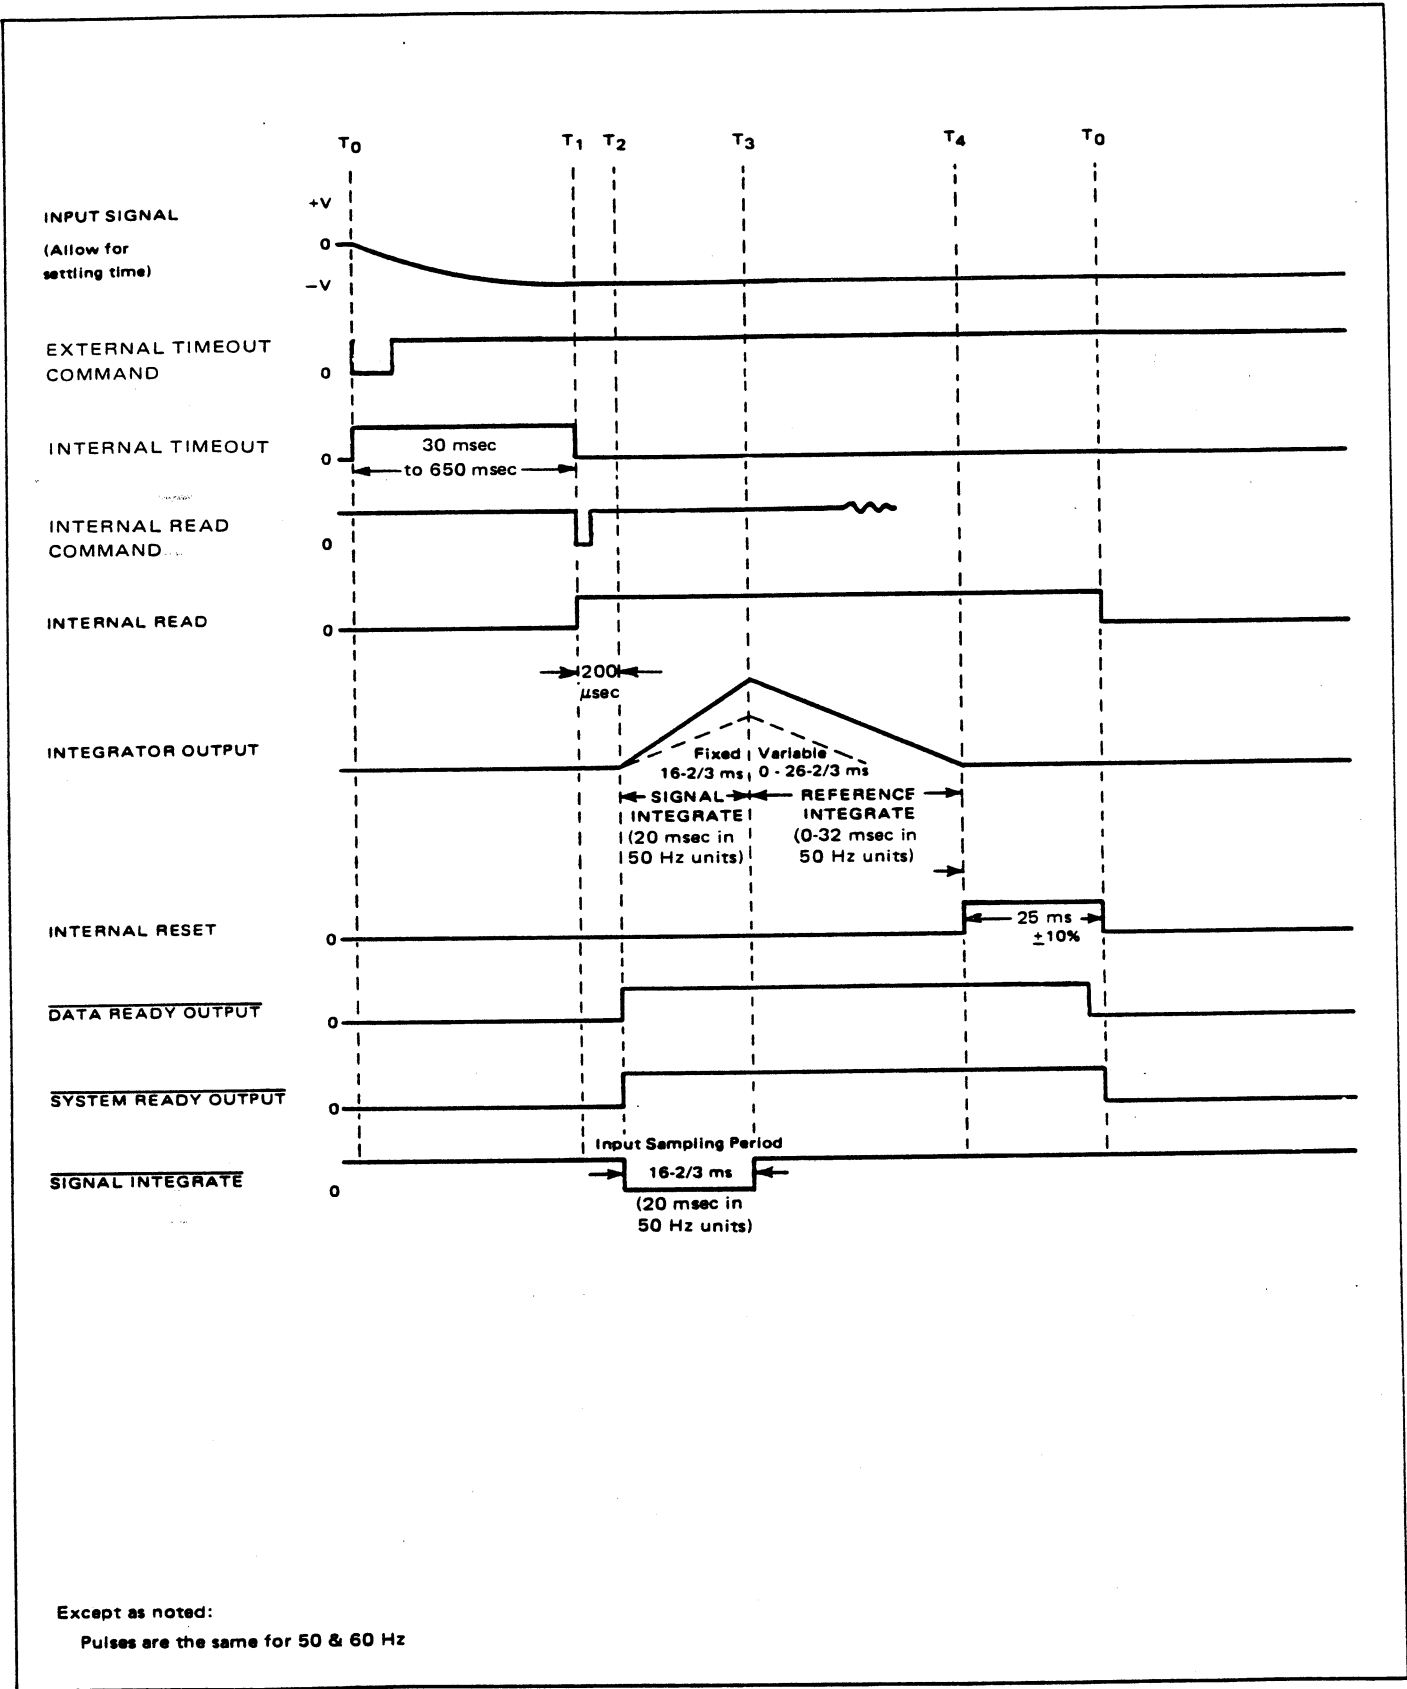


Figure 3.18A - Measurement Sequence with Timeout Command

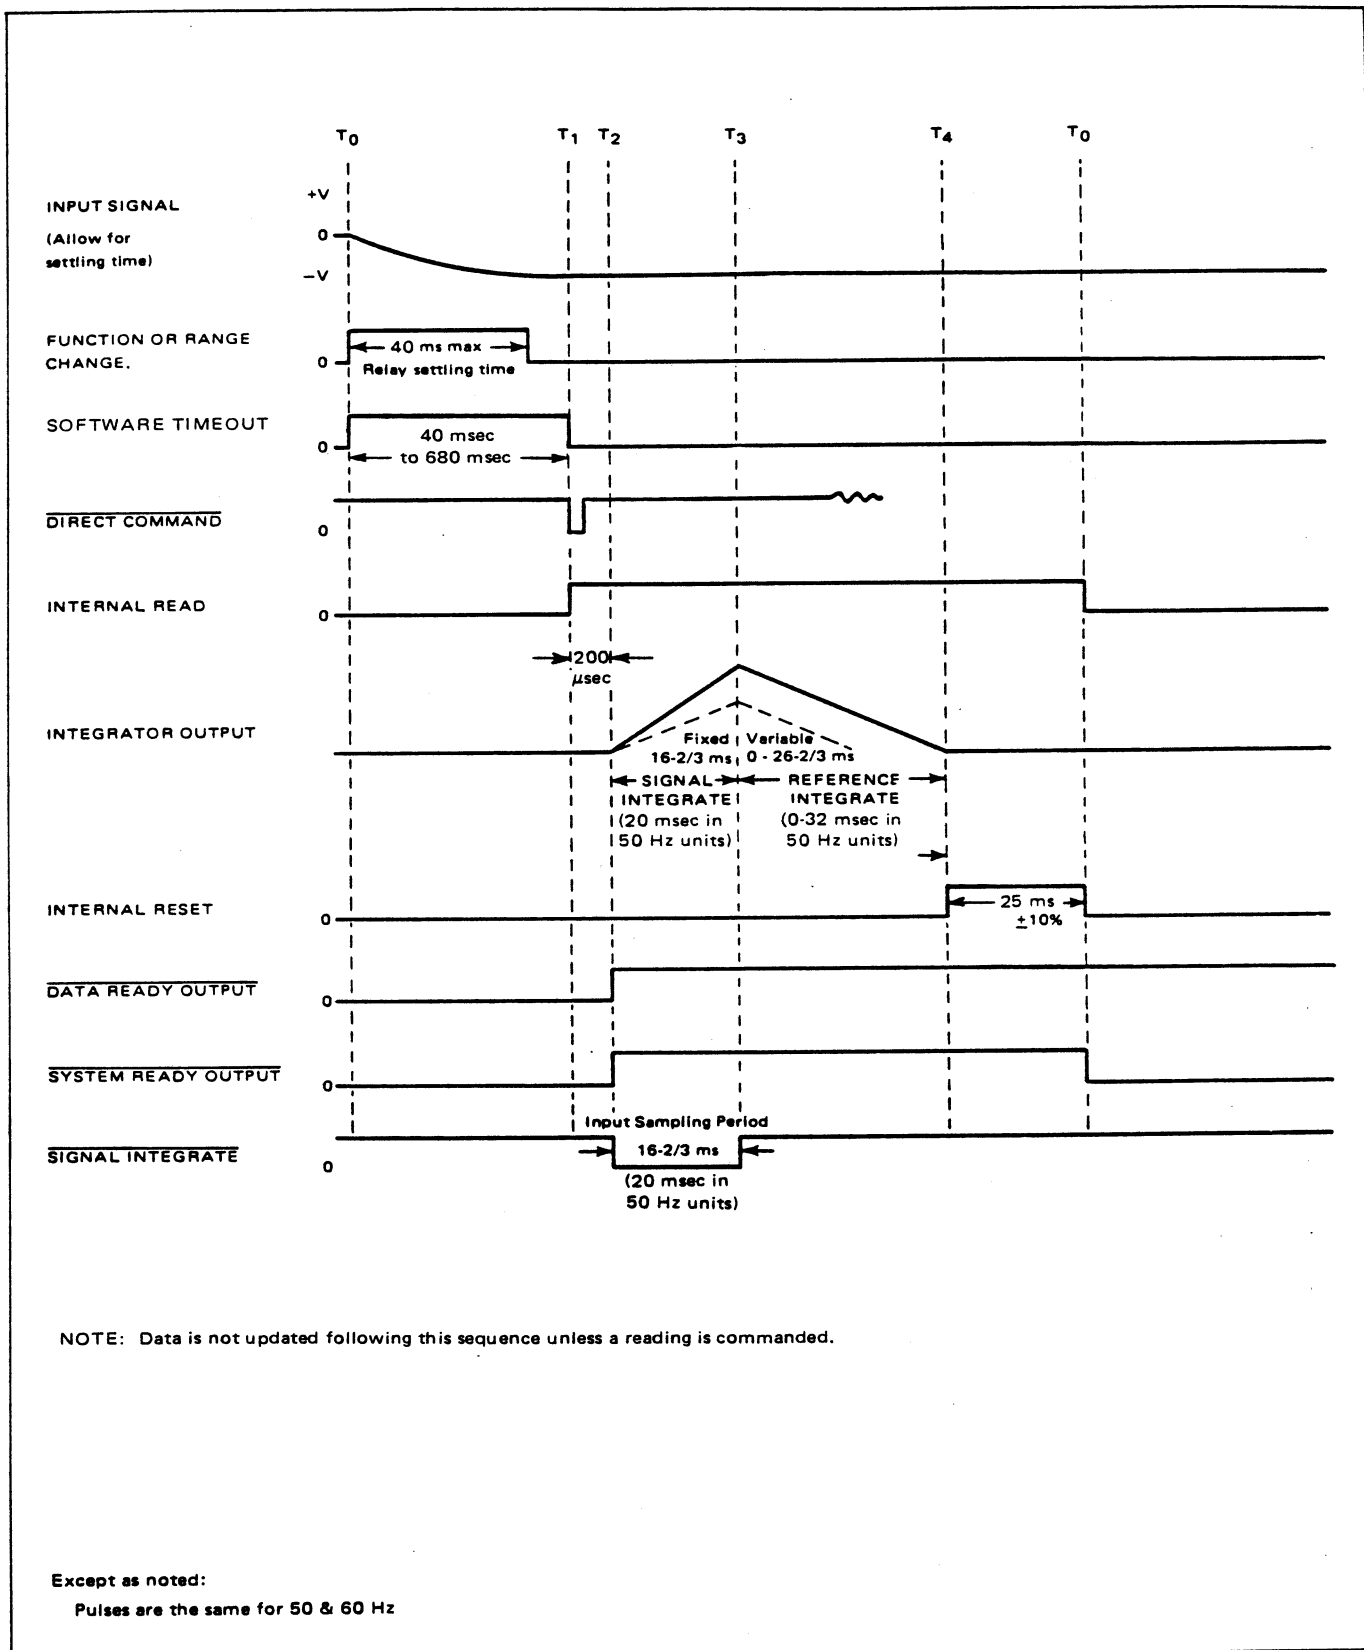


Figure 3.18B - Timing Sequence, Range or Function Change, No External Command

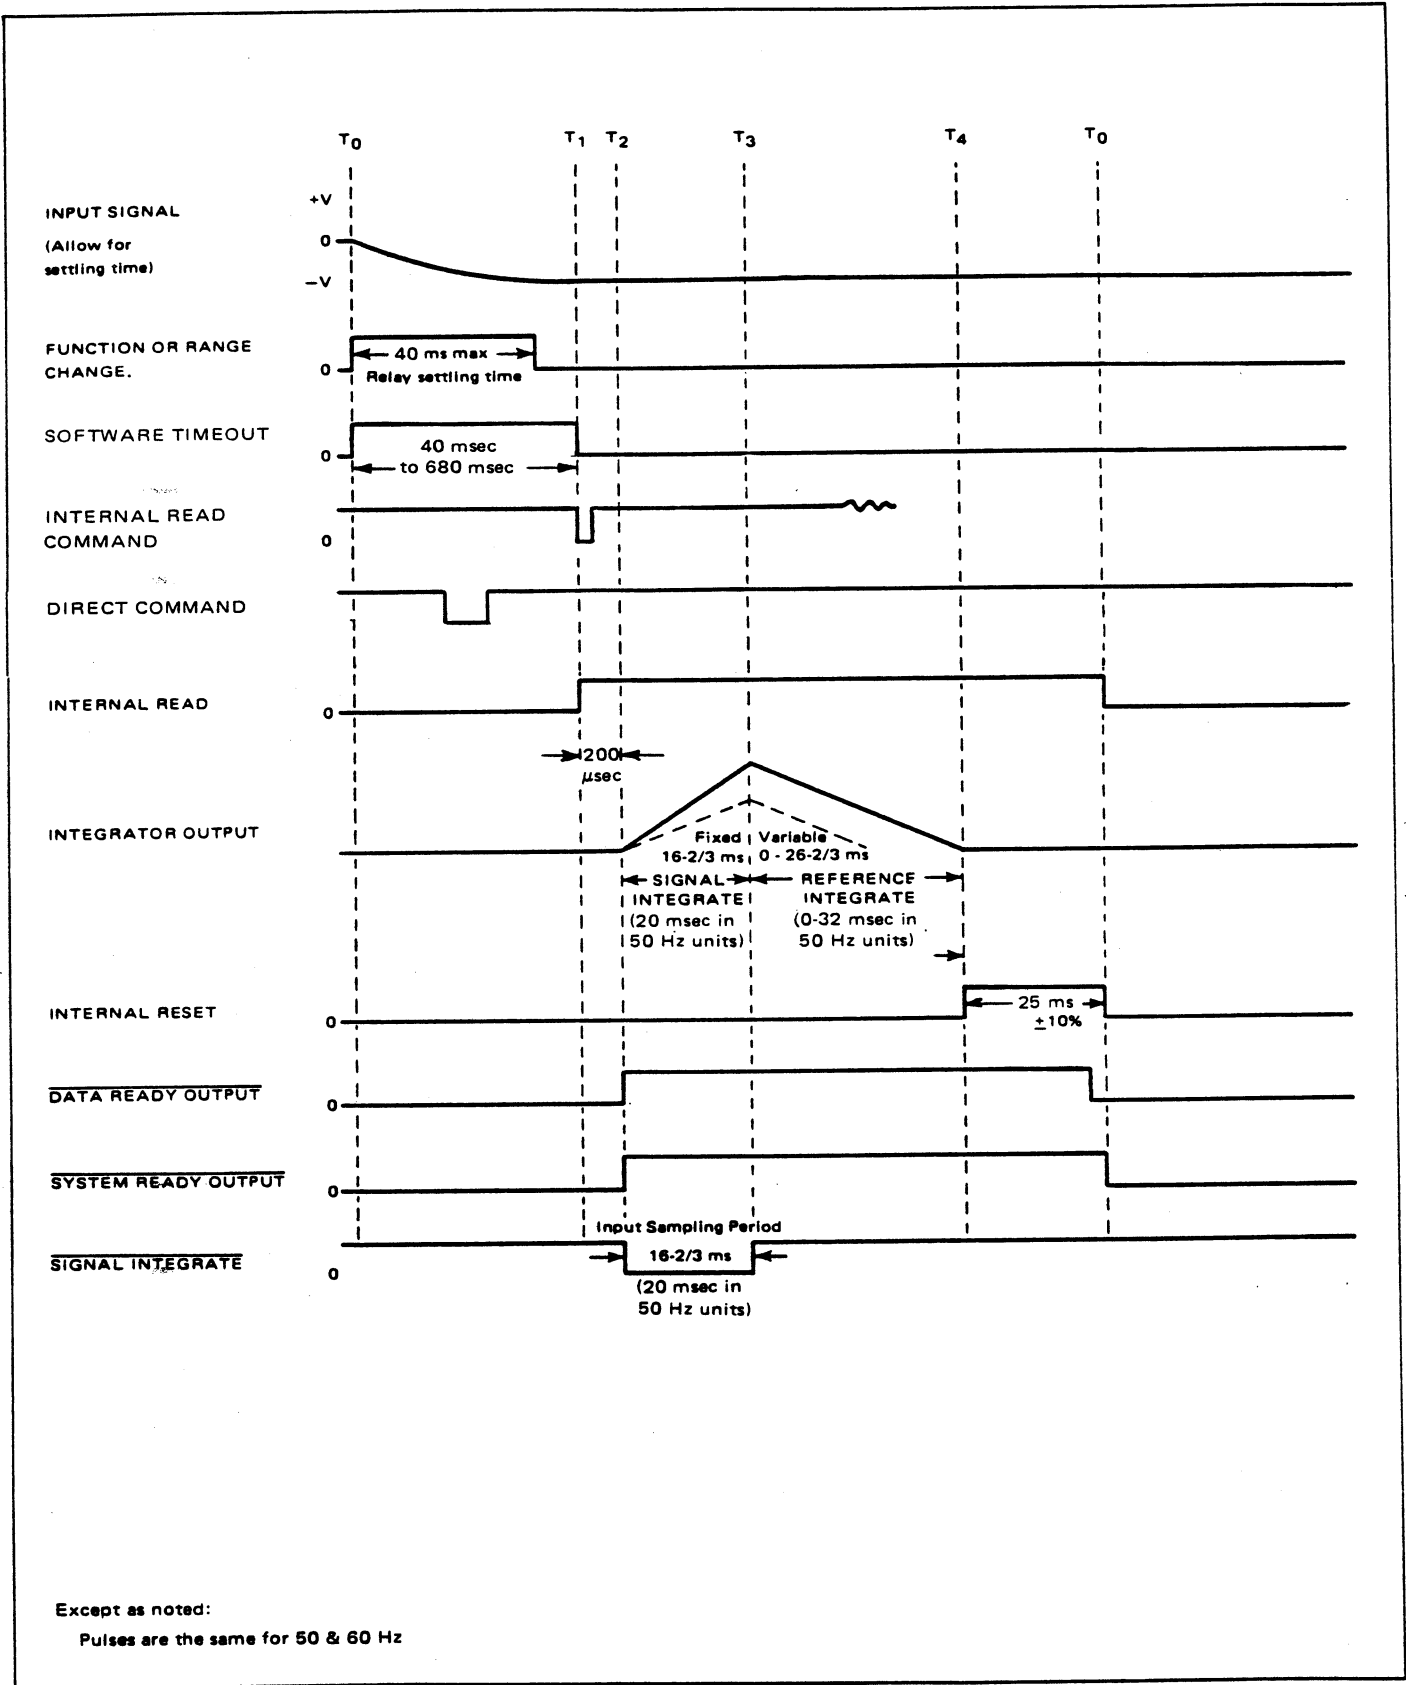


Figure 3.18C - Measurement Sequence, External Direct Command with Range or Function Change



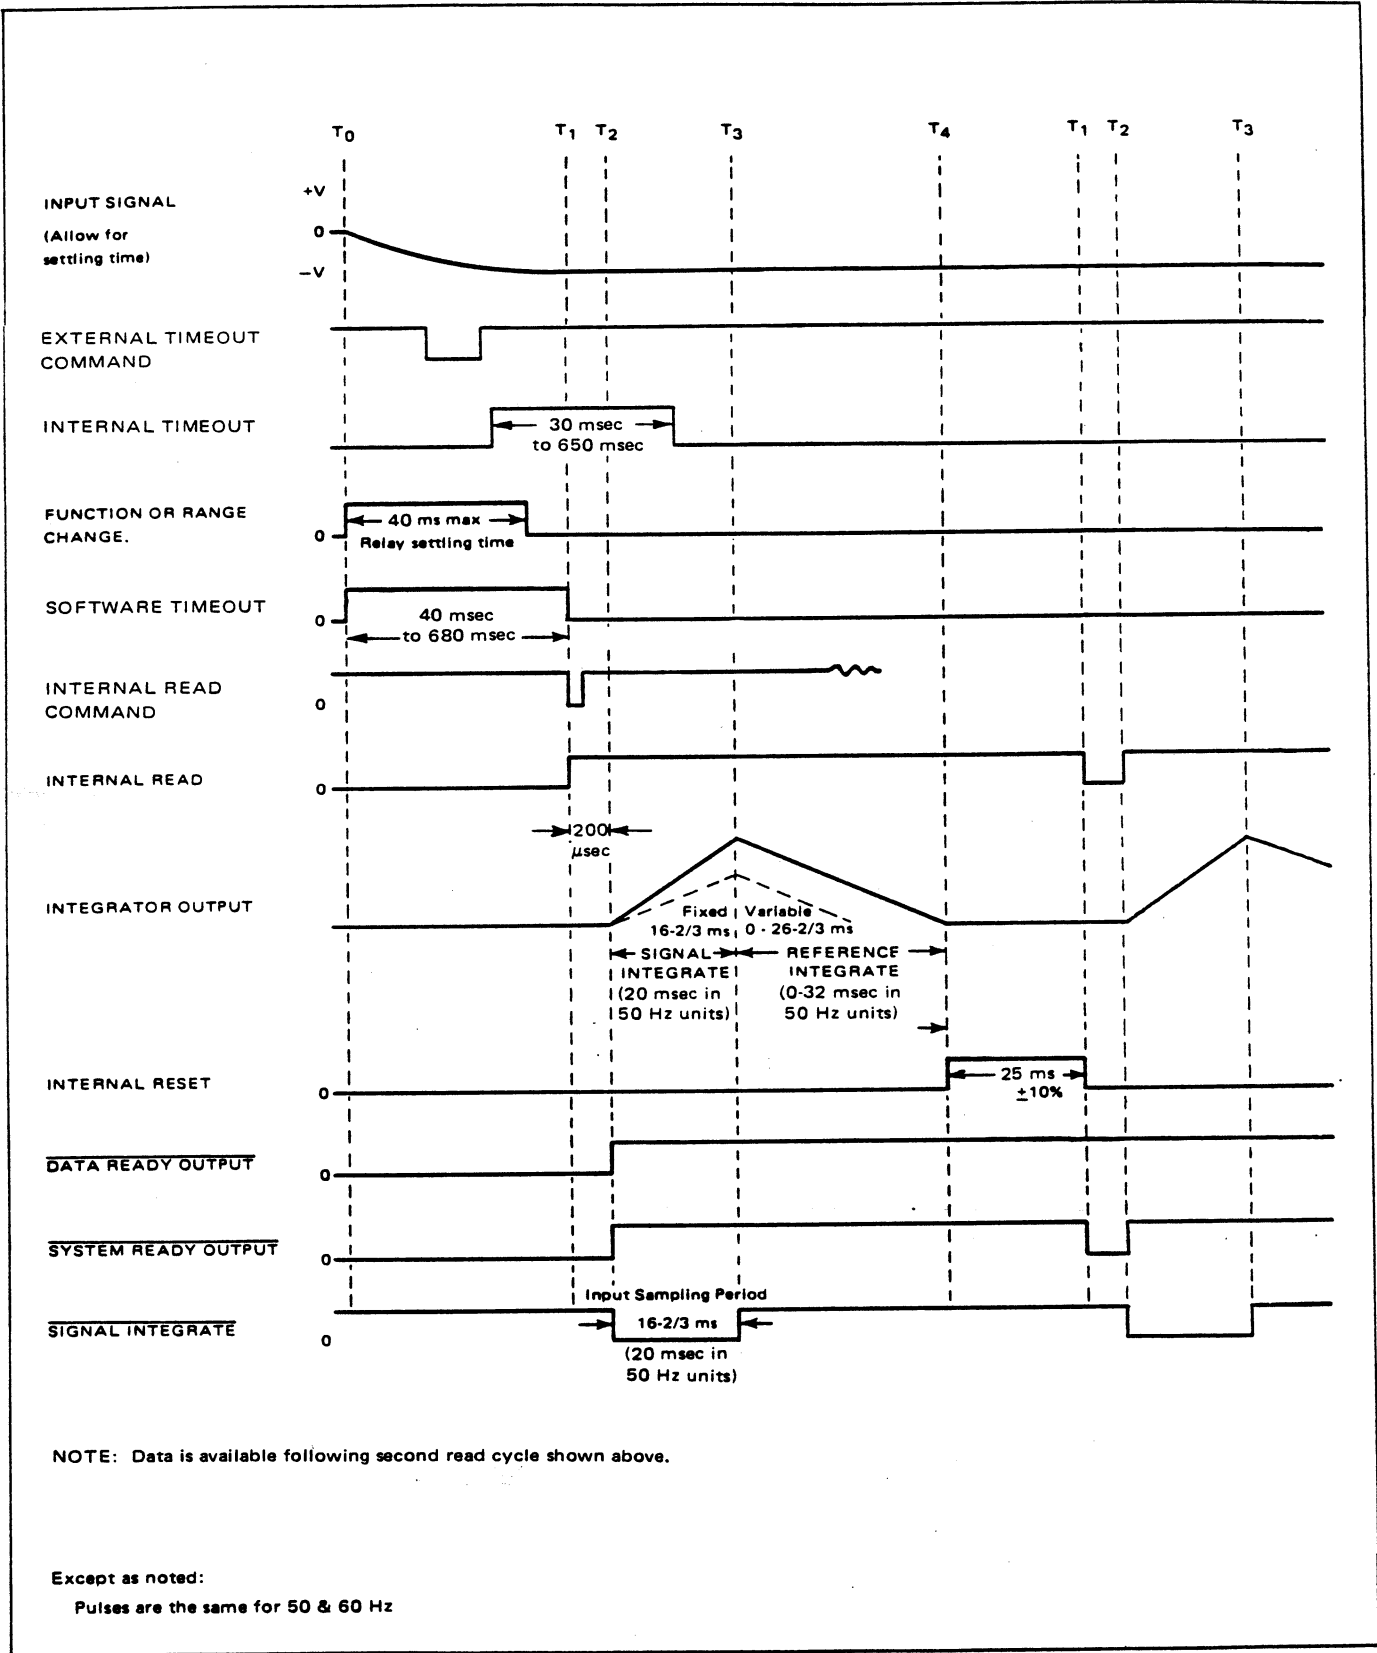


Figure 3.18D - Measurement Sequence, External Timeout Command with Range or Function Change

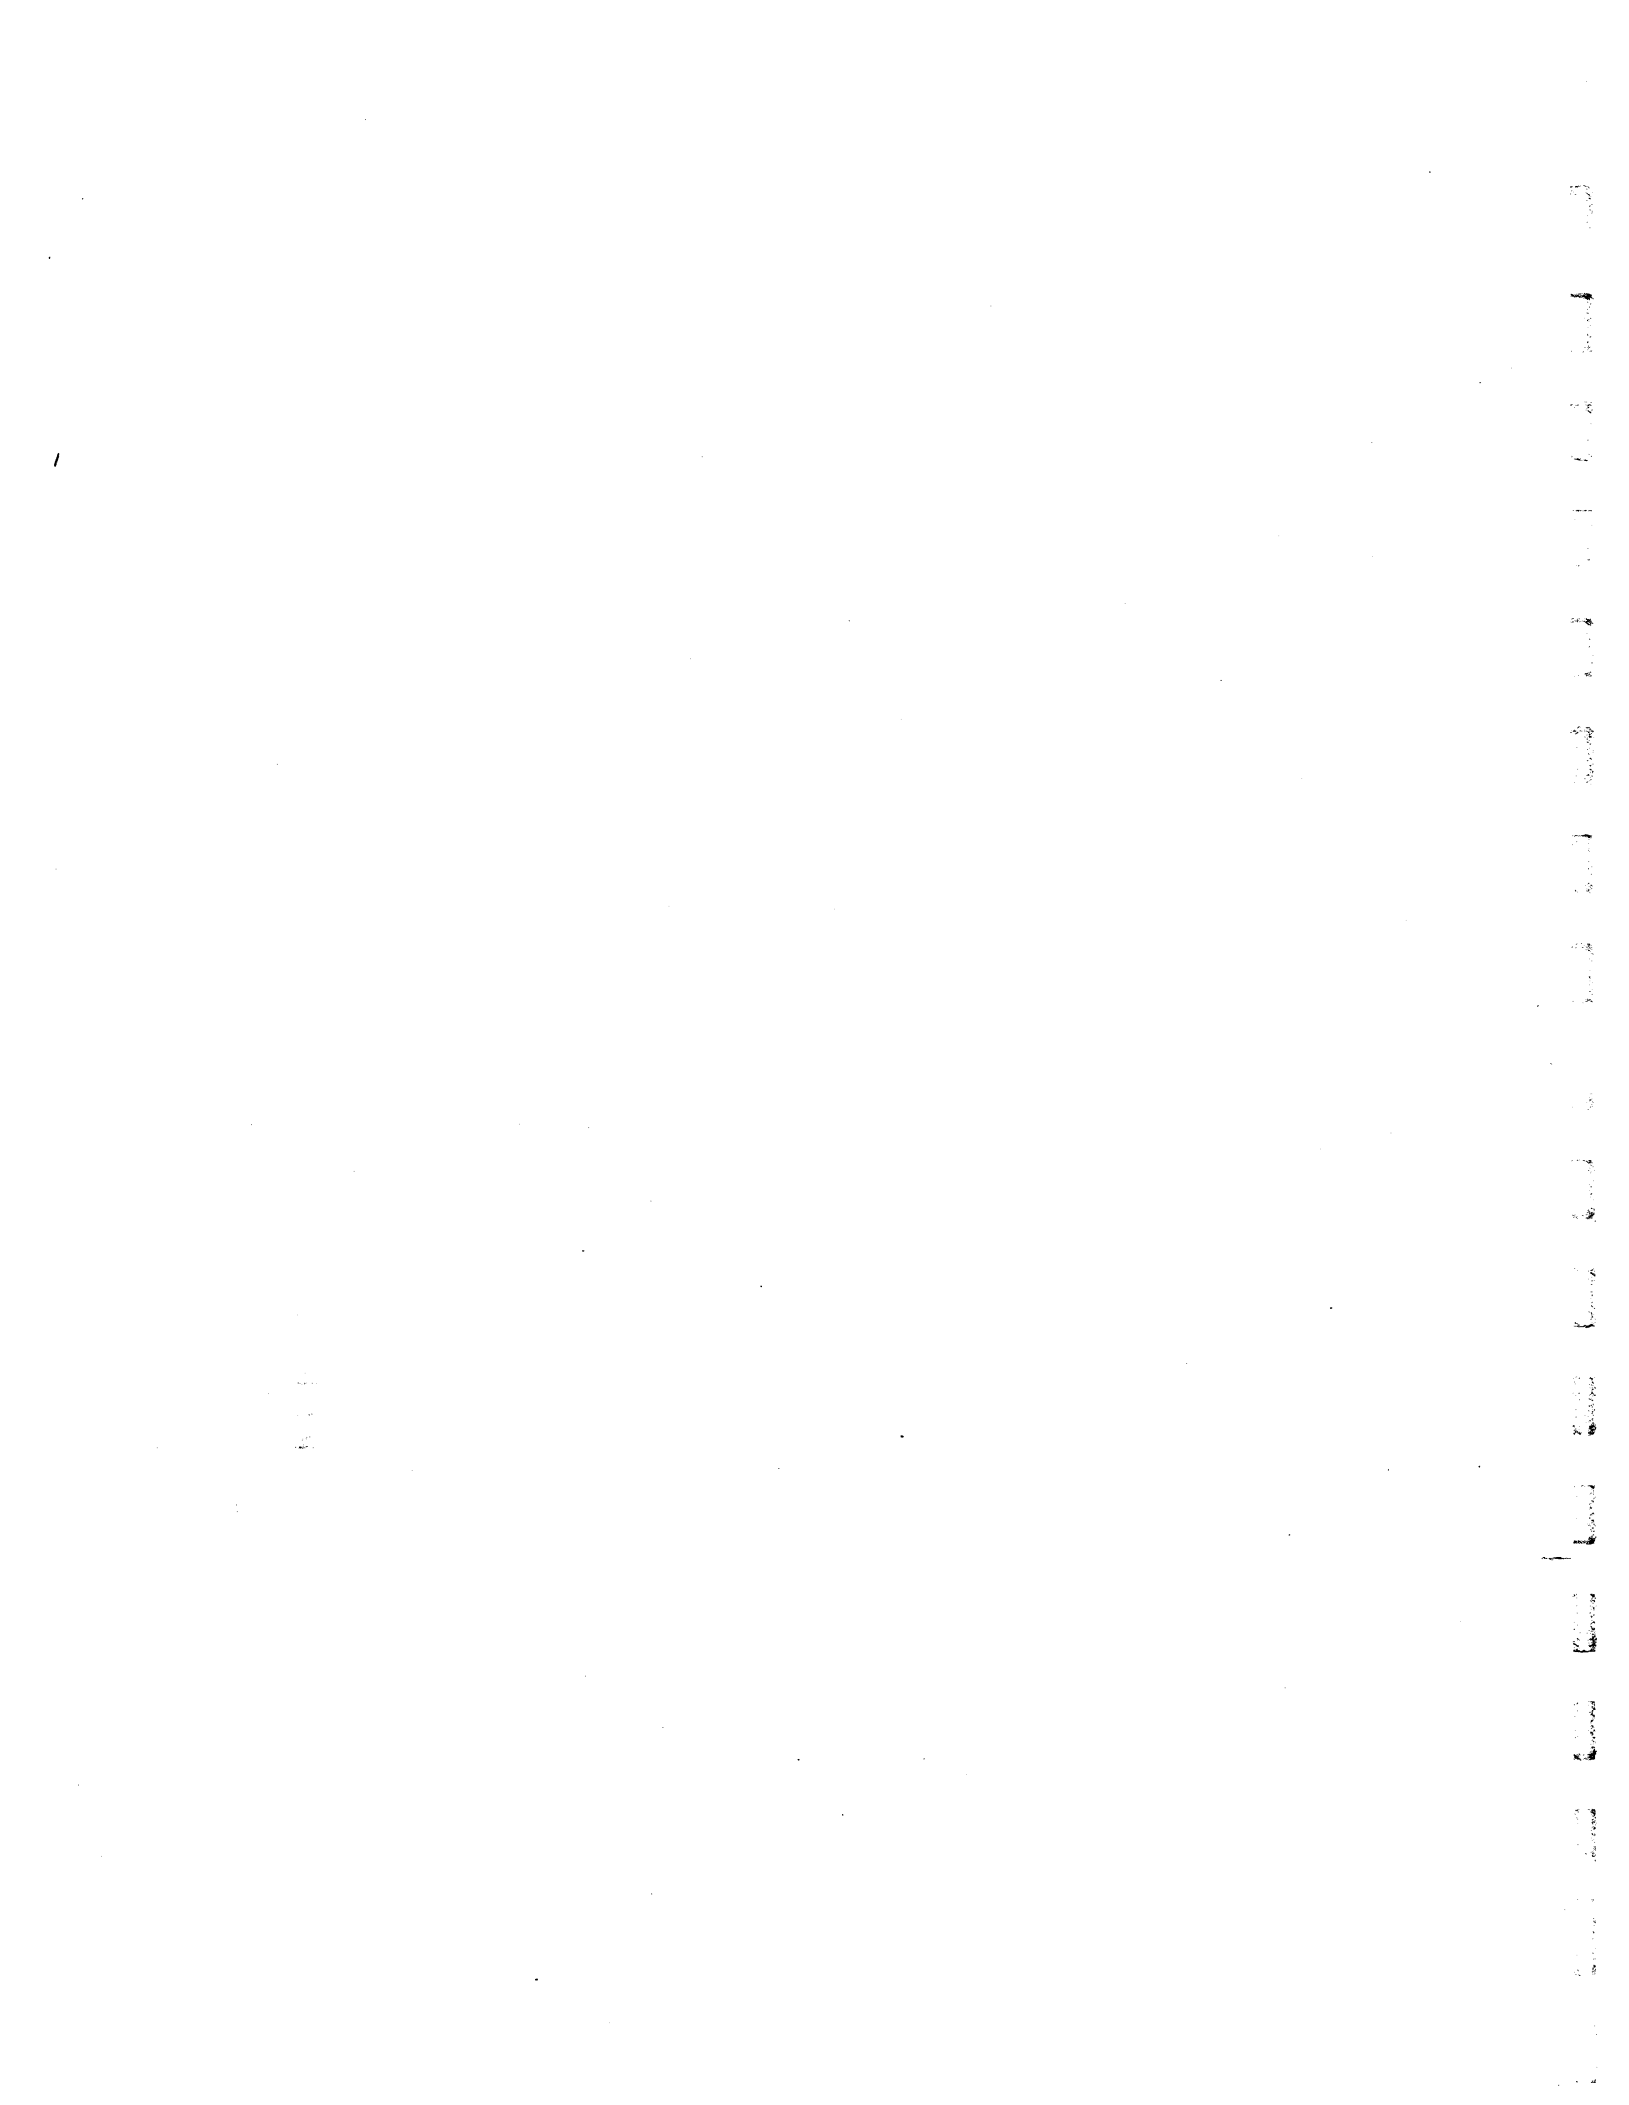

- c. The Direct and Time Out Commands are AC coupled with pull-up resistors to +5 volts. These inputs are compatible with TTL outputs or contact closures to ground. The AC coupling does require that rise and fall times be less than 100 μ seconds. This input circuit is illustrated below:

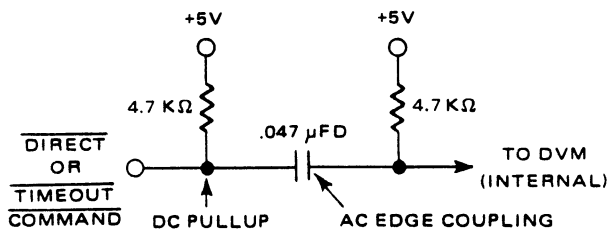

- d. Digital output common can be floated as high as 200 VDC above power line ground.

3.5.4.7 TTL OUTPUT CAPABILITIES.

3.5.4.7.1 The 6000 electrical outputs are specified to drive two TTL inputs such as described in the TTL loading section. Summary:

False: 0 to +0.4V
 True: +2.4 to +5.0V
 Fan out: 2 minimum
 Maximum Capacitance Load: 500 pF

3.5.4.8 TIMING SEQUENCE.

3.5.4.8.1 The standard remote mode of operation of the 6000 is to initiate a reading sequence with each Direct Command received through the programmer, providing that sufficient time has been allowed between commands for the reading to be completed. This reading sequence is illustrated in Figure 3.18.

- T₁ - T₀** During this period the input signal must finish settling to within the desired accuracy. Any control changes involving the 40 msec relay settling time (a) can be completed; other logic control inputs (b) can also be changed.
- T₂ - T₁** The Direct Command signal, which is AC coupled, must meet the following conditions:
- Rise and fall times less than 100 μ sec.

T₃ - T₂ The period of signal integration lasts for 16-2/3 msec (60 Hz line frequency; 20 msec in 50 Hz units). During this time the integrator charges to a voltage proportional to the input voltage. This is the input sampling period.

T₄ - T₃ During this period, the integrator is isolated from the input signal, and is discharged at a precise current. The time the integrator requires to discharge to a level equal to its voltage at T₂ is proportional to the input voltage. This time is measured by an internal counter and stored.

T₀ - T₄ This 15 mseconds ($\pm 10\%$) is required for the microprocessor to calculate the actual reading.

T₁ - T₀ If the next read command is a Direct Command, this period must be made long enough to allow for the condition covered in the first cycle; however, if the next command is a Timeout Command, this period can approach zero since the necessary timeout to satisfy these conditions are automatically programmed.


3.5.4.9 OTHER READ COMMAND OPTIONS.

3.5.4.9.1 In addition to the Direct Command, there are two other programmable read commands, as illustrated in Figure 3.18.

- Time Out Command:** Again, this is an AC coupled input which must have rise and fall times of less than 100 μ seconds but must remain in a "0" state for at least 0.1 μ second. The timeouts given in Table 3.19 for various combinations of ranges and functions ranging from 30 mseconds to 500 mseconds will be automatically inserted before the internal read command is generated. If this command is wired to the System Ready Output on J212-pin 43, fully automatic reading with timeouts is achieved.


NOTE

The internal delay is not adequate for settling time on the 100 VDC, 1000 K Ω , 10 M Ω , 100 M Ω ranges, or any AC range. Therefore, the timeout command, providing timeout delays listed in table 3.19, must be used to initiate accurate readings on these ranges unless a fixed range and function have been programmed and the input has been present longer than the timeout period.

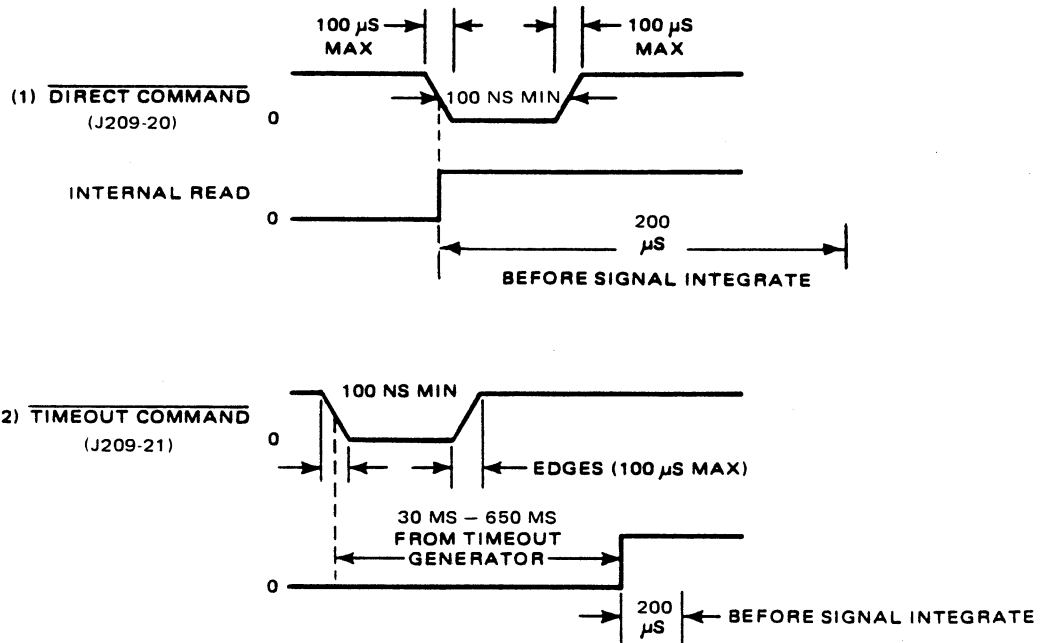

NOTE: NOT DRAWN TO SCALE

Figure 3.19 - Command Timing

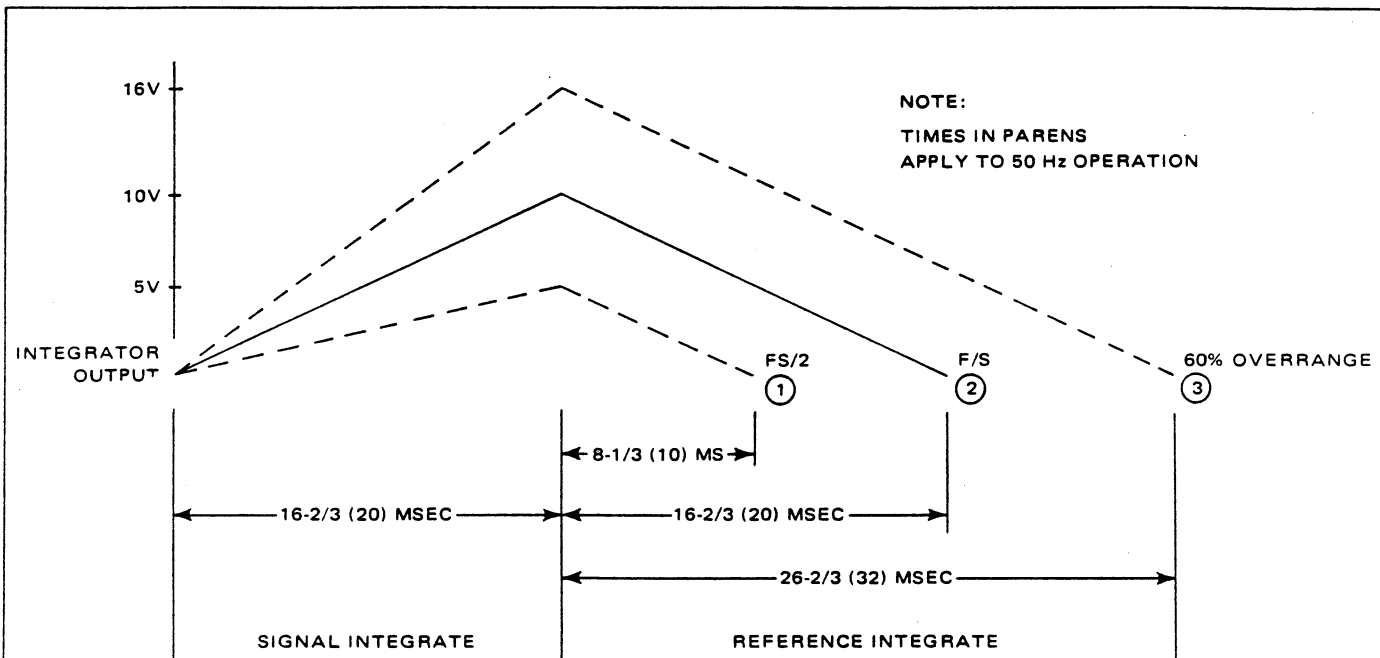

READ RATES CORRESPONDING TO INTEGRATION PERIODS (ABOVE).

$V_{IN} = 5$ VOLTS (HALF SCALE ON 10V RANGE)

50 Hz:

$$\frac{1000}{20 \text{ MS} + 10 \text{ MS} + 25 \text{ MSEC}} = 18.2 \text{ READINGS/SEC}$$

60 Hz:

$$\frac{1000}{16-2/3 \text{ MS} + 8-1/3 \text{ MS} + 25 \text{ MS}} = 20.0 \text{ READINGS/SEC}$$

②

$V_{IN} = 10$ V (FULL SCALE ON 10V RANGE)

50 Hz:

$$\frac{1000}{20 \text{ MS} + 20 \text{ MS} + 25 \text{ MS}} = 15.4 \text{ READINGS/SEC}$$

60 Hz:

$$\frac{1000}{16-2/3 \text{ MS} + 16-2/3 \text{ MS} + 25 \text{ MS}} = 17.24 \text{ READINGS/SEC}$$

③

$V_{IN} = 16$ V (FULL SCALE & MAX. OVERRANGE) ON 10V RANGE:

50 Hz:

$$\frac{1000}{20 \text{ MS} + 32 \text{ MS} + 25 \text{ MS}} = 13 \text{ READINGS/SEC}$$

60 Hz:

$$\frac{1000}{16-2/3 \text{ MS} + 26-2/3 \text{ MS} + 25 \text{ MS}} = 14.6 \text{ READINGS/SEC}$$

Figure 3.20 - Read Rate vs. Input

3.5.4.10 READING RATES.

3.5.4.10.1 In Figure 3.20, integrator operation with three different input signal levels is illustrated: half scale, full scale, and 160% of full scale (full scale is defined as 100000 on any range). The figure shows that the maximum reading rate is a function of the input signal. The signal integrate period and internal reset remain fixed while the reference integrate

period can vary from 0 to 32 mseconds. Therefore the maximum read rate could vary from 14.9 to 31.6 reading per second.

3.5.4.11 SUPERFAST.

3.5.4.11.1 The Superfast reading mode (programmed through either the PRINTER OUT or PROGRAM INPUT

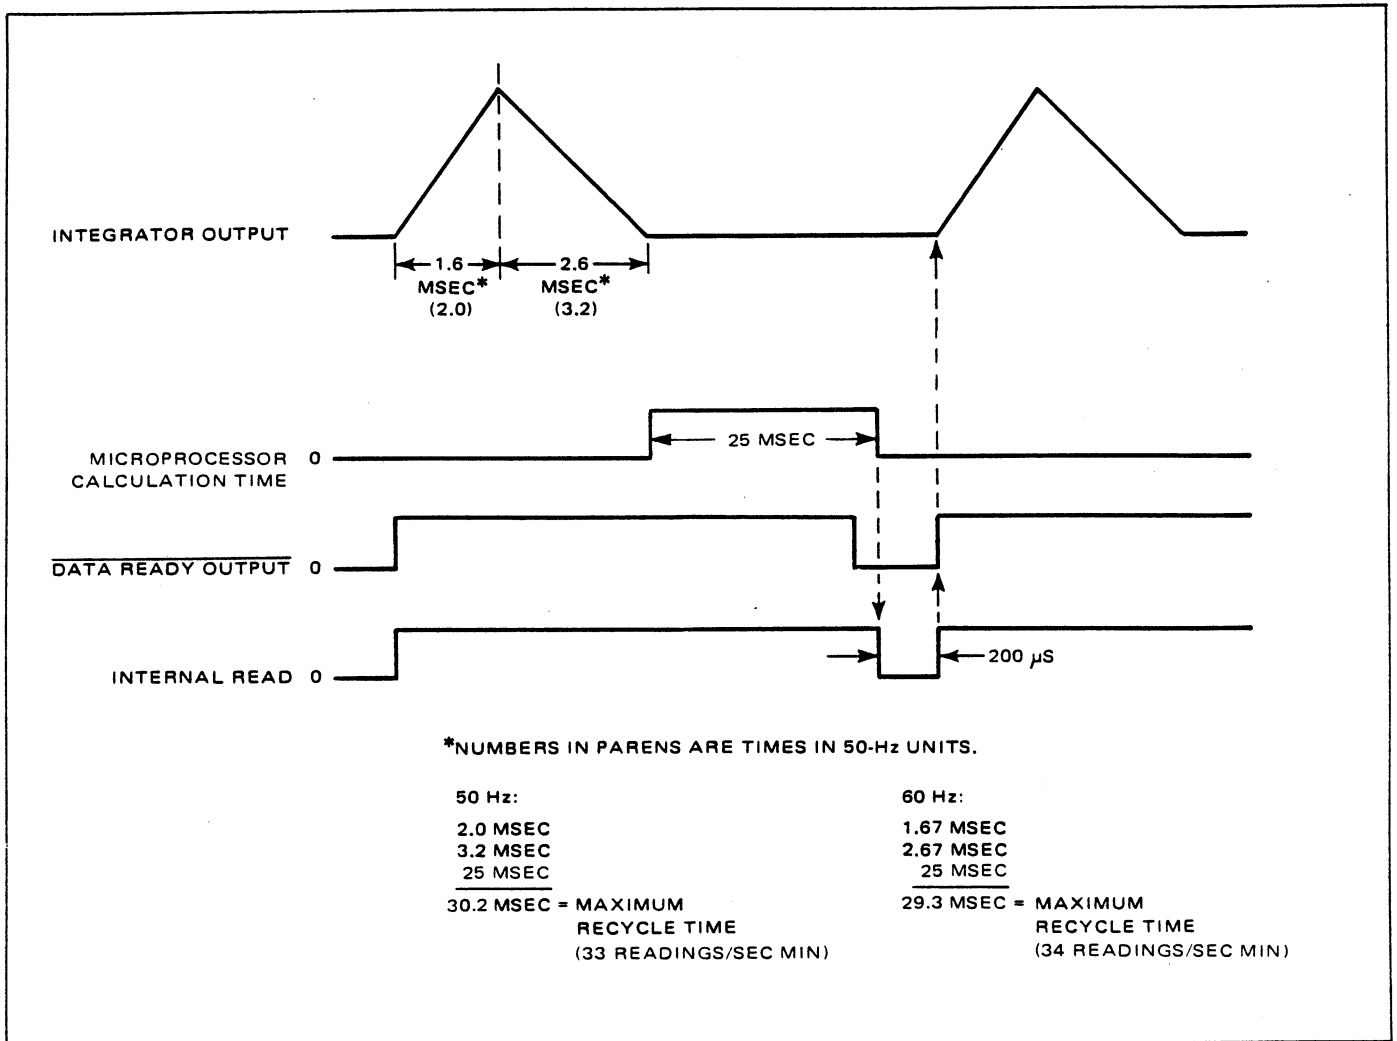


Figure 3.21 - Superfast Read Rate (Worst Case)

connector) increases the minimum reading rate from 14.6 to 34 readings per second (50 Hz: 13 to 33 r/s). This is done at the expense of losing the least-significant digit which is reset to zero (blanked out on readout). The signal integration period is reduced from 16-2/3 msec to 1-2/3 msec (50 Hz: 20 msec to 2 msec). This and the resulting reference integrate period reduce the maximum recycle time from 68.3 msec to 29.3 msec (50 Hz: 77 msec to 30.2 msec), thereby yielding the 34 reading per second figure (33 r/s with 50 Hz). Timing changes are shown in Figure 3.20.

3.5.5 Printer Output.

3.5.5.1 The printer output connector is a 3M type D 50 pin connector. Pin assignments are shown in Table 3.14. All outputs are referenced to digital ground pin 22.

3.5.5.2 NUMERICAL DATA.

3.5.5.2.1 Numerical data appears as positive true, four-line BCD code, as shown in Figure 3.15. The designator of each line identifies the digit and weight. For example: Pins 30, 29, 28, and 27 are designated 1₂, 1₈, 1₄, and 1₁, consecutively. The 1 indicates these lines correspond to the units or least significant display; the 2, 8, 4, and 1 subscripts indicate the binary weight of each line.

CAUTION

True output lines are not short-circuit proof. Accidental grounding may damage the output circuitry.

Table 3.14 - Pin Assignments J201 (Printer Output)

| J212 Pin No. | Data Out |
|--------------|-------------------------|
| 47 | AC |
| 46 | Ratio |
| 45 | DC |
| 44 | Hold (Flag) |
| 43 | <u>System Ready Out</u> |
| 42 | <u>Super Fast In</u> |
| 41 | <u>Data Disable In</u> |
| 39 | + Polarity |
| 38 | - Polarity |
| 37 | <u>Data Ready Out</u> |
| 36 | No |
| 34 | Rng D8 |
| 33 | Rng A1 |
| 32 | Rng C4 |
| 31 | Rng B2 |
| 30 | 12 |
| 29 | 18 |
| 28 | 14 |
| 27 | 11 |
| 26 | 102 |
| 1 | 108 |
| 2 | 101 |
| 3 | 104 |
| 4 | 1002 |
| 5 | 1008 |
| 6 | 1001 |
| 7 | 1004 |
| 8 | 1K2 |
| 9 | 1K8 |
| 10 | 1K1 |
| 11 | 1K4 |
| 12 | <u>Signal Int</u> |
| 13 | 10K2 |
| 14 | 10K8 |
| 15 | 100K1 |
| 16 | 10K11 |
| 17 | 10K1 |
| 18 | Filter |
| 19 | System Control (Flag) |
| 20 | +5V |
| 21 | Ohms |
| 22 | Digital Gnd |

3.5.5.2.2 Polarity is indicated in positive true format on pin 39 (positive) and pin 38 (negative). The positive polarity line is true when the function output is AC or ohms. If the instrument overranges, the polarity bit is not updated since no axis-crossing has occurred.

3.5.5.3 FUNCTION DATA.

3.5.5.3.1 Function outputs appear on pins 45, 46, 47 and 21 in their true format. For example: with AC function selected, AC is true and is indicated by a true level on the corresponding line.

3.5.5.4 RANGE DATA.

3.5.5.4.1 Range data appears in four-line BCD code on pins 31 through 34. Range codes are described in Table 3.15.

3.5.5.5 "NO" INDICATION.

3.5.5.5.1 The NO line (pin A12) is the same as the NO indicator on the readout. The line is true if a function or range is selected for which the particular instrument is not equipped. Overrange is indicated by a true NO line plus 'OL' on the display.

3.5.5.6 STATUS OUTPUT LINES.

3.5.5.6.1 The following outputs indicate the status of the conversion process within the instrument.

- a. DATA READY. This line (pin 37) remains true during the signal and reference integration periods plus any overrange time and microprocessor calculation time, if required. The line drops to the false level to indicate to the printer that the measurement is complete and output data can be printed (Printer Command). Minimum false level time is 2 mseconds.
- b. HOLD FLAG. A true level on this line (pin 44) indicates that the instrument is in the Hold mode. A reading can be initiated by one of the following commands:
 1. DIRECT COMMAND (J209-20)
 2. TIMEOUT COMMAND (J209-21)

Table 3.15 - Range Codes (Printer Output)

| Range | A (J212-33) | B (J212-31) | C (J212-32) | D (J212-34) | Dec Value |
|---------------|----------------|----------------|----------------|----------------|--------------|
| 10Ω | 0 | 1 | 0 | 0 | 2 |
| 0.1V 0.1 KΩ | 1 | 1 | 0 | 0 | 3 |
| 1V 1 KΩ | 0 | 0 | 1 | 0 | 4 |
| 10V 10 KΩ | 1 | 0 | 1 | 0 | 5 |
| 100V 100 KΩ | 0 | 1 | 1 | 0 | 6 |
| 1000V 1000 KΩ | 1 | 1 | 1 | 0 | 7 |
| 10 MegΩ | 0 | 0 | 0 | 1 | 8 |
| 100 MegΩ | 1 | 0 | 0 | 1 | 9 |

- c. SYSTEM READY. This line (pin J212-43) drops to a false level to indicate that the instrument can now initiate a new reading at the first available read command.
- d. SIGNAL INTEGRATE. This line (pin J212-12) becomes true at the end of the signal integration period. After this time, the input signals may be changed in preparation for the next reading. The input signal need remain constant only while the instrument is in Signal Integrate, indicated by this line in the false state. For example, the 1-2/3 msec sample time in Superfast could be used in slow sample and hold applications.

- c. SUPERFAST. A contact closure to ground or a false logic level applied to this line (J212-42 or J209-15) decreases the conversion time of the instrument while sacrificing the least-significant digit. This mode is described in paragraph 3.5.4.11. Because of the superfast read rate, do not use this mode with Autorange.

3.5.5.7 INPUT CONTROL LINES.

- a. DATA DISABLE. A contact closure to ground or a false logic level applied to this line (J212-41) inhibits the DATA READY output (Print) pulse.
- b. SYSTEM CONTROL. A contact closure to ground or a false logic level on this line (J209-16) disables all front panel operating controls, except 'Shift' and 'Local'. Operation of the instrument is then under control of the Remote Program input. This command duplicates operation of the 'Shift' 'Local' switch on the front panel. 'Shift' 'Local' switch can be pressed from the front panel to operate the system under the control of program input. 'Shift' 'Local' is used in toggle mode - by pressing the keys again system will be in local mode.

3.5.6 Remote Programming.

3.5.6.1 The instrument accepts commands made through PROGRAM INPUT connector J209 on the rear panel. Pin assignments of J209 are shown in Table 3.16. Commands

Table 3.16 - Pin Assignments J209 (Program Input)

| J209 Pin No. | Data Out |
|--------------|------------------------|
| 1 | <u>A1</u> |
| 2 | <u>C4</u> |
| 3 | <u>B2</u> |
| 4 | <u>D8</u> |
| 5 | <u>Hold</u> |
| 6 | <u>AC</u> |
| 7 | <u>Ohm</u> |
| 8 | <u>Filter</u> |
| 9 | <u>Ratio</u> |
| 14 | <u>Data Inhibit</u> |
| 15 | <u>Superfast</u> |
| 16 | <u>System Control</u> |
| 17 | <u>+5V</u> |
| 18 | <u>Program Storage</u> |
| 19 | <u>Digital Ground</u> |
| 20 | <u>Direct Command</u> |
| 21 | <u>Timeout Command</u> |
| 22 | <u>Auto Cal</u> |

Table 3.17 - Function Programming

| | |
|---------------------|--------|
| \overline{DC} | NC |
| \overline{AC} | J209-6 |
| \overline{OHMS} | J209-7 |
| \overline{RATIO} | J209-9 |
| \overline{FILTER} | J209-8 |

are made by a switch closure from the appropriate pin to ground or by low power schottky TTL logic levels as described earlier.

3.5.6.2 SYSTEM CONTROL.

3.5.6.2.1 A contact closure to ground or a false logic level applied to pin J209-16 disables all front panel operating controls, except 'Shift' and 'Local'. Operation of the instrument is then under control of the remote program input. This line duplicates the 'Shift' 'Local' switch on the front panel.

3.5.6.3 FUNCTION PROGRAMMING.

3.5.6.3.1 The desired function is selected by applying a ground or false logic level to the appropriate pin (Table 3.17).

3.5.6.3.2 The internal delay is not adequate for settling time on the 100 VDC, 1000 Kiloohm, 10 Megohm, 100 Megohm, and all AC ranges. Therefore, the timeout command, providing timeout delays listed in Table 3.19, must be used to initiate readings on these ranges unless the input is fixed with range and function predetermined.

3.5.6.4 RANGE PROGRAMMING.

3.5.6.4.1 Range programming is selected by applying false logic levels in BCD code to the four range lines described in

Table 3.19 - Timeouts

| | |
|-----------------------------|----------------------------------|
| DC | 40 msec |
| 1 Ohm to 1 Megohm | 40 msec |
| 10 Meg* | 40 msec |
| 100 Megohm | 400 msec |
| Filter | 630 msec (plus function timeout) |
| AC(fixed range, no filter) | 240 msec |
| AC+Filter(&Autorange) | 860 msec |
| *Use filter for <.01% error | |

Table 3.18. With no lines programmed, Autorange is automatically selected.

3.5.6.5 + FIVE VOLTS.

3.5.6.5.1 This voltage, +5 volts \pm 5%, from the logic power supply is available at pin J209-17 for external use. Current output is .1A, maximum.

3.5.6.6 HOLD.

3.5.6.6.1 The Hold line is selected by a contact closure or a false logic level on pin J209-5. Hold is required when using either of the three read commands.

3.5.6.6.2 With the Hold line selected, changing the Function or Range function generates an internal reading. The System Ready output is directly set or reset by the Signal Integrate line as shown in Figure 3.22. If System Ready Output is used to generate readings, it will create a valid reading after the Function or Range is changed.

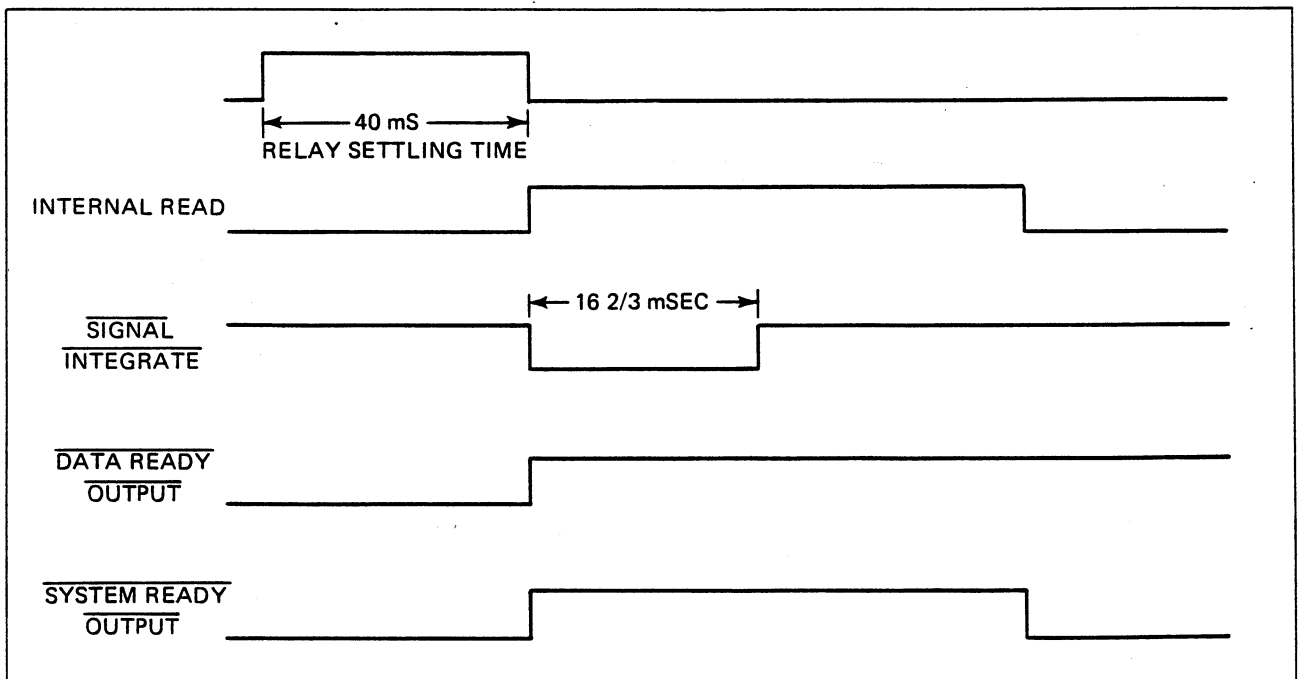


Figure 3.22 - Internally Generated Timing Chart

Table 3.18 - Range Codes (Programmer)

| Range | \bar{A} (J209-1) | \bar{B} (J209-3) | \bar{C} (J209-2) | \bar{D} (J209-4) | Dec Value |
|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------|
| AUTO | 1 | 1 | 1 | 1 | 0 |
| 10 Ω | 1 | 0 | 1 | 1 | 2 |
| 0.1V 0.1 K Ω | 0 | 0 | 1 | 1 | 3 |
| 1V 1 K Ω | 1 | 1 | 0 | 1 | 4 |
| 10V 10 K Ω | 0 | 1 | 0 | 1 | 5 |
| 100V 100 K Ω | 1 | 0 | 0 | 1 | 6 |
| 1000V 1000 K Ω | 0 | 0 | 0 | 1 | 7 |
| 10 Meg Ω | 1 | 1 | 1 | 0 | 8 |
| 100 Meg Ω | 0 | 1 | 1 | 0 | 9 |

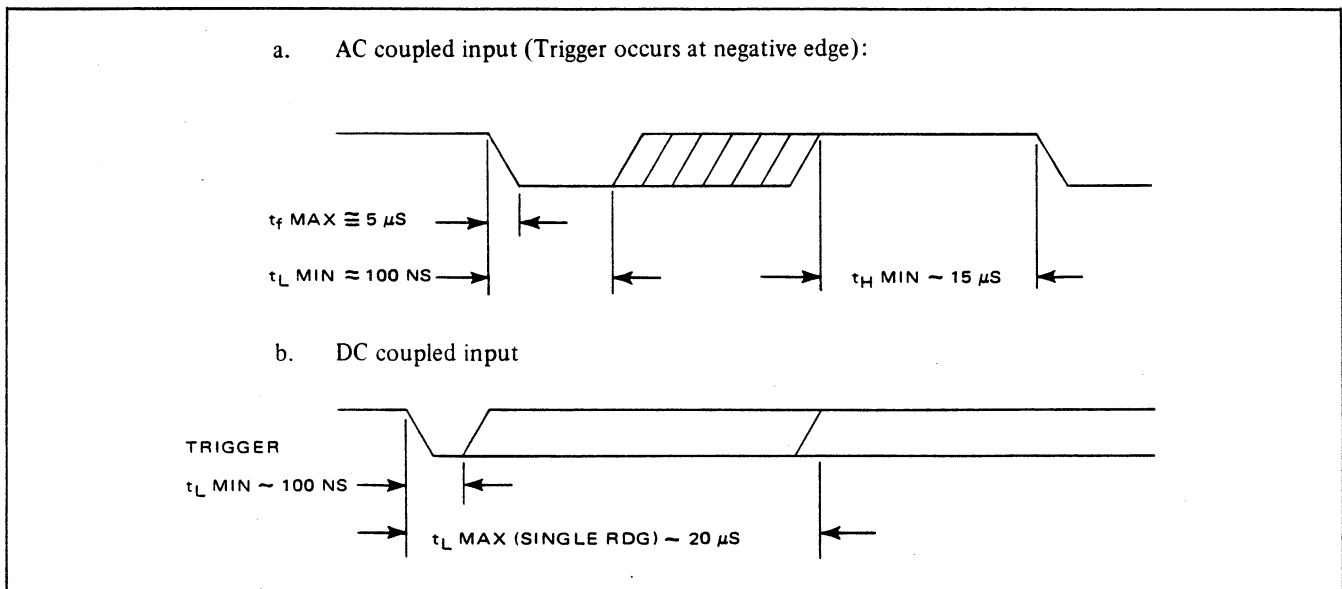


Figure 3.23 - Trigger Waveform

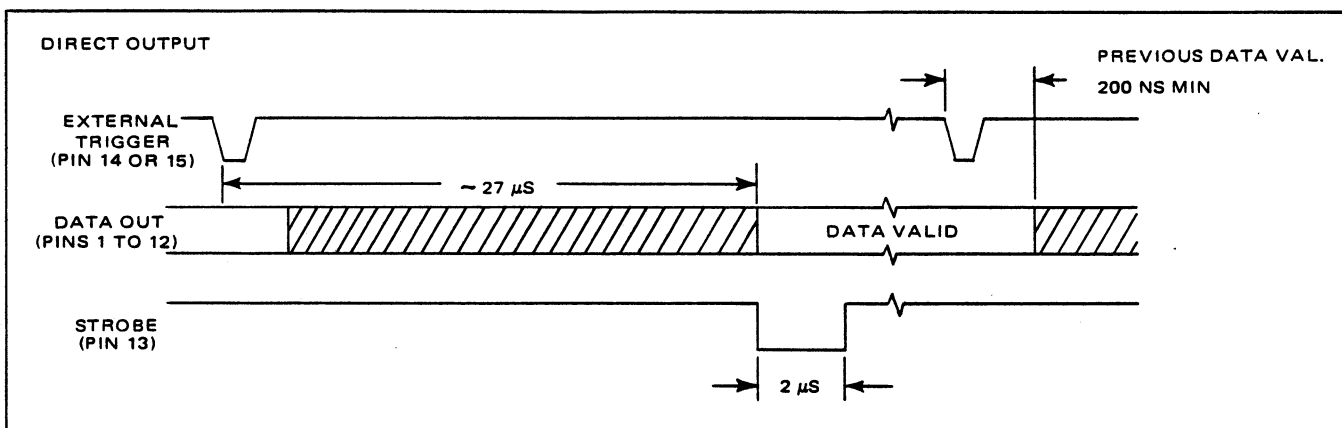


Figure 3.24 - Option 03 Output Waveforms

3.5.6.7 READ COMMANDS.

3.5.6.7.1 Either of two read command lines can be selected by a contact closure to ground or by a negative logic level applied to the appropriate pin. J209-20. DIRECT

COMMAND, commands a new measurement if applied after fifteen millisecond delay, and if the command is present for .1 μ seconds. Pin J209-21, TIMEOUT COMMAND, starts a new measurement after fifteen milliseconds plus a

Table 3.20 - Maximum Input Voltage

| CAUTION | |
|---|--|
| Do not exceed the following maximum inputs. | |
| DC | 1000 VDC or RMS AC All ranges |
| AC | 1000 RMS to 15 kHz decreasing 20 dB/ decade to 15V RMS at 1 MHz |
| RATIO | Input: DC/DC hardware ratio Reference: +10.5V, +1 VDC |
| OHMS | ±500V DC or Peak AC |
| GUARD | Voltage between GUARD AND – INPUT must not exceed 250 volts or damage to the instrument may result |

timeout delay to allow for internal settling time of the measured signal. TIMEOUT COMMAND cannot be commanded before the previous 25 msec delay. generator stores the reading.

3.5.6.8 TIMEOUTS.


3.5.6.8.1 Timeout periods for each function are listed in table 3.19. In Autorange, the indicated delays are taken following each range change.

3.5.6.9 DATA INHIBIT.

3.5.6.9.1 A contact closure or false logic level on pin J209-14 inhibits DATA READY OUTPUT (Print pulse) from being generated.

3.5.6.10 PROGRAM STORAGE.

3.5.6.10.1 A false level (equivalent to three TTL inputs) on pin J209-18 will store all the programmed inputs except the Direct and Timeout commands and Auto-Cal as they existed on the negative edge of this command (see diagram below).

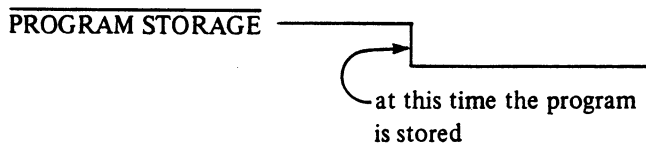

3.5.6.11 SUPERFAST.

3.5.6.11.1 A contact closure to ground or a false logic level applied to pin J209-15 decreases the signal integrate and the

reference integrate times (see paragraph 3.5.4.11). This provides the maximum reading rate in the DIRECT COMMAND mode of operation. Because of the high reading rate, Superfast must be programmed with a fixed range rather than Autorange.

3.5.6.12 AUTO CALIBRATION.

3.5.6.12.1 A contact closure to ground or false logic level on this line will initiate the auto calibration procedure and the system will go through complete calibration. If this input is held low, it will disable auto calibration. If this input is not held low, it will go through the auto calibration programmed by main program.

3.6 FAST A/D (OPTIONS 03 AND 03 SH).

3.6.1 These options provide for high speed digitizing of analog waveforms.

3.6.2 The Fast A/D may be controlled through the keyboard, via the GPIB or through its interface connector (Figure 2.2) located on the rear panel.

3.6.3 The Fast A/D may be triggered at rates up to 30 KHz. The maximum read rate is, however, limited to 250 readings per second when the output data is to be read from the 6000 display or 6000 readings per second when the GPIB is used. The full conversion speed is available only when the data is transmitted via its interface connector. The conversion time will be less than 29 μsec for all modes.

3.6.4 Two mutually exclusive trigger inputs are available. AC coupled and DC coupled. Figure 3.23 shows the required waveforms.

3.6.5 The direct output provided from the rear panel is in binary 2's complement format. Each output can drive 2 TTL loads. The output is scaled to +20.47 and -20.48 volts full scale. Thus, octal 3777 indicates +20.47V while octal -3777 indicates -20.47V.

3.6.6 Output waveforms for Option 03 are shown in Figure 3.24 and output waveforms for Option 03SH are shown in Figure 3.25. The GPIB data word format is the same for both Options 03 and 03SH (reference Figure 3.27). Table 3.21 provides an input voltage to octal data to binary data conversion. The octal data is displayed on the 6000 readout when the display is enabled. The binary data is outputted from the rear panel Fast A/D or Sample and Hold Fast A/D connector.

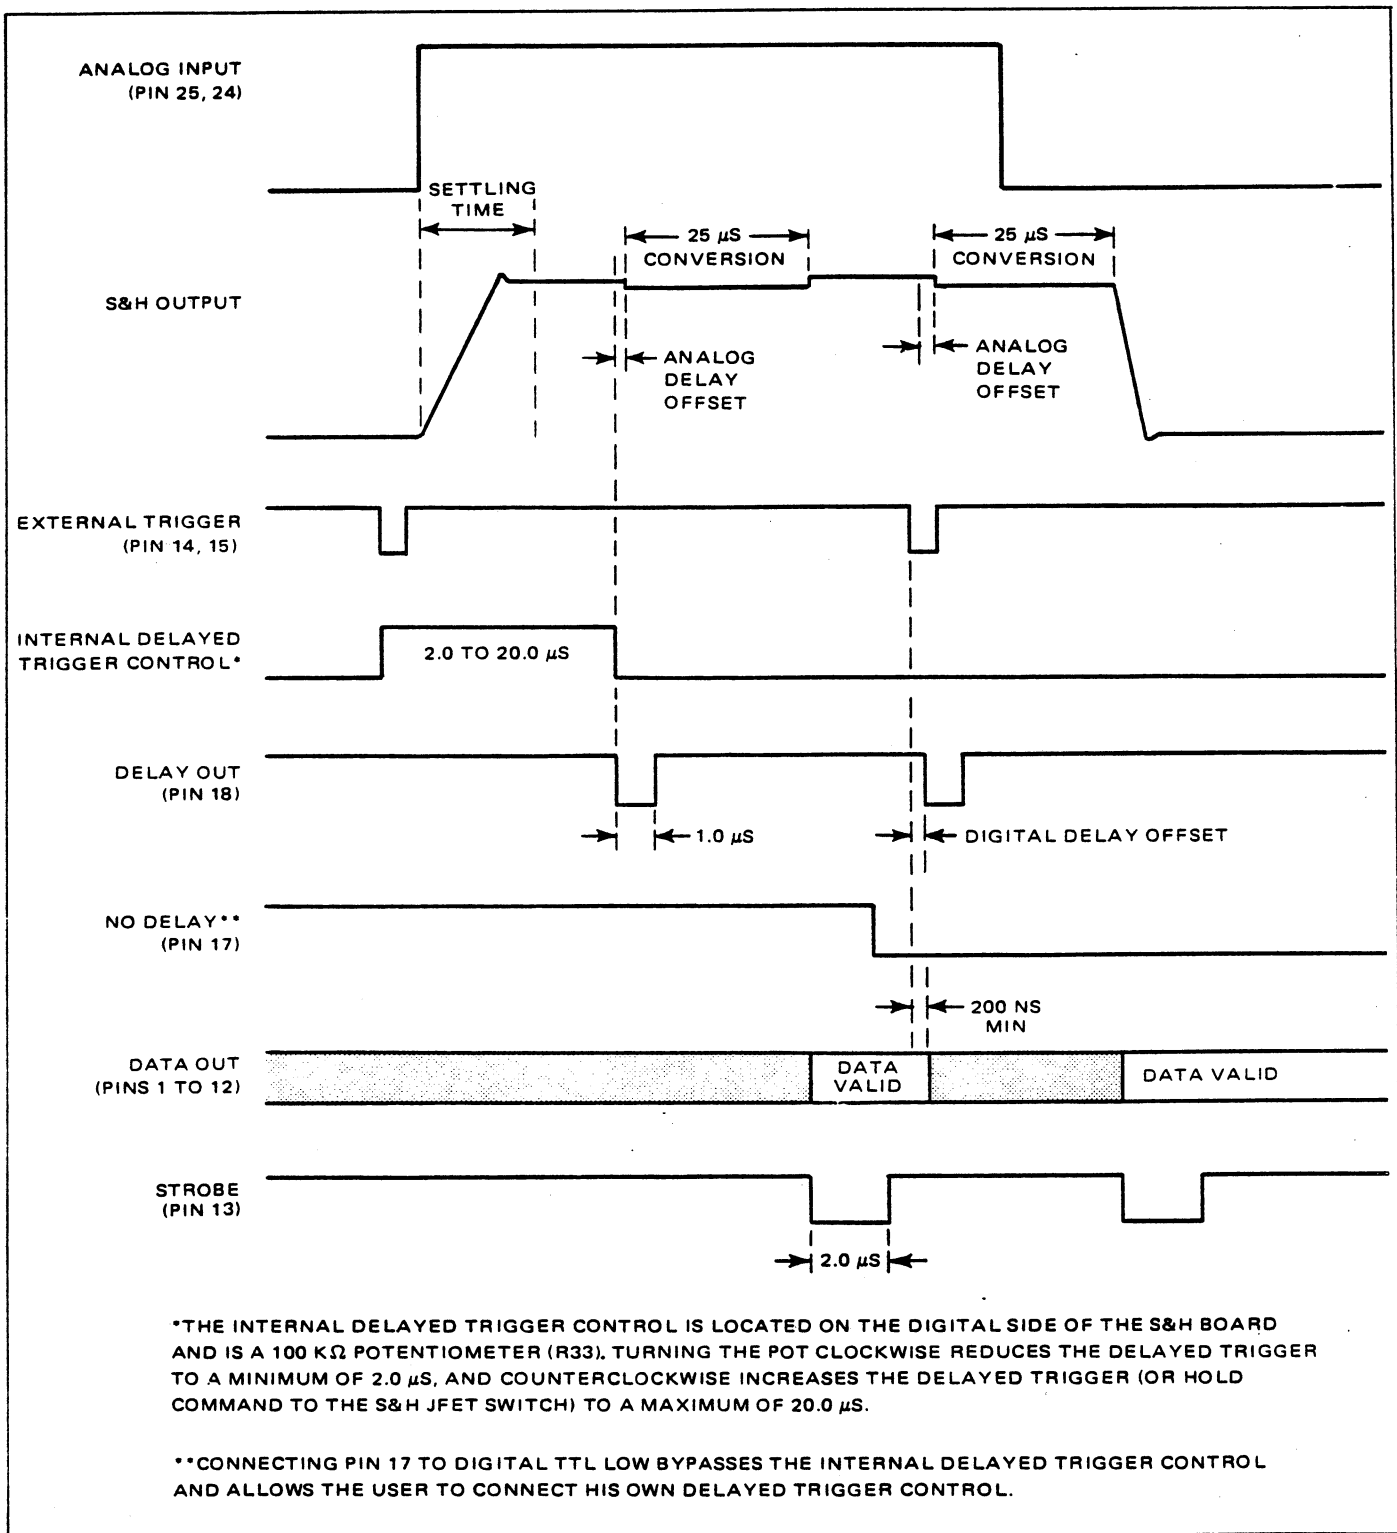


Figure 3.25 - Option 03 SH Output Waveforms

3.6.7 Sample and Hold Fast A/D (Option 03SH).

3.6.7.1 The sample and hold version of the Fast A/D (Option 03SH) may be added to the Model 6000 for applications requiring precise timing of measurements or very short sample times. The sample and hold circuitry increases the

data bandwidth of the Fast A/D, and allows for the digitizing of selected portions of input waveforms. Option 03SH also provides an adjustable delay circuit that delays the aperture point to compensate for system settling time. Figure 3.26 shows a programming model of the 03SH converter.

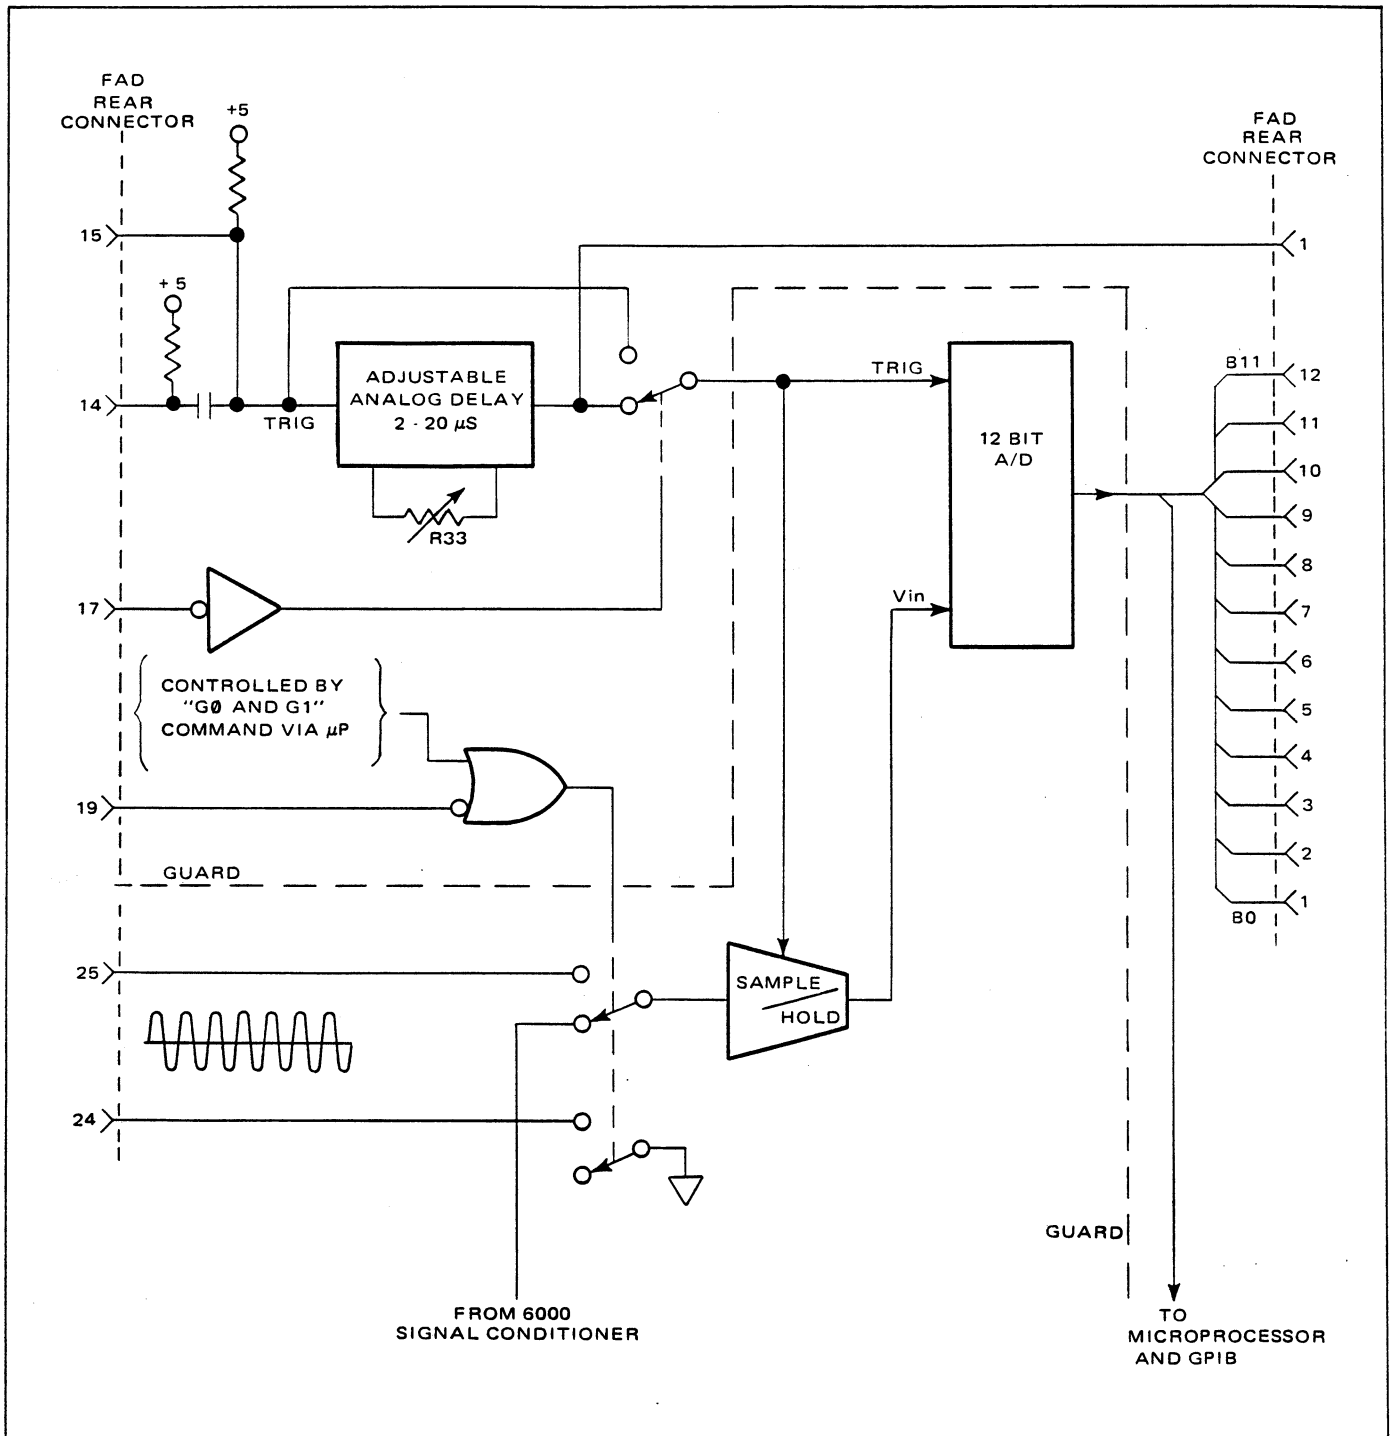


Figure 3.26 - Programming Model For Option 03-S/H

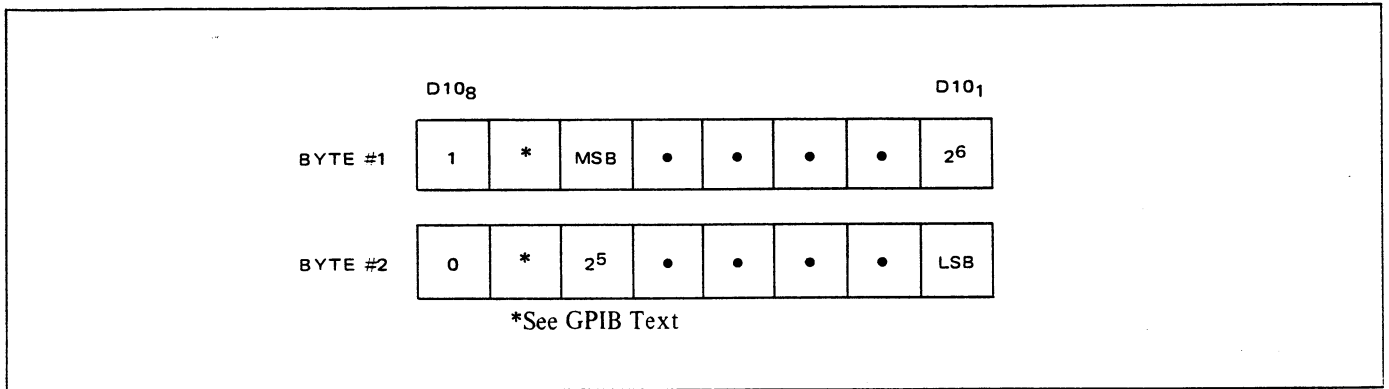


Figure 3.27 - GPIB Data Output Format (Options 03 and 03 SH)

Table 3.21 - Fast A/D Output Data Conversion Reference (Option 03 & 03SH)

| NOTE: The scale factor for the Fast A/D is 1 count (octal or binary) per 10mV of input voltage. | | | Voltage Input | Octal Display* | Binary Output* |
|---|----------------|-----------------|---------------|----------------|-----------------|
| Voltage Input | Octal Display* | Binary Output* | | | |
| -20.480 | -3777** | 100 000 000 000 | -0.250 | -0031 | 111 111 100 111 |
| -20.470 | -3777 | 100 000 000 001 | -0.010 | -0001 | 111 111 111 111 |
| -20.000 | -3720 | 100 000 110 000 | 0.000 | 0000 | 000 000 000 000 |
| -19.000 | -3554 | 100 010 010 100 | +0.500 | 0062 | 000 000 110 010 |
| -18.000 | -3410 | 100 011 111 000 | +1.000 | 0144 | 000 001 100 100 |
| -17.000 | -3244 | 100 101 011 100 | +1.500 | 0226 | 000 010 010 110 |
| -16.000 | -3100 | 100 111 000 000 | +2.000 | 0310 | 000 011 001 000 |
| -15.000 | -2734 | 101 000 100 100 | +2.500 | 0372 | 000 011 111 010 |
| -14.000 | -2570 | 101 010 001 000 | +3.000 | 0454 | 000 100 101 100 |
| -13.000 | -2424 | 101 011 101 100 | +4.000 | 0620 | 000 110 010 000 |
| -12.000 | -2260 | 101 101 010 000 | +5.000 | 0764 | 000 111 110 100 |
| -11.000 | -2114 | 101 110 110 100 | +5.110 | 1000 | 001 000 000 000 |
| -10.240 | -2000 | 110 000 000 000 | +6.000 | 1130 | 001 001 011 000 |
| -10.000 | -1750 | 110 000 011 000 | +7.000 | 1274 | 001 010 111 100 |
| -9.000 | -1604 | 110 001 111 100 | +8.000 | 1440 | 001 100 100 000 |
| -8.000 | -1440 | 110 011 100 000 | +9.000 | 1604 | 001 110 000 100 |
| -7.000 | -1274 | 110 101 000 100 | +10.000 | 1750 | 001 111 101 000 |
| -6.000 | -1130 | 110 110 101 000 | +10.230 | 2000 | 010 000 000 000 |
| -5.120 | -1000 | 111 000 000 000 | +11.000 | 2114 | 010 001 001 100 |
| -5.000 | -0764 | 111 000 001 100 | +12.000 | 2260 | 010 010 110 000 |
| -4.000 | -0620 | 111 001 110 000 | +13.000 | 2424 | 010 100 010 100 |
| -3.000 | -0454 | 111 011 010 100 | +14.000 | 2270 | 010 101 111 000 |
| -2.500 | -0372 | 111 100 000 110 | +15.000 | 2734 | 010 111 011 100 |
| -2.000 | -0310 | 111 100 111 000 | +16.000 | 3100 | 011 001 000 000 |
| -1.500 | -0226 | 111 101 101 010 | +17.000 | 3244 | 011 010 100 100 |
| -1.000 | -0144 | 111 110 011 100 | +18.000 | 3410 | 011 100 001 000 |
| -0.500 | -0062 | 111 111 001 110 | +19.000 | 3554 | 011 101 101 100 |
| | | | +20.000 | 3720 | 011 111 010 000 |
| | | | +20.470 | 3777 | 011 111 111 111 |

*The 12 bit data output (from the Fast A/D connector or the GPIB connector) is in two's complement. When the output information is displayed, the 12 bit data is presented (on the 6000 display) in signed octal format.

**Display cannot indicate greater than '3777'

3.7 CALIBRATION CHECK-SPECIFICATION VALIDATION

3.7.1 General.

3.7.1.2 This section contains procedures that compare the operation of the instrument against the published specifications found at the front of this manual. It is intended to be used for incoming inspection and as a periodic check to determine if recalibration of the instrument is warranted.

3.7.1.3 The procedures provide sufficient checks to verify proper operation and that the instrument is within the 90 day accuracy limits. Covers of the instrument are not removed for any of the tests. The required ambient temperature of the environment is $23^{\circ} \pm 5^{\circ}\text{C}$.

3.7.2 Required Equipment.

3.7.2.1 In Table 3.22 is a list of equipment necessary for checking the instrument. The equipment in this table, with the exception of those in the OTHER category, is the same as required for recalibration and is explained in detail in the following paragraphs.

3.7.2.2 The specific types of equipment in the Suggested Equipment column are acceptable for calibration and provided as a guide in selecting suitable equipment; instruments having operating characteristics equal to or better than those indicated may be substituted.

Table 3.22 - Required Equipment

| Function | Qty | Item | Minimum Use Specifications | Suggested Equipment |
|----------|-----|---|---|--|
| DC | (1) | Saturated Standard Cell Bank (6 cells) | 1 ppm, certified | EPPLEY 106 |
| | (2) | DC Voltages Sources | 0.1 ppm resolution | FLUKE 332B |
| | (2) | Voltage Divider, Adjustable | 0.1 ppm linearity | FLUKE 720A |
| | (1) | 10:1 Voltage Divider, Fixed | 1 ppm, Output Z \leq 10 Kohms | ESI RV622, With corrections |
| | (1) | 100:1 Voltage Divider, Fixed | 1 ppm, Output Z \leq 10 Kohms | ESI RV622, With corrections |
| | (2) | Null Detector/ μ Voltmeters | 1 μ V sensitivity | FLUKE 845AR |
| AC | (1) | Thermal Transfer Standard | 50 ppm | HOLT 6A, With corrections |
| | (1) | AC Voltage Source | 1 ppm resolution | HP745A/746A |
| Ω | (8) | Resistance Standards 10 Ω 100 Ω 1 K Ω 10 K Ω 100 K Ω 1 M Ω 10 M Ω 100 M Ω | 10 ppm 5 ppm 5 ppm 5 ppm 5 ppm 5 ppm 20 ppm 80 ppm | ESI SR1 with corrections ESI SR1 with corrections ESI SR1 with corrections ESI SR1 with corrections ESI SR1 with corrections ESI SR1 with corrections ESI SR1 with corrections ESI SR1 with corrections Fabricated |
| OTHER | (1) | Momentary Switch, SPST | — | — |
| | (2) | 1.5 volt cells w/screwtype binding posts | — | — |
| | (1) | Insulated Adjustment tool | — | JFD5284 |
| | (1) | 100 Ω , 10 Kilohm, 1 Megohm 1/4 Watt 5% Carbon Resistors | 5% | — |
| | (1) | 1 μ FD non polar capacitor | — | — |
| | (1) | 100M Ω , metal film resistor of known value | 25 ppm | — |

3.7.2.3 DC VOLTAGE SOURCES.

3.7.2.3.1 To produce voltage levels of necessary accuracy, special techniques are required. Suitable methods of generating these voltages are shown in Figures 3.28 and 3.29.

3.7.2.3.2 10 Volt Source.

3.7.2.3.2.1 A precise and traceable source of 10 volts is required, not only for calibrating the 10 volt range, but also as a reference for generating highly accurate .1, 1, 100, and 1000 volt levels. The 10 volt source used must satisfy the following requirements.

- a. It must be traceable to the National Bureau of Standards;
- b. It must have a total accuracy of 1.1 ppm;
- c. It must have a low output impedance.

3.7.2.3.2.2 A source filling these requirements is shown in Figure 3.28. This circuit consists of a null detector, 7-decade voltage divider, a DC voltage supply, and a bank of saturated standard cells. Two advantages of this particular hookup are that; (a) there is minimal loading of the standard cells and (b) stability, not accuracy, is the primary requirement of the dc voltage supply.

3.7.2.3.2.3 The output of this circuit is set to a precise 10 volts by setting the voltage divider to the value of the standard cells. The DC voltage source is then adjusted to produce a null on the null detector. The accuracy of the 10 volt source is within 1.1 ppm.

3.7.2.3.3 Other Sources.

3.7.2.3.3.1 The remainder of the DC sources can be generated by the circuits shown in Figure 3.29. Each of these hookups use a calibrated 10 volt source having the characteristics of the one previously described.

3.7.2.3.4 Accuracy, DC.

3.7.2.3.4.1 The accuracy of the DC voltage sources is obtained by adding the various sources of error in each hookup; errors in this discussion are defined in parts per million (ppm). For the 10 volt source, the error is the sum of the standard cell bank (certified at 1 ppm) and the voltage divider (0.1 ppm), giving a constant 1.1 ppm. In Table 3.23 is shown the errors of each voltage source, the total accuracy of each hookup, the accuracy of the Model 6000 DMM, and the degree to which the sources exceed the required accuracy of the DMM (4 to 10 times better is the suggested accuracy ratio per MIL-M-38793).

Table 3.23 - DC Source Accuracies

| Range | 10 Volt Source | Fixed Divider | Total Accuracy | 24 hr. DMM Full Scale Accuracy | Times Better |
|--------|----------------|---------------|----------------|--------------------------------|--------------|
| 10 | 1.1 ppm | — | 1.1 ppm | 10 ppm | 9 |
| 1 | 1.1 ppm | 1 ppm | 2.1 ppm | 20 ppm | 9.5 |
| 100 mV | 1.1 ppm | 1 ppm | 2.1 ppm | 70 ppm | 33 |
| 100 | 1.1 ppm | 1 ppm | 2.12 ppm | 20 ppm | 9.5 |
| 1000 | 1.1 ppm | 1 ppm | 2.12 ppm | 20 ppm | 9.5 |

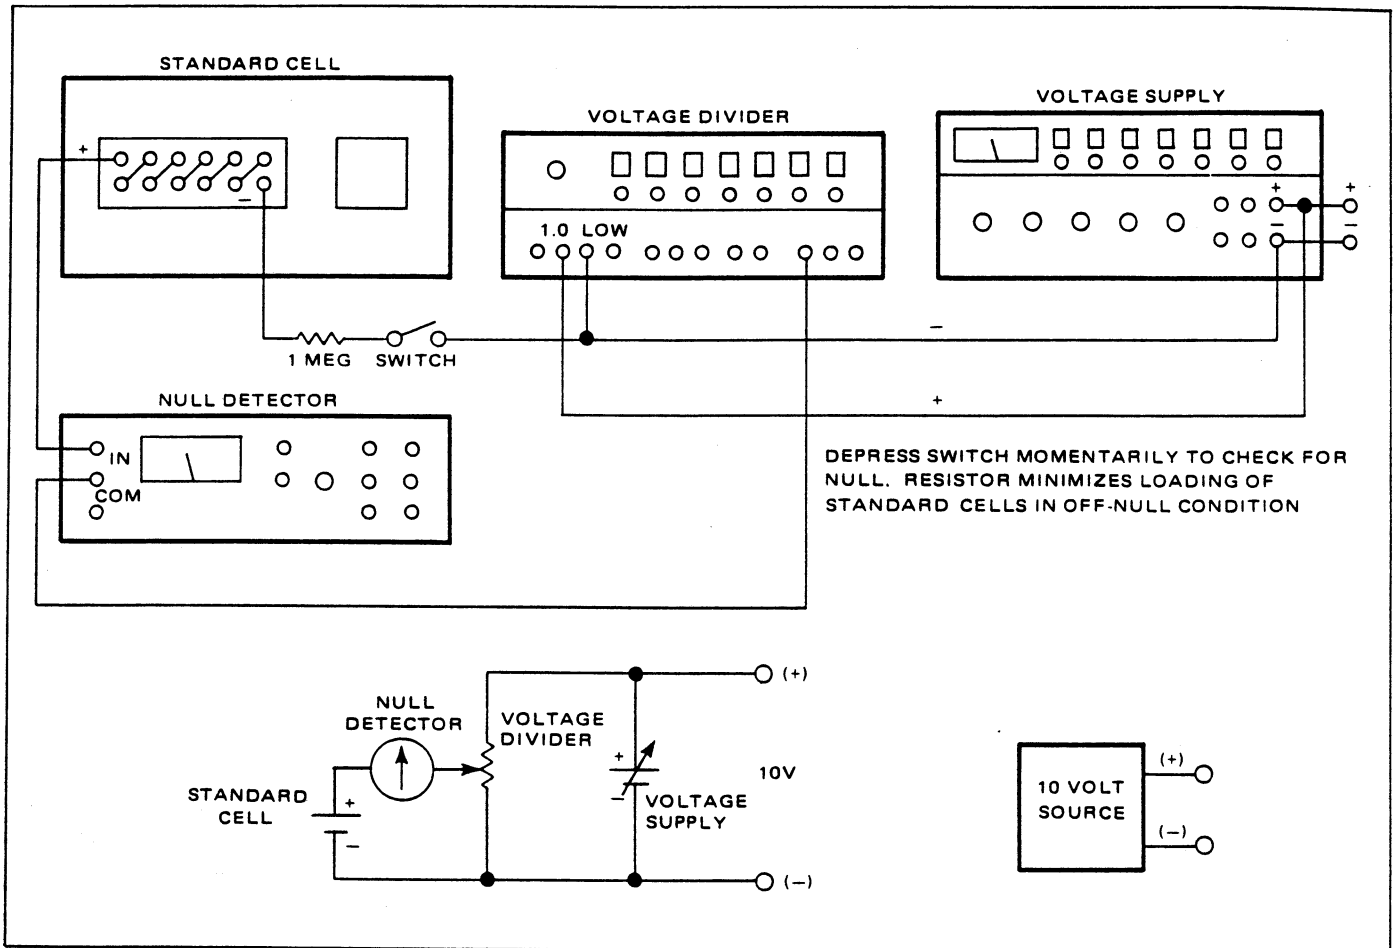


Figure 3.28 - 10 Volt Source


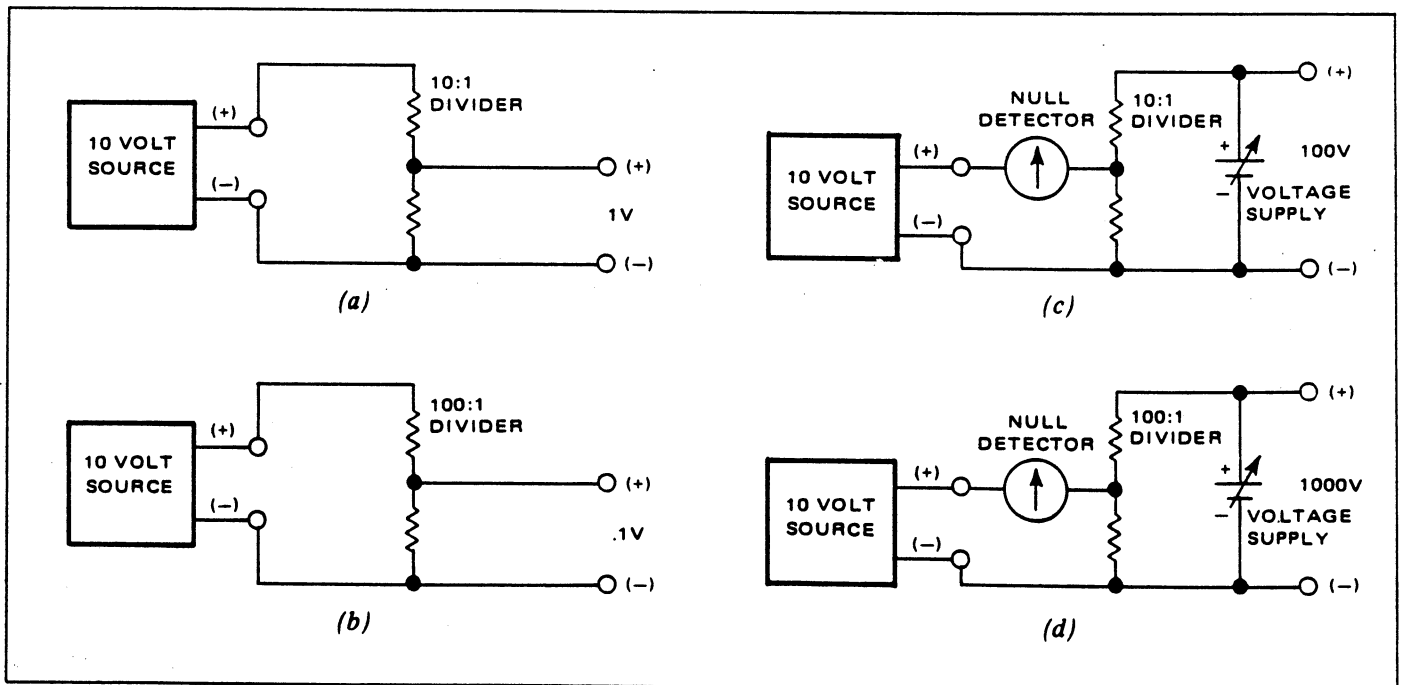



Figure 3.29 - Generating Accurate DC Levels

Table 3.24 - AC Source Accuracies

| INPUT | | ACCURACY | | |
|----------------------|--------|---------------------------|-----------|-----------------|
| AC Source | | Thermal Transfer Standard | DC Source | Total AC Source |
| Volts | Freq | | | |
| 1, 10, and 100 Volts | 400 Hz | 35 ppm | 10 ppm | 45 ppm |
| | 50 kHz | 50 ppm | | 60 ppm |
| 500 Volts | 40 kHz | 50 ppm | | 60 ppm |
| 1000 Volts | 400 Hz | 52 ppm | | 62 ppm |

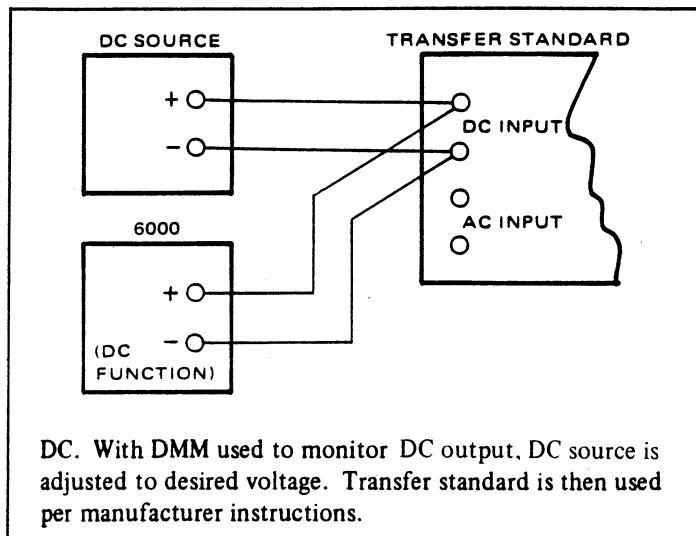

DC. With DMM used to monitor DC output, DC source is adjusted to desired voltage. Transfer standard is then used per manufacturer instructions.

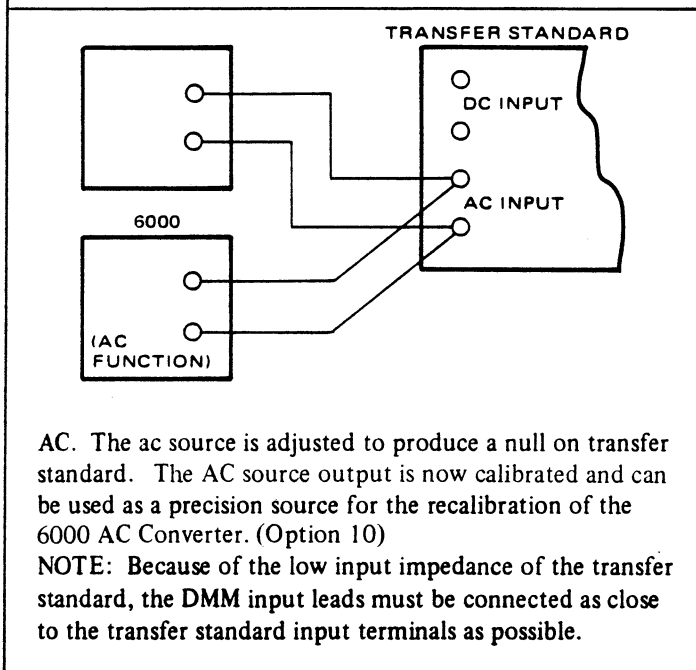

AC. The ac source is adjusted to produce a null on transfer standard. The AC source output is now calibrated and can be used as a precision source for the recalibration of the 6000 AC Converter. (Option 10)

NOTE: Because of the low input impedance of the transfer standard, the DMM input leads must be connected as close to the transfer standard input terminals as possible.

Figure 3.30 - AC Source

3.7.2.4 AC VOLTAGE SOURCES.

3.7.2.4.1 The generation of accurate ac signals for checking the AC Converter ranges, requires the use of a thermal transfer standard and a precise DC standard as well as a stable AC source. Sufficient accuracy can be obtained by using a DC source and the Model 6000 being tested. The

circuitry connections are shown in Figure 3.30. Information on the use of the transfer standard can be obtained from the operators manual accompanying the standard. The 6000 is used to set the DC source to the desired voltage; the thermal transfer standard is then used to calibrate the output of the AC source. The calibrated AC source is used to check the 6000 AC Converter. This procedure is repeated for each range.

3.7.2.4.2 Accuracy, AC.

3.7.2.4.2.1 The accuracy of the AC source is equal to the sum of the transfer standard accuracy and the accuracy of the DC source. The accuracy of the setup for each range and frequency used is provided in Table 3.24.

3.7.3 Procedure.

3.7.3.1 Allow two hours for warmup. Connect the instrument and the test equipment as shown in the figure supplied with each accuracy check. Select the controls and inputs as called out in the tables and monitor the instrument readout for the indicated values. The specification tests are performed using the front panel input connectors. (Front input is selected by pressing the SHIFT FR keys (ref 24) and

9, Figure 3.2 and Table 3.2) so that the RI annunciator is off (ref 29, Figure 3.1 and Table 3.1).

Table 3.25 - DC Range Check (Low Ranges)

| DVM | | INPUT SIGNAL | | NOMINAL READING (5-1/2 Digit Mode) | TOLERANCE (90 Day Spec) | NOTE |
|----------|--------|---------------------|-----------------|---------------------------------------|----------------------------|--------------------------------|
| FUNCTION | RANGE | DC VOLTAGE STANDARD | DIVIDER SETTING | | | |
| DC | 100 mV | 10.00000 | .01000 | 100.000 | 099.992 – 100.008 | 23°C ± 5°C (After Auto Cal) |
| | 1V | 10.00000 | .10000 | 1.00000 | 0.99997 – 1.00003 | |




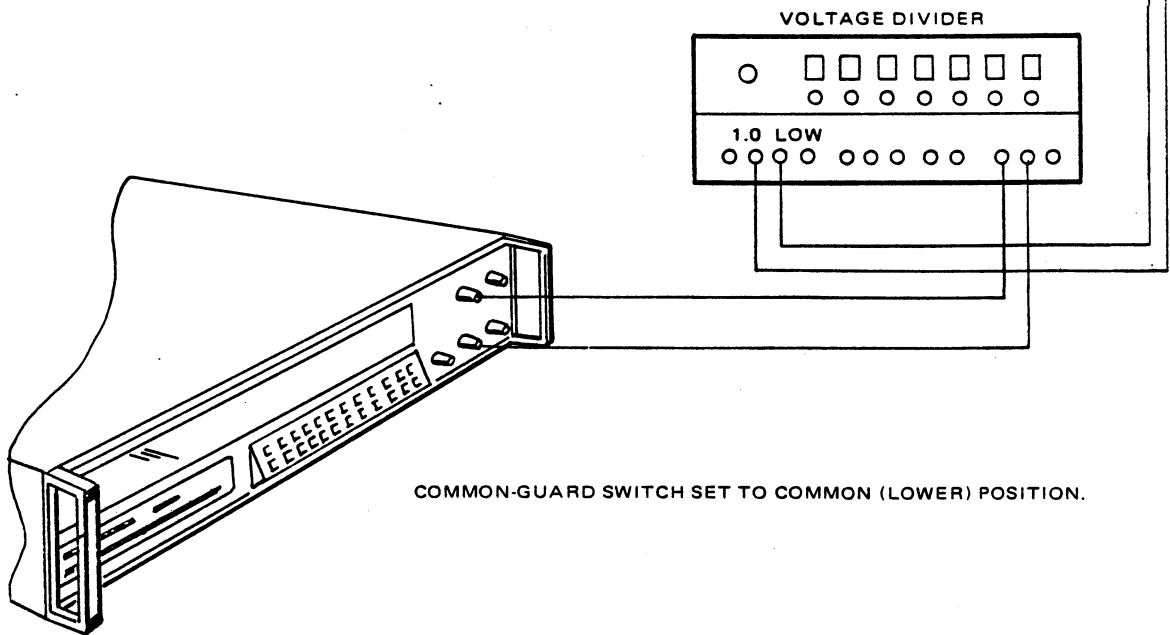


Table 3.26 - DC Range Check (High Ranges)

| DVM | | INPUT SIGNAL | | NOMINAL READING (5 1/2 Digit Mode) | TOLERANCE (90 Day Spec) | NOTE |
|----------|-------|---------------------|--|---------------------------------------|----------------------------|-------------------------------------|
| FUNCTION | RANGE | DC VOLTAGE STANDARD | | | | |
| DC | 10 | 10.0000V | | 10.0000 | 9.9998 – 10.0002 | 23°C ± 5°C (After Auto Cal) * |
| | 100 | 100.000V | | 100.000 | 99.997 – 100.003 | |
| | 1000 | 1000.00V | | 1000.00 | 999.97 – 1000.03 | |

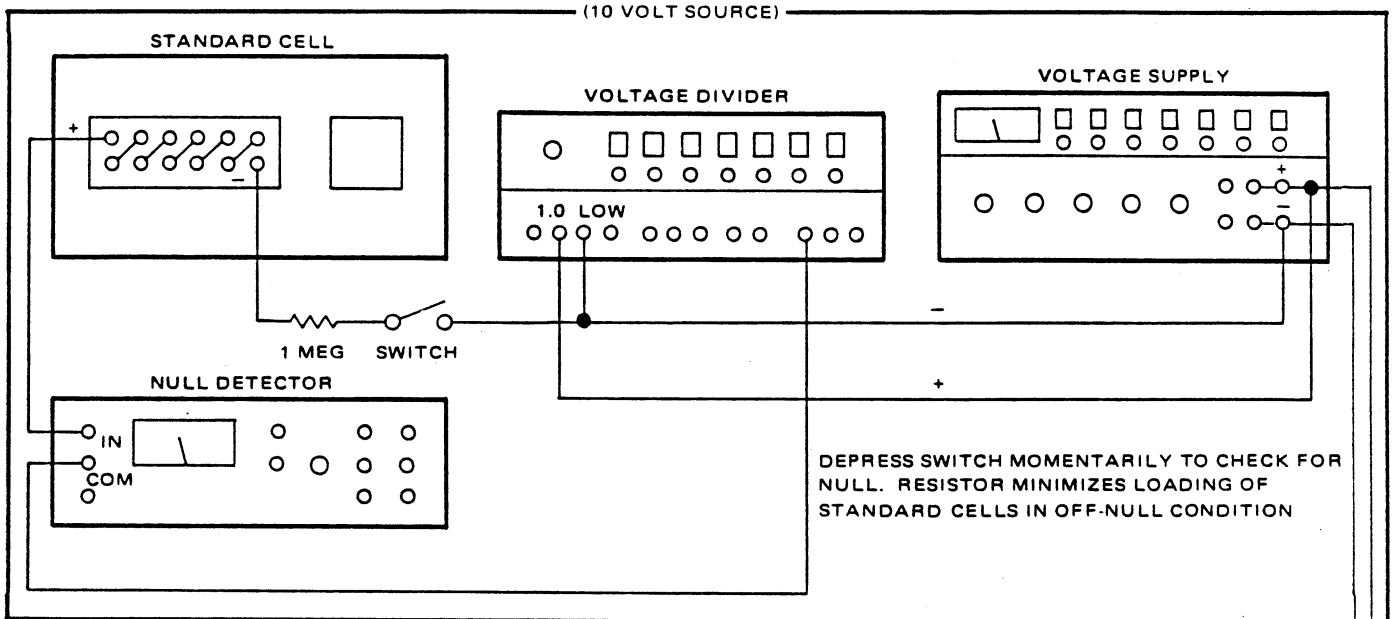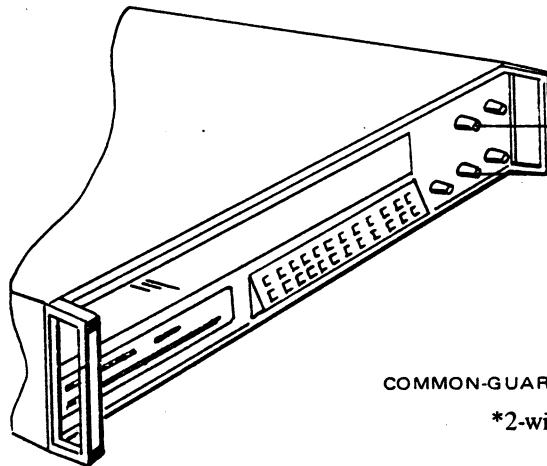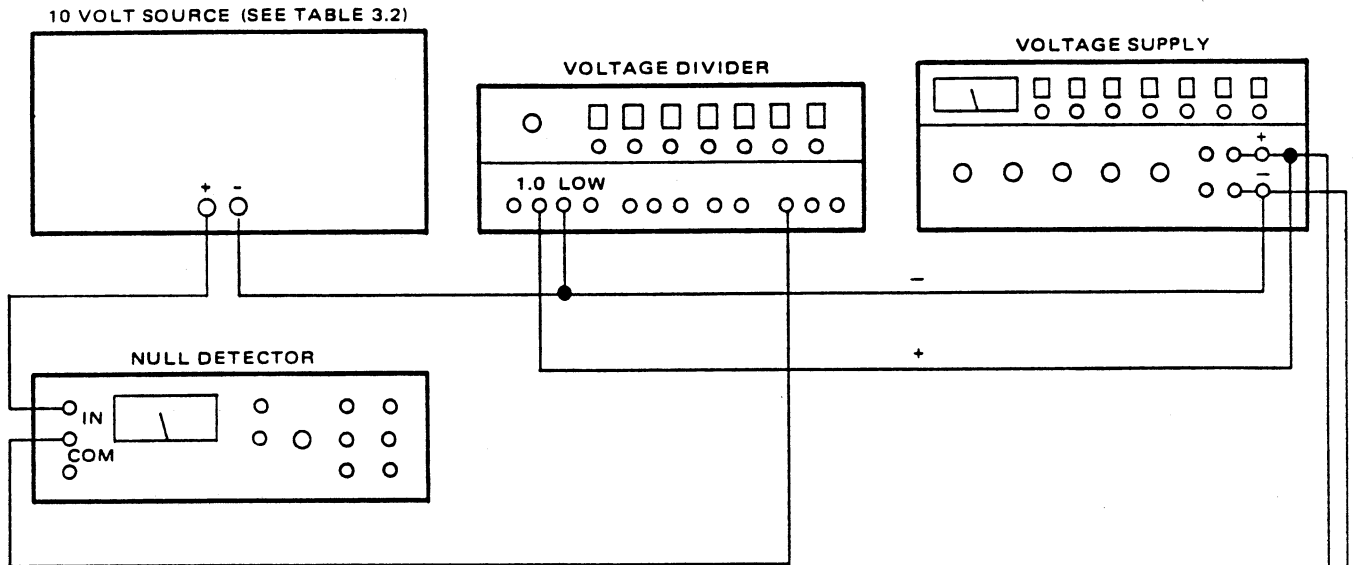

COMMON-GUARD SWITCH SET TO COMMON (LOWER) POSITION.

*2-wire/4-wire switch to 4-wire

Table 3.27 - 4-Wire Ratio Check (Option 34)

| DVM | | INPUT SIGNAL | | NOMINAL READING | TOLERANCE (90 Day Spec) | NOTE |
|----------|-------|--------------|----------|-----------------|-------------------------|--------------------------------|
| FUNCTION | RANGE | FRONT | REAR | | | |
| DC RATIO | 10V | +1.00000 | +1.00000 | +1.00000 | 9.9960-1 - 1.00040 | 23°C ± 5°C (After Auto Cal) |
| | | +10.0000 | +10.0000 | +1.00000 | 9.9960-1 - 1.00040 | |
| | | -10.0000 | +10.0000 | -1.00000 | 9.9960-1 - 1.00040 | |

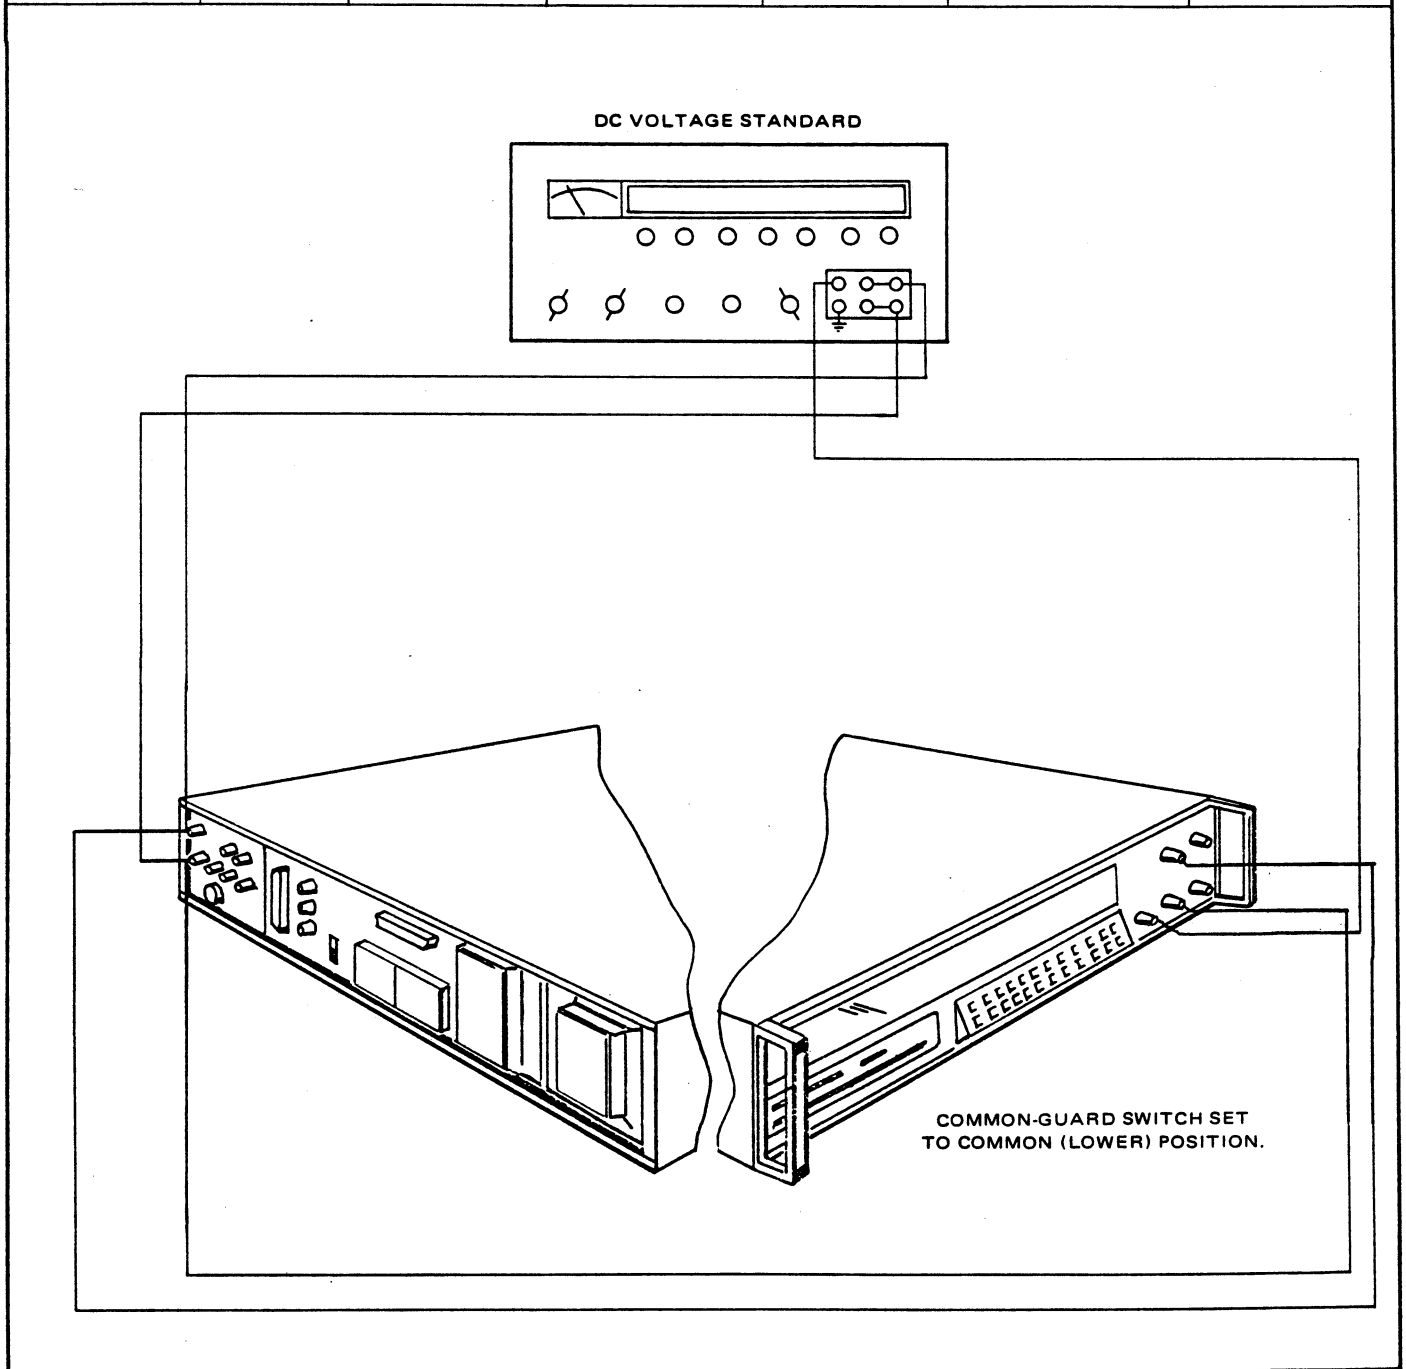


Table 3.28 - RMS AC Converter Range Check (Option 10)

| DVM | | INPUT SIGNAL | | NOMINAL READING (5-1/2 Digit Mode) | TOLERANCE | NOTE (90 Day Spec) |
|----------|-------|---------------------|----------------|---------------------------------------|------------------|-------------------------------------|
| FUNCTION | RANGE | DC VOLTAGE STANDARD | AC | | | |
| AC | 1 | 1.000000 | 1V @ 400 Hz | 1.00000 | .99870 - 1.00130 | 23°C ± 5°C (After Auto Cal) * |
| | | 1.000000 | 1V @ 50 kHz | 1.00000 | .99800 - 1.00200 | |
| | 10 | 10.00000 | 10V @ 400 Hz | 10.0000 | 9.9870 - 10.0130 | |
| | | 10.00000 | 10V @ 50 kHz | 10.0000 | 9.9800 - 10.0200 | |
| | 100 | 100.0000 | 100V @ 400 Hz | 100.000 | 99.870 - 100.130 | |
| | | 100.0000 | 100V @ 50 kHz | 100.000 | 99.800 - 100.200 | |
| | 1000 | 1000.000 | 1000V @ 400 Hz | 1000.00 | 997.40 - 1002.60 | |
| | | 500.000 | 500V @ 40 kHz | 500.00 | 498.50 - 501.50 | |
| | | | | | | |

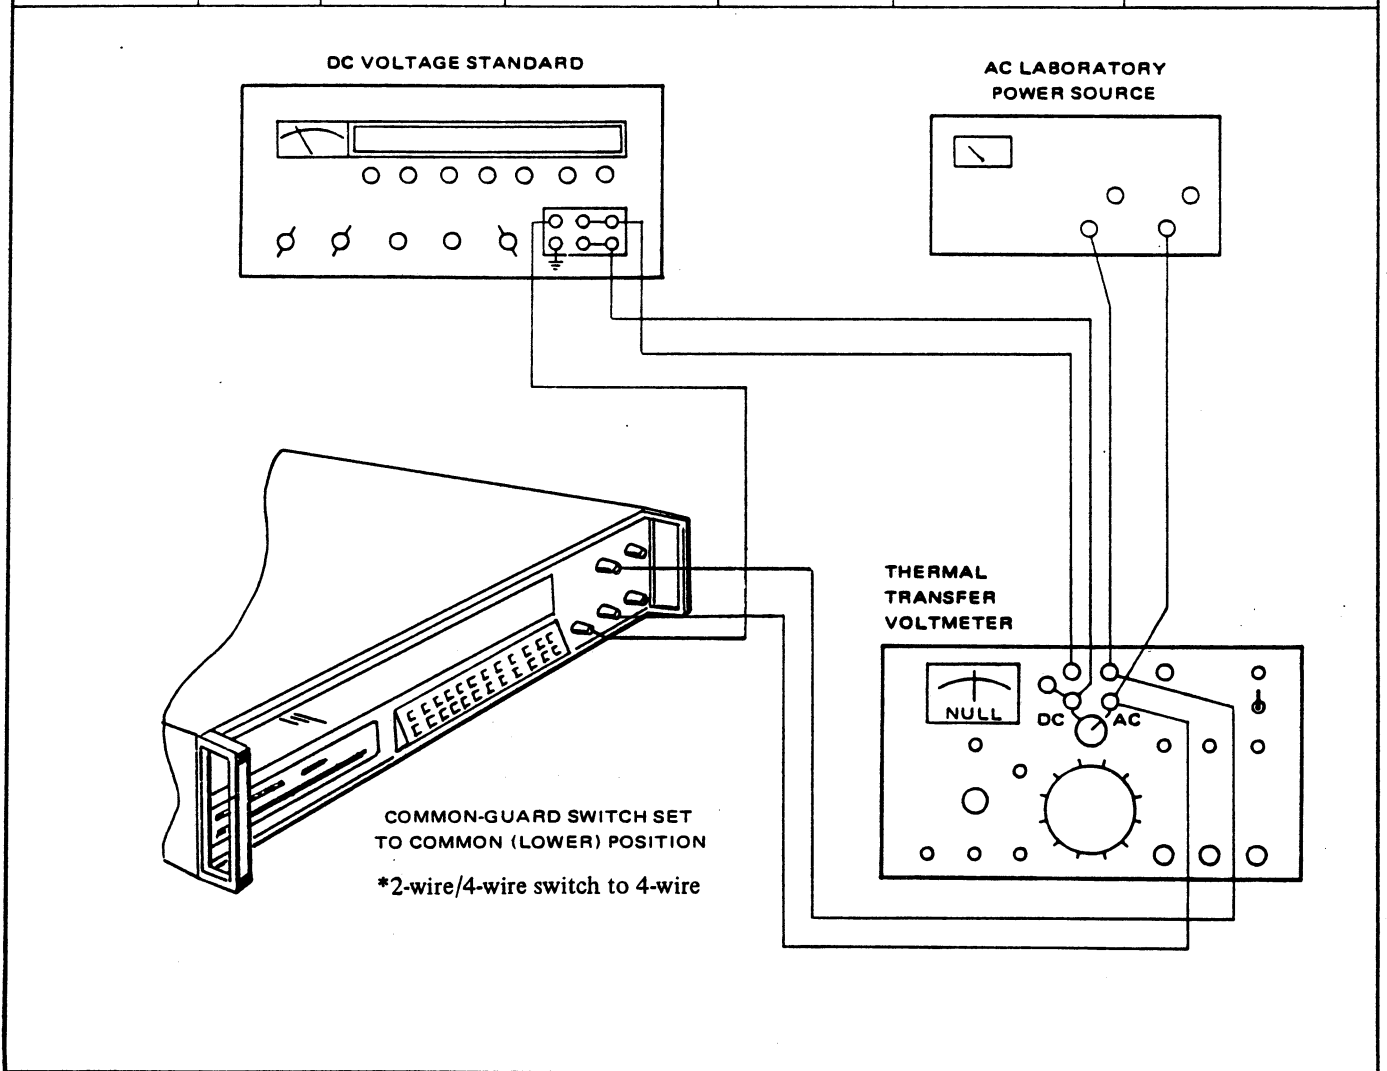


Table 3.29 - AC/AC Ratio Check (Option 11)

| DVM | | INPUT SIGNAL | | NOMINAL READING (5-1/2 Digit Mode) | TOLERANCE | NOTE (90 Day Spec) |
|-------------------------|-------|--------------|----------------|---|------------------|--------------------------------|
| FUNCTION | RANGE | | AC | | | |
| AC HARDWARE RATIO | 1 | | 1V @ 400 Hz | 1.00000 | .99740 - 1.00260 | 23°C ± 5°C (After Auto Cal) |
| | 10 | | 10V @ 400 Hz | 1.00000 | .99740 - 1.00260 | |
| | 100 | | 100V @ 400 Hz | 1.00000 | .99740 - 1.00260 | |
| | 1000 | | 1000V @ 400 Hz | 1.00000 | .99540 - 1.00460 | |


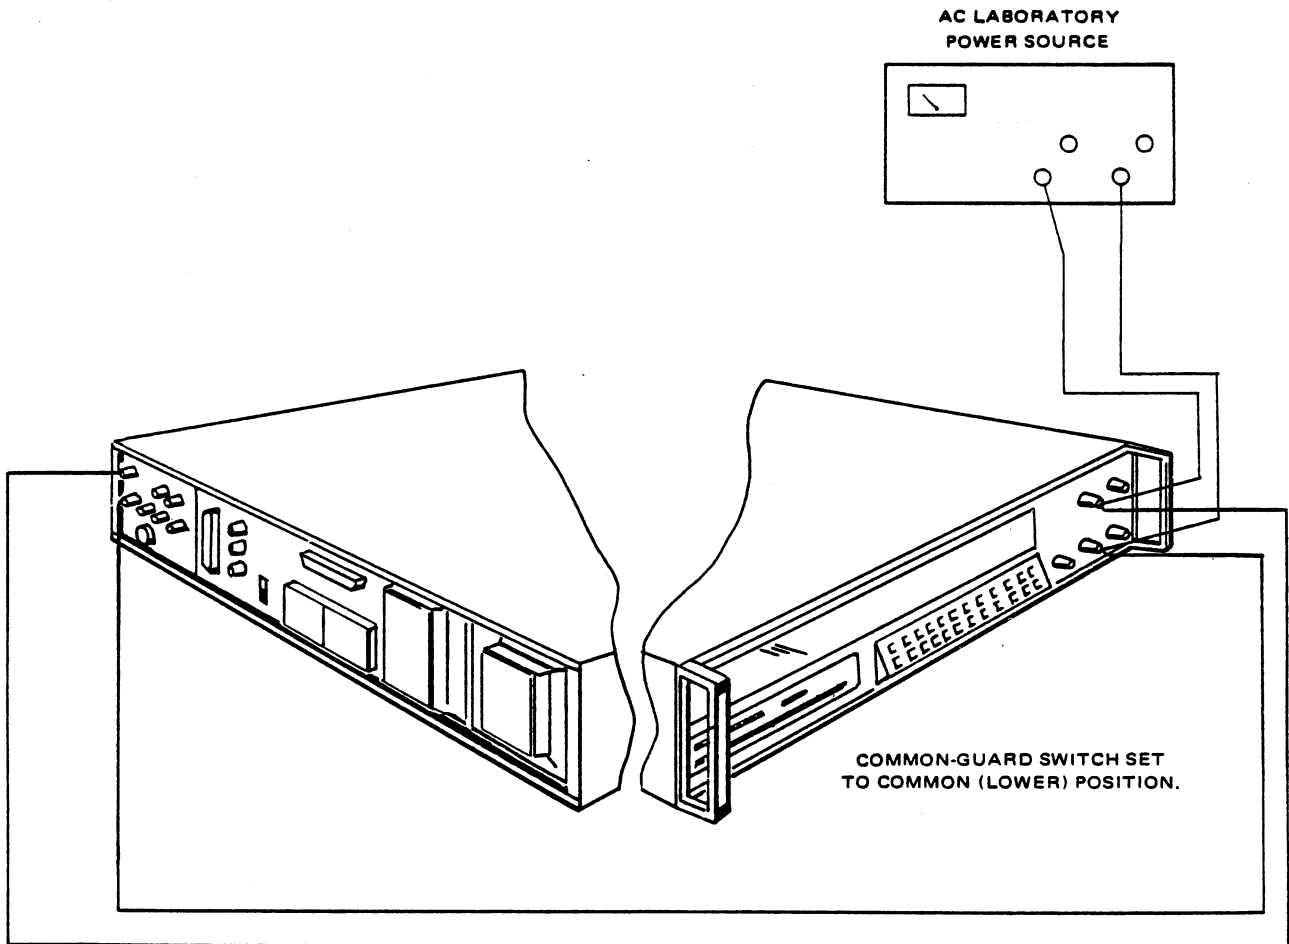


Table 3.30 - Ohms-Megohms Range Check (Options 24 and 41)

| DVM | | INPUT SIGNAL | | NOMINAL READING (5-1/2 Digit Mode) | TOLERANCE* (90 Day Spec) |
|-------------------------------------|------------------------|------------------------|---------------------------------|---------------------------------------|--|
| FUNCTION | RANGE | NOMINAL STANDARD VALUE | STANDARD VALUE KNOWN TO WITHIN: | | |
| Ω - $M\Omega$ (Option 24) | 10Ω | 10Ω | $\pm .001\%$ | 10.0000 | ± 11 digits |
| | 100Ω | 100Ω | $\pm .0005\%$ | 100.0000 | ± 5 digits |
| | $1\text{ k}\Omega$ | $1\text{ k}\Omega$ | $\pm .0005\%$ | 1.00000 | ± 5 digits |
| | $10\text{ k}\Omega$ | $10\text{ k}\Omega$ | $\pm .0005\%$ | 10.0000 | ± 5 digits |
| | $100\text{ k}\Omega$ | $100\text{ k}\Omega$ | $\pm .0005\%$ | 100.000 | ± 5 digits |
| | $1\text{ M}\Omega$ | $1\text{ M}\Omega$ | $\pm .0005\%$ | 1.00000 | ± 5 digits |
| | $10\text{ M}\Omega$ | $10\text{ M}\Omega$ | $\pm .002\%$ | 10.0000 | ± 33 digits |
| | $100\text{ M}\Omega^*$ | $100\text{ M}\Omega$ | $\pm .01\%$ | 100.000 | ± 51 digits |
| Ω (Option 24 and 41) | 1Ω | 1Ω | $.002\%$ | 1.00000 | ± 40 digits (see procedure section 3.3.6) |

*After Autocal

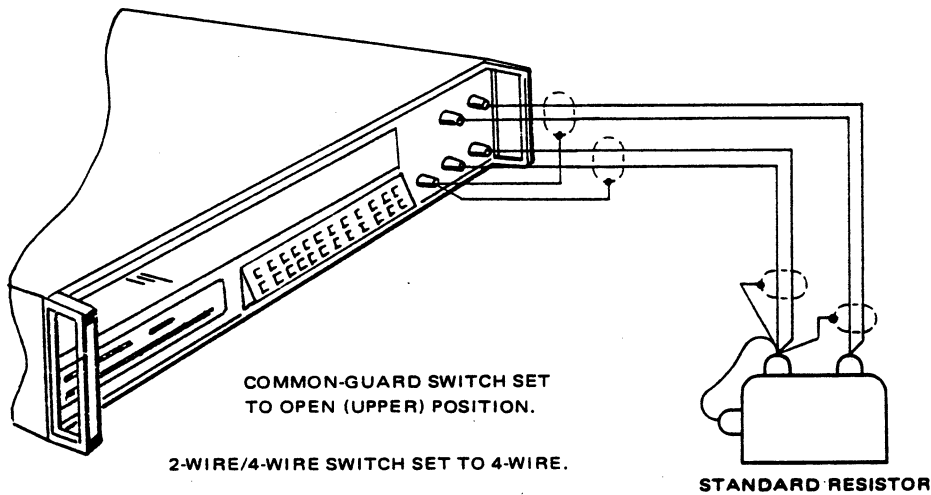

*Use cabling and Ohms Guard connections shown in Figures 3.5b or 3.5c for $100\text{ M}\Omega$ measurement.

Table 3.31 - Common Mode Rejection (In DC Volts Function)

| DVM | | INPUT SIGNAL | | NOMINAL READING (5-1/2 Digit Mode) See Note 1 | TOLERANCE | NOTE |
|------------------|--------|--------------|--|---|---------------------------|--|
| FUNCTION | RANGE | S1 | | | | |
| DCV FILT. OUT | 100 mV | Off | | | ±1 digit from nominal | 1) With switch S-1 in the off position, record the reading displayed on the DMM's readout in the "nominal reading" boxes of the table. |
| | | DC | | | ± 50 digits from nominal | |
| | | AC | | | ±25 digits from nominal | |
| DCV FILT. IN | 100 mV | DC | | | ± 50 digits from nominal | |
| | | AC | | | ± 2.5 digits from nominal | |

NOTE: THE TWO BACK TO BACK 1.5V BATTERIES PROVIDE A SMALL INPUT SIGNAL OF SEVERAL MILLIVOLTS TO OFFSET THE READING FROM ZERO (SINCE NO TWO SUCH BATTERIES ARE EQUAL IN VOLTAGE). THIS AVOIDS POLARITY CHANGES DURING CMR TESTS WHICH MAY MAKE THE READING HARD TO INTERPRET.

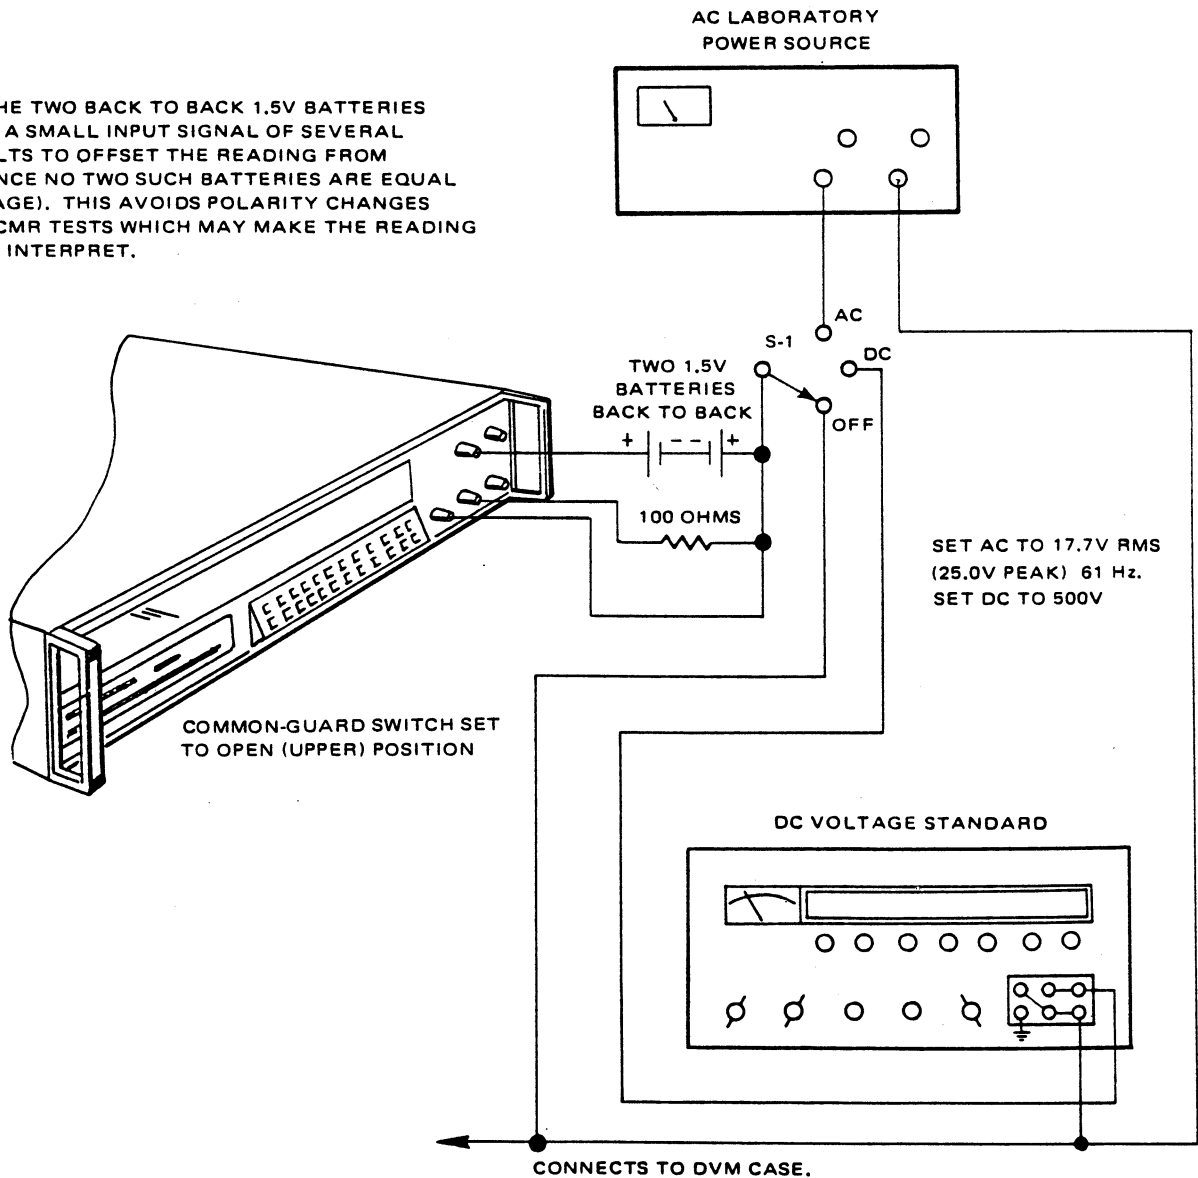


Table 3.32 - Normal Mode Noise Rejection (In DC Volts Function)

| DVM | | INPUT SIGNAL | | NOMINAL READING (5-1/2 Digit Mode) | TOLERANCE | NOTE |
|-----------------|-------|--------------|--------------|---|-------------|------|
| FUNCTION | RANGE | DC | AC | | | |
| DC FILT. OUT | 10 | 0.5V | 10V*, 60 Hz† | 00.5000 | ±400 digits | |
| FILT. IN | 1V | 0.5V | 2V*, 60 Hz† | 0.50000 | ± 2 digits | |

*peak
†50 Hz (50 Hz Option)


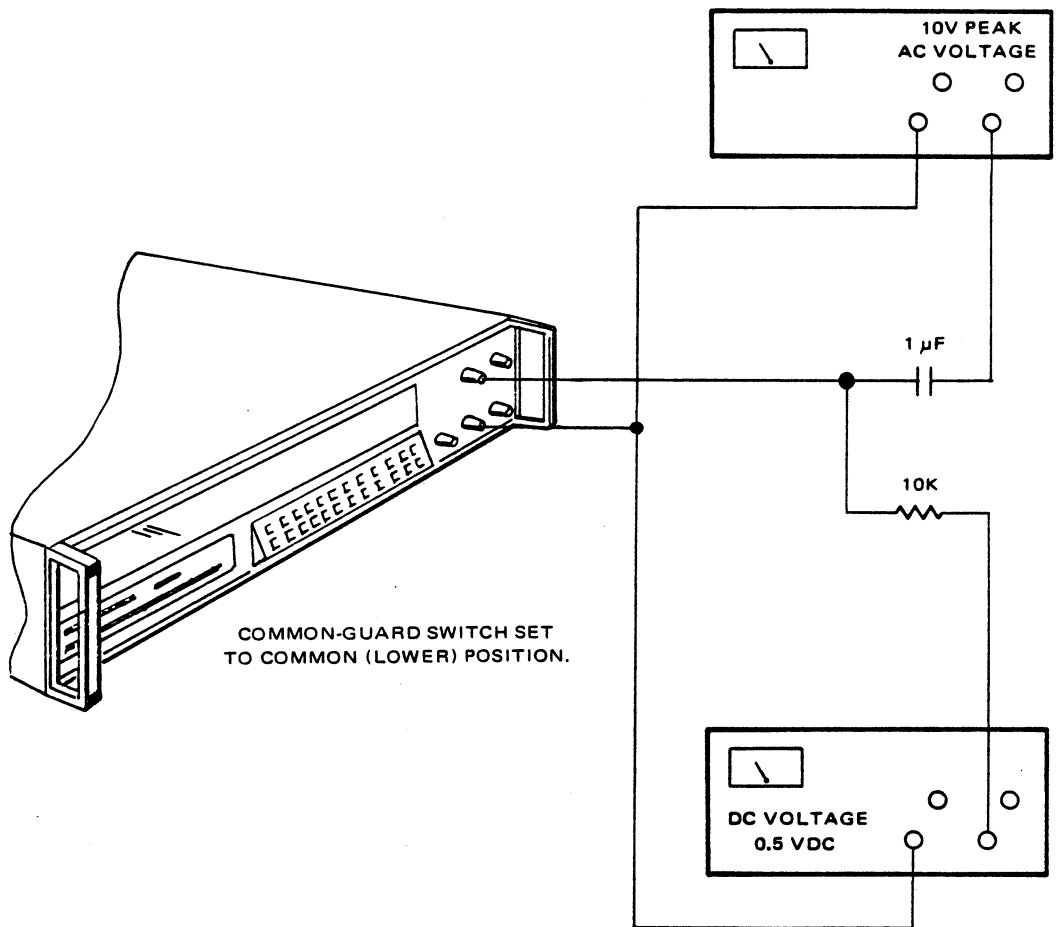


Table 3.33 - Common Mode Rejection (In AC Volts Function)

| DVM | | COMMON MODE INPUT SIGNAL | | NOMINAL READING (see note) | TOLERANCE | NOTE |
|----------|-------|--------------------------|-------|-------------------------------|------------|---|
| FUNCTION | RANGE | VOLTAGE | FREQ. | | | |
| AC | 1 | 100V Peak | 60 Hz | | ±10 digits | Enter reading with shorted input in nominal column before beginning |
| | 10 | 100V Peak | 60 Hz | | ±1 digit | |
| | 100 | 100V Peak | 60 Hz | | ±1 digit | |
| | 1000 | 100V Peak | 60 Hz | | ±1 digit | |

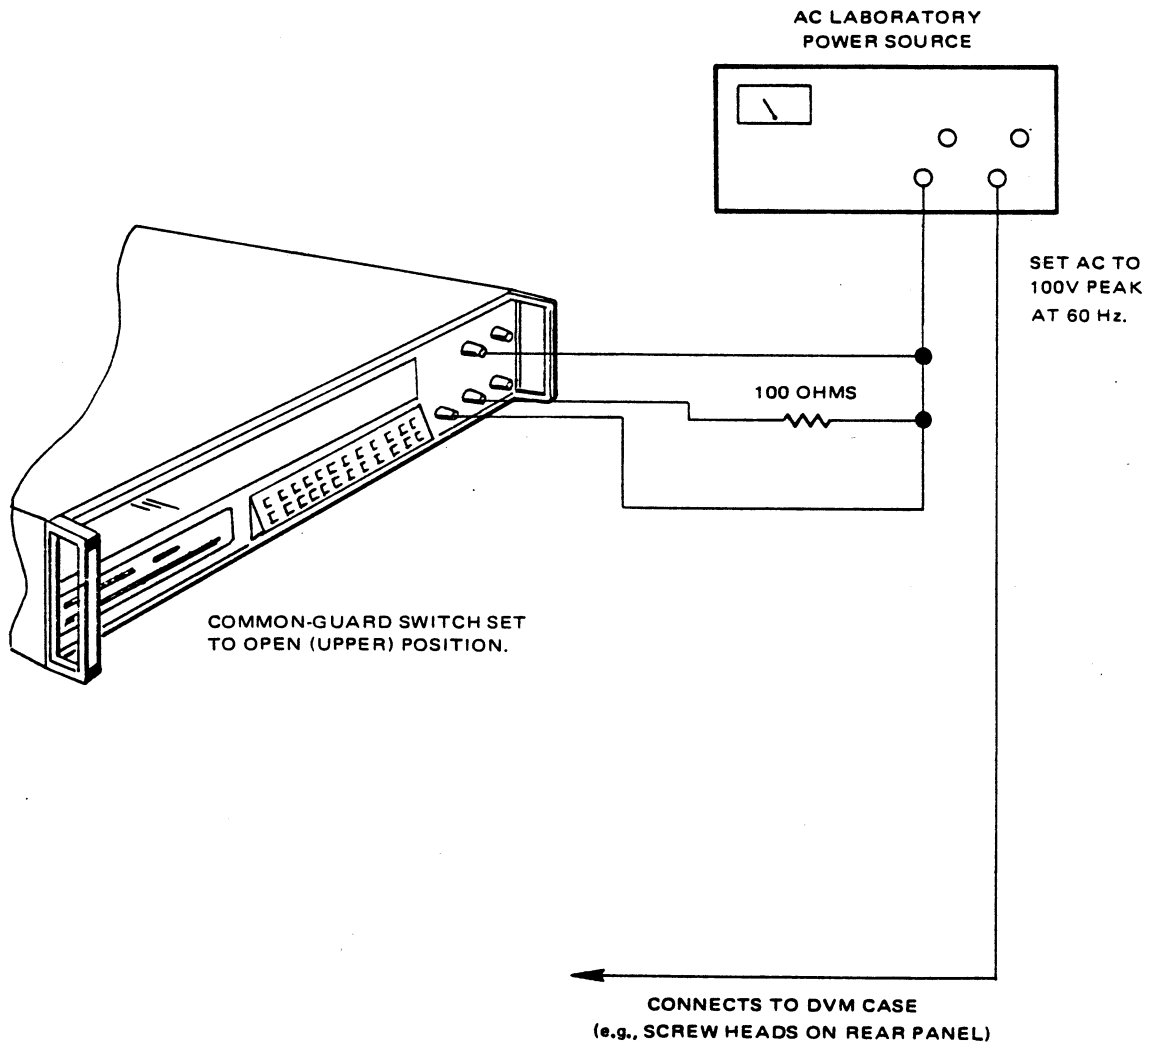

3.8 LABORATORY CALIBRATION.

3.8.1 General procedures are presented in this subsection for recalibration of the Series 6000 Exchangeable Cal-Module. The Exchangeable Cal-Module allows a Series 6000 Amplitude Measurement System to be calibrated by exchanging the Calibration Module with a calibrated module, or calibrating the Module in place. If the Module is exchanged, the Module needing calibration can be plugged into another 6000 or a Calibration Test Assembly for calibration. See Table 3.22 for Test Equipment.

3.8.2 Calibration Setup.

3.8.2.1 Remove factory seal protecting Cal Switch, No. 10 on rear panel. Replace seal upon completion of calibration.

3.8.2.2 Apply power to instrument and allow at least 2 hours warmup at an ambient temperature of $23 \pm 1^\circ\text{C}$. unless otherwise noted.

3.8.2.3 DIGITAL™ DIGITAL CALIBRATION.

3.8.2.3.1 Most of the Model 6000 functions and ranges may be calibrated from the front panel, without removing the covers. Correction factors are stored in non-volatile memory and remain valid even when power is removed from the DMM.

3.8.2.3.2 *Non-Volatile Memory Access.* Access to the Lab-Cal scale factors is provided so that they may be logged and compared with previous scale factors. Entry to non-volatile memory is made as follows:

| Step | Key | Display |
|------|-----------------------------------|--------------------------------|
| 1 | SHIFT <input type="checkbox"/> | SFT |
| 2 | MEM <input type="checkbox"/> | Contents of memory location 1. |

3.8.2.3.3 The contents of succeeding memory locations may be displayed by toggling the UP key. Each press of

the key will increment the memory location counter by one. Memory contents are listed in Table 3.34.

3.8.2.4 CALIBRATION TEST ASSEMBLY.

3.8.2.4.1 The Calibration Module may be inserted into a Series 6000 Calibration Test Assembly for calibration and/or troubleshooting. The Calibration Test Assembly electronics are fully compatible with the Model 6000 DMM, but the keyboard and annunciators have been modified to facilitate the calibration process (reference Figure 3.31).

Table 3.34 - Non-Vol Memory Contents

| Memory Location | Scale Factor |
|-----------------|--|
| 1 | +10 volt reference |
| 2 | Preamplifier gain |
| 3 | 100 mV range gain |
| 4 | 1 volt range gain |
| 5 | -10 volt reference |
| 6 | Attenuator -100 volt range |
| 7 | Attenuator -1000 volt range |
| 8 | 1Ω range |
| 9 | 10Ω range |
| 10 | 100Ω range |
| 11 | 1KΩ range |
| 12 | 10KΩ reference resistor |
| 13 | 100KΩ range |
| 14 | 1MΩ range |
| 15 | 10MΩ range |
| 16 | 100MΩ range |
| 17 | } Unused, may display "Error 14" on some models. |
| 18 | |
| 19 | |
| 20 | |
| 21 | |
| 22 | } Auto-Cal inhibit bit - Auto-Cal is inhibited if the MSD is a zero and enabled if the MSD is a one. |
| 23 | |
| 24 | |

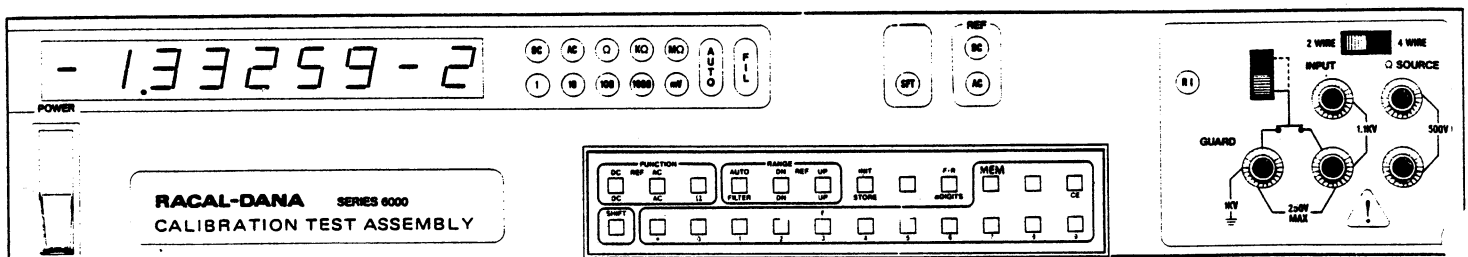


Figure 3.31 - Calibration Test Assembly Front Panel

3.8.3 Inhibiting Automatic Auto-Cal.

3.8.3.1 Automatic Auto-Cal may be temporarily inhibited by either a keyboard command (reference Table 3.2) or upon an instruction received at the systems interface. A more permanent inhibit command (unaffected by power switch cycling) may be entered into non-volatile memory as follows:

- a. Perform Step 0 in Table 3.35
- b. Press 0 (zero) Key
- c. Press STORE Key

3.8.3.2 The Auto-Cal inhibit may be removed as follows:

- a. Perform Step 0 in Table 3.35
- b. Press 1 Key
- c. Press STORE Key

3.8.4 Basic Cal-Module Calibration.

3.8.4.1 The Calibration Module for a basic DC measuring instrument (no options) is calibrated using steps 0-10 in Table 3.35.

3.8.5 Cal-Module Calibration With Options Installed.

3.8.5.1 OHMS (OPTION 24).

3.8.5.1.1 Perform DC and Ohms Calibration (steps 0-21 in Table 3.35).

NOTE

If the 100 mVDC, 1 VDC, 10 VDC and 10 mVDC (if installed) ranges perform within specification, DC calibration is not a prerequisite for Ohms Calibration and can be skipped.

3.8.5.2 TRUE RMS AC VOLTS (OPTION 10).

3.8.5.2.1 Perform DC Calibration (steps 0-10) and AC Calibration (steps 22-27) in Table 3.35.

NOTE

If the 1 VDC range performs within specifications, DC Calibration is not a prerequisite for AC Calibration and can be skipped.

3.8.5.3 AVERAGING AC VOLTS (OPTION 14).

3.8.5.3.1 Perform DC Calibration (steps 0-10) and AC Calibration (steps 22-26 and 28) in Table 3.35.

NOTE

If the 1 VDC range performs within specifications, DC Calibration is not a prerequisite for AC Calibration and can be skipped.

3.8.5.4 DC MILLIVOLTS (OPTION 41).

3.8.5.4.1 Perform DC Calibration (steps 0-10 in Table 3.35).

Table 3.35 - Laboratory Calibration Procedure

| Step | Instruction | To Skip a Step | Display | Meaning |
|-----------------------|---|----------------------------------|---|--|
| 0 | Move CAL SW ON (up), on Rear Panel # 10. Note: Remove Factory Seal. | ✗ | Lb CAL 0 Err 33 | Go to 1a to Calibrate DC Function. <u>Go to 1b to Skip.</u> Non-Vol. memory will not write |
| DC CALIBRATION | | | | |
| 1a | Press FILTER Key to proceed with DC Calibration | | Lb CAL 1 | Go to 2 |
| 1b | Press DN Key to Skip all DC Calibration | | OH CAL 0 | DC CAL has been Skipped. Go to 11. |
| 2 | Apply -10V IN and press FILTER Key | Not Allowed <i>WAIT FOR -</i> | Lb CAL 1 Lb CAL 2 | Internal Operation Go to 3 |
| 3 | Apply +10V IN and press FILTER Key | Not Allowed <i>WAIT FOR -</i> | Lb CAL 2 Lb CAL 3 | Internal Operation Go to 4 |
| 4 | Apply 0.0V IN and press FILTER Key | Not Allowed | dc CAL 5 dc CAL 6 dc CAL 7 dc CAL 8 -1.00XXX (nominal) | Internal Operation Internal Operation Internal Operation Internal Operation if 10 mV Option Installed Normalized Value of -10V Reference Go to 4a |
| 4a | Press FILTER Key | Not Allowed | 1.00XXX (nominal) | Normalized Value of +10V Reference Go to 4b |
| 4b | Press FILTER Key | Not Allowed | Lb CAL 4 10 mV Range Lb CAL 4 100 mV Range | Go to 5 if 10 mV Option installed. Go to 6 |
| 5 | Apply +0.01V IN and press FILTER Key | Press DN Key and go to 6 | 7.2XXXX-1 (nominal) | Scale Factor - 10 mV Range Go to 5a |
| 5a | Press FILTER Key | | Lb CAL 4 100 mV Range | Go to 6 |

Table 3.35 - Laboratory Calibration Procedure continued

| Step | Instruction | To Skip a Step | Display | Meaning |
|-------------------------|---|---|----------------------------------|---|
| 6 | Apply +0.10V IN and press FILTER Key | Press DN Key and go to 7 | 1.XXXXX (nominal) | Scale Factor - 100 mV Range Go to 6a |
| 6a | Press FILTER Key | | Lb CAL 4 1V Range | Go to 7 |
| 7 | Apply +1.0V IN and press FILTER Key | Press DN Key and go to 8 | 1.XXXXX (nominal) | Scale Factor - 1V Range Go to 7a |
| 7a | Press FILTER Key | ----- | Lb CAL 4 100V Range | Go to 8 |
| 8 | Apply +100V IN and press FILTER Key | Press DN Key and go to 9 | 1.XXXXX (nominal) | Scale Factor - 100V Range Go to 8a |
| 8a | Press FILTER Key | ----- | Lb CAL 4 1000V Range | Go to 9 |
| 9 | Apply +1000V IN and press FILTER Key | Press DN Key and go to 10 | 1.XXXXX (nominal) | Scale Factor - 1000V Range Go to 9a |
| 9a | Press FILTER Key | ----- | Lb CAL 5 1000V Range | Go to 10 |
| 10 | Remove +1000V IN | Press DN Key and go to 11 (OH CAL 0) or 22 (AC CAL 0) | Lb CAL 5 | Remove 1000V IN before proceeding. Go to 10a |
| 10a | Press FILTER Key | | OH CAL 0 AC CAL 0 Lb CAL E | Go to 11 Go to 22 Lab CAL is terminated Go to 10b |
| 10b | Move CAL SW Off (Down) | <i>IF NOT DISPLAY CLEAR</i> | 6000 | |
| OHMS CALIBRATION | | | | |
| 11 | | | OH CAL 0 | Go to 11a to Calibrate Ohms Function. Go to 11b to Skip. |
| 11a | Press FILTER Key to proceed with Ohms Calibration | | Lb CAL 6 | Go to 12 |
| 11b | Press DN Key to Skip all Ohms Calibration | | AC CAL 0 Lb CAL E | Ohms CAL has been Skipped. Go to 22. Lab CAL is terminated Go to 21 |

Table 3.35 - Laboratory Calibration Procedure continued

| Step | Instruction | To Skip a Step | Display | Meaning |
|------|---|---------------------------|---|--|
| 12 | Apply zero ohms in 4-wire connection and press FILTER Key (See Figure 3.29 for connections if 1 Ω option installed). | Not Allowed | OH CAL 1 OH CAL 2 OH CAL 3 OH CAL 4 OH CAL 5 OH CAL 6 Lb CAL 7 10 K Ω Range | Internal Operation Internal Operation Internal Operation Internal Operation Internal Operation Internal Operation (if 1 Ω option installed) Go to 12a |
| 12a | Apply 10K Ω Std. in 4-wire connection. Enter correction factor for resistance std. (See Note 1) and press STORE Key | Not Allowed | 1.0XXXX 1 1 (nominal) | Normalized Value of Internal 10K Ω Ref. Resistor Go to 12b |
| 12b | Press FILTER Key | | Lb CAL 7 1 Ω Range Lb CAL 7 10 Ω Range | Go to 13 if 1 Ω option installed. Go to 14 |
| 13 | Apply 1 Ω Std. in 4-wire connection. Enter correction factor for resistance std. (See Note 1) and press STORE Key | Press DN Key and go to 14 | 1.XXXXX 1 (nominal) | Scale Factor - 1 Ω Range Go to 13a |
| 13a | Press FILTER Key | | Lb CAL 7 10 Ω Range | Go to 14 |
| 14 | Apply 10 Ω Std. in 4-wire connection. Enter correction factor for resistance std. (See Note 1) and press STORE Key | Press DN Key and go to 15 | -1.XXXXX 1 (nominal) | Scale Factor - 10 Ω Range Go to 14a |
| 14a | Press FILTER Key | | Lb CAL 7 100 Ω Range | Go to 15 |
| 15 | Apply 100 Ω Std. in 4-wire connection. Enter correction factor for resistance std. (See Note 1) and press STORE Key | Press DN Key and go to 16 | -1.XXXXX 1 (nominal) | Scale Factor - 100 Ω Range Go to 15a |
| 15a | Press FILTER Key | | Lb CAL 7 1 K Ω Range | Go to 16 |
| 16 | Apply 1K Ω Std. in 4-wire connection. Enter correction factor for resistance std. (See Note 1) and press STORE Key | Press DN Key and go to 17 | -1.XXXXX 1 (nominal) | Scale Factor - 1 K Ω Range Go to 16a |
| 16a | Press FILTER Key | | Lb CAL 7 100 K Ω Range | Go to 17 |

Table 3.35 - Laboratory Calibration Procedure continued

| Step | Instruction | To Skip a Step | Display | Meaning |
|------|---|----------------------------|--------------------------|---|
| 17 | Apply 100KΩ Std. in 4-wire connection. Enter correction factor for resistance std. (See Note 1) and press STORE Key | Press DN Key and go to 18 | 1.XXXXXX 1 (nominal) | Scale Factor - 100 KΩ Range Go to 17a |
| 17a | Press FILTER Key | | Lb CAL 7 1 MΩ Range | Go to 18 |
| 18 | Apply 1MΩ Std. in 4-wire connection. Enter correction factor for resistance std. (See Note 1) and press STORE Key | Press DN Key and go to 19 | 1.XXXXXX 1 (nominal) | Scale Factor - 1 MΩ Range Go to 18a |
| 18a | Press FILTER Key | | Lb CAL 7 10 MΩ Range | Go to 19 |
| 19 | Apply 10MΩ Std. in 4-wire connection. Enter correction factor for resistance std. (See Note 1) and press STORE Key | Press DN Key and go to 20 | 1.XXXXXX 1 (nominal) | Scale Factor - 10 MΩ Range Go to 19a |
| 19a | Press FILTER Key | | Lb CAL 7 100 MΩ Range | Go to 20 |
| 20 | Apply 100MΩ Std. in 4-wire connection. Enter correction factor for resistance std. (See Note 1) and press STORE Key | Press DN Key and go to 20a | 1.XXXXXX 1 (nominal) | Scale Factor - 100 MΩ Range Go to 20a |
| 20a | Press FILTER Key | | Lb CAL E AC CAL 0 | Lab CAL is terminated Go to 21 Go to 22 |
| 21 | Move CAL SW OFF (Down) | | 6000 | |

Note 1 - Correction Factor = $\frac{\text{Actual Value of Std}}{\text{Theoretical Value of Std}}$

e.g. $\frac{99.9983 \text{ K}\Omega}{100 \text{ K}\Omega} = .99998$

or

$\frac{10.0003 \text{ K}\Omega}{10 \text{ K}\Omega} = 1.00003$

Table 3.35 - Laboratory Calibration Procedure continued

| Step | Instruction | Display | Meaning |
|-----------------------|---|----------|---|
| AC CALIBRATION | | | |
| 22 | | AC CAL 0 | Go to 23 to skip all AC calibration Go to 24 to prepare software for AC converter calibration. |
| 23 | Press DN Key | Lb CAL E | AC calibration steps have been skipped. Go to 26. |
| 24 | Press FILTER Key | Lb CAL 8 | Go to 25. |
| 25 | Press FILTER Key | Lb CAL E | Software is prepared for AC converter calibration. Go to 26. |
| 26 | Move CAL SW OFF (Down) | 6000 | Calibration is complete unless AC board calibration has not been performed. To calibrate RMS Converter go to 27. To calibrate Averaging Converter go to 28. |
| 27 | RMS Converter Calibration | | |
| 27a | Install calibration cover (454278) on Calibration Module and allow at least 30 minutes for warmup. | | |
| 27b | Select DC Coupled AC (depress AC and DC keys simultaneously) and 1 VAC Range. Connect jumper across input terminals. | | |
| 27c | Connect a 10 K Ω resistor in series with + microvoltmeter lead for all the following measurements. | | |
| 27d | Turn R53 fully CCW. Connect microvoltmeter to TP3 (+) and TP1 (-). Adjust R71 for microvoltmeter reading of zero $\pm 30 \mu V$. Remove microvoltmeter + lead from TP3. NOTE: Microvoltmeter negative lead remains connected to TP1 for all measurements. | | |
| 27e | Connect + microvoltmeter lead to TP2. Adjust R54 for microvoltmeter reading of $+20 \mu V \pm 10 \mu V$. | | |
| 27f | Connect + microvoltmeter lead to TP5. Adjust R63 for microvoltmeter reading of zero $\pm 30 \mu V$. | | |

Table 3.35 - Laboratory Calibration Procedure continued

| 27g | Connect + microvoltmeter lead to TP4. Adjust R62 for zero ± 30 mV. | | | | | | | | | | | | | | | | |
|--------------|---|------------------|-------------------|------------------|-------------------|-------|---------|--------|---------------|-------|---------|--------|---------------|----|-------|--------|-------------|
| 27h | Connect + microvoltmeter lead to TP2. Adjust R53 clockwise for a microvoltmeter reading of zero ± 5 μ V. | | | | | | | | | | | | | | | | |
| 27i | Remove microvoltmeter leads. | | | | | | | | | | | | | | | | |
| 27j | Apply -1.000 VDC to input and note display reading. | | | | | | | | | | | | | | | | |
| 27k | Apply $+1.000$ VDC and adjust R55 to obtain the same reading as in 27j. Repeat steps j and k until the two readings are within 10 digits (.01%) of each other. | | | | | | | | | | | | | | | | |
| 27l | Apply -0.100 VDC to DVM input directly from DC Calibrator (do not use an attenuator) and note display reading. | | | | | | | | | | | | | | | | |
| 27m | Apply $+0.100$ VDC and adjust R62 until reading agrees within ± 5 digits of step l. Repeat steps j through m as necessary. | | | | | | | | | | | | | | | | |
| 27n | Remove DC Calibrator from input. | | | | | | | | | | | | | | | | |
| 27o | If the remaining adjustments are performed with the instrument top cover removed, optimum accuracy will not be achieved. Best accuracy will result from installing top cover and allowing at least 30 minutes for internal temperature to stabilize. Perform adjustments by lifting the edge of the cover just long enough to perform each adjustment. | | | | | | | | | | | | | | | | |
| 27p | Select AC mode, 1.0V Range. Apply .1 VAC, 500 Hz and adjust R73 for display reading of 0.10000. | | | | | | | | | | | | | | | | |
| 27q | Apply 1.0 VAC, 500 Hz and adjust R45 for display reading of 1.00000. Repeat steps p and q until both readings are correct. | | | | | | | | | | | | | | | | |
| 27r | <p>Calibrate the 1000V and 1V ranges according to the following table.</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;"><u>Range</u></th> <th style="text-align: center;"><u>Input</u></th> <th style="text-align: center;"><u>Frequency</u></th> <th style="text-align: center;"><u>Adjustment</u></th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">1000V</td> <td style="text-align: center;">500 VAC</td> <td style="text-align: center;">500 Hz</td> <td style="text-align: center;">R67 (500V LF)</td> </tr> <tr> <td style="text-align: center;">1000V</td> <td style="text-align: center;">500 VAC</td> <td style="text-align: center;">30 kHz</td> <td style="text-align: center;">C27 (500V HF)</td> </tr> <tr> <td style="text-align: center;">1V</td> <td style="text-align: center;">1 VAC</td> <td style="text-align: center;">40 kHz</td> <td style="text-align: center;">C28 (1V HF)</td> </tr> </tbody> </table> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto; margin-right: auto;"> <p style="text-align: center;"><u>WARNING</u></p> <p>Lethal voltages are present. Use an insulated adjustment tool.</p> </div> | <u>Range</u> | <u>Input</u> | <u>Frequency</u> | <u>Adjustment</u> | 1000V | 500 VAC | 500 Hz | R67 (500V LF) | 1000V | 500 VAC | 30 kHz | C27 (500V HF) | 1V | 1 VAC | 40 kHz | C28 (1V HF) |
| <u>Range</u> | <u>Input</u> | <u>Frequency</u> | <u>Adjustment</u> | | | | | | | | | | | | | | |
| 1000V | 500 VAC | 500 Hz | R67 (500V LF) | | | | | | | | | | | | | | |
| 1000V | 500 VAC | 30 kHz | C27 (500V HF) | | | | | | | | | | | | | | |
| 1V | 1 VAC | 40 kHz | C28 (1V HF) | | | | | | | | | | | | | | |
| 27s | Perform step t only if major repairs have been performed on the RMS converter. Otherwise proceed to step v. | | | | | | | | | | | | | | | | |
| 27t | Apply a calibrated 1.0V rms pulse train with a crest factor of 7 and a period of 1 millisecond (1 KHz repetition rate). Adjust R52 for a readout of 1.00000 ± 10 digits. | | | | | | | | | | | | | | | | |

Table 3.35 - Laboratory Calibration Procedure continued

| 27u | Repeat steps p, q and t until all readings are correct. | | | | | | | | | | | | | | | | | | | | | | | | |
|--------------|--|------------------|---------------------------|------------------|-------------------|-----|--------|--------|--------------|------|---------|--------|---------------|----|-------|--------|---------------------------|-----|--------|--------|--------------|------|---------|--------|---------------|
| 27v | <p>Calibrate 1, 10, and 100V ranges according to the following table.</p> <table border="1"> <thead> <tr> <th><u>Range</u></th> <th><u>Input</u></th> <th><u>Frequency</u></th> <th><u>Adjustment</u></th> </tr> </thead> <tbody> <tr> <td>10V</td> <td>10 VAC</td> <td>500 Hz</td> <td>R65 (10V LF)</td> </tr> <tr> <td>100V</td> <td>100 VAC</td> <td>500 Hz</td> <td>R64 (100V LF)</td> </tr> <tr> <td>1V</td> <td>1 VAC</td> <td>40 kHz</td> <td>C28, if necessary (1V LF)</td> </tr> <tr> <td>10V</td> <td>10 VAC</td> <td>40 kHz</td> <td>C24 (10V HF)</td> </tr> <tr> <td>100V</td> <td>100 VAC</td> <td>40 kHz</td> <td>C23 (100V HF)</td> </tr> </tbody> </table> | <u>Range</u> | <u>Input</u> | <u>Frequency</u> | <u>Adjustment</u> | 10V | 10 VAC | 500 Hz | R65 (10V LF) | 100V | 100 VAC | 500 Hz | R64 (100V LF) | 1V | 1 VAC | 40 kHz | C28, if necessary (1V LF) | 10V | 10 VAC | 40 kHz | C24 (10V HF) | 100V | 100 VAC | 40 kHz | C23 (100V HF) |
| <u>Range</u> | <u>Input</u> | <u>Frequency</u> | <u>Adjustment</u> | | | | | | | | | | | | | | | | | | | | | | |
| 10V | 10 VAC | 500 Hz | R65 (10V LF) | | | | | | | | | | | | | | | | | | | | | | |
| 100V | 100 VAC | 500 Hz | R64 (100V LF) | | | | | | | | | | | | | | | | | | | | | | |
| 1V | 1 VAC | 40 kHz | C28, if necessary (1V LF) | | | | | | | | | | | | | | | | | | | | | | |
| 10V | 10 VAC | 40 kHz | C24 (10V HF) | | | | | | | | | | | | | | | | | | | | | | |
| 100V | 100 VAC | 40 kHz | C23 (100V HF) | | | | | | | | | | | | | | | | | | | | | | |
| 27w | Repeat step p. | | | | | | | | | | | | | | | | | | | | | | | | |
| 27x | Perform 5 1/2 digit Auto-Cal (# Digits, 5). | | | | | | | | | | | | | | | | | | | | | | | | |
| 28 | Averaging Converter Calibration. | | | | | | | | | | | | | | | | | | | | | | | | |
| 28a | Remove Scaling Amplifier from J304 and install a Scaling Amplifier Bypass board (411628) in its place. Install AC Converter PCB on an extender board. | | | | | | | | | | | | | | | | | | | | | | | | |
| 28b | Select AC function (any range) and leave input terminals open. | | | | | | | | | | | | | | | | | | | | | | | | |
| 28c | Connect the - microvoltmeter lead to TP2. Connect the + microvoltmeter lead through a 10K Ω series resistor to TP5. Adjust R40 for a microvoltmeter reading of zero \pm 10 μ V. | | | | | | | | | | | | | | | | | | | | | | | | |
| 28d | Connect the + microvoltmeter lead alternately between TP1 and TP3. Adjust R46 so that the voltage readings are balanced within 10 μ V of each other and the voltage at each point is zero \pm 20 μ V. | | | | | | | | | | | | | | | | | | | | | | | | |
| 28e | Remove microvoltmeter leads. | | | | | | | | | | | | | | | | | | | | | | | | |
| 28f | Apply 1.0 VAC at 1 KHz to the input terminals and record the readout. Change the input to 1.0 VAC at 100 KHz. Adjust C13 until the readout is within \pm 10 digits of the recorded value (5 1/2 digit mode). | | | | | | | | | | | | | | | | | | | | | | | | |
| 28g | Remove voltage from input terminals. Remove AC Converter PCB from extender board. Install AC Converter in J303. | | | | | | | | | | | | | | | | | | | | | | | | |

Table 3.35 - Laboratory Calibration Procedure continued

| 28h | Remove Scaling Amplifier Bypass board and install Scaling Amplifier in J304. Install the calibration cover (454251) on the Calibration Module and allow one hour for warmup. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-------|--|-----------|---------------|-----------|------------|-----|--------|-------|--------------|------|---------|-------|---------------|-------|----------|-------|--------------|-------|---------|--------|---------------|----|-------|---------|-------------|-----|--------|---------|--------------|------|---------|---------|---------------|
| 28i | Select AC function, 1V range. Perform 5 1/2 digit Auto-Cal (#DIGITS, 5) and verify that AC CAL 1 and AC CAL 2 do not appear. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 28j | Connect the AC Calibrator to the input terminals and apply 10 mV at 1 KHz. Adjust R50 on the AC Converter PCB for a readout of .01000V. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 28k | Apply 1.0V at 1 KHz and adjust R39 (1V LF) on the Scaling Amplifier for a readout of 1.00000V \pm 2 digits. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 28l | Repeat steps j and k as required. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 28m | Set C42 to the center of its span and then calibrate the 1V, 10V, 100V and 1000V ranges according to the following table: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | <table border="1"> <thead> <tr> <th>Range</th> <th>Input</th> <th>Frequency</th> <th>Adjustment</th> </tr> </thead> <tbody> <tr> <td>10V</td> <td>10 VAC</td> <td>1 KHz</td> <td>R31 (10V LF)</td> </tr> <tr> <td>100V</td> <td>100 VAC</td> <td>1 KHz</td> <td>R30 (100V LF)</td> </tr> <tr> <td>1000V</td> <td>1000 VAC</td> <td>1 KHz</td> <td>R29 (1KV LF)</td> </tr> <tr> <td>1000V</td> <td>500 VAC</td> <td>40 KHz</td> <td>C36 (500V HF)</td> </tr> <tr> <td>1V</td> <td>1 VAC</td> <td>100 KHz</td> <td>C40 (1V HF)</td> </tr> <tr> <td>10V</td> <td>10 VAC</td> <td>100 KHz</td> <td>C28 (10V HF)</td> </tr> <tr> <td>100V</td> <td>100 VAC</td> <td>100 KHz</td> <td>C27 (100V HF)</td> </tr> </tbody> </table> | Range | Input | Frequency | Adjustment | 10V | 10 VAC | 1 KHz | R31 (10V LF) | 100V | 100 VAC | 1 KHz | R30 (100V LF) | 1000V | 1000 VAC | 1 KHz | R29 (1KV LF) | 1000V | 500 VAC | 40 KHz | C36 (500V HF) | 1V | 1 VAC | 100 KHz | C40 (1V HF) | 10V | 10 VAC | 100 KHz | C28 (10V HF) | 100V | 100 VAC | 100 KHz | C27 (100V HF) |
| Range | Input | Frequency | Adjustment | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 10V | 10 VAC | 1 KHz | R31 (10V LF) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 100V | 100 VAC | 1 KHz | R30 (100V LF) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1000V | 1000 VAC | 1 KHz | R29 (1KV LF) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1000V | 500 VAC | 40 KHz | C36 (500V HF) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1V | 1 VAC | 100 KHz | C40 (1V HF) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 10V | 10 VAC | 100 KHz | C28 (10V HF) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 100V | 100 VAC | 100 KHz | C27 (100V HF) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;"> <p>WARNING</p> <p>Lethal voltages are present. Use an insulated adjustment tool.</p> </div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 28n | Perform 5 1/2 digit Auto-Cal (#Digits, 5). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 29 | AC Frequency Linearity Check | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 29a | Perform an AC frequency linearity check by applying a full-scale AC voltage in each range and sweeping the frequency from 10KHz to the upper spec limit. If one or more points are found to be out of spec, correct by tweaking the high-frequency adjustment for the associated range. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Note: Replace seal over Cal Switch upon completion of calibration.



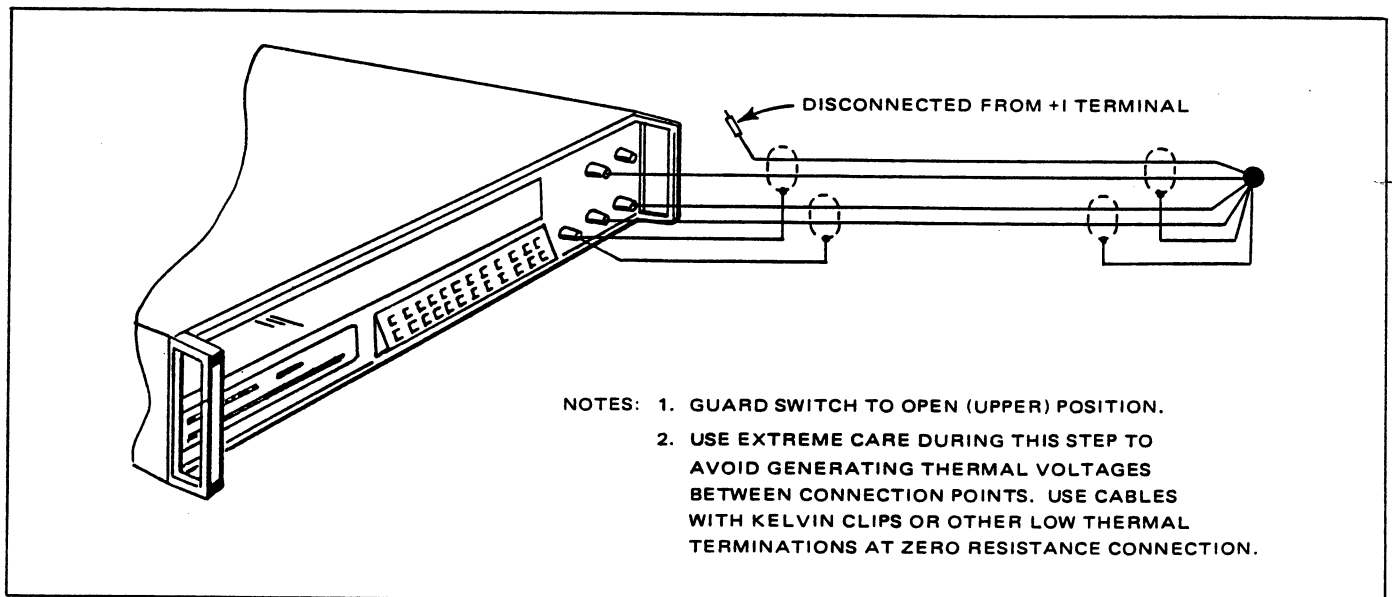



Figure 3.32 - Zero Ohms Connection For DMM's With 1 Ohm Range

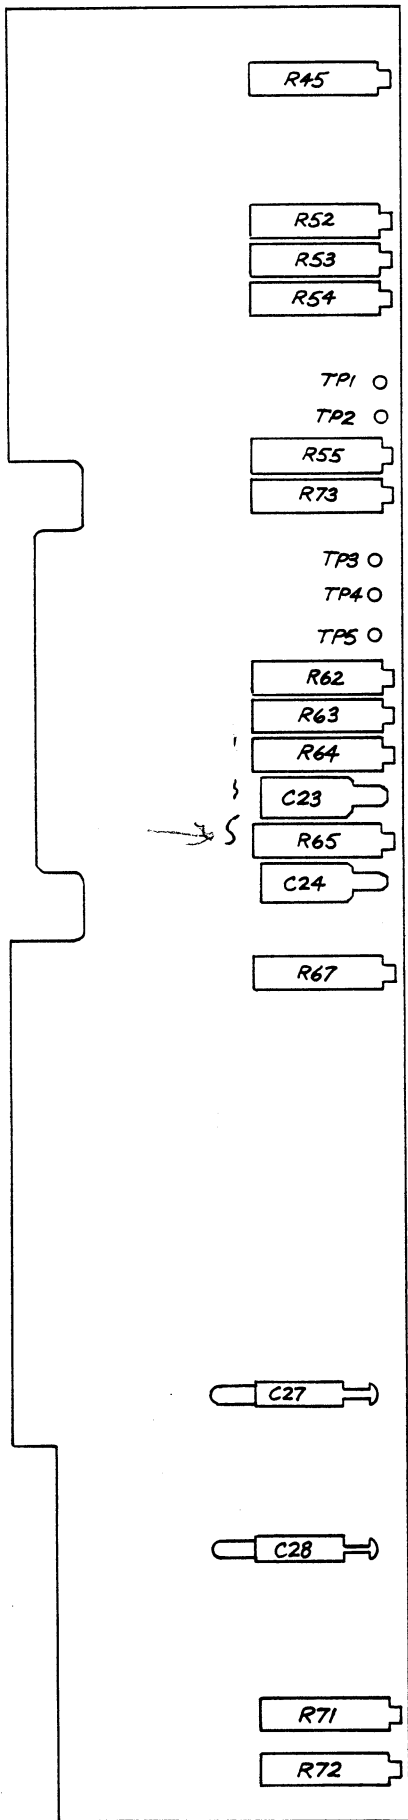

RMS Converter PCB
401618

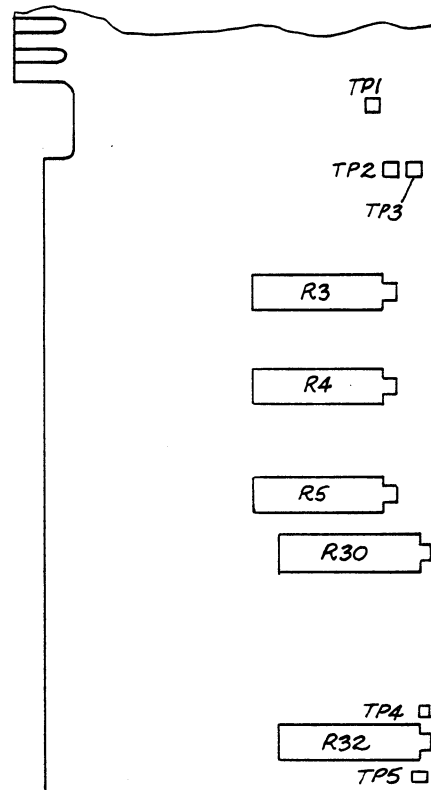

Attenuator Reference PCB
401608

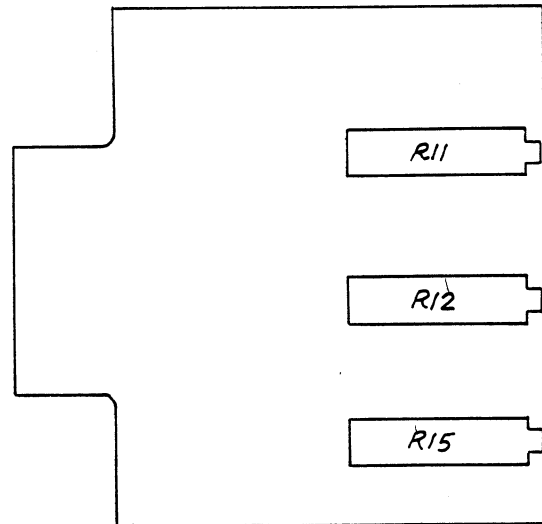

4-Wire Ratio PCB
401626

Figure 3.33 - Calibration Adjustment Locations

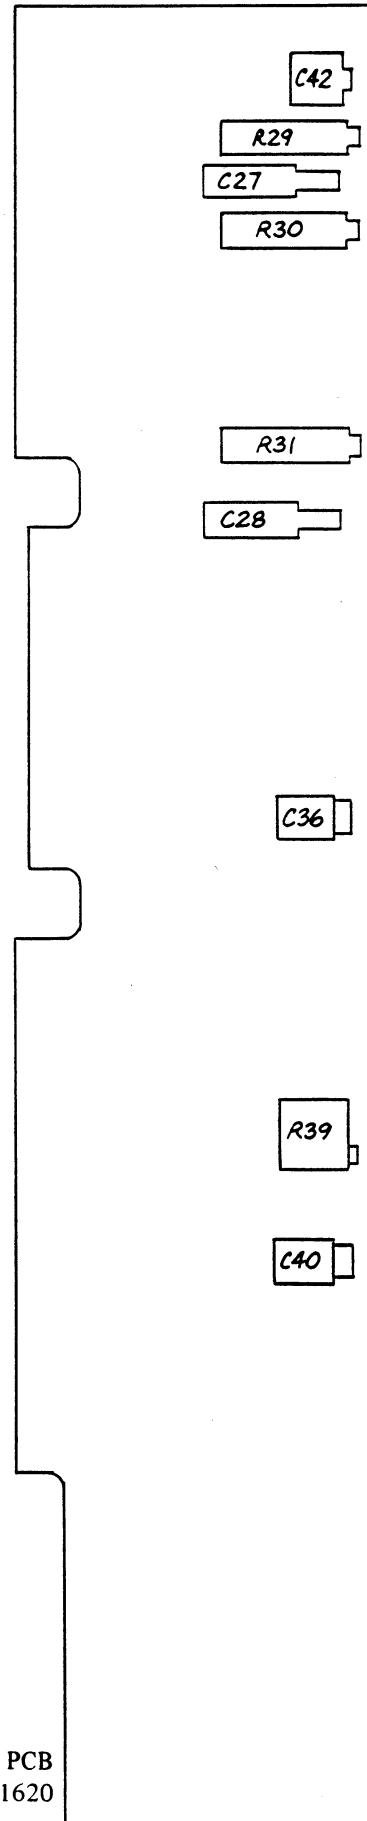
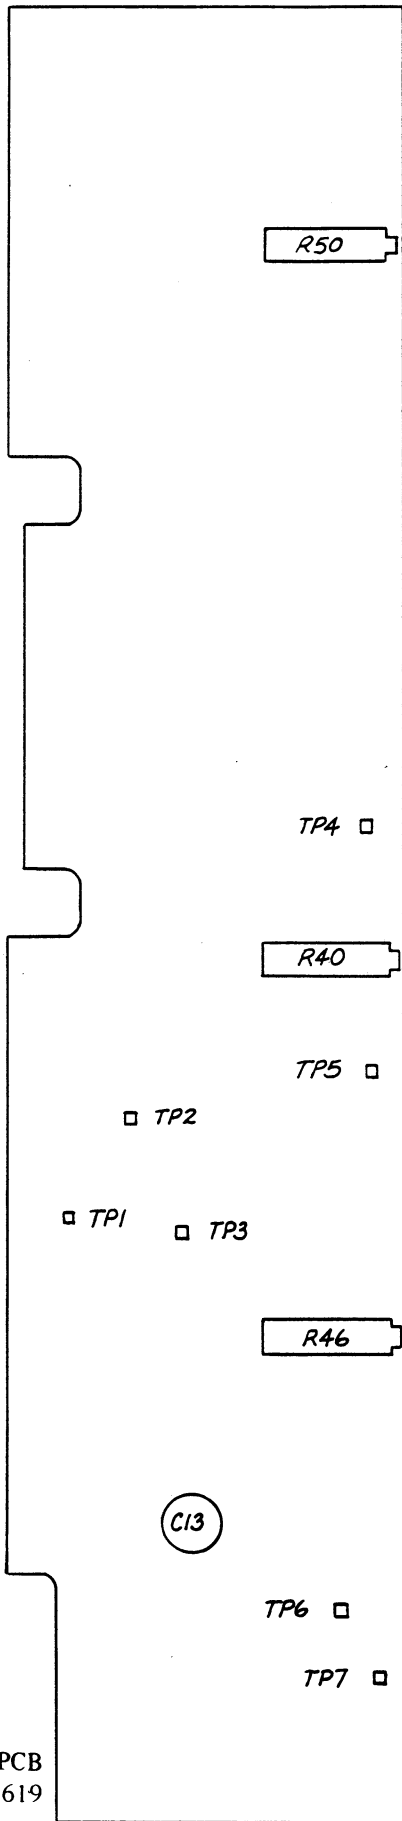


Figure 3.33 - Calibration Adjustment Locations continued

3.8.5.5 4-WIRE RATIO (OPTION 34).

- a. The following equipment is required in addition to the items listed in Table 3.22.
 1. 5 1/2 Digit DVM with $\pm .001\%$ F.S. accuracy on 10 VDC range, e.g., Racal-Dana 6000 or 5900.
 2. 410764 AC Ratio Bypass/4-Wire DC Ratio Bypass card (2 required).
- b. Perform Internal Reference Adjustments given in paragraph 3.8.6.

CAUTION

Adjustment of internal reference voltages per paragraph 3.8.6 will invalidate any previous calibration of the instrument. These adjustments, if needed, must be performed prior to other calibrations.

- c. Install a 4-Wire Ratio board in J305 and a Ratio Switching board in J306. Install the calibration cover on the Calibration Module and allow at least one hour warmup.
- d. Select DC External Reference (SHIFT, HDW, DC). Verify that **(DC)** REF annunciator light is ON.
- e. Connect a DC Voltage Calibrator to the EXT REF terminals. Connect a jumper from positive terminal of EXT REF input to -INPUT terminal on front panel.
- f. Connect the 5 1/2 Digit test DVM (positive lead) to TP2 on the Attenuator/Reference board, and the negative lead to Gnd pin on Motherboard (near Non-Volatile Memory PCB bracket).
- g. Apply +1.00000 VDC to EXT REF input from DC Voltage Calibrator. Adjust R12 on 4-Wire Ratio board for +1.00000V on test DVM set to 1.0V range.
- h. Increase EXT REF input to 10.0000 VDC. Adjust R11 on 4-Wire Ratio board for +10.0000V on test DVM set to 10V range.
- i. Repeat steps g and h as required.
- j. Remove jumper from positive terminal of EXT REF input and connect to minus terminal of EXT REF input (other end remains connected to -INPUT).
- k. Verify that DC Voltage Calibrator is set to 10.0000 VDC. Adjust R15 on 4-Wire Ratio Board for +10.0000V on test DVM.
- l. Decrease EXT REF input to 1.00000 VDC and verify a +1.0000V reading on test DVM set to 10 VDC range.

- m. Remove test DVM.
- n. Perform DC Calibration using steps 0-10 in Table 3.34.
- o. Set 6000 to 10 VDC range and select DC External Reference (SHIFT, HDW, DC). Apply +10.0000 VDC to front panel INPUT and EXT REF input from the same Calibrator. Select 5 1/2 digit Auto-Cal (#DIG., 5) and verify a display reading of 1.00000 ± 2 digits.
- p. Reduce calibrator voltage to +1.0000 VDC and select 5 1/2 digit Auto-Cal (#DIG., 5). Verify a display reading of 1.00000 ± 20 digits.

3.8.5.6 AC RATIO (OPTION 11).

- a. See 3.8.5.5.a for test equipment requirements.
- b. Perform Internal Reference Adjustments given in paragraph 3.8.6.

CAUTION

Adjustment of internal reference voltages per paragraph 3.8.6 will invalidate any previous calibration of the instrument. These adjustments, if needed, must be performed prior to other calibrations.

- c. Remove the bypass board and install the Ratio Switching board in J306. Install the calibration cover on the Calibration Module and allow at least one hour warmup.
- d. Select DC Coupled AC External Reference range as follows:
 1. Press SHIFT Key
 2. Press HDW Key
 3. Press AC and DC Keys simultaneously
 4. Verify that **(AC)** REF and **(DC)** REF annunciator lights are ON.
- e. Select 1V External Reference Range as follows:
 1. Press SHIFT Key
 2. Press DN Key and note which Range annunciator light is ON while holding DN key depressed. Repeat SHIFT, DN commands until 1V annunciator light is ON while holding DN key depressed.

- f. Connect a jumper between EXT REF terminals.
- g. Connect a 10KΩ resistor in series with + microvoltmeter lead for all the following measurements. All adjustments are on the REF RMS Converter Card.
- h. Connect positive microvoltmeter to TP3 and negative lead to TP1. Adjust R71 for microvoltmeter reading of zero ± 30 μV. Remove microvoltmeter + lead from TP3. Turn R53 fully CCW.

NOTE

Microvoltmeter negative lead remains connected to TP1 for all measurements.

- i. Connect + microvoltmeter lead to TP2. Adjust R54 for microvoltmeter reading of +20μV ± 10μV.
- j. Connect + microvoltmeter lead to TP5. Adjust R63 for microvoltmeter reading of zero ± 30 μV.
- k. Connect + microvoltmeter lead to TP4. Adjust R62 for zero ± 30 mV.
- l. Connect + microvoltmeter lead to TP2. Adjust R53 clockwise for a microvoltmeter reading of zero ± 5 μV.
- m. Remove microvoltmeter leads. Connect the 5 1/2 digit test DVM (positive lead) to TP2 on the Attenuator/Reference board, and the negative lead to Gnd pin on Motherboard. Set test DVM to 10 VDC range.
- n. Apply -1.0000 VDC to EXT REF terminals and note test DVM reading (approximately +10 VDC).
- o. Apply +1.0000 VDC and adjust R55 to obtain the same reading as in step N. Repeat steps N and O until the two readings are within 10 digits (.01%) of each other.
- p. Apply -0.1000 VDC to EXT REF terminals directly from DC Calibrator (do not use an attenuator) and note test DVM reading (approximately +1 VDC on 10 VDC range).
- q. Apply +0.1000 VDC to EXT REF terminals and adjust R62 until the reading agrees with ± 5 digits of step P.
- r. Remove the DC Calibrator from the EXT REF terminals and connect the AC Calibrator.

- s. Select capacitive coupled AC EXT REF (SHIFT, HDW, AC) and the 1V external reference range (see step E).
- t. Apply 100 mVAC, 500 Hz to EXT REF and adjust R73 for a reading of 1.0000 VDC on the test DVM.

NOTE

The test DVM remains on the 10 VDC range during all these steps.

- u. Set AC calibrator to 1 VAC, 500 Hz and adjust R45 for a reading of 10.0000 VDC on the test DVM. Repeat steps t and u until all readings are optimized.
- v. Calibrate the 1000V and 1V Reference Ranges according to the following table.

| Ext. Ref. Range | Ext. Ref. Input | Ref. RMS Converter Adjustment | Test DVM Reading |
|-----------------|-----------------|-------------------------------|------------------|
| 1000V | 500 VAC, 500 Hz | R67 | 5.0000 VDC |
| 1000V | 500 VAC, 30 KHz | C27 | 5.0000 VDC |
| 1V | 1 VAC, 40 KHz | C28 | 10.0000 VDC |

- w. Perform steps x and y only if major repairs were performed on the Reference RMS Converter.
- x. Apply a 1.0V RMS pulse train with a 7:1 crest factor and adjust R52 for a reading of 10.0000 VDC ± 10 digits on the test DVM.
- y. Repeat steps t and u on the 1V Reference Range until all readings are optimized.
- z. Calibrate 1, 10 and 100V Reference Ranges according to the following table.

| Ext. Ref. Range | Ext. Ref. Input | Ref. RMS Converter Adjustment | Test DVM Reading |
|-----------------|-----------------|-------------------------------|------------------|
| 10V | 10 VAC, 500 Hz | R65 | 10.0000 VDC |
| 100V | 100 VAC, 500 Hz | R64 | 10.0000 VDC |
| 1V | 1 VAC, 40 KHz | C28 | 10.0000 VDC |
| 10V | 10 VAC, 40 KHz | C24 | 10.0000 VDC |
| 100V | 100 VAC, 40 KHz | C23 | 10.0000 VDC |

3.8.5.7 SAMPLE AND HOLD FAST A/D (OPTION 03SH).

- a. Press #DIGITS 3 on the 6000 keyboard to produce internal trigger pulses.
- b. Command the 6000, as follows, to read analog voltages applied to the Sample and Hold Fast A/D output connector:
 1. If the DMM is connected to a GPIB controller, send the GPIB command G1.
 2. If the DMM is not connected to a GPIB controller, short pin 16 and pin 19 of the Sample and Hold Fast A/D connector.
- c. Perform the calibration procedures shown below. The input voltages are applied between pin 24 (use as voltage input common) and pin 25 of the Sample and Hold Fast A/D connector.

| Voltage In | 6000 Readout | Instruction |
|--|--------------|--|
| $-10.240 \pm .005$ | -2000 | Adjust R26 & R24 together to get -2000 on readout. |
| $+10.230 \pm .005$ | 2000 | Adjust R26 & R24 together to get 2000 on readout. |
| Repeat steps (a) and (b) until readout agrees with voltage in. | | |
| $-5.120 \pm .005$ | -1000 | Check $\pm 1/2$ count error ($\pm 5\text{mV}$) |
| $5.110 \pm .005$ | 1000 | Check $\pm 1/2$ count error ($\pm 5\text{mV}$) |

3.8.6 Internal Reference Adjustments.

NOTE

These adjustments are necessary only for instruments containing 4-Wire Ratio Option 34 or AC Ratio Option 11.

CAUTION

Adjustment of internal reference voltages per paragraph 3.8.6 will invalidate any previous calibration of the instrument. These adjustments, if needed, must be performed prior to other calibrations.

3.8.6.1 Remove Calibration Module cover and install AC Ratio/4-Wire DC Ratio bypass card (410764) in J305 and J306. This bypass card is dual-purpose with bypass connections for J305 on one end and J306 at the opposite end.

3.8.6.2 Install calibration cover on Calibration Module, apply power and allow at least one hour warmup.

3.8.6.3 Select DC External Reference (SHIFT, HDW, DC) and 10V range on keyboard.

3.8.6.4 Connect a DC Voltage Calibrator to the EXT REF terminals. Connect the 5 1/2 digit test DVM (positive lead) to TP2 on Attenuator/Reference board, and the negative lead to Gnd pin (Mecca) on Motherboard (near Non-Volatile Memory PCB bracket.)

3.8.6.5 Apply +1.00000 VDC to the EXT REF terminals. Adjust R5 on 10V Reference Assembly for $1.00000\text{V} \pm 20 \mu\text{V}$. Move the test DVM positive lead from TP2 to TP5. Adjust R30 on Attenuator/Reference board for $-1.00000 \pm 20 \mu\text{V}$ on test DVM.

3.8.6.6 Select DC Function on Keyboard (take out of external reference mode). Move positive lead of test DVM from TP5 to TP2 and note the test DVM reading (approximately +10 VDC). Move the positive lead of test DVM from TP2 to TP5 and adjust R32 for the same numeric reading (disregard the polarity sign) as TP2 ($\pm 500 \mu\text{V}$).

3.8.6.7 Repeat the procedures in paragraphs 3.8.6.5 and 3.8.6.6 as needed.

3.8.6.8 Select DC External Reference (SHIFT, HDW, DC) on Keyboard. Increase the EXT REF input to +10.0000 VDC. Note the test DVM reading at TP5 (approximately -10 VDC). Move the positive lead of the test DVM to TP2 and note the test DVM reading (approximately +10 VDC).

3.8.6.9 Select DC Function on Keyboard (take out of external reference mode). With the test DVM positive lead on TP2, adjust R4 on the 10V Reference Assembly for the same reading as TP2 in step 3.8.6.8 ($\pm 100 \mu\text{V}$).

4.1 INTRODUCTION.

4.1 This section contains system operating examples for the Model 6000. Each example contains a statement of purpose, a sample program string and the device dependent messages required to program the instrument for the particular application. These examples were prepared using a Hewlett-Packard 9825 calculator connected to the Racal-Dana Model 6000 through the IEEE 488-1975 Standard Interface. Each example contains a program listing as printed by the calculator along with an explanation for each line of the program. If the 6000 is to be used with a Hewlett-Packard Model 9825 calculator, the programming presented in this section may be used directly and/or further modified to suit the users needs. If the programs are used directly, the programmer should check to make sure that the 6000's rear panel address switches are set for an address of "01" (see Section 3.4.5). Because the Model 6000 may be used with any controller which operates on the standard interface bus, the user may wish to prepare equivalent software for another controller device. In such case, the user should review the remote operating instructions to select and assemble appropriate operating statements for the controller to be used.

4.1.2 In the first program sample, line zero of the program is `REM 7` and the accompanying explanation indicates that this statement causes the Hewlett Packard 9825 calculator to send the remote message to all devices on the bus. This statement causes the 6000 to arm for remote operation.

4.1.3 Referring again to the first example, note that line 1 of the program printout contains the statement `flt 6` and that the accompanying explanation indicates that this sets the floating decimal format. This may or may not be a feature or function of the controller in use and,

since it is not an interface or device dependent message, use of an equivalent command is at the discretion of the programmer. Line 2 of the program shows the statement `wrt 701`. The explanation indicates that this transmits the device listen address 01. The programmer should select the statement for the controller in use which causes it to transmit the listen address assigned to the 6000. Instructions for the address assignment of the Model 6000 are presented in paragraph 3.4.7. Table 3.11 shows the address switch setting, the talk and listen address characters and the data line binary code for each available decimal address of the instrument.

4.1.4 Line 2 of the first example also contains the program string (composed of the device dependent messages). The examples contained in this section are primarily presented to show the various combinations of device dependent messages required to accomplish the various remotely controlled measurement operations. Note that the program printout indicates the string of device dependent messages presented in the table directly above the program tape. This format is maintained for all of the examples.

4.1.5 Line 3 of the first example is the reply subroutine of the program, and instructs the 6000 to become a talker so it can transmit the measurement data. Line 3 also instructs the calculator to store the transmitted measurement data (in a register known as "Variable A") and to print the data on the program tape. The final line on the program printout is the measurement value $-2.001795e01$ (-20.0 dB).

NOTE

The Model 6000 will respond to commands written in either upper or lower case letters.

6: wrt 701,"m2"

Address device 01 (RD6000) as listener and writes device dependent message followed by a Carriage Return (CR) and Line Feed (LF) to device 01 (RD6000).

7: red 701,B

Address device 01 (RD6000) as a talker. Reads value into variable B from device 01 (RD6000).

8: wrt 701,"m3"

Address device 01 (RD6000) as listener and writes device dependent message followed by a Carriage Return (CR) and Line Feed (LF) to device 01 (RD6000).

9: red 701,C

Address device 01 (RD6000) as a talker. Reads value into variable C from device 01 (RD6000).

10: wrt 701,"m4"

Address device 01 (RD6000) as listener and writes device dependent message followed by a Carriage Return (CR) and Line Feed (LF) to device 01 (RD6000).

11: red 701,D

Address device 01 (RD6000) as a talker. Reads value into variable D from device 01 (RD6000).

12: wrt 701,"m5"

Address device 01 (RD6000) as listener and writes device dependent message followed by a Carriage Return (CR) and Line Feed (LF) to device 01 (RD6000).

13: red 701,E

Address device 01 (RD6000) as a talker. Reads value into variable E from device 01 (RD6000).

14: prt A;prt B;
prt C;prt D;
prt E
*6475

Prints the values stored in variables A, B, C, D and E.

9.999294e 00

Answer: 9.9992 NULL

0.000000e 00

Answer: 0.0000 minimum value

0.000000e 00

Answer: 0.0000 average value

0.000000e 00

Answer: 0.0000 maximum value

2.400000e 02


Answer: 240 samples


Use remotely program the AC volts function with the MAM (minimum-average-maximum) function to measure amplitude variations of a signal source over a 10 second time period.

nam String: F2R5M1
M2
M3
M4
M5

Dependent Messages:

| Message Code | Parameter |
|--------------|----------------------------|
| | AC volts |
| | Range 5 |
| | Clear and enable MAM |
| | Transmit MIN |
| | Transmit AVG |
| | Transmit MAX |
| | Transmit number of samples |

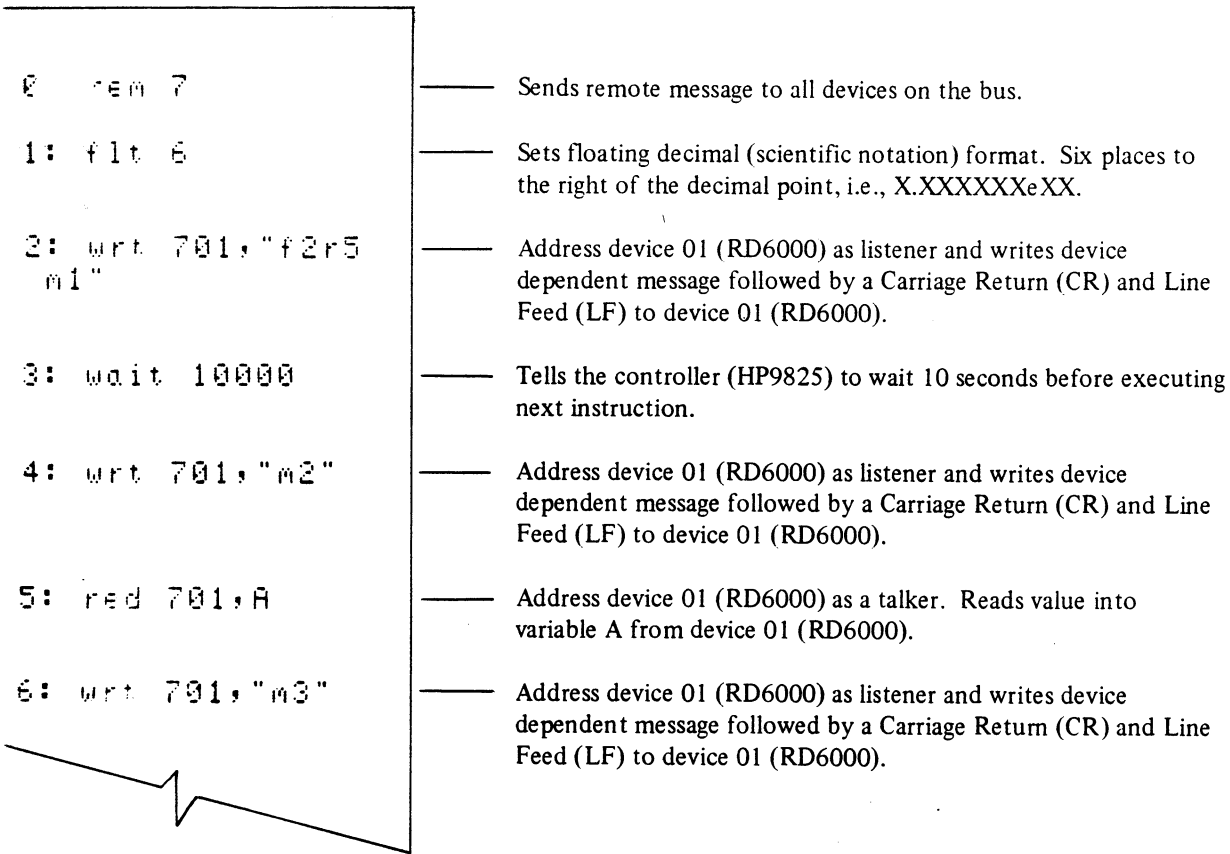



RACAL-DANA Instruments Inc.

LOCAL NORTH AMERICAN SALES OFFICES

ALABAMA
(404) 325-0165

ALASKA
(503) 283-0132

ARIZONA
(800) RAC-DANA

ARKANSAS
(918) 494-2711

CALIFORNIA
Northern
(408) 245-3700

Southern
(714) 556-0955 or
(619) 292-1000

Los Angeles
(213) 643-6977

COLORADO
(800) RAC DANA

CONNECTICUT
(617) 273-3844

DELAWARE
(609) 423-4213

DISTRICT OF COLUMBIA
(301) 251-4100

FLORIDA
(404) 325-0165

GEORGIA
(404) 325-0165

HAWAII
(800) RAC-DANA

IDAHO
(503) 283-0132

ILLINOIS
Northern
(312) 539-4838

Central
(317) 253-1681

Southern
(913) 268-0762

Quad Cities
(319) 377-9434

INDIANA
(317) 253-1681

IOWA
(319) 377-9434

KANSAS
(913) 268-0762

KENTUCKY
Eastern
(513) 434-7500

Western
(317) 253-1681

LOUISIANA
(504) 833-3655

MAINE
(617) 273-3844

MARYLAND
(301) 251-4100

MASSACHUSETTS
(617) 273-3844

MICHIGAN
(313) 588-2300

MINNESOTA
(612) 476-1551

MISSISSIPPI
(404) 325-0165

MISSOURI
Eastern
(314) 991-5363

Western
(913) 268-0762

MONTANA
(503) 283-0132

NEBRASKA
(913) 268-0762

NEVADA
(619) 292-1000

NEW HAMPSHIRE
(617) 273-3844

NEW JERSEY
Northern
(516) 829-3770

Southern
(609) 423-4213

NEW MEXICO
(505) 262-1525

NEW YORK
New York City,
Long Island
(516) 829-3770
Upstate New York
(315) 455-7314

NORTH CAROLINA
(404) 325-0165

NORTH DAKOTA
(612) 476-1551

OHIO
Cleveland
(216) 524-5930
Columbus
(513) 434-7500
Dayton
(513) 434-7500

OKLAHOMA
(918) 494-2711

OREGON
(503) 283-0132

PENNSYLVANIA
Eastern
(609) 423-4213
Western
(513) 434-7500

PUERTO RICO
(404) 325-0165

RHODE ISLAND
(617) 273-3844

SOUTH CAROLINA
(404) 325-0165

SOUTH DAKOTA
(612) 476-1551

TENNESSEE
(404) 325-0165

TEXAS
Austin
(512) 443-7722
Dallas
(214) 661-0300

TEXAS (Cont'd)
El Paso County
(505) 262-1525

Houston
(713) 780-2511

San Antonio
(512) 342-3031 or
(512) 828-5741

UTAH
(800) RAC-DANA

VERMONT
(617) 273-3844

VIRGINIA
(301) 251-4100

WASHINGTON
(503) 283-0132

WEST VIRGINIA
Western
(513) 434-7500

Eastern
(301) 251-4100

WISCONSIN
(414) 544-6042

WYOMING
(503) 283-0132

CANADA
Ontario
(416) 671-3920 or
(613) 726-8888

Quebec
(514) 336-0392

British Columbia
(604) 430-1410

Ottawa
(613) 726-8888

Montreal
(514) 336-0392


RACAL-DANA INSTRUMENTS INCORPORATED'S DIRECT LINE: (800) RAC-DANA (Outside California)

SERVICE CENTER

Racal-Dana Instruments Incorporated, 4 Goodyear Street, Irvine, CA 92718
Telephone: (714) 859-8999 or (800) RAC-DANA (Outside California)

RACAL-DANA Instruments Inc.

U. S. AND CANADIAN SERVICE CENTERS

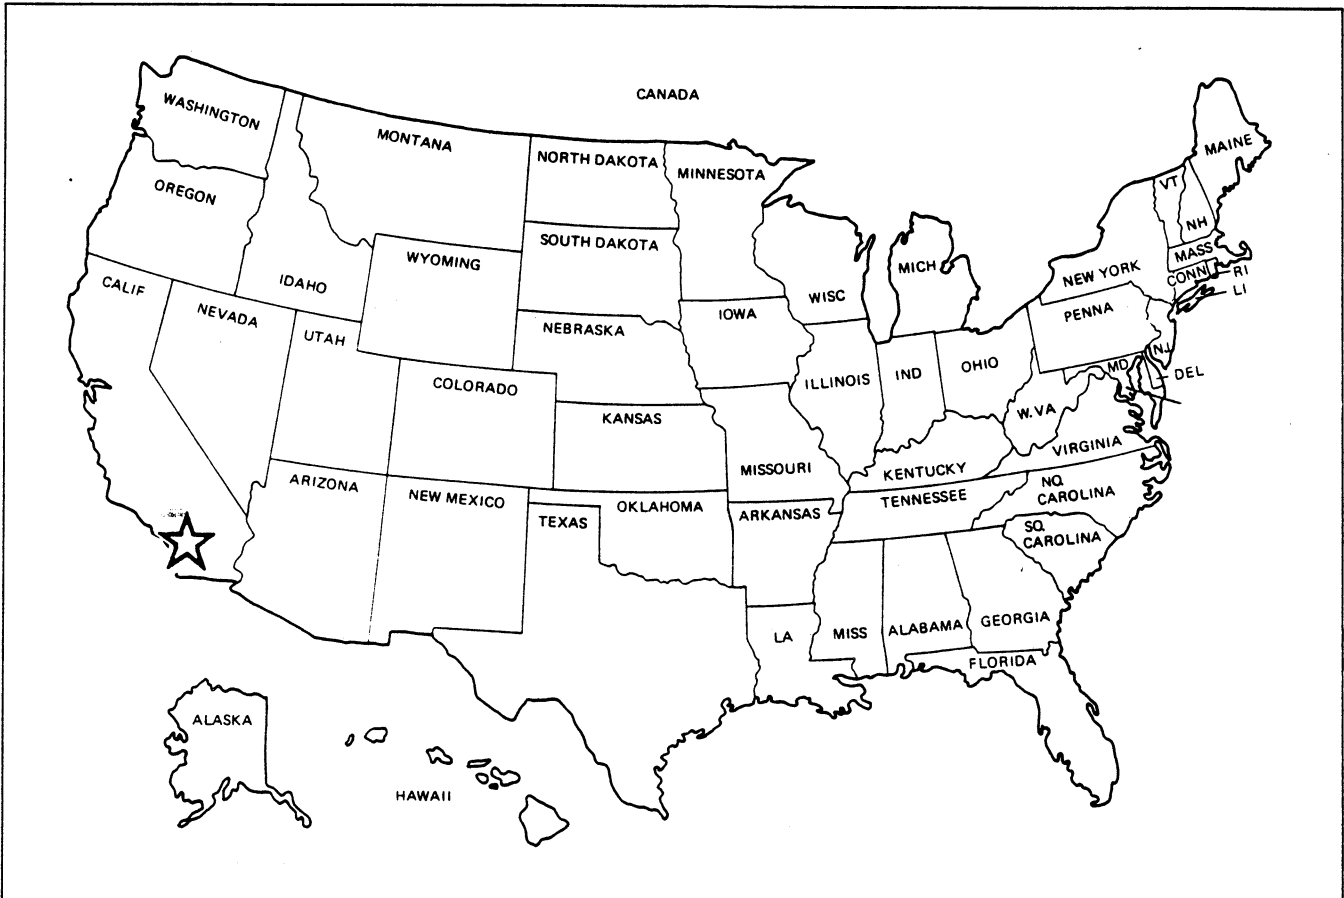

*SERVICE DEPT
CATALOG*



FACTORY SERVICE

RACAL-DANA INSTRUMENTS INC.
4 Goodyear Street
Irvine, California 92718
Telephone: (714) 859-8999

PRODUCT SERVICE TWX 910-595-1136

*1495.00 / hr FLAT RATE
LABOR
100 IN PARTS
CAL
90*

3 TO 4 WEEK

INTERNATIONAL SERVICE CENTERS

RACAL-DANA INSTRUMENTS LTD.

480 Bath Road,
Slough, Berks, SL1 6BE, England
Telephone: (6286) 4455, Telex: 847020, FAX: (6286) 62017

RACAL-DANA INSTRUMENTS GmbH.

Hermannstrasse 29, D-6078 Neu Isenburg,
Federal Republic of Germany
Telephone: 06102-2861/2, TLX: 412896

RACAL-DANA INSTRUMENTS S.A.

18 Avenue Dutartre, 78150 Le Chesnay, France
Telephone: (1) 3-955-8888, TLX: 697 215

RACAL-DANA INSTRUMENTS ITALIA srl.

Via Mecenate 84/A, 20138 Milano MI, Italy
Telephone: (02) 5062767/5052686, TLX: 315697

REPAIR REQUEST FORM

To allow us to better understand your repair requests, we suggest you use the following outline and include a copy with your instrument to be sent to your local Racal-Dana repair facility.

Model Number _____ Options _____ Date _____

Serial Number _____ P. O.# _____

Company Name _____

Address _____

City _____ State _____ Zip Code _____

Contact _____ Phone Number _____

1. Describe, in detail, the problem and symptoms you are having.

2. If you are using your unit on the bus, please list the program strings used and the controller type, if possible.

3. List all input levels, and frequencies this failure occurs.

4. Indicate any repair work previously performed.

5. Please give any additional information you feel would be beneficial in facilitating a faster repair time. (I. E., modifications, etc.)

PUBLICATION NO. 980514

MAINTENANCE MANUAL
SERIES

6000
MICROPROCESSING
DIGITAL MULTIMETER

RACAL-DANA

RACAL-DANA INSTRUMENTS INC.

4 Goodyear Street, P.O. Box C-19541, Irvine, CA 92713
Telephone: 714/859-8999, TWX: 910-595-1136, TLX: 67-8341

RACAL-DANA INSTRUMENTS LTD.

Hardley Industrial Estate, Hythe, Southampton, Hampshire, S04 6ZH, England
Telephone: (0703) 843265, FAX: (0703) 848919, TLX: 47600

RACAL-DANA INSTRUMENTS S.A.

18 Avenue Dutartre, 78150 Le Chesnay, France
Telephone: (1) 3-955-8888, TLX: 697 215

RACAL-DANA INSTRUMENTS GmbH.

Hermannstrasse 29, D-6078 Neu Isenburg, Federal Republic of Germany
Telephone: 06102-2861/2, TLX: 412896

RACAL-DANA INSTRUMENTS ITALIA srl.

Via Mecenate 84/A, 20138 Milano MI, Italy
Telephone: (02) 5062767, (02) 5052686, (02) 503444; TLX: 315697

RACAL

PUBLICATION DATE: OCTOBER 1986

WARRANTY

Within one year of purchase, Racal-Dana will repair or replace your instrument, at our option, if in any way it is defective in material or workmanship. The instrument must be returned to the country of purchase, unless prior arrangement has been made, and Racal-Dana Instruments will pay all parts and labor charges. Just call Racal-Dana Customer Service at (714) 859-8999 in U.S.A., (0703) 843265 in England, (1) 3-955-8888 in France, 06102-2861/2 in Germany or (02) 5062767, 5052686, or 503444 in Italy for assistance. We will advise you of the proper shipping address for your prepaid shipment. Your instrument will be returned to you freight prepaid.

PROPRIETARY NOTICE

This document and the technical data herein disclosed, are proprietary to Racal-Dana Instruments, Inc., and shall not, without express written permission of Racal-Dana Instruments, Inc., be used, in whole or in part to solicit quotations from a competitive source or used for manufacture by anyone other than Racal-Dana Instruments, Inc. The information herein has been developed at private expense, and may only be used for operation and maintenance reference purposes or for purposes of engineering evaluation and incorporation into technical specifications and other documents which specify procurement of products from Racal-Dana Instruments, Inc.

FOR YOUR SAFETY

Before undertaking any maintenance procedure, whether it be a specific troubleshooting or maintenance procedure described herein or an exploratory procedure aimed at determining whether there has been a malfunction, read the applicable section of this manual and note carefully the **WARNING** and **CAUTION** notices contained therein.

The equipment described in this manual contains voltage hazardous to human life and safety and which is capable of inflicting personal injury. The cautionary and warning notes are included in this manual to alert operator and maintenance personnel to the electrical hazards and thus prevent personal injury and damage to equipment.

If this instrument is to be powered from the AC line (mains) through an autotransformer (such as a Variac or equivalent) ensure that the common connector is connected to the neutral (earthed pole) of the power supply.

Before operating the unit ensure that the protective conductor (green wire) is connected to the ground (earth) protective conductor of the power outlet. Do not defeat the protective feature of the third protective conductor in the power cord by using a two conductor extension cord or a three-prong/two-prong adaptor.

Maintenance and calibration procedures contained in this manual sometimes call for operation of the unit with power applied and protective covers removed. Read the procedures carefully and heed Warnings to avoid "live" circuit points to ensure your personal safety.


Before operating this instrument:

1. Ensure that the instrument is configured to operate on the voltage available at the power source. See Installation Section.
2. Ensure that the proper fuse is in place in the instrument for the power source on which the instrument is to be operated.
3. Ensure that all other devices connected to or in proximity to this instrument are properly grounded or connected to the protective third-wire earth ground.

If at any time the instrument:

- Fails to operate satisfactorily
- Shows visible damage
- Has been stored under unfavorable conditions
- Has sustained stress

It should not be used until its performance has been checked by qualified personnel.



ERRATA SHEET

October 1986

The following Racal-Dana Model 6000 part numbers have new FSC numbers and/or new manufacturers part numbers:

| Racal-Dana Part Number | FSC | Manu P/N |
|------------------------|-------|--------------------|
| 012098 | 91637 | PTF56-T13 |
| 100017 | 56289 | 1C25Z5U103M100E |
| 101145 | 56289 | 561CR3LBA102AF101J |
| 110020 | 05397 | T322D106K035AS |
| 110125 | 05397 | T355C225M035AS |
| 110126 | 05397 | T355F685M035AS |
| 110127 | 05397 | T355D226M006AS |
| 110129 | 05397 | T355A104M035AS |
| 110137 | 05397 | T355A474M035AS |
| 110139 | 05397 | T355A224M035AS |
| 110140 | 05397 | T355F476M006AS |
| 110141 | 05397 | T355F226M016AS |
| 110151 | 05397 | T354G106M035AS |
| 110152 | 05397 | T355B474K050AS |
| 110158 | 05397 | T354K106M050M |
| 110165 | 05397 | T355A154K035AS |
| 110181 | 05397 | T354K146M035AS |
| 130124 | 52763 | 311609-241 |
| 130127 | 52763 | 300324-52D |
| 210074 | 50434 | HPQDSP-411S |
| 210079 | 50434 | HLMP-3401 |
| 600912 | 79727 | GF-323-0070 |
| 920790 | 27556 | PWS2142FL |





TABLE OF CONTENTS

| Section | Title | Page |
|---------|---|--|
| 1 | GENERAL DESCRIPTION | } These sections are included in the Model 6000 Operators Manual. Publication No. 9805 13. |
| 2 | INSTALLATION & INTERFACE | |
| 3 | OPERATION | |
| 4 | APPLICATIONS | |
| 5 | THEORY OF OPERATION | 5-1 |
| 5.1 | Introduction | 5-1 |
| 5.2 | Basic Operation | 5-1 |
| 5.3 | Analog Signal Conditioner | 5-1 |
| 5.3.4 | Measurement Modes | 5-3 |
| 5.3.5 | Circuit Descriptions | 5-9 |
| 5.4 | Circuit Descriptions | 5-19 |
| 5.4.3 | Circuit Descriptions | 5-19 |
| 5.5 | System Interface | 5-28 |
| 5.5.2 | Parallel BCD Interface | 5-28 |
| 5.5.3 | General Purpose Interface Bus | 5-30 |
| 6 | MAINTENANCE | 6-1 |
| 6.1 | Introduction | 6-1 |
| 6.2 | Calibration Checks and Procedures | 6-1 |
| 6.3 | Maintenance Disassembly | 6-1 |
| 6.3.2 | PC Board Removal | 6-3 |
| 6.4 | Unit Performance Checks | 6-3 |
| 6.4.4 | Recommended Test Equipment | 6-3 |
| 6.4.5 | Power Supply Check | 6-3 |
| 6.4.6 | Error Messages | 6-3 |
| 6.4.7 | Troubleshooting Charts | 6-3 |
| 7 | DRAWINGS | 7-1 |
| 8 | PARTS LIST | 8-1 |

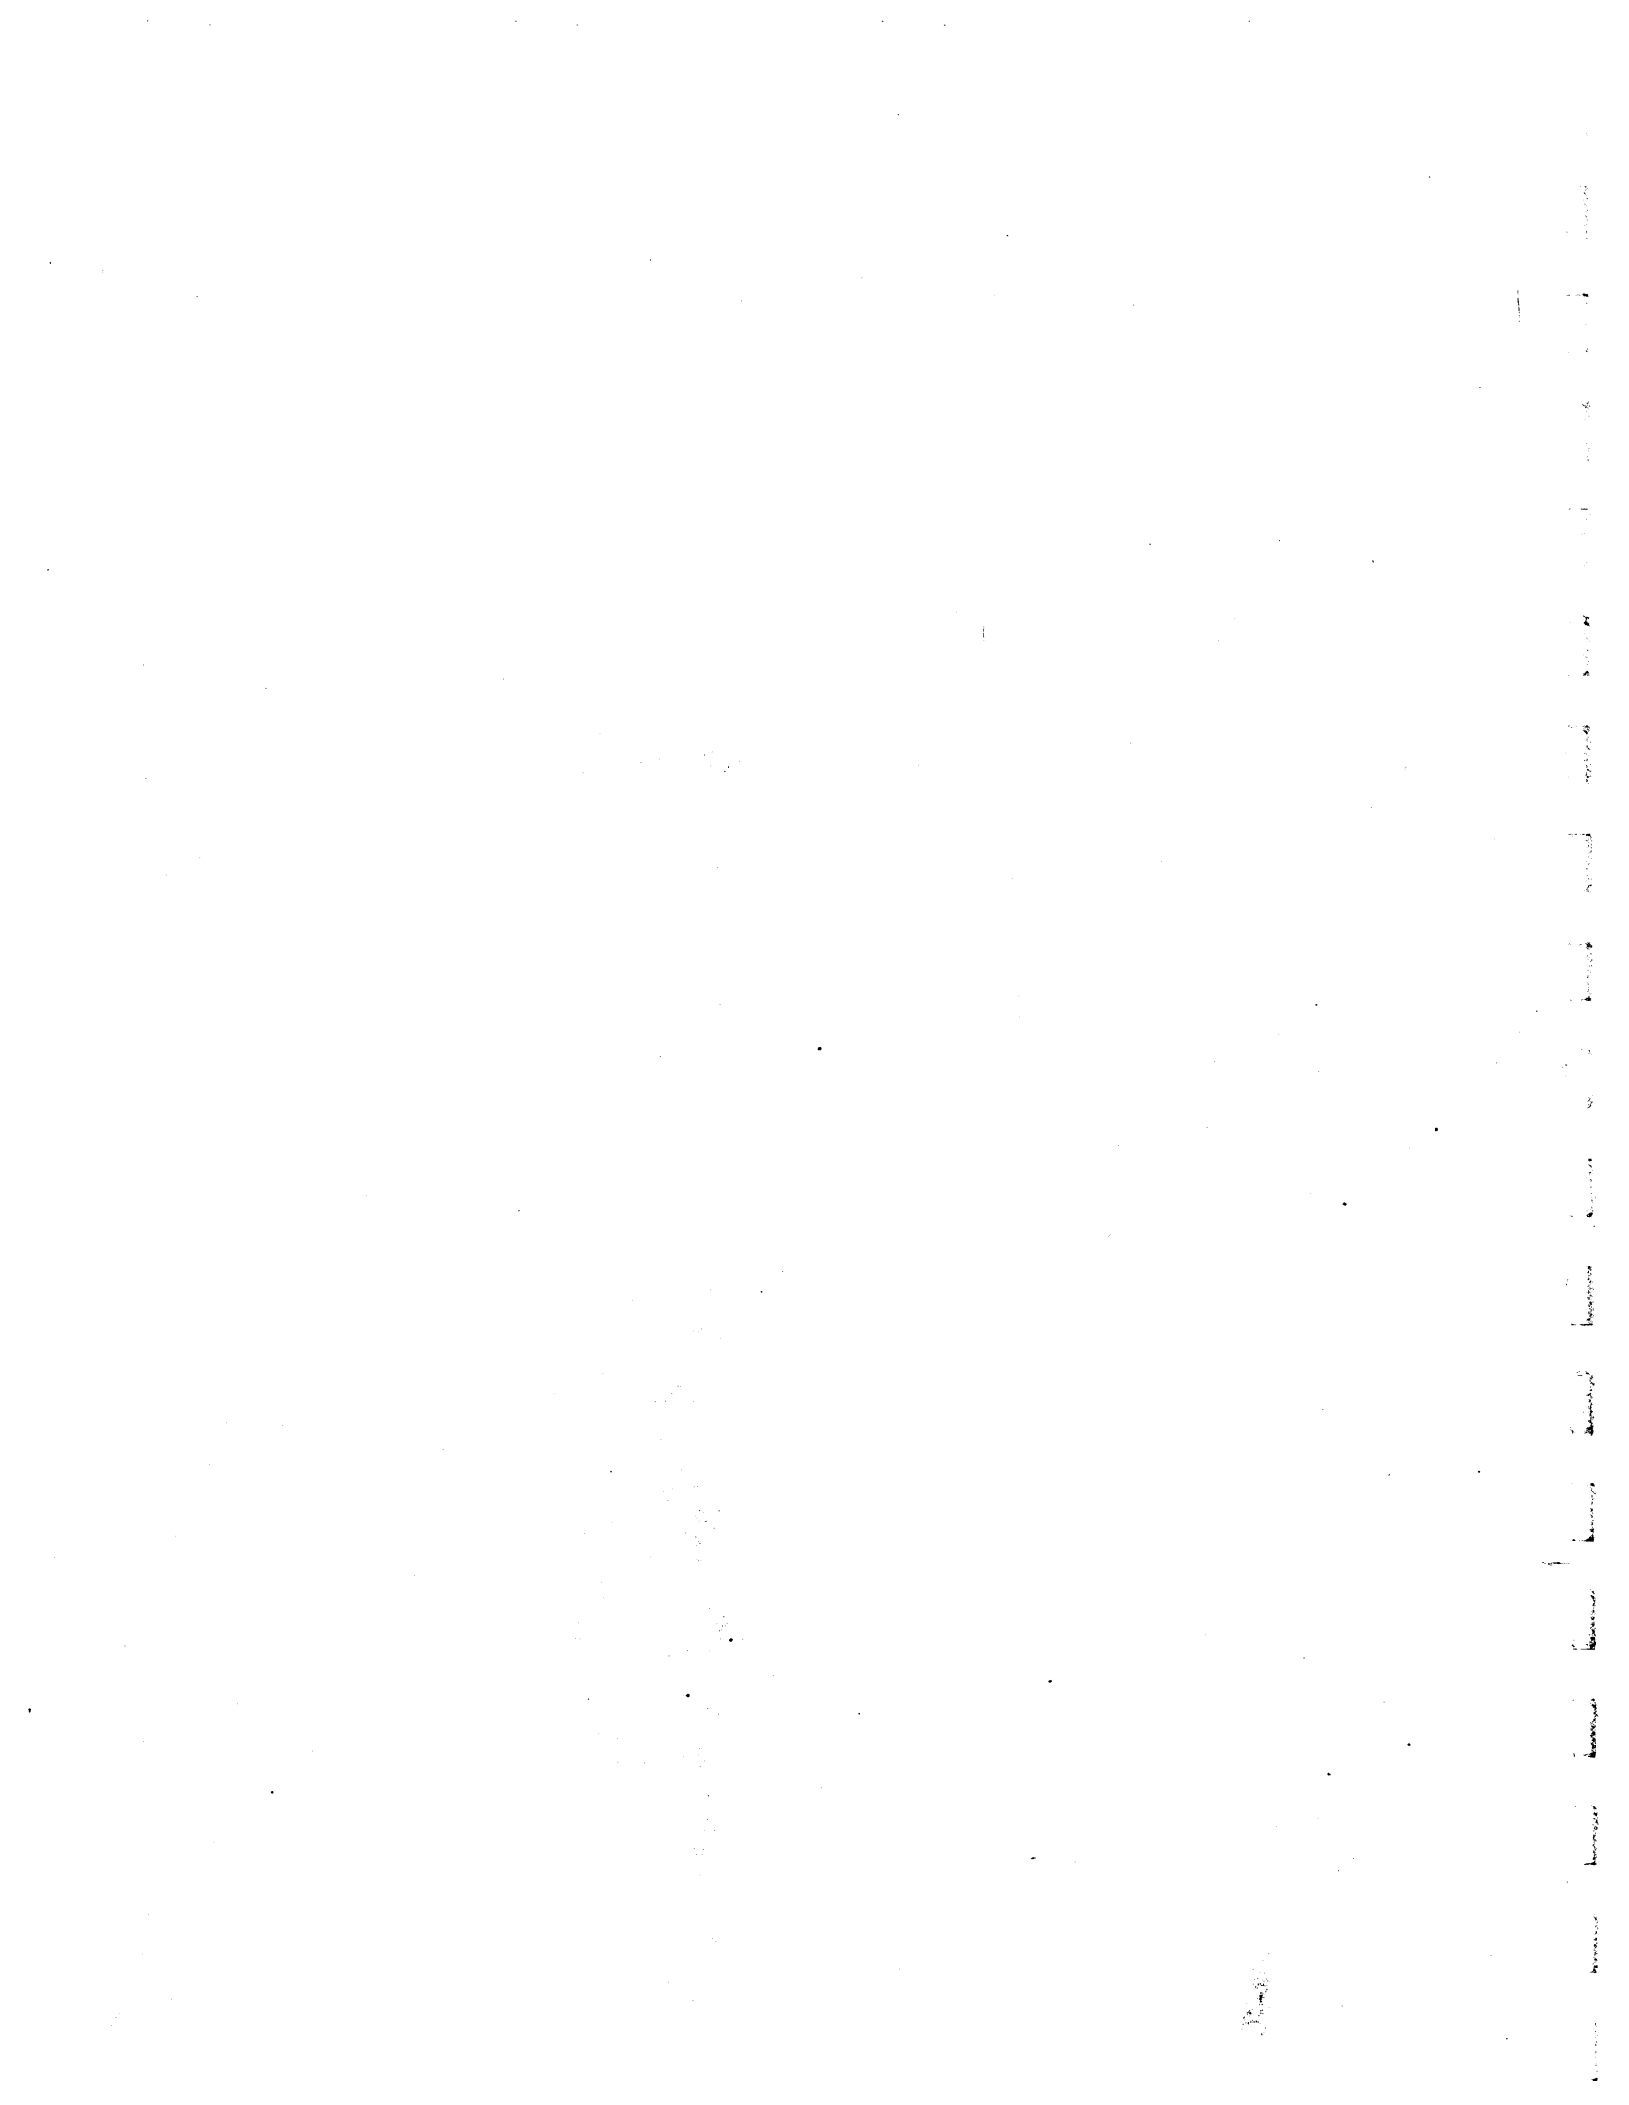

LIST OF ILLUSTRATIONS

| Figure | Title | Page |
|--------|--|------|
| 5.1 | Overall Block Diagram | 5-1 |
| 5.2 | Analog Section Block Diagram | 5-2 |
| 5.3 | 10 Volt DC Range | 5-3 |
| 5.4 | 1 Volt DC Range | 5-3 |
| 5.5 | 100 Millivolt DC Range | 5-4 |
| 5.6 | 100 and 1000 Volt DC Ranges | 5-4 |
| 5.7 | 10 Millivolt DC Range | 5-4 |
| 5.8 | AC Voltage Measurement | 5-5 |
| 5.9 | 10K Ω - 100M Ω Ranges | 5-5 |
| 5.10 | 10 Ω - 1K Ω Ranges | 5-5 |
| 5.11 | 1 Ω Range | 5-6 |
| 5.12 | External Reference (DC EXT REF) | 5-6 |
| 5.13 | External Reference (AC EXT REF) | 5-6 |
| 5.14 | Relay Control and Board Detect | 5-9 |
| 5.15 | Attenuator/Reference Board Block Diagram | 5-10 |
| 5.16 | Isolator Block Diagram | 5-11 |
| 5.17 | Digitizer Block Diagram | 5-12 |
| 5.18 | Integration Timing Diagram, 5 1/2 Digit Mode | 5-13 |
| 5.19 | Preamplifier | 5-14 |
| 5.20 | True RMS Converter | 5-15 |
| 5.21 | Scaling Amplifier | 5-16 |
| 5.22 | Averaging Converter | 5-17 |
| 5.23 | Ohms Converter | 5-18 |
| 5.24 | AC/DC Hardware Ratio | 5-19 |
| 5.25 | Digital Section Block Diagram | 5-20 |
| 5.26 | Computer Board | 5-21 |
| 5.27 | Display/Keyboard | 5-22 |
| 5.28 | Control Logic | 5-22 |
| 5.29 | Control Logic Digitizer Schematic Waveform (Single Reading) | 5-23 |
| 5.30 | Calibration Memory | 5-24 |
| 5.31 | Fast Waveform Digitizer | 5-25 |
| 5.32 | Fast Waveform Digitizer Timing | 5-25 |
| 5.33 | Sample and Hold Fast Waveform Digitizer | 5-26 |
| 5.34 | Sample and Hold Digitizer Timing | 5-27 |
| 5.35 | Parallel BCD | 5-28 |
| 5.36 | GPIB IEEE-488 Interface Board | 5-29 |
| 5.37 | GPIB Data Transfer to MPV | 5-30 |
| 6.1 | PC Board Locations | 6-1 |
| 6.2 | Main Logic Component Location Diagram | 6-5 |
| 6.3 | 10 Volt DC Range Singlethread Troubleshooting Diagram | 6-15 |
| 6.4 | 100mV and 1 Volt DC Range Singlethread Troubleshooting Diagram | 6-16 |
| 6.5 | 100 and 1000 Volt DC Range Singlethread Troubleshooting Diagram | 6-17 |
| 6.6 | 10mV DC Range Singlethread Troubleshooting Diagram | 6-18 |
| 6.7 | 10K, 100K, 1M, 10M, 100M Ranges Singlethread Troubleshooting Diagram | 6-23 |

LIST OF ILLUSTRATIONS continued

| Figure | Title | Page |
|--------|---|------|
| 6.8 | 100, 1K Ohm Ranges Singlethread Troubleshooting Diagram | 6-24 |
| 6.9 | 10 Ohm Range Singlethread Troubleshooting Diagram | 6-25 |
| 6.10 | 1 Ohm Range Singlethread Troubleshooting Diagram | 6-26 |
| 6.11 | AC Volts Singlethread Troubleshooting Diagram | 6-27 |
| 6.12 | Auto-Cal Configuration - DC CAL 1 | 6-28 |
| 6.13 | Auto-Cal Configuration - DC CAL 2 | 6-29 |
| 6.14 | Auto-Cal Configuration - DC CAL 3 | 6-30 |
| 6.15 | Auto-Cal Configuration - DC CAL 4 | 6-31 |
| 6.16 | Auto-Cal Configuration - OHMS CAL 4 | 6-32 |
| 6.17 | Auto-Cal Configuration - OHMS CAL 5 | 6-33 |
| 6.18 | Display/Keyboard Component Location Diagram | 6-35 |
| 6.19 | GPIB Component Location Diagram | 6-37 |
| 6.20 | Computer I - Component Location Diagram | 6-40 |
| 6.21 | Control Logic Component Location Diagram | 6-43 |
| 6.22 | Fast Waveform Digitizer Component Location Diagram | 6-46 |
| 6.23 | Digitizer Component Location Diagram | 6-52 |
| 6.24 | Isolator Component Location Diagram | 6-53 |
| 6.25 | Ohms Component Location Diagram | 6-55 |
| 6.26 | Ohms Reference Component Location Diagram | 6-56 |
| 6.27 | Preamplifier Component Location Diagram | 6-57 |
| 6.28 | Attenuator/Reference Component Location Diagram | 6-59 |
| 6.29 | RMS Converter Component Location Diagram | 6-61 |
| 6.30 | Scaling Amplifier Component Location Diagram | 6-63 |
| 6.31 | AC Averaging Converter Component Location Diagram | 6-66 |

LIST OF TABLES

| Table | Title | Page |
|-------|--|------|
| 6.1 | Recommended Test Equipment | 6-2 |
| 6.2 | Power Supply Checks | 6-4 |
| 6.3 | Error Messages | 6-6 |
| 6.4 | Troubleshooting Chart - General | 6-8 |
| 6.5 | Troubleshooting Chart - DC Voltage | 6-9 |
| 6.6 | Troubleshooting Chart - AC Voltage | 6-10 |
| 6.7 | Troubleshooting Chart - Ohms | 6-11 |
| 6.8 | Troubleshooting Chart - Remote Programming | 6-12 |
| 6.9 | DC Voltage Unit Performance Tests | 6-13 |
| 6.10 | Ohms Range Unit Performance Tests | 6-19 |
| 6.11 | Display/Keyboard Subassembly Performance Test | 6-34 |
| 6.12 | GPIB IEEE Subassembly Performance Test | 6-36 |
| 6.13 | Computer 1 Subassembly Performance Test | 6-39 |
| 6.14 | Control Logic Subassembly Performance Test | 6-41 |
| 6.15 | Fast Waveform Digitizer Subassembly Performance Test | 6-44 |
| 6.16 | Digitizer Subassembly Performance Test | 6-47 |
| 6.17 | Isolator Subassembly Performance Test | 6-53 |
| 6.18 | Ohms Subassembly Performance Test | 6-54 |
| 6.19 | Ohms Reference Subassembly Performance Test | 6-56 |
| 6.20 | Preamplifier Subassembly Performance Test | 6-57 |
| 6.21 | Attenuator/Reference Subassembly Performance Test | 6-59 |
| 6.22 | RMS Converter Subassembly Performance Test | 6-60 |
| 6.23 | Scaling Amplifier Subassembly Performance Test | 6-62 |
| 6.24 | AC Averaging Converter Subassembly Performance Test | 6-64 |



SECTION 5

THEORY OF OPERATION

5.1 INTRODUCTION.

5.1.1 This section presents the theory of operation for the Model 6000 Microprocessing Digital Multimeter (DMM). The operation is analyzed first in terms of a basic block diagram (Figure 5.1) and then operating modes and individual circuits are described. The drawings in this section are provided for use in conjunction with the descriptions and as supplements to the complete schematics located in Section 7.

5.2 BASIC OPERATION.

5.2.1 As may be seen in Figure 5.1, the Model 6000 is composed of three major sections: Analog Signal Conditioner, Digital Control and Interface (optional). Input signals are conditioned and digitized in the Analog Signal Conditioner. Circuit timing and control signals are developed by the microprocessor based logic in the Digital Control section. The Digital Control section also provides keyboard decoding and display logic.

5.2.2 The Model 6000 may also be used as part of an instrumentation system. Remote control of the DMM is achieved through the use of one of the optional interface modules. As can be seen in Figure 5.1, the Interface acts as a bi-directional port for data and control signals generated by the Digital Control section and the external System Controller.

5.3 ANALOG SIGNAL CONDITIONER.

5.3.1 The following paragraphs present a detailed analysis of the signal conditioning process. A block diagram of the Analog section may be found in Figure 5.2.

5.3.2 The Analog section of the basic Model 6000 contains the following plug-in boards:

- Digitizer (J6)
- Isolator (J7)
- Switching (J9)
- Ohms Bypass (J8)
- Preamplifier Bypass (J10)
- Attenuator/Reference (J301, J302, J308)

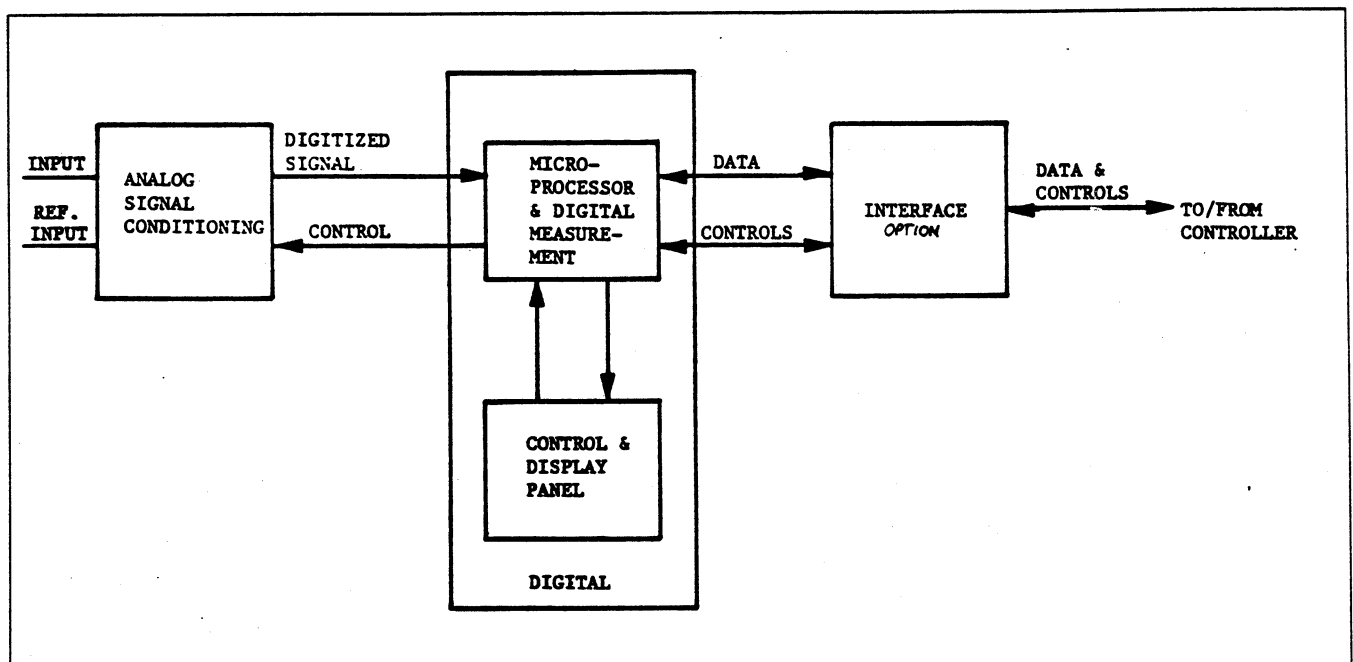


Figure 5.1 - Overall Block Diagram

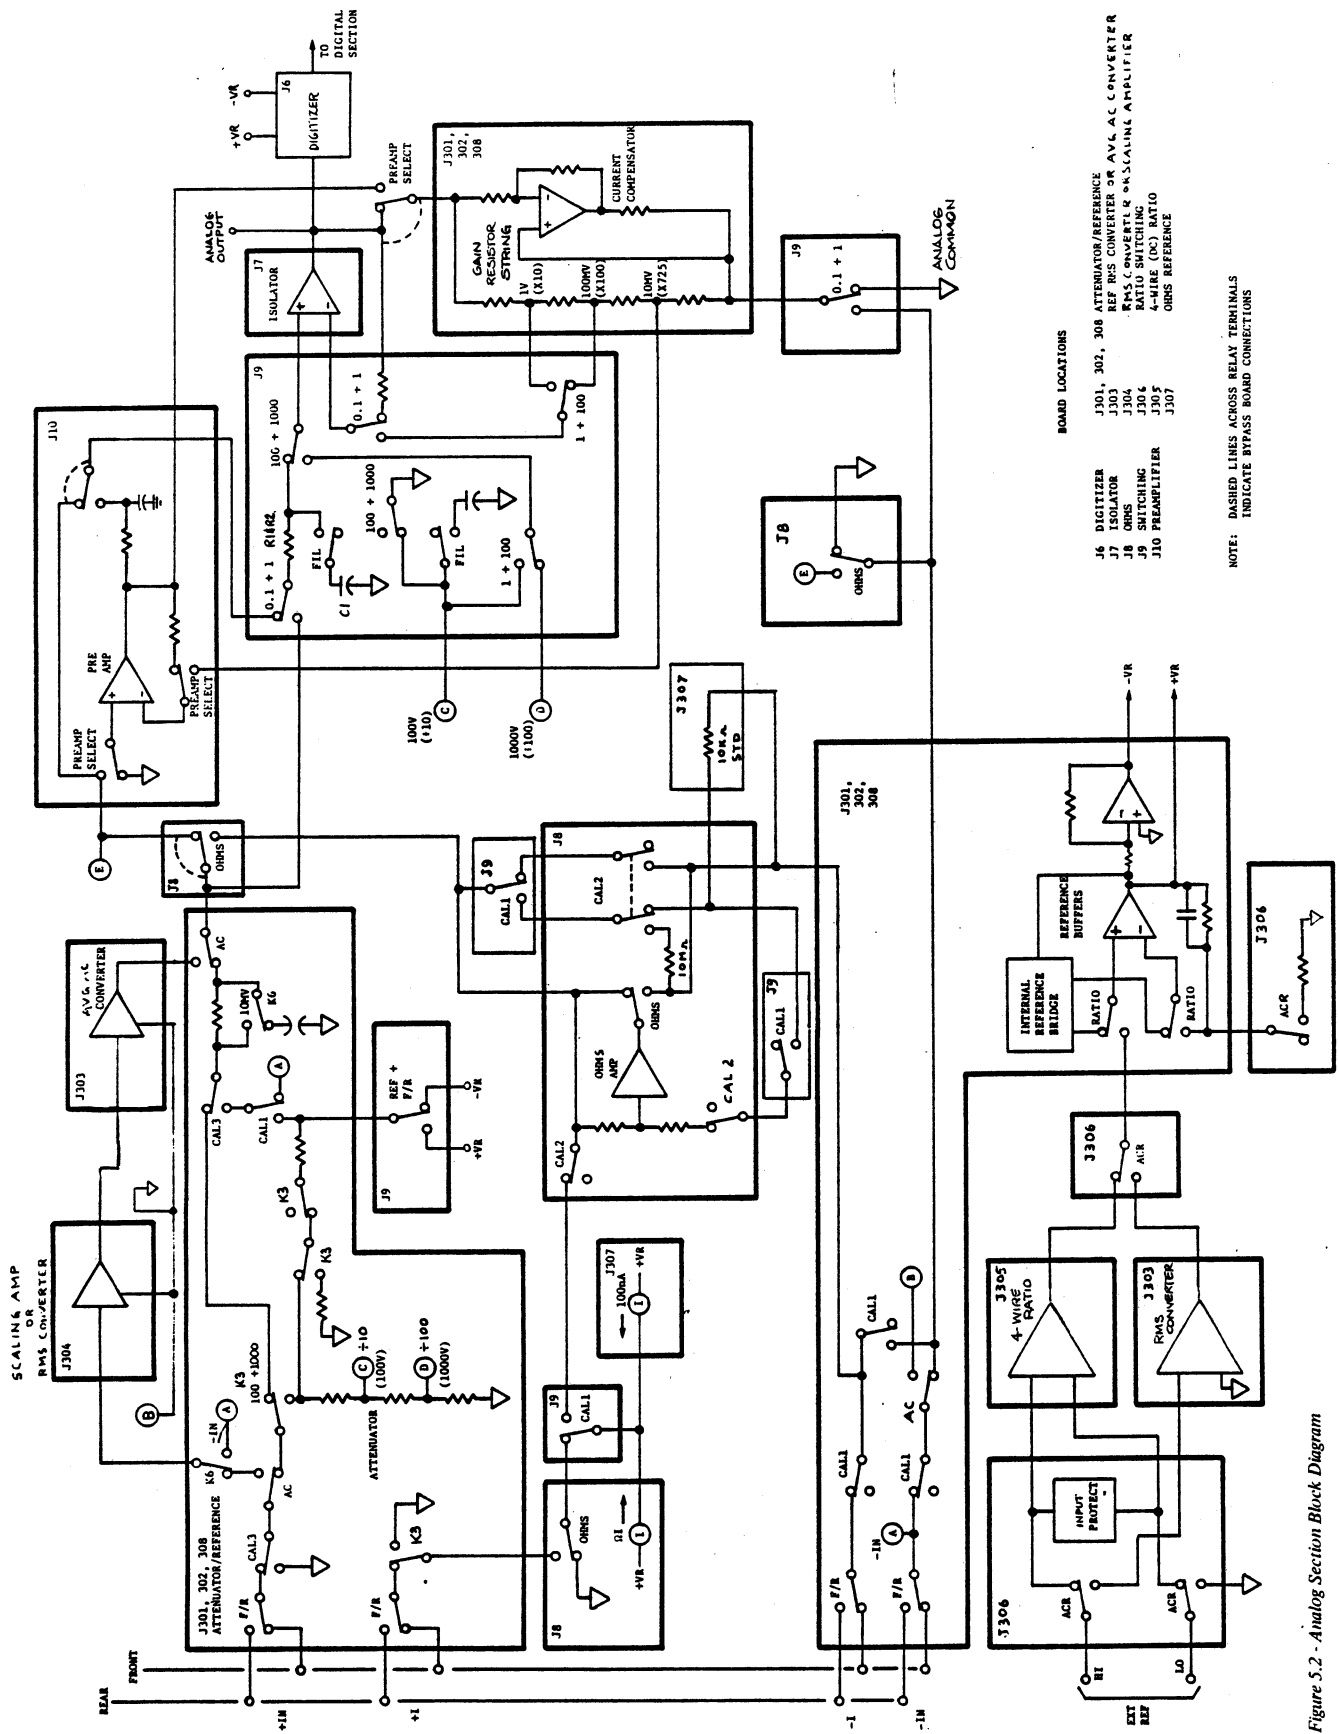


Figure 5.2 - Analog Section Block Diagram

5.3.3 The functional capabilities of the Analog section may be enhanced by the addition of the following optional plug-in boards:

- AC RMS Converter (J304)
- AC Averaging Converter and Scaling Amplifier (J303, J304)
- Ohms (Replaces Ohms Bypass) and Ohms Reference (J8, J307)
- Preamplifier (Replaces Preamplifier Bypass) (J10)
- Fast Waveform Digitizer (J5)
- Four Wire Ratio and Ratio Switching (For DC External Reference) (J305, J306)
- AC RMS Converter and Ratio Switching (For AC External Reference) (J303, J306)

NOTE

The AC External Reference option cannot be installed in an instrument containing an AC Averaging Converter.

5.3.3.1 For the convenience of the user during maintenance or field installation of options, the Model 6000 has an option label affixed to the transformer cover on the rear panel. It indicates the location of all option assemblies for that unit.

| Option | Function | Location of Unique Assy |
|--------|----------------|-------------------------|
| — | AC rms | Cal Module |
| — | 488 Interface | Mainframe |
| — | Ohms | Cal Mod./Mainfr. |
| 03SH | H.S. Digitizer | Mainframe |
| 04 | 50 Hz line | Mainframe |
| 09 | Ratio Switch | Cal Module |
| 11 | Ref AC rms | Cal Module |
| 14 | AC avg | Cal Module |
| 34 | 4W Ratio | Cal Module |
| 41 | 10mV/1Ω | Mainframe |
| 59 | BCD Interface | Mainframe |
| 60 | Rack Mount | Mainframe |
| 66 | Slide Mount | Mainframe |
| 71 | 220/240 line | Mainframe |

5.3.4 Measurement Modes.

5.3.4.1 The Model 6000 (with the appropriate options) is capable of measuring DC voltage, AC voltage and resistance. The DMM is also capable of accepting external references in the measurement process, ratio measurements and automatic self-calibration.

5.3.4.2 The route a measurement signal follows through the analog section depends on the functions and ranges selected. Functions and ranges are selected by either the use of the front panel controls or by external commands received at the interface. Signal flow diagrams in Section 6 show the routing of measurement signals for different functions and ranges of the DMM.

NOTE

Inputs may be applied to the front panel and/or rear panel input terminals. Selection of the input(s) for measurement is made by either the use of the front panel controls or by external commands received at the interface.

5.3.4.3 DC VOLTAGE MEASUREMENT.

5.3.4.3.1 The basic Model 6000 is capable of measuring DC voltage in five ranges: 100 mV, 1V, 10V, 100V and 1000V. A 10 mV range is also available when the instrument is equipped with a Preamplifier (Option 41).

5.3.4.3.2 DC signal inputs may be traced from the selected +IN terminal through contacts of the F/R (Front/Rear), Cal 3 and AC relays (reference Figure 5.2). The path from the selected -IN terminal is routed through contacts of the F/R, Cal 1 and AC relays. Signal routing beyond these points is dependent upon range selection.

5.3.4.3.3 *10 Volt Range.* The signal from the +IN terminal is routed through the contacts of the 100+1000, Ohms, Preamp Select, .1+1 and 100+1000 relays to the positive input of the Isolator. The Isolator output is fed back directly to the negative input (through the normally closed contacts of the .1+1 relay) to obtain a closed loop gain of 1.0. The -IN terminal is connected to analog common through contacts of the Ohms relay. A simplified block diagram is shown in Figure 5.3.

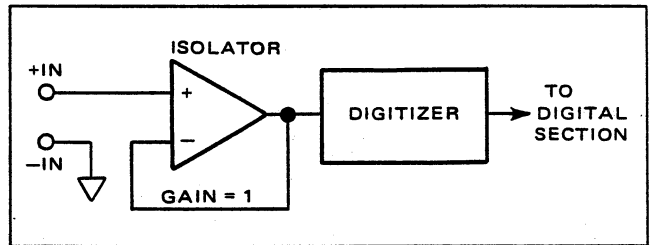


Figure 5.3 - 10 Volt DC Range

5.3.4.3.4 *1 Volt Range.* The signal from the +IN terminal is routed through the contacts of the .1+1 relay to the positive input of the Isolator. The Isolator output is applied to the Gain Resistor string through the normally closed contacts of the Preamp Select relay. A feedback signal from the Gain Resistor string is applied to the negative input of the Isolator (through the normally open contacts of the 1+100 and .1+1 relays) to obtain a closed loop gain of 10. The -IN terminal is connected to analog common through contacts of the Ohms relay, and to the lower end of the Gain Resistor string through contacts of the .1+1 relay. A simplified block diagram is shown in Figure 5.4.

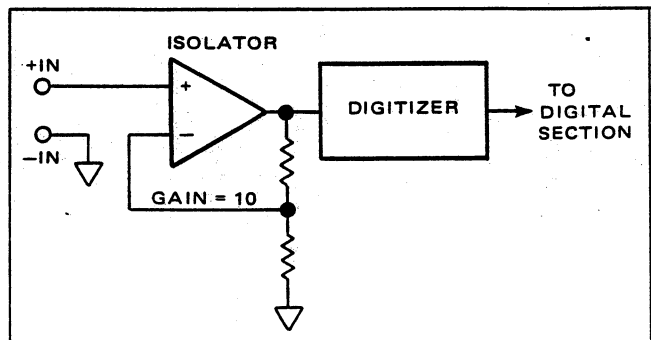


Figure 5.4 - 1 Volt DC Range

5.3.4.3.5 *100 Millivolt Range.* The signal from the +IN terminal is routed through the contacts of the .1+1 relay to the positive input of the Isolator. The Isolator output is applied to the Gain Resistor string through the normally closed contacts of the Preamp Select relay. A feedback signal from the Gain Resistor string is applied to the negative input of the Isolator (through the normally closed contacts of the 1+100 relay and the normally open contacts of the .1+1 relay) to obtain a closed loop gain of 100. The -IN terminal is connected to analog common through contacts of the Ohms relay, and to the lower end of the Gain Resistor string through contacts of the .1+1 relay. A simplified block diagram is shown in Figure 5.5.

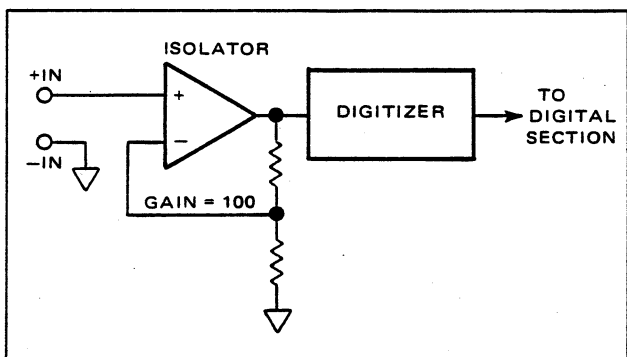


Figure 5.5 - 100 Millivolt DC Range

5.3.4.3.6 *100 and 1000 Volt Ranges.* The signal from the +IN terminal is routed through contacts of the Attenuator/Reference board 100+1000 relay to the attenuator. The attenuator scales down the input signal by a factor of 10 (100 volt range) or 100 (1000 volt range). The attenuated signal is routed through the contacts of the 1+100 and 100+1000 relays to the positive input of the Isolator. The Isolator output is fed back directly to the negative input (through the normally closed contacts of the .1+1 relay) to obtain a closed loop gain of 1.0. The -IN terminal is connected to analog common through contacts of the Ohms relay. A simplified block diagram is shown in Figure 5.6.

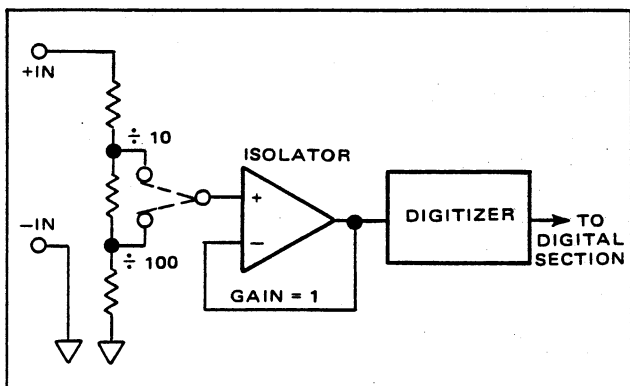


Figure 5.6 - 100 and 1000 Volt DC Ranges

5.3.4.3.7 *10 Millivolt Range (Option 41).* The signal from the +IN terminal is routed through the contacts of the 10 mV and Preamp Select relays to the positive input of the Preamplifier. The filtered output of the Preamplifier is fed through contacts of the Preamp Select and .1+1 relays to the positive input of the Isolator. The unfiltered output of the Preamplifier is fed through contacts of the Preamp Select relay to the Gain Resistor string. A feedback signal from the Gain Resistor string is applied to the negative input of the Preamplifier (through the contacts of the Preamp Select relay) to obtain a Preamplifier gain of 725. The Isolator output is fed back directly to the negative input (through the normally closed contacts of the .1+1 relay) to obtain a closed loop gain of 1.0. The -IN terminal is connected to analog common through contacts of the Ohms relay. A simplified block diagram is shown in Figure 5.7.

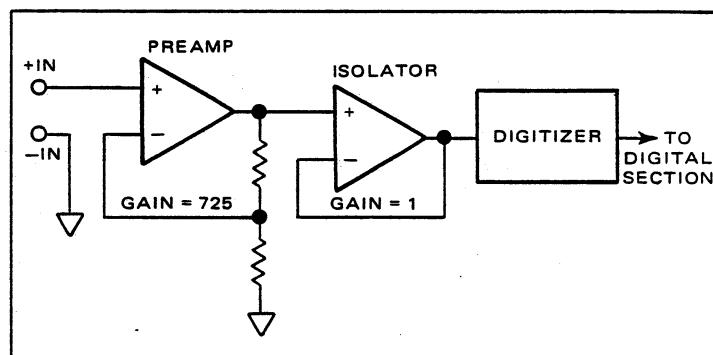


Figure 5.7 - 10 Millivolt DC Range

5.3.4.3.8 The full scale Isolator output of 7.25 volts (for a 10 mV input) is scaled by the Microprocessor to display a full scale reading. The scaling process allows for an over-range of 120% (22 mV input and 16 volt Isolator output).

5.3.4.4 AC VOLTAGE MEASUREMENT (OPTIONS 10 AND 14).

5.3.4.4.1 The Model 6000 (when equipped with Option 10 or Option 14) is capable of measuring AC voltage in four ranges: 1V, 10V, 100V and 1000V. Option 10 provides the DMM with a True RMS Converter. Option 14 provides the DMM with a Scaling Amplifier (J304) and an Averaging Converter (J303).

5.3.4.4.2 AC signal inputs may be traced from the selected +IN terminal through contacts of the F/R (Front/Rear), Cal 3, AC and K6 relays to the input of the AC Converter (Option 10 or Option 14). The output of the AC Converter is routed through contacts of the AC, .1+1 and 100+1000 relays to the positive input of the Isolator. The output of the AC Converter is 1.0 VDC full scale (independent of range selection) and the Isolator output is applied to the

Gain Resistor string for a closed loop gain of 10. The path from the -IN terminal is routed through contacts of the F/R, Cal 1 and AC relays to analog common. A simplified block diagram is shown in Figure 5.8.

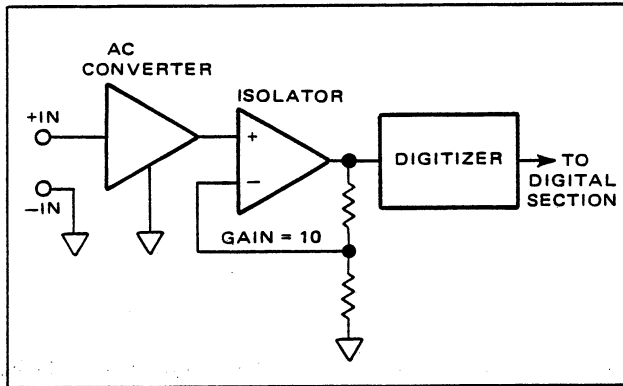


Figure 5.8 - AC Voltage Measurement

5.3.4.5 OHMS MEASUREMENT (OPTION 24).

5.3.4.5.1 The Model 6000 (when equipped with Option 24) is capable of measuring resistance in eight ranges: 10Ω , 100Ω , $1K\Omega$, $10K\Omega$, $100K\Omega$, $1M\Omega$, $10M\Omega$, and $100M\Omega$. A 1Ω range is also available when the instrument is equipped with a Preamplifier (Option 41).

5.3.4.5.2 The circuit configuration is dependent upon the range selected and may take one of three forms. Figures 5.9 - 5.11 show simplified block diagrams of these configurations. In each of the configurations, a current reference is applied to the resistance being measured. This resistance is connected as the feedback path for the Ohms amplifier and the current through this resistance will equal the current provided by the current reference. The output of the Ohms amplifier is a negative DC voltage proportional to the resistance being measured.

5.3.4.5.3 **10K Ω - 100M Ω Ranges.** As shown in Figure 5.9, the output of the Ohms Amplifier is applied to the positive input of the Isolator. The Isolator has a closed loop gain of 1.0 in these ranges, and serves as a buffer between the Ohms amplifier and the Digitizer. The full scale output of the Ohms Amplifier and Isolator is -10 volts.

5.3.4.5.4 **10 Ω - 1K Ω Ranges.** As shown in Figure 5.10, the output of the Ohms amplifier is applied to the positive input of the Current Compensator, and to the negative input of the Isolator (through part of the Gain Resistor string). The output of the Current Generator is applied to the positive input of the Isolator. In this configuration, the output of the Ohms amplifier is inverted and amplified by the Isolator for a full scale output of +10 volts. Isolator gain is 100 in the 10Ω range and 10 in the 100Ω and $1K\Omega$ ranges.

The Current Compensator keeps the current through the Gain Resistor string from flowing through the resistance being measured.

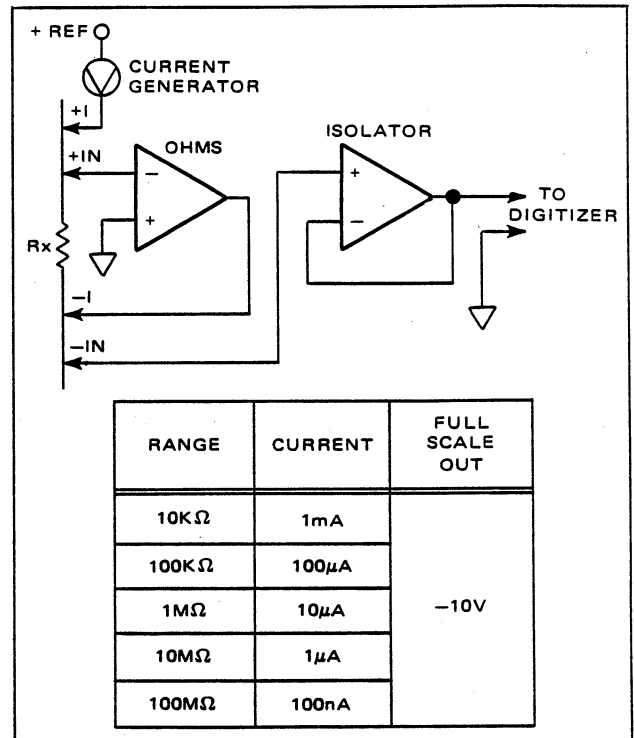


Figure 5.9 - 10K Ω - 100M Ω Ranges

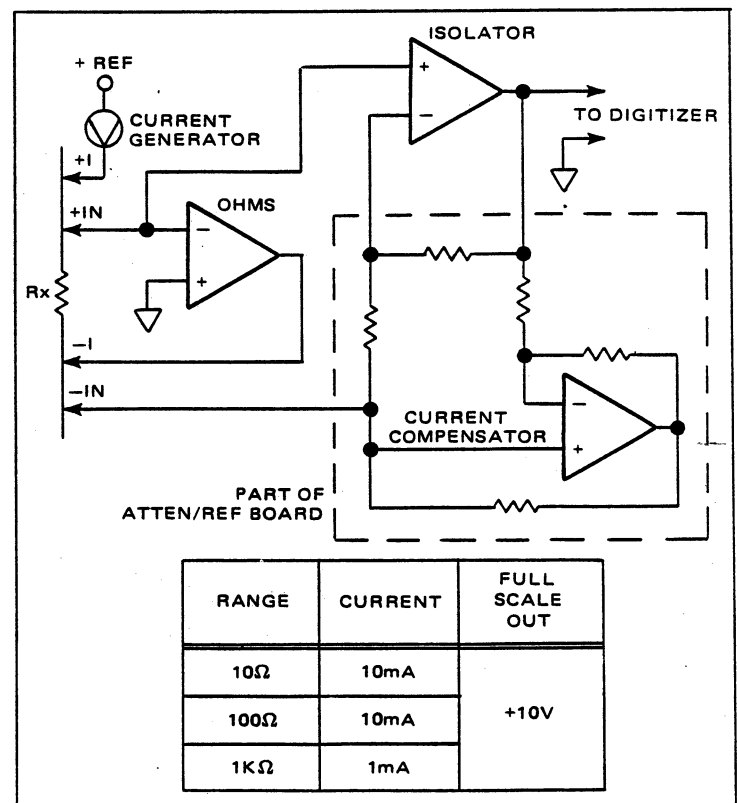


Figure 5.10 - 10 Ω - 1K Ω Ranges

5.3.4.5.5 1Ω Range (Option 41). As shown in Figure 5.11, the output of the Ohms amplifier is applied to the positive input of the Preamplifier (Option 41). The Preamplifier provides a gain of 725 and the output is applied to the positive input of the Isolator. The Isolator has a closed loop gain of 1.0 and serves as a buffer between the Preamplifier and the Digitizer. The full scale output of the Preamplifier and Isolator is -7.25 volts.

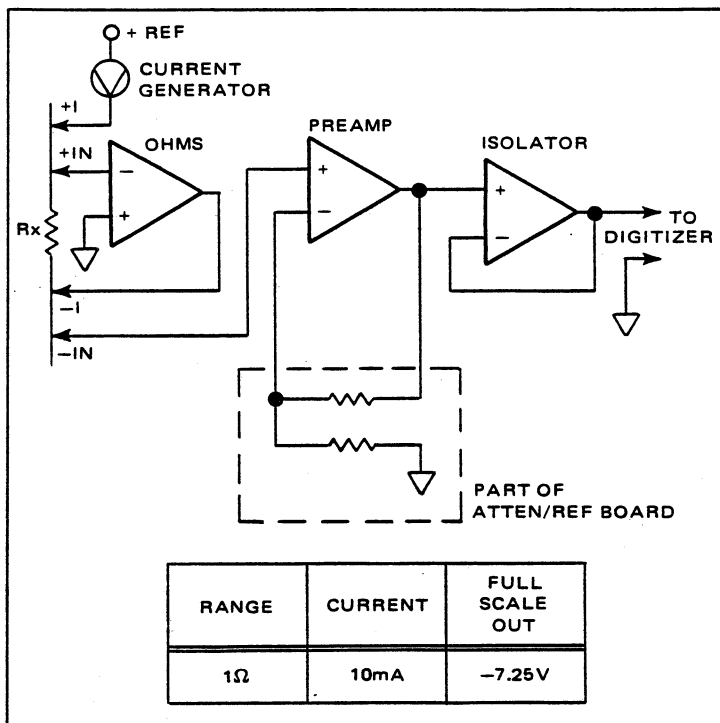


Figure 5.11 - 1Ω Range

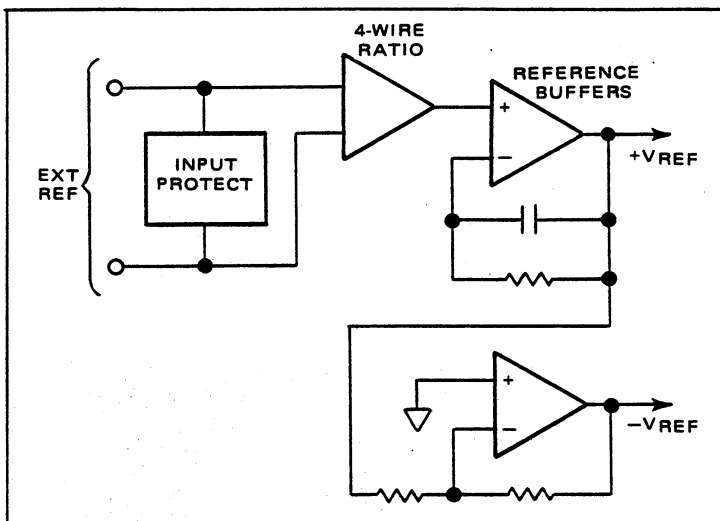


Figure 5.12 - External Reference (DC EXT REF)

5.3.4.6 EXTERNAL REFERENCES AND HARDWARE RATIO.

5.3.4.6.1 Hardware ratio measurements are performed by replacing the internal reference voltages with an external

reference. The external reference voltage is applied to the EXT REF terminals and may be either AC (Option 11) or DC (Option 34). Signal voltages applied to the front or rear input terminals of the DMM are divided by the external reference voltage.

5.3.4.6.2 The Model 6000 will accept DC external reference voltages between $+1.0$ and $+10.5$ volts when DC EXT REF is selected. As shown in Figure 5.2, the external reference voltage is routed through the normally closed contacts of the ACR relay to the differential inputs of the 4-Wire Ratio amplifier. The 4-Wire Ratio amplifier acts as a buffer, and eliminates ground loop errors by permitting the reference voltage to float with respect to the input signal common. The output of the 4-Wire Ratio amplifier is routed through the normally closed contacts of the ACR relay and the normally open contacts of the Ratio relay to the input of the Reference Buffers. The Reference Buffers are unity gain amplifiers, and provide plus and minus reference voltages equal in magnitude to the external reference voltage. A simplified block diagram is shown in Figure 5.12.

5.3.4.6.3 External reference voltages from 0.1 to 1000 volts AC or DC can be used when AC EXT REF or DC coupled AC EXT REF is selected. The high side of the external reference voltage is routed through the normally open contacts of the ACR relay to the input of the RMS Converter. Note that the low side of the external reference voltage is connected to analog common through the ACR relay, thus the reference voltage does not float with respect to the input signal voltage. The RMS Converter scales and takes the true RMS value of the external reference voltage. The $+1.0$ volt full scale output of the RMS Converter is routed through the normally open contacts of the ACR and Ratio relays to the input of the Reference Buffers. The Reference Buffers are set for a gain of 10 to produce ± 10 volts DC full scale reference voltages. A simplified block diagram is shown in Figure 5.13.


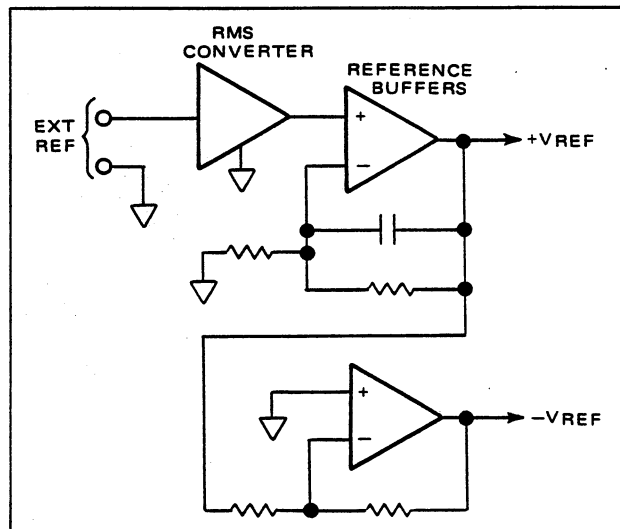


Figure 5.13 - External Reference (AC EXT REF)


5.3.4.7 AUTO-CAL CONFIGURATIONS.

5.3.4.7.1 When the Auto-Cal routine is initiated, the Model 6000 sets the analog circuitry to various configurations, tests error factors against preset limits and, if the errors are within these limits, stores correction factors in memory. The basic Auto-Cal routine will perform seven DC test and calibration steps. The routine will also include five Ohms steps (if Option 24 is installed). One additional DC step and one additional Ohms step are performed when a Pre-amplifier (Option 41) is installed.


5.3.4.7.2 *DC CAL 1.* The Isolator/Digitizer configuration is calibrated with the positive reference voltage (see block diagram below).

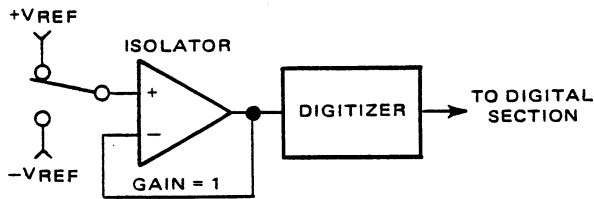


5.3.4.7.3 *DC CAL 2.* The Attenuator/Isolator/Digitizer configuration is calibrated with the positive reference voltage (see block diagram below).

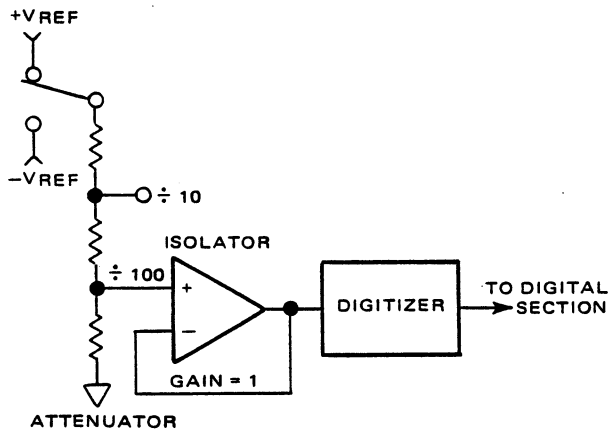


5.3.4.7.4 *DC CAL 3.* The Isolator/Digitizer configuration is calibrated with the negative reference voltage (see block diagram below).

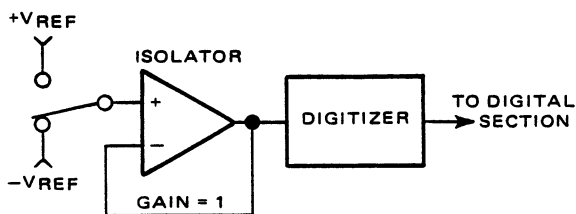


5.3.4.7.5 *DC CAL 4.* The Attenuator/Isolator/Digitizer configuration is calibrated with the negative reference voltage (see block diagram below).

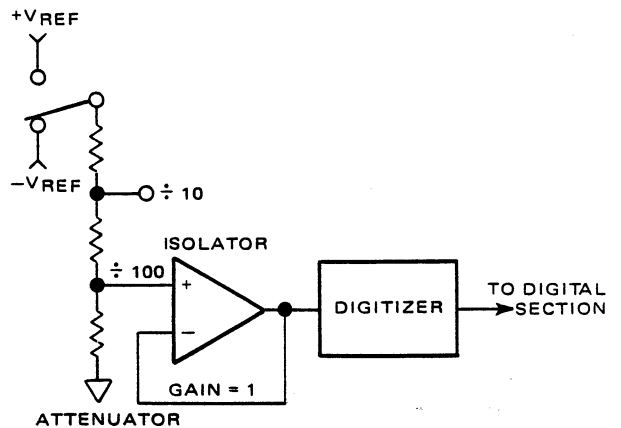


5.3.4.7.6 *DC CAL 5.* The offset of the Isolator/Digitizer configuration is measured in the 10 volt range (see block diagram below).

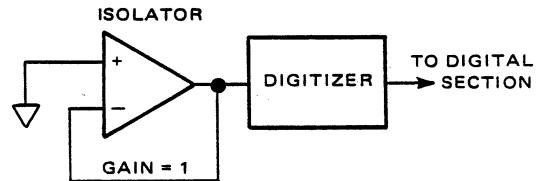


5.3.4.7.7 *DC CAL 6.* The offset of the Isolator/Digitizer configuration is measured in the 1 volt range (see block diagram below).

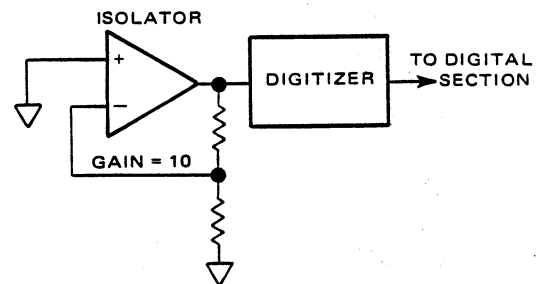


5.3.4.7.8 *DC CAL 7.* The offset of the Isolator/Digitizer configuration is measured in the 100 millivolt range (see block diagram below).

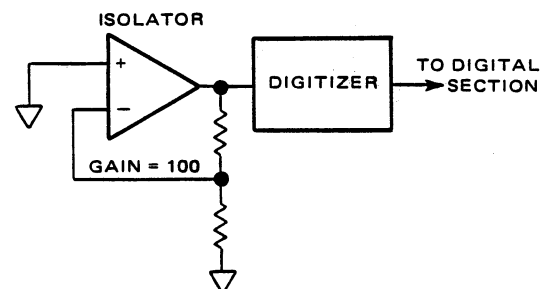


5.3.4.7.9 DC CAL 8. The offset of the Preamplifier/Isolator/Digitizer configuration is measured in the 10 millivolt range (see block diagram below).

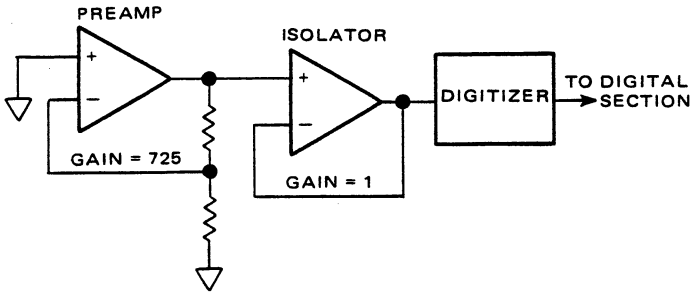


5.3.4.7.10 Ohms CAL 1. The offset of the Ohms/Isolator/Digitizer configuration is measured for the 10Ω range (see block diagram below).

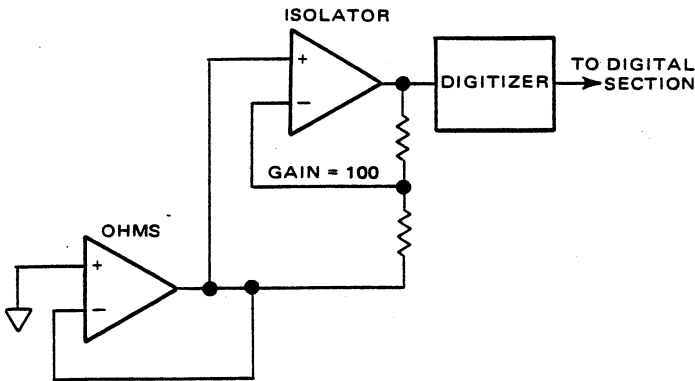


5.3.4.7.11 Ohms CAL 2. The offset of the Ohms/Isolator/Digitizer configuration is measured for the 100Ω range (see block diagram below).

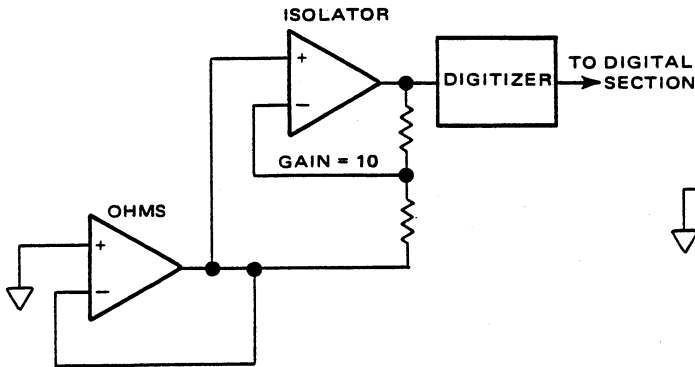


5.3.4.7.12 Ohms CAL 3. The offset of the Ohms/Isolator/Digitizer configuration is measured for the 10KΩ and higher ranges (see block diagram below).

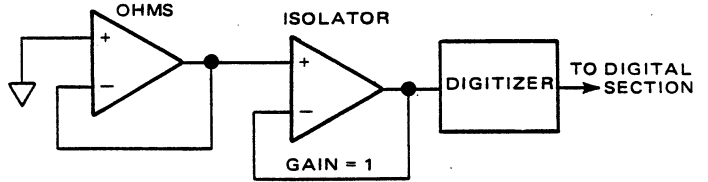


5.3.4.7.13 Ohms CAL 4. The offset due to input bias current is measured for the 10KΩ and higher ranges (see block diagram below).

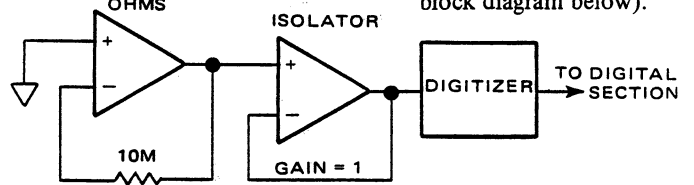

5.3.4.7.14 Ohms CAL 5. The accuracy of the internal 10KΩ resistance standard is measured in the 10KΩ range (see block diagram below).

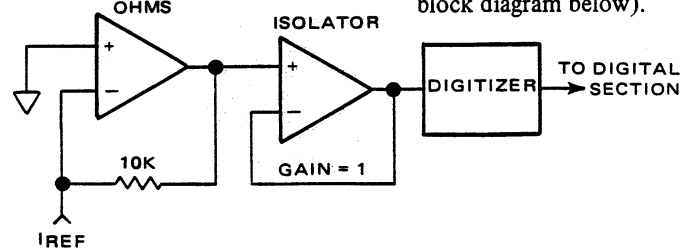

5.3.4.7.15 Ohms CAL 6. The offset of the Ohms/Preamplifier/Isolator/Digitizer configuration is measured for the 1Ω range (see block diagram below).

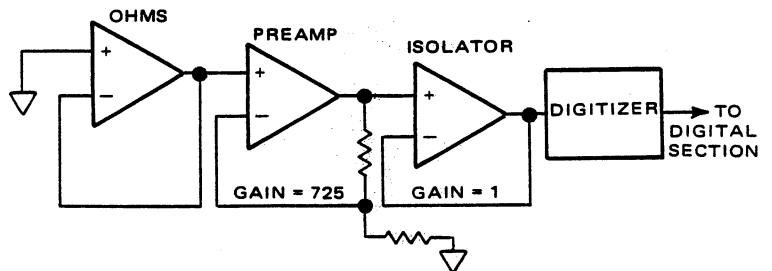

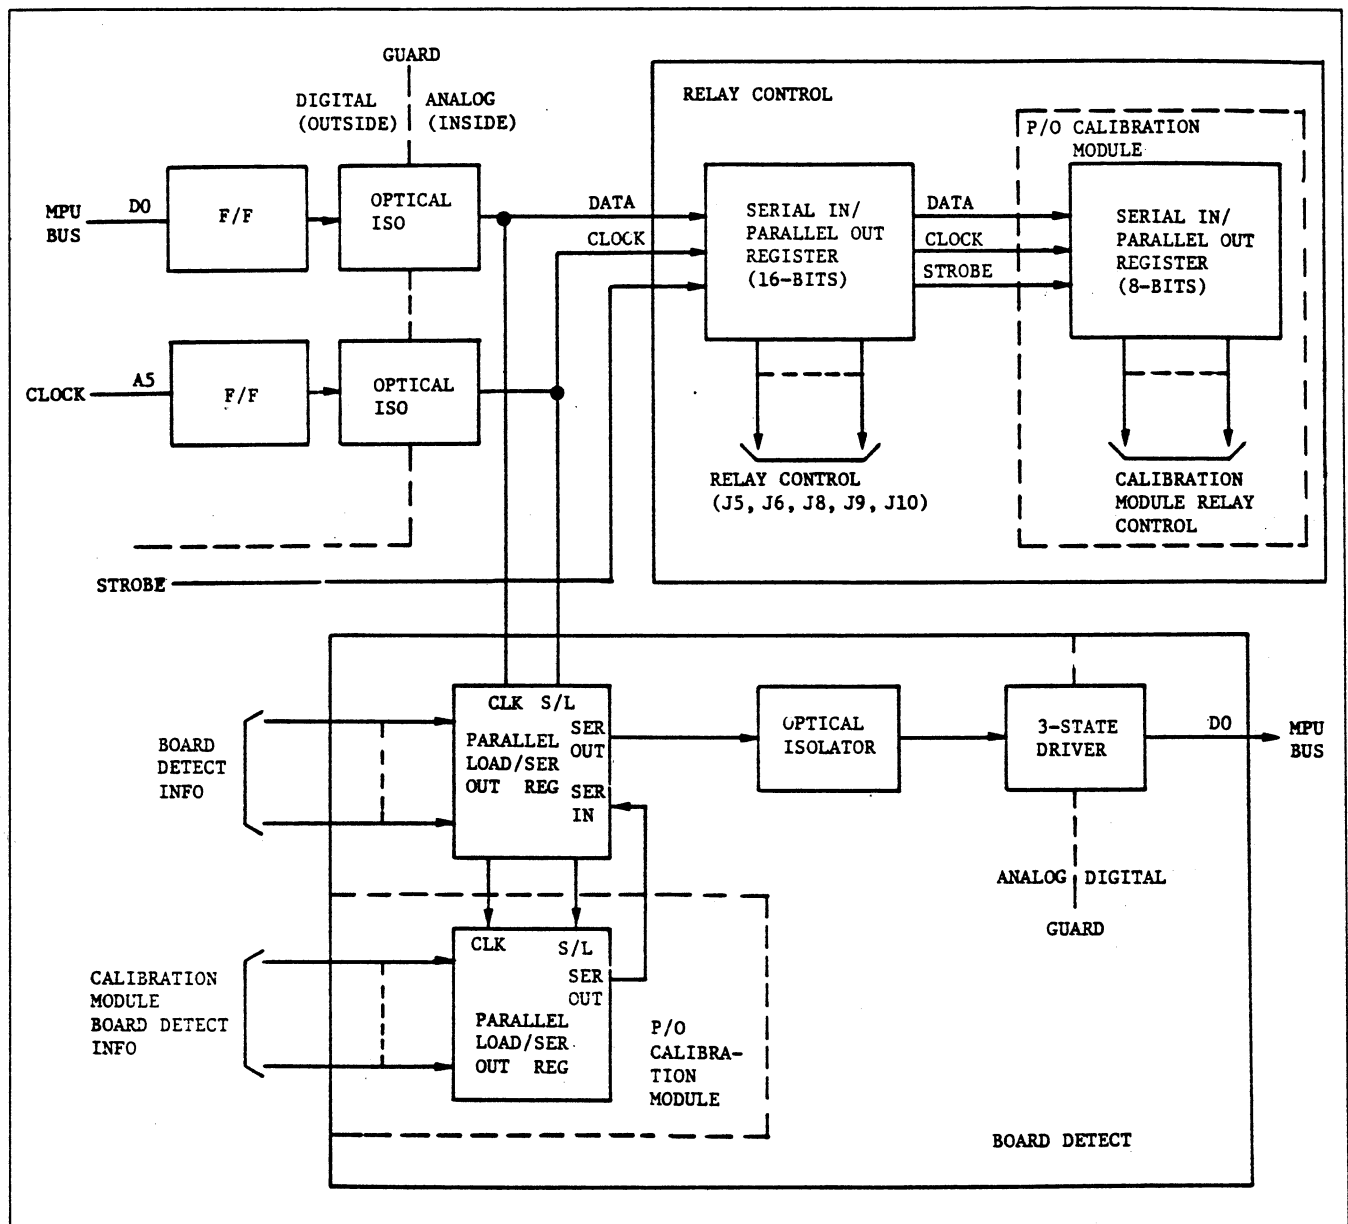


Figure 5.14 - Relay Control and Board Detect

5.3.5 Circuit Descriptions.

5.3.5.1 The following paragraphs contain descriptions of the circuitry and block diagrams of the circuit boards in the analog section. Detailed schematics may be found in Section 7.

5.3.5.2 MOTHERBOARD.

5.3.5.2.1 The Motherboard provides connectors for the insertion of the printed circuit boards (analog and digital), interconnections between the circuit boards, and power supplies. The Motherboard also contains the board detection

logic and the control circuitry for the Switching Board relays.

5.3.5.2.2 *Power Supply.* AC line voltage is routed through front panel switch S101 to transformer T201. The secondary voltages are rectified, filtered and regulated to provide the required DC voltages. The digital half of the supply provides three +5 volt supplies and a -30 volt supply. The analog half of the supply is located inside of the guard area and produces regulated voltages of +5 volts, +15 volts, +24 volts, -15 volts and -24 volts. An unregulated voltage of -40 to -85 volts (labeled -40V) is generated for use in the Digitizer. Unregulated ± 30 volts is supplied to the Isolator.

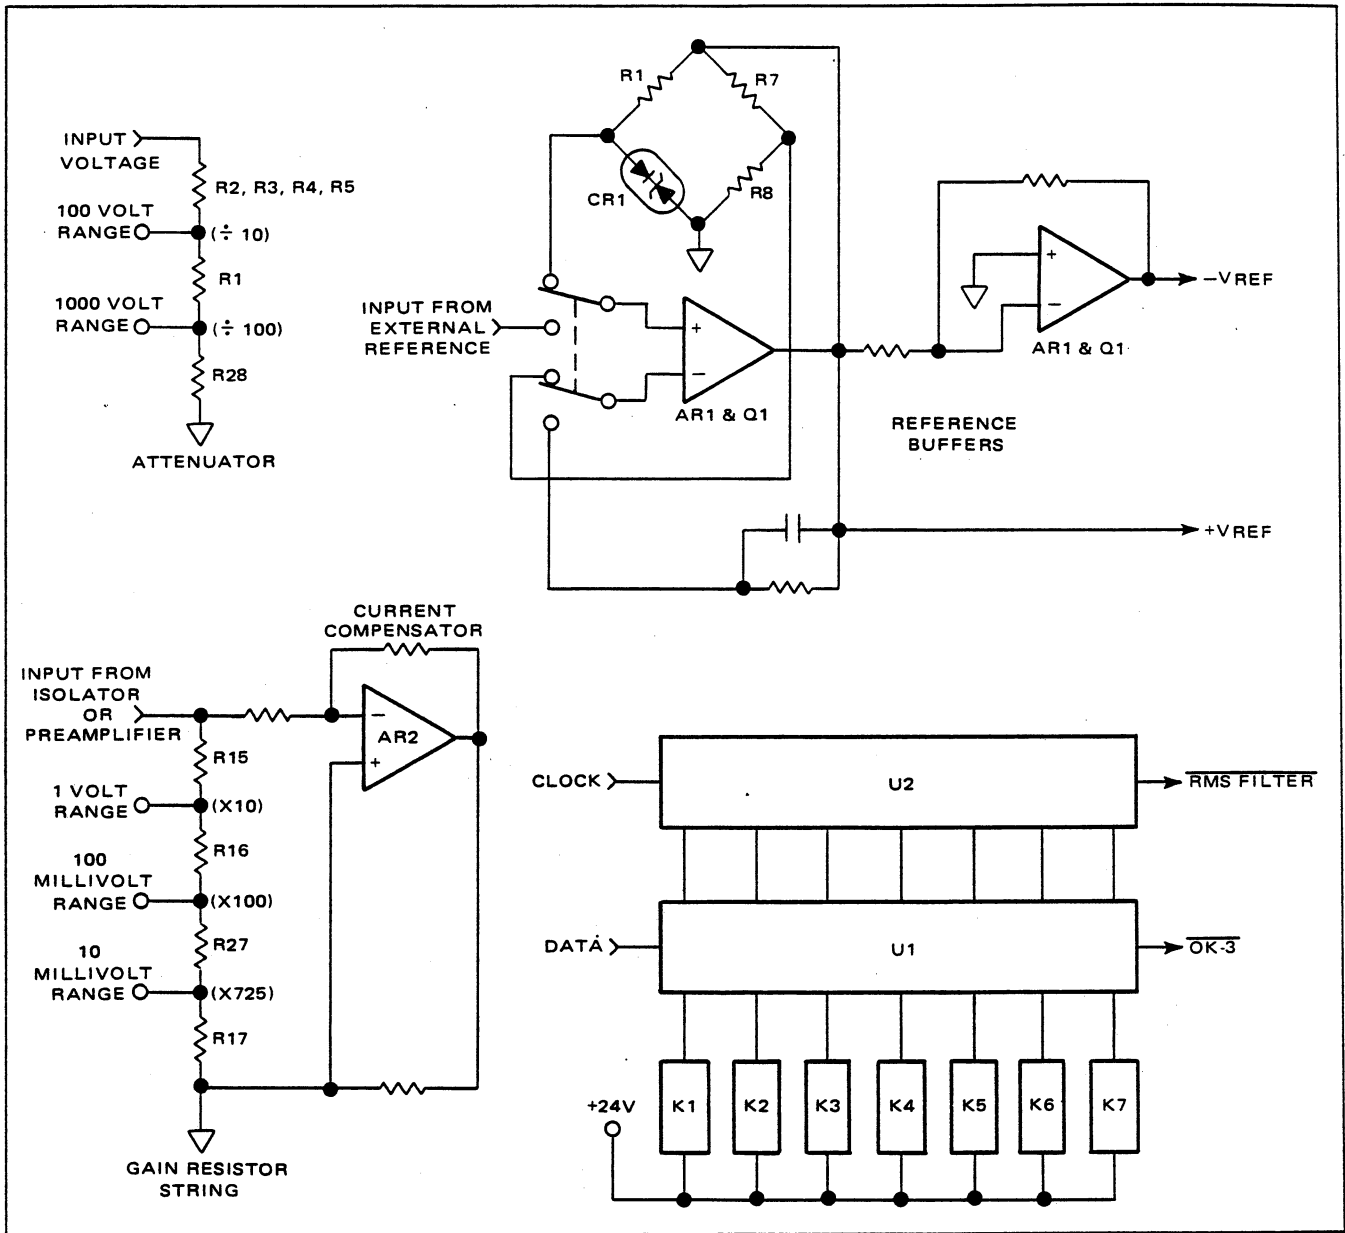


Figure 5.15 - Attenuator/Reference Board Block Diagram

5.3.5.2.3 *Relay Control Circuitry.* The relay control circuitry (Figure 5.14) consists of two flip-flops (U6), two opto-isolators, two serial to parallel shift registers (U4 and U9) and twelve relay drivers (U5 and U6). Control bits from the microprocessor are clocked through U6 and the opto-isolators and into the shift registers. The shift register outputs are buffered by the relay drivers.

5.3.5.2.4 *Board Detection Logic.* The board detection logic (Figure 5.14) consists of two parallel to serial shift registers (U2 on the Motherboard and U1 in the Cal Module) and an opto-isolator. After the relay control bits are loaded into U4 and U9, the clock and data lines from the micro-

processor are used to load the board detection shift registers. The bits are then shifted out of the registers and to the microprocessor through the opto-isolator. The microprocessor uses the information to determine which functions, ranges and Auto-Cal procedures may be performed by the instrument.

5.3.5.3 SWITCHING BOARD.

5.3.5.3.1 *The Switching Board* contains relays, controlled by the microprocessor and the relay control logic on the Motherboard, which provide selection and routing for input signals. The Switching Board also provides one pole of the

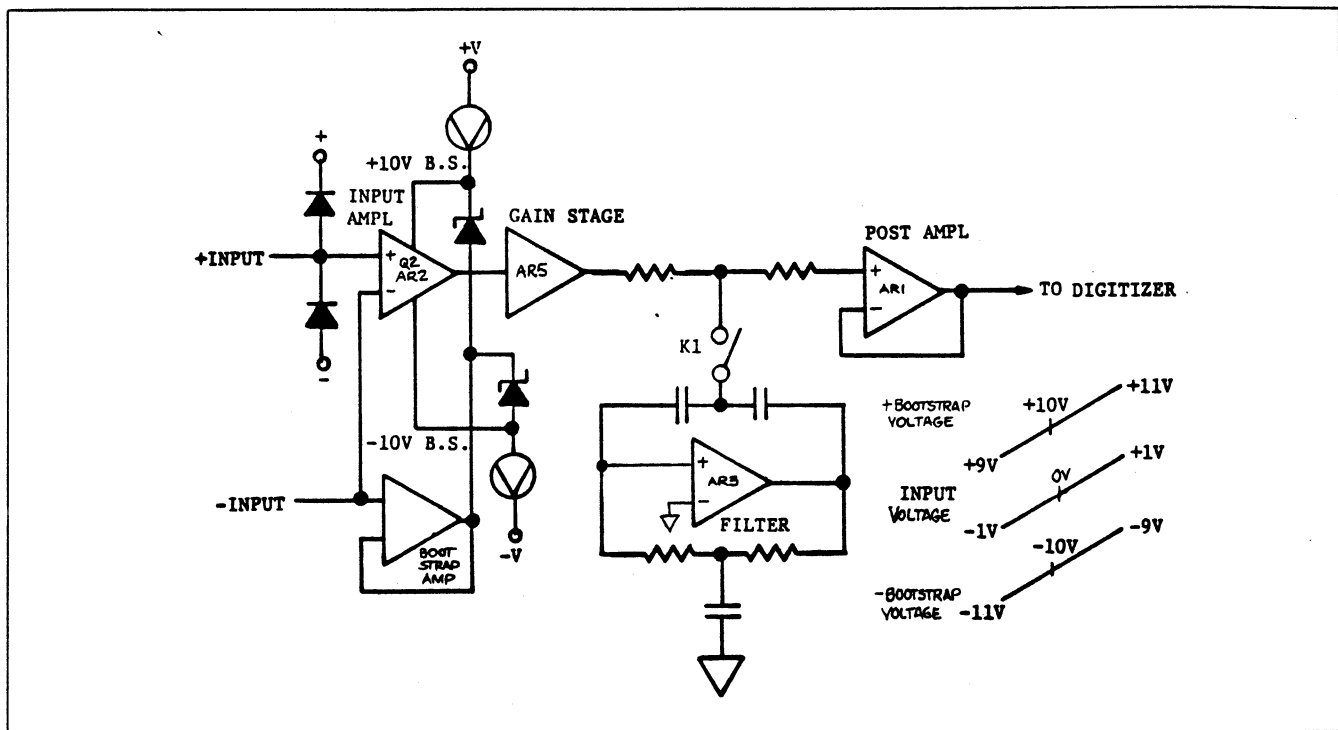


Figure 5.16 - Isolator Block Diagram

switchable 4-pole active filter at the input of the Isolator. The RC network of R1, R2 and C1 provide filtering in all functions and ranges except the 100 and 1000 volt DC ranges. Filtering in the 100 and 1000 volt DC ranges is provided by C2 in conjunction with the attenuator resistors. The other three poles of the active filter are provided in the Isolator.

5.3.5.4 ATTENUATOR/REFERENCE BOARD.

5.3.5.4.1 The Attenuator/Reference Board (Figure 5.15) provides a signal attenuation network, a gain resistor network and reference voltage circuitry. The Attenuator/Reference Board also contains on-board relays and relay control logic.

5.3.5.4.2 *Attenuator.* The signal attenuation network is a resistor voltage divider comprised of R1 through R5 and R28. The input signal is attenuated by a factor of 10 in the 100 volt DC range and by a factor of 100 in the 1000 volt DC range.

5.3.5.4.3 *Gain Resistor Network.* The gain of the Isolator and Preamplifier is set by the feedback resistors in the gain resistor network. The resistor network (R15, R16, R17 and R27) provides Isolator gains of 1, 10 and 100, and a Preamplifier gain of 725. Operational amplifier AR2 provides current compensation for the low ohms ranges.

5.3.5.4.4 *Voltage Reference.* The voltage reference circuitry provides internal references of +10 volts and -10 volts or positive and negative reference voltages proportional to an external reference. The internal reference is developed by a reference bridge comprised of R1, R7, R8 and CR1 on the Reference Assembly.

5.3.5.4.5 The selected reference voltage (internal or external) is routed to the inputs of operational amplifier AR1 on the 10 Volt Reference Board. The positive reference is applied to the DMM through current amplifier Q1. Operational amplifier AR1 and transistor Q1 on the Attenuator Board derive the minus reference voltage from the positive reference.

5.3.5.5 ISOLATOR BOARD.

5.3.5.5.1 The Isolator (Figure 5.16) consists of a high open loop gain amplifier, a bootstrap amplifier and three poles of the switchable 4-pole active filter. The Isolator is connected in a potentiometric gain configuration with feedback resistors located on the Attenuator/Reference Board. Gains of 1, 10 or 100 are provided by the Isolator, depending on the range and function selected.

5.3.5.5.2 *Bootstrap Amplifier.* The bootstrap amplifier (Q5, Q6, Q7 and operational amplifier AR4) generates bootstrap voltages of approximately +10 volts DC and -10 volts

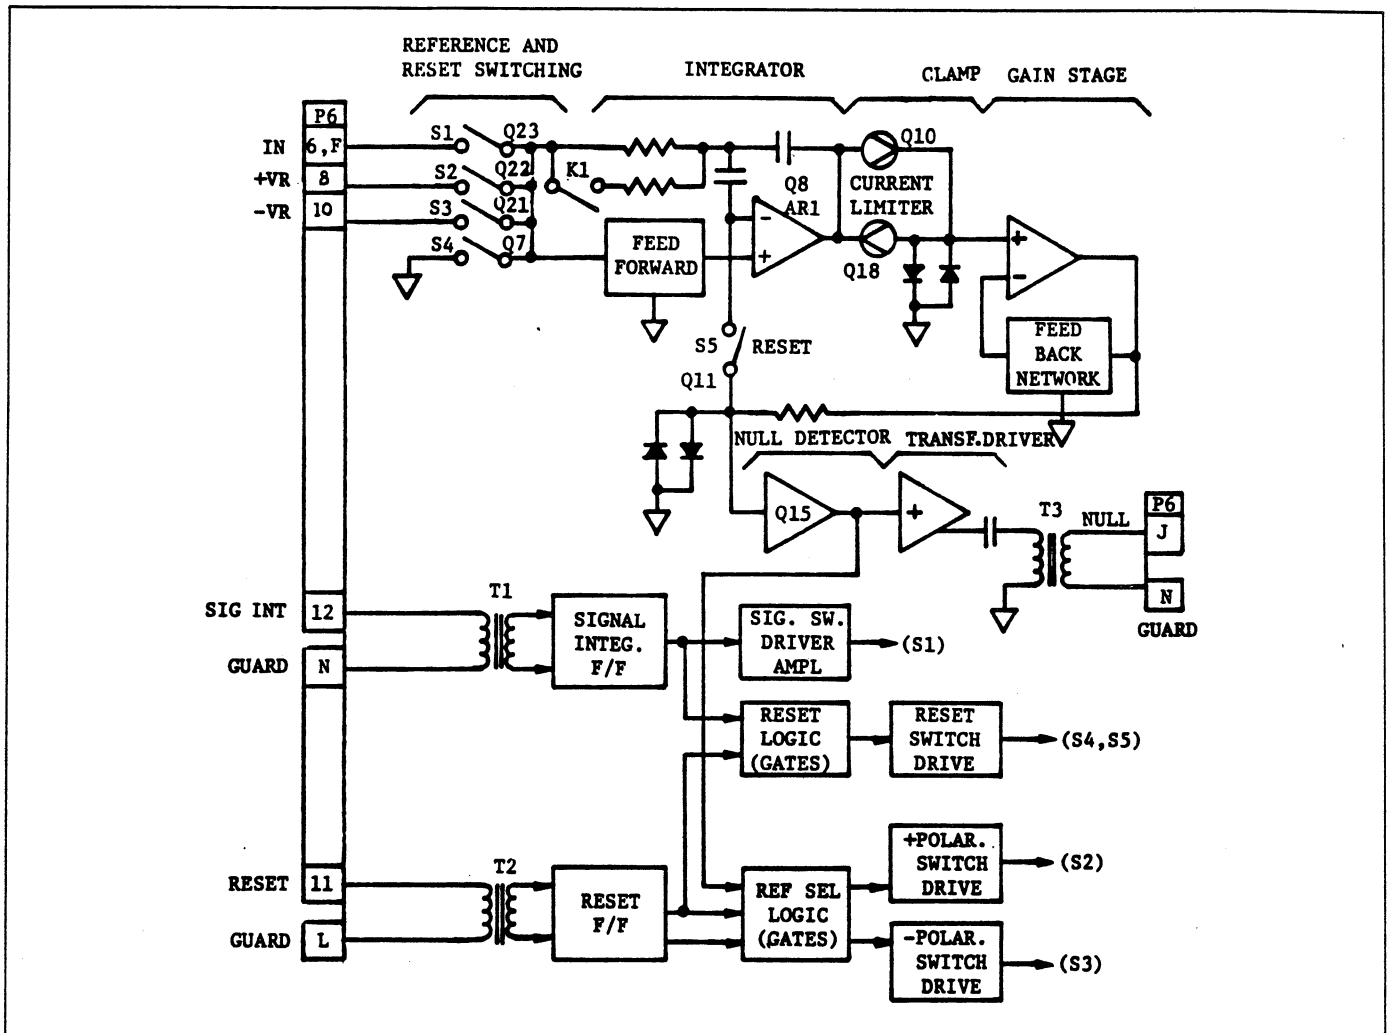


Figure 5.17 - Digitizer Block Diagram

DC when the input to the Isolator is 0 volts DC. As the input voltage increases in the positive direction, both of the bootstrap voltages also increase an equal amount in the positive direction. As the input moves in the negative direction, both of the bootstraps move an equal amount in the negative direction. This bootstrap effect provides an effective input impedance greater than 10,000 megohms. Figure 5.16 illustrates the relationship.

5.3.5.5.3 *Forward Gain Stages.* Isolator gain stages are provided by Q2 and operational amplifiers AR2, AR5 and AR1. Input over-voltage protection is provided by Q1, Q3, Q8, Q9 and CR5 through CR7.

5.3.5.5.4 *Active Filter.* The switchable filter is an active 3-pole Bessel type formed by operational amplifier AR3. The filter is connected by relay K1 ahead of the final section of the gain stage (AR1).

5.3.5.6 DIGITIZER BOARD.

5.3.5.6.1 The Digitizer (Figure 5.17) performs the analog to digital conversion in the DMM. The circuitry includes integration circuitry, a switching network, gain stage, null detection and signal and reset logic.

5.3.5.6.2 *Integrator.* The Integrator consists of an operational amplifier (AR1 and Q8) with a capacitive feedback path to convert the DC levels applied at the input to a corresponding ramp voltage at the Integrator output. The use of a dual FET input stage (Q8) provides for a high input impedance, permits capacitor input coupling during the integration period and allows for auto-zeroing during reset. The feed forward circuitry is a voltage divider network (R15 through R17 and C4) that applies a portion of the reference voltage to the non-inverting input of the Integrator during the reference integration period. This causes an equal amount of voltage to appear at the output.

5.3.5.6.3 *Input Switches.* The input switching is performed by junction FET's (Q21 through Q23, Q7, Q11 and Q16). At the beginning of the signal integration period, a positive pulse is applied to T1, causing Q1 of the input switching flip-flop to conduct. Q1, in turn, causes the signal input switch (Q23) to apply the input signal to the Integrator. Relay K1-A is energized in the 4 1/2 and 5 1/2 digit modes, placing R14 in parallel with R13, thus decreasing the input time constant and the total integration period. The integration periods are: 100 msec to ramp to 10 volts (6 1/2 digit), 16.67 msec to ramp to 10 volts (5 1/2 digit) and 1.67 msec to ramp to 1 volt (4 1/2 digit).

5.3.5.6.4 At the end of the signal integration period, a negative pulse is applied to T1, causing Q1 to turn off and Q2 to turn on. This change of state causes switch Q23 to open and either Q21 or Q22 to close. The selection of the appropriate reference voltage is determined by the output of the polarity switch drive flip-flop (U1 and U2). The flip-flop state is set by a pulse from the null detector circuitry (negative pulse for positive input and positive pulse for negative input). The Integrator will integrate the positive reference when there is a negative input signal and the negative reference when there is a positive input signal.

5.3.5.6.5 The end of the reference integration period occurs when the Null Detector detects an axis crossing and changes state. When a reset pulse is applied to T2, Q4 is turned on and Q3 is turned off. Both of the polarity switch drive flip-flop outputs are set high, which holds both reference switches (Q21 and Q22) open. The reset signal also closes reset switches Q7, Q11 and Q16. Integration timing is shown in Figure 5.18.

5.3.5.6.6 *Gain Stage.* The gain circuitry (Q36, Q30, Q29, Q35, Q17 and Q9) amplifies the output from the Integrator (particularly in the area near zero) to provide a clearly defined axis crossing signal for the null detecting circuitry. The gain stage also exhibits low pass filter characteristics which adds to the total delay of the integration sequence. The added delay reduces the noise response of the system and reduces the wide band response requirements of the Null Detector. The gain circuitry comprises an inverting potentiometric amplifier with programmed gain control. The amplifier provides a gain of 300 for stage inputs up to 13 mV and a gain of 14 for signals above 13 mV.

5.3.5.6.7 *Null Detector.* The Null Detector (Q14 and Q15) is an inverting, closed-loop amplifier with an output swing of five volts. The analog signal from the Integrator is converted to a TTL compatible digital signal, and the logic level of this signal sets the state of the polarity switch drive flip-flop. Output driver Q12 and Q13 and transformer T3 couple the Null Detector output pulse to the Digital Control section of the DMM.

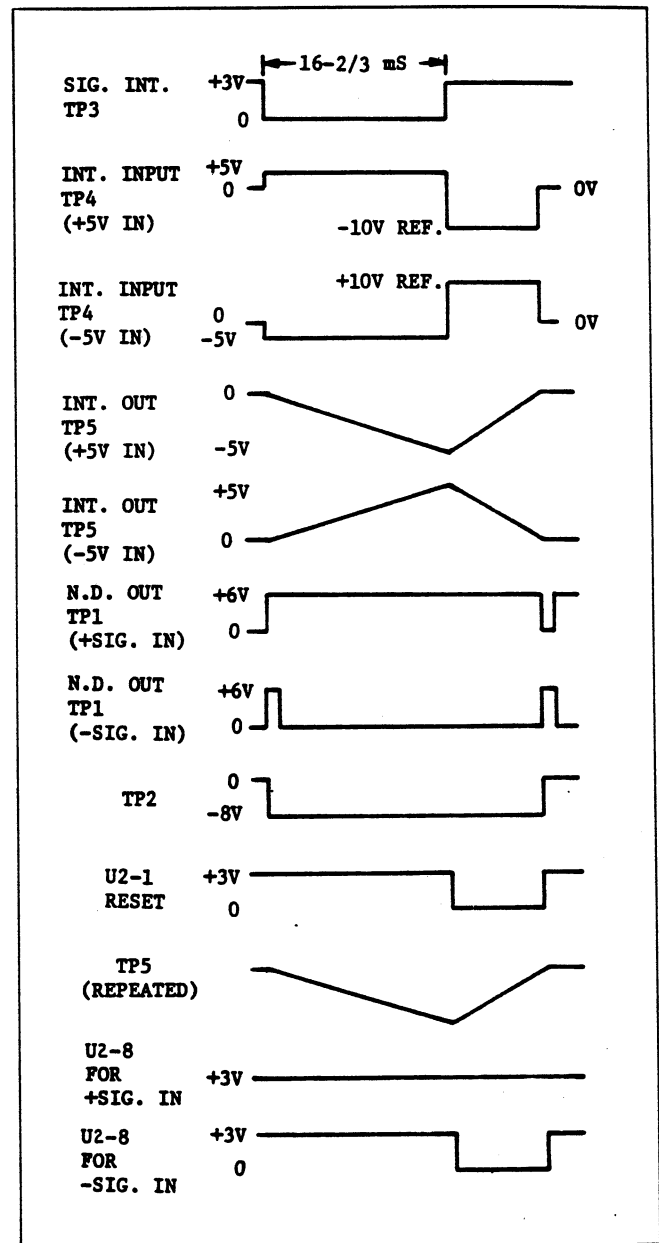


Figure 5.18 - Integration Timing Diagram, 5 1/2 Digit Mode

5.3.5.7 PREAMPLIFIER BOARD (OPTION 41).

5.3.5.7.1 The Preamplifier (Figure 5.19) provides a signal gain of 725 in the 10 mV and 1Ω ranges. The circuitry consists of a modulator, demodulator, oscillator, integrating amplifier and AC amplifier.

5.3.5.7.2 The input signal is routed through the input filter and input clamp to the modulator (Q8 and Q9). The modulator (chopped by the 400 Hz signal from the oscillator of Q8 and Q9) compares the input signal with the Preamplifier feedback signal. The feedback signal is routed from the output of AR1, through K1-A, the gain resistor string (on

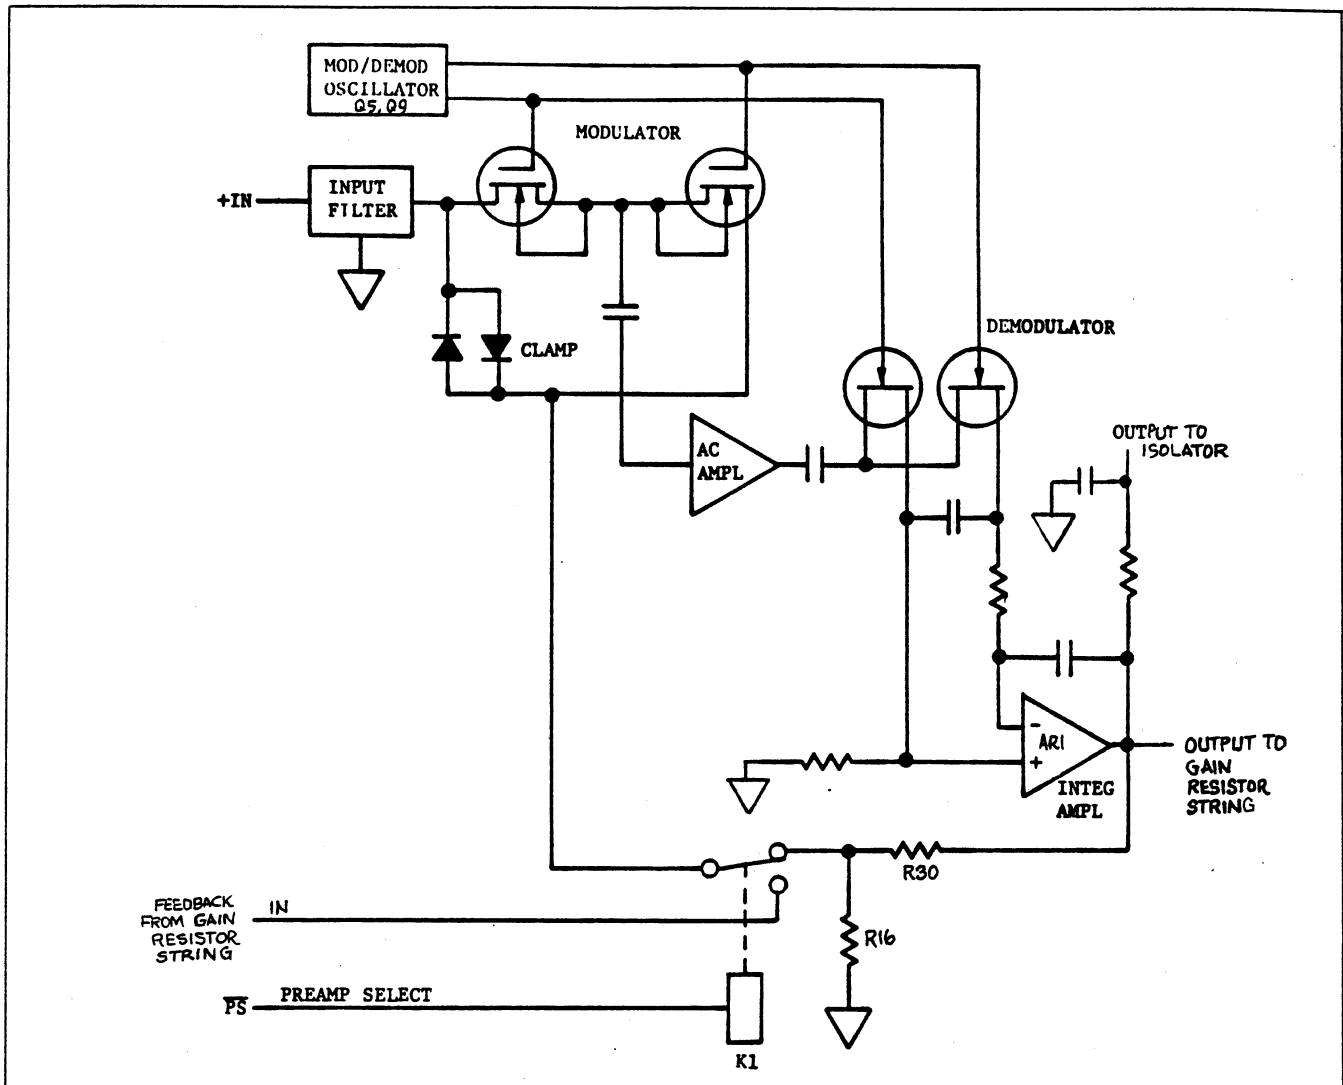


Figure 5.19 - Preamplifier

the Attenuator/Reference Board) and K1-D to the modulator.

5.3.5.7.3 The modulator produces a square wave difference signal which is amplified by the AC amplifier (Q6 and Q7) and rectified by the demodulator (Q1). The DC output level of the demodulator is amplified by the integrating amplifier (AR1) and routed to the output. R16 and R30 close the feedback loop when K1-A and K1-D are deenergized (Preamplifier not selected).

5.3.5.8 TRUE RMS CONVERTER BOARD (OPTION 10).

5.3.5.8.1 The True RMS Converter (Figure 5.20) is comprised of a range switching network, scaling amplifier, active rectifier, RMS converter and attenuator/filter network.

5.3.5.8.2 *Range Switching.* The input signal is routed through C13 (AC coupled AC) or through K2 (DC coupled AC) to the range switching network. The range switching circuitry provides signal attenuation in the 10 volt, 100 volt and 1000 volt ranges. The table in Figure 5.20 details the relay closures for each range.

5.3.5.8.3 *Scaling Amplifier.* The scaling amplifier (Q5 and AR2) is an inverting operational amplifier which takes the input signal and provides a full scale output of 1.4 volts AC peak in all ranges. The feedback path for the amplifier is through the frequency compensated range switching circuitry. Q11-Q14 are clamps to protect Q5 from input overload voltages.

5.3.5.8.4 *Active Rectifier.* The active rectifier circuitry (Q4, Q6 through Q10, CR2 and CR3) is configured as an

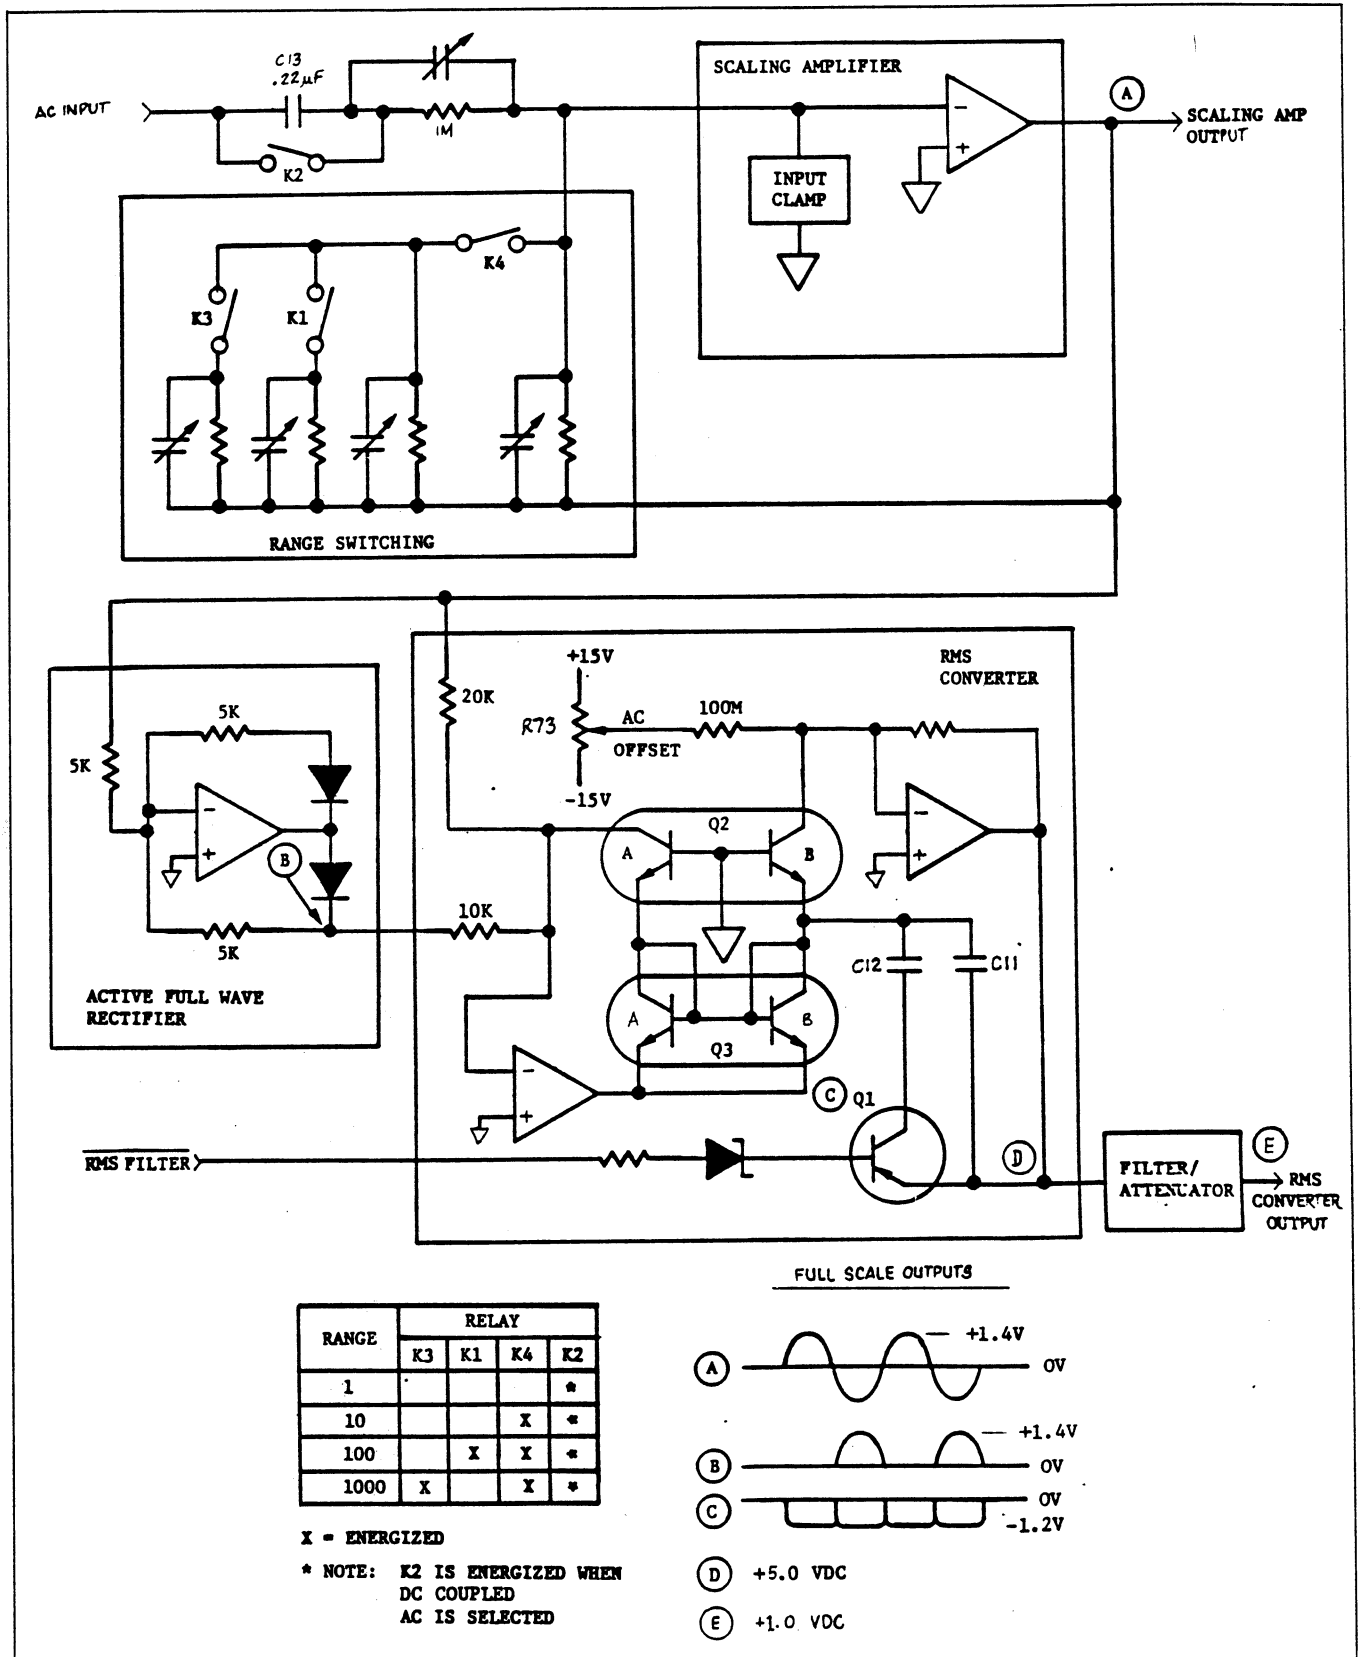


Figure 5.20 - True RMS Converter

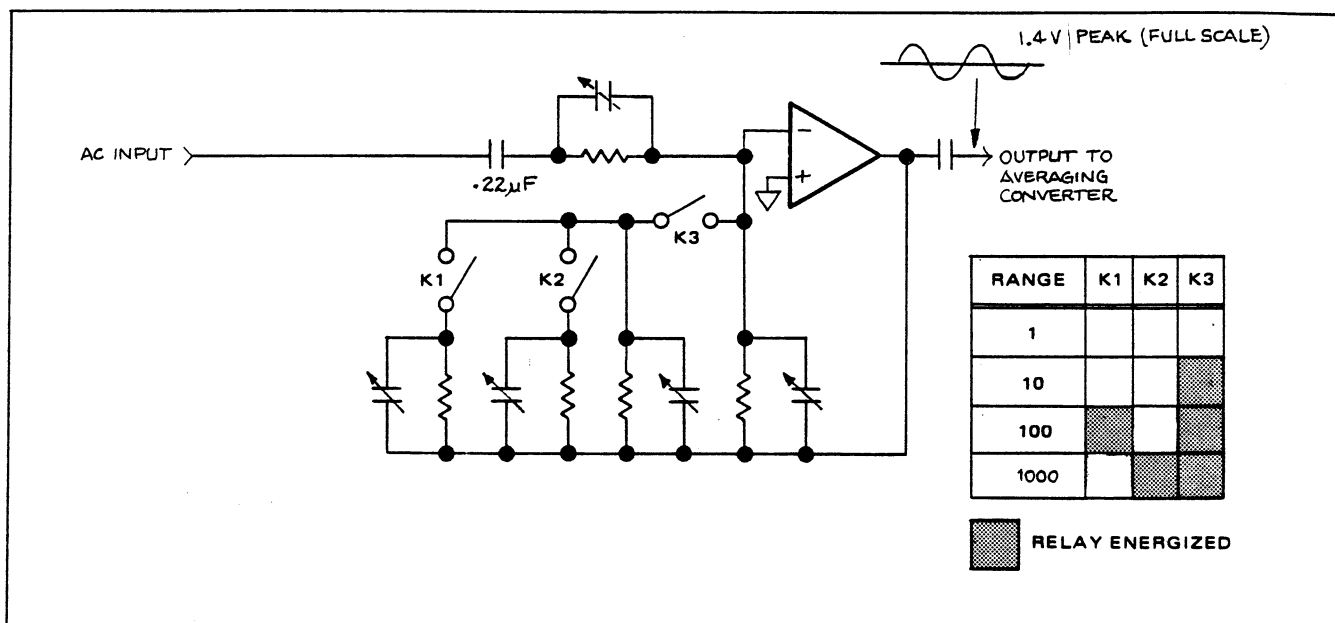


Figure 5.21 - Scaling Amplifier

operational amplifier with two polarity selective feedback paths. One feedback path (through CR3) conducts only with a negative amplifier output. The voltage developed across the positive conducting leg is applied to the input of the RMS converter circuitry.

5.3.5.8.5 *RMS Converter.* The input stage of the RMS converter circuitry (Q2, Q3 and Q15 through Q17) is configured as an operational amplifier with a logarithmic feedback loop. The output of the active rectifier and the output of the scaling amplifier are summed at the input of the log amplifier. The output of the log amplifier is the log of the total input and is routed through Q3B and Q2B to the input of AR1.

5.3.5.8.6 AR1 acts as a summing amplifier and converts the signal to a DC level. The ripple content of the output is filtered and attenuated to provide a scaled DC equivalent of the true RMS value of the original input signal. Q1 connects C12 in parallel with C11 to provide additional filtering when the FILTER key is toggled on.

5.3.5.9 AVERAGING AC CONVERTER BOARDS (OPTION 14).

5.3.5.9.1 The Averaging AC Converter is comprised of two circuit boards: a Scaling Amplifier Board and an Averaging Converter Board.

5.3.5.9.2 *Scaling Amplifier.* The Scaling Amplifier (Figure 5.21) is configured as an AC coupled inverting operational amplifier. The input signal is routed through C17 to the range switching network. The range switching circuitry provides signal attenuation in the 10 volt, 100 volt and 1000 volt ranges. The table in Figure 5.21 details the relay closures for each range.

5.3.5.9.3 The scaling circuitry (Q1 through Q10) takes the input signal and provides a full scale output of 1.4 volts AC peak in all ranges. The feedback path for the amplifier is through the frequency compensated range switching circuitry.

5.3.5.9.4 *Averaging Converter.* The Averaging Converter (Figure 5.22) receives the scaled AC signal from the Scaling Amplifier and applies it to the active rectifier stage. The active rectifier circuitry (Q1 through Q6, Q9 through Q11, AR3, CR2 and CR3) is configured as an operational amplifier with two polarity selective feedback paths. One feedback path (through CR3) conducts only with a negative amplifier output and the other path (through CR2) conducts only with a positive amplifier output. The voltage developed across the negative conducting leg is applied to the input of the summing amplifier circuitry.

5.3.5.9.5 The output of the active rectifier is summed with the output of the Scaling Amplifier at the inverting

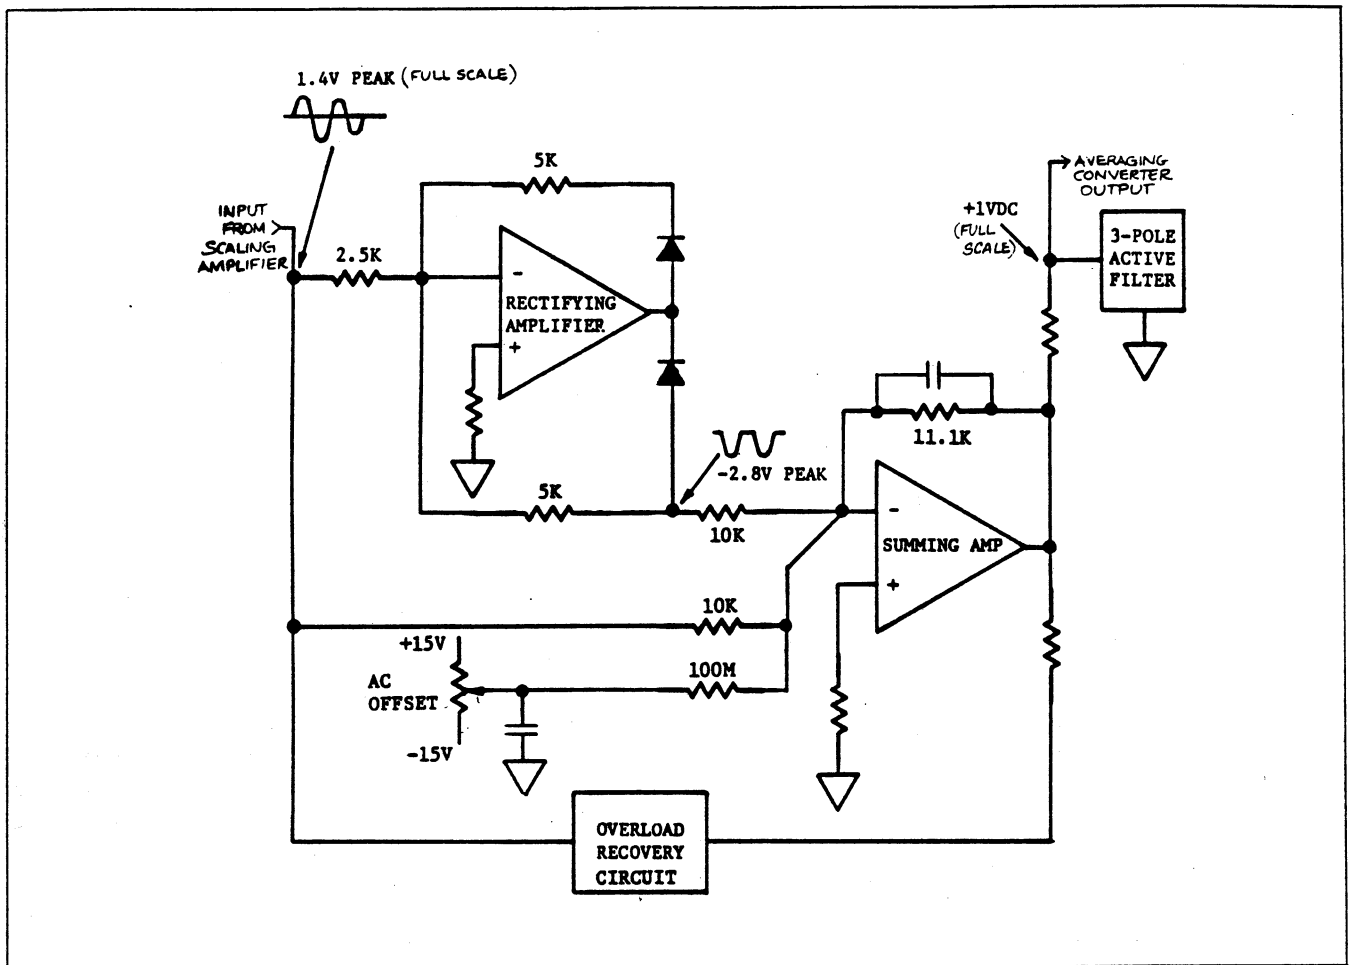


Figure 5.22 - Averaging Converter

input of the summing amplifier (Q8 and AR2). The output of the summing amplifier is 1.11 times the average of the summed inputs. Ripple attenuation is provided by the summing amplifier and the 3-pole active filter (AR1). The AC Averaging Converter output is a scaled DC equivalent of the average value of the original input signal. Fast recovery from overload conditions is provided by Q13 and Q14.

5.3.5.10 OHMS CONVERTER BOARDS (OPTION 24).

5.3.5.10.1 The Ohms Converter (Figure 5.23) is comprised of two circuit boards: Ohms Reference and Ohms Card.

5.3.5.10.2 *Ohms Reference.* The Ohms Reference is comprised of operational amplifier AR1 and a set of precision resistors. The Ohms Reference supplies precision current outputs to the Ohms Card. When K1 is energized, the 1 ma

current source becomes a 10 ma current source. The table in Figure 5.23 details the relay closures for each range.

5.3.5.10.3 *Ohms Card.* The Ohms Card routes the appropriate current to the resistance under test and amplifies the returned signal. The current generator (Q1 through Q7 and AR1) supplies the 1 ma or 10 ma output current through K1 on the Ohms Card. The 89.1 μ a, 9.9 μ a, 900 na and 100 na currents from the Ohms Reference are routed through K2 and K3 and added together to produce 100 na, 1 μ a, 10 μ a and 100 μ a currents. The table in Figure 5.23 details the relay closures for each range. The circuitry formed by Q8 through Q11 and Q15 through Q17 provides overvoltage protection for the current generator.

5.3.5.10.4 The signal returned by the resistance under test is routed to an amplifier circuit consisting of input buffer Q14, gain amplifier AR2 and power amplifier Q20.

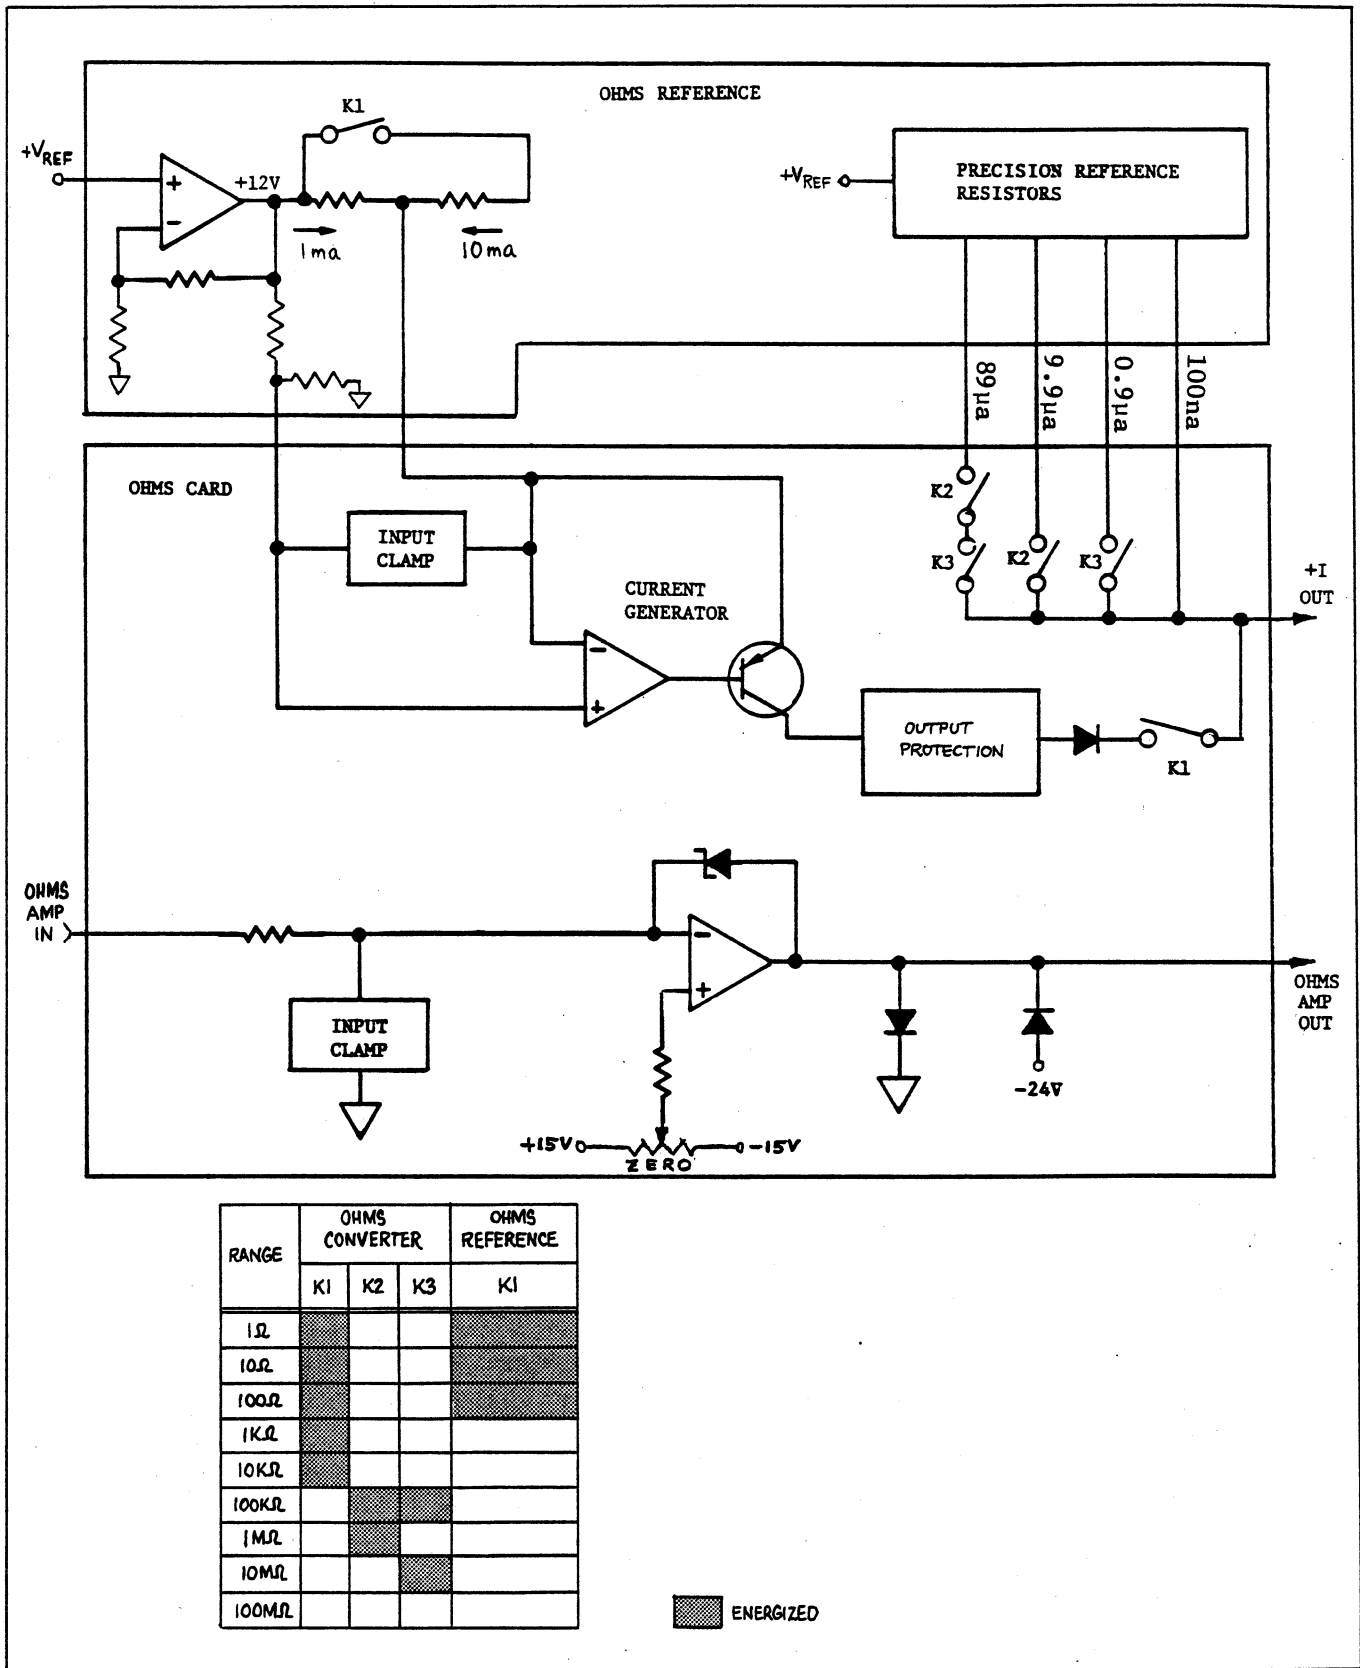


Figure 5.23 - Ohms Converter

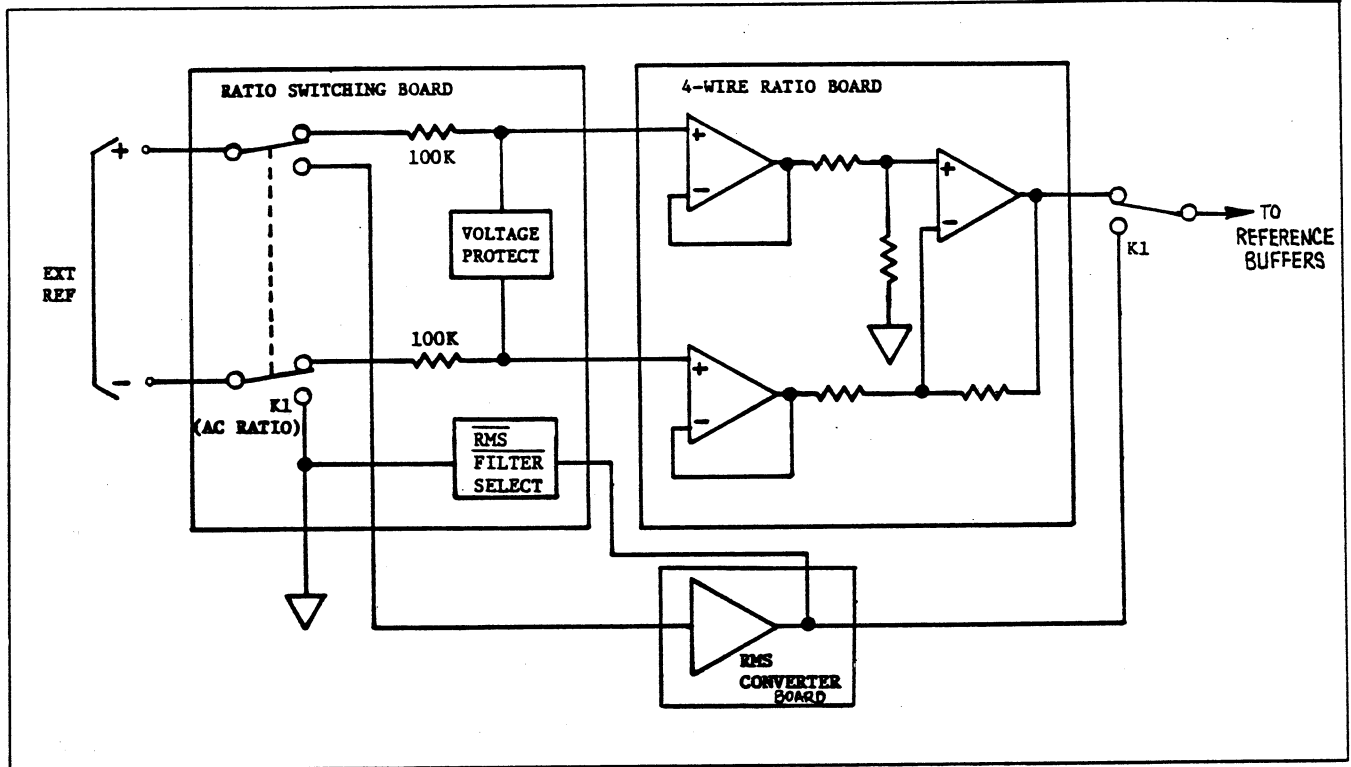


Figure 5.24 - AC/DC Hardware Ratio

5.3.5.11 HARDWARE RATIO BOARDS.

5.3.5.11.1 The Hardware Ratio circuitry (Figure 5.24) consists of the Ratio Switching Board, 4-Wire Ratio Board (Option 34) and RMS Converter Board (Option 11).

5.3.5.11.2 *4-Wire Ratio.* DC external voltages between +1.0 volt and +10.5 volts may be used as the reference for 4-Wire Ratio measurements when DC EXT REF is selected. The differential inputs of the reference are applied to the non-inverting inputs of separate operational amplifiers (AR1 and AR2). The outputs of AR1 and AR2 are applied to the differential inputs of operational amplifier AR3. The 4-Wire Ratio circuitry produces a single-ended output from differential inputs, thus allowing the input reference voltage to float with respect to input signal common.

5.3.5.11.3 *RMS Converter.* External reference voltages from 0.1 to 1000 volts AC or DC can be used when AC EXT REF is selected. In this mode the reference voltage is routed to the RMS Converter. The RMS Converter is identical to the True RMS Converter Board described in paragraph 5.3.5.8.

5.4 DIGITAL CONTROL.

5.4.1 The following paragraphs present a detailed analysis of the Digital Control section. A block diagram may be found in Figure 5.25.

5.4.2 The Digital Control section of the Model 6000 contains the following boards:

- Computer (J3)
- Display/Keyboard
- Control Logic (J4)
- Calibration Memory
- Fast Waveform Digitizer (J5)

5.4.3 Circuit Descriptions.

5.4.3.1 The following paragraphs contain descriptions of the circuitry and block diagrams of the circuit boards in the Digital Control section. Detailed schematics may be found in Section 7.

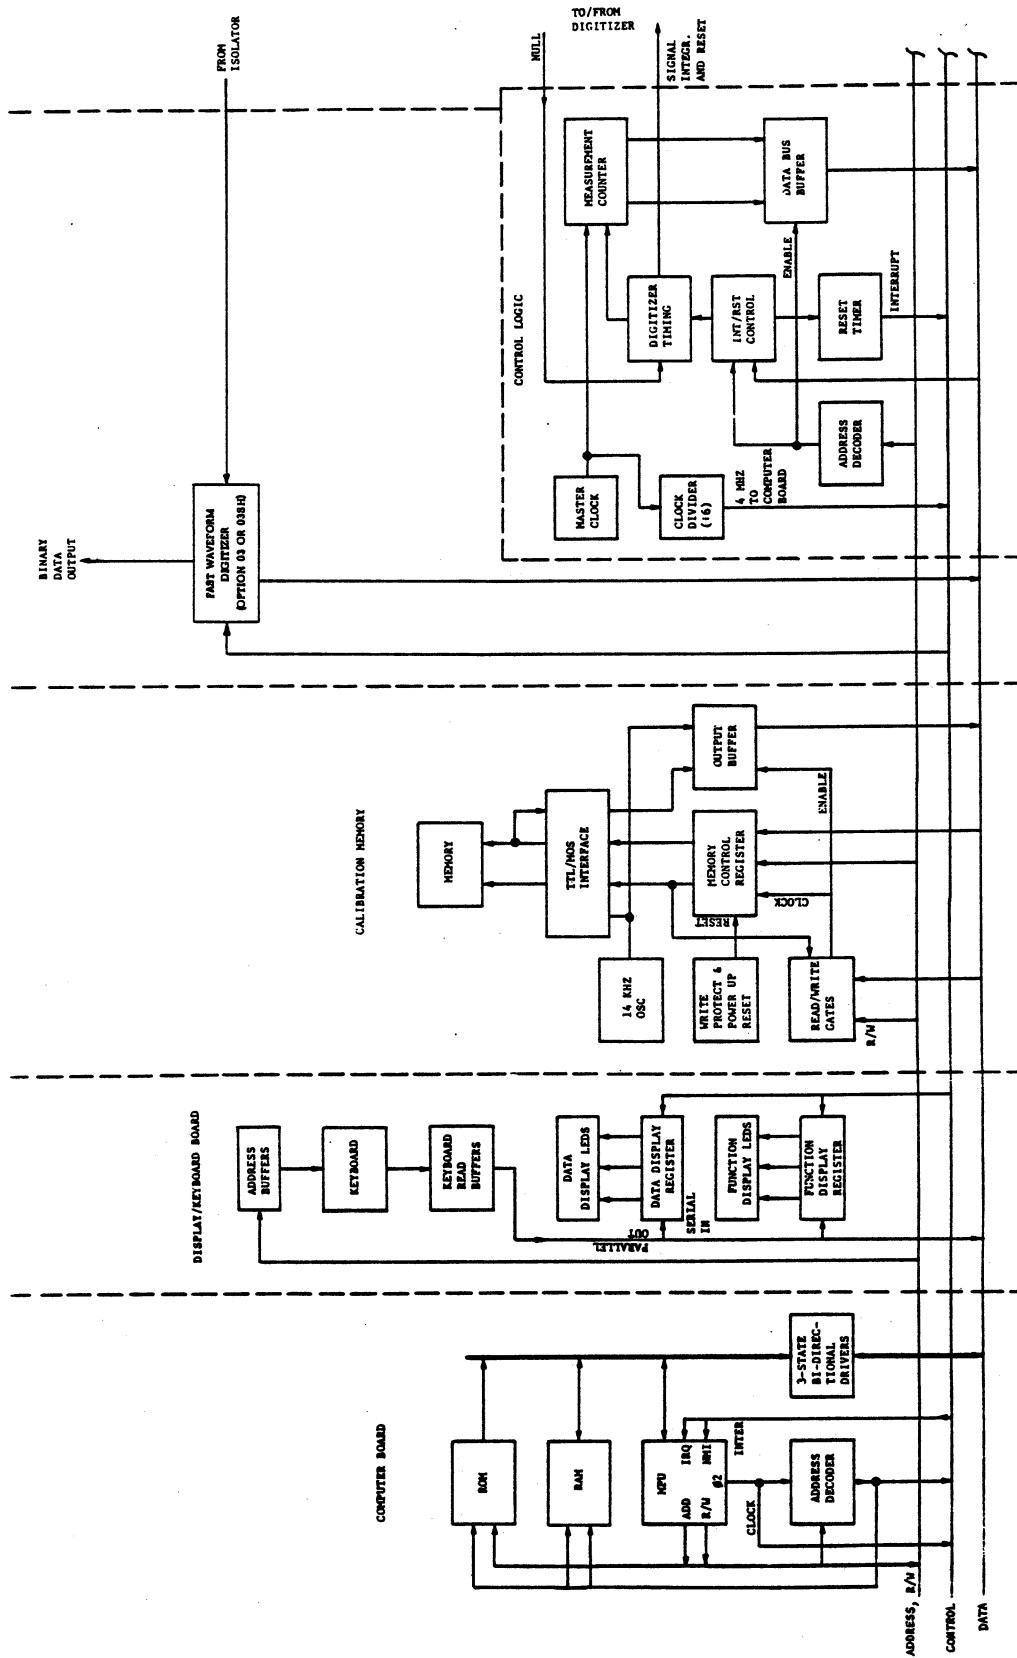


Figure 5.25 - Digital Section Block Diagram

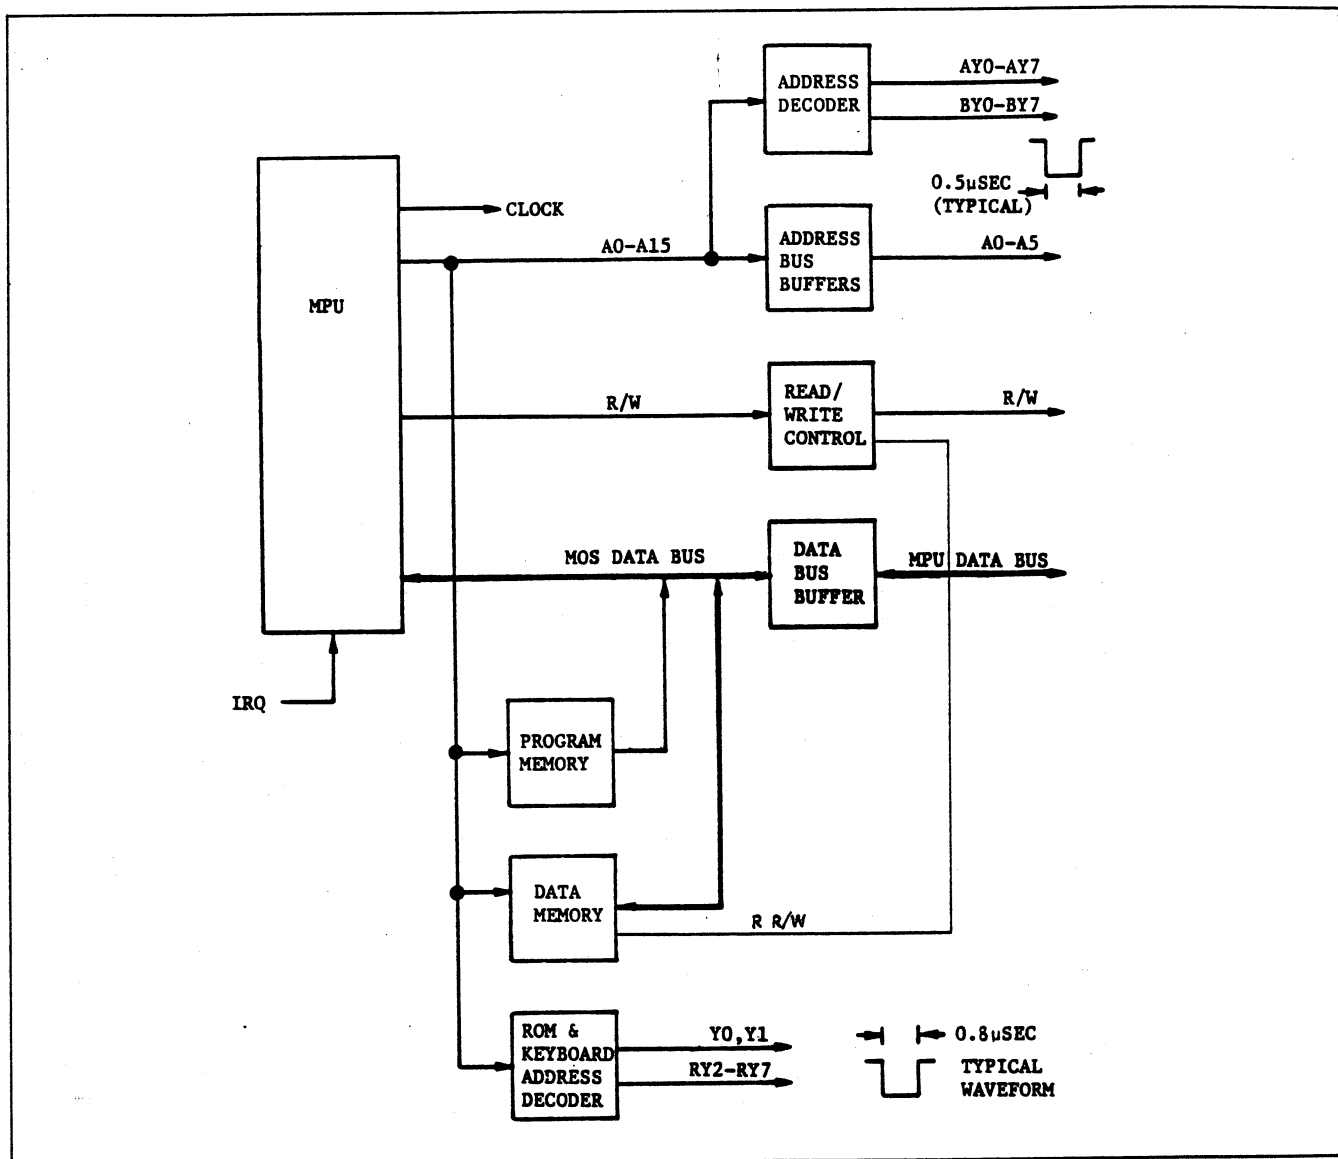


Figure 5.26 - Computer Board

5.4.3.2 COMPUTER BOARD.

5.4.3.2.1 The Computer Board (Figure 5.26) contains program storage and processing circuitry. The circuitry consists of a microprocessor, random access memory (RAM), read only memory (ROM), address decoders and read/write control logic.

5.4.3.2.2 *Microprocessor.* The microprocessor (U12) is an 8-bit unit with built in clock generator and 128x8 RAM. The microprocessor provides for processing of the digital data within the DMM. The data bus lines are routed through three-state buffers U5, U6 and U7. Address lines A0 thru A5 are routed through three-state buffer U8.

5.4.3.2.3 *Memory.* The memory circuitry consists of RAM and ROM. The RAM (U13 thru U16 and part of the microprocessor) provides a total of 640 bytes of temporary data storage area. The ROM (U17 thru U21 and U11) provides 10k bytes of primary program storage and 2k bytes of storage for the interface program.

5.4.3.2.4 *Address and Read/Write Logic.* The address decoding circuitry (U3, U9 and U10) decodes the address lines into separate enable lines for the circuits which are connected in common to the data bus. The read/write control logic (U1, U2, U4 and U6) provides the proper read and write timing during data processing.

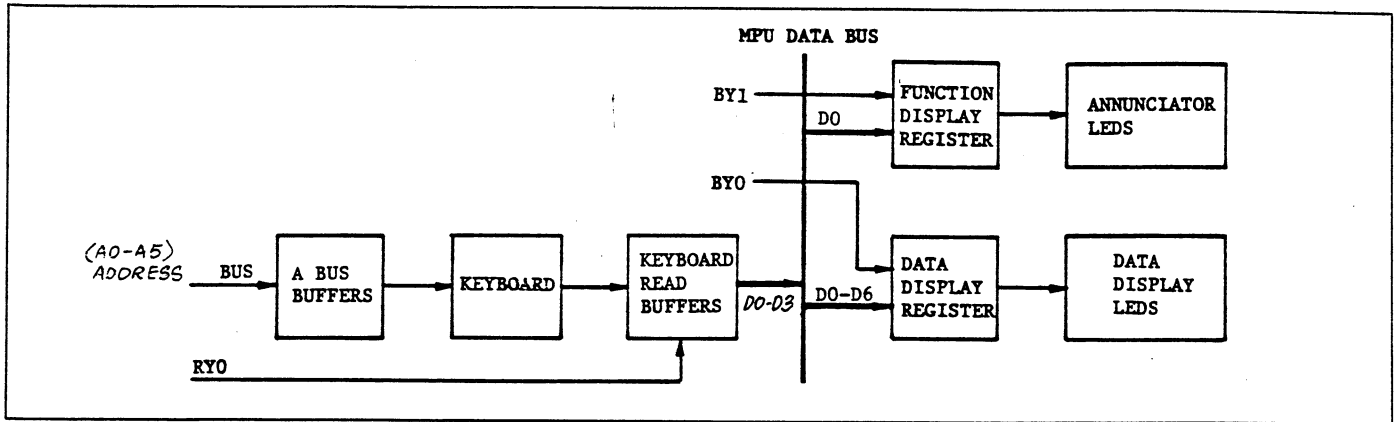


Figure 5.27 - Display/Keyboard

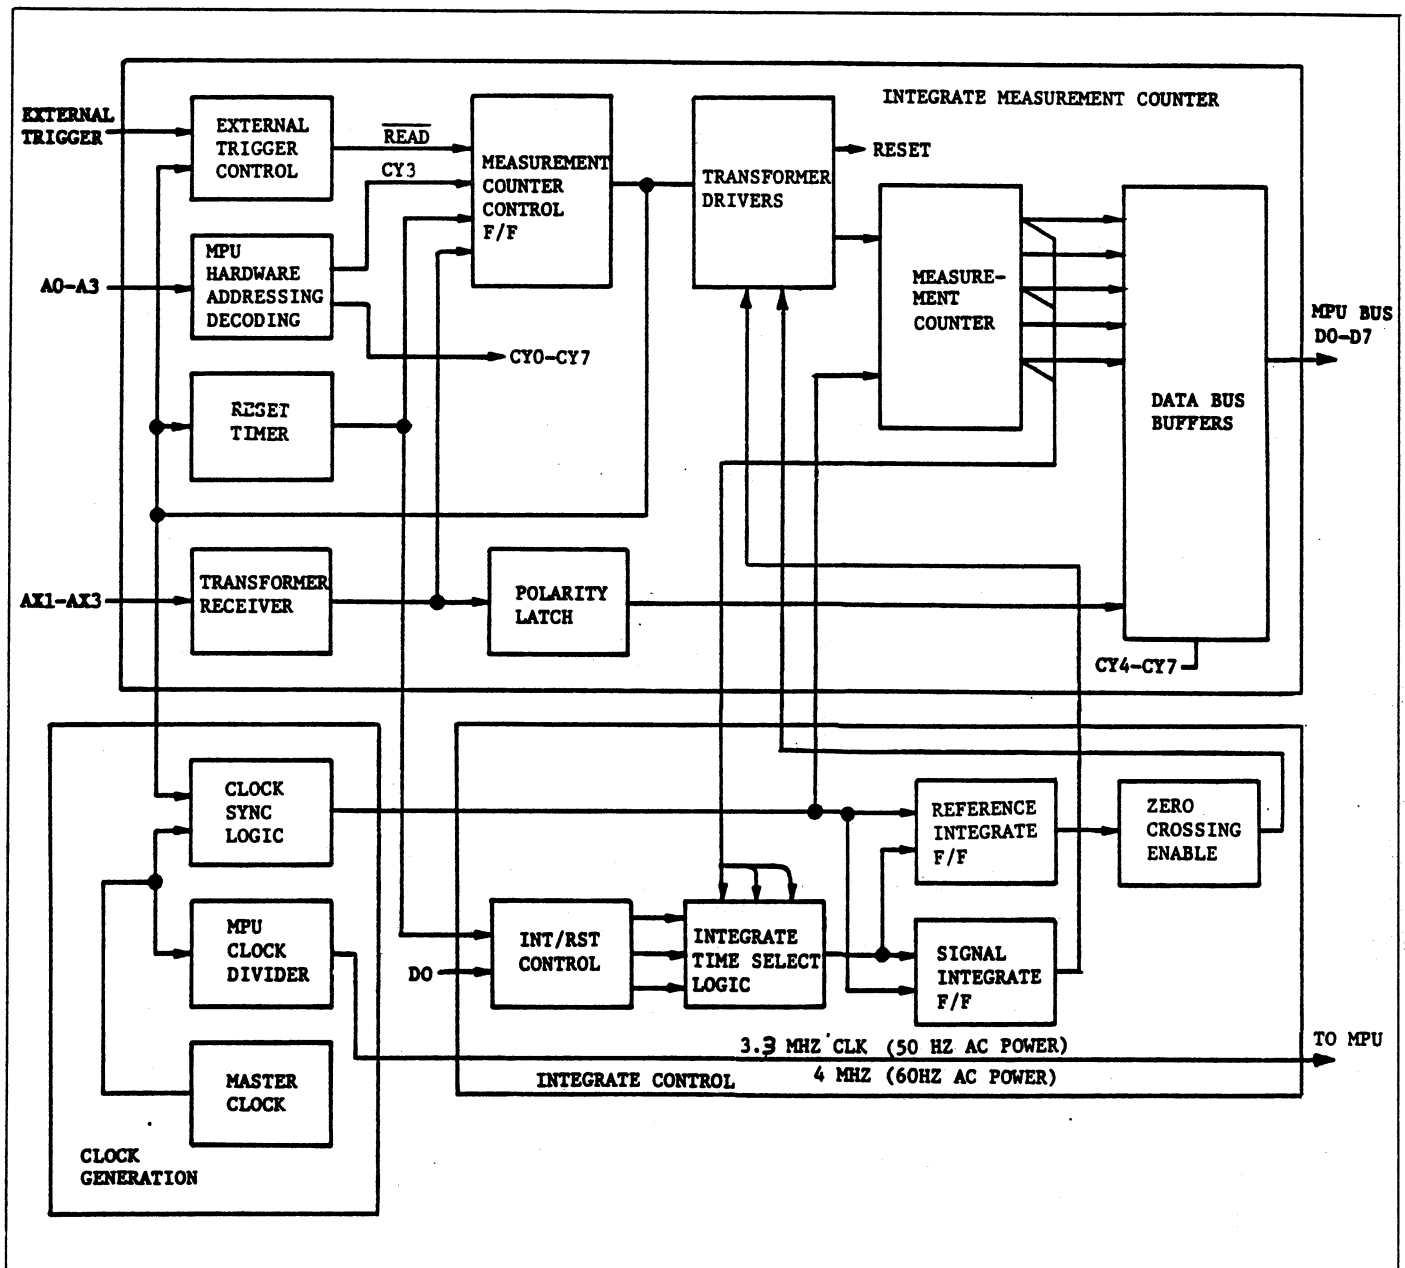


Figure 5.28 - Control Logic

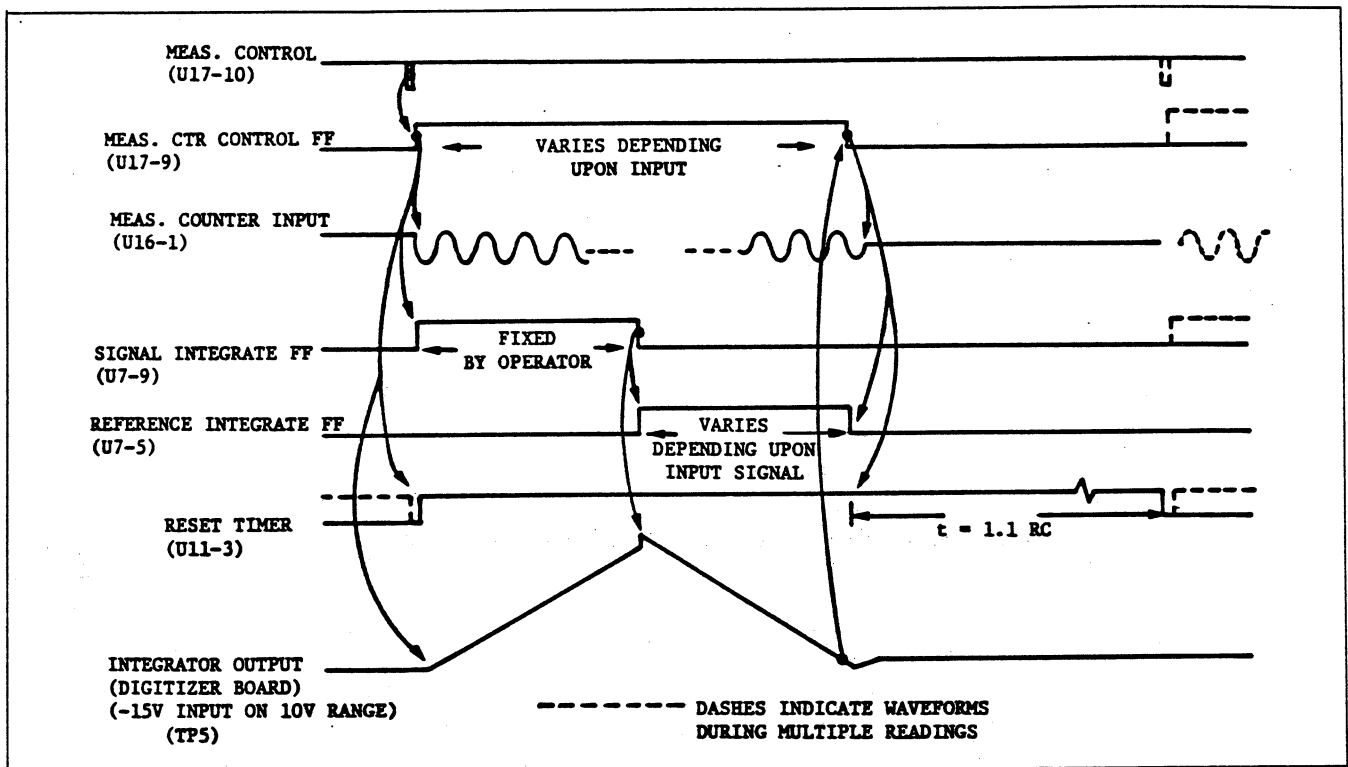


Figure 5.29 - Control Logic Digitizer Schematic Waveform (Single Reading)

5.4.3.3.1 DISPLAY/KEYBOARD.

5.4.3.3.1 The Display/Keyboard (Figure 5.27) provides for input of function and range information and for the display of data and operational statuses.

5.4.3.3.2 *Keyboard.* The Keyboard circuitry (U11 and U12) provides for the input of addresses from the Computer Board and the output of data from the Keyboard matrix. When the microprocessor addresses the Keyboard (RYO low), it also places ones on address lines A0 thru A5. If a key is pressed, the microprocessor will manipulate the pattern on address lines A0 thru A5 until the position of the pressed key is determined.

5.4.3.3.3 *Display.* The Display circuitry (U1 thru U10, LED 1 thru LED 9 and CR1 thru CR27) provides a display for data readout and annunciators for status indication. The function display registers (U8, U9 and U10) receive a 24-bit serial input which determines the status of the annunciators. The function data are received on data line D0 and are clocked into the registers by BY1 from the microprocessor address decoders.

5.4.3.3.4 The data display registers (U1 thru U7) receive a similar string of data from the microprocessor. The display data are received on data lines D0 thru D6 and are clocked into the registers by BY0 from the microprocessor address decoders. The outputs from the data display registers enable the segments of the display LEDs.

5.4.3.4 CONTROL LOGIC BOARD.

5.4.3.4.1 The Control Logic Board (Figure 5.28) provides the timing circuitry, integration control logic and measurement counters for the DMM.

5.4.3.4.2 *Timing Circuitry.* The timing circuitry contains a master clock (Q6, Q9 and Y1) that operates at 24 MHz in 60 Hz AC machines and at 20 MHz in 50 Hz AC machines. The output of the master clock circuit is routed to the clock sync flip-flop (U17) and to the clock divider circuit (U20 and U21). The clock divider circuit outputs a 4 MHz clock (60 Hz machines) or a 3.3 MHz clock (50 Hz machines) for use by the microprocessor.

5.4.3.4.3 *Integration Control Logic.* The integration measurement counters (U12 thru U16) are enabled when a microprocessor trigger (CY3 output of the address decoder) or an external trigger initiates a measurement cycle. The trigger causes the measurement counter control flip-flop (U17) to set. This, in turn, causes the clock sync logic flip-flop (U17) to set, thus allowing a synchronized clock signal to clock the measurement counter. The signal integrate flip-flop (U7) is also set, and the output is applied to the signal integrate transformer driver (Q1, Q2). Figure 5.29 shows the Control Logic and Digitizer waveform relationships.

5.4.3.4.4 The signal integrate flip-flop (U7) is reset when the measurement count reaches a level that corresponds to

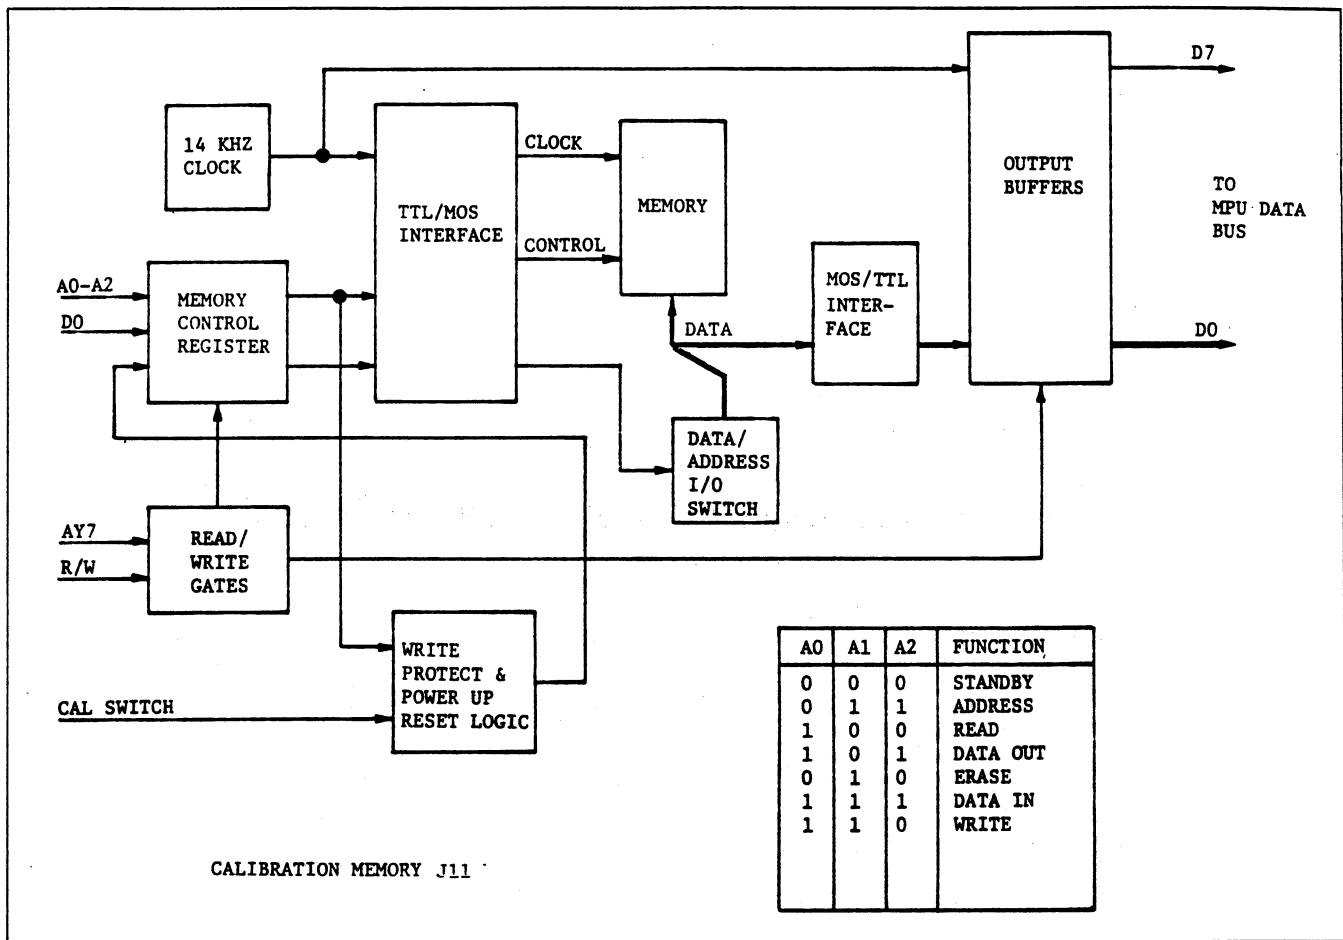


Figure 5.30 - Calibration Memory

the selected integration period. The three upper decades of the counter (U12 thru U14) are also reset, and the reference integrate flip-flop (U7) is set. The Q output of the reference integrate flip-flop enables one input of the NAND gate (U6) in the zero-crossing enable circuit (U6 and U19). When a zero-crossing signal is received on transformer lines AX1 and AX3, the measurement counter control flip-flop (U17) is reset, the clock sync logic flip-flop is disabled and the input to the measurement counter is stopped.

5.4.3.4.5 At the end of the measurement sequence, the information stored in the measurement counter and the polarity latch (U19) is requested by the microprocessor. The three-state data bus buffers (U1 thru U5) are sequentially enabled to place the data on the data bus.

5.4.3.5 CALIBRATION MEMORY BOARD.

5.4.3.5.1 The Calibration Memory (Figure 5.30) provides storage for the calibration offset factors. The circuitry consists of an electrically alterable read only memory, a clock generator and associated logic.

5.4.3.5.2 *Memory.* The memory (U4) transmits and receives data and address information on a single data line. Information on the data line is in serial form and is clocked in or out of the memory by the 14 KHz clock signal provided by U6. The three control lines for the memory are latched into U1. The table in Figure 5.30 lists the various combinations of control line addresses and the resultant functions.

5.4.3.5.3 The logic formed by U2 and U3 resets the memory control register to the "standby" address during power up. The "standby" address is also entered if the microprocessor sends a "write" address when the LAB CAL switch is off. Data/address switch Q6 is enabled whenever the microprocessor sends data or address information to the memory and transistors Q1-Q5, Q7 and Q8 act as TTL to MOS and MOS to TTL logic translators.

5.4.3.6 FAST WAVEFORM DIGITIZER BOARD (OPTION 03).

5.4.3.6.1 The Fast Waveform Digitizer (Figure 5.31) provides for high speed digitizing of analog signals. The circuitry

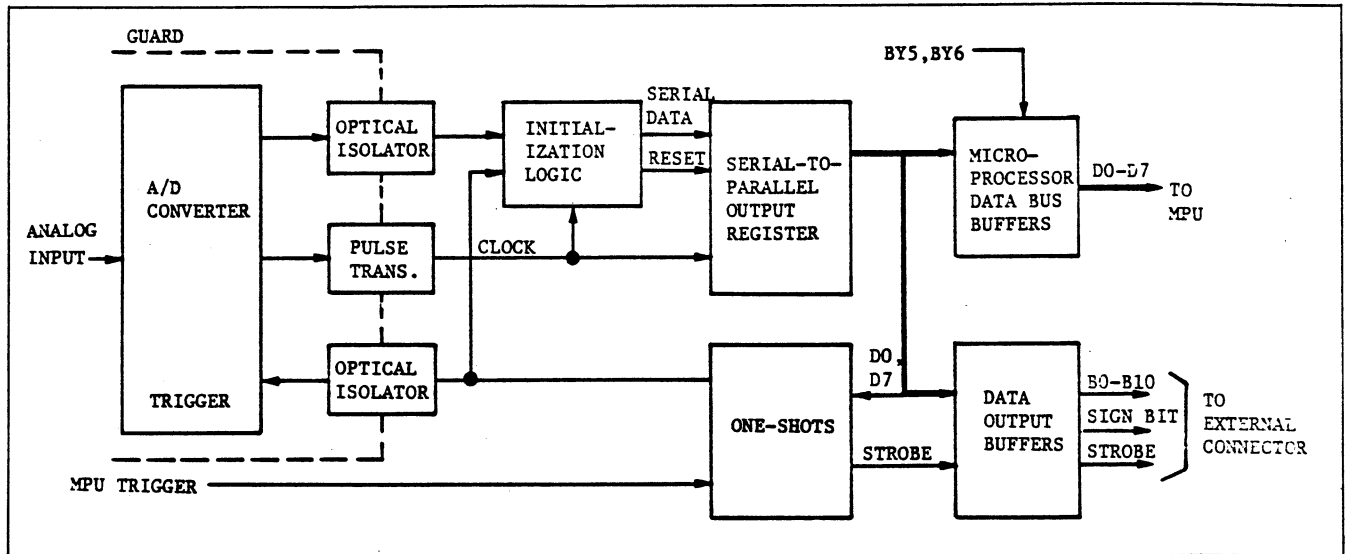


Figure 5.31 - Fast Waveform Digitizer

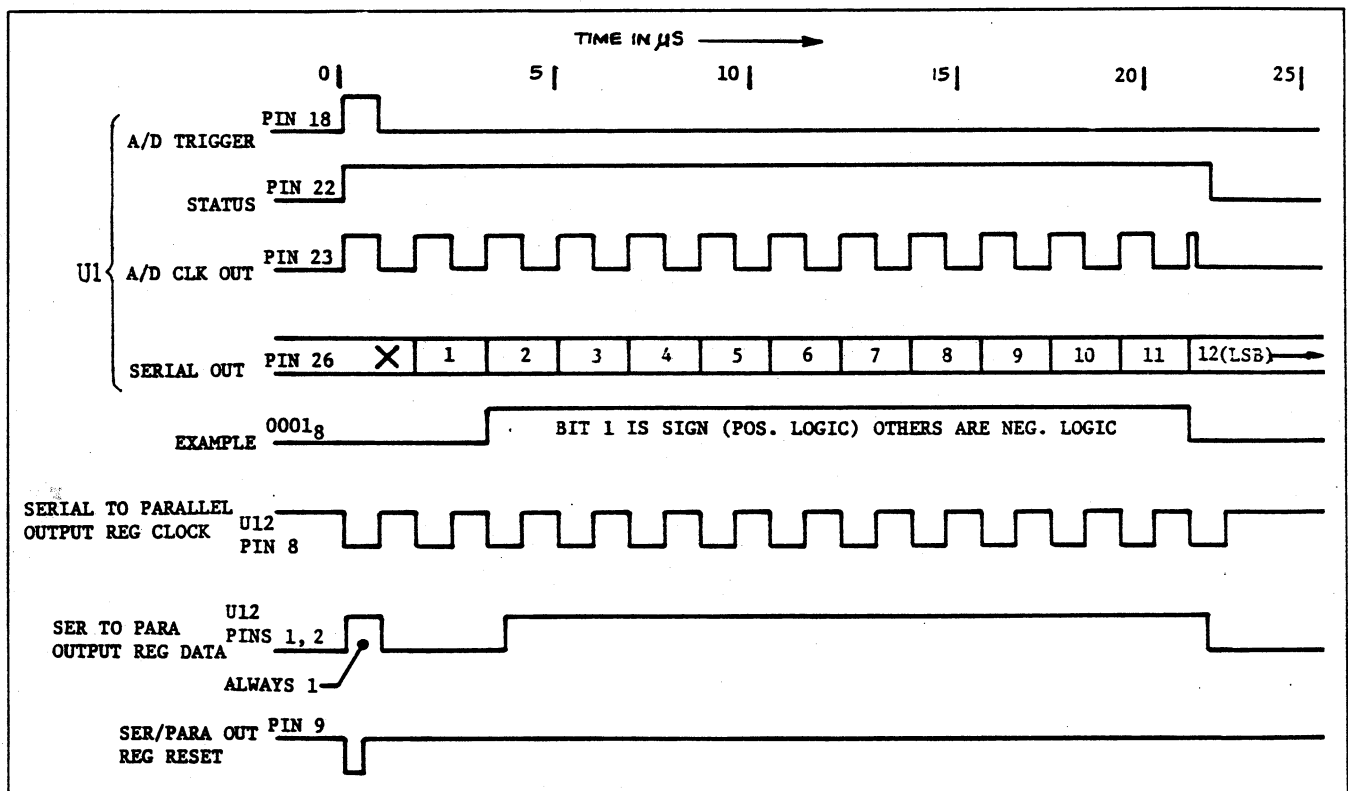


Figure 5.32 - Fast Waveform Digitizer Timing

consists of a 12-bit analog to digital (A/D) converter, initialization logic, serial to parallel output register and data buffers.

5.4.3.6.2 *A/D Converter.* The A/D converter (U1) is connected so that the output ranges between +2047 and -2047 counts. The analog input is scaled as follows for the different ranges: .1 mV/count (100 mV range), 1 mV/count (1 volt range), 10 mV/count (10 volt range), 100 mV/count (100 volt range) and 1V/count (1000 volt range). The digital output is derived from the serial binary output of U1.

5.4.3.6.3 A negative going trigger from either the micro-processor or from an external source starts the conversion sequence by causing pin 8 of U8 to go high. U8, in turn, triggers one shot U7. The Q output of U7 is coupled through U3 and causes one shot U2 to trigger. The Q output of U2 triggers the A/D converter.

5.4.3.6.4 The clock output of the A/D converter is squared (by the second one shot in U2), routed across guard through pulse transformer T1 and applied to the initialization logic at one input of NAND gate U8. The other

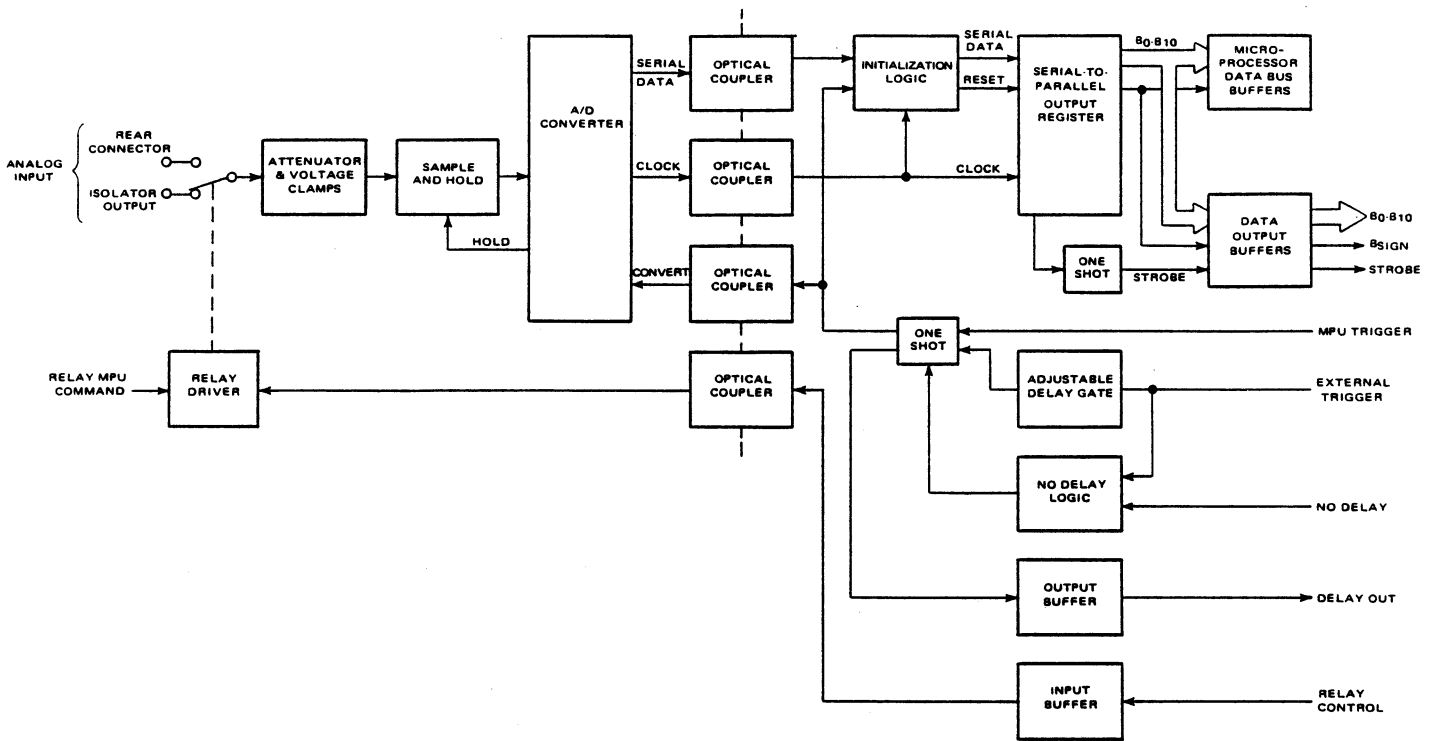


Figure 5.33 - Sample and Hold Fast Waveform Digitizer

input to U8 is the squared equivalent of the trigger pulse (taken from the Q output of U7). The low going output of U8 resets serial to parallel output registers U12 and U14. After the register is reset, a true signal bit is clocked into the serial input of U14, followed by 12 data bits from the A/D converter. When the signal bit reaches position 13 of the registers (U12 pin 10), one shot U7 is triggered and the 12 data bits are strobed through the output buffers. The data bits are also presented to the microprocessor data bus (in two bytes) when BY5 and BY6 are enabled. Digitizer timing is shown in Figure 5.32.

5.4.3.7 FAST WAVEFORM DIGITIZER SAMPLE AND HOLD BOARD (OPTION 03 SH).

5.4.3.7.1 The Sample and Hold (S/H) Digitizer (Figure 5.33) provides for high speed digitizing of analog signals. The S/H circuitry increases the data bandwidth of the Digitizer, and allows for the digitizing of selected portions of input waveforms. The circuitry consists of a Fast A/D Input Select relay, input attenuator, sample and hold section, 12-bit analog to digital (A/D) converter, initialization logic, serial to parallel output register, data buffers, trigger delay gates and relay control circuitry.

5.4.3.7.2 The Fast A/D Input Select relay is a DPDT switch that can be set to select either the voltage from the Isolator output or the voltage applied between pins 24 and 25 of the Fast A/D connector (on the rear panel). The relay

can be controlled by a GPIB command or by applying a TTL signal to pin 19 of the Fast A/D connector (TTL low will energize).

5.4.3.7.3 *S/H Circuitry.* The S/H circuitry consists of an input buffer, a JFET switch, a holding capacitor and an output buffer. The selected input signal is routed through the input buffer (AR1) and the JFET switch (Q7) to the holding capacitor (C22). The holding capacitor will track the input voltage until a Convert command is received from the microprocessor or from pin 14 or 15 of the Fast A/D connector. The Convert command is coupled through optoisolator OCI-2 to pin 18 of A/D converter U1. U1 then sends out a Hold command on pin 22 which opens the JFET switch. With the JFET switch open, the voltage to the A/D converter (from output buffer AR2) will remain at the level stored in C22 until the conversion process is completed.

5.4.3.7.4 *Trigger Delay.* The trigger delay circuitry consists of a delay time one shot and the delay logic. The delay time one shot (1/2 U9) has a delay time output of $2\mu\text{s}$ to $20\mu\text{s}$ (adjusted by R33). If the NO DLY line on the Fast A/D connector is low, then the trigger applied at E6 (TC) or E16 (TD) will bypass the delay time one shot and trigger the $1\mu\text{s}$ one shot (1/2 U6) directly. If the No Delay line is at TTL high, then the delay time one shot will trigger for the set delay time before triggering U6. A microprocessor Convert command is not affected by the delay time one shot since it triggers U6 directly.

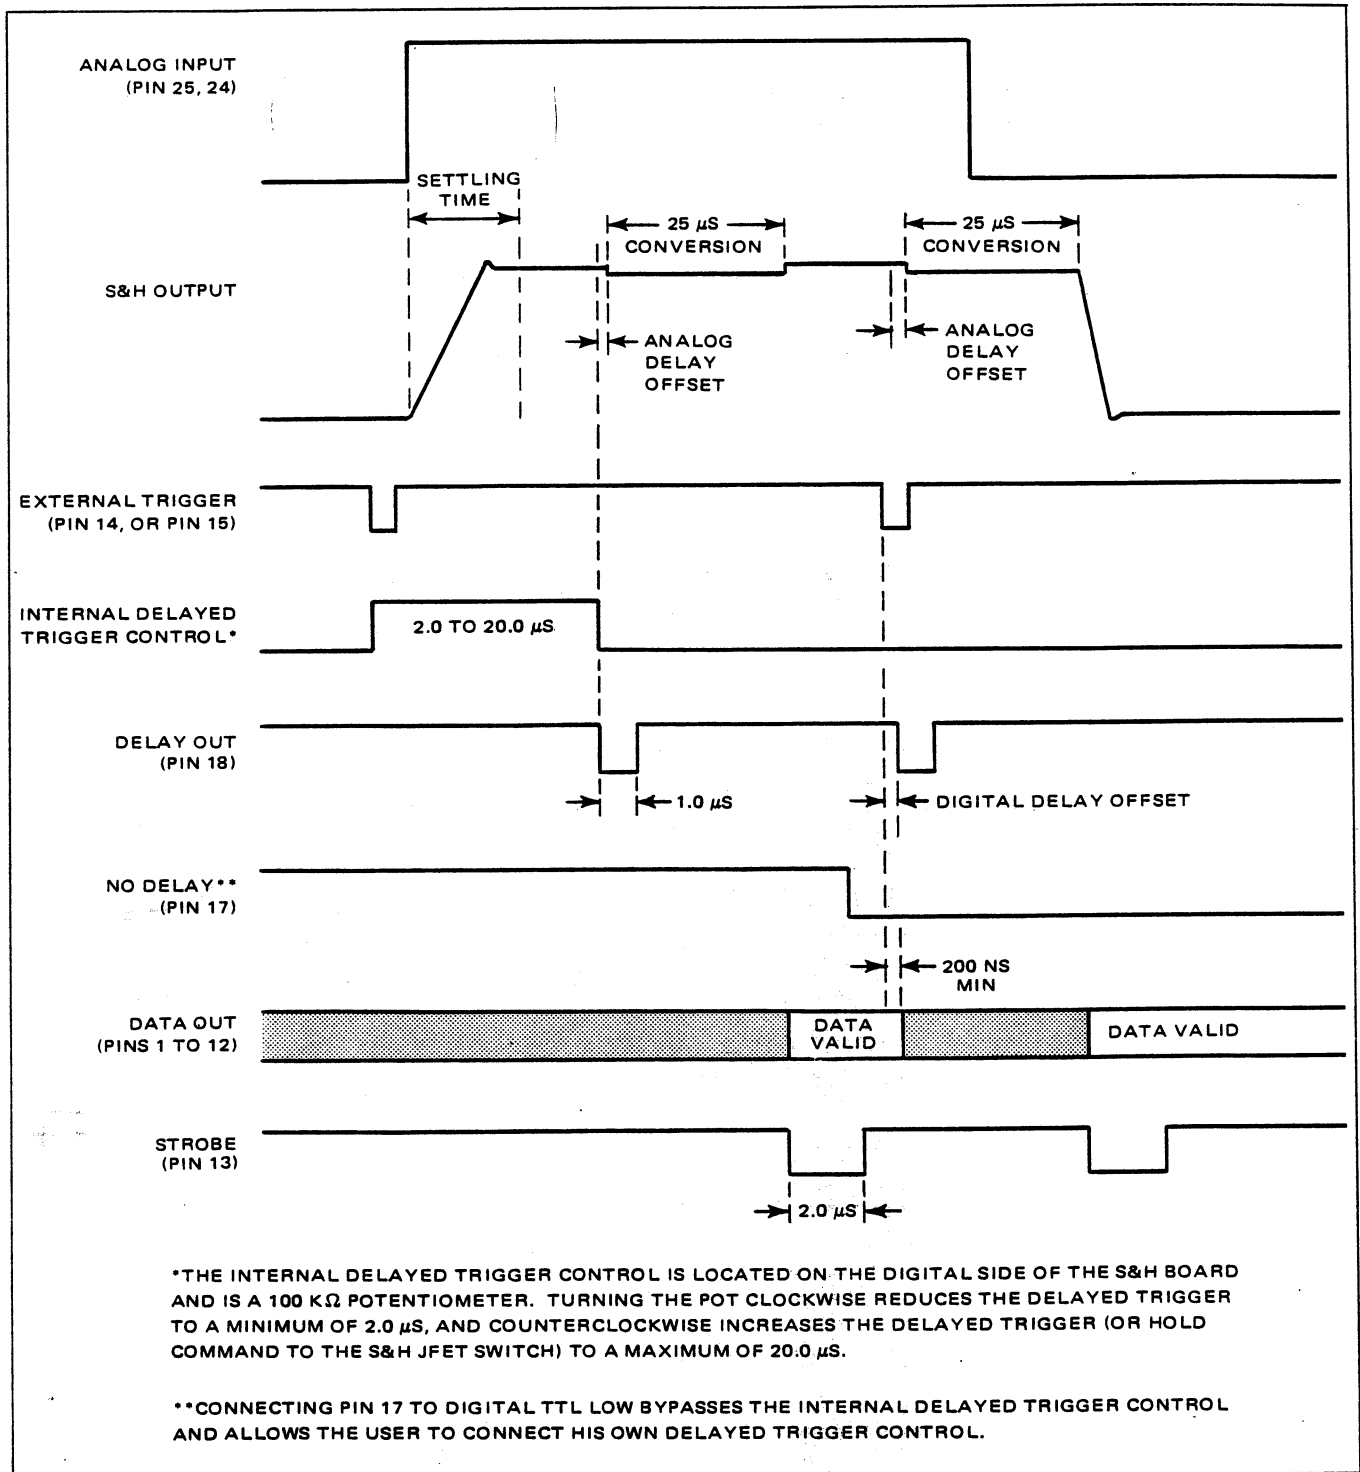


Figure 5.34 - Sample and Hold Digitizer Timing

5.4.3.7.5 *A/D Converter.* The A/D converter (U1) is connected so that the output ranges between +2047 and -2047 counts. The analog input is scaled as follows for the different ranges: .1 mV/count (100 mV range), 1 mV/count (1 volt range), 10 mV/count (10 volt range and voltages applied to the rear input), 100 mV/count (100 volt range) and 1V/count (1000 volt range). The digital output is derived from the serial binary output of U1.

5.4.3.7.6 During the conversion process, the clock output of the A/D converter is routed across guard through optoisolator OCI-3, squared by one shot U9 and then applied to the initialization logic at one input of NAND gate U7. The other input to U7 is the squared equivalent of the trigger pulse (taken from the Q output of U6). The low going output of U7 resets serial to parallel registers U11 and U13. After the register is reset, a true signal bit is clocked into the

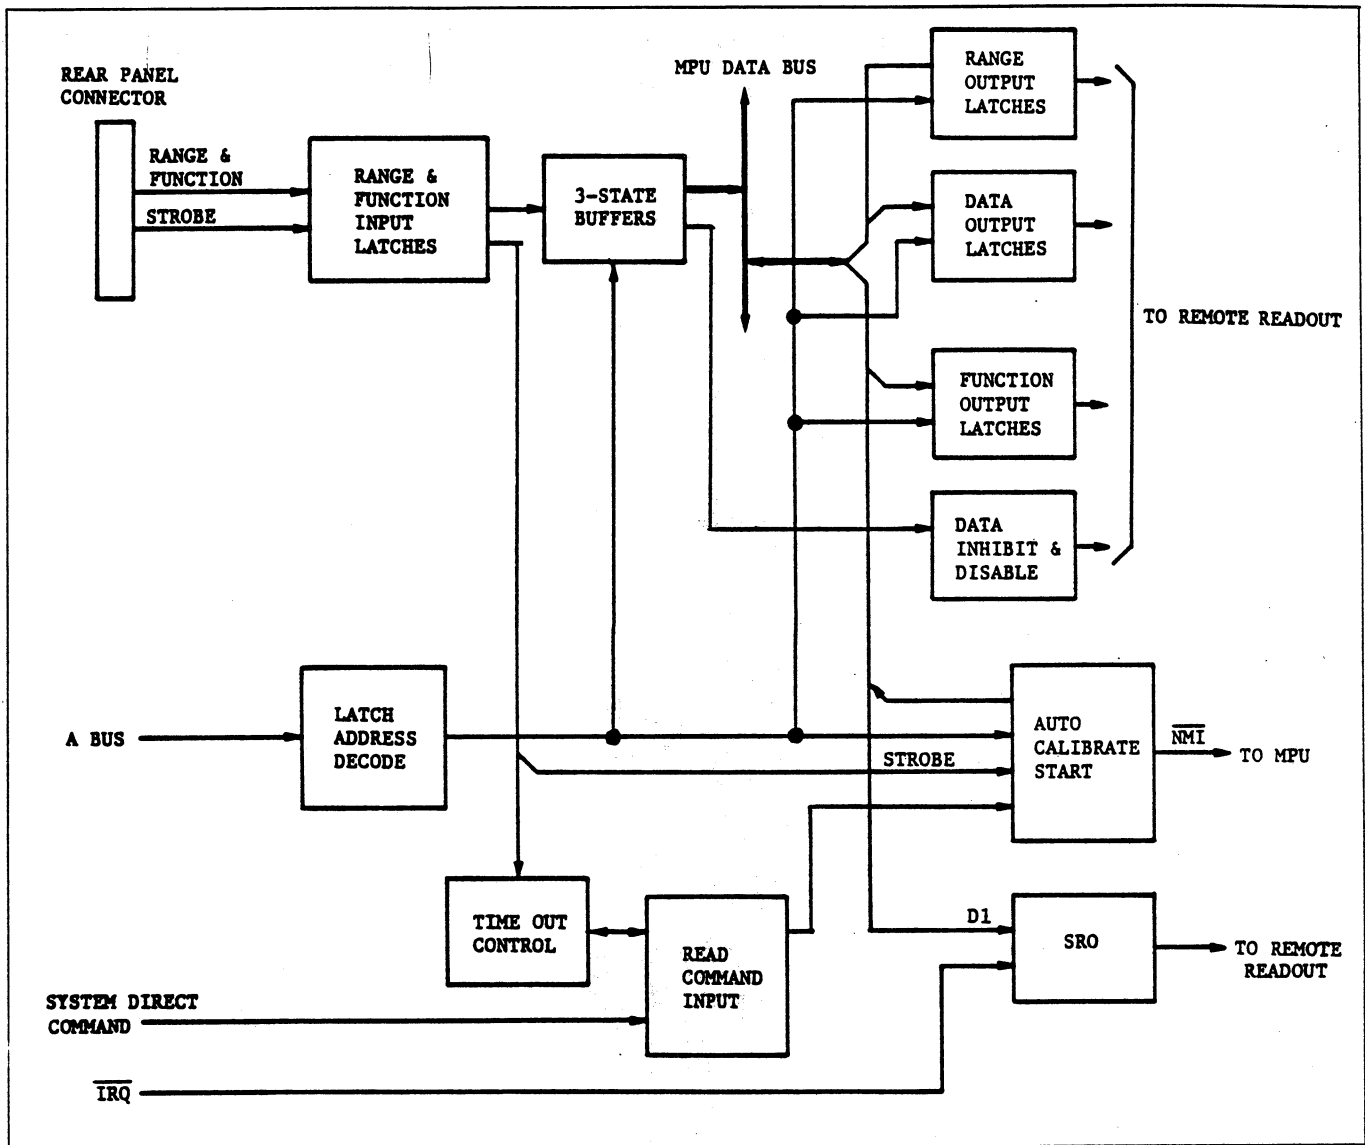


Figure 5.35 - Parallel BCD

serial input of U13, followed by 12 data bits from the A/D converter. When the signal bit reaches position 13 of the registers (U11, pin 10), a one shot (1/2 U6) is triggered and the 12 data bits are strobed through the output buffers. The data bits are also presented to the microprocessor data bus (in two bytes) when BY5 and BY6 are enabled. S/H Digitizer timing is shown in Figure 5.34.

5.5 SYSTEM INTERFACE.

5.5.1 Either of two types of interfaces may be used with the Model 6000. One is the Parallel BCD interface and the other is the General Purpose Interface Bus (GPIB). The GPIB conforms to IEEE Standard 488-1975.

5.5.2 Parallel BCD Interface.

5.5.2.1 The Parallel BCD interface (Figure 5.35) provides for remote programming of function and range. Upon completion of a measurement, the function, range and measurement data are routed through output ports to the remote device.

5.5.2.2 CIRCUIT DESCRIPTIONS.

5.5.2.2.1 The following paragraphs contain descriptions of the Parallel BCD interface circuitry. A detailed schematic may be found in Section 7.

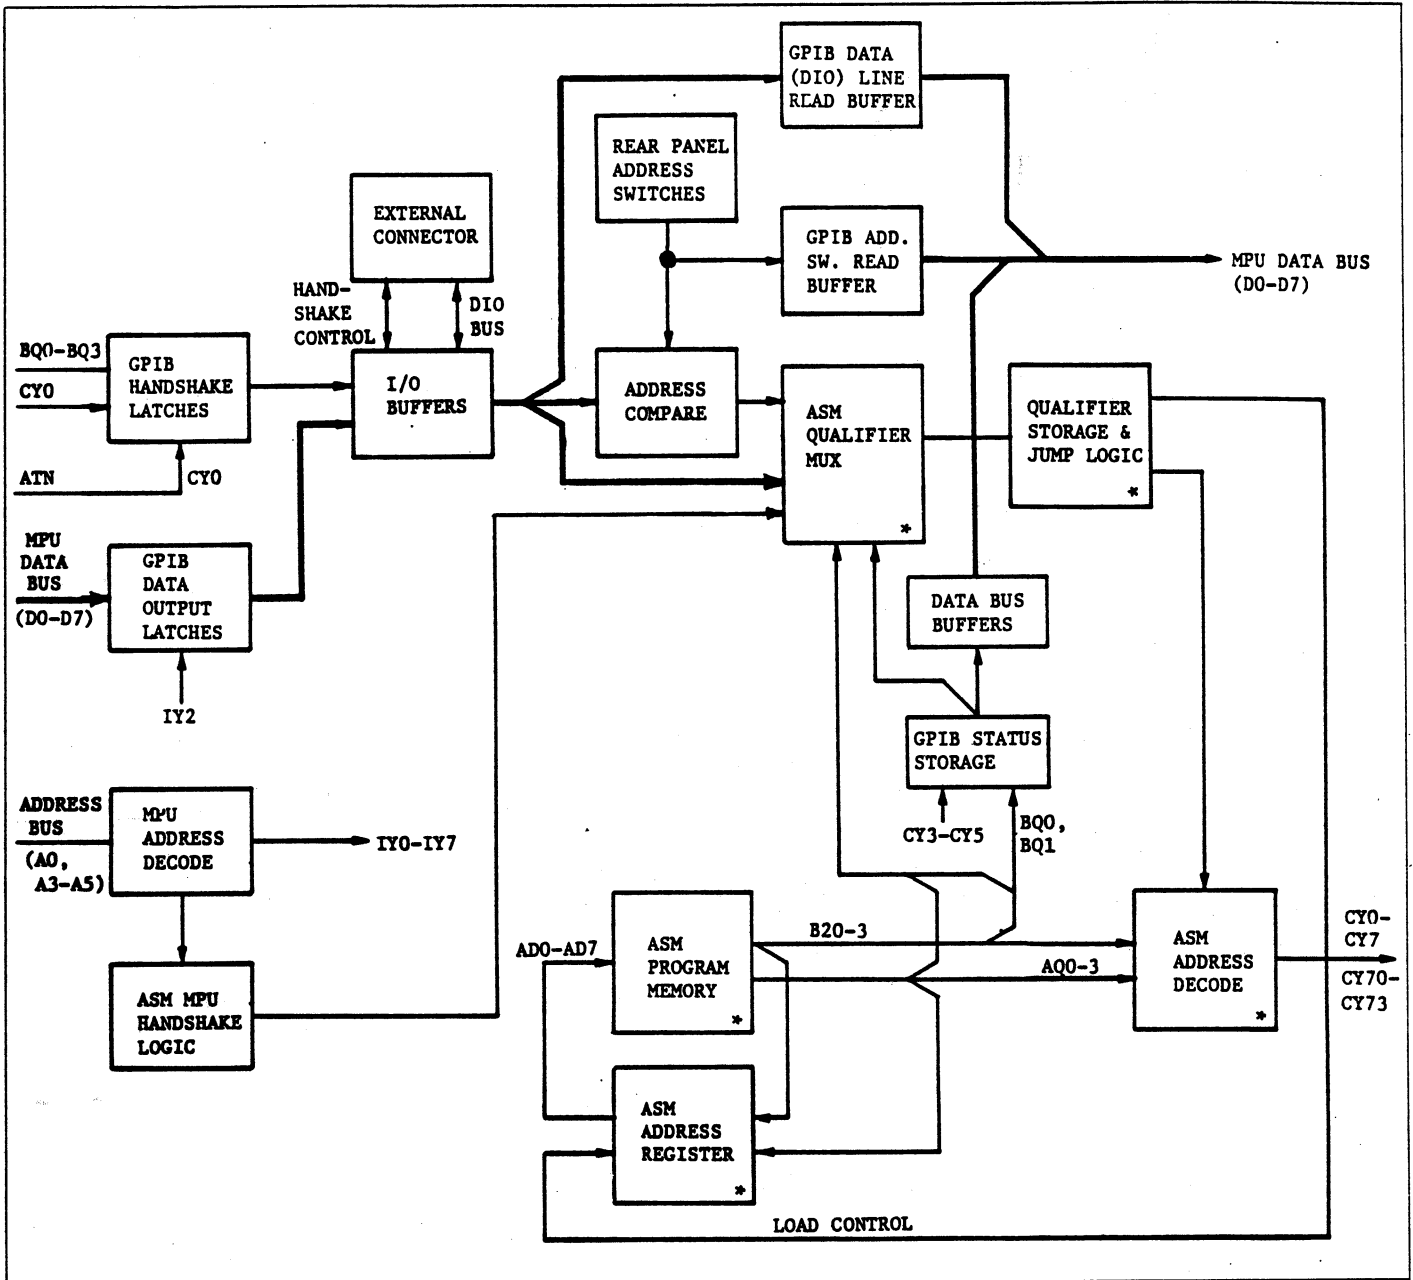


Figure 5.36 - GPIB IEEE-488 Interface Board

5.5.2.2.2 The controller defines the function and range for a measurement, and places this information on the interface lines. After the data has settled on the lines, the controller sends a program strobe which causes the data to be latched into the interface input latches (U17 thru U19). The program strobe also clocks flip-flop U5 in the Auto-Cal start circuit. The NMI signals the microprocessor that data has been stored, and the microprocessor responds by enabling the three state data bus buffers (U14 and U15). After the microprocessor has set the proper range and function, the controller sends a Read command to the interface.

5.5.2.2.3 The particular command sent (Direct, System Direct or Time Out) depends on the requirements of the controller. The Direct command will cause the DMM to take a measurement each time a negative pulse is received by the read command input circuitry (U22, U6 and U8). The System Direct command will cause the DMM to take continuous measurements as long as the command line is held at logical zero. The Time Out command will cause the DMM to take a measurement (after a preset time delay) each time a negative pulse is sent by the controller. The time delay is determined by range and function inputs to the time out control circuitry (U23 and U25).

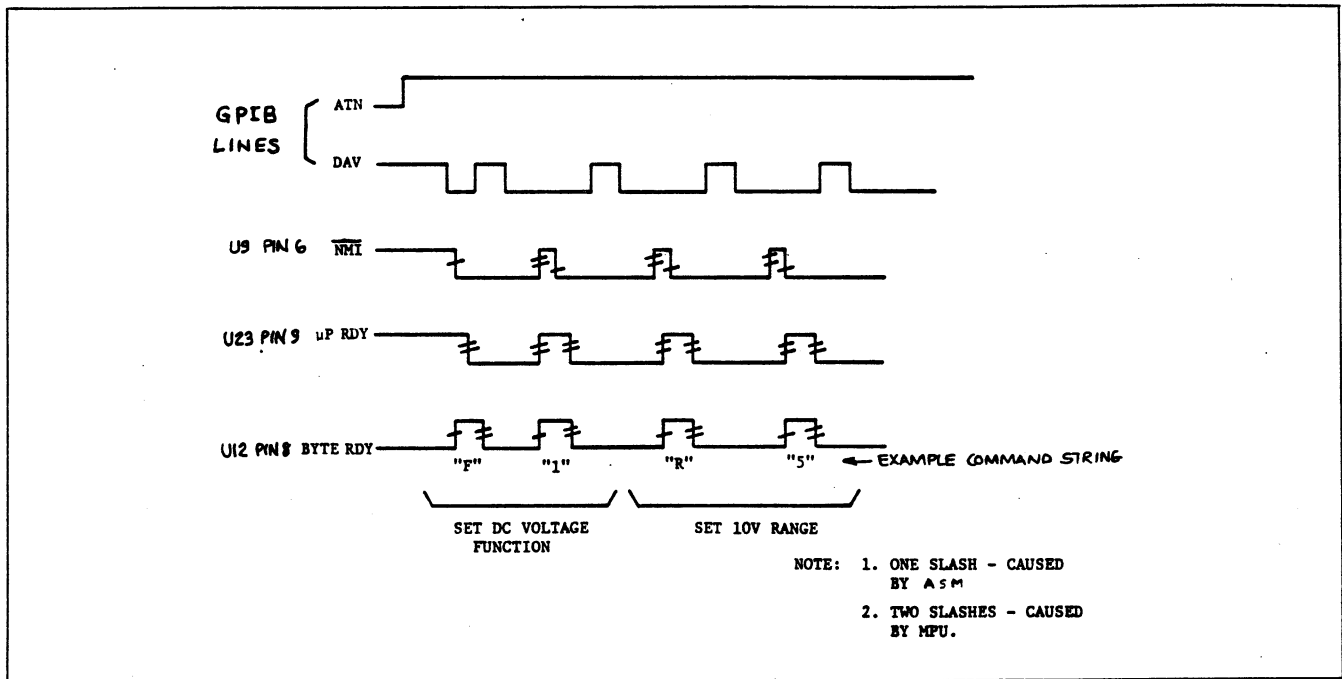


Figure 5.37 - GPIB Data Transfer to MPU

5.5.2.2.4 When a measurement has been completed, the microprocessor loads the range, function and data information into the output latches (U1 thru U3 and U10 thru U12). The latched information is available for local display and is also strobed into a remote readout device.

5.5.3 General Purpose Interface Bus.

5.5.3.1 The GPIB (Figure 5.36) allows the Model 6000 to operate on the IEEE 488 bus with controllers and other instruments. The interface is controlled by its own algorithmic state machine (ASM) which handles all interface commands and allows the GPIB to operate independent of microprocessor control.

5.5.3.2 CIRCUIT DESCRIPTIONS.

5.5.3.2.1 The following paragraphs contain descriptions of the GPIB circuitry. A detailed schematic may be found in Section 7.

5.5.3.2.2 The GPIB employs an 8-bit data bus and 8 lines for communications timing (handshaking) and control. Data is transmitted on the data lines as a series of 8-bit bytes. Data is transferred by means of a handshaking routine that permits asynchronous communication over a wide range of data rates. Bus communication is controlled by five lines that determine how information will be interpreted by

devices on the bus. Three handshake lines control data byte transfer and permit synchronization of the transfer on the data bus.

5.5.3.2.3 *ASM*. The ASM is a 256 by 8 bit machine with a microcycle time of 250 nanoseconds. The circuitry consists of the ASM Qualifier Multiplexer, the Qualifier Storage and Jump Logic, the ASM Program Memory, the ASM Address Register and the ASM Address Decoder.

5.5.3.2.4 The ASM can perform two types of instructions: Store Output and Conditional Jump. The Store Output instruction requires one microcycle to complete and allows the ASM to latch the GPIB and ASM/MPU handshake control information. The Store Output instruction also allows the ASM to perform functions such as the setting/resetting GPIB status bits (eg: "Talker", "Listener" and "Remote") and the sending of interrupts to the microprocessor via the NMI flip-flop. The Conditional Jump instruction requires two microcycles to complete. During the first microcycle qualifier select and control information, together with a bit indicating the beginning of a two cycle instruction, is made available on the ASM bus. At the end of the first cycle, the qualifier is latched in the Qualifier Storage and Jump Logic flip-flop (U10). During the second cycle, the jump address is placed at the parallel load inputs to the ASM Address Register (U15 and U16). The ASM Address Registers are parallel loadable binary counters which are either loaded or incremented by each clock pulse. The status

of the Qualifier Storage and Jump Logic determines whether or not the jump address is loaded on the succeeding clock pulse. If the jump address is not loaded, the ASM Address Registers will continue to increment as before.

5.5.3.2.5 The GPIB ATN (Attention) line determines how the messages on the Data I/O lines are interpreted. When ATN is low, the bytes sent over the bus are intended for the GPIB board. When ATN is high, the bytes are intended for the microprocessor. In order to receive bytes from the controller, the GPIB board must have been made a listener while ATN was low. The controller does this by sending the GPIB board's listen address on the Data I/O bus. A comparison is made by the ASM with the device address switches on the DMM. If a match occurs, the listen flip-flop (1/2 of U7) in the GPIB Status Storage is set by the ASM.

5.5.3.2.6 If the GPIB board is in the listen state and ATN returns high, the ASM will handshake any bytes made available over the GPIB. The GPIB board will then send an interrupt to the microprocessor, indicating that a byte is ready for the microprocessor. The microprocessor takes the byte and the ASM sets the Byte Ready line low. When the microprocessor is ready for another byte, it will set the MPU Ready line high and the ASM will transfer another byte of data. Figure 5.37 illustrates the timing relationships.

5.5.3.2.7 When ATN goes low, the GPIB board must respond within 200 nanoseconds. This is accomplished by having ATN reset the four control lines: Not Ready For Data (NRFD), Data Valid (DAV), No Data Accepted (NDAC) and Attention Latch (ATNL). This meets the IEEE-488 Standard and prevents the controller from sending data until the ASM program has a chance to execute the attention routine. The ASM program then starts the handshaking routine.

5.5.3.2.8 If, with ATN low, the ASM recognizes a byte from the controller as being its talk address, the talk flip-flop (1/2 of U7) is set and the ASM handshakes any other interface commands. The microprocessor will recognize the talk state and will take readings in the function called. The data is passed on the microprocessor data bus (D0 through D7) and stored in the GPIB Data Output Latches (U5 and U6). The microprocessor then sets the Next Byte Available (NBA) flip-flop (1/2 of U23), indicating that another data byte is ready. After the ASM outputs the next byte, it resets the NBA flip-flop which signals the microprocessor that it can load another data byte.

5.5.3.2.9 The GPIB Address Switch Read Buffer (U17) is used to provide a front panel display of the address set on the rear panel address switches.

SECTION 6

MAINTENANCE

6.1 INTRODUCTION.

6.1.1 This section contains information required to maintain the Model 6000. Signal flow diagrams and test point standards are provided to facilitate performance checks and troubleshooting.

6.1.1.1 For the convenience of the user during maintenance or field installation of options, the Model 6000 has an option label affixed to the transformer cover on the rear panel. It indicates the location of all option assemblies for that unit.

| Option | Function | Location of Unique Assy |
|--------|----------------|-------------------------|
| — | AC rms | Cal Module |
| — | 488 Interface | Mainframe |
| — | Ohms | Cal Mod./Mainfr. |
| 035H | H.S. Digitizer | Mainframe |
| 04 | 50 Hz line | Mainframe |
| 09 | Ratio Switch | Cal Module |
| 11 | Ref AC rms | Cal Module |
| 14 | AC avg | Cal Module |
| 34 | 4W Ratio | Cal Module |
| 41 | 10mV/LQ | Mainframe |
| 59 | BCD interface | Mainframe |
| 60 | Rack Mount | Mainframe |
| 66 | Slide Mount | Mainframe |
| 71 | 220/240 line | Mainframe |

6.2 CALIBRATION CHECKS AND PROCEDURES.

6.2.1 Detailed procedures for maintaining the calibration specifications of the Model 6000 are contained in the Operators Manual.

6.3 MAINTENANCE DISASSEMBLY.

WARNING

Removal of covers exposes potentially lethal voltages. Avoid contact with internal electrical connections while unit is connected to AC Power source.

6.3.1 Access to the DMM circuitry may be made as follows (reference Figure 6.1):

- a. Unplug power cord from AC Power source.

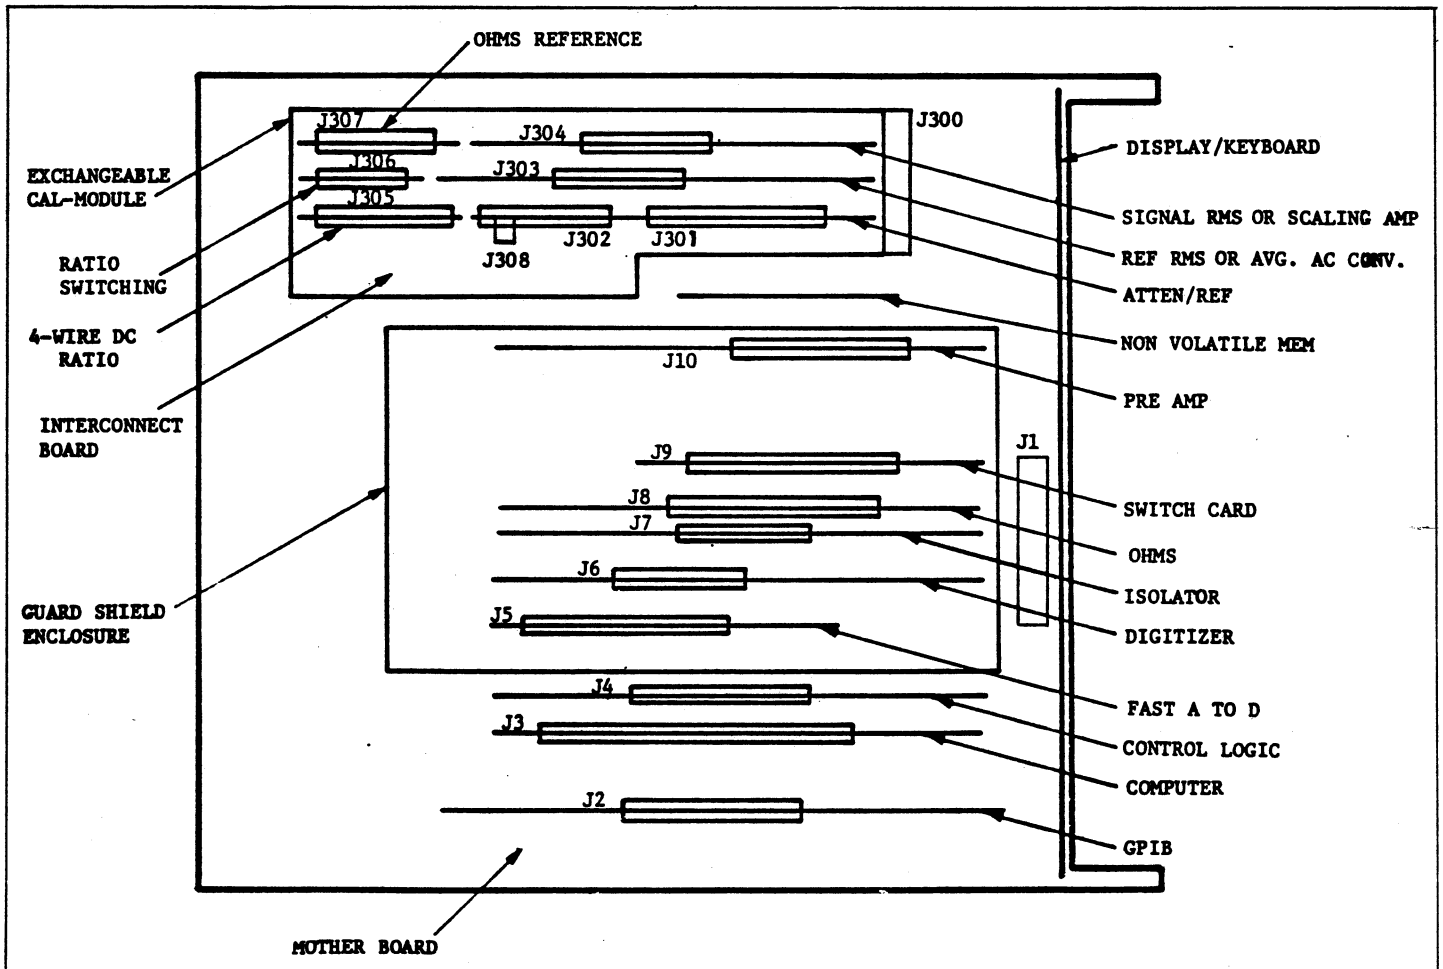


Figure 6.1 - PC Board Locations

Table 6.1 - Recommended Test Equipment

| Function | Qty | Item | Minimum Use Specifications | Suggested Equipment |
|----------|-------------------|---|--|--|
| DC | (2) (2) (1) | DC Voltages Sources Voltage Divider, Adjustable 10:1 Voltage Divider, Fixed | 0.1 ppm resolution 0.1 ppm linearity 1 ppm, Output $Z \leq 10$ K ohms | FLUKE 332B FLUKE 720A ESI RV622, With corrections |
| AC | (1) | AC Voltage Source | 1 ppm resolution | HP745A/746A |
| OHMS | (8) | Resistance Standards 10 Ω 100 Ω 1K Ω 10K Ω 100K Ω 1M Ω 10M Ω 100M Ω | 10 ppm 5 ppm 5 ppm 5 ppm 5 ppm 5 ppm 20 ppm 80 ppm | ESI SR1 with corrections ESI SR1 with corrections ESI SR1 with corrections ESI SR1 with corrections ESI SR1 with corrections ESI SR1 with corrections ESI SR1 with corrections Fabricated |
| Other | (1) (1) | Digital Voltmeter, 5 1/2 Digits Oscilloscope | Input R $\geq 10,000$ M Ω on 10VDC Range 50 MHz Bandwidth 5mV/cm Sensitivity | Racal-Dana 6000 or 5900 Tektronix 454 |

- b. Remove the instrument top cover by loosening the four securing screws.
- c. Remove the guard shield top cover by loosening the four securing screws.
- d. Loosen the rear panel thumbscrew that secures the Cal-Module.
- e. Slide the Cal-Module out of the Model 6000.
- f. Remove the Cal-Module top cover by loosening the five securing screws.
- g. Slide the Cal-Module back into the Model 6000 and tighten the rear panel thumbscrew.

6.3.2 PC Board Removal.

6.3.2.1 All of the printed circuit boards (except the Non-Volatile Memory board and Display board) may be unplugged from the motherboard connectors as required.

6.3.2.2 NON-VOLATILE MEMORY BOARD REMOVAL.

6.3.2.2.1 The Non-Volatile Memory board may be removed as follows:

- a. Remove the Cal-Module by loosening the thumbscrew on the rear panel. Slide the Cal-Module out of the Model 6000.

- b. Remove the Non-Volatile Memory board by loosening the four securing screws.

6.3.2.3 DISPLAY BOARD REMOVAL.

6.3.2.3.1 The Display board may be removed as follows:

- a. Remove the four top and five bottom front panel assembly securing screws.
- b. Remove the front panel assembly from the 6000. Take care not to put excessive stress on the wires connected to the AC Power switch.
- c. Remove the Display board from the front panel assembly by loosening the six securing screws.

6.4 UNIT PERFORMANCE CHECKS.

WARNING

Removal of covers exposes potentially lethal voltages. Avoid contact with internal electrical connections while unit is connected to AC Power source.

6.4.1 This section contains unit performance checks for each basic function and range of the Model 6000. Signal flow diagrams and test point standards are also provided to facilitate troubleshooting.

6.4.2 Test points called out in the performance checks may refer to physical test points provided in the circuitry or to component connections. The test point identifiers appear in the performance check tables as black squares (voltage test points) and black diamonds (waveform test points).

6.4.3 Subassembly performance checks are designed to aid in the isolation of malfunctioning components. Test points are numbered and lettered sequentially for each board so that the signal may be traced from the input to the output of the board.

6.4.4 Recommended Test Equipment.

6.4.4.1 Test equipment recommended for performance checks and troubleshooting is listed in Table 6.1. Equivalent test equipment may be substituted, where desired.

6.4.4.2 CALIBRATION/MAINTENANCE TEST BED.

6.4.4.2.1 The Calibration/Maintenance Test Bed may be used to facilitate calibration, troubleshooting and repair of plug-in circuit boards and the Cal-Module. The Test Bed is electronically identical to the Model 6000 (except for the absence of a Cal-Module) and the front panel is designed to simplify maintenance procedures. A complete description of the Test Bed is contained in the Operators Manual.

6.4.5 Power Supply Check.

6.4.5.1 Before proceeding with the unit performance checks, ensure that the various power supply voltages are present and correct (reference Table 6.2). If a discrepancy is found, reference the test procedures in the following paragraphs.

6.4.5.2 NO SUPPLY VOLTAGES.

6.4.5.2.1 Ensure that the AC power cord is connected to the proper voltage source and that the front panel power switch is set ON. If all supplies still remain at zero, proceed as follows:

- a. Disconnect the AC power cord from the power source.
- b. Remove the fuse from the rear panel fuseholder and check its condition with an ohmmeter. If the fuse is open, replace with one of the proper rating for the selected operating voltage, and place back in the fuseholder.
- c. Reconnect the AC power cord and recheck the supply voltages. If the problem persists, check the power supply components.

6.4.5.3 INCORRECT SUPPLY VOLTAGES.

6.4.5.3.1 Ensure that the AC power cord is connected to the proper voltage source. If incorrect supply voltages are still noted, proceed as follows:

- a. Disconnect the AC power cord from the power source.
- b. Remove all plug in boards to eliminate possible source of shorts.
- c. Reconnect the AC power and recheck the supply voltages. If voltages return to proper levels, check the plug in boards for shorts. If the voltages do not return to normal levels, check the Motherboard circuitry for shorts and the power supply for bad components.

6.4.6 Error Messages.

NOTE

The Series 6000 contains two sets of error limits for readings taken during Auto-Cal.

Errors 61 thru 76 are Predictive Maintenance errors and do not indicate an operating condition that is out-of-tolerance. They indicate instead that the Auto-Cal sequence has corrected for conditions that are beyond the normal design tolerances expected with the Series 6000. To prevent possible future failure or performance that is out-of-specification, the unit should be referred for maintenance when convenient.

Errors 81 thru 96 indicate a failure or a condition that is out-of-specification, and with the unit "locking-up" on the first error encountered.

Additional diagnostic errors may be observed by pressing any key on the Series 6000 keyboard.

6.4.6.1 Error messages and their descriptions are listed in Table 6.3. References are made in the Auto-Cal message descriptions to the singlethread troubleshooting diagrams in Figures 6.3 thru 6.17. These diagrams, in conjunction with the function unit performance tests in Tables 6.9 and 6.10, will aid in the location of defective circuitry. In the event that a lockup condition occurs (error messages 81 thru 99), the lockup may be bypassed, for troubleshooting purposes, by pressing any key on the Model 6000 keyboard.

6.4.7 Troubleshooting Charts.

6.4.7.1 The following troubleshooting charts are presented as an aid in the isolation of malfunctions to individual sub-assemblies. References are made in the charts to the unit performance tests for these subassemblies.

Table 6.2 - Power Supply Checks

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|---------------------------|--|-----------------------|------------|------------------------|--|
| Power Switch On | All digital supplies are referenced to Digital Ground. All analog supplies are referenced to MECCA. | | | | |
| | Display +5V output | U1-3 | 1 | Figure 6.2 | Voltage level varies according to display load |
| | M.B. +5V output | E43 | 2 | Figure 6.2 | +5V |
| | TTL +5 | E34 | 3 | Figure 6.2 | +5V |
| | Calibration memory -30V output | Q1-1 | 4 | Figure 6.2 | -30V |
| | Analog +5V output | U14-3 | 5 | Figure 6.2 | +5V |
| | Analog +15V output | U15-3 | 6 | Figure 6.2 | +15V |
| | Analog -15V output | U12-3 | 7 | Figure 6.2 | -15V |
| | Analog +30V UNREG output | U11-1 | 8 | Figure 6.2 | +30V to +45V |
| | Relay Coil +24V output | U11-3 | 8 | Figure 6.2 | +24V |
| | Analog -30V UNREG | U13-2 | 9 | Figure 6.2 | -30V to -45V |
| | Analog -24V output | U13-3 | 9 | Figure 6.2 | -24V |
| Analog -40V | CR3, CR4 | 10 | Figure 6.2 | -40 to -85V | |

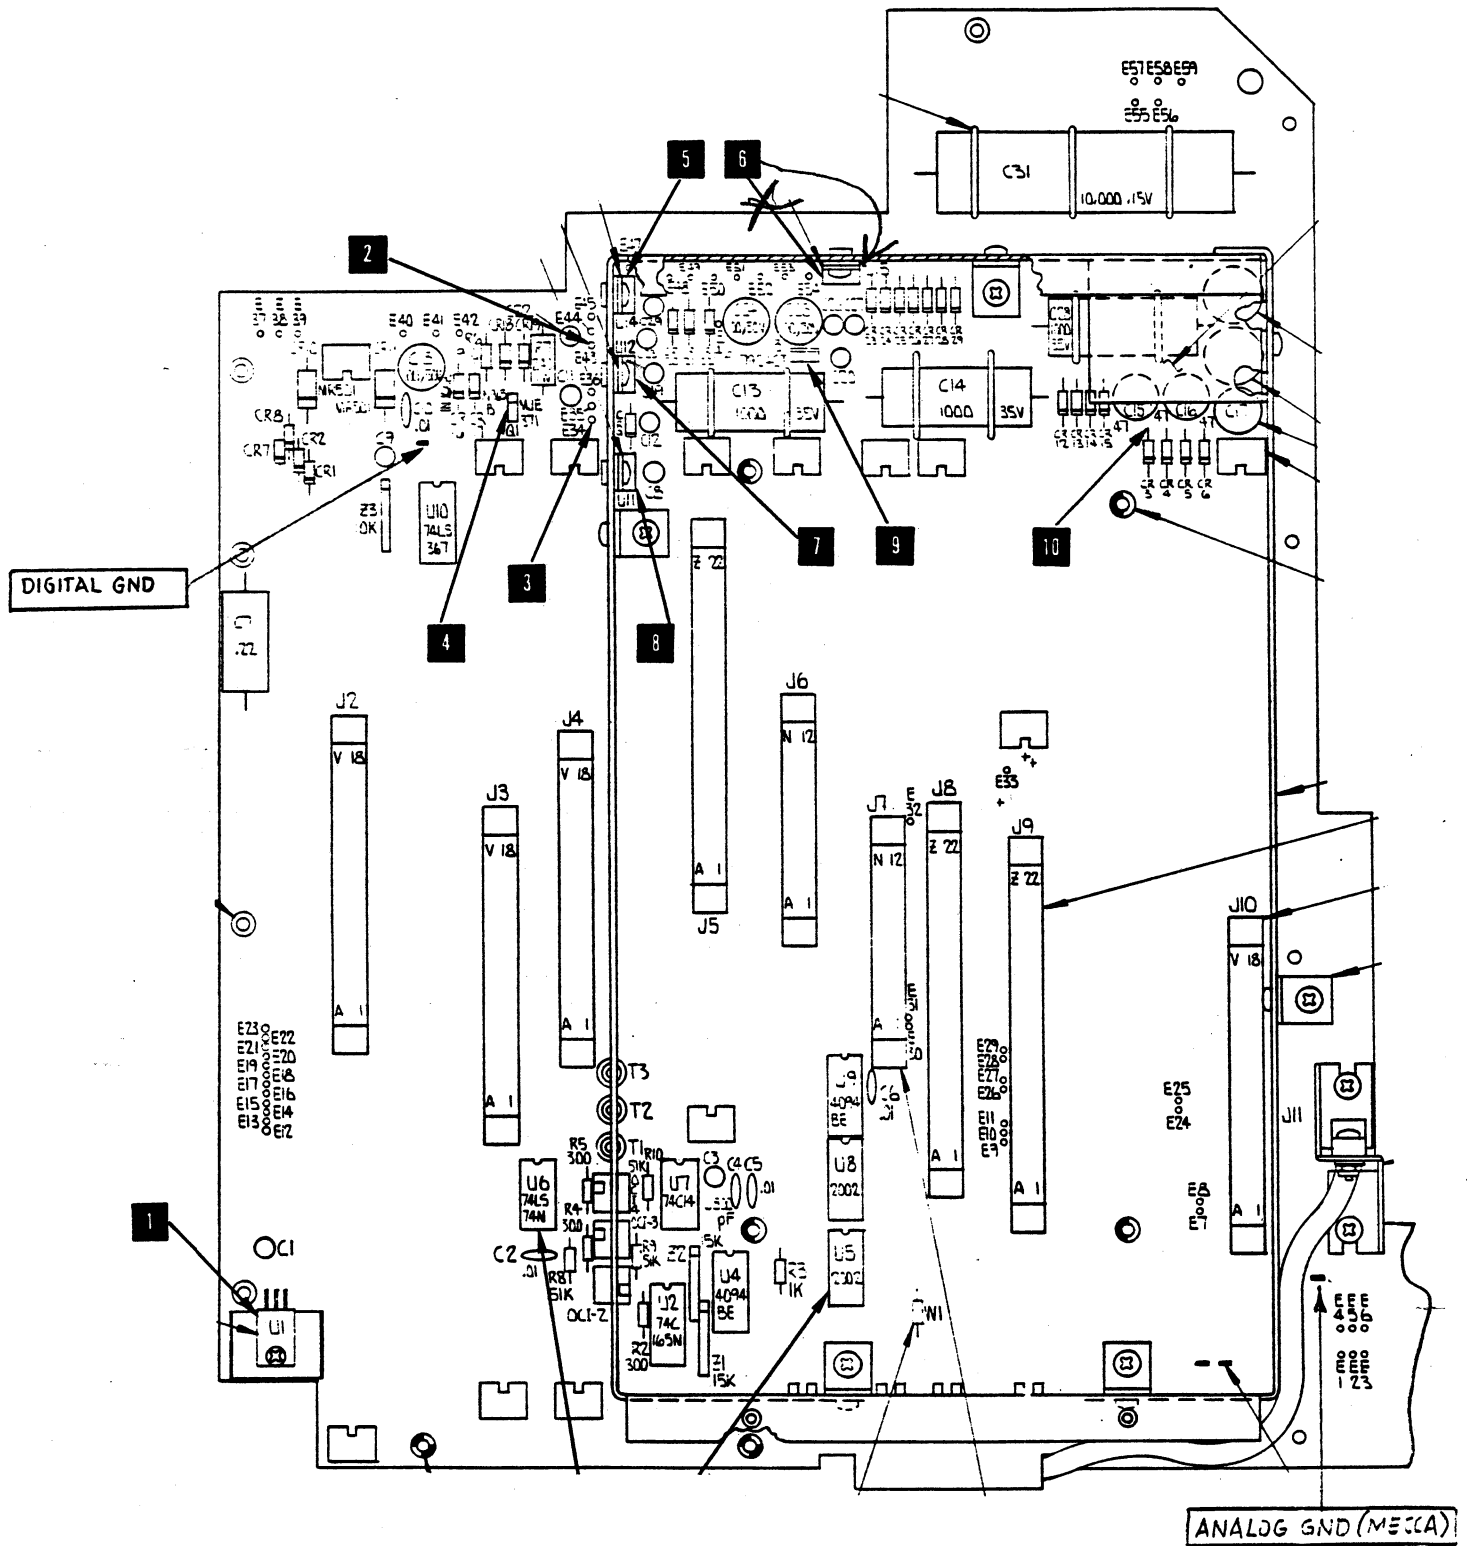


Figure 6.2 - Main Logic Component Location Diagram

Table 6.3 - Error Messages

| Error Number | Description |
|--|--|
| 0 | Cannot calculate Log of zero |
| 2 | Attempted Auto-cal when in 1000V signal or reference range |
| 10 | Improper Key sequence |
| 11 | Illegal # digits request |
| 12 | Divide by zero |
| 13 | Exponent cannot be displayed when in 6 1/2 digit mode |
| 14 | Display exponent beyond ± 9 |
| 20 | Required board missing from main analog section |
| 21 | Required board missing from CAL module |
| 22 | Signal RMS converter not installed |
| 23 | Reference RMS converter not installed |
| 24 | AC converter not installed |
| 25 | Ohms converter not installed |
| 26 | 4-wire DC external reference not installed |
| 29 | Fast Digitizer not installed |
| 30 | RAM failure on computer board |
| 31 | DC or reference Non Vol number out of spec |
| 32 | Ohms Non Vol number out of spec |
| 33 | Non Vol will not write or Cal switch bad |
| 34 | Clock on Non Vol board not oscillating |
| 35 | Reading will not trigger on control logic board |
| 36 | No axis crossing detected from Integrator board |
| PREDICTIVE MAINTENANCE ERRORS (See Tables 6.4 to 6.8) | |
| Auto-Cal reading taken during: | |
| 61 | DC CAL 1 (Isolator/Digitizer - Positive Reference Voltage - See Figure 6.12) |
| 62 | DC CAL 2 (Attenuator - Positive Reference Voltage - See Figure 6.13) |
| 63 | DC CAL 3 (Isolator/Digitizer - Negative Reference Voltage - See Figure 6.14) |
| 64 | DC CAL 4 (Attenuator - Negative Reference Voltage - See Figure 6.15) |
| 65 | DC CAL 5 (10 Volt Range - See Figure 6.3) |
| 66 | DC CAL 6 (1 Volt Range - See Figure 6.4) |
| 67 | DC CAL 7 (100 mV Range - See Figure 6.4) |
| 68 | DC CAL 8 (10mV Range - See Figure 6.6) |
| 71 | OH CAL 1 (10 Ω Range - See Figure 6.9) |
| 72 | OH CAL 2 (100 Ω , 1K Ω Ranges - See Figure 6.8) |
| 73 | OH CAL 3 (10K Ω - 100M Ω Ranges - See Figure 6.7) |
| 74 | OH CAL 4 (Input Bias Current - See Figure 6.16) |
| 75 | OH CAL 5 (Internal 10K Reference Resistor - See Figure 6.17) |
| 76 | OH CAL 6 (1 Ω Range - See Figure 6.10) |

Table 6.3 - Error Messages continued

| Error Number | Description |
|--|--|
| DIAGNOSTIC ERRORS (See Tables 6.4 to 6.8) | |
| Incorrect Auto-Cal reading taken during: | |
| 81 | DC CAL 1 (Isolator/Digitizer - Positive Reference Voltage - See Figure 6.12) |
| 82 | DC CAL 2 (Attenuator - Positive Reference Voltage - See Figure 6.13) |
| 83 | DC CAL 3 (Isolator/Digitizer - Negative Reference Voltage - See Figure 6.14) |
| 84 | DC CAL 4 (Attenuator - Negative Reference Voltage - See Figure 6.15) |
| 85 | DC CAL 5 (10 Volt Range - See Figure 6.3) |
| 86 | DC CAL 6 (1 Volt Range - See Figure 6.4) |
| 87 | DC CAL 7 (100mV Range - See Figure 6.4) |
| 88 | DC CAL 8 (10mV Range - See Figure 6.6) |
| | |
| 91 | OH CAL 1 (10 Ω Range - See Figure 6.9) |
| 92 | OH CAL 2 (100 Ω , 1K Ω Ranges - See Figure 6.8) |
| 93 | OH CAL 3 (10K Ω - 100M Ω Ranges - See Figure 6.7) |
| 94 | OH CAL 4 (Input Bias Current - See Figure 6.16) |
| 95 | OH CAL 5 (Internal 10K Reference Resistor - See Figure 6.17) |
| 96 | OH CAL 6 (1 Ω Range - See Figure 6.10) |

Table 6.4 - Troubleshooting Chart - General

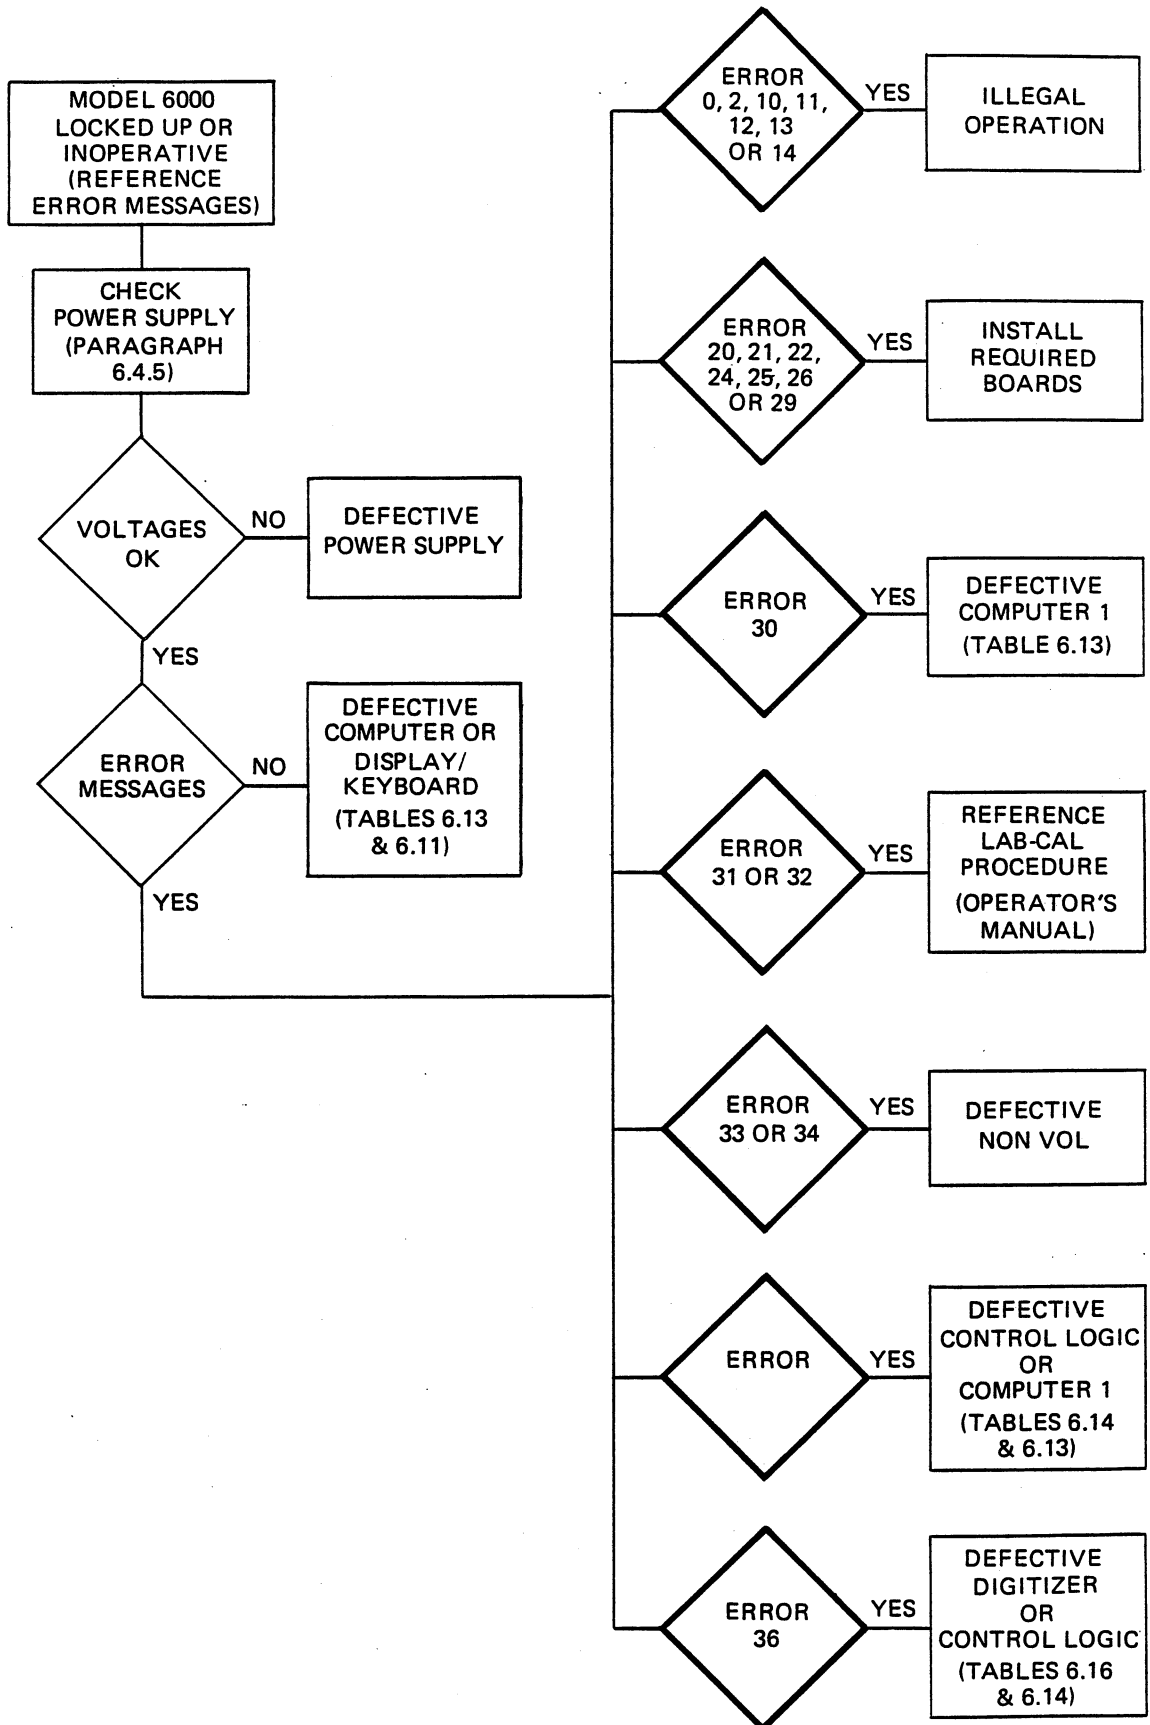


Table 6.5 - Troubleshooting Chart - DC Voltage

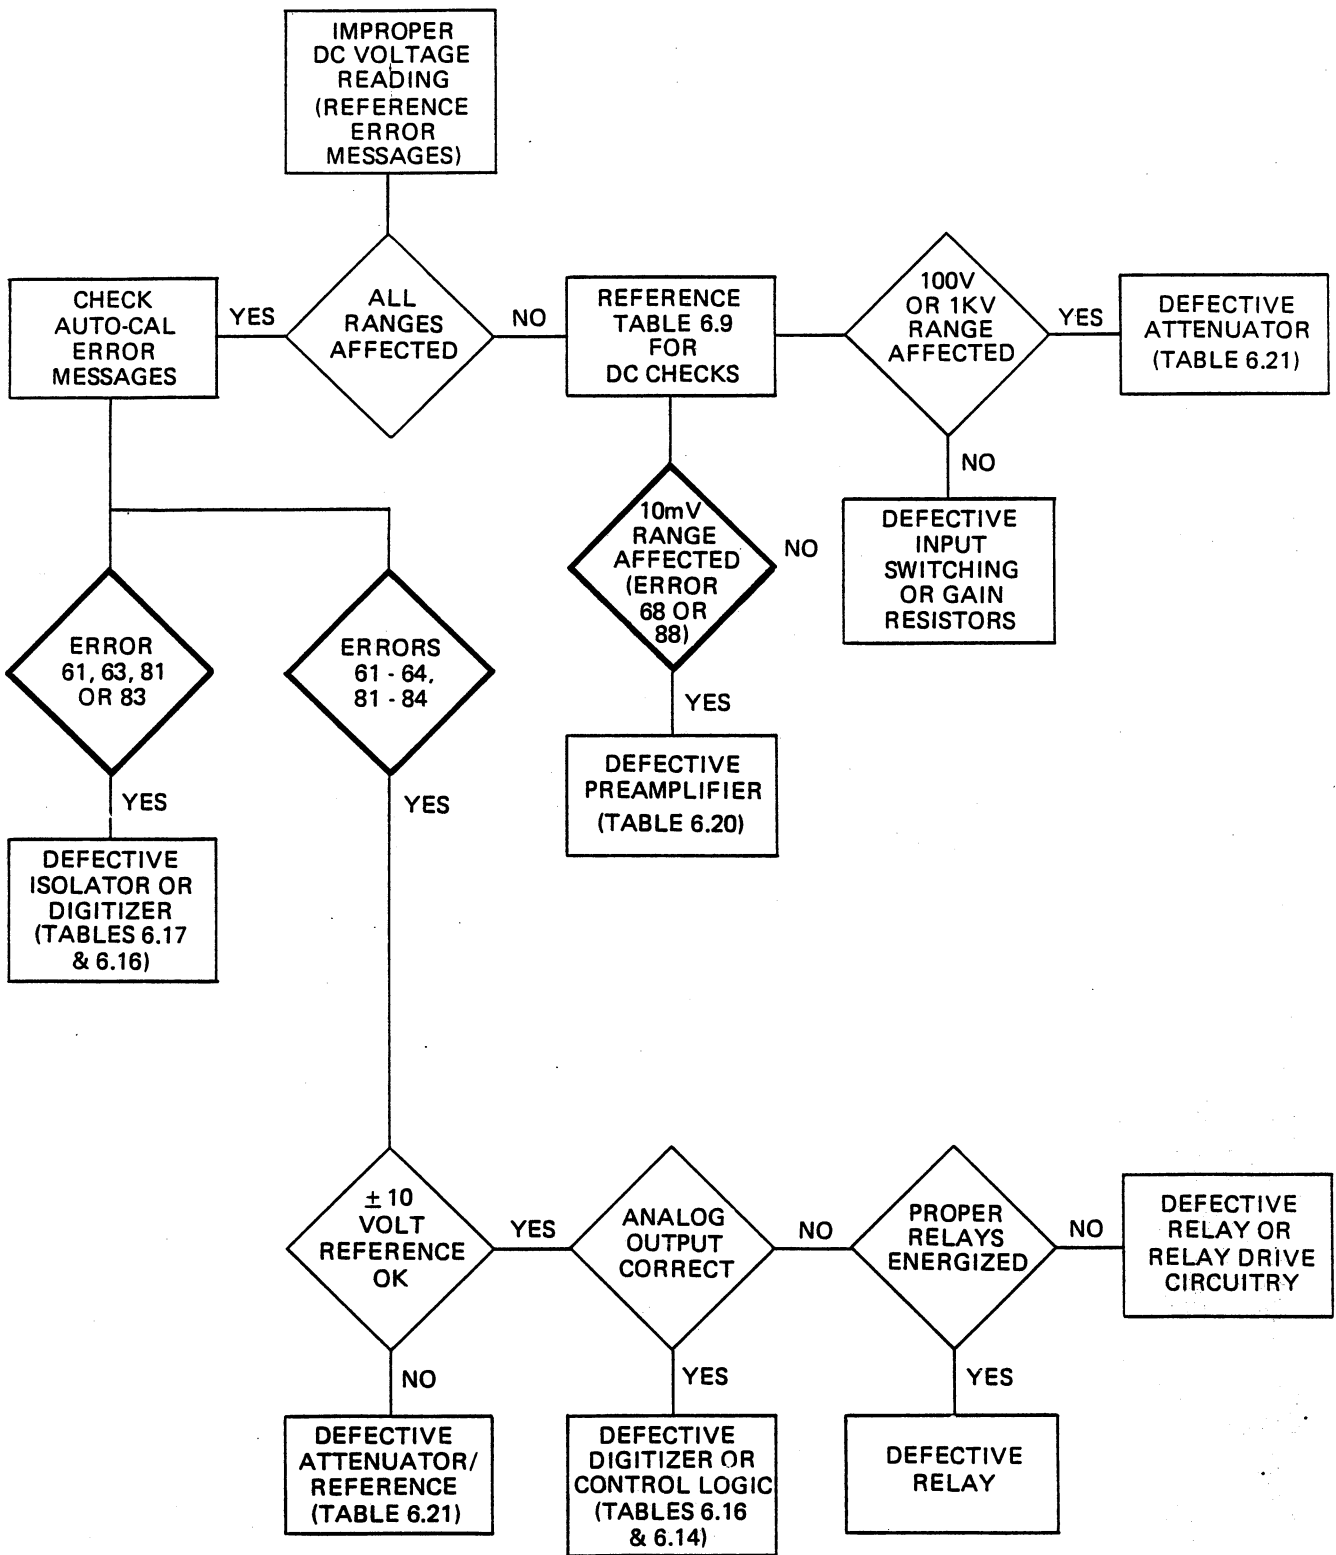


Table 6.6 - Troubleshooting Chart - AC Voltage

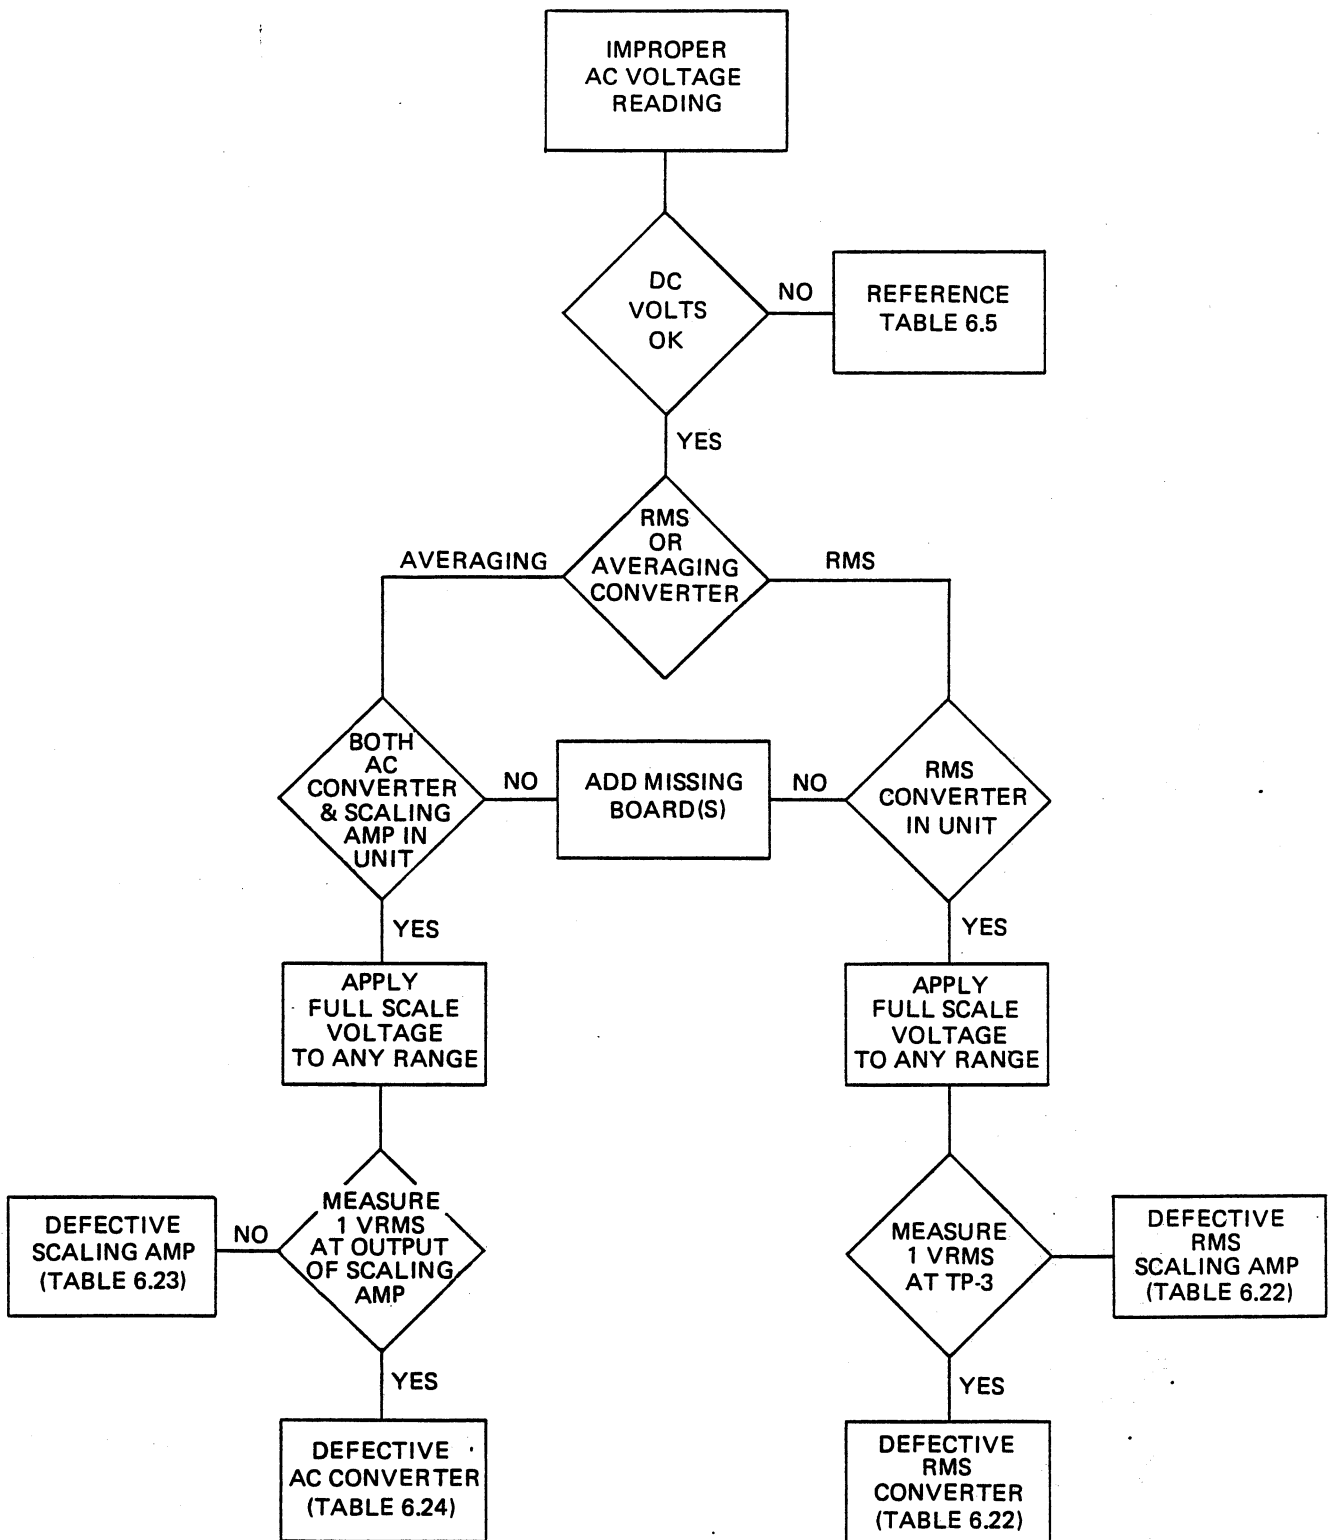


Table 6.7 - Troubleshooting Chart - Ohms

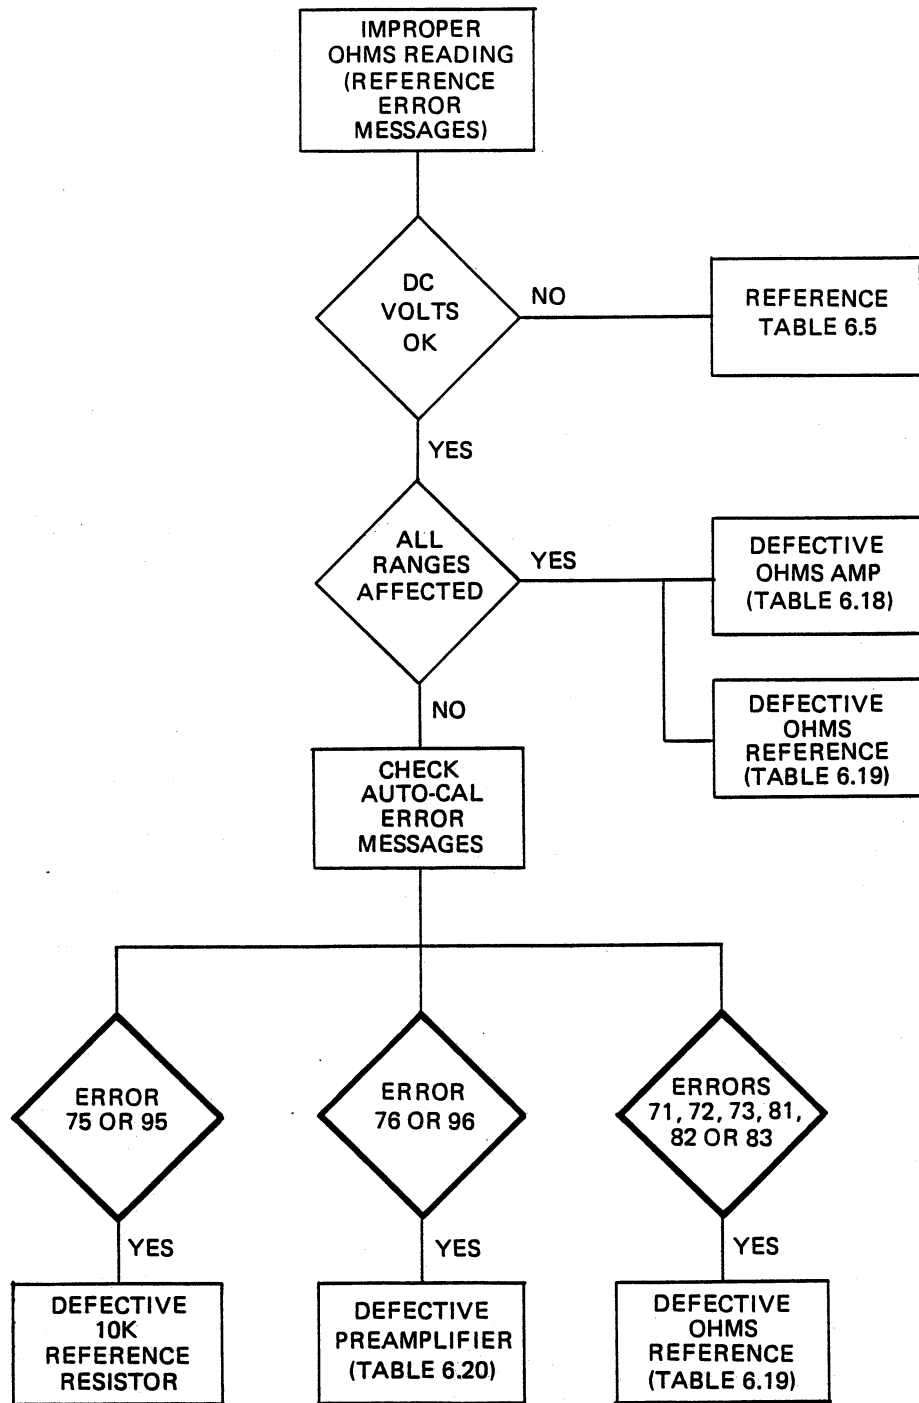


Table 6.8 - Troubleshooting Chart - Remote Programming

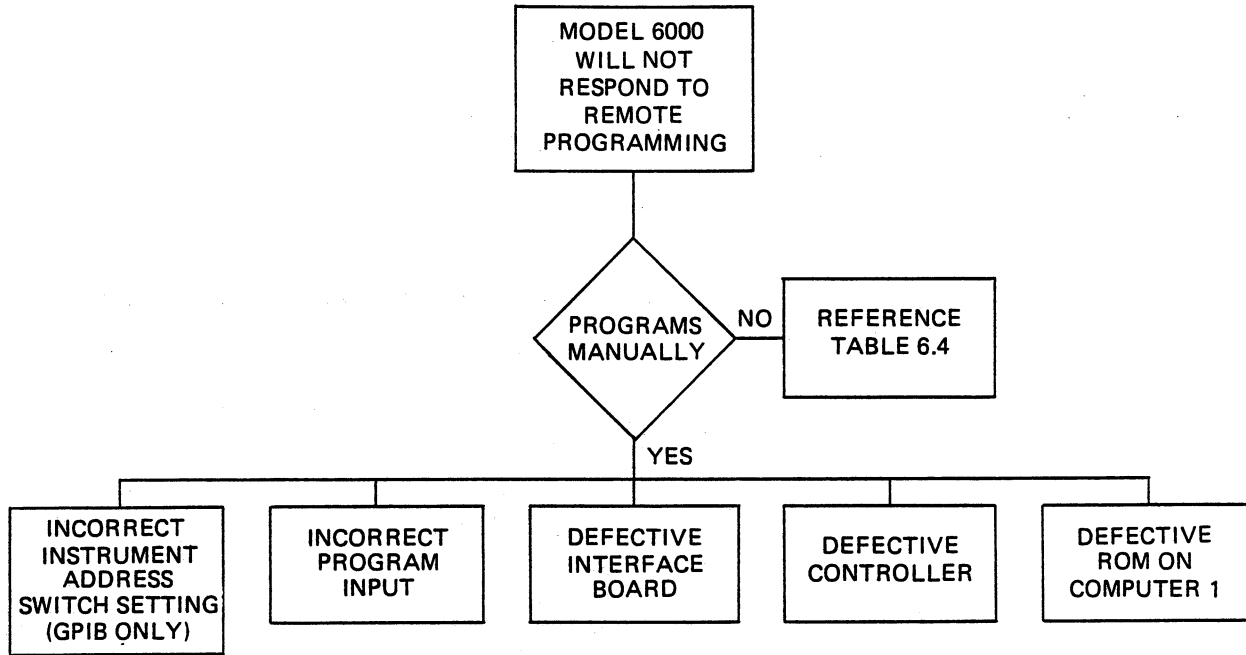


Table 6.9 - DC Voltage Unit Performance Tests

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|--|---|-----------------------|------------|------------------------|----------------------|
| Function: DC Voltage Range: 10 VDC Input: 10 VDC | All measurements are referenced to Analog Common (Mecca). | | | | |
| | Isolator + input | J7-A | 1 | Figure 6.3 | +10.0 VDC |
| | Isolator - input | TP1 | 2 | Figure 6.3 | +10.0 VDC |
| | Isolator output | TP2 | 3 | Figure 6.3 | +10.0 VDC |
| Function: DC Voltage Range: 100 mVDC Input: 100 mVDC | Isolator + input | J7-A | 1 | Figure 6.4 | +0.1 VDC |
| | Isolator - input | TP1 | 2 | Figure 6.4 | +0.1 VDC |
| | Isolator output | TP2 | 3 | Figure 6.4 | +10.0 VDC |
| Function: DC Voltage Range: 1 VDC Input: 1 VDC | Isolator + input | J7-A | 1 | Figure 6.4 | +1.0 VDC |
| | Isolator - input | TP1 | 2 | Figure 6.4 | +1.0 VDC |
| | Isolator output | TP2 | 3 | Figure 6.4 | +10.0 VDC |
| Function: DC Voltage Range: 100 VDC Input: 100 VDC | Isolator + input | J7-A | 1 | Figure 6.5 | +10.0 VDC |
| | Isolator - input | TP1 | 2 | Figure 6.5 | +10.0 VDC |
| | Isolator output | TP2 | 3 | Figure 6.5 | +10.0 VDC |

Table 6.9 - DC Voltage Unit Performance Tests (Continued)

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|--|----------------------|-----------------------|------------|------------------------|----------------------|
| Function: DC Voltage Range: 1000 VDC Input: 1000 VDC | Isolator + input | J7-A | 1 | Figure 6.5 | +10.0 VDC |
| | Isolator - input | TP1 | 2 | Figure 6.5 | +10.0 VDC |
| | Isolator output | TP2 | 3 | Figure 6.5 | +10.0 VDC |
| Function: DC Voltage Range: 10 mVDC Input: 10 mVDC | Isolator + input | J7-A | 1 | Figure 6.6 | +7.2 VDC |
| | Isolator - input | TP1 | 2 | Figure 6.6 | +7.2 VDC |
| | Isolator output | TP2 | 3 | Figure 6.6 | +7.2 VDC |
| | Preamplifier + input | E4 | 4 | Figure 6.6 | +10 mVDC |
| | Preamplifier output | E3 | 5 | Figure 6.6 | +7.2 VDC |
| | Preamplifier - input | E7 | 6 | Figure 6.6 | +10 mVDC |

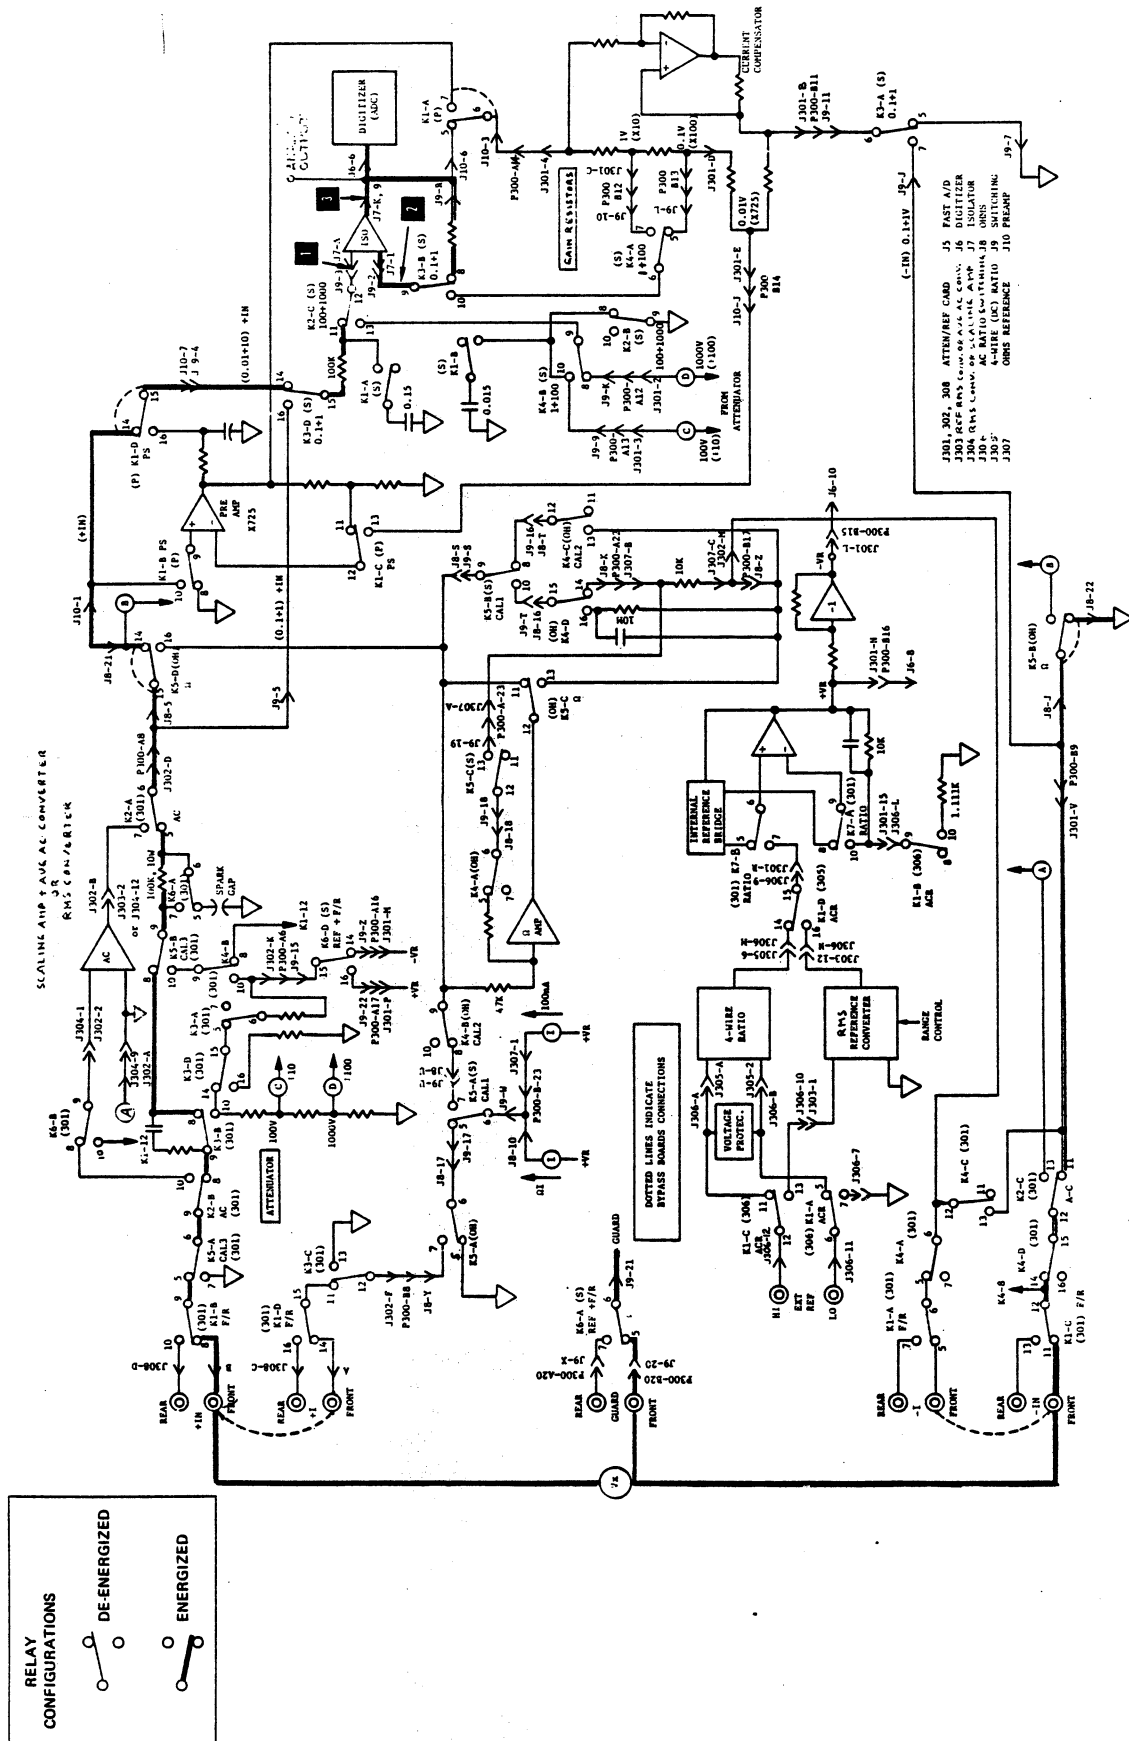


Figure 6.3 - 10 Volt DC Range Singlethread Troubleshooting Diagram

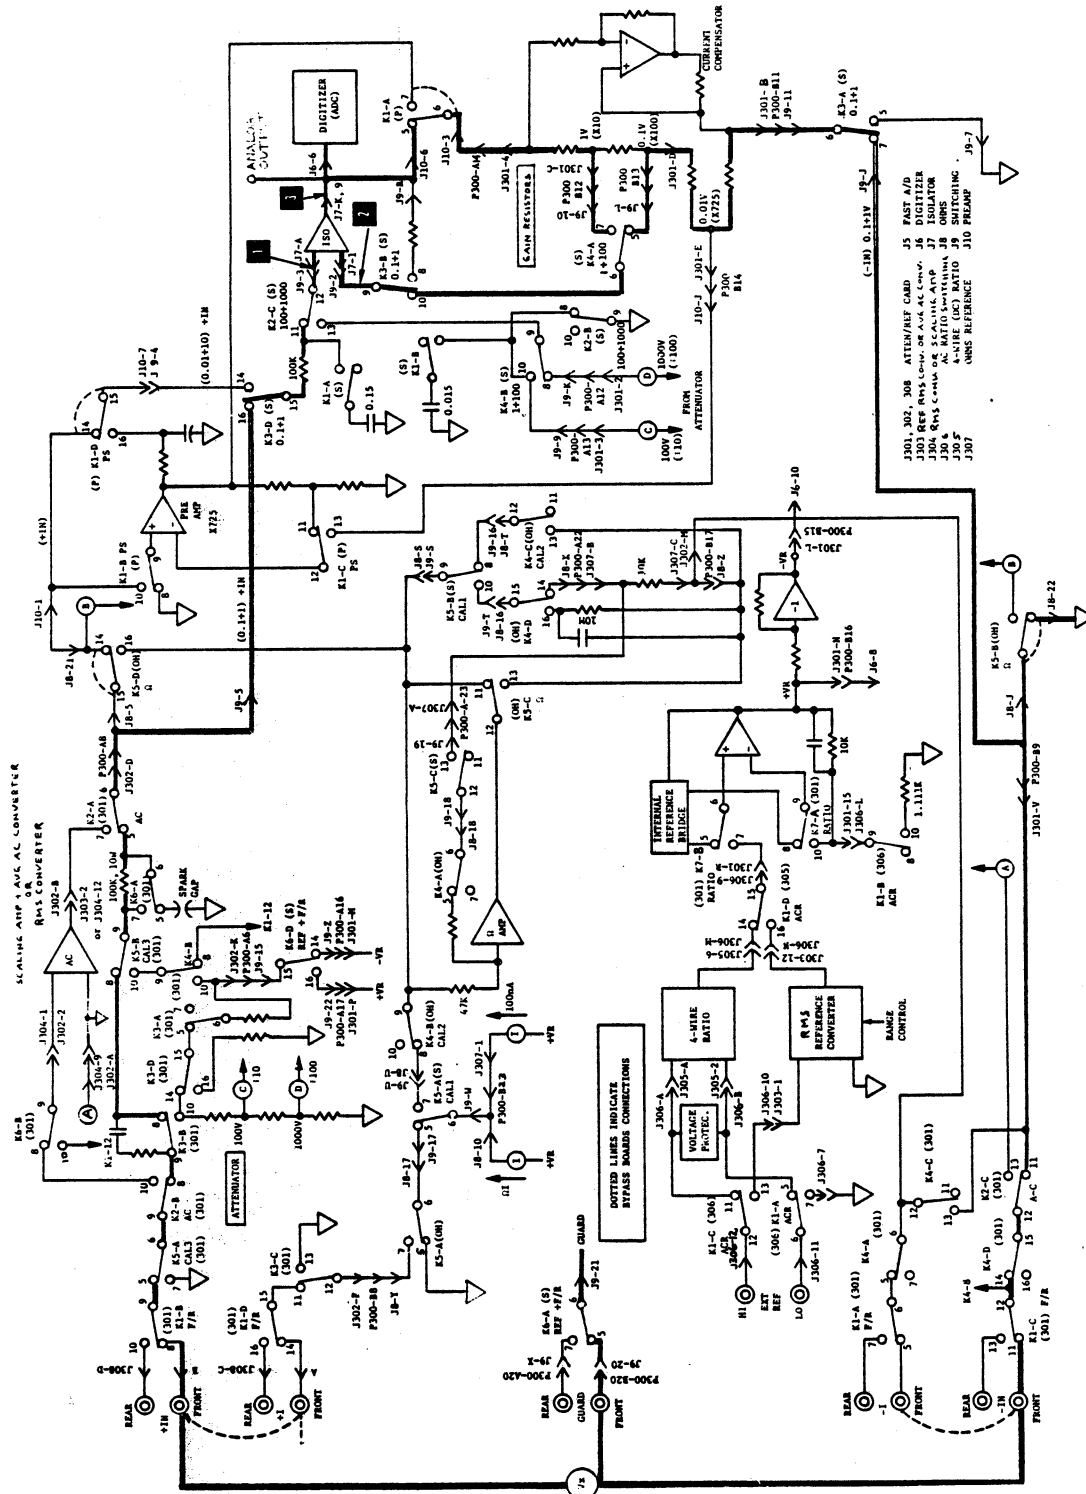
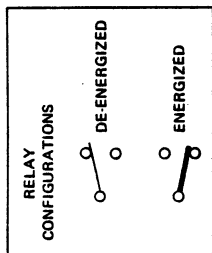


Figure 6-4 - 100mV and 1 Volt DC Range Singlethread Troubleshooting Diagram

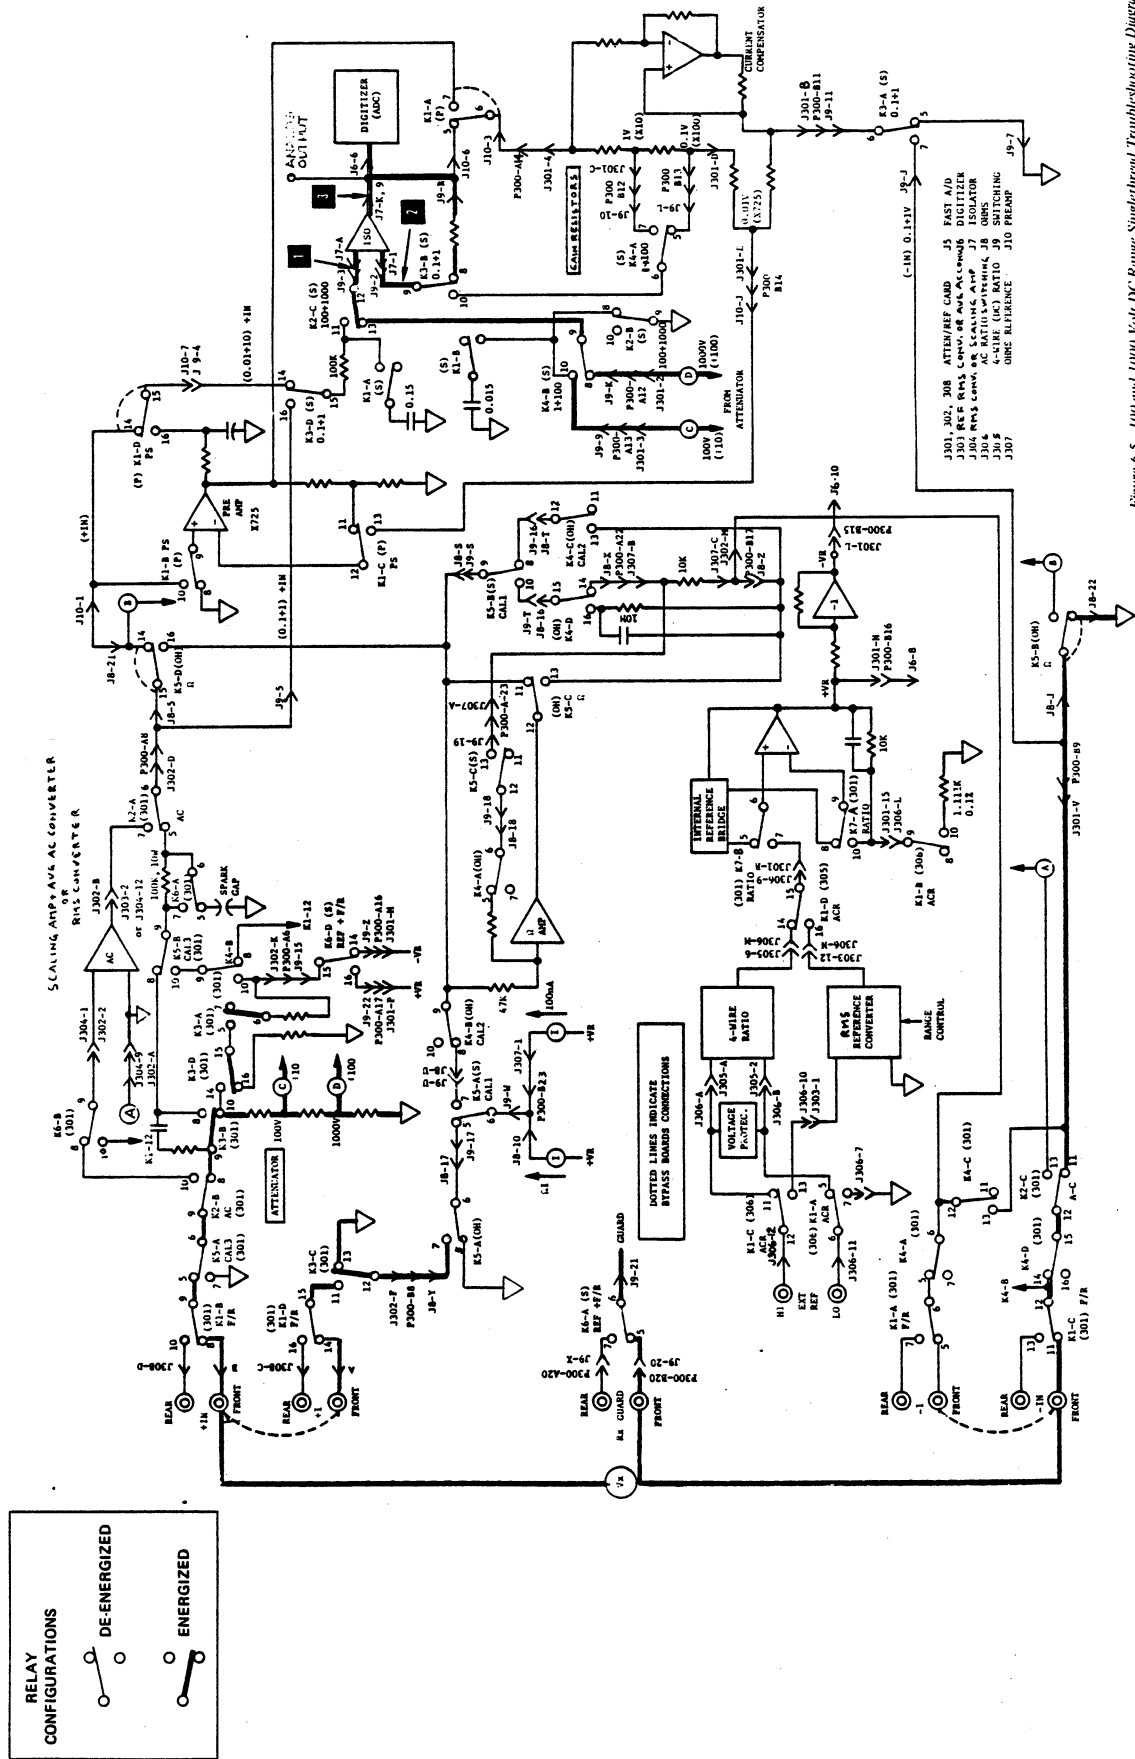


Figure 6.5 - 100 and 1000 Volt DC Range Singlethread Troubleshooting Diagram

Table 6.10 - Ohms Range Unit Performance Tests

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|---|---|-----------------------|------------|------------------------|----------------------|
| Function: Ohms Range: 10K Ω Connect 10K Ω Resistor in 4-Wire Hook-Up | All measurements are referenced to Analog Common (Mecca). | | | | |
| | Ohms Amplifier output | TP4 | 1 | Figure 6.7 | -10.0 VDC |
| | Ohms Amplifier input | TP5 | 2 | Figure 6.7 | 0.0 VDC (nominal) |
| | Isolator - input | TP1 | 3 | Figure 6.7 | -10.0 VDC |
| | Isolator output | TP2 | 4 | Figure 6.7 | -10.0 VDC |
| | Isolator + input | J7-A | 5 | Figure 6.7 | -10.0 VDC |
| Function: Ohms Range: 100K Ω Connect 100K Ω Resistor in 4-Wire Hook-Up | Ohms Amplifier output | TP4 | 1 | Figure 6.7 | -10.0 VDC |
| | Ohms Amplifier input | TP5 | 2 | Figure 6.7 | 0.0 VDC (nominal) |
| | Isolator - input | TP1 | 3 | Figure 6.7 | -10.0 VDC |
| | Isolator output | TP2 | 4 | Figure 6.7 | -10.0 VDC |
| | Isolator + input | J7-A | 5 | Figure 6.7 | -10.0 VDC |
| Function: Ohms Range: 1M Ω Connect 1M Ω Resistor in 4-Wire Hook-Up | Ohms Amplifier output | TP4 | 1 | Figure 6.7 | -10.0 VDC |
| | Ohms Amplifier input | TP5 | 2 | Figure 6.7 | 0.0 VDC (nominal) |
| | Isolator - input | TP1 | 3 | Figure 6.7 | -10.0 VDC |
| | Isolator output | TP2 | 4 | Figure 6.7 | -10.0 VDC |
| | Isolator + input | J7-A | 5 | Figure 6.7 | -10.0 VDC |

Table 6.10 - Ohms Range Unit Performance Tests (Continued)

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|---|-----------------------|-----------------------|------------|------------------------|----------------------|
| Function: Ohms Range: 10M Ω Connect 10M Ω Resistor in 4-Wire Hook-Up | Ohms Amplifier output | TP4 | 1 | Figure 6.7 | -10.0 VDC |
| | Ohms Amplifier input | TP5 | 2 | Figure 6.7 | 0.0 VDC (nominal) |
| | Isolator - input | TP1 | 3 | Figure 6.7 | -10.0 VDC |
| | Isolator output | TP2 | 4 | Figure 6.7 | -10.0 VDC |
| | Isolator + input | J7-A | 5 | Figure 6.7 | -10.0 VDC |
| Function: Ohms Range: 100M Ω Connect 100M Ω Resistor in 4-Wire Hook-Up | Ohms Amplifier output | TP4 | 1 | Figure 6.7 | -10.0 VDC |
| | Ohms Amplifier input | TP5 | 2 | Figure 6.7 | 0.0 VDC (nominal) |
| | Isolator - input | TP1 | 3 | Figure 6.7 | -10.0 VDC |
| | Isolator output | TP2 | 4 | Figure 6.7 | -10.0 VDC |
| | Isolator + input | J7-A | 5 | Figure 6.7 | -10.0 VDC |
| Function: Ohms Range: 100 Ω Connect 100 Ω Resistor in 4-Wire Hook-Up | Ohms Amplifier output | TP4 | 1 | Figure 6.8 | -1.0 VDC |
| | Ohms Amplifier input | TP5 | 2 | Figure 6.8 | 0.0 VDC (nominal) |
| | Isolator - input | TP1 | 3 | Figure 6.8 | 0.0 VDC (nominal) |
| | Isolator output | TP2 | 4 | Figure 6.8 | +10.0 VDC |
| | Isolator + input | J7-A | 5 | Figure 6.8 | 0.0 VDC (nominal) |

Table 6.10 - Ohms Range Unit Performance Tests (Continued)

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|---|-----------------------|-----------------------|------------|------------------------|-----------------------|
| Function: Ohms Range: 1K Ω Connect 1K Ω Resistor in 4-Wire Hook-Up | Ohms Amplifier output | TP4 | 1 | Figure 6.8 | -1.0 VDC |
| | Ohms Amplifier input | TP5 | 2 | Figure 6.8 | 0.0 VDC (nominal) |
| | Isolator - input | TP1 | 3 | Figure 6.8 | 0.0 VDC (nominal) |
| | Isolator + output | TP2 | 4 | Figure 6.8 | +10.0 VDC |
| | Isolator input | J7-A | 5 | Figure 6.8 | 0.0 VDC (nominal) |
| Function: Ohms Range: 10 Ω Connect 10 Ω Resistor in 4-Wire Hook-Up | Ohms Amplifier output | TP4 | 1 | Figure 6.9 | -0.1 VDC |
| | Ohms Amplifier input | TP5 | 2 | Figure 6.9 | 0.0 VDC (nominal) |
| | Isolator - input | TP1 | 3 | Figure 6.9 | 0.00 VDC (nominal) |
| | Isolator output | TP2 | 4 | Figure 6.9 | +10.0 VDC |
| | Isolator + input | J7-A | 5 | Figure 6.9 | 0.0 VDC (nominal) |
| Function: Ohms Range: 1 Ω Connect 1 Ω Resistor in 4-Wire Hook-Up | Ohms Amplifier output | TP4 | 1 | Figure 6.10 | -10.0 mVDC |
| | Ohms Amplifier input | TP5 | 2 | Figure 6.10 | 0.0 VDC |
| | Isolator - input | TP1 | 3 | Figure 6.10 | -7.2 VDC |
| | Isolator output | TP2 | 4 | Figure 6.10 | -7.2 VDC |
| | Isolator + input | J7-A | 5 | Figure 6.10 | -7.2 VDC |

1870
1871
1872
1873
1874
1875
1876
1877
1878
1879
1880
1881
1882
1883
1884
1885
1886
1887
1888
1889
1890
1891
1892
1893
1894
1895
1896
1897
1898
1899
1900

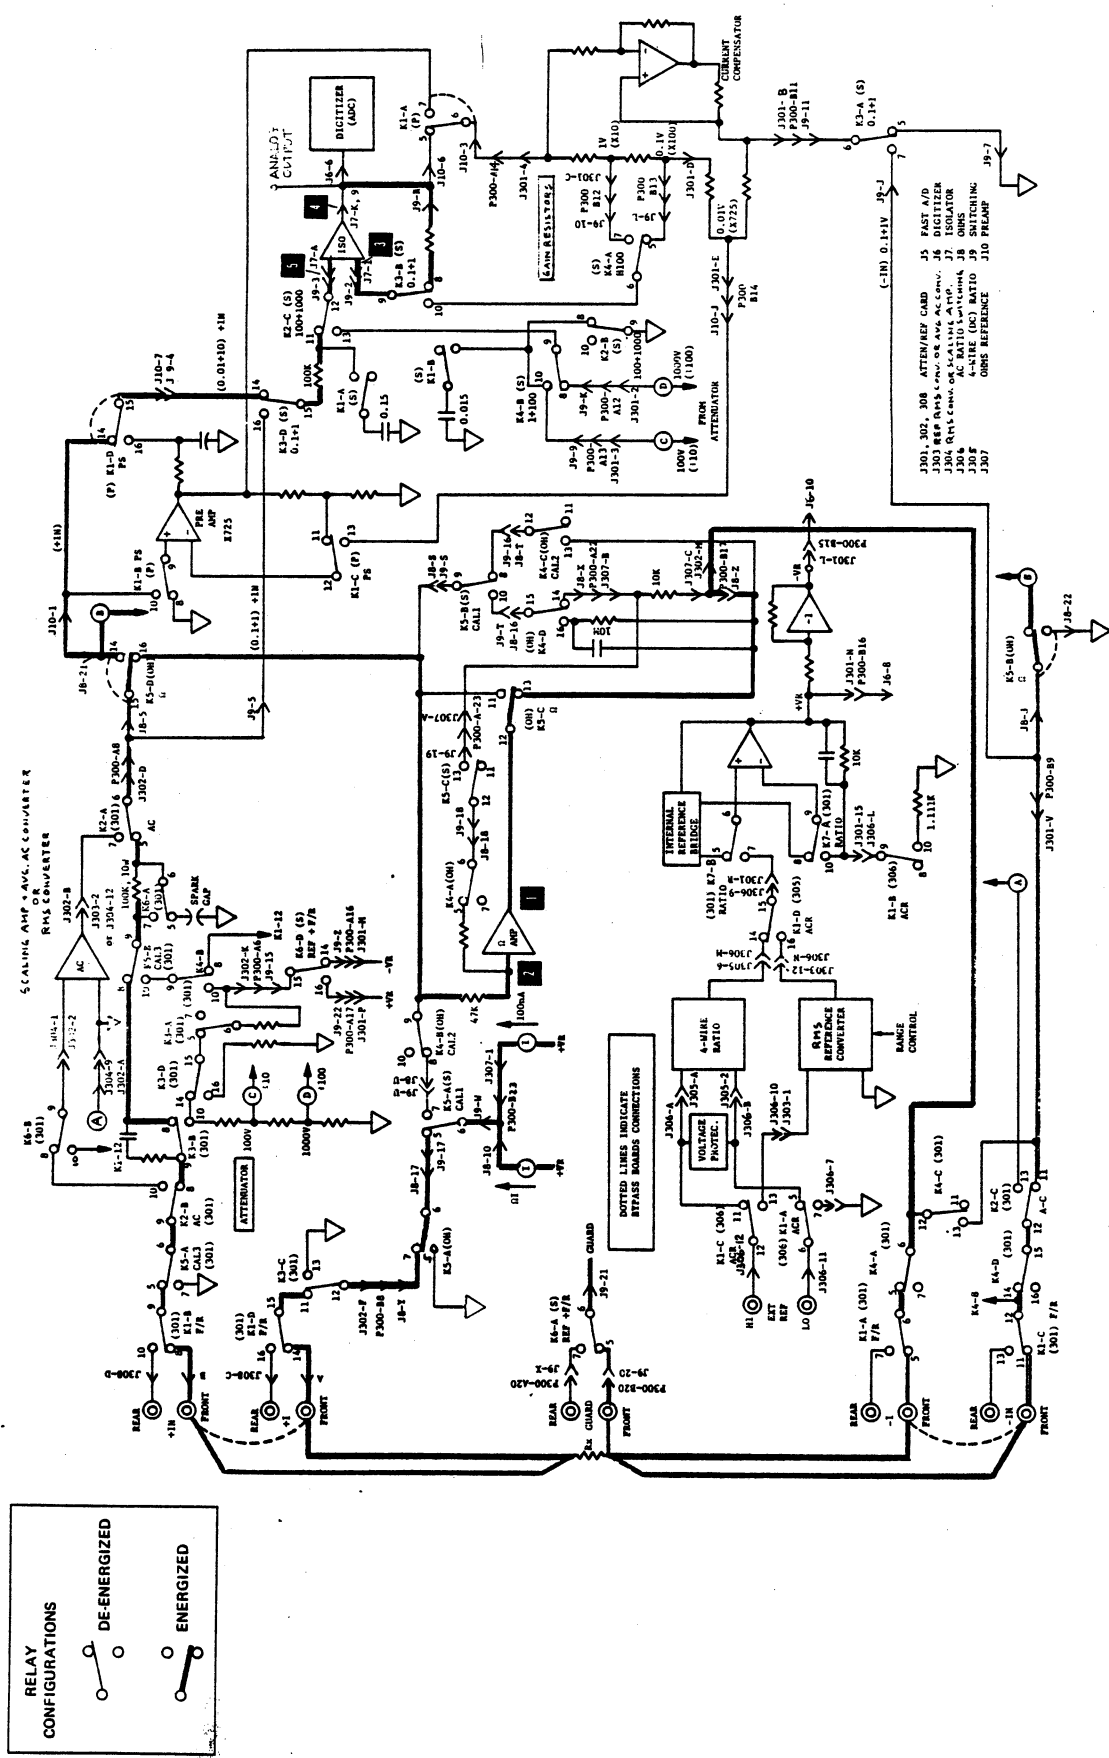


Figure 6-7 - 100K, 100M, 100M Ranges Singlethread Troubleshooting Diagram

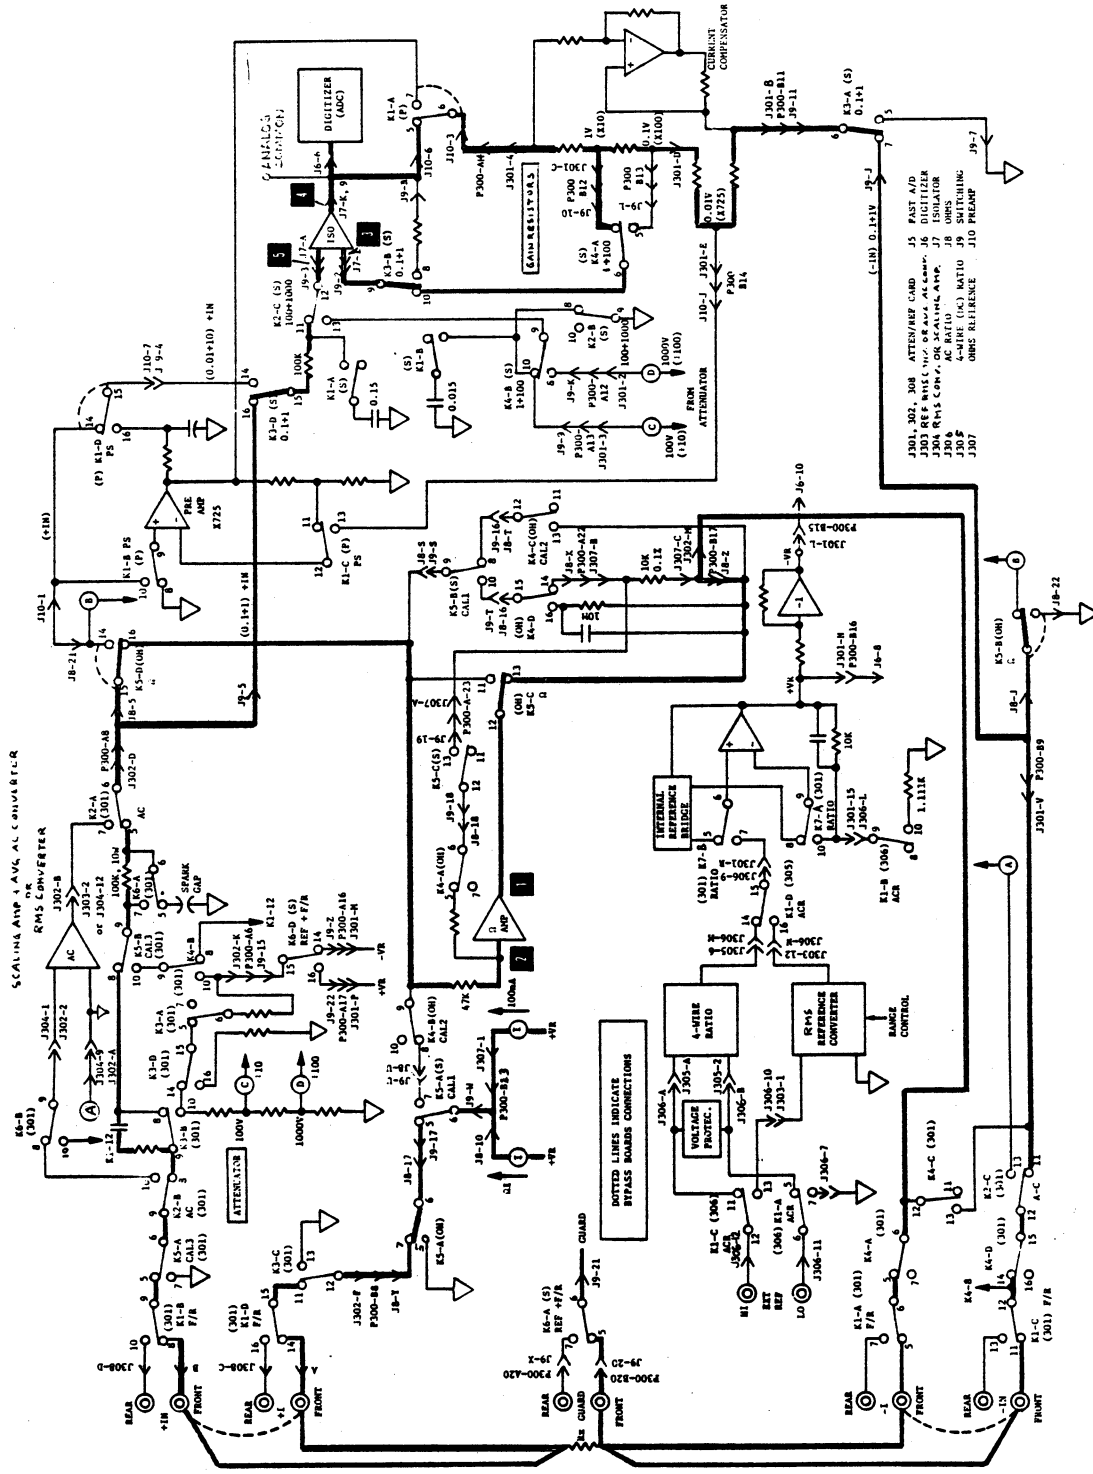
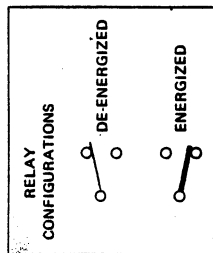


Figure 6.8 - 100, 1K Ohm Ranges Single Thread Troubleshooting Diagram

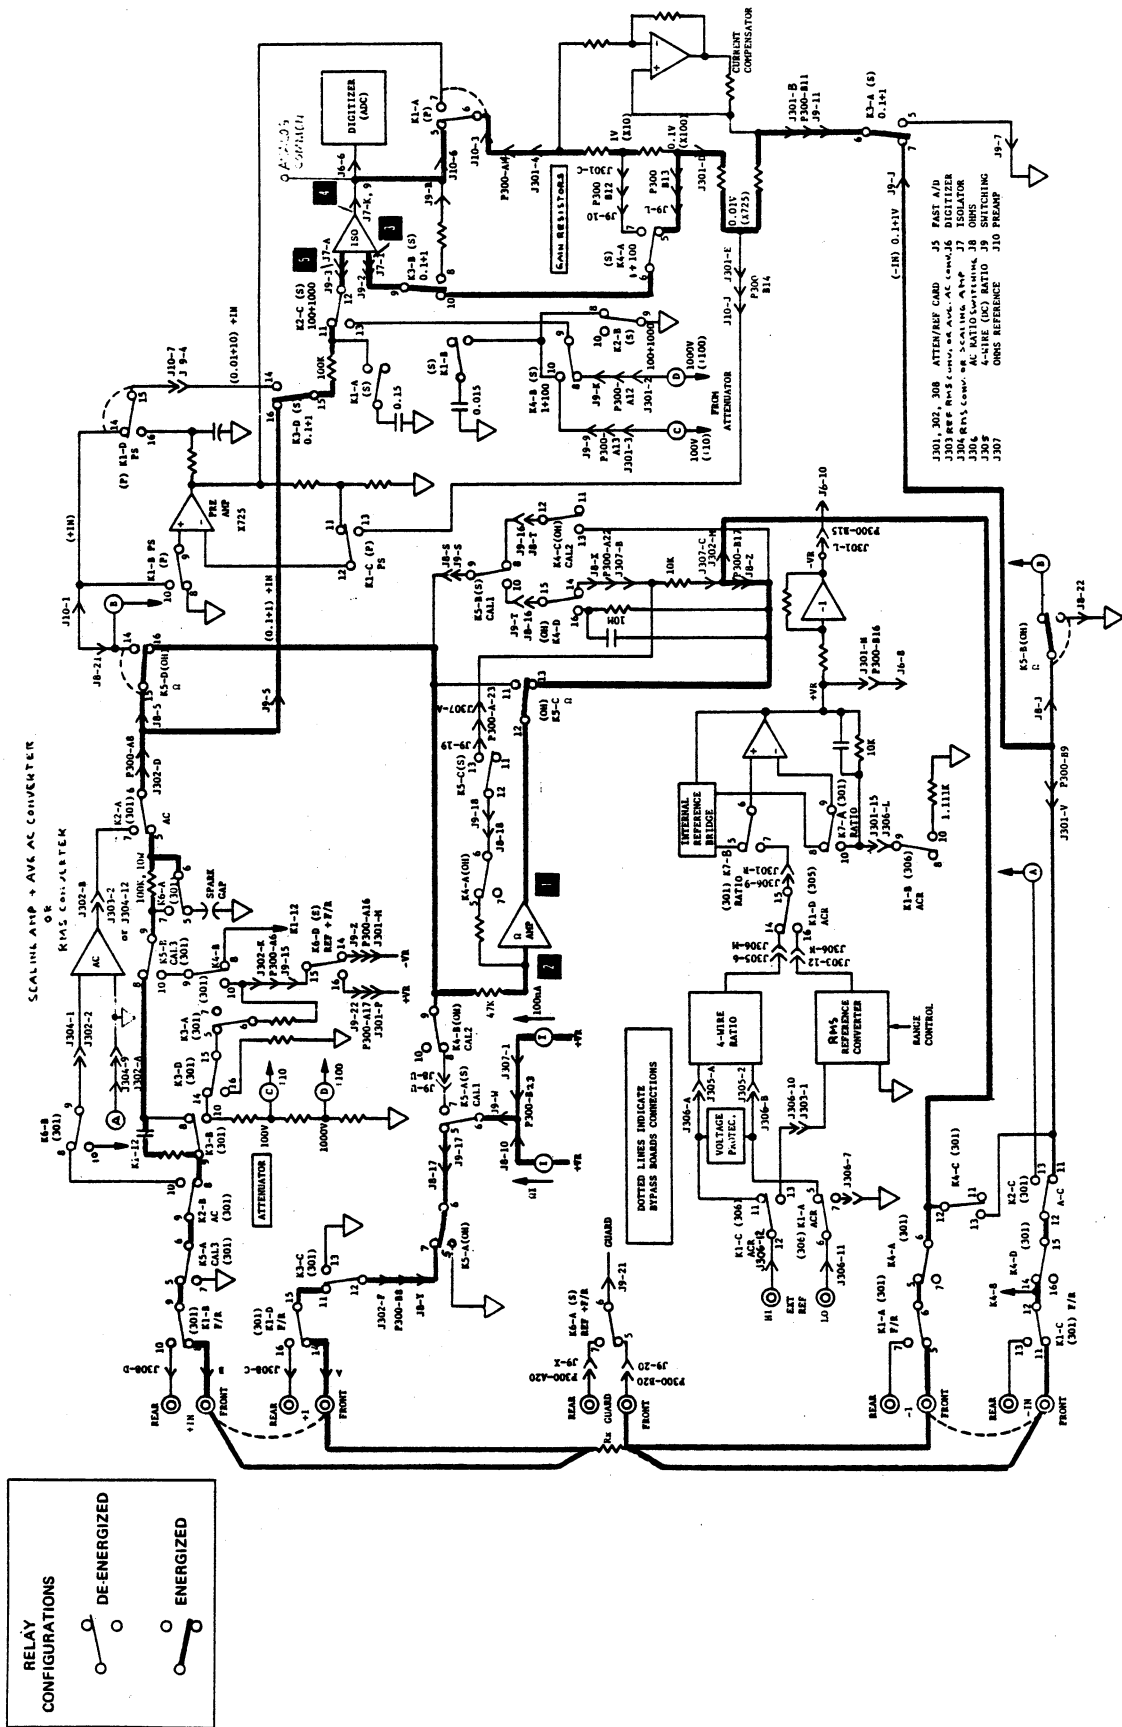


Figure 6.9 - 10 Ohm Range Singlethread Troubleshooting Diagram

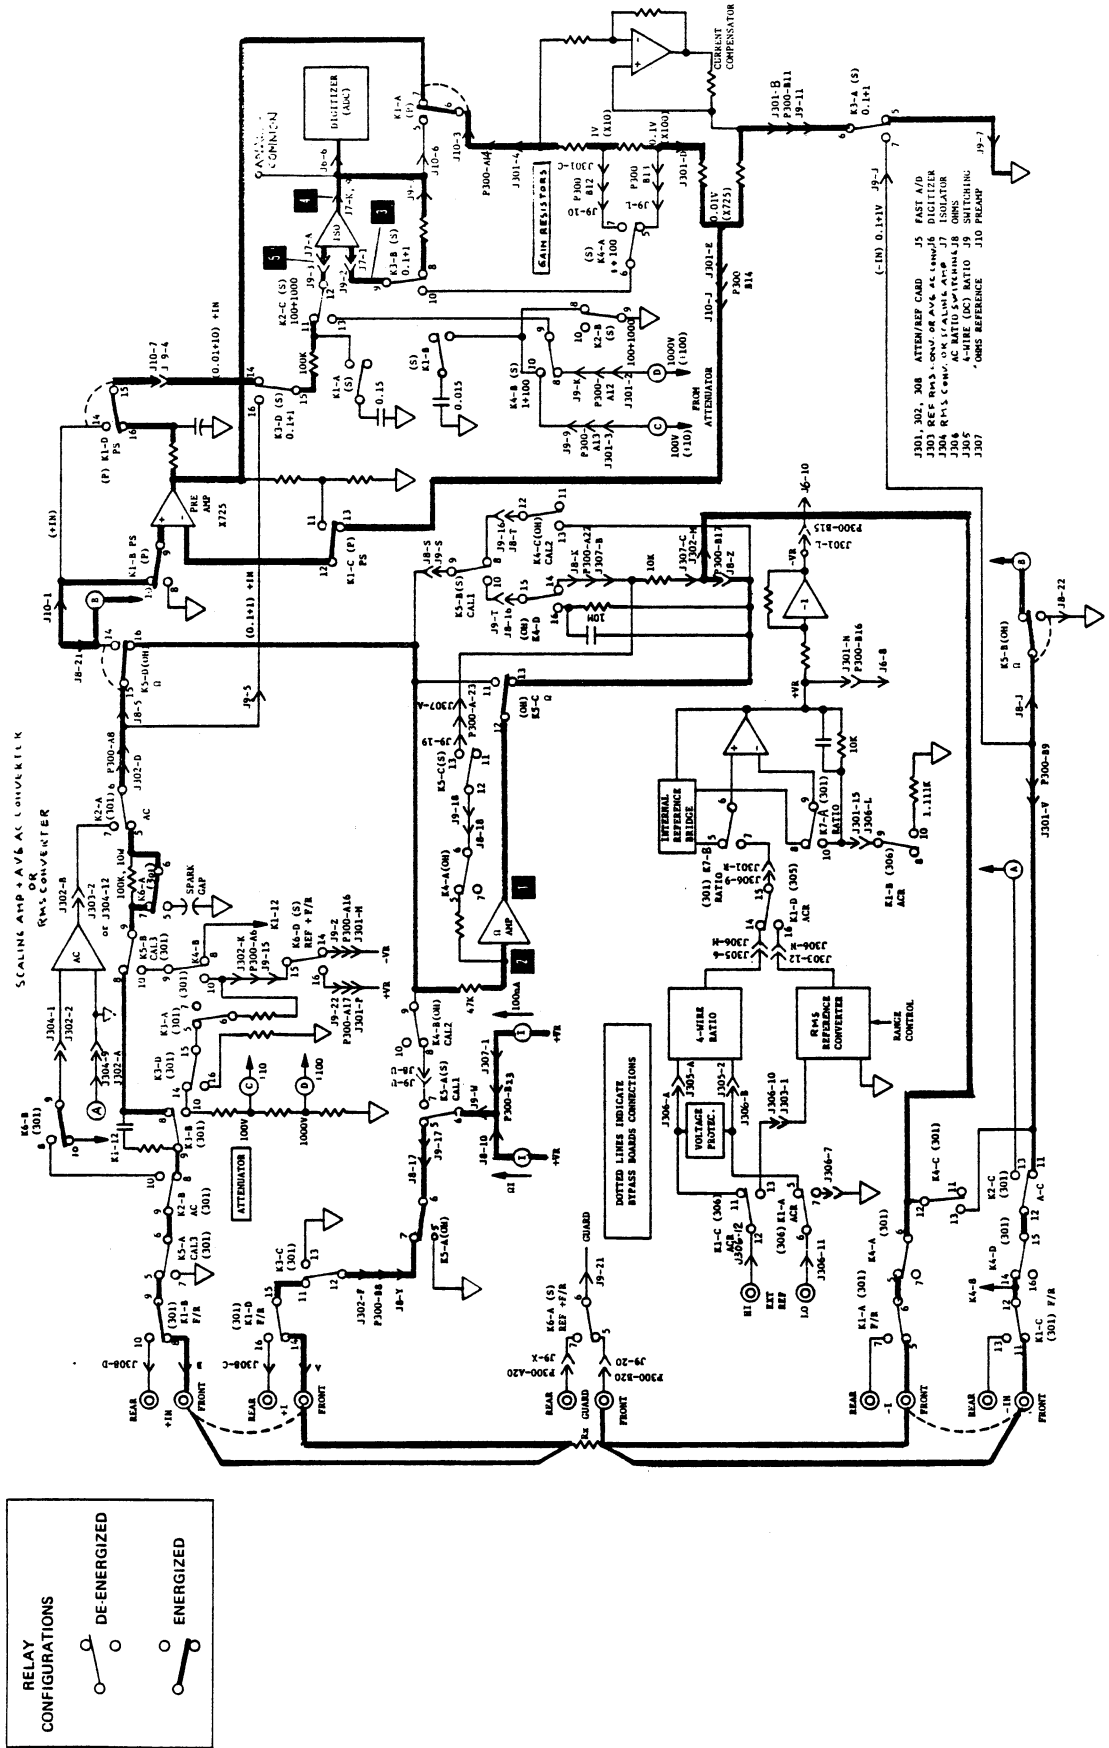


Figure 6.10 - 1 Ohm Range Singlethread Troubleshooting Diagram

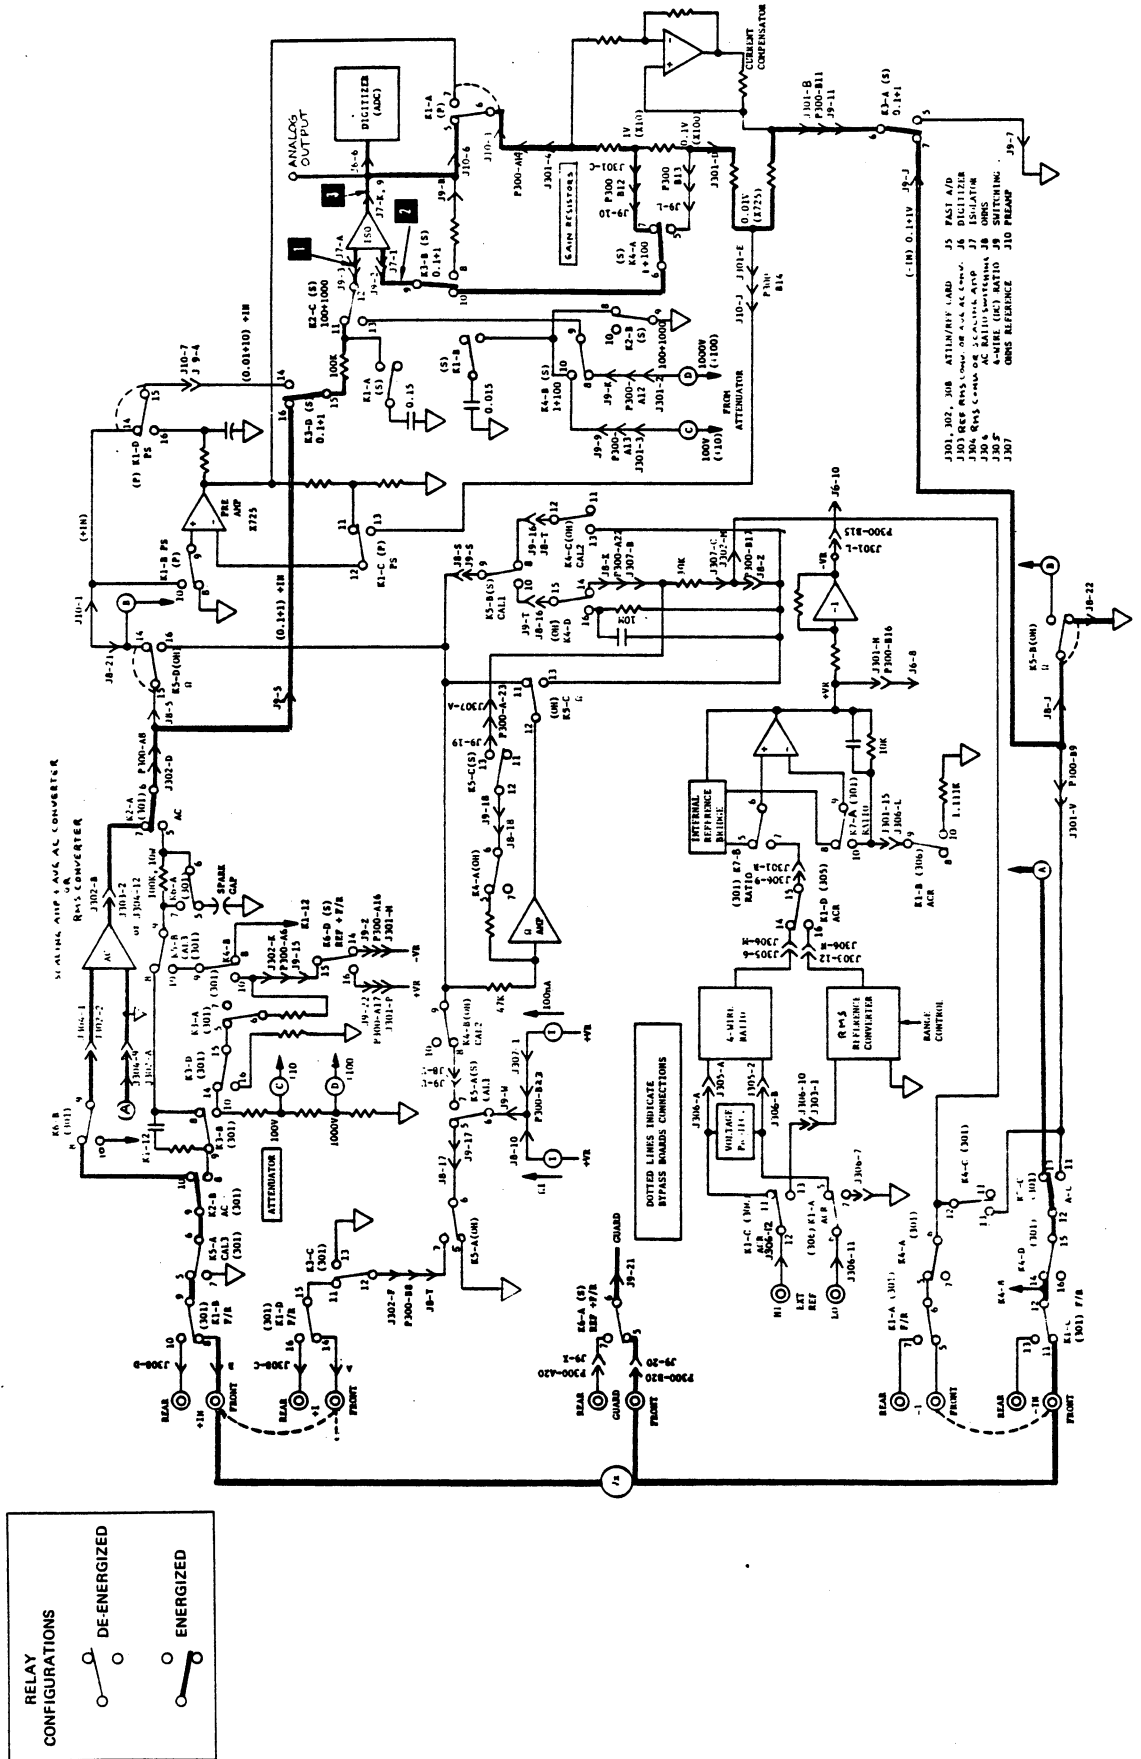


Figure 6.11 - AC Volts Singlethread Troubleshooting Diagram

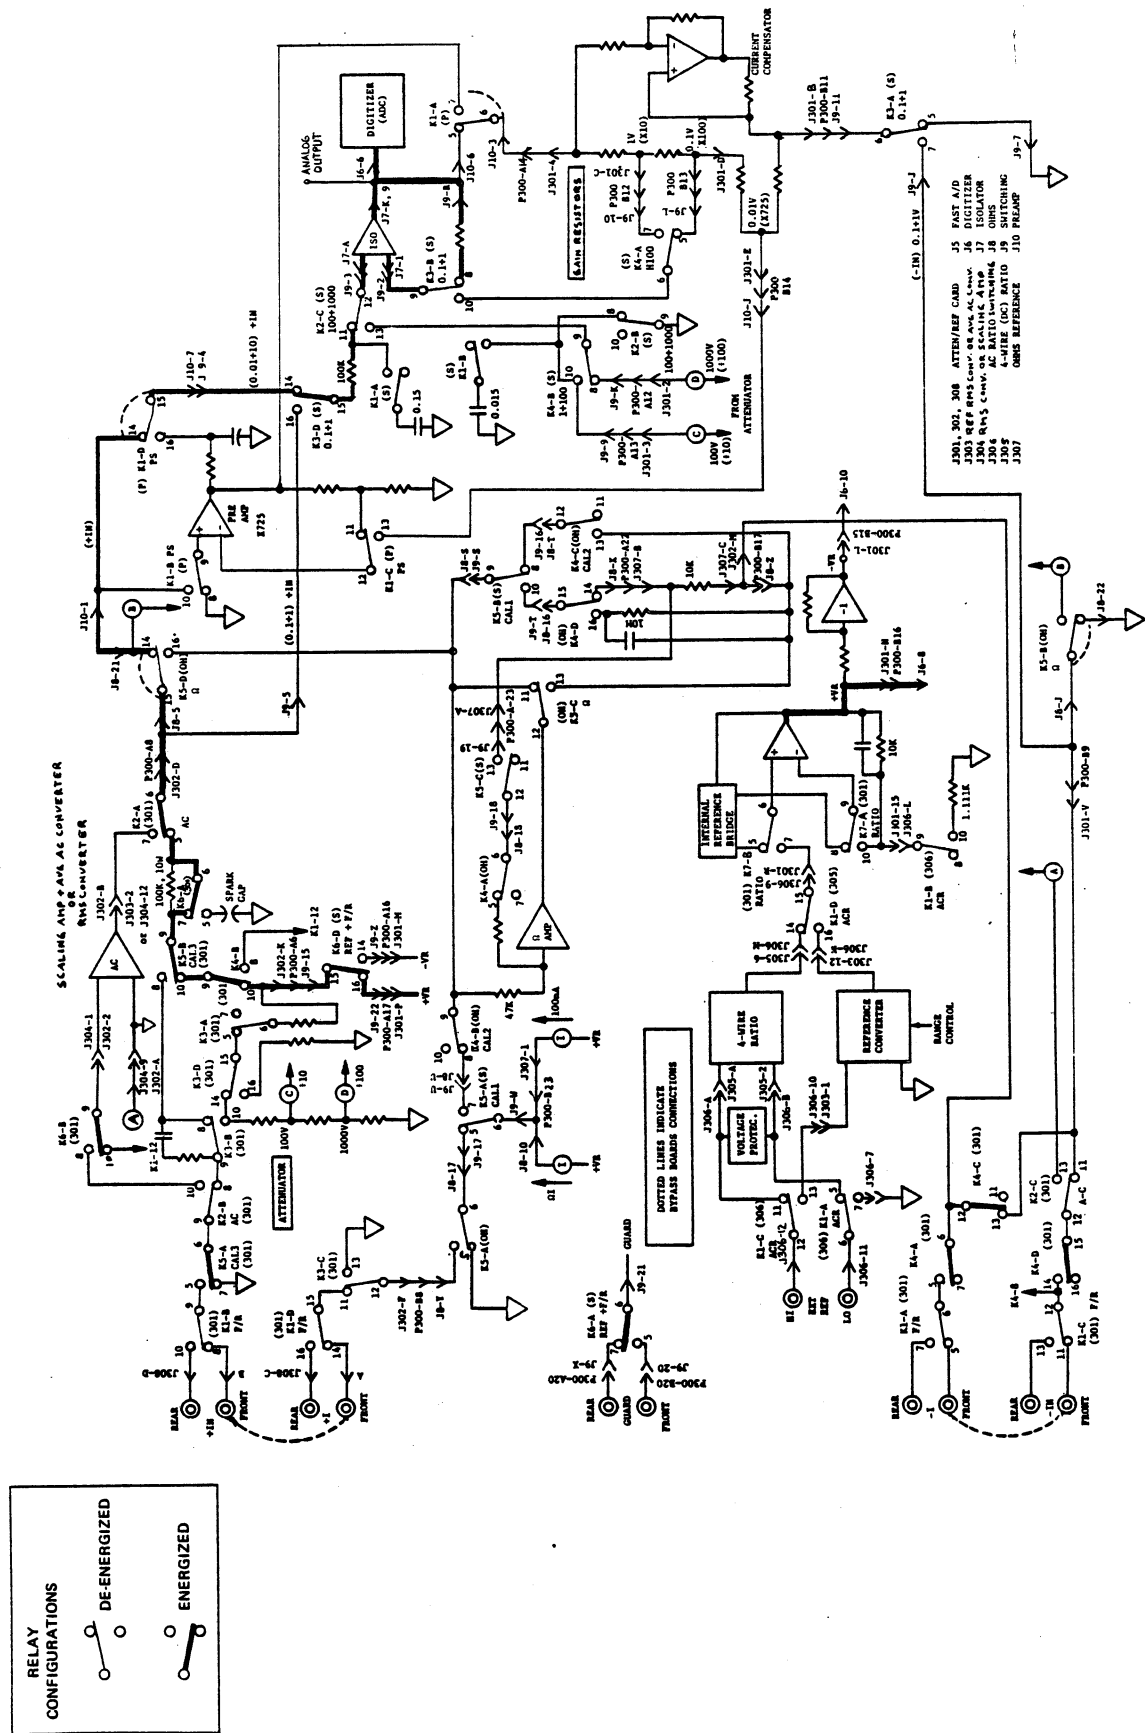


Figure 6.12 - Auto-Cal Configuration - DC CAL 1

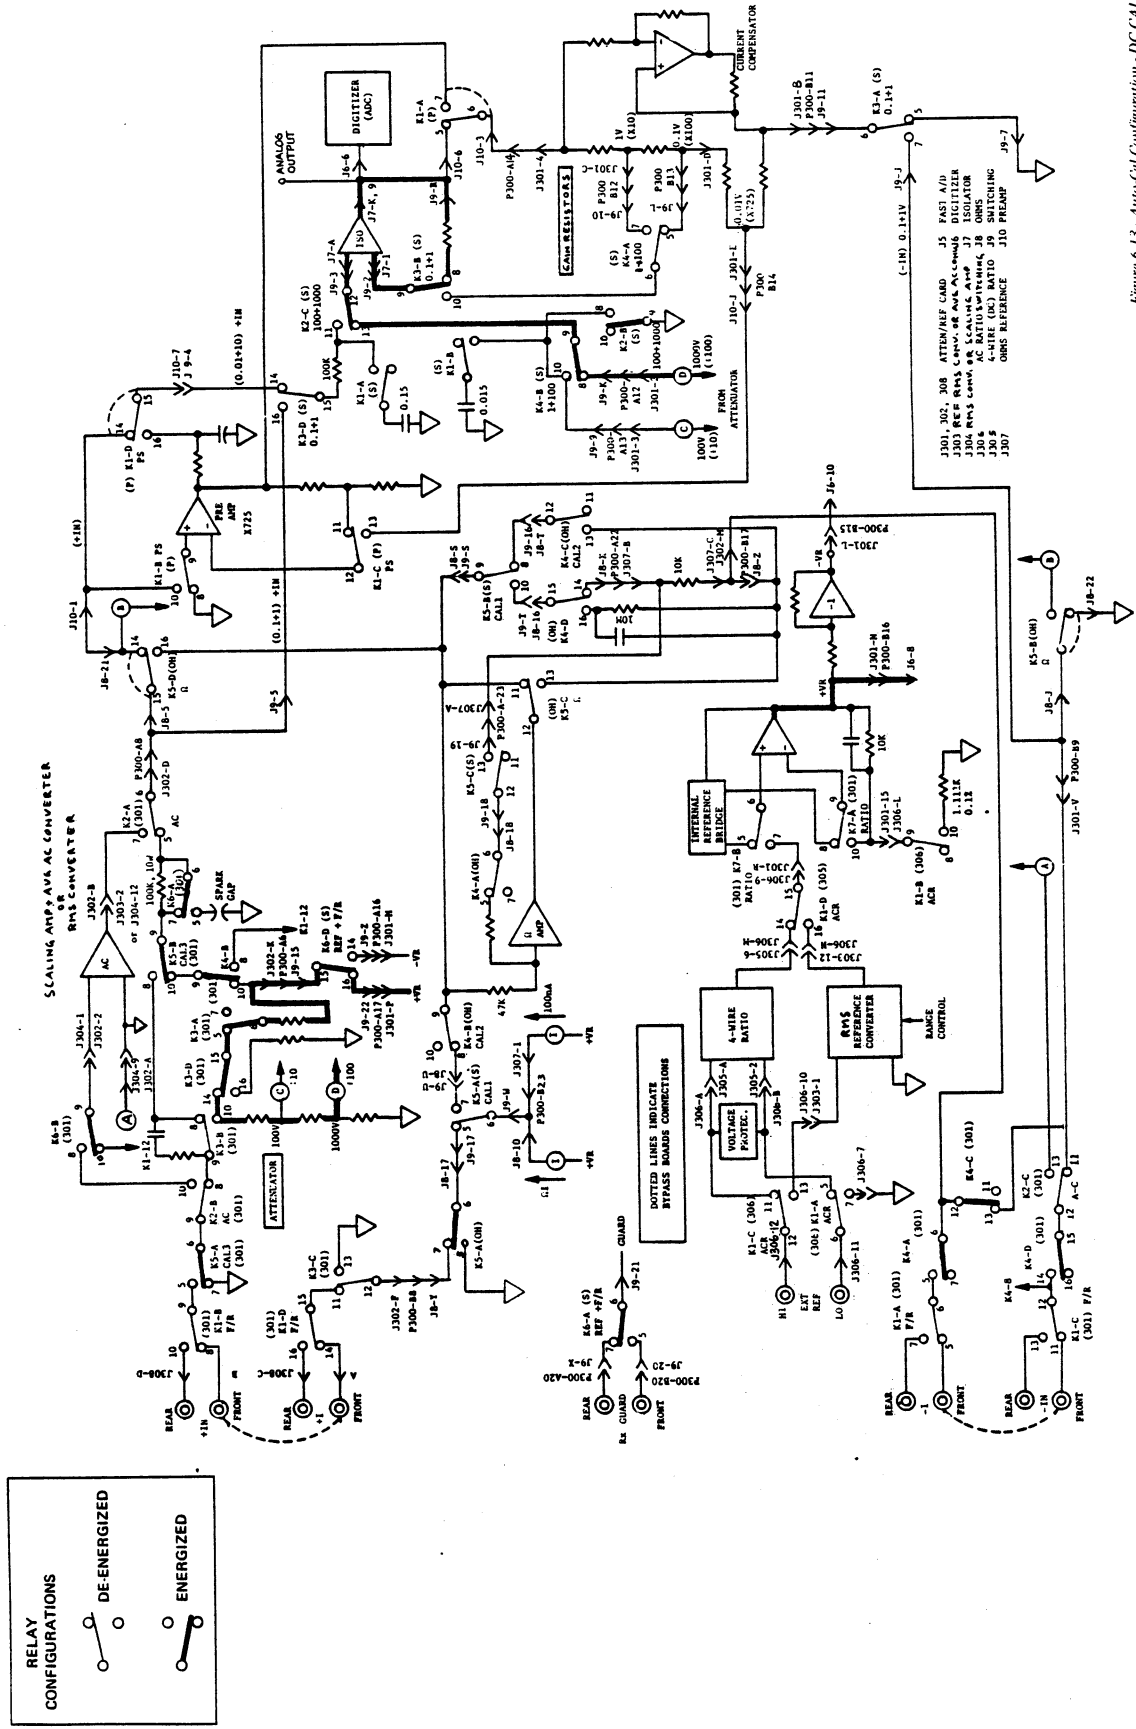


Figure 6.13 - Auto-Cal Configuration - DC Cal. 2

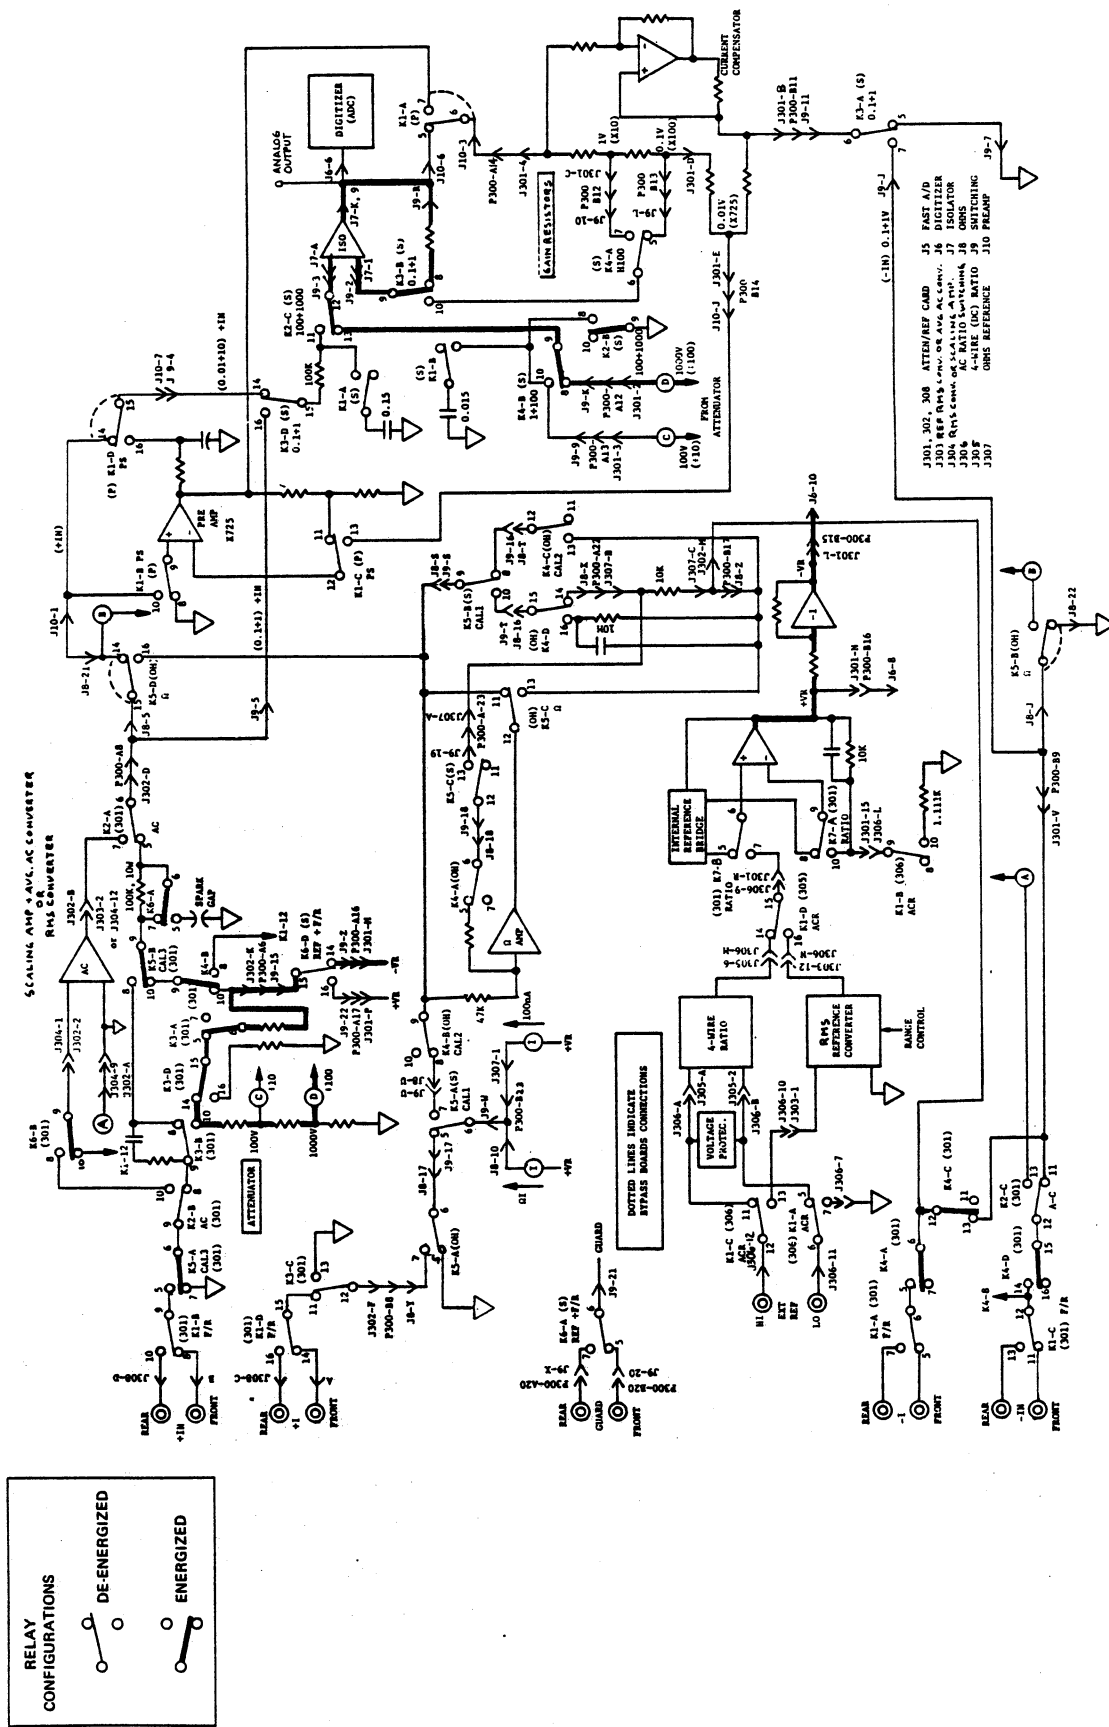


Figure 6.15 - Auto-Cal Configuration - DC Cal. 4

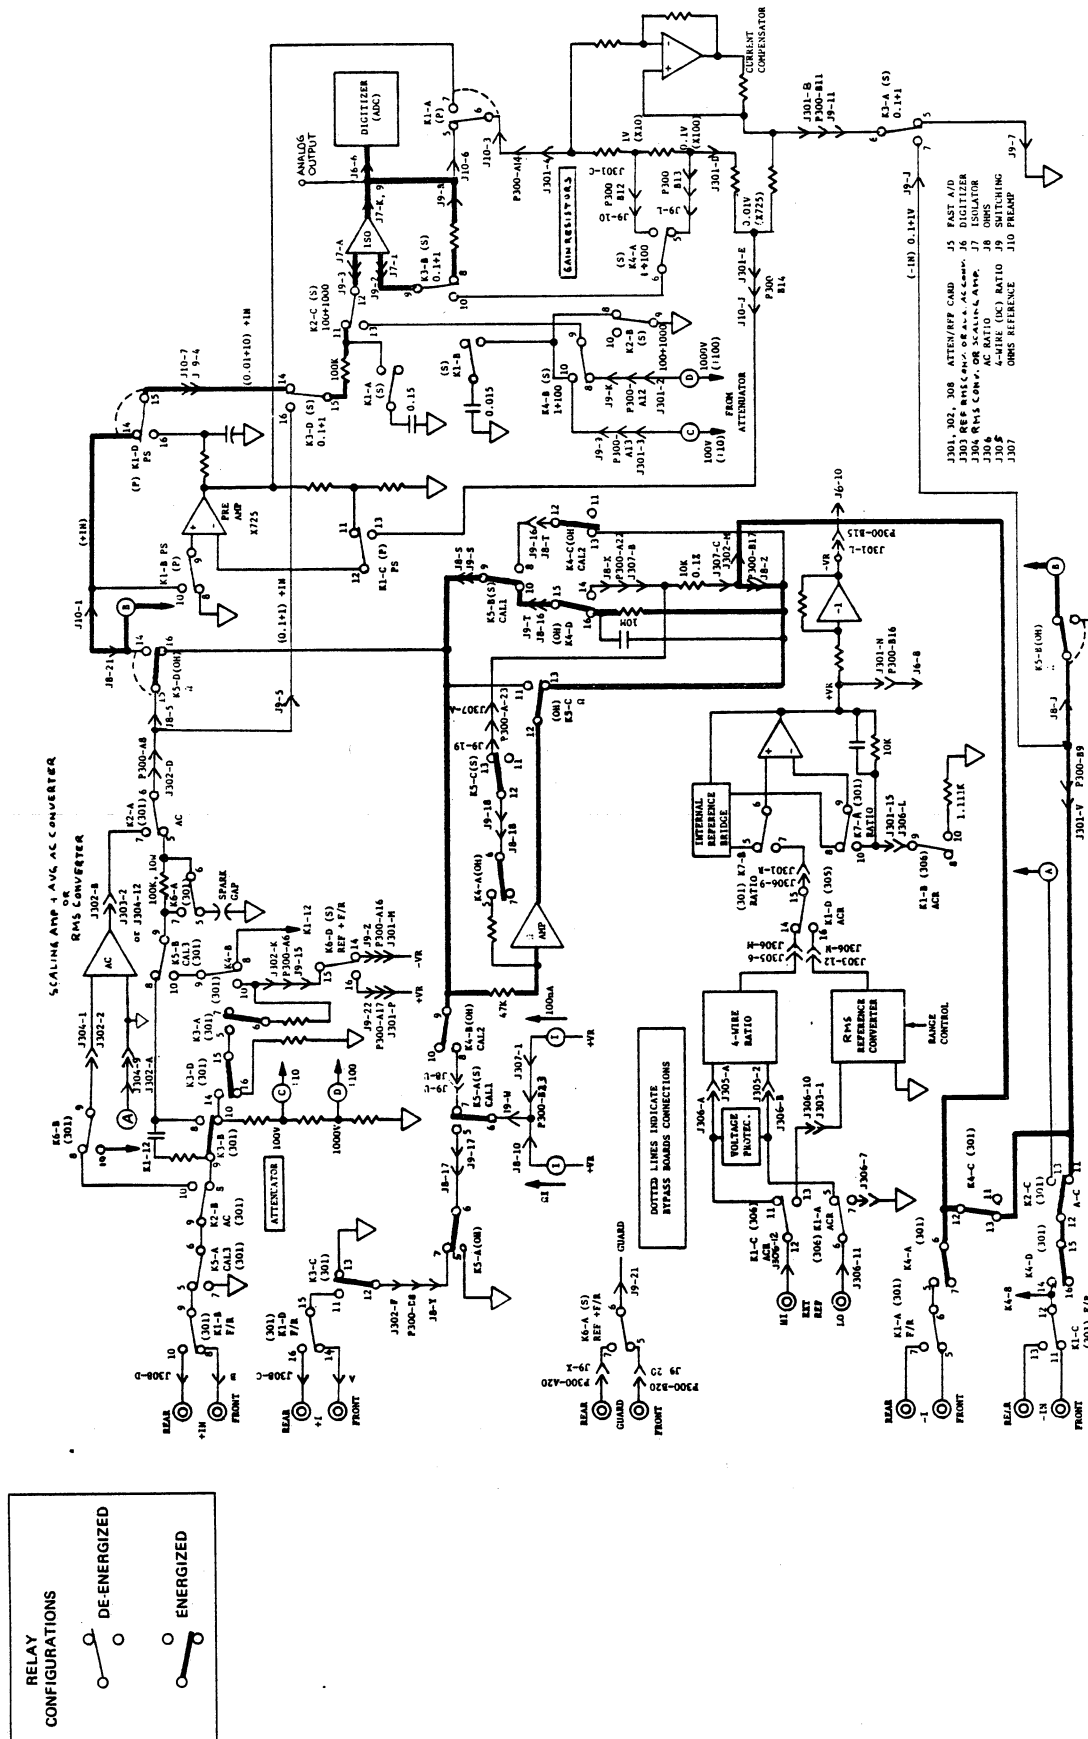


Figure 6.16 - Auto-Cal Configuration - OHMS CAL. 4

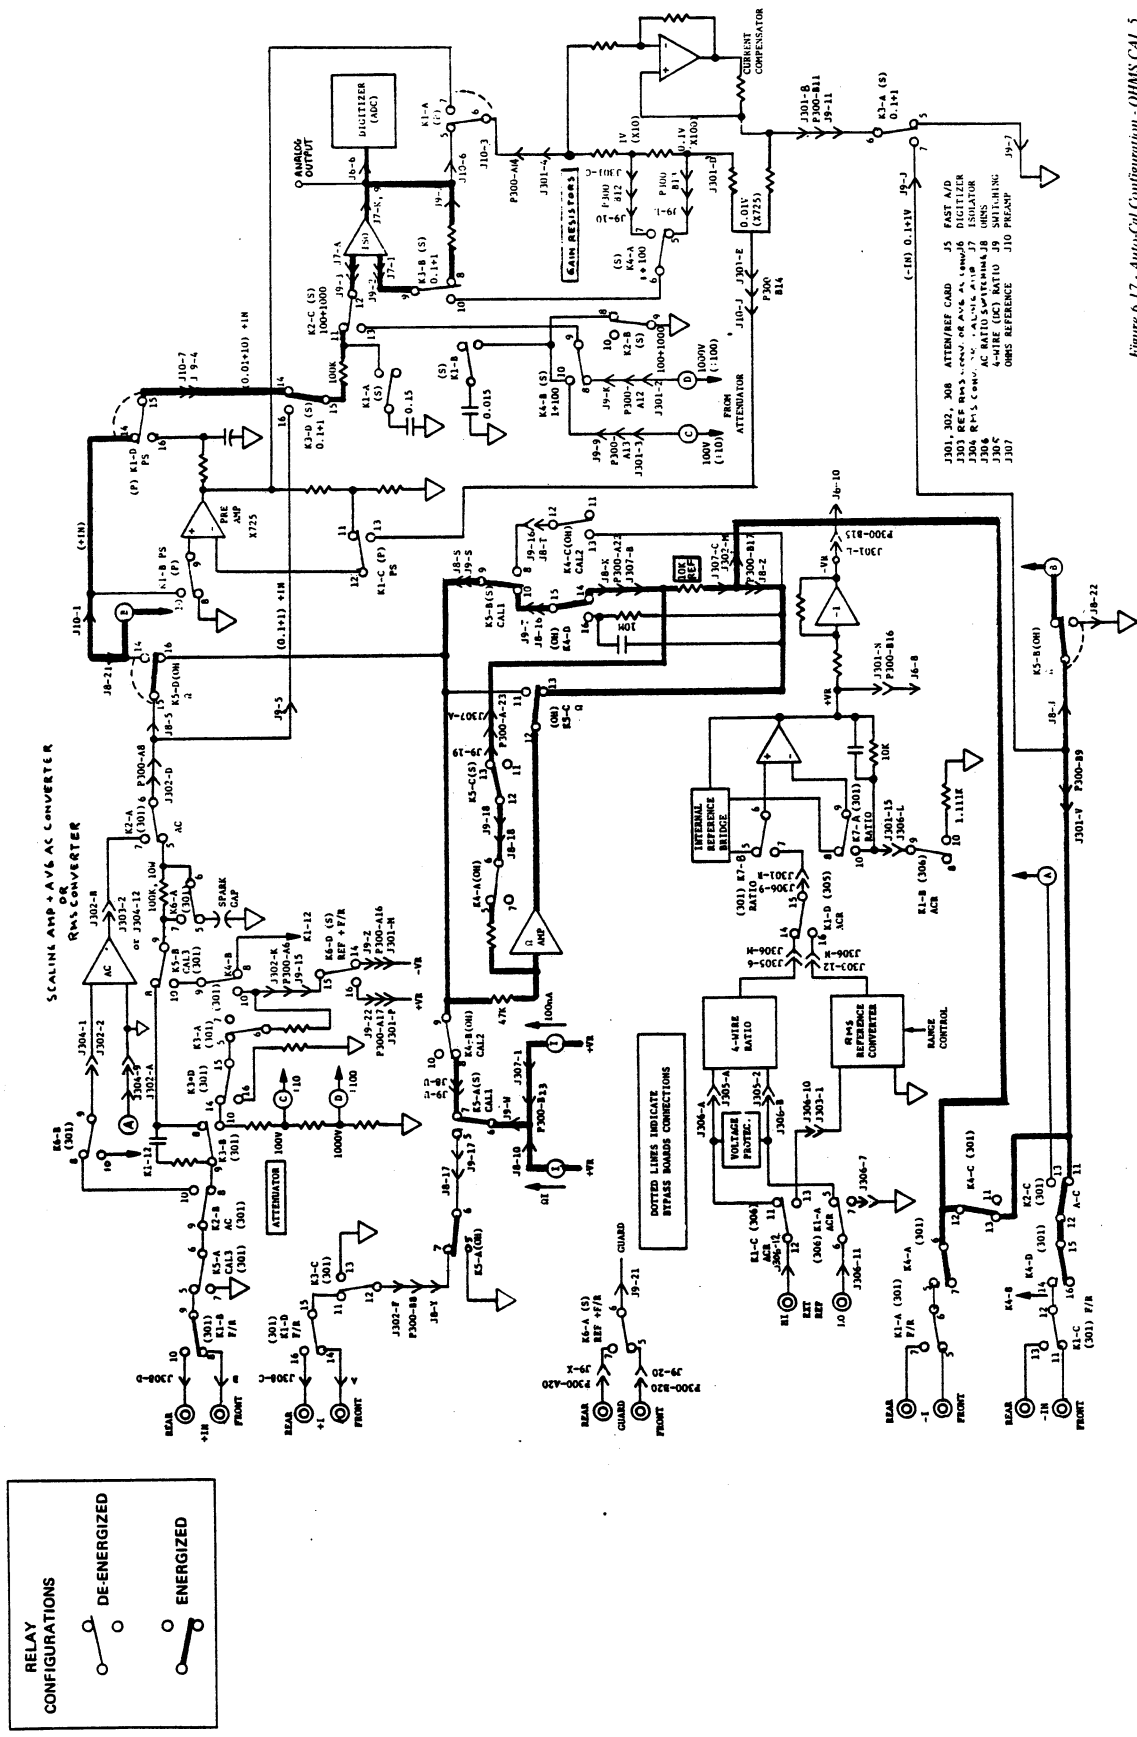


Figure 6.17 - Auto-Cal Configuration - OHMS CAL. 5

Table 6.11 - Display/Keyboard Subassembly Performance Test

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|--|---------------------|-----------------------|------------|------------------------|------------------------------------|
| Function: DC Range: Auto | | CR17 | 1 | Figure 6.18 | DC annunciator lit |
| Function: AC Range: Auto | | CR18 | 2 | Figure 6.18 | AC annunciator lit |
| Function: Ohms Range: 10-100 | | CR19 | 3 | Figure 6.18 | Ohms annunciator lit |
| Function: Ohms Range: 1K-100K Input Terminals: +IN/+I terminals connected with a copper jumper to -IN/-I | | LED1 through LED9 | 4 | Figure 6.18 | Display LED should indicate 0 ohms |

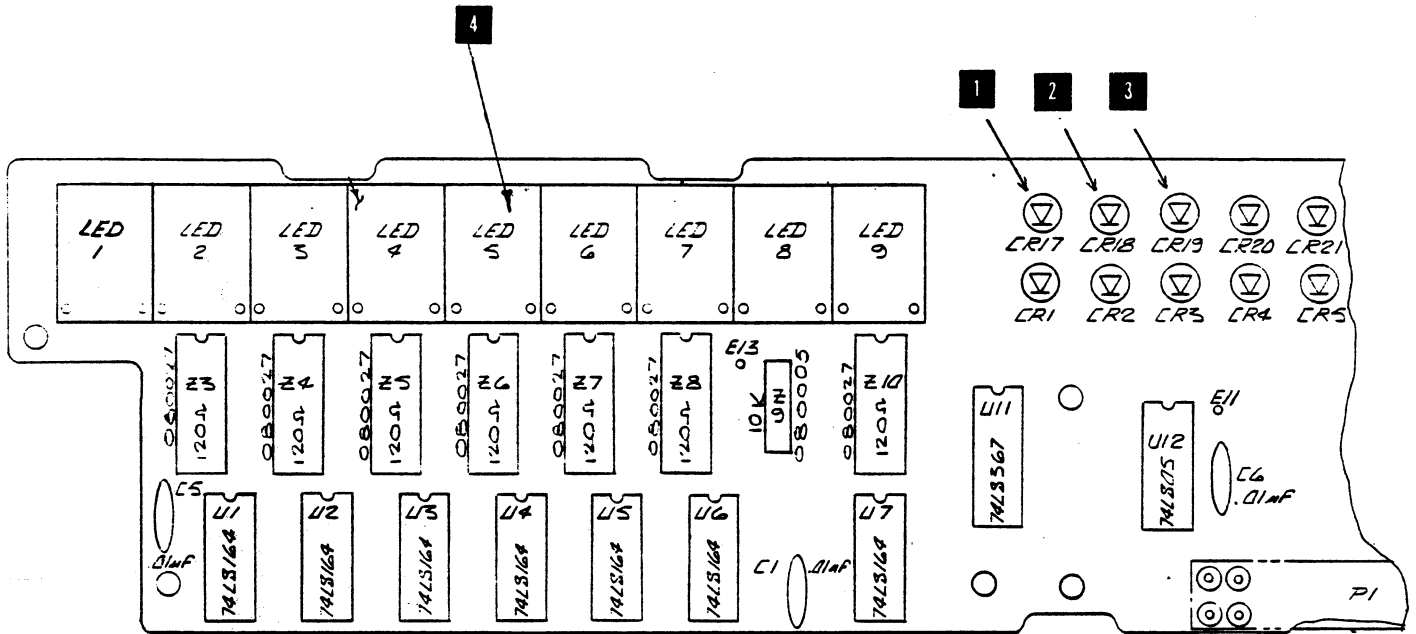


Figure 6.18 - Display/Keyboard Component Location Diagram

Table 6.12 - GPIB IEEE Subassembly Performance Test

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|--|--|-----------------------|------------|------------------------|----------------------|
| REQUIREMENT The Controller makes device a listener | This performance test assumes that the DMM is operating with an HP 9825 calculator/controller Program: wrt 700" "; CLI7. All waveform measurements (except 2 and 3) are synced to ATN negative edge. | | | | |
| | ATN | U25-12 | 1 | Figure 6.19 | TTL High Level |
| | NRFD | U29-4 | A | Figure 6.19 | Waveform 4 |
| | DAV | U29-3 | B | Figure 6.19 | Waveform 5 |
| | NDAC | U29-2 | C | Figure 6.19 | Waveform 6 |
| | LIS Flip-Flop | U7-9 | D | Figure 6.19 | Waveform 1 |
| | Address Compare | U18-8 | E | Figure 6.19 | Waveform 2 |
| | Qualifier Inverter | U25-8 | F | Figure 6.19 | Waveform 3 |

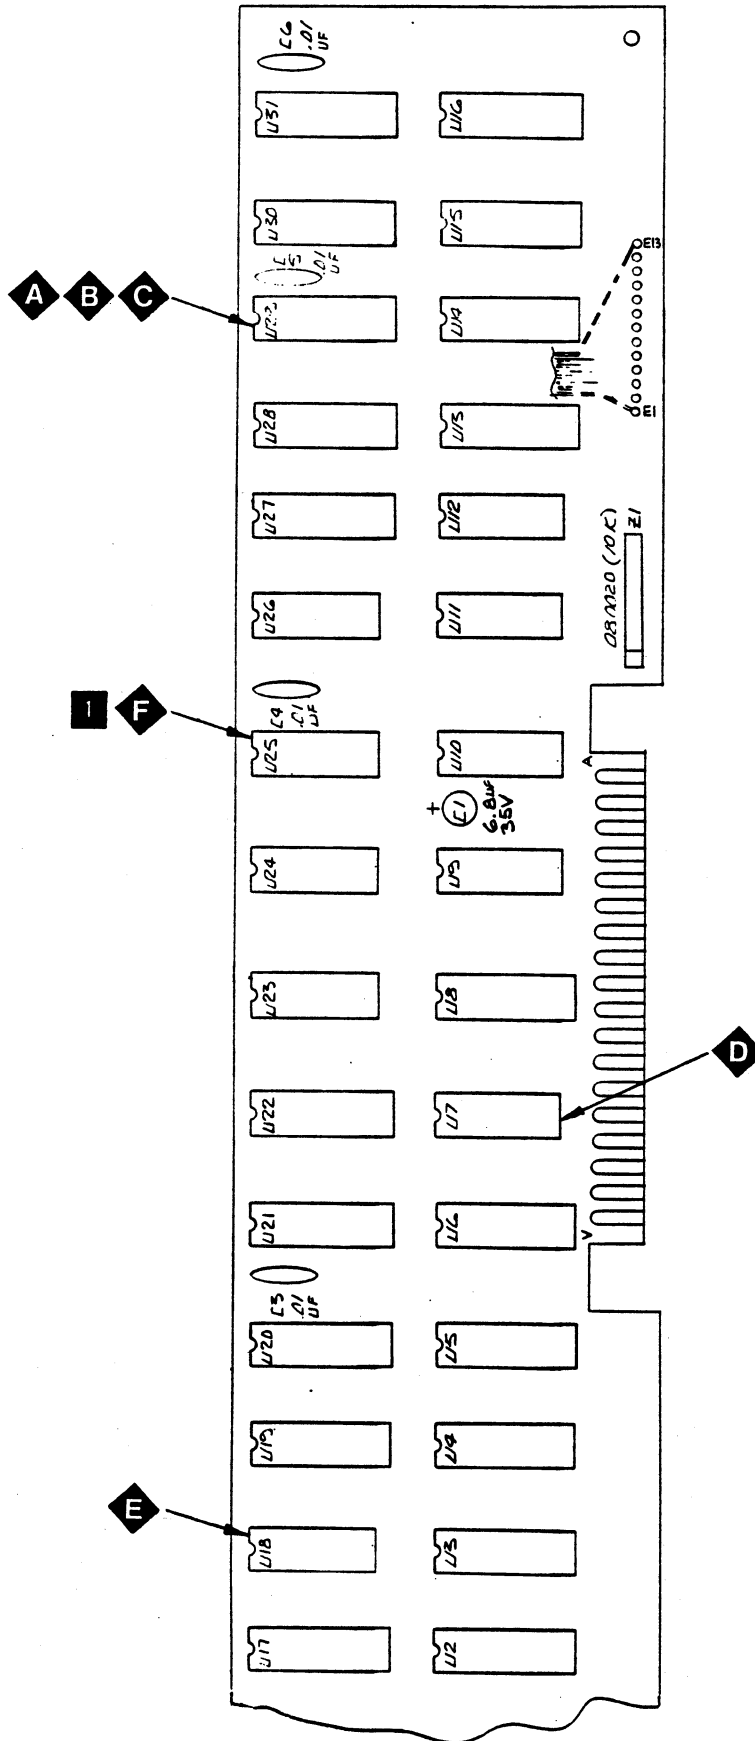


Figure 6.19 - GPIB Component Location Diagram

WAVEFORMS FOR TABLE 6.12

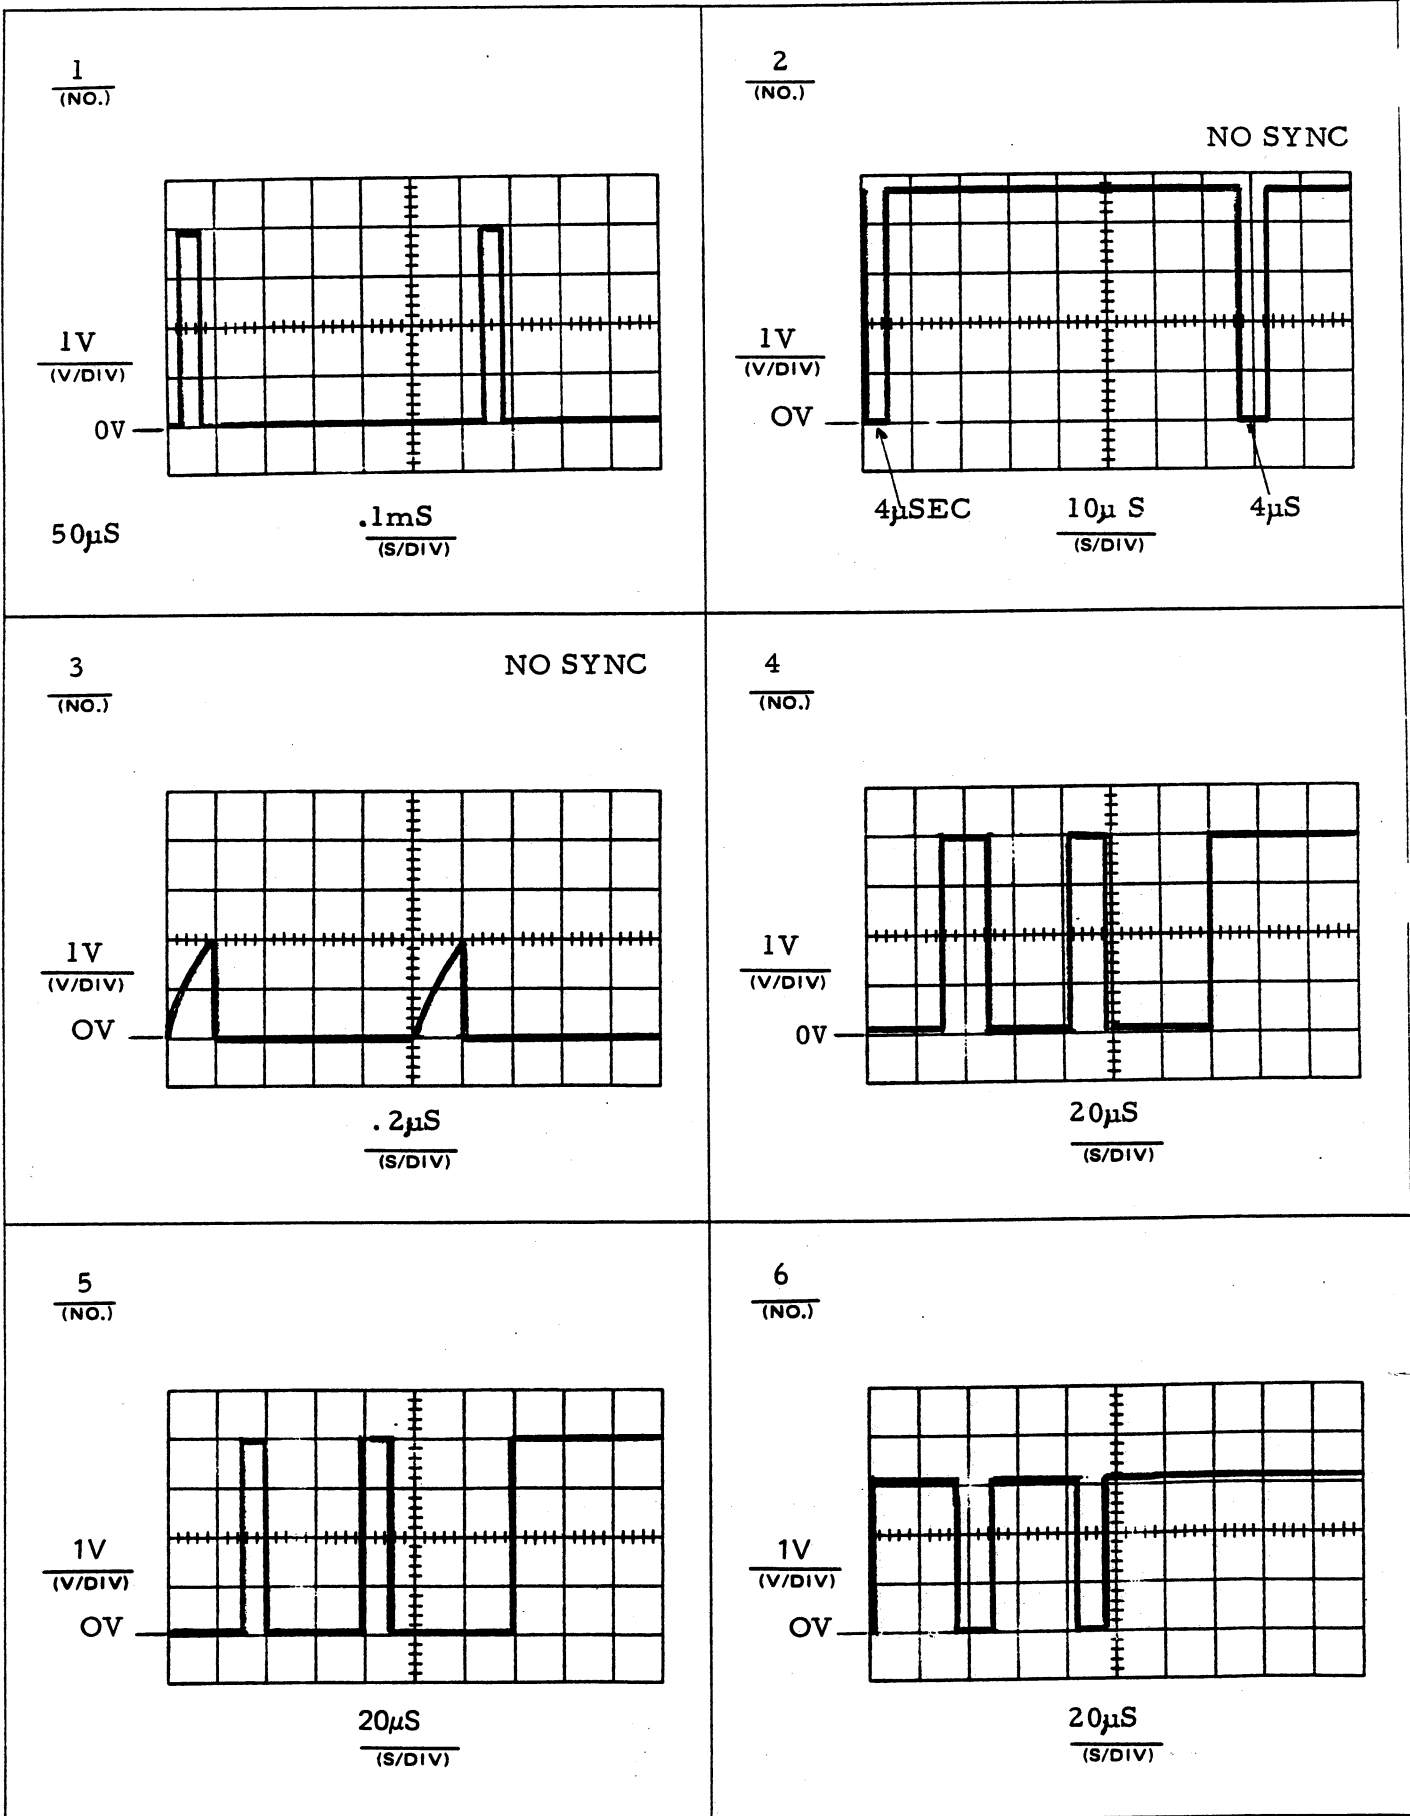


Table 6.13 - Computer 1 Subassembly Performance Test

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|--|------------------------------|------------------|------------------------------|----------------------|------------------------------|------------------|------------------------------|------------------|------------------------------|------------------|------------------------------|------------------|----|---|-------|----|---|----|---|----|----|---|--------|----|---|----|---|---|---|---|----------|----|---|----|---|---|--------|---|-----|----|---|----|---|---|----|----|-----|----|---|----|---|---|----|---|----|----|---|----|--|--|
| Function: DC Range: Auto Input Terminals: +10V DC | Ø2 | U2-8 | A | Figure 6.20 | Waveform 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Cycle Power Switch | Display should read "6000" | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Press and Hold <input type="checkbox"/> DC | After five seconds the "6000" on the display should be replaced by "7" | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| In a "make before break" fashion, press the keys in the order shown in the chart and verify that the appropriate number is displayed. Do not press the "Shift" key. | <table border="1"> <thead> <tr> <th><input type="checkbox"/> Key</th> <th>Number Displayed</th> <th><input type="checkbox"/> Key</th> <th>Number Displayed</th> <th><input type="checkbox"/> Key</th> <th>Number Displayed</th> <th><input type="checkbox"/> Key</th> <th>Number Displayed</th> </tr> </thead> <tbody> <tr> <td>DC</td> <td>7</td> <td>STORE</td> <td>15</td> <td>9</td> <td>22</td> <td>3</td> <td>10</td> </tr> <tr> <td>AC</td> <td>4</td> <td>RECALL</td> <td>12</td> <td>8</td> <td>21</td> <td>2</td> <td>9</td> </tr> <tr> <td>Ω</td> <td>3</td> <td># DIGITS</td> <td>19</td> <td>7</td> <td>18</td> <td>1</td> <td>2</td> </tr> <tr> <td>FILTER</td> <td>0</td> <td>C/S</td> <td>16</td> <td>6</td> <td>17</td> <td>0</td> <td>1</td> </tr> <tr> <td>DN</td> <td>11</td> <td>EXP</td> <td>23</td> <td>5</td> <td>14</td> <td>.</td> <td>6</td> </tr> <tr> <td>UP</td> <td>8</td> <td>CE</td> <td>20</td> <td>4</td> <td>13</td> <td></td> <td></td> </tr> </tbody> </table> | | | | | <input type="checkbox"/> Key | Number Displayed | <input type="checkbox"/> Key | Number Displayed | <input type="checkbox"/> Key | Number Displayed | <input type="checkbox"/> Key | Number Displayed | DC | 7 | STORE | 15 | 9 | 22 | 3 | 10 | AC | 4 | RECALL | 12 | 8 | 21 | 2 | 9 | Ω | 3 | # DIGITS | 19 | 7 | 18 | 1 | 2 | FILTER | 0 | C/S | 16 | 6 | 17 | 0 | 1 | DN | 11 | EXP | 23 | 5 | 14 | . | 6 | UP | 8 | CE | 20 | 4 | 13 | | |
| <input type="checkbox"/> Key | Number Displayed | <input type="checkbox"/> Key | Number Displayed | <input type="checkbox"/> Key | Number Displayed | <input type="checkbox"/> Key | Number Displayed | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DC | 7 | STORE | 15 | 9 | 22 | 3 | 10 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| AC | 4 | RECALL | 12 | 8 | 21 | 2 | 9 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Ω | 3 | # DIGITS | 19 | 7 | 18 | 1 | 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| FILTER | 0 | C/S | 16 | 6 | 17 | 0 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DN | 11 | EXP | 23 | 5 | 14 | . | 6 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| UP | 8 | CE | 20 | 4 | 13 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <div style="text-align: center;"> <p>$\frac{1}{(\text{NO.})}$</p> <p>60 Hz MACHINE</p> <p>$\frac{1V}{(V/DIV)}$</p> <p>OV</p> <p>$\frac{.5\mu S}{(S/DIV)}$</p> </div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

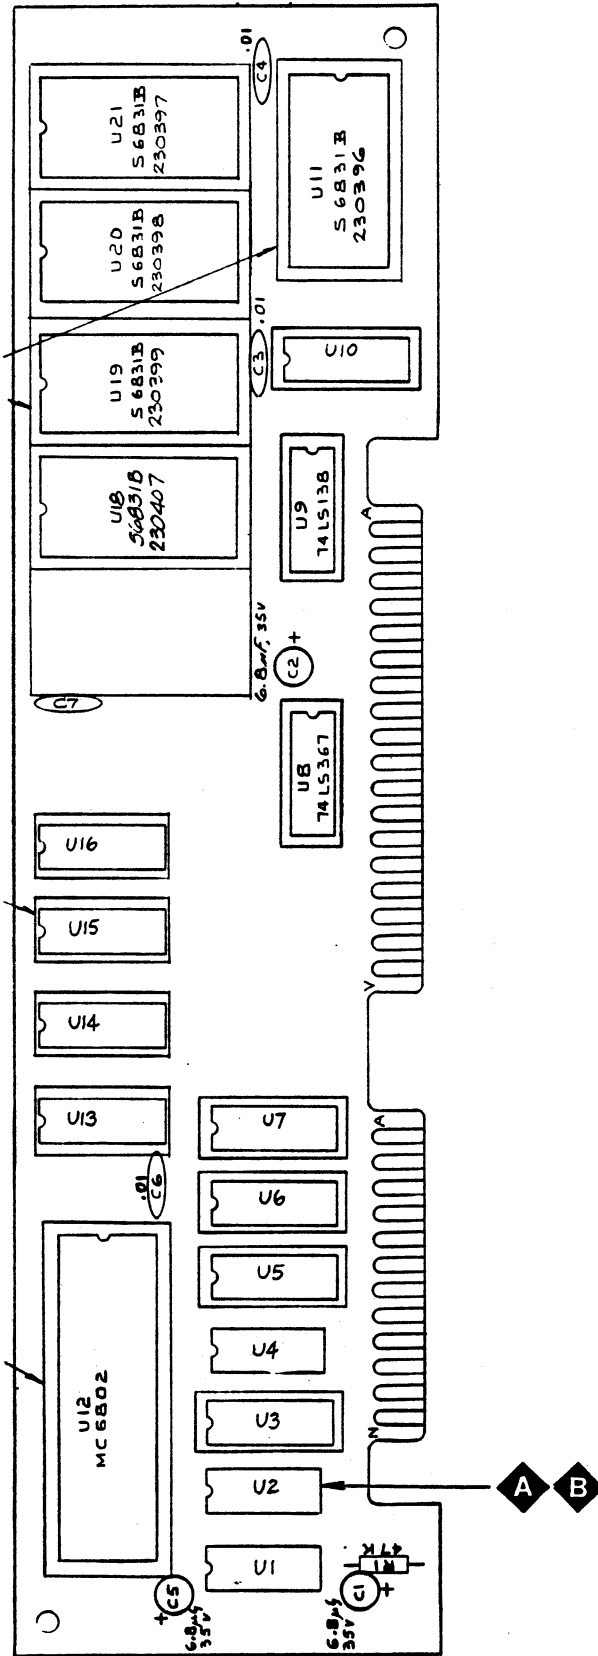
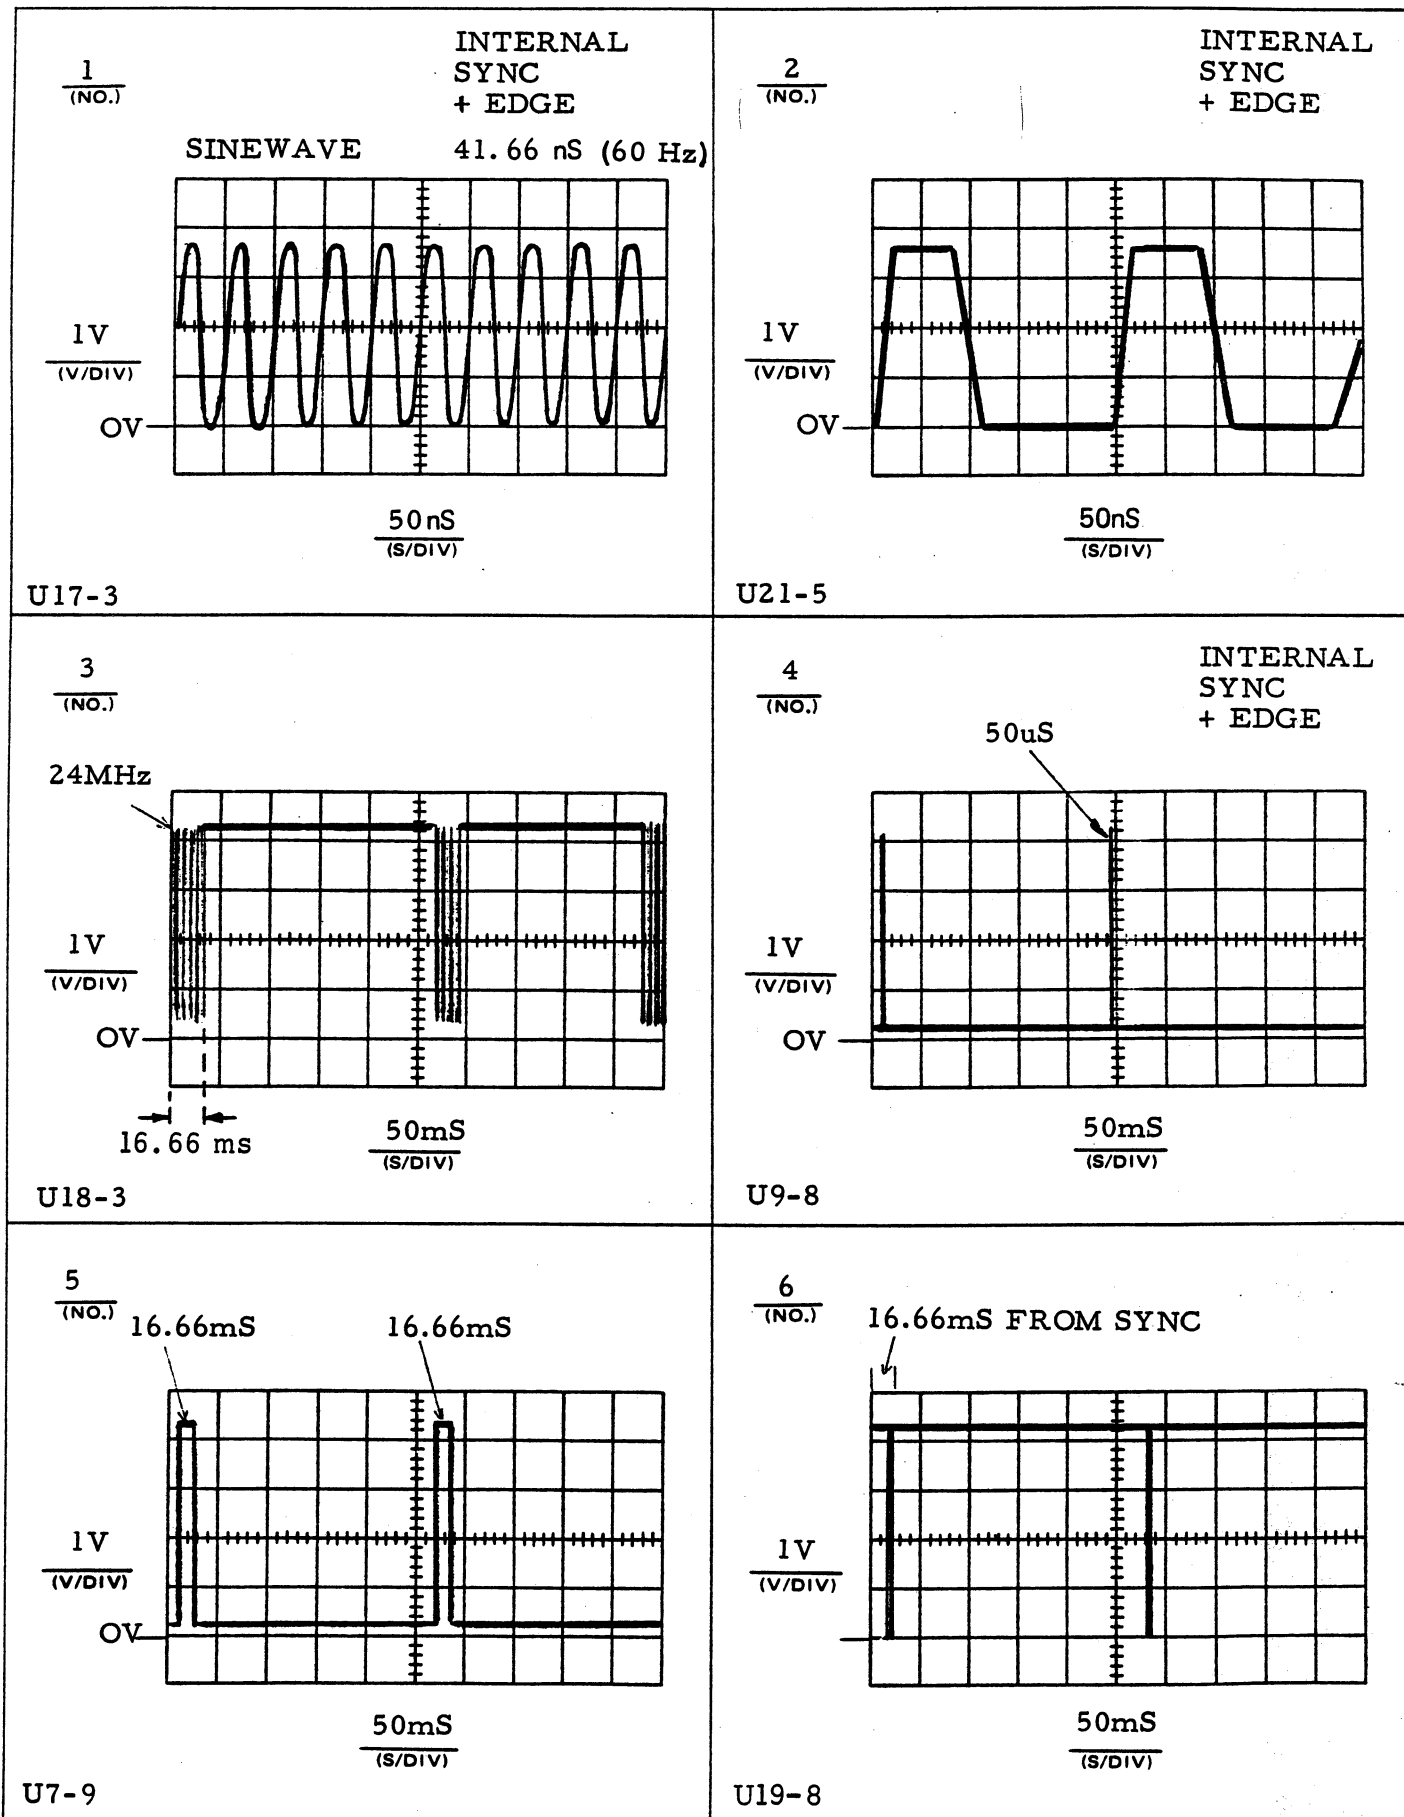


Figure 6.20 - Computer I - Component Location Diagram

Table 6.14 - Control Logic Subassembly Performance Test

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|--|---|-----------------------|------------|------------------------|----------------------|
| Function: DC Range: Auto Input Terminals: +10V DC | Waveforms 3, 5 and 6 are synced to the negative edge of the signal at U9-6. | | | | |
| | Master clock output | U17-3 | A | Figure 6.21 | Waveform 1 |
| | 4F0 output | U21-5 | B | Figure 6.21 | Waveform 2 |
| | Clock Sync output | U18-3 | C | Figure 6.21 | Waveform 3 |
| | Reset timer output | U9-8 | D | Figure 6.21 | Waveform 4 |
| | Signal integrate | U7-9 | E | Figure 6.21 | Waveform 5 |
| | Zero Crossing enable | U19-8 | F | Figure 6.21 | Waveform 6 |

WAVEFORMS FOR TABLE 6.14



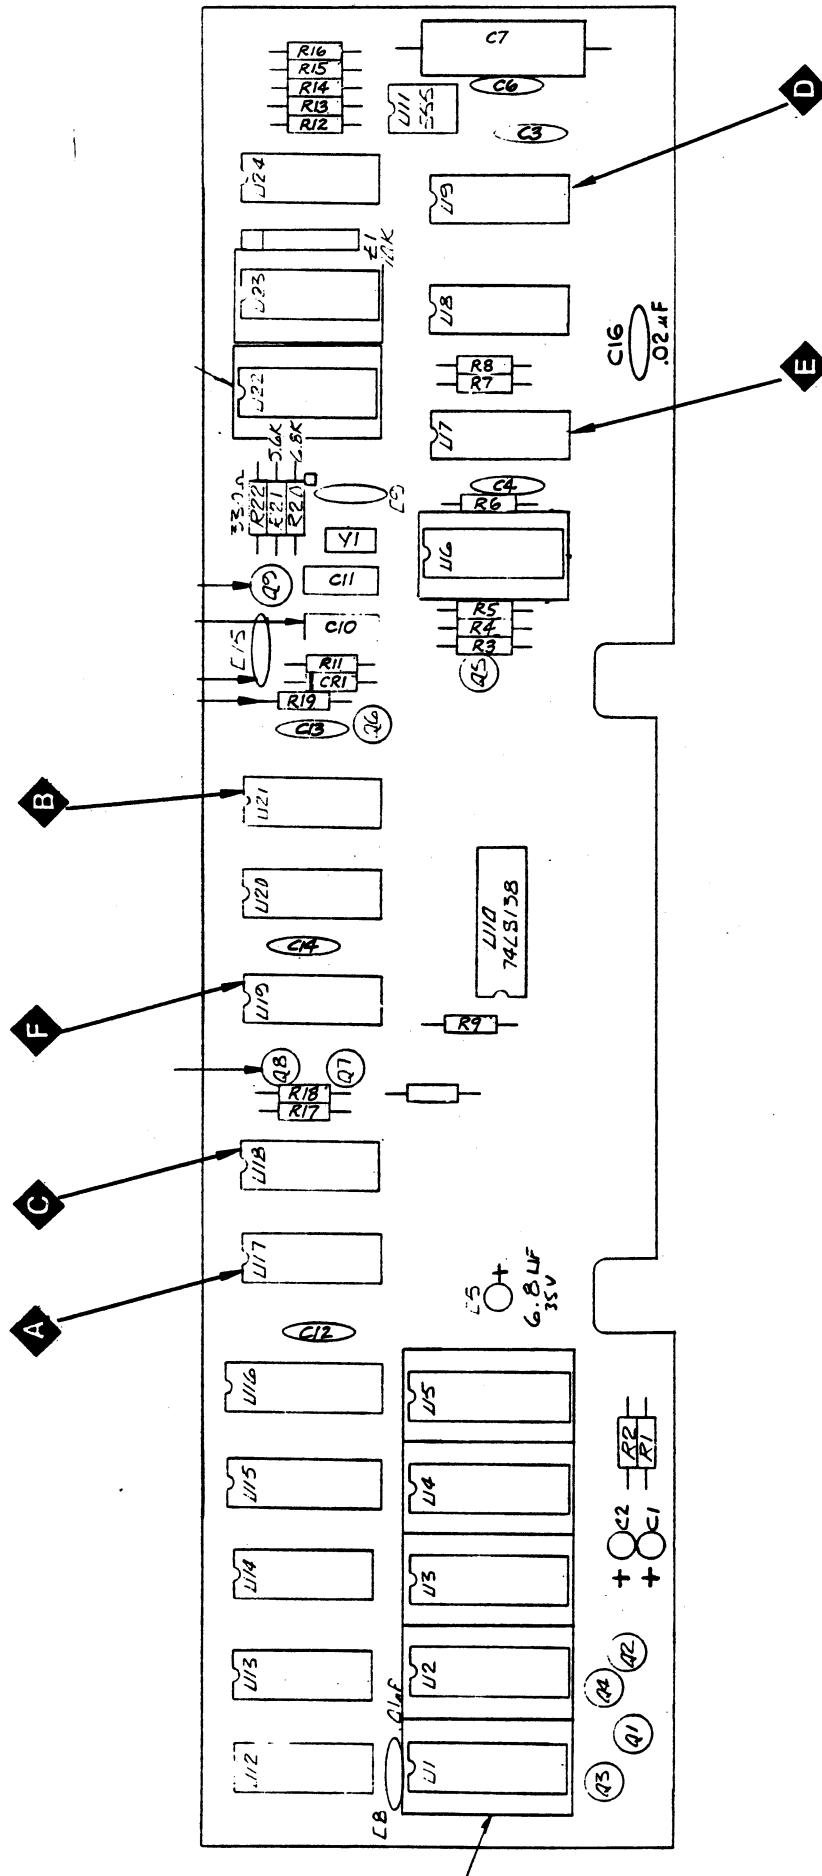
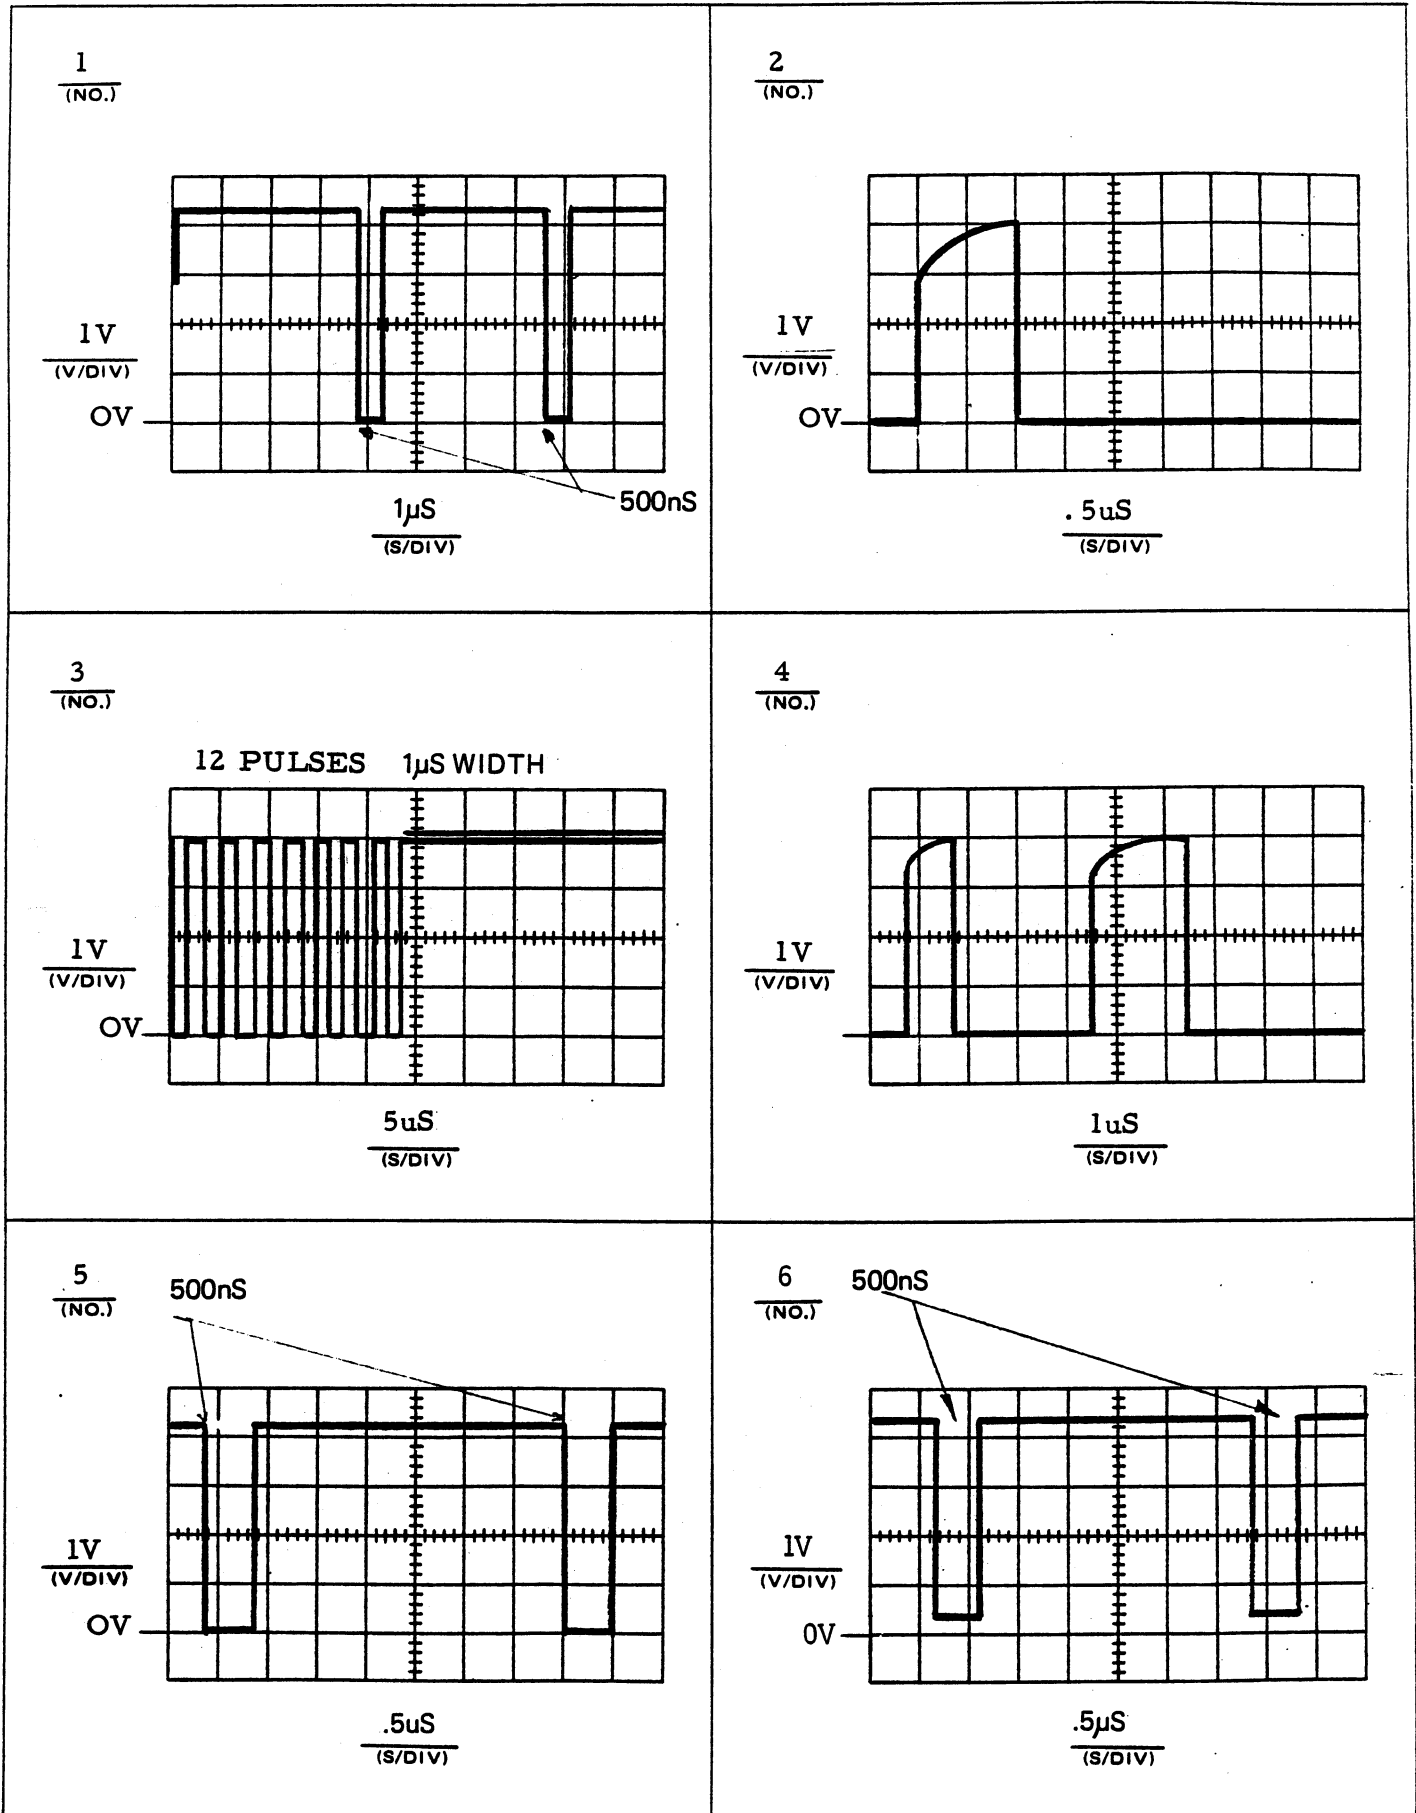


Figure 6.21 - Control Logic Component Location Diagram

Table 6.15 - Fast Waveform Digitizer Subassembly Performance Test

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|---|---|-----------------------|------------|------------------------|--|
| Function: DC Range: Auto Input Terminals: +10V DC (1777 octal on display) | All waveforms are synced to the positive edge of the MPU trigger signal (U7-5). | | | | |
| | Serial/parallel output Reg. reset | U8-6 | A | Figure 6.22 | Waveform 1 |
| | A/D trigger | U2-5 | B | Figure 6.22 | Waveform 2 Note: Ground Scope at U2-8 |
| | Serial/parallel output Reg. clock | U8-3 | C | Figure 6.22 | Waveform 3 |
| | A/D data | U15-3 | D | Figure 6.22 | Waveform 4 |
| | MPU data bus output enable | J1-A | E | Figure 6.22 | Waveform 5 |
| | MPU data bus output enable | J1-1 | F | Figure 6.22 | Waveform 6 |

WAVEFORMS FOR TABLE 6.15



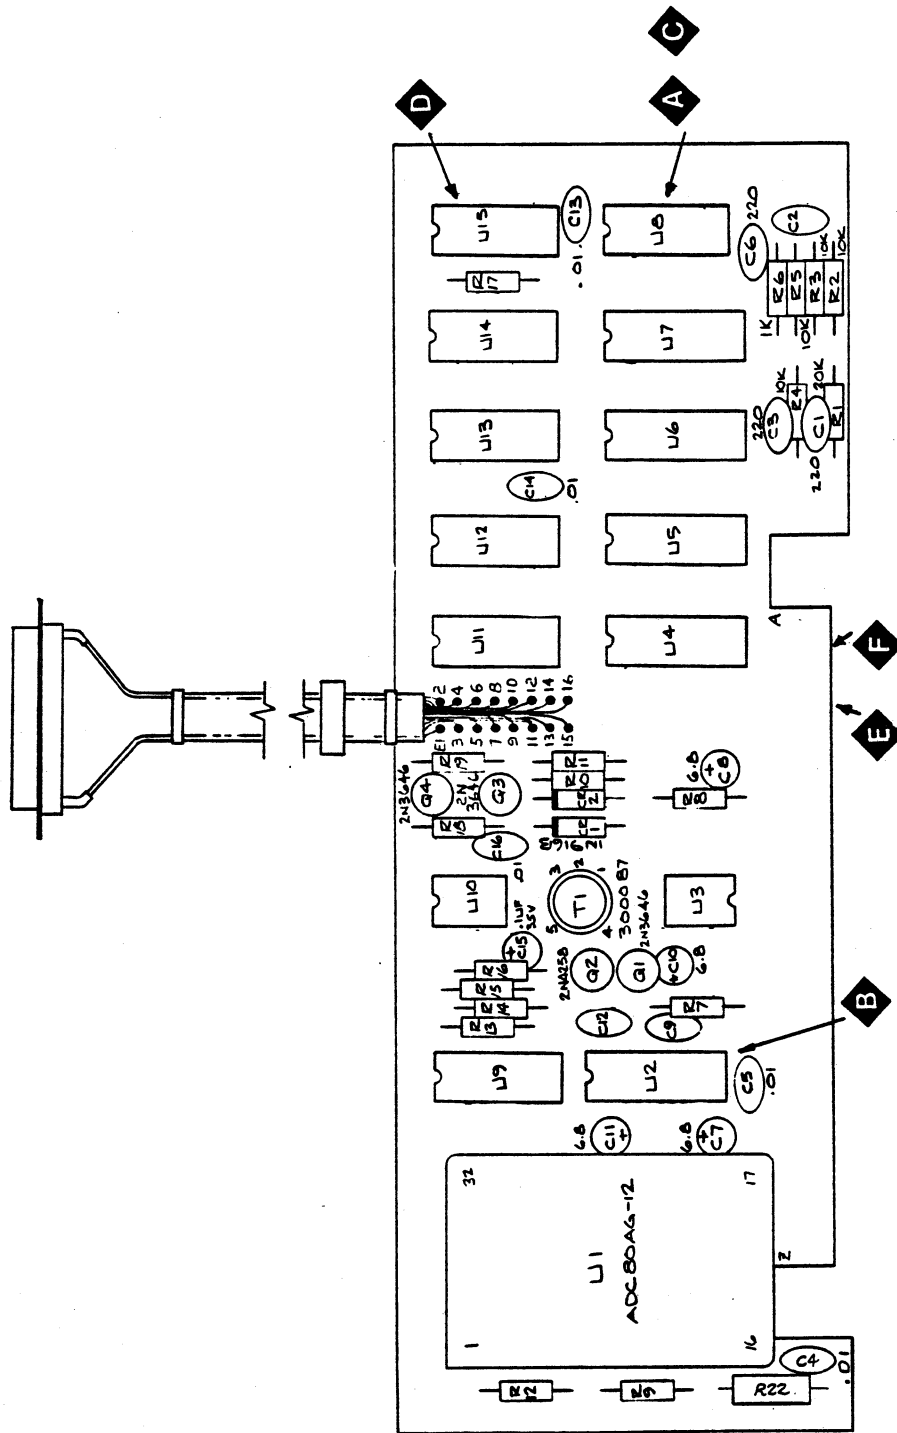







Figure 6.22 - Fast Waveform Digitizer Component Location Diagram






Table 6.16 - Digitizer Subassembly Performance Test

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|---|---|-----------------------|------------|------------------------|----------------------|
| Function: DC Range: Auto Input Terminals: +10V DC Select 4-1/2 Digit Mode (# DIG, 4) | All waveforms are synced to the negative edge of the waveform at TP2. | | | | |
| | Signal integrate | TP3 | A | Figure 6.23 | Waveform 1 |
| | Integrator input | TP4 | B | Figure 6.23 | Waveform 2 |
| | Integrator output | TP5 | C | Figure 6.23 | Waveform 3 |
| | Null detector output | TP1 | D | Figure 6.23 | Waveform 4 |
| | Reset FET drive signal | TP2 | E | Figure 6.23 | Waveform 5 |
| Function: DC Range: Auto Input Terminals: +10V DC Select 5-1/2 Digit Mode (# DIG, 5) | All waveforms are synced to the negative edge of the waveform at TP2. | | | | |
| | Signal integrate | TP3 | A | Figure 6.23 | Waveform 6 |
| | Integrator input | TP4 | B | Figure 6.23 | Waveform 7 |
| | Integrator output | TP5 | C | Figure 6.23 | Waveform 8 |
| | Null detector output | TP1 | D | Figure 6.23 | Waveform 9 |
| | Reset FET drive signal | TP2 | E | Figure 6.23 | Waveform 10 |






Table 6.16 - Digitizer Subassembly Performance Test (Continued)

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|--|---|-----------------------|---|------------------------|----------------------|
| Function: DC Range: Auto Input Terminals: +10V DC Select 6-1/2 Digit Mode (#DIG, 6) | All waveforms are synced to the negative edge of the waveform at TP2. | | | | |
| | Signal integrate | TP3 |  | Figure 6.23 | Waveform 11 |
| | Integrator input | TP4 |  | Figure 6.23 | Waveform 12 |
| | Integrator output | TP5 |  | Figure 6.23 | Waveform 13 |
| | Null detector output | TP1 |  | Figure 6.23 | Waveform 14 |
| | Reset FET drive signal | TP2 |  | Figure 6.23 | Waveform 15 |

WAVEFORMS FOR TABLE 6.16

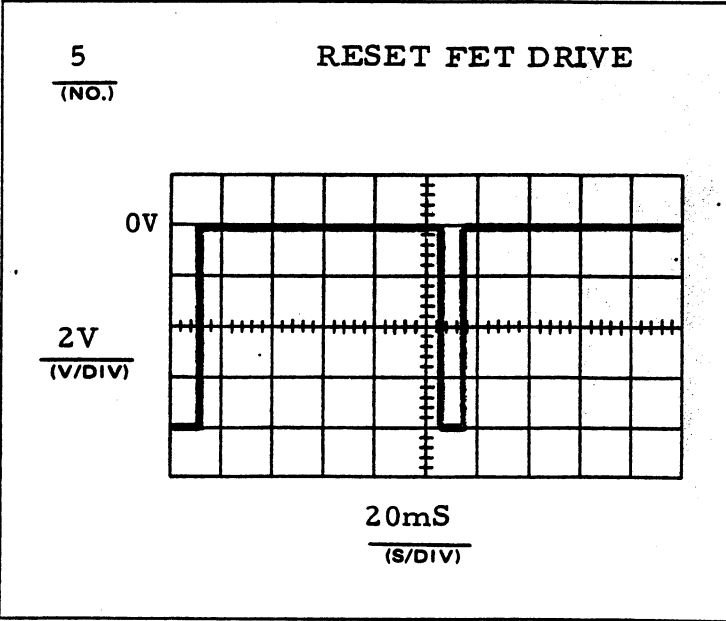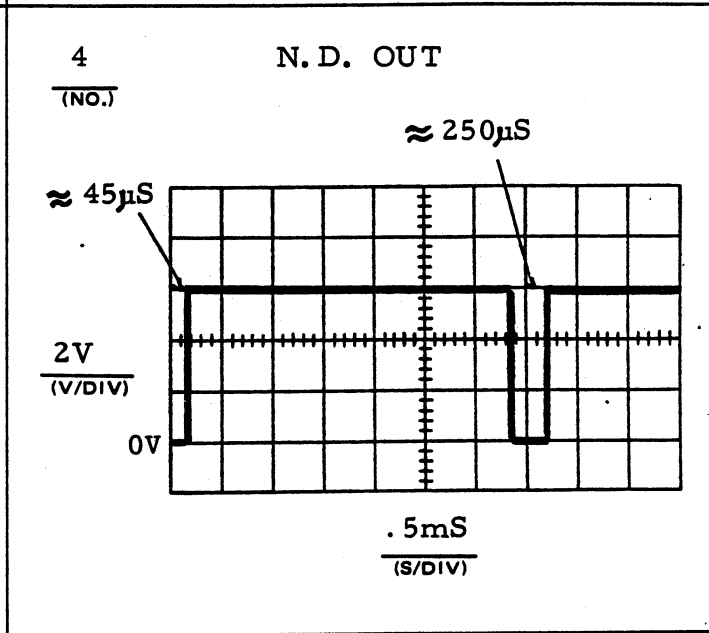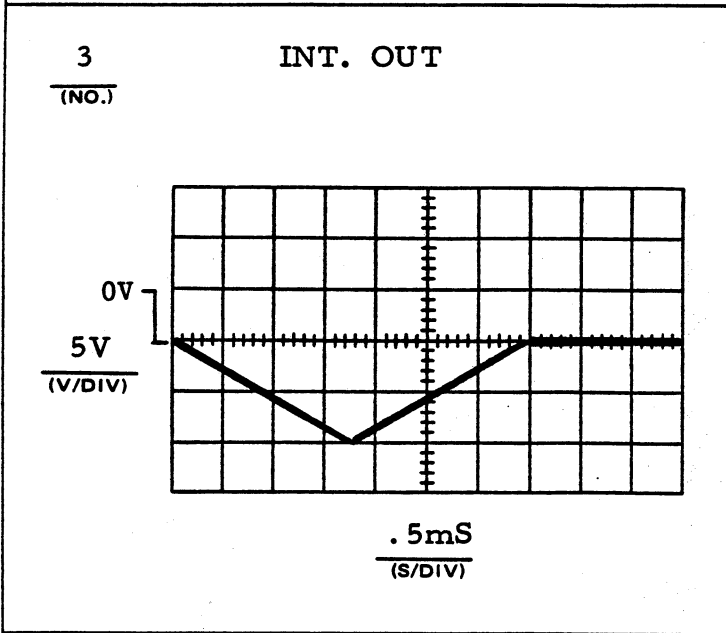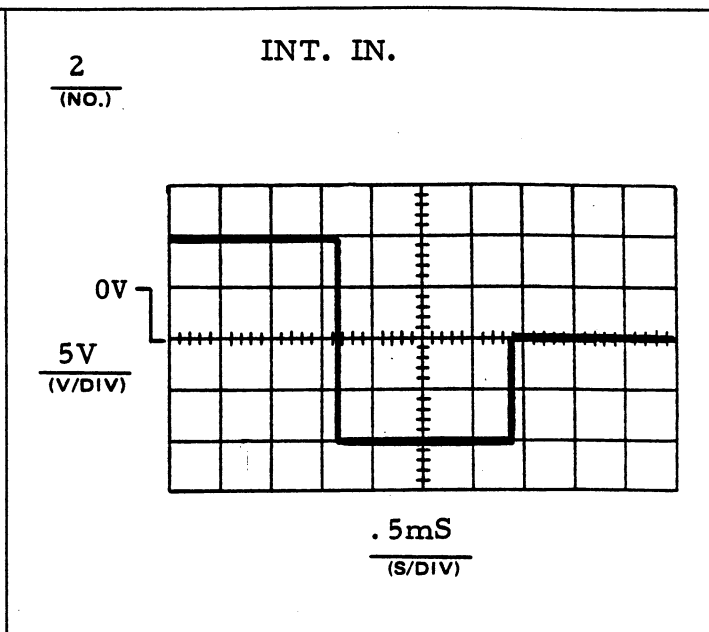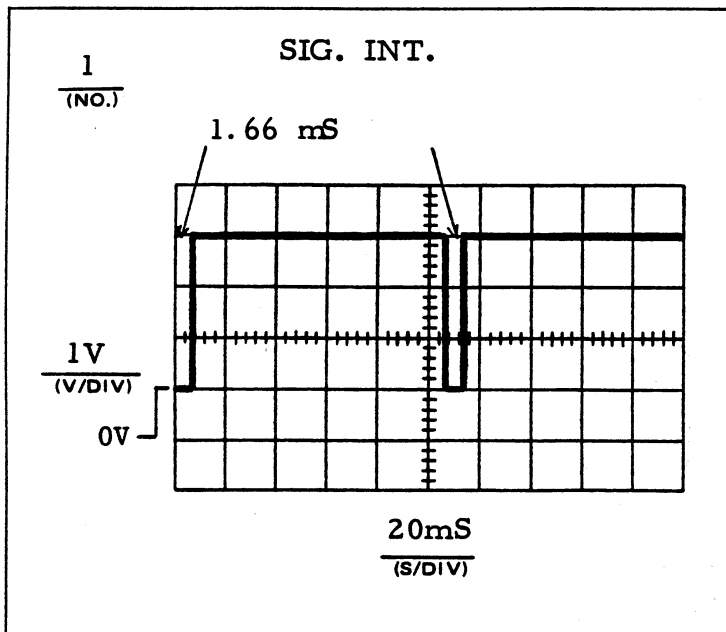


WAVEFORMS FOR TABLE 6.16 (Continued)

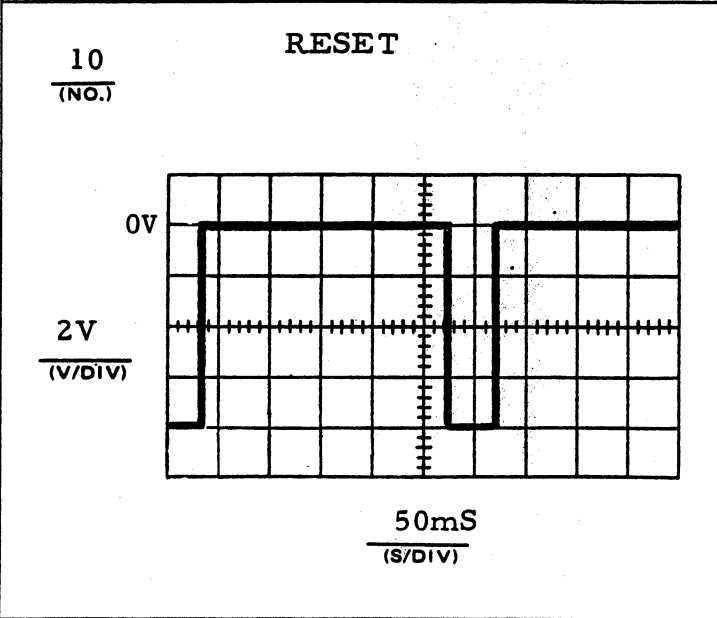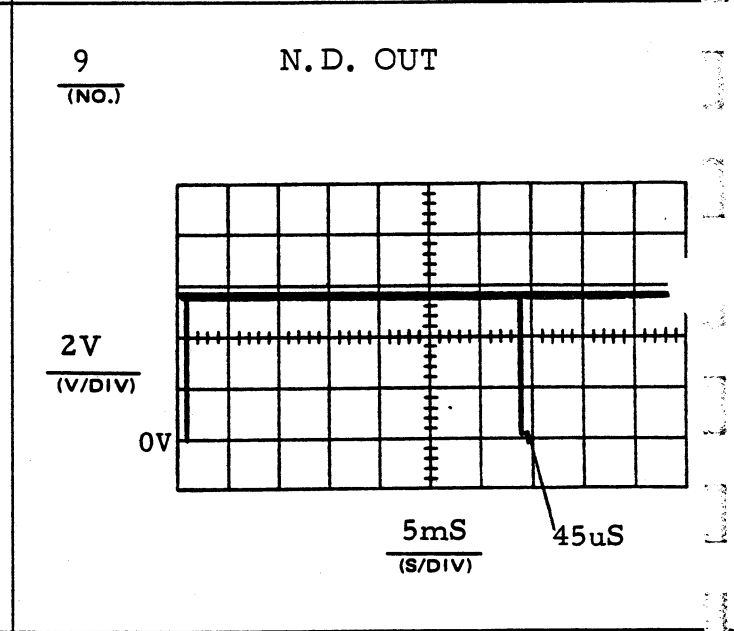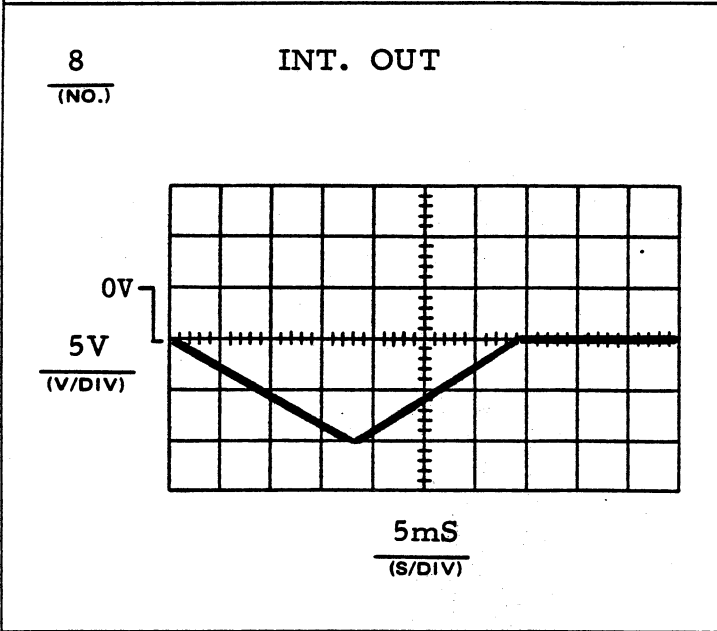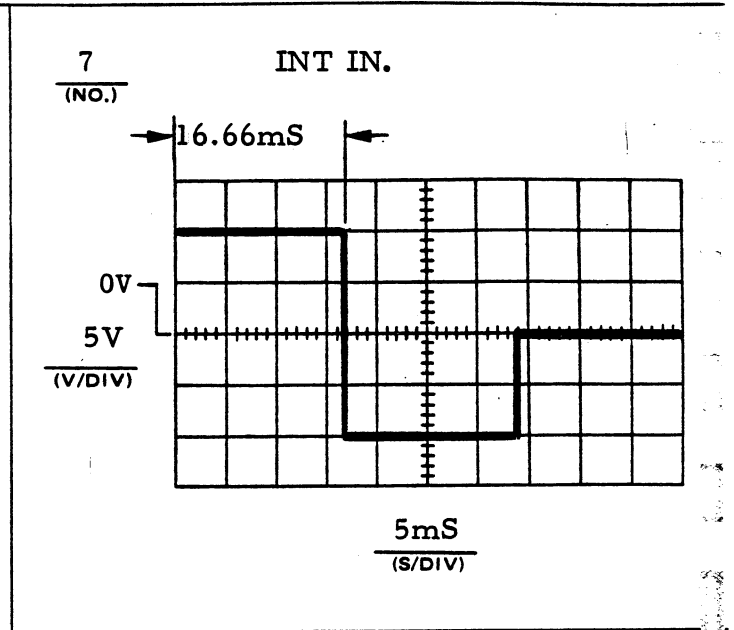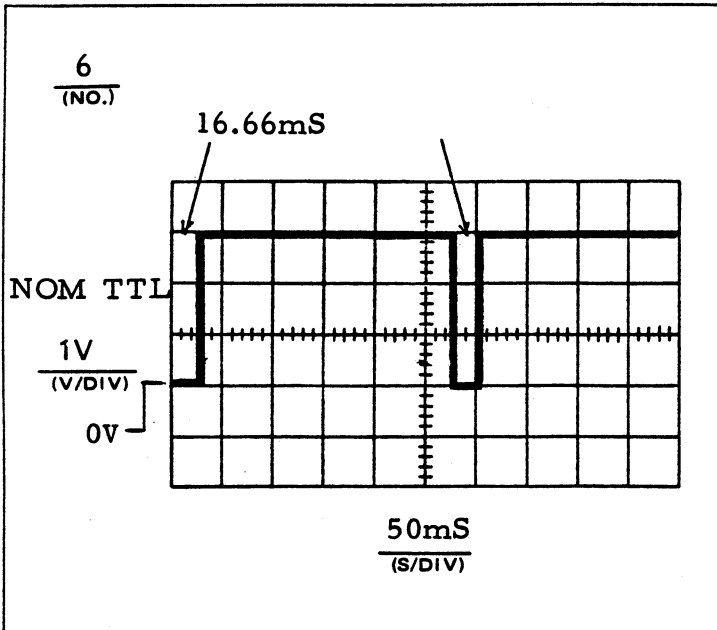

WAVEFORMS FOR TABLE 6.16 (Continued)


11
(NO.)

SIG. INT.

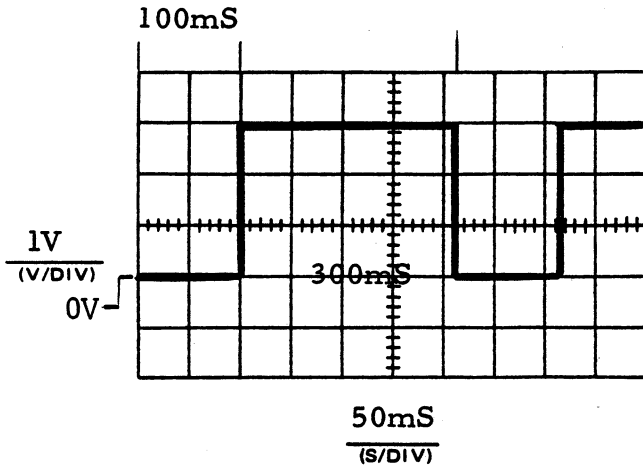


12
(NO.)

INT. IN.

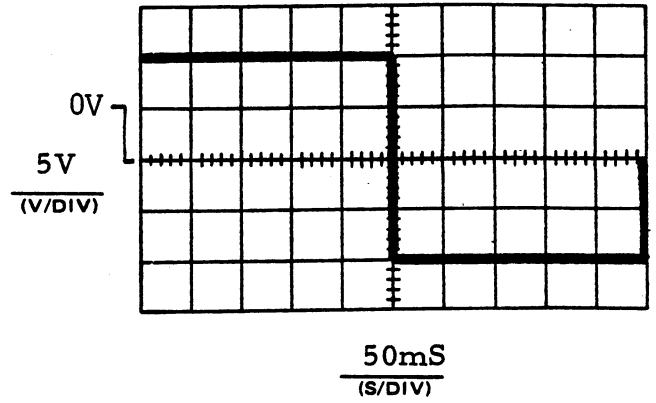


13
(NO.)

INT. OUT

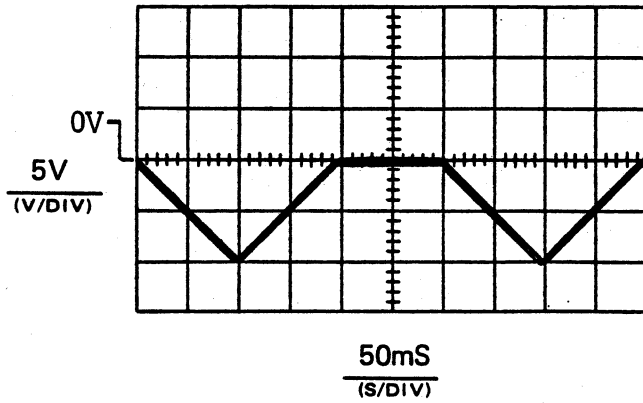


14
(NO.)

N. D. OUT

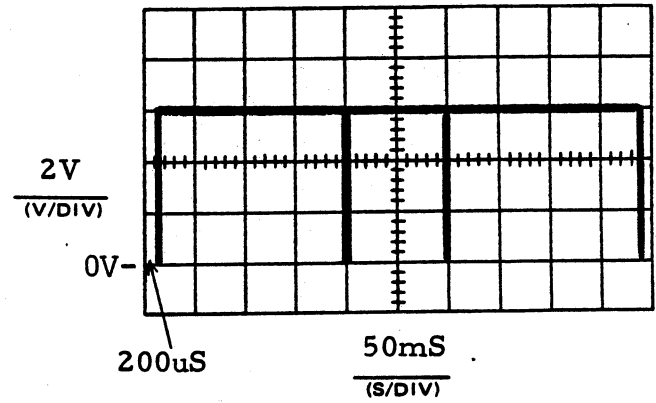

15
(NO.)

RESET FET DRIVE

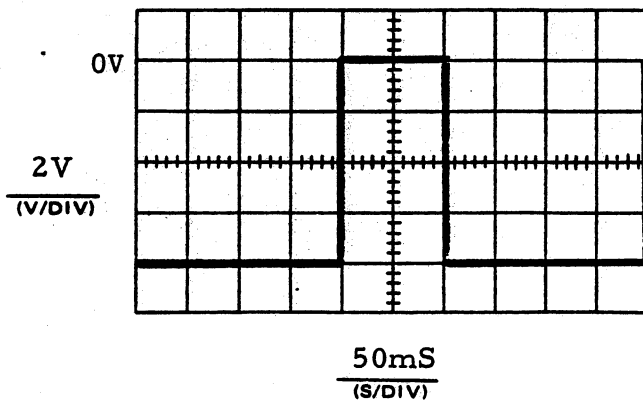

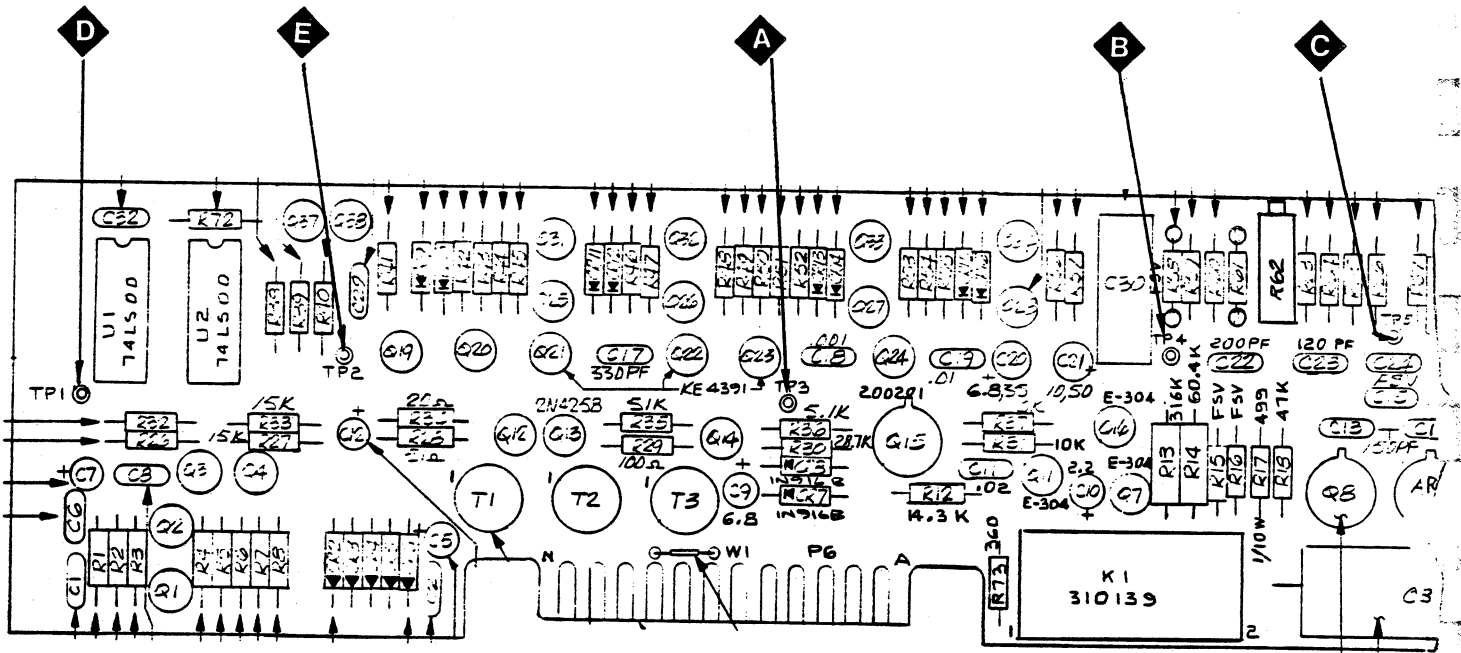


Figure 6.23 - Digitizer Component Location Diagram

Table 6.17 - Isolator Subassembly Performance Test

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|--|---|-----------------------|------------|------------------------|----------------------|
| Function: DC Range: Auto Input Terminals: +10V DC | All measurements are referenced to Analog Common (Mecca). | | | | |
| | Gain Stage output | TP3 | 1 | Figure 6.24 | +10.0 VDC |
| | Boot strap Amp output | TP4 | 2 | Figure 6.24 | +10.0 VDC |
| | +10V BS | AR4-7 | 3 | Figure 6.24 | +21.0 VDC |
| | -10V BS | AR4-4 | 4 | Figure 6.24 | -1.0 VDC |
| | Isolator output | TP2 | 5 | Figure 6.24 | +10.0 VDC |

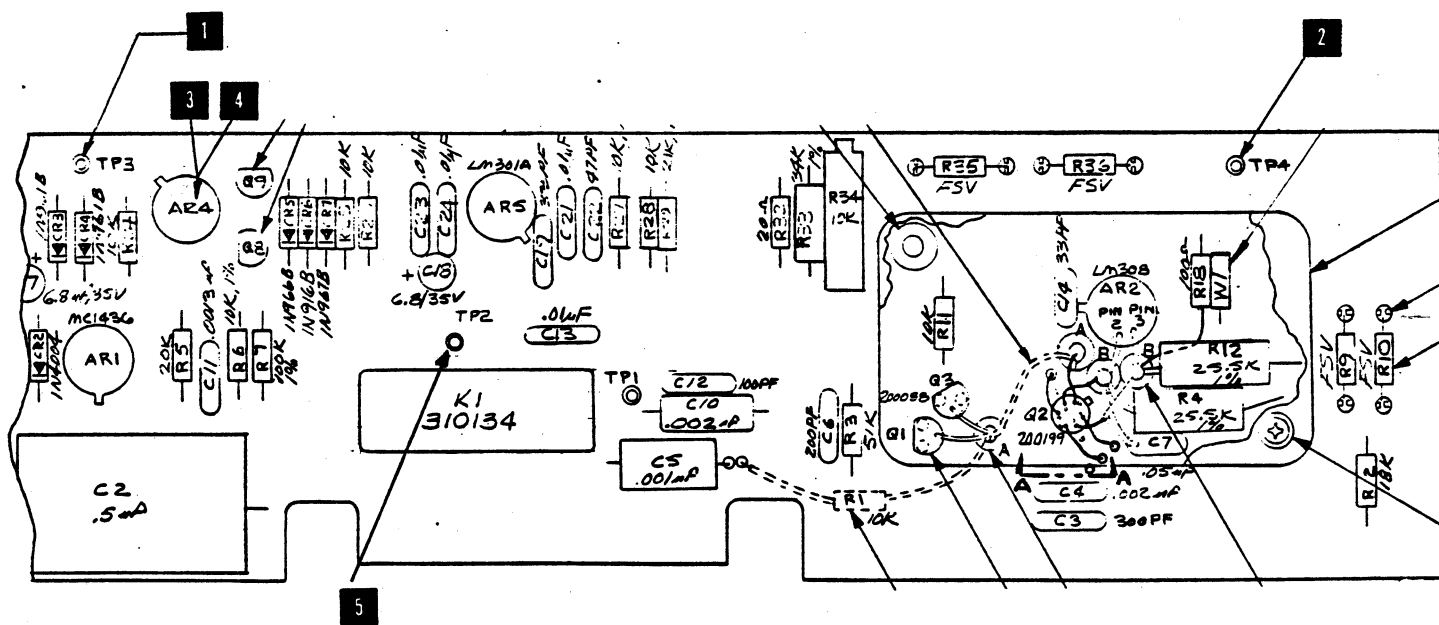


Figure 6.24 - Isolator Component Location Diagram

Table 6.18 - Ohms Subassembly Performance Test

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|--|--|-----------------------|------------|------------------------|----------------------|
| Function: Ohms | All measurements are referenced to Analog Common (Mecca). All resistance inputs are resistance standards. | | | | |
| Range: 10Ω Input Terminals: 10Ω | Clamped input | TP1 | 1 | Figure 6.25 | +8.0V |
| | Current generator output | TP3 | 2 | Figure 6.25 | +3.7V |
| | Ohms Amp output | TP4 | 3 | Figure 6.25 | -0.1V |
| Range: 100Ω Input Terminals: 100Ω | Clamped input | TP1 | 1 | Figure 6.25 | +8.0V |
| | Current generator output | TP3 | 2 | Figure 6.25 | +3.7V |
| | Ohms Amp output | TP4 | 3 | Figure 6.25 | -1.0V |
| Range: 1KΩ Input Terminals: 1KΩ | Clamped input | TP1 | 1 | Figure 6.25 | +7.999V |
| | Current generator output | TP3 | 2 | Figure 6.25 | +3.0V |
| | Ohms Amp output | TP4 | 3 | Figure 6.25 | -1.0V |
| Range: 100KΩ Input Terminals: 100KΩ | Clamped input | TP1 | 1 | Figure 6.25 | +8.0V |
| | Current generator output | TP3 | 2 | Figure 6.25 | +6.9V |
| | Ohms Amp output | TP4 | 3 | Figure 6.25 | -10.0V |

Table 6.18 - Ohms Subassembly Performance Test (Continued)

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|--|--------------------------|-----------------------|------------|------------------------|----------------------|
| Range: • 10MΩ Input Terminals: 10MΩ | Clamped input | TP1 | 1 | Figure 6.25 | +8.0V |
| | Current generator output | TP3 | 2 | Figure 6.25 | +6.9V |
| | Ohms Amp output | TP4 | 3 | Figure 6.25 | -10.0V |

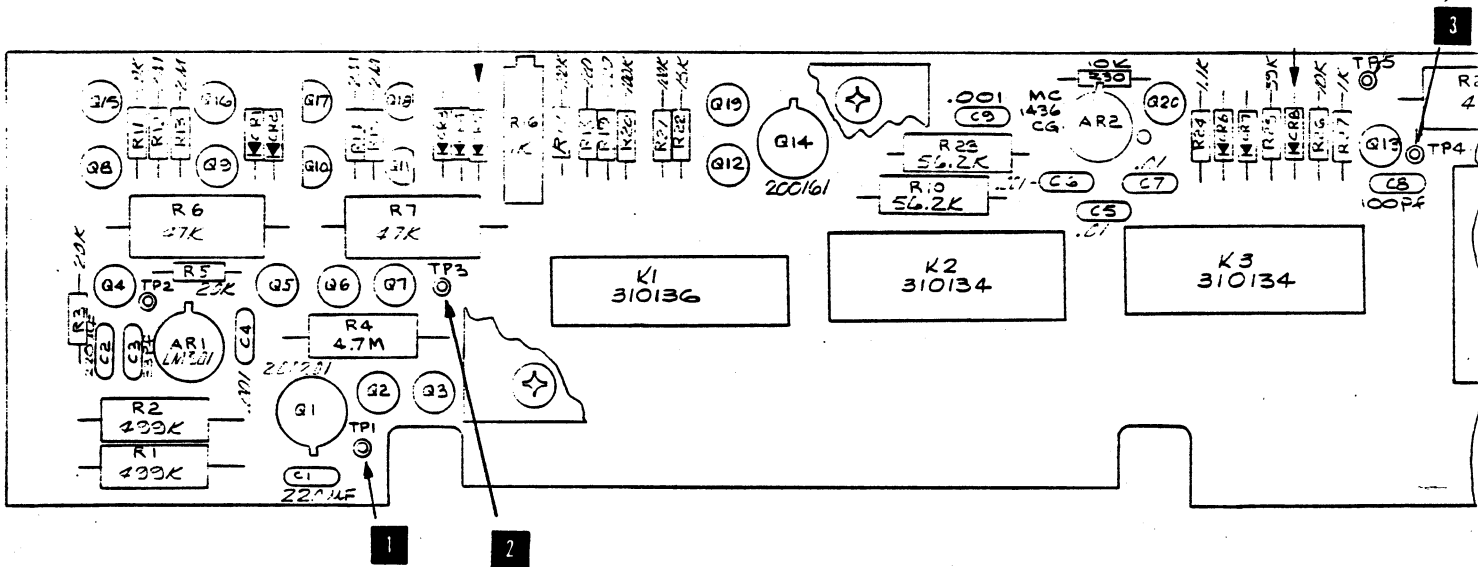


Figure 6.25 - Ohms Component Location Diagram

Table 6.19 - Ohms Reference Subassembly Performance Test

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|---------------------------|---|-----------------------|------------|------------------------|----------------------|
| Function: Ohms | All measurements are referenced to Analog Common (Mecca). | | | | |
| | Ohms Reference | AR1-6 | 1 | Figure 6.26 | +12.0V |
| | | R5/R4 | 2 | Figure 6.26 | +8.0V |

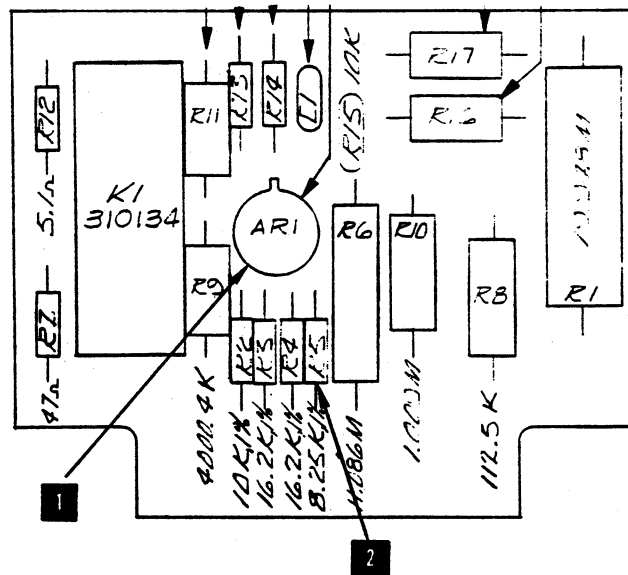


Figure 6.26 - Ohms Reference Component Location Diagram

Table 6.20 - Preamplifier Subassembly Performance Test

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|--|---|-----------------------|------------|------------------------|----------------------|
| Function: DC Range: mV Input Terminals: +0.01 VDC | All measurements are referenced to Analog Common (Mecca). Waveforms are synced to the negative edge of the signal at Q8-C. | | | | |
| | MOD/DEMOD Drive | Q9-C | A | Figure 6.27 | Waveform 1 |
| | Input filter output | E15 | 1 | Figure 6.27 | |
| | Feedback | C9/Q1-D | B | Figure 6.27 | Waveform 2 |
| | Sync Demod output | C2/R4 | C | Figure 6.27 | Waveform 3 |
| | Preamplifier output | E3 | 2 | Figure 6.27 | +7.2 VDC |


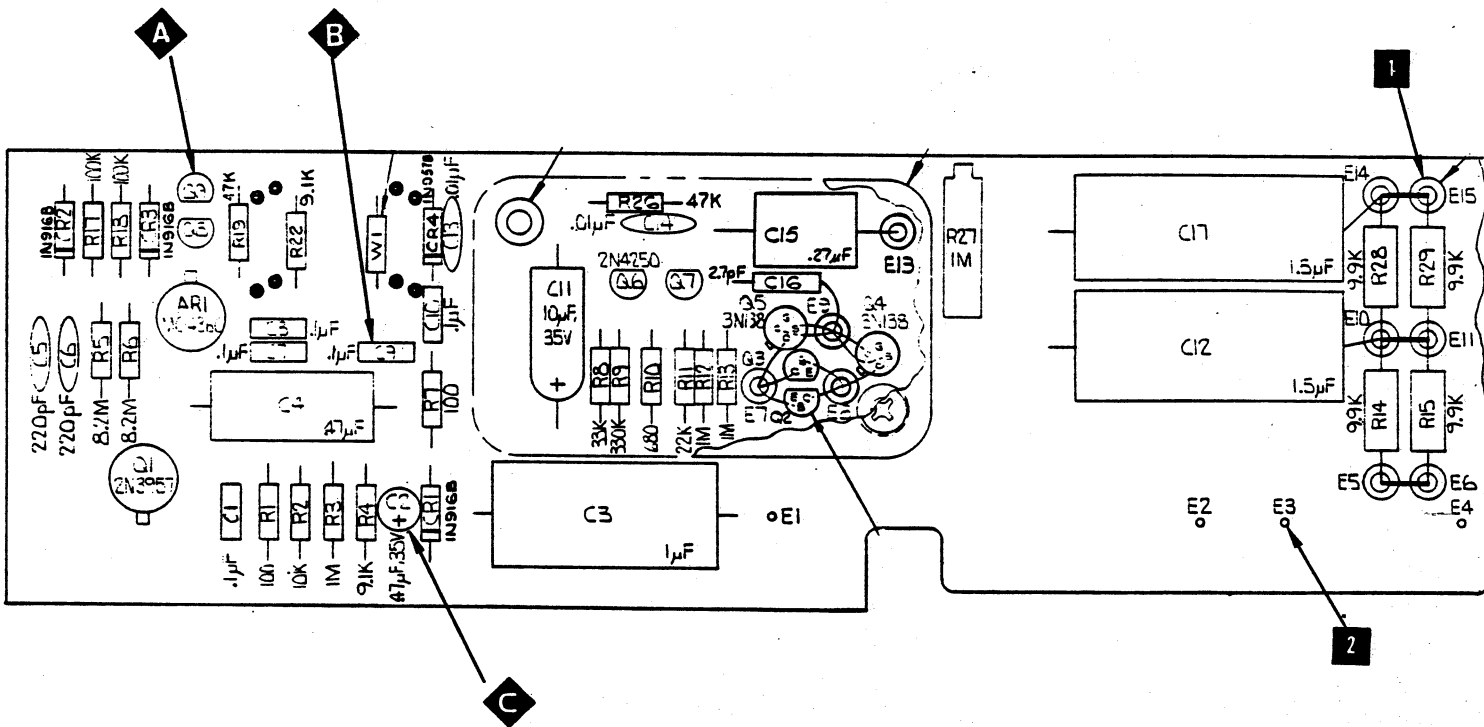


Figure 6.27 - Preamplifier Component Location Diagram


WAVEFORMS FOR TABLE 6.20.

1
(NO.)

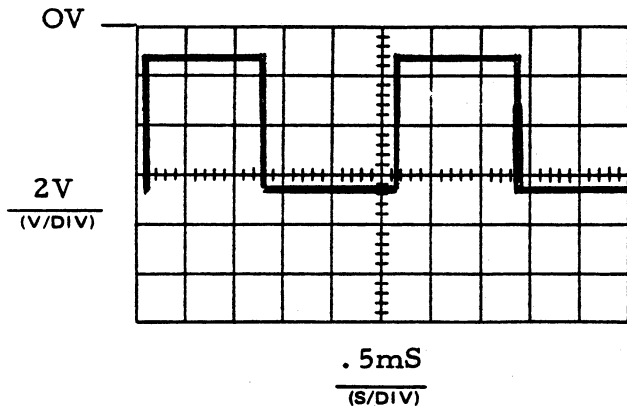


Q9-C

2
(NO.)

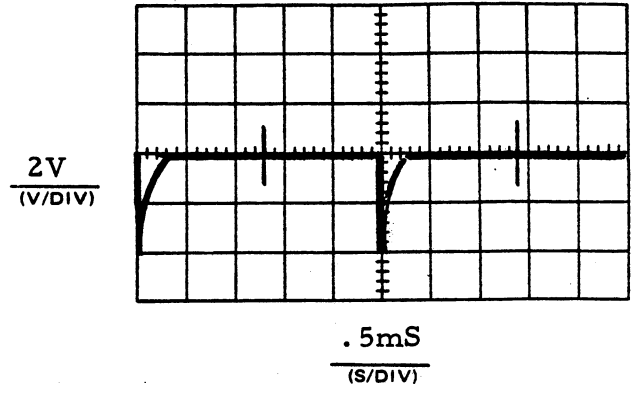

C9-Q1-D

3
(NO.)

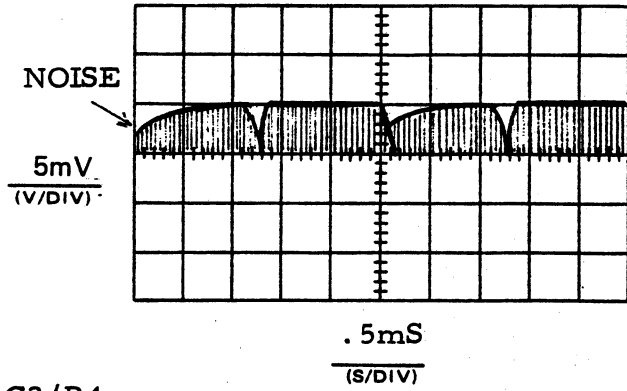

C2/R4

Table 6.21 - Attenuator/Reference Subassembly Performance Test

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|----------------------------------|--|-----------------------|------------|------------------------|---|
| Press SHIFT and FR/# DIGITS Keys | Measurements 1 and 2 are referenced to Digital Ground. | | | | |
| | Front/rear relay control | U1-10 | 1 | Figure 6.28 | Low logic level when RI indicator on front panel lit. High logic level when RI not lit. |
| Press AC Key | AC relay control | U1-15 | 2 | Figure 6.28 | Low logic level |
| | Measurements 3 thru 5 are referenced to Analog Common (Mecca). | | | | |
| | Zener reference | TP1 | 3 | Figure 6.28 | +6.2V |
| | +10V reference output | TP2 | 4 | Figure 6.28 | +10.000 VDC |
| | -10V reference output | Q1-E | 5 | Figure 6.28 | -10.000 VDC |

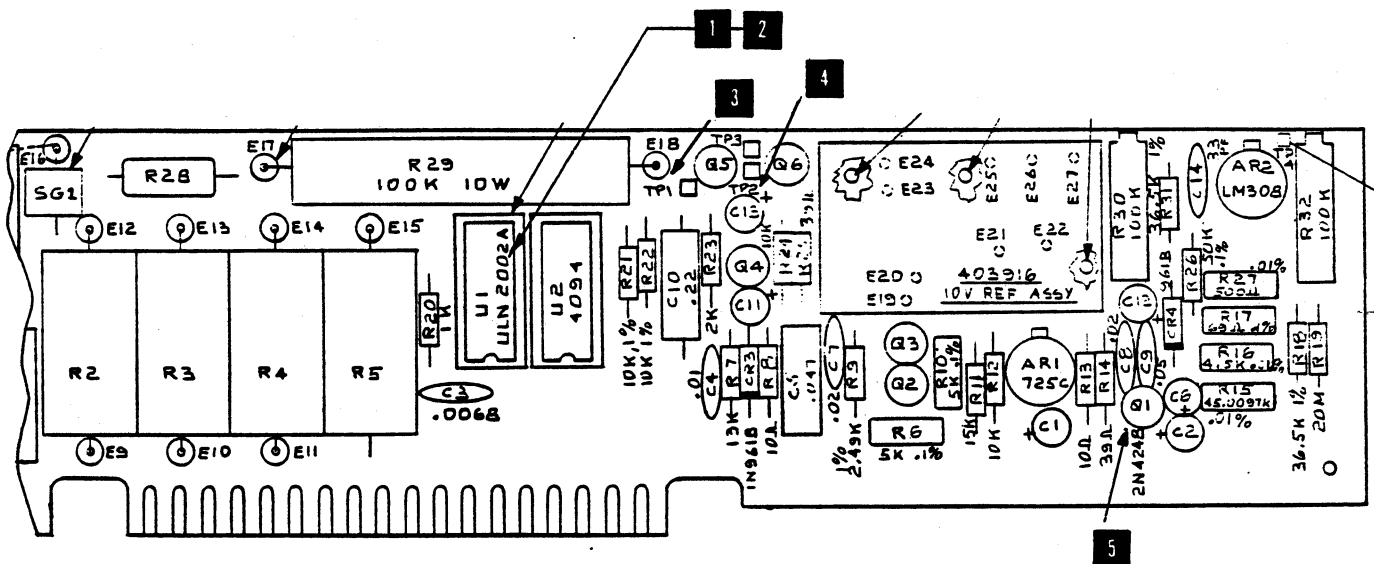


Figure 6.28 - Attenuator/Reference Component Location Diagram

Table 6.22 - RMS Converter Subassembly Performance Test

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|---|---|---------------------------------|------------|------------------------|----------------------|
| Function: AC Range: 1 Volt Input Terminals: Connect +IN to -IN with a copper wire jumper | All measurements are referenced to Analog Common (Mecca). | | | | |
| | | TP4 | 1 | Figure 6.29 | 0.0 VDC |
| | | Q16-C | 2 | Figure 6.29 | 0.9 VDC |
| | | TP2 | 3 | Figure 6.29 | 0.0 VDC |
| | Scaling Amp input | J304-1 | 4 | Figure 6.29 | 0.0 VDC |
| | Scaling Amp output | TP3 | 5 | Figure 6.29 | 0.0 VDC |
| | RMS Converter Amp output | AR1-6 | 6 | Figure 6.29 | 0.0 VDC |
| | RMS Converter output | J304-12 | 7 | Figure 6.29 | 0.0 VDC |
| Range: 10V Remove jumper. Connect input to a signal generator set for 10V RMS @ 1 KHz | All waveforms are synced to the positive edge of the internal sync. | | | | |
| | Scaling Amp output | TP3 | A | Figure 6.29 | Waveform 1 |
| | Absolute Value output | TP4 | B | Figure 6.29 | Waveform 2 |
| | Log Amp | Emitters of Q3 | C | Figure 6.29 | Waveform 3 |
| | Output Amp | AR1 pin 6 (Scope AC coupled) | D | Figure 6.29 | Waveform 4 |

WAVEFORMS FOR TABLE 6.22

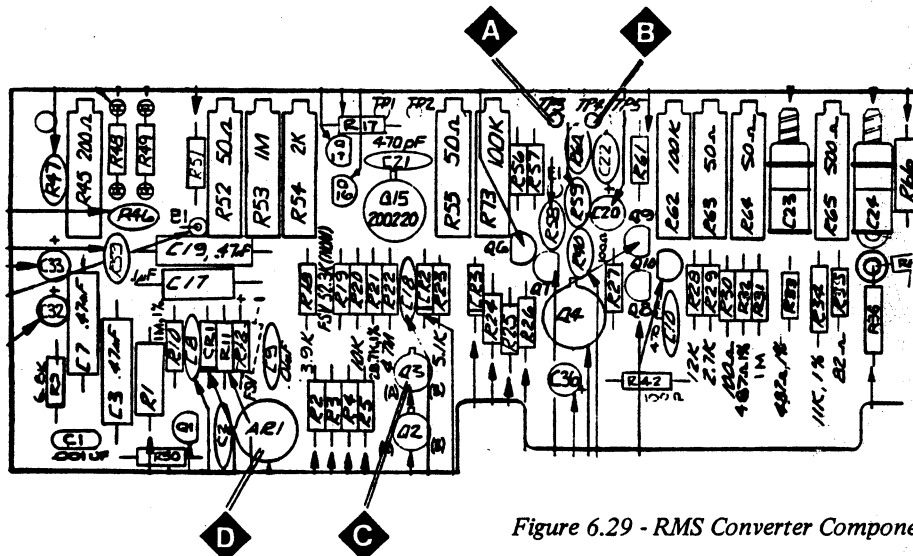
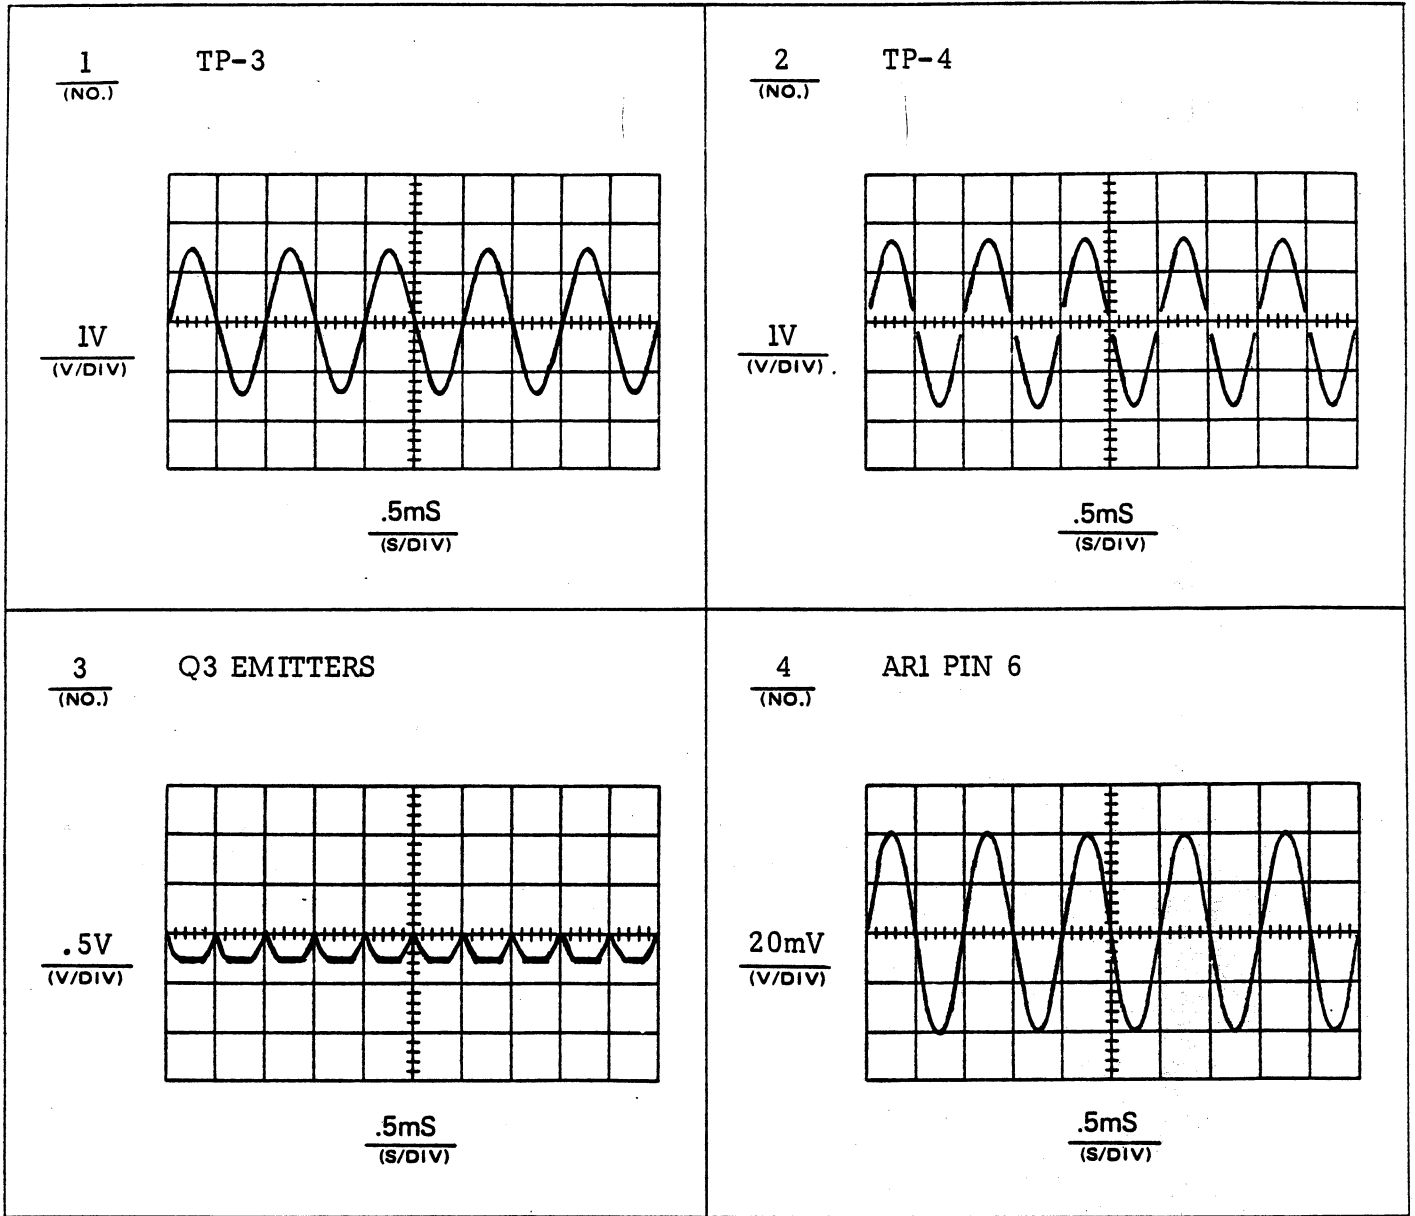






Figure 6.29 - RMS Converter Component Location Diagram

Table 6.23 - Scaling Amplifier Subassembly Performance Test

| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|---|---------------------|-----------------------|---|------------------------|----------------------|
| <p>All waveforms are synced to the positive edge of the internal sync.</p> | | | | | |
| <p>Function: AC Range: 1 Volt</p> <p>Connect input to a signal generator set for 1.0V RMS at 1 KHz</p> | Scaling Amp output | C46 (minus side) |  | Figure 6.30 | Waveform 1 |
| <p>Function: AC Range: 10 Volts</p> <p>Connect input to a signal generator set for 10V RMS at 1 KHz</p> | Scaling Amp output | C46 (minus side) |  | Figure 6.30 | Waveform 1 |
| <p>Function: AC Range: 100 Volts</p> <p>Connect input to a signal generator set for 100V RMS at 1 KHz</p> | Scaling Amp output | C46 (minus side) |  | Figure 6.30 | Waveform 1 |
| <p>Function: AC Range: 1KV</p> <p>Connect input to a signal generator set for 1 KV RMS at 1 KHz</p> | Scaling Amp | C46 (minus side) |  | Figure 6.30 | Waveform 1 |

WAVEFORM FOR TABLE 6.23

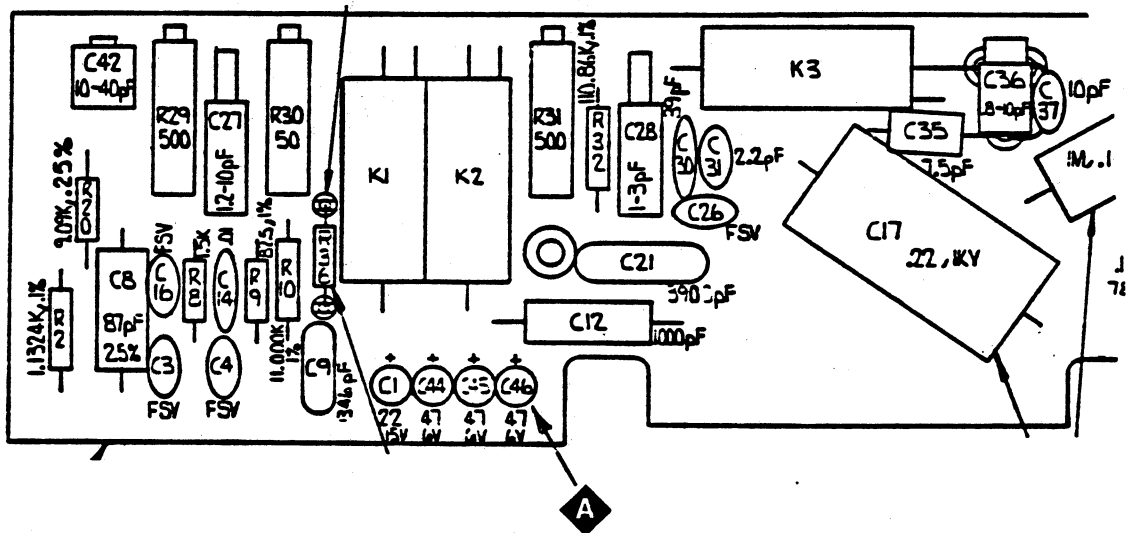
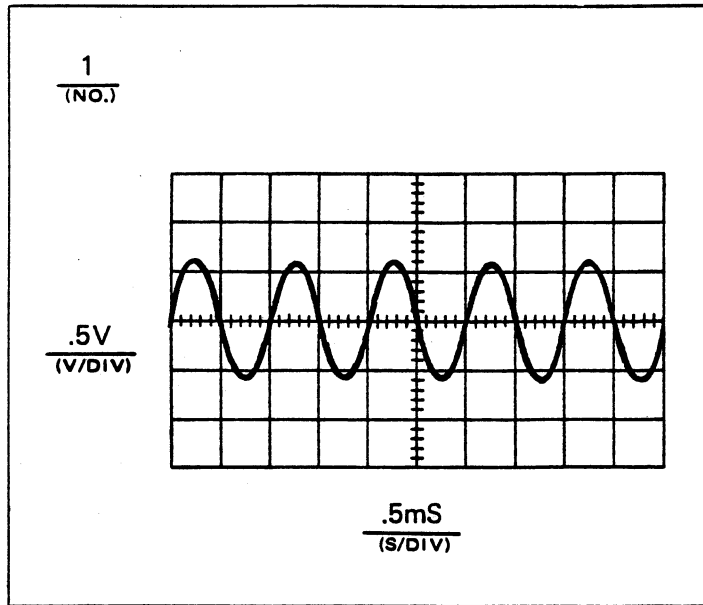


Figure 6.30 - Scaling Amplifier Component Location Diagram

Table 6.24 - AC Averaging Converter Subassembly Performance Test


| Input and Control Setting | Signal Nomenclature | Reference Designation | Test Point | Illustration Reference | Performance Standard |
|---|---|-----------------------|------------|------------------------|----------------------|
| Function: AC Range: 10 Volts Input Terminals: Connect +IN to -IN with copper wire jumper | All measurements are referenced to Analog Common (Mecca). | | | | |
| | Converter input | TP3 | 1 | Figure 6.31 | 0.0 VDC (nominal) |
| | Absolute Value output | TP7 | 2 | Figure 6.31 | 0.0 VDC (nominal) |
| | Halfwave output | TP6 | 3 | Figure 6.31 | 0.0 VDC (nominal) |
| | Converter output | TP4 | 4 | Figure 6.31 | 0.0 VDC (nominal) |
| Remove jumper. Connect input to a signal generator set for 1.9V RMS at 1 KHz | All waveforms are synced to the positive edge of the internal sync. | | | | |
| | Converter input | TP3 | A | Figure 6.31 | Waveform 1 |
| | Absolute Value output | TP7 | B | Figure 6.31 | Waveform 2 |
| | Halfwave output | TP6 | C | Figure 6.31 | Waveform 3 |
| | Converter output | TP4 | D | Figure 6.31 | Waveform 4 |

WAVEFORMS FOR TABLE 6.24

$\frac{1}{(NO.)}$

TP3

$\frac{1V}{(V/DIV)}$

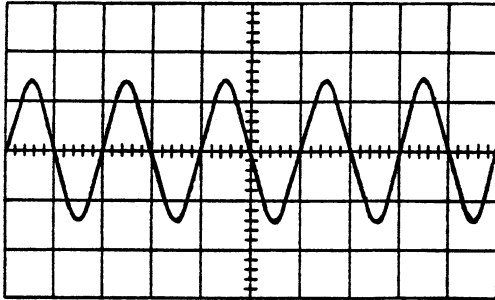


$\frac{.5mS}{(S/DIV)}$

$\frac{2}{(NO.)}$

TP7


$\frac{2V}{(V/DIV)}$

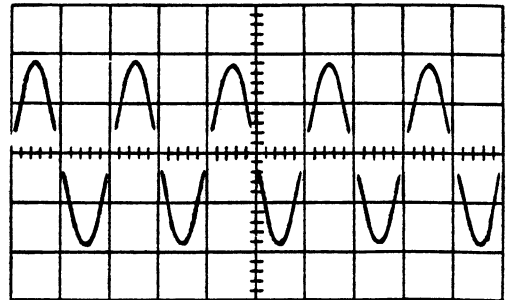

$\frac{.5mS}{(S/DIV)}$

$\frac{3}{(NO.)}$


$\frac{2V}{(V/DIV)}$

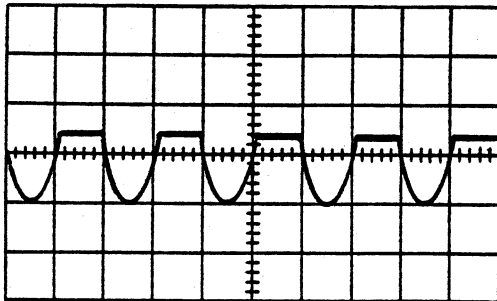

$\frac{.5mS}{(S/DIV)}$

$\frac{4}{(NO.)}$

$\frac{.5V}{(V/DIV)}$

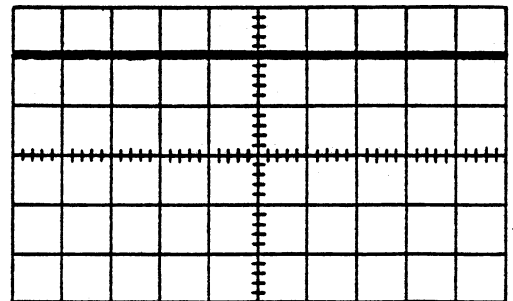

$\frac{.5mS}{(S/DIV)}$

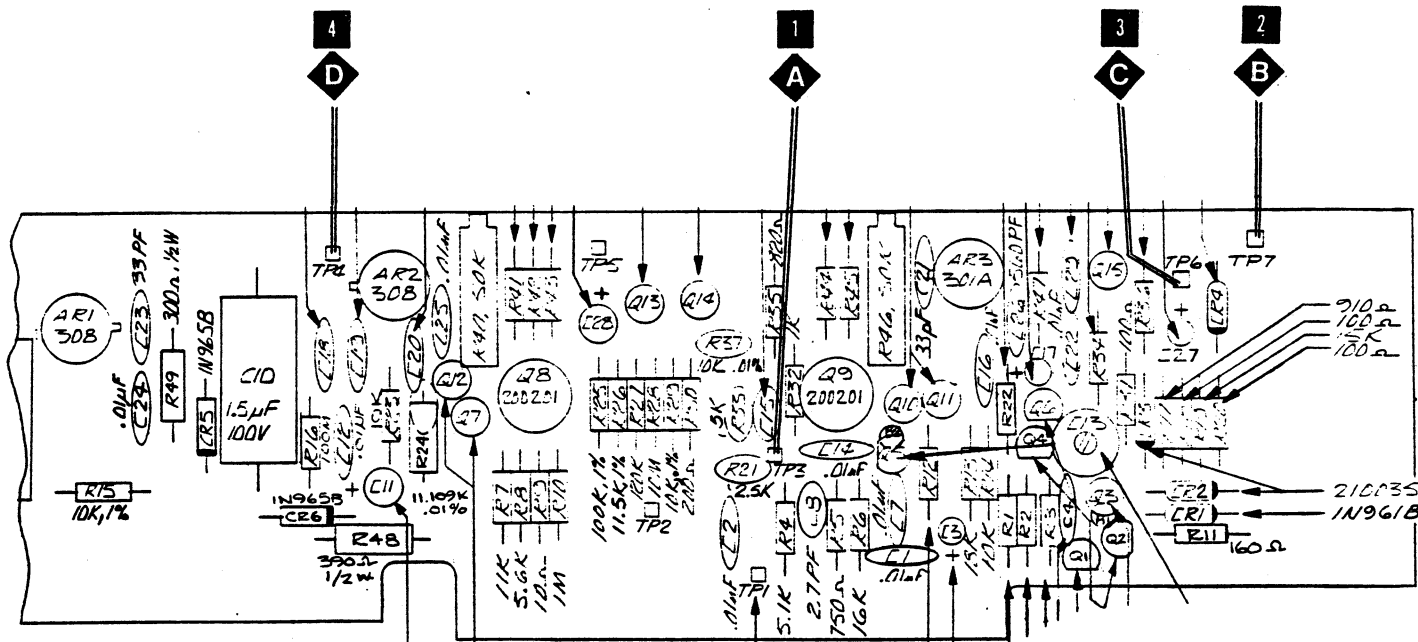


Figure 6.31 - AC Averaging Converter Component Location Diagram

SECTION 7

DRAWINGS

| | |
|--|------|
| 6000 DMM Assy (404193) | 7-3 |
| Chassis Assy, DMM (404009) (404168 - Later Units - See page 7-10) | 7-5 |
| Rear Panel (404013) (404169 - Later Units - See page 7-12) | 7-7 |
| 6001 DMM Assy (404167) | 7-8 |
| Chassis Assy, DMM (404168) | 7-10 |
| Rear Panel (404169) | 7-12 |
| 6002 DMM Assy (404166) | 7-13 |
| Chassis Assy, DMM (404168) | 7-10 |
| Rear Panel (404169) | 7-12 |
| Front Panel (404011) | 7-15 |
| PCB Assy, Display (401600) | 7-16 |
| Schematic, Display (431600) | 7-17 |
| PCB Assy, Motherboard (401602) | 7-18 |
| Schematic, Motherboard (431602) | 7-19 |
| Cable Assembly, Non-Volatile (404012) | 7-23 |
| Chassis Assy, Calibration Module (404053) | 7-24 |
| PCB Assy, Interconnection (401611) | 7-25 |
| Schematic, Interconnection (431611) | 7-26 |
| PCB Assy, Attenuator/Reference (401608) | 7-28 |
| PCB Assy, 10 Volt Reference (403916) | 7-29 |
| Schematic, Attenuator/Reference (431608) | 7-30 |
| PCB Assy, Non-Volatile Memory (401613) | 7-32 |
| Schematic, Non-Volatile Memory (431613) | 7-33 |
| PCB Assy., Digitizer (401609) | 7-34 |
| Schematic, Digitizer (431609) | 7-35 |
| PCB Assy., Isolator (401605) | 7-36 |
| Schematic, Isolator (431605) | 7-37 |
| PCB Assy., Switching (401610) | 7-38 |
| Schematic, Switching (431610) | 7-39 |
| PCB Assy., Computer I (401603) (404171 - Later Units - See page 7-40a) | 7-40 |
| Schematic, Computer I (431603) | 7-41 |
| PCB Assy., Control Logic (401604) | 7-43 |
| Schematic, Control Logic (431604) | 7-44 |
| <u>Option 03 - Used on earlier Models</u> | |
| Fast Waveform Digitizing Assembly (404021) | 7-46 |
| Cable Assy., Fast Digitizer (404022) | 7-47 |
| PCB Assy., Fast Digitizer (401622) | 7-48 |
| Schematic, Fast Digitizer (431622) | 7-49 |
| <u>Option 03SH</u> | |
| Sample and Hold Digitizer Assembly (404059) | 7-50 |
| PCB Assy., Sample and Hold Digitizer (401641) | 7-51 |
| Schematic, Sample and Hold Digitizer (431641) | 7-52 |

Option 09

| | |
|---|------|
| PCB Assy., Ratio Switching (401606) | 7-53 |
| Schematic, Ratio Switching (431606) | 7-54 |

Option 10

| | |
|---|------|
| RMS Converter Assembly (404027) | 7-55 |
| PCB Assy., RMS Converter (401618) | 7-56 |
| Schematic, RMS Converter (431618) | 7-57 |

Option 11

| | |
|---|------|
| AC Ratio Assembly (404026) | 7-58 |
| PCB Assy., RMS Converter (401618) | 7-56 |
| Schematic, RMS Converter (431618) | 7-57 |

Option 14

| | |
|--|------|
| Averaging AC Converter Assembly (404028) | 7-59 |
| PCB Assy., Averaging AC Converter (401619) | 7-60 |
| Schematic, Averaging AC Converter (431619) | 7-61 |
| PCB Assy., Scaling Amplifier (401620) | 7-62 |
| Schematic, Scaling Amplifier (431620) | 7-63 |

Option 24

| | |
|--|------|
| Ohms Assembly (404023) | 7-64 |
| PCB Assy., Ohms (401612) | 7-65 |
| PCB Assy., Ohms Reference (401607) | 7-66 |
| Schematic, Ohms (431612) | 7-67 |

Option 34

| | |
|--|------|
| 4-Wire Ratio Assembly (404025) | 7-68 |
| PCB Assy., 4-Wire Ratio (401626) | 7-69 |
| Schematic, 4-Wire Ratio (431626) | 7-70 |

Option 41

| | |
|--------------------------------------|------|
| Preamp Assembly (404024) | 7-71 |
| PCB Assy., Preamp (401616) | 7-72 |
| Schematic, Preamp (431616) | 7-73 |

Option 55


| | |
|--|------|
| GPIB IEEE-488-1975 Assembly (404017) | 7-74 |
| PCB Assy., Address Switch (401625) | 7-75 |
| PCB Assy., GPIB (401623) | 7-76 |
| Schematic, GPIB (431623) | 7-77 |
| Cable Assy., GPIB (404018) | 7-79 |

Option 59

| | |
|--|------|
| Parallel BCD Assembly (404019) | 7-80 |
| PCB Assy., Parallel BCD (401624) | 7-81 |
| Schematic, Parallel BCD (431624) | 7-82 |
| Cable Assy., Parallel BCD (404020) | 7-84 |

Option 71

| | |
|---|------|
| 100V, 220V, 240V Operation (404042) | 7-85 |
|---|------|

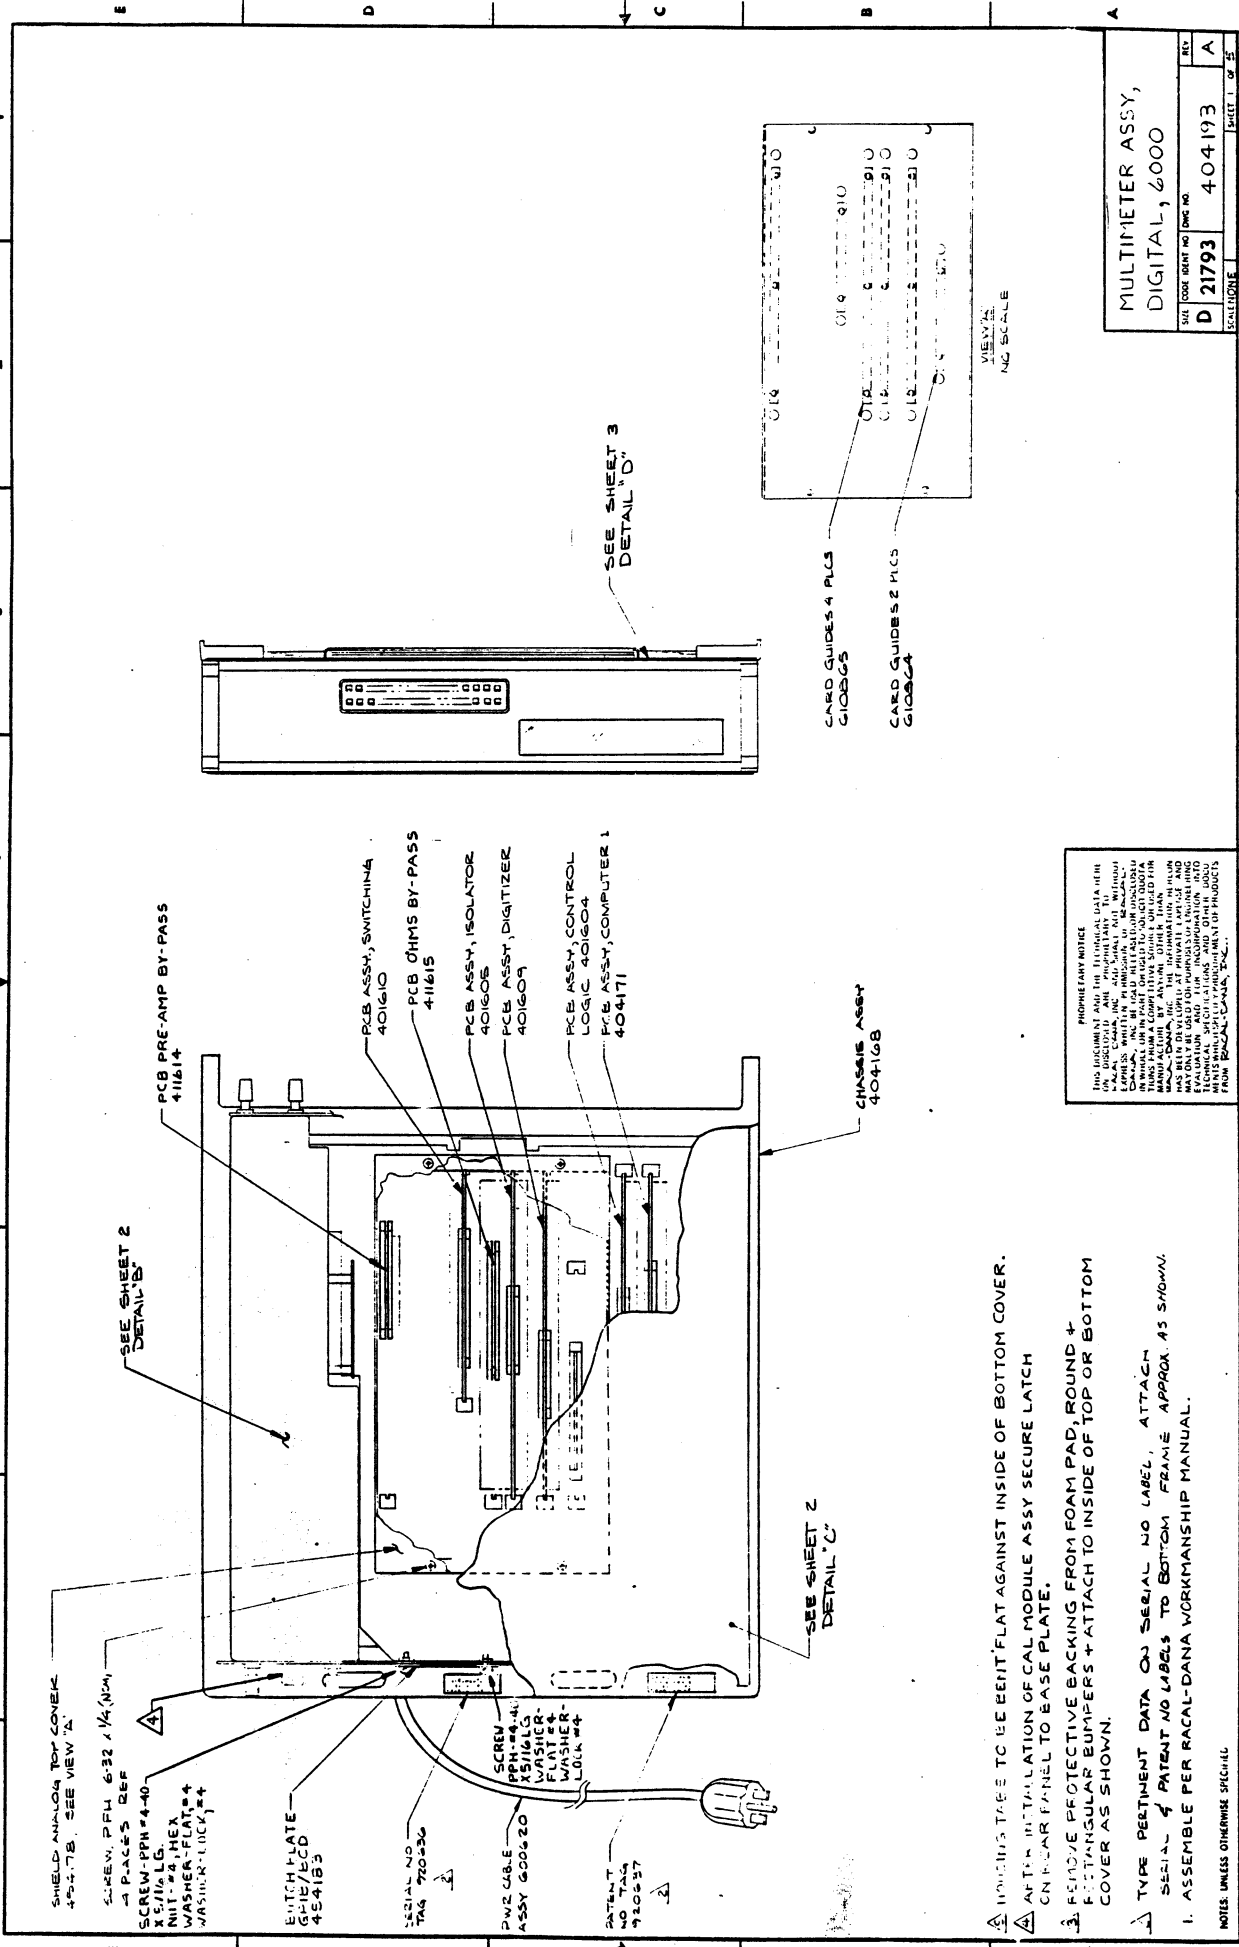

MULTIPLEXER ASSY,
DIGITAL, 6000

DWG NO. **D 21793** DATE **4 04 193**


SHEET 1 OF 5

PROPERTY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE THE PROPERTY OF RACAL-DANA, INC. AND SHALL REMAIN THE PROPERTY OF RACAL-DANA, INC. IN WHOLE OR IN PART. NO REPRODUCTION OR TRANSMISSION IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, IS PERMITTED WITHOUT THE WRITTEN PERMISSION OF RACAL-DANA, INC. THIS DOCUMENT IS THE PROPERTY OF RACAL-DANA, INC. AND IS LOANED TO YOU FOR YOUR INFORMATION ONLY. IT IS NOT TO BE DISTRIBUTED TO OTHER THAN THE PERSON TO WHOM IT IS LOANED. IT IS TO BE RETURNED TO RACAL-DANA, INC. UPON REQUEST. THIS DOCUMENT IS THE PROPERTY OF RACAL-DANA, INC. AND IS LOANED TO YOU FOR YOUR INFORMATION ONLY. IT IS NOT TO BE DISTRIBUTED TO OTHER THAN THE PERSON TO WHOM IT IS LOANED. IT IS TO BE RETURNED TO RACAL-DANA, INC. UPON REQUEST.

- 1. TYPE PERTINENT DATA ON SERIAL NO LABEL, ATTACH SERIAL & PATENT NO LABELS TO BOTTOM FRAME APPROX. AS SHOWN.
- 2. REMOVE PROTECTIVE BACKING FROM FOAM PAD, ROUND & ATTACH TO INSIDE OF BOTTOM COVER AS SHOWN.
- 3. ATTACH PROTECTIVE BUMPERS & ATTACH TO INSIDE OF TOP OR BOTTOM COVER AS SHOWN.
- 4. AFTER INSTALLATION OF CAL MODULE ASSY SECURE LATCH ON REAR PANEL TO BASE PLATE.
- 5. UNIFORMING TAPE TO BE BENT FLAT AGAINST INSIDE OF BOTTOM COVER.

NOTES: UNLESS OTHERWISE SPECIFIED

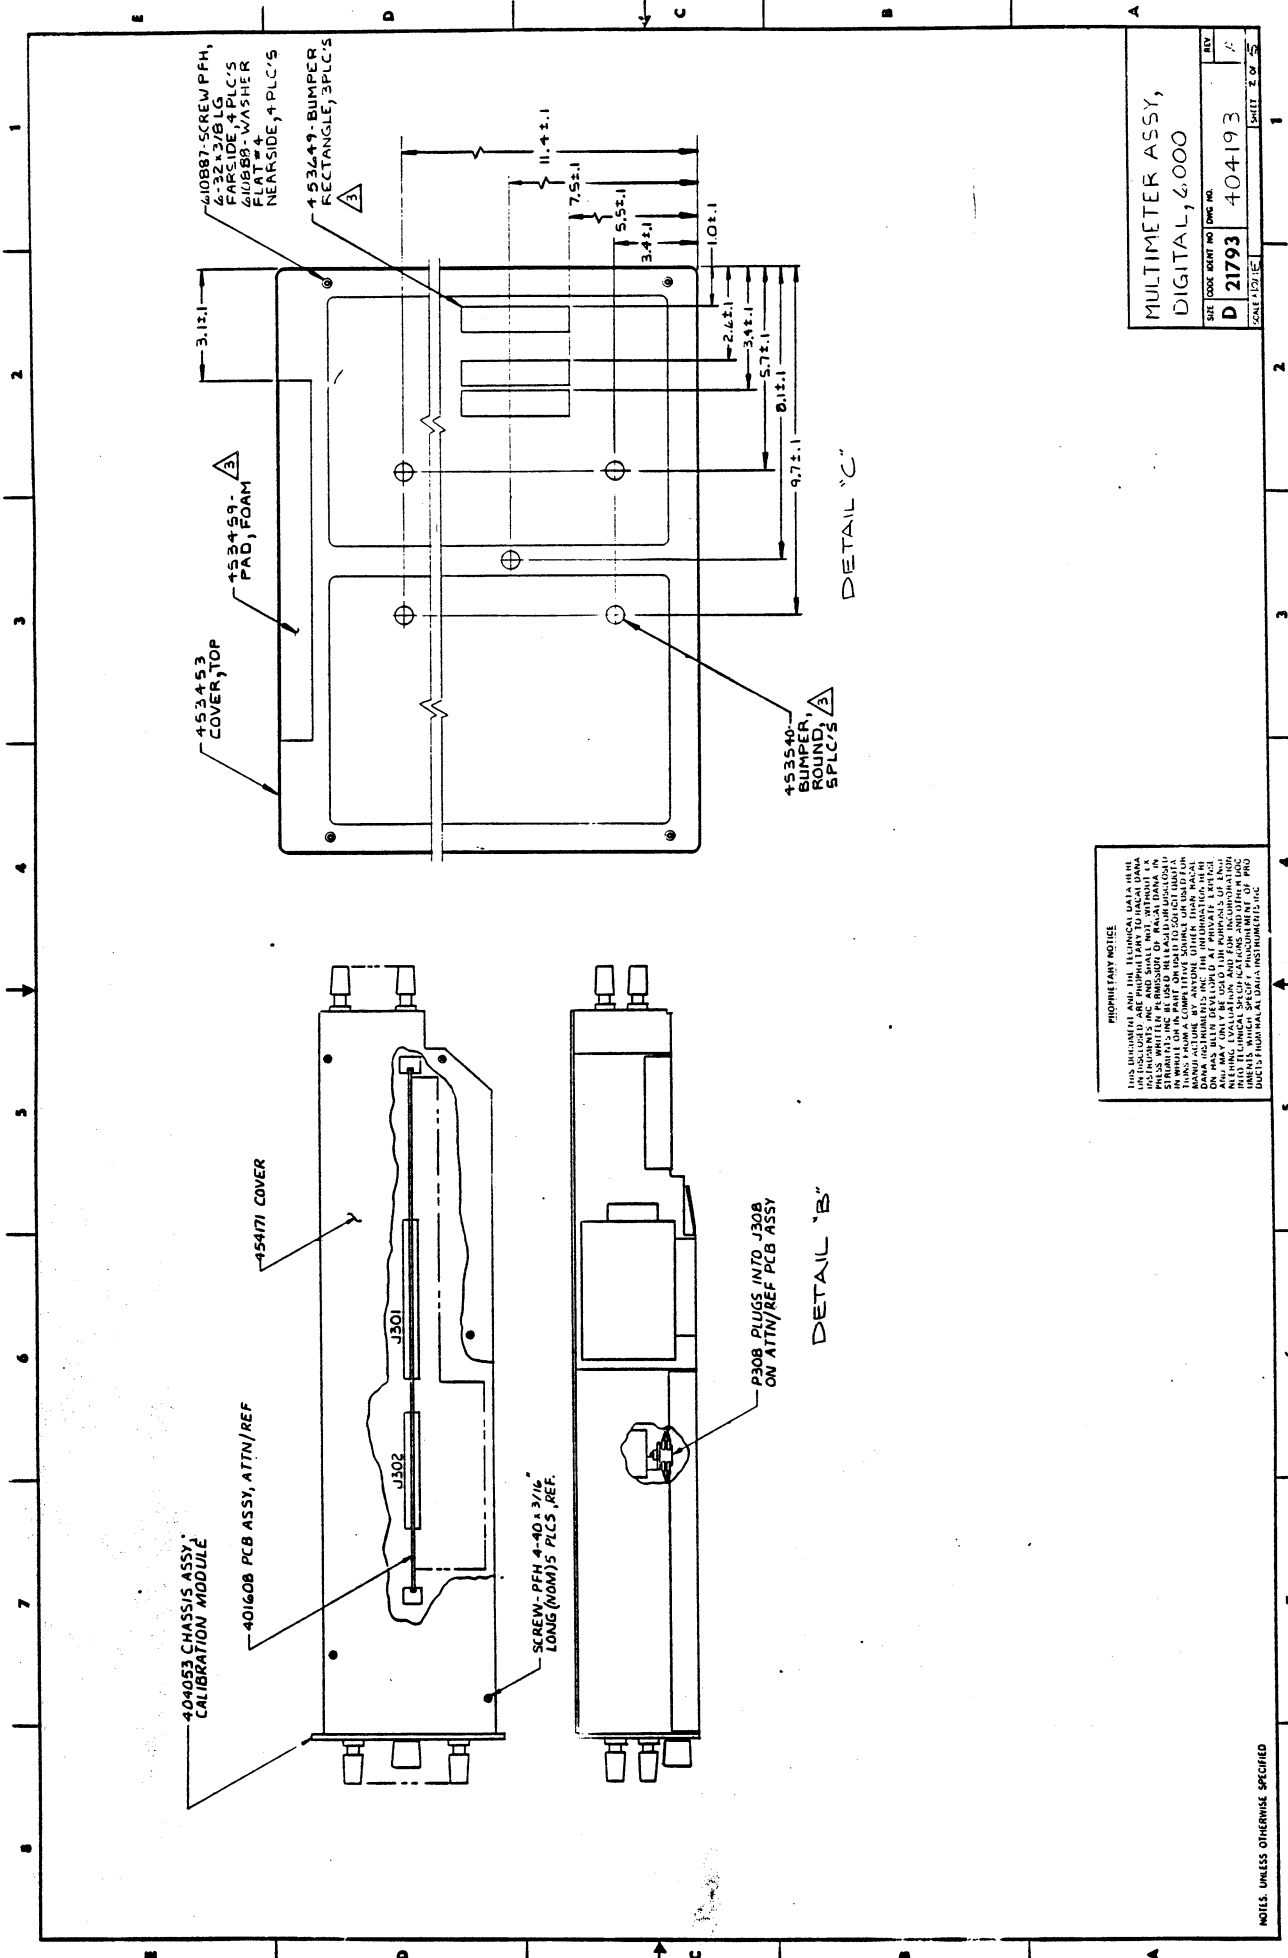

| | |
|------------------------------------|--------|
| MULTIMETER ASSY, DIGITAL, 6,000 | |
| SIZ | LOC |
| D 21793 | 404193 |
| SCALE | DATE |
| REV | REV |
| 1 | 2 OF 2 |


PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE BY THIS NOTICE AND SHALL REMAIN UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE BY THIS NOTICE. THIS DOCUMENT IS THE PROPERTY OF HONEYWELL INTERNATIONAL INC. AND SHALL BE LOANED TO YOU BY HONEYWELL INTERNATIONAL INC. IN WHOLE OR IN PART UNDER THE PROVISIONS OF THE HONEYWELL INTERNATIONAL INC. PATENT AND TRADE SECRET ACT. ANY REPRODUCTION, DISTRIBUTION, OR DISSEMINATION OF THIS DOCUMENT OR THE TECHNICAL DATA HEREIN WITHOUT THE WRITTEN PERMISSION OF HONEYWELL INTERNATIONAL INC. IS PROHIBITED.


NOTES: UNLESS OTHERWISE SPECIFIED

CHASSIS ASSEMBLY

| | | | |
|-----|-------|--------|------|
| REV | DATE | BY | CHKD |
| D | 21793 | 404009 | J |

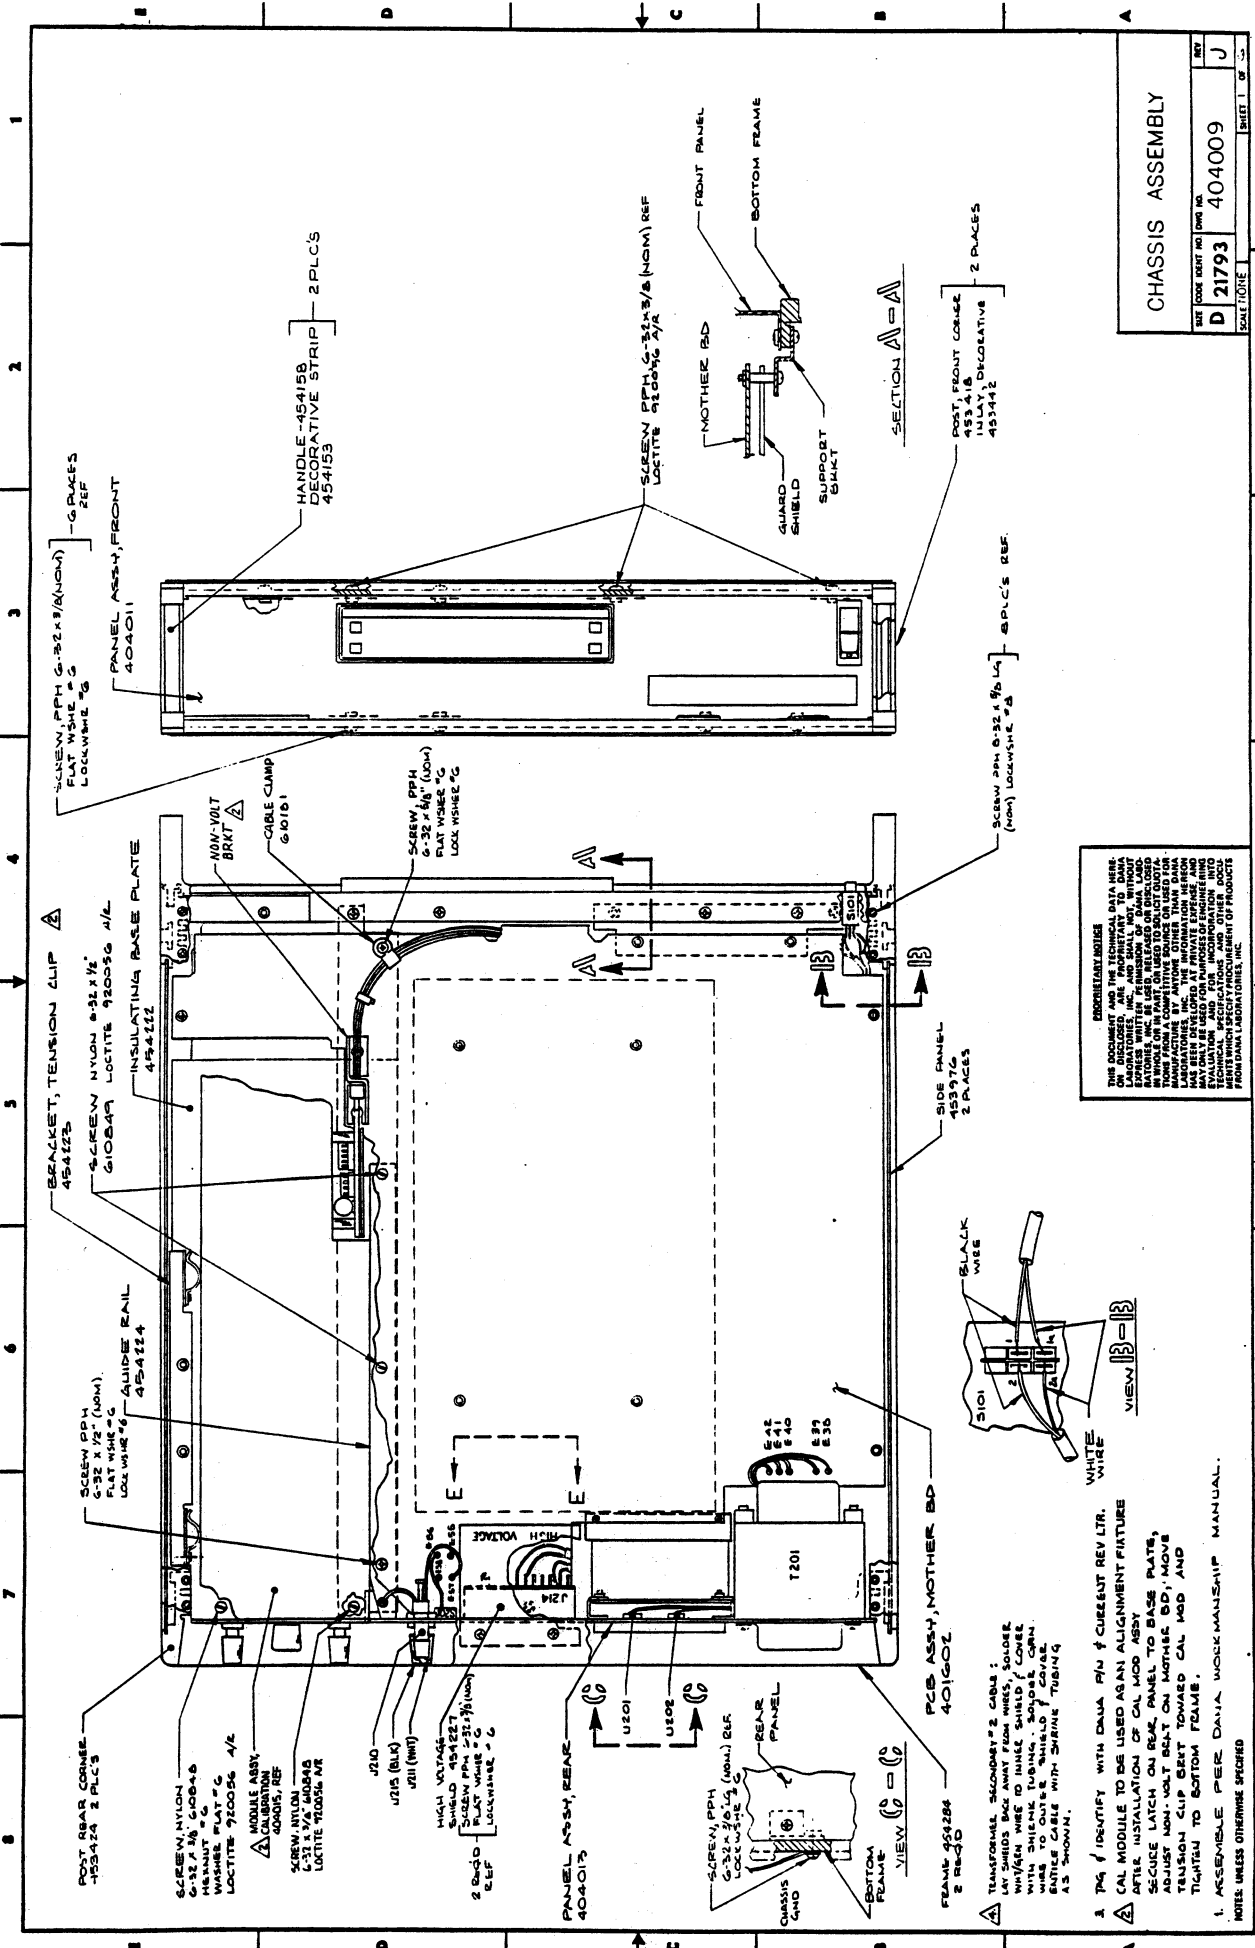


DISCRETIONARY NOTICE
 THE DOCUMENT AND THE TECHNICAL DATA HEREON ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. THIS INFORMATION IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. THIS INFORMATION IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. THIS INFORMATION IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE.

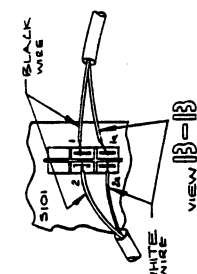

NOTES


- 1. IDENTIFY WITH DATA PIN # CURRENT REV LTR.
- 2. CAL MODULE TO BE USED ARAN ALIGNMENT FEATURE AFTER INSTALLATION OF CAL MOD ASSY.
- 3. SECURE LATCH ON REAR PANEL TO BASE PLATE, ADJUST NON-VOLT BERT ON MOTHER BD, MOVE TENSION CLIP BERT TOWARD CAL MOD AND TIGHTEN TO BOTTOM FRAME.
- 4. ASSEMBLE PER DANA WORKMANSHIP MANUAL, UNLESS OTHERWISE SPECIFIED.

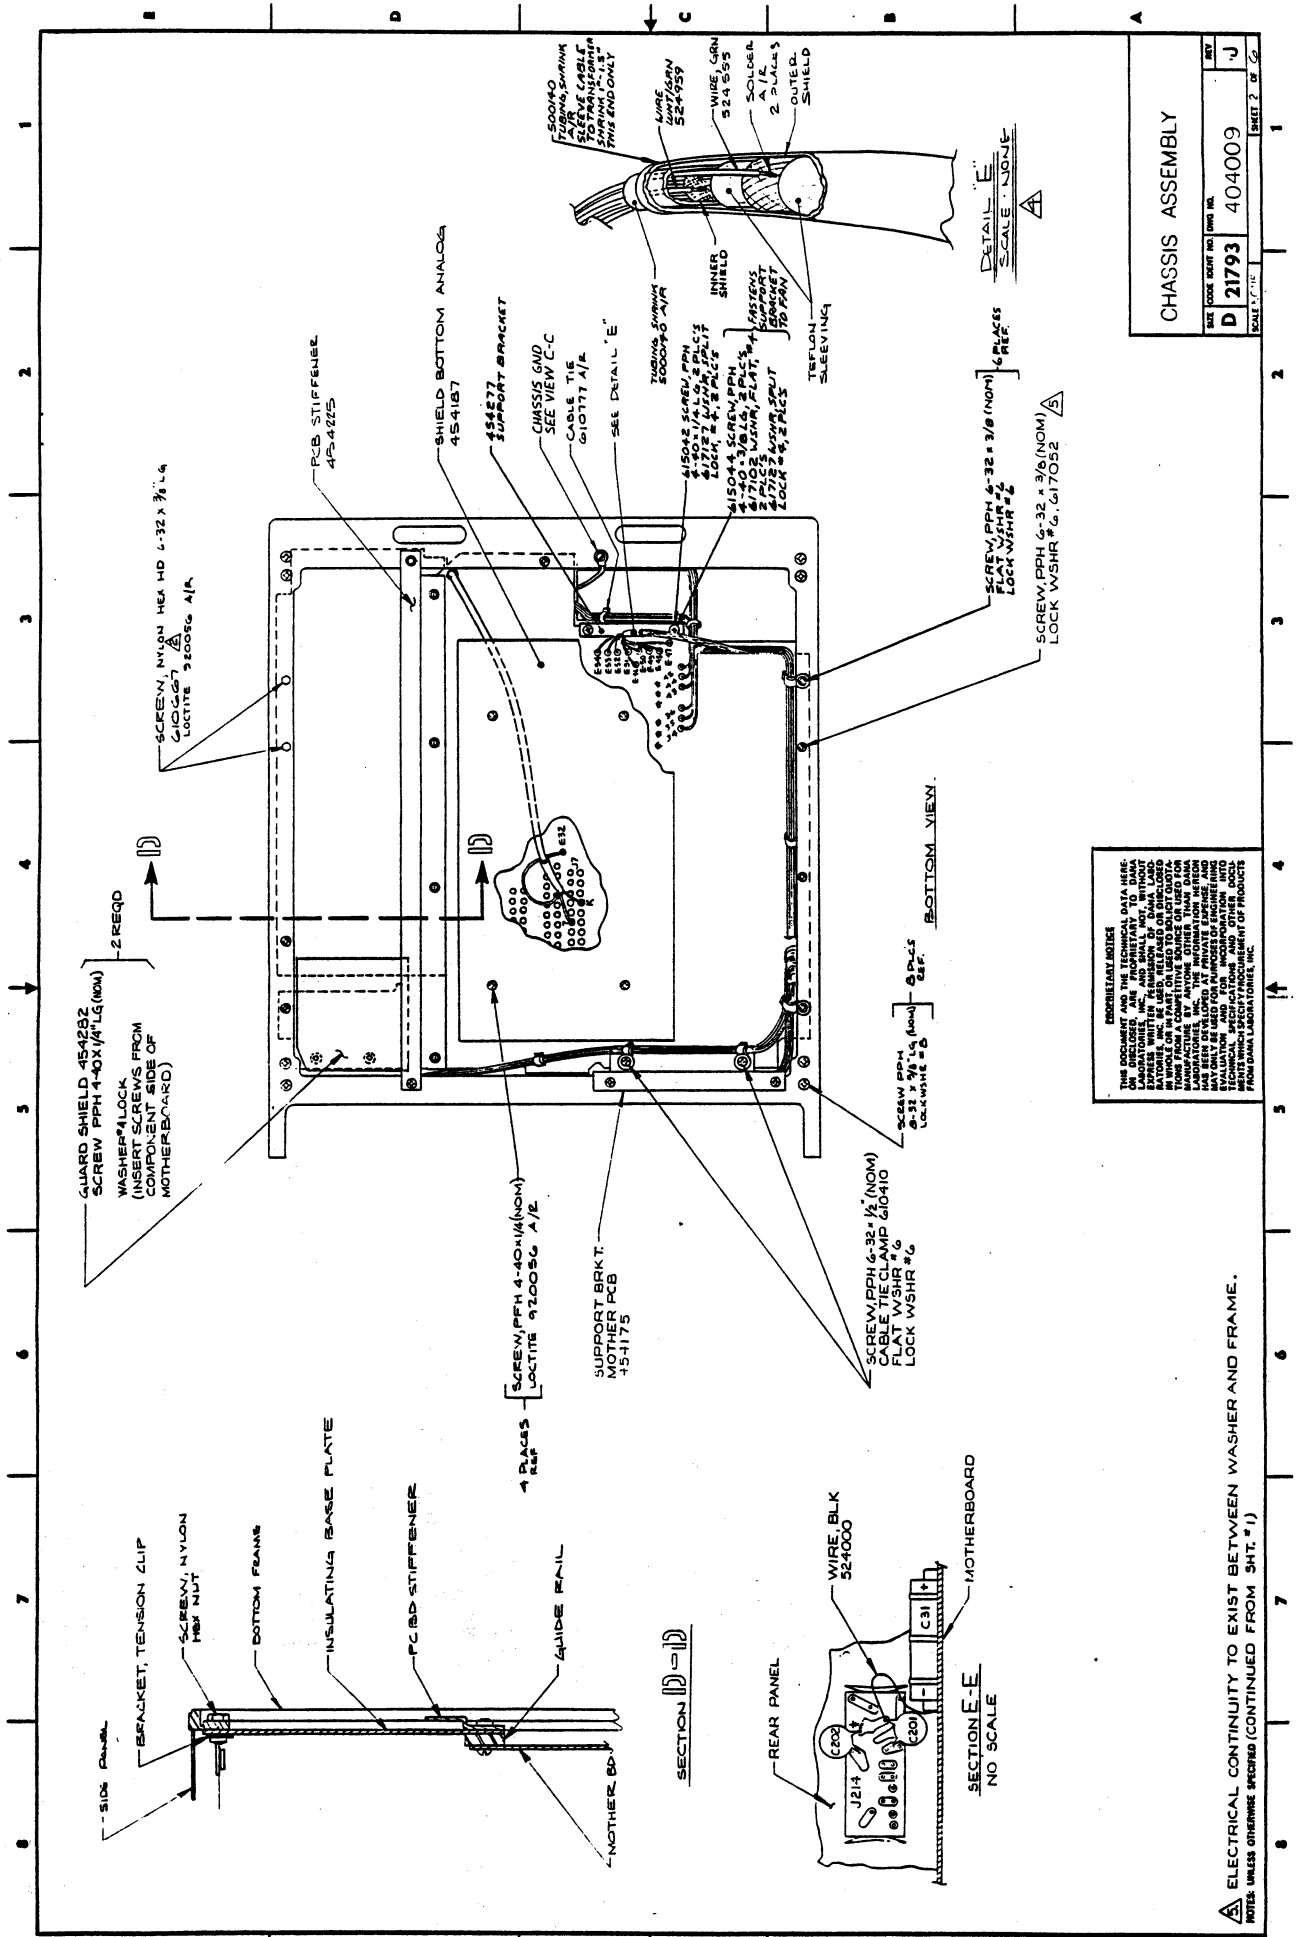

PROHIBITORY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON CONTAINED HEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE AND SHALL NOT BE RELEASED TO THE PUBLIC, IN WHOLE OR IN PART, ON UNLESS TO ELUCLD QUOTA MANUFACTURE BY ANYONE OTHER THAN DANA LABORATORIES, INC. OR ITS SUBSIDIARIES. THIS DOCUMENT HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. AND SHALL NOT BE RELEASED TO THE PUBLIC, IN WHOLE OR IN PART, ON UNLESS TO ELUCLD QUOTA MANUFACTURE BY ANYONE OTHER THAN DANA LABORATORIES, INC. OR ITS SUBSIDIARIES. THIS DOCUMENT HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC.

| | |
|----------------------------|-------------|
| CHASSIS ASSEMBLY | |
| SEE LOCK WSHR #6 OR QWS #6 | D 21793 |
| QWS NO. | 404009 |
| REV. | J |
| SCALE | SCALE: NONE |
| SHEET # | 2 OF 2 |

▲ ELECTRICAL CONTINUITY TO EXIST BETWEEN WASHER AND FRAME.
NOTES: UNLESS OTHERWISE SPECIFIED (CONTINUED FROM SHT. #1)

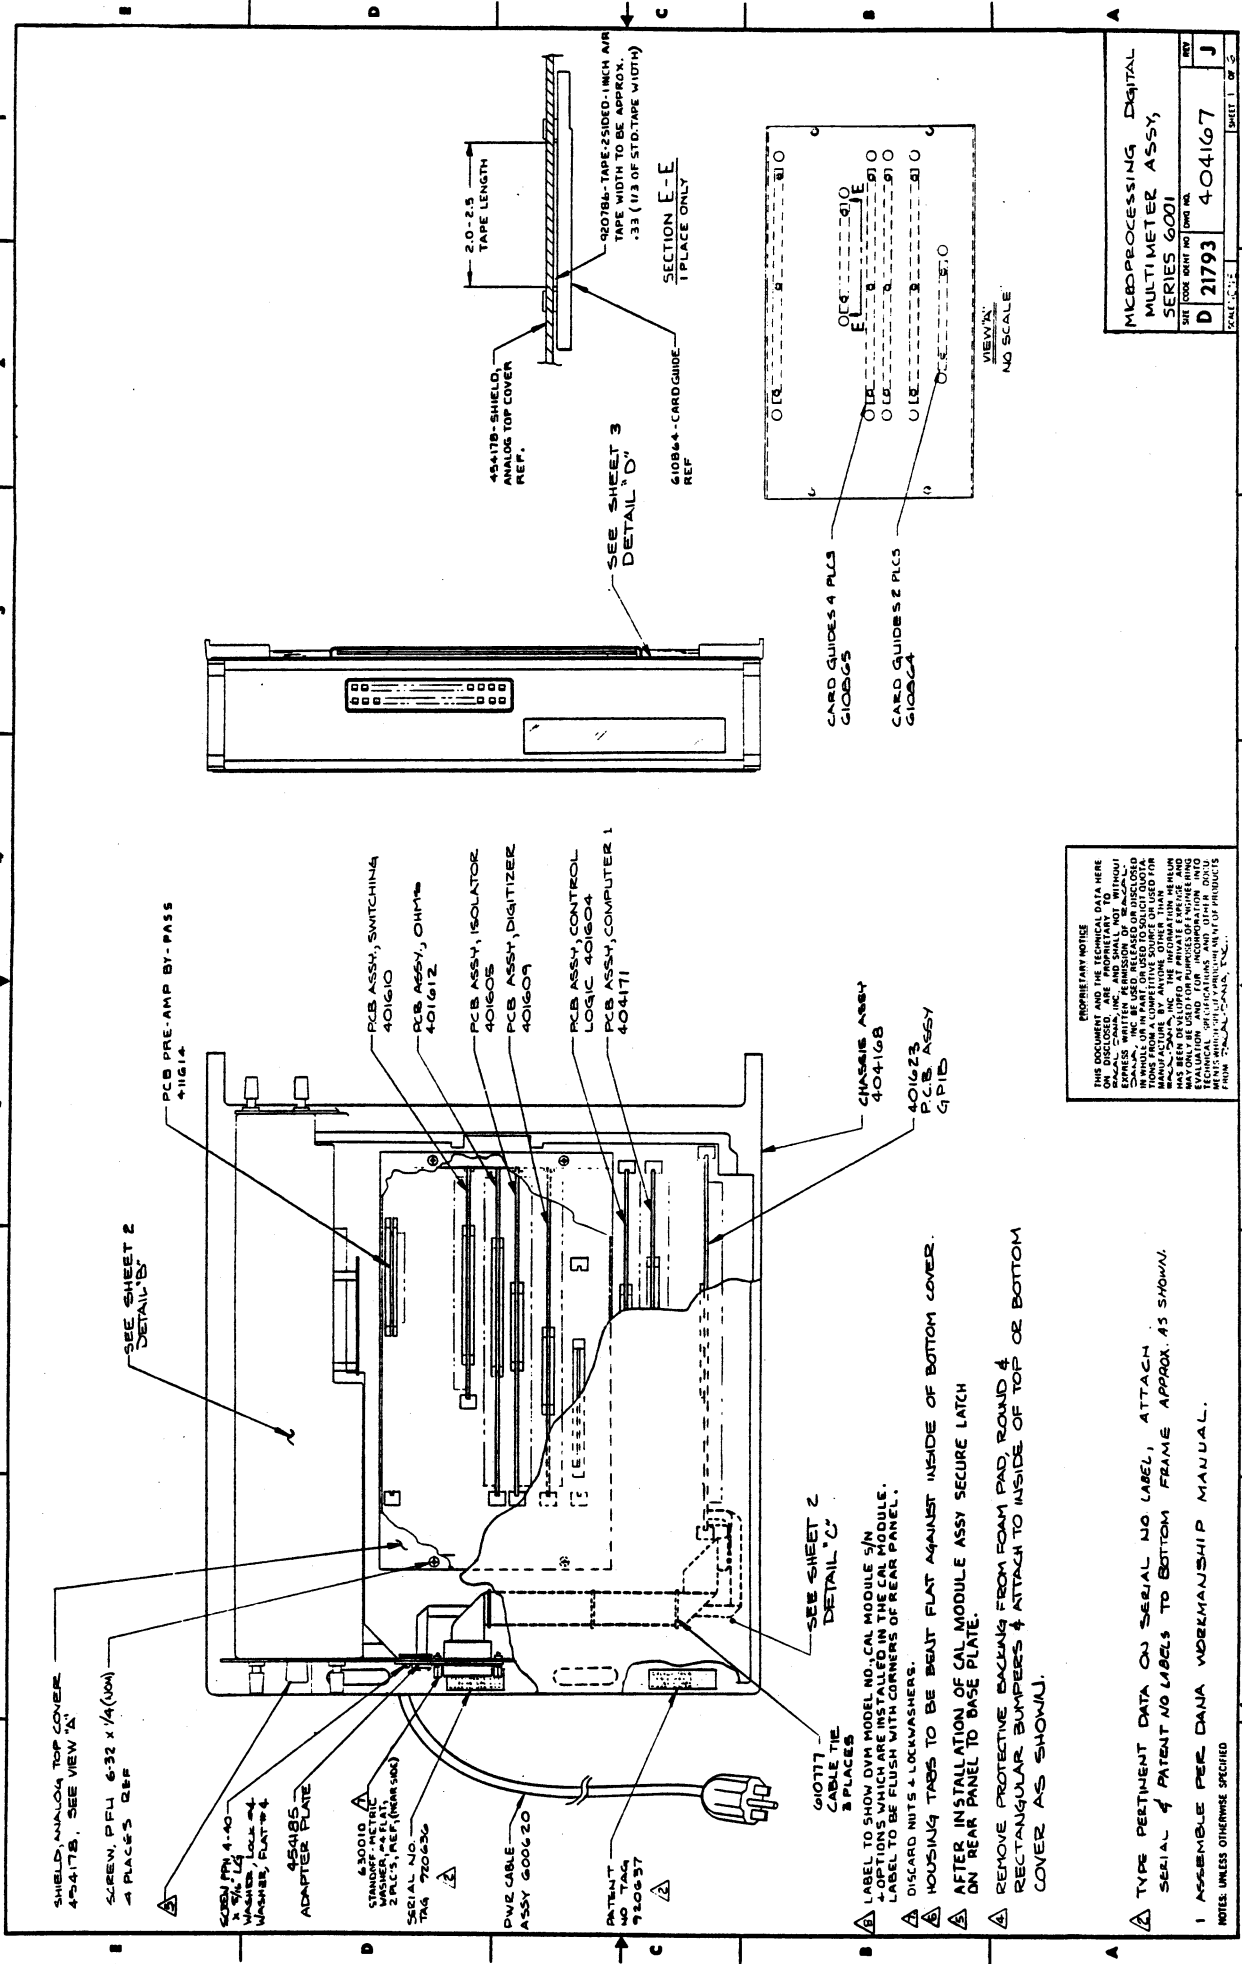


- ▲ LABEL TO SHOW DVM MODEL NO., CAL MODULE S/N & OPERATIONS WHICH ARE INSTALLED IN THE CAL MODULE. LABEL TO BE PUSHED WITH CORNERS OF REAR PANEL.
- ▲ DISCARD NUTS & LOCKWASHERS.
- ▲ HOUSING TABS TO BE BEAT FLAT AGAINST INSIDE OF BOTTOM COVER.
- ▲ AFTER INSTALLATION OF CAL MODULE ASSY SECURE LATCH ON REAR PANEL TO BASE PLATE.
- ▲ REMOVE PROTECTIVE BACKING FROM FOAM PAD, ROUND & RECTANGULAR BUMPERS & ATTACH TO INSIDE OF TOP OR BOTTOM COVER AS SHOWN.

| | |
|-------------------------|--------|
| MICROPROCESSING Digital | |
| MULTIMETER ASSY, | |
| SERIES 6001 | |
| SHEET NO (DWM NO) | 404167 |
| REV | J |

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO MICROPROCESSING DIGITAL, INC. AND EXPRESS WRITTEN PERMISSION OF MICROPROCESSING DIGITAL, INC. IS REQUIRED TO REPRODUCE OR TRANSMIT IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. THIS DOCUMENT IS TO BE USED FOR PURPOSES OF ENGINEERING AND TECHNICAL SPECIFICATIONS ONLY. OTHER DOCUMENTS FROM MICROPROCESSING DIGITAL, INC. MAY BE USED IN CONNECTION WITH THIS DOCUMENT.


- ▲ TYPE PERTINENT DATA ON SERIAL NO LABEL, ATTACH SERIAL & PART NO LABELS TO BOTTOM FRAME APPROX. AS SHOWN
- 1 ASSEMBLE PER DANA WORKMANSHIP MANUAL.
NOTES UNLESS OTHERWISE SPECIFIED

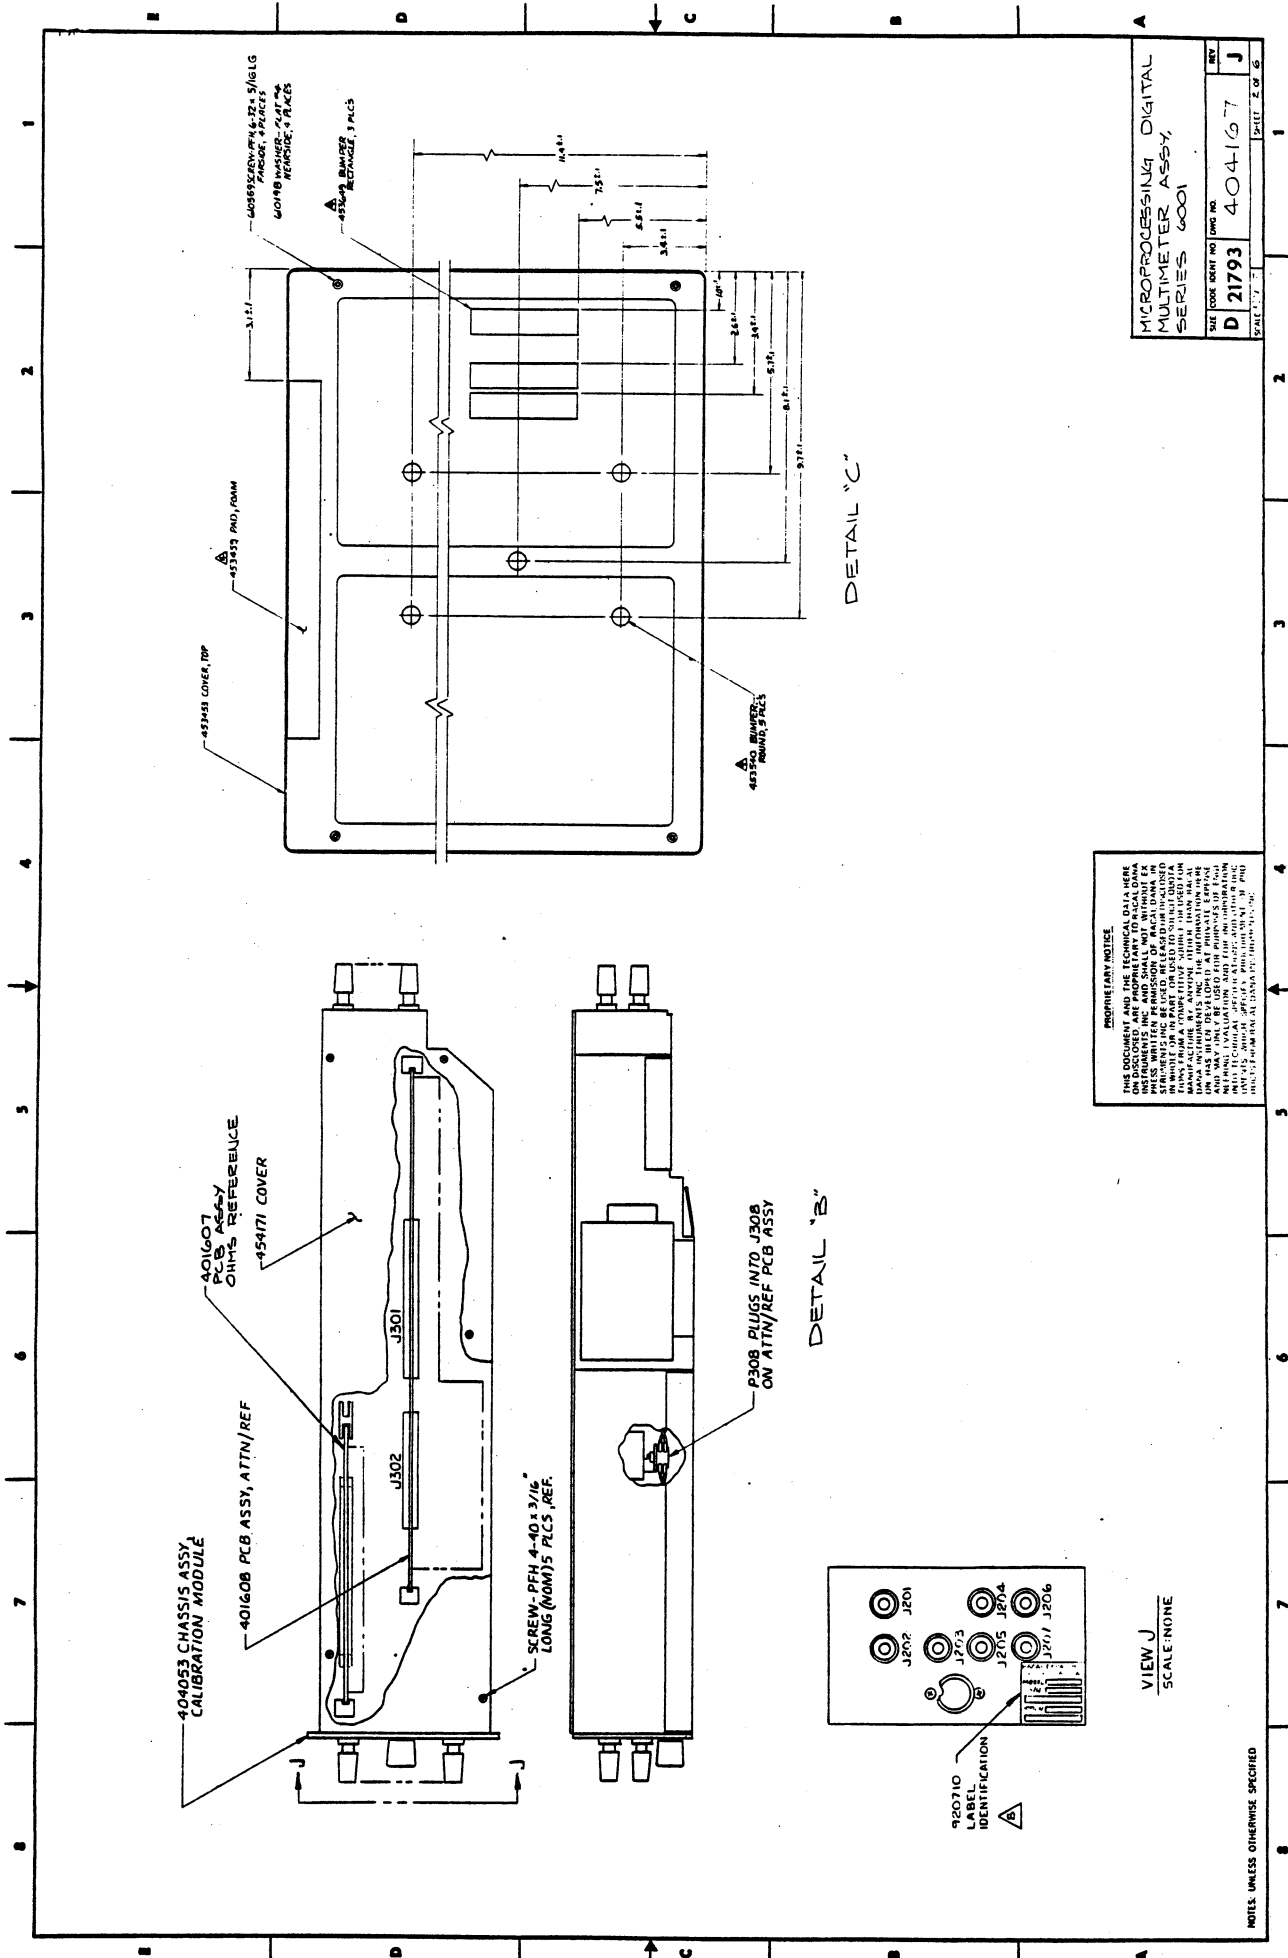

| | |
|-------------------------|--------|
| MICROPROCESSING DIGITAL | |
| MULTIMETER ASSY, | |
| SERIES 6001 | |
| SIZE | DATE |
| D 21793 | 404167 |
| REV | J |
| SCALE | UNIT |
| 1:1 | INCHES |


PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO MICROLAP, INC. AND ARE NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WITHOUT THE WRITTEN PERMISSION OF MICROLAP, INC. IN WHOLE OR IN PART OR USED TO SUPPORT, DESIGN, MANUFACTURE, OR ANY OTHER TECHNICAL DATA. THIS DOCUMENT IS THE PROPERTY OF MICROLAP, INC. AND MAY ONLY BE USED FOR PURPOSES OF THE PROJECT FOR WHICH IT WAS SPECIFICALLY PREPARED. MICROLAP, INC. SHALL BE RESPONSIBLE FOR ANY AND ALL DAMAGES, INCLUDING REASONABLE ATTORNEY'S FEES, ARISING FROM THE USE OF THIS DOCUMENT.

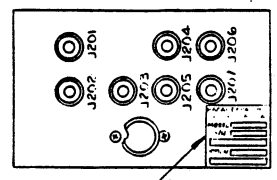


VIEW J
SCALE: 1:1

NOTES: UNLESS OTHERWISE SPECIFIED




| | | |
|---|---------|---------|
| MICROPROCESSING Digital MULTIMETER ASSEMBLY SERIES 6001 | | |
| REV | DATE | BY |
| J | 4/04/67 | D 21793 |
| SHEET | 1 OF 2 | |

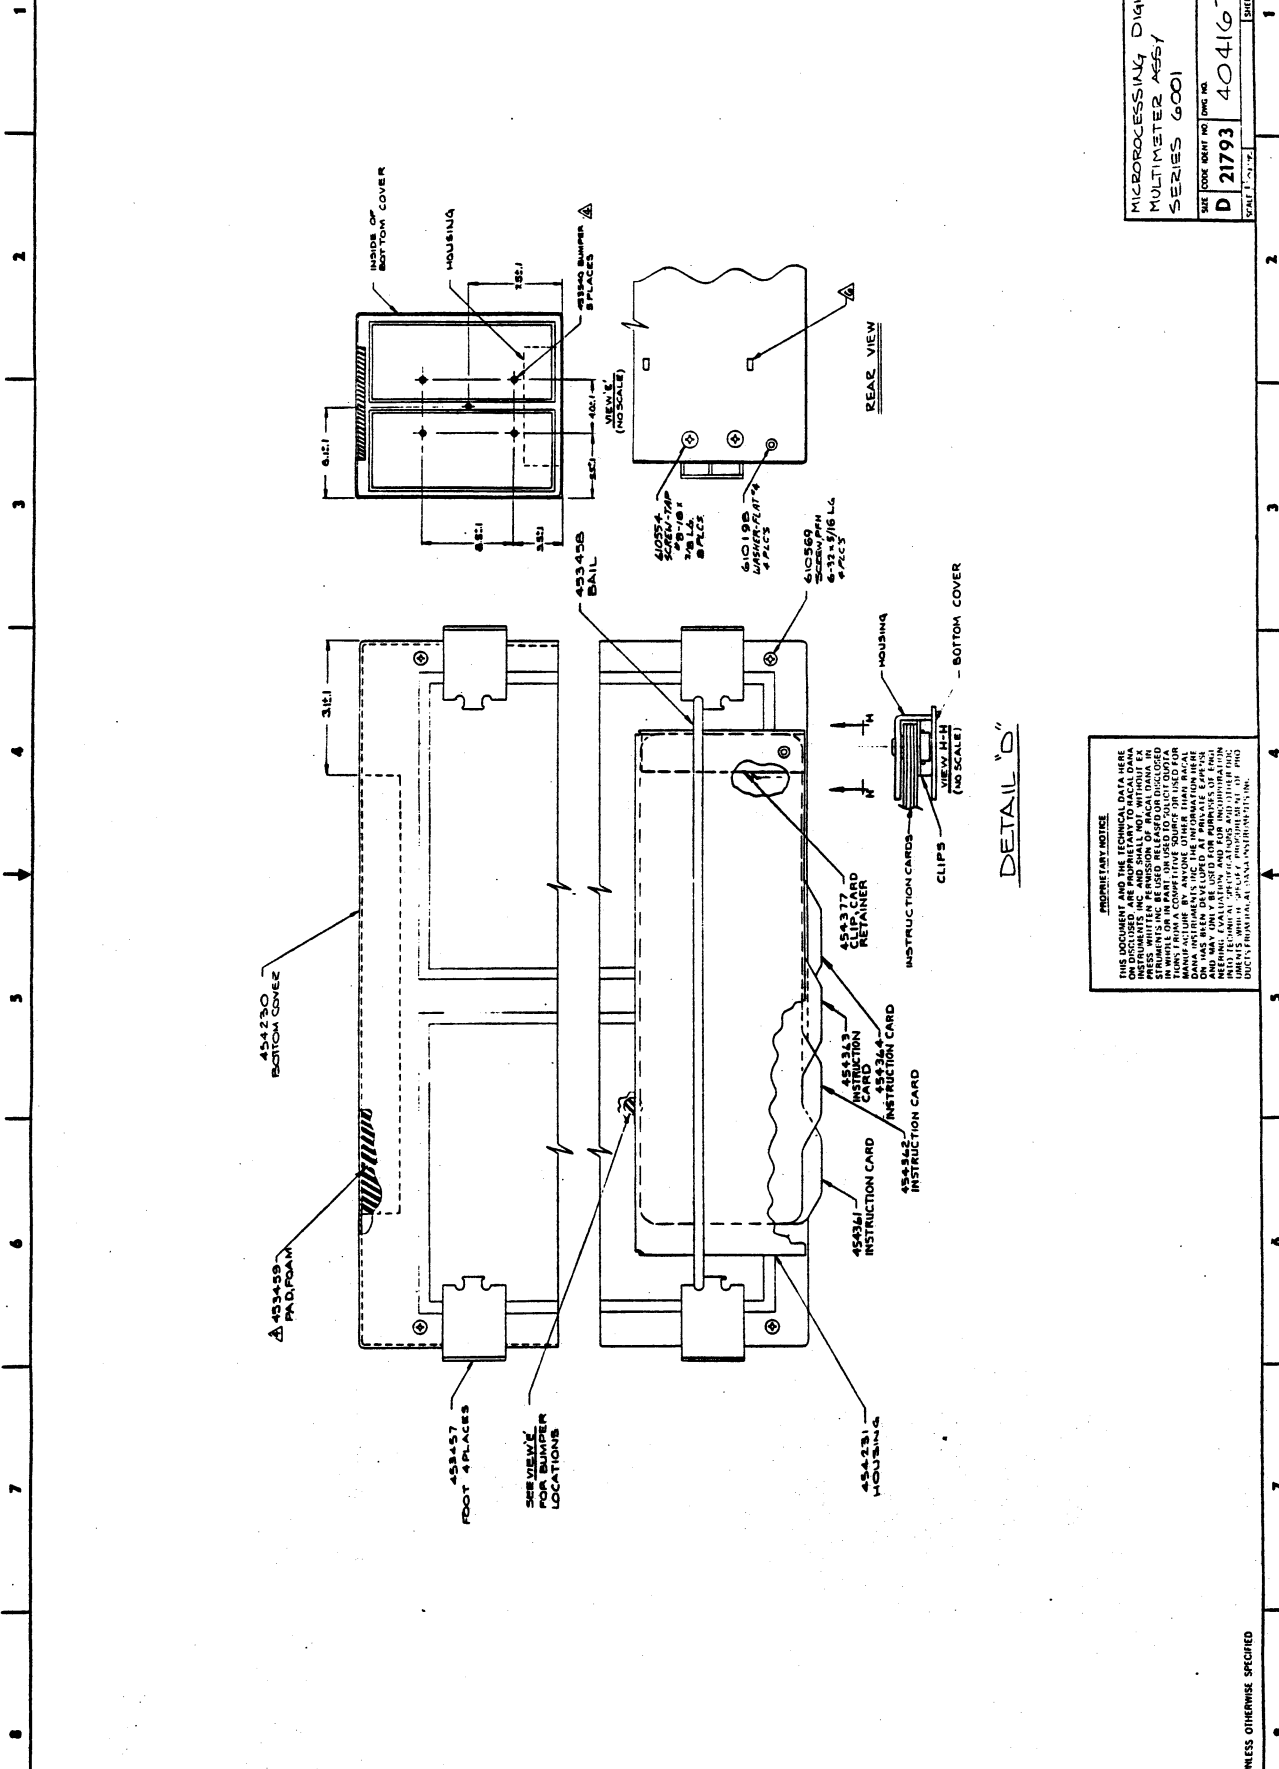

PROPRIETARY NOTICE
 THE INFORMATION DISCLOSED HEREIN IS PROPRIETARY TO ANALOG DATA INSTRUMENTS, INC. AND SHALL NOT BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF ANALOG DATA INSTRUMENTS, INC. THIS INFORMATION HAS BEEN DEVELOPED FOR AIRWAYS, BUT HAS BEEN EVALUATED AND FOR INCORPORATION INTO A STANDARD INSTRUMENTATION UNIT. THIS UNIT IS A PRODUCT OF ANALOG DATA INSTRUMENTS, INC.


NOTES: UNLESS OTHERWISE SPECIFIED

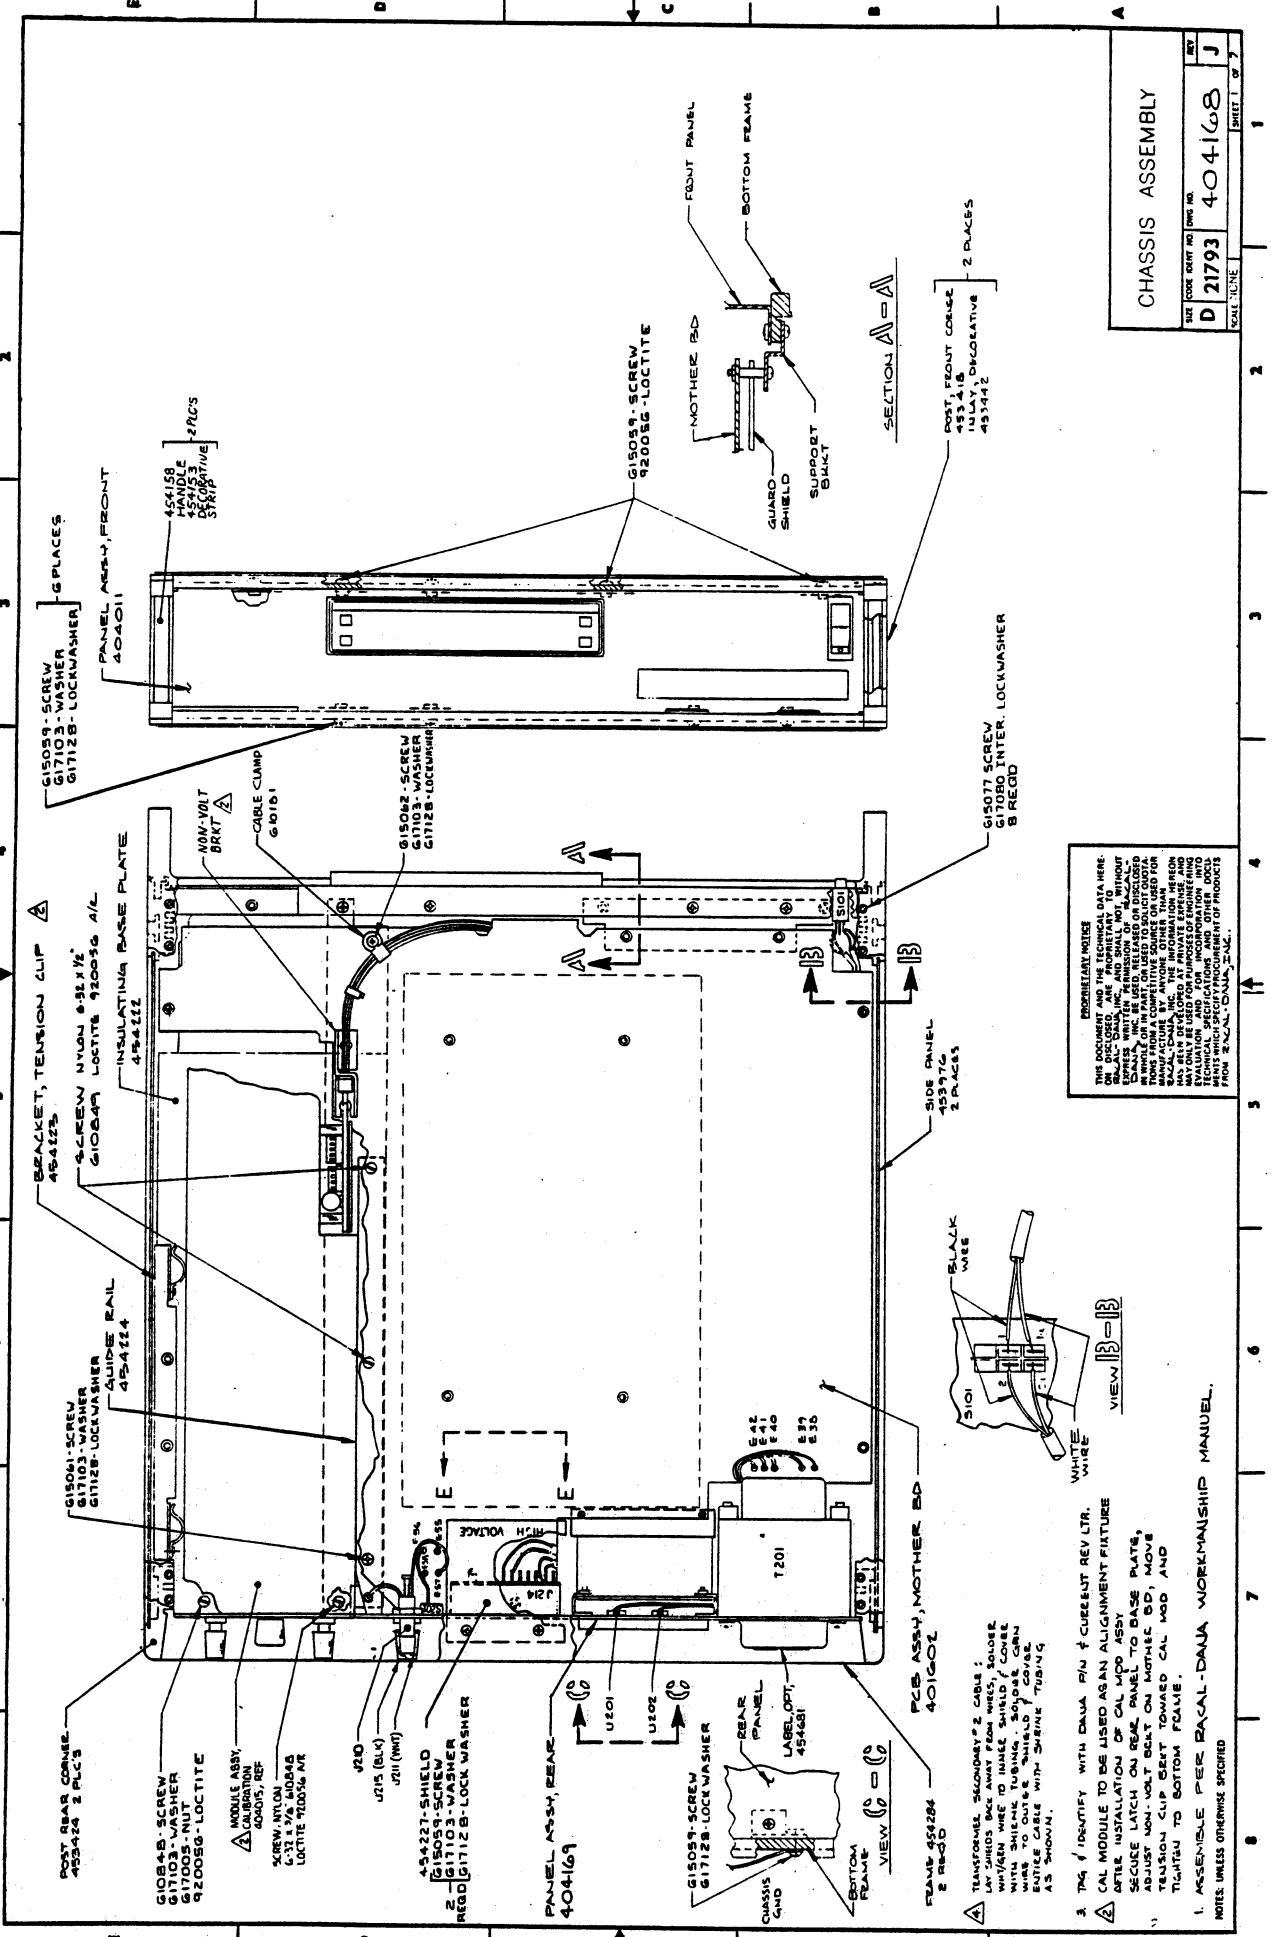


| | |
|-------------------------|---------|
| CHASSIS ASSEMBLY | |
| REV | J |
| DATE | 4-04-68 |
| DESIGN NO | D 21793 |
| SCALE: NONE | |
| SHEET 1 OF 7 | |

PROHIBITION NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREON ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. IT IS THE POLICY OF ECAL-DANA, INC. AND SHALL NOT, WITHOUT EXPRESS WRITTEN PERMISSION OF ECAL-DANA, INC. BE REPRODUCED OR DISCLOSED IN WHOLE OR IN PART, OR USED TO SOLICIT OFFER OF BUSINESS OR CONTRACTS, FOR THE MANUFACTURE BY ANYONE OTHER THAN ECAL-DANA, INC. OF ANY PRODUCT OR SERVICE THAT MAY BEY DEVELOPED AT PRIVATE EXPENSE AND WHICH IS IN THE PUBLIC INTEREST. FOR TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTATION INFORMATION OF PRODUCTS FROM ECAL-DANA, INC.

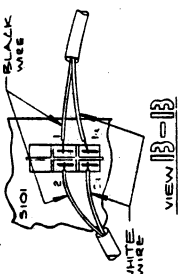

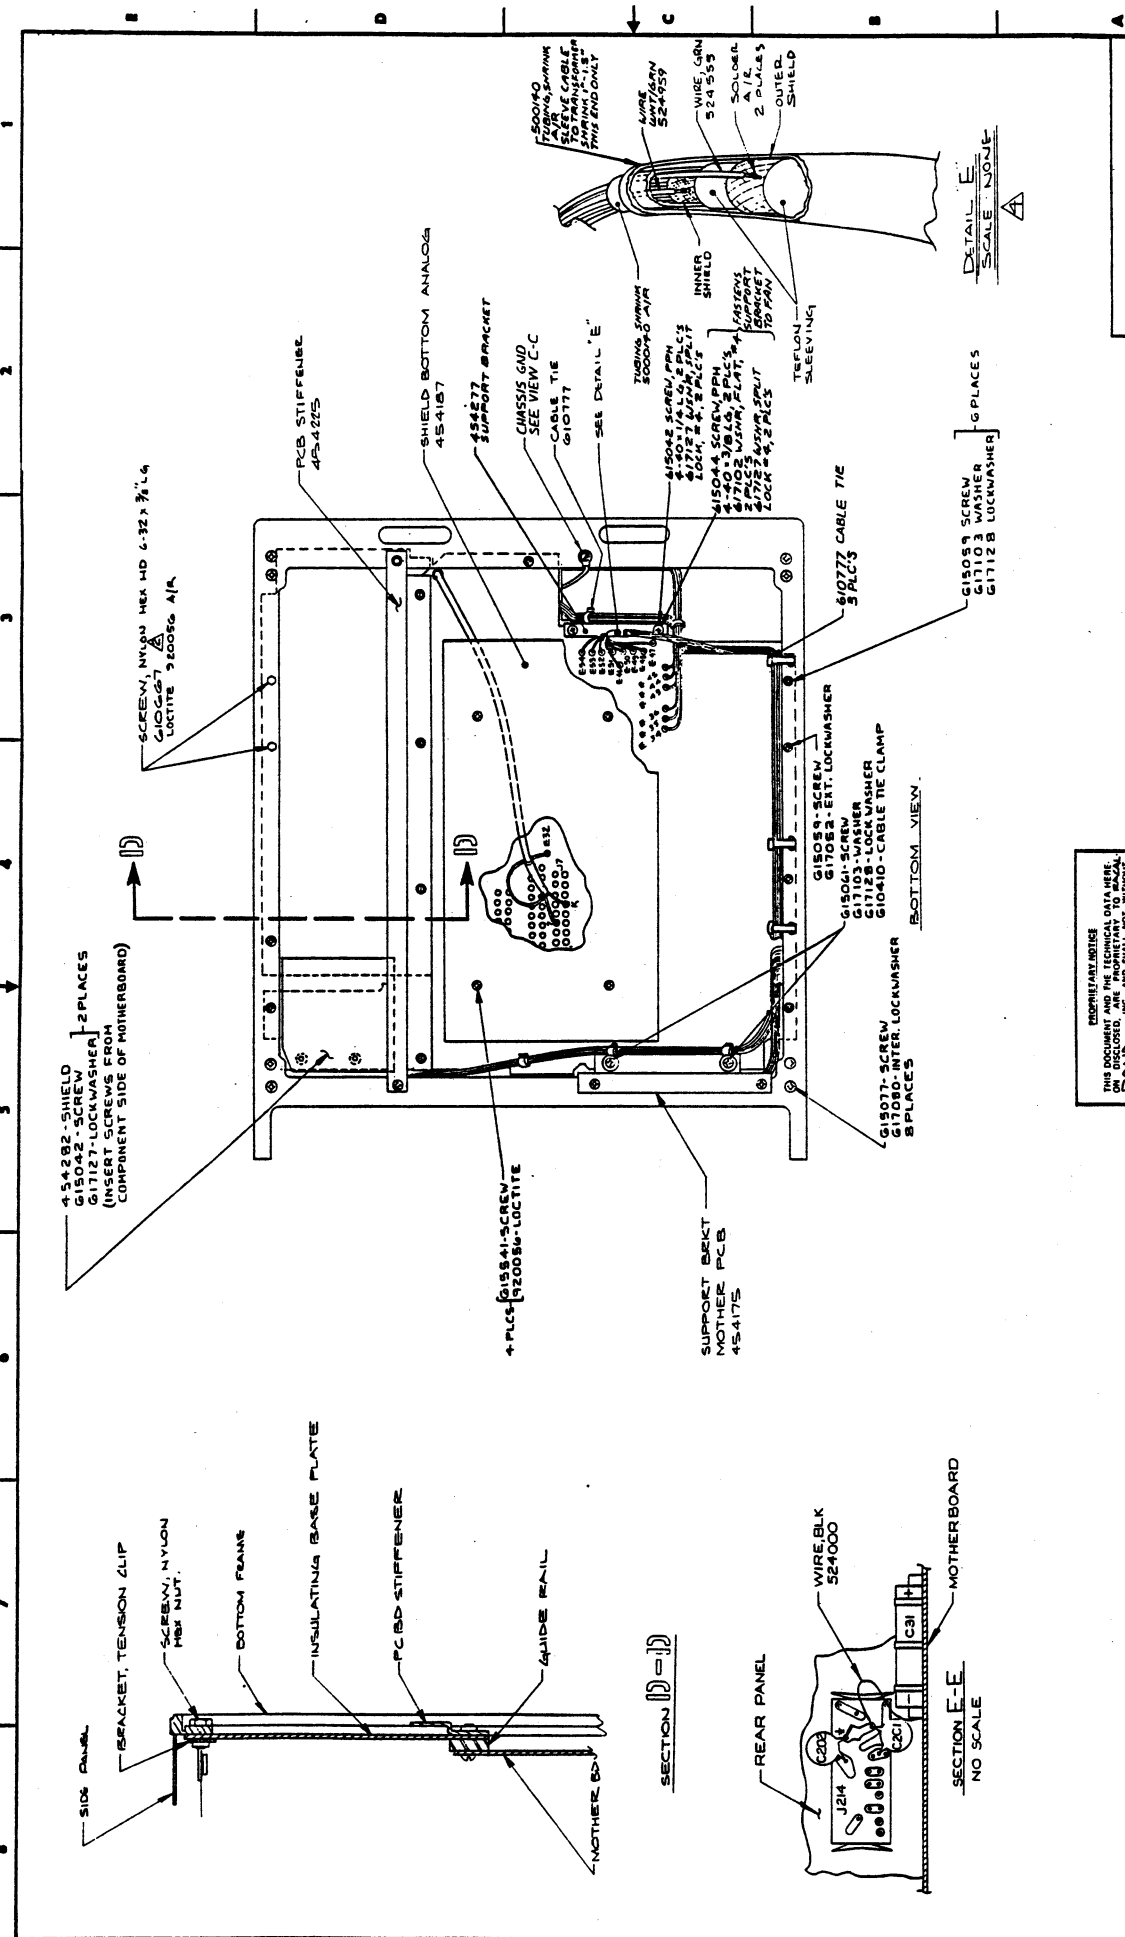


1 2 3 4 5 6 7 8

CHASSIS ASSEMBLY

| | | | |
|--------------|-------|---------|-----|
| DATE | SCALE | DWG NO. | REV |
| 2/17/63 | 1:1 | 404168 | J |
| SHEET 2 OF 7 | | | |

DISSEMINATION NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN CONTAINED HEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE AND SHALL NOT BE WITHHELD FROM UNLIMITED DISTRIBUTION. THIS DOCUMENT IS NOT TO BE REPRODUCED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT OFFER FOR CONTRACTS OR FOR OTHER BUSINESS OPPORTUNITIES FOR MANUFACTURE BY ANYONE OTHER THAN THE MANUFACTURER OF THIS DOCUMENT UNLESS AUTHORIZED BY THE SUPERVISING OFFICE. THIS DOCUMENT IS A UNCLASSIFIED PRODUCT AND IS NOT TO BE REPRODUCED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT OFFER FOR CONTRACTS OR FOR OTHER BUSINESS OPPORTUNITIES FOR MANUFACTURE BY ANYONE OTHER THAN THE MANUFACTURER OF THIS DOCUMENT UNLESS AUTHORIZED BY THE SUPERVISING OFFICE.

NOTES: UNLESS OTHERWISE SPECIFIED

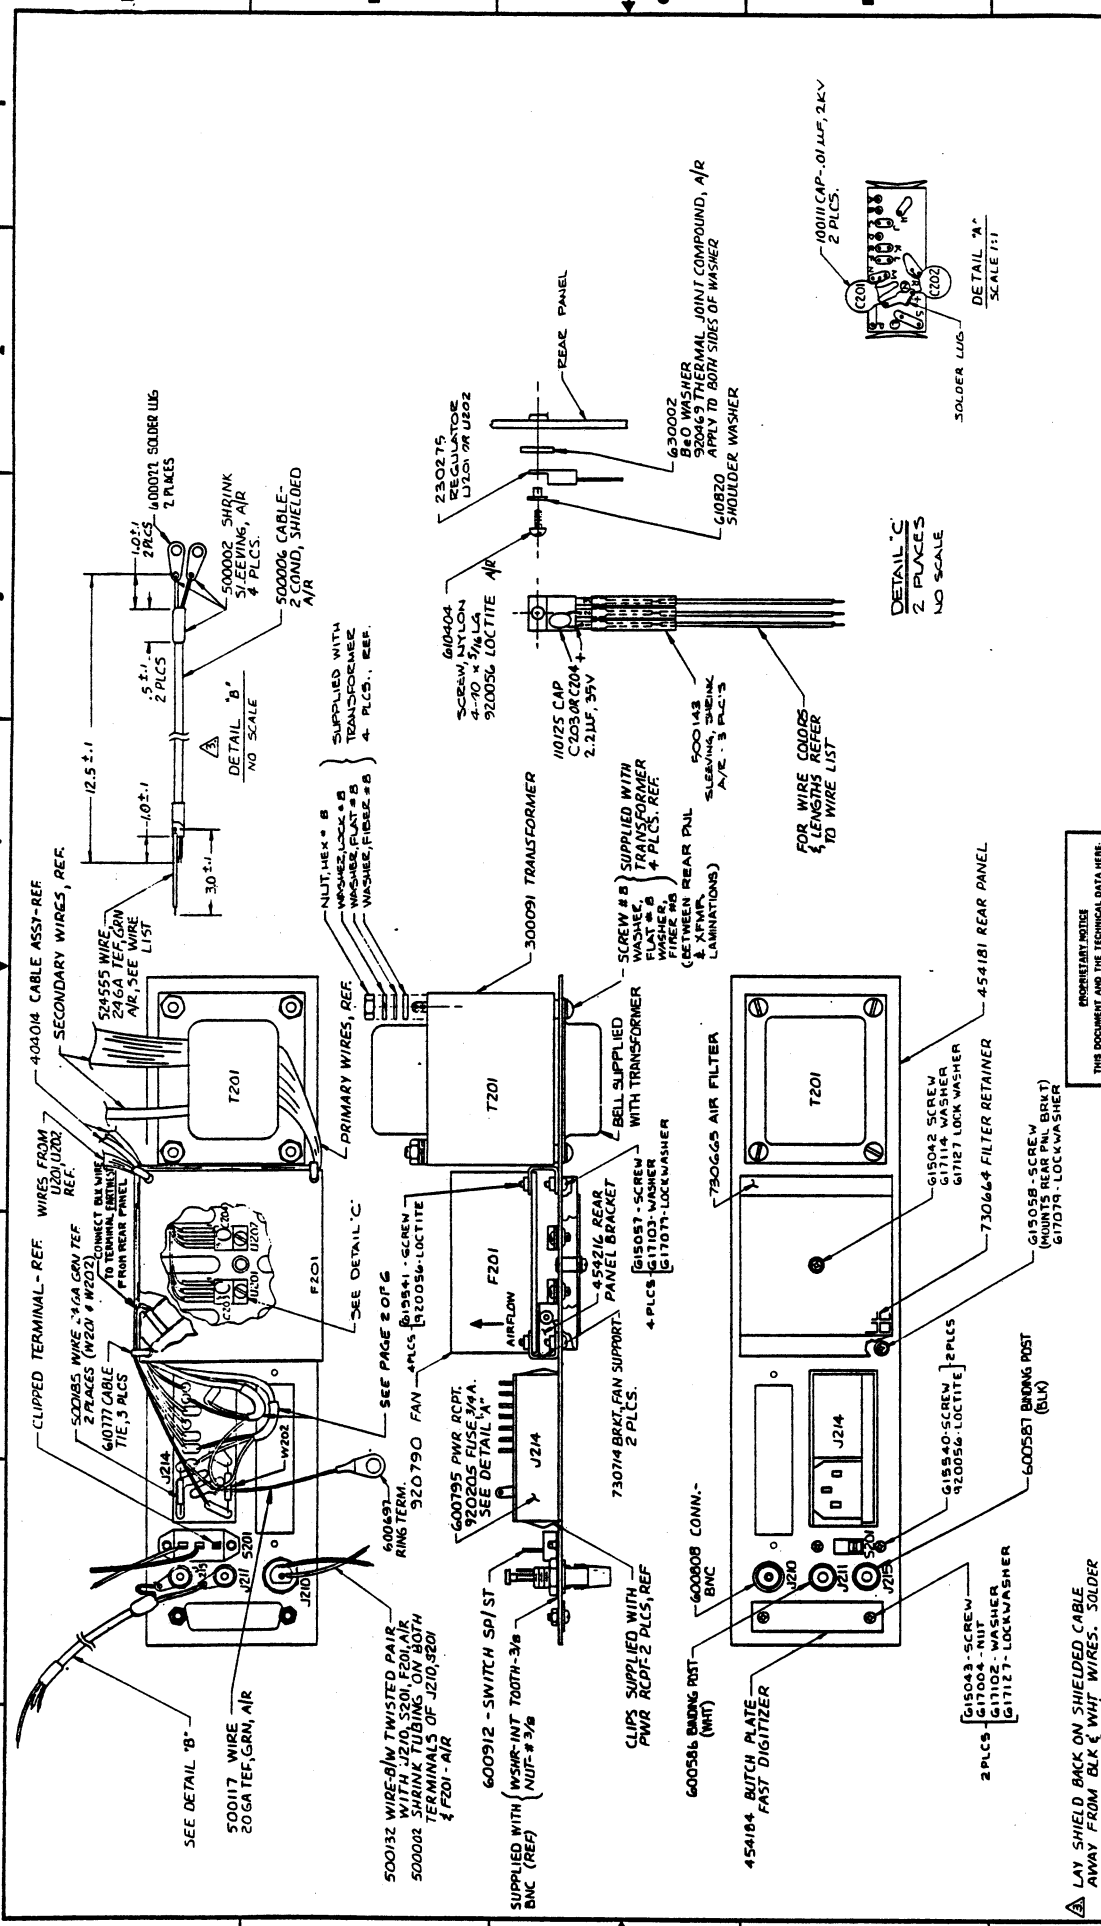


| | | | |
|----------------------------|---|-------|--------|
| REAR PANEL ASSY | | | |
| SIZE CODE ONLY NO DIMS IN. | D | 21793 | 404169 |
| REV. | E | | |
| SHEET 7 OF 7 | | | 1 |

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO THE UNITED STATES GOVERNMENT AND ARE EXPRESSLY WRITTEN PERMISSION OF AGU/AFM. THIS INFORMATION IS TO BE CONTROLLED IN WHATEVER MANNER IS NECESSARY TO PREVENT FROM A COMPETITIVE SOURCE OR BEING REPRODUCED IN WHATEVER MANNER IN WHICH IT MAY BE USED FOR ANY PURPOSES OTHER THAN THE INTENDED USE SPECIFIED HEREIN. THE INFORMATION HEREON IS NOT TO BE DISCLOSED OR REPRODUCED IN ANY MANNER WITHOUT THE TECHNICAL SPECIFICATION AND OTHER DOCUMENTS WHICH ACCOMPANY THIS DRAWING.

LAY SHIELD BACK ON SHIELDED CABLE AWAY FROM BLK & WHIT WIRES. SOLDER GRN WIRE TO SHIELD & COVER WITH SHRINK TUBING.

2. TAG & IDENTIFY WITH RALCAL-DANA FAU & CURRENT REV. LTR.
1. ASSEMBLE PER RALCAL-DANA WORKMANSHIP MANUAL.
NOTE: UNLESS OTHERWISE SPECIFIED

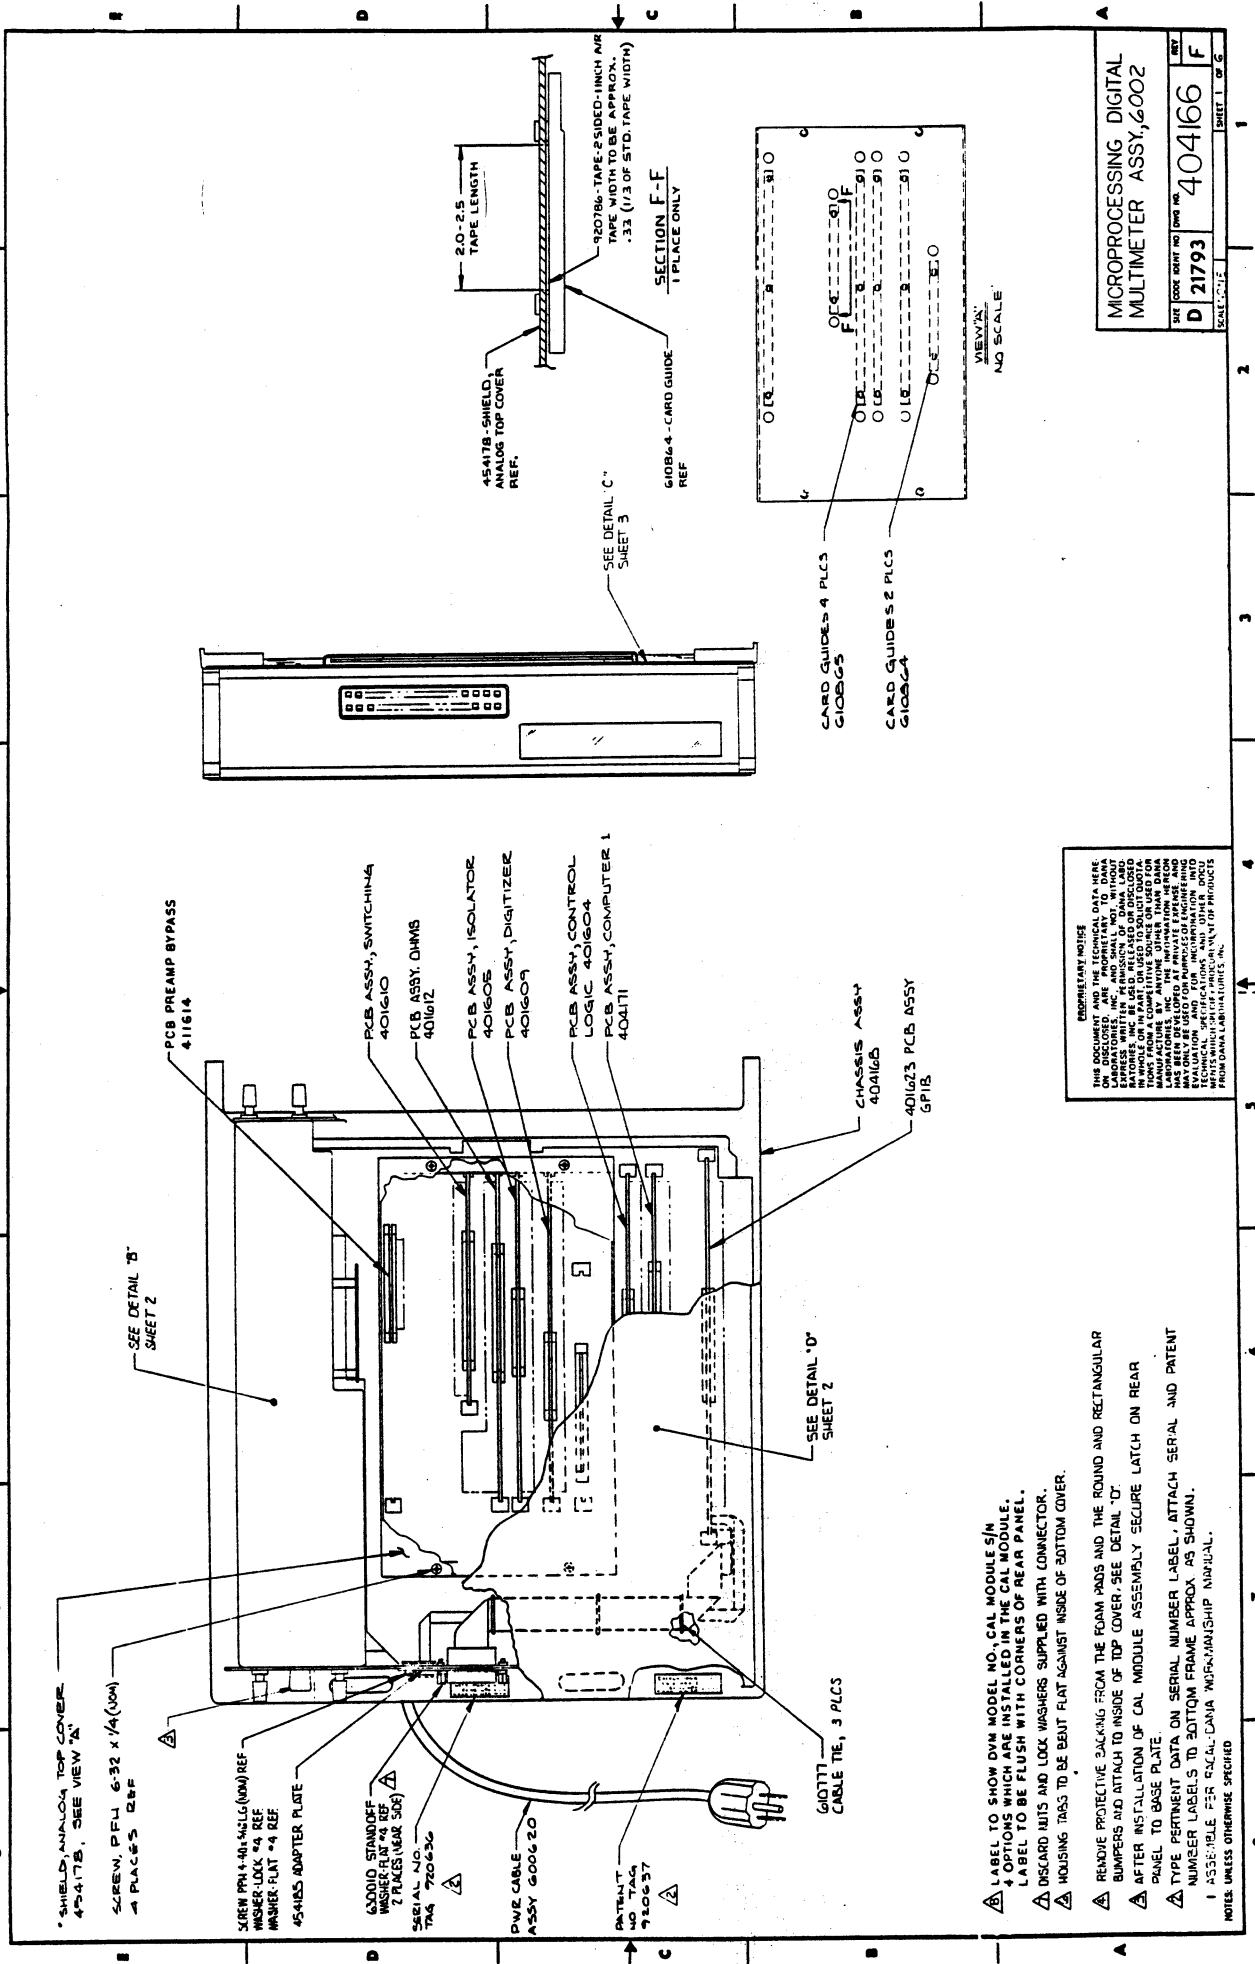


| | |
|--|--------------|
| MICROPROCESSING DIGITAL MULTIMETER ASSY, 6002 | |
| REV | REV |
| D 21793 | 404166 F |
| SCALE: 1:1 | SHEET 1 OF 6 |

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE AND SHALL NOT, WITHOUT AUTHORITY, BE RELEASED OR DISCLOSED TO ANY OTHER PERSON OR ORGANIZATION. THIS NOTICE IS APPLICABLE TO ALL INFORMATION CONTAINED HEREIN, INCLUDING ALL INFORMATION CONTAINED HEREIN THAT HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND IS THE PROPERTY OF THE UNITED STATES GOVERNMENT. THIS INFORMATION IS TO BE EVALUATED AND FOR INFORMATION INTO THE HANDS OF ANY PERSON OR ORGANIZATION FROM DATA LABORATORIES, INC.

- ▲ LABEL TO SHOW OVM MODEL NO., CAL MODULE S/N & OPTIONS WHICH ARE INSTALLED IN THE CAL MODULE. LABEL TO BE FLUSH WITH CORNERS OF REAR PANEL.
 - ▲ DISCARD NUTS AND LOCK WASHERS SUPPLIED WITH CONNECTOR.
 - ▲ HOUSING TABS TO BE BENT FLAT AGAINST INSIDE OF BOTTOM COVER.
 - ▲ REMOVE PROTECTIVE BACKING FROM THE FOAM PADS AND THE ROUND AND RECTANGULAR BUMPERS AND ATTACH TO INSIDE OF TOP COVER. SEE DETAIL "D".
 - ▲ AFTER INSTALLATION OF CAL MODULE ASSEMBLY SECURE LATCH ON REAR PANEL TO BASE PLATE.
 - ▲ TYPE PERTINENT DATA ON SERIAL NUMBER LABEL, ATTACH SERIAL AND PATENT NUMBER LABELS TO BOTTOM FRAME APPROX AS SHOWN.
 - ▲ ASSEMBLE PER SERIAL DATA MAINTENANCE MANUAL.
- NOTES UNLESS OTHERWISE SPECIFIED

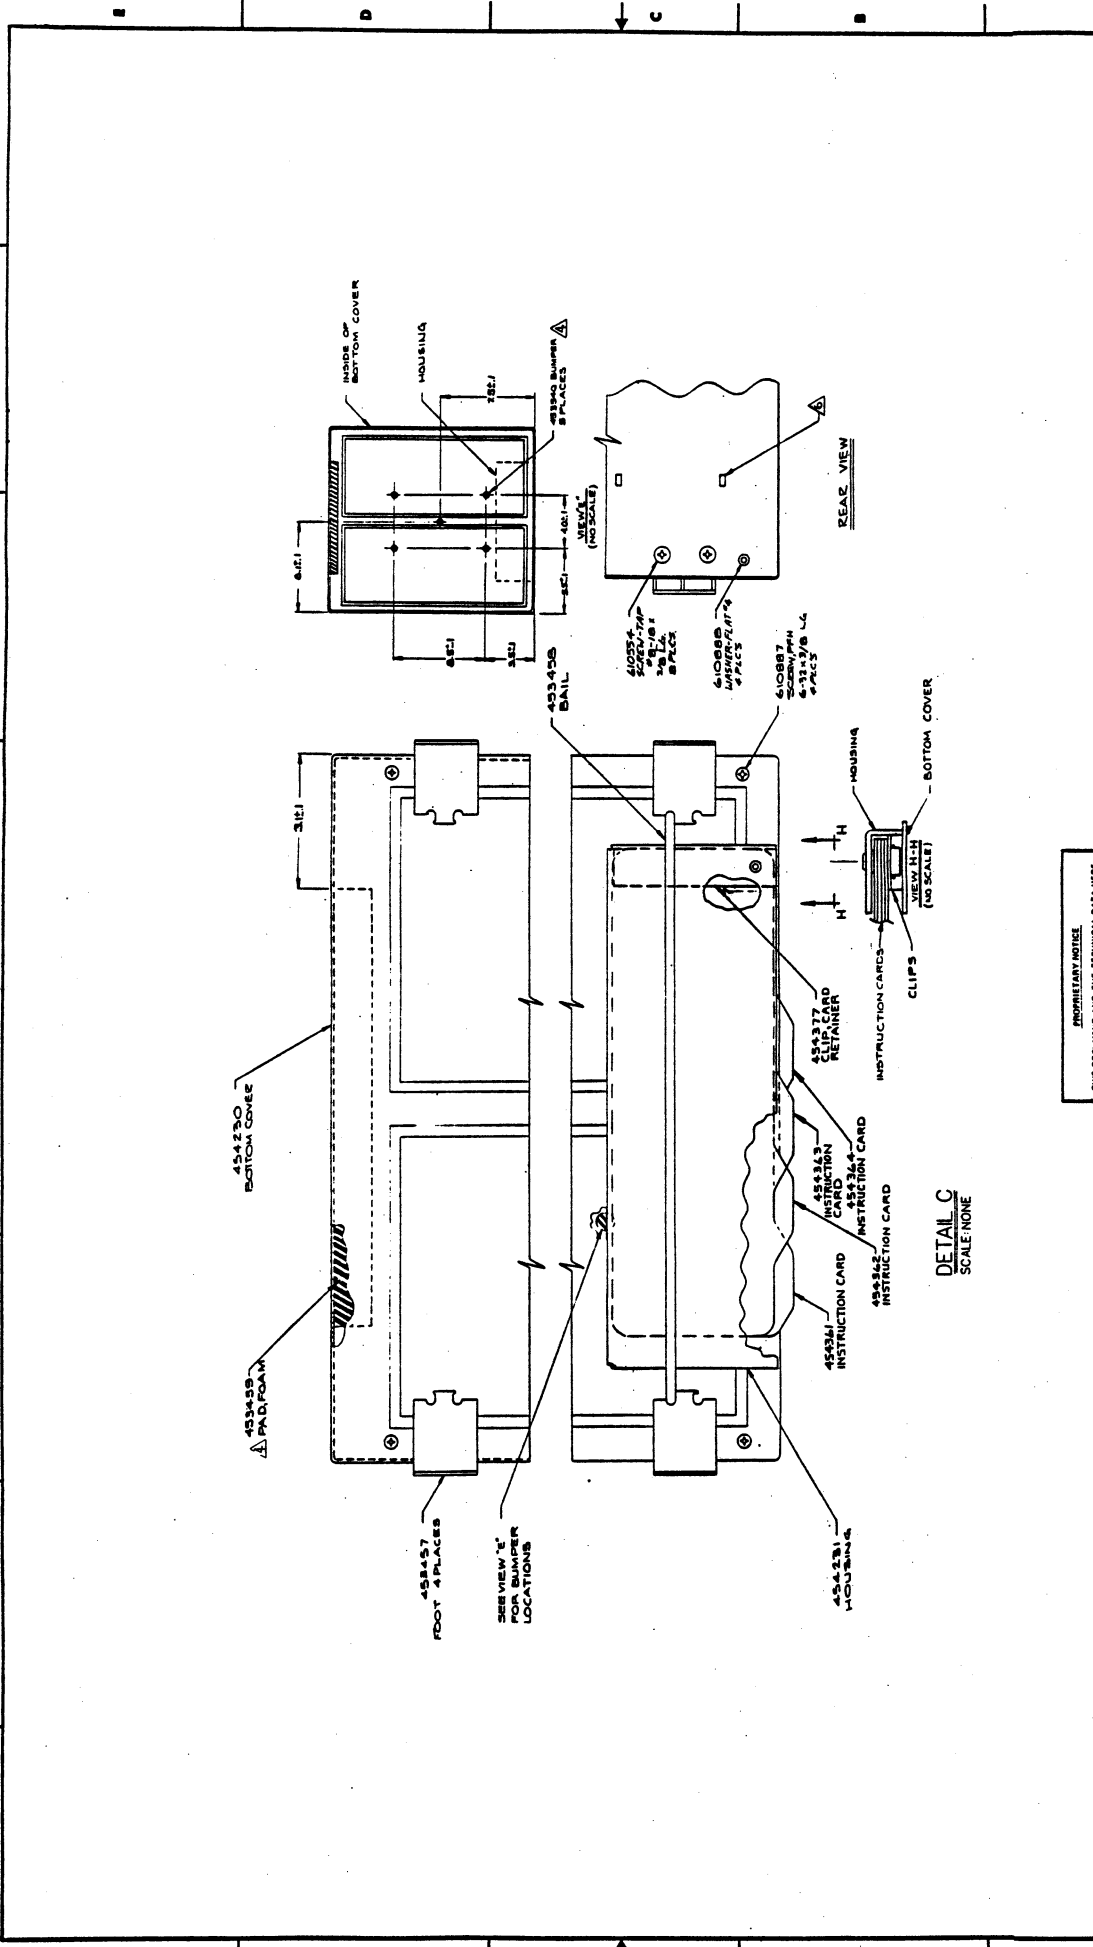


| | |
|---|----------|
| MICROPROCESSING DIGITAL MULTIMETER ASSY, 4002 | |
| DATE | REV |
| D 21793 | 404166 F |
| SCALE: NONE | |
| SHEET 3 OF 6 | |

DISCLAIMER NOTICE

THIS DOCUMENT AND THE INFORMATION CONTAINED HEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. THIS INFORMATION IS THE PROPERTY OF ANALOG INSTRUMENTS, INC. AND SHALL NOT BE RELEASED OR DISCLOSED TO ANY OTHER ENTITY WITHOUT THE WRITTEN PERMISSION OF ANALOG INSTRUMENTS, INC. THIS INFORMATION IS PROVIDED AS IS. ANALOG INSTRUMENTS, INC. MAKES NO WARRANTY, REPRESENTATION, OR GUARANTEE FOR THE ACCURACY, COMPLETENESS, OR RELIABILITY OF THE INFORMATION HEREIN. ANALOG INSTRUMENTS, INC. SHALL NOT BE LIABLE FOR ANY DAMAGES, INCLUDING CONSEQUENTIAL DAMAGES, ARISING FROM THE USE OF THIS INFORMATION. ANALOG INSTRUMENTS, INC. SHALL NOT BE LIABLE FOR ANY DAMAGES, INCLUDING CONSEQUENTIAL DAMAGES, ARISING FROM THE USE OF THIS INFORMATION. ANALOG INSTRUMENTS, INC. SHALL NOT BE LIABLE FOR ANY DAMAGES, INCLUDING CONSEQUENTIAL DAMAGES, ARISING FROM THE USE OF THIS INFORMATION.

DETAIL C
SCALE: NONE


NOTES UNLESS OTHERWISE SPECIFIED

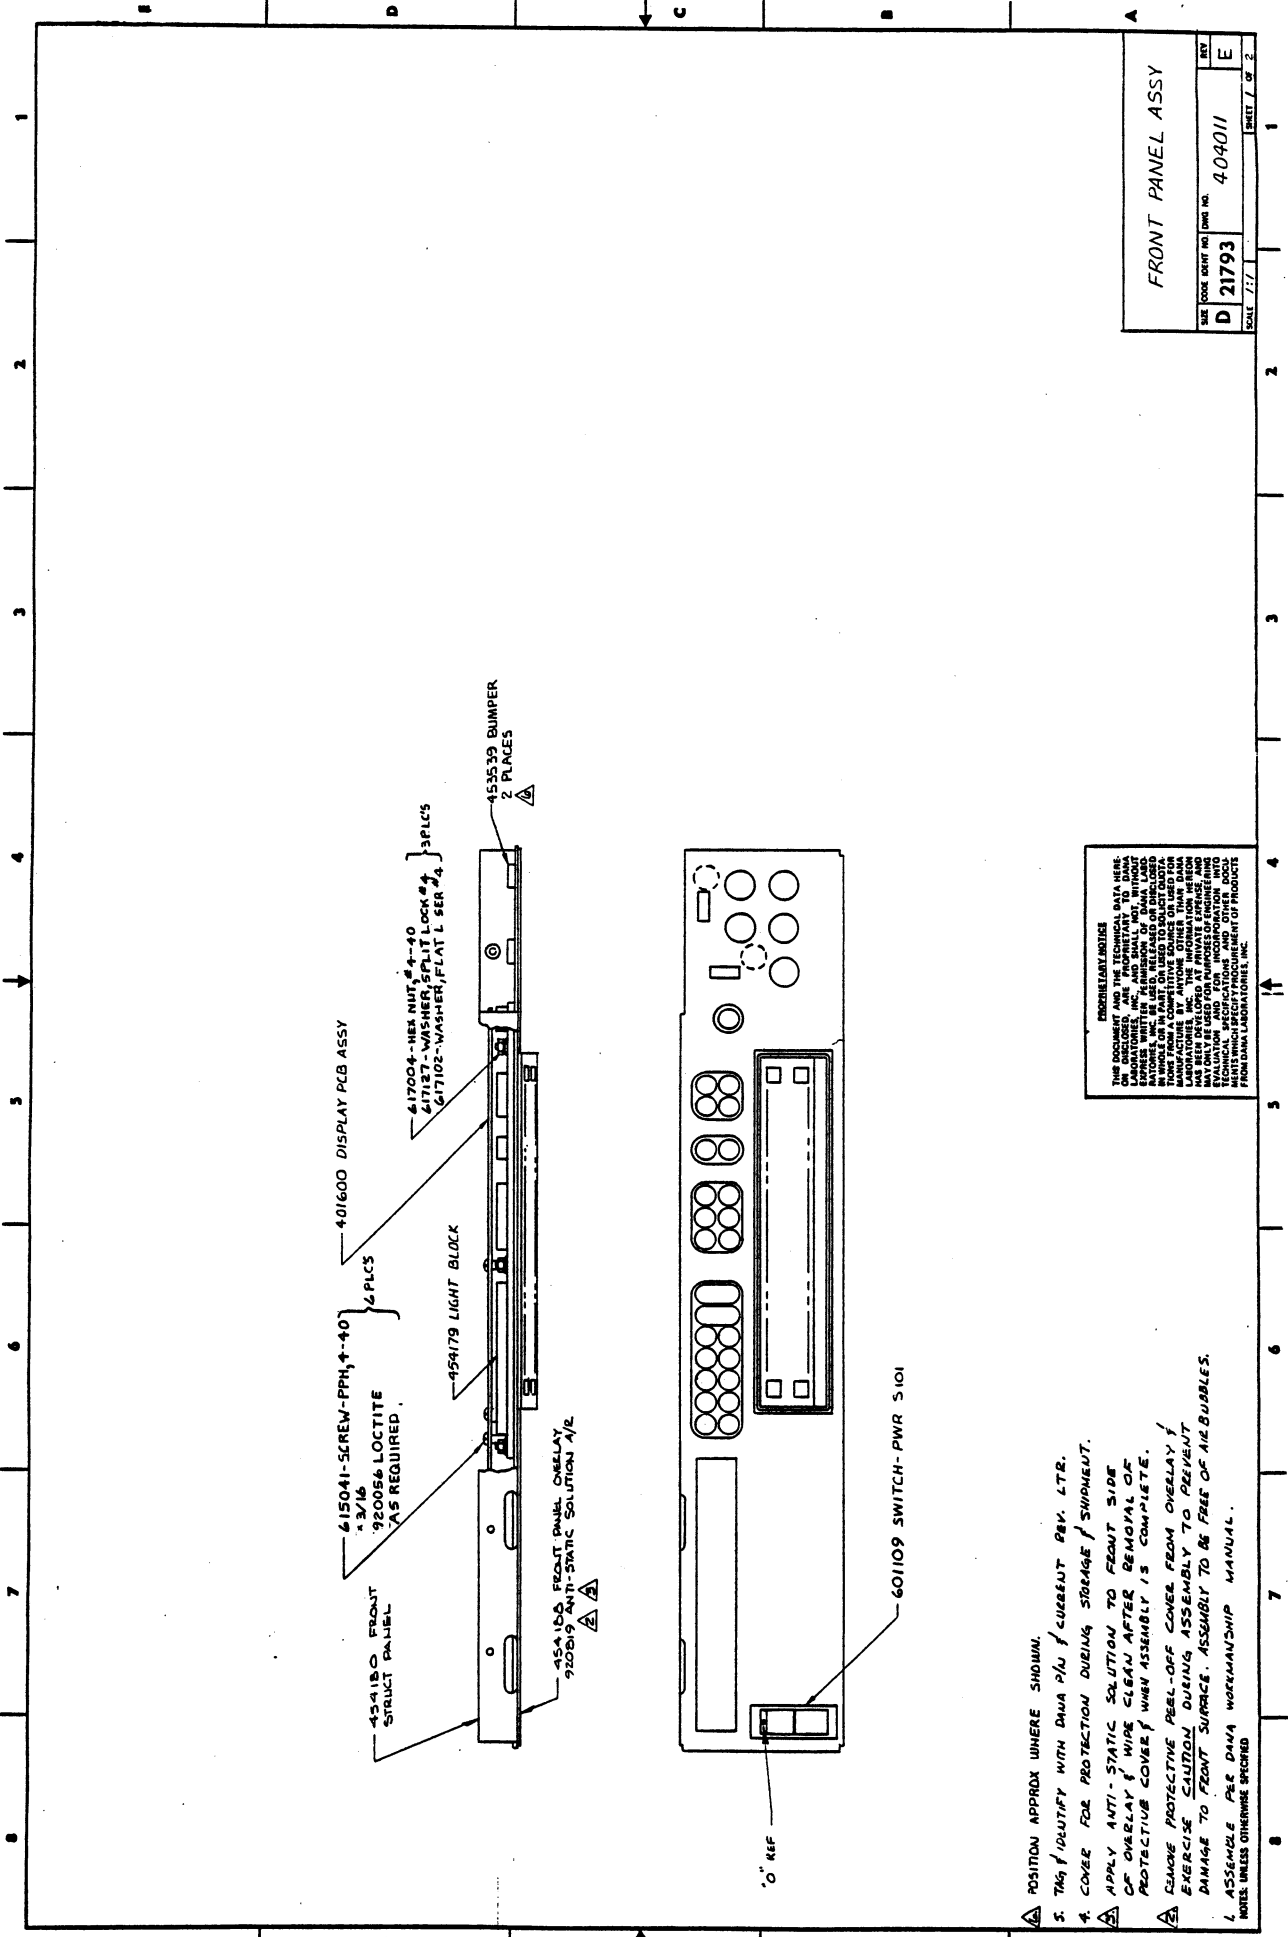

| | |
|------------------|--------|
| FRONT PANEL ASSY | |
| SIZE | D |
| CODE IDENT NO | 21793 |
| DWG NO. | 404011 |
| REV | E |
| SCALE | 1:1 |
| SHEET 1 OF 2 | |

DISCLAIMER NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED AND SHALL REMAIN UNCLASSIFIED UNLESS WRITTEN PERMISSION OF DANA LABORATORIES, INC. IS OBTAINED. THIS DOCUMENT IS THE PROPERTY OF DANA LABORATORIES, INC. AND IS TO BE USED TO SOLICIT DATA FROM MANUFACTURERS BY ANYONE OTHER THAN DANA LABORATORIES, INC. FOR THE PURPOSES OF RESEARCH AND DEVELOPMENT. THIS DOCUMENT AND THE TECHNICAL DATA HEREIN MAY BE USED FOR ANY OTHER PURPOSES WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS ARE THE PROPERTY OF DANA LABORATORIES, INC.


- POSITION APPROX WHERE SHOWN.
- 5. TAG IDENTIFY WITH DANA PLU CURRENT REV. LTR.
- 6. COVER FOR PROTECTION DURING STORAGE / SHIPMENT.
- 7. APPLY ANTI-STATIC SOLUTION TO FRONT SIDE OF OVERLAY & WIPE CLEAN AFTER REMOVAL OF PROTECTIVE COVER WHEN ASSEMBLY IS COMPLETE.
- 8. CHANGE PROTECTIVE PEEL-OFF COVER FROM OVERLAY EXERCISE SOLUTION DURING ASSEMBLY TO PREVENT DAMAGE TO FRONT SURFACE. ASSEMBLY TO BE FREE OF AIR BUBBLES.
- 9. ASSEMBLE PER DANA WORKMANSHIP MANUAL.
- NOTES UNLESS OTHERWISE SPECIFIED

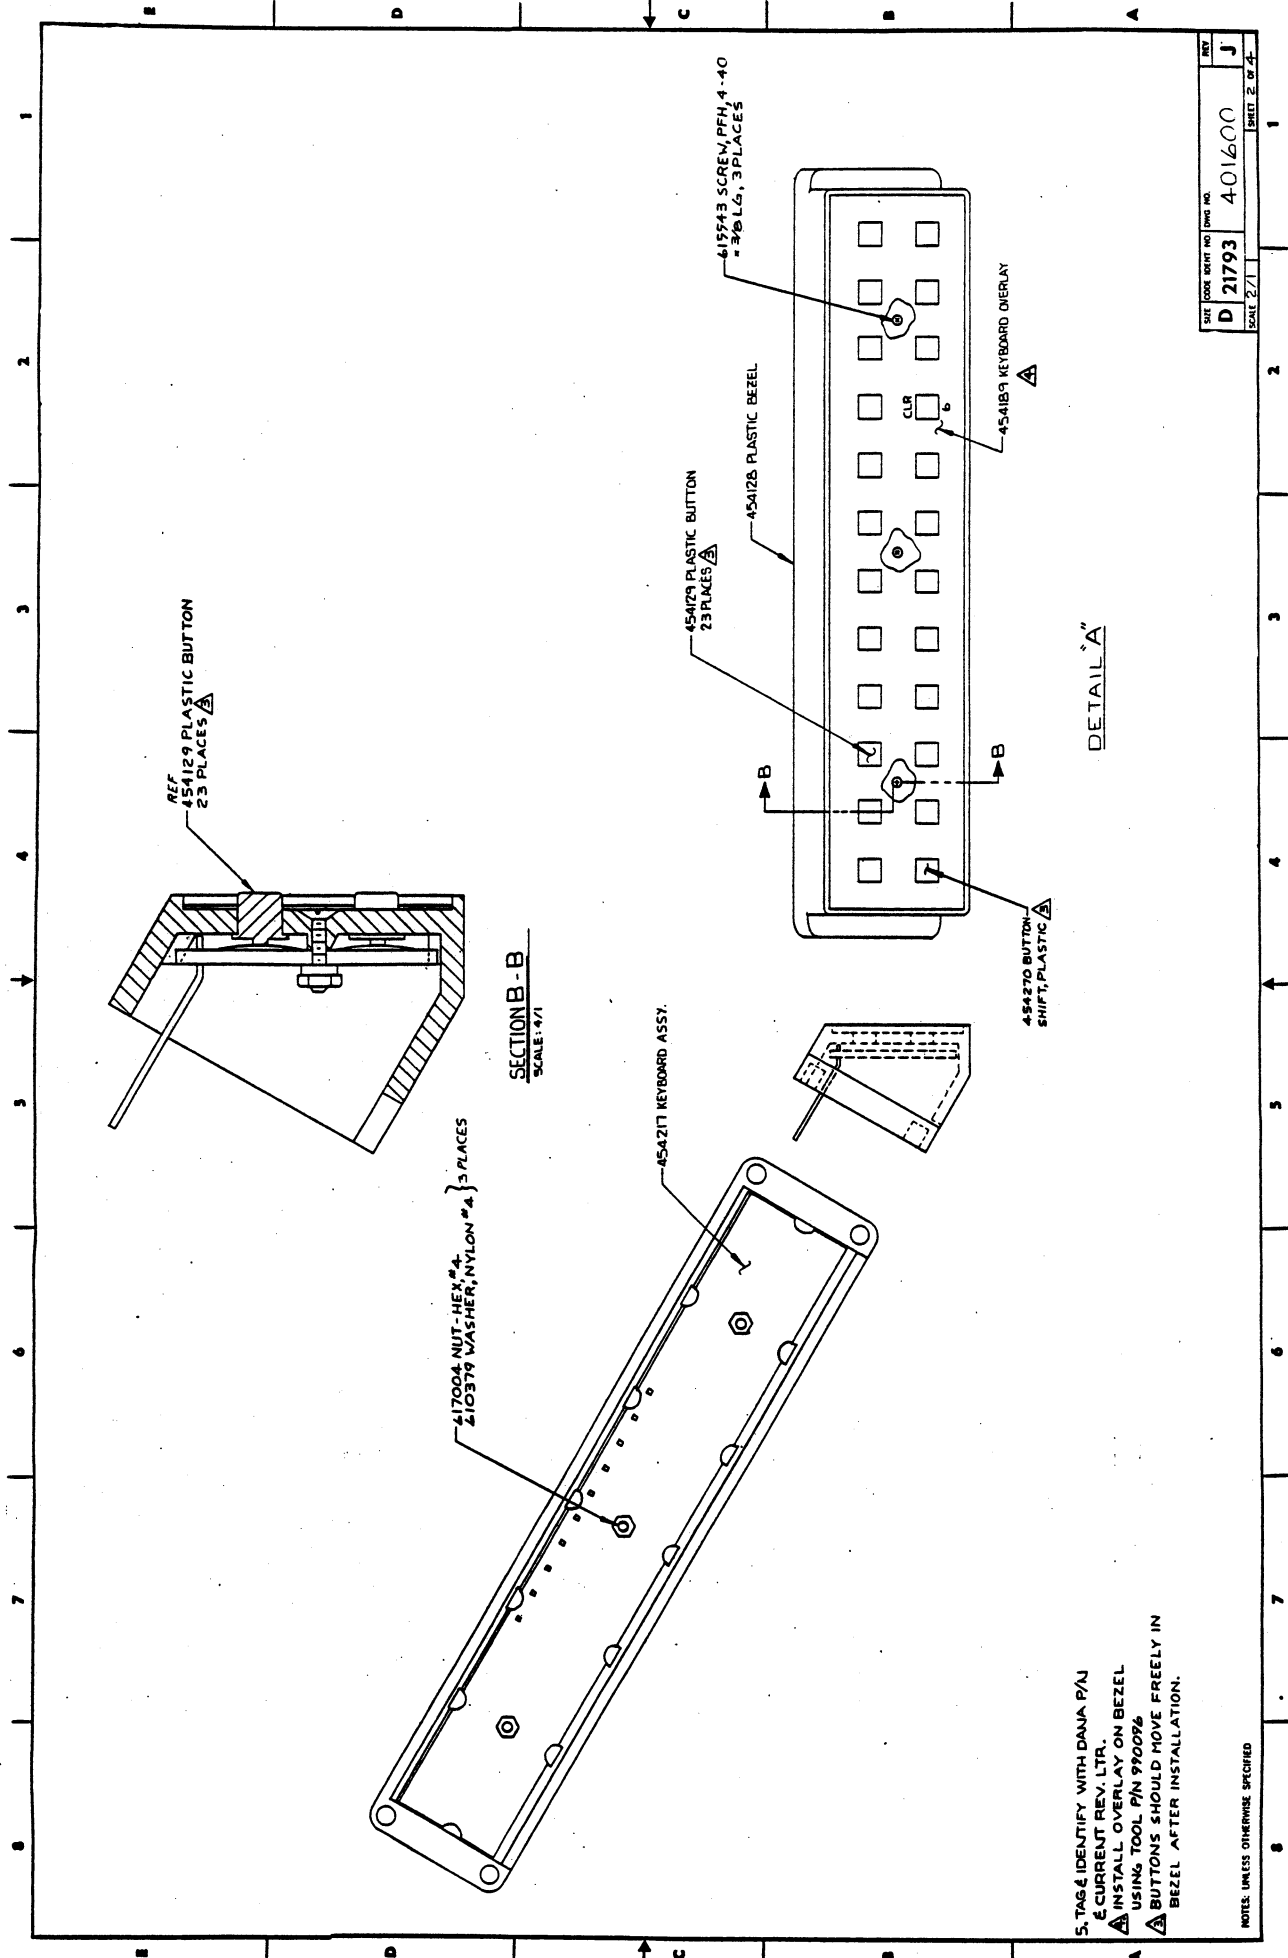


| | |
|--------------|---------|
| REV | J |
| SIZE | D |
| DOC | 21793 |
| REV. NO. | 4-01600 |
| SCALE | 2/1 |
| SHEET 2 OF 4 | |

- 5. TAG & IDENTIFY WITH DATA P/N
- 6. CURRENT REV. LTR.
- 7. INSTALL OVERLAY ON BEZEL USING TOOL P/N 990096
- 8. BUTTONS SHOULD MOVE FREELY IN BEZEL AFTER INSTALLATION.

NOTES: UNLESS OTHERWISE SPECIFIED



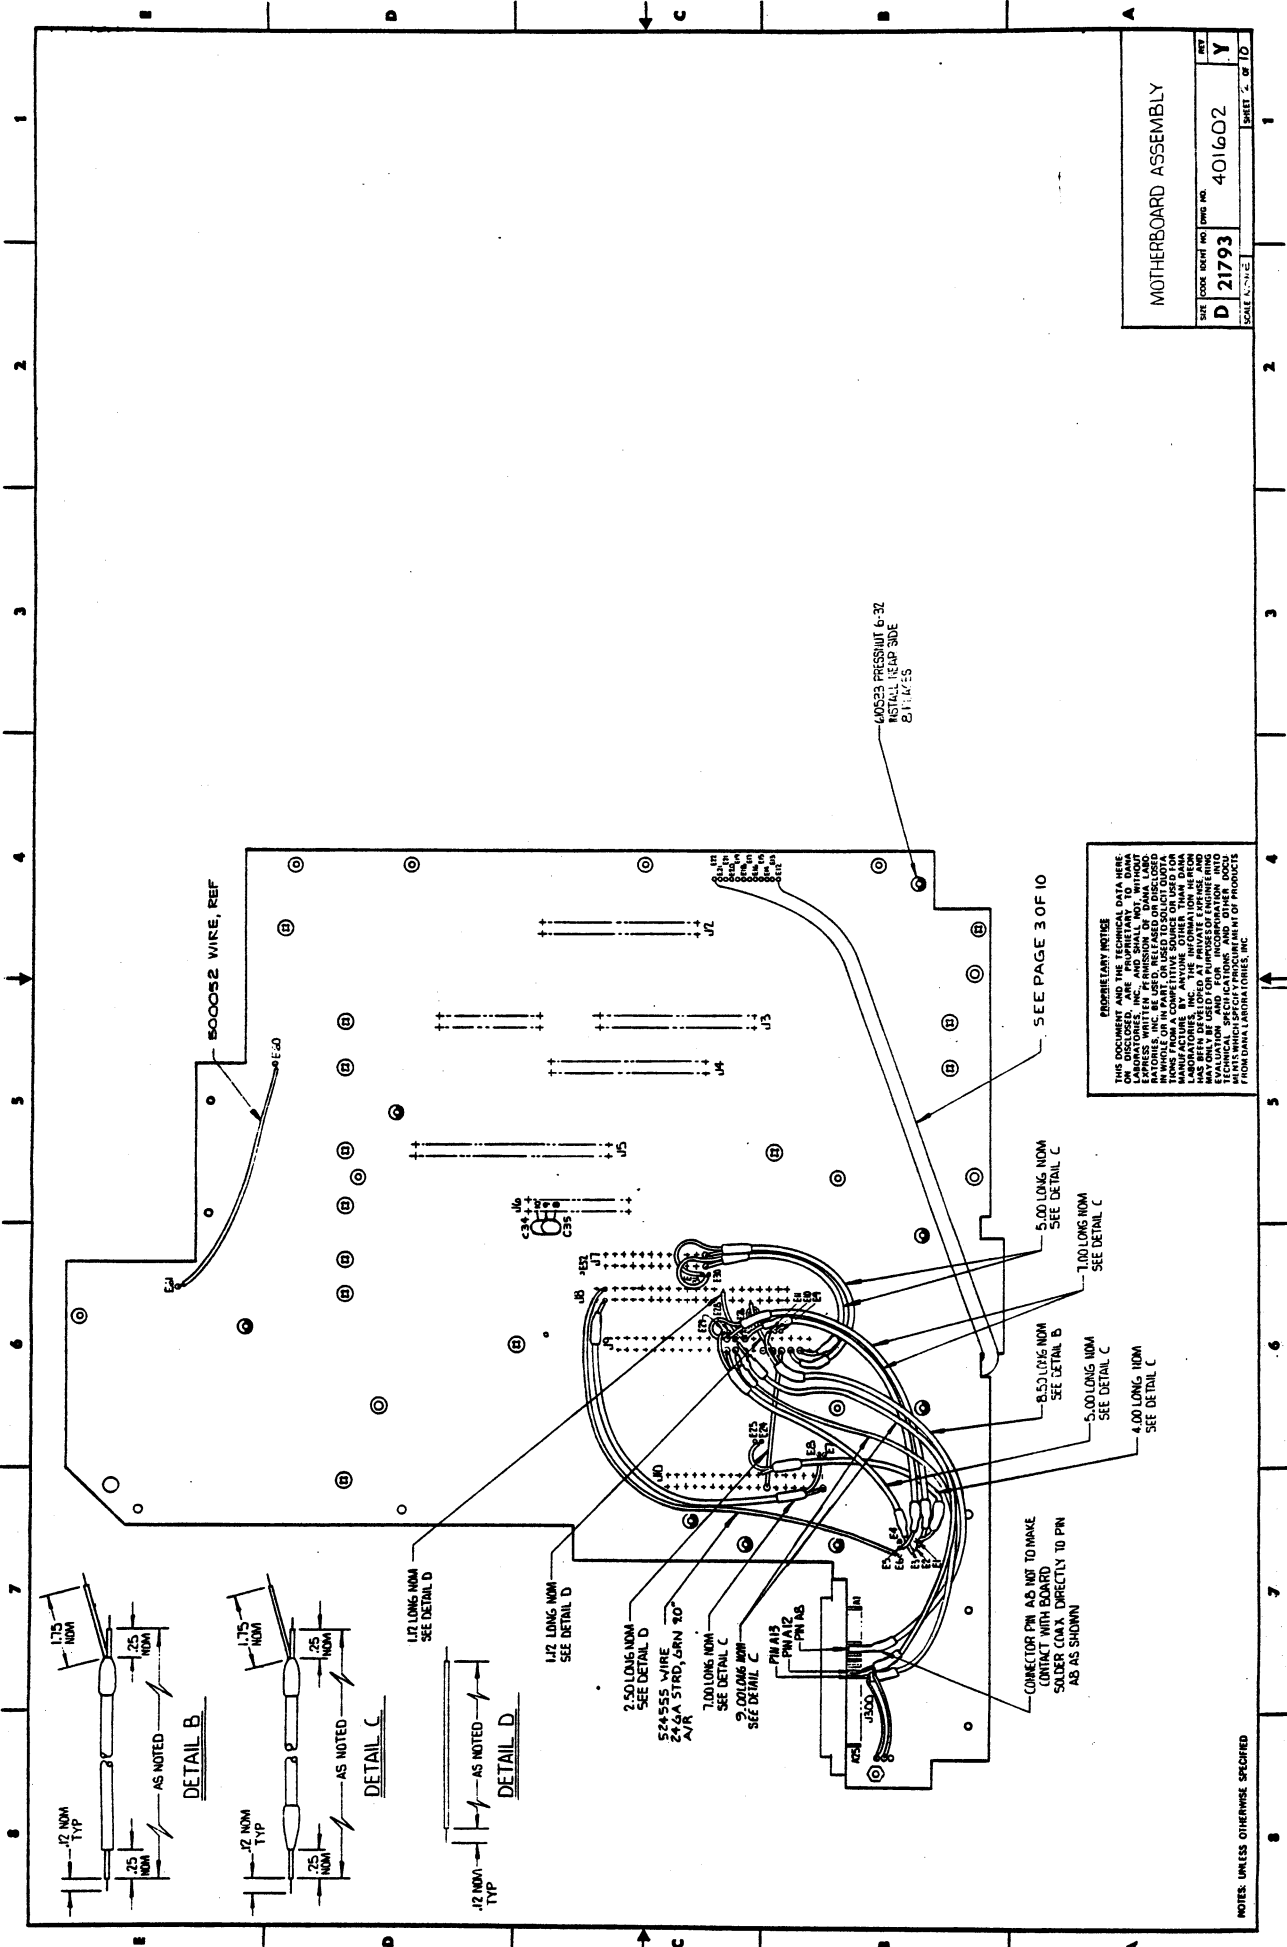

MOTHERBOARD ASSEMBLY

USE FOR IDENT NO TYPE NO. **D 21793** 401602
 SCALE AS SHOWN SHEET 2 OF 10

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREON ARE UNCLASSIFIED AND UNRESTRICTED TO DATA EXPRESS WRITTEN PERMISSION OF DATA LABORATORIES, INC. IN PART OR USED TO SOLICIT DATA FROM ANY OTHER MANUFACTURER BY ANYONE OTHER THAN DATA LABORATORIES, INC. THE INFORMATION CONTAINED HEREIN IS UNCLASSIFIED AND IS NOT TO BE USED FOR PURPOSES OF ENGINEERING, TECHNICAL SPECIFICATIONS, AND OTHER DOCUMENTS FROM DATA LABORATORIES, INC.

SEE PAGE 3 OF 10

400523 PRESSFIT 6-32
 INSTALL HEAD SIDE
 2.1 INCHES

500052 WIRE, REF

5.00 LONG NOM
 SEE DETAIL C

1.00 LONG NOM
 SEE DETAIL C

8.50 LONG NOM
 SEE DETAIL B

5.00 LONG NOM
 SEE DETAIL C

4.00 LONG NOM
 SEE DETAIL C

CONNECTOR PIN AS NOT TO MAKE
 CONTACT WITH BOARD
 SEE DETAIL A FOR DIRECTLY TO PIN
 AS SHOWN

9.50 LONG NOM
 SEE DETAIL D




524555 WIRE
 24 GA STRD, GRN TO
 SEE DETAIL C

1.00 LONG NOM
 SEE DETAIL C

1.00 LONG NOM
 SEE DETAIL C

1.75 LONG NOM
 SEE DETAIL D

1.12 LONG NOM
 SEE DETAIL D

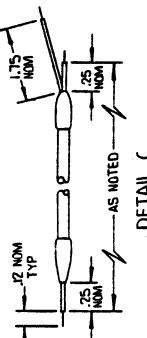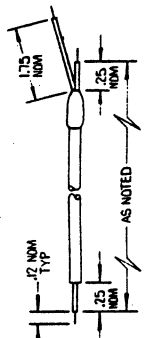


NOTES: UNLESS OTHERWISE SPECIFIED


600566 CONN - 6 PIN

500002 SHRINK TUBING A/R

610777 CABLE TIE, 7 PLCS

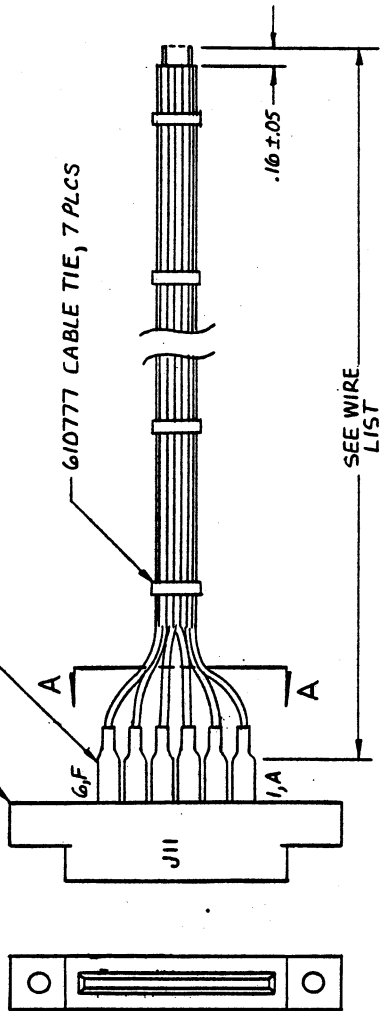

SEE WIRE LIST

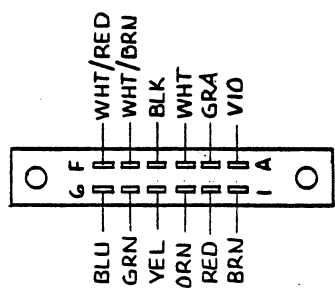

VIEW A-A
SCALE 2/1

| F | WHT/RED | 524929 | 18.5 |
|------------|---------|----------|--------------|
| E | WHT/BRN | 524919 | 18.5 |
| D | BLK | 524000 | 18.5 |
| C | WHT | 524999 | 18.5 |
| B | GRA | 524888 | 18.5 |
| A | VIO | 524777 | 19.0 |
| 6 | BLU | 524666 | 19.0 |
| 5 | GRN | 524555 | 19.0 |
| 4 | YEL | 524444 | 19.0 |
| 3 | ORN | 524333 | 19.0 |
| 2 | RED | 524222 | 19.5 |
| 1 | BRN | 524111 | 19.5 |
| J11, PIN # | COLOR | PART NO. | LENGTH ± .15 |


WIRE LIST

MOTHERBOARD ASSEMBLY

| | | | | |
|------|-------|-----------|---------|-----|
| SIZE | CODE | IDENT NO. | DWG NO. | REV |
| C | 21793 | 401602 | Y | 10 |

NOTES: UNLESS OTHERWISE SPECIFIED


PROPRIETARY NOTICE
 THIS DOCUMENT AND THE DATA HEREON DISCLOSED ARE PROPRIETARY TO DANA LABORATORIES, INC. AND SHALL NOT, WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. BE USED, REPRODUCED, COPIED, OR IN ANY MANNER DISCLOSED TO ANY OTHER MANUFACTURER OR USER OF THIS PRODUCT. THE INFORMATION HEREON HAS BEEN DEVELOPED AT DANAFORMATION, INC. DANAFORMATION, INC. IS A DIVISION OF DANA LABORATORIES, INC. THIS INFORMATION IS UNCLASSIFIED AND IS NOT SUBJECT TO EXPORT CONTROL REGULATIONS. TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY REQUIREMENTS OF PRODUCTS FROM DANA LABORATORIES, INC.

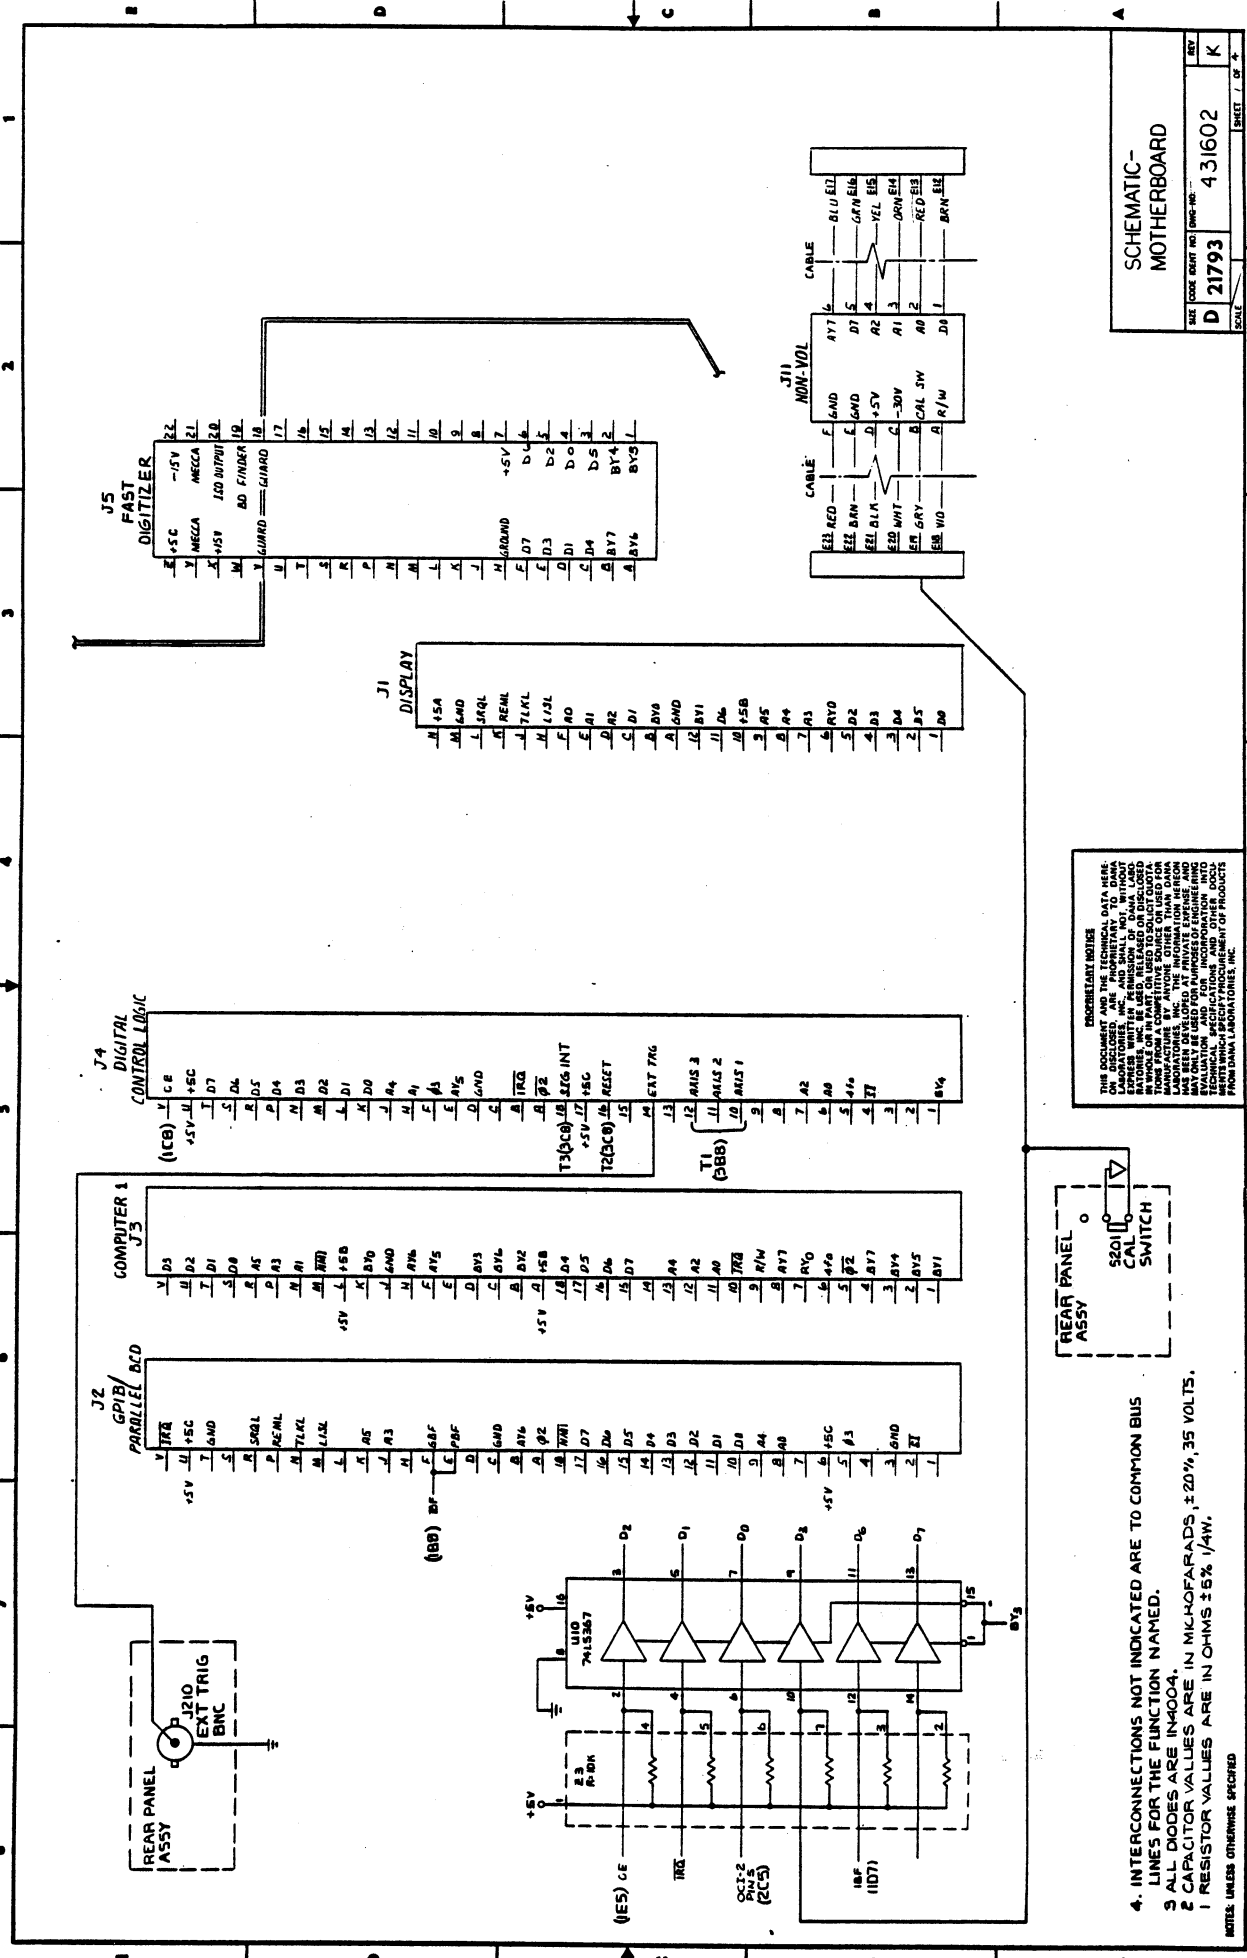

SCHEMATIC-MOTHERBOARD
 SIZE CODE PART NO. (REV.)
 D 21793 431602 K

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. THIS DOCUMENT IS UNCLASSIFIED SINCE IT CONTAINS INFORMATION THAT IS EITHER EXCLUDED FROM AUTOMATIC DOWNGRADING OR EXCLUDED FROM AUTOMATIC DOWNGRADING AND IS NOT BEING RELEASED OR DISCLOSED TO OTHERS BY THIS OFFICE. THIS INFORMATION IS NOT TO BE RELEASED OR DISCLOSED TO OTHERS WITHOUT THE EXPRESS WRITTEN PERMISSION OF THE OFFICE OF THE SECRETARY OF DEFENSE. THIS INFORMATION IS NOT TO BE RELEASED OR DISCLOSED TO OTHERS WITHOUT THE EXPRESS WRITTEN PERMISSION OF THE OFFICE OF THE SECRETARY OF DEFENSE. THIS INFORMATION IS NOT TO BE RELEASED OR DISCLOSED TO OTHERS WITHOUT THE EXPRESS WRITTEN PERMISSION OF THE OFFICE OF THE SECRETARY OF DEFENSE.


4. INTERCONNECTIONS NOT INDICATED ARE TO COMMON BUS
 LINES FOR THE FUNCTION NAMED.
 5 ALL DIODES ARE IN4004.
 6 CAPACITOR VALUES ARE IN MICROFARADS, ±20%, 35 VOLTS.
 7 RESISTOR VALUES ARE IN OHMS ±5% 1/4W.
 NOTES UNLESS OTHERWISE SPECIFIED

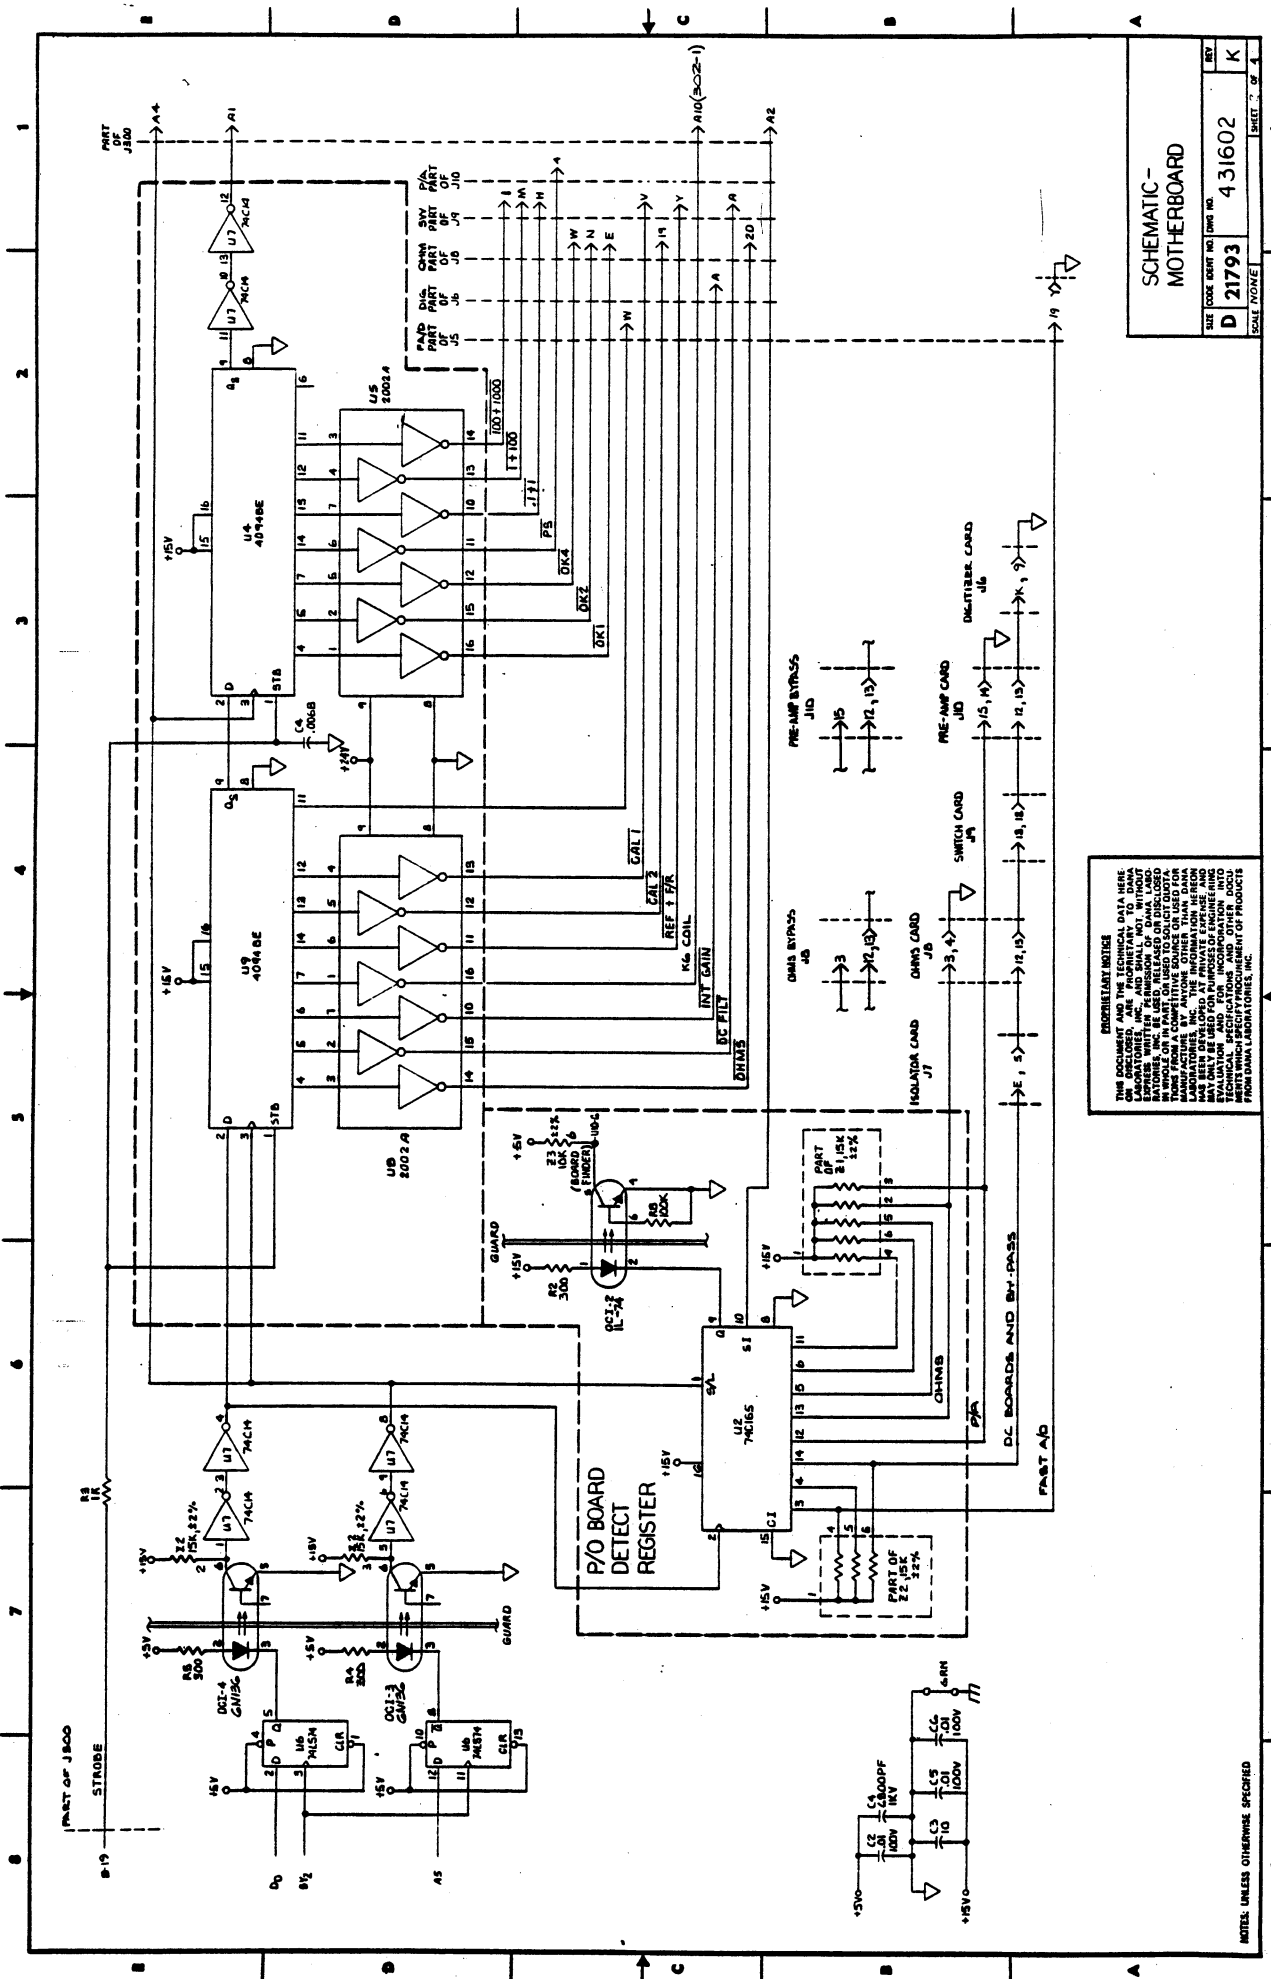

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREON ARE UNCLASSIFIED AND ARE PROPRIETARY TO DATA ENTRY SYSTEMS, INC. ANY REPRODUCTION OR DISSEMINATION OF THIS DOCUMENT OR THE DATA HEREON IN WHOLE OR IN PART, OR THE USE OF THE DATA HEREON FOR ANY PURPOSES OTHER THAN THAT AUTHORIZED BY DATA ENTRY SYSTEMS, INC. IS STRICTLY PROHIBITED. THE INFORMATION HEREON IS THE PROPERTY OF DATA ENTRY SYSTEMS, INC. AND IS NOT TO BE USED FOR ANY OTHER PURPOSES WITHOUT THE WRITTEN PERMISSION OF DATA ENTRY SYSTEMS, INC. THE INFORMATION HEREON IS THE PROPERTY OF DATA ENTRY SYSTEMS, INC. AND IS NOT TO BE USED FOR ANY OTHER PURPOSES WITHOUT THE WRITTEN PERMISSION OF DATA ENTRY SYSTEMS, INC.

| | |
|-------------------------|--------|
| SCHEMATIC - MOTHERBOARD | |
| SIZE CODE | REV |
| D 21793 | K |
| QTY | 431602 |
| SCALE | NONE |
| SHEET 1 OF 1 | |

NOTES: UNLESS OTHERWISE SPECIFIED


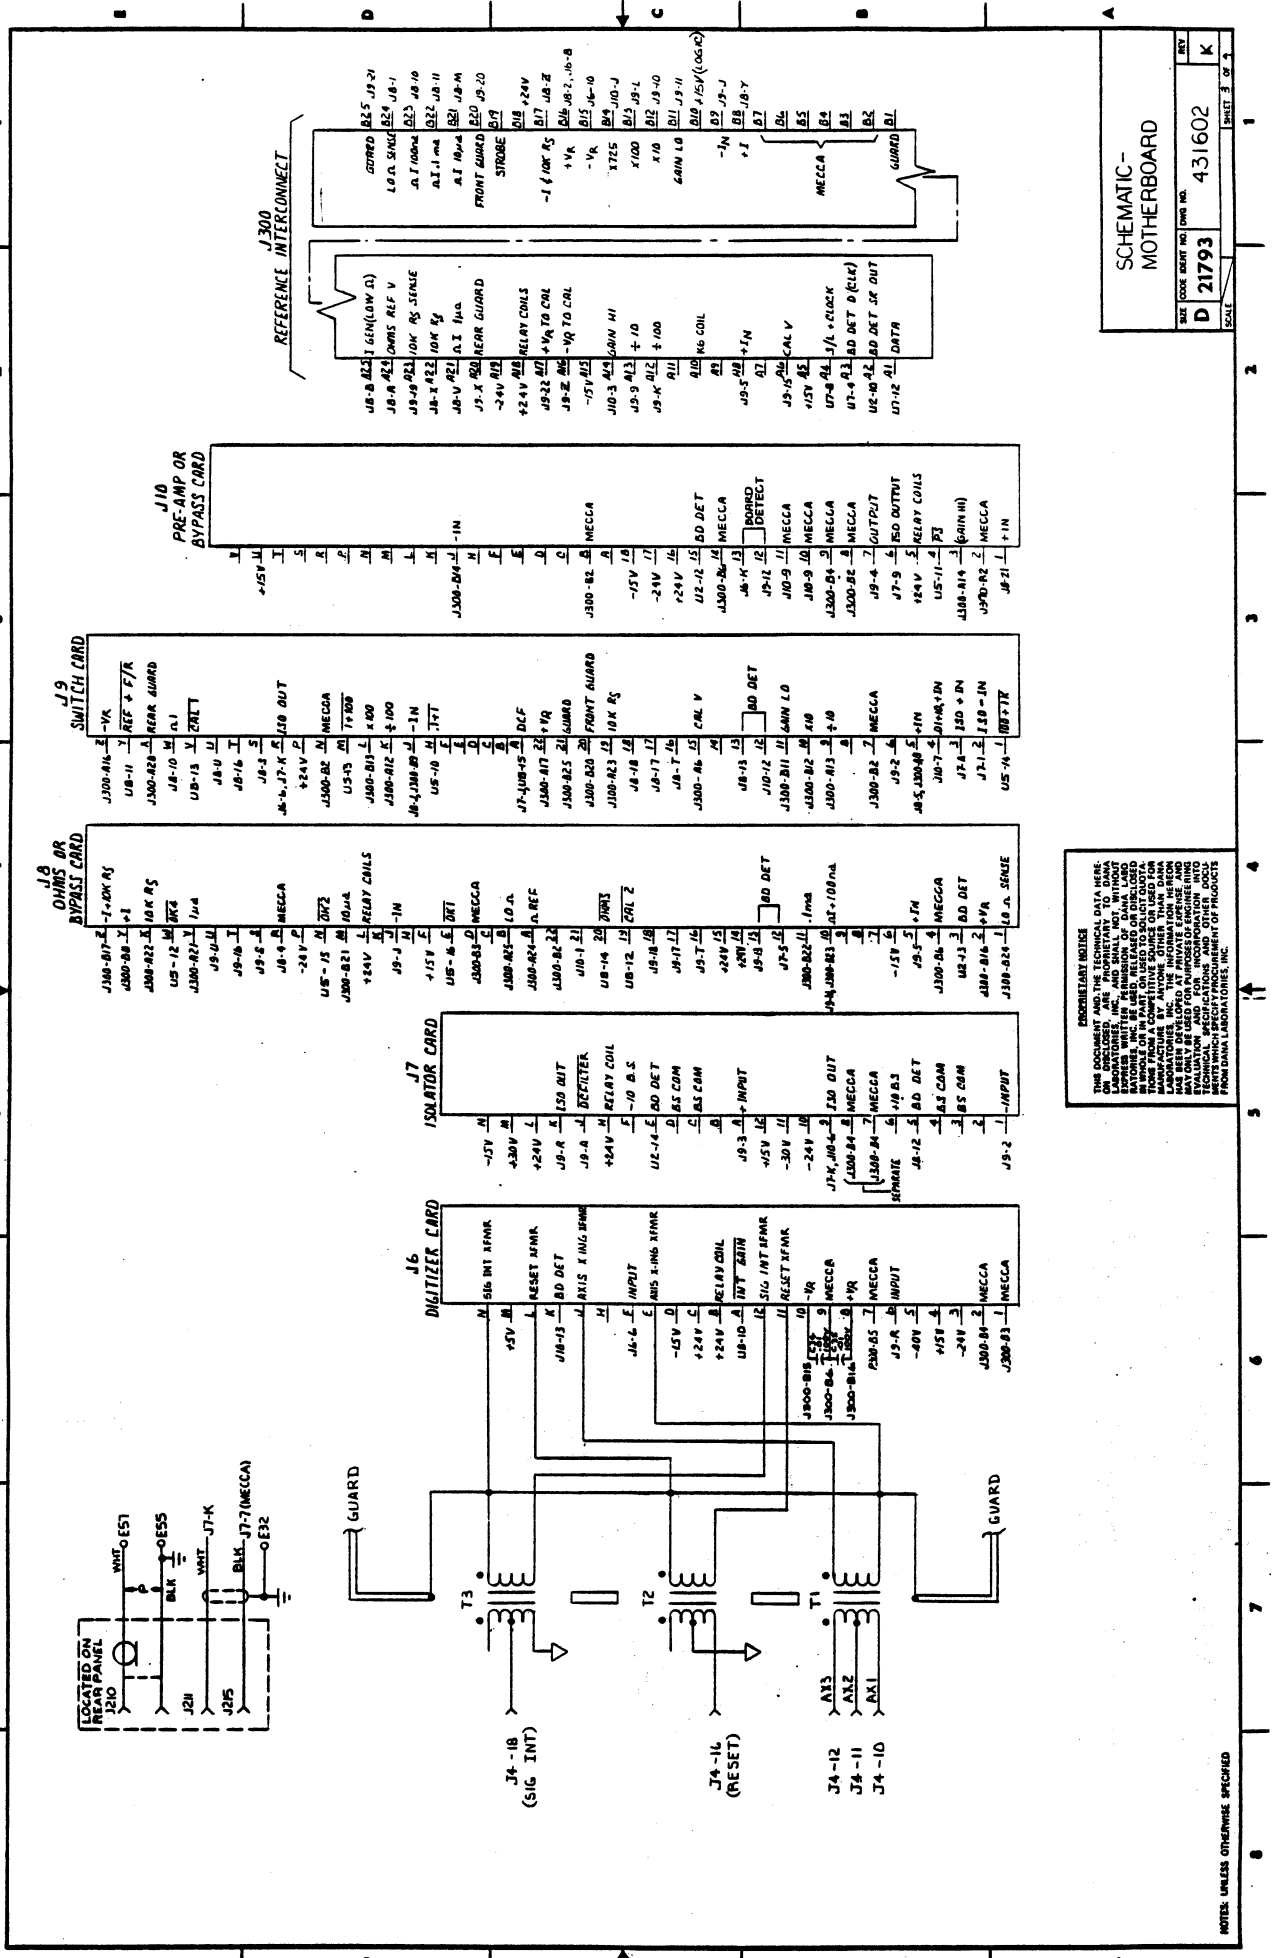


DISCREETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO DANA INSTRUMENTS, INC. ANY REPRODUCTION, COPIING, OR DISSEMINATION OF THIS INFORMATION WITHOUT THE WRITTEN PERMISSION OF DANA INSTRUMENTS, INC. IS STRICTLY PROHIBITED. THIS INFORMATION IS BEING DISCLOSED TO YOU BY DANA INSTRUMENTS, INC. UNDER A CONFIDENTIALITY AGREEMENT. THE INFORMATION HEREON MAY ONLY BE USED FOR THE PURPOSES OF ENGINEERING AND TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH REQUIRE DISCLOSURE OF PRODUCTS DESIGN INFORMATION.


SCHEMATIC - MOTHERBOARD

| | | | | |
|------|-------|----------|----------|------|
| DATE | CODE | REV. NO. | DWG. NO. | REV. |
| D | 21793 | 431602 | K | |

SCALE: 1
 SHEET 3 OF 7

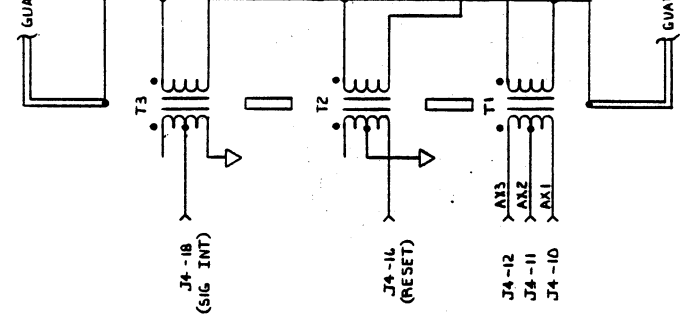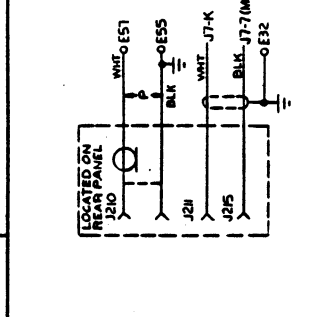


NOTES: UNLESS OTHERWISE SPECIFIED

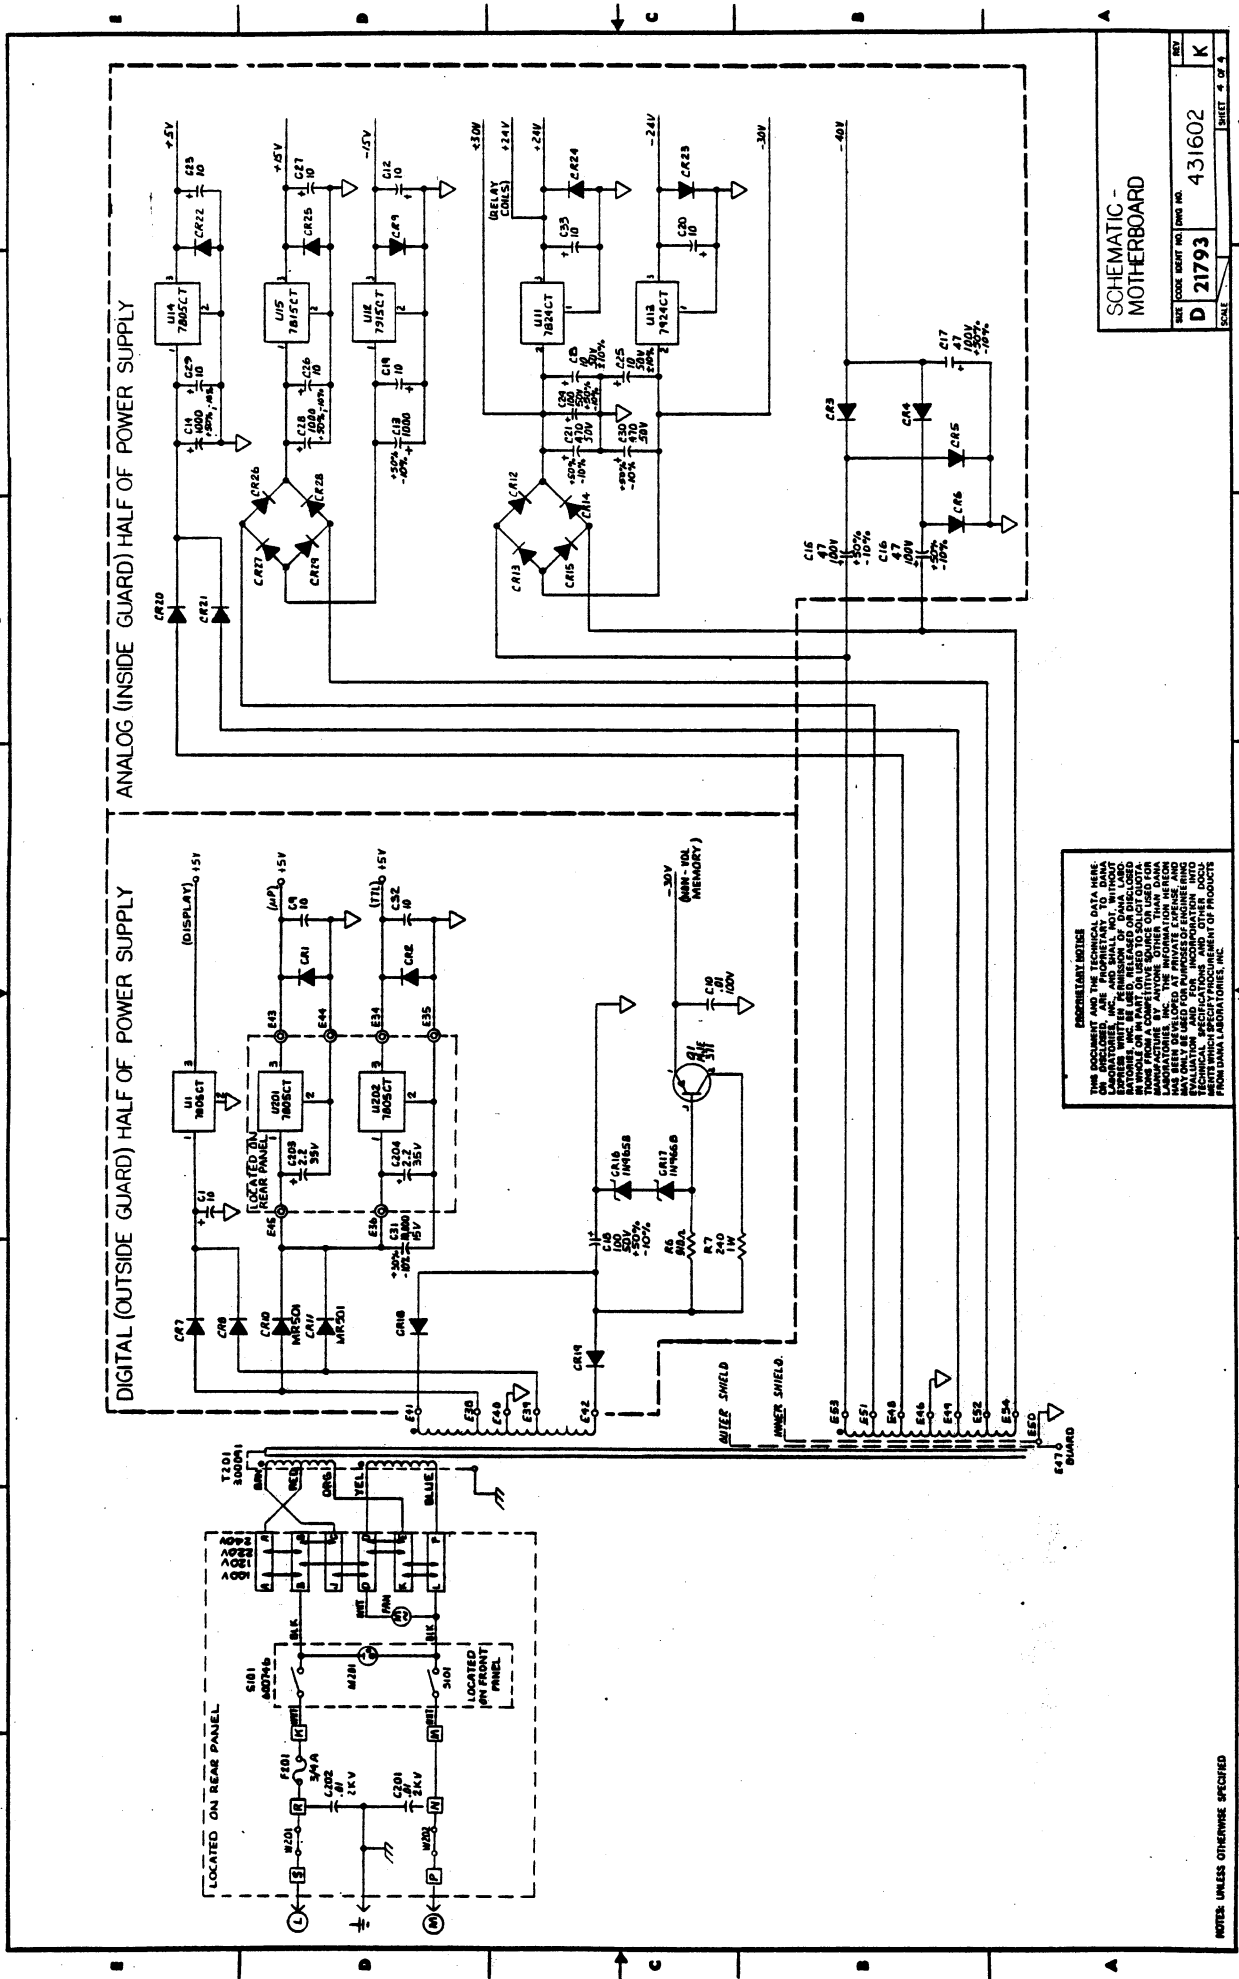

PROPRIETARY NOTICE
 THE DOCUMENT AND THE INFORMATION CONTAINED HEREIN ARE THE PROPERTY OF DANA LABORATORIES, INC. AND SHALL NOT BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. THE INFORMATION CONTAINED HEREIN HAS BEEN DEVELOPED BY DANA LABORATORIES, INC. FOR THE PURPOSES OF EVALUATION AND FOR INCORPORATION INTO THE DESIGN AND SPECIFICATION OF PRODUCTS FROM DANA LABORATORIES, INC.


| | |
|--------------------------------|--------------|
| SCHEMATIC - MOTHERBOARD | |
| DATE CODE SHEET NO. (DWG. NO.) | 431602 |
| D 21793 | K |
| SCALE | SHEET 4 OF 4 |

NOTES UNLESS OTHERWISE SPECIFIED

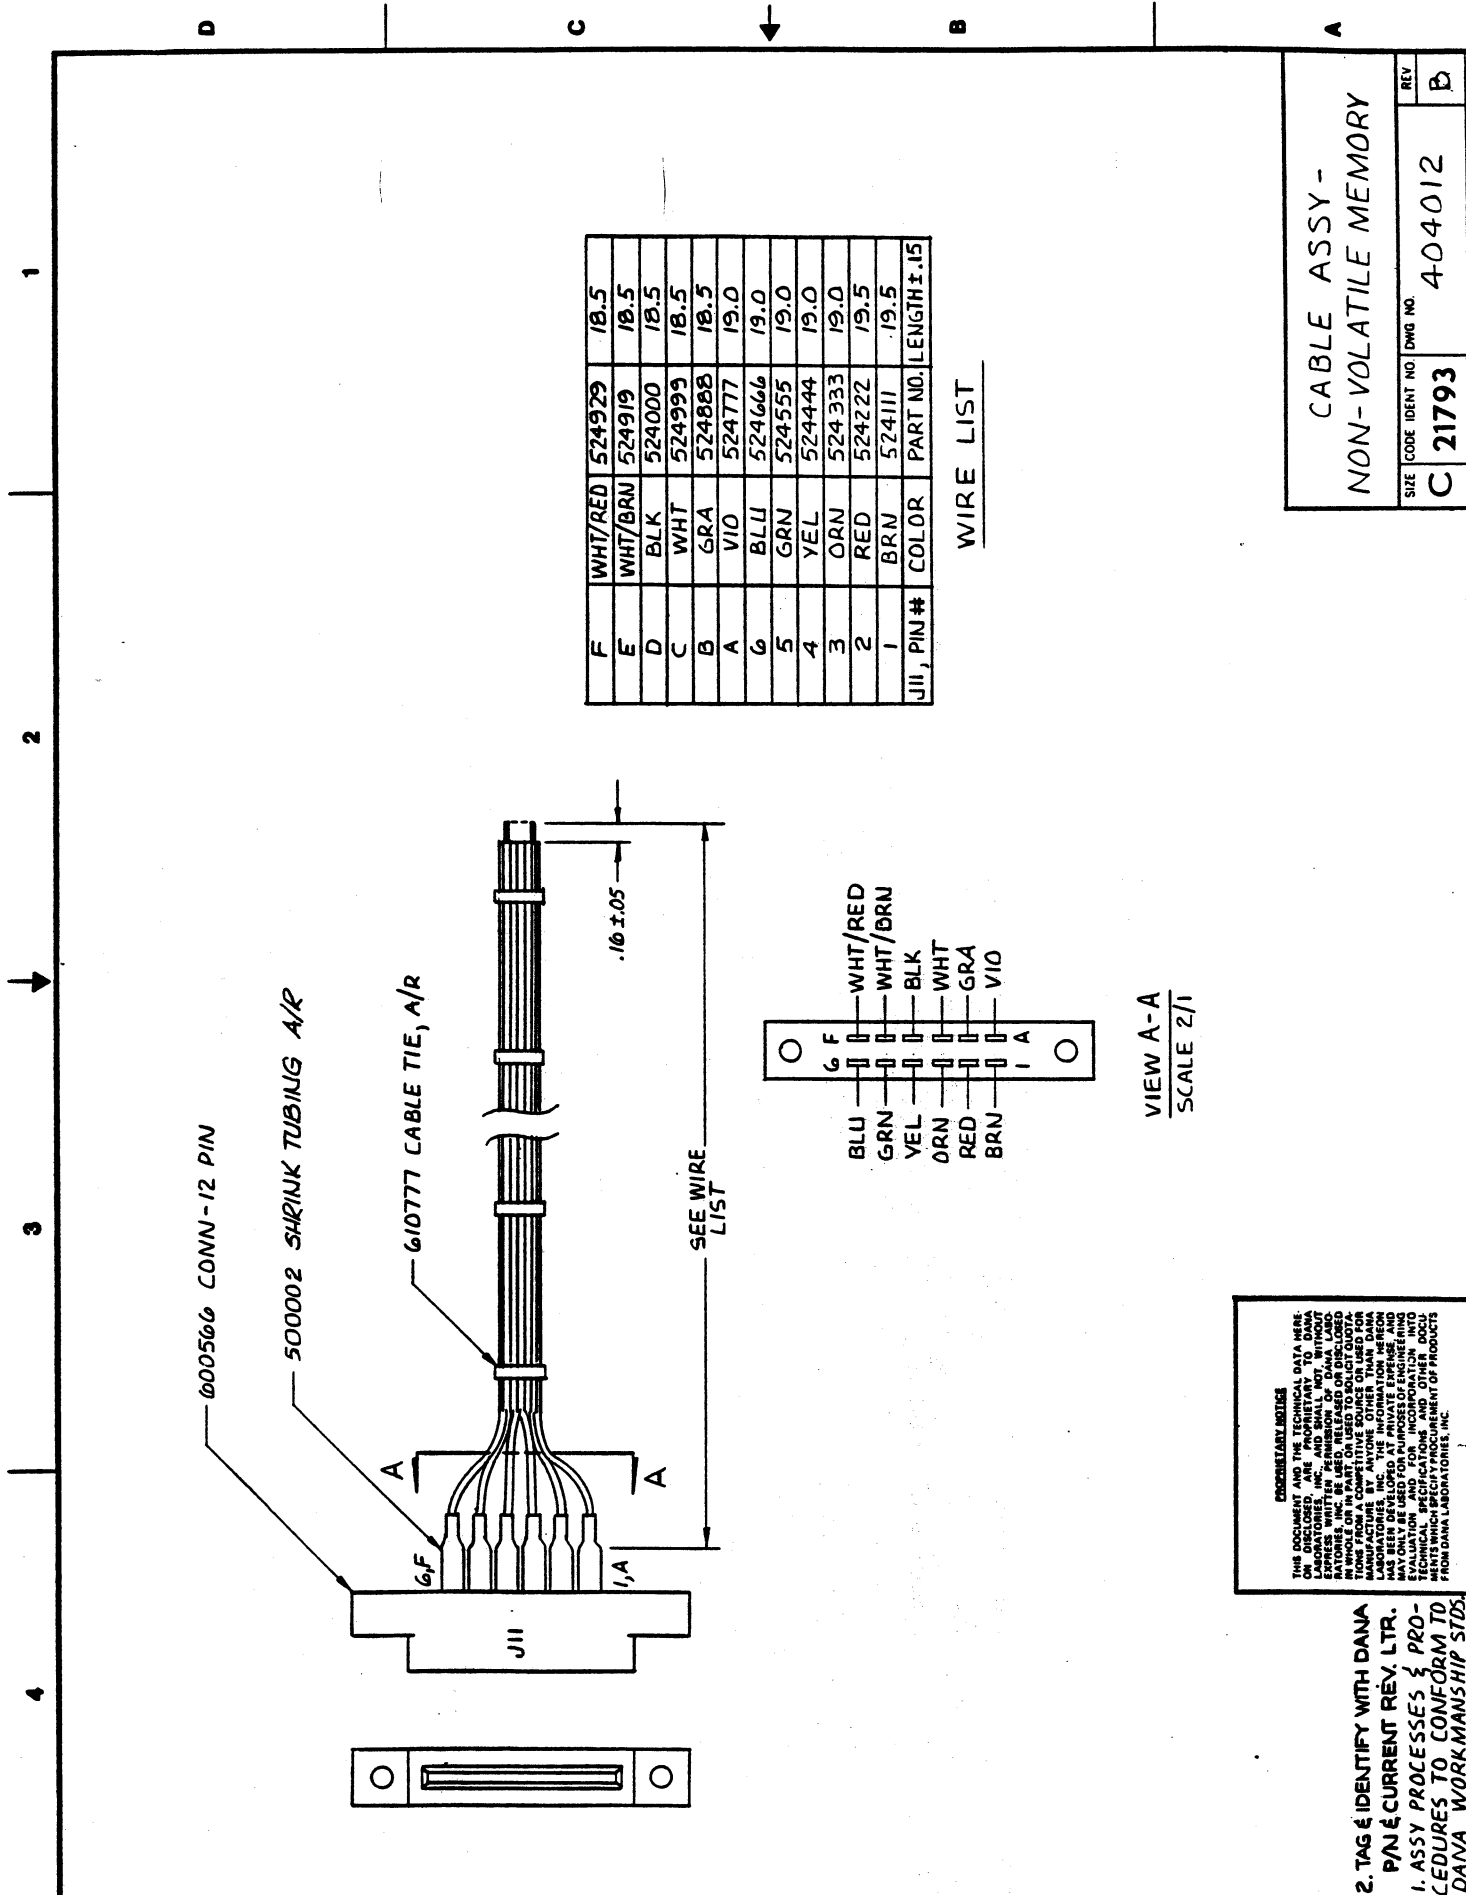

| F | WHT/RED | 524929 | 18.5 |
|-----------|---------|----------|-------------|
| E | WHT/BRN | 524919 | 18.5 |
| D | BLK | 524000 | 18.5 |
| C | WHT | 524999 | 18.5 |
| B | GRA | 524888 | 18.5 |
| A | VIO | 524777 | 19.0 |
| 6 | BLU | 524666 | 19.0 |
| 5 | GRN | 524555 | 19.0 |
| 4 | YEL | 524444 | 19.0 |
| 3 | ORN | 524333 | 19.0 |
| 2 | RED | 524222 | 19.5 |
| 1 | BRN | 524111 | 19.5 |
| J11, PIN# | COLOR | PART NO. | LENGTH ±.15 |

WIRE LIST

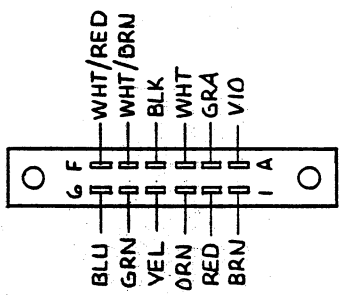

VIEW A-A
SCALE 2/1


**CABLE ASSY -
NON-VOLATILE MEMORY**

| | | | |
|------|----------------|---------|-----|
| SIZE | CODE IDENT NO. | DWG NO. | REV |
| C | 21793 | 404012 | B |

SCALE 2:1 SHEET 1 OF 2

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE THE PROPERTY OF DANA LABORATORIES, INC. AND SHALL NOT, WITHOUT WRITTEN PERMISSION OF DANA LABORATORIES, BE REPRODUCED, COPIED, LOANED, IN WHOLE OR IN PART, OR USED TO SOLICIT QUOTAS OR CONTRACTS FROM ANY OTHER MANUFACTURER BY ANYONE OTHER THAN DANA LABORATORIES, INC. THE INFORMATION HEREIN MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND DRAWINGS FROM DANA LABORATORIES, INC.

2. TAG & IDENTIFY WITH DANA PNJ & CURRENT REV. LTR.
1. ASSY PROCESSES & PROCEDURES TO CONFORM TO DANA WORKMANSHIP STDS. NOTES: UNLESS OTHERWISE SPECIFIED

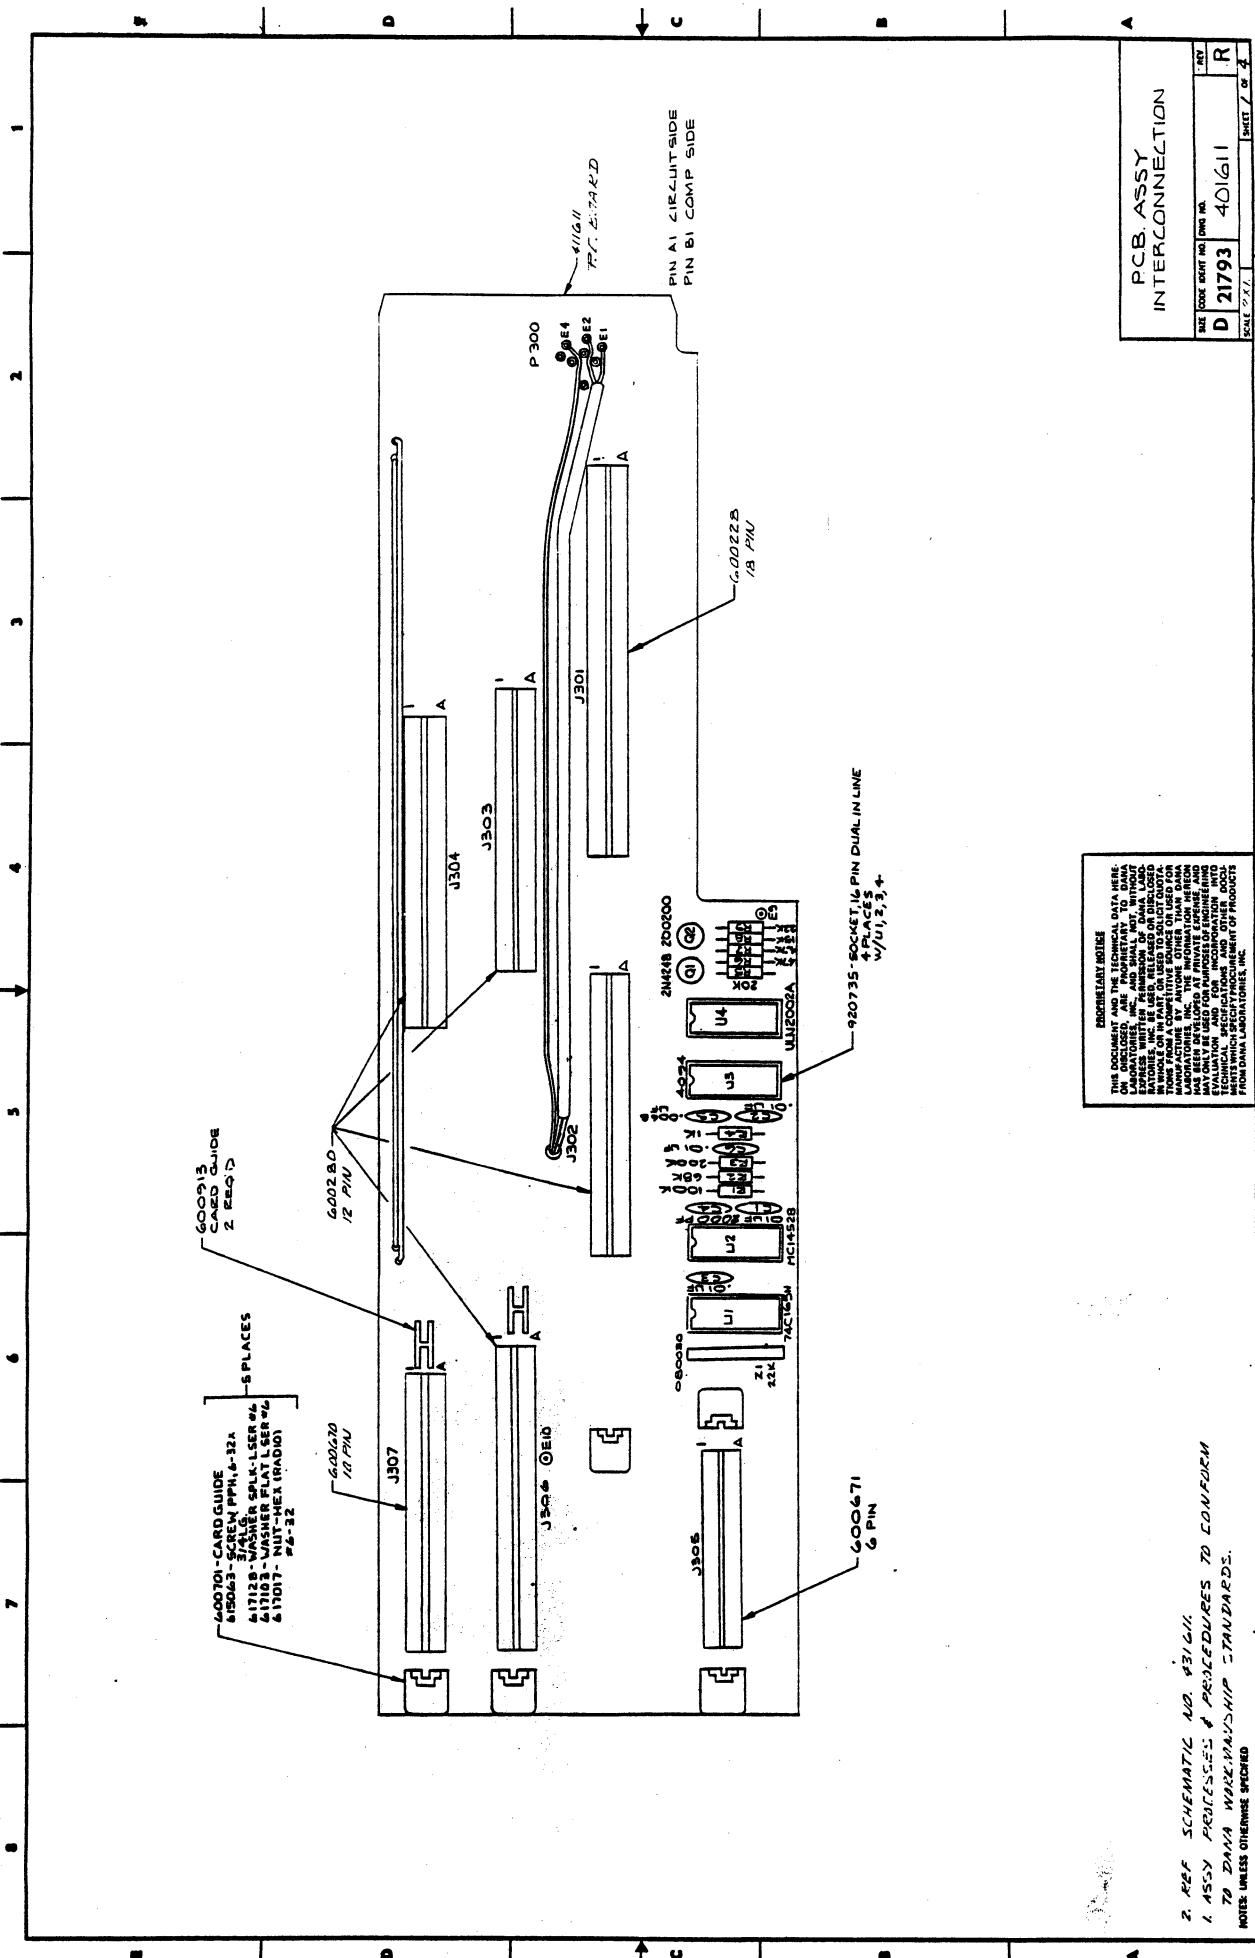

PCB. ASSY
INTERCONNECTION


REV. DATE, SHEET NO., PART NO.
D 21793 401611 R

SCALE 2:1 SHEET 7 OF 8

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE AND SHALL NOT, WITHOUT AUTHORITY, BE REPRODUCED, COPIED, OR DISSEMINATED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE THE PROPERTY OF DANA LABORATORIES, INC. AND SHALL NOT, WITHOUT AUTHORITY, BE REPRODUCED, COPIED, OR DISSEMINATED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE THE PROPERTY OF DANA LABORATORIES, INC. AND SHALL NOT, WITHOUT AUTHORITY, BE REPRODUCED, COPIED, OR DISSEMINATED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE THE PROPERTY OF DANA LABORATORIES, INC. AND SHALL NOT, WITHOUT AUTHORITY, BE REPRODUCED, COPIED, OR DISSEMINATED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

2. REF SCHEMATIC NO. 431611
1. ASSY PREPARES & PROCEDURES TO CONFORM TO DANA WORKMANSHIP STANDARDS.
- NOTE: UNLESS OTHERWISE SPECIFIED

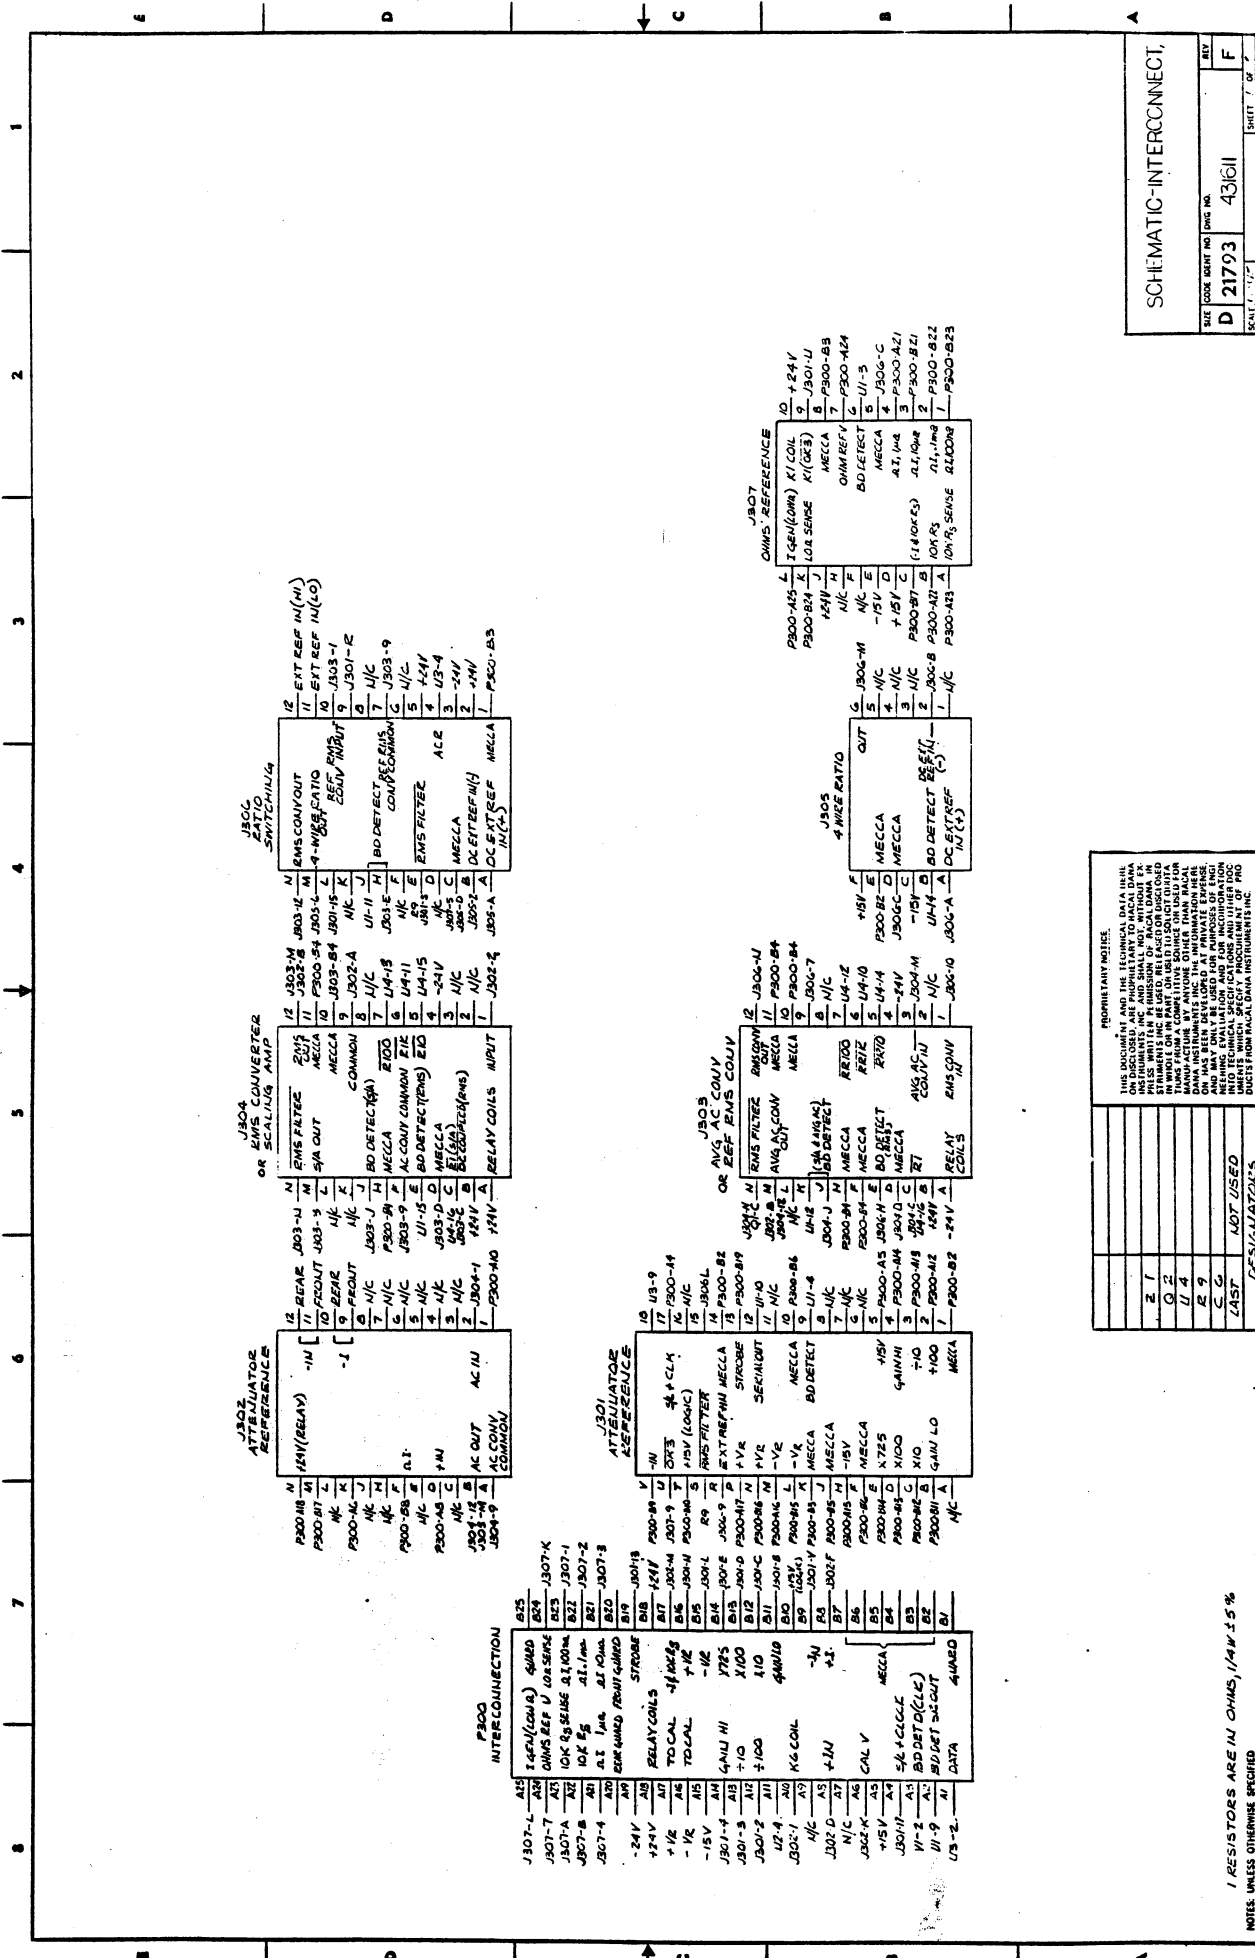


SCHEMATIC-INTERCONNECT,
 SIZE CODE BENT NO 43611
 REV F
 SHEET 7 OF 7

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE THE PROPERTY OF RACAL DATA INSTRUMENTS INC AND SHALL NOT BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF RACAL DATA INSTRUMENTS INC. THIS DOCUMENT IS THE PROPERTY OF RACAL DATA INSTRUMENTS INC AND IS LOANED TO YOU BY RACAL DATA INSTRUMENTS INC. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF RACAL DATA INSTRUMENTS INC.

| | |
|------|----------|
| Z 1 | |
| G 2 | |
| U 4 | |
| E 9 | |
| C 6 | |
| LAST | NOT USED |


DESIGNATORS
 / RESISTORS ARE IN OHMS, 1/4W ± 5%
 NOTES UNLESS OTHERWISE SPECIFIED

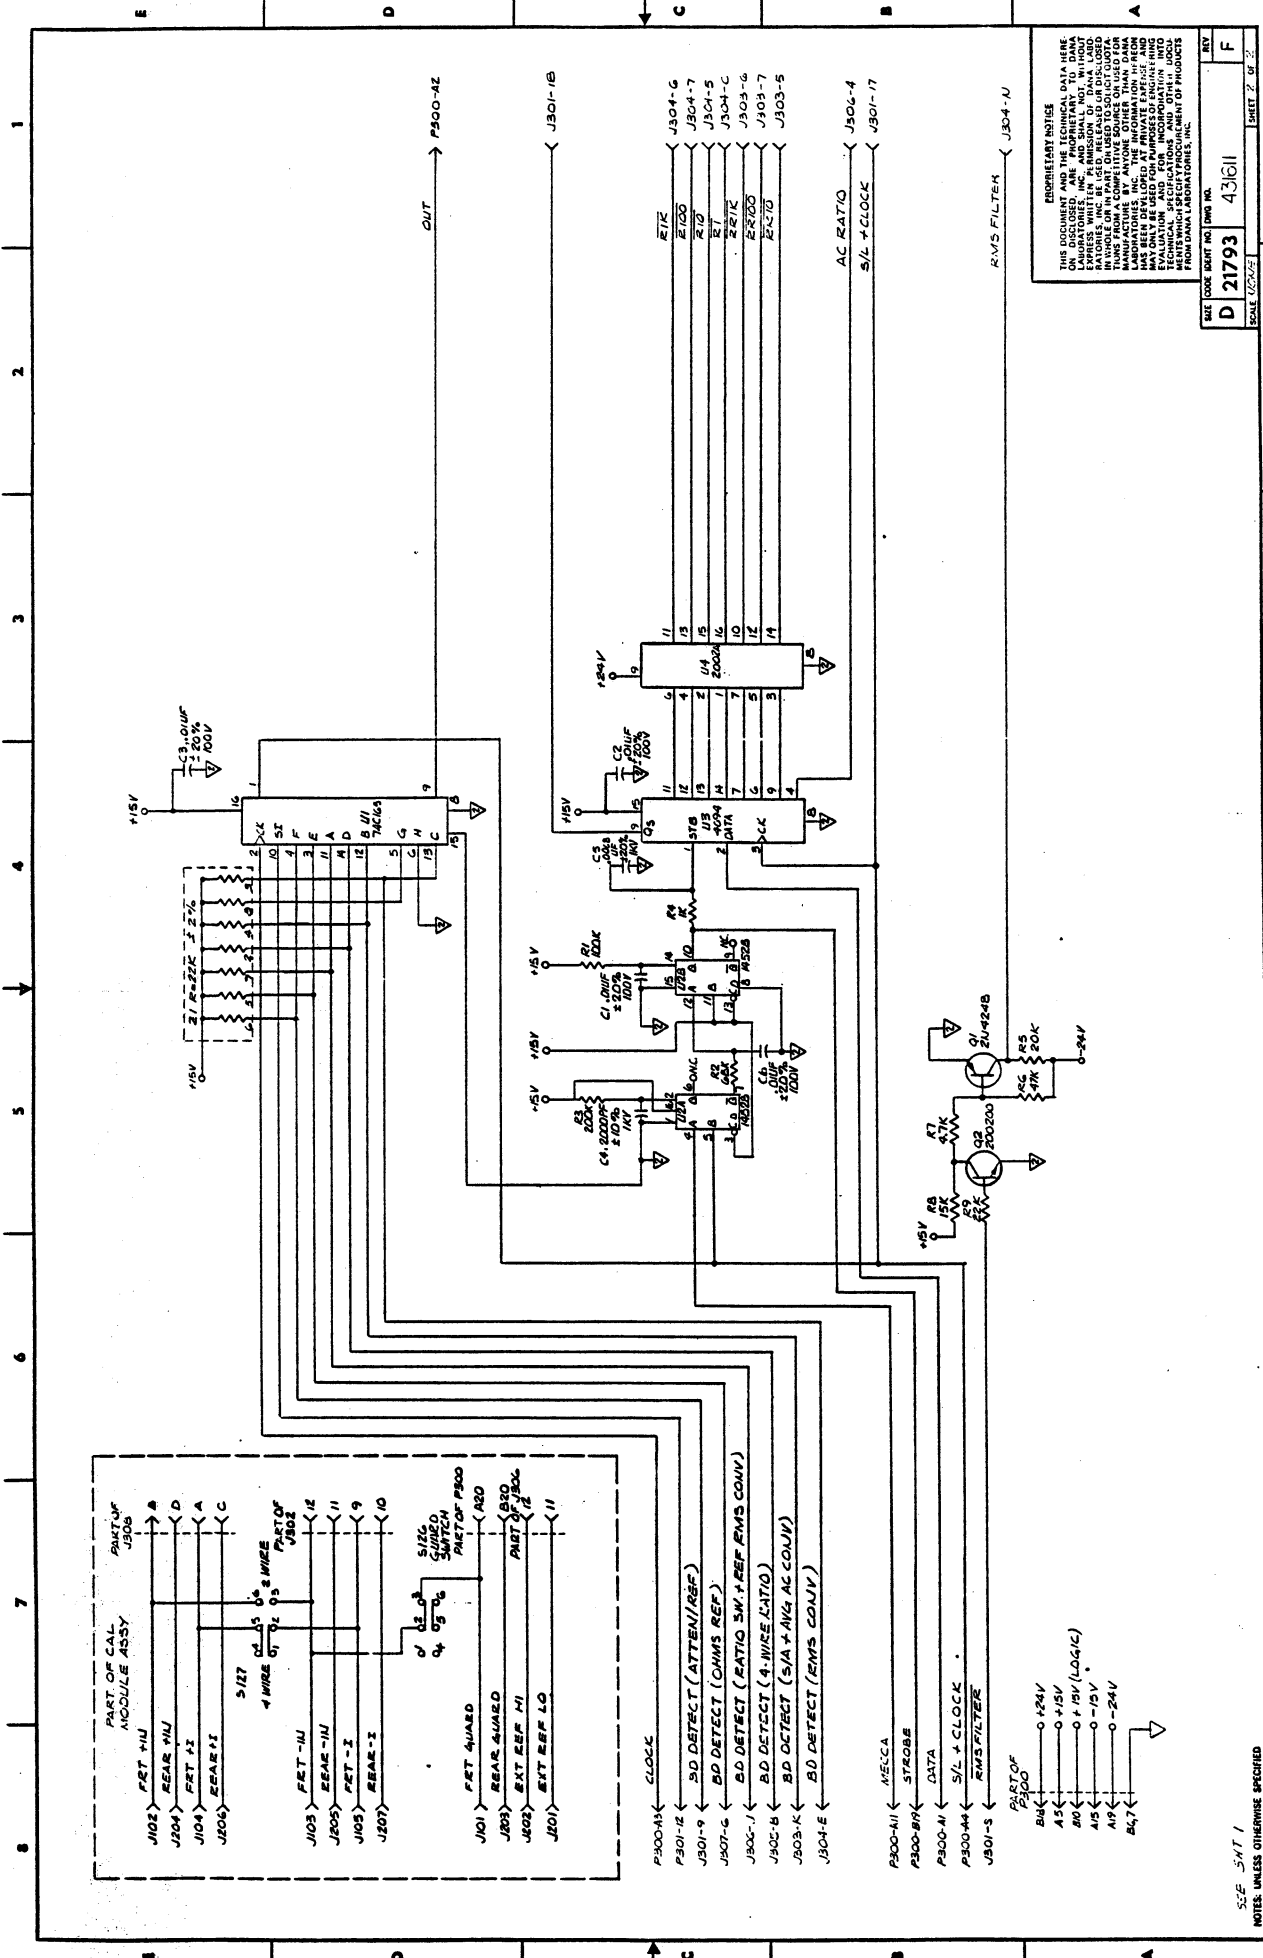

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN CONTAINED THEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE AND SHALL NOT BE RELEASED OR DISCLOSED TO ANY OTHER PERSON OR ORGANIZATION WITHOUT THE WRITTEN AUTHORIZATION OF THE DIRECTOR, NATIONAL SECURITY AGENCY. THIS NOTICE IS APPLICABLE TO ALL FORMS, TRANSMISSIONS, AND INFORMATION SYSTEMS. IT IS THE POLICY OF THE NATIONAL SECURITY AGENCY TO MAKE AVAILABLE TO THE PUBLIC INFORMATION THAT IS NOT OTHERWISE RESTRICTED BY LAW. THE INFORMATION HEREIN HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF THE NATIONAL SECURITY AGENCY.

| | | |
|-------|-------|-------|
| REV | | |
| D | 21793 | 43611 |
| SCALE | 100% | |
| SHEET | 2 | OF 2 |

SEE 5471
 NOTES, UNLESS OTHERWISE SPECIFIED

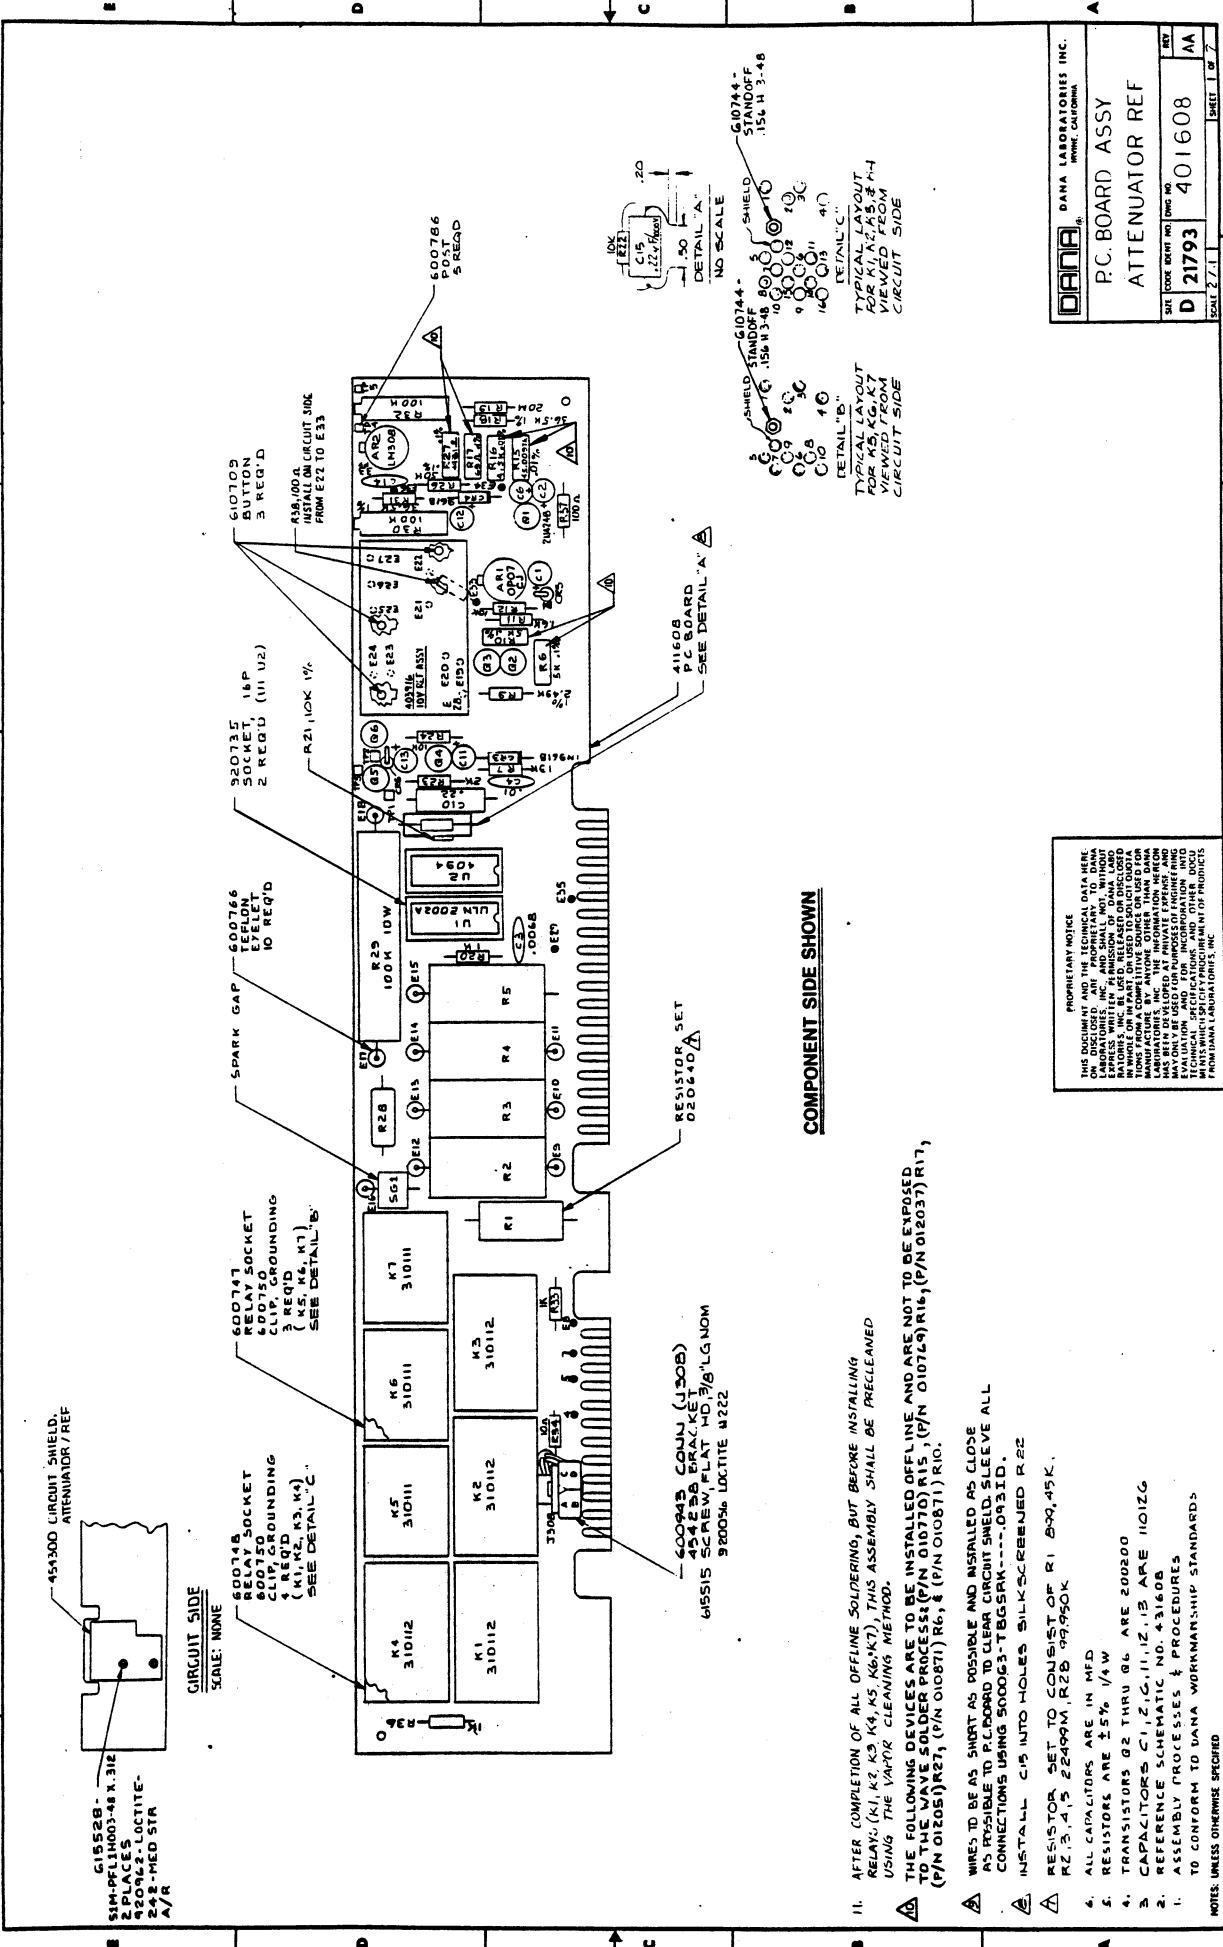

G15528 -
 SIM-PELLIM03-48 X. 312
 2 PLACES
 920962 - LOCITE-
 243 - MED STR
 A/R

CIRCUIT SIDE
 SCALE: NONE

600745
 RELAY SOCKET
 3 REQ'D
 (K1, K2, K3, K4)
 SEE DETAIL 'C'

600747
 RELAY SOCKET
 3 REQ'D
 (K5, K6, K7)
 SEE DETAIL 'B'

600746
 EYELET
 10 REQ'D

320735
 SOCKET, 18P
 2 REQ'D (U1, U2)

610705
 BUTTON
 5 REQ'D

600943
 COIL (J308)
 2 REQ'D
 (K5, K6)
 3200% LOCITE R222

600943
 COIL (J308)
 2 REQ'D
 (K5, K6)
 3200% LOCITE R222

RESISTOR SET
 020640A

411608
 P.C. BOARD
 SEE DETAIL 'A'



600786
 POST
 5 REQ'D

COMPONENT SIDE SHOWN

11. AFTER COMPLETION OF ALL OFFLINE SOLDERING, BUT BEFORE INSTALLING RELAYS (K1, K2, K3, K4, K5, K6, K7), THIS ASSEMBLY SHALL BE PRECLEANED USING THE VAPOR CLEANING METHOD.
12. THE FOLLOWING DEVICES ARE TO BE INSTALLED OFFLINE AND ARE NOT TO BE EXPOSED TO THE WAVE SOLDER PROCESS: (P/N 010770) R15, (P/N 010769) R16, (P/N 012037) R17, (P/N 012051) R21, (P/N 010871) R6, & (P/N 010871) R10.
13. WIRES TO BE AS SHORT AS POSSIBLE AND INSTALLED AS CLOSE AS POSSIBLE TO PLEAD TO CLEAR CIRCUIT SHIELD SLEEVE ALL CONNECTIONS USING 500063-TBGSRA-003-ID.
14. INSTALL C15 INTO HOLES SILKSCREENED R22
15. RESISTOR SET TO CONSIST OF R1 500,45K, R2 3,415 22499M, R2B 09950K
16. ALL CAPACITORS ARE IN MFD
17. RESISTORS ARE ±5% 1/4W
18. TRANSISTORS Q2 THRU Q6 ARE 200200
19. CAPACITORS C1, C2, C11, C12, C13 ARE 1010ZG
20. REFERENCE SCHEMATIC NO. 431608
21. ASSEMBLY PROCESSES & PROCEDURES TO CONFORM TO DANA WORKMANSHIP STANDARDS

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREON ARE THE PROPERTY OF DANA LABORATORIES, INC. AND SHALL NOT BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. IN WHOLE OR IN PART, OR USED TO PROMOTE OR ADVERTISE THE MANUFACTURE BY ANYONE OTHER THAN DANA LABORATORIES, INC. THIS DOCUMENT AND THE TECHNICAL DATA HEREON MAY ONLY BE USED FOR INFORMATIONAL PURPOSES AND MAY BE SUBJECT TO CHANGE WITHOUT NOTICE. TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTATION ARE SUBJECT TO CHANGE WITHOUT NOTICE. DANA LABORATORIES, INC.

| | |
|---|--------|
| DANA DANA LABORATORIES INC. IRVINE, CALIFORNIA | |
| P.C. BOARD ASSY ATTENUATOR REF | |
| SUN CODE | REV |
| D 21793 | AA |
| INC. NO. | 401608 |
| SCALE 2:1 | |
| SHEET 1 OF 7 | |

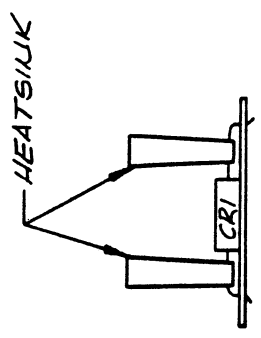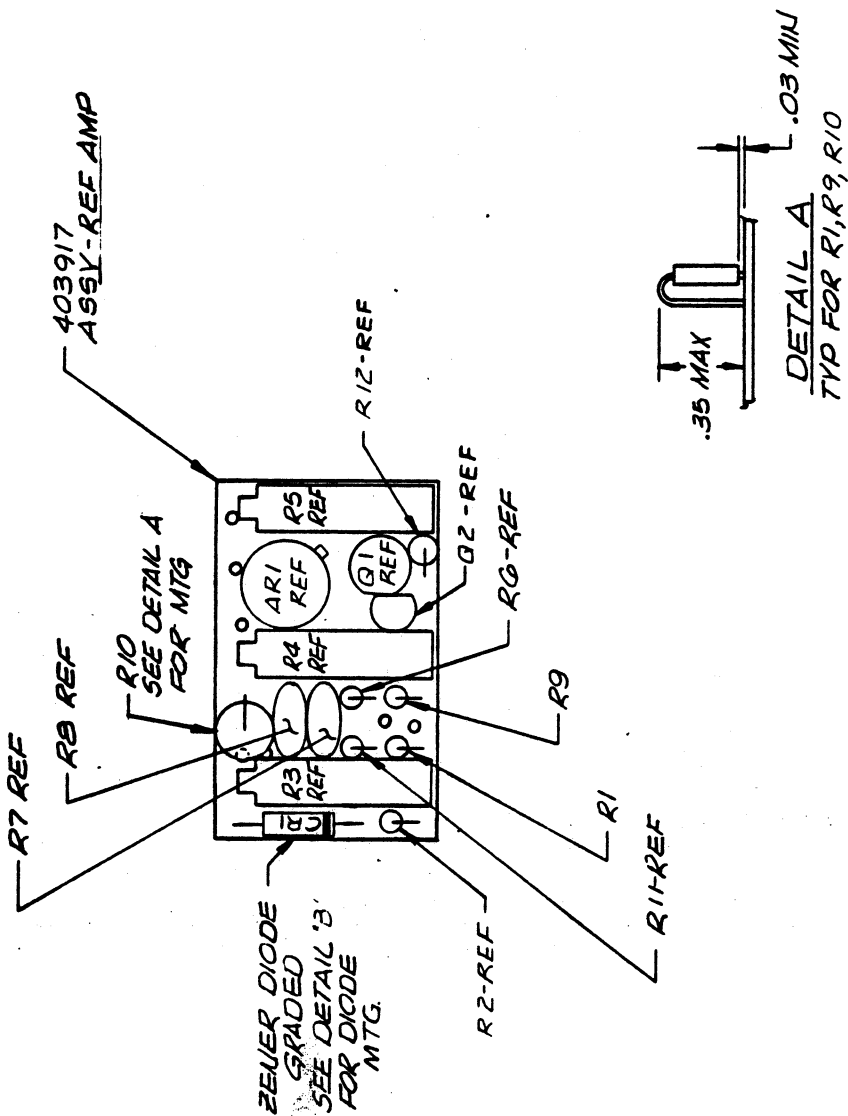


DETAIL B
HEATSINK DIODE
LEADS WHILE
SOLDERING

3. ALL COMPONENTS TO BE .35 MAX. ABOVE PCB
2. SCHEMATIC REF 432008
1. ASSY PROCESSES & PROCEDURES TO CONFORM TO DATA WORKMANSHIP STUDS

NOTES: UNLESS OTHERWISE SPECIFIED

| | | |
|---------------------|---------|--------------|
| PCB, 10 V REFERENCE | | REV |
| SIZE | DWG NO. | REV |
| B | 21793 | 403916 E |
| SCALE | 2/1 | SHEET 1 OF 5 |

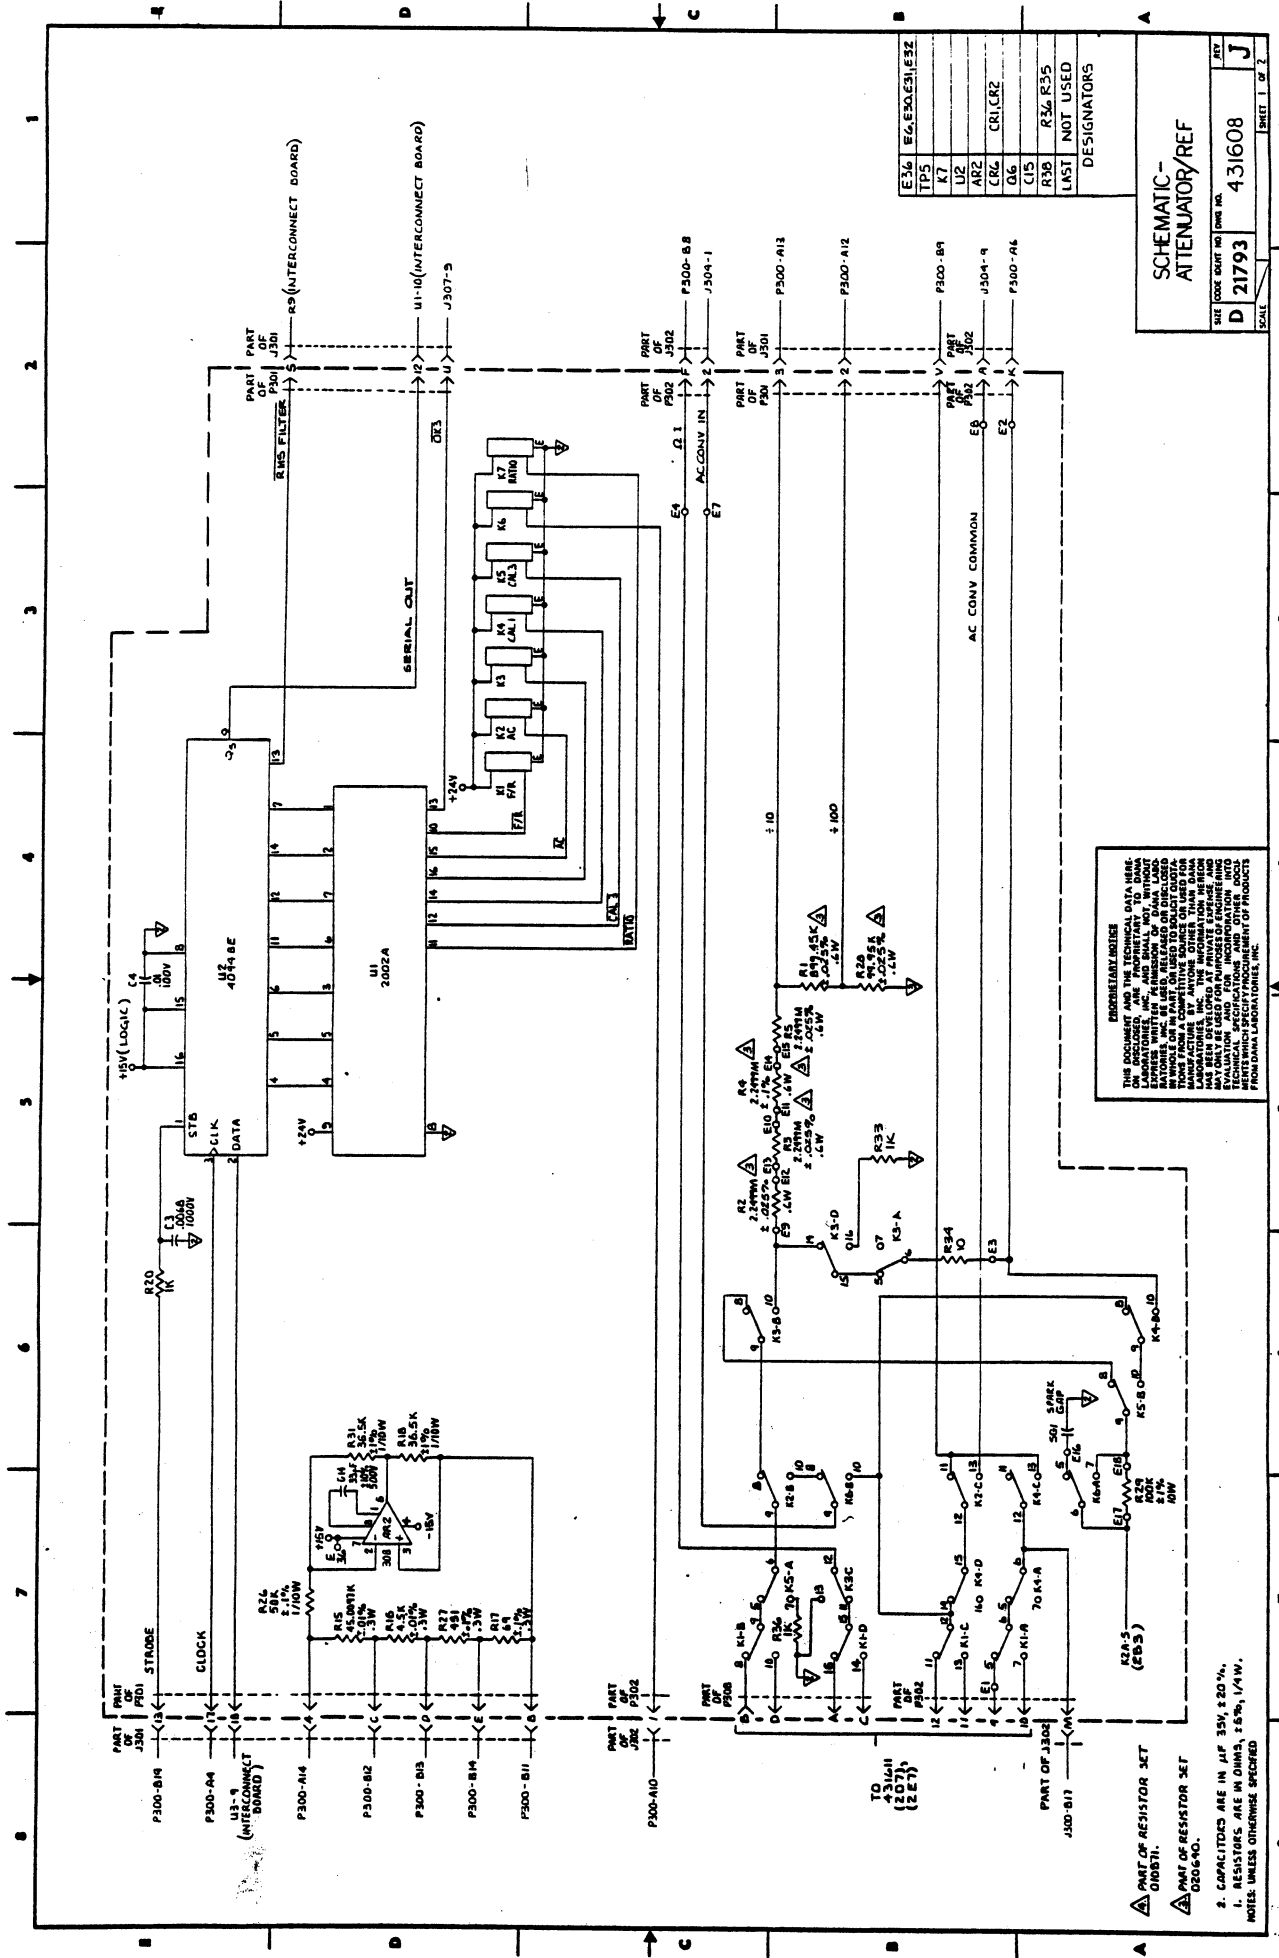

| DESIGNATORS | VALUES |
|-------------|----------------|
| E34 | EG, EG02, EG32 |
| TP5 | |
| K7 | |
| U2 | |
| AR2 | |
| CR2 | CR1, CR2 |
| O6 | |
| C15 | |
| R38 | R34, R35 |
| LNST | NOT USED |

SCHEMATIC - ATTENUATOR/REF

SIZE CODE DRAWING NO. **D 21793** 431608

REV **J**

SHEET 1 OF 2

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED AND PROPRIETARY TO DANA LABORATORIES, INC. ANY REPRODUCTION OR TRANSMISSION OF THIS DOCUMENT OR THE INFORMATION HEREIN WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. IS PROHIBITED. THIS DOCUMENT IS THE PROPERTY OF DANA LABORATORIES, INC. AND IS LOANED TO YOU FOR YOUR INFORMATION ONLY. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. THE INFORMATION HEREIN IS NOT TO BE USED FOR PURPOSES OF ENGINEERING DESIGN OR FOR THE MANUFACTURE OF PRODUCTS UNLESS OTHERWISE SPECIFIED IN THE TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS PROVIDED BY DANA LABORATORIES, INC.


- 1. CAPACITORS ARE IN μF 35V, $\pm 20\%$.
- 2. RESISTORS ARE IN OHMS, $\pm 5\%$, 1/4W, UNLESS OTHERWISE SPECIFIED.

△ PART OF RESISTOR SET 020181.

△ PART OF RESISTOR SET 020180.

EXPERIMENTAL NOISE
 THE INFORMATION CONTAINED HEREIN IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. IT IS THE PROPERTY OF RAND CORPORATION AND IS LOANED TO YOU WITHOUT WARRANTY, BEING RETURNED TO RAND CORPORATION UPON REQUEST. IT IS NOT TO BE REPRODUCED OR DISCLOSED TO ANY OTHER PERSON OR ORGANIZATION WITHOUT THE WRITTEN AUTHORIZATION OF RAND CORPORATION. THE INFORMATION HEREIN HAS BEEN DEVELOPED BY RAND CORPORATION ENGINEERS AND IS NOT TO BE REPRODUCED OR DISCLOSED TO ANY OTHER PERSON OR ORGANIZATION WITHOUT THE WRITTEN AUTHORIZATION OF RAND CORPORATION. RAND CORPORATION IS NOT RESPONSIBLE FOR ANY REPRODUCTION OR DISCLOSURE OF THIS INFORMATION TO ANY OTHER PERSON OR ORGANIZATION.

REV J
 431608
 D 21793
 SHEET 2 OF 2

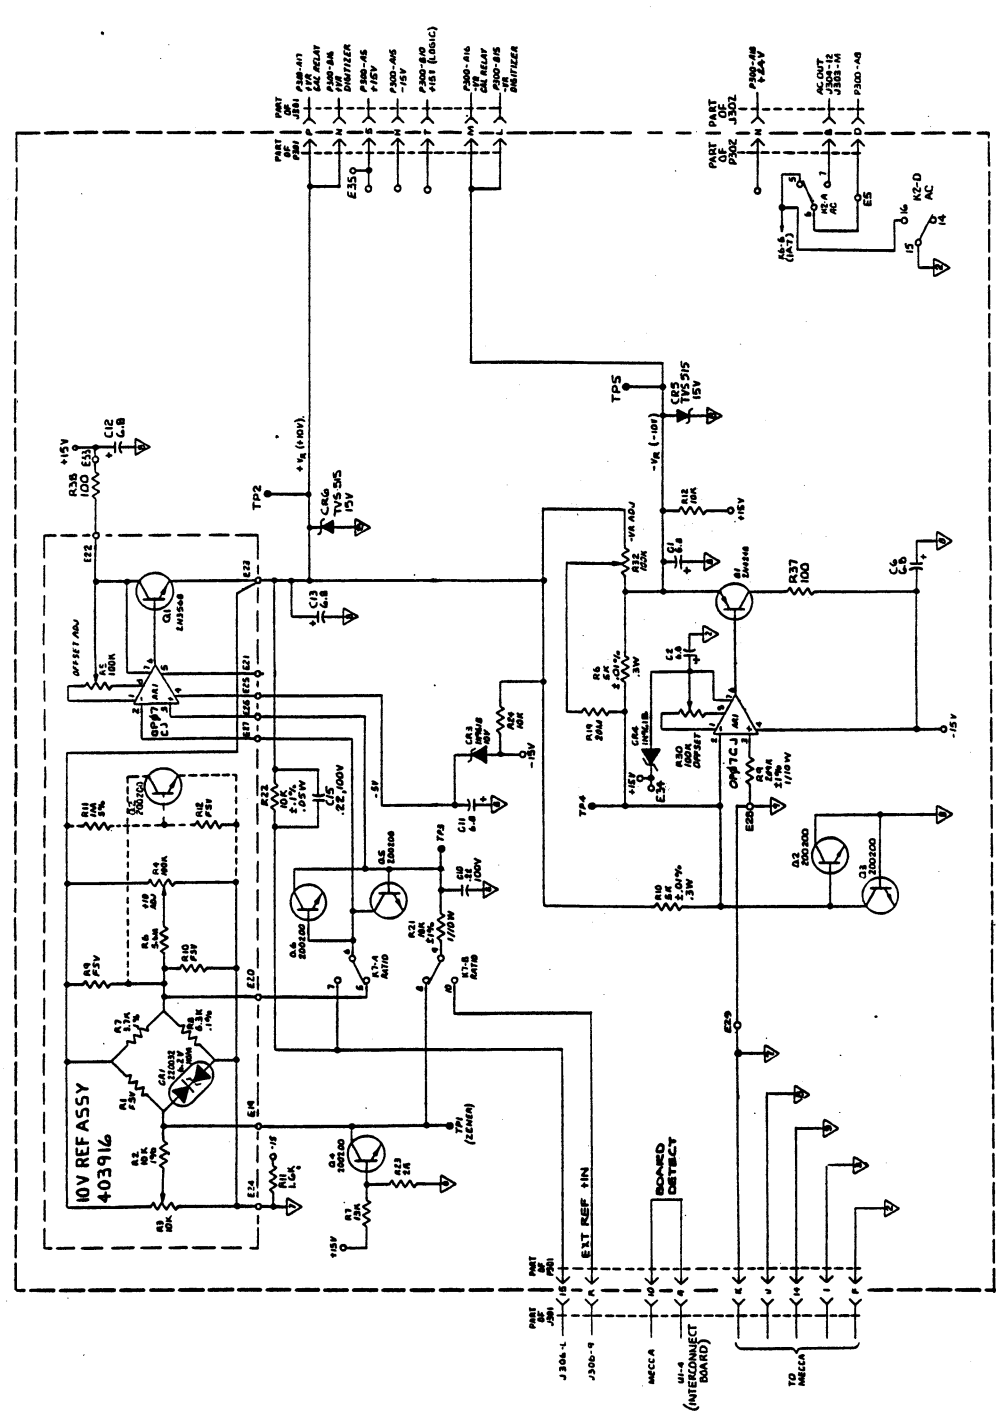


NOTE: UNLESS OTHERWISE SPECIFIED

D

C

B

A

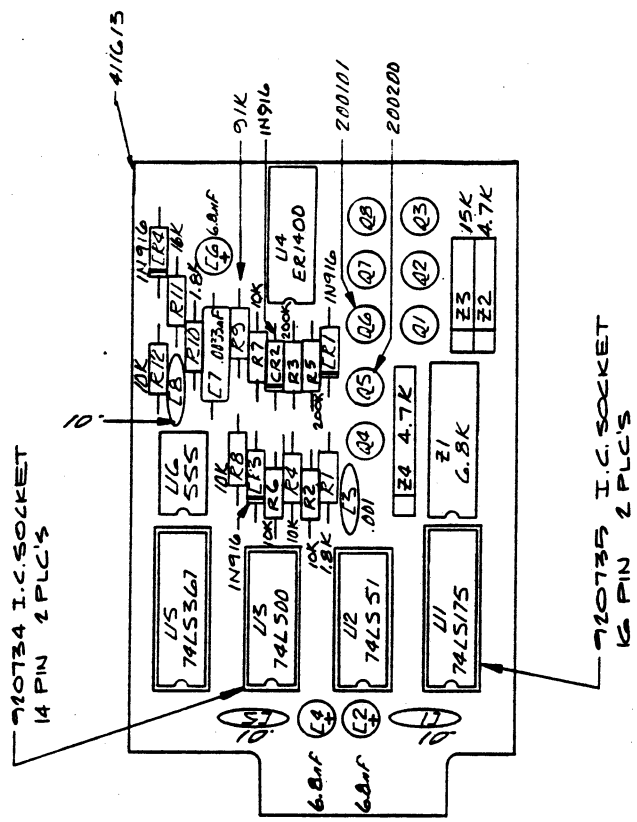

710734 I.C. SOCKET
14 PIN 2 PLC'S

710735 I.C. SOCKET
16 PIN 2 PLC'S

PCB ASSY
MIN-VOLATILE
MEMORY

| | | | |
|-----------|----------------|---------|--------|
| SIZE | CODE IDENT NO. | DWG NO. | REV |
| C | 21793 | 401613 | D |
| SCALE 2X1 | | | 1 OF 3 |

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO DANA ELECTRONIC UNIT, INC. AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION BE REPRODUCED OR DISCLOSED TO ANY OTHER PERSON OR ENTITY. ANY INFORMATION FROM A COMPETITOR USED TO SOLICIT BUSINESS FROM DANA ELECTRONIC UNIT, INC. OR TO MANUFACTURE BY ANYONE OTHER THAN DANA ELECTRONIC UNIT, INC. SHALL BE CONSIDERED UNLAWFUL. THIS DOCUMENT AND THE TECHNICAL DATA HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND IS NOT TO BE REPRODUCED OR DISCLOSED TO ANY OTHER PERSON OR ENTITY WITHOUT THE WRITTEN PERMISSION OF DANA ELECTRONIC UNIT, INC. TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY REQUIREMENTS OF PRODUCTS FROM DANA LABORATORIES, INC.


3. TRANSISTORS Q1-Q8 & P1, P2 ARE NR. 20000000.
 2. REF. SCHEMATIC NR. 4-31613.
 1. ASSY PROCESSES & PROCEDURES TO CONFORM TO DANA WORKMANSHIP STANDARDS.
- NOTES: UNLESS OTHERWISE SPECIFIED

D

C

B

A

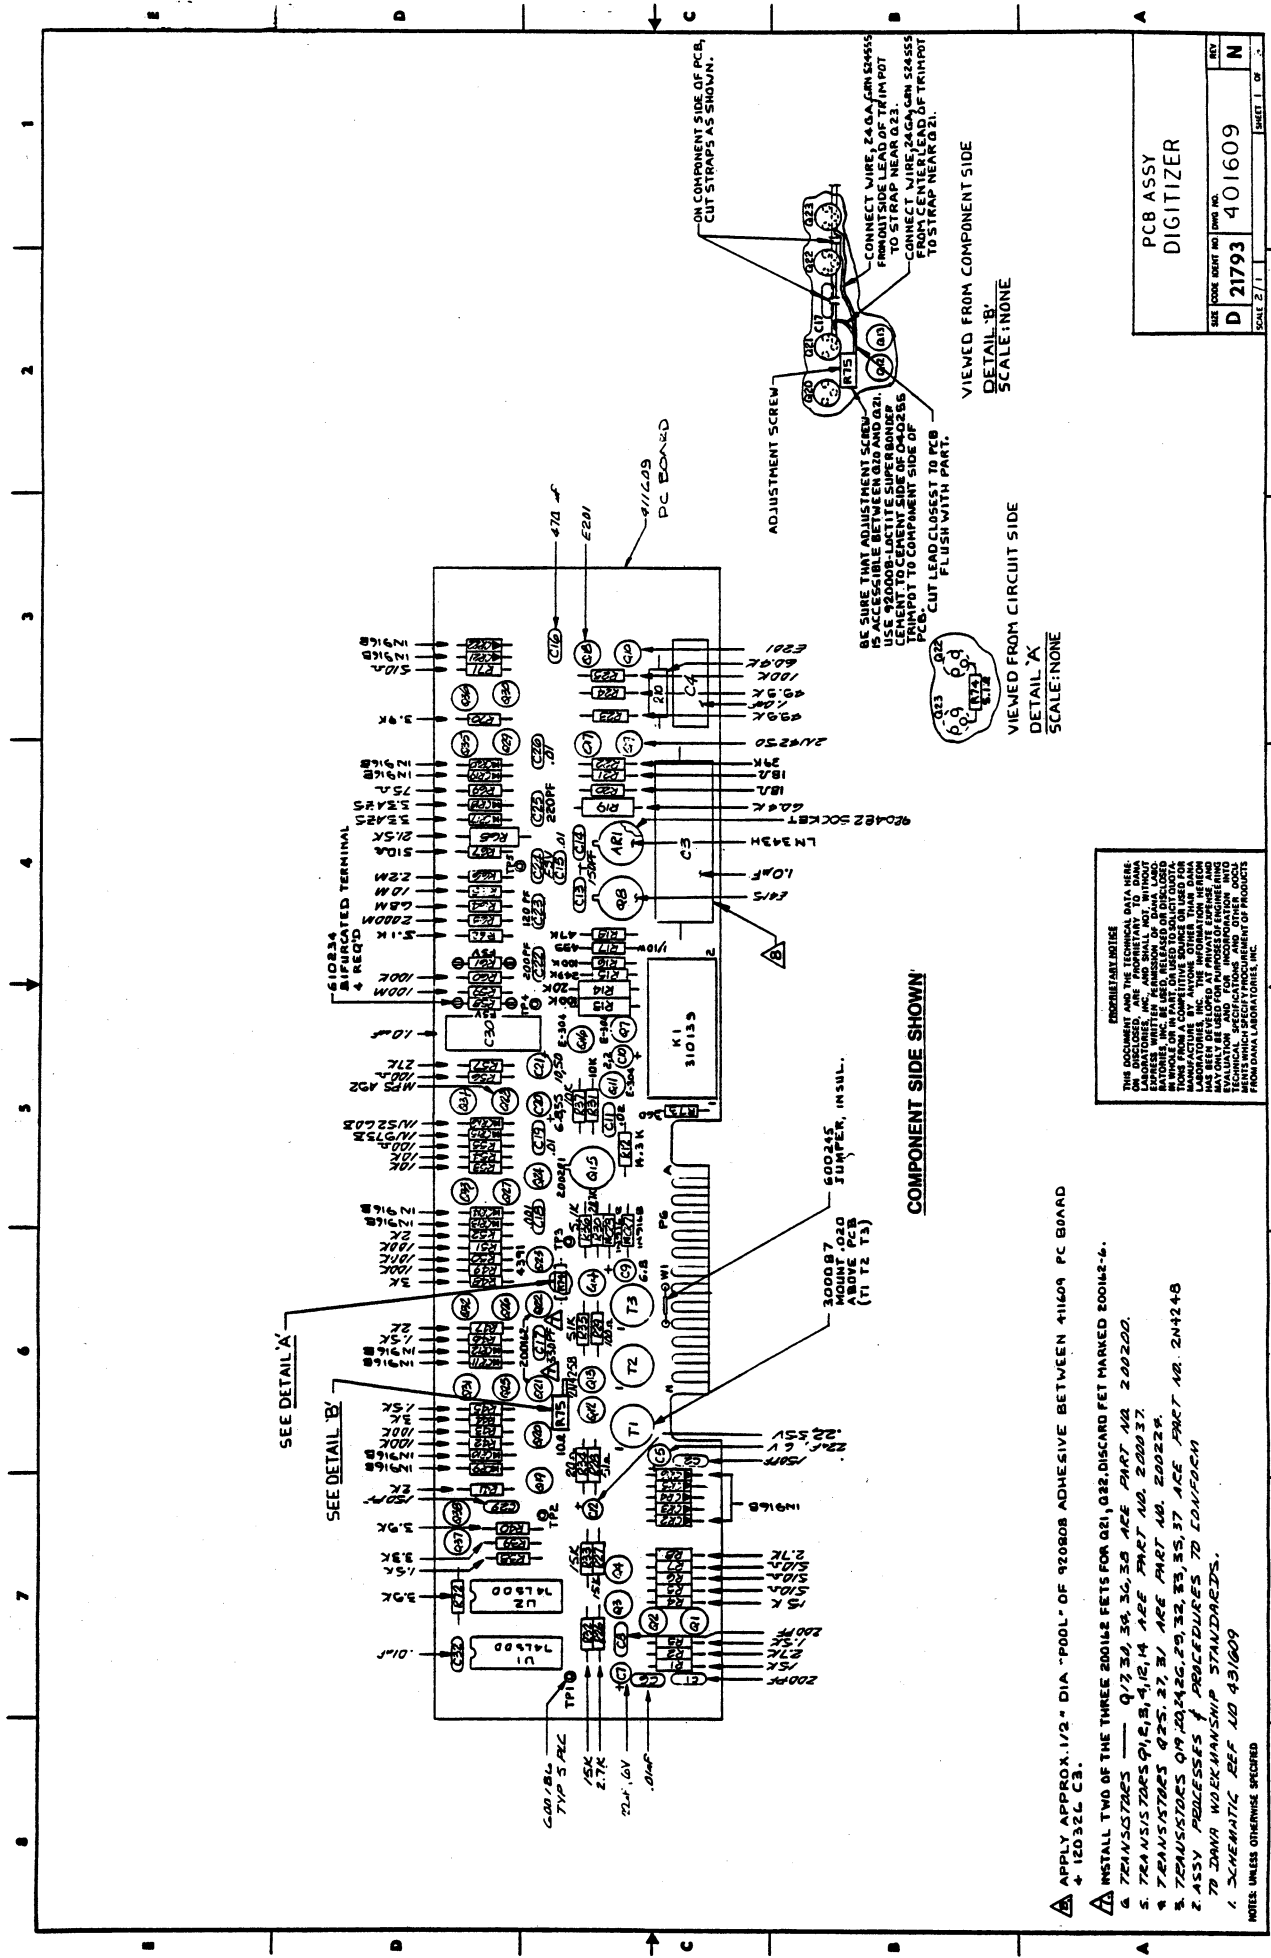


PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREON ARE UNCLASSIFIED AND UNRESTRICTED FROM PUBLIC RELEASE. ANY REPRODUCTION OR TRANSMISSION OF THIS DOCUMENT OR THE TECHNICAL DATA HEREON IN WHOLE OR IN PART, OR USE FOR ANY OTHER PURPOSE, IS PROHIBITED WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. THE INFORMATION HEREON IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. THIS DOCUMENT AND THE TECHNICAL DATA HEREON MAY ONLY BE USED FOR PURPOSES OF ENGINEERING, RESEARCH, AND OTHER TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS OF DANA LABORATORIES, INC.

- ▲ APPLY APPROX. 1/2" DIA "POOL" OF 920808 ADHESIVE BETWEEN #11609 PC BOARD + 12032L C3.
- ▲ INSTALL TWO OF THE THREE 20016 FETS FOR Q21, Q22, DISCARD FET MARKED 20016-4.
- ▲ TRANSISTORS — Q1, Q2, Q3, Q4, Q5, Q6, Q7, Q8, Q9, Q10, Q11, Q12, Q13, Q14, Q15, Q16, Q17, Q18, Q19, Q20, Q21, Q22, Q23, Q24, Q25, Q26, Q27, Q28, Q29, Q30, Q31, Q32, Q33, Q34, Q35, Q36, Q37, Q38, Q39, Q40, Q41, Q42, Q43, Q44, Q45, Q46, Q47, Q48, Q49, Q50, Q51, Q52, Q53, Q54, Q55, Q56, Q57, Q58, Q59, Q60, Q61, Q62, Q63, Q64, Q65, Q66, Q67, Q68, Q69, Q70, Q71, Q72, Q73, Q74, Q75, Q76, Q77, Q78, Q79, Q80, Q81, Q82, Q83, Q84, Q85, Q86, Q87, Q88, Q89, Q90, Q91, Q92, Q93, Q94, Q95, Q96, Q97, Q98, Q99, Q100, Q101, Q102, Q103, Q104, Q105, Q106, Q107, Q108, Q109, Q110, Q111, Q112, Q113, Q114, Q115, Q116, Q117, Q118, Q119, Q120, Q121, Q122, Q123, Q124, Q125, Q126, Q127, Q128, Q129, Q130, Q131, Q132, Q133, Q134, Q135, Q136, Q137, Q138, Q139, Q140, Q141, Q142, Q143, Q144, Q145, Q146, Q147, Q148, Q149, Q150, Q151, Q152, Q153, Q154, Q155, Q156, Q157, Q158, Q159, Q160, Q161, Q162, Q163, Q164, Q165, Q166, Q167, Q168, Q169, Q170, Q171, Q172, Q173, Q174, Q175, Q176, Q177, Q178, Q179, Q180, Q181, Q182, Q183, Q184, Q185, Q186, Q187, Q188, Q189, Q190, Q191, Q192, Q193, Q194, Q195, Q196, Q197, Q198, Q199, Q200, Q201, Q202, Q203, Q204, Q205, Q206, Q207, Q208, Q209, Q210, Q211, Q212, Q213, Q214, Q215, Q216, Q217, Q218, Q219, Q220, Q221, Q222, Q223, Q224, Q225, Q226, Q227, Q228, Q229, Q230, Q231, Q232, Q233, Q234, Q235, Q236, Q237, Q238, Q239, Q240, Q241, Q242, Q243, Q244, Q245, Q246, Q247, Q248, Q249, Q250, Q251, Q252, Q253, Q254, Q255, Q256, Q257, Q258, Q259, Q260, Q261, Q262, Q263, Q264, Q265, Q266, Q267, Q268, Q269, Q270, Q271, Q272, Q273, Q274, Q275, Q276, Q277, Q278, Q279, Q280, Q281, Q282, Q283, Q284, Q285, Q286, Q287, Q288, Q289, Q290, Q291, Q292, Q293, Q294, Q295, Q296, Q297, Q298, Q299, Q300, Q301, Q302, Q303, Q304, Q305, Q306, Q307, Q308, Q309, Q310, Q311, Q312, Q313, Q314, Q315, Q316, Q317, Q318, Q319, Q320, Q321, Q322, Q323, Q324, Q325, Q326, Q327, Q328, Q329, Q330, Q331, Q332, Q333, Q334, Q335, Q336, Q337, Q338, Q339, Q340, Q341, Q342, Q343, Q344, Q345, Q346, Q347, Q348, Q349, Q350, Q351, Q352, Q353, Q354, Q355, Q356, Q357, Q358, Q359, Q360, Q361, Q362, Q363, Q364, Q365, Q366, Q367, Q368, Q369, Q370, Q371, Q372, Q373, Q374, Q375, Q376, Q377, Q378, Q379, Q380, Q381, Q382, Q383, Q384, Q385, Q386, Q387, Q388, Q389, Q390, Q391, Q392, Q393, Q394, Q395, Q396, Q397, Q398, Q399, Q400, Q401, Q402, Q403, Q404, Q405, Q406, Q407, Q408, Q409, Q410, Q411, Q412, Q413, Q414, Q415, Q416, Q417, Q418, Q419, Q420, Q421, Q422, Q423, Q424, Q425, Q426, Q427, Q428, Q429, Q430, Q431, Q432, Q433, Q434, Q435, Q436, Q437, Q438, Q439, Q440, Q441, Q442, Q443, Q444, Q445, Q446, Q447, Q448, Q449, Q450, Q451, Q452, Q453, Q454, Q455, Q456, Q457, Q458, Q459, Q460, Q461, Q462, Q463, Q464, Q465, Q466, Q467, Q468, Q469, Q470, Q471, Q472, Q473, Q474, Q475, Q476, Q477, Q478, Q479, Q480, Q481, Q482, Q483, Q484, Q485, Q486, Q487, Q488, Q489, Q490, Q491, Q492, Q493, Q494, Q495, Q496, Q497, Q498, Q499, Q500, Q501, Q502, Q503, Q504, Q505, Q506, Q507, Q508, Q509, Q510, Q511, Q512, Q513, Q514, Q515, Q516, Q517, Q518, Q519, Q520, Q521, Q522, Q523, Q524, Q525, Q526, Q527, Q528, Q529, Q530, Q531, Q532, Q533, Q534, Q535, Q536, Q537, Q538, Q539, Q540, Q541, Q542, Q543, Q544, Q545, Q546, Q547, Q548, Q549, Q550, Q551, Q552, Q553, Q554, Q555, Q556, Q557, Q558, Q559, Q560, Q561, Q562, Q563, Q564, Q565, Q566, Q567, Q568, Q569, Q570, Q571, Q572, Q573, Q574, Q575, Q576, Q577, Q578, Q579, Q580, Q581, Q582, Q583, Q584, Q585, Q586, Q587, Q588, Q589, Q590, Q591, Q592, Q593, Q594, Q595, Q596, Q597, Q598, Q599, Q600, Q601, Q602, Q603, Q604, Q605, Q606, Q607, Q608, Q609, Q610, Q611, Q612, Q613, Q614, Q615, Q616, Q617, Q618, Q619, Q620, Q621, Q622, Q623, Q624, Q625, Q626, Q627, Q628, Q629, Q630, Q631, Q632, Q633, Q634, Q635, Q636, Q637, Q638, Q639, Q640, Q641, Q642, Q643, Q644, Q645, Q646, Q647, Q648, Q649, Q650, Q651, Q652, Q653, Q654, Q655, Q656, Q657, Q658, Q659, Q660, Q661, Q662, Q663, Q664, Q665, Q666, Q667, Q668, Q669, Q670, Q671, Q672, Q673, Q674, Q675, Q676, Q677, Q678, Q679, Q680, Q681, Q682, Q683, Q684, Q685, Q686, Q687, Q688, Q689, Q690, Q691, Q692, Q693, Q694, Q695, Q696, Q697, Q698, Q699, Q700, Q701, Q702, Q703, Q704, Q705, Q706, Q707, Q708, Q709, Q710, Q711, Q712, Q713, Q714, Q715, Q716, Q717, Q718, Q719, Q720, Q721, Q722, Q723, Q724, Q725, Q726, Q727, Q728, Q729, Q730, Q731, Q732, Q733, Q734, Q735, Q736, Q737, Q738, Q739, Q740, Q741, Q742, Q743, Q744, Q745, Q746, Q747, Q748, Q749, Q750, Q751, Q752, Q753, Q754, Q755, Q756, Q757, Q758, Q759, Q760, Q761, Q762, Q763, Q764, Q765, Q766, Q767, Q768, Q769, Q770, Q771, Q772, Q773, Q774, Q775, Q776, Q777, Q778, Q779, Q780, Q781, Q782, Q783, Q784, Q785, Q786, Q787, Q788, Q789, Q790, Q791, Q792, Q793, Q794, Q795, Q796, Q797, Q798, Q799, Q800, Q801, Q802, Q803, Q804, Q805, Q806, Q807, Q808, Q809, Q810, Q811, Q812, Q813, Q814, Q815, Q816, Q817, Q818, Q819, Q820, Q821, Q822, Q823, Q824, Q825, Q826, Q827, Q828, Q829, Q830, Q831, Q832, Q833, Q834, Q835, Q836, Q837, Q838, Q839, Q840, Q841, Q842, Q843, Q844, Q845, Q846, Q847, Q848, Q849, Q850, Q851, Q852, Q853, Q854, Q855, Q856, Q857, Q858, Q859, Q860, Q861, Q862, Q863, Q864, Q865, Q866, Q867, Q868, Q869, Q870, Q871, Q872, Q873, Q874, Q875, Q876, Q877, Q878, Q879, Q880, Q881, Q882, Q883, Q884, Q885, Q886, Q887, Q888, Q889, Q890, Q891, Q892, Q893, Q894, Q895, Q896, Q897, Q898, Q899, Q900, Q901, Q902, Q903, Q904, Q905, Q906, Q907, Q908, Q909, Q910, Q911, Q912, Q913, Q914, Q915, Q916, Q917, Q918, Q919, Q920, Q921, Q922, Q923, Q924, Q925, Q926, Q927, Q928, Q929, Q930, Q931, Q932, Q933, Q934, Q935, Q936, Q937, Q938, Q939, Q940, Q941, Q942, Q943, Q944, Q945, Q946, Q947, Q948, Q949, Q950, Q951, Q952, Q953, Q954, Q955, Q956, Q957, Q958, Q959, Q960, Q961, Q962, Q963, Q964, Q965, Q966, Q967, Q968, Q969, Q970, Q971, Q972, Q973, Q974, Q975, Q976, Q977, Q978, Q979, Q980, Q981, Q982, Q983, Q984, Q985, Q986, Q987, Q988, Q989, Q990, Q991, Q992, Q993, Q994, Q995, Q996, Q997, Q998, Q999, Q1000.
- ▲ ASSEMBLY PROCESSES & PROCEDURES TO CONFORM TO DANA WORKMANSHIP STANDARDS.
- ▲ SCHEMATIC REF TO 431009
- ▲ NOTES UNLESS OTHERWISE SPECIFIED

| | | | |
|-----------|--------|--------------|-----|
| PCB ASSY | | DIGITIZER | |
| SIZE CODE | REV NO | REV | REV |
| D | 21793 | 401609 | N |
| SCALE 2/1 | | SHEET 1 OF 1 | |



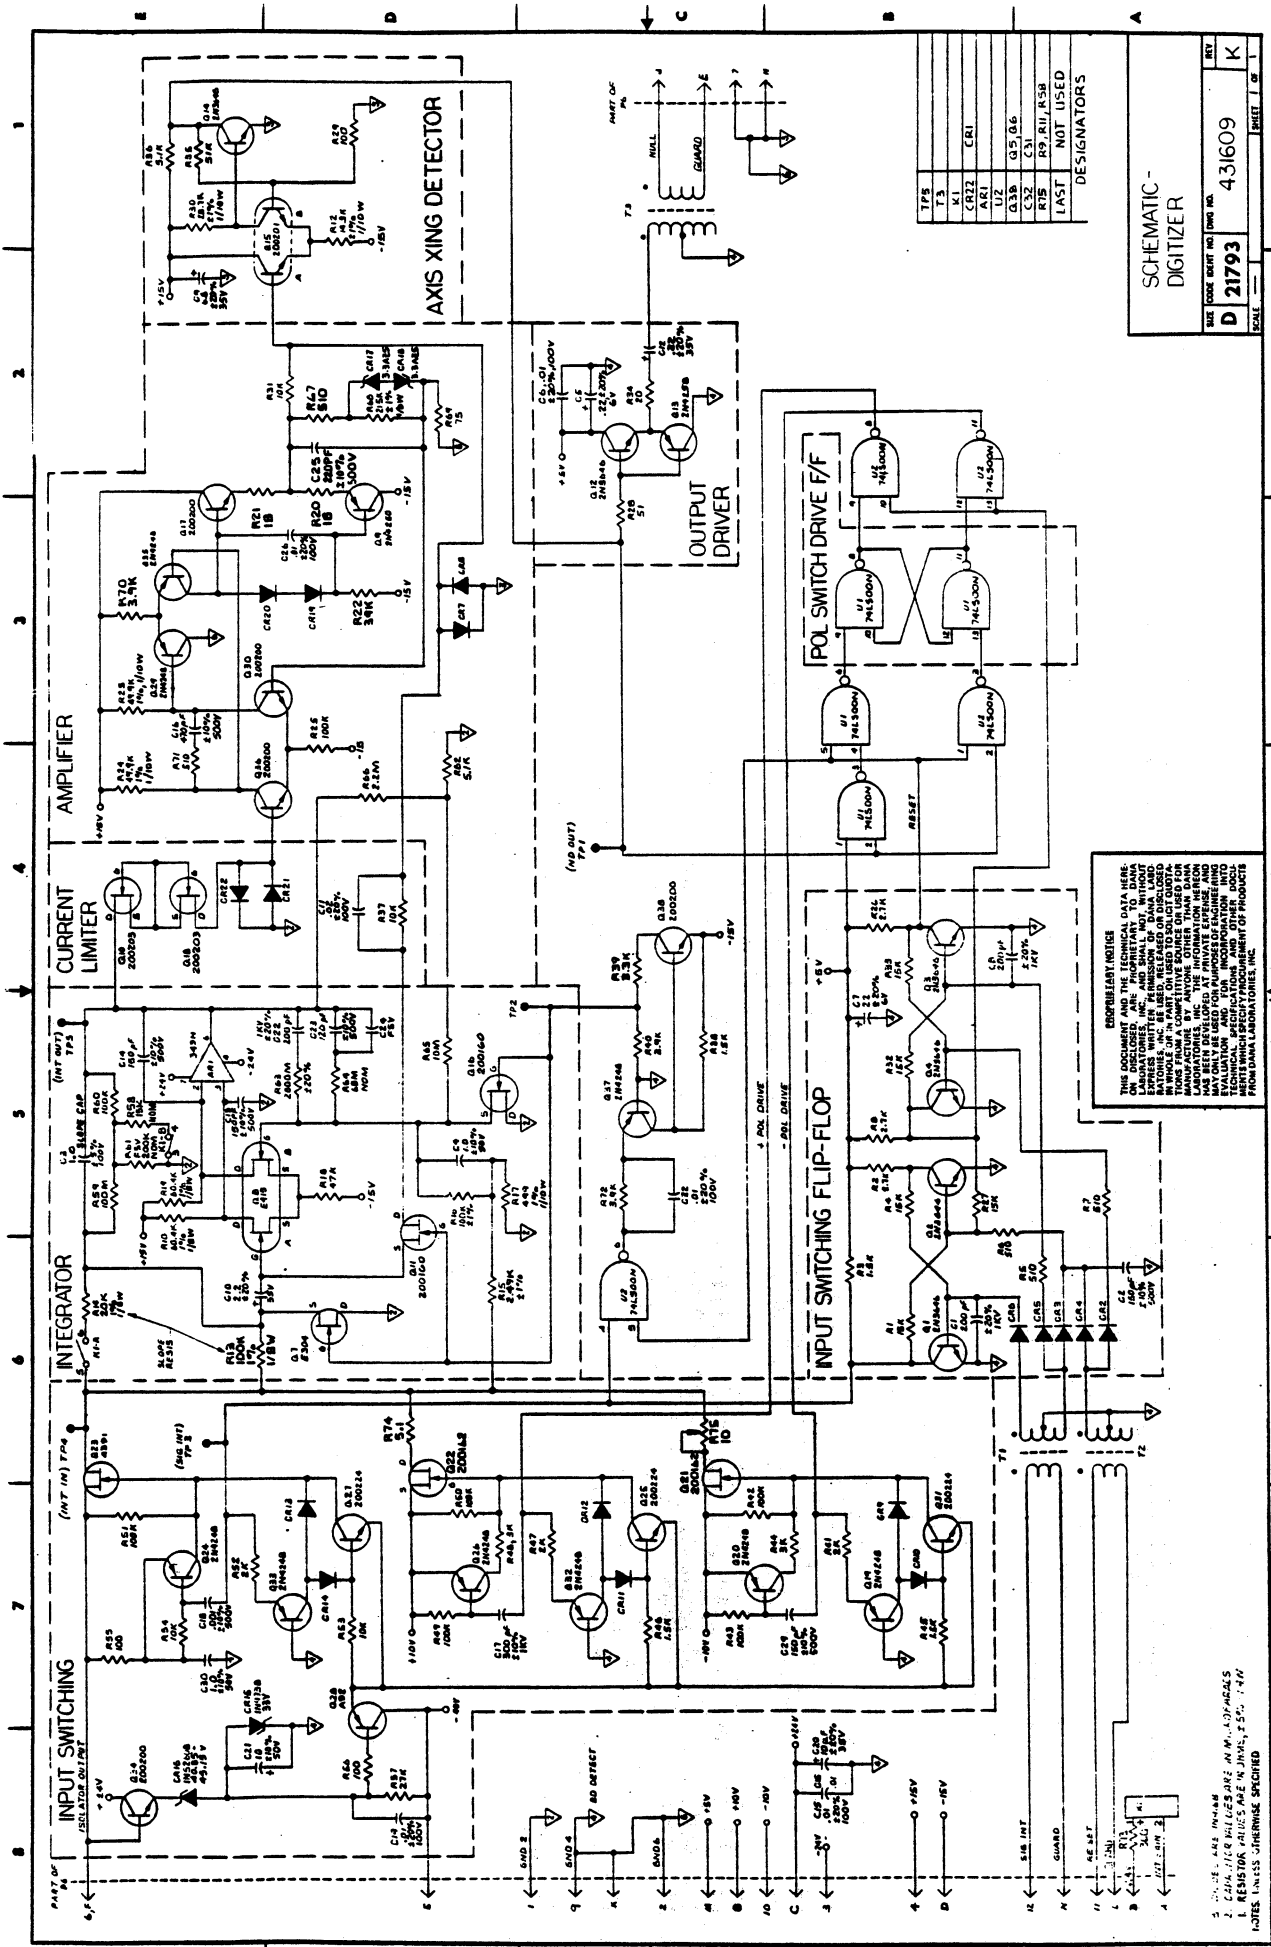

| TYPE | VALUE | DESIGNATORS |
|------|--------------|-------------|
| T3 | K1 | CRI |
| CR22 | ARI | |
| AR1 | U2 | |
| Q3B | Q5, Q6 | |
| Q3C | Q3 | |
| Q3E | Q7, Q11, Q19 | |
| Q3F | Q4 | |
| Q3G | Q2 | |
| Q3H | Q1 | |

SCHEMATIC -
DIGITIZER

DATE: **D 21793** DRAW NO: **431609**

REV: **K**



SCALE: **1**

SHEET: **1** OF **1**


DISCLAIMER NOTICE

THIS DOCUMENT AND THE DATA HEREIN ARE UNCLASSIFIED AND ARE NOT PROTECTIVE TO DATA RIGHTS. IT IS THE PROPERTY OF THE NATIONAL BUREAU OF STANDARDS AND IS LOANED TO YOU BY THE NATIONAL BUREAU OF STANDARDS. IT IS TO BE USED FOR RESEARCH AND DEVELOPMENT PURPOSES ONLY. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT PERMISSION IN WRITING FROM THE NATIONAL BUREAU OF STANDARDS. THE INFORMATION HEREIN IS PROVIDED AS IS AND WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE INFORMATION HEREIN IS NOT TO BE USED FOR ANY PURPOSES OTHER THAN THAT FOR WHICH IT WAS DEVELOPED AND IS NOT TO BE USED FOR ANY PURPOSES OTHER THAN THAT FOR WHICH IT WAS DEVELOPED AND IS NOT TO BE USED FOR ANY PURPOSES OTHER THAN THAT FOR WHICH IT WAS DEVELOPED.

- 1. CAPACITANCE VALUES ARE IN P.F. CAPACITORS
- 2. CAPACITANCE VALUES ARE IN P.F. CAPACITORS
- 3. RESISTOR VALUES ARE IN OHMS, UNLESS OTHERWISE SPECIFIED

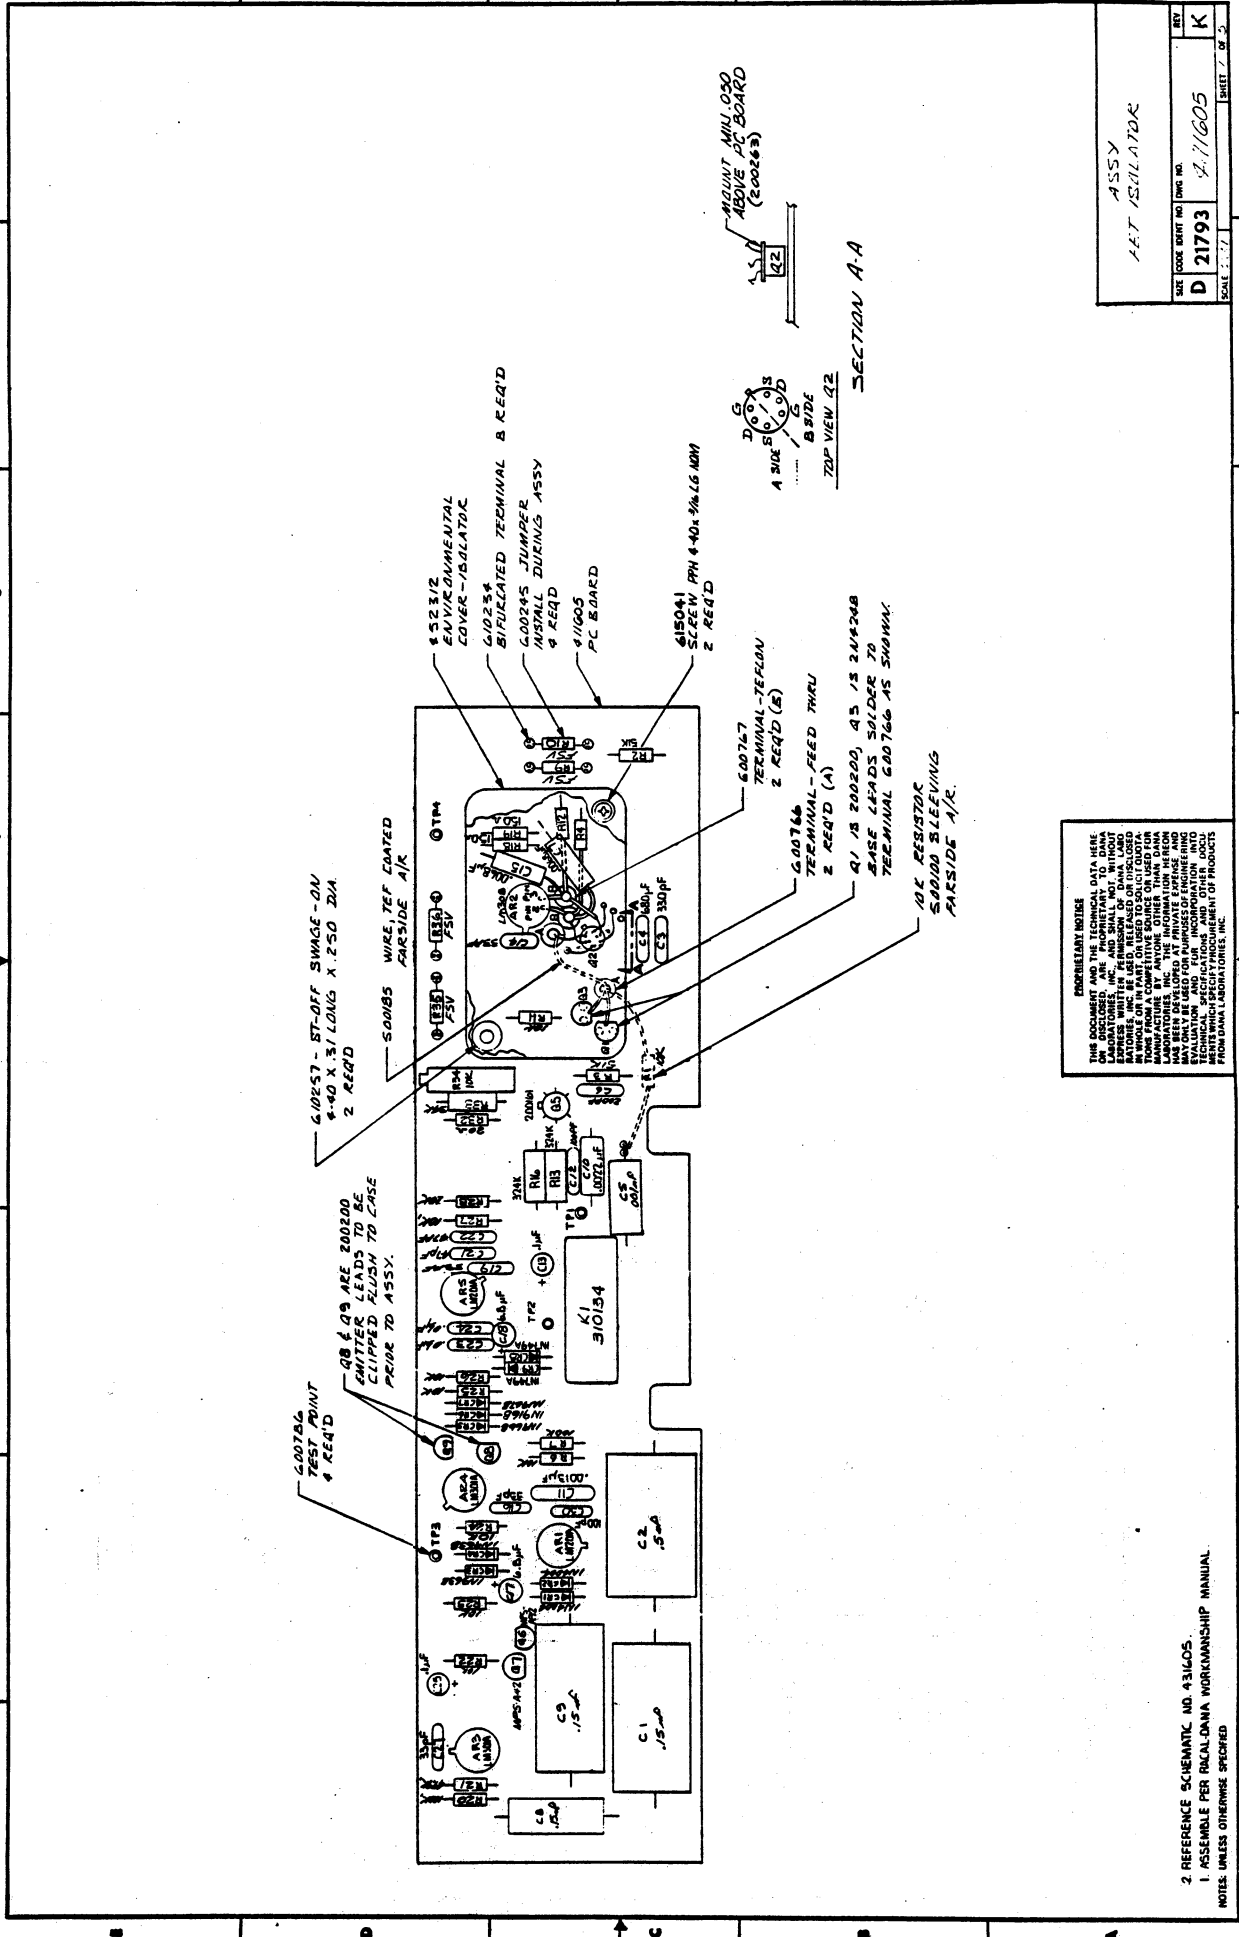


SECTION A-A



PROPRIETARY NOTICE
 THIS DOCUMENT AND ITS DATA ARE THE PROPERTY OF DANA LABORATORIES, INC. AND SHALL NOT, WITHOUT WRITTEN PERMISSION, BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. THIS DOCUMENT AND ITS DATA HAVE BEEN DEVELOPED AT PRIVATE EXPENSE AND ARE NOT BEING RELEASED FOR GENERAL EVALUATION AND USE. INCORPORATION INTO OTHER PRODUCTS WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. IS PROHIBITED.

| | |
|----------------------|--------------|
| ASSY AET ISOLATOR | |
| CODE | REV. NO. |
| D 21793 | 2.11605 |
| SCALE 1:1 | SHEET 7 OF 3 |

2 REFERENCE SCHEMATIC NO. 431605.
 1. ASSEMBLE PER RCA/DANA WORKMANSHIP MANUAL.
 NOTES UNLESS OTHERWISE SPECIFIED

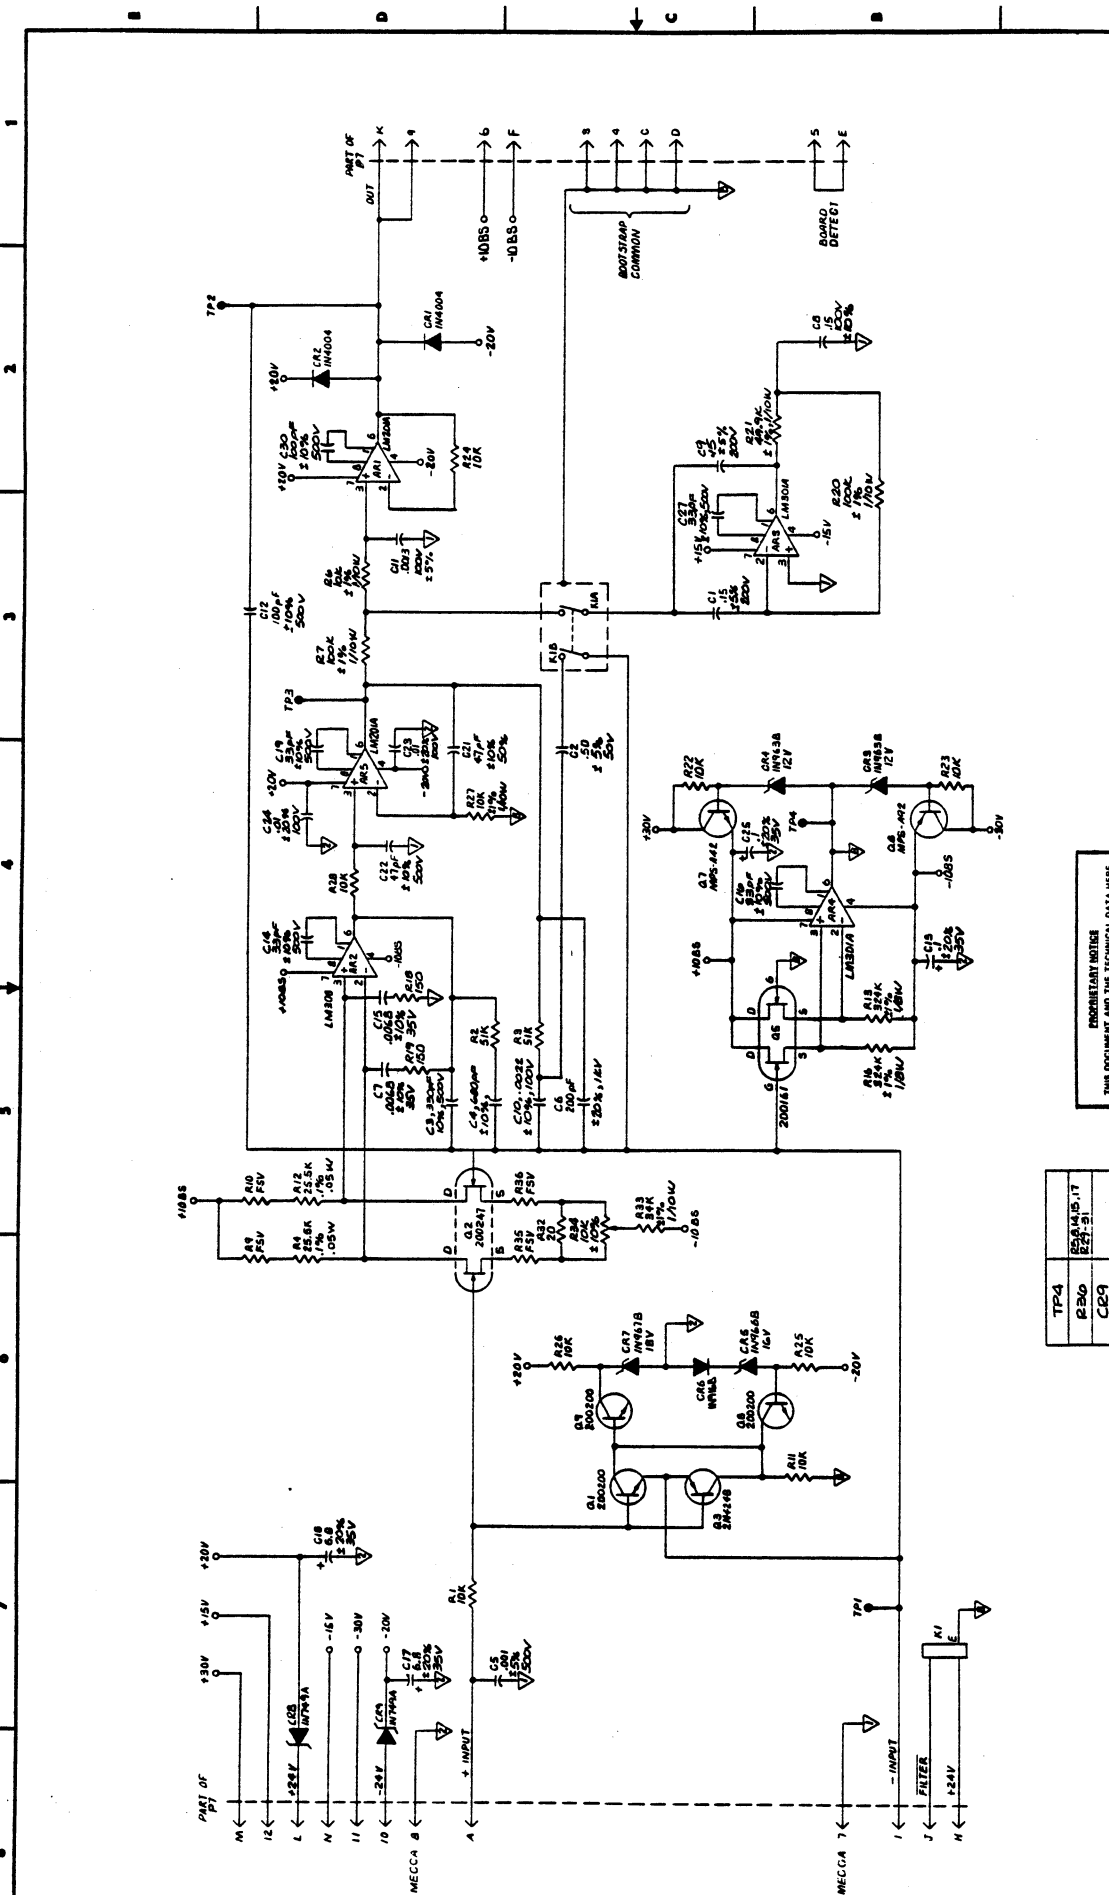

SCHEMATIC - ISOLATOR

SIZE CODE IDENT NO DRAWING NO. **D 21793** 431605


SCALE NONE SHEET 1 OF 1

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE THE PROPERTY OF DANA LABORATORIES, INC. AND SHALL NOT BE DISCLOSED OR REPRODUCED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS OR CONTRACTS FOR THE MANUFACTURE OF ANY PRODUCT OR SERVICE. THIS DOCUMENT HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND IS NOT TO BE USED FOR ANY PURPOSES OF ENGINEERING OR RESEARCH OR FOR THE DEVELOPMENT OF OTHER TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC.

| | |
|----------------------------------|--------|
| TP4 | 200187 |
| R20 | 200187 |
| CE9 | 200187 |
| Q9 | 200187 |
| K1 | 200187 |
| A25 | 200187 |
| A25 | 200187 |
| LAST USED / NOT USED DESIGNATORS | |

2. CAPACITORS ARE IN MICROFARADS.
 3. ALL RESISTORS IN OHMS ± 5%, 1/4 WATT.
 NOTES UNLESS OTHERWISE SPECIFIED

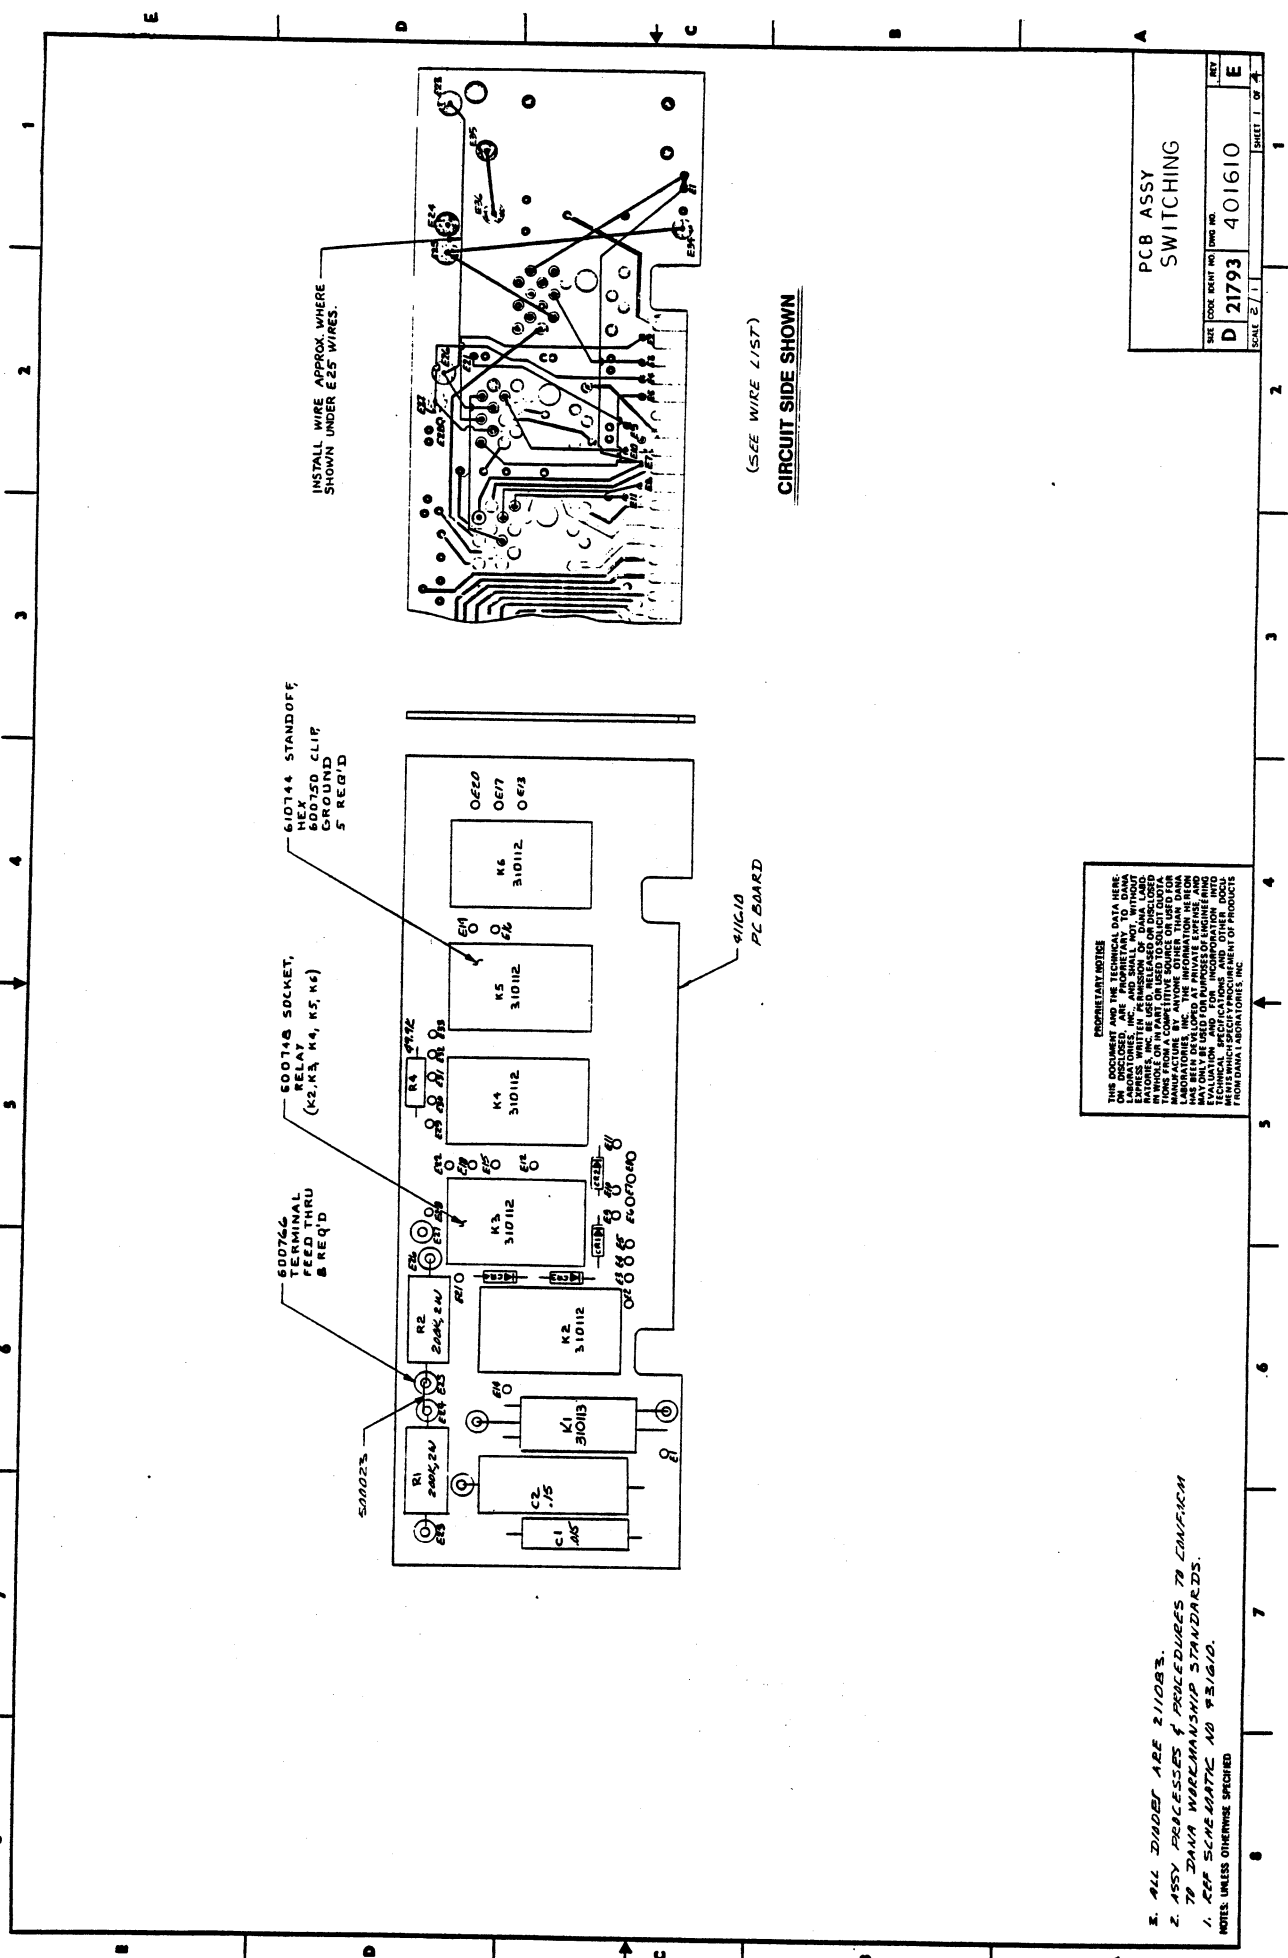


(SEE WIRE LIST)
CIRCUIT SIDE SHOWN

| | |
|--------------------|---------|
| PCB ASSY SWITCHING | |
| REV | E |
| DATE | 401610 |
| SCALE | 2/1 |
| DWG NO | D 21793 |
| SHEET | 1 OF 2 |

DISSEMINATION NOTICE
 THIS DOCUMENT AND THE INFORMATION CONTAINED HEREIN IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. IT IS THE POLICY OF THE NATIONAL ARCHIVES AND RECORDS ADMINISTRATION TO MAKE ALL INFORMATION CONTAINED HEREIN AVAILABLE TO THE PUBLIC UNLESS INDICATED OTHERWISE. FOR MORE INFORMATION CONTACT THE NATIONAL ARCHIVES AT COLLEGE PARK, MARYLAND 20740-6001. (301) 837-1100. WWW.NATIONALARCHIVES.GOV

1. ALL DIMENSIONS ARE 2/1000".
 2. ASSY PROCESSES & PROCEDURES TO COMPLY WITH DANA WIREMANSHIP STANDARDS.
 3. REF SCHEDULE NO 181610.
- NOTES UNLESS OTHERWISE SPECIFIED

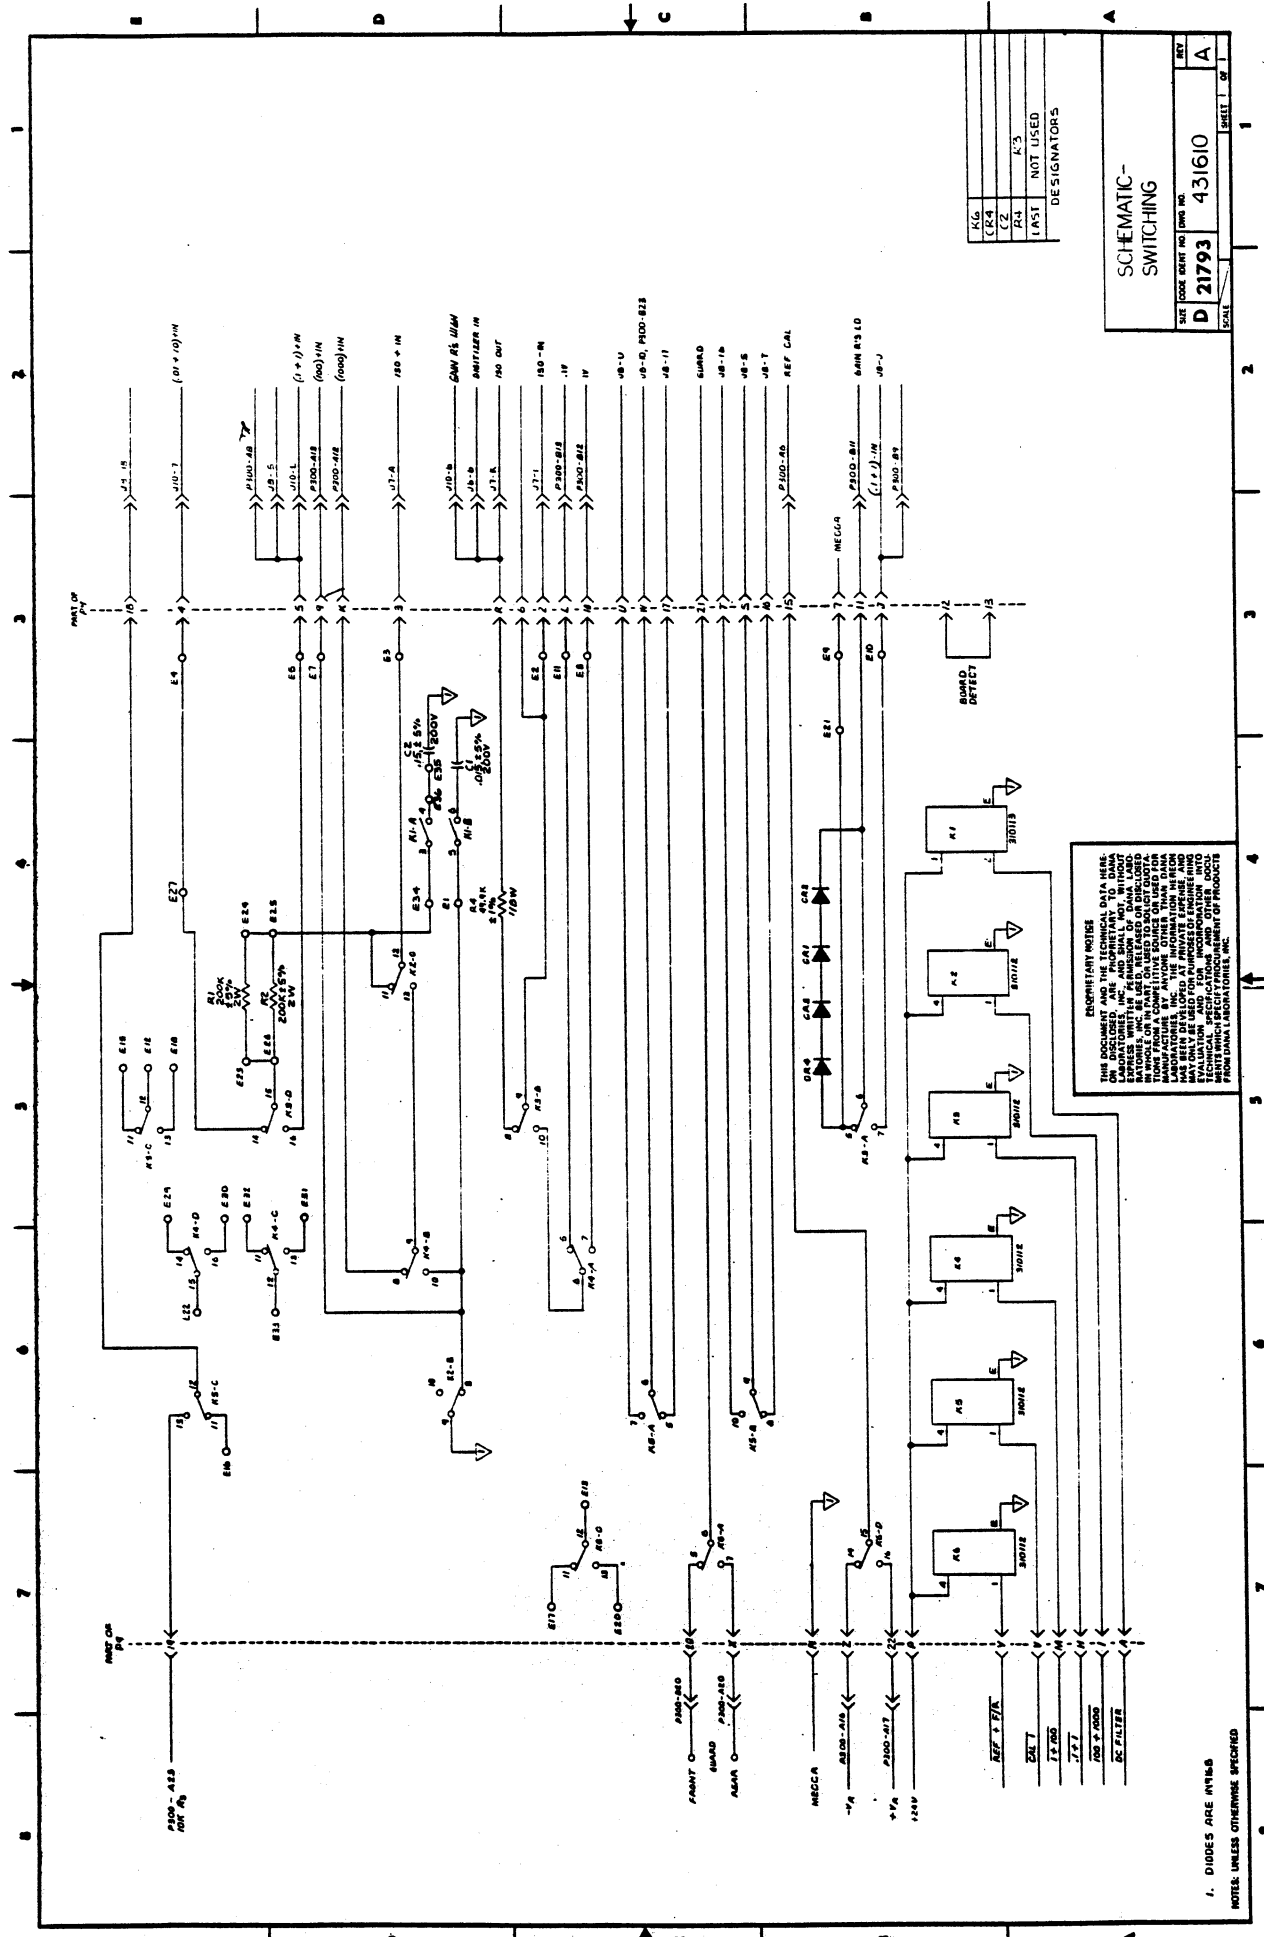

| DESIGNATORS | |
|-------------|----------|
| R.G. | |
| CR-4 | |
| CZ | K-3 |
| LAST | NOT USED |


**SCHEMATIC-
SWITCHING**

SIZE (CODE) DRAWING NO. (FORM NO.)
D 21793 431610

SCALE SHEET 1 OF 1

EXEMPT NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREON ARE UNCLASSIFIED AND ARE RELEASED TO THE PUBLIC BY THE NATIONAL ARCHIVES AND RECORDS ADMINISTRATION. ANY REPRODUCTION OF THIS DOCUMENT IS UNLIMITED. THIS INFORMATION IS BEING RELEASED FOR YOUR INFORMATION AND FOR YOUR USE IN YOUR EVALUATION AND FOR IMPROVEMENT OF YOUR PRODUCTS. THE INFORMATION IS BEING RELEASED FOR YOUR INFORMATION AND FOR YOUR USE IN YOUR EVALUATION AND FOR IMPROVEMENT OF YOUR PRODUCTS. THE INFORMATION IS BEING RELEASED FOR YOUR INFORMATION AND FOR YOUR USE IN YOUR EVALUATION AND FOR IMPROVEMENT OF YOUR PRODUCTS. THE INFORMATION IS BEING RELEASED FOR YOUR INFORMATION AND FOR YOUR USE IN YOUR EVALUATION AND FOR IMPROVEMENT OF YOUR PRODUCTS. THE INFORMATION IS BEING RELEASED FOR YOUR INFORMATION AND FOR YOUR USE IN YOUR EVALUATION AND FOR IMPROVEMENT OF YOUR PRODUCTS.

1. DIODES ARE 1N4004
 NOTE: UNLESS OTHERWISE SPECIFIED

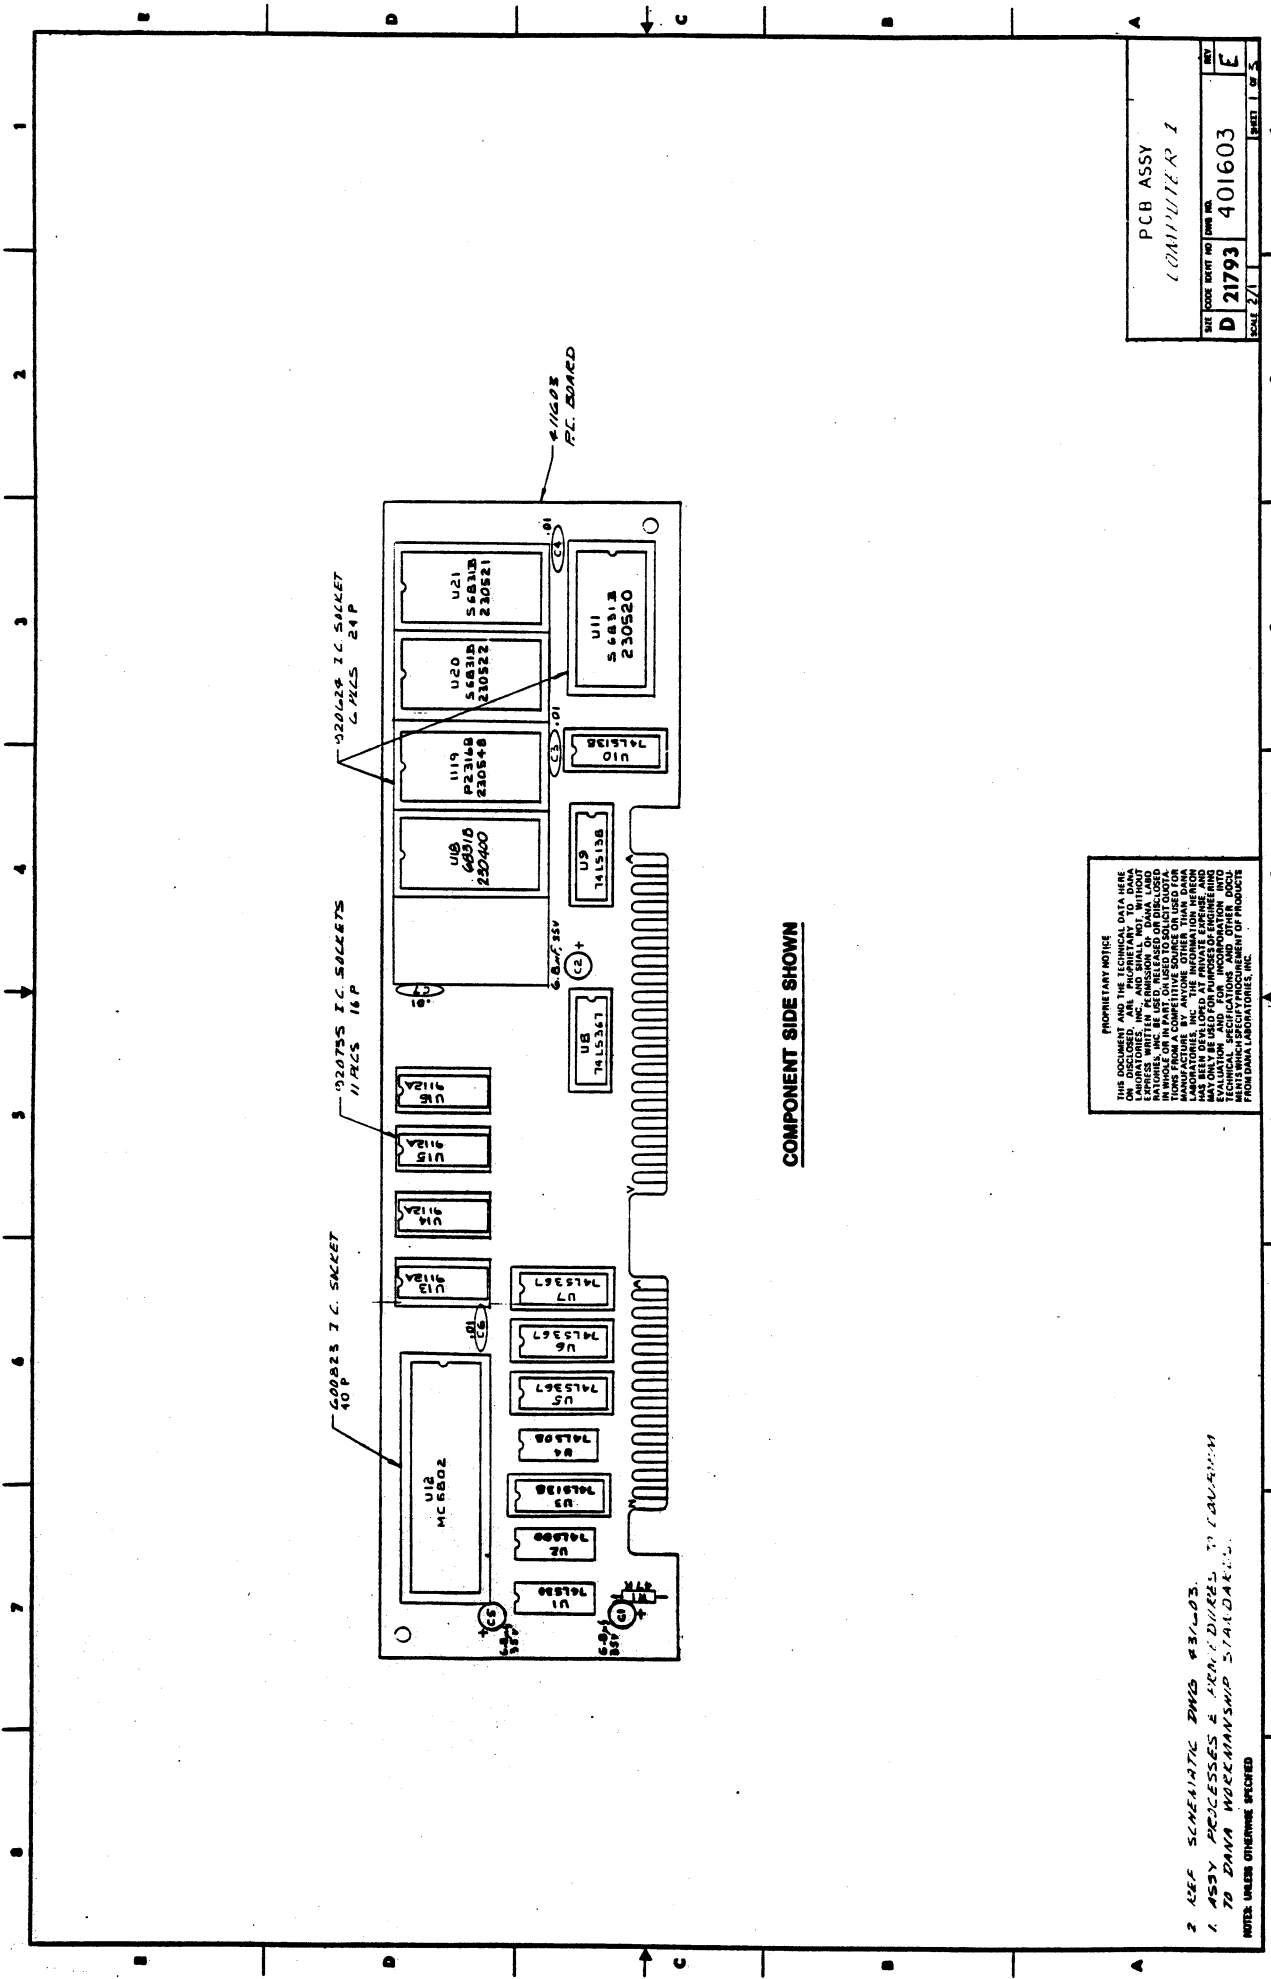


| | | |
|------------|---------|-----------------|
| PCB ASSY | | REV E |
| COMPUTER 1 | | |
| SHEET | D 21793 | REV |
| OF | 401603 | E |
| PAGE 2/1 | | SHEET 1 OF 5 |

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO DANA EXPRESS. WRITTEN PERMISSION BY DANA EXPRESS IS REQUIRED TO REPRODUCE OR TRANSMIT IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. THIS DOCUMENT IS THE PROPERTY OF DANA EXPRESS AND IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED HEREIN. IT IS NOT TO BE USED FOR ANY OTHER PURPOSES WITHOUT THE WRITTEN PERMISSION OF DANA EXPRESS. TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS ARE AVAILABLE FROM DANA EXPRESS, INC.

2 SEE SCHEMATIC DWG #3/103.
 1 ASSY PROCESSES & PERFORMED TO DRAWING TO DANA WORKMANSHIP STANDARD.
 NOTES UNLESS OTHERWISE SPECIFIED

COMPONENT SIDE SHOWN

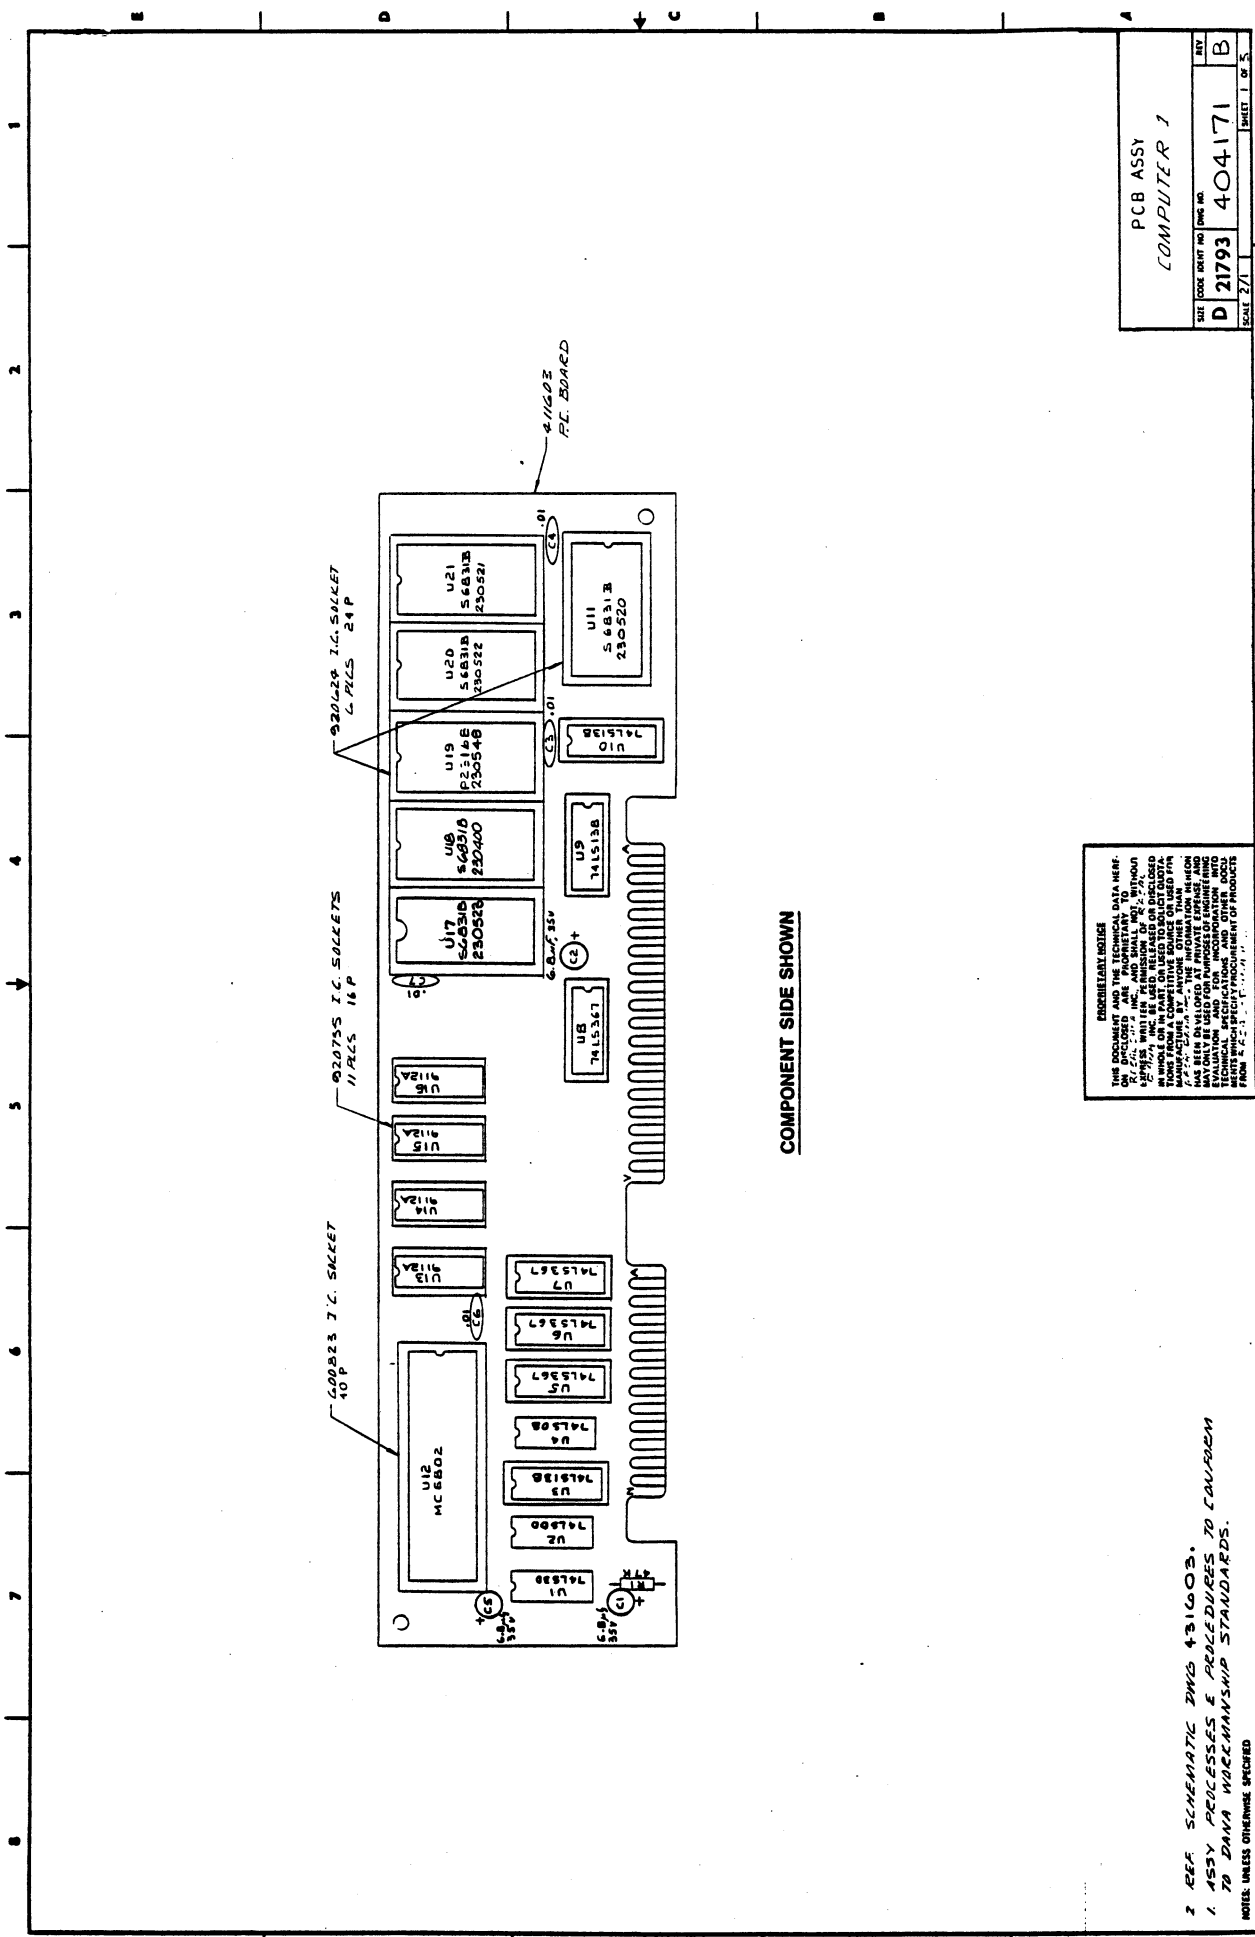



| | | | |
|-----------|-------|--------------|-----|
| PCB ASSY | | COMPUTER 1 | |
| SIZE | CODE | REV | REV |
| D | 21793 | 404171 | B |
| SCALE 271 | | SHEET 1 OF 5 | |

EXHIBIT NOTES
 THE PROGRAMS ARE PROPRIETARY TO
 DISCLOSED TO ANY OTHER PARTY TO
 ADDRESS WITHIN THE COMPANY OR
 100% OF THE COMPANY. THE INFORMATION IS
 TO BE USED FOR THE PURPOSES OF THE
 EVALUATION AND FOR THE PURPOSES OF THE
 DESIGN WHICH IS THE PROPERTY OF THE COMPANY.

COMPONENT SIDE SHOWN

2 REF SCHEMATIC DWG 431603.
 1 ASSY PROCESSES & PROCEDURES TO CONFORM
 TO DANA WORKMANSHIP STANDARDS.
 NOTES UNLESS OTHERWISE SPECIFIED



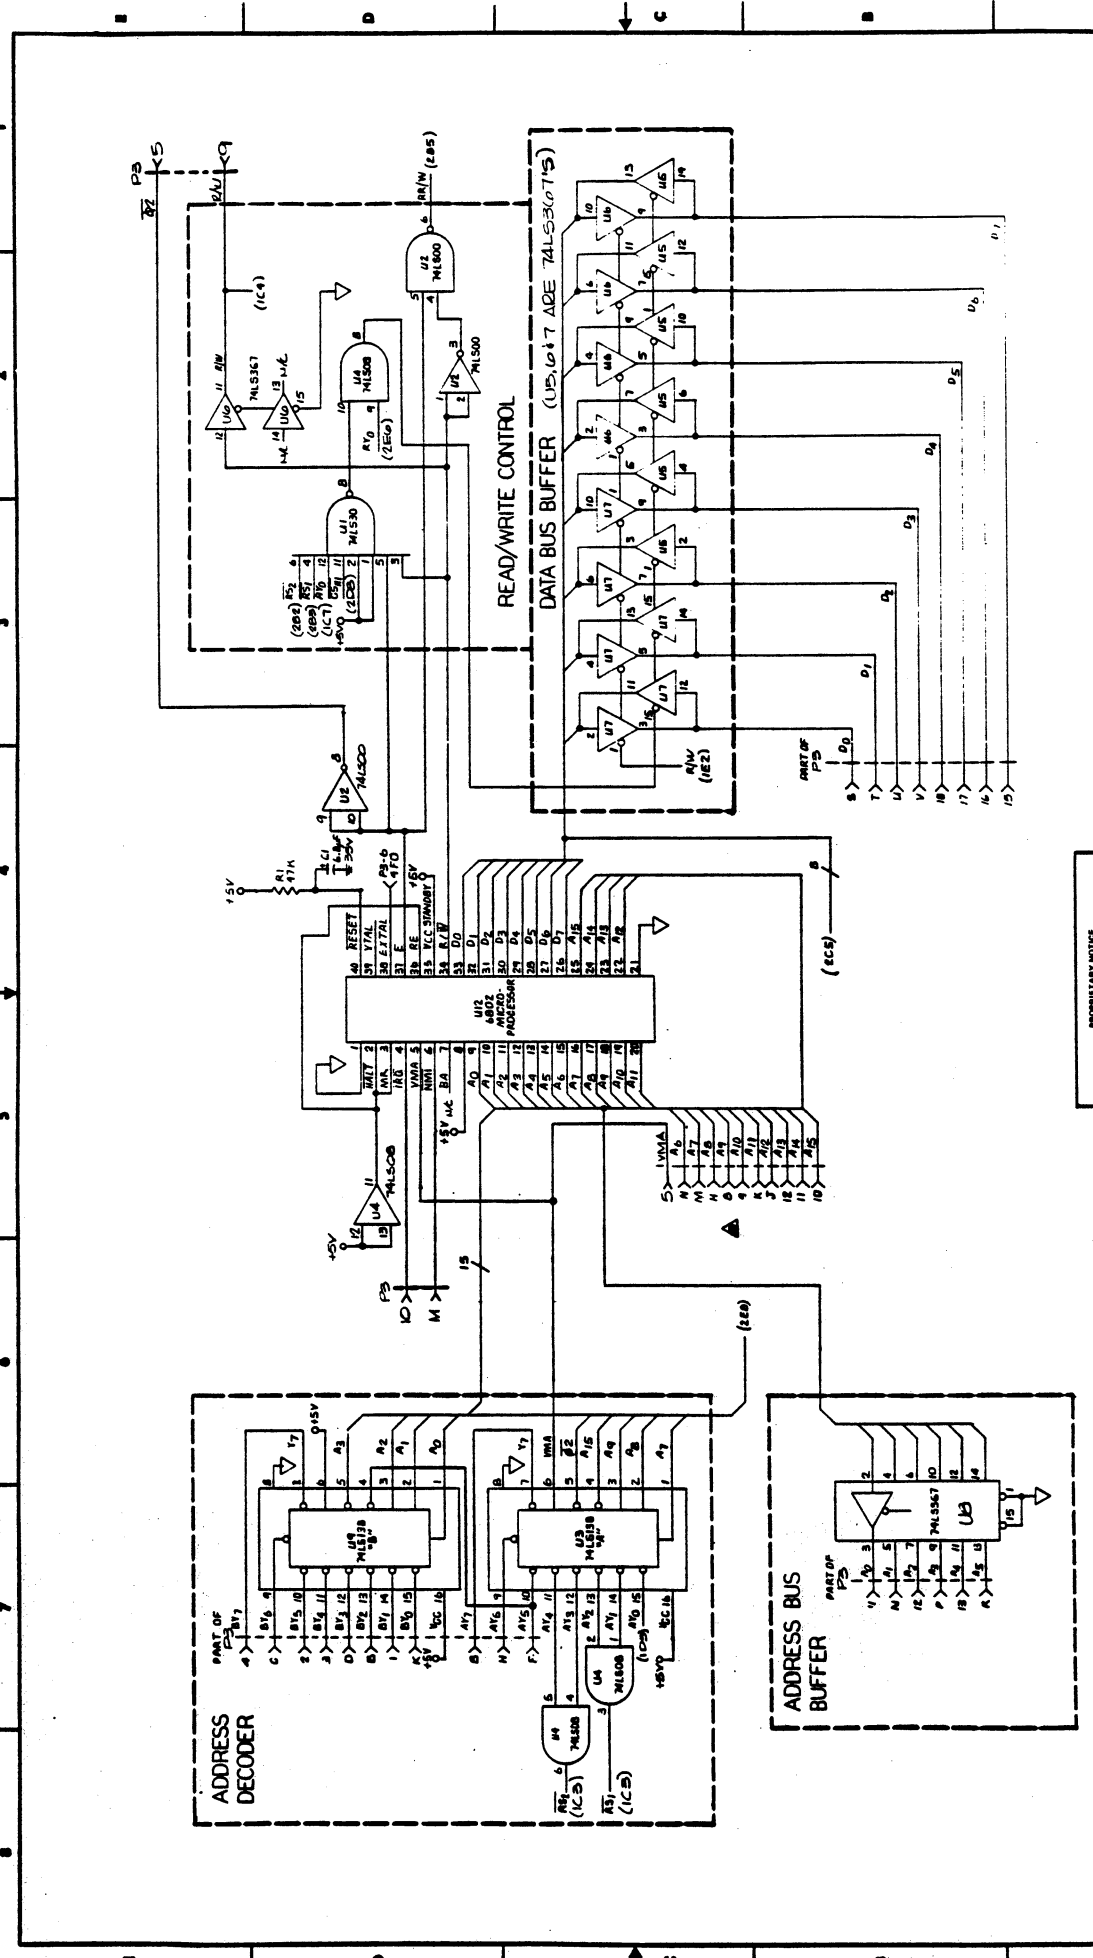

SCHMATIC -
COMPUTER I

DATE CODE DATE REV. NO. PART NO. REV. NO.
D 21793 431603 C


PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. THIS DOCUMENT IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. THIS DOCUMENT IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. THIS DOCUMENT IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE.

| | |
|------|--------------|
| U21 | LOT 02 MD |
| E1 | DESIGNATIONS |
| C-7 | |
| LAST | |

U1 USED WITH OPTIONS 90 & 9A ONLY.
CONNECTOR USED ONLY FOR SPECIALS.
CAPACITORS ARE IN MF, 100V, ±20%.
RESISTORS ARE IN OHMS, 1/8W, 1/4W.
NOTE: VALUES OTHERWISE SPECIFIED


1 of 2

242

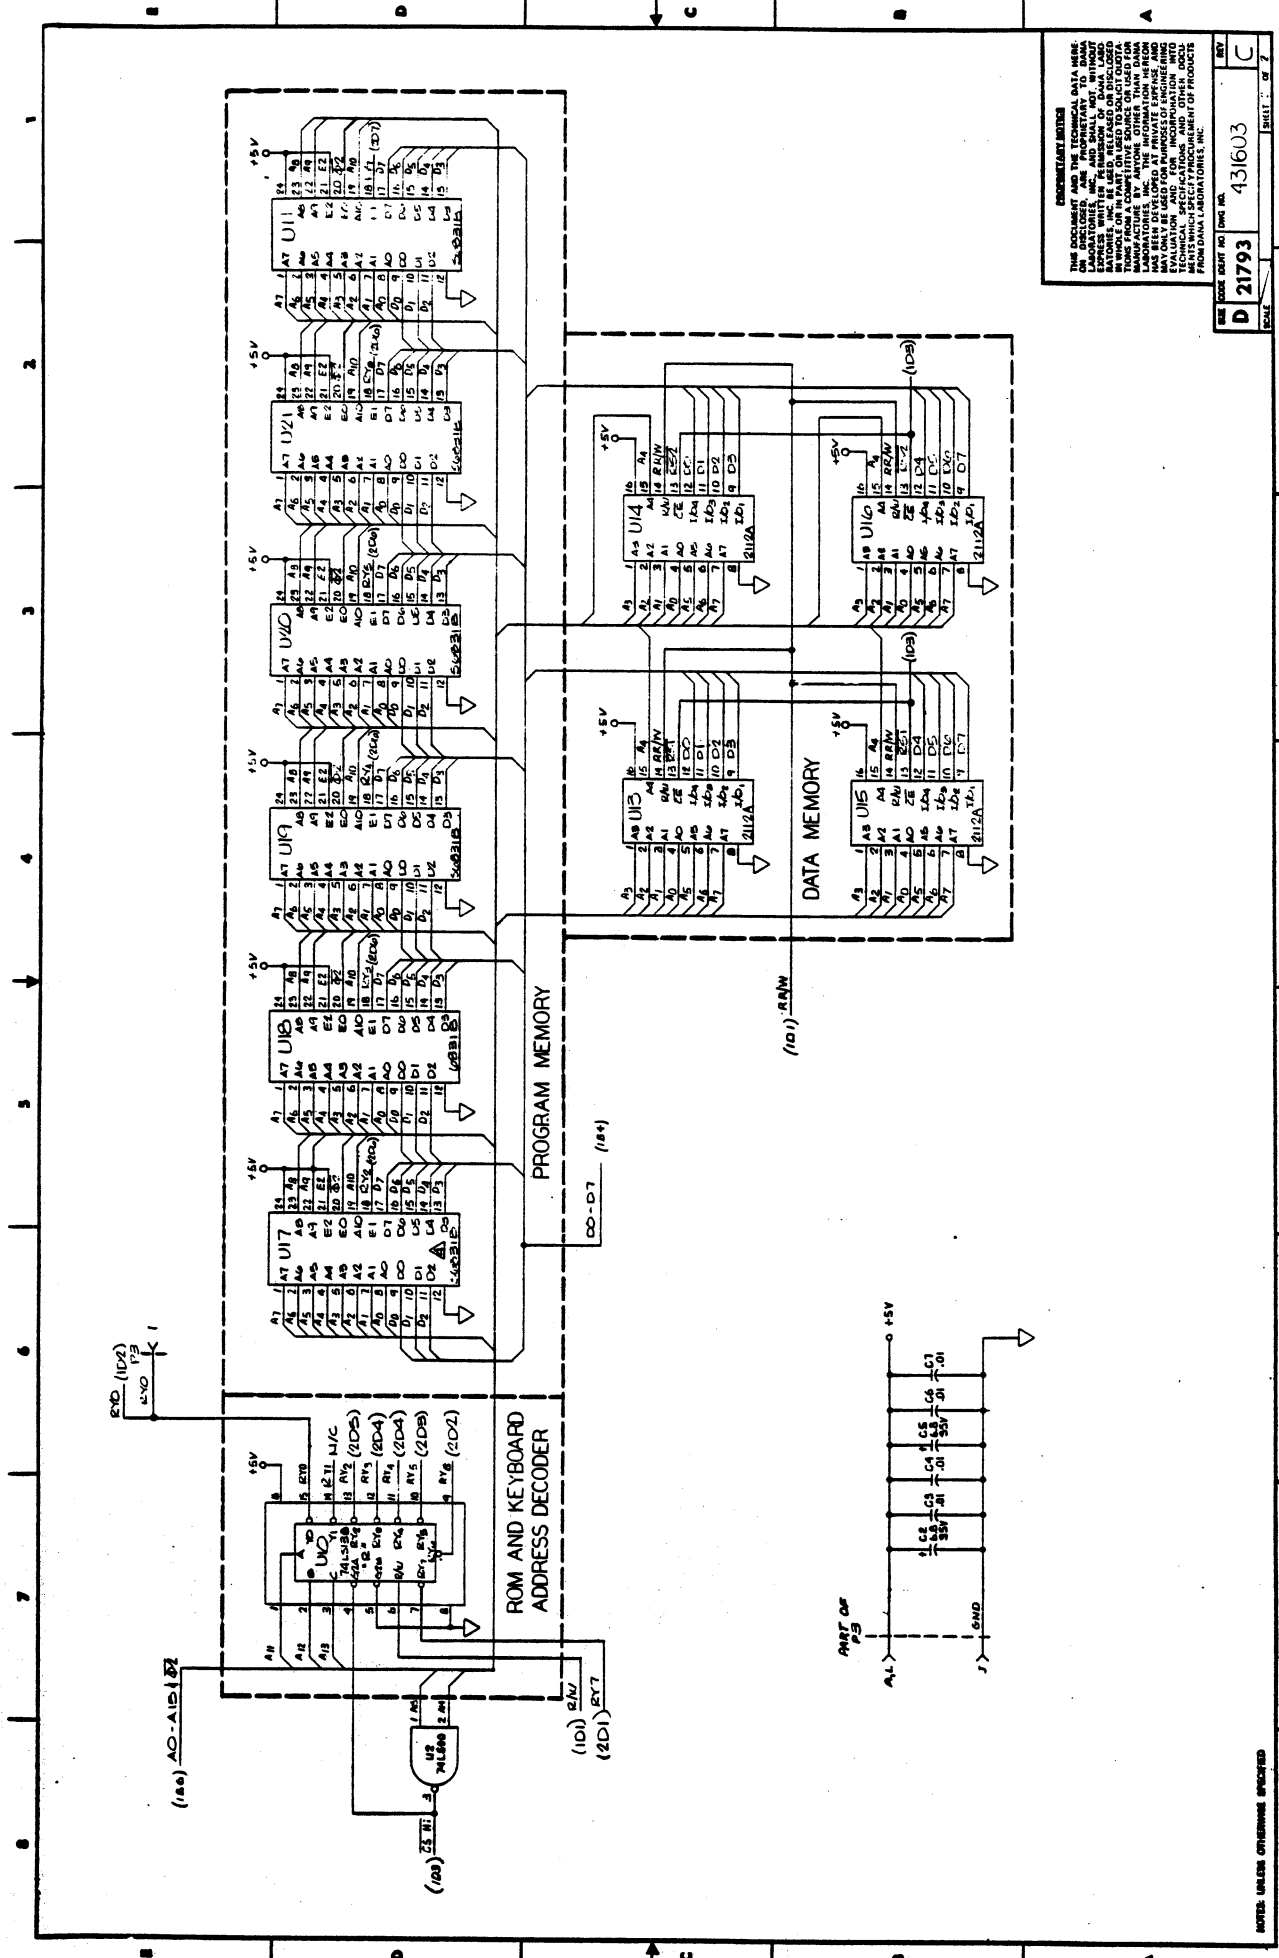

DISSEMINATION NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREON CONTAINED THEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE AND SHALL NOT, WITHOUT AUTHORITY, BE RELEASED OR DISCLOSED TO ANY OTHER PERSON OR ORGANIZATION. THIS DOCUMENT IS THE PROPERTY OF DANA LABORATORIES, INC. AND IS LOANED TO YOU BY THE MANUFACTURE BY ANYONE OTHER THAN DANA LABORATORIES, INC. IT IS TO BE RETURNED TO DANA LABORATORIES, INC. UPON COMPLETION OF EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS OF PRODUCTS FROM DANA LABORATORIES, INC.

FORM 1041-101 (REV. 10-65)
 D 21793 431603
 SHEET 1 OF 7

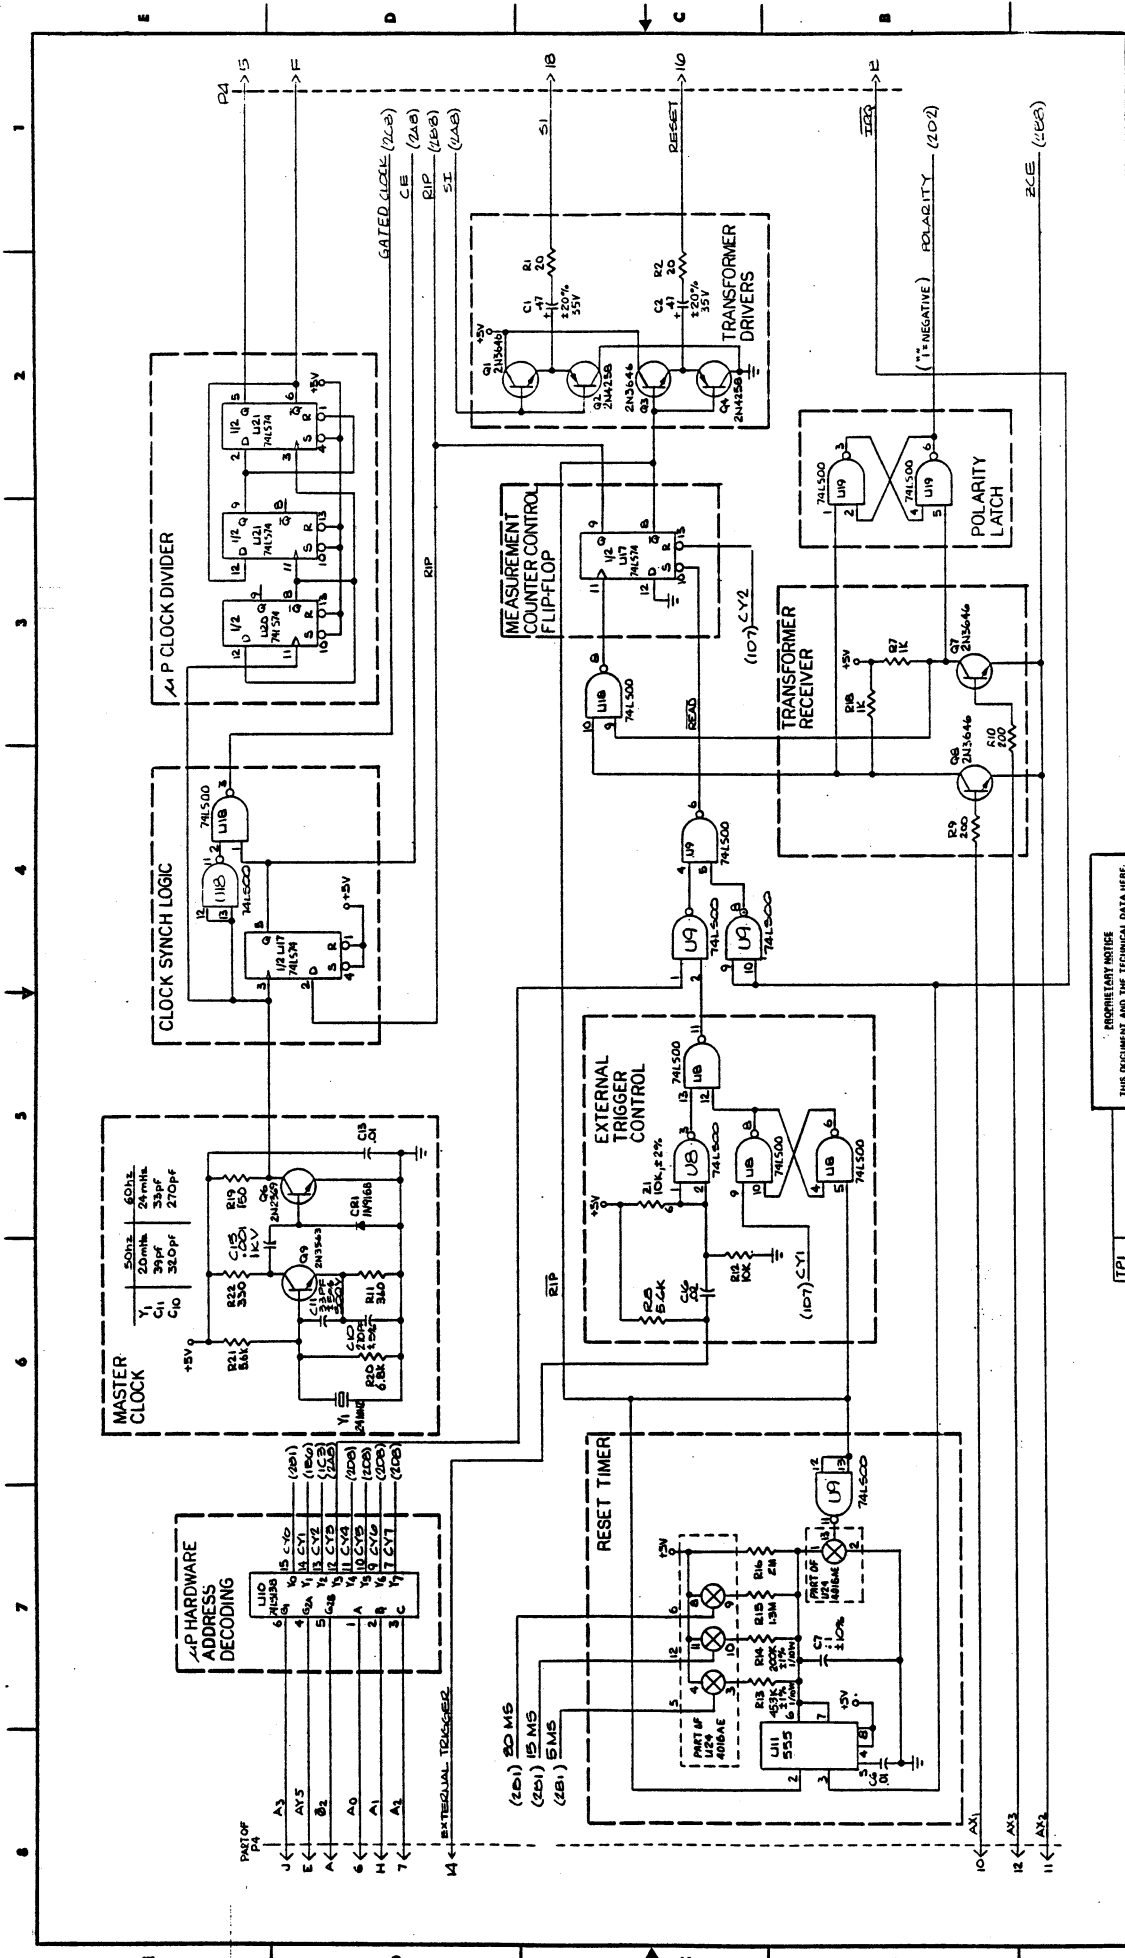

SCHEMATIC- CONTROL LOGIC


| | | | |
|------|---------------|--------|-----|
| SIZE | BOOK IDENT NO | DWG NO | REV |
| D | 21793 | 431604 | D |

SCALE SHEET 1 OF 2

| DESIGNATORS | NOT USED |
|-------------|----------|
| U1 | |
| U2 | |
| U3 | |
| U4 | |
| U5 | |
| U6 | |
| U7 | |
| U8 | |
| U9 | |
| U10 | |
| U11 | |
| U12 | |
| U13 | |
| U14 | |
| U15 | |
| U16 | |
| U17 | |
| U18 | |
| U19 | |
| U20 | |
| U21 | |
| U22 | |
| U23 | |
| U24 | |
| U25 | |
| U26 | |
| U27 | |
| U28 | |
| U29 | |
| U30 | |
| U31 | |
| U32 | |
| U33 | |
| U34 | |
| U35 | |
| U36 | |
| U37 | |
| U38 | |
| U39 | |
| U40 | |
| U41 | |
| U42 | |
| U43 | |
| U44 | |
| U45 | |
| U46 | |
| U47 | |
| U48 | |
| U49 | |
| U50 | |
| U51 | |
| U52 | |
| U53 | |
| U54 | |
| U55 | |
| U56 | |
| U57 | |
| U58 | |
| U59 | |
| U60 | |
| U61 | |
| U62 | |
| U63 | |
| U64 | |
| U65 | |
| U66 | |
| U67 | |
| U68 | |
| U69 | |
| U70 | |
| U71 | |
| U72 | |
| U73 | |
| U74 | |
| U75 | |
| U76 | |
| U77 | |
| U78 | |
| U79 | |
| U80 | |
| U81 | |
| U82 | |
| U83 | |
| U84 | |
| U85 | |
| U86 | |
| U87 | |
| U88 | |
| U89 | |
| U90 | |
| U91 | |
| U92 | |
| U93 | |
| U94 | |
| U95 | |
| U96 | |
| U97 | |
| U98 | |
| U99 | |
| U100 | |

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE DATA HEREON ARE PROPRIETARY TO DATA LABORATORIES, INC. AND ARE NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF DATA LABORATORIES, INC. THIS DOCUMENT IS THE PROPERTY OF DATA LABORATORIES, INC. THE INFORMATION HEREON MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND TESTING OF EQUIPMENT AND PRODUCTS WHICH SPECIFY REQUIREMENT OF PRODUCTS FROM DATA LABORATORIES, INC.

2 CAPACITOR VALUES ARE IN MICROFARADS ±20%, 100V
 1 RESISTOR VALUES ARE IN OHMS ±3%, 1/4W
 NOTES UNLESS OTHERWISE SPECIFIED

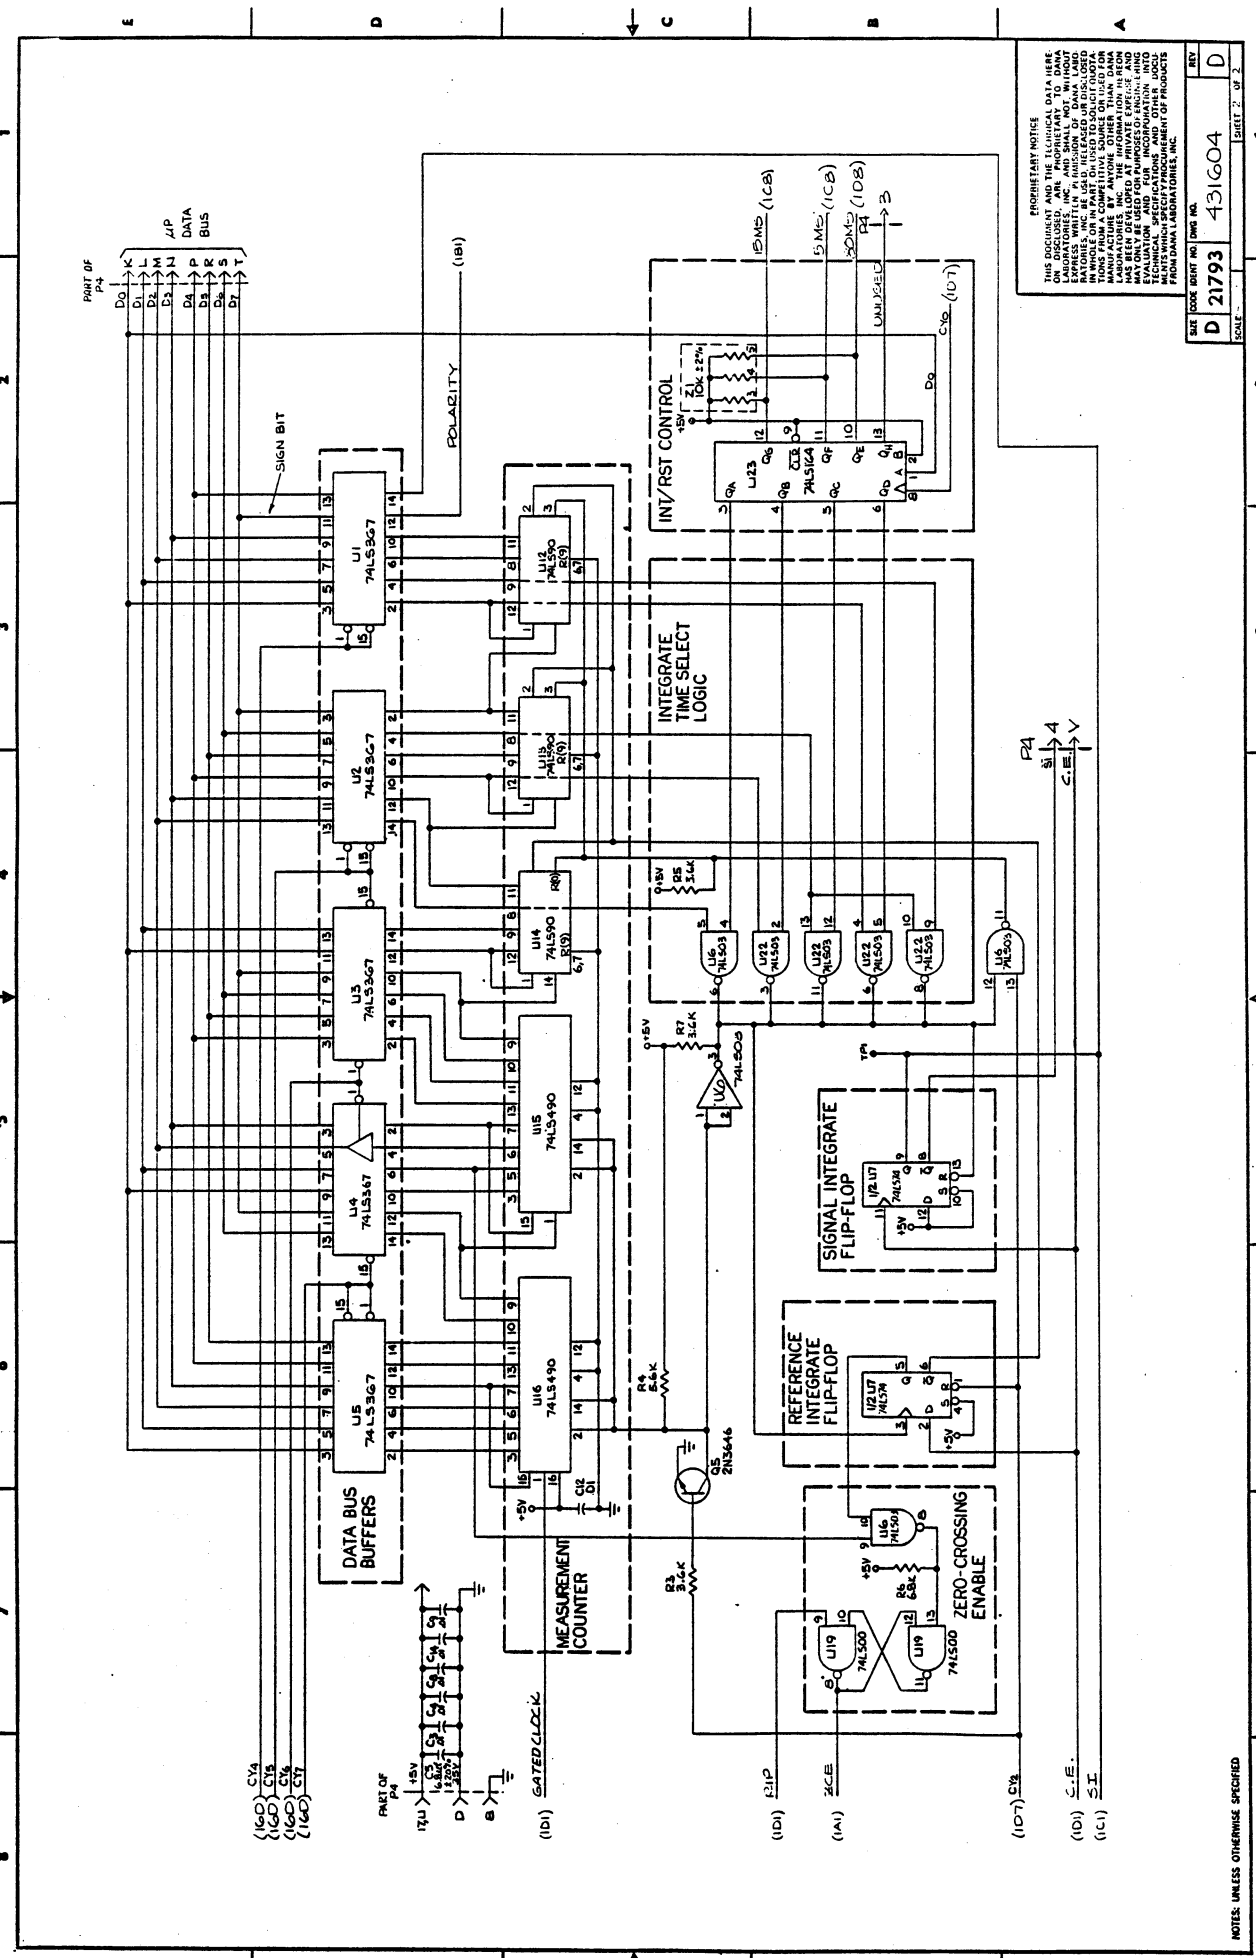


PROPRIETARY NOTICE
 THIS DOCUMENT AND THE ELECTRICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO DANVA EXPRESS. WITHOUT PERMISSION OF DANVA EXPRESS, NO PART OF THIS DOCUMENT IS TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. DANVA EXPRESS IS NOT RESPONSIBLE FOR ANY REPRODUCTION OR TRANSMISSION OF THIS DOCUMENT BY ANYONE OTHER THAN DANVA LABORATORIES. THE INFORMATION IS FROM DANVA LABORATORIES AND IS NOT TO BE USED FOR PURPOSES OF ENGINEERING, TECHNICAL SPECIFICATIONS, AND OTHER DOCUMENTS WITHOUT THE WRITTEN PERMISSION OF DANVA LABORATORIES, INC.

SIZE CODE BENT NO 046 NO
D 21793 431604
 SCALE SHEET 2 OF 2

1 2 3 4 5 6 7 8

A B C D E

NOTES: UNLESS OTHERWISE SPECIFIED

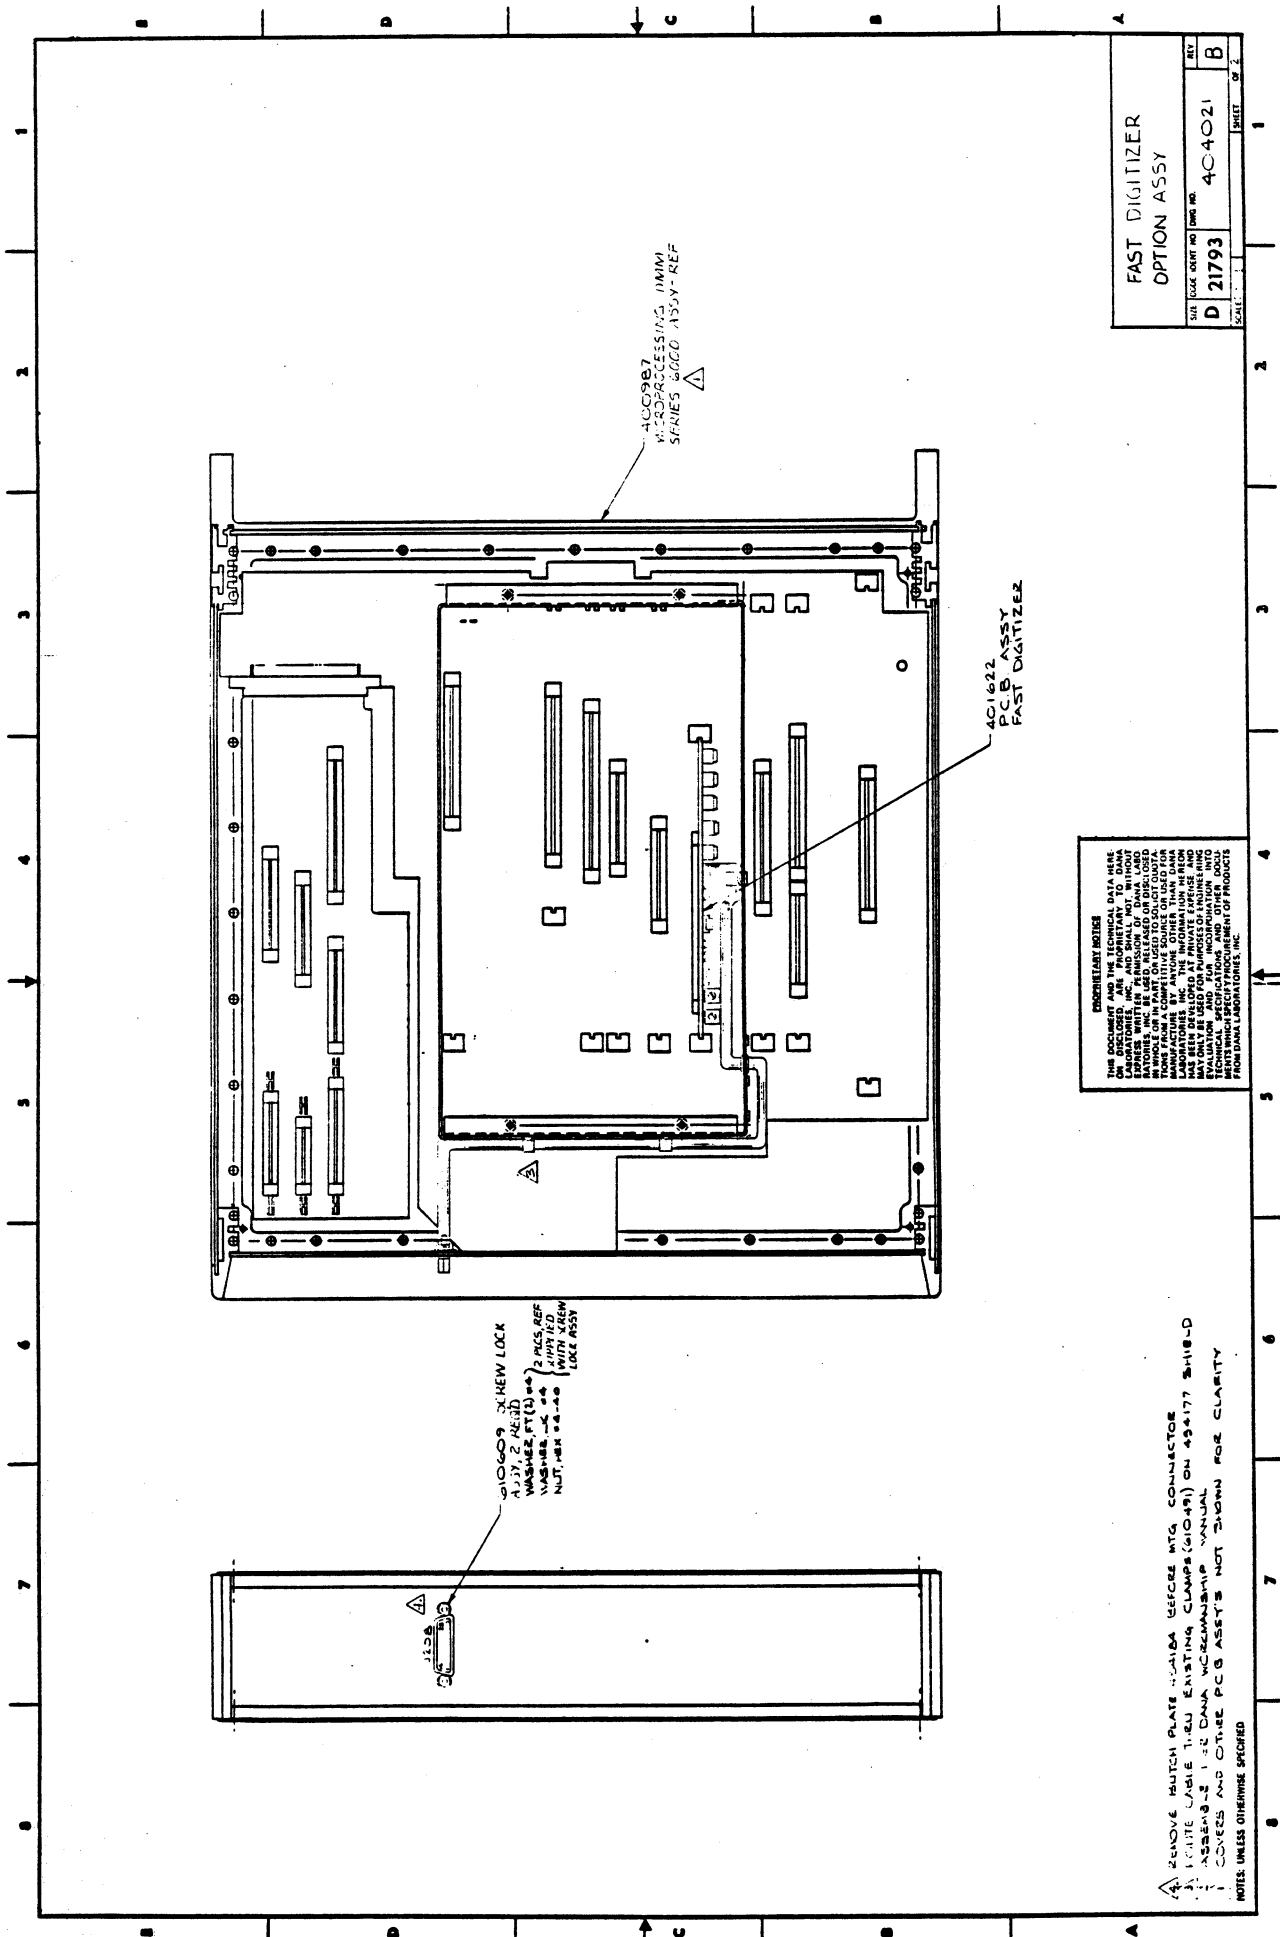

| | |
|-------------------------------|------------|
| FAST DIGITIZER OPTION ASSY | |
| REV | B |
| DWG NO | 404021 |
| DWG DATE | D 21793 |
| SCALE | SHEET OF 2 |

PROPRIETARY NOTICE
 THE DOCUMENT AND THE TECHNICAL DATA HEREON DEVELOPED ARE PROPRIETARY TO DANA LABORATORIES, INC. PERMISSION IS GRANTED TO EXPRESS WRITER PERMISSION OF DANA LABORATORIES, INC. TO REPRODUCE THIS DRAWING IN WHOLE OR IN PART ON USED TO LOCATE QUANTITY OF PARTS FOR REPAIR OR RE-CONSTRUCTION OF EQUIPMENT MANUFACTURED BY ANYONE OTHER THAN DANA LABORATORIES, INC. AT PRIVATE USE AND FOR REPAIR OF EQUIPMENT. THIS DRAWING IS NOT TO BE USED FOR PURPOSES OF ENGINEERING, ARCHITECTURE, CONSTRUCTION, OR OTHER TECHNICAL SPECIFICATIONS AND OTHER LOCAL PRODUCTS FROM DANA LABORATORIES, INC.

1. REMOVE BUSH PLATE (10-108) BEFORE MFG CONNECTOR
 2. LOCATE CABLE TIE-UP EXISTING CLAMPS (10-091) ON 404177 SHIELD
 3. ASSEMBLE 1-2 DANA MICROMANSHIP MANUAL
 4. COVERS AND OTHER PCB ASSY'S NOT SHOWN FOR CLARITY
 NOTES: UNLESS OTHERWISE SPECIFIED

1. 210609 X-NEW LOCK
 2. 1/16" X 2" X 1/8" WASHERS (10-108) 2 PCS REF
 3. 1/16" X 2" X 1/8" NUTS (10-108) 2 PCS REF
 4. 1/16" X 2" X 1/8" NUTS (10-108) 2 PCS REF
 5. 1/16" X 2" X 1/8" NUTS (10-108) 2 PCS REF
 6. 1/16" X 2" X 1/8" NUTS (10-108) 2 PCS REF
 7. 1/16" X 2" X 1/8" NUTS (10-108) 2 PCS REF
 8. 1/16" X 2" X 1/8" NUTS (10-108) 2 PCS REF

1 2 3 4

D C B A

600167 - CONNJ, 25 PIN

500002 - SHRINK TUBING, A/R


610777 CABLE TIE, A/R

610172 GROMMET

.16 ± .05


5.0

17.00 ± .15



| J208 PIN# | COLOR | PART NO. |
|-----------|---------|----------|
| 16 | BLK | 524000 |
| 15 | WHT/GRN | 524959 |
| 14 | WHT/YEL | 524949 |
| 13 | WHT/ORN | 524939 |
| 12 | WHT/RED | 524929 |
| 11 | WHT/BRN | 524919 |
| 10 | WHT/BLU | 524909 |
| 9 | WHT | 524999 |
| 8 | GRA | 524888 |
| 7 | VIO | 524777 |
| 6 | BLU | 524666 |
| 5 | GRN | 524555 |
| 4 | YEL | 524444 |
| 3 | ORN | 524333 |
| 2 | RED | 524222 |
| 1 | BRN | 524111 |

WIRE LIST

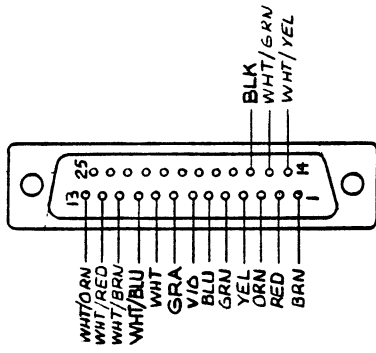

VIEW A-A
SCALE 2/1


PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED AND ARE IN THE PUBLIC DOMAIN. DANA LABORATORIES, INC. AND SHALL NOT, WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. BE REPRODUCED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTA OR CONTRACTS FROM ANY OTHER MANUFACTURER BY ANYONE OTHER THAN DANA LABORATORIES, INC. THE INFORMATION HEREON IS UNCLASSIFIED AND IS NOT BEING INCORPORATED INTO ANY OTHER DOCUMENT OR PRODUCT OF DANA LABORATORIES, INC.

2. TAG & IDENTIFY WITH DANA P/N & CURRENT REV LTR.
 1. ASSY PROCESSES & PROCEDURES TO CONFORM TO DANA WORK. STDs.
 NOTES: UNLESS OTHERWISE SPECIFIED

CABLE ASSEMBLY-
 FAST DIGITIZER

SIZE CODE IDENT NO DWG NO REV
 C 21793 464022 A

SCALE 2:1 SHEET 1 OF 2

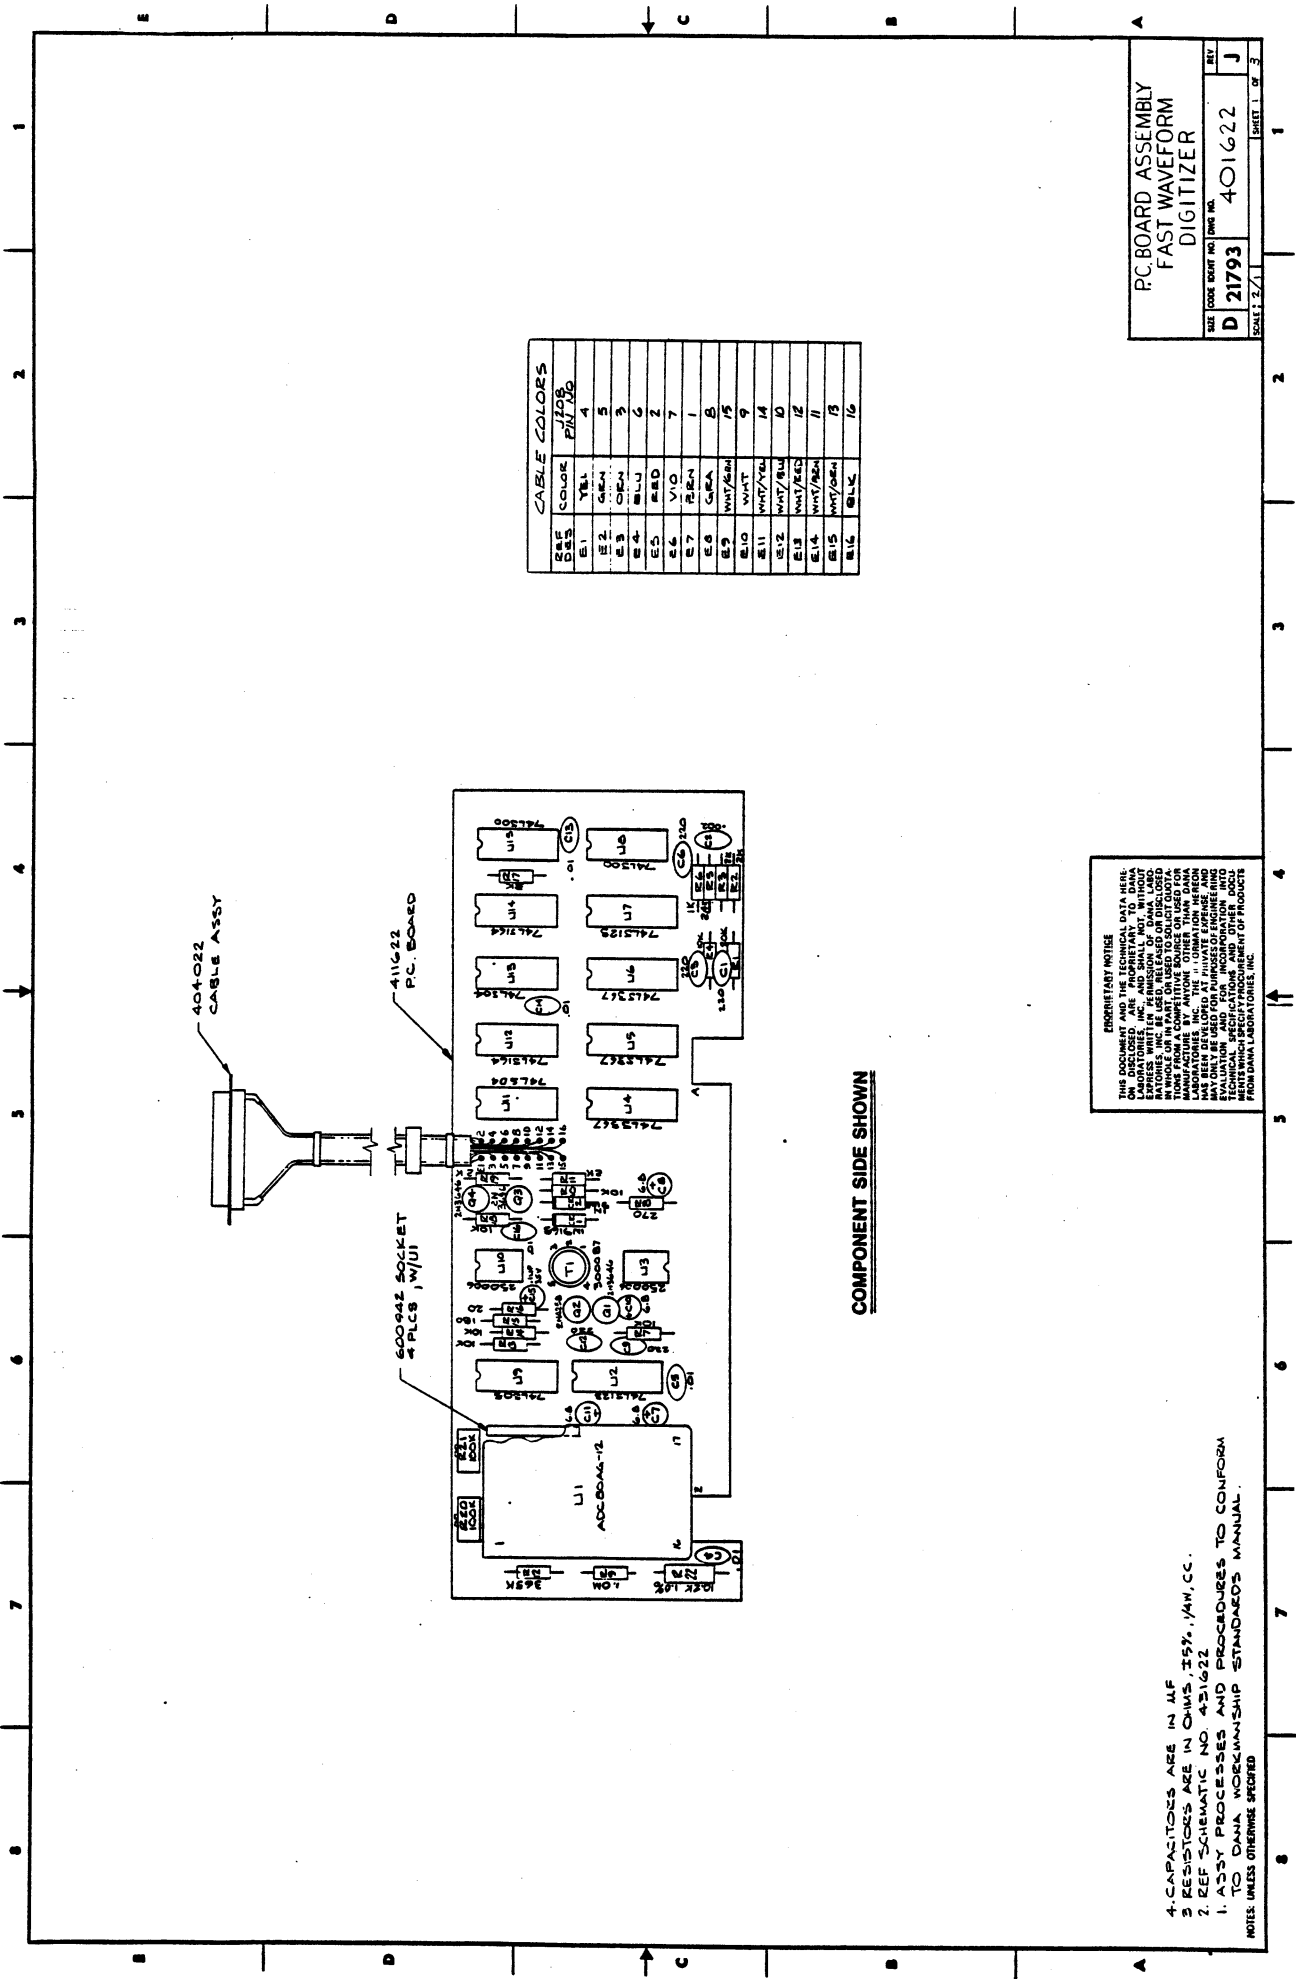

| CABLE COLORS | | |
|--------------|---------|---------|
| SER | COLOR | FILE NO |
| E1 | YEL | 4 |
| E2 | GRN | 5 |
| E3 | BLU | 2 |
| E4 | RED | 2 |
| E5 | VIO | 7 |
| E6 | BRN | 1 |
| E7 | GRN | 5 |
| E8 | WHT/GRN | 9 |
| E9 | WHT/BLU | 10 |
| E10 | WHT/RED | 11 |
| E11 | WHT/GRN | 9 |
| E12 | WHT/BLU | 10 |
| E13 | WHT/RED | 11 |
| E14 | WHT/GRN | 9 |
| E15 | WHT/BLU | 10 |
| E16 | WHT/RED | 11 |


COMPONENT SIDE SHOWN

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. IT IS THE PROPERTY OF DANVA LABORATORIES, INC. AND SHALL NOT BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF DANVA LABORATORIES, INC. THIS DOCUMENT IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. IT IS THE PROPERTY OF DANVA LABORATORIES, INC. AND SHALL NOT BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF DANVA LABORATORIES, INC.

PC BOARD ASSEMBLY
 FAST WAVEFORM
 DIGITIZER

REV
 D 21793 401622
 SCALE: 2/1
 SHEET 1 OF 3

4. CAPACITORS ARE IN MF
 5. RESISTORS ARE IN OHMS, 15%, 1/4W, CC.
 2. REF SCHEMATIC NO. 431622
 1. ASSY PROCESSES AND PROCEDURES TO CONFORM TO DANVA WORKMANSHIP STANDARDS MANUAL.
 NOTES: UNLESS OTHERWISE SPECIFIED

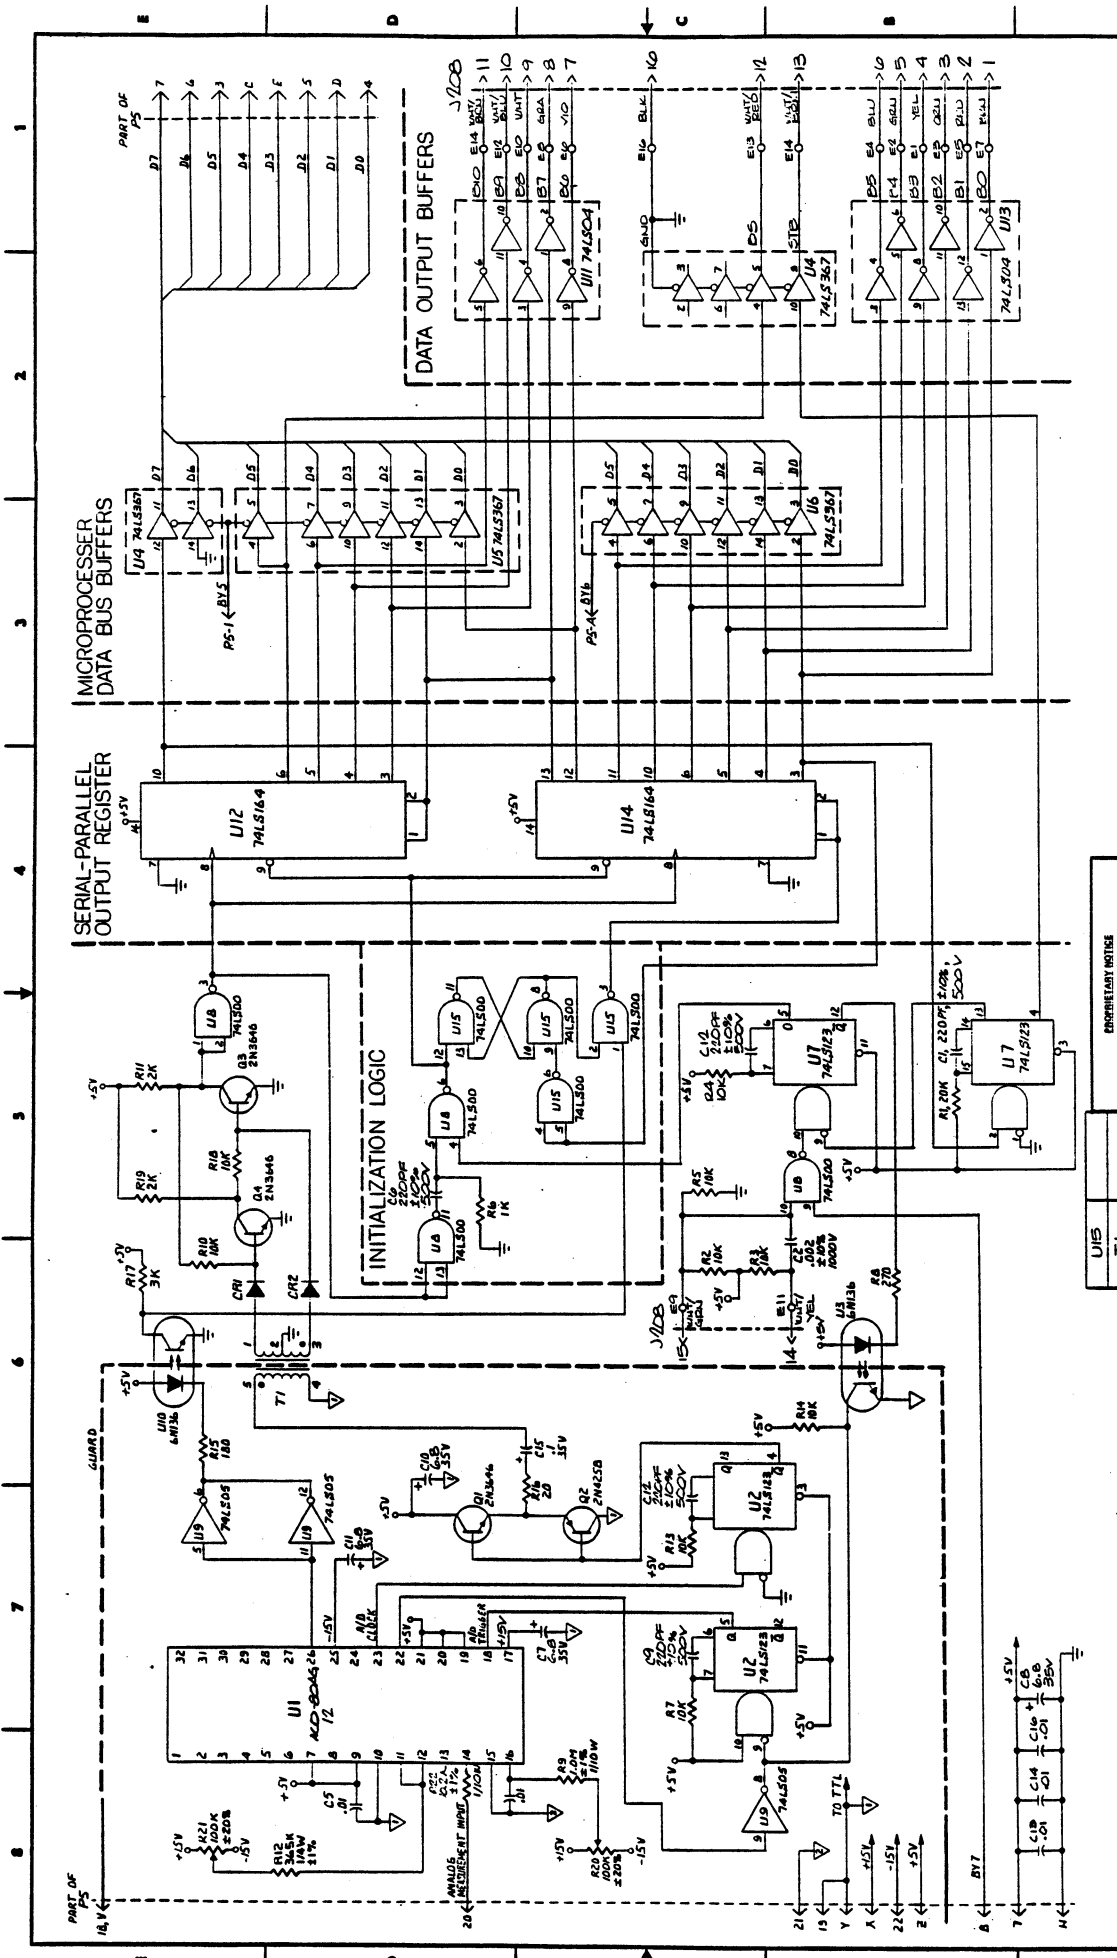

SCHEMATIC
FAST WAVEFORM
DIGITIZER


SIZE CODE PART NO. DWG NO.
D 21793 431622

SHEET / OF / 1

PROPRIETARY NOTICE
THIS DOCUMENT AND THE DATA HEREIN ARE PROPRIETARY TO DATA LABORATORIES, INC. AND ARE NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE EXPRESS WRITTEN PERMISSION OF DATA LABORATORIES, INC. THIS DOCUMENT IS THE PROPERTY OF DATA LABORATORIES, INC. THE INFORMATION HEREIN IS UNCLASSIFIED AND IS BEING RELEASED TO THE PUBLIC ON THE AUTHORITY OF EXECUTIVE ORDER 11652, FEBRUARY 18, 1976. THIS DOCUMENT IS THE PROPERTY OF DATA LABORATORIES, INC. THE INFORMATION HEREIN IS UNCLASSIFIED AND IS BEING RELEASED TO THE PUBLIC ON THE AUTHORITY OF EXECUTIVE ORDER 11652, FEBRUARY 18, 1976.

| DESIGNATORS | LAST | NOT USED |
|-------------|------|----------|
| U15 | | |
| T1 | | |
| R22 | | |
| Q4 | | |
| CR2 | | |

2 CAPACITORS ARE IN μF , 50 VOLTS, $\pm 20\%$
1. RESISTORS ARE IN OHMS, $\pm 5\%$, $1/4 \text{ W}$
NOTE: UNLESS OTHERWISE SPECIFIED


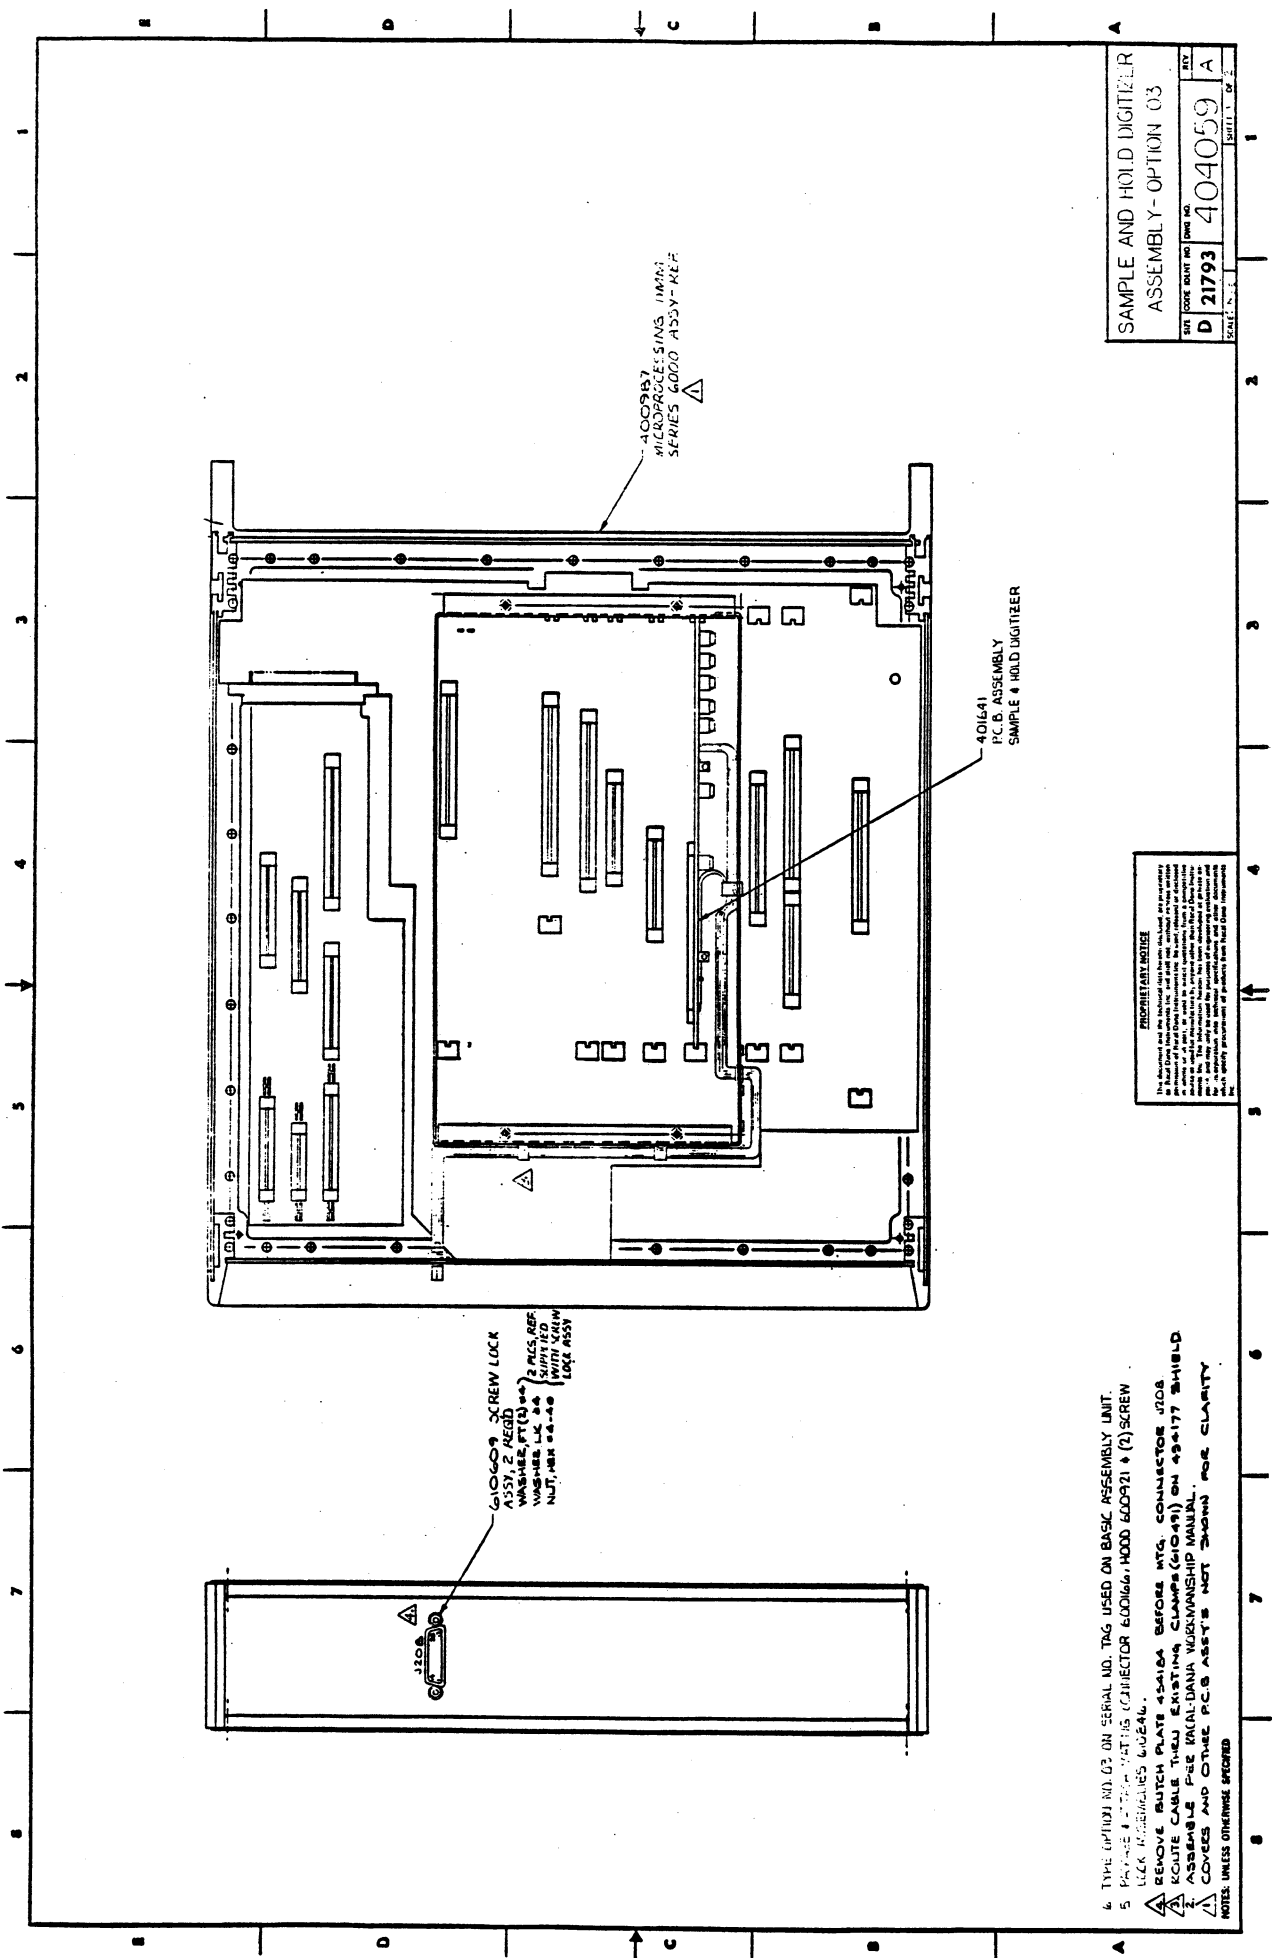


| | |
|---|--------------|
| SAMPLE AND HOLD DIGITIZER ASSEMBLY - OPTION 03 | |
| REV | REV |
| D 21793 | 404059 A |
| DATE | DATE |
| BY | BY |
| SCALE | SHEET 1 OF 2 |

PROBATIONARY NOTICE

The documents and the technical data herein are the property of Ball State University, Inc. and shall not be used, copied, reproduced, or disseminated in any form or by any means, without the express written permission of Ball State University, Inc. The information herein may not be disclosed or otherwise made available to any other person without the prior written consent of Ball State University, Inc.


- 4 TYPE OPTION NO. 03 ON SERIAL NO. TAG USED ON BASIC ASSEMBLY UNIT.
 - 5 REMOVE 4 SCREWS ATTACHING CONNECTOR HOOD 600921 & (2) SCREW LOCK W/REINFORCING W/2 PALS.
 - 6 REMOVE BUTCH PLATE 454104 BEFORE MTO. CONNECTOR JOBS
 - 7 ROUTE CABLE THROUGH EXISTING CLAMPS (610491) ON 454177 241810 ASSEMBLY PER VINCENNA WORKMANSHIP MANUAL.
 - 8 COVERS AND OTHER P.C.B. ASSY'S NOT SHOWN FOR CLARITY
- NOTES: UNLESS OTHERWISE SPECIFIED

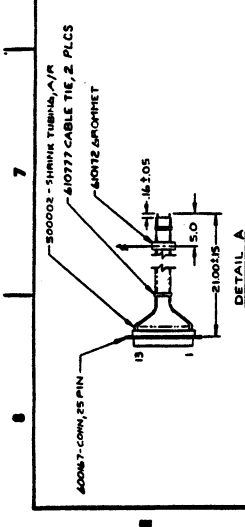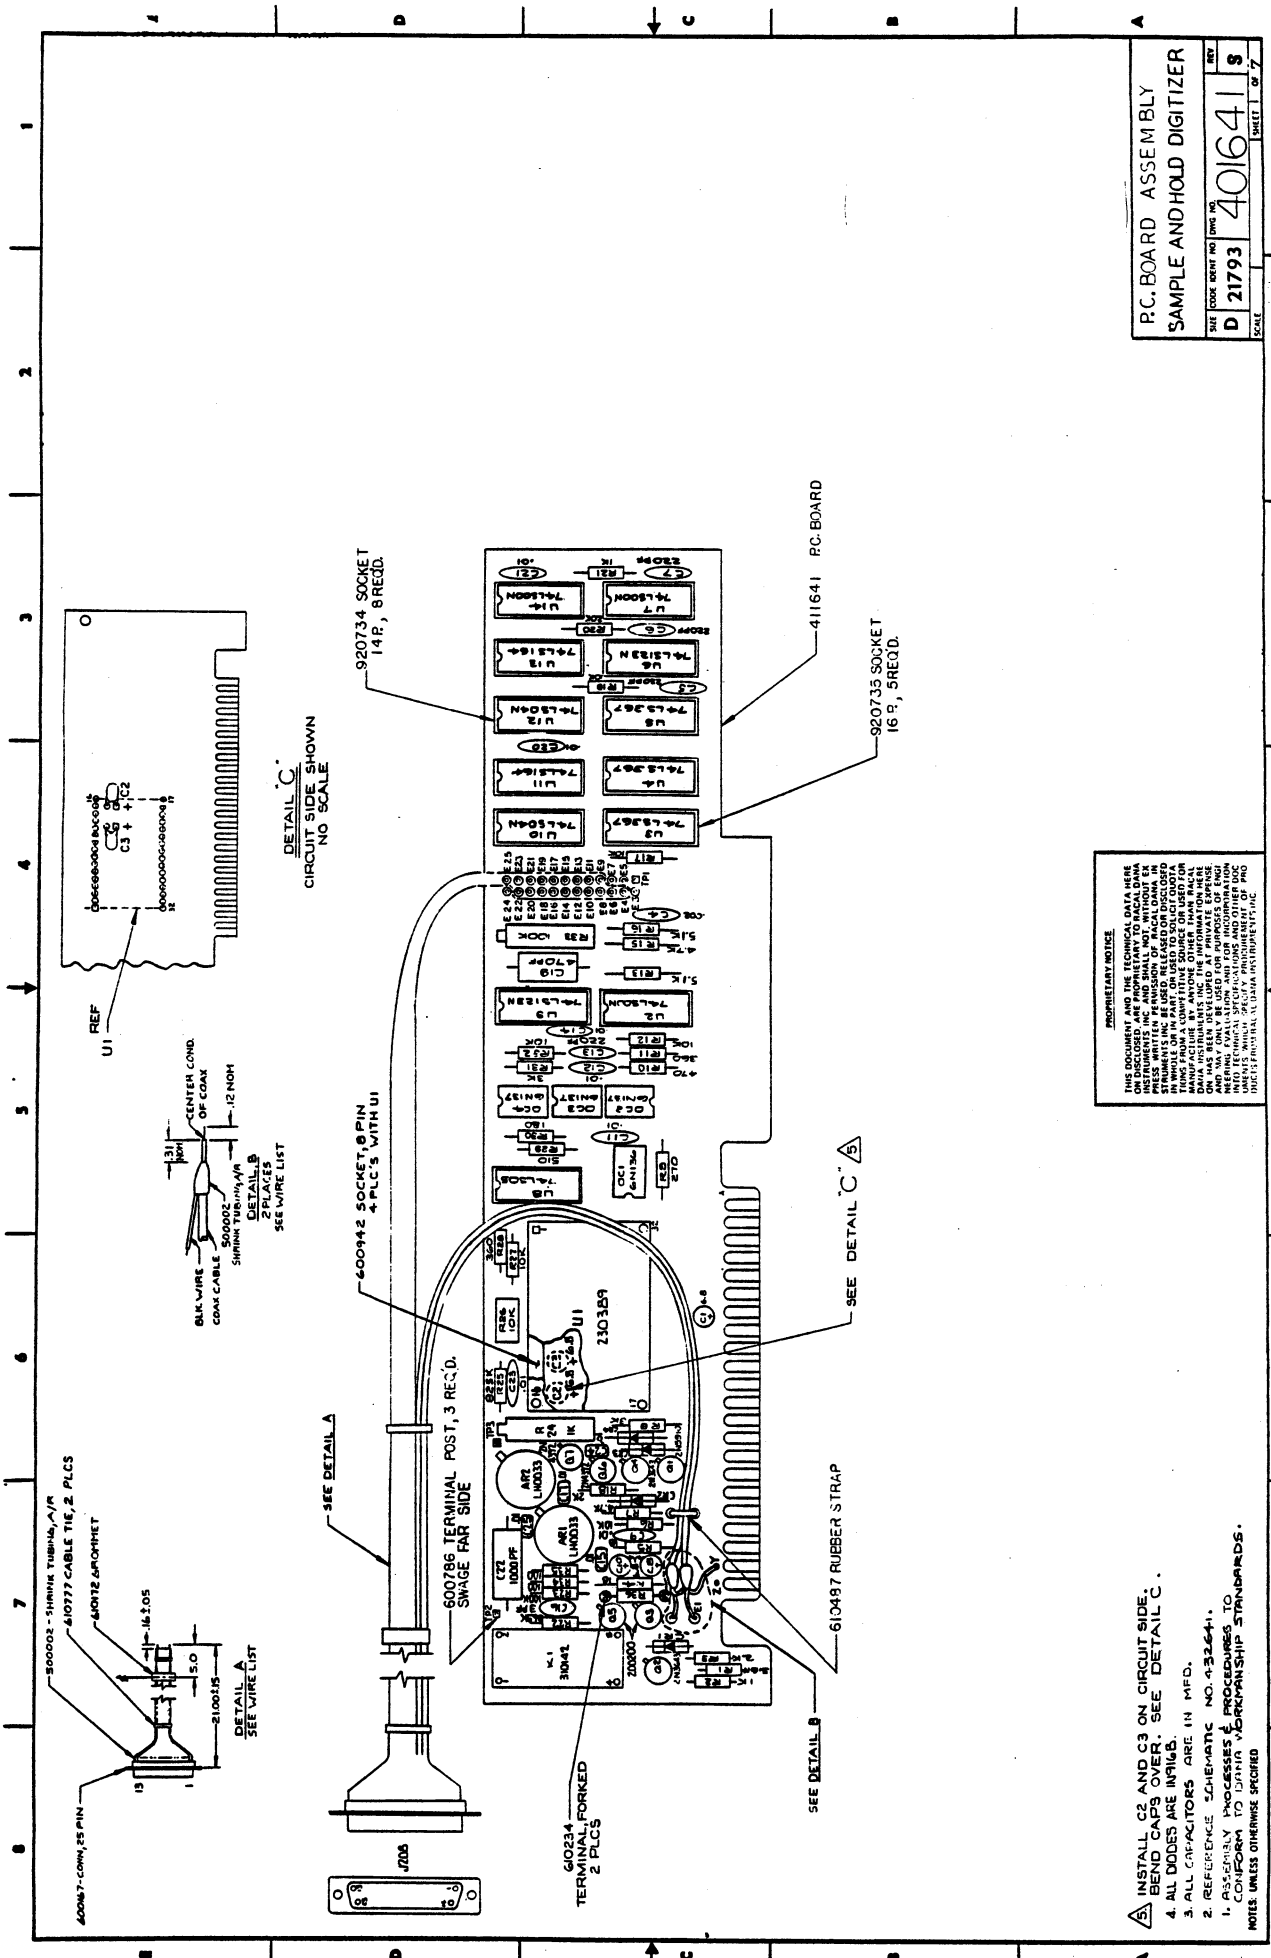

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO ANALOG DATA INC. WRITTEN PERMISSION OF ANALOG DATA, INC. IS REQUIRED FOR REPRODUCTION OF THIS DOCUMENT IN WHOLE OR IN PART, OR FOR USE TO SOLICIT QUOTES FROM ANYONE OTHER THAN ANALOG DATA INSTRUMENTS, INC. THE INFORMATION HEREIN IS NOT TO BE USED FOR PURPOSES OF REPRODUCING OR TRANSMITTING IN ANY MANNER WITHOUT THE WRITTEN TECHNICAL STAFF OF ANALOG AND OTHER DOCUMENTS FROM ANALOG DATA INSTRUMENTS, INC.

- INSTALL C2 AND C3 ON CIRCUIT SIDE. BEND CAPS OVER. SEE DETAIL C.
 ALL DIODES ARE IN 1916B.
 ALL CAPACITORS ARE IN MFD.
 REFERENCE SCHEMATIC NO. 432641.
 ASSEMBLY INSTRUCTIONS PROCESSES TO CONFORM TO DATA WORKMANSHIP STANDARDS.
 NOTE: UNLESS OTHERWISE SPECIFIED.

| | |
|---------------------------|--------------|
| P.C. BOARD ASSEMBLY | |
| SAMPLE AND HOLD DIGITIZER | |
| SHEET CODE | REV |
| D 21793 | 401641 |
| SCALE | SHEET 1 OF 7 |

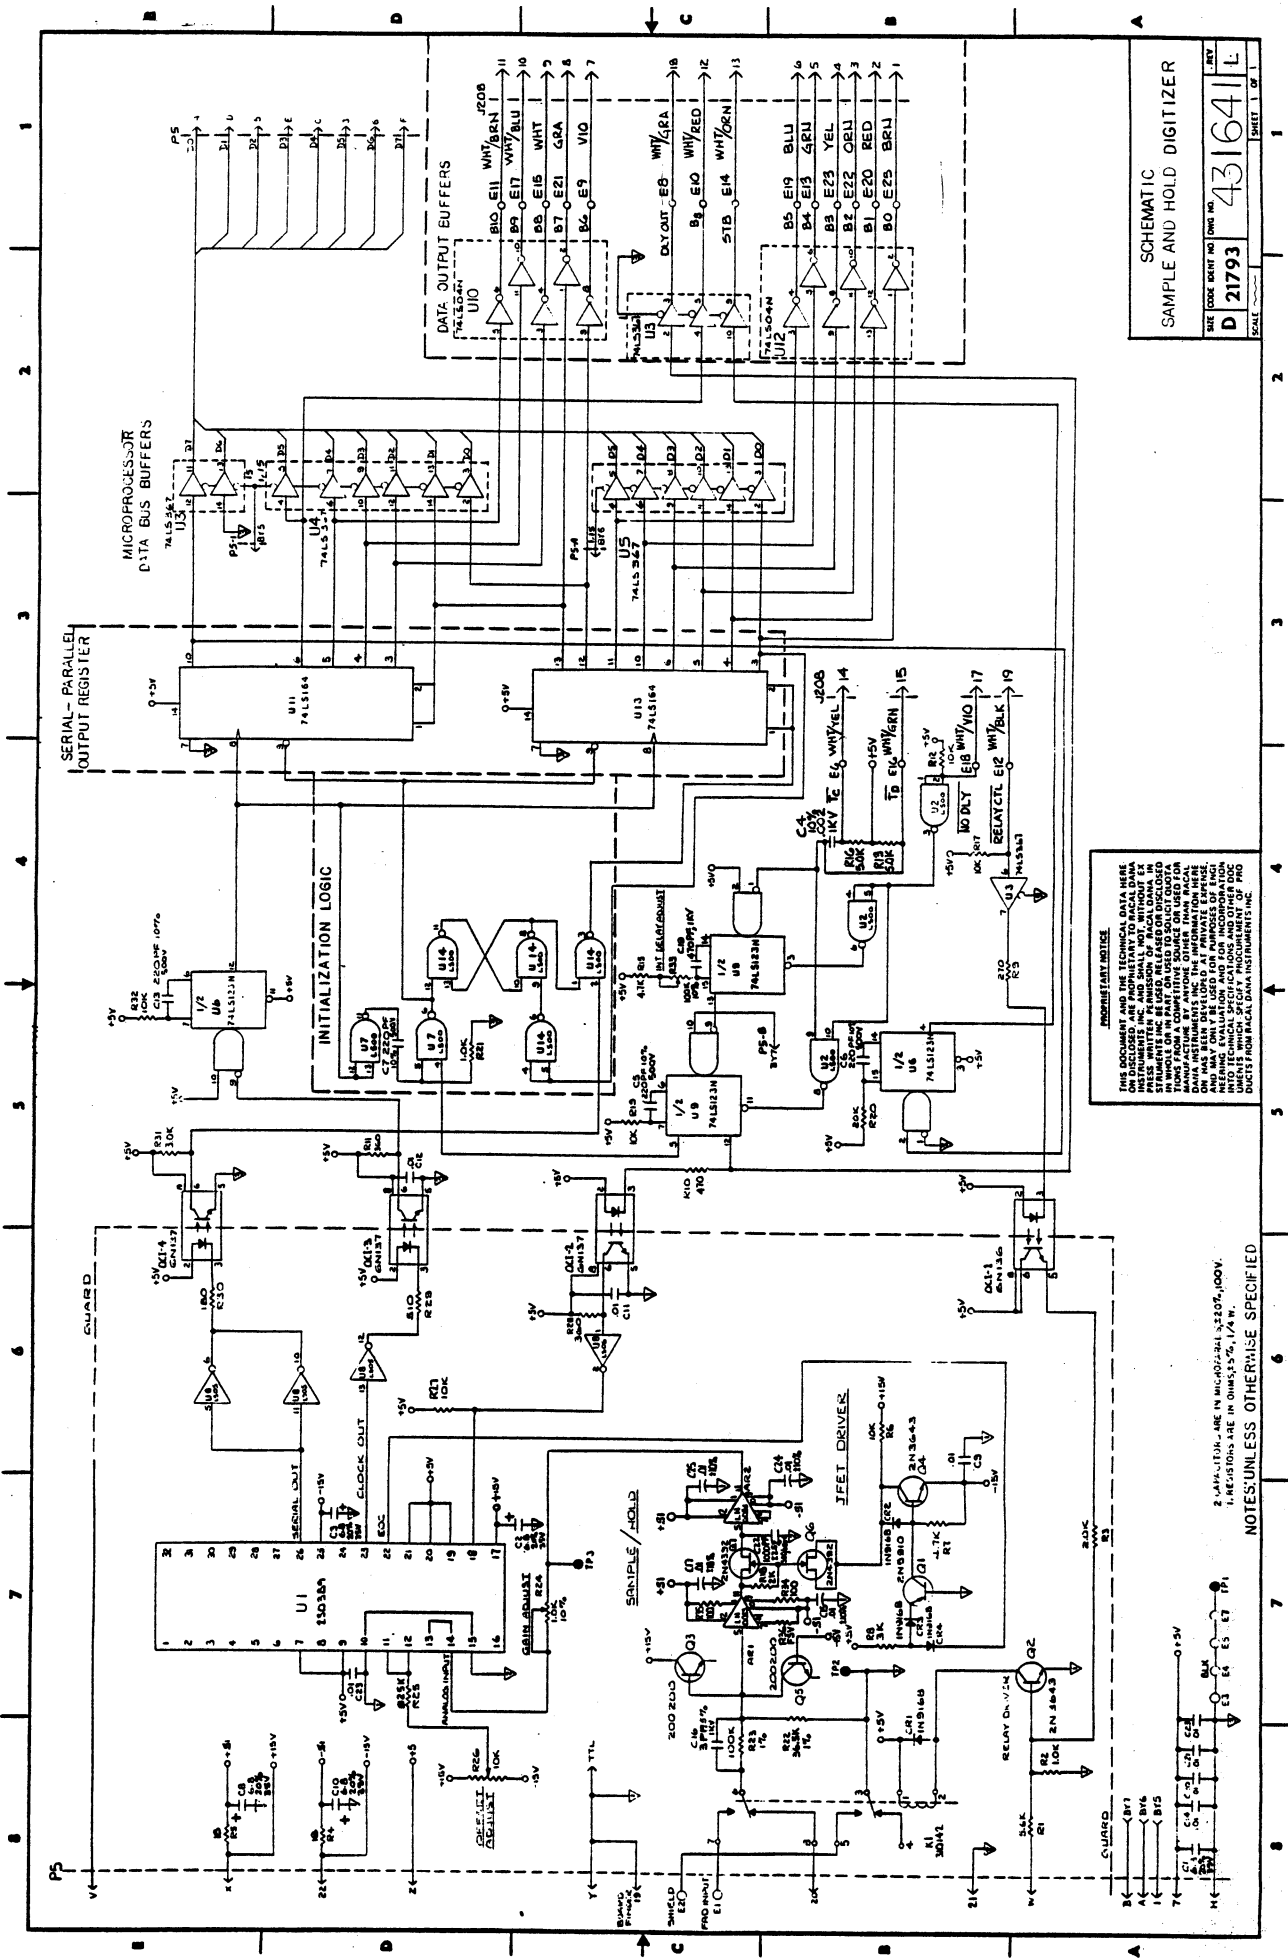

SCHEMATIC
SAMPLE AND HOLD DIGITIZER

SIZE CODE REV NO DWG NO
D 21793 43164 L

SHEET 1 OF 1


PROPRIETARY NOTICE


THE DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO ANALOG DATA INSTRUMENTS INC. NO PART OF THIS DOCUMENT IS TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF ANALOG DATA INSTRUMENTS INC. THIS DOCUMENT IS LOANED TO YOU FROM A COMPETITIVE SOURCE OR USED FOR OTHER THAN THE ORIGINAL PURPOSE FOR WHICH IT WAS LOANED TO YOU. THE INFORMATION HEREIN IS UNCLASSIFIED AND IS NOT TO BE RELEASED TO THE PUBLIC OR TO OTHERS WITHOUT THE WRITTEN PERMISSION OF ANALOG DATA INSTRUMENTS INC.

NOTES: UNLESS OTHERWISE SPECIFIED

2 CAPACITORS ARE IN MICROFARAD (220P, 100P).

1 RESISTORS ARE IN OHMS (1.5K, 1/4 W).

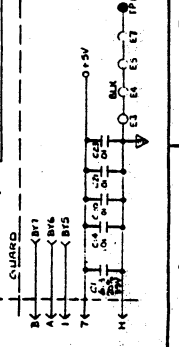


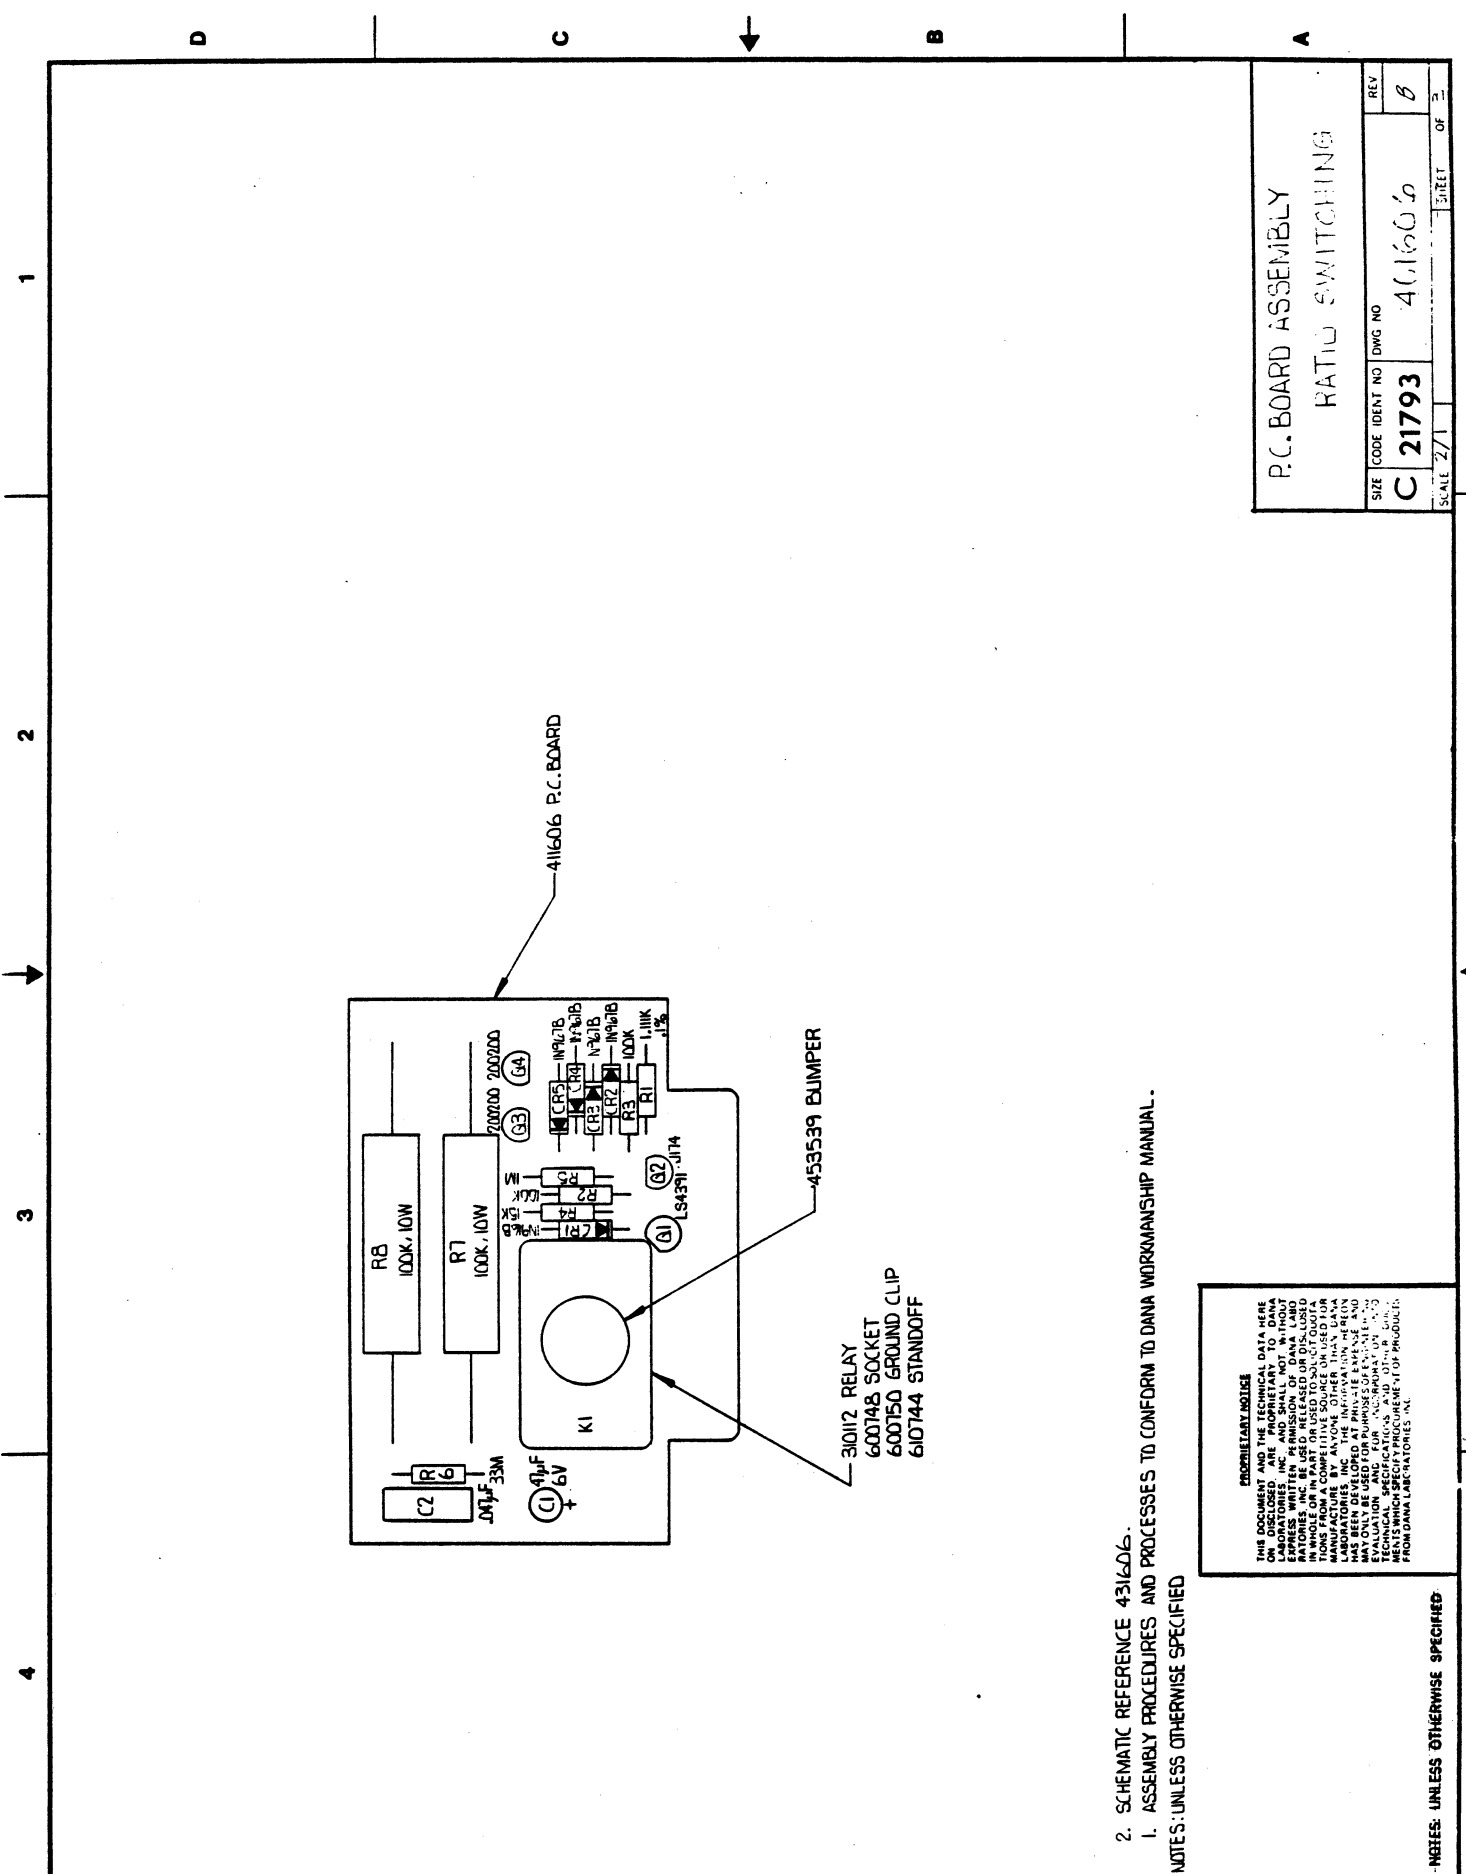

2. SCHEMATIC REFERENCE 431606.
 1. ASSEMBLY PROCEDURES AND PROCESSES TO CONFORM TO DANA WORKMANSHIP MANUAL.
 NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO DANA LABORATORIES, INC. AND SHALL NOT, WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. BE USED, REPRODUCED, COPIED, IN WHOLE OR IN PART, OR USED TO SOLICIT OFFERS OF BUSINESS FROM ANYONE OTHER THAN DANA LABORATORIES, INC. THE INFORMATION HEREON IS UNCLASSIFIED AND IS NOT SUBJECT TO EXPORT CONTROLS UNDER EARLY EXPORT REGULATIONS WHICH SPECIFY PROHIBITION OF EXPORTS FROM DANA LABORATORIES, INC.


| | | | |
|---------------------|---------------|---------|--------|
| P.C. BOARD ASSEMBLY | | REV | 0 |
| RATIO SWITCHING | | DWG NO | 411606 |
| SIZE | CODE IDENT NO | C 21793 | 411606 |
| SCALE 2/1 | | SHEET | OF 3 |

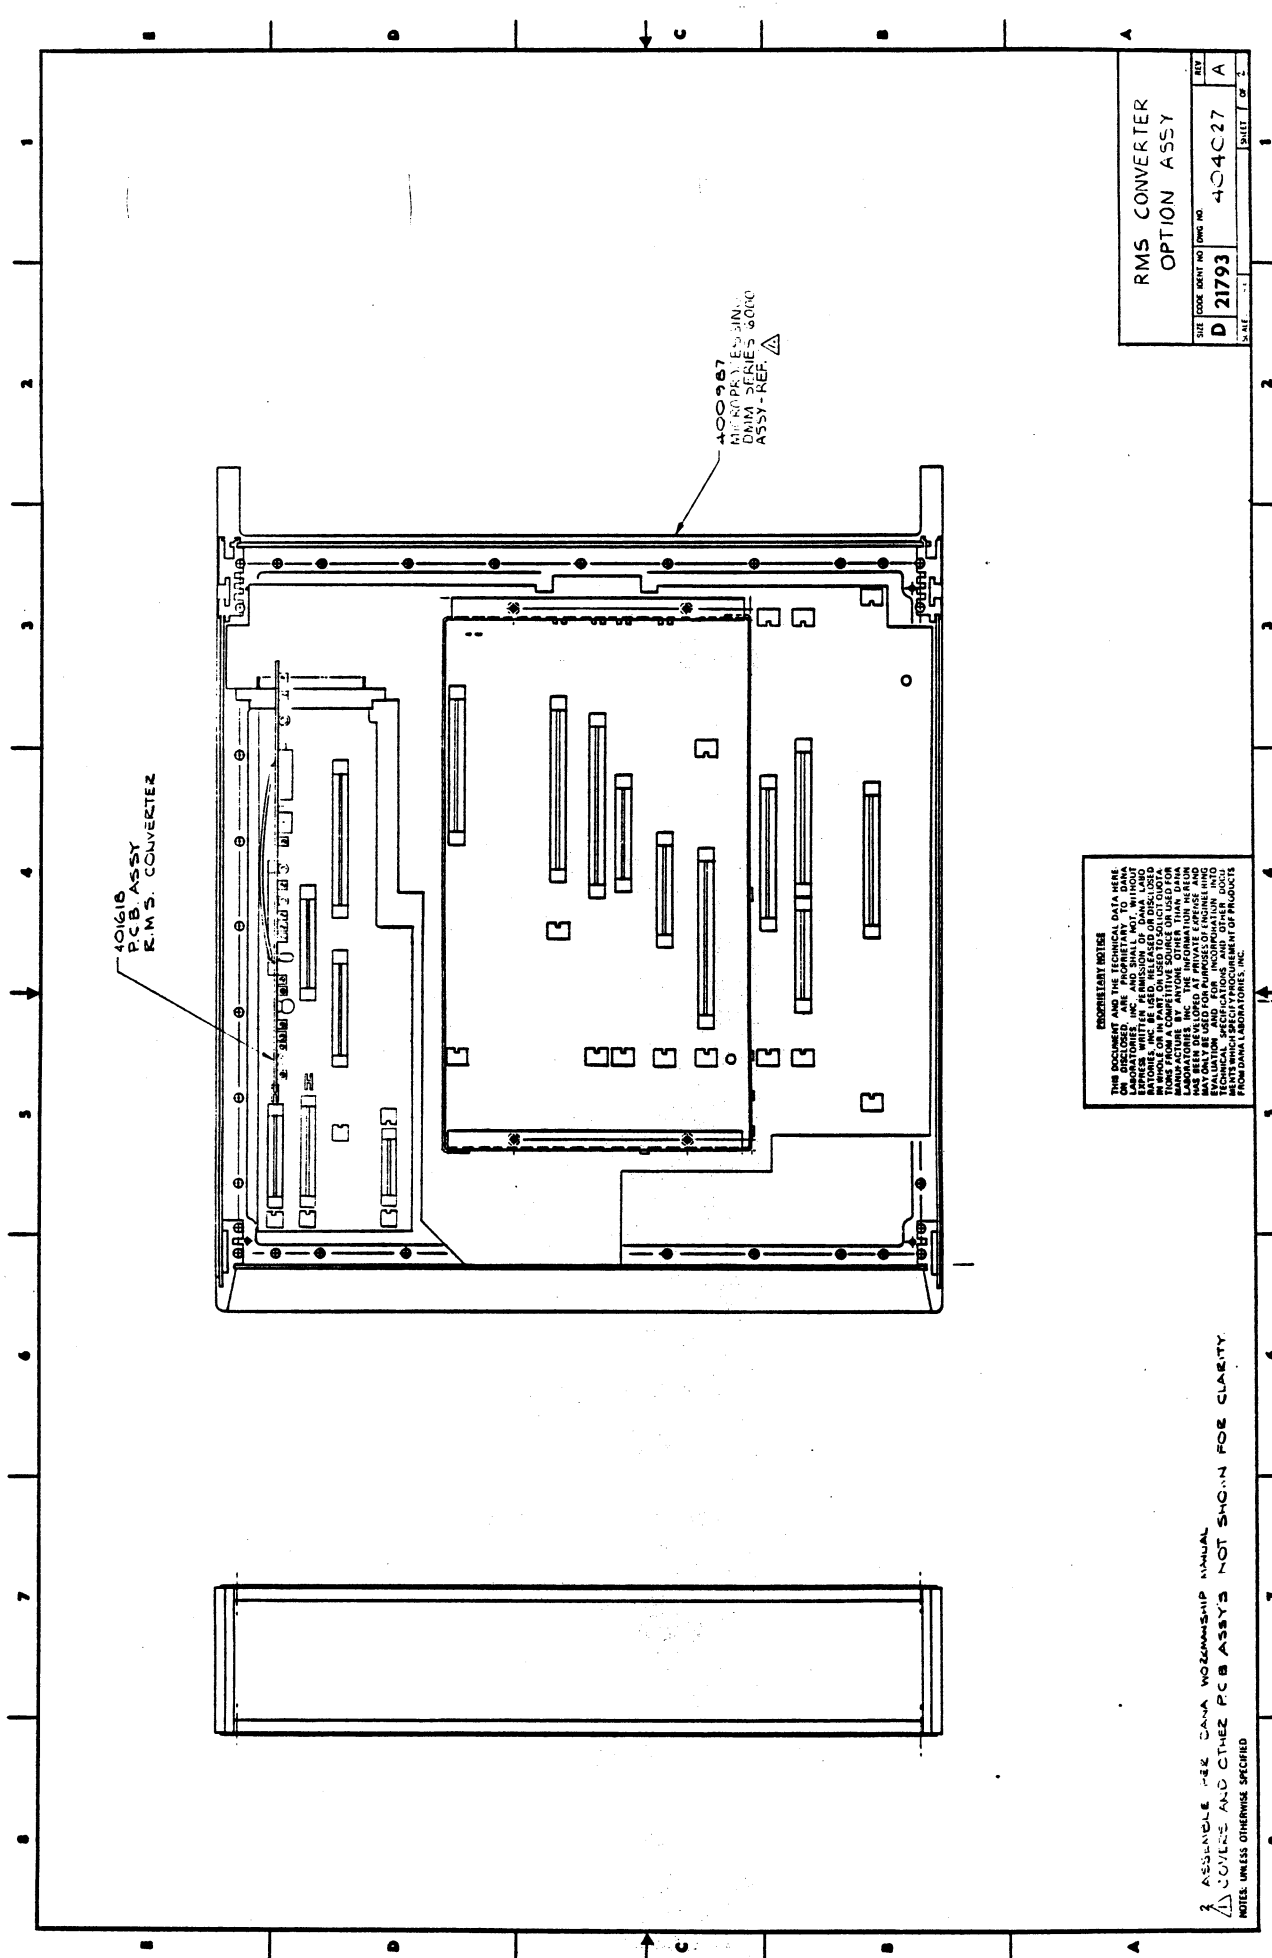

| | |
|------------------------------|---------|
| RMS CONVERTER OPTION ASSY | |
| SHEET NO | 1 |
| REV | A |
| DATE | 404C27 |
| DWG NO | D 21793 |

DISCREET NOTICE
 THIS DOCUMENT AND ALL INFORMATION CONTAINED HEREIN ARE PROPRIETARY TO DATA WORKSHOPS, INC. AND ARE NOT TO BE REPRODUCED, COPIED, EITHER WHOLLY OR IN PART, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WITHOUT THE WRITTEN PERMISSION OF DATA WORKSHOPS, INC. THIS INFORMATION IS PROVIDED FOR YOUR INFORMATION ONLY AND IS NOT TO BE USED FOR ANY OTHER PURPOSES. THE INFORMATION HEREIN IS NOT TO BE USED FOR ANY OTHER PURPOSES. THE INFORMATION HEREIN IS NOT TO BE USED FOR ANY OTHER PURPOSES. THE INFORMATION HEREIN IS NOT TO BE USED FOR ANY OTHER PURPOSES.

Δ ASSEMBLE PER DATA WORKSHOP MANUAL
 COVERS AND OTHER PCB ASSYS NOT SHOWN FOR CLARITY.
 NOTE: UNLESS OTHERWISE SPECIFIED

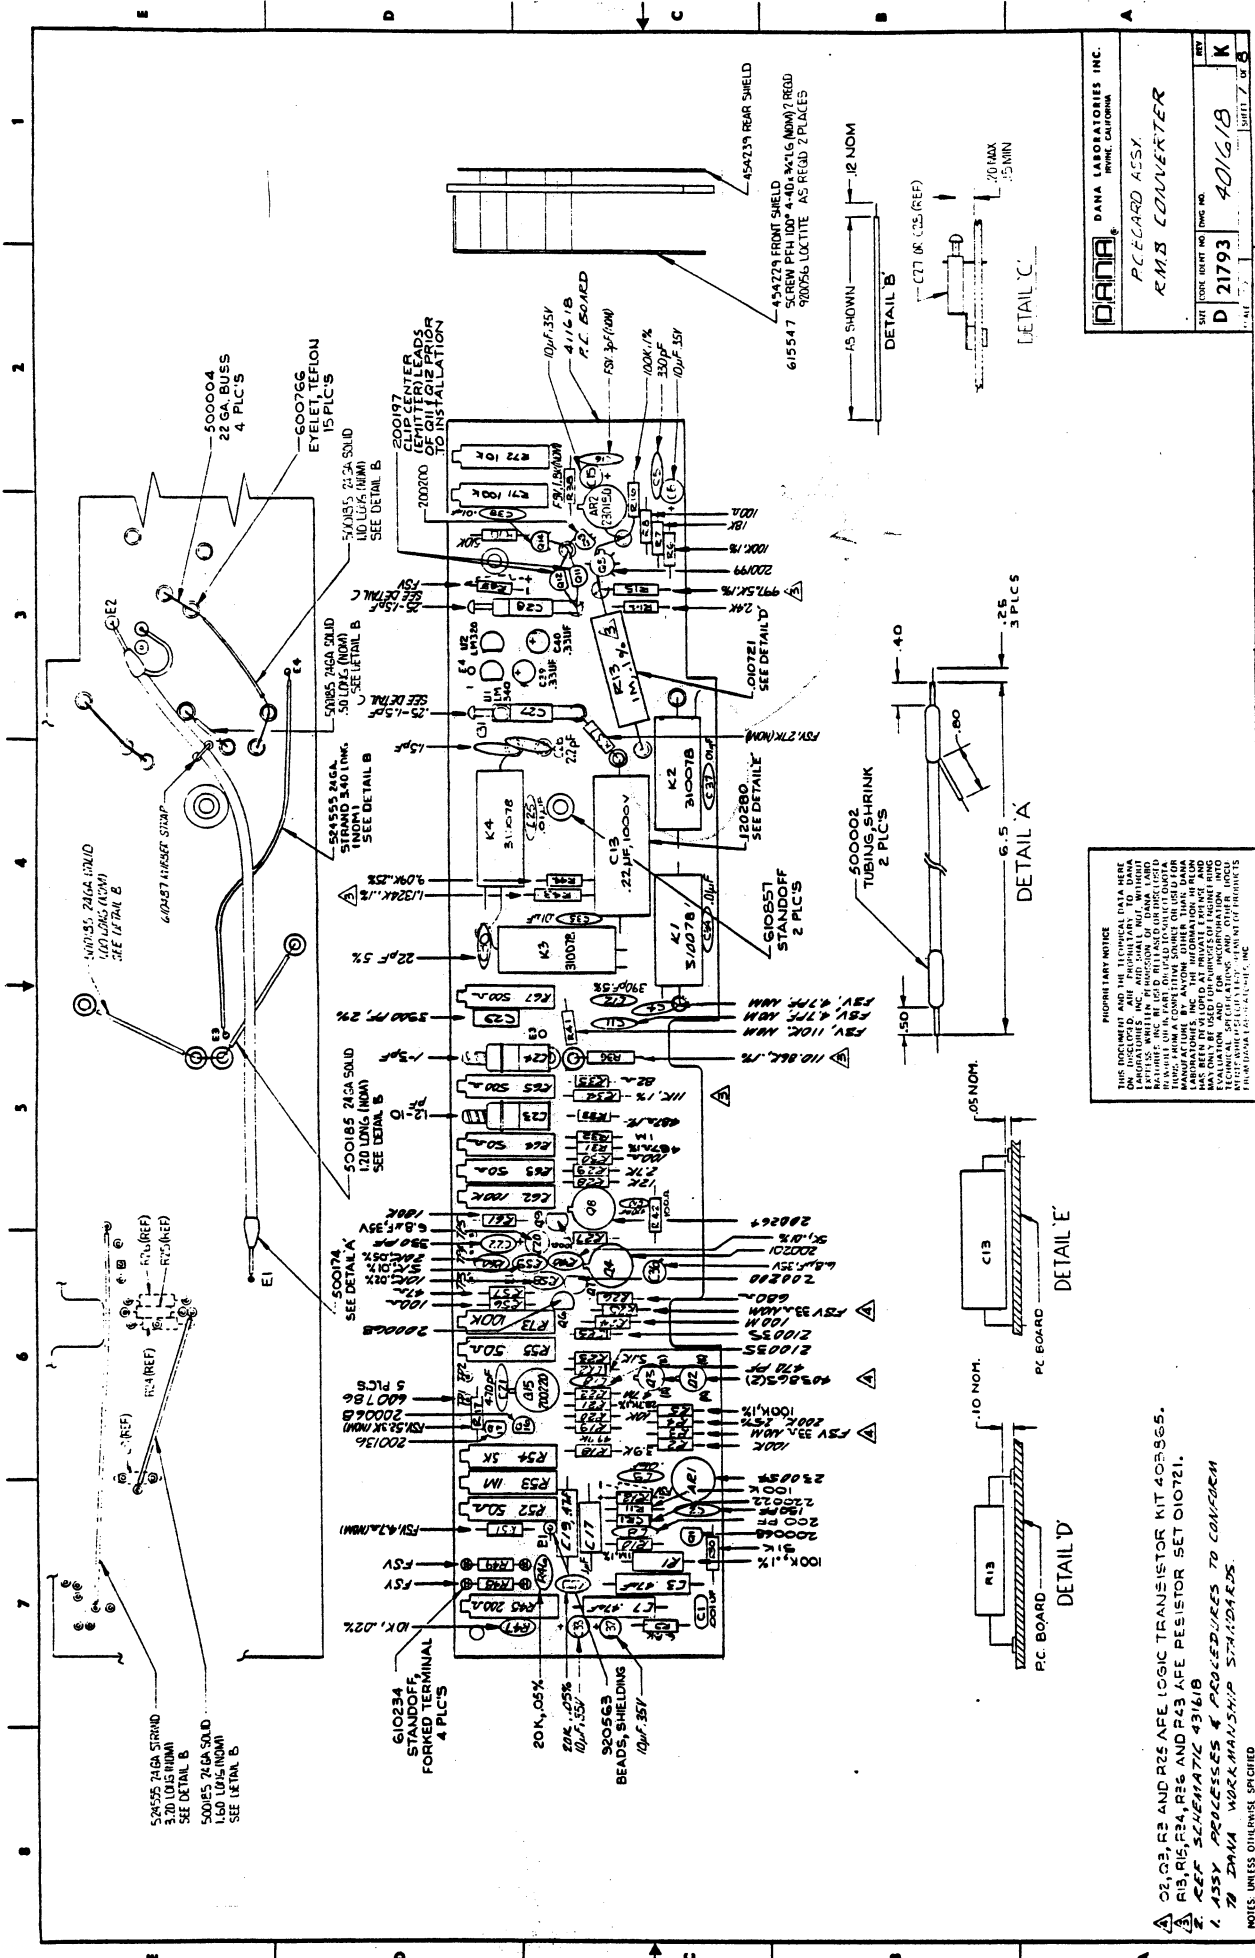

PROPERTY NOTICE
 THE DOCUMENT AND THE TECHNICAL DATA HEREIN ARE THE PROPERTY OF DANA LABORATORIES, INC. AND SHALL REMAIN THE PROPERTY OF DANA LABORATORIES, INC. IF YOU ARE AN EMPLOYEE OF DANA LABORATORIES, INC. IF YOU ARE AN EMPLOYEE OF A COMPANY THAT HAS MANUFACTURED BY, AVONCO, DANA LABORATORIES, INC. OR ANY OF ITS SUBSIDIARIES, YOU SHALL NOT DISCLOSE OR REPRODUCE THIS INFORMATION TO ANY OTHER PERSON OR ENTITY WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. THIS INFORMATION IS UNCLASSIFIED AND IS NOT BEING RELEASED AT PRIVATE REQUEST AND EVALUATION AND FOR INCORPORATION INTO ANY OTHER DOCUMENT OR PRODUCT.


DANA DANA LABORATORIES, INC.
 IRVINE, CALIFORNIA

P.C. BOARD 4551
 RMS CONVERTER

| | | |
|-----|----------|----|
| REV | DATE | BY |
| 1 | 40/16/18 | K |
| 2 | 2/17/93 | K |

FORM 17-03

- NOTES: UNLESS OTHERWISE SPECIFIED
- 1. RESISTOR VALUES AND TOLERANCES TO COMPLY WITH DANA WORKMANSHIP STANDARDS.
 - 2. REFER TO THE DANA WORKMANSHIP STANDARDS FOR THE FOLLOWING PROCESSES:
 - RESISTOR TOLERANCES TO COMPLY WITH DANA WORKMANSHIP STANDARDS.
 - RESISTOR TOLERANCES TO COMPLY WITH DANA WORKMANSHIP STANDARDS.
 - RESISTOR TOLERANCES TO COMPLY WITH DANA WORKMANSHIP STANDARDS.

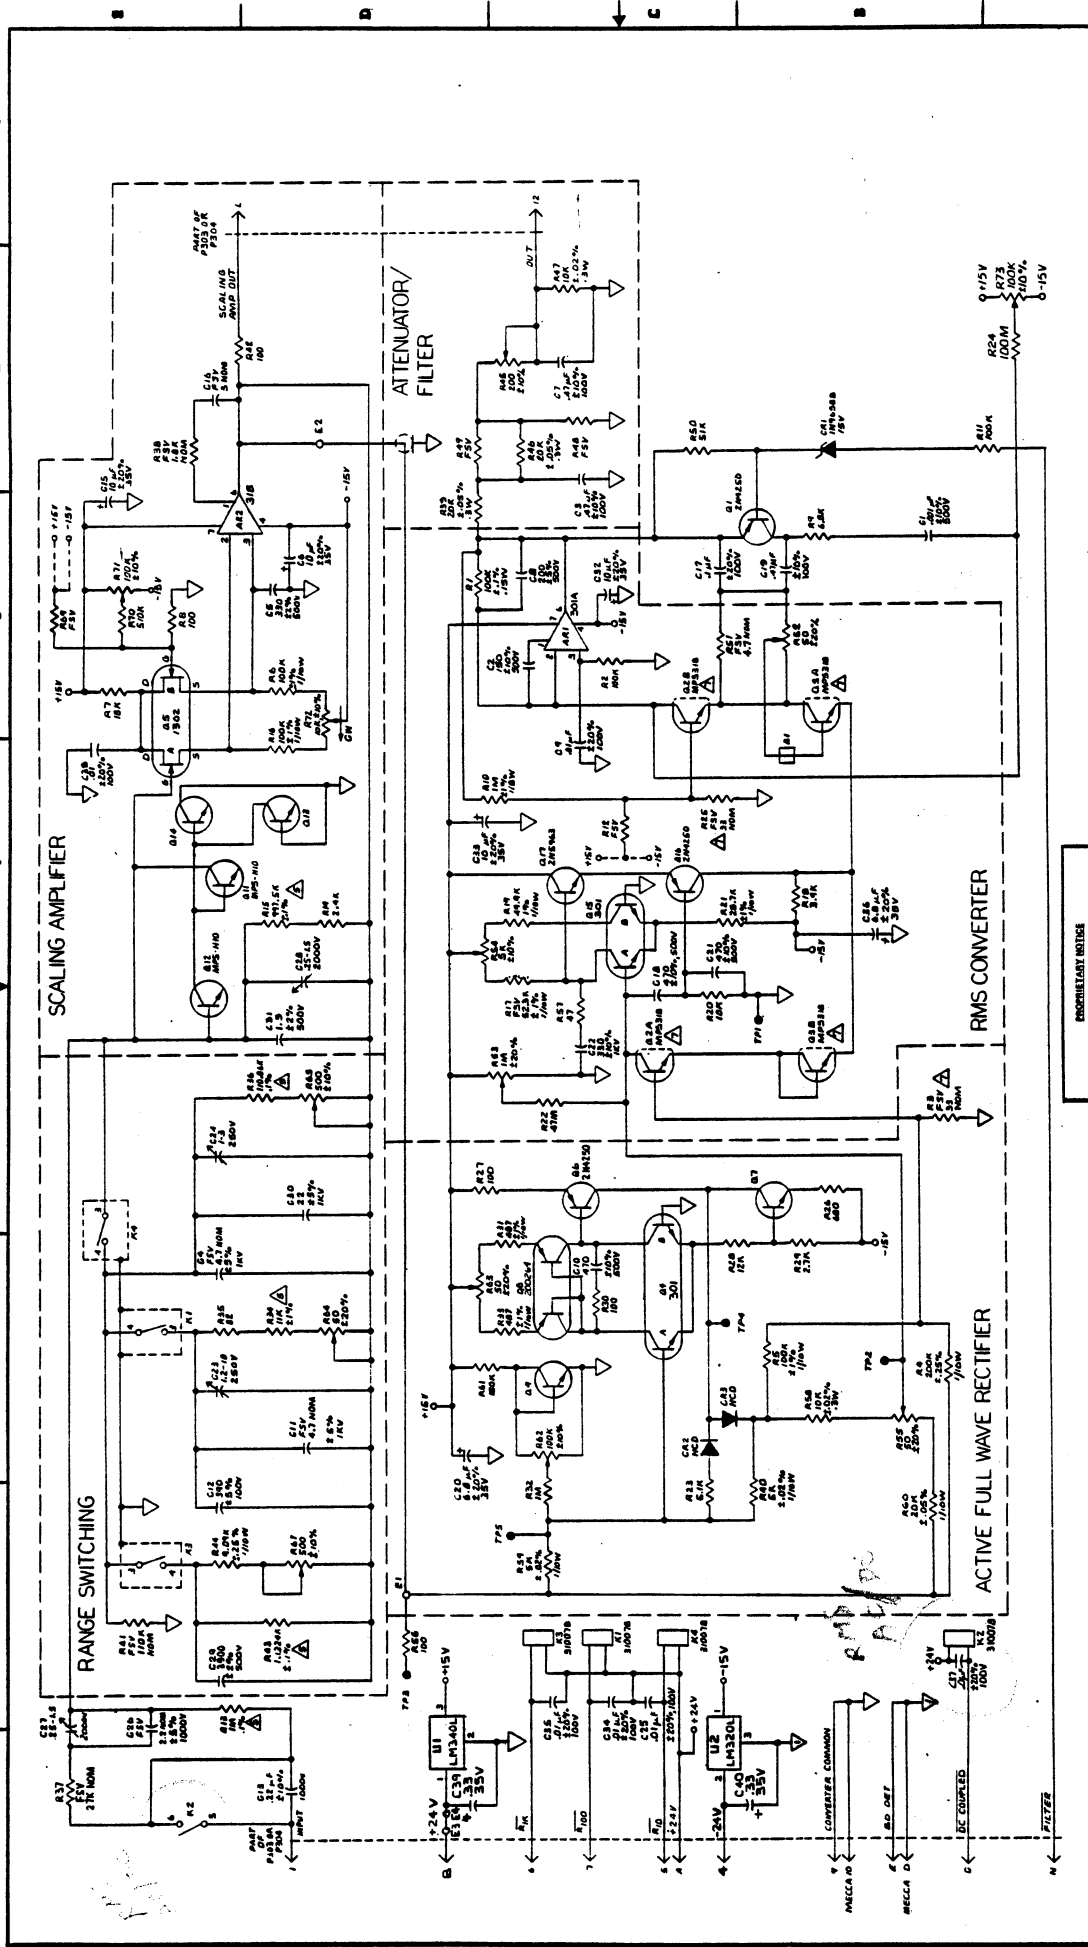

SCHEMATIC -
RMS CONVERTER


SIZE CODE 0077 NO 0090 NO
D 21793 431618

SHEET 1 OF 1

DISCLAIMER NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED AND SHALL NOT BE RELEASED TO THE PUBLIC IN WHOLE OR IN PART OR REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. THIS DOCUMENT IS THE PROPERTY OF DANA LABORATORIES, INC. AND IS LOANED TO YOU BY THE MANUFACTURE BY ANOTHER OTHER THAN DANA LABORATORIES, INC. IT IS TO BE USED ONLY FOR THE PURPOSES AND IN THE MANNER SPECIFIED IN THE TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH ACCOMPANY THIS DOCUMENT. IT IS TO BE RETURNED TO DANA LABORATORIES, INC. UPON COMPLETION OF THE PROJECT FOR WHICH IT WAS LOANED.

- 1. RESISTORS ARE IN OHMS, 25%, 1/4W UNLESS OTHERWISE SPECIFIED
- 2. CAPACITORS ARE IN P.F.
- 3. DIODES ARE IN/100
- 4. TRANSISTORS ARE 100C20
- 5. RESISTORS ARE 100C20
- 6. RESISTORS ARE 100C20
- 7. RESISTORS ARE 100C20
- 8. RESISTORS ARE 100C20
- 9. RESISTORS ARE 100C20
- 10. RESISTORS ARE 100C20
- 11. RESISTORS ARE 100C20
- 12. RESISTORS ARE 100C20
- 13. RESISTORS ARE 100C20
- 14. RESISTORS ARE 100C20
- 15. RESISTORS ARE 100C20
- 16. RESISTORS ARE 100C20
- 17. RESISTORS ARE 100C20
- 18. RESISTORS ARE 100C20
- 19. RESISTORS ARE 100C20
- 20. RESISTORS ARE 100C20

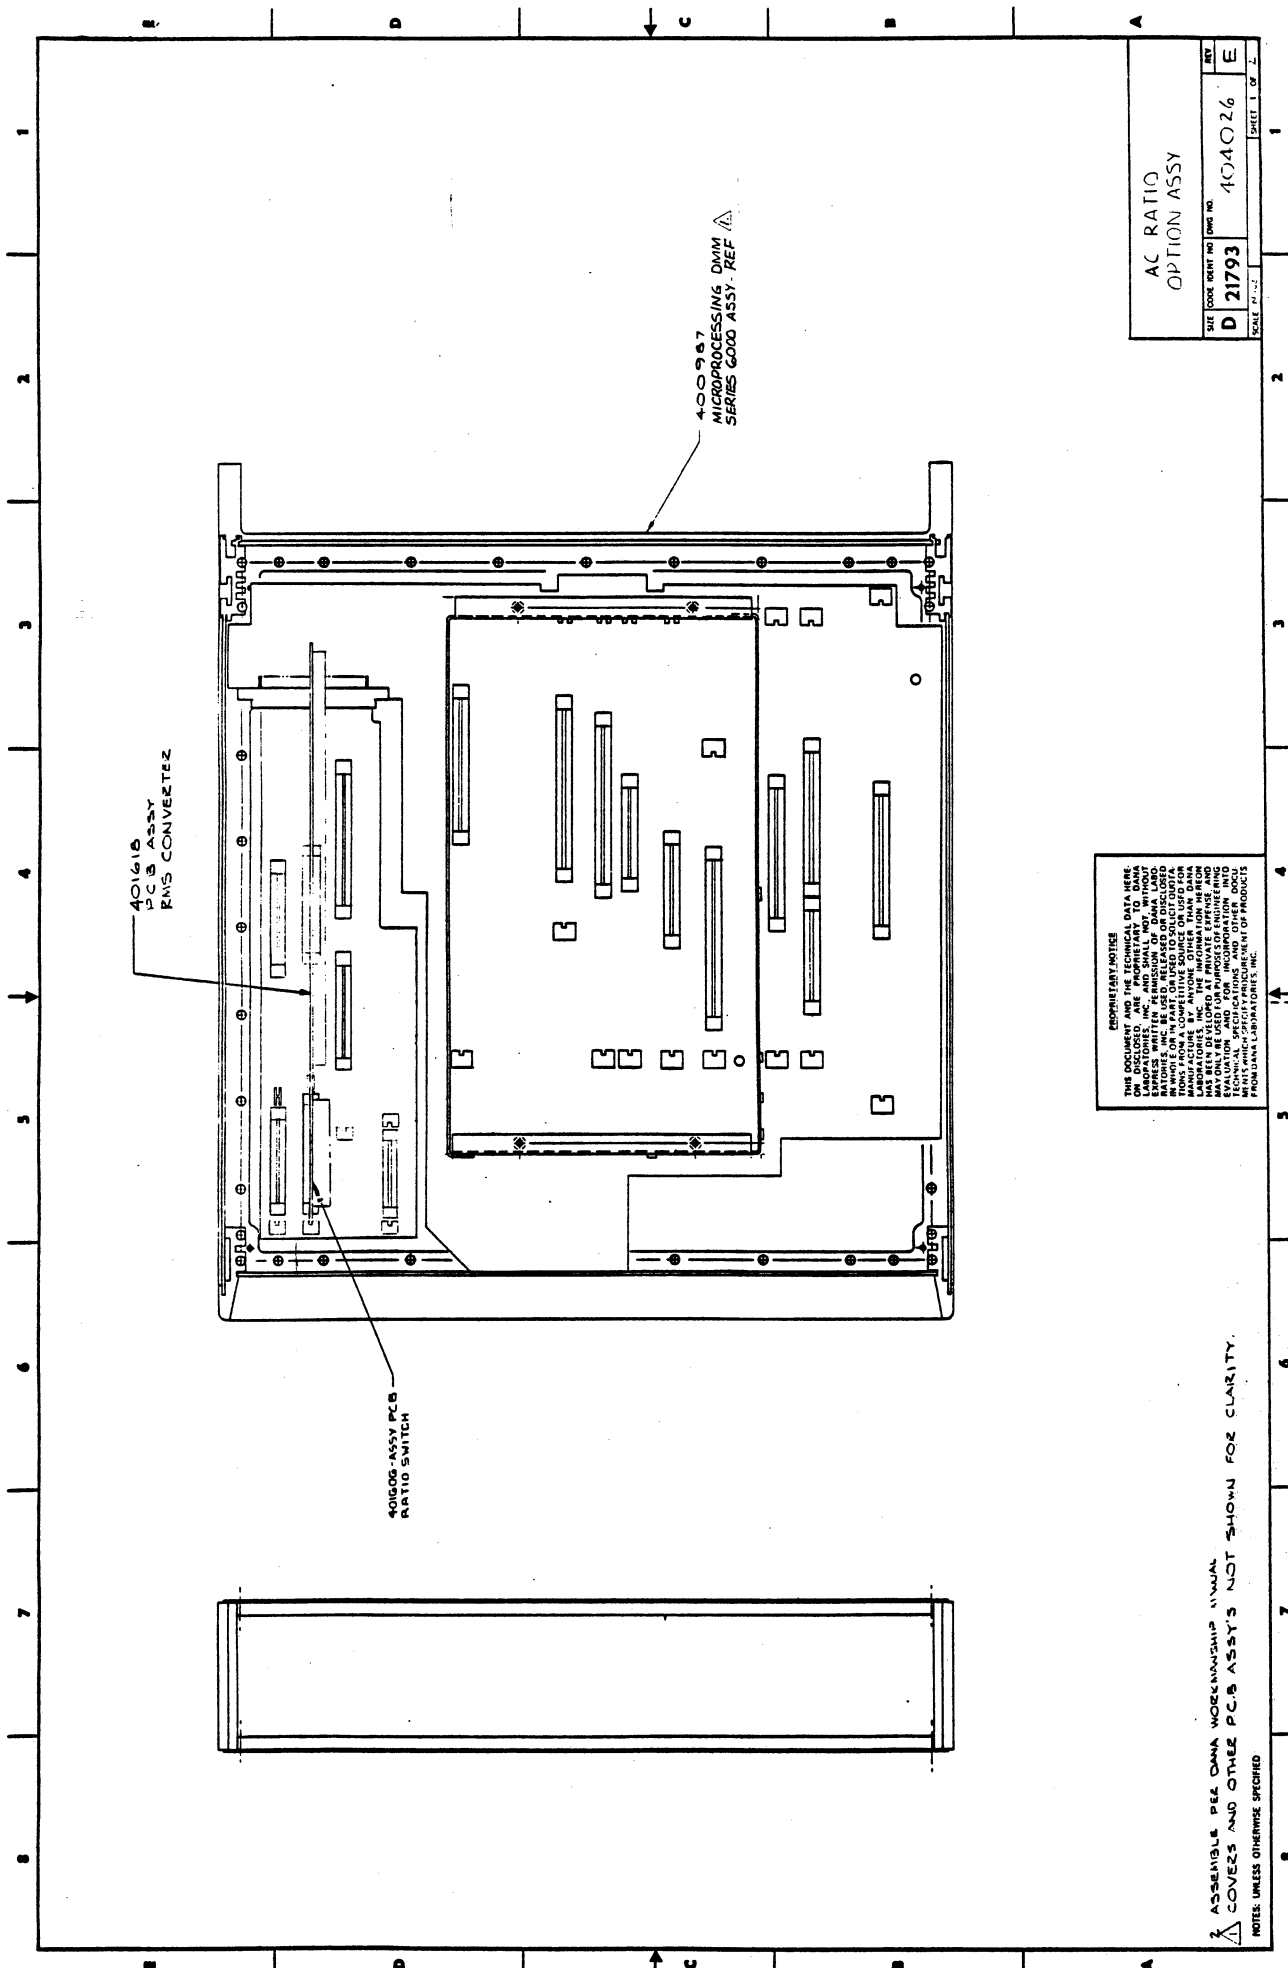

AC RATIO
OPTION ASSY

DATE CODE IDENT NO PART NO
D 21793 104026


SCALE 1:1 SHEET 1 OF 2

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO DANA CORP. NO PART OF THIS DOCUMENT IS TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF DANA CORP. IN WHOLE OR IN PART OR USED TO SOLICIT QUOTES OR MANUFACTURE BY ANYONE OTHER THAN DANA CORP. THE INFORMATION HEREON IS UNCLASSIFIED AND IS NOT SUBJECT TO EXPORT CONTROL REGULATIONS. THIS INFORMATION IS NOT TO BE USED FOR PURPOSES OF ENGINEERING, DESIGN, REPAIR, MAINTENANCE, OR OTHER TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS UNLESS SPECIFICALLY AUTHORIZED BY PROMETHEAN LABORATORIES, INC.

ASSEMBLE PER DANA WORKMANSHIP MANUAL
COVERS AND OTHER PCB ASSYS NOT SHOWN FOR CLARITY.


NOTES: UNLESS OTHERWISE SPECIFIED

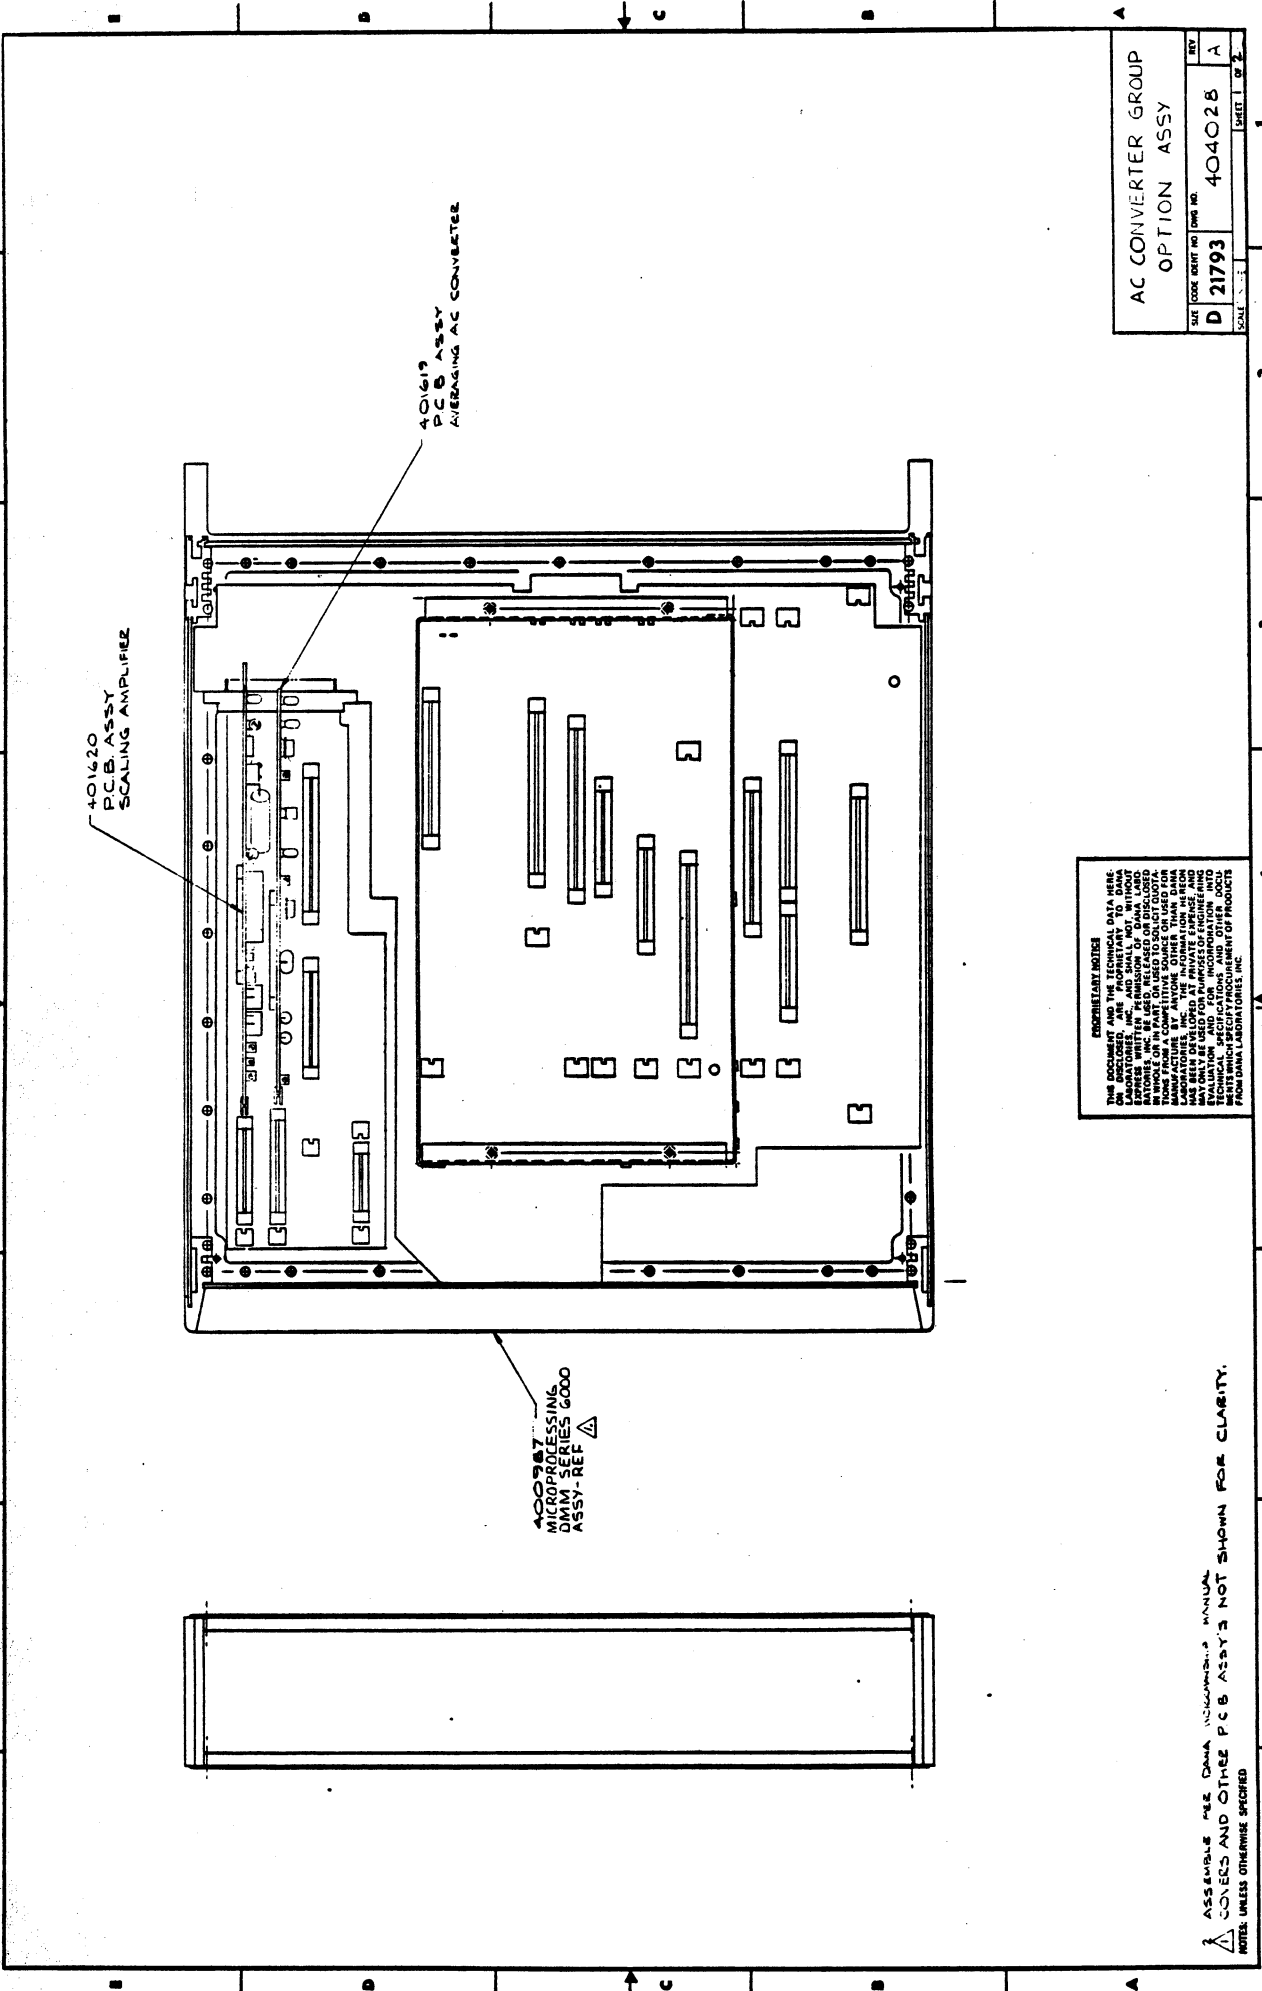

| | | | |
|--------------------|---------|-------|--------|
| AC CONVERTER GROUP | | REV | A |
| OPTION ASSY | | DATE | 404028 |
| SCALE | D 21793 | DATE | 404028 |
| | | SHEET | 1 OF 2 |

CONFIDENTIAL NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED AND SHALL NOT BE RELEASED OR DISCLOSED IN WHOLE OR IN PART, ON USED TO SOLICIT QUOTES, CONTRACTS, OR OTHER BUSINESS OPPORTUNITIES, OR FOR THE MANUFACTURE BY ANYONE OTHER THAN DANA LABORATORIES, INC. WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. THIS INFORMATION HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND SHALL NOT BE USED FOR REPRODUCTION OR DISSEMINATION INTO THE PUBLIC DOMAIN. TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTATION ARE THE PROPERTY OF DANA LABORATORIES, INC.

ASSEMBLE PER DANA INSTRUCTIONS MANUAL
 COVERS AND OTHER PCB ASSY'S NOT SHOWN FOR CLARITY.
 NOTES UNLESS OTHERWISE SPECIFIED

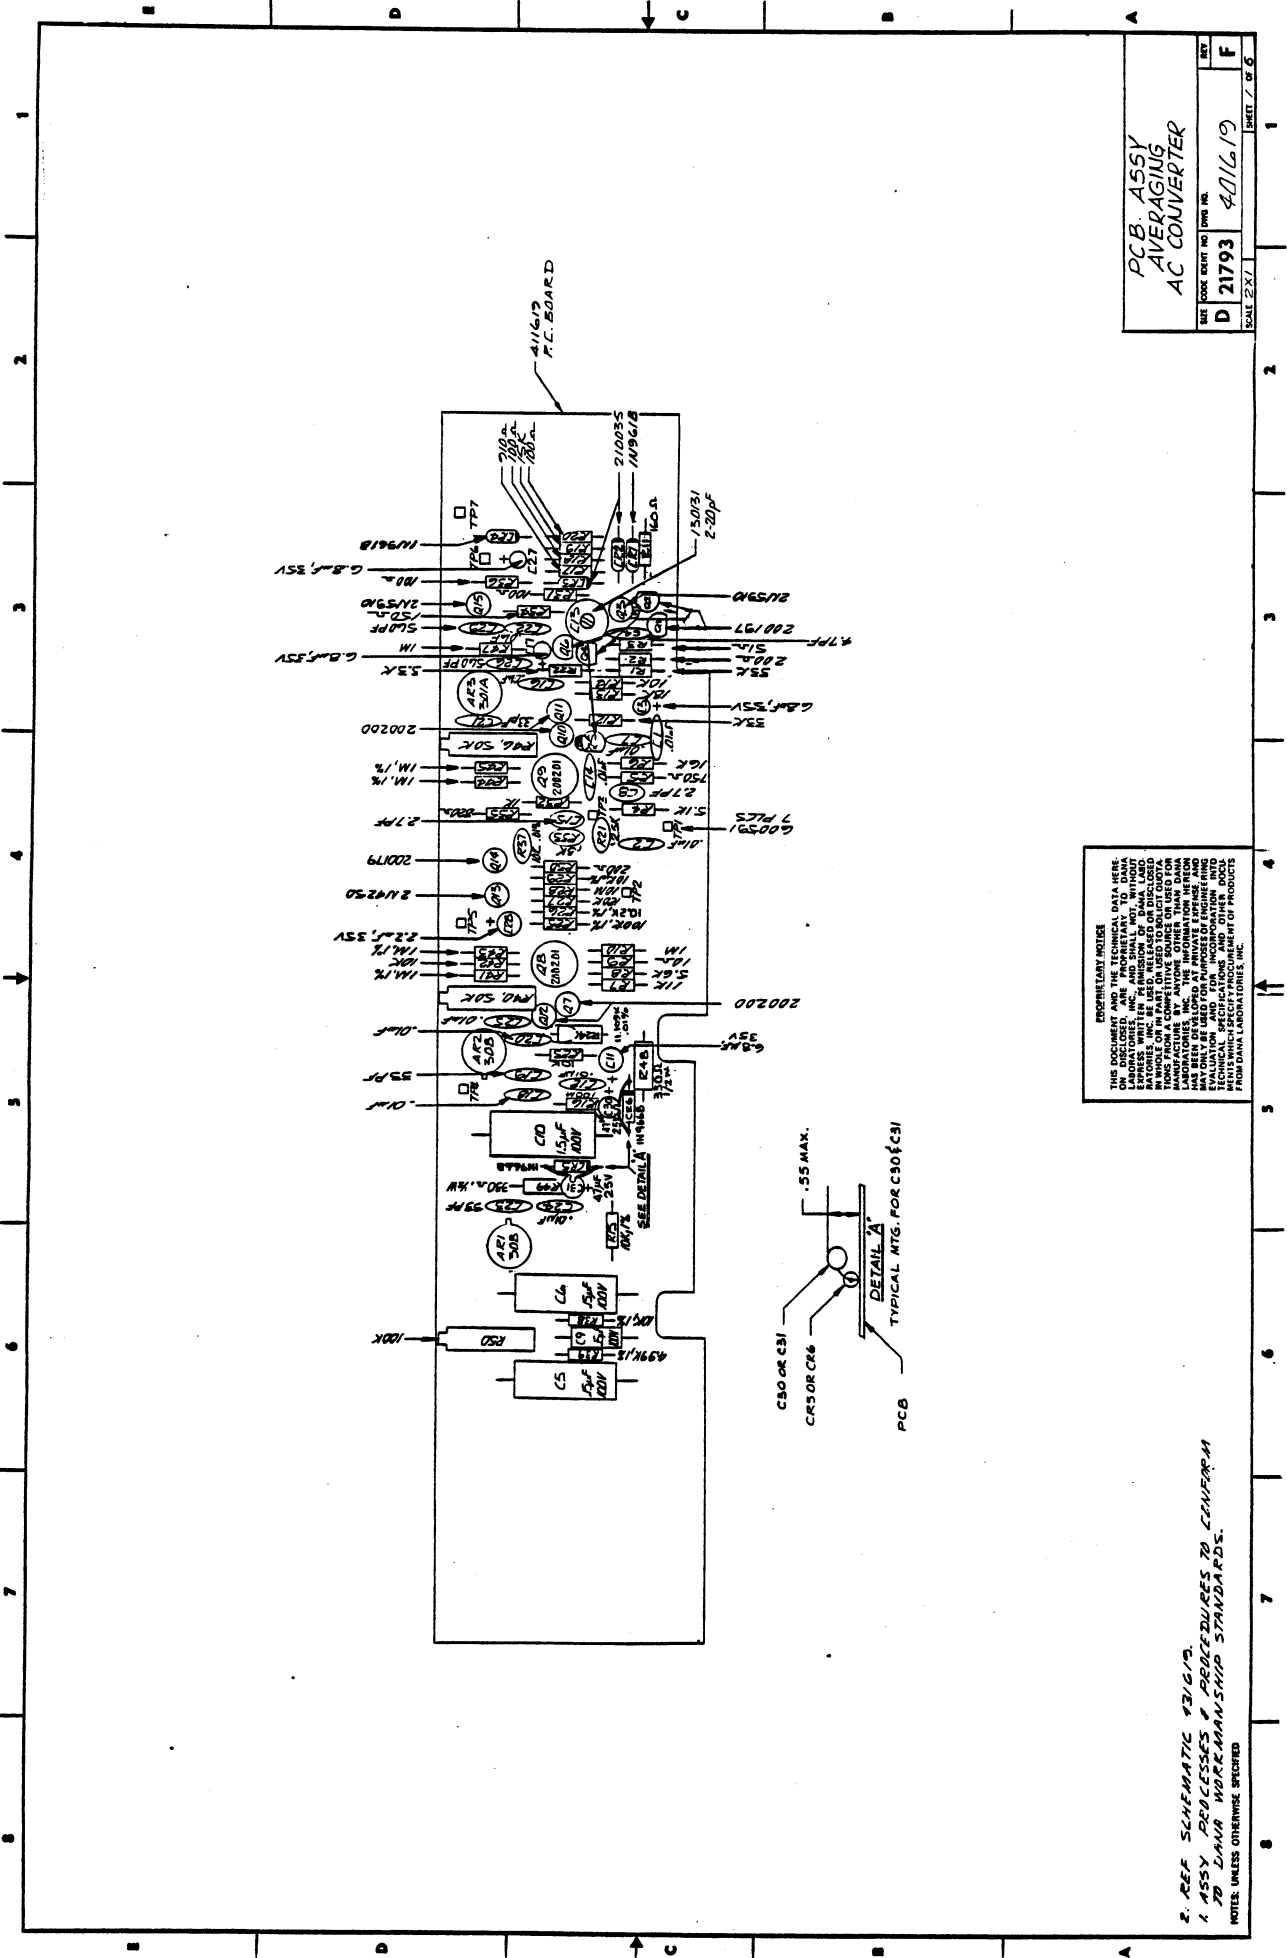


PCB ASSY
AVERAGING
AC CONVERTER

REV. 1
D 21793 401619
SCALE 2X/1 SHEET 7 OF 6

EXPERIMENTAL NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE AND SHALL NOT, WITHOUT THE EXPRESS WRITTEN PERMISSION OF THE NATIONAL ARCHIVES, BE REPRODUCED OR DISCLOSED TO ANY OTHER PERSON OR ORGANIZATION. THIS NOTICE IS APPLICABLE TO ALL INFORMATION CONTAINED HEREIN, INCLUDING ANY INFORMATION THAT MAY BE DISCLOSED TO ANY OTHER PERSON OR ORGANIZATION BY ANYONE OTHER THAN THE NATIONAL ARCHIVES. THIS NOTICE DOES NOT APPLY TO INFORMATION THAT HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND IS NOT BEING RELEASED FOR INCORPORATION INTO ANY OTHER PRODUCT OR PROCESS OF THE NATIONAL ARCHIVES. FROM DANA LABORATORIES, INC.

2. REF SCHEMATIC 431619
1 ASSY PROCESSES & PROCEDURES TO CONFORM
1 PCB DANA WORKMANSHIP STANDARDS.
NOTE: UNLESS OTHERWISE SPECIFIED

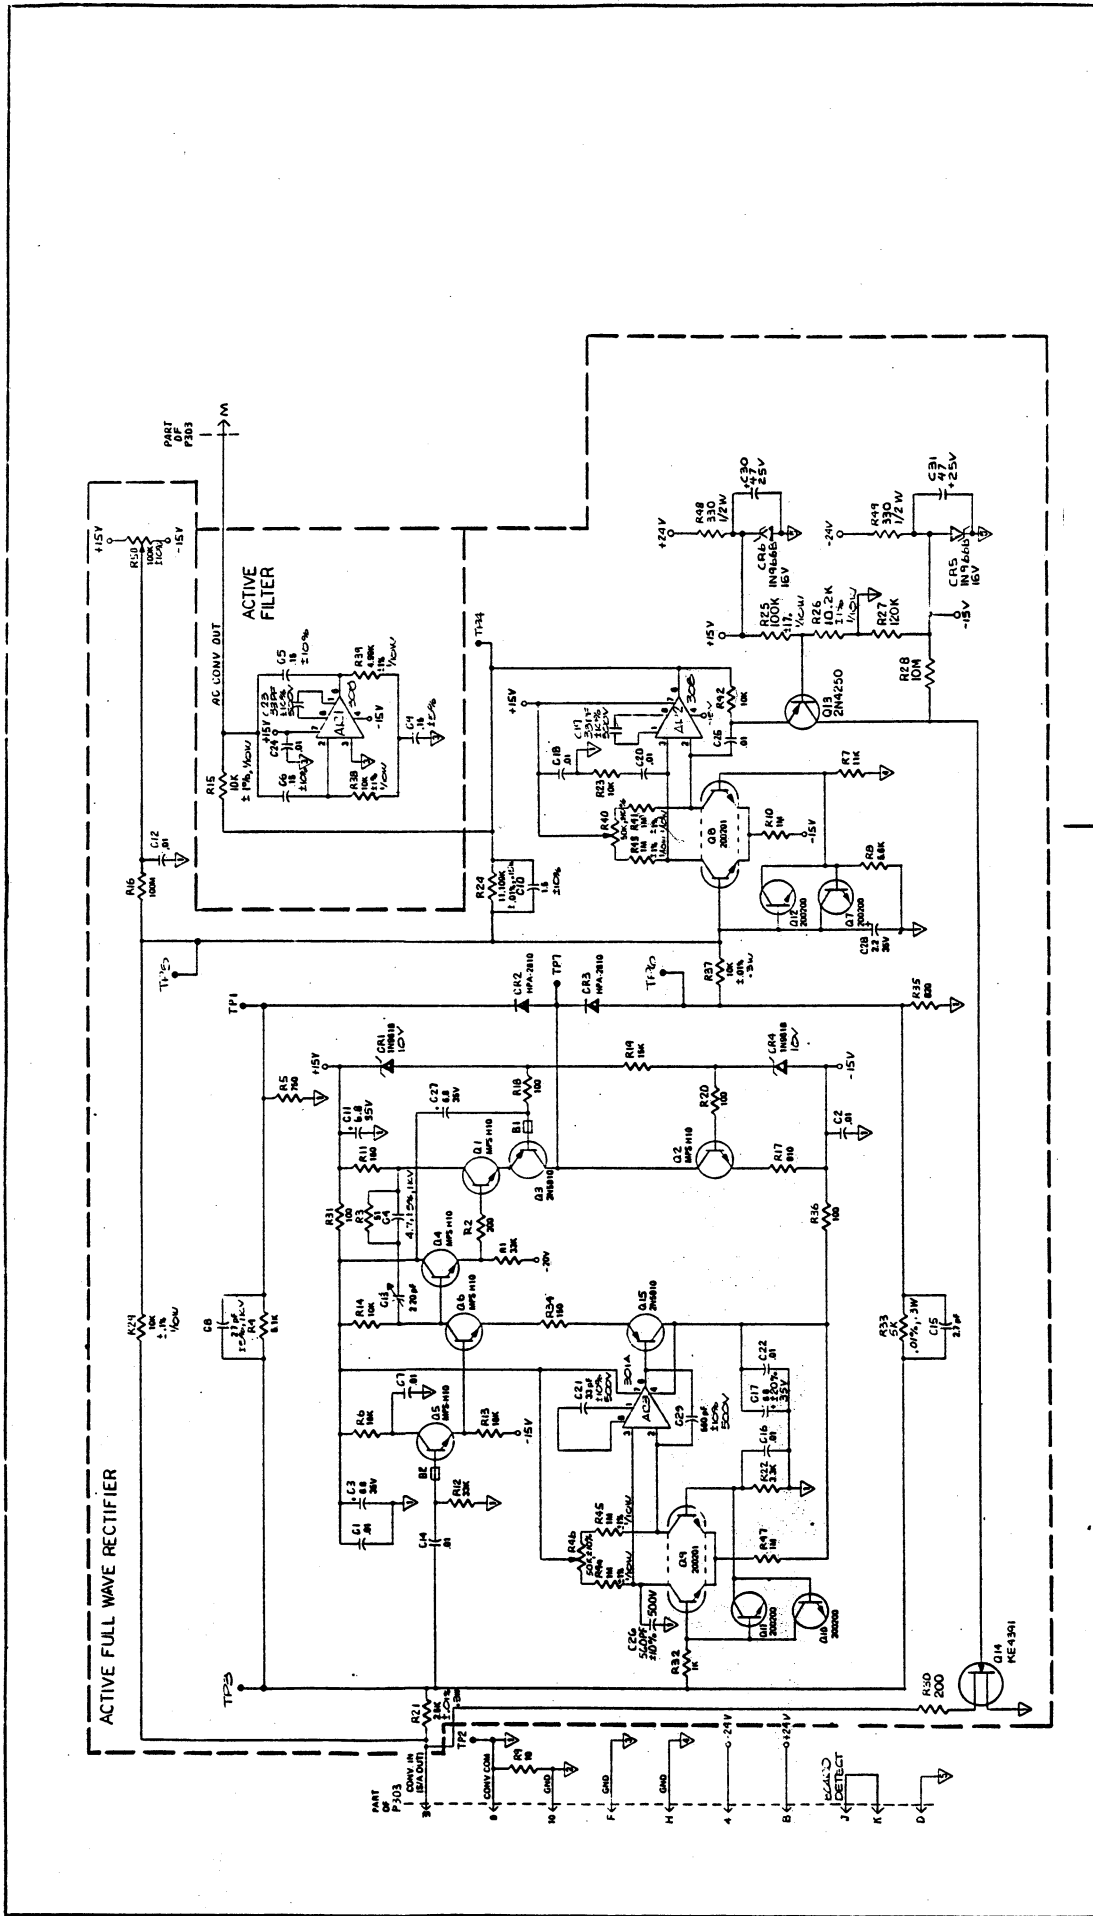

SCHEMATIC -
AC CONVERTER,
AVERAGING


SHEET CODE IDENT NO DWG NO 431619

D 21793

REV D

| REV | DATE | BY | CHKD | DESCRIPTION |
|-----|------|----|------|-------------|
| 1 | | | | DESIGNED |
| 2 | | | | REVISED |
| 3 | | | | REVISED |
| 4 | | | | REVISED |
| 5 | | | | REVISED |
| 6 | | | | REVISED |
| 7 | | | | REVISED |
| 8 | | | | REVISED |
| 9 | | | | REVISED |
| 10 | | | | REVISED |


3 ASST. ENGR. (10/1/63)
 2 CAPACITORS ARE 10% TOL. 1% 50% TOL. 1% 10% TOL.
 1 RESISTORS ARE IN OHMS UNLESS OTHERWISE SPECIFIED
 NOTES UNLESS OTHERWISE SPECIFIED

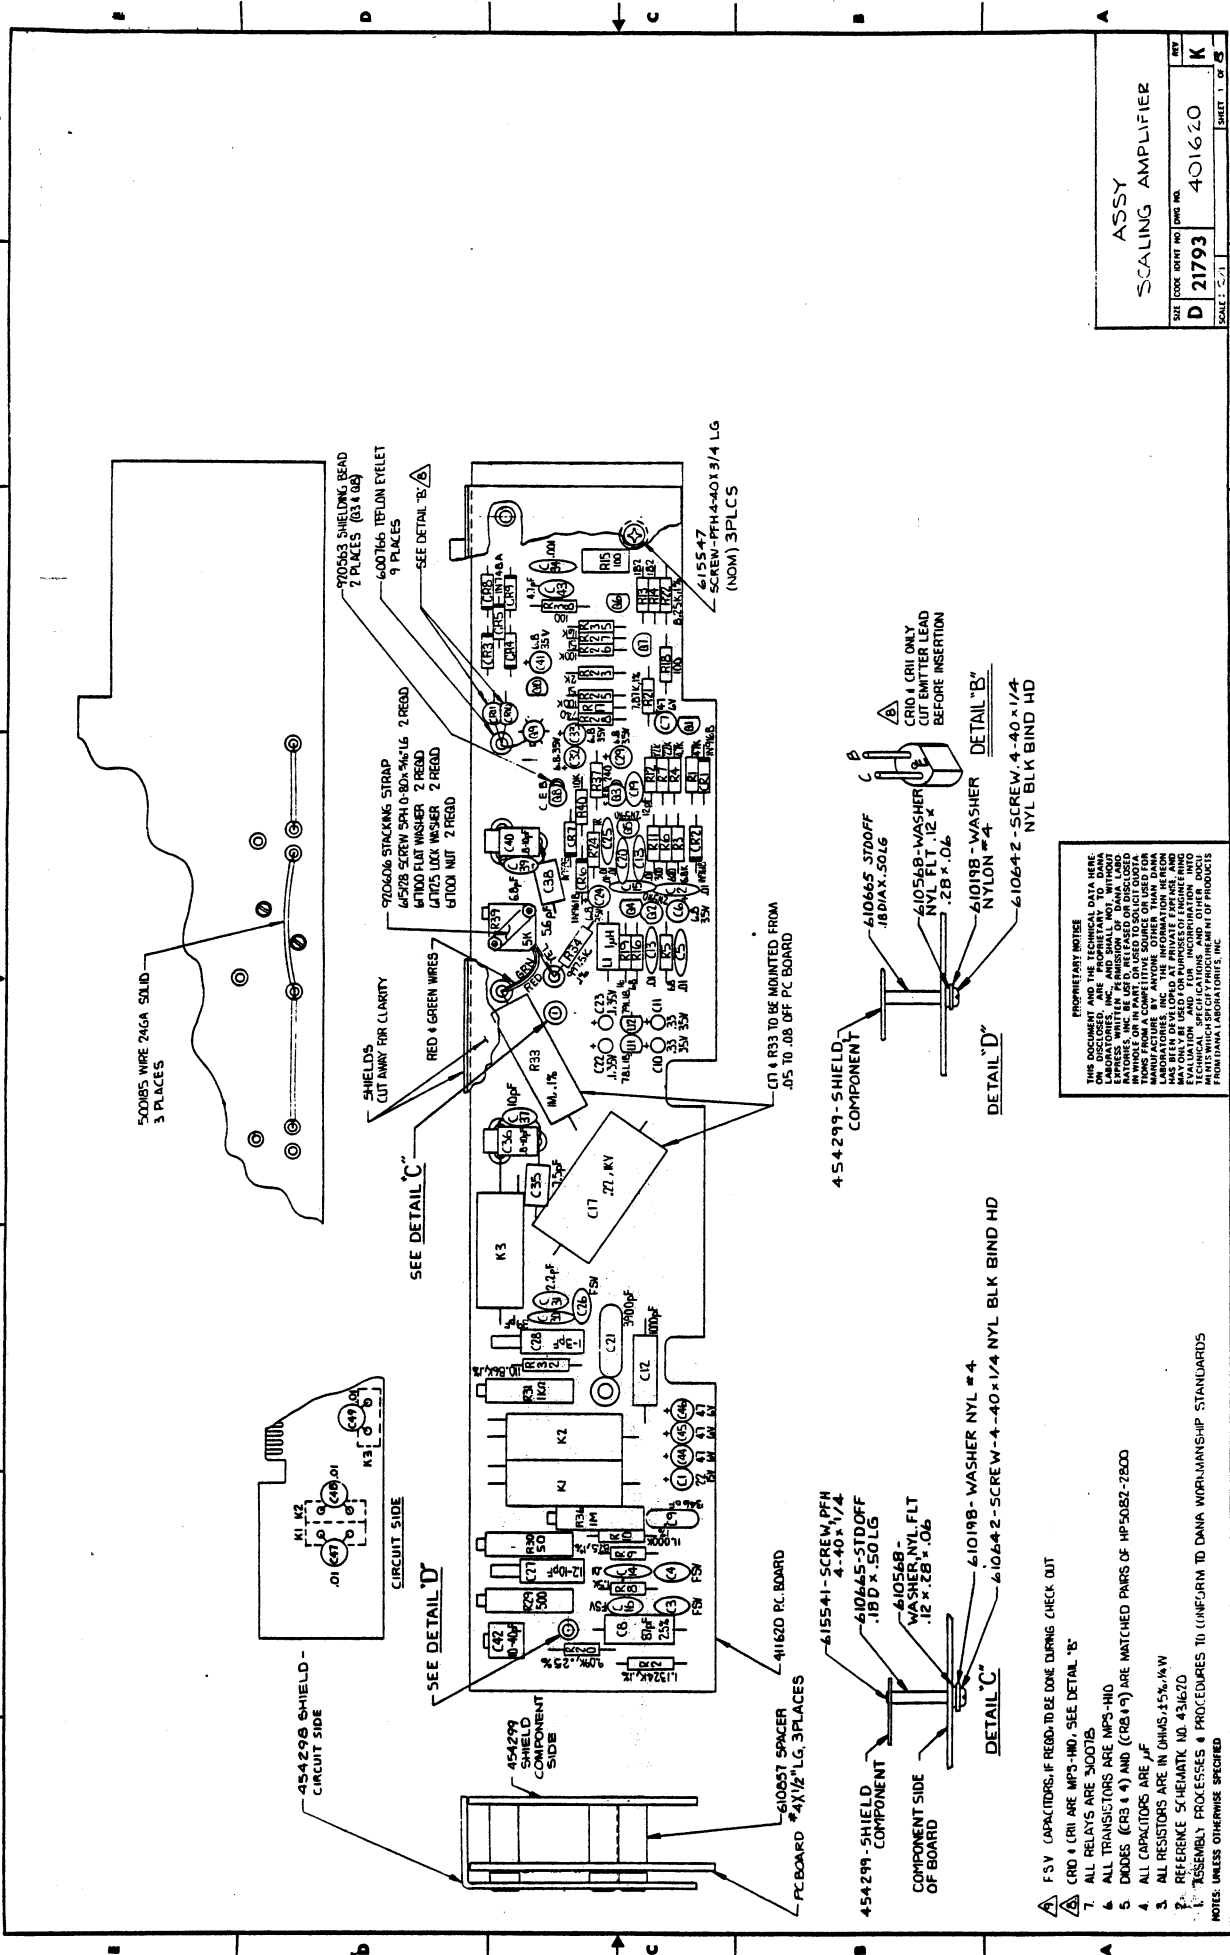

| | | | |
|------------|---------|-------------------|--------|
| ASSY | | SCALING AMPLIFIER | |
| SHEET NO. | D 21793 | DWG NO. | 401620 |
| SCALE: 1:1 | | SHEET 1 OF 3 | |


PROPRIETARY NOTICE
 THIS DOCUMENT IS UNCLASSIFIED
 UNLESS INDICATED OTHERWISE
 ANY INFORMATION CONTAINED
 HEREIN IS UNCLASSIFIED
 DATE 08-14-2010 BY 60322
 (U)

- NOTES: UNLESS OTHERWISE SPECIFIED
- F V CAPACITORS, IF REQ'D, TO BE DONE DURING CHECK OUT
 - CR10 CRU ARE MPS-HND, SEE DETAIL 'B'
 - ALL RELAYS ARE 300T5
 - DODGES (CR3 & 4) AND (CR2 & 3) ARE MATCHED PAIRS OF HP5082-2800
 - ALL CAPACITORS ARE JAF
 - ALL RESISTORS ARE IN OHMS, ±5% 1/4W
 - REFERENCE SCHEMATIC NO. 431620
 - ASSEMBLY PROCESSES & PROCEDURES TO (UNIFORM TO DANA WORKMANSHIP STANDARDS

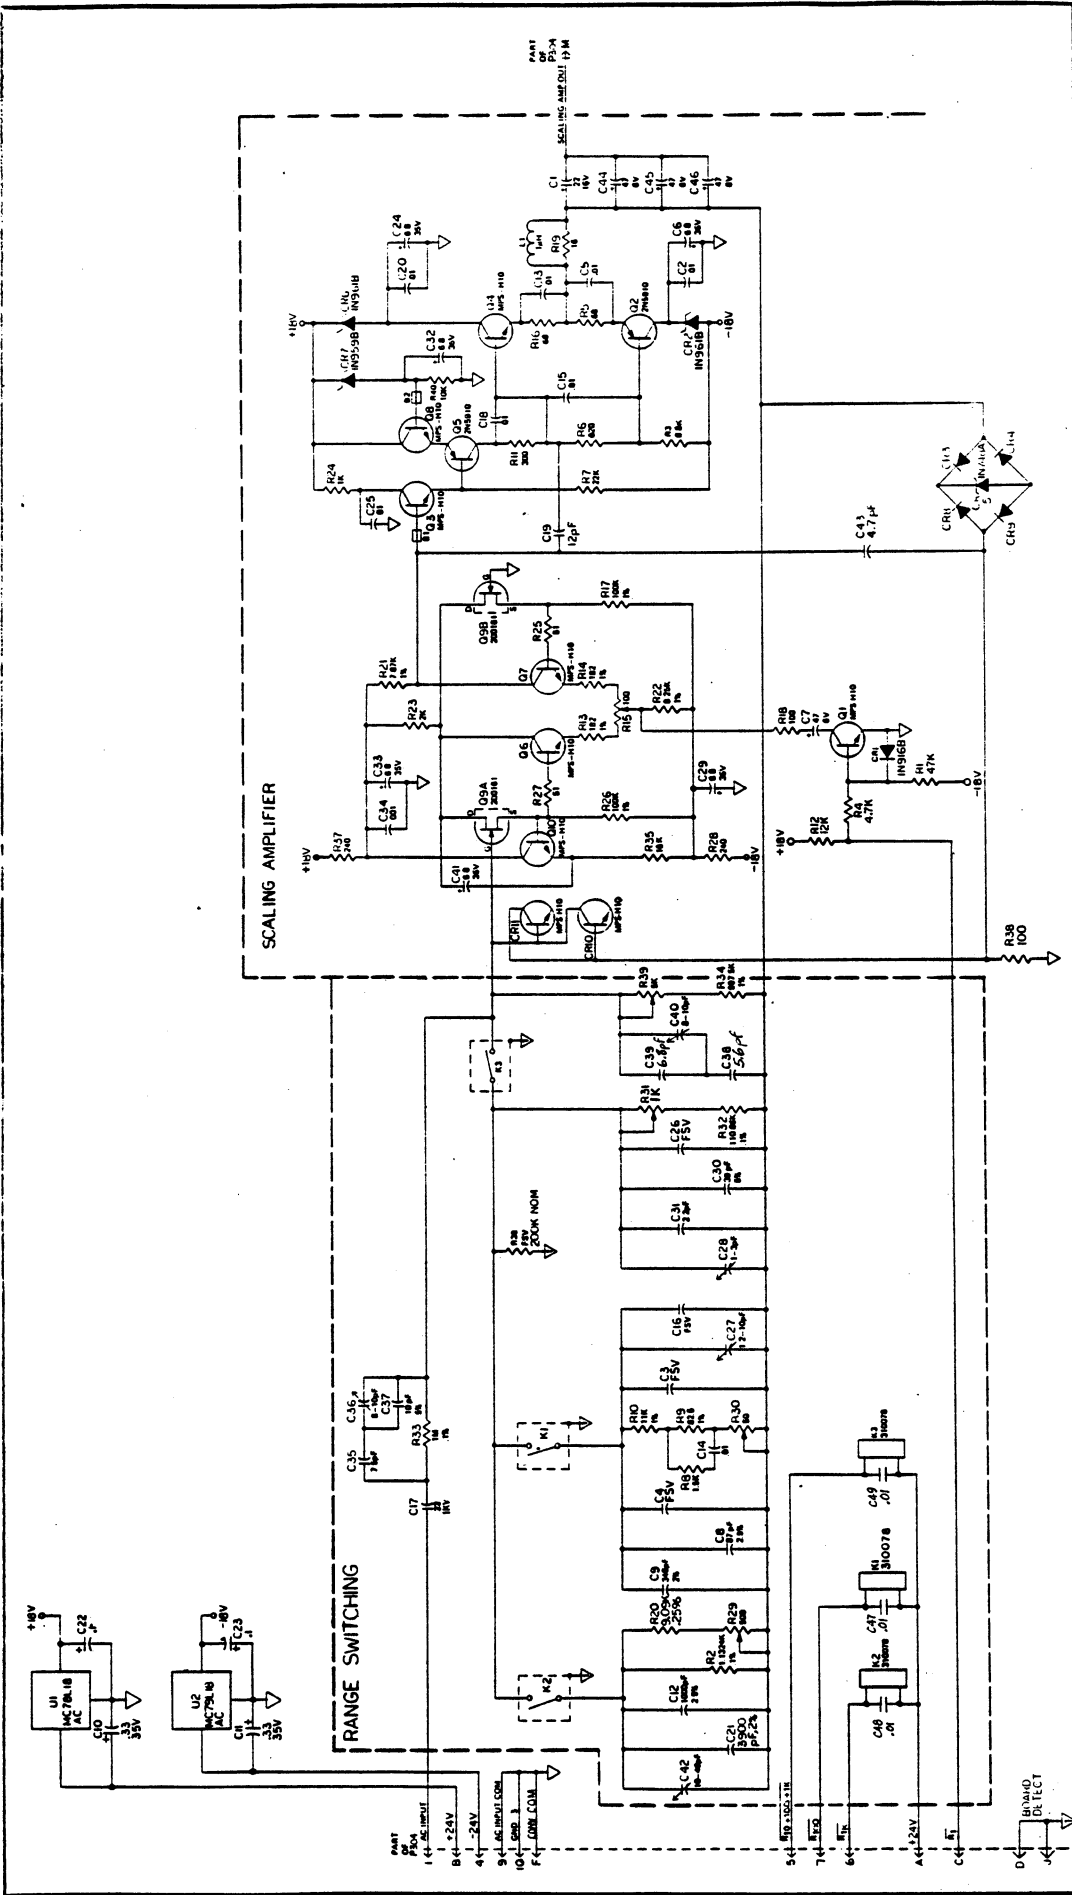

| | |
|-------------------|-----------|
| SCHEMATIC - | |
| SCALING AMPLIFIER | |
| REV | D |
| DATE | 11-11-61 |
| SIZE CODE | REV NO |
| D 21793 | -1.31x.20 |
| SHEET 1 OF 1 | |


- 4 CR3, CR4, CR8 AND CR9 ARE MATCHED PAIRS OF MP5082-28000 DUODES
 - 3 ASSSEMBLY 401620
 - 2 CAPACITORS ARE IN μF
 - 1 RESISTORS ARE IN OHMS, 1%, 1/4W
- NOTES UNLESS OTHERWISE SPECIFIED

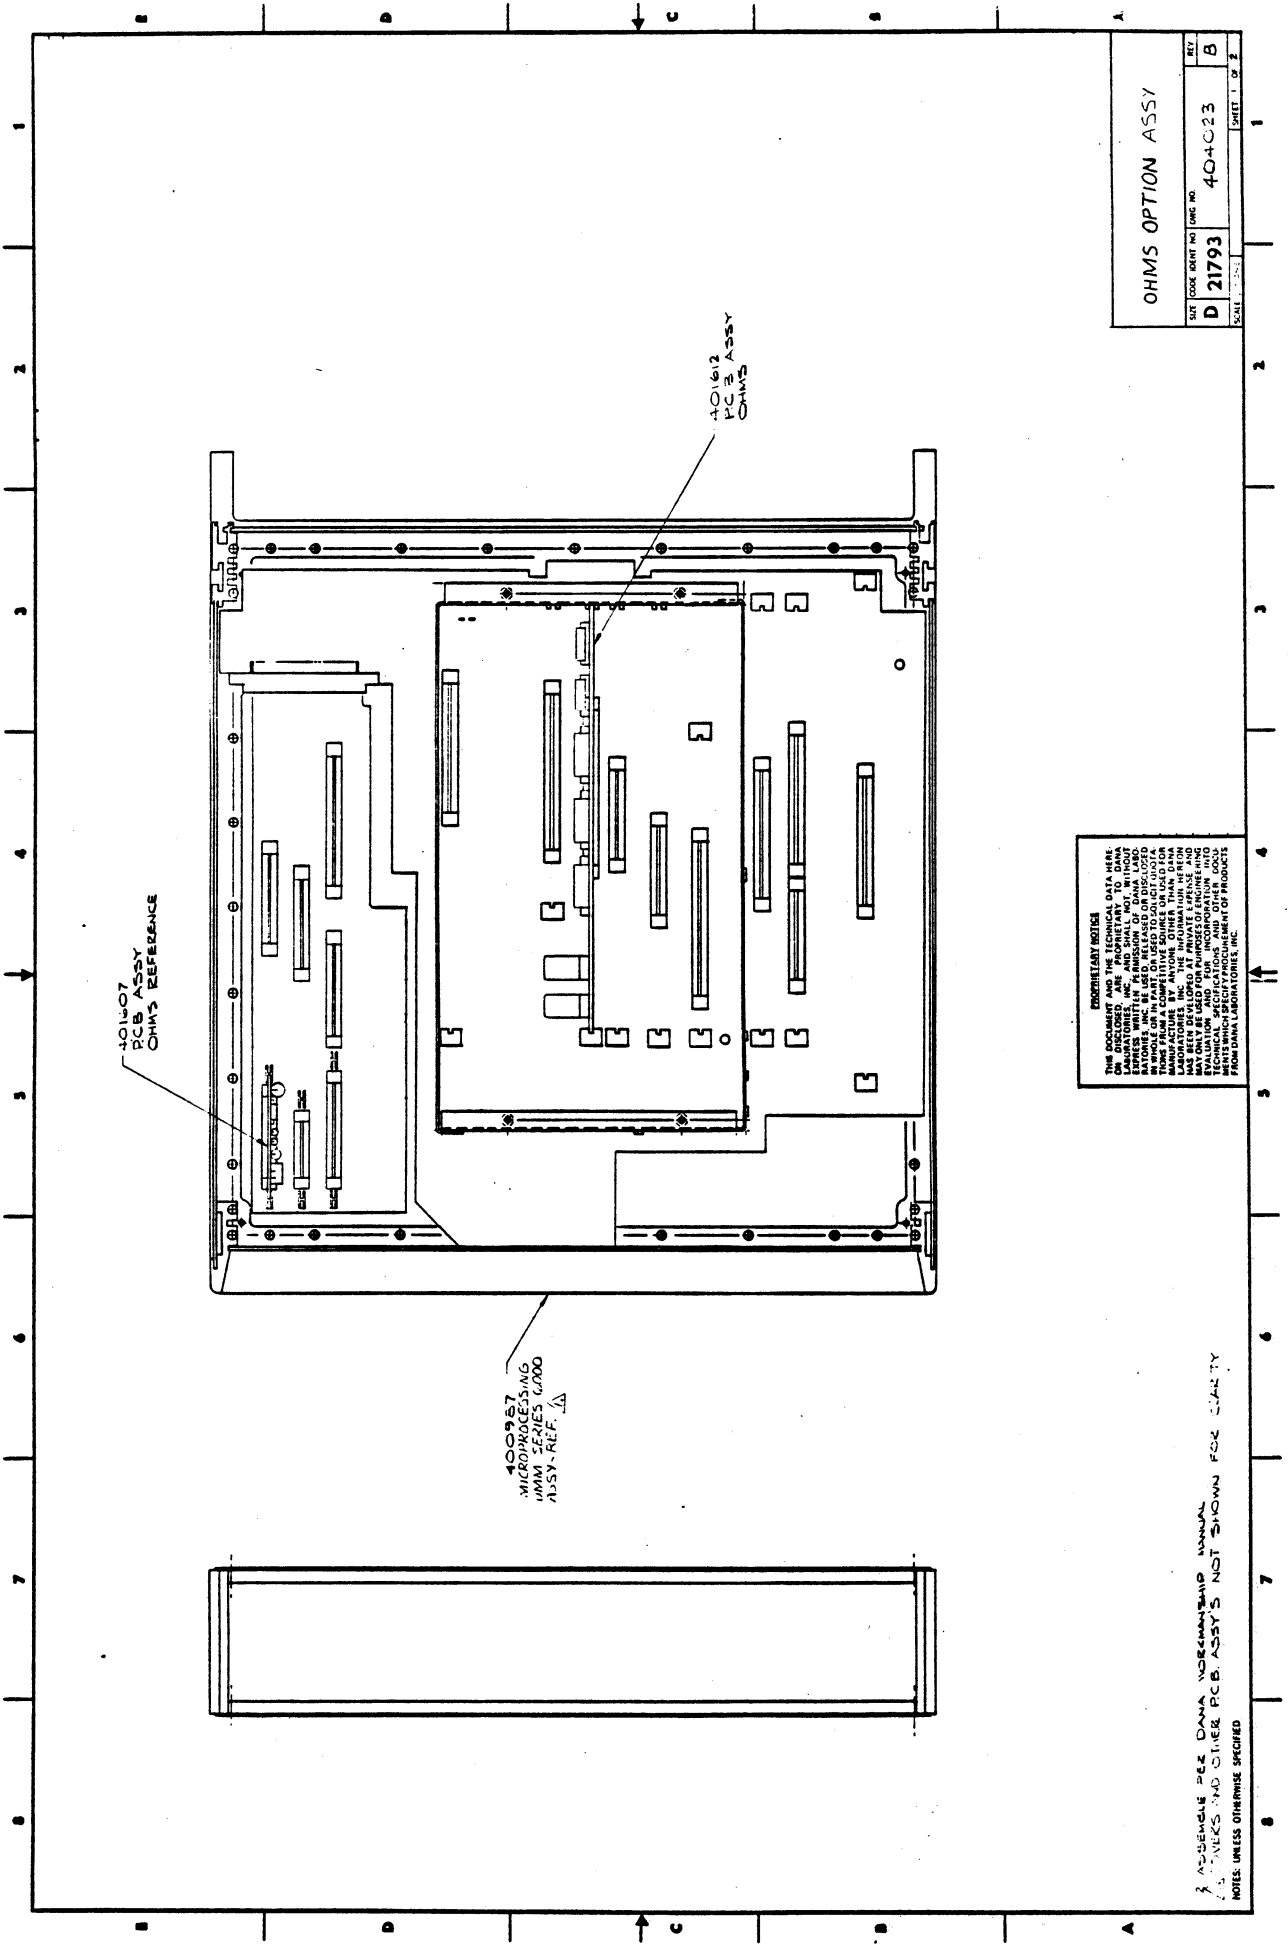

| | |
|------------------|----------|
| OHMS OPTION ASSY | |
| SIZ | 404-C-23 |
| D | 21793 |
| REV | B |
| SHEET 1 OF 2 | |

PROPRIETARY NOTICE
 THE INFORMATION CONTAINED HEREIN IS UNCLASSIFIED AND IS IN THE PUBLIC DOMAIN. IT IS THE PROPERTY OF DANA LABORATORIES, INC. AND IS NOT TO BE REPRODUCED, COPIED, OR DISCLOSED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. THIS INFORMATION IS THE PROPERTY OF DANA LABORATORIES, INC. AND IS NOT TO BE REPRODUCED, COPIED, OR DISCLOSED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. THIS INFORMATION IS THE PROPERTY OF DANA LABORATORIES, INC. AND IS NOT TO BE REPRODUCED, COPIED, OR DISCLOSED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC.


3 ASSEMBLE PER DANA INSTRUMENTS MANUAL
 4 UNLESS NOTED OTHERWISE PCB ASSY'S NOT SHOWN FOR CLARITY
 NOTES: UNLESS OTHERWISE SPECIFIED

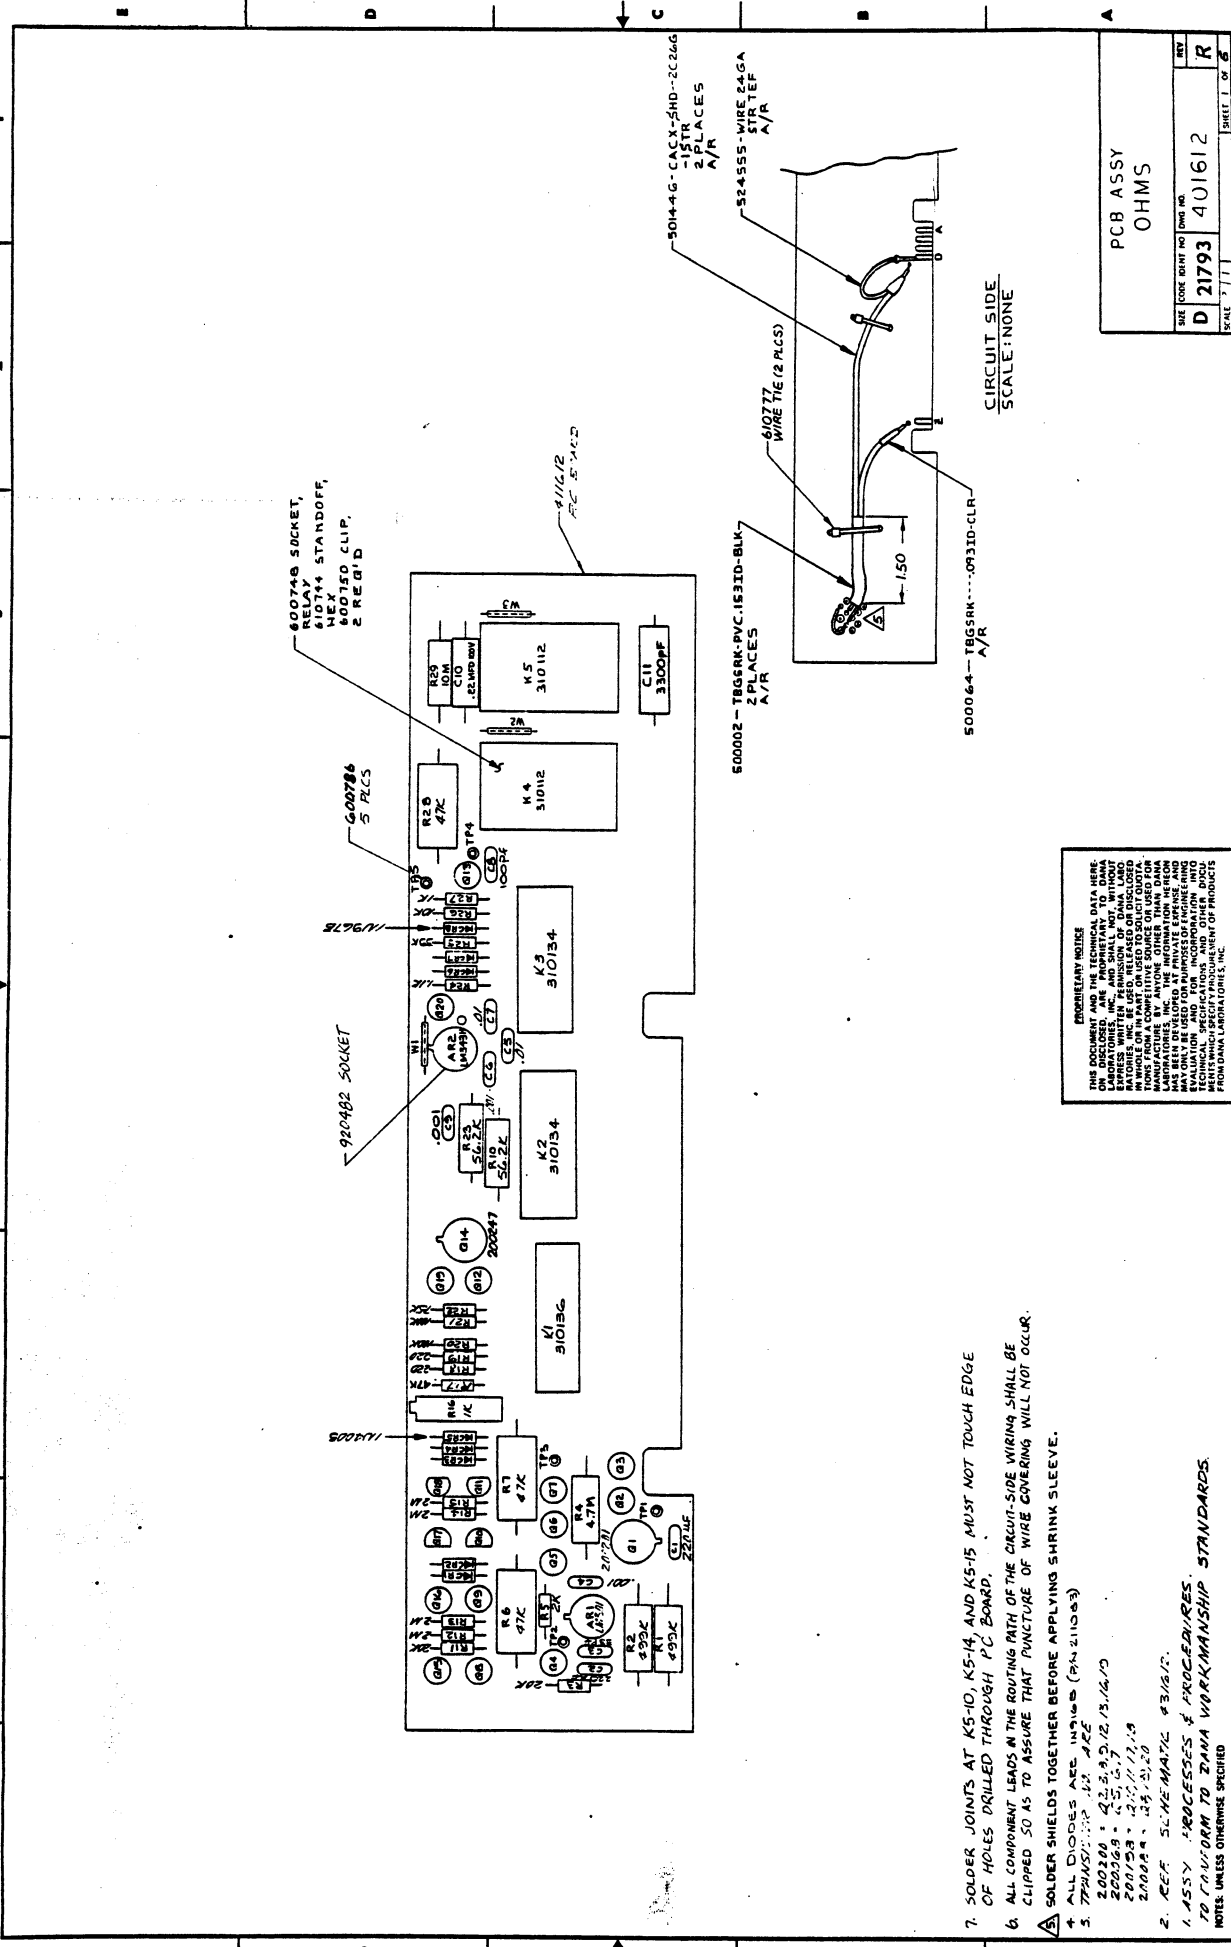

| | |
|------------------|---------|
| PCB ASSY OHMS | |
| REV | D 21793 |
| DATE | 401612 |
| SCALE | 1 OF 6 |

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE DATA HEREON DISCLOSED ARE PROPRIETARY TO DANA LABORATORIES, INC. AND SHALL NOT BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE, AND IS NOT TO BE DISCLOSED OR INCORPORATED INTO ANY OTHER PRODUCT OR PROCESS, WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC.

- SOLDER JOINTS AT K5-10, K5-14, AND K5-15 MUST NOT TOUCH EDGE OF HOLES DRILLED THROUGH PC BOARD.
- ALL COMPONENT LEADS IN THE ROUTING PATH OF THE CIRCUIT-SIDE WIRING SHALL BE CLIPPED SO AS TO ASSURE THAT PUNCTURE OF WIRE COVERING WILL NOT OCCUR.
- SOLDER SHIELDS TOGETHER BEFORE APPLYING SHRINK SLEEVE.
- ALL DIODES ARE 1N4148 (P/N 211003)
- TRANSISTOR IS 2N4301 (P/N 211003)
- 200200 - 42.5, 4.0, 12/13/67
- 200201 - 4.5, 5.7
- 200202 - 4.5, 11/17/69
- 200203 - 12/11/73
- 200204 - 12/11/73
- 200205 - 12/11/73
- 200206 - 12/11/73
- 200207 - 12/11/73
- 200208 - 12/11/73
- 200209 - 12/11/73
- 200210 - 12/11/73
- 200211 - 12/11/73
- 200212 - 12/11/73
- 200213 - 12/11/73
- 200214 - 12/11/73
- 200215 - 12/11/73
- 200216 - 12/11/73
- 200217 - 12/11/73
- 200218 - 12/11/73
- 200219 - 12/11/73
- 200220 - 12/11/73
- 200221 - 12/11/73
- 200222 - 12/11/73
- 200223 - 12/11/73
- 200224 - 12/11/73
- 200225 - 12/11/73
- 200226 - 12/11/73
- 200227 - 12/11/73
- 200228 - 12/11/73
- 200229 - 12/11/73
- 200230 - 12/11/73
- 200231 - 12/11/73
- 200232 - 12/11/73
- 200233 - 12/11/73
- 200234 - 12/11/73
- 200235 - 12/11/73
- 200236 - 12/11/73
- 200237 - 12/11/73
- 200238 - 12/11/73
- 200239 - 12/11/73
- 200240 - 12/11/73
- 200241 - 12/11/73
- 200242 - 12/11/73
- 200243 - 12/11/73
- 200244 - 12/11/73
- 200245 - 12/11/73
- 200246 - 12/11/73
- 200247 - 12/11/73
- 200248 - 12/11/73
- 200249 - 12/11/73
- 200250 - 12/11/73
- 200251 - 12/11/73
- 200252 - 12/11/73
- 200253 - 12/11/73
- 200254 - 12/11/73
- 200255 - 12/11/73
- 200256 - 12/11/73
- 200257 - 12/11/73
- 200258 - 12/11/73
- 200259 - 12/11/73
- 200260 - 12/11/73
- 200261 - 12/11/73
- 200262 - 12/11/73
- 200263 - 12/11/73
- 200264 - 12/11/73
- 200265 - 12/11/73
- 200266 - 12/11/73
- 200267 - 12/11/73
- 200268 - 12/11/73
- 200269 - 12/11/73
- 200270 - 12/11/73
- 200271 - 12/11/73
- 200272 - 12/11/73
- 200273 - 12/11/73
- 200274 - 12/11/73
- 200275 - 12/11/73
- 200276 - 12/11/73
- 200277 - 12/11/73
- 200278 - 12/11/73
- 200279 - 12/11/73
- 200280 - 12/11/73
- 200281 - 12/11/73
- 200282 - 12/11/73
- 200283 - 12/11/73
- 200284 - 12/11/73
- 200285 - 12/11/73
- 200286 - 12/11/73
- 200287 - 12/11/73
- 200288 - 12/11/73
- 200289 - 12/11/73
- 200290 - 12/11/73
- 200291 - 12/11/73
- 200292 - 12/11/73
- 200293 - 12/11/73
- 200294 - 12/11/73
- 200295 - 12/11/73
- 200296 - 12/11/73
- 200297 - 12/11/73
- 200298 - 12/11/73
- 200299 - 12/11/73
- 200300 - 12/11/73

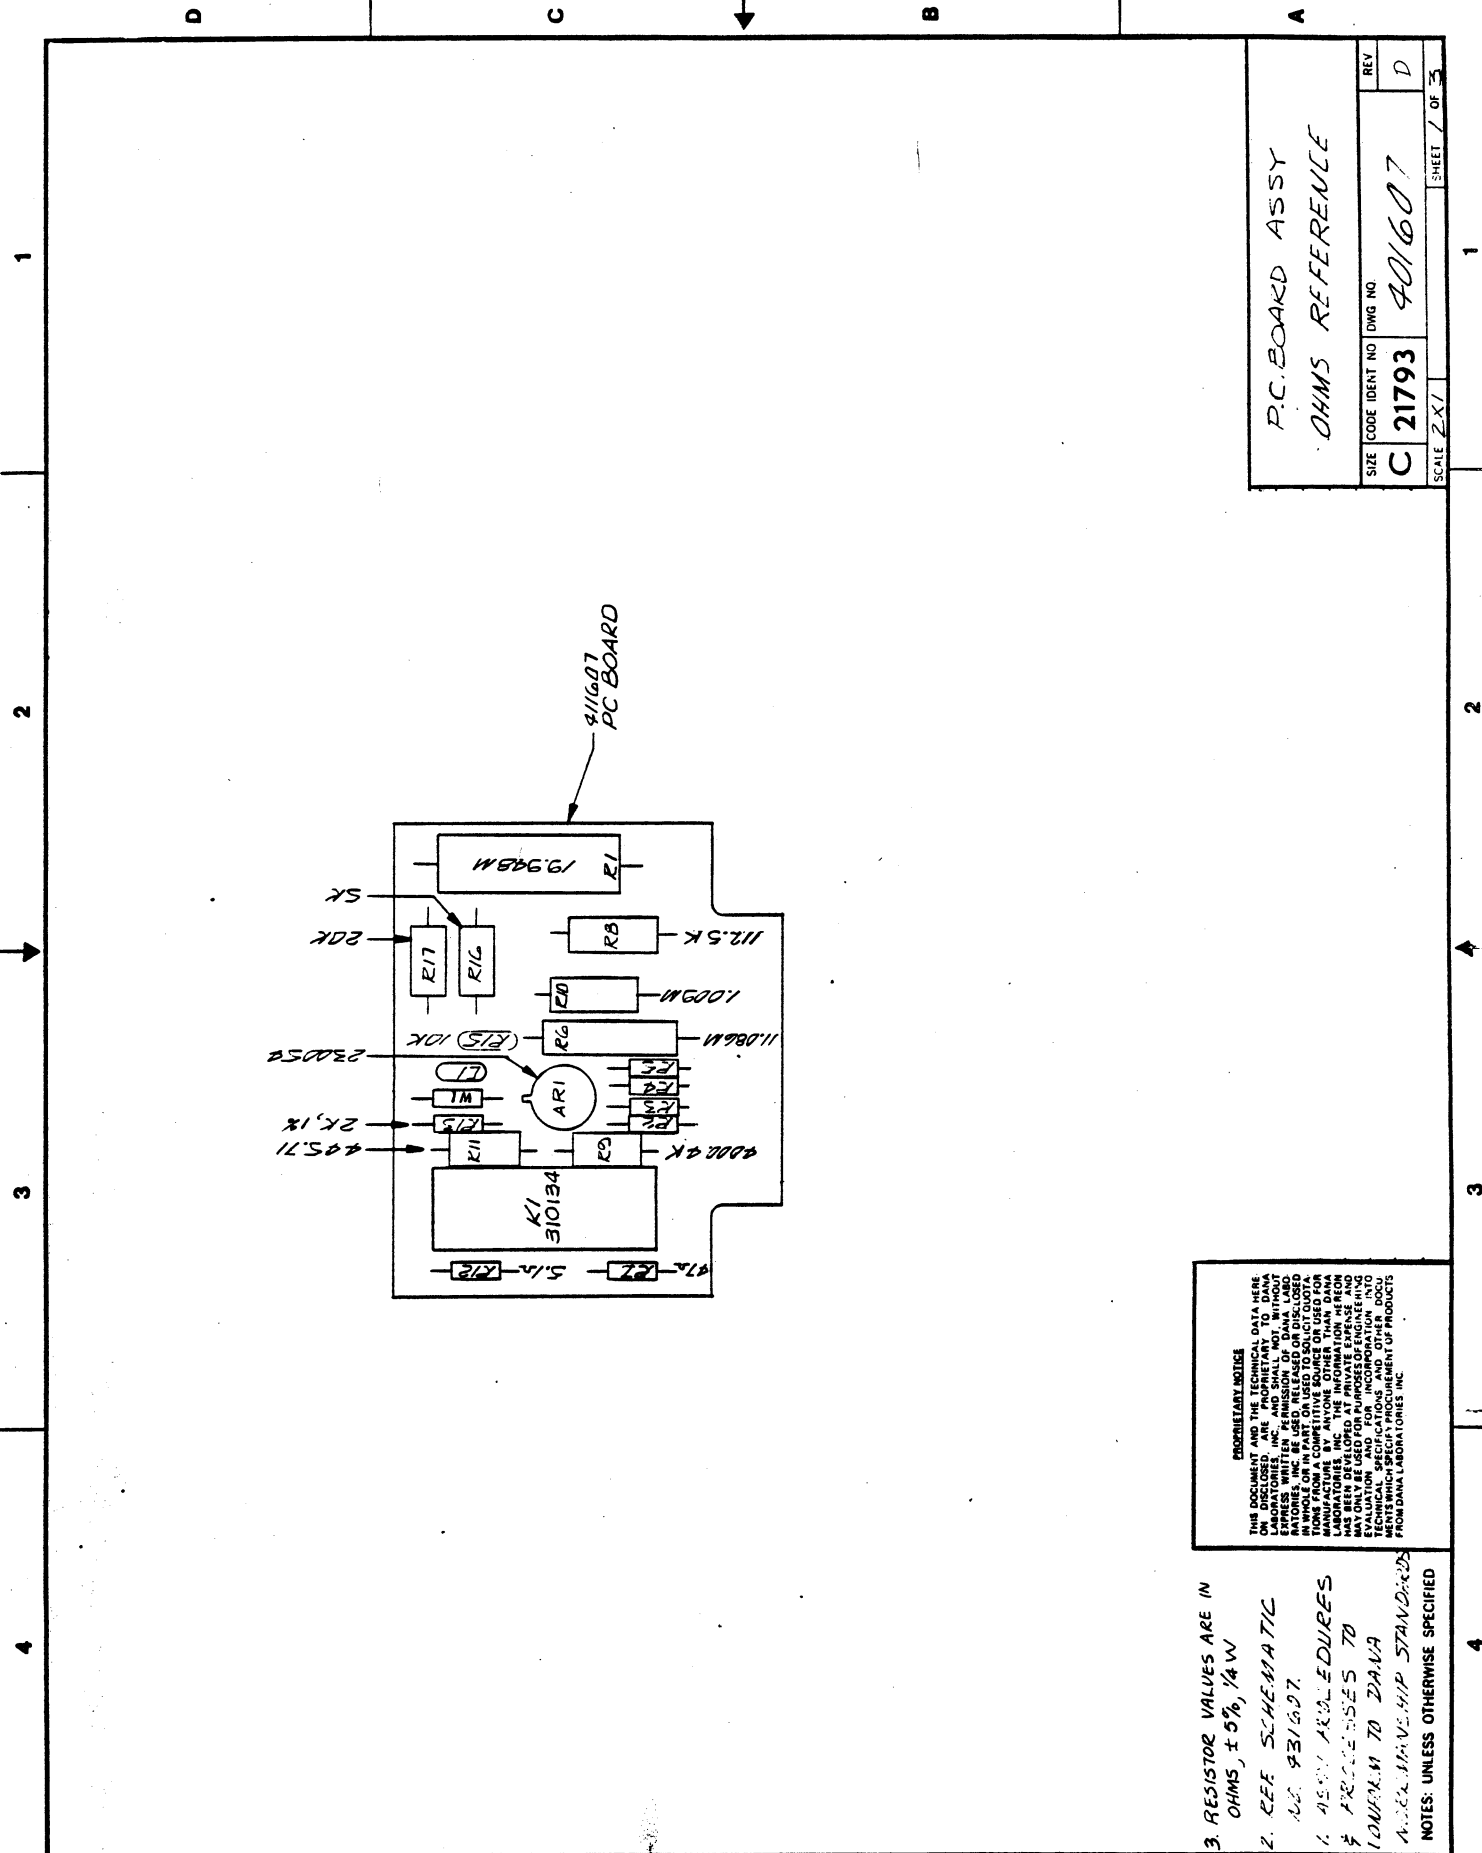


P.C. BOARD ASSY
DHMS REFERENCE

| | | | |
|-----------|---------------|--------|--------------|
| SIZE | CODE IDENT NO | DWG NO | REV |
| C | 21793 | 401607 | D |
| SCALE 2X1 | | | SHEET 1 OF 3 |

PROPRIETARY NOTICE
THIS DOCUMENT AND THE DATA HEREON DISCLOSED ARE PROPRIETARY TO DANA LABORATORIES, INC. AND SHALL NOT, WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. BE USED, REPRODUCED, COPIED, REPRODUCED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTES OR ORDERS FOR THE MANUFACTURE OF PRODUCTS OR SERVICES FROM DANA LABORATORIES, INC. THE INFORMATION HEREON IS UNCLASSIFIED AND IS NOT BEING EVALUATED FOR PROTECTION UNDER THE PROVISIONS OF THE NATIONAL ARCHIVES AND RECORDS ADMINISTRATION ACT OF 1950. THE INFORMATION IS BEING RELEASED TO THE PUBLIC AS A MATTER OF COURTESY AND DOES NOT CONSTITUTE AN ENDORSEMENT OF PRODUCTS FROM DANA LABORATORIES, INC.

3. RESISTOR VALUES ARE IN OHMS, ±5%, 1/4 W
2. REF SCHEMATIC NO. 931607.
1. ALL DIMENSIONS TO LOWER LIMITS UNLESS OTHERWISE SPECIFIED

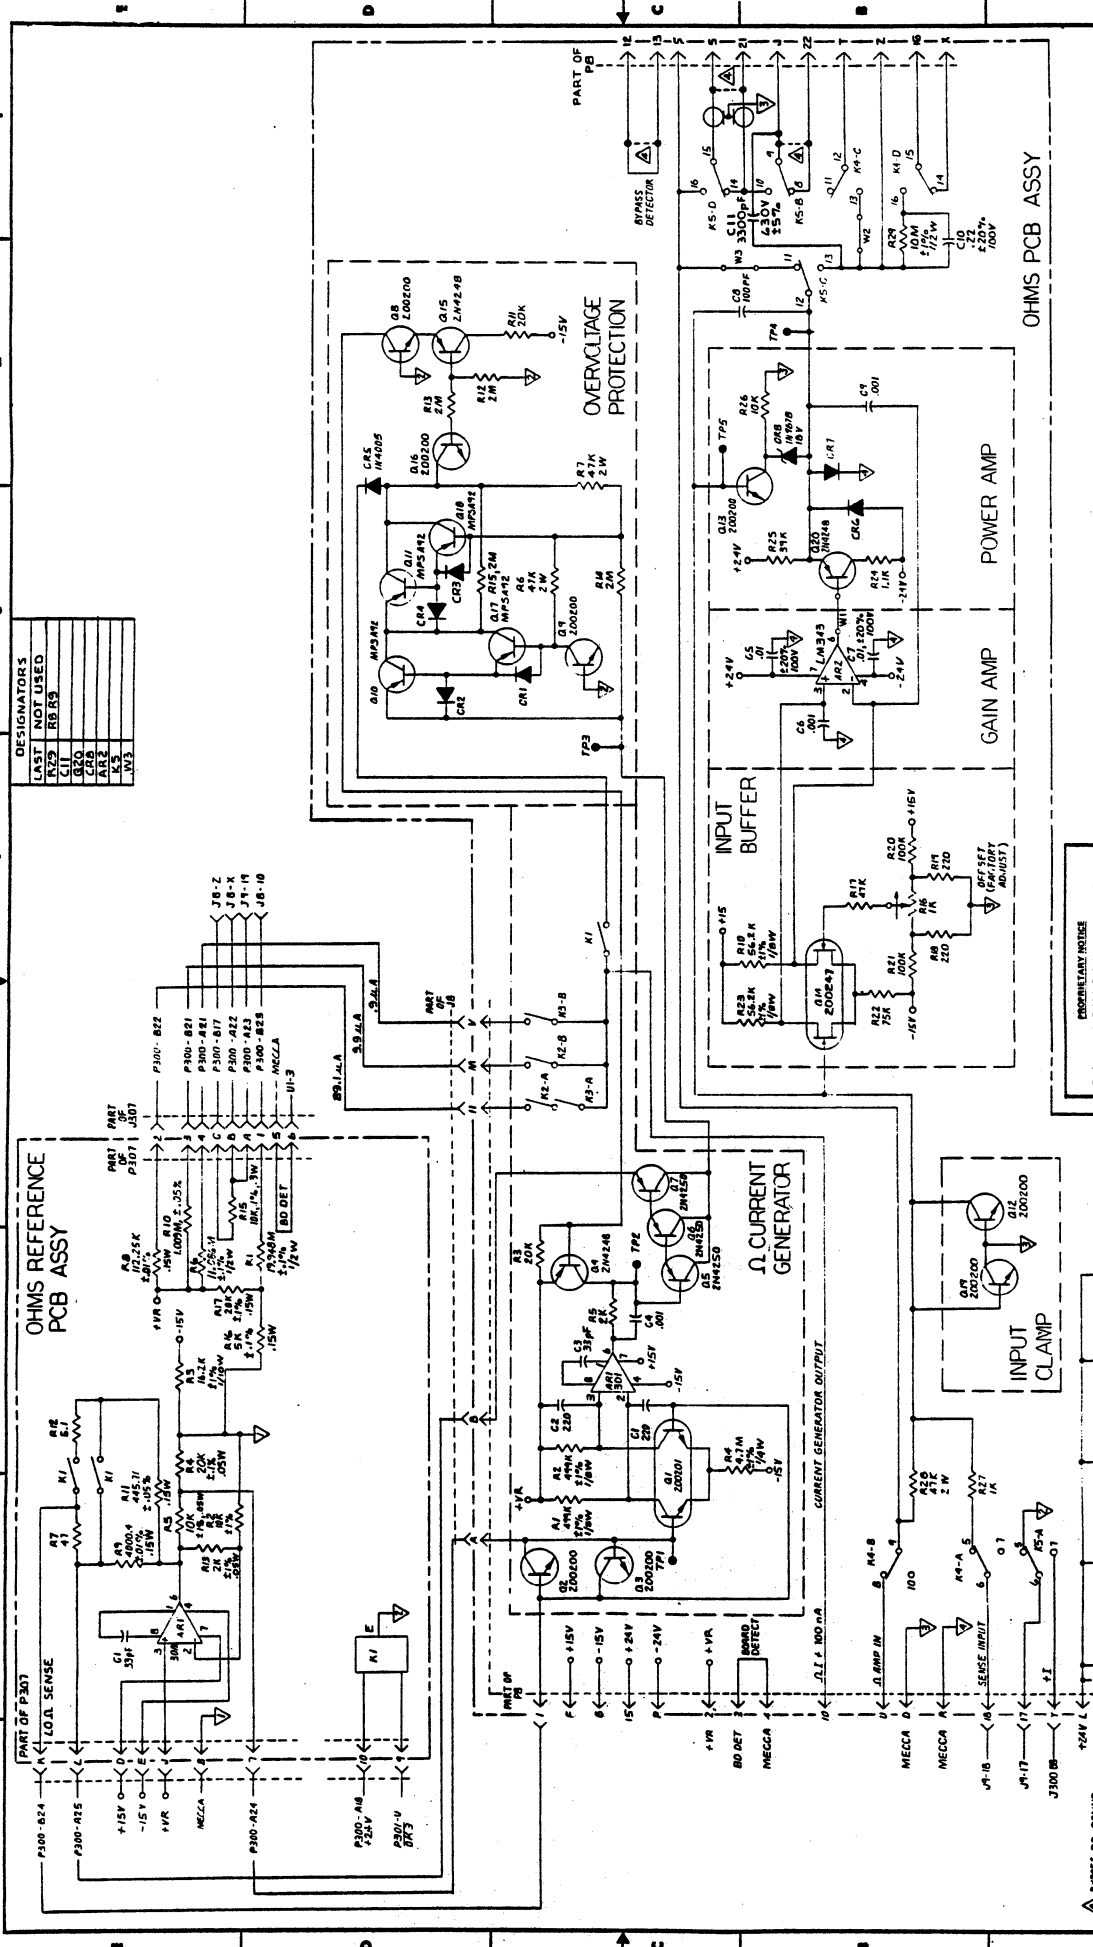

DESIGNATORS

| |
|---------------|
| LAST NOT USED |
| R25 REB-5 |
| C11 |
| C20 |
| C28 |
| C29 |
| C30 |
| C31 |
| C32 |
| C33 |
| C34 |
| C35 |
| C36 |
| C37 |
| C38 |
| C39 |
| C40 |
| C41 |
| C42 |
| C43 |
| C44 |
| C45 |
| C46 |
| C47 |
| C48 |
| C49 |
| C50 |
| C51 |
| C52 |
| C53 |
| C54 |
| C55 |
| C56 |
| C57 |
| C58 |
| C59 |
| C60 |
| C61 |
| C62 |
| C63 |
| C64 |
| C65 |
| C66 |
| C67 |
| C68 |
| C69 |
| C70 |
| C71 |
| C72 |
| C73 |
| C74 |
| C75 |
| C76 |
| C77 |
| C78 |
| C79 |
| C80 |
| C81 |
| C82 |
| C83 |
| C84 |
| C85 |
| C86 |
| C87 |
| C88 |
| C89 |
| C90 |
| C91 |
| C92 |
| C93 |
| C94 |
| C95 |
| C96 |
| C97 |
| C98 |
| C99 |
| C100 |

OHMS PCB ASSY

SCHEMATIC- OHMS

DATE: 06/19/73

SCALE: 1/8" = 1"


DESIGN NO: 431612

SHEET 1 OF 7

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. THIS DOCUMENT IS THE PROPERTY OF RANDOLPH LABORATORIES, INC. AND SHALL NOT BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF RANDOLPH LABORATORIES, INC. THIS DOCUMENT IS THE PROPERTY OF RANDOLPH LABORATORIES, INC. AND SHALL NOT BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF RANDOLPH LABORATORIES, INC.

- 1. BYPASS BD CONNS
- 2. DIODES ARE W118
- 3. CAPS (100'S ARE IN MICROFARADS)
- 4. CAPS (20'S ARE IN MICROFARADS)
- 5. CAPS (10'S ARE IN MICROFARADS)
- 6. RESISTOR VALUES ARE IN OHMS UNLESS OTHERWISE SPECIFIED
- 7. 2.5% 1/4W

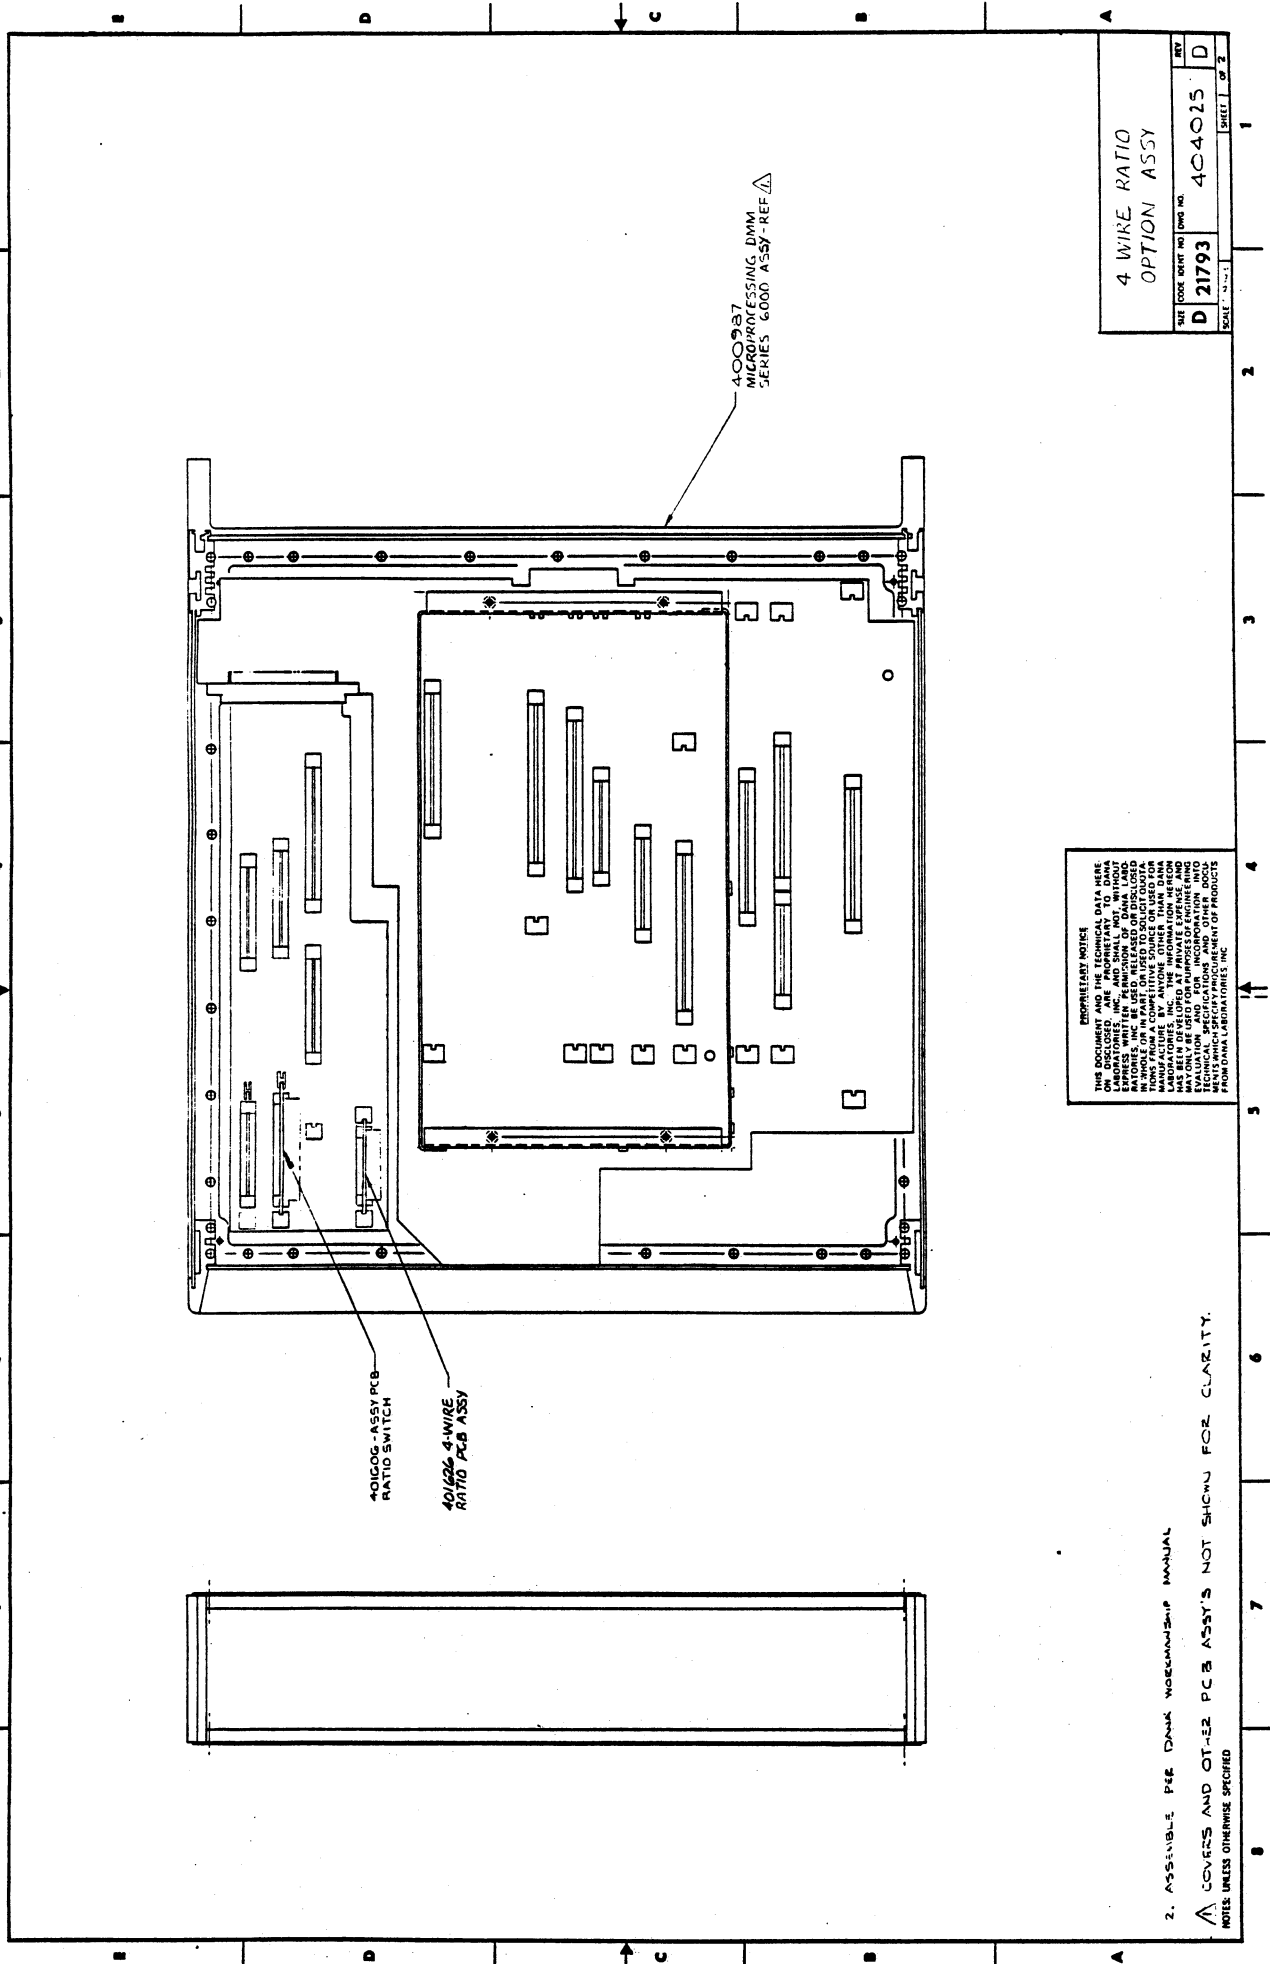

4 WIRE RATIO
OPTION ASSY

REV D

SIZE (DRAWING NO) (DWG NO) D 21793

SCALE: 3/16" = 1"

SHEET 1 OF 2

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. THIS DOCUMENT IS THE PROPERTY OF RANDOLPH LABORATORIES, INC. AND SHALL NOT BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE EXPRESS WRITTEN PERMISSION OF RANDOLPH LABORATORIES, INC. THIS DOCUMENT IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. THIS DOCUMENT IS THE PROPERTY OF RANDOLPH LABORATORIES, INC. AND SHALL NOT BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE EXPRESS WRITTEN PERMISSION OF RANDOLPH LABORATORIES, INC.

40100G-ASSY PCB
RATIO SWITCH

40162G 4-WIRE
RATIO PCB ASSY

400937
MICROPROCESSING DMM
SERIES 6000 ASSY-REF

2. ASSEMBLE PER DATA WORKMANSHIP MANUAL

COVERS AND OT-22 PCB ASSY'S NOT SHOWN FOR CLARITY.
NOTES UNLESS OTHERWISE SPECIFIED

D

C

B


A

1

2

3

4

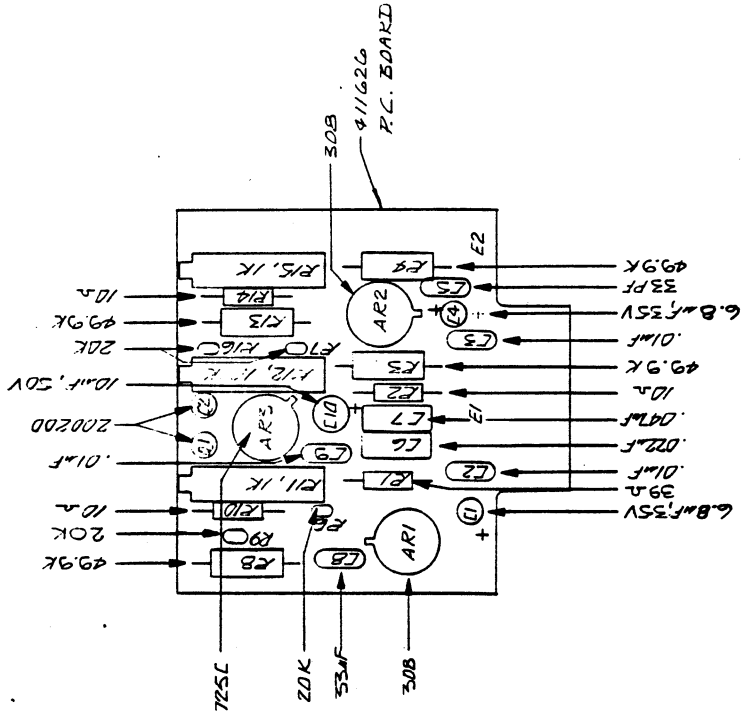

| | | | |
|--------------------------|---------------|--------|--------------|
| PCB ASSY 4 WIRE RATIO | | REV | B |
| SIZE | CODE IDENT NO | DWG NO | REV |
| C | 21793 | 411626 | B |
| SCALE: 1" = 1" | | | SHEET / OF 3 |

1


2

3

4

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE THE PROPERTY OF DANA LABORATORIES, INC. AND SHALL NOT BE REPRODUCED, COPIED, EITHER WHOLLY OR IN PART, OR USED TO SOLICIT QUOTES FROM A COMPETITIVE SOURCE OR USED FOR ANY OTHER PURPOSE WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. THE INFORMATION HEREON MAY ONLY BE USED FOR PURCHASE, ENGINEERING EVALUATION AND FOR INCORPORATION INTO DESIGNS WHICH SPECIFY REQUIREMENTS OF PRODUCTS FROM DANA LABORATORIES, INC.

- 3. RESISTORS ARE IN 01MS, ±1%, 1/4W.
 - 2. REF SPECIFICATION 431626.
 - 1. ASSY PROCEDURES TO CONFORM TO DANA WORKMANSHIP STANDARDS.
- NOTES: UNLESS OTHERWISE SPECIFIED

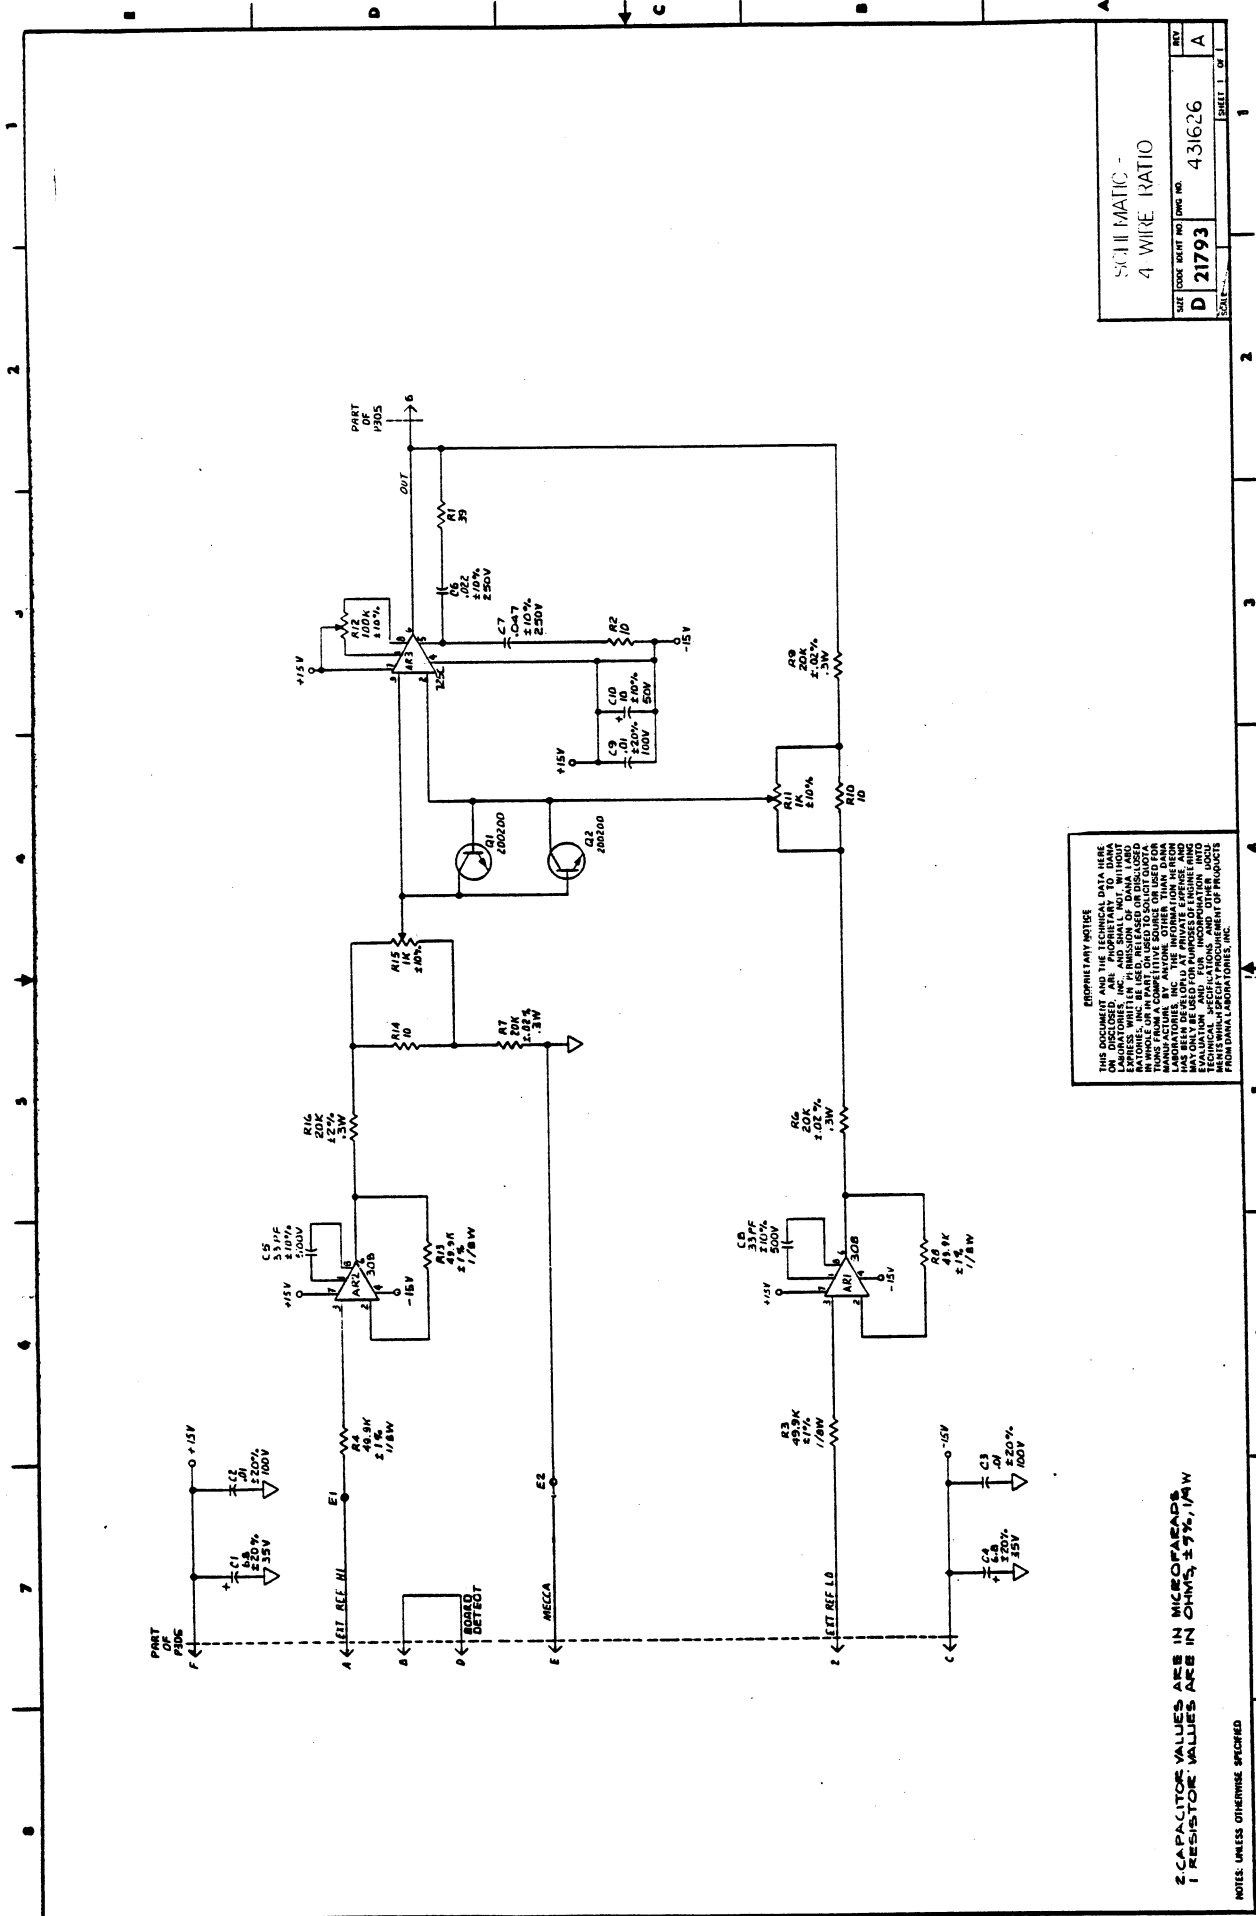


| | |
|--------------------------|--------|
| SCHEMATIC - | |
| 4 WIRE RATIO | |
| SIZE (DRAWN NO) (REV NO) | 431626 |
| D 21793 | A |
| SHEET 1 OF 1 | |

PROPRIETARY NOTICE
 ANY DISCLOSURE OF THE INFORMATION, DATA, IDEAS,
 AND/OR DISCOVERIES CONTAINED HEREIN TO ANY
 LABORATORIES, INC. AND SHALL BE HELD AS UNDISCLOSED
 INFORMATION. ANY INFORMATION RELEASED OR DISCLOSED
 HEREIN IS THE PROPERTY OF LABORATORIES, INC. AND IS NOT
 TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY
 ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING
 PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION
 STORAGE AND RETRIEVAL SYSTEMS. THE INFORMATION HEREIN
 HAS BEEN DEVELOPED FOR AND IS THE PROPERTY OF
 LABORATORIES, INC. AND IS NOT TO BE REPRODUCED OR
 TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC
 AND/OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING,
 OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEMS.
 LABORATORIES, INC.

2 CAPACITOR VALUES ARE IN MICROFARADS
 1 RESISTOR VALUES ARE IN OHMS, ±1%, 1/4W


NOTES, UNLESS OTHERWISE SPECIFIED

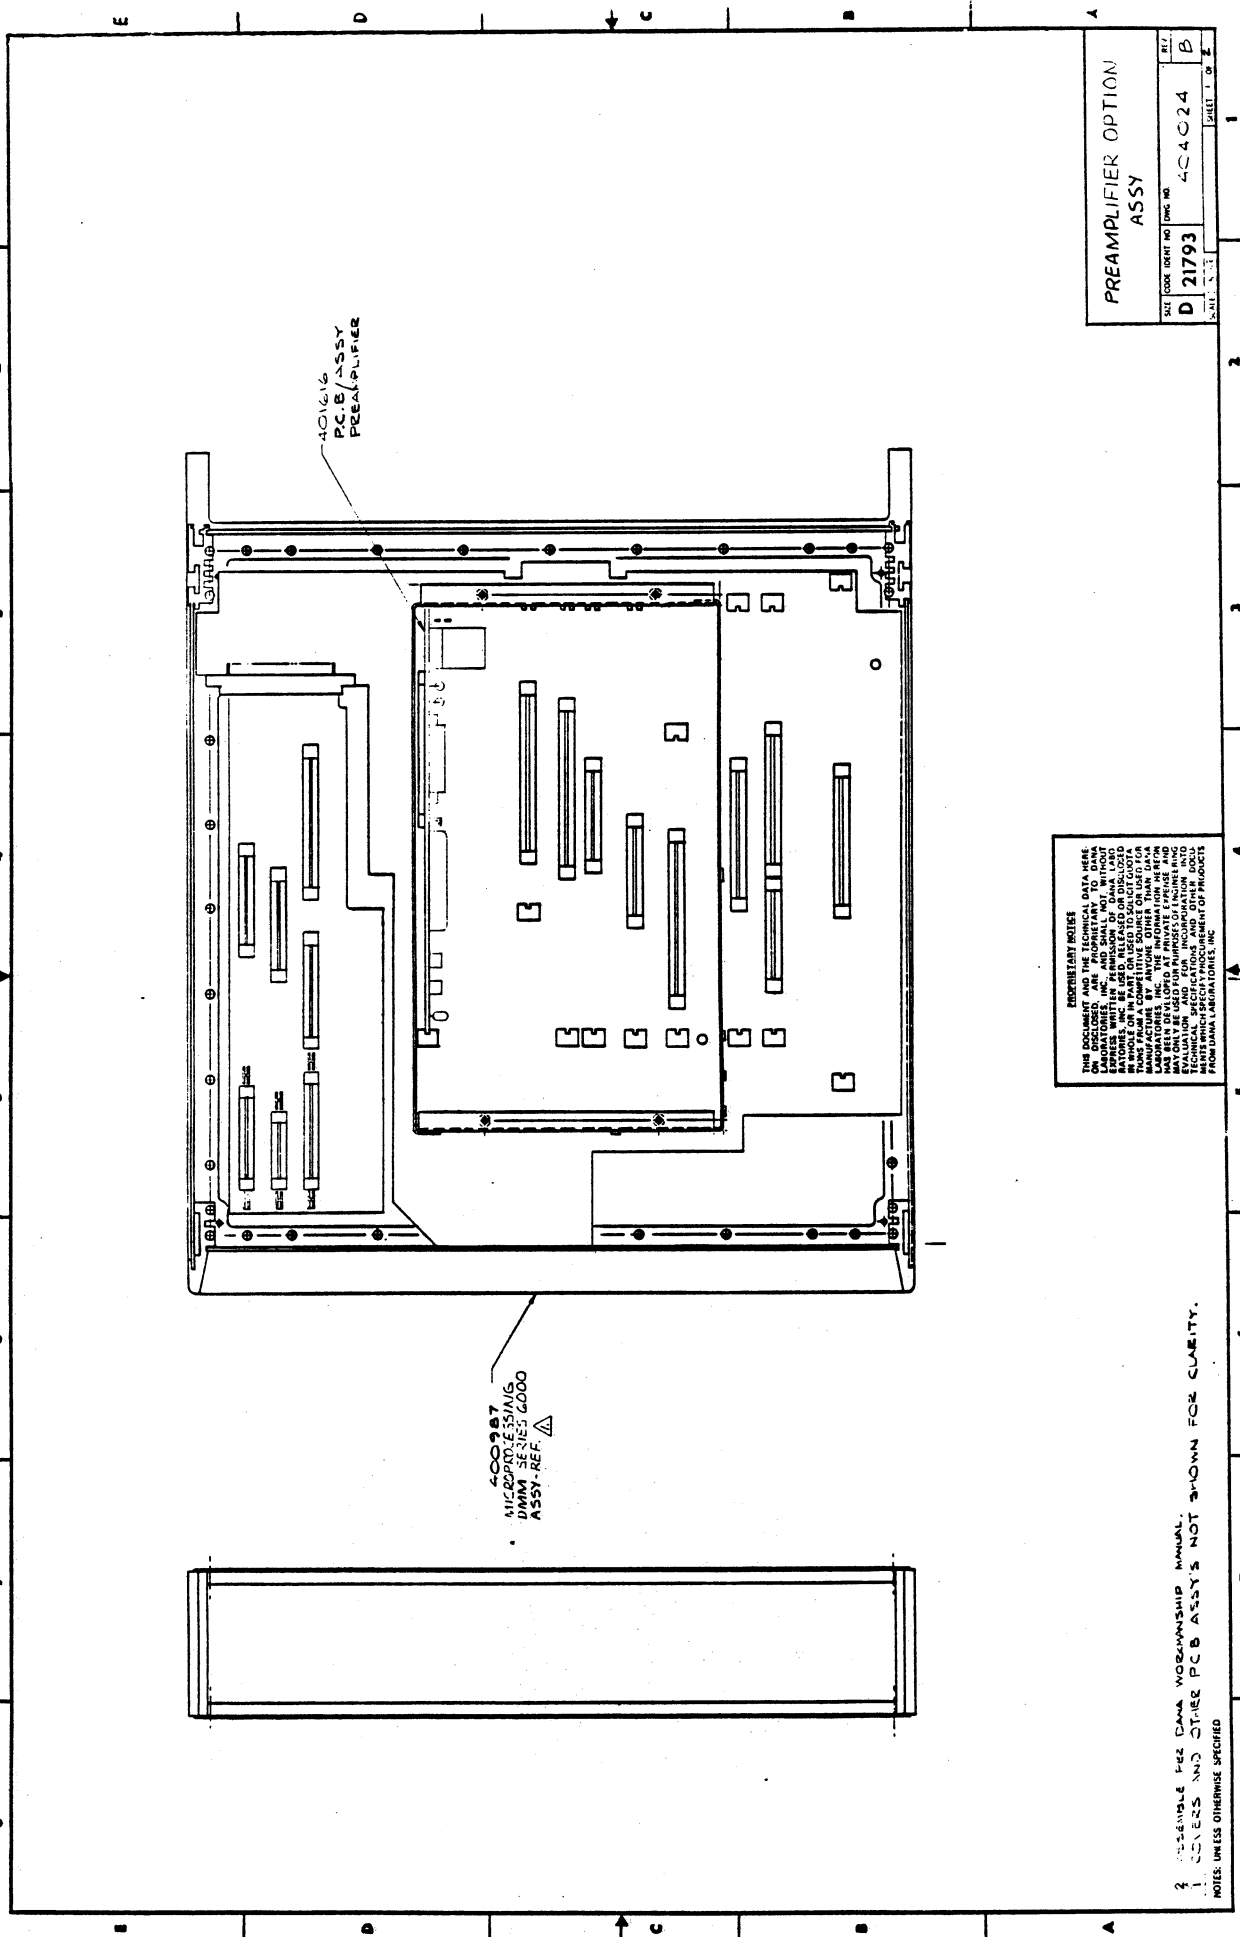

| | |
|-----------------------------|--------|
| PREAMPLIFIER OPTION ASSY | |
| DATE | 21793 |
| WORK ORDER NO | 404024 |
| REV | B |
| SHEET 1 OF 2 | |

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE THE PROPERTY OF DATA LABORATORIES, INC. AND SHALL NOT BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WITHOUT THE EXPRESS WRITTEN PERMISSION OF DATA LABORATORIES, INC. THIS DOCUMENT IS THE PROPERTY OF DATA LABORATORIES, INC. AND IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED HEREIN. IT IS NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WITHOUT THE EXPRESS WRITTEN PERMISSION OF DATA LABORATORIES, INC. THIS DOCUMENT IS THE PROPERTY OF DATA LABORATORIES, INC. AND IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED HEREIN. IT IS NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WITHOUT THE EXPRESS WRITTEN PERMISSION OF DATA LABORATORIES, INC.


ASSEMBLE PER DATA WORKMANSHIP MANUAL.
 COVERS AND OTHER PCB ASSY'S NOT SHOWN FOR CLARITY.
 NOTES: UNLESS OTHERWISE SPECIFIED.

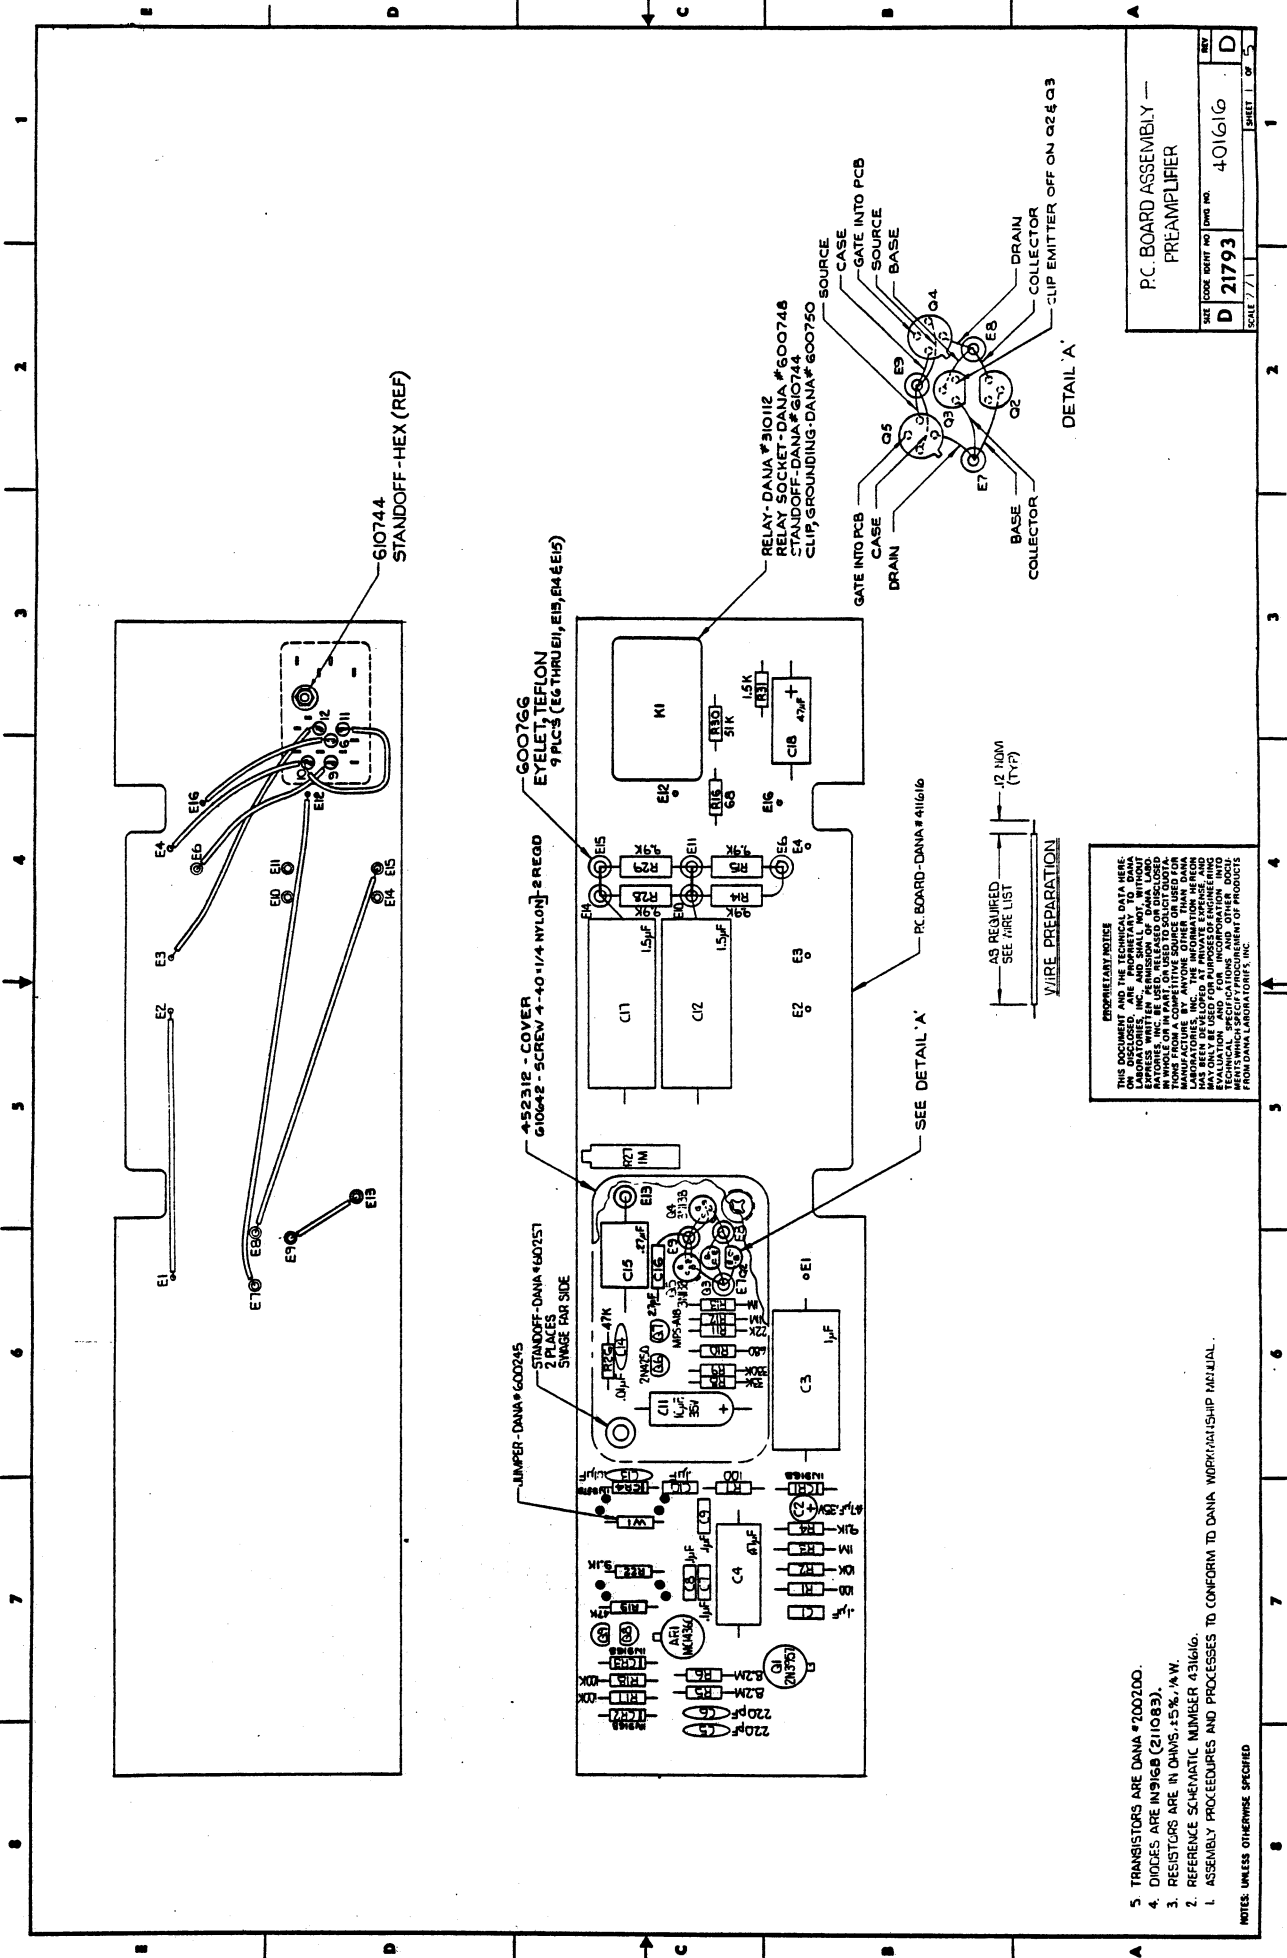

| | |
|-------------------------------------|---------|
| PC BOARD ASSEMBLY - PREAMPLIFIER | |
| SHEET NO | D 21793 |
| DWG NO | 401616 |
| REV | D |
| SCALE 7/71 | |
| SHEET 1 OF 5 | |

PROPRIETARY NOTICE
 THE DOCUMENT AND THE TECHNICAL DATA HEREIN DISCLOSED ARE PROPRIETARY TO DANA LABORATORIES, INC. ANY REPRODUCTION, IN WHOLE OR IN PART, OR USE TO SOLICIT QUOTES FROM A COMPETITIVE SOURCE OR USED FOR ANY OTHER PURPOSES WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. THE INFORMATION HEREIN MAY ONLY BE USED FOR PURPOSES OF ENGINEERING AND DESIGN OF PRODUCTS AND OTHER TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS OF PRODUCTS AND/OR SERVICES OF DANA LABORATORIES, INC.

5. TRANSISTORS ARE DANA #200700.
 4. DIODES ARE IN9168 (211083).
 3. RESISTORS ARE IN DWS-15%/4W.
 2. REFERENCE SCHEMATIC NUMBER 431616.
 1. ASSEMBLY PROCEDURES AND PROCESSES TO CONFORM TO DANA WORKPRACTICE MANUAL.
- NOTES UNLESS OTHERWISE SPECIFIED

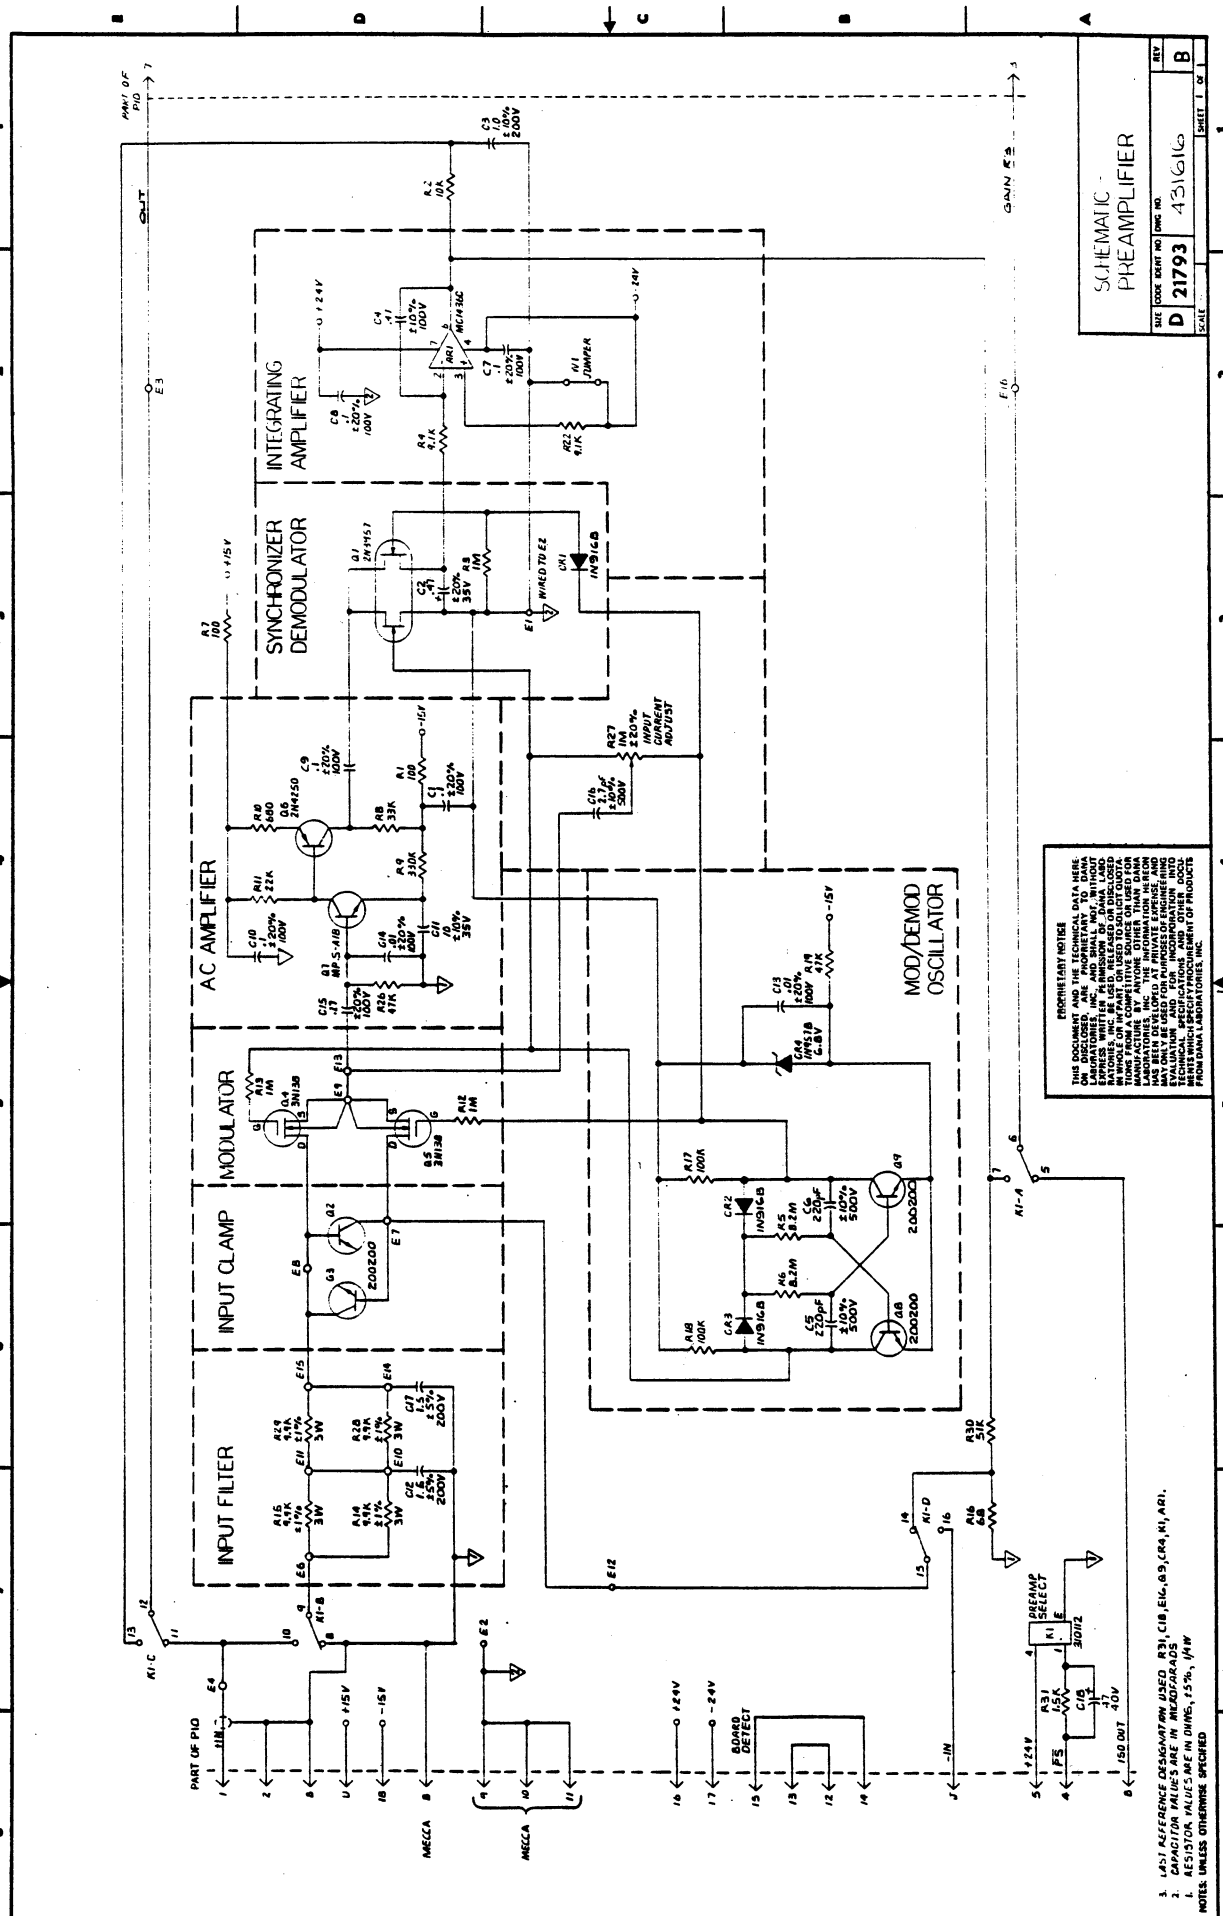

SCHEMATIC PREAMPLIFIER

SIZE CODE PART NO. DMC NO. 21793 431616


REV B

SHEET 1 OF 1

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE UNCLASSIFIED AND SHALL NOT BE RELEASED TO THE PUBLIC WITHOUT THE WRITTEN PERMISSION OF DYNALOG CORPORATION. THIS DOCUMENT IS THE PROPERTY OF DYNALOG CORPORATION AND IS LOANED TO YOU FOR YOUR USE ONLY. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. FOR INFORMATION INTO THE PUBLIC DOMAIN, CONTACT THE DIRECTOR OF PROTECTIVE SERVICES, FEDERAL BUREAU OF INVESTIGATION, WASHINGTON, D.C. 20535.

1. ONLY REFERENCE OSCILLATOR MAY BE USED. R31, C19, E16, C9, C84, K1, A1.
2. CAPACITOR VALUES ARE IN MICROFARADS.
3. RESISTOR VALUES ARE IN OHMS, 15%, 1/4W UNLESS OTHERWISE SPECIFIED.

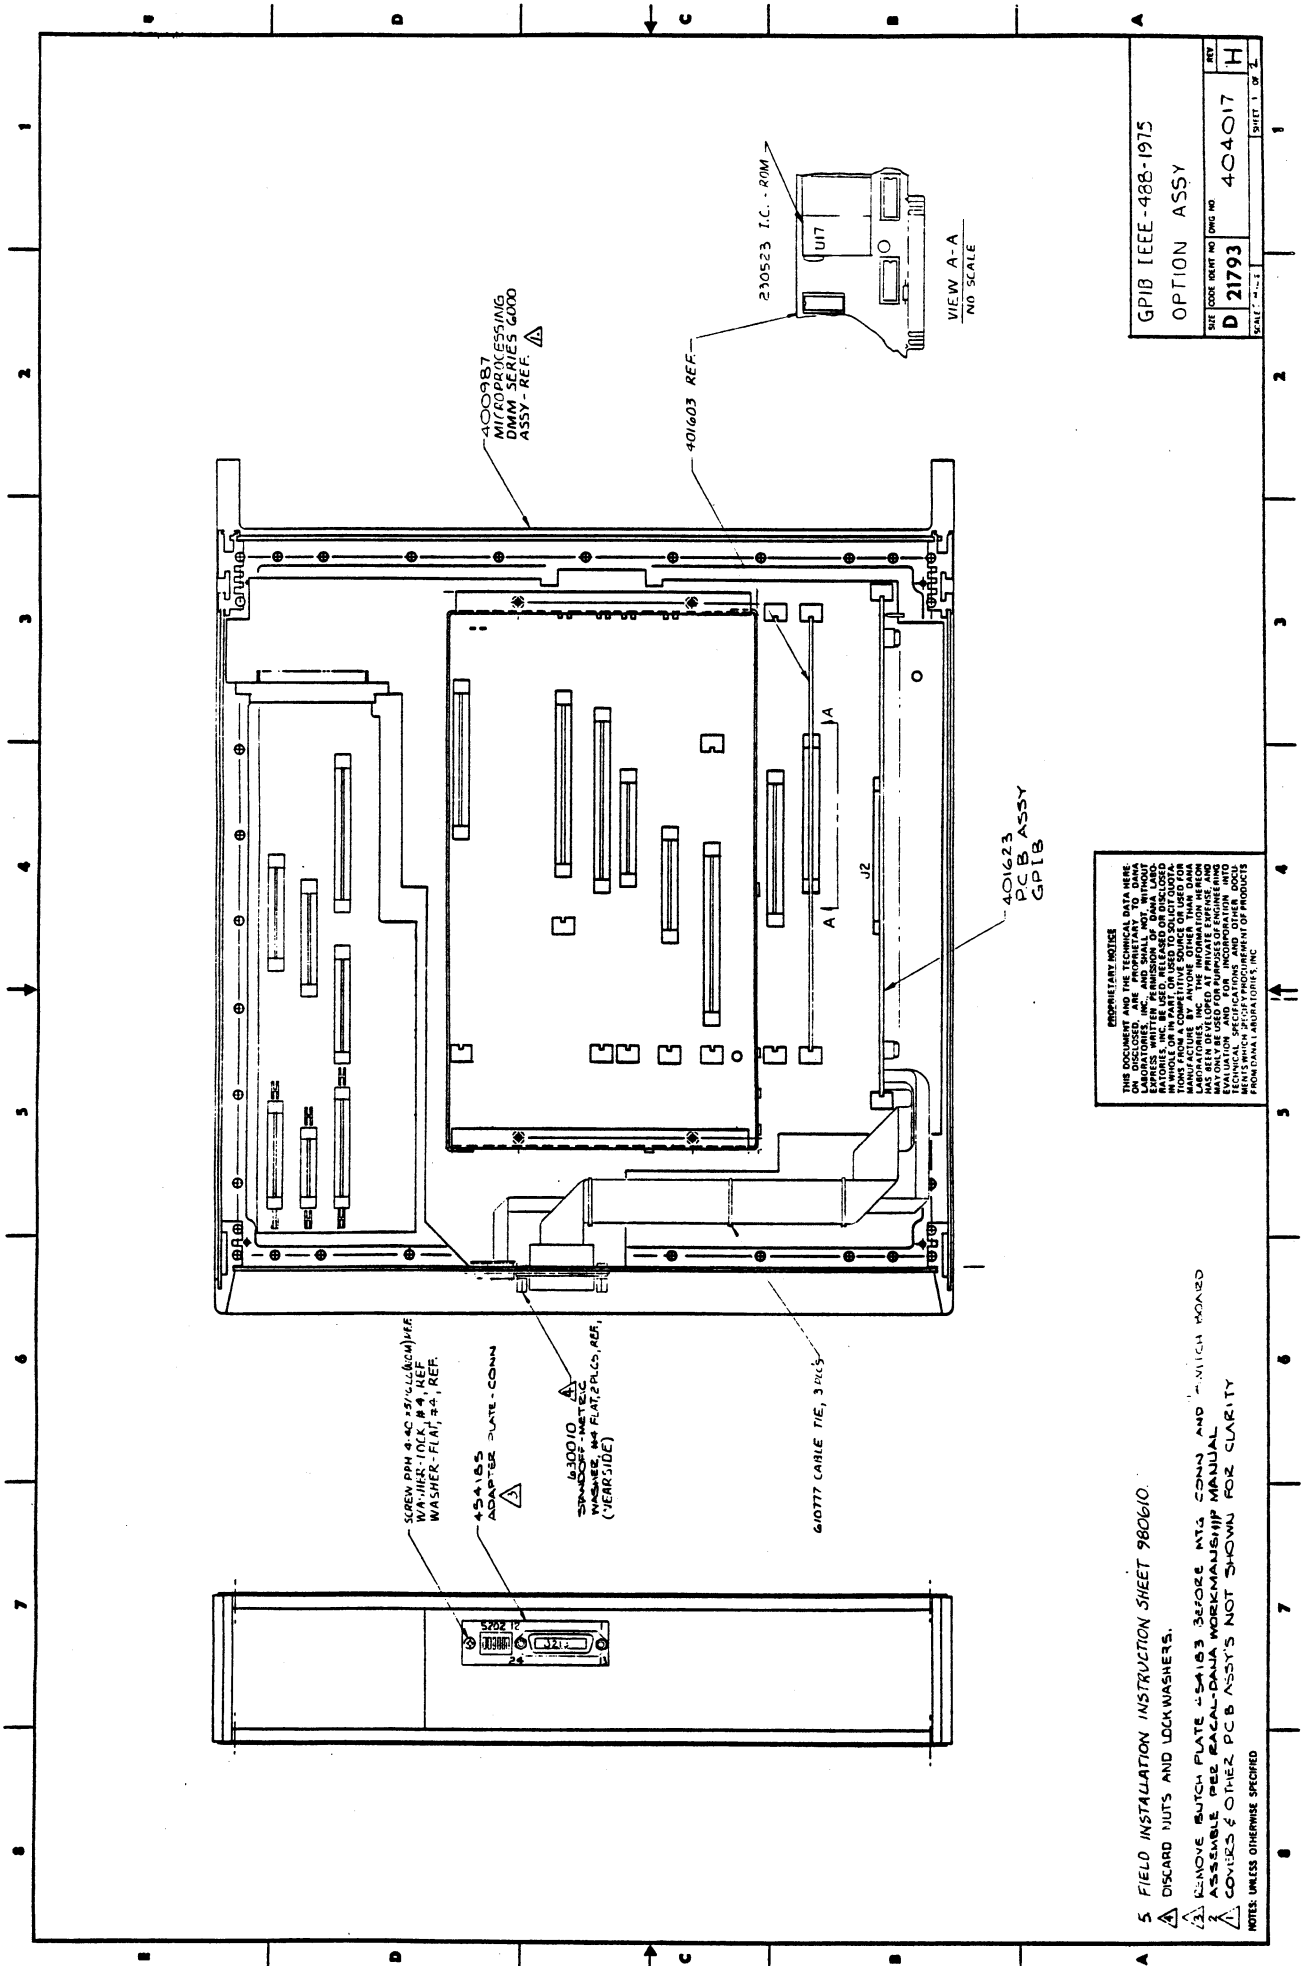


| | | |
|--------------------|--------|--------------|
| GPIB IEEE-488-1975 | | REV |
| OPTION ASSY | | H |
| SIZE CODE IDENT NO | DWG NO | DATE |
| D 21793 | 404017 | 10/1/74 |
| SCALE: 1" = 1" | | SHEET 1 OF 2 |

PROPRIETARY NOTICE
 THE DOCUMENT AND THE DATA HEREIN ARE UNCLASSIFIED AND AVAILABLE TO THE PUBLIC. THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF DANA LABORATORIES, INC. AND SHALL NOT BE DISCLOSED OR REPRODUCED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. BE USED, REPRODUCED OR DISCLOSED TO ANY OTHER PERSON OR ENTITY WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. THE INFORMATION HEREIN HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND IS NOT TO BE USED FOR ANY OTHER PURPOSES WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. FOR INCORPORATION INTO ANY OTHER PRODUCT OR PROJECT WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC.

5 FIELD INSTALLATION INSTRUCTION SHEET 980610.

- Δ DISCARD NUTS AND LOCKWASHERS.
- ⊠ REMOVE BUTCH PLATE 54103 BEFORE INTO CONN AND 7-MICH BOARD ASSEMBLE PER RACAL-DANA WORKMANSHIP MANUAL
- ⊠ COVERS & OTHER PCB ASSY'S NOT SHOWN FOR CLARITY


NOTE: UNLESS OTHERWISE SPECIFIED

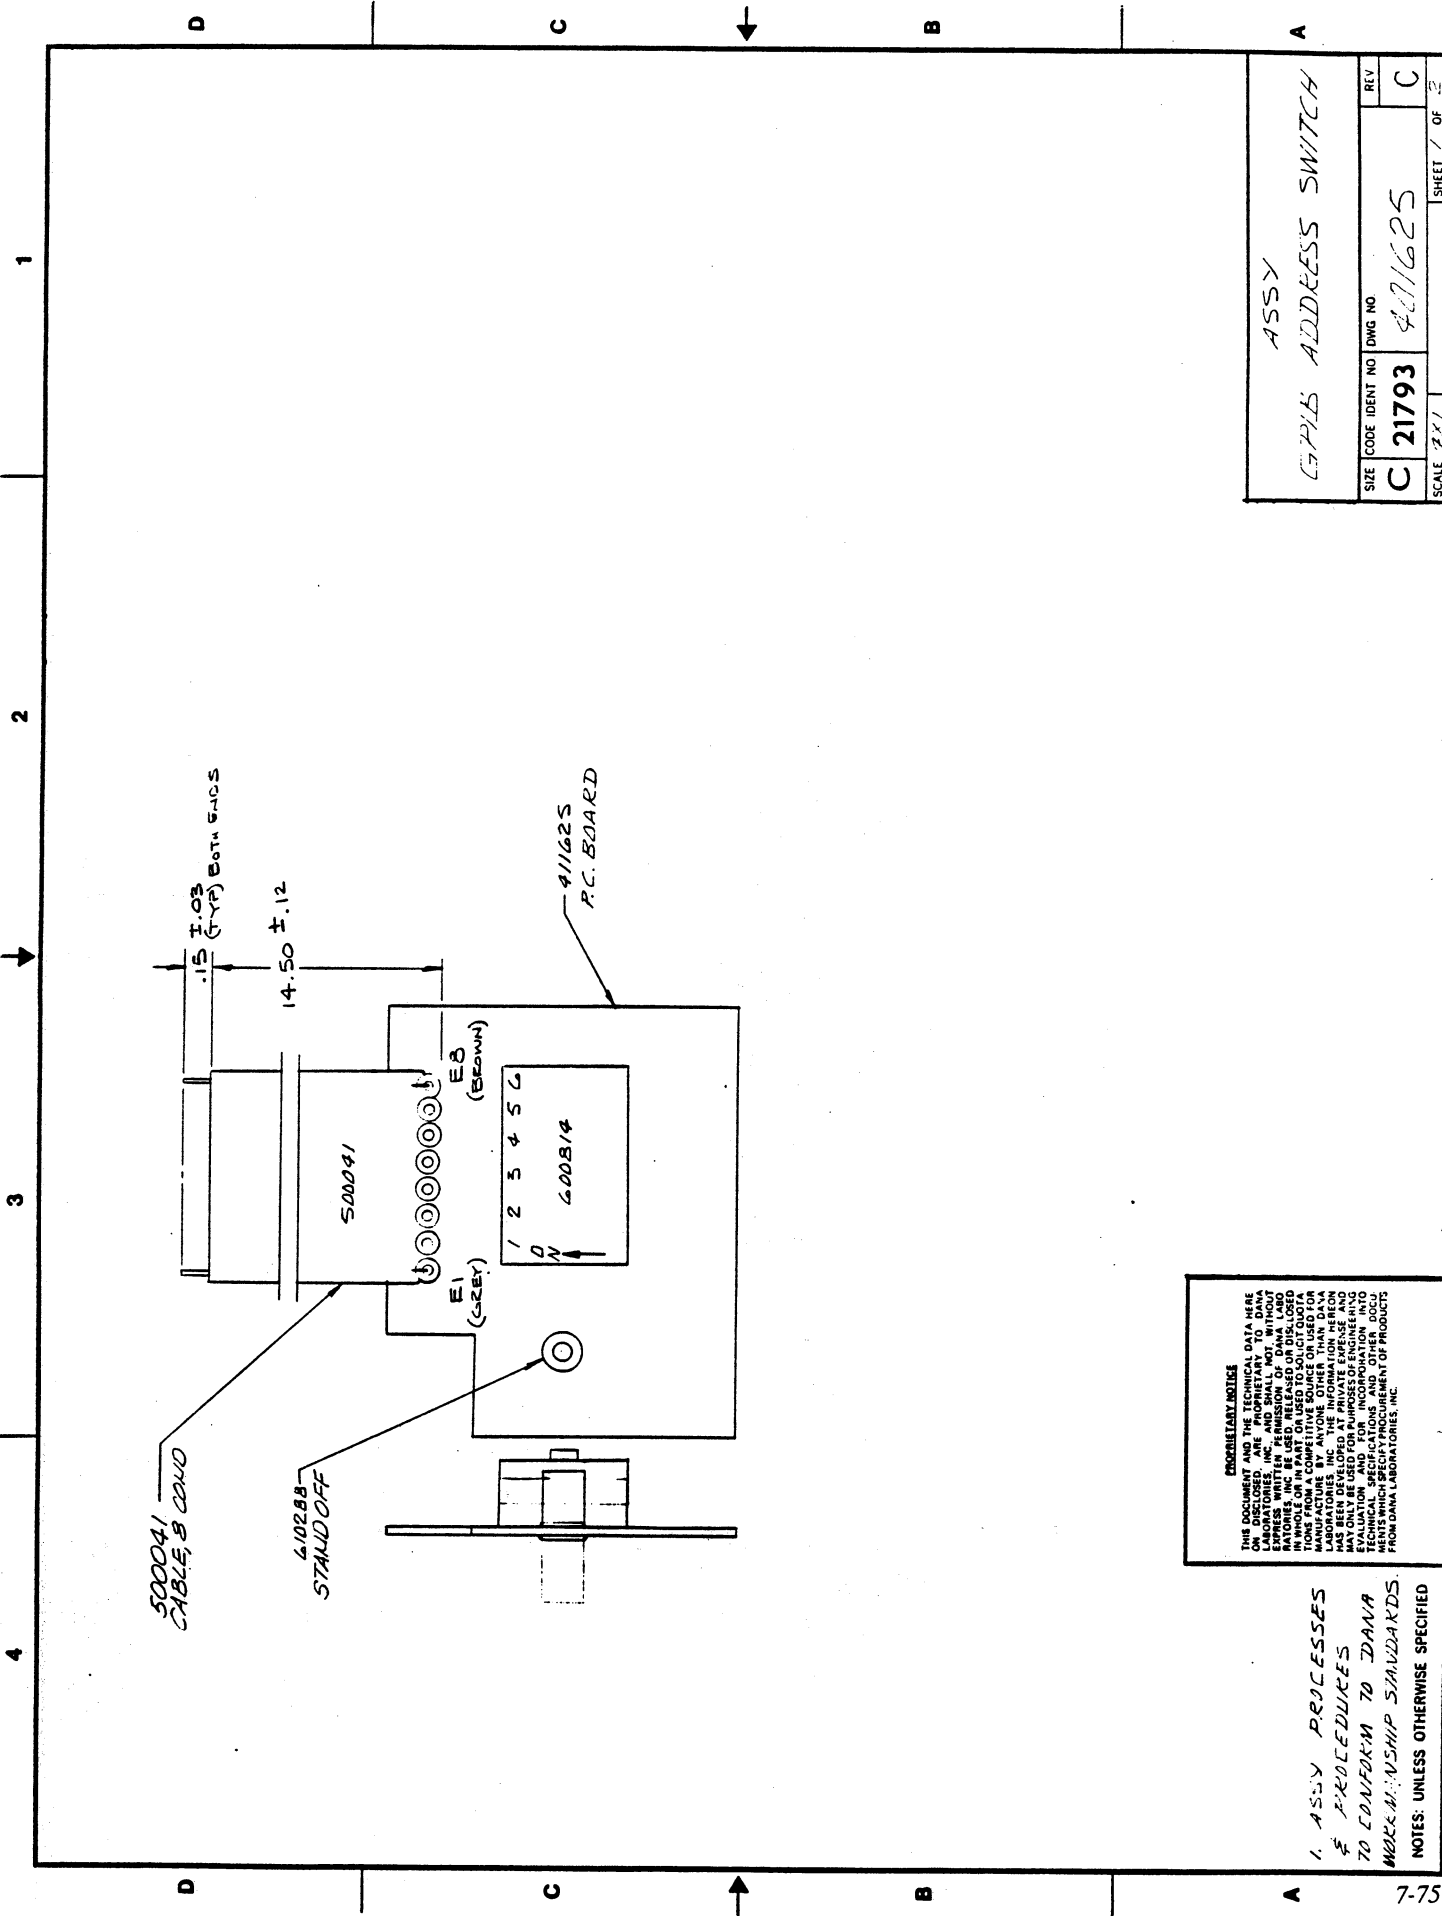

| | | | |
|----------------------|---------------|--------|--------------|
| ASSY | | | |
| CARLS ADDRESS SWITCH | | | |
| SIZE | CODE IDENT NO | DWG NO | REV |
| C | 21793 | 411625 | C |
| SCALE: 1X1 | | | SHEET 1 OF 2 |

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN DISCLOSED ARE PROPRIETARY TO DANA LABORATORIES, INC. NO PART OF THIS DOCUMENT IS TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE EXPRESS WRITTEN PERMISSION OF DANA LABORATORIES, INC. ANY INFORMATION DISCLOSED IN THIS DOCUMENT IS TO BE USED ONLY FOR THE PURPOSES FOR WHICH IT WAS DEVELOPED AND IS NOT TO BE USED FOR ANY OTHER PURPOSES. DANA LABORATORIES, INC. AND ITS AFFILIATED COMPANIES HAVE BEEN DEVELOPED AT PRIVATE EXPENSE AND ARE NOT TO BE USED FOR ANY OTHER PURPOSES WITHOUT THE EXPRESS WRITTEN PERMISSION OF DANA LABORATORIES, INC. TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTATION ARE SUBJECT TO CHANGE WITHOUT NOTICE. DANA LABORATORIES, INC.

1. ASSY PROCESSES & PROCEDURES TO CONFORM TO IDAVA WORKMANSHIP STANDARDS.
 NOTES: UNLESS OTHERWISE SPECIFIED

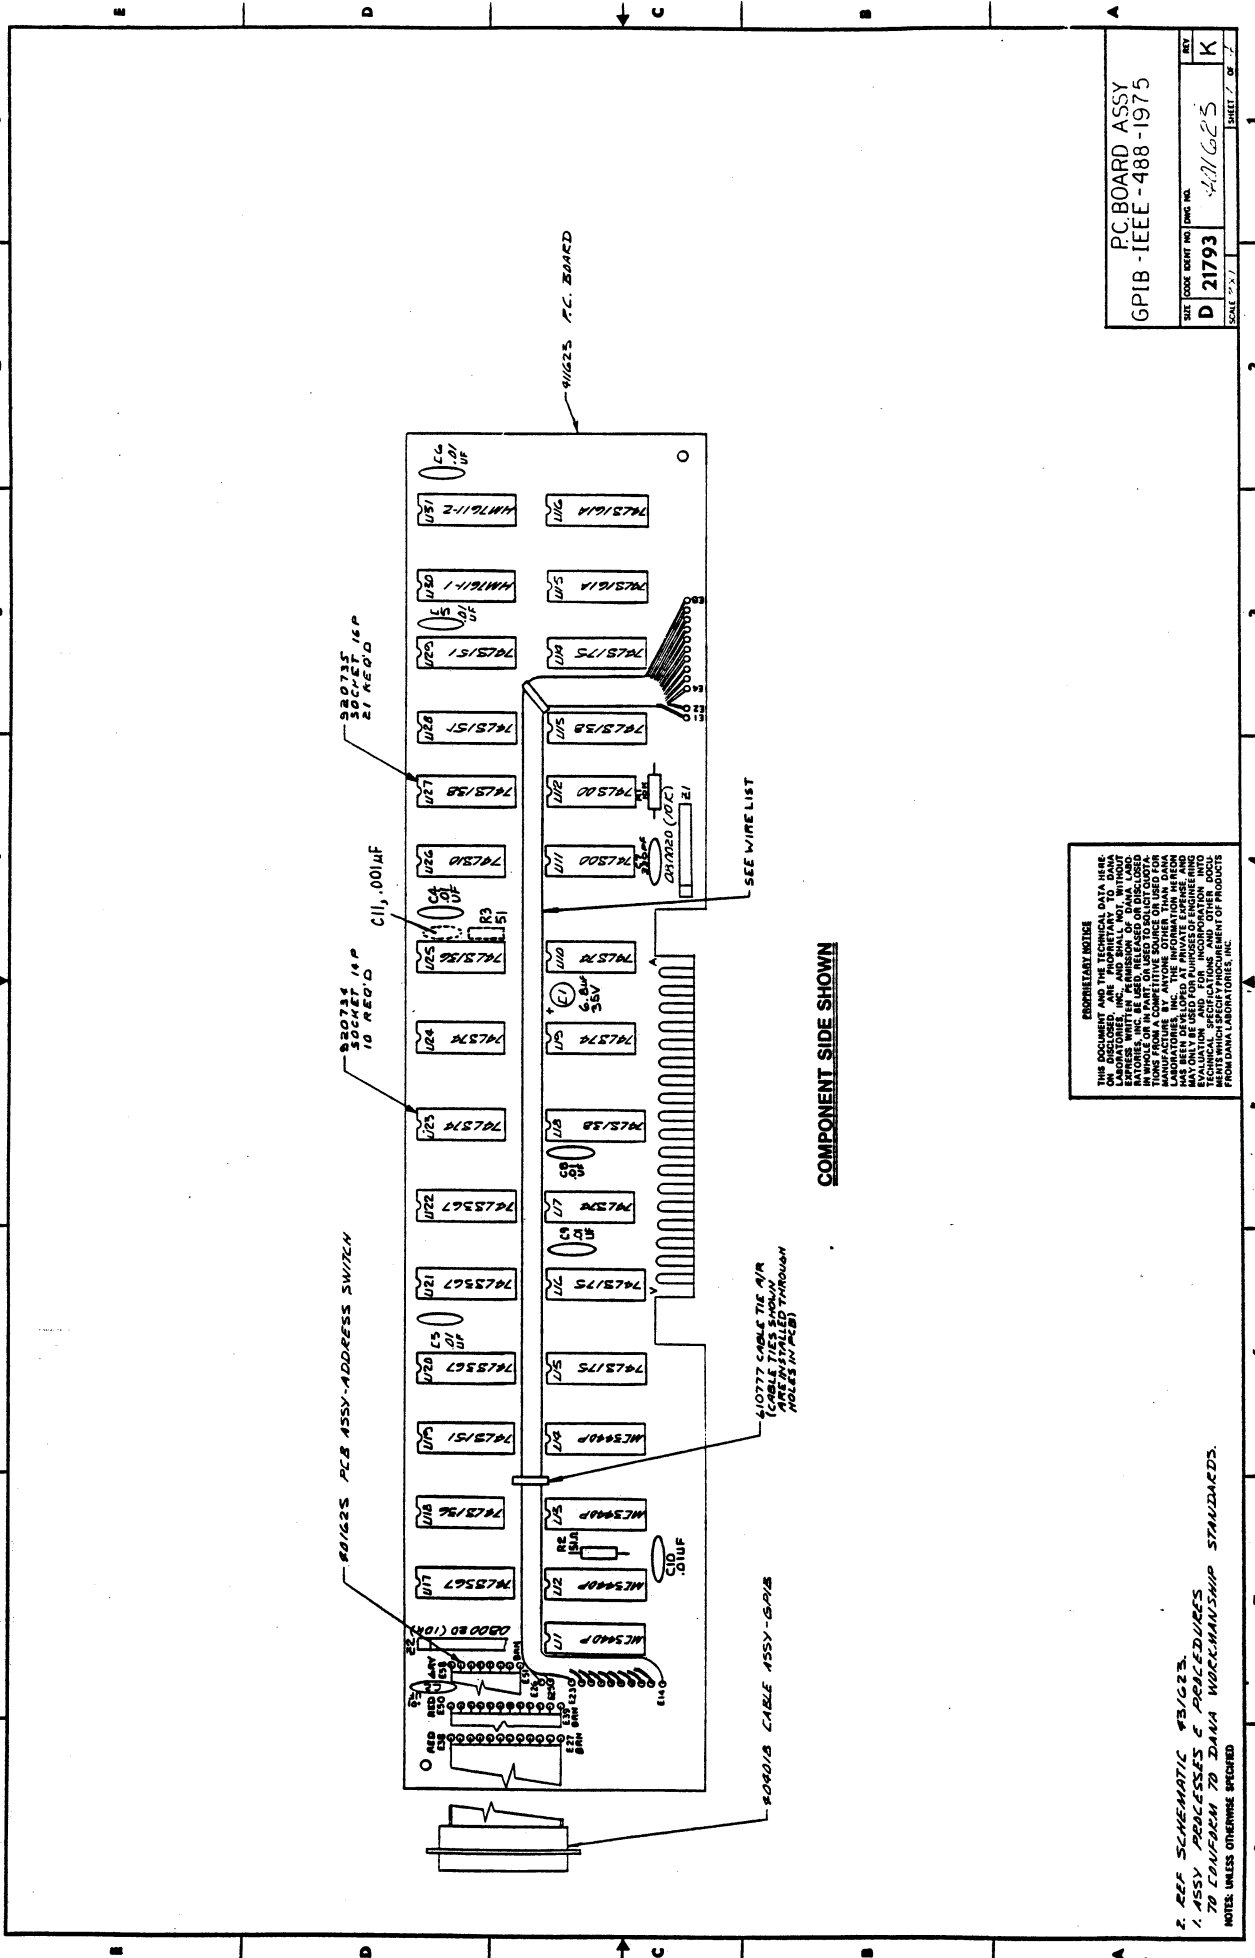


COMPONENT SIDE SHOWN

EXEMPLARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREON ARE UNCLASSIFIED AND SHALL NOT BE DECLASSIFIED WITHOUT THE WRITTEN PERMISSION OF DATA LAB. THIS DOCUMENT IS UNCLASSIFIED IN WHOLE OR IN PART, ON USED TO CALCULATE DATA OR TO REPRODUCE THE INFORMATION CONTAINED HEREIN FOR ANY PURPOSES OTHER THAN DATA MANUFACTURE BY ANYONE OTHER THAN DATA LAB. THIS DOCUMENT IS UNCLASSIFIED AND HAS BEEN DECLASSIFIED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING RESEARCH AND DEVELOPMENT. TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS ARE AVAILABLE FROM THE DEPARTMENT OF PRODUCTS FROM DATA LABORATORIES, INC.

- REF SCHEMATIC #31023.
 - ASSY PROCESSES & PROCEDURES TO CONFORM TO DATA WORKMANSHIP STANDARDS.
- NOTES: UNLESS OTHERWISE SPECIFIED

PC BOARD ASSY
 GPIB - IEEE - 488 - 1975

| | |
|-----------|--------------|
| DATE | REV |
| D 21793 | K |
| SCALE 1:1 | SHEET 7 OF 7 |

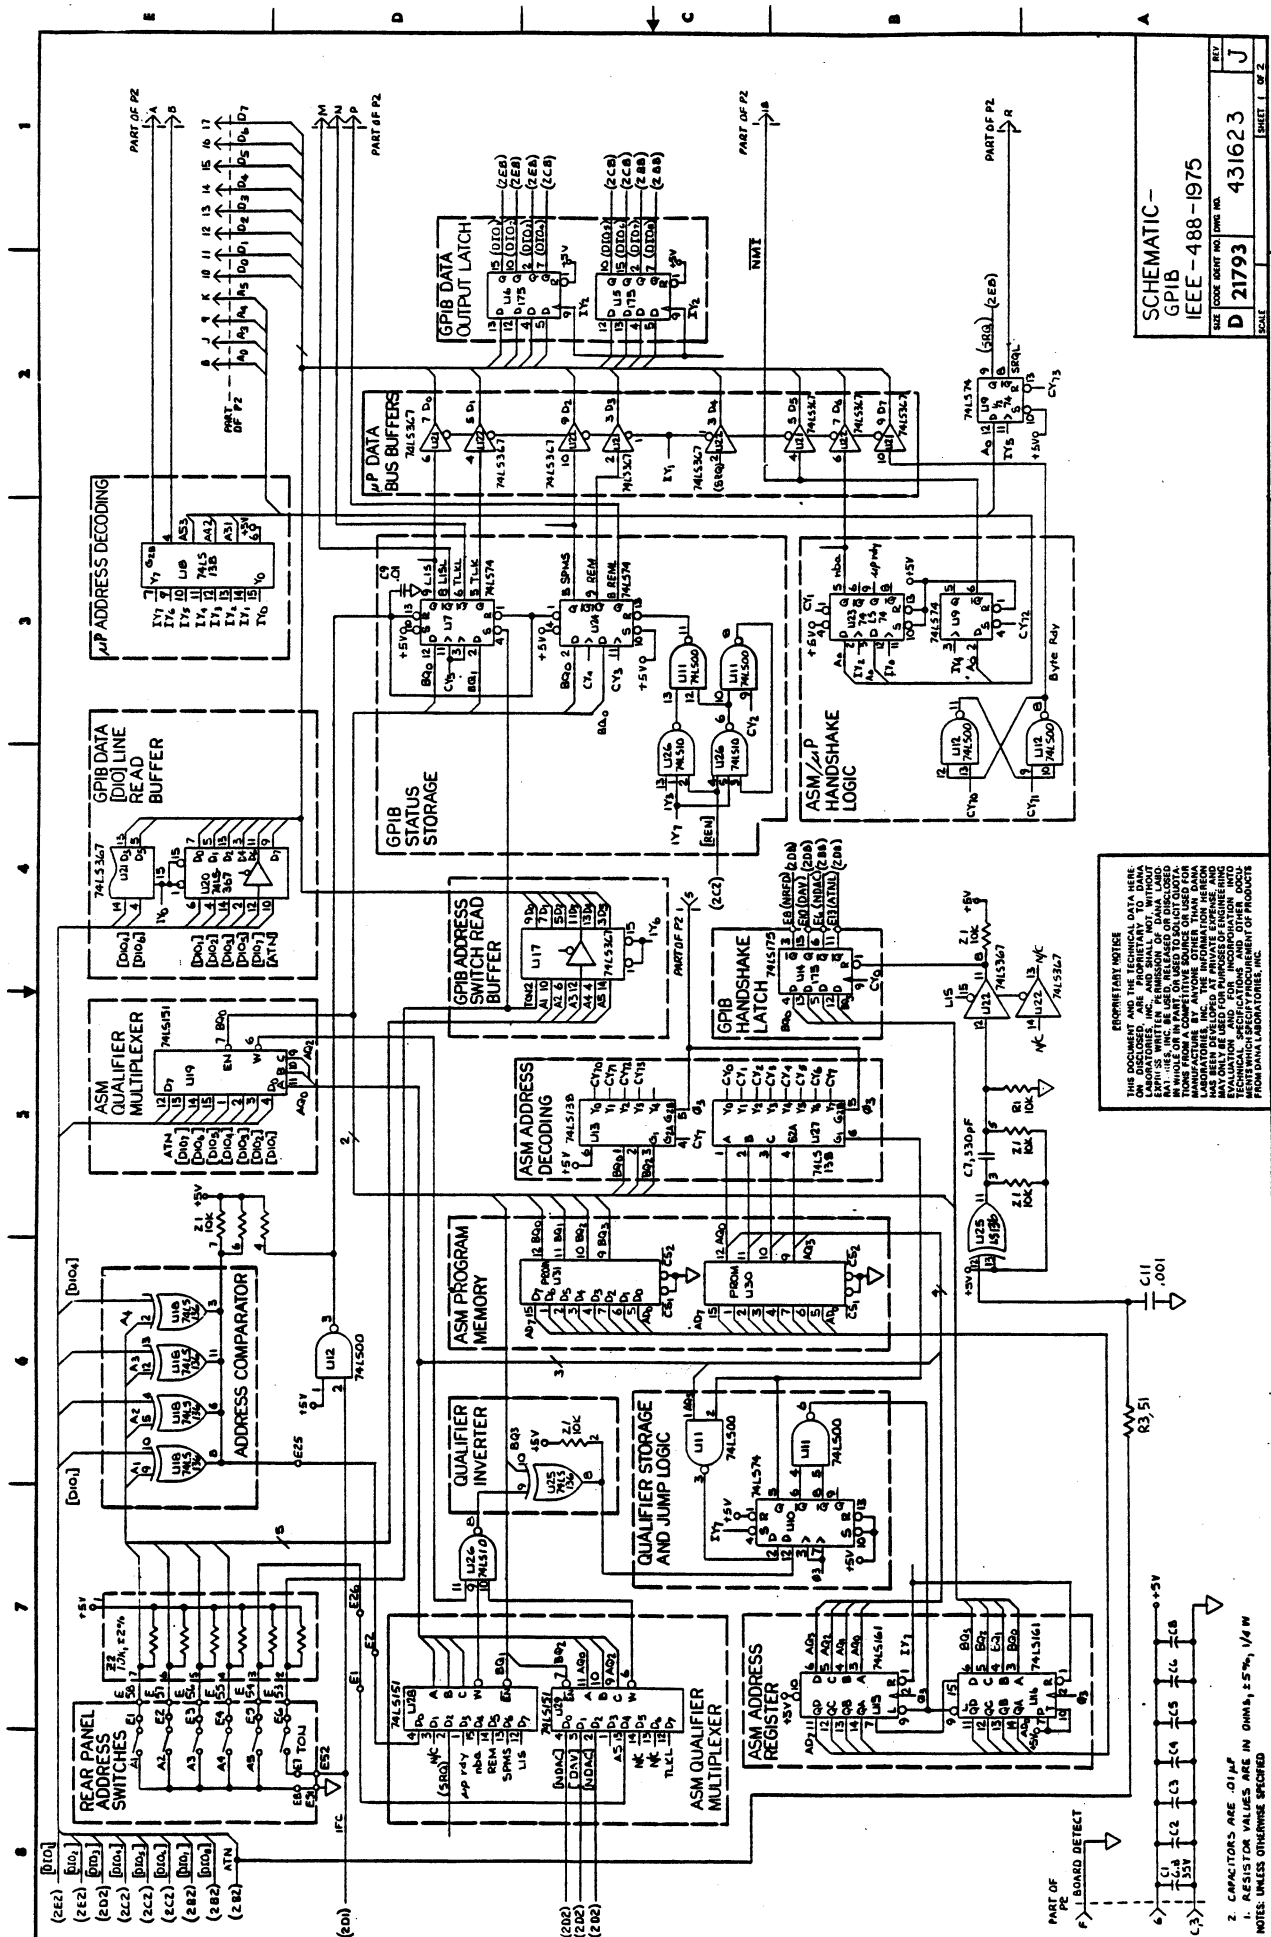


SCHEMATIC -
 GPIB
 IEEE-488-1975

| | | |
|------|----------------|--------|
| SIZE | CODE SHEET NO. | DATE |
| D | 21793 | 431623 |
| REV | J | |

SCALE SHEET 1 OF 2

PROPRIETARY NOTICE
 THIS DOCUMENT, INCLUDING ALL DATA HEREIN, IS UNCLASSIFIED AND IS NOT A PROPRIETARY OR CONFIDENTIAL INFORMATION OF THE NATIONAL BUREAU OF STANDARDS. IT IS THE PROPERTY OF THE NATIONAL BUREAU OF STANDARDS AND IS LOANED TO YOUR ORGANIZATION. IT IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED IN THE ORDER AND IS NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF THE NATIONAL BUREAU OF STANDARDS. THE INFORMATION HEREIN IS THE PROPERTY OF THE NATIONAL BUREAU OF STANDARDS AND IS LOANED TO YOUR ORGANIZATION. IT IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED IN THE ORDER AND IS NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF THE NATIONAL BUREAU OF STANDARDS.


2. CAPACITORS ARE .01 μF
 1. RESISTOR VALUES ARE IN OHMS, 5%, 1/4 W
 NOTES: UNLESS OTHERWISE SPECIFIED

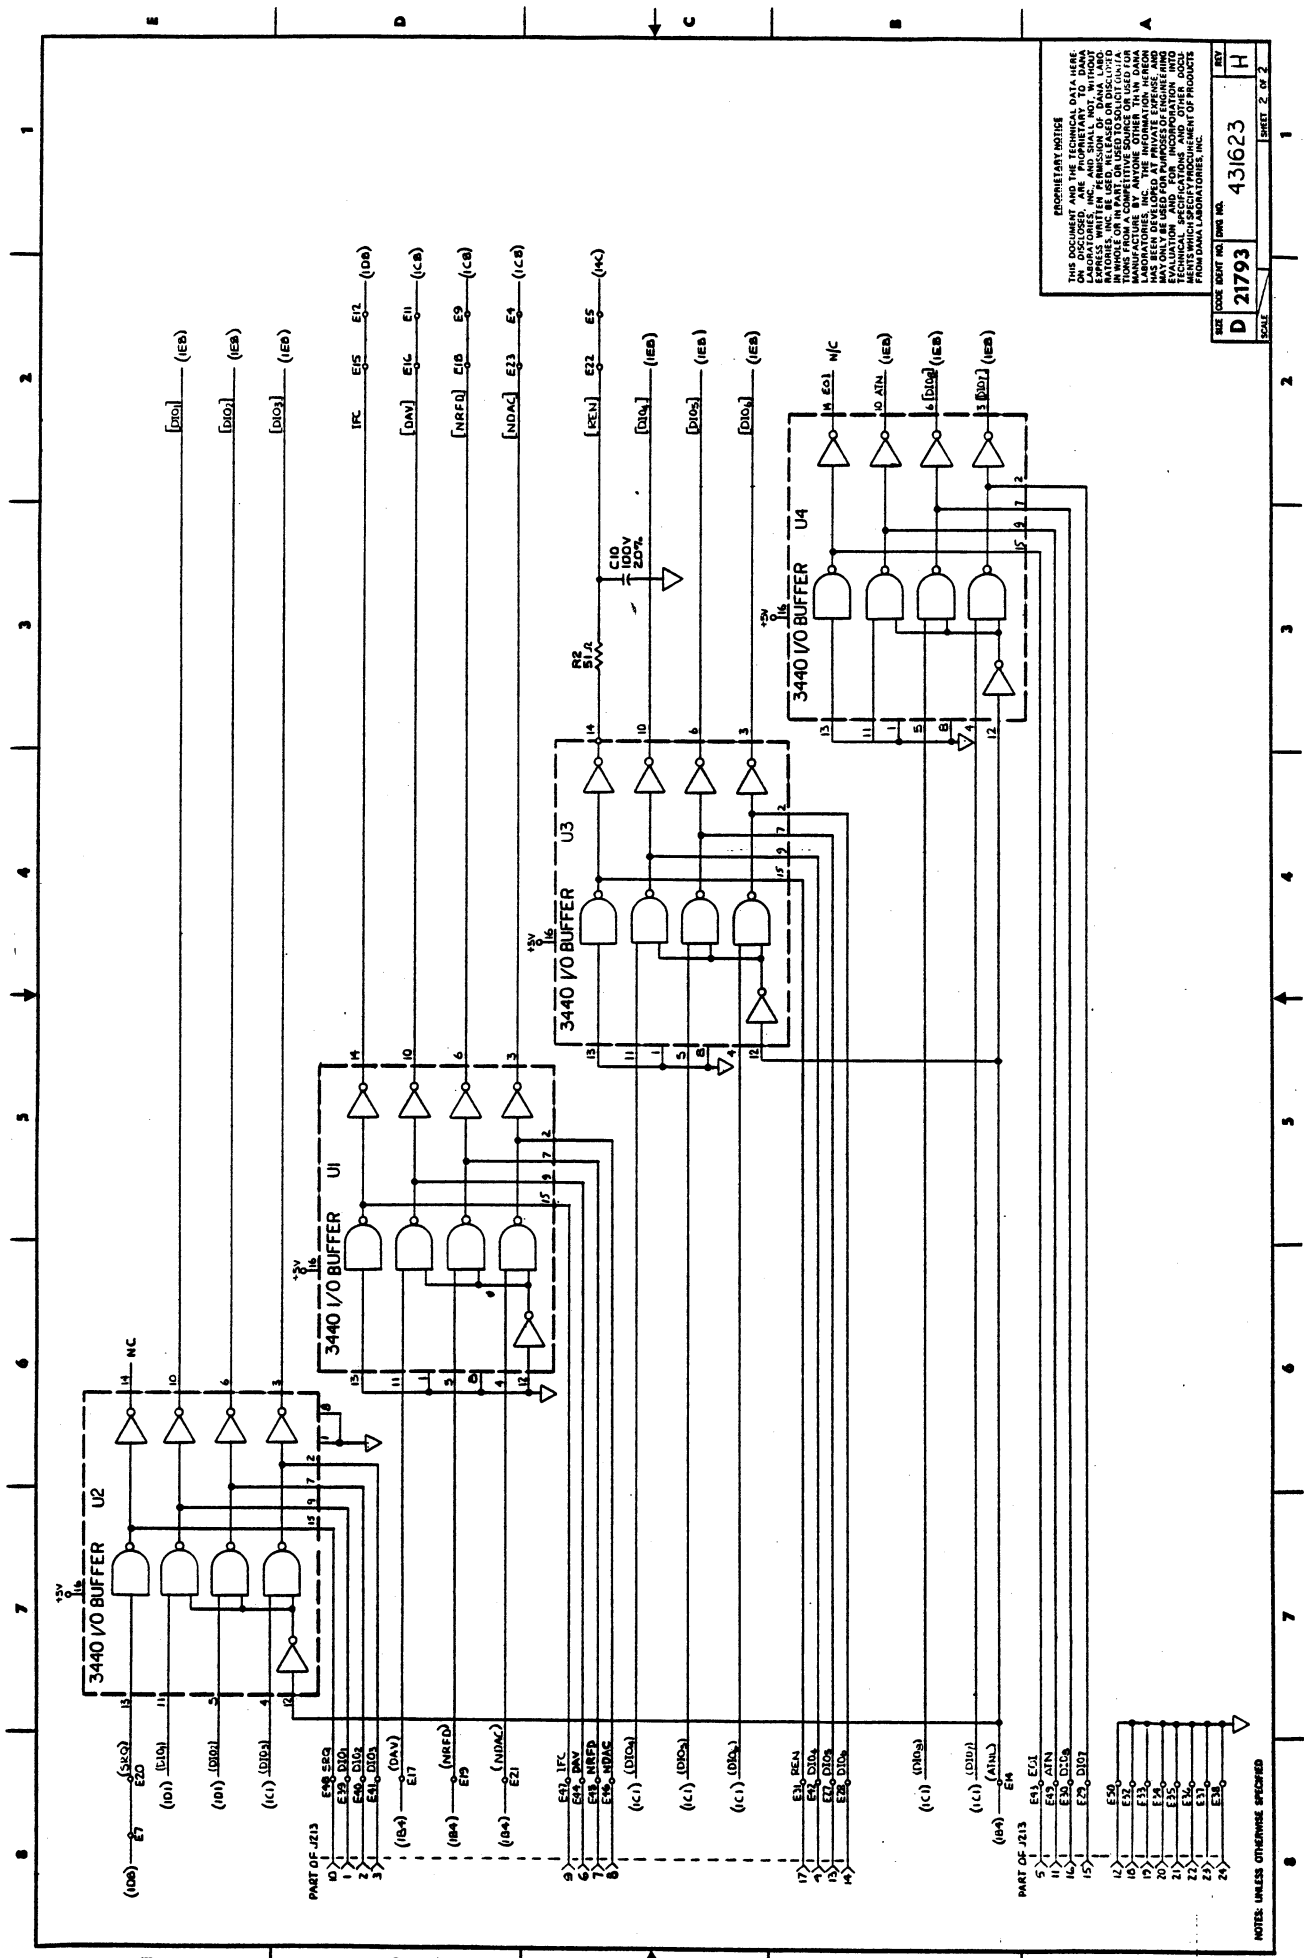

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN DISCLOSED ARE PROPRIETARY TO DATA LABORATORIES, INC. AND ARE NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE EXPRESS WRITTEN PERMISSION OF DATA LABORATORIES, INC. THIS NOTICE IS APPLICABLE IN WHOLE OR IN PART, ON USED TO SOLICIT BIDS FOR THE MANUFACTURE OF ANY EQUIPMENT OR MATERIALS FROM DATA LABORATORIES, INC. THE INFORMATION HEREIN IS NOT TO BE USED FOR ANY PURPOSES OF ENGINEERING OR DESIGN, NOR FOR THE DEVELOPMENT OF TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS, WITHOUT THE WRITTEN PERMISSION OF DATA LABORATORIES, INC.

| | | |
|-----------------|-------|--------------|
| DATE | SCALE | REV |
| D 21793 | | H |
| PART NO. 431623 | | SHEET 2 OF 2 |


NOTE: UNLESS OTHERWISE SPECIFIED

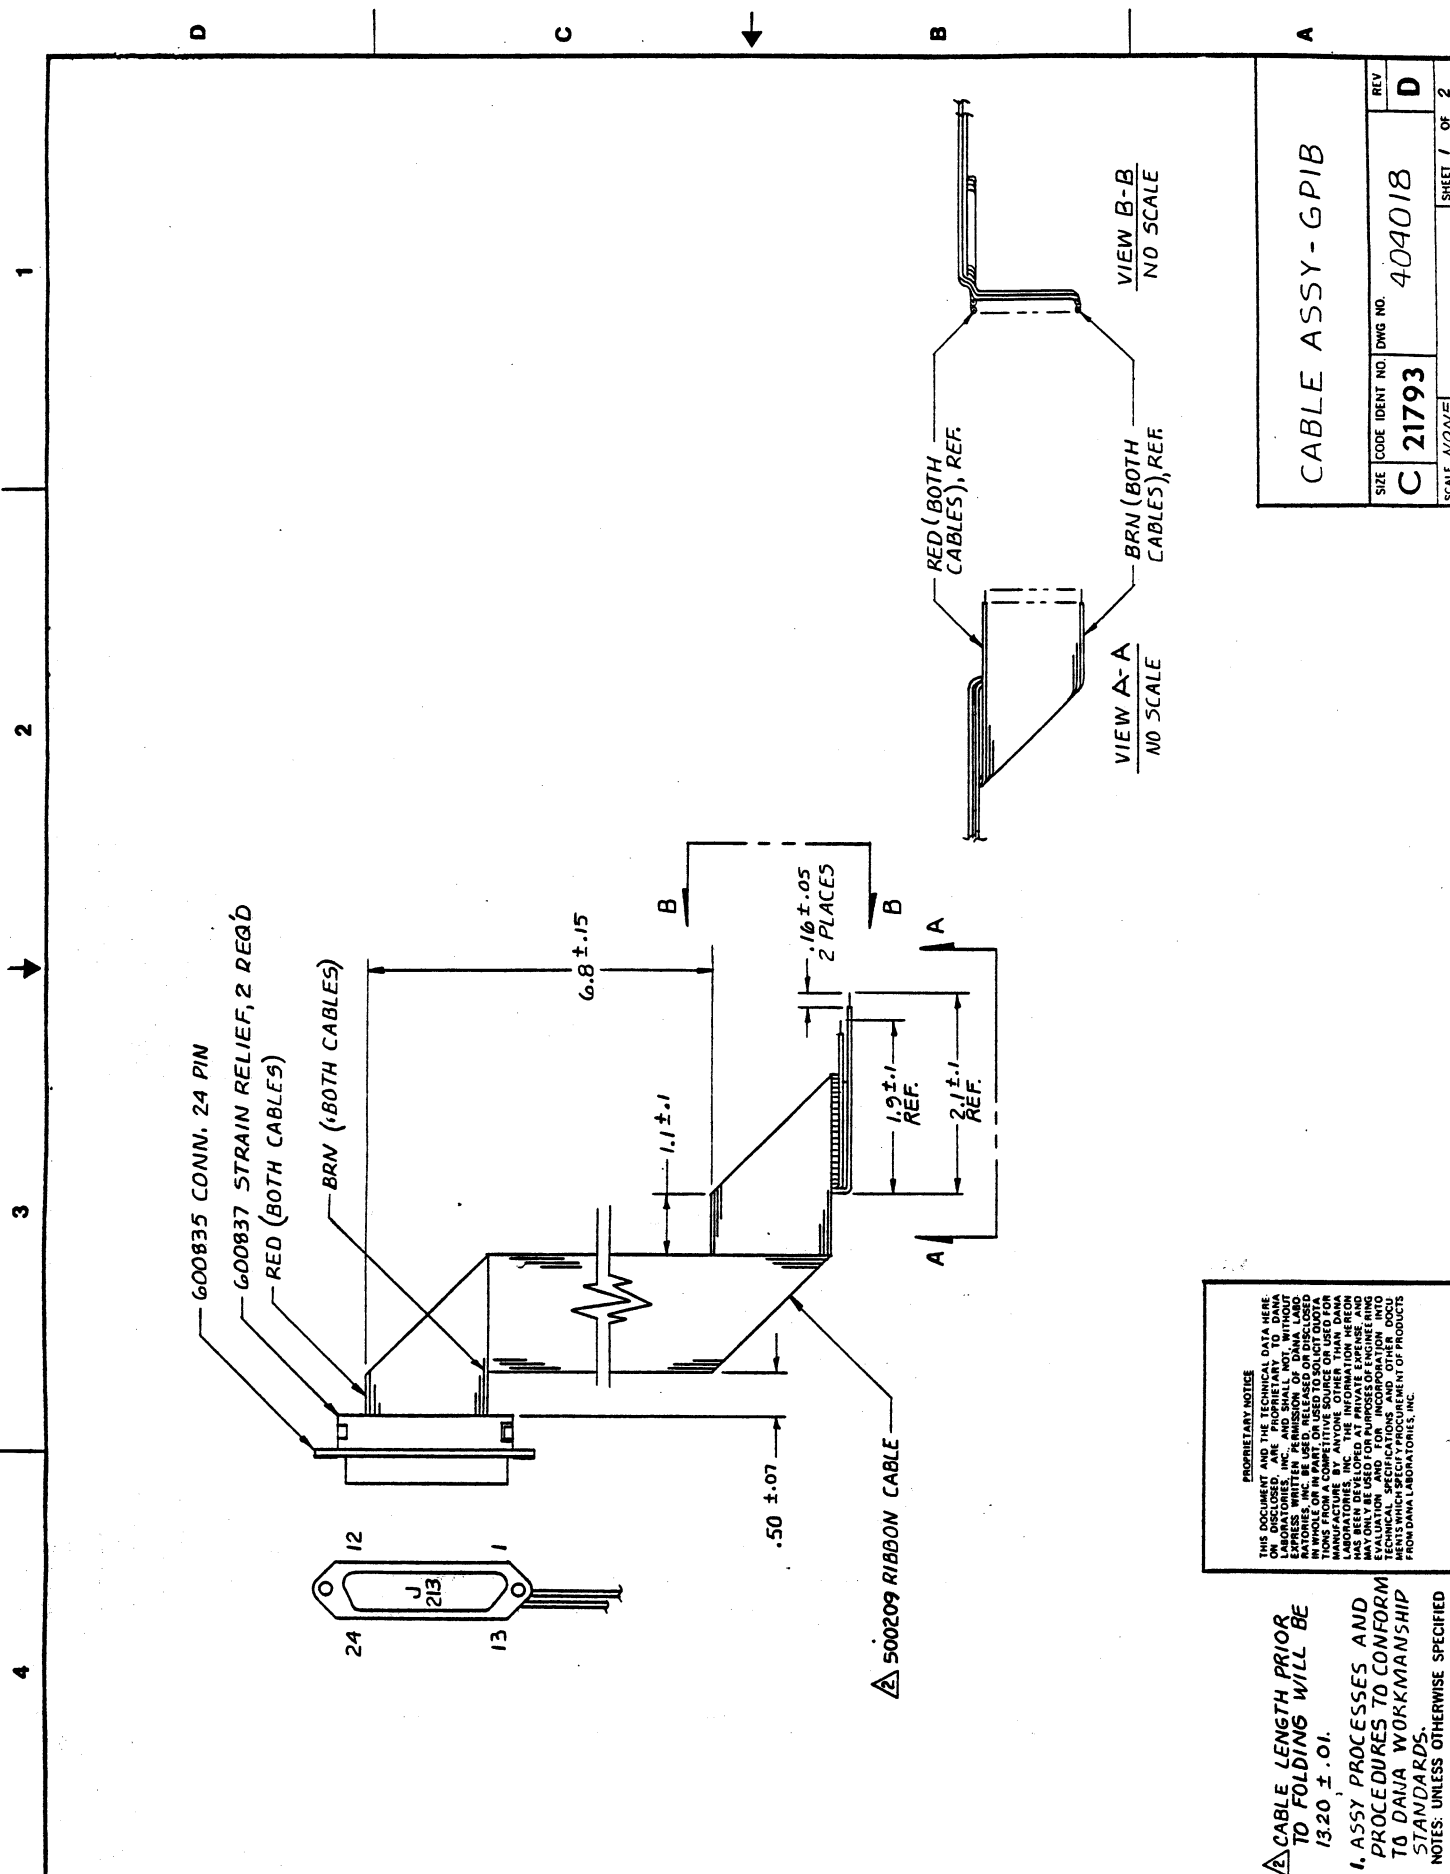

| | | | |
|-------------------|----------------|---------|--------------|
| CABLE ASSY - GP1B | | REV | D |
| SIZE | CODE IDENT NO. | DWG NO. | 404018 |
| C | 21793 | | |
| SCALE: NONE | | | SHEET 1 OF 2 |

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN ARE THE PROPERTY OF DANA LABORATORIES, INC. AND SHALL NOT, WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC., BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. THE INFORMATION HEREIN IS UNCLASSIFIED AND IS BEING RELEASED TO THE PUBLIC IN WHOLE OR IN PART, ON USED TO SOLICIT QUOTA MANUFACTURE BY ANYONE OTHER THAN DANA LABORATORIES, INC. THE INFORMATION HEREIN IS UNCLASSIFIED AND IS BEING RELEASED TO THE PUBLIC IN WHOLE OR IN PART, ON USED TO SOLICIT QUOTA MANUFACTURE BY ANYONE OTHER THAN DANA LABORATORIES, INC. FOR INCORPORATION INTO PRODUCTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM DANA LABORATORIES, INC.


1. CABLE LENGTH PRIOR TO FOLDING WILL BE 13.20 ± .01.
2. ASSY PROCESSES AND PROCEDURES TO CONFORM TO DANA WORKMANSHIP STANDARDS.
 NOTES: UNLESS OTHERWISE SPECIFIED

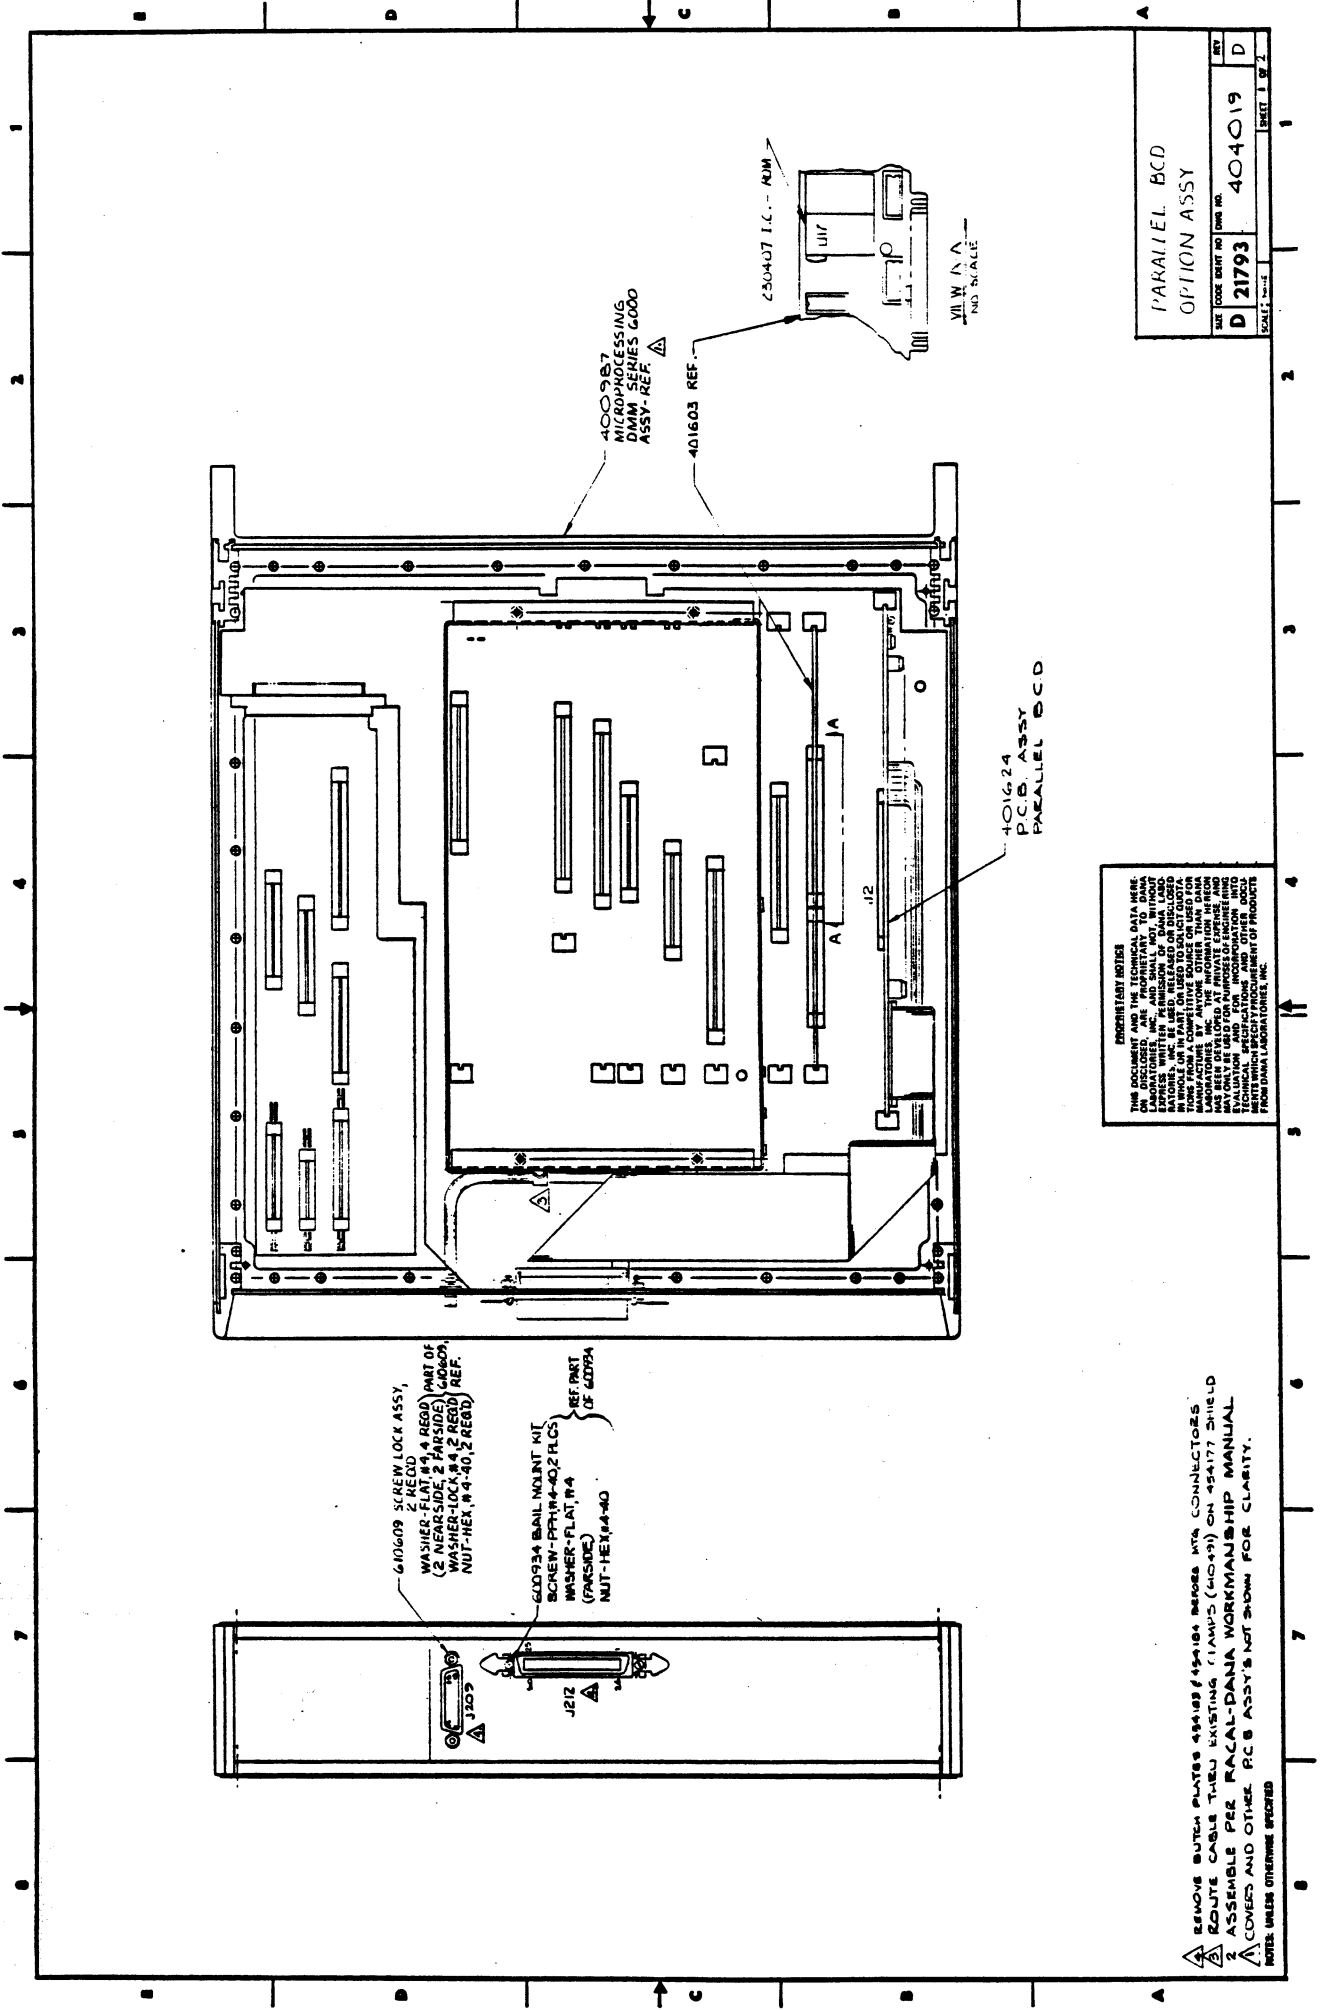

PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL-DANA AND ARE NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF RACAL-DANA LABORATORIES, INC. NO PART OF THIS DOCUMENT IS TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF RACAL-DANA LABORATORIES, INC. THE INFORMATION HEREON IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. TECHNICAL SPECIFICATIONS AND OTHER DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE. RACAL-DANA LABORATORIES, INC.

REMOVE BUTTER PLATES 454183 & 454184 BEFORE MTA CONNECTORS.
 ROUTE CABLES THROUGH EXISTING (14049) ON 454177 SHIELD ASSEMBLY PER FACAL-DANA WORKMANSHIP MANUAL.
 CONES AND OTHER PCB ASSY'S NOT SHOWN FOR CLARITY.
 NOTE: UNLESS OTHERWISE SPECIFIED

| | |
|-----------------------------|-----------|
| PARALLEL BCD OPTION ASSY | |
| DATE | SCALE |
| D 21793 | 1 |
| DOC. SHEET NO. | SHEET NO. |
| 404019 | 1 OF 2 |

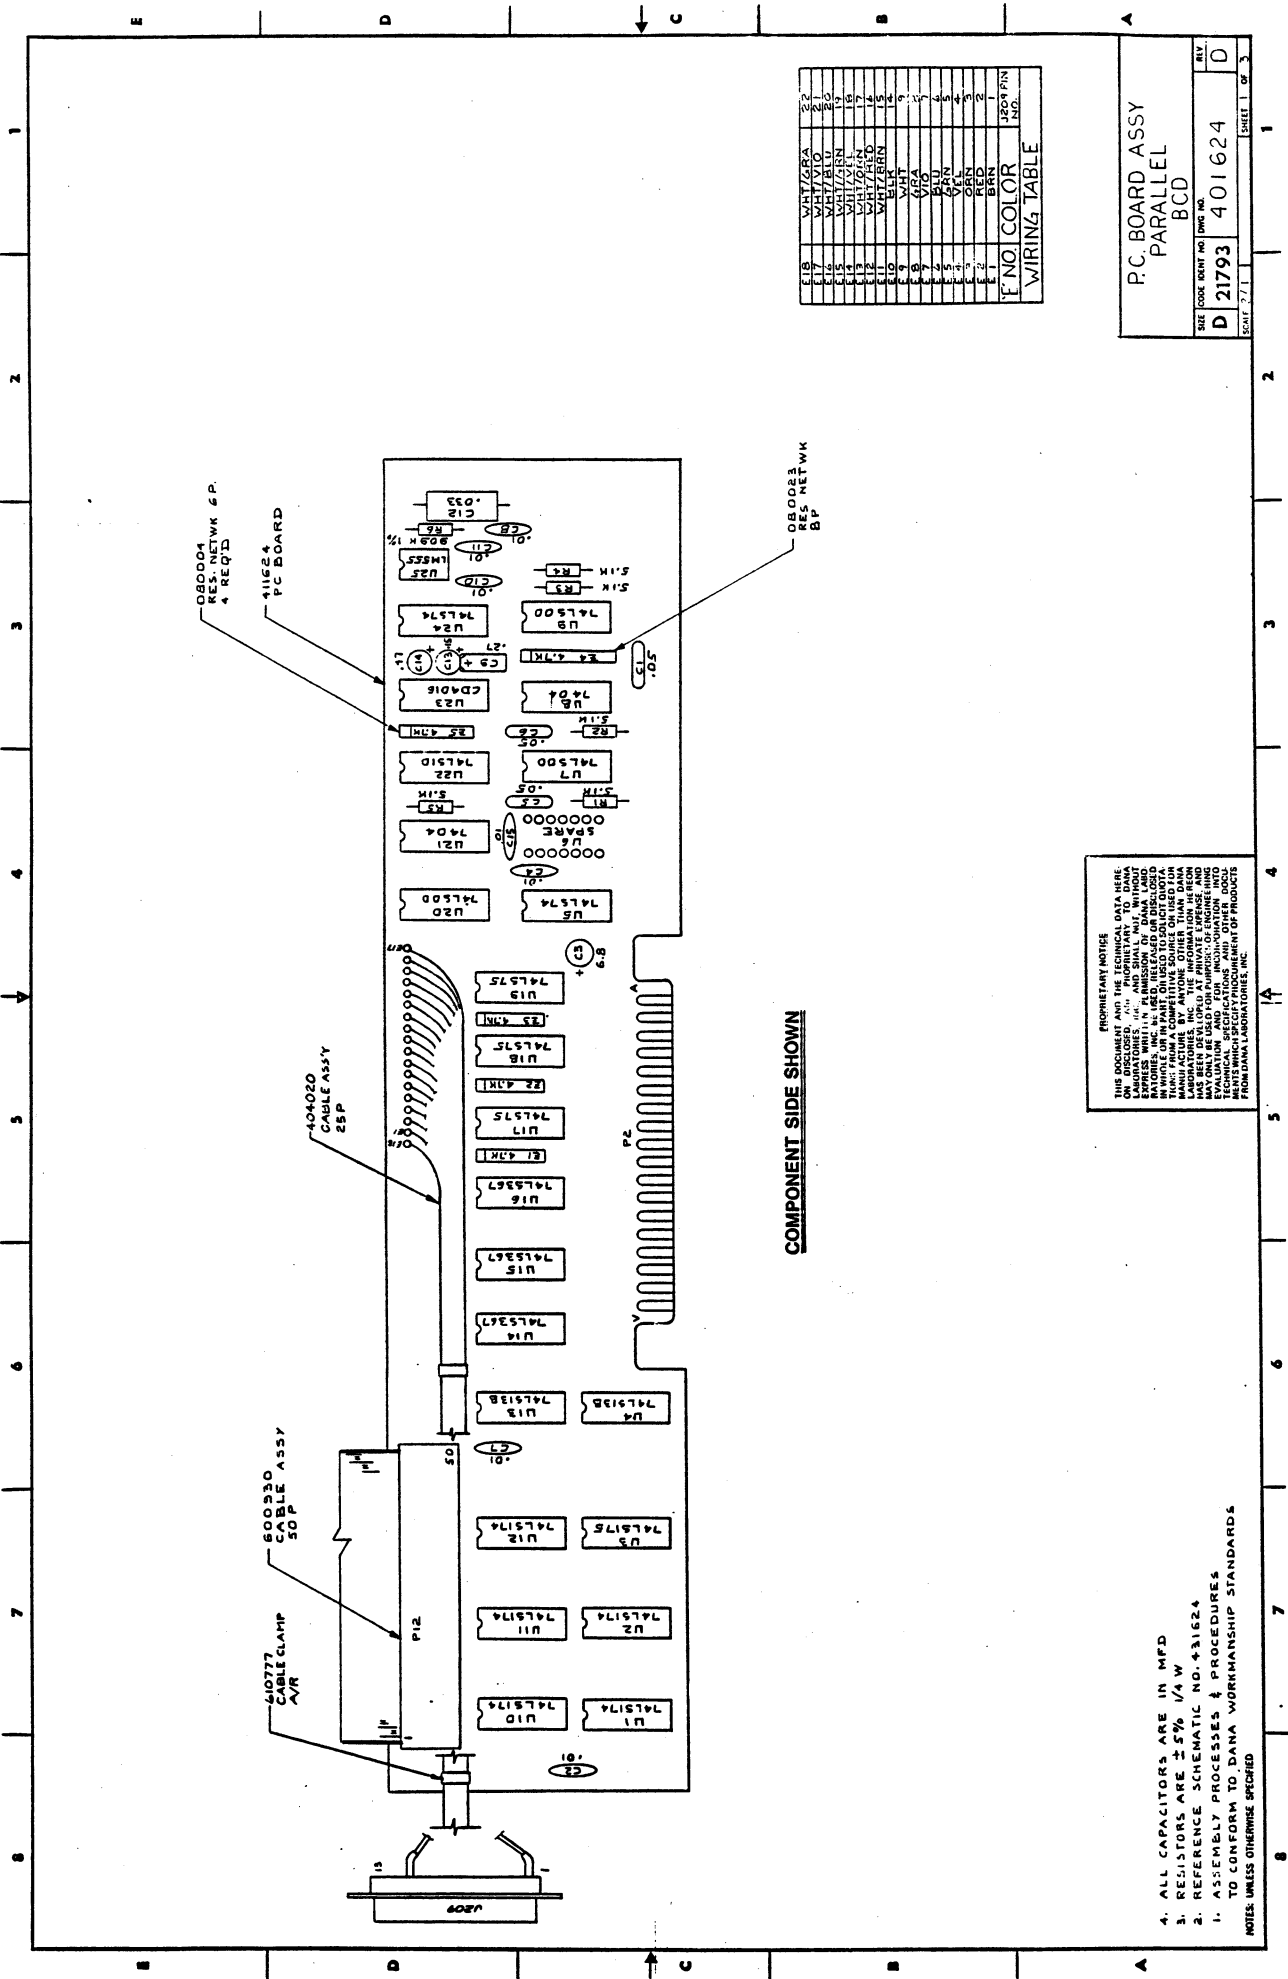


| F. NO. | COLOR | J207 FIN | NO. |
|--------|-------|----------|-----|
| 1 | WHIT | 1 | 1 |
| 2 | WHIT | 2 | 2 |
| 3 | WHIT | 3 | 3 |
| 4 | WHIT | 4 | 4 |
| 5 | WHIT | 5 | 5 |
| 6 | WHIT | 6 | 6 |
| 7 | WHIT | 7 | 7 |
| 8 | WHIT | 8 | 8 |
| 9 | WHIT | 9 | 9 |
| 10 | WHIT | 10 | 10 |
| 11 | WHIT | 11 | 11 |
| 12 | WHIT | 12 | 12 |
| 13 | WHIT | 13 | 13 |
| 14 | WHIT | 14 | 14 |
| 15 | WHIT | 15 | 15 |
| 16 | WHIT | 16 | 16 |
| 17 | WHIT | 17 | 17 |
| 18 | WHIT | 18 | 18 |
| 19 | WHIT | 19 | 19 |
| 20 | WHIT | 20 | 20 |
| 21 | WHIT | 21 | 21 |
| 22 | WHIT | 22 | 22 |
| 23 | WHIT | 23 | 23 |
| 24 | WHIT | 24 | 24 |
| 25 | WHIT | 25 | 25 |
| 26 | WHIT | 26 | 26 |
| 27 | WHIT | 27 | 27 |
| 28 | WHIT | 28 | 28 |
| 29 | WHIT | 29 | 29 |
| 30 | WHIT | 30 | 30 |
| 31 | WHIT | 31 | 31 |
| 32 | WHIT | 32 | 32 |
| 33 | WHIT | 33 | 33 |
| 34 | WHIT | 34 | 34 |
| 35 | WHIT | 35 | 35 |
| 36 | WHIT | 36 | 36 |
| 37 | WHIT | 37 | 37 |
| 38 | WHIT | 38 | 38 |
| 39 | WHIT | 39 | 39 |
| 40 | WHIT | 40 | 40 |
| 41 | WHIT | 41 | 41 |
| 42 | WHIT | 42 | 42 |
| 43 | WHIT | 43 | 43 |
| 44 | WHIT | 44 | 44 |
| 45 | WHIT | 45 | 45 |
| 46 | WHIT | 46 | 46 |
| 47 | WHIT | 47 | 47 |
| 48 | WHIT | 48 | 48 |
| 49 | WHIT | 49 | 49 |
| 50 | WHIT | 50 | 50 |
| 51 | WHIT | 51 | 51 |
| 52 | WHIT | 52 | 52 |
| 53 | WHIT | 53 | 53 |
| 54 | WHIT | 54 | 54 |
| 55 | WHIT | 55 | 55 |
| 56 | WHIT | 56 | 56 |
| 57 | WHIT | 57 | 57 |
| 58 | WHIT | 58 | 58 |
| 59 | WHIT | 59 | 59 |
| 60 | WHIT | 60 | 60 |
| 61 | WHIT | 61 | 61 |
| 62 | WHIT | 62 | 62 |
| 63 | WHIT | 63 | 63 |
| 64 | WHIT | 64 | 64 |
| 65 | WHIT | 65 | 65 |
| 66 | WHIT | 66 | 66 |
| 67 | WHIT | 67 | 67 |
| 68 | WHIT | 68 | 68 |
| 69 | WHIT | 69 | 69 |
| 70 | WHIT | 70 | 70 |
| 71 | WHIT | 71 | 71 |
| 72 | WHIT | 72 | 72 |
| 73 | WHIT | 73 | 73 |
| 74 | WHIT | 74 | 74 |
| 75 | WHIT | 75 | 75 |
| 76 | WHIT | 76 | 76 |
| 77 | WHIT | 77 | 77 |
| 78 | WHIT | 78 | 78 |
| 79 | WHIT | 79 | 79 |
| 80 | WHIT | 80 | 80 |
| 81 | WHIT | 81 | 81 |
| 82 | WHIT | 82 | 82 |
| 83 | WHIT | 83 | 83 |
| 84 | WHIT | 84 | 84 |
| 85 | WHIT | 85 | 85 |
| 86 | WHIT | 86 | 86 |
| 87 | WHIT | 87 | 87 |
| 88 | WHIT | 88 | 88 |
| 89 | WHIT | 89 | 89 |
| 90 | WHIT | 90 | 90 |
| 91 | WHIT | 91 | 91 |
| 92 | WHIT | 92 | 92 |
| 93 | WHIT | 93 | 93 |
| 94 | WHIT | 94 | 94 |
| 95 | WHIT | 95 | 95 |
| 96 | WHIT | 96 | 96 |
| 97 | WHIT | 97 | 97 |
| 98 | WHIT | 98 | 98 |
| 99 | WHIT | 99 | 99 |
| 100 | WHIT | 100 | 100 |

P.C. BOARD ASSY
PARALLEL
BCD

SIZE CODE BANT NO. 401624
D 21793
SHEET 1 OF 3

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON ARE UNCLASSIFIED AND AVAILABLE TO THE PUBLIC WITHOUT LIMITATION. THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF DANA LABORATORIES, INC. AND IS NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF DANA LABORATORIES, INC. IN WHOLE OR IN PART, OR TO BE USED TO FACILITATE THE MANUFACTURE OF ANY PRODUCT OTHER THAN DANA LABORATORIES, INC. PRODUCTS. THE INFORMATION AND DATA CONTAINED HEREIN IS FOR THE EXCLUSIVE USE OF THE MANUFACTURER OF THE EQUIPMENT TO WHICH THIS DOCUMENT ONLY BE USED FOR PURPOSES OF MACHINE BUILDING AND REPAIR. THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED FOR ANY OTHER PURPOSES. TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS ARE AVAILABLE FROM DANA LABORATORIES, INC.

1. ALL CAPACITORS ARE IN MFD
 2. RESISTORS ARE $\pm 5\%$ 1/4 W
 3. REFERENCE SCHEMATIC NO. 431624
 4. ASSEMBLY PROCESSES & PROCEDURES TO CONFORM TO DANA WORKMANSHIP STANDARDS
- NOTE: UNLESS OTHERWISE SPECIFIED

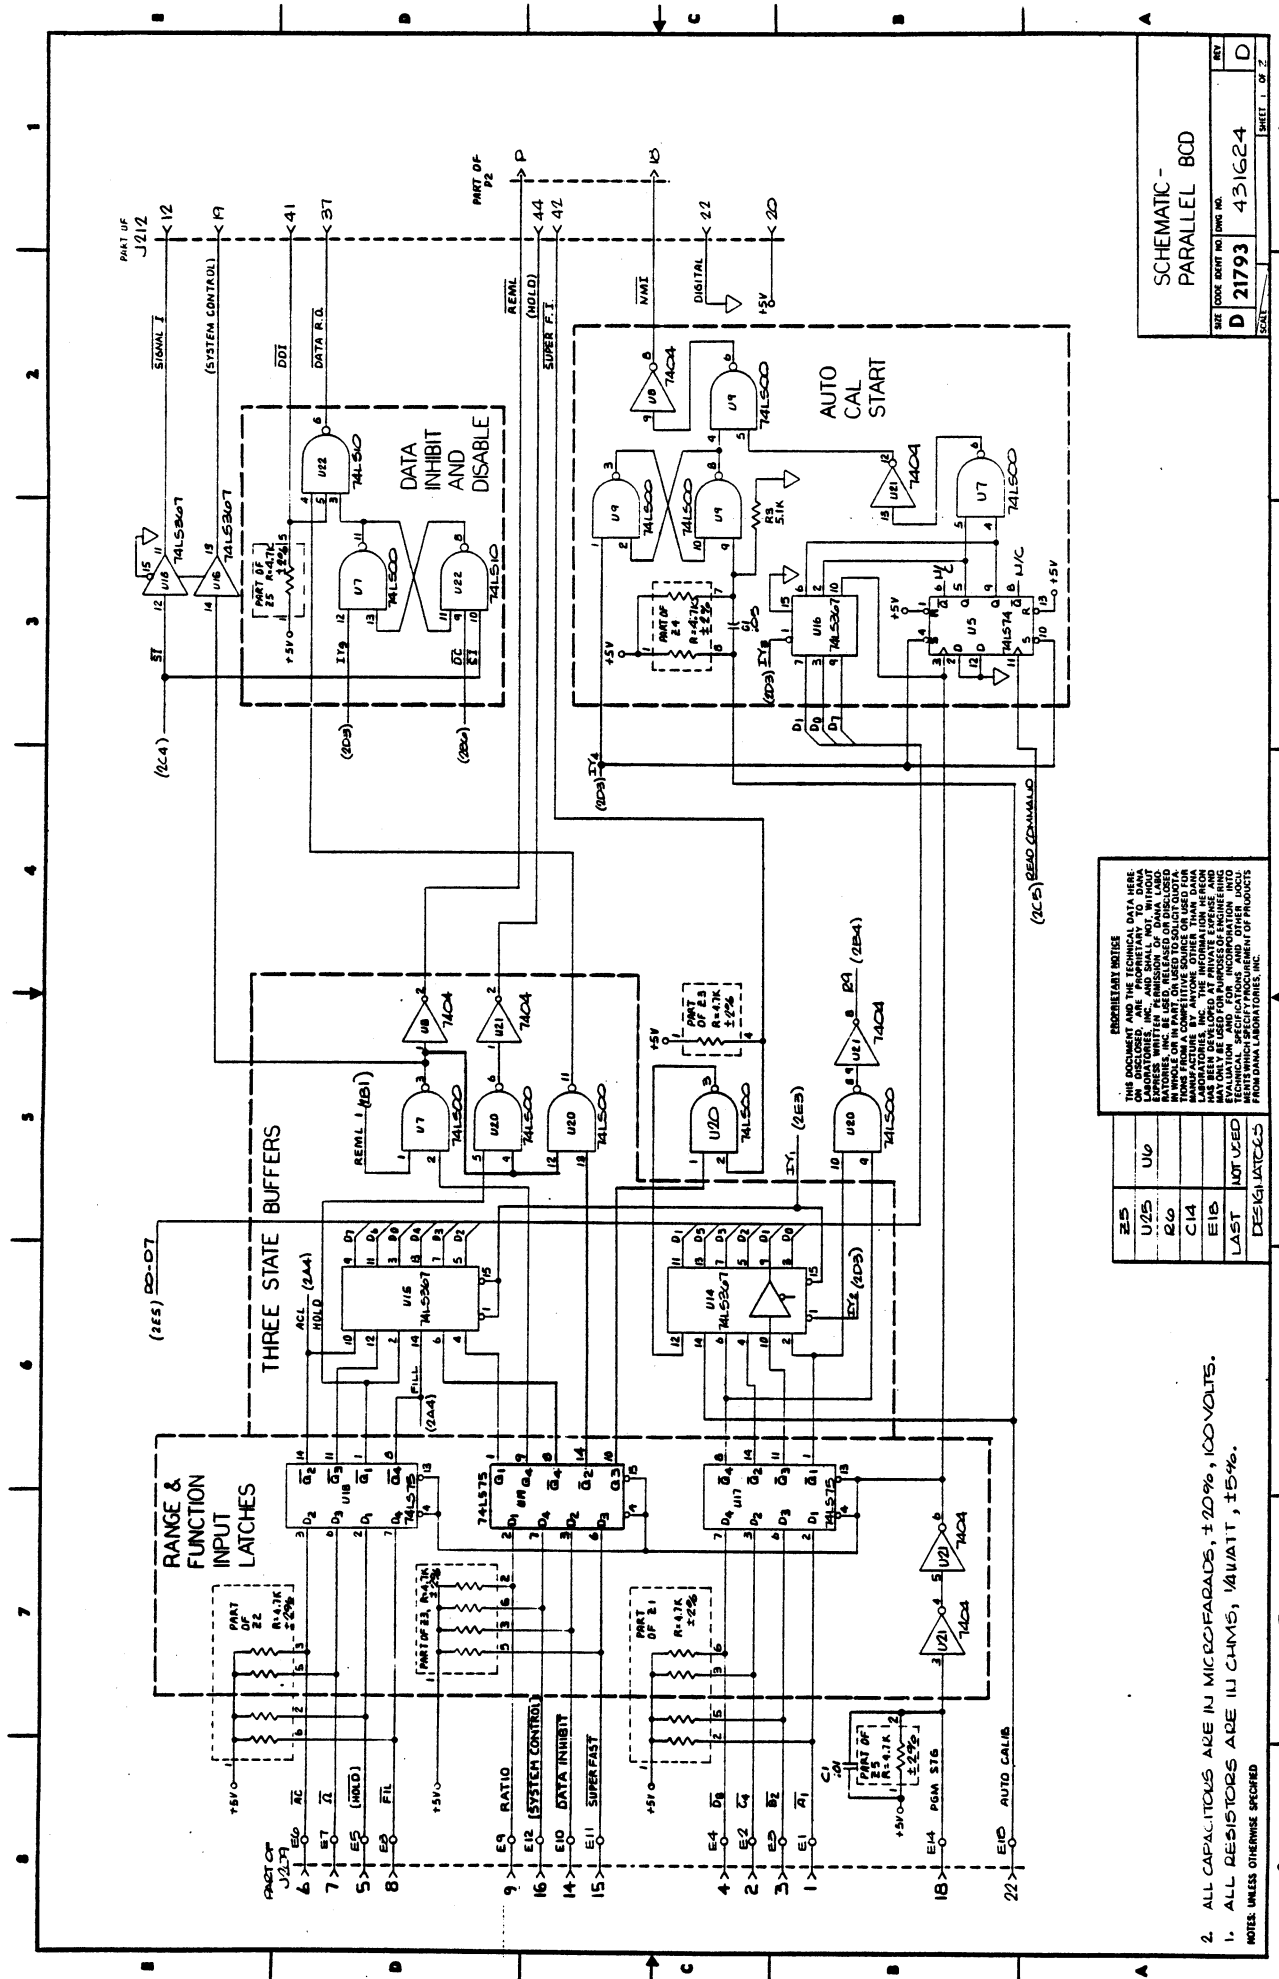


PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREIN DISCLOSED ARE PROPRIETARY TO DATA LABORATORIES, INC. NO PART OF THIS DOCUMENT OR THE INFORMATION HEREIN IS TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WITHOUT THE WRITTEN PERMISSION OF DATA LABORATORIES, INC. THE INFORMATION HEREIN IS TO BE USED ONLY FOR THE PURPOSES OF ENGINEERING DESIGN AND CONSTRUCTION OF EQUIPMENT TO WHICH IT IS SPECIFICALLY APPLICABLE. NO OTHER TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS SHALL BE REQUIRED FOR THE CONSTRUCTION OF SUCH EQUIPMENT.

| | |
|--------|----------|
| 25 | U10 |
| U15 | U10 |
| 26 | U10 |
| C14 | U10 |
| E18 | U10 |
| LAST | NOT USED |
| DESIGN | DATE |

SCHMATIC -
 PARALLEL BCD

SHEET NO. 431624
 SHEET 1 OF 2

2. ALL CAPACITORS ARE IN MICROFARADS, $\pm 20\%$, 100VOLTS.
 1. ALL RESISTORS ARE IN OHMS, 1/4WATT, $\pm 5\%$.
 NOTE: UNLESS OTHERWISE SPECIFIED

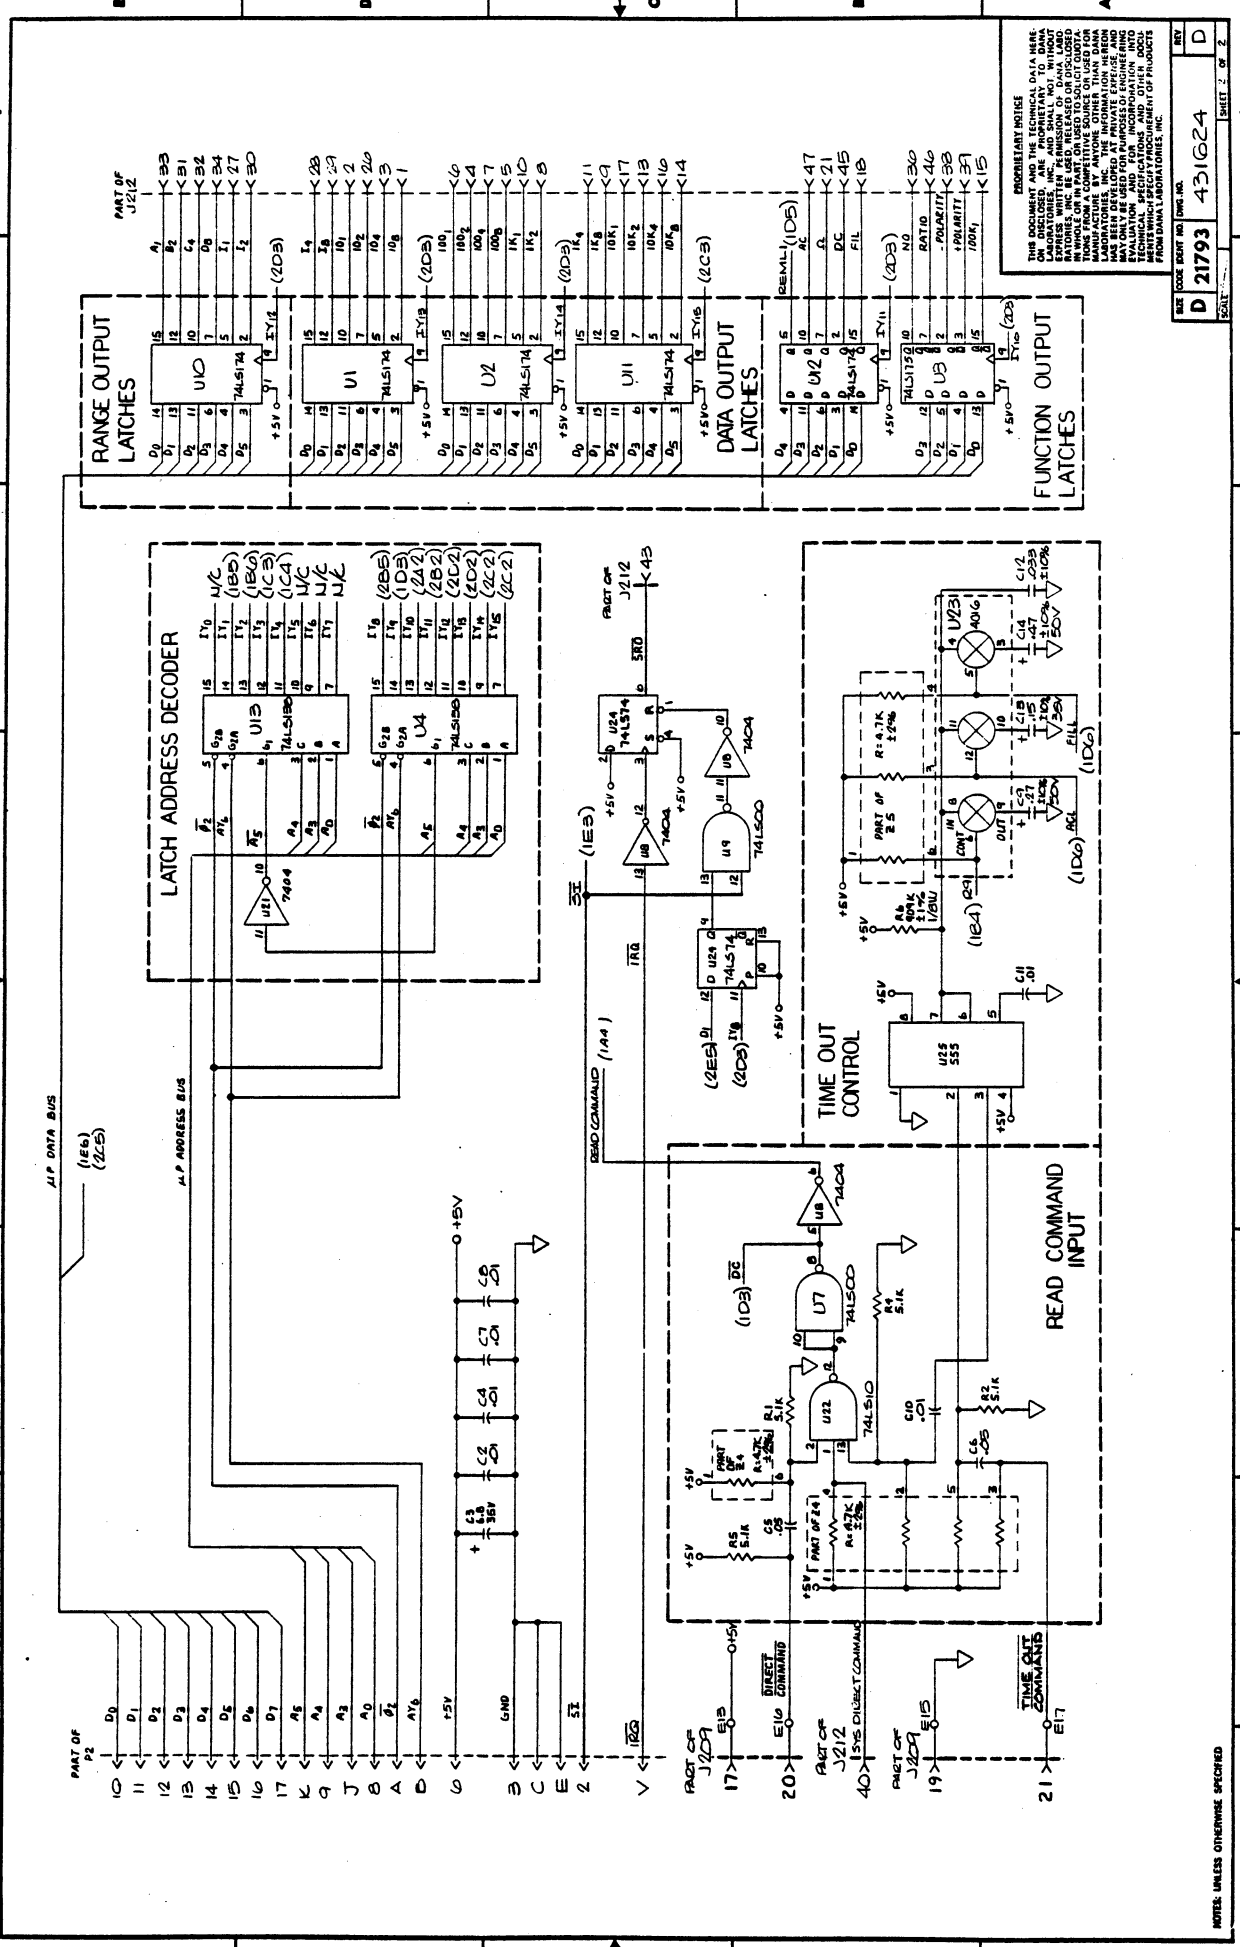


PROPRIETARY NOTICE
 THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO DATA LABORATORIES, INC. AND WILL BE KEPT IN CONFIDENTIALITY AND WILL NOT BE DISCLOSED OR REPRODUCED IN ANY MANNER OR BY ANY MEANS WITHOUT THE WRITTEN PERMISSION OF DATA LABORATORIES, INC. THE INFORMATION HEREON IS FOR INFORMATION PURPOSES ONLY AND DOES NOT CONSTITUTE AN OFFER OF ANY PRODUCT. TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WILL BE FURNISHED UPON REQUEST FROM DATA LABORATORIES, INC.

NOTES: UNLESS OTHERWISE SPECIFIED


600167 - CONN, 25 PIN

500002 - SHRINK TUBING, A/R

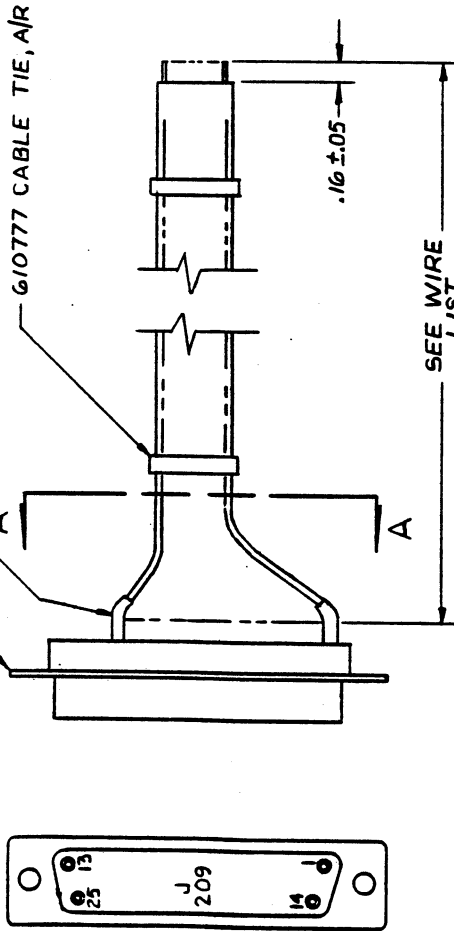

SEE WIRE LIST

| J209 PIN# | COLOR | PART NO. | LENGTH ± .15 |
|-----------|---------|----------|--------------|
| 22 | WHT/GRN | 524989 | 20.0 |
| 21 | WHT/VID | 524979 | 21.2 |
| 20 | WHT/BLU | 524969 | 20.0 |
| 19 | WHT/GRN | 524959 | 20.0 |
| 18 | WHT/YEL | 524949 | 20.0 |
| 17 | WHT/ORN | 524939 | 20.0 |
| 16 | WHT/RED | 524929 | 22.1 |
| 15 | WHT/BRN | 524919 | 20.0 |
| 14 | BLK | 524900 | 20.0 |
| 9 | WHT | 524999 | 20.0 |
| 8 | GRN | 524888 | 20.0 |
| 7 | VID | 524777 | 21.5 |
| 6 | BLU | 524666 | 21.2 |
| 5 | GRN | 524555 | 21.2 |
| 4 | YEL | 524444 | 20.0 |
| 3 | GRN | 524333 | 20.0 |
| 2 | RED | 524222 | 20.0 |
| 1 | BRN | 524111 | 20.0 |
| J209 PIN# | COLOR | PART NO. | LENGTH ± .15 |

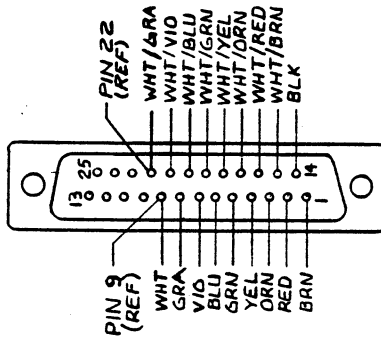

VIEW A-A
SCALE 2/1

WIRE LIST


CABLE ASSEMBLY -
PARALLEL BCD, 25 PIN

| | | | |
|-------|----------------|---------|-----|
| SIZE | CODE IDENT NO. | DWG NO. | REV |
| C | 21793 | 404020 | C |
| SCALE | 2/1 | SH | 1 |


PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO DANA ELECTRONICS, INC. AND ARE NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE EXPRESS WRITTEN PERMISSION OF DANA ELECTRONICS, INC. BE USED, REPRODUCED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE EXPRESS WRITTEN PERMISSION OF DANA ELECTRONICS, INC. THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO DANA ELECTRONICS, INC. AND ARE NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE EXPRESS WRITTEN PERMISSION OF DANA ELECTRONICS, INC.

2. TAG & IDENTIFY WITH DANA
PIN & CURRENT REV. LTR.
1. ASSY PROCESSES & PROCEDURES TO CONFORM TO DANA WORK STDS.
NOTES: UNLESS OTHERWISE SPECIFIED


4 3 2 1

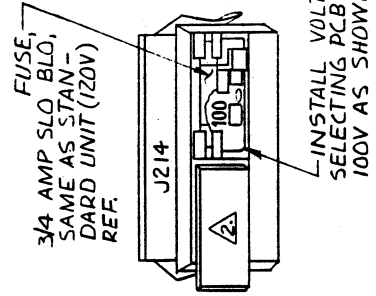


100V OPTION ASSY

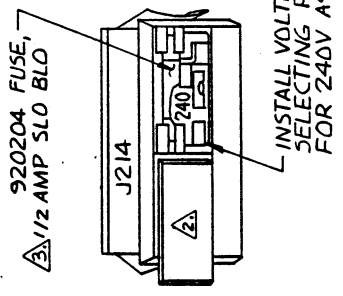

240V OPTION ASSY

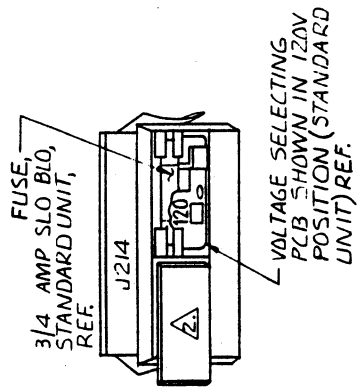

120V (STANDARD UNIT) REF.

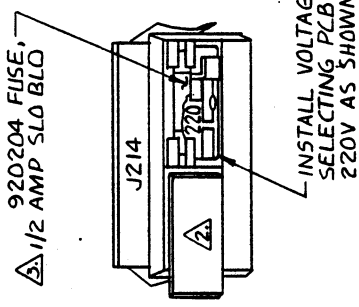

220V OPTION ASSY

1. REMOVE & RETURN
STANDARD FUSE TO
STOCK.


2. FUSE & PCB ACCESS
COVER SHOWN IN OPEN
POSITION.

3. ASSEMBLE PER DANA
WORKMANSHIP MANUAL
NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HERE
ON DISCLOSED ARE PROPRIETARY TO DANA
LABORATORIES, INC. NO PART OF THIS DOCUMENT
MAY BE REPRODUCED OR TRANSMITTED IN ANY
FORM OR BY ANY MEANS WITHOUT THE WRITTEN
PERMISSION OF DANA LABORATORIES, INC. BE
USED FOR RESEARCH OR DISCLOSED TO ANY
PERSON OR ORGANIZATION IN ANY MANNER
WITHOUT THE WRITTEN PERMISSION OF DANA
LABORATORIES, INC. THIS DOCUMENT IS THE
PROPERTY OF DANA LABORATORIES, INC. AND
MAY ONLY BE USED FOR THE PURPOSES OF
IMPLEMENTING THE SPECIFICATIONS AND OTHER
TECHNICAL REQUIREMENTS OF PRODUCTS
FROM DANA LABORATORIES, INC.

| | | |
|---------------------------------|------------------------|------------------|
| 100V, 220V, 240V OPTION ASSY | | REV A |
| SIZE C | CODE IDENT NO 21793 | DWG NO 404042 |
| SCALE | SHEET / OF | |

1 2 3 4



SECTION 8

PARTS LIST

8.1 This section contains lists of replaceable parts arranged in the order of the following subassemblies:

| | |
|-------------------------------------|------|
| Front Panel | 8-4 |
| Rear Panel | 8-5 |
| Motherboard | 8-6 |
| Non-Volatile Memory Cable | 8-9 |
| Display | 8-10 |
| Calibration Module | 8-12 |
| Attenuator Reference | 8-13 |
| 10V Reference | 8-16 |
| Interconnection | 8-17 |
| Non-Volatile Memory | 8-18 |
| Digitizer | 8-20 |
| Isolator | 8-25 |
| Switching | 8-27 |
| Computer I | 8-28 |
| Control Logic | 8-29 |
| Parallel BCD | 8-30 |
| Parallel BCD Cable | 8-33 |
| Ohms | 8-34 |
| Ohms Reference | 8-36 |
| AC Averaging Converter | 8-37 |
| 4-Wire Ratio | 8-40 |
| RMS Converter | 8-41 |
| GPIB | 8-44 |
| GPIB Cable | 8-46 |
| Pre-Amplifier | 8-47 |
| Fast Digitizer | 8-49 |
| Fast Digitizer Cable | 8-51 |
| Ratio Switching | 8-52 |
| Scaling Amplifier | 8-53 |
| Sample and Hold Digitizer | 8-56 |
| 50 Hz Modification | 8-60 |

8.2 Manufacturers are identified by FSC numbers listed in table 8.1, "List of Suppliers". The code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1, H4-2, and their supplements.

Table 8.1 - List of Suppliers

| FSC | NAME | FSC | NAME |
|-------|--|-------|---|
| 00779 | AMP, INC. HARRISBURG, PENNSYLVANIA | 14936 | GENERAL INSTRUMENTS CORP. (Semiconductor Products Group) HICKSVILLE, L.I., NEW YORK |
| 01121 | ALLEN BRADLEY CO. MILWAUKEE, WISCONSIN | 15636 | ELECTROL, INC. SAUGUS, CALIFORNIA |
| 01295 | TEXAS INSTRUMENTS, INC. DALLAS, TEXAS | 17856 | SILICONIX, INC. SANTA CLARA, CALIFORNIA |
| 02111 | SPECTROL ELECTRONICS CORP. CITY OF INDUSTRY, CALIFORNIA | 18324 | SIGNETICS CORP. SUNNYVALE, CALIFORNIA |
| 02114 | FERROXCUBE CORP. SAUGERTIES, NEW YORK | 18612 | VISHAY RESISTOR PRODUCTS MALVERN, PENNSYLVANIA |
| 02660 | AMPHENOL CORP. BROADVIEW, ILLINOIS | 19396 | ILLINOIS TOOL WORKS, INC. (Paktron Division) ALEXANDRIA, VIRGINIA |
| 04222 | AEROVOX CORP. (Hi-Q Division) MYRTLE BEACH, SOUTH CAROLINA | 21317 | ELECTRONIC APPLICATIONS CO. SO. EL MONTE, CALIFORNIA |
| 04713 | MOTOROLA, INC. (Semi Conductor Products Division) PHOENIX, ARIZONA | 21551 | CF ELECTRONICS, INC. VAN NUYS, CALIFORNIA |
| 05397 | UNION CARBIDE CORP. (Materials Systems Division) CLEVELAND, OHIO | 21793 | RACAL-DANA INSTRUMENTS INC. IRVINE, CALIFORNIA |
| 05574 | VIKING INDUSTRIES, INC. CHATSWORTH, CALIFORNIA | 22045 | JORDAN ELECTRIC CO. VAN NUYS, CALIFORNIA |
| 06665 | PRECISION MONOLITHICS SANTA CLARA, CALIFORNIA | 23095 | AZTEC ELECTRONICS, INC. ANAHEIM, CALIFORNIA |
| 08257 | NPC ELECTRONICS CANOGA PARK, CALIFORNIA | 25088 | SIEMENS CORP. (Comp. Group) ISELIN, NEW JERSEY |
| 09023 | CORNELL DUBILIER ELECTRONICS SANFORD, NORTH CAROLINA | 26806 | AMERICAN ZETTLER, INC. COSTA MESA, CALIFORNIA |
| 11236 | CTS OF BERNE, INC. BERNE, INDIANA | 27014 | NATIONAL SEMI CONDUCTOR CORP. SANTA CLARA, CALIFORNIA |
| 11237 | CTS KEENE, INC. PASO ROBLES, CALIFORNIA | 27556 | IMB ELECTRONIC PRODUCTS, INC. SANTA FE SPRINGS, CALIFORNIA |
| 12406 | ELPAC, INC. IRVINE, CALIFORNIA | 31471 | AMERICAN MICRO SYSTEMS, INC. SANTA CLARA, CALIFORNIA |
| 12969 | UNITRODE CORP. WATTERTOWN, MASSACHUSETTS | 32767 | GRIFFITH PLASTIC PRODUCTS CO. BURLINGAME, CALIFORNIA |
| 13919 | BURR BROWN TUCSON, ARIZONA | 34371 | HARRIS SEMICONDUCTOR MELBOURNE, FLORIDA |
| 14674 | CORNING GLASS WORKS CORNING, NEW YORK | | |

Table 8.1 - List of Suppliers continued

| FSC | NAME | FSC | NAME |
|-------|--|-------|---|
| 50434 | HEWLETT PACKARD CO. (HPA Division) PALO ALTO, CALIFORNIA | 74970 | E. F. JOHNSTON CO. WASECA, MINNESOTA |
| 50579 | LITRONIX, INC. CUPERTINO, CALIFORNIA | 79727 | C-W INDUSTRIES WARMINSTER, PENNSYLVANIA |
| 52763 | STETTNER-TRUSH CAZENOVIA, NEW YORK | 80131 | ELECTRONICS INDUSTRIES ASSOC. WASHINGTON, D.C. |
| 56289 | SPRAGUE ELECTRIC CO. (Pacific Division) LOS ANGELES, CALIFORNIA | 81312 | WINCHESTER ELECTRONICS DIVISION (Litton Industries, Inc.) OAKVILLE, CONNECTICUT |
| 71471 | AEROVOX CORP. (Cinema Plant) MONCK'S CORNER, SOUTH CAROLINA | 81349 | MILITARY SPECIFICATION |
| 71590 | CENTRALAB ELECTRONICS MILWAUKEE, WISCONSIN | 86884 | RCA (Electronics Components Div.) HARRISON, NEW JERSEY |
| 71785 | TRW ELECTRONIC COMPONENTS (Cinch Division) ELK GROVE VILLAGE, ILLINOIS | 91293 | JOHANSON MFG. CO. BOONTON, NEW JERSEY |
| 72136 | ELECTRO MOTIVE MFG. CO., INC. WILLIMANTIC, CONNECTICUT | 91637 | DALE ELECTRONICS, INC. COLUMBUS, NEBRASKA |
| 72982 | ERIE TECHNOLOGICAL PRODUCTS, INC. ERIE, PENNSYLVANIA | 95238 | CONTINENTAL CONNECTOR WOODSIDE, NEW YORK |
| 73138 | BECKMAN INSTRUMENTS, INC. FULLERTON, CALIFORNIA | 95275 | VITRAMON, INC. BRIDGEPORT, CONNECTICUT |
| 73445 | AMPEREX ELECTRONIC CORP. HICKSVILLE, L.I., NEW YORK | 98291 | SEAELECTRO CORP. MAMARONECK, NEW YORK |
| 75915 | LITTELFUSE, INC. DES PLAINES, ILLINOIS | 99800 | AMERICAN PRECISION INDUSTRIES, INC. (Delevan Div.) EAST AURORA, NEW YORK |
| | | — | LIBERTY ELECTRONICS EL SEGUNDO, CALIFORNIA |

404011 - Assy., PANEL, FRONT

| REF DES | RACAL- DANA P/N | DESCRIPTION | FSC | MANU P/N |
|--------------|-----------------------|---|------------|---------------------|
| S101 S102 | 601109 454217 | SWITCH ROCKER DPST 12(4)A/250V KEYBOARD ASSY | — 21793 | 1545-0102 454217 |

404013, 404169 – REAR PANEL ASSEMBLY

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|--------------------|---------------------------|----------|----------|-----|-------|-------------------------------|
| C201 | 100111 | CAP | CERAM | .01 MFD | 2000 V | | 71471 | HVD6-2KV |
| C202 | 100111 | CAP | CERAM | .01 MFD | 2000 V | | 71471 | HVD6-2KV |
| C203 | 110125 | CAP | TANTA | 2.2 MFD | 35 V | 20% | 05397 | T368B225M035AS |
| C204 | 110125 | CAP | TANTA | 2.2 MFD | 35 V | 20% | 05397 | T368B225M035AS |
| B201 | 920790 | FAN | | 50/60 HZ | | | 27556 | PWS2107FL |
| F201 | 920205 | FUSE | GLASS | .75A | 250 V | | 75915 | 3AG3/4ASB |
| J210 | 600808 | CONN | | BNC | | | 02660 | 31-010 |
| J211 | 600586 | POST, BINDING | | WHITE | | | 32767 | 820-25 |
| J214 | 600795 | CONN | VOLTAGE SELECTING & FUSED | | | | 95238 | 6J1 |
| J215 | 600587 | POST, BINDING | | BLACK | | | 32767 | 820-45 |
| S201 | 600912 | SWITCH, SLIDE | | | | | 79727 | GF-323-440/G20-30/ G02-150 |
| T201 | 300091 | TRANSFORMER | POWER, STEP DOWN | | | | 23095 | 14060 |
| U201 | 230275 | INTEGRATED CIRCUIT | | | MC7805CT | | 04713 | MC7805CT |
| U202 | 230275 | INTEGRATED CIRCUIT | | | MC7805CT | | 04713 | MC7805CT |

401602 - Assy., PCB, MOTHERBOARD

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|--------|------------|--------|--------------|-------|-------------------|
| C1 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C2 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C3 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C4 | 100113 | CAP | CERAM | 6800 PFD | 1000 V | 20% | 56289 | C012B102H682M |
| C5 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C6 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C8 | 110158 | CAP | TANTA | 10 MFD | 50 V | 10% | 05397 | T362C106K050A S |
| C9 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C10 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C12 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C13 | 110192 | CAP | ELECT | 1000 MFD | 35 V | | | 35TAL1000 |
| C14 | 110192 | CAP | ELECT | 1000 MFD | 35 V | | | 35TAL1000 |
| C15 | 110178 | CAP | ELECT | 47 MFD | 100 V | | | 100VBSL47 |
| C16 | 110178 | CAP | ELECT | 47 MFD | 100 V | | | 100VBSL47 |
| C17 | 110178 | CAP | ELECT | 47 MFD | 100 V | | | 100VBSL47 |
| C18 | 110193 | CAP | ELECT | 100 MFD | 50 V | | | See Description |
| C19 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C20 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C21 | 110194 | CAP | ELECT | 470 MFD | 50 V | Radial Leads | | See Description |
| C23 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C24 | 110193 | CAP | ELEC | 100 MFD | 50 V | | | See description |
| C25 | 110158 | CAP | TANTA | 10 MFD | 50 V | 10% | 05397 | T362C106K050A |
| C26 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C27 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C28 | 110192 | CAP | ELECT | 1000 MFD | 35 V | | | 35TAL1000 |
| C29 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C30 | 110194 | CAP | ELECT | 470 MFD | 50 V | Radial Leads | | See Description |
| C31 | 110174 | CAP | ELECT | 10,000 MFD | 15 V | | | 3050HS103U015244G |
| C32 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C33 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C34 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C35 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| CR1 | 210004 | DIODE | SILICO | | 1N4004 | | 81349 | 1N4004 |
| CR2 | 210004 | DIODE | SILICO | | 1N4004 | | 81349 | 1N4004 |
| CR3 | 210004 | DIODE | SILICO | | 1N4004 | | 81349 | 1N4004 |
| CR4 | 210004 | DIODE | SILICO | | 1N4004 | | 81349 | 1N4004 |
| CR5 | 210004 | DIODE | SILICO | | 1N4004 | | 81349 | 1N4004 |
| CR6 | 210004 | DIODE | SILICO | | 1N4004 | | 81349 | 1N4004 |
| CR7 | 210004 | DIODE | SILICO | | 1N4004 | | 81349 | 1N4004 |
| CR8 | 210004 | DIODE | SILICO | | 1N4004 | | 81349 | 1N4004 |
| CR9 | 210004 | DIODE | SILICO | | 1N4004 | | 81349 | 1N4004 |
| CR10 | 210070 | DIODE | POWER | 3 AMP | MR501 | | 04713 | MR501 |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|---------------------------|---------------|------------|------------|-------|-------------|
| CR11 | 210070 | DIODE | POWER | 3 AMP | MR501 | 04713 | MR501 |
| CR12 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR13 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR14 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR15 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR16 | 220022 | DIODE | SILICO, ZENER | | 1N965B | 81349 | 1N965B |
| CR17 | 220035 | DIODE | ZENER | 16 V | 1N966B | 81349 | 1N966B |
| CR18 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR19 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR20 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR21 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR22 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR23 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR24 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR25 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR26 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR27 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR28 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| CR29 | 210004 | DIODE | SILICO | | 1N4004 | 81349 | 1N4004 |
| J300 | 600733 | CONN | 25 P | Double Row | | 05574 | 3VH25/1JN5 |
| OCI 2 | 250007 | OPTICAL ISOLATOR | | | | 50579 | 1L-74 |
| OCI 3 | 250006 | HI SPEED OPTICAL ISOLATOR | | | | 50434 | HP5082-4351 |
| OCI 4 | 250006 | HI SPEED OPTICAL ISOLATOR | | | | 50434 | HP5082-4351 |
| Q1 | 200183 | TRANS | SILICO | PNP | MJE371 | 04713 | MJE371 |
| R2 | 000301 | RES | CARBON | 300 OHM | | 81349 | RC07GF301J |
| R3 | 000102 | RES | CARBON | 1 K | 5% 1/4W | 81349 | RC07GF102J |
| R4 | 000301 | RES | CARBON | 300 OHM | 5% 1/4W | 81349 | RC07GF301J |
| R5 | 000301 | RES | CARBON | 300 OHM | 5% 1/4W | 81349 | RC07GF301J |
| R6 | 000911 | RES | CARBON | 910 OHM | 5% 1/4W | 81349 | RC07GF911J |
| R7 | 001752 | RES | CARBON | 240 OHM | 5% 1W | 21793 | 001752 |
| R8 | 000104 | RES | CARBON | 100 K | 5% 1/4W | 81349 | RC07GF104J |
| T1 | 300087 | TRANS | PULSE | | | 21793 | 300087 |
| T2 | 300087 | TRANS | PULSE | | | 21793 | 300087 |
| T3 | 300087 | TRANS | PULSE | | | 21793 | 300087 |
| U1 | 230275 | IC | | | MC7805CT | 04713 | MC7805CT |
| U2 | 230408 | IC | | | MM74C165 | 27014 | MM74C165 |
| U4 | 230404 | IC | | | MC14094BCP | 04713 | MC14094BCP |
| U5 | 230406 | IC | | | MC1412P | 04713 | MC1412P |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|-----------|------|------------------|-------|----------------------|
| U6 | 230194 | IC | | | SN74LS74N | 01295 | SN74LS74N |
| U7 | 230403 | IC | | | MM74C14N | 27014 | MM74C14N |
| U8 | 230406 | IC | | | MC1412P | 04713 | MC1412P |
| U9 | 230404 | IC | | | MC14094BCP | 04713 | MC14094BCP |
| U10 | 230330 | IC | | | 74LS367 | 01295 | 74LS367 |
| U11 | 230393 | IC | | | MC7824T | 04713 | MC7824T |
| U12 | 230378 | IC | | | 7915CT | 04713 | 7915CT |
| U13 | 230409 | IC | | | μ A7924CT | 27014 | μ A7924CT |
| U14 | 230275 | IC | | | MC7805CT | 04713 | MC7805CT |
| U15 | 230373 | IC | | | 7815CT | 04713 | 7815CT |
| W1 | 600245 | JUMPER | INSULATED | | | | L-2007-1LP |
| Z1 | 080012 | RES | CERMET | 15 K | Network 8P,7R 2% | 11236 | 750-81-R15K Ω |
| Z2 | 080012 | RES | CERMET | 15 K | Network 8P,7R 2% | 11236 | 750-81-R15K Ω |
| Z3 | 080020 | RES | CERMET | 10 K | Network 8P,7R 2% | 11236 | 750-81-R10K Ω |

404012 – Assy., CABLE, NON-VOLATILE MEMORY

| REF DES | RACAL- DANA P/N | DESCRIPTION | FSC | MANU P/N |
|------------|-----------------------|-------------|-------|---------------|
| P11 | 600566 | CONN 6 P | 71785 | 251-06-30-160 |

401600 - Assy., PCB, DISPLAY

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|-------------------------------|---------|-------------|-----|-------|----------------|
| C1 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C2 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C3 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C4 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C5 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C6 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| CR1 | 210079 | LAMP | HI EFFICIENCY, YELLOW | | Solid State | | 50434 | HP5082-4555 |
| CR2 | 210079 | LAMP | HI EFFICIENCY, YELLOW | | Solid State | | 50434 | HP5082-4555 |
| CR3 | 210079 | LAMP | HI EFFICIENCY, YELLOW | | Solid State | | 50434 | HP5082-4555 |
| CR4 | 210079 | LAMP | HI EFFICIENCY, YELLOW | | Solid State | | 50434 | HP5082-4555 |
| CR5 | 210079 | LAMP | HI EFFICIENCY, YELLOW | | Solid State | | 50434 | HP5082-4555 |
| CR6 | 210071 | LAMP | HI EFFICIENCY, RED | | Solid State | | 50434 | HP5082-4650 |
| CR7 | 210071 | LAMP | HI EFFICIENCY, RED | | Solid State | | 50434 | HP5082-4650 |
| CR8 | 210071 | LAMP | HI EFFICIENCY, RED | | Solid State | | 50434 | HP5082-4650 |
| CR9 | 210071 | LAMP | HI EFFICIENCY, RED | | Solid State | | 50434 | HP5082-4650 |
| CR10 | 210071 | LAMP | HI EFFICIENCY, RED | | Solid State | | 50434 | HP5082-4650 |
| CR11 | 210071 | LAMP | HI EFFICIENCY, RED | | Solid State | | 50434 | HP5082-4650 |
| CR12 | 210071 | LAMP | HI EFFICIENCY, RED | | Solid State | | 50434 | HP5082-4650 |
| CR13 | 210079 | LAMP | HI EFFICIENCY, YELLOW | | Solid State | | 50434 | HP5082-4555 |
| CR14 | 210079 | LAMP | HI EFFICIENCY, YELLOW | | Solid State | | 50434 | HP5082-4555 |
| CR15 | 210079 | LAMP | HI EFFICIENCY, YELLOW | | Solid State | | 50434 | HP5082-4555 |
| CR16 | 210079 | LAMP | HI EFFICIENCY, YELLOW | | Solid State | | 50434 | HP5082-4555 |
| CR17 | 210079 | LAMP | HI EFFICIENCY, YELLOW | | Solid State | | 50434 | HP5082-4555 |
| CR18 | 210079 | LAMP | HI EFFICIENCY, YELLOW | | Solid State | | 50434 | HP5082-4555 |
| CR19 | 210079 | LAMP | HI EFFICIENCY, YELLOW | | Solid State | | 50434 | HP5082-4555 |
| CR20 | 210079 | LAMP | HI EFFICIENCY, YELLOW | | Solid State | | 50434 | HP5082-4555 |
| CR21 | 210079 | LAMP | HI EFFICIENCY, YELLOW | | Solid State | | 50434 | HP5082-4555 |
| CR22 | 210071 | LAMP | HI EFFICIENCY, RED | | Solid State | | 50434 | HP5082-4650 |
| CR23 | 210071 | LAMP | HI EFFICIENCY, RED | | Solid State | | 50434 | HP5082-4650 |
| CR24 | 210071 | LAMP | HI EFFICIENCY, RED | | Solid State | | 50434 | HP5082-4650 |
| CR25 | 210071 | LAMP | HI EFFICIENCY, RED | | Solid State | | 50434 | HP5082-4650 |
| CR26 | 210071 | LAMP | HI EFFICIENCY, RED | | Solid State | | 50434 | HP5082-4650 |
| CR27 | 210071 | LAMP | HI EFFICIENCY, RED | | Solid State | | 50434 | HP5082-4650 |
| LED 1 | 210074 | DIODE | 7 Segment LED DISPLAY, YELLOW | | | | 50434 | HP5032-7660 |
| LED 2 | 210074 | DIODE | 7 Segment LED DISPLAY, YELLOW | | | | 50434 | HP5032-7660 |
| LED 3 | 210074 | DIODE | 7 Segment LED DISPLAY, YELLOW | | | | 50434 | HP5032-7660 |
| LED 4 | 210074 | DIODE | 7 Segment LED DISPLAY, YELLOW | | | | 50434 | HP5032-7660 |
| LED 5 | 210074 | DIODE | 7 Segment LED DISPLAY, YELLOW | | | | 50434 | HP5032-7660 |
| LED 6 | 210074 | DIODE | 7 Segment LED DISPLAY, YELLOW | | | | 50434 | HP5032-7660 |
| LED 7 | 210074 | DIODE | 7 Segment LED DISPLAY, YELLOW | | | | 50434 | HP5032-7660 |
| LED 8 | 210074 | DIODE | 7 Segment LED DISPLAY, YELLOW | | | | 50434 | HP5032-7660 |
| LED 9 | 210074 | DIODE | 7 Segment LED DISPLAY, YELLOW | | | | 50434 | HP5032-7660 |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|--------|----------|-------------------|-------|---------------|
| P1 | 600280 | CONN | | 12 P | | 71785 | 252-12-30-160 |
| U1 | 230510 | IC | | | 74LS164 | | 74LS164 |
| U2 | 230510 | IC | | | 74LS164 | | 74LS164 |
| U3 | 230510 | IC | | | 74LS164 | | 74LS164 |
| U4 | 230510 | IC | | | 74LS164 | | 74LS164 |
| U5 | 230510 | IC | | | 74LS164 | | 74LS164 |
| U6 | 230510 | IC | | | 74LS164 | | 74LS164 |
| U7 | 230510 | IC | | | 74LS164 | | 74LS164 |
| U8 | 230510 | IC | | | 74LS164 | | 74LS164 |
| U9 | 230510 | IC | | | 74LS164 | | 74LS164 |
| U10 | 230510 | IC | | | 74LS164 | | 74LS164 |
| U11 | 230330 | IC | | | 74LS367 | 01295 | 74LS367 |
| U12 | 230192 | IC | | | SN74LS05N | 01295 | SN74LS05N |
| Z1 | 080026 | RES | ARRAY | 100 OHMS | 13R TO COMMON PIN | 27014 | RA-13-100N |
| Z2 | 080028 | RES | ARRAY | 150 OHMS | 13R TO COMMON PIN | 27014 | RA-13-150N |
| Z3 | 080027 | RES | ARRAY | 120 OHMS | 8R IN DIP | 27014 | RA-08-120N |
| Z4 | 080027 | RES | ARRAY | 120 OHMS | 8R IN DIP | 27014 | RA-08-120N |
| Z5 | 080027 | RES | ARRAY | 120 OHMS | 8R IN DIP | 27014 | RA-08-120N |
| Z6 | 080027 | RES | ARRAY | 120 OHMS | 8R IN DIP | 27014 | RA-08-120N |
| Z7 | 080027 | RES | ARRAY | 120 OHMS | 8R IN DIP | 27014 | RA-08-120N |
| Z8 | 080027 | RES | ARRAY | 120 OHMS | 8R IN DIP | 27014 | RA-08-120N |
| Z9 | 080005 | RES | CERMET | 10 K | Network 6P.5R 2% | 11236 | 750-61-R10KΩ |
| Z10 | 080027 | RES | ARRAY | 120 OHMS | 8R IN DIP | 27014 | RA-08-120N |

404015 – MODULE ASSY., CALIBRATION

| REF DES | RACAL- DANA P/N | DESCRIPTION | | FSC | MANU P/N |
|------------|-----------------------|-------------------|-------|-------|--------------|
| J101 | 600587 | POST, BINDING | BLACK | 32767 | 820-45 |
| J102 | 600586 | POST, BINDING | WHITE | 32767 | 820-25 |
| J103 | 600587 | POST, BINDING | BLACK | 32767 | 820-45 |
| J104 | 600586 | POST, BINDING | WHITE | 32767 | 820-25 |
| J105 | 600587 | POST, BINDING | BLACK | 32767 | 820-45 |
| J201 | 600586 | POST, BINDING | WHITE | 32767 | 820-25 |
| J202 | 600587 | POST, BINDING | BLACK | 32767 | 820-45 |
| J203 | 600587 | POST, BINDING | BLACK | 32767 | 820-45 |
| J204 | 600586 | POST, BINDING | WHITE | 32767 | 820-25 |
| J205 | 600587 | POST, BINDING | BLACK | 32767 | 820-45 |
| J206 | 600586 | POST, BINDING | WHITE | 32767 | 820-25 |
| J207 | 600587 | POST, BINDING | BLACK | 32767 | 820-45 |
| P308 | 600944 | CONN | 3S1P | 81312 | JF1P-3SB |
| S126 | 600910 | SWITCH, MINIATURE | | 79727 | GF-126-DP-DT |
| S127 | 600910 | SWITCH, MINIATURE | | 79727 | GF-126-DP-DT |

401608 - Assy., PCB, ATTENUATOR REFERENCE

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|---------------|----------|-----------|-------|--------------|----------------|
| AR1 | 230191 | IC | | | (OP-07CJ) | 06665 | TO-99(J)MONO | |
| AR2 | 230103 | IC | | | LM308 | 27014 | LM308 | |
| C1 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C2 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C3 | 100113 | CAP | CERAM | 6800 PFD | 1000 V | 20% | 56289 | C023B102H682M |
| C4 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C5 | 120308 | CAP | POLY | .047 MFD | 250 V | 10% | 73445 | C280MAE/A47K |
| C6 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C7 | 100068 | CAP | CERAM | .02 MFD | 100 V | 20% | 56289 | C023B101H203M |
| C10 | 120290 | CAP | MYLAR | .22 MFD | 100 V | 20% | 73455 | C281AH/A220K |
| C11 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C12 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C13 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C14 | 100012 | CAP | CERAM | 33 PFD | 500 V | 10% | 71471 | TCD-DI-1(N750) |
| C15 | 120290 | CAP | MYLAR | .22 MFD | 100 V | 20% | 73445 | C281AH/A220K |
| CR3 | 220004 | DIODE | SILICO, ZENER | | 1N961B | | 81349 | 1N961B |
| CR4 | 220004 | DIODE | SILICO, ZENER | | 1N961B | | 81349 | 1N961B |
| CR5 | 220085 | DIODE | ZENER | | TVS515 | | 12969 | TVS515 |
| CR6 | 220085 | DIODE | ZENER | | TVS515 | | 12969 | TVS515 |
| E9 | 600766 | EYELET | TEFLON | | | | 98291 | X-121973-1 |
| E10 | 600766 | EYELET | TEFLON | | | | 98291 | X-121973-1 |
| E11 | 600766 | EYELET | TEFLON | | | | 98291 | X-121973-1 |
| E12 | 600766 | EYELET | TEFLON | | | | 98291 | X-121973-1 |
| E13 | 600766 | EYELET | TEFLON | | | | 98291 | X-121973-1 |
| E14 | 600766 | EYELET | TEFLON | | | | 98291 | X-121973-1 |
| E15 | 600766 | EYELET | TEFLON | | | | 98291 | X-121973-1 |
| E16 | 600766 | EYELET | TEFLON | | | | 98291 | X-121973-1 |
| E17 | 600766 | EYELET | TEFLON | | | | 98291 | X-121973-1 |
| E18 | 600766 | EYELET | TEFLON | | | | 98291 | X-121973-1 |
| J308 | 600943 | CONN | | 3P1S | | | 81312 | JF1S-3PB |
| K1 | 310112 | RELAY | REED | 28 V | | | 26806 | AZ421-467-204 |
| K2 | 310112 | RELAY | REED | 28 V | | | 26806 | AZ421-467-204 |
| K3 | 310112 | RELAY | REED | 28 V | | | 26806 | AZ421-467-204 |
| K4 | 310112 | RELAY | REED | 28 V | | | 26806 | AZ421-467-204 |
| K5 | 310111 | RELAY | REED | 28 V | | | 26806 | AZ420-467-202 |
| K6 | 310111 | RELAY | REED | 28 V | | | 26806 | AZ420-467-202 |
| K7 | 310111 | RELAY | REED | 28 V | | | 26806 | AZ420-467-202 |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-----------------------------|--------|----------------|-------------|-------|-------------|
| Q1 | 200088 | DIODE | SILICO | PNP | 2N4248 | 80131 | 2N4248 |
| Q2 | 200200 | DIODE | | NPN | 200200 | 21793 | 200200 |
| Q3 | 200200 | DIODE | | NPN | 200200 | 21793 | 200200 |
| Q4 | 200200 | DIODE | | NPN | 200200 | 21793 | 200200 |
| Q5 | 200200 | DIODE | | NPN | 200200 | 21793 | 200200 |
| Q6 | 200200 | DIODE | | NPN | 200200 | 21793 | 200200 |
| R1 | 020640 | RES | WW | ATTENUATOR SET | | 21793 | 020640 |
| R2 | 020640 | RES | WW | ATTENUATOR SET | | 21793 | 020640 |
| R3 | 020640 | RES | WW | ATTENUATOR SET | | 21793 | 020640 |
| R4 | 020640 | RES | WW | ATTENUATOR SET | | 21793 | 020640 |
| R5 | 020640 | RES | WW | ATTENUATOR SET | | 21793 | 020640 |
| R6 | 010871 | RES | | 5 K | Matched Set | 21793 | 010871 |
| R7 | 000133 | RES | CARBON | 13 K | 5% 1/4W | 81349 | RC07GF133J |
| R8 | 000100 | RES | CARBON | 10 OHM | 5% 1/4W | 81349 | RC07GF100J |
| R9 | 010646 | RES | METAL | 2.49 K | 1% 1/10W | 81349 | RN55C2491F |
| R10 | 010871 | RES | | 5 K | Matched Set | 21793 | 010871 |
| R11 | 000162 | RES | CARBON | 1.6 K | 5% 1/4W | 81349 | RC07GF162J |
| R12 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R15 | 010770 | RES | METAL | 45.0097 K | .01% | 18612 | HP202 |
| R16 | 010769 | RES | METAL | 4.5 K | .01% | 18612 | HP202 |
| R17 | 012037 | RES | METAL | 69 OHM | .1% | 18612 | HP202 |
| R18 | 010790 | RES | METAL | 36.5 K | 1% 1/10W | 81349 | RN55E3652F |
| R19 | 000206 | RES | CARBON | 20 M | 5% 1/4W | 81349 | RC07GF206J |
| R20 | 000102 | RES | CARBON | 1 K | 5% 1/4W | 81349 | RC07GF102J |
| R21 | 010529 | RES | METAL | 10 K | 1% 1/10W | 81349 | RN55C1002F |
| R22 | 020716 | RES | WW | 10 K | .1% .05W | 22045 | J90 |
| R23 | 000202 | RES | CARBON | 2 K | 5% 1/4W | 81349 | RC07GF202J |
| R24 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R25 | 000390 | RES | CARBON | 39 OHM | 5% 1/4W | 81349 | RC07GF390J |
| R26 | 010616 | RES | METAL | 50 K | .1% 1/10W | 81349 | RN55C5002B |
| R27 | 012051 | RES | METAL | 431 OHM | .1% | 18612 | HP202 |
| R28 | 020640 | RES | WW | ATTENUATOR SET | | 21793 | 020640 |
| R29 | 030015 | RES | WW | 100 K | 1% 10W | 21551 | M100 |
| R30 | 040235 | POT | CERMET | 100 K | 10% 3/4W | 73138 | 89PR100K |
| R31 | 010790 | RES | METAL | 36.5 K | 1% 1/10W | 81349 | RN55E3652F |
| R32 | 040235 | POT | CERMET | 100 K | 10% 3/4W | 73138 | 89PR100K |
| R33 | 000102 | RES | CARBON | 1 K | 5% 1/4W | 81349 | RC07GF102J |
| R34 | 000100 | RES | CARBON | 10 OHM | 5% 1/4W | 81349 | RC07GF100J |
| R36 | 000102 | RES | CARBON | 1 K | 5% 1/4W | 81349 | RC07GF102J |
| R37 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R38 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| SG1 | 920821 | SPARK GAP | | | | 25088 | B1-A230 |
| TP1 | 600786 | POST, MACHINE APPLIED STRIP | | | | 00779 | 1-87022-0 |
| TP2 | 600786 | POST, MACHINE APPLIED STRIP | | | | 00779 | 1-87022-0 |

| REF DES | RACAL- DANA P/N | DESCRIPTION | FSC | MANU P/N |
|------------|-----------------------|-----------------------------|-------|-------------|
| TP3 | 600786 | POST, MACHINE APPLIED STRIP | 00779 | 1-87022-0 |
| TP4 | 600786 | POST, MACHINE APPLIED STRIP | 00779 | 1-87022-0 |
| TP5 | 600786 | POST, MACHINE APPLIED STRIP | 00779 | 1-87022-0 |
| U1 | 230406 | IC MC1412P | 04713 | MC1412P |
| U2 | 230612 | IC DIGITAL CD4094 | 02735 | CD4094 |

403916 – Assy., PCB, 10V REFERENCE

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-----------------------|--------|------------------|---------------|-------|-------------|
| AR1 | 230127 | INTEGRATED CIRCUIT | | | | 06665 | SSS725C |
| CR1 | 403686 | RESISTOR SET ASSEMBLY | | | | 21793 | 403686 |
| Q1 | 200196 | TRANS | NPN | 2N3568 | | 81349 | 2N3568 |
| Q2 | 200200 | TRANS | NPN | 200200 | | 21793 | 200200 |
| R1 | 403686 | RESISTOR SET ASSEMBLY | | | | 21793 | 403686 |
| R2 | 020641 | RES | WW | 10 K | 1% .05W | 22045 | J90 |
| R3 | 040232 | POT | CERMET | 10 K | 10% | 73138 | 89PR10K |
| R4 | 040235 | POT | CERMET | 100 K | 10% 3/4W | 73138 | 89PR100K |
| R5 | 040236 | POT | CERMET | 200 K | 10% | 73138 | 89PR200K |
| R6 | 000565 | RES | CARBON | 5.6 M | 5% 1/4W | 81349 | RC07GF565J |
| R7 | 010774 | RES | METAL | 3.7 K | .1% | 18612 | V53-1 |
| R8 | 010773 | RES | METAL | 6.3 K | .1% | 18612 | V53-1 |
| R9 | 403686 | RESISTOR SET ASSEMBLY | | | | 21793 | 403686 |
| R10 | 403686 | RESISTOR SET ASSEMBLY | | | | 21793 | 403686 |
| R11 | 010879 | RES | METAL | 1 M | 1% 1/10W | 81349 | RN55D1004F |
| R12 | 012007 | RES | METAL | 23.2 K (Nom) FSV | 1% (RN55C) | 21793 | 012007 |

401611 - Assy., PCB, INTERCONNECTION

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|---------|--------------|-------------|----------|-------|---------------|
| C1 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C2 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C3 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C4 | 100022 | CAP | CERAM | 2000 PFD | 1000 V | 10% | 56289 | 10SS-D20 |
| C5 | 100113 | CAP | CERAM | 6800 PFD | 1000 V | 20% | 56289 | C023B102H682M |
| C6 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| J301 | 600228 | CONN | | 18 P | | | 71785 | 252-18-30-160 |
| J302 | 600280 | CONN | | 12 P | | | 71785 | 252-12-30-160 |
| J303 | 600280 | CONN | | 12 P | | | 71785 | 252-12-30-160 |
| J304 | 600280 | CONN | | 12 P | | | 71785 | 252-12-30-160 |
| J305 | 600671 | CONN | | 6 P | | | 71785 | 252-06-30-160 |
| J306 | 600280 | CONN | | 12 P | | | 71785 | 252-12-30-160 |
| J307 | 600670 | CONN | | 10 P | | | 71785 | 252-10-30-160 |
| Q1 | 200088 | TRANS | SILICO | PNP | 2N4248 | | 80131 | 2N4248 |
| Q2 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| R1 | 000104 | RES | CARBON | 100 K | | 5% 1/4W | 81349 | RC07GF104J |
| R2 | 000683 | RES | CARBON | 68 K | | 5% 1/4W | 81349 | RC07GF683J |
| R3 | 000204 | RES | CARBON | 200 K | | 5% 1/4W | 81349 | RC07GF204J |
| R4 | 000102 | RES | CARBON | 1 K | | 5% 1/4W | 81349 | RC07GF102J |
| R5 | 000203 | RES | CARBON | 20 K | | 5% 1/4W | 81349 | RC07GF203J |
| R6 | 000473 | RES | CARBON | 47 K | | 5% 1/4W | 81349 | RC07GF473J |
| R7 | 000472 | RES | CARBON | 4.7 K | | 5% 1/4W | 81349 | RC07GF472J |
| R8 | 000153 | RES | CARBON | 15 K | | 5% 1/4W | 81349 | RC07GF153J |
| R9 | 000223 | RES | CARBON | 22 K | | 5% 1/4W | 81349 | RC07GF223J |
| U1 | 230408 | IC | | | MM74C165 | | 27014 | MM74C165 |
| U2 | 230405 | IC | | | MC14528BCP | | 04713 | MC14528BCP |
| U3 | 230612 | IC | DIGITAL | | CD4094 4BCP | | 02735 | CD4094 4BCP |
| U4 | 230406 | IC | | | MC1412P | | 04713 | MC1412P |
| Z1 | 080030 | RES | CERMET | 22 K Network | | 8P,7R 2% | 11236 | 750-81-R22KΩ |

401613 - Assy., PCB, NON-VOLATILE MEMORY

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|--------|-----------|-----------|---------|-------|----------------|
| C1 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C2 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C3 | 100071 | CAP | CERAM | .001 MFD | 1000 V | 20% | 56289 | C023B102E102M |
| C4 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C5 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C6 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05396 | T368B685M035AS |
| C7 | 120001 | CAP | MYLAR | .0033 MFD | 100 V | 10% | 09023 | WMF1D33 |
| C8 | 100017 | CAP | CERAM | .01 MFD | 1000 V | 20% | 56289 | C023B101F103M |
| CR1 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| CR2 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| CR3 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| CR4 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| Q1 | 200088 | TRANS | SILICO | PNP | 2N4258 | | 80131 | 2N4258 |
| Q2 | 200088 | TRANS | SILICO | PNP | 2N4258 | | 80131 | 2N4258 |
| Q3 | 200088 | TRANS | SILICO | PNP | 2N4258 | | 80131 | 2N4258 |
| Q4 | 200088 | TRANS | SILICO | PNP | 2N4258 | | 80131 | 2N4258 |
| Q5 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| Q6 | 200101 | TRANS | | FET | 2N5245 | | 81349 | 2N5245 |
| Q7 | 200088 | TRANS | SILICO | PNP | 2N4248 | | 80131 | 2N4248 |
| Q8 | 200088 | TRANS | SILICO | PNP | 2N4248 | | 80131 | 2N4248 |
| R1 | 000182 | RES | CARBON | 1.8 K | | 5% 1/4W | 81349 | RC07GF182J |
| R2 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R3 | 000204 | RES | CARBON | 200 K | | 5% 1/4W | 81349 | RC07GF204J |
| R4 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R5 | 000204 | RES | CARBON | 200 K | | 5% 1/4W | 81349 | RC07GF204J |
| R6 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R7 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R8 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R9 | 000913 | RES | CARBON | 91 K | | 5% 1/4W | 81349 | RC07GF913J |
| R10 | 000182 | RES | CARBON | 1.8 K | | 5% 1/4W | 81349 | RC07GF182J |
| R11 | 000163 | RES | CARBON | 16 K | | 5% 1/4W | 81349 | RC07GF163J |
| R12 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| U1 | 230356 | IC | | | 74LS175 | | 27014 | 74LS175 |
| U2 | 230196 | IC | | | SN74LS51N | | 01295 | SN74LS51N |
| U3 | 230193 | IC | | | SN74LS00N | | 01295 | SN74LS00N |
| U4 | 230558 | IC | MEMORY | 2048X8 | PROM | | 21793 | 230558 |
| U5 | 230330 | IC | | | 74LS367 | | 01295 | 74LS367 |

401613 – Assy., PCB, NON-VOLATILE MEMORY continued

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|--------|-------|---------|-----------|-------|---------------|
| U6 | 230363 | IC | | | LM555CN | | 27014 | LM555CN |
| Z1 | 080009 | RES | CERMET | 6.8 K | Network | 16P,8R 2% | 11236 | 761-3-R6.8KΩ |
| Z2 | 080004 | RES | CERMET | 4.7 K | Network | 6P,5R 2% | 11236 | 750-61-R4.7KΩ |
| Z3 | 080014 | RES | CERMET | 15 K | Network | 6P,5R 2% | 11236 | 750-61-R15KΩ |
| Z4 | 080023 | RES | CERMET | 4.7 K | Network | 8P,7R | 11236 | 750-81-R4.7KΩ |

401609 - Assy., PCB, DIGITIZER

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|-------------------|----------|--------|-------|--------|------------------|
| AR1 | 230415 | IC | HI VOLTAGE OP AMP | LM343H | | 27014 | LM343H | |
| C1 | 101644 | CAP | CERAM | 200 PFD | 1000 V | 20% | 71471 | GPD5F201K |
| C2 | 101642 | CAP | CERAM | 150 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C3 | 120326 | CAP | MYLAR | 1.0 MFD | 50 V | 5% | 12406 | PD5B105J |
| C4 | 120343 | CAP | MYLAR | 1 MFD | 50 V | 10% | 27556 | Z5R105K |
| C5 | 110127 | CAP | TANTA | 22 MFD | 6 V | 20% | 05397 | T368B226M006AS |
| C6 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C7 | 110127 | CAP | TANTA | 22 MFD | 6 V | 20% | 05397 | T368B226M006AS |
| C8 | 101644 | CAP | CERAM | 200 PFD | 1000 V | 20% | 71471 | GPD5F201K |
| C9 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C10 | 110125 | CAP | TANTA | 2.2 MFD | 35 V | 20% | 05397 | T368B225M035AS |
| C11 | 100068 | CAP | CERAM | .02 MFD | 100 V | 20% | 56289 | C023B101H203M |
| C12 | 110139 | CAP | TANTA | .22 MFD | 35 V | 20% | 05397 | T368A224M035AS |
| C13 | 101642 | CAP | CERAM | 150 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C14 | 101642 | CAP | CERAM | 150 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C15 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C16 | 101641 | CAP | CERAM | 470 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C17 | 101098 | CAP | CERAM | 330 PFD | 500 V | 10% | 56289 | 10TS-T33 |
| C18 | 101174 | CAP | CERAM | .001 MFD | 500 V | 10% | 04222 | SCD-DI-2X5F-1000 |
| C19 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C20 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C21 | 110158 | CAP | TANTA | 10 MFD | 50 V | 10% | 05397 | T362C106K050A |
| C22 | 101644 | CAP | CERAM | 200 PFD | 1000 V | 20% | 71471 | GPD5F201K |
| C23 | 100018 | CAP | CERAM | 120 PFD | 500 V | 10% | 71471 | ETCD(N5600) |
| C24 | 100100 | CAP | CERAM | FSV | | | 21793 | 100100 |
| C25 | 101175 | CAP | POLY | 220 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C26 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C29 | 101642 | CAP | CERAM | 150 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C30 | 120343 | CAP | MYLAR | 1 MFD | 50 V | 10% | 27556 | Z5R105K |
| C32 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| CR2 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| CR3 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| CR4 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| CR5 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|---------------|----------|------------|-------|-------------|
| CR6 | 211083 | DIODE | SILICO | | 1N916B | 81349 | 1N916B |
| CR7 | 211083 | DIODE | SILICO | | 1N916B | 81349 | 1N916B |
| CR8 | 211083 | DIODE | SILICO | | 1N916B | 81349 | 1N916B |
| CR9 | 211083 | DIODE | SILICO | | 1N916B | 81349 | 1N916B |
| CR10 | 211083 | DIODE | SILICO | | 1N916B | 81349 | 1N916B |
| CR11 | 211083 | DIODE | SILICO | | 1N916B | 81349 | 1N916B |
| CR12 | 211083 | DIODE | SILICO | | 1N916B | 81349 | 1N916B |
| CR13 | 211083 | DIODE | SILICO | | 1N916B | 81349 | 1N916B |
| CR14 | 211083 | DIODE | SILICO | | 1N916B | 81349 | 1N916B |
| CR15 | 220059 | DIODE | ZENER | 33 V | 1N973B | 81349 | 1N973B |
| CR16 | 220054 | DIODE | ZENER | | 1N5260B | 81349 | 1N5260B |
| CR17 | 220031 | DIODE | SILICO, ZENER | 3.3 V | 1/4M3.3AZ5 | 04713 | 1/4M3.3AZ5 |
| CR18 | 220031 | DIODE | SILICO, ZENER | 3.3 V | 1/4M3.3AZ5 | 04713 | 1/4M3.3AZ5 |
| CR19 | 211083 | DIODE | SILICO | | 1N916B | 81349 | 1N916B |
| CR20 | 211083 | DIODE | SILICO | | 1N916B | 81349 | 1N916B |
| CR21 | 211083 | DIODE | SILICO | | 1N916B | 81349 | 1N916B |
| CR22 | 211083 | DIODE | SILICO | | 1N916B | 81349 | 1N916B |
| K1 | 310139 | RELAY | MAGNETIC REED | | 1 Form A | 21317 | RR10-1259 |
| Q1 | 200037 | TRANS | SILICO | NPN | 2N3646 | 80131 | 2N3646 |
| Q2 | 200037 | TRANS | SILICO | NPN | 2N3646 | 80131 | 2N3646 |
| Q3 | 200037 | TRANS | SILICO | NPN | 2N3646 | 80131 | 2N3646 |
| Q4 | 200037 | TRANS | SILICO | NPN | 2N3646 | 80131 | 2N3646 |
| Q7 | 200160 | TRANS | | FET | E-304 | 17856 | E-304 |
| Q8 | 200161 | TRANS | | Dual FET | E-415 | 17856 | E-415 |
| Q9 | 200068 | TRANS | | PNP | 2N4250 | 80131 | 2N4250 |
| Q10 | 200203 | TRANS | | FET | E-201 | 17856 | E-201 |
| Q11 | 200160 | TRANS | | FET | E-304 | 17856 | E-304 |
| Q12 | 200037 | TRANS | SILICO | NPN | 2N3646 | 80131 | 2N3646 |
| Q13 | 200099 | TRANS | | PNP | 2N4258 | 81349 | 2N4258 |
| Q14 | 200037 | TRANS | SILICO | NPN | 2N3646 | 80131 | 2N3646 |
| Q15 | 200201 | TRANS | | Dual NPN | 200201 | 21793 | 200201 |
| Q16 | 200160 | TRANS | | FET | E-304 | 17856 | E-304 |
| Q17 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 |
| Q18 | 200203 | TRANS | | FET | E-201 | 17856 | E-201 |
| Q19 | 200088 | TRANS | SILICO | PNP | 2N4248 | 80131 | 2N4248 |
| Q20 | 200088 | TRANS | SILICO | PNP | 2N4248 | 80131 | 2N4248 |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|--------|---------|-------------------|-------|------------|-------------|
| Q21 | 200162 | TRANS | | FET | KE4391 | 21793 | 200162 | |
| Q22 | 200162 | TRANS | | FET | KE4391 | 21793 | 200162 | |
| Q23 | 200179 | TRANS | | FET | KE4391 | 27014 | KE4391 | |
| Q24 | 200088 | TRANS | SILICO | PNP | 2N4248 | 80131 | 2N4248 | |
| Q25 | 200224 | TRANS | | NPN | (Selected 200200) | 21793 | 200224 | |
| Q26 | 200088 | TRANS | SILICO | PNP | 2N4248 | 80131 | 2N4248 | |
| Q27 | 200224 | TRANS | | NPN | (Selected 200200) | 21793 | 200224 | |
| Q28 | 200245 | TRANS | | PNP | MPS-A92 | 04713 | MPS-A92 | |
| Q29 | 200088 | TRANS | SILICO | PNP | 2N4248 | 80131 | 2N4248 | |
| Q30 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 | |
| Q31 | 200224 | TRANS | | NPN | (Selected 200200) | 21793 | 200224 | |
| Q32 | 200088 | TRANS | SILICO | PNP | 2N4248 | 80131 | 2N4248 | |
| Q33 | 200088 | TRANS | SILICO | PNP | 2N4248 | 80131 | 2N4248 | |
| Q34 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 | |
| Q35 | 200088 | TRANS | SILICO | PNP | 2N4248 | 80131 | 2N4248 | |
| Q36 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 | |
| Q37 | 200088 | TRANS | SILICO | PNP | 2N4248 | 80131 | 2N4248 | |
| Q38 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 | |
| R1 | 000153 | RES | CARBON | 15 K | 5% 1/4W | 81349 | RC07GF153J | |
| R2 | 000272 | RES | CARBON | 2.7 K | 5% 1/4W | 81349 | RC07GF272J | |
| R3 | 000152 | RES | CARBON | 1.5 K | 5% 1/4W | 81349 | RC07GF152J | |
| R4 | 000153 | RES | CARBON | 15 K | 5% 1/4W | 81349 | RC07GF153J | |
| R5 | 000511 | RES | CARBON | 510 OHM | 5% 1/4W | 81349 | RC07GF511J | |
| R6 | 000511 | RES | CARBON | 510 OHM | 5% 1/4W | 81349 | RC07GF511J | |
| R7 | 000511 | RES | CARBON | 510 OHM | 5% 1/4W | 81349 | RC07GF511J | |
| R8 | 000272 | RES | CARBON | 2.7 K | 5% 1/4W | 81349 | RC07GF272J | |
| R10 | 010013 | RES | METAL | 60.4 K | T-2 1% 1/8W | 81349 | RN60C6042F | |
| R12 | 010868 | RES | METAL | 14.3 K | 1% 1/10W | 81349 | RN55D1432F | |
| R13 | 010169 | RES | METAL | 100 K | T-0 1% 1/8W | 81349 | RN60D1003F | |
| R14 | 010059 | RES | METAL | 20 K | T-0 1% 1/8W | 81349 | RN60D2002F | |
| R15 | 010502 | RES | METAL | 249 K | 1% 1/8W | 81349 | RN60D2493F | |
| R16 | 010536 | RES | METAL | 100 K | 1% 1/10W | 81349 | RN55C1003F | |
| R17 | 010918 | RES | METAL | 499 OHM | 1% 1/10W | 81349 | RN55C4990F | |
| R18 | 000473 | RES | CARBON | 47 K | 5% 1/4W | 81349 | RC07GF473J | |
| R19 | 010013 | RES | METAL | 60.4 K | T-2 1% 1/8W | 81349 | RN60C6042F | |
| R20 | 000180 | RES | CARBON | 18 OHM | 5% 1/4W | 81349 | RC07GF180J | |
| R21 | 000511 | RES | CARBON | 18 OHM | 5% 1/4W | 81349 | RC07GF180J | |
| R22 | 000393 | RES | CARBON | 39 K | 5% 1/4W | 81349 | RC07GF393J | |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|--------|---------|----------|-------|-------------|
| R23 | 010621 | RES | METAL | 49.9 K | 1% 1/10W | 81349 | RN55C4992F |
| R24 | 010621 | RES | METAL | 49.9 K | 1% 1/10W | 81349 | RN55C4992F |
| R25 | 000104 | RES | CARBON | 100 K | 5% 1/4W | 81349 | RC07GF104J |
| R26 | 000272 | RES | CARBON | 2.7 K | 5% 1/4W | 81349 | RC07GF272J |
| R27 | 000153 | RES | CARBON | 15 K | 5% 1/4W | 81349 | RC07GF153J |
| R28 | 000510 | RES | CARBON | 51 OHM | 5% 1/4W | 81349 | RC07GF510J |
| R29 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R30 | 010533 | RES | METAL | 28.7 K | 1% 1/10W | 81349 | RN55C2872F |
| R31 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R32 | 000153 | RES | CARBON | 15 K | 5% 1/4W | 81349 | RC07GF153J |
| R33 | 000153 | RES | CARBON | 15 K | 5% 1/4W | 81349 | RC07GF153J |
| R34 | 000200 | RES | CARBON | 20 OHM | 5% 1/4W | 81349 | RC07GF200J |
| R35 | 000513 | RES | CARBON | 51 K | 5% 1/4W | 81349 | RC07GF513J |
| R36 | 000512 | RES | CARBON | 5.1 K | 5% 1/4W | 81349 | RC07GF512J |
| R37 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R38 | 000152 | RES | CARBON | 1.5 K | 5% 1/4W | 81349 | RC07GF152J |
| R39 | 000332 | RES | CARBON | 3.3 K | 5% 1/4W | 81349 | RC07GF332J |
| R40 | 000392 | RES | CARBON | 3.9 K | 5% 1/4W | 81349 | RC07GF392J |
| R41 | 000202 | RES | CARBON | 2 K | 5% 1/4W | 81349 | RC07GF202J |
| R42 | 000104 | RES | CARBON | 100 K | 5% 1/4W | 81349 | RC07GF104J |
| R43 | 000104 | RES | CARBON | 100 K | 5% 1/4W | 81349 | RC07GF104J |
| R44 | 000302 | RES | CARBON | 3 K | 5% 1/4W | 81349 | RC07GF302J |
| R45 | 000152 | RES | CARBON | 1.5 K | 5% 1/4W | 81349 | RC07GF152J |
| R46 | 000152 | RES | CARBON | 1.5 K | 5% 1/4W | 81349 | RC07GF152J |
| R47 | 000202 | RES | CARBON | 2 K | 5% 1/4W | 81349 | RC07GF202J |
| R48 | 000302 | RES | CARBON | 3 K | 5% 1/4W | 81349 | RC07GF302J |
| R49 | 000104 | RES | CARBON | 100 K | 5% 1/4W | 81349 | RC07GF104J |
| R50 | 000104 | RES | CARBON | 100 K | 5% 1/4W | 81349 | RC07GF104J |
| R51 | 000104 | RES | CARBON | 100 K | 5% 1/4W | 81349 | RC07GF104J |
| R52 | 000202 | RES | CARBON | 2 K | 5% 1/4W | 81349 | RC07GF202J |
| R53 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R54 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R55 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R56 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R57 | 000273 | RES | CARBON | 27 K | 5% 1/4W | 81349 | RC07GF273J |
| R58 | 001737 | RES | CARBON | FSV | 5% 1/4W | 21793 | 001737 |
| R59 | 000107 | RES | CARBON | 100 M | 5% 1/4W | 81349 | RC07GF107J |
| R60 | 000104 | RES | CARBON | 100 K | 5% 1/4W | 81349 | RC07GF104J |
| R61 | 001737 | RES | CARBON | FSV | 5% 1/4W | 21793 | 001737 |
| R62 | 000512 | RES | CARBON | 5.1 K | 5% 1/4W | 81349 | RC07GF512J |
| R63 | 000208 | RES | CARBON | 2000 M | 20% 1/4W | 01121 | CB2082 |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-----------------------------|--------|-----------|---------|-------|-------------|
| R64 | 000686 | RES | CARBON | 68 M | 5% 1/4W | 81349 | RC07GF686J |
| R65 | 000106 | RES | CARBON | 10 M | 5% 1/4W | 81349 | RC07GF106J |
| R66 | 000225 | RES | CARBON | 2.2 M | 5% 1/4W | 81349 | RC07GF225J |
| R67 | 000511 | RES | CARBON | 510 OHM | 5% 1/4W | 81349 | RC07GF511J |
| R68 | 010520 | RES | METAL | 21.5 K | 1% 1/8W | 81349 | RN60D2152F |
| R69 | 000750 | RES | CARBON | 75 OHM | 5% 1/4W | 81349 | RC07GF750J |
| R70 | 000392 | RES | CARBON | 3.9 K | 5% 1/4W | 81349 | RC07GF392J |
| R71 | 000511 | RES | CARBON | 510 OHM | 5% 1/4W | 81349 | RC07GF511J |
| R72 | 000392 | RES | CARBON | 3.9 K | 5% 1/4W | 81349 | RC07GF392J |
| R73 | 000361 | RES | CARBON | 360 OHM | 5% 1/4W | 81349 | RC07GF361J |
| R74 | 001759 | RES | CARBON | 5.1 OHM | 5% 1/4W | 81349 | RC07GF5R1J |
| R75 | 040255 | POT | CERMET | 10 OHM | 20% .5W | 73138 | 72XW10 |
| T1 | 300087 | TRANSFORMER, PULSE | | | | 21793 | 300087 |
| T2 | 300087 | TRANSFORMER, PULSE | | | | 21793 | 300087 |
| T3 | 300087 | TRANSFORMER, PULSE | | | | 21793 | 300087 |
| TP1 | 600786 | POST, MACHINE APPLIED STRIP | | | | 00779 | 1-87022-0 |
| TP2 | 600786 | POST, MACHINE APPLIED STRIP | | | | 00779 | 1-87022-0 |
| TP3 | 600786 | POST, MACHINE APPLIED STRIP | | | | 00779 | 1-87022-0 |
| TP4 | 600786 | POST, MACHINE APPLIED STRIP | | | | 00779 | 1-87022-0 |
| TP5 | 600786 | POST, MACHINE APPLIED STRIP | | | | 00779 | 1-87022-0 |
| U1 | 230193 | IC | | SN74LS00N | | 01295 | SN74LS00N |
| U2 | 230193 | IC | | SN74LS00N | | 01295 | SN74LS00N |
| W1 | 600245 | JUMPER, INSULATED | | | | | L-2007-1LP |

401605 - Assy., PCB, ISOLATOR

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|----------------------|---------------|-----------|----------|-----|-------|-------------------|
| C1 | 120313 | CAP | POLY | .15 MFD | 200 V | 5% | 27556 | PA2C154J |
| C2 | 120271 | CAP | POLY | .5 MFD | 50 V | 5% | 27556 | PV2A504J |
| C3 | 101098 | CAP | CERAM | 330 PFD | 500 V | 10% | 56289 | 10TS-T33 |
| C4 | 101099 | CAP | CERAM | 680 PFD | 1000 V | 10% | 71471 | SCD2X5F |
| C5 | 120004 | CAP | POLY | .001 MFD | 500 V | 5% | 08257 | KSO Series |
| C6 | 100040 | CAP | CERAM | 200 PFD | 1000 V | 20% | 56289 | C023B102E201M |
| C7 | 121147 | CAP | MYLAR | .0068 MFD | 100 V | 10% | 09023 | WMF1D68 |
| C8 | 121394 | CAP | MYLAR | .15 MFD | 100 V | 10% | 09023 | WMF1P15 |
| C9 | 120313 | CAP | POLY | .15 MFD | 200 V | 5% | 27556 | PA2C154J |
| C10 | 121092 | CAP | MYLAR | .0022 MFD | 100 V | 10% | 09023 | WFF1D22 |
| C11 | 100032 | CAP | MICA | 1300 PFD | 100 V | | 72136 | DM19F132J |
| C12 | 101145 | CAP | CERAM | 100 PFD | 500 V | 10% | 04222 | TCD-DI-1N5600-100 |
| C13 | 110129 | CAP | TANTA | .1 MFD | 35 V | 20% | 05397 | T368A104M035AS |
| C14 | 100012 | CAP | CERAM | 33 PFD | 500 V | 10% | 71471 | TCD-DI-1(N750) |
| C15 | 121147 | CAP | MYLAR | .0068 PFD | 100 V | 10% | 09023 | WMF1D68 |
| C16 | 100012 | CAP | CERAM | 33 PFD | 500 V | 10% | 71471 | TCD-DI-1(N750) |
| C17 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C18 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C19 | 100012 | CAP | CERAM | 33 PFD | 500 V | 10% | 71471 | TCD-DI-1(N750) |
| C21 | 101182 | CAP | CERAM | 47 PFD | 500 V | 10% | 71471 | TCD-DI-2(N750) |
| C22 | 101182 | CAP | CERAM | 47 PFD | 500 V | 10% | 71471 | TCD-DI-2(N750) |
| C23 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C24 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C25 | 110129 | CAP | TANTA | .1 MFD | 35 V | 20% | 05397 | T368A104M035AS |
| C27 | 100012 | CAP | CERAM | 33 PFD | 500 V | 10% | 71471 | TCD-DI-1(N750) |
| C30 | 101145 | CAP | CERAM | 100 PFD | 500 V | 10% | 04222 | TCD-DI-1N5600-100 |
| AR1 | 230411 | IC | OP AMP | | LM201A-H | | 27014 | LM201A-H |
| AR2 | 230103 | IC | | | LM308 | | 27014 | LM308 |
| AR3 | 230054 | IC | | | LM301A | | 27014 | LM301A |
| AR4 | 230054 | IC | | | LM301A | | 27014 | LM301A |
| AR5 | 230411 | IC | OP AMP | | LM201A-H | | 27014 | LM201A-H |
| CR1 | 210004 | DIODE | SILICO | | 1N4004 | | 81349 | 1N4004 |
| CR2 | 210004 | DIODE | SILICO | | 1N4004 | | 81349 | 1N4004 |
| CR3 | 220026 | DIODE | ZENER | 12 V | 1N963B | | 81349 | 1N963B |
| CR4 | 220026 | DIODE | ZENER | 12 V | 1N963B | | 81349 | 1N963B |
| CR5 | 220035 | DIODE | ZENER | 16 V | 1N966B | 5% | 81349 | 1N966B |
| CR6 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| CR7 | 220015 | DIODE | SILICO, ZENER | | 1N967B | | 81349 | 1N967B |
| CR8 | 220027 | DIODE | SILICO ZENER | 4.3 V | 1N749A | | 81349 | 1N749A |
| CR9 | 220027 | DIODE | SILICO ZENER | 4.3 V | | | 81349 | 1N749A |
| K1 | 310134 | RELAY, MAGNETIC REED | | | 2 Form A | | 15636 | R6278-3 |
| Q1 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N | |
|------------|-----------------------|-----------------------------|------------------|---------|---------|----------|-------------|--------------|
| Q2 | 200247 | TRANS | FET | DUAL | | 21793 | 200247 | |
| Q3 | 200088 | TRANS | SILICO | PNP | 2N4248 | 80131 | 2N4248 | |
| Q5 | 200161 | TRANS | DUAL FET | | E-415 | 17856 | E-415 | |
| Q6 | 200245 | TRANS | | PNP | MPS-A92 | 04713 | MPS-A92 | |
| Q7 | 200233 | TRANS | SILICO | NPN | MPS-A42 | 04713 | MPS-A42 | |
| Q8 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 | |
| Q9 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 | |
| R1 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R2 | 000513 | RES | CARBON | 51 K | | 5% 1/4W | 81349 | RC07GF513J |
| R3 | 000513 | RES | CARBON | 51 K | | 5% 1/4W | 81349 | RC07GF513J |
| R4 | 012098 | RES | METAL, PRECISION | 25.5 K | | .1% .05W | 14298 | UAR-1/10 C-6 |
| R6 | 010529 | RES | METAL | 10 K | | 1% 1/10W | 81349 | RN55C1002F |
| R7 | 010536 | RES | METAL | 100 K | | 1% 1/10W | 81349 | RN55C1003F |
| R9 | 001737 | RES | CARBON | FSV | | 5% 1/4W | 21793 | 001737 |
| R10 | 001737 | RES | CARBON | FSV | | 5% 1/4W | 21793 | 001737 |
| R11 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R12 | 012098 | RES | METAL, PRECISION | 25.5 K | | .1% .05W | 81349 | UAR-1/10C-6 |
| R13 | 010106 | RES | METAL | 324 K | T-0 | 1% 1/8W | 81349 | RN60D3243F |
| R16 | 010106 | RES | METAL | 324 K | T-0 | 1% 1/8W | 81349 | RN60D3243F |
| R18 | 000151 | RES | CARBON | 150 OHM | | 5% 1/4W | 81349 | RC07GF151J |
| R19 | 000151 | RES | CARBON | 150 OHM | | 5% 1/4W | 81349 | RC07GF151J |
| R20 | 010536 | RES | METAL | 100 K | | 1% 1/10W | 81349 | RN55C1003F |
| R21 | 010621 | RES | METAL | 49.9 K | | 1% 1/10W | 81349 | RN55C4992F |
| R22 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R23 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R24 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R25 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R26 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R27 | 010529 | RES | METAL | 10 K | | 1% 1/10W | 81349 | RN55C1002F |
| R28 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R32 | 000200 | RES | CARBON | 20 OHM | | 5% 1/4W | 81349 | RC07GF200J |
| R33 | 010534 | RES | METAL | 34 K | | 1% 1/10W | 81349 | RN55C3402F |
| R34 | 040232 | POT | CERMET | 10 K | | 10% | 73138 | 89PR10K |
| R35 | 001737 | RES | CARBON | FSV | | 5% 1/4W | 21793 | 001737 |
| R36 | 001737 | RES | CARBON | FSV | | 5% 1/4W | 21793 | 001737 |
| TP1 | 600786 | POST, MACHINE APPLIED STRIP | | | | 00779 | 1-87022-0 | |
| TP2 | 600786 | POST, MACHINE APPLIED STRIP | | | | 00779 | 1-87022-0 | |
| TP3 | 600786 | POST, MACHINE APPLIED STRIP | | | | 00779 | 1-87022-0 | |
| TP4 | 600786 | POST, MACHINE APPLIED STRIP | | | | 00779 | 1-87022-0 | |

401610 – Assy., PCB, SWITCHING

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|--------|----------|--------|---------|-------|-----------------|
| C1 | 120309 | CAP | POLY | .015 MFD | 200 V | 5% | 27556 | PA2C153J |
| C2 | 120313 | CAP | POLY | .15 MFD | 200 V | 5% | 27556 | PA2C154J |
| CR1 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| CR2 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| CR3 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| CR4 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| K1 | 310113 | RELAY | REED | | 26 V | | 15636 | R4092-3 |
| K2 | 310112 | RELAY | | | 28 V | | 26806 | AZ421-467-204 |
| K3 | 310112 | RELAY | | | 28 V | | 26806 | AZ421-467-204 |
| K4 | 310112 | RELAY | | | 28 V | | 26806 | AZ421-467-204 |
| K5 | 310112 | RELAY | | | 28 V | | 26806 | AZ421-467-204 |
| K6 | 310112 | RELAY | | | 28 V | | 26806 | AZ421-467-204 |
| R1 | 001806 | RES | CARBON | 200 K | | 5% 2W | 01121 | See Description |
| R2 | 001806 | RES | CARBON | 200 K | | 5% 2W | 01121 | See Description |
| R4 | 010033 | RES | METAL | 49.9 K | T-0 | 1% 1/8W | 81349 | RN60D4992F |

401603, 404171 - Assy., PCB, COMPUTER I

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------------|--------|---------|--------------|---------|-------|----------------|
| C1 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C2 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C3 | 100017 | CAP | CERMET | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C4 | 100017 | CAP | CERMET | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C5 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C6 | 100017 | CAP | CERMET | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C7 | 100017 | CAP | CERMET | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| R1 | 000473 | RES | CARBON | 47 K | | 5% 1/4W | 81349 | RC07GF473J |
| U1 | 230402 | IC | | | 74LS30N | | 27014 | 74LS30N |
| U2 | 230193 | IC | | | SN74LS00N | | 01295 | SN74LS00N |
| U3 | 230368 | IC | | | 74LS138 | | 27014 | 74LS138 |
| U4 | 230305 | IC | | | SN74LS08 | | 01295 | SN74LS08 |
| U5 | 230330 | IC | | | 74LS367 | | 01295 | 74LS367 |
| U6 | 230330 | IC | | | 74LS367 | | 01295 | 74LS367 |
| U7 | 230330 | IC | | | 74LS367 | | 01295 | 74LS367 |
| U8 | 230330 | IC | | | 74LS367 | | 01295 | 74LS367 |
| U9 | 230368 | IC | | | 74LS138 | | 27014 | 74LS138 |
| U10 | 230368 | IC | | | 74LS138 | | 27014 | 74LS138 |
| U11 | 230520 | IC - Memory - U11 | | | | | 21793 | 230520 |
| U12 | 230369 | IC | | | 6802-P | | 04713 | 6802-P |
| U13 | 230375 | IC | | | AM9112APC | | | AM9112APC |
| U14 | 230375 | IC | | | AM9112APC | | | AM9112APC |
| U15 | 230375 | IC | | | AM9112APC | | | AM9112APC |
| U16 | 230375 | IC | | | AM9112APC | | | AM9112APC |
| U17* | 230523 | IC - Memory - U17 | | | | | 21793 | 230523 |
| U18 | 230400 | IC | ROM | "U14" | S6831-U14 | | 31471 | S6831-U14 |
| U19 | 230548 | IC | ROM | | 2K x 8 - U19 | | 21793 | 230548 |
| U20 | 230522 | IC - Memory - U20 | | | | | 21793 | 230522 |
| U21 | 230521 | IC - Memory - U21 | | | | | 21793 | 230521 |

*Used only in 404171

401604 - Assy., PCB, CONTROL LOGIC

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|--------|----------|--------|------------|-------|----------------|
| C1 | 110137 | CAP | TANTA | .47 MFD | 35 V | 20% | 05397 | T368A474M035AS |
| C2 | 110137 | CAP | TANTA | .47 MFD | 35 V | 20% | 05397 | T368A474M035AS |
| C3 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C4 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C5 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C6 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C7 | 120003 | CAP | MYLAR | .1 MFD | 100 V | | 09023 | WMF1P1 |
| C8 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C9 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C10 | 130144 | CAP | MICA | 270 PFD | 100 V | 5% | 72136 | DM10271J |
| C11 | 130162 | CAP | MICA | 33 PFD | 500 V | 5% | 09023 | CD6ED330J03 |
| C12 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C13 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C14 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C15 | 100071 | CAP | CERAM | .001 MFD | 1000 V | 20% | 56289 | C023B102E102M |
| C16 | 100068 | CAP | CERAM | .02 MFD | 100 V | 20% | 56289 | C023B101H203M |
| CR1 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| Q1 | 200037 | TRANS | SILICO | NPN | 2N3646 | | 80131 | 2N3646 |
| Q2 | 200099 | TRANS | | PNP | 2N4258 | | 81349 | 2N4258 |
| Q3 | 200037 | TRANS | SILICO | NPN | 2N3646 | | 80131 | 2N3646 |
| Q4 | 200099 | TRANS | | PNP | 2N4258 | | 81349 | 2N4258 |
| Q5 | 230037 | TRANS | SILICO | NPN | 2N3646 | | 80131 | 2N3646 |
| Q6 | 200261 | TRANS | SILICO | NPN | 2N2369 | | 81349 | 2N2369 |
| Q7 | 230037 | TRANS | SILICO | NPN | 2N3646 | | 80131 | 2N3646 |
| Q8 | 230037 | TRANS | SILICO | NPN | 2N3646 | | 80131 | 2N3646 |
| Q9 | 200095 | TRANS | | NPN | 2N3563 | | 81349 | 2N3563 |
| R1 | 000200 | RES | CARBON | 20 OHM | | 5% 1/4W | 81349 | RC07GF200J |
| R2 | 000200 | RES | CARBON | 20 OHM | | 5% 1/4W | 81349 | RC07GF200J |
| R3 | 000362 | RES | CARBON | 3.6 K | | 5% 1/4W | 81349 | RC07GF362J |
| R4 | 000562 | RES | CARBON | 5.6 K | | 5% 1/4W | 81349 | RC07GF562J |
| R5 | 000362 | RES | CARBON | 3.6 K | | 5% 1/4W | 81349 | RC07GF362J |
| R6 | 000682 | RES | CARBON | 6.8 K | | 5% 1/4W | 81349 | RC07GF682J |
| R7 | 000362 | RES | CARBON | 3.6 K | | 5% 1/4W | 81349 | RC07GF362J |
| R8 | 000562 | RES | CARBON | 5.6 K | | 5% 1/4W | 81349 | RC07GF562J |
| R9 | 000201 | RES | CARBON | 200 OHM | | 5% 1/4W | 81349 | RC07GF201J |
| R10 | 000201 | RES | CARBON | 200 OHM | | 5% 1/4W | 81349 | RC07GF201J |
| R11 | 000361 | RES | CARBON | 360 OHM | | 5% 1/4W | 81349 | RC07GF361J |
| R12 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R13 | 010828 | RES | METAL | 45.3 K | | 1% 1/10W | 81349 | RN55C4532F |
| R14 | 010618 | RES | METAL | 200 K | | .25% 1/10W | 81349 | RN55C2003C |
| R15 | 000135 | RES | CARBON | 1.3 M | | 5% 1/4W | 81349 | RC07GF135J |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-----------------------------|--------|-----------|------------------|-------|----------------------|
| R16 | 000205 | RES | CARBON | 2 M | 5% 1/4W | 81349 | RC07GF205J |
| R17 | 000102 | RES | CARBON | 1 K | 5% 1/4W | 81349 | RC07GF102J |
| R18 | 000102 | RES | CARBON | 1 K | 5% 1/4W | 81349 | RC07GF102J |
| R19 | 000151 | RES | CARBON | 150 OHM | 5% 1/4W | 81349 | RC07GF151J |
| R20 | 000682 | RES | CARBON | 6.8 K | 5% 1/4W | 81349 | RC07GF682J |
| R21 | 000562 | RES | CARBON | 5.6 K | 5% 1/4W | 81349 | RC07GF562J |
| R22 | 000331 | RES | CARBON | 330 OHM | 5% 1/4W | 81349 | RC07GF331J |
| TP1 | 600786 | POST, MACHINE APPLIED STRIP | | | | 00779 | 1-87022-0 |
| U1 | 230330 | IC | | 74LS367 | | 01295 | 74LS367 |
| U2 | 230330 | IC | | 74LS367 | | 01295 | 74LS367 |
| U3 | 230330 | IC | | 74LS367 | | 01295 | 74LS367 |
| U4 | 230330 | IC | | 74LS367 | | 01295 | 74LS367 |
| U5 | 230330 | IC | | 74LS367 | | 01295 | 74LS367 |
| U6 | 230380 | IC | | 74LS03 | | 01295 | 74LS03 |
| U7 | 230194 | IC | | SN74LS74N | | 01295 | SN74LS74N |
| U8 | 230193 | IC | | SN74LS00N | | 01295 | SN74LS00N |
| U9 | 230193 | IC | | SN74LS00N | | 01295 | SN74LS00N |
| U10 | 230368 | IC | | 74LS138 | | 27014 | 74LS138 |
| U11 | 230363 | IC | | LM555CN | | 27014 | LM555CN |
| U12 | 230317 | IC | | SN74LS90 | | 01295 | SN74LS90 |
| U13 | 230317 | IC | | SN74LS90 | | 01295 | SN74LS90 |
| U14 | 230317 | IC | | SN74LS90 | | 01295 | SN74LS90 |
| U15 | 230383 | IC | | 74LS490AN | | 01295 | 74LS490AN |
| U16 | 230383 | IC | | 74LS490AN | | 01295 | 74LS490AN |
| U17 | 230194 | IC | | SN74LS74N | | 01295 | SN74LS74N |
| U18 | 230193 | IC | | SN74LS00N | | 01295 | SN74LS00N |
| U19 | 230193 | IC | | SN74LS00N | | 01295 | SN74LS00N |
| U20 | 230194 | IC | | SN74LS74N | | 01295 | SN74LS74N |
| U21 | 230194 | IC | | SN74LS74N | | 01295 | SN74LS74N |
| U22 | 230380 | IC | | 74LS03 | | 01295 | 74LS03 |
| U23 | 230510 | IC | | 74LS164 | | | 74LS164 |
| U24 | 230313 | IC | | CD4016AE | | 86884 | CD4016AE |
| Y1 | 920811 | CRYSTAL, SOLDER SEAL | | 24 MHz | | 27193 | 920811 |
| Z1 | 080005 | RES | CERMET | 10 K | Network 6P,5R 2% | 11236 | 750-61-R10K Ω |

404019 - Assy., PARALLEL BCD OPTION

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|-----|--|--|-------|-------------|
| U17 | 230407 | IC | ROM | | | 31471 | S6831B |

401624 - Assy., PCB, PARALLEL BCD

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|--------------------|--------|----------|------------|---------|-------|----------------|
| C1 | 100080 | CAP | CERAM | .05 MFD | 100 V | 20% | 56289 | C023A101L503M |
| C2 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C3 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C4 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C5 | 100080 | CAP | CERAM | .05 MFD | 100 V | 20% | 56289 | C023A101L503M |
| C6 | 100080 | CAP | CERAM | .05 MFD | 100 V | 20% | 56289 | C023A101L503M |
| C7 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C8 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C9 | 110153 | CAP | TANTA | .27 MFD | 50 V | 10% | 05397 | KR27P50K |
| C10 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C11 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C12 | 121091 | CAP | MYLAR | .033 MFD | 100 V | 10% | 09023 | WMF1S33 |
| C13 | 110165 | CAP | TANTA | .15 MFD | 35 V | 10% | 05397 | T368A154K035AS |
| C14 | 110152 | CAP | TANTA | .47 MFD | 50 V | 10% | 05397 | T368A474K050AS |
| C15 | 100017 | CAP | CERMET | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| P12 | 600930 | CABLE ASSY | | | 50 P | | 21793 | 600930 |
| R1 | 000512 | RES | CARBON | 5.1 K | | 5% 1/4W | 81349 | RC07GF512J |
| R2 | 000512 | RES | CARBON | 5.1 K | | 5% 1/4W | 81349 | RC07GF512J |
| R3 | 000512 | RES | CARBON | 5.1 K | | 5% 1/4W | 81349 | RC07GF512J |
| R4 | 000512 | RES | CARBON | 5.1 K | | 5% 1/4W | 81349 | RC07GF512J |
| R5 | 000512 | RES | CARBON | 5.1 K | | 5% 1/4W | 81349 | RC07GF512J |
| R6 | 010609 | RES | METAL | 909 K | | 1% 1/8W | 81349 | RN60D9093F |
| U1 | 230366 | INTEGRATED CIRCUIT | | | DM74LS174N | | 27014 | DM74LS174N |
| U2 | 230366 | INTEGRATED CIRCUIT | | | DM74LS174N | | 27014 | DM74LS174N |
| U3 | 230356 | INTEGRATED CIRCUIT | | | 74LS175 | | 27014 | 74LS175 |
| U4 | 230368 | INTEGRATED CIRCUIT | | | 74LS138 | | 27014 | 74LS138 |
| U5 | 230194 | INTEGRATED CIRCUIT | | | SN74LS74N | | 01295 | SN74LS74N |
| U7 | 230193 | INTEGRATED CIRCUIT | | | SN74LS00N | | 01295 | SN74LS00N |
| U8 | 230064 | INTEGRATED CIRCUIT | | | 7404 | | 01295 | 7404 |
| U9 | 230193 | INTEGRATED CIRCUIT | | | SN74LS00N | | 01295 | SN74LS00N |
| U10 | 230366 | INTEGRATED CIRCUIT | | | DM74LS174N | | 27014 | DM74LS174N |
| U11 | 230366 | INTEGRATED CIRCUIT | | | DM74LS174N | | 27014 | DM74LS174N |
| U12 | 230366 | INTEGRATED CIRCUIT | | | DM74LS174N | | 27014 | DM74LS174N |
| U13 | 230368 | INTEGRATED CIRCUIT | | | 74LS138 | | 27014 | 74LS138 |
| U14 | 230330 | INTEGRATED CIRCUIT | | | 74LS367 | | 01295 | 74LS367 |
| U15 | 230330 | INTEGRATED CIRCUIT | | | 74LS367 | | 01295 | 74LS367 |
| U16 | 230330 | INTEGRATED CIRCUIT | | | 74LS367 | | 01295 | 74LS367 |
| U17 | 230354 | INTEGRATED CIRCUIT | | | 74LS75 | | 18324 | 74LS75 |

401624 - Assy., PCB, PARALLEL BCD (continued)

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|--------------------|--------|-----------|------------------|-------|-----------------------|-------------|
| U18 | 230354 | INTEGRATED CIRCUIT | | 74LS75 | | 18324 | 74LS75 | |
| U19 | 230354 | INTEGRATED CIRCUIT | | 74LS75 | | 18324 | 74LS75 | |
| U20 | 230193 | INTEGRATED CIRCUIT | | SN74LS00N | | 01295 | SN74LS00N | |
| U21 | 230064 | INTEGRATED CIRCUIT | | 7404 | | 01295 | 7404 | |
| U22 | 230248 | INTEGRATED CIRCUIT | | SN74LS10N | | 01295 | SN74LS10N | |
| U23 | 230313 | INTEGRATED CIRCUIT | | CD4016AE | | 86884 | CD4016AE | |
| U24 | 230194 | INTEGRATED CIRCUIT | | SN74LS74N | | 01295 | SN74LS74N | |
| U25 | 230363 | INTEGRATED CIRCUIT | | LM555CN | | 27014 | LM555CN | |
| Z1 | 080004 | RES | CERMET | 4.7 K | NETWORK 6P,5R 2% | 11236 | 750-61-R4.7K Ω | |
| Z2 | 080004 | RES | CERMET | 4.7 K | NETWORK 6P,5R 2% | 11236 | 750-61-R4.7K Ω | |
| Z3 | 080004 | RES | CERMET | 4.7 K | NETWORK 6P,5R 2% | 11236 | 750-61-R4.7K Ω | |
| Z4 | 080023 | RES | CERMET | 4.7 K | NETWORK 8P,7R 2% | 11236 | 750-81-R4.7K Ω | |
| Z5 | 080004 | RES | CERMET | 4.7 K | NETWORK 6P,5R 2% | 11236 | 750-61-R4.7K Ω | |

404020 – Assy., CABLE, PARALLEL BCD, 25 PIN

| REF DES | RACAL- DANA P/N | DESCRIPTION | FSC | MANU P/N |
|------------|-----------------------|--------------|-------|-------------|
| J209 | 600167 | CONN 25 S | 71785 | DB-25S |


401612 - Assy., PCB, OHMS

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|------------------------|---------------|----------|---------------|-----|-------|-------------------|
| AR1 | 230054 | IC | | | | | 27014 | LM301A |
| AR2 | 230415 | IC HIGH VOLTAGE OP AMP | | | | | 27014 | LM343H |
| C1 | 101175 | CAP | CERAM | 220 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C2 | 101175 | CAP | CERAM | 220 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C3 | 100012 | CAP | CERAM | 33 PFD | 500 V | 10% | 71471 | TCD-DI-1(N750) |
| C4 | 101174 | CAP | CERAM | .001 MFD | 500 V | 10% | 04222 | SCD-DI-2X5F-1000 |
| C5 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C6 | 101174 | CAP | CERAM | .001 MFD | 500 V | 10% | 04222 | SCD-DI-2X5F-1000 |
| C7 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C8 | 101145 | CAP | CERAM | 100 PFD | 500 V | 10% | 04222 | TCD-DI-1N5600-100 |
| C9 | 101174 | CAP | CERAM | .001 MFD | 500 V | 10% | 04222 | SCD-DI-2X5F-1000 |
| C10 | 120290 | CAP | MYLAR | .22 MFD | 100 V | 20% | 73445 | C281AH/A220K |
| C11 | 120036 | CAP | POLY | 3300 PFD | 630 V | 5% | 08257 | CPR-330J |
| CR1 | 211083 | DIODE | SILICO | 1N916B | | | 81349 | 1N916B |
| CR2 | 211083 | DIODE | SILICO | 1N916B | | | 81349 | 1N916B |
| CR3 | 211083 | DIODE | SILICO | 1N916B | | | 81349 | 1N916B |
| CR4 | 211083 | DIODE | SILICO | 1N916B | | | 81349 | 1N916B |
| CR5 | 210014 | DIODE | | 1N4005 | | | 81349 | 1N4005 |
| CR6 | 211083 | DIODE | SILICO | 1N916B | | | 81349 | 1N916B |
| CR7 | 211083 | DIODE | SILICO | 1N916B | | | 81349 | 1N916B |
| CR8 | 220015 | DIODE | SILICO, ZENER | 1N967B | | | 81349 | 1N967B |
| K1 | 310136 | RELAY, MAGNETIC REED | | | 1 Form A | | 15636 | R6277-3 |
| K2 | 310134 | RELAY, MAGNETIC REED | | | 2 Form A | | 15636 | R6278-3 |
| K3 | 310134 | RELAY, MAGNETIC REED | | | 2 Form A | | 15636 | R6278-3 |
| K4 | 310112 | RELAY | | 28 V | AZ421-467-204 | | 26806 | AZ421-467-204 |
| K5 | 310112 | RELAY | | 28 V | AZ421-467-204 | | 26806 | AZ421-467-204 |
| Q1 | 200201 | TRANS | Dual | NPN | 200201 | | 21793 | 200201 |
| Q2 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| Q3 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| Q4 | 200088 | TRANS | SILICO | PNP | 2N4248 | | 80131 | 2N4248 |
| Q5 | 200068 | TRANS | | PNP | 2N4250 | | 80131 | 2N4250 |
| Q6 | 200068 | TRANS | | PNP | 2N4250 | | 80131 | 2N4250 |
| Q7 | 200068 | TRANS | | PNP | 2N4250 | | 80131 | 2N4250 |
| Q8 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| Q9 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| Q10 | 200245 | TRANS | | PNP | MPS-A92 | | 04713 | MPS-A92 |
| Q11 | 200245 | TRANS | | PNP | MPS-A92 | | 04713 | MPS-A92 |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N | |
|------------|-----------------------|-------------|-----------|------------|--------------|----------|-------------|-----------------|
| Q12 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 | |
| Q13 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 | |
| Q14 | 200247 | TRANS | | DUAL J-FET | 5 μ V/°C | 21793 | 200247 | |
| Q15 | 200088 | TRANS | SILICO | PNP | 2N4248 | 80131 | 2N4248 | |
| Q16 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 | |
| Q17 | 200245 | TRANS | | PNP | MPS-A92 | 04713 | MPS-A92 | |
| Q18 | 200245 | TRANS | | PNP | MPS-A92 | 04713 | MPS-A92 | |
| Q19 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 | |
| Q20 | 200088 | TRANS | SILICO | PNP | 2N4248 | 80131 | 2N4248 | |
| R1 | 010780 | RES | METAL | 499 K | | 1% 1/8W | 81349 | RN60E4993F |
| R2 | 010780 | RES | METAL | 499 K | | 1% 1/8W | 81349 | RN60E4993F |
| R3 | 000203 | RES | CARBON | 20 K | | 5% 1/4W | 81349 | RC07GF203J |
| R4 | 010784 | RES | CARBON | 4.7 M | | 1% | 91637 | DC1-4 |
| R5 | 000202 | RES | CARBON | 2 K | | 5% 1/4W | 81349 | RC07GF202J |
| R6 | 001816 | RES | CARBON | 47 K | | 5% 2W | 01121 | See Description |
| R7 | 001816 | RES | CARBON | 47 K | | 5% 2W | 01121 | See Description |
| R10 | 010118 | RES | METAL | 56.2 K | T-0 | 1% 1/8W | 81349 | RN60D5622F |
| R11 | 000203 | RES | CARBON | 20 K | | 5% 1/4W | 81349 | RC07GF203J |
| R12 | 000205 | RES | CARBON | 2 M | | 5% 1/4W | 81349 | RC07GF205J |
| R13 | 000205 | RES | CARBON | 2 M | | 5% 1/4W | 81349 | RC07GF205J |
| R14 | 000205 | RES | CARBON | 2 M | | 5% 1/4W | 81349 | RC07GF205J |
| R15 | 000205 | RES | CARBON | 2 M | | 5% 1/4W | 81349 | RC07GF205J |
| R16 | 040229 | POT | CERMET | 1 K | | 10% 3/4W | 73138 | 89PR1K |
| R17 | 000473 | RES | CARBON | 47 K | | 5% 1/4W | 81349 | RC07GF473J |
| R18 | 000221 | RES | CARBON | 220 OHM | | 5% 1/4W | 81349 | RC07GF221J |
| R19 | 000221 | RES | CARBON | 220 OHM | | 5% 1/4W | 81349 | RC07GF221J |
| R20 | 000104 | RES | CARBON | 100 K | | 5% 1/4W | 81349 | RC07GF104J |
| R21 | 000104 | RES | CARBON | 100 K | | 5% 1/4W | 81349 | RC07GF104J |
| R22 | 000753 | RES | CARBON | 75 K | | 5% 1/4W | 81349 | RC07GF753J |
| R23 | 010118 | RES | METAL | 56.2 K | T-0 | 1% 1/8W | 81349 | RN60D5622F |
| R24 | 000112 | RES | CARBON | 1.1 K | | 5% 1/4W | 81349 | RC07GF112J |
| R25 | 000393 | RES | CARBON | 39 K | | 5% 1/4W | 81349 | RC07GF393J |
| R26 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R27 | 000102 | RES | CARBON | 1 K | | 5% 1/4W | 81349 | RC07GF102J |
| R28 | 001816 | RES | CARBON | 47 K | | 5% 2W | 01121 | See Description |
| R29 | 010337 | RES | CARBON | 10 M | | 1% 1/2W | 81349 | RN20X1005F |
| W1 | 600245 | JUMPER | INSULATED | | | | | L-2007-1LP |
| W2 | 600245 | JUMPER | INSULATED | | | | | L-2007-1LP |
| W3 | 600245 | JUMPER | INSULATED | | | | | L-2007-1LP |

401607 - Assy., PCB, OHMS REFERENCE

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|---------------|------------|----------|-----------|-------|----------------|
| AR1 | 230054 | IC | | | LM301A | | 27014 | LM301A |
| C1 | 100012 | CAP | CERAM | 33 PFD | 500 V | 10% | 71471 | TCD-DI-1(N750) |
| K1 | 310134 | RELAY | MAGNETIC REED | | 2 Form A | | 15636 | R6278-3 |
| R1 | 010656 | RES | METAL | 19.948 M | | .1% 1/2W | 81349 | RN70E Type |
| R2 | 020716 | RES | WW | 10 K | | .1% .05W | 22045 | J90 |
| R3 | 010719 | RES | METAL | 16.2 K | | 1% 1/10W | 81349 | RN55C1622F |
| R4 | 020719 | RES | WW | 20 K | | .1% .05W | 22045 | J90 |
| R5 | 020716 | RES | W | 10 K | | .1% .05W | 22045 | J90 |
| R6 | 010655 | RES | METAL | 11.086 M | | .1% 1/2W | 81349 | RN70E Type |
| R7 | 000470 | RES | CARBON | 47 OHM | | 5% 1/4W | 81349 | RC07GF470J |
| R8 | 020712 | RES | WW | 112.5 K | | .01% .15W | 22045 | J110 |
| R9 | 020699 | RES | WW | 4.0004 K | | .01% .15W | 22045 | J110 |
| R10 | 020612 | RES | WW | 1.009 M | | .05% 1/4W | 22045 | J120 |
| R11 | 020698 | RES | WW | 445.71 OHM | | .05% .15W | 22045 | J110 |
| R12 | 001759 | RES | CARBON | 5.1 OHM | | 5% 1/4W | 81349 | RC07GF5R1J |
| R13 | 020718 | RES | WW | 2 K | | .1% .05W | 22045 | J90 |
| R15 | 012038 | RES | METAL | 10 K | | .1% .3W | 18612 | HP-202 |
| R16 | 020707 | RES | WW | 5 K | | .02% .15W | 22045 | J110 |
| R17 | 020708 | RES | WW | 20 K | | .05% .15W | 22045 | J110 |
| W1 | 600245 | JUMPER | INSULATED | | | | | L-2007-1LP |

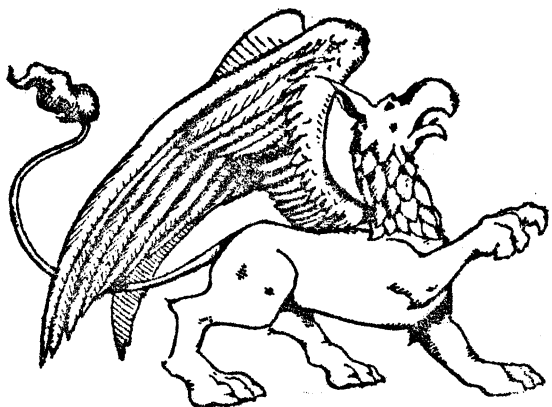

401619 - Assy., PCB, AVERAGING AC CONVERTER

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|---------------|--------------|-------------|-----|-------|----------------|
| AR1 | 230103 | IC | | | LM308 | | 27014 | LM308 |
| AR2 | 230103 | IC | | | LM308 | | 27014 | LM308 |
| AR3 | 230054 | IC | | | LM301A | | 27014 | LM301A |
| B1 | 920563 | BEADS | SHIELDING | | | | 02114 | 56-59065/4B |
| B2 | 920563 | BEADS | SHIELDING | | | | 02114 | 56-59065/4B |
| C1 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C2 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C3 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C4 | 100081 | CAP | CERAM | 4.7 PFD | 1000 V | 5% | 56289 | C030B102E4R7D |
| C5 | 121394 | CAP | MYLAR | .15 MFD | 100 V | 10% | 09023 | WMF1P15 |
| C6 | 121394 | CAP | MYLAR | .15 MFD | 100 V | 10% | 09023 | WMF1P15 |
| C7 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C8 | 100095 | CAP | CERAM | 2.7 ± .5 PFD | 1000 V | | 56289 | C030B102S2R7D |
| C9 | 120130 | CAP | MYLAR | .15 MFD | 100 V | 5% | 27556 | XT2B154J |
| C10 | 120025 | CAP | MYLAR | 1.5 MFD | 100 V | 10% | 27556 | XA2B155K |
| C11 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C12 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C13 | 130131 | CAP | TRIMMER | 2-20 PFD | 100 V | | 73445 | C010KA/20E |
| C14 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C15 | 100095 | CAP | CERAM | 2.7 ± .5 PFD | 1000 V | | 56289 | C030B102S2R7D |
| C16 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C17 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C18 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C19 | 100012 | CAP | CERAM | 33 PFD | 500 V | 10% | 71471 | TCD-DI-1(N750) |
| C20 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C21 | 100012 | CAP | CERAM | 33 PFD | 500 V | 10% | 71471 | TCD-DI-1(N750) |
| C22 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C23 | 100012 | CAP | CERAM | 33 PFD | 500 V | 10% | 71471 | TCD-DI-1(N750) |
| C24 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C25 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C26 | 100038 | CAP | CERAM | 560 PFD | 500 V | 10% | 71590 | DD561 |
| C27 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C28 | 110125 | CAP | TANTA | 2.2 MFD | 35 V | 20% | 05397 | T368B225M035AS |
| C29 | 100038 | CAP | CERAM | 560 PFD | 500 V | 10% | 71590 | DD561 |
| C30 | 110181 | CAP | TANTA | 47 MFD | 25 V | | 05397 | T36D476025A |
| C31 | 110181 | CAP | TANTA | 47 MFD | 25 V | | 05397 | T36D476025A |
| CR1 | 220004 | DIODE | SILICO, ZENER | | 1N961B | | 81349 | 1N961B |
| CR2 | 210035 | DIODE | HOT CARRIER | | HP5082-2810 | | 50434 | HP5082-2810 |
| CR3 | 210035 | DIODE | HOT CARRIER | | HP5082-2810 | | 50434 | HP5082-2810 |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N | |
|------------|-----------------------|-------------|---------------|---------|---------|----------|-------------|------------|
| CR4 | 220004 | DIODE | SILICO, ZENER | 1N961B | | 81349 | 1N961B | |
| CR5 | 220035 | DIODE | ZENER | 16V | 5% | 81349 | 1N966B | |
| CR6 | 220035 | DIODE | ZENER | 16V | 5% | 81349 | 1N966B | |
| Q1 | 200197 | TRANS | SILICO | NPN | MPS-H10 | 04713 | MPS-H10 | |
| Q2 | 200197 | TRANS | SILICO | NPN | MPS-H10 | 04713 | MPS-H10 | |
| Q3 | 200178 | TRANS | | PNP | 2N5910 | 81349 | 2N5910 | |
| Q4 | 200197 | TRANS | SILICO | NPN | MPS-H10 | 04713 | MPS-H10 | |
| Q5 | 200197 | TRANS | SILICO | NPN | MPS-H10 | 04713 | MPS-H10 | |
| Q6 | 200197 | TRANS | SILICO | NPN | MPS-H10 | 04713 | MPS-H10 | |
| Q7 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 | |
| Q8 | 200201 | TRANS | DUAL | NPN | 200201 | 21793 | 200201 | |
| Q9 | 200201 | TRANS | DUAL | NPN | 200201 | 21793 | 200201 | |
| Q10 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 | |
| Q11 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 | |
| Q12 | 200200 | TRANS | | NPN | 200200 | 21793 | 200200 | |
| Q13 | 200068 | TRANS | | PNP | 2N4250 | 80131 | 2N4250 | |
| Q14 | 200179 | TRANS | | FET | KE4391 | 27014 | KE4391 | |
| Q15 | 200178 | TRANS | | PNP | 2N5910 | 81349 | 2N5910 | |
| R1 | 000333 | RES | CARBON | 33 K | | 5% 1/4W | 81349 | RC07GF333J |
| R2 | 000201 | RES | CARBON | 200 OHM | | 5% 1/4W | 81349 | RC07GF201J |
| R3 | 000510 | RES | CARBON | 51 OHM | | 5% 1/4W | 81349 | RC07GF510J |
| R4 | 000512 | RES | CARBON | 5.1 K | | 5% 1/4W | 81349 | RC07GF512J |
| R5 | 000751 | RES | CARBON | 750 OHM | | 5% 1/4W | 81349 | RC07GF751J |
| R6 | 000163 | RES | CARBON | 16 K | | 5% 1/4W | 81349 | RC07GF163J |
| R7 | 000113 | RES | CARBON | 11 K | | 5% 1/5W | 81349 | RC07GF113J |
| R8 | 000562 | RES | CARBON | 5.6 K | | 5% 1/4W | 81349 | RC07GF562J |
| R9 | 000100 | RES | CARBON | 10 OHM | | 5% 1/4W | 81349 | RC07GF100J |
| R10 | 000105 | RES | CARBON | 1 M | | 5% 1/4W | 81349 | RC07GF105J |
| R11 | 000161 | RES | CARBON | 160 OHM | | 5% 1/4W | 81349 | RC07GF161J |
| R12 | 000333 | RES | CARBON | 33 K | | 5% 1/4W | 81349 | RC07GF333J |
| R13 | 000183 | RES | CARBON | 18 K | | 5% 1/4W | 81349 | RC07GF183J |
| R14 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R15 | 010529 | RES | METAL | 10 K | | 1% 1/10W | 81349 | RN55C1002F |
| R16 | 000107 | RES | CARBON | 100 M | | 5% 1/4W | 81349 | RC07GF107J |
| R17 | 000911 | RES | CARBON | 910 OHM | | 5% 1/4W | 81349 | RC07GF911J |
| R18 | 000101 | RES | CARBON | 100 OHM | | 5% 1/4W | 81349 | RC07GF101J |
| R19 | 000153 | RES | CARBON | 15 K | | 5% 1/4W | 81349 | RC07GF153J |
| R20 | 000101 | RES | CARBON | 100 OHM | | 5% 1/4W | 81349 | RC07GF101J |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|------------|----------|-----------|-------|-------------|
| R21 | 010727 | RES | METAL | 2.5 K | .01% | 18612 | V53-1M |
| R22 | 000332 | RES | CARBON | 3.3 K | 5% 1/4W | 81349 | RC07GF332J |
| R23 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R24 | 020657 | RES | WW | 11.109 K | .01% .15W | 22045 | J110 |
| R25 | 010536 | RES | METAL | 100 K | 1% 1/10W | 81349 | RN55C1003F |
| R26 | 010631 | RES | METAL | 10.2 K | 1% 1/10W | 81349 | RN55C1022F |
| R27 | 000124 | RES | CARBON | 120 K | 5% 1/4W | 81349 | RC07GF124J |
| R28 | 000106 | RES | CARBON | 10 M | 5% 1/4W | 81349 | RC07GF106J |
| R29 | 010808 | RES | METAL | 10 K | .1% 1/10W | 81349 | RN55C1002B |
| R30 | 000201 | RES | CARBON | 200 OHM | 5% 1/4W | 81349 | RC07GF201J |
| R31 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R32 | 000102 | RES | CARBON | 1 K | 5% 1/4W | 81349 | RC07GF102J |
| R33 | 010660 | RES | METAL | 5 K | .01% | 18612 | V53-1 |
| R34 | 000151 | RES | CARBON | 150 OHM | 5% 1/4W | 81349 | RC07GF151J |
| R35 | 000821 | RES | CARBON | 820 OHM | 5% 1/4W | 81349 | RC07GF821J |
| R36 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R37 | 010661 | RES | METAL | 10 K | .01% | 18612 | V53-1M |
| R38 | 010529 | RES | METAL | 10 K | 1% 1/10W | 81349 | RN55C1002F |
| R39 | 010829 | RES | METAL | 4.99 K | 1% 1/10W | 81349 | RN55C4991F |
| R40 | 040234 | POT | CERMET | 50 K | 10% | 73138 | 89PR50K |
| R41 | 010650 | RES | METAL | 1 M | 1% 1/10W | 81349 | RN55E1004F |
| R42 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R43 | 010650 | RES | METAL | 1 M | 1% 1/10W | 81349 | RN55E1004F |
| R44 | 010650 | RES | METAL | 1 M | 1% 1/10W | 81349 | RN55E1004F |
| R45 | 010650 | RES | METAL | 1 M | 1% 1/10W | 81349 | RN55E1004F |
| R46 | 040234 | POT | CERMET | 50 K | 10% | 73138 | 89PR50K |
| R47 | 000105 | RES | CARBON | 1 M | 5% 1/4W | 81349 | RC07GF105J |
| R48 | 001159 | RES | CARBON | 330 OHM | 5% 1/2W | 81349 | RC07GF331J |
| R49 | 001159 | RES | CARBON | 330 OHM | 5% 1/2W | 81349 | RC07GF331J |
| R50 | 040235 | POT | CERMET | 100 K | 10% 3/4W | 73138 | 89PR100K |
| TP1 | 600591 | POST | TEST POINT | | | 00779 | 85931-6 |
| TP2 | 600591 | POST | TEST POINT | | | 00779 | 85931-6 |
| TP3 | 600591 | POST | TEST POINT | | | 00779 | 85931-6 |
| TP4 | 600591 | POST | TEST POINT | | | 00779 | 85931-6 |
| TP5 | 600591 | POST | TEST POINT | | | 00779 | 85931-6 |
| TP6 | 600591 | POST | TEST POINT | | | 00779 | 85931-6 |
| TP7 | 600591 | POST | TEST POINT | | | 00779 | 85931-6 |

401626 - Assy., PCB, 4-WIRE RATIO

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|----------------------------|--------|----------|--------|----------|-------|-----------------|
| AR1 | 230103 | INTEGRATED CIRCUIT LM308 | | | | | 27014 | LM308 |
| AR2 | 230103 | INTEGRATED CIRCUIT LM308 | | | | | 27014 | LM308 |
| AR3 | 230127 | INTEGRATED CIRCUIT SSS725C | | | | | 06665 | SSS725C |
| C1 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T363B685M035AS |
| C2 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C3 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C4 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C5 | 100012 | CAP | CERAM | 33 PFD | 500 V | 10% | 71471 | TOD-DI-1 (N750) |
| C6 | 120312 | CAP | POLY | .022 MFD | 400 V | 10% | 73445 | C280MAF/A22K |
| C7 | 120308 | CAP | POLY | .047 MFD | 250 V | 10% | 73445 | C280MAE/A47K |
| C8 | 100012 | CAP | CERAM | 33 PFD | 500 V | 10% | 71471 | TCD-DI-1(N750) |
| C9 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C10 | 110158 | CAP | TANTA | 10 MFD | 50 V | 10% | 05397 | T362C106K050A |
| Q1 | 200200 | TRANS | NPN | | 200200 | | 21793 | 200200 |
| Q2 | 200200 | TRANS | NPN | | 200200 | | 21793 | 200200 |
| R1 | 000390 | RES | CARBON | 39 OHM | | 5% 1/4W | 81349 | RC07GF390J |
| R2 | 000100 | RES | CARBON | 10 OHM | | 5% 1/4W | 81349 | RC07GF100J |
| R3 | 010033 | RES | METAL | 49.9 K | T-O | 1% 1/8W | 81349 | RN60D4992F |
| R4 | 010033 | RES | METAL | 49.9 K | T-O | 1% 1/8W | 81349 | RN60D4992F |
| R6 | 010787 | RES | METAL | 20 K | | .02% | 18612 | V53-1 |
| R7 | 010787 | RES | METAL | 20 K | | .02% | 18612 | V53-1 |
| R8 | 010033 | RES | METAL | 49.9 K | T-O | 1% 1/8W | 81349 | RN60D4992F |
| R9 | 010787 | RES | METAL | 20 K | | .02% | 18612 | V53-1 |
| R10 | 000100 | RES | CARBON | 10 OHM | | 5% 1/4W | 81349 | RC07GF100J |
| R11 | 040229 | POT | CERAM | 1 K | | 10% 3/4W | 73138 | 89PR1K |
| R12 | 040235 | POT | CERAM | 100 K | | 10% 3/4W | 73138 | 89PR100K |
| R13 | 010033 | RES | METAL | 49.9 K | T-O | 1% 1/8W | 81349 | RN60D4992F |
| R14 | 000100 | RES | CARBON | 10 OHM | | 5% 1/4W | 81349 | RC07GF100J |
| R15 | 040229 | POT | CERAM | 1 K | | 10% 3/4W | 73138 | 89PR1K |
| R16 | 010787 | RES | METAL | 20 K | | .02% | 18612 | V53-1 |

401618 - Assy., PCB, RMS CONVERTER

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|-----------|--------------|--------|-----|-------|------------------|
| AR1 | 230054 | IC | | | LM301A | | 27014 | LM301A |
| AR2 | 230180 | IC | OP AMP | | LM318H | | 27014 | LM318H |
| B1 | 920563 | BEADS | SHIELDING | | | | 02114 | 56-59065/4B |
| C1 | 101174 | CAP | CERAM | .001 MFD | 500 V | 10% | 04222 | SCD-DI-2X5F-1000 |
| C2 | 101642 | CAP | CERAM | 150 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C3 | 120026 | CAP | MYLAR | .47 MFD | 100 V | 10% | 27556 | SA2B474K |
| C4 | 100100 | CAP | CERAM | FSV | | | 21793 | 100100 |
| C5 | 130160 | CAP | MICA | 330 PFD | | | 72136 | DM15 Series |
| C6 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C7 | 120026 | CAP | MYLAR | .47 MFD | 100 V | 10% | 27556 | SA2B474K |
| C8 | 130076 | CAP | MICA | 200 PFD | 500 V | 5% | 72136 | DM15-201J |
| C9 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C10 | 101641 | CAP | CERAM | 470 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C11 | 100100 | CAP | CERAM | FSV | | | 21793 | 100100 |
| C12 | 130095 | CAP | MICA | 390 PFD | 100 V | 5% | 72136 | SCDM10-391J |
| C13 | 120280 | CAP | MYLAR | .22 MFD | 1000 V | 10% | 27556 | ZA2J224K |
| C15 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C16 | 100100 | CAP | CERAM | FSV | | | 21793 | 100100 |
| C17 | 120286 | CAP | MYLAR | .1 MFD | 100 V | 20% | 73445 | C281AH/A100K |
| C18 | 101641 | CAP | CERAM | 470 MFD | 500 V | 10% | 71471 | SCD1X5F |
| C19 | 120026 | CAP | MYLAR | .47 MFD | 100 V | 10% | 27556 | SA2B474K |
| C20 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C21 | 101641 | CAP | CERAM | 470 MFD | 500 V | 10% | 71471 | SCD1X5F |
| C22 | 101098 | CAP | CERAM | 330 PFD | 500 V | 10% | 56289 | 10TS-T33 |
| C23 | 130124 | CAP | TRIMMER | 1.2-10 PFD | 250 V | | 52763 | R-TR1K0-12209SD |
| C24 | 130123 | CAP | TRIMMER | 1-3 PFD | 250 V | | 52763 | R-TR1K0-122-09SD |
| C25 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C26 | 100050 | CAP | CERAM | 2.2 PFD | 1000 V | 5% | 56289 | C030B102S2R2D |
| C27 | 130146 | CAP | TRIMMER | .25-1.5 PFD | | | 74970 | 273-0001-002 |
| C28 | 130146 | CAP | TRIMMER | .25-1.5 PFD | | | 74970 | 273-0001-002 |
| C29 | 130116 | CAP | MICA | 3900 PFD | 500 V | 2% | 72136 | DM19F392G0 |
| C30 | 100052 | CAP | CERAM | .22 PFD | 1000 V | 5% | 56289 | C030B102F220J |
| C31 | 100084 | CAP | CERAM | 1.5 ± .5 PFD | 1000 V | | 56289 | C030B102S1R5D |
| C32 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C33 | 110151 | CAP | TANTA | 10 MFD | 35 V | 20% | 05397 | T362C106M035AS |
| C34 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C35 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C36 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C37 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C38 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-----------------------------|---------------|----------|-------------|------------|-------|----------------|
| C39 | 110162 | CAP | TANTA | .33 MFD | 35 V | 5% | 05397 | T368A334J035AB |
| C40 | 110162 | CAP | TANTA | .33 MFD | 35 V | 5% | 05397 | T368A334J035AB |
| CR1 | 220022 | DIODE | SILICO, ZENER | | 1N965B | | 81349 | 1N965B |
| CR2 | 210035 | DIODE | HOT CARRIER | | HP5082-2810 | | 50434 | HP5082-2810 |
| CR3 | 210035 | DIODE | HOT CARRIER | | HP5082-2810 | | 50434 | HP5082-2810 |
| K1 | 310078 | RELAY | REED | 28 V | | | 15636 | R2690-3 |
| K2 | 310078 | RELAY | REED | 28 V | | | 15636 | R2690-3 |
| K3 | 310078 | RELAY | REED | 28 V | | | 15636 | R2690-3 |
| K4 | 310078 | RELAY | REED | 28 V | | | 15636 | R2690-3 |
| Q1 | 200068 | TRANS | | PNP | 2N4250 | | 80131 | 2N4250 |
| Q2 | 403865 | MATCHED LOG TRANSISTOR ASSY | | | | | 21793 | 403865 |
| Q3 | 403865 | MATCHED LOG TRANSISTOR ASSY | | | | | 21793 | 403865 |
| Q4 | 200201 | TRANS | DUAL | NPN | | | 21793 | 200201 |
| Q5 | 200199 | TRANS | FET | | FM1302 | | 27014 | FM1302 |
| Q6 | 200068 | TRANS | | PNP | 2N4250 | | 80131 | 2N4250 |
| Q7 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| Q8 | 200264 | TRANS | SILICO | DUAL PNP | MP351 | | | MP351 |
| Q9 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| Q11 | 200197 | TRANS | SILICO | NPN | MPS-H10 | | 04713 | MPS-H10 |
| Q12 | 200197 | TRANS | SILICO | NPN | MPS-H10 | | 04713 | MPS-H10 |
| Q13 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| Q14 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| Q15 | 200220 | TRANS | DUAL | | 200220 | | 21793 | 200220 |
| Q16 | 200068 | TRANS | | PNP | 2N4250 | | 80131 | 2N4250 |
| Q17 | 200136 | TRANS | SILICO | NPN | 2N5963 | | 81349 | 2N5963 |
| R1 | 020667 | RES | WW | 100 K | | .1% .15W | 22045 | J110 |
| R2 | 000104 | RES | CARBON | 100 K | | 5% 1/4W | 81349 | RC07GF104J |
| R3 | 403865 | MATCHED LOG TRANSISTOR ASSY | | | | | 21793 | 403865 |
| R4 | 010618 | RES | METAL | 200 K | | .25% 1/10W | 81349 | RN55C2003C |
| R5 | 010536 | RES | METAL | 100 K | | 1% 1/10W | 81349 | RN55C1003F |
| R6 | 010542 | RES | METAL | 100 K | | 1% 1/10W | 81349 | RN55E1003F |
| R7 | 000183 | RES | CARBON | 18 K | | 5% 1/4W | 81349 | RC07GF183J |
| R8 | 000101 | RES | CARBON | 100 OHM | | 5% 1/4W | 81349 | RC07GF101J |
| R9 | 000682 | RES | CARBON | 6.8 K | | 5% 1/4W | 81349 | RC07GF682J |
| R10 | 010496 | RES | METAL | 1 M | | 1% 1/8W | 81349 | RN60D1004F |
| R11 | 000104 | RES | CARBON | 100 K | | 5% 1/4W | 81349 | RC07GF104J |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-----------------------------|--------|-------------------|------------|-------|-------------|
| R12 | 001737 | RES | CARBON | FSV | 5% 1/4W | 21793 | 001737 |
| R13 | 010721 | RES | METAL | DIAC, MATCHED SET | | 21793 | 010721 |
| R14 | 000242 | RES | CARBON | 2.4 K | 5% 1/4W | 81349 | RC07GF242J |
| R15 | 010721 | RES | METAL | DIAC, MATCHED SET | | 21793 | 010721 |
| R16 | 010542 | RES | METAL | 100 K | 1% 1/10W | 81349 | RN55E1003F |
| R17 | 010611 | RES | METAL | 52.3 K | 1% 1/10W | 81349 | RN55C5232F |
| R18 | 000392 | RES | CARBON | 3.9 K | 5% 1/4W | 81349 | RC07GF392J |
| R19 | 010621 | RES | METAL | 49.9 K | 1% 1/10W | 81349 | RN55C4992F |
| R20 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R21 | 010533 | RES | METAL | 28.7 K | 1% 1/10W | 81349 | RN55C2872F |
| R22 | 000476 | RES | CARBON | 47 M | 5% 1/4W | 81349 | RC07GF476J |
| R23 | 000512 | RES | CARBON | 5.1 K | 5% 1/4W | 81349 | RC07GF512J |
| R24 | 000107 | RES | CARBON | 100 M | 5% 1/4W | 81349 | RC07GF107J |
| R25 | 403865 | MATCHED LOG TRANSISTOR ASSY | | | | 21793 | 403865 |
| R26 | 000681 | RES | CARBON | 680 OHM | 5% 1/4W | 81349 | RC07GF681J |
| R27 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R28 | 000123 | RES | CARBON | 12 K | 5% 1/4W | 81349 | RC07GF123J |
| R29 | 000272 | RES | CARBON | 2.7 K | 5% 1/4W | 81349 | RC07GF272J |
| R30 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R31 | 010684 | RES | METAL | 487 OHM | 1% 1/10W | 81349 | RN55E4870F |
| R32 | 000105 | RES | CARBON | 1 M | 5% 1/4W | 81349 | RC07GF105J |
| R33 | 010684 | RES | METAL | 487 OHM | 1% 1/10W | 81349 | RN55E4870F |
| R34 | 010721 | RES | METAL | DIAC, MATCHED SET | | 21793 | 010721 |
| R35 | 000820 | RES | CARBON | 82 OHM | 5% 1/4W | 81349 | RC07GF820J |
| R36 | 010721 | RES | METAL | DIAC, MATCHED SET | | 21793 | 010721 |
| R37 | 001737 | RES | CARBON | FSV | 5% 1/4W | 21793 | 001737 |
| R38 | 001737 | RES | CARBON | FSV | 5% 1/4W | 21793 | 001737 |
| R39 | 010654 | RES | METAL | 20 K | .05% | 18612 | V53-1 |
| R40 | 010586 | RES | METAL | 5 K | .02% | 18612 | V53-1M |
| R41 | 001737 | RES | CARBON | FSV | 5% 1/4W | 21793 | 001737 |
| R42 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R43 | 010721 | RES | METAL | DIAC, MATCHED SET | | 21793 | 010721 |
| R44 | 010720 | RES | METAL | 9.09 K | .25% 1/10W | 81349 | RN55C9091C |
| R45 | 040227 | POT | CERMET | 200 OHM | 10% 3/4W | 73138 | 89PR200 |
| R46 | 010654 | RES | METAL | 20 K | .05% | 18612 | V53-1 |
| R47 | 010615 | RES | METAL | 10 K | .02% | 18612 | V53-1M |
| R48 | 001737 | RES | CARBON | FSV | 5% 1/4W | 21793 | 001737 |
| R49 | 001737 | RES | CARBON | FSV | 5% 1/4W | 21793 | 001737 |
| R50 | 000513 | RES | CARBON | 51 K | 5% 1/4W | 81349 | RC07GF513J |
| R51 | 001878 | RES | CARBON | FSV | 5% 1/4W | 21793 | 001878 |
| R52 | 040225 | POT | CERMET | 50 OHM | 20% | 73138 | 89PR50 |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|-----------------------|---------|----------|-------|-------------|
| R53 | 040239 | POT | CERMET | 1 M | 20% | 73138 | 89PR1M |
| R54 | 040231 | POT | CERMET | 5 K | 10% | 73138 | 89PR5K |
| R55 | 040225 | POT | CERMET | 50 OHM | 20% | 73138 | 89PR50 |
| R56 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R57 | 000470 | RES | CARBON | 47 OHM | 5% 1/4W | 81349 | RC07GF470J |
| R58 | 010615 | RES | METAL | 10 K | .02% | 18612 | V53-1M |
| R59 | 010586 | RES | METAL | 5 K | .02% | 18612 | V53-1M |
| R60 | 010654 | RES | METAL | 20 K | .05% | 18612 | V53-1 |
| R61 | 000184 | RES | CARBON | 180 K | 5% 1/4W | 81349 | RC07GF184J |
| R62 | 040235 | POT | CERMET | 100 K | 10% 3/4W | 73138 | 89PR100K |
| R63 | 040225 | POT | CERMET | 50 OHM | 20% | 73138 | 89PR50 |
| R64 | 040225 | POT | CERMET | 50 OHM | 20% | 73138 | 89PR50 |
| R65 | 040228 | POT | CERMET | 500 OHM | 10% | 73138 | 89PR500 |
| R67 | 040228 | POT | CERMET | 500 OHM | 10% | 73138 | 89PR500 |
| R69 | 001737 | RES | CARBON | FSV | 5% 1/4W | 21793 | 001737 |
| R70 | 000514 | RES | CARBON | 510 K | 5% 1/4W | 81349 | RC07GF514J |
| R71 | 040235 | POT | CERMET | 100 K | 10% 3/4W | 73138 | 89PR100K |
| R72 | 040232 | POT | CERMET | 10 K | 10% | 73138 | 89PR10K |
| R73 | 040235 | POT | CERMET | 100 K | 10% 3/4W | 73138 | 89PR100K |
| TP1 | 600786 | POST | MACHINE APPLIED STRIP | | | 00779 | 1-87022-0 |
| TP2 | 600786 | POST | MACHINE APPLIED STRIP | | | 00779 | 1-87022-0 |
| TP3 | 600786 | POST | MACHINE APPLIED STRIP | | | 00779 | 1-87022-0 |
| TP4 | 600786 | POST | MACHINE APPLIED STRIP | | | 00779 | 1-87022-0 |
| TP5 | 600786 | POST | MACHINE APPLIED STRIP | | | 00779 | 1-87022-0 |
| U1 | 230563 | IC | LINEAR | | | 27014 | LM340LAZ-15 |
| U2 | 230562 | IC | LINEAR | | | 27014 | LM320Z-15 |

404017 - Assy., GPIB OPTION

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-------------------|--|--|--|-----|-------------|
| U17 | 230523 | IC - Memory - U17 | | | | | SYP2316B |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|--------------------|--------|----------|------------|----------|-------|----------------|
| C1 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C2 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C3 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C4 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C5 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C6 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C7 | 100124 | CAP | CERAM | 330 PFD | 1000 V | 20% | 56289 | C023B102E331M |
| C8 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C9 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C10 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C11 | 100071 | CAP | CERAM | .001 MFD | 1000 V | 20% | 56289 | C023B102E102M |
| R1 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R2 | 000510 | RES | CARBON | 51 OHM | | 5% 1/4W | 81349 | RC07GF510J |
| R3 | 000510 | RES | CARBON | 51 OHM | | 5% 1/4W | 81349 | RC07GF510J |
| U1 | 230246 | INTEGRATED CIRCUIT | | | MC3440P | | 04713 | MC3440P |
| U2 | 230246 | INTEGRATED CIRCUIT | | | MC3440P | | 04713 | MC3440P |
| U3 | 230246 | INTEGRATED CIRCUIT | | | MC3440P | | 04713 | MC3440P |
| U4 | 230246 | INTEGRATED CIRCUIT | | | MC3440P | | 04713 | MC3440P |
| U5 | 230356 | INTEGRATED CIRCUIT | | | 74LS175 | | 27014 | 74LS175 |
| U6 | 230356 | INTEGRATED CIRCUIT | | | 74LS175 | | 27014 | 74LS175 |
| U7 | 230194 | INTEGRATED CIRCUIT | | | SN74LS74N | | 01295 | SN74LS74N |
| U8 | 230368 | INTEGRATED CIRCUIT | | | 74LS138 | | 27014 | 74LS138 |
| U9 | 230194 | INTEGRATED CIRCUIT | | | SN74LS74N | | 01295 | SN74LS74N |
| U10 | 230194 | INTEGRATED CIRCUIT | | | SN74LS74N | | 01295 | SN74LS74N |
| U11 | 230193 | INTEGRATED CIRCUIT | | | SN74LS00N | | 01295 | SN74LS00N |
| U12 | 230193 | INTEGRATED CIRCUIT | | | SN74LS00N | | 01295 | SN74LS00N |
| U13 | 230368 | INTEGRATED CIRCUIT | | | 74LS138 | | 27014 | 74LS138 |
| U14 | 230356 | INTEGRATED CIRCUIT | | | 74LS175 | | 27014 | 74LS175 |
| U15 | 230382 | INTEGRATED CIRCUIT | | | 74LS161AN | | 27014 | 76LS161AN |
| U16 | 230382 | INTEGRATED CIRCUIT | | | 74LS161AN | | 27014 | 76LS161AN |
| U17 | 230330 | INTEGRATED CIRCUIT | | | 74LS367 | | 01295 | 74LS367 |
| U18 | 230381 | INTEGRATED CIRCUIT | | | 74LS136J | | 27014 | 74LS136J |
| U19 | 230359 | INTEGRATED CIRCUIT | | | DM74LS151N | | 27014 | DM74LS151N |
| U20 | 230330 | INTEGRATED CIRCUIT | | | 74LS367 | | 01295 | 74LS367 |
| U21 | 230330 | INTEGRATED CIRCUIT | | | 74LS367 | | 01295 | 74LS367 |
| U22 | 230330 | INTEGRATED CIRCUIT | | | 74LS367 | | 01295 | 74LS367 |
| U23 | 230194 | INTEGRATED CIRCUIT | | | SN74LS74N | | 01295 | SN74LS74N |
| U24 | 230194 | INTEGRATED CIRCUIT | | | SN74LS74N | | 01295 | SN74LS74N |
| U25 | 230381 | INTEGRATED CIRCUIT | | | 74LS136J | | 27014 | 74LS136J |
| U26 | 230248 | INTEGRATED CIRCUIT | | | SN74LS10N | | 01295 | SN74LS10N |
| U27 | 230368 | INTEGRATED CIRCUIT | | | 74LS138 | | 27014 | 74LS138 |
| U28 | 230359 | INTEGRATED CIRCUIT | | | DM74LS151N | | 27014 | DN174LS151N |
| U29 | 230359 | INTEGRATED CIRCUIT | | | DM74LS151N | | 27014 | DN174LS151N |
| U30 | 230372 | INTEGRATED CIRCUIT | | | DM74LS287 | | 27014 | DM74LS287 |
| U31 | 230387 | INTEGRATED PROM | | | "U31" | HM7611 | 34371 | HM7611 |
| Z1 | 080020 | RES | CERMET | 10 K | NETWORK | 8P,7R 2% | 11236 | 750-81-R10KΩ |
| Z2 | 080020 | RES | CERMET | 10 K | NETWORK | 8P,7R 2% | 11236 | 750-81-R10KΩ |

404018 – Assy., CABLE, GPIB

| REF DES | RACAL- DANA P/N | DESCRIPTION | FSC | MANU P/N |
|------------|-----------------------|--------------|-------|-------------|
| J213 | 600835 | CONN 24 P | 00779 | 2-552273-1 |

401616 - Assy., PCB, PRE-AMPLIFIER

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|-------------|---------|---------|---------|-------|-------------------|
| AR1 | 230379 | IC | H.V. OP AMP | | MC1436G | | 04713 | MC1436G |
| C1 | 100027 | CAP | CERAM | .1 MFD | 100 V | 20% | 72982 | 845-000-X5V0104Z |
| C2 | 110137 | CAP | TANTA | .47 MFD | 35 V | 20% | 05397 | T368A474M035AS |
| C3 | 120134 | CAP | MYLAR | 1 MFD | 200 V | 10% | 19396 | MF1200LL |
| C4 | 120026 | CAP | MYLAR | .47 MFD | 100 V | 10% | 27556 | SA2B474K |
| C5 | 101175 | CAP | CERAM | 220 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C6 | 101175 | CAP | CERAM | 220 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C7 | 100027 | CAP | CERAM | .1 MFD | 100 V | 20% | 72982 | 845-000-X5V0104Z |
| C8 | 100027 | CAP | CERAM | .1 MFD | 100 V | 20% | 72982 | 845-000-X5V0104Z |
| C9 | 100027 | CAP | CERAM | .1 MFD | 100 V | 20% | 72982 | 845-000-X5V0104Z |
| C10 | 100027 | CAP | CERAM | .1 MFD | 100 V | 20% | 72982 | 845-000-X5V0104Z |
| C11 | 110020 | CAP | TANTA | 10 MFD | 35 V | 10% | 05397 | T310C106K035AS |
| C12 | 120348 | CAP | POLY | 1.5 MFD | 200 V | 5% | 27556 | GA2C155J |
| C13 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C14 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C15 | 120291 | CAP | MYLAR | .27 MFD | 100 V | 20% | 73445 | C281AH/A270K |
| C16 | 130042 | CAP | GLASS | 2.7 PFD | 500 V | 10% | 14674 | CYFM10C2R7 |
| C17 | 120348 | CAP | POLY | 1.5 MFD | 200 V | 5% | 27556 | GA2C155J |
| C18 | 110145 | CAP | CERAM | 100 PFD | 500 V | 10% | 04222 | TCD-DI-1N5600-100 |
| CR1 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| CR2 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| CR3 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| CR4 | 220049 | DIODE | ZENER | | 1N957B | 5% | 81349 | 1N957B |
| K1 | 310112 | RELAY | | 28 V | | | 26806 | AZ421-467-204 |
| Q1 | 200204 | TRANS | DUAL | | 2N3957 | | 81349 | 2N3957 |
| Q2 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| Q3 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| Q4 | 200206 | TRANS | FET | | 3N138 | | 80131 | 3N138 |
| Q5 | 200206 | TRANS | FET | | 3N138 | | 80131 | 3N138 |
| Q6 | 200068 | TRANS | | PNP | 2N4250 | | 80131 | 2N4250 |
| Q7 | 200253 | TRANS | SILICO | | NPN | MPS-A18 | 04713 | MPS-A18 |
| Q8 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| Q9 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| R1 | 000101 | RES | CARBON | 100 OHM | | 5% 1/4W | 81349 | RC07GF101J |
| R2 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R3 | 000105 | RES | CARBON | 1 M | | 5% 1/4W | 81349 | RC07GF105J |

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|--------|---------|---------|-------|-------------|
| R4 | 000912 | RES | CARBON | 9.1 K | 5% 1/4W | 81349 | RC07GF912J |
| R5 | 000825 | RES | CARBON | 8.2 M | 5% 1/4W | 81349 | RC07GF825J |
| R6 | 000825 | RES | CARBON | 8.2 M | 5% 1/4W | 81349 | RC07GF825J |
| R7 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R8 | 000333 | RES | CARBON | 33 K | 5% 1/4W | 81349 | RC07GF333J |
| R9 | 000334 | RES | CARBON | 330 K | 5% 1/4W | 81349 | RC07GF334J |
| R10 | 000681 | RES | CARBON | 680 OHM | 5% 1/4W | 81349 | RC07GF681J |
| R11 | 000223 | RES | CARBON | 22 K | 5% 1/4W | 81349 | RC07GF223J |
| R12 | 000105 | RES | CARBON | 1 M | 5% 1/4W | 81349 | RC07GF105J |
| R13 | 000105 | RES | CARBON | 1 M | 5% 1/4W | 81349 | RC07GF105J |
| R14 | 020665 | RES | WW | 9.9 K | 1% 3W | 91637 | RS-2B |
| R15 | 020665 | RES | WW | 9.9 K | 1% 3W | 91637 | RS-2B |
| R16 | 000680 | RES | CARBON | 68 OHM | 5% 1/4W | 81349 | RC07GF680J |
| R17 | 000104 | RES | CARBON | 100 K | 5% 1/4W | 81349 | RC07GF104J |
| R18 | 000104 | RES | CARBON | 100 K | 5% 1/4W | 81349 | RC07GF104J |
| R19 | 000473 | RES | CARBON | 47 K | 5% 1/4W | 81349 | RC07GF473J |
| R22 | 000912 | RES | CARBON | 9.1 K | 5% 1/4W | 81349 | RC07GF912J |
| R26 | 000473 | RES | CARBON | 47 K | 5% 1/4W | 81349 | RC07GF473J |
| R27 | 040239 | POT | CERMET | 1 M | 20% | 73138 | 89PR1M |
| R28 | 020665 | RES | WW | 9.9 K | 1% 3W | 91637 | RS-2B |
| R29 | 020665 | RES | WW | 9.9 K | 1% 3W | 91637 | RS-2B |
| R30 | 000513 | RES | CARBON | 51 K | 5% 1/4W | 81349 | RC07GF513J |
| R31 | 000152 | RES | CARBON | 1.5 K | 5% 1/4W | 81349 | RC07GF152J |

401622 - Assy., PCB, FAST DIGITIZER

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|--------|----------|--------|----------|-------|----------------|
| C1 | 101175 | CAP | CERAM | 220 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C2 | 100019 | CAP | CERAM | .002 MFD | 1000 V | 10% | 56289 | C023B102F202M |
| C3 | 101175 | CAP | CERAM | 220 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C4 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C5 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C6 | 101175 | CAP | CERAM | 220 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C7 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C8 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C9 | 101175 | CAP | CERAM | 220 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C10 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C11 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C12 | 101175 | CAP | CERAM | 220 PFD | 500 V | 10% | 71471 | SCD1X5F |
| C13 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C14 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C15 | 110129 | CAP | TANTA | .1 MFD | 35 V | 20% | 05397 | T368A104M035AS |
| C16 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| CR1 | 211083 | DIODE | SILICO | | IN916B | | 81349 | IN916B |
| CR2 | 211083 | DIODE | SILICO | | IN916B | | 81349 | IN916B |
| Q1 | 200037 | TRANS | SILICO | NPN | 2N3646 | | 80131 | 2N3646 |
| Q2 | 200099 | TRANS | | PNP | 2N4258 | | 81349 | 2N4258 |
| Q3 | 200037 | TRANS | SILICO | NPN | 2N3646 | | 80131 | 2N3646 |
| Q4 | 200037 | TRANS | SILICO | NPN | 2N3646 | | 80131 | 2N3646 |
| R1 | 000203 | RES | CARBON | 20 K | | 5% 1/4W | 81349 | RC07GF203J |
| R2 | 000202 | RES | CARBON | 2 K | | 5% 1/4W | 81349 | RC07GF202J |
| R3 | 000202 | RES | CARBON | 2 K | | 5% 1/4W | 81349 | RC07GF202J |
| R4 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R5 | 000242 | RES | CARBON | 2.4 K | | 5% 1/4W | 81349 | RC07GF242J |
| R6 | 000102 | RES | CARBON | 1 K | | 5% 1/4W | 81349 | RC07GF102J |
| R7 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R8 | 000271 | RES | CARBON | 270 OHM | | 5% 1/4W | 81349 | RC07GF271J |
| R9 | 010650 | RES | METAL | 1 M | | 1% 1/10W | 81349 | RN55E1004F |
| R10 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R11 | 000202 | RES | CARBON | 2 K | | 5% 1/4W | 81349 | RC07GF202J |
| R12 | 010951 | RES | METAL | 365 K | | 1% 1/10W | 81349 | RN55C3653F |
| R13 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R14 | 000103 | RES | CARBON | 10 K | | 5% 1/4W | 81349 | RC07GF103J |
| R15 | 000181 | RES | CARBON | 180 OHM | | 5% 1/4W | 81349 | RC07GF181J |
| R16 | 000200 | RES | CARBON | 20 OHM | | 5% 1/4W | 81349 | RC07GF200J |
| R17 | 000302 | RES | CARBON | 3 K | | 5% 1/4W | 81349 | RC07GF302J |

401622, Assy., PCB, FAST DIGITIZER *continued*

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-------------------------------------|--------|-------------|----------|-------|-------------|
| R18 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R19 | 000202 | RES | CARBON | 2 K | 5% 1/4W | 81349 | RC07GF202J |
| R20 | 040210 | POT | CERMET | 100 K | 20% 1W | 11237 | 360S104B |
| R21 | 040210 | POT | CERMET | 100 K | 20% 1W | 11237 | 360S104B |
| R22 | 010631 | RES | METAL | 10.2 K | 1% 1/10W | 81349 | RN55C1022F |
| T1 | 300087 | TRANSFORMER PULSE | | | | 21793 | 300087 |
| U1 | 230389 | INTEGRATED CIRCUIT | | ADC-80AG-12 | | 13919 | ADC-80AG-12 |
| U2 | 230237 | INTEGRATED CIRCUIT | | SN74LS123N | | 01295 | SN74LS123N |
| U3 | 250006 | HIGH SPEED OPTICAL ISOLATOR | | HP5082-4351 | | 50434 | HP5082-4351 |
| U4 | 230330 | INTEGRATED CIRCUIT | | 74LS367 | | 01295 | 74LS367 |
| U5 | 230330 | INTEGRATED CIRCUIT | | 74LS367 | | 01295 | 74LS367 |
| U6 | 230330 | INTEGRATED CIRCUIT | | 74LS367 | | 01295 | 74LS367 |
| U7 | 230237 | INTEGRATED CIRCUIT | | SN74LS123N | | 01295 | SN74LS123N |
| U8 | 230193 | INTEGRATED CIRCUIT | | SN74LS00N | | 01295 | SN74LS00N |
| U9 | 230192 | INTEGRATED CIRCUIT 14 DIP, INVERTER | | | | 01295 | SN74LS05N |
| U10 | 250006 | HIGH SPEED OPTICAL ISOLATOR | | HP5082-4351 | | 50434 | HP5082-4351 |
| U11 | 230234 | INTEGRATED CIRCUIT | | SN74LS04N | | 01295 | SN74LS04N |
| U12 | 230510 | INTEGRATED CIRCUIT | | 74LS164 | | | 74LS164 |
| U13 | 230234 | INTEGRATED CIRCUIT | | SN74LS04N | | 01295 | SN74LS04N |
| U14 | 230510 | INTEGRATED CIRCUIT | | 74LS164 | | | 74LS164 |
| U15 | 230193 | INTEGRATED CIRCUIT | | SN74LS00N | | 01295 | SN74LS00N |

404022 – Assy., CABLE, FAST DIGITIZER

| REF DES | RACAL- DANA P/N | DESCRIPTION | FSC | MANU P/N |
|------------|-----------------------|--------------|-------|-------------|
| J208 | 600167 | CONN 25 S | 71785 | DB-25S |

401606 – Assy., PCB, RATIO SWITCHING

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|---------------|----------|--------|----------|-------|----------------|
| C1 | 110140 | CAP | TANTA | 47 MFD | 6 V | 20% | 05397 | T368B476M006AS |
| C2 | 120308 | CAP | POLY | .047 MFD | 250 V | 10% | 73445 | C280MAE/A47K |
| CR1 | 211083 | DIODE | SILICO | | 1N916B | | 81349 | 1N916B |
| CR2 | 220015 | DIODE | SILICO, ZENER | | 1N967B | | 81349 | 1N967B |
| CR3 | 220015 | DIODE | SILICO, ZENER | | 1N967B | | 81349 | 1N967B |
| CR4 | 220015 | DIODE | SILICO, ZENER | | 1N967B | | 81349 | 1N967B |
| CR5 | 220015 | DIODE | SILICO, ZENER | | 1N967B | | 81349 | 1N967B |
| K1 | 310112 | RELAY | | | 28 V | | 26806 | AZ421-467-204 |
| Q1 | 200179 | TRANS | FET | | KE4391 | | 27014 | KE4391 |
| Q2 | 200252 | TRANS | J-FET | | J174 | | 27014 | J174 |
| Q3 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| Q4 | 200200 | TRANS | | NPN | 200200 | | 21793 | 200200 |
| R1 | 020715 | RES | WW | 1.111 K | | .1% .05W | 22045 | J90 |
| R2 | 000104 | RES | CARBON | 100 K | | 5% 1/4W | 81349 | RC07GF104J |
| R3 | 000104 | RES | CARBON | 100 K | | 5% 1/4W | 81349 | RC07GF104J |
| R4 | 000153 | RES | CARBON | 15 K | | 5% 1/4W | 81349 | RC07GF153J |
| R5 | 000105 | RES | CARBON | 1 M | | 5% 1/4W | 81349 | RC07GF105J |
| R6 | 000336 | RES | CARBON | 33 M | | 5% 1/4W | 81349 | RC07GF336J |
| R7 | 030015 | RES | WW | 100 K | | 1% 10W | 21551 | M100 |
| R8 | 030015 | RES | WW | 100 K | | 1% 10W | 21551 | M100 |

401620 - Assy., PCB, SCALING AMPLIFIER

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|-----------|------------|-----------|------|-------|------------------|
| B1 | 920563 | BEADS | SHIELDING | | | | 02114 | 56-59065/4B |
| B2 | 920563 | BEADS | SHIELDING | | | | 02114 | 56-59065/4B |
| C1 | 110141 | CAP | TANTA | 22 MFD | 15 V | 20% | 05397 | T368B226M015AS |
| C2 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C3 | 100100 | CAP | CERAM | FSV | | | 21793 | 100100 |
| C4 | 100100 | CAP | CERAM | FSV | | | 21793 | 100100 |
| C5 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C6 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C7 | 110140 | CAP | TANTA | 47 MFD | 6 V | 20% | 05397 | T368B476M006AS |
| C8 | 120274 | CAP | POLY | 87 PFD | 500/630 V | 2.5% | 08257 | KSO Series |
| C9 | 130115 | CAP | MICA | 346 PFD | 500 V | 2% | 72136 | DM15F3460G0 |
| C10 | 110162 | CAP | TANTA | .33 MFD | 35 V | 5% | 05397 | T368A334J035AS |
| C11 | 110162 | CAP | TANTA | .33 MFD | 35 V | 5% | 05397 | T368A334J035AS |
| C12 | 120275 | CAP | POLY | 1000 PFD | 500/630 V | 2.5% | 08257 | KSO Series |
| C13 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C14 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C15 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C16 | 100100 | CAP | CERAM | FSV | | | 21793 | 100100 |
| C17 | 120280 | CAP | MYLAR | .22 MFD | 1000 V | 10% | 27556 | ZA2J224K |
| C18 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C19 | 100097 | CAP | CERAM | 12 PFD | 1000 V | 5% | 56289 | C030B102E120J |
| C20 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C21 | 130116 | CAP | MICA | 3900 PFD | 500 V | 2% | 72136 | DM19F392G0 |
| C22 | 110129 | CAP | TANTA | .1 MFD | 35 V | 20% | 05397 | T368A104M035AS |
| C23 | 110129 | CAP | TANTA | .1 MFD | 35 V | 20% | 05397 | T368A104M035AS |
| C24 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C25 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C26 | 100100 | CAP | CERAM | FSV | | | 21793 | 100100 |
| C27 | 130124 | CAP | TRIMMER | 1.2-10 PFD | 250 V | | 52763 | R-TRIKO-122-09SD |
| C28 | 130123 | CAP | TRIMMER | 1-3 PFD | 250 V | | 52763 | R-TRIKO-122-09SD |
| C29 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C30 | 100061 | CAP | CERAM | 39 PFD | 1000 V | 5% | 56289 | C030B102G390J |
| C31 | 100050 | CAP | CERAM | 2.2 PFD | 1000 V | 5% | 56289 | C030B102S2R2D |
| C32 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C33 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C34 | 101174 | CAP | CERAM | .001 MFD | 500 V | 10% | 04222 | SCD-DI-2X5F-1000 |
| C35 | 100077 | CAP | GLASS | 7.5 PFD | 500 V | 5% | 95275 | VY10CA7R5JA |
| C36 | 130125 | CAP | PORCE | .8-10 PFD | 250 V | | 91293 | JMC2951 |
| C37 | 100075 | CAP | CERAM | 10 PFD | 1000 V | 5% | 56289 | C030B102E100J |
| C38 | 130164 | CAP | PORCE | 5.6 PFD | 500 V | 5% | 95275 | VY10CA5R6J |

401620 - Assy., PCB, SCALING AMPLIFIER continued

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|---------------|-------------------|---------|---------|-------|------------------|
| C39 | 100085 | CAP | CERAM | 6.8 PFD | 1000 V | 5% | 56289 | C030B102E6R8D |
| C40 | 130125 | CAP | PROCE | .8-10 PFD | 250 V | | 91293 | JMC2951 |
| C41 | 110126 | CAP | TANTA | 6.8 MFD | 35 V | 20% | 05397 | T368B685M035AS |
| C42 | 130127 | CAP | TRIMMER | 10-40 PFD | | | 52763 | 10S-TRIKO-24N750 |
| C43 | 100081 | CAP | CERAM | 4.7 PFD | 1000 V | 5% | 56289 | C030B102E4R7D |
| C44 | 110140 | CAP | TANTA | 47 MFD | 6 V | 20% | 05397 | T368B476M006AS |
| C45 | 110140 | CAP | TANTA | 47 MFD | 6 V | 20% | 05397 | T368B476M006AS |
| C46 | 110140 | CAP | TANTA | 47 MFD | 6 V | 20% | 05397 | T368B476M006AS |
| C47 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C48 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| C49 | 100017 | CAP | CERAM | .01 MFD | 100 V | 20% | 56289 | C023B101F103M |
| CR1 | 211083 | TRANS | SILICO | | 1N916B | | 81349 | 1N916B |
| CR2 | 220004 | DIODE | SILICO, ZENER | | 1N961B | | 81349 | 1N961B |
| CR3 | 210017 | DIODE | MATCHED PAIR | | W/CR4 | | 21793 | 210017 |
| CR4 | 210017 | DIODE | MATCHED PAIR | | W/CR3 | | 21793 | 210017 |
| CR5 | 220086 | DIODE | ZENER | 1N748A | 3.9 V | 5% | 04713 | 1N748A |
| CR6 | 220004 | DIODE | SILICO, ZENER | | 1N961B | | 81349 | 1N961B |
| CR7 | 220038 | DIODE | ZENER | 1N959B | 8.2 V | 5% | 81349 | 1N959B |
| CR8 | 210017 | DIODE | MATCHED PAIR | | W/CR9 | | 21793 | 210017 |
| CR9 | 210017 | DIODE | MATCHED PAIR | | W/CR8 | | 21793 | 210017 |
| CR10 | 200197 | TRANS | SILICO | NPN | MPS-H10 | | 04713 | MPS-H10 |
| CR11 | 200197 | TRANS | SILICO | NPN | MPS-H10 | | 04713 | MPS-H10 |
| K1 | 310078 | RELAY | REED | | 28 V | | 15636 | R2690-3 |
| K2 | 310078 | RELAY | REED | | 28 V | | 15636 | R2690-3 |
| K3 | 310078 | RELAY | REED | | 28 V | | 15636 | R2690-3 |
| L1 | 310068 | CHOKE | RF | 1 μ H | | 10% | 99800 | 1537-12 |
| Q1 | 200197 | TRANS | SILICO | NPN | MPS-H10 | | 04713 | MPS-H10 |
| Q2 | 200178 | TRANS | | PNP | 2N5910 | | 81349 | 2N5910 |
| Q3 | 200197 | TRANS | SILICO | NPN | MPS-H10 | | 04713 | MPS-H10 |
| Q4 | 200197 | TRANS | SILICO | NPN | MPS-H10 | | 04713 | MPS-H10 |
| Q5 | 200178 | TRANS | | PNP | 2N5910 | | 81349 | 2N5910 |
| Q6 | 200197 | TRANS | SILICO | NPN | MPS-H10 | | 04713 | MPS-H10 |
| Q7 | 200197 | TRANS | SILICO | NPN | MPS-H10 | | 04713 | MPS-H10 |
| Q8 | 200197 | TRANS | SILICO | NPN | MPS-H10 | | 04713 | MPS-H10 |
| Q9 | 200161 | TRANS | DUAL | FET | 2N5454 | | 27014 | 2N5454 |
| Q10 | 200197 | TRANS | SILICO | NPN | MPS-H10 | | 04713 | MPS-H10 |
| R1 | 000473 | RES | CARBON | 47 K | | 5% 1/4W | 81349 | RC07GF473J |
| R2 | 010721 | RES | METAL | DIAC, MATCHED SET | | | 21793 | 010721 |
| R3 | 000682 | RES | CARBON | 6.8 K | | 5% 1/4W | 81349 | RC07GF682J |

401620 - Assy., PCB, SCALING AMPLIFIER continued

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|--------|-------------------|------------|-------|-------------|
| R4 | 000472 | RES | CARBON | 4.7 K | 5% 1/4W | 81349 | RC07GF472J |
| R5 | 000680 | RES | CARBON | 68 OHM | 5% 1/4W | 81349 | RC07GF680J |
| R6 | 000621 | RES | CARBON | 620 OHM | 5% 1/4W | 81349 | RC07GF621J |
| R7 | 000223 | RES | CARBON | 22 K | 5% 1/4W | 81349 | RC07GF223J |
| R8 | 000152 | RES | CARBON | 1.5 K | 5% 1/4W | 81349 | RC07GF152J |
| R9 | 010798 | RES | METAL | 82.5 OHM | 1% 1/10W | 81349 | RN55C82R5F |
| R10 | 010721 | RES | METAL | DIAC, MATCHED SET | | 21793 | 010721 |
| R11 | 000301 | RES | CARBON | 300 OHM | 5% 1/4W | 81349 | RC07GF301J |
| R12 | 000123 | RES | CARBON | 12 K | 5% 1/4W | 81349 | RC07GF123J |
| R13 | 010583 | RES | METAL | 182 OHM | 1% 1/10W | 81349 | RN55C1820F |
| R14 | 010583 | RES | METAL | 182 OHM | 1% 1/10W | 81349 | RN55C1820F |
| R15 | 040258 | POT | CERMET | 100 OHM | 20% 1/2W | 73138 | 72XW100 |
| R16 | 000680 | RES | CARBON | 68 OHM | 5% 1/4W | 81349 | RC07GF680J |
| R17 | 010536 | RES | METAL | 100 K | 1% 1/10W | 81349 | RN55C1003F |
| R18 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R19 | 000160 | RES | CARBON | 16 OHM | 5% 1/4W | 81349 | RC07GF160J |
| R20 | 010720 | RES | METAL | 9.09 K | .25% 1/10W | 81349 | RN55C9091C |
| R21 | 010813 | RES | METAL | 7.87 K | .1% 1/10W | 81349 | RN55C7871F |
| R22 | 010827 | RES | METAL | 8.25 K | 1% 1/10W | 81349 | RN55C8251F |
| R23 | 000202 | RES | CARBON | 2 K | 5% 1/4W | 81349 | RC07GF202J |
| R24 | 000102 | RES | CARBON | 1 K | 5% 1/4W | 81349 | RC07GF102J |
| R25 | 000510 | RES | CARBON | 51 OHM | 5% 1/4W | 81349 | RC07GF510J |
| R26 | 010536 | RES | METAL | 100 K | 1% 1/10W | 81349 | RN55C1003F |
| R27 | 000510 | RES | CARBON | 51 OHM | 5% 1/4W | 81349 | RC07GF510J |
| R28 | 000241 | RES | CARBON | 240 OHM | 5% 1/4W | 81349 | RC07GF241J |
| R29 | 040228 | POT | CERMET | 500 OHM | 10% | 73138 | 89PR500 |
| R30 | 040225 | POT | CERMET | 50 OHM | 20% | 73138 | 89PR50 |
| R31 | 040229 | POT | CERMET | 1 K | 10% 3/4W | 73138 | 89PR1K |
| R32 | 010721 | RES | METAL | DIAC, MATCHED SET | | 21793 | 010721 |
| R33 | 010721 | RES | METAL | DIAC, MATCHED SET | | 21793 | 010721 |
| R34 | 010721 | RES | METAL | DIAC, MATCHED SET | | 21793 | 010721 |
| R35 | 000163 | RES | CC | 16 K | 5% 1/4W | 81349 | RC07GF163J |
| R36 | 040239 | POT | CERMET | 1 M | 20% | 73138 | 89PR1M |
| R37 | 000241 | RES | CARBON | 240 OHM | 5% 1/4W | 81349 | RC07GF241J |
| R38 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R39 | 041179 | POT | WW | 5 K | | 02111 | 50-1-1-502 |
| R40 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| U1 | 230322 | IC | | MC78L18ACP | | 04713 | MC78L18ACP |
| U2 | 230323 | IC | | MC79L18ACP | | 04713 | MC79L18ACP |

401641 - Assy., SAMPLE AND HOLD DIGITIZER

| REF DES | RACAL- DANA P/N | DESCRIPTION | | | | FSC | MANU P/N |
|------------|-----------------------|-------------|------------|---------|----------|-------|-------------|
| Q1 | 200178 | TRANS | PNP | | | 81349 | 2N5910 |
| Q2 | 200097 | TRANS | NPN | | | 81349 | 2N3643 |
| Q3 | 200200 | TRANS | NPN | | | 21793 | 200200 |
| Q4 | 200097 | TRANS | NPN | | | 81349 | 2N3643 |
| Q5 | 200200 | TRANS | NPN | | | 21793 | 200200 |
| Q6 | 200262 | TRANS | N-CHANNEL | | J-FET | 27014 | PN4392 |
| Q7 | 200262 | TRANS | N-CHANNEL | | J-FET | 27014 | PN4392 |
| R1 | 000562 | RES | CARBON | 5.6 K | 5% 1/4W | 81349 | RC07GF562J |
| R2 | 000102 | RES | CARBON | 1 K | 5% 1/4W | 81349 | RC07GF102J |
| R3 | 000202 | RES | CARBON | 2 K | 5% 1/4W | 81349 | RC07GF202J |
| R4 | 000180 | RES | CARBON | 18 OHM | 5% 1/4W | 81349 | RC07GF180J |
| R5 | 000180 | RES | CARBON | 18 OHM | 5% 1/4W | 81349 | RC07GF180J |
| R6 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R7 | 000472 | RES | CARBON | 4.7 K | 5% 1/4W | 81349 | RC07GF472J |
| R8 | 000302 | RES | CARBON | 3 K | 5% 1/4W | 81349 | RC07GF302J |
| R9 | 000271 | RES | CARBON | 270 OHM | 5% 1/4W | 81349 | RC07GF271J |
| R10 | 000471 | RES | CARBON | 470 OHM | 5% 1/4W | 81349 | RC07GF471J |
| R11 | 000361 | RES | CARBON | 360 OHM | 5% 1/4W | 81349 | RC07GF361J |
| R12 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R13 | 000512 | RES | CARBON | 5.1 K | 5% 1/4W | 81349 | RC07GF512J |
| R15 | 000472 | RES | CARBON | 4.7 K | 5% 1/4W | 81349 | RC07GF472J |
| R16 | 000512 | RES | CARBON | 5.1 K | 5% 1/4W | 81349 | RC07GF512J |
| R17 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R18 | 000202 | RES | CARBON | 2 K | 5% 1/4W | 81349 | RC07GF202J |
| R19 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R20 | 000203 | RES | CARBON | 20 K | 5% 1/4W | 81349 | RC07GF203J |
| R21 | 000102 | RES | CARBON | 1 K | 5% 1/4W | 81349 | RC07GF102J |
| R22 | 010790 | RES | METAL | 36.5 K | 1% 1/10W | 81349 | RN55E3652F |
| R23 | 010542 | RES | METAL | 100 K | 1% 1/10W | 81349 | RN55E1003F |
| R24 | 040229 | POT | CERMET | 1 K | 10% 3/4W | 73138 | 89PR1K |
| R25 | 012066 | RES | METAL FILM | 825 K | 1% 1/8W | 81349 | RN55E8253F |
| R26 | 040179 | POT | CERMET | 10 K | 20% 3/4W | 11237 | 360 Series |
| R27 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R28 | 000361 | RES | CARBON | 360 OHM | 5% 1/4W | 81349 | RC07GF361J |
| R29 | 000511 | RES | CARBON | 510 OHM | 5% 1/4W | 81349 | RC07GF511J |
| R30 | 000181 | RES | CARBON | 180 OHM | 5% 1/4W | 81349 | RC07GF181J |
| R31 | 000302 | RES | CARBON | 3 K | 5% 1/4W | 81349 | RC07GF302J |
| R32 | 000103 | RES | CARBON | 10 K | 5% 1/4W | 81349 | RC07GF103J |
| R33 | 040235 | POT | CERMET | 100 K | 10% 3/4W | 73138 | 89PR100K |
| R34 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R35 | 000101 | RES | CARBON | 100 OHM | 5% 1/4W | 81349 | RC07GF101J |
| R36 | 001737 | RES | CARBON | FSV | 5% 1/4W | 21793 | 001737 |

401641 – Assy., SAMPLE AND HOLD DIGITIZER

| REF DES | RACAL- DANA P/N | DESCRIPTION | FSC | MANU P/N |
|------------|-----------------------|-------------|-------|-------------|
| U1 | 230389 | IC | 13919 | ADC-80AG-12 |
| U2 | 230193 | IC | 01295 | SN74LS00N |
| U3 | 230330 | IC | 01295 | 74LS367 |
| U4 | 230330 | IC | 01295 | 74LS367 |
| U5 | 230330 | IC | 01295 | 74LS367 |
| U6 | 230237 | IC | 01295 | SN74LS123N |
| U7 | 230193 | IC | 01295 | SN74LS00N |
| U8 | 230192 | IC | 01295 | SN74LS05N |
| U9 | 230237 | IC | 01295 | SN74LS123N |
| U10 | 230234 | IC | 01295 | SN74LS04N |
| U11 | 230510 | IC | | 74LS164 |
| U12 | 230234 | IC | 01295 | SN74LS04N |
| U13 | 230510 | IC | | 74LS164 |
| U14 | 230193 | IC | 01295 | SN74LS00N |

