

# 1260 VXI SWITCHING CARD

## 1260-39 MULTIPLE PURPOSE SWITCH MODULE

PUBLICATION NO. 980673-043

### RACAL INSTRUMENTS

**Racal Instruments, Inc.**

4 Goodyear St., Irvine, CA 92618-2002  
Tel: (800) RACAL-ATE, (800) 722-2528, (949) 859-8999; FAX: (949) 859-7139

**Racal Instruments, Ltd.**

480 Bath Road, Slough, Berkshire, SL1 6BE, United Kingdom  
Tel: +44 (0) 1628 604455; FAX: +44 (0) 1628 662017

**Racal Systems Electronique S.A.**

18 Avenue Dutartre, 78150 LeChesnay, France  
Tel: +33 (1) 3923 2222; FAX: +33 (1) 3923 2225

**Racal Systems Elettronica s.r.l.**

Strada 2-Palazzo C4, 20090 Milanofiori Assago, Milan, Italy  
Tel: +39 (0)2 5750 1796; FAX +39 (0)2 5750 1828

**Racal Elektronik System GmbH.**

Technologiepark Bergisch Gladbach, Friedrich-Ebert-Strasse, D-51429 Bergisch Gladbach, Germany  
Tel.: +49 2204 8442 00; FAX: +49 2204 8442 19

**Racal Australia Pty. Ltd.**

3 Powells Road, Brookvale, NSW 2100, Australia  
Tel: +612 9936 7000, FAX: +612 9936 7036

**Racal Electronics Pte. Ltd.**

26 Ayer Rajah Crescent, 04-06/07 Ayer Rajah Industrial Estate, Singapore 0513.  
Tel: +65 7792200, FAX: +65 7785400

**Racal Instruments, Ltd.**

Unit 5, 25F., Mega Trade Center, No 1, Mei Wan Road, Tsuen Wan, Hong Kong, PRC  
Tel: +852 2405 5500, FAX: +852 2416 4335

<http://www.racalstruments.com>



---

**PUBLICATION DATE: March 20, 2001**

Copyright 2001 by Racal Instruments, Inc. Printed in the United States of America. All rights reserved.  
This book or parts thereof may not be reproduced in any form without written permission of the publisher.

---

---

## WARRANTY STATEMENT

---

---

All Racal Instruments, Inc. products are designed and manufactured to exacting standards and in full conformance to Racal's ISO 9001 procedures.

For the specific terms of your standard warranty, or optional extended warranty or service agreement, contact your Racal customer service advisor. Please have the following information available to facilitate service.

1. Product serial number
2. Product model number
3. Your company and contact information

You may contact your customer service advisor by:

E-Mail:	<a href="mailto:Helpdesk@racalstruments.com">Helpdesk@racalstruments.com</a>	
Telephone:	+1 800 722 3262	(USA)
	+44(0) 8706 080134	(UK)
	+852 2405 5500	(Hong Kong)
Fax:	+1 949 859 7309	(USA)
	+44(0) 1628 662017	(UK)
	+852 2416 4335	(Hong Kong)

---

---

## RETURN of PRODUCT

---

---

Authorization is required from Racal Instruments before you send us your product for service or calibration. Call your nearest Racal Instruments support facility. A list is located on the last page of this manual. If you are unsure where to call, contact Racal Instruments, Inc. Customer Support Department in Irvine, California, USA at 1-800-722-3262 or 1-949-859-8999 or via fax at 1-949-859-7139. We can be reached at:

[helpdesk@racalstruments.com](mailto:helpdesk@racalstruments.com).

---

---

## PROPRIETARY NOTICE

---

---

This document and the technical data herein disclosed, are proprietary to Racal Instruments, and shall not, without express written permission of Racal Instruments, be used, in whole or in part to solicit quotations from a competitive source or used for manufacture by anyone other than Racal Instruments. The information herein has been developed at private expense, and may only be used for operation and maintenance reference purposes or for purposes of engineering evaluation and incorporation into technical specifications and other documents which specify procurement of products from Racal Instruments.

---

# FOR YOUR SAFETY

---

Before undertaking any troubleshooting, maintenance or exploratory procedure, read carefully the **WARNINGS** and **CAUTION** notices.

This equipment contains voltage hazardous to human life and safety, and is capable of inflicting personal injury.

If this instrument is to be powered from the AC line (mains) through an autotransformer, ensure the common connector is connected to the neutral (earth pole) of the power supply.

Before operating the unit, ensure the conductor (green wire) is connected to the ground (earth) conductor of the power outlet. Do not use a two-conductor extension cord or a three-prong/two-prong adapter. This will defeat the protective feature of the third conductor in the power cord.

Maintenance and calibration procedures sometimes call for operation of the unit with power applied and protective covers removed. Read the procedures and heed warnings to avoid “live” circuit points.

Before operating this instrument:

1. Ensure the instrument is configured to operate on the voltage at the power source. See Installation Section.
2. Ensure the proper fuse is in place for the power source to operate.
3. Ensure all other devices connected to or in proximity to this instrument are properly grounded or connected to the protective third-wire earth ground.

If the instrument:

- fails to operate satisfactorily
- shows visible damage
- has been stored under unfavorable conditions
- has sustained stress

Do not operate until performance is checked by qualified personnel.

This page was left intentionally blank.

**NOTE FOR SYSTEMS WITH 1260-OPT 01T**

The “Module-Specific Syntax” section of this manual shows the command syntax for the 1260-01S Smart Card. If you are using the newer 1260-01T Smart Card, the commands will NOT work as shown.

Consult the 1260-01T Manual for a description of the commands that may be used with the 1260-01T Smart Card.

The channel numbers described in this manual are valid for the 1260-01T. The channel numbers continue to be used for the 1260-01T.

The syntax of the commands that use channel numbers has changed for those cards controlled by the 1260-01T.

The new syntax used to close a channel is:

CLOSE (@ <module address> ( <channel> ) )

For example, for a relay module whose <module address> is set to 7, closing <channel> 0 is performed with the command:

CLOSE (@7 (0))

Using the older 1260-01S, the command would be (as shown in this manual):

CLOSE 7.0

Many other command syntax differences exist. Please consult chapter 2 of the 1260-01T manual for a description of the commands that are available for the 1260-01T.

## Control Information for the 1260-39

The following information describes the control-register-to-relay-channel mapping for a 1260-39 Relay Module. This information may be used to control a 1260-39 when using a 1260-01T in the register-based mode of operation.

Each relay on this module is controlled by setting or clearing a single bit within a Control Register. Control Registers on the module operate 8 channels simultaneously. There are eight control bits per Control Register. Setting the bit to a 1 closes the relay; setting the bit to a 0 opens the relay.

The table below shows the mapping from logical channels to control bits. The logical channels are used when operating the relay module in message-based mode. The control bits within the Control Registers are used to operate the module in register-based mode.

Each Control Register is located 2 addresses from the previous Control Register. That is, each Control Register is located at an odd address. This is shown in Table 2-2 of the 1260-01T manual. Control Register 0 is located at the "Base A24 Address" for the module. Consult the "Register-Based Operation" Section of Chapter 2 of the 1260-01T manual for a description of calculating control register addresses.

Channel	Control Register	Control Bit
0	9	0
1	9	1
2	9	2
3	9	3
4	9	4
1000	0	0
1001	0	1
1002	0	2
1003	0	3
1004	0	4
1005	0	5
1006	0	6
1007	0	7
1008	1	0
1009	1	1
1010	1	2
1011	1	3
1012	1	4
1013	1	5
1014	1	6
1015	1	7
1016	2	0
1017	2	1
1018	2	2
1019	2	3
1020	2	4
1021	2	5
1022	2	6
1023	2	7
1024	3	0
1025	3	1
1026	3	2
1027	3	3
1028	3	4
1029	3	5
1030	3	6
1031	3	7

---

Channel	Control Register	Control Bit
1032	4	0
1033	4	1
1034	4	2
1035	4	3
1036	4	4
1037	4	5
1038	4	6
1039	4	7
1040	5	0
1041	5	1
1042	5	2
1043	5	3
1044	5	4
1045	5	5
1046	5	6
1047	5	7
2000	6	0
2001	6	1
2100	6	2
2101	6	3
2200	6	4
2201	6	5
2300	6	6
2301	6	7
2400	7	0
2401	7	1
2500	7	2
2501	7	3
3000	7	4
3001	7	5
3002	7	6
3003	7	7
3100	8	0
3101	8	1
3102	8	2
3103	8	3
3200	8	4
3201	8	5
3202	8	6
3203	8	7
4000	10	0
4001	10	1
4002	10	2
4003	10	3
4004	10	4
4005	10	5
4006	10	6
4007	10	7
4010	11	0
4011	11	1
4012	11	2
4013	11	3
4014	11	4
4015	11	5
4016	11	6
4017	11	7
4100	12	0
4101	12	1
4102	12	2
4103	12	3
4104	12	4
4105	12	5
4106	12	6
4107	12	7

Channel	Control Register	Control Bit
4110	13	0
4111	13	1
4112	13	2
4113	13	3
4114	13	4
4115	13	5
4116	13	6
4117	13	7
4200	14	0
4201	14	1
4202	14	2
4203	14	3
4204	14	4
4205	14	5
4206	14	6
4207	14	7
4210	15	0
4211	15	1
4212	15	2
4213	15	3
4214	15	4
4215	15	5
4216	15	6
4217	15	7
4300	16	0
4301	16	1
4302	16	2
4303	16	3
4304	16	4
4305	16	5
4306	16	6
4307	16	7
4310	17	0
4311	17	1
4312	17	2
4313	17	3
4314	17	4
4315	17	5
4316	17	6
4317	17	7
4400	18	0
4401	18	1
4402	18	2
4403	18	3
4404	18	4
4405	18	5
4406	18	6
4407	18	7
4410	19	0
4411	19	1
4412	19	2
4413	19	3
4414	19	4
4415	19	5
4416	19	6
4417	19	7



## Table of Contents

### Chapter 1

MODULE SPECIFICATION .....	1-1
Introduction .....	1-1
1260-39 Module Specification .....	1-2
Ordering Information .....	1-3
Safety .....	1-4
Product Support .....	1-4

### Chapter 2

INSTALLATION INSTRUCTIONS.....	2-1
Unpacking and Inspection .....	2-1
Reshipment Instructions .....	2-1
Option 01 Installation.....	2-1
Module Installation.....	2-2

### Chapter 3

MODULE SPECIFIC SYNTAX.....	3-1
Module Configuration .....	3-1
Front Panel Connectors .....	3-1
Mating Connectors.....	3-2
1260-39 Module Specific Syntax .....	3-2
1260-39 Relay Descriptors.....	3-3
CLOSE Command .....	3-5
OPEN Command .....	3-6
EXCL Command.....	3-7
PDATAOUT and PSETUP Module Identification.....	3-8
PDATAOUT Command.....	3-8
PSETUP Command .....	3-10

### Chapter 4

DRAWINGS.....	4-1
---------------	-----

Chapter 5  
PARTS LIST ..... 5-1

Chapter 6  
PRODUCT SUPPORT..... 6-1  
    Product Support ..... 6-1  
    Reshipment Instructions..... 6-1  
    Support Offices ..... 6-2

## List of Figures

Figure 1-1, 1260-39 .....	1-1
Figure 3-1, 1260-39 Module Configuration Block Diagram.....	3-11
Figure 3-2, 1260-39 Pin Configuration, Front View .....	3-12
Table 3-1. Channel to Connector Pin Mapping for DPST Relays .....	3-13
Table 3-2. Channel to Connector Pin-Out Mapping for SPST Relays .....	3-13
Table 3-2. Channel to Connector Pin-Out Mapping for SPST Relays (Continued) .....	3-14
Table 3-2. Channel to Connector Pin-Out Mapping for SPST Relays (Continued) .....	3-14
Table 3-3. Channel to Connector Pin-Out Mapping for 1x2 MUX Relays .....	3-15
Table 3-4. Channel to Connector Pin-Out Mapping for 1x4 MUX Relays .....	3-15
Table 3-5. Channel to Connector Pin-Out Mapping for Matrix Relays .....	3-16
Table 3-5. Channel to Connector Pin-Out Mapping for Matrix Relays (Continued).....	3-17
Table 3-5. Channel to Connector Pin-Out Mapping for Matrix Relays (Continued).....	3-18
Table 3-6, Grounds.....	3-18

This page was left intentionally blank.

# Chapter 1

## MODULE SPECIFICATION

---

### Introduction

The 1260-39 high-density multi-purpose switch is a multi-channel single wire device capable of being configured in many ways. It contains 48 SPST switches, 6 SPDT switches, 3-1 x 4 muxes, 5-2 x 8 matrices and 5 DPST power relays. The unit can be configured as any combination of switches as well. For example, it can have numerous single pole configurations made up from the SPST switches.

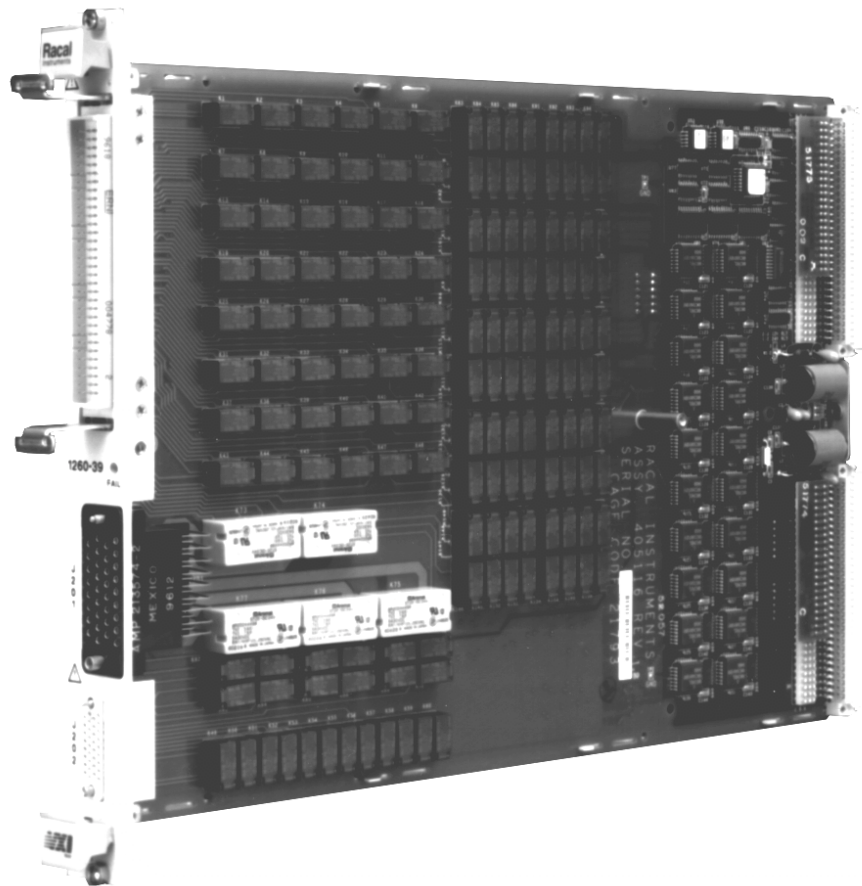


Figure 1-1, 1260-39

# 1260-39 Module Specification

	Signal Relays	Power Relays
Maximum Switch Power	125VA, 60W	2000VA, 150W
Maximum Switch Voltage	125VAC, 110VDC	220VDC, 220VAC
Maximum Switch Current	1A AC, 1A DC	10A AC, 10A DC
Bandwidth (50Ω)	> 30MHz	5KHz
Insertion Loss (50Ω)	<3dB @ 30 MHz <2dB to 10 MHz 2db @ 5KHz <1dB to 1MHz	
Crosstalk (50Ω)	<-70dB to 100KHz <-60dB to 1 MHz -5db @ 5KHz <-50dB at 10MHz	
Isolation (50Ω)	> 65dB to 100KHz > 55dB to 1 MHz -95db @ 5KHz >45dB at 10 MHz	
Path Resistance	< 1.5Ω	< 1.0Ω
Thermal EMF	<20μV	
Impedance		
Input-Output	50Ω Nominal	
Input to Chassis	> 2000MΩ	
Output to Chassis	> 2000MΩ	
Capacitance		
Channel to Chassis	<5pF	
Temperature		
Operating	0°C to +55°C	
Non-Operating	-55°C to +75°C	
Relative Humidity	95+/-5% RH Non-Condensing <30°C 75+/-5 %RH > 30°C 45+/-5 %RH > 40°C	
Altitude		
Operating	15,000 ft	
Non-Operating	15,000 ft	
Vibration	0.0131" double amplitude, 5-55Hz	
Shock, functional	30g, 11 msec, ½ sine wave	

Bench Handling 4 inch drop

Cooling Requirement

Without Option 01 installed

Airflow 2.0 liters/sec  
Backpressure 0.05mm H<sub>2</sub>O

With Option 01 installed

Airflow 3.0 liters/sec  
Backpressure 0.2mm H<sub>2</sub>O

Power Requirement

Without Option 01 installed

+5V Static Current, I<sub>pm</sub> 0.4A  
+5V Dynamic Current, I<sub>dm</sub> 0.075A

With Option 01 installed

+5V Static Current, I<sub>pm</sub> 2.SA.  
+5V Dynamic Current, I<sub>dm</sub> 0.225A  
+24V Static Current, I<sub>pm</sub> 6mA per energized relay  
+24V Dynamic Current, I<sub>dm</sub> 0A

MTBF

>100,000 Hours, calculated (per MIL-HBK-217, ground benign, 30 deg. C)

Weight

Without Option 01 installed 3.21b (1.45kg)  
With Option 01 installed 3.5lb (1.60kg)

Minimum Option 01 Firmware Revision 29.1 (Rev. T)

## Ordering Information

Listed below are part numbers for both the 1260-39 Switch Module and available mating connector.

Item	Description	Part #
1260-39 Switch Module	1260-39 Single wire, 1 amp switch	407505
160-Pin Mating Connector	160-Pin Conn. Kit w/backshell and pins	407407
Cable Assy, 6ft, sleeved	160-Pin Cable Assy, 6ft, 24GA	407408
Cable Assy, 12ft, sleeved	160-Pin Cable Assy, 12ft, 24GA	407409
Additional Manual		980673-043

## **Safety**

Refer to the “**FOR YOUR SAFETY**” page preceding the Table of Contents. Follow all NOTES, CAUTIONS and WARNINGS to ensure personal safety and prevent damage to the instrument.

## **Product Support**

Racal Instruments has a complete Service and Parts Department. If you need technical assistance or should it be necessary to return your product for servicing, refer to the Repair and Calibration Request Form in the back of this manual.

When sending your instrument in for repair, complete the form in the back of this manual and enclose it with the instrument.



## Chapter 2

# INSTALLATION INSTRUCTIONS

---

### Unpacking and Inspection

1. Before unpacking the switching module, check the exterior of the shipping carton for any signs of damage. All irregularities should be noted on the shipping bill and reported.
2. Remove the instrument from its carton, preserving the factory packaging as much as possible.
3. Inspect the switching module for any defect or damage. Immediately notify the carrier if any damage is apparent.
4. Have a qualified person check the instrument for safety before use.

### Reshipment Instructions

1. Use the original packing material when returning the switching module to Racal Instruments for servicing. The original shipping carton and the instrument's plastic foam will provide the necessary support for safe reshipment.
2. If the original packing material is unavailable, wrap the switching module in an ESD Shielding bag and use foam to surround and protect the instrument.
3. Reship in either the original or a new shipping carton.

### Option 01 Installation

Installation of the Option 01 into the 1260-39 is described in the Installation section of the 1260 Series VXI Switching Cards Manual, under the Option 01 installation section.

## **Module Installation**

Installation of the 1260-39 Switching Module into a VXI mainframe, including the setting of switches SW1-1 through SW1-4, 5W2 and 5W3, is described in the Installation section of the 1260 Series VXI Switching Cards Manual. Configuration of switches SW1-5 must be configured in the OFF state, and SW1-6 must be configured in the ON state.

## MODULE SPECIFIC SYNTAX

---

### Module Configuration

The 1260-39 is a multiple configuration switch module consisting of:

- 5 Double-Pole Single-Throw (DPST) relays
- 48 Single-Pole Single-Throw (SPST) relays
- 6 1x2 1-wire Multiplexer (MUX) relays
- 3 1x4 1-wire MUX relays
- 5 2x8 1-wire Matrices

The 1260-39 is a multi-purpose switch consisting of several "blocks," each with different configurations. The first block consists of 48 SPST switches that may be software configured to operate as SPST's, 2PST's, 3PST's, etc., without the use of hardware jumpers. The second block consists of 6 - 1X2 muxes (SP2T's), that can also be software configured into various combinations. The third block consists of 3 - 1X4 muxes (SP4T's), also software configurable. The fourth block consists of 5 - 2X8 matrices, each having two inputs that can be directed to any of eight outputs. The last block has 5 DPST power relays capable of switching ten amperes per circuit. All switches are passive switches, that is they consist of electro-mechanical relays, and therefore inputs and outputs are interchangeable.

Reference should be made to Figure 3-1, 1260-39 Module Configuration Block Diagram.

---

### Front Panel Connectors

The 1260-39's front panel connectors are labeled J200, J201, and 3202. The connector labeled 3200 is 5 x 32 (160-pin) DIN 41 612 male. The pin numbering is shown in Figure 3-2.

The connector labeled 3201 is a 34 position connector. It is used for the high power (10 Ampere) switching and is a rack and panel type. The connector labeled J202 is a 34 pin rack and panel type. Signal ground pins are provided for terminating shields and to

allow the use of coaxial cable when using higher frequency signals (i.e. above 10 MHz). The mapping of channel numbers to connector pins and the available mating connector cable are given in Table 3-1.

---

## Mating Connectors

There are no mating connectors shipped with the 1260-39 module. Racal Instruments offers the following accessories for mating connectors (see ordering information for part numbers):

- 160-Pin Connector Kit with backshell and pins
- 160-Pin Cable Assy, 6ft, 24GA
- 160-Pin Cable Assy, 12ft, 24GA

The 160-Pin Connector kit consists of a connector housing, customized backshell and 170 crimp pins. The backshell design has been optimized for system integration. The connector kit has been designed for 22 to 26 gauge cable. The crimp pin will lock or 'click' into the connector housing only when installed correctly. The assembler should ensure that the crimp pin is locked by tugging on the cable after insertion.

Mating connectors may be purchased for 3201 and 3202 from the following manufacturers:

3201	Amplnd.	213300-1
	Winchester	TMRAC 34P JTDH
J202	Positronics	SGMC34MOE10OJO
	Winchester	XSRM34PNSS 1000

The hand crimp tool for loose crimp contacts is Emi Part Number 014 374. The disassembly tool is Erni Part Number 471 555.

## 1260-39 Module Specific Syntax

The 1260-39 card supports nearly all of the 1260 commands described in Section 3.4 of the 1260 Option 01 manual. The only commands which are NOT supported are the READ, WRITE, and INCL commands.

The following 1260 commands use "relay descriptors" to identify one or more relays:

OPEN  
CLOSE  
EXCL

## SLIST

Relay descriptors are always unique for each 1260 module. The following paragraph describes the relay descriptor syntax for the 1260-39 module.

---

### 1260-39 Relay Descriptors

A "relay descriptor" identifies a relay (or range of relays) to be operated. The "relay descriptor" is unique for each 1260 module type.

The "relay descriptor" for the 1260-39 has the form:

<module address>. <channel range>

Where:

<module address> is an integer between 1 and 12, inclusive.

---

#### **NOTE:**

**The <module address> used here is not the VXIbus defined Logical Address of the 1260 Series Master. It is unique to the 1260 Series and describes the switching module in relation to the Master. This address corresponds to the binary value of the switch setting of SW1 on the switching module PCB. Refer to the Installation Section of the 1260 Series VXI Switching Cards Manual for more information.**

---

<channel range> is a single relay, or a list of relays. A comma or a hyphen may be used to separate relays in a <channel range>. When a comma is used, only the specific relays are operated; when a hyphen is used, all relays between the relays are operated.

Each relay is identified by a single 4-digit channel number using the format:

<1 digit relay type> <1 digit selector> <2 digit relay identifier>

The valid channels are:

0000, 0001, 0002, 0003, 0004	5 DPST relays
1000 through 1047	48 SPST relays
2000, 2001	1st 1x2 MUX
2100,2101	2nd 1x2 MUX
2200, 2201	3rd 1x2 MUX
2300, 2301	4th 1 x2 MUX
2400, 2401	5th 1x2 MUX
2500, 2501	6th 1x2 MUX
3000, 3001, 3002, 3003	1st 1x4 MUX
3100, 3101, 3102, 3103	2nd 1x4 MUX
3200, 3201, 3202, 3203	3rd 1x4 MUX
4000 through 4007	1st 2x8 Matrix, first row
4010 through 4017	1st 2x8 Matrix, second row
4100 through 4107	2nd 2x8 Matrix, first row
4110 through 4117	2nd 2x8 Matrix, second row
4200 through 4207	3rd 2x8 Matrix, first row
4210 through 4217	3rd 2x8 Matrix, second row
4300 through 4307	4th 2x8 Matrix, first row
4310 through 4317	4th 2x8 Matrix, second row
4400 through 4407	5th 2x8 Matrix, first row
4410 through 4417	5th 2x8 Matrix, second row

The first digit of the 4-digit channel number determines which type of relay is being operated. If the first digit is a 0, then one of the DPST relays is being operated. If the first digit of the channel number is a 1, then one of the SPST relays is being operated, and so on.

The second digit of the 4-digit channel number selects one of the instances of the type of relay. This can be seen with the 1x2 MUX, 1x4 MUX, and matrix relays. For example, channel numbers 4000 through 4017 identify relays within the first matrix, while channel numbers 4100 through 4117 identify relays within the second matrix. Likewise, channel numbers 3000 through 3003 identify relays within the first 1x4 MUX, while channel numbers 3200 through 3203 identify relays within the third 1x4 MUX.

The last two digits of the channel number uniquely identify the relay to operate. In the case of the matrix relays, the 10's digit selects the row of the matrix, while the 1's digit selects the column.

---

**NOTE:**

**The leading digits may be omitted if 0. That is, for the 5 DPST relays, channels "0", "1", "2", "3", and "4" are accepted.**

---

The following examples, using the CLOSE command, show the various formats which are used for 1260-39 relay descriptors. Each of the samples below shows a module address of 7 for the 1260-39;

```
CLOSE 7.0           -- close a DPST relay
CLOSE 7.0, 4        -- close the first and last DPST relay
CLOSE 7.0-4         -- close all DPST relays
CLOSE 7.1000        -- close a SPST relay
CLOSE 7.1004,1016,1033  --close3SPSTrelays
CLOSE 7.1000-1016,1047 --closethefirst7,andlastSPST
                      relays
CLOSE 7.4312        -- In the 4th 2x8 matrix, close cross
                      -- point in second row, third column
                      -- (row 1, column 2).
```

When a channel is closed two front-panel pins are connected. (For the DPST relays, two pairs of pins are connected). Refer to **Tables 3-1** through 3-5 which show channel to front panel pin out mapping.

---

## CLOSE Command

The CLOSE command is used to close one or more channels.

**Example:**

```
CLOSE 7.0002
```

This CLOSE command will close channel 0002 of the module at switch card module address 7. This is one of the 5 DPST relays.

**Example:**

```
CL 7.4400-4407
```

This CLOSE command will close all 8 columns of the first row of the fifth 2x8 matrix.

**Example:**

```
CL 7.1011,2001,3003,4113
```

This CLOSE command will close channels 1011, 2001, 3003, and 4113 of the module at switch card module address 7. Channel 1011 is a SPST relay; channel 2001 is a 1~ MUX relay, channel 3003 is a 1x4 MUX relay, and channel 4113 is one of the 2x8 matrix relays.

Note that channels remain closed until one of the following occurs:

- an OPEN command is used to specifically open the relay
- a RESET command is executed, opening all relays
- a VXI Word Serial Clear command is received, opening all relays
- a VXI hard or soft reset is received
- a relay on the same exclude list (see EXCL Command, paragraph 3.2.5) is closed
- power to the VXI bus chassis is turned off.

---

## OPEN Command

The OPEN command is used to open a channel.

### Example:

```
OP 7.4014
```

This OPEN command will open channel 4014 of the module at switch card module address 7.

### Example:

```
OP 7.0003-1041
```

This OPEN command will open all of the channels between 0003 and 1041 of the module at switch card module address 7. Since channel numbers are taken in increasing order, this includes channels 0003, 0004, and 1000 through 1041.

### Example:

```
OP 7.4110-4117,4305-4312
```

This OPEN command will open all channels between 4110 and 4117, and all channels between 4305 and 4312. This indicates that all relays in the second column of the second 2x8 matrix will be opened. In addition, channels 4305 through 4307 plus



channels 4310 through 4312 will be opened. These are the last three columns of the first row, and the first three columns of the second row of the fourth 2x8 matrix.

---

## EXCL Command

The EXCL command is used to define an "exclude group". Two or more relays may be defined on a single exclude group. Multiple exclude groups may be defined.

Relays in an exclude group are considered mutually exclusive from each other. When a relay in an exclude group is closed, all other relays in the same exclude group are opened.

The EXCL command uses the syntax:

```
EXCL <exclude list> [E; <exclude list>]
```

Where:

**<exclude list>** is a list of two or more relay descriptors. The relays do NOT have to be on the same 1260 module, nor do they have to be the same type of module.

### Example:

Assume the 1260 Option 01 controls a 1260-40A card with module address 2, and a 1260-39 card with module address 7.

```
EXCL 2.0000-0123E;7.1000-1047E;2.0200-0323;7.0-5
```

This example defines three exclude groups. The first consists solely of 1260-40A relays, channels 0000 through 0123. The second consists solely of 1260-39 relays, channels 1000 through 1047. The third consists of a mix of 1260-40A relays and 1260-39 relays.

After an EXCL command is executed, the 1260 Option 01 will ensure that at most one relay in any exclude group is closed at one time. For example, suppose relay 7.1023 is presently closed. Closing relay 7.1000 will cause the 1260 Option 01 to first open relay 7.1023 before closing relay 7.1000. Similarly, if relay 7.0004 is presently closed, then closing relay 2.0319 will cause the 1260 Option 01 to first open relay 7.0004 before closing relay 2.0319.

---

## PDATAOUT and PSETUP Module Identification

The first line of the reply to the PDATAOUT and PSETUP commands for the 1260-39 shall be:

xxx. 1260-39 HIGH DENSITY MULTI-PURPOSE SWITCH MODULE

where:

XXX is the module address of the 1260-39 ("001" to "012"). All other reply lines for these commands shall follow the syntax used for all of the other 1260 series relay cards. Note that the lines of the reply for the PDATAOUT command will contain relay descriptors which follow the syntax described in paragraph 3.2.1.

---

## PDATAOUT Command

The PDATAOUT command causes the specified module to reply with a list of relays which are closed on that module. The syntax for the PDATAOUT command is:

PD[ATAOUT] <module list> [ ; <module list>...]

where:

<module list> ::= <module> | <module> - <module>

<module> ::= 1|2|3|4|5|6|7|8|9|10|11|12

For example:

PD 1;3-6;9

causes each of the modules with module addresses 1, 3, 4, 5, 6, and 9 to reply with a list of closed relays.

The reply to the PDATAOUT consists of three or more reply lines, each of which are terminated with a carriage return followed by a linefeed. A minimum of three reply lines are returned.

The FIRST line is as follows:

<module>. 1260-39 HIGH DENSITY MULTI-PURPOSE SWITCH MODULE

where <module> is the module address of the 1260-39 card ("000" to "012").

The LAST line is as follows:

<module>.END

Note that there is no space character between the period and the

"B" of the "END" string.

Lines 2 through N-i will have the form:

<module>. [<channel range> [,<channel range> ..]] [.,]

where:

<module>     ::     001 through 012

<channel range> ::= <channel> | <channel> - <channel>

<channel>     ::-     0000 through 0004 or  
                  1000 through 1047 or  
                  2000, 2001, 2100, 2101, etc.

If there are no closed relays, the second line will consist solely of the module addresses and the period. There will be no channels listed, and there will be a total of three lines returned. For example:

```
007. 1260-39 HIGH DENSITY MULTI-PURPOSE SWITCH MODULE
007.
007. END
```

If the second line can hold all of the closed relays, there will be a total of three lines returned. For example:

```
007. 1260-39 HIGH DENSITY MULTI-PURPOSE SWITCH MODULE
007. 0000,1005-1013,2100,2101,4106-4114
007. END
```

if the second line Cannot hold all of the closed relays, the last character on the line before the carriage return/linefeed will be a comma. This indicates that more data is to follow on the third line. If the third line cannot hold all of the remaining closed relays, it too will be terminated with a comma, and more data will follow on the fourth line. The last line before the "END" line will NOT have a comma at the end. For example:

```
007. 1260-39 HIGH DENSITY BASIC SWITCH MODULE
007. 0000,0001,0004,1000,1022-1027,1033,1035,1037,1039,2001,
007. 2200,2201,3000,3002,3100,3101,3103,3201,3202,4001,4112,
007. 4310-4313,4317,4401,4406,4410,4413,4417
007.END
```

---

## PSETUP Command

The PSETUP command causes a specified module setup to be transmitted to the VXI bus Controller. The syntax used is:

```
PS [ETUP] <module address>[;<module address>] [;<module address>]
```

where:

<module address> is the switch card address.


The responses to the PSETUP command for the 1260-39 consists of three lines. Each line consists of a three-digit module address, followed by some information. A sample reply to the PSETUP command is shown below:

```
007. 1260-39 HIGH DENSITY MULTI-PURPOSE SWITCH MODULE
007.  BBM
007.END
```

The first line of the response to the PSETUP command is a header line. The header describes the model number.

The second reply line designates the setup mode for scanning. By default, this is Break-Before-Make ("BBM"). The other setup modes which may be returned on the second line include Make-Before-Break ('~B'), and Immediate ("IMM"). The setup mode may be changed using the "SETUP" command, described in section 3.4 of the 1260 Option 01 manual.

The last line containing the "END" characters denotes no more information to report.

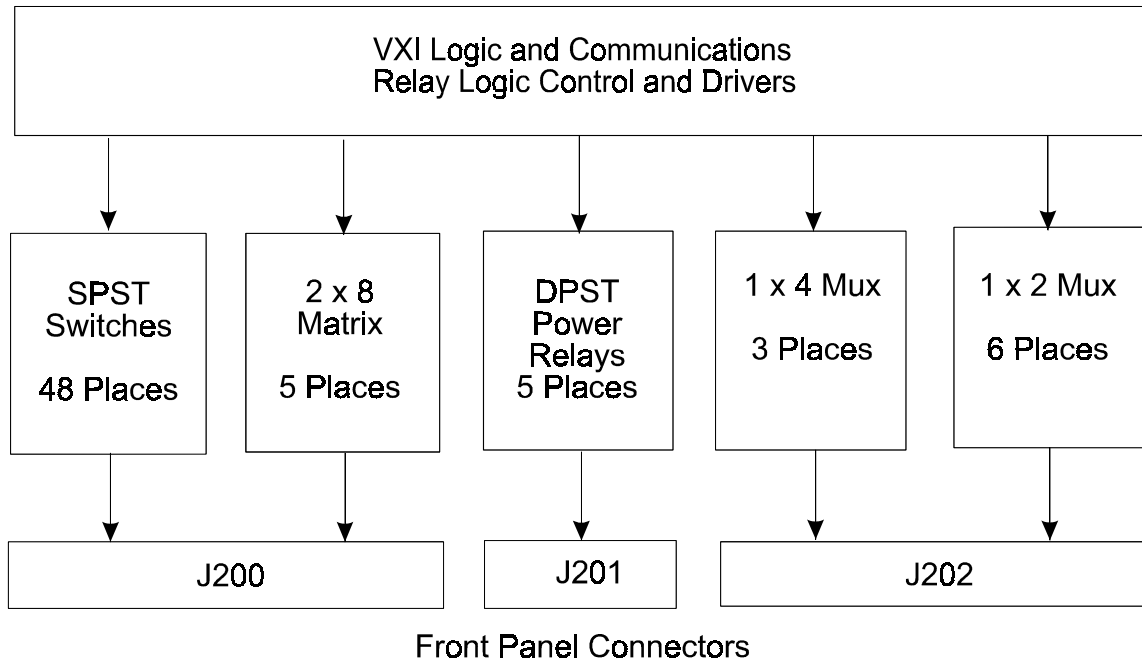

**Figure 3-1, 1260-39 Module Configuration Block Diagram**

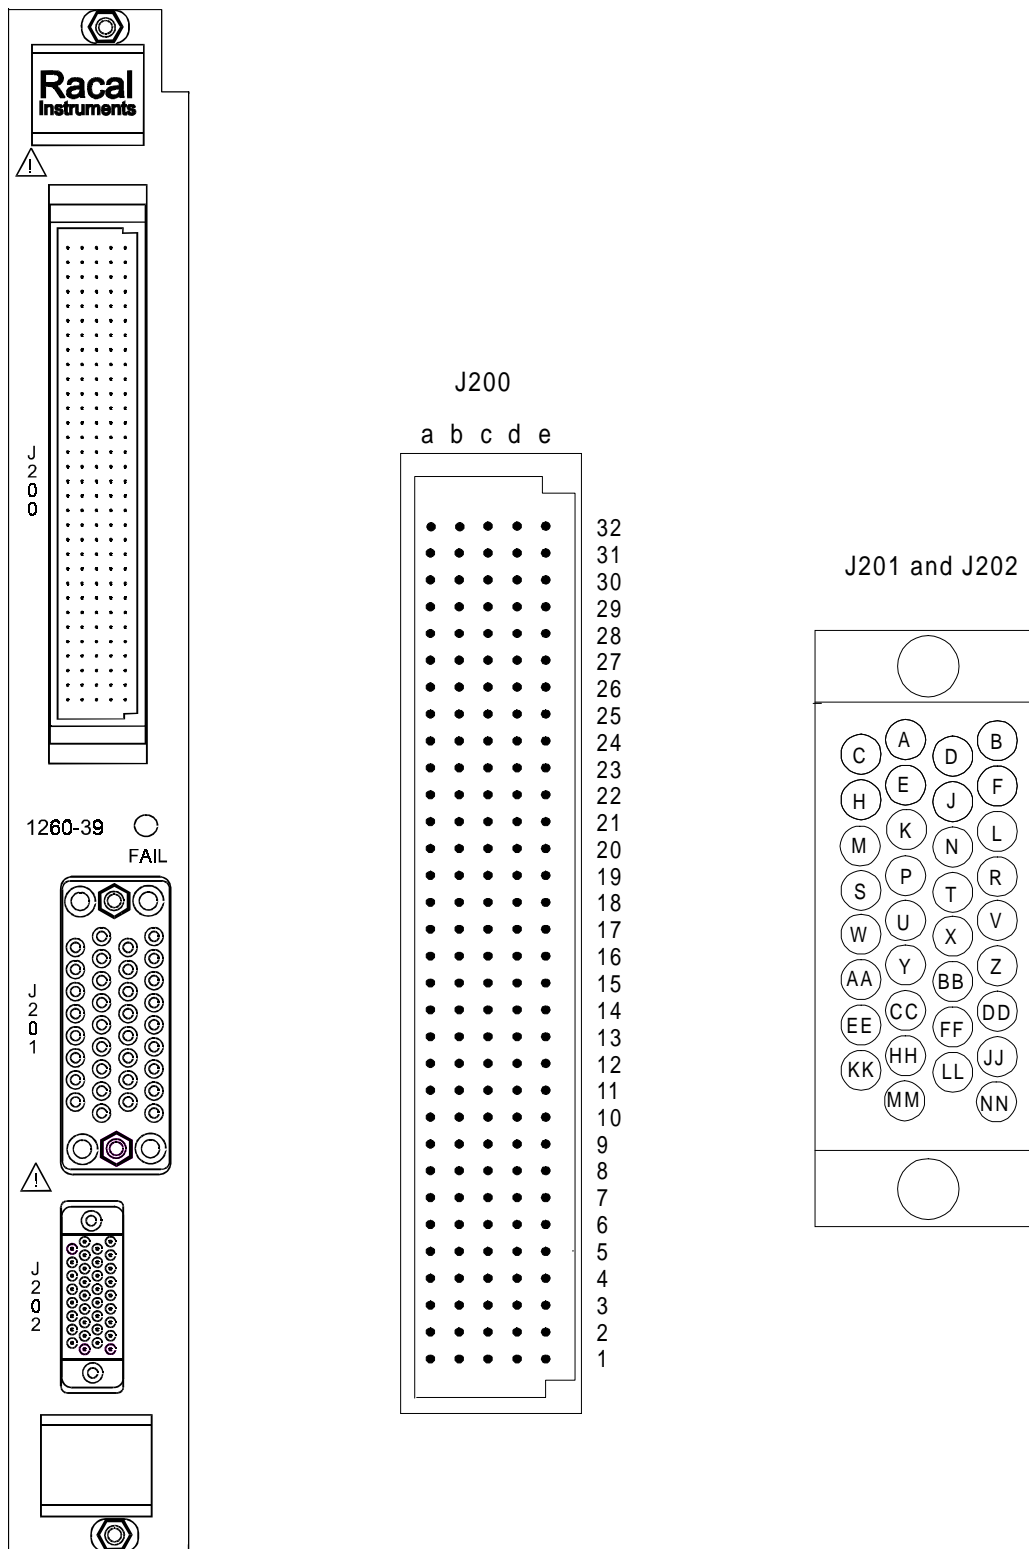


Figure 3-2, 1260-39 Pin Configuration, Front View

Revised 11/4/99

**Table 3-1. Channel to Connector Pin Mapping for DPST Relays**

Channel	Relay	Connector In	Schematic Channel	Connector Out	Schematic Channel
0000	K73	J201-1 (A)	CH00581	J201-2 (B)	CH0058A
		J201-3 (C)	CH00591	J201-4 (D)	CH00S9A
0001	K74	J201-5 (E)	CH00601	J201-6 (F)	CH0060A
		J201-9 (K)	C1100611	J201-10 (L)	CH0061A
0002	K75	J201-18 (V)	C1100621	J201-16 (T)	CH0062A
		J201-14 (R)	CH00631	J201-12 (N)	CH0063A
0003	K76	J201-34(NN)	CH00641	J201-30 (JJ)	CH0064A
		J201-22(Z)	CH00651	J201-26 (DD)	CH0065A
0004	K77	J201-27 (EE)	CH00661	J201-3 1 (KK)	CH0066A
		J201-32 (LL)	CH00671	J201-33 (MM)	C110067A

**Table 3-2. Channel to Connector Pin-Out Mapping for SPST Relays**

Channel	Relay	Connector In	Schematic Channel	Connector Out	Schematic Channel
1000	K1	J200-C32	CH0001I	J200-A30	CH0001A
1001	K2	J200-C31	CH0002I	J200-A29	CH0002A
1002	K3	J200-B32	C1100031	J200-B30	CH0003A
1003	K4	J200-B3 1	CH0004I	J200-B29	CH0004A
1004	Ks	3200-A32	CH000SI	J200-C30	CH0005A
1005	K6	J200-A3 1	CH0006I	J200-C29	CH0006A
1006	K7	J200-C28	CH0007I	J200-E27	CH0007A
1007	K8	J200-D28	CH0008I	J200-C27	CH0008A
1008	K9	J200-A28	CH0009I	J200-A26	CH0009A
1009	K10	J200-B28	CH0010I	J200-E26	CH0010A
1010	K11	J200-D29	CH0011I	J200-C26	CH0011A

**Table 3-2. Channel to Connector Pin-Out Mapping for SPST Relays (Continued)**

Channel	Relay	Connector In	Schematic Channel	Connector Out	Schematic Channel
1011	K12	J200-E29	CH00121	J200-D26	CH0012A
1012	K13	J200-A24	CH00131	J200-D24	CH0013A
1013	K14	J200-C25	CH00141	J200-C24	CH0014A
1014	K15	J200-D25	CH00151	J200-E23	CH0015A
1015	K16	J200-E25	CH00161	3200-B23	CH0016A
1016	K17	J200-A25	CH00171	J200-D23	CH0017A
1017	K18	J200-B26	CH00181	J200-C23	CH0018A
1018	K19	J200-A21	CH00191	J200-E20	CH0019A
1019	K20	J200-B21	CH00201	J200-B20	CH0020A
1020	K21	J200-D22	CH00211	J200-A19	CH0021A
1021	K22	J200-E21	CH00221	J200-D20	CH0022A
1022	K23	J200-E22	CH00231	J200-C19	CH0023A
1023	K24	J200-C22	CH00241	J200-B 19	CH0024A
1024	K25	J200-C18	CH00251	J200-C14	CH0025A
1025	K26	J200-D18	CH00261	J200-D14	CH0026A
1026	K27	J200-A18	CH00271	J200-E14	CH0027A
1027	K28	J200-B 18	CH00281	J200-B 13	CH0028A
1028	K29	J200-E19	CH00291	J200-A13	CH0029A
1029	K30	J200-D19	CH00301	J200-C13	CH0030A
1030	K31	J200-E12	CH00311	J200-A10	CH0031A
1031	K32	J200-B11	CH00321	J200-B10	C110032A
1032	K33	J200-C12	CH00331	J200-C10	CH0033A

**Table 3-2. Channel to Connector Pin-Out Mapping for SPST Relays (Continued)**

Channel	Relay	Connector In	Schematic Channel	Connector Out	Schematic Channel
1033	K34	J200-D12	CH00341	J200-D10	CH0034A
1034	K35	J200-A12	CH00351	J200-E10	CH0035A
1035	K36	J200-B 12	CH00361	J200-E09	CH0036A
1036	K37	J200-A09	CH00371	J200-A08	CH0037A
1037	K38	J200-B08	CH00381	J200-B07	CH0038A
1038	K39	J200-C09	CH00391	J200-E07	CH0039A
1039	K40	J200-D08	CH00401	J200-D06	CH0040A
1040	K41	J200-D09	CH00411	J200-A07	CH0041A
1041	K42	J200-B09	CH00421	3200-B06	CH0042A
1042	K43	J200-D05	CH00431	J200-004	CH0043A
1043	K44	J200-E04	CH00441	J200-003	CH0044A
1044	K45	J200-A06	CH00451	J200-A04	CH0045A
1045	K46	J200-B05	CH00461	J200-B03	CH0046A
1046	K47	3200-C06	CH00471	3200-E03	CH0047A
1047	K48	J200-C05	CH00481	J200-D01	CH0048A



**Table 3-3. Channel to Connector Pin-Out Mapping for 1x2 MUX Relays**

Channel	Relay	Connector In	Schematic Channel	Connector Out	Schematic Channel
2000	K49	J202-15 (S)	CH0049I	J202-25 (CC)	CH0049A
2001	K50			J202-2 1(Y)	CH0049B
2100	K51	J202-32 (LL)	CH0050I	J202-33 (MM)	CH0050A
2101	K52			J202-29 (HH)	CH0050B
2200	K53	J202-28 (FF)	CH0051I	J202-14 (R)	CH0051A
2201	K54			J202-10 (L)	CH0051B
2300	KS5	J202-6 (F)	CH0052I	J202-24 (BB)	CH0052A
2301	KS6			J202-34 (NN)	CH0052B
2400	KS7	J202-30 (JJ)	CH0053I	J202-2 (B)	CH0053A
2401	KS8			J202-27 (EE)	CH0053B
2500	K59	J202-3 1 (KK)	CH0054I	J202-19 (W)	CH0054A
2501	K60			3202-23 (AA)	CH0054B

**Table 3-4. Channel to Connector Pin-Out Mapping for 1x4 MUX Relays**

3000	K61	J202-5 (E)	CH0055I	3202-18 (V)	CH0055A
3001	K62			3202-16 (T)	CH0055B
3002	K63			3202-7 (H)	CH0055C
3003	K64			J202-4 (D)	CH0055D
3100	K65	3202-9 (K)	CH0056I	J202-22 (Z)	CH0056A
3101	K66			3202-20 (X)	CH0056B
3102	K67			J202- 11(M)	CH0056C
3103	K68			J202-8 (3)	CH0056D
3200	K69	3202-1(A)	CH0057I	3202-26 (DD)	CH00S7A
3201	K70			3202-13 (P)	CH0057B
3202	K71			3202-3 (C)	CH0057C
3203	K72			J202- 12 (N)	CH00S7D

**Table 3-5. Channel to Connector Pin-Out Mapping for Matrix Relays**

4000	K81	J200-D30	CH00681	J200-D27	CH0068A
4001	K82			J200-E28	CH0068B
4002	K83			J200-E32	CH0068C
4003	K84			J200-E3 1	CH0068D
4004	K85			J200-D32	CH0068E
4005	K86			J200-D3 1	CH0068F
4006	K87			J200-B27	CH0068G
4007	K88			J200-A27	CH0068H
4010	K89	J200-E30	CH01681	J200-D27	CH0068A
4011	K90			J200-E28	CH0068B
4012	K91			J200-E32	CH0068C
4013	K92			J200-E3 1	CH0068D
4014	K93			J200-D32	CH0068E
4015	K94			J200-D3 1	CH0068F
4016	K95			J200-B27	CH0068G
4017	K96			J200-A27	CH0068H
4100	K97	J200-A22	CH00691	J200-C2 1	CH0069A
4101	K98			J200-A20	CH0069B
4102	K99			J200-A23	CH0069C
4103	K100			J200-B24	CH0069D
4104	K101			J200-E24	CH0069E
4105	K102			J200-B25	CH0069F
4106	K103			J200-D2 1	CH0069G
4107	K104			J200-C20	CH0069H
4110	K105	J200-B22	CH01691	J200-C21	CH0069A
41~11	K106			J200-A20	CH0069B
4112	K107			J200-A23	CH0069C
4113	K108			J200-B24	CH0069D
4114	K109			J200-E24	CH0069E
4115	K110			J200-B25	CH0069F
4116	K111			J200-D2 1	CH0069G
4117	K112			J200-C20	CH0069H

**Table 3-5. Channel to Connector Pin-Out Mapping for Matrix Relays (Continued)**

4200	K113	J200-D13	CH0070I	J200-C 11	CH0070A
4201	K114			J200-A 11	CH070B
4202	K115			J200-A 14	CH0070C
4203	K116			J200-B 14	CH0070D
4204	K117			J200-E 18	CH0070E
4205	K118			J200-E 17	CH0070F
4206	K119			J200-E 11	CH0070G
4207	K120			J200-D 12	CH0070H
4210	K121	J200-E13	CH0170I	J200-C 11	CH0070A
4211	K122			J200-A 11	CH0070B
4212	K123			J200-A 14	CH0070C
4213	K124			J200-B 14	CH0070D
4214	K125			J200-E 18	CH0070E
4215	K126			J200-E 17	CH0070F
4216	K127			J200-E 11	CH0070G
4217	K128			J200-D 11	CH0070H
4300	K129	J200-E06	J200-E06	J200-B04	CH0071A
4301	K130			J200-A0S	CH0071B
4302	K131			J200-C08	CH0071C
4303	K132			J200-C07	CH0071D
4304	K133			J200-E08	CH0071E
4305	K134			J200-D07	CH0071F
4306	K135			J200-D03	CH0071G
4307	K136			J200-D04	CH0071H
4310	K137	J200-E05	CH0171I	J200-B04	CH0071A
4311	K138			J200-A05	CH0071B
4312	K139			J200-C08	CH0071C
4313	K140			J200-C07	CH0071D
4314	K141			J200-E08	CH0071E
4315	K142			J200-D07	CH0071F
4316	K143			J200-D03	CH00710
4317	K144			J200-D04	CH0071H

**Table 3-5. Channel to Connector Pin-Out Mapping for Matrix Relays (Continued)**

4400	K145	J200-A01	CH00721	J200-C02	CH0072A
4401	K146			J200-E02	CH0072B
4402	K147			3200-E01	CH0072C
4403	K148			J200-B01	CH0072D
4404	K149			J200-A03	CH0072E
4405	K150			J200-C01	CH0072F
4406	K151			J200-B02	CH0072G
4407	K152			J200-A02	CH0072H
4410	K153	J200-D02	CH01721	J200-C02	CH0072A
4411	K154			J200-E02	CH0072B
4412	K155			J200-E01	CH0072C
4413	K156			J200-B01	CH0072D
4414	K157			J200-A03	CH0072E
4415	K158			J200-C01	CH0072F
4416	K159			J200-B02	CH0072G
4417	K160			J200-A02	CH0072H

**Table 3-6, Grounds**

Grounds:	J200	A15,A16,A17,B15,B16,B17,C15,C16,C17 D15,D16,D17,E15,E16
	J201-19(W)	
	J202-17(U)	

## Chapter 4

# DRAWINGS


---

407505	Final Assembly, 1260-39.....	4-3
405116	PCB Assembly, 1260-39.....	4-4
435116	Schematic, 1260-39.....	4-6

### Front Panel Connector Accessories

407407	160-Pin Connector Kit with backshell and pins.....	4-31
407408	160-Pin Cable Assy, 6ft., 24GA.....	4-32
407409	160-Pin Cable Assy, 12ft., 24GA.....	4-33

This page was left intentionally blank.

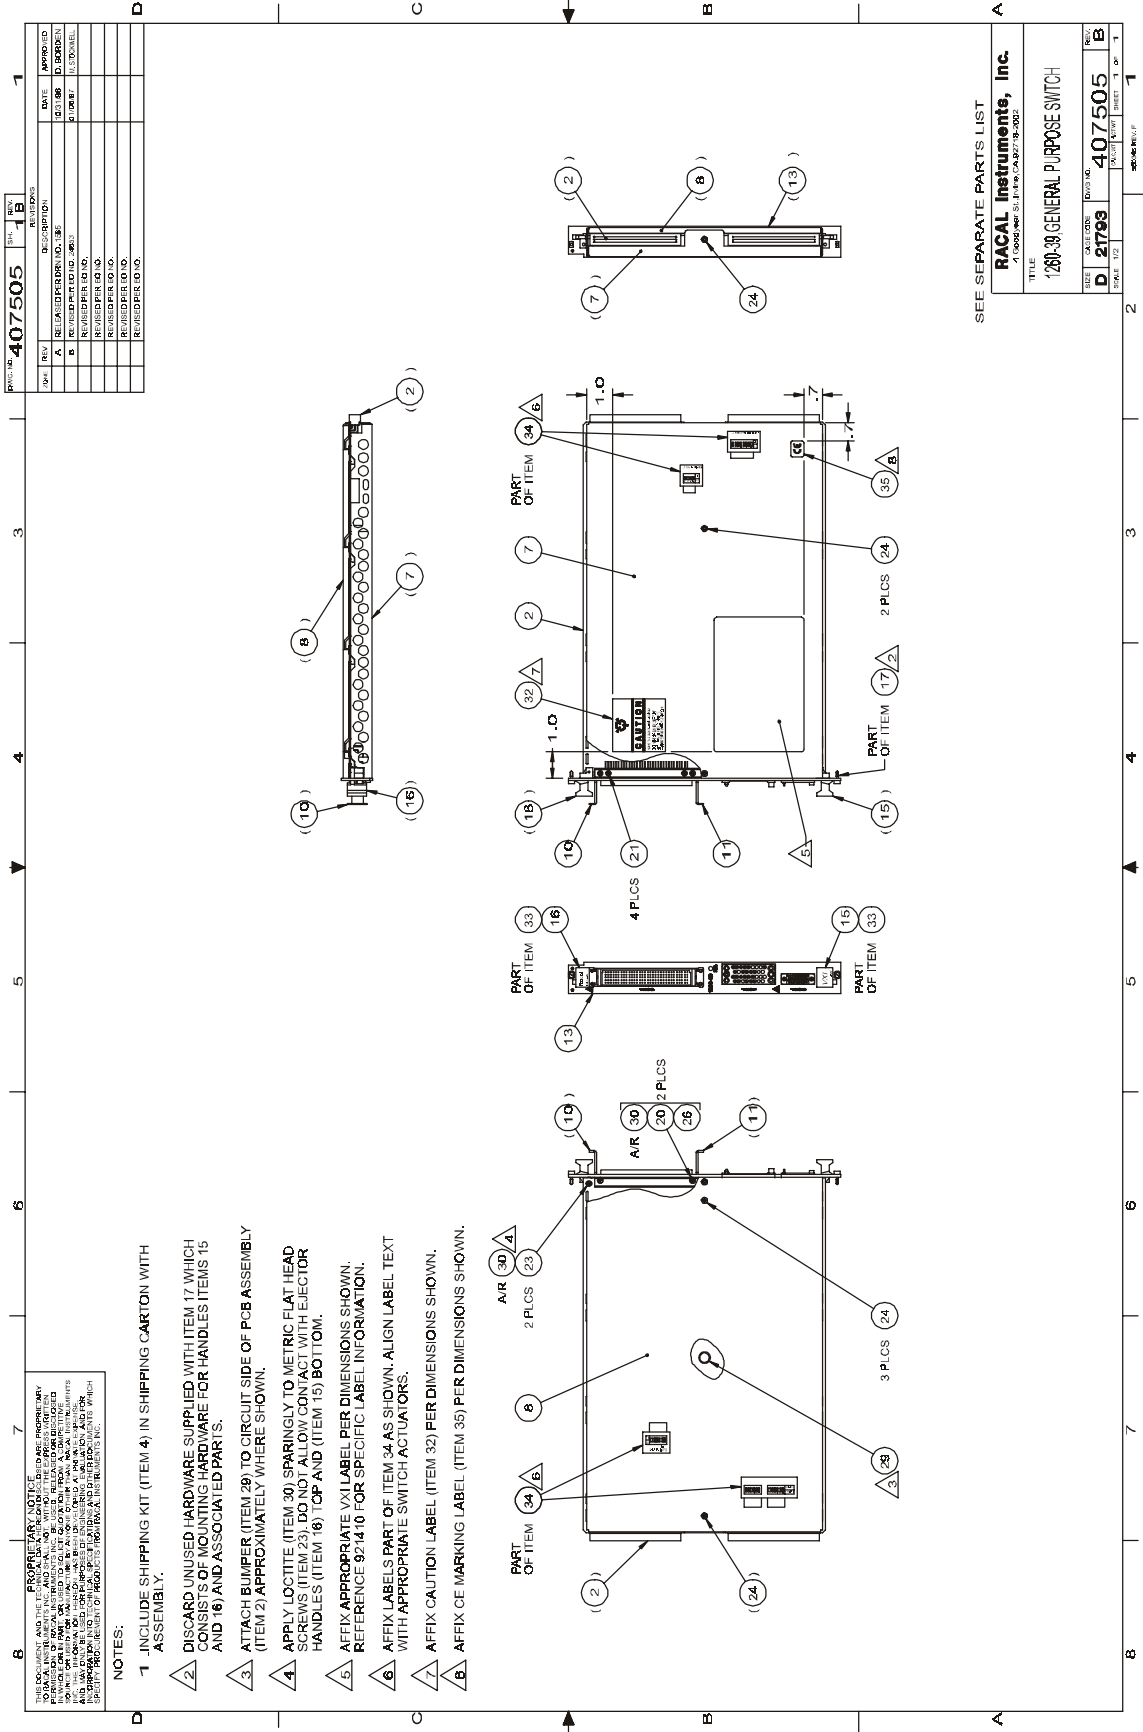

REV.	DESCRIPTION	DATE	APPROVED
A	RELEASED PER D.O. 105	10-1-66	D. BORDEN
B	REVISIONS		
	REVISION NO.		
	REVISION PER D.O.		
	REVISION PER D.O.		
	REVISION PER D.O.		

REV.	DESCRIPTION	DATE	APPROVED
A	RELEASED PER D.O. 105	10-1-66	D. BORDEN
B	REVISIONS		
	REVISION NO.		
	REVISION PER D.O.		
	REVISION PER D.O.		
	REVISION PER D.O.		

REV.	DESCRIPTION	DATE	APPROVED
A	RELEASED PER D.O. 105	10-1-66	D. BORDEN
B	REVISIONS		
	REVISION NO.		
	REVISION PER D.O.		
	REVISION PER D.O.		
	REVISION PER D.O.		

REV.	DESCRIPTION	DATE	APPROVED
A	RELEASED PER D.O. 105	10-1-66	D. BORDEN
B	REVISIONS		
	REVISION NO.		
	REVISION PER D.O.		
	REVISION PER D.O.		
	REVISION PER D.O.		

REV.	DESCRIPTION	DATE	APPROVED
A	RELEASED PER D.O. 105	10-1-66	D. BORDEN
B	REVISIONS		
	REVISION NO.		
	REVISION PER D.O.		
	REVISION PER D.O.		
	REVISION PER D.O.		

REV.	DESCRIPTION	DATE	APPROVED
A	RELEASED PER D.O. 105	10-1-66	D. BORDEN
B	REVISIONS		
	REVISION NO.		
	REVISION PER D.O.		
	REVISION PER D.O.		
	REVISION PER D.O.		

REV.	DESCRIPTION	DATE	APPROVED
A	RELEASED PER D.O. 105	10-1-66	D. BORDEN
B	REVISIONS		
	REVISION NO.		
	REVISION PER D.O.		
	REVISION PER D.O.		
	REVISION PER D.O.		


REV.	DESCRIPTION	DATE	APPROVED
A	RELEASED PER D.O. 105	10-1-66	D. BORDEN
B	REVISIONS		
	REVISION NO.		
	REVISION PER D.O.		
	REVISION PER D.O.		
	REVISION PER D.O.		

**PROPRIETARY NOTICE**  
 THIS DRAWING IS THE PROPERTY OF RACAL INSTRUMENTS, INC. AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF RACAL INSTRUMENTS, INC. THIS DRAWING IS UNCLASSIFIED AND IS NOT SUBJECT TO EXPORT CONTROL. ALL INFORMATION CONTAINED HEREIN IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. THIS DRAWING IS THE PROPERTY OF RACAL INSTRUMENTS, INC. AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF RACAL INSTRUMENTS, INC.

- NOTES:**
- 1 INCLUDE SHIPPING KIT (ITEM 4) IN SHIPPING CARTON WITH ASSEMBLY.
  - 2 DISCARD UNUSED HARDWARE SUPPLIED WITH ITEM 17 WHICH CONSISTS OF MOUNTING HARDWARE FOR HANDLES ITEMS 15 AND 16 AND ASSOCIATED PARTS.
  - 3 ATTACH BUMPER (ITEM 29) TO CIRCUIT SIDE OF PCB ASSEMBLY (ITEM 2) APPROXIMATELY WHERE SHOWN.
  - 4 APPLY LOCTITE (ITEM 30) SPARINGLY TO METRIC FLAT HEAD SCREWS (ITEM 23). DO NOT ALLOW CONTACT WITH EJECTOR HANDLES (ITEM 18) TOP AND (ITEM 15) BOTTOM.
  - 5 AFFIX APPROPRIATE VAX LABEL PER DIMENSIONS SHOWN. REFERENCE 92/1410 FOR SPECIFIC LABEL INFORMATION.
  - 6 AFFIX LABELS PART OF ITEM 34 AS SHOWN. ALIGN LABEL TEXT WITH APPROPRIATE SWITCH ACTUATORS.
  - 7 AFFIX CAUTION LABEL (ITEM 32) PER DIMENSIONS SHOWN.
  - 8 AFFIX CE MARKING LABEL (ITEM 35) PER DIMENSIONS SHOWN.

SEE SEPARATE PARTS LIST

**RACAL Instruments, Inc.**  
 TITLE: 1260-39 GENERAL PURPOSE SWITCH  
 SIZE: D 21793  
 REV: B  
 SHEET 1 OF 1

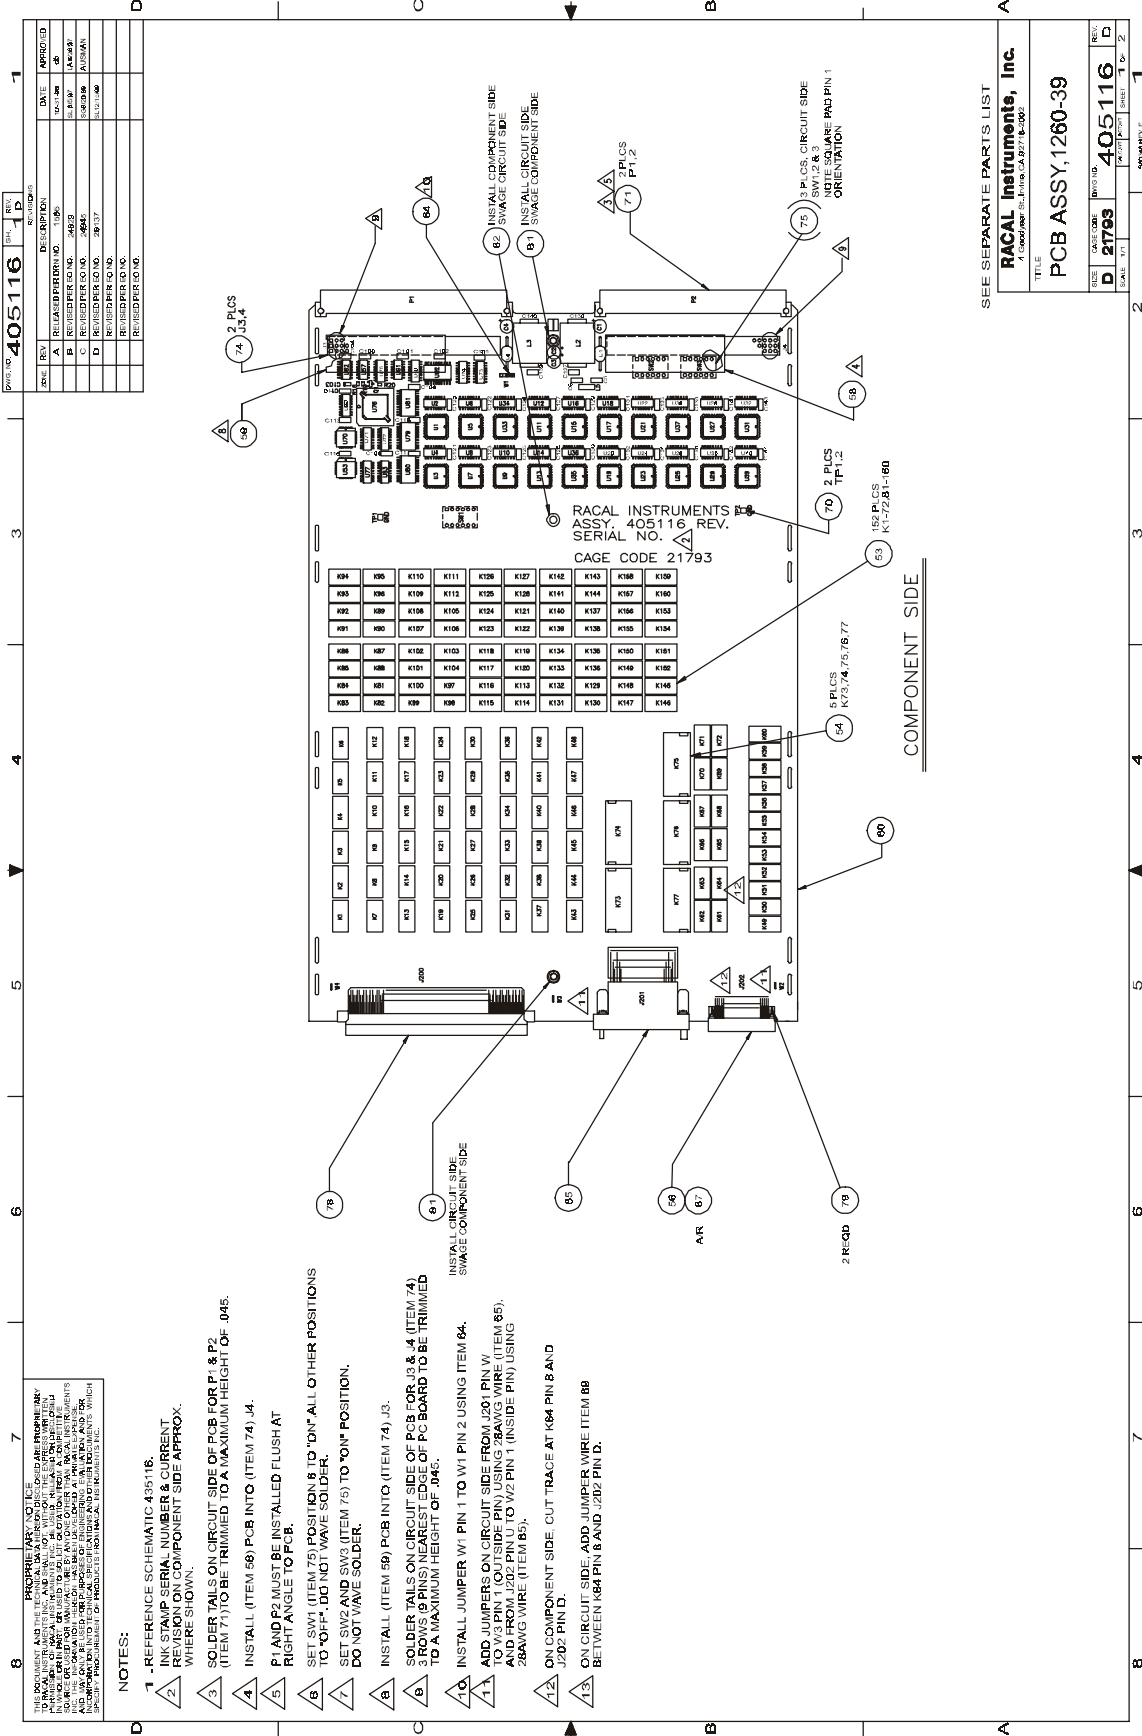

REV. NO.		405116	REV.	1	DATE	10-1-59
REV.	DESCRIPTION					
A	RELEASED PER REV. NO. 1159					
B	REVISED PER REV. NO. 2489					
C	REVISED PER REV. NO. 2807					
D	REVISED PER REV. NO. 2837					
	REVISED PER REV. NO.					
	REVISED PER REV. NO.					


SEE SEPARATE PARTS LIST  
**RACAL Instruments, Inc.**  
 4 Concord Ave., Milpitas, CA 95127 (415) 961-2000  
 TITLE  
**PCB ASSY, 1260-39**  
 REV. NO. **405116**  
 REV. **D**  
 DATE **27783**  
 SHEET NO. **1** OF **2**

**PROPRIETARY NOTICE:**  
 THIS DRAWING IS THE PROPERTY OF RACAL INSTRUMENTS, INC. AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF RACAL INSTRUMENTS, INC. THIS DRAWING IS UNCLASSIFIED AND THE INFORMATION CONTAINED HEREIN IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE.

**NOTES:**

1. REFERENCE SCHEMATIC 405116.
2. RACAL PART NUMBERS AND SERIAL NUMBERS & CURRENT REVISION ON COMPONENT SIDE APPROX. WHERE SHOWN.
3. SOLDER TALLS ON CIRCUIT SIDE OF PCB FOR P1 & P2 (ITEM 71) TO BE TRIMMED TO A MAXIMUM HEIGHT OF .045.
4. INSTALL (ITEM 59) PCB INTO (ITEM 74) J4.
5. P1 AND P2 MUST BE INSTALLED FLUSH AT RIGHT ANGLE TO PCB.
6. SET SW1 (ITEM 75) POSITION 8 TO "DN" ALL OTHER POSITIONS TO "OFF". DO NOT WAVE SOLDER.
7. SET SW2 AND SW3 (ITEM 75) TO "ON" POSITION. DO NOT WAVE SOLDER.
8. INSTALL (ITEM 59) PCB INTO (ITEM 74) J3.
9. SOLDER TALLS ON CIRCUIT SIDE OF PCB FOR J3 & J4 (ITEM 74) 3 PINS (9 PINS) NEAREST EDGE OF PCB BOARD TO BE TRIMMED TO A MAXIMUM HEIGHT OF .045.
10. INSTALL JUMPER W1 PIN 1 TO W1 PIN 2 USING ITEM 64.
11. ADD JUMPER ON CIRCUIT SIDE FROM J041 PIN W1 TO W3 PIN 1 (OUTSIDE PIN) USING 28AWG WIRE (ITEM 65) AND FROM J202 PIN U TO W2 PIN 1 (INSIDE PIN) USING 28AWG WIRE (ITEM 65).
12. ON COMPONENT SIDE, CUT TRACE AT K64 PIN 8 AND J202 PIN D.
13. ON CIRCUIT SIDE, ADD JUMPER WIRE ITEM 69 BETWEEN K64 PIN 8 AND J202 PIN D.



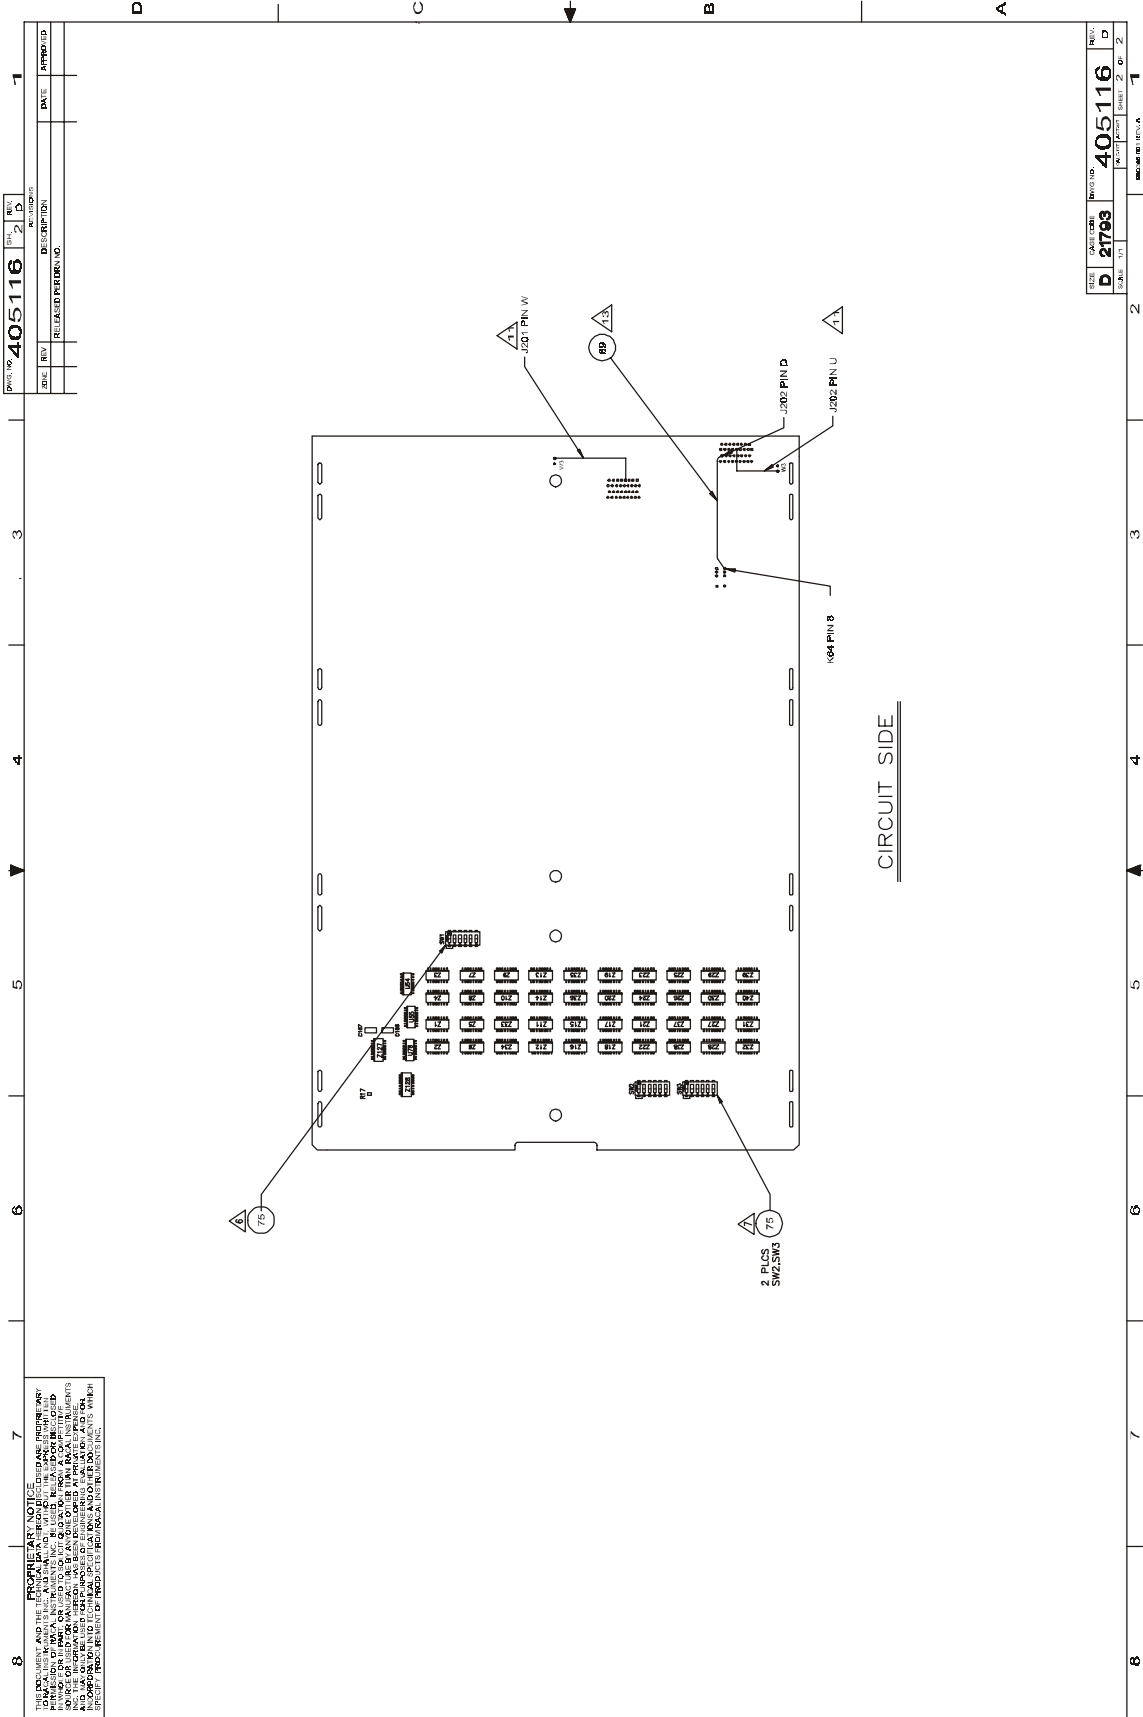



DRW. NO. 405116		REV. 2	REV. 2
DATE	DESCRIPTION	DATE	APPROVED

FILE NO. P 21783	REV. 2	REV. 2
DATE	DESCRIPTION	DATE


**PROPRIETARY NOTICE**  
 THIS DRAWING IS THE PROPERTY OF THE UNITED STATES GOVERNMENT AND IS LOANED TO YOU BY THE UNITED STATES GOVERNMENT. IT IS TO BE USED ONLY FOR THE PURPOSES AUTHORIZED BY THE UNITED STATES GOVERNMENT. IT IS TO BE RETURNED TO THE UNITED STATES GOVERNMENT WHEN NO LONGER NEEDED. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT PERMISSION IN WRITING FROM THE UNITED STATES GOVERNMENT.

CIRCUIT SIDE

1. CAPACITOR VALUES ARE IN MICROFARADS, 50V,  $\pm 20\%$  UNLESS OTHERWISE SPECIFIED.
2. RESISTOR VALUES ARE IN OHMS, 1/16W,  $\pm 5\%$  UNLESS OTHERWISE SPECIFIED.
3. RESISTOR NETWORK VALUES ARE IN OHMS,  $\pm 1\%$ .
4. WIPES INDICATED ARE NOT INSTALLED.
5. RELAYS K1-K7 AND K81-K160 ARE INCA INSTRUMENTS P/N 310256




UNUSED GATES

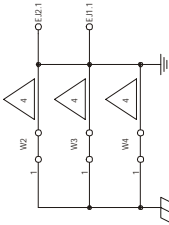


Z12R
W1
W2
W3
W4
W5
W6
W7
W8
W9
W10
W11
W12
W13
W14
W15
W16
W17
W18
W19
W20
W21
W22
W23
W24
W25
W26
W27
W28
W29
W30
W31
W32
W33
W34
W35
W36
W37
W38
W39
W40
W41
W42
W43
W44
W45
W46
W47
W48
W49
W50
W51
W52
W53
W54
W55
W56
W57
W58
W59
W60
W61
W62
W63
W64
W65
W66
W67
W68
W69
W70
W71
W72
W73
W74
W75
W76
W77
W78
W79
W80
W81
W82
W83
W84
W85
W86
W87
W88
W89
W90
W91
W92
W93
W94
W95
W96
W97
W98
W99
W100
W101
W102
W103
W104
W105
W106
W107
W108
W109
W110
W111
W112
W113
W114
W115
W116
W117
W118
W119
W120
W121
W122
W123
W124
W125
W126
W127
W128
W129
W130
W131
W132
W133
W134
W135
W136
W137
W138
W139
W140
W141
W142
W143
W144
W145
W146
W147
W148
W149
W150
W151
W152
W153
W154
W155
W156
W157
W158
W159
W160
W161
W162
W163
W164
W165
W166
W167
W168
W169
W170
W171
W172
W173
W174
W175
W176
W177
W178
W179
W180
W181
W182
W183
W184
W185
W186
W187
W188
W189
W190
W191
W192
W193
W194
W195
W196
W197
W198
W199
W200
W201
W202
W203
W204
W205
W206
W207
W208
W209
W210
W211
W212
W213
W214
W215
W216
W217
W218
W219
W220
W221
W222
W223
W224
W225
W226
W227
W228
W229
W230
W231
W232
W233
W234
W235
W236
W237
W238
W239
W240
W241
W242
W243
W244
W245
W246
W247
W248
W249
W250
W251
W252
W253
W254
W255
W256
W257
W258
W259
W260
W261
W262
W263
W264
W265
W266
W267
W268
W269
W270
W271
W272
W273
W274
W275
W276
W277
W278
W279
W280
W281
W282
W283
W284
W285
W286
W287
W288
W289
W290
W291
W292
W293
W294
W295
W296
W297
W298
W299
W300

REF. DES.	IC TYPE	5V P/N NO.	15V P/N NO.	GND P/N NO.
U2	74HC09			
U3	74HC09			
U4	74HC09			
U5	74HC09			
U6	74HC09			
U7	74HC09			
U8	74HC09			
U9	74HC09			
U10	74HC09			
U11	74HC09			
U12	74HC09			
U13	74HC09			
U14	74HC09			
U15	74HC09			
U16	74HC09			
U17	74HC09			
U18	74HC09			
U19	74HC09			
U20	74HC09			
U21	74HC09			
U22	74HC09			
U23	74HC09			
U24	74HC09			
U25	74HC09			
U26	74HC09			
U27	74HC09			
U28	74HC09			
U29	74HC09			
U30	74HC09			
U31	74HC09			
U32	74HC09			
U33	74HC09			
U34	74HC09			
U35	74HC09			
U36	74HC09			
U37	74HC09			
U38	74HC09			
U39	74HC09			
U40	74HC09			
U41	74HC09			
U42	74HC09			
U43	74HC09			
U44	74HC09			
U45	74HC09			
U46	74HC09			
U47	74HC09			
U48	74HC09			
U49	74HC09			
U50	74HC09			
U51	74HC09			
U52	74HC09			
U53	74HC09			
U54	74HC09			
U55	74HC09			
U56	74HC09			
U57	74HC09			
U58	74HC09			
U59	74HC09			
U60	74HC09			
U61	74HC09			
U62	74HC09			
U63	74HC09			
U64	74HC09			
U65	74HC09			
U66	74HC09			
U67	74HC09			
U68	74HC09			
U69	74HC09			
U70	74HC09			
U71	74HC09			
U72	74HC09			
U73	74HC09			
U74	74HC09			
U75	74HC09			
U76	74HC09			
U77	74HC09			
U78	74HC09			
U79	74HC09			
U80	74HC09			
U81	74HC09			
U82	74HC09			
U83	74HC09			
U84	74HC09			
U85	74HC09			
U86	74HC09			
U87	74HC09			
U88	74HC09			
U89	74HC09			
U90	74HC09			
U91	74HC09			
U92	74HC09			
U93	74HC09			
U94	74HC09			
U95	74HC09			
U96	74HC09			
U97	74HC09			
U98	74HC09			
U99	74HC09			
U100	74HC09			
U101	74HC09			
U102	74HC09			
U103	74HC09			
U104	74HC09			
U105	74HC09			
U106	74HC09			
U107	74HC09			
U108	74HC09			
U109	74HC09			
U110	74HC09			
U111	74HC09			
U112	74HC09			
U113	74HC09			
U114	74HC09			
U115	74HC09			
U116	74HC09			
U117	74HC09			
U118	74HC09			
U119	74HC09			
U120	74HC09			
U121	74HC09			
U122	74HC09			
U123	74HC09			
U124	74HC09			
U125	74HC09			
U126	74HC09			
U127	74HC09			
U128	74HC09			
U129	74HC09			
U130	74HC09			
U131	74HC09			
U132	74HC09			
U133	74HC09			
U134	74HC09			
U135	74HC09			
U136	74HC09			
U137	74HC09			
U138	74HC09			
U139	74HC09			
U140	74HC09			
U141	74HC09			
U142	74HC09			
U143	74HC09			
U144	74HC09			
U145	74HC09			
U146	74HC09			
U147	74HC09			
U148	74HC09			
U149	74HC09			
U150	74HC09			
U151	74HC09			
U152	74HC09			
U153	74HC09			
U154	74HC09			
U155	74HC09			
U156	74HC09			
U157	74HC09			
U158	74HC09			
U159	74HC09			
U160	74HC09			
U161	74HC09			
U162	74HC09			
U163	74HC09			
U164	74HC09			
U165	74HC09			
U166	74HC09			
U167	74HC09			
U168	74HC09			
U169	74HC09			
U170	74HC09			
U171	74HC09			
U172	74HC09			
U173	74HC09			
U174	74HC09			
U175	74HC09			
U176	74HC09			
U177	74HC09			
U178	74HC09			
U179	74HC09			
U180	74HC09			
U181	74HC09			
U182	74HC09			
U183	74HC09			
U184	74HC09			
U185	74HC09			
U186	74HC09			
U187	74HC09			
U188	74HC09			
U189	74HC09			
U190	74HC09			
U191	74HC09			
U192	74HC09			
U193	74HC09			
U194	74HC09			
U195	74HC09			
U196	74HC09			
U197	74HC09			
U198	74HC09			
U199	74HC09			
U200	74HC09			
U201	74HC09			
U202	74HC09			
U203	74HC09			
U204	74HC09			
U205	74HC09			
U206	74HC09			

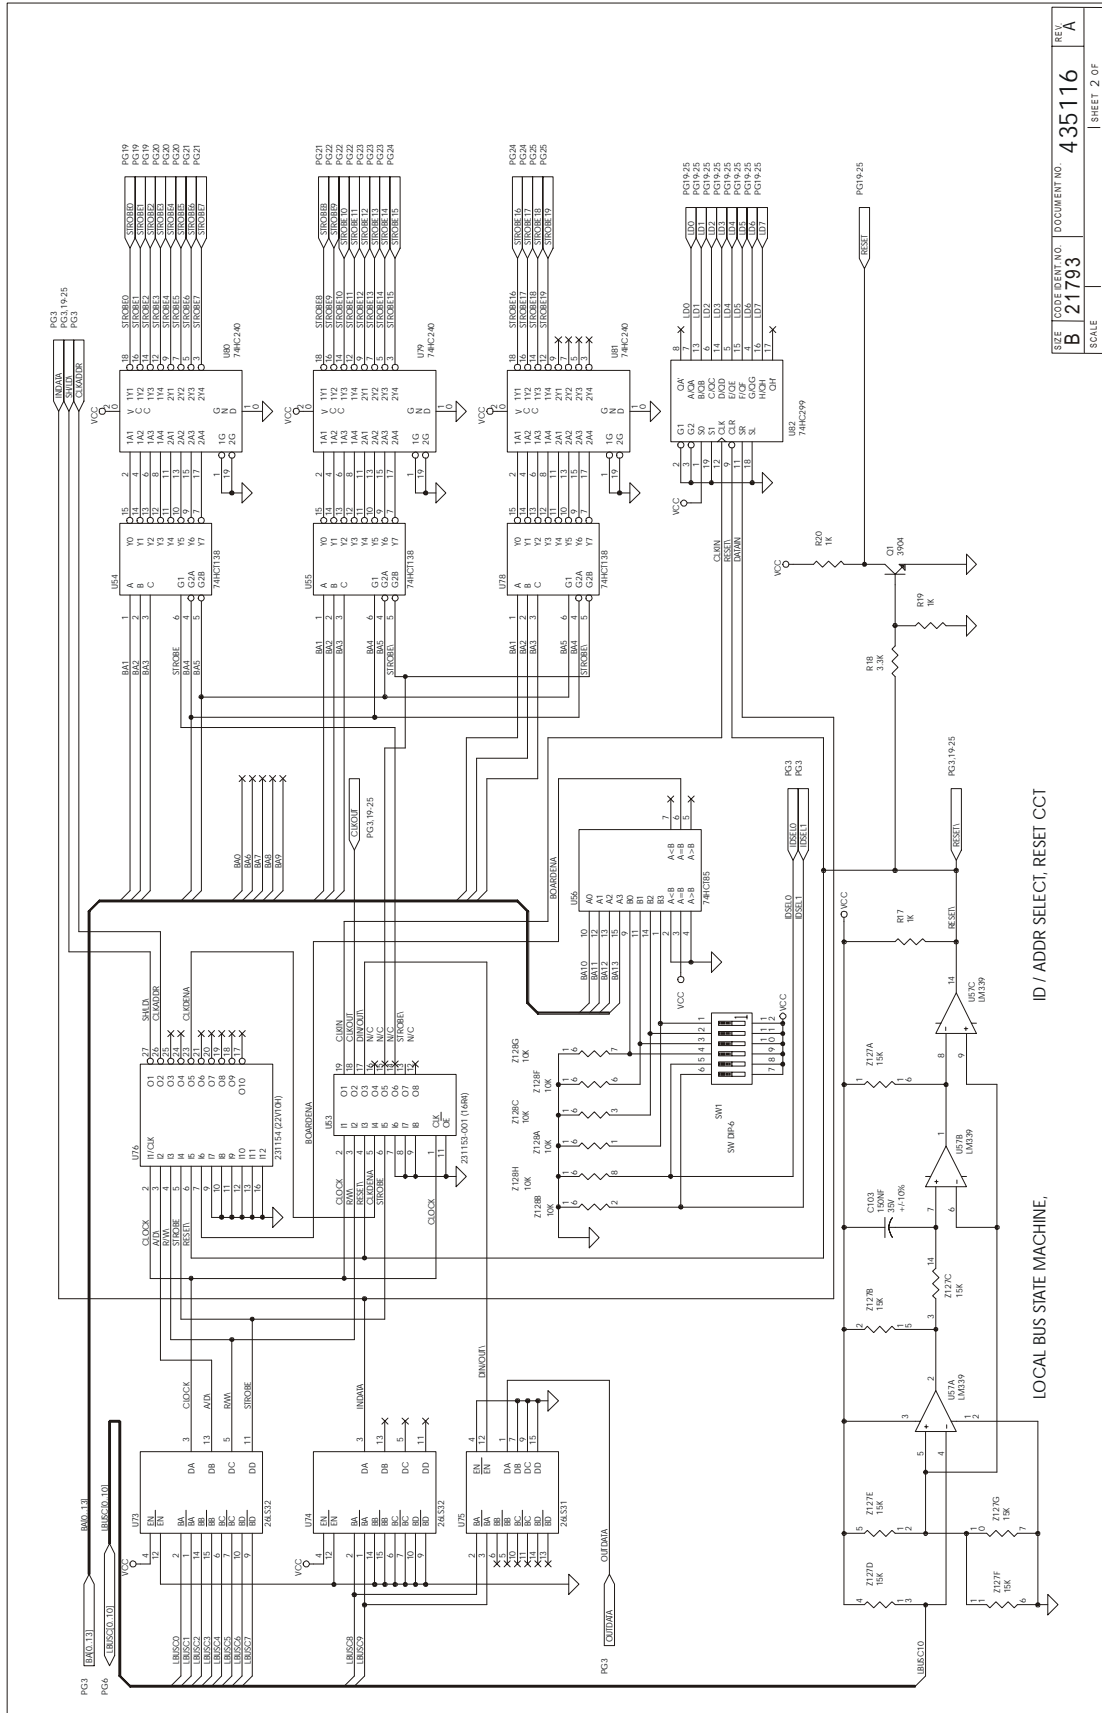


SIZE B 21793  
CODE BENT NO. 435116  
DOCUMENT NO. 435116  
REV. A  
SCALE  
SHEET 2 OF

LOCAL BUS STATE MACHINE,  
ID / ADDR SELECT, RESET OCT

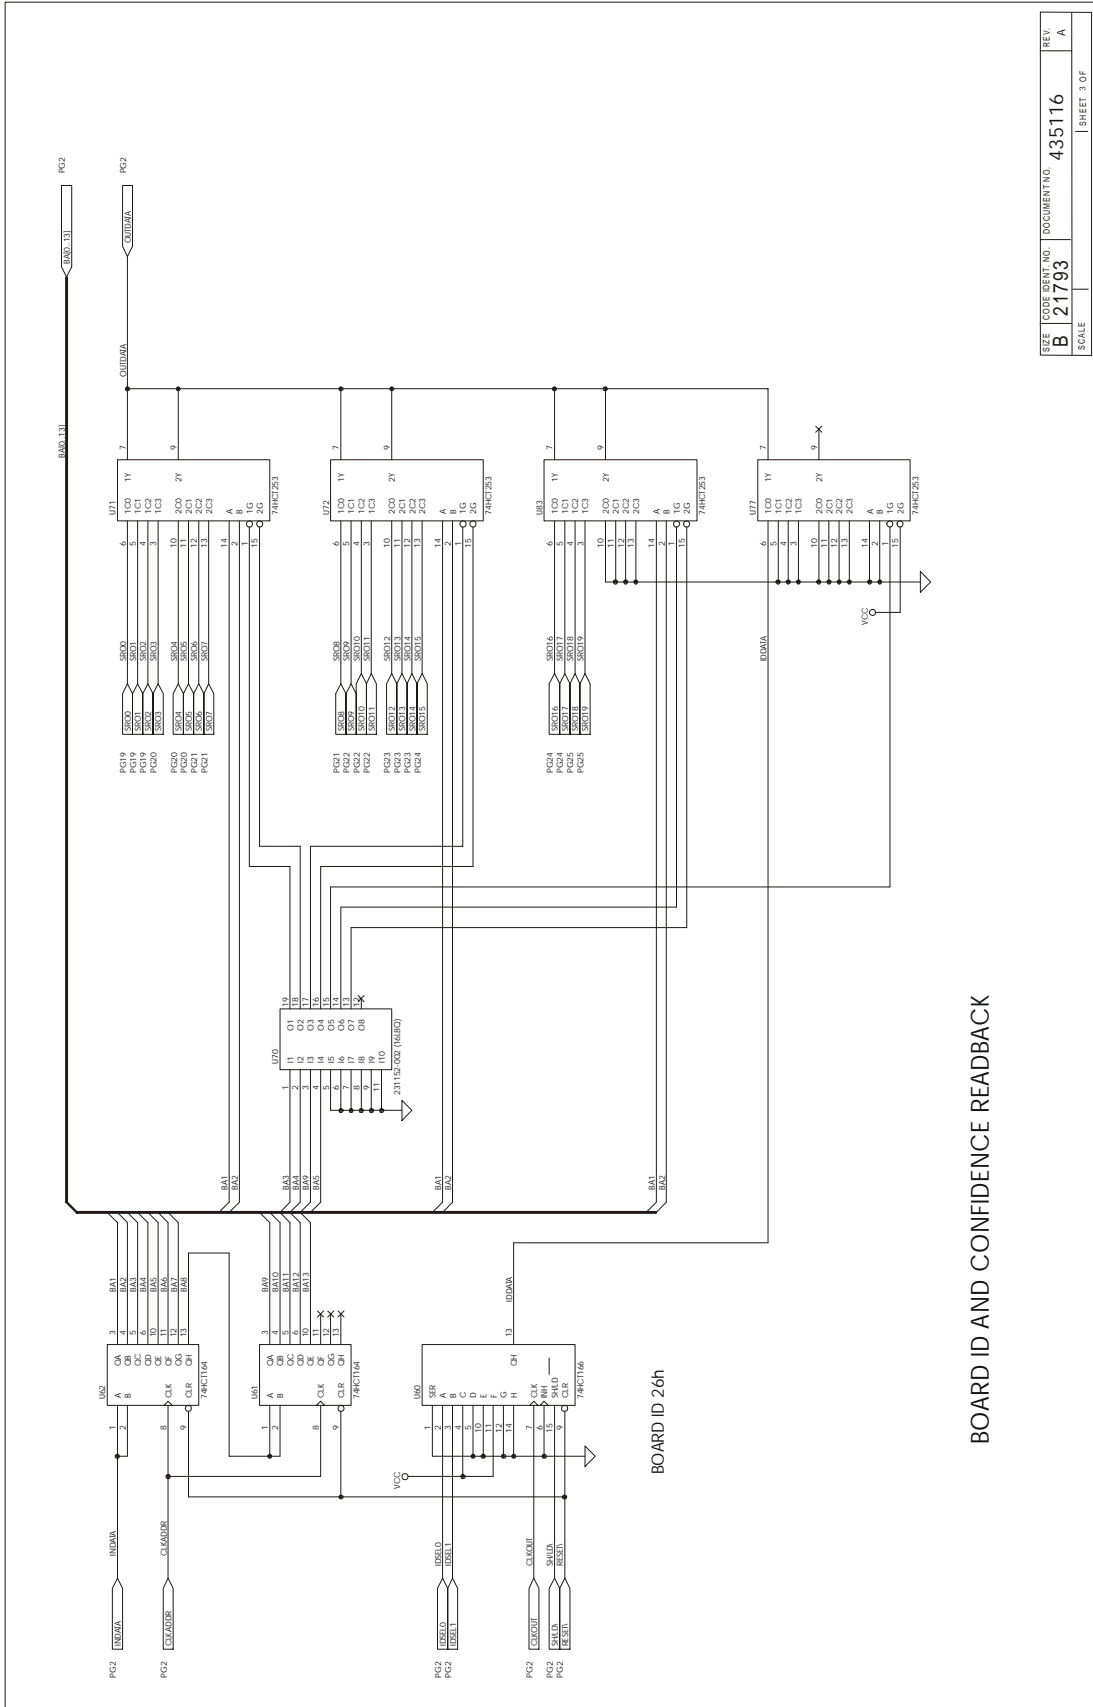


BOARD ID AND CONFIDENCE READBACK

SIZE	CODE	IDENT. NO.	DOCUMENT NO.	REV.
B	21793		435116	A
SCALE				SHEET 3 OF

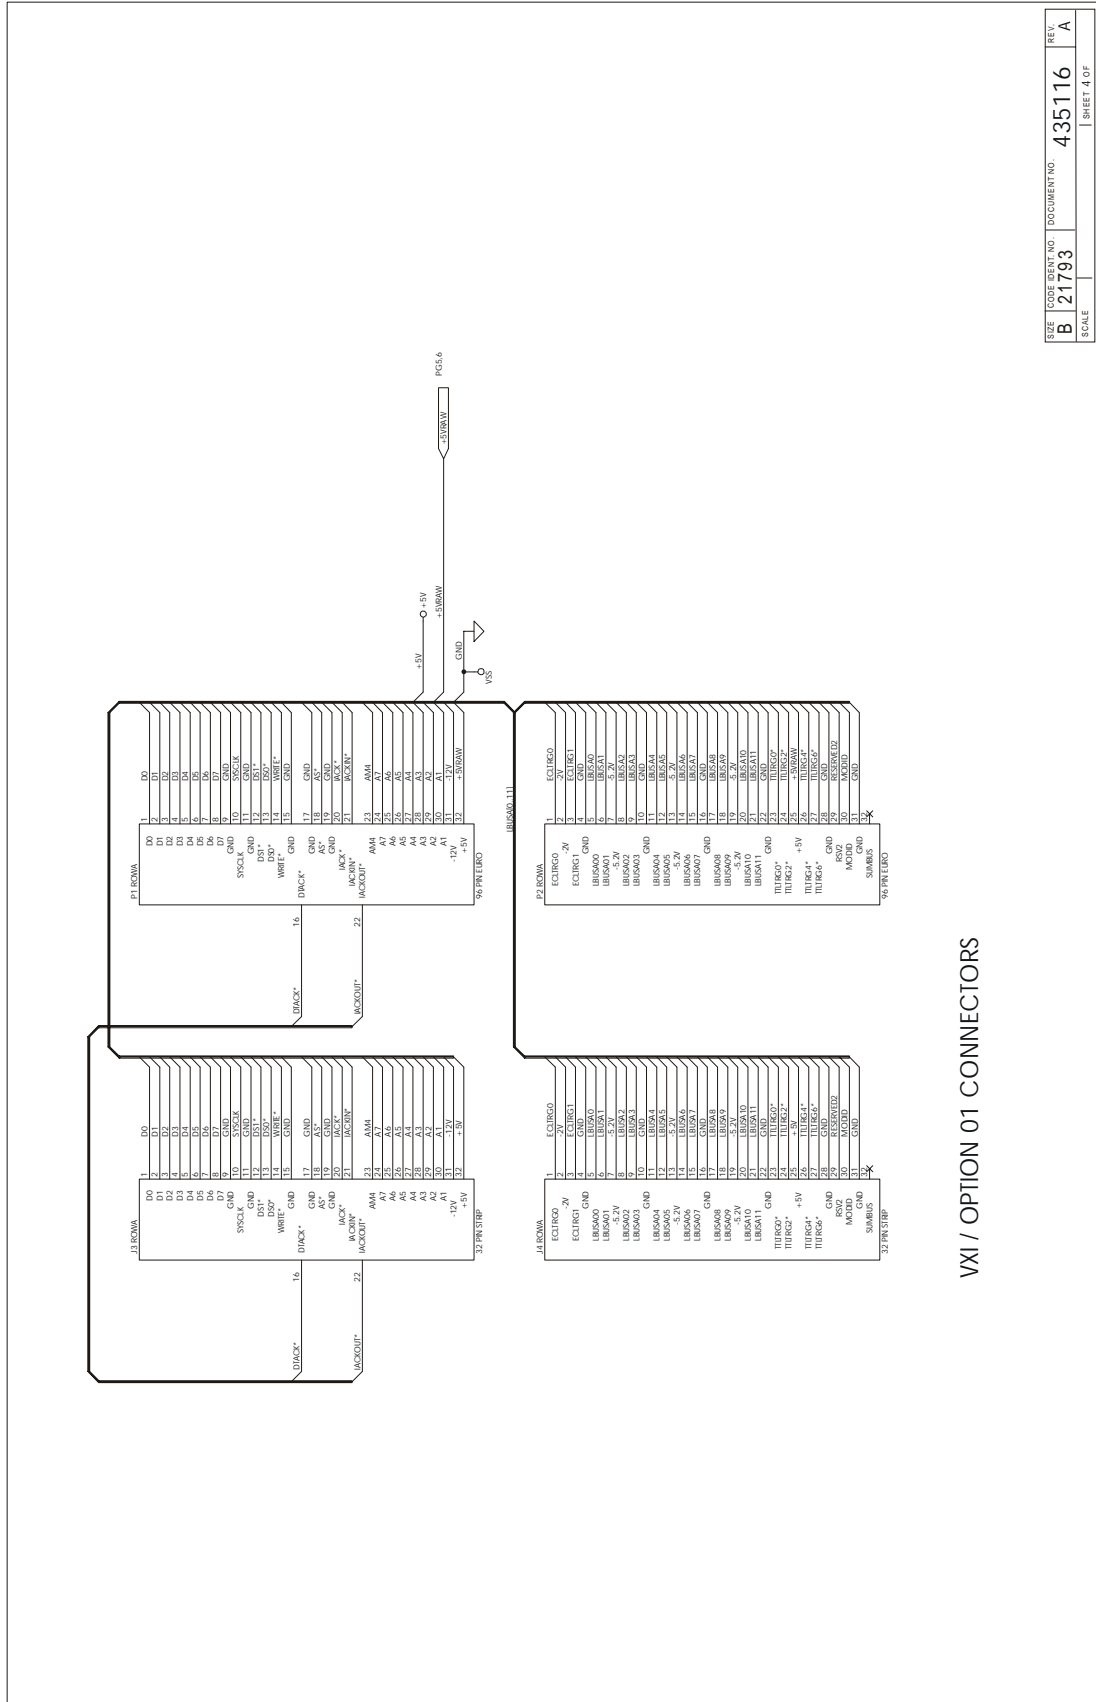


VXI / OPTION 01 CONNECTORS

SIZE	CODE IDENT NO	DOCUMENT NO	REV.
B	21793	435116	A
SCALE	SHEET 4 OF		

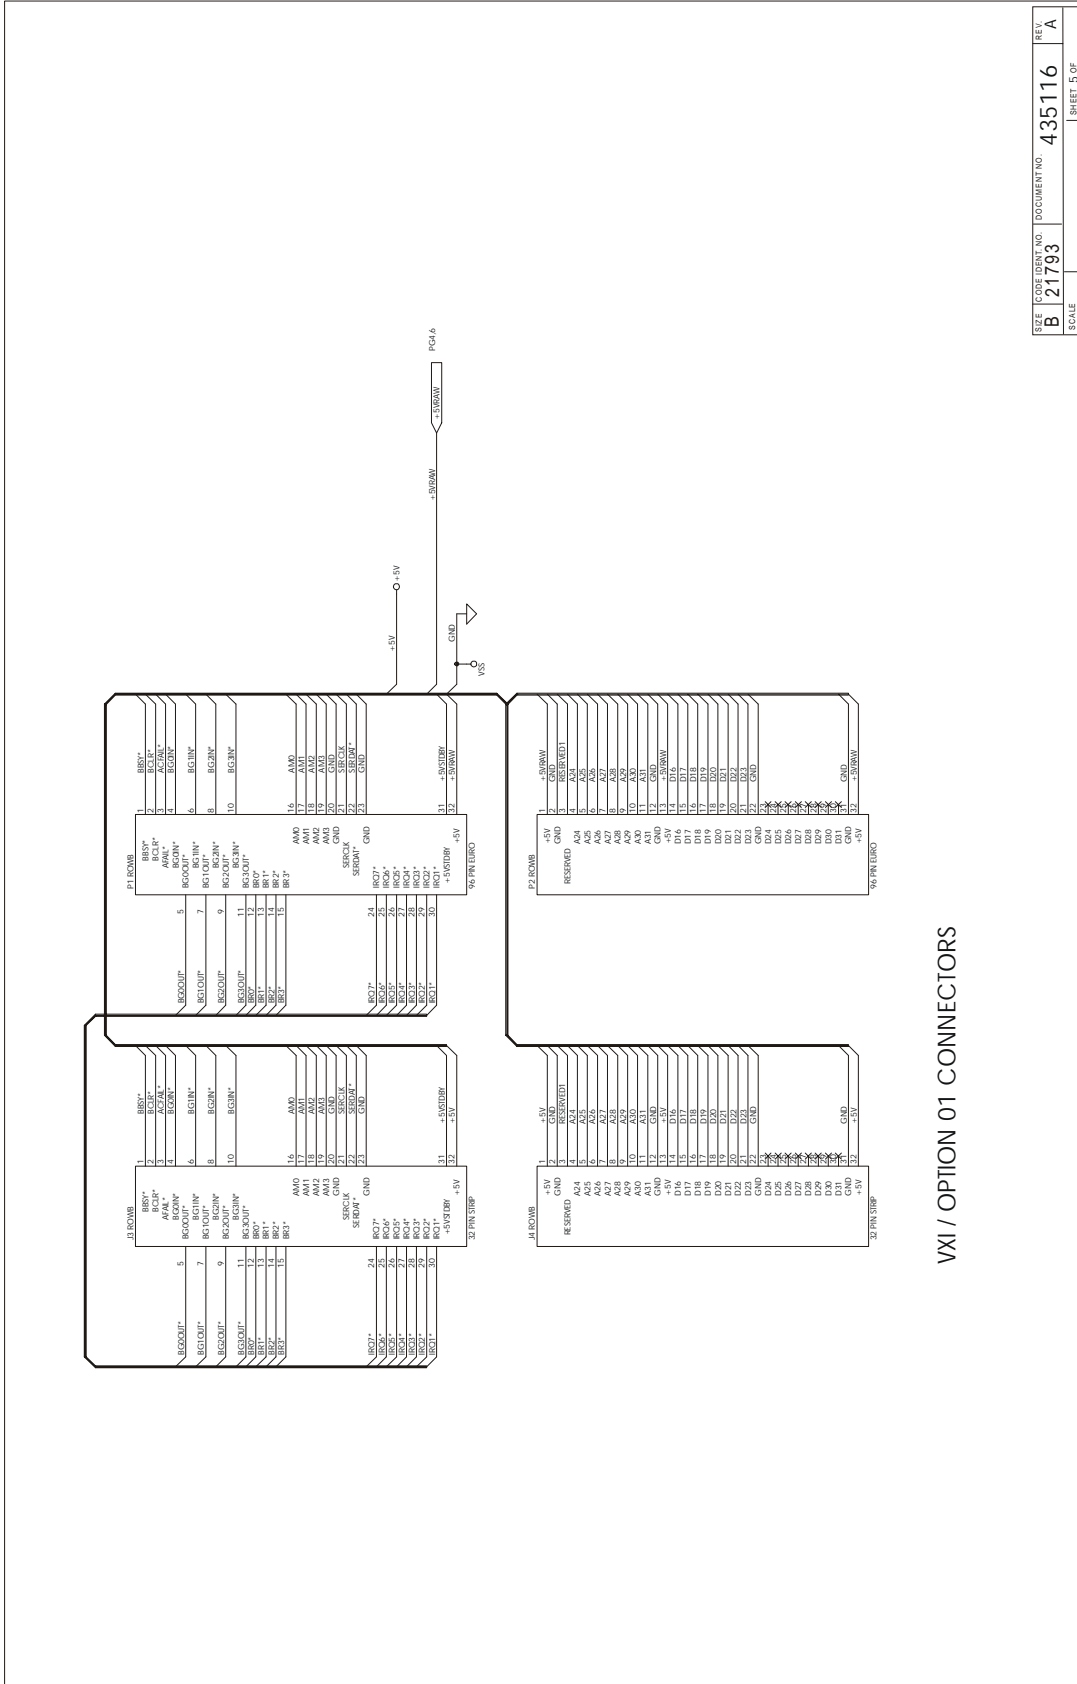


VXI / OPTION 01 CONNECTORS

SIZE	CODE	REV. NO.	DOCUMENT NO.	435116	REV.	A
B	21793					
SCALE				SHEET 5 OF		

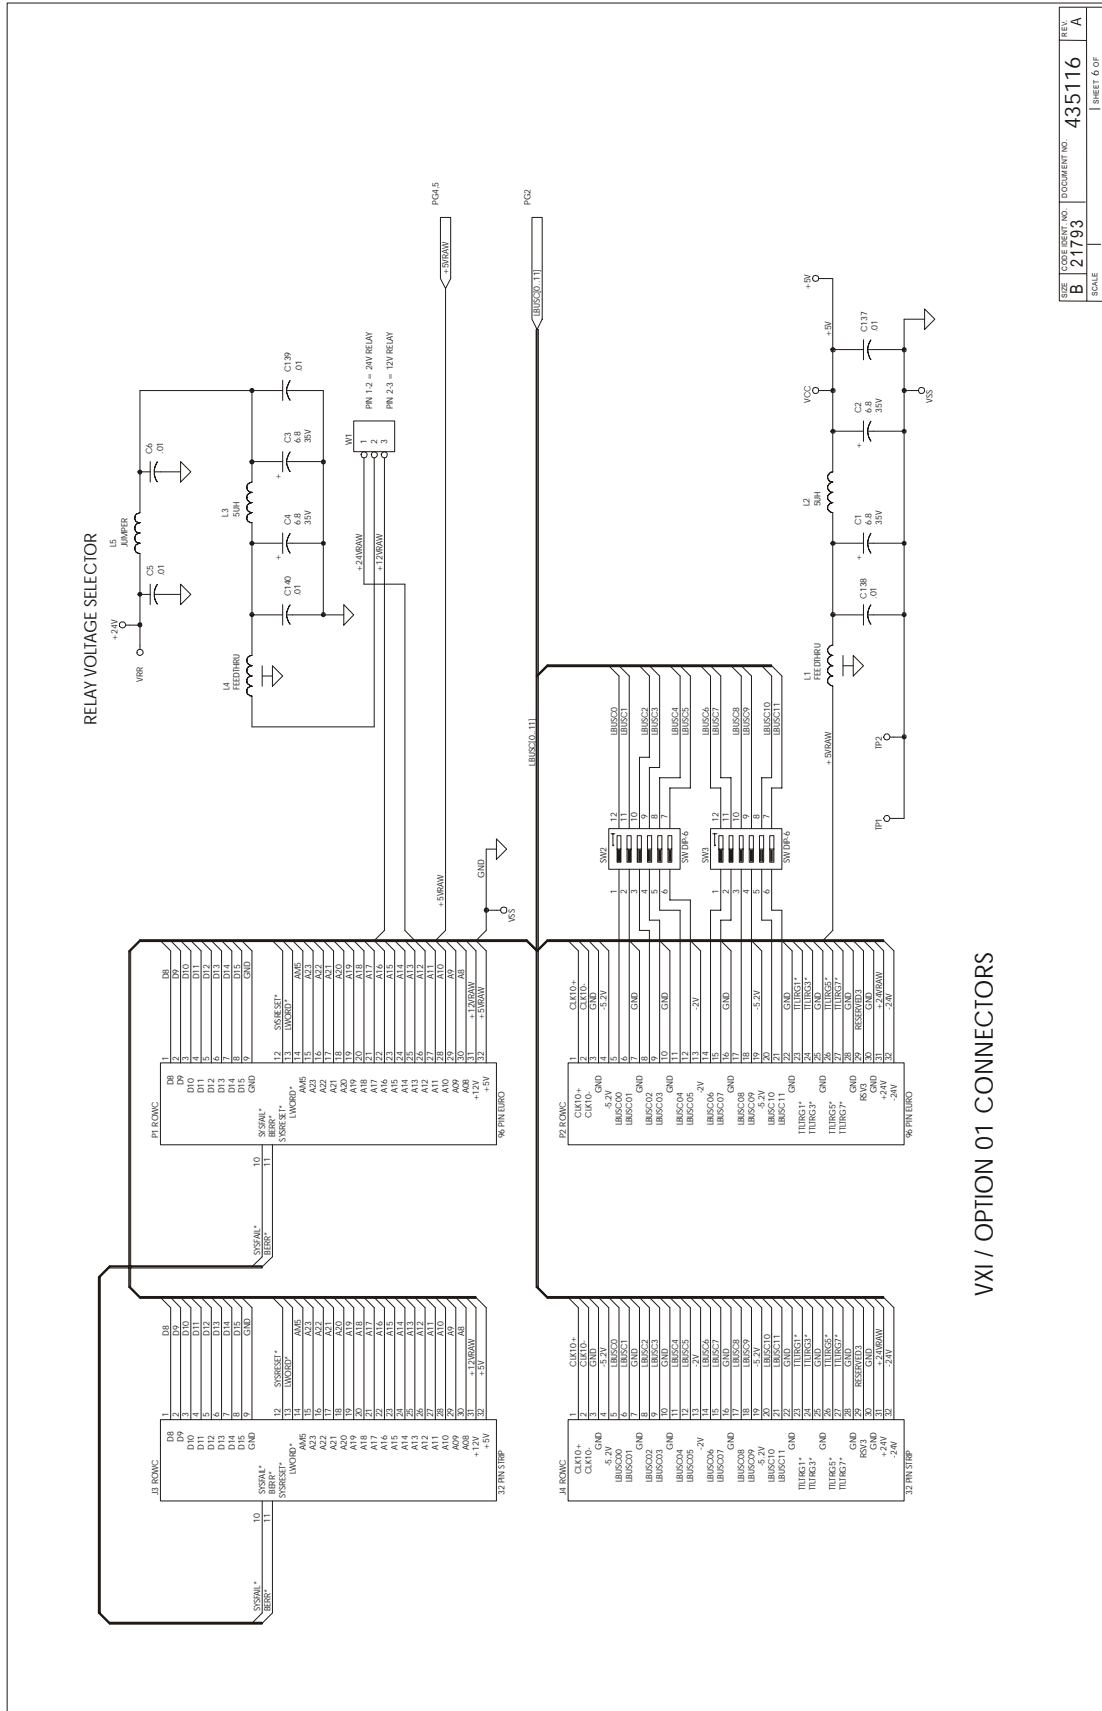

VXI / OPTION 01 CONNECTORS


FIG. NO.	435116	REV.	A
DOC. PART NO.	21793	DOCUMENT NO.	435116
SCALE		SHEET	6 OF 6

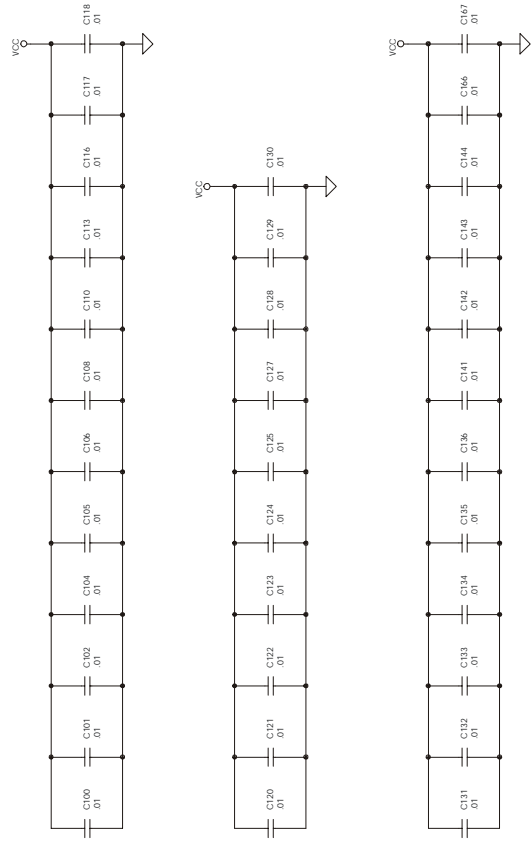


DECOUPLING CAPACITORS

SIZE	CODE	REV. NO.	DOCUMENT NO.	REV.
B	21793		435116	A
SCALE			SHEET 7 OF	



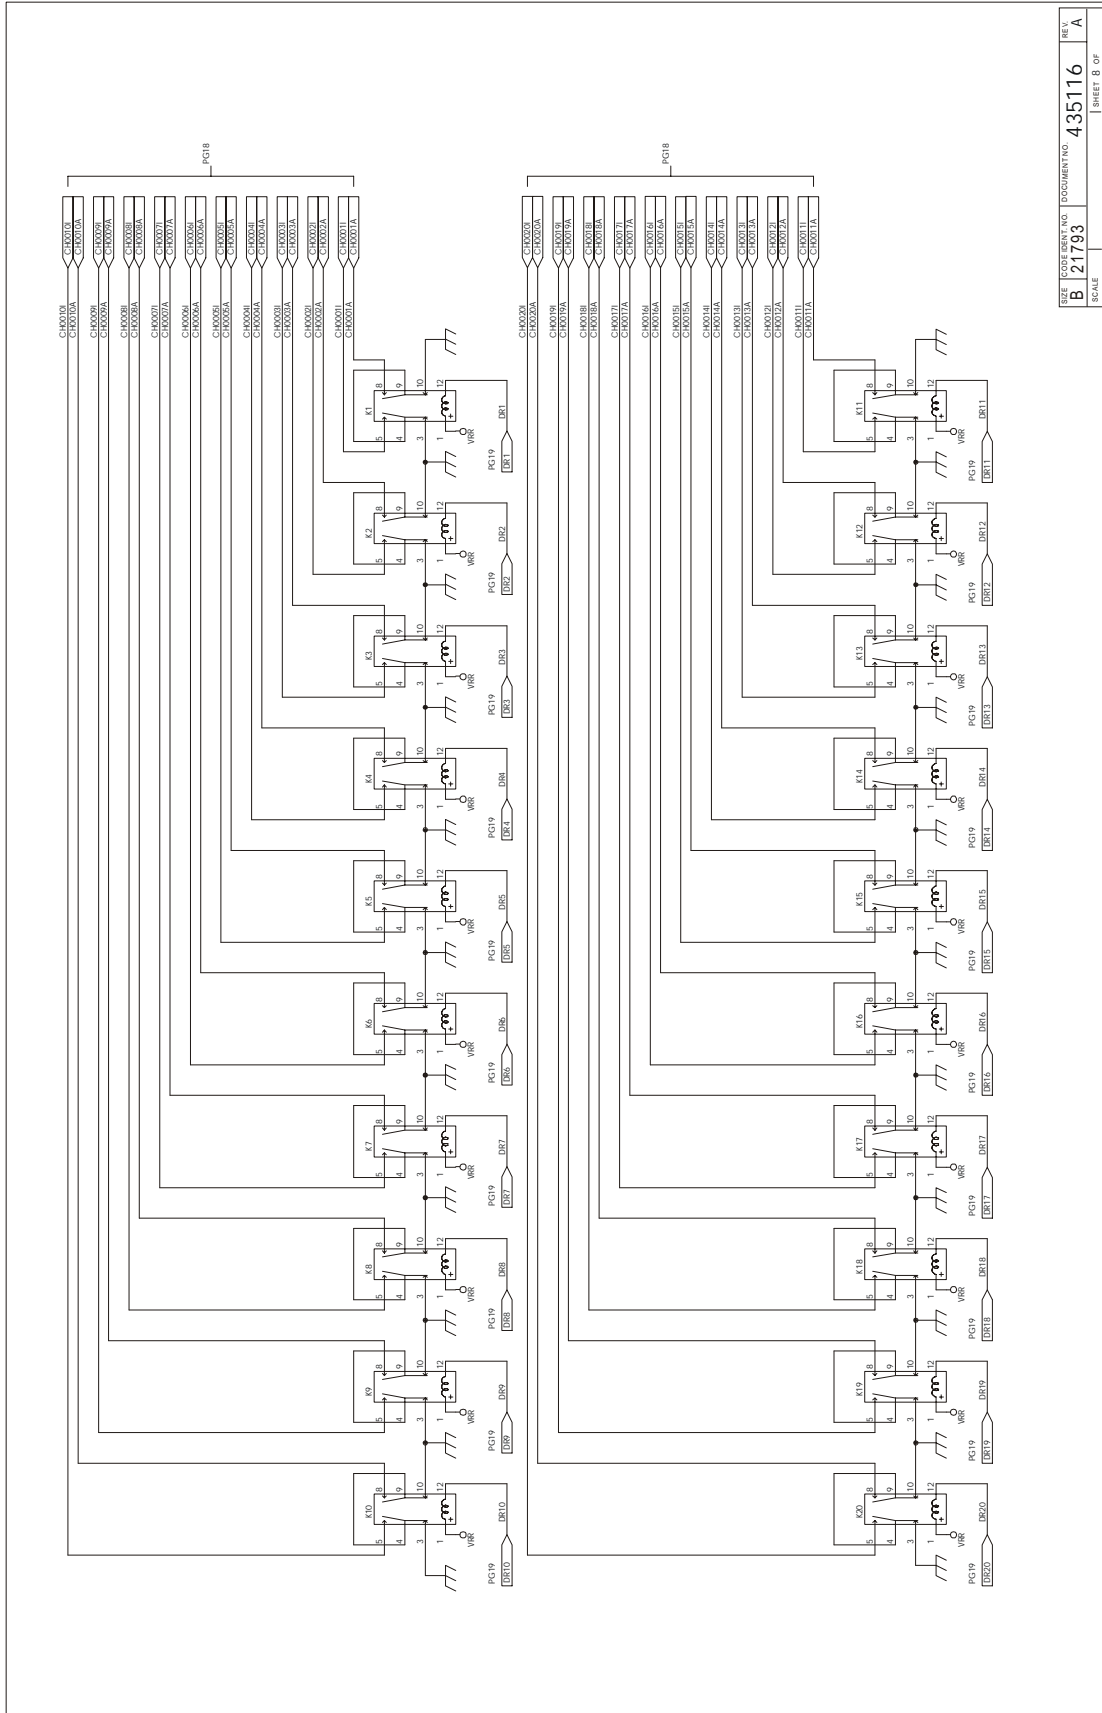


SIZE: FC02 BREV. NO. DOCUMENTING: 435116 REV. A  
B 21793  
SCALE: SHEET 8 OF

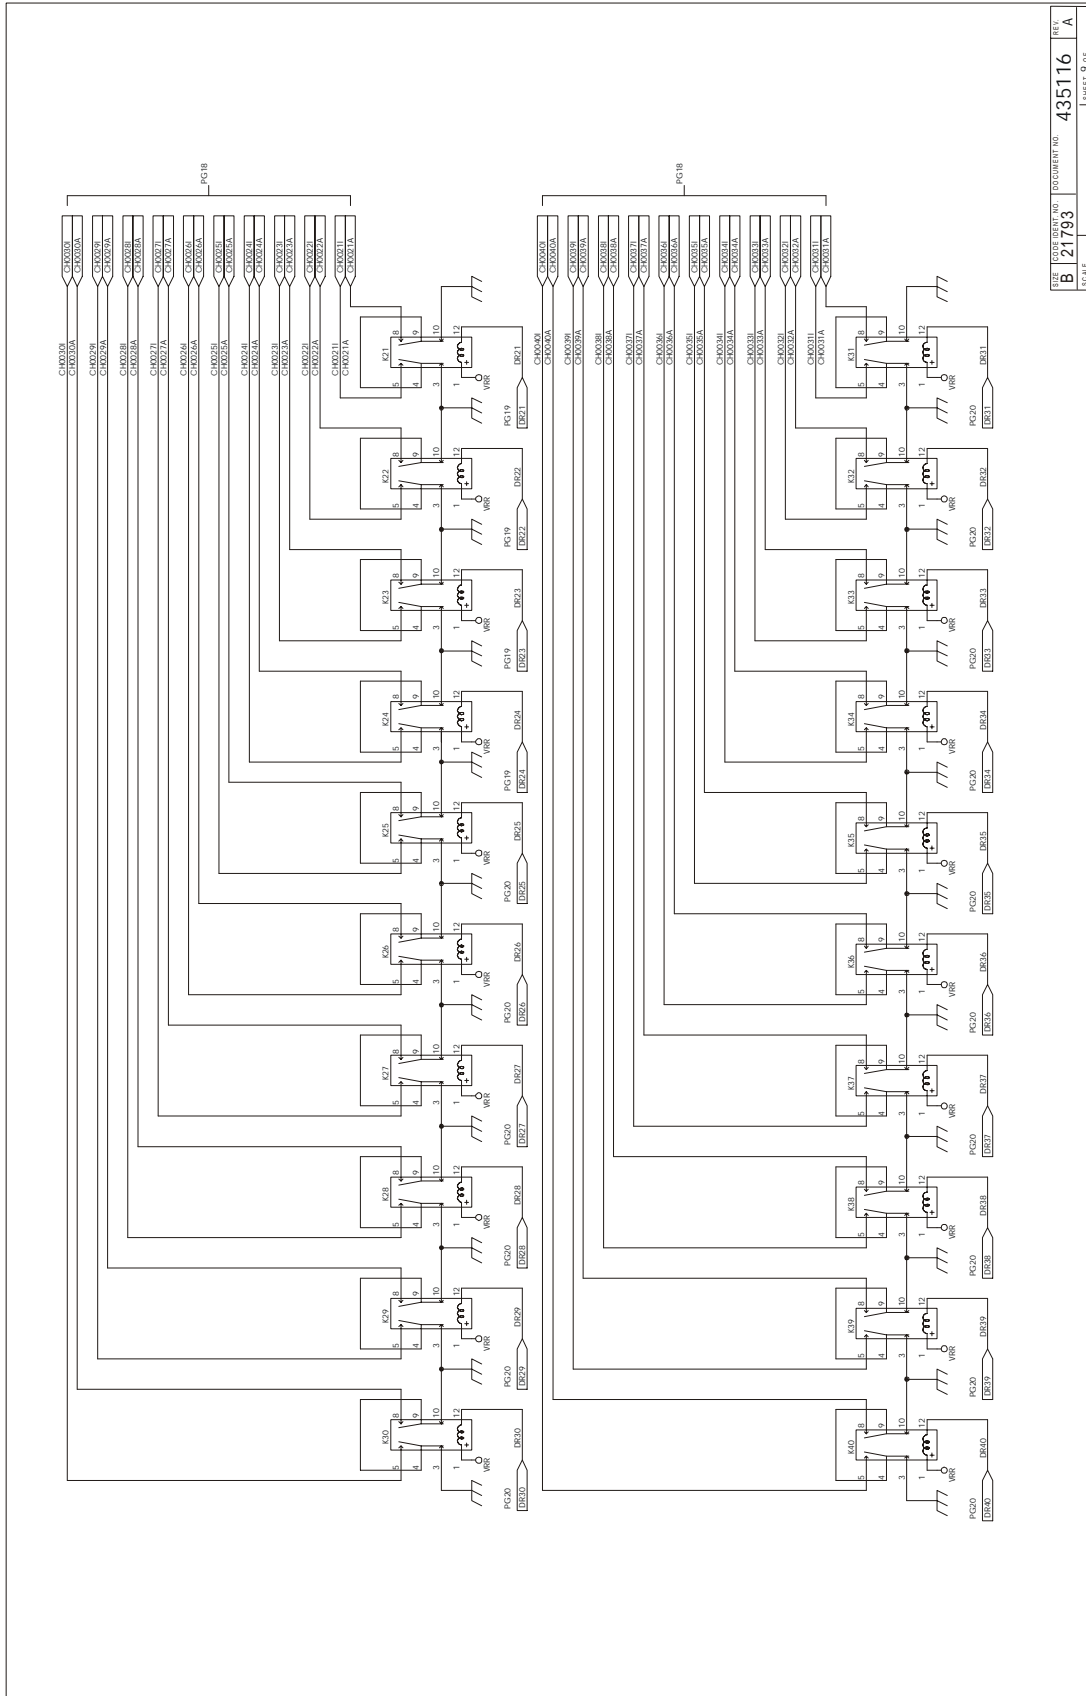


REV	DESCRIPTION	DOCUMENT NO.	REV
B	21793	435116	A
SCALE		SHEET 9 OF	




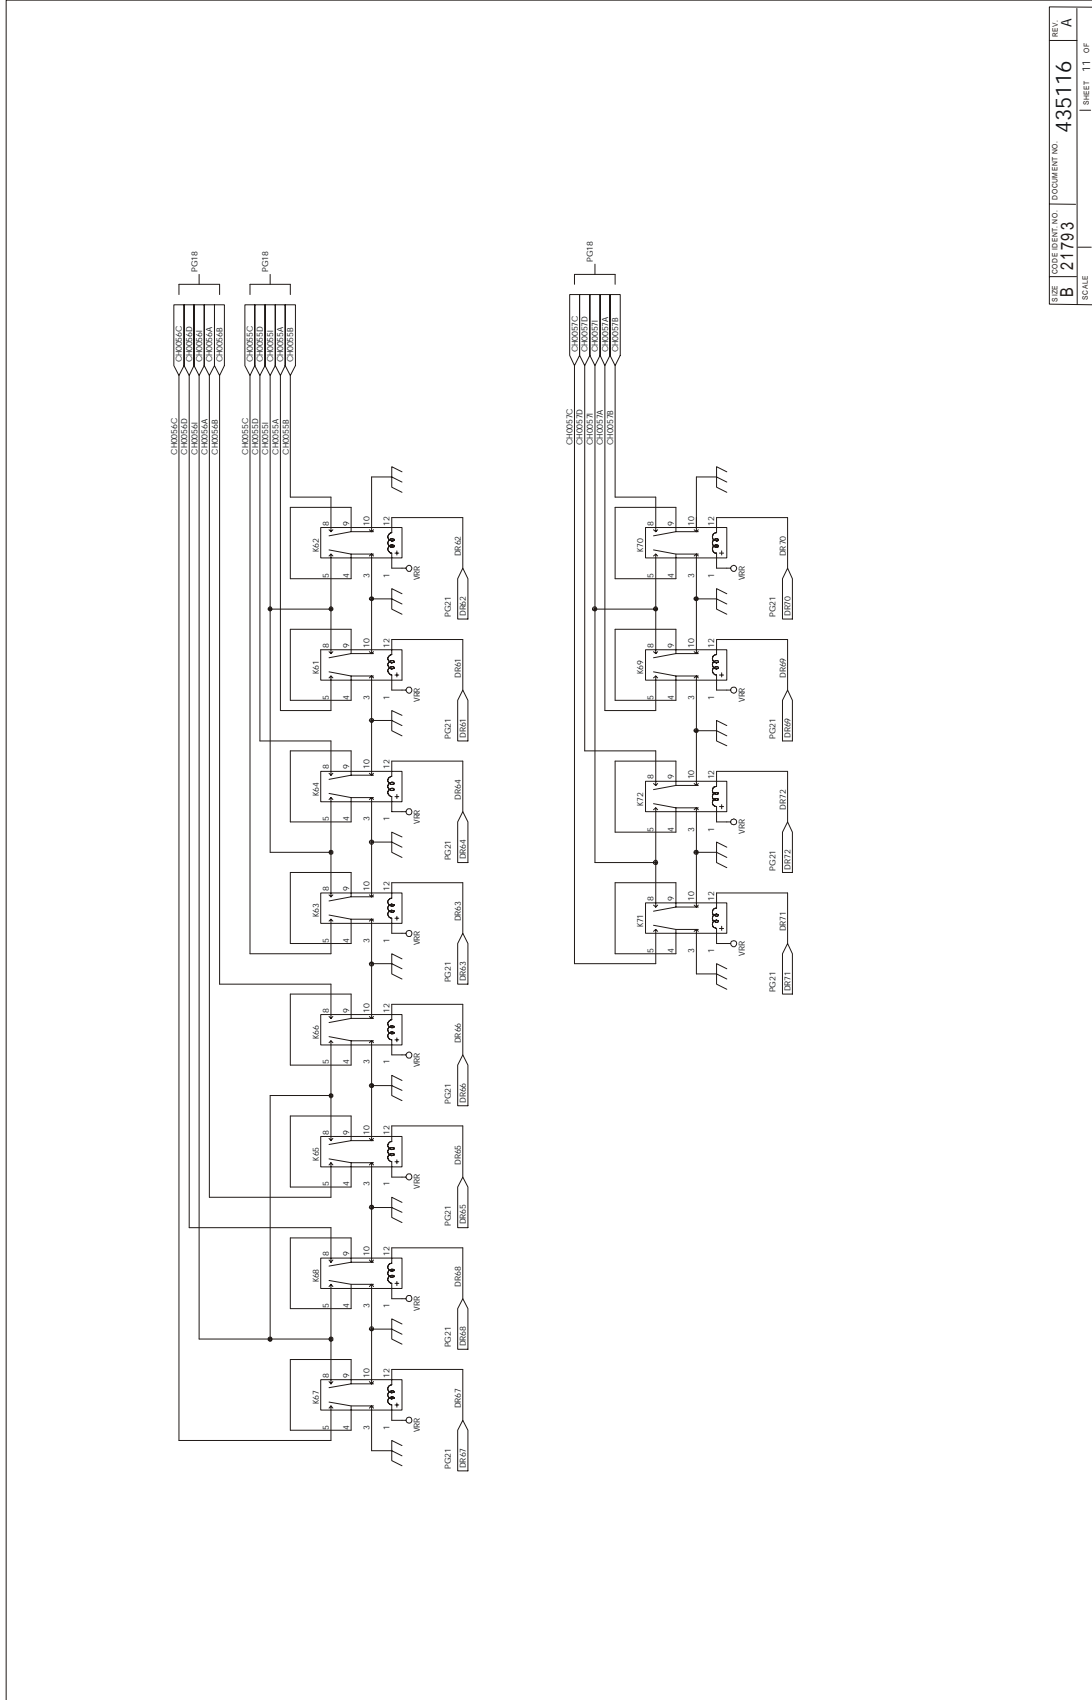


SIZE	CODE	IDENT NO.	DOCUMENT NO.	REV.
B	21793		435116	A
SCALE				SHEET 11 OF

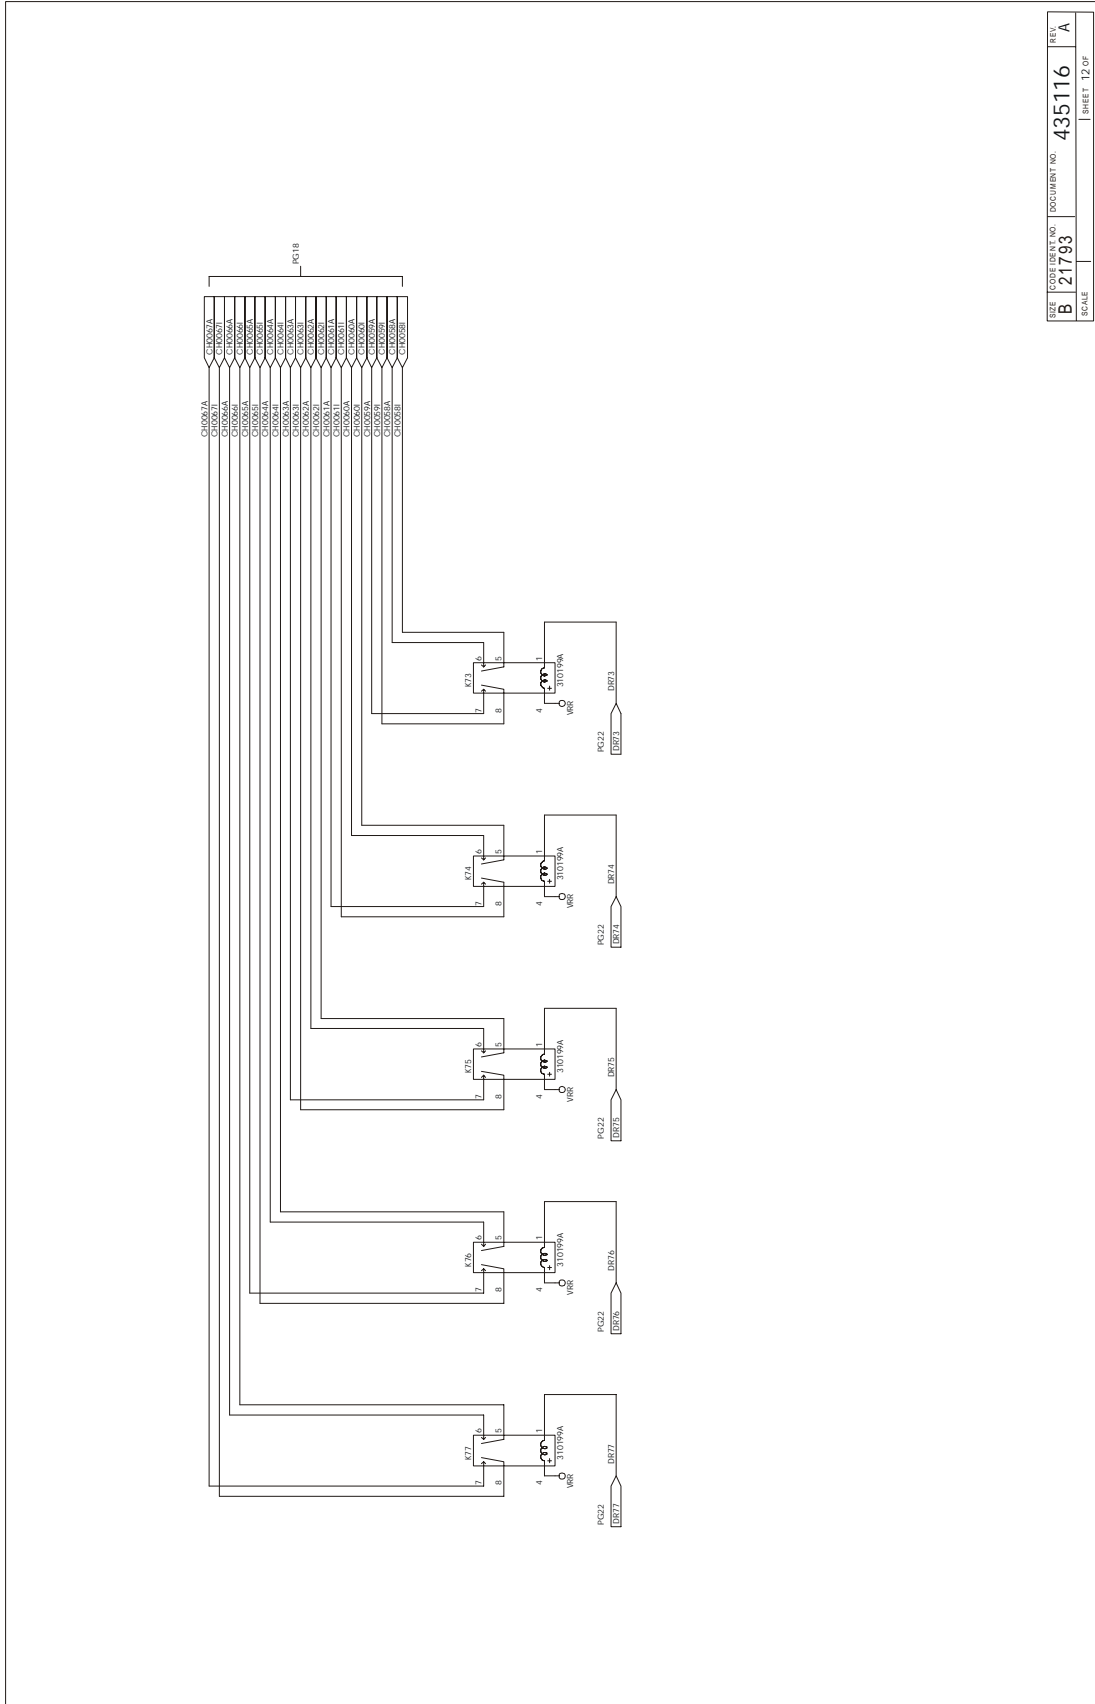


SIZE	CODE IDENT NO	DOCUMENT NO.	435116	REV.	A
B	21793				
SCALE			SHEET 12 OF		

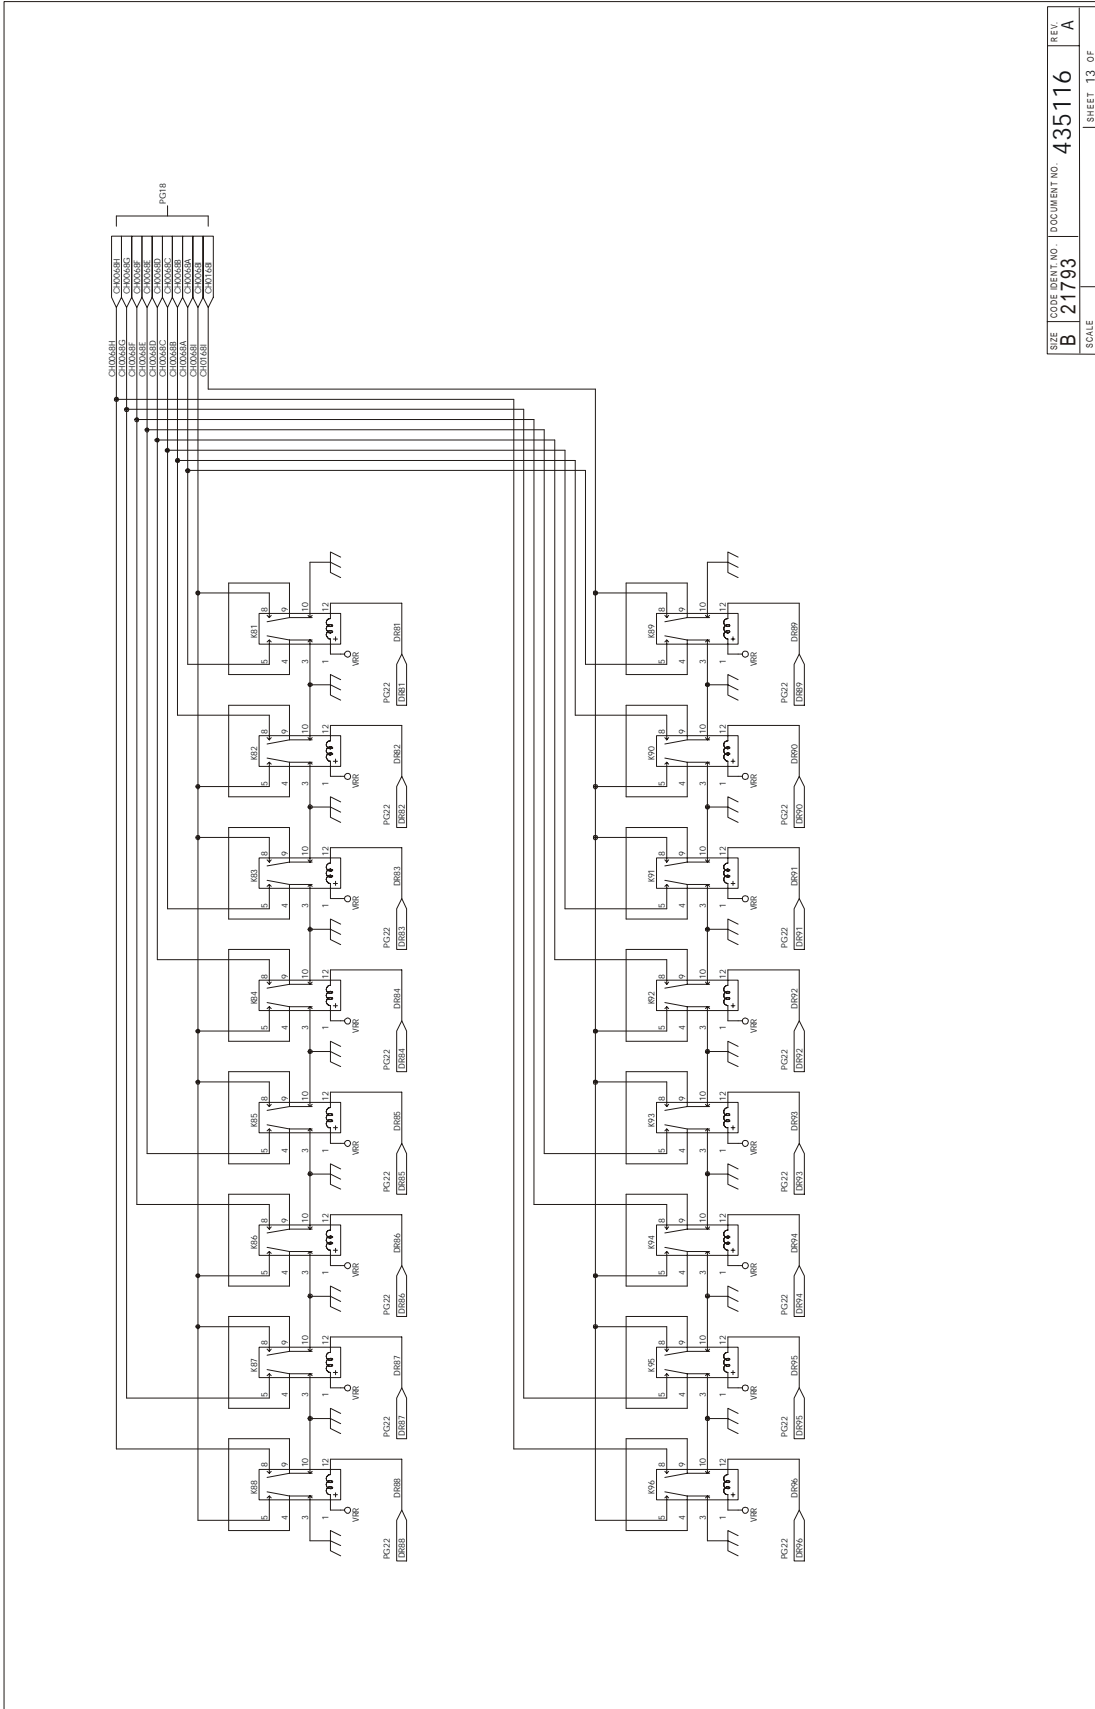

SIZE	CODE IDENT. NO.	DOCUMENT NO.	435116	REV.	A
B	21793				
SCALE					SHEET 13 OF

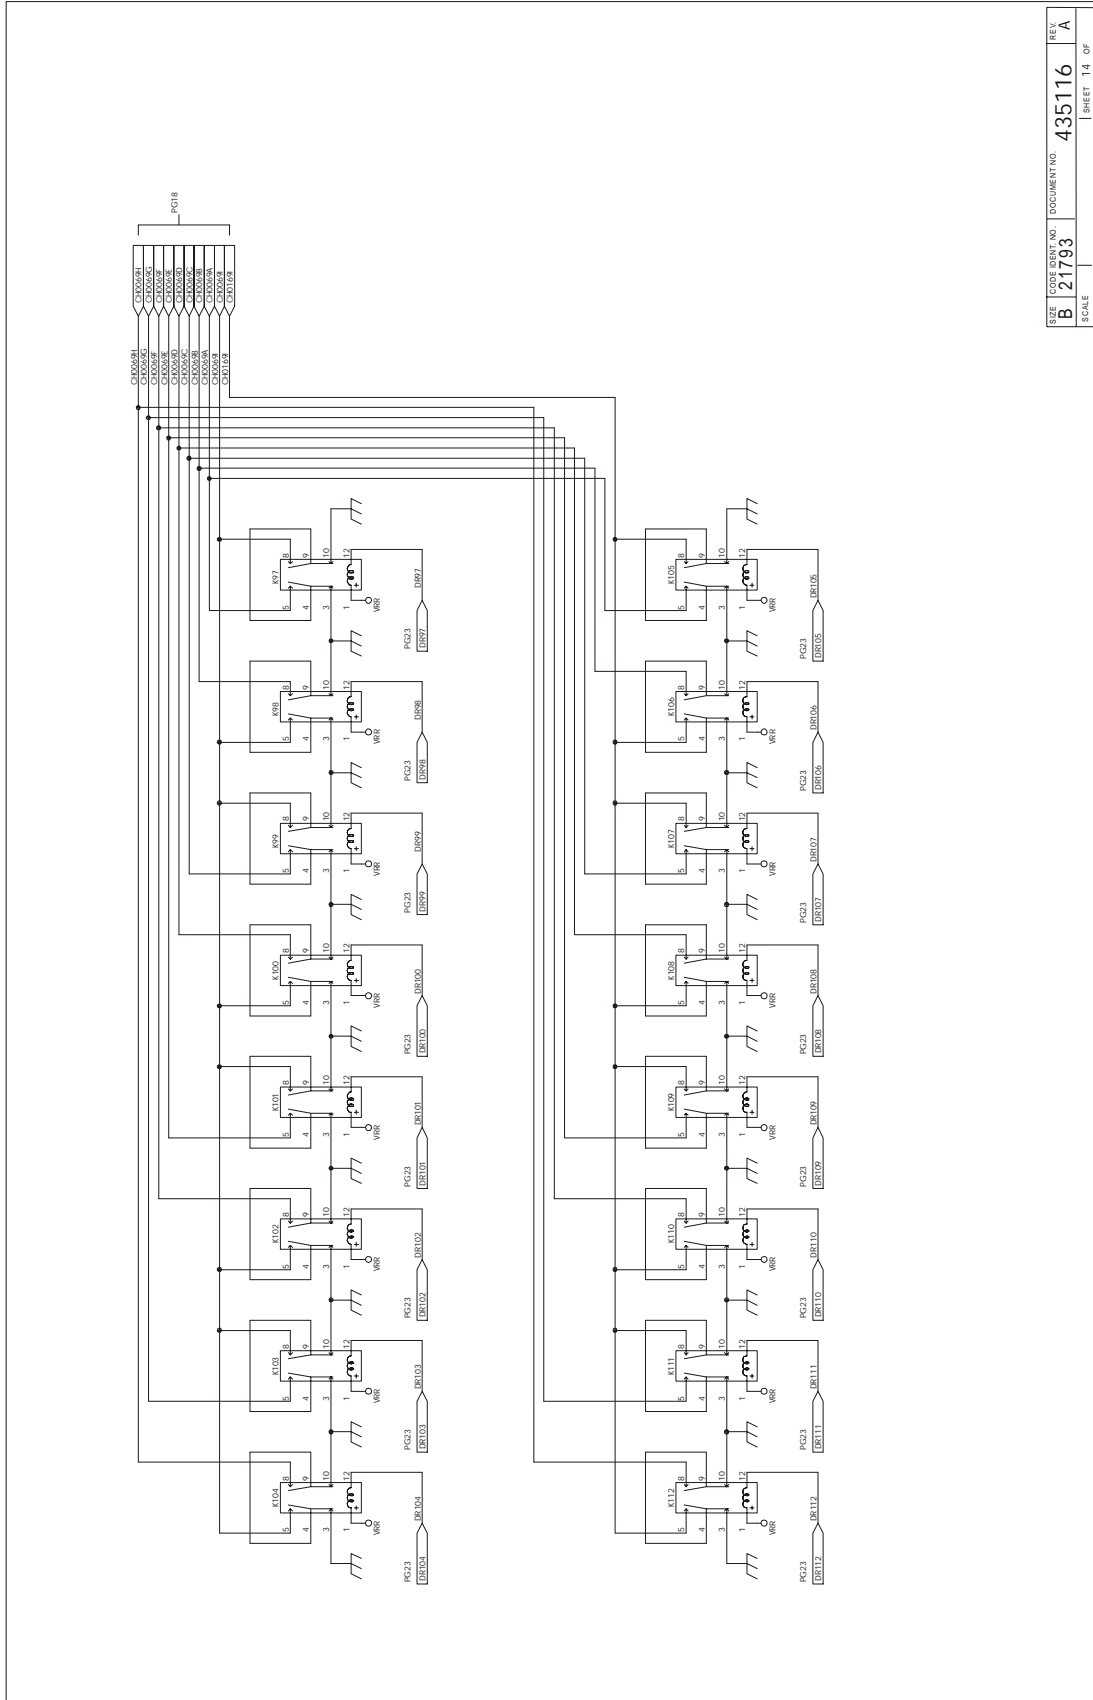


SIZE B  
 CODE IDENT NO. 21793  
 DOCUMENT NO. 435116  
 REV. A  
 SCALE SHEET 14 OF

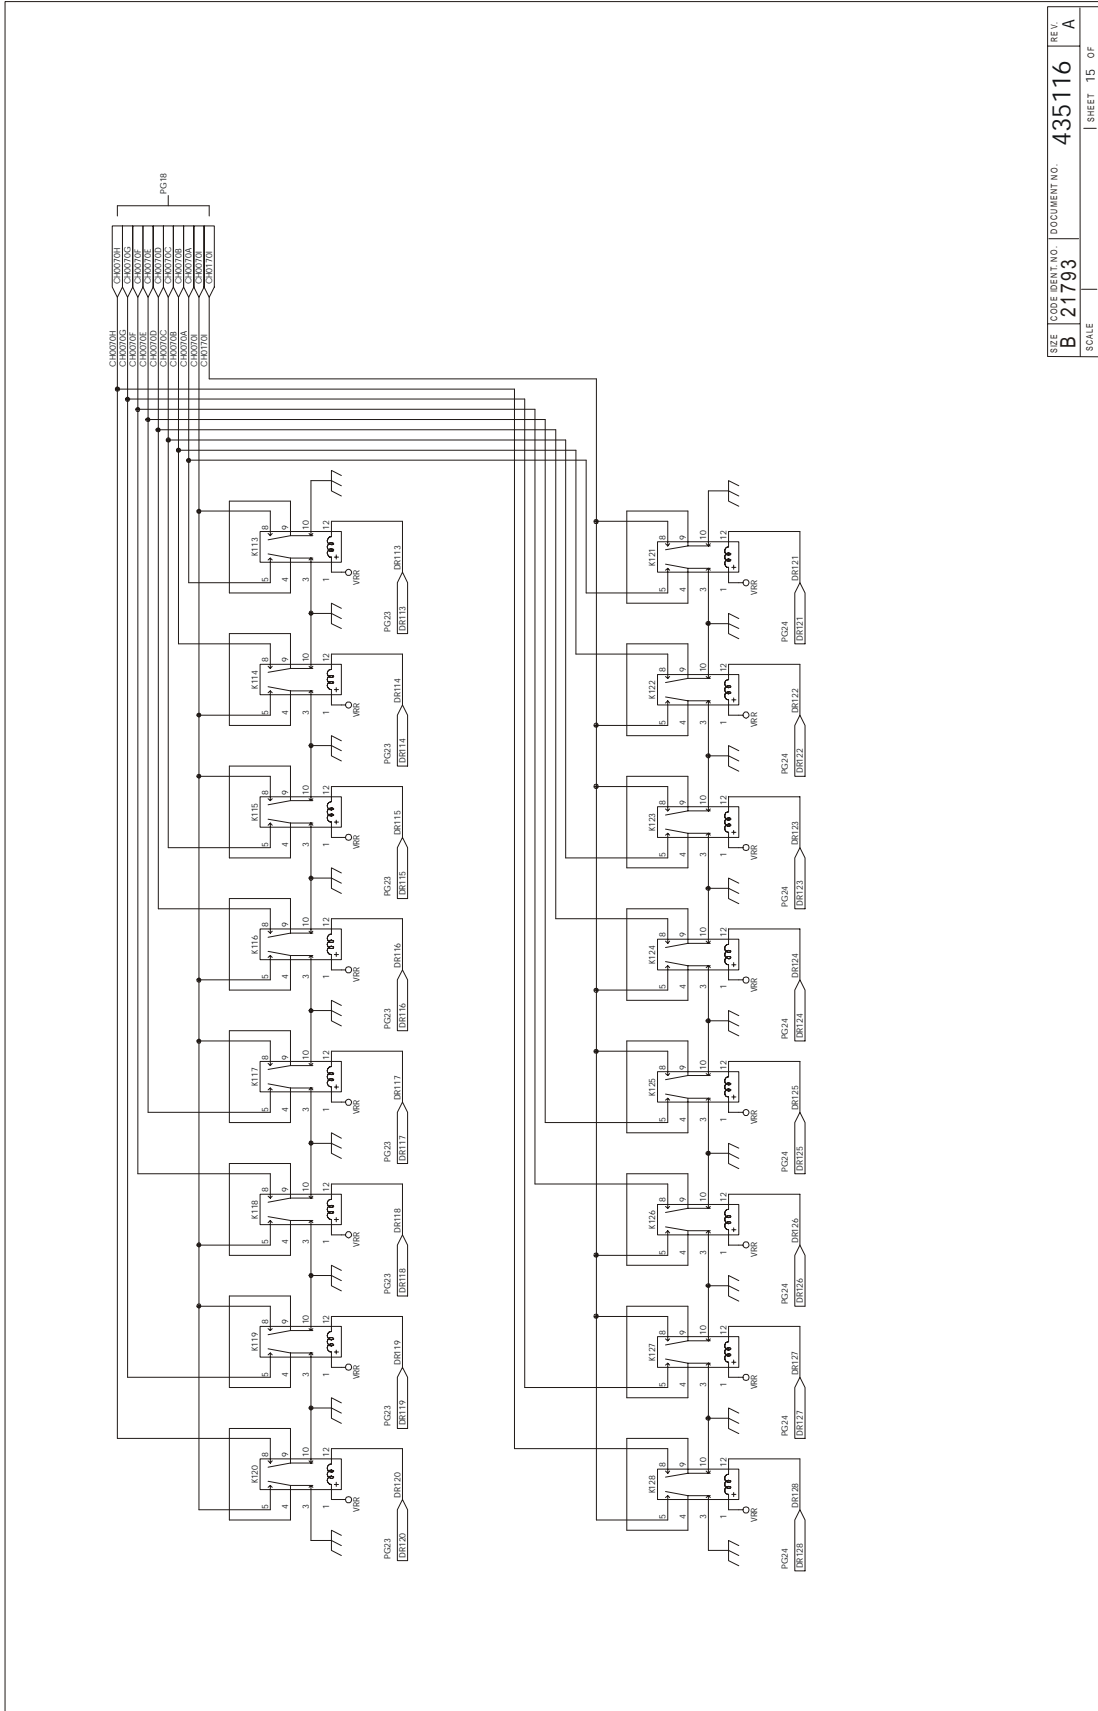


SIZE	PG24	SCALE	REV
B	21793		A
DOCUMENT NO. 435116		REV	
		SHEET 15 OF	









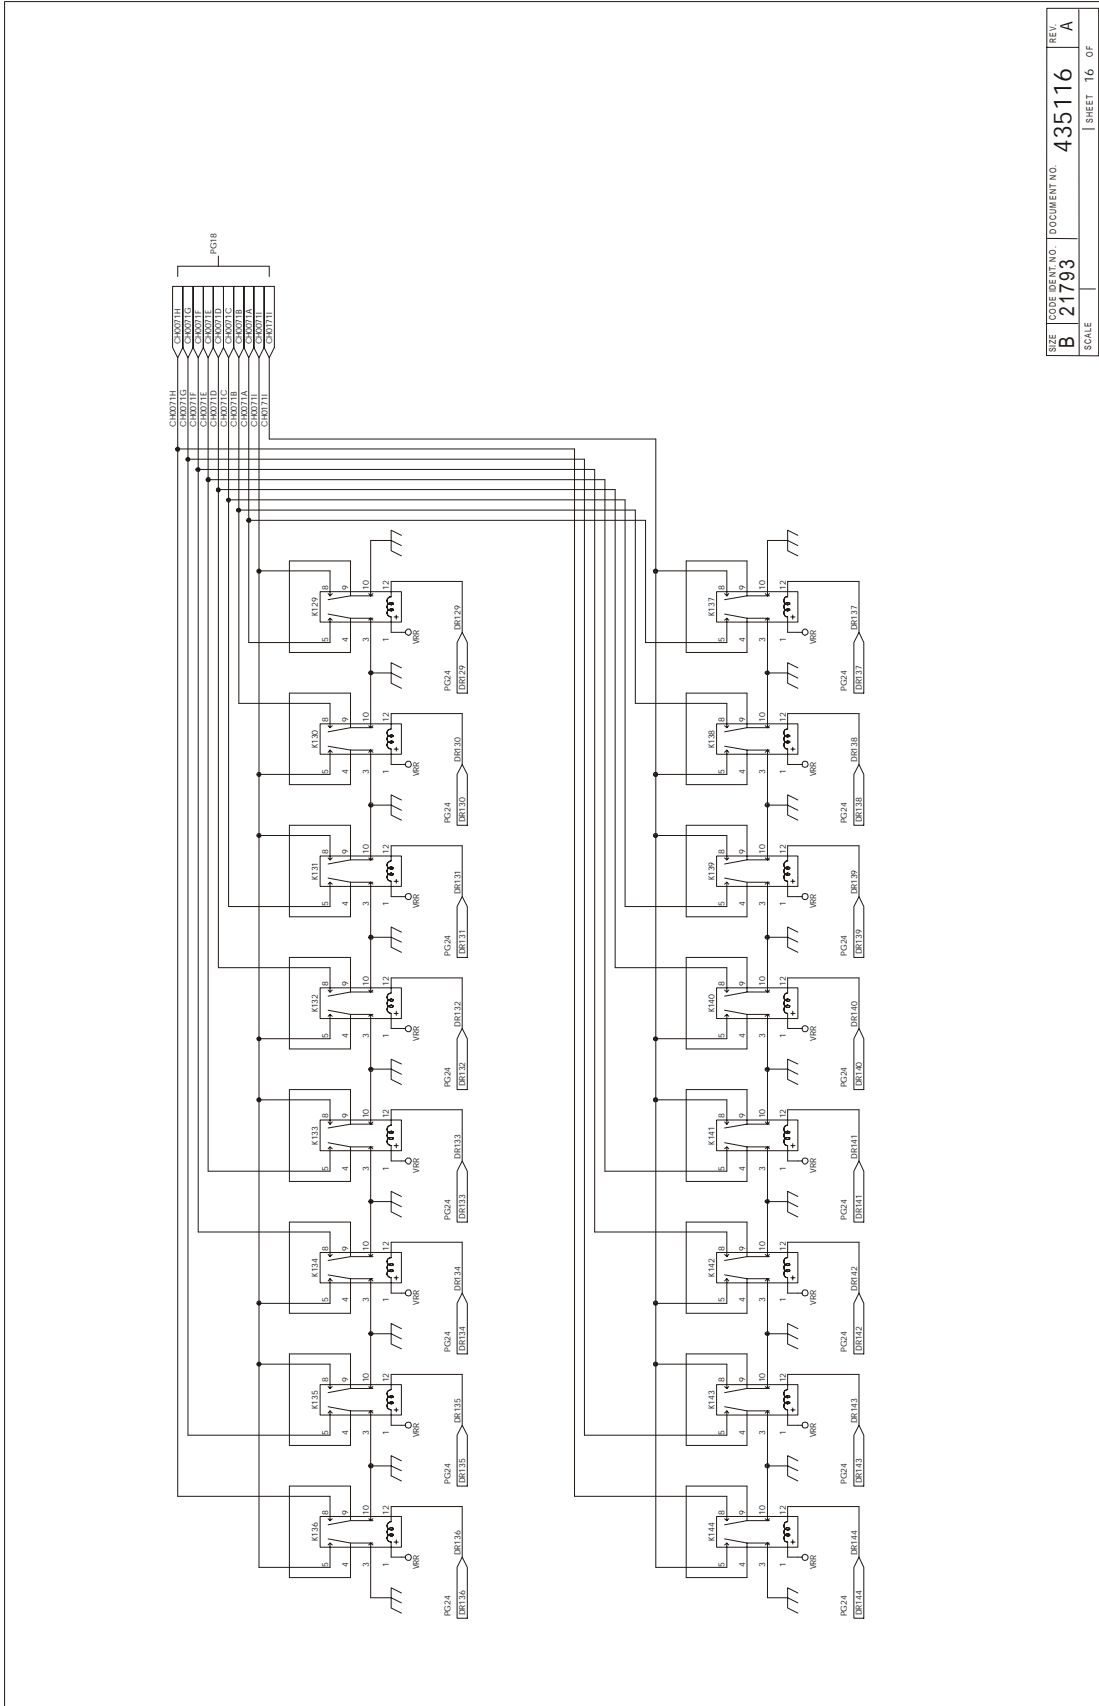

SIZE	PG&E SCALE NO.	DOCUMENT NO.	REV.
B	21793	435116	A
SCALE		SHEET 16 OF	

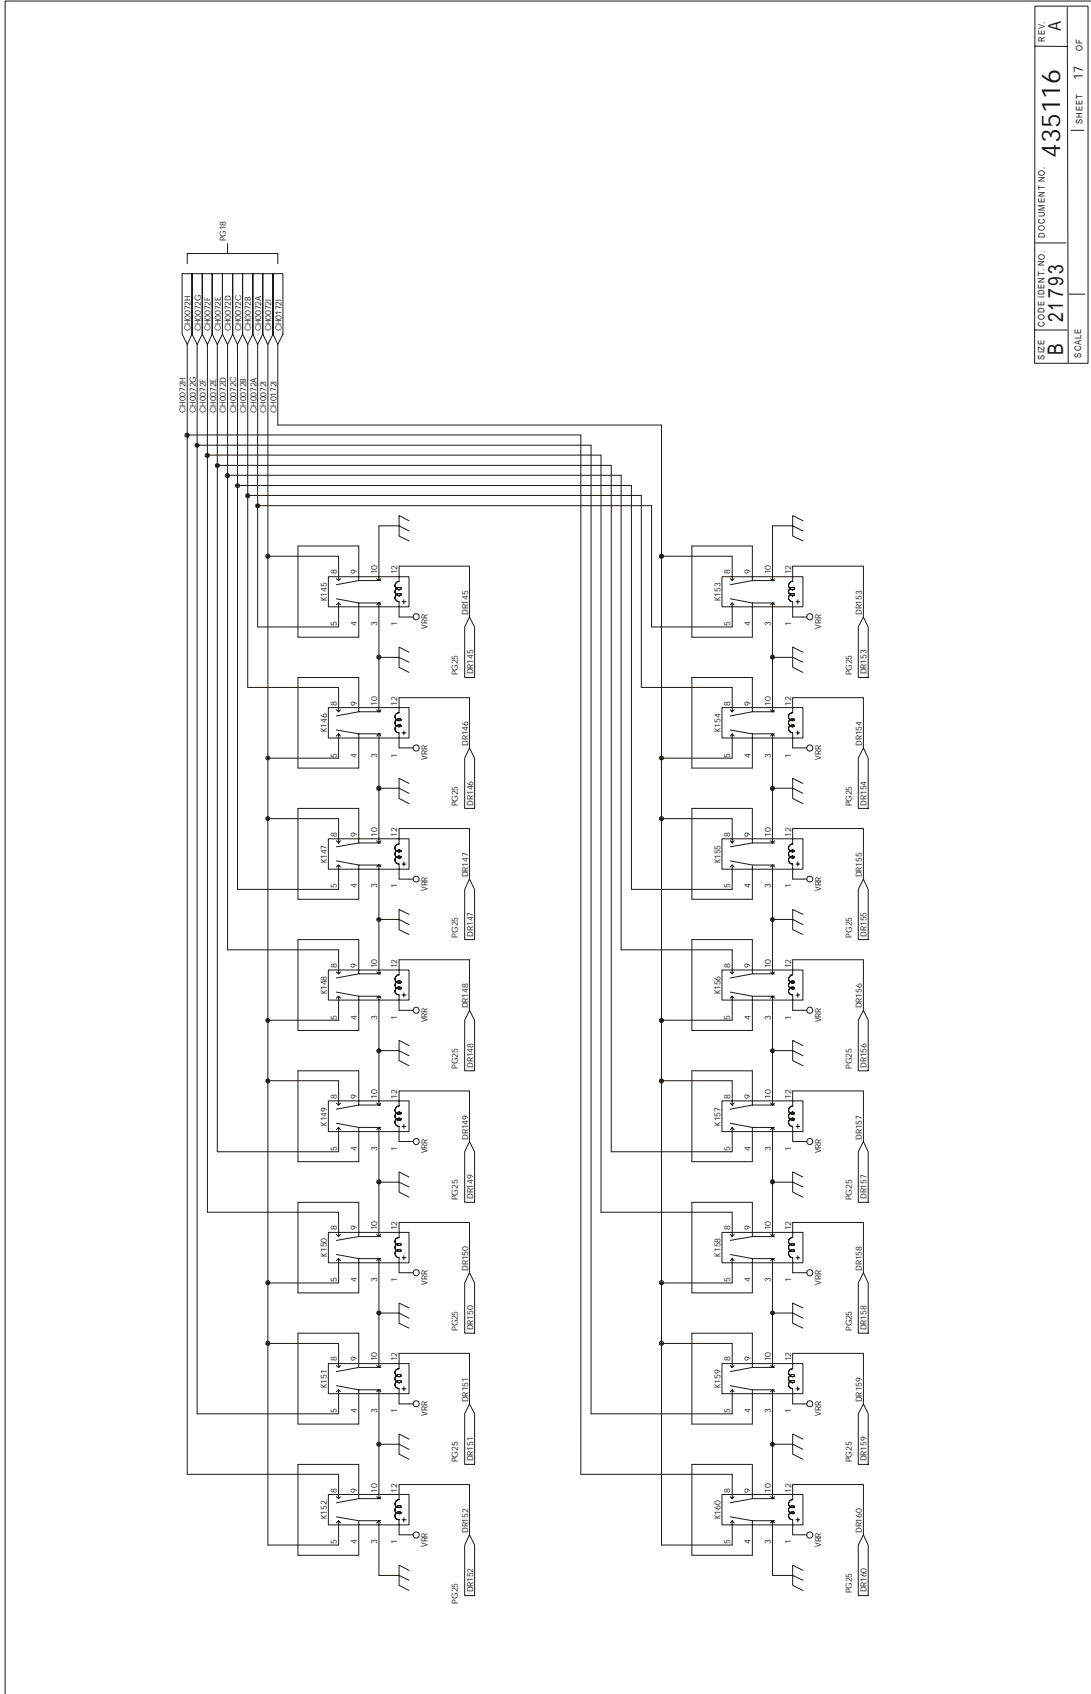


SIZE	CODE IDENT. NO.	DOCUMENT NO.	REV.
B	21793	435116	A
SCALE	SHEET 17		OF

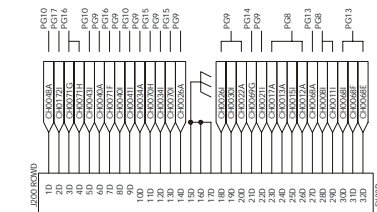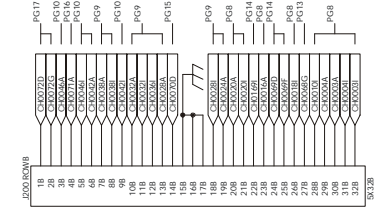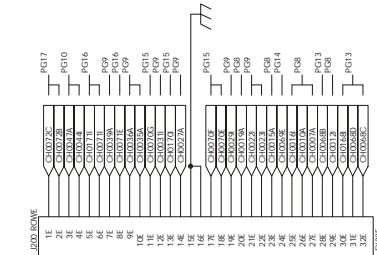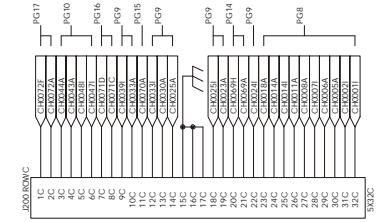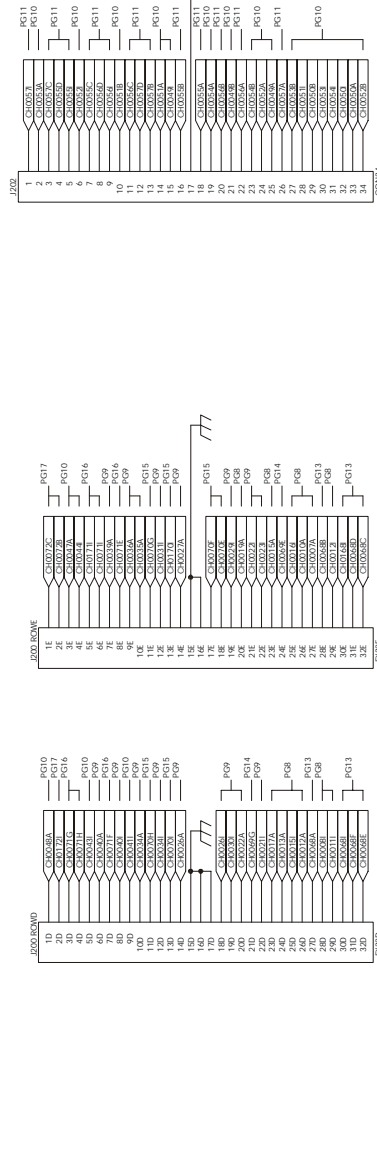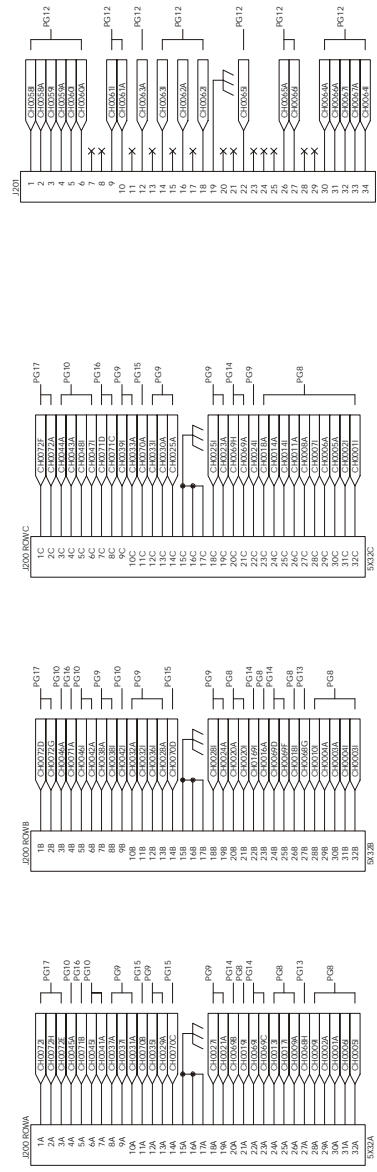


FRONT PANEL CONNECTORS

SIZE	CODE IDENT. NO.	DOCUMENT NO.	REV.
B	21793	435116	A
SCALE			SHEET 18 OF

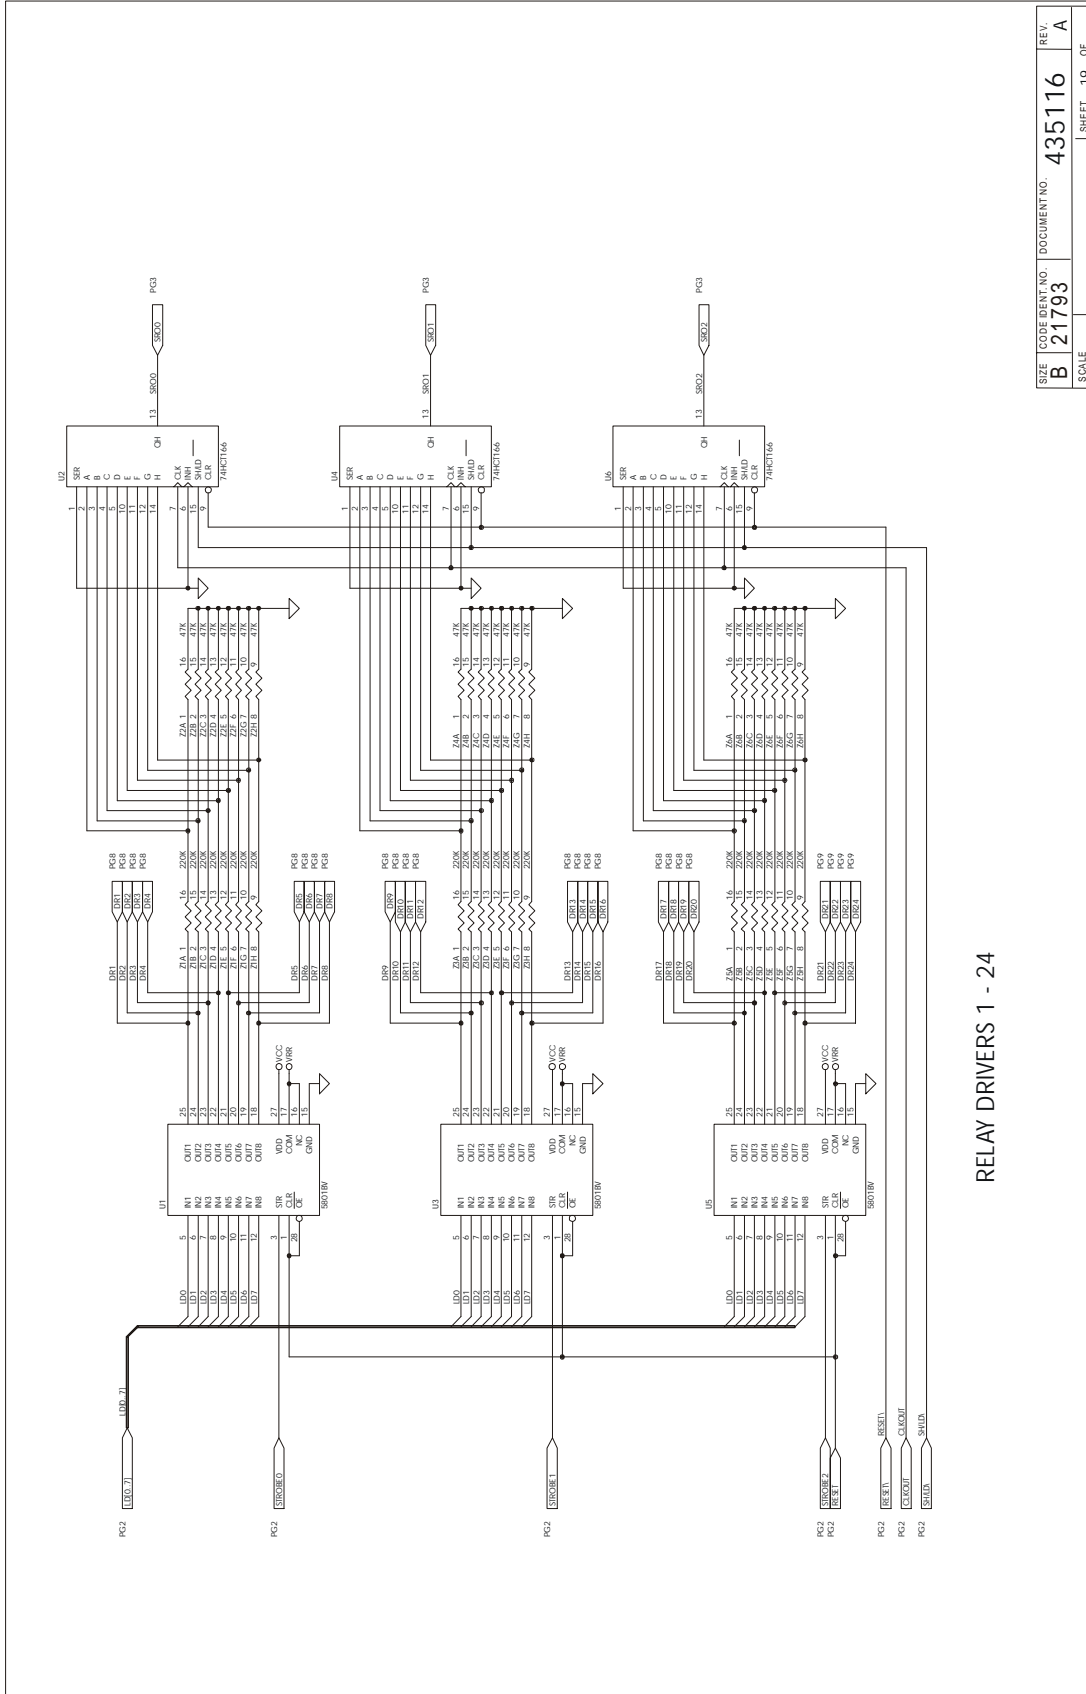


RELAY DRIVERS 1 - 24

SIZE	CODE IDENT. NO.	DOCUMENT NO.	REV.
B	21793	435116	A
SCALE	SHEET 19		OF

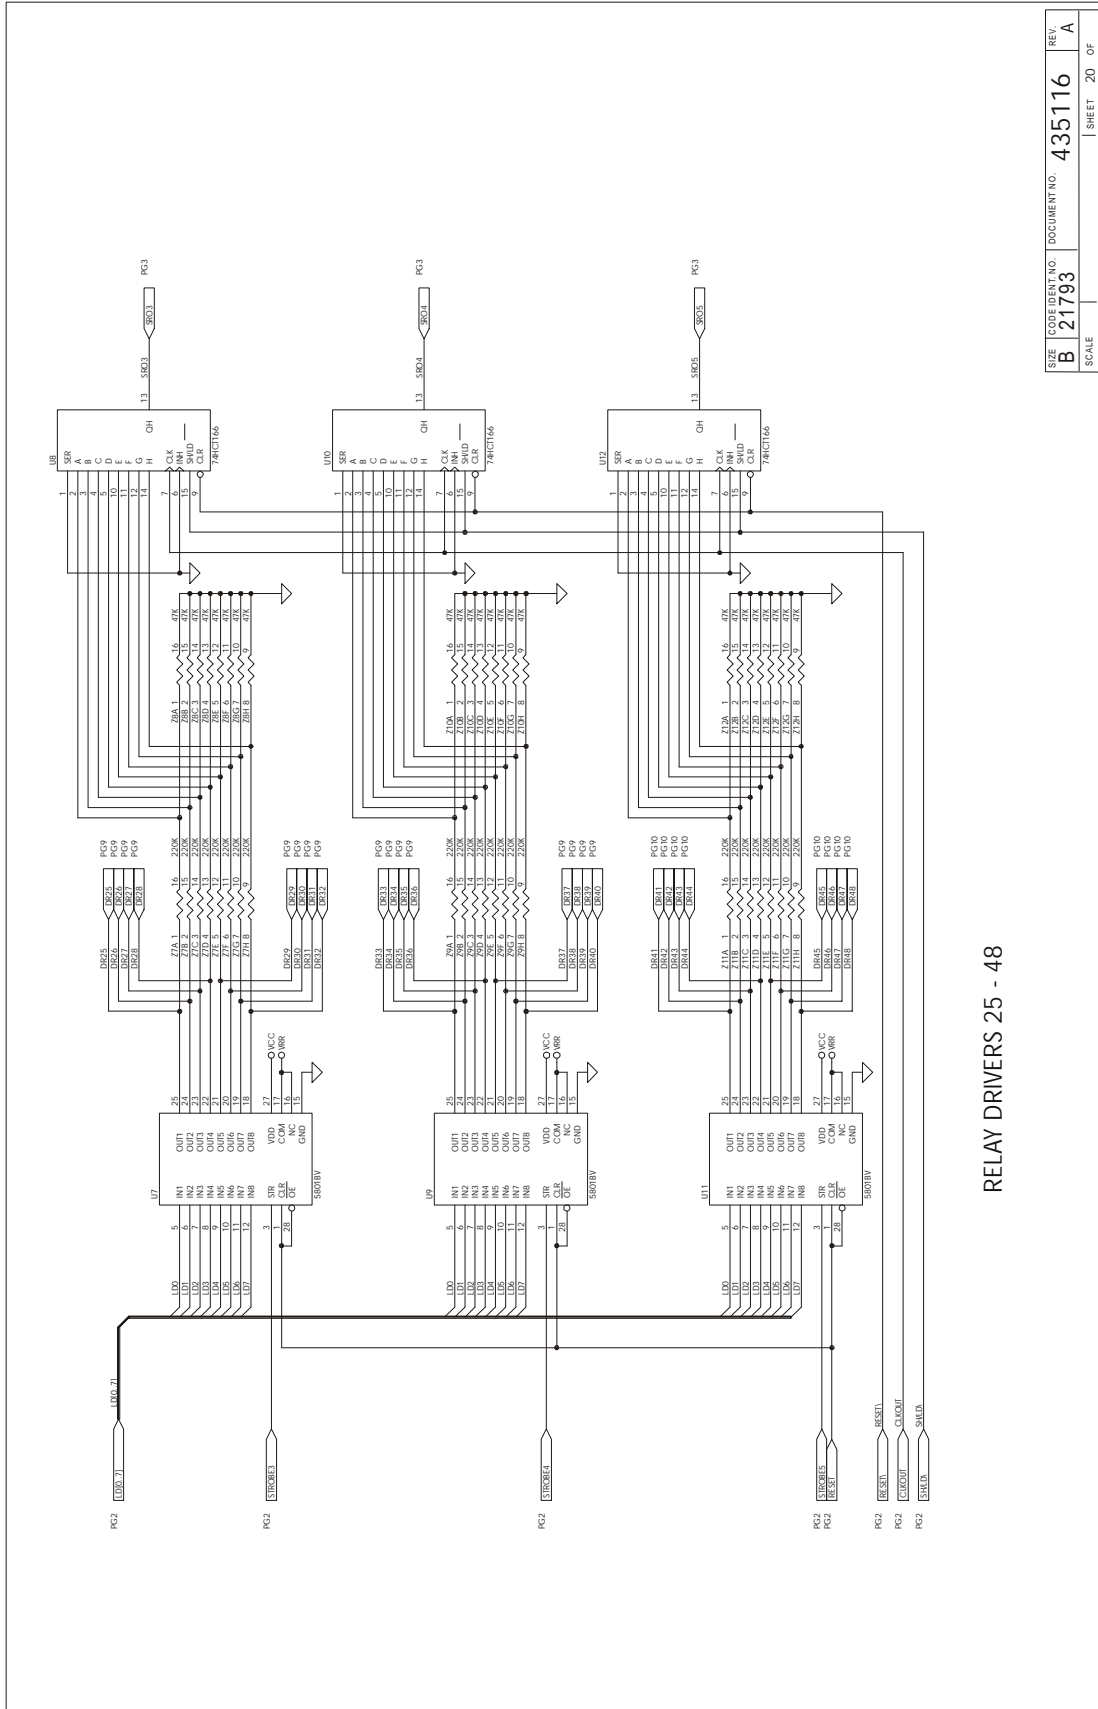


RELAY DRIVERS 25 - 48

SIZE	PGS/EAST NO.	DOCUMENT NO.	REV.
B	21793	435116	A
SCALE		SHEET	20 OF

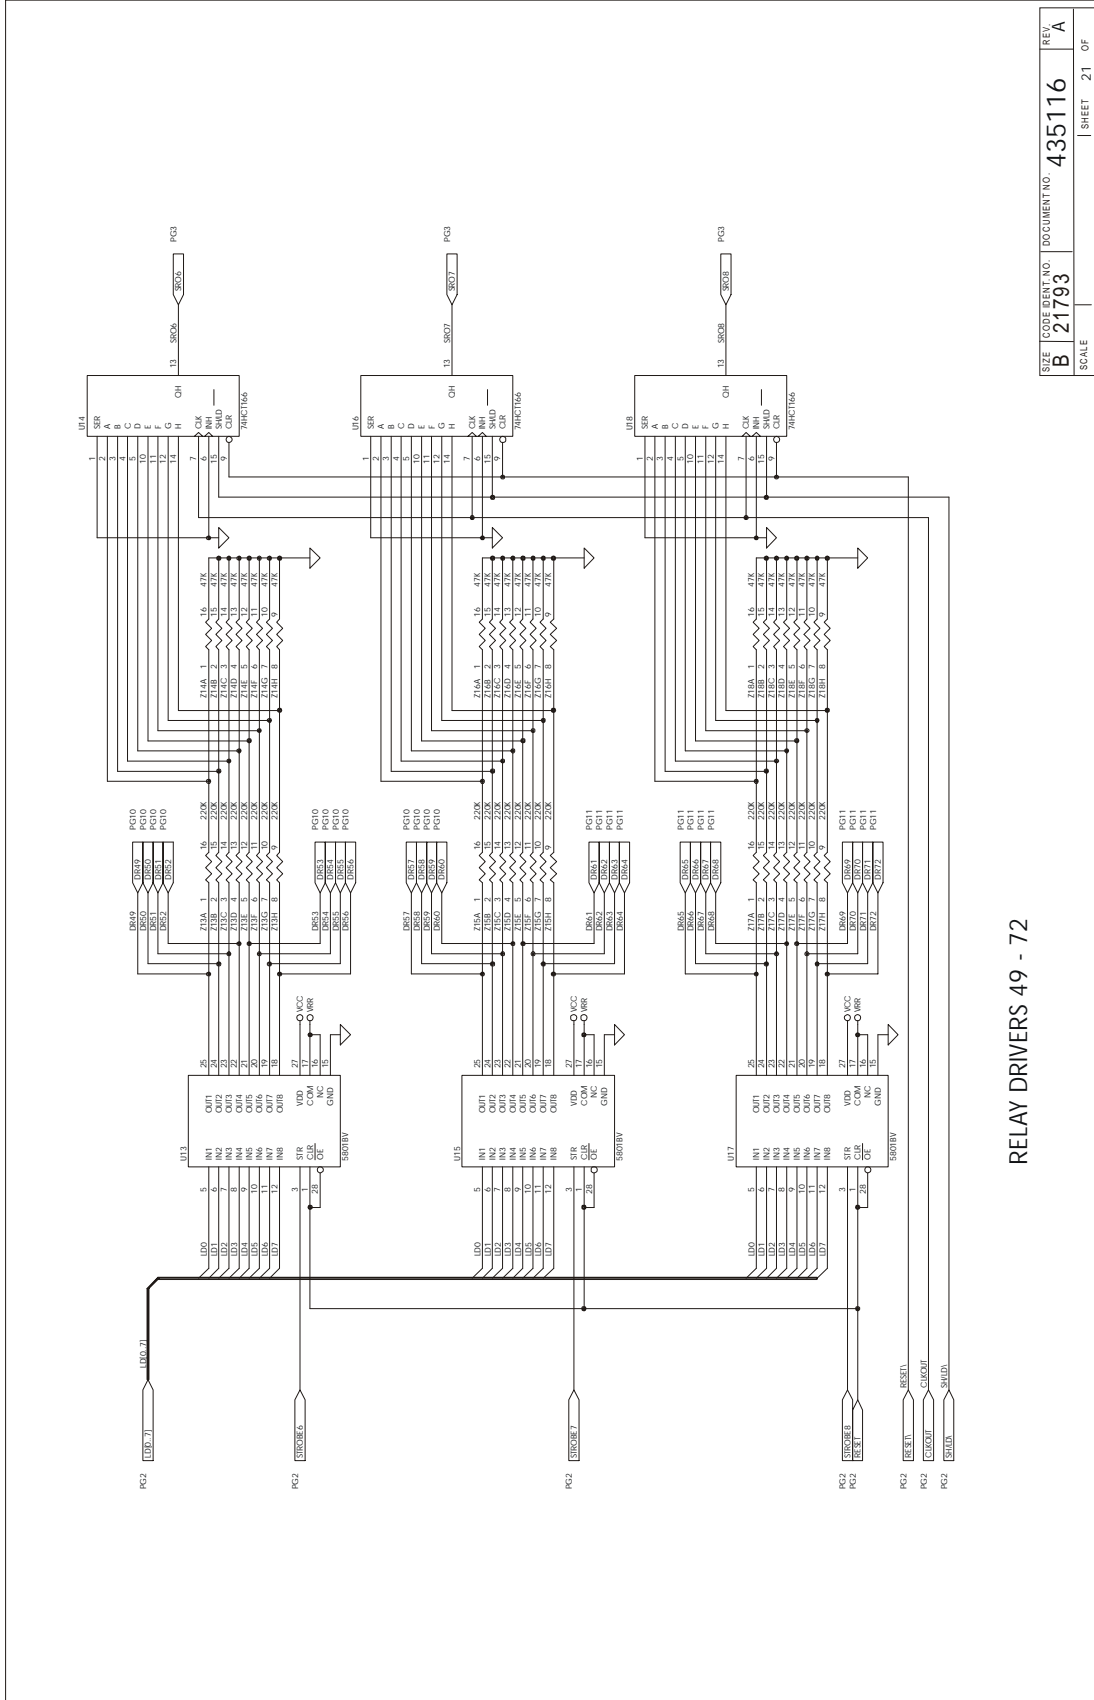


RELAY DRIVERS 49 - 72

SIZE	CODE IDENT. NO.	DOCUMENT NO.	REV.
B	21793	435116	A
SCALE	SHEET - 21		OF

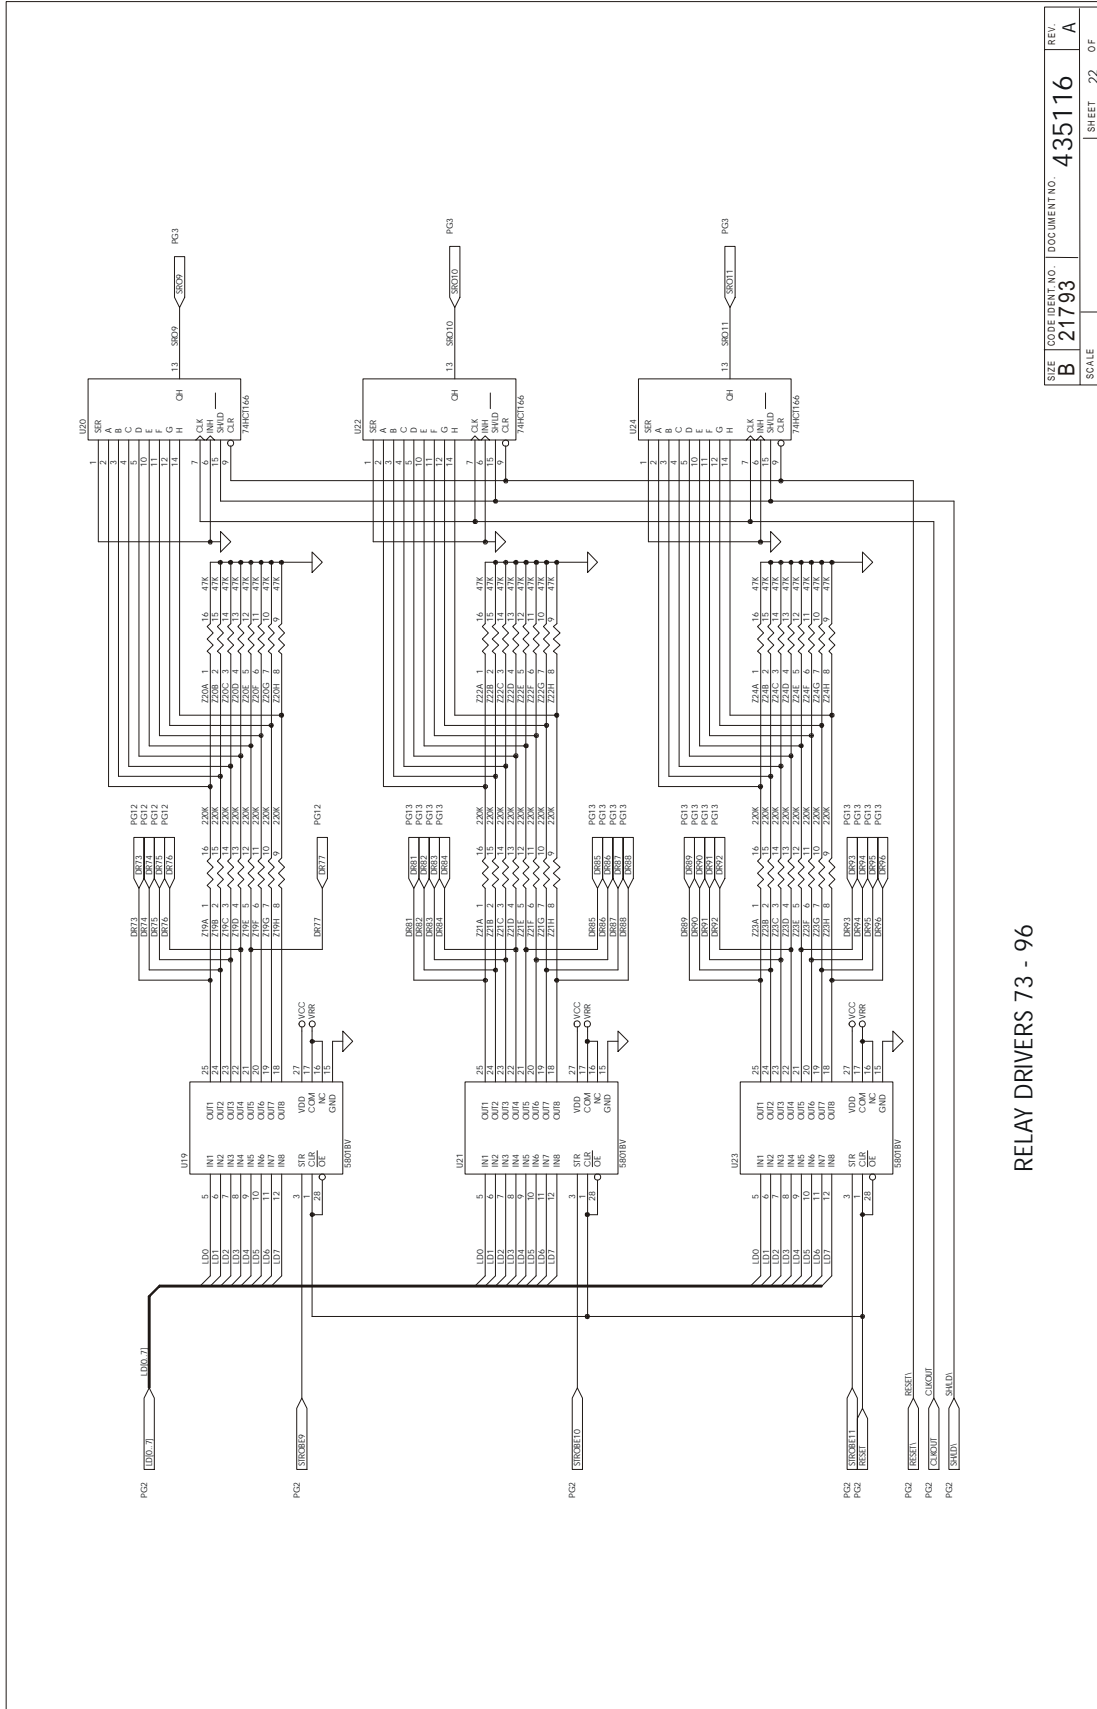

RELAY DRIVERS 73 - 96


REV.	435116	A
DOCUMENT NO.	B 21793	
SCALE		SHEET 22 OF

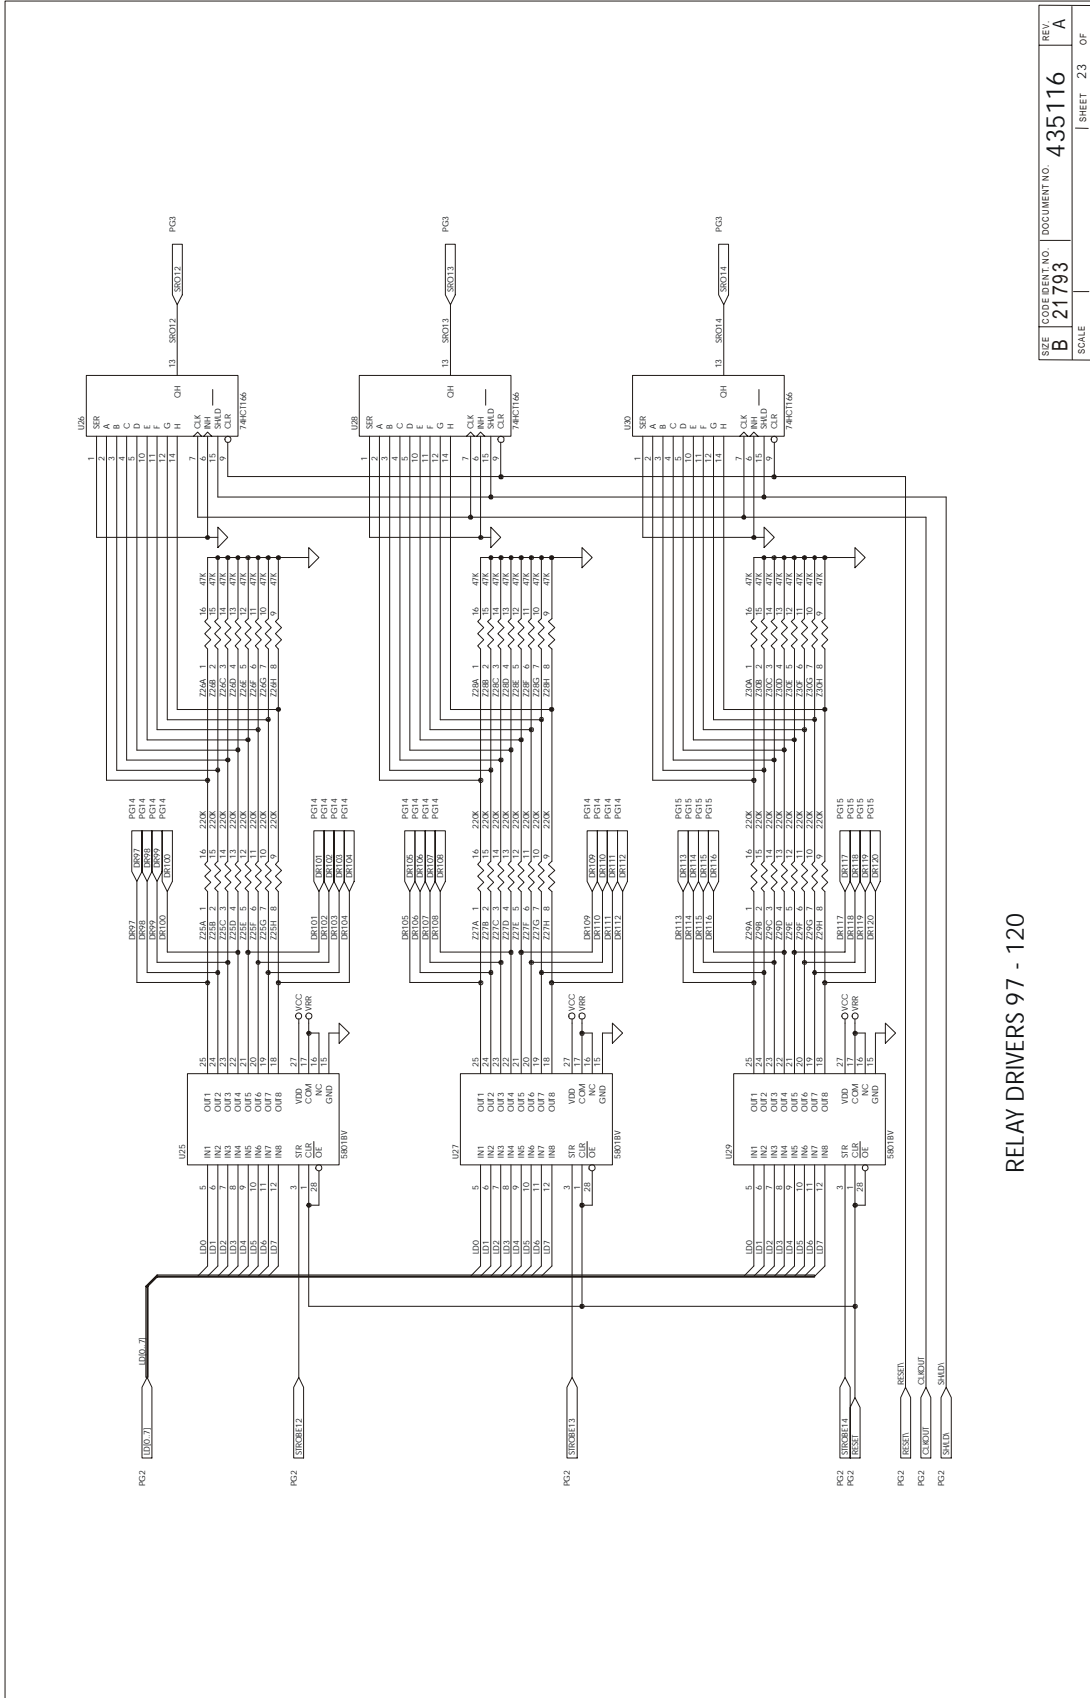

RELAY DRIVERS 97 - 120


SIZE	CODE	REV. NO.	DOCUMENT NO.	REV.
B	21793		435116	A
SCALE				SHEET 23 OF



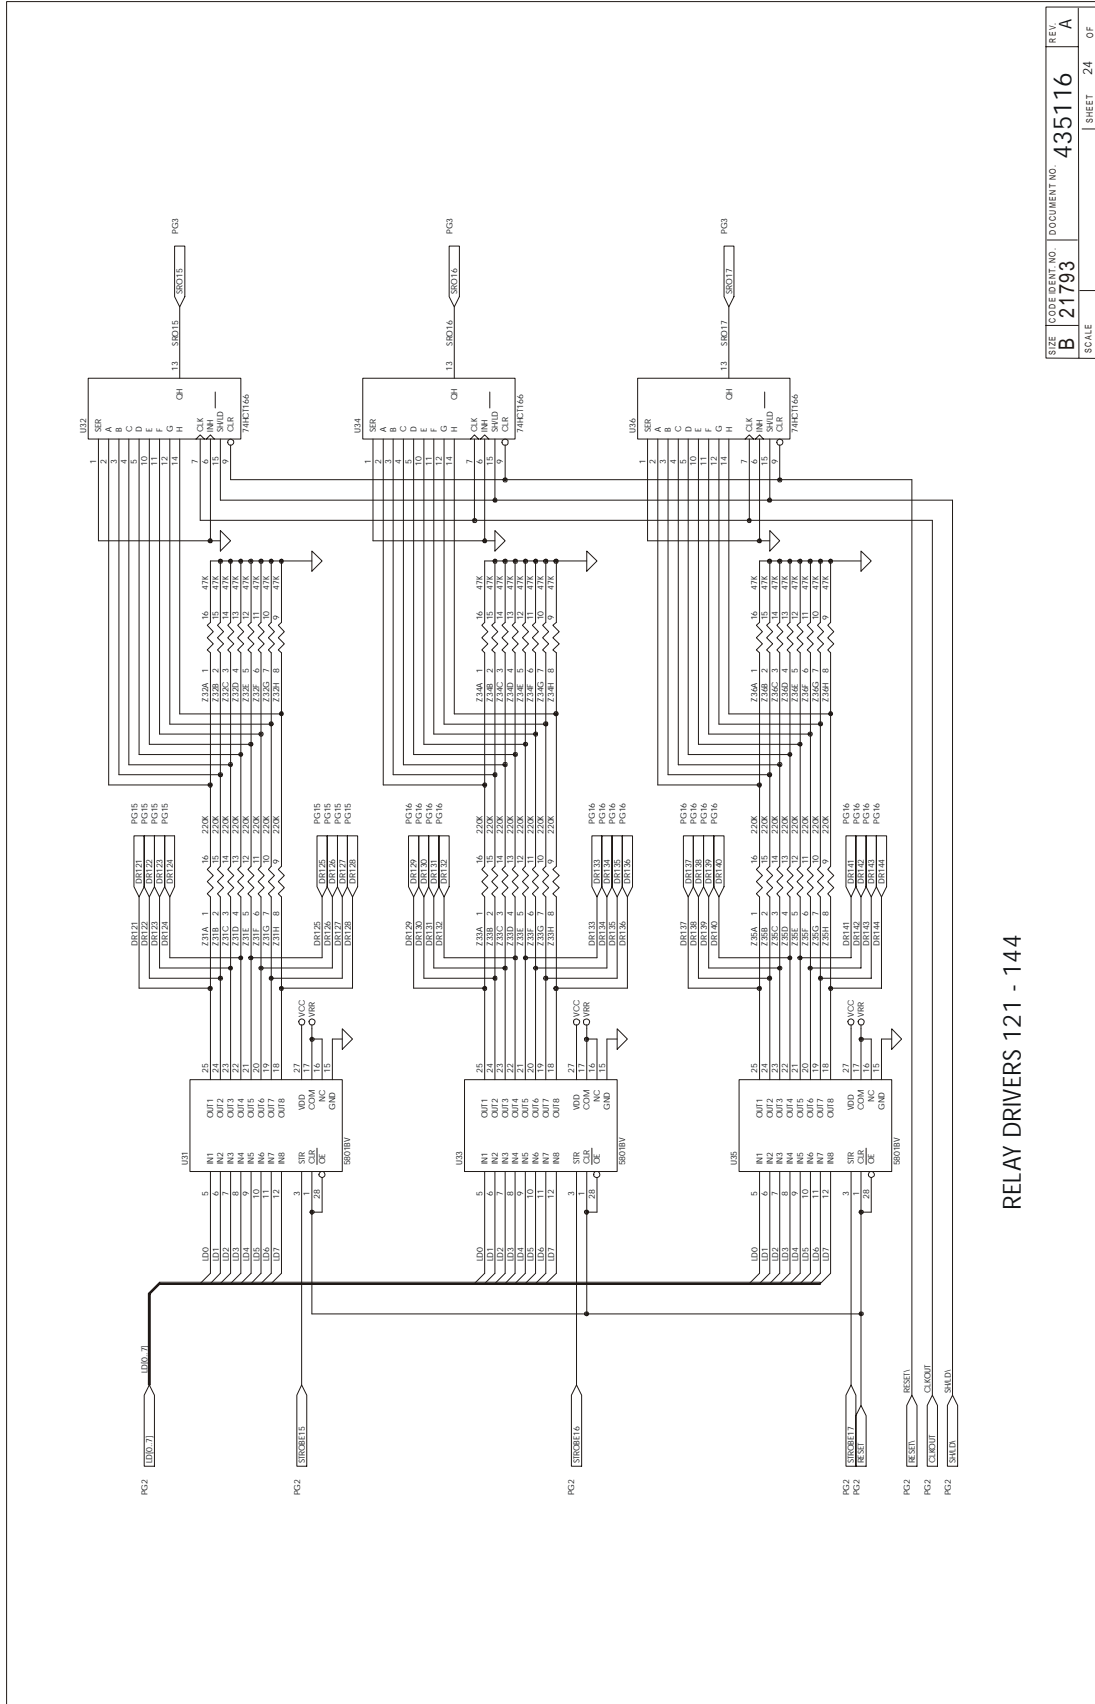

RELAY DRIVERS 121 - 144


SIZE	CODE	REV	DOCUMENT NO.	435116	REV	A
B	21793					
SCALE					SHEET	24
					OF	

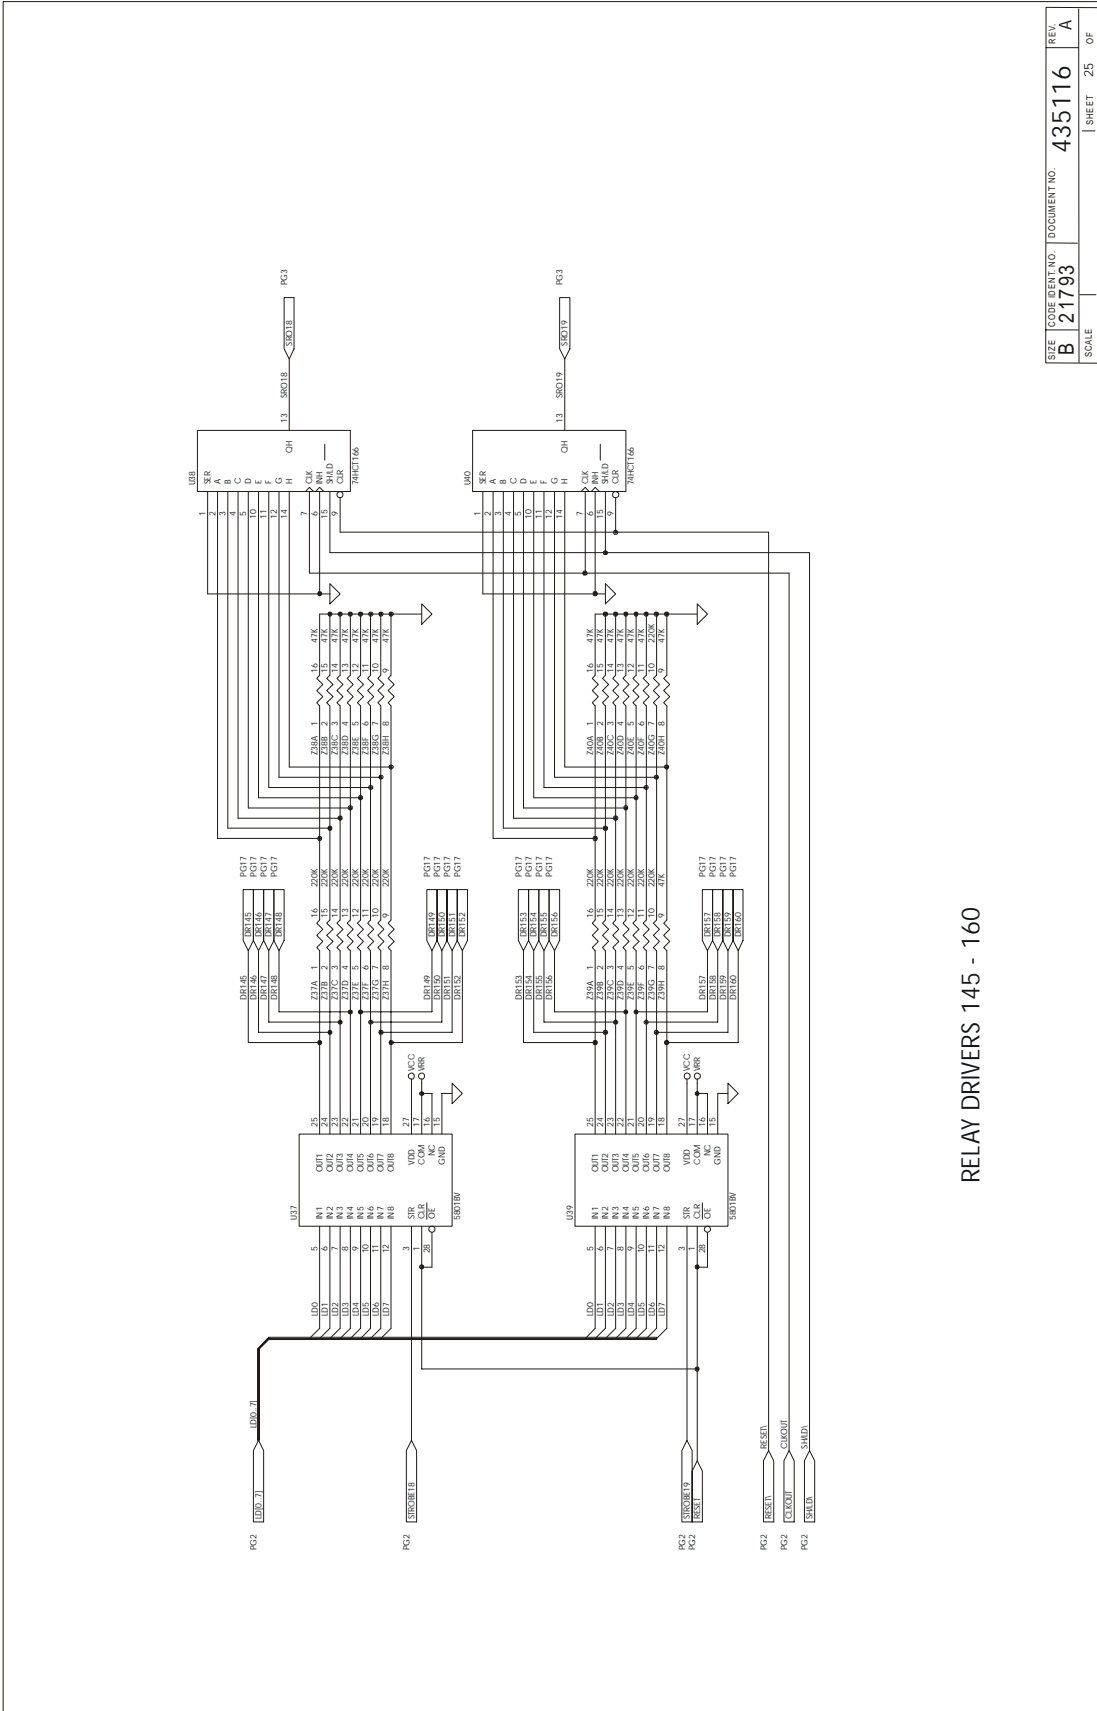

RELAY DRIVERS 145 - 160

SIZE	CODE IDENT. NO.	DOCUMENT NO.	435116	REV.	A
SCALE	B	21793		SHEET	25 OF



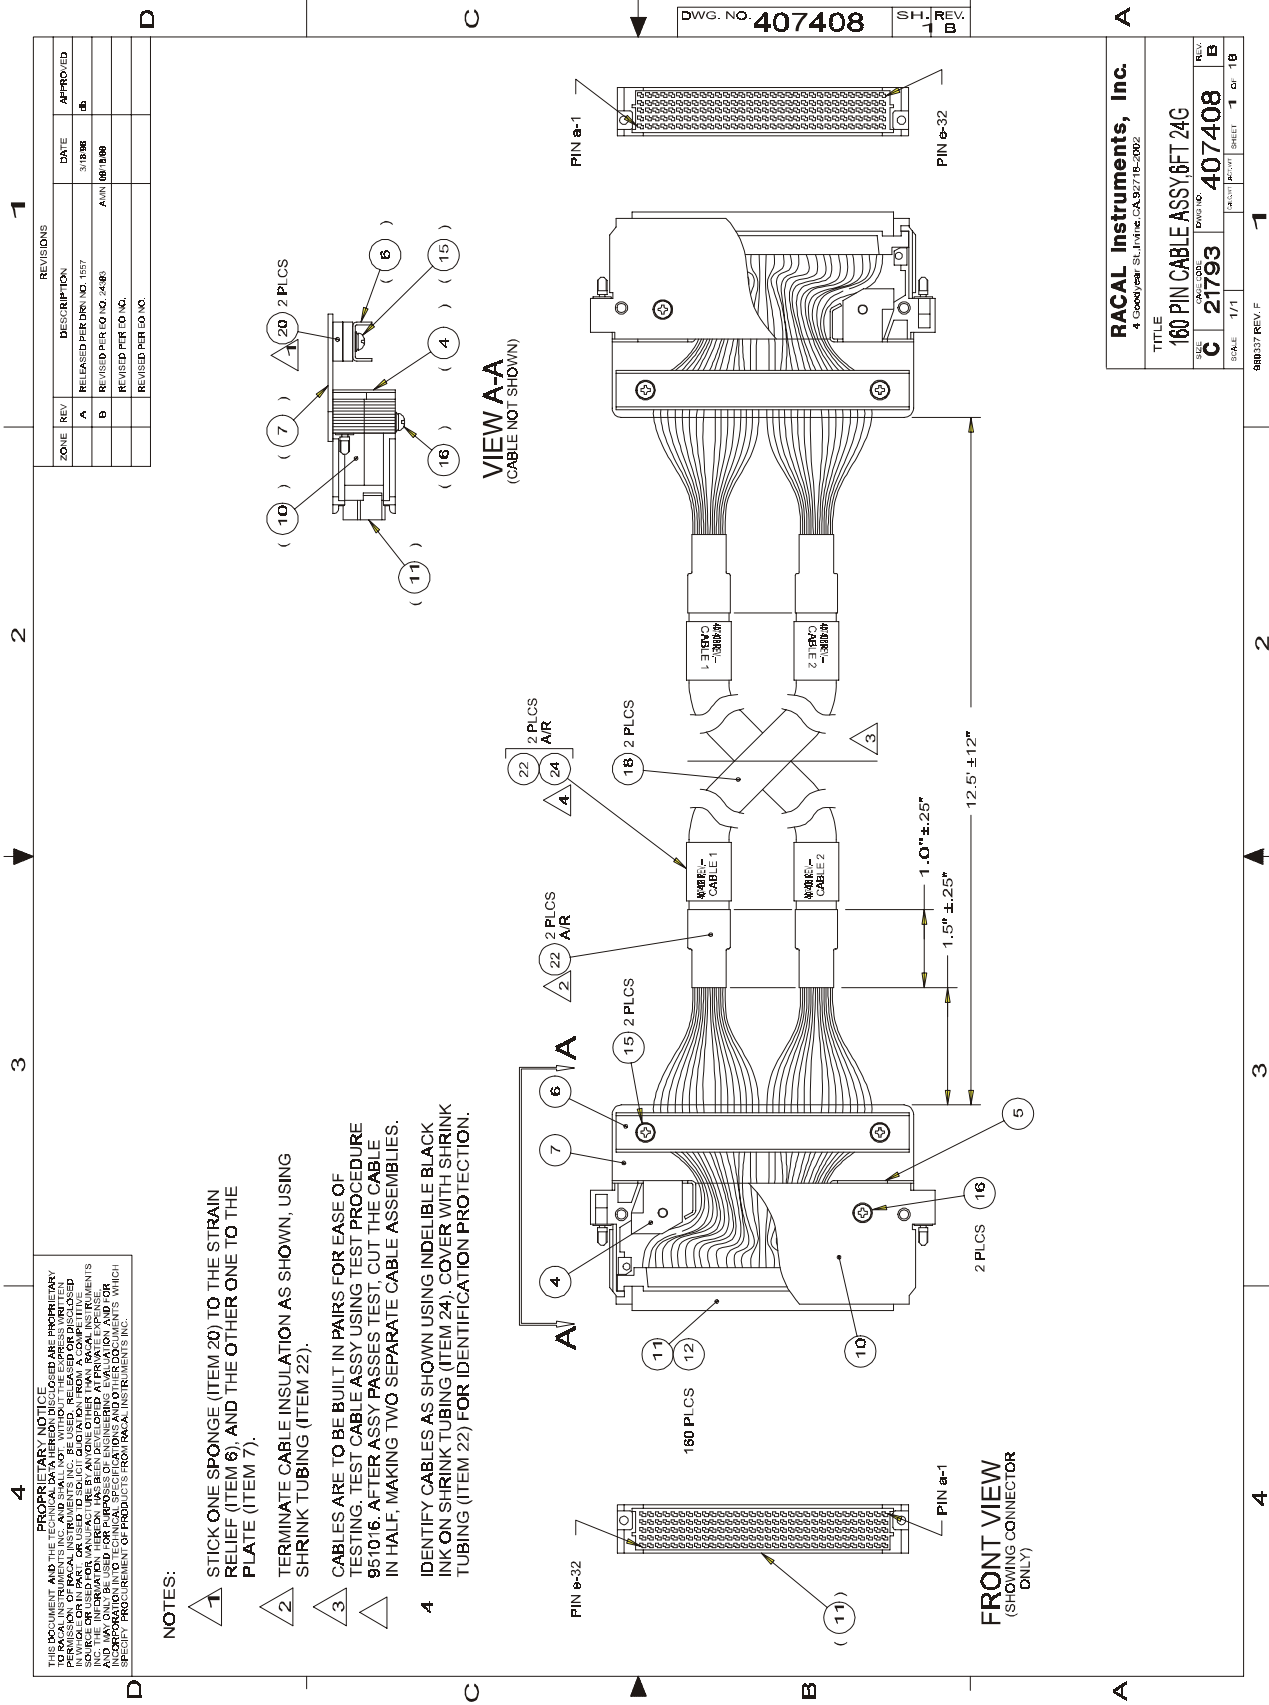

ZONE	REV	DESCRIPTION	DATE	APPROVED
A	1	RELEASED PER DRY NO. 1557	3/12/88	DB
B	1	REVISED PER CO. NO. 2481	AMN 06/01/89	
		REVISED PER CO. NO.		
		REVISED PER CO. NO.		


REVISIONS	
1	

NOTES:

- 1 STICK ONE SPONGE (ITEM 20) TO THE STRAIN RELIEF (ITEM 6), AND THE OTHER ONE TO THE PLATE (ITEM 7).
- 2 TERMINATE CABLE INSULATION AS SHOWN, USING SHRINK TUBING (ITEM 22).
- 3 CABLES ARE TO BE BUILT IN PAIRS FOR EASE OF TESTING. TEST CABLE ASSY USING TEST PROCEDURE 951016. AFTER ASSY PASSES TEST, CUT THE CABLE IN HALF, MAKING TWO SEPARATE CABLE ASSEMBLIES.
- 4 IDENTIFY CABLES AS SHOWN USING INDELIBLE BLACK INK ON SHRINK TUBING (ITEM 24). COVER WITH SHRINK TUBING (ITEM 22) FOR IDENTIFICATION PROTECTION.

THIS DRAWING AND THE INFORMATION CONTAINED HEREIN ARE THE PROPRIETARY AND UNPUBLISHED INFORMATION OF RACAL INSTRUMENTS, INC. AND SHALL NOT BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE EXPRESS WRITTEN PERMISSION OF RACAL INSTRUMENTS, INC. THIS DRAWING IS THE PROPERTY OF RACAL INSTRUMENTS, INC. AND IS TO BE USED ONLY FOR THE PURPOSES OF ENGINEERING EVALUATION AND FOR SPECIFYING EQUIPMENT. IT IS NOT TO BE USED FOR THE PRODUCTION OF PRODUCTS FROM RACAL INSTRUMENTS, INC.

<b>RACAL Instruments, Inc.</b>	
1 Goodway Park St. Lincoln, CA 92116-2002	
TITLE	
160 PIN CABLE ASSY 6FT 24G	
DATE	REV.
C 21793	407408
SCALE	SHEET
1/1	1 of 1B
980337 REV. F	

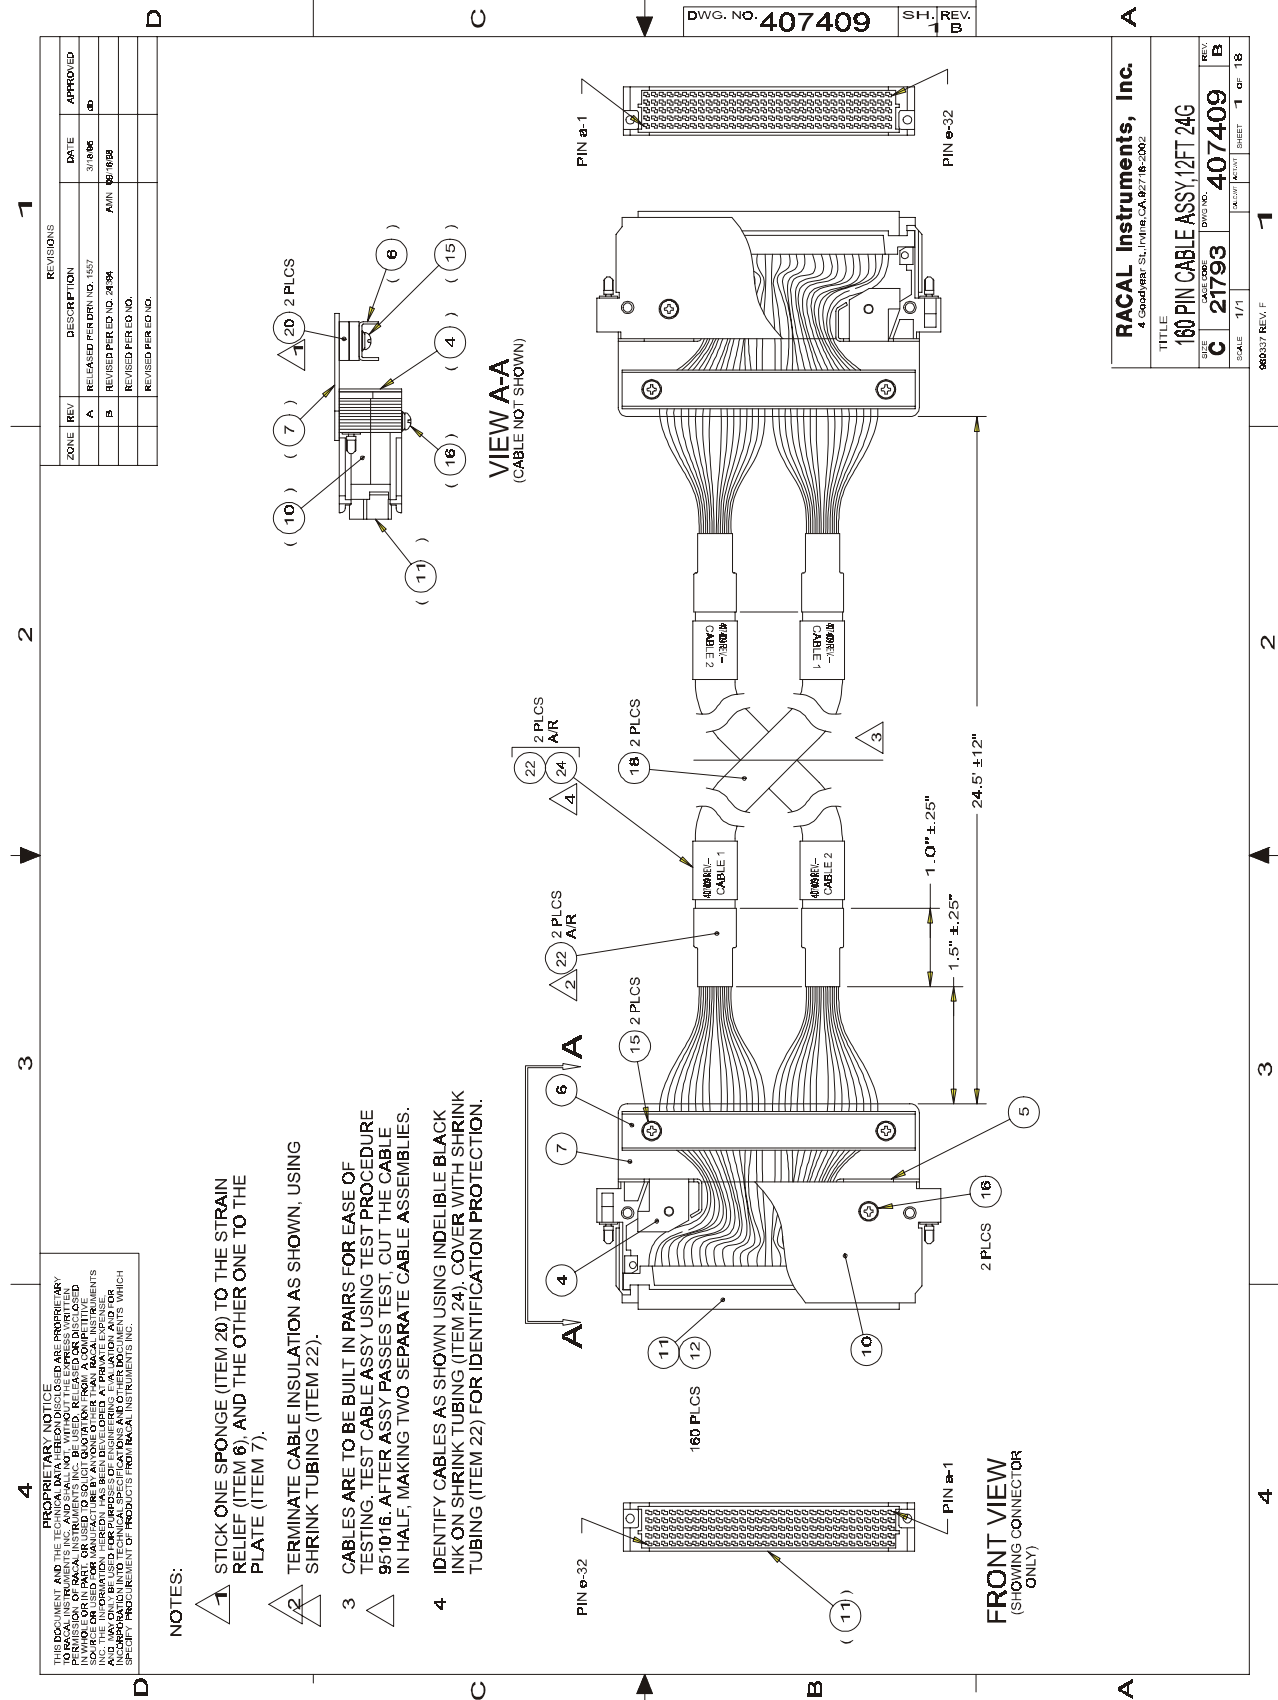

**PROPRIETARY NOTICE**  
 THIS DOCUMENT AND THE DESIGN ARE PROPRIETARY TO RACAL INSTRUMENTS, INC. AND SHALL NOT, WITHOUT THE EXPRESS WRITTEN PERMISSION OF RACAL INSTRUMENTS, BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. RACAL INSTRUMENTS, INC. MAKES NO WARRANTY, REPRESENTATION, OR GUARANTEE, EITHER WRITTEN OR ORAL, THAT THIS DOCUMENT OR THE PRODUCTS IT DESCRIBES WILL MEET YOUR REQUIREMENTS AND MAY ONLY BE USED FOR THE PURPOSES OF ENGINEERING EVALUATION AND FOR SPECIFIC PROCUREMENT OF PRODUCTS FROM RACAL INSTRUMENTS, INC.

**NOTES:**

- 1 STICK ONE SPONGE (ITEM 20) TO THE STRAIN RELIEF (ITEM 6), AND THE OTHER ONE TO THE PLATE (ITEM 7).
- 2 TERMINATE CABLE INSULATION AS SHOWN, USING SHRINK TUBING (ITEM 22).
- 3 CABLES ARE TO BE BUILT IN PAIRS FOR EASE OF TESTING. TEST CABLE ASSY USING TEST PROCEDURE 951016. AFTER ASSY PASSES TEST, CUT THE CABLE IN HALF, MAKING TWO SEPARATE CABLE ASSEMBLIES.
- 4 IDENTIFY CABLES AS SHOWN USING INDELIBLE BLACK INK ON SHRINK TUBING (ITEM 22). COVER WITH SHRINK TUBING (ITEM 22) FOR IDENTIFICATION PROTECTION.

This page was left intentionally blank.

## Chapter 5

# PARTS LIST

---

407505	Final Assembly, 1260-39.....	5-3
407504	Shipping Kit, 1260-39.....	5-3
405116	PCB Assembly, 1260-39 .....	5-4
Front Panel Connector Accessories		
407407	160-Pin Connector Kit with backshell and pins.....	5-7
407408	160-Pin Cable Assy, 6ft., 24GA.....	5-8
407409	160-Pin Cable Assy, 12ft., 24GA.....	5-8
	List of Suppliers .....	5-9

This page was left intentionally blank.



## User Manual 1260-39

### 407505 - FINAL ASSY, 1260-39

REF DESIG	RACAL INST P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{2}1	405116	PCB ASSY, 1260-39	21793	405116
{4}1	407504	SHIP KIT, 1260-39	21793	407504
{7}1	456238-002	PANEL, RIGHT, 1260-35	21793	456238-002
{8}1	456239-002	PANEL, LEFT, 1260-35	21793	456239-002
{10}1	456438-001	BRACKET, CONNECTOR MOUNTING, TOP	21793	456438-001
{11}1	456438-002	BRACKET, CONNECTOR MOUNTING, BOTTOM	21793	456438-002
{13}1	456534	PANEL, FRONT, 1260-39	21793	456534
{15}1	611264	HANDLE, EXTRACTOR, BOTTOM	62559	20817-327
{16}1	611265	HANDLE, EXTRACTOR, TOP	62559	20817-328
{17}0.5	611266	MOUNTING HARDWARE, HANDLE	62559	21100-745
{20}2	616305	SCREW, PPH, M2.5X12	-	-
{21}4	616400	SCREW, PFL, M2.5X4	-	-
{23}2	616405	SCREW, PPH, M2.5X12	-	-
{24}6	616414	SCREW, PFL, M3X.5	-	-
{26}2	610264	WASHER, INSULATING, .25X.12X.02	21793	610264
{29}1	920927	BUMPER, ADHESIVE BACK	53387	SJ-5003BUMPON
{30}A/R	920962	LOCTITE, 242, MED STR.	05972	272
{32}1	921059	LABEL, CAUTION, STATIC	21793	921059
{33}1	921148-001	LABEL SET VXI	21793	921148-001
{34}1	921309	LABEL, VXI SWITCH ID	21793	921309
{35}1	921423	LABEL, CE-96	21793	921423

### 407504 - SHIP KIT, 1260-39

REF DESIG	RACAL INST P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{1}2	455540	KEY, LOCKOUT, TTL, A/C	21793	455540
{2}2	455541	KEY, LOCKOUT, TTL, A/C	21793	455541
{3}2	455542	KEY, LOCKOUT, TTL, A/C	21793	455542
{4}3	615013	SCREW, PPF, 2-56 X .188	-	-
{5}1	980673-043	MANUAL, 1260-39	21793	980673-043

## 405116 - PCB ASSY, 1260-39

REF DESIG	RACAL INST P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
C1-C4	110126	CAP, TANTA, 6.8UF, 35V, 20 PERCENT	105397	T355F685M035A5
C5	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C6	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C15	231555	IC, BIT PARALLEL-INPUT LATCHED DRIVERS	60496	MIC5801BV
C100-C102	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C103	130198	CAP, CHIP, 150NF, 35V, 10PCT	104222	TAJA154R035R
C104-C106	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C108	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C110	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C113	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C116-C118	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C120-C125	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C127-C144	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C166	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
C167	R-21-1801	CAP, CHIP, 10 NF	95275	VJ1206Y103MF
J3	601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	152072	1618008
J4	601925	CONNECTOR, PCB, RECEPT, 3 ROW, 96P	152072	1618008
J200	602249-116	CONNECTOR, PCB, PLUG, 160 PIN, 5 ROW	158730	MVC160-0122-2
J201	602283	CONNECTOR, RECEPTACLE, PCB, RT. ANGLE, 34 PIN	100779	1213574-2
J202	601856-034	CONNECTOR, SMPL, PCB RCP	128198	SMPL34FOTOLB
K1-K72	1310256	RELAY, ELECTRO-MECH, 2P2T, 2A, 24V	61529	TX2-24V
K73	1310199	RELAY, POWER, 2 FORM A	61529	ST2E-DC24V
K74	1310199	RELAY, POWER, 2 FORM A	61529	ST2E-DC24V
K75	1310199	RELAY, POWER, 2 FORM A	61529	ST2E-DC24V
K75	1310199	RELAY, POWER, 2 FORM A	61529	ST2E-DC24V
K77	1310199	RELAY, POWER, 2 FORM A	61529	ST2E-DC24V
K81-K160	1310256	RELAY, ELECTRO-MECH, 2P2T, 2A, 24V	61529	TX2-24V
L1	100164	CAP, FEED-THRU, 800PF, 50V	100779	1842448-2
L2	1310193	CHOKER, SHIELDED, 5UH	191637	IH-5-5-10
L3	1310193	CHOKER, SHIELDED, 5UH	191637	IH-5-5-10
L4	100164	CAP, FEED-THRU, 800PF, 50V	100779	1842448-2
L5	1600245	JUMPER, INSULATED	152210	L-2007-1
P1	601675	CONNECTOR, EUROCARD TYPE C, 96-PIN	100779	1532505-1
P2	601675	CONNECTOR, EUROCARD TYPE C, 96-PIN	100779	1532505-1
Q1	1200320	TRANSISTOR, NPN	104713	MMBT3904
R17	1050000-102	RES, CHIP, 1K, .06W, 5PCT	191637	1CRCW-0805SERIES
R18	1050000-332	RES, CHIP, 3.3K, .06W, 5PCT	191637	1CRCW0805SERIES
R19	1050000-102	RES, CHIP, 1K, .06W, 5PCT	191637	1CRCW-0805SERIES
R20	1050000-102	RES, CHIP, 1K, .06W, 5PCT	191637	1CRCW-0805SERIES
SW1-SW3	1601969	SWITCH, DIP 6 POS, LOW PROFILE	165832	1K406S
TP1	1601197	POST, TEST, .025 SQ	100779	16-87022-6
TP2	1601197	POST, TEST, .025 SQ	100779	16-87022-6
U1	231555	IC, BIT PARALLEL-INPUT LATCHED DRIVERS	60496	1MIC5801BV
U2	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	118324	174HCT166D
U3	231555	IC, BIT PARALLEL-INPUT LATCHED DRIVERS	60496	1MIC5801BV
U4	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	118324	174HCT166D
U5	231555	IC, BIT PARALLEL-INPUT LATCHED DRIVERS	60496	1MIC5801BV
U6	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	118324	174HCT166D
U7	231555	IC, BIT PARALLEL-INPUT LATCHED DRIVERS	60496	1MIC5801BV
U8	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	118324	174HCT166D
U9	231555	IC, BIT PARALLEL-INPUT LATCHED DRIVERS	60496	1MIC5801BV
U10	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	118324	174HCT166D
U11	231555	IC, BIT PARALLEL-INPUT LATCHED DRIVERS	60496	1MIC5801BV
U12	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	118324	174HCT166D
U13	231555	IC, BIT PARALLEL-INPUT LATCHED DRIVERS	60496	1MIC5801BV
U14	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	118324	174HCT166D
U15	231555	IC, BIT PARALLEL-INPUT LATCHED DRIVERS	60496	1MIC5801BV
U16	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	118324	174HCT166D
U17	231555	IC, BIT PARALLEL-INPUT LATCHED DRIVERS	60496	1MIC5801BV
U18	231120	IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	118324	174HCT166D

User Manual 1260-39

405116 - PCB ASSY, 1260-39

REF DESIG	RACAL P/N	INST P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
U19	1231555		IC, BIT PARALLEL-INPUT LATCHED DRIVERS	160496	MIC5801BV
U20	1231120		IC, 8-BITE, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U21	1231555		IC, BIT PARALLEL-INPUT LATCHED DRIVERS	160496	MIC5801BV
U22	1231120		IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U23	1231555		IC, BIT PARALLEL-INPUT LATCHED DRIVERS	160496	MIC5801BV
U24	1231120		IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U25	1231555		IC, BIT PARALLEL-INPUT LATCHED DRIVERS	160496	MIC5801BV
U26	1231120		IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U27	1231555		IC, BIT PARALLEL-INPUT LATCHED DRIVERS	160496	MIC5801BV
U28	1231120		IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U29	1231555		IC, BIT PARALLEL-INPUT LATCHED DRIVERS	160496	MIC5801BV
U30	1231120		IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U31	1231555		IC, BIT PARALLEL-INPUT LATCHED DRIVERS	160496	MIC5801BV
U32	1231120		IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U33	1231555		IC, BIT PARALLEL-INPUT LATCHED DRIVERS	160496	MIC5801BV
U34	1231120		IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U35	1231555		IC, BIT PARALLEL-INPUT LATCHED DRIVERS	160496	MIC5801BV
U36	1231120		IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U37	1231555		IC, BIT PARALLEL-INPUT LATCHED DRIVERS	160496	MIC5801BV
U38	1231120		IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U39	1231555		IC, BIT PARALLEL-INPUT LATCHED DRIVERS	160496	MIC5801BV
U40	1231120		IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U53	1231153-001		IC, PROGRAMMED, PAL	121793	1231153-001
U54	1231445		IC, 3-TO-8 LINE DECODER/MUX	18324	74HCT138D
U55	1231445		IC, 3-TO-8 LINE DECODER/MUX	18324	74HCT138D
U56	1231135		IC, DIGITAL, 4-BIT COMPARATOR	18324	PC74HCT85D
U57	1231093		IC, QUAD COMPARATOR	104713	LM339D
U60	1231120		IC, 8-BIT, PARALLEL/SERIAL OUT S.R.	18324	74HCT166D
U61	1231131		IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U62	1231131		IC, DIGITAL, SHIFT REGISTER	18324	PC74HCT164D
U70	1231152-002		IC, PROGRAMMED, PAL	121793	1231152-002
U71	1231147		IC, MULTIPLEXER	104713	74HC253D
U72	1231147		IC, MULTIPLEXER	104713	74HC253D
U73	1231096		IC, QUAD DIFF RECEIVER	101295	AM26LS32ACD
U74	1231096		IC, QUAD DIFF RECEIVER	101295	AM26LS32ACD
U75	1231125		IC, DIGITAL, LINE DRIVER	127014	DS26LS31MN
U76	1231154		IC, PROGRAMMED PLA	121793	1231154
U77	1231147		IC, MULTIPLEXER	104713	74HC253D
U78	1231445		IC, 3-TO-8 LINE DECODER/MUX	18324	74HCT138D
U79	1231091		IC, OCTAL BUFFER	18324	74HC240D
U80	1231091		IC, OCTAL BUFFER	18324	74HC240D
U81	1231091		IC, OCTAL BUFFER	18324	74HC240D
U82	1231119		IC, SHIFT REGISTER	18324	74HCT299D
U83	1231147		IC, MULTIPLEXER	104713	74HC253D
Z1	1080119		RES NETWORK, 220K	91637	SOMC-1603-224K
Z2	1080117		RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z3	1080119		RES NETWORK, 220K	91637	SOMC-1603-224K
Z4	1080117		RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z5	1080119		RES NETWORK, 220K	91637	SOMC-1603-224K
Z6	1080117		RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z7	1080119		RES NETWORK, 220K	91637	SOMC-1603-224K
Z8	1080117		RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z9	1080119		RES NETWORK, 220K	91637	SOMC-1603-224K
Z10	1080117		RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z11	1080119		RES NETWORK, 220K	91637	SOMC-1603-224K
Z12	1080117		RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z13	1080119		RES NETWORK, 220K	91637	SOMC-1603-224K
Z14	1080117		RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z15	1080119		RES NETWORK, 220K	91637	SOMC-1603-224K

405116 - PCB ASSY, 1260-39

REF DESIG	RACAL INST P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
Z16	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-47J
Z17	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z18	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z19	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z20	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z21	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z22	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z23	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z24	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z25	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z26	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z27	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z28	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z29	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z30	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z31	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z32	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z33	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z34	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z35	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z36	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z37	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z38	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z39	080119	RES NETWORK, 220K	91637	SOMC-1603-224K
Z40	080117	RES NETWORK, 16P8R, 47K	73138	628-AL-473J
Z127	080114	RES NETWORK, 16P8R, 15K	73138	628-AL-153J
Z128	080120	RES NETWORK, 10K	11236	1767-161R10K
{58}1	401951	PCB ASSY., LBUS JUMPER	21793	401951
{59}1	401951-003	PCB ASSY., P3 JUMPER	21793	401951-003
{60}1	415116	PCB, 1260-39 (UNLOADED)	21793	415116
{64}A/R	500022	WIRE, BARE COPPER/TIN, 22 GA	21793	500022
{81}2	611367	STANDOFF, ROUND SWAGE, M3X0.5X4.3	06540	121003B-B-0350-28 (L4.3)
{82}1	611366	STANDOFF, ROUND SWAGE, M3X0.5X19	06540	121017-B-0350-28
{87}A/R	921280	LOCTITE, HIGH STRENGTH	05972	27121

## User Manual 1260-39

---

407407 - 160 PIN CONNECTOR KIT W/BACKSHELL

REF DESIG	RACAL INST P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{4}1	456437-001	BRACKET, STIFFENER, TOP	21793	456437-001
{5}1	456437-002	BRACKET, STIFFENER, BOTTOM	21793	456437-002
{6}1	456439	STRAIN RELIEF	21793	456439
{7}1	456440	PLATE, SHELL MOUNTING	21793	456440
{10}1	602255-001	HOUSING CABLE, MODIFIED	21793	602255-001
{11}1	602258-116	CONNECTOR, CABLE, RECEPTACLE, 160 PIN	6V439	1024070
{12}170	602258-900	TERMINAL, CRIMP, SNAP-IN, 26-20 GA	6V439	1014728
{15}2	616252	SCREW, PPH, SEMS ASSY, 4-40X.312	78189	SEMS W/SQ CONE WA.
{16}2	616254	SCREW, PPH, SEMS ASSY., 4-40 X .500	78189	SEMS W/SQ CONE WA.
{20}2	456502	SPONGE, PRESSURE, 1260-38	21793	456502
{24}1	1980785	INSTRUCTION SHEET, 160 PIN KIT	21793	1980785

407408,407409 - 160 PIN CABLE ASSY, 24G

REF DESIG	RACAL INST P/N	DESCRIPTION	FSC	MANUFACTURER'S P/N
{4}1	456437-001	BRACKET, STIFFENER, TOP	21793	456437-001
{5}1	456437-002	BRACKET, STIFFENER, BOTTOM	21793	456437-002
{6}1	456439	STRAIN RELIEF	21793	456439
{7}1	456440	PLATE, SHELL MOUNTING	21793	456440
{10}1	602255-001	HOUSING CABLE, MODIFIED	21793	602255-001
{11}1	602258-116	CONNECTOR, CABLE, RECEPTACLE, 160 PIN	6V439	024070
{12}160	602258-900	TERMINAL, CRIMP, SNAP-IN, 26-20 GA	6V439	014728
{15}2	616252	SCREW, PPH, SEMS ASSY, 4-40X.312	78189	SEMS W/SQ CONE WA.
{16}1	616254	SCREW, PPH, SEMS ASSY., 4-40 X .500	78189	SEMS W/SQ CONE WA.
{18}A/R	500319	CABLE, 40 CONDUCTOR, 24 GA UNSHIELDED	92194	5020/80C
{19}2	456502	SPONGE, PRESSURE, 1260-38	21793	456502
{22}A/R	M23053/5-109-0	SLEEVING, INSUL. HEAT SHRINK, .75D, CLR	81349	M23053/5-109-0
{24}A/R	M23053/5-109-4	SLEEVING, INSUL. HEAT SHRINK, .75D, YEL	81349	M23053/5-109-4

List of Suppliers

FSC	SUPPLIER	FSC	SUPPLIERS
00779	AMP, INC. HARRISBURG, PA	73138	BECKMAN INSTRUMENTS FULLERTON, CA
01121	ALLEN BRADLEY CO. MILWAUKEE, WI	78189	ILLINOIS TOOL WORKS, INC. (SHAKEPROOF DIV.) ELGIN, IL
01295	TEXAS INSTRUMENTS, INC. DALLAS, TX	91637	DALE ELECTRONICS, INC. COLUMBUS, NE
04222	AEROVOX CORP. (HI-Q DIV.) MYRTLE BEACH, SC	92194	ALPHA WIRE ELIZABETH, NJ
04713	MOTOROLA, INC. (SEMICONDUCTOR PRODUCTS DIV.) PHOENIX, AZ	95275	VITRAMON, INC. BRIDGEPORT, CT
05397	UNION CARBIDE CORP. (MATERIALS SYSTEMS DIV.) CLEVELAND, OH		
06540	AMATOM ELECTRONIC HARDWARE NEW ROCHELLE, NY		
11236	CTS OF BERNE, INC. BERNE, IN		
18324	SIGNETICS, INC. SUNNYVALE, CA		
21793	RACAL INSTRUMENTS INC. IRVINE, CA		
27014	NATIONAL SEMI-CONDUCTOR CORP. SANTA CLARA, CA		
52072	CIRCUIT ASSY. CORP. COSTA MESA, CA		
52210	GETTING ENGRG. & MFG. CO. SPRING MILLS, PA		
53387	THREE M (3M) CO. ST. PAUL, MN		
58730	THOMAS & BETTS CO. ELIZABETH, NJ		
60496	MICREL INC. SUNNYVALE, CA		
61529	AROMAT CORP. CUPERTINO, CA		
62559	SCHROFF, INC. WARWICK, RI		
65832	AMERICAN RESEARCH & ENGINEERING ELGIN, IL		
6V439	ERNI COMPONENTS INC. RICHMOND, VA		

This page was left intentionally blank.



## Chapter 6

# PRODUCT SUPPORT

---

### **Product Support**

Racal Instruments has a complete Service and Parts Department. If you need technical assistance or should it be necessary to return your product for repair or calibration, call 1-800-722-3262. If parts are required to repair the product at your facility, call 1-949-859-8999 and ask for the Parts Department.

When sending your instrument in for repair, complete the form in the back of this manual.

For worldwide support and the office closes to your facility, refer to the Support Offices section on the following page.

### **Reshipment Instructions**

Use the original packing material when returning the 1260-39 to Racal Instruments for calibration or servicing. The original shipping crate and associated packaging material will provide the necessary protection for safe reshipment.

If the original packing material is unavailable, contact Racal Instruments Customer Service for information.

## Support Offices

### **Racal Instruments, Inc.**

4 Goodyear St., Irvine, CA 92618-2002  
Tel: (800) RACAL-ATE, (800) 722-2528,  
(949) 859-8999; FAX: (949) 859-7139

### **Racal Instruments, Ltd.**

480 Bath Road, Slough, Berkshire, SL1 6BE, United Kingdom  
Tel: +44 (0) 1628 604455; FAX: +44 (0) 1628 662017

### **Racal Systems Electronique S.A.**

18 Avenue Dutartre, 78150 LeChesnay, France  
Tel: +33 (1) 3923 2222; FAX: +33 (1) 3923 2225

### **Racal Systems Elettronica s.r.l.**

Strada 2-Palazzo C4, 20090 Milanofiori Assago, Milan, Italy  
Tel: +39 (0)2 5750 1796; FAX +39 (0)2 5750 1828

### **Racal Elektronik System GmbH.**

Technologiepark Bergisch Gladbach, Friedrich-Ebert-Strasse,  
D-51429 Bergisch Gladbach, Germany  
Tel.: +49 2204 8442 00; FAX: +49 2204 8442 19

### **Racal Australia Pty. Ltd.**

3 Powells Road, Brookvale, NSW 2100, Australia  
Tel: +612 9936 7000, FAX: +612 9936 7036

### **Racal Electronics Pte. Ltd.**

26 Ayer Rajah Crescent, 04-06/07 Ayer Rajah Industrial Estate,  
Singapore 0513.  
Tel: +65 7792200, FAX: +65 7785400

### **Racal Instruments, Ltd.**

Unit 5, 25F., Mega Trade Center, No 1, Mei Wan Road, Tsuen  
Wan, Hong Kong, PRC  
Tel: +852 2405 5500, FAX: +852 2416 4335