

PAPER FEED UNIT
(Machine Code: G389)

1. REPLACEMENT AND ADJUSTMENT

⚠ CAUTION

Set the power off and disconnect the printer before you remove parts of the printer.

Keys:

☛ : See or refer to

⚙ : Screw

☒ : Connector

Ⓢ : Clip ring


Ⓢ : E ring

1.1 EXTERIOR COVER

1.1.1 TOP COVER AND SENSOR COVER


CAUTION: When you reassemble, attach the top cover before you close the paper tray. The link lever (☛ 2.4.2) is damaged if you attach the top cover after you close the paper tray.

1. Remove the printer from the paper feed unit.
2. Paper tray [A]
NOTE: The paper tray is linked to the feeler of the paper end sensor (☛ 2.4.1).
3. Ground plate [B] (⚙ x 1)
4. Top cover [C] (⚙ x 4)

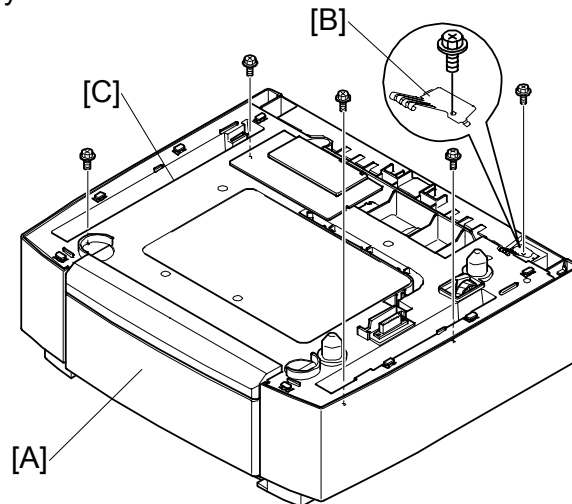

G389R901.WMF

5. Sensor cover [D]

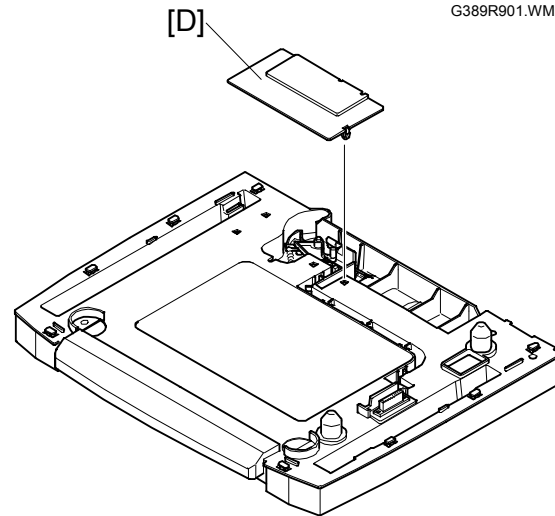


G389R902.WMF


1.1.2 BOTTOM BASE AND REAR COVER

1. Remove the printer from the paper feed unit.
2. Tray
3. Three screws on the bottom base [A]


NOTE: Do not remove the stud shafts [C] at this time. If you remove the stud shafts, the bottom base becomes loose. The edges of the bottom base can scratch and damage the bottom areas of the left and right covers.

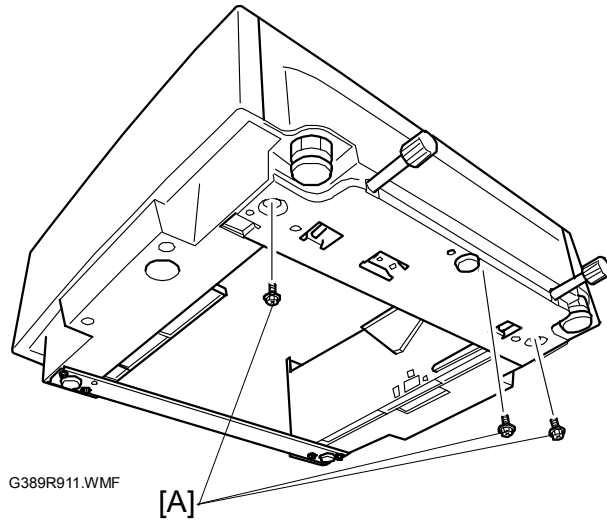

4. Top cover (☛ 1.1.1)
5. Clutch assembly (☛ 1.4)
6. Ground plate [B] (⚙ x 1)
7. Stud shafts [C]

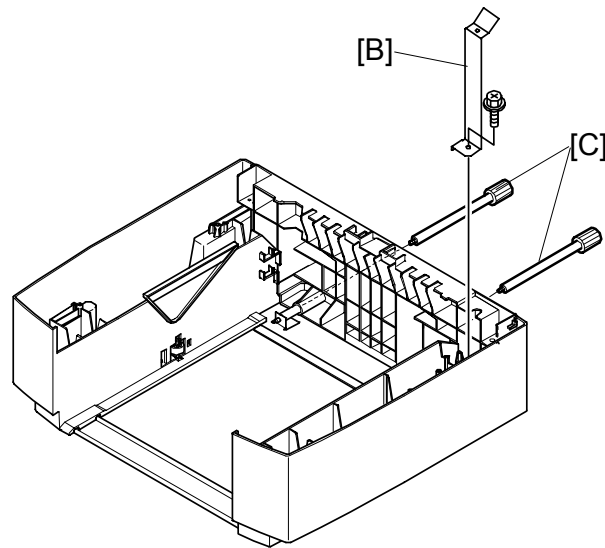


- 8. Bottom base [A]
- 9. Rear cover [B] (⚙ x 2)

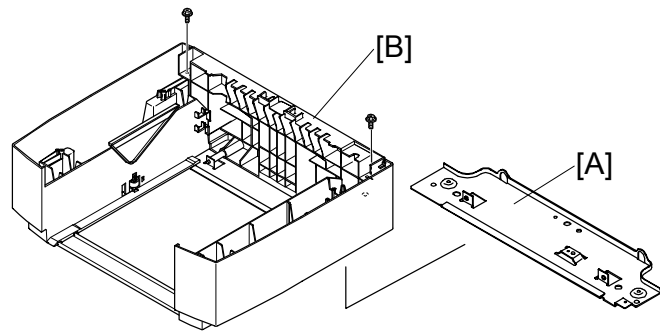

G389R912.WMF

1.1.3 RIGHT COVER


- 1. Rear cover (☞ 1.1.2)
- 2. Right cover [A] (⚙ x 2)

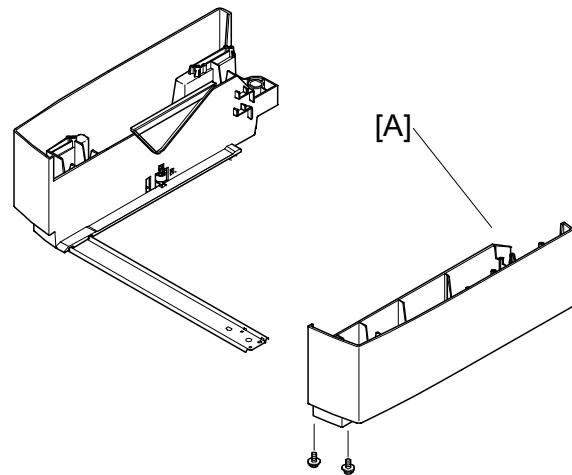

G389R913.WMF

1.1.4 LEFT COVER

- 1. Rear cover (☞ 1.1.2)
- 2. Left cover [A] (⚙ x 2)

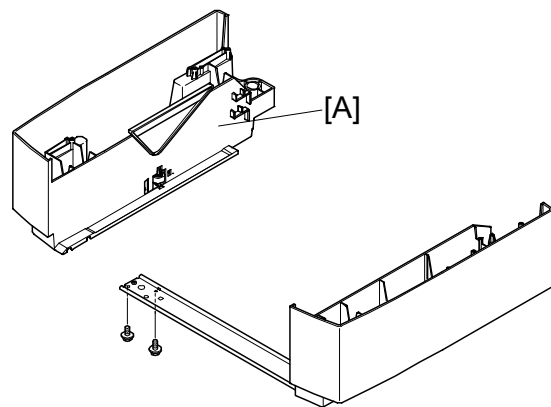


G389R914.WMF

Peripherals

1.2 FEED ROLLER AND SEPARATOR PAD


1.2.1 FEED ROLLER

1. Tray
2. Gear [A] (☉ x 1)
3. Bushing [B] (☉ x 1)
4. Bushing [C] (☉ x 1)
5. Feed roller (with the shaft) [D]

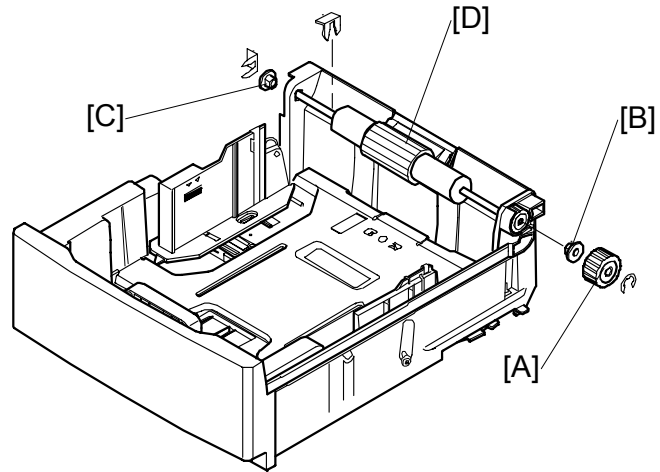

G389R915.WMF

6. Roller support [F] (☉ x 1)
7. Feed roller [G]

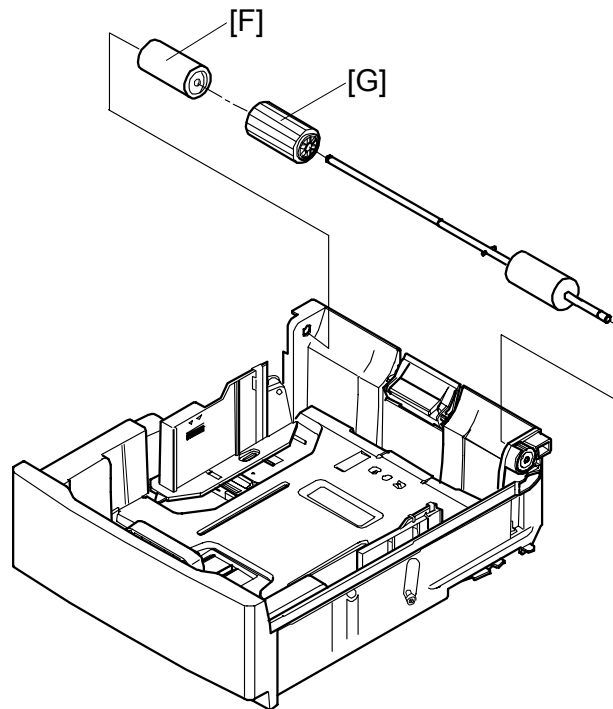

G389R916.WMF

Necessary Setting


After replacing the feed roller, execute SP7-905-006 (PM Parts Clear, Pick Up Roller 2).

1.2.2 SEPARATOR PAD

1. Feed roller (with the shaft)
(☛ 1.2.1)
2. Separator pad [A]

Necessary Setting

After replacing the feed roller, execute SP7-905-006 (PM Parts Clear, Pick Up Roller 2).

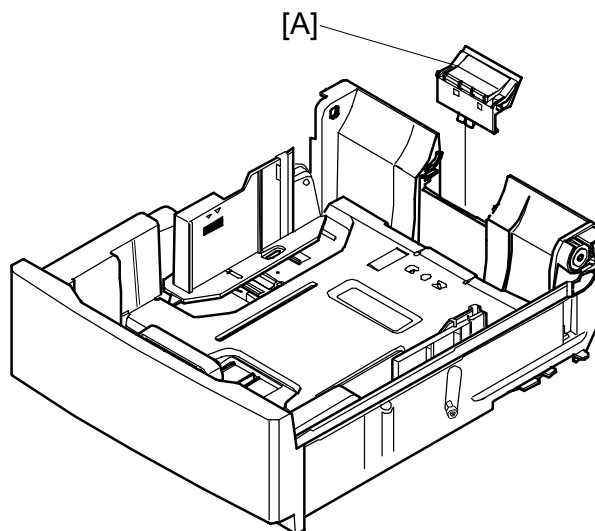


G389R917.WMF

1.3 SENSOR

1.3.1 PAPER END SENSOR

1. Sensor cover (☛ 1.1)
2. Sensor [A] (☛ x 1)

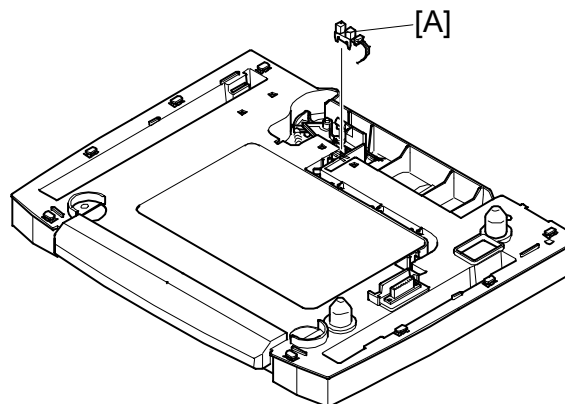


G389R903.WMF

Peripherals

1.3.2 PAPER END FEELER AND LINK LEVER

1. Sensor cover (☛ 1.1)
2. Tray
3. Stopper [A]
4. Link lever [B]
5. Paper end feeler [C]

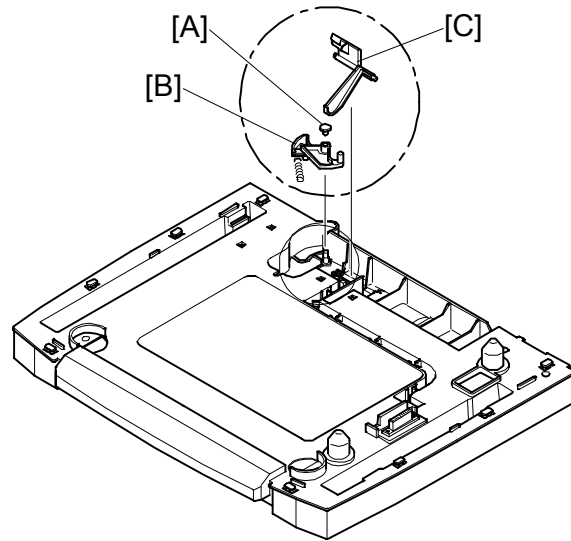


G389R918.WMF

Reassembling

1. Attach the link lever.
2. Attach the stopper.
3. Close the tray.
4. Attach the paper end feeler.
5. Attach the sensor cover.


1.3.3 PAPER SIZE SENSOR

1. Tray [A]

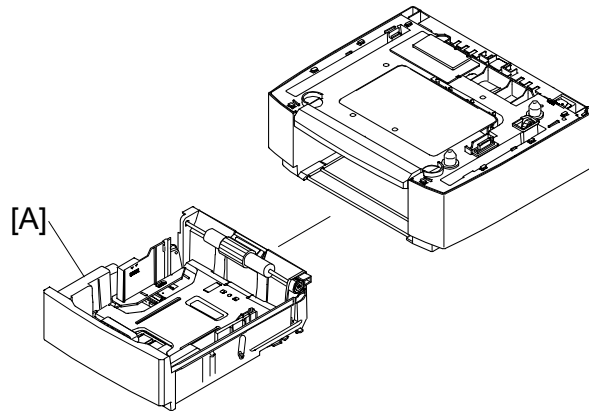


G389R904.WMF

2. Sensor cover (with the sensor) [B] (x 1)

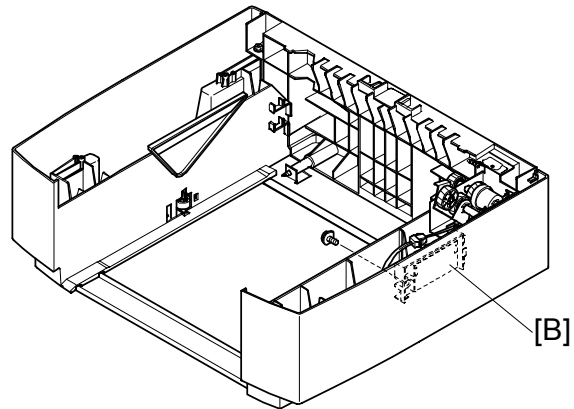

G389R905.WMF


3. Paper size sensor [A] (🔩 x 2,
🔩 x 2)

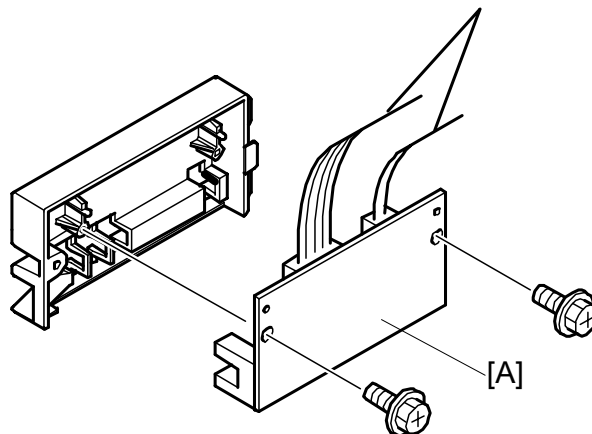

G389R906.WMF


1.4 PAPER FEED CLUTCH

1. Top cover (🔩 1.1)
2. Clutch assembly [A] (🔩 x 1, 🔩 x 2)

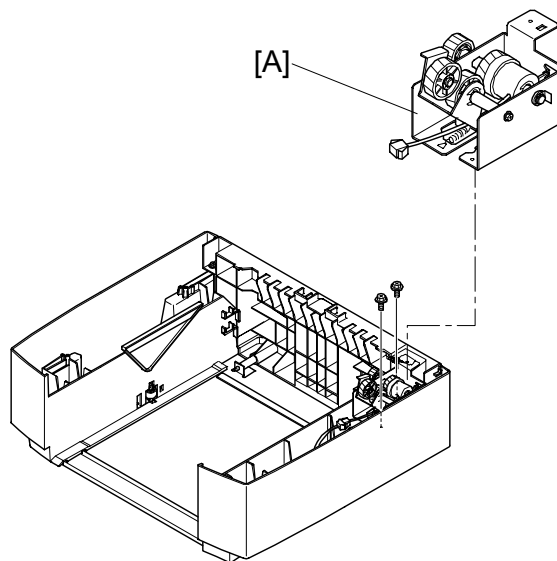

G389R907.WMF

3. Bushing [A] (🔩 x 1)
4. Gear [B] (Clip x 1)
5. Bushing [C]
6. Clutch shaft [D] (Clip x 2)
7. Paper feed clutch [E]

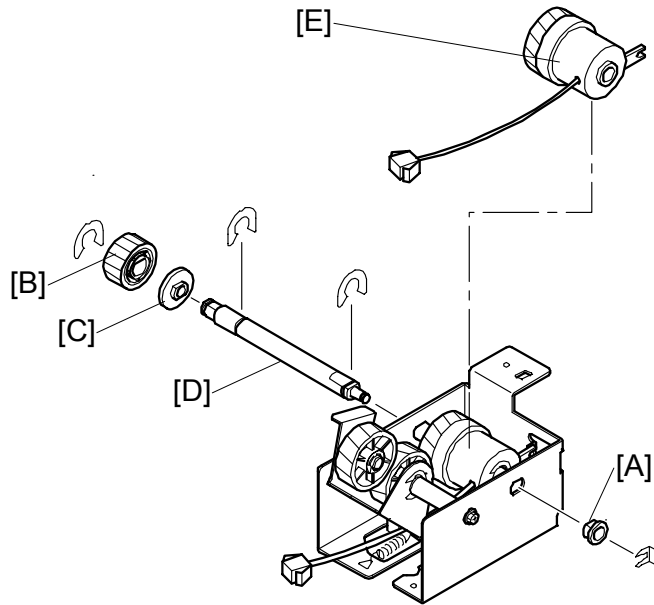


G389R908.WMF

1.5 RELAY GEARS

1. Clutch assembly (🔩 1.4)
2. Relay gears [A] (🔩 x 2)

Reassembling

Make sure that you attach the spring [B] to the relay gear bracket and the clutch assembly bracket.

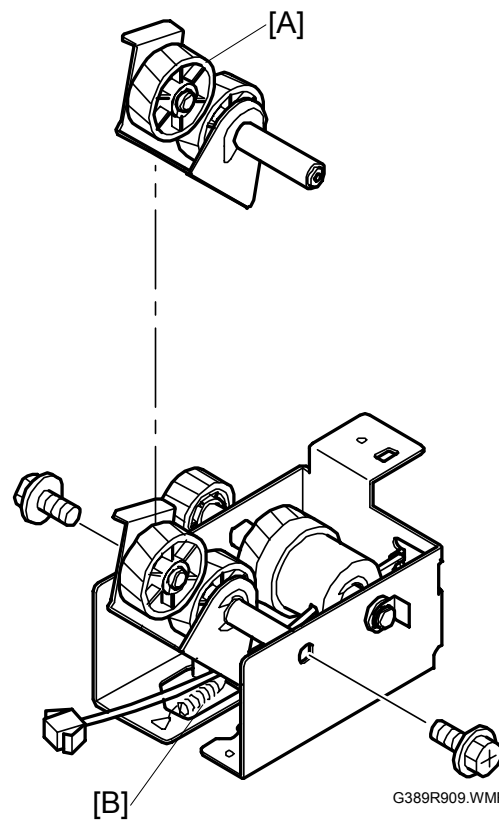


G389R909.WMF

Peripherals

2. DETAILED DESCRIPTIONS

2.1 PAPER SIZE AND PAPER TRAY DETECTION

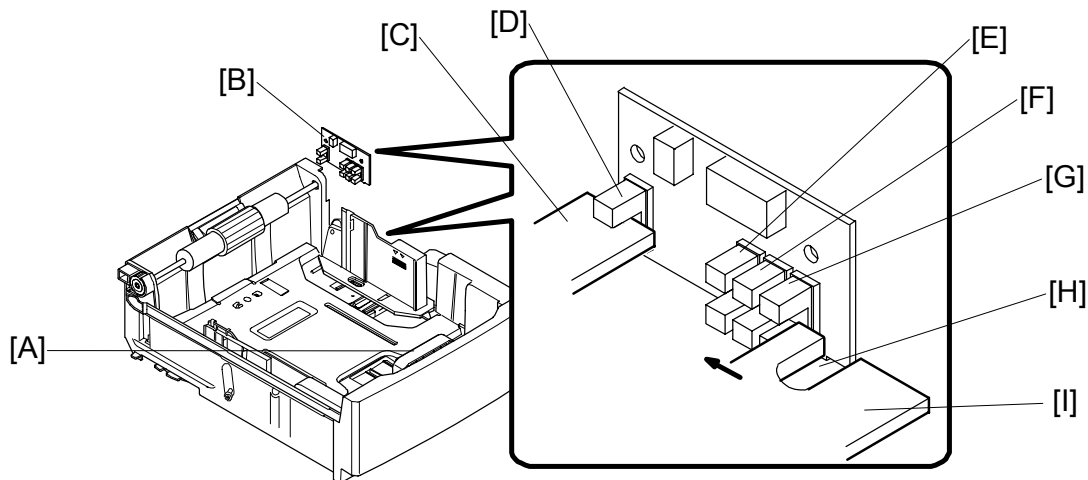

G389D901.WMF

There is a printed circuit board [B] at the rear end of the right paper-tray rail. There are four photosensors on this PCB. The three photosensors on the front side [E][F][G] are the paper size sensors. The other is the paper tray sensor [D]. The paper size sensors detect the paper size in the paper tray. The paper tray sensor detects the paper tray.


The interrupter [I] that is mechanically attached to the front plate [A] can interrupt the paper size sensors. This interrupter has an opening [H]. The interrupter can interrupt two sensors or less.

The paper tray has one more interrupter [C] on its rear right corner. This interrupter interrupts the paper tray sensor. While the paper tray is correctly set in the paper feed unit, the paper tray sensor is always interrupted.

The table lists the sensor patterns and detected paper sizes.

Paper Size Sensor			Paper Tray Sensor	Paper Size
[G]	[F]	[E]	[D]	
Interrupted	Not interrupted	Not interrupted	Interrupted	B5
Not interrupted	Not interrupted	Interrupted	Interrupted	B5
Interrupted	Interrupted	Not interrupted	Interrupted	Executive
Not interrupted	Interrupted	Not interrupted	Interrupted	Letter
Interrupted	Not interrupted	Not interrupted	Interrupted	A4

2.2 PAPER LIFT

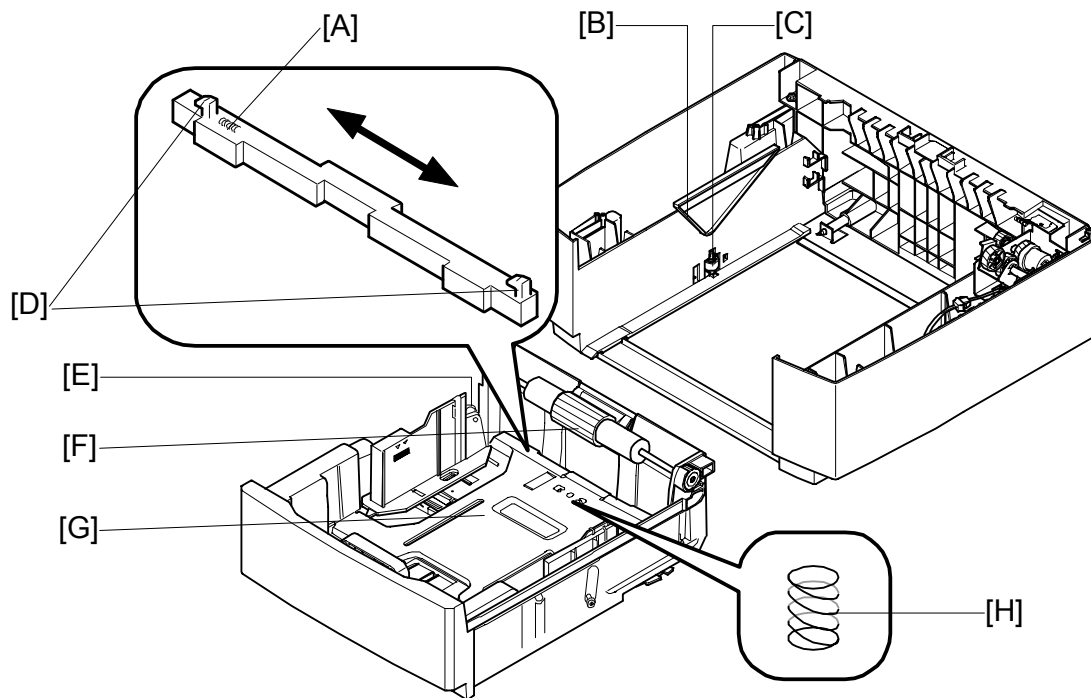


G389D902.WMF

A spring [H] and a white bar are below the bottom plate [G]. The white bar has a spring [A] and two hooks [D]. These hooks hold the bottom plate. The white bar moves to the two sides.

When you push the paper tray into the paper feed unit, the roller on the left side [C] pushes the white bar. The white bar moves to the right side (shown from the machine front). The two hooks on the white bar release the bottom plate. The spring pushes the bottom plate and lifts it up. The uppermost sheet of paper in the tray is pushed to the feed roller [F].

When you pull the paper tray out of the paper feed unit, the triangular rail [B] on the left side pushes down the roller [E] on the paper tray. This roller is attached to the bottom plate. The bottom plate is gradually pushed down when you pull the paper tray. Finally, the bottom plate reaches the white bar. The hooks on the white bar hold the bottom plate.

2.3 PAPER FEED

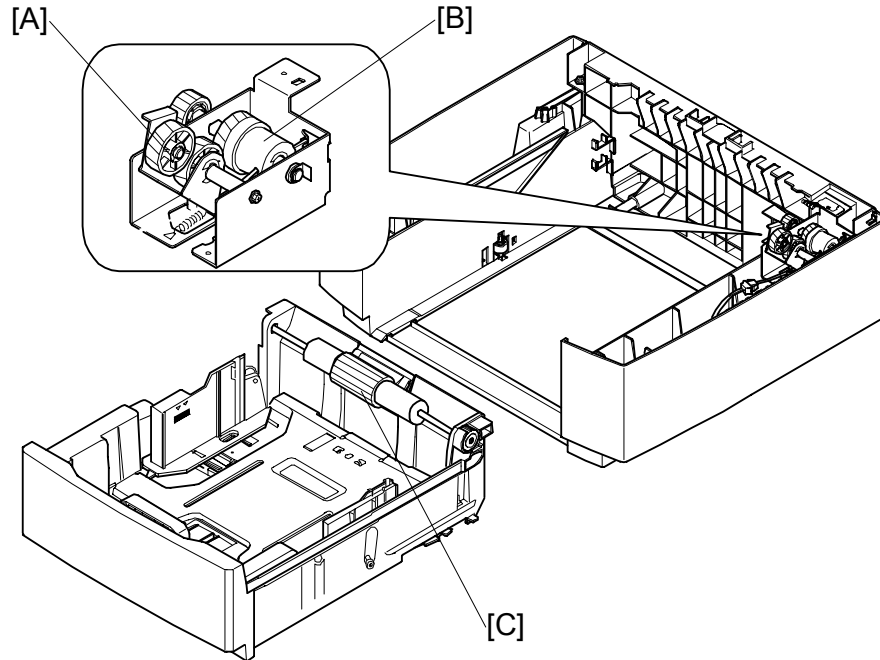


G389D903.WMF

The paper feed unit does not have a motor. The main motor of the printer drives the topmost gear [A] in the clutch assembly. The clutch [B] sends drive power to the paper feed roller [C] when it is set on. The paper feed roller moves the uppermost sheet of paper.

2.4 PAPER END DETECTION

2.4.1 PAPER END SENSOR

A paper end sensor [A] and a feeler [C] are on the top cover [D]. The feeler stays on the topmost paper in the paper tray. When the paper tray is empty, the feeler falls into the opening [E] in the bottom plate. The left end of the feeler [B] interrupts the paper end sensor.

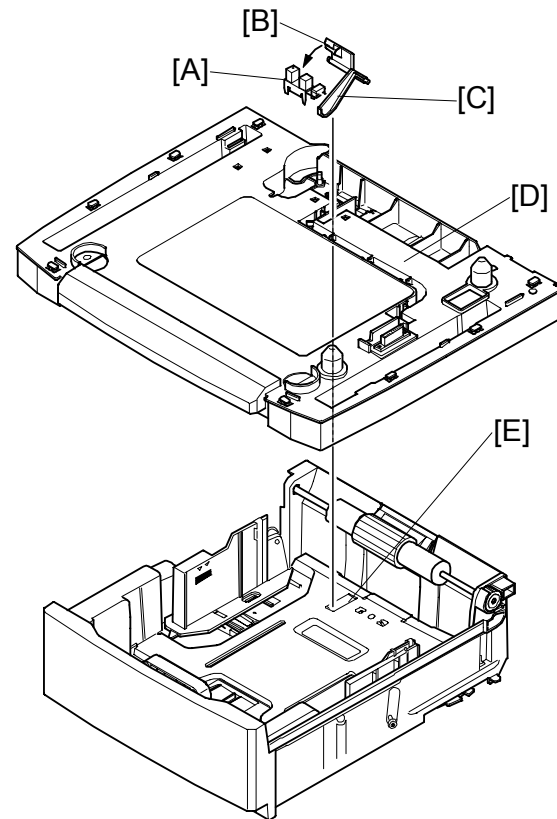

G389D904.WMF

2.4.2 LINK LEVER


Function

A link lever is on the top cover. This link lever lifts the feeler of the paper end sensor when the paper tray is out of the paper feed unit. The link lever lets the feeler fall down when the paper tray is in the paper feed unit. Because of this mechanism, the feeler is not damaged when you pull or push the paper tray.

Mechanism

When the paper tray [F] is out of the paper feed unit, the spring [A] pulls one end of the link lever [B]. The other end of the link lever pushes the feeler [C] of the paper end sensor. The feeler is lifted up.

When the paper tray is in the paper feed unit, the paper tray pushes one end of the link lever [D]. The other end of the link lever goes away from the feeler of the paper end sensor. The feeler [E] comes down to the topmost sheet of paper.

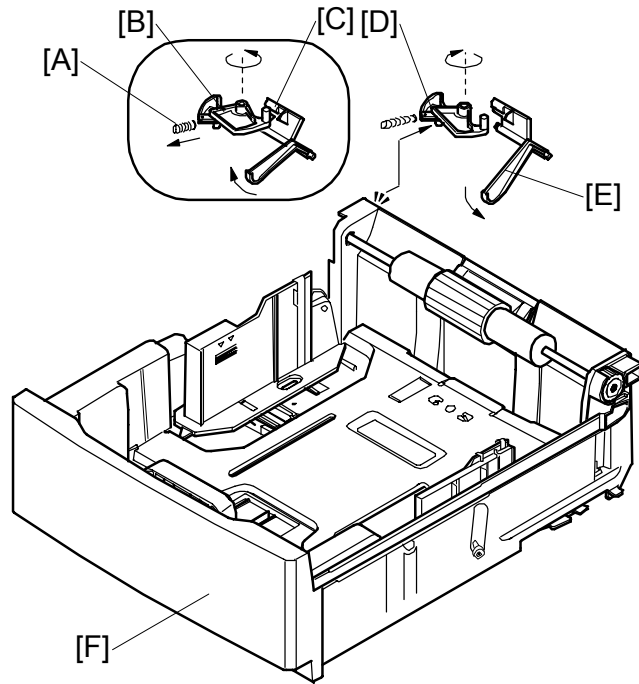

G389D905.WMF