

## MPEG-2 Measurement Decoder R&S DVMD

## Analysis and Decoding of MPEG-2 transport streams

The Measurement Decoder R&S DVMD belongs to MPEG-2 and DVB or ATSC like a waveform monitor to the analog world. It provides everything that is required for reliably handling the new technology. With its special features no error goes unnoticed. And all this is in an easy-tooperate and portable unit .

- 25 DVB or 18 ATSC realtime measurements at a time
- Analyzer and decoder in one unit
- Analysis of data rates
- Trigger-on-error function
- Integrated long-term report
- On-screen display on video monitor
- Measurement capabilities for all
- levels/resolutions (SDTV and HDTV)
- The R&S DVMD analyzes and monitors MPEG-2 transport streams both to DVB and ATSC standards.

PC Software Stream Explorer<sup>™</sup> is available as an option for in-depth analysis down to bit level, for convenient remote control of the R&S DVMD, and for integration of the R&S DVMD into networked monitoring systems.



- The combination of decoder and analyzer in one unit with conventional
- operating concept (no PC system) makes the R&S DVMD the waveform monitor of digital television. It is thus suitable for use wherever MPEG-2 signals have to be checked.
  - Realtime measurements and simultaneous in-depth analysis (25 DVB or 18 ATSC measurements at a time) yield extremely fast results. This
- makes the R&S DVMD an indispensable tool in development, in troubleshooting as well as in quality management and production.
  - Another important application is in the final inspection of MPEG-2 sig-
- nals before they leave the studio. While R&S DVMD checks the video and audio signals at the output, error information is inserted directly into the decoded program (on-screen display).
  - Remote-control capability allows integration into automatic monitoring
- networks. R&S DVMD is thus ideal for all network operators.

Additionally to ETR290 the table repetition of all "other" tables of type EIT/SDT/ NIT is measured in realtime and checked to stay within given upper and lower limits. This feature ensures a proper transmission of program associated EPG data for a digital TV network, consisting of several transport streams.

- For the North-American ATSC standard, which is used only for transmission via cable or terrestrial, there are no specific measurement guidelines existing. The
- realtime checks the R&S DVMD performs in ATSC mode are therefore extensive according to ETR290, where the different ATSC specific system and program information tables (PSIP) are concerned.



## **Characteristics**

By monitoring and analyzing the MPEG-2 transport stream, the Measurement Decoder R&S DVMD performs a completely new kind of measurement task that has arisen from the introduction of digital television. The measurements have been conceived to ensure smooth interworking of all components in a DTV transmission network. The R&S DVMD also provides information about the contents of the transport stream (Fig 1 and 2) and decodes one of the programs contained therein. The results of the protocol analysis can then be compared to the decodability of video and audio signals. The measurement decoder thus not only supplies comprehensive information

about the quality of the transport stream but makes the new technology transparent so that the user can reliably handle it.

## **Realtime Analyzer**

The analyzer functions of the R&S DVMD comprise a realtime protocol analysis of the measured MPEG-2 transport stream. In DVB mode all measurements comply with the measurement guidelines for DVB systems (ETR290). They were initially issued for the European DVB project, but are now being used in all parts of the world as the standard for digital TV transmission via satellite, cable or terrestrial. These guidelines define possible error conditions in terms of three priorities. Moreover the unique transport stream identification (TS\_Id) as well as the actual data rate of the stuffing bytes are checked in realtime against upper and lower limits. The latter function makes it easy with fixed multiplex to detect whether the transport stream contains the desired quantity of video services and monitor possible service drops. These two errors are not assigned a priority, like with ETR290 errors. 
 DECODER/SELECT PROGRAM
 MONITOR

 NO
 NAHE
 ELEMENT
 CA
 Mbs

 NO
 NAHE
 VAasad
 5,735

 Y100
 Scoto
 Vad
 3,757

 Y150
 Travel
 VAd
 3,757

 Y160
 Shop!
 VAd
 3,759

 Y160
 Shop!
 VAd
 3,759

 Y160
 Shop!
 VAd
 3,759

 Y170
 SCC
 Travel
 VAd
 3,759

 Y170
 SCC
 VAd
 3,759
 NULL
 PACKET
 0,363

 NULL
 PACKET
 DETAILS
 0,363
 0,363
 0,363
 0,363

 HULL
 PACKET
 DETAILS
 0,363
 0,363
 0,363

 THE
 HOUE
 ENTESELECT
 PROGRAM
 MNITOR
 0,363
 <

 DECODER/SELECT ELEMENT
 Honrops

 NO
 NAHE
 ELEMENT
 CA

 7140
 \* CNN
 UAd
 S.565

 PID
 TYPE
 CODE CA
 PID

 2316
 PCR
 2316
 OP

 2316
 PCR
 002
 5.231

 2318
 \* AUDIO
 003
 0.071

 2317
 DATA
 006
 002

3






- 1 List of all programs in the transport stream
- 2 List of all elementary streams in a program
  - 3 Error statistics in DVB mode
  - 4 Error report with detailed information on causes of errors

### Abbreviations

	ATSC Advanced Television System			
		Committee		
	BAT	Bouquet Association Table		
	CAT	Conditional Access Table		
	CETT	Channel Extended Text Table		
	CVCT	Cable Virtual Channel Table		
	DIT	Discontinuity Information Table		
	DTS	Decoding Time Stamp		
	DVB	Digital Video Broadcast		
	EIT	Event Information Table		
	EPG	Electronic Program Guide		
	ETT	Extended Text Table		
	MGT	Master Guide Table		
	MPEG	Motion Picture Experts Group		
-	NIT	Network Information Table		
	PAT	Program Association Table		
	PCR	Program Clock Reference		
	PES	Packetized Elementary Stream		
	PID	Packet Identification		
	PIT	Program Identification Table		
	PMT	Program Map Table		
	PSI	Program Specific Information		
	PSIP	Program and System Information		
		Protocol		
	PT	Private Table		
	PTS	Presentation Time Stamp		
	RRT	Rating Region Table		
	RST	Running Status Table		
	SDT	Service Description Table		
	SI	Service Information		
	SIT	Selection Information Table		
	ST	Stuffing Table		
	STT	System Time Table		
	TDT	Time and Date Table		
	TOT	Time Offset Table		
	TS	Transport Stream		
	TVCT	Terrestrial Virtual Channel Table		

### **Error messages**

Any error occurring is directly indicated by frontpanel LED's. The R&S DVMD also detects sporadic errors. Moreover it provides error statistics showing how often and for how long a particular type of error has occurred within a specific time interval ("error seconds") (Fig 3). A list maintained separately (Fig 4) and giving information about the errors occurred including date and time can be obtained. The list contains up to 1000 entries listed by time and may be edited to cover a single type of error only.

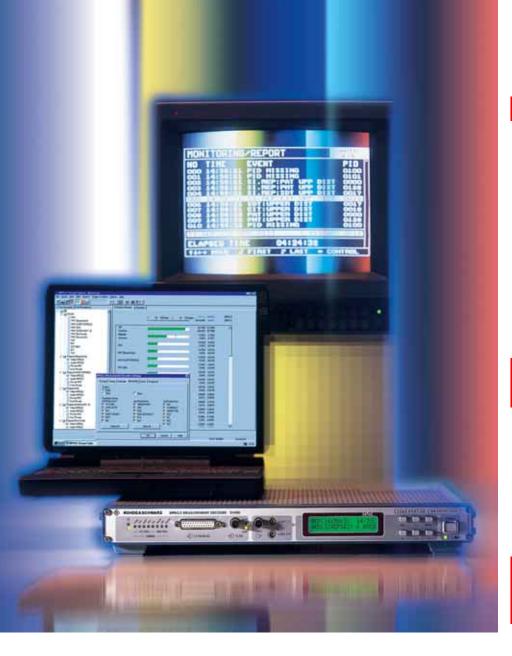

If there is an error, the trigger/capture facilities of the R&S DVMD can be used to freeze part of the transport stream affected by the error (approx. 2 Mbit) and output it via the RS-232-C interface, to analyze it down to bit and byte level.

## Decoder

An MPEG-2 transport stream usually consists of a number of programs which may contain video, audio and data streams (elementary streams). The R&S DVMD decodes a video and an audio stream from the selected program. The decoded video signal is simultaneously output in CCVS, analog Y/C and digital serial ITU-R601 formats. Audio signals are output as analog stereo signals and as digital AES/EBU signals. Online diagnosis: insertion of important data into decoded picture and profound analysis via optional PC software Stream Explorer ™ R&S DVMD-B1

## Signal generator

Complementary to the Decoder R&S DVMD, Rohde&Schwarz offers the MPEG-2 Measurement Generator R&S DVG (data sheet PD 757.2738), which supplies continuous MPEG-2 transport streams comprising combined video, audio and data sequences in an endless loop.

# Option alarm lines and parallel interface (R&S DVMD-B5)

This option enhances The R&S DVMD by two interfaces on the rear panel.

- 12 lines for signalling errors detected in the transport stream are available at a 15-contact sub-D connector. Each line can be allocated to one or several types of errors (ORed) in a menu. The contacts close to ground and in case of an error they can be chosen to close or open
- The second interface is a parallel printer interface for hardcopy output of test reports, program contents and instrument settings

This option can also be retrofitted any time by an authorized service technician (except devices with serial number 842 208 / \*\*\*\*).

<b>‰ MPEG2 Stream Explorer -</b> _Eile _ <u>M</u> ode _⊻iew _Eilter _Pack	<b>Dump</b> et <u>T</u> rigger Condition <u>O</u> ptions <u>H</u> elp		
1001 🚣 💋 🚟 😐 💷 oe	0x1FFB 0xC7 😤 🕛 🏭	^A 🖨 🕈 😽	
1 Tree Navigator 2 List 🔹 🕨	3 Packet Interpreter 4 Table Interpreter 5	Header Map 🛛 <u>6</u> Trigger Eve	rent
	Master Guide Table Section         Table id         Section syntax indicator         private indicator         zero         Section length         Table id extension         reserved         Version number         Current/next indicator         Section number         Last section number         Protocol version         Tables defined         Tables Loop         Table type         reserved         Table type PID         reserved         Table type descriptors length         Descriptors         Table type PID         reserved         Table type         Table type         reserved         Table type         Table type PID         reserved         Table type PID         reserved         Table type PID         reserved         Table type Version number         Table type PID         reserved         Table type version number	1 bit       1         1 bit       1         2 bit       0         12 bit       0         16 bit       0         2 bit       0         5 bit       0         1 bit       1         8 bit       0         8 bit       0         16 bit       0         3 bit       0         12 bit       0         12 bit       0         16 bit       0         3 bit       0         12 bit       0         13 bit       0         14 bit       0         12 bit       0         3 bit       0         3 bit       0         3 bit       0         3 bit       0         16 bit       0         3 bit       0         3 bit       0         3 bit       0	1         sub_table is currently applicable           0         0           0x000         8           0x0000         0x7           0x1FFB         0x7           0x1F5         0x7           0x00         0x000           0x1FFB         0x7           0x000         0x7           0x1FFB         0x7           0x0000         0x7           0x1FFB         0x7           0x1FFB         0x7           0x1FFB         0x7           0x1FFB         0x7
920 (0 1199) Packets	•		
		T:	

Clear display of ATSC transport stream plus tables by means of Stream Explorer\*\*

## Stream Explorer™ R&S DVMD-B1

This software enhances MPEG-2 measurement decoder R&S DVMD to form a universal analysis system for MPEG-2 transport streams. It runs under Windows 95/98 or Windows NT/2000 on any PC or laptop connected to the R&S DVMD via a serial interface. The easy-to-operate software and the clear presentation of test results in two windows of variable size ensure fast and effective working right from the start.

The R&S DVMD can store a transport stream of up to 2 Mbit and transfer it on request via the serial interface to Stream Explorer<sup>™</sup>. The R&S DVMD uses several data or event filters (TRIGGER ON ERROR) which can be activated via Stream
 Explorer<sup>™</sup>. The investigated data quantity of the transport stream can thus be considerably increased if required. Moreover,
 Stream Explorer<sup>™</sup> can activate realtime analyses in the R&S DVMD and output the results as moving graphic representations on the PC monitor. The realtime measurement functions of the R&S DVMD are thus considerably enhanced.

Furthermore, all local functions of the R&S DVMD can be remote-controlled by Stream Explorer<sup>™</sup> and the error report can be continuously stored on hard disk

with unlimited number of entries. Stream
 Explorer<sup>™</sup> itself can be remote-controlled
 by means of other software packages (client applications) via an interface for task to-task communication.

In this way commands, instrument settings as well as result data can also be exchanged between both software packages throughout a network connection.

(For more detailed information about Stream Explorer<sup>™</sup> see data sheet PD 757.3628)



# Realtime measurement functions of ATSC and DVB Simultaneous monitoring of all signals in transport stream

Measurement	Priority	LED	LCD/OSD	r indication Error condition	PID info	Trigger on error	Error No. (ETR 290)	ATSC	DVB
TS_sync_loss	1	TS	TS-Sync	Loss	-	•	1.1	Х	Х
				OK Single	-	-		X	X
Sync_byte_error	1	SYNC	Sync Byte	Burst	_	•	1.2	X X	X X
PAT_error	1	PAT	PAT	Upper Distance Table ID Scrambled	- • -	- •	1.3	x x x	X X X
Continuity_count_error <sup>2)</sup>	1	CONT	Cont. Cnt	Packet Order More Than Twice Lost Packet	•	•	1.4	x x x	X X X
PMT_error <sup>2)</sup>	1	PMT	PMT	Upper Distance Scrambled	•	-	1.5	X X	X X
PID error <sup>2)</sup>	1	PID	PID Missing	ocidinaled	•	_	1.6	X	X
Transport_error	2	TRANS	Transport		•	•	2.1	х	х
CRC_error <sup>2)</sup>	2	CRC	CRC	PAT CAT PMT NIT EIT (DVB) BAT SDT TOT MGT TVCT CVCT RAT STT EIT (ATSC) <sup>11</sup> ETT (Page 6			2.2	x x x x x x x x x x x x x x x x	X X X X X X X
PCR_error <sup>2)</sup>	2	OTHER	PCR	Discontinuity	•	•	2.3	Х	Х
		UTILIT	1 on	Upper Distance	•	•		Х	х
PCR_accuracy_error <sup>2)</sup> PTS_error <sup>2)</sup>	2	OTHER	PTS		•	-	2.4 2.5	x x	Х
				Table ID	•	•		x	x x
CAT_error	2	OTHER	CAT	Missing	•	•	2.6	x	x
SI_repetition_error	3	OTHER	SI REP	PAT Upp/Low Dist. CAT Upp/Low Dist. PMT Upp/Low Dist. NIT Upp/Low Dist. SDT Upp/Low Dist. BAT Upp/Low Dist. EIT (DVB) Upp/Low Dist. RST Low Dist. TDT Upp/Low Dist. TOT Upp/Low Dist. MGT/Upp Dist. CVCT/Upp Dist. RTT/Upp Dist. STT/Upp Dist.			3.2	x x x x x x x x x x x	x x x x x x x x x x x
NIT_error	3	OTHER	NIT	Table ID NIT Upper Dist.	•	• -	3.1		х
SDT_error	3	OTHER	SDT	Table ID SDT Upper Dist.	•	•	3.5		х
EIT_error	3	OTHER	EIT	Table ID EIT Upper Dist.	•	•	3.6		x
RST_error	3	OTHER	RST	Table ID	•	•	3.7		х
TDT_error	3	OTHER	TDT	Table ID	•	•	3.8		
				TDT Upper Dist.	•	-			х
Unreferenced_PID <sup>2)</sup>	3	OTHER	Unref. PID	T-LL-ID	•	•	3.4	Х	Х
Base_PID_error	3	OTHER	Base PID	Table ID	•	•		X	
Paradigm_error SI_other_error	3	OTHER OTHER	PARADIGM SI OTHER	NIT other Upp/Low Dist. SDT other Upp/Low Dist. EIT other Upp/Low Dist.	•	-		X	x x x
NIT_other_error	-	OTHER	NIT OTHER	NIT other Upp/Low Dist.	•	-			Х
SDT_other_error	-	OTHER	SDT OTHER	SDT other Upp/Low Dist.	•	-			х
EIT_other_error	-	OTHER	EIT OTHER	EIT other Upp/Low Dist.	•	-			Х
Multiplex_error	-	OTHER	MULTIPLEX	TS ID	-	-		х	х
Datarate_error	-	OTHER	DATARATE		•	-		х	Х

<sup>1)</sup> Simultaneously for up to 4 different EIT PIDs and 4 different ETT PIDs.

<sup>2)</sup> Simultaneously for up to 64 programs and 20 (ATSC)/25 (DVB) different PMT PIDs.

## **Specifications**

### Input signals

Transport stream Data rate of transport stream Length of data packets

#### Signal inputs

Synchronous parallel MPEG-2 transport stream (LVDS, according to DVB-A010)

Asynchronous serial MPEG-2 transport stream, 270 Mbit/s (ASI, to DVB-A010)

### Signal outputs Video CCVS (PAL, SECAM, NTSC)

Video luminance (Y) Video chrominance (C) C/L gain C/L delay Return loss (0 MHz to 6 MHz) Frequency response (typical values) 0 MHz to 3 MHz <4 MHz <5 MHz Audio Level (full scale) Frequency response (40 Hz to 15 kHz) S/N ratio THD Video serial digital (ITU-R 601) Audio left, audio right

Audio serial digital (AES/EBU)

#### Decoding

Video Audio

#### Monitoring

Number of different PMT PIDs

Number of programs

to ISO/IEC 1-13818 up to 54 Mbit/s 188/204 bytes for DVB 188/208 bytes for ATSC

25-pin connector on front panel, 100 mV to 2 V (V\_{pp}), 100  $\Omega$ 

BNC connector on front and rear panel, 200 mV to 1 V (V\_{pp}), 75  $\Omega$ 

BNC connector on front and rear panel, 1 V  $\pm 1\%$  (V<sub>pp</sub>), 75  $\Omega$ BNC connector on rear panel, 1 V  $\pm 1\%$  (V<sub>pp</sub>), 75  $\Omega$ BNC connector on rear panel, 0.7 V  $\pm 1\%$  (V<sub>pp</sub>), 75  $\Omega$  $\pm 2\%$  $\pm 30$  ns 34 dB, CCVS on front panel: 30 dB

+1%/-2% +1%/-5% +1%/-15% unbalanced, not free floating 6/9/12/15 dBu ±0.5 dB

 $\pm 0.5$  dB relative to 1 kHz >70 dB, unweighted >70 dB BNC connector on rear panel, 800 mV (V\_{pp}), 75  $\Omega$  LEMO Triax connector on front and rear panel,  $<50 \ \Omega$  LEMO Triax connector on rear panel, 4 V (V\_{pp}), 110  $\Omega$ 

main profile and main level (SDTV) MPEG1 layer 1&2 MPEG-2 layer 1&2, low sampling rate

max. 20 with ATSC max. 25 with DVB max. 64

#### **Controls and indicators**

## Interfaces

#### General data

Rated temperature range Operating temperature range Storage temperature range Mechanical resistance Sine vibration

Random vibration Shock

Climatic conditions

Electromagnetic compatibility

Power supply Power consumption Electrical safety Dimensions (W x H x D) Weight 6 front-panel keys and two-line LCD, output of comprehensive test results via text inserted into output signals, remote control via RS-232-C interface

1 RS-232-C interface (remote control or printer)

+5°C to +40°C (valid specs) 0°C to +50°C -40°C to +70°C

5 Hz to 150 Hz, max. 2 g at 55 Hz, max. 0.5 g in range 55 Hz to 150 Hz, complies with IEC 68-2-6,IEC 1010-1 and MIL-T-28800D class 5 10 Hz to 300 Hz, acceleration 1.2 g (rms) 40 g shock spectrum, complies with MIL-STD-810D and MIL-T-28800D class 3 and 5 +25 °C/+40 °C cyclically at 95% rel. humidity, complies with IEC 68-2-30 complies with EN 50081-1 and EN 50082-2 (EMC directive of EU)

50 W complies to to EN 61010-1 434 mm x 43 mm x 460 mm 4.9 kg

88 V to 264 V, 47 Hz to 63 Hz

## **Ordering information**

MPEG-2 Measurement Decoder	R&S DVMD	2068.8597.02
Accessories supplied	power cable, operating manual, audio adapter (LEMO Triax to XLR), modem bypass cable	
Options		
Software Stream Explorer <sup>™1)</sup> Option alarm lines and	R&S DVMD-B1	2068.9406.02
parallel interface	R&S DVMD-B5	2068.9393.02
Documentation of calibration values	R&S DVM-DCV	2082.0490.15
Recommended extras		
19" Adapter (1 HU) Service Manual	R&S ZZA-91	0396.4870.00 2069.0348.24

<sup>1)</sup> See data sheet PD 757.3628

Rear view of R&S DVMD (with option R&S DVMD-B5 alarm lines)






ROHDE&SCHWARZ GmbH & Co. KG · Mühldorfstraße 15 · 81671 München · Germany · P.O.B. 8014 69 · 81614 München · Germany · Telephone +49 89 4129-0 www.rohde-schwarz.com · Customer Support: Telephone +49 1805124242, Fax +49 89 4129-13777, E-mail: CustomerSupport@rohde-schwarz.com

## Datenblatt-Umlauf MPEG-2 Measurement Decoder R&S DVMD

# Bitte beachten Sie Ihre GB-internen Umlaufmodalitäten Bildinhalte prüfen!!!

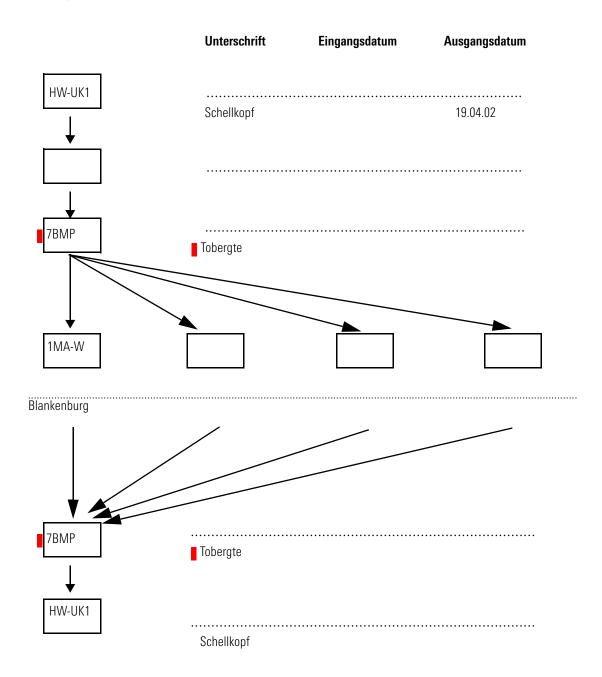

## Redaktionsschluss: <Redaktionsschluss>

Bemerkungen: